

## SECTION **RF** ROOF

### CONTENTS

<b>BASIC INSPECTION</b> .....	3	SUNROOF MOTOR ASSEMBLY :	
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	3	Component Function Check .....	12
Work Flow .....	3	SUNROOF MOTOR ASSEMBLY :	
<b>INSPECTION AND ADJUSTMENT</b> .....	6	Diagnosis Procedure .....	12
<b>ADDITIONAL SERVICE WHEN REPLACING</b>		SUNROOF MOTOR ASSEMBLY : Component In-	
<b>CONTROL UNIT</b> .....	6	spection .....	15
ADDITIONAL SERVICE WHEN REPLACING		SUNROOF MOTOR ASSEMBLY : Special Repair	
CONTROL UNIT : Description .....	6	Requirement .....	16
ADDITIONAL SERVICE WHEN REPLACING		<b>DOOR SWITCH</b> .....	17
CONTROL UNIT : Special Repair Requirement .....	6	Description .....	17
<b>BASIC INSPECTION</b> .....	6	Component Function Check .....	17
BASIC INSPECTION : Special Repair Require-		Diagnosis Procedure .....	17
ment .....	6	Component Inspection .....	18
<b>SYSTEM DESCRIPTION</b> .....	8	<b>ECU DIAGNOSIS INFORMATION</b> .....	19
<b>SUNROOF SYSTEM</b> .....	8	<b>BCM (BODY CONTROL MODULE)</b> .....	19
System Diagram .....	8	Reference Value .....	19
System Description .....	8	Terminal Layout .....	23
Component Parts Location .....	9	Physical Values .....	23
Component Description .....	9	Fail Safe .....	41
<b>DIAGNOSIS SYSTEM (BCM)</b> .....	11	DTC Inspection Priority Chart .....	43
<b>COMMON ITEM</b> .....	11	DTC Index .....	45
COMMON ITEM : CONSULT Function (BCM -		<b>SUNROOF MOTOR ASSEMBLY</b> .....	48
COMMON ITEM) .....	11	Reference Value .....	48
<b>RETAINED PWR</b> .....	11	<b>WIRING DIAGRAM</b> .....	49
RETAINED PWR : CONSULT Function (BCM -		<b>SUNROOF</b> .....	49
RETAINED PWR) .....	11	Wiring Diagram - Coupe .....	49
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	12	Wiring Diagram - Sedan .....	54
<b>POWER SUPPLY AND GROUND CIRCUIT</b> .....	12	<b>SYMPTOM DIAGNOSIS</b> .....	59
<b>SUNROOF MOTOR ASSEMBLY</b> .....	12	<b>SUNROOF DOES NOT OPERATE PROPER-</b>	
SUNROOF MOTOR ASSEMBLY : Description .....	12	<b>LY</b> .....	59
		Diagnosis Procedure .....	59
		<b>AUTO OPERATION DOES NOT OPERATE</b> ....	60
		Diagnosis Procedure .....	60

<b>DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION .....</b>	<b>61</b>	<b>PRECAUTIONS .....</b>	<b>70</b>
Diagnosis Procedure .....	61	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	70
<b>RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY .....</b>	<b>62</b>	Precautions Necessary for Steering Wheel Rotation after Battery Disconnect .....	70
Diagnosis Procedure .....	62	Precaution for Work .....	71
<b>SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION .....</b>	<b>63</b>	<b>PREPARATION .....</b>	<b>72</b>
Diagnosis Procedure .....	63	<b>PREPARATION .....</b>	<b>72</b>
<b>SQUEAK AND RATTLE TROUBLE DIAGNOSES .....</b>	<b>64</b>	Special Service Tools .....	72
Work Flow .....	64	Commercial Service Tools .....	72
Generic Squeak and Rattle Troubleshooting .....	66	<b>REMOVAL AND INSTALLATION .....</b>	<b>73</b>
Diagnostic Worksheet .....	68	<b>SUNROOF UNIT ASSEMBLY .....</b>	<b>73</b>
<b>PRECAUTION .....</b>	<b>70</b>	Inspection .....	73
		Exploded View .....	77
		Removal and Installation .....	77

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

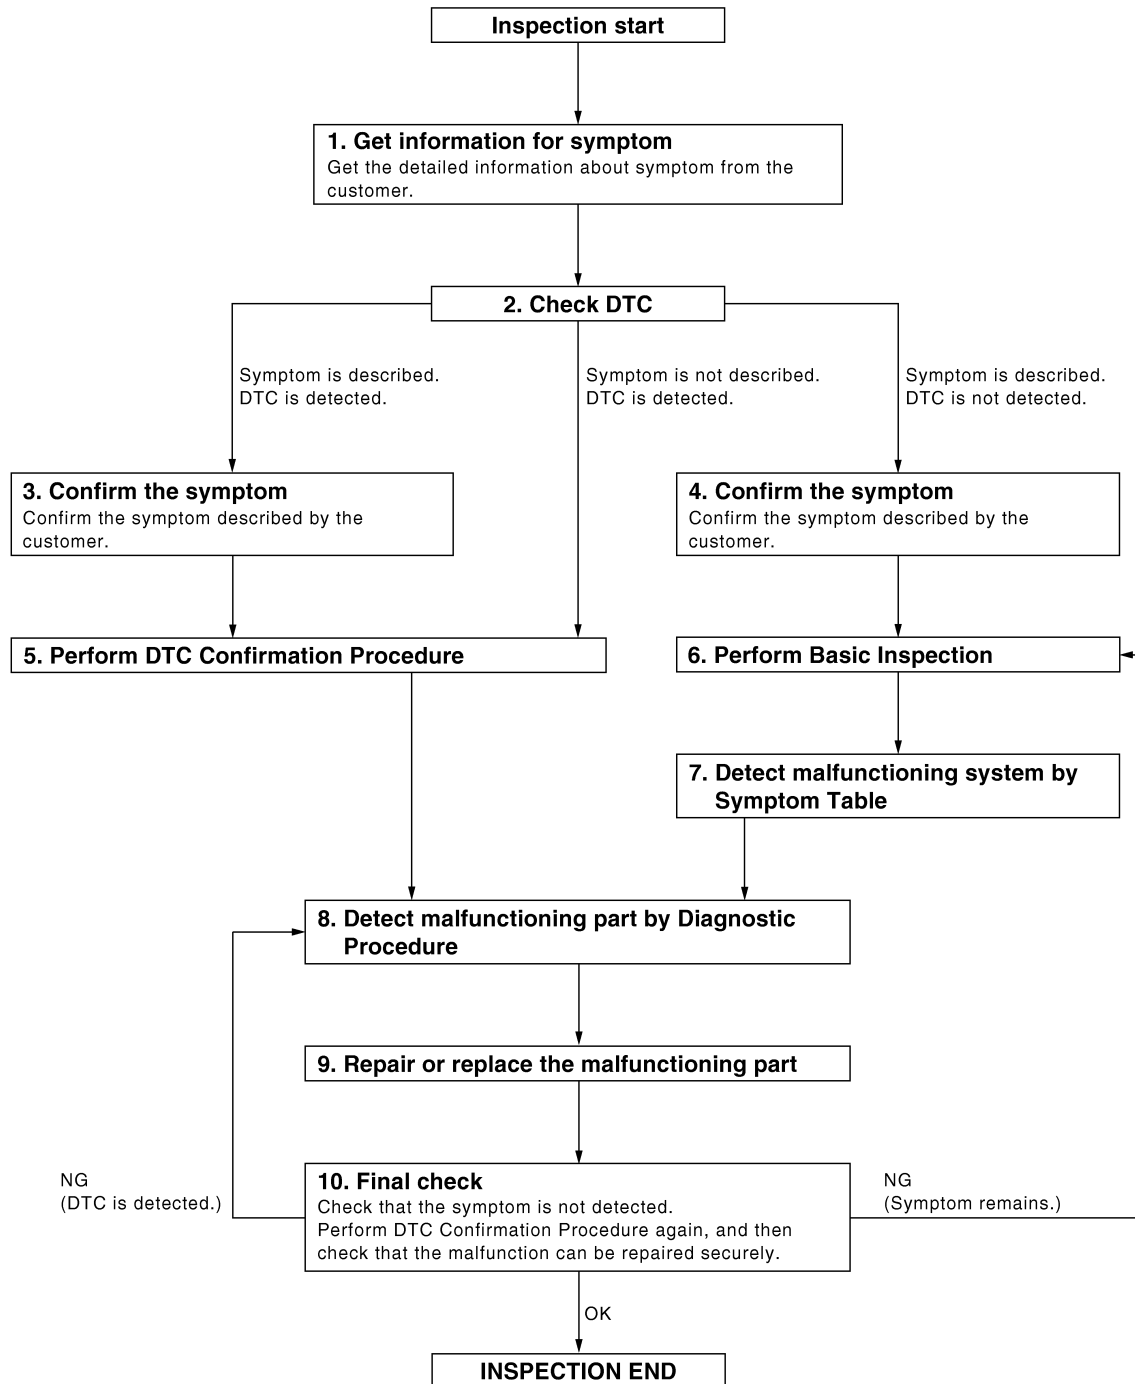
## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006389888

OVERALL SEQUENCE



DETAILED FLOW

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

---

### 1. GET INFORMATION FOR SYMPTOM

---

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

### 2. CHECK DTC

---

1. Check DTC.
2. Perform the following procedure if DTC is displayed.
  - Record DTC and freeze frame data (Print them out with CONSULT.)
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

### 3. CONFIRM THE SYMPTOM

---

Confirm the symptom described by the customer.

Connect CONSULT to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5

### 4. CONFIRM THE SYMPTOM

---

Confirm the symptom described by the customer.

Connect CONSULT to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6

### 5. PERFORM DTC CONFIRMATION PROCEDURE

---

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

At this time, always connect CONSULT to the vehicle, and check diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-65, "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

#### **NOTE:**

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC Confirmation Procedure is not included in Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check. If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC Confirmation Procedure.

Is DTC detected?

YES >> GO TO 8

NO >> Refer to [GI-42, "Intermittent Incident"](#).

### 6. PERFORM BASIC INSPECTION

---

Perform [RF-6, "BASIC INSPECTION : Special Repair Requirement"](#).

Inspection End>>GO TO 7

### 7. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

---

Detect malfunctioning system according to symptom diagnosis based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 8

## DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

### 8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

**NOTE:**

The Diagnostic Procedure described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

Is malfunctioning part detected?

YES >> GO TO 9

NO >> Check voltage of related BCM terminals using CONSULT.

### 9. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 10

### 10. FINAL CHECK

When DTC was detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction have been repaired securely.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 8

YES (Symptom remains)>>GO TO 6

NO >> Inspection End.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

## INSPECTION AND ADJUSTMENT

### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000006389889

#### MEMORY RESET PROCEDURE

1. Please observe the following instructions at confirming the sunroof operation.

**NOTE:**

Do not disconnect the electronic power while the sunroof is operating or within 5 seconds after the sunroof stops. (to wipe-out the memory of lid position and operating friction.)

2. Initialization of system should be conducted after the following conditions.
  - When the sunroof motor is changed.
  - When the sunroof does not operate normally. (Incomplete initialization conditions)

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000006389890

#### INITIALIZATION PROCEDURE

If the sunroof does not open or close automatically, use the following procedure to return sunroof operation to normal.

**NOTE:**

If the sunroof switch is released at any time during step 4, the procedure must be started over again. Leave the ignition switch ON for at least 2 seconds after this procedure.

1. Push the ignition switch to the ON position.
2. Hold the sunroof switch in the tilt up position. Release the switch when the sunroof has reached the full tilt up position.
3. Hold the sunroof switch in the tilt up position again. After a delay, the sunroof will backup. Release the switch.
4. Within 5 seconds of releasing the switch in step 3, hold the sunroof switch in the tilt up position again. The sunroof will move from the full tilt up position, to the open position and back to the close position. Release the switch only when the sunroof has reached the full closed position.

#### ANTI-PINCH FUNCTION

1. Fully open the sunroof.
2. Place a piece of wood near fully closed position.
3. Close the sunroof completely with auto-slide close.

Check that sunroof lowers for approximately 150mm (5.91 in) or 2 seconds without pinching a piece of wood and stops.

**CAUTION:**

- Do not check with hands and other part of body because they may be pinched. Do not get pinched.
- Depending on environment and driving conditions, if a similar impact or load is applied to the sunroof it may lower.
- Check that auto-slide operates before inspection when system initialization is performed.
- Perform initial setting when auto-slide operation or anti-pinch function does not operate normally.

#### BASIC INSPECTION

#### BASIC INSPECTION : Special Repair Requirement

INFOID:000000006389891

#### BASIC INSPECTION

##### 1.INSPECTION START

1. Check the service history.
2. Check the following parts.
  - Fuse/circuit breaker blown.
  - Poor connection, open or short circuit of harness connector.

## INSPECTION AND ADJUSTMENT

### < BASIC INSPECTION >

---

- Battery voltage.

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace the malfunctioning parts.

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

# SUNROOF SYSTEM

< SYSTEM DESCRIPTION >

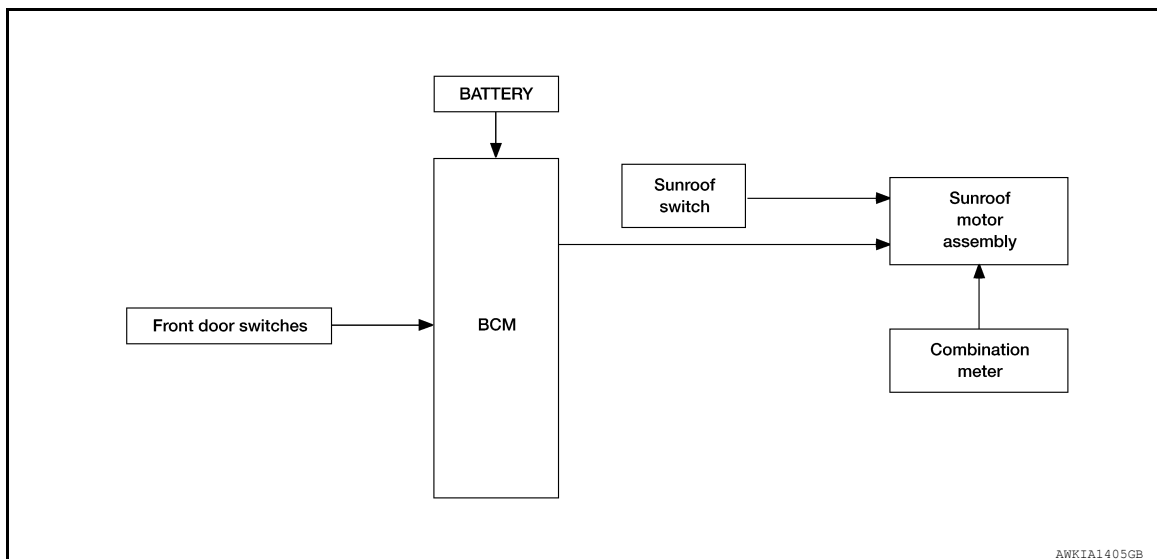
## SYSTEM DESCRIPTION

### SUNROOF SYSTEM

#### System Diagram

INFOID:000000006389892

#### SUNROOF



#### System Description

INFOID:000000006389893

### SUNROOF SYSTEM

#### INPUT/OUTPUT SIGNAL CHART

Item	Input signal to sunroof motor assembly	Sunroof motor function	Actuator
Sunroof switch	Sunroof switch signal (tilt down or slide open)	Sunroof control	Sunroof motor
	Sunroof switch signal (tilt up or slide close)		
Combination meter	Vehicle speed signal		
BCM	RAP signal		

#### SUNROOF OPERATION

- Sunroof motor assembly operates with the power supply that is output from BCM while ignition switch is ON or retained power is operating.
- Tilt up/ down & slide open/ close signals from sunroof switch enables sunroof motor to move arbitrarily.
- Sunroof motor assembly receives a vehicle speed signal from combination meter and controls the sunroof motor torque of tilt-down at the time of high speed operation.

#### AUTO OPERATION

Sunroof AUTO feature makes it possible to slide open and slide close or tilt up and tilt down the sunroof without holding the sunroof switch in the slide open/tilt down or slide close/tilt up position.

#### RETAINED POWER OPERATION

- Retained power operation is an additional power supply function that enables sunroof system to operate during the 45 seconds even when ignition switch is turned OFF.

Retained power function cancel conditions

- Front door CLOSE (door switch OFF)→OPEN (door switch ON).
- When ignition switch is ON again.
- When timer time passes. (45 seconds)

#### ANTI-PINCH FUNCTION



# SUNROOF SYSTEM

## < SYSTEM DESCRIPTION >

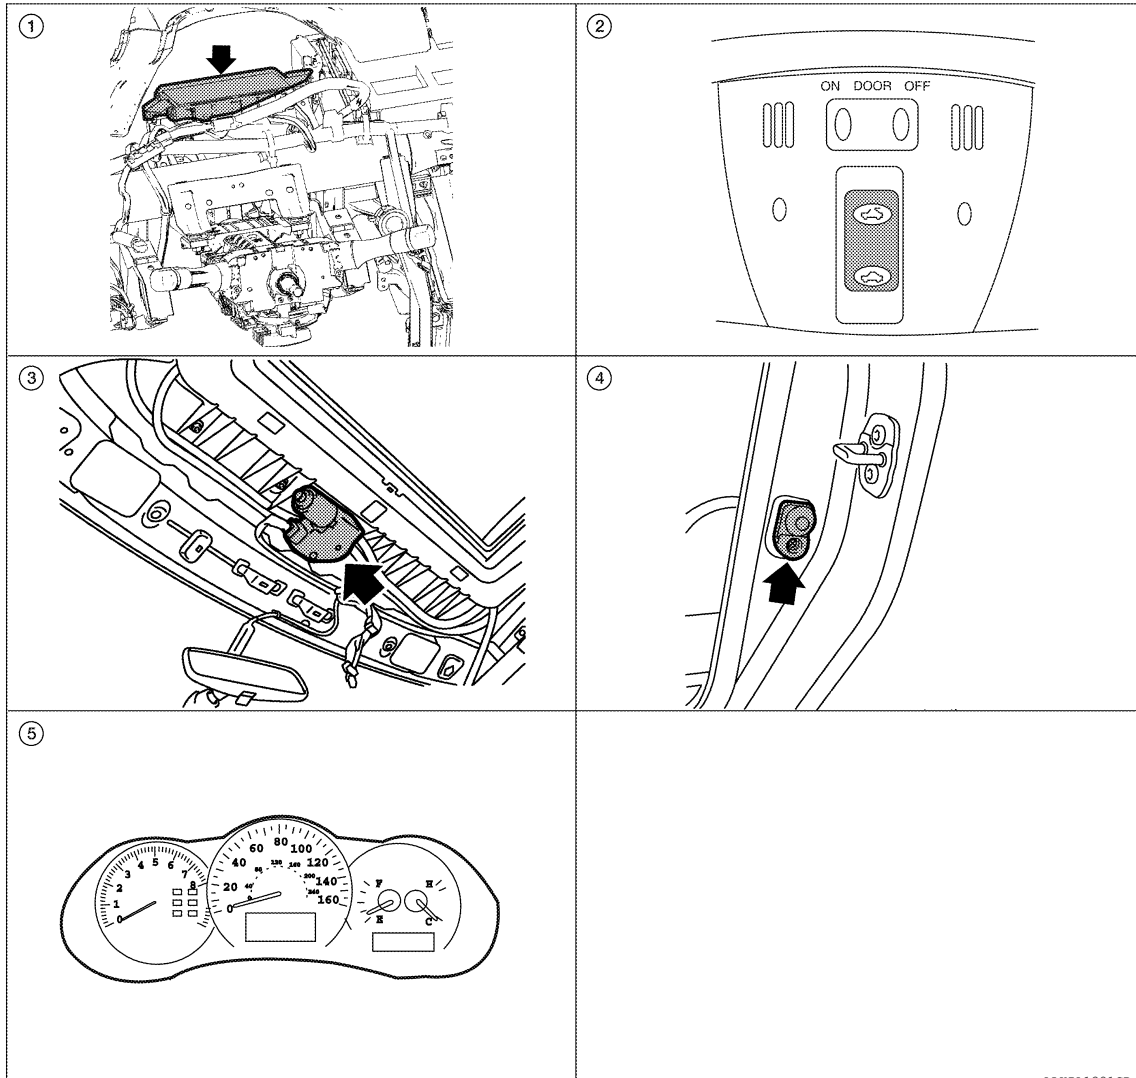
The CPU of sunroof motor assembly monitors the sunroof motor operation and the sunroof position (fully-closed or other) by the signals from sunroof motor.

When sunroof motor detects an interruption during the following slide close and tilt down operation, sunroof switch controls the motor for open and the sunroof will operate until full up position (when tilt down) or 150 mm (5.91 in) or more in an open direction (when slide close):

- Close operation and tilt down when ignition switch is in the "ON" position

## Component Parts Location

INFOID:000000006389894



ALKIA1321GB

- |  |                          |                              |
|--|--------------------------|------------------------------|
| 1. BCM M16, M17, M18<br>(View with instrument panel removed) | 2. Sunroof switch R6     | 3. Sunroof motor assembly R5 |
| 4. Front door switches LH B8, RH B108                        | 5. Combination meter M24 |                              |

## Component Description

INFOID:000000006389895

Component	Function
BCM	Supplies the power supply to sunroof motor assembly.
Sunroof switch	Transmits tilt up/down & slides open/close operation signal to sunroof motor assembly.
Sunroof motor assembly	It is sunroof motor and CPU integrated type that enables tilt up/down & slide open/close by sunroof switch operation

## SUNROOF SYSTEM

### < SYSTEM DESCRIPTION >

Component	Function
Front door switches	Detects door open/close condition and transmits to BCM.
Combination meter	Transmits vehicle speed signal to sunroof motor assembly.

## DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

### DIAGNOSIS SYSTEM (BCM)

#### COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000006918616

#### ECU IDENTIFICATION

Displays the BCM part No.

#### SELF-DIAG RESULT

Refer to [RF-45, "DTC Index"](#).

#### RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:0000000006918617

#### DATA MONITOR

Monitor Item [Unit]	Description
DOOR SW-DR [ON/OFF]	Indicates condition of front door switch LH.
DOOR SW-AS [ON/OFF]	Indicates condition of front door switch RH.

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT

#### SUNROOF MOTOR ASSEMBLY

##### SUNROOF MOTOR ASSEMBLY : Description

INFOID:000000006389899

- BCM supplies power.
- CPU is integrated in sunroof motor assembly.
- Tilts up/down & slides open/close by sunroof switch operation.
- In order to close sunroof lid certainly with the signal from combination meter at the time of high speed run, the sunroof motor torque at the time of tilt-down operation is controlled.

##### SUNROOF MOTOR ASSEMBLY : Component Function Check

INFOID:000000006389900

### 1. CHECK SUNROOF MOTOR FUNCTION

Check to see if tilt up/down & slide open/close functions operate normally with sunroof switch.

Is the inspection result normal?

YES >> Sunroof motor assembly is OK.

NO >> Refer to [RF-12. "SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure"](#).

##### SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure

INFOID:000000006389901

Regarding Wiring Diagram information, refer to [RF-49, "Wiring Diagram - Coupe"](#) or [RF-54, "Wiring Diagram - Sedan"](#).

### 1. SUNROOF MOTOR ASSEMBLY

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly.
3. Turn ignition switch ON.
4. Check voltage between sunroof motor assembly connector and ground.

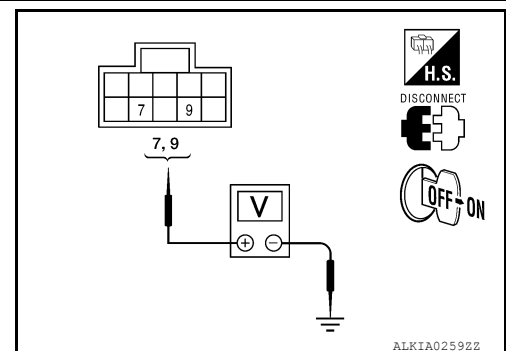
Terminal		Voltage (V) (Approx.)
(+)	(-)	
Sunroof motor assembly connector	Terminal	
R5	7	Ground Battery voltage
	9	

Is the measurement value within the specification?

YES >> GO TO 2

NO >> GO TO 3

### 2. CHECK GROUND CIRCUIT



ALKIA02592Z

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Check continuity between sunroof motor assembly connector and ground.

Sunroof motor assembly connector	Terminal	Ground	Continuity
R5	2	Ground	Yes

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair or replace harness.

## 3. CHECK SUNROOF MOTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check continuity between BCM connector (A) and sunroof motor assembly connector (B).

BCM connector	Terminal	Sunroof motor assembly connector	Terminal	Continuity
M16 (A)	2	R5 (B)	7	Yes
	3		9	

4. Check continuity between BCM connector (A) and ground.

BCM connector	Terminal	Ground	Continuity
M16 (A)	2	Ground	No
	3		

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace harness.

## 4. CHECK BCM OUTPUT SIGNAL

1. Connect BCM.
2. Turn ignition switch ON.
3. Check voltage between BCM connector and ground.

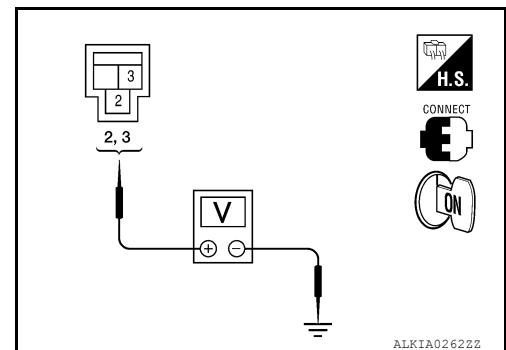
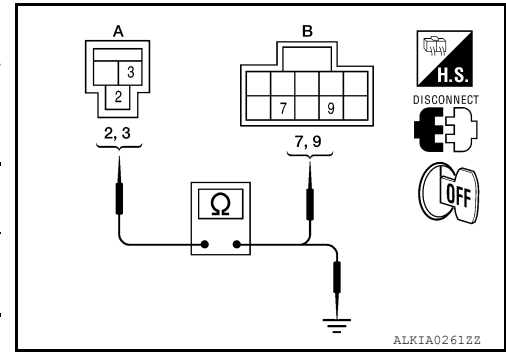
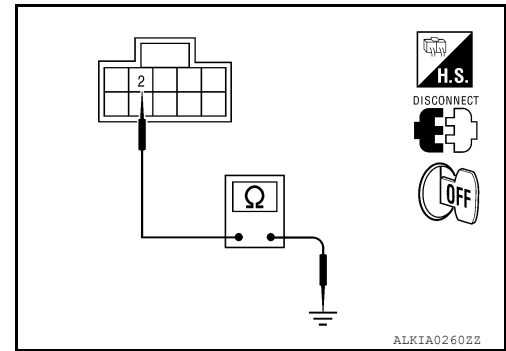
Terminals			Voltage (V) (Approx.)
(+)		(–)	
BCM connector	Terminal		
M16	2	Ground	Battery voltage
	3		

Is the measurement value within the specification?

YES >> Check condition of harness and connector.

NO >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

## 5. CHECK SUNROOF SWITCH INPUT SIGNAL




## POWER SUPPLY AND GROUND CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

1. Connect sunroof motor assembly.
2. Turn ignition switch ON.
3. Check voltage between sunroof motor assembly connector and ground.

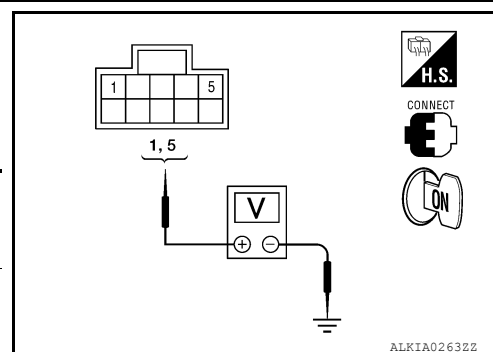Sunroof motor assembly connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
R5	5	Ground	Sunroof switch is operated TILT DOWN or SLIDE OPEN	0
			Other than above	Battery voltage
	1		Sunroof switch is operated TILT UP or SLIDE CLOSE	0
			Other than above	Battery voltage



Is the measurement value within the specification?

YES >> GO TO 8


NO >> GO TO 6

### 6. CHECK SUNROOF SWITCH CIRCUIT

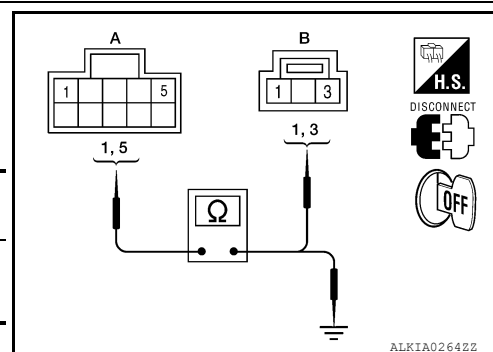1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly and sunroof switch.
3. Check continuity between sunroof motor assembly connector (A) and sunroof switch connector (B).

Sunroof motor assembly connector	Terminal	Sunroof switch connector	Terminal	Continuity
R5 (A)	5	R6 (B)	1	Yes
	1		3	

4. Check continuity between sunroof motor assembly connector (A) and ground.



Sunroof motor assembly connector	Terminal	Ground	Continuity
R5 (A)	5	Ground	No
	1		

Is the inspection result normal?

YES >> GO TO 7

NO >> Repair or replace harness.

### 7. CHECK SUNROOF SWITCH GROUND CIRCUIT

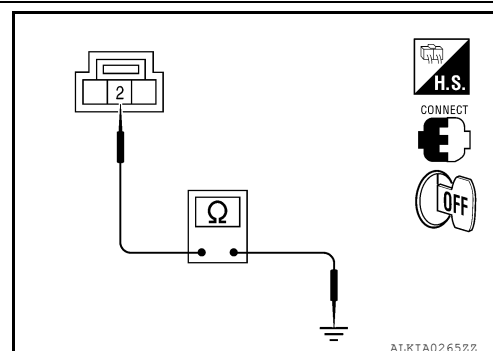
1. Connect sunroof motor assembly.
2. Check continuity between sunroof switch connector and ground.

Sunroof switch connector	Terminal	Ground	Continuity
R6	2	Ground	Yes

Is the inspection result normal?

YES >> Refer to [RF-15. "SUNROOF MOTOR ASSEMBLY : Component Inspection"](#).

NO >> Repair or replace harness.





### 8. CHECK COMBINATION METER SIGNAL

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

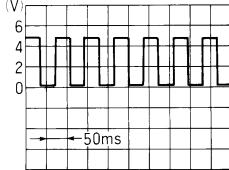1. Check signal between sunroof motor assembly connector and ground with oscilloscope.

Terminals		Condition	Signal (Reference value)
(+)	(-)		
Sunroof motor assembly connector	Terminal		
R5	8	Speed meter operated [When vehicle speed is approx.40km/h (25MPH)]	 ELF1080D

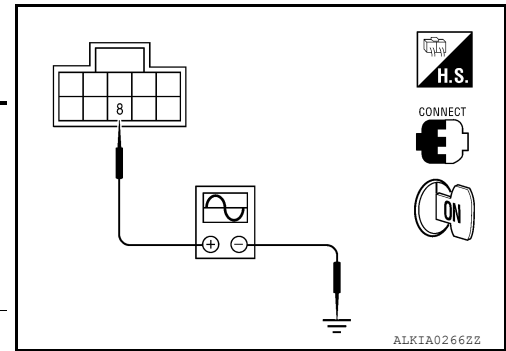

Is the inspection result normal?

- YES >> Replace sunroof motor assembly. Refer to [RF-77, "Removal and Installation"](#). After that, refer to [RF-6, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).
- NO >> GO TO 9

## 9.CHECK COMBINATION METER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter.
3. Check continuity between combination meter connector and sunroof motor assembly connector.

Combination meter connector	Terminal	Sunroof motor assembly connector	Terminal	Continuity
M24	30	R5	8	Yes

4. Check continuity between combination meter connector and ground.

Combination meter connector	Terminal	Ground	Continuity
M24	30		No

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-139, "Removal and Installation"](#).
- NO >> Repair or replace harness.

## SUNROOF MOTOR ASSEMBLY : Component Inspection

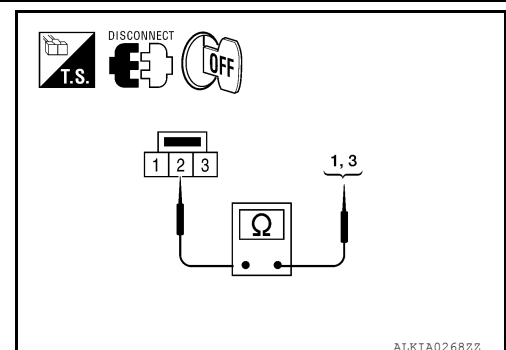
INFOID:000000006389902

### SUNROOF SWITCH

#### 1. CHECK SUNROOF SWITCH

1. Turn ignition switch OFF.
2. Disconnect sunroof switch.
3. Check continuity between sunroof switch terminals.

Terminals	Condition	Continuity
-----------	-----------	------------



## POWER SUPPLY AND GROUND CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

1	2	Sunroof switch is operated TILT DOWN or SLIDE OPEN	Yes
		Other than above	No
3		Sunroof switch is operated TILT UP or SLIDE CLOSE	Yes
		Other than above	No

#### Is the inspection result normal?

YES >> Sunroof switch is OK.

NO >> Replace sunroof switch (map lamp assembly). Refer to [INL-108, "Removal and Installation"](#).

### SUNROOF MOTOR ASSEMBLY : Special Repair Requirement

INFOID:000000006389903

#### 1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [RF-6, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

>> GO TO 2

#### 2. CHECK ANTI-PINCH OPERATION

Check anti-pinch operation.

Refer to [RF-6, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

#### Is the inspection result normal?

YES >> Inspection End.

NO >> Check fitting adjustment. Refer to [RF-73, "Inspection"](#).



# DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

## DOOR SWITCH

### Description

INFOID:000000006389904

Detects door open/close condition.

### Component Function Check

INFOID:000000006389905

### 1.CHECK FUNCTION

#### With CONSULT

Check door switches DOOR SW-DR, DOOR SW-AS in Data Monitor mode with CONSULT.

Monitor item	Condition
DOOR SW-DR	CLOSE → OPEN: OFF → ON
DOOR SW-AS	

Is the inspection result normal?

YES >> Door switch is OK.

NO >> Refer to [RF-17, "Diagnosis Procedure"](#).

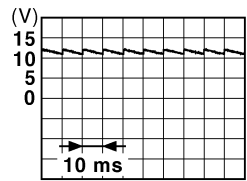
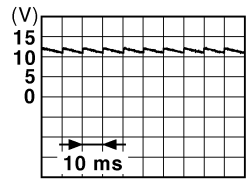
### Diagnosis Procedure

INFOID:000000006389906

Regarding Wiring Diagram information, refer to [RF-49, "Wiring Diagram - Coupe"](#) or [RF-54, "Wiring Diagram - Sedan"](#).

### 1.CHECK DOOR SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Check signal between BCM connector and ground with oscilloscope.

Terminals			Door condition		Voltage (V) (Approx.)
(+) (–)					
BCM connector	Terminal				
M18	58	Ground	Driver side	OPEN	0
				CLOSE	 JPMIA0011GB
	32		Passenger side	OPEN	0
				CLOSE	 JPMIA0011GB

Is the inspection result normal?

YES >> GO TO 4

# DOOR SWITCH

## < DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 2

### 2.CHECK DOOR SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM connector and door switch connector.

BCM connector	Terminal	Door switch connector	Terminal	Continuity
M18	58	B8 (Driver side)	2	Yes
	32	B108 (Passenger side)		

3. Check continuity between BCM connector and ground.

BCM connector	Terminal	Ground	Continuity
M18	58		No
	32		

Is the inspection result normal?

- YES >> GO TO 3  
NO >> Repair or replace harness between BCM and door switch.

### 3.CHECK DOOR SWITCH

Refer to [RF-18, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4  
NO >> Replace malfunctioning door switch.

### 4.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

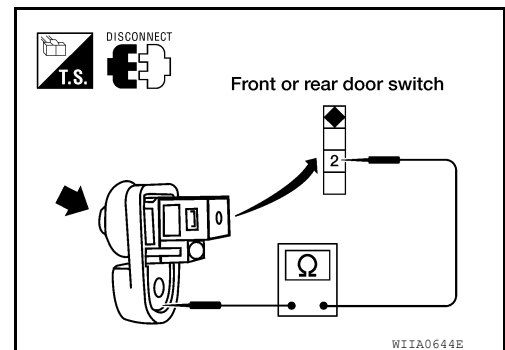
>> INSPECTION END

## Component Inspection

INFOID:000000006389907

### 1.CHECK DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect door switch connector.
3. Check door switch.



Terminal		Door switch condition	Continuity
Door switch			
2	Ground part of door switch	Pressed	No
		Released	Yes

Is the inspection result normal?

- YES >> Inspection End.  
NO >> Replace malfunction door switch.

## BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

### ECU DIAGNOSIS INFORMATION

#### BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000006918618

#### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	OFF
	Front wiper switch HI	ON
FR WIPER LOW	Other than front wiper switch LO	OFF
	Front wiper switch LO	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER INT	Other than front wiper switch INT	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Front wiper is not in STOP position	OFF
	Front wiper is in STOP position	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 6	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	OFF
	Turn signal switch RH	ON
TURN SIGNAL L	Other than turn signal switch LH	OFF
	Turn signal switch LH	ON
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	OFF
	Lighting switch 1ST or 2ND	ON
HI BEAM SW	Other than lighting switch HI	OFF
	Lighting switch HI	ON
HEAD LAMP SW 1	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
HEAD LAMP SW 2	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
AUTO LIGHT SW	Other than lighting switch AUTO	OFF
	Lighting switch AUTO	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
DOOR SW-DR	Driver door closed	OFF
	Driver door opened	ON
DOOR SW-AS	Passenger door closed	OFF
	Passenger door opened	ON
DOOR SW-RR	Rear RH door closed	OFF
	Rear RH door opened	ON
DOOR SW-RL	Rear LH door closed	OFF
	Rear LH door opened	ON

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
CDL LOCK SW	Other than power door lock switch LOCK	OFF
	Power door lock switch LOCK	ON
CDL UNLOCK SW	Other than power door lock switch UNLOCK	OFF
	Power door lock switch UNLOCK	ON
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	OFF
	Driver door key cylinder LOCK position	ON
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	OFF
	Driver door key cylinder UNLOCK position	ON
HAZARD SW	When hazard switch is not pressed	OFF
	When hazard switch is pressed	ON
REAR DEF SW	When rear window defogger switch is pressed	ON
FAN ON SIG	When AUTO switch or fan switch is pressed	ON
AIR COND SW	When A/C switch is pressed	ON
TR CANCEL SW	Trunk lid opener cancel switch OFF	OFF
	Trunk lid opener cancel switch ON	ON
TR/BD OPEN SW	Trunk lid opener switch OFF	OFF
	While the trunk lid opener switch is turned ON	ON
TRNK/HAT MNTR	Trunk lid closed	OFF
	Trunk lid opened	ON
RKE-LOCK	When LOCK button of Intelligent Key is not pressed	OFF
	When LOCK button of Intelligent Key is pressed	ON
RKE-UNLOCK	When UNLOCK button of Intelligent Key is not pressed	OFF
	When UNLOCK button of Intelligent Key is pressed	ON
RKE-TR/BD	When TRUNK OPEN button of Intelligent Key is not pressed	OFF
	When TRUNK OPEN button of Intelligent Key is pressed	ON
RKE-PANIC	When PANIC button of Intelligent Key is not pressed	OFF
	When PANIC button of Intelligent Key is pressed	ON
RKE-P/W OPEN	When UNLOCK button of Intelligent Key is not pressed and held	OFF
	When UNLOCK button of Intelligent Key is pressed and held	ON
RKE-MODE CHG	When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	OFF
	When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	ON
OPTICAL SENSOR	When outside of the vehicle is bright	Close to 5 V
	When outside of the vehicle is dark	Close to 0 V
REQ SW-DR	When driver door request switch is not pressed	OFF
	When driver door request switch is pressed	ON
REQ SW-AS	When passenger door request switch is not pressed	OFF
	When passenger door request switch is pressed	ON
REQ SW-BD/TR	When trunk request switch is not pressed	OFF
	When trunk request switch is pressed	ON
PUSH SW	When engine switch (push switch) is not pressed	OFF
	When engine switch (push switch) is pressed	ON
IGN RLY -F/B	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
ACC RLY -F/B	Ignition switch OFF	OFF	A
	Ignition switch ACC or ON	ON	
CLUTCH SW	When the clutch pedal is not depressed	OFF	B
	When the clutch pedal is depressed	ON	
BRAKE SW 1	When the brake pedal is not depressed	ON	C
	When the brake pedal is depressed	OFF	
DETE/CANCL SW	When selector lever is in P position	OFF	D
	When selector lever is in any position other than P	ON	
SFT PN/N SW	When selector lever is in any position other than P or N	OFF	E
	When selector lever is in P or N position	ON	
S/L -LOCK	Electronic steering column lock LOCK status	OFF	F
	Electronic steering column lock UNLOCK status	ON	
S/L -UNLOCK	Electronic steering column lock UNLOCK status	OFF	G
	Electronic steering column lock LOCK status	ON	
S/L RELAY-F/B	Ignition switch OFF or ACC	OFF	H
	Ignition switch ON	ON	
UNLK SEN-DR	Driver door UNLOCK status	OFF	I
	Driver door LOCK status	ON	
PUSH SW -IPDM	When engine switch (push switch) is not pressed	OFF	J
	When engine switch (push switch) is pressed	ON	
IGN RLY1 F/B	Ignition switch OFF or ACC	OFF	RF
	Ignition switch ON	ON	
DETE SW -IPDM	When selector lever is in P position	OFF	L
	When selector lever is in any position other than P	ON	
SFT PN -IPDM	When selector lever is in any position other than P or N	OFF	M
	When selector lever is in P or N position	ON	
SFT P -MET	When selector lever is in any position other than P	OFF	N
	When selector lever is in P position	ON	
SFT N -MET	When selector lever is in any position other than N	OFF	O
	When selector lever is in N position	ON	
ENGINE STATE	Engine stopped	STOP	P
	While the engine stalls	STALL	
	At engine cranking	CRANK	
	Engine running	RUN	
S/L LOCK-IPDM	Electronic steering column lock LOCK status	OFF	
	Electronic steering column lock UNLOCK status	ON	
S/L UNLCK-IPDM	Electronic steering column lock UNLOCK status	OFF	
	Electronic steering column lock LOCK status	ON	
S/L RELAY-REQ	Ignition switch OFF or ACC	OFF	
	Ignition switch ON	ON	
VEH SPEED 1	While driving	Equivalent to speedometer reading	
VEH SPEED 2	While driving	Equivalent to speedometer reading	

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

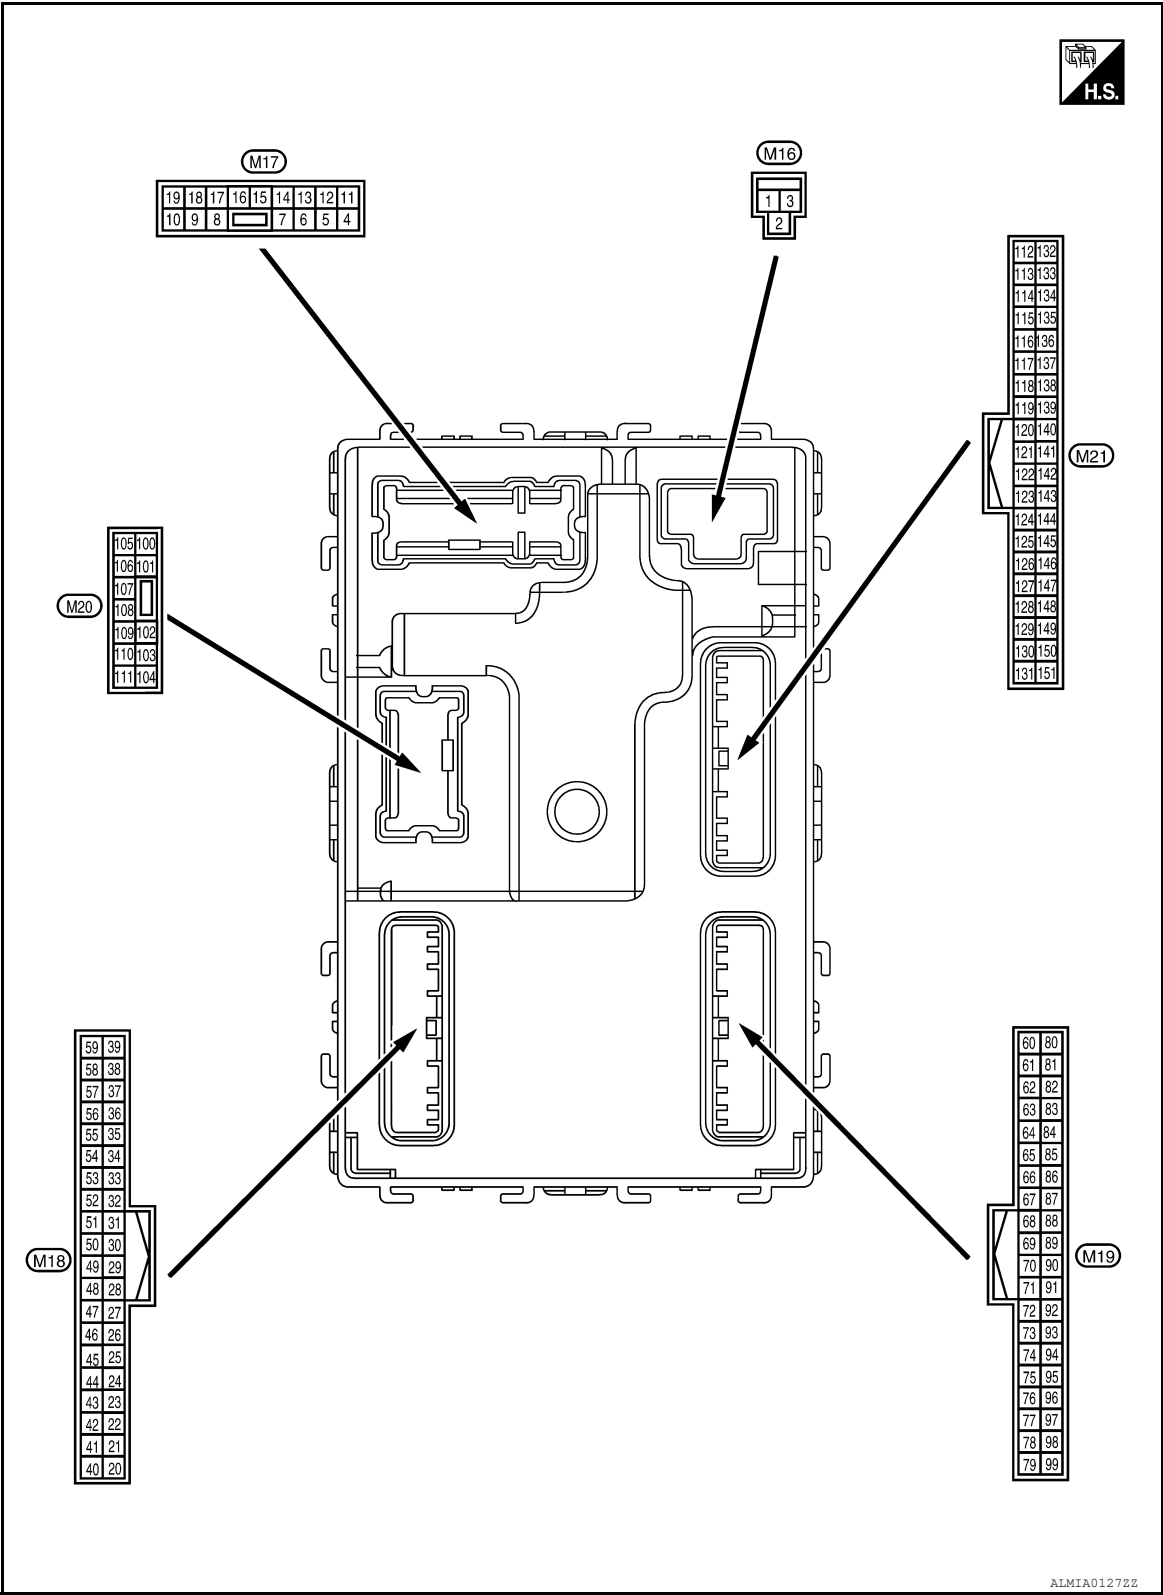
Monitor Item	Condition	Value/Status
DR DOOR STATE	Driver door LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door UNLOCK status	UNLK
AS DOOR STATE	Passenger door LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door UNLOCK status	UNLK
ID OK FLAG	Ignition switch ACC or ON	RESET
	Ignition switch OFF	SET
PRMT ENG STAT	When the engine start is prohibited	RESET
	When the engine start is permitted	SET
KEY SW -SLOT	When Intelligent Key is not inserted into key slot	OFF
	When Intelligent Key is inserted into key slot	ON
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key
AIR PRESS FL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	When ID of front LH tire transmitter is registered	DONE
	When ID of front LH tire transmitter is not registered	YET
ID REGST FR1	When ID of front RH tire transmitter is registered	DONE
	When ID of front RH tire transmitter is not registered	YET
ID REGST RR1	When ID of rear RH tire transmitter is registered	DONE
	When ID of rear RH tire transmitter is not registered	YET
ID REGST RL1	When ID of rear LH tire transmitter is registered	DONE
	When ID of rear LH tire transmitter is not registered	YET
WARNING LAMP	Tire pressure indicator OFF	OFF
	Tire pressure indicator ON	ON

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal Layout

INFOID:000000006918619



Physical Values


INFOID:000000006918620

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

RF

# BCM (BODY CONTROL MODULE)
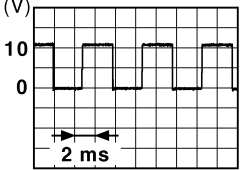
## < ECU DIAGNOSIS INFORMATION >




Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
1 (W/B)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R/Y)	Ground	Battery power supply output	Output	Ignition switch OFF		Battery voltage
3 (L/W)	Ground	Ignition power supply output	Output	Ignition switch ON		Battery voltage
4 (P/W)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
5 (G/Y)	Ground	Front door RH UNLOCK	Output	Front door RH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
7 (R/W)	Ground	Step lamp	Output	Step lamp	ON	0V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (actuator is activated)	Battery voltage
					Other than LOCK (actuator is not activated)	0V
9 (G)	Ground	Front door LH UNLOCK	Output	Front door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
10 <sup>1</sup> (G/Y)	Ground	Rear door RH and rear door LH UNLOCK	Output	Rear door RH and rear door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
11 (Y/R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0V
14 <sup>1</sup> (O/W)	Ground	Engine switch (push switch) illumination ground	Input	Tail lamp	OFF	0V
					ON	<b>NOTE:</b> When the illumination brightening/dimming level is in the neutral position 

JSNIA0010GB






# BCM (BODY CONTROL MODULE)
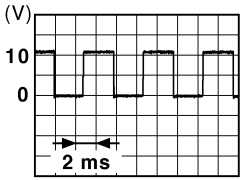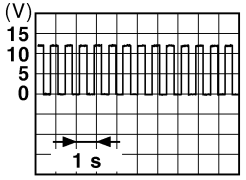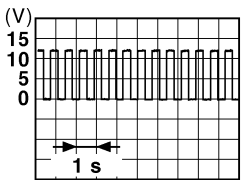
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
14 <sup>8</sup> (R/Y)	Ground	Engine switch (push switch) illumination ground	Input	Tail lamp	OFF	0V
					ON	<b>NOTE:</b> When the illumination brightening/dimming level is in the neutral position  <small>JSNIA0010GB</small>
15 (Y/L)	Ground	ACC indicator lamp	Output	Ignition switch	OFF	Battery voltage
					ACC	0V
17 (G/B)	Ground	Turn signal (RH)	Output	Ignition switch ON	Turn signal switch OFF	0V
					Turn signal switch RH	 <small>PKID0926E</small> 6.5 V
18 (G/Y)	Ground	Turn signal (LH)	Output	Ignition switch ON	Turn signal switch OFF	0V
					Turn signal switch LH	 <small>PKID0926E</small> 6.5 V
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	Battery voltage
					ON	0V
21 (P/B)	Ground	Optical sensor signal	Input	Ignition switch ON	When outside of the vehicle is bright	Close to 5V
					When outside of the vehicle is dark	Close to 0V
22 <sup>2</sup> (R/Y)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (clutch pedal is not depressed)	0V
					ON (clutch pedal is depressed)	Battery voltage
24 (R/W)	Ground	Stop lamp switch 1	Input	—	—	Battery voltage
26 (O/L)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (brake pedal is not depressed)	0V
					ON (brake pedal is depressed)	Battery voltage





# BCM (BODY CONTROL MODULE)
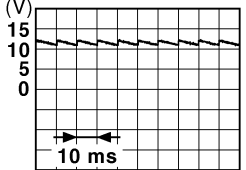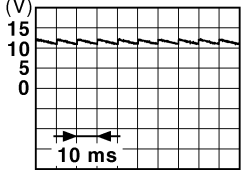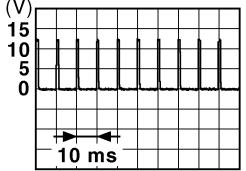
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
27 (G/W)	Ground	Front door lock as- sembly LH (unlock sensor)	Input	Front door LH	LOCK status	 JPMIA0011GB 11.8V
					UNLOCK status	0V
29 (Y)	Ground	Key slot switch	Input	When Intelligent Key is inserted into key slot		Battery voltage
				When Intelligent Key is not inserted into key slot		0V
30 (V/Y)	Ground	ACC feedback signal	Input	Ignition switch	OFF	0
					ACC or ON	Battery voltage
31 (G)	Ground	Rear window defog- ger feedback signal	Input	Rear window de- fogger switch	OFF	0V
					ON	Battery voltage
32 (R/B)	Ground	Front door RH switch	Input	Front door RH switch	OFF (when front door RH closes)	 JPMIA0011GB 11.8 V
					ON (when front door RH opens)	0V
33 (SB)	Ground	Compressor ON sig- nal	Input	A/C switch	OFF	9V - 12V
					ON	0V
34 <sup>3</sup> (L/R)	Ground	Front door lock as- sembly LH (key cylin- der switch) (unlock)	Input	Front door lock assembly LH (key cylinder switch)	OFF (neutral)	Battery voltage
					ON (unlock)	0V
36 <sup>3</sup> (GR)	Ground	Lock switch signal	Input	Door lock/unlock switch	Lock	Battery voltage
					Unlock	0V
37 (O)	Ground	Trunk lid opener can- cel switch	Input	Trunk lid opener cancel switch	CANCEL	 JPMIA0012GB 1.1V
					ON	0V
38 (GR/ W)	Ground	Rear window defog- ger ON signal	Input	Rear window de- fogger switch	OFF	Battery voltage
					ON	0V
39 <sup>3</sup> (GR/ R)	Ground	Unlock switch signal	Input	Door lock/unlock switch	Unlock	Battery voltage
					Lock	0V

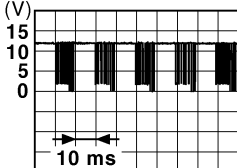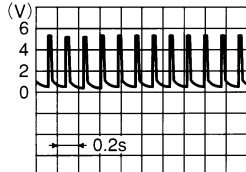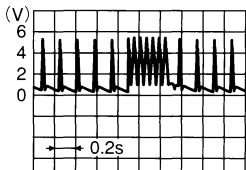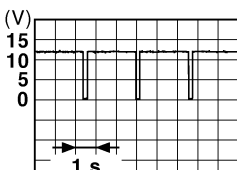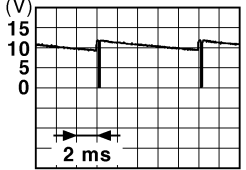
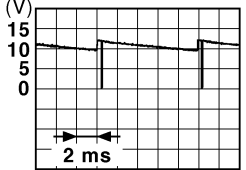

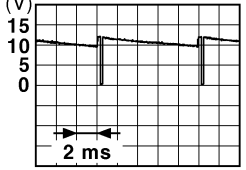
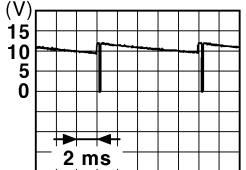
# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
40 <sup>4</sup> (Y/G)	Ground	Power window serial link	Input/ Output	Ignition switch ON		 JPMIA0013GB 10.2V
				Ignition switch OFF or ACC		0V
41 (W)	Ground	Engine switch (push switch) illumination	Output	Engine switch (push switch) illumination	ON	5.5V
					OFF	0V
42 (R)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	ON	0V
					OFF	Battery voltage
45 (P)	Ground	Receiver & sensor ground	Input	Ignition switch ON		0V
46 (V/W)	Ground	Receiver & sensor power supply output	Output	Ignition switch	OFF	0V
					ACC or ON	5.0V
47 (G/O)	Ground	Tire pressure receiver signal	Input/ Output	Ignition switch ON	Standby state	 OCC3881D
					When receiving the signal from the transmitter	 OCC3880D
48 (R/G)	Ground	Selector lever P/N position signal	Input	Selector lever	P or N position	12.0V
					Except P and N positions	0V
49 (L/O)	Ground	Security indicator signal	Output	Security indicator	ON	0V
					Blinking	 JPMIA0014GB 11.3V
					OFF	Battery voltage

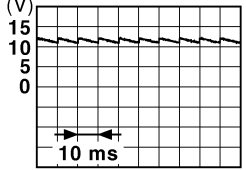
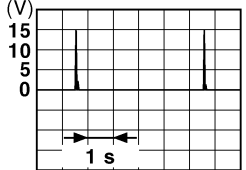
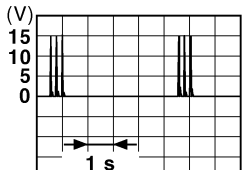
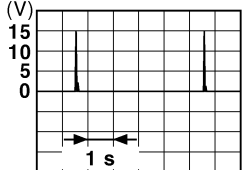
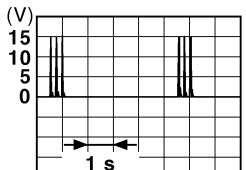
# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
50 (LG/ B)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0V
					Lighting switch 1ST	
					Lighting switch high-beam	
					Lighting switch 2ND	
					Turn signal switch RH	10.7V
51 (L/W)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0V
					Front wiper switch HI (Wiper intermittent dial 4)	
					Any of the conditions below with all switch OFF	
					<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>	10.7V
52 (G/B)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0V
					Front washer switch ON (Wiper intermittent dial 4)	
					Any of the conditions below with all switch OFF	
					<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>	10.7V
53 (LG/ R)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0V
					Front wiper switch INT	
					Front wiper switch LO	
					Lighting switch AUTO	10.7V
54 (G/Y)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0V
					Front fog lamp switch ON	
					Lighting switch 2ND	
					Lighting switch flash-to- pass	
					Turn signal switch LH	10.7V
55 (BR/ W)	Ground	Front blower monitor	Input	Front blower mo- tor switch	ON	Battery voltage
					OFF	0V







# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
56 <sup>3</sup> (L/B)	Ground	Front door lock as- sembly LH (key cylin- der switch) (lock)	Input	Front door lock assembly LH (key cylinder switch)	OFF (neutral)	Battery voltage
					ON (lock)	0V
57 (W)	Ground	Tire pressure warn- ing check switch	Input	—		Battery voltage
58 (S/B)	Ground	Front door LH switch	Input	Front door LH switch	OFF (front door LH CLOSE)	 JPMIA0011GB 11.8V
					ON (front door LH OPEN)	0V
59 (G/R)	Ground	Rear window defog- ger relay	Output	Rear window de- fogger	Active	Battery voltage
					Not activated	0V
60 (B/R)	Ground	Front console anten- na 2 (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB
61 (W/R)	Ground	Center console an- tenna 2 (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB





# BCM (BODY CONTROL MODULE)
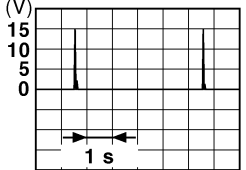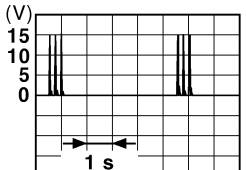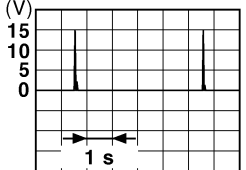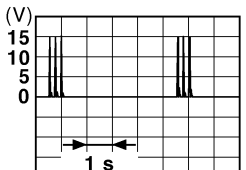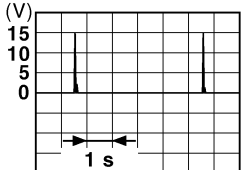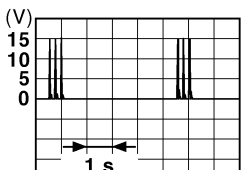
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
62 (B/Y)	Ground	Front outside handle RH antenna (-)	Output	When the front door RH request switch is operat- ed with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>
63 (LG)	Ground	Front outside handle RH antenna (+)	Output	When the front door RH request switch is operat- ed with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>
64 (V)	Ground	Front outside handle LH antenna (-)	Output	When the front door LH request switch is operat- ed with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>




# BCM (BODY CONTROL MODULE)
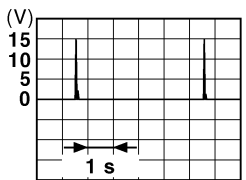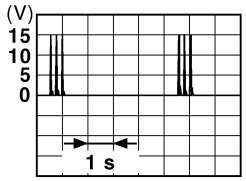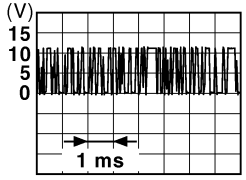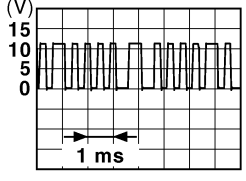
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
65 (P)	Ground	Front outside handle LH antenna (+)	Output	When the front door LH request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
				When the front door LH request switch is operat- ed with ignition switch OFF	When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
68 (G/O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
69 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
70 (R/B)	Ground	Ignition relay-2 con- trol	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
71 (L/O)	Ground	Remote keyless entry receiver signal	Input/ Output	During waiting		 JMKIA0064GB
				When operating either button on Intelligent Key		 JMKIA0065GB

# BCM (BODY CONTROL MODULE)





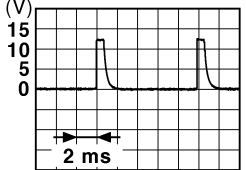
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
75 (R/Y)	Ground	Combination switch INPUT 5	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 1.4V
					Front fog lamp switch ON (Wiper intermittent dial 4)	 1.3V
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>	 1.3V





# BCM (BODY CONTROL MODULE)
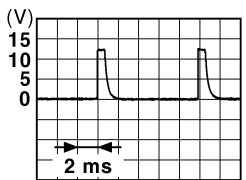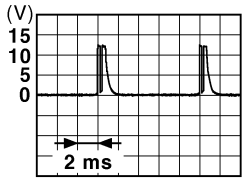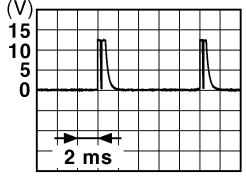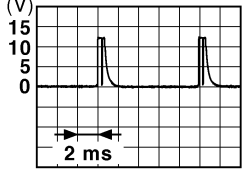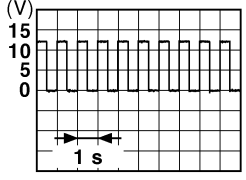
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
76 (R/G)	Ground	Combination switch INPUT 3	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 1.4V
					Lighting switch high-beam (Wiper intermittent dial 4)	 1.3V
					Lighting switch 2ND (Wiper intermittent dial 4)	 1.3V
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> </ul>	 1.3V
77 (BR)	Ground	Engine switch (push switch)	Input	Engine switch (push switch)	Pressed	0V
					Not pressed	Battery voltage
78 (P)	Ground	CAN-L	Input/ Output	—	—	—
79 (L)	Ground	CAN-H	Input/ Output	—	—	—
80 (R/L)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	0V
					Blinking	 6.5V
					ON	Battery voltage

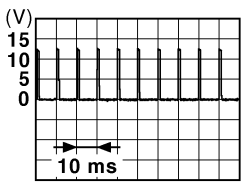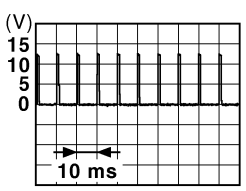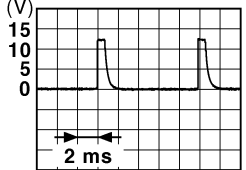
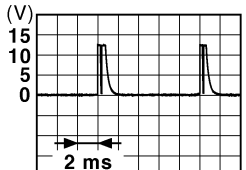

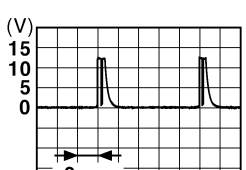

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
81 (LG)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V
83 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0V
					ACC or ON	Battery voltage
84 <sup>5</sup> (Y/R)	Ground	CVT shift selector	Output	—		Battery voltage
85 (L/O)	Ground	Electronic steering column lock condition No. 1	Input	Electronic steer- ing column lock	Lock status	0V
					Unlock status	Battery voltage
86 (G/R)	Ground	Electronic steering column lock condition No. 2	Input	Electronic steer- ing column lock	Lock status	Battery voltage
					Unlock status	0V
87 <sup>5</sup> (G/B)	Ground	Selector lever P posi- tion switch	Input	Selector lever	P position	0V
					Any position other than P	Battery voltage
88 (P/L)	Ground	Front door RH re- quest switch	Input	Front door RH re- quest switch	ON (pressed)	0V
					OFF (not pressed)	 <p>1.0V</p>
89 (B/W)	Ground	Front door LH re- quest switch	Input	Front door LH re- quest switch	ON (pressed)	0V
					OFF (not pressed)	 <p>1.0V</p>
90 (Y)	Ground	Blower fan motor re- lay control	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
91 (L/R)	Ground	Remote keyless entry receiver power sup- ply	Output	Ignition switch OFF		Battery voltage
94 (G/Y)	Ground	Electronic steering column lock power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V

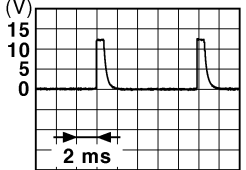
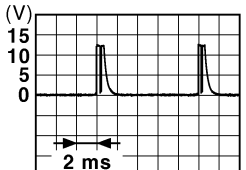
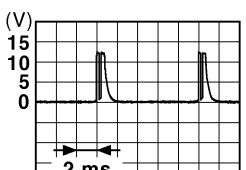
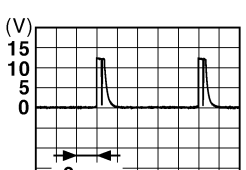
# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
95 (R/W)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermit- tent dial 4)	<p>All switch OFF</p>  <p>1.4V</p>
					<p>Turn signal switch LH</p>  <p>1.3V</p>
					<p>Turn signal switch RH</p>  <p>1.3V</p>
					<p>Front wiper switch LO</p>  <p>1.3V</p>
					<p>Front washer switch ON</p>  <p>1.3V</p>







# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
96 (P/B)	Ground	Combination switch INPUT 4	Input	Combination switch	 <p>1.4V</p>
				Lighting switch AUTO (Wiper intermittent dial 4)	 <p>1.3V</p>
				Lighting switch 1ST (Wiper intermittent dial 4)	 <p>1.3V</p>
				Any of the conditions below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>	 <p>1.3V</p>




# BCM (BODY CONTROL MODULE)
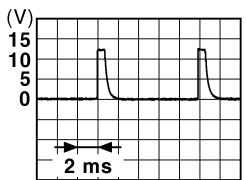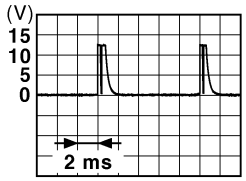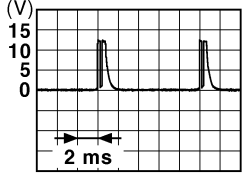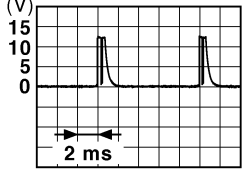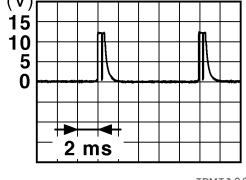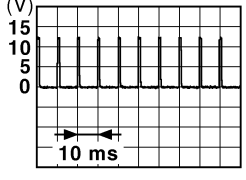
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
97 (R/B)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switch OFF  1.4V
					Lighting switch flash-to- pass  1.3V
					Lighting switch 2ND  1.3V
					Front wiper switch INT  1.3V
					Front wiper switch HI  1.3V
98 (G/O)	Ground	Hazard switch	Input	Hazard switch	Pressed 0 V
				Not pressed	 1.1V







# BCM (BODY CONTROL MODULE)
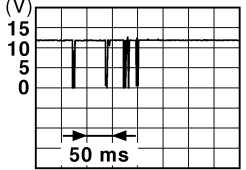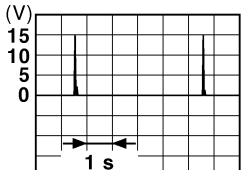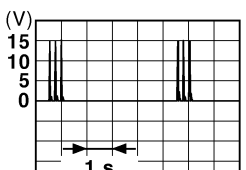
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
99 (L/Y)	Ground	Electronic steering column lock unit com- munication	Input/ Output	Electronic steer- ing column lock	LOCK status	Battery voltage
					LOCK or UNLOCK	 JMKIA0066GB
					For 15 seconds after UN- LOCK	Battery voltage
					15 seconds or later after UNLOCK	0V
103 (V)	Ground	Trunk lid opening	Output	Trunk lid	Open (trunk lid opener ac- tuator is activated)	Battery voltage
					Close (trunk lid opener ac- tuator is not activated)	0V
110 (V/W)	Ground	Trunk room lamp	Output	Trunk room lamp	ON	0V
					OFF	Battery voltage
114 (B)	Ground	Trunk room antenna 1 (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB




# BCM (BODY CONTROL MODULE)
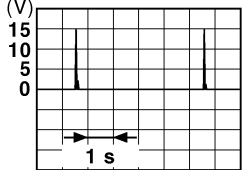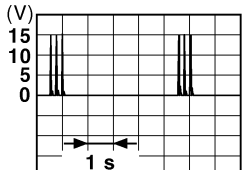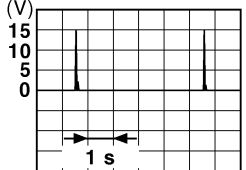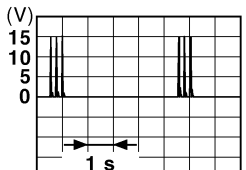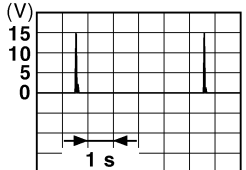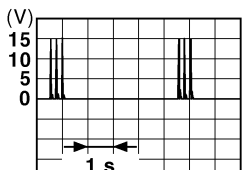
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
115 (W)	Ground	Trunk room antenna 1 (+)	Output	Ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	 <p>JMKIA0063GB</p>
118 (L/O)	Ground	Rear bumper anten- na (-)	Output	When the trunk lid request switch is operated with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>
119 (BR/ W)	Ground	Rear bumper anten- na (+)	Output	When the trunk lid request switch is operated with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>

# BCM (BODY CONTROL MODULE)

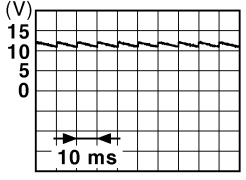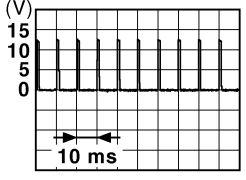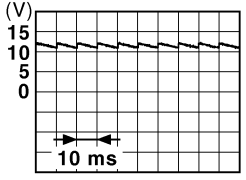
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
127 (BR/ W)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V
130 (Y/G)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (trunk is closed)	 JPMIA0011GB 11.8V
					ON (trunk is open)	0V
132 (R)	Ground	Starter motor relay control	Output	Ignition switch OFF (M/T vehi- cle)	When the clutch pedal is depressed	Battery voltage
					When the clutch pedal is not depressed	0V
				Ignition switch ON (other than M/ T vehicle)	When selector lever is in P or N position and the brake is depressed	Battery voltage
					When selector lever is in P or N position and the brake is not depressed	0V
141 (G/R)	Ground	Trunk request switch	Input	Trunk request switch	ON (pressed)	0V
					OFF (not pressed)	 JPMIA0016GB 1.0V
144 (GR)	Ground	Request switch buzz- er	Output	Request switch buzzer	Sounding	0V
					Not sounding	Battery voltage
147 (L/R)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0V
					Not pressed	Battery voltage
148 <sup>1</sup> (R/W)	Ground	Rear door RH switch	Input	Rear door RH switch	OFF (when rear door RH closes)	 JPMIA0011GB 11.8V
					ON (when rear door RH opens)	0V



# BCM (BODY CONTROL MODULE)
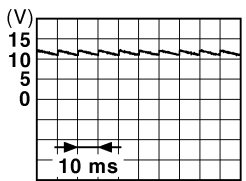
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
149 <sup>1</sup> (R/B)	Ground	Rear door LH switch	Input	Rear door LH switch	OFF (when rear door LH closes)	 JPMIA0011GB 11.8V
					ON (when rear door LH opens)	0V

1: Sedan only

2: M/T only

3: With LH front window anti-pinch

4: With LH and RH front window anti-pinch.

5: CVT only

6: With auto lights

7: With low tire pressure warning system

8: Coupe only

## Fail Safe

INFOID:000000006918621

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	Inhibit electronic steering column lock	When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>Starter control relay signal</li> <li>Starter relay status signal</li> </ul>
B2562: LO VOLTAGE	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit electronic steering column lock</li> </ul>	100 ms after the power supply voltage increases to more than 8.8 V
B2601: SHIFT POSITION	Inhibit electronic steering column lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> <li>Selector lever P position switch signal</li> <li>P range signal (CAN)</li> </ul>
B2602: SHIFT POSITION	Inhibit electronic steering column lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P position switch signal: Except P position (battery voltage)</li> <li>Vehicle speed: 4 /h or more</li> </ul>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2603: SHIFT POSI STATUS	Inhibit electronic steering column lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P position switch signal: Except P position (battery voltage)</li> <li>Selector lever P/N position signal: Except P and N positions (0 V)</li> </ul>
B2604: PNP SW	Inhibit electronic steering column lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> <li>Status 1 <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P/N position signal: P and N position (battery voltage)</li> <li>P range signal or N range signal (CAN): ON</li> </ul> </li> <li>Status 2 <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>P range signal and N range signal (CAN): OFF</li> </ul> </li> </ul>
B2605: PNP SW	Inhibit electronic steering column lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> <li>Ignition switch is in the ON position <ul style="list-style-type: none"> <li>Power position: IGN</li> <li>Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>Interlock/transmission switch signal (CAN): OFF</li> </ul> </li> <li>Status 2 <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P/N position signal: P or N position (battery voltage)</li> <li>transmission switch signal (CAN): ON</li> </ul> </li> </ul>
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>Electronic steering column lock relay signal (Request signal)</li> <li>Electronic steering column lock relay signal (Condition signal)</li> </ul>
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>Electronic steering column lock relay signal (Request signal)</li> <li>Electronic steering column lock relay signal (Condition signal)</li> </ul>
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>Starter motor relay control signal</li> <li>Starter relay status signal (CAN)</li> </ul>
B2609: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit electronic steering column lock</li> </ul>	When the following electronic steering column lock conditions agree <ul style="list-style-type: none"> <li>BCM electronic steering column lock control status</li> <li>Electronic steering column lock condition No. 1 signal status</li> <li>Electronic steering column lock condition No. 2 signal status</li> </ul>
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>Power position changes to ACC</li> <li>Receives engine status signal (CAN)</li> </ul>
B2612: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit electronic steering column lock</li> </ul>	When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>Electronic steering column lock unit status signal (CAN) is received normally</li> <li>The BCM electronic steering column lock control status matches the electronic steering column lock status recognized by the electronic steering column lock unit status signal (CAN from IPDM E/R)</li> </ul>
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the electronic steering column lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E1: ENG STATE NO RECIV	Inhibit engine cranking	When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>Power position changes to ACC</li> <li>Receives engine status signal (CAN)</li> </ul>
B26E8: CLUTCH SW	Inhibit engine cranking	When any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>Status 1 <ul style="list-style-type: none"> <li>Clutch switch signal (CAN from ECM): ON</li> <li>Clutch interlock switch signal: OFF (0 V)</li> </ul> </li> <li>Status 2 <ul style="list-style-type: none"> <li>Clutch switch signal (CAN from ECM): OFF</li> <li>Clutch interlock switch signal: OFF (Battery voltage)</li> </ul> </li> </ul>
B26E9: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit electronic steering column lock</li> </ul>	When BCM transmits the LOCK request signal to the steering lock unit and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> <li>Steering condition No 1 signal: LOCK (0V)</li> <li>Steering condition No 2 signal: LOCK (Battery voltage)</li> </ul>

### DTC Inspection Priority Chart

INFOID:000000006918622

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> <li>B2562: LOW VOLTAGE</li> </ul>
2	<ul style="list-style-type: none"> <li>U1000: CAN COMM CIRCUIT</li> <li>U1010: CONTROL UNIT (CAN)</li> </ul>
3	<ul style="list-style-type: none"> <li>B2190: NATS ANTENNA AMP</li> <li>B2191: DIFFERENCE OF KEY</li> <li>B2192: ID DISCORD BCM-ECM</li> <li>B2193: CHAIN OF BCM-ECM</li> <li>B2195: ANTI SCANNING</li> </ul>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Priority	DTC
4	<ul style="list-style-type: none"> <li>• B2013: ID DISCORD BCM-S/L</li> <li>• B2014: CHAIN OF S/L-BCM</li> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP SW</li> <li>• B2605: PNP SW</li> <li>• B2606: S/L RELAY</li> <li>• B2607: S/L RELAY</li> <li>• B2608: STARTER RELAY</li> <li>• B2609: S/L STATUS</li> <li>• B260A: IGNITION RELAY</li> <li>• B260B: STEERING LOCK UNIT</li> <li>• B260C: STEERING LOCK UNIT</li> <li>• B260D: STEERING LOCK UNIT</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2611: ACC RELAY</li> <li>• B2612: S/L STATUS</li> <li>• B2614: ACC RELAY CIRC</li> <li>• B2615: BLOWER RELAY CIRC</li> <li>• B2616: IGN RELAY CIRC</li> <li>• B2617: STARTER RELAY CIRC</li> <li>• B2618: BCM</li> <li>• B2619: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B261E: VEHICLE TYPE</li> <li>• B26E1: ENG STATE NO RECIV</li> <li>• B26E8: CLUTCH SW</li> <li>• B26E9: S/L STATUS</li> <li>• B26EA: KEY REGISTRATION</li> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• U0415: VEHICLE SPEED SIG</li> </ul>
5	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1712: [CHECKSUM ERR] FL</li> <li>• C1713: [CHECKSUM ERR] FR</li> <li>• C1714: [CHECKSUM ERR] RR</li> <li>• C1715: [CHECKSUM ERR] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1720: [CODE ERR] FL</li> <li>• C1721: [CODE ERR] FR</li> <li>• C1722: [CODE ERR] RR</li> <li>• C1723: [CODE ERR] RL</li> <li>• C1724: [BATT VOLT LOW] FL</li> <li>• C1725: [BATT VOLT LOW] FR</li> <li>• C1726: [BATT VOLT LOW] RR</li> <li>• C1727: [BATT VOLT LOW] RL</li> <li>• C1734: CONTROL UNIT</li> </ul>
6	<ul style="list-style-type: none"> <li>• B2622: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## DTC Index

INFOID:000000006918623

### NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	<a href="#">BCS-32</a>
U1010: CONTROL UNIT (CAN)	—	—	—	<a href="#">BCS-33</a>
U0415: VEHICLE SPEED SIG	—	—	—	<a href="#">BCS-34</a>
B2013: ID DISCORD BCM-S/L	×	—	—	<a href="#">SEC-36</a> (Coupe), <a href="#">SEC-250</a> (Sedan)
B2014: CHAIN OF S/L-BCM	×	—	—	<a href="#">SEC-37</a> (Coupe), <a href="#">SEC-251</a> (Sedan)
B2190: NATS ANTENNA AMP	×	—	—	<a href="#">SEC-65</a> (Coupe), <a href="#">SEC-281</a> (Sedan)
B2191: DIFFERENCE OF KEY	×	—	—	<a href="#">SEC-69</a> (Coupe), <a href="#">SEC-285</a> (Sedan)
B2192: ID DISCORD BCM-ECM	×	—	—	<a href="#">SEC-70</a> (Coupe), <a href="#">SEC-286</a> (Sedan)
B2193: CHAIN OF BCM-ECM	×	—	—	<a href="#">SEC-71</a> (Coupe), <a href="#">SEC-287</a> (Sedan)
B2195: ANTI-SCANNING	—	—	—	<a href="#">SEC-72</a>
B2553: IGNITION RELAY	—	—	—	<a href="#">PCS-59</a>
B2555: STOP LAMP	—	—	—	<a href="#">SEC-73</a> (Coupe), <a href="#">SEC-289</a> (Sedan)
B2556: PUSH-BTN IGN SW	—	×	—	<a href="#">SEC-78</a> (Coupe), <a href="#">SEC-294</a> (Sedan)
B2557: VEHICLE SPEED	×	×	—	<a href="#">SEC-80</a> (Coupe), <a href="#">SEC-296</a> (Sedan)
B2560: STARTER CONT RELAY	×	×	—	<a href="#">SEC-81</a> (Coupe), <a href="#">SEC-297</a> (Sedan)
B2562: LOW VOLTAGE	—	—	—	<a href="#">BCS-35</a>
B2601: SHIFT POSITION	×	×	—	<a href="#">SEC-82</a> (Coupe), <a href="#">SEC-298</a> (Sedan)
B2602: SHIFT POSITION	×	×	—	<a href="#">SEC-86</a> (Coupe), <a href="#">SEC-302</a> (Sedan)
B2603: SHIFT POSI STATUS	×	×	—	<a href="#">SEC-89</a> (Coupe), <a href="#">SEC-305</a> (Sedan)
B2604: PNP SW	×	×	—	<a href="#">SEC-92</a> (Coupe), <a href="#">SEC-308</a> (Sedan)
B2605: PNP SW	×	×	—	<a href="#">SEC-94</a> (Coupe), <a href="#">SEC-310</a> (Sedan)
B2606: S/L RELAY	×	×	—	<a href="#">SEC-96</a> (Coupe), <a href="#">SEC-312</a> (Sedan)

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2607: S/L RELAY	×	×	—	<a href="#">SEC-97</a> (Coupe), <a href="#">SEC-313</a> (Sedan)
B2608: STARTER RELAY	×	×	—	<a href="#">SEC-99</a> (Coupe), <a href="#">SEC-315</a> (Sedan)
B2609: S/L STATUS	×	×	—	<a href="#">SEC-101</a> (Coupe), <a href="#">SEC-317</a> (Sedan)
B260A: IGNITION RELAY	×	×	—	<a href="#">PCS-61</a>
B260B: STEERING LOCK UNIT	—	×	—	<a href="#">SEC-106</a> (Coupe), <a href="#">SEC-322</a> (Sedan)
B260C: STEERING LOCK UNIT	—	×	—	<a href="#">SEC-107</a> (Coupe), <a href="#">SEC-323</a> (Sedan)
B260D: STEERING LOCK UNIT	—	×	—	<a href="#">SEC-108</a> (Coupe), <a href="#">SEC-324</a> (Sedan)
B260F: ENG STATE SIG LOST	×	×	—	<a href="#">SEC-109</a> (Coupe), <a href="#">SEC-325</a> (Sedan)
B2611: ACC RELAY	—	—	—	<a href="#">PCS-62</a>
B2612: S/L STATUS	×	×	—	<a href="#">SEC-110</a> (Coupe), <a href="#">SEC-331</a> (Sedan)
B2614: ACC RELAY CIRC	—	×	—	<a href="#">PCS-64</a>
B2615: BLOWER RELAY CIRC	—	×	—	<a href="#">PCS-67</a>
B2616: IGN RELAY CIRC	—	×	—	<a href="#">PCS-70</a>
B2617: STARTER RELAY CIRC	×	×	—	<a href="#">SEC-115</a> (Coupe), <a href="#">SEC-336</a> (Sedan)
B2618: BCM	×	×	—	<a href="#">PCS-73</a>
B2619: BCM	×	×	—	<a href="#">SEC-117</a> (Coupe), <a href="#">SEC-338</a> (Sedan)
B261A: PUSH-BTN IGN SW	—	×	—	<a href="#">SEC-118</a> (Coupe), <a href="#">SEC-339</a> (Sedan)
B261E: VEHICLE TYPE	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-121</a>
B2622: INSIDE ANTENNA	—	—	—	<a href="#">DLK-279</a>
B2623: INSIDE ANTENNA	—	—	—	<a href="#">DLK-282</a>
B26E1: ENG STATE NO RES	×	×	—	<a href="#">SEC-326</a>
B26E8: CLUTCH SW	×	×	—	<a href="#">SEC-123</a>
B26E9: S/L STATUS	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-125</a>
B26EA: KEY REGISTRATION	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-126</a>
C1704: LOW PRESSURE FL	—	—	×	<a href="#">WT-8</a>
C1705: LOW PRESSURE FR	—	—	×	<a href="#">WT-8</a>
C1706: LOW PRESSURE RR	—	—	×	<a href="#">WT-8</a>
C1707: LOW PRESSURE RL	—	—	×	<a href="#">WT-8</a>
C1708: [NO DATA] FL	—	—	×	<a href="#">WT-13</a>
C1709: [NO DATA] FR	—	—	×	<a href="#">WT-13</a>
C1710: [NO DATA] RR	—	—	×	<a href="#">WT-13</a>
C1711: [NO DATA] RL	—	—	×	<a href="#">WT-13</a>
C1712: [CHECKSUM ERR] FL	—	—	×	<a href="#">WT-15</a>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1713: [CHECKSUM ERR] FR	—	—	×	<a href="#">WT-15</a>
C1714: [CHECKSUM ERR] RR	—	—	×	<a href="#">WT-15</a>
C1715: [CHECKSUM ERR] RL	—	—	×	<a href="#">WT-15</a>
C1716: [PRESSDATA ERR] FL	—	—	×	<a href="#">WT-17</a>
C1717: [PRESSDATA ERR] FR	—	—	×	<a href="#">WT-17</a>
C1718: [PRESSDATA ERR] RR	—	—	×	<a href="#">WT-17</a>
C1719: [PRESSDATA ERR] RL	—	—	×	<a href="#">WT-17</a>
C1720: [CODE ERR] FL	—	—	×	<a href="#">WT-15</a>
C1721: [CODE ERR] FR	—	—	×	<a href="#">WT-15</a>
C1722: [CODE ERR] RR	—	—	×	<a href="#">WT-15</a>
C1723: [CODE ERR] RL	—	—	×	<a href="#">WT-15</a>
C1724: [BATT VOLT LOW] FL	—	—	×	<a href="#">WT-15</a>
C1725: [BATT VOLT LOW] FR	—	—	×	<a href="#">WT-15</a>
C1726: [BATT VOLT LOW] RR	—	—	×	<a href="#">WT-15</a>
C1727: [BATT VOLT LOW] RL	—	—	×	<a href="#">WT-15</a>
C1729: VHCL SPEED SIG ERR	—	—	×	<a href="#">WT-18</a>
C1734: CONTROL UNIT	—	—	×	<a href="#">WT-19</a>

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

# SUNROOF MOTOR ASSEMBLY

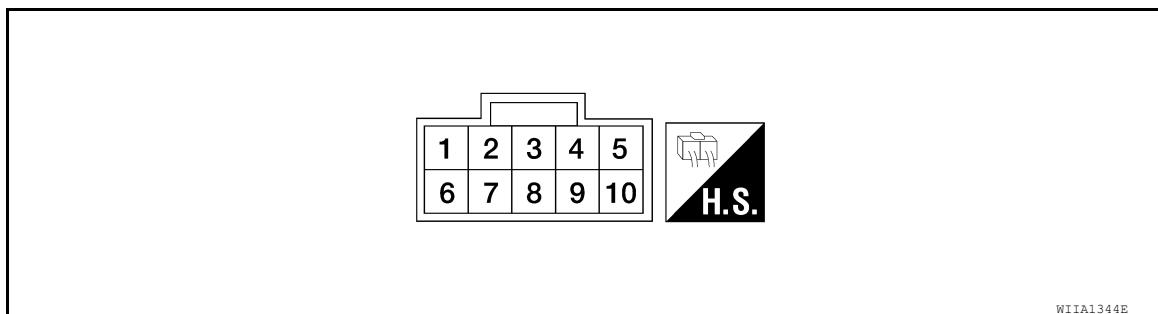
< ECU DIAGNOSIS INFORMATION >

## SUNROOF MOTOR ASSEMBLY

Reference Value

INFOID:000000006389914

### TERMINAL LAYOUT



### PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Voltage (V) (Approx.)
+	-	Signal name	Input/ Output		
1 (G)	Ground	Sunroof close switch (BIT 1) signal	Input	Sunroof switch in following position • TILT UP • SLIDE CLOSE	0
				Other than above	Battery voltage
2 (B)	Ground	Ground	—	—	0
5 (Y)	Ground	Sunroof open switch (BIT 0) signal	Input	Sunroof switch in following position • TILT DOWN • SLIDE OPEN	0
				Other than above	Battery voltage
7 (R/Y)	Ground	Sunroof power supply	Input	—	Battery voltage
8 (L/B)	Ground	Vehicle speed signal (2-pulse)	Input	Speedometer operated [When vehicle speed is approx. 40km/h (25MPH)]	
9 (L/W)	Ground	RAP signal	Input	Ignition switch ON	Battery voltage
				Within 45 second after ignition switch is turned to OFF.	Battery voltage
				When driver side or passenger side door is opened during retained power operation.	0
10 (R)	Ground	Ground	—	—	0



SUNROOF

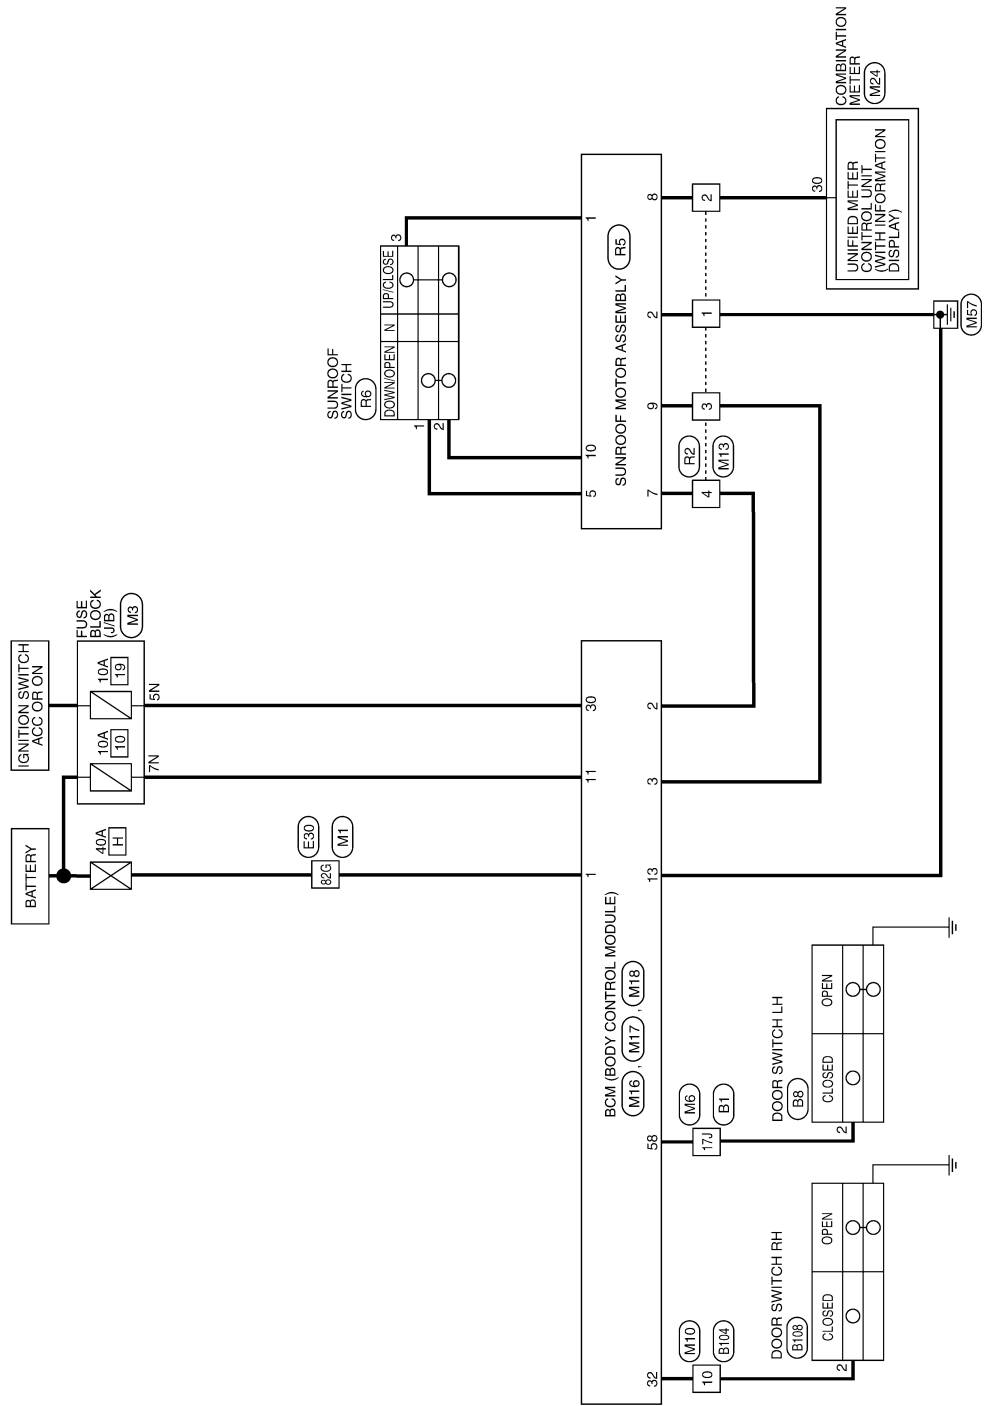
< WIRING DIAGRAM >

WIRING DIAGRAM

SUNROOF

Wiring Diagram - Coupe

INFOID:000000006389915




SUNROOF

RF


SUNROOF CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

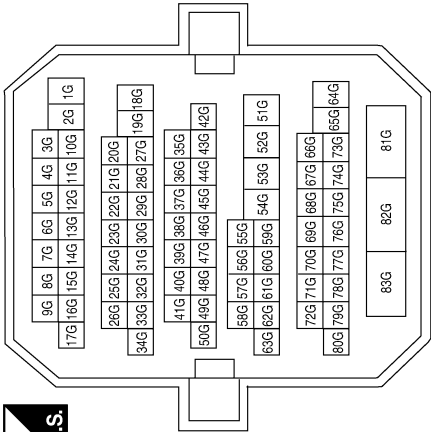


Terminal No.	Color of Wire	Signal Name
82G	W/B	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5N	V/Y	—
7N	Y/R	—

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

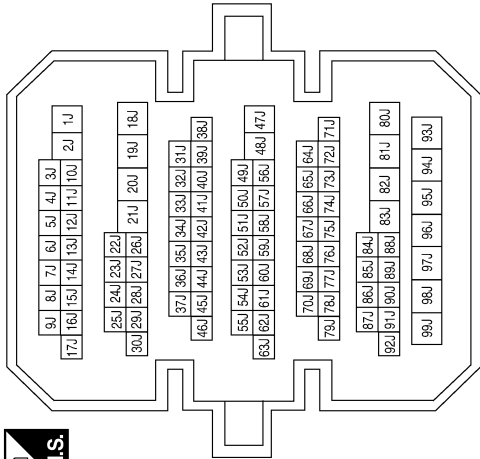


Terminal No.	Color of Wire	Signal Name
17J	SB	—

Connector No.	M13
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
10	R/B	—

ABKIA0970GB

## < WIRING DIAGRAM >

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L
2	R/Y	P/W_POWER_SUPPLY_PERM
3	L/W	POWER_WINDOW_POWER_SUPPLY (RAP)

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



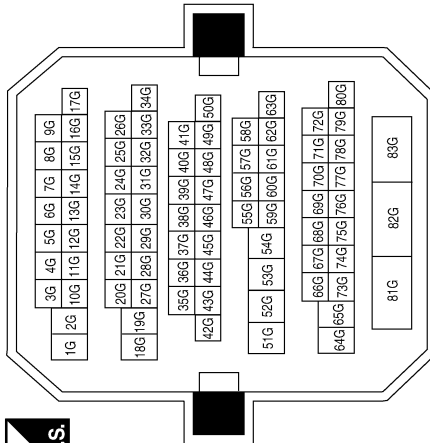
Terminal No.	Color of Wire	Signal Name
30	V/Y	ACC_F/B
32	R/B	AS_DOOR_SW
58	SB	DR_DOOR_SW

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
30	L/B	2P/R OUT

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE



< WIRING DIAGRAM >


Connector No.	B8
Connector Name	DOOR SWITCH LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	DOOR SW (DR)

Terminal No.	Color of Wire	Signal Name
17J	SB	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

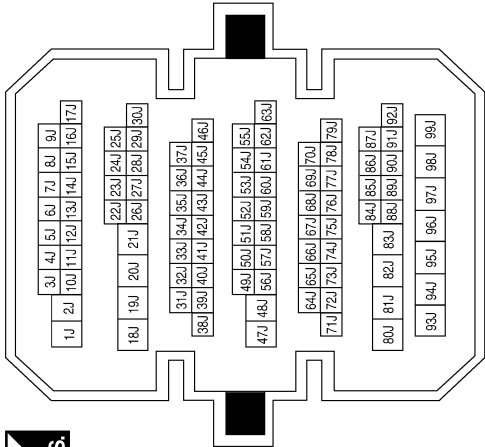


Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	L/B	-
3	L/W	-
4	R/Y	-

Connector No.	B108
Connector Name	DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	GR	DOOR SW (AS)

Connector No.	B104
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
10	GR	-

Connector No.	R6
Connector Name	SUNROOF SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	+ DOWN_OPEN
2	R	GND
3	G	+ UP_CLOSE

Connector No.	R5
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	G	CLOSE_T_UP
2	B	GND
5	Y	OPEN_T_DOWN
7	R/Y	+B
8	L/B	SPEED (2P)
9	L/W	+ IGN
10	R	GROUND

AAKIA0607GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

RF

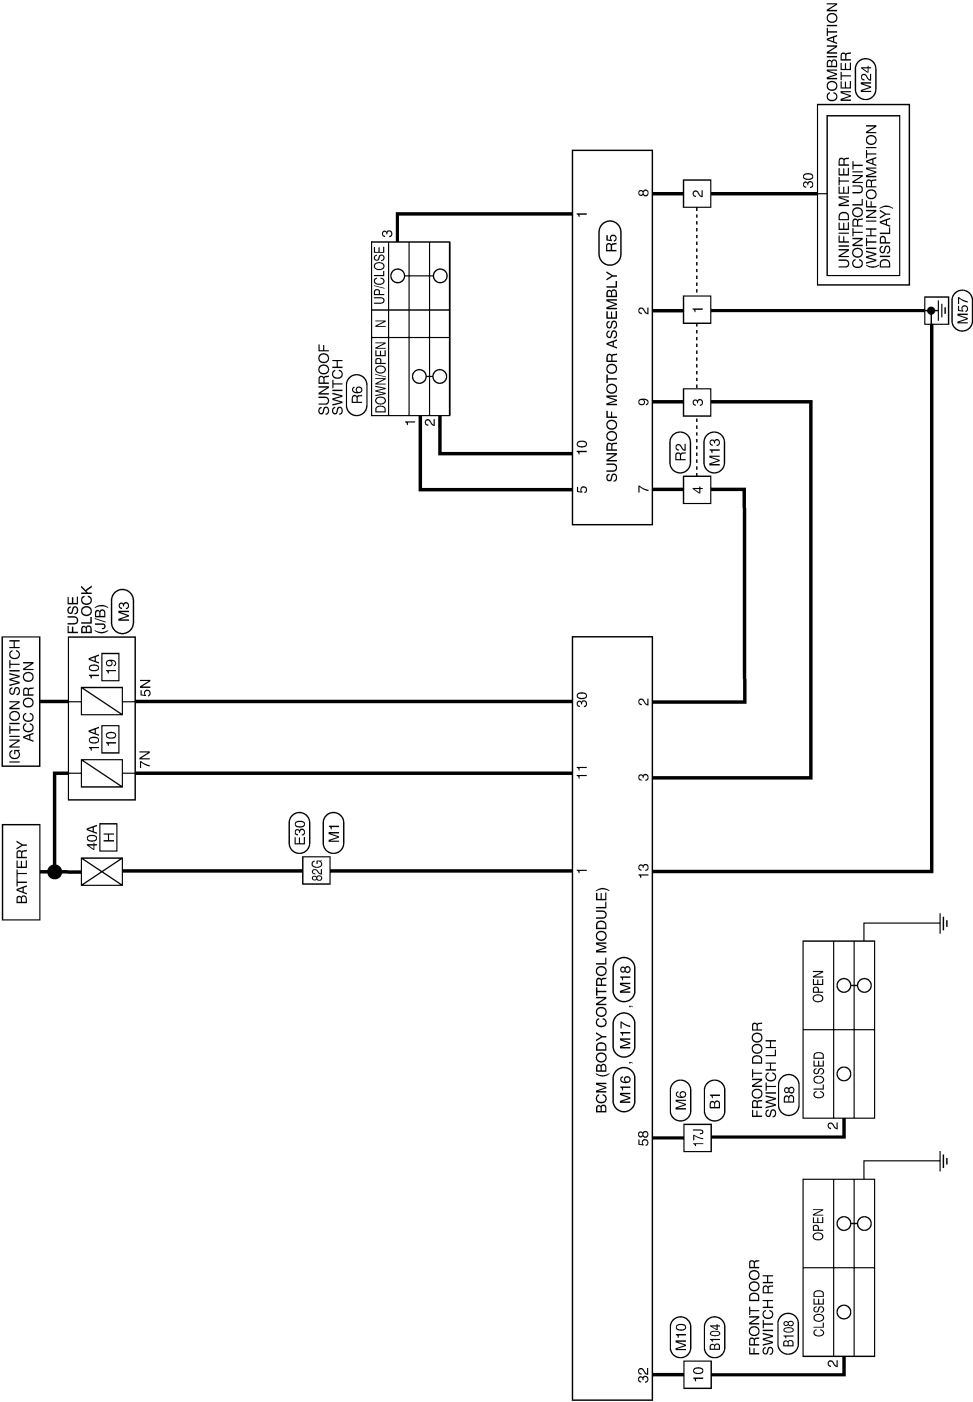
SUNROOF

< WIRING DIAGRAM >

Wiring Diagram - Sedan

INFOID:000000006389916


SUNROOF



ABKWA0850GB


SUNROOF CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

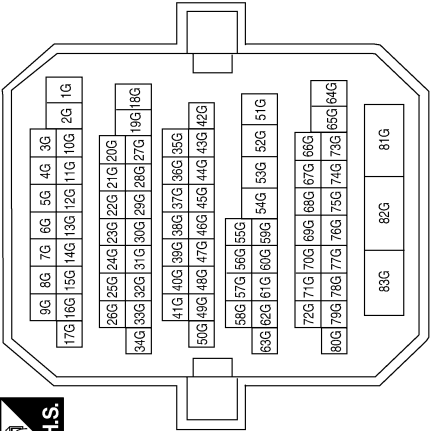


Terminal No.	Color of Wire	Signal Name
82G	W/B	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5N	V/Y	-
7N	Y/R	-

Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
10	R/B	-

Connector No.	M13
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
17J	SB	-

Terminal No.	Color of Wire	Signal Name
1	B	-
2	L/B	-
3	L/W	-
4	R/Y	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20
59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40

Terminal No.	Color of Wire	Signal Name
30	V/Y	ACC_F/B
32	R/B	AS_DOOR_SW
58	SB	DR_DOOR_SW

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19

Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L
2	R/Y	P/W_POWER_SUPPLY_PERM
3	L/W	POWER WINDOW POWER SUPPLY (RAP)

Terminal No.	Color of Wire	Signal Name
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

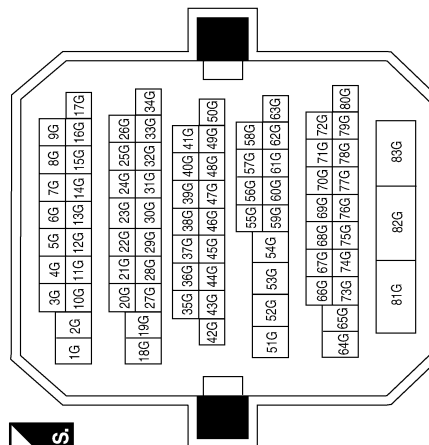

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40


Terminal No.	Color of Wire	Signal Name
30	L/B	2P/R OUT

ABK1A2390GB



< WIRING DIAGRAM >


Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	DOOR SW (DR)

Terminal No.	Color of Wire	Signal Name
17J	SB	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

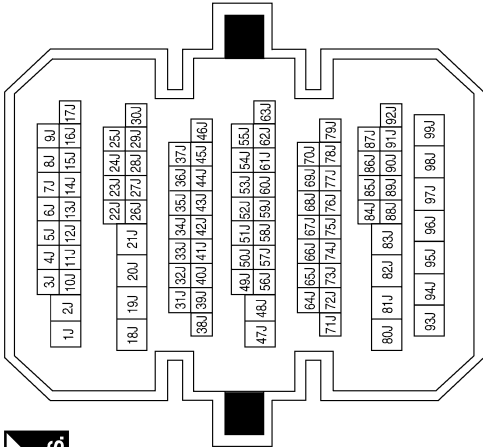


Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	L/B	-
3	L/W	-
4	R/Y	-

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	GR	DOOR SW (AS)

Connector No.	B104
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
10	GR	-

ABKIA2391GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P


< WIRING DIAGRAM >

Connector No.	R6
Connector Name	SUNROOF SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	+ DOWN_OPEN
2	R	GND
3	G	+ UP_CLOSE

Connector No.	R5
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	G	CLOSE_T_UP
2	B	GND
5	Y	OPEN_T_DOWN
7	R/Y	+B
8	L/B	SPEED (2P)
9	L/W	+ IGN
10	R	GROUND

AAKIA0608GB

# SUNROOF DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### SUNROOF DOES NOT OPERATE PROPERLY

#### Diagnosis Procedure

INFOID:000000006389917

#### 1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit.

Refer to [BCS-36, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace malfunctioning parts.

#### 2. CHECK SUNROOF MOTOR ASSEMBLY POWER SUPPLY AND GROUND CIRCUIT

Check sunroof motor assembly power supply and ground circuit.

Refer to [RF-12, "SUNROOF MOTOR ASSEMBLY : Component Function Check"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

## AUTO OPERATION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

---

### AUTO OPERATION DOES NOT OPERATE

#### Diagnosis Procedure

INFOID:000000006389918

#### 1. PERFORM INITIALIZATION PROCEDURE

---

Perform initialization procedure.

Refer to [RF-6, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform basic inspection. Refer to [RF-3, "Work Flow"](#).

## DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION

< SYMPTOM DIAGNOSIS >

### DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION

#### Diagnosis Procedure

INFOID:000000006389919

#### 1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [RF-6. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform basic inspection. Refer to [RF-3. "Work Flow"](#).

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

## RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

---

### RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

#### Diagnosis Procedure

INFOID:000000006389920

#### 1. CHECK FRONT DOOR SWITCHES

---

Check front door switches.

Refer to [DLK-64, "Component Function Check"](#) (coupe) or [DLK-286, "Component Function Check"](#) (sedan).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
- NO >> Repair or replace malfunctioning parts.

# SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION

< SYMPTOM DIAGNOSIS >

## SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION

### Diagnosis Procedure

INFOID:000000006389921

#### 1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [RF-6. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform basic inspection. Refer to [RF-3. "Work Flow"](#).

A

B

C

D

E

F

G

H

I

J

RF

L

M

N

O

P

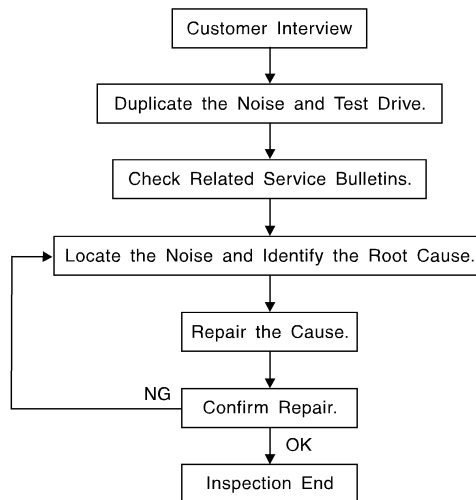
# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## SQUEAK AND RATTLE TROUBLE DIAGNOSES

### Work Flow

INFOID:000000006928522



SBT842

### CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [RF-68, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)  
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping.
- Creak—(Like walking on an old wooden floor)  
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)  
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)  
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)  
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)  
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)  
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

### DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.



# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
  - 2) Tap or push/pull around the area where the noise appears to be coming from.
  - 3) Rev the engine.
  - 4) Use a floor jack to recreate vehicle "twist".
  - 5) At idle, apply engine load (electrical load, half-clutch on M/T model, drive position on CVT and A/T models).
  - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
  - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

## CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

## LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear: J-39565 and mechanic's stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
  - removing the components in the area that you suspect the noise is coming from.  
Do not use too much force when removing clips and fasteners, otherwise clips and fasteners can be broken or lost during the repair, resulting in the creation of new noise.
  - tapping or pushing/pulling the component that you suspect is causing the noise.  
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
  - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
  - placing a piece of paper between components that you suspect are causing the noise.
  - looking for loose components and contact marks.Refer to [RF-66, "Generic Squeak and Rattle Troubleshooting"](#).

## REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
  - separate components by repositioning or loosening and retightening the component, if possible.
  - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A NISSAN Squeak and Rattle Kit (J-43980) is available through your authorized NISSAN Parts Department.

### CAUTION:

**Do not use excessive force as many components are constructed of plastic and may be damaged.**

**Always check with the Parts Department for the latest parts information.**

**The following materials are contained in the NISSAN Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.**

### URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100×135 mm (3.94×5.31 in)/76884-71L01: 60×85 mm (2.36×3.35 in)/76884-71L02: 15×25 mm (0.59×0.98 in)

### INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50×50 mm (1.97×1.97 in)/73982-50Y00: 10 mm (0.39 in) thick, 50×50 mm (1.97×1.97 in)

### INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30×50 mm (1.18×1.97 in)

### FELT CLOTH TAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15×25 mm (0.59×0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll. The following materials not found in the kit can also be used to repair squeaks and rattles.

### UHMW (TEFLON) TAPE

Insulates where slight movement is present. Ideal for instrument panel applications.

### SILICONE GREASE

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

---

**Used instead of UHMW tape that will be visible or not fit.**

**Note: Will only last a few months.**

### **SILICONE SPRAY**

**Use when grease cannot be applied.**

### **DUCT TAPE**

**Use to eliminate movement.**

## **CONFIRM THE REPAIR**

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

## **Generic Squeak and Rattle Troubleshooting**

INFOID:000000006928523

Refer to Table of Contents for specific component removal and installation information.

## **INSTRUMENT PANEL**

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicone spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

### **CAUTION:**

**Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.**

## **CENTER CONSOLE**

Components to pay attention to include:

1. Shift selector assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

## **DOORS**

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the NISSAN Squeak and Rattle Kit (J-43980) to repair the noise.

## **TRUNK**

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid bumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

### SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sun visor shaft shaking in the holder
3. Front or rear windshield touching headliner and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

### OVERHEAD CONSOLE (FRONT AND REAR)

Overhead console noises are often caused by the console panel clips not being engaged correctly. Most of these incidents are repaired by pushing up on the console at the clip locations until the clips engage.

In addition look for:

1. Loose harness or harness connectors.
2. Front console map/reading lamp lens loose.
3. Loose screws at console attachment points.

### SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

### UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component installed to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator installation pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## Diagnostic Worksheet

INFOID:000000006928524

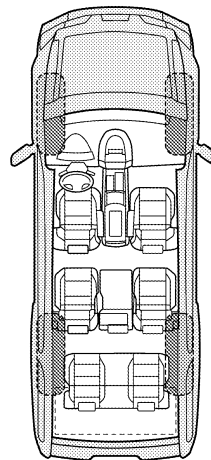
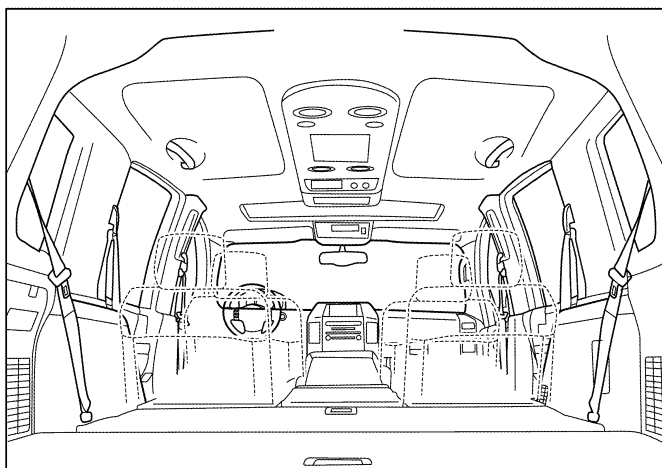
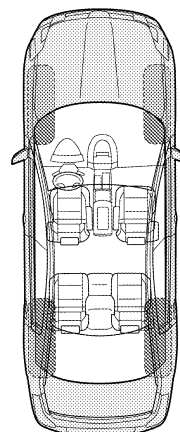
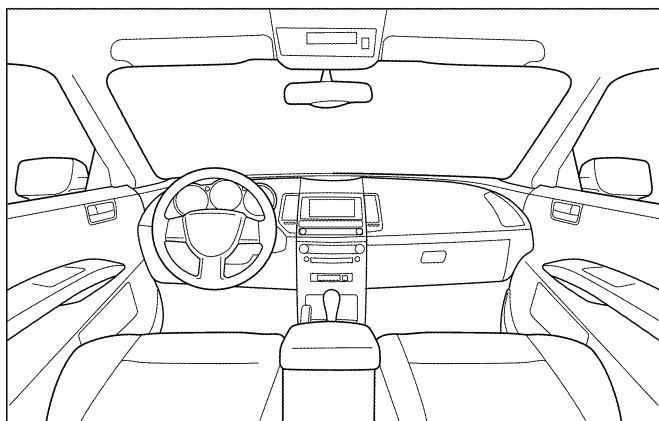
Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

### SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

#### I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.



Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

---

---

### II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- |   |  |
|---|--|
| <input type="checkbox"/> Anytime                      | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning      | <input type="checkbox"/> When it is raining or wet     |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions       |
| <input type="checkbox"/> Only when it is hot outside  | <input type="checkbox"/> Other:                        |

### III. WHEN DRIVING:

- ☐ Through driveways
- ☐ Over rough roads
- ☐ Over speed bumps
- ☐ Only about \_\_\_\_ mph
- ☐ On acceleration
- ☐ Coming to a stop
- ☐ On turns: left, right or either (circle)
- ☐ With passengers or cargo
- ☐ Other: \_\_\_\_\_
- ☐ After driving \_\_\_\_ miles or \_\_\_\_ minutes

### IV. WHAT TYPE OF NOISE

- ☐ Squeak (like tennis shoes on a clean floor)
- ☐ Creak (like walking on an old wooden floor)
- ☐ Rattle (like shaking a baby rattle)
- ☐ Knock (like a knock at the door)
- ☐ Tick (like a clock second hand)
- ☐ Thump (heavy muffled knock noise)
- ☐ Buzz (like a bumble bee)

### TO BE COMPLETED BY DEALERSHIP PERSONNEL

#### Test Drive Notes:

---

---

---

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: \_\_\_\_\_ Customer Name \_\_\_\_\_  
W.O.# \_\_\_\_\_ Date: \_\_\_\_\_

This form must be attached to Work Order

LAIA0071E

## PRECAUTIONS

< PRECAUTION >

### PRECAUTION

#### PRECAUTIONS

##### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006389925

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

##### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

##### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

##### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

##### Precautions Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000006928526

##### **NOTE:**

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

##### OPERATION PROCEDURE

1. Connect both battery cables.

##### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.

# PRECAUTIONS

## < PRECAUTION >

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT.

## Precaution for Work

INFOID:000000006928525

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
- Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area.  
Then rub with a soft and dry cloth.
- Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area.  
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# PREPARATION

< PREPARATION >

## PREPARATION

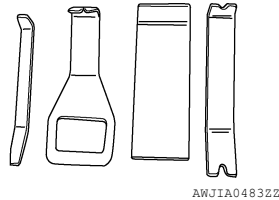
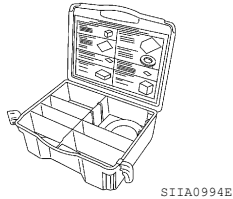
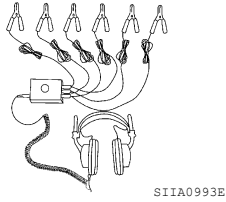
### PREPARATION

#### Special Service Tools

INFOID:000000006928527

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.



Tool number (Kent-Moore No.) Tool name	Description
(J-39570) Chassis ear	Locating the noise
(J-43980) NISSAN Squeak and Rattle Kit	Repairing the cause of noise
— (J-46534) Trim Tool Set	Removing trim components



#### Commercial Service Tools

INFOID:000000006928528

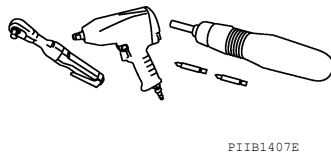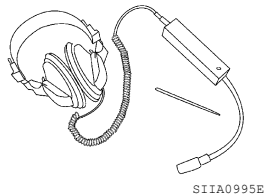Tool name	Description
Engine ear	Locating the noise
Power tool	Loosening bolts, nuts and screws





# SUNROOF UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### SUNROOF UNIT ASSEMBLY

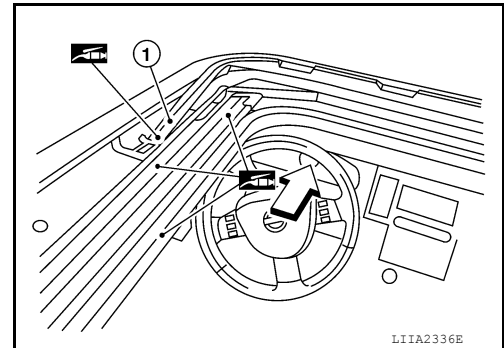
#### Inspection

INFOID:000000006389930

#### WIND DEFLECTOR


1. Open glass lid assembly fully.
2. Visually check for proper installation, damaged/deteriorated components, or foreign objects within mechanism. Correct as required for smooth operation.
3. Check for grease at the wind deflector arm (1) and pivot areas. If necessary, apply a sufficient amount of grease for non-binding operation.

↶ :Vehicle front



4. Check that the wind deflector (1) moves freely within the sunroof unit assembly while manually pressing down and releasing. If a malfunction is detected, remove the sunroof unit assembly and visually inspect; refer to [RF-77, "Removal and Installation"](#). If damage is found, replace either wind deflector (1) or sunroof unit assembly as required.

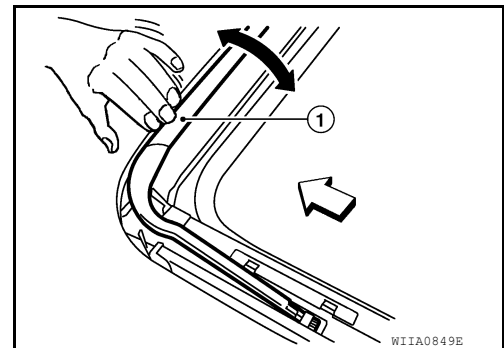↶ :Vehicle front



**Vertical wind deflector  
height above roof :  $12.2 \pm 2.6$  mm  
( $0.48 \pm 0.10$  in)**

#### LINK AND WIRE ASSEMBLY

##### NOTE:

Before replacing a suspect part, make sure it is the source of noise being experienced.

1. Check link to determine if coating film has peeled off excessively enough that substrate is visible. Check also to determine if link is the source of noise. Replace as necessary.
2. Visually check to determine if a sufficient amount of grease has been applied to wire or rail groove. If not, add grease as required.
3. Check wire for any damage or deterioration. If any damage is found, replace sunroof unit assembly.

#### SUNROOF LID SEAL

1. Visually check sunroof lid seal for damage, deterioration, or deformation.
  - Open glass lid assembly partially to inspect front edge of sunroof lid seal.
  - Tilt up glass lid assembly fully to inspect sides and rear edge of sunroof lid seal.If any area of the sunroof lid seal is found to be damaged, replace the sunroof lid seal assembly. Refer to [RF-77, "Removal and Installation"](#).
2. Check for leakage around sunroof lid assembly.
  - Close sunroof lid assembly.
  - Pour water around surface to determine area of concern.
  - For gaps or misalignment, adjust sunroof lid assembly to specifications. Refer to [RF-73, "Inspection"](#).
  - For damaged sealing surfaces, either replace sunroof lid seal [RF-77, "Removal and Installation"](#), or repair the body panel surface, refer to [INT-50, "Removal and Installation"](#) for coupe models or [INT-27, "Removal and Installation"](#) for sedan models.


#### DRAIN HOSES

# SUNROOF UNIT ASSEMBLY

## < REMOVAL AND INSTALLATION >

### Sedan Models

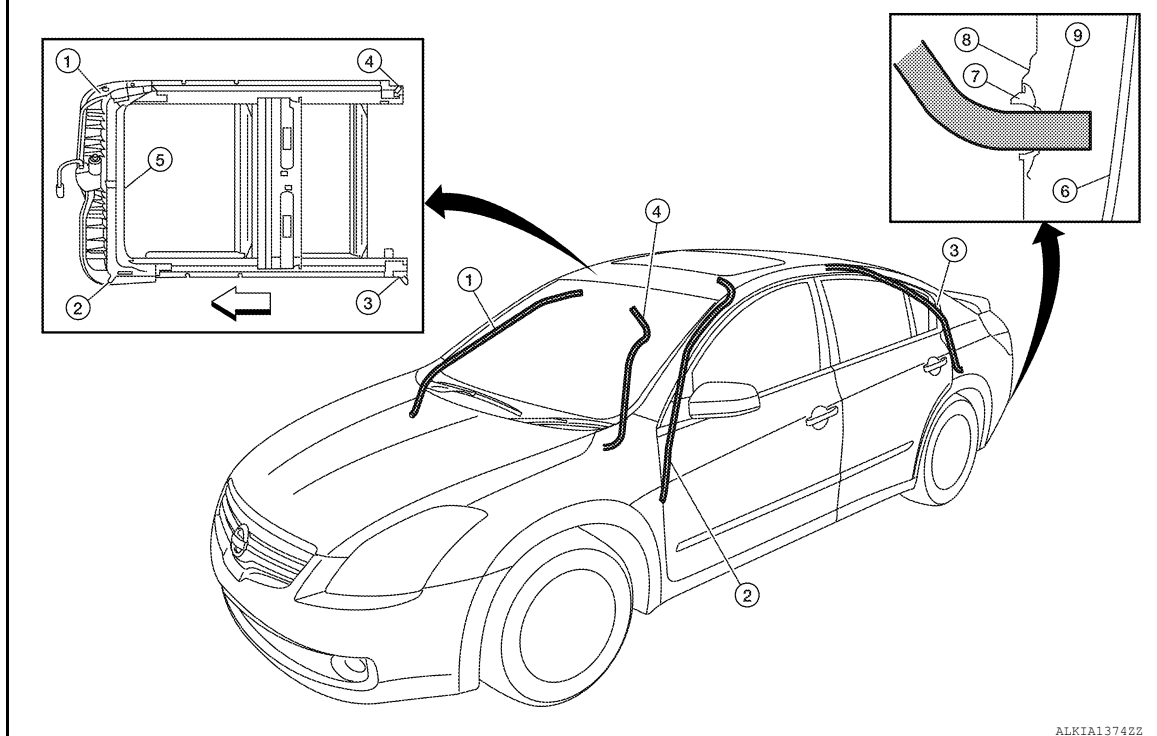SEC. 736




- |                        |                          |                       |
|------------------------|--------------------------|-----------------------|
| 1. Drain hose front RH | 2. Drain hose front LH   | 3. Drain hose rear LH |
| 4. Drain hose rear RH  | 5. Sunroof unit assembly | 6. Fascia             |
| 7. Seal                | 8. Fender                | 9. Drain hose         |

← Vehicle front

### Coupe Models

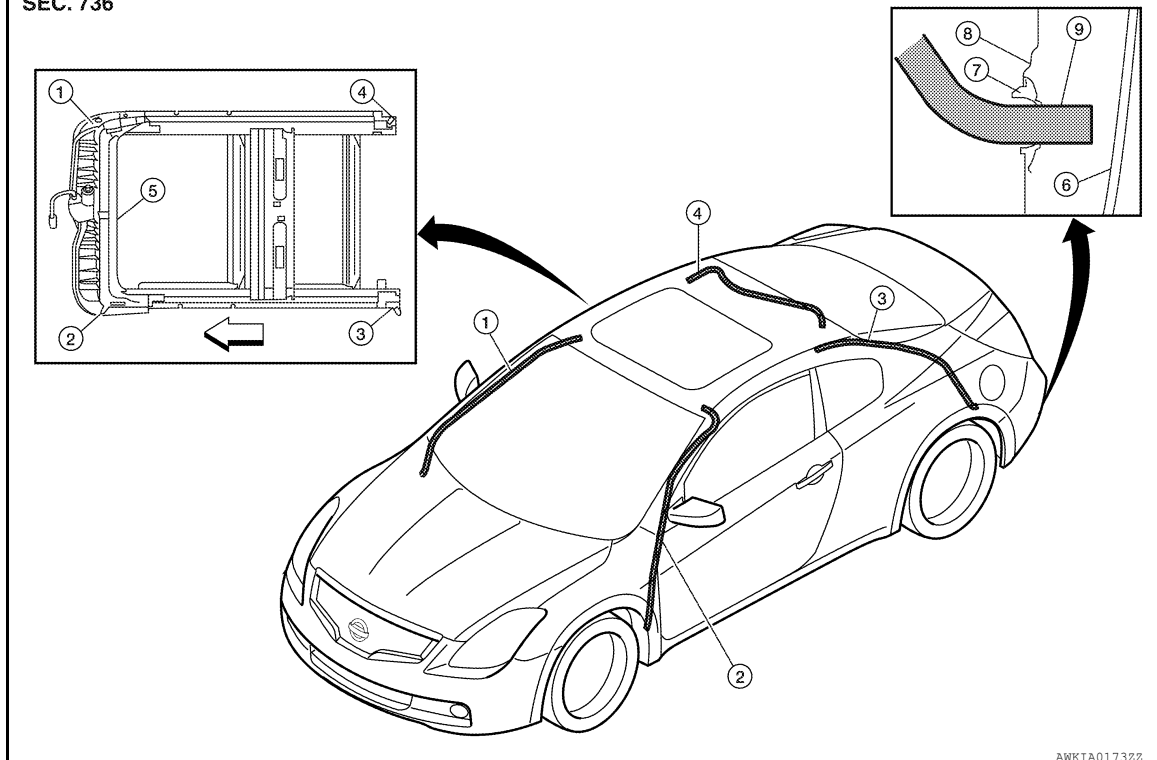SEC. 736



# SUNROOF UNIT ASSEMBLY

## < REMOVAL AND INSTALLATION >

- |                        |                          |                       |
|------------------------|--------------------------|-----------------------|
| 1. Drain hose front RH | 2. Drain hose front LH   | 3. Drain hose rear LH |
| 4. Drain hose rear RH  | 5. Sunroof unit assembly | 6. Fascia             |
| 7. Seal                | 8. Fender                | 9. Drain hose         |
- ↶ Vehicle front

- Remove the headlining. Refer to [INT-27. "Removal and Installation"](#) for sedan models, and [INT-50. "Removal and Installation"](#) for coupe models.
- Visually check drain hoses for:
  - Proper connection at sunroof unit assembly drain hose connector(s).
  - Damage, pinch, cracks, deterioration.
  - Proper fastening and routing on body panels.
- Pour water through drain hoses to determine watertight performance.  
If damaged or leaking portions in any drain hose is found, replace entire drain hose as necessary.

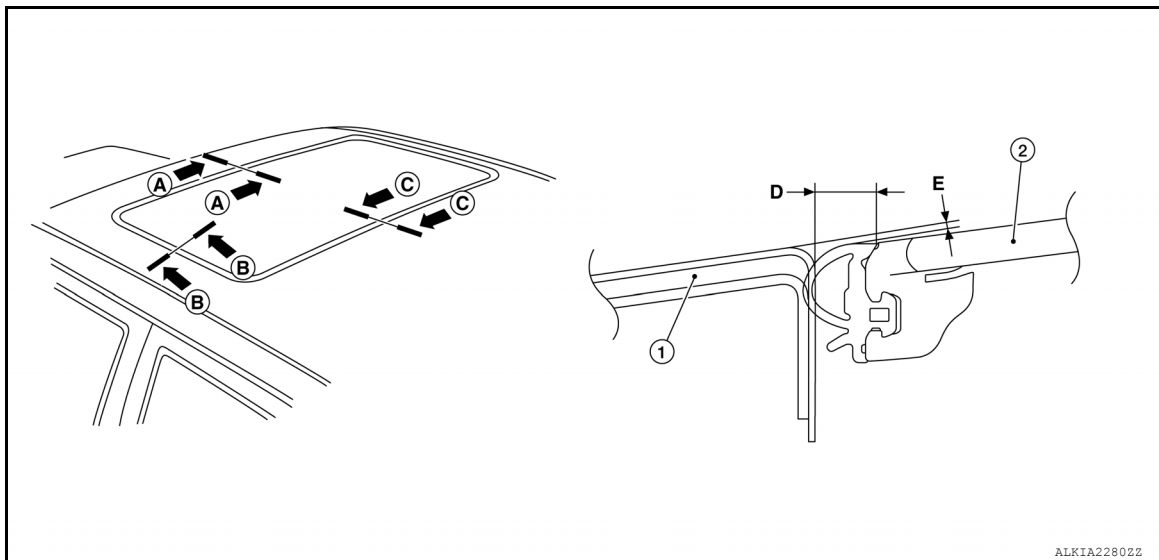
## ADJUSTMENT

### CAUTION:

- Always work with a helper.
- Handle glass lid assembly with care to prevent damage.

### NOTE:

- For easier and more accurate installation, always mark each point before removal.
- After any adjustment, check sunroof operation and glass lid assembly alignment.



1. Roof panel

2. Glass lid assembly

Unit: mm (in)


Portion	Gap (D)	Surface height difference (E)
(A – A)	5.8 (0.23)	$-0.8 \pm 1.5$ ( $-0.03 \pm 0.06$ )
(B – B)	5.8 (0.23)	$-0.8 \pm 1.5$ ( $-0.03 \pm 0.06$ )
(C – C)	5.8 (0.23)	$-0.8 \pm 1.5$ ( $-0.03 \pm 0.06$ )

Gap adjustment (A-A, C-C)

# SUNROOF UNIT ASSEMBLY
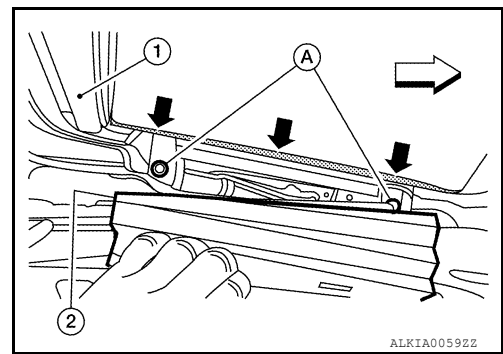
## < REMOVAL AND INSTALLATION >

1. Open sunshade assembly (1).  
↳ Vehicle front
2. Tilt sunroof lid assembly up, then release side trim covers (2) and set aside.
3. Loosen sunroof lid assembly bolts (A) (two each on left and right sides), then tilt sunroof lid assembly down.
4. Manually adjust sunroof lid assembly from outside of vehicle so gaps A-A and C-C are within specifications.
  - Carefully slide glass lid forward and rearward in vehicle. Difference between front and rear gaps must be within 1 mm (0.04 in) or less.



### NOTE:

Temporarily snug sunroof lid assembly bolts to prevent movement between each adjustment.

5. Tilt sunroof lid assembly up and down several times using sunroof switch to check that it operates smoothly.
6. Tilt sunroof lid assembly up and tighten bolts to specification.

### NOTE:

First tighten left front bolt, then right rear bolt on sunroof lid assembly to prevent uneven torque while tightening remaining bolts.

7. Attach side trim cover, then tilt sunroof lid assembly down.

### Gap Adjustment (B-B)

1. Remove the headlining. Refer to [INT-27, "Removal and Installation"](#) (sedan models) or [INT-50, "Removal and Installation"](#) (coupe models)
2. Loosen sunroof unit assembly and sunroof side bracket bolts.
3. Carefully slide sunroof unit assembly side to side or add shims until gap is within specifications.

### NOTE:

Temporarily snug sunroof unit assembly bolts to prevent movement between each adjustment.

4. Tilt sunroof lid assembly up and down several times using sunroof switch to check that it operates smoothly.
5. Tighten sunroof unit assembly and sunroof side bracket bolts.

### NOTE:

First tighten left front sunroof unit assembly bolt, then right rear to prevent uneven torque while tightening remaining bolts.

6. Install the headlining. Refer to [INT-27, "Removal and Installation"](#) (sedan models) or [INT-50, "Removal and Installation"](#) (coupe models)

### Height Adjustment

1. Tilt sunroof lid assembly up and down several times using sunroof switch to check that it operates smoothly.
2. Check height difference between roof surface and sunroof lid assembly surface, then compare to specifications.
3. If necessary, adjust height difference by using the following procedure.
  - Loosen sunroof lid assembly bolts.
  - Manually raise/lower sunroof lid assembly until height difference is within specification.

### NOTE:

If necessary, shims may be added between sunroof unit assembly and roof to increase adjustment range.

Temporarily snug sunroof unit assembly bolts to prevent movement between each adjustment.

- Tilt sunroof lid assembly up and down several times using sunroof switch to check that it operates smoothly.
- Tighten sunroof lid assembly and sunroof side bracket bolts.

### NOTE:

First tighten left front bolt, then right rear bolt on sunroof lid assembly to prevent uneven torque while tightening remaining bolts.

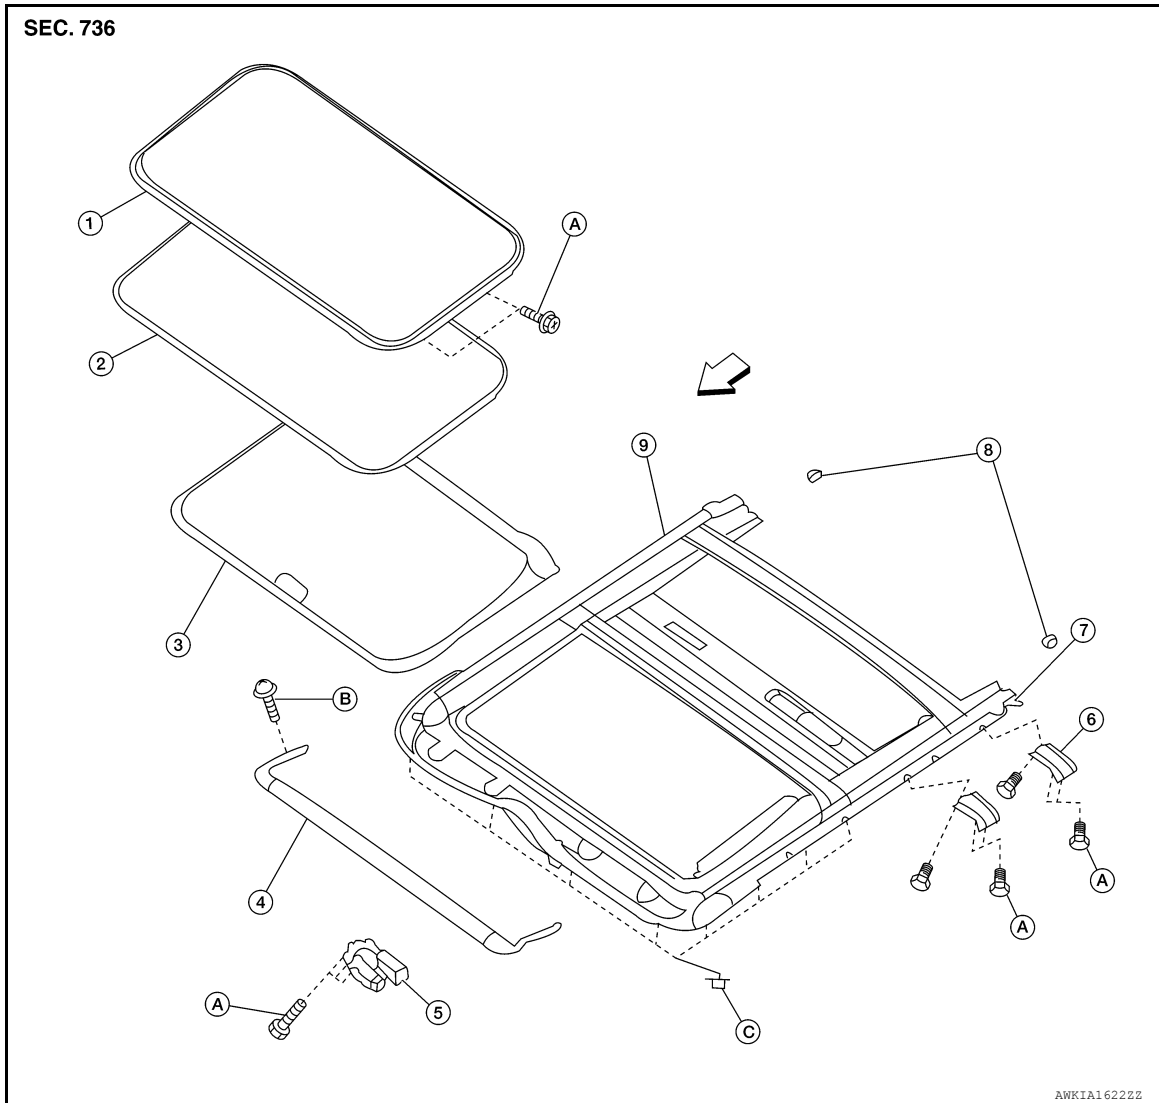
- After any adjustment, check sunroof operation and sunroof lid assembly alignment.

# SUNROOF UNIT ASSEMBLY

< REMOVAL AND INSTALLATION >

Exploded View

INFOID:000000006389931



- |                         |                           |                          |
|-------------------------|---------------------------|--------------------------|
| 1. Sunroof lid assembly | 2. Sunroof lid seal       | 3. Sunshade              |
| 4. Wind deflector       | 5. Sunroof motor assembly | 6. Sunroof side bracket  |
| 7. Drain hose connector | 8. Sunshade stopper       | 9. Sunroof unit assembly |
| A. Bolt                 | B. Screw                  | C. Nut                   |

⇐ Vehicle front

## Removal and Installation

INFOID:000000006389932

### CAUTION:

- After installing either sunroof unit assembly or glass lid assembly, check gap/height adjustments and operation to make sure there is no malfunction.
- Always work with a helper.
- Handle sunroof unit assembly with care to prevent damage.
- When taking sunroof unit assembly out, use shop cloths to protect the seats and trim from damage.

## SUNROOF UNIT ASSEMBLY

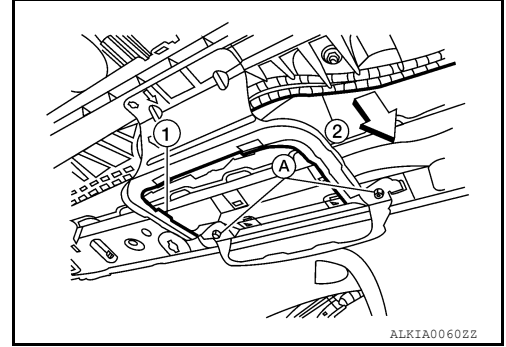
### Removal

1. Close sunroof lid assembly.
2. Remove headlining. Refer to [INT-27. "Removal and Installation"](#) for sedan models or [INT-50. "Removal and Installation"](#) for coupe models.


# SUNROOF UNIT ASSEMBLY

## < REMOVAL AND INSTALLATION >

3. Disconnect drain hoses.
4. Remove screws (A), then pull sunroof switch bracket (1) away from sunroof unit assembly (2).  
↳ Vehicle front
5. Disconnect sunroof motor assembly harness connector.



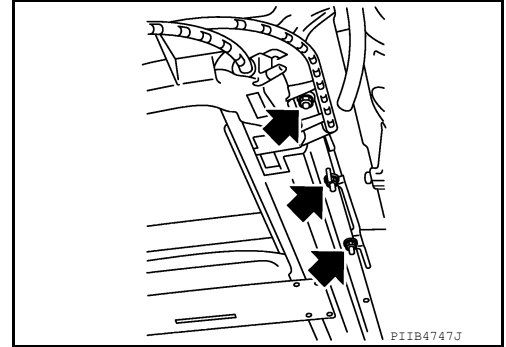6. Remove bolts on the front end and side rails of the sunroof unit assembly.
7. Remove front sunroof side bracket bolts.
8. Remove rear sunroof side bracket bolts and remove sunroof unit assembly from roof panel.
9. Remove sunroof unit assembly through the passenger compartment while being careful not to damage the seats and trim.




### Installation

1. Loosely tighten the rear sunroof side bracket bolts to the sunroof unit assembly side rails.
2. Bring sunroof unit assembly into passenger compartment and loosely tighten rear sunroof side bracket bolts to roof panel while supporting front.
3. Align the sunroof unit assembly front end rail and side rails with the locator pins, then loosely tighten the bolts.
4. Install remaining sunroof side brackets and loosely tighten bolts.
5. Tighten the sunroof unit assembly front end and side rail bolts diagonally.
6. Tighten the front sunroof side bracket bolts at the vehicle side first, then at the side rail end.
7. Tighten the rear sunroof side bracket bolts at the vehicle side first, then at the side rail end.
8. Connect sunroof motor assembly harness connector.
9. Install sunroof switch bracket.
10. Connect drain hoses.
11. Install headlining. Refer to [INT-27, "Removal and Installation"](#) for sedan models or [INT-50, "Removal and Installation"](#) for coupe models.

## SUNROOF LID ASSEMBLY

### Removal

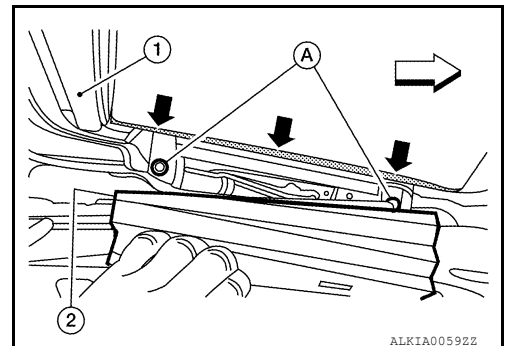1. Open sunshade (1), then close sunroof lid assembly.  
↳ : Vehicle front
2. Slide the side trim covers (2) RH/LH inward, then release them from the sunroof lid assembly inside edge and set aside.
3. Remove sunroof lid assembly bolts (A) on the left and right sides.
4. Remove sunroof lid assembly from sunroof unit assembly.



### Installation

1. Position sunroof lid assembly to sunroof unit assembly.

# SUNROOF UNIT ASSEMBLY

## < REMOVAL AND INSTALLATION >

2. Tighten sunroof lid assembly bolts to specification.  
**NOTE:**  
First tighten left front bolt, then right rear bolt on sunroof lid assembly to prevent uneven torque while tightening remaining bolts.
3. Slide side trim covers onto inside edge of sunroof lid assembly.
4. After installation, check sunroof operation and sunroof lid assembly alignment. Refer to [RF-73. "Inspection"](#).

## SUNROOF LID SEAL

### Removal

1. Remove sunroof lid assembly. Refer to SUNROOF LID ASSEMBLY REMOVAL AND INSTALLATION procedure in this section.
2. Inspect the rubber edge of sunroof lid assembly.  
**NOTE:**  
If the rubber edge is deformed or damaged, entire sunroof lid assembly must be replaced.
3. Remove sunroof lid seal from the rubber edge of sunroof lid assembly by pulling it outward.

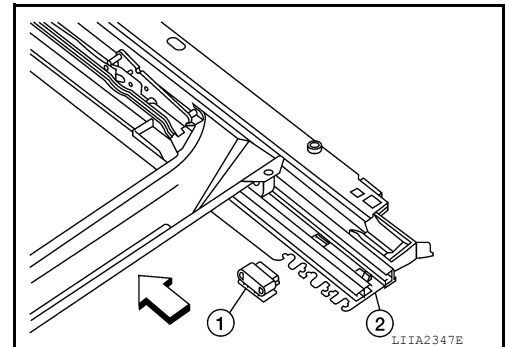
### Installation

1. Inspect and clean the ditch groove of the rubber edge for dirt or debris.
2. Stretch sunroof lid seal around sunroof lid assembly and push the sunroof seal tongue edge into the ditch groove of the rubber edge.  
**NOTE:**  
If needed, very light taps with a rubber hammer can be used to press the seal into place.
3. Install the sunroof lid assembly. Refer to SUNROOF LID ASSEMBLY REMOVAL AND INSTALLATION procedure in this section.

## SUNSHADE

### Removal

1. Remove headlining. Refer to [INT-27. "Removal and Installation"](#) for sedan models or [INT-50. "Removal and Installation"](#) coupe models.
2. Remove the sunshade stoppers (1) RH/LH from the sunroof unit assembly side rails (2).  
⇐ Vehicle front
3. Slide sunshade rearward past sunroof unit assembly side rail ends to remove.



### Installation

Installation is in the reverse order of removal.

## SUNROOF MOTOR ASSEMBLY

### Removal

1. Close sunroof lid assembly.



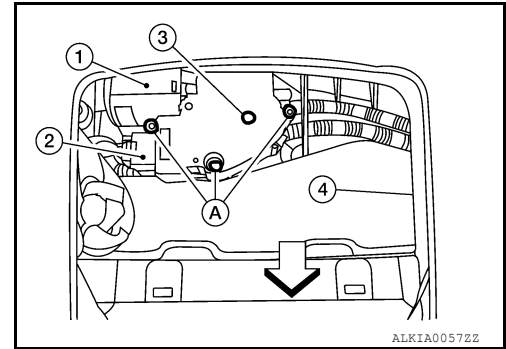
# SUNROOF UNIT ASSEMBLY

## < REMOVAL AND INSTALLATION >

2. Remove the front room/map lamp assembly from headliner (4). Refer to [INL-108, "Removal and Installation"](#) (sedan models), or [INL-108, "Removal and Installation"](#) (coupe models).
  - Drive key (3)
- ↳ Vehicle front
3. Remove sunroof motor assembly screws (A).
4. Disconnect harness connector (2) and remove sunroof motor assembly (1) from sunroof unit assembly front end rail.

### CAUTION:

**Never run the removed sunroof motor as a single unit.**



### Installation

Installation is in the reverse order of removal.

### CAUTION:

**Before installing the motor, be sure to place the link and wire assembly in the symmetrical and fully closed position.**

- During motor installation, move sunroof motor laterally little by little so that the gear is completely engaged into the wire on the sunroof unit assembly, and the mounting surfaces become parallel. Install the sunroof motor screws, then tighten.

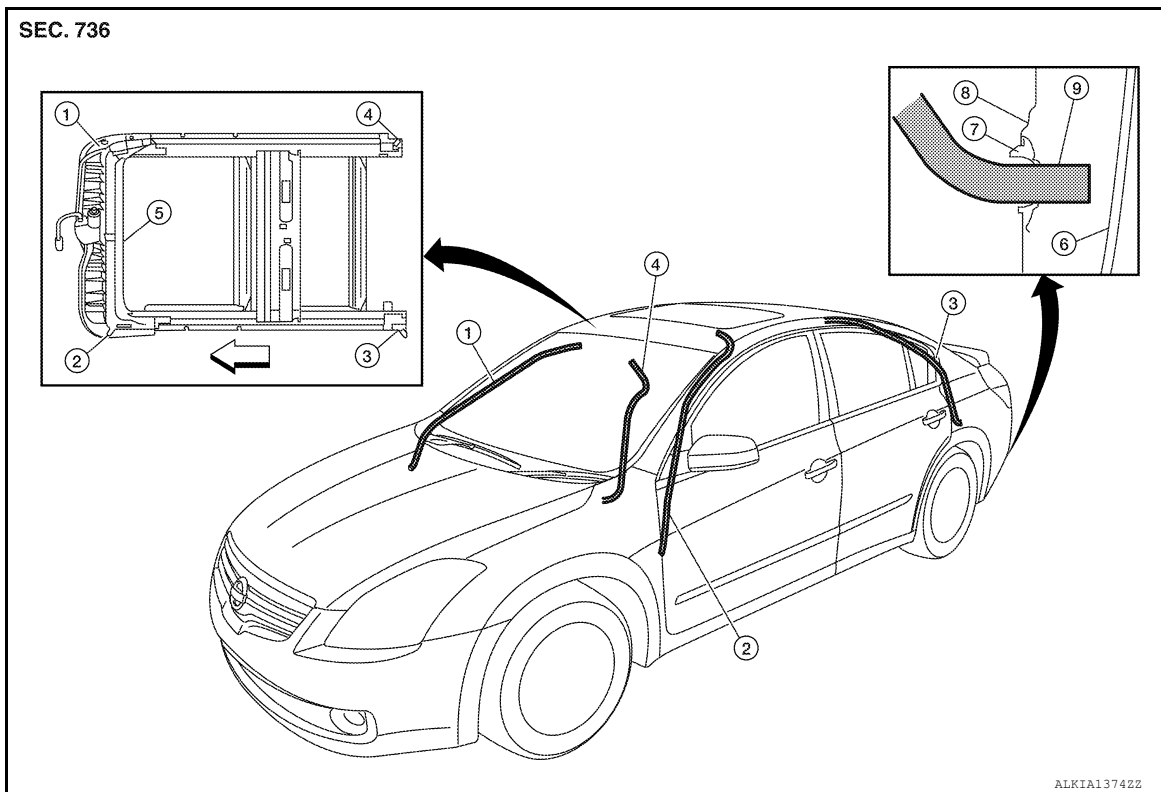
### NOTE:

If necessary, insert a suitable tool into the drive key (3) and rotate right or left slightly to assist in complete sunroof motor gear alignment.

- Synchronize sunroof motor with sunroof unit assembly. Refer to [RF-6, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

## DRAIN HOSES

### Sedan Models



- |                        |                          |                       |
|------------------------|--------------------------|-----------------------|
| 1. Drain hose front RH | 2. Drain hose front LH   | 3. Drain hose rear LH |
| 4. Drain hose rear RH  | 5. Sunroof unit assembly | 6. Fascia             |
| 7. Seal                | 8. Fender                | 9. Drain hose         |


↳ Vehicle front



# SUNROOF UNIT ASSEMBLY
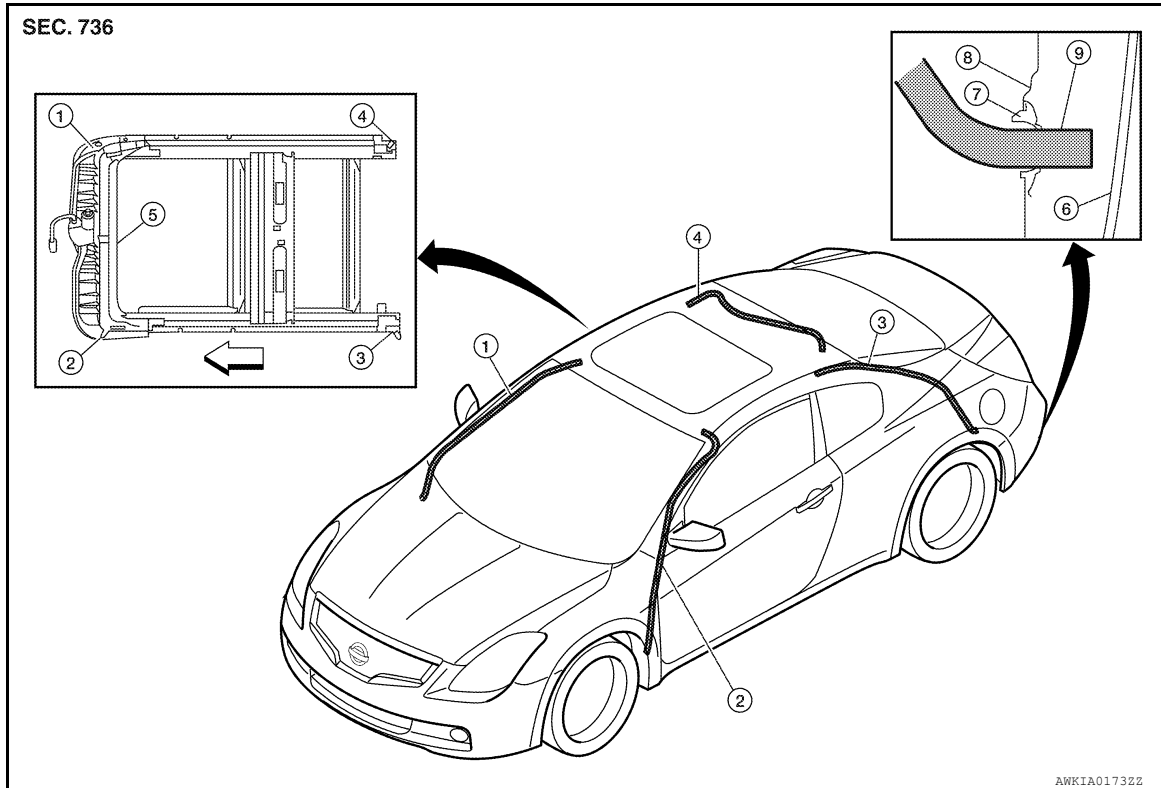
## < REMOVAL AND INSTALLATION >

### Coupe Models



- |                        |                          |                       |
|------------------------|--------------------------|-----------------------|
| 1. Drain hose front RH | 2. Drain hose front LH   | 3. Drain hose rear LH |
| 4. Drain hose rear RH  | 5. Sunroof unit assembly | 6. Fascia             |
| 7. Seal                | 8. Fender                | 9. Drain hose         |
- ⇐ Vehicle front

#### NOTE:

A wet carpet or water leaking from the sunroof/headliner may be related to the sunroof drain hoses.

#### Drain Hose Front LH

1. Remove headlining. Refer to [INT-27, "Removal and Installation"](#) for sedan models or [INT-50, "Removal and Installation"](#) coupe models.
2. Remove the instrument lower panel LH cover, necessary to access drain hose. Refer to [IP-19, "Removal and Installation"](#).
3. Remove the drain hose front LH.

#### Installation

Installation is in the reverse order of removal.

#### Drain Hose Front RH

1. Remove headlining. Refer to [INT-27, "Removal and Installation"](#) for sedan models or [INT-50, "Removal and Installation"](#) coupe models.
2. Remove the glove box assembly, necessary to access drain hose. Refer to [IP-20, "Removal and Installation"](#).
3. Remove the drain hose front RH.

#### Installation

Installation is in the reverse order of removal.

#### Drain Hose Rear LH

1. Remove headlining. Refer to [INT-27, "Removal and Installation"](#) for sedan models or [INT-50, "Removal and Installation"](#) coupe models.

## SUNROOF UNIT ASSEMBLY

### < REMOVAL AND INSTALLATION >

2. Remove the trunk rear finisher. Refer to [INT-50, "Removal and Installation"](#) (Coupe), or [INT-27, "Removal and Installation"](#) (Sedan).
3. Remove the LH trunk side finisher, necessary to access drain hose. Refer to [INT-50, "Removal and Installation"](#) (Coupe), or [INT-27, "Removal and Installation"](#) (Sedan).
4. Remove the drain hose rear LH.

#### Installation

Installation is in the reverse order of removal.

#### Drain Hose Rear RH

1. Remove headlining. Refer to [INT-27, "Removal and Installation"](#) for sedan models or [INT-50, "Removal and Installation"](#) coupe models.
2. Remove the trunk rear finisher. Refer to [INT-50, "Removal and Installation"](#) (Coupe), or [INT-27, "Removal and Installation"](#) (Sedan).
3. Remove the RH trunk side finisher, necessary to access drain hose. Refer to [INT-50, "Removal and Installation"](#) (Coupe), or [INT-27, "Removal and Installation"](#) (Sedan).
4. Remove the drain hose rear RH.

#### Installation

Installation is in the reverse order of removal.

### WIND DEFLECTOR

#### Removal

1. Open the sunroof lid assembly.
2. Remove the wind deflector.
  - a. Remove the wind deflector screws (one from each side).
  - b. Remove the wind deflector from the sunroof unit assembly.

#### Installation

Installation is in the reverse order of removal.