

SECTION EXL

EXTERIOR LIGHTING SYSTEM

CONTENTS

BASIC INSPECTION	4	System Description	17	
DIAGNOSIS AND REPAIR WORKFLOW	4	Component Parts Location	17	
Work Flow	4	Component Description	18	
SYSTEM DESCRIPTION	7	COMBINATION SWITCH READING SYSTEM	19	
HEADLAMP (XENON TYPE)	7	System Diagram	19	
System Diagram	7	System Description	19	
System Description	7	DIAGNOSIS SYSTEM (BCM)	23	
Component Parts Location	7	COMMON ITEM	23	
Component Description	8	COMMON ITEM : Diagnosis Description	23	
HEADLAMP (HALOGEN TYPE)	9	COMMON ITEM : CONSULT Function (BCM -		
System Diagram	9	COMMON ITEM)	23	
System Description	9	HEADLAMP	24	
Component Parts Location	9	HEADLAMP : CONSULT Function (BCM - HEAD		
Component Description	10	LAMP)	24	
AUTO LIGHT SYSTEM	11	FLASHER	25	
System Diagram - Sedan	11	FLASHER : CONSULT Function (BCM - FLASH-		
System Diagram - Coupe	11	ER)	25	EXL
System Description	11	COMB SW	26	
Component Parts Location	12	COMB SW : CONSULT Function (BCM - COMB		
Component Description	12	SW)	26	
FRONT FOG LAMP	13	BATTERY SAVER	26	
System Diagram	13	BATTERY SAVER : CONSULT Function (BCM -		
System Description	13	BATTERY SAVER)	26	
Component Parts Location	13	DIAGNOSIS SYSTEM (IPDM E/R)	28	
Component Description	14	Diagnosis Description	28	
TURN SIGNAL AND HAZARD WARNING		CONSULT Function (IPDM E/R)	31	
LAMPS	15	DTC/CIRCUIT DIAGNOSIS	34	
System Diagram	15	POWER SUPPLY AND GROUND CIRCUIT	34	
System Description	15	BCM (BODY CONTROL MODULE)	34	
Component Parts Location	15	BCM (BODY CONTROL MODULE) : Diagnosis		
Component Description	16	Procedure	34	
PARKING, LICENSE PLATE AND TAIL				
LAMPS	17			
System Diagram	17			

BCM (BODY CONTROL MODULE) : Special Repair Requirement	34	BCM (BODY CONTROL MODULE)	60
		Reference Value	60
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	35	Terminal Layout	64
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure	35	Physical Values	64
		Fail Safe	82
HEADLAMP (HI) CIRCUIT	36	DTC Inspection Priority Chart	84
Description	36	DTC Index	86
Component Function Check	36		
Diagnosis Procedure	36	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	89
		Reference Value	89
HEADLAMP (LO) CIRCUIT	38	Fail Safe	96
		DTC Index	97
HEADLAMP (HALOGEN)	38	WIRING DIAGRAM	99
HEADLAMP (HALOGEN) : Description	38	HEADLAMP (HALOGEN)	99
HEADLAMP (HALOGEN) : Component Function Check	38	Wiring Diagram - Coupe	99
HEADLAMP (HALOGEN) : Diagnosis Procedure	38	Wiring Diagram - Sedan	104
HEADLAMP (XENON)	39	HEADLAMP (XENON)	109
HEADLAMP (XENON) : Description	39	Wiring Diagram - Coupe	109
HEADLAMP (XENON) : Component Function Check	39	Wiring Diagram - Sedan	114
HEADLAMP (XENON) : Diagnosis Procedure	40	AUTO LIGHT SYSTEM	119
XENON HEADLAMP	42	Wiring Diagram - Coupe	119
Description	42	Wiring Diagram - Sedan	125
Diagnosis Procedure	42	FRONT FOG LAMP	131
FRONT FOG LAMP CIRCUIT	43	Wiring Diagram - Coupe	131
Description	43	Wiring Diagram - Sedan	136
Component Function Check	43	TURN SIGNAL AND HAZARD WARNING LAMPS	141
Diagnosis Procedure	43	Wiring Diagram - Coupe	141
PARKING LAMP CIRCUIT	45	Wiring Diagram - Sedan	149
Description	45	PARKING, LICENSE PLATE AND TAIL LAMPS	157
Component Function Check	45	Wiring Diagram - Coupe	157
Diagnosis Procedure	45	Wiring Diagram - Sedan	165
TURN SIGNAL LAMP CIRCUIT	48	STOP LAMP	173
Description	48	Wiring Diagram - Coupe	173
Component Function Check	48	Wiring Diagram - Sedan	178
Diagnosis Procedure	48	BACK-UP LAMP	183
STOP LAMP	51	Wiring Diagram - Coupe	183
Diagnosis Procedure (With CVT)	51	Wiring Diagram - Sedan	189
Component Inspection (Stop Lamp Switch)	53	SYMPTOM DIAGNOSIS	195
Component Inspection (Stop Lamp Relay)	53	EXTERIOR LIGHTING SYSTEM SYMPTOMS	195
OPTICAL SENSOR	55	Symptom Table	195
Description	55	NORMAL OPERATING CONDITION	197
Component Function Check	55	Description	197
Diagnosis Procedure	55	BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM	198
HAZARD SWITCH	58	Description	198
Component Function Check	58	Diagnosis Procedure	198
Diagnosis Procedure	58		
ECU DIAGNOSIS INFORMATION	60		

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON	199	
Description	199	
Diagnosis Procedure	199	
PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON	200	
Description	200	
Diagnosis Procedure	200	
BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON	201	
Description	201	
Diagnosis Procedure	201	
PRECAUTION	202	
PRECAUTIONS	202	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	202	
Precaution Necessary for Steering Wheel Rotation after Battery Disconnect	202	
General precautions for service operations	203	
Precaution for Work	203	
PREPARATION	204	
PREPARATION	204	
Special Service Tool	204	
PERIODIC MAINTENANCE	205	
HEADLAMP	205	
Aiming Adjustment	205	
FRONT FOG LAMP	207	
Aiming Adjustment	207	
REMOVAL AND INSTALLATION	208	
FRONT COMBINATION LAMP	208	
Bulb Replacement	208	
Removal and Installation	208	A
Disassembly and Assembly	209	
FRONT FOG LAMP	212	
Bulb Replacement	212	B
Removal and Installation	212	
SIDE TURN SIGNAL LAMP	213	
Removal and Installation	213	C
STOP LAMP	214	
Bulb Replacement	214	D
Removal and Installation	214	
BACK-UP LAMP	215	
Bulb Replacement	215	E
LICENSE PLATE LAMP	216	
Bulb Replacement	216	F
Removal and Installation	216	
REAR COMBINATION LAMP	217	
Bulb Replacement	217	G
Removal and Installation	217	
LIGHTING AND TURN SIGNAL SWITCH	219	
Removal and Installation	219	H
HAZARD SWITCH	220	
Removal and Installation	220	I
OPTICAL SENSOR	221	
Removal and Installation	221	J
SERVICE DATA AND SPECIFICATIONS (SDS)	222	
SERVICE DATA AND SPECIFICATIONS (SDS)	222	K
Headlamp	222	
Exterior Lamp	222	EXL

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000007418403

OVERALL SEQUENCE

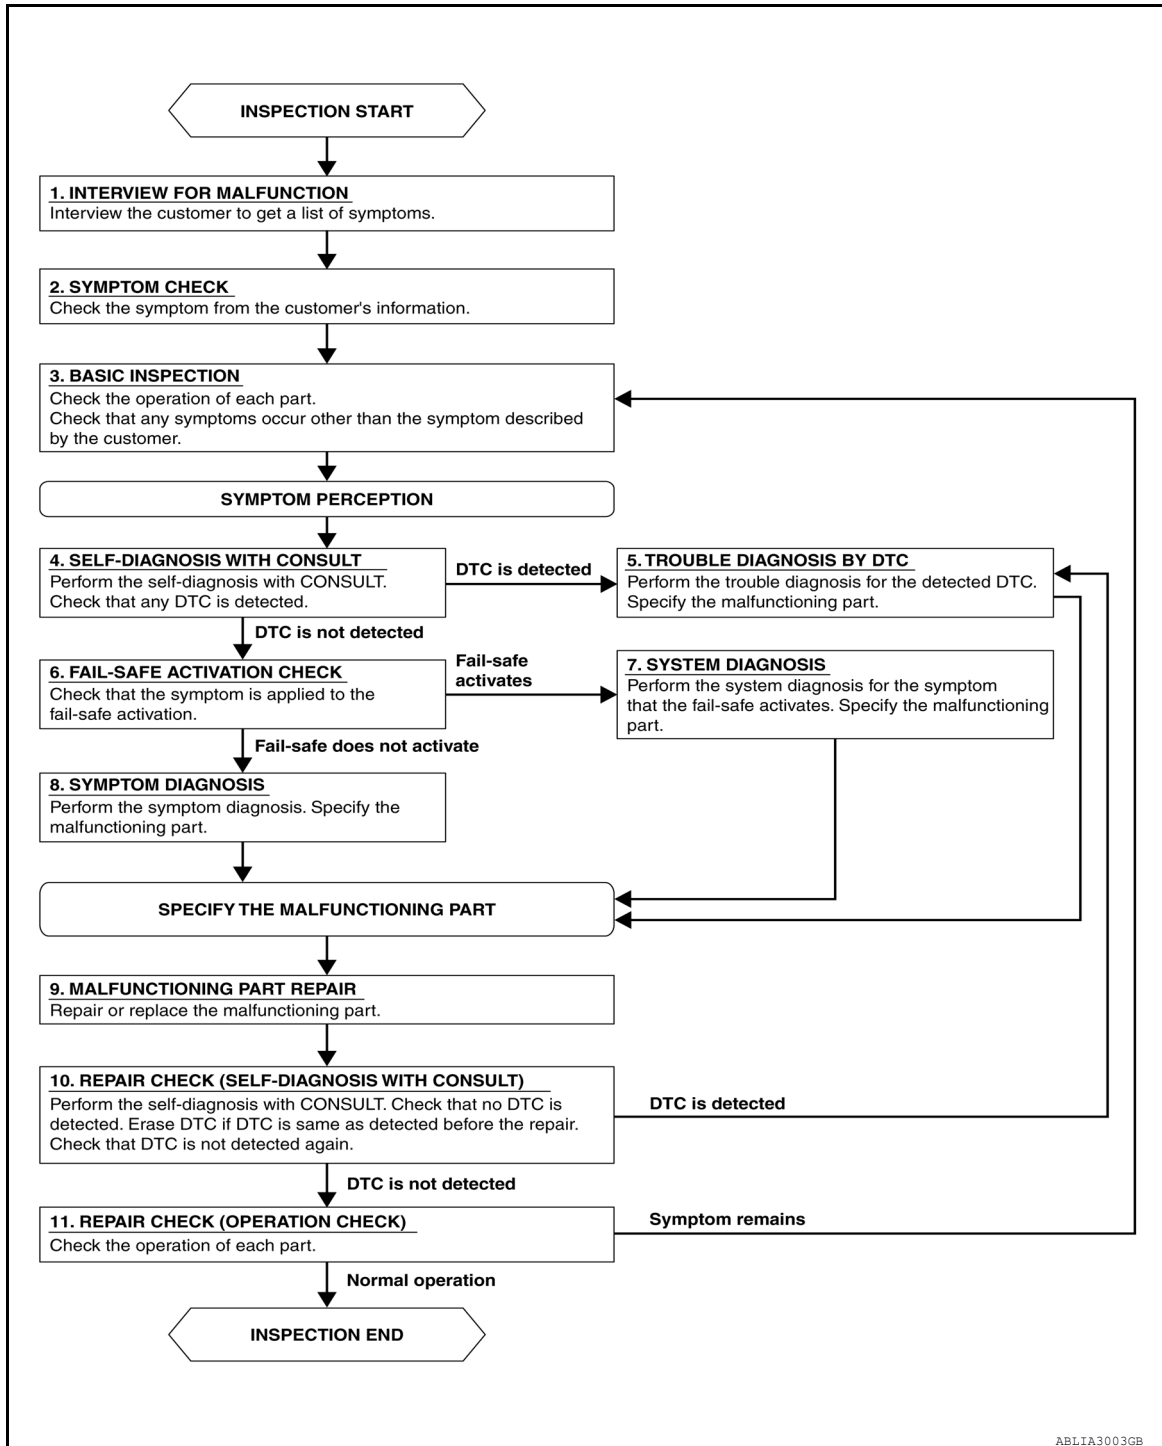

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Find out what the customer's concerns are.

>> GO TO 2

2. SYMPTOM CHECK

Verify the symptom from the customer's information.

>> GO TO 3

3. BASIC INSPECTION

Check the operation of each part. Check that any concerns occur other than those mentioned in the customer interview.

>> GO TO 4

4. SELF-DIAGNOSIS WITH CONSULT

Perform the self diagnosis with CONSULT. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5

NO >> GO TO 6

5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9

6. FAIL-SAFE ACTIVATION CHECK

Determine if the customer's concern is related to fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7

NO >> GO TO 8

7. SYSTEM DIAGNOSIS

Perform the system diagnosis for the system in which the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9

8. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9

9. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 10

10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

Perform the self diagnosis with CONSULT. Verify that no DTCs are detected. Erase all DTCs detected prior to the repair. Verify that DTC is not detected again.

Is any DTC detected?

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

YES >> GO TO 5
NO >> GO TO 11

11. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> Inspection End.
NO >> GO TO 3


HEADLAMP (XENON TYPE)

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

HEADLAMP (XENON TYPE)

System Diagram

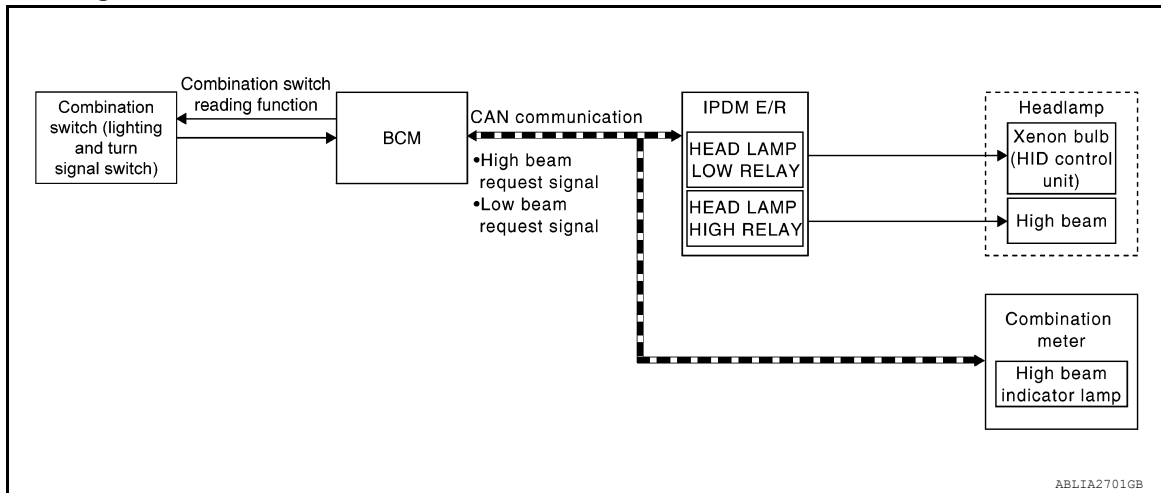


System Description

INFOID:000000007418405

Control of the headlamp system is dependent upon the position of the combination switch (lighting and turn signal switch). When the combination switch (lighting and turn signal switch) is placed in the 2nd position, the BCM (body control module) receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

Component Parts Location

INFOID:000000007418406

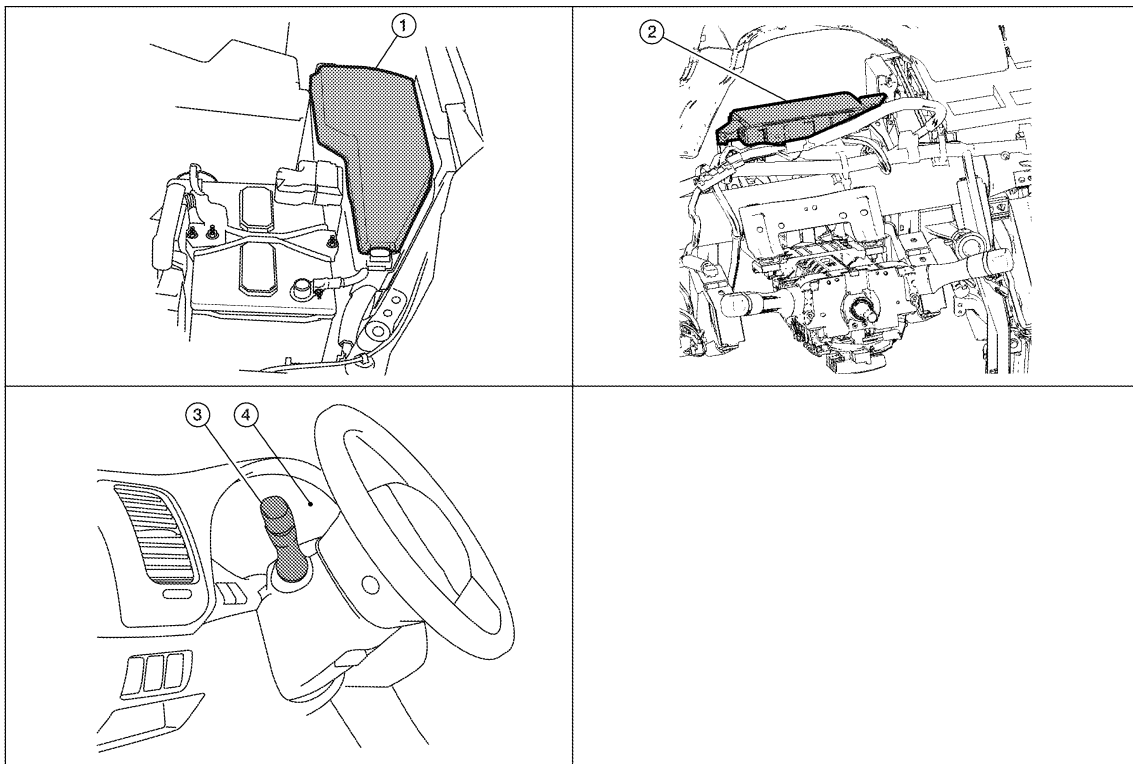

AMNIA05922Z

HEADLAMP (XENON TYPE)

< SYSTEM DESCRIPTION >

- | | | |
|----------------------------|--|---|
| 1. IPDM E/R E17, E18, E200 | 2. BCM M16, M17, M18, M19 (view with instrument panel removed) | 3. Combination switch (lighting and turn signal switch) M28 |
| 4. Combination meter M24 | | |

Component Description

INFOID:000000007418407

XENON HEADLAMP

A Xenon type headlamp is adapted to the low beam headlamps. Xenon bulbs do not use a filament. Instead, they produce light when a high voltage current is passed between two tungsten electrodes through a mixture of xenon (an inert gas) and certain other metal halides. In addition to added lighting power, electronic control of the power supply gives the headlamps stable quality and tone color.

Following are some of the many advantages of the xenon type headlamp.

- The light produced by the headlamps is a white color comparable to sunlight that is easy on the eyes.
- Light output is nearly double that of halogen headlamps, affording increased area of illumination.
- The light features a high relative spectral distribution at wavelengths to which the human eye is most sensitive. This means that even in the rain, more light is reflected back from the road surface toward the vehicle, for added visibility.
- Power consumption is approximately 25 percent less than halogen headlamps, reducing battery load.

HIGH BEAM OPERATION/FLASH-TO-PASS OPERATION

With the combination switch (lighting and turn signal switch) in the 2ND position and placed in HIGH position, the BCM receives input requesting the headlamp high beams to illuminate. The flash to pass feature can be used any time and also sends a signal to the BCM. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil which directs power to the high beam headlamps.

EXTERIOR LAMP BATTERY SAVER CONTROL

With the combination switch (lighting and turn signal switch) in the 2nd position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes unless the combination switch (lighting and turn signal switch) position is changed. If the combination switch (lighting and turn signal switch) position is changed, then the headlamps are turned off.


This setting can be changed by CONSULT. Refer to [BCS-20. "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#).

HEADLAMP (HALOGEN TYPE)

< SYSTEM DESCRIPTION >

HEADLAMP (HALOGEN TYPE)

System Diagram

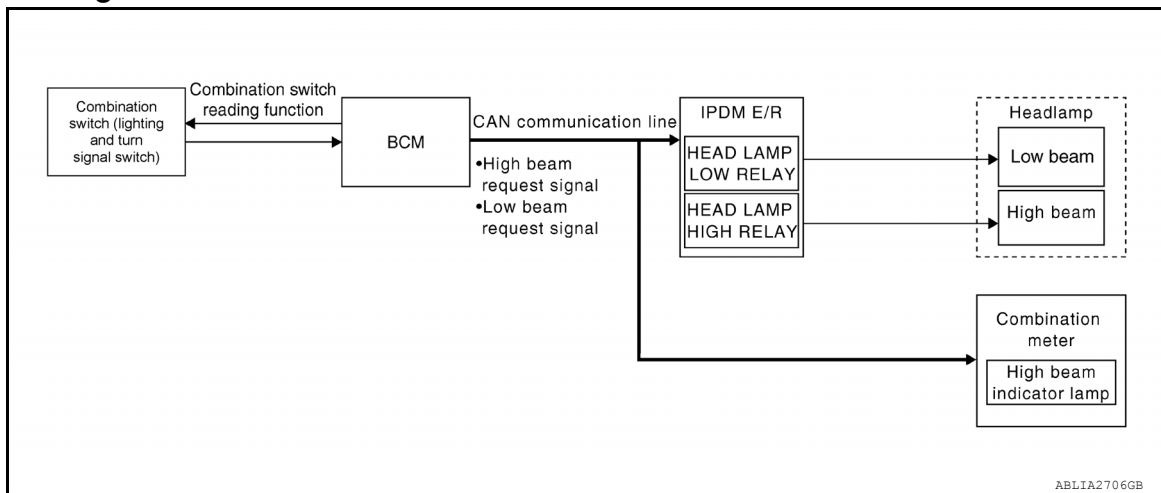


System Description

INFOID:000000007418409

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting and turn signal switch). When the combination switch (lighting and turn signal switch) is placed in the 2nd position, the BCM (body control module) receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

Component Parts Location

INFOID:000000007418410

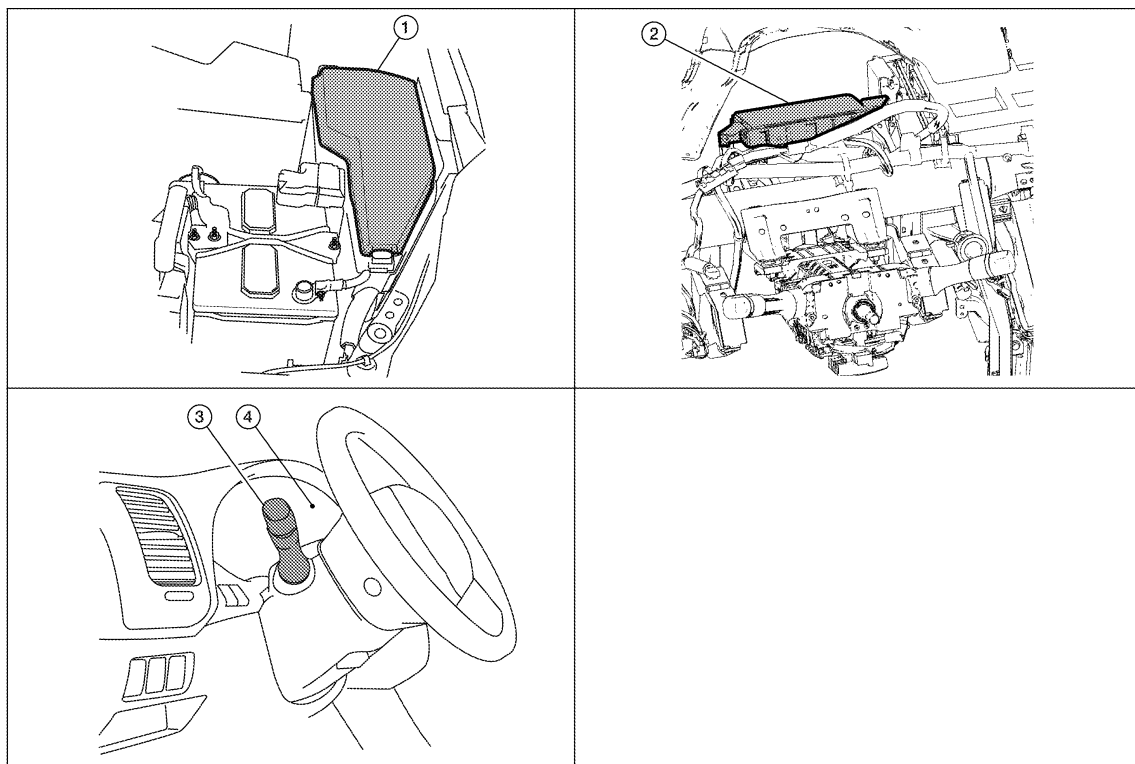

HEADLAMP (HALOGEN TYPE)

< SYSTEM DESCRIPTION >

- | | | |
|----------------------------|--|---|
| 1. IPDM E/R E17, E18, E200 | 2. BCM M16, M17, M18, M19 (view with instrument panel removed) | 3. Combination switch (lighting and turn signal switch) M28 |
| 4. Combination meter M24 | | |

Component Description

INFOID:000000007418411

LOW BEAM OPERATION

When the combination switch (lighting and turn signal switch) is in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil which supplies power to the low beam headlamps.

HIGH BEAM OPERATION/FLASH-TO-PASS OPERATION

With the combination switch (lighting and turn signal switch) in the 2ND position and placed in HIGH position, the BCM receives input requesting the headlamp high beams to illuminate. The flash to pass feature can be used any time and also sends a signal to the BCM. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status off the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil which supplies power to the high beam headlamps.

The combination meter receives a high beam request signal (ON) through the CAN communication lines and turns the high beam indicator lamp ON.

EXTERIOR LAMP BATTERY SAVER CONTROL

With the combination switch (lighting and turn signal switch) in the 2ND position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes unless the combination switch (lighting and turn signal switch) position is changed. If the combination switch (lighting and turn signal switch) position is changed, then the headlamps are turned off.

This setting can be changed by CONSULT. Refer to [BCS-20. "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)".](#)


AUTO LIGHT SYSTEM

< SYSTEM DESCRIPTION >

AUTO LIGHT SYSTEM


System Diagram - Sedan

INFOID:000000007418412

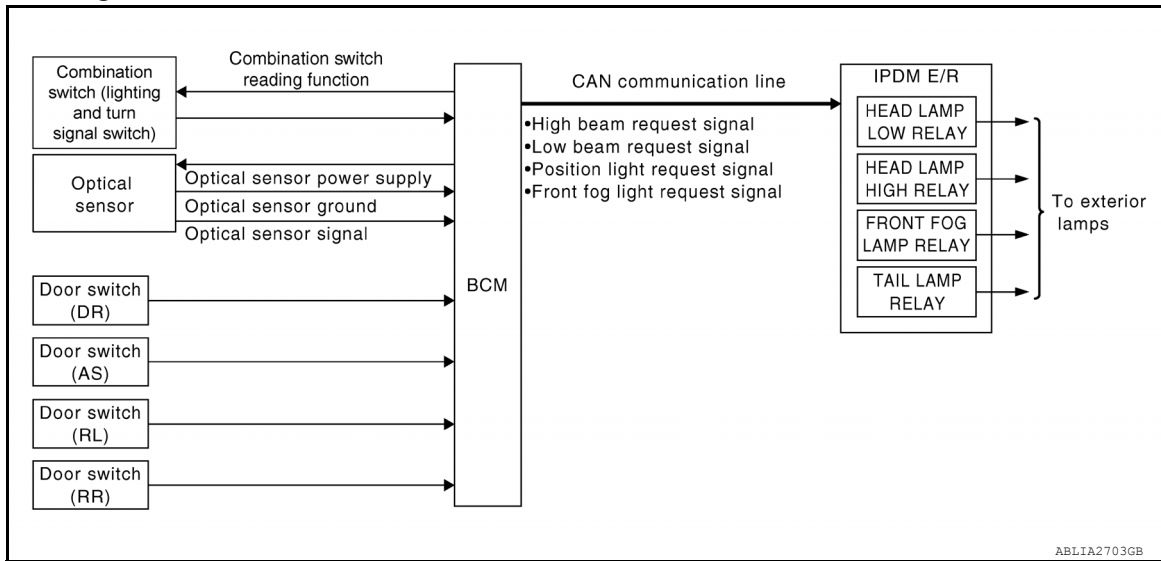

System Diagram - Coupe

INFOID:000000007418413

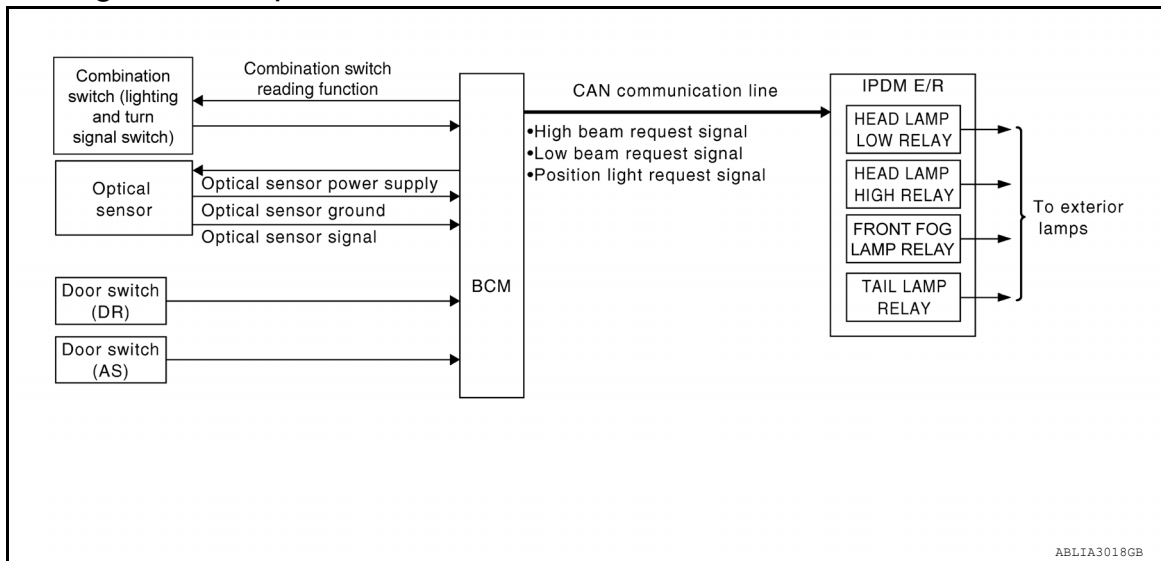

System Description

INFOID:000000007418414

- BCM (Body Control Module) controls auto light operation according to signals from optical sensor, combination switch (lighting and turn signal switch) and ignition switch.
- IPDM E/R (Intelligent Power Distribution Module Engine Room) operates parking, license plate, tail, front fog (if equipped) lamps and headlamps according to CAN communication signals from BCM.
- Optical sensor detects ambient brightness and converts light (lux) to voltage, then sends the optical sensor signal to BCM.

OUTLINE


The auto light control system has an optical sensor that detects outside brightness. When the combination switch (lighting and turn signal switch) is in AUTO position, it automatically turns ON/OFF the parking, license plate, tail, front fog lamps (if equipped) and headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, Refer to [BCS-20, "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#).

AUTO LIGHT SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000007418415

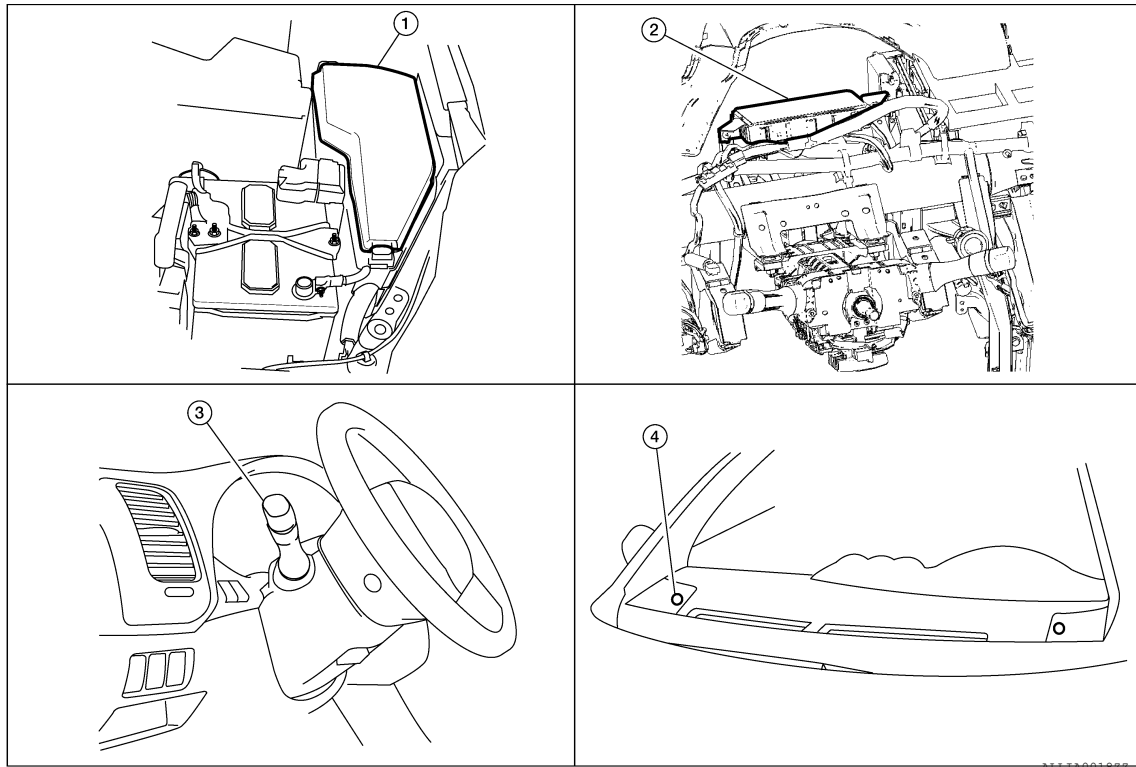

1. IPDM E/R E17, E18, E20
2. BCM M16, M17, M18, M19, M21 (view with instrument panel removed)
3. Combination switch (lighting and turn signal switch) M28
4. Optical sensor M66

Component Description

INFOID:000000007418416

AUTO LIGHT OPERATION

Applicable lamps

- Low beam headlamp
- Parking, license plate and tail lamps
- High beam headlamp (with the combination switch (lighting and turn signal switch) in HIGH BEAM position)
- Front fog lamp (with the combination switch (lighting and turn signal switch) in front fog lamp ON position) (if equipped)

When the combination switch (lighting and turn signal switch) is in AUTO position with the ignition switch in ON position, BCM detects the AUTO LIGHT (ON) by BCM combination switch (lighting and turn signal switch) reading function. BCM turns automatically ON/OFF the applicable lamps according to ambient brightness.

NOTE:

Timing for when lamps turn ON/OFF can be changed by the function setting of CONSULT. Refer to [BCS-20, "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#).


FRONT FOG LAMP

< SYSTEM DESCRIPTION >

FRONT FOG LAMP

System Diagram

INFOID:000000007418421

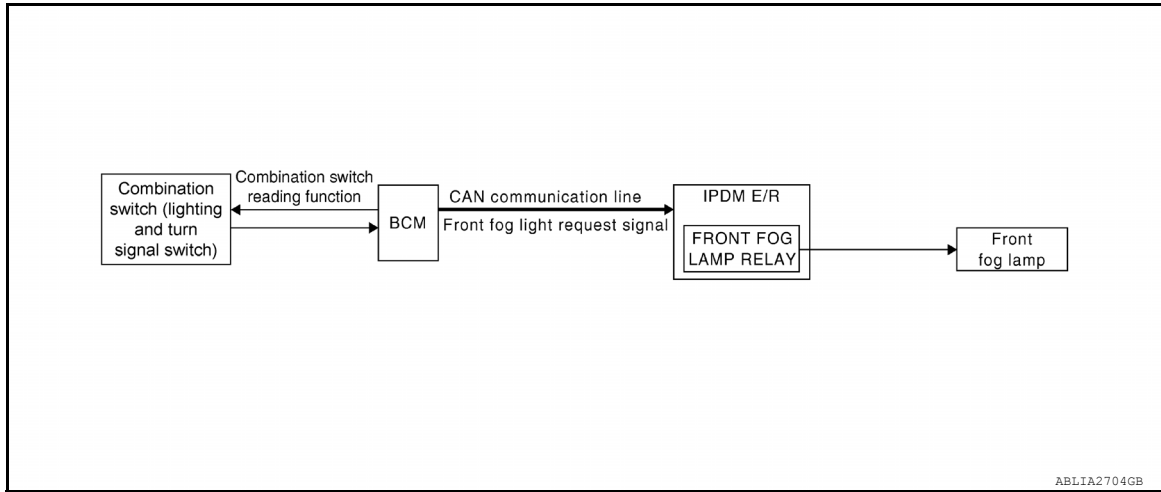


System Description

INFOID:000000007418422

- BCM (Body Control Module) controls front fog lamp operation.
- IPDM E/R (Intelligent Power Distribution Module Engine Room) operates front fog lamp according to CAN communication signals from BCM.
- Combination meter operates front fog lamp indicator according to inputs via the CAN communication lines.

Component Parts Location

INFOID:000000007418423

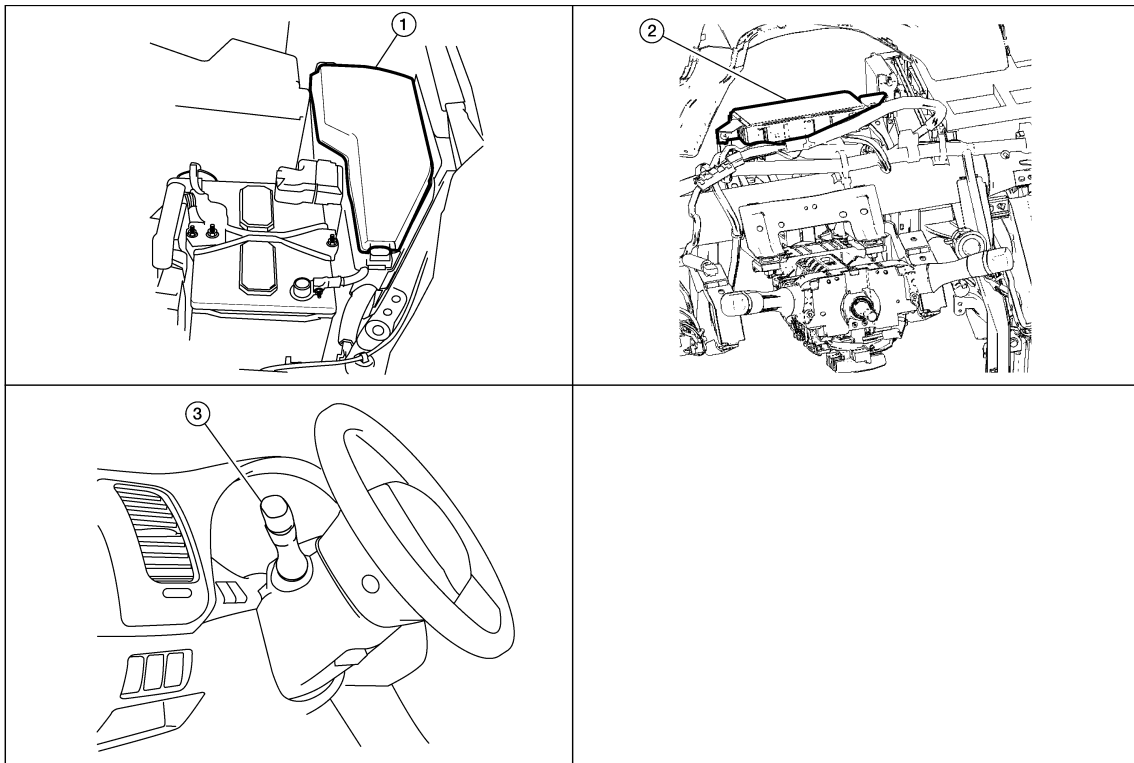

ALLIA00192Z

1. IPDM E/R E17, E18, E200

2. BCM M16, M17, M18, M19 (view with instrument panel removed)

3. Combination switch (lighting and turn signal switch) M28

FRONT FOG LAMP

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000007418424

FRONT FOG LAMP OPERATION

When the combination switch (lighting and turn signal switch) is in front fog lamp ON position and also in 1ST or 2ND position or AUTO position (headlamp is ON), the BCM detects FR FOG ON and the HEAD LAMP1, 2 ON or the AUTO LIGHT ON. The BCM sends a front fog lamp request ON signal through the CAN communication lines to the IPDM E/R. The IPDM E/R then turns ON the front fog lamp relay sending power to the front fog lamps.

The combination meter also receives a front fog lamp request ON signal through the CAN communication lines at which time it turns the front fog indicator ON.


TURN SIGNAL AND HAZARD WARNING LAMPS

< SYSTEM DESCRIPTION >

TURN SIGNAL AND HAZARD WARNING LAMPS

System Diagram

INFOID:000000007418425

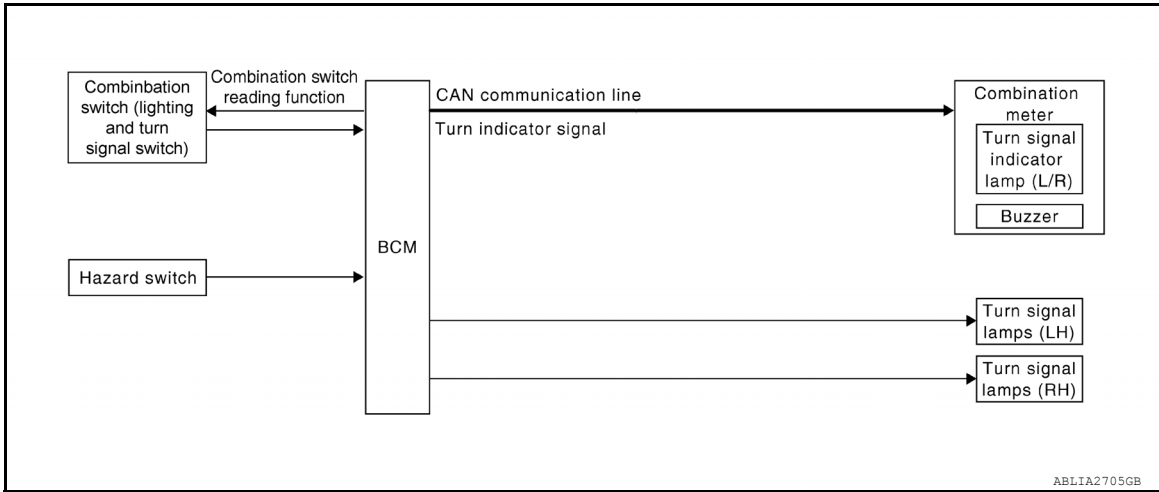


System Description

INFOID:000000007418426

- BCM (Body Control Module) controls turn signal lamp (RH and LH) and hazard warning lamp operation.
- Combination meter operates turn (RH and LH) indicator according to CAN communication signals from BCM.

Component Parts Location

INFOID:000000007418427

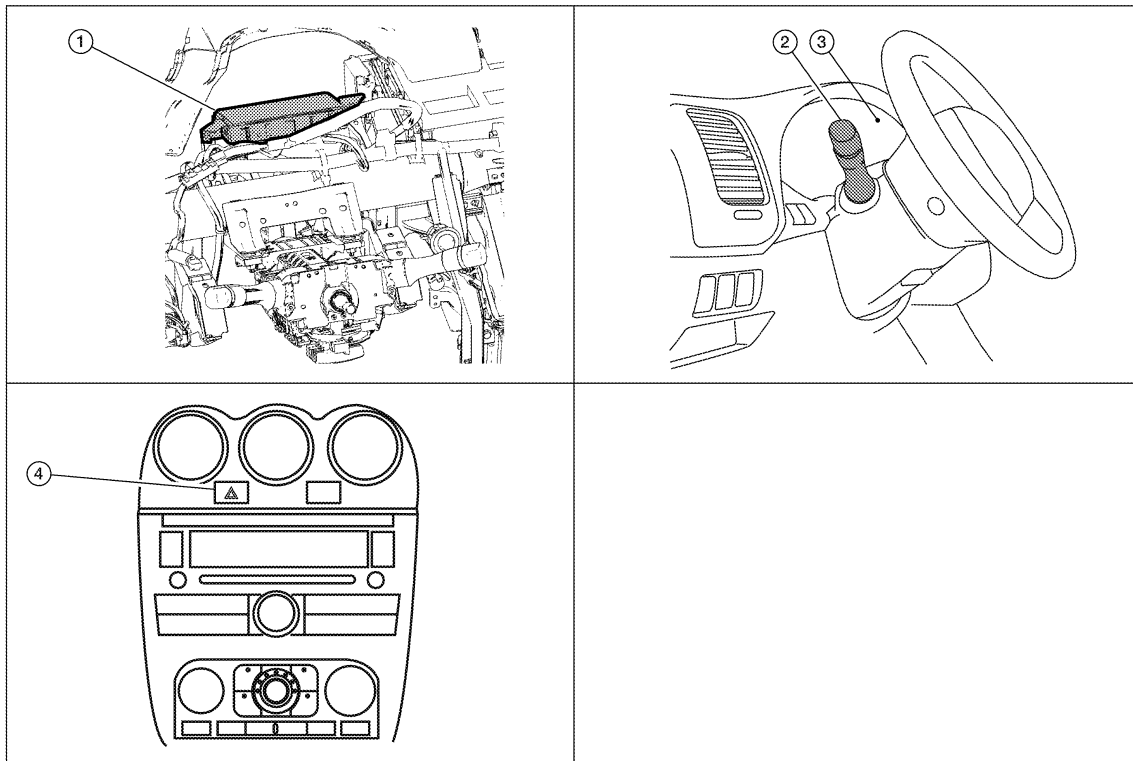

1. BCM M16, M17, M18, M19 (view with instrument panel removed)
2. Combination switch (lighting and turn signal switch) M28
3. Combination meter M24
4. Hazard switch M54

TURN SIGNAL AND HAZARD WARNING LAMPS

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000007418428

TURN SIGNAL OPERATION

When the combination switch (lighting and turn signal switch) is in LH or RH position with the ignition switch in ON position, the BCM detects the TURN RH or TURN LH ON request. The BCM outputs the flasher output signal to the respective turn signal lamp. The BCM sends a turn indicator signal ON request through the CAN communication lines to the combination meter. The combination meter then activates the appropriate turn signal indicator and audible buzzer.

HAZARD LAMP OPERATION

When the hazard switch is in ON position, the BCM detects the hazard switch signal ON. The BCM outputs the flasher output signal (right and left). The BCM sends a hazard indicator signal ON request through the CAN communication lines to the combination meter. The combination meter then activates the hazard indicator and audible buzzer.

REMOTE KEYLESS ENTRY OPERATION

The remote keyless entry receiver transmits Intelligent Key signal to BCM, then BCM controls hazard lamps. Refer to [SEC-228, "System Description"](#).


PARKING, LICENSE PLATE AND TAIL LAMPS

< SYSTEM DESCRIPTION >

PARKING, LICENSE PLATE AND TAIL LAMPS

System Diagram

INFOID:000000007418429

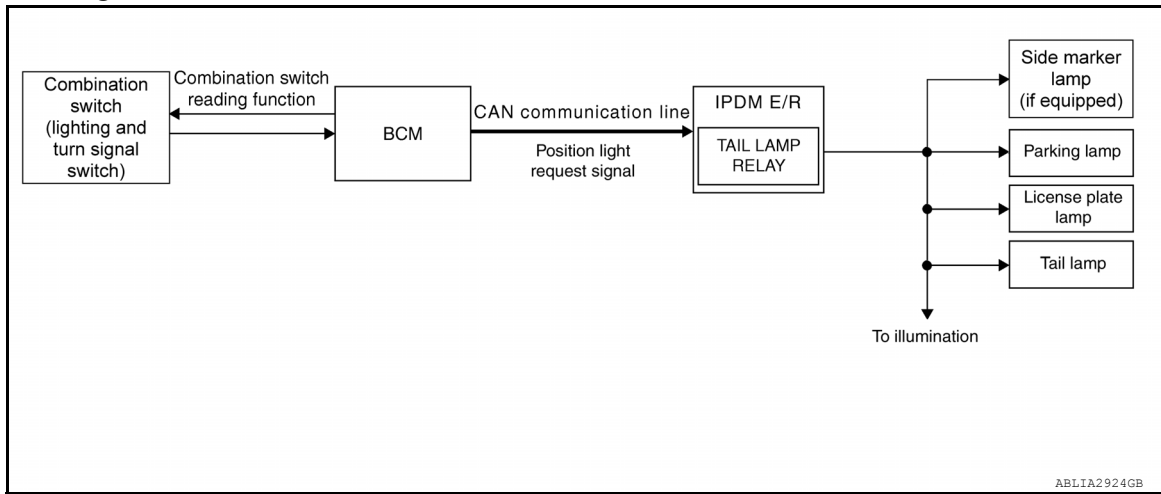


System Description

INFOID:000000007418430

- BCM (Body Control Module) controls parking, side marker, license plate and tail lamps operation.
- IPDM E/R (Intelligent Power Distribution Module Engine Room) operates parking, side marker, license plate and tail lamps according to CAN communication signals from BCM.

Component Parts Location

INFOID:000000007418431

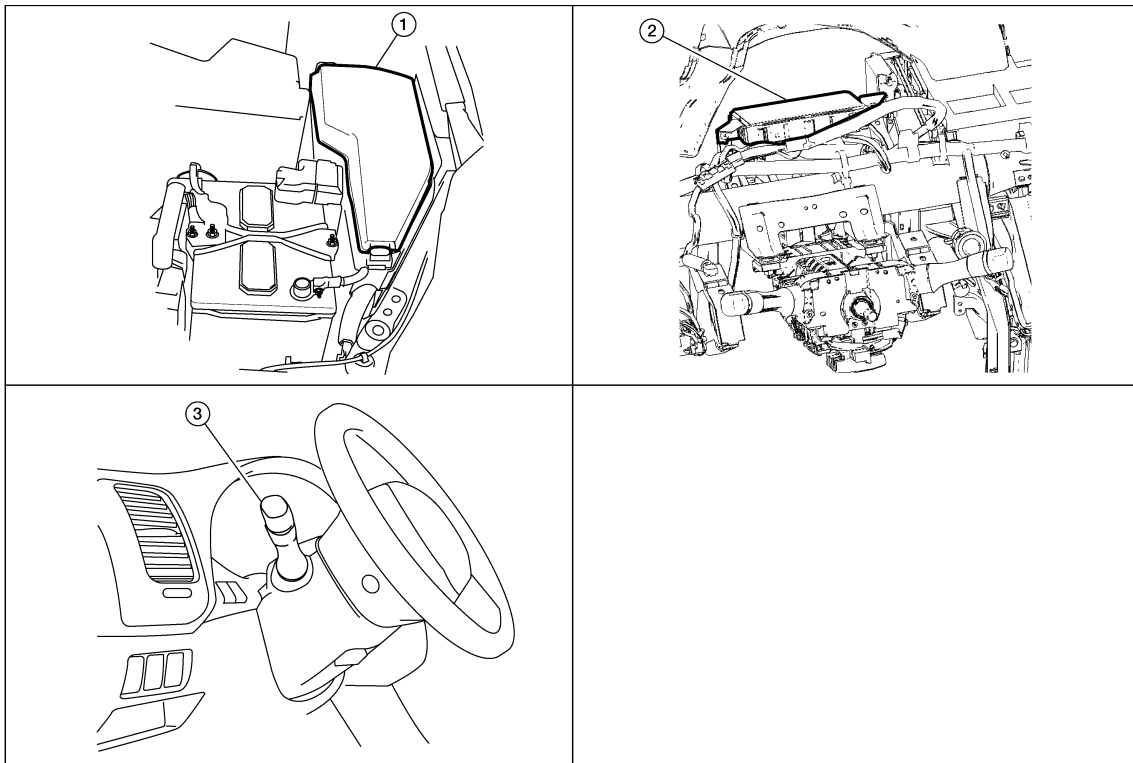

ALLIA00192Z

PARKING, LICENSE PLATE AND TAIL LAMPS

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000007418432

PARKING, LICENSE PLATE AND TAIL LAMPS OPERATION

When the combination switch (lighting and turn signal switch) is in 1ST position, BCM detects the combination switch (lighting and turn signal switch) ON. The BCM sends a parking light ON request through the CAN communication lines to the IPDM E/R. The IPDM E/R then activates the tail lamp relay which sends power to the parking and instrument illumination circuits.

EXTERIOR LAMP BATTERY SAVER CONTROL

With the combination switch (lighting and turn signal switch) in the 2ND position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes unless the combination switch (lighting and turn signal switch) position is changed. If the combination switch (lighting and turn signal switch) position is changed, then the headlamps are turned off.


This setting can be changed by CONSULT. Refer to [BCS-20, "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#).

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

COMBINATION SWITCH READING SYSTEM

System Diagram

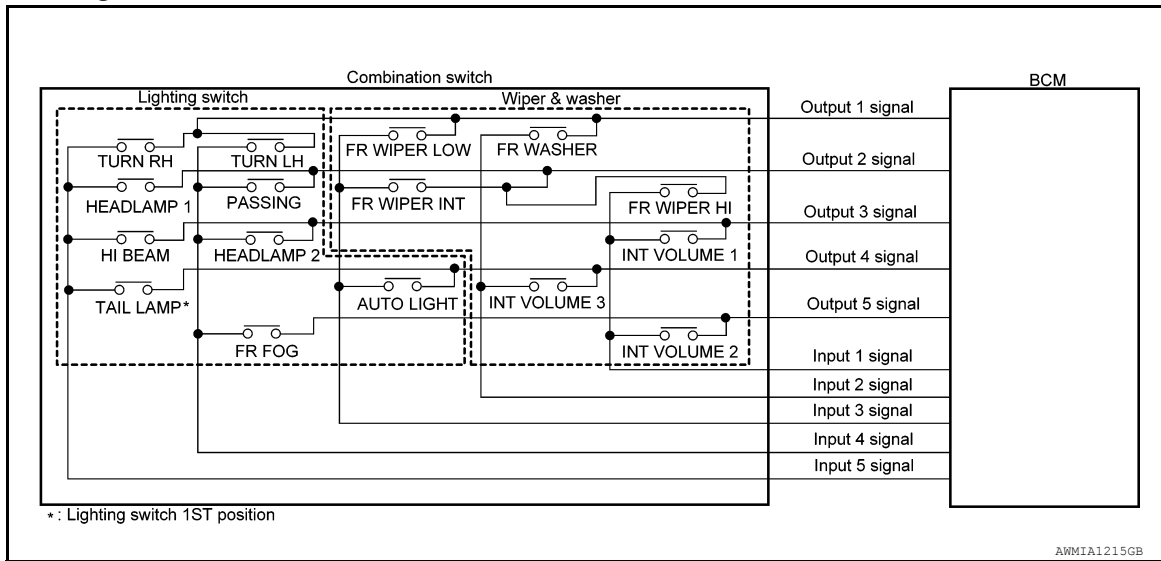

System Description


INFOID:000000007630906

OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5) and reads a maximum of 20 switch states.

COMBINATION SWITCH MATRIX

Combination switch circuit

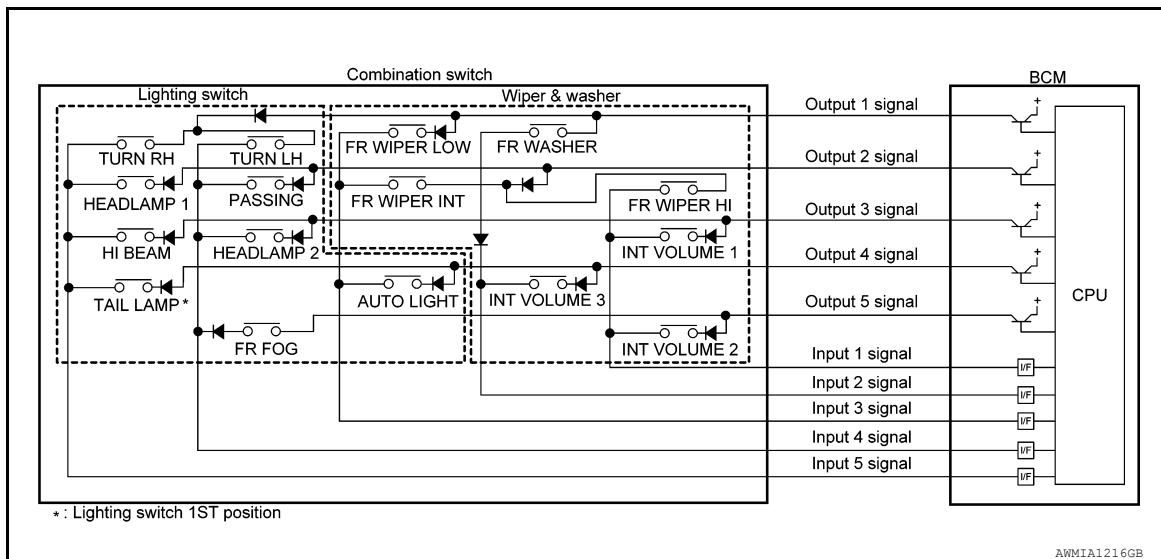

Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASH	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	INT VOLUME 1	—	—	HEADLAMP 2	HI BEAM

COMBINATION SWITCH READING SYSTEM


< SYSTEM DESCRIPTION >

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 4	—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
OUTPUT 5	INT VOLUME 2	—	—	FR FOG	—

COMBINATION SWITCH READING FUNCTION

Description


- BCM reads the status of the combination switch at 10ms intervals normally.

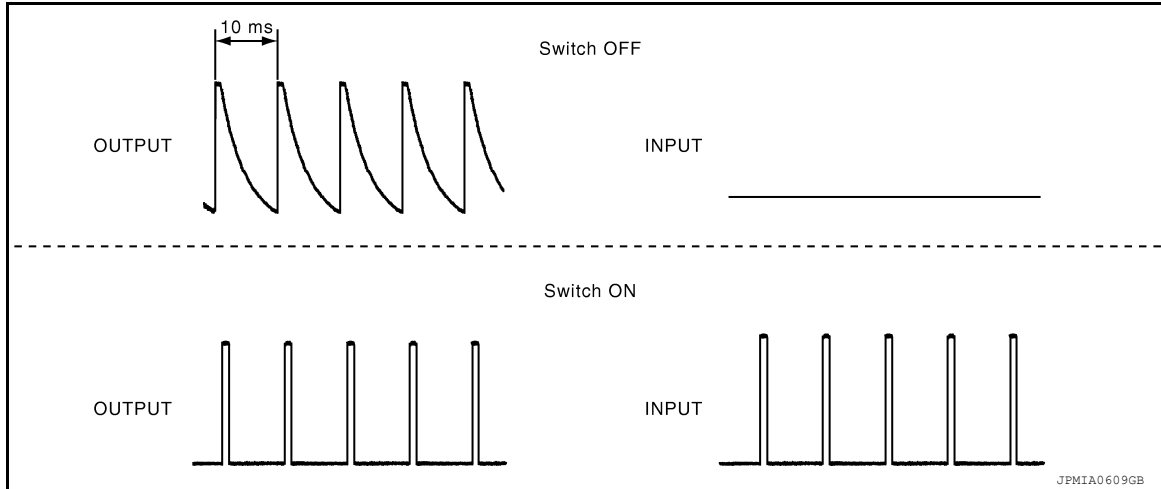

NOTE:

BCM reads the status of the combination switch at 60ms intervals when BCM is controlled at low power consumption mode.

- BCM operates as follows and judges the status of the combination switch.
- It operates the transistor on OUTPUT side in the following order: OUTPUT 1 → 2 → 3 → 4 → 5 and outputs voltage waveform.
- The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.
- It reads this change of the voltage as the status signal of the combination switch.

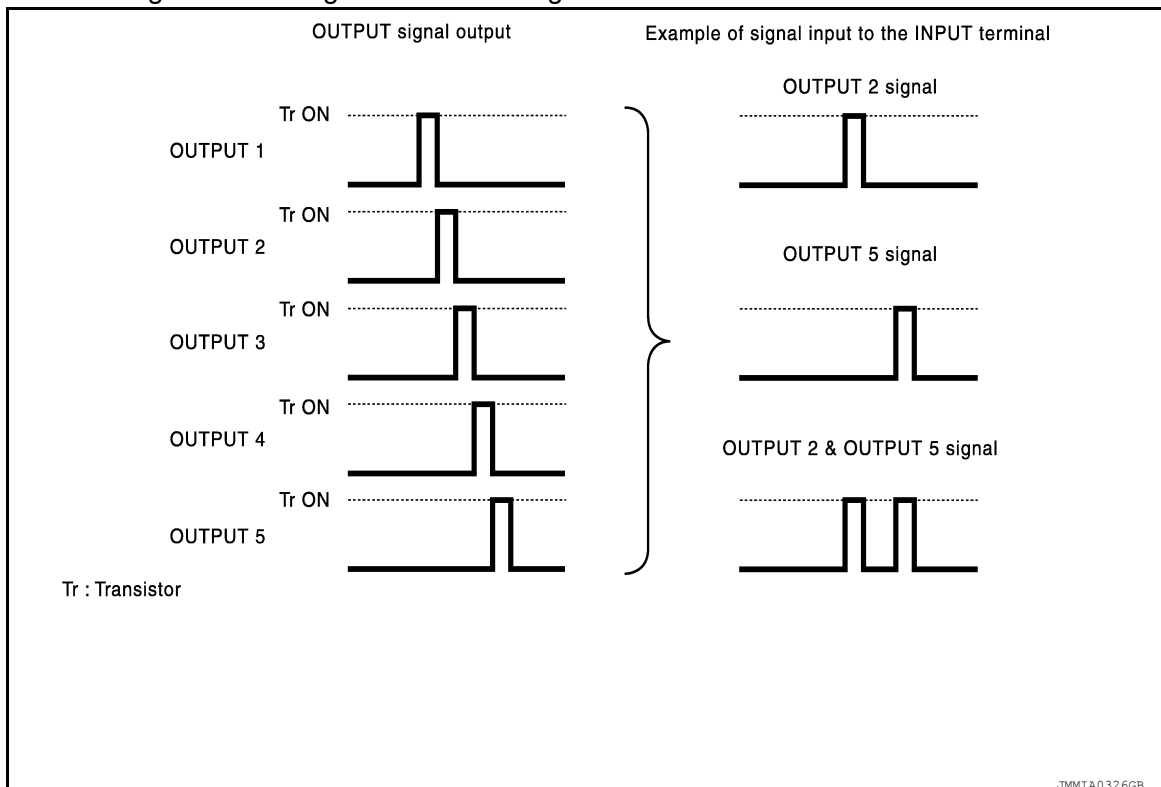

Operation Example


COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TAIL LAMP) is turned ON


- The circuit between OUTPUT 4 and INPUT 5 is formed when the TAIL LAMP is turned ON.

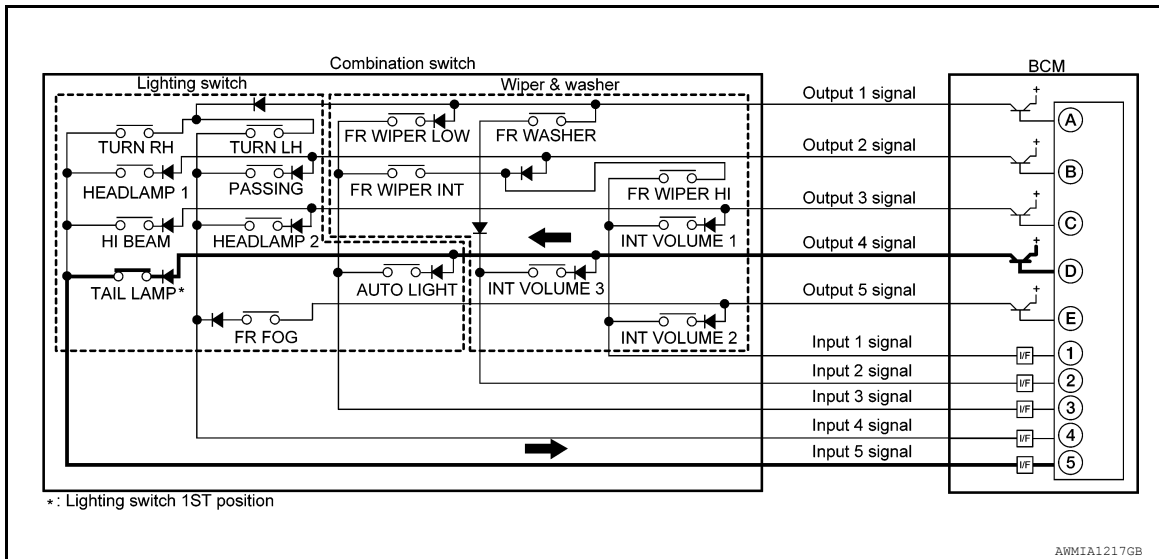

- BCM detects the combination switch status signal "5D" when the signal of OUTPUT 4 is input to INPUT 5.
- BCM judges that the TURN RH switch is ON when the signal "5D" is detected.

Example 2: When some switches (TURN RH, TAIL LAMP) are turned ON

- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.

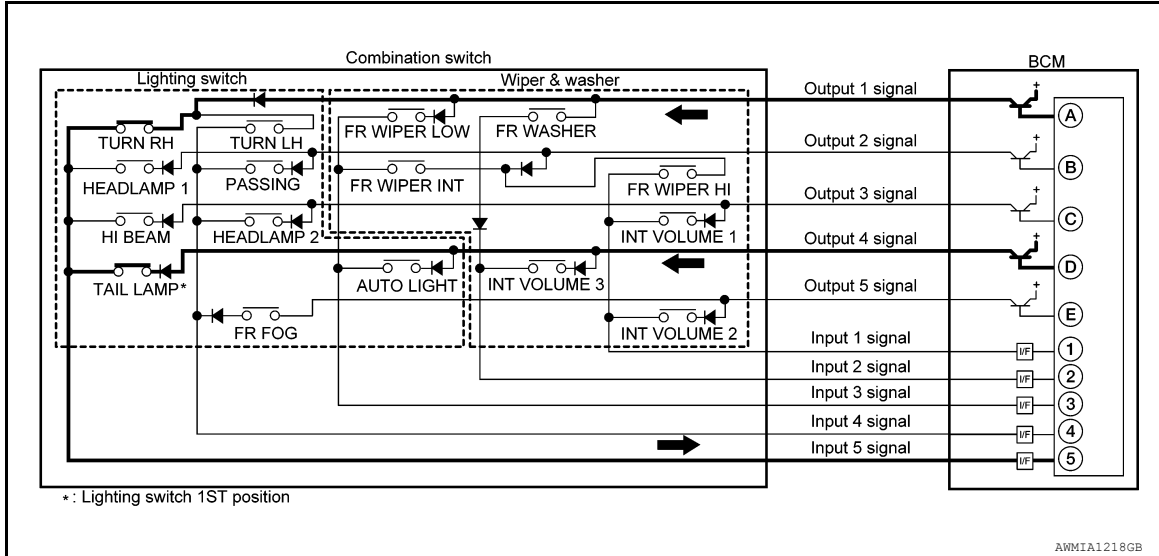

- BCM detects the combination switch status signal "5AD" when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal "5AD" is detected.

WIPER INTERMITTENT DIAL POSITION SETTING (FRONT WIPER INTERMITTENT OPERATION)

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2, and 3 switches.

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

Wiper intermittent dial position	Intermittent operation delay interval	INT VOLUME switch ON/OFF status		
		INT VOLUME 1 switch	INT VOLUME 2 switch	INT VOLUME 3 switch
1	Short ↑	ON	ON	ON
2		ON	ON	OFF
3		ON	OFF	OFF
4		OFF	OFF	OFF
5	↓ Long	OFF	OFF	ON
6		OFF	ON	ON
7		OFF	ON	OFF

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : Diagnosis Description

INFOID:000000007630882

BCM CONSULT FUNCTION

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM.
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	This function is not used even though it is displayed.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP		×	×
Remote keyless entry system	MULTI REMOTE ENT		×	
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
Air conditioner	AIR CONDITONER		×	
Intelligent Key system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
BCM	BCM	×		
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	
Trunk open	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000007724336

ECU IDENTIFICATION

Displays the BCM part No.

SELF-DIAG RESULT

Refer to [BCS-67, "DTC Index"](#).

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

HEADLAMP

HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:000000007630892

WORK SUPPORT

Service item	Setting item	Setting
BATTERY SAVER SET	ON*	With the exterior lamp battery saver function
	OFF	Without the exterior lamp battery saver function

* : Initial setting

DATA MONITOR

Monitor item [Unit]	Description
PUSH SW [ON/OFF]	The switch status input from push-button ignition switch
ENGINE STATE [STOP/STALL/CRANK/RUN]	The engine status received from ECM with CAN communication
VEH SPEED 1 [km/h]	The value of the vehicle speed received from combination meter with CAN communication
KEY SW-SLOT [ON/OFF]	Key switch status input from key slot
TURN SIGNAL R [ON/OFF]	Each switch status that BCM judges from the combination switch reading function
TURN SIGNAL L [ON/OFF]	
TAIL LAMP SW [ON/OFF]	
HI BEAM SW [ON/OFF]	
HEAD LAMP SW 1 [ON/OFF]	
HEAD LAMP SW 2 [ON/OFF]	
PASSING SW [ON/OFF]	
AUTO LIGHT SW* [ON/OFF]	
FR FOG SW [ON/OFF]	
DOOR SW-DR [ON/OFF]	The switch status input from front door switch (driver side)
DOOR SW-AS [ON/OFF]	The switch status input from front door switch (passenger side)
DOOR SW-RR [ON/OFF]	The switch status input from rear door switch RH
DOOR SW- RL [ON/OFF]	The switch status input from rear door switch LH

*: With auto light system

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Test item	Operation	Description
TAIL LAMP	ON	Transmits the Position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON.
	OFF	Stops the tail lamp request signal transmission.
HEAD LAMP	HI	Transmits the high beam request signal with CAN communication to turn the headlamp (HI)
	LOW	Transmits the low beam request signal with CAN communication to turn the headlamp (LOW).
	OFF	Stops the high & low beam request signal transmission.
FR FOG LAMP	ON	Transmits the front fog lights request signal to IPDM E/R with CAN communication to turn the front fog lamp ON.
	OFF	Stops the front fog lights request signal transmission.
ILL DIM SIGNAL	ON	Transmits the delay timer function timer operation time signal to IPDM E/R with CAN communication to turn the headlamps ON (All doors closed).
	OFF	Stops the delay timer function timer signal transmission.

FLASHER

FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:000000007630891

WORK SUPPORT

Service item	Setting item	Setting
HAZARD ANSWER BACK	LOCK ONLY	Activated when locking.
	UNLOCK ONLY*	Activated when unlocking.
	LOCK/UNLOCK	Activated when locking/unlocking
	OFF	Not activated

* : Initial setting

DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [ON/OFF]	The switch status input from request switch (driver side)
REQ SW-AS [ON/OFF]	The switch status input from front request switch (passenger side)
PUSH SW [ON/OFF]	The switch status input from push-button ignition switch
TURN SIGNAL R [ON/OFF]	Each switch condition that BCM judges from the combination switch reading function
TURN SIGNAL L [ON/OFF]	
HAZARD SW [ON/OFF]	The switch status input from the hazard warning switch
RKE-LOCK [ON/OFF]	The lock signal status received from the keyless receiver
RKE-UNLOCK [ON/OFF]	The unlock signal status received from the keyless receiver
RKE-PANIC [ON/OFF]	The panic alarm signal status received from the keyless receiver

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

ACTIVE TEST

Test item	Operation	Description
FLASHER	RH	Blinks right turn signal lamp.
	LH	Blinks left turn signal lamp.
	OFF	Turns turn signal lamps (right and left) OFF.

COMB SW

COMB SW : CONSULT Function (BCM - COMB SW)

INFOID:000000007630890

DATA MONITOR

Monitor item [UNIT]	Description
FR WIPER HI [OFF/ON]	Displays the status of the FR WIPER HI switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER LOW [OFF/ON]	Displays the status of the FR WIPER LOW switch in combination switch judged by BCM with the combination switch reading function.
FR WASHER SW [OFF/ON]	Displays the status of the FR WASHER switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER INT [OFF/ON]	Displays the status of the FR WIPER INT switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER STOP [OFF/ON]	Displays the status of the front wiper stop position signal received from IPDM E/R via CAN communication.
INT VOLUME [1 - 7]	Displays the status of wiper intermittent dial position judged by BCM with the combination switch reading function.
TURN SIGNAL R [OFF/ON]	Displays the status of the TURN RH switch in combination switch judged by BCM with the combination switch reading function.
TURN SIGNAL L [OFF/ON]	Displays the status of the TURN LH switch in combination switch judged by BCM with the combination switch reading function.
TAIL LAMP SW [OFF/ON]	Displays the status of the TAIL LAMP switch in combination switch judged by BCM with the combination switch reading function.
HI BEAM SW [OFF/ON]	Displays the status of the HI BEAM switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 1 [OFF/ON]	Displays the status of the HEADLAMP 1 switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 2 [OFF/ON]	Displays the status of the HEADLAMP 2 switch in combination switch judged by BCM with the combination switch reading function.
PASSING SW [OFF/ON]	Displays the status of the PASSING switch in combination switch judged by BCM with the combination switch reading function.
AUTO LIGHT SW* [OFF/ON]	Displays the status of the AUTO LIGHT switch in combination switch judged by BCM with the combination switch reading function.
FR FOG SW [OFF/ON]	Displays the status of the FR FOG switch in combination switch judged by BCM with the combination switch reading function.

*: With auto light system

BATTERY SAVER

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:0000000007630889

WORK SUPPORT

Service item	Setting item	Setting
BATTERY SAVER SET	ON*	With the exterior lamp battery saver function
	OFF	Without the exterior lamp battery saver function

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Service item	Setting item	Setting	
ROOM LAMP BAT SAV SET	ON*	With the interior room lamp battery saver function	
	OFF	Without the interior room lamp battery saver function	
ROOM LAMP TIMER SET	MODE 1*	15 min.	Sets the interior room lamp battery saver timer operating time.
	MODE 2	60 min.	

*: Initial setting

DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [ON/OFF]	The switch status input from request switch (driver side)
REQ SW-AS [ON/OFF]	The switch status input from front request switch (passenger side)
PUSH SW [ON/OFF]	The switch status input from push-button ignition switch
ACC RLY-F/B [ON/OFF]	Indicates [ON/OFF] condition of accessory relay-1.
UNLK SEN-DR [ON/OFF]	Status of front door lock assembly LH (door unlock sensor) judged by BCM
KEY SW-SLOT [ON/OFF]	Key switch status input from key slot
DOOR SW-DR [ON/OFF]	The switch status input from front door switch (driver side)
DOOR SW-AS [ON/OFF]	The switch status input from front door switch (passenger side)
DOOR SW-RR [ON/OFF]	The switch status input from rear door switch RH
DOOR SW- RL [ON/OFF]	The switch status input from rear door switch LH
CDL LOCK SW [ON/OFF]	Lock switch status received from central door lock switch by power window switch serial link
CDL UNLOCK SW [ON/OFF]	Unlock switch status received from central door lock switch by power window switch serial link
KEY CYL LK-SW [ON/OFF]	Lock switch status received from key cylinder switch by power window switch serial link
KEY CYL UN-SW [ON/OFF]	Unlock switch status received from key cylinder switch by power window switch serial link
TRNK/HAT MNTR [ON/OFF]	The switch status input from trunk room lamp switch
RKE-LOCK [ON/OFF]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [ON/OFF]	Unlock signal status received from remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
BATTERY SAVER	OFF	Cuts the interior room lamp power supply to turn interior room lamp OFF.
	ON	Outputs the interior room lamp power supply to turn interior room lamp ON.*

*: Each lamp switch is in ON position.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000007630893

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Tail lamps
- Front fog lamps (if equipped)
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fans

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the front door switch LH 10 times. Then turn the ignition switch OFF.

CAUTION:

Close front door RH.

4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

CAUTION:


- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-289, "Description"](#).
- Do not start the engine.

Inspection in Auto Active Test Mode

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

When auto active test mode is actuated, the following 6 steps are repeated 3 times.

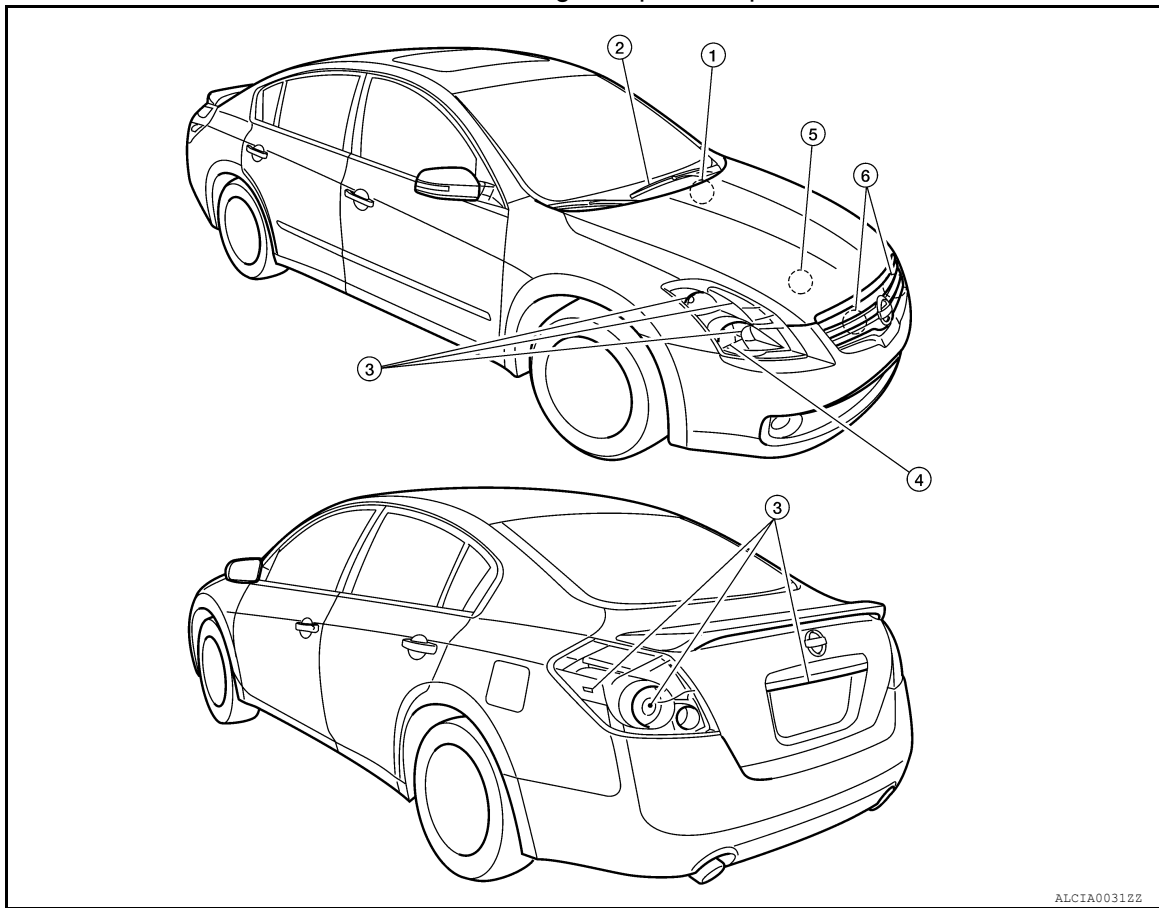


Operation sequence	Inspection Location	Operation
1	Oil pressure warning lamp	Blinks continuously during operation of auto active test
2	Front wiper	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none"> • Parking lamps • License plate lamps • Tail lamps • Front fog lamps (if equipped) 	10 seconds
4	Headlamps	LO ↔ HI 5 times
5	A/C compressor (magnet clutch)	ON ↔ OFF 5 times
6*	Cooling fans	MID for 5 seconds → HI for 5 seconds

*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Concept of auto active test

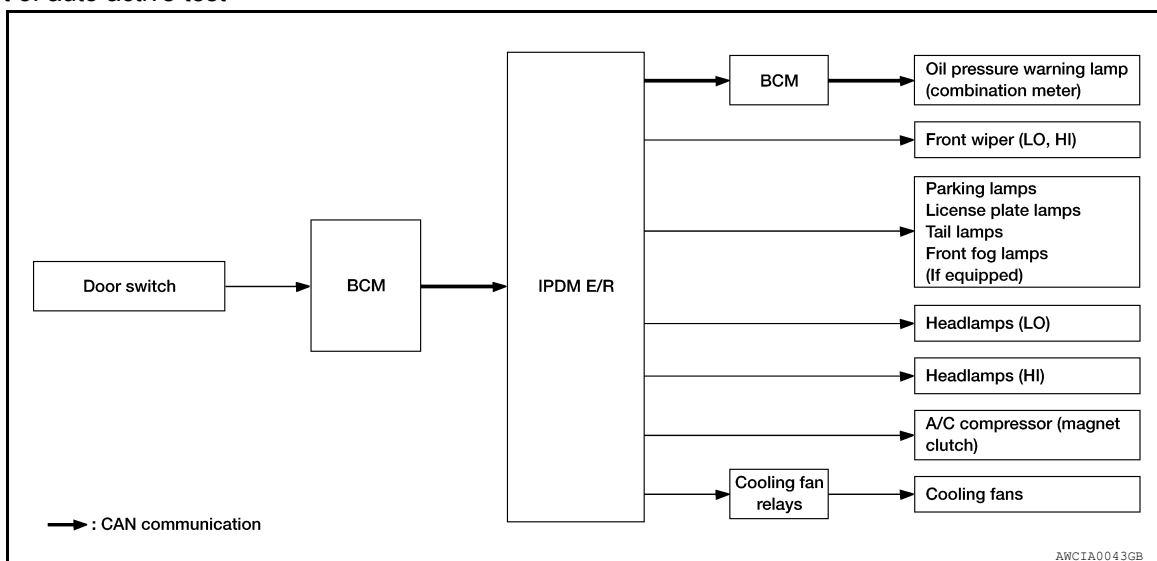

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents		Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> • Parking lamps • License plate lamps • Tail lamps • Front fog lamps (if equipped) • Headlamp (HI, LO) • Front wiper 	Perform auto active test. Does the applicable system operate?	YES	BCM signal input circuit
		NO	<ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES	<ul style="list-style-type: none"> • Combination meter signal input circuit • CAN communication signal between combination meter and ECM • CAN communication signal between ECM and IPDM E/R
		NO	<ul style="list-style-type: none"> • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Symptom	Inspection contents		Possible cause
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES	<ul style="list-style-type: none"> • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R
		NO	<ul style="list-style-type: none"> • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and combination meter • Combination meter
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES	<ul style="list-style-type: none"> • ECM signal input circuit • CAN communication signal between ECM and IPDM E/R
		NO	<ul style="list-style-type: none"> • Cooling fan • Harness or connector between cooling fan and cooling fan relays • Cooling fan relays • Harness or connector between IPDM E/R and cooling fan relays • IPDM E/R

CONSULT Function (IPDM E/R)

INFOID:000000007630894

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
ECU Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC

Refer to [PCS-29. "DTC Index"](#).

DATA MONITOR

Monitor item

Monitor Item [Unit]	MAIN SIG- NALS	Description
MOTOR FAN REQ [%]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NALS	Description
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the clutch interlock switch (M/T models) or CVT shift position (CVT models) judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST /INHI]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the CVT shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		Displays the status of the steering lock relay request received from BCM via CAN communication.
S/L STATE [LOCK/UNLK/UNKWN]		Displays the status of the electronic steering column lock judged by IPDM E/R.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.

ACTIVE TEST

Test item

Test item	Operation	Description
HORN	On	Operates horn relay 1 and horn relay 2 for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Test item	Operation	Description
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM (BODY CONTROL MODULE)

BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000007630919

Regarding Wiring Diagram information, refer to [BCS-70, "Wiring Diagram - Coupe"](#) or [BCS-79, "Wiring Diagram - Sedan"](#).

1. CHECK FUSE AND FUSIBLE LINK

Check if the following BCM fuse or fusible link are blown.

Terminal No.	Signal name	Fuse and fusible link No.
1	Battery power supply	H
11		10

Is the fuse or fusible link blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
BCM		Ground	
Connector	Terminal		
M16	1		
M17	11		
			Battery voltage

Is the measurement normal?

YES >> GO TO 3

NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT



Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M17	13		Yes

Does continuity exist?

YES >> Inspection End.

NO >> Repair or replace harness.

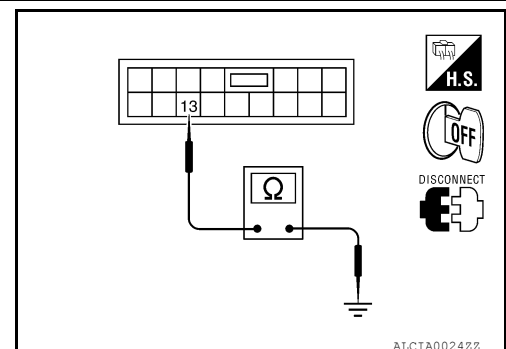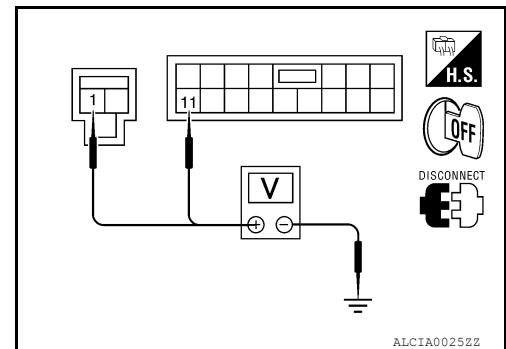

BCM (BODY CONTROL MODULE) : Special Repair Requirement

INFOID:000000007418443

1. REQUIRED WORK WHEN REPLACING BCM

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Initialize control unit. Refer to [BCS-3, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Work Procedure"](#).

>> Work End.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000007630920

Regarding Wiring Diagram information, refer to [PCS-31, "Wiring Diagram - Coupe"](#) or [PCS-37, "Wiring Diagram - Sedan"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
1, 2	Battery power supply	B, D
—		42
—		43

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connectors.
3. Check voltage between IPDM E/R harness connector and ground.

Terminals			Voltage (V) (Approx.)
(+)		(-)	
IPDM E/R			
Connector	Terminal	Ground	Battery voltage
E16	1		
	2		

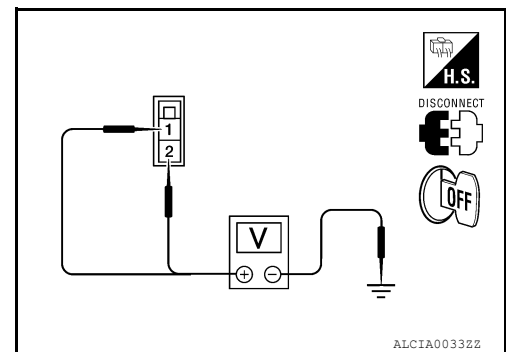

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT


Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		Yes
A: E18	12		
B: E17	41		

Does continuity exist?

YES >> Inspection End.

NO >> Repair harness or connector.

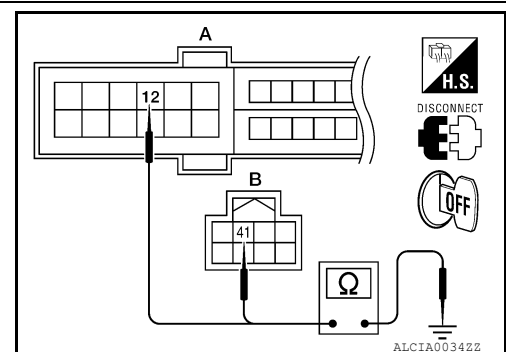

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP (HI) CIRCUIT

Description

INFOID:000000007418445

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp high relay based on inputs from the BCM over the CAN communication lines. When the headlamp high relay is energized, power flows through fuses 48 and 49, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp high beam.

Component Function Check

INFOID:000000007418446

1.CHECK HEADLAMP (HI) OPERATION

⊗WITHOUT CONSULT

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the headlamp switches to the high beam.

NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

ⓅCONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp switches to the high beam.

HI : Headlamp switches to the high beam.

OFF : Headlamp OFF

Does the headlamp switch to the high beam?

YES >> Headlamp (HI) circuit is normal.

NO >> Refer to [EXL-36, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007418447

Regarding Wiring Diagram information, refer to [EXL-99, "Wiring Diagram - Coupe"](#) or [EXL-104, "Wiring Diagram - Sedan"](#) for halogen headlamp system or [EXL-109, "Wiring Diagram - Coupe"](#) or [EXL-114, "Wiring Diagram - Sedan"](#) for xenon headlamp system.

1.CHECK HEADLAMP (HI) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	48	10A
Headlamp HI (RH)	IPDM E/R	49	10A

Is the fuse open?

YES >> Replace the fuse after repairing the affected circuit.

NO >> GO TO 2

2.CHECK HEADLAMP (HI) OUTPUT VOLTAGE

ⓅCONSULT ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector.
3. Turn the ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

- With EXTERNAL LAMPS ON, check the voltage between the combination lamp connector and ground.

(+) Connector		Terminal	(-) Ground	Voltage
RH	E222	3	Ground	Battery voltage
LH	E213	3		

Is battery voltage present?

- YES >> GO TO 4
NO >> GO TO 3

3.CHECK HEADLAMP (HI) CIRCUIT FOR OPEN

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector E200.
- Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
RH	E200	E222	3	Yes
LH		E213	3	

Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-45. "Removal and Installation"](#).
NO >> Repair the harness or connector.




4.CHECK FRONT COMBINATION LAMP (HI) GROUND CIRCUIT

- Turn the ignition switch OFF.
- Check continuity between the front combination lamp harness connector and ground.

Connector	Terminal	—	Continuity
RH	E222	Ground	Yes
LH	E213		

Does continuity exist?

- YES >> Inspect the headlamp bulb.
NO >> Repair the harness.

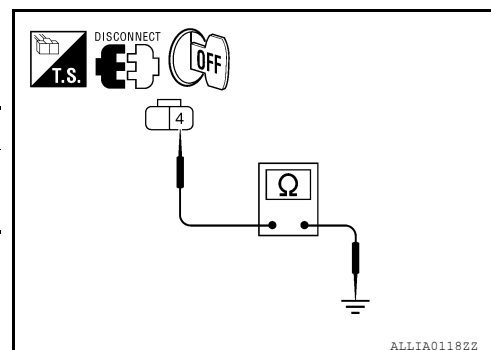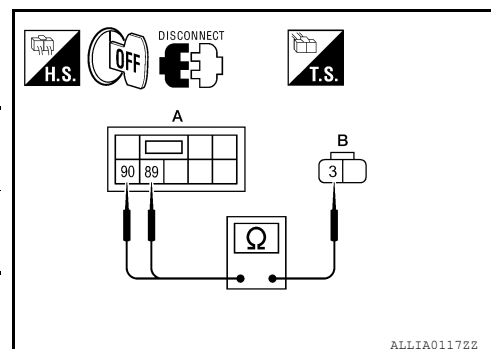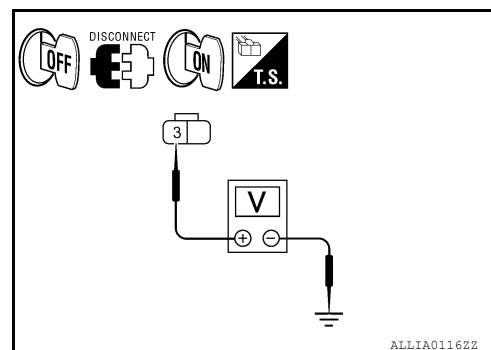

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP (LO) CIRCUIT

HEADLAMP (HALOGEN)

HEADLAMP (HALOGEN) : Description

INFOID:000000007418448

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp low relay based on inputs from the BCM over the CAN communication lines. When the headlamp low relay is energized, power flows through fuses 51 and 52, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp low beam.

HEADLAMP (HALOGEN) : Component Function Check

INFOID:000000007418449

1.CHECK HEADLAMP (LO) OPERATION

⊗WITHOUT CONSULT

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the headlamp is turned ON.

NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

ⓈCONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp is turned ON.

LO : Headlamp ON

OFF : Headlamp OFF

Is the headlamp turned ON?

YES >> Headlamp (LO) is normal.

NO >> Refer to [EXL-38, "HEADLAMP \(HALOGEN\) : Diagnosis Procedure"](#).

HEADLAMP (HALOGEN) : Diagnosis Procedure

INFOID:000000007418450

Regarding Wiring Diagram information, refer to [EXL-99, "Wiring Diagram - Coupe"](#) or [EXL-104, "Wiring Diagram - Sedan"](#).

1.CHECK HEADLAMP (LO) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Headlamp LO (LH)	IPDM E/R	51	15A
Headlamp LO (RH)	IPDM E/R	52	15A

Is the fuse open?

YES >> Replace the fuse after repairing the affected circuit.

NO >> GO TO 2

2.CHECK HEADLAMP (LO) OUTPUT VOLTAGE

ⓈCONSULT

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector.
3. Turn the ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

- With EXTERNAL LAMPS ON, check the voltage between the combination lamp connector and ground.

(+)			(-)	Voltage
Connector		Terminal		
RH	E223	1	Ground	Battery voltage
LH	E212	1		

Is battery voltage present?

- YES >> GO TO 4
NO >> GO TO 3

3.CHECK HEADLAMP (LO) CIRCUIT FOR OPEN

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector E200.
- Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
RH	E200	83	E223	Yes
LH		84	E212	

Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-45, "Removal and Installation"](#).
NO >> Repair the harness or connector.

4.CHECK FRONT COMBINATION LAMP (LO) GROUND CIRCUIT

- Turn the ignition switch OFF.
- Check continuity between the front combination lamp harness connector and ground.

Connector	Terminal	—	Continuity
RH	E223	Ground	Yes
LH	E212		

Does continuity exist?

- YES >> Inspect the headlamp bulb.
NO >> Repair the harness.

HEADLAMP (XENON)

HEADLAMP (XENON) : Description

INFOID:000000007418451

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp low relay based on inputs from the BCM over the CAN communication lines. When the headlamp low relay is energized, power flows through fuses 51 and 52, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp low beam.

HEADLAMP (XENON) : Component Function Check

INFOID:000000007418452




1.CHECK HEADLAMP (LO) OPERATION

⊗ WITHOUT CONSULT

- Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
- Check that the headlamp is turned ON.

NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

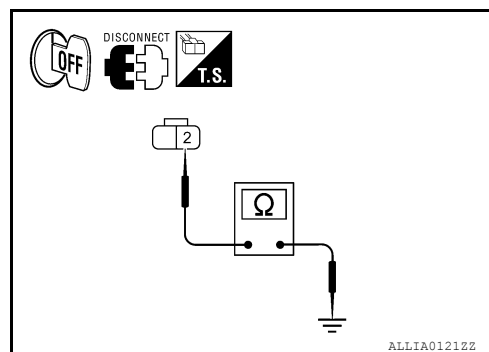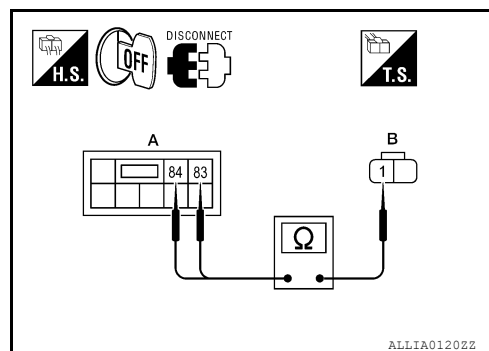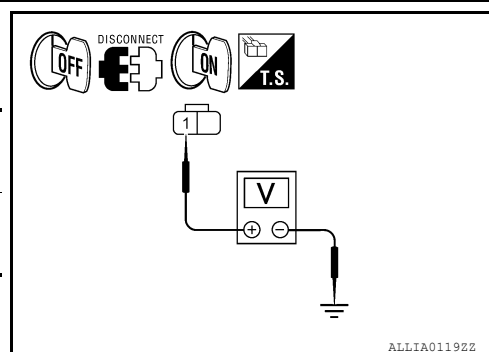

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

CONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp is turned ON.

LO : Headlamp ON
OFF : Headlamp OFF

Is the headlamp turned ON?

- YES >> Headlamp (LO) is normal.
NO >> Refer to [EXL-40, "HEADLAMP \(XENON\) : Diagnosis Procedure"](#).

HEADLAMP (XENON) : Diagnosis Procedure

INFOID:000000007418453

Regarding Wiring Diagram information, refer to [EXL-109, "Wiring Diagram - Coupe"](#) or [EXL-114, "Wiring Diagram - Sedan"](#).

1.CHECK HEADLAMP (LO) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Headlamp LO (LH)	IPDM E/R	51	15A
Headlamp LO (RH)	IPDM E/R	52	15A

Is the fuse open?

- YES >> Replace the fuse after repairing the affected circuit.
NO >> GO TO 2

2.CHECK HEADLAMP (LO) OUTPUT VOLTAGE

CONSULT

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector.
3. Turn the ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With EXTERNAL LAMPS ON, check the voltage between the combination lamp connector and ground.


(+)			(-)	Voltage
Connector		Terminal		
RH	E223	1	Ground	Battery voltage
LH	E212	1		

Is battery voltage present?

- YES >> GO TO 4
NO >> GO TO 3

3.CHECK HEADLAMP (LO) CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E200.

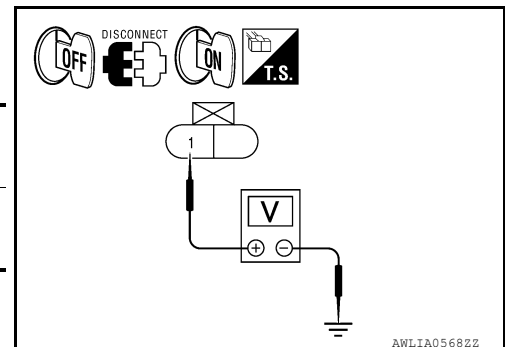

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

- Check continuity between the IPDM E/R harness connector (A) and the front combination lamp harness connector (B).

A			B		Continuity
Connector		Terminal	Connector	Terminal	
RH	E200	83	E223	1	Yes
LH		84	E212	1	

Does continuity exist?

YES >> Replace IPDM E/R. Refer to [PCS-45, "Removal and Installation"](#).

NO >> Repair the harness or connector.

4.CHECK FRONT COMBINATION LAMP (LO) GROUND CIRCUIT



- Turn the ignition switch OFF.
- Check continuity between the front combination lamp harness connector and ground.

Connector		Terminal	—	Continuity
RH	E223	2	Ground	Yes
LH	E212	2		

Does continuity exist?

YES >> Perform xenon headlamp diagnosis. Refer to [EXL-42, "Description"](#).

NO >> Repair the harness.

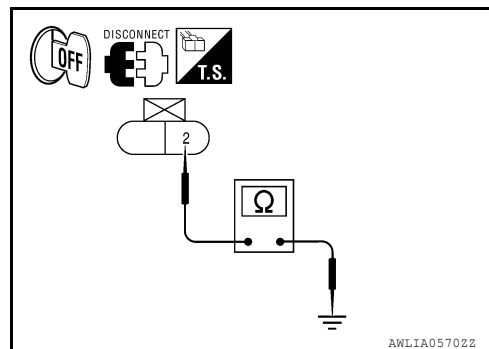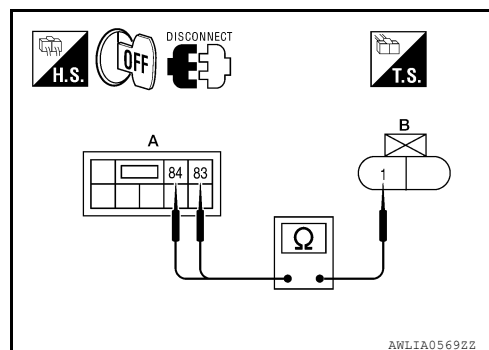

XENON HEADLAMP

< DTC/CIRCUIT DIAGNOSIS >

XENON HEADLAMP

Description

INFOID:000000007418454

OPERATION

Refer to [EXL-8. "Component Description"](#).

PRECAUTIONS FOR TROUBLE DIAGNOSIS

- Installation or removal of the connector must be done with the lighting switch OFF.
- When the lamp is illuminated (when the lighting switch is ON), do not touch the harness, HID control unit, inside of the lamp, or the lamp metal parts.
- To check illumination, temporarily install lamp in the vehicle. Be sure to connect power at the vehicle-side connector.
- If the malfunction can be traced directly to the electrical system, first check for items such as blown fuses and fusible links, broken wires or loose connectors, pulled-out terminals, and improper connections.
- Do not work with wet hands.
- Using a tester for HID control unit circuit trouble diagnosis is prohibited.
- Disassembling the HID control unit or harnesses (bulb socket harness, ballast harness) is prohibited.
- Immediately after illumination, the light intensity and color will fluctuate, this is normal.
- When the bulb has reached the end of its lifetime, the brightness may drop significantly, it may flash repeatedly, or the light may turn a reddish color.

Diagnosis Procedure

INFOID:000000007418455

1.CHECK XENON BULB

Install a known good bulb to the applicable headlamp. Check that the headlamp operates.

Is the inspection result normal?

- YES >> Replace the xenon bulb.
NO >> GO TO 2.

2.CHECK HID CONTROL UNIT

Install a known good HID control unit to the applicable headlamp. Check that the headlamp operates.

Is the inspection result normal?

- YES >> Replace HID control unit.
NO >> Inspection End.

FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT FOG LAMP CIRCUIT

Description

INFOID:000000007418456

The IPDM E/R (intelligent power distribution module engine room) controls the front fog lamp relay based on inputs from the BCM over the CAN communication lines. When the front fog lamp relay is energized, power flows from the front fog lamp relay in the IPDM E/R to the front fog lamps.

Component Function Check

INFOID:000000007418457

1.CHECK FRONT FOG LAMP OPERATION

⊗WITHOUT CONSULT

1. Activate IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the front fog lamp is turned ON.

ⓂCONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, Check that the front fog lamp is turned ON.

FOG : Front fog lamp ON

OFF : Front fog lamp OFF

Is the front fog lamp turned ON?

- YES >> Front fog lamp circuit is normal.
NO >> Refer to [EXL-43, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007418458

Regarding Wiring Diagram information, refer to [EXL-131, "Wiring Diagram - Coupe"](#) or [EXL-136, "Wiring Diagram - Sedan"](#).

1.CHECK FRONT FOG LAMP FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Front fog lamp	IPDM E/R	53	15A

EXL

Is the fuse open?

- YES >> Replace the fuse after repairing the affected circuit.
NO >> GO TO 2

2.CHECK FRONT FOG LAMP OUTPUT VOLTAGE

ⓂCONSULT

1. Turn the ignition switch OFF.
2. Disconnect the front fog lamp connector.
3. Turn the ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

- With EXTERNAL LAMPS ON, check the voltage between the fog lamp connector and ground.

(+) Connector		Terminal	(-)	Voltage
LH	E214	1	Ground	Battery voltage
RH	E227	1		

Is battery voltage present?

- YES >> GO TO 4
NO >> GO TO 3

3. CHECK FRONT FOG LAMP OPEN CIRCUIT

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector E200.
- Check continuity between the IPDM E/R harness connector (A) and the front fog lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
RH	E200	86	E227	Yes
LH		87	E214	

Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-45. "Removal and Installation"](#).
NO >> Repair the harness or connector.




4. CHECK FRONT FOG LAMP GROUND CIRCUIT

- Turn the ignition switch OFF.
- Check continuity between the front fog lamp harness connector and ground.

Connector	Terminal	—	Continuity
RH	E227	Ground	Yes
LH	E214		

Does continuity exist?

- YES >> Inspect the fog lamp bulb.
NO >> Repair the harness.

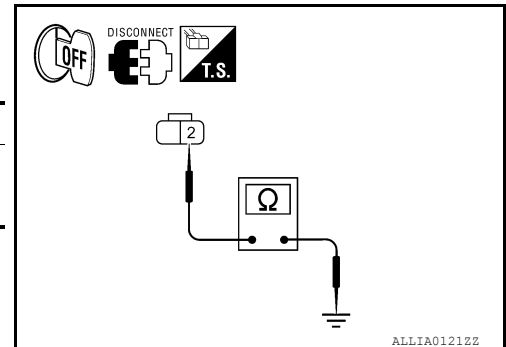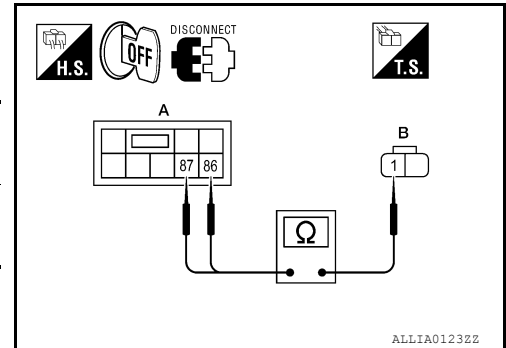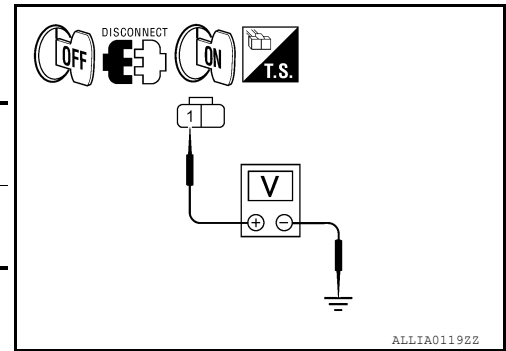

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PARKING LAMP CIRCUIT

Description

INFOID:000000007418459

The IPDM E/R (intelligent power distribution module engine room) controls the tail lamp relay based on inputs from the BCM over the CAN communication lines. When the tail lamp relay is energized, power flows through fuses 46 and 47, located in the IPDM E/R. Power then flows to the front and rear combination lamps, license plate lamps.

Component Function Check

INFOID:000000007418460

1.CHECK PARKING LAMP OPERATION

⊗WITHOUT CONSULT

1. Activate IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the parking lamp is turned ON.

ⓂCONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the parking lamp is turned ON.

TAIL : Parking lamp ON
OFF : Parking lamp OFF

Is the parking lamp turned ON?

- YES >> Parking lamp circuit is normal.
NO >> Refer to [EXL-45, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007418461

Regarding Wiring Diagram information, refer to [EXL-157, "Wiring Diagram - Coupe"](#) or [EXL-165, "Wiring Diagram - Sedan"](#).

1.CHECK PARKING LAMP FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open.

Unit	Location	Fuse No.	Capacity
Parking lamps (front)	IPDM E/R	46	10A
Parking lamps (rear)	IPDM E/R	47	10A

Is the fuse open?

- YES >> Replace the fuse after repairing the affected circuit.
NO >> GO TO 2

2.CHECK TAIL LAMP RELAY OUTPUT (VOLTAGE)

ⓂCONSULT

1. Turn the ignition switch OFF.
2. Disconnect the front and rear combination lamp connectors, license plate lamp connectors.
3. Turn the ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With EXTERNAL LAMPS ON, check the voltage between the front combination lamp connector, rear combination lamp connector, license plate lamp connector and ground.

(+)		(-)	Voltage
Connector	Terminal		

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Parking lamps (Sedan)	E218 (LH), E225 (RH)	8	Ground	Battery voltage
Parking lamps (Coupe)	E235 (LH), E236 (RH)	10		
Side marker lamps (Sedan)	E235 (LH), E236 (RH)	10		
Tail lamps	B30 (LH), B45 (RH)	2		
License plate lamps (Sedan)	B34 (LH), B32 (RH)	1		
License plate lamps (Coupe)	T6 (LH), T8 (RH)	1		

Is battery voltage present?

YES >> GO TO 4

NO >> GO TO 3

3.CHECK PARKING LAMP CIRCUIT (OPEN)

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front combination lamp harness connector, rear combination lamp harness connector, license plate lamp harness connector.

Connector		Terminal	Connector	Terminal	Continuity
Parking lamps (Sedan)	E201	92 (LH), 91 (RH)	E218 (LH), E225 (RH)	8	Yes
Parking lamps (Coupe)			E235 (LH), E236 (RH)	10	
Side marker lamps (Sedan)			E235 (LH), E236 (RH)	10	
Tail lamps	E18	7	B30 (LH), B45 (RH)	2	
License plate lamps (Sedan)			B34 (LH), B32 (RH)	1	
License plate lamps (Coupe)			T6 (LH), T8 (RH)	1	

Does continuity exist?

YES >> Replace IPDM E/R. Refer to [PCS-45. "Removal and Installation"](#).

NO >> Repair the harness or connector.

4.CHECK PARKING LAMP GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check continuity between the front combination lamp harness connector, rear combination lamp harness connector, license plate lamp harness connector and ground.

Connector		Terminal	—	Continuity
Parking lamps (Sedan)	E218 (LH), E225 (RH)	9	Ground	Yes
Parking lamps (Coupe)	E235 (LH), E236 (RH)	11		
Side marker lamps (Sedan)	E235 (LH), E236 (RH)	11		
Tail lamps	B30 (LH), B45 (RH)	5		
License plate lamps (Sedan)	B34 (LH), B32 (RH)	2		
License plate lamps (Coupe)	T6 (LH), T8 (RH)	2		

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Does continuity exist?

YES >> Inspect the parking lamp bulb.

NO >> Repair the harness.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

TURN SIGNAL LAMP CIRCUIT

Description

INFOID:000000007418462

The BCM monitors inputs from the combination switch (lighting and turn signal switch) to determine when to activate the turn signals. The BCM outputs voltage direction to the left and right turn signals during turn signal operation or both during hazard warning operation. The BCM sends a turn signal indicator request to the combination meter via the CAN communication lines.

The BCM performs the fast flasher operation (fail-safe) if any bulb or harness of the turn signal lamp circuit is open.

NOTE:

Turn signal lamp blinks at normal speed when using the hazard warning lamp.

Component Function Check

INFOID:000000007418463

1.CHECK TURN SIGNAL LAMP

CONSULT

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamp blinks.

LH : Turn signal lamp LH blinking

RH : Turn signal lamp RH blinking

OFF : The turn signal lamp OFF

Does the turn signal lamp blink?

YES >> Turn signal lamp circuit is normal.

NO >> Refer to [EXL-48. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007418464

Regarding Wiring Diagram information, refer to [EXL-141. "Wiring Diagram - Coupe"](#) or [EXL-149. "Wiring Diagram - Sedan"](#).

1.CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb to be sure the proper bulb standard is in use and the bulb is not open.

Is the bulb OK?

YES >> GO TO 2

NO >> Replace the bulb.


2.CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector, the door mirror connector (if equipped with turn signal in mirrors) and the rear combination lamp connector.
3. Turn the ignition switch ON.
4. With operating the turn signal switch, check the voltage between the front combination lamp harness connector and the ground.


(+)		(-)	Voltage
Connector	Terminal		

TURN SIGNAL LAMP CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

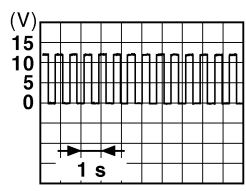(RH)	E224	5	Ground	 PKID0926E
(LH)	E217	5		

5. With operating the turn signal switch, check the voltage between the rear combination lamp harness connector and the ground.

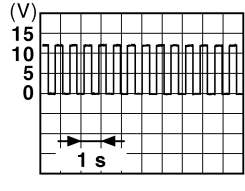(+) Connector		Terminal	(-)	Voltage
(RH)	B45	3	Ground	 PKID0926E
(LH)	B30	3		

6. With operating the turn signal switch, check the voltage between the door mirror (if equipped with turn signal in the mirrors) harness connector and the ground.

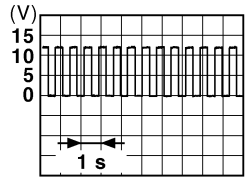(+) Connector		Terminal	(-)	Voltage
(RH)	D107	7	Ground	 PKID0926E
(LH)	D4	7		

Is the measurement value normal?

YES >> GO TO 5

NO >> GO TO 3

3.CHECK TURN SIGNAL LAMP CIRCUIT FOR OPEN

- Turn the ignition switch OFF.
- Disconnect BCM connector M17.
- Check continuity between the BCM harness connector M17 and the front combination lamp connector.

BCM			Front combination lamp		Continuity
Connector		Terminal	Connector	Terminal	
Front LH	M17	17	E217	5	Yes
Front RH		18	E224		

4. Check continuity between the BCM harness connector M17 and the rear combination lamp connector.

BCM			Rear combination lamp		Continuity
Connector		Terminal	Connector	Terminal	
Rear LH	M17	17	B30	3	Yes
Rear RH		18	B45	3	

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

- Check continuity between the BCM harness connector M17 and the door mirror connector (if equipped with turn signal in mirror).

BCM		Door mirror		Continuity
Connector	Terminal	Connector	Terminal	
LH	M17	D4	7	Yes
RH		D107	7	

Is continuity present?

YES >> GO TO 4

NO >> Repair the harness or connector.

4.CHECK TURN SIGNAL LAMP SHORT CIRCUIT


Check continuity between the BCM harness connector and the ground.

Connector	Terminal	—	Continuity
LH	M17	18	No
RH		17	
		Ground	

Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

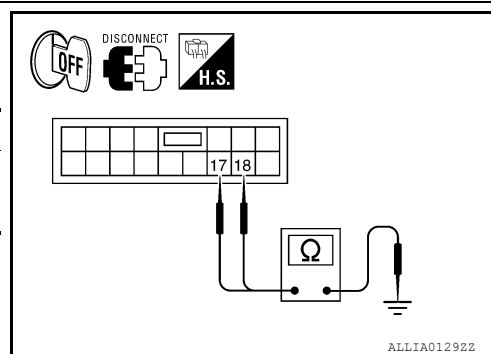

5.CHECK TURN SIGNAL LAMP GROUND CIRCUIT

- Check continuity between the front combination lamp harness connector and ground.

Connector	Terminal	—	Continuity
Front LH	E217	7	Yes
Front RH	E224		
		Ground	

- Check continuity between the rear combination lamp harness connector and ground.

Connector	Terminal	—	Continuity
Rear LH	B30	5	Yes
Rear RH	B45		
		Ground	

- Check continuity between the door mirror harness connector (if equipped with turn signal in mirrors) and ground.

Connector	Terminal	—	Continuity
Door mirror LH	D4	8	Yes
Door mirror RH	D107		
		Ground	

Is continuity present?

YES >> Replace the malfunctioning lamp.

NO >> Repair the harness or connector.

STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

STOP LAMP

Diagnosis Procedure (With CVT)

INFOID:000000007418465

Regarding Wiring Diagram information, refer to [EXL-173, "Wiring Diagram - Coupe"](#) or [EXL-178, "Wiring Diagram - Sedan"](#).

1.CHECK STOP LAMP OPERATION 1

Check stop lamp operation.

Are all stop lamps inoperative?

YES >> GO TO 2

NO-1 >> LH stop lamp only, GO TO 4

NO-2 >> RH stop lamp and/or high mounted stop lamp, GO TO 7

2.CHECK FUSE

1. Turn the ignition switch OFF.

2. Check fuse block J/B fuse 7 (10A) for an open.

Is the fuse open?

YES >> Replace the fuse after repairing the affected circuit.

NO >> GO TO 3

3.CHECK STOP LAMP SWITCH

Perform the stop lamp switch component inspection. Refer to [EXL-53, "Component Inspection \(Stop Lamp Switch\)"](#).

Is the inspection result normal?

YES >> Repair or replace the following:

- circuit between fuse block J/B and joint connector E07.
- circuit between joint connector E07 and stop lamp switch.
- circuit between stop lamp switch and joint connector E14.
- joint connector E07.
- joint connector E14.
- ground E15.

NO >> Replace stop lamp switch.

4.CHECK STOP LAMP RELAY-2

Perform the stop lamp relay-2 component inspection. Refer to [EXL-53, "Component Inspection \(Stop Lamp Relay\)"](#).

Is the inspection result normal?

YES >> GO TO 5

NO >> Replace stop lamp relay-2.

5.CHECK REAR COMBINATION LAMP LH VOLTAGE CIRCUIT

1. Connect stop lamp relay-2 connector.

2. Disconnect rear combination lamp LH connector.

3. Check voltage between rear combination lamp LH connector B30 terminal 1 and ground.

Rear combination lamp LH		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
B30	1	—	Brake pedal depressed	Battery voltage
			Brake pedal released	0V

Is the inspection result normal?

YES >> GO TO 6

NO >> Repair circuit between stop lamp relay-2 and rear combination lamp LH.

STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

6.CHECK REAR COMBINATION LAMP LH GROUND CIRCUIT

Check continuity between rear combination lamp LH connector B30 terminal 5 and ground.

Rear combination lamp LH		Ground	Continuity
Connector	Terminal		
B30	5	—	Yes

Is the inspection result normal?

YES >> Replace rear combination lamp LH. Refer to [EXL-217, "Removal and Installation"](#).

NO >> Repair rear combination lamp LH ground circuit.

7.CHECK STOP LAMP OPERATION 2

Check RH stop lamp and high mounted stop lamp operation.

Are both the RH stop lamp and high mounted stop lamp inoperative?

YES >> GO TO 8

NO-1 >> RH stop lamp only, GO TO 9

NO-2 >> high mounted stop lamp only, GO TO 11

8.CHECK STOP LAMP RELAY-1

Perform the stop lamp relay-1 component inspection. Refer to [EXL-53, "Component Inspection \(Stop Lamp Relay\)"](#).

Is the inspection result normal?

YES >> Repair or replace the following:

- circuit between stop lamp relay-1 and fuse block J/B.
- circuit between fuse block J/B and joint connector B03.
- joint connector B03.

NO >> Replace stop lamp relay-1.

9.CHECK REAR COMBINATION LAMP RH VOLTAGE CIRCUIT

1. Disconnect rear combination lamp RH connector.
2. Check voltage between rear combination lamp RH connector B45 terminal 1 and ground.

Rear combination lamp RH		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
B45	1	—	Brake pedal depressed	Battery voltage
			Brake pedal released	0V

Is the inspection result normal?

YES >> GO TO 10

NO >> Repair circuit between joint connector B06 and rear combination lamp RH.

10.CHECK REAR COMBINATION LAMP RH GROUND CIRCUIT

Check continuity between rear combination lamp RH connector B45 terminal 5 and ground.

Rear combination lamp RH		Ground	Continuity
Connector	Terminal		
B45	5	—	Yes

Is the inspection result normal?

YES >> Replace rear combination lamp RH. Refer to [EXL-217, "Removal and Installation"](#).

NO >> Repair rear combination lamp RH ground circuit.

11.CHECK HIGH MOUNTED STOP LAMP VOLTAGE CIRCUIT

1. Disconnect high mounted stop lamp connector B37 (sedan) or B401 (coupe).
2. Check voltage between high mounted stop lamp connector B37 (sedan) or B401 (coupe) terminal 1 and ground.

STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

High mounted stop lamp		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
B37 (sedan)	1	—	Brake pedal depressed	Battery voltage
B401 (coupe)			Brake pedal released	0V

Is the inspection result normal?

YES >> GO TO 12

NO >> Repair or replace the following:

- circuit between joint connector B06 and high mounted stop lamp.
- joint connector B08 (sedan with rear view monitor).

12.CHECK HIGH MOUNTED STOP LAMP GROUND CIRCUIT

Check continuity between high mounted stop lamp connector B37 (sedan without rear spoiler), B37 (sedan with rear spoiler) or B401 (coupe) terminal 2 and ground.

High mounted stop lamp		Ground	Continuity
Connector	Terminal		
B37 (sedan)	2	—	Yes
B401 (coupe)			

Is the inspection result normal?

YES >> Replace high mounted stop lamp. Refer to [EXL-214, "Removal and Installation"](#).

NO >> Repair high mounted stop lamp ground circuit.

Component Inspection (Stop Lamp Switch)

INFOID:0000000007418466

1.CHECK STOP LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch connector.
3. Check continuity between stop lamp switch terminals.

Stop lamp switch terminals	Condition	Continuity
1 – 2	Brake pedal depressed.	Yes
	Brake pedal released.	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace stop lamp switch.

Component Inspection (Stop Lamp Relay)

INFOID:0000000007418467

NOTE:


Stop lamp relay-1 and stop lamp relay-2 are located in the IPDM E/R.

1.CHECK STOP LAMP RELAY

1. Turn ignition switch OFF.
2. Disconnect stop lamp relay connector.
3. Apply battery voltage to stop lamp relay terminal 1 and ground to terminal 2.
4. Check continuity between stop lamp relay terminals 3 and 5.

Stop lamp relay terminals	Condition	Continuity
3 – 5	Battery voltage applied to terminal 1 and ground to terminal 2	Yes
	Voltage and ground removed	No

Is the inspection result normal?

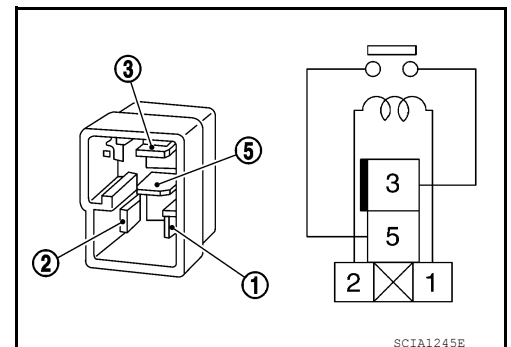

STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

YES >> Inspection End.
NO >> Replace stop lamp relay.

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

OPTICAL SENSOR

Description

INFOID:000000007418468

The optical sensor converts the outside brightness (lux) to voltage and transmits the optical sensor signal to the BCM.

Component Function Check

INFOID:000000007418469

1.CHECK OPTICAL SENSOR SIGNAL BY CONSULT

CONSULT

1. Turn the ignition switch ON.
2. Select "OPTICAL SENSOR" of BCM (HEAD LAMP) DATA MONITOR item.
3. Turn the lighting switch to AUTO.
4. With the optical sensor illuminating, check the monitor status.

Monitor item	Condition	Voltage
OPTICAL SENSOR	When illuminating	3.1V or more *
	When shutting off light	0.6V or less

*: Illuminates the optical sensor. The value may be less than the standard value if brightness is weak.

Is the item status normal?

- YES >> Optical sensor is normal.
NO >> Refer to [EXL-55, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000007418470

Regarding Wiring Diagram information, refer to [EXL-119, "Wiring Diagram - Coupe"](#) or [EXL-125, "Wiring Diagram - Sedan"](#).

1.CHECK OPTICAL SENSOR POWER SUPPLY INPUT


1. Turn the ignition switch ON.
2. Turn the lighting switch to AUTO.
3. Check the voltage between the optical sensor harness connector and ground.

(+) (V)		(-)	Voltage
Connector	Terminal		
M66	1	Ground	5V

Is the voltage reading as specified?

- YES >> GO TO 2
NO >> GO TO 4

2.CHECK OPTICAL SENSOR GROUND INPUT

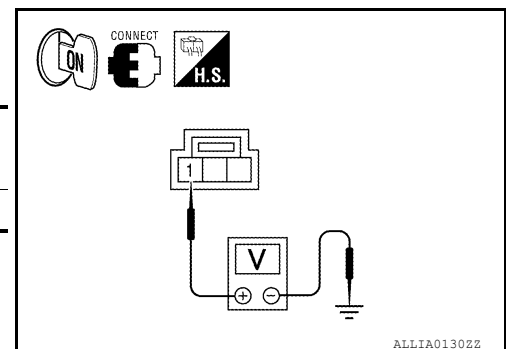

OPTICAL SENSOR


< DTC/CIRCUIT DIAGNOSIS >

Check the voltage between the optical sensor harness connector and ground.

(+)		(-)	Voltage
Connector	Terminal		
M66	3	Ground	Less than 0.2V

Is the voltage reading as specified?

YES >> GO TO 3
NO >> GO TO 6

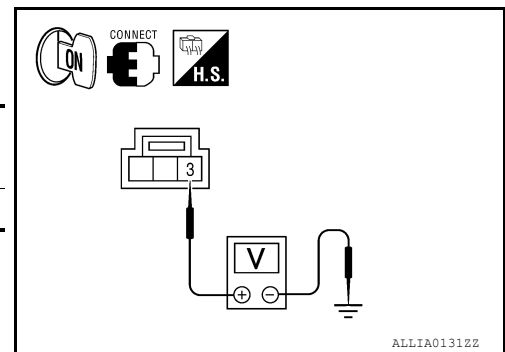

3.CHECK OPTICAL SENSOR SIGNAL OUTPUT


With the optical sensor illuminating, check voltage between the optical sensor harness connector and ground.

(+)		(-)	Condition	Voltage
Connector	Terminal			
M66	2	Ground	When illuminating	3.1V or more *
			When shutting off light	0.6V or less

*: Illuminate the optical sensor. The value may be less than the standard if brightness is weak.

Is the voltage reading as specified?

YES >> GO TO 7
NO >> Replace the optical sensor.

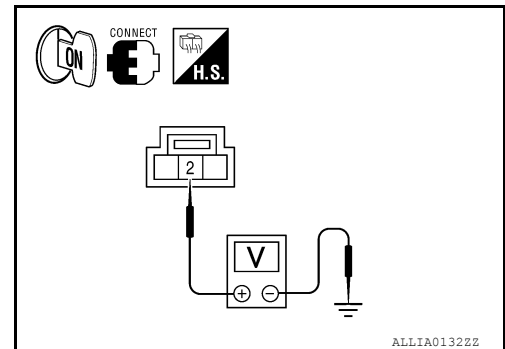


4.CHECK OPTICAL SENSOR POWER SUPPLY FOR OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the optical sensor connector and BCM connector M18.
3. Check continuity between the optical sensor harness connector (A) and the BCM harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M66	1	M18	46	Yes

Does continuity exist?

YES >> GO TO 5
NO >> Repair the harness or connector.

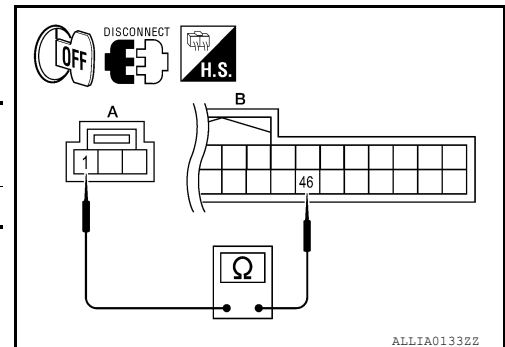


5.CHECK OPTICAL SENSOR POWER SUPPLY FOR SHORT CIRCUIT

Check the continuity between the optical sensor harness connector and the ground.

Connector	Terminal	—	Continuity
M66	1	Ground	No

Does continuity exist?

YES >> Repair the harness or connector.
NO >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

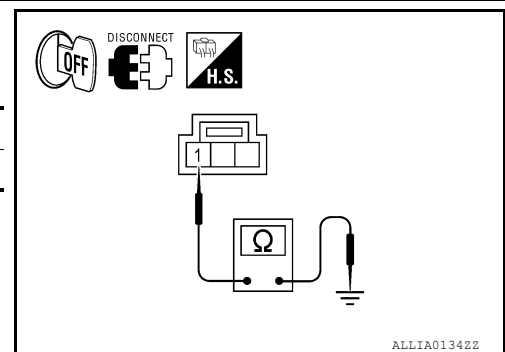

6.CHECK OPTICAL SENSOR GROUND FOR OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the optical sensor connector and BCM connector M18.

OPTICAL SENSOR


< DTC/CIRCUIT DIAGNOSIS >

- Check continuity between the optical sensor harness connector (A) and the BCM harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M66	3	M18	45	Yes

Does continuity exist?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
- NO >> Repair the harness or connector.

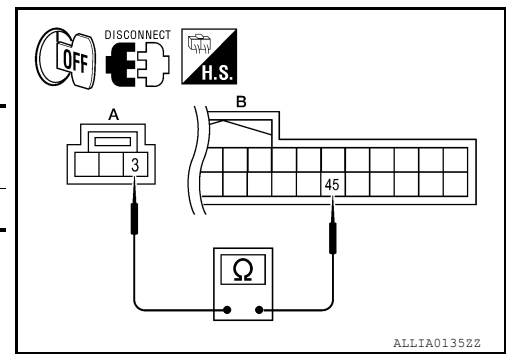


7.CHECK OPTICAL SENSOR SIGNAL FOR OPEN CIRCUIT

- Turn the ignition switch OFF.
- Disconnect the optical sensor connector and BCM connector M18.
- Check continuity between the optical sensor harness connector (A) and the BCM harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M66	2	M18	21	Yes

Does continuity exist?

- YES >> GO TO 8
- NO >> Repair the harness or connector.

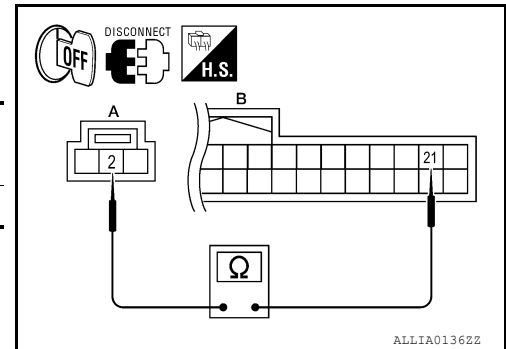


8.CHECK OPTICAL SENSOR SIGNAL FOR SHORT CIRCUIT

Check the continuity between the optical sensor harness connector and ground.

Connector	Terminal	—	Continuity
M66	2	Ground	No

Does continuity exist?

- YES >> Repair the harness or connector.
- NO >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

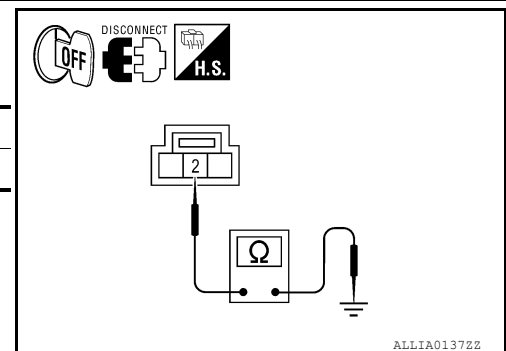

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

HAZARD SWITCH

Component Function Check

INFOID:000000007418473

1.CHECK HAZARD SWITCH SIGNAL BY CONSULT

CONSULT DATA MONITOR

1. Turn ignition switch ON.
2. Select "HAZARD SW" of BCM (FLASHER) data monitor item.
3. With operating the hazard switch, check the monitor status.

Monitor item	Condition		Monitor status
HAZARD SW	Hazard switch	ON	On
		OFF	Off

Is the measurement normal?

- YES >> Hazard switch circuit is normal.
NO >> Refer to [EXL-58, "Diagnosis Procedure"](#).


Diagnosis Procedure

INFOID:000000007418474

Regarding Wiring Diagram information, refer to [EXL-141, "Wiring Diagram - Coupe"](#) (coupe) or [EXL-149, "Wiring Diagram - Sedan"](#) (sedan).

1.CHECK HAZARD SWITCH SIGNAL INPUT

1. Turn ignition switch OFF.
2. Disconnect hazard switch connector.
3. Turn ignition switch ON.
4. Check voltage between hazard switch harness connector and ground.

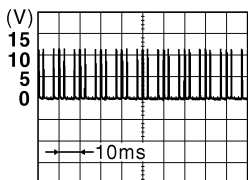(+)		(-)	Voltage (Approx.)
Hazard switch			
Connector	Terminal		
M54	2	Ground	<div></div> <div>JPMIA0154GB</div>

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 2.

2.CHECK HAZARD SWITCH SIGNAL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector M19.
3. Check continuity between hazard harness connector and BCM harness connector.

Hazard switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M54	2	M19	98	Yes

Is the inspection result normal?

- YES >> GO TO 3.

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness.

3.CHECK HAZARD SWITCH SIGNAL SHORT CIRCUIT

Check continuity between hazard switch harness connector and ground.

Hazard switch		Ground	Continuity
Connector	Terminal		
M54	2		No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

NO >> Repair or replace harness.

4.CHECK HAZARD SWITCH GROUND OPEN CIRCUIT

Check continuity between hazard switch harness connector and ground.

Hazard switch		Ground	Continuity
Connector	Terminal		
M54	1		Yes

Is the inspection result normal?

YES >> Replace hazard switch. Refer to [EXL-220. "Removal and Installation"](#).

NO >> Repair or replace harness.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000007630896

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	OFF
	Front wiper switch HI	ON
FR WIPER LOW	Other than front wiper switch LO	OFF
	Front wiper switch LO	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER INT	Other than front wiper switch INT	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Front wiper is not in STOP position	OFF
	Front wiper is in STOP position	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 6	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	OFF
	Turn signal switch RH	ON
TURN SIGNAL L	Other than turn signal switch LH	OFF
	Turn signal switch LH	ON
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	OFF
	Lighting switch 1ST or 2ND	ON
HI BEAM SW	Other than lighting switch HI	OFF
	Lighting switch HI	ON
HEAD LAMP SW 1	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
HEAD LAMP SW 2	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
AUTO LIGHT SW	Other than lighting switch AUTO	OFF
	Lighting switch AUTO	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
DOOR SW-DR	Driver door closed	OFF
	Driver door opened	ON
DOOR SW-AS	Passenger door closed	OFF
	Passenger door opened	ON
DOOR SW-RR	Rear RH door closed	OFF
	Rear RH door opened	ON
DOOR SW-RL	Rear LH door closed	OFF
	Rear LH door opened	ON

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
CDL LOCK SW	Other than power door lock switch LOCK	OFF	A
	Power door lock switch LOCK	ON	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	OFF	B
	Power door lock switch UNLOCK	ON	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	OFF	C
	Driver door key cylinder LOCK position	ON	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	OFF	D
	Driver door key cylinder UNLOCK position	ON	
HAZARD SW	When hazard switch is not pressed	OFF	E
	When hazard switch is pressed	ON	
REAR DEF SW	When rear window defogger switch is pressed	ON	F
FAN ON SIG	When AUTO switch or fan switch is pressed	ON	G
AIR COND SW	When A/C switch is pressed	ON	H
TR CANCEL SW	Trunk lid opener cancel switch OFF	OFF	I
	Trunk lid opener cancel switch ON	ON	
TR/BD OPEN SW	Trunk lid opener switch OFF	OFF	J
	While the trunk lid opener switch is turned ON	ON	
TRNK/HAT MNTR	Trunk lid closed	OFF	K
	Trunk lid opened	ON	
RKE-LOCK	When LOCK button of Intelligent Key is not pressed	OFF	EXL
	When LOCK button of Intelligent Key is pressed	ON	
RKE-UNLOCK	When UNLOCK button of Intelligent Key is not pressed	OFF	M
	When UNLOCK button of Intelligent Key is pressed	ON	
RKE-TR/BD	When TRUNK OPEN button of Intelligent Key is not pressed	OFF	N
	When TRUNK OPEN button of Intelligent Key is pressed	ON	
RKE-PANIC	When PANIC button of Intelligent Key is not pressed	OFF	O
	When PANIC button of Intelligent Key is pressed	ON	
RKE-P/W OPEN	When UNLOCK button of Intelligent Key is not pressed and held	OFF	P
	When UNLOCK button of Intelligent Key is pressed and held	ON	
RKE-MODE CHG	When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	OFF	
	When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	ON	
OPTICAL SENSOR	When outside of the vehicle is bright	Close to 5 V	
	When outside of the vehicle is dark	Close to 0 V	
REQ SW-DR	When driver door request switch is not pressed	OFF	
	When driver door request switch is pressed	ON	
REQ SW-AS	When passenger door request switch is not pressed	OFF	
	When passenger door request switch is pressed	ON	
REQ SW-BD/TR	When trunk request switch is not pressed	OFF	
	When trunk request switch is pressed	ON	
PUSH SW	When engine switch (push switch) is not pressed	OFF	
	When engine switch (push switch) is pressed	ON	
IGN RLY -F/B	Ignition switch OFF or ACC	OFF	
	Ignition switch ON	ON	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
ACC RLY -F/B	Ignition switch OFF	OFF
	Ignition switch ACC or ON	ON
CLUTCH SW	When the clutch pedal is not depressed	OFF
	When the clutch pedal is depressed	ON
BRAKE SW 1	When the brake pedal is not depressed	ON
	When the brake pedal is depressed	OFF
DETE/CANCL SW	When selector lever is in P position	OFF
	When selector lever is in any position other than P	ON
SFT PN/N SW	When selector lever is in any position other than P or N	OFF
	When selector lever is in P or N position	ON
S/L -LOCK	Electronic steering column lock LOCK status	OFF
	Electronic steering column lock UNLOCK status	ON
S/L -UNLOCK	Electronic steering column lock UNLOCK status	OFF
	Electronic steering column lock LOCK status	ON
S/L RELAY-F/B	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
UNLK SEN-DR	Driver door UNLOCK status	OFF
	Driver door LOCK status	ON
PUSH SW -IPDM	When engine switch (push switch) is not pressed	OFF
	When engine switch (push switch) is pressed	ON
IGN RLY1 F/B	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
DETE SW -IPDM	When selector lever is in P position	OFF
	When selector lever is in any position other than P	ON
SFT PN -IPDM	When selector lever is in any position other than P or N	OFF
	When selector lever is in P or N position	ON
SFT P -MET	When selector lever is in any position other than P	OFF
	When selector lever is in P position	ON
SFT N -MET	When selector lever is in any position other than N	OFF
	When selector lever is in N position	ON
ENGINE STATE	Engine stopped	STOP
	While the engine stalls	STALL
	At engine cranking	CRANK
	Engine running	RUN
S/L LOCK-IPDM	Electronic steering column lock LOCK status	OFF
	Electronic steering column lock UNLOCK status	ON
S/L UNLCK-IPDM	Electronic steering column lock UNLOCK status	OFF
	Electronic steering column lock LOCK status	ON
S/L RELAY-REQ	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


Monitor Item	Condition	Value/Status	
DR DOOR STATE	Driver door LOCK status	LOCK	A
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Driver door UNLOCK status	UNLK	B
AS DOOR STATE	Passenger door LOCK status	LOCK	
	Wait with selective UNLOCK operation (5 seconds)	READY	C
	Passenger door UNLOCK status	UNLK	
ID OK FLAG	Ignition switch ACC or ON	RESET	
	Ignition switch OFF	SET	D
PRMT ENG STAT	When the engine start is prohibited	RESET	
	When the engine start is permitted	SET	
KEY SW -SLOT	When Intelligent Key is not inserted into key slot	OFF	E
	When Intelligent Key is inserted into key slot	ON	
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key	F
AIR PRESS FL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front LH tire	
AIR PRESS FR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front RH tire	G
AIR PRESS RR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear RH tire	
AIR PRESS RL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear LH tire	H
ID REGST FL1	When ID of front LH tire transmitter is registered	DONE	
	When ID of front LH tire transmitter is not registered	YET	I
ID REGST FR1	When ID of front RH tire transmitter is registered	DONE	
	When ID of front RH tire transmitter is not registered	YET	J
ID REGST RR1	When ID of rear RH tire transmitter is registered	DONE	
	When ID of rear RH tire transmitter is not registered	YET	
ID REGST RL1	When ID of rear LH tire transmitter is registered	DONE	K
	When ID of rear LH tire transmitter is not registered	YET	
WARNING LAMP	Tire pressure indicator OFF	OFF	EXL
	Tire pressure indicator ON	ON	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal Layout

INFOID:000000007630897

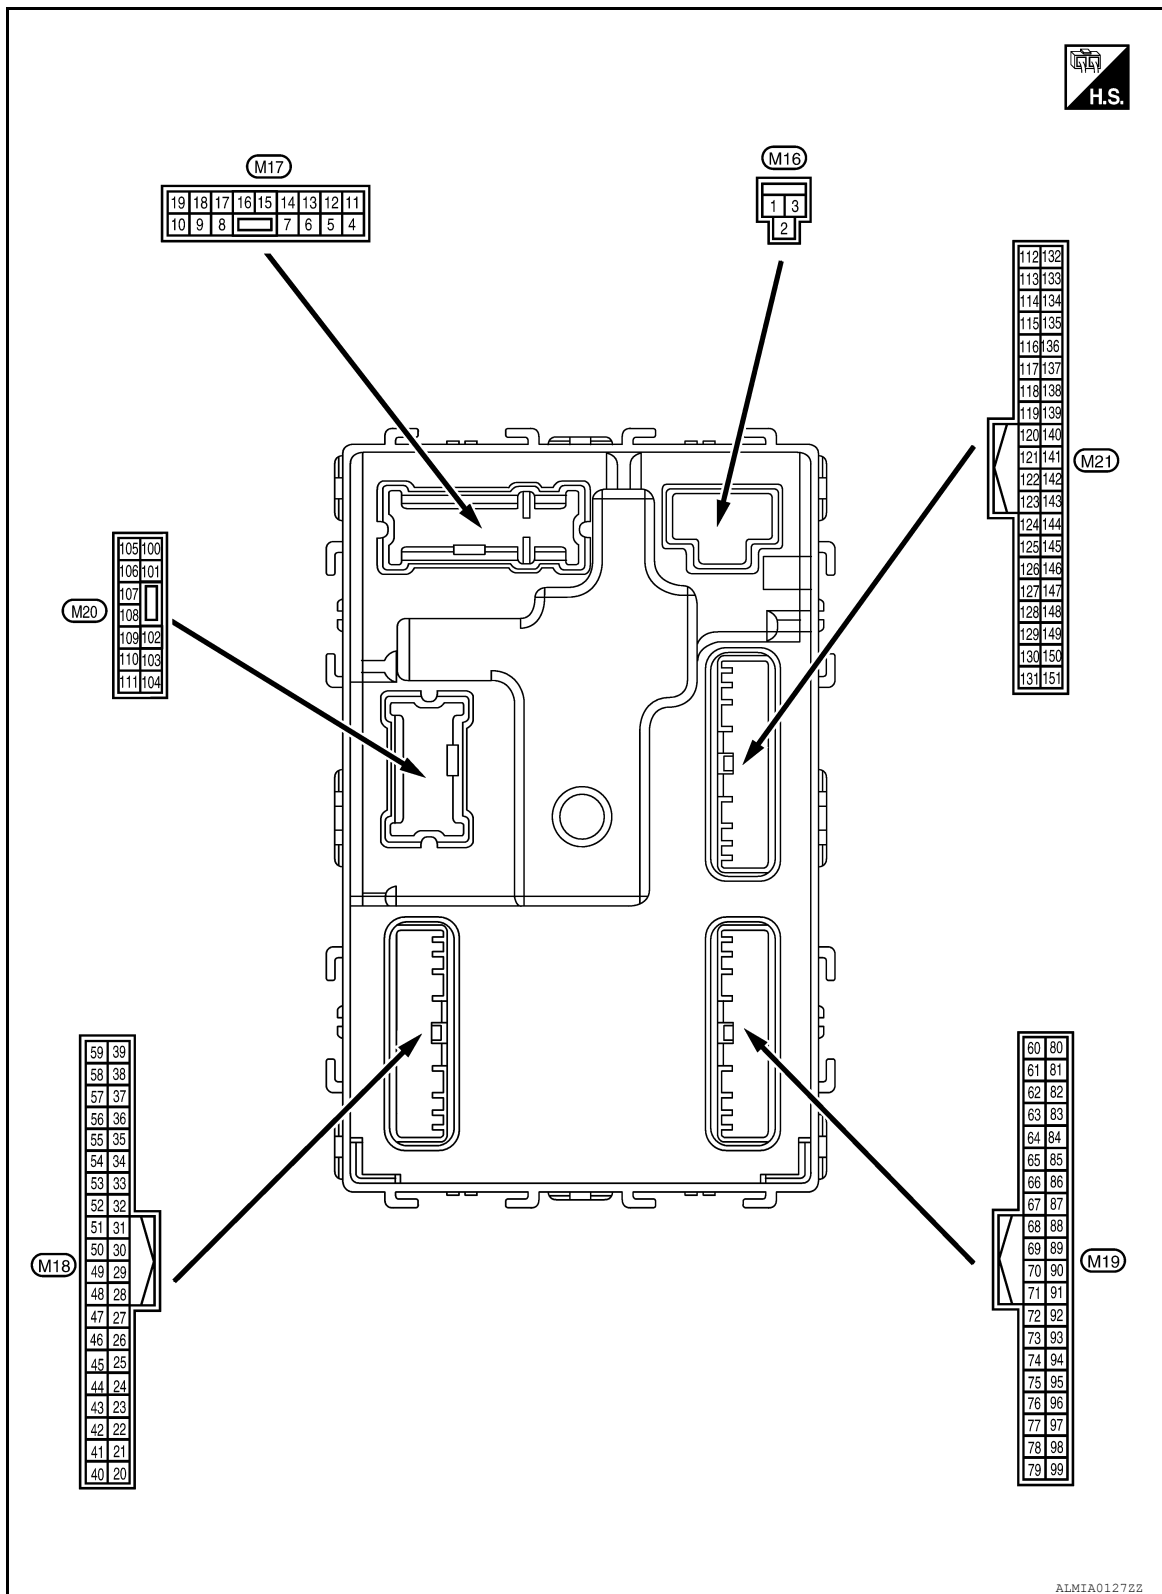


Physical Values

INFOID:000000007630898

BCM (BODY CONTROL MODULE)




< ECU DIAGNOSIS INFORMATION >

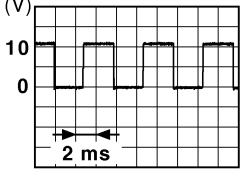Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
1 (W/B)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R/Y)	Ground	Battery power supply output	Output	Ignition switch OFF		Battery voltage
3 (L/W)	Ground	Ignition power supply output	Output	Ignition switch ON		Battery voltage
4 (P/W)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
5 (G/Y)	Ground	Front door RH UNLOCK	Output	Front door RH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
7 (R/W)	Ground	Step lamp	Output	Step lamp	ON	0V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (actuator is activated)	Battery voltage
					Other than LOCK (actuator is not activated)	0V
9 (G)	Ground	Front door LH UNLOCK	Output	Front door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
10 ¹ (G/Y)	Ground	Rear door RH and rear door LH UNLOCK	Output	Rear door RH and rear door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
11 (Y/R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0V
14 ¹ (O/W)	Ground	Engine switch (push switch) illumination ground	Input	Tail lamp	OFF	0V
					ON	NOTE: When the illumination brightening/dimming level is in the neutral position 

JSNIA0010GB




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

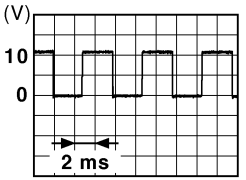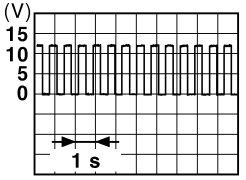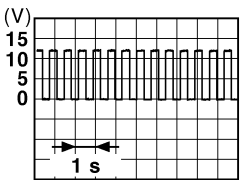Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
14 ⁸ (R/Y)	Ground	Engine switch (push switch) illumination ground	Input	Tail lamp	OFF	0V
					ON	NOTE: When the illumination brightening/dimming level is in the neutral position  <small>JSNIA0010GB</small>
15 (Y/L)	Ground	ACC indicator lamp	Output	Ignition switch	OFF	Battery voltage
					ACC	0V
17 (G/B)	Ground	Turn signal (RH)	Output	Ignition switch ON	Turn signal switch OFF	0V
					Turn signal switch RH	 <small>PKID0926E</small> 6.5 V
18 (G/Y)	Ground	Turn signal (LH)	Output	Ignition switch ON	Turn signal switch OFF	0V
					Turn signal switch LH	 <small>PKID0926E</small> 6.5 V
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	Battery voltage
					ON	0V
21 (P/B)	Ground	Optical sensor signal	Input	Ignition switch ON	When outside of the vehicle is bright	Close to 5V
					When outside of the vehicle is dark	Close to 0V
22 ² (R/Y)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (clutch pedal is not depressed)	0V
					ON (clutch pedal is depressed)	Battery voltage
24 (R/W)	Ground	Stop lamp switch 1	Input	—	—	Battery voltage
26 (O/L)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (brake pedal is not depressed)	0V
					ON (brake pedal is depressed)	Battery voltage


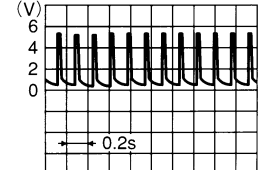
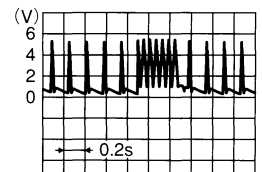
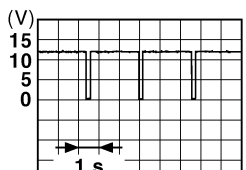
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

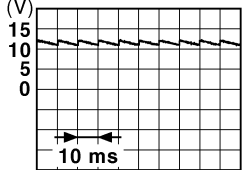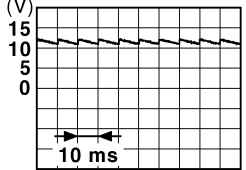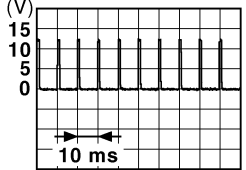Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
27 (G/W)	Ground	Front door lock as- sembly LH (unlock sensor)	Input	Front door LH	LOCK status	 11.8V
					UNLOCK status	0V
29 (Y)	Ground	Key slot switch	Input	When Intelligent Key is inserted into key slot		Battery voltage
				When Intelligent Key is not inserted into key slot		0V
30 (V/Y)	Ground	ACC feedback signal	Input	Ignition switch	OFF	0
					ACC or ON	Battery voltage
31 (G)	Ground	Rear window defog- ger feedback signal	Input	Rear window de- fogger switch	OFF	0V
					ON	Battery voltage
32 (R/B)	Ground	Front door RH switch	Input	Front door RH switch	OFF (when front door RH closes)	 11.8 V
					ON (when front door RH opens)	0V
33 (SB)	Ground	Compressor ON sig- nal	Input	A/C switch	OFF	9V - 12V
					ON	0V
34 ³ (L/R)	Ground	Front door lock as- sembly LH (key cylin- der switch) (unlock)	Input	Front door lock assembly LH (key cylinder switch)	OFF (neutral)	Battery voltage
					ON (unlock)	0V
36 ³ (GR)	Ground	Lock switch signal	Input	Door lock/unlock switch	Lock	Battery voltage
					Unlock	0V
37 (O)	Ground	Trunk lid opener can- cel switch	Input	Trunk lid opener cancel switch	CANCEL	 1.1V
					ON	0V
38 (GR/ W)	Ground	Rear window defog- ger ON signal	Input	Rear window de- fogger switch	OFF	Battery voltage
					ON	0V
39 ³ (GR/ R)	Ground	Unlock switch signal	Input	Door lock/unlock switch	Unlock	Battery voltage
					Lock	0V




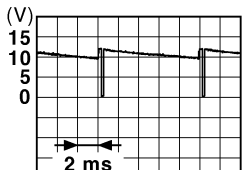
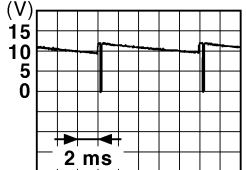
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
40 ⁴ (Y/G)	Ground	Power window serial link	Input/ Output	Ignition switch ON		 JPMIA0013GB 10.2V
				Ignition switch OFF or ACC		0V
41 (W)	Ground	Engine switch (push switch) illumination	Output	Engine switch (push switch) illumination	ON	5.5V
					OFF	0V
42 (R)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	ON	0V
					OFF	Battery voltage
45 (P)	Ground	Receiver & sensor ground	Input	Ignition switch ON		0V
46 (V/W)	Ground	Receiver & sensor power supply output	Output	Ignition switch	OFF	0V
					ACC or ON	5.0V
47 (G/O)	Ground	Tire pressure receiver signal	Input/ Output	Ignition switch ON	Standby state	 OCC3881D
					When receiving the signal from the transmitter	 OCC3880D
48 (R/G)	Ground	Selector lever P/N position signal	Input	Selector lever	P or N position	12.0V
					Except P and N positions	0V
49 (L/O)	Ground	Security indicator signal	Output	Security indicator	ON	0V
					Blinking	 JPMIA0014GB 11.3V
					OFF	Battery voltage






BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

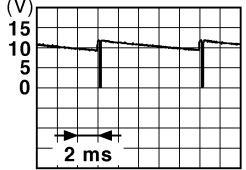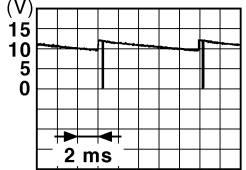Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
50 (LG/ B)	Ground	Combination switch OUTPUT 5	Input	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0V
					Lighting switch 1ST	 <p>JPMIA0031GB</p>
					Lighting switch high-beam	
					Lighting switch 2ND	
					Turn signal switch RH	10.7V
51 (L/W)	Ground	Combination switch OUTPUT 1	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	0V
					Front wiper switch HI (Wiper intermittent dial 4)	 <p>JPMIA0032GB</p>
					Any of the conditions below with all switch OFF	
					• Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7	
						10.7V
52 (G/B)	Ground	Combination switch OUTPUT 2	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	0V
					Front washer switch ON (Wiper intermittent dial 4)	 <p>JPMIA0033GB</p>
					Any of the conditions below with all switch OFF	
					• Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6	
						10.7V
53 (LG/ R)	Ground	Combination switch OUTPUT 3	Input	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0V
					Front wiper switch INT	 <p>JPMIA0034GB</p>
					Front wiper switch LO	
					Lighting switch AUTO	
						10.7V
54 (G/Y)	Ground	Combination switch OUTPUT 4	Input	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0V
					Front fog lamp switch ON	 <p>JPMIA0035GB</p>
					Lighting switch 2ND	
					Lighting switch flash-to- pass	
					Turn signal switch LH	10.7V
55 (BR/ W)	Ground	Front blower monitor	Input	Front blower mo- tor switch	ON	Battery voltage
					OFF	0V





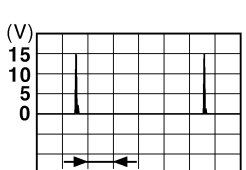

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

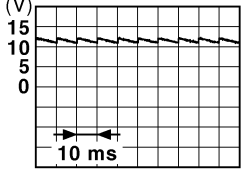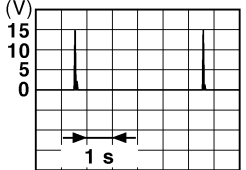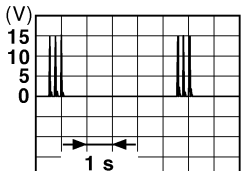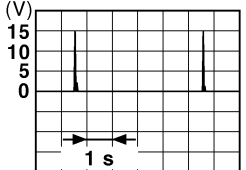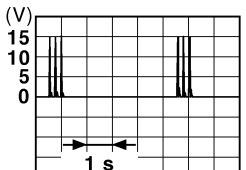Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
56 ³ (L/B)	Ground	Front door lock as- sembly LH (key cylin- der switch) (lock)	Input	Front door lock as- sembly LH (key cylinder switch)	OFF (neutral)	Battery voltage
					ON (lock)	0V
57 (W)	Ground	Tire pressure warn- ing check switch	Input	—		Battery voltage
58 (S/B)	Ground	Front door LH switch	Input	Front door LH switch	OFF (front door LH CLOSE)	 11.8V
					ON (front door LH OPEN)	0V
59 (G/R)	Ground	Rear window defog- ger relay	Output	Rear window de- fogger	Active	Battery voltage
					Not activated	0V
60 (B/R)	Ground	Front console anten- na 2 (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	
					When Intelligent Key is not in the passenger compart- ment	
61 (W/R)	Ground	Center console an- tenna 2 (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	
					When Intelligent Key is not in the passenger compart- ment	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

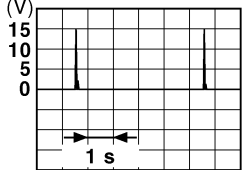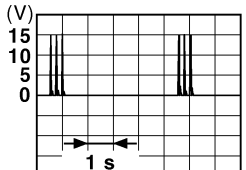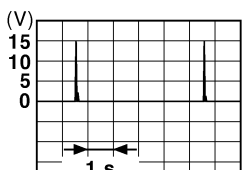Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
62 (B/Y)	Ground	Front outside handle RH antenna (-)	Output	When the front door RH request switch is operat- ed with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>
63 (LG)	Ground	Front outside handle RH antenna (+)	Output	When the front door RH request switch is operat- ed with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>
64 (V)	Ground	Front outside handle LH antenna (-)	Output	When the front door LH request switch is operat- ed with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>

A

B

C

D

E

F

G

H

I

J

K

EXL

M





N

O

P




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

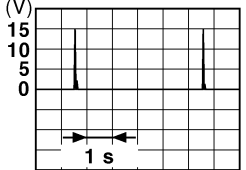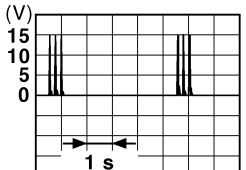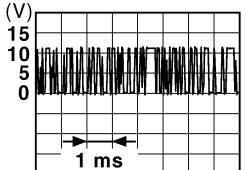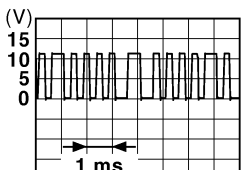Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
65 (P)	Ground	Front outside handle LH antenna (+)	Output	When the front door LH request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
68 (G/O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
69 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
70 (R/B)	Ground	Ignition relay-2 con- trol	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
71 (L/O)	Ground	Remote keyless entry receiver signal	Input/ Output	During waiting		 JMKIA0064GB
				When operating either button on Intelligent Key		 JMKIA0065GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

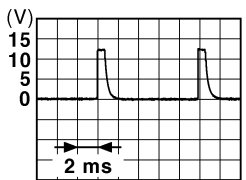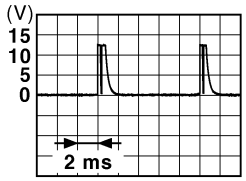
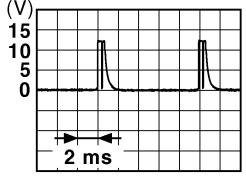

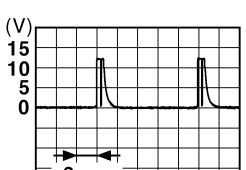
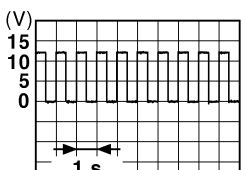
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
75 (R/Y)	Ground	Combination switch INPUT 5	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 1.4V
					Front fog lamp switch ON (Wiper intermittent dial 4)	 1.3V
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7	 1.3V

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

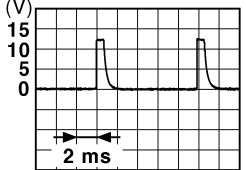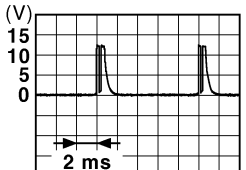Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
76 (R/G)	Ground	Combination switch INPUT 3	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 1.4V
					Lighting switch high-beam (Wiper intermittent dial 4)	 1.3V
					Lighting switch 2ND (Wiper intermittent dial 4)	 1.3V
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 	 1.3V
77 (BR)	Ground	Engine switch (push switch)	Input	Engine switch (push switch)	Pressed	0V
					Not pressed	Battery voltage
78 (P)	Ground	CAN-L	Input/ Output	—	—	—
79 (L)	Ground	CAN-H	Input/ Output	—	—	—
80 (R/L)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	0V
					Blinking	 6.5V
					ON	Battery voltage



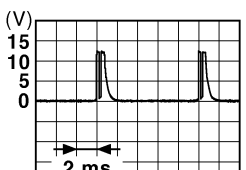
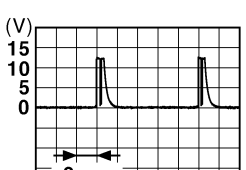
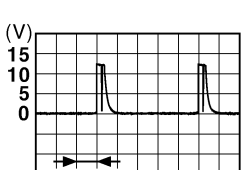
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

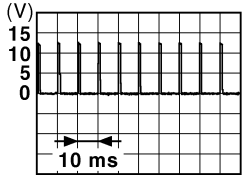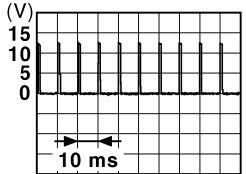Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
81 (LG)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V
83 (L)	Ground	ACC relay-1 control	Output	Ignition switch	OFF	0V
					ACC or ON	Battery voltage
84 ⁵ (Y/R)	Ground	CVT shift selector	Output	—		Battery voltage
85 (L/O)	Ground	Electronic steering column lock condition No. 1	Input	Electronic steer- ing column lock	Lock status	0V
					Unlock status	Battery voltage
86 (G/R)	Ground	Electronic steering column lock condition No. 2	Input	Electronic steer- ing column lock	Lock status	Battery voltage
					Unlock status	0V
87 ⁵ (G/B)	Ground	Selector lever P posi- tion switch	Input	Selector lever	P position	0V
					Any position other than P	Battery voltage
88 (P/L)	Ground	Front door RH re- quest switch	Input	Front door RH re- quest switch	ON (pressed)	0V
					OFF (not pressed)	 1.0V
89 (B/W)	Ground	Front door LH re- quest switch	Input	Front door LH re- quest switch	ON (pressed)	0V
					OFF (not pressed)	 1.0V
90 (Y)	Ground	Blower fan motor re- lay control	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
91 (L/R)	Ground	Remote keyless entry receiver power sup- ply	Output	Ignition switch OFF		Battery voltage
94 (G/Y)	Ground	Electronic steering column lock power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

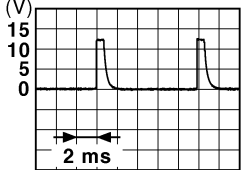Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
95 (R/W)	Ground	Combination switch INPUT 1	Output	Combination switch (Wiper intermit- tent dial 4)	 <p>1.4V</p>
					 <p>1.3V</p>
					 <p>1.3V</p>
					 <p>1.3V</p>
					 <p>1.3V</p>

BCM (BODY CONTROL MODULE)



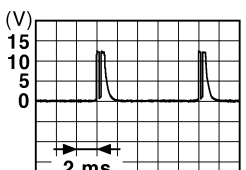
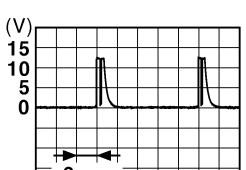
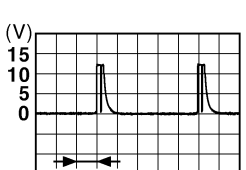
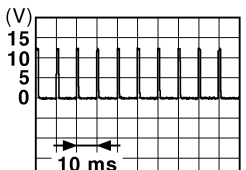
< ECU DIAGNOSIS INFORMATION >

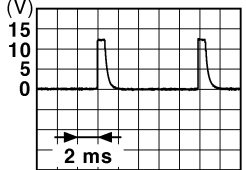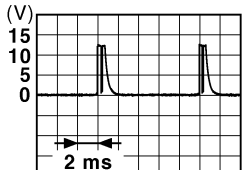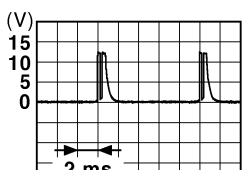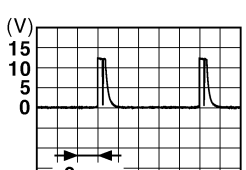Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
96 (P/B)	Ground	Combination switch INPUT 4	Output	Combination switch	<p>All switch OFF (Wiper intermittent dial 4)</p>  <p>1.4V</p>
					<p>Lighting switch AUTO (Wiper intermittent dial 4)</p>  <p>1.3V</p>
					<p>Lighting switch 1ST (Wiper intermittent dial 4)</p>  <p>1.3V</p>
					<p>Any of the conditions below with all switch OFF</p> <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6  <p>1.3V</p>

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

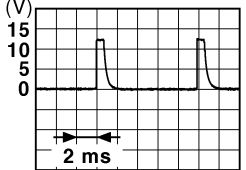Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
97 (R/B)	Ground	Combination switch INPUT 2	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 <p>JPMIA0041GB</p> <p>1.4V</p>
					Lighting switch flash-to-pass	 <p>JPMIA0037GB</p> <p>1.3V</p>
					Lighting switch 2ND	 <p>JPMIA0036GB</p> <p>1.3V</p>
					Front wiper switch INT	 <p>JPMIA0038GB</p> <p>1.3V</p>
					Front wiper switch HI	 <p>JPMIA0040GB</p> <p>1.3V</p>
98 (G/O)	Ground	Hazard switch	Input	Hazard switch	Pressed	0 V
					Not pressed	 <p>JPMIA0012GB</p> <p>1.1V</p>







BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

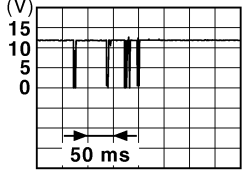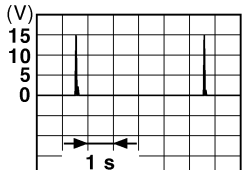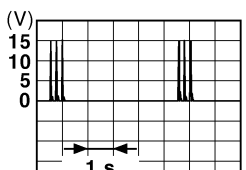Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
99 (L/Y)	Ground	Electronic steering column lock unit com- munication	Input/ Output	Electronic steer- ing column lock	LOCK status	Battery voltage
					LOCK or UNLOCK	 JMKIA0066GB
					For 15 seconds after UN- LOCK	Battery voltage
					15 seconds or later after UNLOCK	0V
103 (V)	Ground	Trunk lid opening	Output	Trunk lid	Open (trunk lid opener ac- tuator is activated)	Battery voltage
					Close (trunk lid opener ac- tuator is not activated)	0V
110 (V/W)	Ground	Trunk room lamp	Output	Trunk room lamp	ON	0V
					OFF	Battery voltage
114 (B)	Ground	Trunk room antenna 1 (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

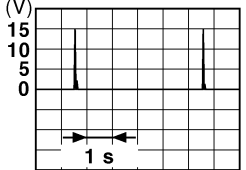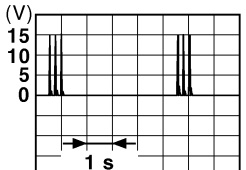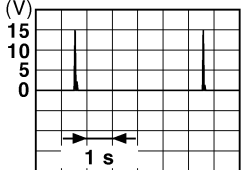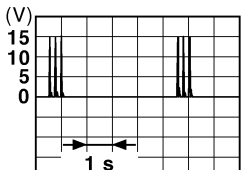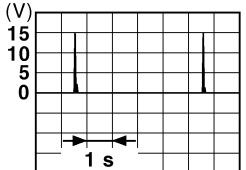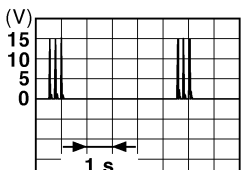Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
115 (W)	Ground	Trunk room antenna 1 (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB
118 (L/O)	Ground	Rear bumper anten- na (-)	Output	When the trunk lid request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
119 (BR/ W)	Ground	Rear bumper anten- na (+)	Output	When the trunk lid request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

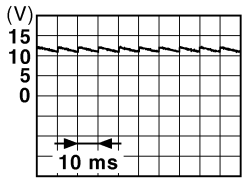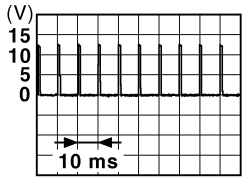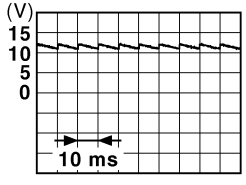Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
127 (BR/ W)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V
130 (Y/G)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (trunk is closed)	 JPMIA0011GB 11.8V
					ON (trunk is open)	0V
132 (R)	Ground	Starter motor relay control	Output	Ignition switch OFF (M/T vehi- cle)	When the clutch pedal is depressed	Battery voltage
					When the clutch pedal is not depressed	0V
				Ignition switch ON (other than M/ T vehicle)	When selector lever is in P or N position and the brake is depressed	Battery voltage
					When selector lever is in P or N position and the brake is not depressed	0V
141 (G/R)	Ground	Trunk request switch	Input	Trunk request switch	ON (pressed)	0V
					OFF (not pressed)	 JPMIA0016GB 1.0V
144 (GR)	Ground	Request switch buzz- er	Output	Request switch buzzer	Sounding	0V
					Not sounding	Battery voltage
147 (L/R)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0V
					Not pressed	Battery voltage
148 ¹ (R/W)	Ground	Rear door RH switch	Input	Rear door RH switch	OFF (when rear door RH closes)	 JPMIA0011GB 11.8V
					ON (when rear door RH opens)	0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

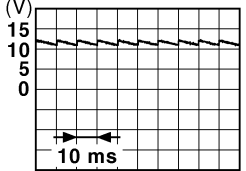Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
149 ¹ (R/B)	Ground	Rear door LH switch	Input	Rear door LH switch	OFF (when rear door LH closes)	 JPMIA0011GB 11.8V
					ON (when rear door LH opens)	0V

1: Sedan only

2: M/T only

3: With LH front window anti-pinch

4: With LH and RH front window anti-pinch.

5: CVT only

6: With auto lights

7: With low tire pressure warning system

8: Coupe only

Fail Safe

INFOID:000000007630899

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	Inhibit electronic steering column lock	When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> Starter control relay signal Starter relay status signal
B2562: LO VOLTAGE	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit electronic steering column lock 	100 ms after the power supply voltage increases to more than 8.8 V
B2601: SHIFT POSITION	Inhibit electronic steering column lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> Selector lever P position switch signal P range signal (CAN)
B2602: SHIFT POSITION	Inhibit electronic steering column lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P position switch signal: Except P position (battery voltage) Vehicle speed: 4 /h or more

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2603: SHIFT POSI STATUS	Inhibit electronic steering column lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P position switch signal: Except P position (battery voltage) Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit electronic steering column lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> Status 1 <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P/N position signal: P and N position (battery voltage) P range signal or N range signal (CAN): ON Status 2 <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P/N position signal: Except P and N positions (0 V) P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit electronic steering column lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> Status 1 <ul style="list-style-type: none"> Ignition switch is in the ON position Power position: IGN Selector lever P/N position signal: Except P and N positions (0 V) Interlock/transmission switch signal (CAN): OFF Status 2 <ul style="list-style-type: none"> Ignition switch is in the ON position Selector lever P/N position signal: P or N position (battery voltage) transmission switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> Electronic steering column lock relay signal (Request signal) Electronic steering column lock relay signal (Condition signal)
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> Electronic steering column lock relay signal (Request signal) Electronic steering column lock relay signal (Condition signal)
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> Starter motor relay control signal Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit electronic steering column lock 	When the following electronic steering column lock conditions agree <ul style="list-style-type: none"> BCM electronic steering column lock control status Electronic steering column lock condition No. 1 signal status Electronic steering column lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> IGN relay (IPDM E/R) control signal: OFF (Battery voltage) Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions is fulfilled <ul style="list-style-type: none"> Power position changes to ACC Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit electronic steering column lock 	When any of the following conditions is fulfilled <ul style="list-style-type: none"> Electronic steering column lock unit status signal (CAN) is received normally The BCM electronic steering column lock control status matches the electronic steering column lock status recognized by the electronic steering column lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the electronic steering column lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E1: ENG STATE NO RECIV	Inhibit engine cranking	When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B26E8: CLUTCH SW	Inhibit engine cranking	When any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Clutch switch signal (CAN from ECM): ON - Clutch interlock switch signal: OFF (0 V) • Status 2 <ul style="list-style-type: none"> - Clutch switch signal (CAN from ECM): OFF - Clutch interlock switch signal: OFF (Battery voltage)
B26E9: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit electronic steering column lock 	When BCM transmits the LOCK request signal to the steering lock unit and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> • Steering condition No 1 signal: LOCK (0V) • Steering condition No 2 signal: LOCK (Battery voltage)

DTC Inspection Priority Chart

INFOID:000000007630900

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> • B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI SCANNING

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Priority	DTC	
4	• B2013: ID DISCORD BCM-S/L	A
	• B2014: CHAIN OF S/L-BCM	
	• B2553: IGNITION RELAY	
	• B2555: STOP LAMP	B
	• B2556: PUSH-BTN IGN SW	
	• B2557: VEHICLE SPEED	
	• B2560: STARTER CONT RELAY	
	• B2601: SHIFT POSITION	C
	• B2602: SHIFT POSITION	
	• B2603: SHIFT POSI STATUS	
	• B2604: PNP SW	
	• B2605: PNP SW	D
	• B2606: S/L RELAY	
	• B2607: S/L RELAY	
	• B2608: STARTER RELAY	
	• B2609: S/L STATUS	E
	• B260A: IGNITION RELAY	
	• B260B: STEERING LOCK UNIT	
	• B260C: STEERING LOCK UNIT	F
	• B260D: STEERING LOCK UNIT	
	• B260F: ENG STATE SIG LOST	
	• B2611: ACC RELAY	
	• B2612: S/L STATUS	G
	• B2614: ACC RELAY CIRC	
	• B2615: BLOWER RELAY CIRC	
	• B2616: IGN RELAY CIRC	
	• B2617: STARTER RELAY CIRC	H
	• B2618: BCM	
	• B2619: BCM	
	• B261A: PUSH-BTN IGN SW	
	• B261E: VEHICLE TYPE	I
	• B26E1: ENG STATE NO RECIV	
	• B26E8: CLUTCH SW	
	• B26E9: S/L STATUS	J
	• B26EA: KEY REGISTRATION	
	• C1729: VHCL SPEED SIG ERR	
	• U0415: VEHICLE SPEED SIG	
5	• C1704: LOW PRESSURE FL	K
	• C1705: LOW PRESSURE FR	
	• C1706: LOW PRESSURE RR	
	• C1707: LOW PRESSURE RL	
	• C1708: [NO DATA] FL	EXL
	• C1709: [NO DATA] FR	
	• C1710: [NO DATA] RR	
	• C1711: [NO DATA] RL	
	• C1712: [CHECKSUM ERR] FL	M
	• C1713: [CHECKSUM ERR] FR	
	• C1714: [CHECKSUM ERR] RR	
	• C1715: [CHECKSUM ERR] RL	
	• C1716: [PRESSDATA ERR] FL	N
	• C1717: [PRESSDATA ERR] FR	
	• C1718: [PRESSDATA ERR] RR	
	• C1719: [PRESSDATA ERR] RL	O
	• C1720: [CODE ERR] FL	
	• C1721: [CODE ERR] FR	
	• C1722: [CODE ERR] RR	
	• C1723: [CODE ERR] RL	P
	• C1724: [BATT VOLT LOW] FL	
	• C1725: [BATT VOLT LOW] FR	
	• C1726: [BATT VOLT LOW] RR	
	• C1727: [BATT VOLT LOW] RL	
	• C1734: CONTROL UNIT	
6	• B2622: INSIDE ANTENNA	
	• B2623: INSIDE ANTENNA	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

DTC Index

INFOID:000000007630901

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	BCS-32
U1010: CONTROL UNIT (CAN)	—	—	—	BCS-33
U0415: VEHICLE SPEED SIG	—	—	—	BCS-34
B2013: ID DISCORD BCM-S/L	×	—	—	SEC-36 (Coupe), SEC-250 (Sedan)
B2014: CHAIN OF S/L-BCM	×	—	—	SEC-37 (Coupe), SEC-251 (Sedan)
B2190: NATS ANTENNA AMP	×	—	—	SEC-65 (Coupe), SEC-281 (Sedan)
B2191: DIFFERENCE OF KEY	×	—	—	SEC-69 (Coupe), SEC-285 (Sedan)
B2192: ID DISCORD BCM-ECM	×	—	—	SEC-70 (Coupe), SEC-286 (Sedan)
B2193: CHAIN OF BCM-ECM	×	—	—	SEC-71 (Coupe), SEC-287 (Sedan)
B2195: ANTI-SCANNING	—	—	—	SEC-72
B2553: IGNITION RELAY	—	—	—	PCS-59
B2555: STOP LAMP	—	—	—	SEC-73 (Coupe), SEC-289 (Sedan)
B2556: PUSH-BTN IGN SW	—	×	—	SEC-78 (Coupe), SEC-294 (Sedan)
B2557: VEHICLE SPEED	×	×	—	SEC-80 (Coupe), SEC-296 (Sedan)
B2560: STARTER CONT RELAY	×	×	—	SEC-81 (Coupe), SEC-297 (Sedan)
B2562: LOW VOLTAGE	—	—	—	BCS-35
B2601: SHIFT POSITION	×	×	—	SEC-82 (Coupe), SEC-298 (Sedan)
B2602: SHIFT POSITION	×	×	—	SEC-86 (Coupe), SEC-302 (Sedan)
B2603: SHIFT POSI STATUS	×	×	—	SEC-89 (Coupe), SEC-305 (Sedan)
B2604: PNP SW	×	×	—	SEC-92 (Coupe), SEC-308 (Sedan)
B2605: PNP SW	×	×	—	SEC-94 (Coupe), SEC-310 (Sedan)
B2606: S/L RELAY	×	×	—	SEC-96 (Coupe), SEC-312 (Sedan)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2607: S/L RELAY	×	×	—	SEC-97 (Coupe), SEC-313 (Sedan)
B2608: STARTER RELAY	×	×	—	SEC-99 (Coupe), SEC-315 (Sedan)
B2609: S/L STATUS	×	×	—	SEC-101 (Coupe), SEC-317 (Sedan)
B260A: IGNITION RELAY	×	×	—	PCS-61
B260B: STEERING LOCK UNIT	—	×	—	SEC-106 (Coupe), SEC-322 (Sedan)
B260C: STEERING LOCK UNIT	—	×	—	SEC-107 (Coupe), SEC-323 (Sedan)
B260D: STEERING LOCK UNIT	—	×	—	SEC-108 (Coupe), SEC-324 (Sedan)
B260F: ENG STATE SIG LOST	×	×	—	SEC-109 (Coupe), SEC-325 (Sedan)
B2611: ACC RELAY	—	—	—	PCS-62
B2612: S/L STATUS	×	×	—	SEC-110 (Coupe), SEC-331 (Sedan)
B2614: ACC RELAY CIRC	—	×	—	PCS-64
B2615: BLOWER RELAY CIRC	—	×	—	PCS-67
B2616: IGN RELAY CIRC	—	×	—	PCS-70
B2617: STARTER RELAY CIRC	×	×	—	SEC-115 (Coupe), SEC-336 (Sedan)
B2618: BCM	×	×	—	PCS-73
B2619: BCM	×	×	—	SEC-117 (Coupe), SEC-338 (Sedan)
B261A: PUSH-BTN IGN SW	—	×	—	SEC-118 (Coupe), SEC-339 (Sedan)
B261E: VEHICLE TYPE	×	× (Turn ON for 15 seconds)	—	SEC-121
B2622: INSIDE ANTENNA	—	—	—	DLK-282
B2623: INSIDE ANTENNA	—	—	—	DLK-285
B26E1: ENG STATE NO RES	×	×	—	SEC-326
B26E8: CLUTCH SW	×	×	—	SEC-123
B26E9: S/L STATUS	×	× (Turn ON for 15 seconds)	—	SEC-125
B26EA: KEY REGISTRATION	×	× (Turn ON for 15 seconds)	—	SEC-126
C1704: LOW PRESSURE FL	—	—	×	WT-8
C1705: LOW PRESSURE FR	—	—	×	WT-8
C1706: LOW PRESSURE RR	—	—	×	WT-8
C1707: LOW PRESSURE RL	—	—	×	WT-8
C1708: [NO DATA] FL	—	—	×	WT-13
C1709: [NO DATA] FR	—	—	×	WT-13
C1710: [NO DATA] RR	—	—	×	WT-13
C1711: [NO DATA] RL	—	—	×	WT-13
C1712: [CHECKSUM ERR] FL	—	—	×	WT-15

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1713: [CHECKSUM ERR] FR	—	—	×	WT-15
C1714: [CHECKSUM ERR] RR	—	—	×	WT-15
C1715: [CHECKSUM ERR] RL	—	—	×	WT-15
C1716: [PRESSDATA ERR] FL	—	—	×	WT-17
C1717: [PRESSDATA ERR] FR	—	—	×	WT-17
C1718: [PRESSDATA ERR] RR	—	—	×	WT-17
C1719: [PRESSDATA ERR] RL	—	—	×	WT-17
C1720: [CODE ERR] FL	—	—	×	WT-15
C1721: [CODE ERR] FR	—	—	×	WT-15
C1722: [CODE ERR] RR	—	—	×	WT-15
C1723: [CODE ERR] RL	—	—	×	WT-15
C1724: [BATT VOLT LOW] FL	—	—	×	WT-15
C1725: [BATT VOLT LOW] FR	—	—	×	WT-15
C1726: [BATT VOLT LOW] RR	—	—	×	WT-15
C1727: [BATT VOLT LOW] RL	—	—	×	WT-15
C1729: VHCL SPEED SIG ERR	—	—	×	WT-18
C1734: CONTROL UNIT	—	—	×	WT-19

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000007630902

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
RADFAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	STOP
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	CVT selector lever in any position other than P or N (CVT models)	Off
		Release clutch pedal (M/T models)	
	Ignition switch ON	CVT selector lever in P or N position (CVT models)	On
		Depress clutch pedal (M/T models)	
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
ST/INHI RLY	Ignition switch ON		Off
	At engine cranking		ST →INHI
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF		UNKWN
DETENT SW	Ignition switch ON	<ul style="list-style-type: none"> Press the selector button with CVT selector lever in P position CVT selector lever in any position other than P 	Off
	Release the CVT selector button with CVT selector lever in P position NOTE: The lever is fixed ON for M/T		On
S/L RLY -REQ	None of the conditions below are present		Off
	<ul style="list-style-type: none"> Open the driver door after the ignition switch is turned OFF (for a few seconds) Press the push-button ignition switch when the steering lock is activated Depress the clutch pedal when the steering lock is activated 		On
S/L STATE	Steering lock is activated		LOCK
	Steering lock is deactivated		UNLK
	[DTC B210A] is detected		UNKWN
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
THFT HRN REQ	Not operated		Off
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 		On
HORN CHIRP	Not operated		Off
	Door locking with Intelligent Key (horn chirp mode)		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

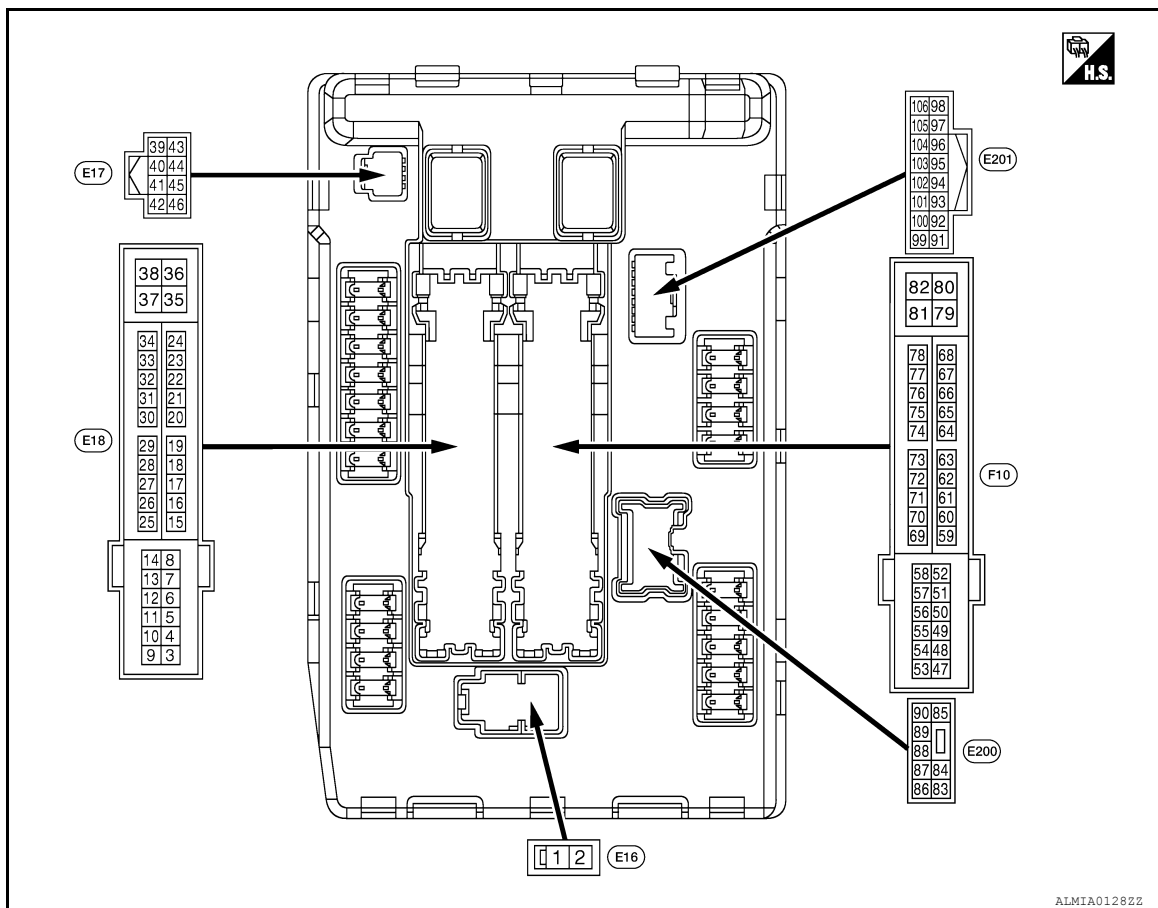

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (LG)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch LO	Battery voltage
5 (Y)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch HI	Battery voltage
7 (GR)	Ground	Tail, license plate lamps & interior lamps	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
10 (BR)	Ground	ECM relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turn- ing ignition switch OFF)		Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
11 (O)	Ground	Electronic steering column lock power supply	Output	Ignition switch OFF	A few seconds after open- ing the driver door	Battery voltage
				Ignition switch LOCK	Press the push-button ig- nition switch	Battery voltage
				Ignition switch ACC or ON		0 V
12 (B)	Ground	Ground	—	Ignition switch ON		0 V
13 (SB)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		Battery voltage
15 (W)	Ground	Ignition relay-1 power sup- ply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
16 (R)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
19 (Y)	Ground	Ignition relay-1 power sup- ply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
20 (L)	Ground	Ambient sensor ground	—	Ignition switch ON		0V
21 (LG)	Ground	Ambient sensor	—	Ignition switch ON		5V
22 (W/R)	Ground	Refrigerant pressure sen- sor ground	—	Ignition switch ON		0V
23 (B/R)	Ground	Refrigerant pressure sen- sor	—	<ul style="list-style-type: none"> Ignition switch ON (READY) Both A/C switch and blower motor switch ON (electric compressor oper- ates) 		1.0 - 4.0V
24 (BR/W)	Ground	Refrigerant pressure sen- sor power supply	—	Ignition switch ON		5V
25 (GR)	Ground	Ignition relay-1 power sup- ply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
27 (W)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V
28 (SB)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
30 (R) (with M/T) 30 (BR) (with CVT)	Ground	Starter relay control	Input	CVT mod- els	CVT selector lever in any position other than P or N (ignition switch ON)	0 V
					CVT selector lever P or N (ignition switch ON)	Battery voltage
				M/T mod- els	Release the clutch pedal	0 V
					Depress the clutch pedal	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)	
+	-	Signal name	Input/ Output				
32 (P)	Ground	Electronic steering column lock unit condition-1	Input	Electronic steering column lock is activated		0 V	A
				Electronic steering column lock is deactivated		Battery voltage	B
33 (G)	Ground	Electronic steering column lock unit condition-2	Input	Electronic steering column lock is activated		Battery voltage	C
				Electronic steering column lock is deactivated		0 V	D
34 (O)	Ground	Cooling fan relay-3 control	Input	Ignition switch OFF or ACC		0 V	E
				Ignition switch ON		0.7 V	
35 (P)	Ground	Cooling fan motor control	Output	Ignition switch OFF or ACC		0 V	F
				Ignition switch ON		0.7 V	
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage	G
38 (GR)	Ground	Cooling fan motor control	Output	Ignition switch OFF or ACC		0 V	H
				Ignition switch ON		0.7 V	
39 (P)	—	CAN - L	Input/ Output	—		—	I
40 (L)	—	CAN - H	Input/ Output	—		—	J
41 (B)	Ground	Ground	—	Ignition switch ON		0 V	K
42 (SB)	Ground	Cooling fan relay-2 control	Input	Ignition switch OFF or ACC		0 V	EXL
				Ignition switch ON		0.7 V	
43 (Y)	Ground	CVT shift selector (Detention switch)	Input	Ignition switch ON	Press the CVT selector button (CVT selector lever P)	Battery voltage	M
					<ul style="list-style-type: none"> • CVT selector lever in any position other than P • Release the CVT selector button (CVT selector lever P) 	0 V	
44 (W)	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage	N
				The horn is activated		0 V	
45 (GR)	Ground	Anti theft horn relay control	Input	The horn is deactivated		Battery voltage	O
				The horn is activated		0 V	
46 (BR)	Ground	Starter relay control	Input	CVT mod- els	CVT selector lever in any position other than P or N (ignition switch ON)	0 V	P
					CVT selector lever P or N (ignition switch ON)	Battery voltage	
				M/T mod- els	Release the clutch pedal	0 V	
					Depress the clutch pedal	Battery voltage	
48 (W)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V	
					A/C switch ON (A/C compressor is oper- ating)	Battery voltage	




IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
49 (V)	Ground	ECM relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
51 (SB)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
52 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
53 (V) (with QR25DE) 53 (G) (with VQ35DE)	Ground	ECM relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
54 (GR)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
55 (LG)	Ground	ECM power supply	Output	Ignition switch OFF		Battery voltage
56 (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
57 (O)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
58 (BR) (with CVT)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
69 (SB)	Ground	ECM relay control	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 - 1.5 V
70 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF		0 - 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON		0 - 1.0 V
72 (W)	Ground	Transmission range switch signal	Input	Ignition switch ON	CVT selector lever in P or N position	Battery voltage
					CVT selector lever in any position other than P or N position	0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

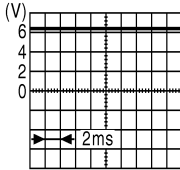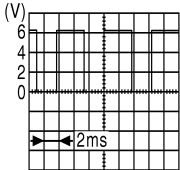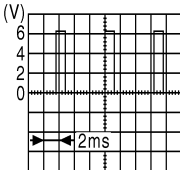Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
74 (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
75 (LG)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage
76 (Y)	Ground	Power generation command signal	Output	Ignition switch ON		 JPMIA0001GB 6.3 V
				40% is set on "Active test", "ALTERNATOR DUTY" of "ENGINE"		 JPMIA0002GB 3.8 V
				80% is set on "Active test", "ALTERNATOR DUTY" of "ENGINE"		 JPMIA0003GB 1.4 V
77 (B/R)	Ground	Fuel pump relay control	Output	• Approximately 1 second after turning the ignition switch ON • Engine running		0 - 1.0 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
80 (R)	Ground	Starter motor	Output	At engine cranking		Battery voltage
83 (R/Y)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
84 (L)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
86 (W/R)	Ground	Front fog lamp (RH) (If equipped)	Output	Lighting switch 2ND	Front fog lamp switch ON	Battery voltage
					Front fog lamp switch OFF	0 V
87 (L/Y)	Ground	Front fog lamp (LH) (If equipped)	Output	Lighting switch 2ND	Front fog lamp switch ON	Battery voltage
					Front fog lamp switch OFF	0 V
88 (R/W)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
89 (L/W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	• Lighting switch HI • lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
90 (G)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	• Lighting switch HI • Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
91 (LG/R)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
92 (LG/B)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
99 (BR/W)	Ground	Ambient sensor ground	—	Ignition switch ON		0V
100 (SB)	Ground	Ambient sensor	—	Ignition switch ON		5V
101 (O/L)	Ground	Refrigerant pressure sensor ground	—	Ignition switch ON		0V
102 (R/B)	Ground	Refrigerant pressure sensor	—	• Ignition switch ON (READY) • Both A/C switch and blower motor switch ON (electric compressor operates)		1.0 - 4.0V
103 (P)	Ground	Refrigerant pressure sensor power supply	—	Ignition switch ON		5V

Fail Safe

INFOID:000000007630903

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none"> • Signals cooling fans ON when the ignition switch is turned ON • Signals cooling fans OFF when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Generator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF
<ul style="list-style-type: none"> • Parking lamps • License plate lamps • Illumination • Tail lamps 	<ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe in operation
Front fog lamps (if equipped)	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Electronic steering column lock unit	Steering lock relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

DTC	Ignition switch	Ignition relay	Tail lamp relay
—	ON	ON	—
—	OFF	OFF	—
B2098: IGN RELAY ON	OFF	ON	ON (10 minutes)
B2099: IGN RELAY OFF	ON	OFF	—

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000007630904

CONSULT display	Fail-safe	TIME ^{NOTE}		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	PCS-17
B2098: IGN RELAY ON	×	CRNT	1 – 39	PCS-18
B2099: IGN RELAY OFF	—	CRNT	1 – 39	PCS-19
B2108: STRG LCK RELAY ON	—	CRNT	1 – 39	SEC-255
B2109: STRG LCK RELAY OFF	—	CRNT	1 – 39	SEC-256
B210A: STRG LCK STATE SW	—	CRNT	1 – 39	SEC-257
B210B: START CONT RLY ON	—	CRNT	1 – 39	SEC-262
B210C: START CONT RLY OFF	—	CRNT	1 – 39	SEC-263

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	TIME ^{NOTE}		Refer to
B210D: STARTER RELAY ON	—	CRNT	1 – 39	SEC-264
B210E: STARTER RELAY OFF	—	CRNT	1 – 39	SEC-266
B210F: INTRLCK/TRANSMISSION RANGE SW ON	—	CRNT	1 – 39	SEC-269
B2110: INTRLCK/TRANSMISSION RANGE SW OFF	—	CRNT	1 – 39	SEC-275

NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

HEADLAMP (HALOGEN)


< WIRING DIAGRAM >

WIRING DIAGRAM

HEADLAMP (HALOGEN)

Wiring Diagram - Coupe

INFOID:000000007418484

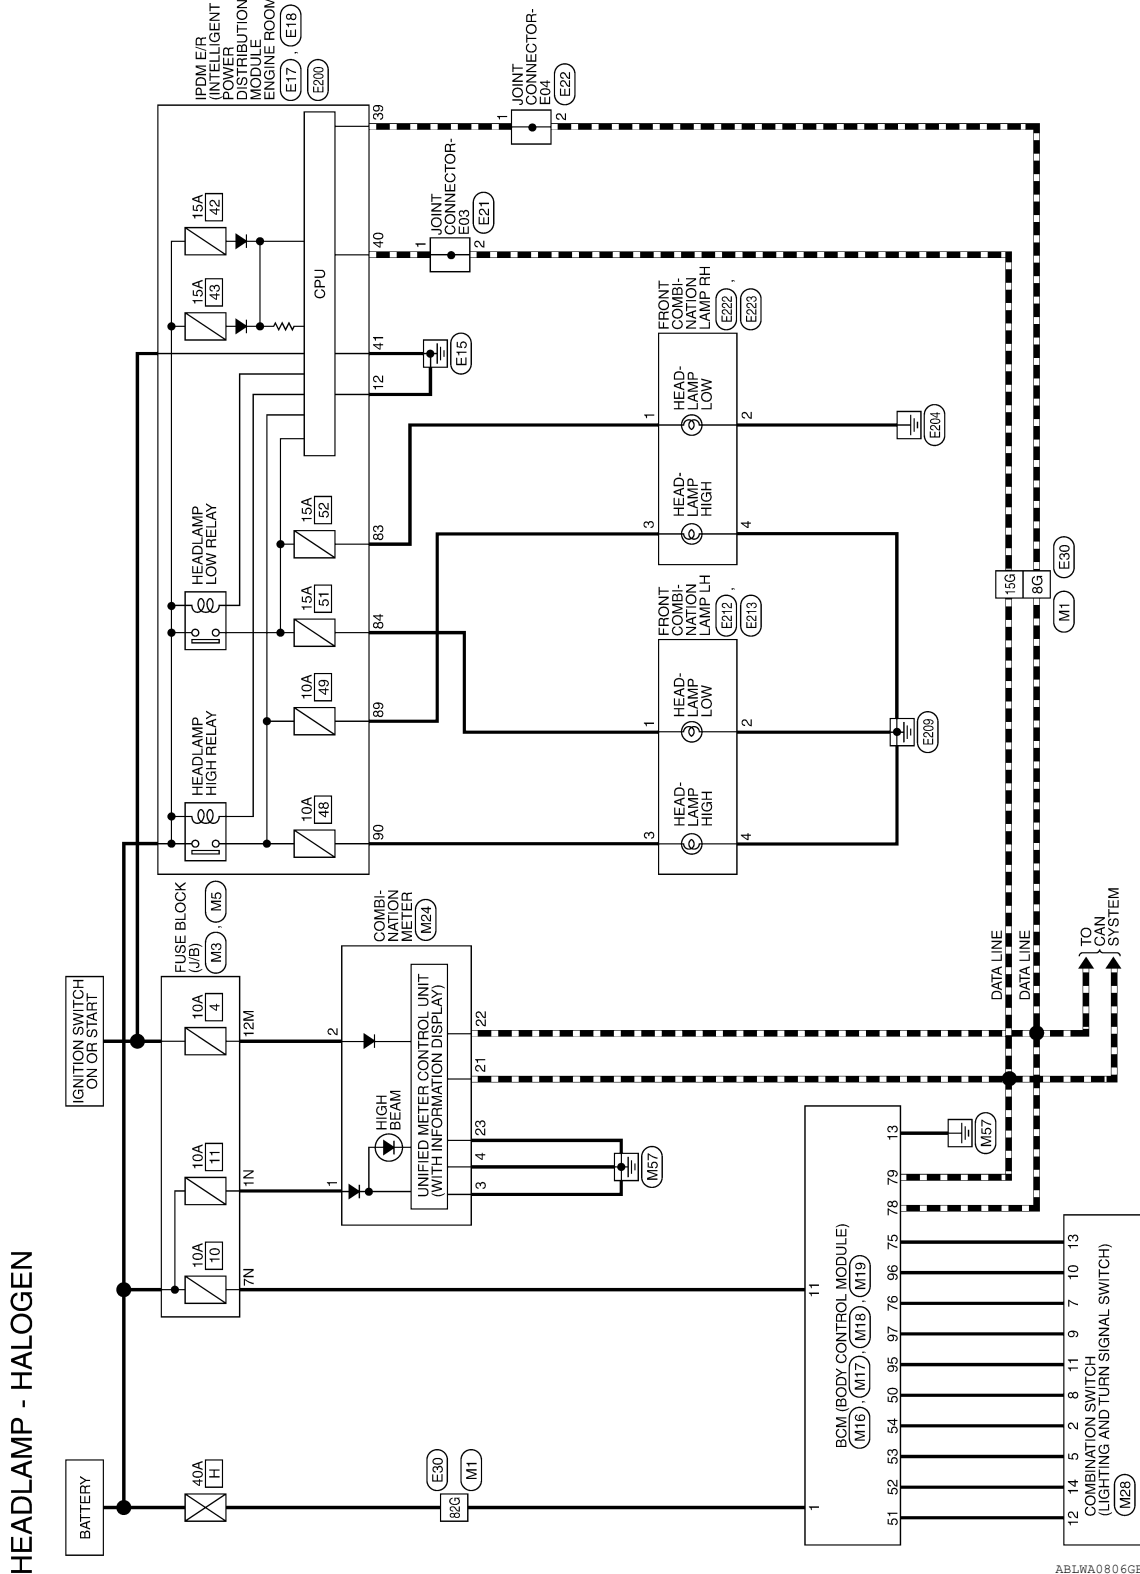


HEADLAMP (HALOGEN)

< WIRING DIAGRAM >


HEADLAMP CONNECTORS - HALOGEN

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

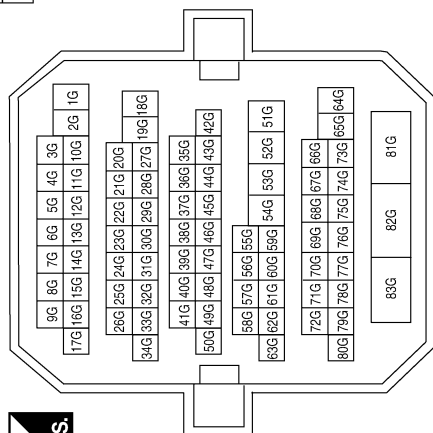


Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	W/B	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	-
7N	Y/R	-


Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	12M
Color of Wire	O
Signal Name	-

Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L


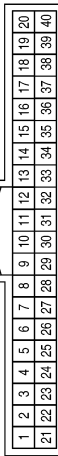
Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1

ABLIA2313GB

HEADLAMP (HALOGEN)


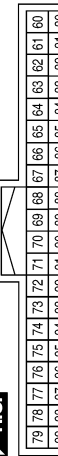
< WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE


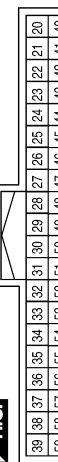
Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK


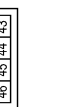
Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT_5
51	L/W	INPUT_1
52	G/B	INPUT_2
53	LG/R	INPUT_3
54	G/Y	INPUT_4

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT_4
5	LG/R	OUTPUT_3
7	R/G	INPUT_3
8	LG/B	OUTPUT_5
9	R/B	INPUT_2
10	P/B	INPUT_4
11	R/W	INPUT_1
12	L/W	OUTPUT_1
13	R/Y	INPUT_5
14	G/B	OUTPUT_2

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




ABLIA2314GB

HEADLAMP (HALOGEN)

< WIRING DIAGRAM >


Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-


Terminal No.	Color of Wire	Signal Name
12	B	GND (POWER)

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

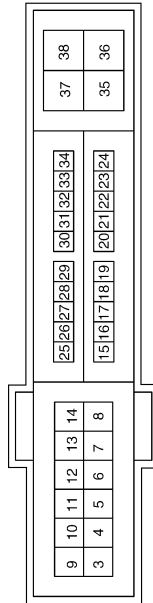

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

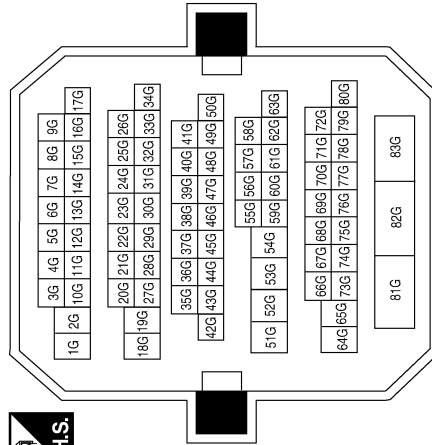

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABLIA2315GB

HEADLAMP (HALOGEN)

< WIRING DIAGRAM >

Connector No.	E213
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	G	H/L LH HI
4	B	GND

Connector No.	E212
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	H/L LH LO
2	B	GND

Connector No.	E200
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
83	R/Y	HEADLAMP_LO_RH
84	L	HEADLAMP_LO_LH
89	L/W	HEADLAMP_HI_RH
90	G	HEADLAMP_HI_LH

Connector No.	E223
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/Y	H/L RH LO
2	B	GND

Connector No.	E222
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	L/W	H/L RH HI
4	B	GND

ABLIA2316GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


HEADLAMP (HALOGEN)

< WIRING DIAGRAM >

Wiring Diagram - Sedan

INFOID:000000007418485

HEADLAMP - HALOGEN

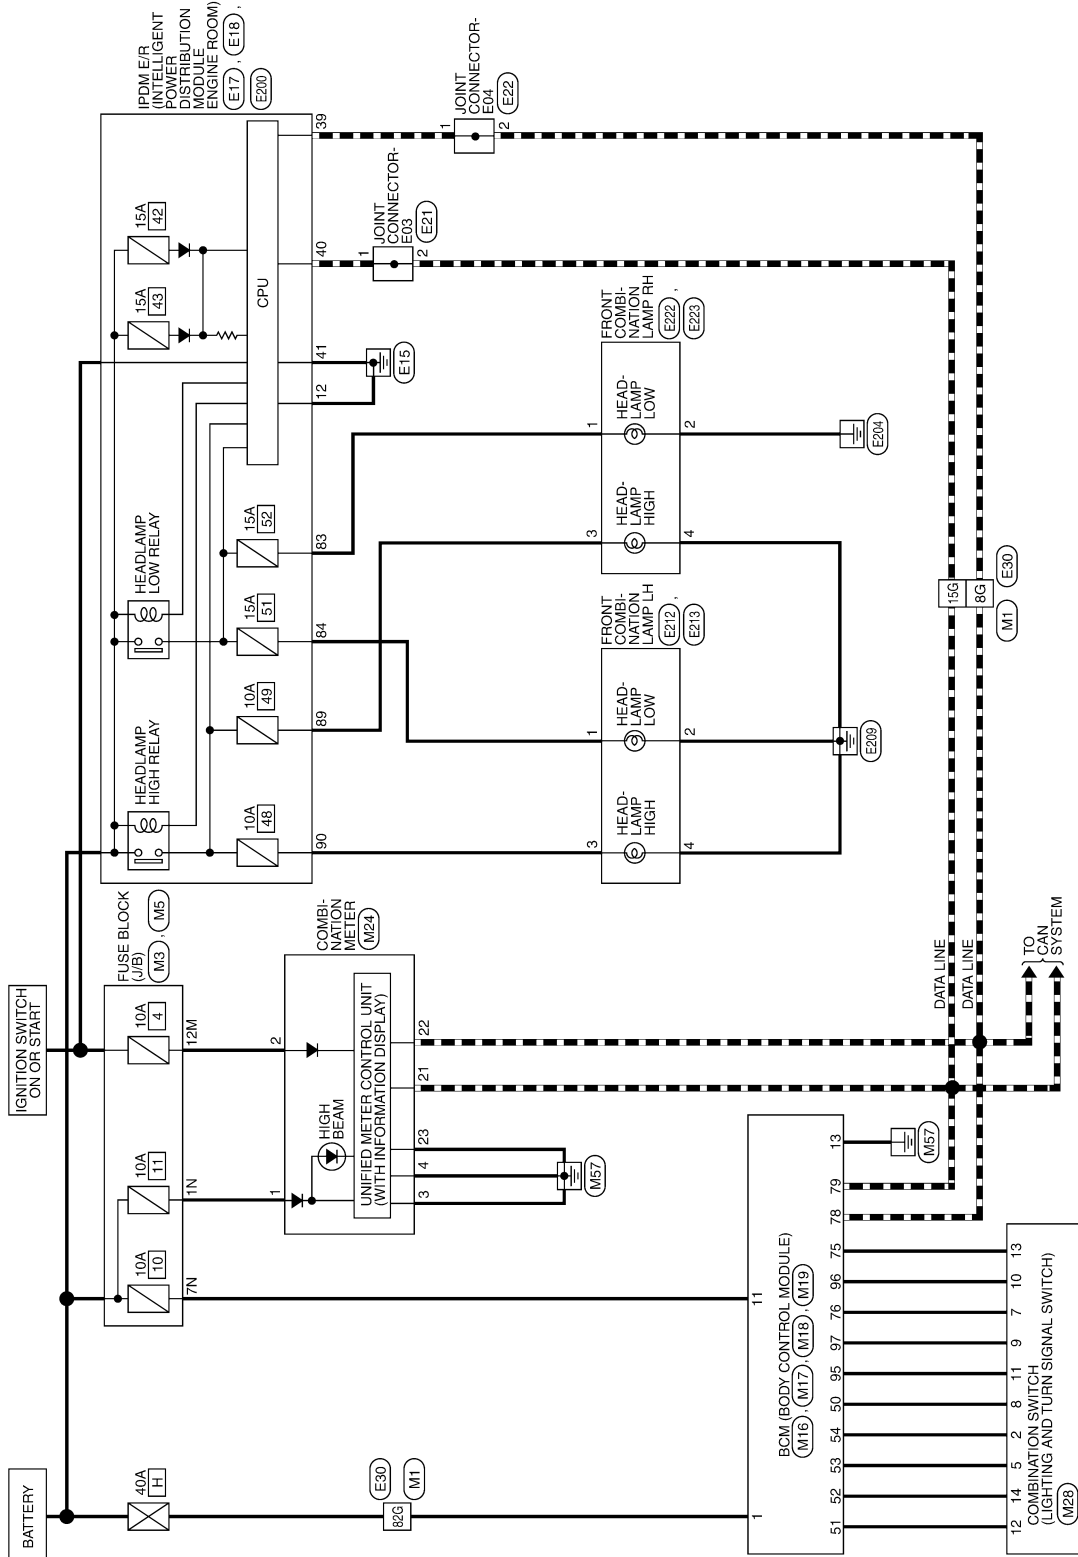


ABLWA0807GB

HEADLAMP (HALOGEN)

< WIRING DIAGRAM >


HEADLAMP CONNECTORS - HALOGEN

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

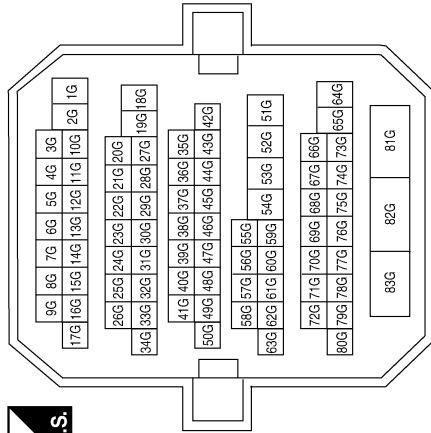

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	W/B	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	-
7N	Y/R	-


Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	12M
Color of Wire	O
Signal Name	-

Terminal No.	1
Color of Wire	W/B
Signal Name	BAT_POWER_F/L

Terminal No.	11
Color of Wire	Y/R
Signal Name	BAT_BCM_FUSE
Terminal No.	13
Color of Wire	B
Signal Name	GND1


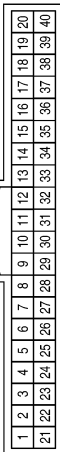
ABLIA2317GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HEADLAMP (HALOGEN)


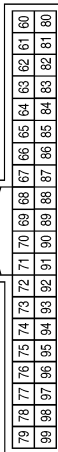
< WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE


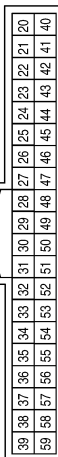
Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT_5
51	L/W	INPUT_1
52	G/B	INPUT_2
53	LG/R	INPUT_3
54	G/Y	INPUT_4

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT_4
5	LG/R	OUTPUT_3
7	R/G	INPUT_3
8	LG/B	OUTPUT_5
9	R/B	INPUT_2
10	P/B	INPUT_4
11	R/W	INPUT_1
12	L/W	OUTPUT_1
13	R/Y	INPUT_5
14	G/B	OUTPUT_2

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE





ABLIA2318GB

HEADLAMP (HALOGEN)

< WIRING DIAGRAM >


Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-


Terminal No.	Color of Wire	Signal Name
12	B	GND (POWER)

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

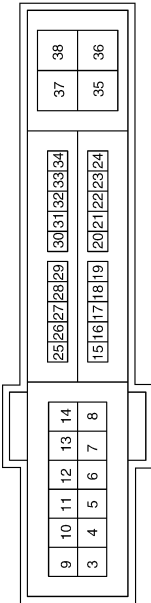

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

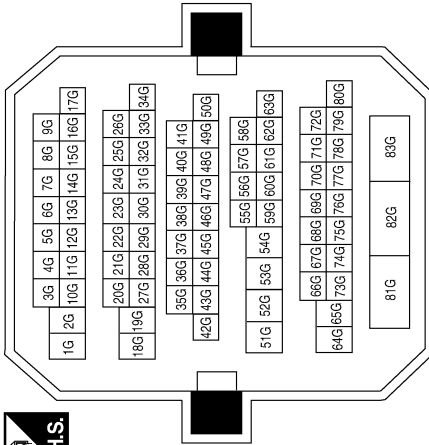

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABLIA2319GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL

HEADLAMP (HALOGEN)

< WIRING DIAGRAM >

Connector No.	E213
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	G	H/L LH HI
4	B	GND

Connector No.	E212
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	H/L LH LO
2	B	GND

Connector No.	E200
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
83	R/Y	HEADLAMP_LO_RH
84	L	HEADLAMP_LO_LH
89	L/W	HEADLAMP_HI_RH
90	G	HEADLAMP_HI_LH

Connector No.	E223
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/Y	H/L RH LO
2	B	GND

Connector No.	E222
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	L/W	H/L RH HI
4	B	GND

ABLIA2320GB


HEADLAMP (XENON)

< WIRING DIAGRAM >

HEADLAMP (XENON)

Wiring Diagram - Coupe

INFOID:000000007418486

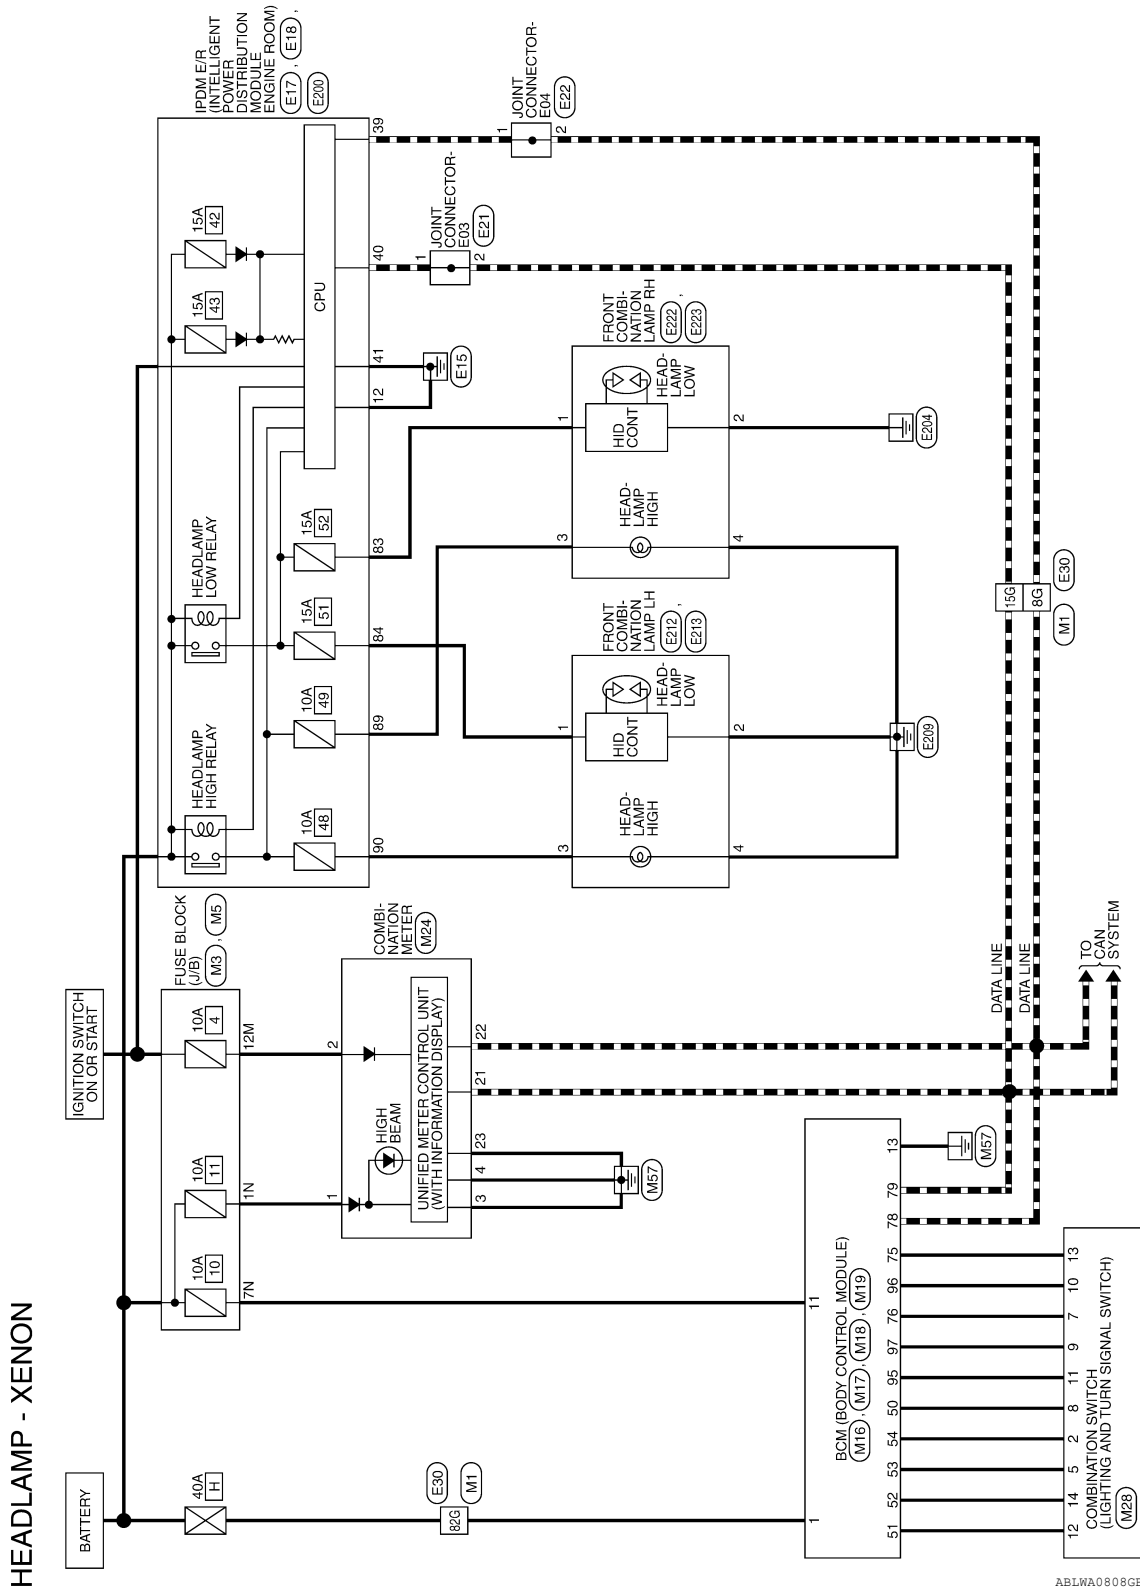


ABLWA0808GB

HEADLAMP (XENON)

< WIRING DIAGRAM >


HEADLAMP CONNECTORS - XENON

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

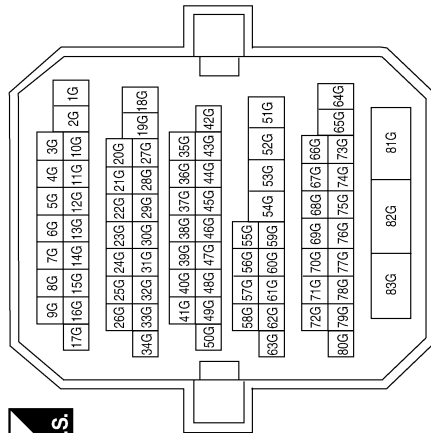

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	W/B	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	-
7N	Y/R	-

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	12M
Color of Wire	O
Signal Name	-

Terminal No.	1
Color of Wire	W/B
Signal Name	BAT_POWER_F/L


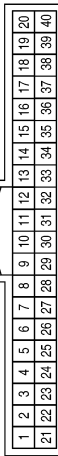
Terminal No.	11
Color of Wire	Y/R
Signal Name	BAT_BCM_FUSE
Terminal No.	13
Color of Wire	B
Signal Name	GND1

ABLIA2321GB

HEADLAMP (XENON)


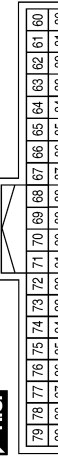
< WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE


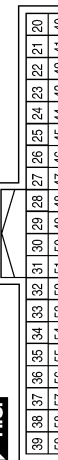
Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK


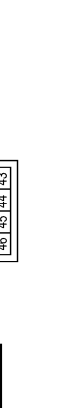
Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT_5
51	L/W	INPUT_1
52	G/B	INPUT_2
53	LG/R	INPUT_3
54	G/Y	INPUT_4

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT_4
5	LG/R	OUTPUT_3
7	R/G	INPUT_3
8	LG/B	OUTPUT_5
9	R/B	INPUT_2
10	P/B	INPUT_4
11	R/W	INPUT_1
12	L/W	OUTPUT_1
13	R/Y	INPUT_5
14	G/B	OUTPUT_2

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




ABLIA2322GB

HEADLAMP (XENON)

< WIRING DIAGRAM >


Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-


Terminal No.	Color of Wire	Signal Name
12	B	GND (POWER)

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

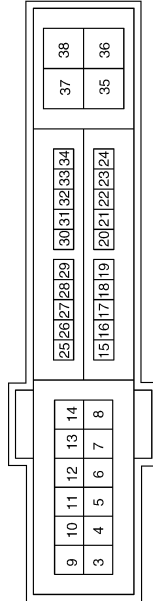

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

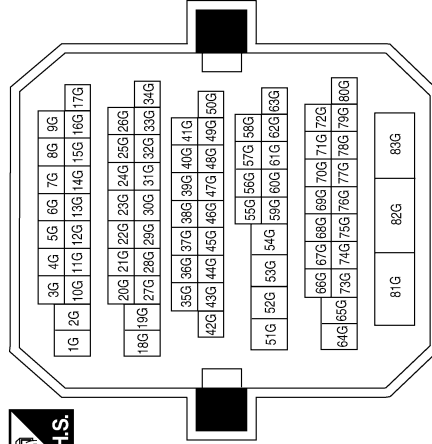

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABLIA2323GB

HEADLAMP (XENON)

< WIRING DIAGRAM >

Connector No.	E213
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	G	H/L LH HI
4	B	GND

Connector No.	E212
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	L	H/L LH LO
2	B	GND

Connector No.	E200
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
83	R/Y	HEADLAMP_LO_RH
84	L	HEADLAMP_LO_LH
89	L/W	HEADLAMP_HI_RH
90	G	HEADLAMP_HI_LH

Connector No.	E223
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	R/Y	H/L RH LO
2	B	GND

Connector No.	E222
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	L/W	H/L RH HI
4	B	GND

ABLIA2324GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


HEADLAMP (XENON)

< WIRING DIAGRAM >

Wiring Diagram - Sedan

INFOID:000000007418487

HEADLAMP - XENON

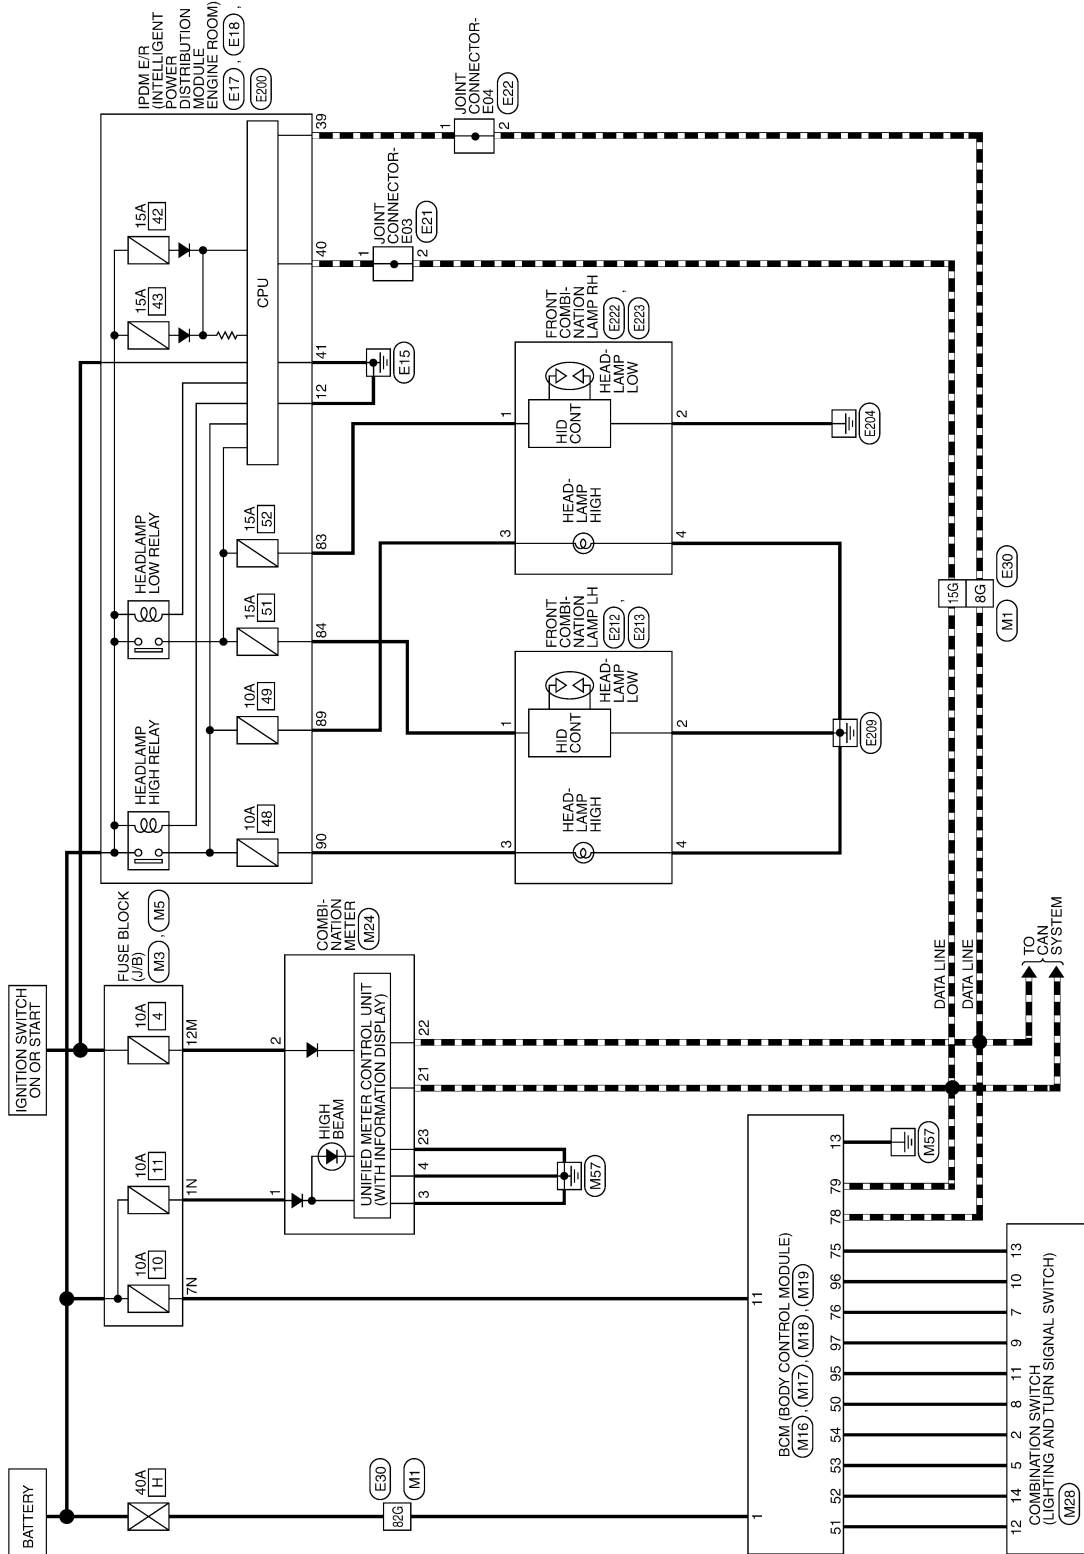


ABLWA0809GB

HEADLAMP (XENON)

< WIRING DIAGRAM >


HEADLAMP CONNECTORS - XENON

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

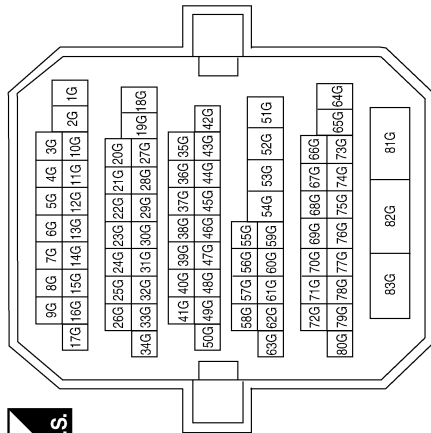

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	W/B	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	-
7N	Y/R	-

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	12M
Color of Wire	O
Signal Name	-

Terminal No.	1
Color of Wire	W/B
Signal Name	BAT_POWER_F/L


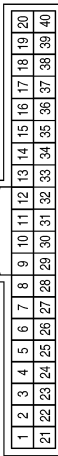
Terminal No.	11
Color of Wire	Y/R
Signal Name	BAT_BCM_FUSE
Terminal No.	13
Color of Wire	B
Signal Name	GND1

ABLIA2325GB

HEADLAMP (XENON)


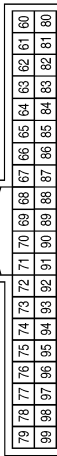
< WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE


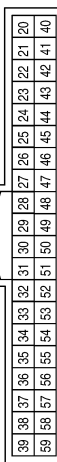
Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT_5
51	L/W	INPUT_1
52	G/B	INPUT_2
53	LG/R	INPUT_3
54	G/Y	INPUT_4

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT_4
5	LG/R	OUTPUT_3
7	R/G	INPUT_3
8	LG/B	OUTPUT_5
9	R/B	INPUT_2
10	P/B	INPUT_4
11	R/W	INPUT_1
12	L/W	OUTPUT_1
13	R/Y	INPUT_5
14	G/B	OUTPUT_2

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE





ABLIA2326GB

HEADLAMP (XENON)

< WIRING DIAGRAM >


Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-


Terminal No.	Color of Wire	Signal Name
12	B	GND (POWER)

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

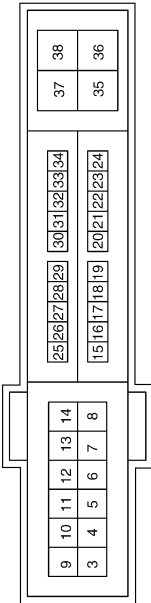

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

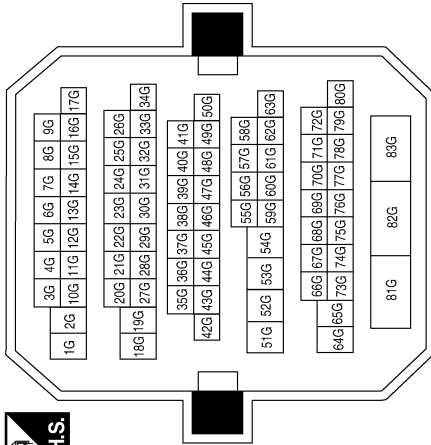

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABLIA2327GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL

HEADLAMP (XENON)

< WIRING DIAGRAM >

Connector No.	E213
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	G	H/L LH HI
4	B	GND

Connector No.	E212
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	L	H/L LH LO
2	B	GND

Connector No.	E200
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
83	R/Y	HEADLAMP_LO_RH
84	L	HEADLAMP_LO_LH
89	L/W	HEADLAMP_HI_RH
90	G	HEADLAMP_HI_LH

Connector No.	E223
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	R/Y	H/L RH LO
2	B	GND

Connector No.	E222
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	L/W	H/L RH HI
4	B	GND

ABLIA2328GB


AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

AUTO LIGHT SYSTEM

Wiring Diagram - Coupe

INFOID:000000007418489

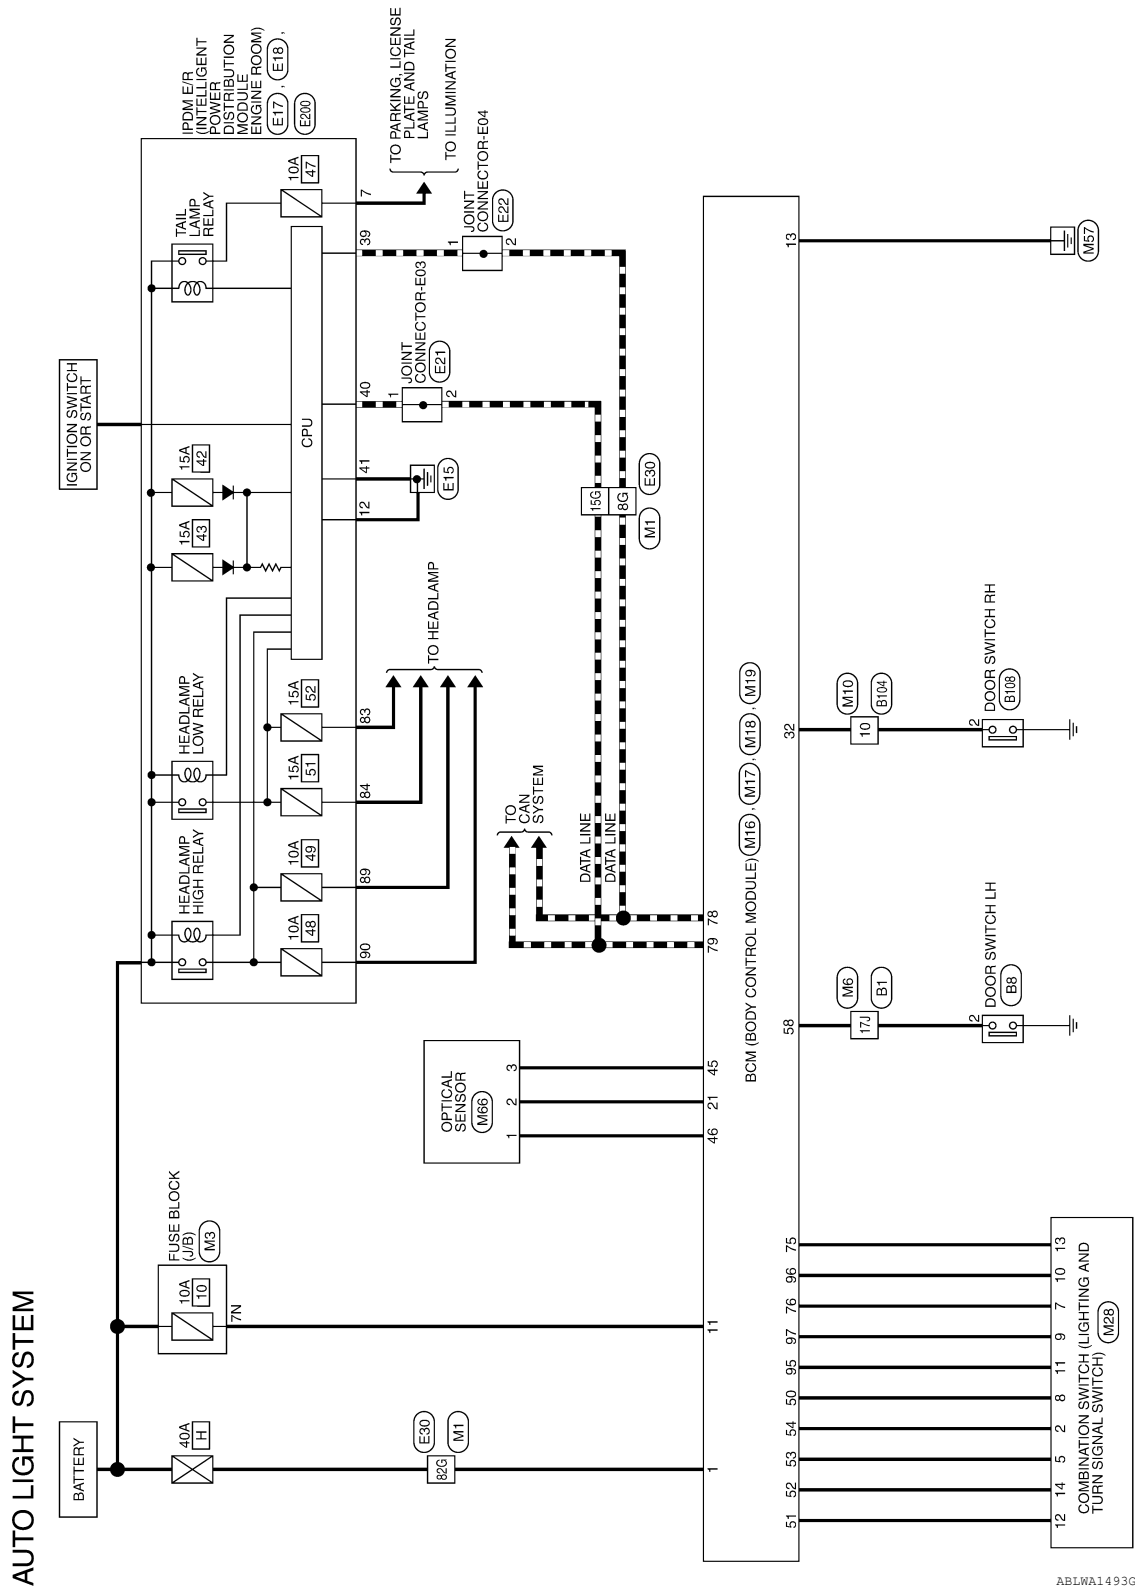


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >


AUTO LIGHT SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

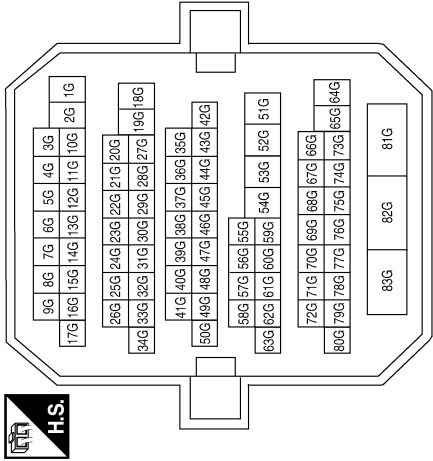


Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	W/B	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

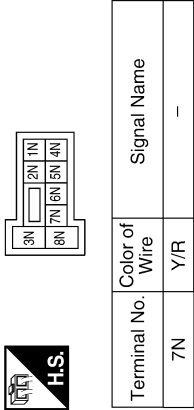

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

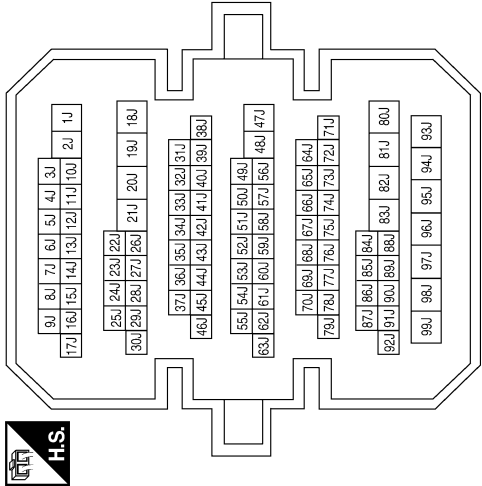

Terminal No.	Color of Wire	Signal Name
17J	SB	-

Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
10	R/B	-

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
45	P	GND RF2 A/L
46	V/W	AIL SENS KEYLESS TUNER POWER SUPPLY
50	LG/B	INPUT 5
51	L/W	INPUT 1
52	G/B	INPUT 2
53	LG/R	INPUT 3
54	G/Y	INPUT 4
58	SB	DR DOOR SW

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20
59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40

Terminal No.	Color of Wire	Signal Name
21	P/B	AUTO LIGHT SENSOR INPUT1
32	R/B	AS DOOR SW

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



4	5	6	7	<div></div>	8	9	10	
11	12	13	14	15	16	17	18	19

Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1

Connector No.	M66
Connector Name	OPTICAL SENSOR
Connector Color	WHITE



1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
1	V/W	POWER
2	P/B	OUTPUT
3	P	GND

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



1	2				5	6
7	8	9	10	11	12	13
						14

Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT 4
5	LG/R	OUTPUT 3
7	R/G	INPUT 3
8	LG/B	OUTPUT 5
9	R/B	INPUT 2
10	P/B	INPUT 4
11	R/W	INPUT 1
12	L/W	OUTPUT 1
13	R/Y	INPUT 5
14	G/B	OUTPUT 2

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60
59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40

Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT 5
76	R/G	OUTPUT 3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT 1
96	P/B	OUTPUT 4
97	R/B	OUTPUT 2


ABLIA2330GB

A B C D E F G H I J K EXL M N O P

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-


Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



9	10	11	12	13	14	25	26	27	28	29	30	31	32	33	34	37	38
3	4	5	6	7	8	15	16	17	18	19	20	21	22	23	24	35	36

Terminal No.	Color of Wire	Signal Name
7	GR	TAIL/ILLUMI
12	B	GND (POWER)


Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

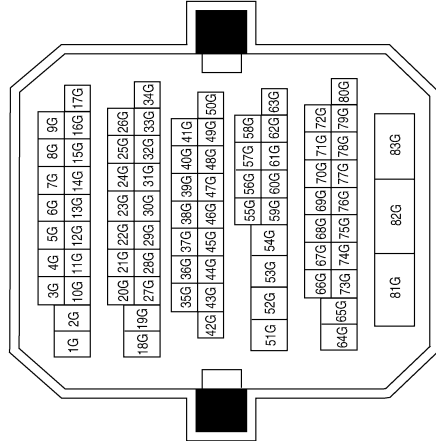

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABLIA2331GB

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

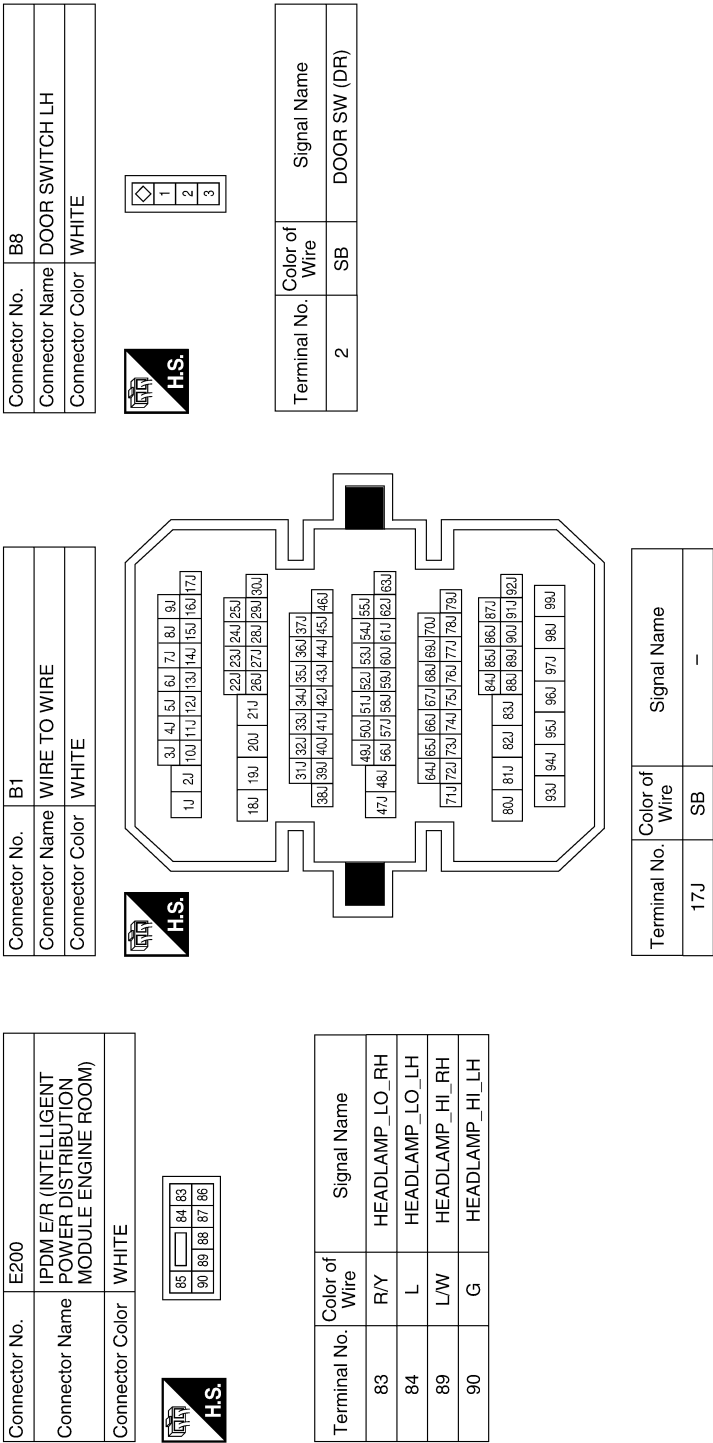

EXL

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

Connector No.	B108
Connector Name	DOOR SWITCH RH
Connector Color	WHITE



1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
2	GR	DOOR SW (AS)

Connector No.	B104
Connector Name	WIRE TO WIRE
Connector Color	BROWN




1	2	3	4	5		
6	7	8	9	10	11	12

Terminal No.	Color of Wire	Signal Name
10	GR	-

ABLIA2333GB

INFOID:0000000007418490

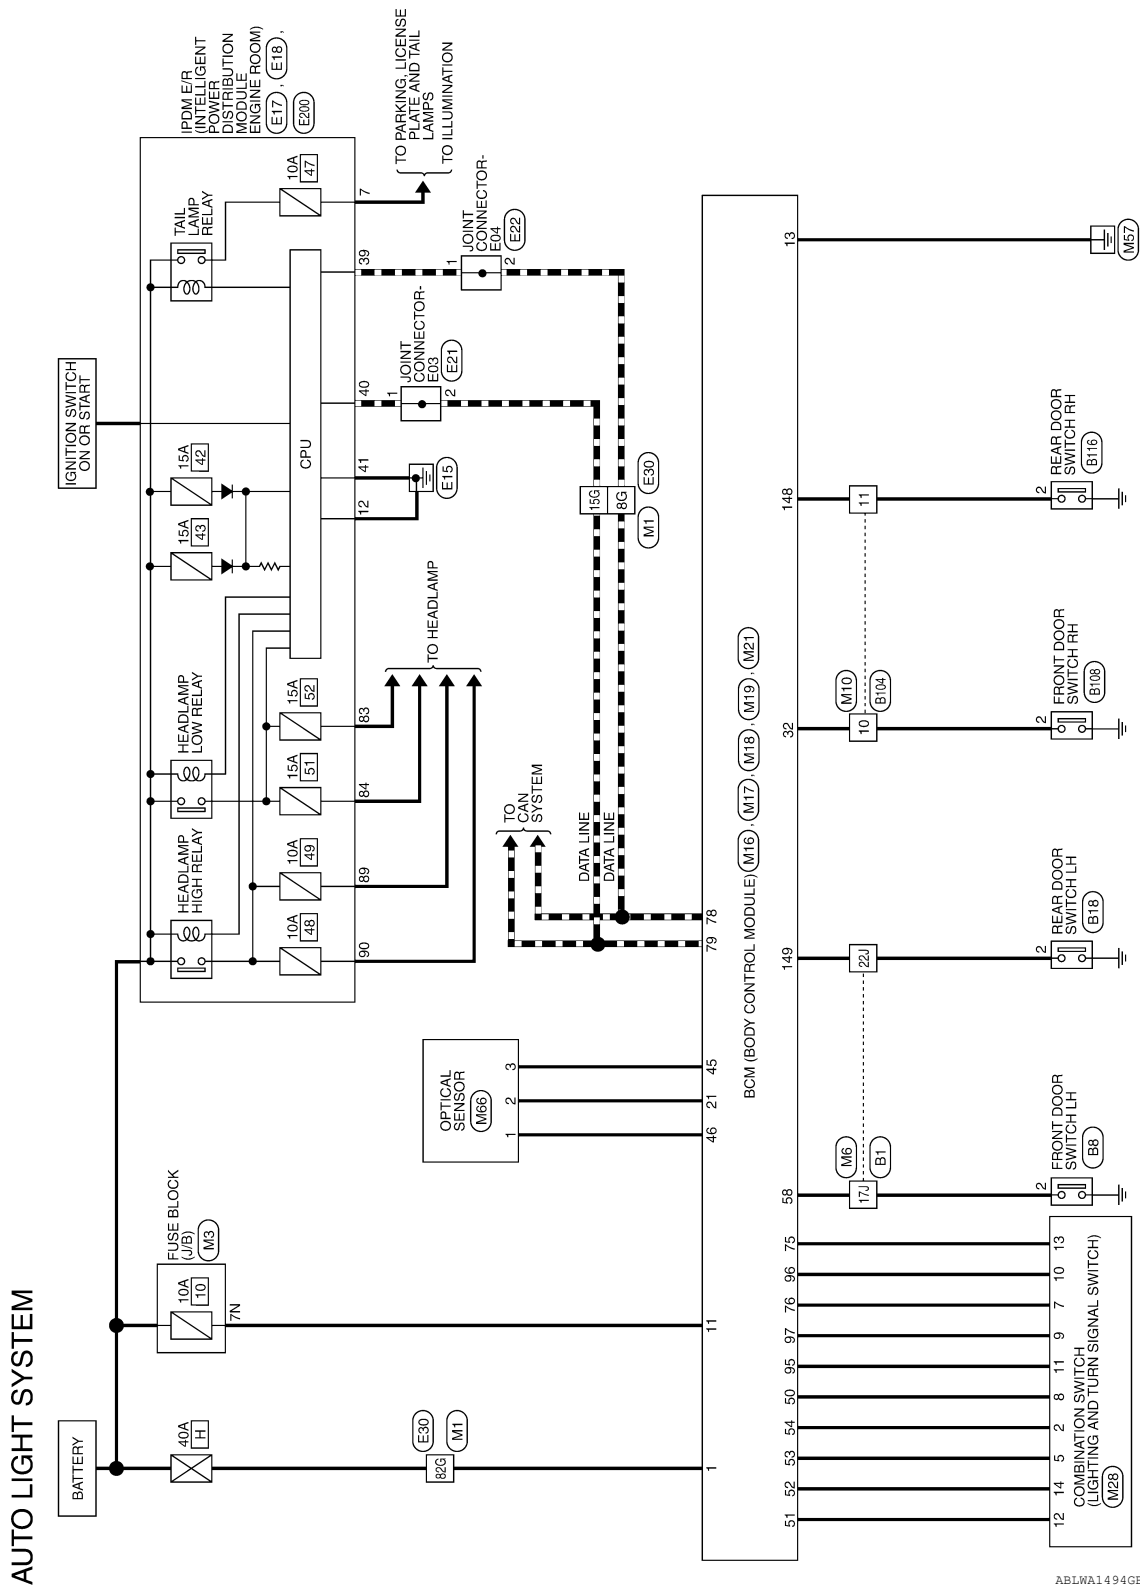


ABLWA1494GB

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

AUTO LIGHT SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

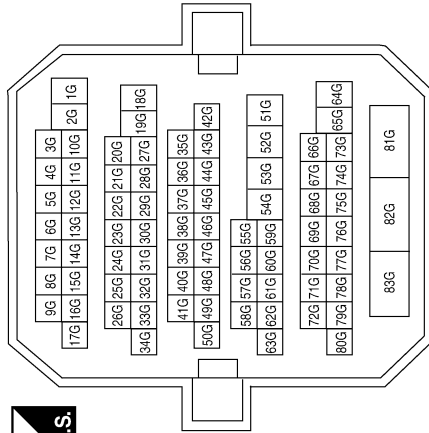


Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	W/B	-

Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
10	R/B	-
11	R/W	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7N	Y/R	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

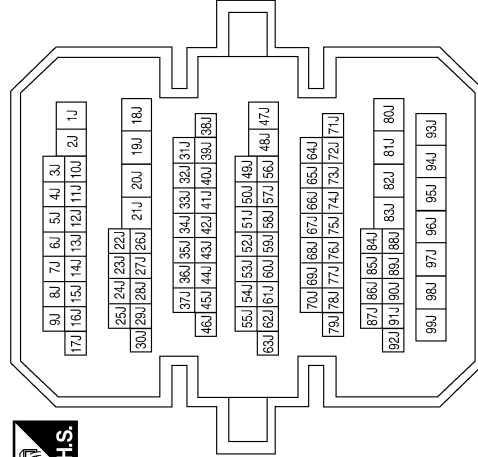

Terminal No.	Color of Wire	Signal Name
17J	SB	-
22J	R/B	-

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
45	P	GND RF2 A/L
46	V/W	A/L SENS KEYLESS TUNER POWER SUPPLY
50	LG/B	INPUT 5
51	L/W	INPUT 1
52	G/B	INPUT 2
53	LG/R	INPUT 3
54	G/Y	INPUT 4
58	SB	DR DOOR SW

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20
59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40

Terminal No.	Color of Wire	Signal Name
21	P/B	AUTO LIGHT SENSOR INPUT1
32	R/B	AS DOOR SW

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19

Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



1	2				5	6
7	8	9	10	11	12	13
						14

Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



131	130	129	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113	112
151	150	149	148	147	146	145	144	143	142	141	140	139	138	137	136	135	134	133	132

Terminal No.	Color of Wire	Signal Name
148	R/W	RR_DOOR_SW
149	R/B	RL_DOOR_SW

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK





79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60
99	98	97	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80

Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2

ABLIA2335GB

AUTO LIGHT SYSTEM




< WIRING DIAGRAM >

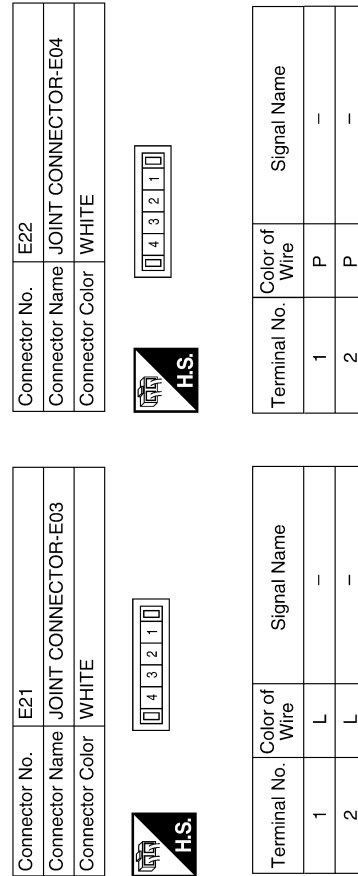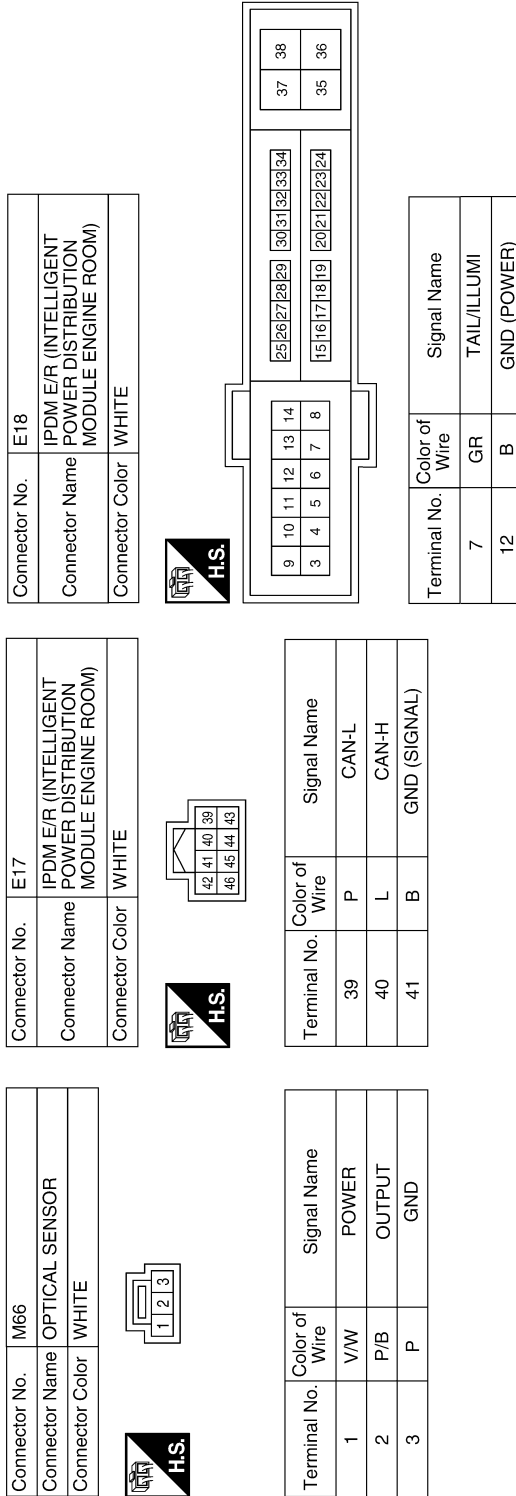

ABLIA2336GB

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

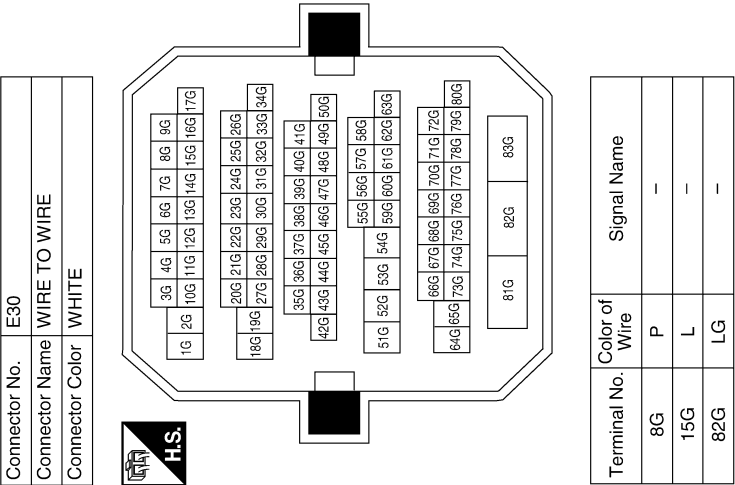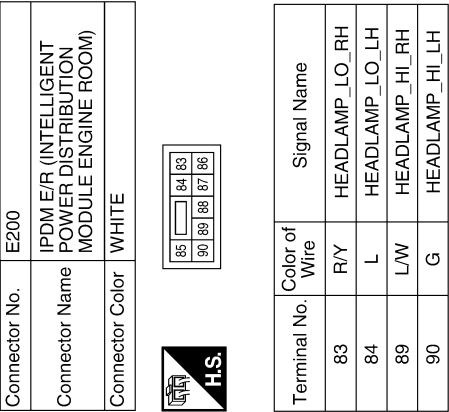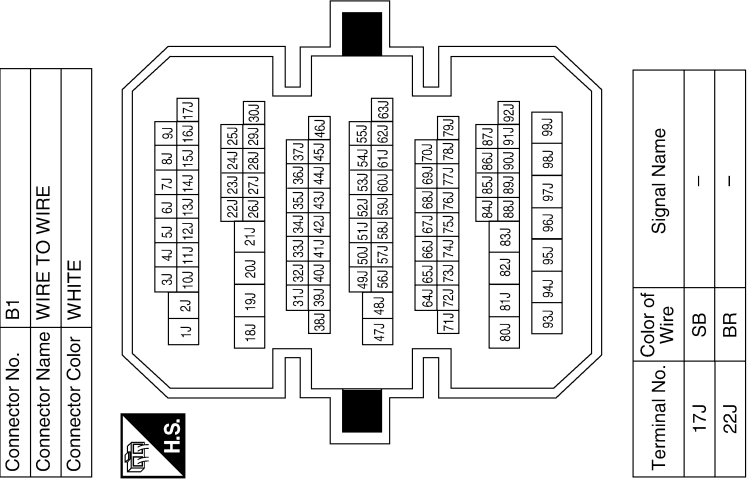

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

Connector No.	B104
Connector Name	WIRE TO WIRE
Connector Color	BROWN



1	2	3	4	5
6	7	8	9	10
11	12			

Terminal No.	Color of Wire	Signal Name
10	GR	—
11	B	—

Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
2	BR	DOOR SW (RL)

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE



1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
2	SB	DOOR SW (DR)

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
2	B	DOOR SW (RR)

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
2	GR	DOOR SW (AS)

ABLIA2338GB


FRONT FOG LAMP

< WIRING DIAGRAM >

FRONT FOG LAMP

Wiring Diagram - Coupe

INFOID:000000007418491

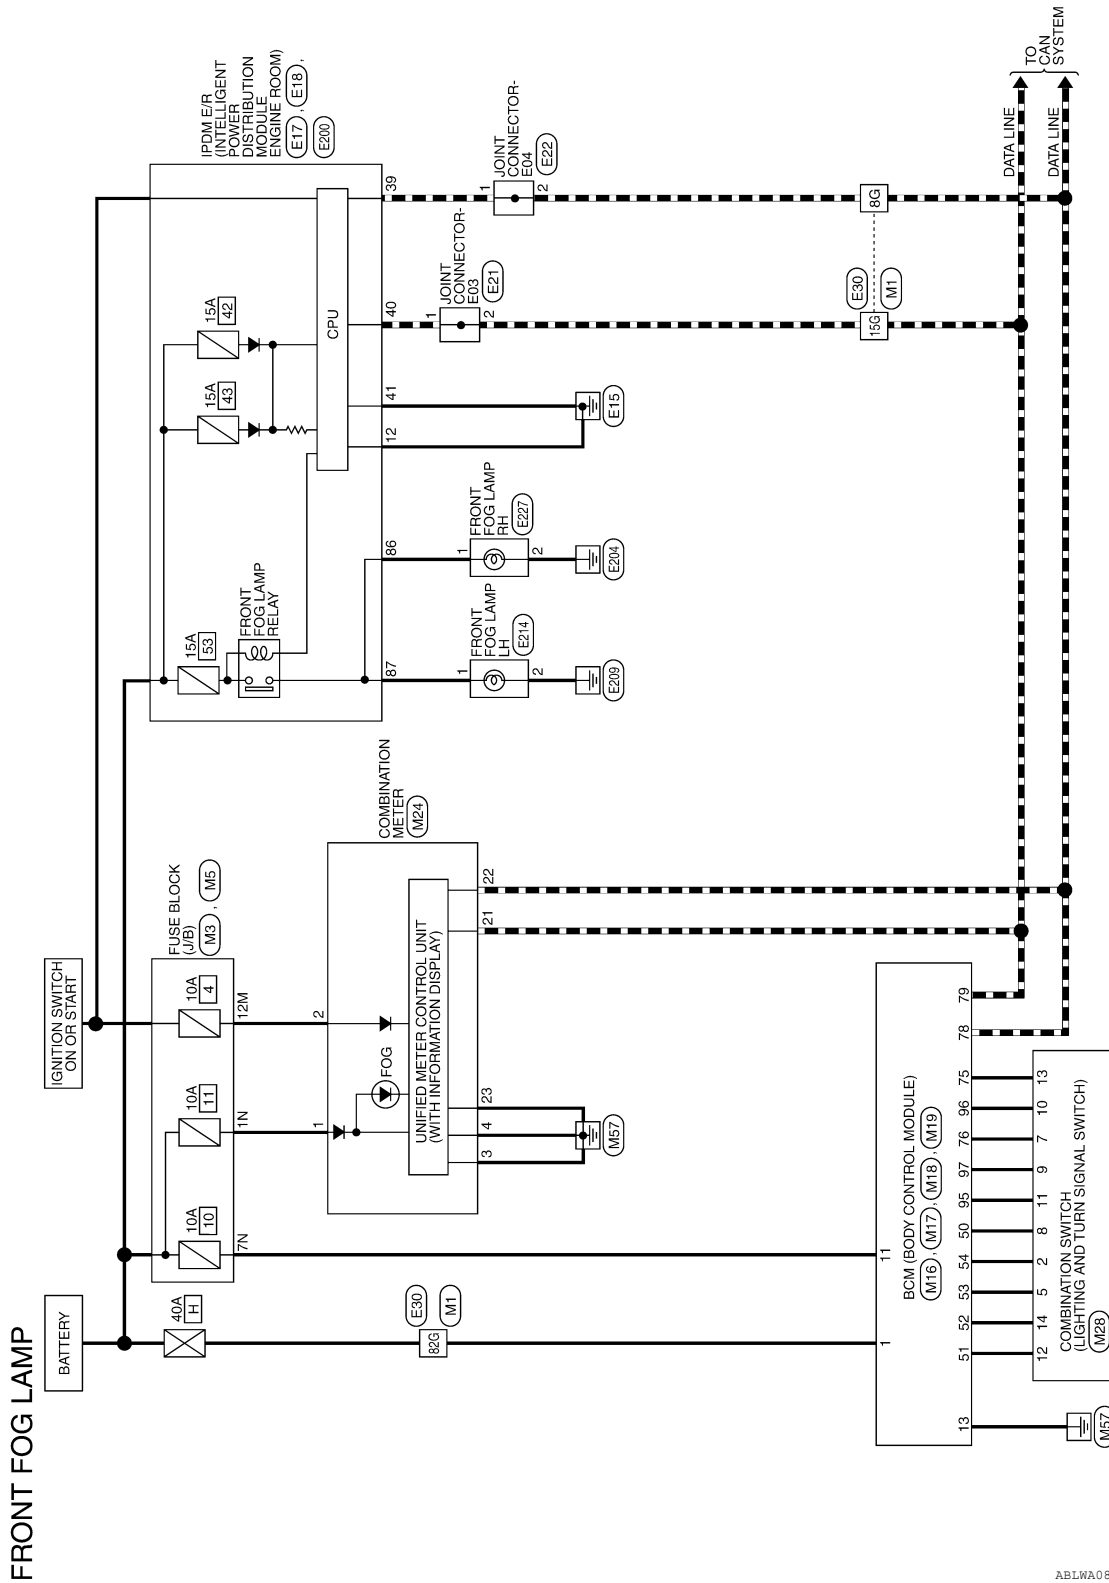

ABLWA0822GB


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP

< WIRING DIAGRAM >


FRONT FOG LAMP CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

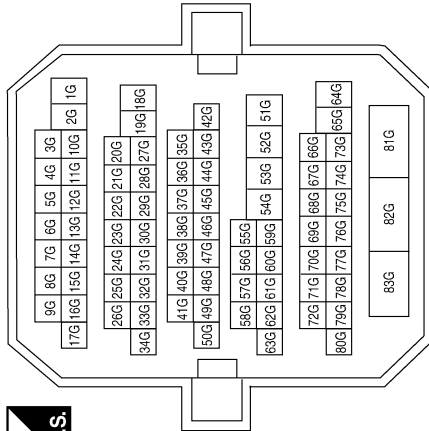


Terminal No.	Color of Wire	Signal Name
8G	P	—
15G	L	—
82G	W/B	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	—
7N	Y/R	—


Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	12M
Color of Wire	O
Signal Name	—

Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L


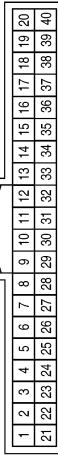
Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1

ABLIA2388GB

FRONT FOG LAMP



< WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE


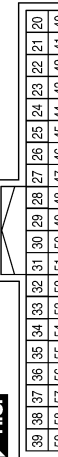
Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT_5
51	L/W	INPUT_1
52	G/B	INPUT_2
53	LG/R	INPUT_3
54	G/Y	INPUT_4

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT_4
5	LG/R	OUTPUT_3
7	R/G	INPUT_3
8	LG/B	OUTPUT_5
9	R/B	INPUT_2
10	P/B	INPUT_4
11	R/W	INPUT_1
12	L/W	OUTPUT_1
13	R/Y	INPUT_5
14	G/B	OUTPUT_2

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




ABLIA2389GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP

< WIRING DIAGRAM >


Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-


Terminal No.	Color of Wire	Signal Name
12	B	GND (POWER)

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

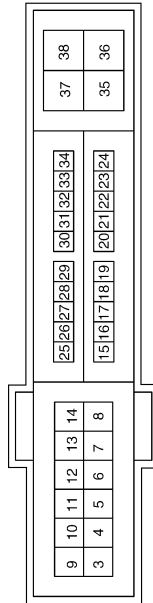

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

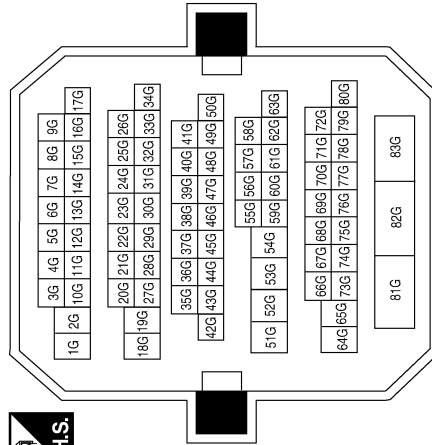

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABLIA2390GB

FRONT FOG LAMP

< WIRING DIAGRAM >

Connector No.	E227
Connector Name	FRONT FOG LAMP RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W/R	FR_FOG_RLY
2	B	GND

Connector No.	E214
Connector Name	FRONT FOG LAMP LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L/Y	FR_FOG_RLY
2	B	GND

Connector No.	E200
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
86	W/R	FR_FOG_LAMP_RH
87	L/Y	FR_FOG_LAMP_LH

ABLIA2391GB


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP

< WIRING DIAGRAM >

Wiring Diagram - Sedan

INFOID:000000007418492

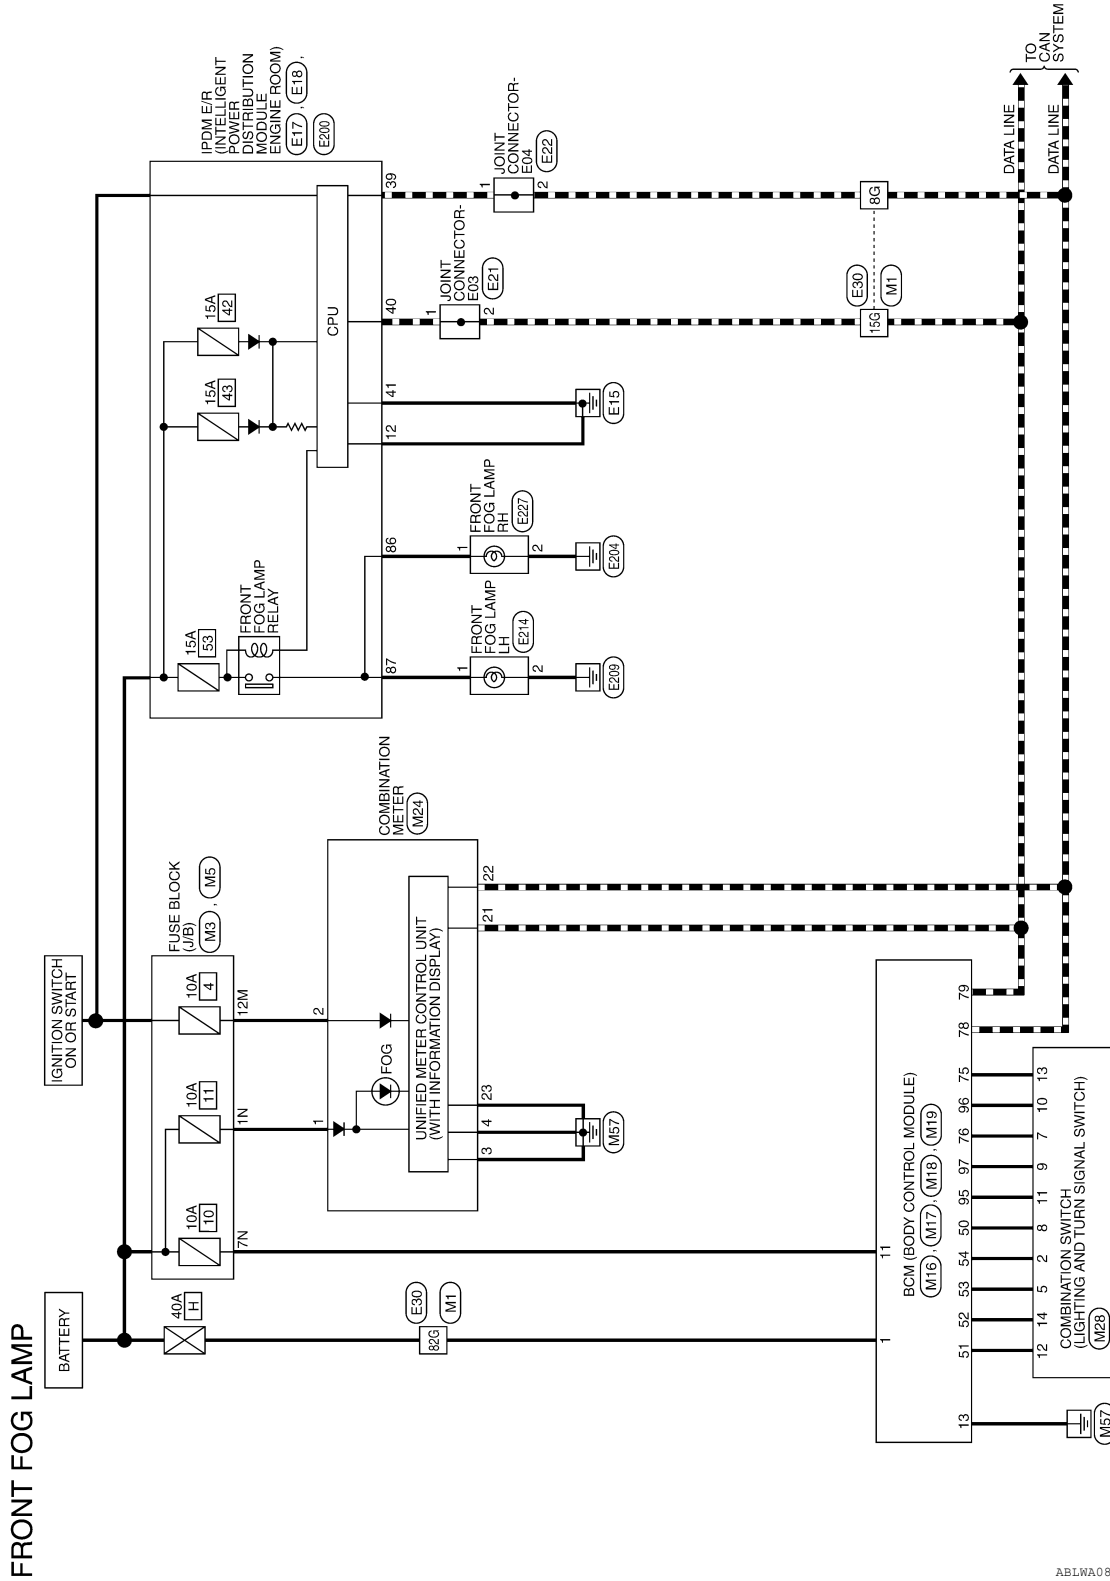


ABLWA0813GB

FRONT FOG LAMP

< WIRING DIAGRAM >


FRONT FOG LAMP CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

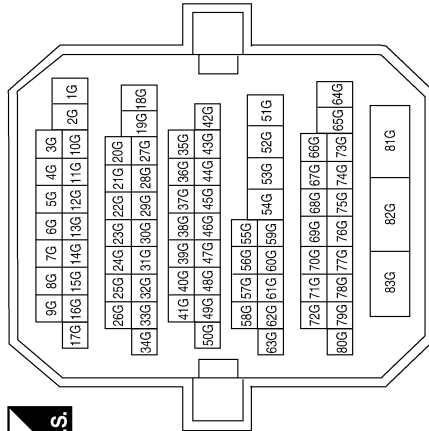

Terminal No.	Color of Wire	Signal Name
8G	P	—
15G	L	—
82G	W/B	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	—
7N	Y/R	—


Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	12M
Color of Wire	O
Signal Name	—

Terminal No.	1
Color of Wire	W/B
Signal Name	BAT_POWER_F/L


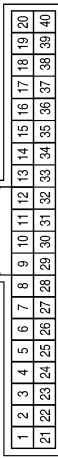
Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1

ABLIA2339GB

FRONT FOG LAMP


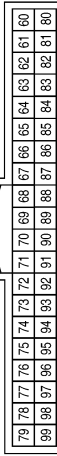
< WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE


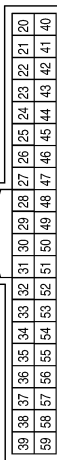
Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK


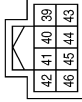
Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT_5
51	L/W	INPUT_1
52	G/B	INPUT_2
53	LG/R	INPUT_3
54	G/Y	INPUT_4

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT_4
5	LG/R	OUTPUT_3
7	R/G	INPUT_3
8	LG/B	OUTPUT_5
9	R/B	INPUT_2
10	P/B	INPUT_4
11	R/W	INPUT_1
12	L/W	OUTPUT_1
13	R/Y	INPUT_5
14	G/B	OUTPUT_2

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




ABLIA2340GB

FRONT FOG LAMP

< WIRING DIAGRAM >


Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-


Terminal No.	Color of Wire	Signal Name
12	B	GND (POWER)

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

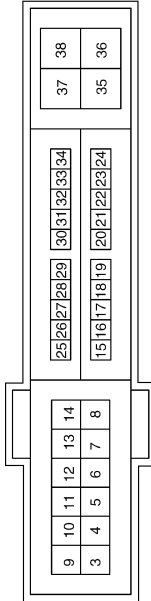

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

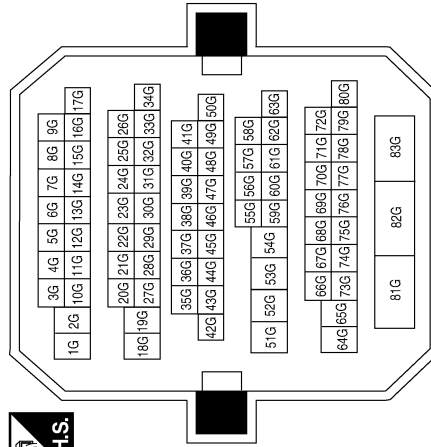

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABLIA2341GB

FRONT FOG LAMP

< WIRING DIAGRAM >

Connector No.	E227
Connector Name	FRONT FOG LAMP RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W/R	FR_FOG_RLY
2	B	GND

Connector No.	E214
Connector Name	FRONT FOG LAMP LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L/Y	FR_FOG_RLY
2	B	GND

Connector No.	E200
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
86	W/R	FR_FOG_LAMP_RH
87	L/Y	FR_FOG_LAMP_LH

ABLIA2342GB


TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >

TURN SIGNAL AND HAZARD WARNING LAMPS

Wiring Diagram - Coupe

INFOID:000000007418493

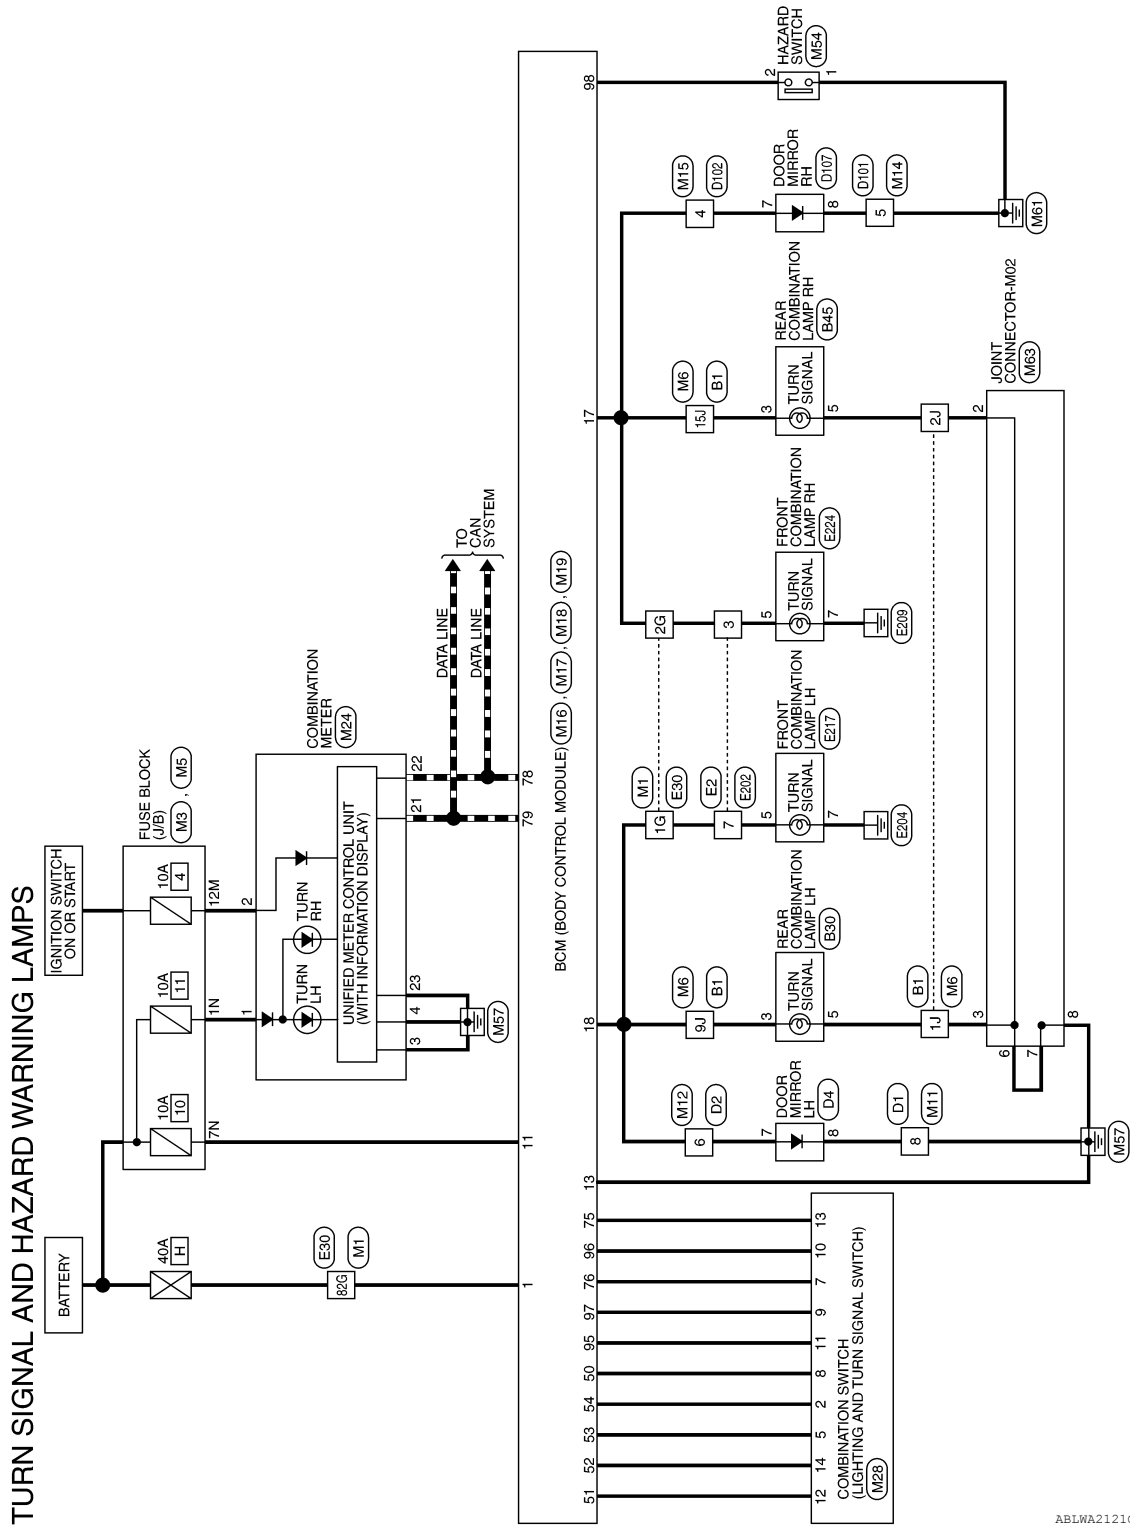


TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >


TURN SIGNAL AND HAZARD WARNING LAMPS CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

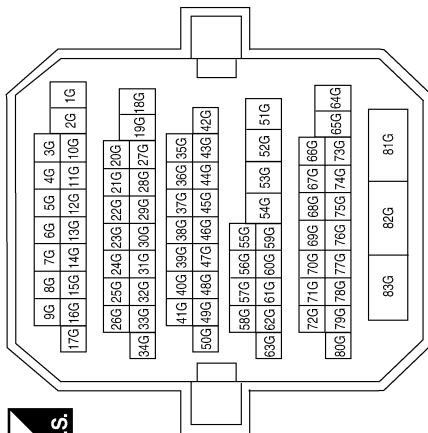

Terminal No.	Color of Wire	Signal Name
1G	G/Y	—
2G	G/B	—
82G	W/B	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	—
7N	Y/R	—

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
12M	O	—

TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

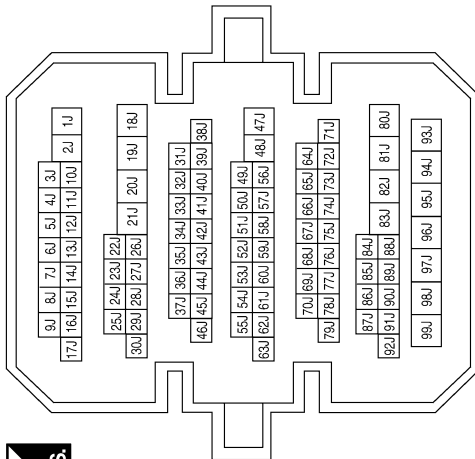


Terminal No.	Color of Wire	Signal Name
1J	B	-
2J	B	-
9J	G/Y	-
15J	G/B	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
8	B	-


Connector No.	M12
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M15
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	G/Y	-

Terminal No.	Color of Wire	Signal Name
5	B	-

Terminal No.	Color of Wire	Signal Name
4	G/B	-

ABLIA2344GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1
17	G/B	FR_FLASHER
18	G/Y	FL_FLASHER

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

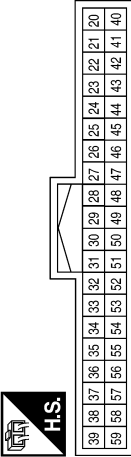


Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT 5
51	L/W	INPUT 1
52	G/B	INPUT 2
53	LG/R	INPUT 3
54	G/Y	INPUT 4

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

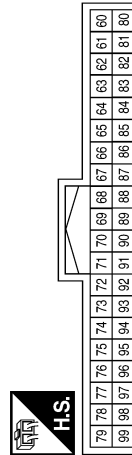


Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT 5
76	R/G	OUTPUT 3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT 1
96	P/B	OUTPUT 4
97	R/B	OUTPUT 2
98	G/O	HAZARD SW

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

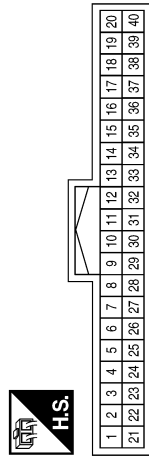

Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT 4
5	LG/R	OUTPUT 3
7	R/G	INPUT 3
8	LG/B	OUTPUT 5
9	R/B	INPUT 2
10	P/B	INPUT 4
11	R/W	INPUT 1
12	L/W	OUTPUT 1
13	R/Y	INPUT 5
14	G/B	OUTPUT 2

TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

Connector No.	M54
Connector Name	HAZARD SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	GND
2	G/O	HAZARD_SW

Connector No.	M63
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
2	B	-
3	B	-
6	B	-
7	B	-
8	B	-

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	SB	-
7	Y	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

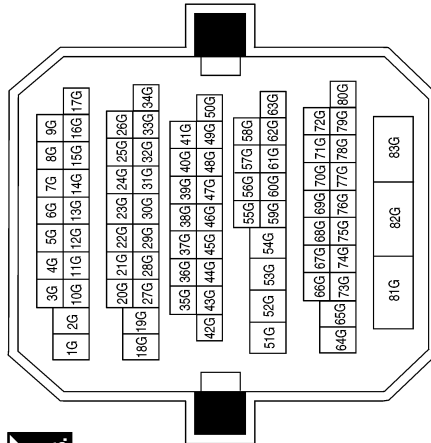

Terminal No.	Color of Wire	Signal Name
1G	Y	-
2G	SB	-
82G	LG	-

Connector No.	E202
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	G/B	-
7	G/Y	-

ABLIA4741GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >

Connector No.	E217
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
5	G/Y	FLASHER OUT PUT (LEFT)
7	B	GND

Connector No.	E224
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
5	G/B	FLASHER OUT PUT (RIGHT)
7	B	GND

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

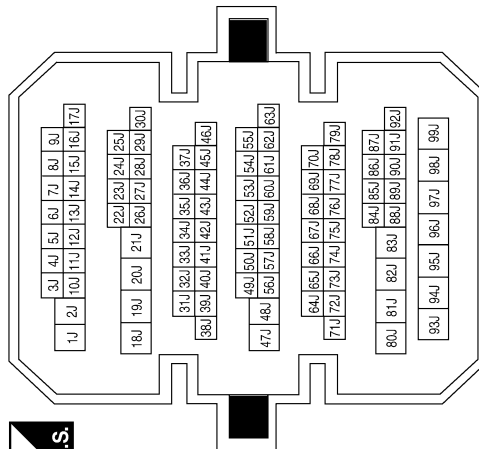

Terminal No.	Color of Wire	Signal Name
1J	B/W	-
2J	B	-
9J	G	-
15J	BR	-

Connector No.	B30
Connector Name	REAR COMBINATION LAMP LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	G	FLASHER OUT PUT (LEFT)
5	B/W	GND

ABLIA2347GB

TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

Connector No.	B45
Connector Name	REAR COMBINATION LAMP RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	BR	FLASHER OUT PUT (RIGHT)
5	B	GND

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
8	B	—

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6	GR	—

Connector No.	D4
Connector Name	DOOR MIRROR LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	GR	TURN(+)
8	B	TURN(-)

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	B	—

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	W	—

ABLIA2348GB

TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >

Connector No.	D107
Connector Name	DOOR MIRROR RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	W	TURN(+)
8	B	TURN(-)


ABLIA2349GB

TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >

Wiring Diagram - Sedan

INFOID:000000007418494

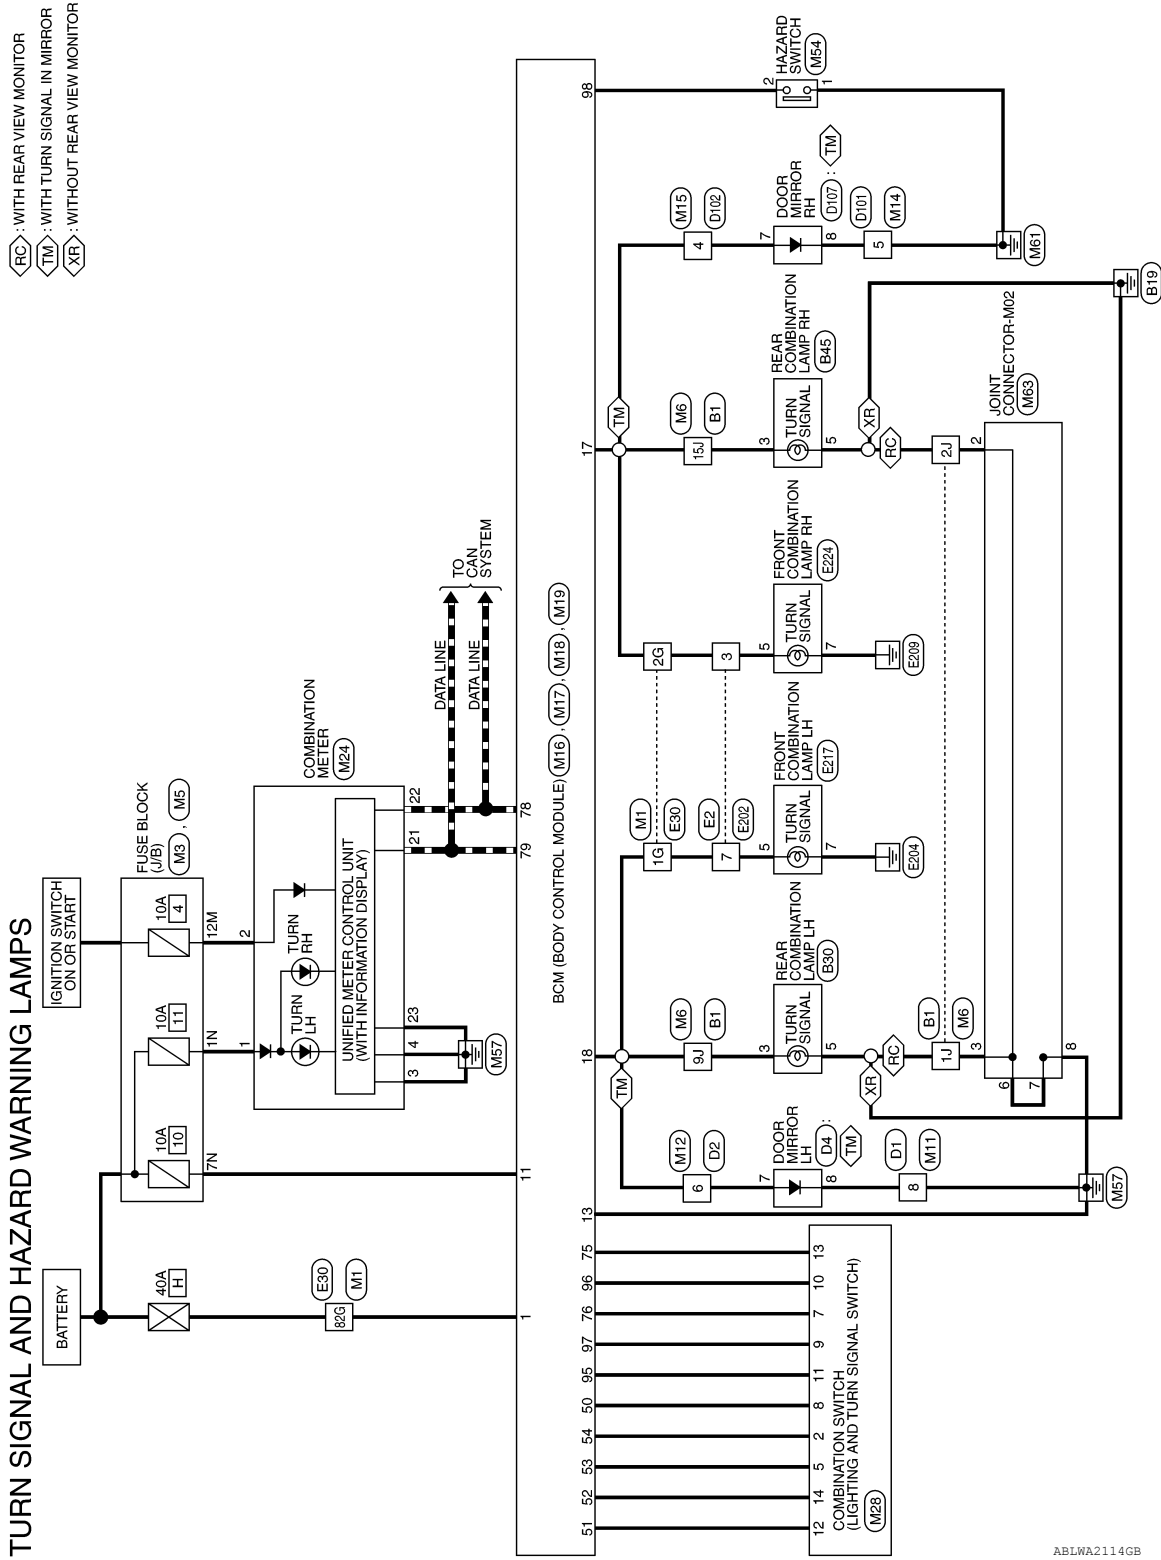


ABLWA2114GB

TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >


TURN SIGNAL AND HAZARD WARNING LAMPS CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

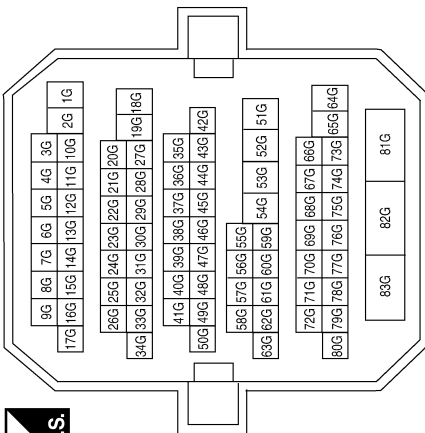

Terminal No.	Color of Wire	Signal Name
1G	G/Y	—
2G	G/B	—
82G	W/B	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	—
7N	Y/R	—

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
12M	O	—

TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

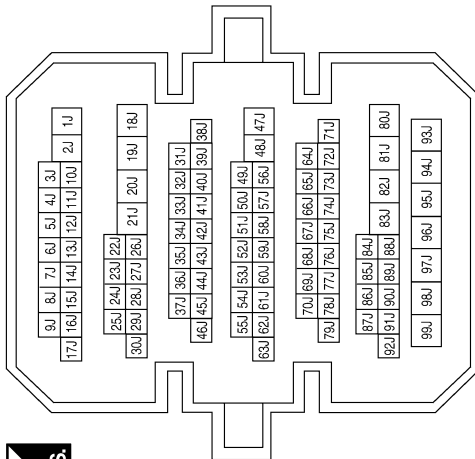


Terminal No.	Color of Wire	Signal Name
1J	B	-
2J	B	-
9J	G/Y	-
15J	G/B	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
8	B	-


Connector No.	M12
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M15
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	G/Y	-

Terminal No.	Color of Wire	Signal Name
5	B	-

Terminal No.	Color of Wire	Signal Name
4	G/B	-

ABLIA2351GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1
17	G/B	FR_FLASHER
18	G/Y	FL_FLASHER

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN

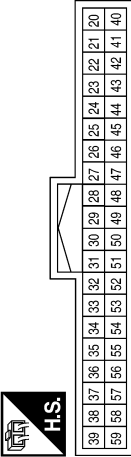


Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT_5
51	L/W	INPUT_1
52	G/B	INPUT_2
53	LG/R	INPUT_3
54	G/Y	INPUT_4

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

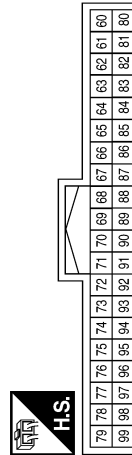


Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT_5
76	R/G	OUTPUT_3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT_1
96	P/B	OUTPUT_4
97	R/B	OUTPUT_2
98	G/O	HAZARD_SW

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

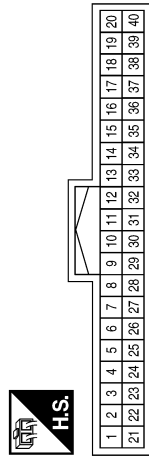

Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT_4
5	LG/R	OUTPUT_3
7	R/G	INPUT_3
8	LG/B	OUTPUT_5
9	R/B	INPUT_2
10	P/B	INPUT_4
11	R/W	INPUT_1
12	L/W	OUTPUT_1
13	R/Y	INPUT_5
14	G/B	OUTPUT_2

TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

Connector No.	M54
Connector Name	HAZARD SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	GND
2	G/O	HAZARD_SW

Connector No.	M63
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
2	B	-
3	B	-
6	B	-
7	B	-
8	B	-

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	SB	-
7	Y	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

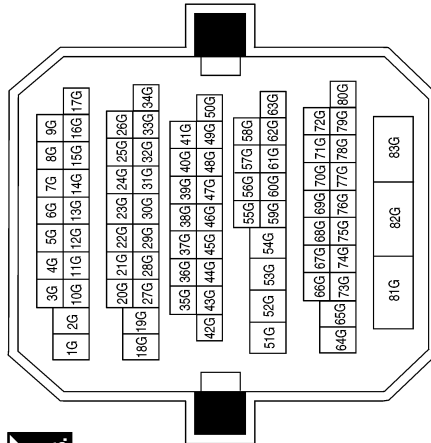

Terminal No.	Color of Wire	Signal Name
1G	Y	-
2G	SB	-
82G	LG	-

Connector No.	E202
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	G/B	-
7	G/Y	-

ABLIA4734GB

TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >

Connector No.	E217
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
5	G/Y	FLASHER OUT PUT (LEFT)
7	B	GND

Connector No.	E224
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
5	G/B	FLASHER OUT PUT (RIGHT)
7	B	GND

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

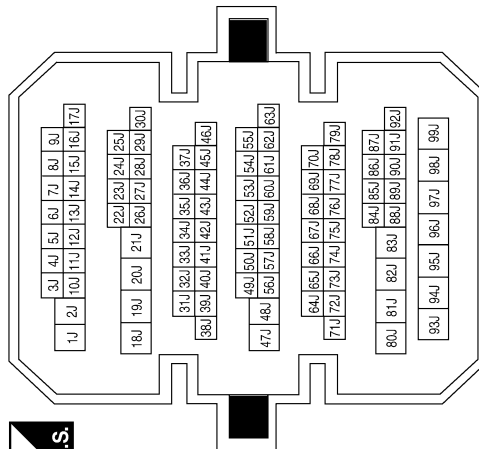

Terminal No.	Color of Wire	Signal Name
1J	B/W	-
2J	B	-
9J	G	-
15J	BR	-

Connector No.	B30
Connector Name	REAR COMBINATION LAMP LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	G	FLASHER OUT PUT (LEFT)
5	B/W	GND (WITH REAR VIEW MONITOR)
5	B	GND (WITHOUT REAR VIEW MONITOR)

AALIA0460GB

TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

Connector No.	B45
Connector Name	REAR COMBINATION LAMP RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	BR	FLASHER OUT PUT (RIGHT)
5	B	GND

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
8	B	—

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6	GR	—

Connector No.	D4
Connector Name	DOOR MIRROR LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	GR	TURN(+)
8	B	TURN(-)

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	B	—

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	W	—


ABLIA2355GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >

Connector No.	D107
Connector Name	DOOR MIRROR RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	W	TURN(+)
8	B	TURN(-)

ABLIA2356GB


PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

PARKING, LICENSE PLATE AND TAIL LAMPS

Wiring Diagram - Coupe

INFOID:000000007418495

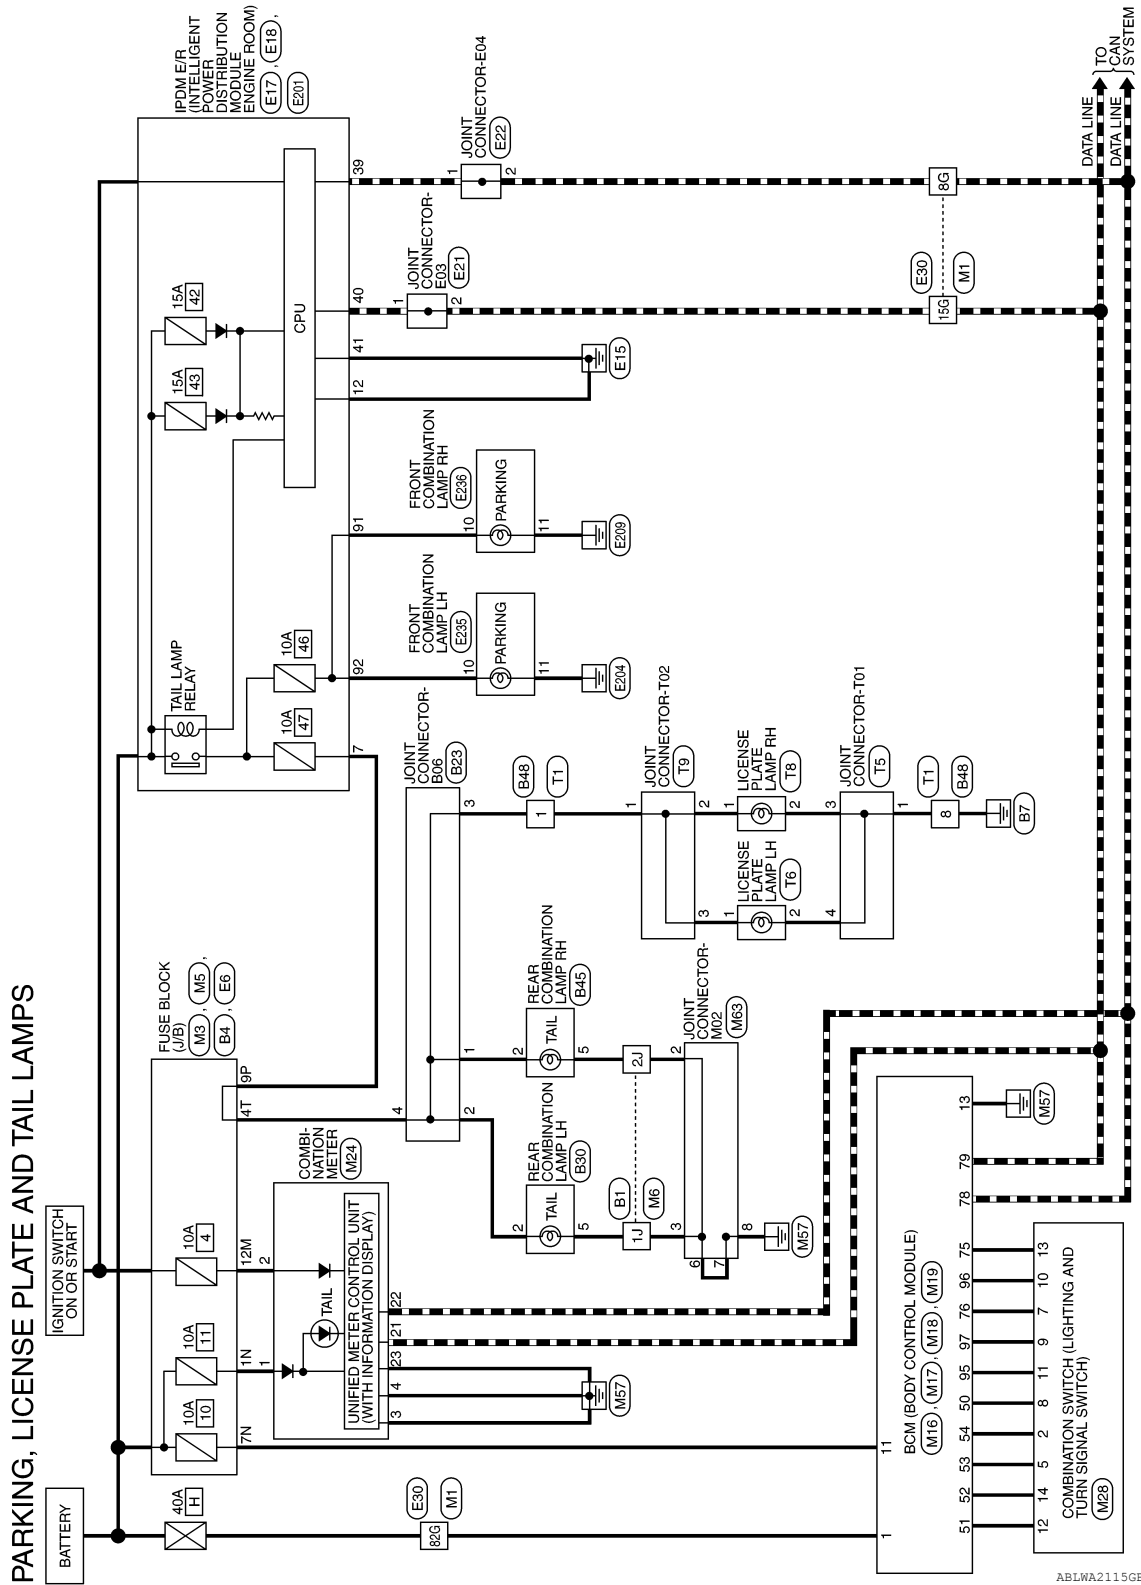


ABLWA2115GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >


PARKING, LICENSE PLATE AND TAIL LAMP CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

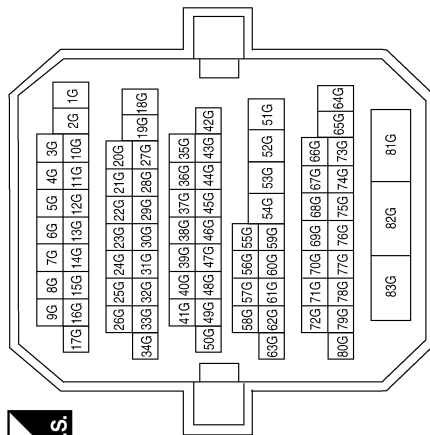


Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	W/B	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	-
7N	Y/R	-

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12M	O	-

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >


Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L


Terminal No.	Color of Wire	Signal Name
1J	B	-
2J	B	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

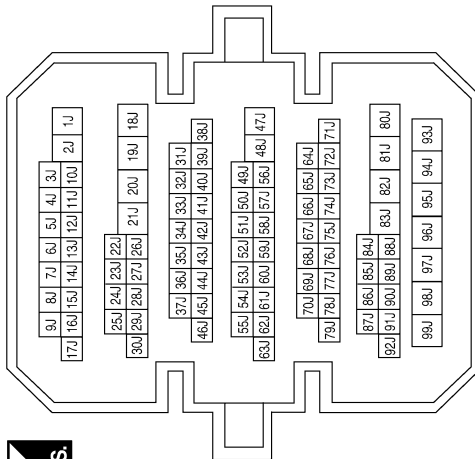

Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT 5
51	L/W	INPUT 1
52	G/B	INPUT 2
53	LG/R	INPUT 3
54	G/Y	INPUT 4

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20
59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19

Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1


ABLIA2358GB

A B C D E F G H I J K EXL M N O P

PARKING, LICENSE PLATE AND TAIL LAMPS


< WIRING DIAGRAM >

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT 4
5	LG/R	OUTPUT 3
7	R/G	INPUT 3
8	LG/B	OUTPUT 5
9	R/B	INPUT 2
10	P/B	INPUT 4
11	R/W	INPUT 1
12	L/W	OUTPUT 1
13	R/Y	INPUT 5
14	G/B	OUTPUT 2

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

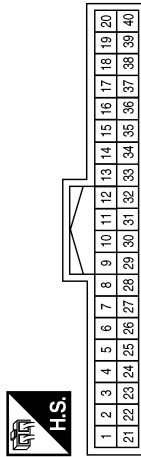


Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

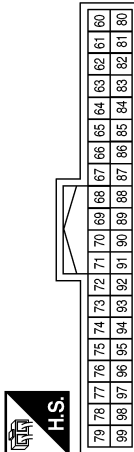

Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT 5
76	R/G	OUTPUT 3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT 1
96	P/B	OUTPUT 4
97	R/B	OUTPUT 2

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Connector No.	E6
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
9P	GR	-

Connector No.	M63
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	B	-
3	B	-
6	B	-
7	B	-
8	B	-

ABLIA4735GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >


Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-


Terminal No.	Color of Wire	Signal Name
7	GR	TAIL/ILLUMI
12	B	GND (POWER)

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

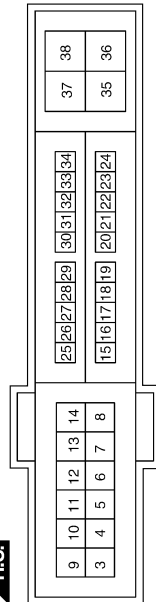

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

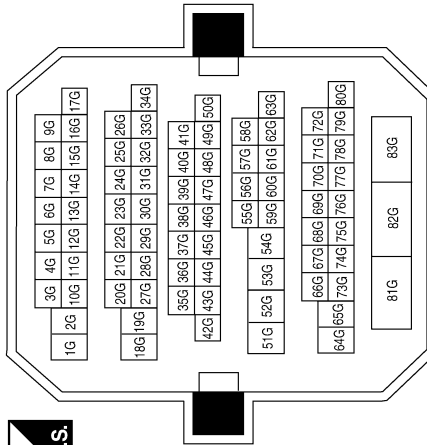

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABLIA2360GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

Connector No.	E236
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
10	G/B	-
11	B	-

Connector No.	E235
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
10	Y	-
11	B	-

Connector No.	E201
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
91	LG/R	CLEARANCE_RH
92	LG/B	CLEARANCE_LH


Connector No.	B4
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
4T	L	-

Terminal No.	Color of Wire	Signal Name
1J	B/W	-
2J	B	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

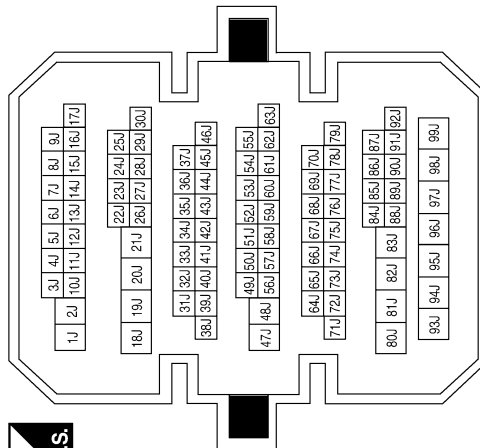

ABLIA2361GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

Connector No.	B45
Connector Name	REAR COMBINATION LAMP RH
Connector Color	WHITE



2	1
6	5
4	3

Terminal No.	Color of Wire	Signal Name
2	L	TAIL LAMP
5	B	GND

Connector No.	B30
Connector Name	REAR COMBINATION LAMP LH
Connector Color	WHITE



2	1
6	5
4	3

Terminal No.	Color of Wire	Signal Name
2	L	TAIL LAMP
5	B/W	GND

Connector No.	B23
Connector Name	JOINT CONNECTOR-B06
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	L	-
4	L	-

Connector No.	T5
Connector Name	JOINT CONNECTOR-T01
Connector Color	WHITE



4	3	2	1
---	---	---	---

Connector No.	T1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



8	7	6	5	4	3	2	1
16	15	14	13	12	11	10	9

Connector No.	B48
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
1	B/Y	-
3	B	-
4	B	-

Terminal No.	Color of Wire	Signal Name
1	L	-
8	B/Y	-


Terminal No.	Color of Wire	Signal Name
1	L	-
8	B	-

ABLIA3167GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

Connector No.	T9
Connector Name	JOINT CONNECTOR-T02
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	L	-

Connector No.	T8
Connector Name	LICENSE PLATE LAMP RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	L	TAIL LAMP
2	B	GND

Connector No.	T6
Connector Name	LICENSE PLATE LAMP LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	L	TAIL LAMP
2	B	GND


ABLIA2363GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

Wiring Diagram - Sedan

INFOID:000000007418496

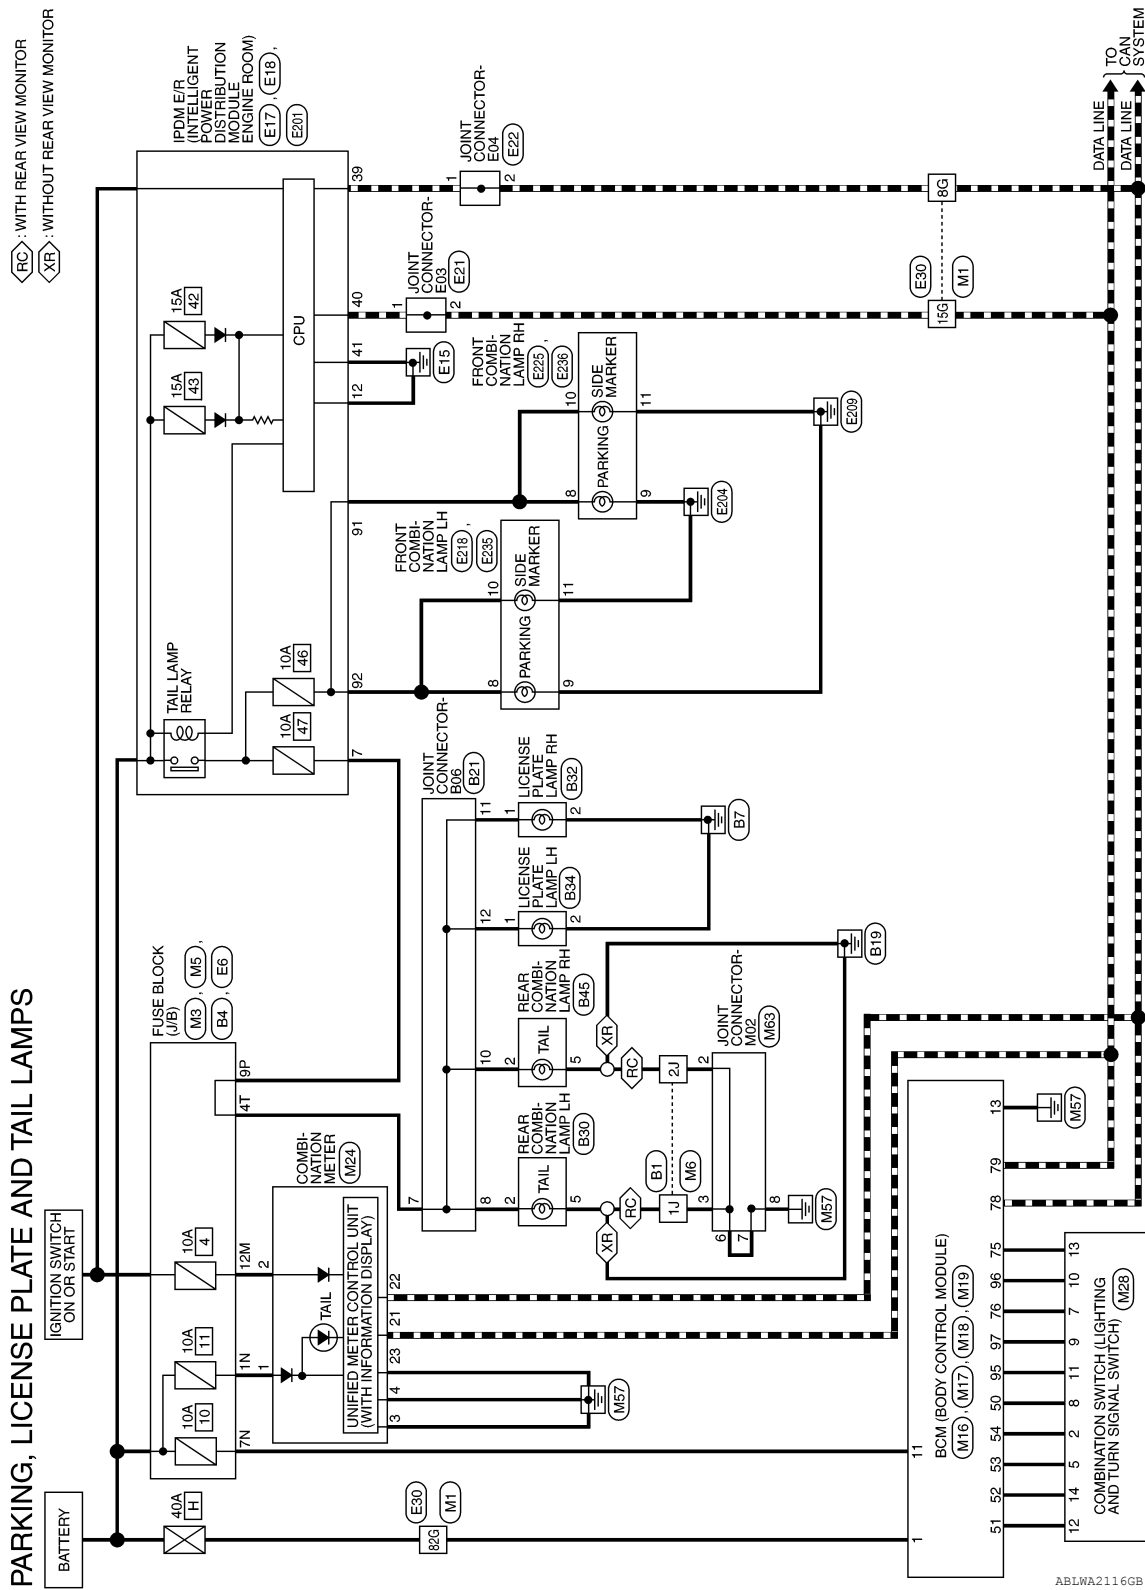


PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >


PARKING, LICENSE PLATE AND TAIL LAMP CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

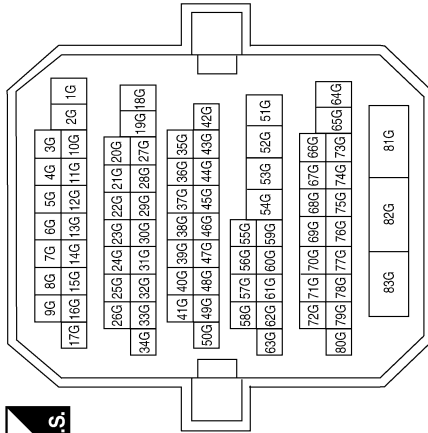


Terminal No.	Color of Wire	Signal Name
8G	P	—
15G	L	—
82G	W/B	—

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	W/L	—
7N	Y/R	—

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12M	O	—

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >


Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L


Terminal No.	Color of Wire	Signal Name
1J	B	-
2J	B	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

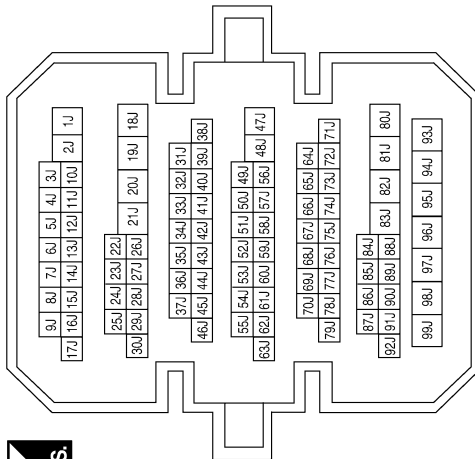


Terminal No.	Color of Wire	Signal Name
50	LG/B	INPUT 5
51	L/W	INPUT 1
52	G/B	INPUT 2
53	LG/R	INPUT 3
54	G/Y	INPUT 4

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20
59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1


ABLIA2365GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

PARKING, LICENSE PLATE AND TAIL LAMPS


< WIRING DIAGRAM >

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	G/Y	OUTPUT 4
5	G/R	OUTPUT 3
7	R/G	INPUT 3
8	LG/B	OUTPUT 5
9	R/B	INPUT 2
10	P/B	INPUT 4
11	R/W	INPUT 1
12	L/W	OUTPUT 1
13	R/Y	INPUT 5
14	G/B	OUTPUT 2

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

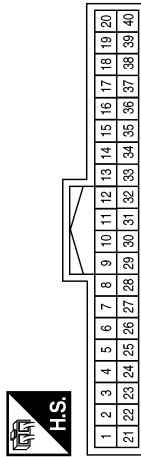

Terminal No.	Color of Wire	Signal Name
1	W/L	BAT
2	O	IGN
3	B	GND (POWER)
4	B	GND (ILL)
21	L	CAN-H
22	P	CAN-L
23	B	GND (CIRCUIT)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

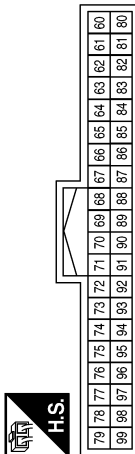


Terminal No.	Color of Wire	Signal Name
75	R/Y	OUTPUT 5
76	R/G	OUTPUT 3
78	P	CAN-L
79	L	CAN-H
95	R/W	OUTPUT 1
96	P/B	OUTPUT 4
97	R/B	OUTPUT 2

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Connector No.	E6
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
9P	GR	-

Connector No.	M63
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	B	-
3	B	-
6	B	-
7	B	-
8	B	-

ABLIA4736GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >


Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-


Terminal No.	Color of Wire	Signal Name
7	GR	TAIL/ILLUMI
12	B	GND (POWER)

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

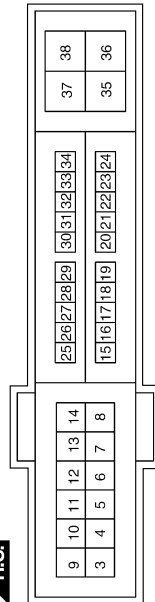


Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

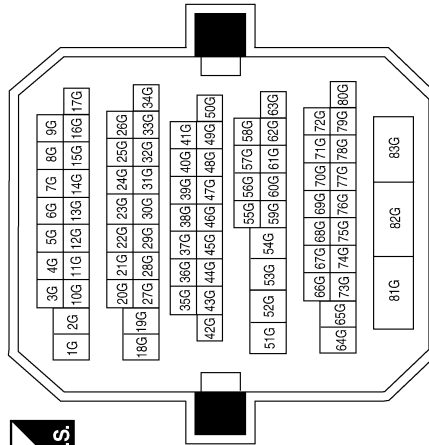

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABLIA2367GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

Connector No.	E225
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
8	LG/R	CLEARANCE
9	B	GND

Connector No.	E218
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
8	LG/B	CLEARANCE
9	B	GND

Connector No.	E201
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
91	LG/R	CLEARANCE_RH
92	LG/B	CLEARANCE_LH

Connector No.	E236
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
10	G/B	-
11	B	-

Connector No.	E235
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
10	Y	-
11	B	-

ABLIA2368GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >


Connector No.	B4
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
4T	L	-

Terminal No.	Color of Wire	Signal Name
1J	B/W	-
2J	B	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

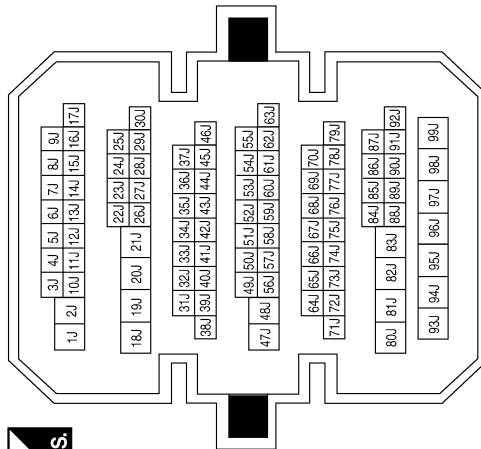


Connector No.	B32
Connector Name	LICENSE PLATE LAMP RH
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	L	TAIL LAMP
2	B	GND

Connector No.	B30
Connector Name	REAR COMBINATION LAMP LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L	TAIL LAMP
5	B/W	GND (WITH REAR VIEW MONITOR)
5	B	GND (WITHOUT REAR VIEW MONITOR)

Connector No.	B21
Connector Name	JOINT CONNECTOR-B06
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
7	L	-
8	L	-
10	L	-
11	L	-
12	L	-

AALIA0450GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

Connector No.	B45
Connector Name	REAR COMBINATION LAMP RH
Connector Color	WHITE

2	1
6	5 4 3



Terminal No.	Color of Wire	Signal Name
2	L	TAIL LAMP
5	B	GND

Connector No.	B34
Connector Name	LICENSE PLATE LAMP LH
Connector Color	BROWN

2	1
---	---



Terminal No.	Color of Wire	Signal Name
1	L	TAIL LAMP
2	B	GND

ABLIA2370GB

STOP LAMP


< WIRING DIAGRAM >

STOP LAMP

Wiring Diagram - Coupe

INFOID:000000007418497

STOP LAMP

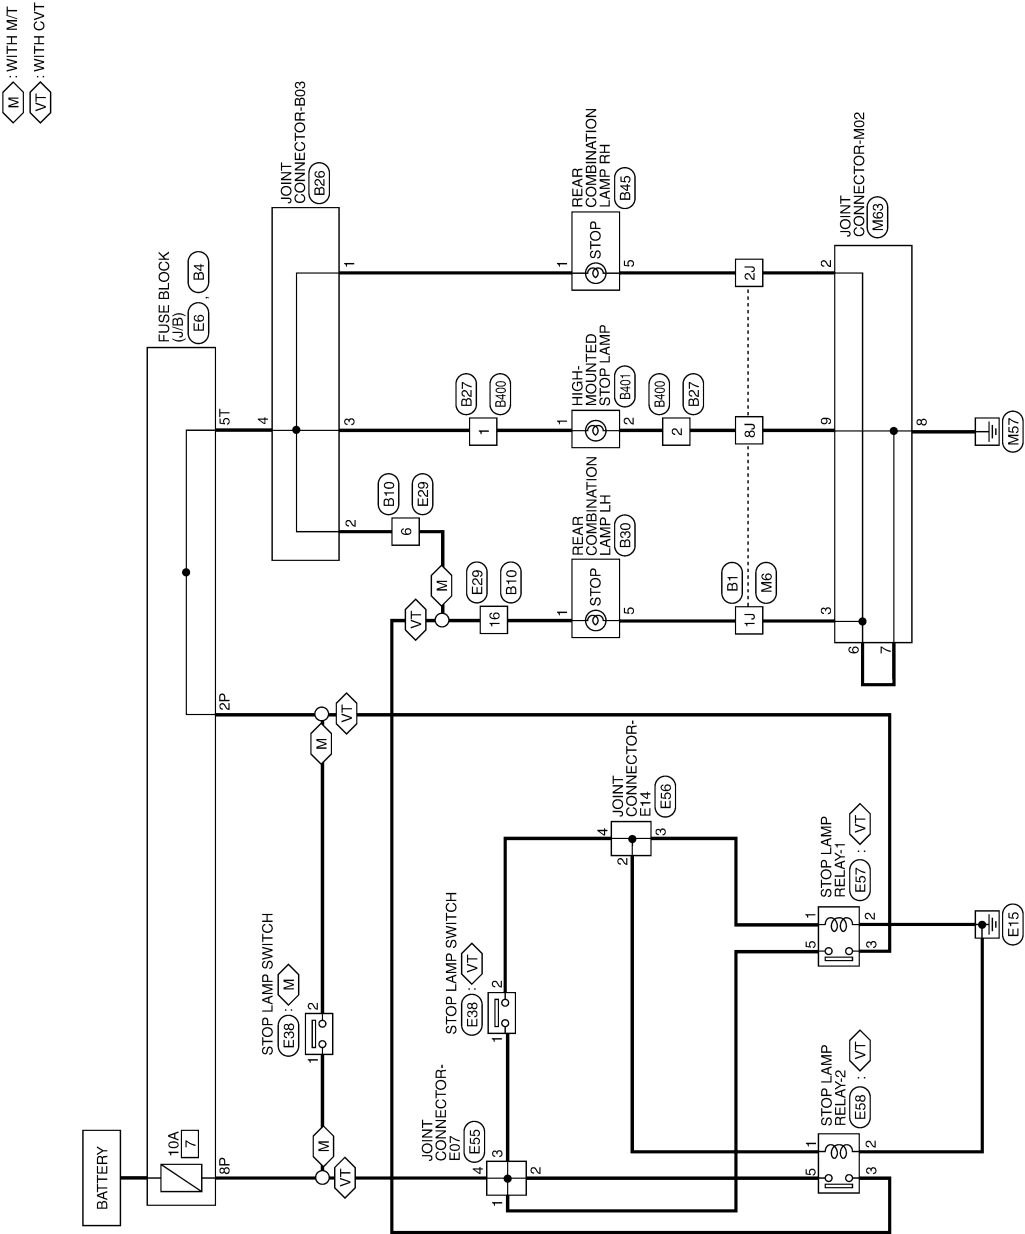

ABLWA2117GB


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

STOP LAMP

< WIRING DIAGRAM >


STOP LAMP CONNECTORS

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

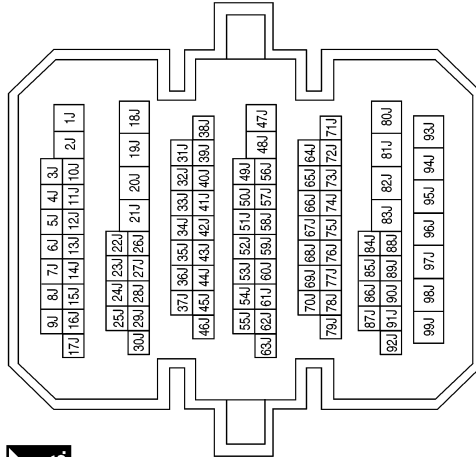

Terminal No.	Color of Wire	Signal Name
1J	B	-
2J	B	-
8J	B	-

Connector No.	M63
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	B	-
3	B	-
6	B	-
7	B	-
8	B	-
9	B	-

Connector No.	E6
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2P	LG	- (WITH M/T)
2P	Y	- (WITH CVT)
8P	R	-

Connector No.	E29
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	O	-
16	W	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH CVT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R	-
2	LG	-

STOP LAMP

< WIRING DIAGRAM >

Connector No.	E56
Connector Name	JOINT CONNECTOR-E14
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	LG	-
3	LG	-
4	LG	-

Connector No.	E55
Connector Name	JOINT CONNECTOR-E07
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	R	-
3	R	-
4	R	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH M/T)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	-
2	LG	-

Connector No.	E58
Connector Name	STOP LAMP RELAY-2
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-
3	W	-
5	R	-

Connector No.	E57
Connector Name	STOP LAMP RELAY-1
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-
3	Y	-
5	W	-

AALIA0453GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
1	O	—
2	R	—

STOP LAMP


< WIRING DIAGRAM >

Connector No.	B400
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	O	—
2	B	—

Connector No.	B45
Connector Name	REAR COMBINATION LAMP RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	STOP LAMP
5	B	GND

Connector No.	B30
Connector Name	REAR COMBINATION LAMP LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	STOP LAMP
5	B/W	GND

Connector No.	B401
Connector Name	HIGH-MOUNTED STOP LAMP
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	STOP LAMP
2	B	GND

AALIA0455GB


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

STOP LAMP

< WIRING DIAGRAM >

Wiring Diagram - Sedan

INFOID:000000007418498

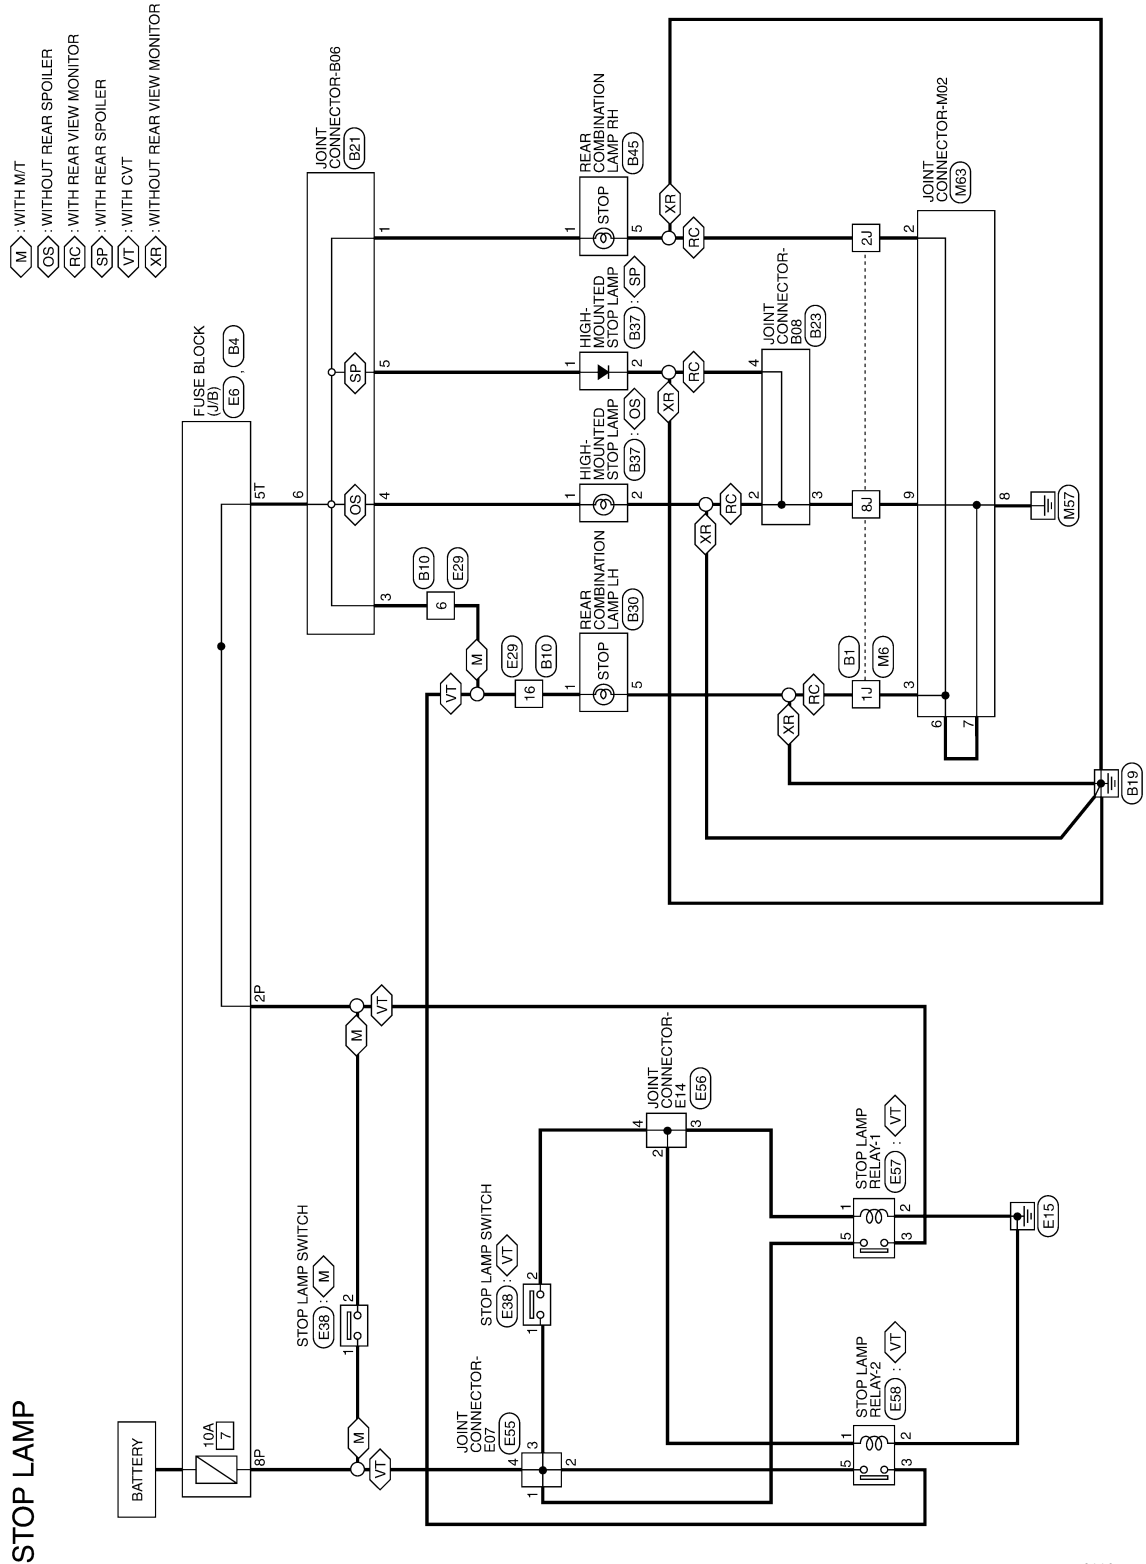


ABLWA2118GB

STOP LAMP

< WIRING DIAGRAM >


STOP LAMP CONNECTORS

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

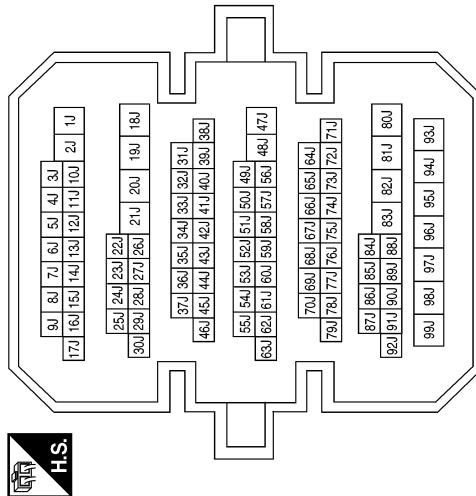


Terminal No.	Color of Wire	Signal Name
1J	B	-
2J	B	-
8J	B	-

Connector No.	M63
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
2	B	-
3	B	-
6	B	-
7	B	-
8	B	-
9	B	-

Connector No.	E6
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2P	LG	- (WITH M/T)
2P	Y	- (WITH CVT)
8P	R	-

Connector No.	E29
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	O	-
16	W	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH CVT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R	-
2	LG	-

STOP LAMP

< WIRING DIAGRAM >

Connector No.	E56
Connector Name	JOINT CONNECTOR-E14
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	LG	-
3	LG	-
4	LG	-

Connector No.	E55
Connector Name	JOINT CONNECTOR-E07
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	R	-
3	R	-
4	R	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH M/T)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	-
2	LG	-

Connector No.	E58
Connector Name	STOP LAMP RELAY-2
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-
3	W	-
5	R	-

Connector No.	E57
Connector Name	STOP LAMP RELAY-1
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-
3	Y	-
5	W	-

AALIA0457GB

STOP LAMP

< WIRING DIAGRAM >

Connector No.	B4
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN


5T	4T	3T	2T	1T
12T	11T	10T	9T	8T
7T	6T	5T	4T	3T



Terminal No.	Color of Wire	Signal Name
5T	O	-

Terminal No.	Color of Wire	Signal Name
1J	B/W	-
2J	B	-
8J	B	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

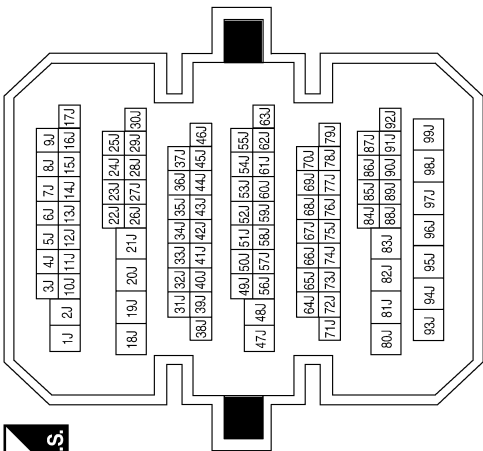

Connector No.	B23
Connector Name	JOINT CONNECTOR-B08
Connector Color	WHITE

4	3	2	1
---	---	---	---



Terminal No.	Color of Wire	Signal Name
2	B	-
3	B	-
4	B	-

Connector No.	B21
Connector Name	JOINT CONNECTOR-B06
Connector Color	BLUE

12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	---	---	---	---	---	---	---	---	---



Terminal No.	Color of Wire	Signal Name
1	O	-
3	O	-
4	O	-
5	O	-
6	O	-

Connector No.	B10
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21



Terminal No.	Color of Wire	Signal Name
6	O	-
16	W	-

AALIA0458GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

STOP LAMP

< WIRING DIAGRAM >

Connector No.	B37
Connector Name	HIGH-MOUNTED STOP LAMP (WITH REAR SPOILER)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	O	STOP LAMP
2	B	GND

Connector No.	B37
Connector Name	HIGH-MOUNTED STOP LAMP (WITHOUT REAR SPOILER)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	O	STOP LAMP
2	B	GND

Connector No.	B30
Connector Name	REAR COMBINATION LAMP LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	STOP LAMP
5	B/W	GND (WITH REAR VIEW MONITOR)
5	B	GND (WITHOUT REAR VIEW MONITOR)

Connector No.	B45
Connector Name	REAR COMBINATION LAMP RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	STOP LAMP
5	B	GND

AALIA0459GB


EXL-183

BACK-UP LAMP

Wiring Diagram - Coupe

INFOID:0000000007418499

BACK-UP LAMP

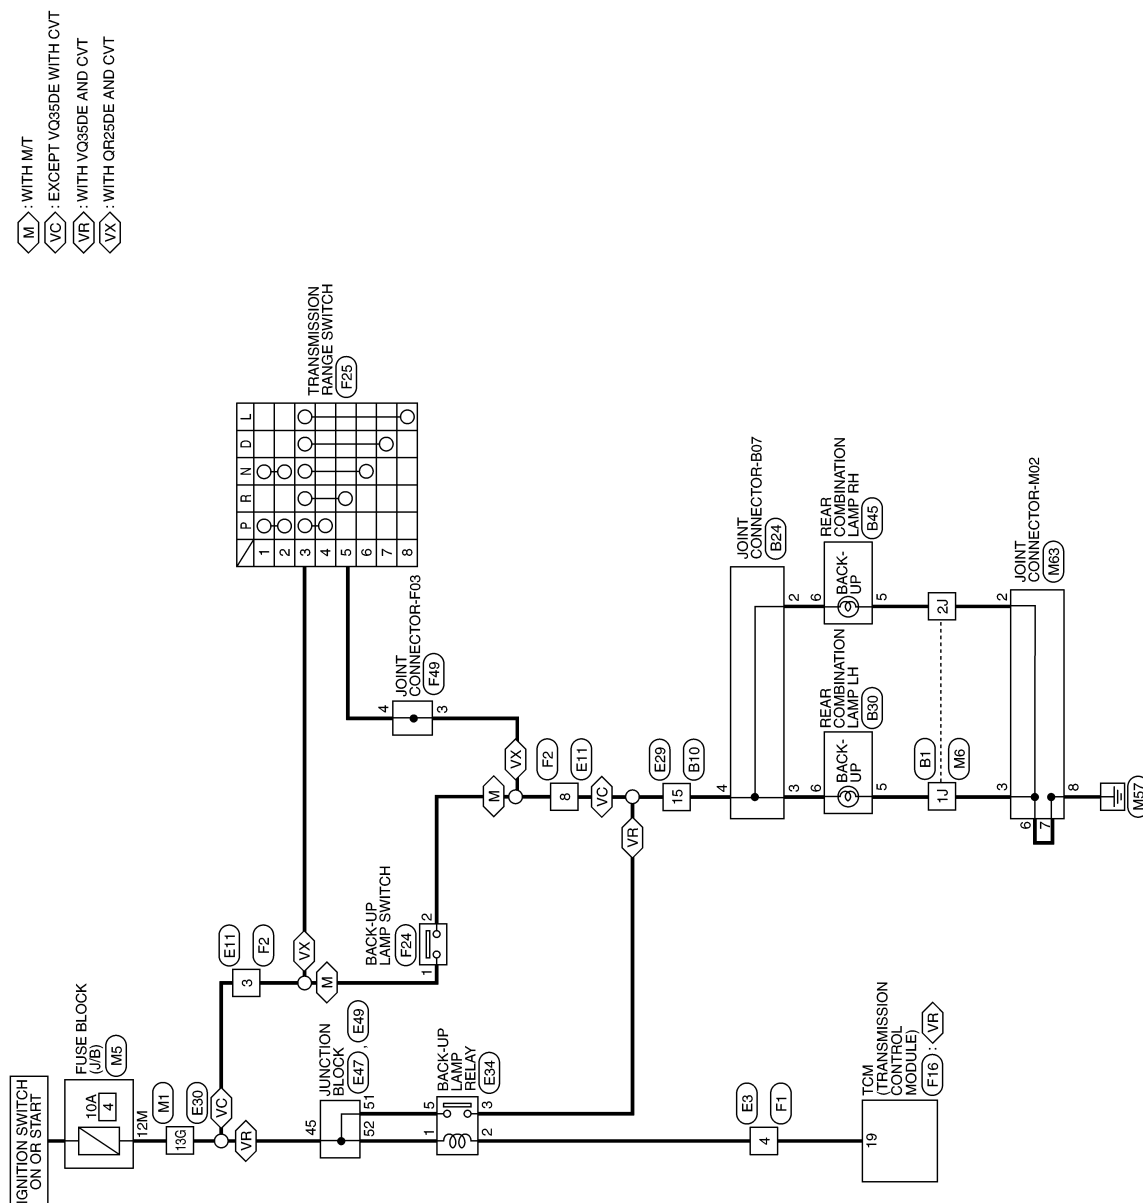

ABLWA2119GB


EXL

BACK-UP LAMP

< WIRING DIAGRAM >


BACK-UP LAMP CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

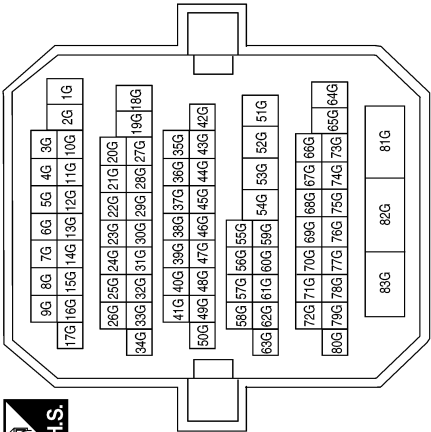


Terminal No.	Color of Wire	Signal Name
13G	O	—

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
12M	O	—

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

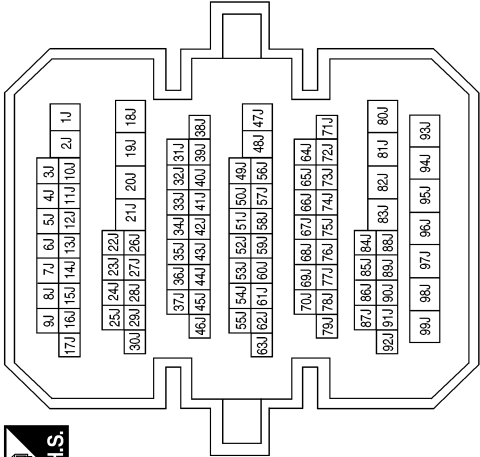


Terminal No.	Color of Wire	Signal Name
1J	B	—
2J	B	—

Connector No.	M63
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	B	—
3	B	—
6	B	—
7	B	—
8	B	—

Connector No.	E3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	R	—

< WIRING DIAGRAM >

Connector No.	E29
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
15	W	-

Terminal No.	Color of Wire	Signal Name
13G	BR	-


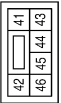
Terminal No.	Color of Wire	Signal Name
1	O	—
2	R	—
3	W	—
5	LG	—

EXL

BACK-UP LAMP


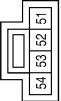
< WIRING DIAGRAM >

Connector No.	E47
Connector Name	JUNCTION BLOCK
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
45	BR	—

Connector No.	E49
Connector Name	JUNCTION BLOCK
Connector Color	BROWN


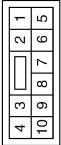
Terminal No.	Color of Wire	Signal Name
51	LG	—
52	O	—

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Color	WHITE




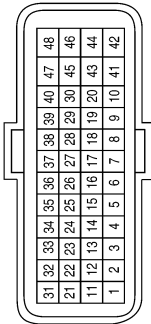

Terminal No.	Color of Wire	Signal Name
4	G	—

Connector No.	F2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	O	—
8	R	—

Connector No.	F16
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
19	G	REV LAMP RLY

Connector No.	F24
Connector Name	BACK-UP LAMP SWITCH
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
1	O	—
2	R	—

ABLIA2379GB

BACK-UP LAMP

< WIRING DIAGRAM >

Connector No.	F25
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	O	IGN
5	R	R OUTPUT

Connector No.	F49
Connector Name	JOINT CONNECTOR-F03
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	R	-
4	R	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

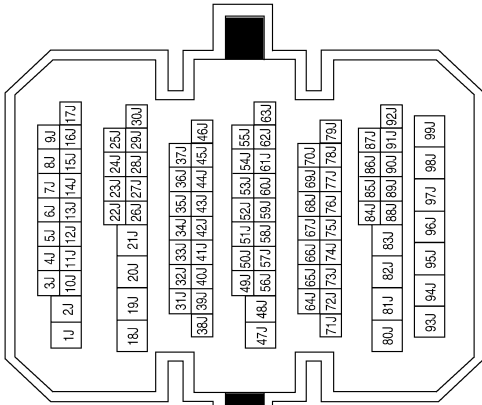

Terminal No.	Color of Wire	Signal Name
1J	B/W	-
2J	B	-

Connector No.	B10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
15	V	-

ABLIA2380GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL

BACK-UP LAMP

< WIRING DIAGRAM >

Connector No.	B45
Connector Name	REAR COMBINATION LAMP RH
Connector Color	WHITE



2	1
6	5 4 3

Terminal No.	Color of Wire	Signal Name
5	B	GND
6	V	REV LAMP

Connector No.	B30
Connector Name	REAR COMBINATION LAMP LH
Connector Color	WHITE



2	1
6	5 4 3

Terminal No.	Color of Wire	Signal Name
5	B/W	GND
6	V	REV LAMP

Connector No.	B24
Connector Name	JOINT CONNECTOR-B07
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
2	V	-
3	V	-
4	V	-

ABLIA3169GB

BACK-UP LAMP


< WIRING DIAGRAM >

Wiring Diagram - Sedan

INFOID:000000007418500

BACK-UP LAMP

- M : WITH M/T
- RC : WITH REAR VIEW MONITOR
- VC : EXCEPT VQ35DE WITH CVT
- VR : WITH VQ35DE AND CVT
- VX : WITH QR25DE AND CVT
- XR : WITHOUT REAR VIEW MONITOR

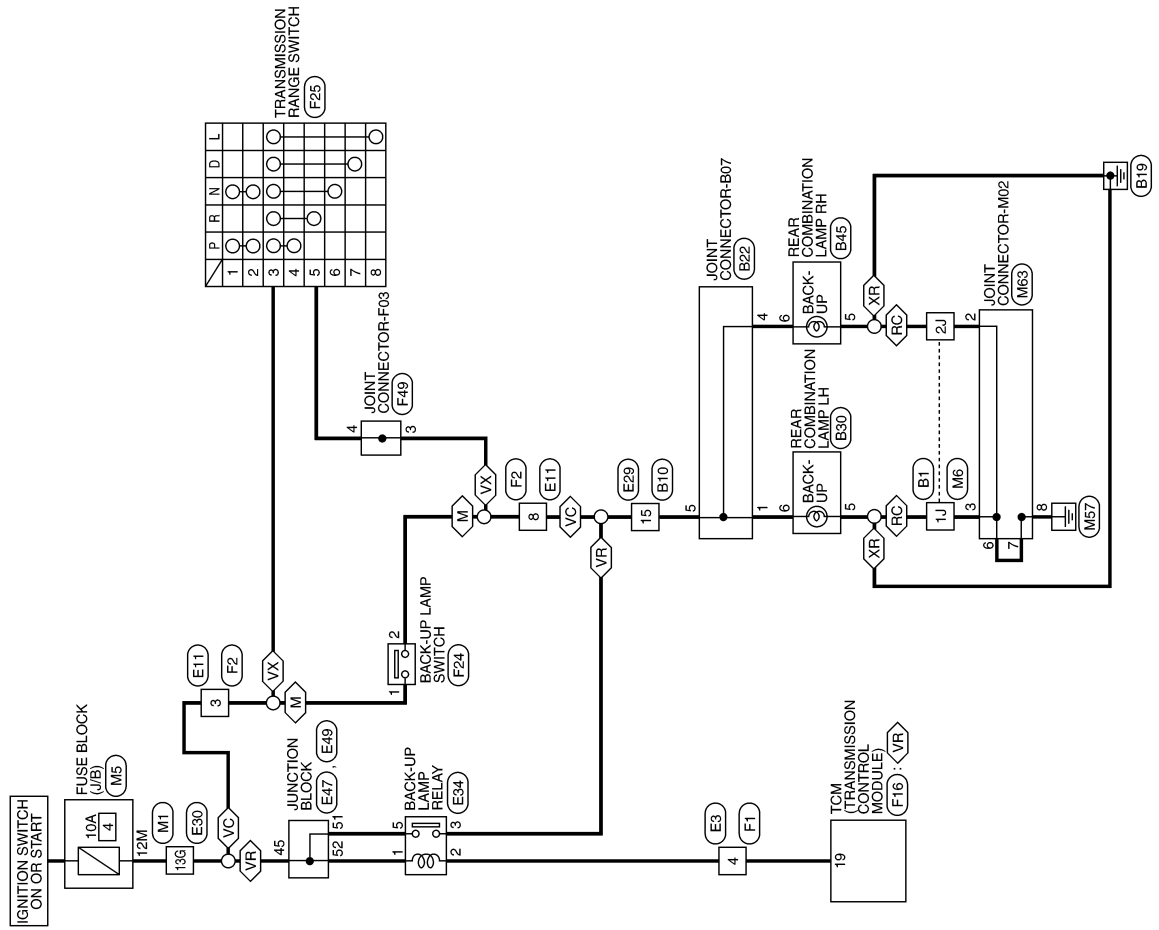

ABLWA2120GB

EXL

M
N
O
P


A
B
C
D
E
F
G
H
I
J
K

BACK-UP LAMP

< WIRING DIAGRAM >


BACK-UP LAMP CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

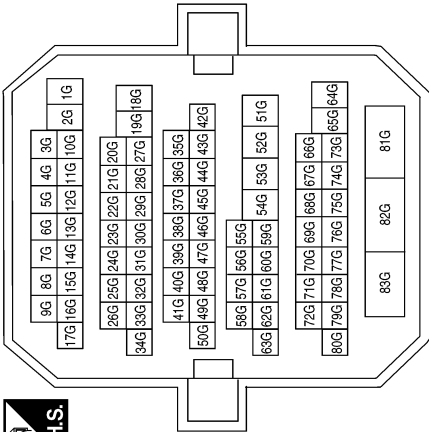


Terminal No.	Color of Wire	Signal Name
13G	O	—

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12M	O	—

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

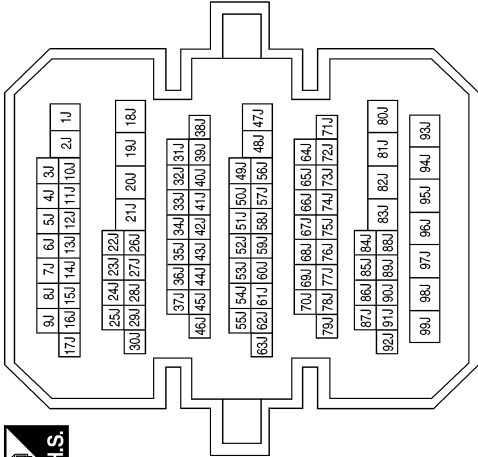


Terminal No.	Color of Wire	Signal Name
1J	B	—
2J	B	—

Connector No.	M63
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	B	—
3	B	—
6	B	—
7	B	—
8	B	—

Connector No.	E3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	R	—

BACK-UP LAMP

< WIRING DIAGRAM >

Connector No.	E11
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4
5	6	7	8
9	10		

Connector No.	E29
Connector Name	WIRE TO WIRE
Connector Color	WHITE




7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name
3	BR	-
8	W	-

Terminal No.	Color of Wire	Signal Name
15	W	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

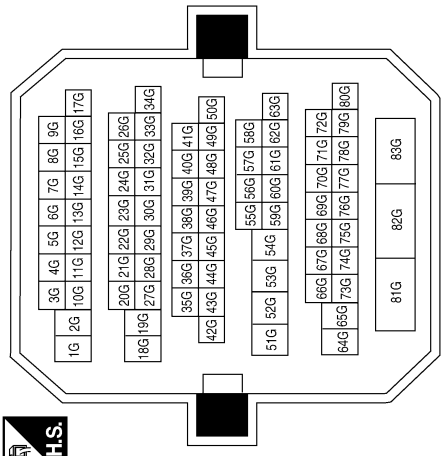

Terminal No.	Color of Wire	Signal Name
13G	BR	-

Connector No.	E34
Connector Name	BACK-UP LAMP RELAY
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	O	-
2	R	-
3	W	-
5	LG	-

EXL

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

BACK-UP LAMP

< WIRING DIAGRAM >

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					

Terminal No.	Color of Wire	Signal Name
4	G	—

Connector No.	E49
Connector Name	JUNCTION BLOCK
Connector Color	BROWN



54	53	52	51
----	----	----	----

Terminal No.	Color of Wire	Signal Name
51	LG	—
52	O	—

Connector No.	E47
Connector Name	JUNCTION BLOCK
Connector Color	WHITE



42	41
46	45
44	43

Terminal No.	Color of Wire	Signal Name
45	BR	—

Connector No.	F24
Connector Name	BACK-UP LAMP SWITCH
Connector Color	BLACK



2	1
---	---

Terminal No.	Color of Wire	Signal Name
1	O	—
2	R	—

Connector No.	F16
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	BLACK



31	32	33	34	35	36	37	38	39	40	47	48
21	22	23	24	25	26	27	28	29	30	45	46
11	12	13	14	15	16	17	18	19	20	43	44
1	2	3	4	5	6	7	8	9	10	41	42

Terminal No.	Color of Wire	Signal Name
19	G	REV LAMP RLY

Connector No.	F2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



4	3	2	1
10	9	8	7
6	5		

Terminal No.	Color of Wire	Signal Name
3	O	—
8	R	—

ABLIA2384GB

BACK-UP LAMP

< WIRING DIAGRAM >

Connector No.	F25
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	O	IGN
5	R	R OUTPUT

Connector No.	F49
Connector Name	JOINT CONNECTOR-F03
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
3	R	-
4	R	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

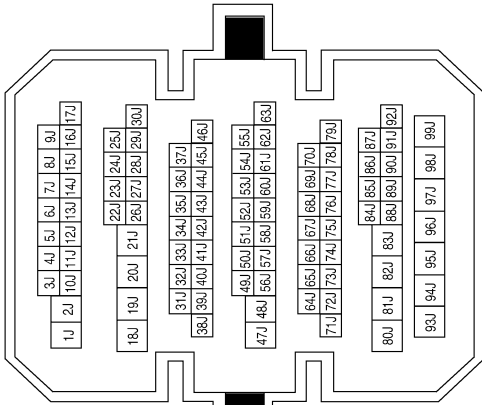

Terminal No.	Color of Wire	Signal Name
1J	B/W	-
2J	B	-

Connector No.	B10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
15	V	-

AALIA0451GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL

BACK-UP LAMP

< WIRING DIAGRAM >

Connector No.	B45
Connector Name	REAR COMBINATION LAMP RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	B	GND
6	V	REV LAMP

Connector No.	B30
Connector Name	REAR COMBINATION LAMP LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	B/W	GND (WITH REAR VIEW MONITOR)
5	B	GND (WITHOUT REAR VIEW MONITOR)
6	V	REV LAMP

Connector No.	B22
Connector Name	JOINT CONNECTOR-B07
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	V	-
4	V	-
5	V	-

AALIA0449GB

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

EXTERIOR LIGHTING SYSTEM SYMPTOMS

Symptom Table

INFOID:000000007418501

CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item
Headlamp does not switch to the high beam.	One side	<ul style="list-style-type: none"> Fuse Harness between IPDM E/R and the front combination lamp Front combination lamp (High beam relay) IPDM E/R Headlamp ground 	Headlamp (HI) circuit Refer to EXL-36 .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM" Refer to EXL-198 .	
High beam indicator lamp is not turned ON. (Headlamp switches to the high beam.)		<ul style="list-style-type: none"> Combination meter BCM 	<ul style="list-style-type: none"> Combination meter. Data monitor "HI-BEAM IND" BCM (HEAD LAMP) Active test "HEADLAMP"
Headlamp does not switch to the low beam.	One side	<ul style="list-style-type: none"> Fuse Harness between IPDM E/R and the front combination lamp Front combination lamp IPDM E/R Headlamp ground 	—
	Both sides	<ul style="list-style-type: none"> Combination switch (lighting and turn signal switch) Harness between the combination switch (lighting and turn signal switch) and BCM BCM IPDM E/R 	Combination switch (lighting and turn signal switch) Refer to BCS-37 .
		High beam request signal	IPDM E/R Data monitor "HL HI REQ"
		IPDM E/R	—
Headlamp does not turn ON.	One side	<ul style="list-style-type: none"> Fuse Bulb Harness between IPDM E/R and the front combination lamp Front combination lamp IPDM E/R Headlamp ground 	Headlamp (LO) circuit Refer to EXL-38 (halogen) or EXL-39 (xenon).
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-199 , "Description".	
Headlamp does not turn OFF.	When the ignition switch is turned ON	<ul style="list-style-type: none"> BCM Combination switch (lighting and turn signal switch) 	Combination switch (lighting and turn signal switch) Refer to BCS-37 .
	The ignition switch is turned OFF (After activating the battery saver).	IPDM E/R	—

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom		Possible cause	Inspection item
Headlamp is not turned ON/OFF with the Combination switch (lighting and turn signal switch) in AUTO.		<ul style="list-style-type: none"> Combination switch (lighting and turn signal switch) Harness between the combination switch and BCM BCM 	Combination switch (lighting and turn signal switch) Refer to BCS-37 .
		<ul style="list-style-type: none"> Optical sensor Harness between the optical sensor and BCM BCM 	Optical sensor Refer to EXL-55 .
Front fog lamp is not turned ON (if equipped).	One side	<ul style="list-style-type: none"> Front fog lamp bulb Harness between IPDM E/R and the front fog lamp Front fog lamp IPDM E/R Front fog lamp ground 	Front fog lamp circuit Refer to EXL-43 .
	Both side	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-201 .	
Parking lamp is not turned ON.	One side	<ul style="list-style-type: none"> Fuse Parking lamp bulb Harness between IPDM E/R and the front/rear combination lamp Front/rear combination lamp IPDM E/R Parking lamp ground 	Parking lamp circuit Refer to EXL-45 .
	Both sides	Symptom diagnosis "PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-200 .	
Turn signal lamp does not blink.	Indicator lamp is normal. (The applicable side performs the high flasher activation).	<ul style="list-style-type: none"> Harness between BCM and each turn signal lamp Turn signal lamp bulb Door mirror (if equipped with turn signals in the door mirrors) 	Turn signal lamp circuit Refer to EXL-48 .
Turn signal indicator lamp does not blink.	One side	Combination meter	—
	Both sides (Always)	<ul style="list-style-type: none"> Turn signal indicator lamp signal Combination meter BCM 	<ul style="list-style-type: none"> Combination meter. Data monitor "TURN IND" BCM (FLASHER) Active test "FLASHER"
	Both sides (Does blink when activating the hazard warning lamp with the ignition switch OFF)	<ul style="list-style-type: none"> The combination meter power supply and the ground circuit Combination meter 	Combination meter Power supply and the ground circuit Refer to MWI-33 .
One or multiple stop lamps do not illuminate		<ul style="list-style-type: none"> Harness between BCM and each stop lamp Stop lamp bulb Stop lamp switch 	Stop lamp circuit Refer to EXL-51 .
<ul style="list-style-type: none"> Hazard warning lamp does not activate. Hazard warning lamp continues activating. (Turn signal is normal) 		<ul style="list-style-type: none"> Hazard switch Harness between the hazard switch and BCM BCM 	Hazard switch Refer to EXL-58 .

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000007418502

XENON HEADLAMP

- The brightness and color of the light may vary slightly immediately after turning the headlamp ON. This condition will remain until the xenon bulb becomes stable. This is normal.
- Illumination time lag may occur between right and left. This is normal.

AUTO LIGHT SYSTEM

The auto light system may not turn the headlamp ON/OFF immediately after passing a dark area or a bright area (short tunnel, sky bridge, shadowed area etc.). This is normal.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

< SYMPTOM DIAGNOSIS >

BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

Description

INFOID:000000007418503

The headlamps (both sides) do not switch to high beam when the combination switch (lighting and turn signal switch) is in the HI or PASS setting.

Diagnosis Procedure

INFOID:000000007418504

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-37](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
HL HI REQ	Combination switch (lighting and turn signal switch) (2ND)	HI or PASS	ON
		Except for HI or PASS	OFF

Is the item status normal?

YES >> GO TO 3

NO >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

3.HEADLAMP (HI) CIRCUIT INSPECTION

Check the headlamp (HI) circuit. Refer to [EXL-36, "Description"](#).

Is the headlamp (HI) circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-45, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning part.

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

Description

INFOID:000000007418505

The headlamps (both sides) do not turn ON in any combination switch (lighting and turn signal switch) setting.

Diagnosis Procedure

INFOID:000000007418506

1.CHECK COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH)

Check the combination switch (lighting and turn signal switch). Refer to [BCS-37](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (LO) REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "HL LO REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
HL LO REQ	Combination switch (lighting and turn signal switch)	2ND	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3

NO >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

3.HEADLAMP (LO) CIRCUIT INSPECTION

Check the headlamp (LO) circuit. Refer to [EXL-38, "HEADLAMP \(HALOGEN\) : Description"](#) (halogen) or [EXL-39, "HEADLAMP \(XENON\) : Description"](#) (xenon).

Is the headlamp (LO) circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-45, "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning part.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

Description

INFOID:000000007418507

The parking, license plate and tail lamps do not turn ON in with any combination switch (lighting and turn signal switch) setting.

Diagnosis Procedure

INFOID:000000007418508

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-37](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning part.

2.CHECK TAIL LAMP RELAY REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "TAIL & CLR REQ" of IPDM E/R DATA MONITOR item.
2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
TAIL & CLR REQ	Combination switch (lighting and turn signal switch)	1ST	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3

NO >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

3.PARK LAMP CIRCUIT INSPECTION

Check the parking lamp circuit. Refer to [EXL-45. "Description"](#).

Is the tail lamp circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-45. "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning part.

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

Description

INFOID:000000007418509

The front fog lamps do not turn ON in any setting.

Diagnosis Procedure

INFOID:000000007418510

1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-37](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning part.

2.CHECK FRONT FOG LAMP REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "FR FOG REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition	Monitor status
FR FOG REQ	Combination switch (lighting and turn signal switch)	ON
	(Lighting switch 2ND)	OFF

Is the item status normal?

YES >> GO TO 3

NO >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

3.FRONT FOG LAMP CIRCUIT INSPECTION

Check the front fog lamp circuit. Refer to [EXL-43. "Description"](#).

Is the front fog lamp circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-45. "Removal and Installation"](#).

NO >> Repair or replace the malfunctioning part.

EXL

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007418511

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000007418512

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.

PRECAUTIONS


< PRECAUTION >

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT.

General precautions for service operations

INFOID:000000007418513

- Do not work with wet hands.
- The xenon headlamp system includes a high voltage generating part. Be sure to disconnect battery negative cable (negative terminal) or power fuse before removing, installing, or touching the xenon headlamp (including lamp bulb).
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When turning the xenon headlamp on and while it is illuminated, do not touch the harness, bulb and socket of the headlamp.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- Install the xenon headlamp bulb socket correctly. If it is installed improperly, high-voltage leak or corona discharge may occur that can melt the bulb, connector, and housing. Do not illuminate the xenon headlamp bulb out of the headlamp housing. Doing so can cause fire and harm your eyes.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- When adjusting the headlamp aiming, turn the aiming adjustment screw only in the tightening direction. (If it is necessary to loosen the screw, first fully loosen the screw, and then turn it in the tightening direction.)
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.

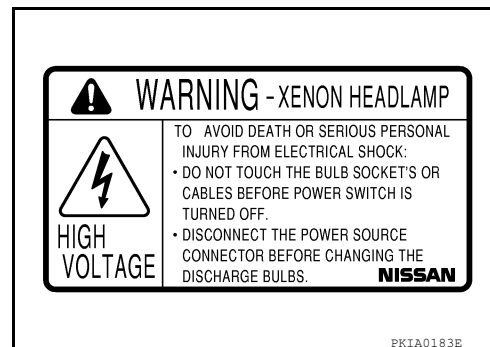

Precaution for Work

INFOID:000000007418514

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
 - Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area.
Then rub with a soft and dry cloth.
 - Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area.
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tool

INFOID:000000007628476

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

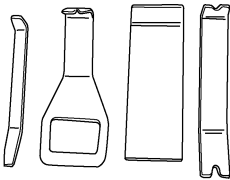Tool number (Kent-Moore No.) Tool name	Description
<p>— (J-46534) Trim Tool Set</p>  <p>AWJIA0483ZZ</p>	Removing trim components

HEADLAMP

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE

HEADLAMP

Aiming Adjustment

INFOID:000000007418515

PREPARATION BEFORE ADJUSTING

NOTE:


- For details, refer to the regulations in your area.
- Perform aiming adjustment if the vehicle front body has been repaired and/or the front combination lamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to specification.
- Position vehicle and screen on level surface.
- Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position).
- Ensure engine coolant and engine oil are filled to correct levels and fuel tank is full.
- Confirm spare tire, jack and tools are properly stowed.
- Wipe off dirt on the headlamp.

CAUTION:

Do not use organic solvent (thinner, gasoline etc.).

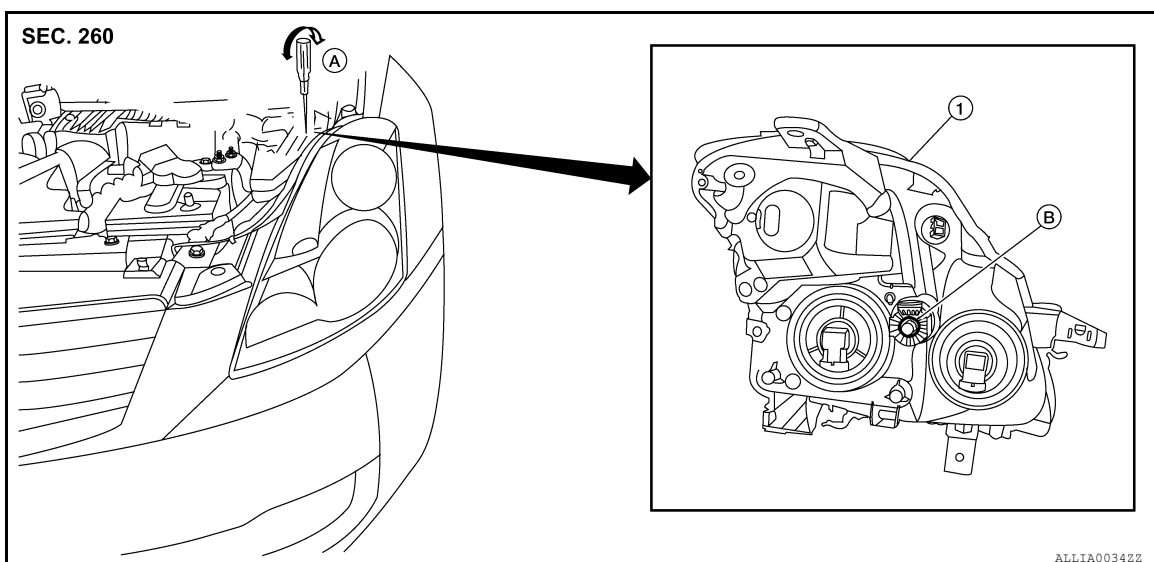

1. Front combination lamp

A. Suitable tool (for aiming adjustment) B. Adjusting screw

Aiming Adjustment procedure

1. Position the screen.

NOTE:

- Stop the vehicle facing the screen.
- Place the screen on a plain road vertically.

2. Face the screen with the vehicle. Maintain 7.62 m (25 ft) between the headlamp bulb center and the screen.
3. Start the engine. Turn the headlamp (LO) ON.

CAUTION:


Do not cover the lens surface with tape, etc. The lens is made of resin.

NOTE:

- Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
- For horizontal aiming, adjust headlamp until beam pattern is at horizontal center point.

HEADLAMP

< PERIODIC MAINTENANCE >

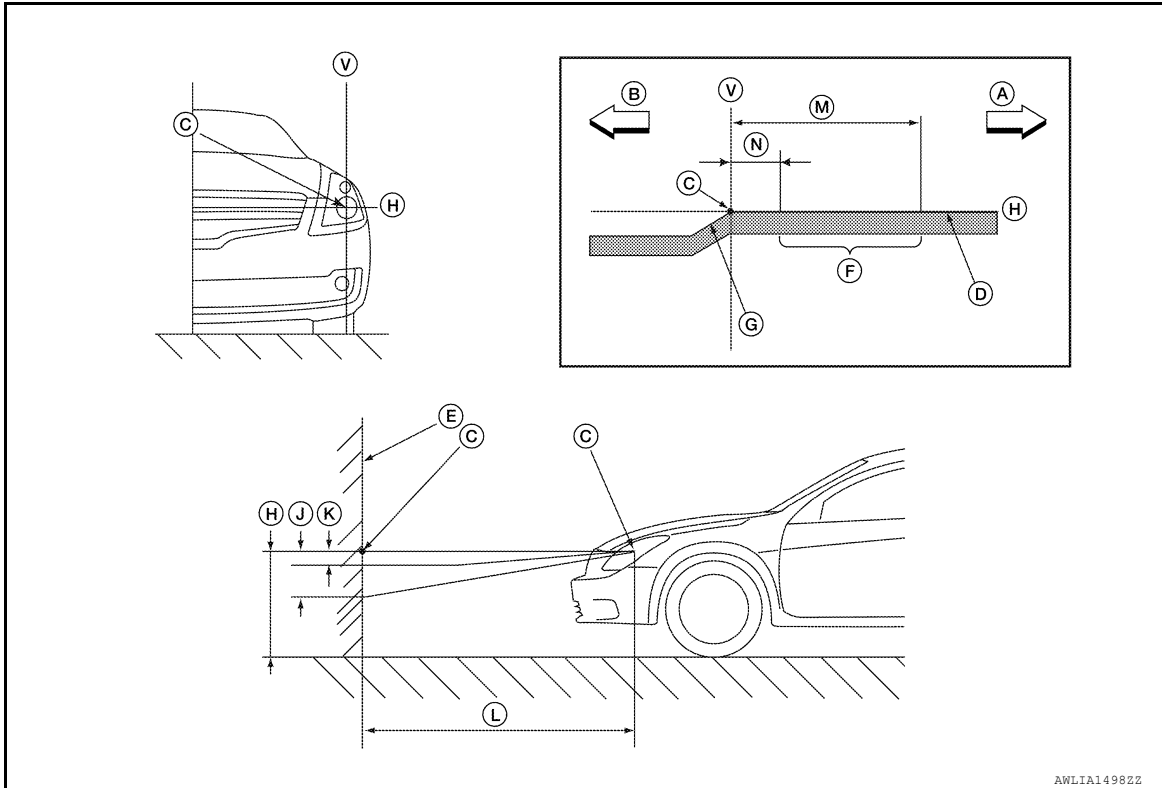

- | | | |
|------------------------|--|--|
| A. Right | B. Left | C. Center of headlamp bulb (H-V point) |
| D. Cutoff line | E. Screen | F. Aim evaluation segment |
| G. Step | H. Horizontal center line of head lamp | J. 53.2 mm (2.09 in) |
| K. -13.3 mm (-0.52 in) | L. 7.62 m (25 ft) | M. 399 mm (15.71 in) |
| N. 133 mm (5.24 in) | V. Vertical center line of headlamp | |

- Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

FRONT FOG LAMP

< PERIODIC MAINTENANCE >


FRONT FOG LAMP

Aiming Adjustment

INFOID:000000007418516

The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.
- Adjust aiming in the vertical direction by turning the adjusting screw (A).
- When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

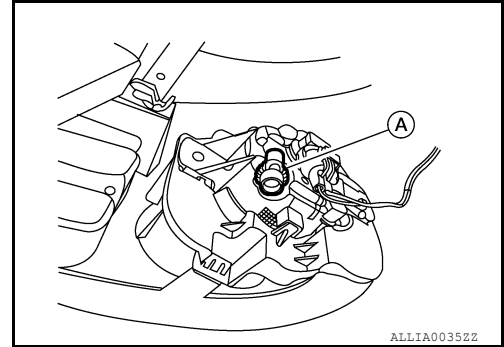

1. Position the screen.

NOTE:

- Stop the vehicle facing the screen.
- Place the screen on a plain road vertically.

2. Face the screen with the vehicle. Maintain 7.62 m (25.0 ft) between the front fog lamp center and the screen.
3. Start the engine. Turn the front fog lamp ON.


CAUTION:

Do not cover the lens surface with tape, etc. The lens is made of resin.

NOTE:

- Aim each fog lamp individually and ensure other fog lamp beam pattern is blocked from screen.

4. Adjust the fog lamp upper illumination limit with the aiming adjustment screw so that the illumination stops at the cutoff line (H).
 - Front fog lamp light distribution on the screen is as shown.
 - (A) High illumination area.
 - H Horizontal center line of front fog lamp / Cutoff line.
 - V Vertical center line of fog lamp.

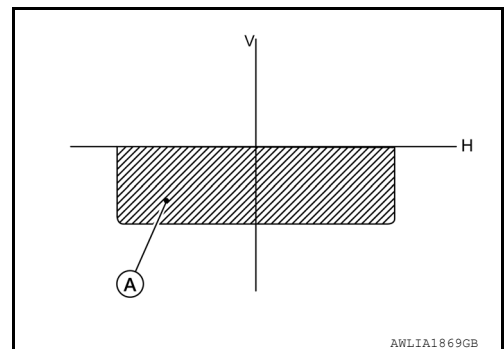

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

FRONT COMBINATION LAMP

Bulb Replacement

INFOID:000000007418517

HEADLAMP

WARNING:

- Do not touch bulb by hand while it is lit or right after being turned off, burning may result.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from bulb.

Removal

1. Disconnect negative battery terminal (xenon only).
2. Position the fender protector aside. Refer to [EXT-46. "Removal and Installation"](#) (sedan) or [EXT-22. "Removal and Installation"](#) (coupe).
3. Turn the headlamp bulb sockets counterclockwise to unlock and remove them (halogen).
4. Remove the plastic cover, disconnect the ignitor, unlock the retaining spring to unlock and remove the bulb (xenon only).
5. Turn the high beam lamp bulb socket counterclockwise to unlock and remove it.

Installation

Installation is in the reverse order of removal.

CAUTION:

After installing the bulb, be sure to install the plastic cap securely to ensure watertightness.

SIDE MARKER LAMP

Removal

1. Position the fender protector aside. Refer to [EXT-46. "Removal and Installation"](#) (sedan) or [EXT-22. "Removal and Installation"](#) (coupe).
2. Turn the bulb socket counterclockwise to unlock it.
3. Pull the side marker bulb to remove it.

Installation

Installation is in the reverse order of removal.

CAUTION:

After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.

FRONT PARK/TURN SIGNAL LAMP

Removal

1. Position the fender protector aside. Refer to [EXT-46. "Removal and Installation"](#) (sedan) or [EXT-22. "Removal and Installation"](#) (coupe).
2. Turn the bulb socket counterclockwise to unlock it.
3. Pull the front park/turn signal bulb to remove it.

Installation

Installation is in the reverse order of removal.

CAUTION:

After installing the bulb, be sure to install the bulb socket securely to ensure watertightness.

Removal and Installation

INFOID:000000007418518

FRONT COMBINATION LAMP


Removal

1. Disconnect battery negative terminal (xenon only).

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

2. Remove the front bumper fascia. Refer to [EXT-16. "Removal and Installation - Coupe"](#), [EXT-40. "Removal and Installation"](#) (sedan).
3. Ensure lighting switch is OFF.
4. Remove the front combination lamp bolts (A).
5. Pull the front combination lamp (1) toward the front of the vehicle.
6. Disconnect the bulb connectors, then remove the front combination lamp harness (2) from the front combination lamp (1).

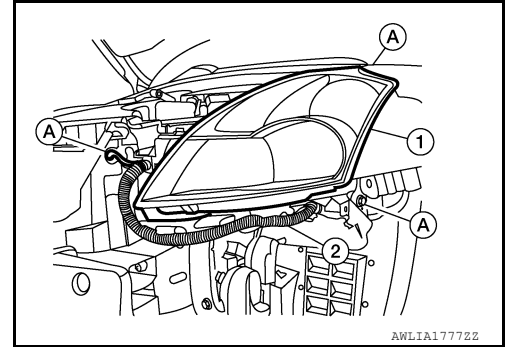

Installation

Installation is in the reverse order of removal.


NOTE:

Confirm headlamp aiming adjustment. Refer to [EXL-205. "Aiming Adjustment"](#).

Disassembly and Assembly

INFOID:000000007418519

COMBINATION LAMP - XENON TYPE

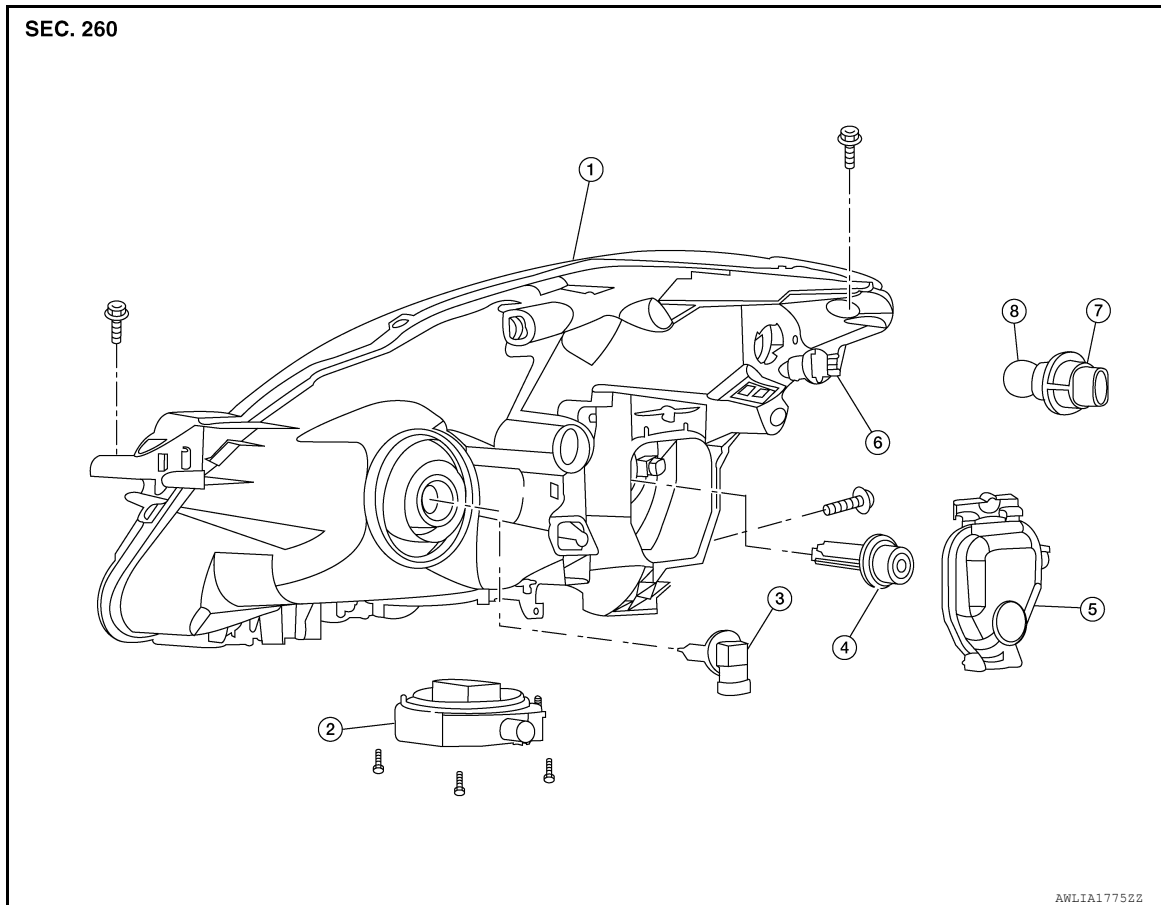

- | | | |
|--|-------------------------------------|-----------------------------|
| 1. Front combination lamp | 2. Ballast | 3. Halogen bulb (high beam) |
| 4. Xenon bulb | 5. Plastic cover | 6. Side marker lamp bulb |
| 7. Front park/turn signal lamp bulb socket | 8. Front park/turn signal lamp bulb | |

Disassembly

WARNING:

Do not touch bulb while it is lit or right after being turned off, burning may result.

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

CAUTION:

Do not touch the glass of the bulb directly by hand. Keep grease and other oily substances away from bulb.

1. Remove the plastic cover, disconnect the xenon bulb connector, unlock the retaining spring to remove the xenon bulb.
2. Turn the halogen bulb (high beam) lamp socket counterclockwise to unlock and remove it.
3. Turn the front park/turn signal lamp bulb socket counterclockwise to unlock and remove it.
4. Pull the front park/turn signal lamp bulb from its socket.
5. Turn the side marker lamp bulb socket counterclockwise to unlock and remove it.
6. Pull the side marker lamp bulb from its socket.


Assembly

Assembly is in the reverse order of disassembly.

CAUTION:

- **After installing the xenon bulb, be sure to install plastic cover securely to ensure watertightness.**

COMBINATION LAMP - HALOGEN

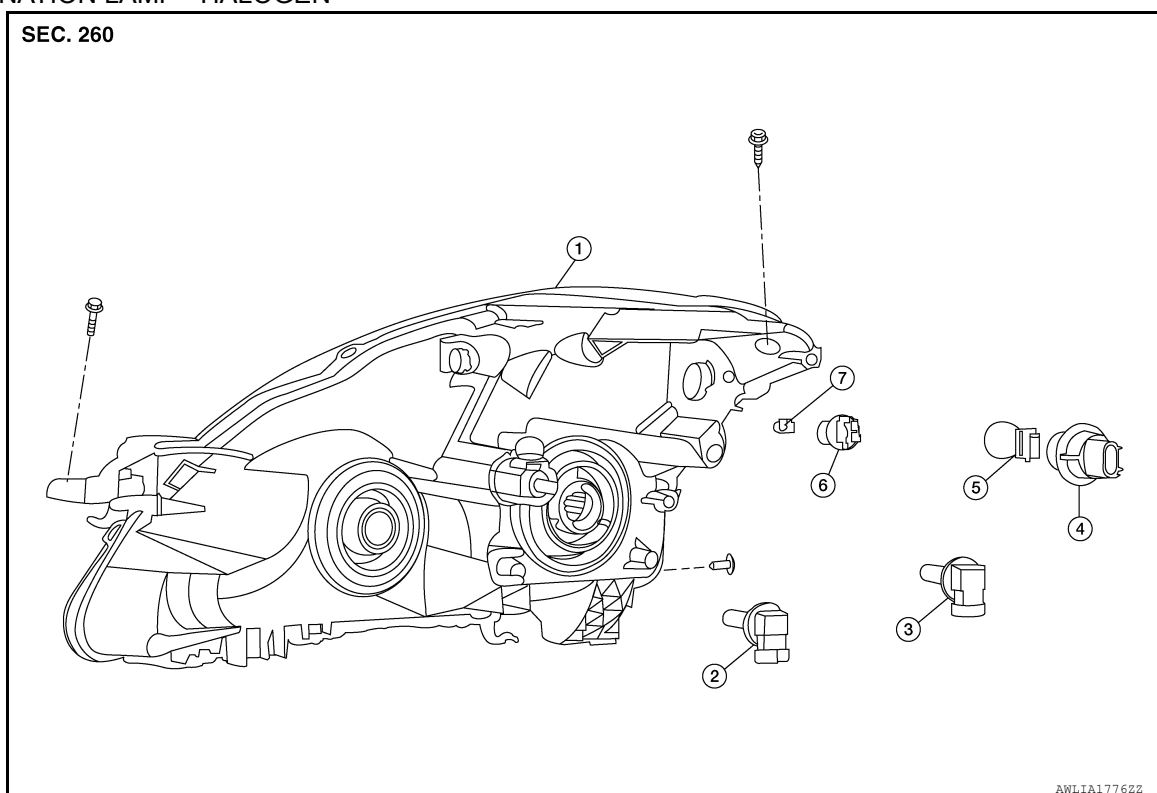

- | | | |
|--|-------------------------------------|---------------------------------|
| 1. Front combination lamp | 2. Halogen lamp bulb (high beam) | 3. Halogen lamp bulb (low beam) |
| 4. Front park/turn signal lamp bulb socket | 5. Front park/turn signal lamp bulb | 6. Side marker lamp bulb socket |
| 7. Side marker lamp bulb | | |

Disassembly

CAUTION:

• Do not touch the glass of the bulb directly by hand. Keep grease and other oily substances away from bulb. Do not touch bulb while it is lit or right after being turned off, burning may result.

1. Turn the halogen lamp bulb (low beam) counterclockwise to unlock and remove it.
2. Turn the halogen lamp bulb (high beam) socket counterclockwise to unlock and remove it.
3. Turn the front park/turn signal lamp bulb socket counterclockwise to unlock and remove it.
4. Pull the front park/turn signal lamp bulb from its socket.
5. Turn the side marker lamp bulb socket counterclockwise to unlock and remove it.
6. Pull the side marker lamp bulb from its socket.

Assembly

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

Assembly is in the reverse order of disassembly.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

FRONT FOG LAMP

< REMOVAL AND INSTALLATION >

FRONT FOG LAMP

Bulb Replacement

INFOID:000000007418520

Removal

The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.


WARNING:

Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

1. Position the fender protector aside. Refer to [EXT-46. "Removal and Installation"](#) (sedan) or [EXT-46. "Removal and Installation"](#) (coupe).
2. Disconnect the fog lamp connector.
3. Turn the fog lamp bulb counterclockwise to remove it.

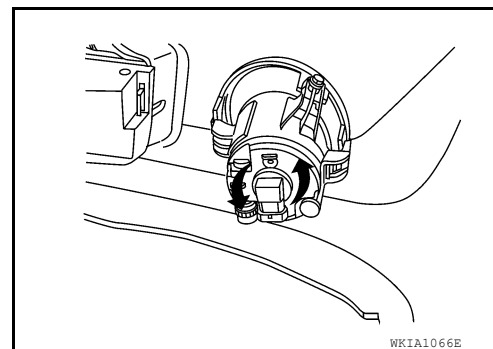

Installation

Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000007418521


REMOVAL

The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

CAUTION:

- Do not leave fog lamp assembly without bulb for a long period of time. Dust, moisture, smoke, etc. entering the fog lamp body may affect the performance. Remove the bulb from the headlamp assembly just before replacement bulb is installed.
- Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.

1. Position the fender protector aside. Refer to [EXT-46. "Removal and Installation"](#) (sedan) or [EXT-46. "Removal and Installation"](#) (coupe).
2. Disconnect the fog lamp connector.
3. Remove screw (A) from top of fog lamp.
4. Remove fog lamp.

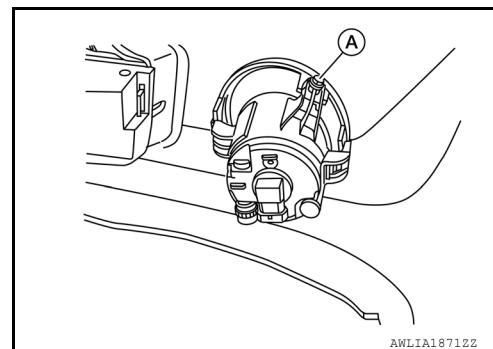

INSTALLATION

Installation is in the reverse order of removal.

Check fog lamp aiming adjustment. Refer to [EXL-207. "Aiming Adjustment"](#).

SIDE TURN SIGNAL LAMP

< REMOVAL AND INSTALLATION >


SIDE TURN SIGNAL LAMP

Removal and Installation

INFOID:000000007628477

REMOVAL

1. Remove the door mirror cover. Refer to [MIR-24. "DOOR MIRROR COVER : Disassembly"](#).
2. Release the side turn signal lamp (1) from the door mirror at the outer edge using a suitable tool (A).

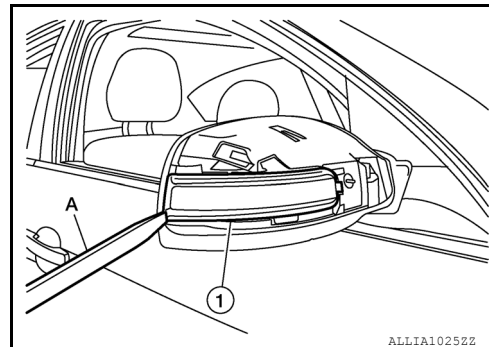

3. Disconnect the side turn signal lamp connector and remove the side turn signal lamp.

INSTALLATION

Installation is in the reverse order of removal.

STOP LAMP

< REMOVAL AND INSTALLATION >

STOP LAMP

Bulb Replacement

INFOID:000000007418522

HIGH-MOUNTED STOP LAMP - WITH REAR SPOILER

Removal

The high-mounted stop lamp uses an LED circuit board instead of a bulb. The LED circuit board is not serviceable and the high-mounted stop lamp must be replaced as an assembly.

HIGH MOUNTED STOP LAMP - WITH PARCEL SHELF

Removal

1. Remove high mounted stop lamp assembly from parcel shelf.
2. Turn bulb socket counterclockwise to unlock it.
3. Remove high mounted stop lamp bulb from the socket.

Installation

Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000007418523

HIGH-MOUNTED STOP LAMP - WITH REAR SPOILER

Removal

1. Remove the rear spoiler. Refer to [EXT-53, "Removal and Installation"](#).
2. Remove the two screws and remove the high-mounted LED stop lamp from the rear spoiler.


Installation

Installation is in the reverse order of removal.

HIGH-MOUNTED STOP LAMP - WITH PARCEL SHELF

Removal

1. Slide high-mounted stop lamp assembly rearward on parcel shelf to give clearance to front tabs.
2. Lift front of lamp assembly up and bring forward to give clearance to rear tabs.
3. Disconnect the high-mounted connector and remove.

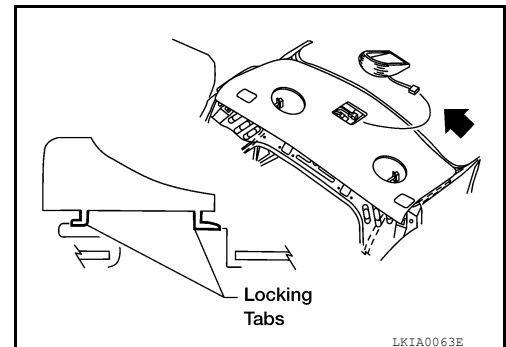

Installation

Installation is in the reverse order of removal.

BACK-UP LAMP

< REMOVAL AND INSTALLATION >

BACK-UP LAMP

Bulb Replacement

INFOID:000000007628479

Removal

- 1. Remove the rear combination lamp. Refer to [EXL-217. "Removal and Installation"](#).
- 2. Turn back-up lamp bulb socket counterclockwise to unlock and remove.
- 3. Pull back-up lamp bulb from socket to remove.

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL

LICENSE PLATE LAMP

< REMOVAL AND INSTALLATION >


LICENSE PLATE LAMP

Bulb Replacement

INFOID:000000007418524

REMOVAL

1. Position trunk lid finisher aside.
2. Turn license plate lamp bulb socket counterclockwise to unlock and remove.
3. Pull license plate lamp bulb to remove from socket.

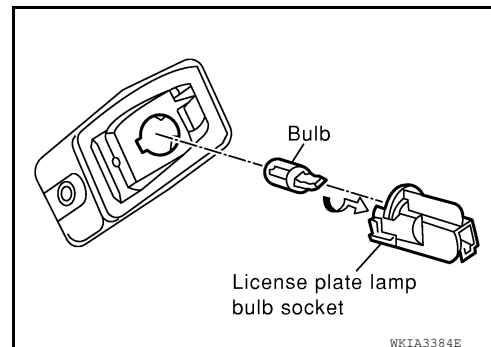

INSTALLATION


Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000007418525

REMOVAL

1. Remove the license lamp finisher. Refer to [EXT-26. "Removal and Installation"](#) (coupe) or [EXT-52. "Removal and Installation"](#) (sedan).
2. Disconnect the license plate lamp connector.
3. Remove the license plate lamp screw and remove the license plate lamp.

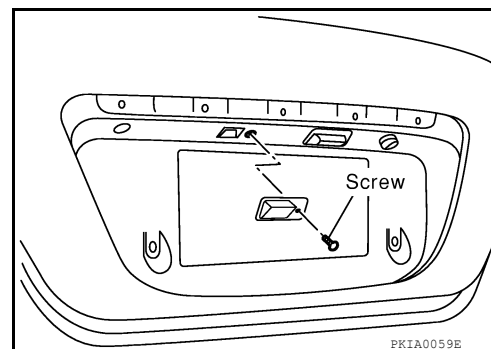

INSTALLATION

Installation is in the reverse order of removal.

REAR COMBINATION LAMP

< REMOVAL AND INSTALLATION >

REAR COMBINATION LAMP

Bulb Replacement

INFOID:000000007418526

REAR TURN SIGNAL LAMP

Removal

1. Remove the rear combination lamp. Refer to [EXL-217, "Removal and Installation"](#).
2. Turn the rear turn signal lamp bulb socket counterclockwise and remove it.
3. Remove the rear turn signal lamp bulb.

Installation

Installation is in the reverse order of removal.

STOP/TAIL LAMP

Removal

1. Remove the rear combination lamp. Refer to [EXL-217, "Removal and Installation"](#).
2. Turn the stop/tail lamp bulb socket counterclockwise and remove it.
3. Remove the stop/tail lamp bulb.

Installation

Installation is in the reverse order of removal.

BACK-UP LAMP

Removal

1. Remove the rear combination lamp. Refer to [EXL-217, "Removal and Installation"](#).
2. Turn the back-up lamp bulb socket counterclockwise and remove it.
3. Remove the back-up lamp bulb.

Installation

Installation is in the reverse order of removal.

SIDE MARKER LAMP

Removal

1. Remove the rear combination lamp. Refer to [EXL-217, "Removal and Installation"](#).
2. Turn the side marker lamp bulb socket counterclockwise and remove it.
3. Remove the side marker lamp bulb.

Installation

Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000007418527


COMPONENTS

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

REAR COMBINATION LAMP

< REMOVAL AND INSTALLATION >

SEC. 265

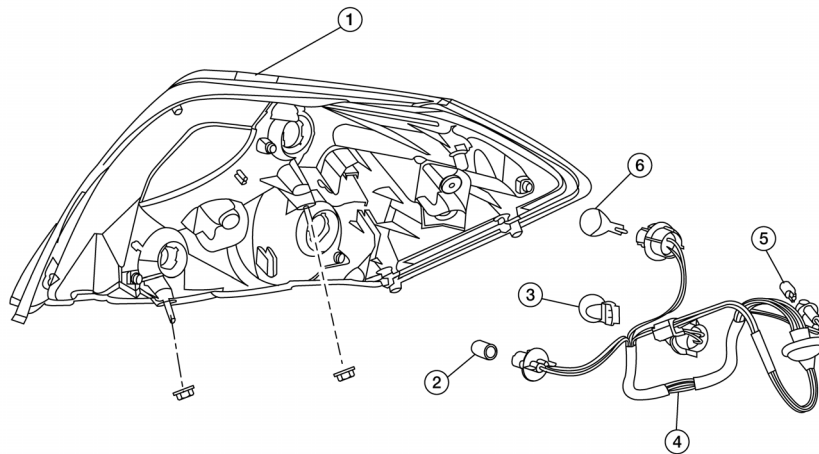

AWLIA18762Z

- | | | |
|----------------------------------|--------------------------|-------------------------------|
| 1. Rear combination lamp | 2. Back-up lamp bulb | 3. Stop/Tail lamp bulb |
| 4. Rear combination lamp harness | 5. Side marker lamp bulb | 6. Rear turn signal lamp bulb |

REMOVAL

1. Remove trunk rear finisher. Refer to [INT-54, "Removal and Installation"](#) (coupe) or [INT-31, "Removal and Installation"](#) (sedan).
2. Partially remove trunk side finisher. Refer to [INT-44, "Removal and Installation"](#) (coupe) or [INT-18, "Removal and Installation"](#) for (sedan).
3. Remove the rear combination lamp nuts.
4. Pull the rear combination lamp assembly toward rear of the vehicle.
5. Remove the bulb sockets and rear combination lamp harness from the rear combination lamp

INSTALLATION

Installation is in the reverse order of removal.


LIGHTING AND TURN SIGNAL SWITCH

< REMOVAL AND INSTALLATION >

LIGHTING AND TURN SIGNAL SWITCH

Removal and Installation

INFOID:000000007418528

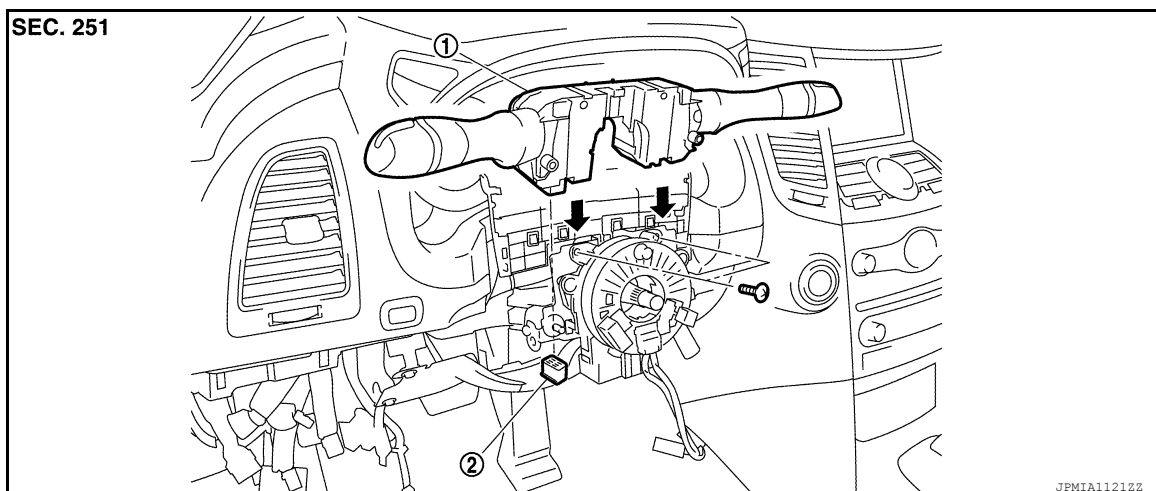

1. Combination switch
2. Combination switch connector

NOTE:

- Shown with steering wheel removed for clarity only.
- The lighting and turn signal switch are part of the combination switch assembly.

REMOVAL

1. Unlock steering wheel.
2. Disconnect negative and positive battery terminals and wait at least three minutes.

CAUTION:

- Before servicing, disconnect both battery terminals and wait at least three minutes.
- Do not use air tools or electric tools for servicing.
- After the work is completed, make sure no system malfunction is detected by air bag warning lamp.
- In case a malfunction is detected by the air bag warning lamp, reset with the self-diagnosis function and delete the memory with CONSULT.
- If a malfunction is still detected after the above operation, perform self-diagnosis to repair malfunctions. Refer to [SRC-12, "SRS Operation Check"](#).

3. Remove steering column covers. Refer to [IP-14, "Removal and Installation"](#).
4. Rotate steering wheel clockwise to access first combination switch bolt. Remove the bolt.
5. Rotate steering wheel counter-clockwise to access second combination switch bolt.
6. Remove the bolt, disconnect electrical connectors.
7. Remove the combination switch.

INSTALLATION

Installation is in the reverse order of removal.

HAZARD SWITCH

< REMOVAL AND INSTALLATION >


HAZARD SWITCH

Removal and Installation

INFOID:000000007418529

Removal

1. Remove the center ventilator grilles. Refer to [IP-11, "Exploded View"](#).
2. Disconnect the passenger air bag and hazard switch connectors.
3. Remove the hazard switch screws (A) and remove the hazard switch. (1).

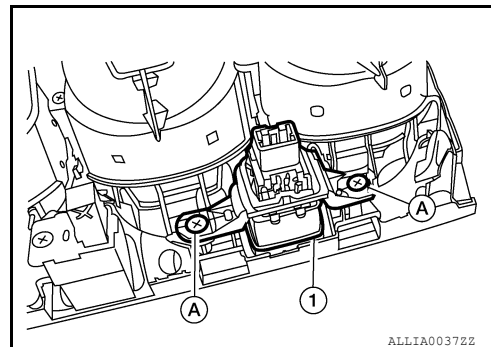

Installation

Installation is in the reverse order of removal.

OPTICAL SENSOR

< REMOVAL AND INSTALLATION >


OPTICAL SENSOR

Removal and Installation

INFOID:000000007628480

REMOVAL

1. Remove the front RH speaker grille (1). Refer to [AV-53. "Removal and Installation"](#).
2. Disconnect the optical sensor electrical connector.
3. Release the optical sensor tabs (A) to remove it from the front RH speaker grille (1).

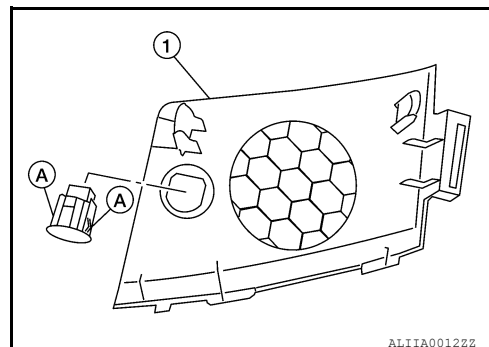

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Headlamp

INFOID:000000007418530

Item	Wattage (W)*
Low (halogen)	55
Low (xenon) if equipped	35
High	65

*: Always check with the Parts Department for the latest parts information.

Exterior Lamp

INFOID:000000007418531

Item			Wattage (W)*
Front combination lamp	Turn signal lamp		28/8 (amber)
	Park/Side marker lamp		5
Door mirror turn signal lamp			LED
Rear combination lamp	Stop/Tail lamp		27/8
	Turn signal lamp		27
	Back-up lamp	Sedan	18
		Coupe	13
	Side marker lamp		5
Fog lamp			55
License plate lamp			5
High-mounted stop lamp	Parcel shelf mounted (Coupe)		LED
	Parcel shelf mounted (Sedan)		18
	Rear spoiler mounted		LED

*: Always check with the Parts Department for the latest parts information.