# **BALER & AIR CONDITIONING CONTROL SYSTEM**

# CONTENTS

### AUTOMATIC AIR CONDITIONER

PRECAUTION5
<b>PRECAUTIONS</b> 5Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"5Precaution for Work5Working with HFC-134a (R-134a)5Precaution for Service Equipment6
PREPARATION8
PREPARATION
SYSTEM DESCRIPTION9
COMPONENT PARTS       9         Component Part Location       9         Component Description       10
SYSTEM13System Diagram13System Description13Air Flow Control14Air Inlet Control15Air Outlet Control16Compressor Control16Door Control17Temperature Control20Fail-safe20
OPERATION21 Switch Name and Function
DIAGNOSIS SYSTEM (A/C AUTO AMP.)24 CONSULT Function (HVAC)
ECU DIAGNOSIS INFORMATION28

A/C AUTO AMP	F
DTC Index	G
ECM, IPDM E/R, BCM	Н
WIRING DIAGRAM34	
AIR CONDITIONER CONTROL	HA
BASIC INSPECTION46	
DIAGNOSIS AND REPAIR WORKFLOW46 Work Flow46	J
OPERATION INSPECTION48 Work Procedure48	Κ
SYSTEM SETTING50Temperature Setting Trimmer50Foot Position Setting Trimmer50Inlet Port Memory Function (FRE)50Inlet Port Memory Function (REC)51Target Evaporator Temp Upper Limit51	L
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (A/C AUTO AMP.)52 Description	N
CONFIGURATION (HVAC)	Ρ
DTC/CIRCUIT DIAGNOSIS55	
U1000 CAN COMM CIRCUIT55 Description	

А

В

С

D

Ε

Diagnosis Procedure	55
U1010 CONTROL UNIT (CAN)	56
Description	
DTC Logic	56
Diagnosis Procedure	56
B2578, B2579 IN-VEHICLE SENSOR	57
DTC Logic	
Diagnosis Procedure	
Component Inspection	58
B257B, B257C AMBIENT SENSOR	60
DTC Logic	60
Diagnosis Procedure	60
Component Inspection	61
B2581, B2582 INTAKE SENSOR	63
DTC Logic	63
Diagnosis Procedure	
Component Inspection	64
B2630, B2631 SUNLOAD SENSOR	66
DTC Logic	66
Diagnosis Procedure	
Component Inspection	67
B2632, B2633 AIR MIX DOOR MOTOR	
(DRIVER SIDE)	69
DTC Logic	
Diagnosis Procedure	
B2634, B2635 AIR MIX DOOR MOTOR (PAS- SENGER SIDE)	71
DTC Logic	
Diagnosis Procedure	
B2636, B2637, B2638, B2639, B2654, B2655	
	73
DTC Logic Diagnosis Procedure	
	15
B263D, B263E, B263F INTAKE DOOR MO-	
TOR	
DTC Logic Diagnosis Procedure	75 75
	15
B27B0 A/C AUTO AMP	
DTC Logic	77
Diagnosis Procedure	77
POWER SUPPLY AND GROUND CIRCUIT	78
A/C AUTO AMP.	78
A/C AUTO AMP. : Diagnosis Procedure	
-	
AIR MIX DOOR MOTOR (DRIVER SIDE)	78
AIR MIX DOOR MOTOR (DRIVER SIDE) : Diag-	70
nosis Procedure	ΙŎ
AIR MIX DOOR MOTOR (PASSENGER SIDE)	79

AIR MIX DOOR MOTOR (PASSENGER SIDE) : Diagnosis Procedure
MODE DOOR MOTOR
INTAKE DOOR MOTOR
A/C SWITCH ASSEMBLY
A/C SWITCH ASSEMBLY : Diagnosis Procedure 83
BLOWER MOTOR84Diagnosis Procedure84Component Inspection (Blower Motor)85Component Inspection (Front Blower Motor Re- lay)85
MAGNET CLUTCH
Component Function Check
A/C SWITCH ASSEMBLY SIGNAL CIRCUIT 88 Diagnosis Procedure
DOOR MOTOR
DOOR MOTOR COMMUNICATION CIRCUIT 91 Diagnosis Procedure
ECV (ELECTRICAL CONTROL VALVE)
SYMPTOM DIAGNOSIS
HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS94
Diagnosis Chart By Symptom
INSUFFICIENT COOLING
Diagnosis Procedure
INSUFFICIENT HEATING
Diagnosis Procedure
Description
REMOVAL AND INSTALLATION101
A/C SWITCH ASSEMBLY
A/C AUTO AMP
Exploded View 102

AMBIENT SENSOR
IN-VEHICLE SENSOR
SUNLOAD SENSOR
INTAKE SENSOR
REFRIGERANT PRESSURE SENSOR
DOOR MOTOR
INTAKE DOOR MOTOR 109 INTAKE DOOR MOTOR : Removal and Installa- tion
MODE DOOR MOTOR
AIR MIX DOOR MOTOR
PRECAUTION 110
PRECAUTION       110         PRECAUTIONS       110         Precaution for Supplemental Restraint System       110         (SRS) "AIR BAG" and "SEAT BELT PRE-TEN-       110         SIONER"       110         Precaution for Work       110         Working with HFC-134a (R-134a)       110         Precaution for Service Equipment       111
PRECAUTIONS       110         Precaution for Supplemental Restraint System       110         (SRS) "AIR BAG" and "SEAT BELT PRE-TEN-       110         SIONER"       110         Precaution for Work       110         Working with HFC-134a (R-134a)       110
PRECAUTIONS110Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"110Precaution for Work110Working with HFC-134a (R-134a)110Precaution for Service Equipment111
PRECAUTIONS       110         Precaution for Supplemental Restraint System       (SRS) "AIR BAG" and "SEAT BELT PRE-TEN-SIONER"         SIONER"       110         Precaution for Work       110         Working with HFC-134a (R-134a)       110         Precaution for Service Equipment       111         PREPARATION       113         Special Service Tool       113
PRECAUTIONS110Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"110Precaution for Work110Working with HFC-134a (R-134a)110Precaution for Service Equipment111PREPARATION113Special Service Tool113Commercial Service Tool113

Temperature Control121	
OPERATION	A
DIAGNOSIS SYSTEM (BCM)	В
DIAGNOSIS SYSTEM (IPDM E/R)	С
ECU DIAGNOSIS INFORMATION128	D
FRONT AIR CONTROL	E
ECM, IPDM E/R, BCM	_
WIRING DIAGRAM 130	F
AIR CONDITIONER CONTROL	G
BASIC INSPECTION140	
DIAGNOSIS AND REPAIR WORKFLOW 140 Work Flow	Η
OPERATION INSPECTION	HA
DTC/CIRCUIT DIAGNOSIS143	J
MODE DOOR MOTOR         143           Diagnosis Procedure         143	
AIR MIX DOOR MOTOR	K
INTAKE DOOR MOTOR	L
BLOWER MOTOR149Diagnosis Procedure149Component Inspection (Blower Motor)150Component Inspection (Front Blower Motor Re-	M
lay)	Ν
MAGNET CLUTCH152Component Function Check152Diagnosis Procedure152	0
POWER SUPPLY AND GROUND CIRCUITFOR FRONT AIR CONTROL153Description153Component Function Check153Diagnosis Procedure153	Ρ
SYMPTOM DIAGNOSIS155	

HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS				
INSUFFICIENT COOLING				
INSUFFICIENT HEATING				
COMPRESSOR DOES NOT OPERATE 160 Description	)			
REMOVAL AND INSTALLATION162				
FRONT AIR CONTROL				

REFRIGERANT PRESSURE SENSOR	
DOOR MOTOR	
INTAKE DOOR MOTOR 1 INTAKE DOOR MOTOR : Removal and Installa- tion	
MODE DOOR MOTOR 1 MODE DOOR MOTOR : Removal and Installation. 1	
AIR MIX DOOR MOTOR 1 AIR MIX DOOR MOTOR : Removal and Installa- tion	

# < PRECAUTION >

А

В

Ε

L

M

Ν

Ο

Ρ

# PRECAUTION PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

### WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

## PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

### WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the HAC battery and wait at least three minutes before performing any service.

# Precaution for Work

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
- Water soluble dirt:
- Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
- Then rub with a soft, dry cloth.
- Oily dirt:
- Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
- Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
- Then rub with a soft, dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

# Working with HFC-134a (R-134a)

### WARNING:

CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed compressor failure is likely to occur. Refer to <u>HA-25</u>, "Inspection". To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/Recycling Recharging equipment and Refrigerant Identifier.

INFOID:000000010481922

INFOID-000000010481921

# PRECAUTIONS

< PRECAUTION >

- Use only specified oil for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If oil other than that specified is used, compressor failure is likely to occur.
- The specified HFC-134a (R-134a) oil rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
- When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
- When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
- Only use the specified oil from a sealed container. Immediately reseal containers of oil. Without proper sealing, oil will become moisture saturated and should not be used.
- Avoid breathing A/C refrigerant and oil vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system using certified service equipment meeting requirements of SAE J2210 [HFC-134a (R-134a) recycling equipment], or J2209 [HFC-134a (R-134a) recycling equipment], If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and oil manufacturers.
- Do not allow A/C oil to come in contact with styrofoam parts. Damage may result.

### CONTAMINATED REFRIGERANT

If a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle, your options are:


- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage your service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- If you choose to perform the repair, recover the refrigerant using only dedicated equipment and containers. Do not recover contaminated refrigerant into your existing service equipment. If your facility does not have dedicated recovery equipment, you may contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact NISSAN Customer Affairs for further assistance.

# Precaution for Service Equipment

INFOID:000000010481923

### MANIFOLD GAUGE SET

Be certain that the gauge face indicates R-134a or 134a. Make sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) along with specified oil.

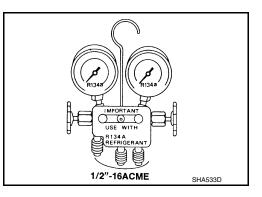


SERVICE HOSES

# PRECAUTIONS

### < PRECAUTION >

Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shutoff devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.


# [AUTOMATIC AIR CONDITIONER]

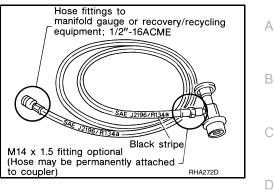

### SERVICE COUPLERS

Do not attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

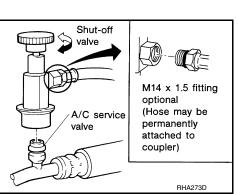

HAC

Н

Е

F

J

Κ

L

Μ

Ν

Ο

Ρ

# < PREPARATION > PREPARATION

# PREPARATION

# **Special Service Tool**

INFOID:000000010481924

### The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.) Tool name		Description
 (J-46534) Trim Tool Set	AWJIA0483ZZ	Removing trim components

# **Commercial Service Tool**

INFOID:000000010481925

Tool name		Description
Power tool		Loosening nuts, screws and bolts
	PIIB1407E	


# [AUTOMATIC AIR CONDITIONER]

# SYSTEM DESCRIPTION COMPONENT PARTS

**Component Part Location** 


INFOID:000000010997278

А

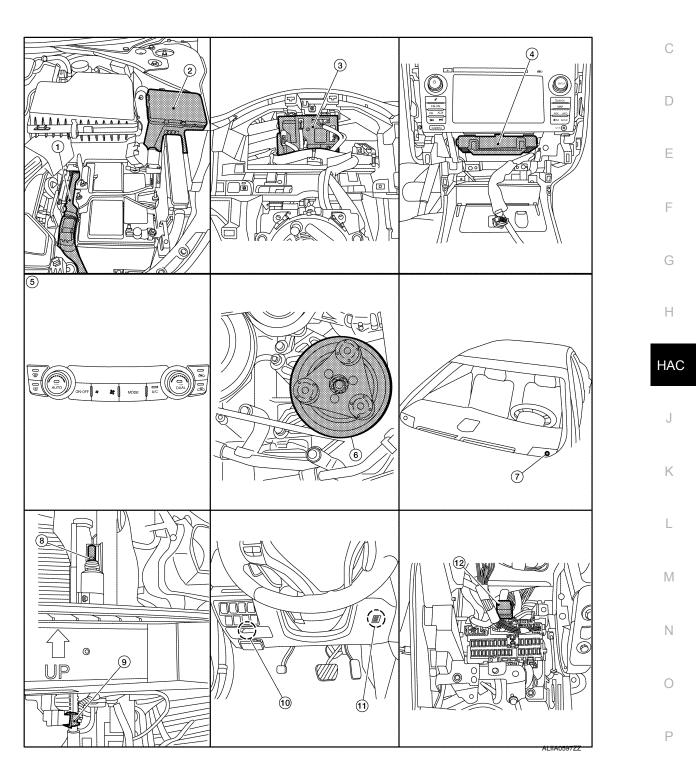

# **COMPONENT PARTS**

### < SYSTEM DESCRIPTION >

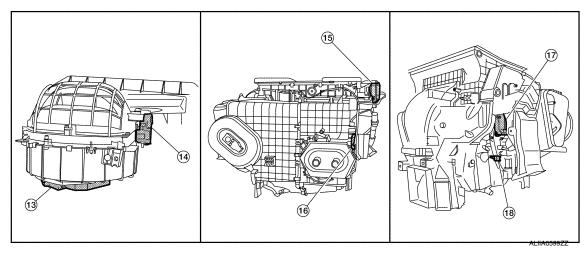

1.	ECM	2.	IPDM E/R	3.	BCM (view with combination meter removed)
4.	A/C auto amp. (view with A/C switch assembly removed)	5.	A/C switch assembly	6.	A/C Compressor
7.	Sunload sensor	8.	Refrigerant pressure sensor (view with front bumper fascia removed)	9.	Ambient sensor
10.	Fuse Block (J/B), Front blower motor relay	11.	In-vehicle sensor	12.	Accessory relay-2 (view with instru- ment panel removed)
13.	Blower motor (view with front A/C as- sembly removed from vehicle)	14.	Intake door motor	15.	Mode door motor
16.	Air mix door motor LH	17.	Air mix door motor RH	18.	Intake sensor

# **Component Description**

INFOID:000000010997277

Component	Description
A/C auto amp.	A/C auto amp. controls front automatic air conditioning system by inputting and calculating signals from each sensor and each switch.
A/C Compressor	Vaporized refrigerant is drawn into the A/C compressor from the evaporator, where it is compressed to a high pressure, high temperature vapor. The hot, compressed vapor is then discharged to the condenser.
A/C switch assembly	The A/C switch assembly controls the operation of the A/C and heating system based on inputs from the temperature control knob, the mode switches, the blower control dial, the ambient temperature sensor, the intake sensor, and inputs received from the ECM across the CAN. Diagnosis of the A/C switch assembly can be performed using the CONSULT. There is no self-diagnostic feature available.
Air mix door motor LH	The air mix door controls the mix of hot or cold air that enters the ventilation system. It is controlled by the A/C auto amp. based on the position of the temperature dial. The air mix door motor LH receives position commands from the A/C auto amp. and reports actual door position back via an LCU (Local Control Unit) installed inside the motor. Commands and responses are sent across the LIN (Local Interconnect Network) to each motor simultaneously, with each motor having its own unique address, thereby only responding to requests sent to its specific address. The LCU reads the door position from a Position Balanced Resistor (PBR), also part of the motor, and returns that information to the A/C auto amp. The LCU switches the polarity of the circuits connected to the DC motor to drive the motor forward or backward as requested by the A/C auto amp. If the air mix door moves to a position less than 5% or more than 95% of its expected or allowed positions, the A/C auto amp. will set a DTC.

# **COMPONENT PARTS**

### < SYSTEM DESCRIPTION >

# [AUTOMATIC AIR CONDITIONER]

Component	Description
Air mix door motor RH	The air mix door controls the mix of hot or cold air that enters the ventilation system. It is controlled by the A/C auto amp. based on the position of the temperature dial. The air mix door motor RH receives position commands from the A/C auto amp. and reports actual door position back via an LCU (Local Control Unit) installed inside the motor. Commands and responses are sent across the LIN (Local Interconnect Network) to each motor simultaneously, with each motor having its own unique address, thereby only responding to requests sent to its specific address. The LCU reads the door position from a Position Balanced Resistor (PBR), also part of the motor, and returns that information to the A/C auto amp. The LCU switches the polarity of the circuits connected to the DC motor to drive the motor forward or backward as requested by the A/C auto amp. If the air mix door moves to a position less than 5% or more than 95% of its expected or allowed positions, the A/C auto amp. will set a DTC.
Ambient sensor	The ambient sensor measures the temperature of the air surrounding the vehicle. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.
ВСМ	The BCM receives the fan ON and A/C ON signals from the A/C auto amp. and sends a compressor ON request to the ECM.
Blower motor	The blower motor varies the speed at which the air flows through the ventilation system.
ECM	The ECM sends a compressor ON request to the IPDM E/R based on the status of engine operation and load as well as refrigerant pressure information. If all the conditions are met for A/C operation, the ECM transmits the compressor ON request to the IPDM E/R. The ECM shares the refrigerant pressure sensor signal, engine RPM, and engine coolant temperature with the A/C auto amp. via CAN communication line.
Front blower motor relay	The front blower motor relay controls the flow of current to fuse 17 and 27 in the Fuse Block (J/B). The relay is connected directly to ground, and is energized when the ignition switch is in the ON or START position.
Fuse Block (J/B)	Located in the passenger compartment, behind the left lower IP, the Fuse Block (J/B) contains the front blower motor relay and several fuses required for the air conditioner control system.
Intake door motor	The intake door motor controls the position of the intake door. Fresh air is allowed to enter the cabin in one position, and recirculated inside air is allowed to enter in the other position. At times the A/C auto amp. may command partial fresh or recirculation based on evaporator or coolant temperatures. The intake door motor receives position commands from the A/C auto amp. and reports actual door position back via an LCU (Local Control Unit) installed inside the motor. Commands and responses are sent across the LIN (Local Interconnect Network) to each motor simultaneously, with each motor having its own unique address, thereby only responding to requests sent to its specific address. The LCU reads the door position from a Position Balanced Resistor (PBR), also part of the motor, and returns that information to the A/C auto amp. The LCU switches the polarity of the circuits connected to the DC motor to drive the motor forward or backward as requested by the A/C auto amp. If the recirculation door moves to a position less than 5% or more than 95% of its expected or allowed positions, the A/C auto amp. will set a DTC.
Intake sensor	The intake sensor measures the temperature of the front evaporator fins. The sensor uses a ther- mistor which is sensitive to the change in temperature. The electrical resistance of the thermistor de- creases as temperature increases.
In-vehicle sensor	In-vehicle sensor measures temperature of intake air that flows through aspirator to passenger room. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resis- tance of the thermistor decreases as temperature increases.
IPDM E/R	Refer to PCS-5, "RELAY CONTROL SYSTEM : System Description".
Mode door motor	The mode door controls the direction the conditioned air passes through the ventilation system. Through a series of levers and gears, the mode door controls the defrost door, the foot door, and the vent door. There are 5 preset positions: VENT, B/L, FOOT, D/F, and DEF. The FOOT position can be set to allow some airflow through to the defroster vent, or to completely block the defroster vent using the CONSULT. The mode door motor receives position commands from the A/C auto amp. and reports actual door position back via an LCU (Local Control Unit) installed inside the motor. Commands and responses are sent across the LIN (Local Interconnect Network) to each motor simultaneously, with each motor having its own unique address, thereby only responding to requests sent to its specific address. The LCU reads the door position from a Position Balanced Resistor (PBR), also part of the motor, and returns that information to the A/C auto amp. The LCU switches the polarity of the circuits connected to the DC motor to drive the motor forward or backward as requested by the A/C auto amp. The mode door has 5 expected positions and, therefore, can set up to 5 DTCs if the expected position is not reported back to the A/C auto amp.

# **COMPONENT PARTS**

### < SYSTEM DESCRIPTION >

Component	Description
Refrigerant pressure sensor	Refer to EC-37, "Refrigerant Pressure Sensor" for QR25DE and EC-563, "Refrigerant Pressure Sensor" for VQ35DE.
Sunload sensor	Sunload sensor measures sunload amount. This sensor is a dual system so that sunload for driver side and passenger side are measured separately. This sensor converts sunload amount to voltage signal by photodiode and transmits to A/C auto amp.


# [AUTOMATIC AIR CONDITIONER]

А

# < SYSTEM DESCRIPTION >

# SYSTEM

System Diagram

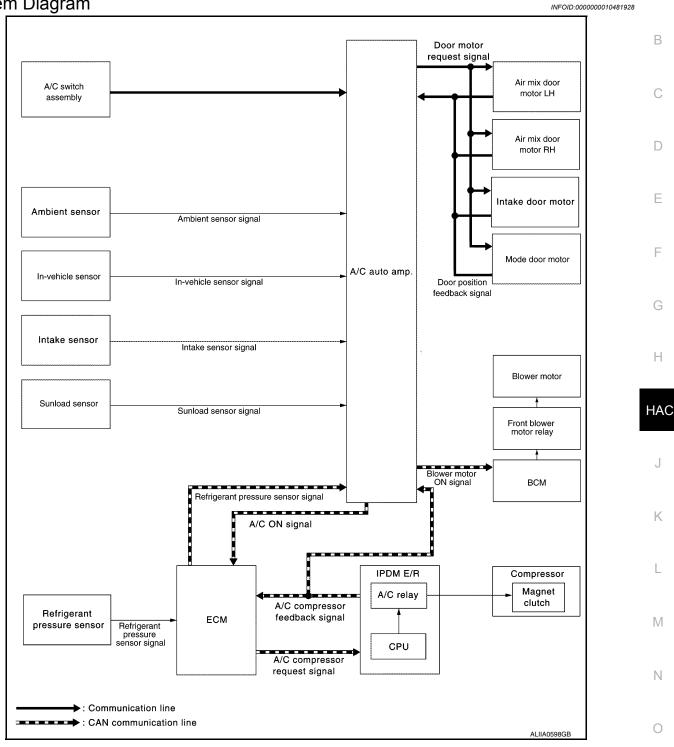

# System Description

INFOID:000000010481929

Ρ

 Front automatic air conditioning system is controlled by each function of A/C auto amp., ECM, IPDM E/R and BCM.

Control by A/C auto amp.

- HAC-14, "Air Flow Control"
- HAC-15, "Air Inlet Control"
- HAC-16, "Air Outlet Control"

# [AUTOMATIC AIR CONDITIONER]

### < SYSTEM DESCRIPTION >

- HAC-16. "Compressor Control"
- HAC-17, "Door Control"
- HAC-20. "Temperature Control"
- Correction for input value of each sensor

### Ambient sensor (setting temperature correction)

 A/C auto amp. controls passenger room temperature so that the optimum level always matches the temperature level that the passenger may feel. Correction is applied to the target temperature that is set using temperature control dial, according to ambient temperature detected by ambient sensor.

### In-vehicle sensor [in-vehicle temperature correction]

• Passenger room temperature detected by in-vehicle sensor is corrected for each front air conditioning control (driver side and passenger side).

Intake sensor (intake temperature correction)

 A/C auto amp. performs correction to change recognition intake temperature of A/C auto amp. quickly when difference is large between recognition intake temperature and intake temperature detected by intake temperature sensor. The correction is performed to change recognition intake temperature slowly when difference is small.

Sunload sensor (sunload amount correction)

- Sunload amount detected by sunload sensor is corrected for each air conditioning control.
- A/C auto amp. performs correction to change recognition sunload amount of A/C auto amp. slowly when sunload amount changes quickly, for example when entering or exiting a tunnel.

Control by ECM

- Cooling fan control

Refer to <u>EC-60</u>, "COOLING FAN CONTROL : System Description (with automatic air conditioner)" (QR25DE) or <u>EC-577</u>, "COOLING FAN CONTROL : System Description" (VQ35DE).

 Air conditioning cut control Refer to <u>EC-57</u>, "AIR CONDITIONING CUT CONTROL : System Description (with automatic air conditioner)" (QR25DE) or <u>EC-575</u>, "AIR CONDITIONING CUT CONTROL : System Description" (VQ35DE).

Control by IPDM E/R

- Relay control Refer to <u>PCS-5, "RELAY CONTROL SYSTEM : System Description"</u>.
- Cooling fan control Refer to <u>EC-60</u>, "<u>COOLING FAN CONTROL</u>: <u>System Description</u> (with automatic air conditioner)" (QR25DE) or <u>EC-577</u>, "<u>COOLING FAN CONTROL</u>: <u>System Description</u>" (VQ35DE).

Control by BCM

 Relay control Refer to <u>BCS-8, "BODY CONTROL SYSTEM : System Description"</u>.

# Air Flow Control

INFOID:000000010481930

### DESCRIPTION

- A/C auto amp. changes duty ratio of blower motor drive signal and controls air flow continuously. When air flow is increased, duty ratio of blower motor control signal gradually increases to prevent a sudden increase in air flow.
- In addition to manual control and automatic control, air flow control consists of starting fan speed control, low coolant temperature starting control, high in-vehicle temperature starting control and fan speed control at door motor operation

### AUTOMATIC AIR FLOW CONTROL

- A/C auto amp. decides target air flow depending on target air mix door opening angle.
- A/C auto amp. changes duty ratio of blower motor control signal and controls the air flow continuously so that air flow matches the target air flow.


# < SYSTEM DESCRIPTION >

When air outlet is VENT or B/L, the minimum air flow is changed depending on sunload.

When blower motor is activated, A/C auto amp. gradually

increases duty ratio of blower motor control signal to prevent a

# [AUTOMATIC AIR CONDITIONER]

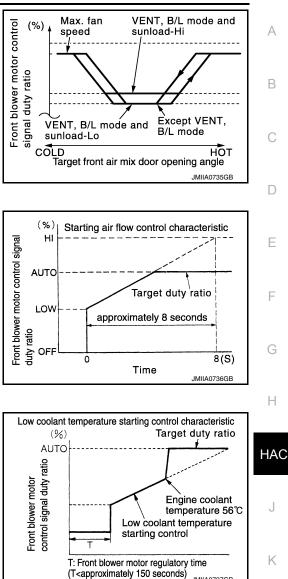

# It takes approximately 8 seconds for air flow to reach HI from LOW.

sudden increase in discharge air flow.

STARTING AIR FLOW CONTROL

### LOW COOLANT TEMPERATURE STARTING CONTROL

If the engine coolant temperature is 56°C (133°F) or less, to prevent a cold discharged air flow, A/C auto amp. suspends blower motor activation for a maximum of 150 seconds depending on target air mix door opening angle. After this, blower motor control signal is increased gradually, and blower motor is activated.

### HIGH IN-VEHICLE TEMPERATURE STARTING CONTROL


When front evaporator fin temperature is high [intake sensor value is 35°C (95°F) or more], to prevent a hot discharged air flow, A/C auto amp. suspends blower motor activation for approximately 3 seconds so that front evaporator is cooled by refrigerant.

### FAN SPEED CONTROL AT DOOR MOTOR OPERATION

When mode door motor is activated while air flow is more than the specified value, A/C auto amp. reduces fan speed temporarily so that mode door moves smoothly.

# Air Inlet Control

The intake door is automatically controlled by the temperature setting, ambient temperature, in-vehicle temperature, intake temperature, amount of sunload and ON/OFF operation of the compressor. Intake door automatic control selects FRE, 20% FRE, or REC depending on a target air mix door opening angle, based on in-vehicle temperature, ambient temperature, and sunload.

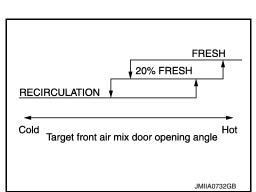

Μ

L

IMIIA0737GB

INFOID:000000010481931




Ρ

# < SYSTEM DESCRIPTION >

# Air Outlet Control

- While air outlet is in automatic control, A/C auto amp. selects the mode door position depending on a target air mix door angle and outlet air temperature calculated from sunload.
- If ambient temperature is excessively low, D/F is selected to prevent windshield fogging when air outlet is set to FOOT.

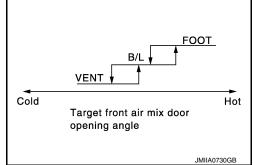

[AUTOMATIC AIR CONDITIONER]

# **Compressor Control**

INFOID:000000010481933

## DESCRIPTION

- When the compressor activation condition is satisfied while blower motor is activated, A/C auto amp. transmits A/C ON signal and blower fan ON signal to ECM via CAN communication.
- ECM judges that the compressor can be activated depending on the state of each sensor (refrigerant pressure sensor signal and others) and transmits A/C compressor request signal to IPDM E/R via CAN communication.
- IPDM E/R turns A/C relay ON and activates the compressor depending on request from ECM.

## COMPRESSOR PROTECTION CONTROL AT PRESSURE MALFUNCTION

When high-pressure side value that is detected by refrigerant pressure sensor is as per the following state, ECM requests IPDM E/R to turn A/C relay OFF and stops the compressor.


- 3.12 MPa (31.82 kg/cm<sup>2</sup>, 452.4 psi) or more (When the engine speed is less than 1,500 rpm)
- 2.74 MPa (27.95 kg/cm<sup>2</sup>, 397.3 psi) or more (When the engine speed is 1,500 rpm or more)
- 0.14 MPa (1.43 kg/cm<sup>2</sup>, 20.3 psi) or less

# COMPRESSOR OIL CIRCULATION CONTROL

When the engine starts while the engine coolant temperature is 56°C (133°F) or less, ECM activates the compressor for approximately 6 seconds and circulates the compressor lubricant once.

### LOW TEMPERATURE PROTECTION CONTROL

- When intake sensor detects that front evaporator fin temperature is 2.5°C (37°F) or less, A/C auto amp. requests ECM to turn compressor OFF, and stops the compressor.
- When the front evaporator fin temperature returns to 5.0°C (41°F) or more, the compressor is activated.

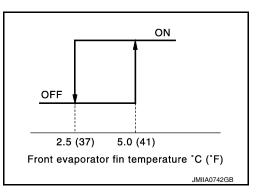

# **OPERATING RATE CONTROL**

When set temperature is other than fully cold or air outlet is "VENT", "B/L" or "FOOT" A/C auto amp. controls the compressor activation depending on ambient temperature.

### AIR CONDITIONING CUT CONTROL

When set engine is running is excessively high load condition, ECM requests IPDM E/R to turn A/C relay OFF, and stops the compressor. Refer to <u>EC-57</u>, "AIR CONDITIONING CUT CONTROL : System Description (with automatic air conditioner)" (QR25DE) or <u>EC-575</u>, "AIR CONDITIONING CUT CONTROL : System Description" (VQ35DE) for details.

# < SYSTEM DESCRIPTION >


# Door Control

INFOID:000000010997286

А


[AUTOMATIC AIR CONDITIONER]

# DOOR MOTOR CONTROL

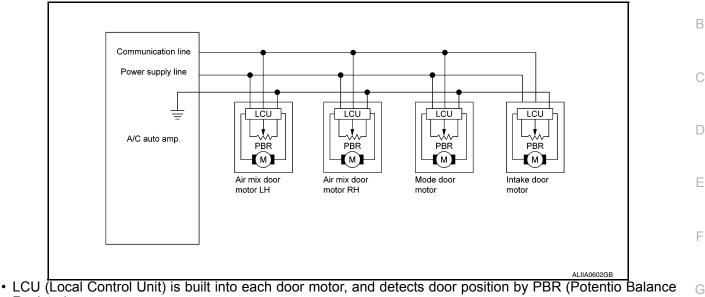

- Resistor).
  A/C auto amp. communicates with each LCU via communication line and receives each door position feedback signal from each LCU.
- Each LCU controls each door to the appropriate position depending on the control signal from A/C auto amp.
- Each LCU transmits the signal of door movement completion to A/C auto amp., when the door movement is completed.

SWITCHES AND THEIR CONTROL FUNCTION

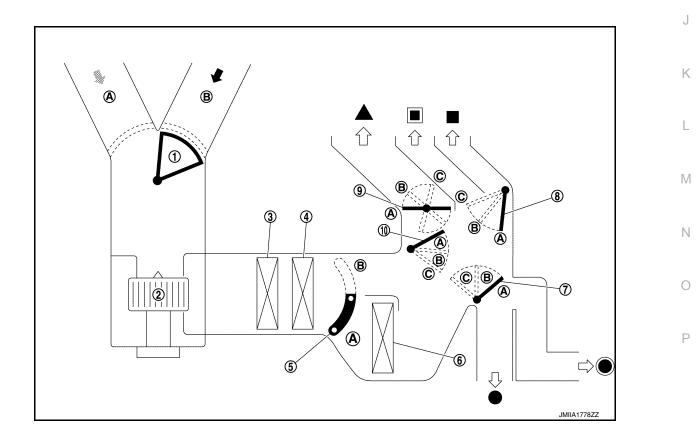

HAC

2.

5.

8.

←

 $\bigcirc$ 

Ventilator door

Recirculation air

Center ventilator

Rear foot

# < SYSTEM DESCRIPTION >

Front evaporator

1. Intake door

Foot door

10. Max. cool door

Defroster

Front foot

4.

7.

- Blower motor
   3.
   In-cabin microfilter

   Air mix door
   6.
   Front heater core
  - 9. Defroster door
  - ∠ Discharge air
  - Side ventilator

				Door position														
Switch position					Mode	e door		Air mix door										
					Max. cool door	Defroster door	Foot door	Intake door	(Driver side)	(Passenger side)								
AUTO switch		-)	-				AL	ITO										
			7	А	А	А	Α											
MODE owitch		:	V .	В	В	А	В			_								
MODE switch			j	С	С	В	В											
		57	R.	С	В	В	В		_									
DEF switch		¥		С	А	С	С											
Intake switch*		Ē		_				Α										
make switch								В										
	DUAL switch: OFF	Full cold           [18°C (60°F)]			A													
Temperature control switch (Driver side)											– 31.5°C – 89 °F)						AU	ТО
								l hot (90°F)]						I	3			
	de) DUAL switch: ON		Full cold [18°C (60°F)]	_	_			А										
Temperature control switch (Driver side)			– 31.5°C – 89 °F)					—	AUTO	—								
			l hot (90°F)]					В										
Temperature control switch (Passenger side)			cold (60°F)]							А								
				– 31.5°C – 89 °F)							AUTO							
			l hot (90°F)]							В								
ON·OFF switch		OFF		С	С	В	В	В		_								

\*: Inlet status is displayed by indicator during activating automatic control

# AIR DISTRIBUTION

# [AUTOMATIC AIR CONDITIONER]

# < SYSTEM DESCRIPTION >

	VENT	MODE (	)									
				VENT								
OUTLET	-	ASST	CTR	ſR	२							
		A331	ASST	DR	DR	RR						
AIR FLOW DISTRIBUTION F (%)	RATIO	22	22	22	22	12						
			E	B/L MODI	E (💙 )							
				VENT				FC	ОТ			
OUTLET	-	ASST	CT ASST	rr Dr	DR	RR	Fr ASST	Fr DR	Rr ASST	Rr DR	-	
AIR FLOW DISTRIBUTION F (%)	RATIO	11	11	11	11	17	14.5	14.5	5	5		
				D/F1 I	MODE (	<b>, ,</b> )						
			VENT			,	FOOT			DE	DEF	
OUTLET	ASST	r ASS1		DR	RR	Fr ASST	Fr DR	Rr ASST	Rr DR	Fr	Side	
AIR FLOW DISTRIBUTION RATIO (%)	5	0	0	5	17	18	18	7	7	18	5	
	1					1						
				D/F2 N	NODE (	)						
			VENT				FC	тос		DE	F	
OUTLET	ASST	r ASST	CTR DR	DR	RR	Fr ASST	Fr DR	Rr ASST	Rr DR	Fr	Side	
AIR FLOW DISTRIBUTION RATIO (%)	5	0	0	5	17	14	14	6.5	6.5	25	7	
	1				NODE (	<b>H?</b> )						
	L		VENT				FOOT			DE	F	
OUTLET	ASST	r ASST	CTR DR	DR	RR	Fr ASST	Fr DR	Rr ASST	Rr DR	Fr	Side	
AIR FLOW DISTRIBUTION RATIO (%)	5	0	0	5	14	0	0	0	0	60	16	

Ρ


# < SYSTEM DESCRIPTION >

# Temperature Control

- When ignition switch is in the ON position, A/C auto amp. always automatically controls temperature regardless of front air conditioning operational state.
- A/C auto amp. calculates the target air mix door opening angle depending on set temperature, in-vehicle temperature, ambient temperature, and sunload.
- Air mix door is controlled depending on the comparison of current air mix door opening angle and target air mix door opening angle.
- Regardless of in-vehicle temperature, ambient temperature, and sunload, air mix door is fixed at the fully cold position when set temperature is 18.0°C (60°F), and at the fully hot position when set temperature is 32.0°C (90°F).

# Fail-safe

When

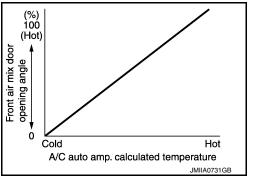

[AUTOMATIC AIR CONDITIONER]

INFOID:000000010997288

## FAIL-SAFE FUNCTION

If a communication error exists between the A/C auto amp., and the AV control unit and preset switch for 30 seconds or longer, air conditioning is controlled under the following conditions:

When ambient temperature is less than 3°C (37°F) and engine coolant temperature is less than 56°C (133°F)

Compressor	: ON
Air outlet	: DEF
Air inlet	: FRE (Fresh air intake)
Blower fan speed	: AUTO
Set temperature	: Setting before communication error occurs
n ambient temperature is 3°C (37°F) (	or more, or engine coolant temperature is 56°C (133°F) or more
Compressor	: ON
Air outlet	: AUTO
Air inlet	: 20% FRE (20% fresh air intake)
Blower fan speed	: AUTO
• • • •	

Set temperature : Setting before communication error occurs




# OPERATION

# Switch Name and Function

# CONTROL OPERATION

A/C Switch Assembly

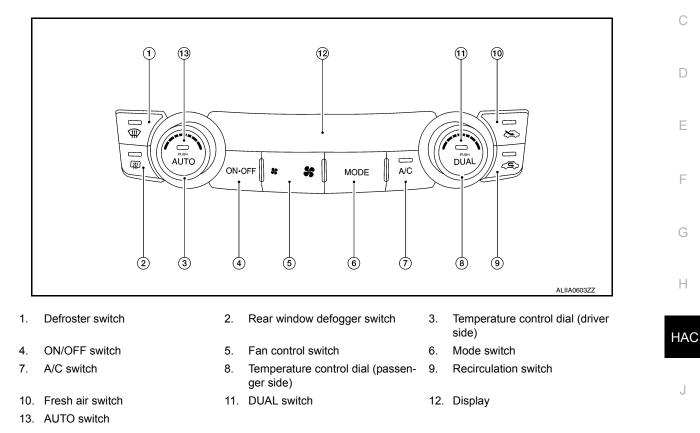

### Switch Operation

A INFOID:000000010997289

В

Κ

L

Μ

Ν

Ο

Ρ

# **OPERATION**

# < SYSTEM DESCRIPTION >

AUTO switch	Turns the switch indicator lamp and "AUTO" indicator on the display ON, and then front air condition- ing system becomes the following state. • Air inlet: Automatic control • Air outlet: Automatic control • Blower fan: Automatic control • Compressor: ON
Defroster switch	<ul> <li>Turns defroster mode (switch indicator) between ON ⇔ OFF each time. When defroster switch is pressed while front air conditioning system is in the ON position.</li> <li>When defroster mode is turned ON, front air conditioning system becomes the following state.</li> <li>Air inlet: Fresh air intake</li> <li>Air outlet: DEF</li> <li>Blower fan: Automatic control (If fan speed other than AUTO is selected before pressing defroster switch, fan speed is manual control.)</li> <li>Compressor: ON</li> <li>When defroster mode is turned OFF, front air conditioning system state returns to the previous state before defroster mode is selected. But, the following state is continued.</li> <li>Air inlet: Fresh air intake</li> <li>Compressor: ON</li> <li>When defroster mode is pressed while front air conditioning system is in the OFF position.</li> <li>When defroster mode is turned ON, front air conditioning system is in the OFF position.</li> <li>Air inlet: Fresh air intake</li> <li>Compressor: ON</li> <li>When defroster mode is turned ON, front air conditioning system is in the OFF position.</li> <li>When defroster mode is turned ON, front air conditioning system is in the OFF position.</li> <li>When defroster mode is turned ON, front air conditioning system is in the OFF position.</li> <li>When defroster mode is turned ON, front air conditioning system is in the OFF position.</li> <li>When defroster mode is turned OFF, entire front air conditioning system is not to a to mode.</li> <li>Air outlet: Defroster</li> <li>Blower fan: Automatic control</li> <li>Compressor: ON</li> <li>When defroster mode is turned OFF, entire front air conditioning system is set to auto mode.</li> </ul>
DUAL switch	<ul> <li>Turns left and right ventilation temperature control (switch indicator) between ON ⇔ OFF each time.</li> <li>When DUAL switch indicator is ON, the driver side and passenger side temperatures can each be set independently.</li> <li>When DUAL switch indicator is OFF, the driver side outlet and setting temperature is applied to both sides.</li> <li>Left and right ventilation temperature control is cancelled by turning the DEF mode ON. NOTE:</li> <li>When front air conditioning system is in the OFF position, left and right ventilation temperature control can be selected only while front air conditioning system state (when MODE switch is pressed) is indicated on the display.</li> </ul>
Fan switch (UP/DOWN)	<ul> <li>Blower fan speed is manually controlled with these switches. Seven speeds are available for manual control (as shown on the display screen).</li> <li>NOTE:</li> <li>When fan switch is pressed while front air conditioning system is in OFF, front air conditioning system is activated. (Compressor control state returns to the previous state before front air conditioning system OFF.)</li> <li>When fan switch is pressed while front air conditioning system is in automatic control ("AUTO" is indicated), automatic control is released ("AUTO" turns OFF).</li> </ul>
A/C switch	<ul> <li>Compressor control (switch indicator) changes between ON ⇔ OFF each time this switch is pressed while front blower motor is operated.</li> <li>NOTE:</li> <li>A/C switch cannot be turned ON when front blower motor is OFF.</li> <li>A/C switch cannot be turned OFF when air outlet is D/F or DEF.</li> <li>Air inlet changes to fresh air intake when A/C switch is turned OFF while air inlet is set to recirculation.</li> </ul>
MODE switch	<ul> <li>Selects air outlet sequentially from VENT ⇒ B/L ⇒ FOOT ⇒ D/F ⇒ VENT each time.</li> <li>NOTE:</li> <li>When front air conditioning system is in the OFF position, air outlet can be selected.</li> <li>When MODE switch is pressed while front air conditioning system is in automatic control ("AUTO" is indicated), automatic control is released ("AUTO" turns OFF).</li> </ul>
ON/OFF switch	<ul> <li>Turns front air conditioning system ON/OFF.</li> <li>When front air conditioning system turns OFF, air inlet and air outlet become the automatic control.</li> </ul>

# **OPERATION**

# < SYSTEM DESCRIPTION >

# [AUTOMATIC AIR CONDITIONER]

Fresh air switch	<ul> <li>Air inlet changes to fresh air (FRE) when this switch is pressed.</li> <li>Fresh air switch indicator ON: Fresh air intake</li> <li>Fresh air switch indicator OFF: Recirculation</li> <li>NOTE:</li> <li>When front air conditioning system is in the OFF position, air inlet can be selected.</li> </ul>	
Recirculation switch	<ul> <li>Air inlet changes to recirculation (REC) when this switch is pressed.</li> <li>Recirculation switch indicator ON: Recirculation</li> <li>Recirculation switch indicator OFF: Fresh air intake</li> <li>NOTE:</li> <li>When front air conditioning system is in the OFF position, air inlet can be selected.</li> <li>When MODE switch and DEF switch is in the D/F or DEF position, air inlet cannot be selected to recirculation (REC).</li> </ul>	
Temperature control dial (Driver side)	Setting temperature is selected using this dial within a range between 18°C (60°F) and 32°C (90°F) at a rate of 0.5°C (1.0°F) per adjustment. <b>NOTE:</b> When air conditioning system is OFF, setting temperature can be selected only while air conditioning system status screen [only when MODE switch (driver side) is pressed] is indicated on display.	
Temperature control dial (Passenger side)	<ul> <li>Outlet air flow temperature of passenger side can be changed without changing outlet air flow temperature of driver side.</li> <li>Setting temperature is selected using this dial within a range between 18°C (60°F) and 32°C (90°F) at a rate of 0.5°C (1.0°F) per adjustment.</li> <li>NOTE:</li> <li>When air conditioning system is OFF, setting temperature can be selected only while air conditioning system status screen [only when MODE switch (passenger side) is pressed] is indicated on display.</li> <li>When DEF mode is ON, temperature control dial (passenger side) is inoperative.</li> </ul>	

HAC

J

Κ

L

Μ

Ν

0

Ρ

CONSULT Function (HVAC)

INFOID:000000010481938

### **CAUTION:**

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF  $\rightarrow$  ON (for at least 5 seconds)  $\rightarrow$  OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and no-start condition.

CONSULT can display each diagnosis item using the diagnosis test modes as shown.

CONSULT application items

Diagnosis mode	Description			
Self Diagnostic Result	Displays the diagnosis results judged by A/C auto amp.			
Data Monitor	Displays A/C auto amp. input/output data in real time.			
Work support	Changes the setting for each system function.			
Active Test	The signals used to activate each device are forcibly supplied from A/C auto amp.			
ECU Identification Displays the A/C auto amp. number.				
Configuration	<ul> <li>The vehicle specification can be read and saved.</li> <li>The vehicle specification can be written when replacing A/C auto amp.</li> </ul>			

### SELF-DIAGNOSTIC RESULT Refer to <u>HAC-31, "DTC Index"</u>. Display Item List

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause	
U1000	CAN COMM CIRCUIT	When A/C auto amp. is not transmitting or receiving CAN communication signal for 2 or more seconds.	CAN communication system	
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diagnosis of CAN controller of A/C auto amp.	A/C auto amp.	
B257B	AMB TEMP SEN (SHORT)	Detected temperature at ambient sen- sor 55°C (131°F) or more	<ul><li> Ambient sensor</li><li> A/C auto amp.</li></ul>	
B257C	AMB TEMP SEN (OPEN)	Detected temperature at ambient sen- sor -30°C (-22°F) or less	<ul> <li>Harness and connector (Ambient sensor circuit is open, or there is a short in the circuit)</li> </ul>	
B2578	IN-CAR SENSOR (OUT OF RANGE [LOW])	Detected temperature at in-vehicle sen- sor 55°C (131°F) or more	<ul><li>In-vehicle sensor</li><li>A/C auto amp.</li></ul>	
B2579	IN-CAR SENSOR (OUT OF RANGE [HI])	Detected temperature at in-vehicle sensor $-30^{\circ}C$ (-22°F) or less	<ul> <li>Harness and connector (In-vehicle sensor circuit is open, or there is a short in the circuit)</li> </ul>	
B2581	EVAP TEMP SEN (SHORT)	Detected temperature at intake sensor 55°C (131°F) or more	<ul><li>Intake sensor</li><li>A/C auto amp.</li></ul>	
B2582	EVAP TEMP SEN (OPEN)	Detected temperature at intake sensor -30°C (-22°F) or less	<ul> <li>Harness and connector (Intake sensor circuit is open, or there is a short in the circuit)</li> </ul>	
B2630 <sup>*</sup>	SUNLOAD SEN (SHORT)	Detected calorie at sunload sensor 1395 w/m <sup>2</sup> (1200 kcal/m <sup>2</sup> ·h)	<ul> <li>Sunload sensor</li> <li>A/C auto amp.</li> <li>Harness and connector</li> </ul>	
B2631 <sup>*</sup>	SUNLOAD SEN (OPEN)	Detected calorie at sunload sensor 0 w/ $m^2$ (0 kcal/m <sup>2</sup> ·h)	(Sunload sensor circuit is open, or there is a short in the circuit)	

### < SYSTEM DESCRIPTION >

# [AUTOMÁTIC AIR CONDITIONER]

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
B2632	DR AIRMIX ACTR (SHORT)	Air mix door PBR LH position 5% or less	<ul> <li>Air mix door motor LH</li> <li>A/C auto amp.</li> </ul>
B2633	DR AIRMIX ACTR (OPEN)	Air mix door PBR LH position 95% or more	<ul> <li>Harness and connector (CAN communication line is open or shorted) (Air mix door motor is open or shorted)</li> </ul>
B2634	PASS AIRMIX ACTR (SHORT)	Air mix door PBR RH position 5% or less	<ul><li> Air mix door motor RH</li><li> A/C auto amp.</li></ul>
B2635	PASS AIRMIX ACTR (OPEN)	Air mix door PBR RH position 95% or more	<ul> <li>Harness and connector (CAN communication line is open or shorted) (Air mix door motor is open or shorted)</li> </ul>
B2636	DR VENT DOOR FAIL	When the malfunctioning door position is detected at VENT position	Mode door motor
B2637	DR B/L DOOR FAIL	When the malfunctioning door position is detected at B/L position	<ul> <li>A/C auto amp.</li> <li>Harness and connector (CAN communication line is open</li> </ul>
B2638	DR D/F1 DOOR FAIL	When the malfunctioning door position is detected at FOOT position	or shorted) (Mode door motor is open or
B2639	DR DEF DOOR FAIL	When the malfunctioning door position is detected at DEF position	shorted)
B263D	FRE DOOR FAIL	When the malfunctioning intake door position is detected at FRE position	<ul> <li>Intake door motor</li> <li>A/C auto amp.</li> </ul>
B263E	20P FRE DOOR FAIL	When the malfunctioning intake door position is detected at 20%FRE position	Harness and connector (CAN communication line is open or shorted)
B263F	REC DOOR FAIL	When the malfunctioning intake door position is detected at REC position	(Intake door motor is open or shorted)
B2654	D/F2 DOOR FAIL	When the malfunctioning door position is detected at D/F position	<ul> <li>Mode door motor</li> <li>A/C auto amp.</li> </ul>
B2655	B/L2 DOOR FAIL	When the malfunctioning door position is detected at B/L2 position	<ul> <li>Harness and connector (CAN communication line is open or shorted) (Mode door motor is open or shorted)</li> </ul>

\*: Perform self-diagnosis under sunshine. When performing indoors, aim a light (more than 60 W) at sunload sensor, otherwise self-diagnosis reports an error even though the sunload sensor is functioning normally.

### DATA MONITOR

Display item list		
Monitor item [U	lnit]	Description
AMB TEMP SEN	[°C]	Ambient sensor value converted from ambient sensor signal received from ambient sensor
IN-VEH TEMP	[°C]	In-vehicle sensor value converted from in-vehicle sensor signal received from in-vehi- cle sensor
INT TEMP SEN	[°C]	Intake sensor value converted from intake sensor signal received from intake sensor
SUNLOAD SEN	[w/m <sup>2</sup> ]	Sunload sensor value converted from sunload sensor signal received from sunload sensor
AMB SEN CAL	[°C]	Ambient sensor value calculated by A/C auto amp.
IN-VEH CAL	[°C]	In-vehicle sensor value calculated by A/C auto amp.
INT TEMP CAL	[°C]	Intake sensor value calculated by A/C auto amp.
SUNL SEN CAL	[w/m <sup>2</sup> ]	Sunload sensor value calculated by A/C auto amp.
COMP REQ SIG	[On/Off]	Displays A/C switch ON/OFF status transmitted to other units via CAN communication

Revision: May 2014

Μ

### < SYSTEM DESCRIPTION >

[AUTOMATIC AIR CONDITIONER]

Monitor item [Unit]		Description
FAN REQ SIG	[On/Off]	Displays blower switch ON/OFF status transmitted to other units via CAN communica- tion
FAN DUTY	[%]	Duty ratio of blower motor judged by A/C auto amp.
ХМ		Target discharge air temperature judged by A/C auto amp. according to the tempera- ture setting and the value from each sensor
PA TARGET A/TEMP		Target discharge front air temperature (passenger side) judged by A/C auto amp. de- pending on the temperature setting and the value from each sensor.
ENG COOL TEMP	[°C]	Water temperature signal value received from ECM via CAN communication
VEHICLE SPEED	[km/h (mph)]	Vehicle speed signal value received from meter via CAN communication

# WORK SUPPORT

Work item	Description	Reference
TEMP SET CORRECT (Setting of difference between tem- perature setting and control tempera- ture)	If the temperature felt by the customer is different than the airflow temperature controlled by the temperature setting, the auto ampli- fier control temperature can be adjusted to compensate for the temperature setting.	HAC-50, "Temperature Setting Trimmer"
REC MEMORY SET (REC memory function setting)	<ul> <li>If the ignition switch is turned to the OFF position while the REC switch is set to ON (recirculation), "With" or "Without" of the REC switch ON (recirculation) condition can be selected.</li> <li>If "" was set, the REC switch will be ON (recirculation) when turning the ignition switch to the ON position again.</li> <li>If "Without" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.</li> </ul>	HAC-51, "Inlet Port Memory Function (REC)"
FRE MEMORY SET (FRE memory function setting)	<ul> <li>If the ignition switch is turned to the OFF position while the FRE switch is set to ON (fresh air intake), "With" or "" of the FRE switch ON (fresh air intake) condition can be selected.</li> <li>If "With" was set, the FRE switch will be ON (fresh air intake) when turning the ignition switch to the ON position again.</li> <li>If "Without" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.</li> </ul>	HAC-50, "Inlet Port Memory Function (FRE)"
BLOW SET (Blow setting to DEF in FOOT mode)	In the FOOT mode, the air blowing to the DEF can change ON/ OFF.	HAC-50, "Foot Position Setting Trimmer"
TARGET EVAPORATOR TEMP UP- PER LIMIT SETTING	Set the target evaporator upper temperature limit.	HAC-51, "Target Evapo- rator Temp Upper Limit"

### NOTE:

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10V or less, the setting of WORK SUPPORT may be cancelled.

### ACTIVE TEST

Test item	Description		
HVAC TEST	The operation check of A/C system can be performed by selecting the mode. Refer to the fol- lowing table for the conditions of each mode.		

### HVAC TEST

		Test item						
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7	
Mode door position	VENT	VENT	B/L	D/F1	D/F2	DEF	DEF	
Intake door position	REC	REC	20%FRE	FRE	FRE	FRE	FRE	
Air mix door position (driver & passenger side)	FULL COLD	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT	

### < SYSTEM DESCRIPTION >

# [AUTOMATIC AIR CONDITIONER]

				Test item				٨
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7	А
Blower motor duty ratio	30%	30%	60%	HI	HI	60%	HI	
A/C compressor (Mag- net clutch)	ON	ON	ON	OFF	OFF	ON	ON	В
ECV duty	100%	100%	50%	0%	0%	100%	100%	_

### NOTE:

Perform the inspection of each output device after starting the engine, because the A/C compressor has been operating.

### CONFIGURATION

Configuration includes the following functions.

Func	tion	Description	
Pood/Mrite Configuration	Before replacing ECU	Allows the reading of vehicle specification (Type ID) written in A/C auto amp. to store the specification in CONSULT.	
Read/Write Configuration	After replacing ECU	Allows the writing of vehicle information (Type ID) stored in CON- SULT into the A/C auto amp.	
Manual Configuration		Allows the writing of vehicle specification (Type ID) into the A/C auto amp. by hand.	

### **CAUTION:**

Use "Manual Configuration" only when "TYPE ID" of A/C auto amp. cannot be read.

Н

С

D

# HAC

J

Κ

Μ

Ν

Ο

Ρ

Revision: May 2014

INFOID:000000010481939


# < ECU DIAGNOSIS INFORMATION > ECU DIAGNOSIS INFORMATION A/C AUTO AMP.

Reference Value

# VALUES ON THE DIAGNOSIS TOOL

Monitor item	Co	ndition	Value/Status
AMB TEMP SEN	Ignition switch ON	_	22 - 131°F (-30 - 55°C)
IN-VEH TEMP	Ignition switch ON	_	22 - 131°F (-30 - 55°C)
INT TEMP SEN	Ignition switch ON	—	22 - 131°F (-30 - 55°C)
SUNLOAD SEN	Ignition switch ON	-	0 - 1395 w/m <sup>2</sup> (0 - 1200 kcal/m <sup>2</sup> ·h)
AMB SEN CAL	Ignition switch ON	_	22 -131°F (-30 - 55°C)
IN-VEH CAL	Ignition switch ON	—	22 -131°F (-30 - 55°C)
INT TEMP CAL	Ignition switch ON	_	22 -131°F (-30 - 55°C)
SUNL SEN CAL	Ignition switch ON	-	0 - 1395 w/m <sup>2</sup> (0 - 1200 kcal/m <sup>2</sup> ·h)
COMP REQ SIG	Engine: Run at idle after warming up	A/C switch: ON (A/C compressor operation status)	On
		A/C switch: OFF	Off
FAN REQ SIG	Engine: Run at idle after	Blower fan: ON	On
FAIN REQ 310	warming up	Blower fan: OFF	Off
FAN DUTY	Engine: Run at idle after	Blower fan: ON	25 - 85%
FAN DUTT	warming up	Blower fan: OFF	0%
XM	Ignition switch ON	—	-100 - 155
PA TARGET A/TEMP	Ignition switch ON	-	Value according to target air flow temperature (passen- ger side)
ENG COOL TEMP	Ignition switch ON	-	Values according to coolant temperature
VEHICLE SPEED	Driving	_	Equivalent to speedometer reading

# **TERMINAL LAYOUT**

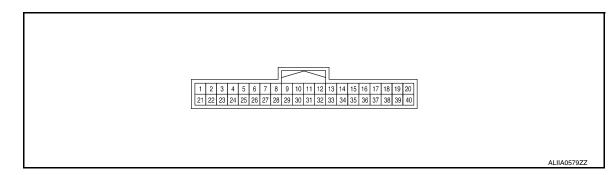

PHYSICAL VALUES

## < ECU DIAGNOSIS INFORMATION >

# [AUTOMATIC AIR CONDITIONER]

Termina (Wire co		Description		Cr	ondition	Value
+	_	Signal name	Input/ Output			(Approx.)
1 (L)	_	CAN-H	Input/ Output		_	_
2 (B)	_	Ground	_		_	_
3 (SB)	Ground	Battery power supply	Input	Ignition swit	tch OFF	Battery voltage
4 (BR)	Ground	TX FR	Output	Ignition swit	tch ON	0 – 5 V
7 (L)	Ground	Ambient sensor signal	Input	Ignition swit	ich ON	0 – 4.8 V Output voltage varies with ambi- ent temperature
8 <sup>*1</sup> (BR)	Ground	Heated steering wheel switch signal	Input	Ignition switch ON	Heated steer- ing wheel switch: While pressing	0 V
					Other than the above	Battery voltage
9 (G)	Ground	Sunload sensor signal	Input	Ignition swit	ich ON	0 – 4.8 V Output voltage varies with sun- load amount
13 (P)	Ground	IGN 2	Input	Ignition swit	tch ON	Battery voltage
15 (Y)	Ground	RR DEF switch	Output	Defroster switch	OFF ON	0 V Battery voltage
16 (G)	Ground	Each door motor LIN signal	Input/ Output	Ignition swit	tch ON	(v) 15 10 5 0 
17 (W)	Ground	Each door motor power supply	Output	Ignition swit	tch ON	Battery voltage
18 (P)	Ground	Front blower motor control signal	Output	<ul> <li>Ignition s</li> <li>Front fan speed (m</li> </ul>	speed: 1st	(V) 6 4 2 0 •••••••••••••••••••••••••••••••••
20 <sup>*1</sup> (P)	Ground	Heated steering wheel relay control signal	Output	Ignition switch ON	Within 30 sec- onds after turning ON the heated steering switch.	0 V
					Other than the above	Battery voltage
21 (P)	_	CAN-L	Input/ Output		_	

### < ECU DIAGNOSIS INFORMATION >

Terminal N (Wire cold		Description				Value
+	_	Signal name	Input/ Output			(Approx.)
22 (B)		Ground	_		_	_
23 (G)	Ground	Ignition power supply	Input	Ignition swit	ch ON	Battery voltage
24 (V)	Ground	RX FR	Input	Ignition swit	ch ON	0 – 5 V
26 (W)	_	Sensor ground	_		_	_
27 (G)	Ground	In-vehicle sensor signal	Input	Ignition switch ON		0 – 4.8 V Output voltage varies with in-vehi- cle temperature
28 (P)	Ground	Intake sensor signal	Input	Ignition switch ON		0 – 4.8 V Output voltage varies with front evaporator fin temperature
35	Ground	RR DEF feedback	Input	Defroster	OFF	0 V
(P)				switch	ON	Battery voltage
37 (B)	—	ACTR Ground	—		_	_
40 (G)	Ground	ECV (electrical control valve) control signal	Output	<ul> <li>Ignition switch ON</li> <li>Active test (HVAC test): MODE 1</li> </ul>		(V) 15 10 5 0 ++

\*1: With heated steering wheel

DTC Inspection Priority Chart

INFOID:000000010481940

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

# < ECU DIAGNOSIS INFORMATION >

# [AUTOMATIC AIR CONDITIONER]

Priority	Detected items (DTC)	А
1	U1000: CAN COMM CIRCUIT     U1010: CONTROL UNIT (CAN)	
	<ul> <li>B257B: AMB TEMP SEN (SHORT)</li> <li>B257C: AMB TEMP SEN (OPEN)</li> <li>B2578: IN CAR SENSOR (OUT OF RANGE[LOW])</li> </ul>	В
	<ul> <li>B2579: IN CAR SENSOR (OUT OF RANGE[HI])</li> <li>B2581: EVAP TEMP SEN (SHORT)</li> <li>B2582: EVAP TEMP SEN (OPEN)</li> <li>B2582: OVAP TEMP SEN (OPEN)</li> </ul>	С
	<ul> <li>B2630: SUNLOAD SEN (SHORT)</li> <li>B2631: SUNLOAD SEN (OPEN)</li> <li>B2632: DR AIRMIX ACTR (SHORT)</li> <li>B2633: DR AIRMIX ACTR (OPEN)</li> </ul>	D
2	<ul> <li>B2634: PASS AIRMIX ACTR (SHORT)</li> <li>B2635: PASS AIRMIX ACTR (OPEN)</li> <li>B2636: DR VENT DOOR FAIL</li> <li>B2637: DR B/L DOOR FAIL</li> </ul>	E
	<ul> <li>B2638: DR D/F1 DOOR FAIL</li> <li>B2639: DR DEF DOOR FAIL</li> <li>B263D: FRE DOOR FAIL</li> </ul>	F
	<ul> <li>B263E: 20P FRE DOOR FAIL</li> <li>B263F: REC DOOR FAIL</li> <li>B2654: D/F2 DOOR FAIL</li> <li>B2655: B/L2 DOOR FAIL</li> <li>B27B0: A/C AUTO AMP.</li> </ul>	G

# DTC Index

INFOID:000000010481941

Н

DTC	Items (CONSULT screen terms)	Reference	HAC
U1000	CAN COMM CIRCUIT	HAC-55, "DTC Logic"	
U1010	CONTROL UNIT (CAN)	HAC-56, "DTC Logic"	J
B257B	AMB TEMP SEN (SHORT)	HAC-60, "DTC Logic"	
B257C	AMB TEMP SEN (OPEN)	HAC-60, "DTC Logic"	K
B2578	IN CAR SENSOR (OUT OF RANGE [LOW])	HAC-57, "DTC Logic"	
B2579	IN CAR SENSOR (OUT OF RANGE [HI])	HAC-57, "DTC Logic"	
B2581	EVAP TEMP SEN (SHORT)	HAC-63, "DTC Logic"	L
B2582	EVAP TEMP SEN (OPEN)	HAC-63, "DTC Logic"	
B2630 <sup>*</sup>	SUNLOAD SEN (SHORT)	HAC-66, "DTC Logic"	M
B2631 <sup>*</sup>	SUNLOAD SEN (OPEN)	HAC-66, "DTC Logic"	
B2632	DR AIRMIX ACTR (SHORT)	HAC-69, "DTC Logic"	
B2633	DR AIRMIX ACTR (OPEN)	HAC-69, "DTC Logic"	N
B2634	PASS AIRMIX ACTR (SHORT)	HAC-71, "DTC Logic"	
B2635	PASS AIRMIX ACTR (OPEN)	HAC-71, "DTC Logic"	0
B2636	DR VENT DOOR FAIL	HAC-73, "DTC Logic"	
B2637	DR B/L DOOR FAIL	HAC-73, "DTC Logic"	
B2638	DR D/F1 DOOR FAIL	HAC-73, "DTC Logic"	P
B2639	DR DEF DOOR FAIL	HAC-73, "DTC Logic"	
B263D	FRE DOOR FAIL	HAC-75, "DTC Logic"	
B263E	20P FRE DOOR FAIL	HAC-75, "DTC Logic"	
B263F	REC DOOR FAIL	HAC-75, "DTC Logic"	
B2654	D/F2 DOOR FAIL	HAC-73, "DTC Logic"	

### < ECU DIAGNOSIS INFORMATION >

## [AUTOMATIC AIR CONDITIONER]

DTC	Items (CONSULT screen terms)	Reference
B2655	B/L2 DOOR FAIL	HAC-73, "DTC Logic"
B27B0	A/C AUTO AMP.	HAC-77, "DTC Logic"

\*: Perform self-diagnosis under direct sunlight. When performing indoors, aim a light (more than 60 W) at sunload sensor, otherwise selfdiagnosis reports an error even though the sunload sensor is functioning normally.

# < ECU DIAGNOSIS INFORMATION >

# ECM, IPDM E/R, BCM

# List of ECU Reference

INFOID:000000010481942

А

[AUTOMATIC AIR CONDITIONER]

ECU	Reference	
ECM	EC-89, "Reference Value" (QR25DE) EC-620, "Reference Value" (VQ35DE)	
	EC-102, "Fail Safe" (QR25DE) EC-636, "Fail-safe" (VQ35DE)	
	EC-105, "DTC Inspection Priority Chart" (QR25DE) EC-638, "DTC Inspection Priority Chart" (VQ35DE)	
	EC-106. "DTC_Index" (QR25DE) EC-640. "DTC_Index" (VQ35DE)	
IPDM E/R	PCS-12, "Reference Value"	
	PCS-19, "Fail Safe"	
	PCS-20, "DTC Index"	
ВСМ	BCS-32, "Reference Value"	
	BCS-51, "Fail Safe"	
	BCS-52, "DTC Inspection Priority Chart"	
	BCS-53, "DTC Index"	

J

Κ

L

Μ

Ν

Ο


Ρ

Revision: May 2014

# WIRING DIAGRAM AIR CONDITIONER CONTROL


Wiring Diagram



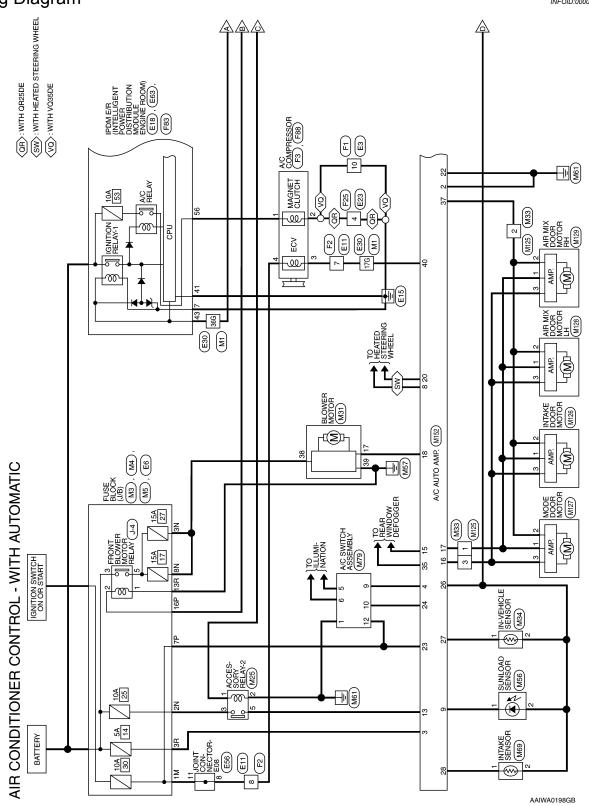


# **AIR CONDITIONER CONTROL**

# [AUTOMATIC AIR CONDITIONER]

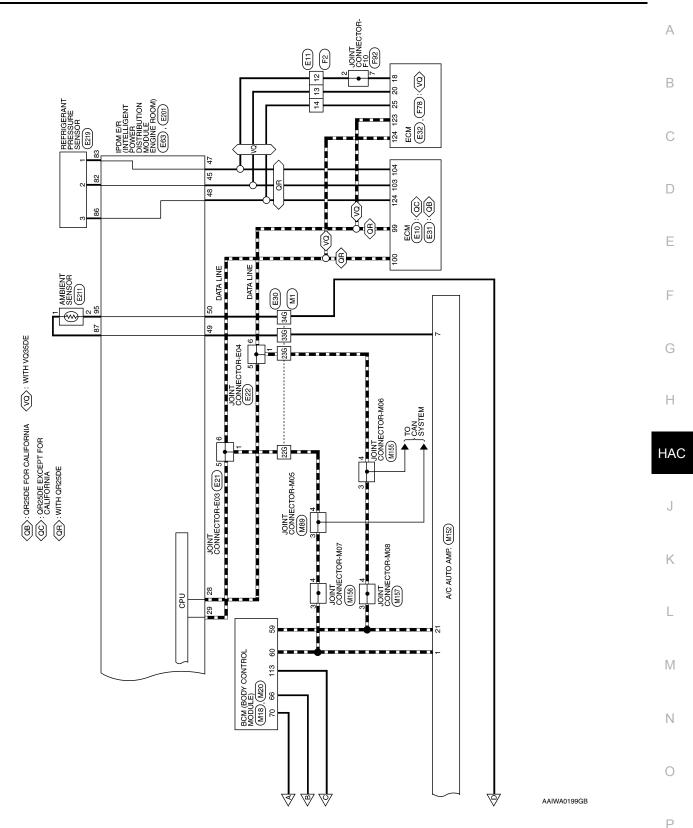

Revision: May 2014

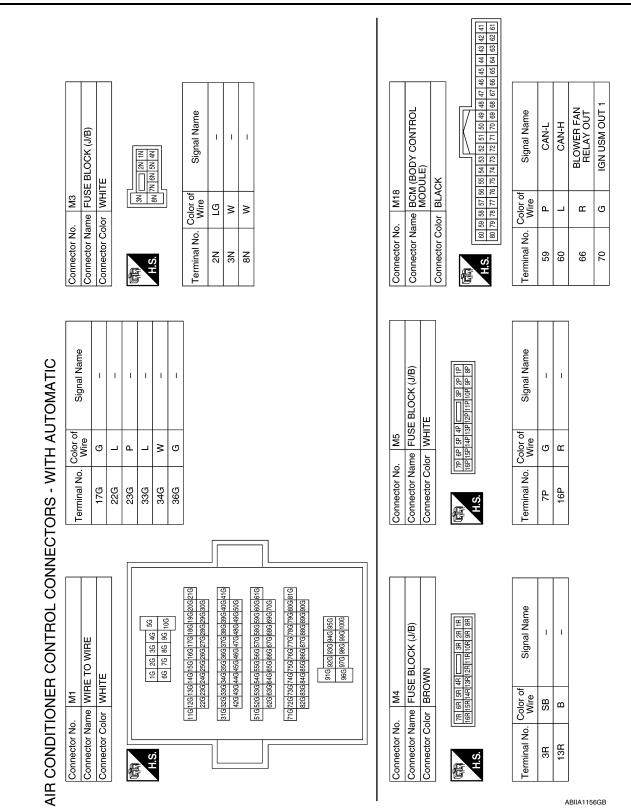

AIR CONDITIONER CONTROL

### < WIRING DIAGRAM >


# [AUTOMATIC AIR CONDITIONER]

Revision: May 2014


#### < WIRING DIAGRAM >

# AIR CONDITIONER CONTROL

### [AUTOMATIC AIR CONDITIONER]

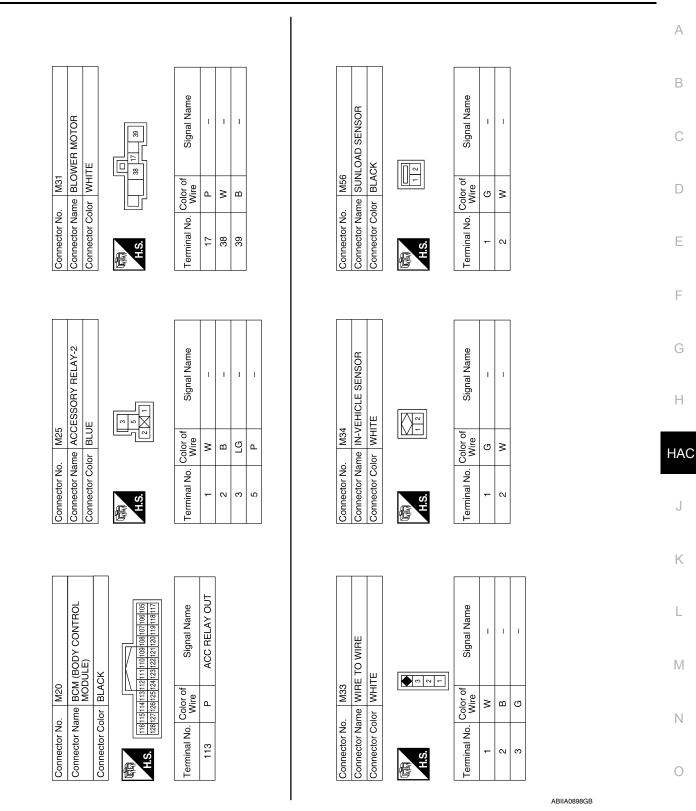

Ρ

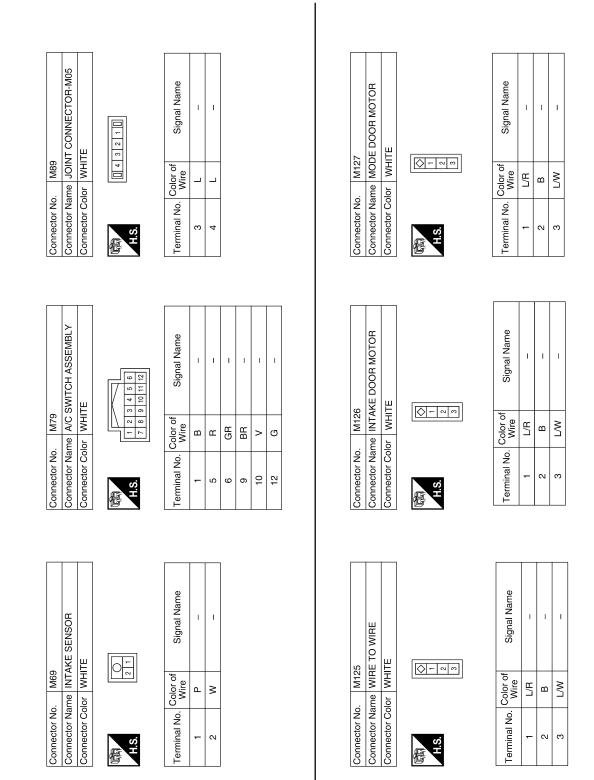

ABIIA0899GB

< WIRING DIAGRAM >

Connector Name AIR MIX DOOR MOTOR RH

Connector No. M129

Connector Color WHITE

Connector Name AIR MIX DOOR MOTOR LH Connector Color WHITE

Connector No. M128

H.S.

H.S. 佢

佢

# [AUTOMATIC AIR CONDITIONER]

					Signal Name	0	I	SENS GND	INC SENS	INT SENS	I	I	I	I	I	I	RR DEF F/B	I	ACTR GND	I	1		
					Color of	WIre	I	×	ŋ	Р	I	I	I	I	I	I	٩	I	в	1			- 5
					Terminal No.		25	26	27	28	29	30	31	32	33	34	35	36	37	38	68	8	- - -
		1	1	1					1		1	1	1	1				1	1	1	<b>T</b>		_
1	Signal Name	1	1	1	Signal Name		SUN SENS	I	I	I	IGN2	I	RR DEF SW	ACTR (LIN)	VACTR	FR FAN PWM	I	STRG HTR RLY	CAN-L	P GND	NCI		HY FH
]	Color of Wire	L/R	m	L^V	Color of	Wire	G	I	1	1	٩.	1	~	σ	×	٩	ı	۵.	٩	в	Ľ	5 >	>
	Terminal No.	-	2	e	Terminal No Color of		თ	10	:	12	13	14	15	16	17	18	19	20	21	22	50	3 5	54
			•								[	19 20 20 40	1									•	
1	Signal Name	I	I	I		AUTO AMP						9 10 11 12 13 14 15 16 17 18 1 20 20 21 22 22 22 22 22 22 22 2		Signal Name			BATT	TVED		1	1	AMB SENS	STRG HTR SW
	Color of Wire	L/R	В	L/W	). M152		X			l		6 7 8	07 /7 07	Color of		n r	5 9	8	5	ı	ı	Г	BR
	Terminal No.	Ŧ	2	3	Connector No.	Connector Name A/C	Connector Color		E	S H		1 2 3 4 5	+7 07 77	Terminal No.	Ŧ	- c	4 0	n -	+ L	c ·	9	7	8

AAIIA0532GB

А

В

С

D

Е

F

G

Н

HAC

J

Κ

L

Μ

Ν

Ο

# 


#### < WIRING DIAGRAM >

# [AUTOMATIC AIR CONDITIONER]


SENSOR GROUND

SB

124

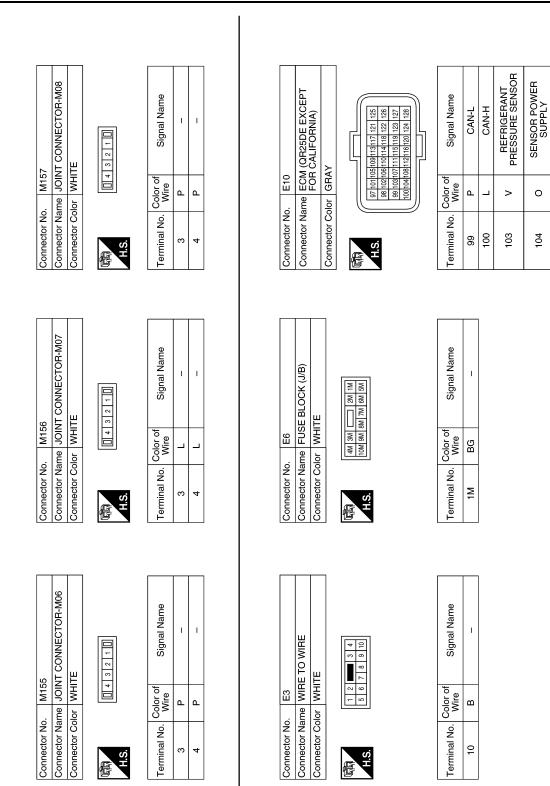

ABIIA1158GB

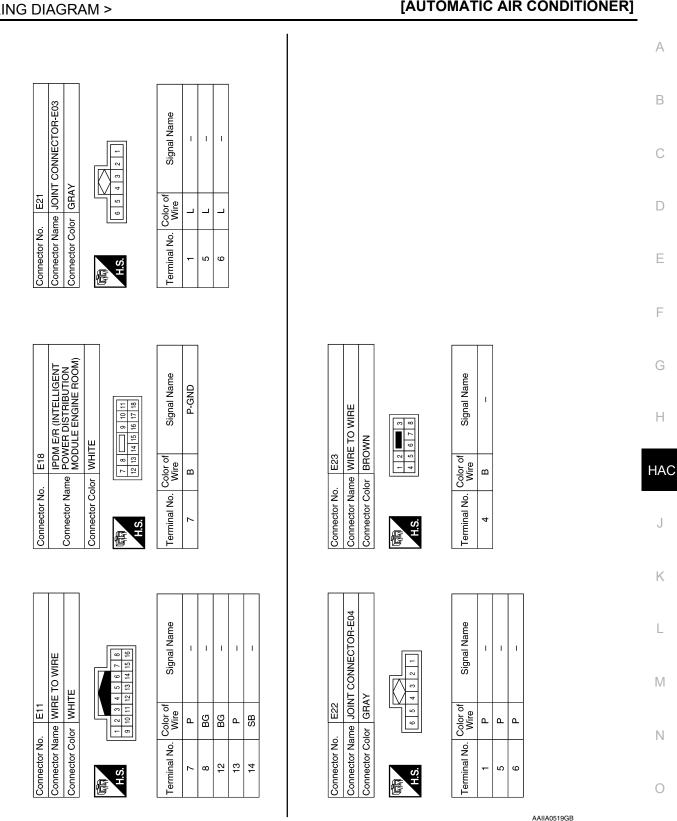


#### < WIRING DIAGRAM >


### [AUTOMATIC AIR CONDITIONER]

Revision: May 2014

Ρ



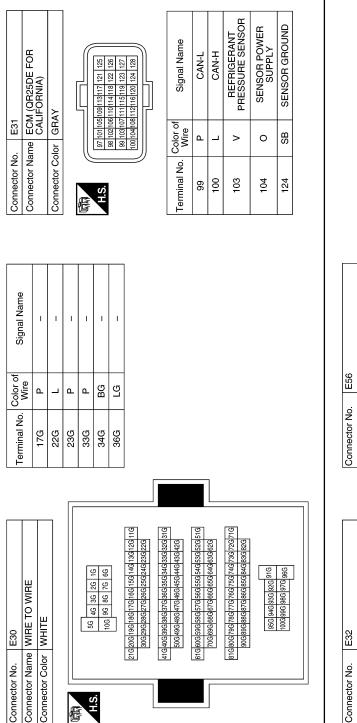

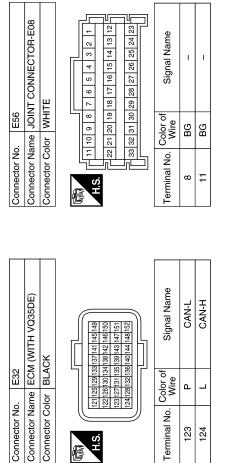

AAIIA0516GB


																		А
	lame	sig-FEM	WR-FEM	ND-FEM	SIG-FEM	GND-FEM						lame						В
	Signal Name	PD SENS SIG-FEM	PD SENS PWR-FEM	PD SENS GND-FEM	AMB SENS SIG-FEM	AMB SENS GND-FEM			e to wire Te		2 1 7 6 5	Signal Name	I					С
	Color of Wire	M	σ	œ	BG	щ		Ē	Ime WIRE T		4 3 10 9 8	Color of Wire	ш					D
_	Terminal No.	82	83	86	87	95		Connector No.	Connector Name WIRE TO WIRE Connector Color WHITE		H.S.	Terminal No.	10					E
																		F
PD SENS PWR-E/R	(WITH VQ35DE) PD SENS GND-E/R	AMB SENS SIG-E/R	AMB SENS GND-E/R						REFRIGERANT PRESSURE SENSOR			Signal Name	1	I	I			G
PD SEV	PD SEI	AMB SF	AMB SE					6	-RIGERAN VSOR	, CK	5							Н
	Ba Ba	٩	BG					o. E219		olor BLACK		Color of Wire	σ	8	æ			HAC
į	4/	49	50					Connector No.	Connector Name	Connector Color	印 H.S.	Terminal No.	-	2	ю			J
]					_					_								K
	Signal Name	CAN-L	CAN-H	S-GND					VT SENSOR		-	Signal Name	I	I				L
	Color of Wire	٩		B	-			E211	e AMBIEN r BLACK			Color of Wire	BG	æ				
	Terminal No.	28	29	41				Connector No.	Connector Name AMBIENT SENSOR Connector Color BLACK		品.S.H	Terminal No. C	-	2				N
					-					-	<b>.</b>				AAIIA	.0517GB		

PD SENS PWR-E/R (WITH QR25DE) PD SENS SIG-E/R (WITH QR25DE) PD SENS SIG-E/R (WITH VQ35DE) Signal Name IGN SIGNAL Color of Wire ŋ > ٩ 0 Terminal No. 43 45 45 47

H.S.

8 16

H.S. 佢

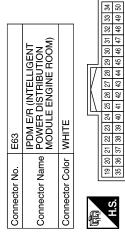

< WIRING DIAGRAM >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector Name

E201

Connector No.

Connector Color WHITE


Ρ

#### [AUTOMATIC AIR CONDITIONER]

# **AIR CONDITIONER CONTROL**

#### < WIRING DIAGRAM >

# [AUTOMATIC AIR CONDITIONER]

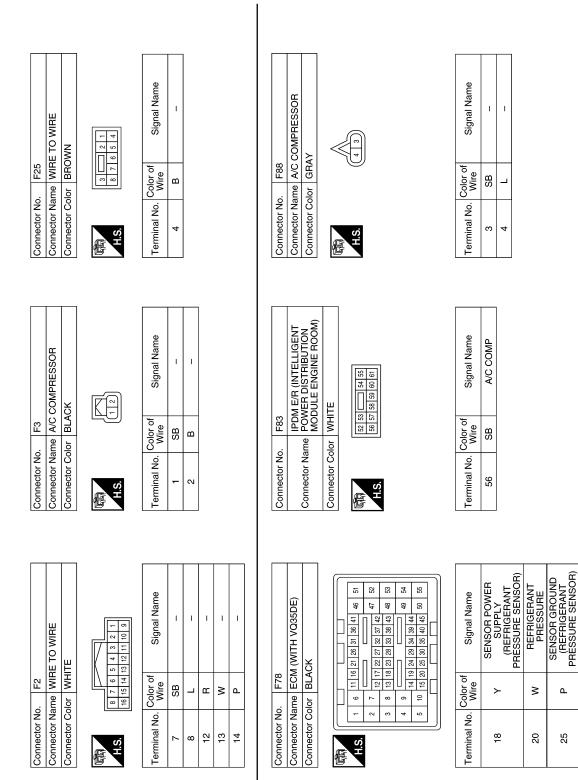

AAIIA0518GB

٩

25

	С
	D
	Е
	F
	G
	Н
	HAC
Connector No.	J
	K
Connector No.     F92       Connector Name     JOINT CONNECTOR-F10       Connector Color     BLACK       Image: Signal No.     Signal Name       7     7     7	L
F92 JOINT CONNIL In of of Signature R R Signature Signat	Μ
No. Color of No. Color of A state JOIN No. Color of A state JOIN	Ν
Connector Name Connector Name Connector Name Connector Color 7 7	0
AAIIA0526GB	D

Ρ

А


В

# BASIC INSPECTION DIAGNOSIS AND REPAIR WORKFLOW

### Work Flow

INFOID:000000010481944

**OVERALL SEQUENCE** 

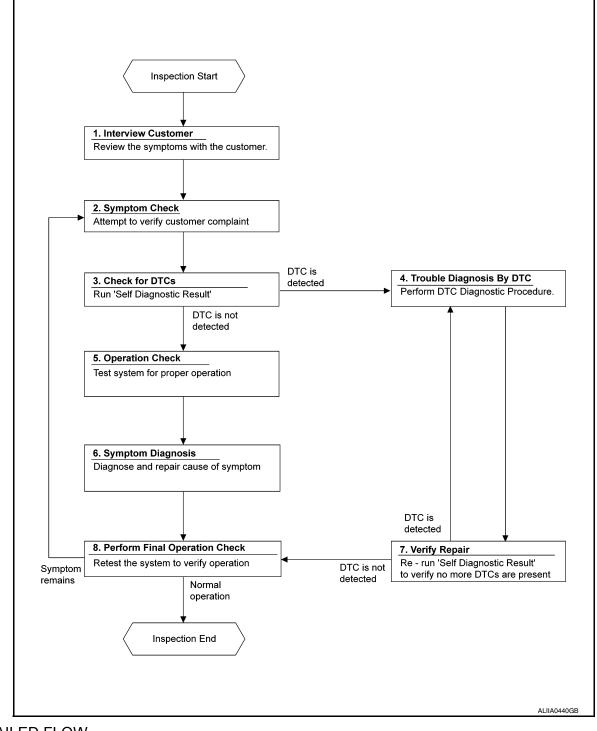

### DETAILED FLOW 1.INTERVIEW CUSTOMER

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

### 

	IC AIR CONDITIONER]
< BASIC INSPECTION > [AUTOMAT	
>> GO TO 2.	
2. SYMPTOM CHECK	
Verify symptoms.	
>> GO TO 3.	
<b>3.</b> CHECK FOR DTCS	
With CONSULT	
1. Turn ignition switch ON.	
<ol> <li>Select "Self Diagnostic Result" of "HVAC".</li> <li>Check DTC.</li> </ol>	
Is any DTC detected?	
YES >> GO TO 4. NO >> GO TO 5.	
<b>4.</b> PERFORM DTC DIAGNOSTIC PROCEDURE	
Perform the diagnostic procedure for the detected DTC. Refer to <u>HAC-30, "DTC Ins</u>	spection Priority Chart"
	posion i nonty onalt.
>> GO TO 7.	
5. OPERATION CHECK	
Perform the operation check. Refer to <u>HAC-48. "Work Procedure"</u> .	
>> GO TO 6.	
6.SYMPTOM DIAGNOSIS	
Check the symptom diagnosis table. Refer to <u>HAC-94, "Diagnosis Chart By Sympton</u>	 m".
	<u></u>
>> GO TO 8.	
7.VERIFY REPAIR.	
<ol> <li>Turn ignition switch ON.</li> <li>Select "Self Diagnostic Result" of "HVAC".</li> </ol>	
3. Check DTC.	
<u>Is any DTC detected?</u> YES >> GO TO 4.	
NO $>>$ GO TO 8.	
8. PERFORM FINAL OPERATION CHECK	
Perform the operation check. Refer to HAC-48, "Work Procedure".	
Does it operate normally?	
YES >> Inspection End. NO >> GO TO 2.	

### **OPERATION INSPECTION**

#### < BASIC INSPECTION >

### OPERATION INSPECTION

### Work Procedure

INFOID:000000010481945

[AUTOMATIC AIR CONDITIONER]

#### DESCRIPTION

The purpose of the operational check is to check that the individual system operates normally.

#### Conditions : Engine running at normal operating temperature

#### INSPECTION PROCEDURE

### **1**.CHECK MEMORY FUNCTION

- 1. Start the engine.
- 2. Operate the temperature control switch (driver side) and raise the temperature setting to 32°C (90°F).
- 3. Press the OFF switch.
- 4. Turn the ignition switch OFF.
- 5. Turn the ignition switch ON.
- 6. Press the AUTO switch.
- 7. Check that the temperature setting, before turning the ignition switch OFF, is stored.

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Check power and ground circuits for A/C auto amp. Refer to <u>HAC-78</u>, "A/C AUTO AMP. : Diagnosis Procedure".

# 2. CHECK BLOWER MOTOR SPEED

- 1. Operate the fan control dial. Check that the fan speed changes.
- Check the operation for all fan speeds.

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Check blower motor system. Refer to <u>HAC-84, "Diagnosis Procedure"</u>.

**3.**CHECK DISCHARGE AIR (MODE SWITCH AND DEF SWITCH)

- 1. Press the MODE switch and the DEF switch.
- Check that the air outlets change according to each indicated air outlet by placing a hand in front of the outlets. Refer to <u>HAC-13</u>, "System Description".

#### NOTE:

Confirm that the A/C compressor clutch is engaged (sound or visual inspection) and intake door position is at FRE ( $\searrow$ ) when the D/F ( $\Im$ ) or DEF ( $\Im$ ) is selected.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Check mode door system. Refer to <u>HAC-80, "MODE DOOR MOTOR : Diagnosis Procedure"</u>.

**4.**CHECK INTAKE AIR

- 1. Press the REC (
- 2. Press the FRE ( 2) switch. Indicator is turned ON.
- 3. Listen for the intake door position change. (Slight change of blower sound can be heard.)

#### NOTE:

Confirm that the A/C compressor clutch is engaged (sound or visual inspection) and the FRE (  $\bigtriangleup$ ) switch is pressed when the D/F (  $\circledast$  ) or DEF (  $\circledast$  ) is selected.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check intake door system. Refer to <u>HAC-81, "INTAKE DOOR MOTOR : Diagnosis Procedure"</u>.

5. CHECK A/C SWITCH

- 1. Press the A/C switch.
- 2. The A/C switch indicator is turned ON.

Confirm that the A/C compressor clutch engages (sound or visual inspection).

Is the inspection result normal?

### **HAC-48**

### **OPERATION INSPECTION**

< BASIC INSPECTION >	[AUTOMATIC AIR CONDITIONER]
YES >> GO TO 6.	
NO >> Check magnet clutch system. Refer to <u>HAC-87, "Diagn</u>	osis Procedure".
<b>6.</b> CHECK TEMPERATURE DECREASE	
1. Operate the A/C compressor.	
<ol> <li>Operate the temperature control switch (driver side) and lower</li> <li>Check that the cool air blows from the outlets.</li> </ol>	the temperature setting to 18°C (60°F).
Is the inspection result normal?	
YES >> GO TO 7.	onio Dronoduro"
NO >> Check for insufficient cooling. Refer to <u>HAC-96, "Diagna</u>	osis Procedure .
7.CHECK TEMPERATURE INCREASE	
<ol> <li>Operate the temperature control switch (driver side) and raise the warming up the engine.</li> </ol>	he temperature setting to 32°C (90°F) after
2. Check that the warm air blows from the outlets.	
Is the inspection result normal?	
YES >> GO TO 8. NO >> Check for insufficient heating. Refer to HAC-98, "Diagn	pagia Dragodura"
• • • • • • • • • • • • • • • • • • •	
8. CHECK DUAL MODE FUNCTION	
<ol> <li>Press the DUAL mode switch, and then check that "DUAL" is sl</li> <li>Operate the temperature control switch (driver side). Check to side) abanance</li> </ol>	
<ul><li>side) changes.</li><li>Operate the temperature control switch (passenger side). Chec</li></ul>	ck that the discharge air temperature (pas-
senger side) changes.	
4. Press the DUAL mode switch, and then check that the tempera	ture setting (driver/passenger) is unified to
the driver side temperature setting.	
Is the inspection result normal?	H
YES >> GO TO 9. NO >> Refer to <u>HAC-94, "Diagnosis Chart By Symptom"</u> and p	perform the appropriate diagnosis
9. CHECK AUTO MODE	schorm the appropriate diagnosis.
<ol> <li>Press the AUTO switch, and then check that "AUTO" is shown</li> <li>Operate the temperature control switch (driver side). Check t changes. The discharge air temperature or fan speed varies d vehicle temperature, and temperature setting.</li> </ol>	that the fan speed, outlet air or intake air
Is the inspection result normal?	
YES >> Inspection End	
NO >> Refer to <u>HAC-94</u> , "Diagnosis Chart By Symptom" and p	perform the appropriate diagnosis.

### SYSTEM SETTING

### Temperature Setting Trimmer

INFOID:000000010481946

[AUTOMATIC AIR CONDITIONER]

#### Description

If the temperature felt by the customer is different than the airflow temperature controlled by the temperature setting, the auto amplifier control temperature can be adjusted to compensate for the temperature setting.

#### How to set

Using CONSULT, perform "TEMP SET CORRECT" in "Work support" of "HVAC".

Work support items	Display (°F)	Display (°C)
	6	3.0
	5	2.5
	4	2.0
	3	1.5
	2	1.0
	1	0.5
TEMP SET CORRECT	0 (initial status)	0 (initial status)
	-1	-0.5
	-2	-1.0
	-3	-1.5
	-4	-2.0
	-5	-2.5
	-6	-3.0

#### NOTE:

• When the temperature setting is set to 25.0°C (77°F) and -3.0°C (-6°F), the temperature controlled by auto amp is 25.0°C (77°F) – 3.0°C (6°F) = 22.0°C (71°F) and the temperature becomes lower than the temperature setting.

• When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10V or less, the setting of the difference between the temperature setting and control temperature may be cancelled.

### Foot Position Setting Trimmer

Description

In the FOOT mode, the air blowing to the DEF can be turned ON/OFF.

#### How to set

Using CONSULT, perform "BLOW SET" in "Work support" of "HVAC".

Work support items	Display	DEF door position				
work support items	Display	Auto control	Manual control			
	Mode 1	OPEN	CLOSE			
BLOW SET	Mode 2 (initial status)	OPEN	OPEN			
BLOW SET	Mode 3	CLOSE	OPEN			
	Mode 4	CLOSE	CLOSE			

#### NOTE:

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10V or less, the setting of the discharge air mix ratio in FOOT mode may be cancelled.

### Inlet Port Memory Function (FRE)

Description

INFOID:000000010481948

INFOID:000000010481947

### SYSTEM SETTING

< BASIC INSPECTION >

### [AUTOMATIC AIR CONDITIONER]

- If "Perform the memory" was set, the FRE ( >>>) switch will be ON (fresh air intake) when turning the ignition switch to the ON position again.
- If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.

#### How to set

Using CONSULT, perform "FRE MEMORY SET" in "Work support" of "HVAC".

Work support items	Display	Setting	D			
	WITHOUT	Perform the memory of manual FRE				
FRE MEMORY SET	WITH (initial status)	Do not perform the memory of manual FRE (auto control)	E			

#### NOTE:

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10V or less, the setting of the FRE switch memory function may be cancelled.

### Inlet Port Memory Function (REC)

Description

- If the ignition switch is turned to the OFF position while the REC ( ) switch is set to ON (recirculation), "Perform the memory" or "Do not perform the memory" of the REC ( ) switch ON (recirculation) condition can be selected.
- If "Perform the memory" was set, the REC ( ) switch will be ON (recirculation) when turning the ignition switch to the ON position again.
- If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.

#### How to set

Using CONSULT, perform "REC MEMORY SET" in "Work support" of "HVAC".

Work support items	Display	Setting		
	WITHOUT (initial status)	Perform the memory of manual REC	K	
REC MEMORY SET	WITH	Do not perform the memory of manual REC (auto control)		

#### NOTE:

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10V or less, the setting of the REC switch memory function may be cancelled.

#### Target Evaporator Temp Upper Limit

#### DESCRIPTION

Set the target evaporator temperature upper limit.

#### HOW TO SET

#### (P)With CONSULT

Perform the "TARGET EVAPORATOR TEMP UPPER LIMIT SETTING" in "Work support" of "HVAC".

Work support items	Display
	Initial Setting
TARGET EVAPORATOR TEMP UPPER LIMIT	Low
SETTING	Middle
	High

Н

INFOID:000000010481949

А

В

M

INFOID:000000010481950

L

- Ν

P

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (A/C AUTO AMP.) [AUTOMATIC AIR CONDITIONER]

< BASIC INSPECTION >

# ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (A/C AUTO AMP.)

### Description

INFOID:000000010481951

#### **BEFORE REPLACEMENT**

When replacing A/C auto amp., save or print current vehicle specification with CONSULT configuration before replacement.

#### NOTE:

If "Before Replace ECU" cannot be used, use the "After Replace ECU" or "Manual Configuration" after replacing A/C auto amp.

#### AFTER REPLACEMENT

#### **CAUTION:**

- When replacing A/C auto amp., you must perform "After Replace ECU" with CONSULT.
- Complete the procedure of "After Replace ECU" in order.
- If you set incorrect "After Replace ECU", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.

### Work Procedure

INFOID:000000010481952

### **1**.SAVING VEHICLE SPECIFICATION

#### CONSULT

Enter "Re/Programming, Configuration" and perform "Before Replace ECU" to save or print current vehicle specification.

#### NOTE:

If "Before Replace ECU" cannot be used, use the "After Replace ECU" or "Manual Configuration" after replacing A/C auto amp.

#### >> GO TO 2.

### **2.**REPLACE A/C AUTO AMP.

Replace A/C auto amp. Refer to HAC-102, "Removal and Installation".

>> GO TO 3.

3.WRITING VEHICLE SPECIFICATION

#### CONSULT

- 1. Enter "Re/Programming, Configuration".
- 2. If "Before Replace ECU" operation was performed, automatically an "Operation Log Selection" screen will be displayed. Select the applicable file from the "Saved Data List" and press "Confirm" to write vehicle specification. Refer to <u>HAC-53</u>, "Work Procedure".
- 3. If "Before Replace ECU" operation was not performed, select "After Replace ECU" or "Manual Configuration" to write vehicle specification. Refer to <u>HAC-53</u>, "Work Procedure".

>> GO TO 4.

### **4.**OPERATION CHECK

Check that the operation of the A/C auto amp. is normal.

>> Work End.

#### < BASIC INSPECTION >

### **CONFIGURATION (HVAC)**

### Description

INFOID:000000010481953

INFOID:000000010481954

[AUTOMATIC AIR CONDITIONER]

Vehicle specification needs to be written with CONSULT because it is not written after replacing A/C auto amp. Configuration has three functions as follows:

CONFIGURATION (HVAC)

Function	Description	
"Before Replace ECU"	<ul> <li>Reads the vehicle configuration of current A/C auto amp.</li> <li>Saves the read vehicle configuration.</li> </ul>	
"After Replace ECU"	Writes the vehicle configuration with manual selection.	
"Select Saved Data List"	Writes the vehicle configuration with saved data.	

#### **CAUTION:**

- When replacing A/C auto amp., you must perform "Select Saved Data List" or "After Replace ECU" with CONSULT.
- Complete the procedure of "Select Saved Data List" or "After Replace ECU" in order.
- If you set incorrect "Select Saved Data List" or "After Replace ECU", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "Select Saved Data List" or "After Replace ECU" except for new A/C auto amp.

#### Work Procedure

**1.**WRITING MODE SELECTION

#### (P)CONSULT

Select "Reprogramming, Configuration" of A/C auto amp.

When writing saved data>>GO TO 2. When writing manually>>GO TO 3.

2.PERFORM "SAVED DATA LIST"

#### (P)CONSULT

Automatically "Operation Log Selection" window will display if "Before Replace ECU" was performed. Select applicable file from the "Saved Data List" and press "Confirm".

>> Work End.
 3. PERFORM "AFTER REPLACE ECU" OR "MANUAL CONFIGURATION"
 CONSULT
 Select "After Replace ECU" or "Manual Configuration".
 Identify the correct model and configuration list. Refer to <u>HAC-54</u>, "Configuration List".
 Confirm and/or change setting value for each item.

CAUTION: Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

 Select "Next".
 CAUTION: Make sure to select "Next", confirm each setting value and press "OK" even if the indicated configuration of brand new A/C auto amp. is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model cannot be memorized.

5. When "Completed", select "End".

#### >> GO TO 4.

**4.**OPERATION CHECK

Confirm that each function controlled by A/C auto amp. operates normally.

А

E

Н

HAC

Κ

L

M

Ο

Ρ

### Configuration List

INFOID:000000010481955

#### **CAUTION:**

Thoroughly read and understand the vehicle specification. Incorrect settings may result in abnormal control of ECU.

MANUAL SETTING ITEM							
Items	Setting value						
HANDLE	$LHD \Leftrightarrow RHD$						

 $\Leftrightarrow:$  Items which confirm vehicle specifications

# DTC/CIRCUIT DIAGNOSIS U1000 CAN COMM CIRCUIT

### Description

INFOID:000000010481956

INFOID:000000010481957

CAN (Controller Area Network) is a serial communication system for real time application. It is an on-vehicle multiplex communication system with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto vehicles, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. Refer to LAN-30, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart".

### DTC Logic

#### DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause	
U1000	CAN COMM CIRCUIT	When A/C auto amp. is not transmitting or receiving CAN communication signal for 2 or more seconds.	CAN communication system	
TC CONF	IRMATION PROCEDURE			
1.PERFOR	M SELF-DIAGNOSIS			
2. Perform	SULT ition switch ON and wait for 2 sec "Self Diagnostic Result" of "HVA0 any DTC No. is displayed in the	<b>C</b> ".		ł
I <u>s DTC detec</u> YES >>	, , ,	cedure".		
Diagnosis	Procedure		INFOID:000000010481958	
1.снеск о	CAN COMMUNICATION SYSTEM	1		
Check CAN	communication system. Refer to	LAN-16, "Trouble Diagnosis Flow C	hart".	
>>	Inspection End.			

А

Е

#### < DTC/CIRCUIT DIAGNOSIS >

## U1010 CONTROL UNIT (CAN)

### Description

Initial diagnosis of A/C auto amp.

#### **DTC Logic**

INFOID:000000010481960

INFOID:000000010481959

### DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diag- nosis of CAN controller of A/C auto amp.	A/C auto amp.

#### DTC CONFIRMATION PROCEDURE

### **1.**PERFORM SELF-DIAGNOSIS

#### (B) With CONSULT

- T. Turn ignition switch ON.
- 2. Perform "Self Diagnostic Result" of "HVAC".
- 3. Check if any DTC No. is displayed in the self-diagnosis results.

#### Is DTC detected?

YES >> Refer to HAC-56, "Diagnosis Procedure".

NO >> Inspection End.

### Diagnosis Procedure

### **1.**REPLACE A/C AUTO AMP.

Replace A/C auto amp. Refer to HAC-102, "Removal and Installation".

>> Inspection End.

INFOID:000000010481961

### B2578, B2579 IN-VEHICLE SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

### B2578, B2579 IN-VEHICLE SENSOR

### **DTC Logic**

### DTC DETECTION LOGIC

#### NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to <u>HAC-</u> 55, "DTC Logic".
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to HAC-56, "DTC Logic".

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause	
B2578		The in-vehicle sensor recognition temperature is too high.	<ul><li>In-vehicle sensor</li><li>A/C auto amp.</li></ul>	
B2579	IN-VEHICLE SENSOR	The in-vehicle sensor recognition temperature is too low.	Harness or connectors     (The sensor circuit is open or short- ed.)	
	FIRMATION PROCED	URE		
1.PERFO	RM DTC CONFIRMATIO	N PROCEDURE		
With CO				
	nition switch ON. m "Self Diagnostic Result	" of "HVAC".		
3. Check	if any DTC No. is display	ed in the self-diagnosis results.		
<u>ls DTC det</u> YES >>	<u>ected?</u> > Refer to <u>HAC-57, "Diag</u> i	nosis Procedure"		
	<ul> <li>Inspection End.</li> </ul>	libsis i locedule.		
Diagnosi	s Procedure		INFOID:000000010481963	
Regarding	Wiring Diagram informati	on, refer to <u>HAC-34, "Wiring Diagram"</u> .		
0 0	0 0			
<b>1.</b> снеск	IN-VEHICLE SENSOR F	POWER SUPPLY		
	nition switch OFF.			
	nect in-vehicle sensor co Inition switch ON.	nnector.		
		le sensor harness connector and ground	J.	

In-vehic	+ le sensor	_	Voltage (Approx.)	Ν
Connector	Terminal		(())	
M34	1	Ground	5 V	0

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

# 2. CHECK IN-VEHICLE SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.

Check continuity between front in-vehicle sensor harness connector and ground. 2.

[AUTOMATIC AIR CONDITIONER]

INFOID:000000010481962

А

В

С

Ρ

### B2578, B2579 IN-VEHICLE SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

In-vehic	ehicle sensor		Continuity
Connector	Terminal	_	Continuity
M34	2	Ground	Yes

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK IN-VEHICLE SENSOR

Check in-vehicle sensor. Refer to HAC-58, "Component Inspection".

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".

NO >> Replace in-vehicle sensor. Refer to <u>HAC-104</u>, "Removal and Installation".

### **4.**CHECK IN-VEHCILE SENSOR POWER SUPPLY CIRCUIT FOR OPEN

- 1. Turn ignition switch OFF.
- 2. Disconnect A/C auto amp. connector.

3. Check continuity between in-vehicle sensor harness connector and A/C auto amp. harness connector.

In-vehicle sensor		A/C au	to amp.	Continuity
Connector	Terminal	Connector Terminal		Conundity
M34	1	M152	27	Yes

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair harness or connector.

#### 5.CHECK IN-VEHICLE SENSOR POWER SUPPLY CIRCUIT FOR GROUND SHORT

Check continuity between in-vehicle sensor harness connector and ground.

In-vehicle sensor			Continuity
Connector	Terminal		Continuity
M34	1	Ground	No

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

 $\mathbf{6}$ . CHECK IN-VEHICLE SENSOR POWER SUPPLY CIRCUIT FOR POWER SHORT

1. Turn ignition switch ON.

2. Check voltage between in-vehicle sensor harness connector and ground.

	+		
In-vehic	le sensor	-	Voltage (Approx.)
Connector	Terminal		
M34	1	Ground	0 V

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".
- NO >> Repair harness or connector.

### Component Inspection

### **1.**CHECK IN-VEHICLE SENSOR

1. Turn ignition switch OFF.

2. Disconnect in-vehicle sensor connector.

INFOID:000000010481964

### B2578, B2579 IN-VEHICLE SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

### [AUTOMATIC AIR CONDITIONER]

#### 3. Check resistance between in-vehicle sensor terminals.

Terminal		Condition	Desistances I/O	
		Temperature: °C (°F)	Resistance: kΩ	
		-15 (5)	12.73	
	-	-10 (14)	9.92	
	-	-5 (23)	7.80	
	-	0 (32)	6.19	
	-	5 (41)	4.95	
	-	10 (50)	3.99	
	2	15 (59)	3.24	
	-	20 (68)	2.65	
	-	25 (77)	2.19	
	-	30 (86)	1.81	
	-	35 (95)	1.51	
	-	40 (104)	1.27	
	-	45 (113)	1.07	

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace in-vehicle sensor. Refer to <u>HAC-104</u>, "Removal and Installation".

HAC

J

Κ

L

Μ

Ν

Ο

Ρ

Н

Revision: May 2014

### **B257B, B257C AMBIENT SENSOR**

#### < DTC/CIRCUIT DIAGNOSIS >

### B257B, B257C AMBIENT SENSOR

### DTC Logic

### DTC DETECTION LOGIC

#### NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to <u>HAC-55. "DTC Logic"</u>.
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to <u>HAC-56</u>, "<u>DTC Logic</u>".

	DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
	B257B	AMBIENT SENSOR	The ambient sensor recognition temperature is too high.	<ul><li>Ambient sensor</li><li>A/C auto amp.</li></ul>
_	B257C		The ambient sensor recognition temperature is too low.	<ul> <li>Harness or connectors (The sensor circuit is open or short- ed.)</li> </ul>

#### DTC CONFIRMATION PROCEDURE

#### **1.**PERFORM DTC CONFIRMATION PROCEDURE

#### ()With CONSULT

- 1. Turn ignition switch ON.
- 2. Perform "Self Diagnostic Result" of "HVAC".
- 3. Check if any DTC No. is displayed in the self-diagnosis results.

#### Is DTC detected?

- YES >> Refer to <u>HAC-60</u>, "Diagnosis Procedure".
- NO >> Inspection End.

#### **Diagnosis** Procedure

INFOID:000000010481966

Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".

### 1.CHECK AMBIENT SENSOR POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect ambient sensor connector.
- 3. Turn ignition switch ON.
- 4. Check voltage between ambient sensor harness connector and ground.

Ambier	+ nt sensor	_	Voltage (Approx.)
Connector	Terminal		(*******)
E211	1	Ground	5 V

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

# 2. CHECK AMBIENT SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.

2. Check continuity between ambient sensor harness connector and ground.

INFOID:000000010481965

### **B257B, B257C AMBIENT SENSOR**

#### < DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

Ambien	t sensor		
Connector	Terminal		Continuity
E211	2	Ground	Yes
s the inspection re YES >> GO TO NO >> Repai 3. CHECK AMBIE Check ambient se s the inspection re YES >> Repla NO >> Repla 4. CHECK AMBIE 1. Turn ignition s 2. Disconnect A/ 3. Check continu Ambien Connector E211 s the inspection re YES >> GO TO	esult normal? O 3. r harness or connection ENT SENSOR nsor. Refer to <u>HAO</u> esult normal? ce A/C auto amp. ce ambient sensor ENT SENSOR PO witch OFF. C auto amp.connection ity between ambient t sensor Terminal 1 esult normal?	ector. C-61, "Component Inspection". Refer to <u>HAC-102</u> , "Removal and r. Refer to <u>HAC-103</u> , "Removal and WER SUPPLY CIRCUIT FOR C ector. ent sensor harness connector and <u>A/C auto amp.</u> <u>Connector</u> Terminal <u>M152</u> 7	nd Installation". and Installation". OPEN nd A/C auto amp. harness connector.
D.CHECK AMBIE	ENT SENSOR PO	WER SUPPLY CIRCUIT FOR G	round.
Connector	Terminal	_	Continuity
E211	1	Ground	No
6.CHECK AMBIE 1. Turn ignition s 2. Check voltage	O 6. r harness or conne NT SENSOR PO <sup>y</sup> witch ON.	ector. WER SUPPLY CIRCUIT FOR P sensor harness connector and	
	t sensor	_	Voltage
Connector	Terminal		(Approx.)
E211	1	Ground	0 V
	ce A/C auto amp. r harness or conne	Refer to <u>HAC-102, "Removal a</u>	nd Installation".
<b>1.</b> CHECK AMBIE 1. Turn ignition s			
	nbient sensor con	nector.	
Revision: May 201	4	HAC-61	2015 Altima Sedan

### B257B, B257C AMBIENT SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

#### 3. Check resistance between ambient sensor terminals.

Tarma	inal	Condition	Desistance kū	
Terminal		Temperature: °C (°F)	Resistance: kΩ	
		-15 (5)	12.73	
		-10 (14)	9.92	
		-5 (23)	7.80	
		0 (32)	6.19	
1 2		5 (41)	4.95	
		10 (50)	3.99	
	2	15 (59)	3.24	
		20 (68)	2.65	
		25 (77)	2.19	
		30 (86)	1.81	
		35 (95)	1.51	
		40 (104)	1.27	
		45 (113)	1.07	

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace ambient sensor. Refer to <u>HAC-103. "Removal and Installation"</u>.

### B2581, B2582 INTAKE SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

### B2581, B2582 INTAKE SENSOR

### DTC Logic

### DTC DETECTION LOGIC

#### NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to <u>HAC-55. "DTC Logic"</u>.
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to <u>HAC-56, "DTC Logic"</u>.

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2581		The intake sensor recognition temperature is too high.	<ul><li>Intake sensor</li><li>A/C auto amp.</li></ul>
B2582	INTAKE SENSOR	The intake sensor recognition temperature is too low.	Harness or connectors     (The sensor circuit is open or short- ed.)
	IFIRMATION PROCED		
<b>1.</b> PERFO	RM DTC CONFIRMATIO	N PROCEDURE	
With CC I. Turn ic	NSULT gnition switch ON.		
2. Perfor	m "Self Diagnostic Result	" of "HVAC". ed in the self-diagnosis results.	
Is DTC det	ected?	-	
	> Refer to <u>HAC-63, "Diag</u> e > Inspection End.	nosis Procedure".	
-	is Procedure		INFOID:000000010481969
0			
Regarding	Wiring Diagram informati	on, refer to <u>HAC-34, "Wiring Diagram"</u> .	
-00	5 - 5	· , · · · · · <u>· · · · · · · · · · · · ·</u>	
1.снеск	INTAKE SENSOR POW	ER SUPPLY	
	nition switch OFF.		
	nnect intake sensor conne gnition switch ON.	ctor.	
		ensor harness connector and ground.	
	+		
	Intake sensor	4	Voltage

Intake sensor		_	Voltage (Approx.)	Ν
Connector	Terminal			
M69	1	Ground	5 V	

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2. CHECK INTAKE SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.

2. Check continuity between intake sensor harness connector and ground.

Ρ

В

INFOID:000000010481968

А

С

### B2581, B2582 INTAKE SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

Intake sensor			Continuity	
Connector	Terminal		Continuity	
M69	2	Ground	Yes	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

**3.**CHECK INTAKE SENSOR

Check intake sensor. Refer to HAC-64, "Component Inspection".

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".

NO >> Replace intake sensor. Refer to <u>HAC-106</u>, "Removal and Installation".

### **4.**CHECK INTAKE SENSOR POWER SUPPLY CIRCUIT FOR OPEN

1. Turn ignition switch OFF.

2. Disconnect A/C auto amp. connector.

3. Check continuity between intake sensor harness connector and A/C auto amp. harness connector.

Intake	Intake sensor		ito amp.	Continuity
Connector	Terminal	Connector Terminal		Continuity
M69	1	M152	28	Yes

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair harness or connector.

 ${f 5.}$ CHECK INTAKE SENSOR POWER SUPPLY CIRCUIT FOR GROUND SHORT

Check continuity between intake sensor harness connector and ground.

Intake sensor			Continuity
Connector	Terminal		Continuity
M69	1	Ground	No

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

 $\mathbf{6}$ .CHECK INTAKE SENSOR POWER SUPPLY CIRCUIT FOR POWER SHORT

1. Turn ignition switch ON.

2. Check voltage between intake sensor harness connector and ground.

+ Intake sensor			
		_	Voltage (Approx.)
Connector	Terminal		
M69	1	Ground	0 V

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".
- NO >> Repair harness or connector.

#### Component Inspection

**1.**CHECK INTAKE SENSOR

1. Turn ignition switch OFF.

2. Disconnect intake sensor connector.

INFOID:000000010481970

### B2581, B2582 INTAKE SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

### [AUTOMATIC AIR CONDITIONER]

#### 3. Check resistance between intake sensor terminals.

Terminal		Condition	Desistance ko	
		Temperature: °C (°F)	Resistance: $k\Omega$	
		-15 (5)	17.73	
	-	-10 (14)	13.46	
	-	-5 (23)	10.33	
		0 (32)	8.00	
		5 (41)	6.25	
	-	10 (50)	4.93	
	2	15 (59)	3.92	
	-	20 (68)	3.14	
		25 (77)	2.54	
	-	30 (86)	2.06	
	-	35 (95)	1.69	
	-	40 (104)	1.39	
	-	45 (113)	1.15	

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace intake sensor. Refer to <u>HAC-106. "Removal and Installation"</u>.

HAC

J

Κ

L

Μ

Ν

Ο

Ρ

Н

#### B2630, B2631 SUNLOAD SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

### B2630, B2631 SUNLOAD SENSOR

### DTC Logic

INFOID:000000010481971

[AUTOMATIC AIR CONDITIONER]

### DTC DETECTION LOGIC

#### NOTE:

- If DTC is displayed along with DTC U1000 or U1010, first diagnose the DTC U1000 or U1010. Refer to <u>HAC-55</u>, "DTC Logic" or <u>HAC-56</u>, "DTC Logic".
- Sunload sensor may register a malfunction when indoors, at dusk, or at other times when light is insufficient. When performing the diagnosis indoors, light the sunload sensor with a lamp (60W or more).

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
B2630	SUNLOAD SEN (SHORT)	Detected calorie at sunload sensor 1395 w/m <sup>2</sup> (1200 kcal/m <sup>2</sup> ·h) or more	<ul> <li>Sunload sensor</li> <li>A/C auto amp.</li> <li>Harness and connector</li> </ul>
B2631	SUNLOAD SEN (OPEN)	Detected calorie at sunload sensor 0 w/m <sup>2</sup> (0 kcal/m <sup>2</sup> ·h)	(Sunload sensor circuit is open, or there is a short in the circuit)

### DTC CONFIRMATION PROCEDURE

### **1.**CHECK WITH SELF-DIAGNOSIS FUNCTION OF CONSULT

#### With CONSULT

- 1. Turn ignition switch ON.
- 2. Perform "Self Diagnostic Result" of "HVAC".
- 3. Check if any DTC No. is displayed in the self-diagnosis results.

#### NOTE:

- If DTC is displayed along with DTC U1000 or U1010, first diagnose the DTC U1000 or U1010. Refer to <u>HAC-55</u>, "DTC Logic" or <u>HAC-56</u>, "DTC Logic".
- Sunload sensor may register a malfunction when indoors, at dusk, or at other times when light is insufficient. When performing the diagnosis indoors, light the sunload sensor with a lamp (60W or more).

#### Is DTC No."B2630" or "B2631" displayed?

- YES >> Perform trouble diagnosis for the sunload sensor. Refer to <u>HAC-66, "Diagnosis Procedure"</u>.
- NO >> Inspection End.

#### Diagnosis Procedure

INFOID:000000010481972

Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".

### 1.CHECK SUNLOAD SENSOR POWER SUPPLY

- 1. Disconnect sunload sensor connector.
- 2. Turn ignition switch ON.
- 3. Check voltage between sunload sensor harness connector M56 terminal 1 and ground.

Connector Terminal	Sunloa	+ ad sensor	_	Voltage (Approx.)
	Connector	Terminal		
M56 1 Ground 5 V	M56	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2.CHECK CONTINUITY BETWEEN SUNLOAD SENSOR AND A/C AUTO AMP.

1. Turn ignition switch OFF.

### B2630, B2631 SUNLOAD SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >


### [AUTOMATIC AIR CONDITIONER]

- 2.
- Disconnect A/C auto amp. connector. Check continuity between sunload sensor harness connector M56 terminal 2 and A/C auto amp. harness 3. А connector M152 terminal 26.

Sunload	sensor	A/C au	to amp.	Continuity
Connector	Terminal	Connector	Terminal	Continuity
M56	2	M152	26	Yes
CHECK SUNLO Reconnect sun Check sunload ne inspection res S >> Replac D >> Replac CHECK CONTIN Turn ignition sw Disconnect A/C	3. harness or connect AD SENSOR load sensor connect sensor. Refer to <u>h</u> sult normal? e A/C auto amp. R e sunload sensor. NUITY BETWEEN vitch OFF. c auto amp. conne	ector and A/C auto IAC-67, "Compor Refer to <u>HAC-102,</u> Refer to <u>HAC-109</u> SUNLOAD SENS	ent Inspection". "Removal and In: 5, "Removal and I SOR AND A/C AU	nstallation".
connector M15		A/C au	to amp.	
Connector	Terminal	Connector	Terminal	Continuity
M56	1 ty between sunloa	M152 d sensor harness	9	Yes rminal 1 and ground.
M56 Check continuit Sunload Connector M56 the inspection res ES >> Replac O >> Repair Omponent Ins	ty between sunloa sensor Terminal 1 sult normal? e A/C auto amp. F harness or connect pection	d sensor harness Gro Refer to <u>HAC-102</u> ,	9 connector M56 te	Continuity
M56 Check continuit Sunload = Connector M56 the inspection res ES >> Replac IO >> Repair Omponent Ins CHECK SUNLO Turn ignition sw	ty between sunloa sensor Terminal 1 sult normal? e A/C auto amp. F harness or connect pection AD SENSOR	d sensor harness Gro Refer to <u>HAC-102,</u> ctor.	9 connector M56 te	rminal 1 and ground. Continuity No stallation".
M56 Check continuit Sunload Connector M56 the inspection res ES >> Replac IO >> Repair Omponent Ins CHECK SUNLO Turn ignition sw Check voltage	ty between sunloa sensor Terminal 1 sult normal? e A/C auto amp. R harness or connect pection AD SENSOR vitch ON.	d sensor harness Gro Refer to <u>HAC-102,</u> ctor.	9 connector M56 te	rminal 1 and ground. Continuity No stallation".
M56 Check continuit Sunload = Connector M56 the inspection res ES >> Replac IO >> Repair Omponent Ins CHECK SUNLO Turn ignition sw Check voltage I	ty between sunloa sensor Terminal 1 sult normal? e A/C auto amp. R harness or connect pection AD SENSOR vitch ON. between A/C auto	d sensor harness Gro Refer to <u>HAC-102,</u> ctor.	9 connector M56 te 	rminal 1 and ground. Continuity No stallation".
M56 Check continuit Sunload = Connector M56 the inspection res ES >> Replac IO >> Repair Omponent Ins CHECK SUNLO Turn ignition sw Check voltage I	ty between sunloa sensor Terminal 1 sult normal? e A/C auto amp. F harness or connect pection AD SENSOR vitch ON. between A/C auto +)	d sensor harness Gro Refer to <u>HAC-102,</u> ctor.	9 connector M56 te 	rminal 1 and ground. Continuity No stallation".

### B2630, B2631 SUNLOAD SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

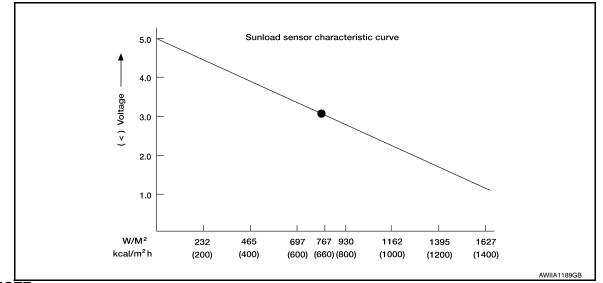

#### NOTE:

Select a place in direct sunlight when checking sunload sensor.

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace sunload sensor. Refer to <u>HAC-105, "Removal and Installation"</u>.

#### B2632, B2633 AIR MIX DOOR MOTOR (DRIVER SIDE) DIAGNOSIS > [AUTOMATIC AIR CONDITIONER]

### < DTC/CIRCUIT DIAGNOSIS >

# B2632, B2633 AIR MIX DOOR MOTOR (DRIVER SIDE)

## DTC Logic

INFOID:000000010481974

### DTC DETECTION LOGIC

AC

Κ

А

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause	
B2632		Air mix door motor LH PBR position 95% or more	Air mix door motor LH     (PBR internal circuit is open or short-	
B2633	DR AIR MIX DOOR MOT	Air mix door motor LH PBR position 5% or less	<ul> <li>ed)</li> <li>Air mix door motor LH installation condition</li> <li>A/C auto amp.</li> <li>Harness and connector (LIN communication line is open or shorted)</li> </ul>	
•	FIRMATION PROCEDUR			
2. Perform	nition switch ON. n "Self Diagnostic Result" of			
ls DTC dete	ected?	in the self-diagnosis results.		
	Refer to <u>HAC-69</u> , "Diagnos Inspection End.	<u>is Procedure</u> .		ŀ
Diagnosis	s Procedure		INFOID:000000010481975	
Regarding \	Wiring Diagram information,	refer to <u>HAC-34, "Wiring Diagram</u>	<u>"</u> .	

# $1. {\sf check} \text{ air mix door motor lh communication signal}$

1. Turn ignition switch ON.

 Check output waveform between air mix door motor LH harness connector and ground with the oscilloscope.

+				
Air mix door motor LH		_	Output waveform	
Connector	Terminal			
				Ν
M128	3	Ground		0
			SJIA1453J	Р

Is the inspection result normal?

YES	>> GO TO 2.
NO	>> GO TO 3.

**2.**CHECK INSTALLATION OF AIR MIX DOOR MOTOR LH

Check air mix door motor LH is properly installed. Refer to HAC-108, "Exploded View".

### B2632, B2633 AIR MIX DOOR MOTOR (DRIVER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> Replace air mix door motor LH. Refer to <u>HAC-109</u>, "<u>AIR MIX DOOR MOTOR</u> : <u>Removal and</u> <u>Installation - Air Mix Door Motor (LH)</u>".
- NO >> Repair or replace malfunctioning part.

# 3. CHECK AIR MIX DOOR MOTOR LH COMMUNICATION SIGNAL CIRCUIT

1. Turn ignition switch OFF.

- 2. Disconnect air mix door motor LH and A/C auto amp. connector.
- 3. Check continuity between air mix door motor LH harness connector and A/C auto amp. harness connector.

Air mix door motor LH		A/C auto amp.		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M128	3	M152	16	Yes	

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".
- NO >> Repair harness or connector.

### B2634, B2635 AIR MIX DOOR MOTOR (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

## B2634, B2635 AIR MIX DOOR MOTOR (PASSENGER SIDE)

### **DTC Logic**

INFOID:000000010481976

[AUTOMATIC AIR CONDITIONER]

### DTC DETECTION LOGIC

AC

Κ

А

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause	С
B2634		Air mix door motor RH PBR position 95% or more	Air mix door motor RH     (PBR internal circuit is open or short-	
B2635	PASS AIR MIX DOOR MOT	Air mix door motor RH PBR position 5% or less	<ul> <li>ed)</li> <li>Air mix door motor RH installation condition</li> <li>A/C auto amp.</li> <li>Harness and connector (LIN communication line is open or shorted)</li> </ul>	D
	FIRMATION PROCEDUR			F
I.PERFOR	RM DTC CONFIRMATION P	ROCEDURE		
	NSULT nition switch ON. n "Self Diagnostic Result" of	"HVAC".		G
3. Check i Is DTC dete	if any DTC No. is displayed i ected?	n the self-diagnosis results.		Н
	Refer to <u>HAC-71, "Diagnos</u> Inspection End.	s Procedure".		
Diagnosis	s Procedure		INFOID:000000010481977	HA
Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".				

# $1. {\sf check} \text{ air mix door motor Rh communication signal}$

1. Turn ignition switch ON.

 Check output waveform between front air mix door motor RH harness connector and ground with the oscilloscope.

+ Air mix door motor RH			Output waveform	
Connector	Terminal			
M129	3	Ground	(v) 15 10 5 <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b>10</b> <b></b>	N 0
			SJIA1453J	Ρ

Is the inspection result normal?

YES >> GO TO 2. NO >> GO TO 3.

**2.**CHECK INSTALLATION OF AIR MIX DOOR MOTOR RH

Check air mix door motor RH is properly installed. Refer to HAC-108, "Exploded View".

### B2634, B2635 AIR MIX DOOR MOTOR (PASSENGER SIDE)

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> Replace air mix door motor RH. Refer to <u>HAC-109</u>, "AIR MIX DOOR MOTOR : Removal and <u>Installation Air Mix Door Motor (RH)</u>".
- NO >> Repair or replace malfunctioning part.

# 3. CHECK AIR MIX DOOR MOTOR RH COMMUNICATION SIGNAL CIRCUIT

1. Turn ignition switch OFF.

- 2. Disconnect air mix door motor RH and A/C auto amp. connector.
- 3. Check continuity between air mix door motor RH harness connector and A/C auto amp. harness connector.

Air mix door motor RH		A/C auto amp.		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M129	3	M152	16	Yes	

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".
- NO >> Repair harness or connector.

#### B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR [AUTOMATIC AIR CONDITIONER] < DTC/CIRCUIT DIAGNOSIS >

### B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR

### **DTC Logic**

INFOID:000000010481978

### DTC DETECTION LOGIC

А

В

Н

L

Μ

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B2636	DR VENT DOOR FAIL	When the malfunctioning door position is detected at VENT position	
B2637	DR B/L DOOR FAIL	When the malfunctioning door position is detected at B/L position	Mode door motor     (PBR internal circuit is open or short-
B2638	DR D/F1 DOOR FAIL	When the malfunctioning door position is detected at FOOT position	ed) <ul> <li>Mode door motor control linkage in- stallation condition</li> </ul>
B2639	DR DEF DOOR FAIL	When the malfunctioning door position is detected at DEF position	<ul> <li>A/C auto amp.</li> <li>Harness and connector</li> </ul>
B2654	D/F2 VENT DOOR FAIL	When the malfunctioning door position is detected at D/F position	(LIN communication line is open or shorted)
B2655	B/L DOOR FAIL	When the malfunctioning door position is detected at B/L position	

### (P)With CONSULT

<ol> <li>Turn ignition switch ON.</li> <li>Perform "Self Diagnostic Result" of "HVAC".</li> <li>Check if any DTC No. is displayed in the self-diagnosis results.</li> </ol>	HAC
Is DTC detected?	
YES >> Refer to <u>HAC-73, "Diagnosis Procedure"</u> . NO >> Inspection End.	J
Diagnosis Procedure	K

Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".

### 1. CHECK MODE DOOR MOTOR COMMUNICATION SIGNAL

- 1. Turn ignition switch ON.
- Check output waveform between mode door motor harness connector and ground with the oscilloscope. 2.

	+			Ν	
Mode door motor		_	Output waveform		
Connector	Terminal			$\cap$	
M127	3	Ground	(v) 10 5 0 • • • 20 ms SJJA1453J	P	

Is the inspection result normal?

>> GO TO 2. YES

### B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

NO >> GO TO 3.

2. CHECK INSTALLATION OF MODE DOOR MOTOR

Check mode door motor is properly installed. Refer to HAC-108, "Exploded View".

#### Is the inspection result normal?

- YES >> Replace mode door motor. Refer to <u>HAC-109</u>, "<u>MODE DOOR MOTOR</u> : <u>Removal and Installa-</u> <u>tion</u>".
- NO >> Repair or replace malfunctioning part.

### **\mathbf{3}**. CHECK MODE DOOR MOTOR COMMUNICATION SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect mode door motor and A/C auto amp. connector.
- 3. Check continuity between mode door motor harness connector and A/C auto amp. harness connector.

Mode door motor		A/C auto amp.		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M127	3	M152	16	Yes	

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".

NO >> Repair harness or connector.

#### B263D, B263E, B263F INTAKE DOOR MOTOR NOSIS > [AUTOMATIC AIR CONDITIONER]

< DTC/CIRCUIT DIAGNOSIS >

## B263D, B263E, B263F INTAKE DOOR MOTOR

### DTC Logic

INFOID:000000010481980

А

Κ

L

Ρ

#### DTC DETECTION LOGIC В Items DTC DTC detection condition Possible cause (CONSULT screen terms) When the malfunctioning intake door B263D FRE DOOR FAIL · Intake door motor position is detected at FRE position (PBR internal circuit is open or short-When the malfunctioning intake door ed) D position is detected at 20% FRE posi-B263E 20P FRE DOOR FAIL • A/C auto amp. tion · Harness and connector (LIN communication line is open or When the malfunctioning intake door Ε B263F **REC DOOR FAIL** shorted) position is detected at REC position DTC CONFIRMATION PROCEDURE F 1.PERFORM DTC CONFIRMATION PROCEDURE (P)With CONSULT Turn ignition switch ON. 1. 2. Perform "Self Diagnostic Result" of "HVAC". 3. Check if any DTC No. is displayed in the self-diagnosis results. Is DTC detected? Н YES >> Refer to <u>HAC-75, "Diagnosis Procedure"</u>. NO >> Inspection End. Diagnosis Procedure HAC INFOID:000000010997295 Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".

### 1. CHECK INTAKE DOOR MOTOR COMMUNICATION SIGNAL

- 1. Turn ignition switch ON.
- 2. Check output waveform between intake door motor harness connector and ground with the oscilloscope.

	+ por motor	_	Output waveform	
Connector	Terminal			M
M126	3	Ground	(v) 15 10 5 0 • • 20 ms SJIA1453J	N

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

 $\mathbf{2}$ . CHECK INSTALLATION OF INTAKE DOOR MOTOR

Check intake door motor is properly installed. Refer to <u>HAC-108, "Exploded View"</u>. <u>Is the inspection result normal?</u>

### B263D, B263E, B263F INTAKE DOOR MOTOR

#### < DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

- YES >> Replace intake door motor. Refer to <u>HAC-109</u>, "INTAKE DOOR MOTOR : Removal and Installation".
- NO >> Repair or replace malfunctioning part.

3. check intake door motor communication signal circuit

- 1. Turn ignition switch OFF.
- 2. Disconnect intake door motor and A/C auto amp. connector.
- 3. Check continuity between intake door motor harness connector and A/C auto amp. harness connector.

Intake d	Intake door motor		ito amp.	Continuity
Connector	Terminal	Connector	Terminal	Continuity
M126	3	M152	16	Yes

#### Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".
- NO >> Repair harness or connector.

### B27B0 A/C AUTO AMP.

#### < DTC/CIRCUIT DIAGNOSIS >

### B27B0 A/C AUTO AMP.

### **DTC Logic**

### DTC DETECTION LOGIC

#### NOTE:

- If DTC is displayed along with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to HAC-55, "DTC Logic".
- If DTC is displayed along with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to HAC-56, "DTC Logic".

DTC	Items (CONSULT screen terms)	DTC detection condition	Possible cause
B27B0	A/C AUTO AMP.	A/C auto amp. EEPROM system is mal- functioning.	A/C auto amp.
DTC CONF	FIRMATION PROCEDURE		
1.PERFOR	RM DTC CONFIRMATION PROC	EDURE	
<ol> <li>Perform</li> <li>Check in</li> </ol>	nition switch ON. "Self Diagnostic Result" of "HVA f any DTC No. is displayed in the		
	<u>cted?</u> Refer to <u>HAC-77, "Diagnosis Pro</u> Inspection End.	cedure".	
Diagnosis	s Procedure		INFOID:000000010481983
1.PERFOR	RM SELF DIAGNOSTIC		
<ol> <li>Select "</li> <li>Touch "</li> </ol>	ISULT hition switch ON. Self Diagnostic Result" of "HVAC ERASE". hition switch OFF.	n	
6. Perform	cted again?	DURE". Refer to <u>HAC-77, "DTC Logic</u> HAC-102, "Removal and Installation"	_
	Inspection End.		

С

INFOID:000000010481982

А

Revision: May 2014

Ο

Ρ

< DTC/CIRCUIT DIAGNOSIS >

### [AUTOMATIC AIR CONDITIONER]

# POWER SUPPLY AND GROUND CIRCUIT A/C AUTO AMP.

A/C AUTO AMP. : Diagnosis Procedure

INFOID:000000010481984

Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".

### 1.CHECK FUSE

Check fuses [No. 14, 25 and 30, located in the fuse block (J/B)].

NOTE:

Refer to PG-66, "Terminal Arrangement".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit.

2.CHECK A/C AUTO AMP. POWER SUPPLY

#### 1. Turn ignition switch OFF.

2. Disconnect A/C auto amp. connector.

3. Check voltage between A/C auto amp. harness connector and ground.

+				Voltage	
A/C auto amp.		_	Ignition switch position		
Connector	Terminal		OFF	ACC	ON
	3	Ground	Battery voltage	Battery voltage	Battery voltage
M152	13		Approx. 0 V	Battery voltage	Battery voltage
WI152	23		Approx. 0 V	Approx. 0 V	Battery voltage
	40		Approx. 0 V	Approx. 0 V	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector between A/C auto amp. and fuse block (J/B).

### $\mathbf{3.}$ Check A/C auto AMP. GROUND CIRCUIT

1. Turn ignition switch OFF.

2. Check continuity between A/C auto amp. harness connector and ground.

A/C a	A/C auto amp.		Continuity
Connector	Terminal		Continuity
M152	2	Ground	Yes
WI IJZ	22	Cround	165

#### Is the inspection result normal?

YES >> Inspection End.

NO >> Repair harness or connector.

AIR MIX DOOR MOTOR (DRIVER SIDE)

### AIR MIX DOOR MOTOR (DRIVER SIDE) : Diagnosis Procedure

INFOID:000000010481985

Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".

#### < DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

	+ or motor LH	_		Voltage (Approx.)	
Connector	Terminal				
M128	1	Ground Battery voltage			
<ol> <li>Turn ignition s</li> <li>Disconnect air</li> </ol>	0 2. 0 4. X DOOR MOTOR witch OFF.	LH GROUND CIRC H connector. < door motor LH har		nd ground.	
<u> </u>					
Air mix doo Connector	or motor LH Terminal	_		Continuity	
M128	2	Grou	nd	Yes	
s the inspection re YES >> Repla Install NO >> Repai CHECK AIR MI 1. Turn ignition s 2. Disconnect air	esult normal? ce air mix door m ation - Air Mix Doo r or replace malfur X DOOR MOTOR witch OFF.	<u>r Motor (LH)"</u> . Ictioning part. LH POWER SUPPI H connector and A/0	<u>HAC-109, "AIR M</u> LY CIRCUIT C auto amp. conn	IIX DOOR MOTOR : Removal and	
Air mix doo	or motor LH	A/C auto	amp.	Continuity	
Connector	Terminal	Connector	Terminal	-	
M128	1	M152	17	Yes	
s the inspection re YES >> Repla		Refer to <u>HAC-102, "</u> ector	Removal and Ins	tallation".	

Regarding Wiring Diagram information, refer to <u>HAC-34, "Wiring Diagram"</u>.

### 1. CHECK AIR MIX DOOR MOTOR RH POWER SUPPLY

1. Turn	ignition	switch	ON.
---------	----------	--------	-----

#### < DTC/CIRCUIT DIAGNOSIS >

#### 2. Check voltage between air mix door motor RH harness connector and ground.

	+		Mellow e
Air mix doo	or motor RH	-	Voltage (Approx.)
Connector	Terminal		
M129	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

### 2. CHECK AIR MIX DOOR MOTOR RH GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect air mix door motor RH connector.
- 3. Check continuity between air mix door motor RH harness connector and ground.

Air mix doo	or motor RH		Continuity
Connector	Terminal		Continuity
M129	2	Ground	Yes

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

### **3.** CHECK INSTALLATION OF AIR MIX DOOR MOTOR RH

Check air mix door motor RH is properly installed. Refer to HAC-108, "Exploded View".

#### Is the inspection result normal?

- YES >> Replace air mix door motor RH. Refer to <u>HAC-109</u>, "AIR MIX DOOR MOTOR : Removal and <u>Installation Air Mix Door Motor (RH)</u>".
- NO >> Repair or replace malfunctioning part.

#### **4.**CHECK AIR MIX DOOR MOTOR RH POWER SUPPLY CIRCUIT

#### 1. Turn ignition switch OFF.

- 2. Disconnect air mix door motor RH connector and A/C auto amp. connector.
- Check continuity between air mix door motor RH harness connector and A/C auto amp. harness connector.

Air mix door motor RH		A/C auto amp.		Continuity
Connector	Terminal	Connector Terminal		Continuity
M129	1	M152	17	Yes

#### Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".

NO >> Repair harness or connector.

#### MODE DOOR MOTOR

### MODE DOOR MOTOR : Diagnosis Procedure

INFOID:000000010481987

Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".

#### **1.**CHECK MODE DOOR MOTOR POWER SUPPLY

- 1. Turn ignition switch ON.
- 2. Check voltage between mode door motor harness connector and ground.

#### < DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

-	+		
Mode door motor			Voltage
Connector	Terminal		(Approx.)
M127	1	Ground	Battery voltage
s the inspection re YES >> GO TO NO >> GO TO CHECK MODE	) 2. ) 4.	GROUND CIRCUIT	
	ode door motor co	nnector. door motor harness connector an	d ground.
Mode do	or motor		Continuity
Connector	Terminal		Continuity
M127	2	Ground	Yes
NO >> Repair CHECK MODE Turn ignition s Disconnect mo	ce mode door mo r or replace malfur DOOR MOTOR F witch OFF. ode door motor co	nctioning part. POWER SUPPLY CIRCUIT nnector and A/C auto amp. connector	OOR MOTOR : Removal and Installa- ctor. d A/C auto amp. harness connector.
Mode do	or motor	A/C auto amp.	
Connector	Terminal	Connector Terminal	
M127	1	M152 17	Yes
NO >> Repair NTAKE DOO NTAKE DOOF	ce A/C auto amp. r harness or conne R MOTOR R MOTOR : Di	Refer to <u>HAC-102, "Removal and ector.</u> agnosis Procedure on, refer to <u>HAC-34, "Wiring Diagra</u>	INFOID:000000010481988
<b>1.</b> CHECK INTAKI		IOTOR POWER SUPPLY	
		node door motor harness connecto	or and ground.

#### < DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

	+			
Intake mod	e door motor	-	Voltage (Approx.)	
Connector	Terminal			
M126	1	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

### $2. \mathsf{CHECK} \text{ intake mode door motor ground circuit}$

- 1. Turn ignition switch OFF.
- 2. Disconnect intake mode door motor connector.

3. Check continuity between intake mode door motor harness connector and ground.

Intake mode	e door motor		Continuity	
Connector	Terminal		Continuity	
M126	2	Ground	Yes	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

**3.** CHECK INSTALLATION OF INTAKE MODE DOOR MOTOR

Check intake mode door motor is properly installed. Refer to HAC-108, "Exploded View".

#### Is the inspection result normal?

- YES >> Replace intake mode door motor. Refer to <u>HAC-109</u>, "INTAKE DOOR MOTOR : Removal and <u>Installation"</u>.
- NO >> Repair or replace malfunctioning part.

#### **4.**CHECK INTAKE MODE DOOR MOTOR POWER SUPPLY CIRCUIT

#### 1. Turn ignition switch OFF.

- 2. Disconnect intake mode door motor connector and A/C auto amp. connector.
- Check continuity between intake mode door motor harness connector and A/C auto amp. harness connector.

Intake mode door motor		A/C auto amp.		Continuity
Connector	Terminal	Connector Terminal		Continuity
M126	1	M152	17	Yes

#### Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to <u>HAC-102, "Removal and Installation"</u>.

NO >> Repair harness or connector.

### A/C SWITCH ASSEMBLY

### A/C SWITCH ASSEMBLY : Component Function Check

INFOID:000000010481989

### **1.**CHECK OPERATION

- 1. Press the AUTO switch, and then check that "AUTO" is shown on the display.
- 2. Operate the temperature control switch (driver side). Check that the fan speed or outlet changes. (The discharge air temperature or fan speed varies depending on the ambient temperature, in-vehicle temperature, and temperature setting.)

#### Does it operate normally?

YES >> Inspection End.

NO >> Perform trouble diagnosis for the A/C switch assembly. Refer to <u>HAC-83, "A/C SWITCH ASSEM-</u> <u>BLY : Diagnosis Procedure"</u>.

#### POWER SUPPLY AND GROUND CIRCUIT [AUTOMATIC AIR CONDITIONER] < DTC/CIRCUIT DIAGNOSIS > A/C SWITCH ASSEMBLY : Diagnosis Procedure INFOID:000000010481990 А Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram". 1.CHECK A/C SWITCH ASSEMBLY POWER SUPPLY Disconnect the A/C switch assembly connector. 1. Turn ignition switch ON. 2. Check voltage between A/C switch assembly harness connector M79 terminal 12 and ground. 3. D (-) Voltage (+) A/C switch assembly Ignition switch position Ε Connector Terminal OFF ACC ON 12 M79 Ground Approx. 0V Approx. 0V Battery voltage Is the inspection result normal? F >> GO TO 3. YES NO >> GO TO 2. 2.CHECK FUSE Check 10A fuse [No.30, located in the fuse block (J/B)]. NOTE: Н Refer to PG-66, "Terminal Arrangement". Is the inspection result normal? YES >> Check harness for open circuit. Repair or replace if necessary. HAC NO >> Check harness for short circuit. Repair or replace if necessary. **3.**CHECK A/C SWITCH ASSEMBLY GROUND CIRCUIT 1. Turn ignition switch OFF. J 2. Check continuity between A/C switch assembly harness connector M79 terminal 1 and ground. A/C switch assembly Κ Continuity Connector Terminal M79 1 Ground Yes L Is the inspection result normal? YES >> Replace the A/C switch assembly. Refer to HAC-101, "Removal and Installation". NO >> Repair the harnesses or connectors. Μ Ν

)

Ρ

### < DTC/CIRCUIT DIAGNOSIS >

**Diagnosis** Procedure

INFOID:000000010997296

Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".

### **1.**CHECK FUSE

- 1. Turn ignition switch OFF.
- Check 15A fuses [Nos. 17 and 27, located in fuse block (J/B)]. NOTE: Refer to PG-66, "Terminal Arrangement".

Refer to <u>PG-66, Terminal Arrangemen</u>

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit.

2.CHECK BLOWER MOTOR POWER SUPPLY

1. Disconnect blower motor connector.

- 2. Turn ignition switch ON.
- 3. Check voltage between blower motor harness connector and ground.

	+		Voltage
Blowe	r motor	-	(Approx.)
Connector	Terminal		
M31	38	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 6.

### $\mathbf{3}$ .check blower motor ground circuit

1. Turn ignition switch OFF.

2. Check continuity between blower motor harness connector and ground.

Blowe	r motor		Continuity	
Connector	Terminal			
M31	39	Ground	Yes	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

**4.**CHECK BLOWER MOTOR CONTROL SIGNAL CIRCUIT

1. Disconnect A/C auto amp. connector.

2. Check continuity between blower motor harness connector and A/C auto amp. harness connector.

Blower motor		A/C auto amp.		Continuity
Connector	Terminal	Connector Terminal		Continuity
M31	17	M152	18	Yes

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harness or connector.

5.CHECK BLOWER MOTOR CONTROL SIGNAL

### **BLOWER MOTOR**

#### < DTC/CIRCUIT DIAGNOSIS >

А

В

Н


HAC

- 1. Reconnect blower motor connector and A/C auto amp. connector.
- 2. Turn ignition switch ON.
- 3. Operate MODE switch to set air outlet to VENT.
- 4. Change fan speed from Lo to Hi, and check duty ratios between blower motor harness connector and ground by using an oscilloscope.

### NOTE:

Calculate drive signal duty ratio as shown in the figure. T2 = Approx. 1.6 ms

Blowe	r motor	Condition	Duty ratio
Connector	Terminal	Fan speed (manual) VENT mode	(Approx.)
	17	1st	25 %
		2nd	33 %
		3rd	41 %
M31		4th	51 %
		5th	61 %
		6th	69 %
		7th	81 %

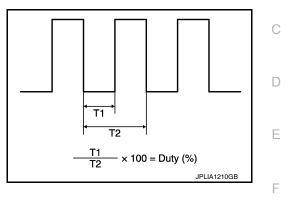

#### Is the inspection result normal?

- YES >> Replace blower motor. Refer to VTL-12, "BLOWER MOTOR : Removal and Installation".
- NO >> Replace A/C auto amp. Refer to <u>HAC-102. "Removal and Installation"</u>.

### **6.**CHECK BLOWER MOTOR RELAY GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Check continuity between fuse block (J/B) harness connector and ground.

Fuse bl	ock (J/B)		Continuity
Connector	Terminal	—	Continuity
M4	13R	Ground	Yes
Is the inspection res	sult normal?		
YES >> GO TO			
· ·	harness or connecto		
CHECK FRONT	BLOWER MOTOR	RELAY	
Check front blower	motor relay. Refer to	HAC-85. "Component Insp	ection (Front Blower Motor Relay)"
s the inspection res	sult normal?		
		or between blower motor and	d fuse block (J/B).
NO >> Replace	e front blower motor	relay.	
Component Ins	pection (Blower	Motor)	INFOID:000000010997297
<b>1</b> .CHECK BLOWE	R MOTOR		
	voltage to terminal		
-	d to terminal 2 of blo	wer motor.	
Does the blower far			
		to <u>GI-44, "Intermittent Incide</u>	
			TOR : Removal and Installation".
Component Ins	pection (Front E	Blower Motor Relay)	INFOID:000000010997298
<b>1.</b> CHECK BLOWE	R RELAY		
1. Turn ignition sw			
<ol><li>Remove front b</li></ol>	lower motor relay.		

### **BLOWER MOTOR**

#### < DTC/CIRCUIT DIAGNOSIS >


Check continuity between front blower motor relay terminals 3 and 5 when voltage is supplied between terminals 1 and 2. 3.

Term	Terminals		Continuity
3	5	ON	Yes
5		OFF	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace front blower motor relay.

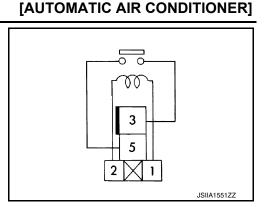

### **MAGNET CLUTCH**

	AGNOSIS >		[A]	JTOMATIC AIR CONDITIONER]
MAGNET CLU	ITCH			
Component Fun	ction Check			INFOID:000000010481994
1.CHECK MAGNET	I CLUTCH OPER	ATION		
Perform auto active t			"Diagnosis Descript	tion".
Does it operate norm		<u> </u>		
YES >> Inspection				
	HAC-87, "Diagno	sis Procedure".		
Diagnosis Proce	dure			INFOID:000000010481995
Regarding Wiring Dia	agram informatior	n, refer to <u>HAC-34</u>	4. "Wiring Diagram"	
<b>1.</b> CHECK FUSE				
NOTE:	tch OFF. (No. 53, located i "Fuse, Connector		rangement"	
s the inspection rest			rangement.	
YES >> GO TO 2	2.			
•	the blown fuse at			
2.CHECK MAGNET	F CLUTCH POWE	ER SUPPLY CIRC	CUIT	
	pressor connector	r and IPDM E/R o	connector	
2 Check continuity	i hetween compre			R harness connector
2. Check continuity	/ between compre			/R harness connector.
2. Check continuity Compres	-		nnector and IPDM E	
-	-	essor harness cor	nnector and IPDM E	/R harness connector. Continuity
Compres Connector F3	ssor Terminal	essor harness cor	nector and IPDM E	
Compres Connector F3 Is the inspection rest	Terminal 1 ult normal?	essor harness cor IPDN Connector	1 E/R Terminal	Continuity
Compres Connector F3 Is the inspection resu YES >> GO TO 3	Terminal 1 ult normal? 3.	essor harness cor IPDN Connector F83	1 E/R Terminal	Continuity
Compres Connector F3 s the inspection resu YES >> GO TO 3 NO >> Repair h	Terminal 1 <u>ult normal?</u> 3. arness or connec	essor harness cor IPDM Connector F83	1 E/R Terminal	Continuity
Compres Connector F3 s the inspection resu YES >> GO TO 3 NO >> Repair h 3.CHECK MAGNET	Terminal 1 <u>ult normal?</u> 3. harness or connec F CLUTCH GROU	essor harness cor IPDM Connector F83 tor. IND CIRCUIT	1 E/R Terminal	Continuity
Compres Connector F3 s the inspection resu YES >> GO TO 3 NO >> Repair h 3.CHECK MAGNET 1. Disconnect com	Terminal 1 <u>ult normal?</u> 3. arness or connec T CLUTCH GROU pressor connector	essor harness cor IPDM Connector F83 tor. IND CIRCUIT r.	1 E/R Terminal	Continuity Yes
Compres Connector F3 S the inspection results YES >> GO TO C NO >> Repair h 3.CHECK MAGNET 1. Disconnect com 2. Check continuity	Terminal 1 <u>ult normal?</u> 3. arness or connec T CLUTCH GROU pressor connector	essor harness cor IPDM Connector F83 tor. IND CIRCUIT r.	nnector and IPDM E	Continuity Yes
Compres Connector F3 S the inspection results YES >> GO TO C NO >> Repair h 3.CHECK MAGNET 1. Disconnect com 2. Check continuity	Terminal 1 <u>ult normal?</u> 3. arness or connect F CLUTCH GROU pressor connector between compre	essor harness cor IPDM Connector F83 tor. IND CIRCUIT r.	nnector and IPDM E	Continuity Yes
Compres Connector F3 Sthe inspection resurves YES >> GO TO C NO >> Repair h Connect comp Connect comp Connector F3	Terminal 1 Ult normal? 3. arness or connector pressor connector between compre	essor harness cor IPDM Connector F83 etor. IND CIRCUIT r. essor harness cor	nnector and IPDM E	Continuity Yes
Compres Connector F3 s the inspection resu YES >> GO TO 3 NO >> Repair h 3.CHECK MAGNET 1. Disconnect com 2. Check continuity Connector F3 s the inspection resu	ssor       Terminal         1       1         ult normal?       3.         aarness or connector       CLUTCH GROU         pressor connector       between compressor         npressor       Terminal         2       2         ult normal?       2	essor harness cor IPDM Connector F83 etor. IND CIRCUIT r. essor harness cor	nnector and IPDM E	Continuity Yes Continuity
Compres Connector F3 s the inspection resu YES >> GO TO 3 NO >> Repair h 3.CHECK MAGNET 1. Disconnect com 2. Check continuity Com Connector F3 s the inspection resu YES >> GO TO 4	ssor Terminal 1 ult normal? 3. arness or connector CLUTCH GROU pressor connector between compresent pressor Terminal 2 ult normal? 4.	essor harness cor IPDM Connector F83 etor. IND CIRCUIT r. essor harness cor Gro	nnector and IPDM E	Continuity Yes Continuity
Compres Connector F3 s the inspection resu YES >> GO TO 3 NO >> Repair h 3.CHECK MAGNET 1. Disconnect com 2. Check continuity Com Connector F3 s the inspection resu YES >> GO TO 4	Terminal 1 Ult normal? 3. arness or connector pressor connector between compre  npressor 2 Ult normal? 4. arness or connector 4.	essor harness cor IPDM Connector F83 etor. IND CIRCUIT r. essor harness cor Gro	nnector and IPDM E	Continuity Yes Continuity
Compres Connector F3 Sthe inspection resurves YES >> GO TO 3 NO >> Repair h CONNECT Disconnect comp Connector F3 Sthe inspection resurves YES >> GO TO 4 NO >> Repair h CONNECTOR State inspection resurves YES >> GO TO 4 NO >> Repair h CONNECTOR CO	Terminal 1 Ult normal? 3. arness or connector pressor connector between compre  npressor 2 Ult normal? 4. arness or connect F CLUTCH	essor harness cor IPDM Connector F83 etor. JND CIRCUIT r. essor harness cor Gro etor.	nnector and IPDM E	Continuity Yes Continuity Yes
Compress Connector F3 s the inspection result YES >> GO TO 3 NO >> Repair h 3.CHECK MAGNET 1. Disconnect complete 2. Check continuity Connector F3 s the inspection result YES >> GO TO 4 NO >> Repair h 4.CHECK MAGNET Directly apply battery	ssor       Terminal         1       1         ult normal?       3.         arness or connector       FCLUTCH GROU         pressor connector       between compressor         npressor       Terminal         2       ult normal?         4.       arness or connector         1       CLUTCH         1       2     <	essor harness cor IPDM Connector F83 etor. JND CIRCUIT r. essor harness cor Gro etor.	nnector and IPDM E	Continuity Yes Continuity Yes
Compres Connector F3 S the inspection resurvers YES >> GO TO C NO >> Repair h CONNECK MAGNET Disconnect comp Connector F3 S the inspection resurvers YES >> GO TO C NO >> Repair h CONNECTOR CONNEC	ssor       Terminal         1       1         ult normal?       3.         parness or connect       F         CLUTCH GROU       pressor connector         pressor connector       between compressor         npressor       Terminal         2       ult normal?         4.       arness or connector         pressor       CLUTCH         y ooltage to the mailly?       PDM E/R. Refer	essor harness cor IPDM Connector F83 etor. IND CIRCUIT r. essor harness cor Gro etor. agnet clutch. Che to <u>PCS-32, "Rer</u>	nnector and IPDM E	Continuity Yes Continuity Yes

< DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

### A/C SWITCH ASSEMBLY SIGNAL CIRCUIT

Diagnosis Procedure

INFOID:000000010481996

Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram".

### **1.**CHECK WITH SELF-DIAGNOSIS FUNCTION OF CONSULT

1. Using CONSULT, perform "Self Diagnostic Result" of "HVAC".

2. Check if any DTC No. is displayed in the self-diagnosis results.

#### NOTE:

If DTC is displayed along with DTC U1000 or U1010, first diagnose the DTC U1000 or U1010. Refer to <u>HAC-55. "DTC Logic"</u> or <u>HAC-56. "DTC Logic"</u>.

Is any DTC No. displayed?

YES >> Perform diagnosis for the applicable DTC. Refer to <u>HAC-31, "DTC Index"</u>. NO >> GO TO 2.

NO >> GO TO 2.

2. CHECK TX (A/C SWITCH ASSEMBLY  $\rightarrow$  A/C AUTO AMP.) CIRCUIT CONTINUITY

1. Turn ignition switch OFF.

2. Disconnect the A/C switch assembly and the A/C auto amp. connectors.

3. Check continuity between A/C switch assembly harness connector M79 terminal 10 and A/C auto amp. harness connector M152 terminal 24.

A/C switch assembly		A/C auto amp.		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M79	10	M152	24	Yes	

4. Check continuity between A/C switch assembly harness connector M79 terminal 10 and ground.

A/C switc	n assembly		Continuity	
Connector	Terminal		Continuity	
M79	10	Ground	No	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK RX (A/C AUTO AMP. ightarrow A/C SWITCH ASSEMBLY) CIRCUIT CONTINUITY

# 1. Check continuity between A/C switch assembly harness connector M79 terminal 9 and A/C auto amp. harness connector M152 terminal 4.

A/C switch assembly		A/C auto amp.		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M79	9	M152	4	Yes	

2. Check continuity between A/C switch assembly harness connector M79 terminal 9 and ground.

A/C switcl	h assembly		Continuity	
Connector	Terminal		Continuity	
M79	9	Ground	No	

Is the inspection result normal?

YES >> Perform trouble diagnosis for the A/C switch assembly. Refer to <u>HAC-83, "A/C SWITCH ASSEM-BLY : Diagnosis Procedure"</u>.

NO >> Repair harness or connector.

### DOOR MOTOR

### [AUTOMATIC AIR CONDITIONER]

DOOR MOTOR А Diagnosis Procedure INFOID:000000010481997 Regarding Wiring Diagram information, refer to HAC-34, "Wiring Diagram". 1. CHECK EACH DOOR MOTOR POWER SUPPLY Turn ignition switch ON. 2. Check voltage between intake door motor harness connector and ground. D + Voltage Ε Intake door motor (Approx.) Connector Terminal M126 1 Ground Battery voltage Is the inspection result normal? YES >> GO TO 2. NO >> GO TO 3. 2. CHECK EACH DOOR MOTOR GROUND CIRCUIT 1. Turn ignition switch OFF. Н 2. Disconnect intake door motor connector. Check continuity between intake door motor harness connector and ground. 3. HAC Intake door motor Continuity Connector Terminal M126 2 Ground Yes Is the inspection result normal? YES >> Inspection End. NO >> Repair harness or connector. Κ  ${\it 3.}$  check each door motor power supply circuit for open 1. Disconnect A/C auto amp. connector. L Check continuity between intake door motor harness connector and A/C auto amp. harness connector. 2. A/C auto amp. Intake door motor Μ Continuity Connector Terminal Connector Terminal M126 1 M152 17 Yes Is the inspection result normal? Ν YES >> GO TO 4. NO >> Repair harness or connector.  ${f 4}$  . CHECK EACH DOOR MOTOR POWER SUPPLY CIRCUIT FOR SHORT 1. Disconnect following connectors. Air mix door motor LH Air mix door motor RH Mode door motor 2. Check continuity between intake door motor harness connector and ground. Intake door motor Continuity Connector Terminal

M126

1

< DTC/CIRCUIT DIAGNOSIS >

Ground

No

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".
- NO >> Repair harness or connector.

### DOOR MOTOR COMMUNICATION CIRCUIT

#### < DTC/CIRCUIT DIAGNOSIS >

## DOOR MOTOR COMMUNICATION CIRCUIT

#### Diagnosis Procedure

Regarding Wiring Diagram information, refer to <u>HAC-34, "Wiring Diagram"</u>.

#### NOTE:

If all door motor DTCs are detected, check this circuit.

1. CHECK EACH DOOR MOTOR COMMUNICATION SIGNAL

- 1. Turn ignition switch ON.
- 2. Check output waveform between A/C auto amp. harness connector and ground with the oscilloscope.

	+ ito amp.	_	Output waveform	
Connector	Terminal			F
M152	16	Ground	(v) 15 10 5 0 • • 20 ms SJIA1453J	G H

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

### 2. CHECK EACH DOOR MOTOR COMMUNICATION SIGNAL CIRCUIT FOR OPEN

- 1. Turn ignition switch OFF.
- 2. Disconnect A/C auto amp. connector and intake door motor connector.
- 3. Check continuity between A/C auto amp. harness connector and intake door motor harness connector.

A/C auto amp.		Intake door motor			
Connector	Terminal	Connector	Terminal	Continuity	
M152	16	M126	3	Yes	
the inspection resu	ult normal?	L L			
ES >> Inspection	on End.				
	arness or conne	ector.			
CHECK EACH D	OOR MOTOR C	OMMUNICATION	SIGNAL CIRCUIT FO	R SHORT	
Disconnect follow		<i>.</i>			
Air mix door mot					
Mode door moto					
Chook continuity	hotwoon A/C o	uto amp harnoss c	connector and ground		

A/C au	to amp.		Continuity	
Connector	Terminal		Continuity	
M152	16	Ground	No	

Is the inspection result normal?

YES >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".

NO >> Repair harness or connector.

### HAC-91

INFOID:0000000010997299

А

В

D

HAC

Κ

### ECV (ELECTRICAL CONTROL VALVE)

#### < DTC/CIRCUIT DIAGNOSIS >

### ECV (ELECTRICAL CONTROL VALVE)

### **Diagnosis** Procedure

1.CHECK ECV (ELECTRICAL CONTROL VALVE) POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect compressor connector.
- 3. Turn ignition switch ON.
- 4. Check voltage between compressor harness connector and ground.

	+		
Comp	pressor	-	Voltage
Connector	Terminal		
F88	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 2.

### 2.CHECK FUSE

1. Turn ignition switch OFF.

2. Check 10 A fuse [No. 30, located in fuse block (J/B)]. Refer to PG-66, "Terminal Arrangement"

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the blown fuse after repairing the affected circuit.

**3**.CHECK ECV POWER SUPPLY CIRCUIT FOR OPEN

1. Disconnect fuse block (J/B) connector.

2. Check continuity between compressor harness connector and fuse block (J/B) harness connector.

Comp	Compressor		ock (J/B)	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F88	4	E6	1M	Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

**4.**CHECK ECV POWER SUPPLY CIRCUIT FOR SHORT

1. Disconnect A/C auto amp. connector and A/C switch assembly connector.

2. Check continuity between compressor harness connector and ground.

Comp	pressor		Continuity
Connector	Terminal		Continuity
F88	4	Ground	No

#### Is the inspection result normal?

YES >> Check ignition power supply circuit. Refer to <u>PG-26</u>, "Wiring Diagram — Ignition Power Supply —

NO >> Repair harness or connector.

### 5.check ECV control signal circuit for open

1. Turn ignition switch OFF.

2. Disconnect A/C auto amp. connector.

3. Check continuity between compressor harness connector and A/C auto amp. harness connector.

INFOID:000000010481999

### ECV (ELECTRICAL CONTROL VALVE)

#### < DTC/CIRCUIT DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

Compressor		A/C a	A/C auto amp.		Continuity	
Connector	Terminal	Connector	Termir		Continuity	
F88	3	M152	40		Yes	
s the inspection re	sult normal?		1			
YES >> GO TO	-					
NO >> Repair	harness or conn	ector.				
$\mathbf{S}$ . CHECK ECV C	ONTROL SIGNA	L CIRCUIT FOR S	SHORT			
Check continuity be	etween compress	or harness conne	ector and gro	und.		
-			-			
C	ompressor			0	·	
Connector	Termina	al	—		linuity	
F88	3	G	round	١	10	
s the inspection re	sult normal?	l				
YES >> GO TO	) 7.					
	harness or conn	ector.				
CHECK ECV						
Check ECV. Refer	to HAC-93, "Con	ponent Inspection	n".			
s the inspection re			_			
YES >> GO TO	) 8.					
			OMPRESSO	R : Removal and Inst	allation".	
$\mathbf{B}$ . CHECK INTERI	MITTENT INCIDE	ENT				
Refer to <u>GI-44, "Int</u>	ermittent Inciden	<u>t"</u> .			_	
s the inspection re	sult normal?					
		Refer to HAC-10	<u>2, "Removal</u>	and Installation".		
NO >> Repair	or replace malfu	nctioning parts.				
Component Ins	spection				INFOID:000000010482000	
1						
CHECK ECV (E		NTROL VALVE)				
1. Turn ignition s		<b>4</b>				
	mpressor connec	tor. pressor connector	E88 termina	le		
	ity between comp			13.		
		Condition				
Terminals		Temperature: °C	(°F)	— Resistance (kΩ)		
3	4	20 (68)	( ) 	10 '	I – 11.1	
s the inspection re	-	20 (00)		10.	· · · · · ·	
YES >> Inspect						
•		efer to HA-30. "C	OMPRESSO	R : Removal and Inst	allation".	
- 1						

Ρ

## HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS

#### < SYMPTOM DIAGNOSIS >

[AUTOMATIC AIR CONDITIONER]

## SYMPTOM DIAGNOSIS HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS

### **Diagnosis Chart By Symptom**

INFOID:000000010482001

#### NOTE:

Perform the self-diagnoses with CONSULT before performing the symptom diagnosis. If DTC is detected, perform the corresponding diagnosis.

Symptom	Corresponding malfunction part	Reference
<ul> <li>Air conditioning does not activate.</li> <li>Air conditioning cannot be controlled.</li> <li>Operation status of air conditioning is not indicated on display.</li> </ul>	<ul> <li>A/C auto amp. ignition power supply circuit</li> <li>Front A/C control (A/C auto amp.)</li> </ul>	HAC-78, "A/C AUTO AMP. : Diag- nosis Procedure"
<ul> <li>Air outlet does not change.</li> <li>Mode door motor does not operate normally.</li> </ul>	<ul> <li>Circuit between mode door motor and A/C auto amp.</li> <li>Mode door motor control linkage</li> <li>Mode door motor</li> <li>A/C auto amp.</li> </ul>	HAC-80, "MODE DOOR MOTOR : Diagnosis Procedure"
<ul> <li>Discharge air temperature of driver side does not change.</li> <li>Air mix door motor LH does not operate normally.</li> </ul>	<ul> <li>Circuit between air mix door motor LH and A/C auto amp.</li> <li>Air mix door motor LH installation condition</li> <li>Air mix door motor LH</li> <li>A/C auto amp.</li> </ul>	HAC-78, "AIR MIX DOOR MOTOR (DRIVER SIDE) : Diagnosis Proce- dure"
<ul> <li>Discharge air temperature of passenger side does not change.</li> <li>Air mix door motor RH does not operate normally.</li> </ul>	<ul> <li>Circuit between air mix door motor RH and A/C auto amp.</li> <li>Air mix door motor RH installation condition</li> <li>Air mix door motor RH</li> <li>A/C auto amp.</li> </ul>	HAC-79, "AIR MIX DOOR MOTOR (PASSENGER SIDE) : Diagnosis Procedure"
<ul> <li>Intake door does not change.</li> <li>Intake door motor does not operate normally.</li> </ul>	<ul> <li>Circuit between intake door motor and A/C auto amp.</li> <li>Intake door motor control linkage</li> <li>Intake door motor</li> <li>A/C auto amp.</li> </ul>	HAC-81, "INTAKE DOOR MOTOR : Diagnosis Procedure"
All door motors do not operate normally.	<ul> <li>Each door motor power supply and ground circuit</li> <li>A/C auto amp.</li> </ul>	HAC-91, "Diagnosis Procedure"
Blower motor operation is malfunctioning.	<ul> <li>Power supply system of front blower motor</li> <li>Circuit between front blower motor and A/C auto amp.</li> <li>Front blower motor</li> <li>A/C auto amp.</li> </ul>	HAC-84, "Diagnosis Procedure"
Compressor does not operate.	<ul> <li>Circuit between magnet clutch and IPDM E/R</li> <li>Magnet clutch</li> <li>IPDM E/R (A/C relay)</li> <li>Circuit between ECM and refriger- ant pressure sensor</li> <li>Refrigerant pressure sensor</li> <li>CAN communication circuit</li> <li>A/C auto amp.</li> </ul>	HAC-99, "Diagnosis Procedure"

### HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS

#### < SYMPTOM DIAGNOSIS >

### [AUTOMATIC AIR CONDITIONER]

Symptom		Corresponding malfunction part	Reference
<ul> <li>Insufficient cooling.</li> <li>No cool air comes out. (Air flow volume is normal.)</li> </ul>		<ul> <li>Magnet clutch control system</li> <li>Drive belt slipping</li> <li>Refrigerant cycle</li> <li>ECV (electrical control valve)</li> <li>Air leakage from each duct</li> <li>A/C auto amp. connection recognition signal circuit</li> <li>Temperature setting trimmer (front)</li> </ul>	HAC-96, "Diagnosis Procedure"
<ul> <li>Insufficient heating.</li> <li>No warm air comes out. (Air flow volume is normal.)</li> </ul>		<ul> <li>Engine cooling system</li> <li>Heater hose</li> <li>Heater core</li> <li>Air leakage from each duct</li> <li>Temperature setting trimmer (front)</li> </ul>	HAC-98, "Diagnosis Procedure"
Noise is heard when front air conditioning system op- erates.	During compressor operation	Refrigerant cycle	HA-18, "Symptom Table"
	During front blower motor operation	<ul> <li>Mixing any foreign object in front blower motor</li> <li>Front blower motor fan breakage</li> <li>Front blower motor rotation inferiori- ty</li> </ul>	HAC-85, "Component Inspection (Blower Motor)"
<ul> <li>Memory function does not operate.</li> <li>Setting temperature is not memorized.</li> </ul>		<ul> <li>Battery power supply system of A/C auto amp.</li> <li>A/C auto amp.</li> </ul>	HAC-78, "A/C AUTO AMP. : Diag- nosis Procedure"

Н



J

Κ

L

Μ

Ν

Ο

Ρ

### **INSUFFICIENT COOLING**

### Description

Symptom

- Insufficient cooling
- No cool air comes out. (Air flow volume is normal.)

### **Diagnosis** Procedure

INFOID:000000010482003

#### NOTE:

Perform self-diagnoses with CONSULT before performing symptom diagnosis. If any DTC is detected, perform the corresponding diagnosis.

**1**.CHECK MAGNET CLUTCH OPERATION

- 1. Turn ignition switch ON.
- 2. Operate fan switch.
- 3. Press A/C switch.
- 4. Check that A/C indicator turns ON. Check visually and by sound that compressor operates.
- 5. Press A/C switch again.
- 6. Check that A/C indicator turns OFF. Check that compressor stops.
- Is the inspection result normal?
- YES >> GO TO 2.
- NO >> Perform diagnosis of "COMPRESSOR DOES NOT OPERATE" in "SYMPTOM DIAGNOSIS". Refer to <u>HAC-99, "Diagnosis Procedure"</u>.

### 2. CHECK DRIVE BELT

Check tension of drive belt. Refer to <u>EM-19, "Checking Drive Belts"</u> (QR25DE) or <u>EM-135, "Checking Drive</u> <u>Belt"</u> (VQ35DE).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Adjust or replace drive belt depending on the inspection results.

**3.**CHECK REFRIGERANT CYCLE

Connect recovery/recycling recharging equipment to the vehicle and perform pressure inspection with gauge. Refer to <u>HA-18. "Symptom Table"</u>.

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace parts depending on the inspection results.

**4.**CHECK AIR LEAKAGE FROM EACH DUCT

Check duct and nozzle, etc. of the front air conditioning system for leakage.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace parts depending on the inspection results.

**5.**CHECK AMBIENT TEMPERATURE DISPLAY

Check that there is not much difference between actual ambient temperature and indicated temperature on information display in combination meter.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Perform diagnosis for the A/C auto amp. connection recognition signal circuit. Refer to <u>HAC-60.</u> <u>"Diagnosis Procedure"</u>.

**6.**CHECK SETTING OF TEMPERATURE SETTING TRIMMER (FRONT)

- Check setting value of temperature setting trimmer (front). Refer to <u>HAC-50, "Temperature Setting Trim-</u> mer".
- 2. Check that temperature setting trimmer (front) is set to "+ direction".

### HAC-96

INFOID:000000010482002

### **INSUFFICIENT COOLING**

### < SYMPTOM DIAGNOSIS >

### [AUTOMATIC AIR CONDITIONER]

NOTE: The control temperatu	ire can be set with the setting	of the temperature setting t	rimmer (front).
3. Set difference betwee <u>Is inspection result norma</u>	n set temperature and contro		
YES >> Inspection En		"Removal and Installation".	В
			С
			D
			E
			F
			G
			Н
			HAC
			J

Κ

L

Μ

0

Р

#### < SYMPTOM DIAGNOSIS >

### **INSUFFICIENT HEATING**

### Description

Symptom

- Insufficient heating
- No warm air comes out. (Air flow volume is normal.)

### **Diagnosis** Procedure

NOTE:

Perform self-diagnosis with CONSULT before performing symptom diagnosis. If DTC is detected, perform the corresponding diagnosis.

**1.**CHECK COOLING SYSTEM

- Check engine coolant level and check leakage. Refer to <u>CO-9</u>, "System Inspection" (QR25DE) or <u>CO-34</u>, "System Inspection" (VQ35DE).
- Check reservoir tank cap. Refer to <u>CO-9</u>, "System Inspection" (QR25DE) or <u>CO-34</u>, "System Inspection" (VQ35DE).
- Check water flow sounds of the engine coolant. Refer to <u>CO-9</u>, "System Inspection" (QR25DE) or <u>CO-34</u>, "System Inspection" (VQ35DE).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refill engine coolant and repair or replace parts depending on the inspection results.

2. CHECK HEATER HOSE

Check installation of heater hose visually or by touching.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace parts depending on the inspection results.

### 3.CHECK HEATER CORE

- 1. Check temperature of inlet hose and outlet hose of front heater core.
- 2. Check that inlet side of heater core is hot and the outlet side is slightly lower than/almost equal to the inlet side.

#### CAUTION:

Always perform the temperature inspection in a short period of time because the engine coolant temperature is very hot.

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Replace heater core. Refer to <u>HA-40. "HEATER CORE : Removal and Installation"</u>.

**4.**CHECK AIR LEAKAGE FROM EACH DUCT

Check duct and nozzle, etc. of front air conditioning system for air leakage.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace parts depending on the inspection results.

### **5.**CHECK SETTING OF TEMPERATURE SETTING TRIMMER (FRONT)

- Check setting value of temperature setting trimmer (front). Refer to <u>HAC-50, "Temperature Setting Trim-</u> mer".
- Check that temperature setting trimmer (front) is set to "- direction". NOTE:
  - The control temperature can be set by the temperature setting trimmer (front).

3. Set difference between the set temperature and control temperature to  $\hat{0}$ .

### Are the symptoms solved?

- YES >> Inspection End.
- NO >> Replace A/C auto amp. Refer to <u>HAC-102</u>, "Removal and Installation".

### **HAC-98**

INFOID:000000010482004

INFOID-000000010482005

**COMPRESSOR DOES NOT OPERATE** 

## < SYMPTOM DIAGNOSIS >

### [AUTOMATIC AIR CONDITIONER]

Description			
Symptom: Compressor doe	s not operate.		
Diagnosis Procedure			INFOID:00000001048200
the corresponding diagnos			
inspection of refrigerant le	-	ant amount is below	the proper amount, periorn
1.CHECK MAGNET CLUT			
Check magnet clutch. Refer Does it operate normally?	to <u>HAC-87, "Component Function</u>	<u>i Check"</u> .	
YES >> GO TO 2. NO >> Repair or replace	ce malfunctioning parts.		
2.CHECK REFRIGERANT	PRESSURE SENSOR		
Component Function Chec		onent Function Che	<u>ck"</u> (QR25DE) or <u>EC-1024</u>
s the inspection result norm	nal?		
NO >> Repair or replace	ce malfunctioning parts.		
NO >> Repair or replace CHECK A/C AUTO AMP			
NO >> Repair or replace CHECK A/C AUTO AMP With CONSULT		or" of "HVAC".	
NO >> Repair or replace CHECK A/C AUTO AMP With CONSULT	OUTPUT SIGNAL	or" of "HVAC".	Status
NO >> Repair or replace CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item	OUTPUT SIGNAL	ON	On
NO >> Repair or replace CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item	OUTPUT SIGNAL	ON OFF	On Off
NO >> Repair or replace CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item COMP REQ SIG	OUTPUT SIGNAL	ON OFF ON	On Off On
NO >> Repair or replace B.CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item COMP REQ SIG FAN REQ SIG	COUTPUT SIGNAL  A "FAN REQ SIG" in "Data Monitor  Condition  A/C switch  Blower motor	ON OFF	On Off
NO >> Repair or replace <b>3.</b> CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item COMP REQ SIG FAN REQ SIG S the inspection result norm YES >> GO TO 4. NO >> Replace A/C au <b>4.</b> CHECK ECM INPUT SIC	OUTPUT SIGNAL  OUTPUT SIGNAL  Condition  A/C switch  Blower motor  al?  uto amp. Refer to <u>HAC-102, "Remo</u>	ON OFF ON OFF	On Off On Off
NO >> Repair or replace A.CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item COMP REQ SIG FAN REQ SIG S the inspection result norm YES >> GO TO 4. NO >> Replace A/C au A.CHECK ECM INPUT SIC With CONSULT	OUTPUT SIGNAL  OUTPUT SIGNAL  Condition  A/C switch  Blower motor  al?  uto amp. Refer to <u>HAC-102, "Remo</u>	ON OFF ON OFF	On Off On Off
NO >> Repair or replace CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item COMP REQ SIG FAN REQ SIG S the inspection result norm YES >> GO TO 4. NO >> Replace A/C au CHECK ECM INPUT SIC With CONSULT	COUTPUT SIGNAL  Ad "FAN REQ SIG" in "Data Monitor  Condition  A/C switch  Blower motor  al?  to amp. Refer to <u>HAC-102, "Remo</u> SNAL	ON OFF ON OFF	On Off On Off
NO >> Repair or replace CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item COMP REQ SIG FAN REQ SIG S the inspection result norm YES >> GO TO 4. NO >> Replace A/C au CHECK ECM INPUT SIC With CONSULT Check "AIR COND SIG" and Monitor item	OUTPUT SIGNAL  Md "FAN REQ SIG" in "Data Monitor  Condition  A/C switch  Blower motor  Mal?  Ito amp. Refer to <u>HAC-102, "Remo</u> SNAL  d "HEATER FAN SW" in "Data Mon	ON OFF ON OFF OFF	On Off On Off Off
NO >> Repair or replace 3.CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item COMP REQ SIG FAN REQ SIG S the inspection result norm YES >> GO TO 4. NO >> Replace A/C au 4.CHECK ECM INPUT SIC With CONSULT Check "AIR COND SIG" and	OUTPUT SIGNAL  A "FAN REQ SIG" in "Data Monitor  Condition  A/C switch  Blower motor  Al?  A C sefer to HAC-102, "Remo SNAL  Condition  Condition	ON OFF ON OFF OFF	On Off On Off Off
NO >> Repair or replace 3.CHECK A/C AUTO AMP With CONSULT Check "COMP REQ SIG" an Monitor item COMP REQ SIG FAN REQ SIG S the inspection result norm YES >> GO TO 4. NO >> Replace A/C au 4.CHECK ECM INPUT SIC With CONSULT Check "AIR COND SIG" and Monitor item	OUTPUT SIGNAL  A "FAN REQ SIG" in "Data Monitor  Condition  A/C switch  Blower motor  Al?  A C sefer to HAC-102, "Remo SNAL  Condition  Condition	ON OFF ON OFF OFF	On Off On Off Off

**J.**CHECK IPDM E/R INPUT SIGNAL

With CONSULT

### COMPRESSOR DOES NOT OPERATE

#### < SYMPTOM DIAGNOSIS >

#### 1. Start engine.

#### 2. Check "ĂC COMP REQ" in "Data Monitor" of "IPDM E/R".

Monitor item	Condition		Status
AC COMP REQ	A/C switch	ON	On
		OFF	Off

Is the inspection result normal?

YES >> Inspection End.

NO >> Check CAN communication system. Refer to <u>LAN-16, "Trouble Diagnosis Flow Chart"</u>.

## REMOVAL AND INSTALLATION A/C SWITCH ASSEMBLY

Removal and Installation

### REMOVAL

- 1. Remove cluster lid C lower. Refer to IP-20, "Cluster Lid C Lower".
- 2. Remove the A/C switch assembly screws (A).

3. Disconnect the harness connector from the A/C switch assembly and remove.

### INSTALLATION

Installation is in the reverse order of removal.

0

А

В

С

INFOID:000000010482008

ALIIA0635ZZ

D

F

Н

HAC

J

Κ

L

Μ

Ν

0


Ρ

### A/C AUTO AMP.

**Exploded View** 

INFOID:000000011181131

[AUTOMATIC AIR CONDITIONER]

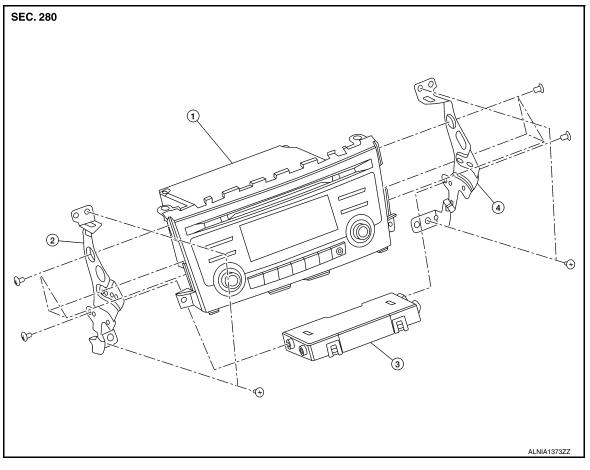

- 1. Audio or AV control unit
- 2. Audio or AV control unit bracket (LH) 3. A/C auto amp.
- 4. Audio or AV control unit bracket (RH)

### Removal and Installation

INFOID:000000011181132

#### REMOVAL

- 1. Remove the audio unit. Refer to <u>AV-109</u>, "Removal and Installation" (DISPLAY AUDIO WITHOUT BOSE) or <u>AV-195</u>, "Removal and Installation" (DISPLAY AUDIO WITH BOSE).
- 2. Remove the Audio or AV control unit (NAVIGATION WITH BOSE). Refer to <u>AV-298. "Removal and Instal-</u> lation".
- 3. Remove the Audio or AV control unit bracket screws and Audio or AV control unit brackets (LH/RH).
- 4. Remove the A/C auto amp.

#### INSTALLATION

Installation is in the reverse order of removal.


### AMBIENT SENSOR

### Removal and Installation

### REMOVAL


1. Remove the core support cover clips (A), then remove the core support cover (1).


- 2. Disconnect the harness connector from the ambient sensor.
- 3. Release the ambient sensor clip, then remove the ambient sensor (1).

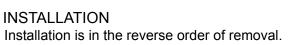





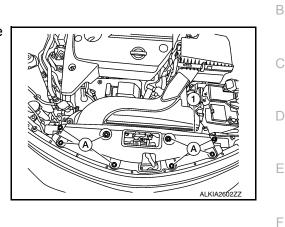

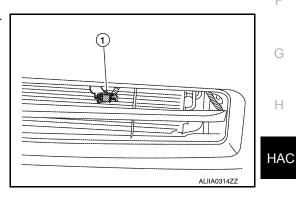

J

Κ

L

Μ

Ν

Ο

Ρ


А

### **IN-VEHICLE SENSOR**

### Removal and Installation

### REMOVAL

- 1. Remove the instrument lower panel LH. Refer to IP-21, "Removal and Installation".
- 2. Disconnect the aspirator hose (2) from the in-vehicle sensor.
- 3. Remove the in-vehicle sensor screw (A) and the in-vehicle sensor (1).

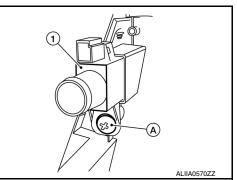


INSTALLATION Installation is in the reverse order of removal. INFOID:000000010482012

### SUNLOAD SENSOR

### Removal and Installation

### REMOVAL

- 1. Release the front speaker grille (LH). Refer to <u>IP-14, "Exploded View"</u>.
- Release the sunload sensor pawls and remove.
   (): Pawl

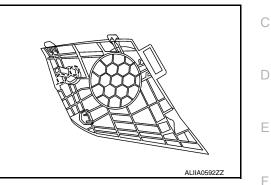

INSTALLATION Installation is in the reverse order of removal.

J

Κ

L

Μ

Ν

Ο

Ρ

G

Н

А

В

INFOID:000000010482013


### INTAKE SENSOR

### Removal and Installation

INFOID:000000011181143

#### REMOVAL

- 1. Remove the front evaporator. Refer to <u>HA-40. "EVAPORATOR : Removal and Installation"</u>.
- 2. Remove the intake sensor (2) by pulling it out of the front evaporator (1).
  - **CAUTION:**
  - Mark the mounting position of the intake sensor.
  - Do not damage the evaporator core.

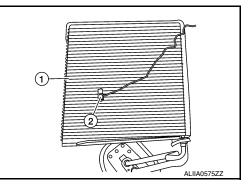

[AUTOMATIC AIR CONDITIONER]

INSTALLATION Installation is in the reverse order of removal. CAUTION:

Mount the intake sensor in the same position as the original intake sensor on the evaporator core.

< REMOVAL AND INSTALLATION >	[AUTOMATIC AIR CONDITIONER]
REFRIGERANT PRESSURE SENSOR	
Removal and Installation	A INFOID:000000010482015
REMOVAL	В
1. Discharge the refrigerant. Refer to HA-23. "Recycle Refriger	ant".
2. Remove the front bumper fascia. Refer to EXT-17, "Remova	l and Installation".
<ol><li>Disconnect the harness connector from the refrigerant press</li></ol>	ure sensor.
<ol> <li>Remove the refrigerant pressure sensor.</li> <li>CAUTION:</li> <li>Cap or wrap the opening of the refrigerant pressure set tape to avoid the entry of air.</li> </ol>	ensor with suitable material such as vinyl $^{ extsf{D}}$
INSTALLATION Installation is in the reverse order of removal. CAUTION:	E
<ul> <li>Do not reuse O-ring.</li> <li>Apply A/C oil to the O-ring of the refrigerant pressure sens</li> <li>After charging refrigerant, check for leaks. Refer to <u>HA-21</u>,</li> </ul>	
	G

Н

HAC

J

Κ

L

Μ

Ν


Ο

Ρ

### DOOR MOTOR

Exploded View

INFOID:000000010482016

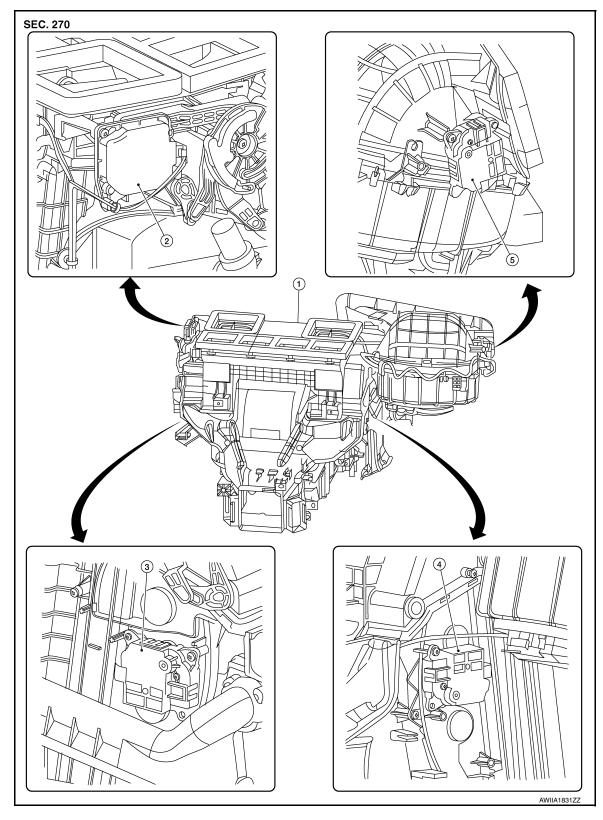

- 1. Front heating and cooling unit assembly 2.
- 4. Air mix door motor (RH)
- Mode door motor Intake door motor

5.

3. Air mix door motor (LH)

< REMOVAL AND INSTALLATION >	[AUTOMATIC AIR CONDITIONER]
INTAKE DOOR MOTOR	
INTAKE DOOR MOTOR : Removal and Installation	A INFOID:000000010482017
REMOVAL	В
<ol> <li>Remove the glove box assembly. Refer to <u>IP-22, "Removal and In</u></li> <li>Disconnect the harness connector from the intake door motor.</li> <li>Remove the intake door motor screws and the intake door motor.</li> </ol>	<u>stallation"</u> . C
INSTALLATION Installation is in the reverse order of removal. MODE DOOR MOTOR	D
MODE DOOR MOTOR : Removal and Installation	INFOID:000000010482018
REMOVAL	
<ol> <li>Remove the instrument lower panel LH. Refer to <u>IP-21, "Removal</u></li> <li>Disconnect the harness connector from the mode door motor.</li> <li>Remove the mode door motor screws and the mode door motor.</li> </ol>	and Installation". F
INSTALLATION Installation is in the reverse order of removal. AIR MIX DOOR MOTOR	G
AIR MIX DOOR MOTOR : Removal and Installation - A	.ir Mix Door Motor (RH)
	INFOID:000000010482019
REMOVAL	
<ol> <li>Remove the glove box assembly. Refer to <u>IP-22, "Removal and In</u>.</li> <li>Remove the upper floor connecting duct (RH). Refer to <u>HA-38, "Ex</u>.</li> <li>Disconnect the harness connector from the air mix door motor (RH).</li> </ol>	kploded View". J
4. Remove the air mix door motor (RH) screws and the air mix door r INSTALLATION Installation is in the reverse order of removal.	motor (RH).
AIR MIX DOOR MOTOR : Removal and Installation - A	ir Mix Door Motor (LH)
REMOVAL	
1. Remove the upper floor connecting duct (LH). Refer to <u>HA-38</u> , "Ex	
<ol> <li>Disconnect the harness connector from the air mix door motor (LH</li> <li>Remove the air mix door motor (LH) screws and the air mix door motor (LH)</li> </ol>	
INSTALLATION Installation is in the reverse order of removal.	0

#### < PRECAUTION >

## PRECAUTION PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

#### Precaution for Work

INFOID:000000010482022

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- · Follow the steps below to clean components:
- Water soluble dirt:
- Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
- Then rub with a soft, dry cloth.
- Oily dirt:
- Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
- Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
- Then rub with a soft, dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

#### Working with HFC-134a (R-134a)

#### WARNING:

• CFC-12 (R-12) refrigerant and HFC-134a (R-134a) refrigerant are not compatible. If the refrigerants are mixed compressor failure is likely to occur. Refer to <u>HA-25</u>, "<u>Inspection</u>". To determine the purity of HFC-134a (R-134a) in the vehicle and recovery tank, use Refrigerant Recovery/Recycling Recharging equipment and Refrigerant Identifier.

INFOID:000000010482023

#### PRECAUTIONS

< PRECAUTION >

А

В

F

Н

J

Κ

INFOID:000000010482024

- Use only specified oil for the HFC-134a (R-134a) A/C system and HFC-134a (R-134a) components. If oil other than that specified is used, compressor failure is likely to occur.
- The specified HFC-134a (R-134a) oil rapidly absorbs moisture from the atmosphere. The following handling precautions must be observed:
- When removing refrigerant components from a vehicle, immediately cap (seal) the component to minimize the entry of moisture from the atmosphere.
- When installing refrigerant components to a vehicle, do not remove the caps (unseal) until just before connecting the components. Connect all refrigerant loop components as quickly as possible to minimize the entry of moisture into system.
- Only use the specified oil from a sealed container. Immediately reseal containers of oil. Without proper sealing, oil will become moisture saturated and should not be used.
- Avoid breathing A/C refrigerant and oil vapor or mist. Exposure may irritate eyes, nose and throat. Remove HFC-134a (R-134a) from the A/C system using certified service equipment meeting requirements of SAE J2210 [HFC-134a (R-134a) recycling equipment], or J2209 [HFC-134a (R-134a) recycling equipment], If accidental system discharge occurs, ventilate work area before resuming service. Additional health and safety information may be obtained from refrigerant and oil manufacturers.
- Do not allow A/C oil to come in contact with styrofoam parts. Damage may result.

#### CONTAMINATED REFRIGERANT


If a refrigerant other than pure HFC-134a (R-134a) is identified in a vehicle, your options are:

- Explain to the customer that environmental regulations prohibit the release of contaminated refrigerant into the atmosphere.
- Explain that recovery of the contaminated refrigerant could damage your service equipment and refrigerant supply.
- Suggest the customer return the vehicle to the location of previous service where the contamination may have occurred.
- If you choose to perform the repair, recover the refrigerant using only dedicated equipment and containers. Do not recover contaminated refrigerant into your existing service equipment. If your facility does not have dedicated recovery equipment, you may contact a local refrigerant product retailer for available service. This refrigerant must be disposed of in accordance with all federal and local regulations. In addition, replacement of all refrigerant system components on the vehicle is recommended.
- If the vehicle is within the warranty period, the air conditioner warranty is void. Please contact NISSAN Customer Affairs for further assistance.

#### Precaution for Service Equipment

#### MANIFOLD GAUGE SET

Be certain that the gauge face indicates R-134a or 134a. Make sure the gauge set has 1/2"-16 ACME threaded connections for service hoses. Confirm the set has been used only with refrigerant HFC-134a (R-134a) along with specified oil.

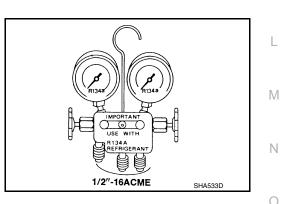

SERVICE HOSES


Р

#### PRECAUTIONS

#### < PRECAUTION >

Be certain that the service hoses display the markings described (colored hose with black stripe). All hoses must include positive shutoff devices (either manual or automatic) near the end of the hoses opposite the manifold gauge.


#### [MANUAL AIR CONDITIONER]

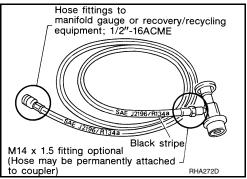

#### SERVICE COUPLERS

Do not attempt to connect HFC-134a (R-134a) service couplers to a CFC-12 (R-12) A/C system. The HFC-134a (R-134a) couplers will not properly connect to the CFC-12 (R-12) system. However, if an improper connection is attempted, discharging and contamination may occur.

Shut-off valve rotation	A/C service valve
Clockwise	Open
Counterclockwise	Close

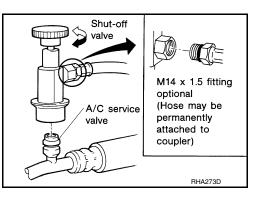

## PREPARATION

## PREPARATION

## Special Service Tool

INFOID:000000010482025

А

[MANUAL AIR CONDITIONER]

#### The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.) Tool name		Description	С
 (J-46534) Trim Tool Set		Removing trim components	D
	AWJIA0483ZZ		F

#### **Commercial Service Tool**

INFOID:000000010482026

Tool name		Description	G
Power tool		Loosening nuts, screws and bolts	
			Н
			HA
	PIIB1407E		

Κ

L

Μ

Ν


0

Р

# < SYSTEM DESCRIPTION > SYSTEM DESCRIPTION COMPONENT PARTS

## **Component Part Location**

INFOID:000000010482027

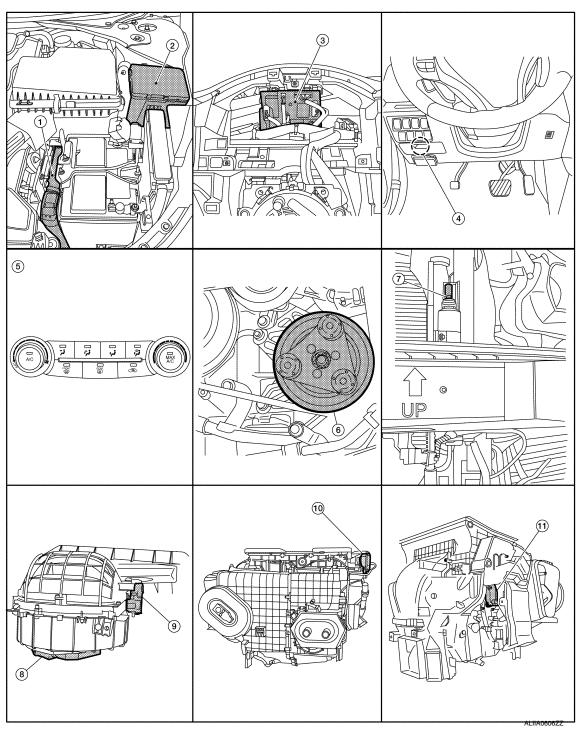

#### 1. ECM

- 2. IPDM E/R
- 4. Front blower motor relay
- 5. Front air control

- 3. BCM (view with combination meter removed)
- 6. A/C Compressor

#### **COMPONENT PARTS**

#### < SYSTEM DESCRIPTION >

- 7. Refrigerant pressure sensor (view with front bumper fascia removed)
- 10. Mode door motor
- Blower motor (view with front air con- 9. 8. ditioning assembly removed from vehicle)

Intake door motor

11. Air mix door motor

[MANUAL AIR CONDITIONER]

А В

INFOID:000000010482028

Component	Description
A/C Compressor	Vaporized refrigerant is drawn into the A/C compressor from the evaporator, where it is compressed to a high pressure, high temperature vapor. The hot, compressed vapor is then discharged to the condenser.
Air mix door motor	The air mix door controls the mix of hot or cold air that enters the ventilation system. It is controlled by the front air control based on the position of the temperature dial. The air mix door motor receives position commands from the front air control and reports actual door position back via an LCU (Local Control Unit) installed inside the motor. Commands and responses are sent across the LIN (Local In- terconnect Network) to each motor simultaneously, with each motor having its own unique address, thereby only responding to requests sent to its specific address. The LCU reads the door position from a Position Balanced Resistor (PBR), also part of the motor, and returns that information to the front air control. The LCU switches the polarity of the circuits connected to the DC motor to drive the motor forward or backward as requested by the front air control.
BCM	The BCM receives the fan ON and A/C ON signals from the front air control and sends a compressor ON request to the ECM.
Blower motor	The blower motor varies the speed at which the air flows through the ventilation system.
ECM	The ECM sends a compressor ON request to the IPDM E/R based on the status of engine operation and load as well as refrigerant pressure information. If all the conditions are met for A/C operation, the ECM transmits the compressor ON request to the IPDM E/R. The ECM shares the refrigerant pressure sensor signal, engine RPM, and engine coolant temperature with the front air control via CAN communication line.
Front air control	The front air control controls the operation of the A/C and heating system based on inputs from the temperature control knob, the mode switches, the blower control dial, and inputs received from the ECM and combination meter across the CAN.
Front blower motor relay	The front blower motor relay controls the flow of current to fuses 17 and 27 in the Fuse Block (J/B). The relay is connected directly to ground, and is energized when the ignition switch is in the ON or START position.
Fuse Block (J/B)	Located in the passenger compartment, behind the left lower IP, the Fuse Block (J/B) contains the front blower motor relay and several fuses required for the air conditioner control system.
Intake door motor	The intake door motor controls the position of the intake door. Fresh air is allowed to enter the cabin in one position, and recirculated inside air is allowed to enter in the other position. At times the front air control may command partial fresh or recirculation based on evaporator or coolant temperatures. The intake door motor receives position commands from the front air control and reports actual door position back via an LCU (Local Control Unit) installed inside the motor. Commands and responses are sent across the LIN (Local Interconnect Network) to each motor simultaneously, with each motor having its own unique address, thereby only responding to requests sent to its specific address. The LCU reads the door position from a Position Balanced Resistor (PBR), also part of the motor, and returns that information to the front air control. The LCU switches the polarity of the circuits connected to the DC motor to drive the motor forward or backward as requested by the front air control.
IPDM E/R	Refer to PCS-5, "RELAY CONTROL SYSTEM : System Description".

#### **COMPONENT PARTS**

#### < SYSTEM DESCRIPTION >

Component	Description
Mode door motor	The mode door controls the direction the conditioned air passes through the ventilation system. Through a series of levers and gears, the mode door controls the defrost door, the foot door, and the vent door. There are 5 preset positions: VENT, B/L, FOOT, D/F, and DEF. The FOOT position can be set to allow some airflow through to the defroster vent, or to completely block the defroster vent using the CONSULT. The mode door motor receives position commands from the front air control and reports actual door position back via an LCU (Local Control Unit) installed inside the motor. Commands and responses are sent across the LIN (Local Interconnect Network) to each motor simultaneously, with each motor having its own unique address, thereby only responding to requests sent to its specific address. The LCU reads the door position from a Position Balanced Resistor (PBR), also part of the motor, and returns that information to the front air control. The LCU switches the polarity of the circuits connected to the DC motor to drive the motor forward or backward as requested by the front air control.
Refrigerant pressure sensor	Refer to EC-37, "Refrigerant Pressure Sensor" for QR25DE and EC-563, "Refrigerant Pressure Sensor" for VQ35DE.

#### < SYSTEM DESCRIPTION >


#### [MANUAL AIR CONDITIONER]

# **SYSTEM**

System Diagram



А

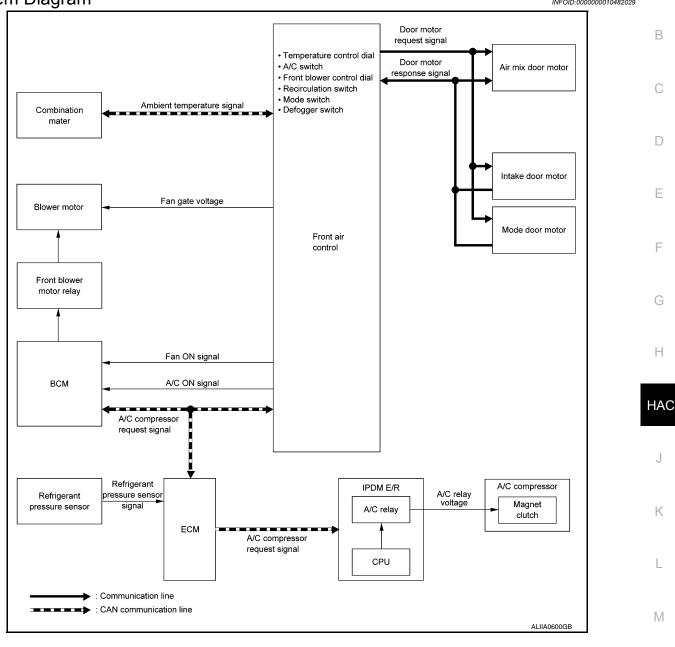

## System Description

INFOID:000000010482030 Ν

Ο

Ρ

 The manual air conditioning system is controlled by a sequence of functions from the front air control, BCM, ECM, and IPDM E/R.

Controlled by front air control: - <u>HAC-118</u>, "Air Flow Control"

- HAC-118, "Air Inlet Control"
- HAC-118, "Air Outlet Control" \_ HAC-118, "Compressor Control" \_
- HAC-119, "Door Control"
- HAC-121, "Temperature Control" \_

Controlled by BCM:

Air conditioning request signal. Refer to BCS-8, "BODY CONTROL SYSTEM : System Description".

#### **HAC-117**

#### < SYSTEM DESCRIPTION >

#### Control by ECM

- Cooling fan control Refer to <u>EC-61, "COOLING FAN CONTROL : System Description (with manual air conditioner)"</u> (QR25DE) or <u>EC-577, "COOLING FAN CONTROL : System Description"</u> (VQ35DE).
- Air conditioning cut control Refer to <u>EC-58</u>, "AIR CONDITIONING CUT CONTROL : System Description (with manual air conditioner)" (QR25DE) or <u>EC-575</u>, "AIR CONDITIONING CUT CONTROL : System Description" (VQ35DE).

#### Control by IPDM E/R

- Relay control
- Refer to PCS-5, "RELAY CONTROL SYSTEM : System Description".
- Cooling fan control Refer to <u>EC-61</u>, "<u>COOLING FAN CONTROL</u>: <u>System Description</u> (with manual air conditioner)" (QR25DE) or <u>EC-577</u>, "<u>COOLING FAN CONTROL</u>: <u>System Description</u>" (VQ35DE).

#### Air Flow Control

INFOID:000000010482031

#### DESCRIPTION

- Front air control changes duty ratio of front blower motor control signal to control air flow continuously. When air flow is increased, duty ratio of front blower motor control signal gradually increases to prevent a sudden increase in air flow.
- In addition to manual control, air flow control is composed of fan speed control at door motor operation.

#### FAN SPEED CONTROL AT DOOR MOTOR OPERATION

When mode door motor is activated while air flow is more than the specified value, front air control temporarily reduces fan speed so that mode door moves smoothly.

#### Air Inlet Control

INFOID:000000010482032

The intake door position is automatically controlled in MAX A/C and DEF modes. The intake door is controlled by customer input in the other modes.

#### Air Outlet Control

INFOID:000000010482033

Air outlet control is controlled by customer input. When the A/C is turned off by turning the blower control dial fully counterclockwise, the front air control retains the current selections and returns to these selections the next time the blower control dial is turned to any fan position.

#### NOTE:

If ambient temperature is excessively low, D/F is selected to prevent windshield fogging when air outlet is set to FOOT.

#### Compressor Control

INFOID:000000010482034

#### DESCRIPTION

In order for the IPDM E/R to complete a compressor ON request, the following conditions must be met:

- 1. The BCM detects a Fan ON signal from the front air control. The front air control grounds the fan ON signal monitored by the BCM when the blower speed dial is in any of the fan speed positions.
- 2. The BCM detects an A/C ON signal from the front air control. The front air control grounds the A/C ON signal monitored by the BCM when:
- The A/C switch is pressed. The A/C switch LED illuminates and the front air control grounds the A/C ON signal monitored by the BCM. Any mode control button except D/F may be selected.
- The A/C switch is OFF, and the MAX A/C button is pressed. The A/C switch LED will automatically illuminate and the front air control grounds the A/C ON signal monitored by the BCM.
- The A/C switch is OFF, and the mode button for either D/F or DÉF is selected. The front air control grounds the A/C ON signal monitored by the BCM, but it does not illuminate the A/C switch LED

#### NOTE:

If the compressor was engaged by pressing the D/F or DEF mode buttons, and the time spent in either mode exceeds 1 minute, then the compressor stays requested, even when modes other than D/F or DEF are selected, until either:

1. The ignition switch is turned OFF.

#### SYSTEM

А

D

Ε

F

P

INFOID:000000010482035

- 2. The blower speed dial is turned completely counterclockwise to the OFF position.
- The A/C switch is manually turned OFF. 3.

In other words, the compressor ON request cannot be turned off in D/F or DEF modes.

#### REFRIGERANT PRESSURE PROTECTION

The refrigerant system is protected against excessively high- or low-pressures by the refrigerant pressure sensor, located on the liquid tank on the condenser. The refrigerant pressure sensor detects the pressure inside the refrigerant line and sends a voltage signal to the ECM. If the system pressure rises above or falls below the following values, the ECM requests the IPDM E/R to de-energize the A/C relay and disengage the compressor.

- 3.12 MPa (31.82 kg/cm<sup>2</sup>, 452.4 psi) or more (When the engine speed is less than 1,500 rpm)
- 2.74 MPa (27.95 kg/cm<sup>2</sup>, 397.3 psi) or more (When the engine speed is 1,500 rpm or more)
- 0.14 MPa (1.43 kg/cm<sup>2</sup>, 20.3 psi) or less

#### PRESSURE RELIEF VALVE

The refrigerant system is also protected by a pressure relief valve, located in the rear head of the compressor. When the pressure of refrigerant in the system increases to an abnormal level [more than 2,990 kPa (30.5 kg/ cm<sup>2</sup>, 433.6 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.


#### COMPRESSOR OIL CIRCULATION CONTROL

When the engine starts while the engine coolant temperature is 56°C (133°F) or less, ECM activates the compressor for approximately 6 seconds and circulates the compressor lubricant once.

#### OPERATING RATE CONTROL


When the set temperature is other than fully cold or the air outlet is "VENT", "B/L" or "FOOT", the front air con-Н trol controls the compressor activation depending on ambient temperature.

#### Door Control

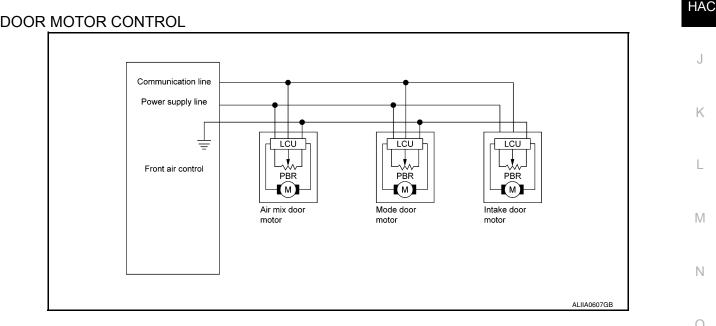

- A Local Control Unit (LCU) is built into each door motor and detects the door position by using a Position Balanced Resistor (PBR).
- Each door motor LCU has a unique address. The front air control communicates with the door motor LCUs by using each door's unique communication address. The front air control sends requested door position commands to each door motor LCU via a Local Interconnect Network (LIN) communication line. Each door motor's LCU receives the command and sends back a door position feedback signal.
- · Each LCU controls each door to the appropriate position depending on the control signal from the front air control. When the door movement is complete, the LCU transmits a signal to the front air control indicating that the door movement is complete.

#### SWITCHES AND THEIR CONTROL FUNCTION

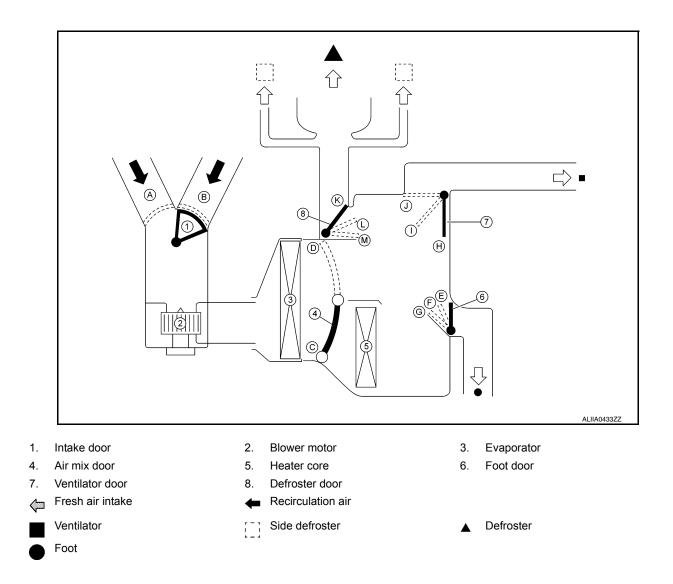

						Door position						
	Switch/Dial position		VentilatorFootDefrosterIntakedoordoordoordoor									
	VENT	7		~;		~;		Н	E	К	-	
MODE	B/L	<i></i>		I	F	К	-	_				
switch	FOOT	J.		J G L		-						
	D/F			J	G	L	В	—				
DEF sv	vitch	ŧ		J	E	М	В	_				
REC switch <sup>*1</sup>	ON	Ē			_	•	В	_				
	OFF		_		— A		_					
		Full	Cold					С				
Temperature	control dial	Full Cold	⇔ Full Hot	—				AUTO				
		Full Hot			_			D				

<sup>\*1</sup>: Inlet status is displayed by indicator when activating Max A/C or D/F modes.

#### AIR DISTRIBUTION

#### SYSTEM

#### [MANUAL AIR CONDITIONER]

< SYSTEM D	ESCRIPTION >
------------	--------------

	VENT N		•••• \								
			•)	VENT							
OUTLET			СТ								
		ASST	ASST	DR	DR	RR					
IR FLOW DISTRIBUTION R (%)	RATIO	22	22	22	22	12					
			P	/L MODI	E (***)						
			L	VENT				FC	OT		-
OUTLET			C1				[	10			-
		ASST	ASST	DR	DR	RR	Fr ASST	Fr DR	Rr ASST	Rr DR	
NR FLOW DISTRIBUTION R (%)	RATIO	11	11	11	11	17	14.5	14.5	5	5	-
			VENT	D/F1 I	MODE (•	<b>.</b>	E	ТОС		DE	
OUTLET		(				F					_1-
001121	ASST	ASST		DR	RR	Fr ASST	Fr DR	Rr ASST	Rr DR	Fr	Side
AIR FLOW DISTRIBUTION RATIO (%)	5	0	0	5	17	18	18	7	7	18	5
	1			D/F2 N	NODE (						
			VENT				FOOT		DE	:►	
OUTLET	ASST	ASST	TR DR	DR	RR	Fr ASST	Fr DR	Rr ASST	Rr DR	Fr	Side
AIR FLOW DISTRIBUTION RATIO (%)	5	0	0	5	17	14	14	6.5	6.5	25	7
	1			DEF N	NODE (	<b>#?</b> )					
			VENT		FC	ТОС		DE	F		
OUTLET	ASST	( ASST	TR DR	DR	RR	Fr ASST	Fr DR	Rr ASST	Rr DR	Fr	Side
AIR FLOW DISTRIBUTION RATIO (%)	5	0	0	5	14	0	0	0	0	60	16

#### **Temperature Control**

- When the ignition switch is in the ON position, the customer uses the front air control temperature control dial to set the desired temperature.
- The front air control calculates the target front air mix door opening angle depending on the selected temperature, intake temperature sensor, engine coolant temperature and rpm, and ambient temperature.
- Front air mix door is controlled depending on the comparison of current front air mix door opening angle and target front air mix door opening angle.
- Regardless of ambient temperature, the front air mix door is fixed at the fully cold position when the temperature control dial is set at the full cold position and fixed at the fully hot position when the temperature control dial is set at the full hot position.

INFOID:000000010482036

Ο


#### [MANUAL AIR CONDITIONER]

#### < SYSTEM DESCRIPTION > OPERATION

#### Switch Name and Function

INFOID:000000010482037

Front Air Control

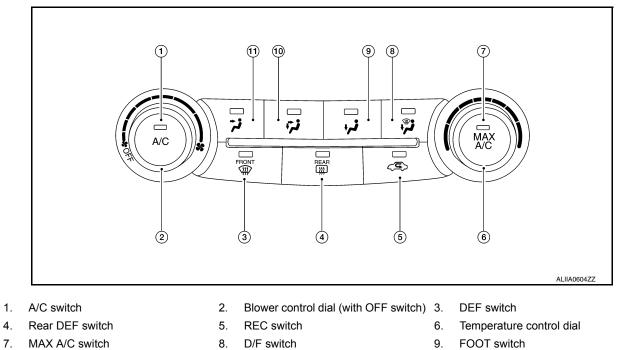

11. VENT switch

10. B/L switch

## Switch Operation

A/C switch	Switches the compressor control switch indicator between ON ⇔ OFF with each press while front blower fan is activated. The circuit used by the BCM to detect an A/C ON request is grounded. <b>NOTE:</b> When front blower fan is OFF, the compressor control cannot be activated.
Blower control dial (with OFF switch)	<ul> <li>Blower fan speed is manually controlled with the dial for varying blower speed. When ON, the circuit used by the BCM to detect a fan ON request signal is grounded.</li> <li>Turns air conditioning system OFF.</li> <li>NOTE:</li> <li>When blower control dial is turned to any ON position the air conditioning system is activated. (Compressor control state returns to the previous state before air conditioning system was turned OFF.)</li> </ul>
DEF switch	<ul> <li>Switches DEF mode (switch indicator) between ON ⇔ OFF with each press.</li> <li>When DEF mode is turned ON, the air conditioning system changes to the following state.</li> <li>Air inlet: Fresh air intake</li> <li>Air outlet: DEF</li> <li>Blower fan: Manual setting.</li> <li>Compressor: ON</li> <li>When DEF mode is turned OFF, the air conditioning system state returns to the previous state before DEF mode was selected, but the following state is continued:</li> <li>Air inlet: Fresh air intake</li> <li>Compressor: ON</li> <li>When DEF mode is of the following state is continued:</li> <li>Air inlet: Fresh air intake</li> <li>Compressor: ON</li> <li>When front blower fan is OFF, DEF cannot be activated.</li> </ul>

#### **OPERATION**

#### < SYSTEM DESCRIPTION >

#### [MANUAL AIR CONDITIONER]

	<ul> <li>Switches the MAX A/C and compressor control switch indicators between ON ⇔ OFF with each press while front blower fan is activated.</li> <li>When MAX A/C mode is turned ON, the air conditioning system changes to the following state.</li> <li>Air inlet: Recirculation air intake</li> </ul>	A
	<ul> <li>Air outlet: Manual setting</li> <li>Blower fan: Manual setting.</li> </ul>	В
MAX A/C switch	<ul> <li>Compressor: ON</li> <li>When MAX A/C mode is turned OFF, the air conditioning system state returns to the previous state</li> </ul>	
	<ul> <li>before MAX A/C mode is selected. But, the following state is changed:</li> <li>Air inlet: Fresh air intake</li> <li>Compressor: ON</li> </ul>	С
	NOTE: When front blower fan is OFF, the compressor control cannot be activated.	D
MODE switches	Selects air outlet from VENT, B/L, FOOT, and D/F.	
	When the air conditioning system is OFF, the air outlet can still be selected.	E
REC switch	<ul> <li>Air inlet is selected to fresh air intake (REC) by pressing this switch.</li> <li>REC indicator: ON</li> <li>NOTE:</li> </ul>	
	<ul> <li>When the air conditioning system is OFF, the air inlet can still be selected.</li> <li>When D/F mode or DEF is selected, the REC button is disabled.</li> </ul>	F
Temperature control dial	<ul> <li>Selects desired temperature between full cold and full hot.</li> <li>Clockwise rotation: Temperature increases.</li> </ul>	G
	- Counterclockwise rotation: Temperature decreases.	

Η

HAC

J

Κ

L

Μ

Ν

0

< SYSTEM DESCRIPTION >

INFOID:000000011009052

## DIAGNOSIS SYSTEM (BCM)

#### CONSULT Function (BCM - COMMON ITEM)

#### **CAUTION:**

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF  $\rightarrow$  ON (for at least 5 seconds)  $\rightarrow$  OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

#### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul><li>The vehicle specification can be read and saved.</li><li>The vehicle specification can be written when replacing BCM.</li></ul>
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

#### SYSTEM APPLICATION

BCM can perform the following functions.

				Direct D	Diagnosti	c Mode		
System	Sub System	Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×	×		
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Remote keyless entry system	MULTI REMOTE ENT			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×			
Trunk open	TRUNK			×				
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				

Revision: May 2014

#### **DIAGNOSIS SYSTEM (BCM)**

#### < SYSTEM DESCRIPTION >

#### [MANUAL AIR CONDITIONER]

INFOID:000000011009053

				Direct [	Diagnosti	c Mode			Λ
System	Sub System	Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr	B
Signal buffer system	SIGNAL BUFFER			×					-
TPMS	AIR PRESSURE MONITOR		×	×	×	×			D

#### CONSULT Function (BCM - AIR CONDITIONER)

#### **CAUTION:**

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF  $\rightarrow$  ON (for at least 5 seconds)  $\rightarrow$  OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

#### DATA MONITOR

Monitor Item [Unit]	Description	
FAN ON SIG [On/Off]	Indicates condition of fan switch.	
AIR COND SW [On/Off]	Indicates condition of A/C switch.	H

HAC

Е

F

## J

L

Κ

M

Ν

0

Р

#### DIAGNOSIS SYSTEM (IPDM E/R)

CONSULT Function (IPDM E/R)

INFOID:000000011009054

[MANUAL AIR CONDITIONER]

#### **CAUTION:**

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF  $\rightarrow$  ON (for at least 5 seconds)  $\rightarrow$  OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

#### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Direct Diagnostic Mode	Description
Ecu Identification	The IPDM E/R part number is displayed.
Self Diagnostic Result	The IPDM E/R self diagnostic results are displayed.
Data Monitor	The IPDM E/R input/output data is displayed in real time.
Active Test The IPDM E/R activates outputs to test components.	
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

#### ECU IDENTIFICATION

The IPDM E/R part number is displayed.

#### SELF DIAGNOSTIC RESULT

Refer to PCS-20, "DTC Index".

#### DATA MONITOR

Monitor Item [Unit]	Main Signals	Description
MOTOR FAN REQ [1/2/3/4]	×	Indicates cooling fan speed signal received from ECM on CAN communication line
AC COMP REQ [On/Off]	×	Indicates A/C compressor request signal received from ECM on CAN commu- nication line
TAIL&CLR REQ [On/Off]	×	Indicates position light request signal received from BCM on CAN communica- tion line
HL LO REQ [On/Off]	×	Indicates low beam request signal received from BCM on CAN communication line
HL HI REQ [On/Off]	×	Indicates high beam request signal received from BCM on CAN communication line
FR FOG REQ [On/Off]	×	Indicates front fog light request signal received from BCM on CAN communica- tion line
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Indicates front wiper request signal received from BCM on CAN communication line
WIP AUTO STOP [STOP P/ACT P]	×	Indicates condition of front wiper auto stop signal
WIP PROT [Off/BLOCK]	×	Indicates condition of front wiper fail-safe operation
IGN RLY1 -REQ [On/Off]		Indicates ignition switch ON signal received from BCM on CAN communication line
IGN RLY [On/Off]	×	Indicates condition of ignition relay
PUSH SW [On/Off]		Indicates condition of push-button ignition switch
INTER/NP SW [On/Off]		Indicates condition of CVT shift position
ST RLY CONT [On/Off]		Indicates starter relay status signal received from BCM on CAN communication line
IHBT RLY -REQ [On/Off]		Indicates starter control relay signal received from BCM on CAN communication line

Revision: May 2014

## DIAGNOSIS SYSTEM (IPDM E/R)

#### < SYSTEM DESCRIPTION >

#### [MANUAL AIR CONDITIONER]

Monitor Item [Unit]	Main Signals	Description	А
ST/INHI RLY [Off/ ST /INHI]		Indicates condition of starter relay and starter control relay	
DETENT SW [On/Off]		Indicates condition of CVT shift selector (park position switch)	D
DTRL REQ [Off]		Indicates daytime light request signal received from BCM on CAN communica- tion line	D
HOOD SW [On/Off]		Indicates condition of hood switch	C
THFT HRN REQ [On/Off]		Indicates theft warning horn request signal received from BCM on CAN commu- nication line	0
HORN CHIRP [On/Off]		Indicates horn reminder signal received from BCM on CAN communication line	D
HOOD SW 2 [On/Off]		Indicates condition of hood switch 2	

#### ACTIVE TEST

Test item	Description	1
HORN	This test is able to check horn operation [On].	Г
FRONT WIPER	This test is able to check wiper motor operation [Hi/Lo/Off].	Г
MOTOR FAN	This test is able to check cooling fan operation [4/3/2/1].	
EXTERNAL LAMPS	This test is able to check external lamp operation [Fog/Hi/Lo/TAIL/Off].	G

CAN DIAG SUPPORT MNTR

Refer to LAN-13. "CAN Diagnostic Support Monitor".

Н

Ε

## HAC

J

Κ

L

Μ

Ν

Ο

Ρ

Revision: May 2014

ABIIA0520ZZ

## ECU DIAGNOSIS INFORMATION FRONT AIR CONTROL

#### **Reference Value**


INFOID:000000010482041

#### VALUES ON THE DIAGNOSIS TOOL

**Display Item List** 

Monitor item name "operation or unit"		Contents
HEATER FAN SW	"ON/OFF"	Displays "ON/OFF" status as judged from blower fan motor switch signal.
AIR COND SW	"ON/OFF"	Displays "ON/OFF" status as judged from air conditioner switch signal.

#### **TERMINAL LAYOUT**

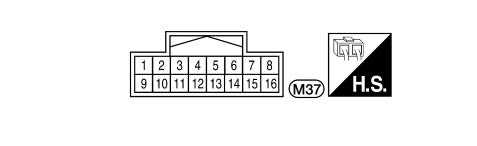

#### PHYSICAL VALUES

Terminal No.	Wire color	Item	Ignition switch		Condition	Voltage (V) (Approx.)
1	SB	Power supply for battery	_		_	Battery voltage
2	G	Power supply for IGN	ON		_	Battery voltage
3	Р	CAN-L	_		_	_
4	L	CAN-H	_		_	_
F	R	Illumination (1)	ON	Lighting	OFF	0
5	ĸ	Illumination (+)	ON	switch	1st position	Battery voltage
6	GR	Illumination (-)	_			0
7	1	Commence ON simpl		0	ON	0
7	L	Compressor ON signal	ON	Compressor	OFF	9 - 12
0	Y	Diswer ON signal	ON	Fan	ON	0
8	Ŷ	Blower ON signal	ON	Fan	OFF	5
9	В	Ground				0
10	V	Deer defreet ON eignel		Defroster	ON	0
10	Y	Rear defrost ON signal	ON	switch	OFF	5
11	Р	Blower motor feedback	ON	Fan speed	Low	7.0 10.0
12	G	LIN signal	ON	<u> </u>		5.5
13	W	VACTR	ON	_		Battery voltage
14	В	ACTR Ground	_		_	0
15		Deer defrect feedbeek		Defroster	ON	Battery voltage
15	Р	Rear defrost feedback	ON	switch	OFF	0
16	BR	PD cut	ON	Compressor	ON	4.6

#### < ECU DIAGNOSIS INFORMATION >

## ECM, IPDM E/R, BCM

## List of ECU Reference

INFOID:000000010482042

ECU	Reference	
	EC-89, "Reference Value" (QR25DE) EC-620, "Reference Value" (VQ35DE)	
ECM	EC-102, "Fail Safe" (QR25DE) EC-636, "Fail-safe" (VQ35DE)	
	EC-105, "DTC Inspection Priority Chart" (QR25DE) EC-638, "DTC Inspection Priority Chart" (VQ35DE)	
	EC-106. "DTC_Index" (QR25DE) EC-640. "DTC_Index" (VQ35DE)	
	PCS-12, "Reference Value"	
PDM E/R	PCS-19, "Fail Safe"	
	PCS-20, "DTC Index"	
	BCS-32, "Reference Value"	
BCM	BCS-51, "Fail Safe"	
	BCS-52, "DTC Inspection Priority Chart"	
	BCS-53, "DTC Index"	

J

Κ

L

Μ

Ν

Ο


Ρ


А


[MANUAL AIR CONDITIONER]

## WIRING DIAGRAM AIR CONDITIONER CONTROL

Wiring Diagram

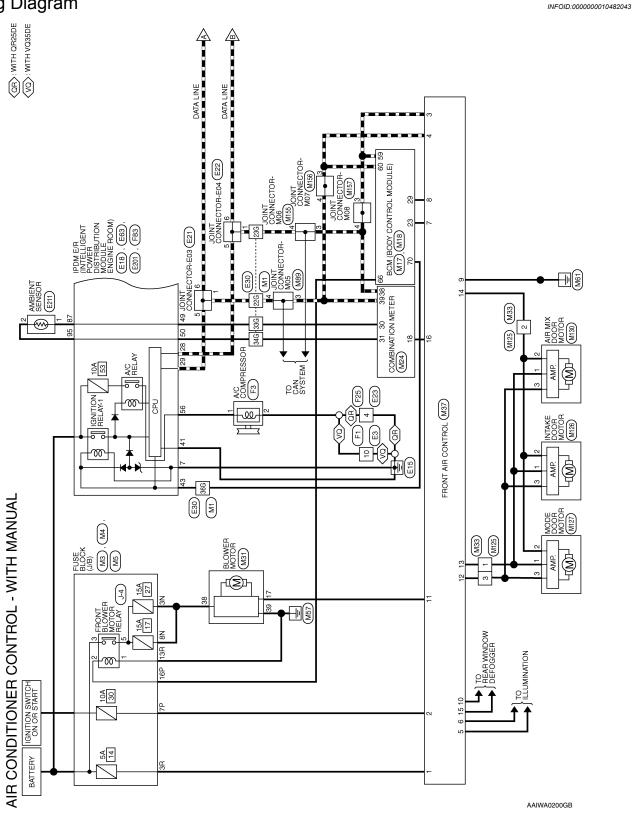

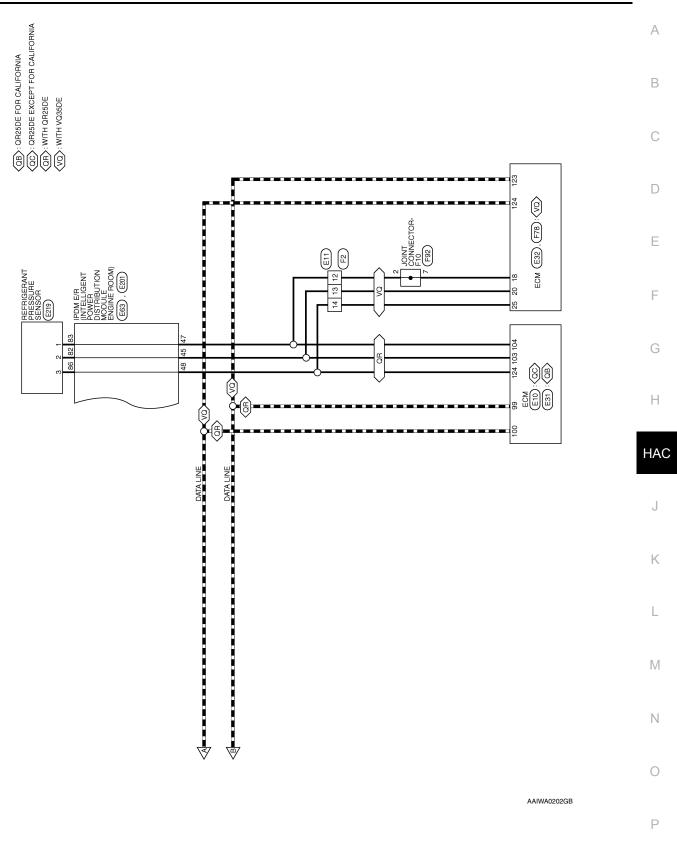


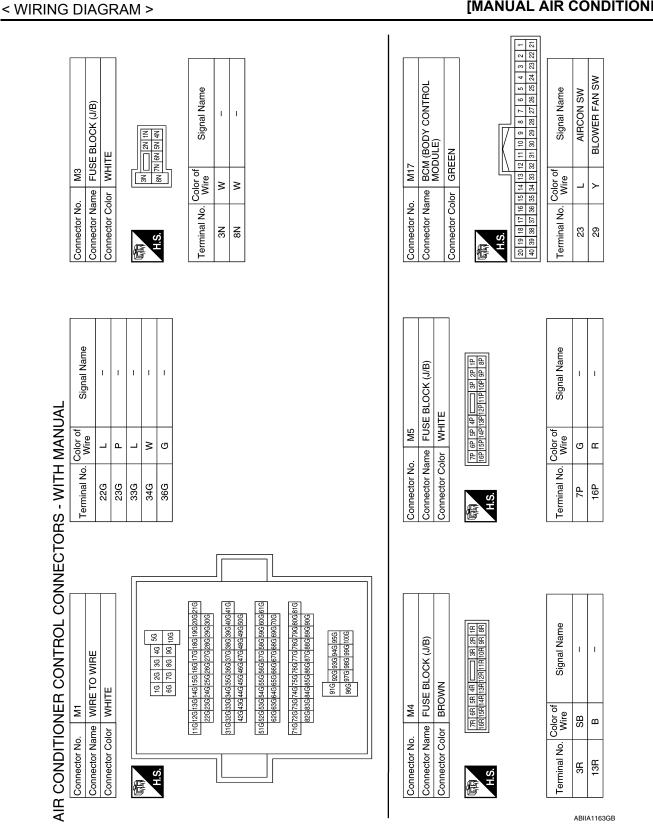

[MANUAL AIR CONDITIONER]

#### < WIRING DIAGRAM >


#### [MANUAL AIR CONDITIONER]

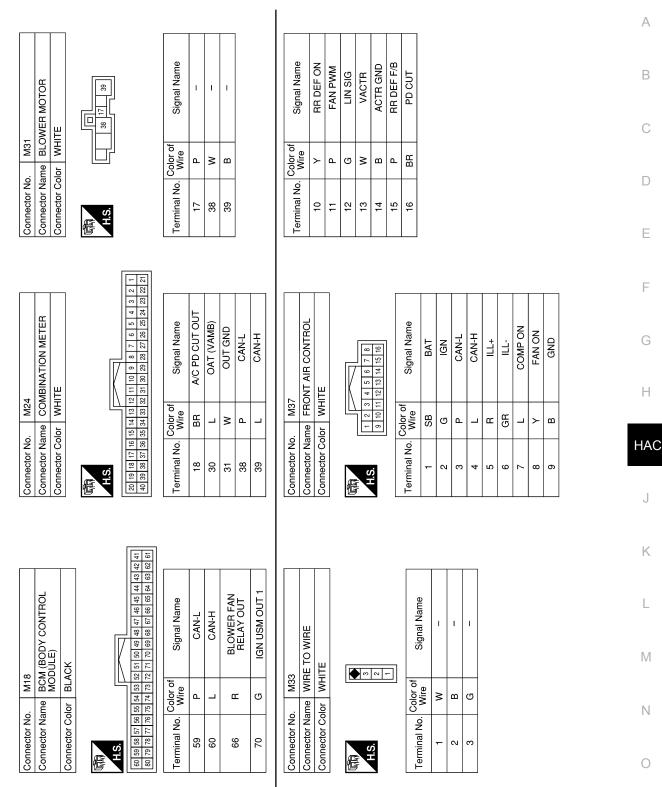

AAIIA0524GB

#### < WIRING DIAGRAM >




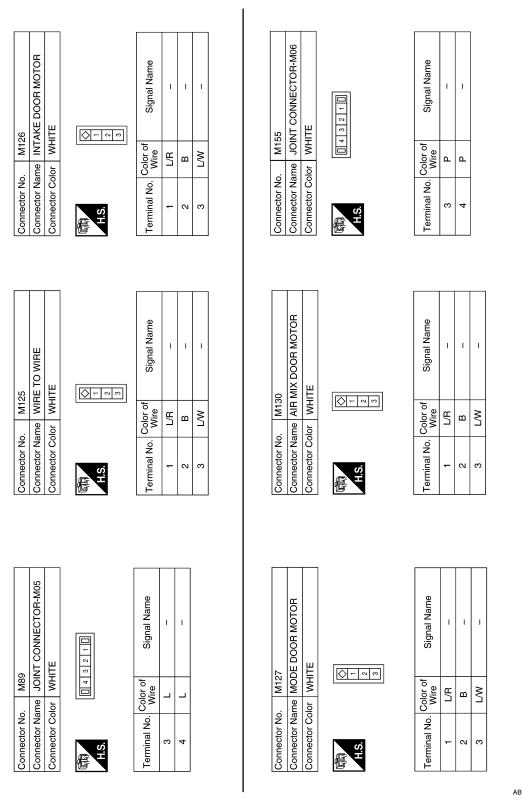

ABIIA1090GB

#### < WIRING DIAGRAM >


#### [MANUAL AIR CONDITIONER]

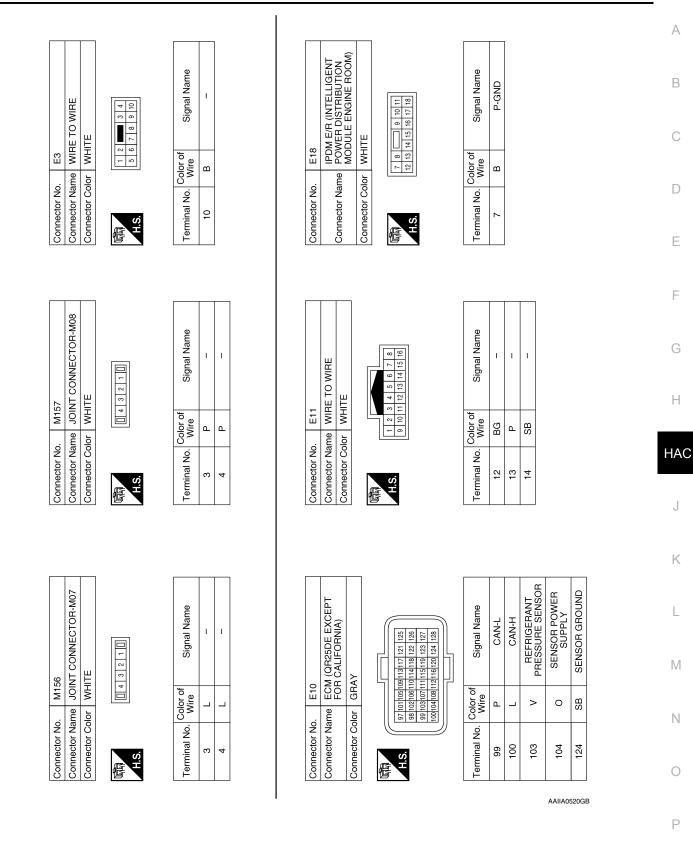

Revision: May 2014

#### < WIRING DIAGRAM >

#### [MANUAL AIR CONDITIONER]

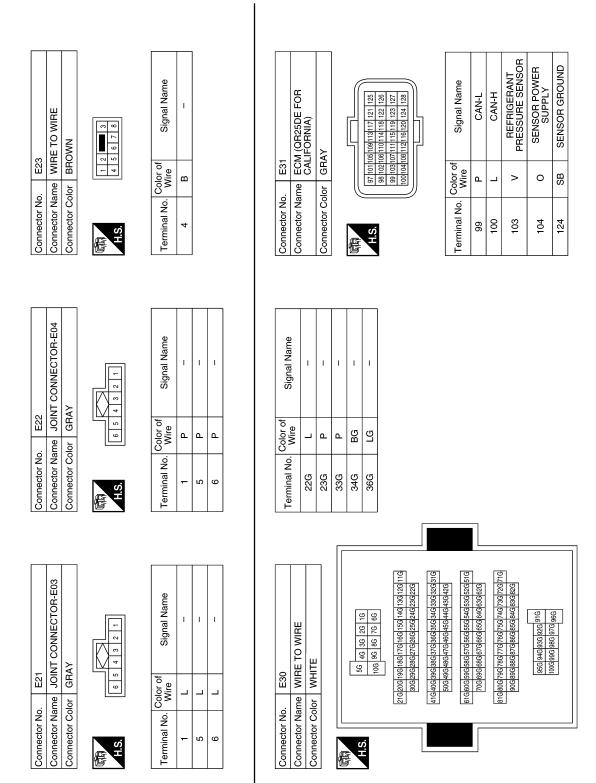


ABIIA1166GB



#### < WIRING DIAGRAM >


#### [MANUAL AIR CONDITIONER]

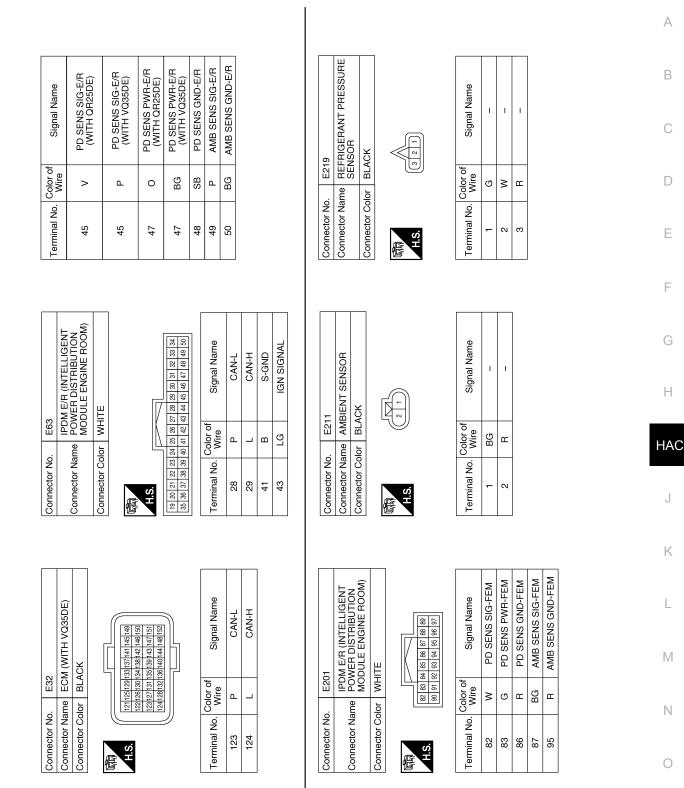

AAIIA0521GB

#### < WIRING DIAGRAM >

#### [MANUAL AIR CONDITIONER]

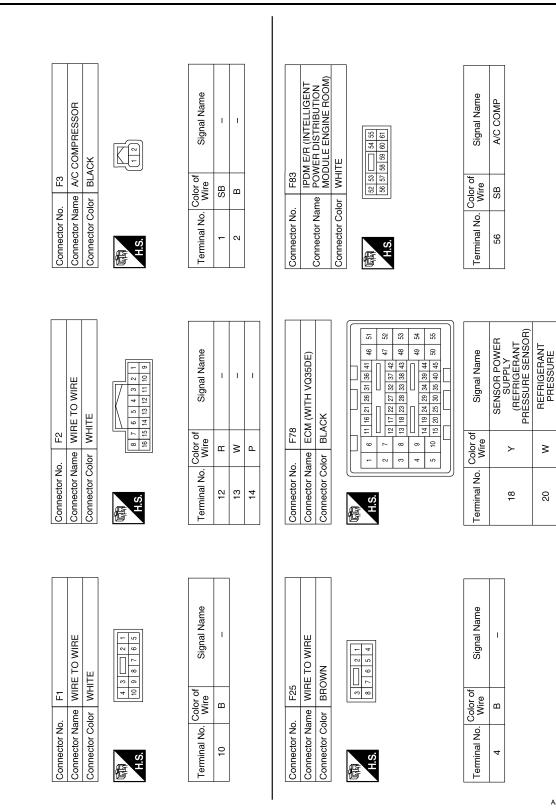

AAIIA0522GB

SENSOR GROUND (REFRIGERANT PRESSURE SENSOR)

٩

25

А

		В
		С
		D
		E
		F
		G
J-4 FUSE BLOCK (J/B) (FRONT BLOWER MOTOR RELAY) –		Н
		HAC
Connector No. Connector Name Connector Color		J
		K
STOR-F10	Signal Name	L
F92 JOINT CONNECTOR-F10 BLACK	Signal	Μ
	Color of Xin of Xin of Color	Ν
Connector No. Connector Name Connector Color	Terminal No. 2 7	0
	AAIIA05250	βB

< BASIC INSPECTION >

# BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000010482044

DETAILED FLOW

**1.**LISTEN TO CUSTOMER COMPLAINT

Listen to customer complaint. Get detailed information about the conditions and environment when the symptom occurs.

>> GO TO 2.

## 2. VERIFY THE SYMPTOM WITH OPERATIONAL CHECK

Verify the symptom with operational check. Refer to HAC-141, "Work Procedure".

#### >> GO TO 3.

 $\mathbf{3}$ .go to appropriate trouble diagnosis

Go to appropriate trouble diagnosis. Refer to HAC-155, "Symptom Table".

>> GO TO 4.

**4**.REPAIR OR REPLACE

Repair or replace the specific parts.

>> GO TO 5.

5.FINAL CHECK

Final check. <u>Is the inspection result normal?</u> YES >> Inspection End.

NO >> GO TO 3.

#### **OPERATION INSPECTION**

#### **OPERATION INSPECTION** А Work Procedure INFOID:000000010482045 DESCRIPTION The purpose of the operational check is to check that the individual system operates normally. Check condition : Engine running at normal operating temperature. Check condition : Blower control dial in OFF position. Check condition : REC off (LED extinguished). D Check condition : VENT selected (LED illuminated). Check condition : DEF off (LED extinguished). Ε OPERATION INSPECTION **1.**CHECK BLOWER 1. Rotate the blower control dial clockwise one detent. Blower should operate on low speed. 2. Rotate the blower control dial one detent at a time, and continue checking blower speed until all speeds are checked. Leave blower on maximum speed. Is the test result normal? YES >> GO TO 2. NO >> Refer to <u>HAC-149</u>, "Diagnosis Procedure". Н 2. CHECK A/C SWITCH LED Press A/C switch. 1 A/C switch indicator should turn ON. HAC Is the test result normal? YES >> GO TO 3. NO >> Refer to HAC-153, "Diagnosis Procedure". 3.check a/c switch Confirm that the compressor clutch engages (sound or visual inspection). Κ Is the test result normal? >> GO TO 4. YES NO >> Refer to HAC-152, "Diagnosis Procedure". 4.CHECK FRONT AIR CONTROL MODE LEDS 1. Press D/F ( 🐲 ), FOOT ( 🤳 ), B/L 💝 , and VENT 🍟 , MAX A/C, and DEF ( 🗰 ). M 2. Each button indicator should illuminate. Is the test result normal? YES >> GO TO 5. Ν NO >> Refer to HAC-153, "Diagnosis Procedure". **5.**CHECK DISCHARGE AIR 1. Press D/F ( 🐲 ), FOOT ( 🤳 ), B/L 💝 , and VENT 🍟 and DEF ( 💬 ). Confirm that discharge air comes out according to the air distribution table. Refer to HAC-119, "Door Con-2. trol". Is the test result normal? Ρ YES >> GO TO 6. NO >> Refer to HAC-155, "Symptom Table". **6.**CHECK REC LED

- 1. Press DEF () and make sure LED is off.
- 2. Make sure VENT (\*) or B/L (\*) is selected.
- 3. Press REC (

< BASIC INSPECTION >

#### **OPERATION INSPECTION**

< BASIC INSPECTION >

- 4. Press REC ( 2) switch one more time. REC indicator should go off.
- Is the test result normal?
- YES >> GO TO 7.

NO >> Refer to <u>HAC-153</u>, "Diagnosis Procedure".

7. CHECK INTAKE DOOR OPERATION

- 1. Press REC (
- 2. Listen to the sound of the air coming out of the vent.
- 3. Press REC ( 2) switch one more time. REC indicator should go off.
- 4. There should be an audible change to the sound of the air flowing out of the vent.

Is the test result normal?

YES >> GO TO 8.

NO >> Refer to <u>HAC-147, "Diagnosis Procedure"</u>.

8.CHECK TEMPERATURE DECREASE

- 1. Press A/C switch.
- 2. Rotate temperature control dial counterclockwise until maximum cold.
- 3. Check for cold air at selected discharge air outlets.

Is the test result normal?

YES >> GO TO 9.

NO >> Refer to HAC-156, "Component Function Check".

**9.**CHECK TEMPERATURE INCREASE

- 1. Rotate temperature control dial clockwise until maximum hot.
- 2. Check for hot air at appropriate discharge air outlets.

Is the test result normal?

- YES >> Inspection End.
- NO >> Refer to <u>HAC-158</u>, "Component Function Check".

DTC/CIRCUI	T DIAGNOS	IS	
MODE DOOR M	OTOR		
Diagnosis Procedu	ire		INFOID:00000001048204
1.check mode doo	R MOTOR POWER SI	JPPLY	
<ol> <li>Turn ignition switch</li> <li>Check voltage betw</li> </ol>		harness connector and	ground.
_	+		Voltage
	de door motor		(Approx.)
Connector	Terminal	C	Detter veltere
M127 s the inspection result r	1	Grour	ad Battery voltage
	OFF. oor motor and front air		d ground.
Mod	le door motor		Continuity
Connector	Terminal		Continuity
M127	2	Grour	id Yes
<ol> <li>CHECK MODE DOO</li> <li>Connect mode door</li> <li>Turn ignition switch</li> </ol>	r motor and front air con ON.	ntrol connector.	nector and ground using oscilloscope.
+	ł		
Mode do		_	Output waveform
Connector	Terminal		
M127	3	Ground	
	5		→ ← 20 ms

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 6.

**4.**CHECK INSTALLATION OF MODE DOOR MOTOR

Check mode door motor is properly installed. Refer to <u>HAC-164</u>, "Exploded View". Is the inspection result normal?

#### MODE DOOR MOTOR

#### < DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace mode door motor. Refer to <u>HAC-165</u>, "MODE DOOR MOTOR : Removal and Installation".
- NO >> Repair or replace malfunctioning part.

**5.**CHECK MODE DOOR MOTOR POWER SUPPLY CIRCUIT FOR OPEN

- 1. Turn ignition switch OFF.
- 2. Disconnect mode door motor and front air control connector.
- 3. Check continuity between mode door motor harness connector and front air control connector.

Mode door motor		Front air control		Continuity
Connector	Terminal	Connector	Terminal	Continuity
M127	1	M37	13	Yes

#### Is the inspection result normal?

YES >> Replace front air control. Refer to <u>HAC-162</u>, "Removal and Installation".

NO >> Repair harness or connector.

#### 6.CHECK REAR AIR MIX DOOR MOTOR LIN SIGNAL CIRCUIT FOR OPEN

- 1. Turn ignition switch OFF.
- 2. Disconnect mode door motor and front air control connector.
- 3. Check continuity between mode door motor harness connector and front air control harness connector.

Mode door motor		Front air control		Continuity
Connector	Terminal	Connector	Terminal	Continuity
M127	3	M37	12	Yes

Is the inspection result normal?

YES >> Replace front air control. Refer to <u>HAC-162</u>, "Removal and Installation".

NO >> Repair harness or connector.

### AIR MIX DOOR MOTOR

AIR MIX DOOR	MOTOR			
Diagnosis Procedu	ure			INFOID:000000010482047
<b>1.</b> CHECK AIR MIX DO	OOR MOTOR POWER	SUPPLY		
<ol> <li>Turn ignition switch</li> <li>Check voltage betv</li> </ol>		r harness connector and	d ground.	
	+			Voltage
	nix door motor			(Approx.)
Connector M130	Terminal	Grou	Ind	Battery voltage
	OOR MOTOR GROUNI OFF. door motor and front ai			
Air r	nix door motor			Continuity
Connector	Terminal		-	Continuity
M130	2	Grou	Ind	Yes
3. CHECK AIR MIX DC 1. Connect air mix do 2. Turn ignition switch 3. Confirm output way	or motor and front air c ON. veform between air mix	ontrol connector.	nnector and g	round using oscilloscope.
	+ oor motor	_		Output wayoform
Connector	Terminal			Output waveform
M130	3	Ground	(V) 15 10 5 0	→ ← 20 ms
Is the inspection result	normal?	1		
YES >> GO TO 4. NO >> GO TO 6. <b>4.</b> CHECK INSTALLAT	ION OF AIR MIX DOO	R MOTOR		
Check air mix door mot			ploded View".	
Is the inspection result	normal?			
tion".	<sup>-</sup> mix door motor. Refer eplace malfunctioning p		DOOR MOTO	DR : Removal and Installa-

Revision: May 2014

< DTC/CIRCUIT DIAGNOSIS >

### HAC-145

### AIR MIX DOOR MOTOR

#### < DTC/CIRCUIT DIAGNOSIS >

# 5. Check air mix door motor power supply circuit for open

#### 1. Turn ignition switch OFF.

- 2. Disconnect air mix door motor and front air control connector.
- 3. Check continuity between air mix door motor harness connector and front air control connector.

Air mix d	oor motor	Front a	ir control	Continuity
Connector	Terminal	Connector	Terminal	Continuity
M130	1	M37	13	Yes

Is the inspection result normal?

YES >> Replace front air control. Refer to <u>HAC-162</u>, "Removal and Installation".

NO >> Repair harness or connector.

# 6. Check air mix door motor lin signal circuit for open

1. Turn ignition switch OFF.

2. Disconnect air mix door motor and front air control connector.

3. Check continuity between air mix door motor harness connector and front air control harness connector.

Air mix d	ix door motor Front air control			Continuity	
Connector	Terminal	Connector Terminal		Continuity	
M130	3	M37	12	Yes	

Is the inspection result normal?

YES >> Replace front air control. Refer to <u>HAC-162</u>, "Removal and Installation".

NO >> Repair harness or connector.

### INTAKE DOOR MOTOR

	10010 2		<b>6</b>		
NTAKE DOOR M	IOTOR				
Diagnosis Procedur	е			INFOID:00000001048204	
1. CHECK INTAKE DOC	R MOTOR POWER	SUPPLY			
1. Turn ignition switch (					
	en intake door motor	harness conne	ctor and ground.		
	+				
Intak	e door motor		_	Voltage	
Connector	Terminal			(Approx.)	
M126	1		Ground	Battery voltage	
Is the inspection result no	ormal?				
YES >> GO TO 2. NO >> GO TO 5.					
<b>2.</b> CHECK INTAKE DOC					
1. Turn ignition switch (					
<ol><li>Disconnect intake do</li></ol>	oor motor and front air				
3. Check continuity bet	ween intake door mot	or harness con	nector and groun	d.	
Intake	e door motor				
Connector	Terminal		—	Continuity	
M126	2		Ground	Yes	
2. Turn ignition switch (	motor and front air cc	ntrol connector		nd ground using oscilloscope.	
+					
Intake doo	r motor	_		Output waveform	
Connector	Terminal				
M126	3	Ground	3	(V) 15 10 5 0 •••••••••••••••••••••••••••••••	
Is the inspection result no	ormal?	I			
YES >> GO TO 4. NO >> GO TO 6.					
4. CHECK INSTALLATIO	ON OF INTAKE DOOF	RMOTOR			
Check intake door motor	is properly installed. I	Refer to HAC-1	64, "Exploded Vie	<u>ew"</u> .	
Is the inspection result no	ormal?		-		
YES >> Replace inta tion".	ke door motor. Refer	to <u>HAC-165, "I</u>	NTAKE DOOR M	OTOR : Removal and Installa	
	place malfunctioning p	oart.			
Revision: May 2014		HAC-147		2015 Altima Sedan	

Revision: May 2014

< DTC/CIRCUIT DIAGNOSIS >

### HAC-147

2015 Altima Sedan

### INTAKE DOOR MOTOR

#### < DTC/CIRCUIT DIAGNOSIS >

# 5. Check intake door motor power supply circuit for open

#### 1. Turn ignition switch OFF.

- 2. Disconnect intake door motor and front air control connector.
- 3. Check continuity between intake door motor harness connector and front air control connector.

Intake d	oor motor	Front ai	ir control	Continuity	
Connector	Terminal	Connector Terminal		Continuity	
M126	1	M37	13	Yes	

Is the inspection result normal?

YES >> Replace front air control. Refer to <u>HAC-162</u>, "Removal and Installation".

NO >> Repair harness or connector.

# 6. Check intake door motor lin signal circuit for open

1. Turn ignition switch OFF.

2. Disconnect intake door motor and front air control.

3. Check continuity between intake door motor harness connector and front air control harness connector.

Intake de	oor motor	Front ai	Continuity		
Connector	Terminal	Connector Terminal		Continuity	
M126	3	M37	12	Yes	

Is the inspection result normal?

YES >> Replace front air control. Refer to <u>HAC-162</u>, "Removal and Installation".

NO >> Repair harness or connector.

### **BLOWER MOTOR**

DTC/CIRCUIT I	DIAGNOSIS >			[MANUAL AIR CONDITIONER]
LOWER M	OTOR			
iagnosis Pro	cedure			INFOID:000000010482049
egarding Wiring	Diagram information	on, refer to <u>HAC-13</u>	80, "Wiring Diagram'	<u>.</u>
.CHECK FUSE				
Turn ignition s Check 15A fu		27, located in fuse t	block (J/B)].	
NOTE:	6, "Terminal Arran	aement"		
the inspection re		<u>gement</u> .		
/ES >> GO T	0 2.			
		after repairing the	affected circuit.	
	ER MOTOR POW			
Disconnect ble Turn ignition s	ower motor conne	ctor.		
		motor harness conr	nector and ground.	
		Γ		
	+			Voltage
Blowe	r motor	-	-	(Approx.)
Connector	Terminal			(++)
Connector M31	Terminal 38	Gro	und	
M31	38	Gro	und	Battery voltage
M31 the inspection re (ES >> GO Te	38 esult normal? O 3.	Gro	und	
M31 the inspection re /ES >> GO Te NO >> GO Te	38 esult normal? O 3. O 6.		und	
M31 the inspection re /ES >> GO Te NO >> GO Te	38 esult normal? O 3.		und	
M31 the inspection re (ES >> GO Te IO >> GO Te CHECK BLOW Turn ignition s	38 esult normal? O 3. O 6. /ER MOTOR GRO switch OFF.	UND CIRCUIT	und	Battery voltage
M31 the inspection re (ES >> GO To IO >> GO To CHECK BLOW Turn ignition s Check continu	38 esult normal? O 3. O 6. /ER MOTOR GRO switch OFF.	UND CIRCUIT		Battery voltage
M31 the inspection re ES >> GO To IO >> GO To CHECK BLOW Turn ignition s Check continu	38 esult normal? O 3. O 6. ER MOTOR GRO witch OFF. uity between blowe	UND CIRCUIT		Battery voltage
M31 the inspection re (ES >> GO Te IO >> GO Te CHECK BLOW Turn ignition s Check continu Blowe	38 esult normal? O 3. O 6. ZER MOTOR GRO witch OFF. uity between blowe	UND CIRCUIT	onnector and ground	Battery voltage
M31 the inspection rev (ES >> GO Tevensor of the second	38 esult normal? O 3. O 6. /ER MOTOR GRO switch OFF. uity between blowe r motor Terminal 39 esult normal? O 4. r harness or conne	UND CIRCUIT er motor harness co  Gro ector.	onnector and ground	Battery voltage
M31 the inspection re (ES >> GO To NO >> GO To CHECK BLOW Turn ignition so Check continue Blowe Connector M31 the inspection re (ES >> GO To NO >> Repai .CHECK BLOW Disconnect fro	38 esult normal? O 3. O 6. /ER MOTOR GRO switch OFF. uity between blowe r motor r motor Terminal 39 esult normal? O 4. r harness or conne /ER MOTOR CON ont air control conr	UND CIRCUIT er motor harness co Gro ector. TROL SIGNAL CIR nector.	onnector and ground	Battery voltage
M31 the inspection re (ES >> GO To NO >> GO To CHECK BLOW Turn ignition s Check continu Blowe Connector M31 the inspection re (ES >> GO To NO >> Repai CHECK BLOW Disconnect fro Check continu	38 esult normal? O 3. O 6. /ER MOTOR GRO switch OFF. uity between blowe r motor r motor Terminal 39 esult normal? O 4. r harness or conne /ER MOTOR CON ont air control conr	UND CIRCUIT er motor harness co Gro ector. TROL SIGNAL CIR nector.	onnector and ground	Battery voltage  I.  Continuity Yes  ir control harness connector.
M31 the inspection re (ES >> GO To NO >> GO To CHECK BLOW Turn ignition s Check continu Blowe Connector M31 the inspection re (ES >> GO To NO >> Repai .CHECK BLOW Disconnect fro Check continu	38 esult normal? O 3. O 6. FER MOTOR GRO witch OFF. uity between blowe r motor Terminal 39 esult normal? O 4. r harness or conne /ER MOTOR CON ont air control conr	UND CIRCUIT er motor harness co Gro ector. TROL SIGNAL CIR nector. er motor harness co	onnector and ground	Battery voltage I. Continuity Yes

YES >> GO TO 5. NO >> Repair the harness or connector.

5. CHECK BLOWER MOTOR CONTROL SIGNAL

### **BLOWER MOTOR**


#### < DTC/CIRCUIT DIAGNOSIS >

- 1. Reconnect blower motor connector and front air control connector.
- 2. Turn ignition switch ON.
- 3. Operate MODE switch to set air outlet to VENT.
- 4. Change fan speed from Lo to Hi, and check duty ratios between blower motor harness connector and ground by using an oscilloscope.

#### NOTE:

Calculate drive signal duty ratio as shown in the figure. T2 = Approx. 1.6 ms

Blower motor		Condition	Duty ratio
Connector	Terminal	Fan speed (manual) VENT mode	Duty ratio (Approx.)
		1st	25 %
		2nd	33 %
		3rd	41 %
M31	17	4th	51 %
		5th	61 %
		6th	69 %
		7th	81 %

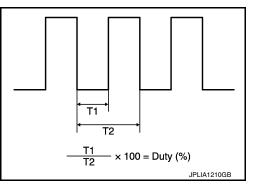

#### Is the inspection result normal?

- YES >> Replace blower motor. Refer to <u>VTL-12</u>, "BLOWER MOTOR : Removal and Installation".
- NO >> Replace front air control. Refer to HAC-162, "Removal and Installation".

**Ó.**CHECK BLOWER MOTOR RELAY GROUND CIRCUIT

#### 1. Turn ignition switch OFF.

2. Check continuity between fuse block (J/B) harness connector and ground.

Fuse block (J/B)			Continuity	
Connector	Terminal		Continuity	
M4	13R	Ground	Yes	

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair harness or connector.

7.CHECK FRONT BLOWER MOTOR RELAY

Check front blower motor relay. Refer to <u>HAC-150</u>, "Component Inspection (Front Blower Motor Relay)". Is the inspection result normal?

- YES >> Repair harness or connector between blower motor and fuse block (J/B).
- NO >> Replace front blower motor relay.

#### Component Inspection (Blower Motor)

1.CHECK BLOWER MOTOR

- 1. Connect battery voltage to terminal 1 of blower motor.
- 2. Connect ground to terminal 2 of blower motor.

#### Does the blower fan operate?

- YES >> Intermittent incident. Refer to GI-44, "Intermittent Incident".
- NO >> Replace blower motor. Refer to VTL-12, "BLOWER MOTOR : Removal and Installation".

#### Component Inspection (Front Blower Motor Relay)

**1.**CHECK BLOWER RELAY

1. Turn ignition switch OFF.

2. Remove front blower motor relay.

INFOID:000000010482050

INFOID:000000010482051

### **BLOWER MOTOR**

#### < DTC/CIRCUIT DIAGNOSIS >


3. Check continuity between front blower motor relay terminals 3 and 5 when voltage is supplied between terminals 1 and 2.

Term	Terminals		Continuity
3	5	ON	Yes
5	5	OFF	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace front blower motor relay.

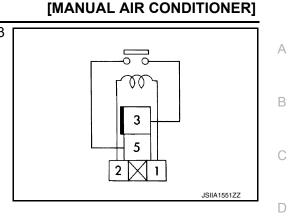



HAC

J

Κ

Μ

Ν

Ο

Ρ

Е

F

G

Н

Revision: May 2014

### < DTC/CIRCUIT DIAGNOSIS >

## MAGNET CLUTCH

Component Function Check

INFOID:000000010482052

1. CHECK MAGNET CLUTCH OPERATION

Perform auto active test of IPDM E/R. Refer to PCS-8, "Diagnosis Description".

Does it operate normally?

YES >> Inspection End.

NO >> Refer to <u>HAC-152</u>, "Diagnosis Procedure".

### **Diagnosis** Procedure

INFOID:000000010482053

Regarding Wiring Diagram information, refer to <u>HAC-130, "Wiring Diagram"</u>.

### 1.CHECK FUSE

- 1. Turn ignition switch OFF.
- 2. Check 10A fuse (No. 53, located in IPDM E/R). NOTE:

Refer to PG-68, "Fuse, Connector and Terminal Arrangement".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the blown fuse after repairing the affected circuit.

### 2.CHECK MAGNET CLUTCH POWER SUPPLY CIRCUIT

- 1. Disconnect compressor connector and IPDM E/R connector.
- 2. Check continuity between compressor harness connector and IPDM E/R harness connector.

Compressor		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F3	1	F83	56	Yes

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

#### ${f 3.}$ CHECK MAGNET CLUTCH GROUND CIRCUIT

1. Disconnect compressor connector.

2. Check continuity between compressor harness connector and ground.

Comp	Compressor		Continuity
Connector	Terminal	_	Continuity
F3	2	Ground	Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

#### **4.**CHECK MAGNET CLUTCH

Directly apply battery voltage to the magnet clutch. Check operation visually and by sound.

#### Does it operate normally?

YES >> Replace IPDM E/R. Refer to PCS-32, "Removal and Installation".

NO >> Replace magnet clutch. Refer to HA-31, "MAGNET CLUTCH : Removal and Installation".

### POWER SUPPLY AND GROUND CIRCUIT FOR FRONT AIR CONTROL < DTC/CIRCUIT DIAGNOSIS > [MANUAL AIR CONDITIONER]

### POWER SUPPLY AND GROUND CIRCUIT FOR FRONT AIR CONTROL

### Description

#### COMPONENT DESCRIPTION

Front air control.

The front air control has a built-in microcomputer that processes information sent from various sensors needed for air conditioner operation. The air mix door motor, the mode door motor, the intake door motor, the blower motor and the A/C compressor are then controlled.

### Component Function Check

### **1.**CHECK OPERATION

- 1. Turn the blower motor dial clockwise and verify the blower speed increases and that one of the LEDs illuminates on the mode switch.
- 2. Press the mode switches and verify that the modes change, the LEDs illuminate, and that air flows from the various vents.
- 3. Turn the temperature control dial and verify the temperature changes at the selected vents.
- 4. Press the DEF and REC buttons and verify air flow changes.

#### Does it operate normally?

YES >> Inspection End.

NO >> Perform trouble diagnosis for the front air control system. Refer to <u>HAC-153</u>, "Diagnosis Proce-<u>dure"</u>.

#### **Diagnosis** Procedure

Regarding Wiring Diagram information, refer to HAC-130, "Wiring Diagram".

### 1.CHECK FRONT AIR CONTROL POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect the front air control connector.
- 3. Turn ignition switch ON.
- 4. Check voltage between front air control harness connector M37 terminals 1, 2 and ground.

(+)		(-)	Voltage			
Front air	control			Ignition switch position		-
Connector	Terminal		OFF	ACC	ON	M
M37	1	Ground	Battery voltage	Battery voltage	Battery voltage	
IVIS7	2	Ground	Approx. 0V	Approx. 0V	Battery voltage	-

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2.CHECK FUSE

Check fuses [Nos. 14 and 30, located in the fuse block (J/B)].

NOTE: Refer to PG-66, "Terminal Arrangement".

Is the inspection result normal?

YES >> Check harness for open circuit. Repair or replace if necessary.

NO >> Check harness for short circuit. Repair or replace if necessary.

 ${f 3}.$ CHECK FRONT AIR CONTROL GROUND CIRCUIT

1. Turn ignition switch OFF.

### HAC-153

HAC

Н

А

В

D

E

F

INFOID:000000010482054

INFOID:000000010482055

INFOID:000000010482056

K

Ν

### POWER SUPPLY AND GROUND CIRCUIT FOR FRONT AIR CONTROL

#### < DTC/CIRCUIT DIAGNOSIS >

### [MANUAL AIR CONDITIONER]

2. Check continuity between front air control harness connector M37 terminals 9 and ground.

Front a	ir control		Continuity	
Connector	Terminal	_	Continuity	
M37	9	Ground	Yes	

Is the inspection result normal?

YES >> Replace the front air control. Refer to <u>HAC-162</u>, "Removal and Installation".

NO >> Repair the harnesses or connectors.

### HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS < SYMPTOM DIAGNOSIS > [MANUAL AIR CONDITIONER]

# SYMPTOM DIAGNOSIS HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS

### Symptom Table

INFOID:000000010482057 B

А

### SYMPTOM TABLE

Symptom	Reference Page		
A/C system does not come on.	Go to Trouble Diagnosis Procedure for A/C System.	HAC-153, "Diagno- sis Procedure"	
Air outlet does not change.	Co to Trouble Diagnosis Broodure for Mode Deer Meter (UN)	HAC-143, "Diagno-	
Mode door motor does not operate normally.	Go to Trouble Diagnosis Procedure for Mode Door Motor. (LIN)	sis Procedure"	
Discharge air temperature does not change.			
Air mix door motor does not operate normal- ly.	Go to Trouble Diagnosis Procedure for Air Mix Door Motor. (LIN)	HAC-145, "Diagno- sis Procedure"	
Intake door does not change.	Go to Trouble Diagnosis Procedure for Intake Door Motor. (LIN)	HAC-147, "Diagno-	
Intake door motor does not operate normally.		sis Procedure"	
Blower motor operation is malfunctioning.	Go to Trouble Diagnosis Procedure for Blower Motor.	HAC-149, "Diagno- sis Procedure"	
Magnet clutch does not engage.	Go to Trouble Diagnosis Procedure for Magnet Clutch.	HAC-152, "Diagno- sis Procedure"	
Insufficient cooling	Go to Trouble Diagnosis Procedure for Insufficient Cooling.	HAC-156, "Compo- nent Function Check"	
Insufficient heating	Go to Trouble Diagnosis Procedure for Insufficient Heating.	HAC-158, "Compo- nent Function Check"	ł
Noise	Go to Trouble Diagnosis Procedure for Noise.	HA-20, "Symptom Table"	

K

L

Μ

Ν

Ο

INFOID:000000010482058

### INSUFFICIENT COOLING

Component Function Check

SYMPTOM: Insufficient cooling

INSPECTION FLOW

**1.** CONFIRM SYMPTOM BY PERFORMING OPERATION CHECK - TEMPERATURE DECREASE

- 1. Press the A/C switch.
- 2. Turn temperature control dial counterclockwise to maximum cold.
- 3. Check for cold air at discharge air outlets.

Can a symptom be duplicated?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check and check for any symptoms. Refer to <u>HAC-141, "Work Procedure"</u>. Does another symptom exist?

YES >> Refer to <u>HAC-155</u>, "Symptom Table".

NO >> System OK.

 $\mathbf{3}$ . CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

**4.** CHECK DRIVE BELTS

Check A/C compressor belt tension. Refer to <u>EM-19, "Checking Drive Belts"</u> (QR25DE) or <u>EM-135, "Checking</u> <u>Drive Belt"</u> (VQ35DE).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Adjust or replace compressor belt. Refer to <u>EM-19, "Tension Adjustment"</u> (QR25DE) or <u>EM-135,</u> <u>"Tension Adjustment"</u> (VQ35DE).

**b.** CHECK AIR MIX DOOR MOTOR OPERATION

Check and verify air mix door mechanism for smooth operation.

Does air mix door operate correctly?

YES >> GO TO 6.

NO >> Check air mix door motor circuit. Refer to <u>HAC-145. "Diagnosis Procedure"</u>.

**6.** CHECK COOLING FAN MOTOR OPERATION

Check and verify cooling fan motor for smooth operation.

Does cooling fan motor operation correctly?

YES >> GO TO 7.

NO >> Check cooling fan motor. Refer to <u>EC-500, "Component Function Check"</u> (QR25DE) or <u>EC-998,</u> <u>"Component Function Check"</u> (VQ35DE).

7. CHECK RECOVERY/RECYCLING EQUIPMENT BEFORE USAGE

Check recovery/recycling equipment before connecting to vehicle. Verify there is no pressure in the recovery/ recycling equipment by checking the gauges. If pressure exists, recover refrigerant from equipment lines.

>> GO TO 8.

8. CHECK REFRIGERANT PURITY

1. Connect recovery/recycling equipment to vehicle.

2. Confirm refrigerant purity in supply tank using recovery/recycling and refrigerant identifier.

Is the inspection result normal?

Revision: May 2014

### **INSUFFICIENT COOLING**

	-
YES >> GO TO 9. NO >> Check contaminated refrigerant. Refer to <u>HA-4, "Contaminated Refrigerant"</u> .	A
9. CHECK REFRIGERANT PRESSURE	
Check refrigerant pressure with manifold gauge connected. Refer to <u>HA-28, "Inspection"</u> .	В
Is the inspection result normal?	
YES >> Perform diagnostic work flow. Refer to <u>HA-15, "Workflow"</u> . NO >> GO TO 10.	0
10. CHECK FOR EVAPORATOR FREEZE UP	C
Start engine and run A/C. Check for evaporator freeze up.	
Does evaporator freeze up?	D
YES >> Perform diagnostic work flow. Refer <u>HA-15, "Workflow"</u> . NO >> GO TO 11.	
11. CHECK AIR DUCTS	E
Check ducts for air leaks.	
Is the inspection result normal?	F
YES >> System OK.	
NO >> Repair air leaks.	
	G

Н

HAC

J

Κ

L

Μ

Ν

Ο

Ρ

< SYMPTOM DIAGNOSIS >

INFOID:000000010482059

### **INSUFFICIENT HEATING**

Component Function Check

SYMPTOM: Insufficient heating

INSPECTION FLOW

1. CONFIRM SYMPTOM BY PERFORMING OPERATION CHECK - TEMPERATURE INCREASE

1. Turn temperature control dial clockwise to maximum heat.

2. Check for hot air at discharge air outlets.

Can a symptom be duplicated?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK FOR ANY SYMPTOMS

Perform a complete operational check and check for any symptoms. Refer to <u>HAC-141, "Work Procedure"</u>. <u>Does another symptom exist?</u>

YES >> Refer to <u>HAC-155</u>, "Symptom Table".

NO >> System OK.

3. CHECK FOR SERVICE BULLETINS

Check for any service bulletins.

>> GO TO 4.

#### **4.** CHECK ENGINE COOLING SYSTEM

- 1. Check for proper engine coolant level. Refer to <u>CO-9</u>, "System Inspection" (QR25DE) or <u>CO-34</u>, "System Inspection" (VQ35DE).
- 2. Check hoses for leaks or kinks.
- 3. Check radiator cap. Refer to <u>CO-9, "System Inspection"</u> (QR25DE) or <u>CO-34, "System Inspection"</u> (VQ35DE).
- 4. Check for air in cooling system.

>> GO TO 5.

#### **5.** CHECK AIR MIX DOOR MOTOR OPERATION

Check and verify air mix door mechanism for smooth operation.

Does air mix door operate correctly?

YES >> GO TO 6.

NO >> Check the air mix door motor circuit. Refer to <u>HAC-145, "Diagnosis Procedure"</u>.

**6.** CHECK AIR DUCTS

Check for disconnected or leaking air ducts.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair all disconnected or leaking air ducts.

7. CHECK HEATER HOSE TEMPERATURES

- 1. Start engine and warm it up to normal operating temperature.
- 2. Touch both the inlet and outlet heater hoses. The inlet hose should be hot and the outlet hose should be warm.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Both hoses warm: GO TO 9..

8. CHECK ENGINE COOLANT SYSTEM

### **INSUFFICIENT HEATING**

SYMPTOM DIAGNOSIS > [MANUAL AIR CONDITIONER]	
check thermostat operation. Refer to <u>CO-23, "Removal and Installation"</u> (QR25DE) or <u>CO-48, "Removal and installation"</u> (VQ35DE).	A
the inspection result normal?	
YES >> System OK. >> Repair or replace as necessary.	В
. CHECK HEATER HOSES	
check heater hoses for proper installation.	С
<ul> <li>YES &gt;&gt; System OK.</li> <li>NO &gt;&gt; 1. Back flush heater core.</li> <li>2. Drain the water from the system.</li> <li>3. Refill system with new engine coolant. Refer to <u>CO-10, "Changing Engine Coolant"</u></li> </ul>	D
(QR25DE) or <u>CO-35, "Changing Engine Coolant"</u> (VQ35DE). 4. To retest GO TO 10.	Е
0. CHECK HEATER HOSE TEMPERATURES	
<ul> <li>Start engine and warm up to normal operating temperature.</li> <li>Touch both the inlet and outlet heater hoses. The inlet hose should be hot and the outlet hose should be warm</li> </ul>	F
the inspection result normal?	G
YES >> System OK. NO >> Replace heater core. Refer to <u>HA-40, "HEATER CORE : Removal and Installation"</u> .	

Н

J

Κ

L

Μ

Ν

0

#### < SYMPTOM DIAGNOSIS >

### COMPRESSOR DOES NOT OPERATE

### Description

Symptom: Compressor does not operate.

#### Diagnosis Procedure

NOTE:

- Perform self-diagnoses with CONSULT before performing symptom diagnosis. If DTC is detected, perform the corresponding diagnosis.
- Check that refrigerant system is properly charged. If refrigerant amount is below the proper amount, perform inspection of refrigerant leakage.

1. CHECK MAGNET CLUTCH OPERATION

Check magnet clutch. Refer to HAC-87, "Component Function Check".

Does it operate normally?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

2.CHECK REFRIGERANT PRESSURE SENSOR

Check refrigerant pressure sensor. Refer to <u>EC-524</u>, "Component Function Check" (QR25DE) or <u>EC-1024</u>, "Component Function Check" (VQ35DE).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

3.CHECK FRONT AIR CONTROL OUTPUT SIGNAL

With CONSULT

Check "FAN ON" and "" in "Data Monitor" of "BCM".

Monitor item Condition		Status	
AIR COND SW	A/C switch	ON On	On
AIR COID SW	A/C Switch	OFF	Off
FAN ON	Blower motor	ON	On
		OFF	Off

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace front air control. Refer to <u>HAC-162, "Removal and Installation"</u>.

**4.**CHECK ECM INPUT SIGNAL

#### (I) With CONSULT

Check "AIR COND SIG" and "HEATER FAN SW" in "Data Monitor" of "ECM".

Monitor item	Condition	Condition Status	
AIR COND SIG	A/C switch	ON	On
AIR COND SIG	A/C switch	OFF	Off
HEATER FAN SW	Blower motor	ON	On
		OFF	Off

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check CAN communication system. Refer to LAN-16, "Trouble Diagnosis Flow Chart".

**5.**CHECK IPDM E/R INPUT SIGNAL

With CONSULT

INFOID:000000010482060

INFOID:000000010482061

### **COMPRESSOR DOES NOT OPERATE**

#### < SYMPTOM DIAGNOSIS >

[MANUAL AIR CONDITIONER]

#### 1. Start engine.

#### 2. Check "AC COMP REQ" in "Data Monitor" of "IPDM E/R".

Monitor item	Condition		Status	
AC COMP REQ	A/C switch	ON	On	В
		OFF	Off	

Is the inspection result normal?

YES >> Inspection End.

NO >> Check CAN communication system. Refer to LAN-16, "Trouble Diagnosis Flow Chart".

Н

А

С

D

Е

F

HAC

J

Κ

L

Μ

Ν

Ο

# < REMOVAL AND INSTALLATION >


# REMOVAL AND INSTALLATION FRONT AIR CONTROL

Removal and Installation

INFOID:000000010482062

#### REMOVAL

- 1. Remove the cluster lid C lower. Refer to IP-20, "Cluster Lid C Lower".
- 2. Remove the front air control screws (A).

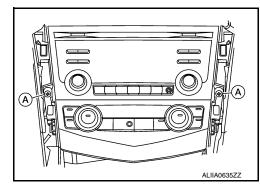

3. Disconnect the harness connector from the front air control and remove.

#### INSTALLATION

Installation is in the reverse order of removal.

< REMOVAL AND INSTALLATION >	[MANUAL AIR CONDITIONER]	
REFRIGERANT PRESSURE SENSOR		A
Removal and Installation	INFOID:000000010482064	A
REMOVAL		В
1. Discharge the refrigerant. Refer to <u>HA-23, "Recycle Refrigerant"</u> .		
2. Remove the front bumper fascia. Refer to EXT-17, "Removal and In	stallation".	_
3. Disconnect the harness connector from the refrigerant pressure sen	sor.	C
<ul> <li>Remove the refrigerant pressure sensor.</li> <li>CAUTION:</li> <li>Cap or wrap the opening of the refrigerant pressure sensor was a sensor w</li></ul>	vith suitable material such as vinyl	D
tape to avoid the entry of air.		
INSTALLATION Installation is in the reverse order of removal.		E
<ul> <li>Do not reuse O-ring.</li> <li>Apply A/C oil to the O-ring of the refrigerant pressure sensor for i</li> <li>After charging refrigerant, check for leaks. Refer to <u>HA-21, "Leak</u>."</li> </ul>		F
		G

Н

HAC

J

Κ

L

Μ

Ν


Ο

# < REMOVAL AND INSTALLATION >

# DOOR MOTOR

Exploded View

INFOID:000000010482065

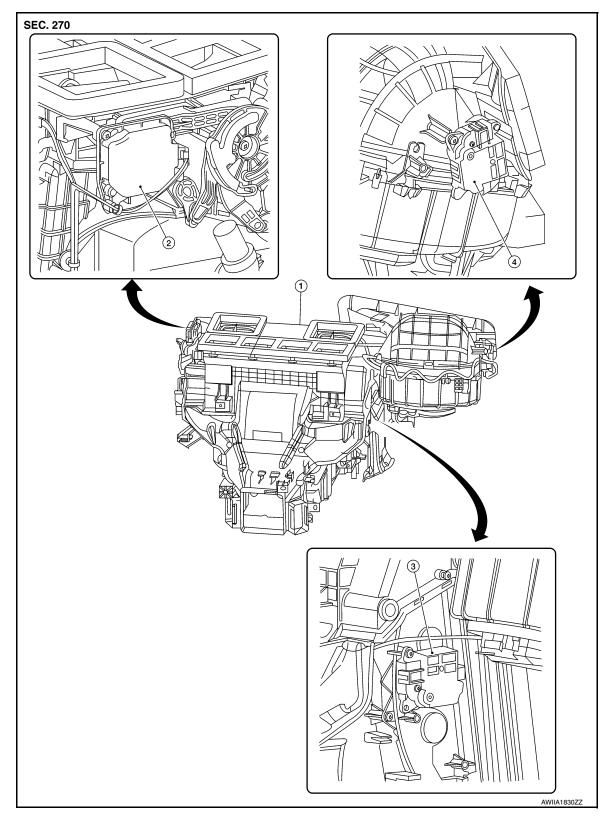

- 1. Front heating and cooling unit assembly 2. Mode door motor
- 3. Air mix door motor

4. Intake door motor

< REMOVAL AND INSTALLATION >	[MANUAL AIR CONDITIONER]
INTAKE DOOR MOTOR	
INTAKE DOOR MOTOR : Removal and Installation	INFOID:000000010482066
<ol> <li>REMOVAL</li> <li>Remove the glove box assembly. Refer to <u>IP-22, "Removal and Install</u></li> <li>Disconnect the harness connector from the intake door motor.</li> <li>Remove the intake door motor screws and the intake door motor.</li> <li>INSTALLATION</li> </ol>	lation".
Installation is in the reverse order of removal. MODE DOOR MOTOR	
MODE DOOR MOTOR : Removal and Installation	INFOID:000000010482067
<ol> <li>REMOVAL</li> <li>Remove the instrument lower panel LH. Refer to <u>IP-21, "Removal and</u></li> <li>Disconnect the harness connector from the mode door motor.</li> <li>Remove the mode door motor screws and the mode door motor.</li> </ol>	Installation".
INSTALLATION Installation is in the reverse order of removal. AIR MIX DOOR MOTOR	
AIR MIX DOOR MOTOR : Removal and Installation	INFOID:000000010482068
REMOVAL	
<ol> <li>Remove the glove box assembly. Refer to <u>IP-22</u>, "<u>Removal and Install</u></li> <li>Remove the upper floor connecting duct (RH). Refer to <u>HA-38</u>, "<u>Explo</u></li> <li>Disconnect the harness connector from the air mix door motor.</li> <li>Remove the air mix door motor screws and the air mix door motor.</li> </ol>	
INSTALLATION Installation is in the reverse order of removal.	