

SECTION **BRC**

BRAKE CONTROL SYSTEM

A
B
C
D
E

CONTENTS

		BRC
VDC/TCS/ABS		
BASIC INSPECTION	4	
DIAGNOSIS AND REPAIR WORKFLOW	4	
Work Flow	4	
Diagnostic Work Sheet	7	
INSPECTION AND ADJUSTMENT	8	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	8	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description	8	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement	8	
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION	8	
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description	8	
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement	8	
CALIBRATION OF DECEL G SENSOR	9	
CALIBRATION OF DECEL G SENSOR : Description	9	
CALIBRATION OF DECEL G SENSOR : Special Repair Requirement	9	
SYSTEM DESCRIPTION	11	
VDC	11	
System Diagram	11	
Hydraulic Circuit Diagram	12	
System Description	12	
Component Parts Location	13	
Component Description	14	
TCS	15	
System Diagram	15	
System Description	15	
Component Parts Location	16	
Component Description	17	
ABS	18	
System Diagram	18	
System Description	18	
Component Parts Location	19	
Component Description	20	
EBD	21	
System Diagram	21	
System Description	21	
Component Parts Location	22	
Component Description	23	
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]	24	
CONSULT Function (ABS)	24	
DTC/CIRCUIT DIAGNOSIS	29	
C1101, C1102, C1103, C1104 WHEEL SENSOR-1	29	
DTC Logic	29	
Diagnosis Procedure	29	
C1105, C1106, C1107, C1108 WHEEL SENSOR-2	33	
DTC Logic	33	
Diagnosis Procedure	33	
C1109 POWER AND GROUND SYSTEM	35	
Description	35	
DTC Logic	35	
Diagnosis Procedure	35	
Special Repair Requirement	36	
C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	37	
DTC Logic	37	
Diagnosis Procedure	37	
Special Repair Requirement	37	

G
H
I
J
K
L
M
N
O
P

C1111 ABS MOTOR, MOTOR RELAY SYSTEM	38	Diagnosis Procedure (Front Pressure Sensor)	57
Description	38	Diagnosis Procedure (Rear Pressure Sensor)	58
DTC Logic	38	Component Inspection (Front Pressure Sensor) ...	59
Diagnosis Procedure	38	Component Inspection (Rear Pressure Sensor)	59
Component Inspection	39	C1143, C1144 STEERING ANGLE SENSOR...	60
Special Repair Requirement	39	Description	60
C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR	40	DTC Logic	60
Description	40	Diagnosis Procedure	60
DTC Logic	40	Component Inspection	61
Diagnosis Procedure	40	Special Repair Requirement	61
Component Inspection	41	C1155 BRAKE FLUID LEVEL SWITCH	63
Special Repair Requirement	41	Description	63
C1115 WHEEL SENSOR	42	DTC Logic	63
Description	42	Diagnosis Procedure	63
DTC Logic	42	Component Inspection	64
Diagnosis Procedure	42	Special Repair Requirement	64
Component Inspection	43	C1156 ST ANG SEN COM CIR	65
Special Repair Requirement	44	Description	65
C1116 STOP LAMP SWITCH	45	DTC Logic	65
Description	45	Diagnosis Procedure	65
DTC Logic	45	C1160 DECEL G SEN SET	66
Diagnosis Procedure	45	Description	66
Special Repair Requirement	46	DTC Logic	66
C1120, C1122, C1124, C1126 IN ABS SOL	47	Diagnosis Procedure	66
Description	47	C1163 ST ANGLE SEN SAFE	67
DTC Logic	47	Description	67
Diagnosis Procedure	47	DTC Logic	67
Component Inspection	48	Diagnosis Procedure	67
Special Repair Requirement	48	C1164, C1165, C1166, C1167 CV/SV SYSTEM	68
C1121, C1123, C1125, C1127 OUT ABS SOL ..	50	Description	68
Description	50	DTC Logic	68
DTC Logic	50	Diagnosis Procedure	68
Diagnosis Procedure	50	Component Inspection	69
Component Inspection	51	Special Repair Requirement	70
Special Repair Requirement	51	C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER	71
C1130, C1131, C1132, C1133, C1136 ENGINE SIGNAL	53	Description	71
Description	53	DTC Logic	71
DTC Logic	53	Diagnosis Procedure	71
Diagnosis Procedure	53	Component Inspection	72
Special Repair Requirement	53	Special Repair Requirement	72
C1140 ACTUATOR RLY	55	C1179 ABS DELTA S SEN NG	74
Description	55	Description	74
DTC Logic	55	DTC Logic	74
Diagnosis Procedure	55	Diagnosis Procedure	74
Component Inspection	56	Component Inspection	75
Special Repair Requirement	56	Special Repair Requirement	75
C1142 PRESS SENSOR	57	U1000 CAN COMM CIRCUIT	76
Description	57	Description	76
DTC Logic	57	DTC Logic	76
		Diagnosis Procedure	76

VDC OFF SWITCH	77	Diagnosis Procedure	102	
Description	77	THE BRAKING DISTANCE IS LONG	103	A
Component Function Check	77	Diagnosis Procedure	103	
Diagnosis Procedure	77	ABS FUNCTION DOES NOT OPERATE	104	B
Component Inspection	78	Diagnosis Procedure	104	
Special Repair Requirement	78	PEDAL VIBRATION OR ABS OPERATION		C
ABS WARNING LAMP	79	SOUND OCCURS	105	
Description	79	Diagnosis Procedure	105	
Component Function Check	79	VEHICLE JERKS DURING VDC/TCS/ABS		D
Diagnosis Procedure	79	CONTROL	106	
Special Repair Requirement	79	Diagnosis Procedure	106	
BRAKE WARNING LAMP	80	NORMAL OPERATING CONDITION	107	E
Description	80	Description	107	
Component Function Check	80	PRECAUTION	108	BRC
Diagnosis Procedure	80	PRECAUTIONS	108	
Special Repair Requirement	80	Precaution for Supplemental Restraint System		G
VDC OFF INDICATOR LAMP	81	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		
Description	81	SIONER"	108	
Component Function Check	81	Precaution Necessary for Steering Wheel Rota-		H
Diagnosis Procedure	81	tion After Battery Disconnect	108	
Special Repair Requirement	82	Precaution for Brake System	109	
SLIP INDICATOR LAMP	83	Precaution for Brake Control	109	I
Description	83	Precaution for CAN System	110	
Component Function Check	83	PREPARATION	111	J
Diagnosis Procedure	83	PREPARATION	111	
Special Repair Requirement	83	Special Service Tool	111	
ECU DIAGNOSIS INFORMATION	84	Commercial Service Tool	111	K
ABS ACTUATOR AND ELECTRIC UNIT		UNIT REMOVAL AND INSTALLATION ...	112	
(CONTROL UNIT)	84	WHEEL SENSORS	112	L
Reference Value	84	Removal and Installation	112	
Fail-Safe	88	SENSOR ROTOR	113	M
DTC No. Index	89	Removal and Installation	113	
WIRING DIAGRAM	91	ACTUATOR AND ELECTRIC UNIT (ASSEM-		N
BRAKE CONTROL SYSTEM - VDC	91	BLY)	114	
Wiring Diagram	91	Removal and Installation	114	
SYMPTOM DIAGNOSIS	100	STEERING ANGLE SENSOR	116	O
VDC/TCS/ABS	100	Removal and Installation	116	
Symptom Table	100	YAW RATE/SIDE/DECEL G SENSOR	117	P
EXCESSIVE ABS FUNCTION OPERATION		Removal and Installation	117	
FREQUENCY	101			
Diagnosis Procedure	101			
UNEXPECTED PEDAL REACTION	102			

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000011289968

PRECAUTIONS FOR DIAGNOSIS


If steering angle sensor, steering system parts, suspension system parts, ABS actuator and electric unit (control unit) have been replaced, or if wheel alignment has been adjusted, be sure to adjust neutral position of steering angle sensor before driving. Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

OVERALL SEQUENCE

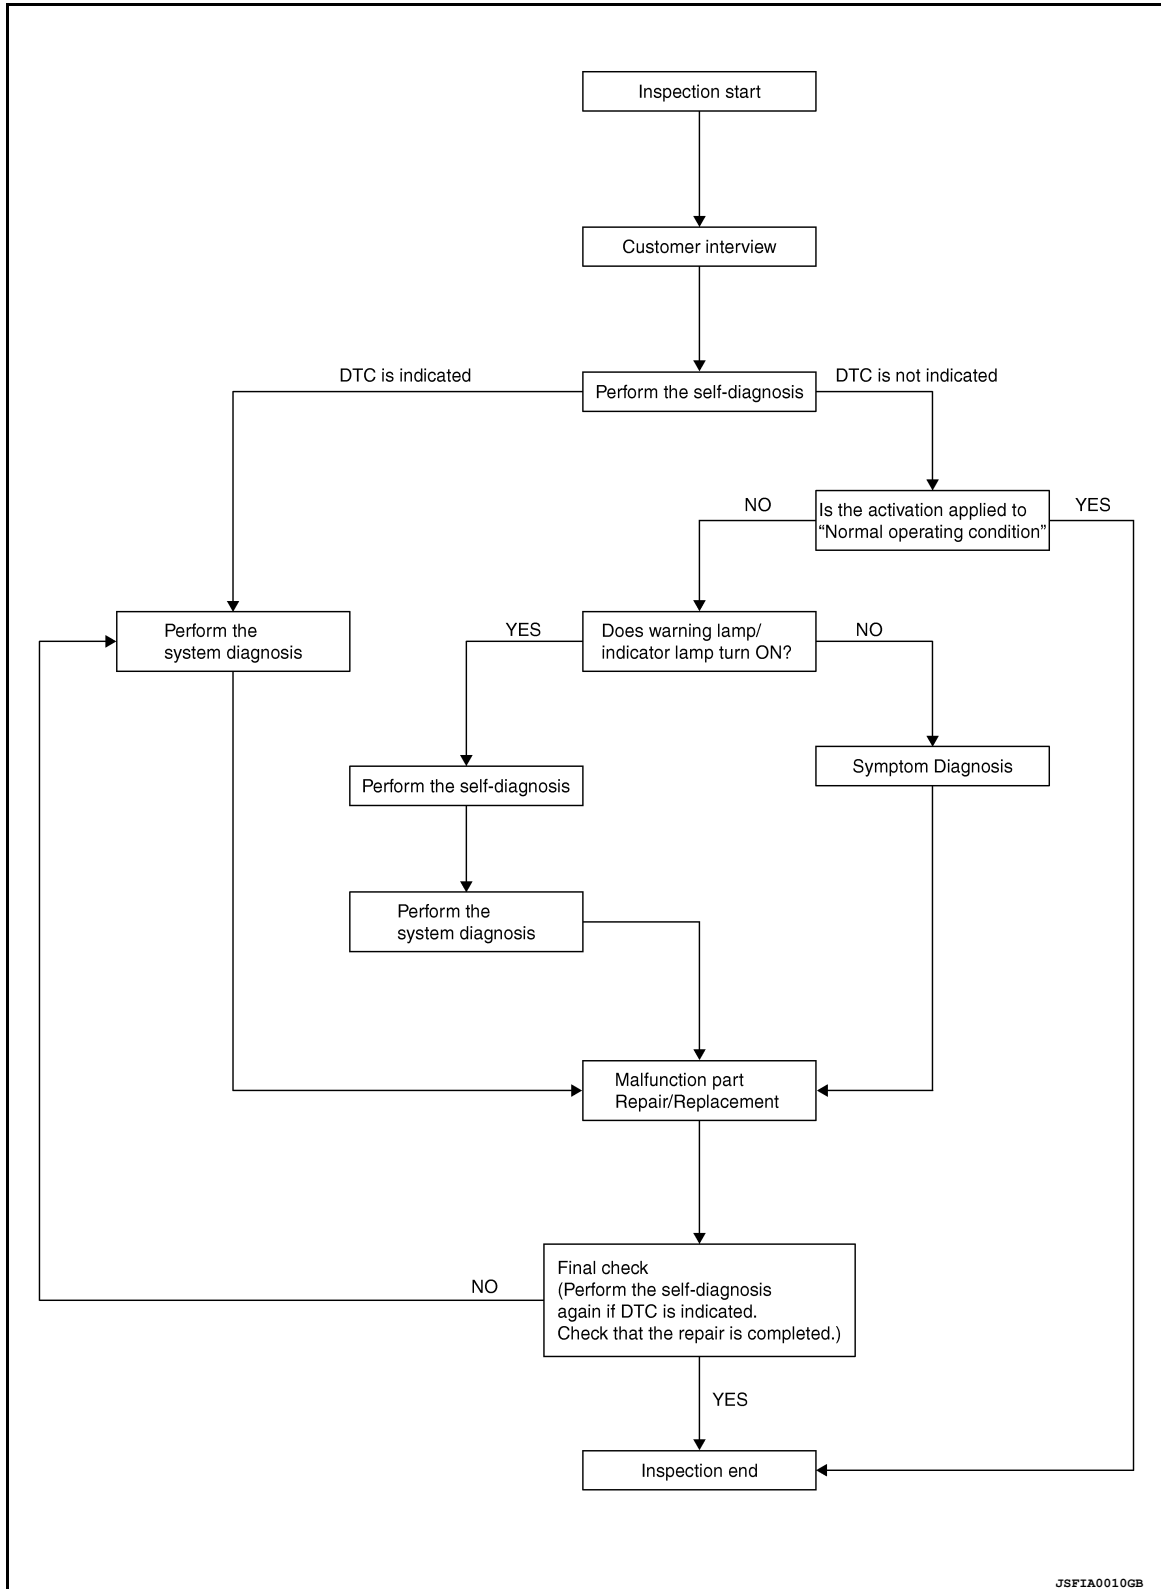

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

DETAILED FLOW

1. COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the diagnosis work sheet. Refer to [BRC-7, "Diagnostic Work Sheet"](#).

>> GO TO 2

DIAGNOSIS AND REPAIR WORKFLOW

[VDC/TCS/ABS]

< BASIC INSPECTION >

2. PERFORM THE SELF-DIAGNOSIS

Check the DTC display with the self-diagnosis function. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is there any DTC displayed?

YES >> GO TO 3

NO >> GO TO 4

3. PERFORM THE SYSTEM DIAGNOSIS

Perform the diagnosis applicable to the displayed DTC. Refer to [BRC-89, "DTC No. Index"](#).

>> GO TO 7

4. CHECK THE SYMPTOM THAT IS NOT CONSIDERED A SYSTEM MALFUNCTION

Check that the symptom is a normal operation that is not considered a system malfunction. Refer to [BRC-107, "Description"](#).

Is the symptom a normal operation?

YES >> Inspection End

NO >> GO TO 5

5. CHECK THE WARNING LAMP AND INDICATOR LAMP FOR ILLUMINATION

Check that the warning lamp and indicator lamp illuminate.

- ABS warning lamp: Refer to [BRC-79, "Description"](#).
- Brake warning lamp: Refer to [BRC-80, "Description"](#).
- VDC OFF indicator lamp: Refer to [BRC-81, "Description"](#).
- SLIP indicator lamp: Refer to [BRC-83, "Description"](#).

Is ON/OFF timing normal?

YES >> GO TO 6

NO >> GO TO 2

6. PERFORM THE DIAGNOSIS BY SYMPTOM

Perform the diagnosis applicable to the symptom.

>> GO TO 7

7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 8

8. FINAL CHECK

Perform the self-diagnosis again, and check that the malfunction is repaired completely. After checking, erase the self-diagnosis memory. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is no other DTC present and the repair completed?

YES >> Inspection End

NO >> GO TO 3

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

Diagnostic Work Sheet

INFOID:000000011289969

Customer name MR/MS	Model & Year	VIN	
Engine #	Trans.	Mileage	
Incident Date	Manuf. Date	In Service Date	
Symptoms	<input type="checkbox"/> Noise and vibration (from engine compartment) <input type="checkbox"/> Noise and vibration (from axle)	<input type="checkbox"/> Warning/Indicator activate	<input type="checkbox"/> Firm pedal operation Large stroke pedal operation
	<input type="checkbox"/> TCS dose not work (Drive wheels slip when accelerating)	<input type="checkbox"/> ABS dose not work (Wheels lock when braking)	<input type="checkbox"/> lack of sense of acceleration
Engine conditions	<input type="checkbox"/> When starting <input type="checkbox"/> After starting		
Road conditions	<input type="checkbox"/> Low friction road (<input type="checkbox"/> Snow <input type="checkbox"/> Gravel <input type="checkbox"/> Other) <input type="checkbox"/> Bumps / potholes		
Driving conditions	<input type="checkbox"/> Full-acceleration <input type="checkbox"/> High speed cornering <input type="checkbox"/> Vehicle speed: Greater than 10 km/h (6 MPH) <input type="checkbox"/> Vehicle speed: 10 km/h (6 MPH) or less <input type="checkbox"/> Vehicle is stopped		
Applying brake conditions	<input type="checkbox"/> Suddenly <input type="checkbox"/> Gradually		
Other conditions	<input type="checkbox"/> Operation of electrical equipment <input type="checkbox"/> Shift change <input type="checkbox"/> Other descriptions		

AWFIA1029GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BRC

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[VDC/TCS/ABS]

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000011289970

After replacing the ABS actuator and electric unit (control unit), perform the following procedures:

- Neutral position adjustment for the steering angle sensor
- Calibration of the decel G sensor

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000011289971

1. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

Perform the neutral position adjustment for the steering angle sensor.

>> Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#), GO TO 2

2. PERFORM CALIBRATION OF THE DECEL G SENSOR

Perform calibration of the decel G sensor.

>> Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Special Repair Requirement"](#).

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description

INFOID:000000011289972

Refer to the table below to determine if adjustment of steering angle sensor neutral position is required.

x: Required –: Not required

Situation	Adjustment of steering angle sensor neutral position
Removing/Installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	x
Removing/Installing steering angle sensor	x
Replacing steering angle sensor	x
Removing/Installing steering components	x
Replacing steering components	x
Removing/Installing suspension components	x
Replacing suspension components	x
Change tires to new ones	—
Tire rotation	—
Adjusting wheel alignment	x
Battery disconnection	x

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement

INFOID:000000011289973

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

CAUTION:

To adjust neutral position of steering angle sensor, make sure to use CONSULT (Adjustment cannot be done without CONSULT)

1. ALIGN THE VEHICLE STATUS

Stop vehicle with front wheels in straight-ahead position.

>> GO TO 2

2. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

1. On the CONSULT screen, touch "WORK SUPPORT" and "ST ANGLE SENSOR ADJUSTMENT" in order.
2. Touch "START".
CAUTION:
Do not touch steering wheel while adjusting steering angle sensor.
3. After approximately 10 seconds, touch "END".
NOTE:
 After approximately 60 seconds, it ends automatically.
4. Turn ignition switch OFF, then turn it ON again.
CAUTION:
Be sure to perform above operation.

>> GO TO 3

3. CHECK DATA MONITOR

1. Run vehicle with front wheels in straight-ahead position, then stop.
2. Select "DATA MONITOR". Then make sure "STR ANGLE SIG" is within $0 \pm 2.5^\circ$.

Is the steering angle within the specified range?

YES >> GO TO 4

NO >> Perform the neutral position adjustment for the steering angle sensor again, GO TO 1

4. ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memory of the ABS actuator and electric unit (control unit) and ECM.

- ABS actuator and electric unit (control unit): Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).
- ECM: Refer to [EC-49, "CONSULT Function"](#).

Are the memories erased?

YES >> Inspection End

NO >> Check the items indicated by the self-diagnosis.

CALIBRATION OF DECEL G SENSOR

CALIBRATION OF DECEL G SENSOR : Description

INFOID:00000001128974

Refer to the table below to determine if calibration of the decel G sensor is required.

×: Required –: Not required

Situation	Calibration of decel G sensor
Removing/Installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	×
Removing/Installing steering components	—
Replacing steering components	—
Removing/Installing suspension components	—
Replacing suspension components	—
Change tires to new ones	—
Tire rotation	—
Adjusting wheel alignment	—
Removing/Installing yaw rate/side/decel G sensor	×
Replacing yaw rate/side/decel G sensor	×

CALIBRATION OF DECEL G SENSOR : Special Repair Requirement

INFOID:00000001128975

CALIBRATION OF DECEL G SENSOR

CAUTION:

To calibrate the decel G sensor, make sure to use CONSULT

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[VDC/TCS/ABS]

(Calibration cannot be done without CONSULT)

1. ALIGN THE VEHICLE STATUS

Stop vehicle with front wheels in straight-ahead position.

>> GO TO 2

2. PERFORM CALIBRATION OF DECEL G SENSOR

1. On the CONSULT screen, touch "WORK SUPPORT" and "DECEL G-SEN CALIBRATION" in order.
2. Touch "START".
3. After approximately 10 seconds, touch "END".

NOTE:

After approximately 60 seconds, it ends automatically.

4. Turn ignition switch OFF, then turn it ON again.

CAUTION:

Be sure to perform above operation.

>> GO TO 3

3. CHECK DATA MONITOR

1. Run vehicle with front wheels in straight-ahead position, then stop.
2. Select "DATA MONITOR". Then make sure "DECEL G SEN" is within $\pm 0.08G$.

Is the inspection result normal?

YES >> GO TO 4

NO >> Perform calibration of decel G sensor again, GO TO 1

4. ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memory of the ABS actuator and electric unit (control unit) and ECM.

- ABS actuator and electric unit (control unit): Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).
- ECM: Refer to [EC-49, "CONSULT Function"](#).

Are the memories erased?

YES >> Inspection End


NO >> Check the items indicated by the self-diagnosis.

SYSTEM DESCRIPTION

VDC

System Diagram


INFOID:000000011289976

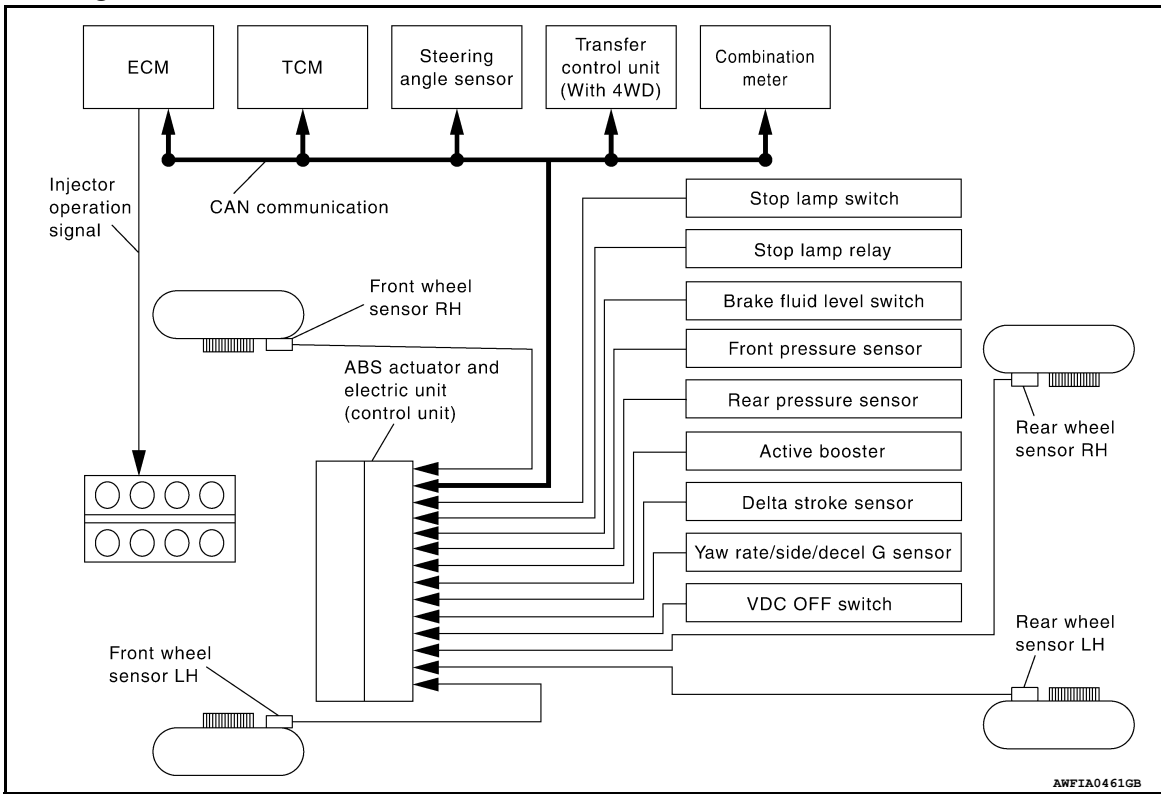

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

Hydraulic Circuit Diagram











INFOID:000000011289977

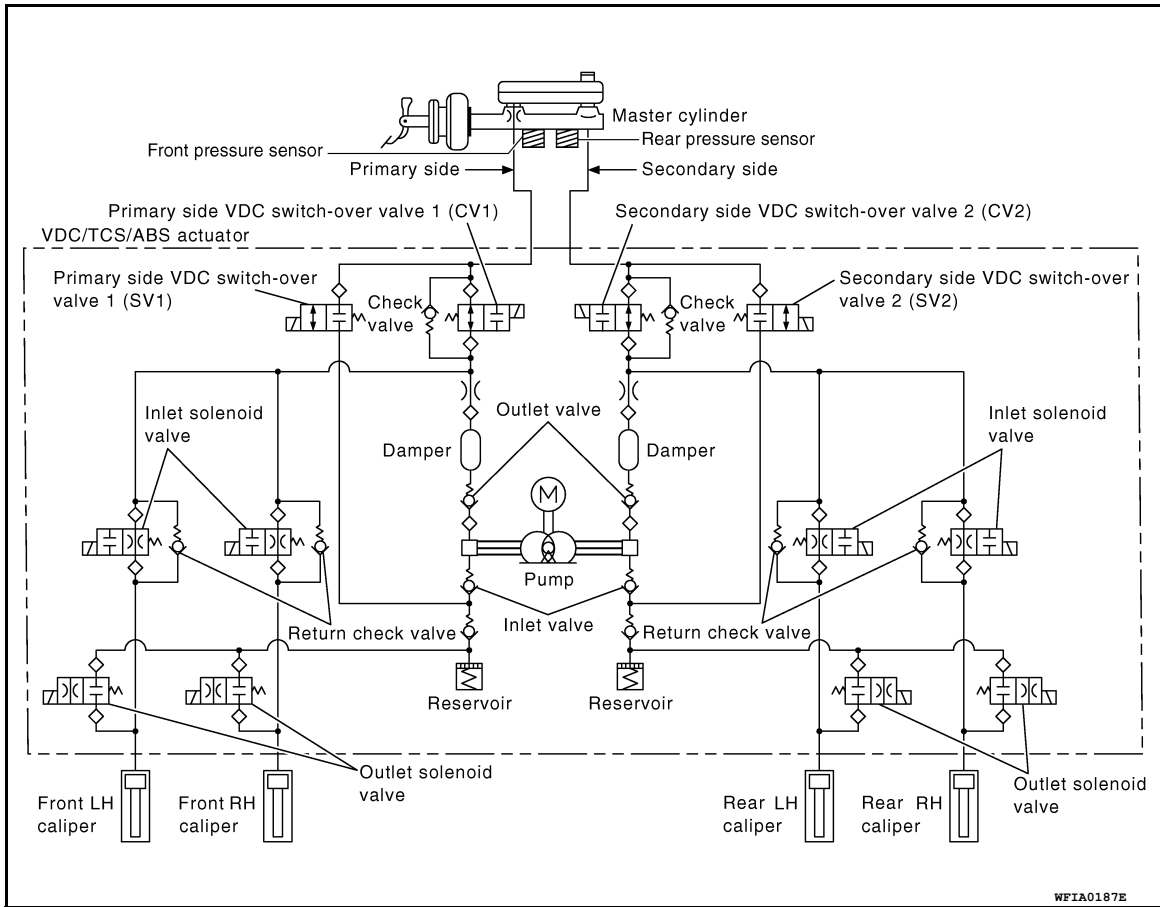

System Description

INFOID:000000011289978

- Vehicle Dynamics Control system detects driver's steering operation amount and brake pedal travel from steering angle sensor and pressure sensors. Using information from yaw rate/side/decel G sensor and wheel sensor, VDC judges driving condition (conditions of under steer and over steer) to improve vehicle driving stability by controlling brake application to 4 wheels and engine output.
- During VDC operation, it informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT is available.

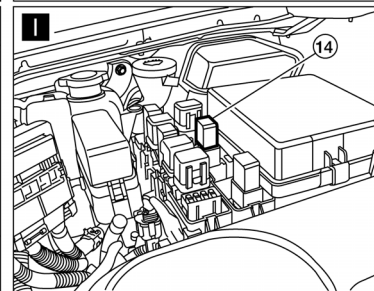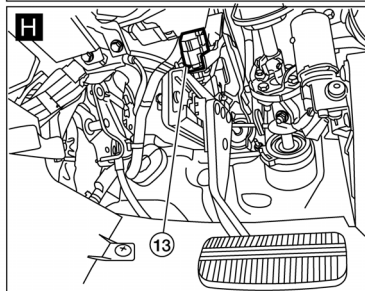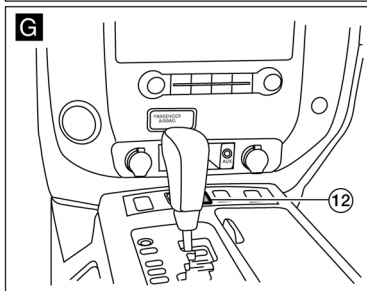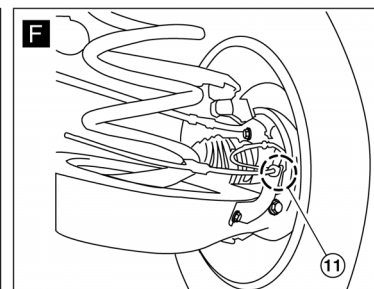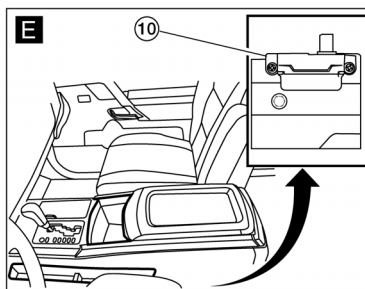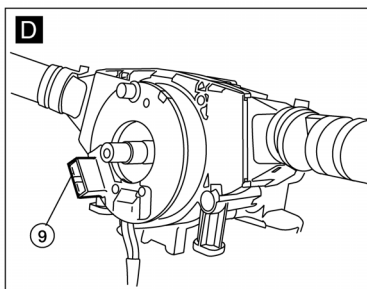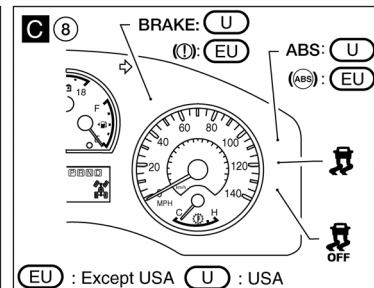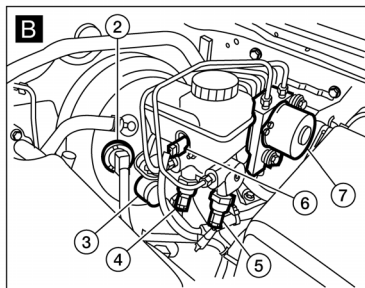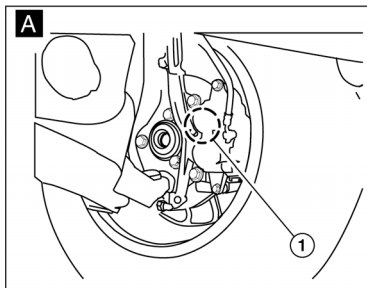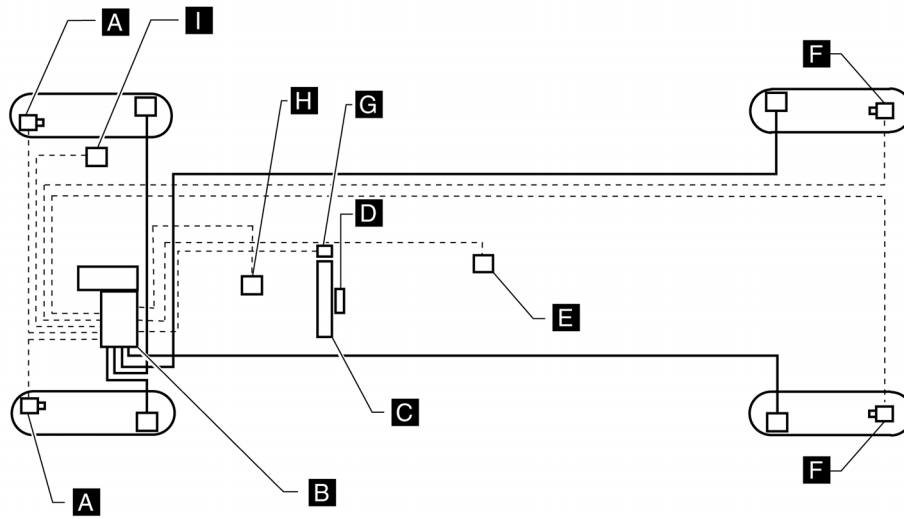

- | | | |
|--|-----------------------------|---|
| 1. Front wheel sensor LH E18
Front wheel sensor RH E117 | 2. Delta stroke sensor E114 | 3. Active booster E49 |
| 4. Front pressure sensor E31 | 5. Rear pressure sensor E32 | 6. Brake fluid level switch E21 |
| 7. ABS actuator and electric unit (control unit) E125 | 8. Combination meter M24 | 9. Steering angle sensor M17 (view with steering wheel removed) |

AMFIA0837ZZ

- | | | |
|---------------------------------------|--|-------------------------|
| 10. Yaw rate/side/decel G sensor M108 | 11. Rear wheel sensor LH C11
Rear wheel sensor RH C10 | 12. VDC OFF switch M253 |
| 13. Stop lamp switch E38 | 14. Stop lamp relay E12 | |

Component Description


INFOID:0000000011289980

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-38. "Description"
	Motor	
	Actuator relay	BRC-55. "Description"
	Solenoid valve	BRC-47. "Description"
	VDC switch-over valve (CV1, CV2, SV1, SV2)	BRC-68. "Description"
Wheel sensor	BRC-42. "Description"	
Yaw rate/side/decel G sensor	BRC-40. "Description"	
Stop lamp switch	BRC-45. "Description"	
Front pressure sensor	BRC-57. "Description"	
Rear pressure sensor		
Steering angle sensor	BRC-60. "Description"	
Brake fluid level switch	BRC-63. "Description"	
Active booster	BRC-71. "Description"	
Delta stroke sensor	BRC-74. "Description"	
VDC OFF switch	BRC-77. "Description"	
ABS warning lamp	BRC-79. "Description"	
Brake warning lamp	BRC-80. "Description"	
VDC OFF indicator lamp	BRC-81. "Description"	
SLIP indicator lamp	BRC-83. "Description"	

TCS

System Diagram

INFOID:000000011289981










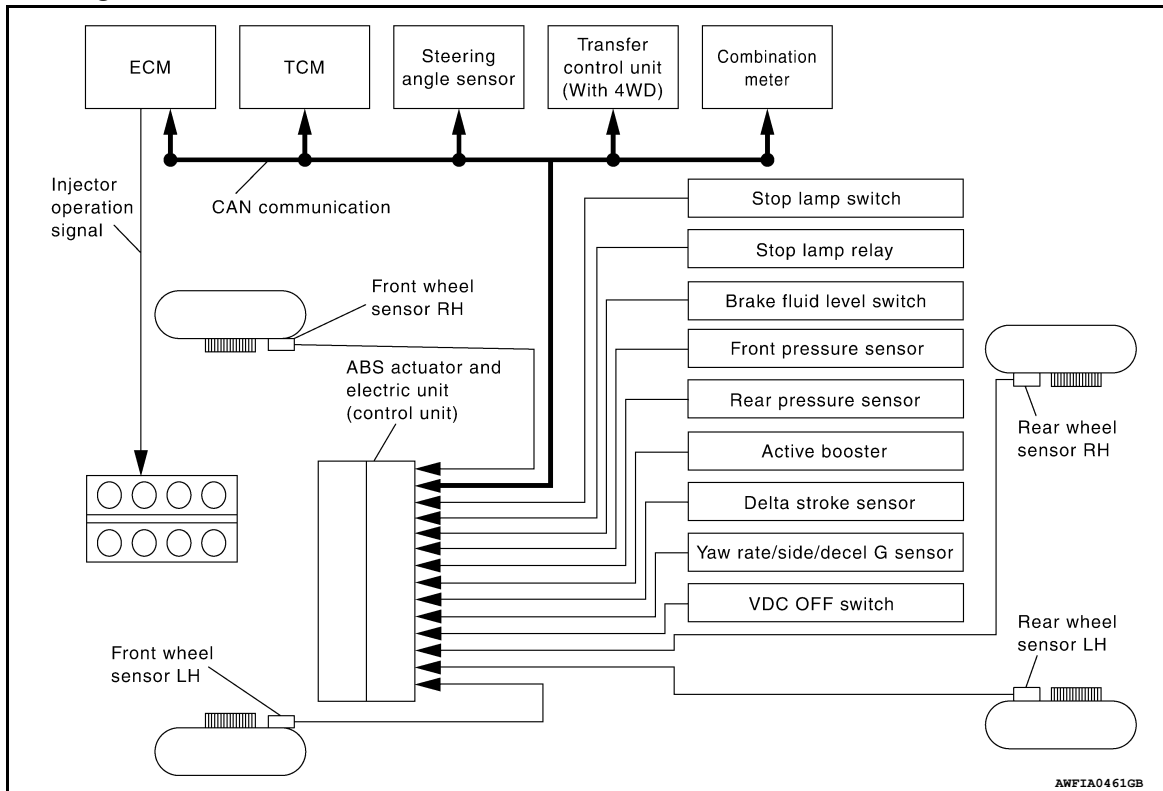


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

System Description

INFOID:000000011289982

- Traction Control System is a function that electronically controls engine torque, brake fluid pressure and A/T gear position to ensure the optimum slippage ratio at drive wheels by computing wheel speed signals from 4 wheel sensors. When ABS actuator and electric unit (control unit) detects a spin at drive wheels (rear wheels), it compares wheel speed signals from all 4 wheels. At this time, LH and RH rear brake fluid pressure are controlled, while fuel being cut to engine and throttle valve being closed to reduce engine torque by the control unit. Further more, throttle position is continuously controlled to ensure the optimum engine torque at all times.
- During TCS operation, it informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT is available.

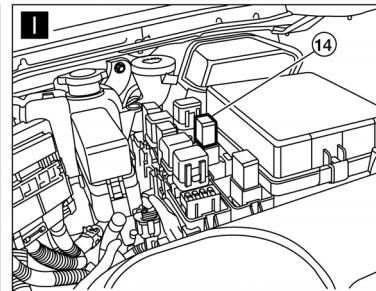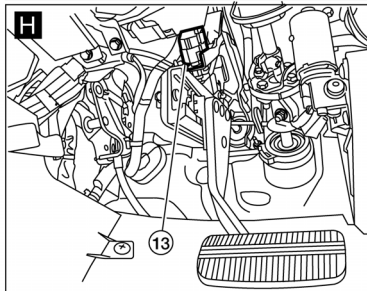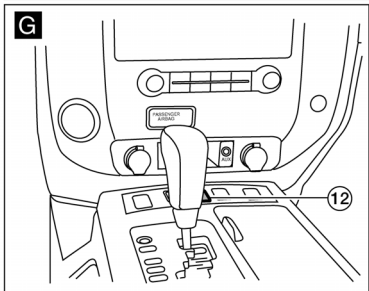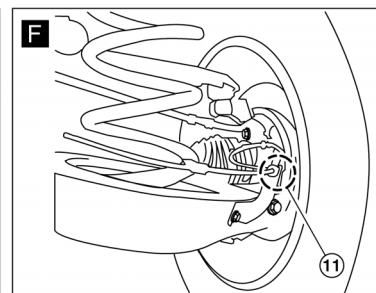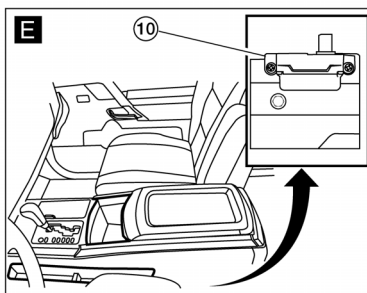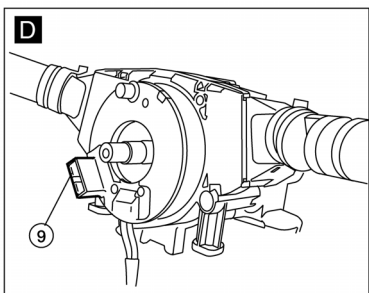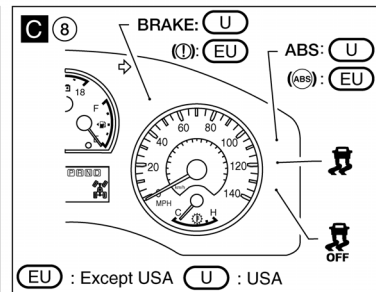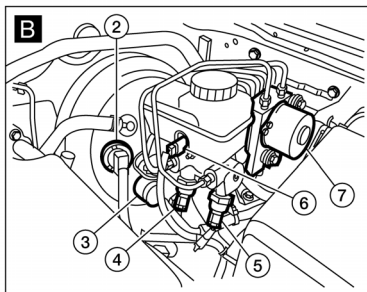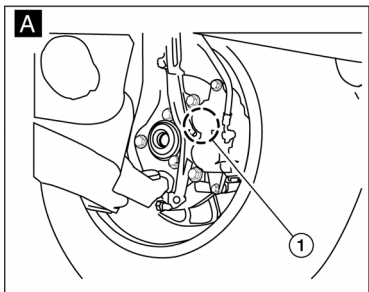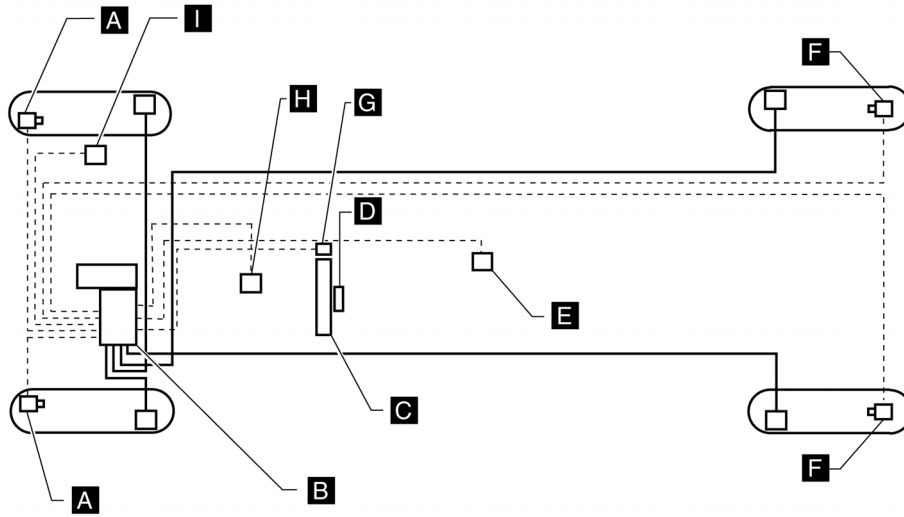

AWF1A0837ZZ

- | | | |
|--|-----------------------------|---|
| 1. Front wheel sensor LH E18
Front wheel sensor RH E117 | 2. Delta stroke sensor E114 | 3. Active booster E49 |
| 4. Front pressure sensor E31 | 5. Rear pressure sensor E32 | 6. Brake fluid level switch E21 |
| 7. ABS actuator and electric unit (control unit) E125 | 8. Combination meter M24 | 9. Steering angle sensor M17 (view with steering wheel removed) |

- 10. Yaw rate/side/decel G sensor M108
- 11. Rear wheel sensor LH C11
Rear wheel sensor RH C10
- 12. VDC OFF switch M253
- 13. Stop lamp switch E38
- 14. Stop lamp relay E12

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

Component Description


INFOID:0000000011289984

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-38, "Description"
	Motor	
	Actuator relay	BRC-55, "Description"
	Solenoid valve	BRC-47, "Description"
	VDC switch-over valve (CV1, CV2, SV1, SV2)	BRC-68, "Description"
Wheel sensor	BRC-42, "Description"	
Yaw rate/side/decel G sensor	BRC-40, "Description"	
Stop lamp switch	BRC-45, "Description"	
Front pressure sensor	BRC-57, "Description"	
Rear pressure sensor		
Steering angle sensor	BRC-60, "Description"	
Brake fluid level switch	BRC-63, "Description"	
Active booster	BRC-71, "Description"	
Delta stroke sensor	BRC-74, "Description"	
VDC OFF switch	BRC-77, "Description"	
ABS warning lamp	BRC-79, "Description"	
Brake warning lamp	BRC-80, "Description"	
VDC OFF indicator lamp	BRC-81, "Description"	
SLIP indicator lamp	BRC-83, "Description"	

ABS

System Diagram











INFOID:000000011289985

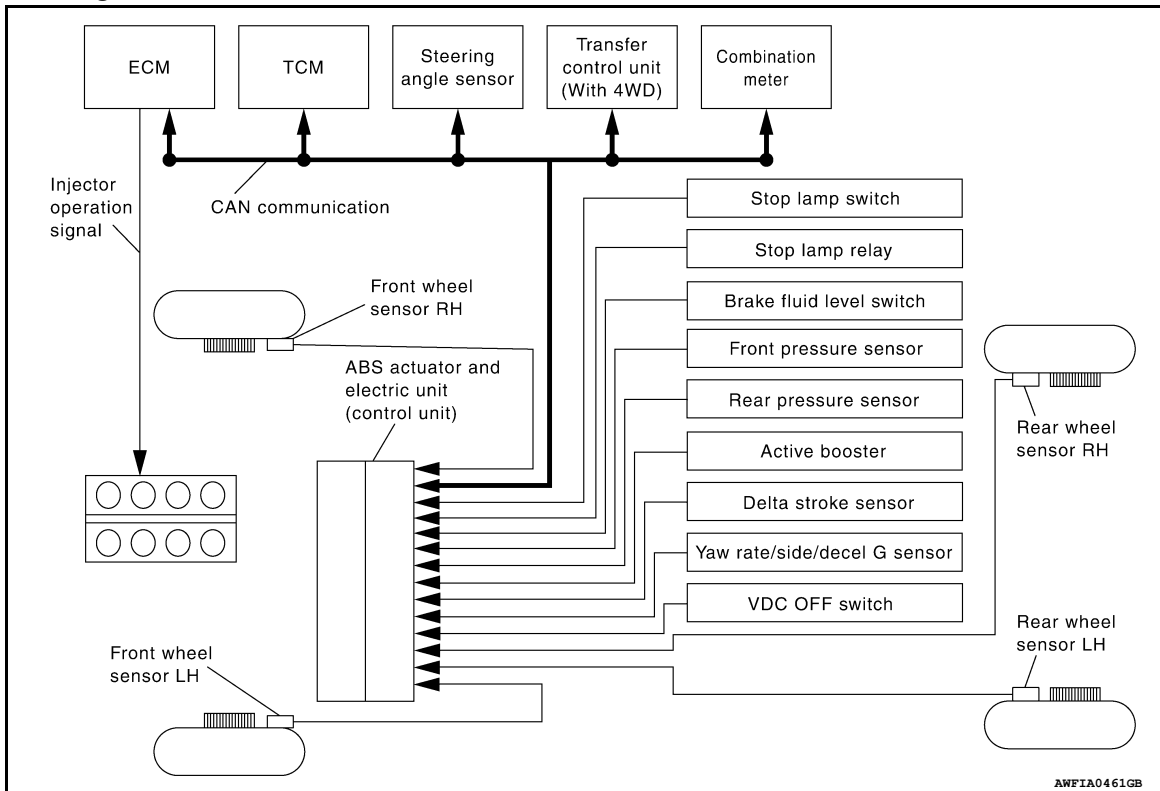

System Description

INFOID:000000011289986

- Anti-Lock Braking System is a function that detects wheel revolution while braking, electronically controls braking force, and prevents wheel locking during sudden braking. It improves handling stability and maneuverability for avoiding obstacles.
- Electrical system diagnosis by CONSULT is available.

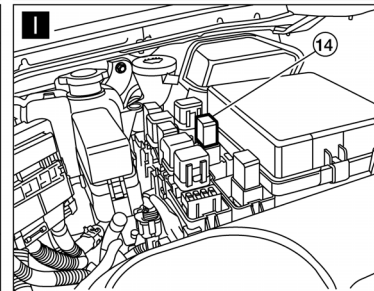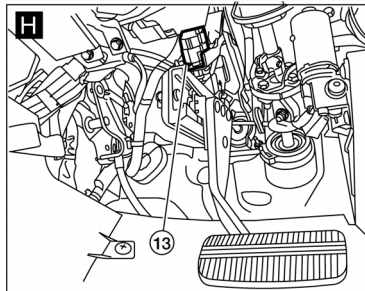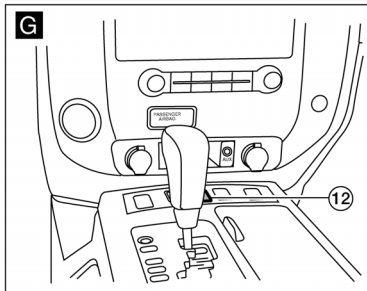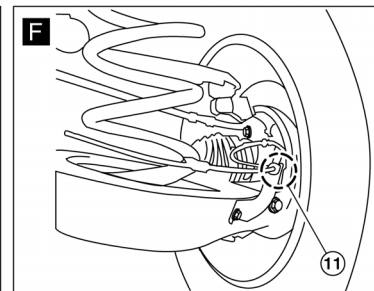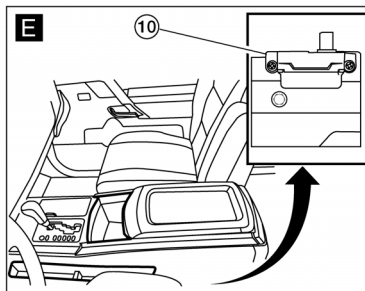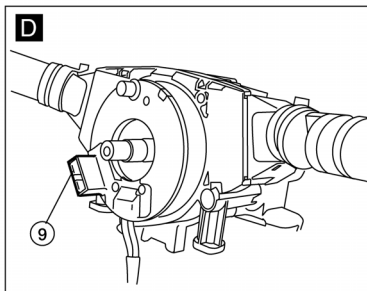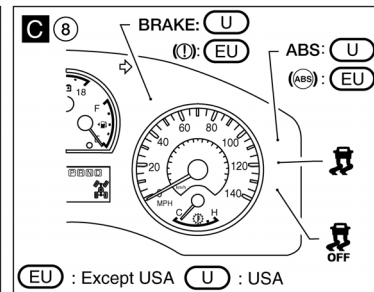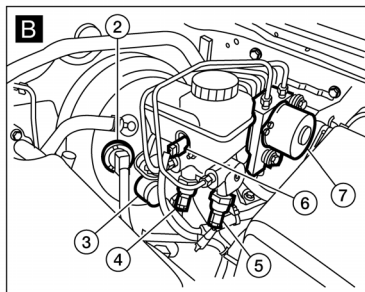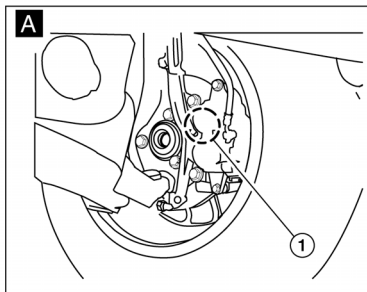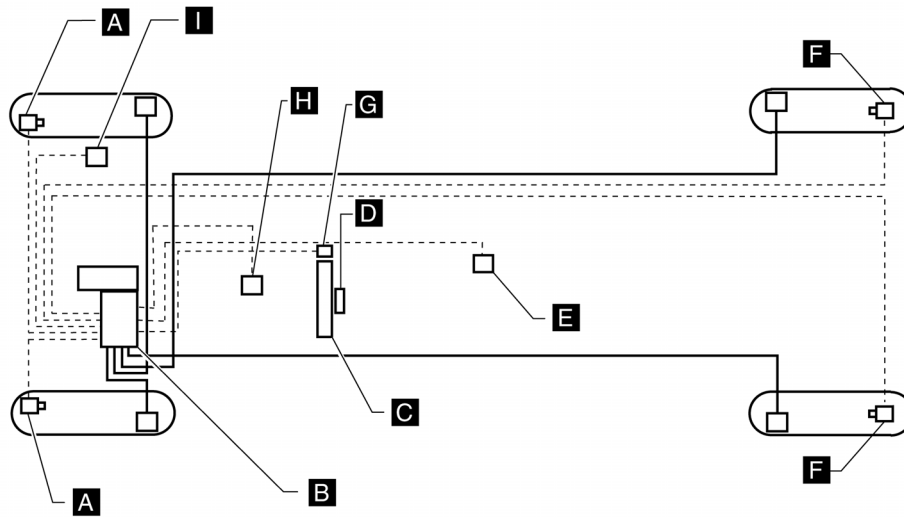

- | | | |
|--|-----------------------------|---|
| 1. Front wheel sensor LH E18
Front wheel sensor RH E117 | 2. Delta stroke sensor E114 | 3. Active booster E49 |
| 4. Front pressure sensor E31 | 5. Rear pressure sensor E32 | 6. Brake fluid level switch E21 |
| 7. ABS actuator and electric unit (control unit) E125 | 8. Combination meter M24 | 9. Steering angle sensor M17 (view with steering wheel removed) |

AMFIA0837ZZ

ABS

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- | | | |
|---------------------------------------|--|-------------------------|
| 10. Yaw rate/side/decel G sensor M108 | 11. Rear wheel sensor LH C11
Rear wheel sensor RH C10 | 12. VDC OFF switch M253 |
| 13. Stop lamp switch E38 | 14. Stop lamp relay E12 | |

Component Description


INFOID:0000000011289988

Component parts	Reference	
ABS actuator and electric unit (control unit)	Pump	BRC-38. "Description"
	Motor	
	Actuator relay	BRC-55. "Description"
	Solenoid valve	BRC-47. "Description"
	VDC switch-over valve (CV1, CV2, SV1, SV2)	BRC-68. "Description"
Wheel sensor	BRC-42. "Description"	
Yaw rate/side/decel G sensor	BRC-40. "Description"	
Stop lamp switch	BRC-45. "Description"	
Front pressure sensor	BRC-57. "Description"	
Rear pressure sensor		
Steering angle sensor	BRC-60. "Description"	
Brake fluid level switch	BRC-63. "Description"	
Active booster	BRC-71. "Description"	
Delta stroke sensor	BRC-74. "Description"	
VDC OFF switch	BRC-77. "Description"	
ABS warning lamp	BRC-79. "Description"	
Brake warning lamp	BRC-80. "Description"	
VDC OFF indicator lamp	BRC-81. "Description"	
SLIP indicator lamp	BRC-83. "Description"	

EBD

System Diagram

INFOID:000000011289989










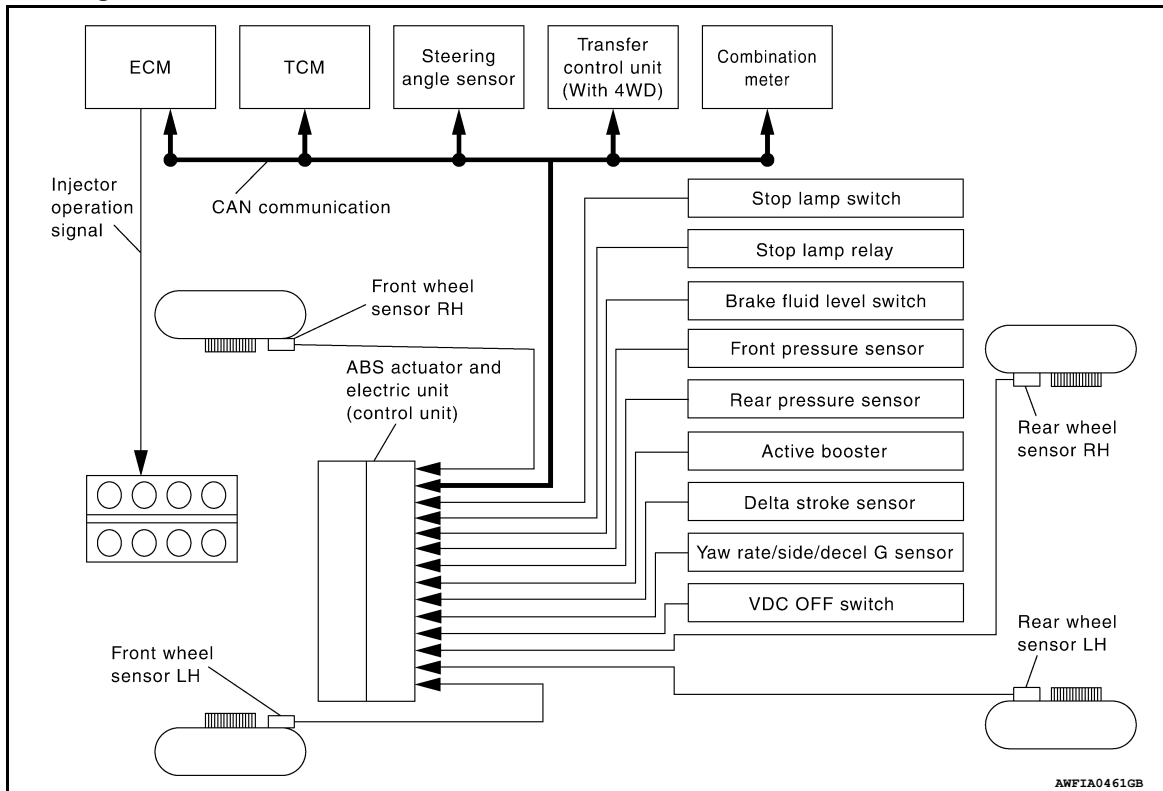


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

System Description

INFOID:000000011289990

- Electric Brake force Distribution is a following function. ABS actuator and electric unit (control unit) detects subtle slippages between the front and rear wheels during braking. Then it electronically controls the rear braking force (brake fluid pressure) to reduce rear wheel slippage. Accordingly, it improves vehicle stability.
- Electrical system diagnosis by CONSULT is available.

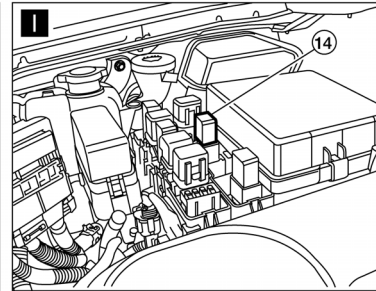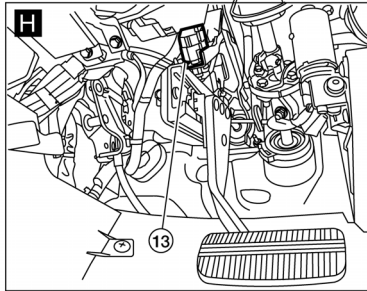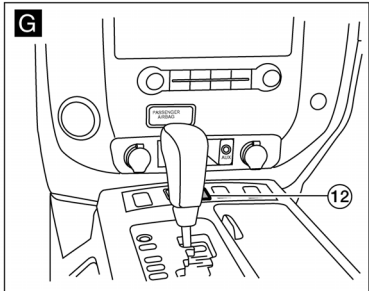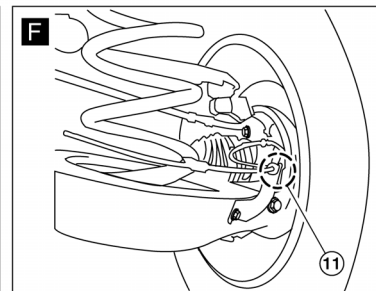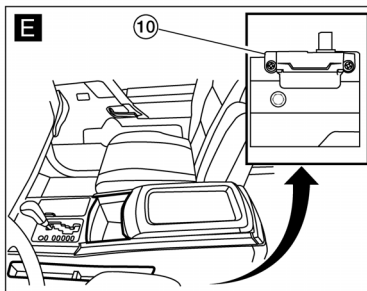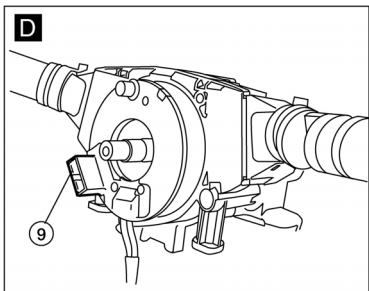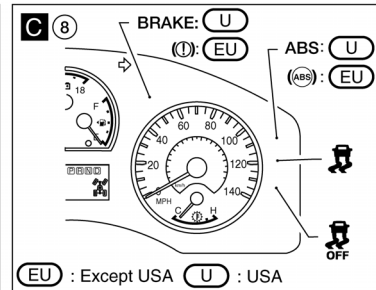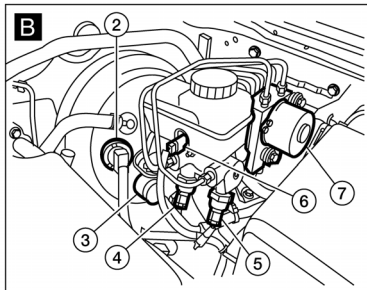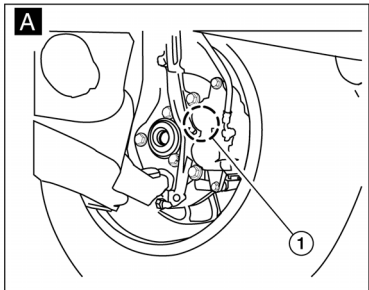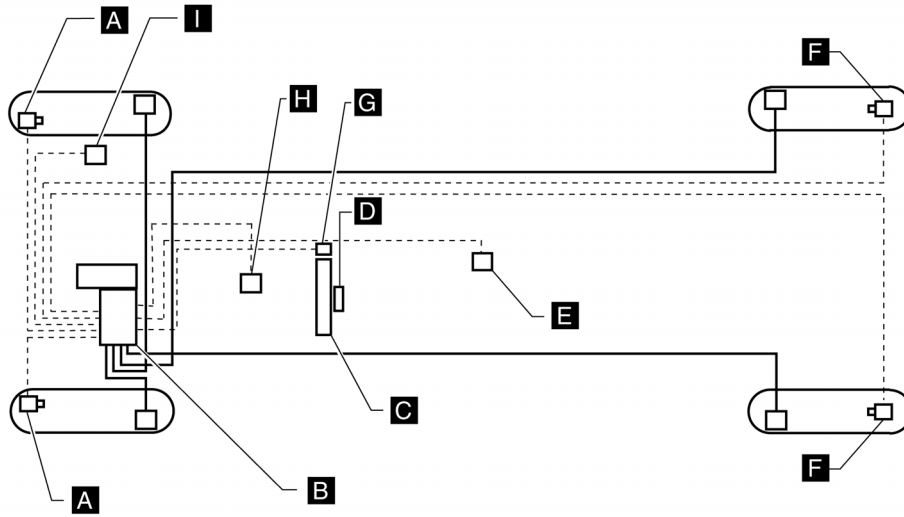

AWF1A0837ZZ

- | | | |
|--|-----------------------------|---|
| 1. Front wheel sensor LH E18
Front wheel sensor RH E117 | 2. Delta stroke sensor E114 | 3. Active booster E49 |
| 4. Front pressure sensor E31 | 5. Rear pressure sensor E32 | 6. Brake fluid level switch E21 |
| 7. ABS actuator and electric unit (control unit) E125 | 8. Combination meter M24 | 9. Steering angle sensor M17 (view with steering wheel removed) |

- 10. Yaw rate/side/decel G sensor M108
- 11. Rear wheel sensor LH C11
Rear wheel sensor RH C10
- 12. VDC OFF switch M253
- 13. Stop lamp switch E38
- 14. Stop lamp relay E12

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

Component Description

INFOID:0000000011289992

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-38, "Description"
	Motor	
	Actuator relay	BRC-55, "Description"
	Solenoid valve	BRC-47, "Description"
	VDC switch-over valve (CV1, CV2, SV1, SV2)	BRC-68, "Description"
Wheel sensor	BRC-42, "Description"	
Yaw rate/side/decel G sensor	BRC-40, "Description"	
Stop lamp switch	BRC-45, "Description"	
Front pressure sensor	BRC-57, "Description"	
Rear pressure sensor		
Steering angle sensor	BRC-60, "Description"	
Brake fluid level switch	BRC-63, "Description"	
Active booster	BRC-71, "Description"	
Delta stroke sensor	BRC-74, "Description"	
VDC OFF switch	BRC-77, "Description"	
ABS warning lamp	BRC-79, "Description"	
Brake warning lamp	BRC-80, "Description"	
VDC OFF indicator lamp	BRC-81, "Description"	
SLIP indicator lamp	BRC-83, "Description"	

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

CONSULT Function (ABS)

INFOID:000000011289993

FUNCTION

CONSULT can display each diagnostic item using the following direct diagnostic modes.

Direct Diagnostic Mode	Description
ECU Identification	The ABS actuator and electric unit (control unit) part number is displayed.
Self Diagnostic Result	Displays the diagnosis results judged by ABS actuator and electric unit (control unit).
Data Monitor	The ABS actuator and electric unit (control unit) input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from ABS actuator and electric unit (control unit).
Work support	Changes the setting for each system function.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from ABS actuator and electric unit (control unit).

SELF DIAGNOSTIC RESULT

Operation Procedure

1. Before performing the self-diagnosis, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

How to Erase Self Diagnostic Result

1. After erasing DTC memory, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp turn OFF.

CAUTION:

If memory cannot be erased, perform applicable diagnosis.

NOTE:

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, the ABS warning lamp, SLIP indicator lamp and brake warning lamp will not turn OFF even when the system is normal unless the vehicle is driving at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- VDC OFF switch should not stay "ON" position.

Display Item List

Refer to [BRC-89, "DTC No. Index"](#).

DATA MONITOR

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
FR LH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by front LH wheel sensor signal is displayed.
FR RH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by front RH wheel sensor signal is displayed.
RR LH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by rear LH wheel sensor signal is displayed.
RR RH SENSOR (km/h, mph)	×	×	×	Wheel speed (km/h, mph) calculated by rear RH wheel sensor signal is displayed.
DECEL G-SEN (G)	×	×	×	Longitudinal acceleration (G) detected by decel G-sensor is displayed.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
FR RH IN SOL (On/Off)	-	×	×	Front RH IN ABS solenoid (On/Off) status is displayed.
FR RH OUT SOL (On/Off)	-	×	×	Front RH OUT ABS solenoid (On/Off) status is displayed.
FR LH IN SOL (On/Off)	-	×	×	Front LH IN ABS solenoid (On/Off) status is displayed.
FR LH OUT SOL (On/Off)	-	×	×	Front LH OUT ABS solenoid (On/Off) status is displayed.
RR RH IN SOL (On/Off)	-	×	×	Rear RH IN ABS solenoid (On/Off) status is displayed.
RR RH OUT SOL (On/Off)	-	×	×	Rear RH OUT ABS solenoid (On/Off) status is displayed.
RR LH IN SOL (On/Off)	-	×	×	Rear LH IN ABS solenoid (On/Off) status is displayed.
RR LH OUT SOL (On/Off)	-	×	×	Rear LH OUT ABS solenoid (On/Off) status is displayed.
EBD WARN LAMP (On/Off)	-	-	×	Brake warning lamp (On/Off) status is displayed.
STOP LAMP SW (On/Off)	×	×	×	Stop lamp switch (On/Off) status is displayed.
MOTOR RELAY (On/Off)	-	×	×	ABS motor relay signal (On/Off) status is displayed.
ACTUATOR RLY (On/Off)	-	×	×	ABS actuator relay signal (On/Off) status is displayed.
ABS WARN LAMP (On/Off)	-	×	×	ABS warning lamp (On/Off) status is displayed.
OFF LAMP (On/Off)	-	×	×	VDC OFF Lamp (On/Off) status is displayed.
OFF SW (On/Off)	×	×	×	VDC OFF switch (On/Off) status is displayed.
SLIP LAMP (On/Off)	-	×	×	SLIP indicator lamp (On/Off) status is displayed.
BATTERY VOLT (V)	×	×	×	Voltage (V) supplied to ABS actuator and electric unit (control unit) is displayed.
GEAR (1, 2, 3, 4, 5)	×	×	×	Gear position (1, 2, 3, 4, 5) judged by transmission range switch signal is displayed.
SLCT LVR POSI (P, N, D)	×	×	×	Shift position (P, N, D) judged by transmission range switch signal.
ENGINE SPEED (rpm)	×	×	×	Engine speed (rpm) judged by CAN communication signal is displayed.
YAW RATE SEN (d/s)	×	×	×	Yaw rate (d/s) detected by yaw rate sensor is displayed.
R POSI SIG (On/Off)	-	-	×	Reverse shift position (On/Off) judged by transmission range switch signal.
N POSI SIG (On/Off)	-	-	×	Shift position judged by transmission range switch signal.
P POSI SIG (On/Off)	-	-	×	Shift position judged by transmission range switch signal.
CV1 (On/Off)	-	-	×	Front side switch-over solenoid valve (cut valve) (On/Off) status is displayed.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
CV2 (On/Off)	-	-	×	Rear side switch-over solenoid valve (cut-valve) (On/Off) status is displayed.
SV1 (On/Off)	-	-	×	Front side switch-over solenoid valve (suction valve) (On/Off) status is displayed.
SV2 (On/Off)	-	-	×	Rear side switch-over solenoid valve (suction valve) (On/Off) status is displayed.
2WD/4WD (2WD/4WD)	-	-	×	It recognizes on software whether it is 2WD and whether it is in 4WD state.
ACCEL POS SIG (%)	×	-	×	Throttle valve open/close status judged by CAN communication signal is displayed.
SIDE G-SENSOR (m/s ²)	×	-	×	Transverse acceleration detected by side G-sensor is displayed.
STR ANGLE SIG (deg)	×	-	×	Steering angle detected by steering angle sensor is displayed.
BST OPER SIG (On/Off)	-	-	×	Active booster operation (On/Off) status is displayed.
PRESS SENSOR (bar)	×	-	×	Brake pressure detected by pressure sensor is displayed.
EBD SIGNAL (On/Off)	-	-	×	EBD operation (On/Off) status is displayed.
ABS SIGNAL (On/Off)	-	-	×	ABS operation (On/Off) status is displayed.
TCS SIGNAL (On/Off)	-	-	×	TCS operation (On/Off) status is displayed.
VDC SIGNAL (On/Off)	-	-	×	VDC operation (On/Off) status is displayed.
ABS FAIL SIG (On/Off)	-	-	×	ABS fail signal (On/Off) status is displayed.
TCS FAIL SIG (On/Off)	-	-	×	TCS fail signal (On/Off) status is displayed.
VDC FAIL SIG (On/Off)	-	-	×	VDC fail signal (On/Off) status is displayed.
CRANKING SIG (On/Off)	-	-	×	The input state of the key SW START position signal is displayed.
FLUID LEV SW (On/Off)	×	-	×	Brake fluid level switch (On/Off) status is displayed.
PRESS SEN2 (bar)	-	-	×	Brake pressure detected by pressure sensor is displayed.
DELTA S SEN (mm)	-	-	×	The amount of stroke sensor movements in the active booster detected by DELTA S SEN is displayed.
RELEASE SW NO (On/Off)	-	-	×	Release switch signal (On/Off) status is displayed. "On" indicates that the brake pedal is depressed. "Off" indicates that the brake pedal is released.
RELEASE SW NC (On/Off)	-	-	×	Release switch signal (On/Off) status is displayed. "Off" indicates that the brake pedal is depressed. "On" indicates that the brake pedal is released.
OHB FAIL (On/Off)	-	-	×	OHB fail status is displayed.
HBA FAIL (On/Off)	-	-	×	HBA fail status is displayed.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Item (Unit)	Data monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
OHB SIG (On/Off)	-	-	×	OHB operation (On/Off) status is displayed.
HBA SIG (On/Off)	-	-	×	HBA operation (On/Off) status is displayed.
STP OFF RLY (On/Off)	-	-	×	Stop lamp relay signal (On/Off) status is displayed.

×: Applicable

-: Not applicable

ACTIVE TEST

CAUTION:

- Do not perform active test while driving vehicle.
- Make sure to completely bleed air from brake system.
- The active test cannot be performed with the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp or brake warning lamp on.
- ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp are on during active test.

NOTE:

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal. (Only solenoid valve and ABS motor.)
- "TEST IS STOPPED" is displayed 10 seconds after operation start.
- After "TEST IS STOPPED" is displayed, to perform test again, touch BACK.

Test Item

SOLENOID VALVE

- When performing an active test of the ABS function, select "MAIN SIGNALS" for each test item.
- For ABS solenoid valve, touch "Up", "Keep", and "Down" on the display screen. For ABS solenoid valve (ACT), touch "Up", "ACT UP", "ACT KEEP" and confirm that solenoid valves operate as shown in the table below.

Operation		ABS solenoid valve			ABS solenoid valve (ACT)		
		Up	Keep	Down	Up	ACT UP	ACT KEEP
FR RH SOL	FR RH IN SOL	Off	On	On	—	—	—
	FR RH OUT SOL	Off	Off	On*	—	—	—
FR LH SOL	FR LH IN SOL	Off	On	On	—	—	—
	FR LH OUT SOL	Off	Off	On*	—	—	—
RR RH SOL	RR RH IN SOL	Off	On	On	—	—	—
	RR RH OUT SOL	Off	Off	On*	—	—	—
RR LH SOL	RR LH IN SOL	Off	On	On	—	—	—
	RR LH OUT SOL	Off	Off	On*	—	—	—
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	—	—	—	Off	Off	Off
	FR RH OUT SOL	—	—	—	Off	Off	Off
	CV1	—	—	—	Off	On	On
	SV1	—	—	—	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	—	—	—	Off	Off	Off
	FR LH OUT SOL	—	—	—	Off	Off	Off
	CV1	—	—	—	Off	On	On
	SV1	—	—	—	Off	On*	Off

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Operation		ABS solenoid valve			ABS solenoid valve (ACT)		
		Up	Keep	Down	Up	ACT UP	ACT KEEP
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	—	—	—	Off	Off	Off
	RR RH OUT SOL	—	—	—	Off	Off	Off
	CV2	—	—	—	Off	On	On
	SV2	—	—	—	Off	On*	Off
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	—	—	—	Off	Off	Off
	RR LH OUT SOL	—	—	—	Off	Off	Off
	CV2	—	—	—	Off	On	On
	SV2	—	—	—	Off	On*	Off

*: On for 1 to 2 seconds after the touch, and then Off

ABS MOTOR

- Touch “On” and “Off” on screen. Make sure motor relay and actuator relay operates as shown in table below.

Operation	On	Off
MOTOR RELAY	On	Off
ACTUATOR RLY	On	On

BOOSTER DRIVE

- Touch “Up” and “Down” on the screen. Check that booster drive operates as shown in table below.

CAUTION:

Perform active test subject to the conditions below.

- Do not operate brake pedal during active test.
- Make sure the engine revolution is over 500 rpm.
- Make sure the vehicle is not moving.

Operation	Up	Down
BST OPER SIG	On	Off
PRESS SENSOR	50 ± 5 bar	0 bar
PRESS SEN2	50 ± 5 bar	0 bar
STOP LAMP SW	On	Off
STP OFF RLY	Off	Off

WORK SUPPORT

Conditions	Description
ST ANGLE SENSOR ADJUSTMENT	Perform neutral position adjustment of steering angle sensor.
DECEL G SEN CALIBRATION	Perform decel G sensor calibration.

DTC/CIRCUIT DIAGNOSIS

C1101, C1102, C1103, C1104 WHEEL SENSOR-1

DTC Logic

INFOID:000000011543567

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1101	RR RH SENSOR-1	<ul style="list-style-type: none"> When power supply voltage of rear wheel sensor RH is low. When an open or shorted circuit is detected in rear wheel sensor RH circuit. 	<ul style="list-style-type: none"> Harness or connector Wheel sensor ABS actuator and electric unit (control unit)
C1102	RR LH SENSOR-1	<ul style="list-style-type: none"> When power supply voltage of rear wheel sensor LH is low. When an open or shorted circuit is detected in rear wheel sensor LH circuit. 	
C1103	FR RH SENSOR-1	<ul style="list-style-type: none"> When power supply voltage of front wheel sensor RH is low. When an open or shorted circuit is detected in front wheel sensor RH circuit. 	
C1104	FR LH SENSOR-1	<ul style="list-style-type: none"> When power supply voltage of front wheel sensor LH is low. When an open or shorted circuit is detected in front wheel sensor LH circuit. 	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULT

ⓐ With CONSULT.

- Start engine and drive vehicle at approximately 21 km/h (13 MPH) or more for approximately 5 minutes.
- Perform self-diagnostic result.

Is DTC C1101, C1102, C1103 or C1104 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-29, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000011543568

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1. CONFIRM DTC

ⓐ With CONSULT

- Perform self-diagnostic result of ABS and record all active DTCs.
- Clear all DTCs.
- Perform DTC confirmation procedure. Refer to [BRC-29, "DTC Logic"](#).

Does DTC C1101, C1102, C1103 or C1104 reset?

- YES >> GO TO 2.
 NO >> Refer to [GI-43, "Intermittent Incident"](#).

2. INSPECT WHEEL SENSOR

Inspect the suspect wheel sensor for damage or deformation.

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair or replace as necessary.

3. HARNESS AND CONNECTOR INSPECTION

C1101, C1102, C1103, C1104 WHEEL SENSOR-1

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

1. Disconnect ABS actuator and electric unit (control unit) connector E125 and wheel sensor connector of suspect wheel.
2. Check harness, connectors and terminals for corrosion, deformation, disconnection, looseness or damage.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace as necessary.

4. CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Connect ABS active wheel sensor tester (J-45741) to wheel sensor using appropriate adapter.
2. Turn on the ABS active wheel sensor tester power switch.

NOTE:

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

3. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash ON and OFF to indicate an output signal.

NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

YES >> GO TO 5.

NO >> Replace the wheel sensor. Refer to [BRC-112, "Removal and Installation"](#).

5. CHECK WIRING HARNESS FOR SHORT TO VOLTAGE

1. Turn ignition switch ON.
2. Check voltage between wheel sensor harness connector terminals of suspect wheel and ground.

Wheel Sensor			Ground	Voltage
Wheel	Connector	Terminal		
Front LH	E18	1	—	0V
		2		
Front RH	E117	1		
		2		
Rear LH	C11	1		
		2		
Rear RH	C10	1		
		2		

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair the circuit.

6. CHECK WIRING HARNESS FOR SHORT TO GROUND

1. Turn ignition switch OFF.
2. Check continuity between wheel sensor harness connector terminals of suspect wheel and ground.

Wheel Sensor			Ground	Continuity
Wheel	Connector	Terminal		

C1101, C1102, C1103, C1104 WHEEL SENSOR-1

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Front LH	E18	1	—	No	A			
		2						
Front RH	E117	1				B		
		2						
Rear LH	C11	1					C	
		2						
Rear RH	C10	1						D
		2						

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair the circuit.

7. CHECK WIRING HARNESS FOR SHORT BETWEEN CIRCUITS

Check continuity between wheel sensor harness connector terminals of suspect wheel.

Wheel Sensor		(+)	(-)	Continuity	BRC
Wheel	Connector	Terminal	Terminal		
Front LH	E18	1	2	No	G
Front RH	E117				
Rear LH	C11				
Rear RH	C10				

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair the circuit.

8. CHECK WIRING HARNESS FOR OPEN CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) harness connector E125 and harness connector of suspect wheel sensor.

Wheel sensor	ABS actuator and electric unit (control unit)		Wheel sensor		Continuity	K		
	Connector	Terminal	Connector	Terminal				
Front LH	E125	45	E18	2	Yes	L		
		46		1				
Front RH		34	E117	2		M		
		33		1				
Rear LH		37	C11	2			N	
		36		1				
Rear RH		42	C10	2				O
		43		1				

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair the circuit.

9. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between ABS actuator and electric unit (control unit) harness connector E125 terminal and ground.

C1101, C1102, C1103, C1104 WHEEL SENSOR-1

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
E125	4	—	Ignition switch ON	Battery voltage
			Ignition switch OFF	0V

Is the inspection result normal?

YES >> GO TO 10.

NO >> Check the following:

- 10A fuse No. 50 located in the IPDM E/R
- Harness between ABS actuator and electric unit (control unit) and IPDM E/R

10.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16	Ground	Yes
	47		

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace malfunctioning components.

11.CHECK WHEEL SENSOR INPUT VOLTAGE

1. Connect ABS actuator and electric unit (control unit) connector E125.
2. Turn ignition switch ON.
3. Check voltage between suspect wheel sensor harness connector terminals.

Wheel Sensor		(+)	(-)	Voltage (Approx.)
Wheel	Connector	Terminal	Terminal	
Front LH	E18	1	2	Battery voltage
Front RH	E117			
Rear LH	C11			
Rear RH	C10			

Is the inspection result normal?

YES >> Replace wheel sensor. Refer to [BRC-112, "Removal and Installation"](#). Then, GO TO 12.

NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

12.CONFIRM REPAIR

Ⓟ With CONSULT

1. Clear all DTCs.
2. Perform DTC confirmation procedure. Refer to [BRC-29, "DTC Logic"](#).

Does DTC C1101, C1102, C1103 or C1104 reset?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

NO >> Inspection End.

C1105, C1106, C1107, C1108 WHEEL SENSOR-2

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1105, C1106, C1107, C1108 WHEEL SENSOR-2

DTC Logic

INFOID:000000011543569

DTC DETECTION LOGIC

DTC	Display Item	Malfunction detected condition	Possible causes
C1105	RR RH SENSOR-2	<ul style="list-style-type: none">When distance between rear wheel sensor RH and rear wheel sensor RH rotor is large.When installation of rear wheel sensor RH or rear wheel sensor RH rotor is not normal.	<ul style="list-style-type: none">Wheel sensorABS actuator and electric unit (control unit)Sensor rotor
C1106	RR LH SENSOR-2	<ul style="list-style-type: none">When distance between rear wheel sensor LH and rear wheel sensor LH rotor is large.When installation of rear wheel sensor LH or rear wheel sensor LH rotor is not normal.	
C1107	FR RH SENSOR-2	<ul style="list-style-type: none">When distance between front wheel sensor RH and front wheel sensor RH rotor is large.When installation of front wheel sensor RH or front wheel sensor RH rotor is not normal.	
C1108	FR LH SENSOR-2	<ul style="list-style-type: none">When distance between front wheel sensor LH and front wheel sensor LH rotor is large.When installation of front wheel sensor LH or front wheel sensor LH rotor is not normal.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULT

④ With CONSULT.

- Start engine and drive vehicle at approximately 21 km/h (13 MPH) or more for approximately 5 minutes.
- Perform self-diagnostic result.

Is DTC C1105, C1106, C1107 or C1108 detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-33, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000011543570

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1. CONFIRM DTC

④ With CONSULT

- Perform self-diagnostic result of ABS and record all active DTCs.
- Clear all DTCs.
- Perform DTC confirmation procedure. Refer to [BRC-33, "DTC Logic"](#).

Does DTC C1105, C1106, C1107 or C1108 reset?

- YES >> GO TO 2.
NO >> Refer to [GI-43, "Intermittent Incident"](#).

2. CHECK TIRE PRESSURE AND TIRE WEAR

Check tires for excessive wear and proper inflation. Refer to [WT-51, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace as necessary.

3. CHECK WHEEL SENSOR

Check wheel sensor for the following:

- Proper installation

C1105, C1106, C1107, C1108 WHEEL SENSOR-2

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

- Physical damage
- Contamination

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace as necessary.

4.CHECK SENSOR ROTOR

Check sensor rotor for the following:

- Contamination
- Physical damage (missing teeth, cracks, etc.)
- Foreign material
- Looseness

Is the inspection result normal?

- YES >> Replace the wheel sensor. Refer to [BRC-112. "Removal and Installation"](#). Then, GO TO 5.
NO >> Repair or replace as necessary.

5.CONFIRM REPAIR

④ With CONSULT

1. Clear all DTCs.
2. Perform DTC confirmation procedure. Refer to [BRC-33. "DTC Logic"](#).

Does DTC C1105, C1106, C1107 or C1108 reset?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Removal and Installation"](#).
NO >> Inspection End.

C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1109 POWER AND GROUND SYSTEM

Description

INFOID:0000000011290004

Supplies electric power to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000011290005

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1109	BATTERY VOLTAGE [ABNORMAL]	When the ABS actuator and electric unit (control unit) power supply voltage is lower than normal.	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
BATTERY VOLTAGE [ABNORMAL]

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-35, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290006

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2
NO >> Poor connection of connector terminal. Repair or replace connector.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT AND GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Turn ignition switch ON or OFF and check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 4 and ground.

ABS actuator and electric unit (control unit)		—	Condition	Voltage
Connector	Terminal			
E125	4	Ground	Ignition switch: ON	Battery voltage
			Ignition switch: OFF	Approx. 0V

C1109 POWER AND GROUND SYSTEM

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

4. Turn ignition switch OFF.
5. Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

- YES >> Check battery for terminal looseness, low voltage, etc. If any malfunction is found, repair malfunctioning parts.
- NO >> Repair or replace malfunctioning components.

Special Repair Requirement

INFOID:000000011290007

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

DTC Logic

INFOID:0000000011290008

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1110	CONTROLLER FAILURE	When there is an internal malfunction in the ABS actuator and electric unit (control unit).	• ABS actuator and electric unit (control unit)
C1170	VARIANT CODING	In a case where VARIANT CODING is different.	

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
CONTROLLER FAILURE
VARIANT CODING

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-37, "Diagnosis Procedure"](#).
- NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290009

1.REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

- >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

Special Repair Requirement

INFOID:0000000011290010

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

Description

INFOID:0000000011290011

PUMP

The pump returns the brake fluid stored in the reservoir to the master cylinder by reducing the pressure.

MOTOR

The motor drives the pump according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000011290012

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1111	PUMP MOTOR	During the actuator motor operating with ON, when the actuator motor turns OFF, or when the control line for actuator motor relay is open.	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)
		During the actuator motor operating with OFF, when the actuator motor turns ON, or when the control line for relay is shorted to ground.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
PUMP MOTOR

Is above displayed on the self-diagnosis display?

YES >> Proceed to diagnosis procedure. Refer to [BRC-38, "Diagnosis Procedure"](#).

NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290013

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnect, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

YES >> GO TO 2

NO >> Poor connection of connector terminal. Repair or replace connector.

2. CHECK ABS MOTOR AND MOTOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check voltage between the ABS actuator and electric unit (control unit) connector E125 terminal 1 and ground.

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace malfunctioning components.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000011290014

1.CHECK ACTIVE TEST

1. On "ACTIVE TEST", select "ABS MOTOR".
2. Touch "On" and "Off" on screen. Make sure motor relay and actuator relay operates as shown in table below.

Operation	On	Off
MOTOR RELAY	On	Off
ACTUATOR RLY	On	On

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-38. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000011290015

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

Description

INFOID:000000011290016

The yaw rate/side/decel G sensor detects the yaw rate/side/decel G affecting the vehicle, and transmits the data to the ABS actuator and electric unit (control unit) as an analog voltage signal.

DTC Logic

INFOID:000000011290017

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1113	G-SENSOR	Longitudinal G-sensor is malfunctioning, or signal line of longitudinal G-sensor is open or shorted.	• Harness or connector • ABS actuator and electric unit (control unit) • Yaw rate/side/decel G sensor
C1145	YAW RATE SENSOR	Yaw rate sensor is malfunctioning, or the yaw rate sensor signal line is open or shorted.	
C1146	SIDE G-SEN CIRCUIT	Side G sensor is malfunctioning, or circuit of side G sensor is open or shorted.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
G-SENSOR
YAW RATE SENSOR
SIDE G-SEN CIRCUIT

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-40. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011290018

Regarding Wiring Diagram information, refer to [BRC-91. "Wiring Diagram"](#).

CAUTION:

- Sudden turns (such as spin turns, acceleration turns), drifting, etc. when VDC function is OFF may cause the yaw rate/side/decel G sensor system to indicate a malfunction. This is not a malfunction if normal operation can be resumed after restarting the engine.
- If vehicle is on turn table at entrance to parking garage, or on other moving surface, SLIP indicator lamp may illuminate and CONSULT self-diagnosis may indicate yaw rate sensor system malfunction. However, in this case there is no malfunction in yaw rate sensor system. Take vehicle off of turn table or other moving surface, and start engine. Results will return to normal.

1. CONNECTOR INSPECTION

1. Disconnect the ABS actuator and electric unit (control unit) connector and yaw rate/side/decel G sensor connector.
2. Check the terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2. YAW RATE/SIDE/DECEL G SENSOR HARNESS INSPECTION

Check continuity between the ABS actuator and electric unit (control unit) connector E125 and the yaw rate/side/decel G sensor connector M108.

C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		Yaw rate/side/decel G sensor		Continuity
Connector	Terminal	Connector	Terminal	
E125	6	M108	4	Yes
	24		1	
	25		2	
	29		3	

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace as necessary.

3. YAW RATE/SIDE/DECEL G SENSOR INSPECTION

1. Connect the yaw rate/side/decel G sensor connector and ABS actuator and electric unit (control unit) connector.
2. Perform the yaw rate/side/decel G sensor component inspection. Refer to [BRC-41, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

NO >> Replace the yaw rate/side/decel G sensor. Refer to [BRC-117, "Removal and Installation"](#).

Component Inspection

INFOID:000000011290019

1. CHECK DATA MONITOR

Select "YAW RATE SEN", "SIDE G-SENSOR", "DECEL G-SEN" in "DATA MONITOR" and check yaw rate/side/decel G sensor signal.

Vehicle condition	YAW RATE SEN (DATA MONITOR)	SIDE G-SENSOR (DATA MONITOR)	DECEL G-SEN (DATA MONITOR)
Stopped	-4 to +4 deg/s	-1.1 to +1.1 m/s	-0.11 G to +0.11 G
Turning right	Negative value	Negative value	-
Turning left	Positive value	Positive value	-
Speed up	-	-	Negative value
Speed down	-	-	Positive value

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-40, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011290020

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1115 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1115 WHEEL SENSOR

Description

INFOID:000000011290021

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000011290022

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1115	ABS SENSOR [ABNORMAL SIGNAL]	When wheel sensor input signal is malfunctioning.	<ul style="list-style-type: none">• Harness or connector• Wheel sensor• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ABS SENSOR [ABNORMAL SIGNAL]

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-42. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011290023

Regarding Wiring Diagram information, refer to [BRC-91. "Wiring Diagram"](#).

CAUTION:

Do not check between wheel sensor terminals.

1. CONNECTOR INSPECTION

1. Disconnect the ABS actuator and electric unit (control unit) connector and wheel sensor of malfunctioning code.
2. Check the terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2. CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Connect ABS active wheel sensor tester (J-45741) to wheel sensor using appropriate adapter.
2. Turn on the ABS active wheel sensor tester power switch.

NOTE:

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

3. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash on and off to indicate an output signal.

NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

- YES >> GO TO 3
NO >> Replace the wheel sensor. Refer to [BRC-112. "Removal and Installation"](#).

C1115 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

3. CHECK TIRES

Check the inflation pressure, wear and size of each tire.

Is the inspection result normal?

YES >> GO TO 4

NO >> Adjust tire pressure or replace tire(s).

4. CHECK WHEEL BEARINGS

Check wheel bearing axial end play. Refer to [FAX-6, "On-Vehicle Inspection and Service"](#) (front) or [RAX-6, "On-Vehicle Inspection and Service"](#) (rear).

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair or replace as necessary. Refer to [FAX-7, "Removal and Installation"](#) (front) or [RAX-7, "Removal and Installation"](#) (rear).

5. CHECK WIRING HARNESS FOR SHORT CIRCUIT


1. Disconnect ABS actuator and electric unit (control unit) connector and wheel sensor connector of malfunction code.
2. Check continuity between wheel sensor connector terminals and ground.

Continuity should not exist.

Is the inspection result normal?

YES >> GO TO 6

NO >> Repair the circuit.

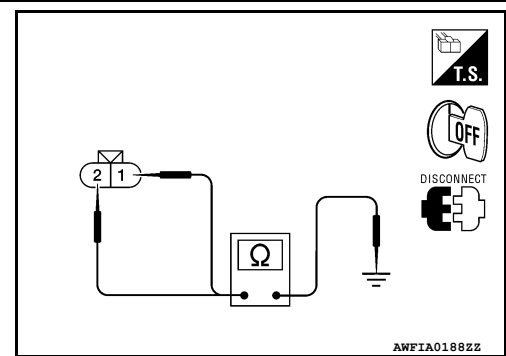

6. CHECK WIRING HARNESS FOR OPEN CIRCUIT

1. Check continuity between ABS actuator and electric unit (control unit) connector and the malfunctioning wheel sensor connector.

Wheel sensor	ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
	Connector	Terminal	Connector	Terminal	
Front LH	E125	45	E18	2	Yes
		46		1	
Front RH		34	E117	2	
		33		1	
Rear LH		37	C11	1	
		36		2	
Rear RH		42	C10	1	
		43		2	

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

NO >> Repair the circuit.

Component Inspection

INFOID:000000011290024

1. CHECK DATA MONITOR

On "DATA MONITOR", select "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR", and "RR RH SENSOR", and check the vehicle speed.

C1115 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Wheel sensor	Vehicle speed (DATA MONITOR)
FR LH SENSOR	Nearly matches the speedometer display ($\pm 10\%$ or less)
FR RH SENSOR	
RR LH SENSOR	
RR RH SENSOR	

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-42, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011290025

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1116 STOP LAMP SWITCH

Description

INFOID:0000000011290026

The stop lamp switch transmits the stop lamp switch signal (ON/OFF) to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000011290027

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1116	STOP LAMP SW	When stop lamp switch circuit is open.	<ul style="list-style-type: none">• Harness or connector• Stop lamp switch• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
STOP LAMP SW

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-45, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290028

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Disconnect the ABS actuator and electric unit (control unit) connector and stop lamp switch connector.
2. Check the terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair or replace as necessary.

2. STOP LAMP SWITCH INSPECTION

1. Connect the stop lamp switch connector.
2. Check the voltage between the ABS actuator and electric unit (control unit) connector E125 terminal 41 and body ground.

Brake pedal depressed : Battery voltage (approx. 12V)

Brake pedal released : Approx. 0V

Is the inspection result normal?

- YES >> Perform self-diagnosis again. If the same results appear, replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).
NO >> GO TO 3

3. STOP LAMP RELAY CIRCUIT INSPECTION

1. Disconnect the stop lamp relay connector.
2. Check the continuity between the ABS actuator and electric unit (control unit) connector E125 terminal 41 and stop lamp relay connector E12 terminal 4.

C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Continuity should exist.

Is the inspection result normal?

- YES >> Refer to [EXL-4, "Work Flow"](#).
- NO >> Repair or replace malfunctioning components.

Special Repair Requirement

INFOID:000000011290029

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1120, C1122, C1124, C1126 IN ABS SOL

Description

INFOID:0000000011290030

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000011290031

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1120	FR LH IN ABS SOL	When the control unit detects a malfunction in the front LH inlet solenoid circuit.	• ABS actuator and electric unit (control unit)
C1122	FR RH IN ABS SOL	When the control unit detects a malfunction in the front RH inlet solenoid circuit.	
C1124	RR LH IN ABS SOL	When the control unit detects a malfunction in the rear LH inlet solenoid circuit.	
C1126	RR RH IN ABS SOL	When the control unit detects a malfunction in the rear RH inlet solenoid circuit.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
FR LH IN ABS SOL
FR RH IN ABS SOL
RR LH IN ABS SOL
RR RH IN ABS SOL

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-47. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290032

Regarding Wiring Diagram information, refer to [BRC-91. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2
NO >> Poor connection of connector terminal. Repair or replace connector.

2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.

C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

3. Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 32 and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	32	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3
 NO >> Repair or replace malfunctioning components.

3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACUATOR RELAY GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).
 NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000011290033

1.CHECK ACTIVE TEST

1. Select each test menu item on "ACTIVE TEST".
2. On the display, touch "Up", "Keep", and "Down", and check that the system operates as shown in the table below.

Operation		ABS solenoid valve		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*

*: On for 1 to 2 seconds after the touch, and then Off

Is the inspection result normal?

- YES >> Inspection End
 NO >> Go to diagnosis procedure. Refer to [BRC-47, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000011290034

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit).
Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1121, C1123, C1125, C1127 OUT ABS SOL

Description

INFOID:000000011290035

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000011290036

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1121	FR LH OUT ABS SOL	When the control unit detects a malfunction in the front LH outlet solenoid circuit.	• ABS actuator and electric unit (control unit)
C1123	FR RH OUT ABS SOL	When the control unit detects a malfunction in the front RH outlet solenoid circuit.	
C1125	RR LH OUT ABS SOL	When the control unit detects a malfunction in the rear LH outlet solenoid circuit.	
C1127	RR RH OUT ABS SOL	When the control unit detects a malfunction in the rear RH outlet solenoid circuit.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
FR LH OUT ABS SOL
FR RH OUT ABS SOL
RR LH OUT ABS SOL
RR RH OUT ABS SOL

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-50. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011290037

Regarding Wiring Diagram information, refer to [BRC-91. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2
NO >> Poor connection of connector terminal. Repair or replace connector.

2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.

C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

- Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 32 and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	32	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3
 NO >> Repair or replace malfunctioning components.

3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACUATOR RELAY GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Removal and Installation"](#).
 NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000011290038

1.CHECK ACTIVE TEST

- Select each test menu item on "ACTIVE TEST".
- On the display, touch "Up", "Keep", and "Down", and check that the system operates as shown in the table below.

Operation		ABS solenoid valve		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*

*: On for 1 to 2 seconds after the touch, and then Off

Is the inspection result normal?

- YES >> Inspection End
 NO >> Go to diagnosis procedure. Refer to [BRC-68. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000011290039

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit).
Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1130, C1131, C1132, C1133, C1136 ENGINE SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1130, C1131, C1132, C1133, C1136 ENGINE SIGNAL

Description

INFOID:0000000011290040

ABS actuator and electric unit (control unit) and ECM exchange the engine signal with CAN communication line.

DTC Logic

INFOID:0000000011290041

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1130	ENGINE SIGNAL 1	Based on the signal from ECM, ABS actuator and electric unit (control unit) judges that engine fuel cut system is malfunctioning.	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)• ECM• CAN communication line
C1131	ENGINE SIGNAL 2		
C1132	ENGINE SIGNAL 3		
C1133	ENGINE SIGNAL 4		
C1136	ENGINE SIGNAL 6		

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ENGINE SIGNAL 1
ENGINE SIGNAL 2
ENGINE SIGNAL 3
ENGINE SIGNAL 4
ENGINE SIGNAL 6

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-53, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290042

1. CHECK ENGINE SYSTEM

1. Perform ECM self-diagnosis. Repair or replace items indicated, then perform ECM self-diagnosis again. Refer to [EC-49, "CONSULT Function"](#).
2. Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> Repair or replace the affected part.
NO >> Inspection End

Special Repair Requirement

INFOID:0000000011290043

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

C1130, C1131, C1132, C1133, C1136 ENGINE SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit).
Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1140 ACTUATOR RLY

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1140 ACTUATOR RLY

Description

INFOID:0000000011290044

Activates or deactivates each solenoid valve according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000011290045

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1140	ACTUATOR RLY	ABS actuator relay or circuit malfunction.	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ACTUATOR RLY

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-55. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290046

Regarding Wiring Diagram information, refer to [BRC-91. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2
NO >> Poor connection of connector terminal. Repair or replace connector.

2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 32 and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	32	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3
NO >> Repair or replace malfunctioning components.

C1140 ACTUATOR RLY

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

3. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACUATOR RELAY GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:000000011290047

1. CHECK ACTIVE TEST

1. On "ACTIVE TEST", select "ABS MOTOR".
2. Touch "On" and "Off" on screen. Make sure motor relay and actuator relay operates as shown in table below.

Operation	On	Off
MOTOR RELAY	On	Off
ACTUATOR RLY	On	On

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-38. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011290048

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1142 PRESS SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1142 PRESS SENSOR

Description

INFOID:0000000011290049

The front and rear pressure sensors convert the brake fluid pressure to an electric signal and transmit it to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000011290050

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1142	PRESS SEN CIRCUIT	Pressure sensor signal line is open or shorted, or pressure sensor is malfunctioning.	<ul style="list-style-type: none">• Harness or connector• Pressure sensor• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
PRESS SEN CIRCUIT

Is above displayed on the self-diagnosis display?

YES >> Proceed to diagnosis procedure. Refer to [BRC-57. "Diagnosis Procedure \(Front Pressure Sensor\)"](#) or [BRC-58. "Diagnosis Procedure \(Rear Pressure Sensor\)"](#).

NO >> Inspection End

Diagnosis Procedure (Front Pressure Sensor)

INFOID:0000000011290051

Regarding Wiring Diagram information, refer to [BRC-91. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the front pressure sensor connector and ABS actuator and electric unit (control unit) connector and inspect the terminals for deformation, disconnection, looseness, or damage.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair connector.

2. FRONT PRESSURE SENSOR CIRCUIT INSPECTION

1. Measure the continuity between the ABS actuator and electric unit (control unit) connector E125 (A) and front pressure sensor connector E31 (B).

ABS actuator and electric unit (control unit)		Front pressure sensor		Continuity
Connector	Terminal	Connector	Terminal	
E125 (A)	18	E31 (B)	3	Yes
	19		1	
	20		2	

2. Measure the continuity between the ABS actuator and electric unit (control unit) connector E125 (A) and body ground.

C1142 PRESS SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125 (A)	18	Ground	No
	19		
	20		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connector.

3.FRONT PRESSURE SENSOR INSPECTION

1. Reconnect the front pressure sensor and ABS actuator and electric unit (control unit) connectors.
2. Perform PRESS SENSOR component inspection. Refer to [BRC-59, "Component Inspection \(Front Pressure Sensor\)"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace the front pressure sensor.

Diagnosis Procedure (Rear Pressure Sensor)

INFOID:000000011290052

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the rear pressure sensor connector and ABS actuator and electric unit (control unit) connector and inspect the terminals for deformation, disconnection, looseness, or damage.

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair connector.

2.REAR PRESSURE SENSOR CIRCUIT INSPECTION

1. Measure the continuity between the ABS actuator and electric unit (control unit) connector E125 (A) and rear pressure sensor connector E32 (B).

ABS actuator and electric unit (control unit)		Rear pressure sensor		Continuity
Connector	Terminal	Connector	Terminal	
E125 (A)	21	E32 (B)	1	Yes
	22		3	
	23		2	

2. Measure the continuity between the ABS actuator and electric unit (control unit) connector E125 (A) and body ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125 (A)	21	Ground	No
	22		
	23		

Is the inspection result normal?

YES >> GO TO 3

C1142 PRESS SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

3. REAR PRESSURE SENSOR INSPECTION

1. Reconnect the rear pressure sensor and ABS actuator and electric unit (control unit) connectors.
2. Perform PRESS SEN2 component inspection. Refer to [BRC-59. "Component Inspection \(Rear Pressure Sensor\)"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace the rear pressure sensor.

Component Inspection (Front Pressure Sensor)

INFOID:000000011290053

1. CHECK DATA MONITOR

On "DATA MONITOR", select "PRESS SENSOR" and check the brake fluid pressure.

Condition	PRESS SENSOR (DATA MONITOR)
With ignition switch ON and brake pedal released.	Approx. 0 bar
With ignition switch ON and brake pedal depressed.	Positive value

BRC

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-57. "Diagnosis Procedure \(Front Pressure Sensor\)"](#).

Component Inspection (Rear Pressure Sensor)

INFOID:000000011290054

1. CHECK DATA MONITOR

On "DATA MONITOR", select "PRESS SEN2" and check the brake fluid pressure.

Condition	PRESS SEN2 (DATA MONITOR)
With ignition switch ON and brake pedal released.	Approx. 0 bar
With ignition switch ON and brake pedal depressed.	Positive value

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-58. "Diagnosis Procedure \(Rear Pressure Sensor\)"](#).

C1143, C1144 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1143, C1144 STEERING ANGLE SENSOR

Description

INFOID:000000011290055

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

DTC Logic

INFOID:000000011290056

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1143	ST ANG SEN CIRCUIT	Neutral position of steering angle sensor is dislocated, or the steering angle sensor is malfunctioning.	<ul style="list-style-type: none">• Harness or connector• Steering angle sensor• ABS actuator and electric unit (control unit)
C1144	ST ANG SEN SIGNAL	Neutral position of steering angle sensor is not finished.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ST ANG SEN CIRCUIT
ST ANG SEN SIGNAL

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-60, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011290057

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect steering angle sensor connector.
4. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
5. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2
NO >> Poor connection of connector terminal. Repair or replace connector.

2. CHECK STEERING ANGLE SENSOR HARNESS


C1143, C1144 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]


1. Turn ignition switch OFF.
2. Disconnect steering angle sensor connector.
3. Check continuity between steering angle sensor connector M17 terminal 2 and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M17	2	Ground	Yes

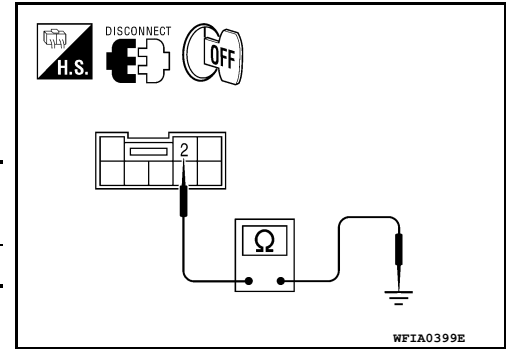

4. Turn ignition switch ON.
5. Check voltage between steering angle sensor connector M17 terminal 3 and ground.

Steering angle sensor		—	Voltage
Connector	Terminal		
M17	3	Ground	Battery voltage

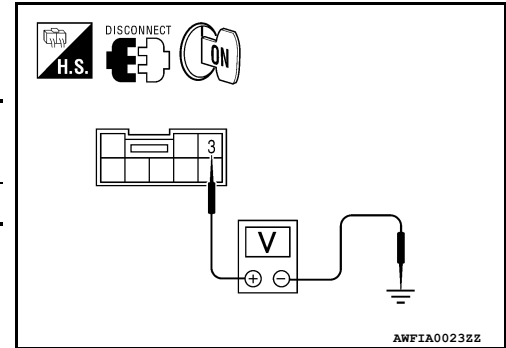

Is the inspection result normal?

- YES >> GO TO 3
 NO >> Repair or replace malfunctioning components.

3. STEERING ANGLE SENSOR INSPECTION

1. Connect the steering angle sensor connector and ABS actuator and electric unit (control unit) connector.
2. Perform the steering angle sensor component inspection. Refer to [BRC-61. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Removal and Installation"](#).
 NO >> Replace steering angle sensor and adjust neutral position of steering angle sensor. Refer to [BRC-116. "Removal and Installation"](#).

Component Inspection

INFOID:000000011290058

1. CHECK DATA MONITOR

Select "STR ANGLE SIG" in "DATA MONITOR" and check steering angle sensor signal.

Steering condition	STR ANGLE SIG (DATA MONITOR)
Driving straight	0±2.5 °
Turn 90 ° to left	Approx. +90 °
Turn 90 ° to right	Approx. -90 °

Is the inspection result normal?

- YES >> Inspection End
 NO >> Go to diagnosis procedure. Refer to [BRC-60. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011290059

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

C1143, C1144 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit).
Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1155 BRAKE FLUID LEVEL SWITCH

Description

INFOID:0000000011290060

The brake fluid level switch converts the brake fluid level to an electric signal and transmits it to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000011290061

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1155	BR FLUID LEVEL LOW	Brake fluid level is low or communication line between the ABS actuator and electric unit (control unit) and brake fluid level switch is open or shorted.	<ul style="list-style-type: none"> • Harness or connector • Brake fluid level switch • Brake fluid level

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
BR FLUID LEVEL LOW

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-63. "Diagnosis Procedure"](#).
 NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290062

Regarding Wiring Diagram information, refer to [BRC-91. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Disconnect ABS actuator and electric unit (control unit) connector and brake fluid level switch connector.
2. Check the terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2
 NO >> Repair or replace as necessary.

2. CHECK HARNESS BETWEEN BRAKE FLUID LEVEL SWITCH AND ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

1. Check continuity between ABS actuator and electric unit (control unit) connector E125 (A) terminal 8 and brake fluid level switch connector E21 (B) terminal 1.

ABS actuator and electric unit (control unit)		Brake fluid level switch		Continuity
Connector	Terminal	Connector	Terminal	
E125 (A)	8	E21 (B)	1	Yes

2. Check continuity between ABS actuator and electric unit (control unit) connector E125 (A) terminal 8 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125 (A)	8	Ground	No

C1155 BRAKE FLUID LEVEL SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 3
- NO >> Repair or replace malfunctioning components.


3. CHECK BRAKE FLUID LEVEL SWITCH GROUND

Check continuity between brake fluid level switch connector E21 terminal 2 and ground.

Brake fluid level switch		—	Continuity
Connector	Terminal		
E21	2	Ground	Yes

Is the inspection result normal?

- YES >> GO TO 4
- NO >> Repair or replace malfunctioning components.

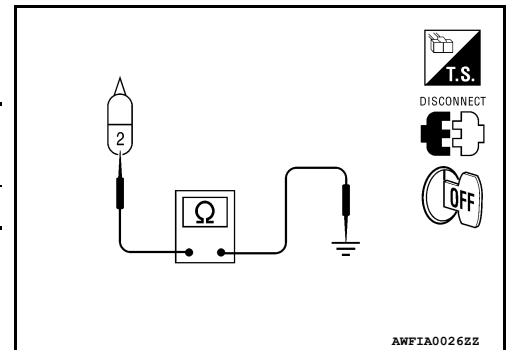

4. CHECK BRAKE FLUID LEVEL SWITCH

Perform the brake fluid level switch component inspection. Refer to [BRC-64, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Perform self-diagnosis again. If the same results appear, replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).
- NO >> Replace brake fluid level switch.

Component Inspection

INFOID:000000011290063


1. CHECK BRAKE FLUID LEVEL SWITCH

1. Turn ignition switch OFF.
2. Disconnect brake fluid level switch connector.
3. Check continuity between brake fluid level switch terminals.

Brake fluid level switch	Condition	Continuity
Terminal		
1 - 2	When brake fluid reservoir is full.	No
	When brake fluid reservoir is empty.	Yes

Is the inspection result normal?

- YES >> Inspection End
- NO >> Replace brake fluid level switch.

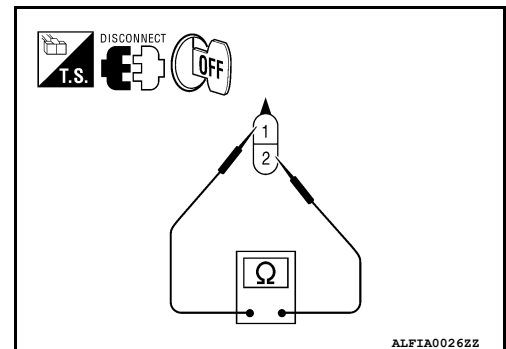

Special Repair Requirement

INFOID:000000011290064

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1156 ST ANG SEN COM CIR

Description

INFOID:0000000011290065

The steering angle sensor is connected to the ABS actuator and electric unit (control unit) in addition to CAN lines. CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:0000000011290066

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1156	ST ANG SEN COM CIR	When steering angle sensor is not transmitting CAN communication signal to the ABS actuator and electric unit (control unit).	<ul style="list-style-type: none"> • Harness or connector • CAN communication line • Steering angle sensor • ABS actuator and electric unit (control unit)

BRC

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ST ANG SEN COM CIR

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-65, "Diagnosis Procedure"](#).
- NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290067

1.CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connector and perform self-diagnosis.

Self-diagnosis results
CAN COMM CIRCUIT
ST ANG SEN COM CIR

Is above displayed on the self-diagnosis display?

- YES >> Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
- NO >> Inspection End

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

C1160 DECEL G SEN SET

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1160 DECEL G SEN SET

Description

INFOID:000000011290068

The yaw rate/side/decel G sensor detects the yaw rate/side/decel G affecting the vehicle, and transmits the data to the ABS actuator and electric unit (control unit) as an analog voltage signal.

DTC Logic

INFOID:000000011290069

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1160	DECEL G SEN SET	ABS decel G sensor adjustment is incomplete.	<ul style="list-style-type: none">Decel G sensor calibrationYaw rate/side/decel G sensorABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
DECEL G SEN SET

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-66, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011290070

1. PERFORM SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis.

Self-diagnosis results
DECEL G SEN SET

Do self-diagnosis results indicate anything other than shown above?

- YES >> Perform repair or replacement for the item indicated.
NO >> Perform calibration of decel G sensor. Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#). GO TO 2

2. PERFORM SELF-DIAGNOSIS AGAIN

- Turn the ignition switch to OFF and then to ON and erase self-diagnosis results.
- Perform ABS actuator and electric unit (control unit) self-diagnosis again. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Are any self-diagnosis results displayed?

- YES >> Replace yaw rate/side/decel G sensor. Refer to [BRC-117, "Removal and Installation"](#).
NO >> Inspection End

C1163 ST ANGLE SEN SAFE

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1163 ST ANGLE SEN SAFE

Description

INFOID:0000000011290071

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

DTC Logic

INFOID:0000000011290072

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1163	ST ANGL SEN SAFE	When steering angle sensor is in safe mode.	• Adjust steering angle sensor neutral position

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ST ANGL SEN SAFE

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-67. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011290073

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Adjust steering angle sensor neutral position. Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.INDICATOR LAMP CHECK

Check that VDC OFF indicator lamp is off.

Is VDC OFF indicator lamp off?

- YES >> Inspection End
NO >> Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

C1164, C1165, C1166, C1167 CV/SV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1164, C1165, C1166, C1167 CV/SV SYSTEM

Description

INFOID:000000011290074

CV1, CV2 (CUT VALVE)

The cut valve shuts off the normal brake fluid path from the master cylinder, when VDC/TCS is activated.

SV1, SV2 (SUCTION VALVE)

The suction valve supplies the brake fluid from the master cylinder to the pump, when VDC/TCS is activated.

DTC Logic

INFOID:000000011290075

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1164	CV1	VDC switch-over solenoid valve (CV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)
C1165	CV2	VDC switch-over solenoid valve (CV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	
C1166	SV1	VDC switch-over solenoid valve (SV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	
C1167	SV2	VDC switch-over solenoid valve (SV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
CV1
CV2
SV1
SV2

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-68. "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011290076

Regarding Wiring Diagram information, refer to [BRC-91. "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform the self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Is any item indicated on the self-diagnosis display?

C1164, C1165, C1166, C1167 CV/SV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

YES >> GO TO 2

NO >> Poor connection of connector terminal. Repair or replace connector.

2.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check voltage between ABS actuator and electric unit (control unit) connector E125 terminal 32 and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E125	32	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace malfunctioning components.

3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACUATOR RELAY GROUND CIRCUIT

Check continuity between ABS actuator and electric unit (control unit) connector E125 terminals 16, 47 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125	16, 47	Ground	Yes

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning components.

Component Inspection

INFOID:0000000011290077

1.CHECK ACTIVE TEST

1. Select each test menu item on "ACTIVE TEST".
2. On the display, touch "Up", "ACT UP", and "ACT KEEP", and check that the system operates as shown in the table below.

Operation		ABS solenoid valve (ACT)		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	SV1	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	SV1	Off	On*	Off
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	CV2	Off	On	On
	SV2	Off	On*	Off

C1164, C1165, C1166, C1167 CV/SV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Operation		ABS solenoid valve (ACT)		
		Up	ACT UP	ACT KEEP
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	CV2	Off	On	On
	SV2	Off	On*	Off

*: On for 1 to 2 seconds after the touch, and then Off

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-68, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011290078

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER

Description

INFOID:000000011290079

The active brake booster consists of a vacuum booster, an active booster control group and a delta stroke sensor. If a brake booster system malfunction occurs due to loss of vacuum, the delta stroke sensor will signal the ABS actuator and electric unit (control unit) that a booster malfunction has occurred. The active booster then applies supplemental force to the master cylinder relative to the amount of force exerted on the brake pedal.

DTC Logic

INFOID:000000011290080

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1178	ABS ACTIVE BOOSTER SV NG	Active booster solenoid is malfunctioning, or signal line of active booster servo is open or shorted.	<ul style="list-style-type: none">• Harness or connector• Active booster• ABS actuator and electric unit (control unit)
C1181	ABS ACTIVE BOOSTER RESPONSE NG	Active booster response is malfunctioning, or signal line of active booster response is open or shorted.	
C1184	ABS BRAKE RELEASE SW NG	Brake release switch is malfunctioning, or signal line of brake release switch is open or shorted.	
C1189	ABS BRAKE BOOSTER DEFECT	Brake booster is defective or malfunctioning.	

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ABS ACTIVE BOOSTER SV NG
ABS ACTIVE BOOSTER RESPONSE NG
ABS BRAKE RELEASE SW NG
ABS BRAKE BOOSTER DEFECT

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-71, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:000000011290081

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the active booster connector and ABS actuator and electric unit (control unit) connector and inspect the terminals for deformation, disconnection, looseness, or damage.

Is the inspection result normal?

- YES >> GO TO 2
NO >> Repair connector.

2. ACTIVE BOOSTER CIRCUIT INSPECTION

1. Measure the continuity between ABS actuator and electric unit (control unit) connector E125 (A) and active booster connector E49 (B).

C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		Active booster		Continuity
Connector	Terminal	Connector	Terminal	
E125 (A)	17	E49 (B)	3	Yes
	27		1	
	28		5	
	30		2	
	31		4	

2. Measure the continuity between ABS actuator and electric unit (control unit) connector E125 (A) and body ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125 (A)	17	Ground	No
	27		
	28		
	30		
	31		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connector.

3. ACTIVE BOOSTER INSPECTION

1. Reconnect the active booster and ABS actuator and electric unit (control unit) connectors.

2. Perform the active booster component inspection. Refer to [BRC-72. "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-114. "Removal and Installation"](#).

NO >> Replace the active booster. Refer to [BR-27. "Removal and Installation"](#).

Component Inspection

INFOID:000000011290082

1. CHECK DATA MONITOR

Use "DATA MONITOR" to check if the status of "RELEASE SWITCH NO" and "RELEASE SWITCH NC" is normal.

Condition	RELEASE SWITCH NO (DATA MONITOR)	RELEASE SWITCH NC (DATA MONITOR)
When brake pedal is depressed.	On	Off
When brake pedal is released.	Off	On

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-71. "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:000000011290083

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

C1178, C1181, C1184, C1189 ABS ACTIVE BOOSTER

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit).
Refer to [BRC-9. "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

C1179 ABS DELTA S SEN NG

Description

INFOID:000000011290084

The active brake booster consists of a vacuum booster, an active booster control group and a delta stroke sensor. If a brake booster system malfunction occurs due to loss of vacuum, the delta stroke sensor will signal the ABS actuator and electric unit (control unit) that a booster malfunction has occurred. The active booster then applies supplemental force to the master cylinder relative to the amount of force exerted on the brake pedal.

DTC Logic

INFOID:000000011290085

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1179	ABS DELTA S SEN NG	Delta stroke sensor is malfunctioning, or signal line of delta stroke sensor is open or shorted.	<ul style="list-style-type: none"> • Harness or connector • Delta stroke sensor • ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSIS RESULTS

Check the self-diagnosis results.

Self-diagnosis results
ABS DELTA S SEN NG

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-74, "Diagnosis Procedure"](#).
- NO >> Inspection End

Diagnosis Procedure

INFOID:000000011290086

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the delta stroke sensor connector and ABS actuator and electric unit (control unit) connector and inspect the terminals for deformation, disconnection, looseness, or damage.

Is the inspection result normal?

- YES >> GO TO 2
- NO >> Repair connector.

2.DELTA STROKE SENSOR CIRCUIT INSPECTION

1. Measure the continuity between ABS actuator and electric unit (control unit) connector E125 (A) and delta stroke sensor connector E114 (B).

ABS actuator and electric unit (control unit)		Delta stroke sensor		Continuity
Connector	Terminal	Connector	Terminal	
A: E125	26	B: E114	1	Yes
	39		3	
	40		5	

C1179 ABS DELTA S SEN NG

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

2. Measure the continuity between ABS actuator and electric unit (control unit) connector E125 (A) and body ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
A: E125	26	Ground	No
	39		
	40		

Is the inspection result normal?

- YES >> GO TO 3
NO >> Repair or replace harness or connector.

3. DELTA STROKE SENSOR INSPECTION

1. Reconnect the delta stroke sensor and ABS actuator and electric unit (control unit) connectors.
2. Perform the delta stroke sensor component inspection. Refer to [BRC-75, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).
NO >> Replace the delta stroke sensor.

Component Inspection

INFOID:0000000011290087

1. CHECK DATA MONITOR

Use "DATA MONITOR" to check if the status of "DELTA S SEN" is normal.

Condition	DELTA S SEN (DATA MONITOR)
When brake pedal is depressed.	1.05–1.80 mm
When brake pedal is released.	0.00 mm (+0.6/-0.4)

Is the inspection result normal?

- YES >> Inspection End
NO >> Go to diagnosis procedure. Refer to [BRC-74, "Diagnosis Procedure"](#).

Special Repair Requirement

INFOID:0000000011290088

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

U1000 CAN COMM CIRCUIT

Description

INFOID:000000011290089

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000011290090

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or more.	<ul style="list-style-type: none">• CAN communication line• ABS actuator and electric unit (control unit)

Diagnosis Procedure

INFOID:000000011290091

1. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Disconnect the ABS actuator and electric unit (control unit) connector.
3. Check the terminals for deformation, disconnection, looseness, and so on. If there is a malfunction, repair or replace the terminal.
4. Reconnect connector and perform self-diagnosis.

Is "CAN COMM CIRCUIT" displayed in self-diagnosis display items?

- YES >> Print out the self-diagnostic results, and refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
- NO >> Connector terminal is loose, damaged, open, or shorted.

VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF SWITCH

Description

INFOID:0000000011290092

VDC OFF switch can deactivate (turn OFF) the VDC/TCS function by pressing the VDC OFF switch.

Component Function Check

INFOID:0000000011290093

1.CHECK VDC OFF SWITCH OPERATION

Turn ON/OFF the VDC OFF switch and check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly.

Condition	VDC OFF indicator lamp illumination status
VDC OFF switch: ON	ON
VDC OFF switch: OFF	OFF

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-77, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011290094

Regarding Wiring Diagram information, refer to [BRC-91, "Wiring Diagram"](#).

1.CHECK VDC OFF SWITCH

Perform the VDC OFF switch component inspection. Refer to [BRC-78, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Replace VDC OFF switch.

2.CHECK VDC OFF SWITCH HARNESS

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Check continuity between ABS actuator and electric unit (control unit) connector E125 (A) terminal 38 and VDC OFF switch connector M253 (B) terminal 1.

ABS actuator and electric unit (control unit)		VDC OFF switch		Continuity
Connector	Terminal	Connector	Terminal	
E125 (A)	38	M253 (B)	1	Yes

3. Check continuity between ABS actuator and electric unit (control unit) connector E125 (A) terminal 38 and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E125 (A)	38	Ground	No

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

3.CHECK VDC OFF SWITCH GROUND

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

VDC OFF SWITCH

[VDC/TCS/ABS]


< DTC/CIRCUIT DIAGNOSIS >

Check continuity between VDC OFF switch connector M253 terminal 2 and ground.

VDC OFF switch		—	Continuity
Connector	Terminal		
M253	2	Ground	Yes

Is the inspection result normal?

- YES >> GO TO 4
 NO >> Repair or replace harness.

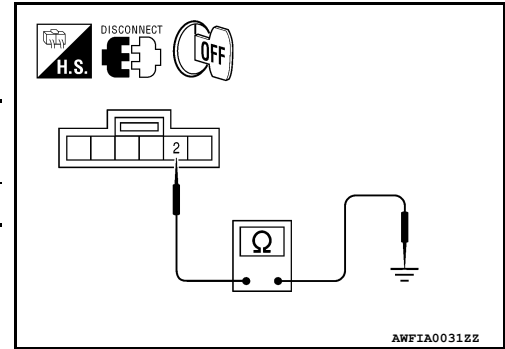

4. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-26, "Diagnosis Description"](#).

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).
 NO >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

Component Inspection

INFOID:000000011290095


1. CHECK VDC OFF SWITCH

- Turn ignition switch OFF.
- Disconnect VDC OFF switch connector.
- Check continuity between VDC OFF switch terminals.

VDC OFF switch	Condition	Continuity
Terminal		
1 - 2	When VDC OFF switch is pressed.	Yes
	When VDC OFF switch is released.	No

Is the inspection result normal?

- YES >> Inspection End
 NO >> Replace VDC OFF switch.

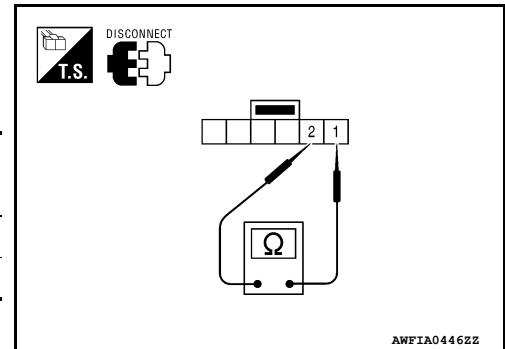

Special Repair Requirement

INFOID:000000011290096

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

ABS WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS WARNING LAMP

Description

INFOID:0000000011290097

x: ON –: OFF

Condition	ABS warning lamp
Ignition switch OFF	–
For 2 seconds after turning ON ignition switch	×
2 seconds later after turning ON ignition switch	–
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

Component Function Check

INFOID:0000000011290098

1.CHECK ABS WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 2 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-79, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011290099

1.CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Check items displayed by self-diagnosis.

2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-26, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

Special Repair Requirement

INFOID:0000000011290100

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

BRAKE WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

BRAKE WARNING LAMP

Description

INFOID:000000011290101

×: ON –: OFF

Condition	Brake warning lamp (Note 1)
Ignition switch OFF	–
Ignition switch ON	× (Note 2)
EBD function is malfunctioning.	×

NOTE:

- 1: Brake warning lamp will turn on in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- 2: After starting engine, brake warning lamp is turned off.

Component Function Check

INFOID:000000011290102

1. BRAKE WARNING LAMP OPERATION CHECK

Check that the lamp illuminates after the ignition switch is turned ON, and turns OFF after the engine is started.

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-80, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011290103

1. CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Check items displayed by self-diagnosis.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-26, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000011290104

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2. CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF INDICATOR LAMP

Description

INFOID:0000000011290105

x: ON –: OFF

Condition	VDC OFF indicator lamp
Ignition switch OFF	–
For 2 seconds after turning ON ignition switch	x
2 seconds later after turning ON ignition switch	–
VDC OFF switch turned ON. (VDC function is OFF.)	x
VDC/TCS function is malfunctioning.	–
ABS function is malfunctioning.	–
EBD function is malfunctioning.	–

Component Function Check

INFOID:0000000011290106

1.VDC OFF INDICATOR LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 2 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2

NO >> Go to diagnosis procedure. Refer to [BRC-81, "Diagnosis Procedure"](#).

2.VDC OFF INDICATOR LAMP OPERATION CHECK 2

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> Inspection End

NO >> Check VDC OFF switch. Refer to [BRC-77, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011290107

1.CHECK VDC OFF SWITCH

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> GO TO 2

NO >> Check VDC OFF switch. Refer to [BRC-77, "Diagnosis Procedure"](#).

2.CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Check items displayed by self-diagnosis.

3.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-26, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Special Repair Requirement

INFOID:000000011290108

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

SLIP INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

SLIP INDICATOR LAMP

Description

INFOID:000000011290109

x: ON –: OFF

Condition	SLIP indicator lamp
Ignition switch OFF	–
For 2 seconds after turning ON ignition switch	x
2 seconds later after turning ON ignition switch	–
VDC/TCS function is malfunctioning.	x
ABS function is malfunctioning.	x
EBD function is malfunctioning.	x

Component Function Check

INFOID:000000011290110

1.CHECK SLIP INDICATOR LAMP OPERATION

Check that the lamp illuminates for approximately 2 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> Inspection End

NO >> Go to diagnosis procedure. Refer to [BRC-83, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011290111

1.CHECK SELF-DIAGNOSIS

Perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Check items displayed by self-diagnosis.

2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-26, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000011290112

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform neutral position adjustment for the steering angle sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2

2.CALIBRATION OF DECEL G SENSOR

Always perform calibration of decel G sensor when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Description"](#).

>> END

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

ECU DIAGNOSIS INFORMATION

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Reference Value

INFOID:0000000011290113

VALUES ON THE DIAGNOSIS TOOL

CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

CONSULT MONITOR ITEM

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
FR LH SENSOR	Wheel speed	0 [km/h (MPH)]	Vehicle stopped
		Nearly matches the speed meter display (± 10% or less)	Vehicle running (Note 1)
FR RH SENSOR	Wheel speed	0 [km/h (MPH)]	Vehicle stopped
		Nearly matches the speed meter display (± 10% or less)	Vehicle running (Note 1)
RR LH SENSOR	Wheel speed	0 [km/h (MPH)]	Vehicle stopped
		Nearly matches the speed meter display (± 10% or less)	Vehicle running (Note 1)
RR RH SENSOR	Wheel speed	0 [km/h (MPH)]	Vehicle stopped
		Nearly matches the speed meter display (± 10% or less)	Vehicle running (Note 1)
DECEL G-SEN	Longitudinal acceleration detected by Decel G-Sensor	Vehicle stopped	Approx. 0 G
		Vehicle running	-1.7 to 1.7 G
FR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
FR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
FR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
FR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
RR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
RR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
RR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
RR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (in fail-safe mode)	ON
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	OFF
EBD WARN LAMP	EBD warning lamp (Note 2)	When EBD warning lamp is ON	ON
		When EBD warning lamp is OFF	OFF
STOP LAMP SW	Stop lamp switch signal status	When brake pedal is depressed	ON
		When brake pedal is released	OFF
MOTOR RELAY	Motor and motor relay operation	When the motor relay and motor are operating	ON
		When the motor relay and motor are not operating	OFF
ACTUATOR RLY	Actuator relay operation	When the actuator relay is operating	ON
		When the actuator relay is not operating	OFF
ABS WARN LAMP	ABS warning lamp (Note 2)	When ABS warning lamp is ON	ON
		When ABS warning lamp is OFF	OFF
OFF LAMP	VDC OFF indicator lamp (Note 2)	When VDC OFF indicator lamp is ON	ON
		When VDC OFF indicator lamp is OFF	OFF
OFF SW	VDC OFF switch ON/OFF	VDC OFF switch ON (When VDC OFF indicator lamp is ON)	ON
		VDC OFF switch OFF (When VDC OFF indicator lamp is OFF)	OFF
SLIP LAMP	SLIP indicator lamp (Note 2)	When SLIP indicator lamp is ON	ON
		When SLIP indicator lamp is OFF	OFF
BATTERY VOLT	Battery voltage supplied to the ABS actuator and electric unit (control unit)	Ignition switch ON	10 – 16 V
GEAR	Gear position determined by TCM	1st gear 2nd gear 3rd gear 4th gear 5th gear	1 2 3 4 5

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
SLCT LVR POSI	A/T selector lever position	P position R position N position D position	P R N D
ENGINE SPEED	With engine running	With engine stopped	0 rpm
		Engine running	Almost in accordance with tachometer display
YAW RATE SEN	Yaw rate detected by yaw rate/side/decel G sensor	When vehicle is stopped	Approx. 0 d/s
		When vehicle turning	-75 to 75 d/s
R POSI SIG	Transmission range switch signal ON/OFF condition	A/T shift position = R position	ON
		A/T shift position = other than R position	OFF
N POSI SIG	Transmission range switch signal ON/OFF condition	A/T shift position = N position	ON
		A/T shift position = other than N position	OFF
P POSI SIG	Transmission range switch signal ON/OFF condition	A/T shift position = P position	ON
		A/T shift position = other than P position	OFF
CV1	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (when in fail-safe mode)	ON
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	OFF
CV2	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (when in fail-safe mode)	ON
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	OFF
SV1	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (when in fail-safe mode)	ON
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	OFF
SV2	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT) or actuator relay is inactive (when in fail-safe mode)	ON
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	OFF
2WD/4WD	Drive axle	2WD model	2WD
		4WD model	4WD
ACCEL POS SIG	Throttle actuator opening/closing is displayed (linked with accelerator pedal)	Accelerator pedal not depressed (ignition switch is ON)	0 %
		Accelerator pedal depressed (ignition switch is ON)	0 - 100 %

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
SIDE G-SENSOR	Transverse G detected by side G sensor	Vehicle stopped	Approx. 0 m/s ²
		Vehicle turning right	Negative value (m/s ²)
		Vehicle turning left	Positive value (m/s ²)
STR ANGLE SIG	Steering angle detected by steering angle sensor	Straight-ahead	Approx. 0±2.5°
		Steering wheel turned	-720 to +720°
BST OPER SIG	Brake booster operation is displayed	Brake booster is active	ON
		Brake booster is inactive	OFF
PRESS SENSOR	Brake fluid pressure detected by front pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	-40 to 300 bar
EBD SIGNAL	EBD operation	EBD is active	ON
		EBD is inactive	OFF
ABS SIGNAL	ABS operation	ABS is active	ON
		ABS is inactive	OFF
TCS SIGNAL	TCS operation	TCS is active	ON
		TCS is inactive	OFF
VDC SIGNAL	VDC operation	VDC is active	ON
		VDC is inactive	OFF
ABS FAIL SIG	ABS fail-safe signal	In ABS fail-safe	ON
		ABS is normal	OFF
TCS FAIL SIG	TCS fail-safe signal	In TCS fail-safe	ON
		TCS is normal	OFF
VDC FAIL SIG	VDC fail-safe signal	In VDC fail-safe	ON
		VDC is normal	OFF
CRANKING SIG	Crank operation	Crank is active	ON
		Crank is inactive	OFF
FLUID LEV SW	Brake fluid level switch signal status	When brake fluid level switch ON	ON
		When brake fluid level switch OFF	OFF
PRESS SEN2	Brake fluid pressure detected by rear pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	-40 to 300 bar
DELTA S SEN	Value detected by delta stroke sensor	When brake pedal is depressed	1.05 - 1.80 mm
		When brake pedal is released	0.00 mm (+0.6/-0.4)
RELEASE SW NO	Active booster signal status	When brake pedal is depressed	ON
		When brake pedal is released	OFF
RELEASE SW NC	Active booster signal status	When brake pedal is depressed	OFF
		When brake pedal is released	ON
OHB FAIL	OHB fail safe signal	OHB is active	ON
		OHB is inactive	OFF

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >


[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
HBA FAIL	HBA fail safe signal	HBA is active	ON
		HBA is inactive	OFF
OHB SIG	OHB operation	In OHB fail-safe	ON
		OHB is normal	OFF
HBA SIG	HBA operation	In HBA fail-safe	ON
		HBA is normal	OFF
STP OFF RLY	Stop lamp relay signal	When stop lamp relay is ON	ON
		When stop lamp relay is OFF	OFF

NOTE:

- 1: Confirm tire pressure is normal.
- 2: On and off timing for warning lamp and indicator lamp.
- ABS warning lamp: Refer to [BRC-79, "Description"](#).
- Brake warning lamp: Refer to [BRC-80, "Description"](#).
- VDC OFF indicator lamp: Refer to [BRC-81, "Description"](#).
- SLIP indicator lamp: Refer to [BRC-83, "Description"](#).

TERMINAL LAYOUT

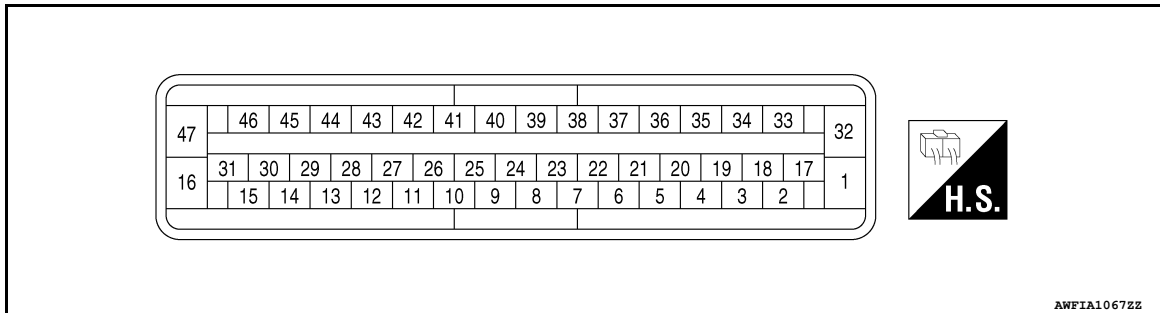

Fail-Safe

INFOID:000000011290114

CAUTION:

If the Fail-Safe function is activated, perform Self Diagnosis for ABS/TCS/VDC system.

ABS/EBD SYSTEM

In case of an electrical malfunction with the ABS, the ABS warning lamp and SLIP indicator lamp will turn on. In case of an electrical malfunction with the EBD system, the BRAKE warning lamp, ABS warning lamp, SLIP indicator lamp will turn on.

The system will revert to one of the following conditions of the Fail-Safe function.

1. For ABS malfunction, only the EBD is operative and the condition of the vehicle is the same condition of vehicles without ABS/TCS/VDC system.
2. For EBD malfunction, the EBD and ABS become inoperative, and the condition of the vehicle is the same as the condition of vehicles without ABS/TCS/VDC or EBD system.

VDC/TCS SYSTEM

In case of TCS/VDC system malfunction, the SLIP indicator lamp is turned on and the condition of the vehicle is the same as the condition of vehicles without TCS/VDC system. In case of an electrical malfunction with the TCS/VDC system, the ABS control continues to operate normally without TCS/VDC control.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC No. Index

INFOID:0000000011290115

DTC	Items (CONSULT screen terms)	Reference
C1101	RR RH SENSOR-1	BRC-29, "DTC Logic"
C1102	RR LH SENSOR-1	
C1103	FR RH SENSOR-1	
C1104	FR LH SENSOR-1	
C1105	RR RH SENSOR-2	BRC-33, "DTC Logic"
C1106	RR LH SENSOR-2	
C1107	FR RH SENSOR-2	
C1108	FR LH SENSOR-2	
C1109	BATTERY VOLTAGE [ABNORMAL]	BRC-35, "Description"
C1110	CONTROLLER FAILURE	BRC-37, "DTC Logic"
C1111	PUMP MOTOR	BRC-38, "Description"
C1113	G-SENSOR	BRC-40, "Description"
C1115	ABS SENSOR [ABNORMAL SIGNAL]	BRC-42, "Description"
C1116	STOP LAMP SW	BRC-45, "Description"
C1120	FR LH IN ABS SOL	BRC-47, "Description"
C1121	FR LH OUT ABS SOL	BRC-50, "Description"
C1122	FR RH IN ABS SOL	BRC-47, "Description"
C1123	FR RH OUT ABS SOL	BRC-50, "Description"
C1124	RR LH IN ABS SOL	BRC-47, "Description"
C1125	RR LH OUT ABS SOL	BRC-50, "Description"
C1126	RR RH IN ABS SOL	BRC-47, "Description"
C1127	RR RH OUT ABS SOL	BRC-50, "Description"
C1130	ENGINE SIGNAL 1	BRC-53, "Description"
C1131	ENGINE SIGNAL 2	
C1132	ENGINE SIGNAL 3	
C1133	ENGINE SIGNAL 4	
C1136	ENGINE SIGNAL 6	
C1140	ACTUATOR RLY	
C1142	PRESS SEN CIRCUIT	BRC-57, "Description"
C1143	ST ANG SEN CIRCUIT	BRC-60, "Description"
C1144	ST ANG SEN SIGNAL	
C1145	YAW RATE SENSOR	BRC-40, "Description"
C1146	SIDE G-SEN CIRCUIT	
C1155	BR FLUID LEVEL LOW	BRC-63, "Description"
C1156	ST ANG SEN COM CIR	BRC-65, "Description"
C1160	DECEL G SEN SET	BRC-66, "Description"
C1163	ST ANGL SEN SAFE	BRC-67, "Description"
C1164	CV1	BRC-68, "Description"
C1165	CV2	
C1166	SV1	
C1167	SV2	
C1170	VARIANT CODING	BRC-37, "DTC Logic"

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC	Items (CONSULT screen terms)	Reference
C1178	ABS ACTIVE BOOSTER SV NG	BRC-71. "Description"
C1179	ABS DELTA S SEN NG	BRC-74. "Description"
C1181	ABS ACTIVE BOOSTER RESPONSE NG	BRC-71. "Description"
C1184	ABS BRAKE RELEASE SW NG	
C1189	ABS BRAKE BOOSTER DEFECT	
U1000	CAN COMM CIRCUIT	BRC-76. "Description"

BRAKE CONTROL SYSTEM - VDC

[VDC/TCS/ABS]


< WIRING DIAGRAM >

WIRING DIAGRAM

BRAKE CONTROL SYSTEM - VDC

Wiring Diagram


INFOID:000000011290116

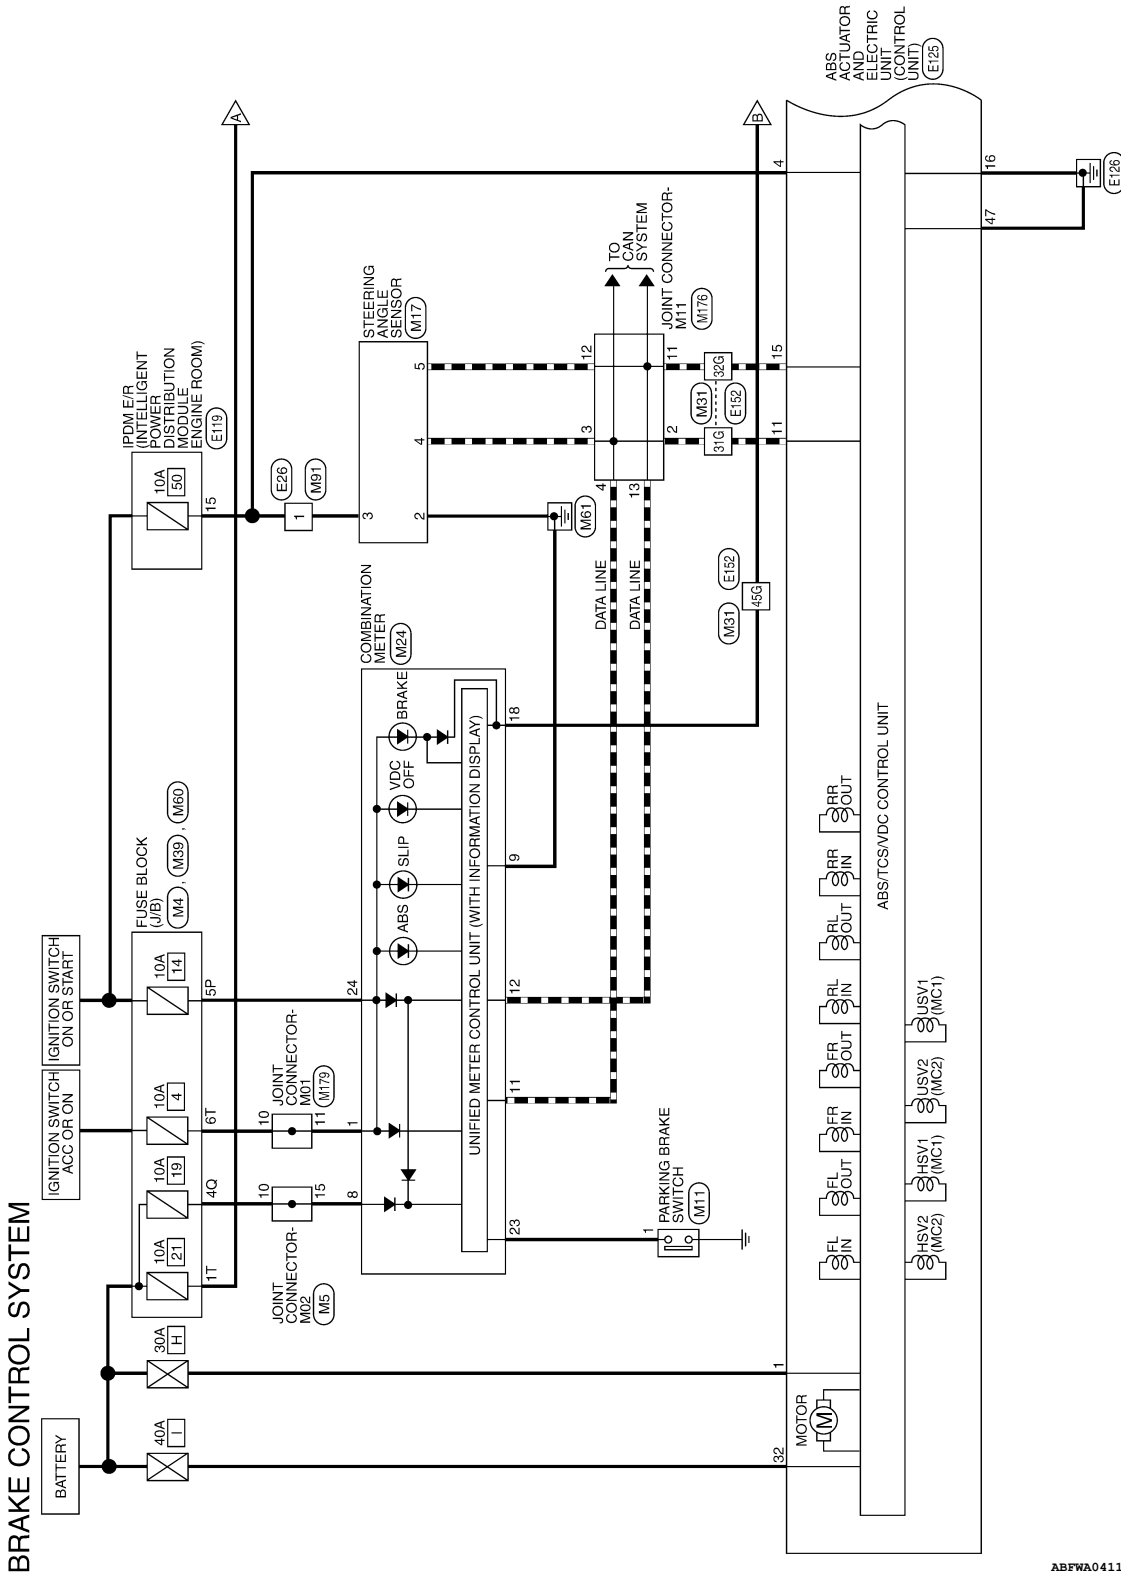

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

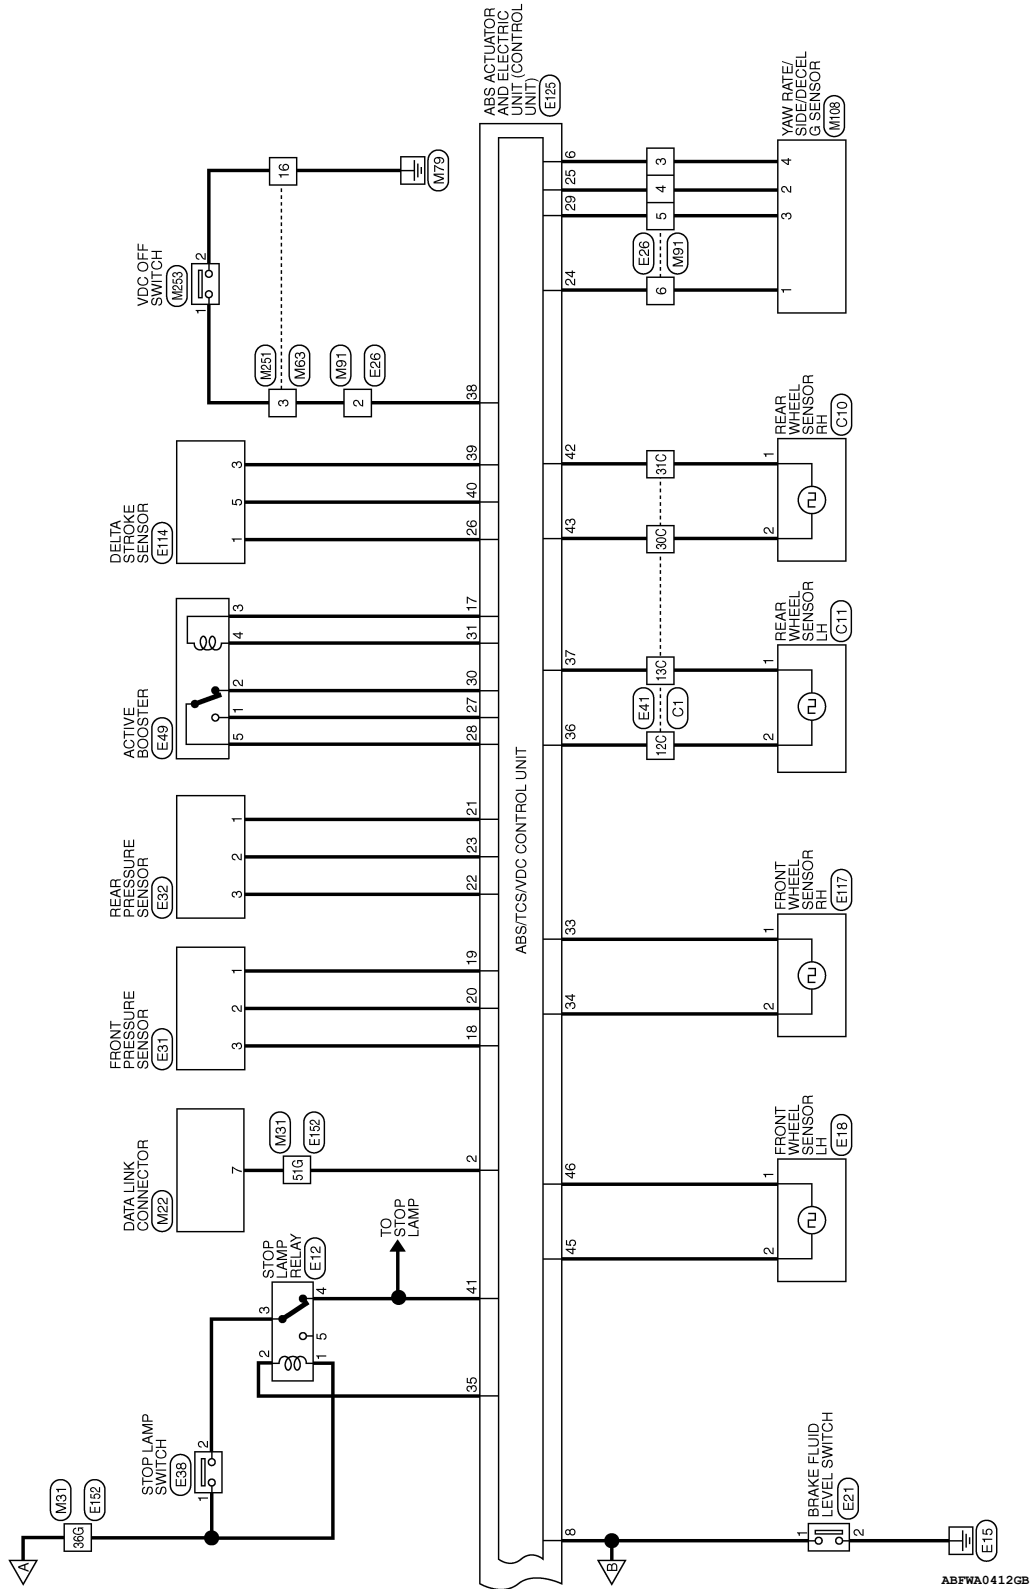

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]


BRAKE CONTROL SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5P	O/L	-

Connector No.	M5
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
10	Y/R	-
15	Y/R	-

Connector No.	M11
Connector Name	PARKING BRAKE SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	G	-

Connector No.	M17
Connector Name	STEERING ANGLE SENSOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	B	-
3	G/W	-
4	L	-
5	P	-

Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	G/W	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

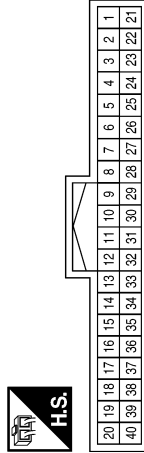

Terminal No.	Color of Wire	Signal Name
1	O	ACCESSORY
8	Y/R	BATTERY
9	B	GND
11	L	CAN-H
12	P	CAN-L
18	P/B	BRAKE FLUID
23	G	PARK BRAKE
24	O/L	RUN/START

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


BRC

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]


Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4Q	Y/R	-

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
36G	R/Y	-
45G	P/B	-
51G	G/W	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

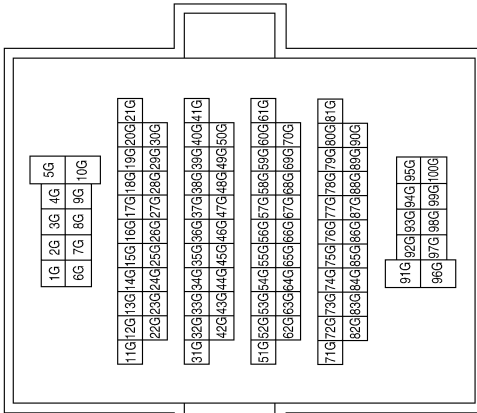

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G/W	-
2	R/W	-
3	Y/R	-
4	G/R	-
5	G/W	-
6	P	-

Connector No.	M63
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
3	R/W	-
16	B	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1T	R/Y	-
6T	O	-


ABFIA0609GB

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >


[VDC/TCS/ABS]

Connector No.	M179
Connector Name	JOINT CONNECTOR-M01
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
10	O	-
11	O	-

Connector No.	M176
Connector Name	JOINT CONNECTOR-M11
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	L	-
3	L	-
4	L	-
11	P	-
12	P	-
13	P	-

Connector No.	M108
Connector Name	YAW RATE/SIDE/DECEL G SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	P	-
2	G/R	-
3	G/W	-
4	Y/R	-

Connector No.	E12
Connector Name	STOP LAMP RELAY
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	L/W	-
3	R/G	-
4	R/B	-
5	-	-

Connector No.	M253
Connector Name	VDC OFF SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	B	-

Connector No.	M251
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
3	R/W	-
16	B	-

ABFIA0918GB


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG/B	-
2	R/W	-
3	Y/R	-
4	G/R	-
5	G/W	-
6	P	-

Connector No.	E21
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	P/B	-
2	B	-

Connector No.	E18
Connector Name	FRONT WHEEL SENSOR LH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	BR/W	-
2	G	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E32
Connector Name	REAR PRESSURE SENSOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	R/G	-
2	W/O	-
3	W/L	-

Connector No.	E31
Connector Name	FRONT PRESSURE SENSOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	R/L	-
3	LG	-


ABFIA0856GB

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]


Connector No.	E49
Connector Name	ACTIVE BOOSTER
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	LG/R	-
3	W/R	-
4	W/G	-
5	Y/B	-

Terminal No.	Color of Wire	Signal Name
12C	L	-
13C	P	-
30C	G/Y	-
31C	V	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

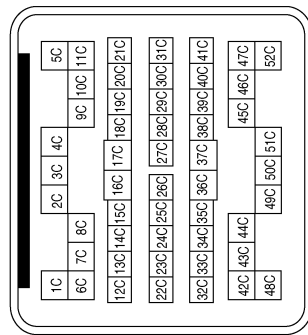

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
15	LG/B	ABS IGN SUPPLY

Connector No.	E117
Connector Name	FRONT WHEEL SENSOR RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	BR	-
2	B/R	-

Connector No.	E114
Connector Name	DELTA STROKE SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/V	-
3	G/B	-
5	R/Y	-

ABFIA0857GB


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]


Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

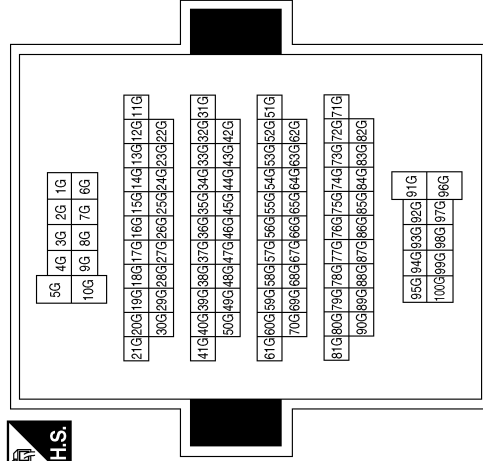

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
36G	R/Y	-
45G	P/B	-
51G	G/W	-

Terminal No.	Color of Wire	Signal Name
19	SB	PS1 GND
20	R/L	PS1 SIGNAL
21	R/G	PS2 GND
22	W/L	PS2 SUPPLY
23	W/O	PS2 SIGNAL
24	P	CLUSTER GND
25	G/R	CAN2 L
26	W/V	DEL S SUPPLY
27	L/B	BST NO
28	Y/B	BST SIG
29	G/W	CAN2 H
30	LG/R	BST NC
31	W/G	BST GND
32	B/Y	VALVE ECU SUPPLY
33	BR	WSS FR SIG
34	B/R	WSS FR PWR
35	L/W	BRL OUT
36	L	WSS RL PWR
37	P	WSS RL SIG
38	R/W	VDC OFF SW
39	G/B	DEL S GND
40	R/Y	DEL S SIGNAL
41	R/B	BLS
42	V	WSS RR SIG
43	G/Y	WSS RR PWR
44	-	-
45	G	WSS FL PWR
46	BR/W	WSS FL SIG
47	B	MOTOR GND

Connector No.	E125
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	Y	MOTOR SUPPLY
2	GW	DIAG K
3	-	-
4	LG/B	IGN
5	-	-
6	Y/R	CLUSTER SUPPLY
7	-	-
8	P/B	FLUID LEVEL SW
9	-	-
10	-	-
11	L	CAN-H
12	-	-
13	-	-
14	-	-
15	P	CAN-L
16	B	VALVE ECU GND
17	W/R	BST SUPPLY
18	LG	PS1 SUPPLY

ABFIA0858GB

BRAKE CONTROL SYSTEM - VDC

< WIRING DIAGRAM >

[VDC/TCS/ABS]

Connector No.	C11
Connector Name	REAR WHEEL SENSOR LH
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-

Connector No.	C10
Connector Name	REAR WHEEL SENSOR RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	V	-
2	G/Y	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

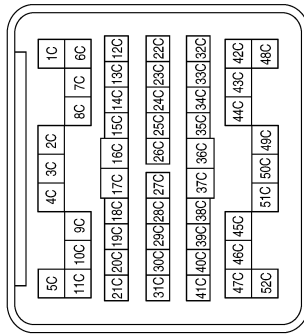

Terminal No.	Color of Wire	Signal Name
12C	L	-
13C	P	-
30C	G/Y	-
31C	V	-

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABFIA0614GB

SYMPTOM DIAGNOSIS

VDC/TCS/ABS

Symptom Table

INFOID:000000011290117

If ABS warning lamp and SLIP indicator lamp turn ON, perform self-diagnosis.

Symptom	Check item	Reference
Excessive ABS function operation frequency	Brake force distribution	BRC-101, "Diagnosis Procedure"
	Looseness of front and rear axle	
	Wheel sensor and rotor system	
Unexpected pedal reaction	Brake pedal stroke	BRC-102, "Diagnosis Procedure"
	Make sure the braking force is sufficient when the ABS is not operating.	
The braking distance is long	Check stopping distance when the ABS is not operating.	BRC-103, "Diagnosis Procedure"
ABS function does not operate (Note 1)	ABS actuator and electric unit (control unit)	BRC-104, "Diagnosis Procedure"
Pedal vibration or ABS operation sound occurs (Note 2)	Brake pedal	BRC-105, "Diagnosis Procedure"
	ABS actuator and electric unit (control unit)	
Vehicle jerks during VDC/TCS/ABS control	ABS actuator and electric unit (control unit)	BRC-106, "Diagnosis Procedure"
	TCM	
	ECM	

NOTE:

- 1: The ABS does not operate when the speed is 10 km/h (6 MPH) or less.
- 2: Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed. However, this is normal.
 - When shifting gears
 - When driving on slippery road
 - During cornering at high speed
 - When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
 - When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

Diagnosis Procedure

INFOID:000000011290118

1.CHECK BRAKE FORCE

Check front and rear brake force distribution using a brake tester.

Is the inspection result normal?

YES >> GO TO 2

NO >> Check brake system.

2.CHECK FRONT AND REAR AXLE

Make sure that there is no excessive play in the front and rear axles. Refer to front: [FAX-6. "On-Vehicle Inspection and Service"](#), Rear: [RAX-6. "On-Vehicle Inspection and Service"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace malfunctioning components.

3.CHECK WHEEL SENSOR AND SENSOR ROTOR

Check the following.

- Wheel sensor installation for damage.
- Sensor rotor installation for damage.
- Wheel sensor connector connection.
- Wheel sensor harness inspection.

Is the inspection result normal?

YES >> GO TO 4

- NO >> • Replace wheel sensor or sensor rotor. Refer to [BRC-112. "Removal and Installation"](#) or [BRC-113. "Removal and Installation"](#).
- Repair harness.

4.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp is turned off after the ignition switch is turned ON or when driving.

Is the ABS warning lamp illuminated?

YES >> Perform self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

NO >> Inspection End.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

UNEXPECTED PEDAL REACTION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

UNEXPECTED PEDAL REACTION

Diagnosis Procedure

INFOID:000000011290119

1.CHECK BRAKE PEDAL STROKE

Check brake pedal stroke. Refer to [BR-15, "Inspection and Adjustment"](#).

Is the stroke too large?

- YES >> • Bleed air from brake tube and hose. Refer to [BR-17, "Bleeding Brake System"](#).
• Check brake pedal, brake booster, and master cylinder for mount play, looseness, brake system fluid leakage, etc. Refer to [BR-15, "Inspection and Adjustment"](#) (brake pedal), [BR-12, "On Board Inspection"](#) (master cylinder), [BR-10, "Inspection"](#) (brake booster).

NO >> GO TO 2

2.CHECK ABS FUNCTION

Disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. Check if braking force is normal in this condition. Connect connector after inspection.

Is the inspection result normal?

- YES >> Inspection End.
NO >> Check brake system.

THE BRAKING DISTANCE IS LONG

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

THE BRAKING DISTANCE IS LONG

Diagnosis Procedure

INFOID:0000000011290120

CAUTION:

The stopping distance on slippery road surfaces might be longer with the ABS operating than when the ABS is not operating.

1.CHECK ABS FUNCTION

Turn ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. In this condition, check stopping distance. After inspection, connect connector.

Is the inspection result normal?

- YES >> Inspection End.
- NO >> Check brake system.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

ABS FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

ABS FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000011290121

CAUTION:

ABS does not operate when speed is 10 km/h (6 MPH) or lower.

1.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp turns OFF after ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform self-diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

Diagnosis Procedure

INFOID:000000011290122

CAUTION:

Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed. However, this is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do vibrations occur?

YES >> GO TO 2

NO >> Inspect the brake pedal.

2. SYMPTOM CHECK 2

Check that there are ABS operation noises when the engine is started.

Do the operation noises occur?

YES >> GO TO 3

NO >> Perform self -diagnosis. Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

3. SYMPTOM CHECK 3

Check symptoms when electrical component (headlamps, etc.) switches are operated.

Do symptoms occur?

YES >> Check if there is a radio, antenna, antenna lead wire, or wiring close to the control unit. If there is, move it farther away.

NO >> Inspection End.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

Diagnosis Procedure

INFOID:000000011290123

1. SYMPTOM CHECK

Check if the vehicle jerks during VDC/TCS/ABS control.

Is the inspection result normal?

- YES >> Inspection End.
- NO >> GO TO 2

2. CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis of ABS actuator and electric unit (control unit). Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Are self-diagnosis results indicated?

- YES >> Check corresponding items, make repairs, and perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).
- NO >> GO TO 3

3. CONNECTOR INSPECTION

- Turn ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector and check terminal for deformation, disconnection, looseness, etc.
- Securely connect connectors and perform ABS actuator and electric unit (control unit) self-diagnosis. Refer to [BRC-24. "CONSULT Function \(ABS\)"](#).

Are self-diagnosis results indicated?

- YES >> If poor contact, damage, open or short circuit of connector terminal is found, repair or replace.
- NO >> GO TO 4

4. CHECK ECM AND TCM SELF-DIAGNOSIS RESULTS

Perform ECM and TCM self-diagnosis.

Are self-diagnosis results indicated?

- YES >> Check the corresponding items.
 - ECM: Refer to [EC-49. "CONSULT Function"](#).
 - TCM: Refer to [TM-34. "CONSULT Function \(TRANSMISSION\)"](#).
- NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Removal and Installation"](#).

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

NORMAL OPERATING CONDITION

Description

INFOID:0000000011290124

Symptom	Result
Slight vibrations are felt on the brake pedal and the operation noises occur, when VDC, TCS or ABS is activated.	This is a normal condition due to the VDC, TCS or ABS activation.
Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.	
The brake pedal moves and generates noises, when TCS or VDC is activated due to rapid acceleration or sharp turn.	
The brake pedal vibrates and motor operation noises occur from the engine room, after the engine starts and just after the vehicle starts.	This is normal, and it is caused by the ABS operation check.
Depending on the road conditions, the driver may experience a sluggish feel.	This is normal, because TCS places the highest priority on the optimum traction (stability).
TCS may activate momentarily if wheel speed changes when driving over location where friction coefficient varies, when downshifting, or when fully depressing accelerator pedal.	
The ABS warning lamp and SLIP indicator lamp may turn ON when the vehicle is subject to strong shaking or large vibration, such as when the vehicle is rotating on a turntable or located on a ship while the engine is running.	In this case, restart the engine on a normal road. If the normal condition is restored, there is no malfunction. At that time, erase the self-diagnosis memory.
VDC may not operate normally or the ABS warning lamp and SLIP indicator lamp may illuminate, when running on a special road that is extremely slanted (e.g. bank in a circuit course).	
A malfunction may occur in the yaw rate/side/decel G sensor system, when the vehicle turns sharply, such as during a spin turn, axle turn, or drift driving, while the VDC function is off (VDC OFF indicator lamp illuminated).	
The vehicle speed will not increase even though the accelerator pedal is depressed, when inspecting the speedometer on a 2-wheel chassis dynamometer.	Normal (Deactivate the VDC/TCS function before performing an inspection on a chassis dynamometer.)
SLIP indicator lamp may simultaneously turn on when low tire pressure warning lamp turns on.	This is not a VDC system error but results from characteristic change of tire.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011290125

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000011290126

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

PRECAUTIONS

< PRECAUTION >

[VDC/TCS/ABS]

- When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
- Perform a self-diagnosis check of all control units using CONSULT.


Precaution for Brake System

INFOID:0000000011412738

WARNING:

Clean any dust from the front brake and rear brake with a vacuum dust collector. Do not blow with compressed air.

- Brake fluid use refer to [MA-16, "FOR USA AND CANADA : Fluids and Lubricants"](#). (for United States and Canada) or [MA-18, "FOR MEXICO : Fluids and Lubricants"](#) (for Mexico).
 - Do not reuse drained brake fluid.
 - Do not spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
 - Always confirm the specified tightening torque when installing the brake pipes.
 - After pressing the brake pedal more deeply or harder than normal driving, such as air bleeding, inspect the brake pedal height and play. Adjust brake pedal if it is outside the standard value.
 - Always clean with new brake fluid when cleaning the brake caliper and other components.
 - Do not use mineral oils such as gasoline or light oil to clean. They may damage rubber parts and cause improper operation.
 - Always loosen the brake tube flare nut with a flare nut wrench.
 - Tighten the brake tube flare nut to the specified torque with a crow-foot (A) and torque wrench (B).
 - Brake system is an important safety part. If a brake fluid leak is detected, always disassemble the affected part. If a malfunction is detected, replace part with a new one.
 - Always connect the battery terminals when moving the vehicle.
 - Check that no brake fluid leakage is present after replacing the parts.
 - Burnish the brake contact surfaces after refinishing or replacing disc brake rotors, after replacing brake pads, or if a soft pedal occurs at very low mileage.
- Front brake pad: Refer to [BR-8, "BRAKE PAD : Inspection"](#).
- Front disc brake rotor: Refer to [BR-8, "DISC ROTOR : Inspection"](#).
- Rear brake pad: Refer to [BR-9, "BRAKE PAD : Inspection"](#).
- Rear disc brake rotor: Refer to [BR-9, "DISC ROTOR : Inspection"](#).

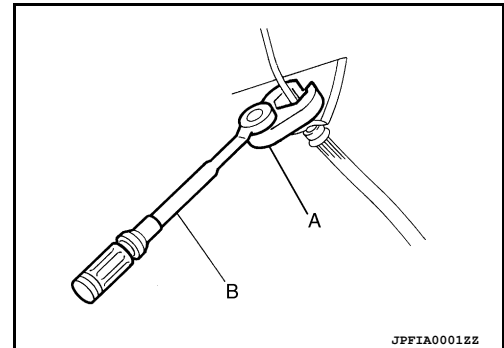

Precaution for Brake Control

INFOID:0000000011290128

- During ABS operation, the brake pedal may vibrate lightly and a mechanical noise may be heard. This is normal.
- Just after starting vehicle, the brake pedal may vibrate or a motor operating noise may be heard from engine compartment. This is a normal status of operation check.
- Stopping distance may be longer than that of vehicles without ABS when vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for simple causes before starting diagnosis. Besides electrical system inspection, check booster operation, brake fluid level, and fluid leaks.
- If incorrect tire sizes or types are installed on the vehicle or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- If there is a radio, antenna or related wiring near control module, ABS function may have a malfunction or error.
- If aftermarket parts (car stereo, CD player, etc.) have been installed, check for incidents such as harness pinches, open circuits or improper wiring.
- If the following components are replaced with non-genuine components or modified, the VDC OFF indicator lamp and SLIP indicator lamp may turn on or the VDC system may not operate properly. Components related to suspension (shock absorbers, struts, springs, bushings, etc.), tires, wheels (exclude specified size), components related to brake system (pads, rotors, calipers, etc.), components related to engine (muffler, ECM, etc.), components related to body reinforcement (roll bar, tower bar, etc.).

PRECAUTIONS

[VDC/TCS/ABS]


< PRECAUTION >

- Driving with broken or excessively worn suspension components, tires or brake system components may cause the VDC OFF indicator lamp and the SLIP indicator lamp to turn on, and the VDC system may not operate properly.
- When the TCS or VDC is activated by sudden acceleration or sudden turn, some noise may occur. The noise is a result of the normal operation of the TCS and VDC.
- When driving on roads which have extreme slopes (such as mountainous roads) or high banks (such as sharp curves on a freeway), the VDC may not operate normally, or the VDC warning lamp and the SLIP indicator lamp may turn on. This is not a problem if normal operation can be resumed after restarting the engine.
- Sudden turns (such as spin turns, acceleration turns), drifting, etc. with VDC turned off may cause the yaw rate/side/decel G sensor to indicate a problem. This is not a problem if normal operation can be resumed after restarting the engine.


Precaution for CAN System

INFOID:000000011290129

- Do not apply voltage of 7.0V or higher to terminal to be measured.
- Maximum open terminal voltage of tester in use must be less than 7.0V.
- Before checking harnesses, turn ignition switch OFF and disconnect battery negative cable.
- Area to be repaired must be soldered and wrapped with tape. Make sure that fraying of twisted wire is within 110 mm (4.33 in).

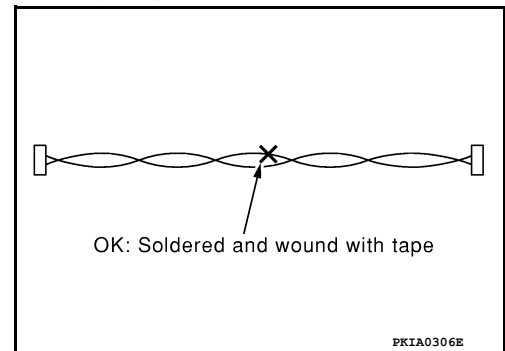

- Do not make a bypass connection to repaired area. (If the circuit is bypassed, characteristics of twisted wire will be lost.)

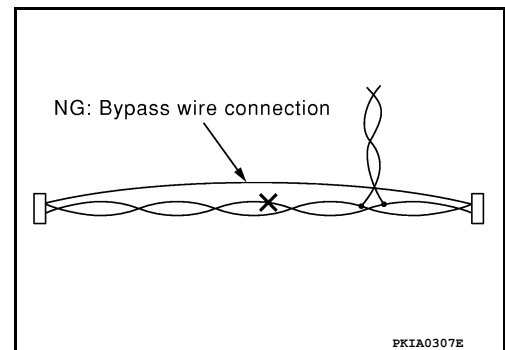

PREPARATION

< PREPARATION >

[VDC/TCS/ABS]

PREPARATION


PREPARATION

Special Service Tool

INFOID:000000011290130

The actual shape of the tools may differ from those illustrated here.



Tool number (TechMate No.) Tool name	Description
KV991J0080 (J-45741) ABS active wheel sensor tester	Checking operation of ABS active wheel sensors

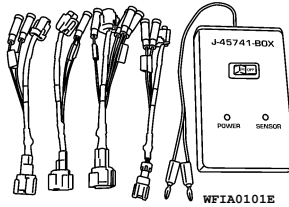

Commercial Service Tool

INFOID:000000011290131

Tool name	Description
1. Flare nut crowfoot 2. Torque wrench	Tightening brake tube flare nuts a: 10 mm (0.39 in)/12 mm (0.47 in)
Power tool	Loosening nuts, screws and bolts

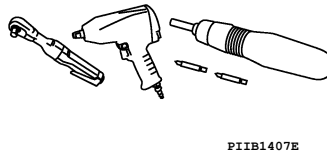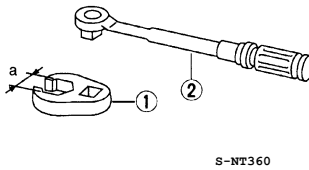

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

WHEEL SENSORS

< UNIT REMOVAL AND INSTALLATION >


[VDC/TCS/ABS]

UNIT REMOVAL AND INSTALLATION

WHEEL SENSORS

Removal and Installation

INFOID:000000011290132

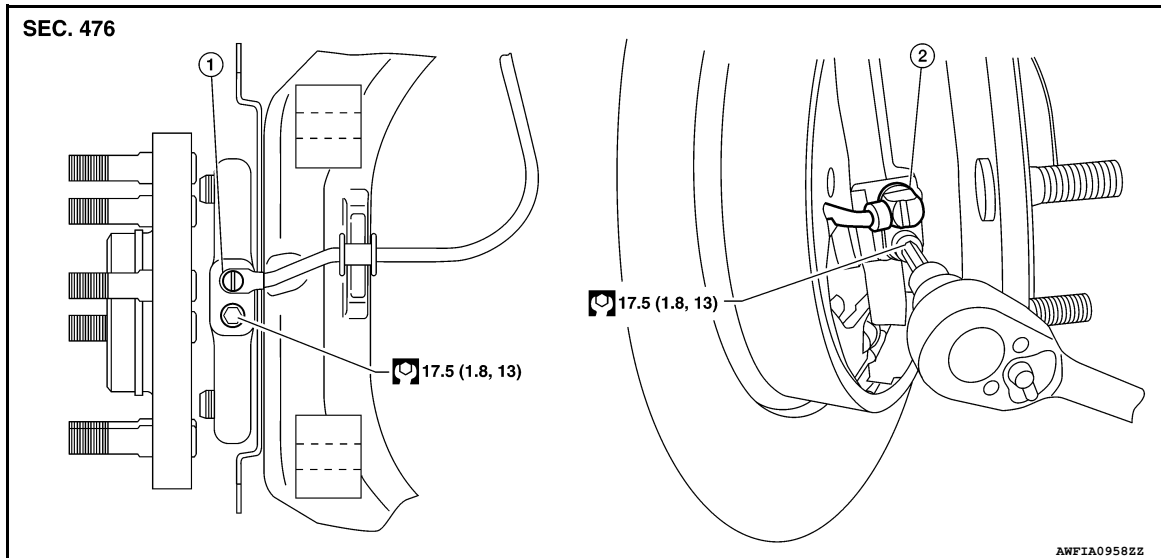

1. Front wheel sensor

2. Rear wheel sensor

REMOVAL

1. Remove wheel sensor bolt.
 - When removing the front wheel sensor, first remove the disc rotor to gain access to the front wheel sensor bolt. Refer to [BR-37, "Removal and Installation of Brake Caliper and Disc Rotor"](#).
 - When removing the rear wheel sensor, first remove the rear hub and bearing assembly to gain access to the rear wheel sensor bolt. Refer to [RAX-7, "Removal and Installation"](#).
2. Pull out the sensor, being careful to turn it as little as possible.

CAUTION:

 - **Do not pull on the sensor harness.**
3. Disconnect wheel sensor harness electrical connector, then remove harness from attaching points.

INSTALLATION

Installation is in the reverse order of removal. Tighten wheel sensor bolt to specification.

CAUTION:

- **Inspect wheel sensor O-ring, replace sensor assembly if damaged.**
- **Before installing wheel sensor, make sure no foreign materials (such as iron fragments) are adhered to the pick-up part of the sensor, to the inside of the sensor hole or on the rotor mating surface.**
- **Apply a coat of suitable grease to the wheel sensor O-ring and hole. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).**

SENSOR ROTOR

< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

SENSOR ROTOR

Removal and Installation

INFOID:000000011290133

NOTE:

The wheel sensor rotors are built into the wheel hubs and are not removable. If damaged, replace wheel hub and bearing assembly. Refer to [FAX-7, "Removal and Installation"](#) (front), [RAX-7, "Removal and Installation"](#) (rear).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

ACTUATOR AND ELECTRIC UNIT (ASSEMBLY)


< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

ACTUATOR AND ELECTRIC UNIT (ASSEMBLY)

Removal and Installation

INFOID:000000011290134

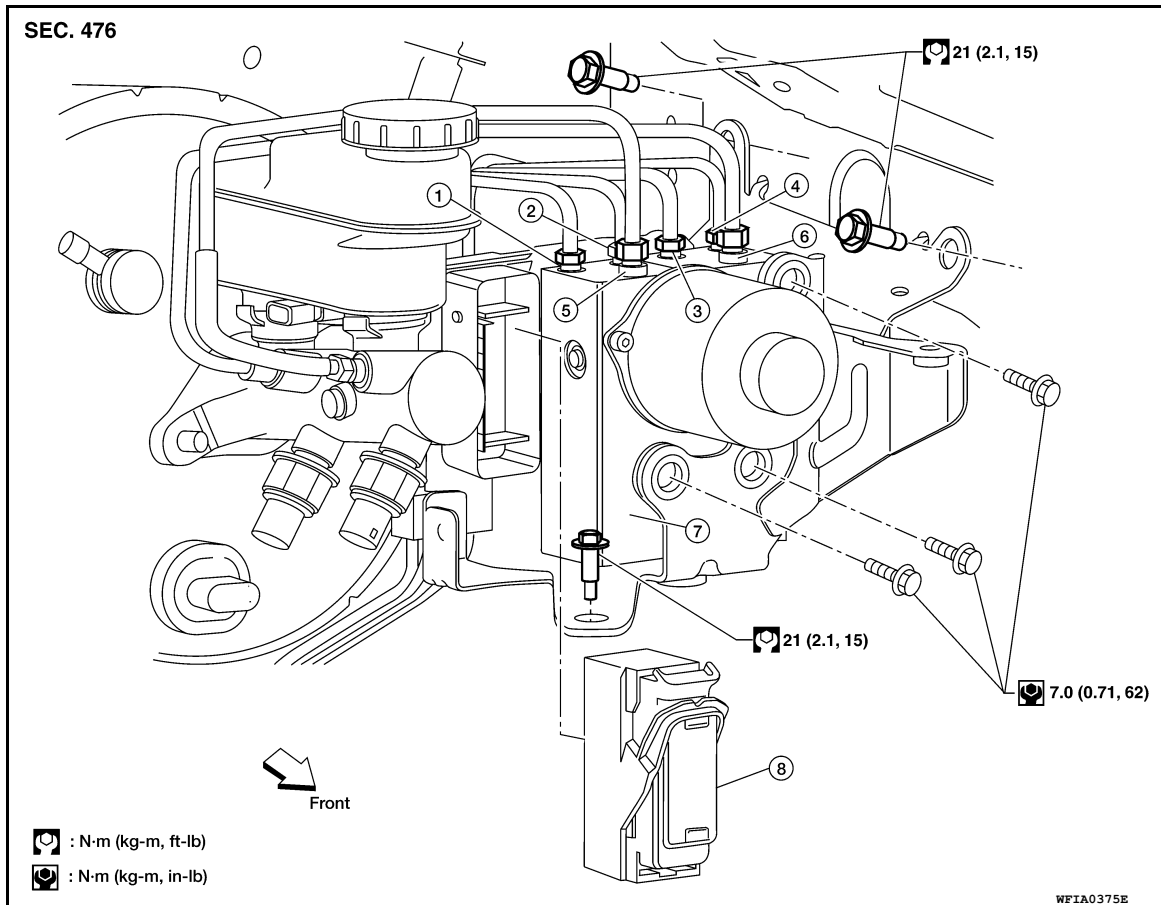

- | | | |
|--|---|---|
| 1. To rear left caliper
13.0 N·m (1.3 kg-m, 10 ft-lb) | 2. To rear right caliper
13.0 N·m (1.3 kg-m, 10 ft-lb) | 3. To front left caliper
13.0 N·m (1.3 kg-m, 10 ft-lb) |
| 4. To front right caliper
13.0 N·m (1.3 kg-m, 10 ft-lb) | 5. From the master cylinder secondary side
18.2 N·m (1.9 kg-m, 13 ft-lb) | 6. From the master cylinder primary side
18.2 N·m (1.9 kg-m, 13 ft-lb) |
| 7. ABS actuator and electric unit
(control unit) | 8. Actuator harness connector | |

REMOVAL

NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Disconnect the battery negative terminal. Refer to [PG-81, "Removal and Installation"](#).
2. Remove the air cleaner and air duct resonator assembly. Refer to [EM-25, "Removal and Installation"](#).
3. Disconnect the actuator harness connector from the ABS actuator and electric unit (control unit).
4. Disconnect the brake tubes.

CAUTION:

- To remove the brake tubes, use a flare nut wrench to prevent the flare nuts and brake tubes from being damaged.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

5. Remove the three bolts and remove the ABS actuator and electric unit (control unit).

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

ACTUATOR AND ELECTRIC UNIT (ASSEMBLY)

< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

- To install, use a flare nut crowfoot and torque wrench.
- Always tighten brake tubes to specification when installing.
- Do not reuse drained brake fluid.
- After installation of the ABS actuator and electric unit (control unit), perform the following.
 - Refill brake system with new brake fluid. Then bleed the air from the system. Refer to [BR-17, "Bleeding Brake System"](#).
 - Adjust the steering angle sensor. Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).
 - Calibrate the yaw rate/side/decel G sensor. Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Special Repair Requirement"](#).

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

STEERING ANGLE SENSOR

< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

STEERING ANGLE SENSOR

Removal and Installation

INFOID:000000011290135

REMOVAL

1. Remove spiral cable. Refer to [SR-14, "Removal and Installation"](#).
2. Remove the screws and remove the steering angle sensor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

After installation of the spiral cable, adjust steering angle sensor. Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

YAW RATE/SIDE/DECEL G SENSOR


< UNIT REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

YAW RATE/SIDE/DECEL G SENSOR

Removal and Installation

INFOID:000000011290136

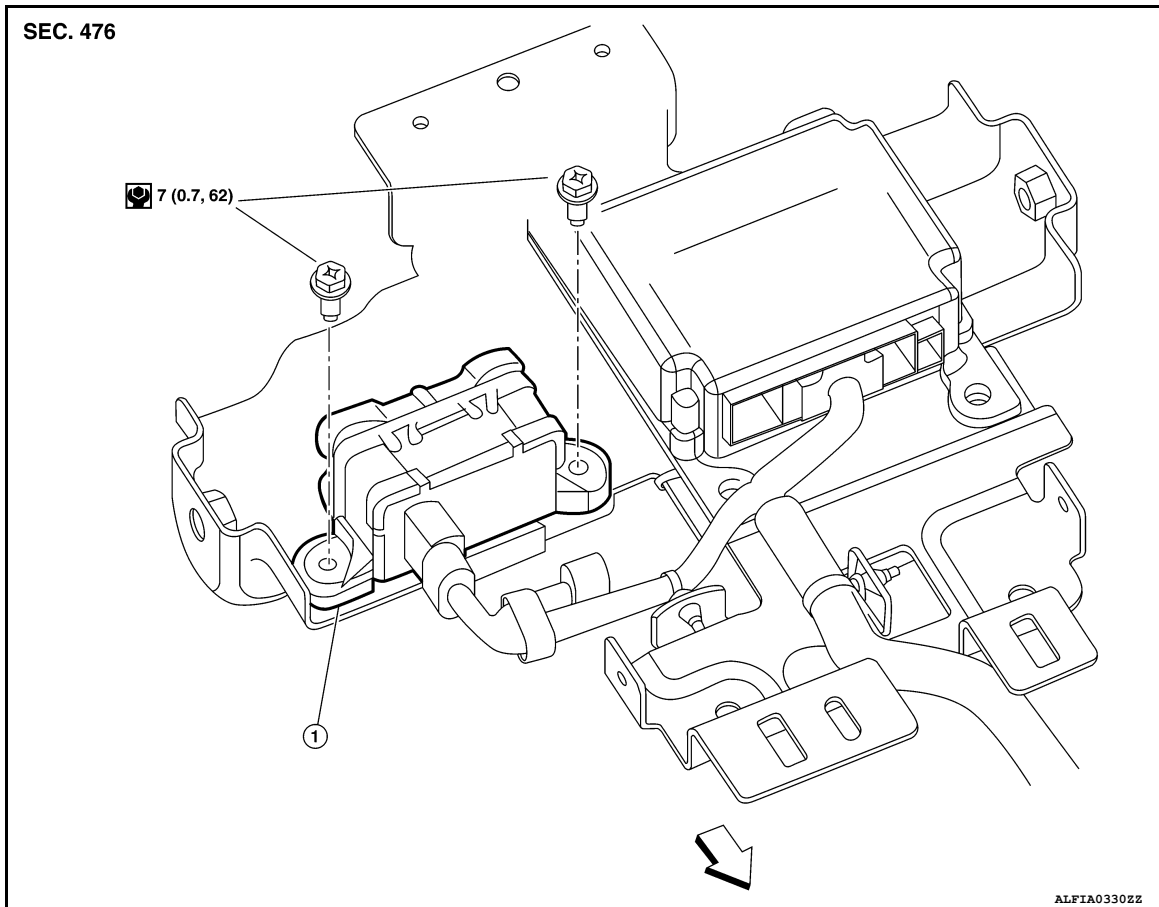

1. Yaw rate/side/decel G sensor ← Front

REMOVAL

1. Remove front center console. Refer to [IP-21, "Removal and Installation"](#).
2. Remove yaw rate/side/decel G sensor attaching nuts.
CAUTION:
 - Do not use power tools to remove or install yaw rate/side/decel G sensor.
 - Do not drop or strike the yaw rate/side/decel G sensor.
3. Disconnect harness connector and remove the yaw rate/side/decel G sensor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not drop or strike the yaw rate/side/decel G sensor.
- After installation, calibrate the yaw rate/side/decel G sensor. Refer to [BRC-9, "CALIBRATION OF DECEL G SENSOR : Special Repair Requirement"](#).

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P