

SECTION SEC

SECURITY CONTROL SYSTEM

CONTENTS

WITH INTELLIGENT KEY SYSTEM	Component Parts Location	20
	Component Description	21
BASIC INSPECTION	DIAGNOSIS SYSTEM (BCM)	22
DIAGNOSIS AND REPAIR WORKFLOW	COMMON ITEM	22
Work Flow	COMMON ITEM : CONSULT Function (BCM -	
	COMMON ITEM)	22
PRE-INSPECTION FOR DIAGNOSTIC	IMMU	23
Basic Inspection	IMMU : CONSULT Function (BCM - IMMU)	23
Vehicle Security Operation Check	THEFT ALM	23
INSPECTION AND ADJUSTMENT	THEFT ALM : CONSULT Function (BCM - THEFT	
ADDITIONAL SERVICE WHEN REPLACING	ALM)	23
CONTROL UNIT	DIAGNOSIS SYSTEM (INTELLIGENT KEY	
ADDITIONAL SERVICE WHEN REPLACING	UNIT)	25
CONTROL UNIT : Special Repair Requirement	CONSULT Function (INTELLIGENT KEY)	25
ECM RE-COMMUNICATING FUNCTION	DTC/CIRCUIT DIAGNOSIS	28
ECM RE-COMMUNICATING FUNCTION : De-	U1000 CAN COMM CIRCUIT	28
scription	Description	28
ECM RE-COMMUNICATING FUNCTION : Spe-	DTC Logic	28
cial Repair Requirement	Diagnosis Procedure	28
SYSTEM DESCRIPTION	U1010 CONTROL UNIT (CAN)	29
INTELLIGENT KEY SYSTEM/ENGINE	Description	29
START FUNCTION	DTC Logic	29
System Diagram	Diagnosis Procedure	29
System Description	Special Repair Requirement	29
Component Parts Location	B2013 STRG COMM 1	30
Component Description	Description	30
NVIS (NISSAN VEHICLE IMMOBILIZER SYS-	DTC Logic	30
TEM-NATS)	Diagnosis Procedure	30
System Diagram	B2190 NATS ANTENNA AMP.	33
System Description	Description	33
Component Parts Location	DTC Logic	33
Component Description	Diagnosis Procedure	33
VEHICLE SECURITY SYSTEM		
System Diagram		
System Description		

B2191 DIFFERENCE OF KEY	36	BCM : Diagnosis Procedure	51
Description	36	KEY CYLINDER SWITCH	53
DTC Logic	36	Description	53
Diagnosis Procedure	36	Component Function Check	53
B2192 ID DISCORD, IMMU-ECM	37	Diagnosis Procedure	53
Description	37	IGNITION KNOB SWITCH	55
DTC Logic	37	Diagnosis Procedure	55
Diagnosis Procedure	37	HORN FUNCTION	57
B2193 CHAIN OF ECM-IMMU	39	Symptom Table	57
Description	39	VEHICLE SECURITY INDICATOR	58
DTC Logic	39	Description	58
Diagnosis Procedure	39	Component Function Check	58
B2194 ID DISCORD IMMU-I-KEY	40	Diagnosis Procedure	58
Description	40	ECU DIAGNOSIS INFORMATION	60
DTC Logic	40	INTELLIGENT KEY UNIT	60
Diagnosis Procedure	40	Reference Value	60
B2552 INTELLIGENT KEY	41	Terminal Layout - Intelligent Key Unit	61
Description	41	Physical Values - Intelligent Key Unit	61
DTC Logic	41	Terminal Layout - Steering Lock Solenoid	64
Diagnosis Procedure	41	Physical Values - Steering Lock Solenoid	64
Special Repair Requirement	41	Fail Safe	64
B2590 ID DISCORD BCM-I-KEY	42	DTC Inspection Priority Chart	64
Description	42	DTC Index	65
DTC Logic	42	BCM (BODY CONTROL MODULE)	66
Diagnosis Procedure	42	Reference Value	66
P1610 LOCK MODE	43	Terminal Layout	69
Description	43	Physical Values	69
DTC Logic	43	Fail Safe	75
Diagnosis Procedure	43	DTC Inspection Priority Chart	75
P1611 ID DISCORD, IMMU-ECM	44	DTC Index	75
Description	44	IPDM E/R (INTELLIGENT POWER DISTRI-	
DTC Logic	44	BUTION MODULE ENGINE ROOM)	77
Diagnosis Procedure	44	Reference Value	77
P1612 CHAIN OF ECM-IMMU	46	Terminal Layout	78
Description	46	Physical Values	79
DTC Logic	46	Fail Safe	82
Diagnosis Procedure	46	DTC Index	83
P1614 CHAIN OF IMMU-KEY	47	WIRING DIAGRAM	84
Description	47	INTELLIGENT KEY SYSTEM/ENGINE	
DTC Logic	47	START FUNCTION	84
Diagnosis Procedure	47	Wiring Diagram	84
P1615 DIFFERENCE OF KEY	50	VEHICLE SECURITY SYSTEM	97
Description	50	Wiring Diagram	97
DTC Logic	50	NVIS	110
Diagnosis Procedure	50	Wiring Diagram - With Intelligent Key System	110
POWER SUPPLY AND GROUND CIRCUIT	51	SYMPTOM DIAGNOSIS	119
INTELLIGENT KEY UNIT	51	INTELLIGENT KEY SYSTEM/ENGINE	
INTELLIGENT KEY UNIT : Diagnosis Procedure...	51	START FUNCTION SYMPTOMS	119
BCM	51		

Symptom Table	119	System Description	135
VEHICLE SECURITY SYSTEM SYMPTOMS..	120	Component Parts Location	136
Symptom Table	120	Component Description	137
NISSAN VEHICLE IMMOBILIZER SYSTEM-		DIAGNOSIS SYSTEM (BCM)	138
NATS SYMPTOMS	121	COMMON ITEM	138
Symptom Table	121	COMMON ITEM : CONSULT Function (BCM -	
PRECAUTION	122	COMMON ITEM)	138
PRECAUTIONS	122	IMMU	139
Precaution for Supplemental Restraint System		IMMU : CONSULT Function (BCM - IMMU)	139
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		THEFT ALM	139
SIONER"	122	THEFT ALM : CONSULT Function (BCM - THEFT	
Precaution Necessary for Steering Wheel Rota-		ALM)	139
tion After Battery Disconnect	122	DTC/CIRCUIT DIAGNOSIS	141
REMOVAL AND INSTALLATION	124	U1000 CAN COMM CIRCUIT	141
NATS ANTENNA AMP.	124	Description	141
Removal and Installation	124	DTC Logic	141
INTELLIGENT KEY UNIT	125	Diagnosis Procedure	141
Removal and Installation	125	U1010 CONTROL UNIT (CAN)	142
REMOTE KEYLESS ENTRY RECEIVER	126	Description	142
Removal and Installation	126	DTC Logic	142
WITHOUT INTELLIGENT KEY SYSTEM		Diagnosis Procedure	142
BASIC INSPECTION	127	Special Repair Requirement	142
DIAGNOSIS AND REPAIR WORKFLOW	127	B2190 NATS ANTENNA AMP.	143
Work Flow	127	Description	143
PRE-INSPECTION FOR DIAGNOSTIC	130	DTC Logic	143
Basic Inspection	130	Diagnosis Procedure	143
INSPECTION AND ADJUSTMENT	131	B2191 DIFFERENCE OF KEY	146
ADDITIONAL SERVICE WHEN REPLACING		Description	146
CONTROL UNIT	131	DTC Logic	146
ADDITIONAL SERVICE WHEN REPLACING		Diagnosis Procedure	146
CONTROL UNIT : Special Repair Requirement ..	131	B2192 ID DISCORD, IMMU-ECM	147
ECM RE-COMMUNICATING FUNCTION	131	Description	147
ECM RE-COMMUNICATING FUNCTION : De-		DTC Logic	147
scription	131	Diagnosis Procedure	147
ECM RE-COMMUNICATING FUNCTION : Spe-		B2193 CHAIN OF ECM-IMMU	149
cial Repair Requirement	131	Description	149
SYSTEM DESCRIPTION	132	DTC Logic	149
NVIS (NISSAN VEHICLE IMMOBILIZER SYS-		Diagnosis Procedure	149
TEM-NATS)	132	P1610 LOCK MODE	150
System Diagram	132	Description	150
System Description	132	DTC Logic	150
Component Parts Location	133	Diagnosis Procedure	150
Component Description	134	P1611 ID DISCORD, IMMU-ECM	151
VEHICLE SECURITY SYSTEM	135	Description	151
System Diagram	135	DTC Logic	151
		Diagnosis Procedure	151
		P1612 CHAIN OF ECM-IMMU	153
		Description	153

DTC Logic	153	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	176
Diagnosis Procedure	153	Reference Value	176
P1614 CHAIN OF IMMU-KEY	154	Terminal Layout	177
Description	154	Physical Values	178
DTC Logic	154	Fail Safe	181
Diagnosis Procedure	154	DTC Index	182
P1615 DIFFERENCE OF KEY	157	WIRING DIAGRAM	183
Description	157	VEHICLE SECURITY SYSTEM	183
DTC Logic	157	Wiring Diagram	183
Diagnosis Procedure	157	NVIS	196
POWER SUPPLY AND GROUND CIRCUIT ..	158	Wiring Diagram - Without Intelligent Key System .	196
BCM	158	SYMPTOM DIAGNOSIS	202
BCM : Diagnosis Procedure	158	VEHICLE SECURITY SYSTEM SYMPTOMS ..	202
KEY CYLINDER SWITCH	160	Symptom Table	202
Description	160	NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS	203
Component Function Check	160	Symptom Table	203
Diagnosis Procedure	160	PRECAUTION	204
HORN FUNCTION	162	PRECAUTIONS	204
Symptom Table	162	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	204
VEHICLE SECURITY INDICATOR	163	REMOVAL AND INSTALLATION	205
Description	163	NATS ANTENNA AMP.	205
Component Function Check	163	Removal and Installation	205
Diagnosis Procedure	163	REMOTE KEYLESS ENTRY RECEIVER	206
ECU DIAGNOSIS INFORMATION	165	Removal and Installation	206
BCM (BODY CONTROL MODULE)	165		
Reference Value	165		
Terminal Layout	168		
Physical Values	168		
Fail Safe	174		
DTC Inspection Priority Chart	174		
DTC Index	174		

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000011288925

OVERALL SEQUENCE

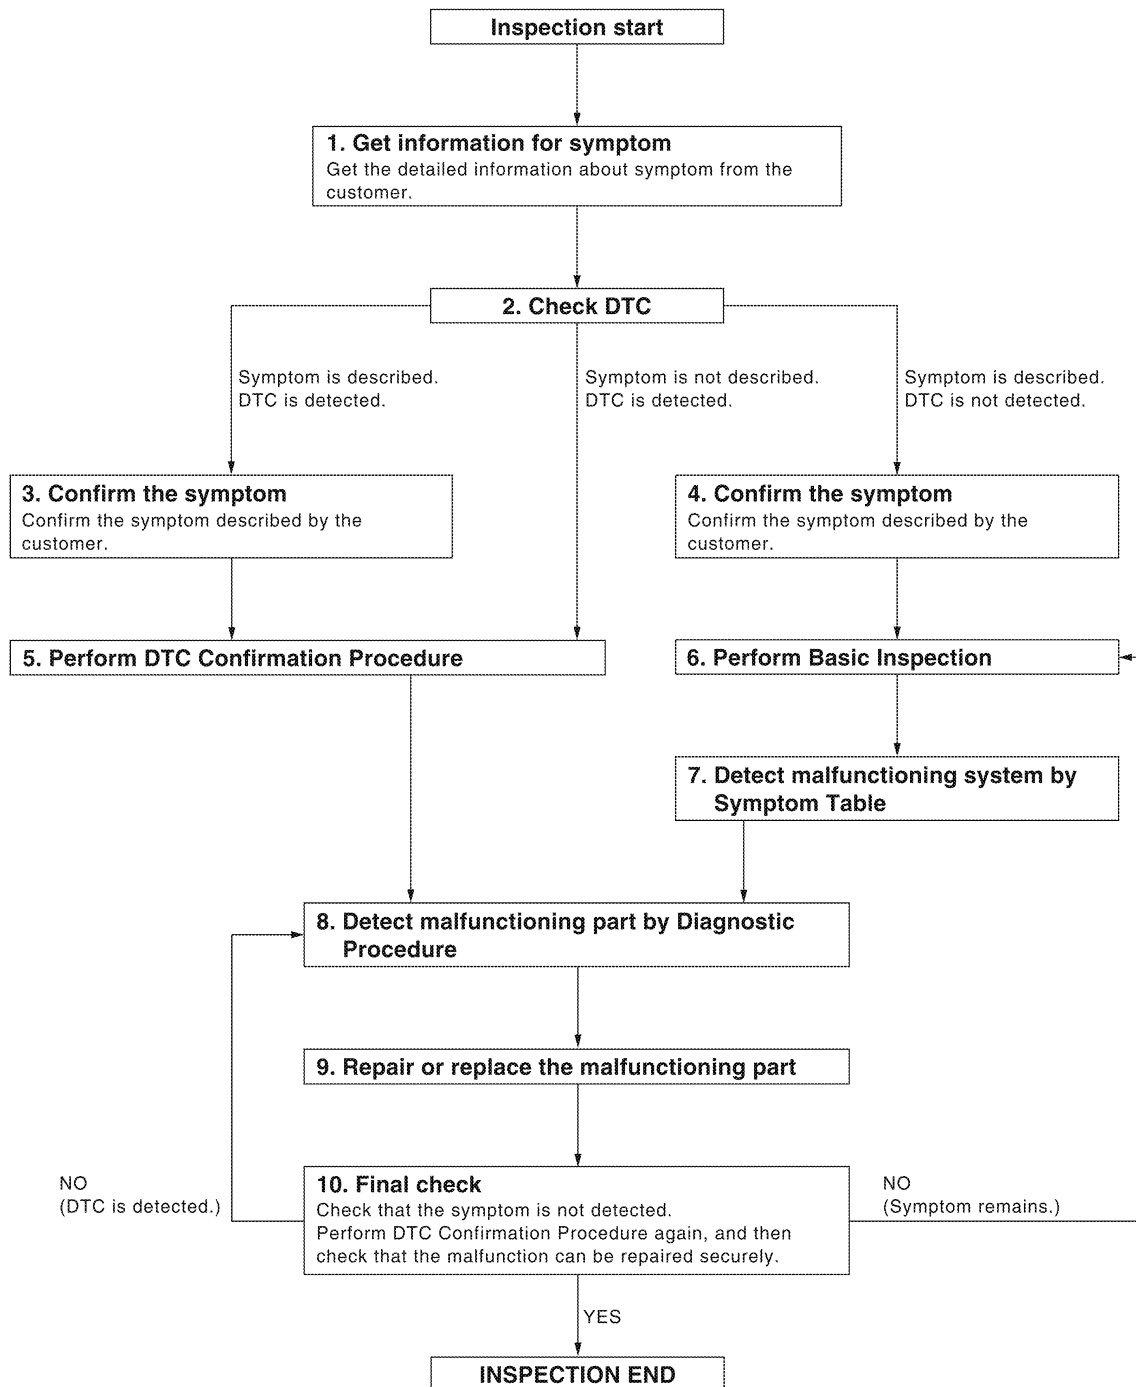

DETAILED FLOW

Revision: August 2014

SEC-5

2015 Armada NAM

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

1.GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2.CHECK DTC

1. Check DTC for Intelligent Key unit and BCM.
2. Perform the following procedure if DTC is displayed.
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3.

Symptom is described, DTC is not displayed>>GO TO 4.

Symptom is not described, DTC is displayed>>GO TO 5.

3.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT to the vehicle in "DATA MONITOR" mode and check real-time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT to the vehicle in "DATA MONITOR" mode and check real-time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

If two or more DTCs are detected, refer to [DLK-157, "DTC Inspection Priority Chart"](#) (Intelligent Key unit), [BCS-44, "DTC Inspection Priority Chart"](#) (BCM) and determine trouble diagnosis order.

Is DTC detected?

YES >> GO TO 8.

NO >> Refer to [GI-43, "Intermittent Incident"](#).

6.PERFORM BASIC INSPECTION

Perform Basic Inspection. Refer to [SEC-8, "Basic Inspection"](#).

>> GO TO 7.

7.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to Symptom Table based on the confirmed symptom in step 4.

>> GO TO 8.

8.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:

The Diagnostic Procedure is described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

>> GO TO 9.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

9. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 10.

10. FINAL CHECK

When DTC was detected in step 9, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunctions have been fully repaired.

When symptom was described by the customer, refer to the confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 8.

YES (Symptom remains)>>GO TO 6.

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

PRE-INSPECTION FOR DIAGNOSTIC

Basic Inspection

INFOID:0000000011288926

The engine start function, door lock function, power distribution system and NATS-IVIS/NMS in the Intelligent Key system are closely related to each other regarding control. Narrow down the functional area in question by performing basic inspection to identify which function is malfunctioning. The vehicle security function can operate only when the door lock and power distribution system are operating normally. Therefore, it is easy to identify any factor unique to the vehicle security system by performing the vehicle security operation check after basic inspection.

1.CHECK DOOR LOCK OPERATION

1. Check the door lock for normal operation with the Intelligent Key controller and door request switch.
2. Successful door lock operation with the Intelligent Key and request SW indicates that the remote keyless entry receiver and inside key antenna required for engine start are functioning normally.
3. Identify the malfunctioning point by referring to the DLK section if the door cannot be unlocked.

Can the door be locked with the Intelligent Key and door request switch?

YES >> GO TO 2.

NO >> Refer to [DLK-205. "Symptom Table"](#).

2.CHECK ENGINE STARTING

Checks that the engine starts when operating the Intelligent Key.

Does the engine start?

YES >> GO TO 3.

NO >> Refer to [SEC-119. "Symptom Table"](#).

3.CHECK STEERING LOCKING

1. Does the steering lock when operating door switch after switching the power supply from ON position (or ACC position) to LOCK position?
2. If door switch is malfunctioning, BCM cannot lock the steering. If BCM does not detect DTC, steering lock solenoid is normal.

Does steering lock?

YES >> GO TO 4.

NO >> Refer to [DLK-102. "Diagnosis Procedure"](#).

4.CHECK IGNITION KNOB SWITCH OPERATION

Press ignition knob switch to check switch operation.

Does the combination meter display any message?

YES >> GO TO 5.

NO >> Refer to [SEC-55. "Diagnosis Procedure"](#).

5.CHECK VEHICLE SECURITY SYSTEM

1. Check the vehicle security system for normal operation.
2. The vehicle security function can operate only when the door lock and power distribution functions are operating normally. Therefore, it is easy to identify any factor unique to the vehicle security by performing the vehicle security operation check after this basic inspection.

>> Go to [SEC-8. "Vehicle Security Operation Check"](#).

Vehicle Security Operation Check

INFOID:0000000011288927

1.INSPECTION START

Turn ignition switch "OFF".

NOTE:

Before starting operation check, open front windows.

>> GO TO 2

PRE-INSPECTION FOR DIAGNOSTIC

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

2.CHECK SECURITY INDICATOR LAMP

1. Lock doors using Intelligent Key or mechanical key.
2. Check that security indicator lamp illuminates for 30 seconds.

Security indicator lamp should illuminate.

YES >> GO TO 3

NO >> Perform diagnosis and repair. Refer to [SEC-58, "Diagnosis Procedure"](#).

3.CHECK ALARM FUNCTION

1. After 30 seconds, security indicator lamp will start to blink.
2. Open any door before unlocking with Intelligent Key or mechanical key, or open back door or glass hatch without the presence of Intelligent Key.

Does the alarm function properly?

YES >> GO TO 4

NO >> Check the following.

- The vehicle security system does not phase in alarm mode. Refer to [SEC-119, "Symptom Table"](#).
- Alarm (horn and headlamps) does not operate. Refer to [SEC-119, "Symptom Table"](#).

4.CHECK ALARM CANCEL OPERATION

Unlock any door using Intelligent Key or mechanical key.

Alarm (horn and headlamps) should stop.

YES >> Inspection End.

NO >> Check door lock function. Refer to [SEC-120, "Symptom Table"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:0000000011288928

Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

ECM RE-COMMUNICATING FUNCTION

ECM RE-COMMUNICATING FUNCTION : Description

INFOID:0000000011288929

Performing following procedure can automatically perform re-communication of ECM and BCM, but only when the ECM has been replaced with a new one (*1).

*1: New one means an ECM which has never been energized on-board.

(In this step, initialization procedure by CONSULT is not necessary)

NOTE:

- When registering new Key IDs or replacing the ECM that is not brand new, refer to **CONSULT Immobilizer mode and follow the on-screen instructions.**
- If multiple keys are attached to the key holder, separate them before work.
- Distinguish keys with unregistered key ID from those with registered ID.

ECM RE-COMMUNICATING FUNCTION : Special Repair Requirement

INFOID:0000000011288930

1. PERFORM ECM RE-COMMUNICATING FUNCTION

1. Install ECM.
2. Using a registered key (*2), turn ignition switch to "ON".
*2: To perform this step, use the key that has been used before performing ECM replacement.
3. Maintain ignition switch in "ON" position for at least 5 seconds.
4. Turn ignition switch to "OFF".
5. Start engine.

Can engine be started?

YES >> Procedure is completed.

NO >> Initialize control unit. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION


< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

SYSTEM DESCRIPTION

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

System Diagram

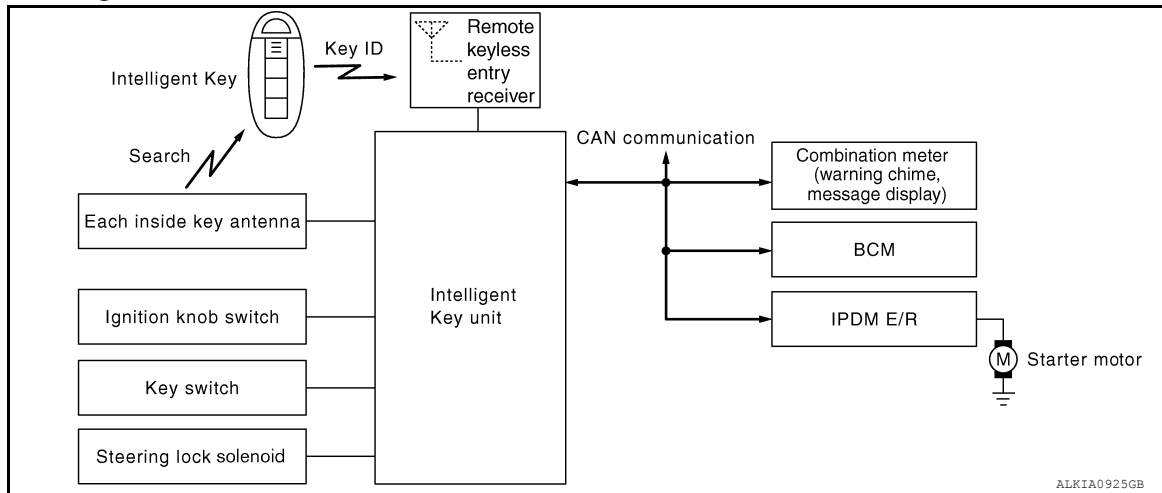

System Description

INFOID:0000000011288932

INPUT/OUTPUT SIGNAL CHART

Intelligent Key Unit

Switch/Input signal	Input signal to Intelligent Key unit	Intelligent Key unit function	Actuator/Output signal
Key switch	Mechanical key (insert/remove)	Engine start function	<ul style="list-style-type: none"> KEY warning lamp/buzzer Steering lock unit Starter relay request (to IPDM E/R) Inside key antenna (Front and rear center console, overhead console, luggage area) Key interlock solenoid
Ignition knob switch	Ignition knob (push/release)		
Steering lock unit	Steering lock (lock/unlock)		
Inside key antenna (Front and rear center console, overhead console, luggage area)	Intelligent Key (inside antenna detection area or not.)		

IPDM E/R

Switch/Input signal	Input signal to IPDM E/R	IPDM E/R function	Actuator/Output signal
Transmission range switch	P, N range	Engine start function	<ul style="list-style-type: none"> Starter relay Starter motor

BCM

Switch/Input signal	Input signal to BCM	BCM function	Actuator/Output signal
Key switch	Brake (press/release)	Engine start function	<ul style="list-style-type: none"> Inside key antenna (Front and rear center console, overhead console, luggage area)

SYSTEM DESCRIPTION

- The engine start function of Intelligent Key system is a system that makes it possible to start and stop the engine without using the key. It verifies the electronic ID using two-way communications when pressing the ignition knob switch while carrying the Intelligent Key, which operates based on the results of electronic ID verification for Intelligent Key using two-way communications between the Intelligent Key and the vehicle.

NOTE:

The driver should carry the Intelligent Key at all times.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

- Intelligent Key has 2 IDs (for Intelligent Key and for NATS). It can perform the door lock/unlock operation and the engine start operation when the registered Intelligent Key is carried.
- When the Intelligent Key battery is discharged, it can be used as emergency back-up by inserting the mechanical key set in the Intelligent Key to the ignition key cylinder. At that time, perform the NATS ID verification. If it is used when the Intelligent Key is carried, perform the Intelligent Key ID verification.
- If the ID is successfully verified, and when the ignition knob switch is pressed, steering lock will be released and initiating the engine will be possible.
- The door lock/unlock operation can be performed when the Intelligent Key battery is discharged, by operating the driver door key cylinder using the mechanical key set in the Intelligent Key.
- Up to 4 Intelligent Keys can be registered (including the standard Intelligent Key) on request from the owner.
- For initialization and registration of Intelligent Keys, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

NOTE:

- Refer to [BCS-16, "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#) for any functions other than engine start function of Intelligent Key system.

PRECAUTIONS FOR INTELLIGENT KEY SYSTEM

- **For vehicles equipped with the Intelligent Key system, the transponder [the chip for NATS ID verification] is integrated into the Intelligent Key. Therefore, the Intelligent Key alone is capable of providing security clearance for the engine to start. Also, when the mechanical key alone is inserted into the key cylinder, performs the NATS ID verification to allow the engine to start. For vehicles without Intelligent Key system, the transponder is integrated into the mechanical key which must be inserted into the key cylinder to perform the NATS ID verification to allow the engine to start.**

OPERATION WHEN INTELLIGENT KEY IS CARRIED

1. When the ignition knob switch is ON, the Intelligent Key unit transmits the request signal to the Intelligent Key.
2. The Intelligent Key receives the request signal and transmits the Intelligent Key ID signal to the Intelligent Key unit.
3. The Intelligent Key unit receives the Intelligent Key ID signal and verifies it with the registered ID.
4. Intelligent Key unit transmits the steering lock/unlock signal to steering lock unit if the verification results are OK. For detail of key warning lamp operation, refer to [DLK-118, "Diagnosis Procedure"](#).
5. Release of the steering lock.
6. BCM transmits the starter request signal via CAN communication to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition is satisfied.
7. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
8. When shift position is in P or N position, battery power is supplied through the starter relay and operate the starter motor and to start the cranking.

CAUTION:

If a malfunction is detected in the Intelligent Key system, the "NO KEY" warning message will be displayed in the combination meter. At that time, the engine cannot be started.

OPERATION RANGE

Engine can be started when Intelligent Key is inside the vehicle. However, sometimes engine might not start when Intelligent Key is on instrument panel or in glove box.

OPERATION WHEN MECHANICAL KEY IS USED

When the Intelligent Key battery is discharged, performs the NATS ID verification between the integrated transponder and BCM by inserting the mechanical key into the key cylinder, and then the engine can be started. For details relating to starting the engine using mechanical key, refer to [SEC-15, "System Description"](#).

STEERING LOCK OPERATION

Steering is locked by steering lock unit when ignition switch is in the LOCK position (the ignition knob is released) and key switch is OFF (key is removed from ignition key cylinder).


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Component Parts Location

INFOID:0000000011288933

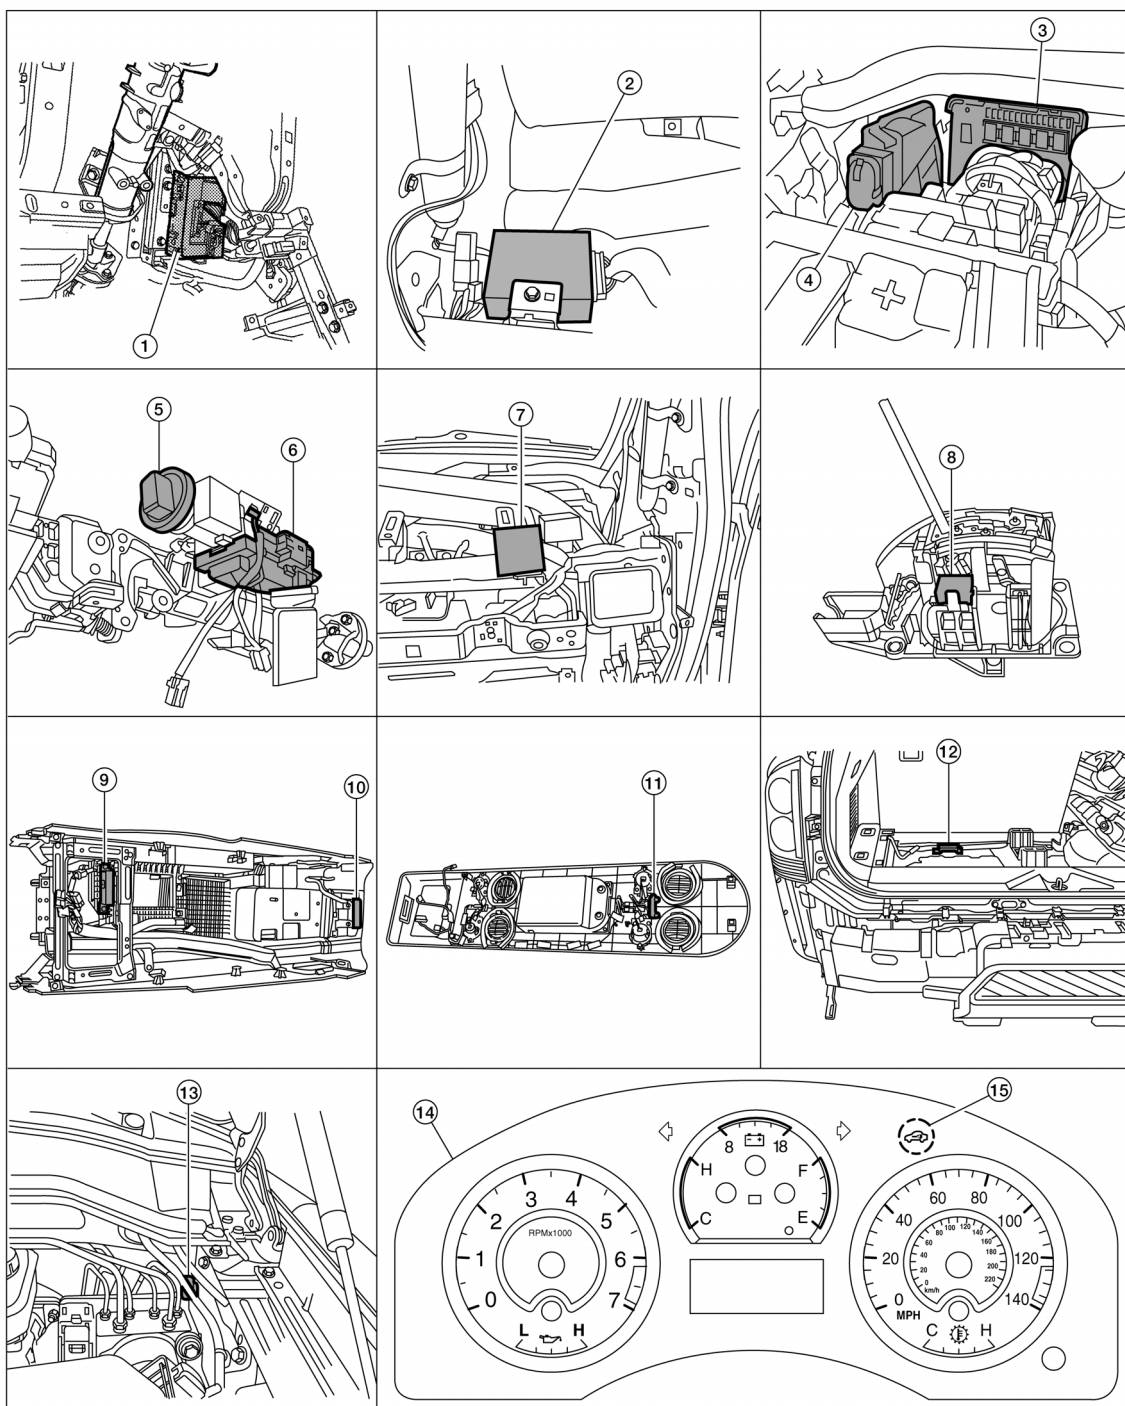

- | | | |
|---|--|--|
| 1. BCM M18, M20
(view with instrument panel LH removed) | 2. Intelligent Key unit M70
(view with instrument panel LH removed) | 3. IPDM E/R
E119, E120, E122, E124 |
| 4. ECM E16 | 5. Key switch and ignition knob switch M12
(view with steering column removed) | 6. Steering lock solenoid M15 |
| 7. Remote keyless entry receiver M25
(view with instrument panel RH removed) | 8. A/T shift selector (park position switch)
M203
(view with center console removed) | 9. Center console area antenna
(front) M210
(view with center console removed) |

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

- | | | |
|---|--|---|
| 10. Center console area antenna (rear) M209
(view with center console removed) | 11. Overhead console area antenna R210
(view with overhead console removed) | 12. Luggage area antenna B76
(view with rear carpet removed) |
| 13. Intelligent Key warning buzzer E25 | 14. Combination meter M24 | 15. Vehicle security indicator lamp |

Component Description

INFOID:0000000011288934

Item	Function
Intelligent Key unit	Receives lock/unlock signal from remote keyless entry receiver, and then transmits to BCM.
BCM	Verifies the received signal from Intelligent Key, then informs ECM whether to allow engine start.
Remote keyless entry receiver	Receives lock/unlock signal from the Intelligent Key, and then transmits to Intelligent Key unit.
Intelligent Key	Transmits button operation to remote keyless entry receiver.
Steering lock solenoid	Locks the steering wheel when the ignition key is off and the Intelligent Key is outside the vehicle.
Inside key antenna	Detects if Intelligent Key is inside the vehicle.
Intelligent Key warning buzzer	Warns the user of the lock/unlock condition and inappropriate operations with the buzzer sound.
A/T shift selector (park position switch)	Detects whether the shift lever is in park.


NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

System Diagram

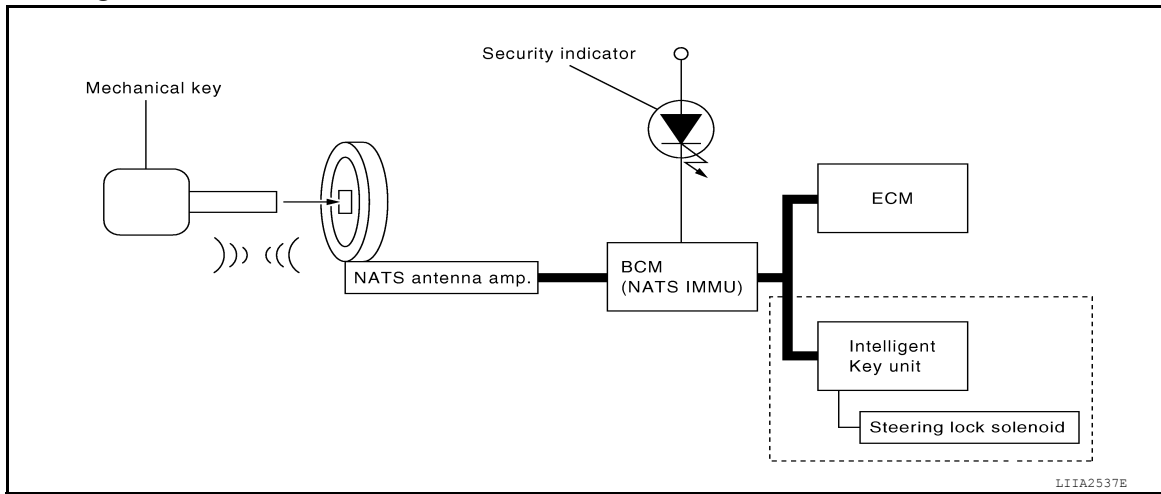

System Description

INFOID:0000000011288936

INPUT/OUTPUT SIGNAL CHART

Intelligent Key Unit

Switch/Input signal	Input signal to BCM	BCM function	Actuator/Output signal
Ignition knob switch	Ignition knob (push/release)	NATS	• Steering lock solenoid
Key switch	Mechanical key (Insert/remove)		
Steering lock solenoid	Steering (lock/unlock)		
ECM	Engine status signal		

BCM

Switch/Input signal	Input signal to BCM	BCM function	Actuator/Output signal
NATS antenna amp.	Key ID	NATS	• Security indicator lamp • Starter request
ECM	Engine status signal		

SYSTEM DESCRIPTION

NATS (Nissan Anti-Theft System) has the following immobilizer functions:

- Engine immobilizer shows high anti-theft performance to prevent engine from starting by other than the owner.
- Only a key with key ID registered in BCM and ECM can start engine, and shows high anti-theft performance to prevent key from being copied or stolen.
- Security indicator always flashes with mechanical key removed condition (key switch: OFF) and ignition knob released condition on LOCK position (ignition knob switch: OFF).
- Therefore, NATS warns outsiders that the vehicle is equipped with the anti-theft system. Refer to [SEC-19, "System Description"](#).
- If system detects malfunction, security indicator illuminates when ignition switch is turned to ON position.
- If the owner requires, ignition key ID or mechanical key ID can be registered for up to 4 keys.
- During trouble diagnosis or when the following parts have been replaced, and if mechanical key is added, registration* is required.

*1: All keys kept by the owner of the vehicle should be registered with mechanical key.

- ECM
- BCM

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

- Mechanical key
- Intelligent Key unit
- Remote keyless entry receiver
- Steering lock solenoid
- NATS trouble diagnosis, system initialization and additional registration of other mechanical key IDs must be carried out using CONSULT.
When NATS initialization has been completed, the ID of the inserted mechanical key or mechanical key IDs can be carried out.
- For initialization and registration of Intelligent Keys, refer to CONSULT Immobilizer mode and follow the on-screen instructions.
- Possible symptom of NATS malfunction is "Engine cannot start". Identify the possible causes according to "Work Flow", Refer to [SEC-5, "Work Flow"](#).
- If ECM other than Genuine NISSAN is installed, the engine cannot be started. For ECM replacement procedure, refer to [SEC-10, "ECM RE-COMMUNICATING FUNCTION : Description"](#).

PRECAUTIONS FOR KEY REGISTRATION

- The key registration is a procedure that erases the current NATS ID once, and then re-registers a new ID. Therefore the registered Intelligent Key is necessary for this procedure. Before starting the registration operation collect all registered Intelligent Keys from the customer.
- The NATS ID registration is the procedure that registers the ID stored into the transponder (integrated in mechanical key) to BCM.
The Intelligent Key ID registration is the procedure that registers the ID to Intelligent Key unit.
- When performing the Intelligent Key system registration only, the engine cannot be started by inserting the key into the key cylinder. When performing the NATS registration only, the engine cannot be started by using the mechanical key.

SECURITY INDICATOR

- Always flashes with ignition knob released (ignition knob switch: LOCK) condition on ignition knob LOCK position.
- Always flashes with ignition knob released (ignition knob switch: LOCK) condition on mechanical key removed position.

MAINTENANCE INFORMATION

CAUTION:

**It is necessary to perform NATS ID registration when replacing any of the following part.
If it's not (or fail to do so), the electrical system may not operate properly.**

- **Intelligent Key unit**
- **BCM**
- **ECM**
- **Mechanical key**
- **Steering lock solenoid**
- **NATS antenna amp.**


NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Component Parts Location

INFOID:000000011288937

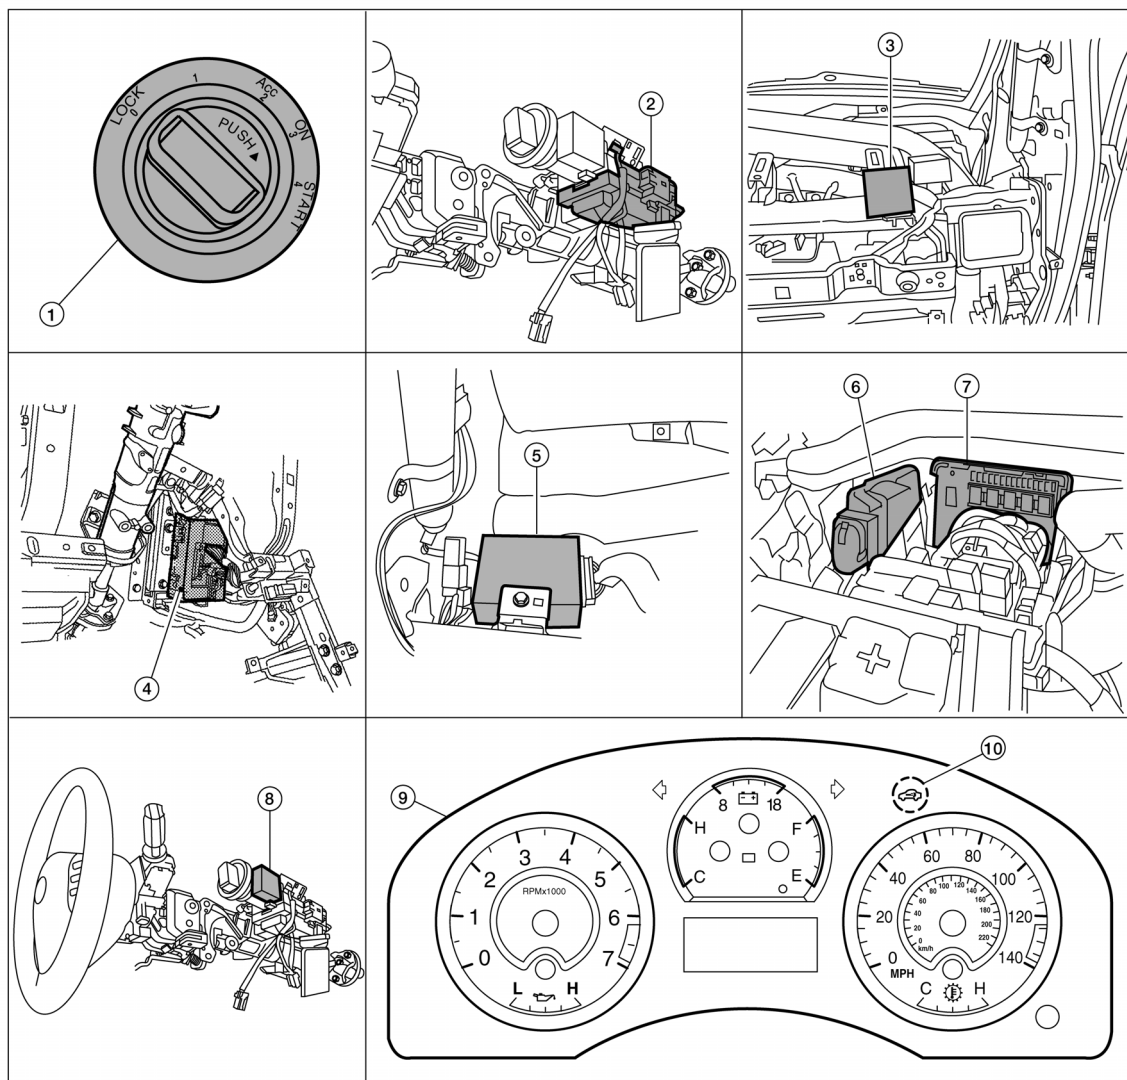

1. Key switch and ignition knob switch M12
2. Steering lock solenoid M15
(view with steering column removed)
3. Remote keyless entry receiver M25
(view with instrument panel RH removed)
4. BCM M18, M20
(view with instrument panel LH removed)
5. Intelligent Key unit M70
(view with instrument panel LH removed)
6. ECM E16
7. IPDM E/R E119, E120, E121, E122, E124
(view with cover removed)
8. NATS antenna amp. M21
9. Combination meter M24
10. Security indicator lamp

Component Description

INFOID:000000011288938

Item	Function
Intelligent Key unit	Receives lock/unlock signal from remote keyless entry receiver, and then transmits to BCM.
BCM	Controls the door lock function and room lamp function.
Remote keyless entry receiver	Receives lock/unlock signal from the Intelligent Key, and then transmits to Intelligent Key unit.
Intelligent Key	Transmits button operation to remote keyless entry receiver.
Steering lock solenoid	Locks the steering wheel when the ignition key is off and the Intelligent Key is outside the vehicle.

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Item	Function
Inside key antenna	Detects if Intelligent Key is inside the vehicle.
Intelligent Key warning buzzer	Warns the user of the lock/unlock condition and inappropriate operations with the buzzer sound.
Ignition knob switch	Monitors the status of the ignition knob switch.
NATS antenna amp.	Detects the mechanical key presence in the ignition key cylinder.
Security indicator	Indicates the status of the security system.
IPDM E/R	Monitors the ignition switch and the park switch signal from the TCM.


VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

VEHICLE SECURITY SYSTEM

System Diagram

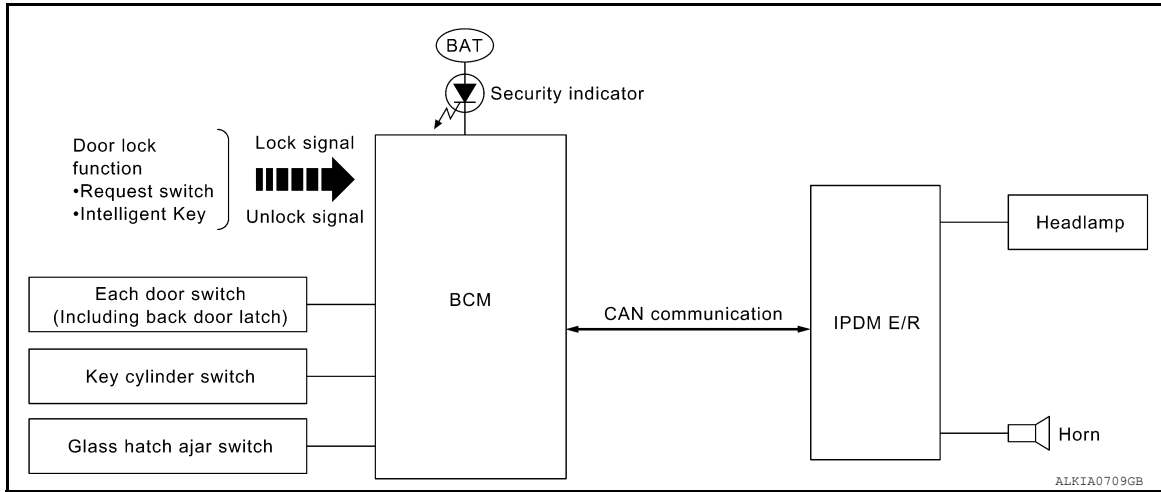

System Description


INFOID:0000000011288940

DESCRIPTION

The security system provides an audible and visual alarm when an unauthorized access to the vehicle is detected while the system is in armed phase.

The security system consist of the BCM managing the audible alarm (horn) and the visual alarm (headlamps).

OPERATION FLOW

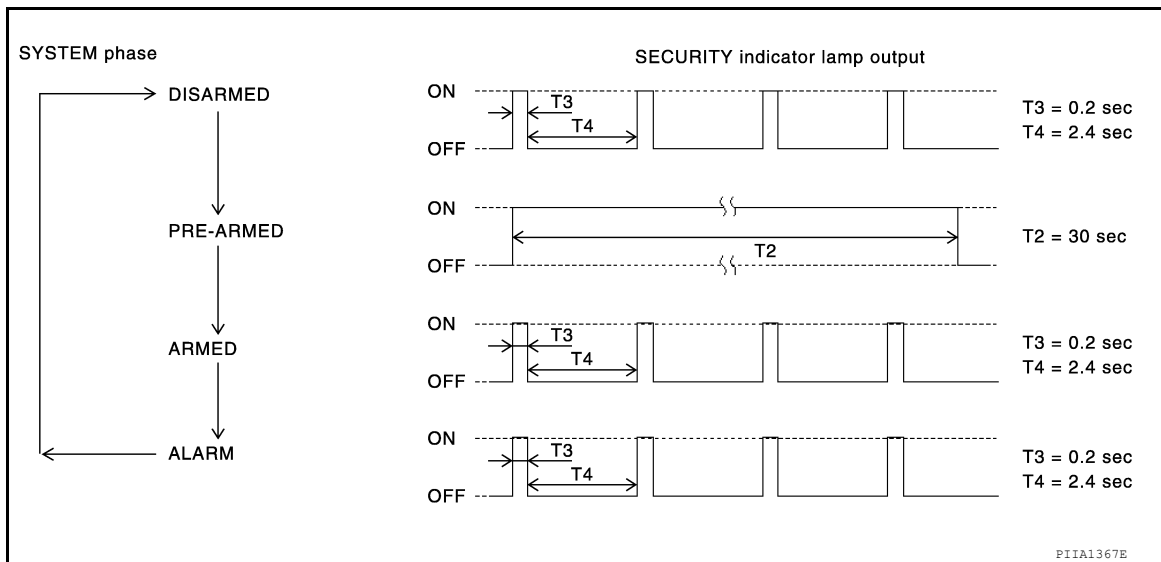

Disarmed Phase

When the vehicle is being driven or when doors are open, the theft warning system is set in the disarmed phase on the assumption that the owner is inside or near the vehicle.

Pre-Armed Phase And Armed Phase

The vehicle security system turns into the pre-armed phase when ignition switch is in OFF position, all doors are closed and locked (using Intelligent Key, door request switch or auto relock function). The system automatically shifts into the armed phase.

Condition of Activating The System

When the following condition is performed in armed phase, the system sounds the horns and flashes the headlamps for about 45 seconds.

- Any door is opened.

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >


Condition of Deactivating The System

When one of the following operations is performed, the armed phase is canceled.

- Unlock the doors with Intelligent Key or door request switch.
- Use the mechanical key to unlock the driver door using the door key cylinder.

Component Parts Location

INFOID:0000000011288941

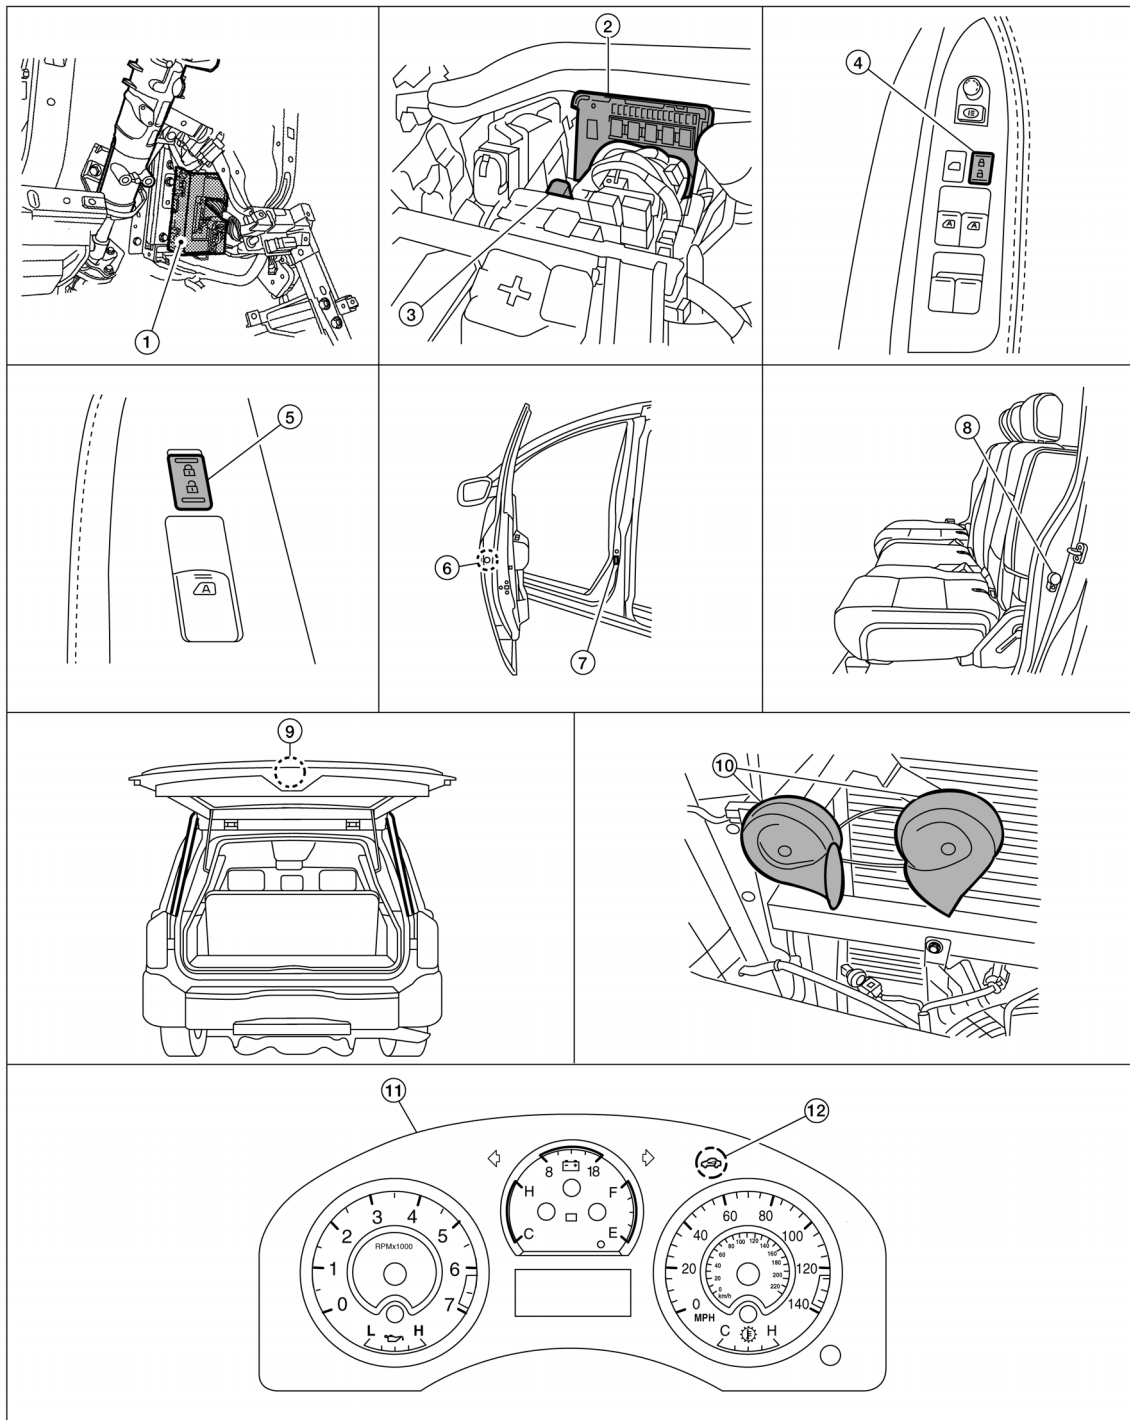

ALK1A23272Z

- | | | |
|---|---|--|
| 1. BCM M18, M19, M20
(view with instrument panel LH removed) | 2. IPDM E/R E122, E124
(view with cover removed) | 3. Horn relay H-1 |
| 4. Main power window and door lock/unlock switch D7, D8 | 5. Power window and door lock/unlock switch RH D105 | 6. Front door lock assembly LH (key cylinder switch) D14 |

VEHICLE SECURITY SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

7. Front door switch LH B8
RH B108

8. Rear door switch LH B18
RH B116

9. Back door latch (door ajar switch) D503
Glass hatch ajar switch D707
10. Horn E3
(view with front grille removed)

11. Combination meter M24

12. Security indicator lamp

Component Description

INFOID:0000000011288942

Item	Function
BCM	Controls the door lock function and room lamp function.
Door switch	Provides the BCM with the status of each monitored door.
Security indicator	Indicates the status of the security system.
IPDM E/R	Controls the horn and headlamp operation.
Horn	Sounds when the vehicle security system is triggered.

SEC

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011540936

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> The vehicle specification can be read and saved. The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×			
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Remote keyless entry system	MULTI REMOTE ENT			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY			×				
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×	×		
Back door open	TRUNK			×	×			
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×	×	×		
Signal buffer system	SIGNAL BUFFER			×	×			
TPMS	AIR PRESSURE MONITOR		×	×	×	×		
Panic alarm system	PANIC ALARM				×			

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

IMMU

IMMU : CONSULT Function (BCM - IMMU)

INFOID:0000000011540937

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [Off/On].

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT ALM)

INFOID:0000000011540938

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
I-KEY LOCK* [On/Off]	Indicates condition of lock signal from Intelligent Key.
I-KEY UNLOCK* [On/Off]	Indicates condition of unlock signal from Intelligent Key.
KEYLESS LOCK** [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK** [On/Off]	Indicates condition of unlock signal from keyfob.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
BACK DOOR SW [On/Off]	Indicates condition of back door switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.

* : with Intelligent Key

** : without Intelligent Key

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation [Off/On].
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
HEAD LAMP(HI)	This test is able to check vehicle security lamp operation [On].

WORK SUPPORT

Support Item	Setting	Description
SECURITY ALARM SET	Off	Security alarm OFF.
	On*	Security alarm ON.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Support Item	Setting	Description
THEFT ALM TRG	Off/On	The switch which triggered vehicle security alarm is recorded [On]. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching [CLEAR].
	CLEAR	

*: Initial setting

DIAGNOSIS SYSTEM (INTELLIGENT KEY UNIT)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

DIAGNOSIS SYSTEM (INTELLIGENT KEY UNIT)

CONSULT Function (INTELLIGENT KEY)

INFOID:0000000011540939

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with Intelligent Key unit.

Diagnosis mode	Function Description
ECU Identification	The Intelligent Key unit part number is displayed.
Self Diagnostic Result	Displays the diagnosis results judged by Intelligent Key unit.
Data Monitor	The Intelligent Key unit input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from Intelligent Key unit.
Work support	Changes the setting for each system function.
Can Diag Support Mntr	Monitors the reception status of CAN communication viewed from Intelligent Key unit.

SELF-DIAG RESULT

Refer to [DLK-158. "DTC Index"](#).

DATA MONITOR

Monitor Item	Condition
PUSH SW	Indicates [ON (pushed)/OFF (released)] condition of ignition knob switch.
KEY SW	Indicates [ON (inserted)/OFF (removed)] condition of key switch.
DR REQ SW	Indicates [ON (pressed)/OFF (released)] condition of door request switch (driver side).
AS REQ SW	Indicates [ON (pressed)/OFF (released)] condition of door request switch (passenger side).
IGN SW	Indicates [ON (ON or START position)/OFF (other than ON and START position)] condition of ignition switch ON position.
ACC SW	Indicates [ON/OFF] condition of ignition switch ACC position.
STOP LAMP SW	Indicates [ON/OFF] condition of stop lamp switch.
P RANGE SW	Indicates [ON/OFF] position of shift lever park position switch.
DOOR LOCK SIG	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
DOOR UNLOCK SIG	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
KEYLESS PANIC	Indicates [ON (pressed)/OFF (released)] condition of Intelligent Key panic button.
KEYLS PBD SIG	Indicates [ON (pressed)/OFF (released)] condition of Intelligent Key back door button.
DOOR SW DR	Indicates [OPEN/CLOSE] condition of front door switch (driver side) from BCM via CAN communication.
DOOR SW AS	Indicates [OPEN/CLOSE] condition of front door switch (passenger side) from BCM via CAN communication.
DOOR SW RR	Indicates [OPEN/CLOSE] condition of rear door switch (RH) from BCM via CAN communication.
DOOR SW RL	Indicates [OPEN/CLOSE] condition of rear door switch (LH) from BCM via CAN communication.
DOOR BK SW	Indicates [OPEN/CLOSE] condition of back door switch from BCM via CAN communication.
VEHICLE SPEED	Displays the vehicle speed signal received from combination meter by numerical value [km/h].

ACTIVE TEST

DIAGNOSIS SYSTEM (INTELLIGENT KEY UNIT)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Test item	Description
DOOR LOCK/UNLOCK	<p>This test is able to check door lock/unlock operation.</p> <ul style="list-style-type: none"> • ALL UNLK: All door lock actuators are unlocked. • DR UNLK: Door lock actuator (driver side) is unlocked. • AS UNLK: Door lock actuator (passenger side) is unlocked. • BK UNLK: This item is indicated, but inactive. • LOCK: All door lock actuator is locked.
ANTENNA	<p>This test is able to check Intelligent Key antenna operation. When the following condition are met, hazard warning lamps flash.</p> <ul style="list-style-type: none"> • ROOM ANT1: Center console area antenna (rear) and luggage area antenna detect Intelligent Key, when "ROOM ANT1" is selected. • ROOM ANT2: Center console area antenna (front) and overhead console area antenna detect Intelligent Key, when "ROOM ANT2" is selected. • LUG Ant: This selection is not used. • DR ANT: Outside key antenna (driver side) detects Intelligent Key, when "DR ANT" is selected. • AS ANT: Outside key antenna (passenger side) detects Intelligent Key, when "AS ANT" is selected. • BK DR ANT: Outside key antenna (rear bumper) detects Intelligent Key, when "BK DR ANT" is selected.
OUTSIDE BUZZER	<p>This test is able to check Intelligent Key warning buzzer operation.</p> <ul style="list-style-type: none"> • On • Off
INSIDE BUZZER	<p>This test is able to check warning chime in combination meter operation.</p> <ul style="list-style-type: none"> • Take Out: Take away warning chime sounds. • Knob: Ignition knob switch warning chime sounds. • Key: Key warning chime sounds. • Off

WORK SUPPORT

Support item	Description	Selection item	Condition
CONFIRM KEY FOB ID	It can check whether Intelligent Key ID code is registered or not.	—	—
TAKE OUT FROM WINDOW WARN	Take away warning chime (from window) mode can be changed.	ON	Active
		OFF	Inactive
LOW BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed.	ON	Active
		OFF	Inactive
ANSWER BACK FUNCTION	Buzzer reminder operation can be changed.	ON	Active
		OFF	Inactive
SELECTIVE UNLOCK FUNCTION	Anti-hijack mode can be changed.	ON	Active
		OFF	Inactive
ANTI KEY LOCK IN FUNCTION	Key reminder function mode can be changed to operation with this mode.	ON	Active
		OFF	Inactive
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be selected with this mode.	ON	Active
		OFF	Inactive
HAZARD ANSWER BACK	Hazard reminder operation mode can be changed.	LOCK/UNLOCK	Active
		LOCK ONLY	
		UNLOCK ONLY	
		OFF	Inactive
ANSWER BACK WITH I-KEY LOCK	Buzzer reminder operation (lock operation) mode by each door request switch can be changed.	HORN CHIRP	Active
		BUZZER	
		OFF	Inactive
ANSWER BACK WITH I-KEY UNLOCK	Buzzer reminder operation (unlock operation) mode by each door request switch can be changed.	ON	Active
		OFF	Inactive

DIAGNOSIS SYSTEM (INTELLIGENT KEY UNIT)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Support item	Description	Selection item	Condition
AUTO RELOCK TIMER	Auto door lock operation mode can be changed.	1 min	Active
		5 min	
		OFF	Inactive
PANIC ALARM DELAY	Panic alarm button pressing time on Intelligent Key button can be selected from the following with this mode.	0.5 sec	Active
		1.5 sec	
		OFF	Inactive
P/W DOWN DELAY	Unlock button pressing time on Intelligent Key button can be selected from the following with this mode.	3 sec	Active
		5 sec	
		OFF	Inactive
ENGINE START BY I-KEY	Engine start function (by Intelligent Key) mode can be changed.	ON	Active
		OFF	Inactive
LOCK/UNLOCK BY I-KEY	Door lock function by door request switch can be changed.	ON	Active
		OFF	Inactive

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000011288947

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart, refer to [LAN-46, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000011288948

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When Intelligent Key unit cannot communicate CAN communication signal continuously for 2 seconds or more.	In CAN communication system, any item (or items) of the following listed below is malfunctioning. <ul style="list-style-type: none">• Transmission• Receiving (BCM)• Receiving (ECM)• Receiving (METER/M&A)

Diagnosis Procedure

INFOID:0000000011288949

1.PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-5, "CAN Communication Control Circuit"](#).
NO >> Refer to [GI-43, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

U1010 CONTROL UNIT (CAN)

Description

INFOID:0000000011288950

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. CAN Communication Signal Chart, refer to [LAN-46, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000011288951

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diagnosis of CAN controller of Intelligent Key unit.	Intelligent Key unit

Diagnosis Procedure

INFOID:0000000011288952

1.REPLACE INTELLIGENT KEY UNIT

When DTC [U1010] is detected, replace Intelligent Key unit.

>> Replace Intelligent Key unit. Refer to [SEC-125, "Removal and Installation"](#).

Special Repair Requirement

INFOID:0000000011288953

1.REQUIRED WORK WHEN REPLACING INTELLIGENT KEY UNIT

Initialize control unit. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2013 STRG COMM 1

Description

INFOID:0000000011288954

Intelligent Key unit performs the ID verification with the steering lock solenoid and releases the steering lock if both Intelligent Key unit and steering lock solenoid ID are same. Intelligent Key unit starts the communication with the steering lock solenoid when Intelligent Key is carried into the vehicle and the ignition knob switch is pressed.

DTC Logic

INFOID:0000000011288955

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2013	STRG COMM 1	The ID verification results between Intelligent Key unit and steering control unit are NG. The registration is necessary.	Steering lock solenoid

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Press the ignition knob switch.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-30, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288956

Regarding Wiring Diagram information, refer to [SEC-84, "Wiring Diagram"](#).

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can steering lock be released with re-registered mechanical key?

- YES >> Steering lock solenoid was unregistered.
 NO >> GO TO 2


2.CHECK STEERING LOCK SOLENOID POWER SUPPLY-1

1. Turn ignition switch OFF.
2. Disconnect steering lock solenoid connector.
3. Check voltage between steering lock solenoid harness connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Steering lock solenoid connector	Terminal	
M15	1	Ground
		Battery voltage

Is the inspection result normal?

- YES >> GO TO 3
 NO >> Repair or replace harness.

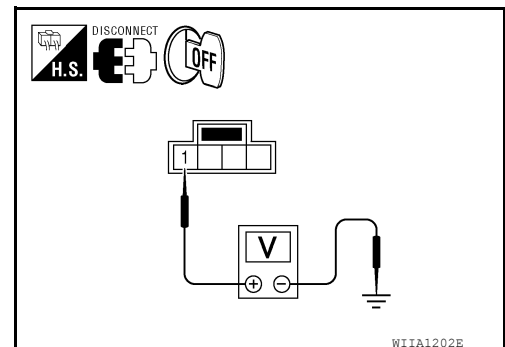

WI1A1202E

3.CHECK STEERING LOCK SOLENOID GROUND CIRCUIT


Check continuity between steering lock solenoid harness connector and ground.

Terminals			Continuity
(+)		(-)	
Steering lock solenoid connector	Terminal		
M15	4	Ground	Yes

Is the inspection result normal?

YES >> GO TO 4


NO >> Repair or replace harness.

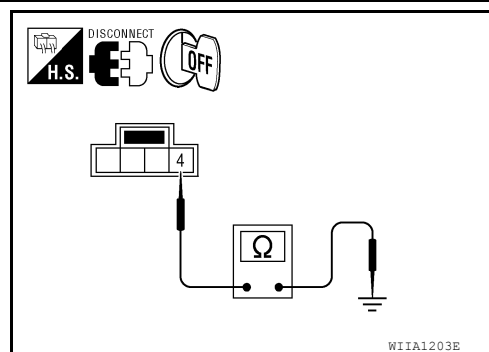**4.CHECK STEERING LOCK SOLENOID COMMUNICATION CIRCUITS**

1. Disconnect Intelligent Key unit connector.
2. Check continuity between steering lock solenoid connector (A) M15 terminals 2, 3 and Intelligent Key unit connector (B) M70 terminals 1, 32.

Terminals				Continuity
Steering lock solenoid connector	Terminal	Intelligent Key unit connector	Terminal	
A: M15	2	B: M70	1	Yes
	3		32	

3. Check continuity between steering lock solenoid connector (A) M15 terminals 2, 3 and ground.

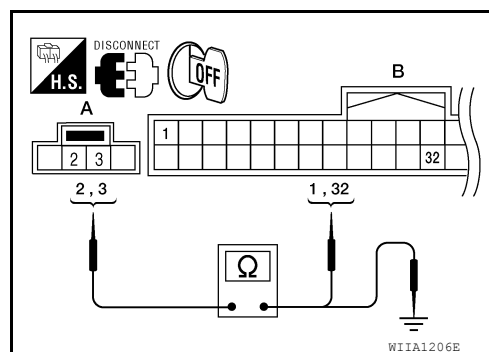

Terminals		Continuity
Steering lock solenoid connector	Terminals	
A: M15	2	Ground
	3	
		No

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair or replace harness.

5.CHECK INTELLIGENT KEY UNIT POWER SUPPLY-2


1. Connect Intelligent Key unit connector.
2. Check voltage between Intelligent Key unit harness connector and ground.

Terminals			Voltage (V) (Approx.)
(+)		(-)	
Intelligent Key unit connector	Terminal		
M70	1	Ground	5

Is the inspection result normal?

YES >> GO TO 6

NO >> Replace Intelligent Key unit. Refer to [SEC-125](#), "Removal and Installation".

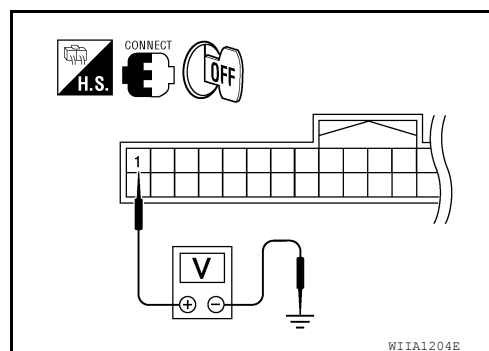**6.CHECK STEERING LOCK SOLENOID COMMUNICATION CIRCUIT**


1. Connect steering lock solenoid connector.

B2013 STRG COMM 1

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

- Using an oscilloscope, check voltage between Intelligent Key unit connector and ground.

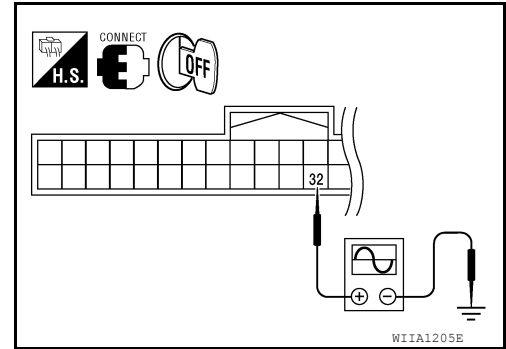

Terminals		(-)	Condition	Voltage (V) (Approx.)
(+)				
Intelligent Key unit connector	Terminal			
M70	32	Ground	Steering lock	
			LOCK status	5
			LOCK ⇔ UNLOCK	
			For 15 seconds after UNLOCK	5
			15 seconds later UN- LOCK	0

Is the inspection result normal?

YES >> Replace Steering lock solenoid.

NO >> Replace Intelligent Key unit. Refer to [SEC-125, "Removal and Installation"](#).

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2190 NATS ANTENNA AMP.

Description

INFOID:0000000011288957

Performs ID verification through BCM and NATS antenna amplifier when ignition knob switch is pressed. Prohibits the release of steering lock or start of engine when an unregistered ID of mechanical key is used.

DTC Logic

INFOID:0000000011288958

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2190	NATS ANTENNA AMP	<ul style="list-style-type: none">Inactive communication between NATS antenna amp. and BCM.Mechanical key is malfunctioning.	<ul style="list-style-type: none">Harness or connectors (The NATS antenna amp. circuit is open or shorted)Mechanical keyNATS antenna amp.BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert mechanical key into the key cylinder.
2. Press the ignition knob switch.
3. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

YES >> Refer to [SEC-33, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288959

Regarding Wiring Diagram information, refer to [SEC-110, "Wiring Diagram - With Intelligent Key System"](#).

1.CHECK NATS ANTENNA AMP. INSTALLATION

Check NATS antenna amp. installation. Refer to [SEC-124, "Removal and Installation"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Reinstall NATS antenna amp. correctly.

2.CHECK NVIS (NATS) IGNITION KEY ID CHIP

Start engine with another registered NATS ignition key.

Does the engine start?

YES >>

- Ignition key ID chip is malfunctioning.

- Replace the ignition key.

- Perform initialization with CONSULT.

For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

NO >> GO TO 3

3.CHECK POWER SUPPLY FOR NATS ANTENNA AMP.

1. Turn ignition switch ON.
2. Check voltage between NATS antenna amp. connector M21 terminal 1 and ground.

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]


1 - Ground

: Battery voltage

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace fuse or harness.

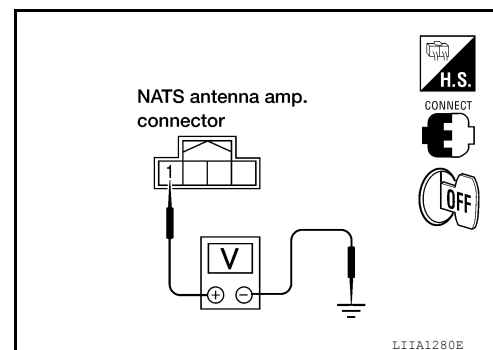

4. CHECK NATS ANTENNA AMP. GROUND LINE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect NATS antenna amp. connector.
3. Check continuity between NATS antenna amp. connector M21 terminal 3 and ground.

3 - Ground

: Continuity should exist.


Is the inspection result normal?

YES >> GO TO 5

NO >> • Repair or replace harness.


NOTE:

If harness is OK, replace BCM, refer to [BCS-54, "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

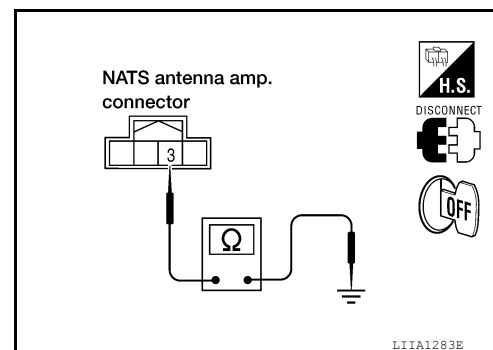

5. CHECK NATS ANTENNA AMP. SIGNAL LINE- 1

1. Connect NATS antenna amp. connector.
2. Turn ignition switch ON.
3. Check voltage between NATS antenna amp. connector M21 terminal 2 and ground with analog tester.

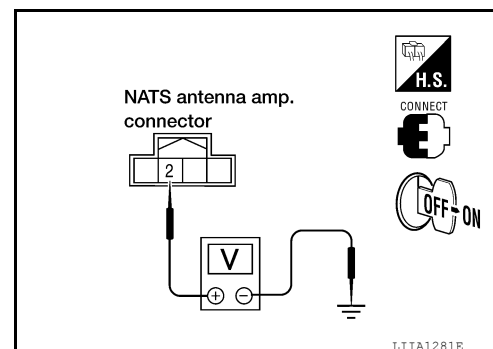

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
(+)	(-)		
2	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES >> GO TO 6

NO >> • Repair or replace harness.

NOTE:

B2190 NATS ANTENNA AMP.


< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

If harness is OK, replace BCM, refer to [BCS-54. "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

6.CHECK NATS ANTENNA AMP. SIGNAL LINE- 2

Check voltage between NATS antenna amp. connector M21 terminal 4 and ground with analog tester.

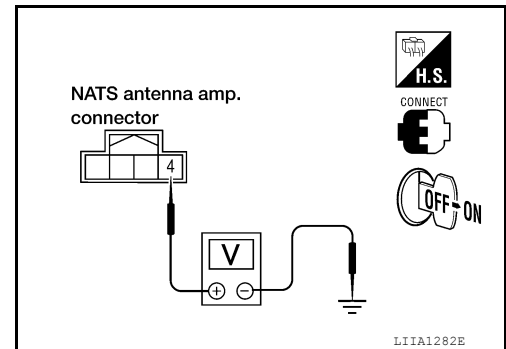

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
(+)	(-)		
4	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES >> NATS antenna amp. is malfunctioning.

NO >> • Repair or replace harness.

NOTE:

If harness is OK, replace BCM, refer to [BCS-54. "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

SEC

B2191 DIFFERENCE OF KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2191 DIFFERENCE OF KEY

Description

INFOID:0000000011288960

Performs ID verification through BCM when ignition knob switch is pressed.

Prohibits the release of steering lock or start of engine when an unregistered ID of mechanical key is used.

DTC Logic

INFOID:0000000011288961

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2191	DIFFERENCE OF KEY	The ID verification results between BCM and mechanical key are NG. The registration is necessary.	Mechanical key

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert mechanical key into the key cylinder.
2. Press the ignition knob switch.
3. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-36, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288962

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> Mechanical key was unregistered.
NO >> BCM is malfunctioning.
 - Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
 - Perform initialization again

B2192 ID DISCORD, IMMU-ECM

Description

INFOID:0000000011288963

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011288964

DTC DETECTION LOGIC

NOTE:

- If DTC B2192 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-28, "DTC Logic"](#).
- If DTC B2192 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-29, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG. The registration is necessary.	<ul style="list-style-type: none"> • BCM • ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-37, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288965

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ID was unregistered.
 NO >> GO TO 2

2.PEPLACE BCM

1. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
2. Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> BCM is malfunctioning.
 NO >> GO TO 3

3.PEPLACE ECM

1. Replace ECM. Refer to Removal and Installation.
2. Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ECM is malfunctioning.
 NO >> GO TO 4

B2192 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> Inspection End

B2193 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2193 CHAIN OF ECM-IMMU

Description

INFOID:0000000011288966

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011288967

DTC DETECTION LOGIC

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-28, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-29, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193	CHAIN OF BCM-ECM	Inactive communication between ECM and BCM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or short)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-39, "Diagnosis Procedure"](#).
NO >> Inspection End

Diagnosis Procedure

INFOID:0000000011288968

1.REPLACE BCM

1. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
2. Perform initialization with CONSULT.
For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Does the engine start?

- YES >> BCM was malfunctioning.
NO >> ECM is malfunctioning.
 - Replace ECM.
 - Perform ECM re-communicating function.

B2194 ID DISCORD IMMU-I-KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2194 ID DISCORD IMMU-I-KEY

Description

INFOID:0000000011288969

BCM performs the ID verification with Intelligent Key unit that allows the engine to start. BCM starts the communication with Intelligent Key unit if ignition switch is turned ON and starts the engine if the ID is OK. BCM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011288970

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2194	DISCORD BCM-I-KEY	The ID verification results between BCM and Intelligent Key unit are NG. The registration is necessary.	<ul style="list-style-type: none">• BCM• Intelligent Key unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-40, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288971

1.PERFORM INITIALIZATION

1. Perform initialization with CONSULT. Re-register all mechanical keys.
For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> GO TO 2
NO >> ID was unregistered.

2.REPLACE BCM

1. Turn ignition switch OFF.
2. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
3. Perform initialization with CONSULT. Re-register all mechanical keys.
For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started?

- YES >> BCM is malfunctioning.
NO >> GO TO 3

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> Inspection End.

B2552 INTELLIGENT KEY

Description

INFOID:0000000011288972

Intelligent Key unit performs engine start operation and steering lock control by crosschecking ID with the Intelligent Key.

DTC Logic

INFOID:0000000011288973

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2552	INTELLIGENT KEY UNIT	Malfunction is detected inside Intelligent Key unit.	Intelligent Key unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-41, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288974

1.REPLACE INTELLIGENT KEY UNIT

1. Replace Intelligent Key unit. Refer to [SEC-125, "Removal and Installation"](#).
2. Perform initialization with CONSULT. Re-register all mechanical keys. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.
3. Start the engine.

Does the engine start?

- YES >> Inspection End.
 NO >> Perform "DTC confirmation procedure". Refer to [SEC-41, "DTC Logic"](#).

Special Repair Requirement

INFOID:0000000011288975

1.REQUIRED WORK WHEN REPLACING INTELLIGENT KEY UNIT

Initialize control unit. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

B2590 ID DISCORD BCM-I-KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2590 ID DISCORD BCM-I-KEY

Description

INFOID:0000000011288976

Intelligent Key unit performs the ID verification with BCM that allows the engine to start. BCM starts the engine if the ID is OK and prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011288977

DTC DETECTION LOGIC

NOTE:

- If DTC B2590 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-28, "DTC Logic"](#).
- If DTC B2590 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-29, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2590	ID DISCORD BCM-I-KEY	The ID verification results between BCM and Intelligent Key unit are NG. The registration is necessary.	<ul style="list-style-type: none">• BCM• Intelligent Key unit

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-42, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288978

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.
For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ID was unregistered.
NO >> BCM is malfunctioning.
 - Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
 - Perform initialization again

P1610 LOCK MODE

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1610 LOCK MODE

Description

INFOID:0000000011288979

When the starting operation is carried more than five times consecutively under the following conditions, NATS will shift to the mode which prevents the engine from being started.

- Unregistered mechanical key is used.
- BCM or ECM's malfunctioning.

DTC Logic

INFOID:0000000011288980

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When the starting operation is carried out five or more times consecutively under the following conditions. <ul style="list-style-type: none">• Unregistered mechanical key• BCM or ECM's malfunctioning.	—

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-43, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288981

1.CHECK ENGINE START FUNCTION

1. Perform the check for DTC except DTC P1610.
2. Use CONSULT to erase DTC after fixing.
3. Check that engine can start with registered mechanical key.

Does the engine start?

- YES >> Inspection End.
NO >> GO TO 2

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> Inspection End.

P1611 ID DISCORD, IMMU-ECM

Description

INFOID:0000000011288982

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011288983

DTC DETECTION LOGIC

NOTE:

- If DTC P1611 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-28, "DTC Logic"](#).
- If DTC P1611 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-29, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1611	ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG. The registration is necessary.	<ul style="list-style-type: none"> • BCM • ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-44, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288984

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ID was unregistered.
 NO >> GO TO 2

2.PEPLACE BCM

1. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
2. Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> BCM is malfunctioning.
 NO >> GO TO 3

3.PEPLACE ECM

1. Replace ECM. Refer to Removal and Installation.
2. Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ECM is malfunctioning.
 NO >> GO TO 4

P1611 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> Inspection End.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

P1612 CHAIN OF ECM-IMMU

Description

INFOID:0000000011288985

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011288986

DTC DETECTION LOGIC

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-28, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-29, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1612	CHAIN OF ECM-IMMU	Inactive communication between ECM and BCM	<ul style="list-style-type: none"> • Harness or connectors (The CAN communication line is open or short) • BCM • ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-46, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288987

1. REPLACE BCM

1. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
2. Perform initialization with CONSULT.
 For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Does the engine start?

- YES >> BCM was malfunctioning.
 NO >> ECM is malfunctioning.
 - Replace ECM.
 - Perform ECM re-communicating function.

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1614 CHAIN OF IMMU-KEY

Description

INFOID:0000000011288988

Performs ID verification through BCM and NATS antenna amplifier when ignition knob switch is pressed. Prohibits the release of steering lock or start of engine when an unregistered ID of mechanical key is used.

DTC Logic

INFOID:0000000011288989

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1614	CHAIN OF IMMU-KEY	<ul style="list-style-type: none">Inactive communication between NATS antenna amp. and BCM.Mechanical key is malfunctioning.	<ul style="list-style-type: none">Harness or connectors (The NATS antenna amp. circuit is open or shorted)Mechanical keyNATS antenna amp.BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert mechanical key into the key cylinder.
2. Press the ignition knob switch.
3. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-47. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288990

Regarding Wiring Diagram information, refer to [SEC-110. "Wiring Diagram - With Intelligent Key System"](#).

1.CHECK NATS ANTENNA AMP. INSTALLATION

Check NATS antenna amp. installation. Refer to [SEC-124. "Removal and Installation"](#).

Is the inspection result normal?

- YES >> GO TO 2
NO >> Reinstall NATS antenna amp. correctly.

2.CHECK NVIS (NATS) IGNITION KEY ID CHIP

Start engine with another registered NATS ignition key.

Does the engine start?

- YES >>
 - Ignition key ID chip is malfunctioning.
 - Replace the ignition key.
 - Perform initialization with CONSULT.For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.
NO >> GO TO 3

3.CHECK POWER SUPPLY FOR NATS ANTENNA AMP.

1. Turn ignition switch ON.
2. Check voltage between NATS antenna amp. connector M21 terminal 1 and ground.

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >


[WITH INTELLIGENT KEY SYSTEM]

1 - Ground

: Battery voltage

Is the inspection result normal?

- YES >> GO TO 4
NO >> Repair or replace fuse or harness.

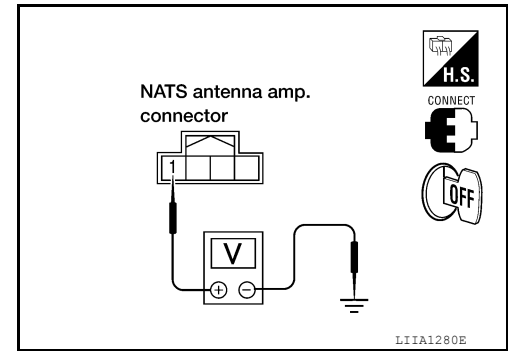

4. CHECK NATS ANTENNA AMP. GROUND LINE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect NATS antenna amp. connector.
3. Check continuity between NATS antenna amp. connector M21 terminal 3 and ground.

3 - Ground


: Continuity should exist.

Is the inspection result normal?

- YES >> GO TO 5
NO >> • Repair or replace harness.


NOTE:

If harness is OK, replace BCM, refer to [BCS-54, "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

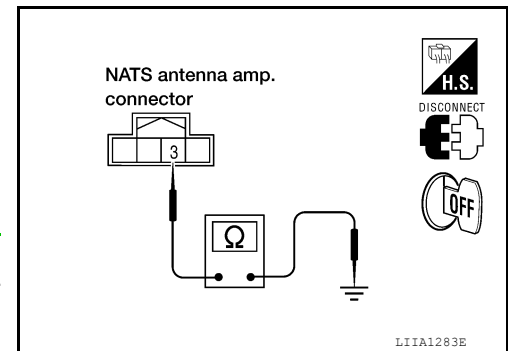

5. CHECK NATS ANTENNA AMP. SIGNAL LINE- 1

1. Connect NATS antenna amp. connector.
2. Turn ignition switch ON.
3. Check voltage between NATS antenna amp. connector M21 terminal 2 and ground with analog tester.

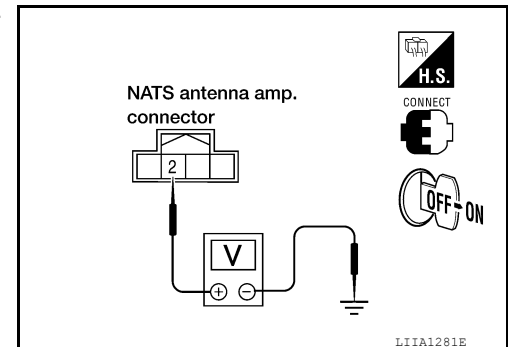

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
(+)	(-)		
2	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

- YES >> GO TO 6
NO >> • Repair or replace harness.

NOTE:

P1614 CHAIN OF IMMU-KEY


< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

If harness is OK, replace BCM, refer to [BCS-54. "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

6.CHECK NATS ANTENNA AMP. SIGNAL LINE- 2

Check voltage between NATS antenna amp. connector M21 terminal 4 and ground with analog tester.

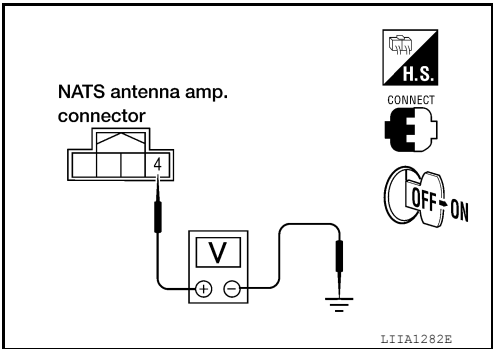

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
(+)	(-)		
4	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES >> NATS antenna amp. is malfunctioning.

NO >> • Repair or replace harness.

NOTE:

If harness is OK, replace BCM, refer to [BCS-54. "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

SEC

L

M

N

O

P

P1615 DIFFERENCE OF KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1615 DIFFERENCE OF KEY

Description

INFOID:0000000011288991

Performs ID verification through BCM when ignition knob switch is pressed.

Prohibits the release of steering lock or start of engine when an unregistered ID of mechanical key is used.

DTC Logic

INFOID:0000000011288992

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1615	DIFFERENCE OF KEY	The ID verification results between BCM and mechanical key are NG. The registration is necessary.	Mechanical key

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert mechanical key into the key cylinder.
2. Press the ignition knob switch.
3. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-50. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011288993

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> Mechanical key was unregistered.
NO >> BCM is malfunctioning.
 - Replace BCM. Refer to [BCS-54. "Removal and Installation"](#).
 - Perform initialization again

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT INTELLIGENT KEY UNIT

INTELLIGENT KEY UNIT : Diagnosis Procedure

INFOID:000000011540971

Regarding Wiring Diagram information, refer to [DLK-175. "Wiring Diagram"](#).

1. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit connector.
3. Check voltage between Intelligent Key unit harness connector M70 terminals 6, 11 and ground.

Connector	Terminals		Ignition switch position	
	(+)	(-)	OFF	ON
M70	6	Ground	0V	Battery voltage
	11		Battery voltage	Battery voltage

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace Intelligent Key power supply circuit.

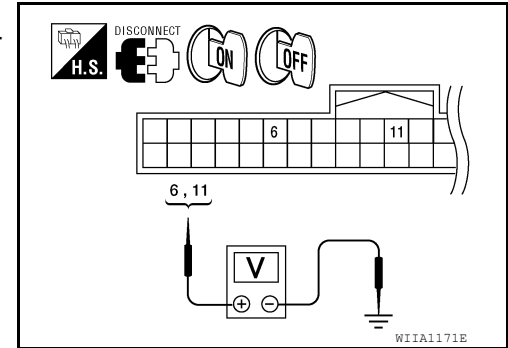

2. CHECK GROUND CIRCUIT


Check continuity between Intelligent Key unit harness connector M70 terminal 12 and ground.

12 - Ground : Continuity should exist.

Is the inspection result normal?

YES >> Power supply and ground circuits are OK.

NO >> Repair or replace the Intelligent Key unit ground circuit.

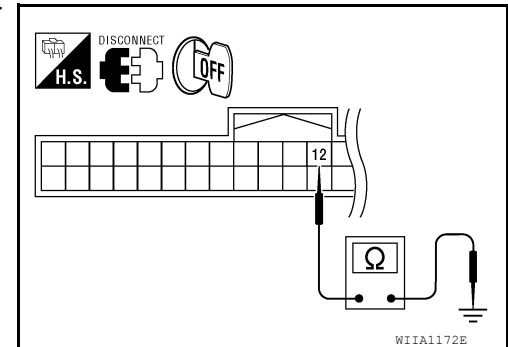

BCM

BCM : Diagnosis Procedure

INFOID:000000011540972

Regarding Wiring Diagram information, refer to [BCS-46. "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	22 (15A)
70		F (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	59 (10A)

Is the fuse blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

POWER SUPPLY AND GROUND CIRCUIT

[WITH INTELLIGENT KEY SYSTEM]


< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

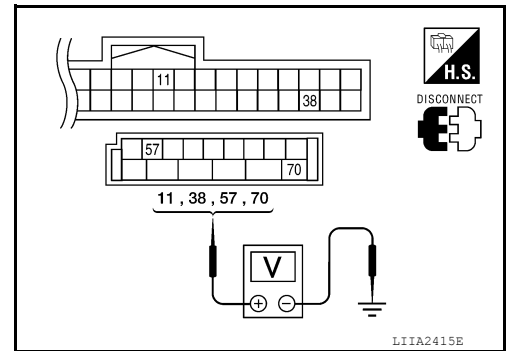

Is the measurement value normal?

- YES >> GO TO 3
 NO >> Repair or replace harness.


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

Does continuity exist?

- YES >> Inspection End.
 NO >> Repair or replace harness.

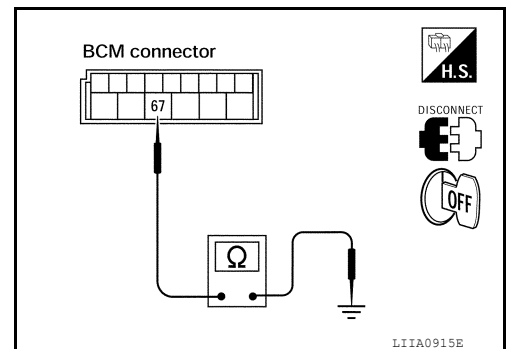

KEY CYLINDER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

KEY CYLINDER SWITCH

Description

INFOID:0000000011288996

The main power window and door lock/unlock switch detects condition of the door key cylinder switch and transmits to BCM as the LOCK or UNLOCK signal.

Component Function Check

INFOID:0000000011288997

1.CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL

Check "KEY CYL LK-SW" AND "KEY CYL UN-SW" in DATA MONITOR mode for "POWER DOOR LOCK SYSTEM" with CONSULT.

Monitor item	Condition
KEY CYL LK-SW	Lock : ON
	Neutral / Unlock : OFF
KEY CYL UN-SW	Unlock : ON
	Neutral / Lock : OFF

Is the inspection result normal?

YES >> Key cylinder switch is OK.

NO >> Refer to [SEC-53. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011288998

Regarding Wiring Diagram information, refer to [SEC-97. "Wiring Diagram"](#).

1.CHECK DOOR KEY CYLINDER SWITCH

④ With CONSULT

Check front door lock assembly LH (key cylinder switch) ("KEY CYL LK-SW") and ("KEY CYL UN-SW") in DATA MONITOR mode with CONSULT.

• When key inserted in left front key cylinder is turned to LOCK:

KEY CYL LK-SW : ON


• When key inserted in left front key cylinder is turned to UNLOCK:

KEY CYL UN-SW : ON

⊗ Without CONSULT

Check voltage between main power window and door lock/unlock switch connector D7 terminals 4, 6 and ground.

Connector	Terminals		Condition of left front key cylinder	Voltage (V) (Approx.)
	(+)	(-)		
D7	4	Ground	Neutral/Unlock	5
			Lock	0
	6		Neutral/Lock	5
			Unlock	0

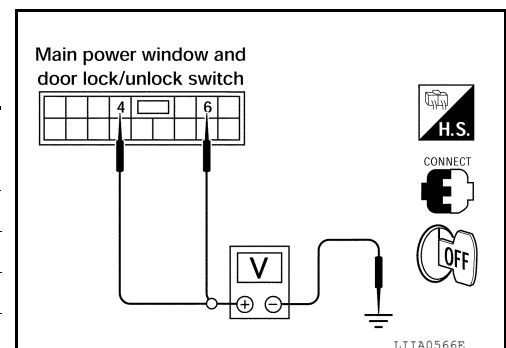

Is the inspection result normal?

YES >> Key cylinder switch signal is OK.

KEY CYLINDER SWITCH

< DTC/CIRCUIT DIAGNOSIS >


[WITH INTELLIGENT KEY SYSTEM]

NO >> GO TO 2

2.CHECK DOOR KEY CYLINDER SWITCH GROUND HARNESS

1. Turn ignition switch OFF.
2. Disconnect front door lock assembly LH (key cylinder switch).
3. Check continuity between front door lock assembly LH (key cylinder switch) connector D14 terminal 5 and body ground.

Connector	Terminals	Continuity
D14	5 – Ground	Yes

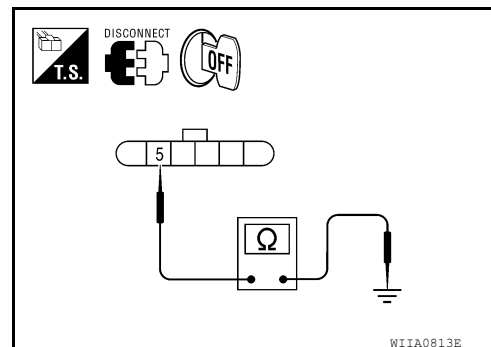

Is the inspection result normal?


YES >> GO TO 3

NO >> Repair or replace harness.

3.CHECK DOOR KEY CYLINDER SWITCH

Check continuity between front door lock assembly LH (key cylinder switch) terminals.

Terminals	Condition	Continuity
1 – 5	Key is turned to UNLOCK or neutral.	No
	Key is turned to LOCK.	Yes
5 – 6	Key is turned to LOCK or neutral.	No
	Key is turned to UNLOCK.	Yes

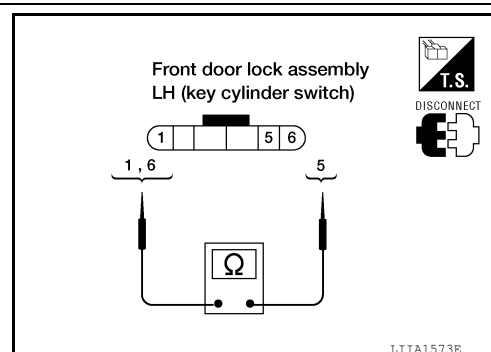

Is the inspection result normal?


YES >> GO TO 4

NO >> Replace front door lock assembly LH (key cylinder switch). Refer to [DLK-237, "Removal and Installation"](#).

4.CHECK DOOR KEY CYLINDER HARNESS

Check continuity between main power window and door lock/unlock switch connector (A) D7 terminals 4, 6 and front door lock assembly LH (key cylinder switch) connector (B) D14 terminals 1, 6 and body ground.

Connector	Terminals	Connector	Terminals	Continuity
A: D7	4	B: D14	1	Yes
	6		6	Yes
	4, 6		Ground	No

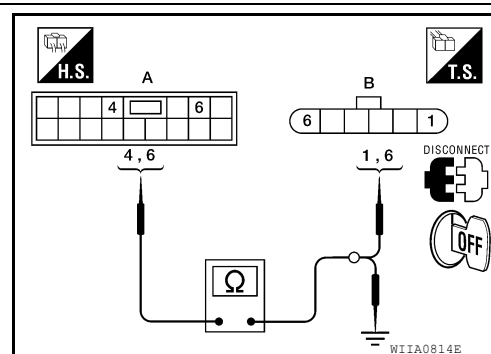

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-94, "Removal and Installation"](#).

NO >> Repair or replace harness.

IGNITION KNOB SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

IGNITION KNOB SWITCH

Diagnosis Procedure

INFOID:0000000011288999

Regarding Wiring Diagram information, refer to [SEC-84, "Wiring Diagram"](#).

1.CHECK IGNITION KNOB SWITCH

With CONSULT

Display "PUSH SW" on DATA MONITOR screen, and check if ON/OFF display is linked to ignition switch operation.

Monitor item	Condition
PUSH SW	Ignition switch is pushed: ON
	Ignition switch is released: OFF

Without CONSULT

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit connector.
3. Check voltage between Intelligent Key unit harness connector M70 terminal 27 and ground.

Connector	Terminals		Condition	Voltage (V) (Approx.)
	(+)	(-)		
M70	27	Ground	Ignition switch is pushed	Battery voltage
			Ignition switch is released	0

Is the inspection result normal?

YES >> Ignition knob switch is OK.

NO >> GO TO 2

2.CHECK IGNITION KNOB SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect key switch and ignition knob switch connector.
3. Check voltage between key switch and ignition knob switch harness connector M12 terminal 1 and ground.

1 - Ground : Battery voltage



Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace key switch and ignition knob switch power supply circuit.

3.CHECK IGNITION KNOB SWITCH OPERATION

Check continuity between key switch and ignition knob switch terminals 1 and 2.

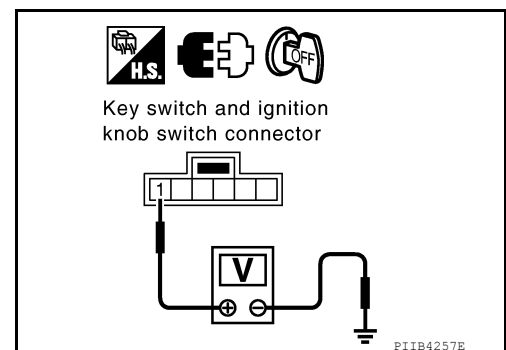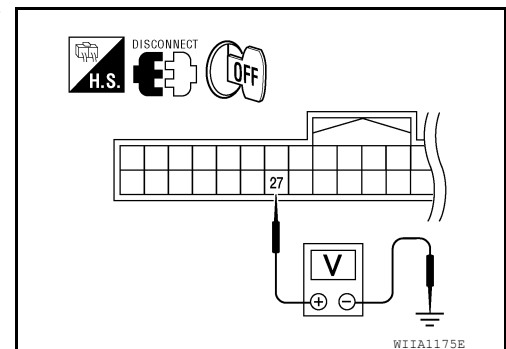

IGNITION KNOB SWITCH


< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Component	Terminals		Condition	Continuity
Ignition knob switch	1	2	Ignition switch is pushed	Yes
			Ignition switch is released	No

Is the inspection result normal?

- YES >> GO TO 4
 NO >> Replace key switch and ignition knob switch.

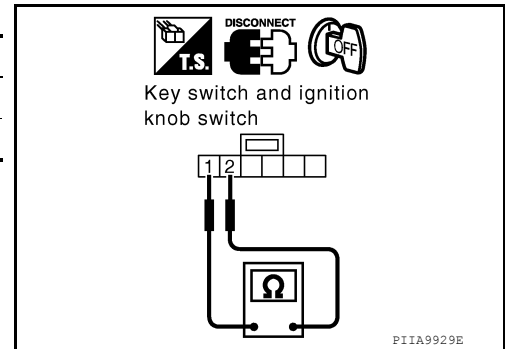

4. CHECK IGNITION KNOB SWITCH CIRCUIT

- Check continuity between Intelligent Key unit harness connector M70 (A) terminal 27 and key switch and ignition knob switch harness connector M12 (B) terminal 2.


27 - 2 : Continuity should exist.

- Check continuity between Intelligent Key unit harness connector M70 (A) terminal 27 and ground.

27 - Ground : Continuity should not exist.

Is the inspection result normal?

- YES >> Check the condition of harness and harness connector.
 NO >> Repair or replace harness between Intelligent Key unit and key switch and ignition knob switch.

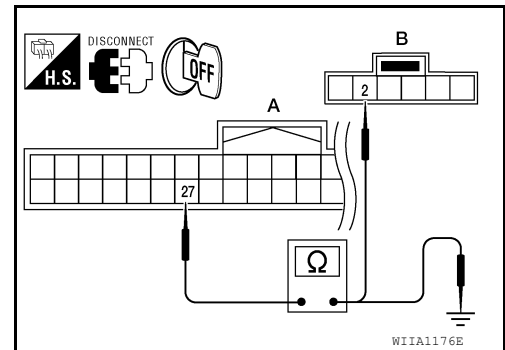

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

HORN FUNCTION

Symptom Table

INFOID:0000000011289000

HAZARD AND HORN REMINDER FUNCTION MALFUNCTION

NOTE:

- Before performing the diagnosis in the following table, check “Work flow”. Refer to [DLK-8, "Work Flow"](#).
- If the following symptoms are detected, check systems shown in the “Diagnosis/service procedure” column in this order.

Conditions of Vehicle (Operating Conditions)

- “ANSWER BACK FUNCTION” is ON when setting on CONSULT.
- Ignition switch is in OFF position.
- All doors are closed.

Symptom	Diagnosis/service procedure	Reference page
Hazard reminder does not operate by request switch. (Horn reminder operate.)	1. Check “HAZARD ANSWER BACK” setting in “WORK SUPPORT”.	DLK-58
	2. Check hazard function.	DLK-115
	3. Check Intermittent Incident.	GI-43
Hazard reminder does not operate by Intelligent Key. (Horn reminder operate.)	1. Check “HAZARD ANSWER BACK” setting in “WORK SUPPORT”.	DLK-58
	2. Check hazard function.	DLK-115
	3. Check Intelligent Key battery inspection.	DLK-109
Horn reminder does not operate by request switch. (Hazard reminder operate.)	1. Check “ANSWER BACK WITH I-KEY LOCK” or “ANSWER BACK WITH I-KEY UNLOCK” setting in “WORK SUPPORT”.	DLK-58
	2. Check Intelligent Key warning buzzer.	DLK-97
	3. Check Intermittent Incident.	GI-43
Horn reminder does not operate by Intelligent Key. (Hazard reminder operate.)	1. Check “HORN WITH KEYLESS LOCK” setting in “WORK SUPPORT”.	DLK-58
	2. Check horn function.	DLK-111
	3. Check Intermittent Incident.	GI-43

VEHICLE SECURITY INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY INDICATOR

Description

INFOID:0000000011289001

- Vehicle security indicator is built in combination meter.
- NATS (Nissan Anti-Theft System) and vehicle security system conditions are indicated by blink or illumination of vehicle security indicator.

Component Function Check

INFOID:0000000011289002

1.CHECK FUNCTION

1. Perform "THEFT IND" in the "Active Test" mode with CONSULT.
2. Check vehicle security indicator operation.

Test item		Description	
THEFT IND	ON	Vehicle security indicator	ON
	OFF		OFF

Is the inspection result normal?

YES >> Inspection End.

NO >> Refer to [SEC-58, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011289003

Regarding Wiring Diagram information, refer to [SEC-84, "Wiring Diagram"](#).

1.CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check voltage between combination meter harness connector and ground.

(+)		(-)	Voltage (V)
Combination meter			
Connector	Terminal		
M24	8	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO-1 >> Check 10 A fuse [No. 19, located in the fuse block (J/B)].

NO-2 >> Check harness for open or short between combination meter and fuse.

2.CHECK SECURITY INDICATOR LAMP SIGNAL

1. Connect combination meter connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V)
BCM			
Connector	Terminal		
M18	23	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 4.

3.REPLACE BCM

VEHICLE SECURITY INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

1. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> Inspection End.

4.CHECK SECURITY INDICATOR LAMP CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector and BCM harness connector.

Combination meter		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M24	28	M18	23	Yes

3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M24	28		No

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).
NO >> Repair or replace harness.

SEC

INTELLIGENT KEY UNIT

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

ECU DIAGNOSIS INFORMATION

INTELLIGENT KEY UNIT

Reference Value

INFOID:0000000011540973

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
PUSH SW	When ignition knob switch (push switch) is released	OFF
	When ignition knob switch (push switch) is pushed	ON
KEY SW	When ignition key is removed from ignition cylinder	OFF
	When ignition key is inserted into ignition cylinder	ON
DR REQ SW	When left door request switch is not pressed (driver side)	OFF
	When left door request switch is pressed (driver side)	ON
AS REQ SW	When right door request switch is not pressed (passenger side)	OFF
	When right door request switch is pressed (passenger side)	ON
IGN SW	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
ACC SW	Ignition switch OFF	OFF
	Ignition switch ACC or ON	ON
STOP LAMP SW	When the brake pedal is not depressed	OFF
	When the brake pedal is depressed	ON
P RANGE SW	When selector lever is in any position other than P or N	OFF
	When selector lever is in P or N position	ON
DOOR LOCK SIG	Other than power door lock switch LOCK	OFF
	Power door lock switch LOCK	ON
DOOR UNLOCK SIG	Other than power door lock switch UNLOCK	OFF
	Power door lock switch UNLOCK	ON
KEYLESS-PANIC	When PANIC button of Intelligent Key is not pressed	OFF
	When PANIC button of Intelligent Key is pressed	ON
KEYLS PBD SIG	When liftgate button of Intelligent Key is not pressed and held	OFF
	When liftgate button of Intelligent Key is pressed and held	ON
DOOR SW-DR	Driver door closed	CLOSE
	Driver door opened	OPEN
DOOR SW-AS	Passenger door closed	CLOSE
	Passenger door opened	OPEN
DOOR SW-RR	Rear door RH closed	CLOSE
	Rear door RH opened	OPEN
DOOR SW-RL	Rear door LH closed	CLOSE
	Rear door LH opened	OPEN
DOOR BK SW	Back door opener switch OFF	CLOSE
	While the back door opener switch is turned ON	OPEN
VEHICLE SPEED	While driving	Equivalent to speedometer reading


INTELLIGENT KEY UNIT

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]



Terminal Layout - Intelligent Key Unit

INFOID:0000000011540974

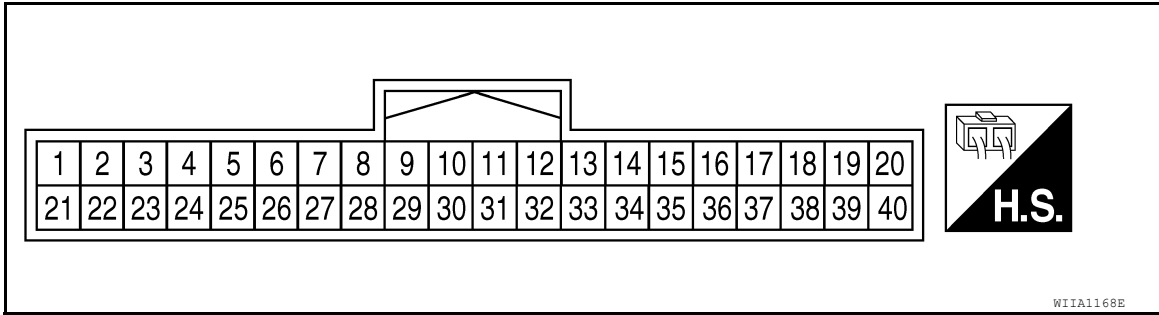

Physical Values - Intelligent Key Unit






INFOID:0000000011540975

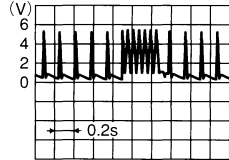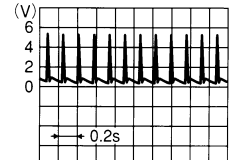Terminal	Wire Color	Item	Condition		Voltage (V) Approx.
			Ignition Switch Position	Operation or Conditions	
1	L/Y	Steering lock solenoid power supply	LOCK	—	5
2	L	CAN-H	—	—	—
3	P	CAN-L	—	—	—
4	GR	Intelligent Key warning buzzer (front of vehicle)	LOCK	Operate door request switch.	Buzzer OFF Battery voltage
				Buzzer ON	0
5	B/W	Front door request switch LH	—	Press front door request switch LH.	0
				Other than above	Battery voltage
6	G/R	Ignition switch (ON)	ON	—	Battery voltage
7	B/R	Key switch	LOCK	Insert mechanical key into ignition key cylinder.	Battery voltage
				Remove mechanical key from ignition key cylinder.	0
8	G	Remote keyless entry receiver ground	—	—	0
9	GR	Remote keyless entry receiver signal	—	When remote keyless entry receiver receives signal from key-fob.	
				Stand-by	
11	Y	Power source (Fuse)	—	—	Battery voltage
12	B	Ground	—	—	0

INTELLIGENT KEY UNIT

< ECU DIAGNOSIS INFORMATION >





[WITH INTELLIGENT KEY SYSTEM]

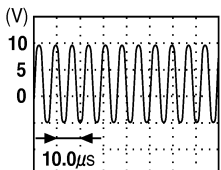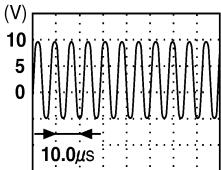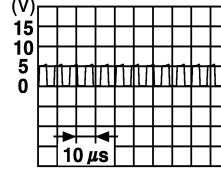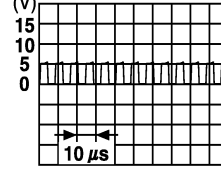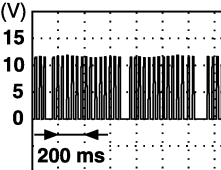Terminal	Wire Color	Item	Condition		Voltage (V) Approx.
			Ignition Switch Position	Operation or Conditions	
13	B/W	Center console area antenna (front) (+) signal	LOCK	Any door open → all doors closed	 PIIB7441E
14	W/G	Center console area antenna (front) (-) signal			
15	G	Center console area antenna (rear) (+) signal	LOCK	Any door open → all doors closed	 PIIB7441E
16	L	Center console area antenna (rear) (-) signal			
17	W/L	Rear bumper antenna (+) signal	LOCK	Lift back door handle (close switch).	 SIIA1910J
18	W/R	Rear bumper antenna (-) signal			
19	P	Front outside antenna LH (+) signal	LOCK	Press front door request switch LH.	 SIIA1910J
20	V	Front outside antenna LH (-) signal			
21	B/W	Remote keyless entry receiver RSSI signal	—	—	 PIIA2344E
23	L/W	Power back door output	—	Power liftgate switch ON.	0
				Power liftgate switch OFF.	Battery voltage
25	P/L	Front door request switch RH	—	Press front door request switch RH.	0
				Other than above	Battery voltage
26	R/G	Stop lamp switch	—	Brake pedal depressed	Battery voltage
				Brake pedal released	0
27	R/B	Ignition knob switch	—	Press ignition switch.	Battery voltage
				Return ignition switch to LOCK position.	0
28	R	Unlock sensor (driver side)	—	Door (driver side) is locked.	5
				Door (driver side) is unlocked.	0

INTELLIGENT KEY UNIT

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

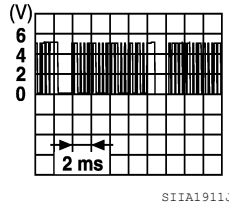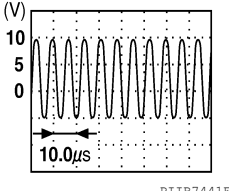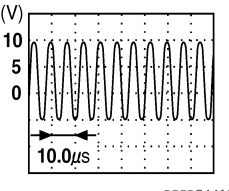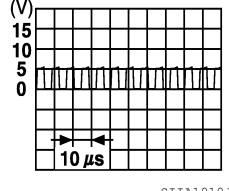Terminal	Wire Color	Item	Condition		Voltage (V) Approx.
			Ignition Switch Position	Operation or Conditions	
29	LG/R	Back door open switch input	—	Back door handle switch ON.	0
				Back door handle switch OFF.	Battery voltage
30	G/B	Remote keyless entry receiver power supply	—	—	5
32	L/O	Steering lock solenoid communication signal	LOCK	When Intelligent Key is inside vehicle, press ignition knob switch.	
				Other than above	5
33	W	Overhead console area antenna (+) signal	LOCK	Press ignition knob switch: ON (Ignition knob switch)	
34	BR	Overhead console area antenna (-) signal			
35	O	Luggage area antenna (+) signal	LOCK	Back door open → all doors closed	
36	R	Luggage area antenna (-) signal			
37	LG	Front outside antenna (+) signal RH	LOCK	Press front door request switch RH.	
38	B/Y	Front outside antenna (-) signal RH			
39	L/R	P range switch	—	Selector lever is in "P" position.	0
				Other than above	Battery voltage
40	V	AS select unlock output	—	UNLOCK with rear door locks disabled.	0
				Other than above	Battery voltage

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC


INTELLIGENT KEY UNIT

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal Layout - Steering Lock Solenoid


INFOID:0000000011540976

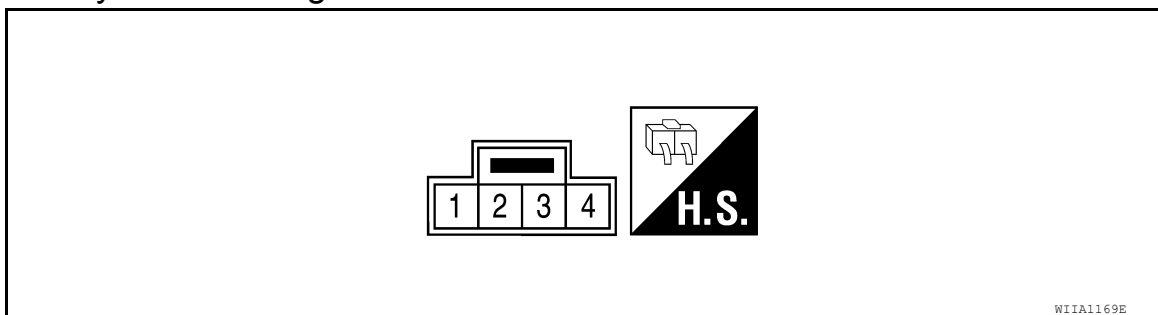

WIIA1169E

Physical Values - Steering Lock Solenoid

INFOID:0000000011540977

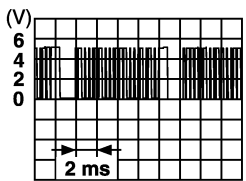Terminal	Wire Color	Signal Designation	Condition		Voltage (V) Approx.
			Ignition Switch Position	Operation or Conditions	
1	Y	Power source (fuse)	LOCK	—	Battery voltage
2	L/Y	Steering lock solenoid power supply	LOCK	—	5
3	L/O	Steering lock solenoid communication signal	LOCK	When Intelligent Key is inside vehicle, press ignition knob switch.	
				Other than the above	5
4	B	Steering lock solenoid ground	—	—	0

SI1A1911J

Fail Safe

INFOID:0000000011540978

Fail-safe operation

The Intelligent Key system operation will be interrupted if the Intelligent Key unit loses power or communication with the BCM.

DTC Inspection Priority Chart

INFOID:0000000011540979

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> U1000: CAN COMM CIRCUIT U1010: CONTROL UNIT (CAN)

INTELLIGENT KEY UNIT

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Priority	DTC
2	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2194: ID DISCORD IMMU-I-KEY
3	<ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2552: INTELLIGENT KEY • B2590: ID DISCORD BCM-I-KEY • P1610: LOCK MODE • P1611: ID DISCORD, IMMU-ECM • P1612: CHAIN OF ECM-IMMU • P1614: CHAIN OF IMMU-KEY • P1615: DIFFERENCE OF KEY

DTC Index

INFOID:0000000011540980

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference page
No DTC is detected. Further testing may be required.	—	—	—	—
U1000: CAN COMM	—	—	—	DLK-61
U1010: CONTROL UNIT(CAN)	—	—	—	DLK-62
B2013: ID DISCORD BCM-S/L	×	×	—	SEC-30
B2190: NATS ANTENNA AMP	×	—	—	SEC-33
B2191: DIFFERENCE OF KEY	×	—	—	SEC-36
B2192: ID DISCORD BCM-ECM	×	—	—	SEC-37
B2193: CHAIN OF BCM-ECM	×	—	—	SEC-39
B2194: ID DISCORD IMMU-I-KEY	×	—	—	SEC-40
B2552: INTELLIGENT KEY	—	×	×	SEC-41
B2590: IID DISCORD BCM-I-KEY	—	×	×	SEC-42
P1610: LOCK MODE	—	×	×	SEC-43
P1611: ID DISCORD, IMMU-ECM	—	×	×	SEC-44
P1612: CHAIN OF ECM-IMMU	—	—	×	SEC-46
P1614: CHAIN OF IMMU-KEY	×	×	×	SEC-47
P1615: DIFFERENCE OF KEY	—	×	×	SEC-50

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000011540983

NOTE:

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Check Intelligent Key relative signal strength
- Confirm vehicle Intelligent Key antenna signal strength
- Test remote keyless entry keyfob relative signal strength

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
ACC ON SW	Ignition switch OFF or ON	Off
	Ignition switch ACC	On
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm ² , psi
AUTO LIGHT SW	Lighting switch OFF	Off
	Lighting switch AUTO	On
BACK DOOR SW	Back door closed	Off
	Back door opened	On
BRAKE SW	Brake pedal released	Off
	Brake pedal applied	On
BUCKLE SW	Seat belt buckle unfastened	Off
	Seat belt buckle fastened	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CARGO LAMP SW	Cargo lamp switch OFF	Off
	Cargo lamp switch ON	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the LOCK side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the UNLOCK side	On
DOOR SW-AS	Front door RH closed	Off
	Front door RH opened	On
DOOR SW-DR	Front door LH closed	Off
	Front door LH opened	On
DOOR SW-RL	Rear door LH closed	Off
	Rear door LH opened	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
DOOR SW-RR	Rear door RH closed	Off
	Rear door RH opened	On
FAN ON SIG	Blower motor fan switch OFF	Off
	Blower motor fan switch ON	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER INT	Front wiper switch OFF	Off
	Front wiper switch INT	On
FR WIPER STOP	Any position other than front wiper stop position	Off
	Front wiper stop position	On
HAZARD SW	When hazard switch is not pressed	Off
	When hazard switch is pressed	On
HEAD LAMP SW1	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HEAD LAMP SW2	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HI BEAM SW	High beam switch OFF	Off
	High beam switch HI	On
ID REGST FL1	ID registration of front left tire incomplete	YET
	ID registration of front left tire complete	DONE
ID REGST FR1	ID registration of front right tire incomplete	YET
	ID registration of front right tire complete	DONE
ID REGST RL1	ID registration of rear left tire incomplete	YET
	ID registration of rear left tire complete	DONE
ID REGST RR1	ID registration of rear right tire incomplete	YET
	ID registration of rear right tire complete	DONE
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
I-KEY LOCK ¹	LOCK button of Intelligent Key is not pressed	Off
	LOCK button of Intelligent Key is pressed	On
I-KEY PANIC ¹	PANIC button of Intelligent Key is not pressed	Off
	PANIC button of Intelligent Key is pressed	On
I-KEY PW DWN ¹	UNLOCK button of Intelligent Key is not pressed	Off
	UNLOCK button of Intelligent Key is pressed for greater than 3 seconds and driver's window operating in DOWN direction	On

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
I-KEY UNLOCK ¹	UNLOCK button of Intelligent Key is not pressed	Off
	UNLOCK button of Intelligent Key is pressed	On
KEY CYL LK-SW	Door key cylinder LOCK position	On
	Door key cylinder other than LOCK position	Off
KEY CYL UN-SW	Door key cylinder UNLOCK position	On
	Door key cylinder other than UNLOCK position	Off
KEY ON SW	Mechanical key is removed from key cylinder	Off
	Mechanical key is inserted to key cylinder	On
KEYLESS LOCK ²	LOCK button of key fob is not pressed	Off
	LOCK button of key fob is pressed	On
KEYLESS PANIC ²	PANIC button of key fob is not pressed	Off
	PANIC button of key fob is pressed	On
KEYLESS UNLOCK ²	UNLOCK button of key fob is not pressed	Off
	UNLOCK button of key fob is pressed	On
LIGHT SW 1ST	Lighting switch OFF	Off
	Lighting switch 1st	On
OIL PRESS SW	<ul style="list-style-type: none"> Ignition switch OFF or ACC Engine running 	Off
	Ignition switch ON	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5V
	Dark outside of the vehicle	Close to 0V
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
PUSH SW ¹	Return to ignition switch to LOCK position	Off
	Press ignition switch	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER INT	Rear wiper switch OFF	Off
	Rear wiper switch INT	On
RR WIPER ON	Rear wiper switch OFF	Off
	Rear wiper switch ON	On
RR WIPER STOP	Rear wiper stop position	Off
	Other than rear wiper stop position	On
RR WIPER STP2	Rear wiper stop position	Off
	Other than rear wiper stop position	On
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
VEHICLE SPEED	While driving	Equivalent to speedometer reading
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off
	Low tire pressure warning lamp in combination meter ON	On

1: With Intelligent Key

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

2: With remote keyless entry system

Terminal Layout

INFOID:0000000011540984

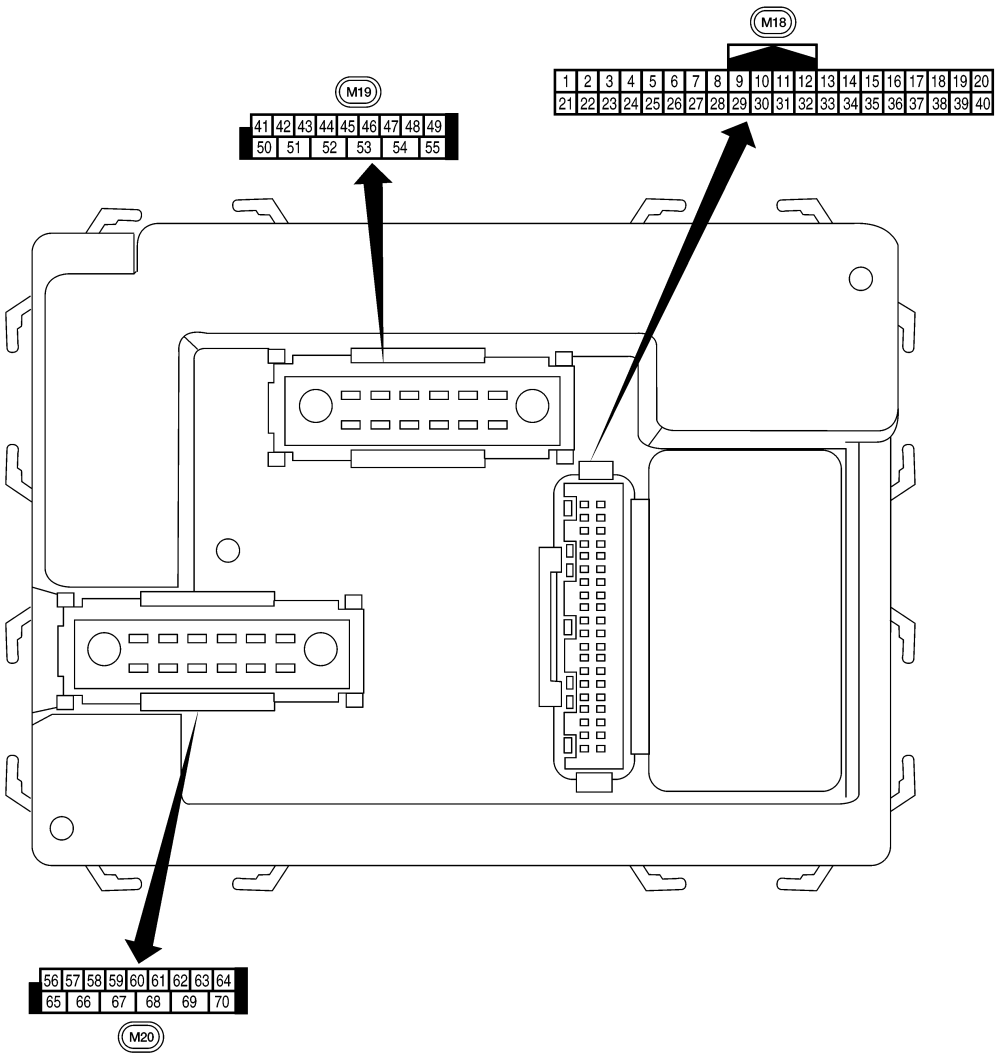

SEC

Physical Values


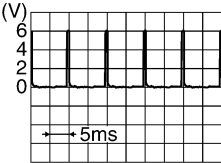

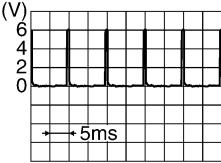
AWMIA15422Z

INFOID:0000000011540985

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR/W	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	SB	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
3	G/Y	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
4	Y	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
5	G/B	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
6	V	Combination switch input 1				
9	R/G	Stop lamp switch	Input	OFF	Brake pedal depressed	Battery voltage
					Brake pedal released	0V
10	G	Hazard lamp flash	Input	OFF	ON (opening or closing)	0V
					OFF (other than above)	Battery voltage
11	O	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	R/L	Front door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
13	GR	Rear door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	L/W	Tire pressure warning check connector	Input	OFF	—	5V
18	P	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[WITH INTELLIGENT KEY SYSTEM]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
19	V/W	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	<p>LI1A1893E</p>
20	G/W	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	<p>LI1A1894E</p>
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	<p>LI1A1895E</p>
21	G	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	G	BUS	—	—	Ignition switch ON or power window timer operates	<p>PI1A2344E</p>
23	G/O	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
26	Y/L	Rear wiper auto stop switch 2	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	0V
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	Battery voltage
					Reverse sweep (clockwise direction)	Fluctuating
27	W/R	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



[WITH INTELLIGENT KEY SYSTEM]

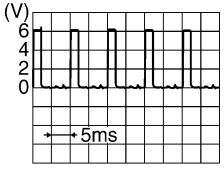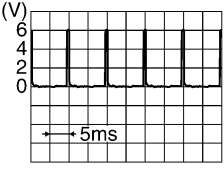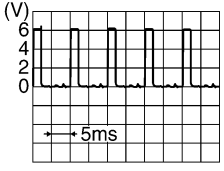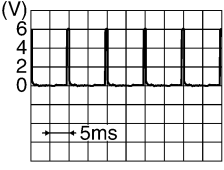Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
28	L/R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	W/B	Hazard switch	Input	OFF	ON	0V
					OFF	5V
32	R/G	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
33	R/Y	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
34	L	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
35	O/B	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1				
37 ¹	B/R	Key switch and ignition knob switch	Input	OFF	Intelligent Key inserted Intelligent Key removed	Battery voltage 0V
37 ²	B/R	Key switch and key lock solenoid	Input	OFF	Key inserted Key removed	Battery voltage 0V
38	W/L	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
41	GR/R	Rear window defogger switch	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
42	GR	Glass hatch ajar switch	Input	ON	Glass hatch open	0
					Glass hatch closed	Battery

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

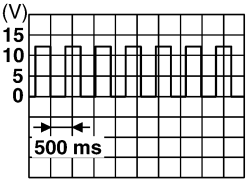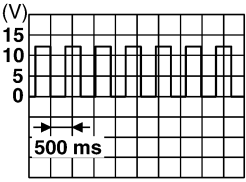Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
43	R/B	Back door switch (without power back door) or back door latch (door ajar switch) (with power back door)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
44	O	Rear wiper auto stop switch 1	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	Battery voltage
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	0V
					Reverse sweep (clockwise direction)	Fluctuating
47	SB	Front door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
48	R/Y	Rear door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
49	R	Cargo lamp	Output	OFF	Any door open (ON)	0V
					All doors closed (OFF)	Battery voltage
51	Y/B	Trailer turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
52	G/B	Trailer turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
54	Y	Rear wiper output circuit 2	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	0V
					Forward sweep (counterclockwise direction)	0V
					B Position (full counterclockwise stop position)	Battery voltage
					Reverse sweep (clockwise direction)	Battery voltage
55	SB	Rear wiper output circuit 1	Output	ON	OFF	0
					ON	Battery voltage

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N


O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

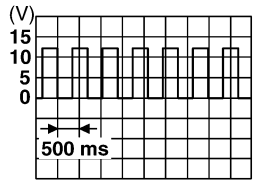Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)	
				Ignition switch	Operation or condition		
56	R/G	Battery saver output	Output	OFF	10 minutes after ignition switch is turned OFF	0V	
				ON	—	Battery voltage	
57	Y/R	Battery power supply	Input	OFF	—	Battery voltage	
58	W/R	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more	
					When optical sensor is not illuminated	0.6V or less	
59	G	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V	
					ON (unlock)	Battery voltage	
60	G/B	Turn signal (left)	Output	ON	Turn left ON	 SKIA3009J	
61	G/Y	Turn signal (right)	Output	ON	Turn right ON	 SKIA3009J	
62	R/W	Foot lamp LH and RH	Output	OFF	ON (any door open)	0V	
					OFF (all doors closed)	Battery voltage	
63	L	Interior room/map lamp	Output	OFF	Any door switch	ON (open)	0V
						OFF (closed)	Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V	
					ON (lock)	Battery voltage	
66	G/Y	Front door lock actuator RH, rear door lock actuators LH/RH and back door lock actuator (unlock)	Output	OFF	OFF (neutral)	0V	
					ON (unlock)	Battery voltage	
67	B	Ground	Input	ON	—	0V	
68	W/L	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage	
					Within 45 seconds after ignition switch OFF	Battery voltage	
					More than 45 seconds after ignition switch OFF	0V	
					When front door LH or RH is open or power window timer operates	0V	
69	W/R	Power window power supply	Output	—	—	Battery voltage	
70	W/B	Battery power supply	Input	OFF	—	Battery voltage	

1: With Intelligent Key system

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

2: With remote keyless entry system

Fail Safe

INFOID:0000000011540986

Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

DTC Inspection Priority Chart

INFOID:0000000011540987

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none">U1000: CAN COMM CIRCUIT
2	<ul style="list-style-type: none">B2190: NATS ANTENNA AMPB2191: DIFFERENCE OF KEYB2192: ID DISCORD BCM-ECMB2193: CHAIN OF BCM-ECMB2013: STRG COMM 1B2552: INTELLIGENT KEYB2590: NATS MALFUNCTION
3	<ul style="list-style-type: none">C1729: VHCL SPEED SIG ERRC1735: IGNITION SIGNAL
4	<ul style="list-style-type: none">C1708: [NO DATA] FLC1709: [NO DATA] FRC1710: [NO DATA] RRC1711: [NO DATA] RLC1712: [CHECKSUM ERR] FLC1713: [CHECKSUM ERR] FRC1714: [CHECKSUM ERR] RRC1715: [CHECKSUM ERR] RLC1716: [PRESSDATA ERR] FLC1717: [PRESSDATA ERR] FRC1718: [PRESSDATA ERR] RRC1719: [PRESSDATA ERR] RLC1720: [CODE ERR] FLC1721: [CODE ERR] FRC1722: [CODE ERR] RRC1723: [CODE ERR] RLC1724: [BATT VOLT LOW] FLC1725: [BATT VOLT LOW] FRC1726: [BATT VOLT LOW] RRC1727: [BATT VOLT LOW] RL

SEC

DTC Index

INFOID:0000000011540988

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	BCS-29
B2013: STRG COMM 1	—	—	—	SEC-30
B2190: NATS ANTENNA AMP	—	—	—	SEC-33 (with I- Key), SEC-143 (without I-Key)
B2191: DIFFERENCE OF KEY	—	—	—	SEC-36 (with I- Key), SEC-146 (without I-Key)
B2192: ID DISCORD BCM-ECM	—	—	—	SEC-37 (with I- Key), SEC-147 (without I-Key)
B2193: CHAIN OF BCM-ECM	—	—	—	SEC-39 (with I- Key), SEC-149 (without I-Key)
B2552: INTELLIGENT KEY	—	—	—	SEC-41
B2590: NATS MALFUNCTION	—	—	—	SEC-42
C1708: [NO DATA] FL	—	—	—	WT-15
C1709: [NO DATA] FR	—	—	—	WT-17
C1710: [NO DATA] RR	—	—	—	WT-17
C1711: [NO DATA] RL	—	—	—	WT-17
C1712: [CHECKSUM ERR] FL	—	—	—	WT-17
C1713: [CHECKSUM ERR] FR	—	—	—	WT-17
C1714: [CHECKSUM ERR] RR	—	—	—	WT-17
C1715: [CHECKSUM ERR] RL	—	—	—	WT-17
C1716: [PRESSDATA ERR] FL	—	—	—	WT-19
C1717: [PRESSDATA ERR] FR	—	—	—	WT-17
C1718: [PRESSDATA ERR] RR	—	—	—	WT-17
C1719: [PRESSDATA ERR] RL	—	—	—	WT-17
C1720: [CODE ERR] FL	—	—	—	WT-17
C1721: [CODE ERR] FR	—	—	—	WT-17
C1722: [CODE ERR] RR	—	—	—	WT-17
C1723: [CODE ERR] RL	—	—	—	WT-17
C1724: [BATT VOLT LOW] FL	—	—	—	WT-17
C1725: [BATT VOLT LOW] FR	—	—	—	WT-17
C1726: [BATT VOLT LOW] RR	—	—	—	WT-17
C1727: [BATT VOLT LOW] RL	—	—	—	WT-17
C1729: VHCL SPEED SIG ERR	—	—	—	WT-21
C1735: IGN_CIRCUIT_OPEN	—	—	—	WT-22

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
 < ECU DIAGNOSIS INFORMATION > **[WITH INTELLIGENT KEY SYSTEM]**

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000011540991

VALUES ON THE DIAGNOSIS TOOL


Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1, 2, 3, 4
AC COMP REQ	A/C switch OFF		Off
	A/C switch ON		On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		<ul style="list-style-type: none"> Front fog lamp switch ON Daytime light activated (Canada only) 	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
ST RLY REQ	Ignition switch OFF or ACC		Off
	Ignition switch START		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
RR DEF REQ	Rear defogger switch OFF		Off
	Rear defogger switch ON		On
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
DTRL REQ	Not operated		Off
	Daytime Running Lights ON		On
THFT HRN REQ	Not operated		Off
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) < ECU DIAGNOSIS INFORMATION > [WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
HORN CHIRP	Not operated	Off
	Door locking with keyfob or Intelligent Key (if equipped) (horn chirp mode)	On

Terminal Layout

INFOID:000000011540992

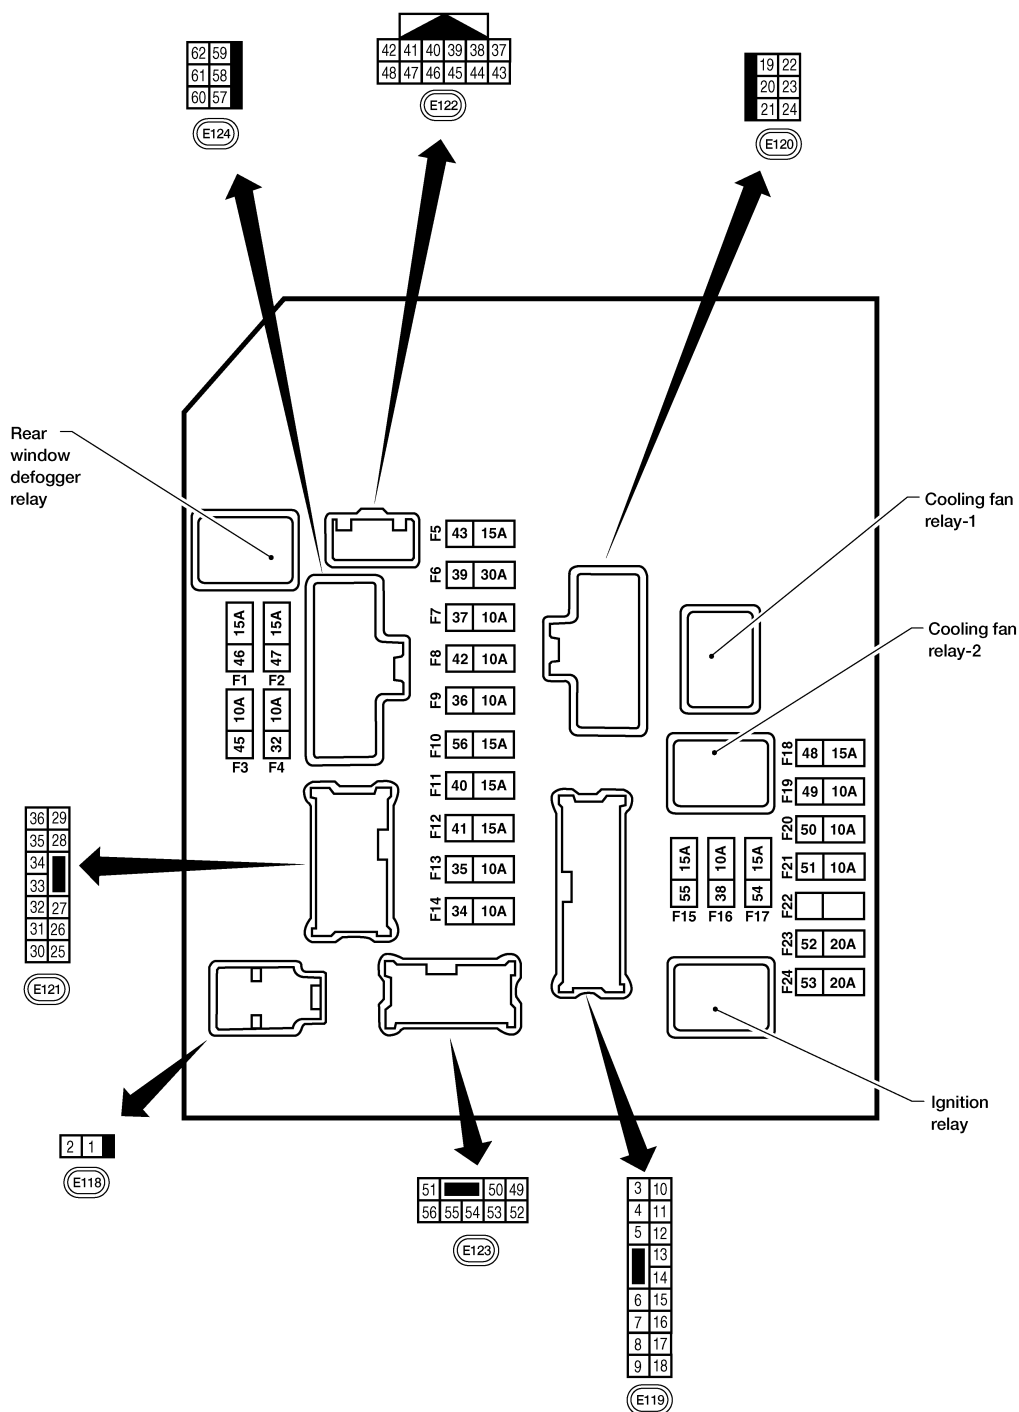

NOTE:

Numbers preceded by an "F" represent the fuse numbers imprinted on the IPDM E/R. The other numbers represent the fuse numbers as they appear in the wiring diagrams.

AWMIA1631GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]




Physical Values

INFOID:0000000011540993

PHYSICAL VALUES

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
1	B/Y	Battery power supply	Input	OFF	—	Battery voltage
2	R	Battery power supply	Input	OFF	—	Battery voltage
3	BR	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
4	W/L	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
6	L	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
7	W/B	ECM relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
8	R/B	Fuse 54	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
10	G	Fuse 45 (Canada only)	Output	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
11	Y/B	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage
					A/C switch OFF or defrost A/C switch	0V
12	L/W	Ignition switch supplied power	Input	—	OFF or ACC	0V
					ON or START	Battery voltage
13	B/Y	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
14	Y/R	Fuse 49	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	LG/B	Fuse 50	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
16	G	Fuse 51	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
17	W	Fuse 55	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
19	W/R	Starter motor	Output	START	—	Battery voltage
21	BR	Ignition switch supplied power	Input	—	OFF or ACC	0V
					START	Battery voltage
22	G	Battery power supply	Output	OFF	—	Battery voltage
23	GR/W	Door mirror defogger output signal	Output	—	When rear defogger switch is ON	Battery voltage
					When rear defogger switch is OFF	0V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
< ECU DIAGNOSIS INFORMATION > [WITH INTELLIGENT KEY SYSTEM]

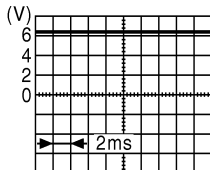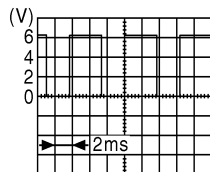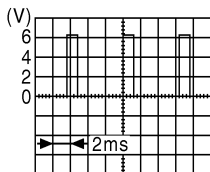Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)	
				Ignition switch	Operation or condition		
24	L	Cooling fan relay	Output	—	Conditions correct for cooling fan operation	Battery voltage	
					Conditions not correct for cooling fan operation	0V	
27	W/B	Fuse 38	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
30	W	Fuse 53	Output	—	Ignition switch ON or START	Battery voltage	
					Ignition switch OFF or ACC	0V	
32	L	Wiper low speed signal	Output	ON or START	Wiper switch	OFF	0V
						LO or INT	Battery voltage
35	L/B	Wiper high speed signal	Output	ON or START	Wiper switch	OFF, LO, INT	0V
						HI	Battery voltage
37	Y	Power generation command signal	Output	—	Ignition switch ON		 JPMIA0001GB 6.3 V
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"		 JPMIA0002GB 3.8 V
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"		 JPMIA0003GB 1.4 V
38	B	Ground	Input	—	—		0V
39	L	CAN-H	—	ON	—		—
40	P	CAN-L	—	ON	—		—
42	GR	Oil pressure switch	Input	—	Engine running		Battery voltage
					Engine stopped		0V
43	L/Y	Wiper auto stop signal	Input	ON or START	Wiper switch	OFF, LO, INT	Battery voltage
44	BR	Daytime light relay control (Canada only)	Input	ON	Daytime light system active		0V
					Daytime light system inactive		Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
< ECU DIAGNOSIS INFORMATION > [WITH INTELLIGENT KEY SYSTEM]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
45	G/W	Horn relay control	Input	ON	When door locks are operated using keyfob or Intelligent Key (if equipped) (OFF → ON)*	Battery voltage → 0V
46	GR	Fuel pump relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
47	O	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
48	B/R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V
					Selector lever any other position	Battery voltage
49	R/L	Trailer tow relay illumination	Output	ON	Lighting switch must be in the 1st position	OFF 0V
					ON	Battery voltage
50	W/R	Front fog lamp (LH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF 0V
					ON	Battery voltage
51	W/R	Front fog lamp (RH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF 0V
					ON	Battery voltage
52	L	LH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
54	R/Y	RH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
56	Y (With DTRL)	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
56	L/W (Without DTRL)	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
57	R/L	Parking, license, and tail lamp	Output	ON	Lighting switch 1st position	OFF 0V
					ON	Battery voltage
59	B	Ground	Input	—	—	0V
60	B	Rear window defogger relay	Output	ON or START	Rear defogger switch ON	Battery voltage
					Rear defogger switch OFF	0V
61	BR	Fuse 32	Output	OFF	—	Battery voltage

*: When horn reminder is ON

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Fail Safe

INFOID:000000011540994

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none">• Turns ON the cooling fan relay when the ignition switch is turned ON• Turns OFF the cooling fan relay when the ignition switch is turned OFF

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none">• Turns ON the headlamp low relay when the ignition switch is turned ON• Turns OFF the headlamp low relay when the ignition switch is turned OFF• Headlamp high relay OFF
<ul style="list-style-type: none">• Parking lamps• License plate lamps• Tail lamps	<ul style="list-style-type: none">• Turns ON the tail lamp relay when the ignition switch is turned ON• Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none">• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Rear window defogger	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “DATA MONITOR” that displays “Block” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000011540995

CONSULT display	Fail-safe	TIME ^{NOTE}		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	PCS-16

NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ··· 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

WIRING DIAGRAM

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

Wiring Diagram

INFOID:000000011289023

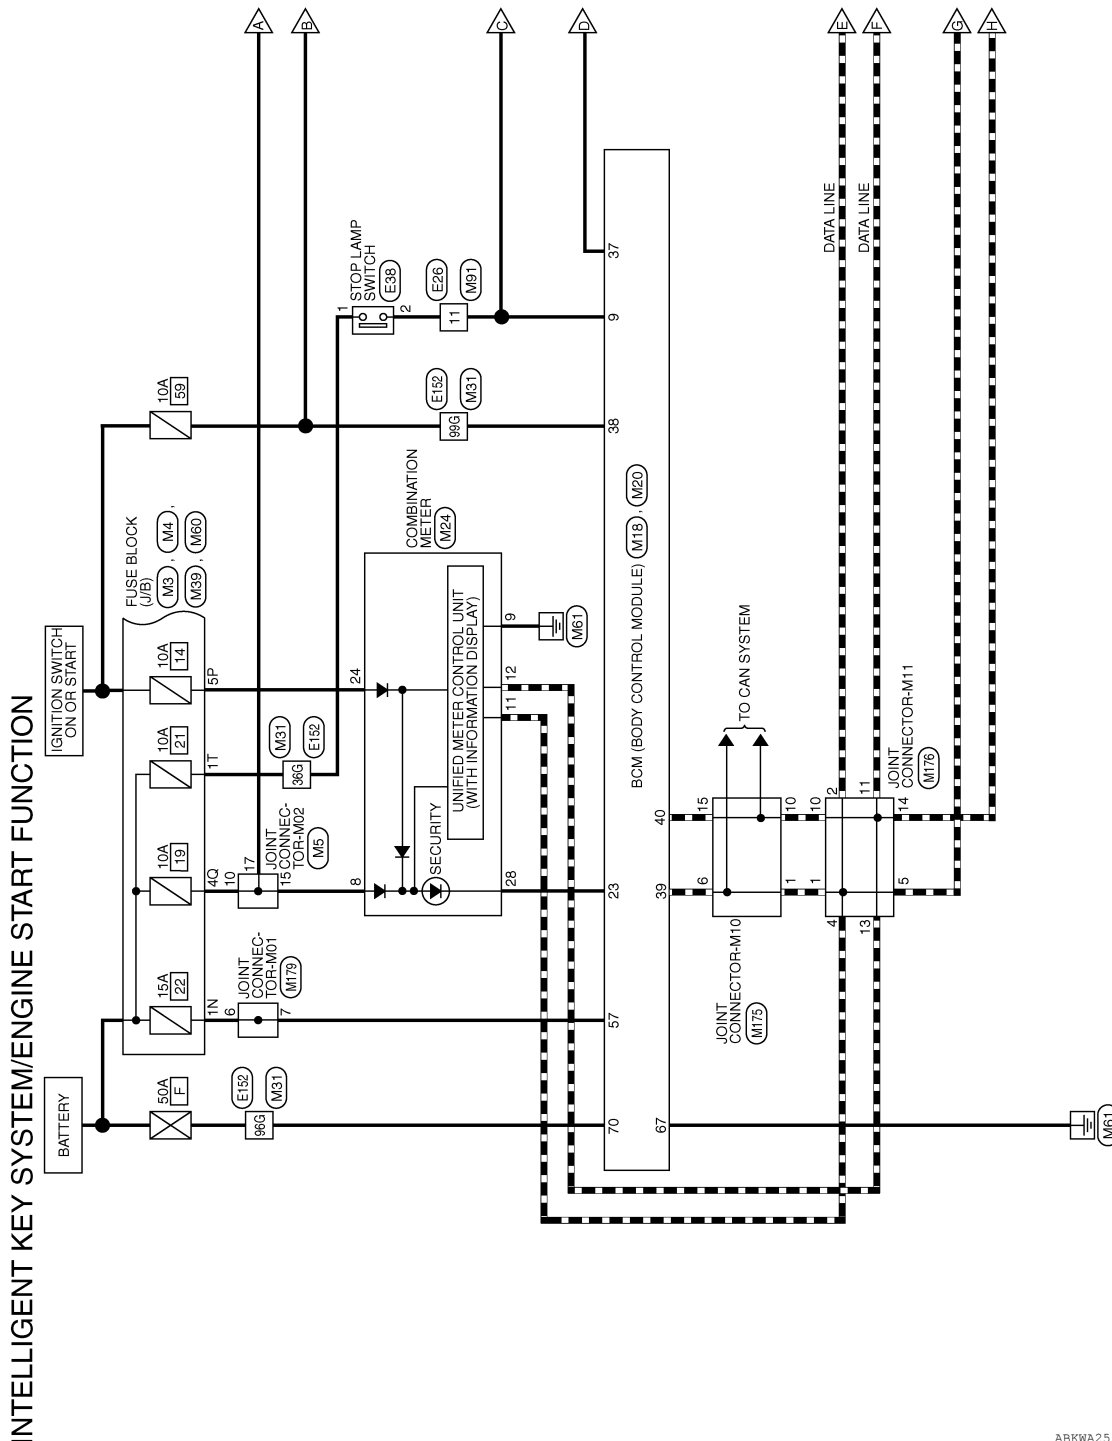


ABKWA2535GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

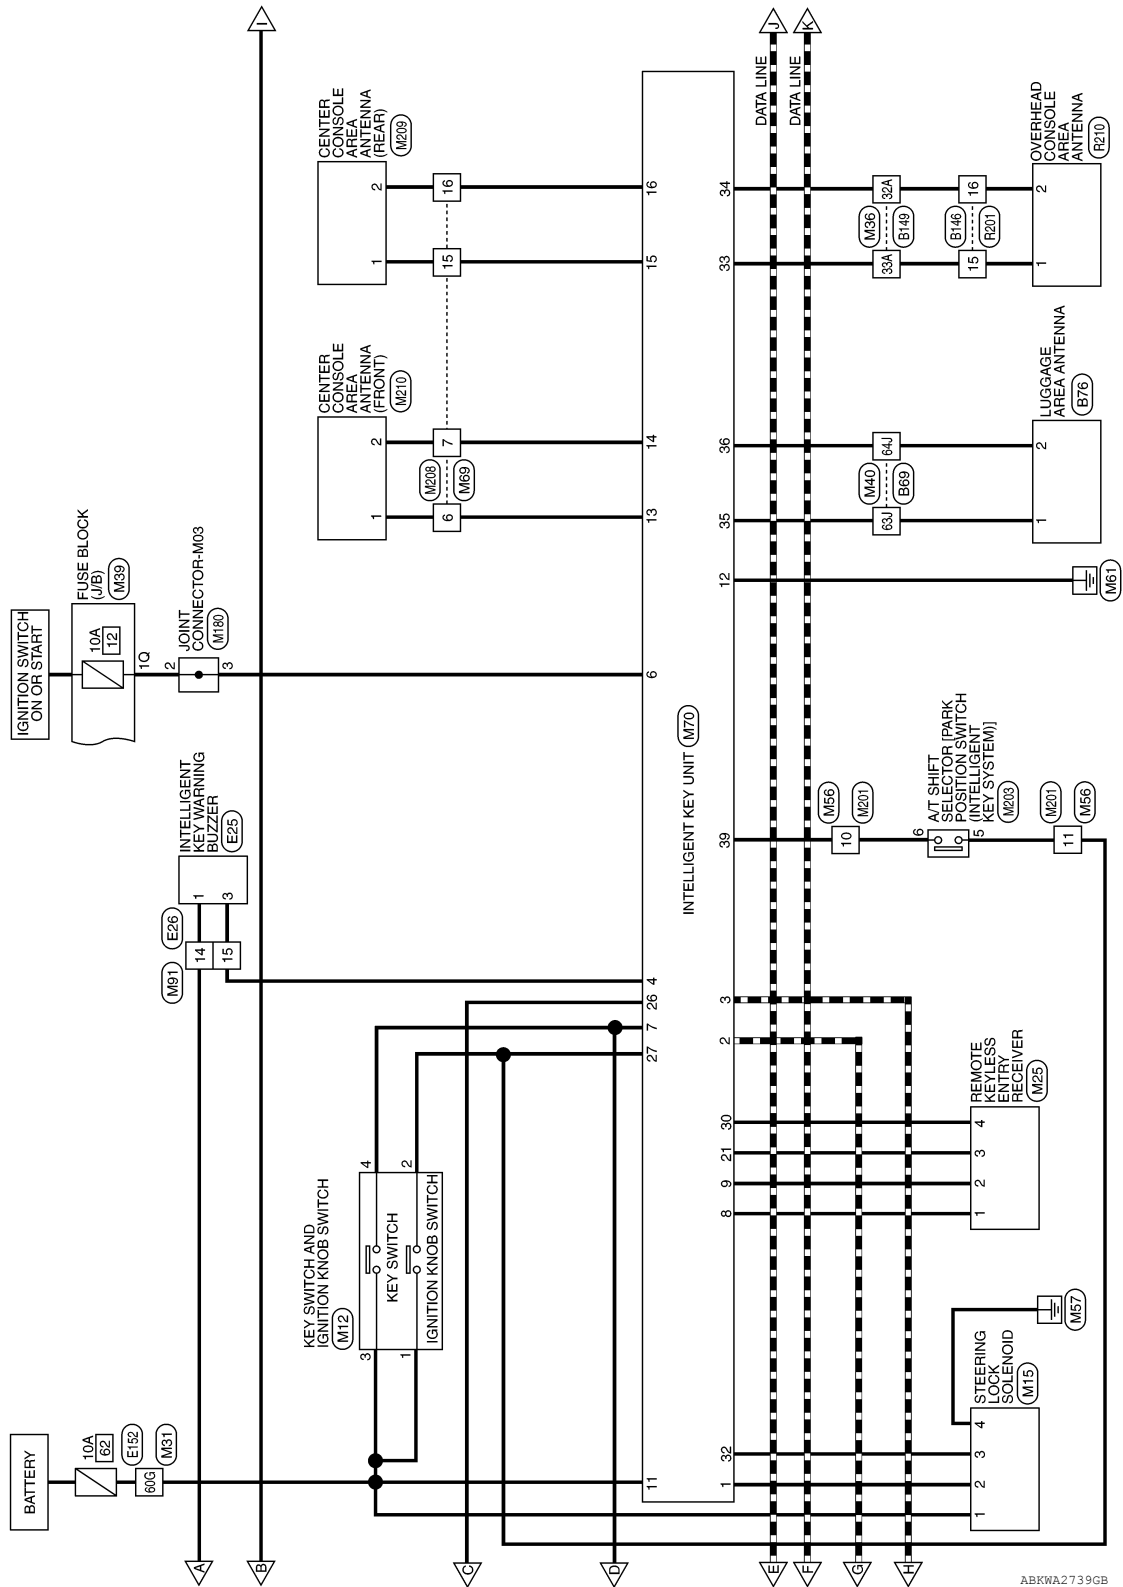

ABKWA2739GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

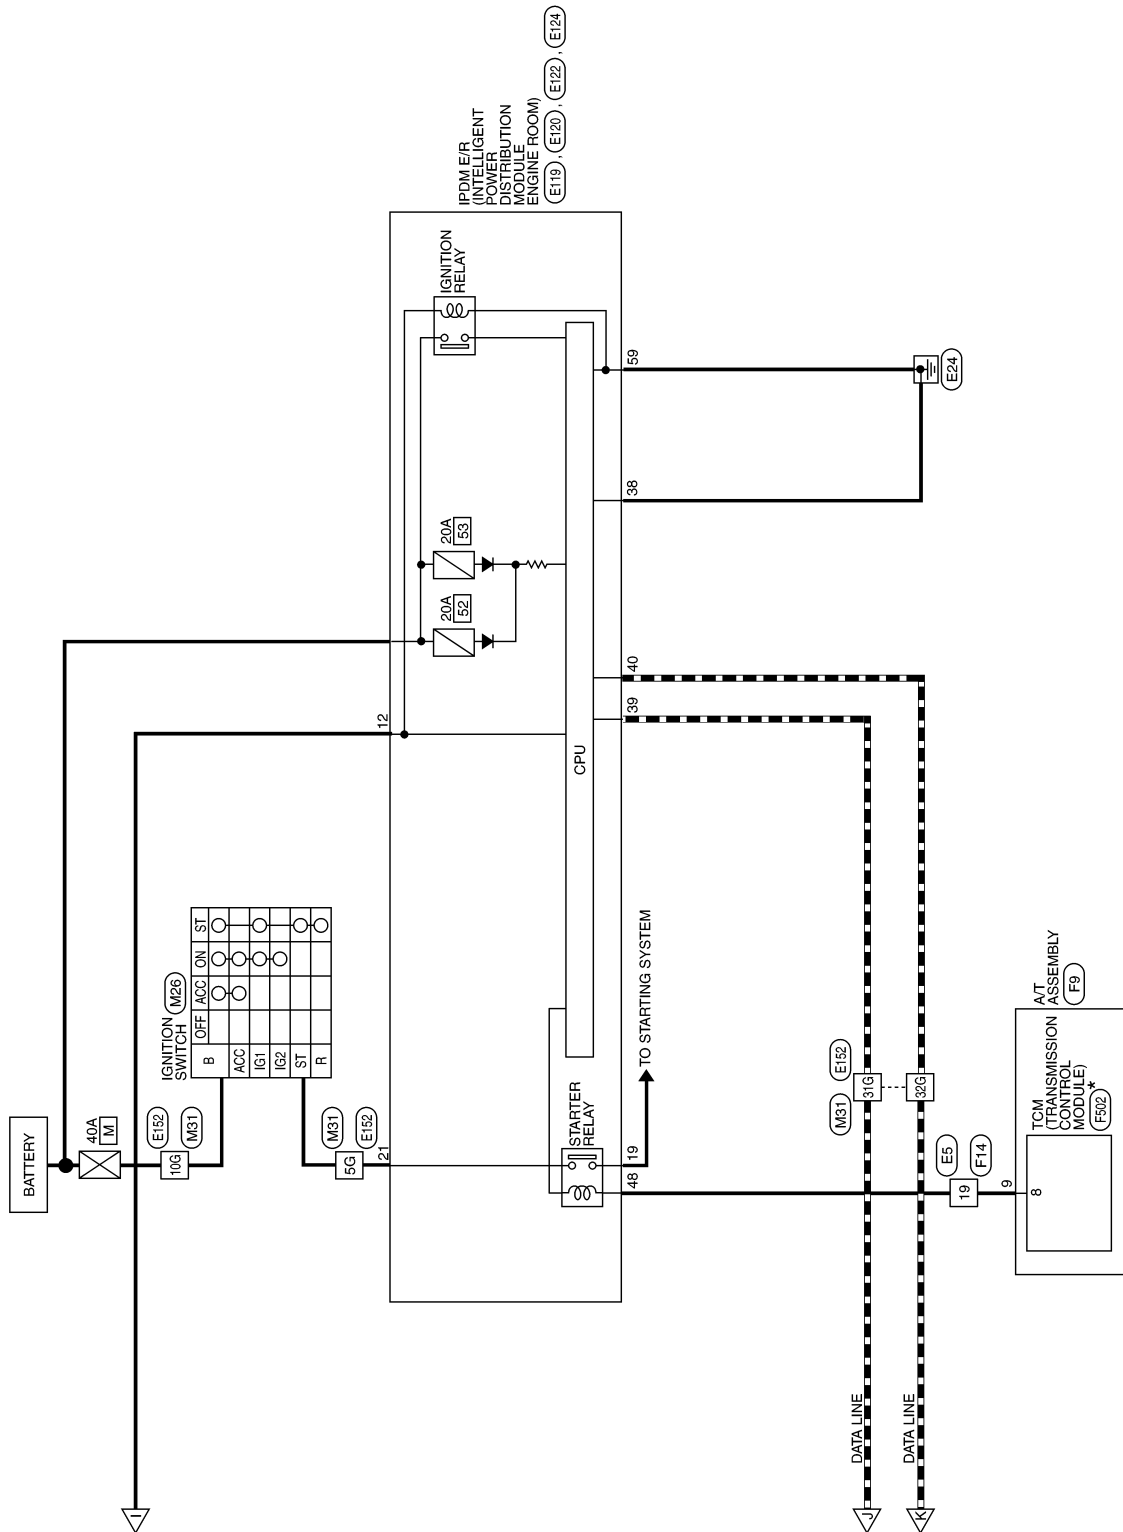


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
1N	Y/R	-

Terminal No.	Color of Wire	Signal Name
5P	O/L	-

Connector No.	M5
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
10	Y/R	-
15	Y/R	-
17	Y/R	-

Connector No.	M12
Connector Name	KEY SWITCH AND IGNITION KNOB SWITCH
Connector Color	GRAY



Connector No.	M15
Connector Name	STEERING LOCK SOLENOID
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	R/B	-
3	Y	-
4	B/R	-

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L/Y	-
3	L/O	-
4	B	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
9	R/G	BRAKE SW
23	G/O	SECURITY INDICATOR OUTPUT
37	B/R	KEY SW
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

55	56	57	58	59	60	61	62	63	64
65	66	67	68	69	70				



Terminal No.	Color of Wire	Signal Name
57	Y/R	BAT (FUSE)
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21



Terminal No.	Color of Wire	Signal Name
8	Y/R	BATTERY
9	B	GND
11	L	CAN-H
12	P	CAN-L
24	O/L	RUN/START
28	G/O	SECURITY

Connector No.	M25
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Color	BLACK

1	2	3	4
---	---	---	---



Terminal No.	Color of Wire	Signal Name
1	G	-
2	GR	-
3	B/W	-
4	G/B	-


Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE

B	ST	IG
R	ACC	LOCK



Terminal No.	Color of Wire	Signal Name
B	G	-
ST	BR	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

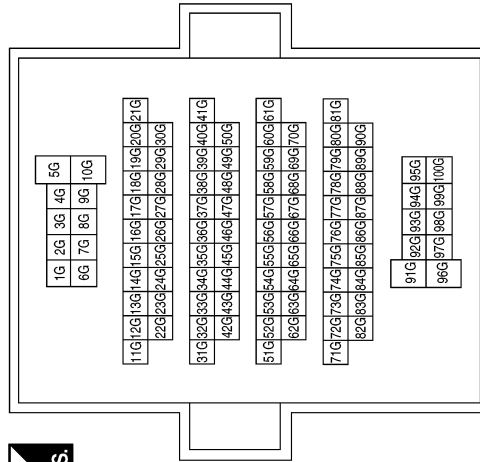


ABKIA5782GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

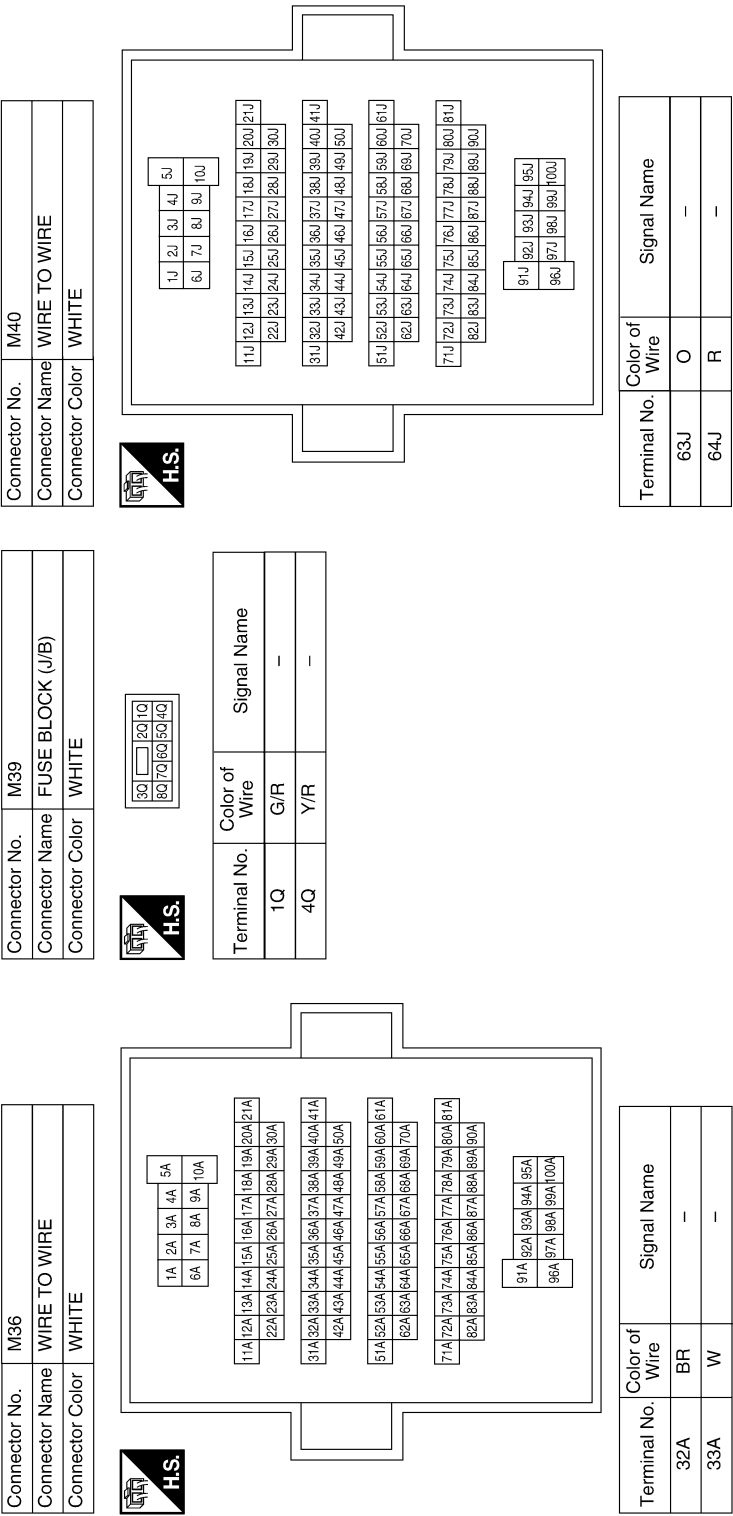

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M56
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	<div></div>	4	5	6	7	
8	9	10	11	12	13	14	15	16



Terminal No.	Color of Wire	Signal Name
10	L/R	-
11	R/B	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

2T	<div></div>	1T	
6T	5T	4T	3T



Terminal No.	Color of Wire	Signal Name
1T	R/Y	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	BROWN

9	8	7	6	5	4	3	2	1		
20	19	18	17	16	15	14	13	12	11	10



Terminal No.	Color of Wire	Signal Name
6	B/W	-
7	W/G	-
15	G	-
16	L	-

Connector No.	M70
Connector Name	INTELLIGENT KEY UNIT
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40



Terminal No.	Color of Wire	Signal Name
1	L/Y	STRG C/U 5V OUTPUT
2	L	CAN-H
3	P	CAN-L
4	GR	OUTSIDE BUZZER OUTPUT
6	G/R	IGN SW INPUT
7	B/R	KEY SW INPUT
8	G	RF TUNER GND

Terminal No.	Color of Wire	Signal Name
9	GR	RF TUNER SIG
11	Y	BAT
12	B	GND
13	B/W	ROOM ANT3 (+)
14	W/G	ROOM ANT3 (-)
15	G	ROOM ANT1 (+)
16	L	ROOM ANT1 (-)
21	B/W	RF TUNER RSSI
26	R/G	BRAKE SW
27	R/B	PUSH SW INPUT
30	G/B	RF TUNER 5V OUTPUT
32	L/O	STRG C/U SIG
33	W	ROOM ANT4 (+)
34	BR	ROOM ANT4 (-)
35	O	ROOM ANT2 (+)
36	R	ROOM ANT2 (-)
39	L/R	P RANGE SW INPUT

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

7	6	5	4	3	2	1		
16	15	14	13	12	11	10	9	8



Terminal No.	Color of Wire	Signal Name
11	R/G	-
14	Y/R	-
15	GR	-


ABKIA5814GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M179
Connector Name	JOINT CONNECTOR-M01
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
6	Y/R	-
7	Y/R	-

Connector No.	M176
Connector Name	JOINT CONNECTOR-M11
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
4	L	-
5	L	-
10	P	-
11	P	-
13	P	-
14	P	-

Connector No.	M175
Connector Name	JOINT CONNECTOR-M10
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	L	-
6	L	-
10	P	-
15	P	-

Connector No.	M203
Connector Name	A/T SHIFT SELECTOR (WITH INTELLIGENT KEY SYSTEM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	R/B	-
6	L/R	-

Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	L/R	-
11	R/B	-

Connector No.	M180
Connector Name	JOINT CONNECTOR-M03
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	G/R	-
3	G/R	-

ABKIA5783GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M210
Connector Name	CENTER CONSOLE AREA ANTENNA (FRONT)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	B/W	-
2	W/G	-

Connector No.	M209
Connector Name	CENTER CONSOLE AREA ANTENNA (REAR)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G	-
2	L	-

Connector No.	M208
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
6	B/W	-
7	W/G	-
15	G	-
16	L	-

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	E25
Connector Name	INTELLIGENT KEY WARNING BUZZER
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	Y/R	-
3	GR	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
19	B/R	-


ABKIA5784GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
19	W/R	STARTER MTR
21	BR	IGN SW (ST)

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12	L/W	IGN SW (IG)

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/Y	-
2	R/G	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
48	B/R	RANGE SW

ABKIA5785GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]


Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
9	B/R	—

Terminal No.	Color of Wire	Signal Name
5G	BR	—
10G	G	—
31G	L	—
32G	P	—
36G	R/Y	—
60G	Y	—
96G	W/B	—
99G	LW	—

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

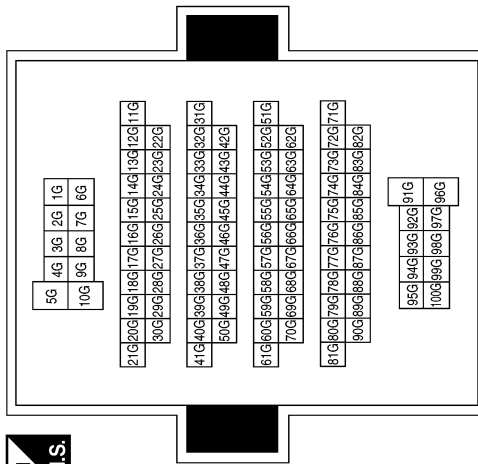


Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
8	G	START-RLY

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
19	B/R	—


ABKIA578 6GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	B146
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
15	W	-
16	BR	-

Connector No.	B76
Connector Name	LUGGAGE AREA ANTENNA
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	O	-
2	R	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

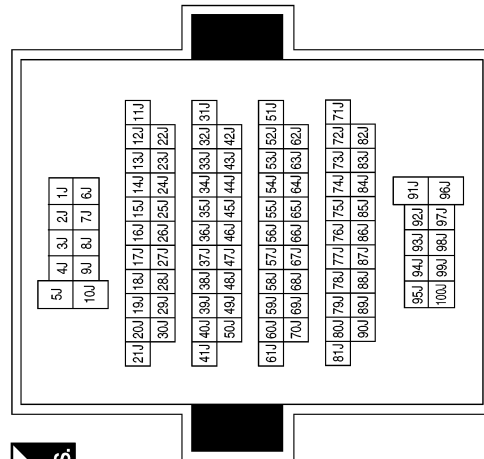

Terminal No.	Color of Wire	Signal Name
63J	O	-
64J	R	-

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	R210
Connector Name	OVERHEAD CONSOLE AREA ANTENNA
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	—
2	BR	—

Connector No.	R201
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
15	W	—
16	BR	—

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

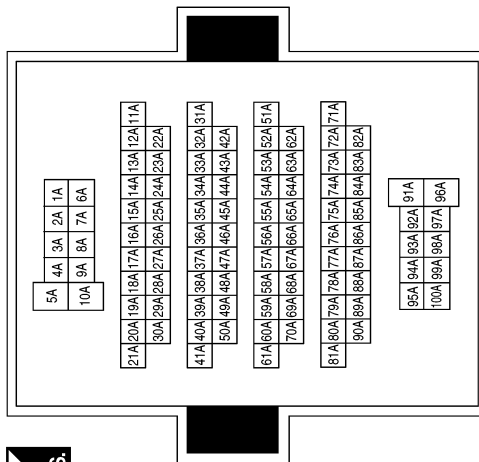

Terminal No.	Color of Wire	Signal Name
32A	BR	—
33A	W	—

ABKIA5815GB

VEHICLE SECURITY SYSTEM


[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

VEHICLE SECURITY SYSTEM

Wiring Diagram

INFOID:000000011289024

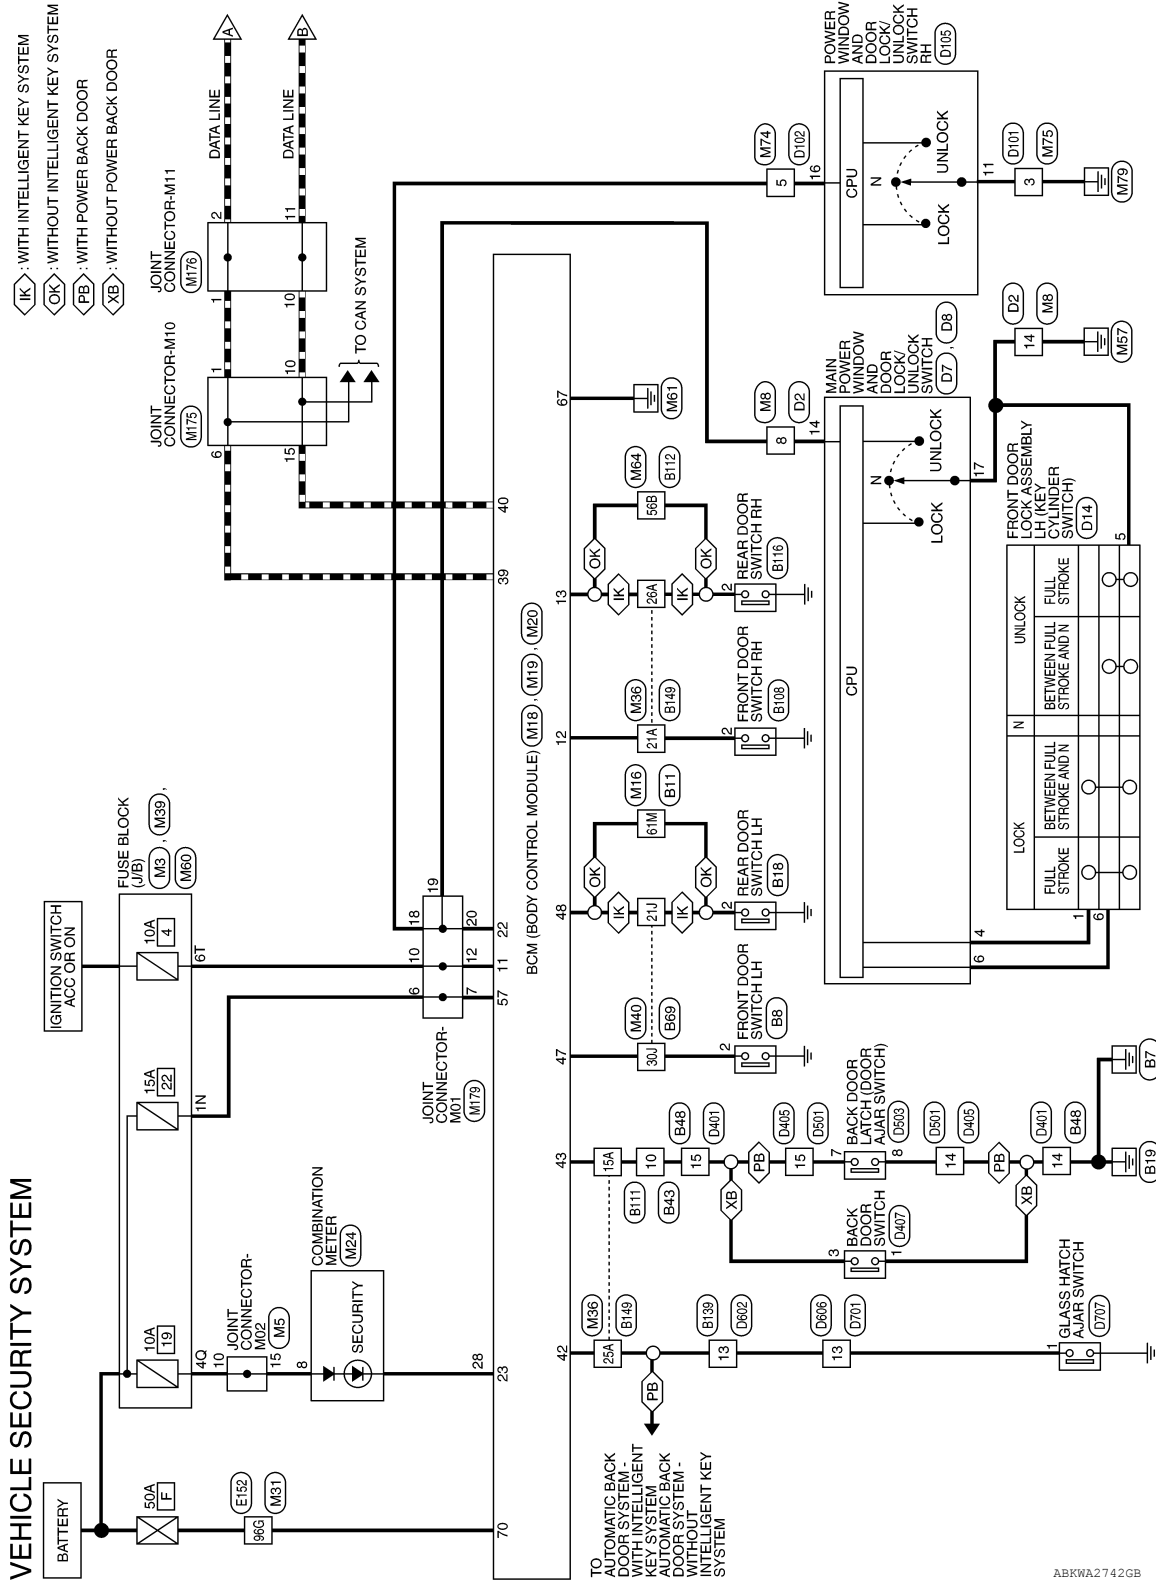


SEC

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

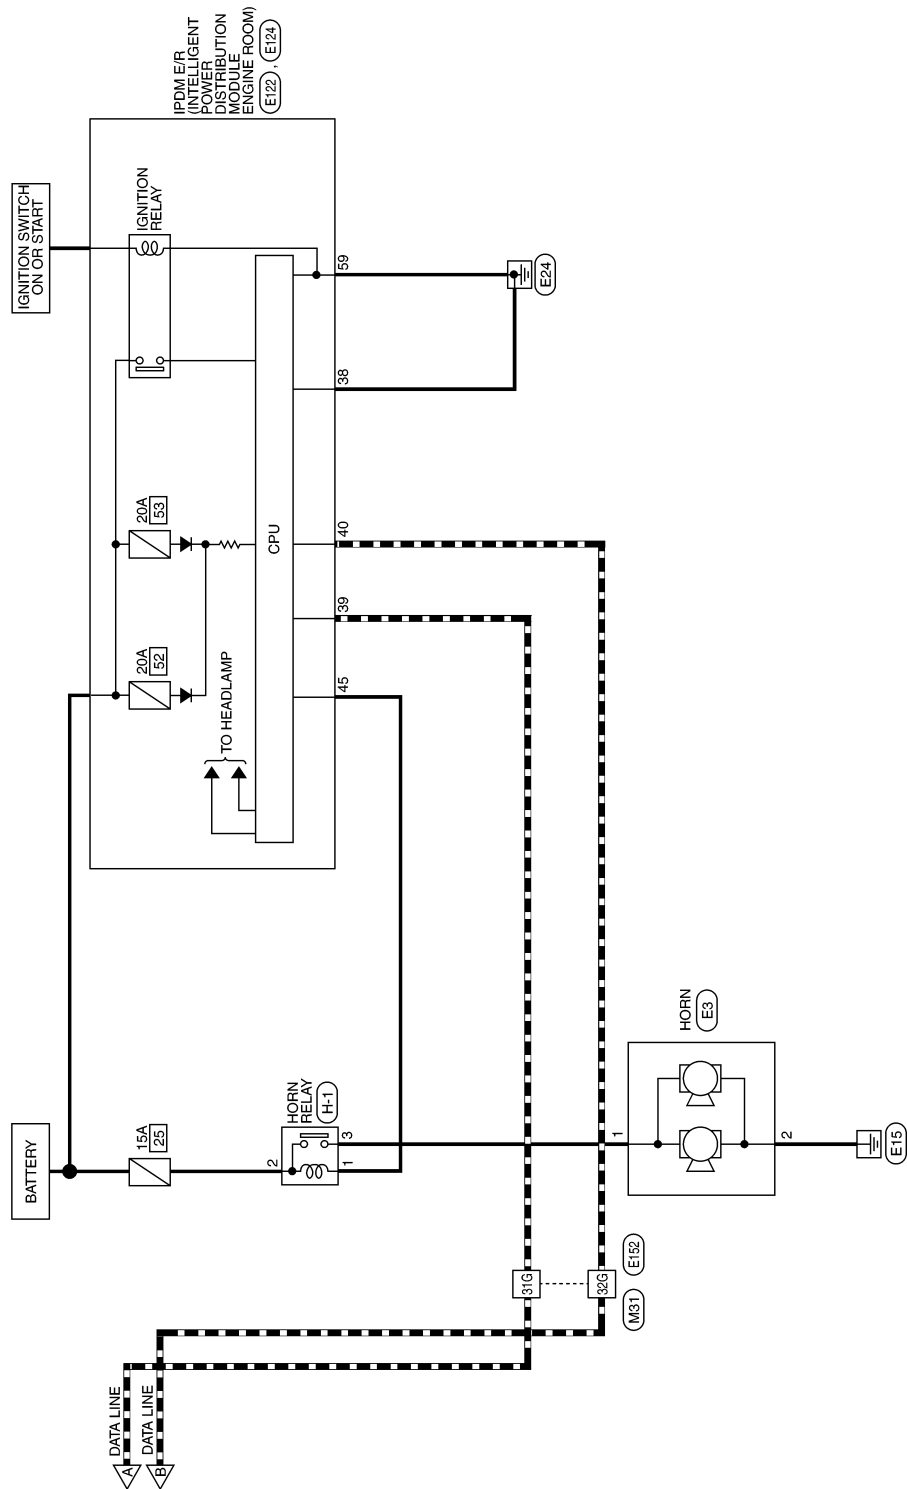

ABKWA254 6GB


VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


VEHICLE SECURITY SYSTEM CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	Y/R	—

Connector No.	M5
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
10	Y/R	—
15	Y/R	—

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
8	G	—
14	B	—

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
61M	R/Y	—

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

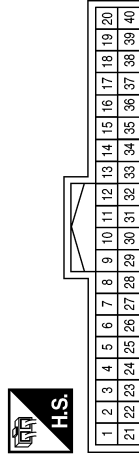

Terminal No.	Color of Wire	Signal Name
11	O	ACC SW
12	R/L	DOOR SW (AS)
13	GR	DOOR SW (RR)
22	G	ANTI-PINCH SERIAL LINK (RX, TX)
23	G/O	SECURITY INDICATOR OUTPUT
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
42	GR	GLASS HATCH SW
43	R/B	BACK DOOR SW
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)


ABKIA5788GB

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

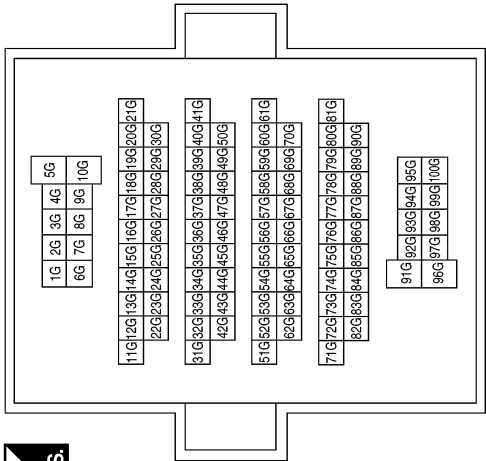

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
96G	W/B	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
8	Y/R	BATTERY
28	G/O	SECURITY

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK






Terminal No.	Color of Wire	Signal Name
57	Y/R	BAT (FUSE)
67	B	GND (POWER)
70	W/B	BAT (F/L)

ABKIA5789GB

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

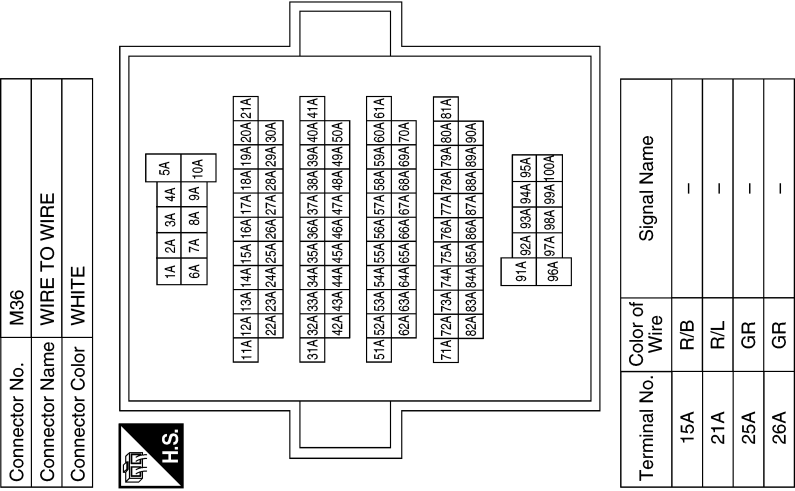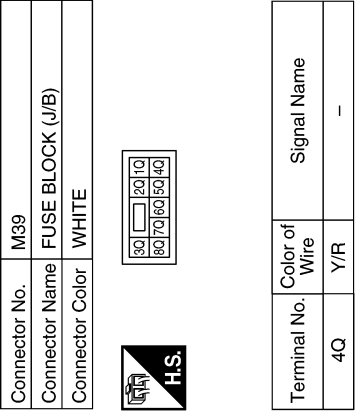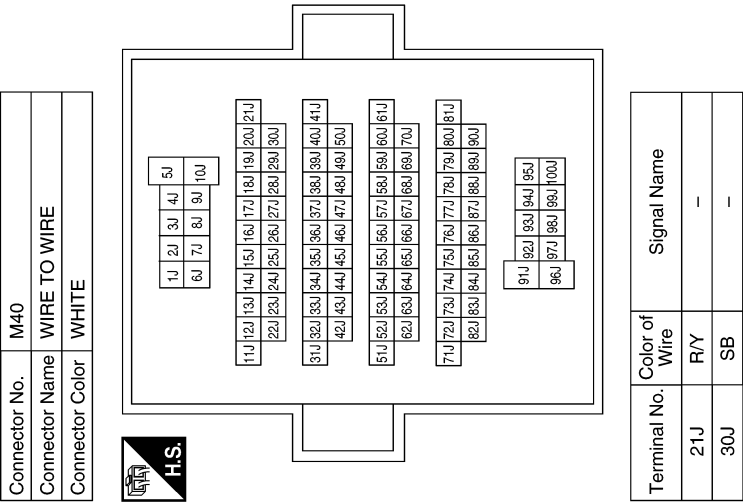

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]



Connector No.	M74
Connector Name	WIRE TO WIRE
Connector Color	BROWN

9	8	7	6	5	4	3	2	1		
20	19	18	17	16	15	14	13	12	11	10



Terminal No.	5
Color of Wire	W/V
Signal Name	—

Connector No.	M64
Connector Name	WIRE TO WIRE
Connector Color	WHITE

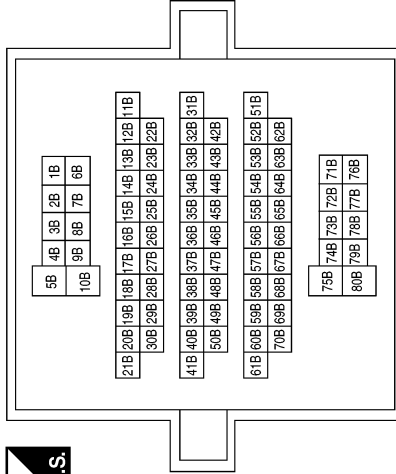

Terminal No.	56B
Color of Wire	GR
Signal Name	—

Connector No.	M176
Connector Name	JOINT CONNECTOR-M11
Connector Color	BLUE

																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																			</
--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----



Terminal No.	1
Color of Wire	L
Signal Name	—
Terminal No.	2
Color of Wire	L
Signal Name	—
Terminal No.	10
Color of Wire	P
Signal Name	—
Terminal No.	11
Color of Wire	P
Signal Name	—

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

2T	<div></div>	1T	
6T	5T	4T	3T



Terminal No.	6T
Color of Wire	O
Signal Name	—

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE

4	3	<div></div>	2	1	
10	9	8	7	6	5



Terminal No.	3
Color of Wire	B
Signal Name	—


ABKIA5791GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	M179
Connector Name	JOINT CONNECTOR-M01
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
6	Y/R	-
7	Y/R	-
10	O	-
12	O	-
18	W/V	-
19	G	-
20	G	-

Connector No.	E3
Connector Name	HORN
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
45	G/W	ANT THEFT HORN

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

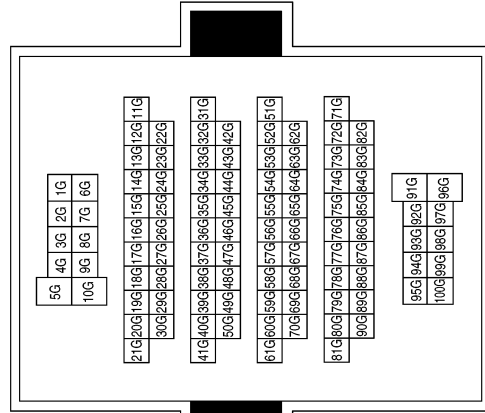

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
96G	W/B	-

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

ABKIA5792GB


VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Terminal No.	Color of Wire	Signal Name
61M	R/Y	—

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Color	WHITE

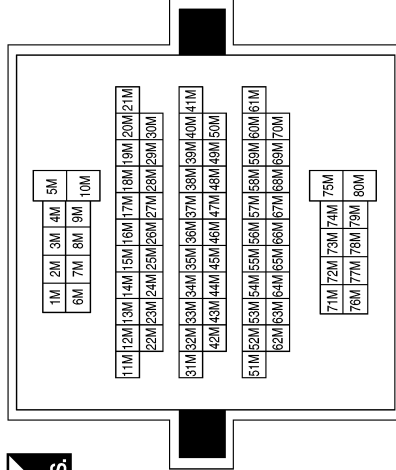


Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	—

Connector No.	B48
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Connector No.	B43
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	B	—
15	R/W	—

Terminal No.	Color of Wire	Signal Name
10	R/W	—

Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/Y	—


ABKIA5793GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/L	-


Terminal No.	Color of Wire	Signal Name
21J	R/Y	-
30J	SB	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

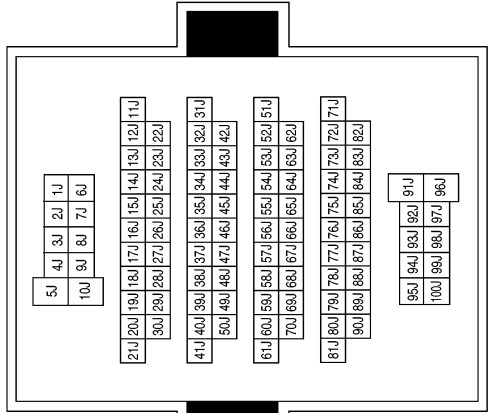


Terminal No.	Color of Wire	Signal Name
56B	GR	-

Connector No.	B112
Connector Name	WIRE TO WIRE
Connector Color	WHITE

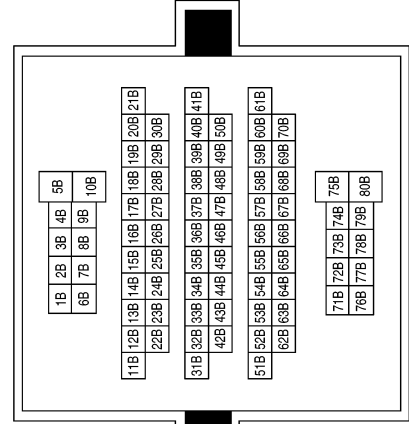

Connector No.	B111
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	R/W	-

ABKIA5794GB

A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



1	2	3
---	---	---

Connector No.	B139
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3			4	5	6	7
8	9	10	11	12	13	14	15	16


Terminal No.	Color of Wire	Signal Name
2	GR	—

Terminal No.	Color of Wire	Signal Name
13	GR	—

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE



5A	4A	3A	2A	1A
10A	9A	8A	7A	6A

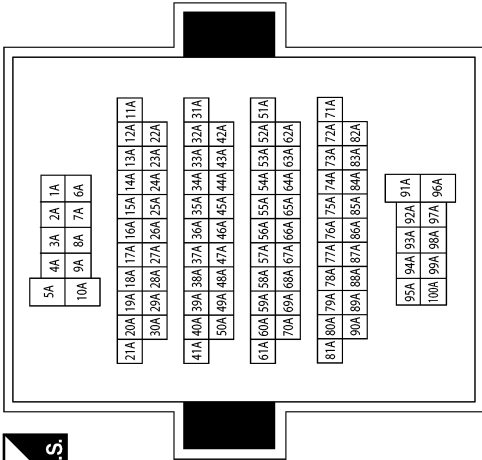

Terminal No.	Color of Wire	Signal Name
15A	R/W	—
21A	R/L	—
25A	GR	—
26A	GR	—

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3					4	5	6	7
8	9	10	11	12			13	14	15	16


Terminal No.	Color of Wire	Signal Name
8	LG/W	—
14	B	—

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	D14
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	—
5	B	—
6	R	—

Connector No.	D8
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
17	B	GND

Connector No.	D7
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	L	KEY CYLINDER LOCK
6	R	KEY CYLINDER UNLOCK
14	LG/W	COMMUNICATION

Connector No.	D105
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
11	B	GND
16	LGW	COMMUNICATION

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
5	LG/W	—

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	B	—

ABKIA5796GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	D407
Connector Name	BACK DOOR SWITCH
Connector Color	WHITE

1	2	3
---	---	---



Terminal No.	Color of Wire	Signal Name
1	B	—
3	R/W	—

Connector No.	D405
Connector Name	WIRE TO WIRE
Connector Color	WHITE

10	9	8	7	6	5	4	3	2	1
18	17	16	15	14	13	12	11		



Terminal No.	Color of Wire	Signal Name
14	B	—
15	R/W	—

Connector No.	D401
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		



Terminal No.	Color of Wire	Signal Name
14	B	—
15	R/W	—

Connector No.	D602
Connector Name	WIRE TO WIRE
Connector Color	WHITE

7	6	5	4	<div></div>		3	2	1
16	15	14	13	12	11	10	9	8



Terminal No.	Color of Wire	Signal Name
13	GR	—

Connector No.	D503
Connector Name	BACK DOOR LATCH
Connector Color	WHITE

1	<div></div>	2	3
4	5	6	7
		8	



Terminal No.	Color of Wire	Signal Name
7	R/W	—
8	B	—

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18		



Terminal No.	Color of Wire	Signal Name
14	B	—
15	R/W	—

ABKIA5797GB

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	D707
Connector Name	GLASS HATCH AJAR SWITCH
Connector Color	BLACK




Terminal No.	1	Color of Wire	GR	Signal Name	-
--------------	---	---------------	----	-------------	---

Connector No.	D701
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	13	Color of Wire	GR	Signal Name	-
--------------	----	---------------	----	-------------	---

Connector No.	D606
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	13	Color of Wire	GR	Signal Name	-
--------------	----	---------------	----	-------------	---

Connector No.	H-1
Connector Name	FUSE AND FUSIBLE LINK BOX (HORN RELAY)
Connector Color	-

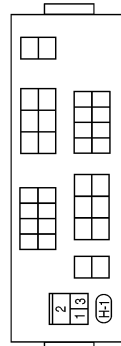

Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	G/B	-
3	G	-

ABKIA5798GB


A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


NVIS

Wiring Diagram - With Intelligent Key System

INFOID:000000011289025

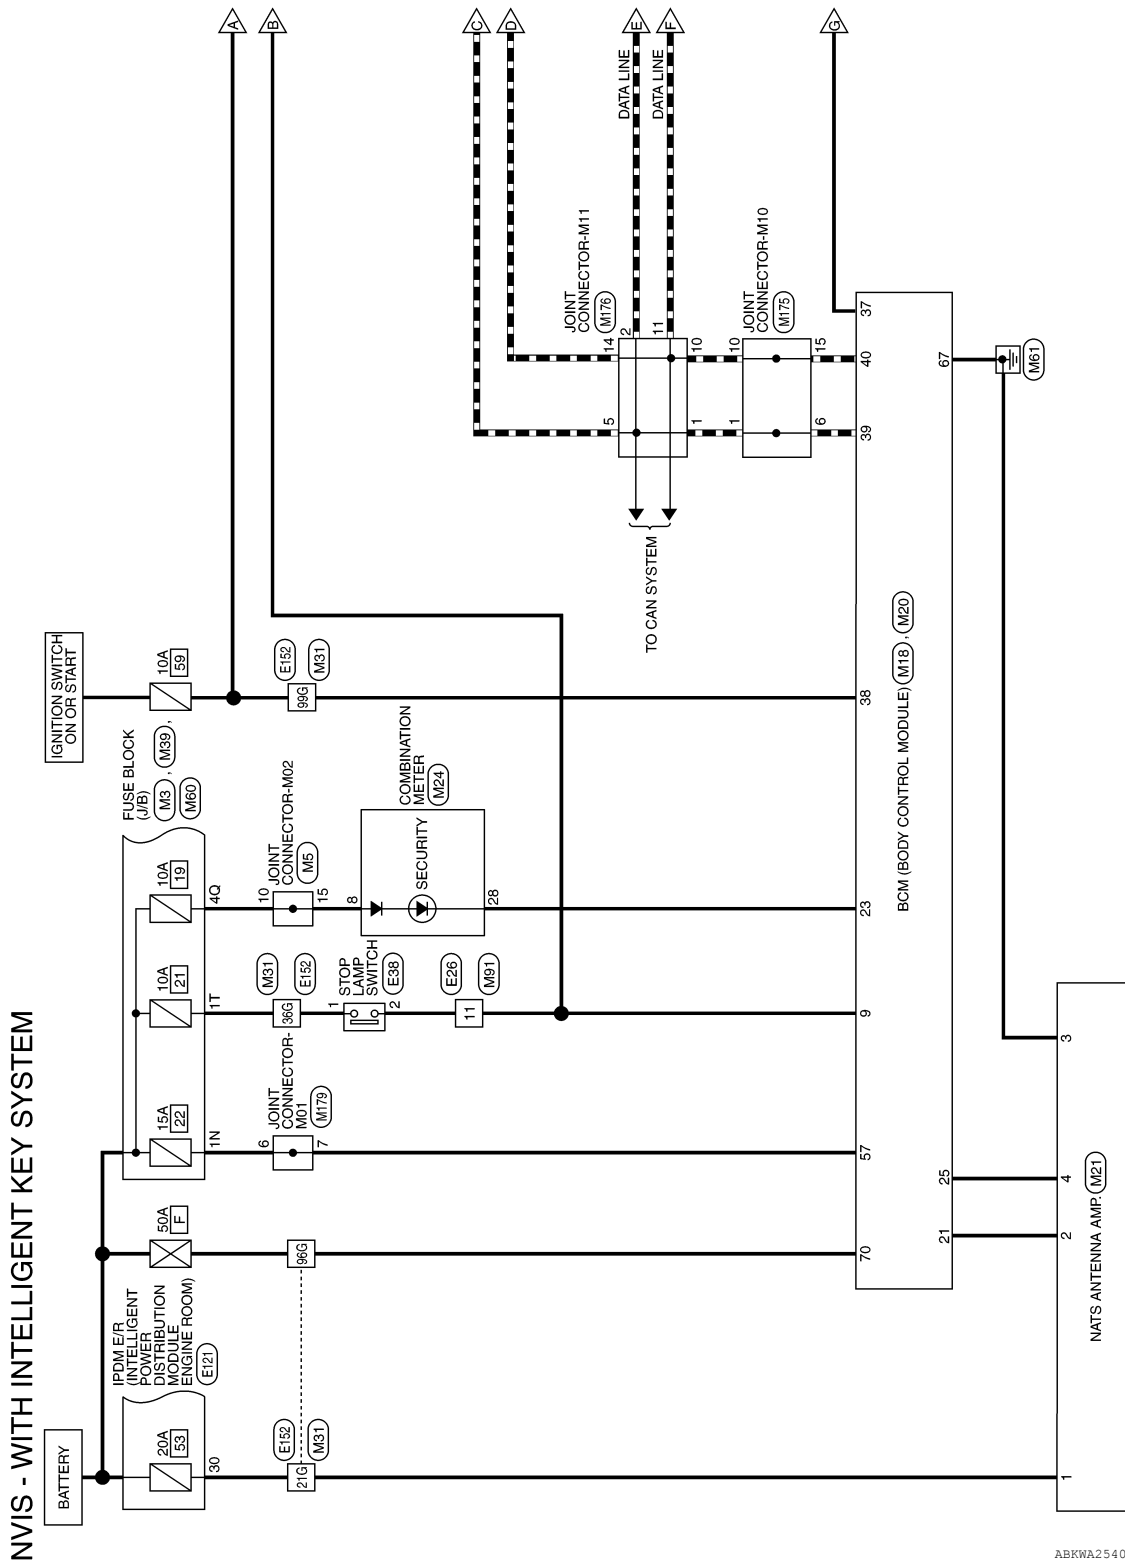


ABKWA2540GB

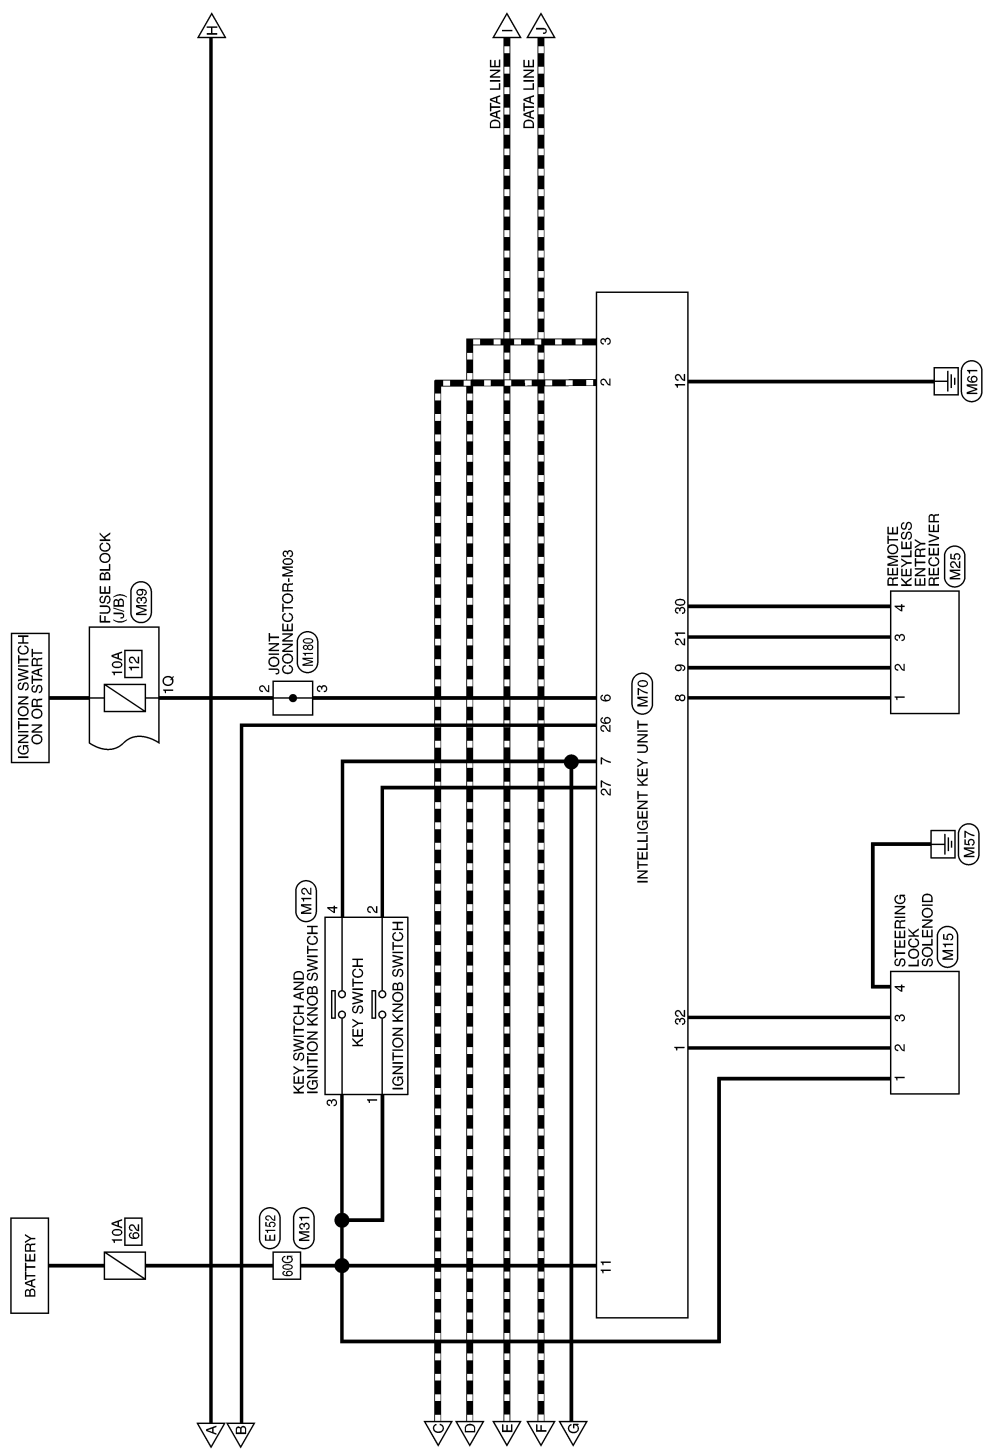

ABKWA2541GB

SEC

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

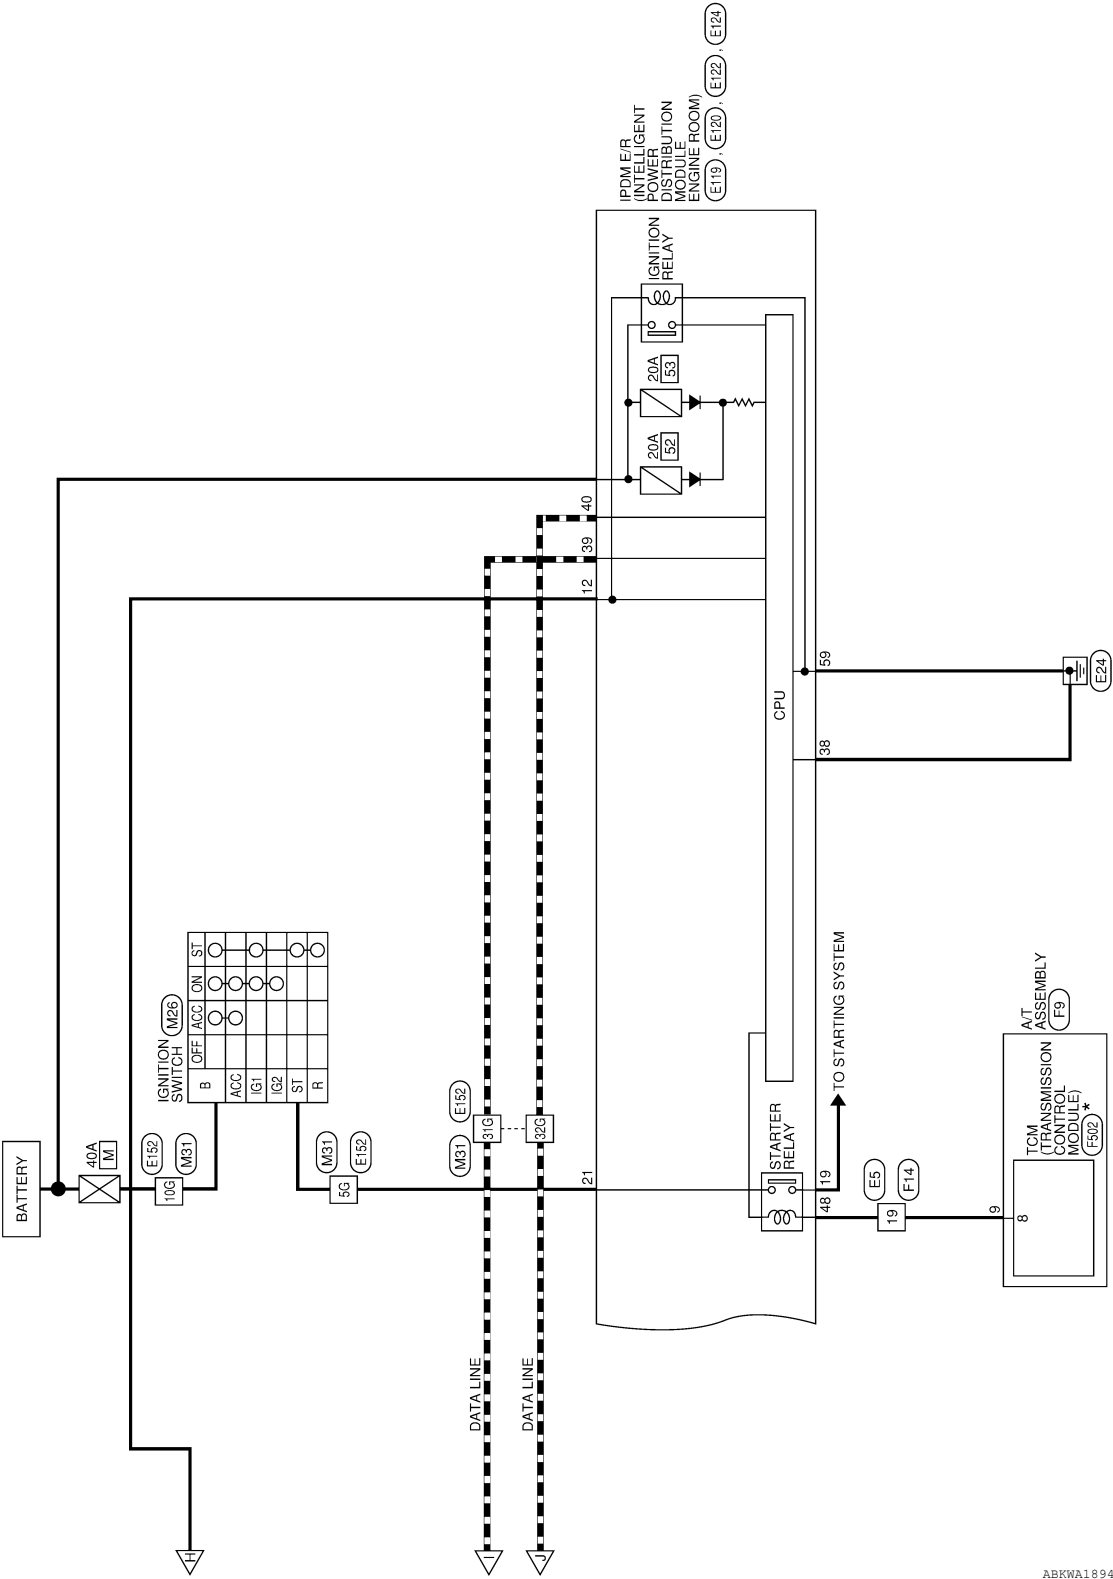


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

ABKWA1894GB


NVIS CONNECTORS - WITH INTELLIGENT KEY SYSTEM

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	Y/R	-

Connector No.	M5
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
10	Y/R	-
15	Y/R	-

Connector No.	M12
Connector Name	KEY SWITCH AND IGNITION KNOB SWITCH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	R/B	-
3	Y	-
4	B/R	-

Connector No.	M15
Connector Name	STEERING LOCK SOLENOID
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L/Y	-
3	L/O	-
4	B	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
9	R/G	BRAKE SW
21	G	IMMOBILIZER ANTENNA SIGNAL (CLOCK)
23	G/O	SECURITY INDICATOR OUTPUT
25	BR	IMMOBILIZER ANTENNA SIGNAL (RX, TX)
37	B/R	KEY SW
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L


Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
57	Y/R	BAT (FUSE)
67	B	GND (POWER)
70	W/B	BAT (F/L)

ABKIA5801GB

Connector No.	M25
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G	-
2	GR	-
3	B/W	-
4	G/B	-


Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Terminal No.	Color of Wire	Signal Name
8	Y/R	BATTERY
28	G/O	SECURITY



Connector No.	M21
Connector Name	NATS ANTENNA AMP.
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	G	-
3	B	-
4	BR	-

Terminal No.	Color of Wire	Signal Name
5G	BR	-
10G	G	-
21G	W	-
31G	L	-
32G	P	-
36G	R/Y	-
60G	Y	-
96G	W/B	-
99G	W/L	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

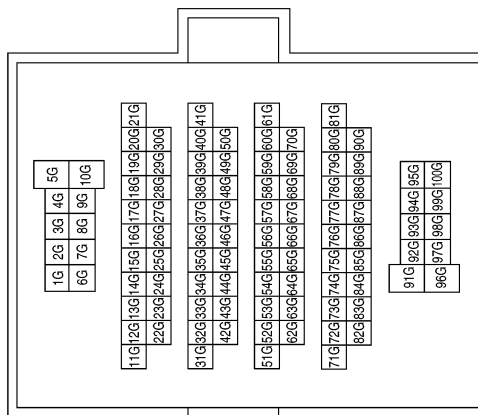


Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
B	G	-
ST	BR	-


ABKIA5802GB

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1T	R/Y	-

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1Q	G/R	-
4Q	Y/R	-


Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
11	R/G	-

Terminal No.	Color of Wire	Signal Name
3	P	CAN-L
6	G/R	IGN SW INPUT
7	B/R	KEY SW INPUT
8	G	RF TUNER GND
9	GR	RF TUNER SIG
11	Y	BAT
12	B	GND
21	B/W	RF TUNER RSSI
26	R/G	BRAKE SW
27	R/B	PUSH SW INPUT
30	G/B	RF TUNER 5V OUTPUT
32	L/O	STRG C/U SIG

Connector No.	M70
Connector Name	INTELLIGENT KEY UNIT
Connector Color	WHITE

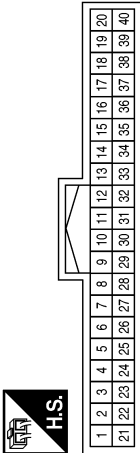


Terminal No.	Color of Wire	Signal Name
1	L/Y	STRG C/U 5V OUTPUT
2	L	CAN-H

ABKIA5803GB


A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

Connector No.	M179
Connector Name	JOINT CONNECTOR-M01
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
6	Y/R	–
7	Y/R	–

Connector No.	M176
Connector Name	JOINT CONNECTOR-M11
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	L	–
2	L	–
5	L	–
10	P	–
11	P	–
14	P	–

Connector No.	M175
Connector Name	JOINT CONNECTOR-M10
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	L	–
6	L	–
10	P	–
15	P	–

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	R/G	–

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
19	B/R	–

Connector No.	M180
Connector Name	JOINT CONNECTOR-M03
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	G/R	–
3	G/R	–

ABKIA5804GB

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

21	20	19
24	23	22



Terminal No.	Color of Wire	Signal Name
19	W/R	STARTER MTR
21	BR	IGN SW (ST)

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

9	8	7	6	5	4	3
18	17	16	15	14	13	12
11	10					



Terminal No.	Color of Wire	Signal Name
12	LW	IGN SW (IG)

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	BLACK

2	1
---	---



Terminal No.	Color of Wire	Signal Name
1	R/Y	—
2	R/G	—

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

42	41	40	39	38	37
48	47	46	45	44	43



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
48	B/R	RANGE SW

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

29	28	27	26	25
36	35	34	33	32
31	30			



Terminal No.	Color of Wire	Signal Name
30	W	ECM BAT


ABKIA5805GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

Terminal No.	Color of Wire	Signal Name
5G	BR	-
10G	G	-
21G	W	-
31G	L	-
32G	P	-
36G	R/Y	-
60G	Y	-
96G	W/B	-
99G	L/W	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

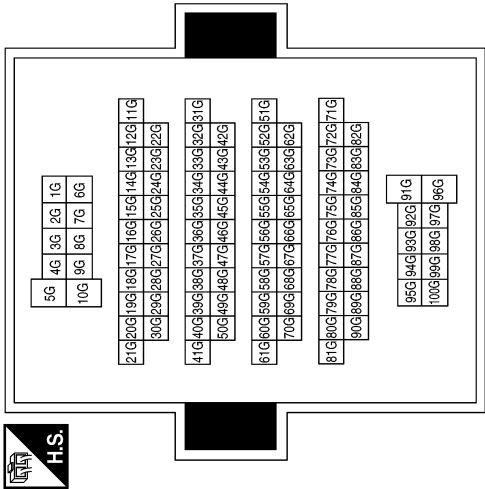


Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)


Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY



Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN



Terminal No.	8
Color of Wire	G
Signal Name	START-RLY

Terminal No.	19
Color of Wire	B/R
Signal Name	-

Terminal No.	9
Color of Wire	B/R
Signal Name	-

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

SYMPTOM DIAGNOSIS

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION SYMPTOMS

Symptom Table

INFOID:0000000011289026

NOTE:

- Before performing the diagnosis in the following table, check "[SEC-5, "Work Flow"](#)".
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.
- Engine cranking is enabled when the shift lever is in the "Park" position, and in the "Neutral" position only if the brake pedal is depressed.
- If the following symptoms are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Engine start function is ON when setting on CONSULT.
- Mechanical key is not inserted in key cylinder.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Symptom	Diagnosis/service procedure	Reference page
Ignition switch does not turn on with Intelligent Key. [LCD displays "KEY DETECTED"]	1. Check steering lock solenoid.	SEC-30
	2. Replace Intelligent Key unit.	SEC-125
Ignition switch does not turn on with Intelligent Key. [LCD does not display "KEY DETECTED"]	1. Check Intelligent Key unit power supply and ground circuit.	DLK-71
	2. Check ignition knob switch.	DLK-119
	3. Check key switch (BCM input).	DLK-118
	4. Check key switch (Intelligent Key unit input).	DLK-116
	5. Replace Intelligent Key unit.	SEC-125
Ignition switch does not turn on with Intelligent Key. [LCD displays " NO KEY DETECTED"]	1a. Check center console area antenna (rear).	DLK-63
	1b. Check luggage area antenna.	DLK-69
	1c. Check center console area antenna (front).	DLK-65
	1d. Check overhead console area antenna.	DLK-67
	2. Replace Intelligent Key unit.	SEC-125
Ignition switch does not turn on with mechanical key	1. Check key switch (BCM input).	DLK-118
	2. Check key switch (Intelligent Key unit input).	DLK-116
Engine cannot be cranked with transmission in "Park" or in "Neutral" position with brake pedal depressed	1. Check transmission signal.	TM-48
	2. Check stop lamp switch.	SEC-84

VEHICLE SECURITY SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM SYMPTOMS

Symptom Table

INFOID:000000011289027

Procedure			Diagnostic procedure	Refer to page
Symptom				
1	Vehicle security system cannot be set by	Door switch	Check door switch (LF, RF, LR, RR, back)	DLK-74
		Glass ajar switch	Check glass ajar switch	DLK-127
		Intelligent Key	Check Intelligent Key system	DLK-8
		Key cylinder switch	Check key cylinder switch	DLK-82
		—	Check Intermittent Incident	GI-43
	Security indicator does not turn ON.	Check vehicle security indicator	SEC-58	
		Check Intermittent Incident	GI-43	
2	* Vehicle security system does not sound alarm when	Any door is opened.	Check door switch (LF, RF, LR, RR, back)	DLK-74
		Glass ajar switch	Check glass ajar switch	DLK-127
		—	Check Intermittent Incident	GI-43
3	Vehicle security alarm does not activate.	Horn alarm	Check horn switch	—
			Check Intermittent Incident	GI-43
4	Vehicle security system cannot be canceled by	Intelligent Key	Check Intelligent Key system	DLK-8
		Key cylinder switch	Check key cylinder switch	DLK-82
		—	Check Intermittent Incident	GI-43

*: Check the system is in the armed phase.

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

Symptom Table

INFOID:0000000011289028

NOTE:

- Before performing the diagnosis in the following table, check "[SEC-5. "Work Flow"](#)".
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.
- If the following symptoms are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Mechanical key is not inserted into key cylinder.
- Ignition knob switch is not depressed.

Symptom	Diagnosis/service procedure	Reference page
Security indicator does not turn ON or flash.	1. Check vehicle security indicator	SEC-58
	2. Check Intermittent Incident	GI-43

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011289029

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least three minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:0000000011289030

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

PRECAUTIONS

< PRECAUTION >

[WITH INTELLIGENT KEY SYSTEM]

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

REMOVAL AND INSTALLATION

NATS ANTENNA AMP.

Removal and Installation


INFOID:0000000011289031

NOTE:

- If NATS antenna amp. is not installed correctly, NVIS (NATS) system will not operate properly and "SELF-DIAG RESULTS" on CONSULT screen will show "LOCK MODE" or "CHAIN OF IMMU-KEY".
- Initialization is not necessary when only the NATS antenna amp. is replaced with a new one.

REMOVAL

1. Disconnect the battery negative terminal. Refer to [PG-72, "How to Handle Battery"](#).
2. Remove cluster lid A. Refer to [IP-14, "Removal and Installation"](#).
3. Remove the NATS antenna amp bolt.
4. Disconnect the harness connector from the NATS antenna amp. (1) and remove.

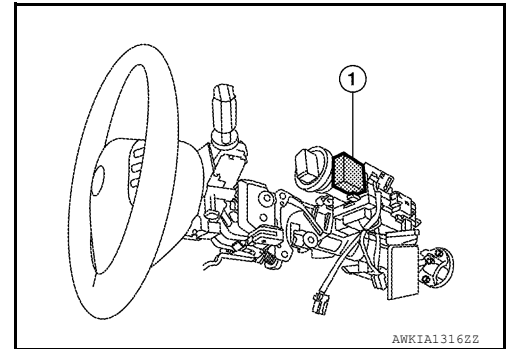**INSTALLATION**

Installation is in the reverse order of removal.

INTELLIGENT KEY UNIT

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]


INTELLIGENT KEY UNIT

Removal and Installation

INFOID:0000000011289032

REMOVAL

1. Remove cluster lid A. Refer to [IP-14. "Removal and Installation"](#).
2. Disconnect the harness connector (1) from the intelligent Key unit (2).
3. Remove the Intelligent Key unit bolt (A) and the Intelligent Key unit (2).

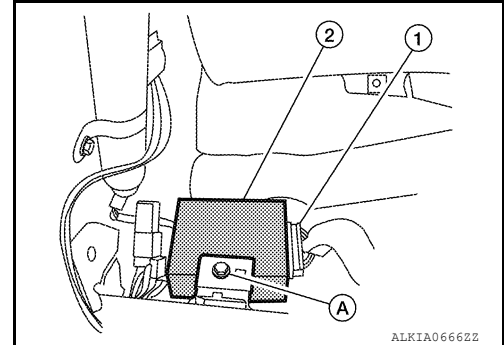

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

REMOTE KEYLESS ENTRY RECEIVER

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]


REMOTE KEYLESS ENTRY RECEIVER

Removal and Installation

INFOID:000000011289033

REMOVAL

1. Remove the instrument lower panel RH. Refer to [IP-12, "Removal and Installation"](#).
2. Disconnect the harness connector (1) from the RKE receiver (2).
3. Remove the RKE receiver bolt (A) and the RKE receiver (2).

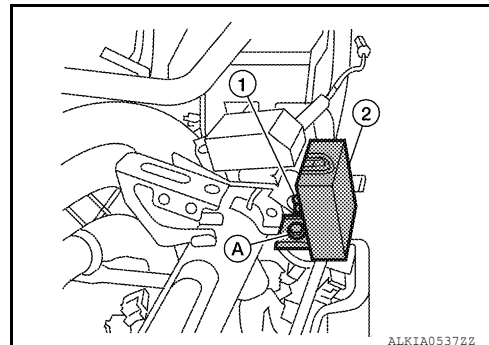

INSTALLATION

Installation is in the reverse order of removal.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000011289034

OVERALL SEQUENCE

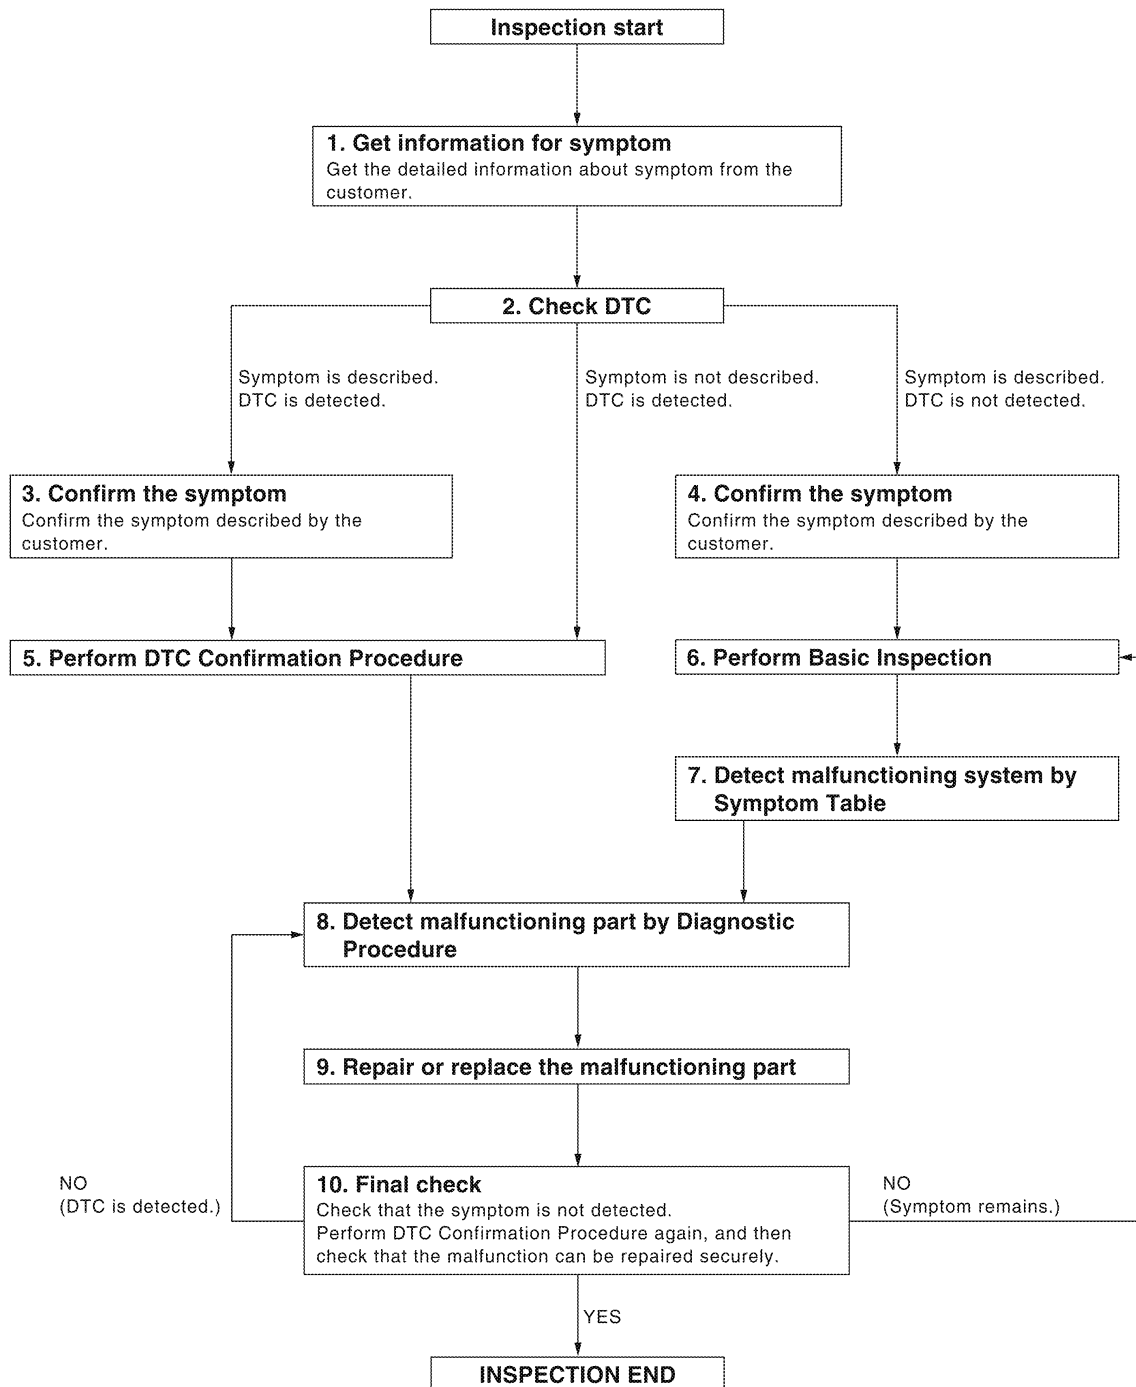

DETAILED FLOW

Revision: August 2014

SEC-127

2015 Armada NAM

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

1.GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

2.CHECK DTC

1. Check DTC for Intelligent Key unit and BCM.
2. Perform the following procedure if DTC is displayed.
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

3.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT to the vehicle in "DATA MONITOR" mode and check real-time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5

4.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT to the vehicle in "DATA MONITOR" mode and check real-time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

If two or more DTCs are detected, refer to [BCS-44, "DTC Inspection Priority Chart"](#) (BCM) and determine trouble diagnosis order.

Is DTC detected?

YES >> GO TO 8

NO >> Refer to [GI-43, "Intermittent Incident"](#).

6.PERFORM BASIC INSPECTION

Perform Basic Inspection. Refer to [SEC-130, "Basic Inspection"](#).

>> GO TO 7

7.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to Symptom Table based on the confirmed symptom in step 4.

>> GO TO 8

8.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:

The Diagnostic Procedure is described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

>> GO TO 9

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

9. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 10

10. FINAL CHECK

When DTC was detected in step 9, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunctions have been fully repaired.

When symptom was described by the customer, refer to the confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 8

YES (Symptom remains)>>GO TO 6

NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

PRE-INSPECTION FOR DIAGNOSTIC

Basic Inspection

INFOID:0000000011289035

1.INSPECTION START

Turn ignition switch "OFF".

NOTE:

Before starting operation check, open front windows.

>> GO TO 2.

2.CHECK SECURITY INDICATOR LAMP

1. Lock doors using keyfob or mechanical key.
2. Check that security indicator lamp illuminates for 30 seconds.

Does the security indicator lamp illuminate?

YES >> GO TO 3.

NO >> Perform diagnosis and repair. Refer to [SEC-163, "Component Function Check"](#).

3.CHECK ALARM FUNCTION

1. After 30 seconds, security indicator lamp will start to blink.
2. Open any door before unlocking with keyfob or mechanical key, or open back door or glass hatch without keyfob.

Does the alarm function properly?

YES >> GO TO 4.

NO >> Check the following.

- The vehicle security system does not phase in alarm mode. Refer to [SEC-202, "Symptom Table"](#).
- Alarm (horn and headlamps) does not operate. Refer to [SEC-202, "Symptom Table"](#).

4.CHECK ALARM CANCEL OPERATION

Unlock any door using keyfob or mechanical key.

Does the alarm (horn and headlamps) stop.

YES >> Inspection End.

NO >> Check door lock function. Refer to [DLK-252, "DOOR LOCK AND UNLOCK SWITCH : System Description"](#).

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:0000000011289036

Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

ECM RE-COMMUNICATING FUNCTION

ECM RE-COMMUNICATING FUNCTION : Description

INFOID:0000000011289037

Performing following procedure can automatically perform re-communication of ECM and BCM, but only when the ECM has been replaced with a new one (*1).

*1: New one means an ECM which has never been energized on-board.

(In this step, initialization procedure by CONSULT is not necessary)

NOTE:

- When replacing an ECM that is not brand new, refer to CONSULT Immobilizer mode and follow the on-screen instructions.
- If multiple keys are attached to the key holder, separate them before work.
- Distinguish keys with unregistered key ID from those with registered ID.

ECM RE-COMMUNICATING FUNCTION : Special Repair Requirement

INFOID:0000000011289038

1. PERFORM ECM RE-COMMUNICATING FUNCTION

1. Install ECM.
2. Using a registered key (*2), turn ignition switch to "ON".
*2: To perform this step, use the key that has been used before performing ECM replacement.
3. Maintain ignition switch in "ON" position for at least 5 seconds.
4. Turn ignition switch to "OFF".
5. Start engine.

Can engine be started?

YES >> Procedure is completed.

NO >> Initialize control unit. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

SEC

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)


< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

SYSTEM DESCRIPTION

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

System Diagram

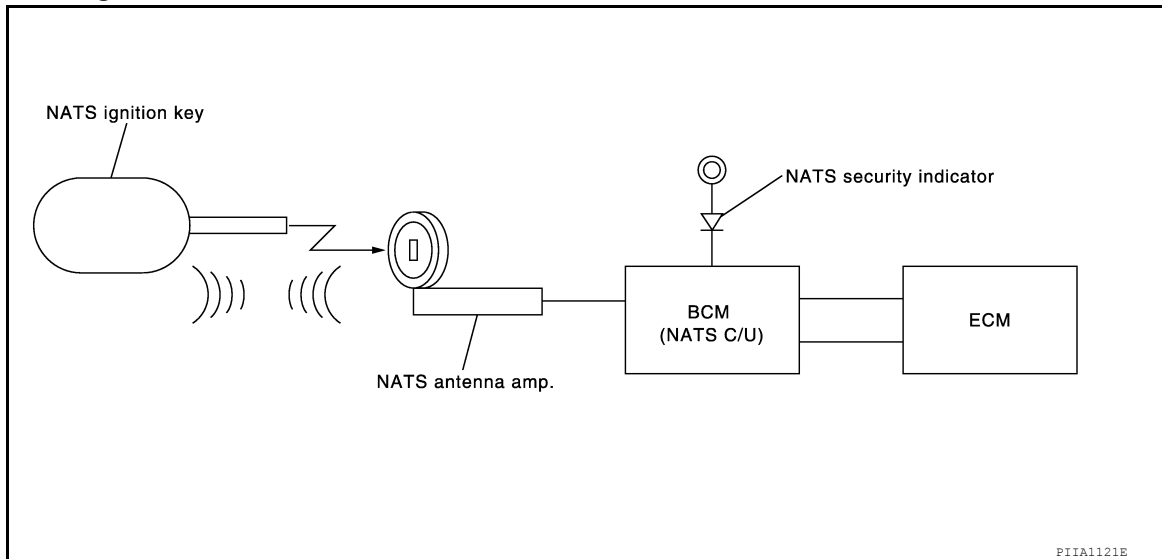

System Description

INFOID:0000000011289040

INPUT/OUTPUT SIGNAL CHART

BCM

Switch/Input signal	Input signal to BCM	BCM function	Actuator/Output signal
NATS antenna amp.	Key ID	NATS	<ul style="list-style-type: none">Security indicator lampStarter request
ECM	Engine status signal		

SYSTEM DESCRIPTION

NATS (Nissan Anti-Theft System) has the following immobilizer functions:

- Engine immobilizer shows high anti-theft performance to prevent engine from starting by other than the owner.
- Only a key with key ID registered in BCM and ECM can start engine, and shows high anti-theft performance to prevent key from being copied or stolen.
- Security indicator always flashes with mechanical key removed condition (key switch: OFF) and ignition knob released condition on LOCK position (ignition knob switch: OFF).
- Therefore, NATS warns outsiders that the vehicle is equipped with the anti-theft system. Refer to [SEC-135, "System Description"](#).
- If system detects malfunction, security indicator illuminates when ignition switch is turned to ON position.
- If the owner requires, ignition key ID or mechanical key ID can be registered for up to 5 keys.
- During trouble diagnosis or when the following parts have been replaced, and if ignition key is added, registration* is required.

*1: All keys kept by the owner of the vehicle should be registered with mechanical key.

- ECM
 - BCM
 - Ignition key
 - Remote keyless entry receiver
 - NATS trouble diagnosis, system initialization and additional registration of other mechanical key IDs must be carried out using CONSULT.
- When NATS initialization has been completed, the ID of the inserted mechanical key or mechanical key IDs can be carried out.

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

- Possible symptom of NATS malfunction is "Engine cannot start". Identify the possible causes according to "Work Flow", Refer to [SEC-127, "Work Flow"](#).
- If ECM other than Genuine NISSAN is installed, the engine cannot be started. For ECM replacement procedure, refer to [SEC-131, "ECM RE-COMMUNICATING FUNCTION : Description"](#).

PRECAUTIONS FOR KEY REGISTRATION

- The key registration is a procedure that erases the current NATS ID once, and then re-registers a new ID. Therefore the registered key is necessary for this procedure. Before starting the registration operation collect all registered Keys from the customer.
- The NATS ID registration is the procedure that registers the ID stored into the transponder (integrated in mechanical key) to BCM.
The key ID registration is the procedure that registers the ID to the BCM.
- When performing the key system registration only, the engine cannot be started by inserting the key into the key cylinder. When performing the NATS registration only, the engine cannot be started by using the ignition key.

SECURITY INDICATOR

- Always flashes with ignition key in the OFF position.

MAINTENANCE INFORMATION


CAUTION:

It is necessary to perform NATS ID registration when replacing any of the following part.
If it's not (or fail to do so), the electrical system may not operate properly.

- BCM
- ECM
- IPDM E/R
- Ignition key
- NATS antenna amp.
- Combination meter

Component Parts Location

INFOID:0000000011289041

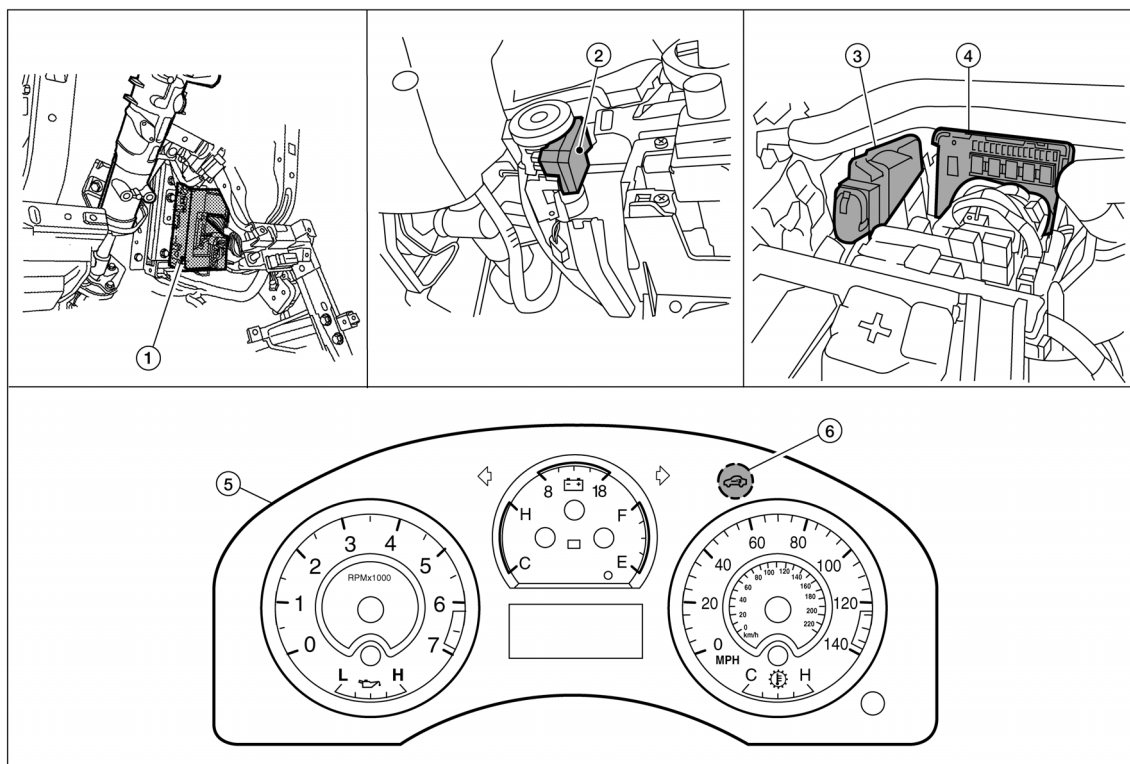

ALK1A23282Z

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

- | | | |
|---|--------------------------|----------------------------|
| 1. BCM M18, M20
(view with instrument panel LH removed) | 2. NATS antenna amp. M21 | 3. ECM E16 |
| 4. IPDM E/R E119, E120, E121, E122, E124
(view with cover removed) | 5. Combination meter M24 | 6. Security indicator lamp |

Component Description

INFOID:0000000011289042

Item	Function
BCM	Verifies the received signal from the ignition key ID, then informs ECM whether to allow engine start.
Remote keyless entry receiver	Receives lock/unlock signal from the keyfob, and then transmits to the BCM.
NATS antenna amp.	Detects the ignition key presence in the ignition key cylinder.
Security indicator	Indicates the status of the security system.
IPDM E/R	Powers-up the horn and the headlamps in case of a security breach.


VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

VEHICLE SECURITY SYSTEM

System Diagram

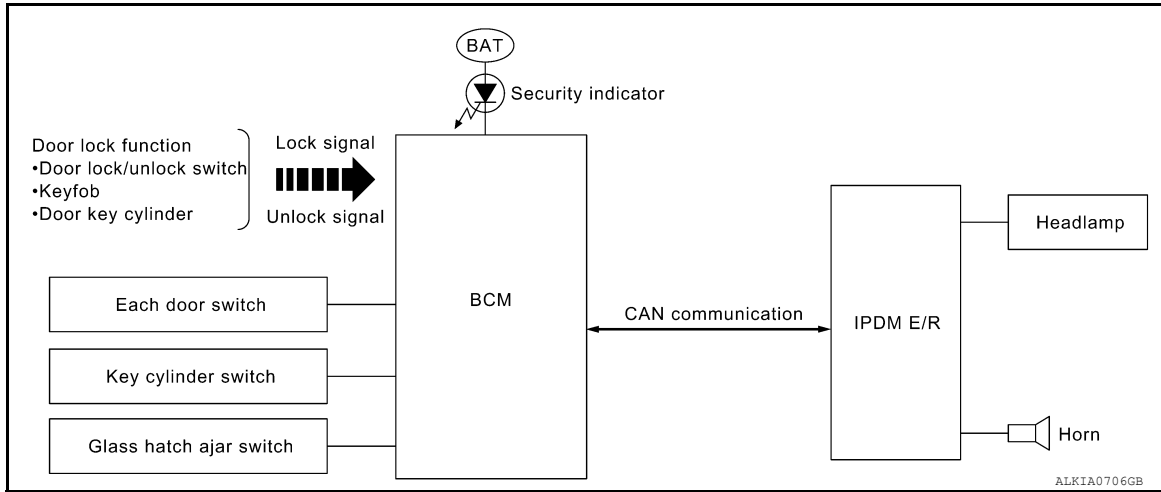

System Description


INFOID:0000000011289044

DESCRIPTION

The security system provides an audible and visual alarm when an unauthorized access to the vehicle is detected while the system is in armed phase.

The security system consist of the BCM managing the audible alarm (horn) and the visual alarm (headlamps).

OPERATION FLOW

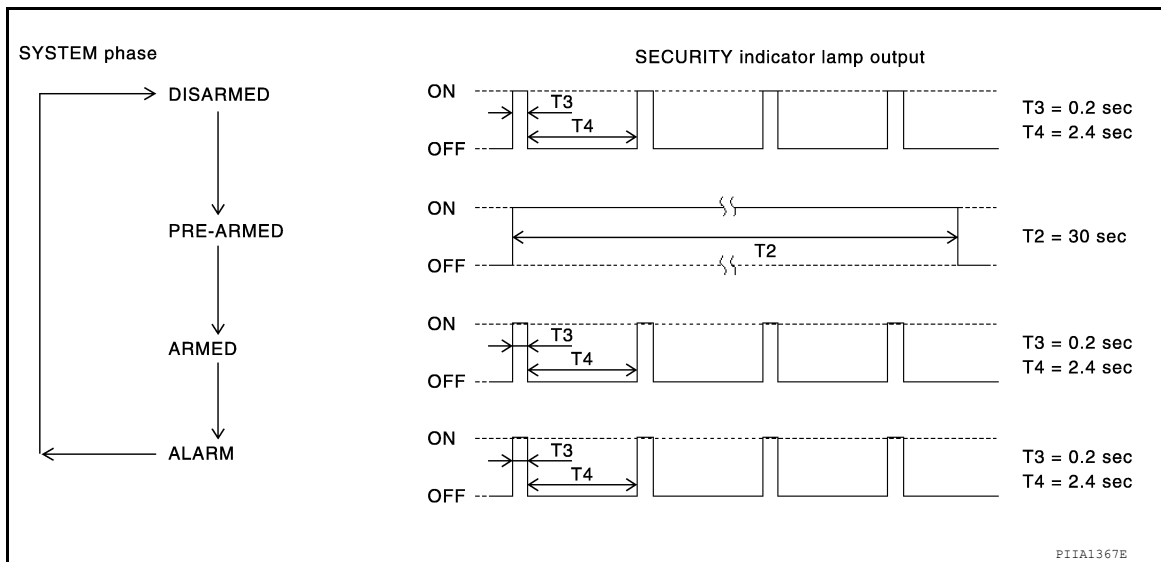

Disarmed Phase

When the vehicle is being driven or when doors are open, the theft warning system is set in the disarmed phase on the assumption that the owner is inside or near the vehicle.

Pre-Armed Phase And Armed Phase

The vehicle security system turns into the pre-armed phase when ignition switch is in OFF position, all doors are closed and locked (using keyfob, door lock/unlock switch, driver key cylinder or auto relock function). The system automatically shifts into the armed phase.

Condition of Activating The System

When the following condition is performed in armed phase, the system sounds the horns and flashes the headlamps for about 45 seconds.

- Any door is opened.

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >


Condition of Deactivating The System

When one of the following operations is performed, the armed phase is canceled.

- Unlock the doors with keyfob.
- Use the mechanical key to unlock the driver door using the door key cylinder.

Component Parts Location

INFOID:0000000011289045

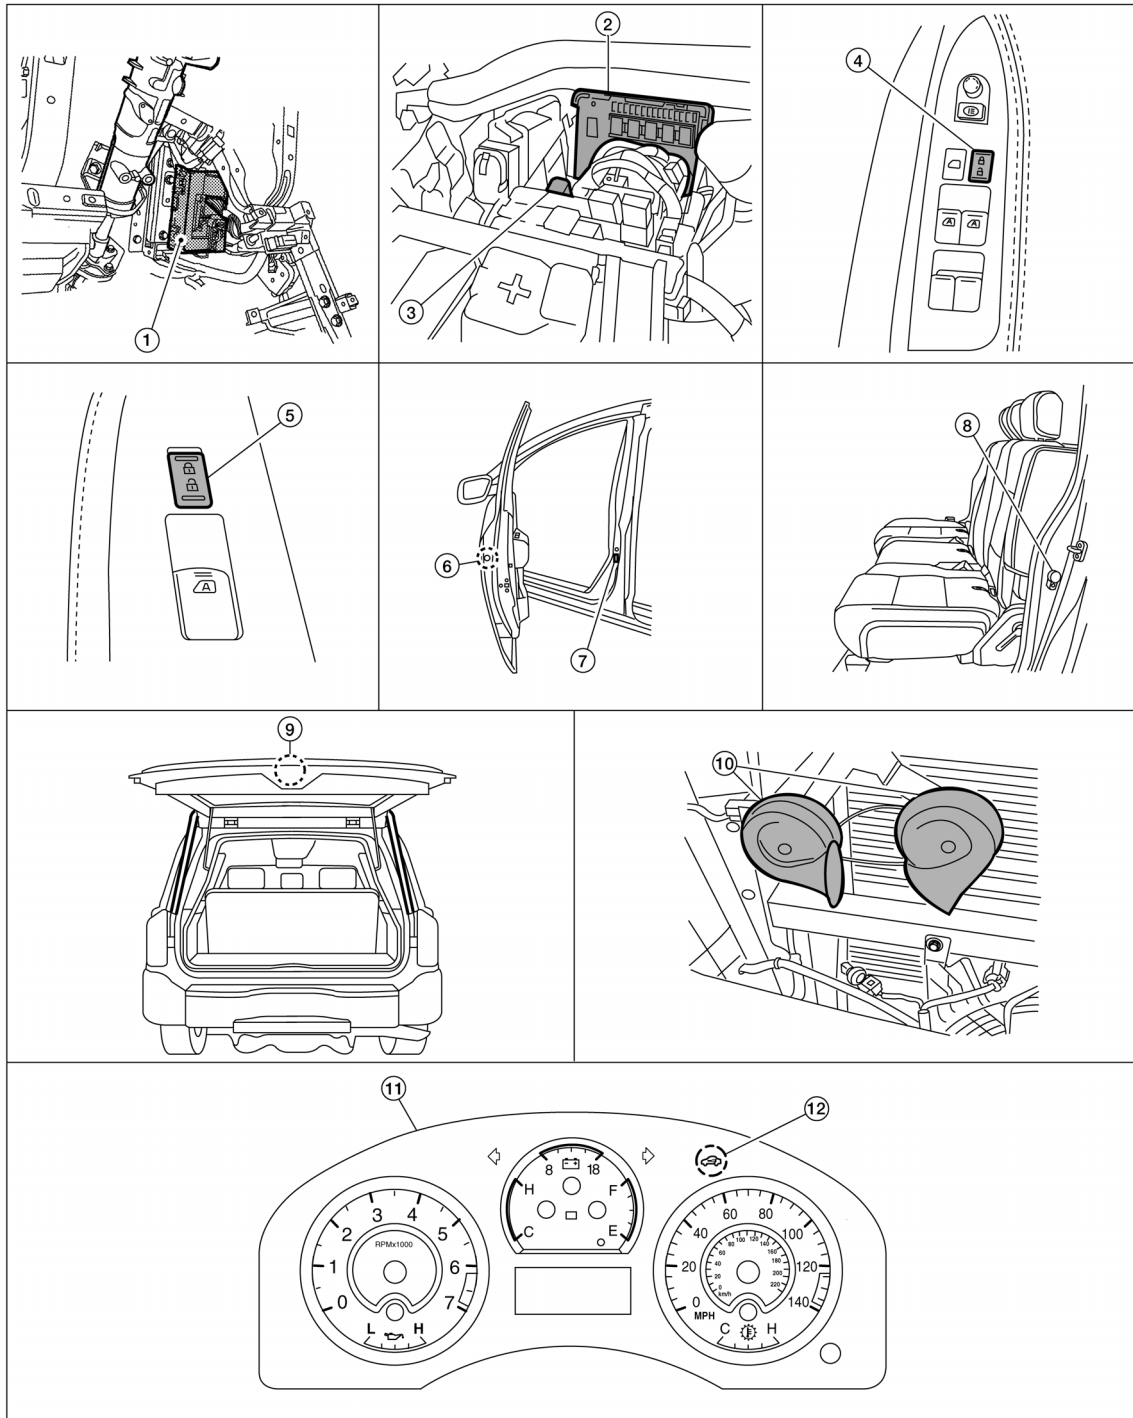

ALK1A23272Z

- | | | |
|---|---|--|
| 1. BCM M18, M19, M20
(view with instrument panel LH removed) | 2. IPDM E/R E122, E124
(view with cover removed) | 3. Horn relay H-1 |
| 4. Main power window and door lock/unlock switch D7, D8 | 5. Power window and door lock/unlock switch RH D105 | 6. Front door lock assembly LH (key cylinder switch) D14 |

VEHICLE SECURITY SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

- | | | |
|---|---------------------------------------|--|
| 7. Front door switch LH B8
RH B108 | 8. Rear door switch LH B18
RH B116 | 9. Back door switch (without power back
door) D407
Back door latch (door ajar switch) (with
power back door) D503
Glass hatch ajar switch D707 |
| 10. Horn E3
(view with front grille removed) | 11. Combination meter M24 | 12. Security indicator lamp |

Component Description

INFOID:0000000011289046

Item	Function
BCM	Verifies the received signal from ignition key, then informs ECM whether to allow engine start.
Door switch	Provides the BCM with the status of each monitored door.
Security indicator	Indicates the status of the security system.
IPDM E/R	Controls the horn and headlamps operation.
Horn	Sounds when the vehicle security system is triggered.

SEC

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011541071

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> The vehicle specification can be read and saved. The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×			
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Remote keyless entry system	MULTI REMOTE ENT			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY			×				
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×	×		
Back door open	TRUNK			×	×			
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×	×	×		
Signal buffer system	SIGNAL BUFFER			×	×			
TPMS	AIR PRESSURE MONITOR		×	×	×	×		
Panic alarm system	PANIC ALARM				×			

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

IMMU

IMMU : CONSULT Function (BCM - IMMU)

INFOID:0000000011541076

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [Off/On].

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT ALM)

INFOID:0000000011541082

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
I-KEY LOCK* [On/Off]	Indicates condition of lock signal from Intelligent Key.
I-KEY UNLOCK* [On/Off]	Indicates condition of unlock signal from Intelligent Key.
KEYLESS LOCK** [On/Off]	Indicates condition of lock signal from keyfob.
KEYLESS UNLOCK** [On/Off]	Indicates condition of unlock signal from keyfob.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
BACK DOOR SW [On/Off]	Indicates condition of back door switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.

* : with Intelligent Key

** : without Intelligent Key

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation [Off/On].
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
HEAD LAMP(HI)	This test is able to check vehicle security lamp operation [On].

WORK SUPPORT

Support Item	Setting	Description
SECURITY ALARM SET	Off	Security alarm OFF.
	On*	Security alarm ON.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Support Item	Setting	Description
THEFT ALM TRG	Off/On	The switch which triggered vehicle security alarm is recorded [On]. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching [CLEAR].
	CLEAR	

*: Initial setting

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000011289050

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. CAN Communication Signal Chart, refer to [LAN-46, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000011289051

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	In CAN communication system, any item (or items) of the following listed below is malfunctioning. <ul style="list-style-type: none">• Receiving (TCM)• Receiving (IPDM E/R)• Receiving (ECM)• Receiving (METER/M&A)• Receiving (MULTI AV)

Diagnosis Procedure

INFOID:0000000011289052

1.PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-5, "CAN Communication Control Circuit"](#).
NO >> Refer to [GI-43, "Intermittent Incident"](#).

SEC

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

U1010 CONTROL UNIT (CAN)

Description

INFOID:0000000011289053

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart, refer to [LAN-46, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:0000000011289054

DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diagnosis of CAN controller of BCM.	BCM

Diagnosis Procedure

INFOID:0000000011289055

1.REPLACE BCM

When DTC [U1010] is detected, replace BCM.

>> Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).

Special Repair Requirement

INFOID:0000000011289056

1.REQUIRED WORK WHEN REPLACING BCM

Initialize BCM. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2190 NATS ANTENNA AMP.

Description

INFOID:0000000011289057

Performs ID verification through BCM and NATS antenna amplifier when ignition key is inserted and ignition switch turned ON.

Prohibits the start of engine when an unregistered ID of ignition key is used.

DTC Logic

INFOID:0000000011289058

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2190	NATS ANTENNA AMP	<ul style="list-style-type: none">Inactive communication between NATS antenna amp. and BCM.Ignition key is malfunctioning.	<ul style="list-style-type: none">Harness or connectors (The NATS antenna amp. circuit is open or shorted)Ignition keyNATS antenna amp.BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert ignition key into the key cylinder.
2. Turn ignition switch ON.
3. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-143, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011289059

Regarding Wiring Diagram information, refer to [SEC-196, "Wiring Diagram - Without Intelligent Key System"](#).

1.CHECK NATS ANTENNA AMP. INSTALLATION

Check NATS antenna amp. installation. Refer to [SEC-205, "Removal and Installation"](#).

Is the inspection result normal?

- YES >> GO TO 2
NO >> Reinstall NATS antenna amp. correctly.

2.CHECK NVIS (NATS) IGNITION KEY ID CHIP

Start engine with another registered NATS ignition key.

Does the engine start?

- YES >>
 - Ignition key ID chip is malfunctioning.
 - Replace the ignition key.
 - Perform initialization with CONSULT.

For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

NO >> GO TO 3

3.CHECK POWER SUPPLY FOR NATS ANTENNA AMP.

1. Turn ignition switch ON.
2. Check voltage between NATS antenna amp. connector M21 terminal 1 and ground.

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]


1 - Ground

: Battery voltage

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace fuse or harness.

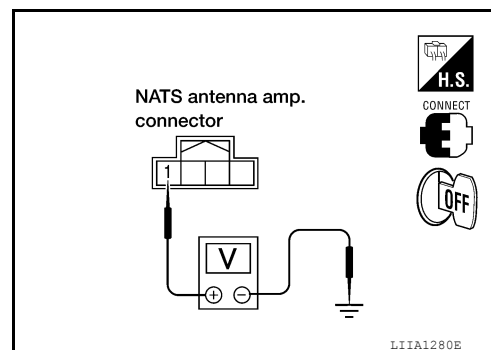

4. CHECK NATS ANTENNA AMP. GROUND LINE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect NATS antenna amp. connector.
3. Check continuity between NATS antenna amp. connector M21 terminal 3 and ground.

3 - Ground

: Continuity should exist.


Is the inspection result normal?

YES >> GO TO 5

NO >> • Repair or replace harness.


NOTE:

If harness is OK, replace BCM, refer to [BCS-54, "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

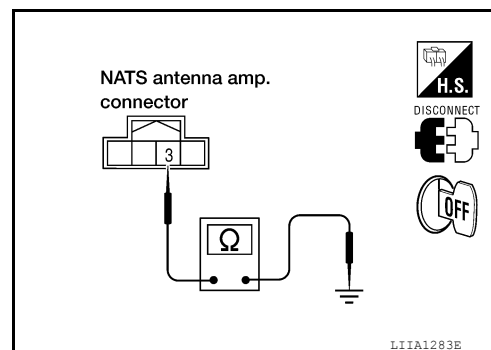

5. CHECK NATS ANTENNA AMP. SIGNAL LINE- 1

1. Connect NATS antenna amp. connector.
2. Turn ignition switch ON.
3. Check voltage between NATS antenna amp. connector M21 terminal 2 and ground with analog tester.

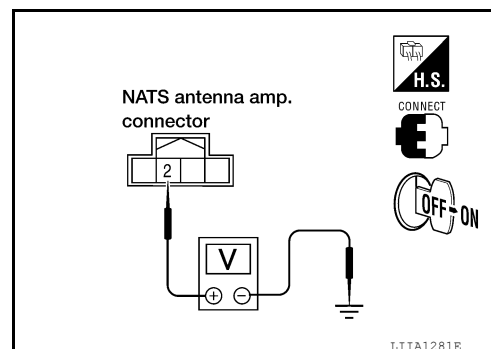

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
(+)	(-)		
2	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES >> GO TO 6

NO >> • Repair or replace harness.

NOTE:

B2190 NATS ANTENNA AMP.


< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

If harness is OK, replace BCM, refer to [BCS-54. "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

6.CHECK NATS ANTENNA AMP. SIGNAL LINE- 2

Check voltage between NATS antenna amp. connector M21 terminal 4 and ground with analog tester.

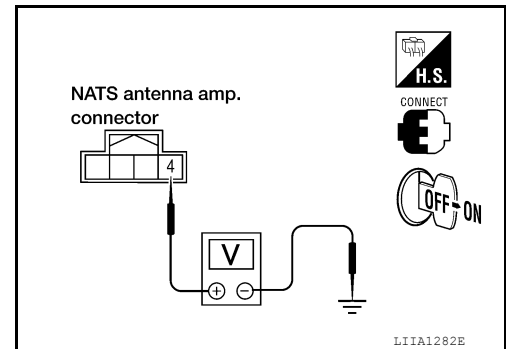

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
(+)	(-)		
4	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES >> NATS antenna amp. is malfunctioning.

NO >> • Repair or replace harness.

NOTE:

If harness is OK, replace BCM, refer to [BCS-54. "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

SEC

B2191 DIFFERENCE OF KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2191 DIFFERENCE OF KEY

Description

INFOID:0000000011289060

Performs ID verification through BCM when ignition knob switch is pressed.

Prohibits the release of steering lock or start of engine when an unregistered ID of mechanical key is used.

DTC Logic

INFOID:0000000011289061

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2191	DIFFERENCE OF KEY	The ID verification results between BCM and mechanical key are NG. The registration is necessary.	Mechanical key

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert mechanical key into the key cylinder.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-146, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011289062

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> Mechanical key was unregistered.
NO >> BCM is malfunctioning.
 - Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
 - Perform initialization again

B2192 ID DISCORD, IMMU-ECM

Description

INFOID:0000000011289063

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011289064

DTC DETECTION LOGIC

NOTE:

- If DTC B2192 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-141, "DTC Logic"](#).
- If DTC B2192 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-142, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD IMMU-ECM	The ID verification results between BCM and ECM are NG. The registration is necessary.	<ul style="list-style-type: none"> • BCM • ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-147, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011289065

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ID was unregistered.
 NO >> GO TO 2

2.PEPLACE BCM

1. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
2. Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> BCM is malfunctioning.
 NO >> GO TO 3

3.PEPLACE ECM

1. Replace ECM. Refer to Removal and Installation.
2. Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Operation Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ECM is malfunctioning.
 NO >> GO TO 4

B2192 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> Inpection End.

B2193 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2193 CHAIN OF ECM-IMMU

Description

INFOID:0000000011289066

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011289067

DTC DETECTION LOGIC

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-141, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-142, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193	CHAIN OF ECM-IMMU	Inactive communication between ECM and BCM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or short)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-149, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011289068

1.REPLACE BCM

1. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
2. Perform initialization with CONSULT.
For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Does the engine start?

- YES >> BCM was malfunctioning.
NO >> ECM is malfunctioning.
 - Replace ECM.
 - Perform ECM re-communicating function.

P1610 LOCK MODE

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

P1610 LOCK MODE

Description

INFOID:0000000011289069

When the starting operation is carried more than five times consecutively under the following conditions, NATS will shift to the mode which prevents the engine from being started.

- Unregistered mechanical key is used.
- BCM or ECM's malfunctioning.

DTC Logic

INFOID:0000000011289070

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When the starting operation is carried out five or more times consecutively under the following conditions. <ul style="list-style-type: none">• Unregistered mechanical key• BCM or ECM's malfunctioning.	—

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-150, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011289071

1.CHECK ENGINE START FUNCTION

1. Perform the check for DTC except DTC P1610.
2. Use CONSULT to erase DTC after fixing.
3. Check that engine can start with registered mechanical key.

Does the engine start?

- YES >> Inspection End.
NO >> GO TO 2

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> Inspection End.

P1611 ID DISCORD, IMMU-ECM

Description

INFOID:0000000011289072

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011289073

DTC DETECTION LOGIC

NOTE:

- If DTC P1611 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-141, "DTC Logic"](#).
- If DTC P1611 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-142, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1611	ID DISCORD IMMU-ECM	The ID verification results between BCM and ECM are NG. The registration is necessary.	<ul style="list-style-type: none"> • BCM • ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-151, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011289074

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ID was unregistered.
 NO >> GO TO 2

2.PEPLACE BCM

1. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
2. Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> BCM is malfunctioning.
 NO >> GO TO 3

3.PEPLACE ECM

1. Replace ECM. Refer to Removal and Installation.
2. Perform initialization with CONSULT. Re-register all mechanical keys.
 For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ECM is malfunctioning.
 NO >> GO TO 4

P1611 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> Inspection End.

P1612 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

P1612 CHAIN OF ECM-IMMU

Description

INFOID:0000000011289075

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:0000000011289076

DTC DETECTION LOGIC

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [SEC-141, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [SEC-142, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1612	CHAIN OF ECM-IMMU	Inactive communication between ECM and BCM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or short)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-153, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011289077

1.REPLACE BCM

1. Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
2. Perform initialization with CONSULT.
For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Does the engine start?

- YES >> BCM was malfunctioning.
NO >> ECM is malfunctioning.
 - Replace ECM.
 - Perform ECM re-communicating function.

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

P1614 CHAIN OF IMMU-KEY

Description

INFOID:0000000011289078

Performs ID verification through BCM and NATS antenna amplifier when ignition key is inserted and ignition switch turned ON.

Prohibits the start of engine when an unregistered ID of ignition key is used.

DTC Logic

INFOID:0000000011289079

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1614	CHAIN OF IMMU-KEY	<ul style="list-style-type: none">• Inactive communication between NATS antenna amp. and BCM.• Ignition key is malfunctioning.	<ul style="list-style-type: none">• Harness or connectors (The NATS antenna amp. circuit is open or shorted)• Ignition key• NATS antenna amp.• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert ignition key into the key cylinder.
2. Turn ignition switch ON.
3. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-154, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011289080

Regarding Wiring Diagram information, refer to [SEC-196, "Wiring Diagram - Without Intelligent Key System"](#).

1.CHECK NATS ANTENNA AMP. INSTALLATION

Check NATS antenna amp. installation. Refer to [SEC-205, "Removal and Installation"](#).

Is the inspection result normal?

- YES >> GO TO 2
NO >> Reinstall NATS antenna amp. correctly.

2.CHECK NVIS (NATS) IGNITION KEY ID CHIP

Start engine with another registered NATS ignition key.

Does the engine start?

- YES >>
 - Ignition key ID chip is malfunctioning.
 - Replace the ignition key.
 - Perform initialization with CONSULT.For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.
- NO >> GO TO 3

3.CHECK POWER SUPPLY FOR NATS ANTENNA AMP.

1. Turn ignition switch ON.
2. Check voltage between NATS antenna amp. connector M21 terminal 1 and ground.

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]


1 - Ground

: Battery voltage

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair or replace fuse or harness.

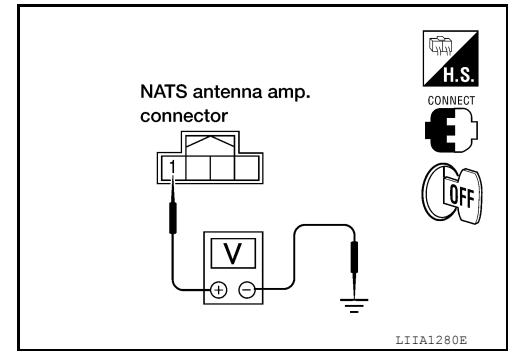

4. CHECK NATS ANTENNA AMP. GROUND LINE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect NATS antenna amp. connector.
3. Check continuity between NATS antenna amp. connector M21 terminal 3 and ground.

3 - Ground

: Continuity should exist.


Is the inspection result normal?

YES >> GO TO 5

NO >> • Repair or replace harness.


NOTE:

If harness is OK, replace BCM, refer to [BCS-54, "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immo-bilizer mode and follow the on-screen instructions.

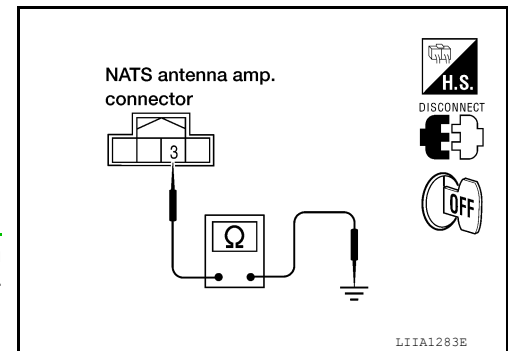

5. CHECK NATS ANTENNA AMP. SIGNAL LINE- 1

1. Connect NATS antenna amp. connector.
2. Turn ignition switch ON.
3. Check voltage between NATS antenna amp. connector M21 terminal 2 and ground with analog tester.

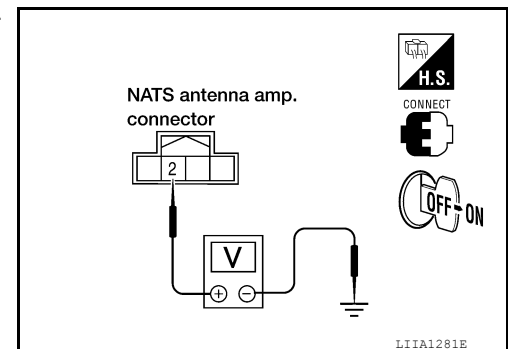

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
(+)	(-)		
2	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES >> GO TO 6

NO >> • Repair or replace harness.

NOTE:

P1614 CHAIN OF IMMU-KEY


< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

If harness is OK, replace BCM, refer to [BCS-54, "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

6.CHECK NATS ANTENNA AMP. SIGNAL LINE- 2

Check voltage between NATS antenna amp. connector M21 terminal 4 and ground with analog tester.

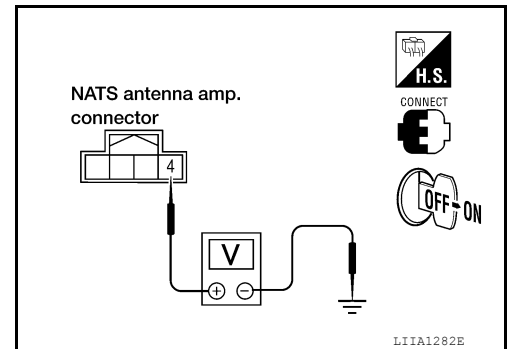

Terminals		Position of ignition key cylinder	Voltage (V) (Approx.)
(+)	(-)		
4	Ground	Before inserting ignition key	Battery voltage
		After inserting ignition key	Pointer of tester should move for approx. 30 seconds, then return to battery voltage
		Just after turning ignition switch ON	Pointer of tester should move for approx. 1 second, then return to battery voltage

Is the inspection result normal?

YES >> NATS antenna amp. is malfunctioning.

NO >> • Repair or replace harness.

NOTE:

If harness is OK, replace BCM, refer to [BCS-54, "Removal and Installation"](#). Perform initialization with CONSULT. For initialization, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

P1615 DIFFERENCE OF KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

P1615 DIFFERENCE OF KEY

Description

INFOID:0000000011289081

Performs ID verification through BCM when ignition knob switch is pressed.

Prohibits the release of steering lock or start of engine when an unregistered ID of mechanical key is used.

DTC Logic

INFOID:0000000011289082

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1615	DIFFERENCE OF KEY	The ID verification results between BCM and mechanical key are NG. The registration is necessary.	Mechanical key

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert mechanical key into the key cylinder.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-157, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000011289083

1.PERFORM INITIALIZATION

Perform initialization with CONSULT. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> Mechanical key was unregistered.
NO >> BCM is malfunctioning.
 - Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
 - Perform initialization again

SEC

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000011541087

Regarding Wiring Diagram information, refer to [BCS-46. "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	22 (15A)
70		F (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	59 (10A)

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

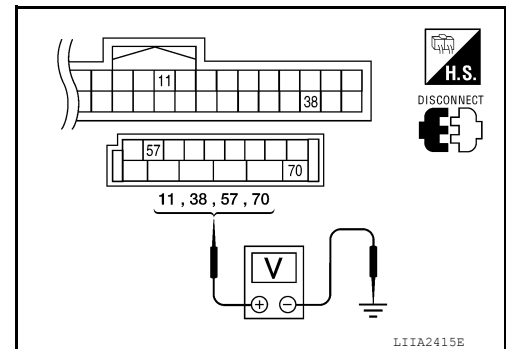

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

3. CHECK GROUND CIRCUIT

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


[WITHOUT INTELLIGENT KEY SYSTEM]

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

Does continuity exist?

- YES >> Inspection End.
- NO >> Repair or replace harness.

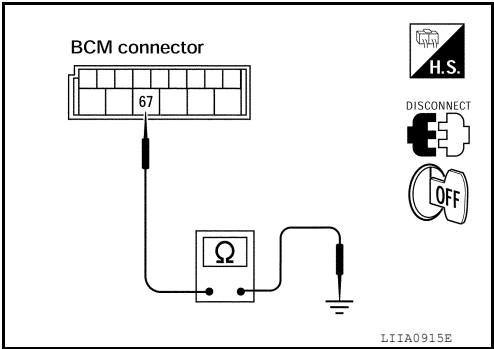

A

B

C

D

E

F

G

H

I

J

L

M

N

O

P

SEC

KEY CYLINDER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

KEY CYLINDER SWITCH

Description

INFOID:0000000011289085

The main power window and door lock/unlock switch detects condition of the door key cylinder switch and transmits to BCM as the LOCK or UNLOCK signal.

Component Function Check

INFOID:0000000011289086

1.CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL

Check "KEY CYL LK-SW" AND "KEY CYL UN-SW" in DATA MONITOR mode for "POWER DOOR LOCK SYSTEM" with CONSULT.

Monitor item	Condition
KEY CYL LK-SW	Lock : ON
	Neutral / Unlock : OFF
KEY CYL UN-SW	Unlock : ON
	Neutral / Lock : OFF

Is the inspection result normal?

YES >> Key cylinder switch is OK.

NO >> Refer to [SEC-160. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011289087

Regarding Wiring Diagram information, refer to [SEC-183. "Wiring Diagram"](#).

1.CHECK DOOR KEY CYLINDER SWITCH

① With CONSULT

Check front door lock assembly LH (key cylinder switch) ("KEY CYL LK-SW") and ("KEY CYL UN-SW") in DATA MONITOR mode with CONSULT.

- When key inserted in left front key cylinder is turned to LOCK:

KEY CYL LK-SW : ON


- When key inserted in left front key cylinder is turned to UNLOCK:

KEY CYL UN-SW : ON

② Without CONSULT

Check voltage between main power window and door lock/unlock switch connector D7 terminals 4, 6 and ground.

Connector	Terminals		Condition of left front key cylinder	Voltage (V) (Approx.)
	(+)	(-)		
D7	4	Ground	Neutral/Unlock	5
			Lock	0
	6		Neutral/Lock	5
			Unlock	0

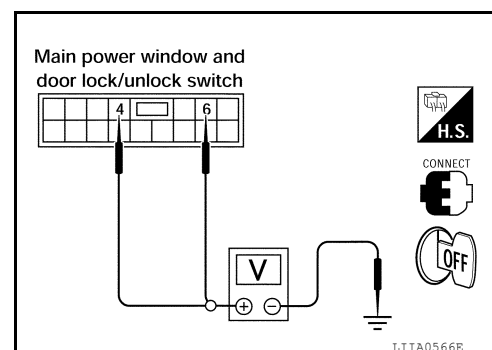

Is the inspection result normal?

YES >> Key cylinder switch signal is OK.

KEY CYLINDER SWITCH

[WITHOUT INTELLIGENT KEY SYSTEM]


< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 2

2.CHECK DOOR KEY CYLINDER SWITCH GROUND HARNESS

1. Turn ignition switch OFF.
2. Disconnect front door lock assembly LH (key cylinder switch).
3. Check continuity between front door lock assembly LH (key cylinder switch) connector D14 terminal 5 and body ground.

Connector	Terminals	Continuity
D14	5 – Ground	Yes

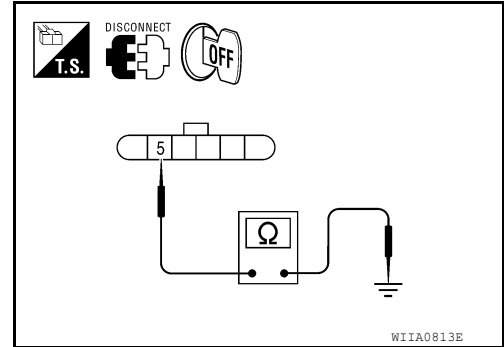

Is the inspection result normal?


YES >> GO TO 3

NO >> Repair or replace harness.

3.CHECK DOOR KEY CYLINDER SWITCH

Check continuity between front door lock assembly LH (key cylinder switch) terminals.

Terminals	Condition	Continuity
1 – 5	Key is turned to UNLOCK or neutral.	No
	Key is turned to LOCK.	Yes
5 – 6	Key is turned to LOCK or neutral.	No
	Key is turned to UNLOCK.	Yes

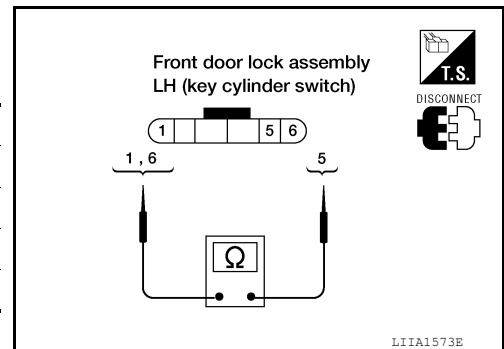

Is the inspection result normal?


YES >> GO TO 4

NO >> Replace front door lock assembly LH (key cylinder switch). Refer to [DLK-398. "Removal and Installation"](#).

4.CHECK DOOR KEY CYLINDER HARNESS

Check continuity between main power window and door lock/unlock switch connector (A) D7 terminals 4, 6 and front door lock assembly LH (key cylinder switch) connector (B) D14 terminals 1, 6 and body ground.

Connector	Terminals	Connector	Terminals	Continuity
A: D7	4	B: D14	1	Yes
	6		6	Yes
	4, 6	Ground		No

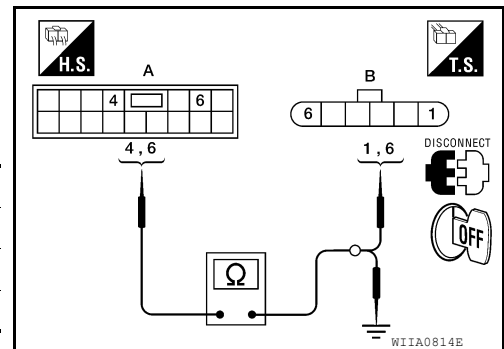

Is the inspection result normal?

YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-94. "Removal and Installation"](#).

NO >> Repair or replace harness.

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

HORN FUNCTION

Symptom Table

INFOID:0000000011289088

HAZARD AND HORN REMINDER FUNCTION MALFUNCTION

NOTE:

- Before performing the diagnosis in the following table, check "Work flow". Refer to [DLK-8, "Work Flow"](#).
- If the following symptoms are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

Conditions of Vehicle (Operating Conditions)

- "ANSWER BACK FUNCTION" is ON when setting on CONSULT.
- Ignition switch is in OFF position.
- All doors are closed.

Symptom	Diagnosis/service procedure	Reference page
Hazard reminder does not operate by keyfob. (Horn reminder operate.)	1. Check "HAZARD LAMP SET" setting in "WORK SUPPORT".	BCS-28
	2. Check hazard function.	DLK-115
	3. Check keyfob battery.	DLK-293
Horn reminder does not operate by keyfob. (Hazard reminder operate.)	1. Check "HORN WITH KEYLESS LOCK" setting in "WORK SUPPORT".	BCS-28
	2. Check horn function.	DLK-111
	3. Check Intermittent Incident.	GI-43

VEHICLE SECURITY INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY INDICATOR

Description

INFOID:0000000011289089

- Vehicle security indicator is built in combination meter.
- NATS (Nissan Anti-Theft System) and vehicle security system conditions are indicated by blink or illumination of vehicle security indicator.

Component Function Check

INFOID:0000000011289090

1.CHECK FUNCTION

1. Perform "THEFT IND" in the "Active Test" mode with CONSULT.
2. Check vehicle security indicator operation.

Test item		Description	
THEFT IND	ON	Vehicle security indicator	ON
	OFF		OFF

Is the inspection result normal?

- YES >> Inspection End.
NO >> Refer to [SEC-163, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011289091

Regarding Wiring Diagram information, refer to [SEC-183, "Wiring Diagram"](#).

1.CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check voltage between combination meter harness connector and ground.

(+)		(-)	Voltage (V)
Combination meter			
Connector	Terminal		
M24	8	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 19, located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between combination meter and fuse.

2.CHECK SECURITY INDICATOR LAMP SIGNAL

1. Connect combination meter connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V)
BCM			
Connector	Terminal		
M18	23	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-54, "Removal and Installation"](#).
NO >> GO TO 3.

3.CHECK SECURITY INDICATOR LAMP CIRCUIT

VEHICLE SECURITY INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector and BCM harness connector.

Combination meter		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M24	28	M18	23	Yes

3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M24	28		No

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-99, "Removal and Installation"](#).
NO >> Repair or replace harness.

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000011541092

NOTE:

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Check Intelligent Key relative signal strength
- Confirm vehicle Intelligent Key antenna signal strength
- Test remote keyless entry keyfob relative signal strength

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
ACC ON SW	Ignition switch OFF or ON	Off
	Ignition switch ACC	On
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm ² , psi
AUTO LIGHT SW	Lighting switch OFF	Off
	Lighting switch AUTO	On
BACK DOOR SW	Back door closed	Off
	Back door opened	On
BRAKE SW	Brake pedal released	Off
	Brake pedal applied	On
BUCKLE SW	Seat belt buckle unfastened	Off
	Seat belt buckle fastened	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CARGO LAMP SW	Cargo lamp switch OFF	Off
	Cargo lamp switch ON	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the LOCK side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the UNLOCK side	On
DOOR SW-AS	Front door RH closed	Off
	Front door RH opened	On
DOOR SW-DR	Front door LH closed	Off
	Front door LH opened	On
DOOR SW-RL	Rear door LH closed	Off
	Rear door LH opened	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
DOOR SW-RR	Rear door RH closed	Off
	Rear door RH opened	On
FAN ON SIG	Blower motor fan switch OFF	Off
	Blower motor fan switch ON	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER INT	Front wiper switch OFF	Off
	Front wiper switch INT	On
FR WIPER STOP	Any position other than front wiper stop position	Off
	Front wiper stop position	On
HAZARD SW	When hazard switch is not pressed	Off
	When hazard switch is pressed	On
HEAD LAMP SW1	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HEAD LAMP SW2	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HI BEAM SW	High beam switch OFF	Off
	High beam switch HI	On
ID REGST FL1	ID registration of front left tire incomplete	YET
	ID registration of front left tire complete	DONE
ID REGST FR1	ID registration of front right tire incomplete	YET
	ID registration of front right tire complete	DONE
ID REGST RL1	ID registration of rear left tire incomplete	YET
	ID registration of rear left tire complete	DONE
ID REGST RR1	ID registration of rear right tire incomplete	YET
	ID registration of rear right tire complete	DONE
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
I-KEY LOCK ¹	LOCK button of Intelligent Key is not pressed	Off
	LOCK button of Intelligent Key is pressed	On
I-KEY PANIC ¹	PANIC button of Intelligent Key is not pressed	Off
	PANIC button of Intelligent Key is pressed	On
I-KEY PW DWN ¹	UNLOCK button of Intelligent Key is not pressed	Off
	UNLOCK button of Intelligent Key is pressed for greater than 3 seconds and driver's window operating in DOWN direction	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
I-KEY UNLOCK ¹	UNLOCK button of Intelligent Key is not pressed	Off
	UNLOCK button of Intelligent Key is pressed	On
KEY CYL LK-SW	Door key cylinder LOCK position	On
	Door key cylinder other than LOCK position	Off
KEY CYL UN-SW	Door key cylinder UNLOCK position	On
	Door key cylinder other than UNLOCK position	Off
KEY ON SW	Mechanical key is removed from key cylinder	Off
	Mechanical key is inserted to key cylinder	On
KEYLESS LOCK ²	LOCK button of key fob is not pressed	Off
	LOCK button of key fob is pressed	On
KEYLESS PANIC ²	PANIC button of key fob is not pressed	Off
	PANIC button of key fob is pressed	On
KEYLESS UNLOCK ²	UNLOCK button of key fob is not pressed	Off
	UNLOCK button of key fob is pressed	On
LIGHT SW 1ST	Lighting switch OFF	Off
	Lighting switch 1st	On
OIL PRESS SW	<ul style="list-style-type: none"> Ignition switch OFF or ACC Engine running 	Off
	Ignition switch ON	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5V
	Dark outside of the vehicle	Close to 0V
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
PUSH SW ¹	Return to ignition switch to LOCK position	Off
	Press ignition switch	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER INT	Rear wiper switch OFF	Off
	Rear wiper switch INT	On
RR WIPER ON	Rear wiper switch OFF	Off
	Rear wiper switch ON	On
RR WIPER STOP	Rear wiper stop position	Off
	Other than rear wiper stop position	On
RR WIPER STP2	Rear wiper stop position	Off
	Other than rear wiper stop position	On
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
VEHICLE SPEED	While driving	Equivalent to speedometer reading
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off
	Low tire pressure warning lamp in combination meter ON	On

1: With Intelligent Key

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

2: With remote keyless entry system

Terminal Layout

INFOID:0000000011541093

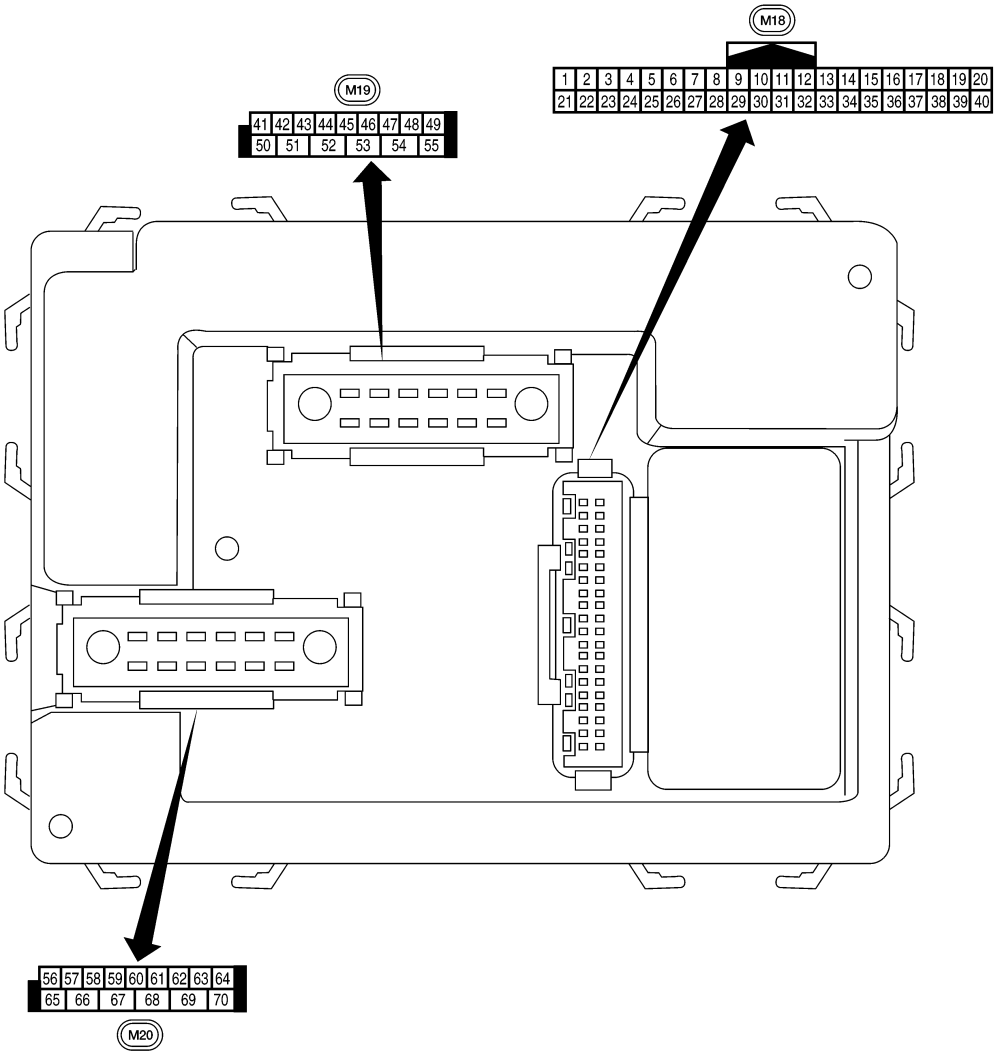

Physical Values


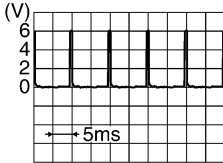

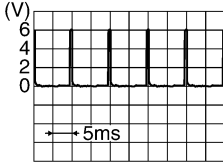
AWMIA15422Z

INFOID:0000000011541094

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR/W	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	SB	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
3	G/Y	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
4	Y	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
5	G/B	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
6	V	Combination switch input 1				
9	R/G	Stop lamp switch	Input	OFF	Brake pedal depressed	Battery voltage
					Brake pedal released	0V
10	G	Hazard lamp flash	Input	OFF	ON (opening or closing)	0V
					OFF (other than above)	Battery voltage
11	O	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	R/L	Front door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
13	GR	Rear door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	L/W	Tire pressure warning check connector	Input	OFF	—	5V
18	P	Remote keyless entry receiver and optical sensor (ground)	Output	OFF	—	0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[WITHOUT INTELLIGENT KEY SYSTEM]

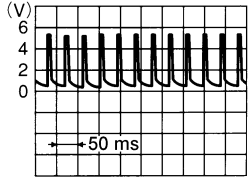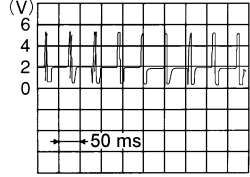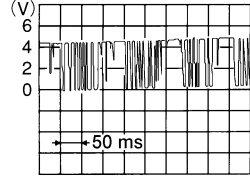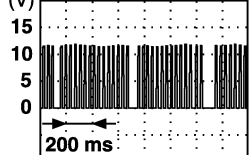Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
19	V/W	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 LI1A1893E
20	G/W	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	 LI1A1894E
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 LI1A1895E
21	G	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	G	BUS	—	—	Ignition switch ON or power window timer operates	 PI1A2344E
23	G/O	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
26	Y/L	Rear wiper auto stop switch 2	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	0V
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	Battery voltage
					Reverse sweep (clockwise direction)	Fluctuating
27	W/R	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

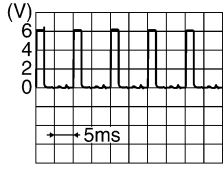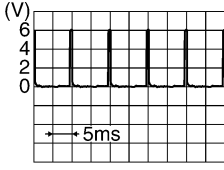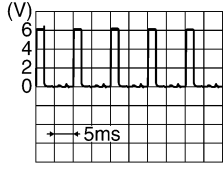Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
28	L/R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	W/B	Hazard switch	Input	OFF	ON	0V
					OFF	5V
32	R/G	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
33	R/Y	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
34	L	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
35	O/B	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	R/W	Combination switch output 1				
37 ¹	B/R	Key switch and ignition knob switch	Input	OFF	Intelligent Key inserted	Battery voltage
					Intelligent Key removed	0V
37 ²	B/R	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key removed	0V
38	W/L	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
41	GR/R	Rear window defogger switch	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
42	GR	Glass hatch ajar switch	Input	ON	Glass hatch open	0
					Glass hatch closed	Battery

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N



O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



[WITHOUT INTELLIGENT KEY SYSTEM]

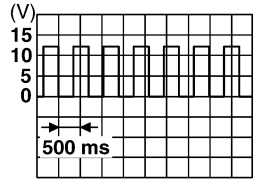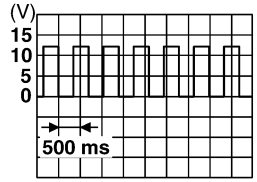Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
43	R/B	Back door switch (without power back door) or back door latch (door ajar switch) (with power back door)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
44	O	Rear wiper auto stop switch 1	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	Battery voltage
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	0V
					Reverse sweep (clockwise direction)	Fluctuating
47	SB	Front door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
48	R/Y	Rear door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
49	R	Cargo lamp	Output	OFF	Any door open (ON)	0V
					All doors closed (OFF)	Battery voltage
51	Y/B	Trailer turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
52	G/B	Trailer turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
54	Y	Rear wiper output circuit 2	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	0V
					Forward sweep (counterclockwise direction)	0V
					B Position (full counterclockwise stop position)	Battery voltage
					Reverse sweep (clockwise direction)	Battery voltage
55	SB	Rear wiper output circuit 1	Output	ON	OFF	0
					ON	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

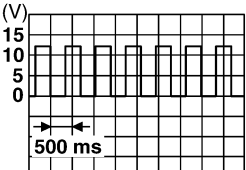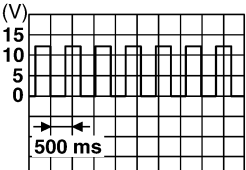Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
56	R/G	Battery saver output	Output	OFF	10 minutes after ignition switch is turned OFF	0V
				ON	—	Battery voltage
57	Y/R	Battery power supply	Input	OFF	—	Battery voltage
58	W/R	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more
					When optical sensor is not illuminated	0.6V or less
59	G	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
60	G/B	Turn signal (left)	Output	ON	Turn left ON	 <small>SKIA3009J</small>
61	G/Y	Turn signal (right)	Output	ON	Turn right ON	 <small>SKIA3009J</small>
62	R/W	Foot lamp LH and RH	Output	OFF	ON (any door open)	0V
					OFF (all doors closed)	Battery voltage
63	L	Interior room/map lamp	Output	OFF	Any door switch	ON (open) 0V OFF (closed) Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
					ON (lock)	Battery voltage
66	G/Y	Front door lock actuator RH, rear door lock actuators LH/RH and back door lock actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
67	B	Ground	Input	ON	—	0V
68	W/L	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	W/R	Power window power supply	Output	—	—	Battery voltage
70	W/B	Battery power supply	Input	OFF	—	Battery voltage

1: With Intelligent Key system

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

2: With remote keyless entry system

Fail Safe

INFOID:0000000011541095

Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

DTC Inspection Priority Chart

INFOID:0000000011541096

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none">• U1000: CAN COMM CIRCUIT
2	<ul style="list-style-type: none">• B2190: NATS ANTENNA AMP• B2191: DIFFERENCE OF KEY• B2192: ID DISCORD BCM-ECM• B2193: CHAIN OF BCM-ECM• B2013: STRG COMM 1• B2552: INTELLIGENT KEY• B2590: NATS MALFUNCTION
3	<ul style="list-style-type: none">• C1729: VHCL SPEED SIG ERR• C1735: IGNITION SIGNAL
4	<ul style="list-style-type: none">• C1708: [NO DATA] FL• C1709: [NO DATA] FR• C1710: [NO DATA] RR• C1711: [NO DATA] RL• C1712: [CHECKSUM ERR] FL• C1713: [CHECKSUM ERR] FR• C1714: [CHECKSUM ERR] RR• C1715: [CHECKSUM ERR] RL• C1716: [PRESSDATA ERR] FL• C1717: [PRESSDATA ERR] FR• C1718: [PRESSDATA ERR] RR• C1719: [PRESSDATA ERR] RL• C1720: [CODE ERR] FL• C1721: [CODE ERR] FR• C1722: [CODE ERR] RR• C1723: [CODE ERR] RL• C1724: [BATT VOLT LOW] FL• C1725: [BATT VOLT LOW] FR• C1726: [BATT VOLT LOW] RR• C1727: [BATT VOLT LOW] RL

DTC Index

INFOID:0000000011541097

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	BCS-29
B2013: STRG COMM 1	—	—	—	SEC-30
B2190: NATS ANTENNA AMP	—	—	—	SEC-33 (with I- Key), SEC-143 (without I-Key)
B2191: DIFFERENCE OF KEY	—	—	—	SEC-36 (with I- Key), SEC-146 (without I-Key)
B2192: ID DISCORD BCM-ECM	—	—	—	SEC-37 (with I- Key), SEC-147 (without I-Key)
B2193: CHAIN OF BCM-ECM	—	—	—	SEC-39 (with I- Key), SEC-149 (without I-Key)
B2552: INTELLIGENT KEY	—	—	—	SEC-41
B2590: NATS MALFUNCTION	—	—	—	SEC-42
C1708: [NO DATA] FL	—	—	—	WT-15
C1709: [NO DATA] FR	—	—	—	WT-17
C1710: [NO DATA] RR	—	—	—	WT-17
C1711: [NO DATA] RL	—	—	—	WT-17
C1712: [CHECKSUM ERR] FL	—	—	—	WT-17
C1713: [CHECKSUM ERR] FR	—	—	—	WT-17
C1714: [CHECKSUM ERR] RR	—	—	—	WT-17
C1715: [CHECKSUM ERR] RL	—	—	—	WT-17
C1716: [PRESSDATA ERR] FL	—	—	—	WT-19
C1717: [PRESSDATA ERR] FR	—	—	—	WT-17
C1718: [PRESSDATA ERR] RR	—	—	—	WT-17
C1719: [PRESSDATA ERR] RL	—	—	—	WT-17
C1720: [CODE ERR] FL	—	—	—	WT-17
C1721: [CODE ERR] FR	—	—	—	WT-17
C1722: [CODE ERR] RR	—	—	—	WT-17
C1723: [CODE ERR] RL	—	—	—	WT-17
C1724: [BATT VOLT LOW] FL	—	—	—	WT-17
C1725: [BATT VOLT LOW] FR	—	—	—	WT-17
C1726: [BATT VOLT LOW] RR	—	—	—	WT-17
C1727: [BATT VOLT LOW] RL	—	—	—	WT-17
C1729: VHCL SPEED SIG ERR	—	—	—	WT-21
C1735: IGN_CIRCUIT_OPEN	—	—	—	WT-22

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000011541099

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1, 2, 3, 4
AC COMP REQ	A/C switch OFF		Off
	A/C switch ON		On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		<ul style="list-style-type: none"> Front fog lamp switch ON Daytime light activated (Canada only) 	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
ST RLY REQ	Ignition switch OFF or ACC		Off
	Ignition switch START		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
RR DEF REQ	Rear defogger switch OFF		Off
	Rear defogger switch ON		On
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
DTRL REQ	Not operated		Off
	Daytime Running Lights ON		On
THFT HRN REQ	Not operated		Off
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 		On


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION > [WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
HORN CHIRP	Not operated	Off
	Door locking with keyfob or Intelligent Key (if equipped) (horn chirp mode)	On

Terminal Layout

INFOID:0000000011541100

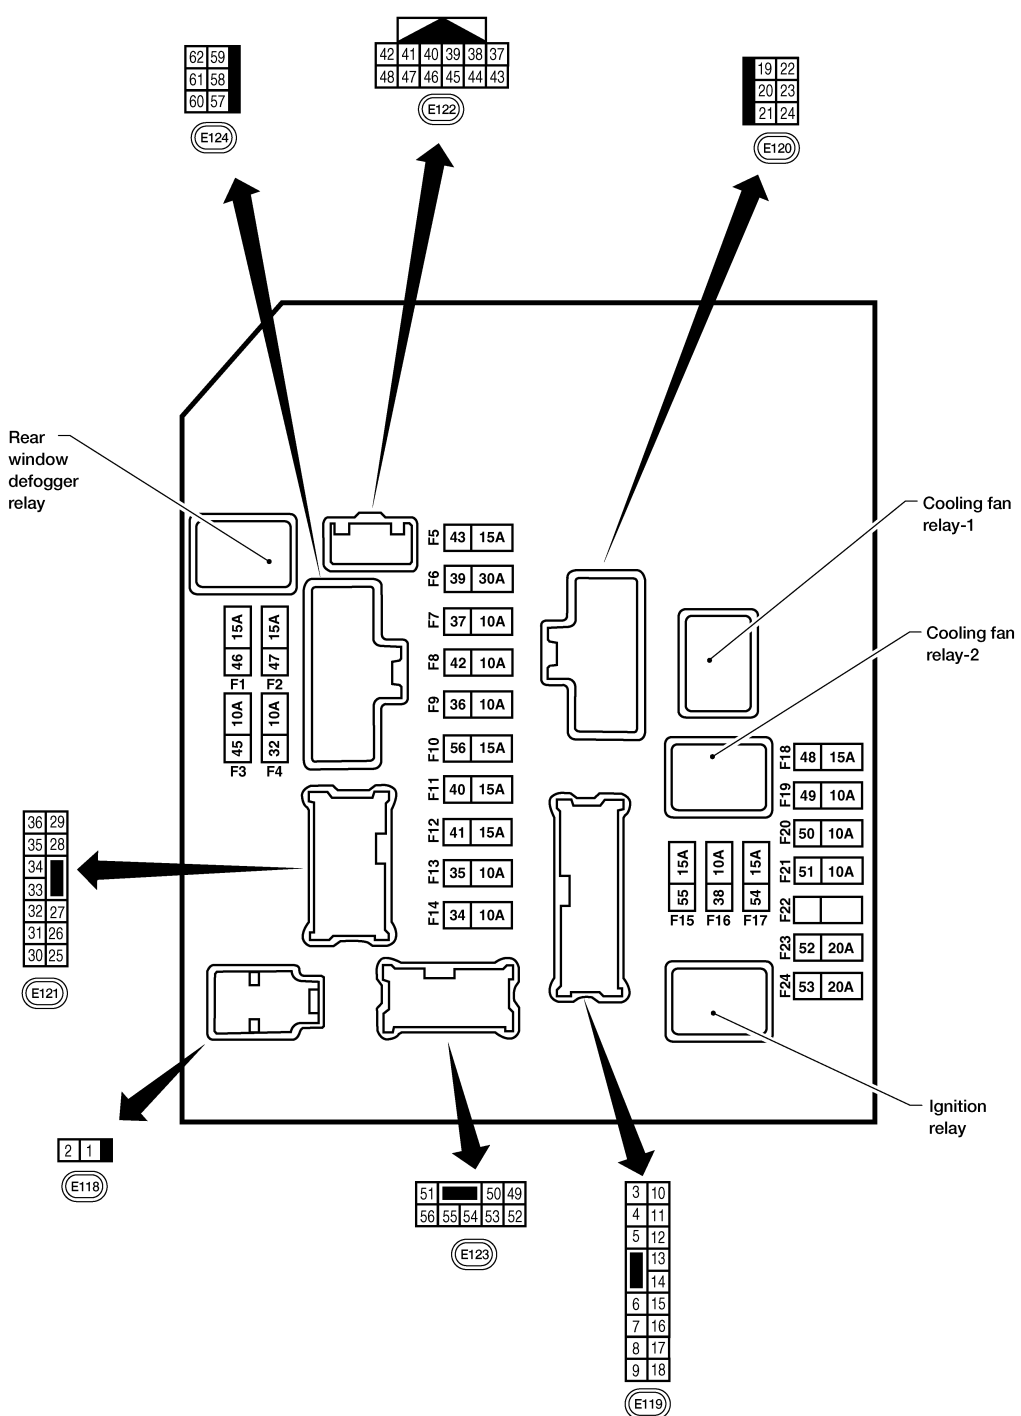

NOTE:
Numbers preceded by an "F" represent the fuse numbers imprinted on the IPDM E/R. The other numbers represent the fuse numbers as they appear in the wiring diagrams.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]




Physical Values

INFOID:0000000011541101

PHYSICAL VALUES

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
1	B/Y	Battery power supply	Input	OFF	—	Battery voltage
2	R	Battery power supply	Input	OFF	—	Battery voltage
3	BR	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
4	W/L	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
6	L	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
7	W/B	ECM relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
8	R/B	Fuse 54	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
10	G	Fuse 45 (Canada only)	Output	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
11	Y/B	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage
					A/C switch OFF or defrost A/C switch	0V
12	L/W	Ignition switch supplied power	Input	—	OFF or ACC	0V
					ON or START	Battery voltage
13	B/Y	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
14	Y/R	Fuse 49	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	LG/B	Fuse 50	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
16	G	Fuse 51	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
17	W	Fuse 55	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
19	W/R	Starter motor	Output	START	—	Battery voltage
21	BR	Ignition switch supplied power	Input	—	OFF or ACC	0V
					START	Battery voltage
22	G	Battery power supply	Output	OFF	—	Battery voltage
23	GR/W	Door mirror defogger output signal	Output	—	When rear defogger switch is ON	Battery voltage
					When rear defogger switch is OFF	0V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
< ECU DIAGNOSIS INFORMATION > [WITHOUT INTELLIGENT KEY SYSTEM]

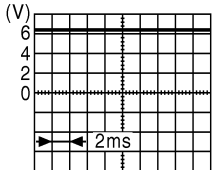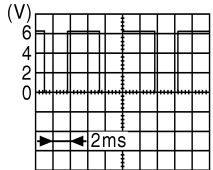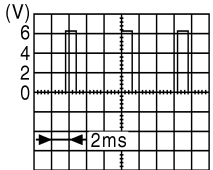Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
24	L	Cooling fan relay	Output	—	Conditions correct for cooling fan operation	Battery voltage
					Conditions not correct for cooling fan operation	0V
27	W/B	Fuse 38	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
30	W	Fuse 53	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
32	L	Wiper low speed signal	Output	ON or START	Wiper switch OFF	0V
					Wiper switch LO or INT	Battery voltage
35	L/B	Wiper high speed signal	Output	ON or START	Wiper switch OFF, LO, INT	0V
					Wiper switch HI	Battery voltage
37	Y	Power generation command signal	Output	—	Ignition switch ON	 <p align="right">JPMIA0001GB</p> <p align="center">6.3 V</p>
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 <p align="right">JPMIA0002GB</p> <p align="center">3.8 V</p>
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 <p align="right">JPMIA0003GB</p> <p align="center">1.4 V</p>
38	B	Ground	Input	—	—	0V
39	L	CAN-H	—	ON	—	—
40	P	CAN-L	—	ON	—	—
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage
					Engine stopped	0V
43	L/Y	Wiper auto stop signal	Input	ON or START	Wiper switch OFF, LO, INT	Battery voltage
44	BR	Daytime light relay control (Canada only)	Input	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
< ECU DIAGNOSIS INFORMATION > [WITHOUT INTELLIGENT KEY SYSTEM]

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
45	G/W	Horn relay control	Input	ON	When door locks are operated using keyfob or Intelligent Key (if equipped) (OFF → ON)*	Battery voltage → 0V
46	GR	Fuel pump relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
47	O	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
48	B/R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V
					Selector lever any other position	Battery voltage
49	R/L	Trailer tow relay Illumination	Output	ON	Lighting switch must be in the 1st position	OFF 0V
					ON	Battery voltage
50	W/R	Front fog lamp (LH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF 0V
					ON	Battery voltage
51	W/R	Front fog lamp (RH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch	OFF 0V
					ON	Battery voltage
52	L	LH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
54	R/Y	RH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
56	Y (With DTRL)	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
56	L/W (Without DTRL)	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
57	R/L	Parking, license, and tail lamp	Output	ON	Lighting switch 1st position	OFF 0V
					ON	Battery voltage
59	B	Ground	Input	—	—	0V
60	B	Rear window defogger relay	Output	ON or START	Rear defogger switch ON	Battery voltage
					Rear defogger switch OFF	0V
61	BR	Fuse 32	Output	OFF	—	Battery voltage

*: When horn reminder is ON

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Fail Safe

INFOID:0000000011541102

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none">• Turns ON the cooling fan relay when the ignition switch is turned ON• Turns OFF the cooling fan relay when the ignition switch is turned OFF

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none">• Turns ON the headlamp low relay when the ignition switch is turned ON• Turns OFF the headlamp low relay when the ignition switch is turned OFF• Headlamp high relay OFF
<ul style="list-style-type: none">• Parking lamps• License plate lamps• Tail lamps	<ul style="list-style-type: none">• Turns ON the tail lamp relay when the ignition switch is turned ON• Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none">• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Rear window defogger	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R "DATA MONITOR" that displays "Block" for the item "WIP PROT" while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000011541103

CONSULT display	Fail-safe	TIME ^{NOTE}		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	PCS-16

NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ··· 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

WIRING DIAGRAM

VEHICLE SECURITY SYSTEM

Wiring Diagram

INFOID:0000000011289103

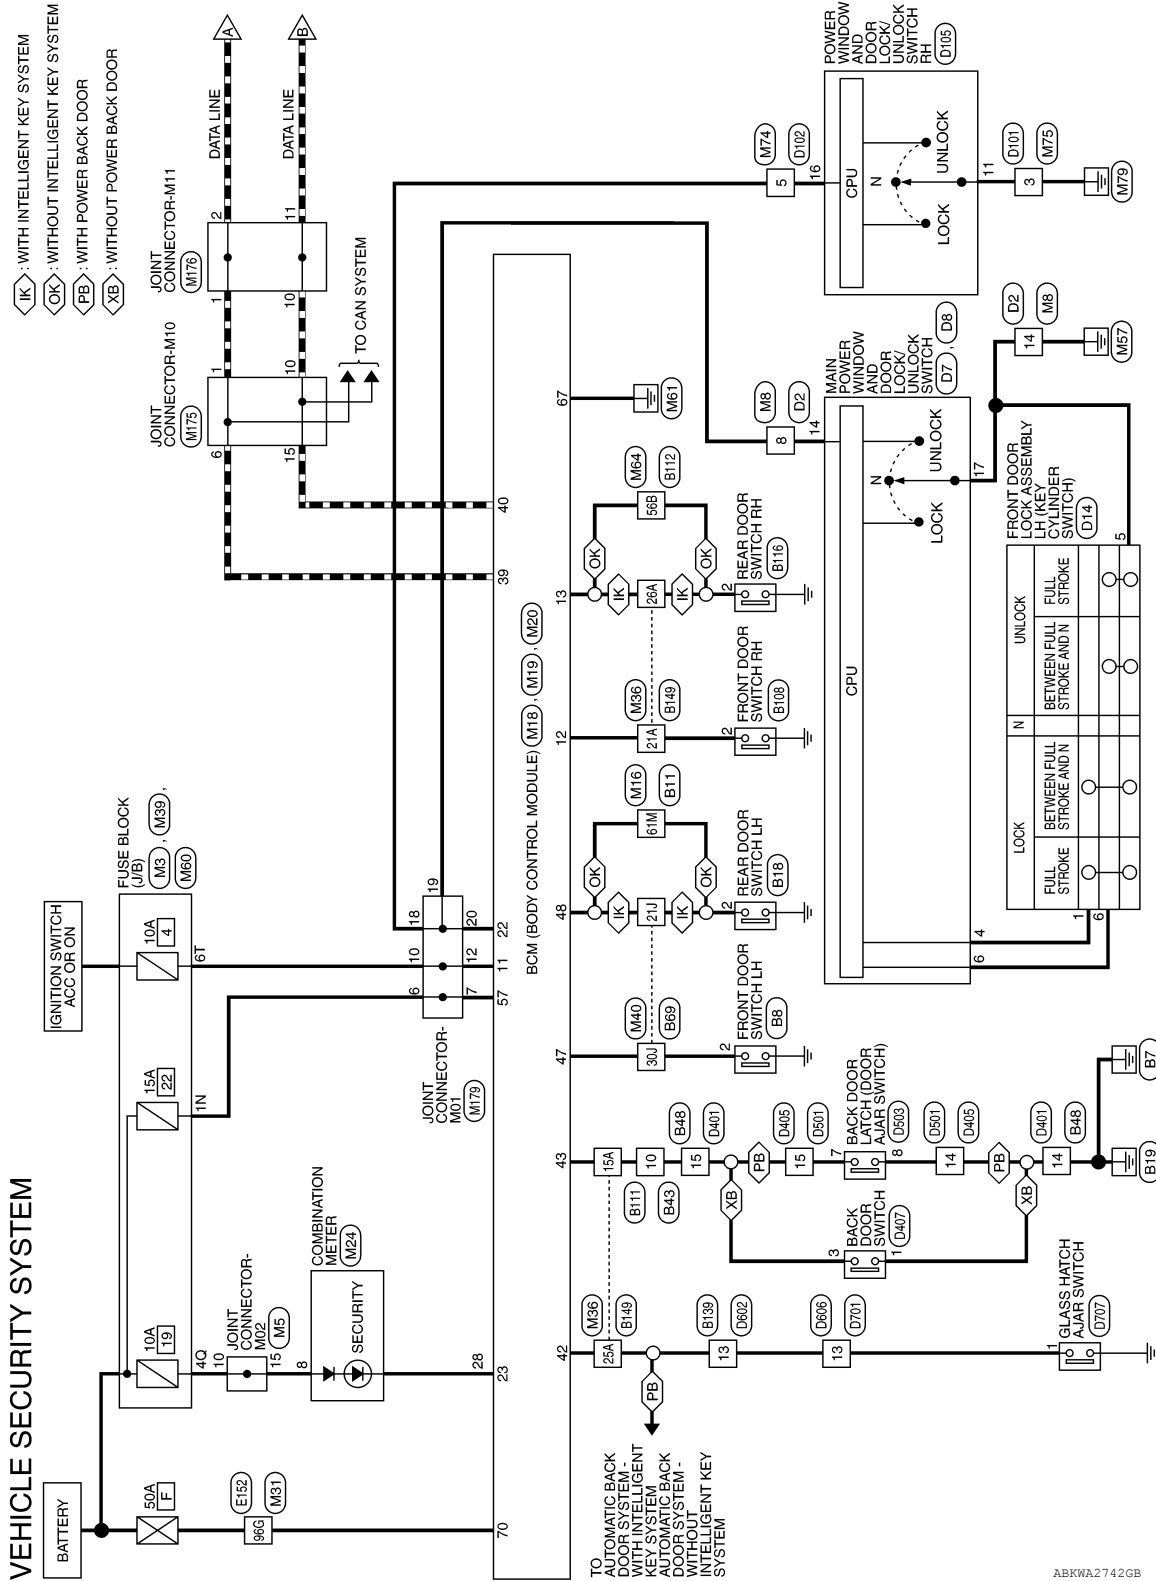


ABKWA2742GB

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >

[WITHOUT INTELLIGENT KEY SYSTEM]

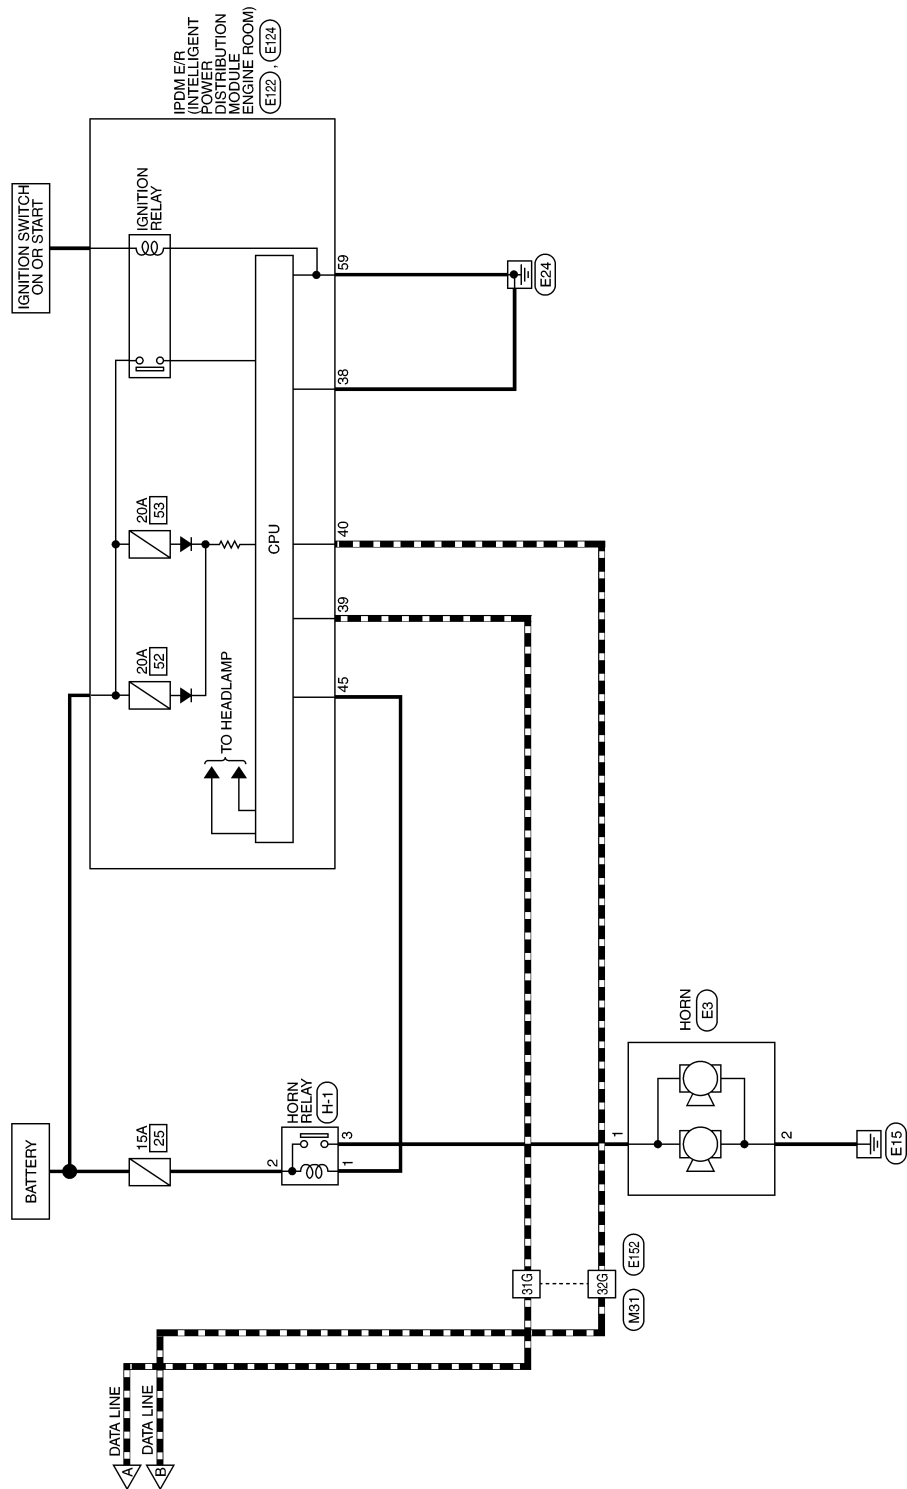

ABKWA254 6GB


VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


VEHICLE SECURITY SYSTEM CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	Y/R	—

Connector No.	M5
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
10	Y/R	—
15	Y/R	—

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
8	G	—
14	B	—

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
61M	R/Y	—

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

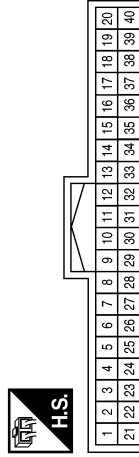

Terminal No.	Color of Wire	Signal Name
11	O	ACC SW
12	R/L	DOOR SW (AS)
13	GR	DOOR SW (RR)
22	G	ANTI-PINCH SERIAL LINK (RX, TX)
23	G/O	SECURITY INDICATOR OUTPUT
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
42	GR	GLASS HATCH SW
43	R/B	BACK DOOR SW
47	SB	DOOR SW (DR)
48	R/Y	DOOR SW (RL)


ABKIA5788GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

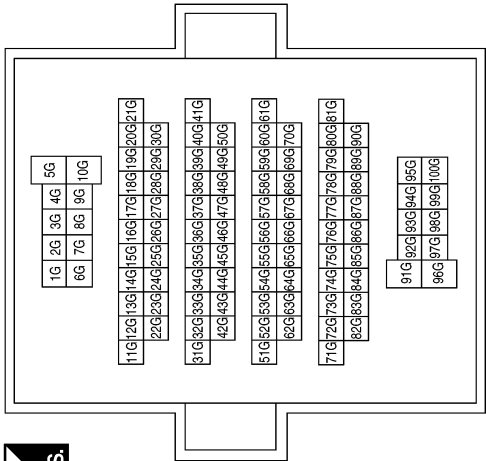

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
96G	W/B	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

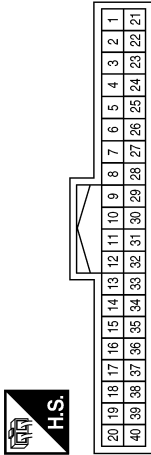

Terminal No.	Color of Wire	Signal Name
8	Y/R	BATTERY
28	G/O	SECURITY

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
57	Y/R	BAT (FUSE)
67	B	GND (POWER)
70	W/B	BAT (F/L)

ABKIA5789GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

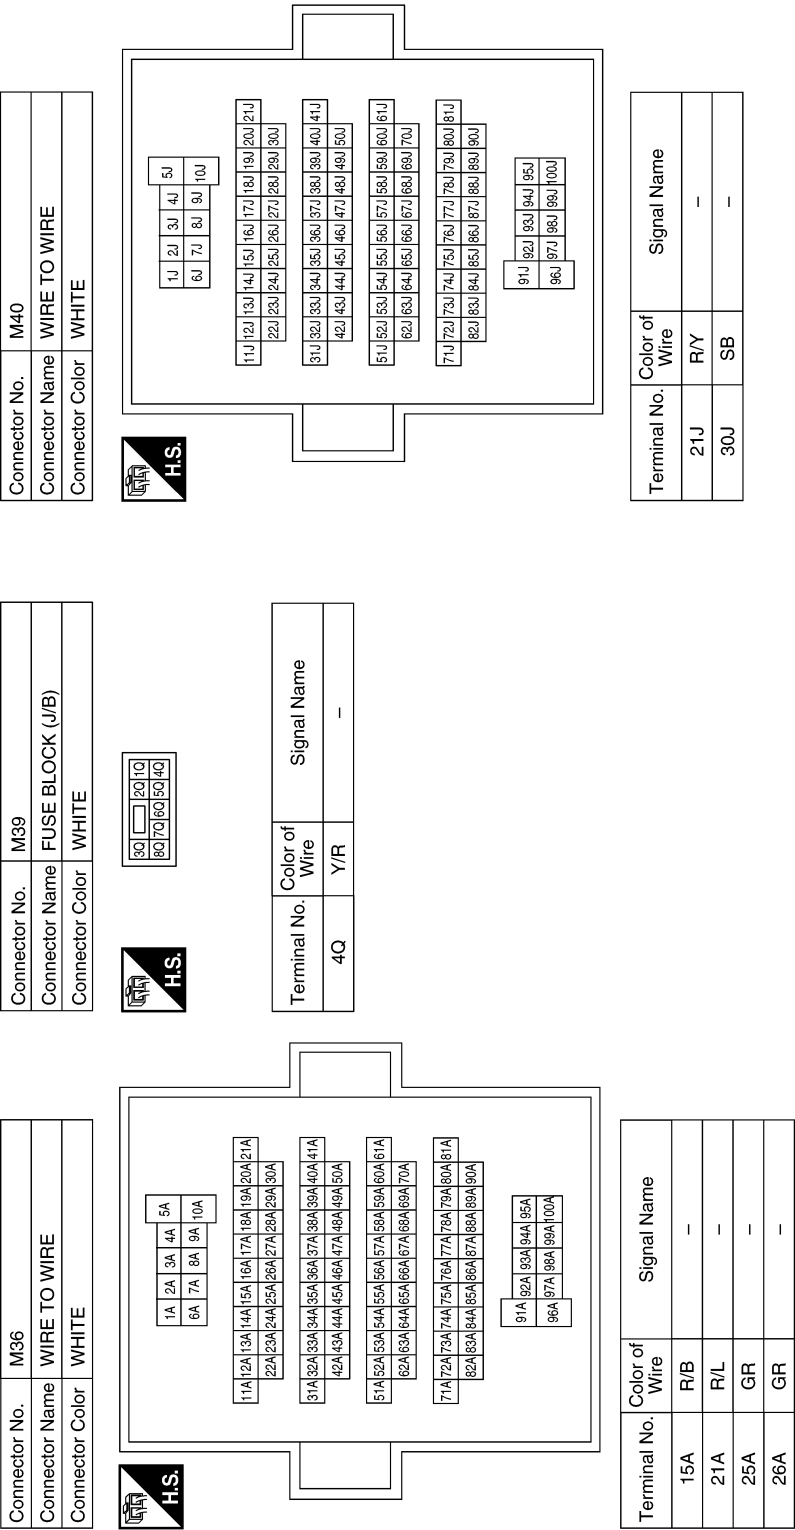

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


Connector No.	M74
Connector Name	WIRE TO WIRE
Connector Color	BROWN

9	8	7	6	5	4	3	2	1		
20	19	18	17	16	15	14	13	12	11	10



Terminal No.	5
Color of Wire	W/V
Signal Name	—

Connector No.	M64
Connector Name	WIRE TO WIRE
Connector Color	WHITE

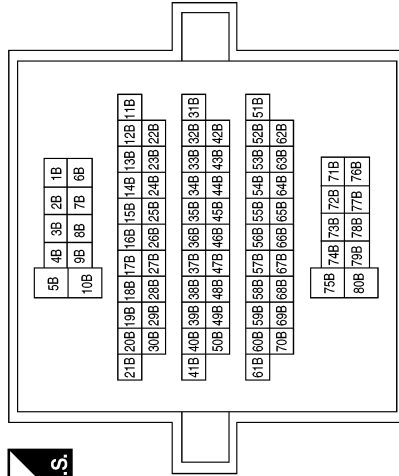

Terminal No.	56B
Color of Wire	GR
Signal Name	—

Connector No.	M176
Connector Name	JOINT CONNECTOR-M11
Connector Color	BLUE

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--



Terminal No.	1
Color of Wire	L
Signal Name	—
Terminal No.	2
Color of Wire	L
Signal Name	—
Terminal No.	10
Color of Wire	P
Signal Name	—
Terminal No.	11
Color of Wire	P
Signal Name	—

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

2T	<div></div>	1T	
6T	5T	4T	3T



Terminal No.	6T
Color of Wire	O
Signal Name	—

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE

4	3	<div></div>	2	1	
10	9	8	7	6	5



Terminal No.	3
Color of Wire	B
Signal Name	—


ABKIA5791GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	M179
Connector Name	JOINT CONNECTOR-M01
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
6	Y/R	-
7	Y/R	-
10	O	-
12	O	-
18	W/V	-
19	G	-
20	G	-

Connector No.	E3
Connector Name	HORN
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
45	G/W	ANT THEFT HORN

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

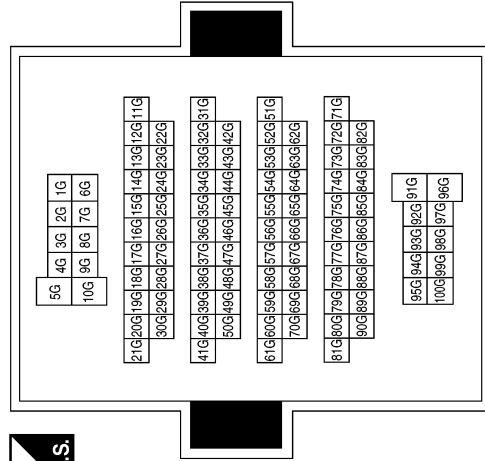

Terminal No.	Color of Wire	Signal Name
31G	L	-
32G	P	-
96G	W/B	-

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

ABKIA5792GB


VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
61M	R/Y	—

Connector No.	B11
Connector Name	WIRE TO WIRE
Connector Color	WHITE

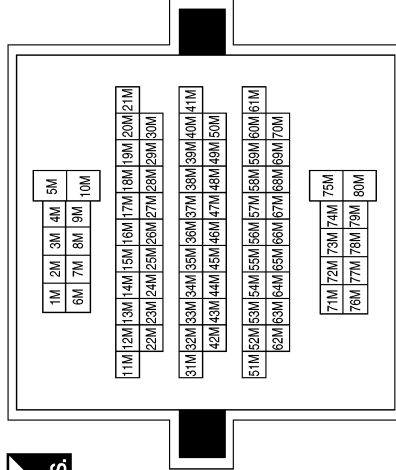


Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	SB	—

Connector No.	B48
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Connector No.	B43
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	B	—
15	R/W	—

Terminal No.	Color of Wire	Signal Name
10	R/W	—

Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	R/Y	—

ABKIA5793GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE




1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
2	R/L	-


Terminal No.	Color of Wire	Signal Name
21J	R/Y	-
30J	SB	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

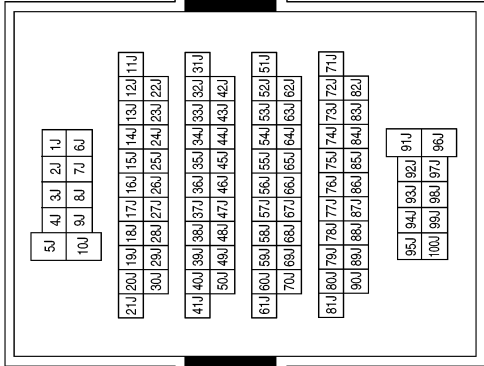

Terminal No.	Color of Wire	Signal Name
56B	GR	-

Connector No.	B112
Connector Name	WIRE TO WIRE
Connector Color	WHITE

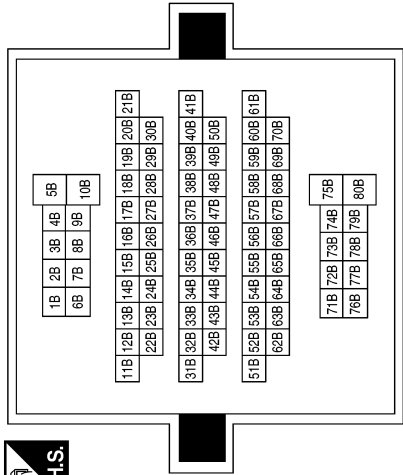

Terminal No.	Color of Wire	Signal Name
10	R/W	-



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16


A
B
C
D
E
F
G
H
I
J
SEC
L
M
N
O
P

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	GR	-

Connector No.	B139
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
13	GR	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

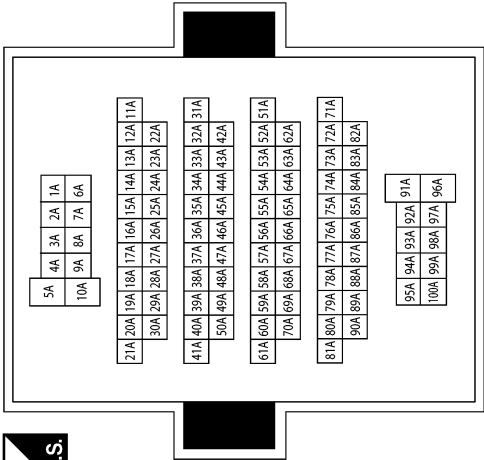

Terminal No.	Color of Wire	Signal Name
15A	R/W	-
21A	R/L	-
25A	GR	-
26A	GR	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
8	LG/W	-
14	B	-

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	D14
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	—
5	B	—
6	R	—

Connector No.	D8
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
17	B	GND

Connector No.	D7
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	L	KEY CYLINDER LOCK
6	R	KEY CYLINDER UNLOCK
14	LG/W	COMMUNICATION

Connector No.	D105
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
11	B	GND
16	LGW	COMMUNICATION

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
5	LG/W	—

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	B	—

ABKIA5796GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	D407
Connector Name	BACK DOOR SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	—
3	R/W	—

Connector No.	D405
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
14	B	—
15	R/W	—

Connector No.	D401
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
14	B	—
15	R/W	—

Connector No.	D602
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
13	GR	—

Connector No.	D503
Connector Name	BACK DOOR LATCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	R/W	—
8	B	—

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
14	B	—
15	R/W	—

ABKIA5797GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	D707
Connector Name	GLASS HATCH AJAR SWITCH
Connector Color	BLACK




Terminal No.	1	Color of Wire	GR	Signal Name	—
--------------	---	---------------	----	-------------	---

Connector No.	D701
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	13	Color of Wire	GR	Signal Name	—
--------------	----	---------------	----	-------------	---

Connector No.	D606
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	13	Color of Wire	GR	Signal Name	—
--------------	----	---------------	----	-------------	---

Connector No.	H-1
Connector Name	FUSE AND FUSIBLE LINK BOX (HORN RELAY)
Connector Color	—

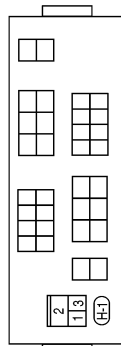

Terminal No.	Color of Wire	Signal Name
1	R/W	—
2	G/B	—
3	G	—

ABKIA5798GB

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N


O

P


NVIS

Wiring Diagram - Without Intelligent Key System

INFOID:000000011289104

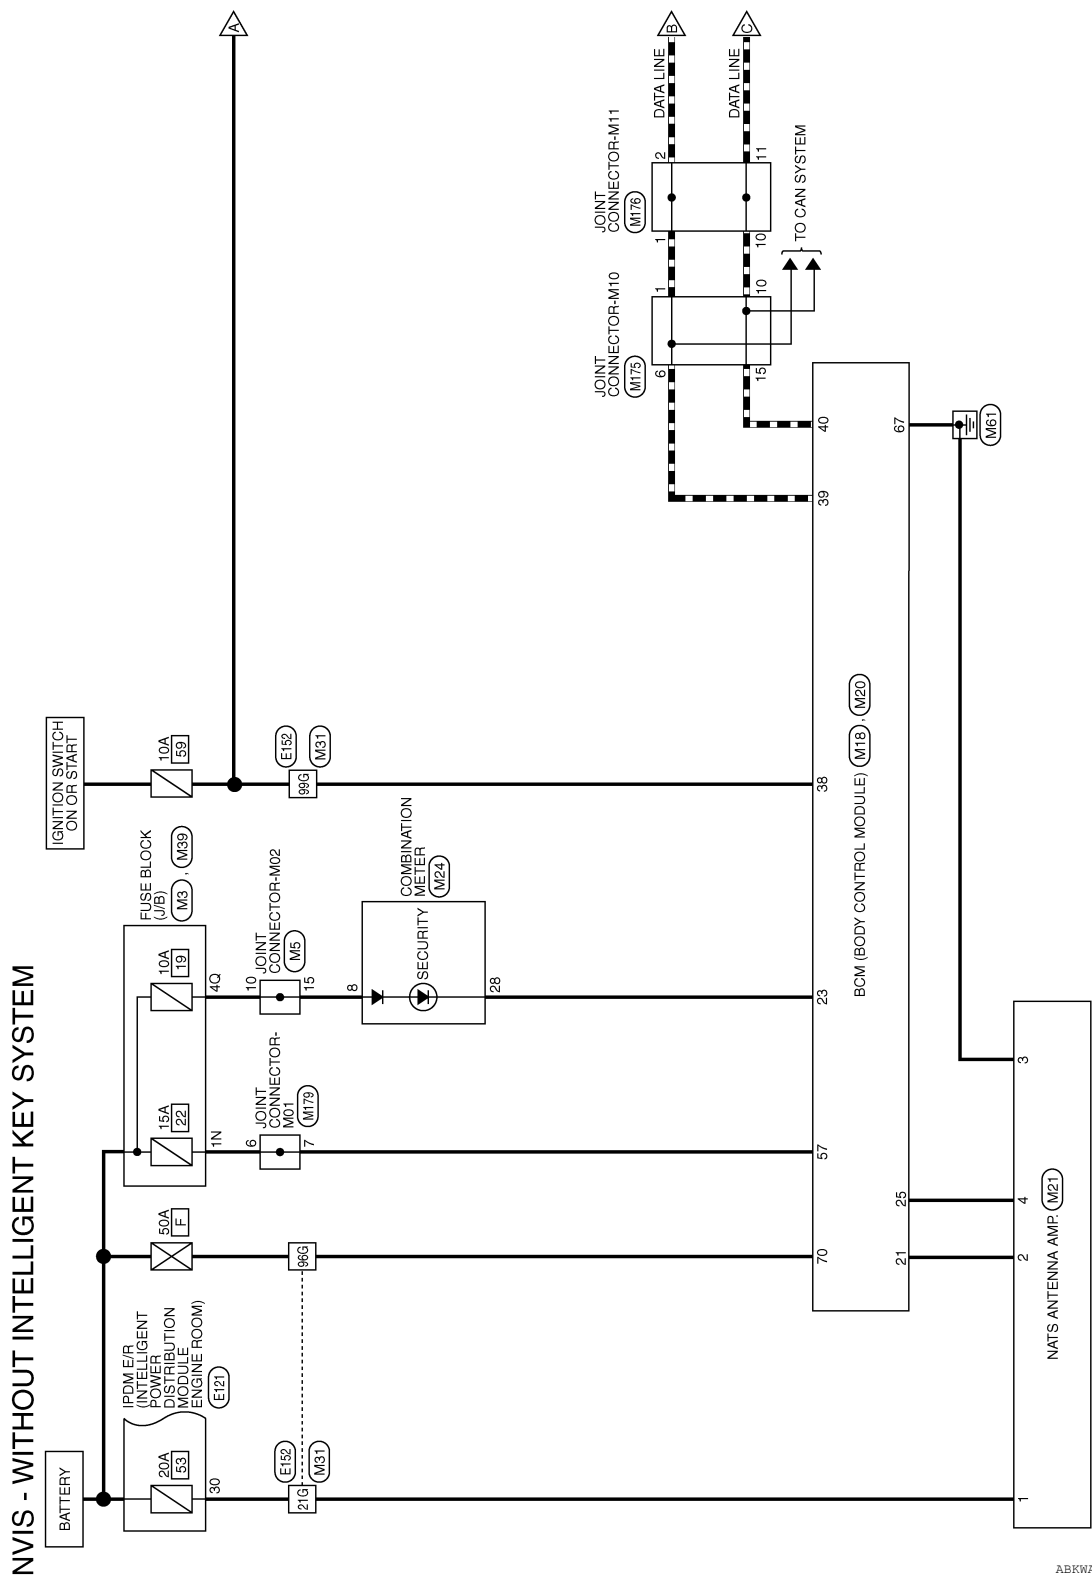

ABKWA2542GB

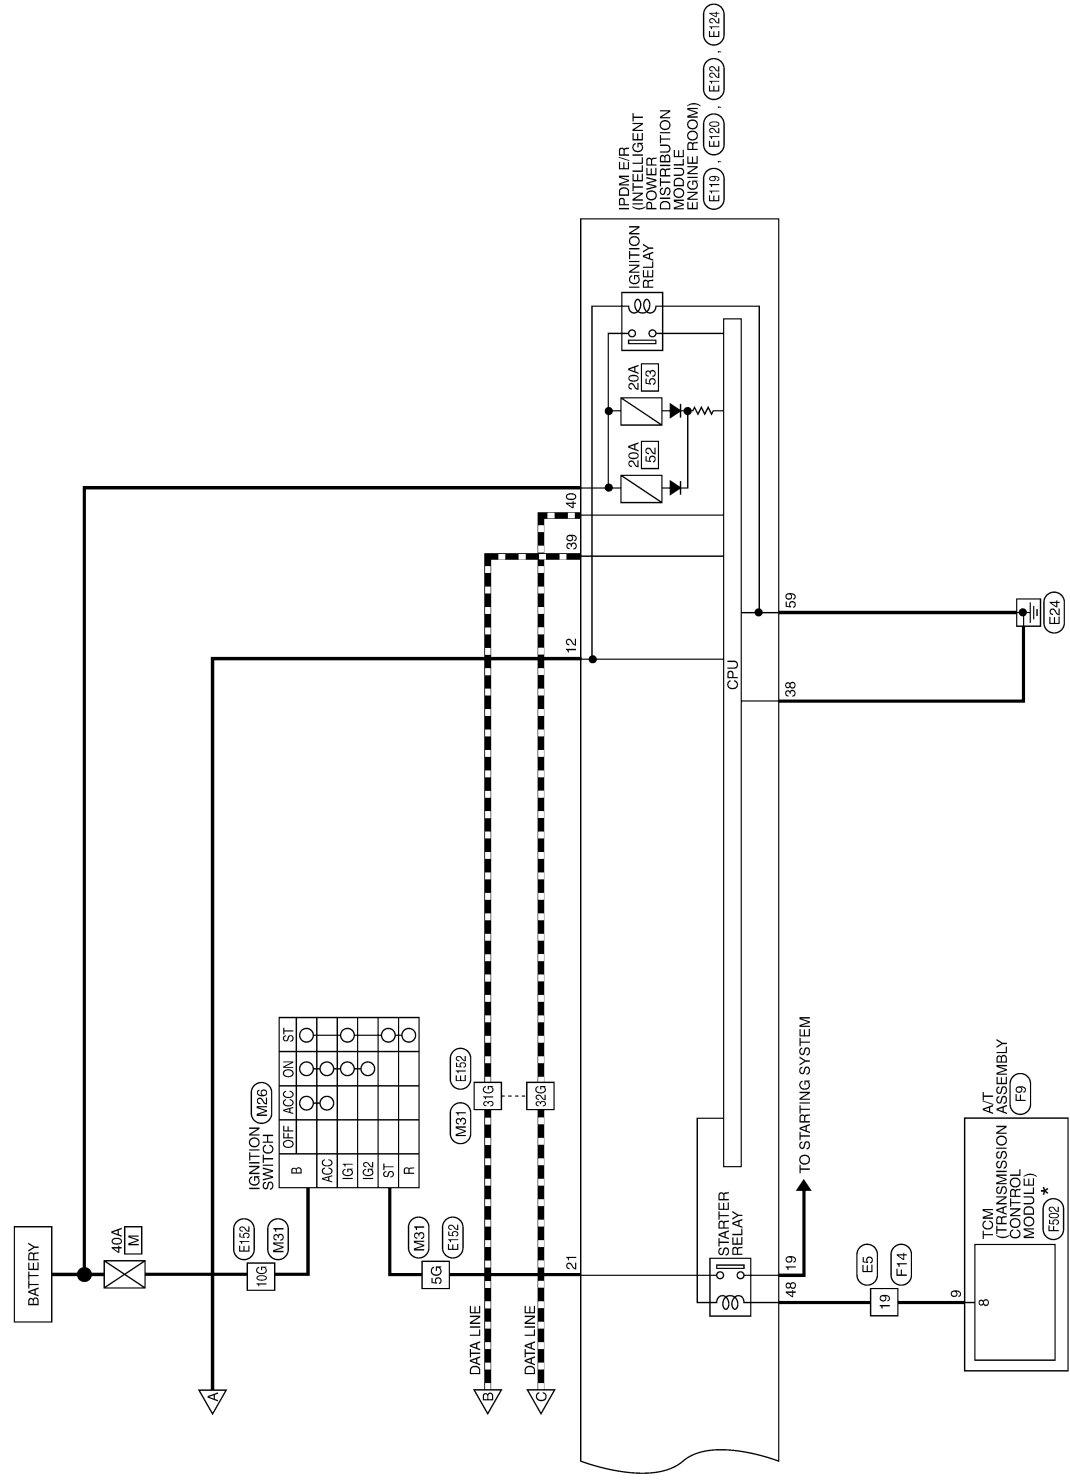


★: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

ABKWA1896GB

SEC


NVIS CONNECTORS - WITHOUT INTELLIGENT KEY SYSTEM

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1N	Y/R	—

Connector No.	M5
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
10	Y/R	—
15	Y/R	—


Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
21	G	IMMOBILIZER ANTENNA SIGNAL (CLOCK)
23	G/O	SECURITY INDICATOR OUTPUT
25	BR	IMMOBILIZER ANTENNA SIGNAL (RX, TX)
38	W/L	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
57	Y/R	BAT (FUSE)
67	B	GND (POWER)
70	W/B	BAT (F/L)

Connector No.	M21
Connector Name	NATS ANTENNA AMP.
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	—
2	G	—
3	B	—
4	BR	—

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Terminal No.	Color of Wire	Signal Name
8	Y/R	BATTERY
28	G/O	SECURITY

Terminal No.	Color of Wire	Signal Name
5G	BR	-
10G	G	-
21G	W	-
31G	L	-
32G	P	-
96G	W/B	-
99G	W/L	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

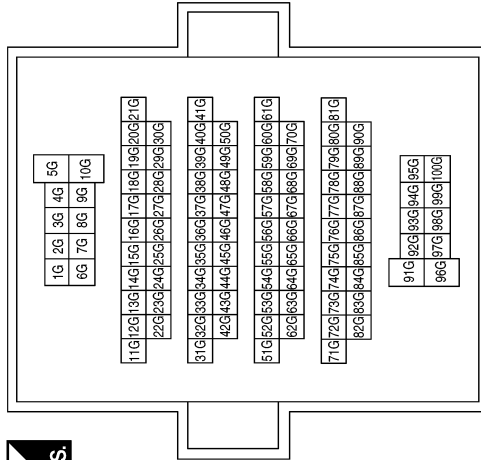


Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
B	G	-
ST	BR	-

Connector No.	M176
Connector Name	JOINT CONNECTOR-M11
Connector Color	BLUE



Connector No.	M175
Connector Name	JOINT CONNECTOR-M10
Connector Color	BLUE



Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
10	P	-
11	P	-

Terminal No.	Color of Wire	Signal Name
1	L	-
6	L	-
10	P	-
15	P	-

Terminal No.	Color of Wire	Signal Name
4Q	Y/R	-

ABKIA5808GB

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



9	8	7	6	5	4	3
18	17	16	15	14	13	12
11	10					

Terminal No.	12	Color of Wire	L/W	Signal Name	IGN SW (IG)
--------------	----	---------------	-----	-------------	-------------

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24									

Terminal No.	19	Color of Wire	B/R	Signal Name	—
--------------	----	---------------	-----	-------------	---

Connector No.	M179
Connector Name	JOINT CONNECTOR-M01
Connector Color	GREEN



9	8	7	6	5	4	3	2	1
20	19	18	17	16	15	14	13	12
11	10							

Terminal No.	6	Color of Wire	Y/R	Signal Name	—
7		Y/R		—	

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



42	41	40	39	38	37
48	47	46	45	44	43

Terminal No.	38	Color of Wire	B	Signal Name	GND (SIGNAL)
39		L		CAN-H	
40		P		CAN-L	
48		B/R		RANGE SW	

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



29	28	27	26	25
36	35	34	33	32
31	30			

Terminal No.	30	Color of Wire	W	Signal Name	ECM BAT
--------------	----	---------------	---	-------------	---------

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




21	20	19
24	23	22

Terminal No.	19	Color of Wire	W/R	Signal Name	STARTER MTR
21		BR		IGN SW (ST)	

ABKIA5809GB

Terminal No.	Color of Wire	Signal Name
5G	BR	-
10G	G	-
21G	W	-
31G	L	-
32G	P	-
96G	W/B	-
99G	L/W	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

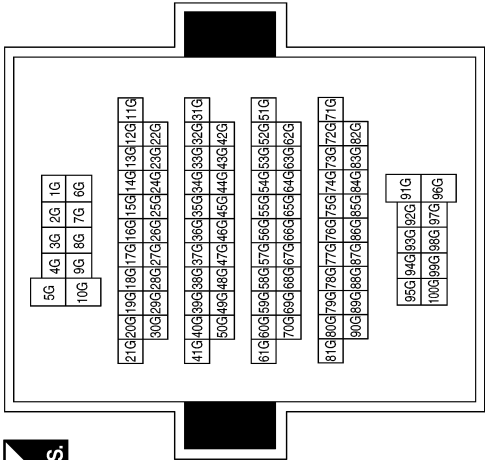

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)


Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY



Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN



Terminal No.	8
Color of Wire	G
Signal Name	START-RLY

Terminal No.	19
Color of Wire	B/R
Signal Name	-

Terminal No.	9
Color of Wire	B/R
Signal Name	-

ABKIA5810GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

SYMPTOM DIAGNOSIS

VEHICLE SECURITY SYSTEM SYMPTOMS

Symptom Table

INFOID:0000000011289105

Procedure			Diagnostic procedure	Refer to page
Symptom				
1	Vehicle security system cannot be set by	Door switch	Check door switch (LF, RF, LR, RR, back)	DLK-273
		Glass ajar switch	Check glass ajar switch	DLK-310
		Key cylinder switch	Check key cylinder switch	DLK-281
		—	Check Intermittent Incident	GI-43
	Security indicator does not turn ON.		Check vehicle security indicator	SEC-163
			Check Intermittent Incident	GI-43
2	* Vehicle security system does not sound alarm when	Any door is opened.	Check door switch (LF, RF, LR, RR, back)	DLK-273
		Glass ajar switch	Check glass ajar switch	DLK-310
		—	Check Intermittent Incident	GI-43
3	Vehicle security alarm does not activate.	Horn alarm	Check horn switch	—
			Check Intermittent Incident	GI-43
4	Vehicle security system cannot be canceled by	Key cylinder switch	Check key cylinder switch	DLK-299
			Check Intermittent Incident	GI-43

*: Check the system is in the armed phase.

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

Symptom Table

INFOID:0000000011289106

NOTE:

- Before performing the diagnosis in the following table, check "[SEC-127. "Work Flow"](#)".
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.
- If the following symptoms are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Mechanical key is not inserted into key cylinder.
- Ignition knob switch is not depressed.

Symptom	Diagnosis/service procedure	Reference page
Security indicator does not turn ON or flash.	1. Check vehicle security indicator	SEC-163
	2. Check Intermittent Incident	GI-43

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011289107

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least three minutes before performing any service.

NATS ANTENNA AMP.

< REMOVAL AND INSTALLATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

REMOVAL AND INSTALLATION

NATS ANTENNA AMP.

Removal and Installation


INFOID:0000000011289108

NOTE:

- If NATS antenna amp. is not installed correctly, NVIS (NATS) system will not operate properly and "SELF-DIAG RESULTS" on CONSULT screen will show "LOCK MODE" or "CHAIN OF IMMUNO-KEY"
- Initialization is not necessary when only the NATS antenna amp. is replaced with a new one.

REMOVAL

1. Disconnect the battery negative terminal. Refer to [PG-72, "How to Handle Battery"](#)
2. Remove cluster lid A. Refer to [JP-14, "Removal and Installation"](#).
3. Remove the NATS antenna amp bolt.
4. Disconnect the harness connector from the NATS antenna amp. (1) and remove.

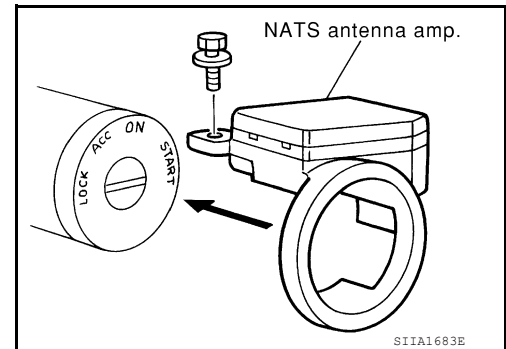

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

REMOTE KEYLESS ENTRY RECEIVER

< REMOVAL AND INSTALLATION >

[WITHOUT INTELLIGENT KEY SYSTEM]


REMOTE KEYLESS ENTRY RECEIVER

Removal and Installation

INFOID:000000011289109

REMOVAL

1. Remove the instrument lower panel RH. Refer to [IP-12, "Removal and Installation"](#).
2. Disconnect the harness connector (1) from the RKE receiver (2).
3. Remove the RKE receiver bolt (A) and the RKE receiver (2).

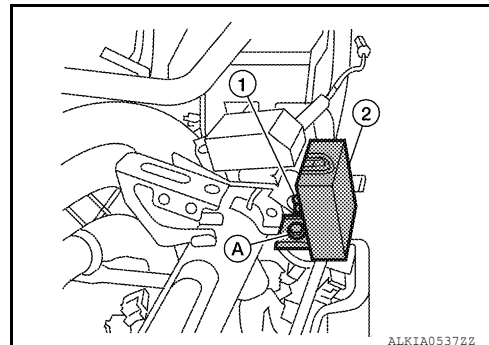

INSTALLATION

Installation is in the reverse order of removal.