

SECTION **SEC**

SECURITY CONTROL SYSTEM

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

CONTENTS

WITH INTELLIGENT KEY SYSTEM	
BASIC INSPECTION	6
DIAGNOSIS AND REPAIR WORK FLOW	6
Work Flow	6
INSPECTION AND ADJUSTMENT	9
ECM	9
ECM : Description	9
ECM : Special Repair Requirement	9
BCM	9
BCM : Description	9
BCM : Work Procedure	9
SYSTEM DESCRIPTION	11
INTELLIGENT KEY SYSTEM/ENGINE	
START FUNCTION	11
System Diagram	11
System Description	11
Component Parts Location	14
Component Description	15
NISSAN VEHICLE IMMOBILIZER SYSTEM-	
NATS	16
System Diagram	16
System Description	16
Component Parts Location	19
Component Description	20
VEHICLE SECURITY SYSTEM	21
System Diagram	21
System Description	21
Component Parts Location	23
Component Description	24
DIAGNOSIS SYSTEM (BCM)	25
COMMON ITEM	25
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	25
INTELLIGENT KEY	26
INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)	26
THEFT ALM	29
THEFT ALM : CONSULT Function (BCM - THEFT)	29
IMMU	30
IMMU : CONSULT Function (BCM - IMMU)	31
DIAGNOSIS SYSTEM (IPDM E/R)	32
CONSULT Function (IPDM E/R)	32
DTC/CIRCUIT DIAGNOSIS	34
P1610 LOCK MODE	34
Description	34
DTC Logic	34
Diagnosis Procedure	34
P1611 ID DISCORD, IMMU-ECM	35
Description	35
DTC Logic	35
Diagnosis Procedure	35
P1612 CHAIN OF ECM-IMMU	37
Description	37
DTC Logic	37
Diagnosis Procedure	37
B2192 ID DISCORD, IMMU-ECM	38
Description	38
DTC Logic	38
Diagnosis Procedure	38
B2193 CHAIN OF ECM-IMMU	40
Description	40
DTC Logic	40
Diagnosis Procedure	40

SEC

B2195 ANTI-SCANNING	41	DTC Logic	67
Description	41	Diagnosis Procedure	67
DTC Logic	41		
Diagnosis Procedure	41		
B2198 NATS ANTENNA AMP.	42	B260F ENGINE STATUS	69
Description	42	Description	69
DTC Logic	42	DTC Logic	69
Diagnosis Procedure	42	Diagnosis Procedure	69
B2555 STOP LAMP	46	B26F3 STARTER CONTROL RELAY	70
Description	46	Description	70
DTC Logic	46	DTC Logic	70
Diagnosis Procedure	46	Diagnosis Procedure	70
Component Inspection	47	B26F4 STARTER CONTROL RELAY	71
B2556 PUSH-BUTTON IGNITION SWITCH	48	Description	71
Description	48	DTC Logic	71
DTC Logic	48	Diagnosis Procedure	71
Diagnosis Procedure	48	B26F7 BCM	73
Component Inspection	49	Description	73
B2557 VEHICLE SPEED	50	DTC Logic	73
Description	50	Diagnosis Procedure	73
DTC Logic	50	B26F8 BCM	74
Diagnosis Procedure	50	Description	74
B2601 SHIFT POSITION	51	DTC Logic	74
Description	51	Diagnosis Procedure	74
DTC Logic	51	B26FC KEY REGISTRATION	75
Diagnosis Procedure	51	Description	75
Component Inspection	53	DTC Logic	75
B2602 SHIFT POSITION	54	Diagnosis Procedure	75
Description	54	B210B STARTER CONTROL RELAY	76
DTC Logic	54	Description	76
Diagnosis Procedure	54	DTC Logic	76
Component Inspection	55	Diagnosis Procedure	76
B2603 SHIFT POSITION	57	B210C STARTER CONTROL RELAY	77
Description	57	Description	77
DTC Logic	57	DTC Logic	77
Diagnosis Procedure	57	Diagnosis Procedure	77
Component Inspection (Transmission Range Switch)	60	B210D STARTER RELAY	78
Component Inspection [CVT Shift Selector (De- tention Switch)]	60	Description	78
B2604 SHIFT POSITION	62	DTC Logic	78
Description	62	Diagnosis Procedure	78
DTC Logic	62	B210E STARTER RELAY	79
Diagnosis Procedure	62	Description	79
Component Inspection	64	DTC Logic	79
B2605 SHIFT POSITION	65	Diagnosis Procedure	79
Description	65	B210F SHIFT POSITION/CLUTCH INTER- LOCK SWITCH	81
DTC Logic	65	Description	81
Diagnosis Procedure	65	DTC Logic	81
B2608 STARTER RELAY	67	Diagnosis Procedure	81
Description	67	B2110 SHIFT POSITION/CLUTCH INTER- LOCK SWITCH	83
		Description	83

DTC Logic	83	Diagnosis Procedure	168	
Diagnosis Procedure	83	SECURITY INDICATOR LAMP DOES NOT		A
Component Inspection	85	TURN ON OR BLINK	169	
POWER SUPPLY AND GROUND CIRCUIT	86	Description	169	B
BCM	86	Diagnosis Procedure	169	
BCM : Diagnosis Procedure	86	VEHICLE SECURITY SYSTEM CANNOT BE		C
IPDM E/R	86	SET	170	
IPDM E/R : Diagnosis Procedure	86	INTELLIGENT KEY	170	D
SECURITY INDICATOR LAMP	88	INTELLIGENT KEY : Description	170	
Description	88	INTELLIGENT KEY : Diagnosis Procedure	170	E
Component Function Check	88	DOOR REQUEST SWITCH	170	
Diagnosis Procedure	88	DOOR REQUEST SWITCH : Description	170	F
HORN FUNCTION	90	DOOR REQUEST SWITCH : Diagnosis Procedure	170	
Description	90	DOOR KEY CYLINDER	170	G
Component Function Check	90	DOOR KEY CYLINDER : Description	171	
Diagnosis Procedure	90	DOOR KEY CYLINDER : Diagnosis Procedure	171	H
HEADLAMP FUNCTION	92	VEHICLE SECURITY ALARM DOES NOT		I
Description	92	ACTIVATE	172	
Component Function Check	92	Description	172	J
Diagnosis Procedure	92	Diagnosis Procedure	172	
INTELLIGENT KEY SYSTEM/ENGINE		PRECAUTION	173	L
START FUNCTION	93	PRECAUTIONS	173	
Wiring Diagram - INTELLIGENT KEY SYSTEM/		Precautions for Removing of Battery Terminal	173	M
ENGINE START FUNCTION -	93	Precaution for Supplemental Restraint System		N
NISSAN VEHICLE IMMOBILIZER SYSTEM-		(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		O
NATS	103	SIONER"	173	P
Wiring Diagram - NISSAN VEHICLE IMMOBILIZ-		REMOVAL AND INSTALLATION	174	
ER SYSTEM -	103	NATS ANTENNA AMP.	174	SEC
VEHICLE SECURITY SYSTEM	112	Exploded View	174	L
Wiring Diagram - VEHICLE SECURITY SYSTEM		Removal and Installation	174	
-	112	WITHOUT INTELLIGENT KEY SYSTEM		M
ECU DIAGNOSIS INFORMATION	120	BASIC INSPECTION	175	N
BCM (BODY CONTROL MODULE)	120	DIAGNOSIS AND REPAIR WORK FLOW	175	
Reference Value	120	Work Flow	175	O
Wiring Diagram - BCM -	140	INSPECTION AND ADJUSTMENT	178	
Fail-safe	151	ECM	178	P
DTC Inspection Priority Chart	152	ECM : Description	178	
DTC Index	153	ECM : Special Repair Requirement	178	
IPDM E/R (INTELLIGENT POWER DISTRI-		BCM	178	
BUTION MODULE ENGINE ROOM)	156	BCM : Description	178	
Reference Value	156	BCM : Work Procedure	178	
Wiring Diagram — IPDM E/R —	162	SYSTEM DESCRIPTION	180	
Fail-Safe	165	NISSAN VEHICLE IMMOBILIZER SYSTEM-		
DTC Index	167	NATS	180	
SYMPTOM DIAGNOSIS	168	System Diagram	180	
ENGINE DOES NOT START WHEN INTELLI-				
GENENT KEY IS INSIDE OF VEHICLE	168			
Description	168			

System Description	180	Description	200
Component Parts Location	181	DTC Logic	200
Component Description	181	Diagnosis Procedure	200
VEHICLE SECURITY SYSTEM	182	B2192 ID DISCORD, IMMU-ECM	201
System Diagram	182	Description	201
System Description	182	DTC Logic	201
Component Parts Location	184	Diagnosis Procedure	201
Component Description	184	B2193 CHAIN OF ECM-IMMU	202
DIAGNOSIS SYSTEM (BCM)	185	Description	202
COMMON ITEM	185	DTC Logic	202
COMMON ITEM : CONSULT Function (BCM -		Diagnosis Procedure	202
COMMON ITEM)	185	B2195 ANTI-SCANNING	203
IMMU	185	Description	203
IMMU : CONSULT Function (BCM - IMMU)	185	DTC Logic	203
THEFT ALM	186	Diagnosis Procedure	203
THEFT ALM : CONSULT Function (BCM - THEFT		POWER SUPPLY AND GROUND CIRCUIT ...	204
ALM)	186	BCM	204
PANIC ALARM	187	BCM : Diagnosis Procedure	204
PANIC ALARM : CONSULT Function (BCM -		IPDM E/R	204
PANIC ALARM)	187	IPDM E/R : Diagnosis Procedure	204
DIAGNOSIS SYSTEM (IPDM E/R)	188	SECURITY INDICATOR LAMP	206
CONSULT Function (IPDM E/R)	188	Description	206
DTC/CIRCUIT DIAGNOSIS	190	Component Function Check	206
P1610 LOCK MODE	190	Diagnosis Procedure	206
Description	190	HORN FUNCTION	208
DTC Logic	190	Description	208
Diagnosis Procedure	190	Component Function Check	208
P1611 ID DISCORD, IMMU-ECM	191	Diagnosis Procedure	208
Description	191	HEADLAMP FUNCTION	210
DTC Logic	191	Description	210
Diagnosis Procedure	191	Component Function Check	210
P1612 CHAIN OF ECM-IMMU	192	Diagnosis Procedure	210
Description	192	NISSAN VEHICLE IMMOBILIZER SYSTEM-	
DTC Logic	192	NATS	211
Diagnosis Procedure	192	Wiring Diagram - NISSAN VEHICLE IMMOBILIZ-	
P1614 CHAIN OF IMMU-KEY	193	ER SYSTEM -	211
Description	193	VEHICLE SECURITY SYSTEM	217
DTC Logic	193	Wiring Diagram - VEHICLE SECURITY SYSTEM	
Diagnosis Procedure	193	-	217
P1615 DIFFERENCE OF KEY	196	ECU DIAGNOSIS INFORMATION	225
Description	196	BCM (BODY CONTROL MODULE)	225
DTC Logic	196	Reference Value	225
Diagnosis Procedure	196	Wiring Diagram - BCM -	238
B2190 NATS ANTENNA AMP.	197	Fail-safe	246
Description	197	DTC Inspection Priority Chart	247
DTC Logic	197	DTC Index	247
Diagnosis Procedure	197	IPDM E/R (INTELLIGENT POWER DISTRI-	
B2191 DIFFERENCE OF KEY	200	BUTION MODULE ENGINE ROOM)	249

Reference Value	249
Wiring Diagram — IPDM E/R —	255
Fail-Safe	258
DTC Index	260

SYMPTOM DIAGNOSIS 261

**SECURITY INDICATOR LAMP DOES NOT
TURN ON OR BLINK 261**

Description	261
Diagnosis Procedure	261

**VEHICLE SECURITY SYSTEM CANNOT BE
SET 262**

Description	262
Diagnosis Procedure	262

**VEHICLE SECURITY ALARM DOES NOT
ACTIVATE 263**

Description	263
Diagnosis Procedure	263

PRECAUTION 264

PRECAUTIONS 264

Precautions for Removing of Battery Terminal	264
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	264

REMOVAL AND INSTALLATION 265

NATS ANTENNA AMP. 265

Exploded View	265
Removal and Installation	

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009950080

OVERALL SEQUENCE

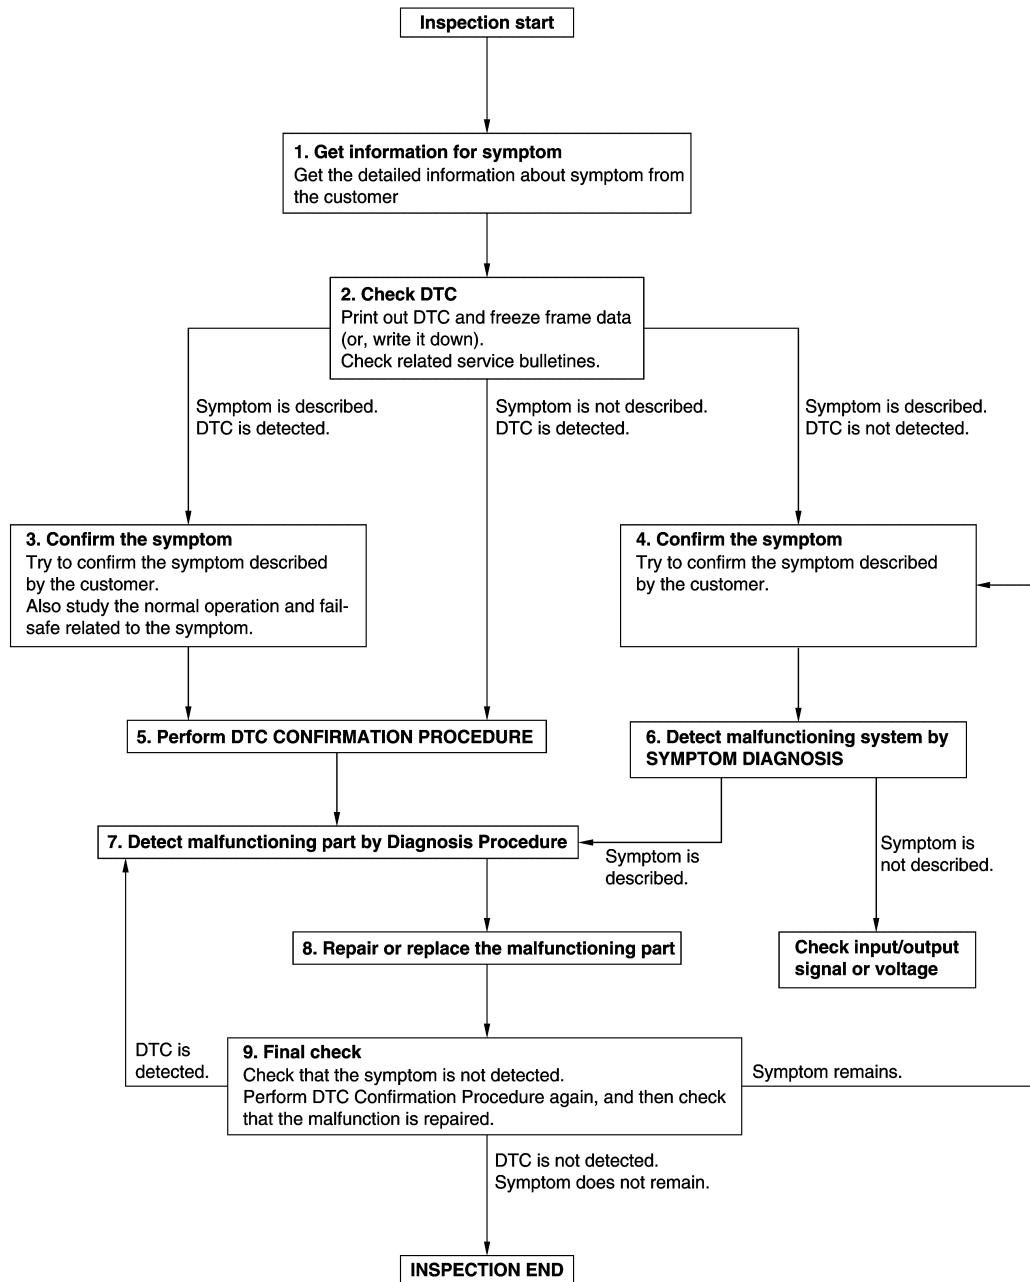

JMKIA8652GB

DETAILED FLOW

Revision: 2013 October

SEC-6

2014 CUBE

DIAGNOSIS AND REPAIR WORK FLOW

[WITH INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

1.GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2.CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-81, "DTC Inspection Priority Chart"](#) (BCM), [PCS-32, "DTC Index"](#) (IPDM E/R) and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-40, "Intermittent Incident"](#).

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7.DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS AND REPAIR WORK FLOW

[WITH INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-40. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

INSPECTION AND ADJUSTMENT

ECM

ECM : Description

INFOID:000000009950081

Performing the following procedure can automatically activate recommunication of ECM and BCM, but only when the ECM is replaced with a new one*.

*: New one means a virgin ECM that is never energized on board.

(In this step, initialization procedure using CONSULT is not necessary)

NOTE:

- When the replaced ECM is not a brand new, the specified procedure (Initialization of BCM and registration of Intelligent Keys) using CONSULT is necessary.
- If multiple keys are attached to the key holder, separate them before beginning work.
- Distinguish keys with unregistered key IDs from those with registered IDs.

ECM : Special Repair Requirement

INFOID:000000009950082

1.PERFORM ECM RECOMMUNICATING FUNCTION

1. Install ECM.
2. Contact backside of the registered Intelligent Key* to push-button ignition switch while brake pedal is depressed, then turn ignition switch ON.
*: To perform this step, use the key that is used before performing ECM replacement.
3. Maintain ignition switch in the ON position for at least 5 seconds.
4. Turn ignition switch OFF.
5. Start engine.

>> GO TO 2.

2.PERFORM ADDITIONAL SERVICE PROCEDURE WHEN REPLACING ECM

performing the following procedure.

- [EC-16. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#)

>> END

BCM

BCM : Description

INFOID:000000009950083

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.


NOTE:

When replacing BCM, perform the system initialization (NATS) (if equipped).

BCM : Work Procedure

INFOID:000000009950084

1.SAVING VEHICLE SPECIFICATION

 CONSULT Configuration

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-6. "Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2. REPLACE BCM

Replace BCM. Refer to [BCS-88. "Removal and Installation"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

ⓂCONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-6. "Work Procedure"](#).

>> GO TO 4.

4. INITIALIZE BCM (NATS) (IF EQUIPPED)

Perform BCM initialization. (NATS)

>> WORK END

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >


[WITH INTELLIGENT KEY SYSTEM]

SYSTEM DESCRIPTION

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

System Diagram

INFOID:0000000009950085

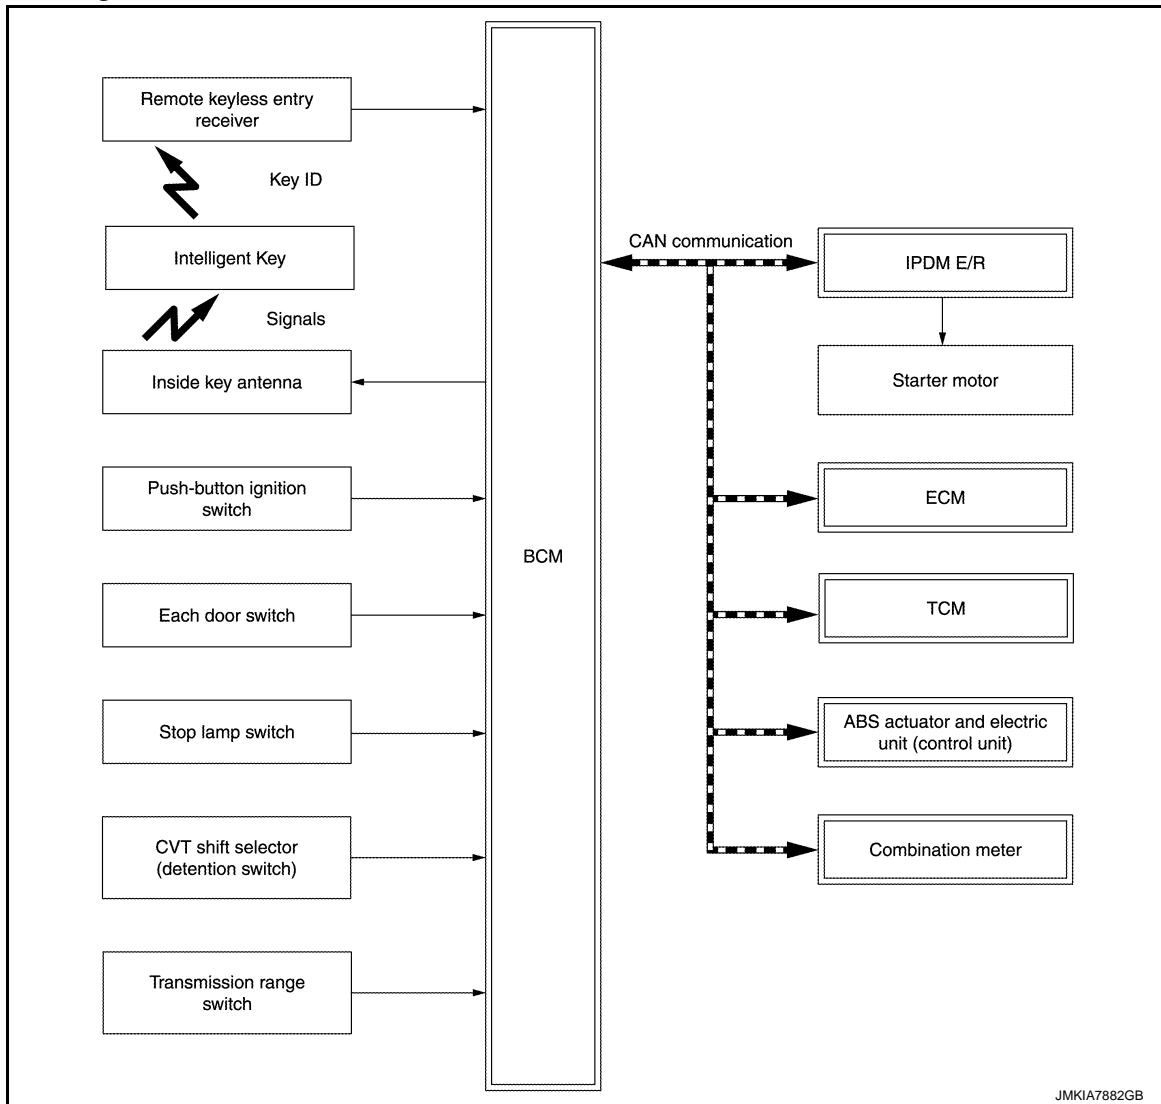

System Description

INFOID:0000000009950086

SYSTEM DESCRIPTION

- The engine start function of Intelligent Key system is a system that makes it possible to start and stop the engine without removing the key. It verifies an electronic ID using two-way communication when pressing the push-button ignition switch while carrying the Intelligent Key, which operates based on the results of electronic ID verification of Intelligent Key using two-way communication between the Intelligent Key and the vehicle.

NOTE:

- The driver should carry the Intelligent Key at all times.
- Intelligent Key has 2 IDs [Intelligent Key and NVIS (NATS)]. It can perform the door lock/unlock operation and the push-button ignition switch operation when the registered Intelligent Key is carried.
- When Intelligent Key battery is discharged, engine can be started by operating push-button ignition switch after contacting Intelligent Key backside to push-button ignition switch. At that time, verification is performed by immobilizer ID.
- If the ID is successfully verified, engine can be started.
- Up to 4 Intelligent Keys can be registered (Including the standard Intelligent Key) upon request from the customer.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

NOTE:

Refer to [DLK-16, "INTELLIGENT KEY SYSTEM : System Description"](#) for any functions other than engine start function of Intelligent Key system.

PRECAUTIONS FOR INTELLIGENT KEY SYSTEM

In the Intelligent Key system, the transponder [the chip for NVIS (NATS) ID verification] is integrated into the Intelligent Key. (For the conventional models, it is integrated into the mechanical key.) Therefore, ID verification cannot be performed by mechanical key only and engine cannot be started.

In that case, immobilizer ID verification can be performed when Intelligent Key backside is contacted to push-button ignition switch. If verification result is OK, engine can be started.

OPERATION WHEN INTELLIGENT KEY IS CARRIED

1. When the push-button ignition switch is pressed, the BCM activates the inside key antenna and transmits the request signal to the Intelligent Key.
2. The Intelligent Key receives the request signal and transmits the Intelligent Key ID signal to the BCM via the remote keyless entry receiver.
3. BCM receives the Intelligent Key ID signal via remote keyless entry receiver and verifies it with the registered ID.
4. BCM turns ACC relay ON and transmits the ignition power supply ON signal to IPDM E/R.
5. IPDM E/R turns the ignition relay ON and starts the ignition power supply.
6. BCM detects that the selector lever position and brake pedal operating condition.
7. BCM transmits the starter request signal via CAN communication to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition is satisfied.
8. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
9. Power supply is supplied through the starter relay and the starter control relay to operate the starter motor and start cranking.

CAUTION:

If a malfunction is detected in the Intelligent Key system, the “KEY” warning lamp in the combination meter illuminates. At that time, the engine cannot be started.

10. When BCM receives feedback signal from ECM indicating that the engine is started, the BCM transmits a stop signal to IPDM E/R and stops cranking by turning OFF the starter relay. (If engine start is unsuccessful, cranking stops automatically within 5 seconds.)

CAUTION:

When the Intelligent Key is carried outside of the vehicle (inside key antenna detection area) while the power supply is in the ACC or ON position, even if the engine start condition* is satisfied, the engine cannot be started.

*: For the engine start condition, refer to “POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION”.

OPERATION RANGE

Engine can be started when Intelligent Key is inside the vehicle. However, sometimes engine may not start when Intelligent Key is on instrument panel or in glove box.

ENGINE START OPERATION WHEN INTELLIGENT KEY IS HELD CLOSE TO PUSH-BUTTON IGNITION SWITCH

When Intelligent Key battery is discharged, immobilizer ID verification between transponder in Intelligent Key and BCM is performed when Intelligent Key backside is contacted to push-button ignition switch. Engine can be started.

BATTERY SAVER SYSTEM

When all the following conditions are met for 60 minutes, the battery saver system cuts off the power supply to prevent battery discharge.

- The ignition switch is in the ACC position
- All doors are closed
- Selector lever is in the P position

Reset Condition of Battery Saver System

In order to prevent the battery from discharging, the battery saver system cuts off the power supply when all doors are closed, the selector lever is in the P position, and the ignition switch is left in the ACC position for 60 minutes. If any of the following conditions are met the battery saver system is released.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

- Opening any door
- Operating door lock using door request switch
- Operating door lock using Intelligent Key

Press push-button ignition switch and ignition switch changes to the ACC position from the OFF position.

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when Intelligent Key backside is contacted to push-button ignition switch, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,
 - Brake pedal operating condition
 - Selector lever position
 - Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3
LOCK → START ACC → START ON → START	P or N position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Component Parts Location

INFOID:000000009950087

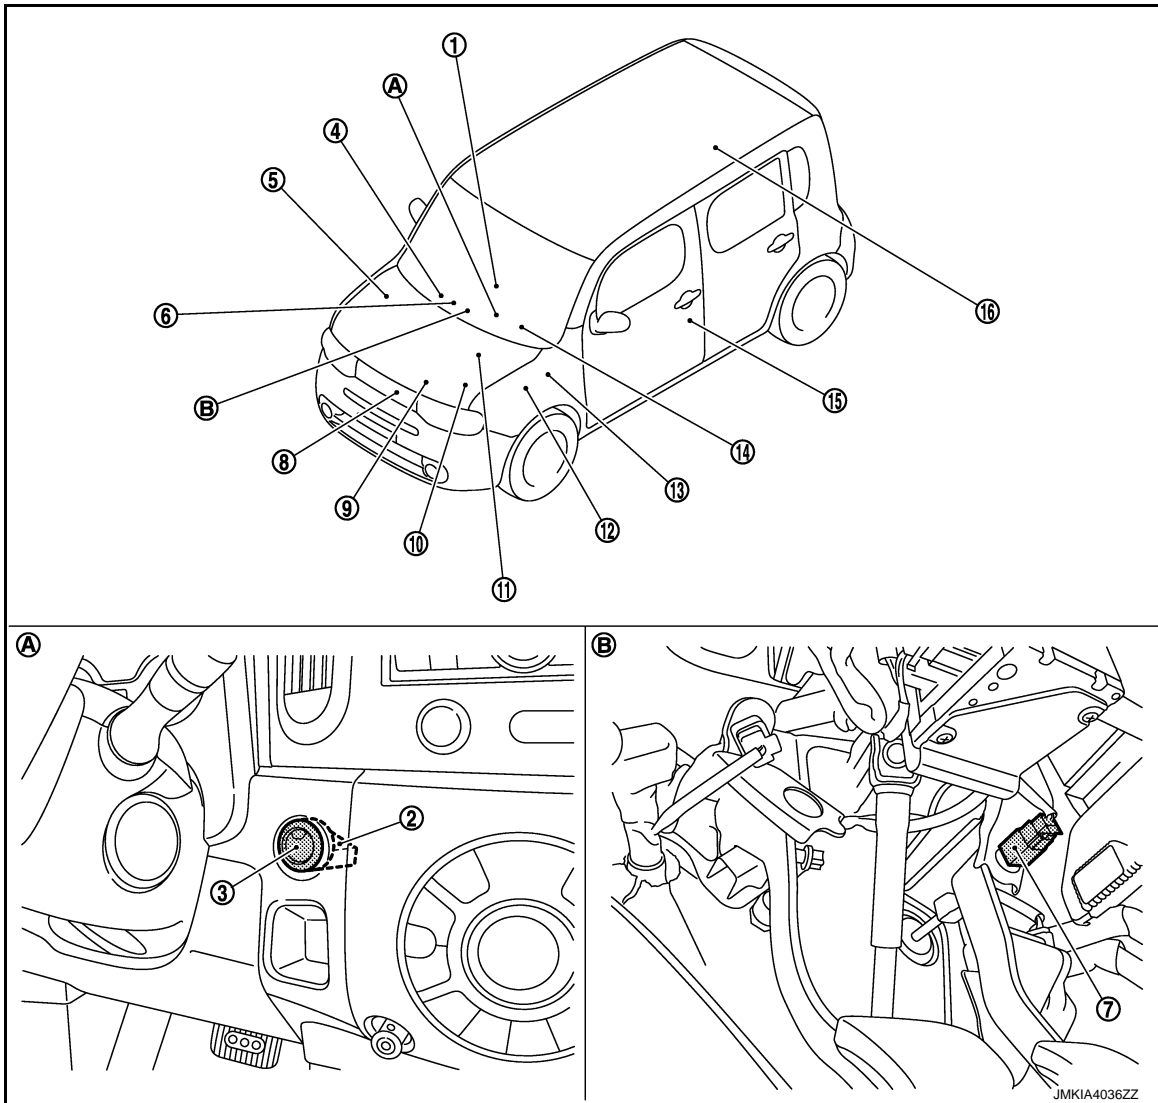

- | | | |
|--|---|--|
| 1. CVT shift selector (detention switch) M58 | 2. NATS antenna amp. M26 | 3. Push-button ignition switch M101 |
| 4. Remote keyless entry receiver M87
Refer to DLK-18, "INTELLIGENT KEY SYSTEM : Component Parts Location" | 5. ABS actuator and electric unit (control unit) E36
Refer to BRC-12, "Component Parts Location" | 6. Inside key antenna (instrument center) M105 |
| 7. Stop lamp switch E115 | 8. Horn E50, E51 | 9. Transmission range switch F21 |
| 10. IPDM E/R E10, E11, E12, E13, E14, E15, E17
Refer to PCS-5, "Component Parts Location" | 11. ECM E16 | 12. TCM E18 |
| 13. BCM M68, M69, M70, M71
Refer to BCS-10, "Component Parts Location" | 14. Security indicator lamp (combination meter) M34 | 15. Front door switch (driver side) B34 |
| 16. Inside key antenna (luggage room) B82 | | |
| A. Behind push-button ignition switch | B. Behind instrument lower cover LH | |

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Component Description

INFOID:000000009950088

Component	Reference
BCM	SEC-73
Push-button ignition switch	SEC-48
Door switch	DLK-55
CVT shift selector (detention switch)	SEC-81
Inside key antenna	DLK-44
Remote keyless entry receiver	DLK-75
Stop lamp switch	SEC-46
TCM	SEC-62
Starter relay	SEC-67
Starter control relay	SEC-76
Security indicator lamp	SEC-88
Key warning lamp	DLK-87

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS


< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

System Diagram

INFOID:000000009950089

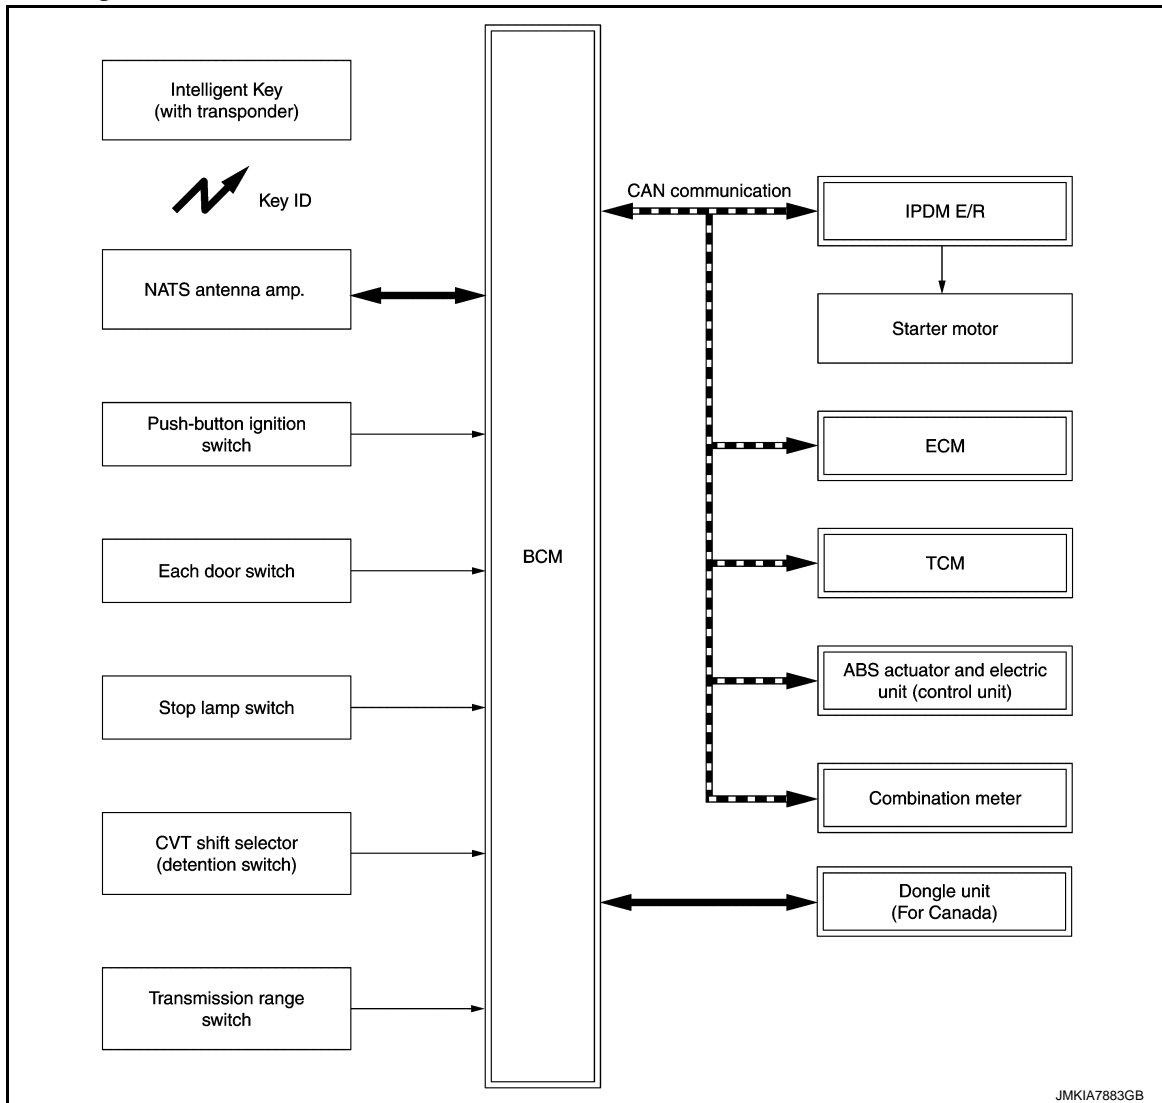

System Description

INFOID:000000009950090

SYSTEM DESCRIPTION

- The NVIS (NATS) is an anti-theft system that registers an Intelligent Key ID to the vehicle and prevents the engine from being started by an unregistered Intelligent Key. It has higher protection against auto theft involving the duplication of mechanical keys.
- It performs ID verification when starting the engine in the same way as the Intelligent system, but it performs the NVIS (NATS) ID verification when inserting the Intelligent Key and performs the Intelligent Key ID verification when carrying the Intelligent Key.
- The mechanical key integrated in the Intelligent Key cannot start the engine. When the Intelligent Key battery is discharged, the NVIS (NATS) ID verification memorized to the transponder integrated with Intelligent Key backside is contacted to push-button ignition switch. If the verification results are OK, the engine start operation can be performed by the push-button ignition switch operation.
- Locate the security indicator lamp and apply the anti-theft system equipment sticker that warns that the NVIS (NATS) is on board the model.
- Security indicator lamp always blinks when the power supply position is in any position except the ON position.
- Up to 4 Intelligent Keys can be registered (including the standard ignition key) upon request from the owner.
- When replacing ECM, BCM, or Intelligent Key, the specified procedure (Initialization of BCM and registration of all Intelligent Keys) using CONSULT is required.

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

- Possible symptom of NVIS (NATS) malfunction is "Engine cannot start". This symptom also occurs because of other than NVIS(NATS) malfunction, so start the trouble diagnosis according to [SEC-6, "Work Flow"](#).
- If ECM other than genuine part is installed, the engine cannot be started. For ECM replacement procedure, refer to [SEC-9, "ECM : Special Repair Requirement"](#).

PRECAUTIONS FOR KEY REGISTRATION

- The key registration is a procedure that erases the current NVIS (NATS) ID once, and then reregisters a new ID operation. Therefore a registered Intelligent Key is necessary for this procedure. Before starting the registration operation collect all registered Intelligent Keys from the customer.
- When registering the Intelligent Key, perform only one procedure to simultaneously register both ID (NVIS "NATS" ID and Intelligent Key ID).
The NVIS (NATS) ID registration is the procedure that registers the ID stored into the transponder (integrated in Intelligent Key) to BCM.
The Intelligent key ID registration is the procedure that registers the ID to BCM.
- When performing the Intelligent Key system registration only, the engine cannot be started by Intelligent Key backside is contacted to push-button ignition switch. When performing the NVIS (NATS) registration only, the engine cannot be started by the operation when carrying the key. The registrations of both systems should be performed.

SECURITY INDICATOR LAMP

- Warns that the vehicle is equipped with NVIS (NATS).
- Security indicator lamp always blinks when the ignition switch is in any position except the ON position.

NOTE:

Because security indicator lamp is highly efficient, the battery is barely affected.

ENGINE START OPERATION WHEN INTELLIGENT KEY IS CONTACTED TO PUSH-BUTTON IGNITION SWITCH

1. When brake pedal is depressed while selector lever is in the P position, BCM activates immobilizer antenna amplifier that is located on push-button ignition switch backside.
2. When Intelligent Key (transponder built-in) backside is contacted to push-button ignition switch, immobilizer ID verification is started between Intelligent Key built-in transponder and immobilizer antenna amplifier.
3. When immobilizer ID verification result is OK, buzzer in combination meter sounds.
4. BCM transmits immobilizer ID verification result to ECM via CAN communication.
5. BCM turns ACC relay ON and transmits ignition power supply ON signal to IPDM E/R.
6. IPDM E/R turns ignition relay ON and starts ignition power supply.
7. BCM detects that the shift position is P or N.
8. BCM transmits starter request signal to IPDM E/R via CAN communication.
When engine start conditions* are satisfied, BCM turns starter relay in IPDM E/R ON.
9. When starter request signal is received, IPDM E/R turns starter control relay ON.
10. IPDM E/R supplies power supply via starter relay and starter control relay, activates starter motor, and starts cranking.
11. When BCM receives engine start or speed feedback signal from ECM, BCM transmits stop signal to IPDM E/R, turns starter relay OFF, and stops cranking.

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when Intelligent Key backside is contacted to push-button ignition switch, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,
 - Brake pedal operating condition
 - Selector lever position
 - Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3
LOCK → START ACC → START ON → START	P or N position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Component Parts Location

INFOID:000000009950091

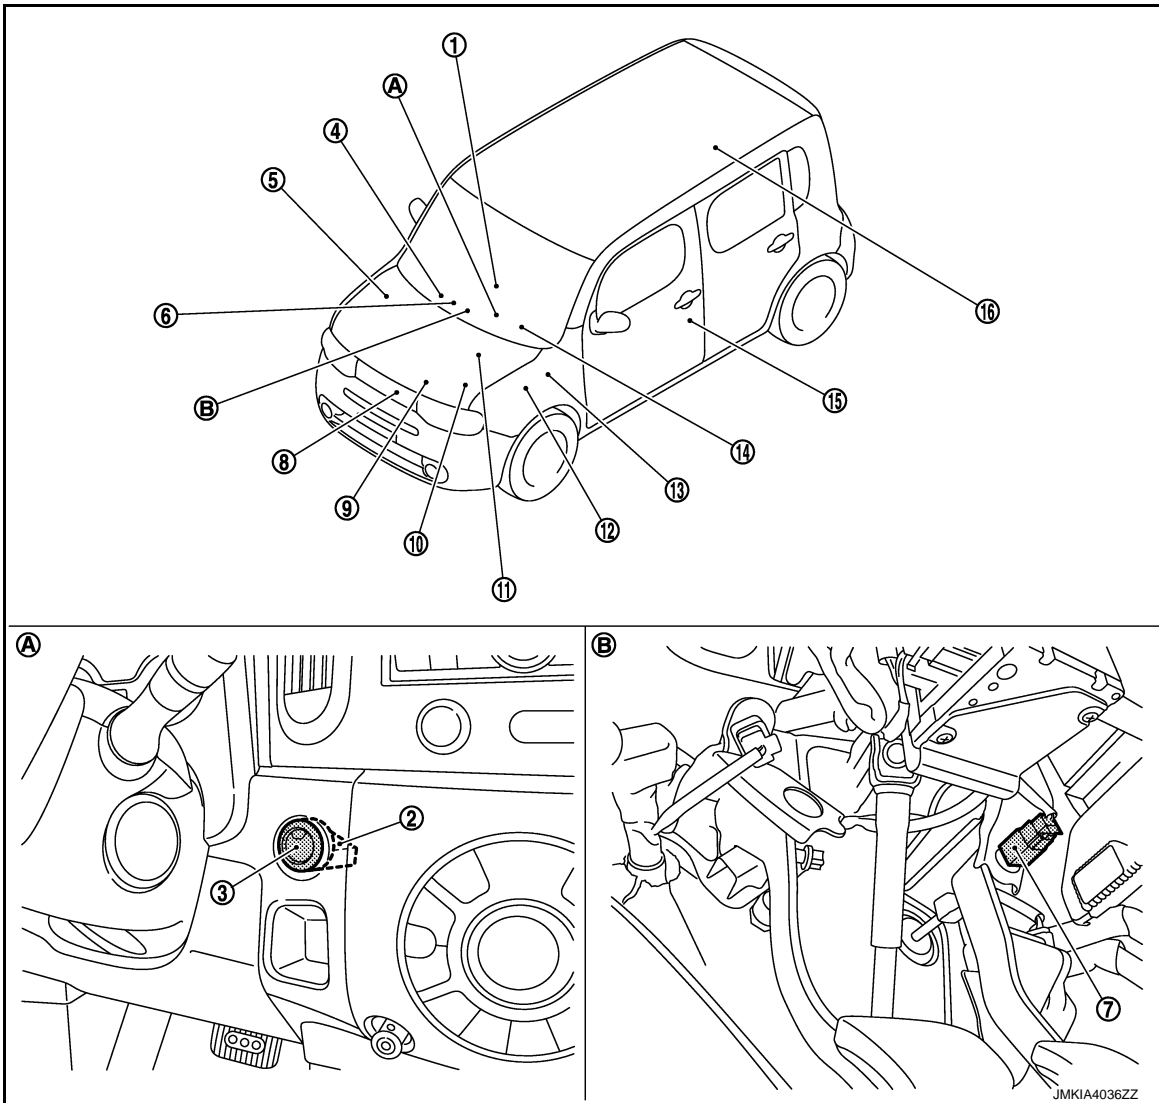

- | | | |
|--|---|--|
| 1. CVT shift selector (detention switch) M58 | 2. NATS antenna amp. M26 | 3. Push-button ignition switch M101 |
| 4. Remote keyless entry receiver M87
Refer to DLK-18. "INTELLIGENT KEY SYSTEM : Component Parts Location" | 5. ABS actuator and electric unit (control unit) E36
Refer to BRC-12. "Component Parts Location" | 6. Inside key antenna (instrument center) M105 |
| 7. Stop lamp switch E115 | 8. Horn E50, E51 | 9. Transmission range switch F21 |
| 10. IPDM E/R E10, E11, E12, E13, E14, E15, E17
Refer to PCS-5. "Component Parts Location" | 11. ECM E16 | 12. TCM E18 |
| 13. BCM M68, M69, M70, M71
Refer to BCS-10. "Component Parts Location" | 14. Security indicator lamp (combination meter) M34 | 15. Front door switch (driver side) B34 |
| 16. Inside key antenna (luggage room) B82 | | |
| A. Behind push-button ignition switch | B. Behind instrument lower cover LH | |

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Component Description

INFOID:000000009950092

Component	Reference
BCM	SEC-73
Push-button ignition switch	SEC-48
Door switch	DLK-55
CVT shift selector (detention switch)	SEC-81
Stop lamp switch	SEC-46
TCM	SEC-62
Starter relay	SEC-67
Starter control relay	SEC-76
Security indicator lamp	SEC-88

VEHICLE SECURITY SYSTEM


[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

VEHICLE SECURITY SYSTEM

System Diagram

INFOID:000000009950093

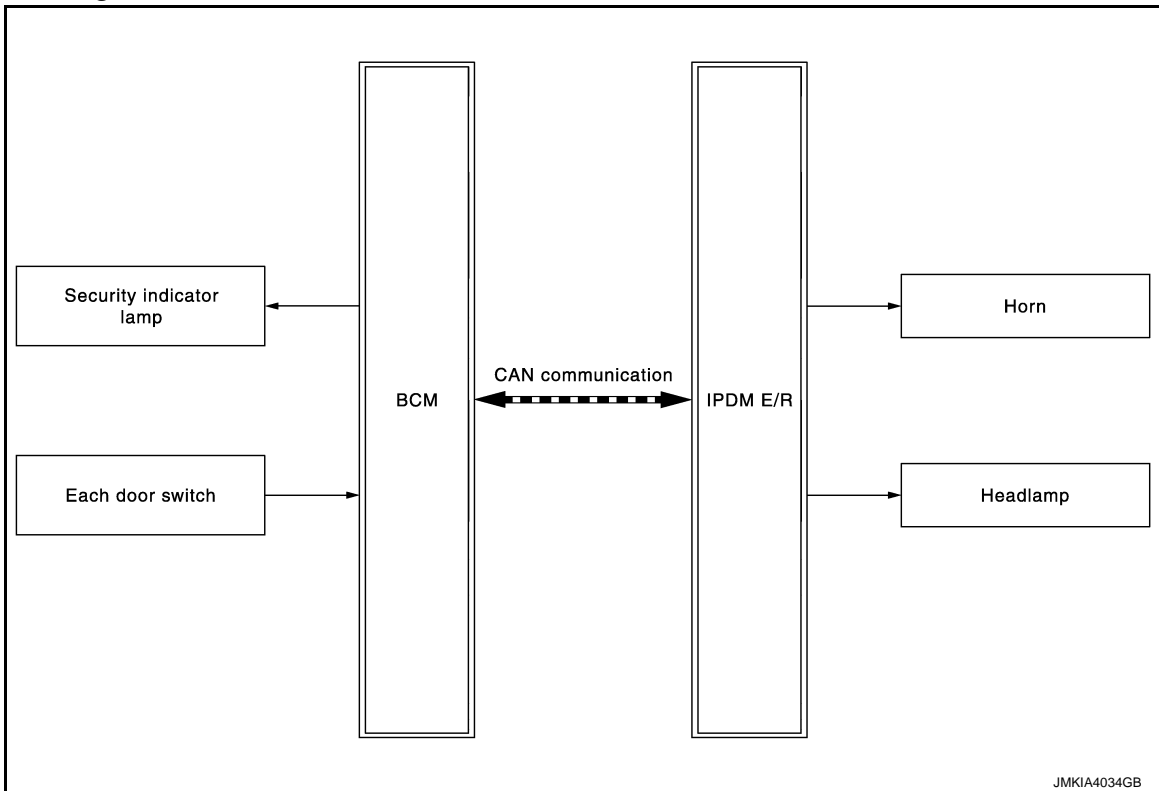


JMKIA4034GB

System Description

INFOID:000000009950094

OPERATION FLOW

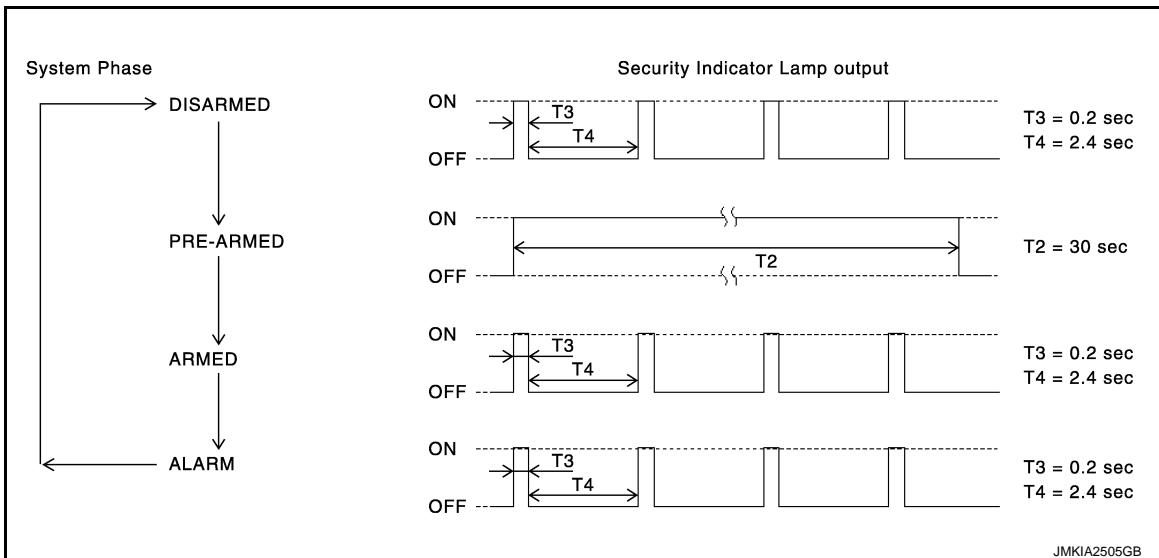

JMKIA2505GB

SETTING THE VEHICLE SECURITY SYSTEM

Initial Condition

- Ignition switch is in the OFF position.

Disarmed Phase

- When any door is open, the vehicle security system is set in the disarmed phase on the assumption that the owner is inside or near the vehicle.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

- When the vehicle security system is in the disarmed phase, the security indicator lamp blinks every 2.4 seconds.

Pre-armed Phase and Armed Phase

When the following operation 1 or 2 is performed, the vehicle security system turns into the “pre-armed” phase. (Security indicator lamp illuminates.)

1. BCM receives LOCK signal from door lock and unlock switch, door key cylinder switch door request switch or Intelligent Key, after all doors are closed.
2. All doors are closed after all doors are locked by mechanical key or door lock and unlock switch.

CANCELING THE ARMED PHASE VEHICLE SECURITY SYSTEM

When one of the following operations is performed, the armed phase is canceled.

1. Unlock all doors with the door lock and unlock switch, door key cylinder switch door request switch or Intelligent Key.
2. Turn ignition switch “ON” or “ACC” position.

CANCELING THE ALARM OPERATION OF THE VEHICLE SECURITY SYSTEM

When one of the following operations is performed, the alarm operation is canceled.

1. Unlock all doors with the door request switch or Intelligent Key.
2. Turn ignition switch “ON” or “ACC” position.

ACTIVATING THE ALARM OPERATION OF THE VEHICLE SECURITY SYSTEM

Check that the system is in the armed phase. (Security indicator lamp blinks every 2.4 seconds.)

When the following operations 1 or 2 is performed, the system sounds the horns and blinks the headlamps for about 50 seconds.

1. Any door is open during the armed phase.
2. Disconnecting and connecting the battery connector before canceling the armed phase.

PANIC ALARM OPERATION

When BCM receives panic alarm signal from Intelligent Key, ground is supplied intermittently to both headlamp relay and horn relay.

When headlamp relay and horn relay are energized, then power is supplied to headlamps (HI) and horn. The headlamp (HI) blinks and the horn sounds intermittently.

The alarm automatically turns off after 50 seconds or when BCM receives any signal from Intelligent Key or door request switch.


VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000009950095

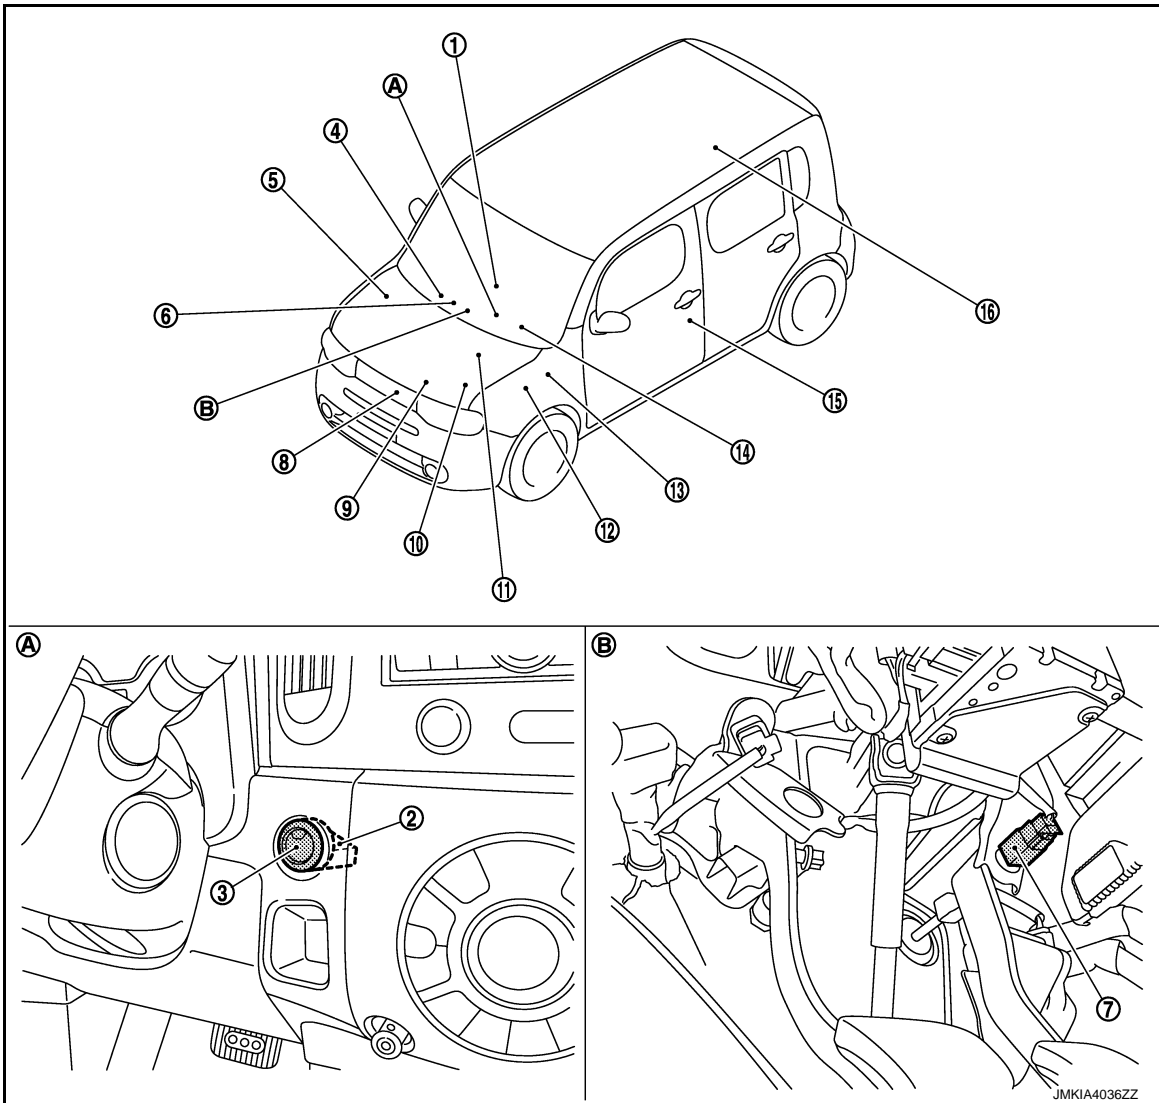

- | | | |
|--|---|--|
| 1. CVT shift selector (detention switch) M58 | 2. NATS antenna amp. M26 | 3. Push-button ignition switch M101 |
| 4. Remote keyless entry receiver M87
Refer to DLK-18. "INTELLIGENT KEY SYSTEM : Component Parts Location" | 5. ABS actuator and electric unit (control unit) E36
Refer to BRC-12. "Component Parts Location" | 6. Inside key antenna (instrument center) M105 |
| 7. Stop lamp switch E115 | 8. Horn E50, E51 | 9. Transmission range switch F21 |
| 10. IPDM E/R E10, E11, E12, E13, E14, E15, E17
Refer to PCS-5. "Component Parts Location" | 11. ECM E16 | 12. TCM E18 |
| 13. BCM M68, M69, M70, M71
Refer to BCS-10. "Component Parts Location" | 14. Security indicator lamp (combination meter) M34 | 15. Front door switch (driver side) B34 |
| 16. Inside key antenna (luggage room) B82 | | |
| A. Behind push-button ignition switch | B. Behind instrument lower cover LH | |

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Component Description

INFOID:000000009950096

Component	Reference
BCM	SEC-73
Security indicator lamp	SEC-88
Door switch	DLK-55
Headlamp	SEC-92
Horn	SEC-90

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000010246075

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
Automatic air conditioner	AIR CONDITONER		×	
<ul style="list-style-type: none"> Intelligent Key system Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door	TRUNK		×	
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	TPMS (AIR PRESSURE MONITOR)	×	×	×

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK"* to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"*
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK"*) to low power consumption mode
	LOCK		Power supply position is "LOCK"*
	OFF		Power supply position is "OFF" (Ignition switch OFF)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
	ENGINE RUN		Power supply position is "RUN" (Ignition switch ON with engine running)
CRANKING	Power supply position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	<p>The number of times that ignition switch is turned ON after DTC is detected</p> <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 	

NOTE:

*: Power position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position (CVT models), and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:000000010246074

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor item	Description	A
CONFIRM KEY FOB ID	It can be checked whether Intelligent Key ID code is registered or not in this mode	A
AUTO LOCK SET	Auto door lock time can be changed in this mode <ul style="list-style-type: none"> • MODE 1: OFF • MODE 2: 30 sec • MODE 3: 1 minute • MODE 4: 2 minutes • MODE 5: 3 minutes • MODE 6: 4 minutes • MODE 7: 5 minutes 	B C
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch mode can be changed to operation in this mode <ul style="list-style-type: none"> • On: Operate • Off: Non-operation 	D
ENGINE START BY I-KEY	Engine start function mode can be changed to operation with this mode <ul style="list-style-type: none"> • On: Operate • Off: Non-operation 	E
TRUNK/GLASS HATCH OPEN	NOTE: This item is displayed, but cannot be monitored	F
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode <ul style="list-style-type: none"> • MODE 1: 0.5 sec • MODE 2: Non-operation • MODE 3: 1.5 sec 	G
TRUNK OPEN DELAY	NOTE: This item is displayed, but cannot be monitored	H
LO- BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operation with this mode <ul style="list-style-type: none"> • On: Operate • Off: Non-operation 	I
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operation with this mode <ul style="list-style-type: none"> • On: Operate • Off: Non-operation 	J
HAZARD ANSWER BACK	Hazard reminder function mode by door request switch and Intelligent Key button can be selected from the following with this mode <ul style="list-style-type: none"> • Lock Only: Door lock operation only • Unlock Only: Door unlock operation only • Lock/Unlock: Lock/unlock operation • Off: Non-operation 	L
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following with this mode <ul style="list-style-type: none"> • Horn Chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • Off: Non-operation 	M
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operation with this mode <ul style="list-style-type: none"> • On: Operate • Off: Non-operation 	N
SHORT CRANKING OUTPUT	Starter motor can operate during the times below	O
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis	
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode <ul style="list-style-type: none"> • On: Operate • Off: Non-operation 	P

SEC

SELF-DIAG RESULT

Refer to [SEC-153, "DTC Index"](#).

DATA MONITOR

NOTE:

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition
REQ SW -DR	Indicates [On/Off] condition of door request switch (driver side)
REQ SW -AS	Indicates [On/Off] condition of door request switch (passenger side)
REQ SW -BD/TR	Indicates [On/Off] condition of back door request switch
PUSH SW	Indicates [On/Off] condition of push-button ignition switch
CLUTCH SW*1	Indicates [On/Off] condition of clutch switch
BRAKE SW 1	Indicates [On/Off]*2 condition of brake switch power supply
BRAKE SW 2	Indicates [On/Off] condition of brake switch
DETE/CANCL SW	Indicates [On/Off] condition of P position
SFT PN/N SW	Indicates [On/Off] condition of P or N position
S/L -LOCK	NOTE: This item is displayed, but cannot be monitored
S/L -UNLOCK	NOTE: This item is displayed, but cannot be monitored
S/L RELAY -F/B	NOTE: This item is displayed, but cannot be monitored
UNLK SEN -DR	Indicates [On/Off] condition of driver door UNLOCK status
PUSH SW -IPDM	Indicates [On/Off] condition of push-button ignition switch
IGN RLY1 -F/B	Indicates [On/Off] condition of ignition relay 1
DETE SW -IPDM	Indicates [On/Off] condition of P position
SFT PN -IPDM	Indicates [On/Off] condition of P or N position
SFT P -MET	Indicates [On/Off] condition of P position
SFT N -MET	Indicates [On/Off] condition of N position
ENGINE STATE	Indicates [Stop/Stall/Crank/Run] condition of engine states
S/L LOCK-IPDM	NOTE: This item is displayed, but cannot be monitored
S/L UNLK-IPDM	NOTE: This item is displayed, but cannot be monitored
S/L RELAY-REQ	NOTE: This item is displayed, but cannot be monitored
VEH SPEED 1	Display the vehicle speed signal received from combination meter by numerical value [Km/h]
VEH SPEED 2	Display the vehicle speed signal received from ABS or VDC or TCM by numerical value [Km/h]
DOOR STAT-DR	Indicates [LOCK/READY/UNLK] condition of driver side door status
DOOR STAT-AS	Indicates [LOCK/READY/UNLK] condition of passenger side door status
ID OK FLAG	Indicates [Set/Reset] condition of key ID
PRMT ENG STRT	Indicates [Set/Reset] condition of engine start possibility
PRMT RKE STRT	NOTE: This item is displayed, but cannot be monitored
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored
RKE-LOCK	Indicates [On/Off] condition of LOCK signal from Intelligent Key
RKE-UNLOCK	Indicates [On/Off] condition of UNLOCK signal from Intelligent Key
RKE-TR/BD	NOTE: This item is displayed, but cannot be monitored
RKE-PANIC	Indicates [On/Off] condition of PANIC button of Intelligent Key
RKE-MODE CHG	Indicates [On/Off] condition of MODE CHANGE signal from Intelligent Key

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor Item	Condition
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing
RKE OPE COUN2	NOTE: This item is displayed, but cannot be monitored

*1: It is displayed but does not operate on M/T models.

*2: OFF is displayed when brake pedal is depressed while brake switch power supply is OFF.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation <ul style="list-style-type: none"> • On: Operate • Off: Non-operation
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation <ul style="list-style-type: none"> • On: Operate • Off: Non-operation
INSIDE BUZZER	This test is able to check warning chime in combination meter operation <ul style="list-style-type: none"> • Take out: Take away warning chime sounds when CONSULT screen is touched • Key: Key warning chime sounds when CONSULT screen is touched • Knob: OFF position warning chime sounds when CONSULT screen is touched
INDICATOR	This test is able to check warning lamp operation <ul style="list-style-type: none"> • KEY ON: "KEY" Warning lamp illuminates when CONSULT screen is touched • "KEY" Warning lamp blinks when CONSULT screen is touched
INT LAMP	This test is able to check interior room lamp operation <ul style="list-style-type: none"> • On: Operate • Off: Non-operation
LCD	This test is able to check meter display information <ul style="list-style-type: none"> • BP N: Engine start operation indicator lamp indicate when CONSULT screen is touched • BP I: Engine start operation indicator lamp indicate when CONSULT screen is touched • ID NG: This item is displayed, but cannot be monitored • ROTAT: This item is displayed, but cannot be monitored • SFT P: Shift P warning lamp indicate when CONSULT screen is touched • INSRT: This item is displayed, but cannot be monitored • BATT: Key warning lamp indicator when CONSULT screen is touched • NO KY: This item is displayed, but cannot be monitored • OUTKEY: Engine start operation indicator lamp indicate when CONSULT screen is touched • LK WN: Engine start operation indicator lamp indicate when CONSULT screen is touched
FLASHER	This test is able to check security hazard lamp operation The hazard lamps are activated after "LH/RH/Off" on CONSULT screen is touched
HORN	This test is able to check horn operation The horn is activated after "ON" on CONSULT screen is touched
P RANGE	This test is able to check CVT shift selector power supply <ul style="list-style-type: none"> • On: Operate • Off: Non-operation
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation Push-ignition switch illumination illuminates when "ON" on CONSULT screen is touched
PUSH SWITCH INDICATOR	This test is able to check LOCK indicator in push-ignition switch operation LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched
TRUNK/BACK DOOR	NOTE: This item is displayed, but cannot be monitored

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT)

INFOID:000000009950099

DATA MONITOR

NOTE:

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitored Item	Description
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -RR	NOTE: This is displayed even when it is not equipped.
REQ SW -RL	NOTE: This is displayed even when it is not equipped.
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch (driver side).
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch (passenger side).
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
DOOR SW-BK	Indicates [ON/OFF] condition of back door switch.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from door lock/unlock switch LH and RH.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from door lock/unlock switch LH and RH.
KEY CYL LK-SW	Indicates [ON/OFF] condition of lock signal from door key cylinder.
KEY CYL UN-SW	Indicates [ON/OFF] condition of unlock signal from door key cylinder.
TR/BD OPEN SW	NOTE: This is displayed even when it is not equipped.
TRNK/HAT MNTR	NOTE: This is displayed even when it is not equipped.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	NOTE: This is displayed even when it is not equipped.

WORK SUPPORT

Service Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT screen.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. Security indicator lamp is turned on when "ON" on CONSULT screen is touched.
VEHICLE SECURITY HORN	This test is able to check horn operation. Horn is activated for 0.5 seconds after "ON" on CONSULT screen is touched.
HEADLAMP(HI)	This test is able to check headlamp operation. Headlamps are activated for 0.5 seconds after "ON" on CONSULT screen is touched.
FLASHER	This test is able to check hazard warning lamp operation. Hazard warning lamps are activated after "ON" on CONSULT screen is touched.

IMMU

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

IMMU : CONSULT Function (BCM - IMMU)

INFOID:000000009950100

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Content
CONFIRM ID ALL	Indicates [YET] at all time. Switches to [DONE] when a registered Intelligent Key backside is contacted to push-button ignition switch.
CONFIRM ID4	
CONFIRM ID3	
CONFIRM ID2	
CONFIRM ID1	
NOT REGISTERED	Indicates [ID OK] when key ID that is registered is received or is not yet received. Indicates [ID NG] when key ID that is not registered is received.
TP 4	Indicates the number of IDs that are registered.
TP 3	
TP 2	
TP 1	
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.

ACTIVE TEST

Test item	Description
THEFT IND	This test is able to check security indicator lamp operation. Security indicator lamp is turned on when "ON" on CONSULT screen touched.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS SYSTEM (IPDM E/R)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R)

CONSULT Function (IPDM E/R)

INFOID:000000010251891

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-32. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIG- NALS	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the clutch interlock switch (M/T models) or shift position (CVT models) judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.

DIAGNOSIS SYSTEM (IPDM E/R)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NALS	Description
ST/INHI RLY [Off/ ST ON/INHI ON/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the CVT shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		NOTE: The item is indicated, but not monitored.
S/L STATE [LOCK/UNLOCK/UNKWN]		NOTE: The item is indicated, but not monitored.
DTRL REQ [Off/On]		NOTE: The item is indicated, but not monitored.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		NOTE: The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.

ACTIVE TEST

Test item	Operation	Description
HORN	On	Operates horn relay for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Operates the cooling fan relay (LO operation).
	3	Operates the cooling fan relay (HI operation).
	4	
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

DTC/CIRCUIT DIAGNOSIS

P1610 LOCK MODE

Description

INFOID:000000009950102

ECM forcibly switches to the mode that inhibits engine start, when engine start operation is performed 5 times or more while communication between ECM and BCM is not normal.

DTC Logic

INFOID:000000009950103

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When ECM detects a communication malfunction between ECM and BCM 5 times or more	—

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-34. "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950104

1.CHECK ENGINE START FUNCTION

1. Perform the check for DTC except DTC P1610.
2. Use CONSULT to erase DTC after fixing.
3. Turn ignition switch OFF.
4. Turn ignition switch ON when registered Intelligent Key backside is contacted to push-button ignition switch and wait for 5 seconds.
5. Turn the ignition switch OFF and wait 5 seconds.
6. Repeat steps 4 and 5 twice (a total of 3 times).
7. Check that engine can start when registered Intelligent Key backside is contacted to push-button ignition switch.

>> INSPECTION END

P1611 ID DISCORD, IMMUECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1611 ID DISCORD, IMMUECM

Description

INFOID:000000009950105

BCM performs the ID verification with ECM that allows the engine to start. Start the engine if the ID is successfully verified. ECM prevents the engine from starting if the ID is not registered. BCM starts the communication with ECM if ignition switch is turned ON.

DTC Logic

INFOID:000000009950106

DTC DETECTION LOGIC

NOTE:

- If DTC P1611 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC P1611 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1611	ID DISCORD, IMMUECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none">• BCM• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-35, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950107

1. PERFORM INITIALIZATION

Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> INSPECTION END
NO >> GO TO 2.

2. CHECK SELF-DIAGNOSIS RESULT

1. Perform "Self-diagnosis result" of ECM using CONSULT.
2. Erase DTC.
3. Perform DTC confirmation Procedure. Refer to [EC-454, "DTC Inspection Priority Chart"](#).

Is DTC detected?

- YES >> GO TO 3.
NO >> INSPECTION END

3. REPLACE BCM

1. Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> INSPECTION END
NO >> GO TO 4.

4. REPLACE ECM

1. Replace ECM. Refer to [SEC-9, "ECM : Special Repair Requirement"](#).

P1611 ID DISCORD, IMMU-ECM

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

Can the system be initialized and can the engine be started with registered Intelligent Key?

YES >> INSPECTION END

NO >> GO TO 5.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

P1612 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1612 CHAIN OF ECM-IMMU

Description

INFOID:000000009950108

BCM performs ID verification with ECM that allows the engine to start. Start the engine if the ID is successfully verified. ECM prevents the engine from starting if the ID is not registered. BCM starts the communication with ECM if ignition switch is turned ON.

DTC Logic

INFOID:000000009950109

DTC DETECTION LOGIC

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1612	CHAIN OF ECM-IMMU	Inactive communication between ECM and BCM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-37, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950110

1.REPLACE BCM

1. Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

Does the engine start?

- YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE ECM

Replace ECM. Refer to [SEC-9, "ECM : Special Repair Requirement"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2192 ID DISCORD, IMMU-ECM**Description**

INFOID:000000009950111

BCM performs ID verification with ECM that allows the engine to start. Start the engine if the ID is successfully verified. ECM prevents the engine from starting if the ID is not registered. BCM starts the communication with ECM if ignition switch is turned ON.

DTC Logic

INFOID:000000009950112

DTC DETECTION LOGIC**NOTE:**

- If DTC B2192 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2192 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD, BCM-ECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none"> • BCM • ECM

DTC CONFIRMATION PROCEDURE**1.PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON under the following conditions.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-38, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950113

1.PERFORM INITIALIZATION

Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> INSPECTION END
 NO >> GO TO 2.

2.CHECK SELF-DIAGNOSIS RESULT

1. Perform "Self-diagnosis result" of BCM using CONSULT.
2. Erase DTC.
3. Perform DTC Confirmation Procedure. Refer to [SEC-38, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 3.
 NO >> INSPECTION END

3.REPLACE BCM

1. Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> INSPECTION END
 NO >> GO TO 4.

4.REPLACE ECM

1. Replace ECM. Refer to [SEC-9, "ECM : Special Repair Requirement"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

B2192 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Can the system be initialized and can the engine be started with registered Intelligent Key?

YES >> INSPECTION END

NO >> GO TO 5.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-40. "Intermittent Incident"](#).

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

B2193 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2193 CHAIN OF ECM-IMMU

Description

INFOID:000000009950114

BCM performs the ID verification with ECM that allows the engine to start. Start the engine if the ID is successfully verified. ECM prevents the engine from starting if the ID is not registered. BCM starts the communication with ECM if ignition switch is turned ON.

DTC Logic

INFOID:000000009950115

DTC DETECTION LOGIC

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193	CHAIN OF ECM-BCM	Inactive communication between ECM and BCM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-40, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950116

1.REPLACE BCM

1. Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

Does the engine start?

- YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE ECM

Replace ECM. Refer to [SEC-9, "ECM : Special Repair Requirement"](#).

>> INSPECTION END

B2195 ANTI-SCANNING

Description

INFOID:000000009950117

When ignition switch is turned ON, BCM performs ID verification with ECM. If ID verification that is out of the specified specification is detected, BCM prohibits further ID verification and engine cranking.

DTC Logic

INFOID:000000009950118

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2195	ANTI SCANNING	ID verification between BCM and ECM that is out of the specified specification is detected	ID verification request out of the specified specification

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-41, "Diagnosis Procedure"](#).
- NO >> INSPECTION END.

Diagnosis Procedure

INFOID:000000009950119

1.CHECK SELF-DIAGNOSIS RESULT-1

1. Perform "Self-diagnosis result" of BCM using CONSULT.
2. Erase DTC.
3. Perform DTC Confirmation Procedure. Refer to [SEC-41, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 2.
- NO >> INSPECTION END

2.CHECK EQUIPMENT OF THE VEHICLE

Check that unspecified accessory part related to engine start is not installed.

Is unspecified accessory part related to engine start installed?

- YES >> GO TO 3.
- NO >> GO TO 4.

3.CHECK SELF-DIAGNOSIS RESULT-2

1. Obtain the customers approval to remove unspecified accessory part related to engine start, and then remove it.
2. Perform "Self-diagnosis result" of BCM using CONSULT.
3. Erase DTC.
4. Perform DTC Confirmation Procedure. Refer to [SEC-41, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 4.
- NO >> INSPECTION END

4.REPLACE BCM

1. Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2198 NATS ANTENNA AMP.

Description

INFOID:000000009950123

Performs ID verification through BCM and Intelligent Key when push-button ignition switch is pressed. Prohibits the release of start of engine when an unregistered ID of Intelligent Key is used.

DTC Logic

INFOID:000000009950124

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2198	NATS ANTENNA AMP.	Inactive communication between NATS antenna amp. and BCM.	<ul style="list-style-type: none"> • Harness or connectors • NATS antenna amp. • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE 1

1. Intelligent Key backside is contacted to push-button ignition switch.
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-42, "Diagnosis Procedure"](#).
 NO >> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE 2

1. Press the push-button ignition switch.
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-42, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950125

1.CHECK FUSE

Check that the following IPDM E/R fuse is not blown.

Signal name	Fuse No.
Battery power supply	43

Is the fuse fusing?

- YES >> Is the blown fuse after repairing the affected circuit if a fuse is blown.
 NO >> GO TO 2.

2.CHECK NATS ANTENNA AMP. POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect NATS antenna amp. connector.
3. Check voltage between NATS antenna amp. harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
NATS antenna amp.			
Connector	Terminal		
M26	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> GO TO 3.

B2198 NATS ANTENNA AMP.

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

3. CHECK NATS ANTENNA AMP. POWER SUPPLY CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and NATS antenna amp. connector.

IPDM E/R		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
E14	45	M26	1	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E14	45		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

4. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL 1

1. Connect NATS antenna amp. connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M68	21	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

5. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL CIRCUIT 1

1. Disconnect NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M68	21	M26	2	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M68	21		Not existed

Is the inspection result normal?

YES >> Replace NATS antenna amp. Refer to [SEC-174, "Removal and Installation"](#).

NO >> Repair or replace harness.

6. CHECK NATS ANTENNA AMP. COMMUNICATION SIGNAL

1. Connect BCM connector.
2. Check voltage between BCM harness connector and ground using analog tester.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M68	21	Ground	Intelligent Key backside is contacted to push-button ignition switch, turn ignition switch ON.	Just after pressing push-button ignition switch. Pointer of analog tester should move.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace NATS antenna amp. Refer to [SEC-174, "Removal and Installation"](#).

7.CHECK NATS ANTENNA AMP. OUTPUT SIGNAL 2

1. Disconnect BCM connector.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M68	25	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 8.

8.CHECK NATS ANTENNA AMP. OUTPUT SIGNAL CIRCUIT 2

1. Disconnect NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M68	25	M26	3	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M68	25		Not existed

Is the inspection result normal?

YES >> Replace NATS antenna amp. Refer to [SEC-174, "Removal and Installation"](#).

NO >> Repair or replace harness.

9.CHECK NATS ANTENNA AMP. COMMUNICATION SIGNAL

1. Connect BCM connector.
2. Check voltage between BCM harness connector and ground using analog tester.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M68	25	Ground	Intelligent Key backside is contacted to push-button ignition switch, turn ignition switch ON.	Just after pressing push-button ignition switch. Pointer of analog tester should move.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace NATS antenna amp. Refer to [SEC-174, "Removal and Installation"](#).

10.CHECK NATS ANTENNA AMP. GROUND CIRCUIT

B2198 NATS ANTENNA AMP.

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

1. Disconnect NATS antenna amp. connector.
2. Check continuity between NATS antenna amp. harness connector and ground.

NATS antenna amp.		Ground	Continuity
Connector	Terminal		Existed
M68	4		

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace harness.

11.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2555 STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2555 STOP LAMP

Description

INFOID:000000009950126

BCM detects the stop lamp status and confirms the stop lamp switch ON/OFF status. BCM confirms the engine start condition according to the stop lamp switch ON/OFF status.

DTC Logic

INFOID:000000009950127

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2555	STOP LAMP	BCM makes a comparison between the upper voltage and lower voltage of stop lamp switch. It judges from their values to detect the malfunctioning circuit.	<ul style="list-style-type: none"> Harness or connectors (Stop lamp switch circuit is open or shorted) Stop lamp switch Fuse

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- Depress the brake pedal and wait 1 second or more.
- Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-46, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950128

1. CHECK STOP LAMP SWITCH INPUT SIGNAL 1

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M71	105	Ground	Battery voltage

Is the inspection normal?

- YES >> GO TO 2.
 NO-1 >> Check 10 A fuse [No. 9, located in the fuse block (J/B)].
 NO-2 >> Check harness for open or short between BCM and fuse.

2. CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

- Disconnect stop lamp switch connector.
- Check voltage between stop lamp harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Stop lamp switch			
Connector	Terminal		
E115	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Check harness for open or short to stop lamp switch.

3. CHECK STOP LAMP SWITCH INPUT SIGNAL 2

B2555 STOP LAMP

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

1. Connect stop lamp switch connector.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
BCM					
Connector	Terminal				
M68	9	Ground	Brake pedal	Depressed	Battery voltage
				Not depressed	0

Is the inspecting result normal?

YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

NO >> GO TO 4.

4.CHECK STOP LAMP SWITCH CIRCUIT

1. Check continuity between stop lamp switch harness connector and BCM harness connector.

Stop lamp switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E115	2	M68	9	Existed

2. Check continuity between stop lamp switch harness connector and ground.

Stop lamp switch		Ground	Continuity
Connector	Terminal		
E115	2		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5.CHECK STOP LAMP SWITCH

Refer to [SEC-47, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace stop lamp switch. Refer to [BR-17, "Exploded View"](#).

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000009950129

1.CHECK STOP LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch connector.
3. Check continuity between stop lamp switch terminals.

Stop lamp switch		Condition	Continuity	
Terminal				
1	2	Brake pedal	Not depressed	Not existed
			Depressed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to [BR-17, "Exploded View"](#).

B2556 PUSH-BUTTON IGNITION SWITCH

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B2556 PUSH-BUTTON IGNITION SWITCH

Description

INFOID:000000009950130

The switch changes the power supply position. BCM maintains the power supply position status. BCM changes the power supply position with the operation of the push-button ignition switch.

DTC Logic

INFOID:000000009950131

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2556	PUSH-BTN IGN SW	BCM detects the push-button ignition switch stuck at ON for 100 seconds or more.	<ul style="list-style-type: none">• Harness or connectors (Push-button ignition switch circuit is shorted.)• Push-button ignition switch• BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait 100 seconds or more.
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-48, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950132

1. CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
M101	8	Ground	12

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between push-button ignition switch harness connector and BCM harness connector.

Push-button ignition switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M101	8	M71	76	Existed

3. Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M101	8		Not existed

Is the inspection result normal?

B2556 PUSH-BUTTON IGNITION SWITCH

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace BCM. Refer to [BCS-88. "Removal and Installation"](#).
NO >> Repair or replace harness.

3.CHECK PUSH-BUTTON IGNITION SWITCH GROUND CIRCUIT

Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		Existed
M101	4		

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace harness.

4.CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [SEC-49. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Replace push-button ignition switch. Refer to [PCS-144. "Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-40. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000009950133

1.CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition	Continuity
Terminal			Existed
4	8	Push-button ignition switch	Pressed
			Not pressed
			Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace push-button ignition switch. Refer to [PCS-144. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2557 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2557 VEHICLE SPEED

Description

INFOID:000000009950134

BCM receives 2 vehicle speed signals via CAN communication. 1 signal is transmitted by the “combination meter”. Another signal is transmitted by “ABS actuator and electric unit (control unit.)”. BCM compares both signals to detect the vehicle speed.

DTC Logic

INFOID:000000009950135

DTC DETECTION LOGIC

NOTE:

- If DTC B2557 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2557 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Self-diagnosis name	DTC detecting condition	Possible causes
B2557	VEHICLE SPEED	BCM detects the following difference between the vehicle speed signal from “combination meter” and the one from “ABS actuator and electric unit” for 10 seconds continuously. <ul style="list-style-type: none">• One is 10 km/h (6.2 MPH) or more and the other is 4 km/h (2.5 MPH) or less	<ul style="list-style-type: none">• Combination meter• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Drive the vehicle at the vehicle speed of 10 km/h (6.2 MPH) or more and wait 10 seconds or more.
2. Check “Self-diagnosis result” using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-50, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950136

1.CHECK DTC WITH “ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)”

Check “Self-diagnosis result” using CONSULT. Refer to [BRC-98, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK DTC WITH “COMBINATION METER”

Check “Self-diagnosis result” using CONSULT. Refer to [MWI-62, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the malfunctioning parts.

3.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

B2601 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B2601 SHIFT POSITION

Description

INFOID:000000009950137

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000009950138

DTC DETECTION LOGIC

NOTE:

- If DTC B2601 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2601 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).
- If DTC B2601 is displayed with DTC B2603, first perform the trouble diagnosis for DTC B2603. Refer to [SEC-57, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2601	SHIFT POSITION	When there is a difference between P range signal from CVT shift selector and shift position signal from IPDM E/R	<ul style="list-style-type: none"> • Harness or connectors (CVT shift selector circuit is open or shorted) • CVT shift selector (detention switch) • BCM • CAN communication malfunction between BCM and IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 2 seconds or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-51, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950139

1. CHECK CVT SHIFT SELECTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector (detention switch) connector.
3. Check voltage between CVT shift selector (detention switch) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
CVT shift selector (detention switch)	Connector		
	Terminal	Ground	12
	M58		

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> GO TO 2.

2. CHECK CVT SHIFT SELECTOR POWER SUPPLY CIRCUIT

B2601 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

1. Disconnect BCM connector.
2. Check continuity between CVT shift selector (detention switch) harness connector and BCM harness connector.

CVT shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M58	7	M71	104	Existed

3. Check continuity between CVT shift selector (detention switch) harness connector and ground.

CVT shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M58	7		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

NO >> Repair or replace harness.

3. CHECK CVT SHIFT SELECTOR CIRCUIT (BCM)

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between CVT shift selector (detention switch) harness connector and BCM harness connector.

CVT shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M58	8	M68	37	Existed

3. Check continuity between CVT shift selector (detention switch) harness connector and ground.

CVT shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M58	8		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK CVT SHIFT SELECTOR CIRCUIT (IPDM E/R)

Check continuity between CVT shift selector (detention switch) harness connector and IPDM E/R harness connector.

CVT shift selector (detention switch)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M58	8	E17	64	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5. CHECK CVT SHIFT SELECTOR (DETENTION SWITCH)

Refer to [SEC-53, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace CVT shift selector. Refer to [TM-216, "Removal and Installation"](#).

6. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

B2601 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

>> INSPECTION END

Component Inspection

INFOID:000000009950140

1. CHECK CVT SHIFT SELECTOR (DETENTION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Check continuity between CVT shift selector (detention switch) terminals.

CVT shift selector (detention switch)		Condition		Continuity
Terminal				
7	8	Selector lever	P position	Not existed
			Other than above	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace CVT shift selector. Refer to [TM-216. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2602 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B2602 SHIFT POSITION

Description

INFOID:000000009950141

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000009950142

DTC DETECTION LOGIC

NOTE:

- If DTC B2602 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2602 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2602	SHIFT POSITION	BCM detects the following status for 10 seconds. <ul style="list-style-type: none"> • Shift position is in the P position • Vehicle speed is 4 km/h (2.5 MPH) or more • Ignition switch is in the ON position 	<ul style="list-style-type: none"> • Harness or connectors (CVT shift selector circuit is open or shorted) • CVT shift selector (detention switch) • BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine under the following conditions and wait 10 seconds or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-54, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950143

1. CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT"

Check "Self-diagnosis result" using CONSULT. Refer to [BRC-98, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace the malfunctioning parts.

2. CHECK CVT SHIFT SELECTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector (detention switch) connector.
3. Check voltage between CVT shift selector (detention switch) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
M58	7	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.

B2602 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 3.

3. CHECK CVT SHIFT SELECTOR POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between CVT shift selector (detention switch) harness connector and BCM harness connector.

CVT shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M58	7	M71	104	Existed

3. Check continuity between CVT shift selector (detention switch) harness connector and ground.

CVT shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M58	7		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-88. "Removal and Installation"](#).

NO >> Repair or replace harness.

4. CHECK CVT SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between CVT shift selector (detention switch) harness connector and BCM harness connector.

CVT shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M58	8	M68	37	Existed

3. Check continuity between CVT shift selector (detention switch) harness connector and ground.

CVT shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M58	8		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5. CHECK CVT SHIFT SELECTOR (DETENTION SWITCH)

Refer to [SEC-55. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace CVT shift selector. Refer to [TM-216. "Removal and Installation"](#).

6. CHECK INTERMITTENT INCIDENT

Refer to [GI-40. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000009950144

1. CHECK CVT SHIFT SELECTOR (DETENTION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Check continuity between CVT shift selector (detention switch) terminals.

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

CVT shift selector (detention switch)		Condition		Continuity
Terminal				
7	8	Selector lever	P position	Not existed
			Other than above	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace CVT shift selector. Refer to [TM-216, "Removal and Installation"](#).

B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2603 SHIFT POSITION

Description

INFOID:000000009950145

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000009950146

DTC DETECTION LOGIC

NOTE:

- If DTC B2603 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2603 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).
- If DTC B2603 is displayed with DTC B2601, first perform the trouble diagnosis for DTC B2601. Refer to [SEC-51, "DTC Logic"](#).

DTC No.	Self-diagnosis name	DTC detecting condition	Possible causes
B2603	SHIFT POSI STATUS	BCM detects the following status when ignition switch is in the ON position. <ul style="list-style-type: none"> • Transmission range switch: approx. 0 V • CVT shift selector (detention switch): approx. 0 V 	<ul style="list-style-type: none"> • Harness or connector (CVT shift selector circuit is open or shorted) • Harness or connectors (Transmission range switch circuit is open or shorted) • CVT shift selector (detention switch) • Transmission range switch • BCM • IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE 1

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-57, "Diagnosis Procedure"](#).
 NO >> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE 2

1. After step 1 of DTC confirmation procedure, shift selector lever to a position other than P or N
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-57, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950147

1. INSPECTION START

Perform inspection in accordance with procedure that confirms DTC.

Which procedure confirms DTC?

- DTC confirmation procedure 1 >> GO TO 2.
 DTC confirmation procedure 2 >> GO TO 7.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

2. CHECK TRANSMISSION RANGE SWITCH POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Turn ignition switch ON.
4. Check voltage between transmission range switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Transmission range switch			
Connector	Terminal	Ground	Battery voltage
F21	1		

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK TRANSMISSION RANGE SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between transmission range switch harness connector and IPDM E/R harness connector.

Transmission range switch		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F21	1	E15	59	Existed

4. Check continuity between transmission range switch harness connector and ground.

A/T assembly		Ground	Continuity
Connector	Terminal		
F21	1		Not existed

Is the inspection result normal?

YES >> Check 10 A fuse (No. 56, located in the IPDM E/R).

NO >> Repair or replace harness.

4. CHECK BCM INPUT SIGNAL

1. Turn ignition switch OFF.
2. Connect transmission range switch connector.
3. Turn ignition switch ON.
4. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal	Ground	Selector lever	Battery voltage
M71	102			
		Other than above	0	

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

NO >> GO TO 5.

5. CHECK BCM INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Check continuity between transmission range switch harness connector and BCM harness connector.

B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Transmission range switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F21	2	M71	102	Existed

4. Check continuity between transmission range switch harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F21	2		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK TRANSMISSION RANGE SWITCH

Refer to [SEC-60, "Component Inspection \(Transmission Range Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 12.

NO >> Replace transaxle assembly. Refer to [TM-235, "Exploded View"](#).

7.CHECK CVT SHIFT SELECTOR POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect CVT shift selector (detention switch) connector.
- Check voltage between CVT shift selector (detention switch) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Connector	Terminal		
M58	7	Ground	12

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 8.

8.CHECK CVT SHIFT SELECTOR POWER SUPPLY CIRCUIT

- Disconnect BCM connector.
- Check continuity between CVT shift selector (detention switch) harness connector and BCM harness connector.

CVT shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M58	7	M71	104	Existed

3. Check continuity between CVT shift selector (detention switch) harness connector and ground.

CVT shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M58	7		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

NO >> Repair or replace harness.

9.CHECK CVT SHIFT SELECTOR CIRCUIT (BCM)

- Disconnect BCM connector and IPDM E/R connector.
- Check continuity between CVT shift selector (detention switch) harness connector and BCM harness connector.

B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

CVT shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M58	8	M68	37	Existed

3. Check continuity between CVT shift selector (detention switch) harness connector and ground.

CVT shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M58	8		Not existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace harness.

10.CHECK CVT SHIFT SELECTOR CIRCUIT (IPDM E/R)

Check continuity between CVT shift selector (detention switch) harness connector and IPDM E/R harness connector.

CVT shift selector (detention switch)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M58	8	E17	64	Existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace harness.

11.CHECK CVT SHIFT SELECTOR (DETENTION SWITCH)

Refer to [SEC-60. "Component Inspection \[CVT Shift Selector \(Detention Switch\)\]"](#).

Is the inspection result normal?

YES >> GO TO 12.

NO >> Replace CVT shift selector. Refer to [TM-216. "Removal and Installation"](#).

12.CHECK INTERMITTENT INCIDENT

Refer to [GI-40. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection (Transmission Range Switch)

INFOID:000000009950148

1.CHECK TRANSMISSION RANGE SWITCH

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Check continuity between transmission range switch terminals.

Transmission range switch		Condition	Continuity
Terminal			
1	2	P or N position	Existed
		Other than above	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace transaxle assembly. Refer to [TM-235. "Exploded View"](#).

Component Inspection [CVT Shift Selector (Detention Switch)]

INFOID:000000009950149

1.CHECK CVT SHIFT SELECTOR (DETENTION SWITCH)

B2603 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Check continuity between CVT shift selector (detention switch) terminals.

CVT shift selector (detention switch)		Condition		Continuity
Terminal				
7	8	Selector lever	P position	Not existed
			Other than above	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace CVT shift selector. Refer to [TM-216. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2604 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2604 SHIFT POSITION

Description

INFOID:000000009950150

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000009950151

DTC DETECTION LOGIC

NOTE:

- If DTC B2604 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2604 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2604	PNP/CLUTCH SW	The following states are detected while ignition switch is ON. <ul style="list-style-type: none"> • There is park/neutral position signal input but shift position signal input (CAN) from TCM is other than P or N • There is not park/neutral position signal input but shift position signal input (CAN) from TCM is P or N 	<ul style="list-style-type: none"> • Harness or connectors (Transmission range switch circuit is open or shorted) • Transmission range switch • BCM • IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-62, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950152

1. CHECK TRANSMISSION RANGE SWITCH POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Turn ignition switch ON.
4. Check voltage between transmission range switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Transmission range switch			
Connector	Terminal		
F21	1	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK TRANSMISSION RANGE SWITCH POWER SUPPLY CIRCUIT

B2604 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between transmission range switch harness connector and IPDM E/R harness connector.

Transmission range switch		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F21	1	E15	59	Existed

4. Check continuity between transmission range switch harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F21	1		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

3. CHECK BCM INPUT SIGNAL

1. Turn ignition switch OFF.
2. Connect transmission range switch connector.
3. Turn ignition switch ON.
4. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M71	102	Ground	Selector lever	P or N position Battery voltage
			Other than above	0

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

NO >> GO TO 4.

4. CHECK BCM INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Check continuity between transmission range switch harness connector and BCM harness connector.

Transmission range switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F21	2	M71	102	Existed

4. Check continuity between transmission range switch harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F21	2		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5. CHECK TRANSMISSION RANGE SWITCH

Refer to [SEC-64, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

B2604 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace transaxle assembly. Refer to [TM-235, "Exploded View"](#).

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000009950153

1.CHECK TRANSMISSION RANGE SWITCH

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Check continuity between transmission range switch terminals.

Transmission range switch		Condition	Continuity
Terminal			
1	2	P or N position	Existed
		Other than above	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace transaxle assembly. Refer to [TM-235, "Exploded View"](#).

B2605 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2605 SHIFT POSITION

Description

INFOID:000000009950154

BCM confirms the shift position with the following 4 signals.

- Selector lever
- Transmission range switch
- P position signal from IPDM E/R (CAN)
- P position signal from TCM (CAN)

DTC Logic

INFOID:000000009950155

DTC DETECTION LOGIC

NOTE:

- If DTC B2605 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2605 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2605	PNP/CLUTCH SW	When ignition switch is ON, N range signal input and shift position signal (CAN) input from IPDM E/R do not match.	<ul style="list-style-type: none"> • Harness or connectors (Transmission range switch circuit is open or shorted) • Transmission range switch • IPDM E/R • BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-65, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950156

1. CHECK IPDM E/R INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
IPDM E/R				
Connector	Terminal			
E15	47	Ground	Selector lever	P or N position Battery voltage
				Other than above 0

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
 NO >> GO TO 2.

2. CHECK IPDM E/R INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.

B2605 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect BCM connector.
3. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E15	47	M71	102	Existed

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E15	47		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-88. "Removal and Installation"](#).
NO >> Repair or replace harness.

B2608 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2608 STARTER RELAY

Description

INFOID:000000009950157

Located in IPDM E/R, the starter relay runs the starter motor. The starter relay is turned ON by the BCM when the ignition switch is in the START position. IPDM E/R transmits the starter relay ON signal to BCM via CAN communication.

DTC Logic

INFOID:000000009950158

DTC DETECTION LOGIC

NOTE:

- If DTC B2608 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2608 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2608	STARTER RELAY	BCM outputs starter relay OFF but IPDM E/R receives starter relay ON signal.	<ul style="list-style-type: none"> • Harness or connectors (Starter relay circuit is open or shorted.) • IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-67, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950159



1.CHECK DTC WITH IPDM E/R

Check "Self-diagnosis result" using CONSULT. Refer to [PCS-32, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace the malfunctioning parts.

2.CHECK BCM POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
BCM					
Connector	Terminal				
M71	97	Ground	Selector lever	N or P position	12
				Other than above	0

Is the measurement value within the specification?

- YES >> GO TO 4.
 NO >> GO TO 3.

3.CHECK STARTER RELAY CIRCUIT

B2608 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

1. Turn ignition switch OFF.
2. Disconnect BCM connector and IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E13	30	M71	97	Existed

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	30		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
NO >> Repair or replace harness.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

B260F ENGINE STATUS

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B260F ENGINE STATUS

Description

INFOID:000000009950160

BCM receives the engine status signal from ECM via CAN communication.

DTC Logic

INFOID:000000009950161

DTC DETECTION LOGIC

NOTE:

- If DTC B260F is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B260F is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260F	ENG STATE SIG LOST	BCM has not yet received the engine status signal from ECM when ignition switch is in the ON position.	ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-69, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950162

1. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnosis result" using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
See [SEC-69, "DTC Logic"](#).

Is the DTC B260F displayed again?

- YES >> GO TO 2.
NO >> INSPECTION END

2. REPLACE ECM

Replace ECM. Refer to [SEC-9, "ECM : Special Repair Requirement"](#).

>> INSPECTION END

B26F3 STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B26F3 STARTER CONTROL RELAY

Description

INFOID:000000009950163

Starter control relay, integrated in IPDM E/R, permits the starter relay operation when in the N or P position. It is installed parallel to the starter relay.

DTC Logic

INFOID:000000009950164

DTC DETECTION LOGIC

NOTE:

- If DTC B26F3 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B26F3 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F3	START CONT RLY ON	BCM requests IPDM E/R to turn starter control relay OFF but starter control relay OFF state signal is not transmitted from IPDM E/R.	IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to start under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-70, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950165

1. CHECK DTC WITH IPDM E/R

Check "Self-diagnosis result" using CONSULT. Refer to [PCS-32, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning part.

2. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

B26F4 STARTER CONTROL RELAY

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B26F4 STARTER CONTROL RELAY

Description

INFOID:000000009950166

Located in IPDM E/R, the starter relay runs the starter motor. The starter relay is turned ON by the BCM when the ignition switch is in the START position. IPDM E/R transmits the starter relay ON signal to BCM via CAN communication.

DTC Logic

INFOID:000000009950167

DTC DETECTION LOGIC

NOTE:

- If DTC B26F4 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B26F4 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F4	START CONT RELAY OFF	BCM requests IPDM E/R to turn starter control relay ON but starter control relay ON state signal is not transmitted from IPDM E/R.	<ul style="list-style-type: none"> • Harness or connector (Transmission range switch circuit is open or short). • IPDM E/R • BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-71, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950168

SEC

1. CHECK IPDM E/R INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
IPDM E/R				
Connector	Terminal			
E15	47	Ground	Selector lever	P or N position Battery voltage
				Other than above 0

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
 NO >> GO TO 2.

2. CHECK IPDM E/R INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and IPDM E/R harness connector.

B26F4 STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M71	102	E15	47	Existed

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M71	102		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

NO >> Repair or replace harness.

B26F7 BCM

Description

INFOID:000000009950169

BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.

DTC Logic

INFOID:000000009950170

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F7	BCM	Inside key antenna output circuit in BCM is malfunctioning.	BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press door request switch.
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-74, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950171

1. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnosis result" using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
See [SEC-74, "DTC Logic"](#).

Is DTC detected?

- YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
- NO >> INSPECTION END

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B26F8 BCM**Description**

INFOID:000000009950172

BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.

DTC Logic

INFOID:000000009950173

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F8	BCM	When BCM turns starter motor control replay in IPDM E/R ON, input from feedback circuit does not match.	BCM

DTC CONFIRMATION PROCEDURE**1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Press push-button ignition switch under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-74, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950174

1. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnosis result" using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
See [SEC-74, "DTC Logic"](#).

Is DTC detected?

- YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
 NO >> INSPECTION END

B26FC KEY REGISTRATION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B26FC KEY REGISTRATION

Description

INFOID:000000009950175

When door request switch or push-button ignition switch is pressed, BCM verifies Intelligent Key that is registered to the vehicle. If verification result is OK, door lock, door unlock, and engine start are allowed.

DTC Logic

INFOID:000000009950176

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26FC	KEY REGISTRATION	Intelligent Key that does not match the vehicle is registered.	<ul style="list-style-type: none">Improper registration operationIntelligent KeyBCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-75, "Diagnosis Procedure"](#)
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950177

1. REPLACE INTELLIGENT KEY

1. Replace Intelligent Key that matches the vehicle.
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.
3. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
NO >> INSPECTION END

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B210B STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210B STARTER CONTROL RELAY

Description

INFOID:000000009950178

Starter control relay, integrated in IPDM E/R, permits the starter relay operation when in the N or P position. It is installed parallel to the starter relay.

DTC Logic

INFOID:000000009950179

DTC DETECTION LOGIC

NOTE:

If DTC B210B is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210B	START CONT RLY ON	When comparing the following items, a malfunction is detected for 1 second or more. <ul style="list-style-type: none">• Starter relay ON signal (CAN) from BCM• Starter control relay conditions of contact side and coil side• Transmission range switch input	IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-76, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950180

1. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnosis result" for IPDM E/R using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
See [SEC-76, "DTC Logic"](#).

Is DTC detected?

- YES >> Replace IPDM E/R. Refer [PCS-34, "Removal and Installation"](#).
NO >> INSPECTION END

B210C STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210C STARTER CONTROL RELAY

Description

INFOID:000000009950181

Starter control relay, integrated in IPDM E/R, permits the starter relay operation when in the N or P position. It is installed parallel to the starter relay.

DTC Logic

INFOID:000000009950182

DTC DETECTION LOGIC

NOTE:

- If DTC B210C is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the DTC B210C may be detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210C	START CONT RLY OFF	When comparing the following items, a malfunction is detected for 1 second or more. <ul style="list-style-type: none"> • Starter relay ON signal (CAN) from BCM • Starter control relay conditions of contact side and coil side • Transmission range switch input 	IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-77, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950183



1. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnosis result" for IPDM E/R using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
See [SEC-77, "DTC Logic"](#).

Is DTC detected?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
NO >> INSPECTION END

B210D STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210D STARTER RELAY

Description

INFOID:000000009950184

Located in IPDM E/R, the starter relay runs the starter motor. The starter relay is turned ON by the BCM when the ignition switch is in the START position. IPDM E/R transmits the starter relay ON signal to BCM via CAN communication.

DTC Logic

INFOID:000000009950185

DTC DETECTION LOGIC

NOTE:

If DTC B210D is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210D	STARTER RELAY ON	When comparing the following items, a malfunction is detected for 1 second or more. <ul style="list-style-type: none">• Starter relay ON signal (CAN) from BCM• Starter control relay conditions of contact side and coil side• Transmission range switch input	IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait for 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-78, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950186

1. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnosis result" for IPDM E/R using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
See [SEC-78, "DTC Logic"](#).

Is DTC detected?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
NO >> INSPECTION END

B210E STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210E STARTER RELAY

Description

INFOID:000000009950187

Located in IPDM E/R, the starter relay runs the starter motor. The starter relay is turned ON by the BCM when the ignition switch is in the START position. IPDM E/R transmits the starter relay ON signal to BCM via CAN communication.

DTC Logic

INFOID:000000009950188

DTC DETECTION LOGIC

NOTE:

- If DTC B210E is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B210E is displayed with DTC B2605, first perform the trouble diagnosis for DTC B2605. Refer to [SEC-65, "DTC Logic"](#).
- When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the DTC B210F may be detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210E	STARTER RELAY OFF	When comparing the following items, a malfunction is detected for 1 second or more. <ul style="list-style-type: none"> • Starter relay ON signal (CAN) from BCM • Starter control relay conditions of contact side and coil side • Transmission range switch input 	<ul style="list-style-type: none"> • Harness or connector (Starter relay circuit is open or short) • IPDM E/R • Battery • BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-79, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950189

1. CHECK STARTER RELAY OUTPUT SIGNAL

1. Check voltage between BCM harness connector and ground.

(+) BCM connector		(-)	Condition			Voltage (V) (Approx.)
Connector	Terminal		Ignition switch	Brake pedal	Selector lever	
M71	97	Ground	ON	Depressed	P or N	Battery voltage
					Other than above	0

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 2.

2. CHECK STARTER RELAY OUTPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector M71.
3. Disconnect IPDM E/R connector E13.
4. Check continuity between BCM harness connector and IPDM E/R harness connector.

B210E STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M71	97	E13	30	Existed

5. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M71	97		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

3. CHECK STARTER RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector E10.
3. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E10	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check harness for open or short between IPDM E/R and battery. Refer to [PCS-27, "Wiring Diagram — IPDM E/R —"](#).

4. REPLACE BCM

1. Replace BCM. Refer to [SEC-9, "BCM : Work Procedure"](#).
2. Perform DTC CONFIRMATION PROCEDURE. Refer to [SEC-79, "DTC Logic"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

B210F SHIFT POSITION/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B210F SHIFT POSITION/CLUTCH INTERLOCK SWITCH

Description

INFOID:000000009950190

IPDM E/R confirms the shift position with the following signals.

- Transmission range switch
- Shift position signal from BCM (CAN)

DTC Logic

INFOID:000000009950191

DTC DETECTION LOGIC

NOTE:

- If DTC B210F is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B210F is displayed with DTC B2603, first perform the trouble diagnosis for DTC B2603. Refer to [SEC-57, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210F	INTRLCK/PNP SW ON	There is a difference between input from transmission range switch and shift position signal from BCM.	<ul style="list-style-type: none">• Harness or connectors (Transmission range switch circuit is open or shorted)• Transmission range switch• IPDM E/R• BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-81, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950192

1. CHECK IPDM E/R INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
E15	47	Ground	Selector lever	N or P position Battery voltage
				Other than above 0

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
NO >> GO TO 2.

2. CHECK IPDM E/R SIGNAL CIRCUIT SHORT

1. Disconnect transmission range switch connector.
2. Check continuity between IPDM E/R harness connector and ground.

B210F SHIFT POSITION/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E15	47	Ground	0

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34. "Removal and Installation"](#).
- NO >> Repair or replace harness.

B2110 SHIFT POSITION/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2110 SHIFT POSITION/CLUTCH INTERLOCK SWITCH

Description

INFOID:000000009950193

IPDM E/R confirms the shift position with the following signals.

- Transmission range switch
- Shift position signal from BCM (CAN)

DTC Logic

INFOID:000000009950194

DTC DETECTION LOGIC

NOTE:

If DTC B2110 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2110	INTRLCK/PNP SW	There is a difference between input from transmission range switch and shift position signal from BCM.	<ul style="list-style-type: none"> • Harness or connectors (Transmission range switch circuit is open or shorted) • Transmission range switch • IPDM E/R

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the ignition switch ON under the following conditions and wait 1 second or more.
 - Selector lever is in the P or N position
 - Do not depress brake pedal
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-83, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950195

1. CHECK IPDM E/R INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
IPDM E/R				
Connector	Terminal			
E15	47	Ground	Selector lever	P or N position Battery voltage
				Other than above 0

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
 NO >> GO TO 2.

2. CHECK IPDM E/R INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Check continuity between transmission range switch harness connector and IPDM E/R harness connector.

B2110 SHIFT POSITION/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Transmission range switch		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F21	2	E15	59	Existed

4. Check continuity between transmission range switch harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F21	2		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK TRANSMISSION RANGE SWITCH POWER SUPPLY

1. Connect IPDM E/R connector.
2. Turn ignition switch ON.
3. Check voltage between transmission range switch harness connector and ground.

Transmission range switch (+)		Ground (-)	Voltage (V) (Approx.)
Connector	Terminal		
F21	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK TRANSMISSION RANGE SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between transmission range switch harness connector and IPDM E/R harness connector.

Transmission range switch		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F21	1	E15	59	Existed

4. Check continuity between transmission range switch harness connector and ground.

Transmission range switch		Ground	Continuity
Connector	Terminal		
F21	1		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

5. CHECK TRANSMISSION RANGE SWITCH

Refer to [SEC-85, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace transaxle assembly. Refer to [TM-235, "Exploded View"](#).

6. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

B2110 SHIFT POSITION/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

>> INSPECTION END

Component Inspection

INFOID:000000009950196

1. CHECK TRANSMISSION RANGE SWITCH

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Check continuity between transmission range switch terminals.

Transmission range switch		Condition	Continuity
Terminal			
1	2	P or N position	Existed
		Other than above	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace transaxle assembly. Refer to [TM-235. "Exploded View"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000009950197

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	G
	8

Is the fuse fusing?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.
NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M70	70	
	57	

Is the measurement value normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M70	67		Existed

Does continuity exist?

- YES >> INSPECTION END
NO >> Repair harness or connector.

IPDM E/R

IPDM E/R : Diagnosis Procedure

INFOID:000000009950198

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C
	D
	J

POWER SUPPLY AND GROUND CIRCUIT

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

Terminals		(-)	Voltage (Approx.)
(+)			
IPDM E/R		Ground	Battery voltage
Connector	Terminal		
E9	1		
	2		
E10	8		

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E11	9		Existed
E12	19		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

SECURITY INDICATOR LAMP

Description

INFOID:000000009950199

- Security indicator lamp is located on combination meter.
- NVIS (Nissan Vehicle Immobilizer System) and vehicle security system conditions are indicated by blink or illumination of security indicator lamp.

Component Function Check

INFOID:000000009950200

1. CHECK FUNCTION

1. Perform "THEFT IND" in the "ACTIVE TEST" mode using CONSULT.
2. Check security indicator lamp operation.

Test item		Description	
THEFT IND	ON	Security indicator lamp	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Go to [SEC-88, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009950201

1. CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check voltage between combination meter harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Combination meter			
Connector	Terminal	Ground	Battery voltage
M34	27		

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 10, located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between combination meter and fuse.

2. CHECK SECURITY INDICATOR LAMP SIGNAL

1. Connect combination meter connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal	Ground	Battery voltage
M68	23		

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
NO >> GO TO 3.

3. CHECK SECURITY INDICATOR LAMP CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector and BCM harness connector.

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Combination meter		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M34	18	M68	23	Existed

3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M34	18		Not existed

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-93, "Removal and Installation"](#).
- NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

HORN FUNCTION

Description

INFOID:000000009950202

Perform answer-back for each operation with horn.

Component Function Check

INFOID:000000009950203

1.CHECK FUNCTION

1. Perform "VEHICLE SECURITY HORN" in the "ACTIVE TEST" mode using CONSULT.
2. Check the horn operation.

Test item		Description	
VEHICLE SECURITY HORN	ON	Horn	Sounds (for 20 ms)

Is the operation normal?

- YES >> Horn function is OK.
 NO >> Go to [SEC-90. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009950204

1.CHECK HORN FUNCTION

Check horn function with horn switch.

Do the horn sound?

- YES >> GO TO 2.
 NO >> Refer to [HRN-2. "Wiring Diagram - HORN -"](#).

2.CHECK IPDM E/R POWER SUPPLY

1. Disconnect IPDM E/R connector.
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E13	34	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-64. "Removal and Installation"](#).
 NO >> GO TO 3.

3.CHECK IPDM E/R POWER SUPPLY CIRCUIT

1. Disconnect horn relay connector.
2. Check continuity between IPDM E/R harness connector and horn relay harness connector.

IPDM E/R		Horn relay		Continuity
Connector	Terminal	Connector	Terminal	
E13	34	E5	1	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	34		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair or replace harness.

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

4.CHECK INTERMITTENT INCIDENT

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

HEADLAMP FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

HEADLAMP FUNCTION

Description

INFOID:000000009950205

Headlamp lighting when vehicle security system is alarm phase.

Component Function Check

INFOID:000000009950206

1.CHECK FUNCTION

1. Perform "HEAD LAMP(HI)" in the "ACTIVE TEST" mode using CONSULT.
2. Check headlamp operation.

Test item		Description	
HEAD LAMP (HI)	ON	HEADLAMP (HI)	Lighting
	OFF		Does not lighting

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Refer to [SEC-92, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009950207

1.CHECK HEADLAMP FUNCTION

Refer to [EXL-42, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK INTERMITTENT INCIDENT

>> INSPECTION END

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >


[WITH INTELLIGENT KEY SYSTEM]

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

Wiring Diagram - INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION -

INFOID:000000009950208

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

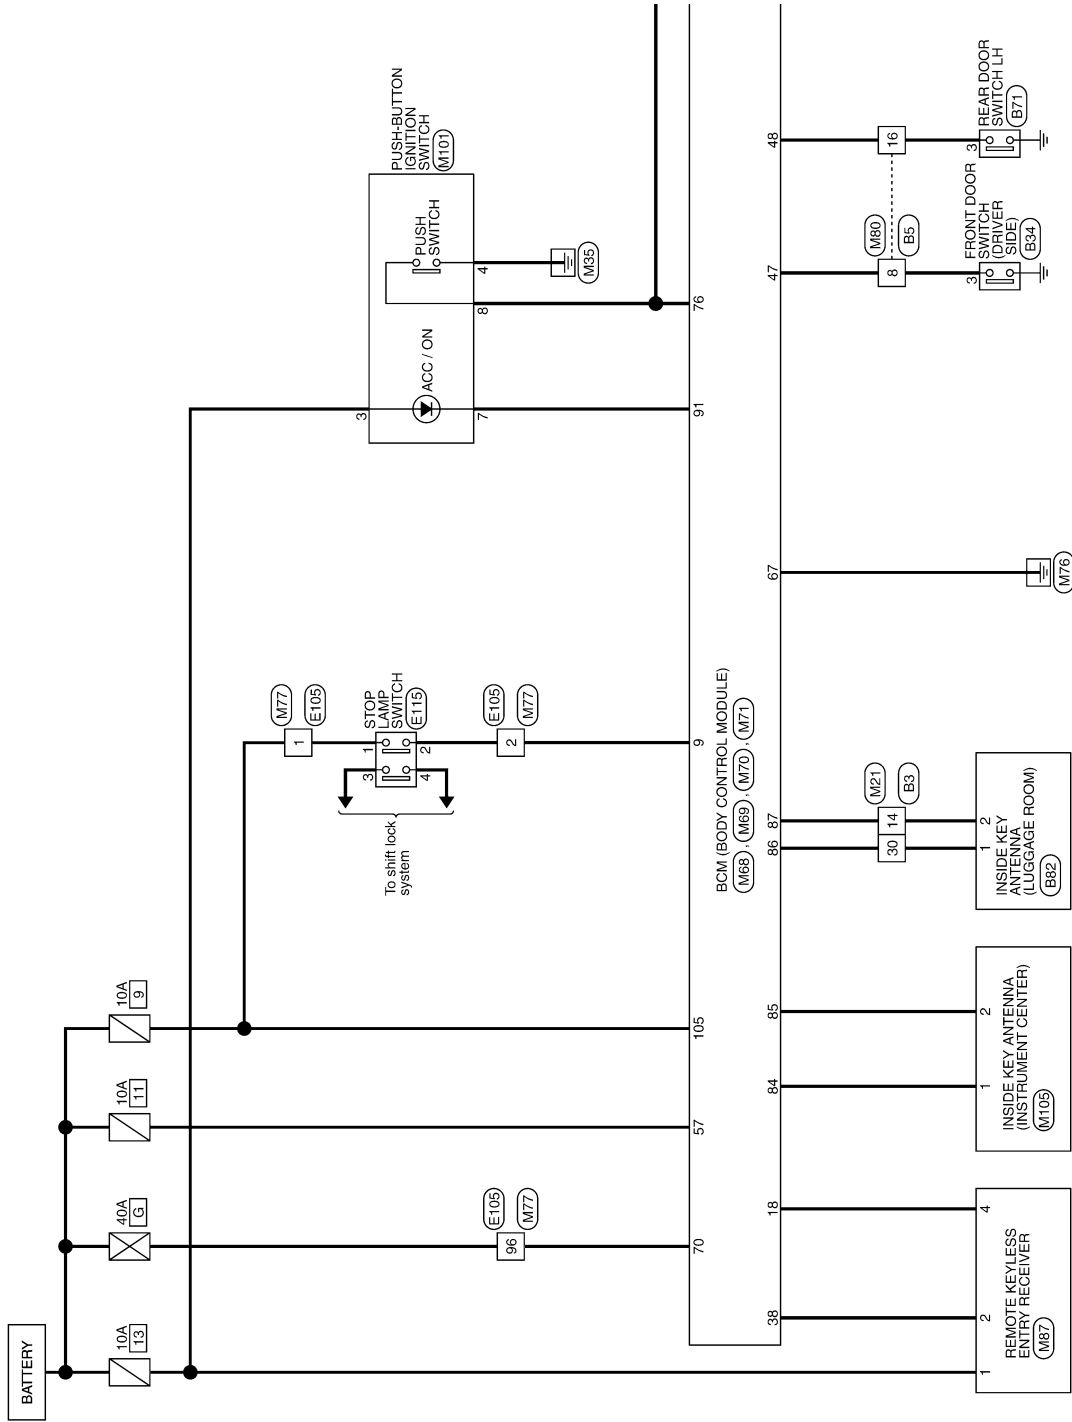

2013/09/19

JRKWC9127GB


A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

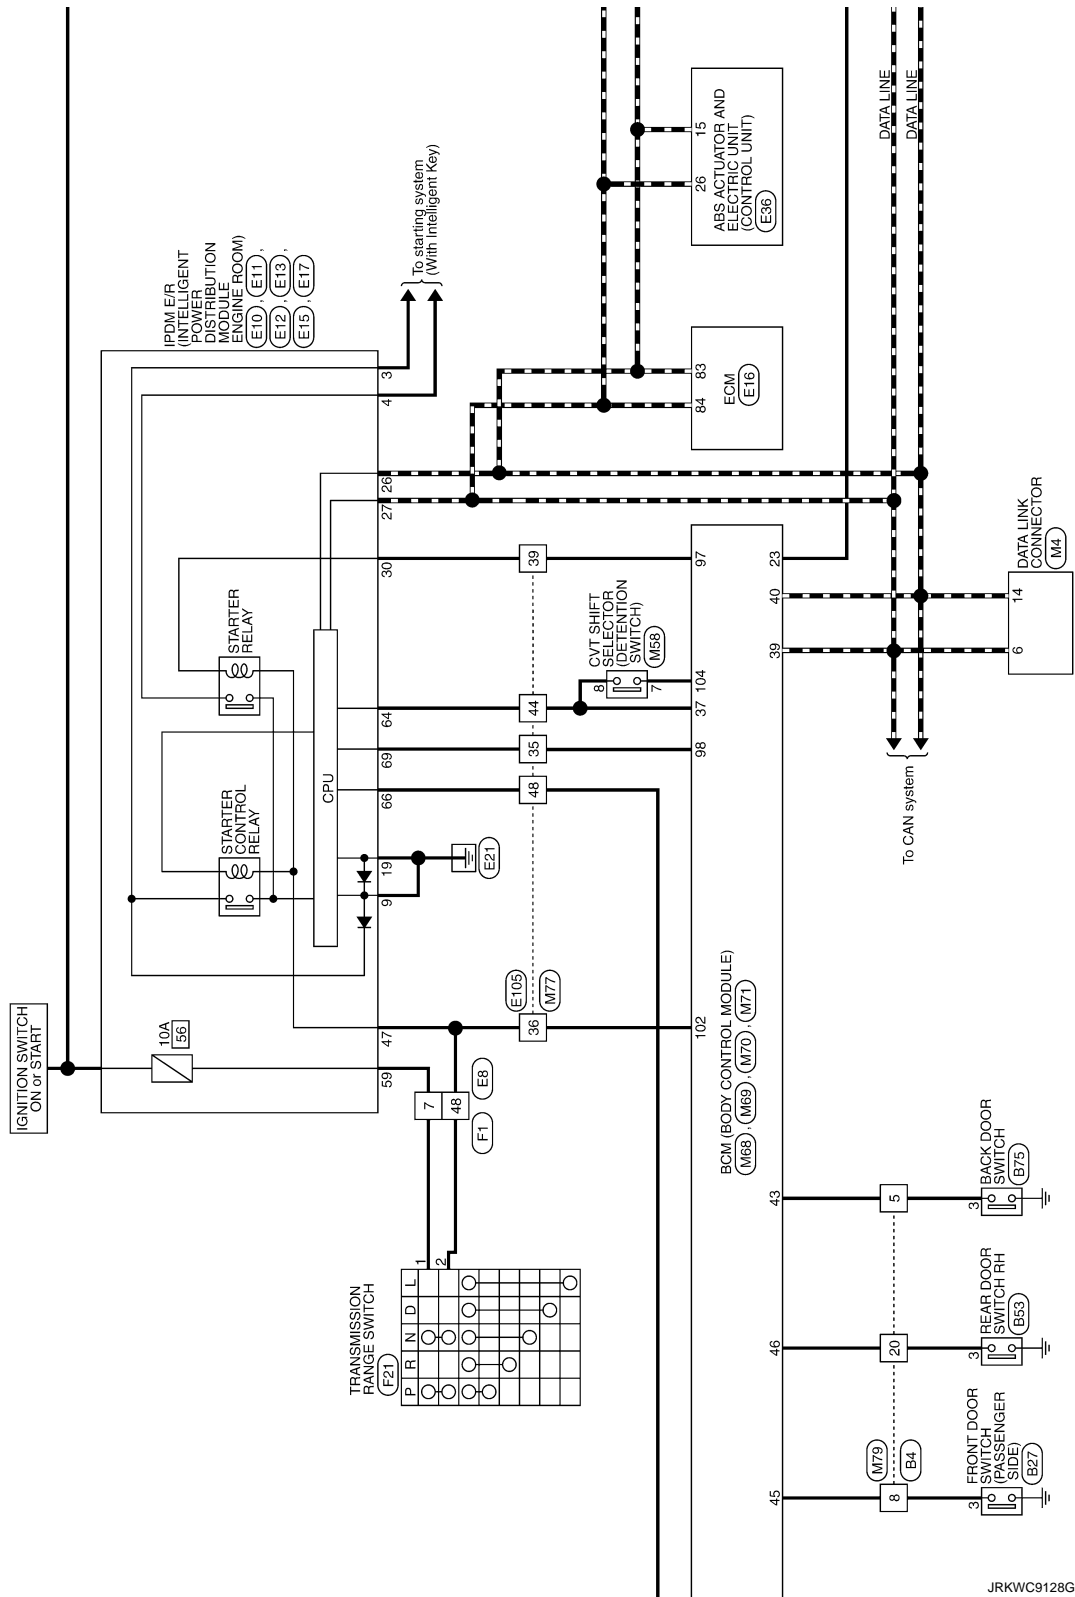

JRKWC9128GB


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >


[WITH INTELLIGENT KEY SYSTEM]

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION


Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Type	TH32MV-NH



Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	TH24MV-NH



Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH16MV-NH



Connector No.	B34
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	L	-
3	R	-
4	SHIELD	-
5	LG	-
6	S	-
7	P	-
8	G	-
9	S	-
10	S	-
11	S	-
12	S	-
13	S	-
14	S	-
15	S	-
16	S	-
17	LG	-
18	SHIELD	-
19	BR	-
20	Y	-
21	L	-
22	O	-
23	GR	-
24	L	-
30	R	-
31	LG	-
32	LG	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	O	-
4	P	-
5	W	-
6	W	-
7	S	-
8	S	-
9	GR	-
10	S	-
11	G	-
12	S	-
13	L	-
14	R	-
15	GR	-
16	GR	-
17	BR	-
18	L	-
20	LG	-
22	Y	-
23	BR	-
24	O	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	GR	-
3	W	-
4	W	-
5	W	-
6	LG	-
7	R	-
8	R	-
9	O	-
10	O	-
11	O	-
12	GR	-
13	GR	-
14	P	-
15	P	-
16	W	-



Connector No.	B27
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-

Connector No.	B53
Connector Name	REAR DOOR SWITCH RH
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-

Connector No.	B71
Connector Name	REAR DOOR SWITCH LH
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	SB	-

JRKWC9338GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Terminal Color Of No.	Wire	Signal Name [Specification]
3	W	-

Connector No.	E175
Connector Name	BACK DOOR SWITCH
Connector Type	TH04FW-NH




Terminal Color Of No.	Wire	Signal Name [Specification]
2	L	-
3	W	-

Connector No.	B82
Connector Name	INSIDE KEY ANTENNA (LUGGAGE ROOM)
Connector Type	FK02FL



Terminal Color Of No.	Wire	Signal Name [Specification]
1	R	-
2	G	-

Connector No.	E8
Connector Name	WIPE TO WIRE
Connector Type	SAA3RMB-RS10-SJZ



Terminal Color Of No.	Wire	Signal Name [Specification]
1	BR	-
2	LG	-
3	Y	-
4	W	-
7	Y	-
8	SB	-
9	L	-
10	V	-
11	P	-
12	BR	-
13	LG	-
14	Y	-
15	SB	-
16	L	-
17	W	-
18	O	-
21	G	-
22	Y	-
23	SB	-
24	W	-
25	BR	-
26	BY	-
27	GR	-
28	P	-
29	V	-
30	G	-
31	G	-
32	O	-
33	W	-
34	Y	-
35	V	-
36	P	-
37	LG	-
39	SB	-
40	GR	-
41	O	-

42	V	-
43	LG	- [With M/T]
43	R	- [With CVT]
44	R	-
46	W	-
47	G	-
48	BR	-

Connector No.	E10
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	M06FW-LC




Terminal Color Of No.	Wire	Signal Name [Specification]
3	BR	-
4	P	-
5	LG	-
6	SB	-
7	Y	-
8	V	-

Connector No.	E11
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	M06F-B-LC




Terminal Color Of No.	Wire	Signal Name [Specification]
8	BR	-
10	L	-
13	W	-

Connector No.	E12
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS08FBR-CS



Terminal Color Of No.	Wire	Signal Name [Specification]
18	Y	-
19	BR	-
21	W	-
22	V	-

Connector No.	E13
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH2FW-NH



Terminal Color Of No.	Wire	Signal Name [Specification]
24	G	-
25	Y	-
26	P	-
27	L	-
28	P	-
30	SB	-
31	W	-
33	O	-
34	R	-

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]


INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	E15
Connector Name	FROM INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	MS16FM-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
47	BR	-
48	W	-
49	GR	-
50	GR	-
51	R	-
52	P	-
53	P	-
54	GR	-
55	P	-
56	SB	-
57	G	-
58	LG	- [With M/T]
59	R	- [With CVT]
60	Y	-
61	V	-
62	L	-


Connector No.	E16
Connector Name	ECM
Connector Type	RH24FB-RZ8L-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
83	P	CAN COMMUNICATION LINE
84	L	CAN COMMUNICATION LINE
88	LG	DATA LINK CONNECTOR
89	L	IGNITION SWITCH
94	SB	ASC/D STEERING SWITCH


Terminal No.	Color Of Wire	Signal Name [Specification]
99	W	SENSOR GROUND
100	SB	STOP LAMP SWITCH
102	O	ASC/D BRAKE SWITCH
103	G	SENSOR POWER SUPPLY
104	R	ACCELERATOR PEDAL POSITION SENSOR 2
105	G	SENSOR GROUND
106	V	POWER SUPPLY FOR ECM
107	B	SENSOR POWER SUPPLY
108	B	ECM GROUND
109	B	ECM GROUND
110	BR	ACCELERATOR PEDAL POSITION SENSOR 1
111	Y	SENSOR GROUND
112	B	ECM GROUND

Connector No.	E17
Connector Name	SW FOR INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH10FB-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
64	R	-
66	L	-
69	O	-

Connector No.	E18
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	TK24FW

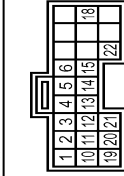

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	LINE PRESSURE SOLENOID VALVE
2	LG	SECONDARY PRESSURE SOLENOID VALVE
3	BR	TORQUE CONVERTER CLUTCH SOLENOID VALVE
4	O	LOCK-UP SELECT SOLENOID VALVE
5	L	CAN-H
6	P	CAN-L
10	R	IGNITION POWER SUPPLY
11	W	STEP MOTOR A
12	L	STEP MOTOR B
13	SB	ROM ASSY (SEL 2)
14	P	ROM ASSY (SEL 1)
15	V	ROM ASSY (SEL 3)
18	BR	P RANGE SW
19	R	IGNITION POWER SUPPLY
20	SB	STEP MOTOR C
21	Y	STEP MOTOR D
22	GR	R RANGE SW


Connector No.	E36
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAAZ2FB-AH24-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GND (MTR)
2	Y	BAT (MTR)
3	L	BAT (SOL)
4	B	GND (SOL)
5	Y	DS FL
6	W	DP RL
8	O	DP RR
9	L	DP FR
10	R	DS FR
11	LG	K LINE
14	GR	CANL
15	P	CANH
16	BR	DP FL
17	G	DS RL
18	V	IGN

19	SB	DS RR
20	W	STOP LAMP SW
21	P	VDC OFF SW
25	R	CAN-H
26	L	CAN-L

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MM-CS16-TM4

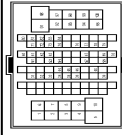

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	SB	-
4	G	-
5	P	-
6	L	- [With NAV]
6	R	- [Without NAV]
7	Y	-
8	O	-
9	W	-
10	SB	-
31	V	-
32	R	-
33	GR	-
34	P	-
35	Y	-
36	BR	-
39	SB	-
44	R	-
45	V	-
46	P	-
48	L	-
51	B	- [With M/T]
51	BR	- [With CVT]
53	SB	-
54	O	- [With M/T]
54	W	- [With CVT]
57	LG	-
59	L	-

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION


Terminal No.	Color Of Wire	Signal Name (Specification)
60	O	-
61	G	-
62	W	-
63	L	-
67	GR	- [With C/V/T] - [With M/T]
69	P	-
70	SHIELD	-
71	GR	-
72	LG	-
73	P	-
74	V	-
76	Y	-
77	LG	-
78	O	-
79	G	-
80	P	-
81	L	-
82	W	-
83	BR	-
84	B	-
91	W	-
92	Y	-
93	Y	-
94	R	-
95	V	-
96	LG	-
97	R	-
98	SB	-
99	G	-
100	P	-

Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name (Specification)
1	V	-
2	W	-
3	O	-

Terminal No.	Color Of Wire	Signal Name (Specification)
39	G	-
40	P	-
41	O	-
42	G	-
43	R	-
44	P	-
46	GR	-
47	Y	-
48	BR	-



Connector No.	F21
Connector Name	TRANSMISSION RANGE SWITCH
Connector Type	RK08EG




Terminal No.	Color Of Wire	Signal Name (Specification)
39	G	-
40	P	-
41	O	-
42	G	-
43	R	-
44	P	-
46	GR	-
47	Y	-
48	BR	-

Connector No.	M21
Connector Name	WIRE TO WIRE
Connector Type	IT482FM-NH1



Terminal No.	Color Of Wire	Signal Name (Specification)
1	R	-
2	W	-
3	R	-
4	GR	-
5	SB	-
6	W	-
7	Y	-
8	G	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BDT6FW



Terminal No.	Color Of Wire	Signal Name (Specification)
1	SB	-
2	G	-
3	V	-
4	SHIELD	-
5	O	-
6	G/O	-
7	GR/R	-
14	L	-
15	SB	-
16	SB	-
17	LG	-
18	SHIELD	-
19	BR	-
20	Y	-
21	L/Y	-
22	V	-
23	W/G	-
24	L/B	-
30	P	-
31	L/G	-
32	LG	-

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FV-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	P	L	CANH
2	L	P	CANH
3	V	V	VEHICLE SPEED SIGNAL (2-PULSE)
4	L	L	VEHICLE SPEED SIGNAL (3-PULSE)
4	L	L	VEHICLE SPEED SIGNAL (4-PULSE)
4	L	L	VEHICLE SPEED SIGNAL (5-PULSE)
6	BR	Y	FUEL LEVEL SENSOR SIGNAL
7	RG	R	AIR BAG SIGNAL
8	P	O	OVERDRIVE CONTROL SWITCH SIGNAL
9	O	S	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SEAT)
10	SB	P	PARKING BRAKE SWITCH SIGNAL
11	GR	R	BRAKE FLUID LEVEL SWITCH SIGNAL
13	BR	R	ILLUMINATION CONTROL SIGNAL
15	LY	Y	ACC POWER SUPPLY
18	RY	Y	SECURITY SIGNAL
19	PLW	W	AMBIENT SENSOR SIGNAL
20	RW	W	AMBIENT SENSOR GROUND
21	B	B	GROUND
22	B	B	GROUND
23	B	B	GROUND
24	PU	U	FUEL LEVEL SENSOR GROUND
25	B	B	VDC GROUND
27	LGIR	R	BATTERY POWER SUPPLY
28	GR	R	IGNITION SIGNAL
29	BR	R	PASSENGER SEAT BELT WARNING SIGNAL
31	R	R	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
35	BR	R	ENGINE COOLANT TEMPERATURE SIGNAL
38	GR	R	ALTERNATOR SIGNAL

Connector No.	M58
Connector Name	CVT SHIFT SELECTOR
Connector Type	TH88FV-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	P	B	-
2	B	B	-
3	W	W	-
4	BR	R	-
5	LG	G	-
6	B	B	-
7	YR	R	-
8	GY	Y	-


Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color	Wire	Signal Name [Specification]
2	BR	W	COMBI SW INPUT 5
3	GR	GR	COMBI SW INPUT 4
4	LY	Y	COMBI SW INPUT 3
5	G	G	COMBI SW INPUT 2
6	LJR	R	COMBI SW INPUT 1
7	WR	R	KEY CYL UNLOCK SW
8	WRB	B	KEY CYL LOCK SW
9	R	R	STOP LAMP SW 1
12	GR	R	CENTRAL DOOR LOCK SW
13	BR	R	CENTRAL DOOR UNLOCK SW
14	UG	G	OPTICAL SENSOR
15	WV	V	REAR WINDOW DEFROGGER SW

17	RG	OPTICAL SENSOR POWER SUPPLY
18	V	SENSOR GND
21	P/L	NATS ANTENNA AMP.
23	RY	SECURITY INDICATOR LAMP
25	LG	NATS ANTENNA AMP.
27	O	A/C SW
28	GW	BLOWER FAN SW
29	L/W	HAZARD SW
31	G/B	DR DOOR UNLOCK SENSOR
32	LG	COMBI SW OUTPUT 5
33	YL	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/O	COMBI SW OUTPUT 1
37	G/O	SHIFT P
38	GY	RECEIVER COMM
39	L	CANH
40	P	CANH

Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FH4G-SA



Terminal No.	Color	Wire	Signal Name [Specification]
43	W	W	BACK DOOR SW
44	LG	G	REAR WIPER STOP POSITION
45	SB	B	PASSENGER DOOR SW
46	GR/L	R	REAR RH DOOR SW
47	BR/Y	Y	DRIVER DOOR SW
48	W/G	G	REAR LH DOOR SW
50	R/W	W	BK DR LOCK ACT RELAY CONT
51	W	W	BACK DOOR REQUEST SW
54	LG	G	REAR WIPER OUTPUT
55	G	G	REAR DOOR UNLOCK OUTPUT

Connector No.	M70
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FV-FH4G-SA



Terminal No.	Color	Wire	Signal Name [Specification]
56	L	Y	INTERIOR ROOM LAMP POWER SUPPLY
57	Y	L	BAT (FUSE)
59	G	G	PASSENGER DOOR UNLOCK OUTPUT
60	W/B	B	TURNSIGNAL LH OUTPUT
61	W/L	L	TURNSIGNAL RH OUTPUT
63	BR	R	ROOM LAMP TIMER CONTROL
65	V	V	ALL DOOR LOCK OUTPUT
66	L/B	B	DRIVER DOOR UNLOCK OUTPUT
67	B	L	GROUND
68	L	L	POWER WINDOW POWER SUPPLY (GS)
69	P	P	POWER WINDOW POWER SUPPLY (BAT)
70	Y	Y	BAT (F/L)

Connector No.	M71
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FV-NH



Terminal No.	Color	Wire	Signal Name [Specification]
72	SB	B	A/C INDICATOR OUTPUT
75	SB	B	DRIVER DOOR REQUEST SW
76	L/O	O	PUSH SW
78	LG	G	DRIVER DOOR ANTI+
79	V	V	DRIVER DOOR ANTI-
80	BR/Y	Y	PASSENGER DOOR ANTI+
81	LY	Y	PASSENGER DOOR ANTI-
82	W/B	B	BACK DOOR ANTI+

JRKWC9342GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION


< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

83	B/W	BACK DOOR ANT-ROOM ANT-
84	Y/G	ROOM ANT+
85	Y/L	ROOM ANT-
86	P	LUGGAGE ROOM ANT+
87	L	LUGGAGE ROOM ANT-
90	W/L	PUSH-BUTTON IGNITION SW ILL POWER
91	Y	ACCION IND
92	BR/Y	PUSH-BUTTON IGNITION SW ILL GND
93	GR/W	L-KEY WARN BUZZER
96	BR/W	ACC RELAY CONT
97	L/R	STARTER RELAY CONT
98	BR	IGN RELAY (IPDM E/R) CONT
99	W/R	IGN RELAY CONT
100	G	PASSENGER DOOR REQUEST SW
102	G	SHIFT NIP
103	G/Y	FR DEFROSTER SW
104	Y/R	C/VT SHIFT SELECTOR POWER SUPPLY
105	B/O	STOP LAMP SW 2
106	Y/B	BLOWER FAN MOTOR RELAY CONT


Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-GS16-TM4



Terminal Color Of No.	Wire	Signal Name (Specification)
1	B/O	-
2	R	-
3	G/R	-
4	G/B	-
5	L	-
6	L	-
7	W/R	-
8	G/W	-
9	Y/L	-
10	W	-
31	GS/L	-
32	R/Y	-
33	R/Y	-
34	SB	-
35	BR	-


36	G	-
39	L/R	-
44	G/O	-
45	LG/R	-
46	GR/W	-
48	L/O	-
51	B/W	-
53	R/L	-
54	O	-
57	GR	-
59	V	-
60	R/W	-
61	P/W	-
62	W/L	-
63	W/B	-
67	Y/R	-
69	L/G	-
70	SHIELD	-
71	P/B	-
72	R/G	-
73	R	-
74	L/Y	-
76	W/G	-
77	GR/R	-
78	O	-
79	LG	-
80	P	-
81	L	-
82	GR	-
83	G/R	-
84	B	-
91	R	-
92	O	-
93	Y	-
94	R/B	-
95	L/W	-
96	Y	-
97	L	-
98	BR/W	-
99	W	-
100	G/R	-

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Type	TH24FW-NH



Terminal Color Of No.	Wire	Signal Name (Specification)
1	W/G	-
2	L/Y	-
3	R	-
4	P/B	-
5	W	-
8	SB	-
9	L/G	-
10	GR/B	-
11	G/B	-
12	GR	-
13	R/G	-
15	R/L	-
16	GR/R	-
17	BR/Y	-
18	PU	-
20	GR/L	-
22	L	-
23	Y/L	-
24	G/W	-

Connector No.	M80
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH



Terminal Color Of No.	Wire	Signal Name (Specification)
1	L/B	-
2	GR/L	-
5	W	-
6	W/L	-
8	BR/Y	-
9	R/Y	-
11	O	-
13	BR/W	-
14	W/B	-
16	W/G	-

Connector No.	M87
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	TH04FW-NH



Terminal Color Of No.	Wire	Signal Name (Specification)
1	P	-
2	G/Y	SIGNAL
4	V	GROUND

Connector No.	M101
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal Color Of No.	Wire	Signal Name (Specification)
3	P	-
4	B	-
5	W/L	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

INTELLIGENT KEY SYSTEM / ENGINE START FUNCTION

6	BR/R	-
7	Y	-
8	L/O	-

Connector No.	M105
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RK02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y/G	-
2	Y/L	-

JRKWC9344GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >


[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

Wiring Diagram - NISSAN VEHICLE IMMOBILIZER SYSTEM -

INFOID:000000009950209

NISSAN VEHICLE IMMOBILIZER SYSTEM (WITH INTELLIGENT KEY)

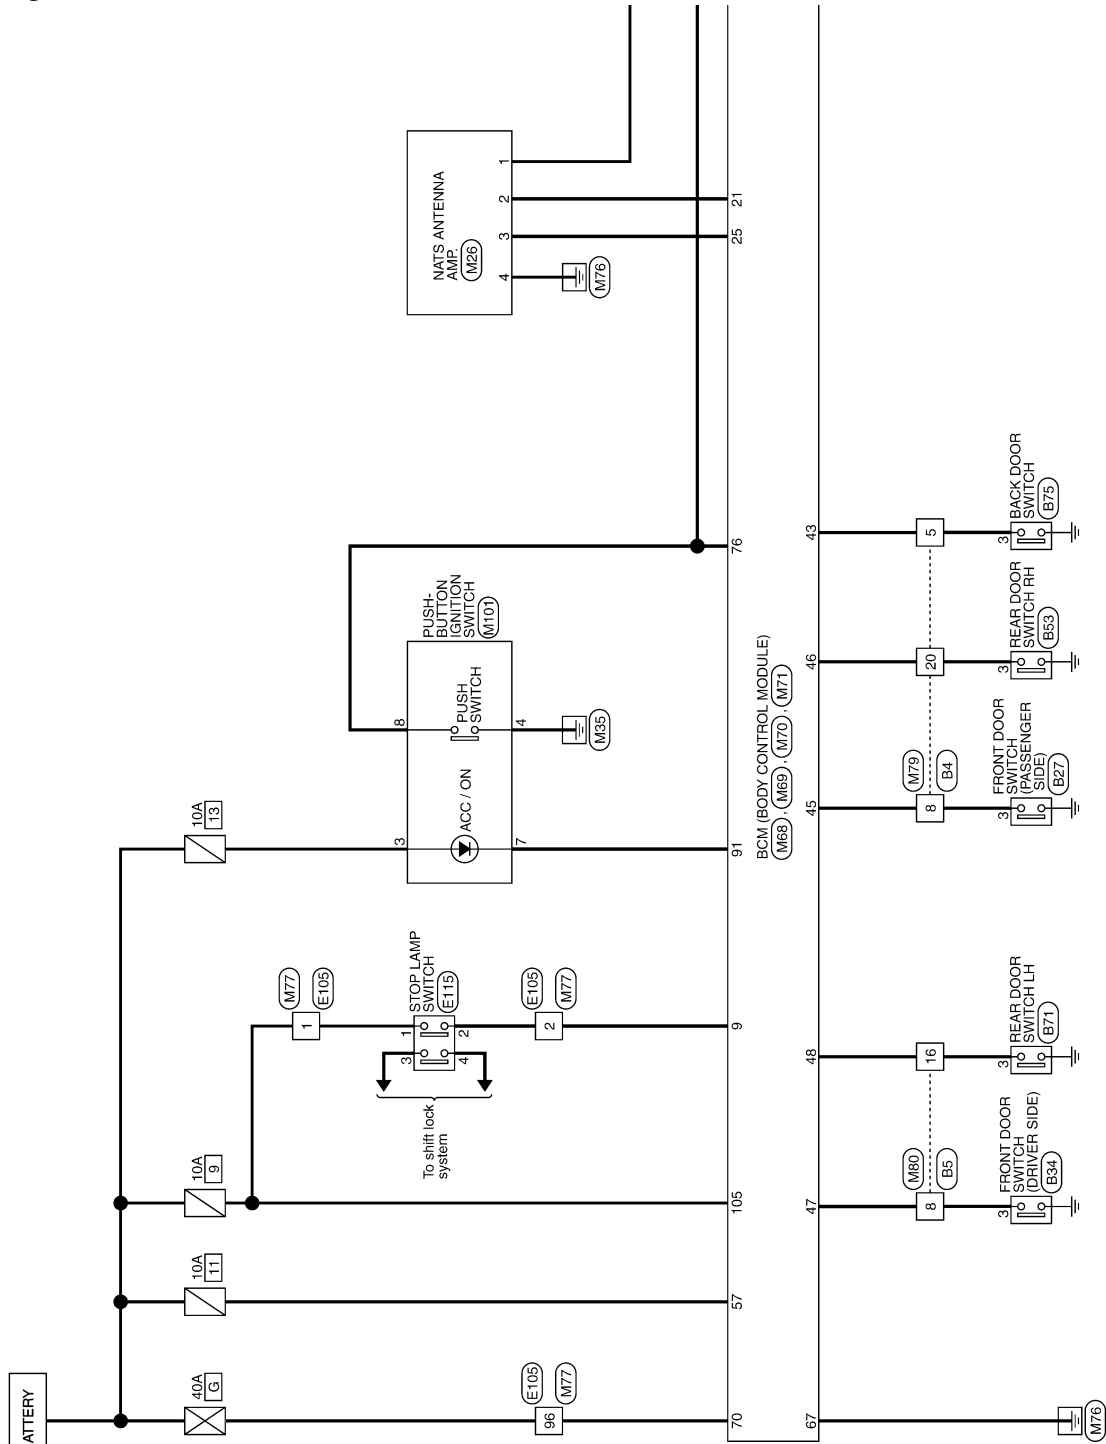

2013/09/19

JRKWC9132GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

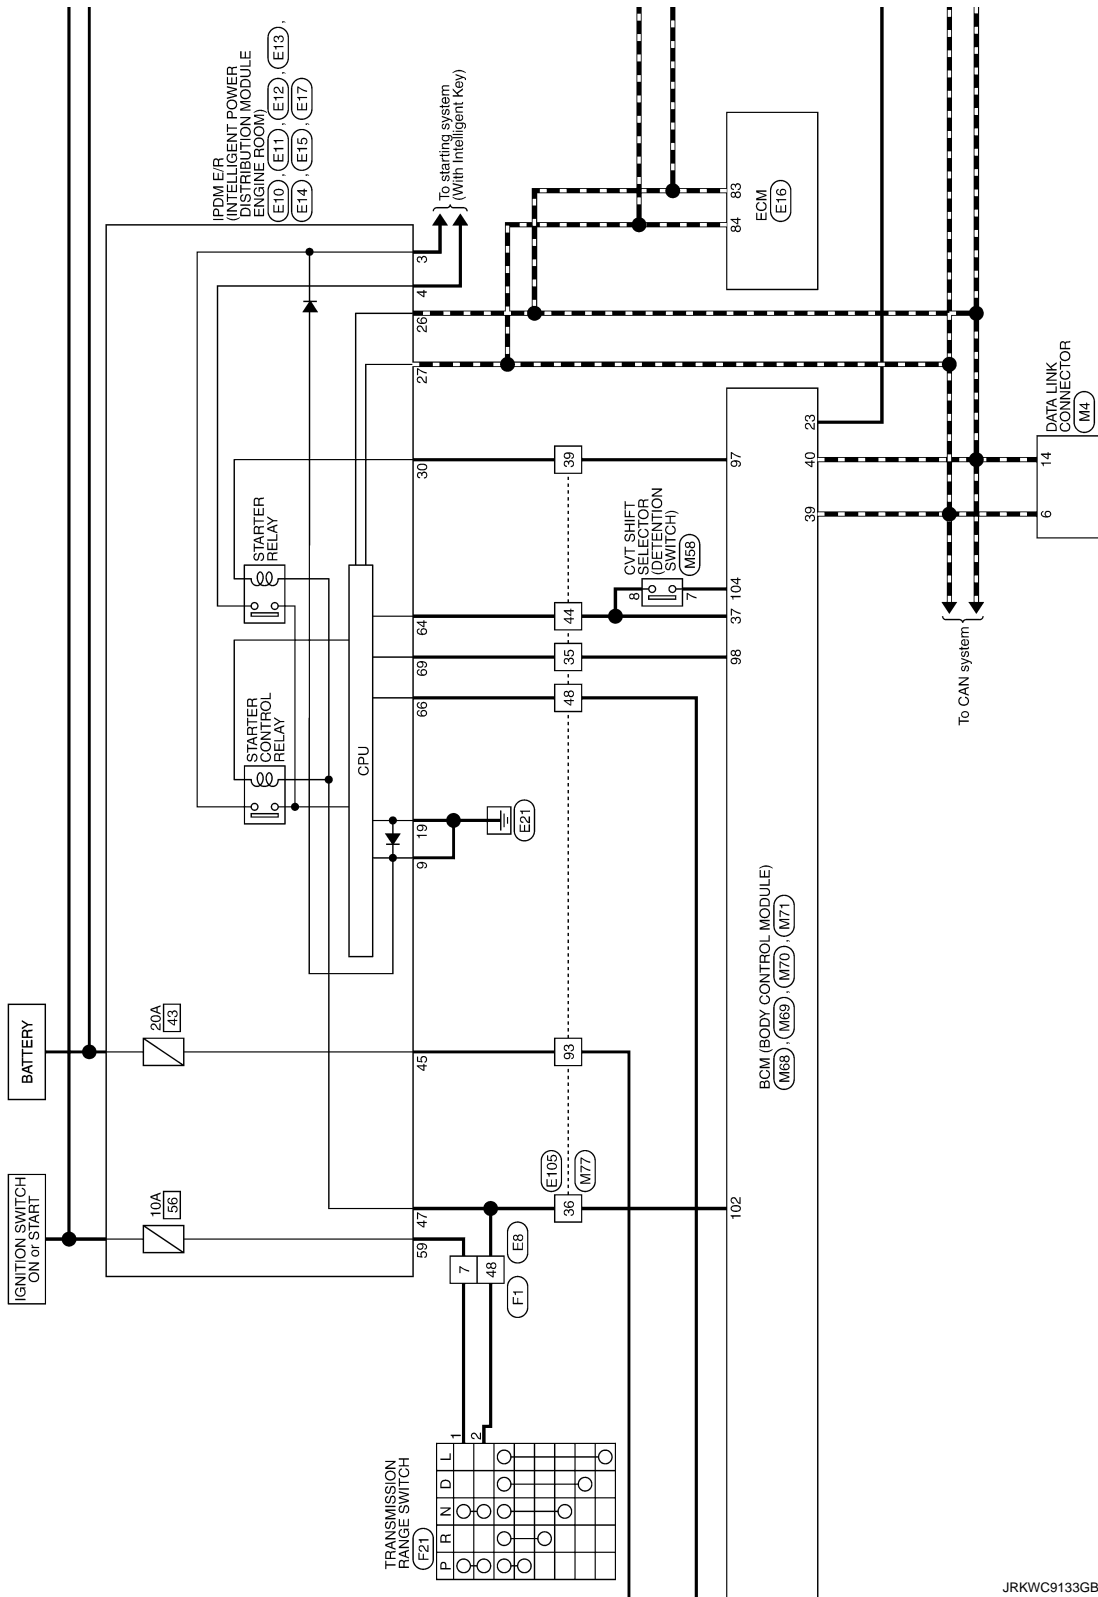


JRKWC9133GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

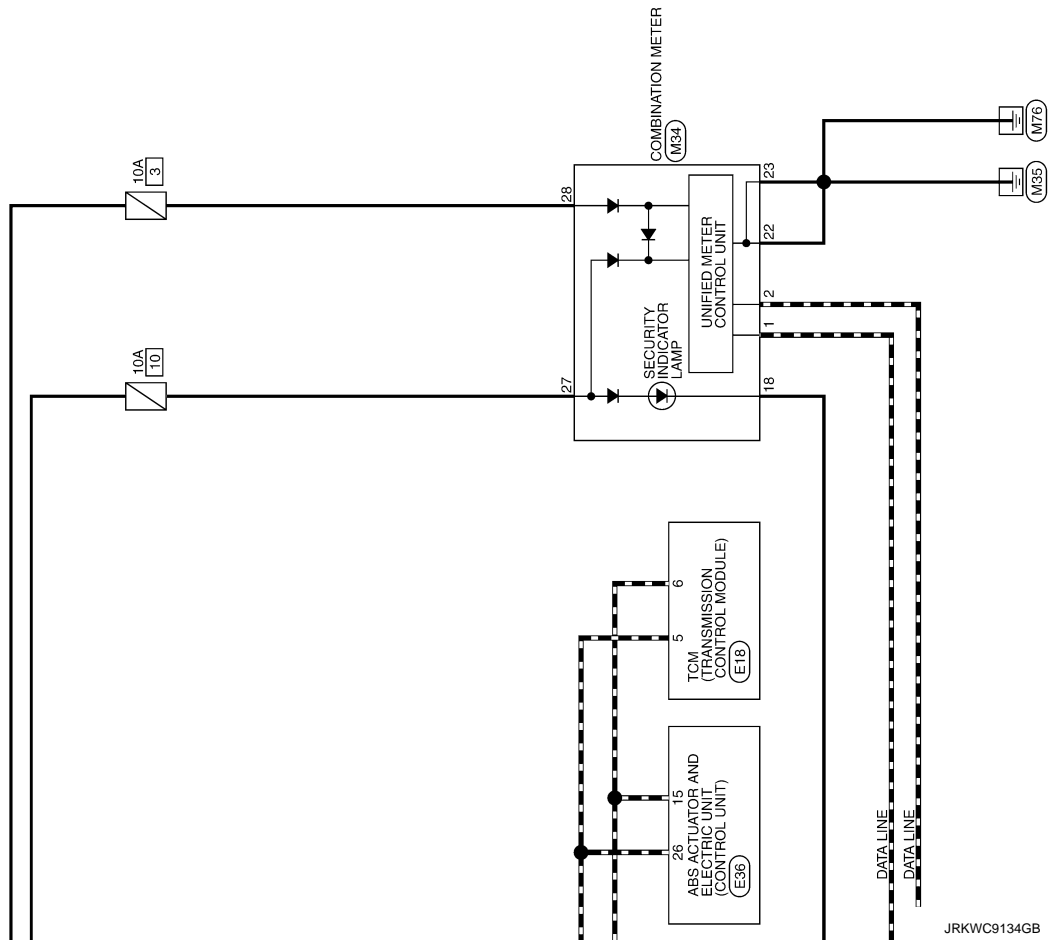

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM (WITH INTELLIGENT KEY)

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	TH62MV-AH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	O	-
4	P	-
5	W	-
6	SB	-
7	GR	-
8	SB	-
9	GR	-
10	SB	-
11	G	-
12	SB	-
13	L	-
14	R	-
15	R	-
16	GR	-
17	BR	-
18	L	-
20	LG	-
22	Y	-
23	BR	-
24	O	-



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	GR	-
5	V	-
6	W	-
8	LG	-
9	R	-
11	O	-
13	GR	-
14	P	-
16	W	-



Connector No.	B27
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	TH64FW-AH



Terminal No.	3	SB	Signal Name [Specification]
--------------	---	----	-----------------------------

Connector No.	B34
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	TH64FW-AH



Terminal No.	3	LG	Signal Name [Specification]
--------------	---	----	-----------------------------

Connector No.	B53
Connector Name	REAR DOOR SWITCH RH
Connector Type	TH64FW-AH



Terminal No.	3	LG	Signal Name [Specification]
--------------	---	----	-----------------------------

Connector No.	B71
Connector Name	REAR DOOR SWITCH LH
Connector Type	TH64FW-AH



Terminal No.	3	W	Signal Name [Specification]
--------------	---	---	-----------------------------

Connector No.	B75
Connector Name	BACK DOOR SWITCH
Connector Type	TH64FW-AH



Terminal No.	2	L	Signal Name [Specification]
Terminal No.	3	W	Signal Name [Specification]

Connector No.	EB
Connector Name	WIRE TO WIRE
Connector Type	SAAG8MB-RS10-SJZZ



Terminal No.	1	BR	Signal Name [Specification]
Terminal No.	2	LG	Signal Name [Specification]
Terminal No.	3	Y	Signal Name [Specification]
Terminal No.	4	W	Signal Name [Specification]
Terminal No.	7	Y	Signal Name [Specification]
Terminal No.	8	SB	Signal Name [Specification]
Terminal No.	9	L	Signal Name [Specification]
Terminal No.	10	V	Signal Name [Specification]
Terminal No.	11	P	Signal Name [Specification]
Terminal No.	12	BR	Signal Name [Specification]
Terminal No.	13	LG	Signal Name [Specification]
Terminal No.	14	Y	Signal Name [Specification]

JRKWC9351GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM (WITH INTELLIGENT KEY)

15	SB	-	-
16	L	-	-
17	W	-	-
18	O	-	-
21	G	-	-
22	Y	-	-
23	SB	-	-
24	W	-	-
25	BR	-	-
26	BY	-	-
27	GR	-	-
28	P	-	-
29	V	-	-
30	G	-	-
31	G	-	-
32	O	-	-
33	W	-	-
34	V	-	-
35	Y	-	-
36	P	-	-
37	LG	-	-
39	SB	-	-
40	GR	-	-
41	O	-	-
42	V	-	-
43	LG	- [With M/T]	-
44	R	- [With CVT]	-
46	W	-	-
47	G	-	-
48	BR	-	-

Connector No.	E11
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	M06FB-LC



10	9
13	

Terminal No.	Color	Wire	Signal Name [Specification]
9	BY	-	-
10	L	-	-
13	W	-	-

Connector No.	E12
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS08FB-RCS



22	21	19	18
----	----	----	----

Terminal No.	Color	Wire	Signal Name [Specification]
18	Y	-	-
19	BY	-	-
21	W	-	-
22	V	-	-

Connector No.	E10
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	M06FW-LC



5	4	3
8	7	6

Terminal No.	Color	Wire	Signal Name [Specification]
3	BR	-	-
4	P	-	-
5	LG	-	-

Connector No.	E13
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH12FM-NH



28	27	26	25	24
34	33	31	30	

Terminal No.	Color	Wire	Signal Name [Specification]
24	G	-	-
25	Y	-	-
26	P	-	-
27	L	-	-
28	P	-	-
30	SB	-	-
31	W	-	-
33	O	-	-
34	R	-	-

Connector No.	E14
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS



38	38	37	36		
46	45	44	43	41	40

Terminal No.	Color	Wire	Signal Name [Specification]
36	O	-	-
37	V	-	-
38	G	-	-
39	V	-	-
40	R	-	-
41	SB	-	-
43	G	-	-
44	P	-	-
45	Y	-	-
46	O	-	-

Connector No.	E15
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS16FM-CS



52	51	50	49	47				
62	61	60	59	58	57	56	55	54

Terminal No.	Color	Wire	Signal Name [Specification]
47	BR	-	-
49	W	-	-
50	GR	-	-
51	R	-	-
52	P	-	-
54	GR	-	-
55	P	-	-
56	SB	-	-
57	G	-	-
58	LG	-	- [With M/T]
59	R	-	- [With CVT]
60	Y	-	-
61	W	-	-
62	L	-	-

Connector No.	E16
Connector Name	ECM
Connector Type	RH24FB-RZ8-L-RH



83	83	82	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---	---

Terminal No.	Color	Wire	Signal Name [Specification]
83	P	-	CAN COMMUNICATION LINE
84	L	-	CAN COMMUNICATION LINE
88	LG	-	DATA LINK CONNECTOR
93	L	-	IGNITION SWITCH
94	SB	-	ASCD STEERING SWITCH

JRKWC9352GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS


< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM (WITH INTELLIGENT KEY)


Terminal No.	Color Of Wire	Signal Name (Specification)
95	BR	SENSOR GROUND
96	W	STOP LAMP SWITCH
100	SB	ASC/BRAKE SWITCH
102	O	SENSOR POWER SUPPLY
103	G	ACCELERATOR PEDAL POSITION SENSOR 2
104	R	SENSOR GROUND
105	G	POWER SUPPLY FOR ECM
106	V	SENSOR POWER SUPPLY
107	B	ECM GROUND
108	B	ECM GROUND
109	B	ACCELERATOR PEDAL POSITION SENSOR 1
110	BR	ECM GROUND
111	Y	SENSOR GROUND
112	B	ECM GROUND

Connector No.	E17
Connector Name	SWITCHER/INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH10FB-NH



Terminal No.	Color Of Wire	Signal Name (Specification)
64	R	-
66	L	-
69	O	-

Connector No.	E18
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	TK24FW



Terminal No.	Color Of Wire	Signal Name (Specification)
1	Y	LINE PRESSURE SOLENOID VALVE
2	LG	SECONDARY PRESSURE SOLENOID VALVE
3	BR	TORQUE CONVERTER CLUTCH SOLENOID VALVE
4	O	LOCK-UP SELECT SOLENOID VALVE
5	L	CAN-H
6	P	CAN-L
10	R	IGNITION POWER SUPPLY
11	W	STEP MOTOR A
12	L	STEP MOTOR B
13	SB	ROM ASSY (SEL 2)
14	P	ROM ASSY (SEL 1)
15	V	ROM ASSY (SEL 3)
18	BR	P RANGE SW
19	R	IGNITION POWER SUPPLY
20	SB	STEP MOTOR C
21	Y	STEP MOTOR D
22	GR	P RANGE SW


Connector No.	E36
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA22FB-AH24-RH



Terminal No.	Color Of Wire	Signal Name (Specification)
1	B	GND (MTR)
2	Y	BAT (MTR)
3	L	BAT (SOL)
4	B	GND (SOL)
5	Y	DS FL
6	W	DP RL
8	O	DP RR
9	L	DP FR
10	R	DS FR
11	LG	K LINE
14	GR	CAN-L
15	P	CAN-H
16	BR	DP FL
17	G	DS RL
18	V	IGN

Terminal No.	Color Of Wire	Signal Name (Specification)
19	SB	DS RR
20	W	STOP LAMP SW
21	P	VDC OFF SW
25	R	CAN-H
26	L	CAN-L

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name (Specification)
1	V	-
2	W	-
3	SB	-
4	G	-
5	P	-
6	L	- [With NAVI]
6	R	- [Without NAVI]
7	Y	-
8	O	-
9	W	-
10	SB	-
31	V	-
32	R	-
33	GR	-
34	P	-
35	Y	-
36	BR	-
39	SB	-
44	R	-
45	V	-
46	P	-
48	L	-
51	B	- [With M/T]
51	BR	- [With CVT]
53	SB	-
54	O	- [With M/T]
54	W	- [With CVT]
57	LG	-
59	L	-

Terminal No.	Color Of Wire	Signal Name (Specification)
60	O	-
61	G	-
62	W	-
63	L	-
67	GR	- [With CVT]
67	V	- [With M/T]
69	P	-
70	SHIELD	-
71	GR	-
72	LG	-
73	P	-
74	V	-
76	Y	-
77	LG	-
78	O	-
79	G	-
80	P	-
81	L	-
82	W	-
83	BR	-
84	B	-
91	W	-
92	Y	-
93	Y	-
94	R	-
95	V	-
96	LG	-
97	R	-
98	SB	-
99	G	-
100	P	-

Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name (Specification)
1	V	-
2	W	-
3	O	-

JRKWC9353GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]


NISSAN VEHICLE IMMOBILIZER SYSTEM (WITH INTELLIGENT KEY)

Terminal No.	4	G	-
Color			
Wire			
Signal Name			
Specification			



Terminal No.	39	G	-
Color			
Wire			
Signal Name			
Specification			

Connector No.	F21
Connector Name	TRANSMISSION RANGE SWITCH
Connector Type	RK08EG




Terminal No.	4	L	VEHICLE SPEED SIGNAL (2-PULSE) [Without NAVI]
Color			
Wire			
Signal Name			
Specification			

Connector No.	M26
Connector Name	NATS ANTENNA AMP.
Connector Type	TH04FW-NH



Terminal No.	4	L	VEHICLE SPEED SIGNAL (2-PULSE) [Without NAVI]
Color			
Wire			
Signal Name			
Specification			

Connector No.	M58
Connector Name	CVT SHIFT SELECTOR
Connector Type	TH08FW-NH




Terminal No.	1	Y	BAT
Color			
Wire			
Signal Name			
Specification			

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH04FW-NH




Terminal No.	1	R	-
Color			
Wire			
Signal Name			
Specification			

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	1	SB	-
Color			
Wire			
Signal Name			
Specification			



Terminal No.	1	P	-
Color			
Wire			
Signal Name			
Specification			

JRKWC9354GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]


NISSAN VEHICLE IMMOBILIZER SYSTEM (WITH INTELLIGENT KEY)

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	LY	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L/R	COMBI SW INPUT 1
7	W/R	KEY CYL UNLOCK SW
8	W/B	RE CTL LOCK SW
9	R	STOP LAMP SW 1
12	GR	CENTRAL DOOR LOCK SW
13	BR	CENTRAL DOOR UNLOCK SW
14	L/G	OPTICAL SENSOR
15	W/L	REAR WINDOW DEFOGGER SW
17	RG	OPTICAL SENSOR POWER SUPPLY
18	V	SENSOR GND
21	P/L	NATS ANTENNA AMP.
23	R/Y	SECURITY INDICATOR LAMP
25	L/G	NATS ANTENNA AMP.
27	O	A/C SW
28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW
31	G/B	DR DOOR UNLOCK SENSOR
32	LG	COMBI SW OUTPUT 5
33	Y/L	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/O	COMBI SW OUTPUT 1
37	G/O	SHIFT P
38	G/Y	RECEIVER COMM
39	L	CANH
40	P	CANL

Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA08FB-FH4G-SA




Terminal No.	Color Of Wire	Signal Name [Specification]
43	W	BACK DOOR SW
44	LG	REAR WIPER STOP POSITION
45	SB	PASSENGER DOOR SW
46	GB/L	REAR RH DOOR SW
47	BR/Y	DRIVER DOOR SW
48	W/G	REAR LH DOOR SW
50	R/W	BK DR LOCK AGT RELAY CONT
51	W	BACK DOOR REQUEST SW
54	LG	REAR WIPER OUTPUT
55	G	REAR DOOR UNLOCK OUTPUT

Connector No.	M70
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA08FW-FH4G-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
56	L	INTERIOR ROOM LAMP POWER SUPPLY
57	Y	BAT (FUSE)
59	G	PASSENGER DOOR UNLOCK OUTPUT
60	W/B	TURN SIGNAL LH OUTPUT
61	W/L	TURN SIGNAL RH OUTPUT
63	BR	ROOM LAMP TIMER CONTROL
65	V	ALL DOOR LOCK OUTPUT
66	L/B	DRIVER DOOR UNLOCK OUTPUT
67	B	GROUND
68	L	POWER WINDOW POWER SUPPLY (IGN)

Connector No.	P
Connector Name	POWER WINDOW POWER SUPPLY (BAT)
Connector Type	BAT (F/L)



Terminal No.	Color Of Wire	Signal Name [Specification]
72	SB	A/C INDICATOR OUTPUT
73	SB	DRIVER DOOR REQUEST SW
76	L/O	PUSH SW
78	LG	DRIVER DOOR ANT+
79	V	DRIVER DOOR ANT-
80	BR/Y	PASSENGER DOOR ANT+
81	L/Y	PASSENGER DOOR ANT-
82	W/B	BACK DOOR ANT+
83	B/W	BACK DOOR ANT-
84	Y/G	ROOM ANT+
85	Y/L	ROOM ANT-
86	P	LUGGAGE ROOM ANT+
87	L	LUGGAGE ROOM ANT-
90	W/L	PUSH-BUTTON IGNITION SW ILL POWER
91	Y	ACC ON IND.
92	BR/R	PUSH-BUTTON IGNITION SW ILL GND
93	GR/W	I-KEY WARN BLZZER
96	BR/W	ACC RELAY CONT
97	L/R	STARTER RELAY CONT
98	BR	IGN RELAY (IPDM E/R) CONT
99	W/R	IGN RELAY CONT
100	G	PASSENGER DOOR REQUEST SW
102	G	SHIFT NIP
103	G/Y	FR DEFROSTER SW
104	Y/R	CVT SHIFT SELECTOR POWER SUPPLY
105	B/O	STOP LAMP SW 2
106	Y/B	BLOWER FAN MOTOR RELAY CONT

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-GS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/O	-
2	R	-
3	G/R	-
4	G/B	-
6	L	-
7	W/R	-
8	G/W	-
9	Y/L	-
10	W	-
31	GR/L	-
32	L/B	-
33	R/Y	-
34	SB	-
35	BR	-
36	G	-
39	L/R	-
44	G/O	-
45	LG/R	-
46	GR/W	-
48	L/O	-
51	B/W	-
53	R/L	-
54	O	-
57	GR	-
59	V	-
60	R/W	-
61	P/W	-
62	W/L	-
63	W/B	-
67	Y/R	-
69	L/G	-
70	SHIELD	-
71	P/B	-
72	R/G	-
73	R	-

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM (WITH INTELLIGENT KEY)

74	L/Y	-
76	W/G	-
77	GR/R	-
78	O	-
79	LG	-
80	P	-
81	L	-
82	GR	-
83	G/R	-
84	B	-
91	R	-
92	O	-
93	Y	-
94	R/B	-
95	L/W	-
96	Y	-
97	Y	-
98	BR/W	-
99	W	-
100	G/R	-

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Type	TH24FW-NH



12	11	10	9	8	5	4	3	2	1
24	23	22	20	18	17	16	15	13	

Terminal Color Of Wire No.	Signal Name [Specification]
1	W/G
2	L/Y
3	R
4	P/B
5	W
8	SB
9	L/G
10	GR/B
11	G/B
12	G/R
13	R/G
15	R/L
16	GR/R
17	BR/Y

18	PU	-
20	GR/L	-
22	L	-
23	Y/L	-
24	G/W	-

Connector No.	M80
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH



8	6	5	2	1
15	14	13	11	9

Terminal Color Of Wire No.	Signal Name [Specification]
1	LB
2	GR/L
5	W
6	W/L
8	BR/Y
9	RY
11	O
13	BR/W
14	W/B
16	W/G

Connector No.	M101
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



4	5	6	7	8
3				

Terminal Color Of Wire No.	Signal Name [Specification]
3	P
4	B
5	W/L

6	BR/R	-
7	Y	-
8	LO	-


A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

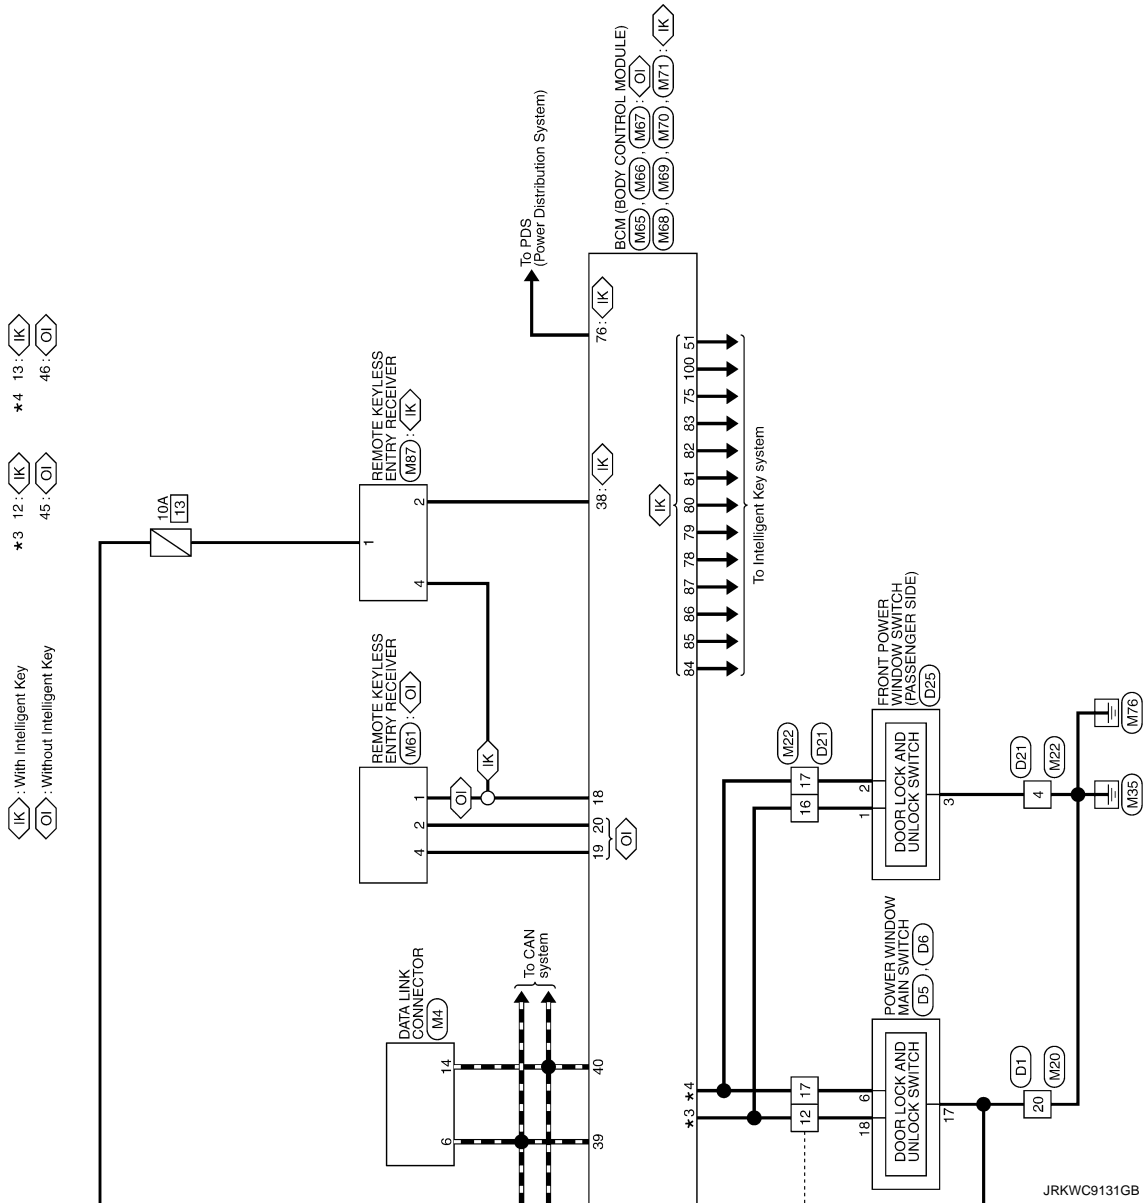

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	O	-
4	P	-
5	W	-
8	SB	-
9	GR	-
10	SB	-
11	G	-
12	SB	-
13	L	-
15	R	-
16	GR	-
17	BR	-
18	L	-
20	LG	-
22	Y	-
23	BR	-
24	O	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH06MV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	GR	-
5	V	-
6	W	-
8	LG	-
9	R	-
11	O	-
13	GR	-
14	P	-
16	W	-

Connector No.	B27
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	SB	-

Connector No.	B34
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-

Connector No.	B53
Connector Name	REAR DOOR SWITCH RH
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-

Connector No.	B71
Connector Name	REAR DOOR SWITCH LH
Connector Type	TH04FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
3	W	-

Connector No.	B75
Connector Name	BACK DOOR SWITCH
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	W	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	NH0FW-CS10



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	SB	-
3	Y	-
5	LG	-
6	R	-
7	L	-
8	W	-
9	BR	-
10	P	-
12	GR	-
13	W	-
14	G	-

JRKWC9345GB

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM

15	V	-
17	R	-
18	L	-
19	O	-
20	B	-

Connector No.	D5
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-GS



1	2	3	4	5	6	7
8	9	10	11	12	13	15
16						

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	O	-
5	Y	-
6	V	-
7	LG	-
8	BR	-
9	V	-
10	L	-
11	GR	-
12	SB	-
13	W	-
15	G	-
16	W	-

Connector No.	D6
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS09FW-GS



17	18	19
----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
17	B	-
18	GR	-
19	P	-

Connector No.	D9
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type	ED08FY-RS



1	2	3	4	5	6
---	---	---	---	---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	SB	-
3	G	-
4	B	-
5	L	-
6	W	-

Connector No.	D21
Connector Name	WIPE TO WIRE
Connector Type	NH10FW-GS10



6	5	4	2	1
13	12	11	10	8
20	18	17	16	15
				7

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	Y	-
4	B	-
5	L	-
6	SB	-
7	R	-
8	V	-
10	W	-
11	L	-
12	LG	-
13	P	-
15	G	-
16	GR	-
17	BR	-
18	V	-
20	W	-

Connector No.	D25
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NS12FW-GS



1	2	3
6	7	8
11	12	

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	B	-
6	Y	-

7	R	-
8	L	-
11	SB	-
12	W	-

Connector No.	E5
Connector Name	HORN RELAY
Connector Type	Relay: 24381, CS900



2
3
1

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	G	-
3	G	-

Connector No.	E11
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	MO08FELC



10	9
13	

Terminal No.	Color Of Wire	Signal Name [Specification]
9	B/W	-
10	L	-
13	W	-

JRKWC9346GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM

Connector No.	E12
Connector Name	FROM INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS08FBRCS



Terminal No.	Color Of Wire	Signal Name [Specification]
18	Y	-
19	BMW	-
21	W	-
22	V	-

Connector No.	E13
Connector Name	FROM INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH12FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
24	G	-
25	Y	-
26	P	-
27	L	-
28	P	-
30	SB	-
31	W	-
33	O	-
34	R	-

Connector No.	E50
Connector Name	HORN
Connector Type	P0TFBA




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-

Connector No.	E51
Connector Name	HORN
Connector Type	P0TFBA



Terminal No.	Color Of Wire	Signal Name [Specification]
2	BMW	-


Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MMW-CS16-TM4

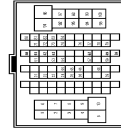

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	SB	-
4	G	-
5	P	-
6	L	- [With NAV]
7	Y	- [Without NAV]
8	O	-
9	W	-
10	SB	-
31	V	-
32	R	-
33	GR	-
34	P	-
35	Y	-
36	BR	-
39	SB	-
44	R	-
45	V	-
46	P	-
48	L	-
51	B	- [With M/T]
51	BR	- [With CVT]
53	SB	-
54	O	- [With M/T]
57	LG	- [With CVT]
59	L	-
60	O	-
61	G	-
62	W	-
63	L	-
67	GR	- [With CVT]
67	V	- [With M/T]
69	P	-
70	SHIELD	-
71	GR	-
72	LG	-
73	P	-
74	V	-
76	Y	-
77	LG	-
78	O	-
78	G	-
80	P	-
81	L	-
82	W	-

83	BR	-
84	B	-
91	W	-
92	Y	-
93	Y	-
94	R	-
95	V	-
96	LG	-
97	R	-
98	SB	-
99	G	-
100	P	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
4	B	-
5	B	-
6	L	-
7	GR/R	-
8	O	-
14	P	-
16	LG/R	-

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	NH10MW-CS10

1	2	3	5	6
7	8	10	12	13
14	15	17	18	19
20				



Terminal No.	Wire	Signal Name [Specification]
1	L/W	-
2	W/R	-
3	Y	-
5	L/B	-
6	R	-
7	L	-
8	Y/R	-
9	SB	-
10	LG	-
12	GR	-
13	W/B	-
14	G/B	-
15	V	-
17	BR	-
18	W/R	-
19	L/R	-
20	B	-

Connector No.	M22
Connector Name	WIRE TO WIRE
Connector Type	NH10MW-CS10

1	2	4	5	6
7	8	10	11	12
13	14	15	16	17
18	19	20		



Terminal No.	Wire	Signal Name [Specification]
1	G	-
2	G	-
4	B	-

Terminal No.	Wire	Signal Name [Specification]
5	L	-
6	W/R	-
7	R	-
8	V	-
10	LG	-
11	R	-
12	G	-
13	B/Y	-
15	G/B	-
16	GR	-
17	BR	-
18	L/Y	-
20	Y/R	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FV-NH

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----



Terminal No.	Wire	Signal Name [Specification]
1	L	CANH
2	P	CANH
3	V	VEHICLE SPEED SIGNAL (2-PULSE)
4	L	VEHICLE SPEED SIGNAL (8-PULSE) (Without NAVI)
4	V/R	VEHICLE SPEED SIGNAL (8-PULSE) (With NAVI)
6	B/Y	FUEL LEVEL SENSOR SIGNAL
7	R/G	AIR BAG SIGNAL
8	P	OVERDRIVE CONTROL SWITCH SIGNAL
9	O	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	SB	PARKING BRAKE SWITCH SIGNAL
11	G/R	BRAKE FLUID LEVEL SWITCH SIGNAL
13	B/R	ILLUMINATION CONTROL SIGNAL
15	L/Y	ACC POWER SUPPLY
18	R/Y	SECURITY SIGNAL
19	P/W	AMBIENT SENSOR SIGNAL
20	R/W	AMBIENT SENSOR GROUND
21	B	GROUND
22	B	GROUND
23	B	GROUND
24	P/U	FUEL LEVEL SENSOR GROUND
25	B	VDC GROUND

Terminal No.	Wire	Signal Name [Specification]
27	L/G/R	BATTERY POWER SUPPLY
28	GR	IGNITION SIGNAL
29	BR	PASSENGER SEAT BELT WARNING SIGNAL
31	R	AC AUTO AMP CONNECTION RECOGNITION SIGNAL
35	BR	ENGINE COOLANT TEMPERATURE SIGNAL
38	GR	ALTERNATOR SIGNAL

Connector No.	M63
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	TK04FW

1	2	3	4
---	---	---	---



Terminal No.	Wire	Signal Name [Specification]
1	V	-
2	G/Y	-
4	BR	-

Connector No.	M65
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FV-NH

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----



Terminal No.	Wire	Signal Name [Specification]
2	B/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L/Y	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L/R	COMBI SW INPUT 1
7	W/R	KEY CYL UNLOCK SW
8	W/B	KEY CTL LOCK SW
9	R	STOP LAMP SW
10	W/L	REAR WINDOW DEFOGGER SW

Terminal No.	Wire	Signal Name [Specification]
11	L/Y	ACC POWER SUPPLY
12	SB	PASSENGER DOOR SW
13	GR/L	REAR RH DOOR SW
18	V	RECEIVER J SENSOR GND
19	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY
20	G/Y	KEYLESS ENTRY RECEIVER COMM
21	P/L	NAVS ANTENNA AMP.
23	R/Y	SECURITY INDICATOR LAMP
25	LG	NAVS ANTENNA AMP.
26	GR	THERMO CONTROL AMP.
27	Y/G	A/C SW
28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW
31	G/Y	FR DEFROSTER SW
32	LG	COMBI SW OUTPUT 5
33	Y/L	COMBI SW OUTPUT 4
34	W/L	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/O	COMBI SW OUTPUT 1
37	R/W	KEY SWITCH
38	O	IGNITION POWER SUPPLY
39	L	CANH
40	P	CANH

Connector No.	M66
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FV-FH46-SA

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----



Terminal No.	Wire	Signal Name [Specification]
43	W	BACK DOOR SW
44	L/G	REAR WIPER STOP POSITION
45	GR	CENTRAL DOOR LOCK SW
46	BR	CENTRAL DOOR UNLOCK SW
47	B/Y	DRIVER DOOR SW
48	W/G	REAR LH DOOR SW
50	SB	A/C INDICATOR OUTPUT
54	LG	REAR WIPER OUTPUT

JRKWC9348GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC


VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]


VEHICLE SECURITY SYSTEM

Connector No.	M67
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FHAG-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
56	L	INTERIOR ROOM LAMP POWER SUPPLY
57	Y	BAT (ELISE)
59	L/B	DRIVER DOOR UNLOCK OUTPUT
60	W/B	TURN SIGNAL LH OUTPUT
61	W/L	TURN SIGNAL RH OUTPUT
63	BR	ROOM LAMP TIMER CONTROL
65	V	ALL DOOR LOCK OUTPUT
66	G	PASSENGER DOOR REAR DOOR UNLOCK OUTPUT
67	B	GROUND
68	L	POWER WINDOW POWER SUPPLY (IGN)
69	P	POWER WINDOW POWER SUPPLY (BAT)
70	Y	BAT (FL)

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L/Y	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L/R	COMBI SW INPUT 1
7	W/R	KEY CYL UNLOCK SW
8	W/B	REACT LOCK SW
9	R	STOP LAMP SW 1

12	GR	CENTRAL DOOR LOCK SW
13	BR	CENTRAL DOOR UNLOCK SW
14	L/G	OPTICAL SENSOR
15	W/L	REAR WINDOW DEFROGGER SW
17	R/G	OPTICAL SENSOR POWER SUPPLY
18	V	SENSOR GND
21	P/L	NATS ANTENNA AMP.
23	R/Y	SECURITY INDICATOR LAMP
25	LG	NATS ANTENNA AMP.
27	O	A/C SW
28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW
31	G/B	DR DOOR UNLOCK SENSOR
32	LG	COMBI SW OUTPUT 5
33	Y/L	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/O	COMBI SW OUTPUT 1
37	G/O	SHFT P
38	G/Y	RECEIVER COMM
39	L	GANTH
40	P	CANL



Terminal No.	Color Of Wire	Signal Name [Specification]
56	L	INTERIOR ROOM LAMP POWER SUPPLY
57	Y	BAT (ELISE)
59	G	PASSENGER DOOR UNLOCK OUTPUT
60	W/B	TURN SIGNAL LH OUTPUT
61	W/L	TURN SIGNAL RH OUTPUT
63	BR	ROOM LAMP TIMER CONTROL
65	V	ALL DOOR LOCK OUTPUT
66	L/B	DRIVER DOOR UNLOCK OUTPUT
67	B	GROUND
68	L	POWER WINDOW POWER SUPPLY (IGN)
69	P	POWER WINDOW POWER SUPPLY (BAT)
70	Y	BAT (FL)


Connector No.	M71
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	SB	A/C INDICATOR OUTPUT
75	SB	DRIVER DOOR REQUEST SW
76	L/O	PUSH SW
78	LG	DRIVER DOOR ANTI+
79	V	DRIVER DOOR ANTI-
80	BR/Y	PASSENGER DOOR ANTI+
81	L/Y	PASSENGER DOOR ANTI-
82	W/B	BACK DOOR ANTI+

83	B/W	BACK DOOR ANTI-
84	Y/G	ROOM ANTI+
85	Y/L	ROOM ANTI-
86	P	LUGGAGE ROOM ANTI+
87	L	LUGGAGE ROOM ANTI-
90	W/L	PUSH-BUTTON IGNITION SW ILL POWER
91	Y	ACC/IGN IND
92	BR/R	PUSH-BUTTON IGNITION SW ILL GND
93	GR/W	L-KEY WARN BUZZER
96	BR/W	ACC RELAY CONT
97	L/R	STARTER RELAY CONT
98	BR	IGN RELAY (IPDM E/R) CONT
99	W/R	IGN RELAY CONT
100	G	PASSENGER DOOR REQUEST SW
102	G	SHFT NIP
103	G/Y	FR DEFROSTER SW
104	Y/R	C/VT SHFT SELECTOR POWER SUPPLY
105	B/O	STOP LAMP SW 2
106	Y/B	BLOWER FAN MOTOR RELAY CONT

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-C516-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	E/O	-
2	R	-
3	G/R	-
4	G/B	-
5	L	-
6	L	-
7	W/R	-
8	G/W	-
9	Y/L	-
10	W	-
31	GR/L	-
32	L/B	-
33	R/Y	-
34	SB	-
35	BR	-

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM

36	G	-	-	-	-
39	L/R	-	-	-	-
44	G/O	-	-	-	-
45	LG/R	-	-	-	-
46	GR/W	-	-	-	-
48	L/O	-	-	-	-
51	B/W	-	-	-	-
53	R/L	-	-	-	-
54	O	-	-	-	-
57	GR	-	-	-	-
59	V	-	-	-	-
60	R/W	-	-	-	-
61	P/W	-	-	-	-
62	W/B	-	-	-	-
63	W/B	-	-	-	-
67	Y/R	-	-	-	-
69	L/G	-	-	-	-
70	SHIELD	-	-	-	-
71	P/B	-	-	-	-
72	R/G	-	-	-	-
73	R	-	-	-	-
74	L/Y	-	-	-	-
76	W/G	-	-	-	-
77	GR/R	-	-	-	-
78	O	-	-	-	-
79	LG	-	-	-	-
80	P	-	-	-	-
81	L	-	-	-	-
82	GR	-	-	-	-
83	G/R	-	-	-	-
84	B	-	-	-	-
91	R	-	-	-	-
92	O	-	-	-	-
93	Y	-	-	-	-
94	R/B	-	-	-	-
95	L/W	-	-	-	-
96	Y	-	-	-	-
97	L	-	-	-	-
98	BR/W	-	-	-	-
99	W	-	-	-	-
100	G/R	-	-	-	-

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Type	TH24FW-NH



Terminal No.	Color Of Wire	Signal Name (Specification)
1	W/G	-
2	L/Y	-
3	R	-
4	P/B	-
5	W	-
6	SB	-
8	L/G	-
9	GR/B	-
10	GR/B	-
11	G/B	-
12	G/R	-
13	R/G	-
15	R/L	-
16	GR/R	-
17	BR/Y	-
18	P/U	-
20	GR/L	-
22	L	-
23	Y/L	-
24	G/W	-



Connector No.	M80
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH

Terminal No.	Color Of Wire	Signal Name (Specification)
1	L/B	-
2	GR/L	-
5	W	-
6	W/L	-
8	BR/Y	-
9	R/Y	-
11	O	-
13	BR/W	-
14	W/B	-
16	W/G	-

Connector No.	M87
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	TH24FW-NH



Terminal No.	Color Of Wire	Signal Name (Specification)
1	P	-
2	G/Y	SIGNAL
4	V	GROUND

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

JRKWC9350GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000010246076

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status	
FR FOG SW	Front fog lamp switch OFF	Off	A
	Front fog lamp switch ON	On	
DOOR SW-DR	Driver door closed	Off	B
	Driver door opened	On	
DOOR SW-AS	Passenger door closed	Off	C
	Passenger door opened	On	
DOOR SW-RR	Rear RH door closed	Off	D
	Rear RH door opened	On	
DOOR SW-RL	Rear LH door closed	Off	E
	Rear LH door opened	On	
DOOR SW-BK	Back door closed	Off	F
	Back door opened	On	
CDL LOCK SW	Other than power door lock switch LOCK	Off	G
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	H
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off	I
	Driver door key cylinder LOCK position	On	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off	J
	Driver door key cylinder UNLOCK position	On	
HAZARD SW	Hazard switch is OFF	Off	
	Hazard switch is ON	On	
REAR DEF SW	Rear window defogger switch OFF	Off	
	Rear window defogger switch ON	On	
TR/BD OPEN SW	NOTE: The item is indicated, but not monitored.	Off	
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off	
FAN ON SIG	Blower fan OFF	Off	L
	Blower fan ON	On	
AIR COND SW	Air conditioner OFF (A/C switch indicator OFF)	Off	M
	Air conditioner ON (A/C switch indicator ON)	On	
RKE-LOCK	LOCK button of the key is not pressed	Off	N
	LOCK button of the key is pressed	On	
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off	O
	UNLOCK button of the key is pressed	On	
RKE-TR/BD	BACK DOOR OPEN button of the key is not pressed	Off	P
	BACK DOOR OPEN button of the key is pressed	On	
RKE-PANIC	PANIC button of the key is not pressed	Off	
	PANIC button of the key is pressed	On	
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off	
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On	
OPTI SEN (DTCT)	Bright outside of the vehicle	Close to 5 V	
	Dark outside of the vehicle	Close to 0 V	

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
OPTI SEN (FILT)	Bright outside of the vehicle (Lighting switch AUTO)	Close to 5 V
	Dark outside of the vehicle (Lighting switch AUTO)	Close to 1.50 V
OPTICAL SENSOR	NOTE: The item is indicated, but not monitored.	Off
RAIN SENSOR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
CLUCH SW	The clutch pedal is not depressed.	Off
	The clutch pedal is depressed	On
BRAKE SW 1	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
BRAKE SW 2	The brake pedal is depressed when No. 9 fuse is blown	Off
	The brake pedal is not depressed when No. 9 fuse is blown, or No. 9 fuse is normal	On
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	NOTE: The item is indicated, but not monitored.	Off
S/L -UNLOCK	NOTE: The item is indicated, but not monitored.	Off
S/L RELAY-F/B	NOTE: The item is indicated, but not monitored.	Off
UNLK SEN -DR	Driver door is locked	Off
	Driver door is unlocked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status	
SFT N -MET	Selector lever in any position other than N	Off	A
	Selector lever in N position	On	
ENGINE STATE	Engine stopped	Stop	B
	While the engine stalls	Stall	
	At engine cranking	Crank	C
	Engine running	Run	
S/L LOCK-IPDM	NOTE: The item is indicated, but not monitored.	Off	D
S/L UNLK-IPDM	NOTE: The item is indicated, but not monitored.	Off	
S/L RELAY-REQ	NOTE: The item is indicated, but not monitored.	Off	E
VEH SPEED 1	While driving	Equivalent to speedometer reading	F
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DOOR STAT-DR	Driver door is locked	LOCK	G
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Driver door is unlocked	UNLOCK	
DOOR STAT-AS	Passenger door is locked	LOCK	H
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Passenger door is unlocked	UNLOCK	
ID OK FLAG	Driver side door is open after ignition switch is turned OFF (Selector lever is in the P position except for M/T models)	Reset	I
	Ignition switch ON	Set	J
PRMT ENG STRT	The engine start is prohibited	Reset	
	The engine start is permitted	Set	
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset	SEC
RKE OPE COUN1	During the operation of the key	Operation frequency of the key	L
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—	
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet	M
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done	
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet	N
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done	O
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done	P
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]


Monitor Item	Condition	Value/Status
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
NOT REGISTERED	BCM detects registered key ID, or BCM does not detect key ID.	ID OK
	BCM detects non-registration key ID.	ID NG
TP 4	The ID of fourth key is not registered to BCM	Yet
	The ID of fourth key is registered to BCM	Done
TP 3	The ID of third key is not registered to BCM	Yet
	The ID of third key is registered to BCM	Done
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	Done
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

TERMINAL LAYOUT

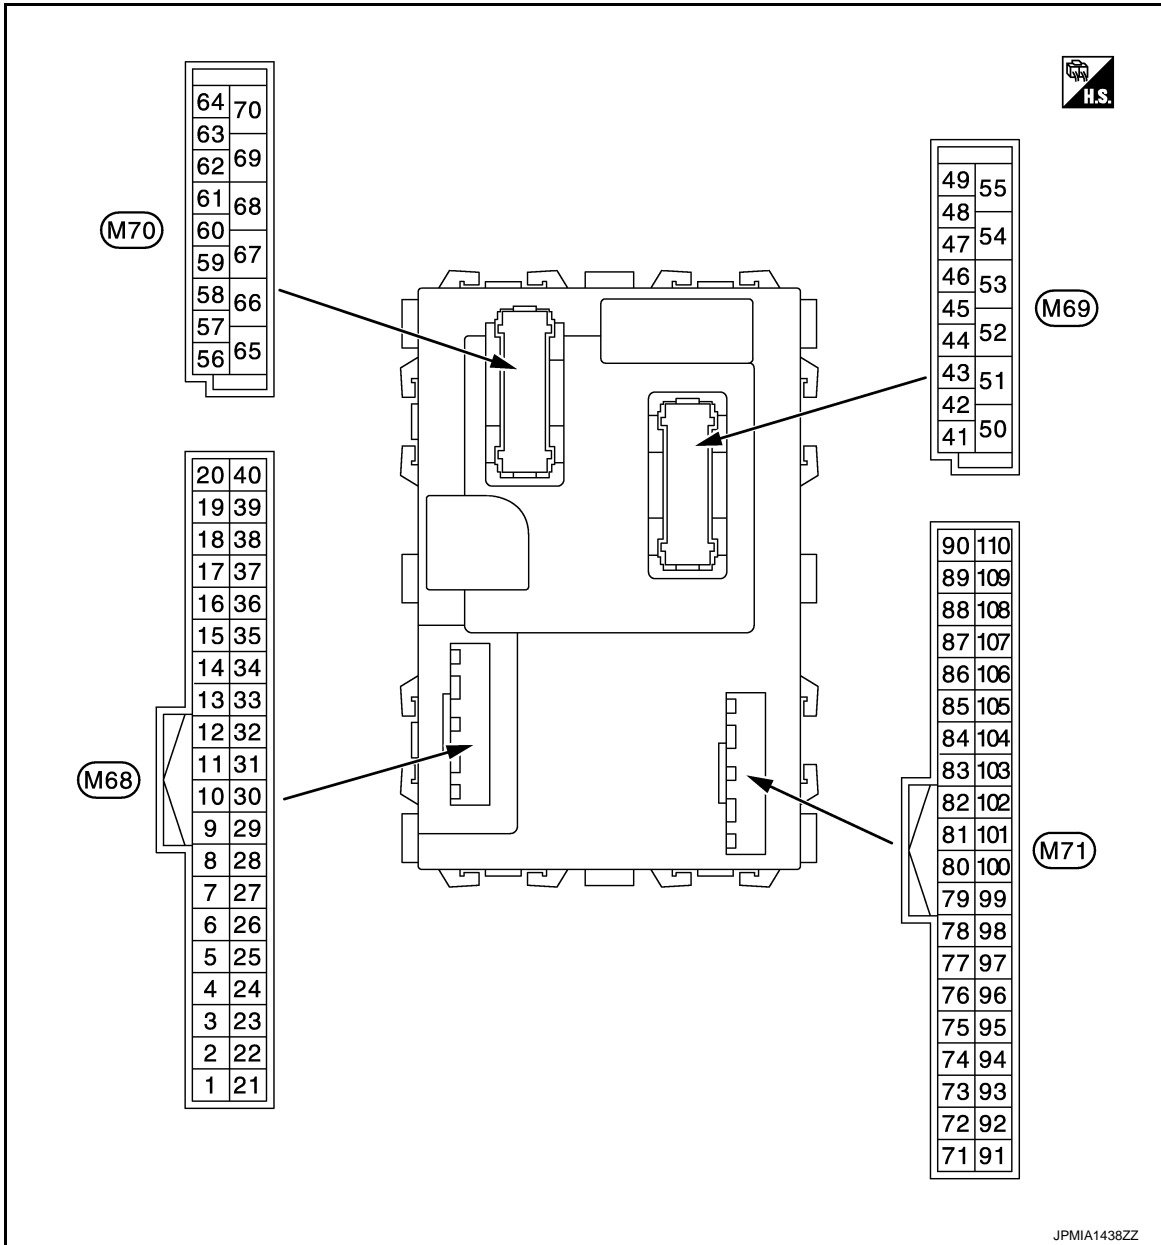

NOTE:

- Connector color
- M68, M70: Black
- M69, M71: White

PHYSICAL VALUES






A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[WITH INTELLIGENT KEY SYSTEM]

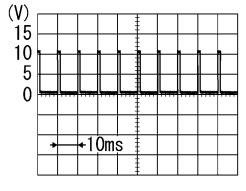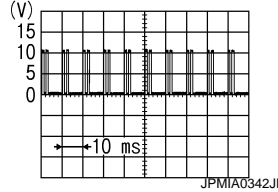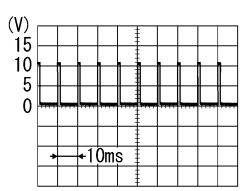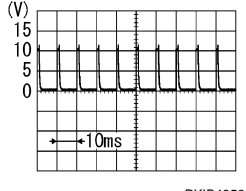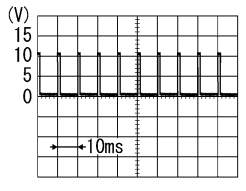Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
2 (BR/W)	Ground	Combination switch INPUT 5	Input	All switch OFF	0 V
				Turn signal switch RH	
				Lighting switch HI	
				Lighting switch 1ST	
				Lighting switch 2ND	 2.0 V
3 (GR)	Ground	Combination switch INPUT 4	Input	All switch OFF	0 V
				Turn signal switch LH	
				Lighting switch PASS	
				Lighting switch 2ND	
				Front fog lamp switch ON	 0.8 V
4 (L/Y)	Ground	Combination switch INPUT 3	Input	All switch OFF	0 V
				Front wiper switch LO	
				Front wiper switch MIST	
				Front wiper switch INT	
				Lighting switch AUTO	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

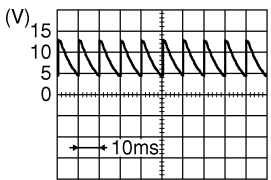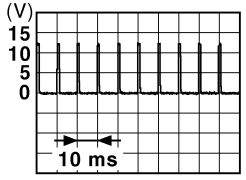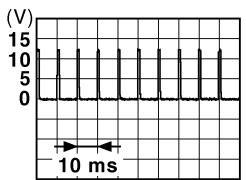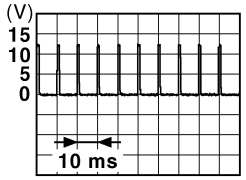Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
7 (W/R)	Ground	Door key cylinder switch UNLOCK	Input	Door key cylin- der switch	NEUTRAL position	 <p style="text-align: right; font-size: small;">JPMIA0587GB</p> <p style="text-align: center;">8.0 - 8.5 V</p>
					UNLOCK position	0 V
8 (W/B)	Ground	Door key cylinder switch LOCK	Input	Door key cylin- der switch	NEUTRAL position	12 V
					LOCK position	0 V
9 (R)	Ground	Stop lamp switch 1	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
12 (GR)	Ground	Door lock and unlock switch LOCK	Input	Door lock and unlock switch	NEUTRAL position	 <p style="text-align: right; font-size: small;">JPMIA0012GB</p> <p style="text-align: center;">1.0 - 1.5 V</p>
					LOCK position	0 V
13 (BR)	Ground	Door lock and unlock switch UNLOCK	Input	Door lock and unlock switch	NEUTRAL position	 <p style="text-align: right; font-size: small;">JPMIA0012GB</p> <p style="text-align: center;">1.0 - 1.5 V</p>
					UNLOCK position	0 V
14 (L/G)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
15 (W/L)	Ground	Rear window defog- ger switch	Input	Rear window defogger switch	Not pressed	 <p style="text-align: right; font-size: small;">JPMIA0012GB</p> <p style="text-align: center;">1.0 - 1.5 V</p>
					Pressed	0 V
17 (R/G)	Ground	Optical sensor pow- er supply	Output	Ignition switch	OFF, ACC	0 V
					ON	5 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
18 (V)	Ground	Sensor ground	Input	Ignition switch ON	0 V	
21 (P/L)	Ground	NATS antenna amp.	Input/ Output	Intelligent Key: Intelligent Key battery is re- moved	Brake pedal: Depressed NOTE: Waveform varies each time when brake pedal is depressed	<p style="text-align: right; font-size: small;">JMKIA6232JP</p>
					Brake pedal: Not de- pressed	12 V
23 (R/Y)	Ground	Security indicator lamp	Output	Security indica- tor	ON	0 V
					Blinking (Ignition switch OFF)	<p style="text-align: right; font-size: small;">JPMIA0590GB</p>
					OFF	Battery voltage
25 (LG)	Ground	NATS antenna amp.	Input/ Output	During waiting	Brake pedal: Depressed NOTE: Waveform varies each time when brake pedal is depressed	<p style="text-align: right; font-size: small;">JMKIA6233JP</p>
					Brake pedal: Not de- pressed	12 V
27 (O)	Ground	A/C ON	Input	A/C	OFF (A/C switch indicator: OFF)	<p style="text-align: right; font-size: small;">JPMIA0012GB</p>
					ON (A/C switch indicator: ON)	0 V
28 (G/W)	Ground	Blower fan switch	Input	Fan switch	Blower fan switch OFF	0 V
					Blower fan switch ON	<p style="text-align: right; font-size: small;">PKIB4960J</p>






A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[WITH INTELLIGENT KEY SYSTEM]

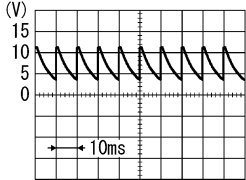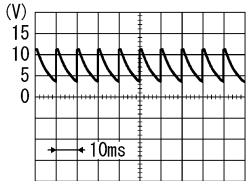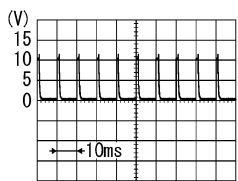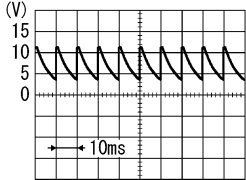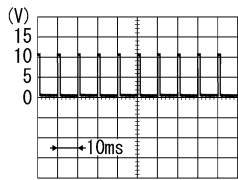Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
29 (L/W)	Ground	Hazard switch	Input	Hazard switch	OFF ON	12 V 0 V
31 (G/B)	Ground	Front door lock assembly driver side (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					UNLOCK status (Unlock sensor switch ON)	0 V
32 (L/G)	Ground	Combination switch OUTPUT 5	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					Front fog lamp switch ON (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					Rear wiper switch ON (Wiper intermittent dial 4)	
Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 					1.0 V	
33 (Y/L)	Ground	Combination switch OUTPUT 4	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					Lighting switch 1ST (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4958J</p>
					Lighting switch AUTO (Wiper intermittent dial 4)	
					Rear wiper switch INT (Wiper intermittent dial 4)	
Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 					1.2 V	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

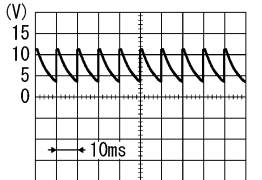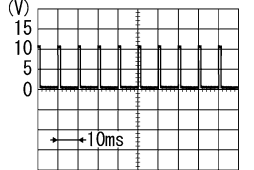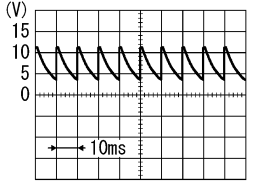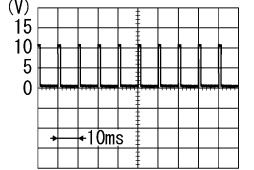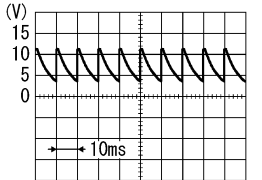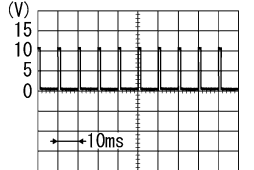Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
34 (W)	Ground	Combination switch OUTPUT 3	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">7.0 - 8.0 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">1.2 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	
					Rear washer switch ON (Wiper intermittent dial 4)	
Any of the condition below with all switch OFF						
<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 						
35 (R/L)	Ground	Combination switch OUTPUT 2	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">7.0 - 8.0 V</p>
					Lighting switch 2ND	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">1.2 V</p>
					Lighting switch PASS	
					Front wiper switch INT	
Front wiper switch HI						
36 (L/O)	Ground	Combination switch OUTPUT 1	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">7.0 - 8.0 V</p>
					Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">1.2 V</p>
					Turn signal switch LH	
					Front wiper switch LO (Front wiper switch MIST)	
Front washer switch ON						





A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[WITH INTELLIGENT KEY SYSTEM]

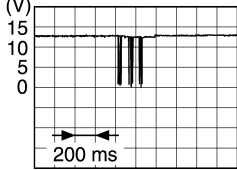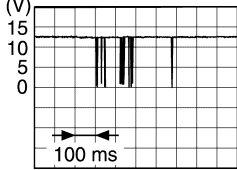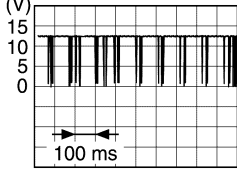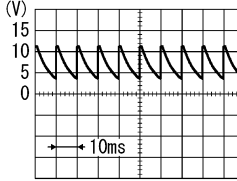Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
37 (G/O)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	12 V
38 (G/Y)	Ground	Receiver communication	Input/ Output	Ignition switch OFF (Remote keyless entry communication)	Waiting	12 V
					When operating either button on Intelligent Key	 JMMIA0572GB
				Ignition switch ON (TPMS communication)	Waiting	 JMMIA0573GB
					When receiving signal from tire pressure sensor	 JMMIA0574GB
39 (L)	Ground	CAN-H	Input/ Output	—	—	
40 (P)	Ground	CAN-L	Input/ Output	—	—	
43 (W)	Ground	Back door switch	Input	Back door switch	OFF (When back door closed)	 PKIB4960J 9.5 - 10.0 V
					ON (When back door opened)	0 V
44 (LG)	Ground	Rear wiper stop position	Input	Ignition switch ON	Rear wiper stop position	12 V
					Any position other than rear wiper stop position	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

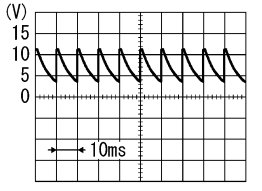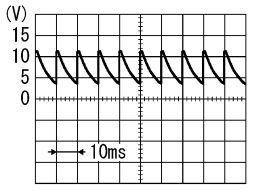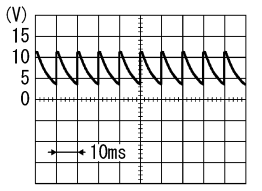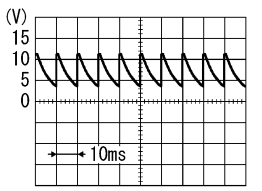Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
45 (SB)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closed)	 7.0 - 8.0 V
				Passenger door switch	ON (When passenger door opened)	0 V
46 (GR/L)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (When rear RH door closed)	 7.0 - 8.0 V
				Rear RH door switch	ON (When rear RH door opened)	0 V
47 (BR/Y)	Ground	Driver door switch	Input	Driver door switch	OFF (When driver door closed)	 7.0 - 8.0 V
				Driver door switch	ON (When driver door opened)	0 V
48 (W/G)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (When rear LH door closed)	 7.0 - 8.0 V
				Rear LH door switch	ON (When rear door LH opened)	0 V
50 (R/W)	Ground	Back door lock actuator relay control	Output	Back door	LOCK (Actuator is activated)	0 V
				Back door	Other than LOCK (Actuator is not activated)	Battery voltage
51 (W)	Ground	Back door request switch	Input	Back door request switch	ON (Pressed)	0 V
				Back door request switch	OFF (Not pressed)	12 V
54 (LG)	Ground	Rear wiper	Output	Rear wiper	OFF (Stopped)	0 V
				Rear wiper	ON (Activated)	12 V



A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[WITH INTELLIGENT KEY SYSTEM]

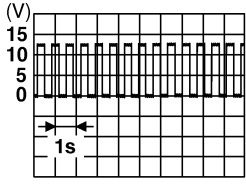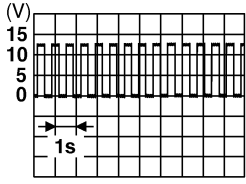Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
55 (G)	Ground	Rear door UNLOCK	Output	Rear door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
56 (L)	Ground	Interior room lamp power supply	Output		Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)	0 V
					Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)	12 V
57 (Y)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
59 (G)	Ground	Passenger door UNLOCK	Output	Passenger door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
60 (W/B)	Ground	Turn signal LH	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKIC6370E</p>
						6.0 V
61 (W/L)	Ground	Turn signal RH	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKIC6370E</p>
						6.0 V
63 (BR)	Ground	Interior room lamp control signal	Output	Interior room lamp	OFF	12 V
					ON	0 V
65 (V)	Ground	All doors LOCK	Output	All doors	LOCK (Actuator is activated)	12 V
					Other than LOCK (Actuator is not activated)	0 V
66 (L/B)	Ground	Driver door UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
67 (B)	Ground	Ground	Output	Ignition switch ON		0 V
68 (L)	Ground	P/W power supply (IGN)	Output	Ignition switch ON		12 V
69 (P)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		12 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

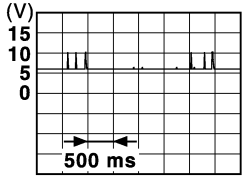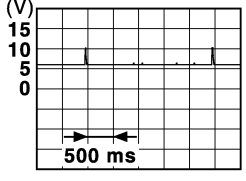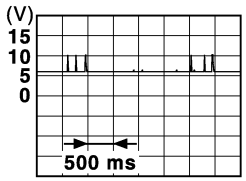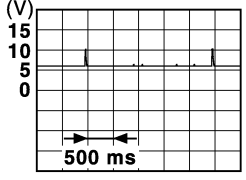Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
70 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage	
72 (SB)	Ground	A/C indicator	Output	A/C indicator	OFF	12 V
					ON	0 V
75 (SB)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	12 V
76 (L/O)	Ground	Push-button ignition switch (push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	12 V
78 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch ON	When Intelligent Key is not in the antenna detection area (The distance between Intelligent Key and antenna: Approx. 2 m)	 <p style="text-align: right; font-size: small;">JMKIA5954GB</p>
					When Intelligent Key is in the antenna detection area (The distance between Intelligent Key and antenna: 80 cm or less)	 <p style="text-align: right; font-size: small;">JMKIA5955GB</p>
79 (V)	Ground	Driver door antenna (-)	Output	When the driver door request switch is operated with ignition switch ON	When Intelligent Key is not in the antenna detection area (The distance between Intelligent Key and antenna: Approx. 2 m)	 <p style="text-align: right; font-size: small;">JMKIA5954GB</p>
					When Intelligent Key is in the antenna detection area (The distance between Intelligent Key and antenna: 80 cm or less)	 <p style="text-align: right; font-size: small;">JMKIA5955GB</p>







A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[WITH INTELLIGENT KEY SYSTEM]

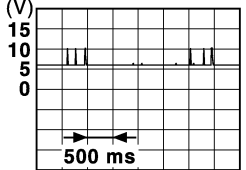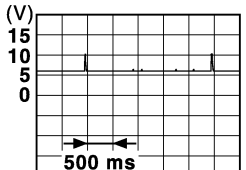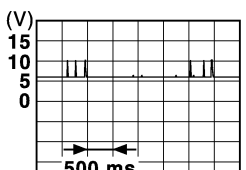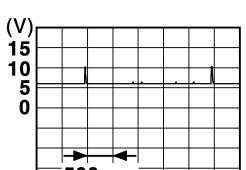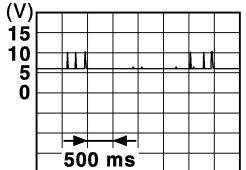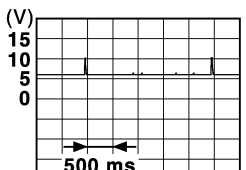Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
80 (BR/Y)	Ground	Passenger door antenna (+)	Output	When the passenger door request switch is operated with ignition switch ON	When Intelligent Key is not in the antenna detection area (The distance between Intelligent Key and antenna: Approx. 2 m)
				When Intelligent Key is in the antenna detection area (The distance between Intelligent Key and antenna: 80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5954GB</p>
				When Intelligent Key is in the antenna detection area (The distance between Intelligent Key and antenna: 80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5955GB</p>
81 (L/Y)	Ground	Passenger door antenna (-)	Output	When the passenger door request switch is operated with ignition switch ON	When Intelligent Key is not in the antenna detection area (The distance between Intelligent Key and antenna: Approx. 2 m)
				When Intelligent Key is in the antenna detection area (The distance between Intelligent Key and antenna: 80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5954GB</p>
				When Intelligent Key is in the antenna detection area (The distance between Intelligent Key and antenna: 80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5955GB</p>
82 (W/B)	Ground	Back door antenna (+)	Output	When the back door request switch is operated with ignition switch ON	When Intelligent Key is not in the antenna detection area (The distance between Intelligent Key and antenna: Approx. 2 m)
				When Intelligent Key is in the antenna detection area (The distance between Intelligent Key and antenna: 80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5954GB</p>
				When Intelligent Key is in the antenna detection area (The distance between Intelligent Key and antenna: 80 cm or less)	 <p style="text-align: right; font-size: small;">JMkia5955GB</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

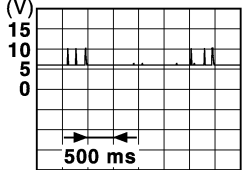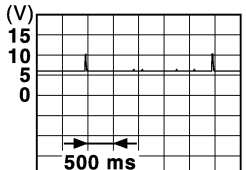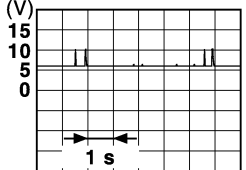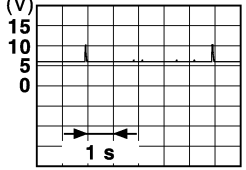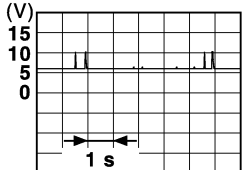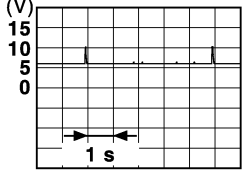Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
83 (B/W)	Ground	Back door antenna (-)	Output	When the back door request switch is operated with ignition switch ON	When Intelligent Key is not in the antenna detection area (The distance between Intelligent Key and antenna: Approx. 2 m)  <small>JMKIA5954GB</small>
				When Intelligent Key is in the antenna detection area (The distance between Intelligent Key and antenna: 80 cm or less)	 <small>JMKIA5955GB</small>
84 (Y/G)	Ground	Room antenna (+) (Instrument center)	Output	Ignition switch ON	When Intelligent Key is not in the antenna detection area  <small>JMKIA5951GB</small>
				When Intelligent Key is in the antenna detection area	 <small>JMKIA3839GB</small>
85 (Y/L)	Ground	Room antenna (-) (Instrument center)	Output	Ignition switch ON	When Intelligent Key is not in the antenna detection area  <small>JMKIA5951GB</small>
				When Intelligent Key is in the antenna detection area	 <small>JMKIA3839GB</small>






A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


[WITH INTELLIGENT KEY SYSTEM]

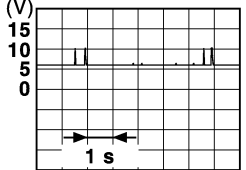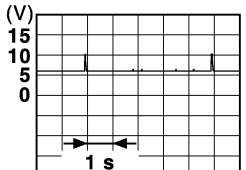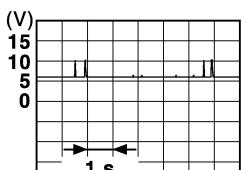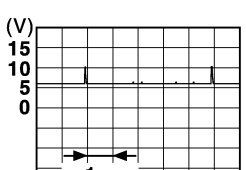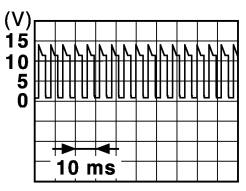Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
86 (P)	Ground	Luggage room antenna (+)	Output	Ignition switch ON	When Intelligent Key is not in the antenna detection area	
				Ignition switch ON	When Intelligent Key is in the antenna detection area	
87 (L)	Ground	Luggage room antenna (-)	Output	Ignition switch ON	When Intelligent Key is not in the antenna detection area	
				Ignition switch ON	When Intelligent Key is in the antenna detection area	
90 (W/L)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON OFF	12 V 0 V
91 (Y)	Ground	ACC/ON indicator lamp	Output	Ignition switch	OFF ACC or ON	Battery voltage 0.5 V
92 (BR/R)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	ON	0 V
				Tail lamp	ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right;">6.0 - 7.0 V</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

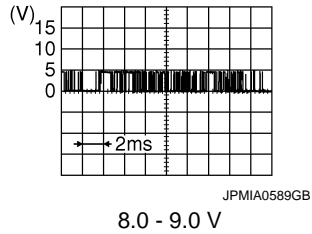Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
93 (GR/W)	Ground	Intelligent Key warn- ing buzzer	Output	Intelligent Key warning buzzer	Sounding	0 V
					Not sounding	12 V
96 (BR/W)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	12 V
97 (L/R)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position	Battery voltage
					When selector lever is not in P or N position	0 V
98 (BR)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	12 V
					ON	0 V
99 (W/R)	Ground	Ignition relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
100 (G)	Ground	Passenger door re- quest switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	12 V
102 (G)	Ground	Selector lever P/N position	Input	Selector lever	P or N position	Battery voltage
					Except P and N positions	0 V
103 (G/Y)	Ground	Front defroster switch	Input	Ignition switch ON	A/C mode defroster ON position	0 V
					Other than A/C mode de- froster ON position	
104 (Y/R)	Ground	CVT shift selector (detention switch) power supply	Output	Ignition switch ON		12 V
105 (B/O)	Ground	Stop lamp switch 2	Input	Ignition switch OFF		Battery voltage
106 (Y/B)	Ground	Blower fan motor re- lay control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V


A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

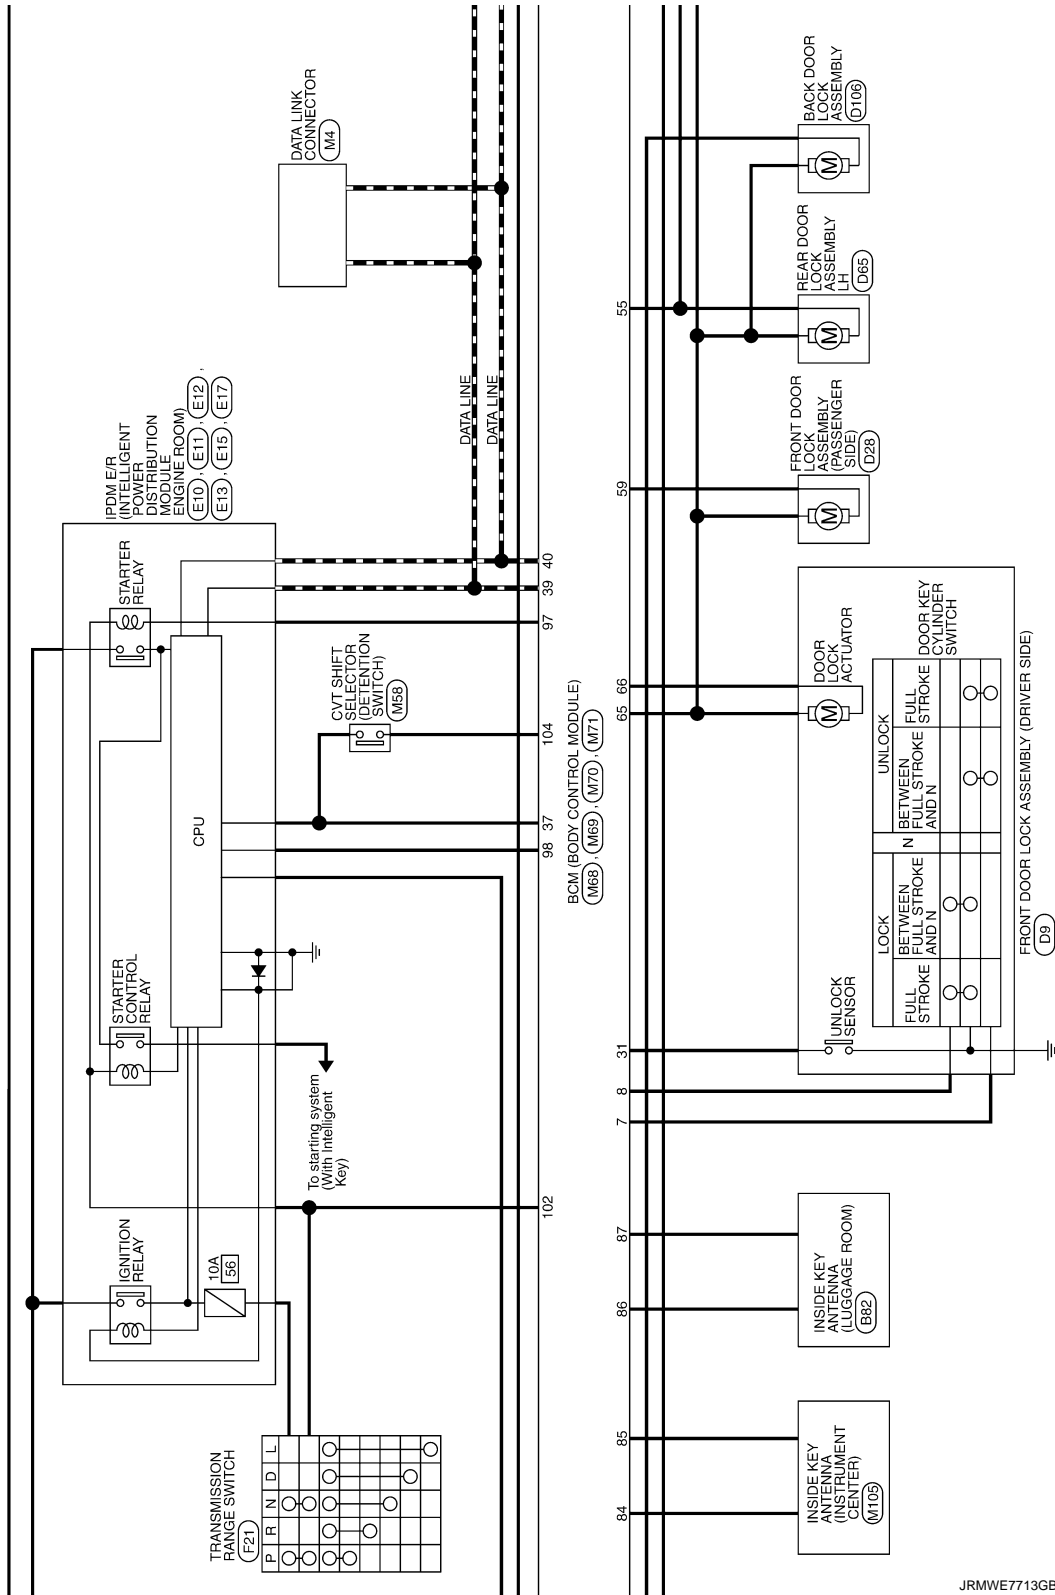

JRMWE7713GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

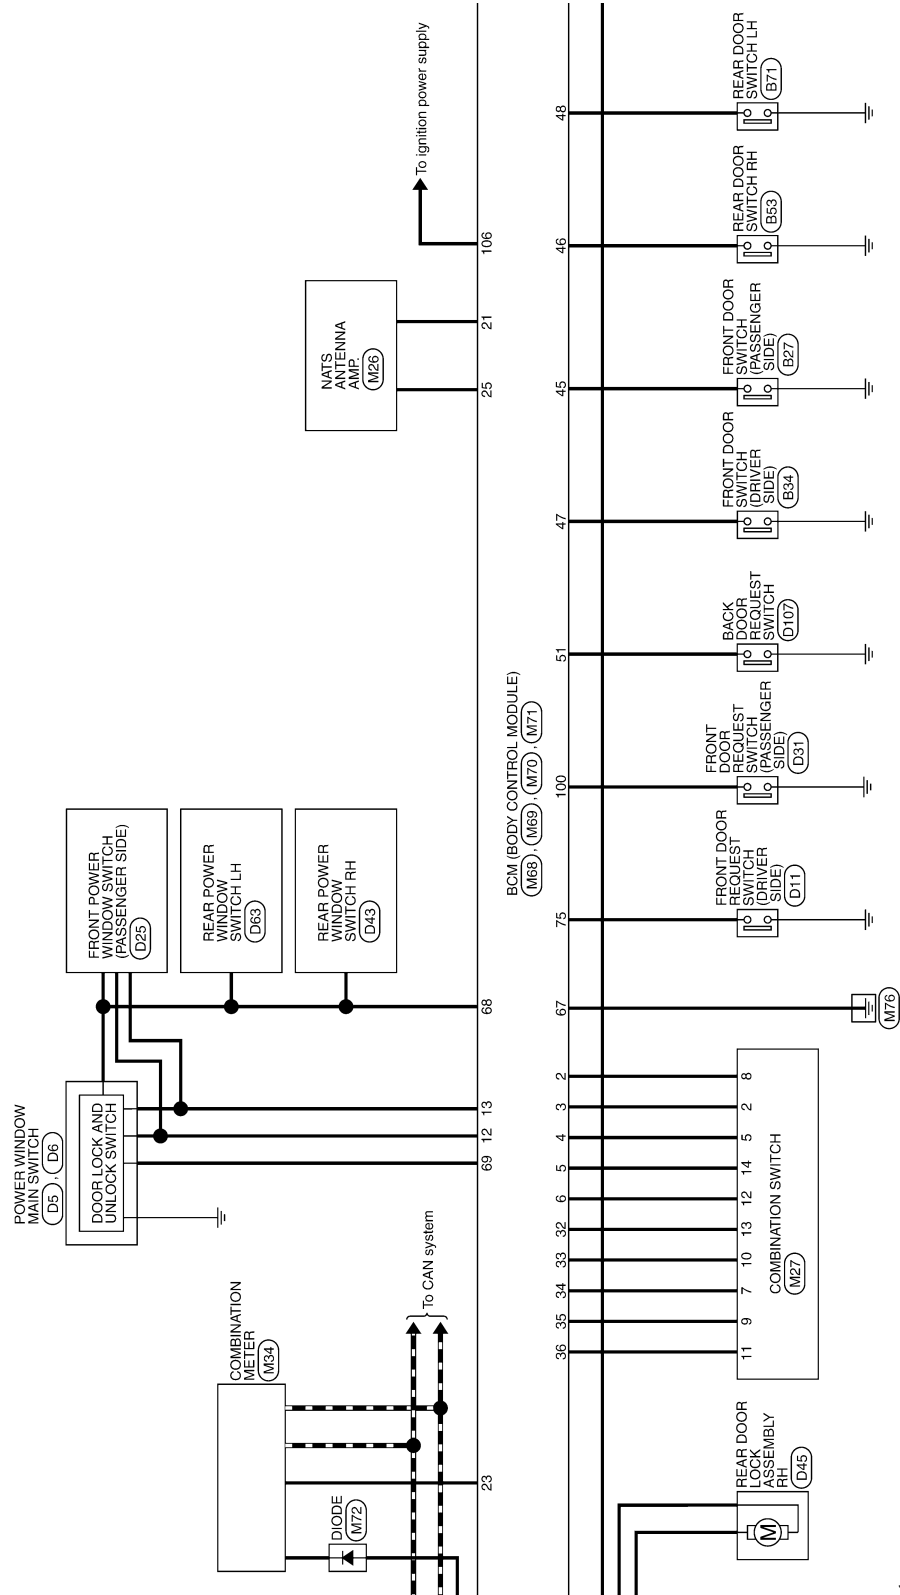


JRMWE7714GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

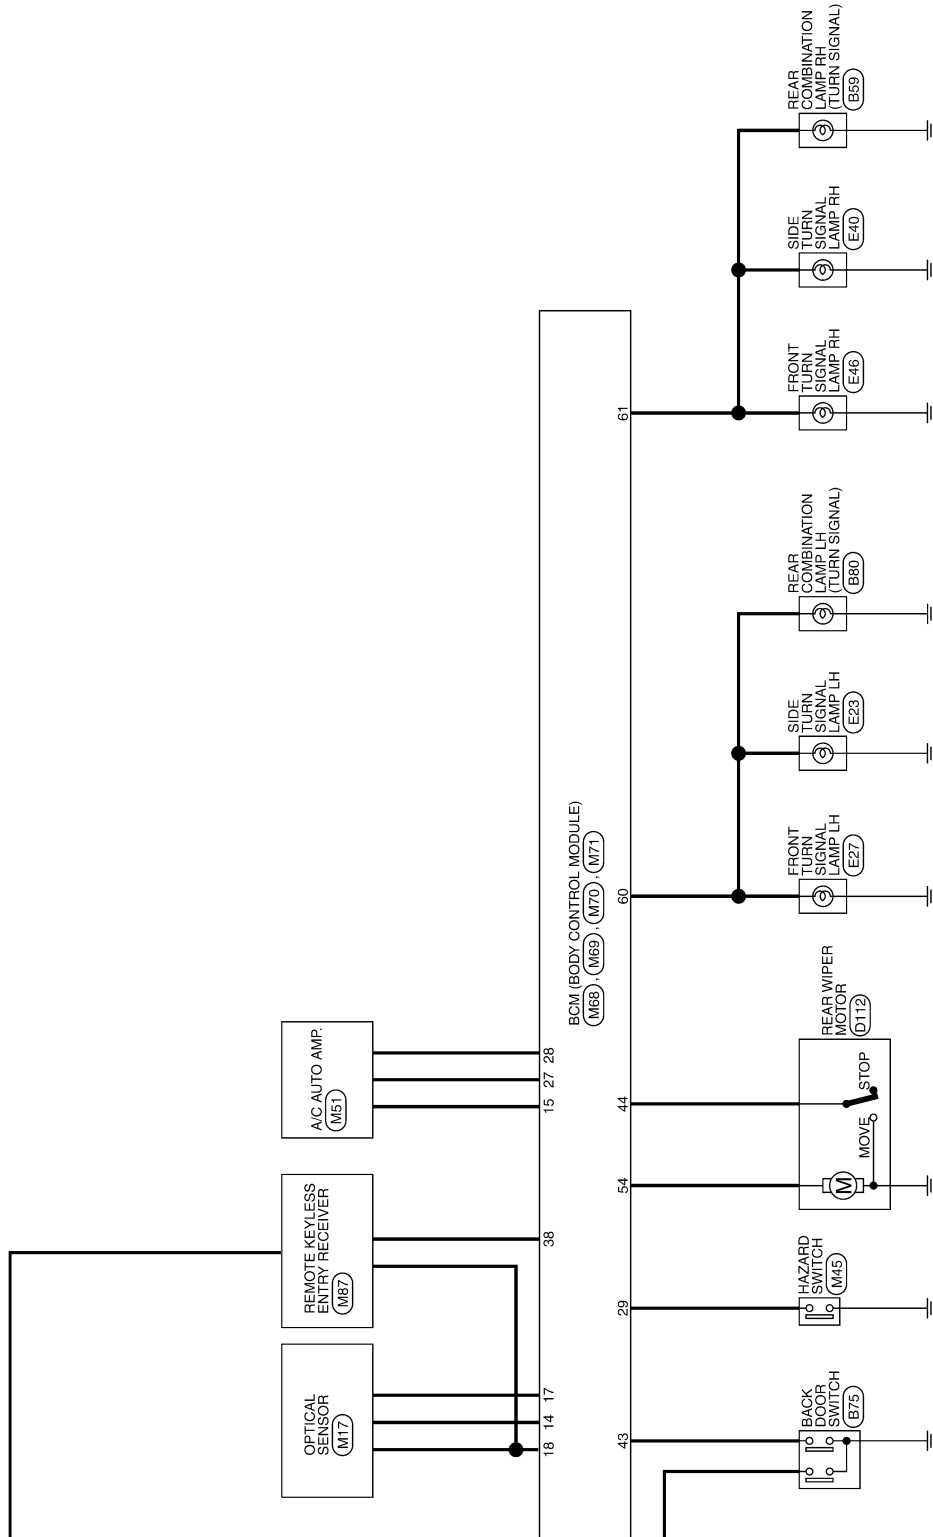

JRMWE7715GB



















A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)		
Connector No. B11	LUGGAGE ROOM LAMP	
Connector Name	CJ04FW	
Connector Type		
 		
Terminal No.	Wire	Signal Name [Specification]
1	Y	-
3	L	-
Connector No. B27 Connector Name FRONT DOOR SWITCH (PASSENGER SIDE) Connector Type TH04FW-NH  		
Terminal No.	Wire	Signal Name [Specification]
1	Y	-
3	L	-
Connector No. B53 Connector Name REAR DOOR SWITCH RH Connector Type TH04FW-NH  		
Terminal No.	Wire	Signal Name [Specification]
3	LG	-
Connector No. B59 Connector Name REAR COMBINATION LAMP RH Connector Type RS08FB-FR  		
Terminal No.	Wire	Signal Name [Specification]
3	LG	-
Connector No. B34 Connector Name FRONT DOOR SWITCH (DRIVER SIDE) Connector Type TH04FW-NH  		
Terminal No.	Wire	Signal Name [Specification]
1	Y	-
3	B	-
4	W	-
5	R	-
6	V	-
Connector No. B71 Connector Name REAR DOOR SWITCH LH Connector Type TH04FW-NH  		
Terminal No.	Wire	Signal Name [Specification]
3	W	-
Connector No. B75 Connector Name BACK DOOR SWITCH Connector Type TH04FW-NH  		
Terminal No.	Wire	Signal Name [Specification]
2	L	-
3	W	-
Connector No. B80 Connector Name REAR COMBINATION LAMP LH Connector Type RS08FB-FR  		
Terminal No.	Wire	Signal Name [Specification]
1	Y	-
3	B	-
4	P	-
5	R	-
6	GR	-
Connector No. B82 Connector Name INSIDE KEY ANTENNA (LUGGAGE ROOM) Connector Type RK02FL  		
Terminal No.	Wire	Signal Name [Specification]
1	R	-
2	G	-

JRMWE7818GB



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]



BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)

Connector No.	D5
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
1	R	-	-
2	LG	-	-
3	Y	-	-
4	Y	-	-
5	V	-	-
6	LG	-	-
7	BR	-	-
8	BR	-	-
9	V	-	-
10	L	-	-
11	GR	-	-
12	SB	-	-
13	W	-	-
14	G	-	-
15	G	-	-
16	W	-	-

Connector No.	D9
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type	ED0FCY-RS



Terminal No.	Color	Wire	Signal Name [Specification]
1	V	-	-
2	SB	-	-
3	G	-	-
4	B	-	-
5	L	-	-
6	W	-	-

Connector No.	D12
Connector Name	OUTSIDE KEY ANTENNA (DRIVER SIDE)
Connector Type	RK02MGY



Terminal No.	Color	Wire	Signal Name [Specification]
1	P	-	-
2	V	-	-

Connector No.	D25
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NS12FM-CS



Terminal No.	Color	Wire	Signal Name [Specification]
1	GR	-	-
2	BR	-	-
3	B	-	-
6	Y	-	-
7	R	-	-
8	L	-	-
11	SB	-	-
12	W	-	-

Connector No.	D31
Connector Name	FRONT DOOR REQUEST SWITCH (PASSENGER SIDE)
Connector Type	RK02FGY



Terminal No.	Color	Wire	Signal Name [Specification]
5	V	-	-
6	Y	-	-

Connector No.	D11
Connector Name	FRONT DOOR REQUEST SWITCH (DRIVER SIDE)
Connector Type	RK02FGY



Terminal No.	Color	Wire	Signal Name [Specification]
1	B	-	-
2	BR	-	-

Connector No.	D6
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS03FW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
17	B	-	-
18	GR	-	-
19	P	-	-

Connector No.	D28
Connector Name	FRONT DOOR LOCK ASSEMBLY (PASSENGER SIDE)
Connector Type	ED0FCY-RS

Terminal No.	Color	Wire	Signal Name [Specification]
1	B	-	-
2	LG	-	-

Connector No.	D31
Connector Name	FRONT DOOR REQUEST SWITCH (PASSENGER SIDE)
Connector Type	RK02FGY

Terminal No.	Color	Wire	Signal Name [Specification]
1	B	-	-
2	LG	-	-

























A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]























BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)		BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)		BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)		BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)	
Connector No.	D107	Connector No.	D106	Connector No.	D105	Connector No.	D104
Connector Name	BACK DOOR REQUEST SWITCH	Connector Name	BACK DOOR LOCK ASSEMBLY LH	Connector Name	REAR DOOR LOCK ASSEMBLY LH	Connector Name	REAR DOOR LOCK ASSEMBLY RH
Connector Type	RK02MGY	Connector Type	E06FGY-RS	Connector Type	E06FGY-RS	Connector Type	E06FGY-RS
							
							
Terminal No.	1	Terminal No.	1	Terminal No.	5	Terminal No.	1
Color	W	Color	V	Color	W	Color	P
Wire	-	Wire	G	Wire	P	Wire	V
Signal Name	[Specification]	Signal Name	[Specification]	Signal Name	[Specification]	Signal Name	[Specification]
							
							
Terminal No.	1	Terminal No.	2	Terminal No.	2	Terminal No.	2
Color	W	Color	GR	Color	BR	Color	BR
Wire	-	Wire	Y	Wire	O	Wire	O
Signal Name	[Specification]	Signal Name	[Specification]	Signal Name	[Specification]	Signal Name	[Specification]
							
							
Terminal No.	1	Terminal No.	1	Terminal No.	1	Terminal No.	1
Color	BR	Color	L	Color	L	Color	L
Wire	R	Wire	-	Wire	-	Wire	-
Signal Name	[Specification]	Signal Name	[Specification]	Signal Name	[Specification]	Signal Name	[Specification]

JRMWE7820GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)		BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)		BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)		BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)		BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)		BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)	
Connector No.	D112	Connector No.	E11	Connector No.	E13	Connector No.	E15	Connector No.	E17	Connector No.	E23
Connector Name	REAR WIPER MOTOR	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	SIDE TURN SIGNAL LAMP LH
Connector Type	CJ04FW-TV	Connector Type	M06FELC	Connector Type	TH12FM-NH	Connector Type	NS18FM-CS	Connector Type	TH10FB-NH	Connector Type	ISL02FW
											
											
Terminal No.	1, 3, 4	Terminal No.	9, 10, 13	Terminal No.	24, 25, 26, 27, 28, 30, 31, 33, 34	Terminal No.	47, 49, 50, 51, 52, 54, 55, 56, 57, 58	Terminal No.	64, 66, 68, 69	Terminal No.	1, 2
Wire	P, BR, LG	Wire	BTW, W	Wire	G, Y, P, L, SB, W, O, R	Wire	BR, W, GR, R, GR, P, GR, P, G, LG, R	Wire	Wires (Specification)	Wire	L, B/R
Signal Name	(Specification)	Signal Name	(Specification)	Signal Name	(Specification)	Signal Name	(Specification)	Signal Name	(Specification)	Signal Name	(Specification)
Connector No.	E10	Connector No.	E12	Connector No.	E16	Connector No.	E18	Connector No.	E20	Connector No.	E24
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	M06FW-LC	Connector Type	NS08FBR-CS	Connector Type	NS18FM-CS	Connector Type	NS18FM-CS	Connector Type	NS18FM-CS	Connector Type	ISL02FW
											
											
Terminal No.	3, 4, 5, 6, 7, 8	Terminal No.	18, 19, 21, 22	Terminal No.	47, 49, 50, 51, 52, 54, 55, 56, 57, 58	Terminal No.	47, 49, 50, 51, 52, 54, 55, 56, 57, 58	Terminal No.	64, 66, 68, 69	Terminal No.	1, 2
Wire	BR, P, LG, Y, SB, V	Wire	Y, BTW, W, V	Wire	W, GR, R, GR, P, GR, P, G, LG, R	Wire	BR, W, GR, R, GR, P, GR, P, G, LG, R	Wire	Wires (Specification)	Wire	L, B/R
Signal Name	(Specification)	Signal Name	(Specification)	Signal Name	(Specification)	Signal Name	(Specification)	Signal Name	(Specification)	Signal Name	(Specification)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]



BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)

Connector No.	E25
Connector Name	INTELLIGENT KEY WARNING BUZZER
Connector Type	RK09FBR



Terminal No.	1	2	3
Color	V	P	-
Wire	-	-	-
Signal Name [Specification]	-	-	-

Connector No.	E27
Connector Name	FRONT TURN SIGNAL LAMP LH
Connector Type	RS02FB



Terminal No.	1	2
Color	L	B/W
Wire	-	-
Signal Name [Specification]	-	-

Connector No.	E40
Connector Name	SIDE TURN SIGNAL LAMP RH
Connector Type	STL02FW



Terminal No.	1	2
Color	W	BY
Wire	-	-
Signal Name [Specification]	-	-

Connector No.	E46
Connector Name	FRONT TURN SIGNAL LAMP RH
Connector Type	RS02FB



Terminal No.	1	2
Color	W	BY
Wire	-	-
Signal Name [Specification]	-	-

Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	1	2	3	4
Color	V	W	O	G
Wire	-	-	-	-
Signal Name [Specification]	-	-	-	-

Connector No.	F21
Connector Name	TRANSMISSION RANGE SWITCH
Connector Type	RK08FG



Terminal No.	1	2	3	4	5	6	7	8
Color	R	W	R	GR	SB	W	Y	G
Wire	-	-	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-	-	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	24311-ED000

Terminal No.	1
Color	W
Wire	-
Signal Name [Specification]	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BDT6FW

Terminal No.	4	5	6	7	8	14	16
Color	B	L	GR/R	O	P	-	-
Wire	-	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-	-

JRMWE7822GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


[WITH INTELLIGENT KEY SYSTEM]

BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)

Connector No.	M26
Connector Name	NATS ANTENNA-AMP.
Connector Type	TH04FW-NH




Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH04FW-NH



Connector No.	M45
Connector Name	HAZARD SWITCH
Connector Type	TK04FW




Connector No.	M10
Connector Name	IGNITION RELAY
Connector Type	MS02FL-M2-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	L/W	-
3	W	-
4	BR	-

Connector No.	M51
Connector Name	A/C AUTO AMP.
Connector Type	TK16FSY




Terminal No.	Color Of Wire	Signal Name [Specification]
21	BR	WATER TEMPERATURE SIGNAL
22	PU/W	AMBIENT SENSOR SIGNAL
23	O	INTAKE SENSOR SIGNAL
24	G	IN-VEHICLE SENSOR SIGNAL
25	P	SUNLOAD SENSOR SIGNAL
26	SB	INTAKE DOOR MOTOR PBR FIB SIGNAL
27	R	REAR WINDOW DEFOGGER FIB SIGNAL
29	GR	MODE DRIVE SIGNAL 4
30	W	MODE DRIVE SIGNAL 3
31	Y	MODE DRIVE SIGNAL 2
32	V	MODE DRIVE SIGNAL 1
33	W/L	REAR WINDOW DEFOGGER ON SIGNAL
34	Y/G	A/C ON SIGNAL
35	GW	BLOWER PAN ON SIGNAL
36	GRK	POWER TRANSISTOR CONTROL SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CANH
2	P	CANL
3	V	VEHICLE SPEED SIGNAL (2-PULSE)
4	V	VEHICLE SPEED SIGNAL (8-PULSE) (IMMUNIZED)
4	VR	VEHICLE SPEED SIGNAL (8-PULSE) (IMMUNIZED)
6	BRY	FUEL LEVEL SENSOR SIGNAL
7	RG	AIR BAG SIGNAL
8	P	OVERDRIVE CONTROL SWITCH SIGNAL
9	O	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	SB	PARKING BRAKE SWITCH SIGNAL
11	GR	BRAKE FLUID LEVEL SWITCH SIGNAL
13	BR	ILLUMINATION CONTROL SIGNAL
15	L/Y	ACC POWER SUPPLY
18	RY	SECURITY SIGNAL
19	PU/W	AMBIENT SENSOR SIGNAL
20	RAW	AMBIENT SENSOR GROUND
21	B	GROUND
22	B	GROUND
23	B	GROUND
24	PU	FUEL LEVEL SENSOR GROUND
25	B	VDC GROUND
27	LG/R	BATTERY POWER SUPPLY
28	GR	IGNITION SIGNAL
29	BR	PASSENGER SEAT BELT WARNING SIGNAL
31	R	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
35	BR	ENGINE COOLANT TEMPERATURE SIGNAL
38	GR	ALTERNATOR SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BAT
2	P/L	CLK
3	B	GND (Internal Intelligent Key)
4	LG	DATA (With Intelligent Key)
4	B	GND (With Intelligent Key)
4	LG	DATA (Without Intelligent Key)

Connector No.	M27
Connector Name	COMBINATION SWITCH
Connector Type	TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	O/B	WASHER (RR)
2	GR	OUTPUT 4
3	RG	WASHER (FR)
4	W	IGN
5	L/Y	OUTPUT 3
6	B	GROUND
7	W	INPUT 3
8	BR/W	OUTPUT 5
9	R/L	INPUT 2
10	Y/L	INPUT 4
11	LG	INPUT 4
12	LR	OUTPUT 1
13	LG	INPUT 5
14	G	OUTPUT 2

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	W/B	-
5	L	-

Connector No.	M17
Connector Name	OPTICAL SENSOR
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/G	POWER
2	L/B	OUTPUT
3	V	GROUND

JRMWE7823GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]


BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	B	-
3	W	-
4	BR	-
5	LG	-
6	B	-
7	YR	-
8	GY	-


Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BRW	COMBI SW INPUT 4
2	GR	COMBI SW INPUT 5
3	LY	COMBI SW INPUT 3
4	G	COMBI SW INPUT 2
5	LJR	COMBI SW INPUT 1
6	W/B	KEY CYL UNLOCK SW
7	W/B	KEY CYL LOCK SW
8	B	STOP LAMP SW 1
9	R	CENTRAL DOOR LOCK SW
10	GR	CENTRAL DOOR LOCK SW
11	BR	CENTRAL DOOR UNLOCK SW
12	LG	CENTRAL DOOR UNLOCK SW
13	W/L	OPTICAL SENSOR
14	W/L	REAR WINDOW DEFOGGER SW


BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)

Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FH4G-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
17	R/G	OPTICAL SENSOR POWER SUPPLY
18	V	SENSOR GND
21	P/L	NATS ANTENNA AMP.
23	R/Y	SECURITY INDICATOR LAMP
25	LG	NATS ANTENNA AMP.
27	O	A/C SW
28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW
31	G/B	DR DOOR UNLOCK SENSOR
32	LG	COMBI SW OUTPUT 5
33	Y/L	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/O	COMBI SW OUTPUT 1
37	G/O	SHIFT P
38	GY	RECEIVER COMM
39	I	CANH
40	P	CANL


Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FH4G-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
43	W	BACK DOOR SW
44	LG	REAR WIPER STOP POSITION
45	SB	PASSENGER DOOR SW
46	GR/L	REAR RH DOOR SW
47	BRY	DRIVER DOOR SW
48	W/G	REAR LH DOOR SW
50	RAW	BK DR LOCK ACT RELAY CONT
51	W	BACK DOOR REQUEST SW
54	LG	REAR WIPER OUTPUT
55	G	REAR DOOR UNLOCK OUTPUT


BCM (BODY CONTROL MODULE)

Connector No.	M70
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FW-FH4G-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
56	L	INTERIOR ROOM LAMP POWER SUPPLY
57	Y	BAT (FUSE)
59	G	PASSENGER DOOR UNLOCK OUTPUT
60	W/B	TURN SIGNAL LH OUTPUT
61	W/B	TURN SIGNAL RH OUTPUT
63	BR	ROOM LAMP TIMER CONTROL
65	V	ALL DOOR LOCK OUTPUT
66	L/B	DRIVER DOOR UNLOCK OUTPUT
67	B	GROUND
68	L	POWER WINDOW POWER SUPPLY (IGN)
69	P	POWER WINDOW POWER SUPPLY (BAT)
70	Y	BAT (F/L)


Connector No.	M71
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	SB	A/C INDICATOR OUTPUT
75	SB	DRIVER DOOR REQUEST SW
76	L/O	PUSH SW
78	LG	DRIVER DOOR ANT+
79	V	DRIVER DOOR ANT-
80	BRY	PASSENGER DOOR ANT+
81	LY	PASSENGER DOOR ANT-
82	W/B	BACK DOOR ANT+


BCM (BODY CONTROL MODULE)

Connector No.	M72
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FW-FH4G-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
83	B/W	BACK DOOR ANT-
84	Y/G	ROOM ANT+
85	Y/L	ROOM ANT-
86	P	LUGGAGE ROOM ANT+
87	L	LUGGAGE ROOM ANT-
90	W/L	PUSH-BUTTON IGNITION SW ILL POWER
91	Y	ACC/IGN IND
92	BR/R	PUSH-BUTTON IGNITION SW ILL GND
93	GR/W	I-KEY WARN BUZZER
96	BR/W	ACC RELAY CONT
97	L/R	STARTER RELAY CONT
98	BR	IGN RELAY (IPDM E/R) CONT
99	W/R	IGN RELAY CONT
100	G	PASSENGER DOOR REQUEST SW
102	G	SHIFT N/P
103	GY	FR DEFROSTER SW
104	Y/R	C/VT SHIFT SELECTOR POWER SUPPLY
105	B/O	STOP LAMP SW 2
106	Y/B	BLOWER FAN MOTOR RELAY CONT

Connector No.	M72
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FW-FH4G-SA




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR/R	-
2	BR/R	-

JRMWE7824GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

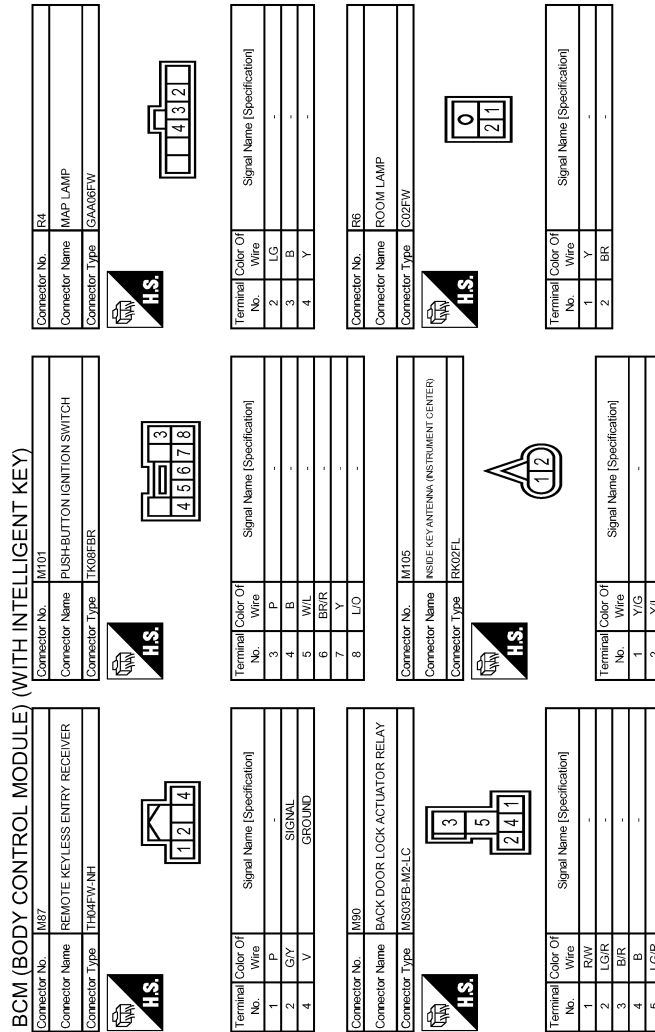

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JRMWE7825GB

INFOID:0000000010246078

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2198: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent • Starter relay control signal • Starter relay status signal (CAN)
B260F: ENG STATE SIG LOST	Inhibit engine cranking	When any of the following conditions are fulfilled • Power position changes to ACC • Receives engine status signal (CAN)
B26F1: IGN RELAY OFF	Inhibit engine cranking	When the following conditions are fulfilled • Ignition switch ON signal (CAN: Transmitted from BCM): ON • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): ON
B26F2: IGN RELAY ON	Inhibit engine cranking	When the following conditions are fulfilled • Ignition switch ON signal (CAN: Transmitted from BCM): OFF • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): OFF
B26F3: START CONT RLY ON	Inhibit engine cranking	When the following conditions are fulfilled • Starter control relay signal (CAN: Transmitted from BCM): OFF • Starter control relay signal (CAN: Transmitted from IPDM E/R): OFF
B26F4: START CONT RLY OFF	Inhibit engine cranking	When the following conditions are fulfilled • Starter control relay signal (CAN: Transmitted from BCM): ON • Starter control relay signal (CAN: Transmitted from IPDM E/R): ON
B26F7: BCM	Inhibit engine cranking by Intelligent Key system	When room antenna and luggage room antenna functions normally

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal. When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. More than 1 minute is passed after the rear wiper stop.
2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

FAIL-SAFE CONTROL OF COMBINATION SWITCH READING FUNCTION CAUSED BY LOW POWER SUPPLY VOLTAGE

If voltage of battery power supply lower, BCM maintains combination switch reading to the status when input voltage is less than approximately 9 V.

NOTE:

When voltage of battery power supply is approximately 9 V or more, combination switch reading function returns to normal operation.

DTC Inspection Priority Chart

INFOID:0000000010246079

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	• U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Priority	DTC	
3	<ul style="list-style-type: none"> • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI-SCANNING • B2198: NATS ANTENNA AMP 	A
4	<ul style="list-style-type: none"> • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP/CLUTCH SW • B2605: PNP/CLUTCH SW • B2608: STARTER RELAY • B260F: ENG STATE SIG LOST • B2614: BCM • B2615: BCM • B2616: BCM • B2618: BCM • B261A: PUSH-BTN IGN SW • B26F1: IGN RELAY OFF • B26F2: IGN RELAY ON • B26F3: START CONT RLY ON • B26F4: START CONT RLY OFF • B26F6: BCM • B26F7: BCM • B26F8: BCM • B26FC: KEY REGISTRATION • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED 	B C D E F G H
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL 	I J SEC L
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA 	M
7	<ul style="list-style-type: none"> • B2626: OUTSIDE ANTENNA • B2627: OUTSIDE ANTENNA • B2628: OUTSIDE ANTENNA 	N

DTC Index

INFOID:000000010246080

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [SEC-25. "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)".](#)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM	—	—	—	—	BCS-40
U1010: CONTROL UNIT (CAN)	—	—	—	—	BCS-41
U0415: VEHICLE SPEED	—	—	×	—	BCS-42
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-38
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-40
B2195: ANTI-SCANNING	×	—	—	—	SEC-41
B2198: NATS ANTENNA AMP	×	—	—	—	SEC-42
B2555: STOP LAMP	—	×	×	—	SEC-46
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-48
B2557: VEHICLE SPEED	—	×	×	—	SEC-50
B2562: LOW VOLTAGE	—	×	—	—	BCS-43
B2601: SHIFT POSITION	—	×	×	—	SEC-51
B2602: SHIFT POSITION	—	×	×	—	SEC-54
B2603: SHIFT POSI STATUS	—	×	×	—	SEC-57
B2604: PNP/CLUTCH SW	—	×	×	—	SEC-62
B2605: PNP/CLUTCH SW	—	×	×	—	SEC-65
B2608: STARTER RELAY	×	×	×	—	SEC-67
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-69
B2614: BCM	—	×	×	—	PCS-77
B2615: BCM	—	×	×	—	PCS-80
B2616: BCM	—	×	×	—	PCS-83
B2618: BCM	—	×	×	—	PCS-86
B261A: PUSH-BTN IGN SW	—	×	×	—	PCS-87
B2621: INSIDE ANTENNA	—	×	—	—	DLK-44
B2622: INSIDE ANTENNA	—	×	—	—	DLK-46
B2626: OUTSIDE ANTENNA	—	×	—	—	DLK-50
B2627: OUTSIDE ANTENNA	—	×	—	—	DLK-48
B2628: OUTSIDE ANTENNA	—	×	—	—	DLK-52
B26F1: IGN RELAY OFF	×	×	×	—	PCS-89
B26F2: IGN RELAY ON	×	×	×	—	PCS-91
B26F3: START CONT RLY ON	×	×	×	—	SEC-70
B26F4: START CONT RLY OFF	×	×	×	—	SEC-71
B26F6: BCM	—	×	×	—	PCS-93
B26F7: BCM	×	×	×	—	SEC-73
B26F8: BCM	—	×	×	—	SEC-74
B26FC: KEY REGISTRATION	—	×	×	—	SEC-75

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1704: LOW PRESSURE FL	—	—	—	×	WT-26
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	WT-28
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-31
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-33

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000010246081

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1/2/3/4
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND, HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	<ul style="list-style-type: none"> Selector lever in any position other than P or N (CVT models) Release clutch pedal (M/T models) 	Off
		<ul style="list-style-type: none"> Selector lever in P or N position (CVT models) Depress clutch pedal (M/T models) 	On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
< ECU DIAGNOSIS INFORMATION > [WITH INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
ST RLY CONT	Ignition switch ON	Off
	At engine cranking	On
IHBT RLY -REQ	Ignition switch ON	Off
	At engine cranking	On
ST/INHI RLY	Ignition switch ON	Off
	At engine cranking	INHI ON → ST ON
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN
DETENT SW	Ignition switch ON <ul style="list-style-type: none"> • Pull the selector lever with selector lever in P position • Selector lever in any position other than P 	Off
	Release the selector lever with selector lever in P position NOTE: Fixed On for M/T models	On
S/L RLY -REQ	NOTE: The item is indicated, but not monitored.	Off
S/L STATE	NOTE: The item is indicated, but not monitored.	UNLOCK
DTRL REQ	NOTE: The item is indicated, but not monitored.	Off
OIL P SW	Ignition switch OFF, ACC or engine running	Open
	Ignition switch ON	Close
HOOD SW	NOTE: The item is indicated, but not monitored.	Off
THFT HRN REQ	Not operation	Off
	<ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	On
HORN CHIRP	Not operating	Off
	Door locking with Intelligent Key (horn chirp mode)	On

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


SEC

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

TERMINAL LAYOUT

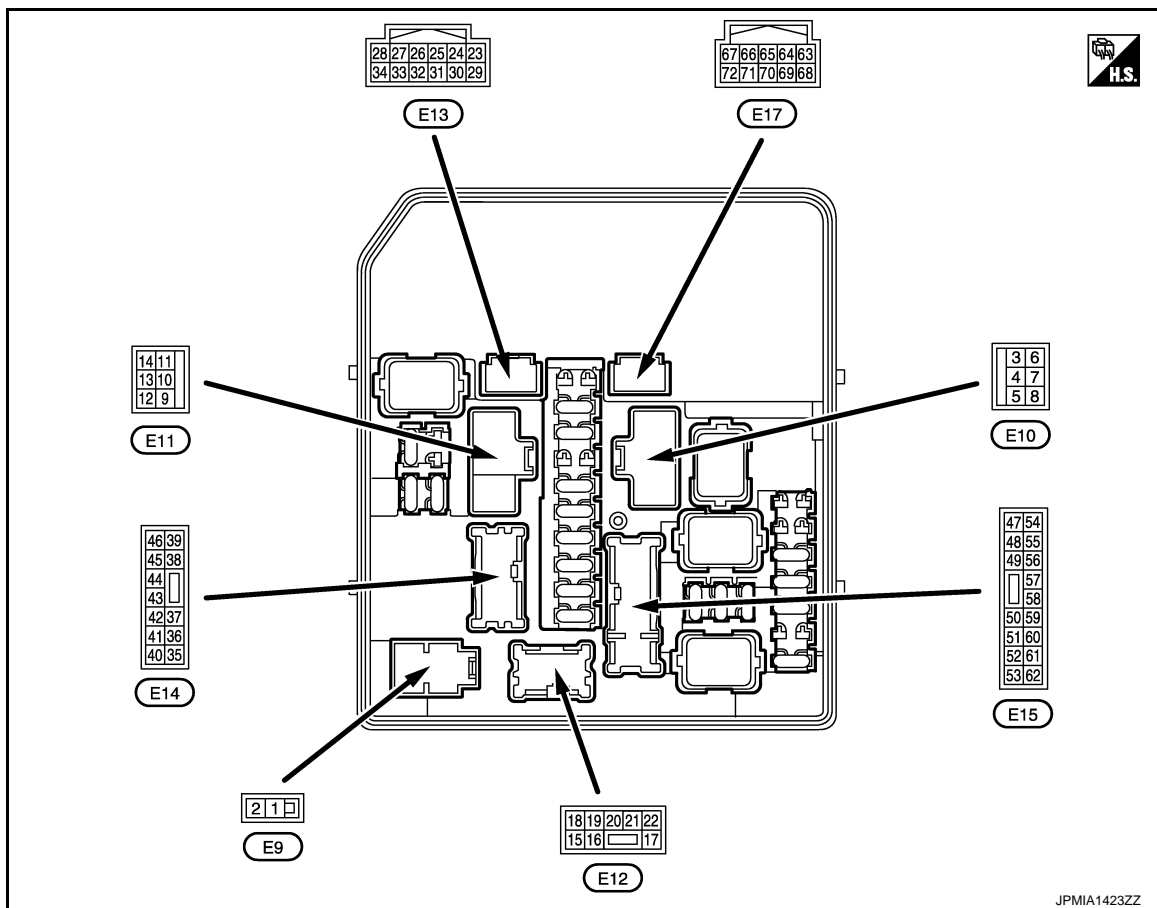



PHYSICAL VALUES

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (G)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
3 (BR)	Ground	Starter motor	Output	Ignition switch ON	0 V
				At engine cranking	Battery voltage
4 (P)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
5 (LG)	Ground	Cooling fan relay-1 power supply	Output	Cooling fan OFF	0 V
				Cooling fan operated	Battery voltage
7 (Y)	Ground	Cooling fan relay-2 power supply	Output	Cooling fan OFF	0 V
				Cooling fan LO operated	9.0 V
				Cooling fan HI operated	Battery voltage
8 (V)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
9 (B/W)	Ground	Ground	—	Ignition switch ON	0 V
10 (L)	Ground	Cooling fan motor ground	Output	Cooling fan OFF	0 V
				Cooling fan LO operated	5.0 V
				Cooling fan HI operated	0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

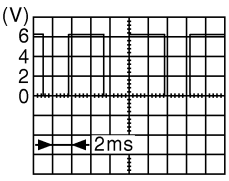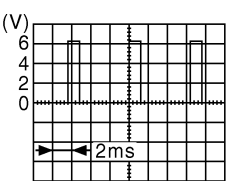Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
13 (W)	Ground	Rear window defogger	Output	Ignition switch OFF	0 V	A
				Ignition switch ON	Battery voltage	B
19 (B/W)	Ground	Ground	—	Ignition switch ON	0 V	C
21 (W)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND OFF	0 V	D
				Lighting switch 2ND ON	Battery voltage	E
22 (V)	Ground	Front fog lamp (LH)	Output	Lighting switch 2ND OFF	0 V	E
				Lighting switch 2ND ON	Battery voltage	F
24 (G)	Ground	Oil pressure switch	Input	Ignition switch ON Engine stopped	0 V	F
				Ignition switch ON Engine running	Battery voltage	G
25 (Y)	Ground	Front wiper auto stop	Input	Ignition switch ON Front wiper stop position	0 V	G
				Ignition switch ON Any position other than front wiper stop position	Battery voltage	H
26 (P)	Ground	CAN-L	Input/ Output	—	—	H
27 (L)	Ground	CAN-H	Input/ Output	—	—	I
30 (SB)	Ground	Starter relay control	Output	At engine cranking	0 V	I
				Ignition switch ON	Battery voltage	J
31 (W)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 	0 - 1.5 V	J
				Approximately 1 second or more after turning the ignition switch ON	Battery voltage	SEC
33 (O)	Ground	Power generation command signal	Output	Ignition switch ON	Battery voltage	L
				40 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"  JPMIA0002GB 3.8 V	M	
33 (O)	Ground	Power generation command signal	Output	80 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"  JPMIA0003GB 1.4 V	N	
				The horn is deactivated The horn is activated	Battery voltage 0 V	O
34 (R)	Ground	Horn relay control	Output	The horn is deactivated The horn is activated	Battery voltage 0 V	P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
36 (O)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
37 (V)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
38 (G)	Ground	Tail lamp (RH) & illuminations	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
39 (V)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch HI	Battery voltage
40 (R)	Ground	ECM relay control	Output		Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage
					<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	0 - 1.5 V
41 (SB)	Ground	Tail lamp (LH) & license plate lamps	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
43 (G)	Ground	ECM relay power supply	Output		Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
					<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
44 (P)	Ground	ECM relay power supply	Output		Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
					<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
45 (Y)	Ground	TCM power supply	Output		Ignition switch OFF	Battery voltage
46 (O)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch LO	Battery voltage
47 (BR)	Ground	Transmission range switch ^{*1}	Input		Select lever in any position other than P or N (Ignition switch ON)	0 V
					Select lever P or N (Ignition switch ON)	Battery voltage
		Clutch interlock switch ^{*2}			Release the clutch pedal	0 V
					Depress the clutch pedal	Battery voltage
49 (W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS 	Battery voltage
50 (GR)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS 	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
51 (R)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
52 (P)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
54 (GR)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
					• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)	Battery voltage
55 (P)	Ground	Fuel pump power supply	Output	Approximately 1 second or more than after turning the ignition switch ON		0 V
					• Approximately 1 second after turning the ignition switch ON • Engine running	Battery voltage
56 (SB)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage
57 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF	0 - 1.0 V ↓ Battery voltage ↓ 0 V	
				Ignition switch ON	0 - 1.0 V	
58 (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
59 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
60 (V)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
61 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
62 (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
64*1 (R)	Ground	CVT shift selector (Detention switch)	Input	Ignition switch ON	Select lever P	0 V
					Select lever in any position other than P	Battery voltage
66 (L)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch	0 V	
				Release the push-button ignition switch	Battery voltage	
69 (O)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC	Battery voltage	
				Ignition switch ON	0 V	

*1: CVT models

*2: M/T models

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Wiring Diagram — IPDM E/R —

INFOID:000000010246082


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (WITH INTELLIGENT KEY)

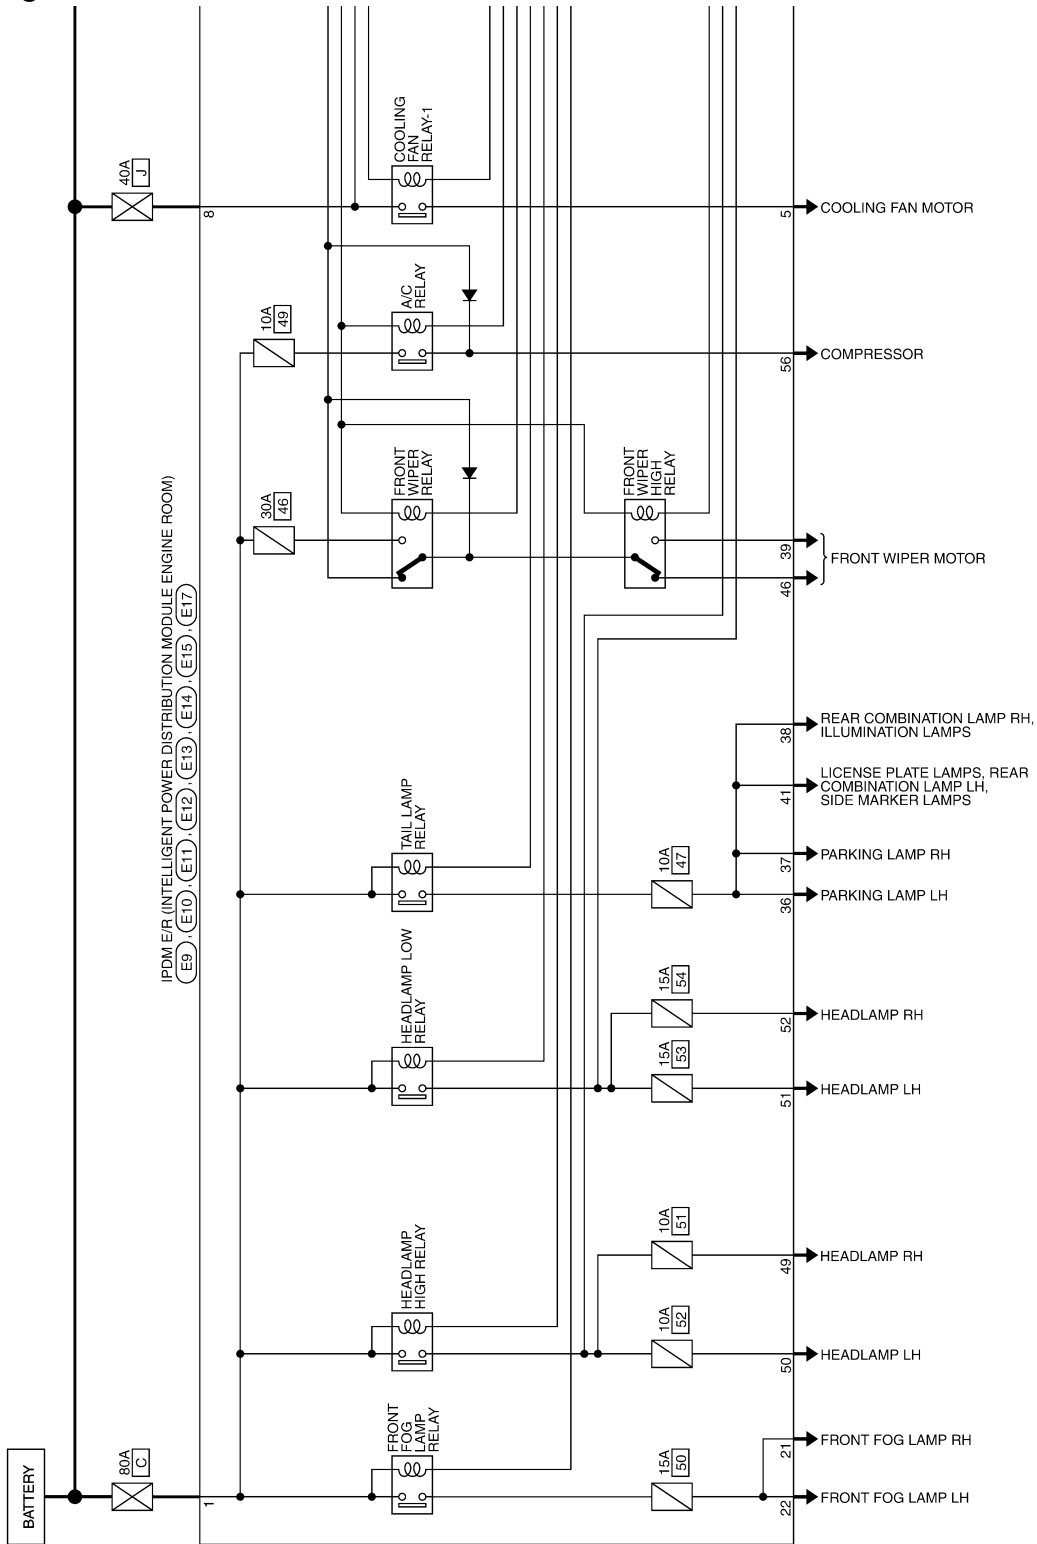

2013/09/19

JRMWE720GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) < ECU DIAGNOSIS INFORMATION > [WITH INTELLIGENT KEY SYSTEM]

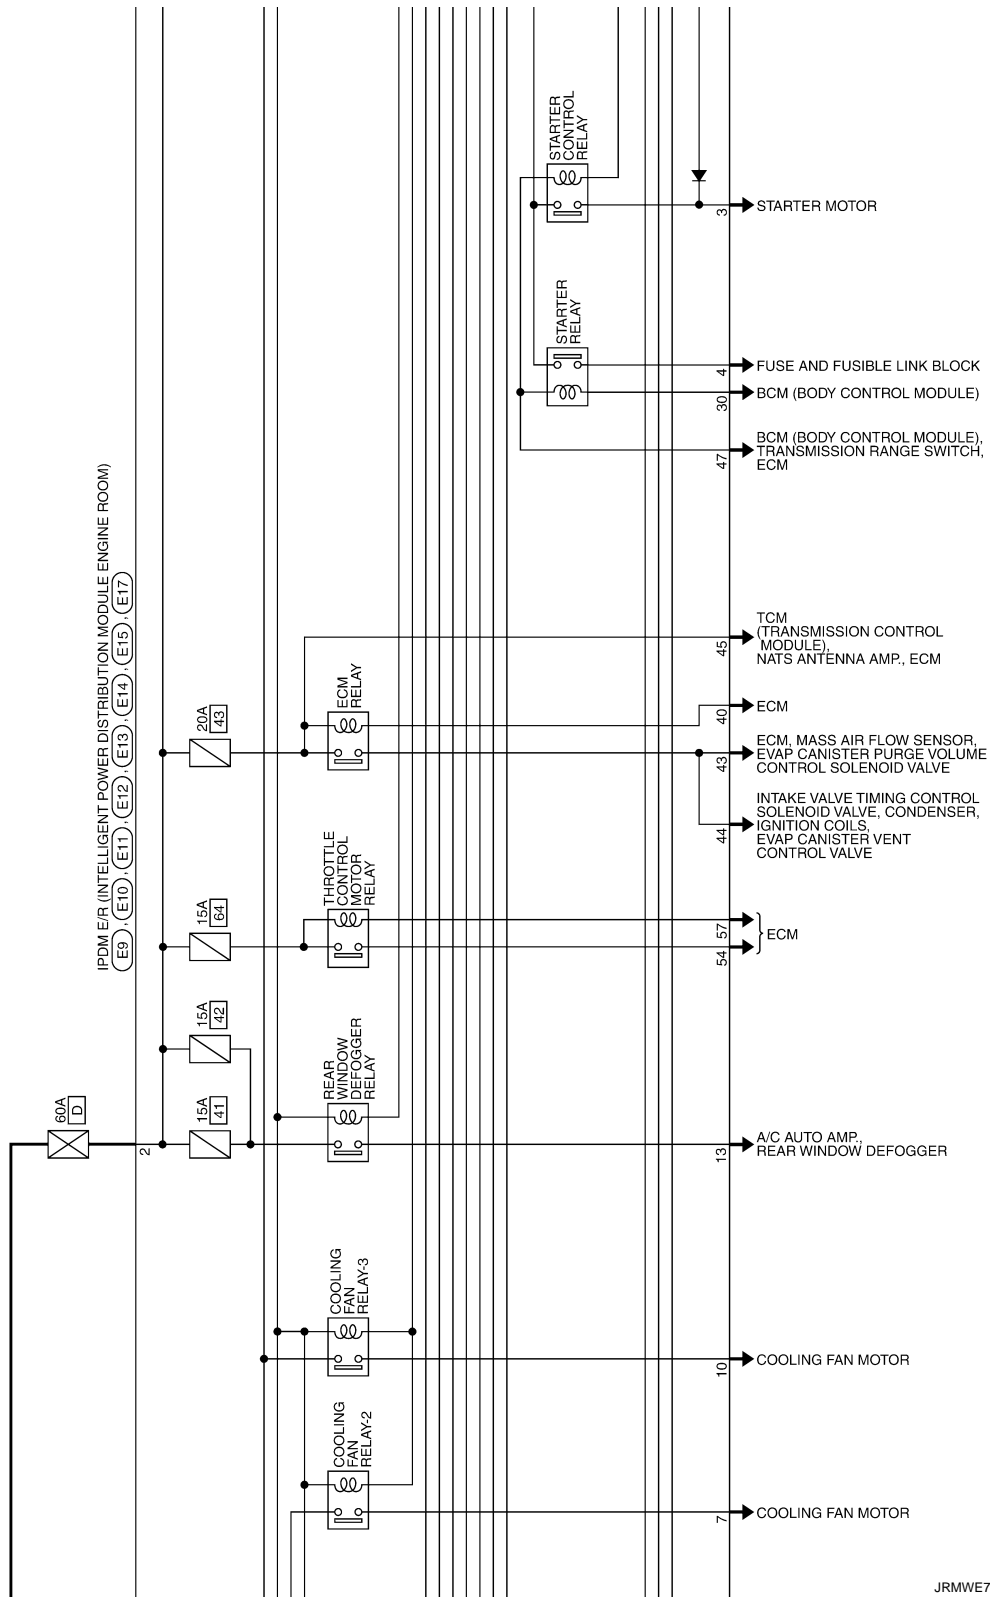


JRMWE7721GB

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 SEC
 L
 M
 N
 O
 P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) [WITH INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS INFORMATION >

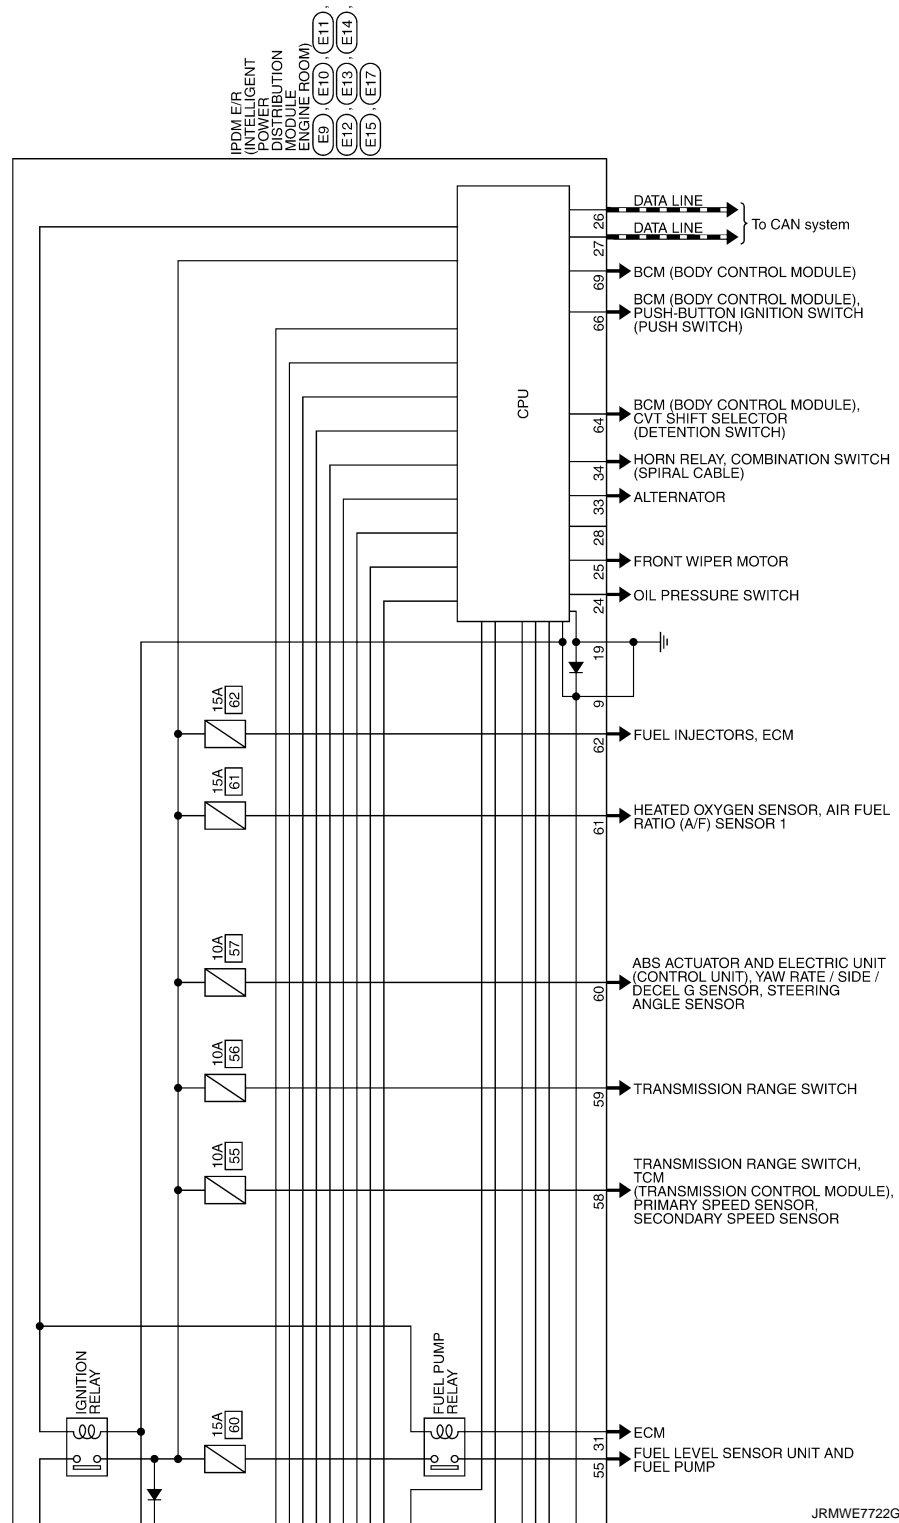

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) < ECU DIAGNOSIS INFORMATION > [WITH INTELLIGENT KEY SYSTEM]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (WITH INTELLIGENT KEY)																																														
Connector No. E9 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) Connector Name L02FB-MC Connector Type M06FW-LC	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Terminal No.</th> <th>Color Of Wire</th> <th>Signal Name [Specification]</th> </tr> </thead> <tbody> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </tbody> </table>	Terminal No.	Color Of Wire	Signal Name [Specification]	1	R	-	2	G	-																																				
Terminal No.	Color Of Wire	Signal Name [Specification]																																												
1	R	-																																												
2	G	-																																												
Connector No. E10 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) Connector Name M06FW-LC Connector Type M06FW-LC	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Terminal No.</th> <th>Color Of Wire</th> <th>Signal Name [Specification]</th> </tr> </thead> <tbody> <tr><td>3</td><td>BR</td><td>-</td></tr> <tr><td>4</td><td>P</td><td>-</td></tr> <tr><td>5</td><td>LG</td><td>-</td></tr> <tr><td>6</td><td>SB</td><td>-</td></tr> <tr><td>7</td><td>Y</td><td>-</td></tr> <tr><td>8</td><td>V</td><td>-</td></tr> </tbody> </table>	Terminal No.	Color Of Wire	Signal Name [Specification]	3	BR	-	4	P	-	5	LG	-	6	SB	-	7	Y	-	8	V	-																								
Terminal No.	Color Of Wire	Signal Name [Specification]																																												
3	BR	-																																												
4	P	-																																												
5	LG	-																																												
6	SB	-																																												
7	Y	-																																												
8	V	-																																												
Connector No. E11 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) Connector Name M06FELC Connector Type M06FELC	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Terminal No.</th> <th>Color Of Wire</th> <th>Signal Name [Specification]</th> </tr> </thead> <tbody> <tr><td>9</td><td>BTW</td><td>-</td></tr> <tr><td>10</td><td>W</td><td>-</td></tr> <tr><td>13</td><td>W</td><td>-</td></tr> </tbody> </table>	Terminal No.	Color Of Wire	Signal Name [Specification]	9	BTW	-	10	W	-	13	W	-																																	
Terminal No.	Color Of Wire	Signal Name [Specification]																																												
9	BTW	-																																												
10	W	-																																												
13	W	-																																												
Connector No. E12 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) Connector Name NS08FBR-CS Connector Type NS08FBR-CS	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Terminal No.</th> <th>Color Of Wire</th> <th>Signal Name [Specification]</th> </tr> </thead> <tbody> <tr><td>22</td><td>2</td><td>19</td></tr> <tr><td>23</td><td>1</td><td>19</td></tr> </tbody> </table>	Terminal No.	Color Of Wire	Signal Name [Specification]	22	2	19	23	1	19																																				
Terminal No.	Color Of Wire	Signal Name [Specification]																																												
22	2	19																																												
23	1	19																																												
Connector No. E13 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) Connector Name TH12FM-NH Connector Type TH12FM-NH	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Terminal No.</th> <th>Color Of Wire</th> <th>Signal Name [Specification]</th> </tr> </thead> <tbody> <tr><td>24</td><td>G</td><td>-</td></tr> <tr><td>25</td><td>Y</td><td>-</td></tr> <tr><td>26</td><td>P</td><td>-</td></tr> <tr><td>27</td><td>L</td><td>-</td></tr> <tr><td>28</td><td>P</td><td>-</td></tr> <tr><td>30</td><td>SB</td><td>-</td></tr> <tr><td>31</td><td>W</td><td>-</td></tr> <tr><td>33</td><td>O</td><td>-</td></tr> <tr><td>34</td><td>R</td><td>-</td></tr> </tbody> </table>	Terminal No.	Color Of Wire	Signal Name [Specification]	24	G	-	25	Y	-	26	P	-	27	L	-	28	P	-	30	SB	-	31	W	-	33	O	-	34	R	-															
Terminal No.	Color Of Wire	Signal Name [Specification]																																												
24	G	-																																												
25	Y	-																																												
26	P	-																																												
27	L	-																																												
28	P	-																																												
30	SB	-																																												
31	W	-																																												
33	O	-																																												
34	R	-																																												
Connector No. E14 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) Connector Name NS12FBR-CS Connector Type NS12FBR-CS	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Terminal No.</th> <th>Color Of Wire</th> <th>Signal Name [Specification]</th> </tr> </thead> <tbody> <tr><td>38</td><td>38</td><td>37</td></tr> <tr><td>39</td><td>38</td><td>36</td></tr> <tr><td>46</td><td>45</td><td>44</td></tr> <tr><td>47</td><td>45</td><td>43</td></tr> <tr><td>48</td><td>45</td><td>43</td></tr> <tr><td>49</td><td>45</td><td>43</td></tr> </tbody> </table>	Terminal No.	Color Of Wire	Signal Name [Specification]	38	38	37	39	38	36	46	45	44	47	45	43	48	45	43	49	45	43																								
Terminal No.	Color Of Wire	Signal Name [Specification]																																												
38	38	37																																												
39	38	36																																												
46	45	44																																												
47	45	43																																												
48	45	43																																												
49	45	43																																												
Connector No. E15 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) Connector Name NS16FM-CS Connector Type NS16FM-CS	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Terminal No.</th> <th>Color Of Wire</th> <th>Signal Name [Specification]</th> </tr> </thead> <tbody> <tr><td>47</td><td>BR</td><td>-</td></tr> <tr><td>49</td><td>W</td><td>-</td></tr> <tr><td>50</td><td>GR</td><td>-</td></tr> <tr><td>51</td><td>R</td><td>-</td></tr> <tr><td>52</td><td>P</td><td>-</td></tr> <tr><td>54</td><td>GR</td><td>-</td></tr> <tr><td>55</td><td>P</td><td>-</td></tr> <tr><td>56</td><td>SB</td><td>-</td></tr> <tr><td>57</td><td>G</td><td>-</td></tr> <tr><td>58</td><td>LG</td><td>- [With M/T]</td></tr> <tr><td>59</td><td>R</td><td>- [With CVT]</td></tr> <tr><td>60</td><td>V</td><td>-</td></tr> <tr><td>61</td><td>W</td><td>-</td></tr> <tr><td>62</td><td>L</td><td>-</td></tr> </tbody> </table>	Terminal No.	Color Of Wire	Signal Name [Specification]	47	BR	-	49	W	-	50	GR	-	51	R	-	52	P	-	54	GR	-	55	P	-	56	SB	-	57	G	-	58	LG	- [With M/T]	59	R	- [With CVT]	60	V	-	61	W	-	62	L	-
Terminal No.	Color Of Wire	Signal Name [Specification]																																												
47	BR	-																																												
49	W	-																																												
50	GR	-																																												
51	R	-																																												
52	P	-																																												
54	GR	-																																												
55	P	-																																												
56	SB	-																																												
57	G	-																																												
58	LG	- [With M/T]																																												
59	R	- [With CVT]																																												
60	V	-																																												
61	W	-																																												
62	L	-																																												
Connector No. E16 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) Connector Name TH10FB-NH Connector Type TH10FB-NH	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Terminal No.</th> <th>Color Of Wire</th> <th>Signal Name [Specification]</th> </tr> </thead> <tbody> <tr><td>64</td><td>R</td><td>-</td></tr> <tr><td>66</td><td>L</td><td>-</td></tr> <tr><td>69</td><td>O</td><td>-</td></tr> </tbody> </table>	Terminal No.	Color Of Wire	Signal Name [Specification]	64	R	-	66	L	-	69	O	-																																	
Terminal No.	Color Of Wire	Signal Name [Specification]																																												
64	R	-																																												
66	L	-																																												
69	O	-																																												
Connector No. E17 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) Connector Name TH10FB-NH Connector Type TH10FB-NH	<table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th>Terminal No.</th> <th>Color Of Wire</th> <th>Signal Name [Specification]</th> </tr> </thead> <tbody> <tr><td>64</td><td>R</td><td>-</td></tr> <tr><td>66</td><td>L</td><td>-</td></tr> <tr><td>69</td><td>O</td><td>-</td></tr> </tbody> </table>	Terminal No.	Color Of Wire	Signal Name [Specification]	64	R	-	66	L	-	69	O	-																																	
Terminal No.	Color Of Wire	Signal Name [Specification]																																												
64	R	-																																												
66	L	-																																												
69	O	-																																												

Fail-Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

JRMWE7835GB

INFOID:000000010246083

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn ON when the ignition switch is turned ON (Cooling fan HI operation) The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn OFF when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF
<ul style="list-style-type: none"> Parking lamps Side marker lamps License plate lamps Illuminations Tail lamps 	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> Detects DTC "B2098: IGN RELAY ON" Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITH INTELLIGENT KEY SYSTEM]

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000010246084

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now.
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-15
B2098: IGN RELAY ON CIRC	×	PCS-16
B2099: IGN RELAY OFF CIRC	—	PCS-18
B210B: STR CONT RLY ON CIRC	—	SEC-76
B210C: STR CONT RLY OFF CIRC	—	SEC-77
B210D: STARTER RLY ON CIRC	—	SEC-78
B210E: STARTER RLY OFF CIRC	—	SEC-79
B210F: INTRLCK/PNP SW ON	—	SEC-81
B2110: INTRLCK/PNP SW OFF	—	SEC-83

SEC

SYMPTOM DIAGNOSIS

ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE

Description

INFOID:000000009950220

Engine does not start when push-button ignition switch is pressed while carrying Intelligent Key.

NOTE:

- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.
- The engine start function, door lock function, power distribution system, and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- Intelligent Key is not inserted in key slot.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:000000009950221

1.PERFORM WORK SUPPORT

Perform “INSIDE ANT DIAGNOSIS” on Work Support in “INTELLIGENT KEY”.

Refer to [DLK-40, "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

>> GO TO 2.

2.PERFORM SELF-DIAGNOSIS RESULT

Perform Self-Diagnosis Result in “BCM”, and check whether or not DTC of inside key antenna is detected.

Is DTC detected?

- YES >> Refer to [DLK-44, "DTC Logic"](#) (instrument center) or [DLK-46, "DTC Logic"](#) (luggage room).
NO >> GO TO 3.

3.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-94, "Component Function Check"](#).

Is the operation normal?

- YES >> GO TO 4.
NO >> Repair or replace malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

- YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).
NO >> GO TO 1.

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

Description

INFOID:000000009950222

Security indicator lamp does not blink when ignition switch is in a position other than ON

NOTE:

- Before performing the diagnosis, check "Work Flow". Refer to [SEC-6, "Work Flow"](#).
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

Conditions of Vehicle (Operating Conditions)

Ignition switch is not in the ON position.

Diagnosis Procedure

INFOID:000000009950223

1. CHECK SECURITY INDICATOR LAMP

Check security indicator lamp.

Refer to [SEC-88, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM CANNOT BE SET

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM CANNOT BE SET INTELLIGENT KEY

INTELLIGENT KEY : Description

INFOID:000000009950224

Armed phase is not activated when door is locked using Intelligent Key.

NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of "SECURITY ALARM SET" in "WORK SUPPORT" in "THEFT ALM" using CONSULT.

INTELLIGENT KEY : Diagnosis Procedure

INFOID:000000009950225

1.CHECK INTELLIGENT KEY SYSTEM (REMOTE KEYLESS ENTRY FUNCTION)

Lock/unlock door with Intelligent Key.

Refer to [DLK-25. "REMOTE KEYLESS ENTRY FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (remote keyless entry function). Refer to [DLK-153. "Diagnosis Procedure"](#).

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40. "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR REQUEST SWITCH

DOOR REQUEST SWITCH : Description

INFOID:000000009950226

Armed phase is not activated when door is locked using door request switch.

NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of "SECURITY ALARM SET" in "WORK SUPPORT" in "THEFT ALM" using CONSULT.

DOOR REQUEST SWITCH : Diagnosis Procedure

INFOID:000000009950227

1.CHECK INTELLIGENT KEY SYSTEM (DOOR LOCK FUNCTION)

Lock/unlock door with door request switch.

Refer to [DLK-20. "DOOR LOCK FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (door lock function). Refer to [DLK-150. "ALL DOOR : Diagnosis Procedure"](#).

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40. "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR KEY CYLINDER

VEHICLE SECURITY SYSTEM CANNOT BE SET

[WITH INTELLIGENT KEY SYSTEM]

< SYMPTOM DIAGNOSIS >

DOOR KEY CYLINDER : Description

INFOID:000000009950228

Armed phase is not activated when door is locked using mechanical key.

NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of "SECURITY ALARM SET" in "WORK SUPPORT" in "THEFT ALM" using CONSULT.

DOOR KEY CYLINDER : Diagnosis Procedure

INFOID:000000009950229

1.CHECK POWER DOOR LOCK SYSTEM

Lock/unlock door with mechanical key.

Refer to [DLK-13. "System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check power door lock system. Refer to [DLK-149. "Diagnosis Procedure"](#).

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40. "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

Description

INFOID:000000009950230

Alarm does not operate when alarm operating condition is satisfied.

NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

"SECURITY ALARM SET" in "WORK SUPPORT" of "THEFT ALM" is ON when setting on CONSULT.

Diagnosis Procedure

INFOID:000000009950231

1.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-55. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the malfunctioning door switch

2.CHECK HEADLAMP FUNCTION

Check headlamp function.

Refer to [SEC-92. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK HORN FUNCTION

Check horn function.

Refer to [SEC-90. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40. "Intermittent Incident"](#).

NO >> GO TO 1.

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precautions for Removing of Battery Terminal

INFOID:0000000010246064

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

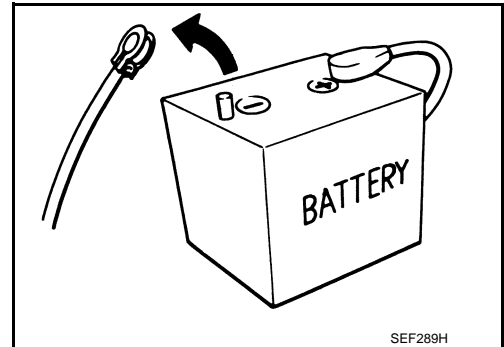

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000009950232

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

REMOVAL AND INSTALLATION

NATS ANTENNA AMP.

Exploded View

INFOID:000000009950233


Refer to [IP-13, "Exploded View"](#).

Removal and Installation


INFOID:000000009950234

REMOVAL

1. Remove the switch panel finisher.
Refer to [IP-14, "Removal and Installation"](#).
2. Disengage pawl with flat blade screwdriver.

 : Pawl

3. Pull NATS antenna amp.(1) forward and then remove push-button ignition switch (2).

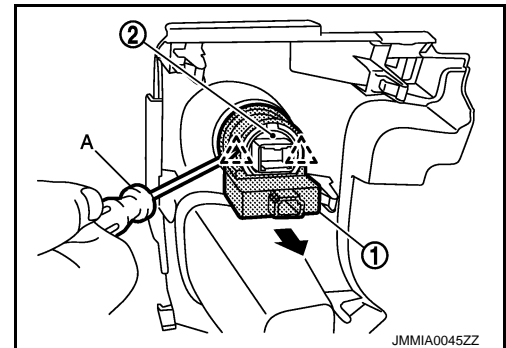

INSTALLATION

Install in the reverse order of removal.

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009950235

OVERALL SEQUENCE

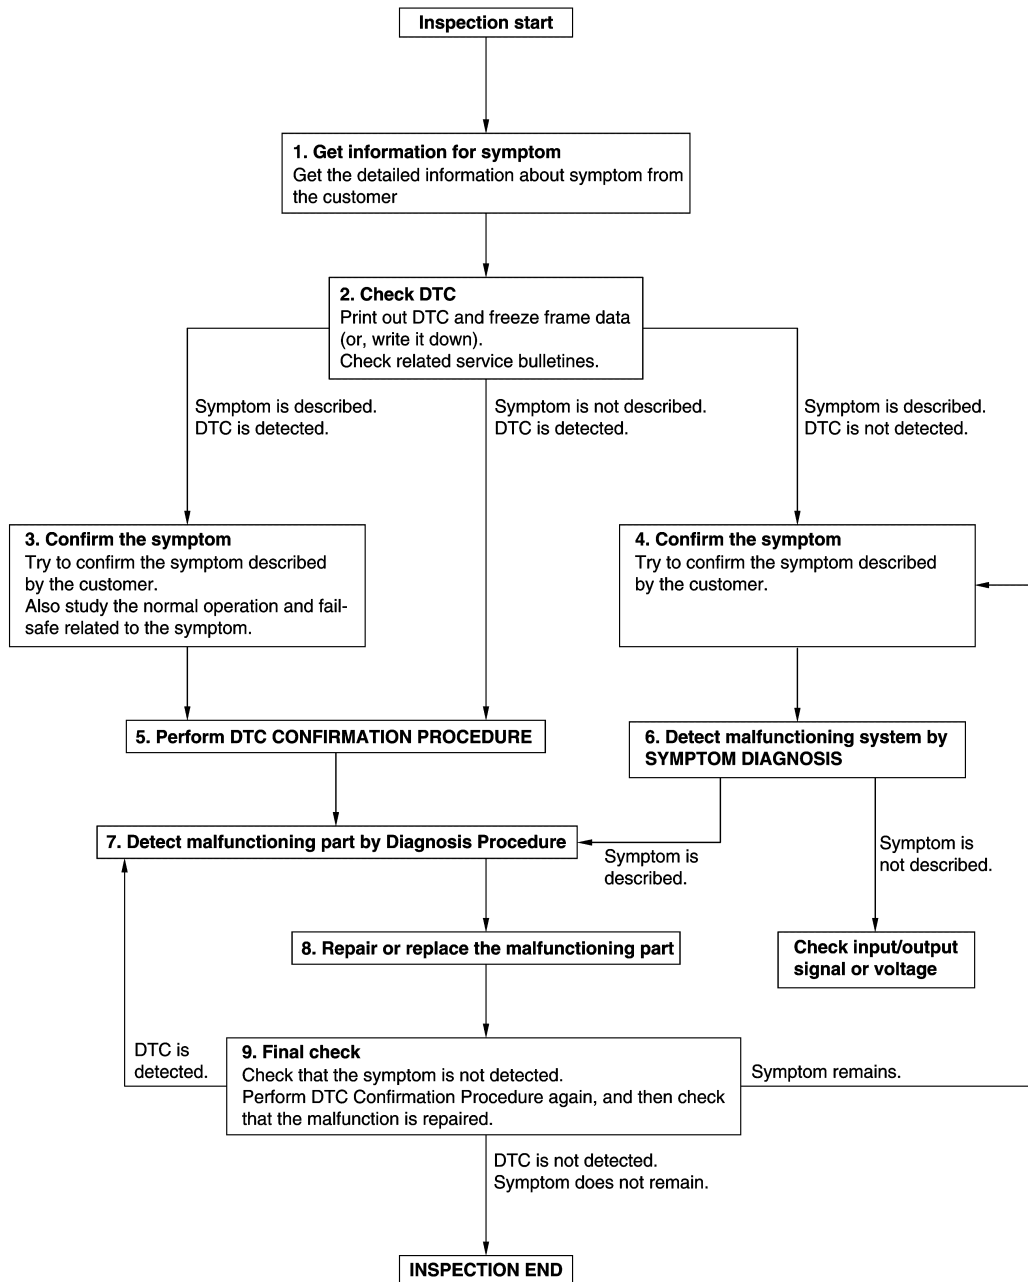

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DETAILED FLOW

Revision: 2013 October

SEC-175

2014 CUBE

JMKIA8652GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

1. GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-81, "DTC Inspection Priority Chart"](#) (BCM), and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-40, "Intermittent Incident"](#).

6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

DIAGNOSIS AND REPAIR WORK FLOW

[WITHOUT INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-40. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

INSPECTION AND ADJUSTMENT

ECM

ECM : Description

INFOID:000000009950236

Performing the following procedure can automatically activate recommunication of ECM and BCM, but only when the ECM is replaced with a new one*.

*: New one means a virgin ECM that is never energized on-board.

(In this step, initialization procedure using CONSULT is not necessary)

NOTE:

- When the replaced ECM is not a brand new, the specified procedure (Initializing of BCM and registration of all ignition keys) using CONSLT is necessary.
- If multiple keys are attached to the key holder, separate them before beginning work.
- Distinguish keys with unregistered key IDs from those with registered IDs.

ECM : Special Repair Requirement

INFOID:000000009950237

1.PERFORM ECM RECOMMUNICATING FUNCTION

1. Install ECM.
2. Insert the registered ignition key* into key cylinder, then turn ignition switch ON.
*: To perform this step, use the key that is used before performing ECM replacement.
3. Maintain ignition switch in the ON position for at least 5 seconds.
4. Turn ignition switch OFF.
5. Start engine.

>> GO TO 2.

2.ERFORM ADDITIONAL SERVICE PROCEDURE WHEN REPLACING ECM

performing the following procedure.

[EC-16, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#)

>> END

BCM

BCM : Description

INFOID:000000009950238

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

NOTE:

When replacing BCM, perform the system initialization (NATS) (if equipped).

BCM : Work Procedure

INFOID:000000009950239

1.SAVING VEHICLE SPECIFICATION

ⓅCONSULT Configuration

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-91, "Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2. REPLACE BCM

Replace BCM. Refer to [BCS-155, "Removal and Installation"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

 CONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-91, "Work Procedure"](#).

>> GO TO 4.

4. INITIALIZE BCM (NATS) (IF EQUIPPED)

Perform BCM initialization. (NATS)

>> WORK END


A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

SYSTEM DESCRIPTION

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

System Diagram

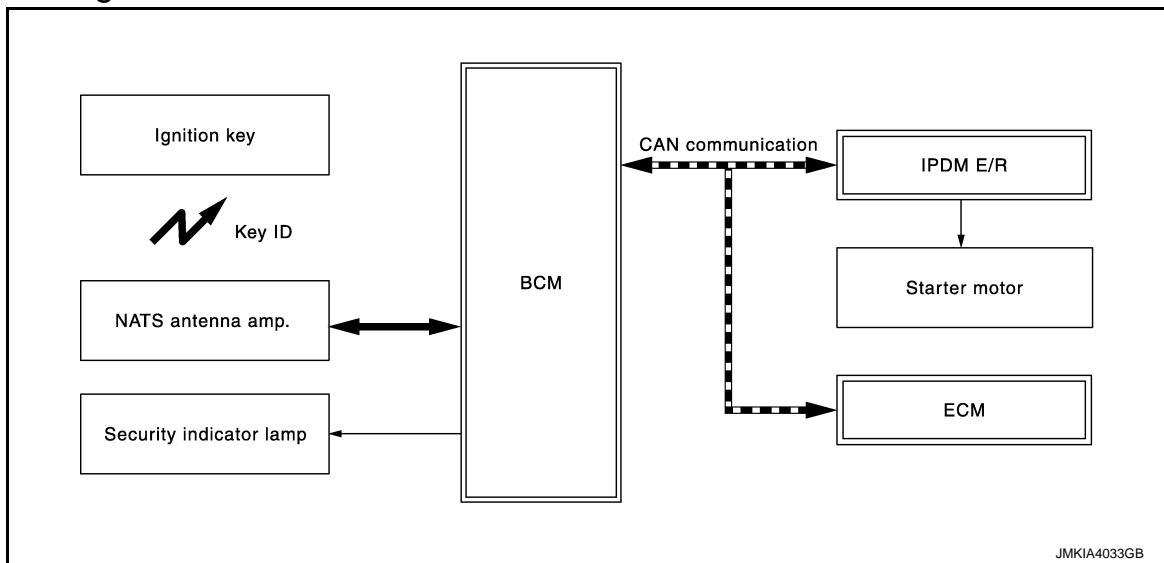

System Description

INFOID:000000009950241

SYSTEM DESCRIPTION

NVIS (Nissan Vehicle Immobilizer System-NATS) has the following immobilizer functions:

- Engine immobilizer shows high anti-theft performance to prevent engine start by other than the owner.
- Only a key with key ID registered in BCM and ECM can start engine, and shows high anti-theft performance to prevent key from being copied or stolen.
- If system detects malfunction, security indicator lamp illuminate when ignition switch is turned to ON position.
- If the owner requires, ignition key ID can be registered for up to 5 keys.
- During trouble diagnosis, when the following parts have been replaced or additional ignition key is needed, the specified procedure (Initializing of BCM and registration* of ignition keys) using CONSULT is required.
*: All keys kept by the owner of the vehicle should be registered with ignition key.
- ECM
- BCM
- Ignition key
- Possible symptom of NVIS(NATS) malfunction is "Engine cannot start". However, this symptom also occurs because of other than the NVIS(NATS) malfunction, so start the trouble diagnosis according to [SEC-175, "Work Flow"](#).
- If ECM other than Genuine NISSAN parts is installed, the engine cannot be started. For ECM replacement procedure, refer to [SEC-178, "ECM : Special Repair Requirement"](#).

PRECAUTIONS FOR KEY REGISTRATION

- The key registration is a procedure that erases the current NVIS(NATS) ID once, and then registers a new ID. Therefore the registered ignition key is necessary for this procedure. Before starting the registration operation collect all registered ignition keys from the customer
- NVIS(NATS) ID registration is the procedure that registers the ID stored into the transponder (integrated in ignition key) to BCM.

SECURITY INDICATOR LAMP

- Security indicator lamp is located on combination meter and warns that the vehicle is equipped with NVIS(NATS).
- Security indicator lamp always blinks, when the ignition switch is in any position except the ON position.
- Security indicator lamp turns OFF, when the ignition switch is in ON position.


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Component Parts Location

INFOID:000000009950242

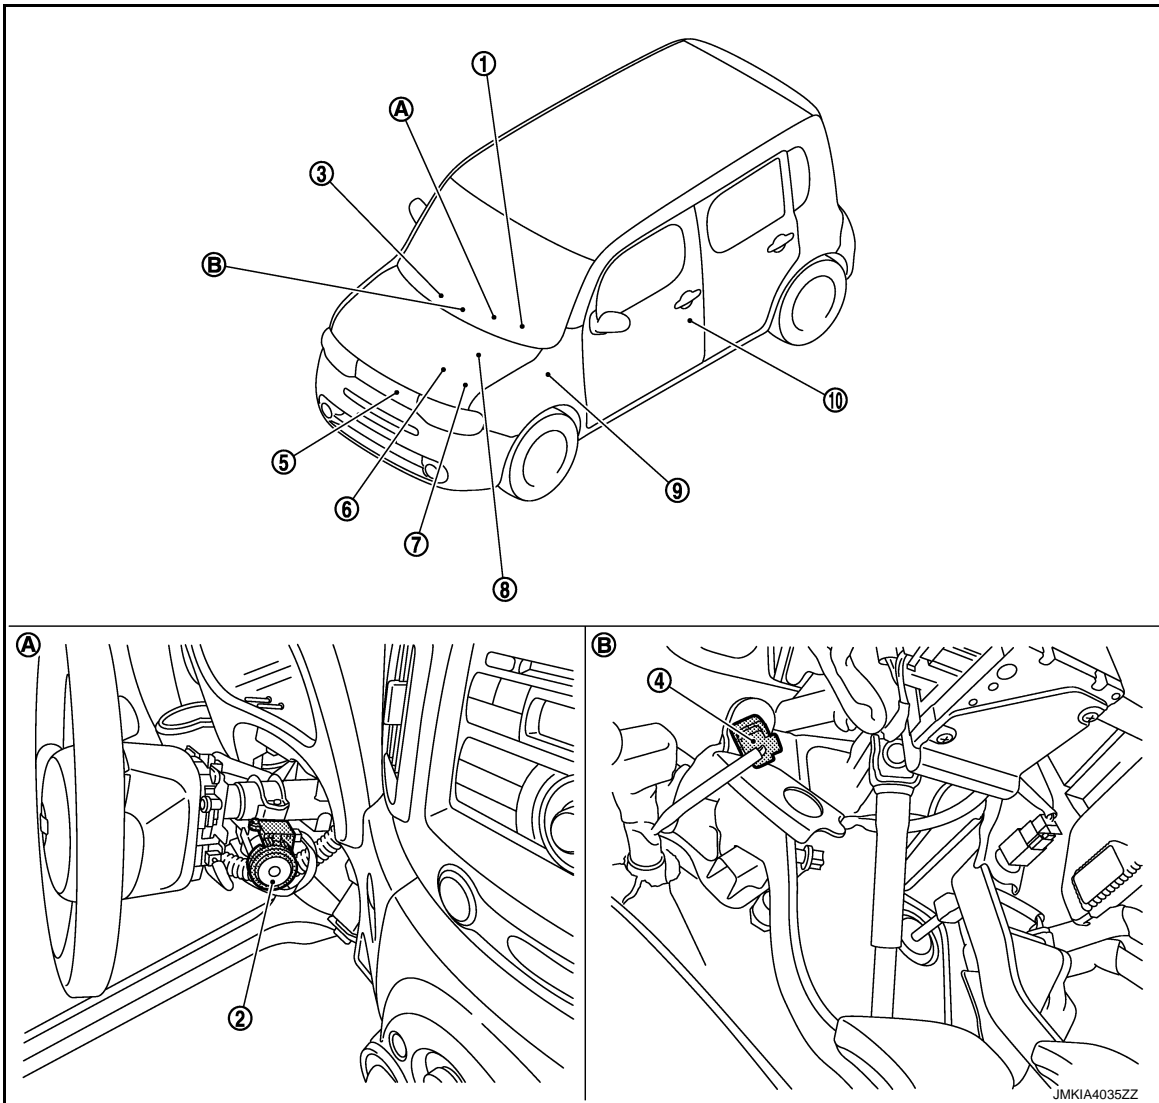

- | | | |
|---|-------------------------------------|--|
| 1. Security indicator lamp
(combination meter M34) | 2. NATS antenna amp. M26 | 3. Remote keyless entry tuner M61 |
| 4. Clutch interlock switch E113
(with M/T) | 5. Horn E50, E51 | 6. Transmission range switch F21
(with CVT) |
| 7. IPDM E/R
E10, E11, E12, E13, E14, E15 | 8. ECM E16 | 9. BCM
M65, M66, M67 |
| 10. Front door switch (driver side) B34 | | |
| A. Behind steering column cover | B. Behind instrument lower panel LH | |

Component Description

INFOID:000000009950243

Component	Reference
BCM	BCS-94
NATS antenna amp.	SEC-197
Security indicator lamp	SEC-206

VEHICLE SECURITY SYSTEM


[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

VEHICLE SECURITY SYSTEM

System Diagram

INFOID:000000009950244

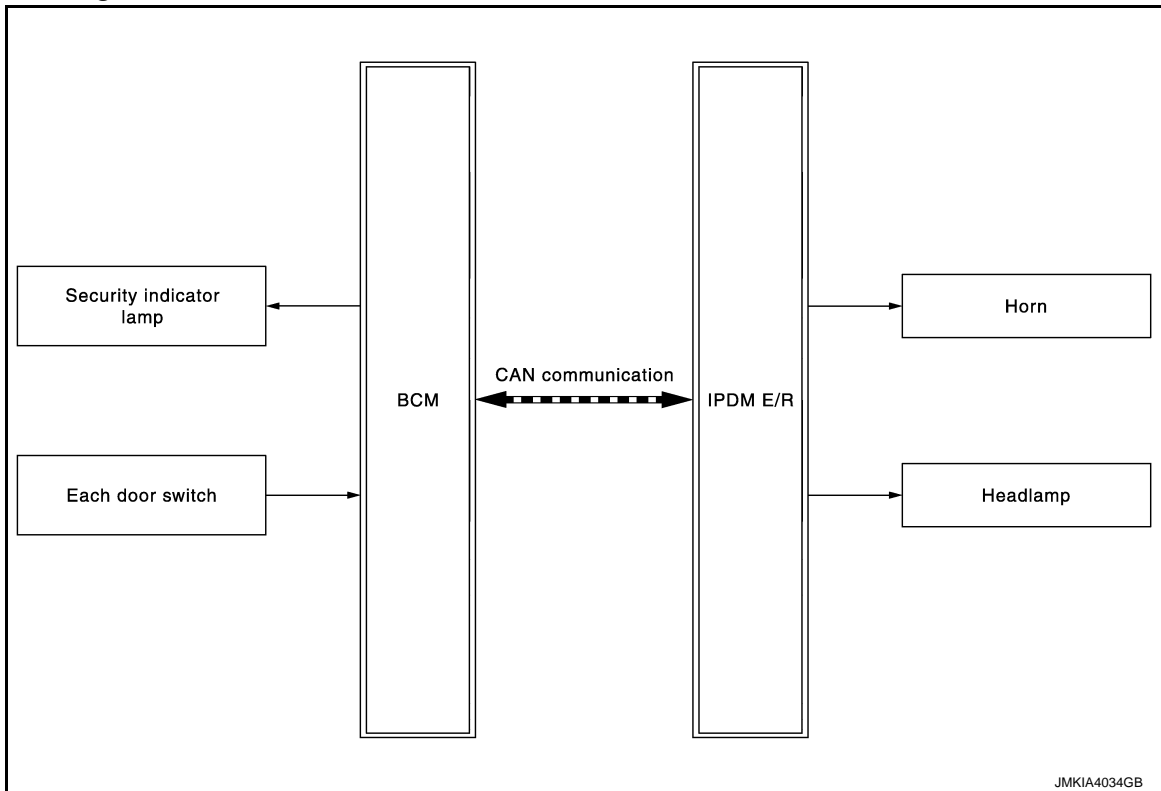


JMKIA4034GB

System Description

INFOID:000000009950245

OPERATION FLOW

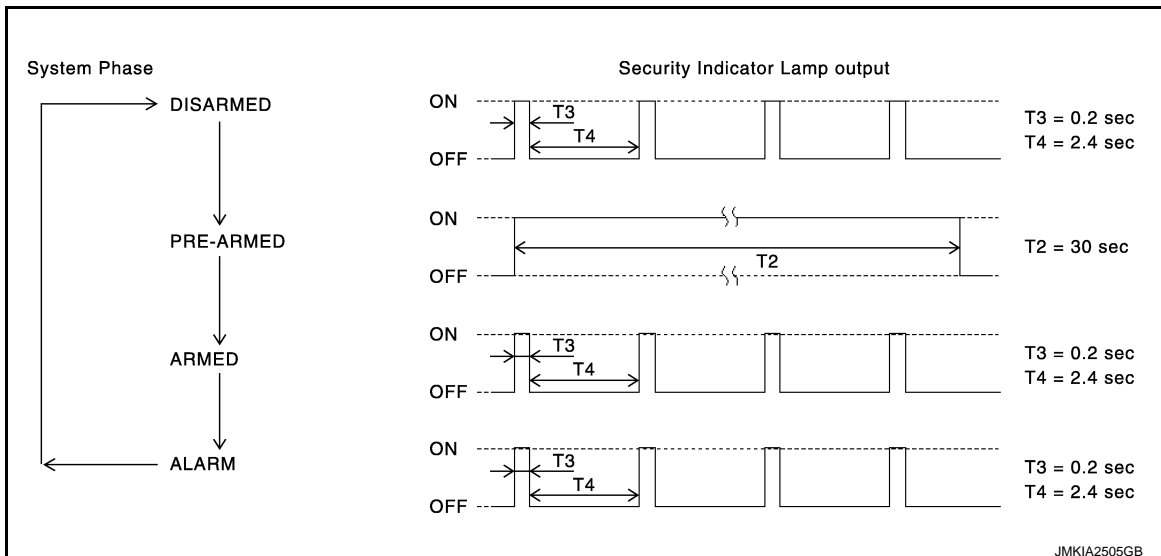

JMKIA2505GB

SETTING THE VEHICLE SECURITY SYSTEM

Initial Condition

- Ignition switch is in OFF position.

Disarmed Phase

- When any door is open, the vehicle security system is set in the disarmed phase on the assumption that the owner is inside or near the vehicle.

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

- When the vehicle security system is in the disarmed phase, the security indicator lamp blinks every 2.4 seconds.

Pre-armed Phase and Armed Phase

When the following operation 1 or 2 is performed, the vehicle security system turns into the “pre-armed” phase. (Security indicator lamp illuminates.)

1. BCM receives LOCK signal from door key cylinder switch, door lock and unlock switch or keyfob, after all doors are closed.
2. All doors are closed after all doors are locked by ignition key or door lock and unlock switch.

CANCELING THE ARMED PHASE VEHICLE SECURITY SYSTEM

When one of the following operations is performed, the armed phase is canceled.

1. Unlock all doors ignition key, door lock and unlock switch or keyfob.
2. Turn ignition switch “ON” position.

CANCELING THE ALARM OPERATION OF THE VEHICLE SECURITY SYSTEM

When one of the following operations is performed, the alarm operation is canceled.

1. Unlock all doors with the keyfob.
2. Turn ignition switch “ON” position.

ACTIVATING THE ALARM OPERATION OF THE VEHICLE SECURITY SYSTEM

Check that the system is in the armed phase. (Security indicator lamp blinks every 2.4 seconds.)

When the following operation 1 or 2 is performed, the system sounds the horns and blinks the headlamps for approx. 50 seconds.

1. Any door is opened during armed phase.
2. Disconnecting and connecting the battery connector before canceling armed phase.

PANIC ALARM OPERATION

When BCM receives panic alarm signal from keyfob, ground is supplied intermittently to both headlamp relay and horn relay.

When headlamp relay and horn relay are energized, then power is supplied to headlamps (HI) and horn.

The headlamp blinks and the horn sounds intermittently.

The alarm automatically turns off after 50 seconds or when BCM receives any signal from keyfob.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000009950246

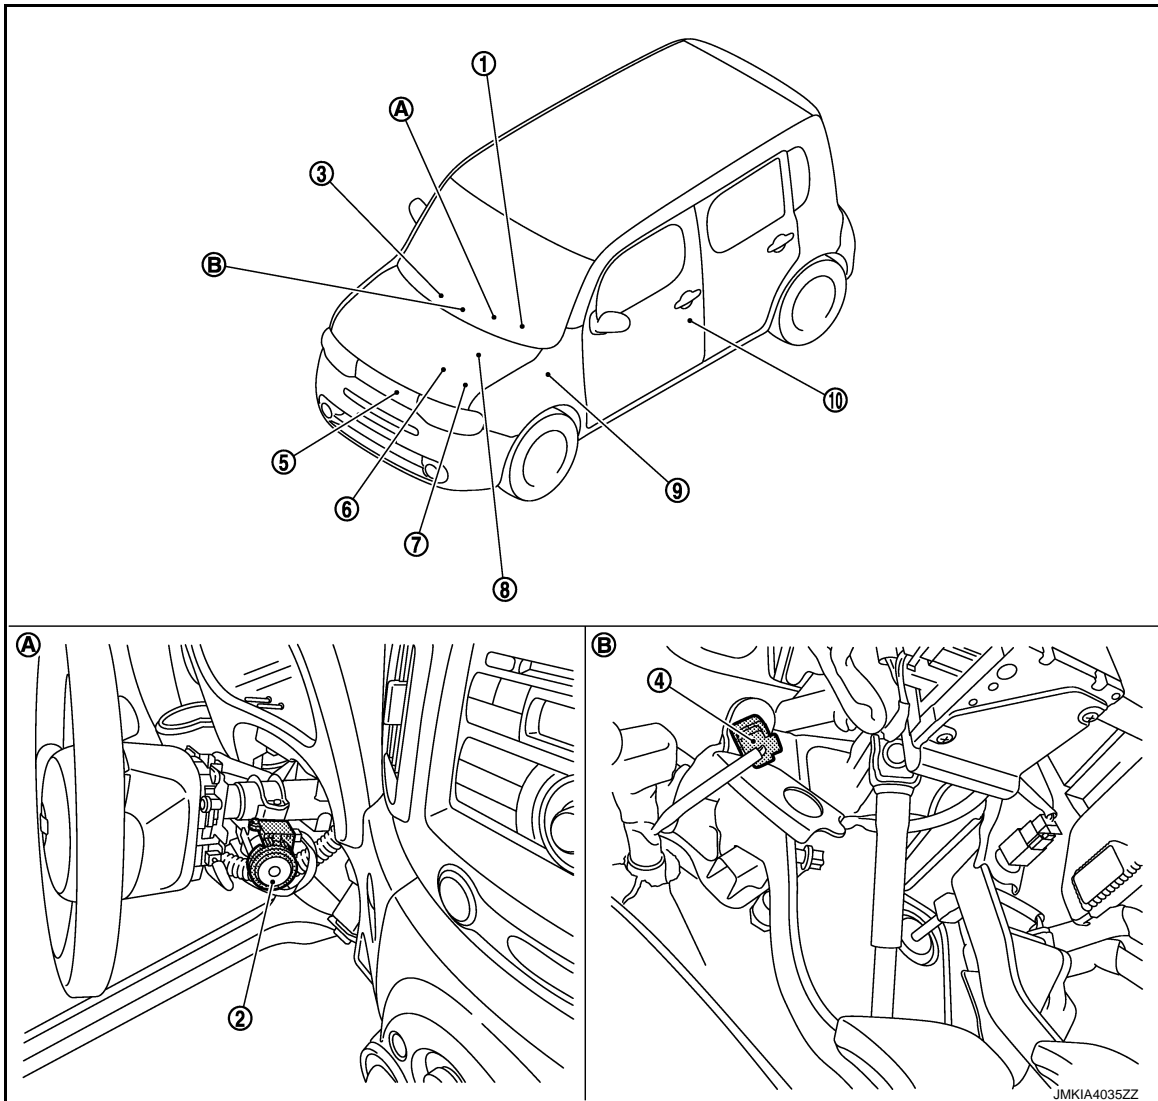

- | | | |
|--|-------------------------------------|---|
| 1. Security indicator lamp (combination meter M34) | 2. NATS antenna amp. M26 | 3. Remote keyless entry tuner M61 |
| 4. Clutch interlock switch E113 (with M/T) | 5. Horn E50, E51 | 6. Transmission range switch F21 (with CVT) |
| 7. IPDM E/R E10, E11, E12, E13, E14, E15 | 8. ECM E16 | 9. BCM M65, M66, M67 |
| 10. Front door switch (driver side) B34 | | |
| A. Behind steering column cover | B. Behind instrument lower panel LH | |

Component Description

INFOID:000000009950247

Component	Reference
BCM	BCS-94
Security indicator lamp	SEC-206
Door switch	DLK-249
Horn	SEC-208
Headlamp	SEC-210

DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000010246095

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	x
Warning chime	BUZZER		x	x
Interior room lamp control	INT LAMP	x	x	x
Remote keyless entry system	MULTI REMOTE ENT	x	x	x
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x	x	x
Turn signal and hazard warning lamps	FLASHER		x	x
Manual air conditioner	AIR CONDITONER		x	x
Combination switch	COMB SW		x	
Body control system	BCM	x		
NVIS - NATS	IMMU	x	x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
Back door	TRUNK		x	
Vehicle security system	THEFT ALM	x	x	x
RAP system	RETAINED PWR		x	x
Signal buffer system	SIGNAL BUFFER		x	x
TPMS	TPMS (AIR PRESSURE MONITOR)	x	x	x
Panic alarm system	PANIC ALARM			x

IMMU

IMMU : CONSULT Function (BCM - IMMU)

INFOID:0000000009950249

DATA MONITOR

NOTE:

DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Content
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.
KEY ON SW	Indicates [ON/OFF] condition of key switch.

ACTIVE TEST

Test item	Description
THEFT IND	This test is able to check security indicator lamp operation [ON/OFF].

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT ALM)

INFOID:000000009950250

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.
ACC ON SW	Indicates [ON/OFF] condition of ignition switch in ACC position.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
KEYLESS LOCK	Indicates [ON/OFF] condition of lock signal from keyfob.
KEYLESS UNLOCK	Indicates [ON/OFF] condition of unlock signal from keyfob.
TRUNK OPNR SW	NOTE: The item is indicated, but not monitored.
TRNK OPNR MNTR	NOTE: The item is indicated, but not monitored.
HOOD SW	NOTE: The item is indicated, but not monitored.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch (driver side).
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch (passenger side).
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
BACK DOOR SW	Indicates [ON/OFF] condition of back door switch.
KEY CYL LK-SW	Indicates [ON/OFF] condition of door key cylinder switch.
KEY CYL UN-SW	Indicates [ON/OFF] condition of door key cylinder switch.
CDL LOCK SW	Indicates [ON/OFF] condition of door lock and unlock switch.
CDL UNLOCK SW	Indicates [ON/OFF] condition of door lock and unlock switch.
TRANSPONDER	Indicates key ID verification results by [ON/OFF].
INTELLI KEY	NOTE: The item is indicated, but not monitored.
LOCK STATUS	NOTE: The item is indicated, but not monitored.
AUTO RELOCK	NOTE: The item is indicated, but not monitored.

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Test Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT screen.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. Security indicator lamp will be turned on when "ON" on CONSULT screen is touched.
VEHICLE SECURITY HORN	This test is able to check horn operation. Horn will be activated for 0.5 seconds after "ON" on CONSULT screen is touched.
HEADLAMP (HI)	This test is able to check headlamp (HI) operation. Headlamps (HI) will be activated for 0.5 seconds after "ON" on CONSULT screen is touched.
FLASHER	This test is able to check hazard warning lamp operation. Hazard warning lamps will be activated after "LH" or "RH" on CONSULT screen is touched.

PANIC ALARM

PANIC ALARM : CONSULT Function (BCM - PANIC ALARM)

INFOID:000000009950251

ACTIVE TEST

Test item	Description
VEHICLE SECURITY HORN	This test is able to check horn operation. Horn is activated for 0.5 seconds after "ON" on CONSULT screen touched.
HEAD LAMP (HI)	This test is able to check headlamp (HI) operation. Headlamps (HI) will be activated after "ON" on CONSULT screen touched.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS SYSTEM (IPDM E/R)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R)

CONSULT Function (IPDM E/R)

INFOID:000000010251892

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-62. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIG- NALS	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position (CVT models) judged by IPDM E/R.
ST RLY-REQ [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
DTRL REQ [Off/On]		NOTE: The item is indicated, but not monitored.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		NOTE: The item is indicated, but not monitored.

DIAGNOSIS SYSTEM (IPDM E/R)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NALS	Description
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.

ACTIVE TEST

Test item	Operation	Description
HORN	On	Operates horn relay for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Operates the cooling fan relay (LO operation).
	3	Operates the cooling fan relay (HI operation).
	4	
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

P1610 LOCK MODE

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

DTC/CIRCUIT DIAGNOSIS

P1610 LOCK MODE

Description

INFOID:000000009950253

ECM forcibly switches to the mode that inhibits engine start, when engine start operation is performed 5 times or more while communication between ECM and BCM is not normal, and when engine start operation is performed 5 times or more by unregistered ignition key.

DTC Logic

INFOID:000000009950254

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When ECM detects any of the following 2 states <ul style="list-style-type: none">Ignition switch ON 5 times or more during communication between ECM and BCM is malfunctioningIgnition switch ON by unregistered ignition key 5 times or more	—

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-190, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950255

1.CHECK ENGINE START FUNCTION

1. Perform the check for DTC except DTC P1610.
2. Use CONSULT to erase DTC after fixing.
3. Turn ignition switch OFF.
4. Turn ignition switch ON when registered ignition key is inserted into key cylinder and wait for 5 seconds.
5. Turn the ignition switch OFF and wait 5 seconds.
6. Repeat steps 4 and 5 twice (a total of 3 times).
7. Check that engine can start when registered ignition key is inserted into key cylinder.

>> INSPECTION END

P1611 ID DISCORD, IMMUECM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

P1611 ID DISCORD, IMMUECM

Description

INFOID:000000009950256

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:000000009950257

DTC DETECTION LOGIC

NOTE:

- If DTC P1611 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC P1611 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1611	ID DISCORD IMMUECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none">• BCM• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-191, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950258

1. PERFORM INITIALIZATION

Perform initialization of BCM and registration of all ignition keys using CONSULT.

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 2.

2. REPLACE BCM

1. Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all ignition keys using CONSULT.

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 3.

3. REPLACE ECM

Replace ECM. Refer to [SEC-178, "ECM : Special Repair Requirement"](#).

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 4.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

P1612 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

P1612 CHAIN OF ECM-IMMU

Description

INFOID:000000009950259

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:000000009950260

DTC DETECTION LOGIC

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1612	CHAIN OF ECM-IMMU	Inactive communication between ECM and BCM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or short)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-192, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950261

1.REPLACE BCM

1. Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all ignition keys using CONSULT.

Does the engine start?

- YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE ECM

Replace ECM. Refer to [SEC-178, "ECM : Special Repair Requirement"](#).

>> INSPECTION END

P1614 CHAIN OF IMMU-KEY

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

P1614 CHAIN OF IMMU-KEY

Description

INFOID:000000009950262

Performs ID verification through BCM and NATS antenna amp. when ignition switch is ON position. Prohibits the start of engine when an unregistered ID of ignition key is used.

DTC Logic

INFOID:000000009950263

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1614	NATS ANTENNA AMP.	<ul style="list-style-type: none">Inactive communication between NATS antenna amp. and BCMIgnition key is malfunctioning	<ul style="list-style-type: none">Harness or connectors (The NATS antenna amp. circuit is open or short)Ignition keyNATS antenna amp.BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert ignition key into the key cylinder.
2. Turn ignition switch ON.
3. Check "Self diagnosis result" with CONSULT.

Is DTC detected?

YES >> Refer to [SEC-193, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950264

1.CHECK FUSE

Check that the following IPDM E/R fuse is not blown.

Signal name	Fuse No.
Battery power supply	43

Is the fuse fusing?

YES >> Is the blown fuse after repairing the affected circuit if a fuse is blown.

NO >> GO TO 2.

2.CHECK NATS ANTENNA AMP. INSTALLATION

Check NATS antenna amp. Installation. Refer to [SEC-197, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Reinstall NATS antenna amp. correctly.

3.CHECK IGNITION KEY

Start engine with another registered ignition key.

Does the engine start?

YES >> Replace ignition key, then perform initialization of BCM and registration of all ignition keys using CONSULT.

NO >> GO TO 4.

4.CHECK NATS ANTENNA AMP. POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect NATS antenna amp. connector.
3. Check voltage between NATS antenna amp. harness connector and ground.

P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

(+)		(-)	Voltage (V) (Approx.)
NATS antenna amp.			
Connector	Terminal		
M26	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

5.CHECK NATS ANTENNA AMP. POWER SUPPLY CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and NATS antenna amp. connector.

IPDM E/R		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
E14	45	M26	1	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E14	45		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-64, "Removal and Installation"](#).

NO >> Repair or replace harness.

6.CHECK NATS ANTENNA AMP. GROUND CIRCUIT

Check continuity between NATS antenna amp. harness connector and ground.

NATS antenna amp.		Ground	Continuity
Connector	Terminal		
M26	3		Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace harness.

7.CHECK NATS ANTENNA AMP. SIGNAL

1. Connect BCM connector and NATS antenna amp. connector.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M65	21	Ground	Just after inserting ignition key in key cylinder	Pointer of tester should move
			Other than above	0
	25		Just after inserting ignition key in key cylinder	Pointer of tester should move
			Other than above	0

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 8.

8.CHECK NATS ANTENNA AMP. SIGNAL CIRCUIT

P1614 CHAIN OF IMMU-KEY

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

1. Disconnect NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. harness connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M65	21	M26	2	Existed
	25		4	

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M65	21		Not existed
	25		

Is the inspection result normal?

- YES >> Replace NATS antenna amp. Refer to [SEC-265, "Removal and Installation"](#).
NO >> Repair or replace harness.

9.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

P1615 DIFFERENCE OF KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

P1615 DIFFERENCE OF KEY

Description

INFOID:000000009950265

Performs ID verification through BCM when ignition switch is ON position.
Prohibits the start of engine when an unregistered key is used.

DTC Logic

INFOID:000000009950266

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1615	DIFFERENCE OF KEY	The ID verification results between BCM and ignition key are NG.	<ul style="list-style-type: none">Ignition keyBCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert ignition key into the key cylinder.
2. Turn ignition switch ON.
3. Check "Self diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-196, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950267

1.PERFORM INITIALIZATION

Perform initialization of BCM and registration of all ignition keys using CONSULT.

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE IGNITION KEY

1. Replace ignition key.
2. Perform initialization of BCM and registration of all ignition keys using CONSULT.

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 3.

3.REPLACE BCM

Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

>> INSPECTION END

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2190 NATS ANTENNA AMP.

Description

INFOID:000000009950268

Performs ID verification through BCM and NATS antenna amp. when ignition switch is ON position. Prohibits the start of engine when an unregistered ID of ignition key is used.

DTC Logic

INFOID:000000009950269

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2190	NATS ANTENNA AMP.	<ul style="list-style-type: none">Inactive communication between NATS antenna amp. and BCM.Ignition key is malfunctioning.	<ul style="list-style-type: none">Harness or connectors (The NATS antenna amp. circuit is open or short)Ignition keyNATS antenna amp.BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert ignition key into the key cylinder.
2. Turn ignition switch ON.
3. Check "Self diagnosis result" with CONSULT.

Is DTC detected?

YES >> Refer to [SEC-197, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950270

1.CHECK FUSE

Check that the following IPDM E/R fuse is not blown.

Signal name	Fuse No.
Battery power supply	43

Is the fuse fusing?

YES >> Is the blown fuse after repairing the affected circuit if a fuse is blown.

NO >> GO TO 2.

2.CHECK NATS ANTENNA AMP. INSTALLATION

Check NATS antenna amp. Installation. Refer to [SEC-265, "Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Reinstall NATS antenna amp. correctly.

3.CHECK IGNITION KEY

Start engine with another registered ignition key.

Does the engine start?

YES >> Replace ignition key, then perform initialization of BCM and registration of all ignition keys using CONSULT.

NO >> GO TO 4.

4.CHECK NATS ANTENNA AMP. POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect NATS antenna amp. connector.
3. Check voltage between NATS antenna amp. harness connector and ground.

B2190 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

(+)		(-)	Voltage (V) (Approx.)
NATS antenna amp.			
Connector	Terminal	Ground	Battery voltage
M26	1		

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

5.CHECK NATS ANTENNA AMP. POWER SUPPLY CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and NATS antenna amp. connector.

IPDM E/R		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
E14	45	M26	1	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E14	45		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-64, "Removal and Installation"](#).

NO >> Repair or replace harness.

6.CHECK NATS ANTENNA AMP. GROUND CIRCUIT

Check continuity between NATS antenna amp. harness connector and ground.

NATS antenna amp.		Ground	Continuity
Connector	Terminal		
M26	3		Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace harness.

7.CHECK NATS ANTENNA AMP. SIGNAL

1. Connect BCM connector and NATS antenna amp. connector.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal	Ground	Just after inserting ignition key in key cylinder	Pointer of tester should move
M65	21			
	25		Just after inserting ignition key in key cylinder	Pointer of tester should move
			Other than above	0

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 8.

8.CHECK NATS ANTENNA AMP. SIGNAL CIRCUIT

B2190 NATS ANTENNA AMP.

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

1. Disconnect NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. harness connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M65	21	M26	2	Existed
	25		4	

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M65	21		Not existed
	25		

Is the inspection result normal?

- YES >> Replace NATS antenna amp. Refer to [SEC-265, "Removal and Installation"](#).
NO >> Repair or replace harness.

9.CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2191 DIFFERENCE OF KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2191 DIFFERENCE OF KEY

Description

INFOID:000000009950271

Performs ID verification through BCM when ignition switch is ON position.
Prohibits the start of engine when an unregistered key is used.

DTC Logic

INFOID:000000009950272

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2191	DIFFERENCE OF KEY	The ID verification results between BCM and ignition key are NG.	<ul style="list-style-type: none">• Ignition key• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Insert ignition key into the key cylinder.
2. Turn ignition switch ON.
3. Check "Self diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-200, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950273

1.PERFORM INITIALIZATION

Perform initialization of BCM and registration of all ignition keys using CONSULT.

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 2.

2.REPLACE IGNITION KEY

1. Replace ignition key.
2. Perform initialization of BCM and registration of all ignition keys using CONSULT.

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 3.

3.REPLACE BCM

Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).

>> INSPECTION END

B2192 ID DISCORD, IMMUECM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2192 ID DISCORD, IMMUECM

Description

INFOID:000000009950274

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:000000009950275

DTC DETECTION LOGIC

NOTE:

- If DTC B2192 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2192 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none">• BCM• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-201, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950276

1. PERFORM INITIALIZATION

Perform initialization of BCM and registration of all ignition keys using CONSULT.

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 2.

2. REPLACE BCM

1. Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all ignition keys using CONSULT.

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 3.

3. REPLACE ECM

Replace ECM. Refer to [SEC-178, "ECM : Special Repair Requirement"](#).

Can the system be initialized and can the engine be started with registered ignition key?

- YES >> INSPECTION END
NO >> GO TO 4.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-40, "Intermittent Incident"](#).

>> INSPECTION END

B2193 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2193 CHAIN OF ECM-IMMU

Description

INFOID:000000009950277

BCM performs the ID verification with ECM that allows the engine to start. BCM starts the communication with ECM if ignition switch is turned ON and starts the engine if the ID is OK. ECM prevents the engine from starting if the ID is not registered.

DTC Logic

INFOID:000000009950278

DTC DETECTION LOGIC

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-40, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-41, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193	CHAIN OF BCM-ECM	Inactive communication between ECM and BCM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or short)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self diagnosis result" with CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-202, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000009950279

1. REPLACE BCM

1. Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all ignition keys using CONSULT.

Does the engine start?

- YES >> INSPECTION END
NO >> GO TO 2.

2. REPLACE ECM

Replace ECM. Refer to [SEC-178, "ECM : Special Repair Requirement"](#).

>> INSPECTION END

B2195 ANTI-SCANNING

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B2195 ANTI-SCANNING

Description

INFOID:000000009950280

When ignition switch is turned ON, BCM performs ID verification with ECM. If ID verification that is out of the specified specification is detected, BCM prohibits further ID verification and engine cranking.

DTC Logic

INFOID:000000009950281

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2195	ANTI SCANNING	ID verification between BCM and ECM that is out of the specified specification is detected	ID verification request out of the specified specification

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check "Self-diagnosis result" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-203, "Diagnosis Procedure"](#).
NO >> INSPECTION END.

Diagnosis Procedure

INFOID:000000009950282

1.CHECK SELF-DIAGNOSIS RESULT-1

1. Perform "Self-diagnosis result" of BCM using CONSULT.
2. Erase DTC.
3. Perform DTC Confirmation Procedure. Refer to [SEC-203, "DTC Logic"](#).

Is DTC 2195 detected?

- YES >> GO TO 2.
NO >> INSPECTION END

2.CHECK EQUIPMENT OF THE VEHICLE

Check that unspecified accessory part related to engine start is not installed.

Is unspecified accessory part related to engine start installed?

- YES >> GO TO 3.
NO >> GO TO 4.

3.CHECK SELF-DIAGNOSIS RESULT-2

1. Obtain the customers approval to remove unspecified accessory part related to engine start, and then remove it.
2. Perform "Self-diagnosis result" of BCM using CONSULT.
3. Erase DTC.
4. Perform DTC Confirmation Procedure. Refer to [SEC-203, "DTC Logic"](#).

Is DTC 2195 detected?

- YES >> GO TO 4.
NO >> INSPECTION END

4.REPLACE BCM

1. Replace BCM. Refer to [SEC-178, "BCM : Work Procedure"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000009950286

1.CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not fusing.

Signal name	Fuses and fusible link No.
Battery power supply	8
	G
ACC power supply	20
Ignition power supply	2

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position			
(+)	(-)		OFF	ACC	ON
BCM		Ground	Battery voltage	Battery voltage	Battery voltage
Connector	Terminal				
M67	70	Ground	Approx. 0 V	Battery voltage	Battery voltage
	57				
M65	11	Ground	Approx. 0 V	Approx. 0 V	Battery voltage
	38				

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		Existed
M67	67		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

IPDM E/R

IPDM E/R : Diagnosis Procedure

INFOID:000000009950287

1.CHECK FUSES AND FUSIBLE LINK

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C
	D
	J

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Battery voltage
Connector	Terminal	
E9	1	
	2	
E10	8	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3.CHECK IGNITION POWER SUPPLY CIRCUIT

1. Turn the ignition switch ON.
2. Check voltage between IPDM E/R harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Battery voltage
Connector	Terminal	
E12	18	

Is the measurement value normal?

YES >> GO TO 4.

NO >> Repair the harness or connector.

4.CHECK GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E11	9		Existed
E12	19		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

SECURITY INDICATOR LAMP

Description

INFOID:000000009950288

- Security indicator lamp is located on combination meter.
- NVIS (Nissan Vehicle Immobilizer System) and vehicle security system conditions are indicated by blink or illumination of security indicator lamp.

Component Function Check

INFOID:000000009950289

1. CHECK FUNCTION

1. Perform "THEFT IND" in the "ACTIVE TEST" mode using CONSULT.
2. Check security indicator lamp operation.

Test item		Description	
THEFT IND	ON	Security indicator lamp	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Go to [SEC-206, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009950290

1. CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check voltage between combination meter harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Combination meter			
Connector	Terminal	Ground	Battery voltage
M34	27		

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 10, located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between combination meter and fuse.

2. CHECK SECURITY INDICATOR LAMP SIGNAL

1. Connect combination meter connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal	Ground	Battery voltage
M65	23		

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-88, "Removal and Installation"](#).
NO >> GO TO 3.

3. CHECK COMBINATION METER CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector and BCM harness connector.

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Combination meter		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M34	18	M65	23	Existed

3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M34	18		Not existed

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-93, "Removal and Installation"](#).
- NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

HORN FUNCTION

Description

INFOID:000000009950291

Perform answer-back for each operation with horn.

Component Function Check

INFOID:000000009950292

1.CHECK FUNCTION

1. Perform "VEHICLE SECURITY HORN" in the "ACTIVE TEST" mode using CONSULT.
2. Check the horn operation.

Test item		Description	
VEHICLE SECURITY HORN	ON	Horn	Sounds (for 20 ms)

Is the operation normal?

- YES >> Horn function is OK.
 NO >> Go to [SEC-208. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009950293

1.CHECK HORN FUNCTION

Check horn function with horn switch.

Do the horn sound?

- YES >> GO TO 2.
 NO >> Refer to [HRN-2. "Wiring Diagram - HORN -"](#).

2.CHECK IPDM E/R POWER SUPPLY

1. Disconnect IPDM E/R connector.
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal	Ground	Battery voltage
E13	34		

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-64. "Removal and Installation"](#).
 NO >> GO TO 3.

3.CHECK IPDM E/R POWER SUPPLY CIRCUIT

1. Disconnect horn relay connector.
2. Check continuity between IPDM E/R harness connector and horn relay harness connector.

IPDM E/R		Horn relay		Continuity
Connector	Terminal	Connector	Terminal	
E13	34	E5	1	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	34		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair or replace harness.

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

4.CHECK INTERMITTENT INCIDENT

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

HEADLAMP FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

HEADLAMP FUNCTION

Description

INFOID:000000009950294

Headlamp lighting when vehicle security system is alarm phase.

Component Function Check

INFOID:000000009950295

1.CHECK FUNCTION

1. Perform "HEAD LAMP(HI)" in the "ACTIVE TEST" mode using CONSULT.
2. Check headlamp operation.

Test item		Description	
HEAD LAMP (HI)	ON	HEADLAMP (HI)	Lighting
	OFF		Does not lighting

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Refer to [SEC-210, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009950296

1.CHECK HEADLAMP FUNCTION

Refer to [EXL-42, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK INTERMITTENT INCIDENT

>> INSPECTION END

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS


< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

Wiring Diagram - NISSAN VEHICLE IMMOBILIZER SYSTEM -

INFOID:000000009950297

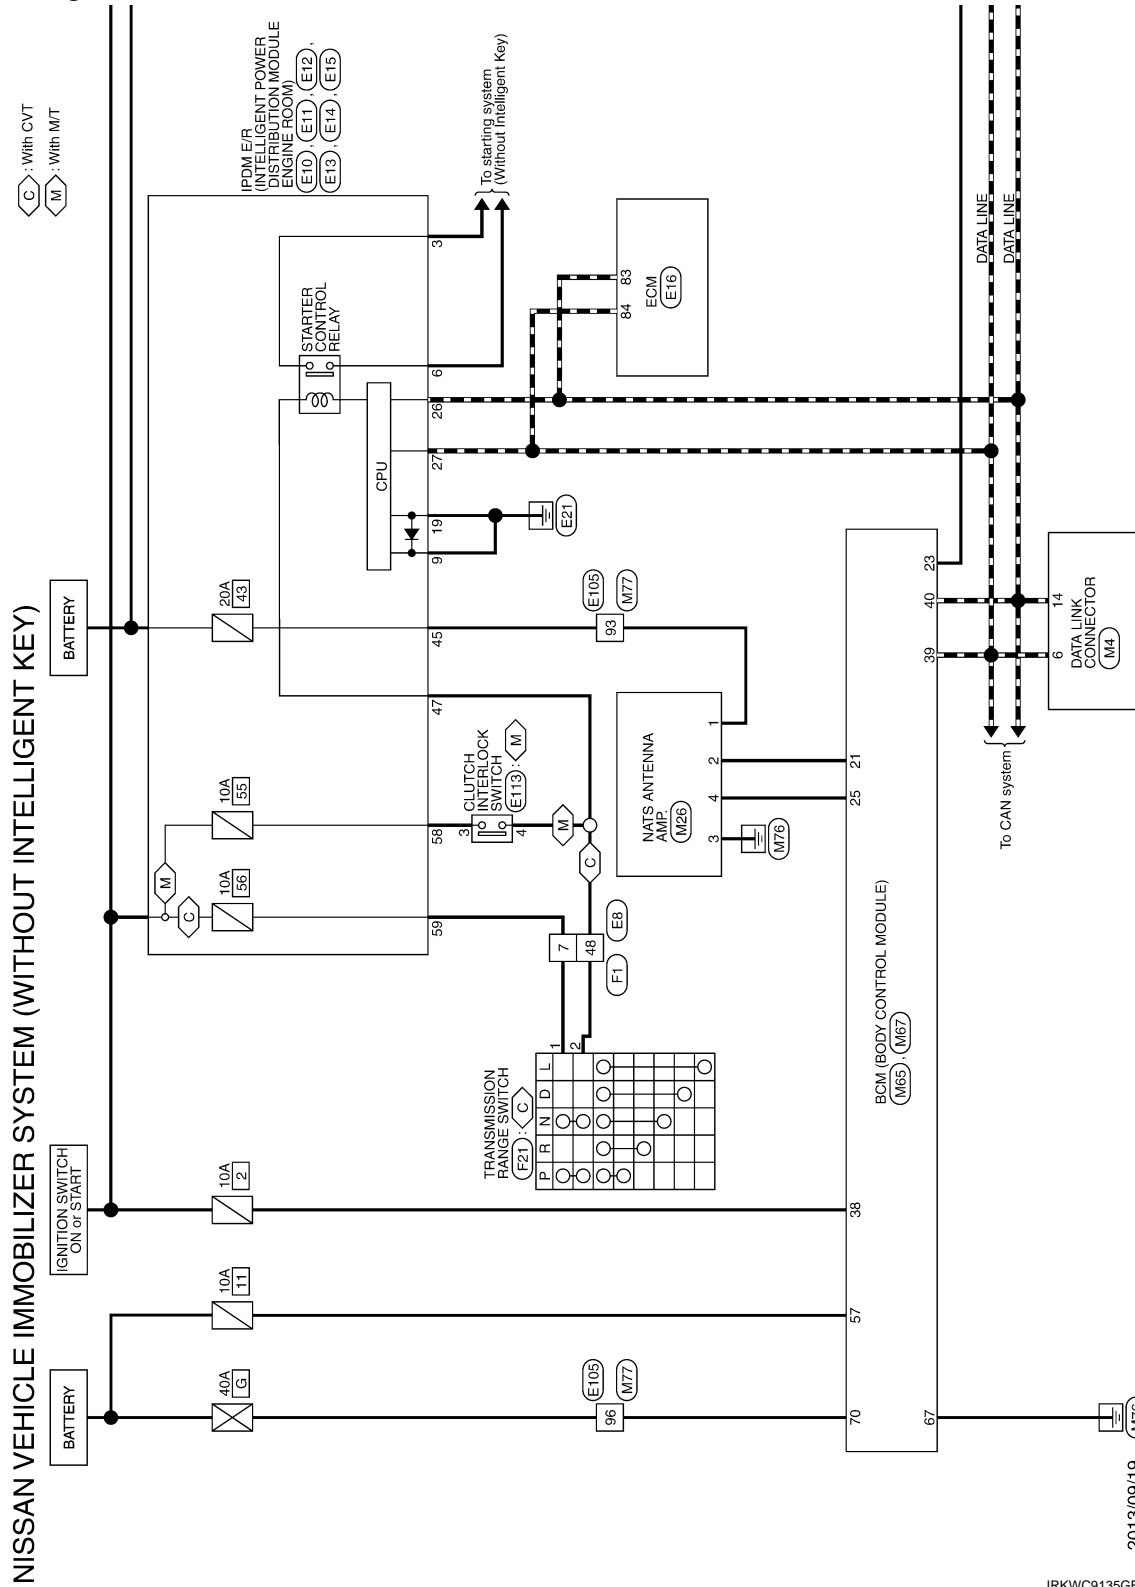

2013/09/19

JRKWC9135GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

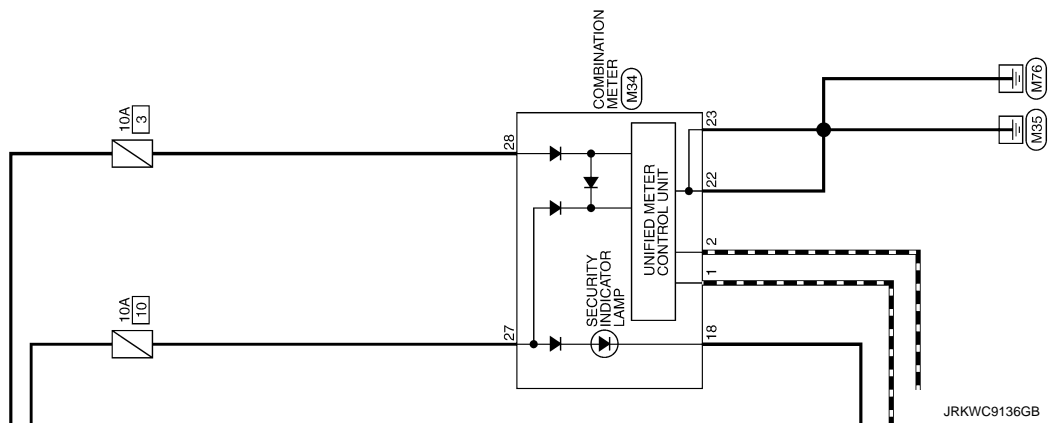


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM (WITHOUT INTELLIGENT KEY)

Connector No.	E13
Connector Name	WIRES TO WIRE
Connector Type	SAA38MB-RS10-SJZ

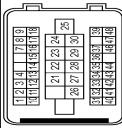

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	LG	-
3	Y	-
4	W	-
5	Y	-
6	SB	-
7	L	-
8	V	-
9	L	-
10	V	-
11	P	-
12	BR	-
13	LG	-
14	Y	-
15	SB	-
16	L	-
17	W	-
18	O	-
19	G	-
20	Y	-
21	G	-
22	Y	-
23	SB	-
24	W	-
25	BR	-
26	BY	-
27	GR	-
28	P	-
29	V	-
30	G	-
31	G	-
32	O	-
33	W	-
34	Y	-
35	V	-
36	P	-
37	LG	-
38	SB	-
39	L	-
40	GR	-

41	O	-
42	V	- [With M/T]
43	LG	- [With CVT]
44	R	-
46	W	-
47	G	-
48	BR	-

Connector No.	E10
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	M06FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
3	BR	-
4	P	-
5	LG	-
6	SB	-
7	Y	-
8	V	-

Connector No.	E11
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	M06FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
9	BR	-
10	L	-
13	W	-

Connector No.	E12
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS08FB-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
18	Y	-
19	BR	-
21	W	-
22	V	-

Connector No.	E13
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH12FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
24	G	-
25	Y	-
26	P	-
27	L	-
28	P	-
30	SB	-
31	W	-
33	O	-
34	R	-

Connector No.	E14
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FB-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
36	O	-
37	V	-
38	G	-
39	V	-
40	R	-
41	SB	-
43	G	-
44	P	-
45	Y	-
46	O	-

Connector No.	E15
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS18FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
47	BR	-
49	W	-
50	GR	-
51	R	-
52	P	-
54	GR	-
55	P	-
56	SB	-
57	G	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS


< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]


NISSAN VEHICLE IMMOBILIZER SYSTEM (WITHOUT INTELLIGENT KEY)

58	LG	- [With M/T]
59	R	- [With CVT]
60	Y	-
61	V	-
62	L	-

Connector No.	E16
Connector Name	ECM
Connector Type	RH24FB-RZ8-L-RH



Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MV-C316-TM4



70	SHIELD	-
71	GR	-
72	LG	-
73	P	-
74	V	-
76	Y	-
77	LG	-
78	O	-
79	G	-
80	P	-
81	L	-
82	W	-
83	BR	-
84	B	-
91	W	-
92	Y	-
93	Y	-
94	R	-
95	V	-
96	LG	-
97	R	-
98	SB	-
99	G	-
100	P	-



Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	SAA36FB-RS10-SJZZ



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	SB	-
4	G	-
5	P	-
6	L	- [With M/T]
6	R	- [Without M/T]
7	Y	-
8	O	-
9	W	-
10	SB	-
31	V	-
32	R	-
33	GR	-
34	P	-
35	Y	-
36	BR	-
39	SB	-
44	R	-
45	V	-
46	P	-
48	L	-
51	B	- [With M/T]
51	BR	- [With CVT]
53	SB	-
54	O	- [With M/T]
54	W	- [With CVT]
57	LG	-
59	L	-
60	O	-
61	G	-
62	W	-
63	L	-
67	GR	- [With CVT]
67	V	- [With M/T]
69	P	-

Terminal No.	Color Of Wire	Signal Name [Specification]
83	P	CAN COMMUNICATION LINE
84	L	CAN COMMUNICATION LINE
88	LG	DATA LINK CONNECTOR
93	L	IGNITION SWITCH
94	SB	ASC&D STEERING SWITCH
95	BR	SENSOR GROUND
99	W	STOP LAMP SWITCH
100	SB	ASC&D BRAKE SWITCH
102	O	SENSOR POWER SUPPLY
103	G	ACCELERATOR PEDAL POSITION SENSOR 2
104	R	SENSOR GROUND
105	G	POWER SUPPLY FOR ECM
106	V	SENSOR POWER SUPPLY
107	B	ECM GROUND
108	B	ECM GROUND
109	B	ECM GROUND
110	BR	ACCELERATOR PEDAL POSITION SENSOR 1
111	Y	SENSOR GROUND
112	B	ECM GROUND

Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	LG	-
3	R	-
4	Y	-
7	V	-
8	G	-
9	SB	-
10	L	-
11	Y	-
12	GR	-
13	BR	-
14	G	-
15	W	-
16	Y	-
17	P	-
18	BR	-
21	G	-
22	L	-
23	W	-
24	R	-
25	R	-
26	B	-
27	SB	-
28	V	-
29	V	-
30	BR	-
31	GR	-
32	BR	-
33	W	-
34	LG	-
35	V	-
36	Y	-
37	W	-
39	G	-
40	P	-
41	O	-

Connector No.	E113
Connector Name	CLUTCH INTERLOCK SWITCH
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
3	Y	-
4	BR	-

JRKWC9358GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM (WITHOUT INTELLIGENT KEY)


42	G	-	-
43	R	-	-
44	P	-	-
46	GR	-	-
47	Y	-	-
48	BR	-	-

Connector No.	F21
Connector Name	TRANSMISSION RANGE SWITCH
Connector Type	RK88FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
3	R	-
4	GR	-
5	SB	-
6	W	-
7	Y	-
8	G	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
4	L	-
5	B	-
6	L	-
7	GR	-

8	O	-
14	P	-
16	LG/R	-

Connector No.	M26
Connector Name	NATS ANTENNA AMP.
Connector Type	TH40FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BAT
2	P/L	CLK
3	B	GND [Without Intelligent Key]
3	LG	DATA [With Intelligent Key]
4	B	GND [With Intelligent Key]
4	LG	DATA [Without Intelligent Key]

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CANH
2	P	CANL
3	V	VEHICLE SPEED SIGNAL (2-PULSE)
4	L	VEHICLE SPEED SIGNAL (PULSE) [Without NAVI]
4	VR	VEHICLE SPEED SIGNAL (PULSE) [With NAVI]
6	BR/Y	FUEL LEVEL SENSOR SIGNAL
7	RG	AIR BAG SIGNAL
8	P	OVERDRIVE CONTROL SWITCH SIGNAL
9	O	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SEAT)

10	SB	PARKING BRAKE SWITCH SIGNAL
11	GR	BRAKE FLUID LEVEL SWITCH SIGNAL
13	BR	ILLUMINATION CONTROL SIGNAL
15	LY	ACC POWER SUPPLY
18	RY	SECURITY SIGNAL
19	PU/W	AMBIENT SENSOR SIGNAL
20	RY/W	AMBIENT SENSOR GROUND
21	B	GROUND
22	B	GROUND
23	B	GROUND
24	PU	FUEL LEVEL SENSOR GROUND
25	B	VDC GROUND
27	LG/R	BATTERY POWER SUPPLY
28	GR	IGNITION SIGNAL
29	BR	PASSENGER SEAT BELT WARNING SIGNAL
31	R	ACC/AMP CONSTRUCTION REGISTRATION SIGNAL
35	BR	ENGINE COOLANT TEMPERATURE SIGNAL
38	GR	ALTERNATOR SIGNAL

Connector No.	M65
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	LY	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	LR	COMBI SW INPUT 1
7	W/R	KEY CYL UNLOCK SW
8	W/B	KEY CYL LOCK SW
9	R	STOP LAMP SW
10	WL	REAR WINDOW DEFROGGER SW
11	LY	ACC POWER SUPPLY
12	SB	PASSENGER DOOR SW
13	GYL	REAR RH DOOR SW
18	V	RECEIVER SENSOR GND
19	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY
20	GY	KEYLESS ENTRY RECEIVER COMM
21	P/L	NATS ANTENNA AMP.

23	RY	SECURITY INDICATOR LAMP
25	LG	NATS ANTENNA AMP.
26	GR	THERMO CONTROL AMP.
27	YG	A/C SW
28	GM	BLOWER FAN SW
29	L/W	HAZARD SW
31	GY	FR DEFROSTER SW
32	LG	COMBI SW OUTPUT 5
33	YL	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/O	COMBI SW OUTPUT 1
37	RAW	KEY SWITCH
38	O	IGNITION POWER SUPPLY
39	L	CANH
40	P	CANL

Connector No.	M67
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FH4G-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
56	L	INTERIOR ROOM LAMP POWER SUPPLY
57	Y	BAT (FUSE)
59	L/B	DRIVER DOOR UNLOCK OUTPUT
60	W/B	TURN SIGNAL LH OUTPUT
61	W/L	TURN SIGNAL RH OUTPUT
63	BR	ROOM LAMP TIMER CONTROL
65	V	ALL DOOR LOCK OUTPUT
66	G	PASSENGER DOOR REAR DOOR UNLOCK OUTPUT
67	B	GROUND
68	L	POWER WINDOW POWER SUPPLY (IGN)
69	P	POWER WINDOW POWER SUPPLY (BAT)
70	Y	BAT (FL)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM (WITHOUT INTELLIGENT KEY)

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-C516-TM4



74	L/Y	-
76	W/G	-
77	GR/R	-
78	O	-
79	LG	-
80	P	-
81	L	-
82	GR	-
83	G/R	-
84	B	-
91	R	-
92	O	-
93	Y	-
94	R/B	-
95	L/W	-
96	Y	-
97	I	-
98	BR/W	-
99	W	-
100	G/R	-


Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/O	-
2	R	-
3	G/R	-
4	G/B	-
5	L	-
6	I	-
7	W/R	-
8	GW	-
9	Y/L	-
10	W	-
31	GR/L	-
32	L/B	-
33	R/Y	-
34	SB	-
35	BR	-
36	G	-
39	L/R	-
44	G/O	-
45	LG/R	-
46	GR/W	-
48	L/O	-
51	BR/W	-
53	R/L	-
54	O	-
57	GR	-
59	V	-
60	R/W	-
61	PL/W	-
62	W/L	-
63	W/B	-
67	Y/R	-
69	L/G	-
70	SHIELD	-
71	P/B	-
72	RG	-
73	R	-

JRKWC9360GB

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

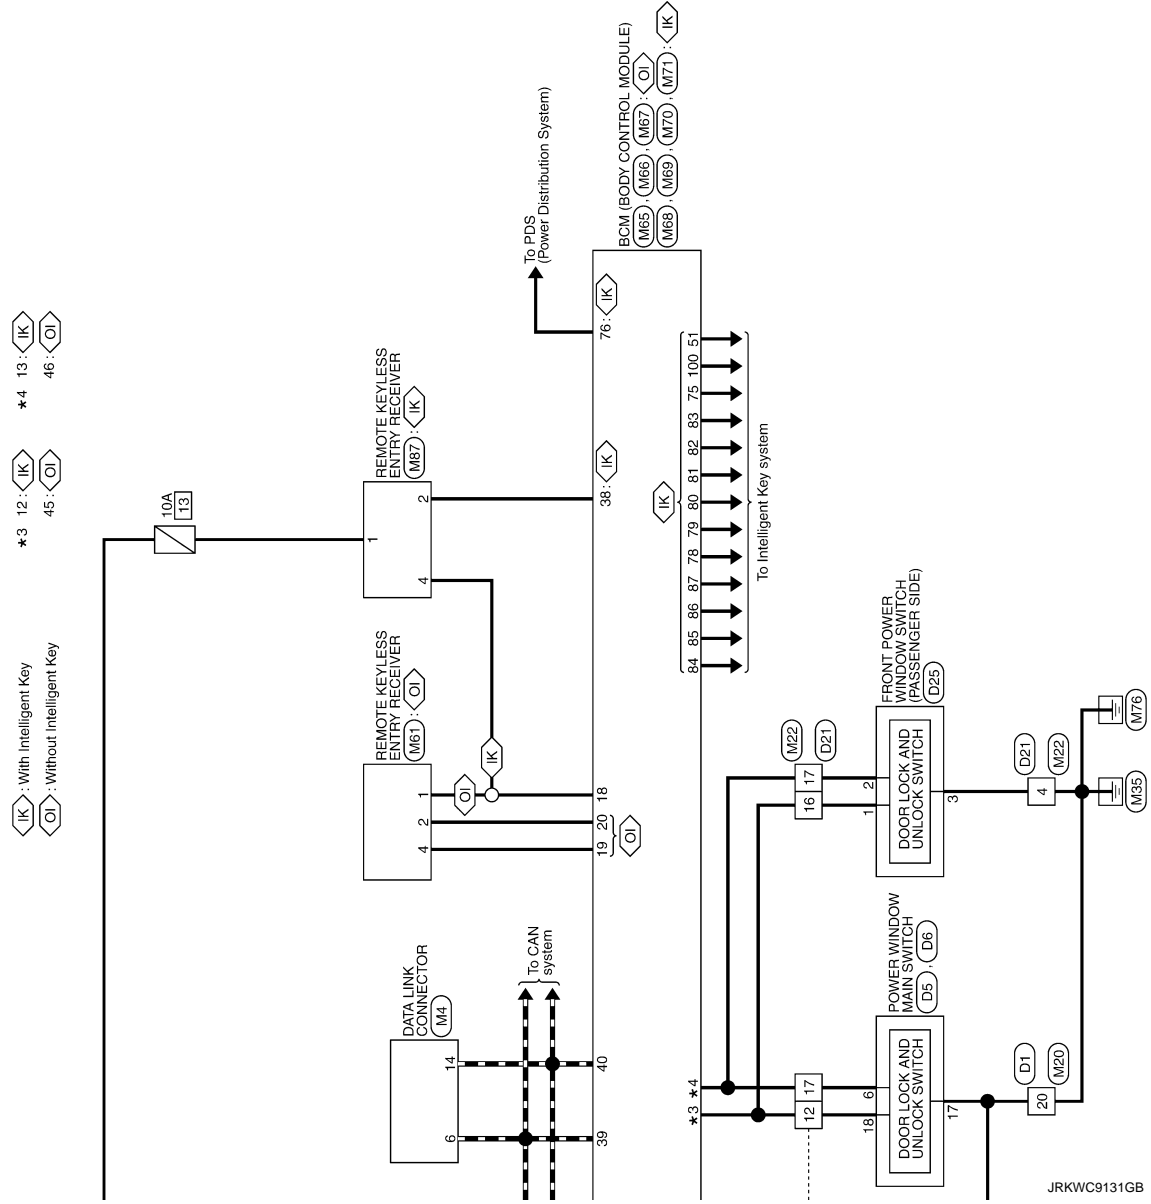

JRKWC9131GB


VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

VEHICLE SECURITY SYSTEM

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	TH04FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	O	-
4	D	-
5	W	-
6	SB	-
7	GR	-
8	SB	-
9	GR	-
10	SB	-
11	G	-
12	SB	-
13	L	-
14	R	-
15	R	-
16	GR	-
17	BR	-
18	L	-
19	LG	-
20	LG	-
21	Y	-
22	BR	-
23	BR	-
24	O	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH04FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	GR	-
3	V	-
4	W	-
5	W	-
6	LG	-
7	R	-
8	O	-
9	GR	-
10	P	-
11	P	-
12	W	-
13	W	-
14	W	-
15	W	-
16	W	-

Connector No.	B27
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	TH04FM-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
3	SB	-

Connector No.	B34
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	TH04FM-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-

Connector No.	B53
Connector Name	REAR DOOR SWITCH RH
Connector Type	TH04FM-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-

Connector No.	B71
Connector Name	REAR DOOR SWITCH LH
Connector Type	TH04FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	W	-

Connector No.	B75
Connector Name	BACK DOOR SWITCH
Connector Type	TH04FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	W	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	NH04FW-CSD10



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	SB	-
3	Y	-
4	LG	-
5	LG	-
6	R	-
7	L	-
8	W	-
9	BR	-
10	BR	-
11	GR	-
12	GR	-
13	W	-
14	G	-

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM

15	V	-
17	R	-
18	L	-
19	O	-
20	B	-

Connector No.	D5
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FM-CS



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	O	-
5	Y	-
6	V	-
7	LG	-
8	BR	-
9	V	-
10	L	-
11	GR	-
12	SB	-
13	W	-
15	G	-
16	W	-

Connector No.	D6
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS03FM-CS



1	7	18	19
---	---	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
17	B	-
18	GR	-
19	P	-

Connector No.	D9
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type	E06FGY-RS



1	2	3	4	5	6
---	---	---	---	---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	SB	-
3	G	-
4	B	-
5	L	-
6	W	-

Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	NH10FM-CS10



6	5	4	2	1		
20	13	12	11	10	8	7
18	17	16	15	14	9	3

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	Y	-
4	B	-
5	L	-
6	SB	-
7	R	-
8	V	-
10	W	-
11	L	-
12	LG	-
13	P	-
15	G	-
16	GR	-
17	BR	-
18	V	-
20	W	-

Connector No.	D25
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NS12FM-CS



1	2	3		
6	7	8	11	12

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	B	-
6	Y	-

7	R	-
8	L	-
11	SB	-
12	W	-

Connector No.	E5
Connector Name	HORN RELAY
Connector Type	Relay_24381_CS900



2	3	1
---	---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	G	-
3	G	-

Connector No.	E11
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	MO0FB-LC



10	9
13	11

Terminal No.	Color Of Wire	Signal Name [Specification]
9	B/W	-
10	L	-
13	W	-


VEHICLE SECURITY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]


VEHICLE SECURITY SYSTEM

Connector No.	E12
Connector Name	IGNITION INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS08FBRCS



Terminal No.	Color Of Wire	Signal Name [Specification]
18	Y	-
19	BR	-
21	W	-
22	V	-

Connector No.	E13
Connector Name	IGNITION INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH2FVNH



Terminal No.	Color Of Wire	Signal Name [Specification]
24	G	-
25	Y	-
26	P	-
27	L	-
28	P	-
30	SB	-
31	W	-
33	O	-
34	R	-

Connector No.	E50
Connector Name	HORN
Connector Type	P0TFEA




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-

Connector No.	E51
Connector Name	HORN
Connector Type	P0TFEA



Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR	-


Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	SB	-
4	G	-
5	P	-
6	L	- [With NAV]
7	Y	- [Without NAV]
8	O	-
9	W	-
10	SB	-
31	V	-
32	R	-
33	GR	-
34	B	-
35	Y	-
36	BR	-
39	SB	-
44	R	-
45	V	-
46	P	-
48	L	-
51	B	- [With M/T]
51	BR	- [With CVT]
53	SB	-
54	O	- [With M/T]
54	W	- [With CVT]
57	LG	-
59	L	-
60	O	-
61	G	-
62	W	-
63	L	-
67	GR	- [With CVT]
67	V	- [With M/T]
69	P	-
70	SHIELD	-
71	GR	-
72	LG	-
73	P	-
74	V	-
76	Y	-
77	LG	-
78	O	-
79	G	-
80	P	-
81	L	-
82	W	-

83	BR	-
84	B	-
91	W	-
92	Y	-
93	Y	-
94	R	-
95	V	-
96	LG	-
97	R	-
98	SB	-
99	G	-
100	P	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	ED16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
4	B	-
5	B	-
6	L	-
7	GR/R	-
8	O	-
14	P	-
16	LG/R	-

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

JRKWC9347GB


VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >


VEHICLE SECURITY SYSTEM

Connector No.	M20
Wire To	WIRE TO WIRE
Connector Type	NH10MW-CS10



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/W	-
2	W/R	-
3	Y	-
4	L/B	-
5	R	-
6	Y/R	-
7	SB	-
8	LG	-
9	GR	-
10	WB	-
11	GB	-
12	Y	-
13	BR	-
14	L/R	-
15	B	-
16	W	-
17	W/R	-
18	L/R	-
19	B	-
20	B	-


Connector No.	M22
Wire To	WIRE TO WIRE
Connector Type	NH10MW-CS10



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	G	-
3	B	-
4	B	-

Terminal No.	Color Of Wire	Signal Name [Specification]
5	L	-
6	W/R	-
7	R	-
8	V	-
9	R	-
10	LG	-
11	R	-
12	G	-
13	BR/Y	-
14	G/B	-
15	GR	-
16	GR	-
17	BR	-
18	L/Y	-
19	Y/R	-
20	Y/R	-

Connector No.	M34
Wire To	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CANH
2	P	CANH
3	V	VEHICLE SPEED SIGNAL (2-PULSE)
4	L	VEHICLE SPEED SIGNAL (8-PULSE) [Without NAVI]
4	V/R	VEHICLE SPEED SIGNAL (8-PULSE) [With NAVI]
6	BR/Y	FUEL LEVEL SENSOR SIGNAL
7	R/G	AIR BAG SIGNAL
8	P	OVERDRIVE CONTROL SWITCH SIGNAL
9	O	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	SB	PARKING BRAKE SWITCH SIGNAL
11	G/R	BRAKE FLUID LEVEL SWITCH SIGNAL
13	BR	ILLUMINATION CONTROL SIGNAL
15	L/Y	ACC POWER SUPPLY
18	R/Y	SECURITY SIGNAL
19	PU/W	AMBIENT SENSOR SIGNAL
20	R/W	AMBIENT SENSOR GROUND
21	B	GROUND
22	B	GROUND
23	B	GROUND
24	PU	FUEL LEVEL SENSOR GROUND
25	B	VDC GROUND


Terminal No.	Color Of Wire	Signal Name [Specification]
27	LG/R	BATTERY POWER SUPPLY
28	GR	IGNITION SIGNAL
29	BR	PASSENGER SEAT BELT WARNING SIGNAL
31	R	AC AUTO AMP CONNECTION RECOGNITION SIGNAL
35	BR	ENGINE COOLANT TEMPERATURE SIGNAL
38	GR	ALTERNATOR SIGNAL

Connector No.	M61
Wire To	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	GY	-
4	BR	-


Connector No.	M65
Wire To	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L/Y	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L/R	COMBI SW INPUT 1
7	W/R	KEY CYL LOCK SW
8	W/B	STOP LAMP SW
9	R	REAR WINDOW DEFROGGER SW
10	W/L	REAR WINDOW DEFROGGER SW

Terminal No.	Color Of Wire	Signal Name [Specification]
11	L/Y	ACC POWER SUPPLY
12	SB	PASSENGER DOOR SW
13	GR/L	REAR RH DOOR SW
18	V	RECEIVER J SENSOR GND
19	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY
20	GY	KEYLESS ENTRY RECEIVER COMM
21	P/L	NAVIS ANTENNA AMP.
23	R/Y	SECURITY INDICATOR LAMP
25	LG	NAVIS ANTENNA AMP.
26	GR	THERMO CONTROL AMP.
27	Y/G	A/C SW
28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW
31	GY	FR DEFROSTER SW
32	LG	COMBI SW OUTPUT 5
33	Y/L	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/O	COMBI SW OUTPUT 1
37	R/W	KEY SWITCH
38	O	IGNITION POWER SUPPLY
39	L	CANH
40	P	CANH

Connector No.	M66
Wire To	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FW-FH46-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
43	W	BACK DOOR SW
44	LG	REAR WIPER STOP POSITION
45	GR	CENTRAL DOOR LOCK SW
46	BR	CENTRAL DOOR UNLOCK SW
47	BR/Y	DRIVER DOOR SW
48	W/G	REAR LH DOOR SW
50	SB	A/C INDICATOR OUTPUT
54	LG	REAR WIPER OUTPUT


VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >


VEHICLE SECURITY SYSTEM

Connector No.	M67
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FH4G-SA




Terminal No.	Color Of Wire	Signal Name [Specification]
56	L	INTERIOR ROOM LAMP POWER SUPPLY
57	Y	BAT (FUSE)
59	L/B	DRIVER DOOR UNLOCK OUTPUT
60	W/B	TURN SIGNAL LH OUTPUT
61	W/L	TURN SIGNAL RH OUTPUT
63	BR	ROOM LAMP TIMER CONTROL
65	V	ALL DOOR LOCK OUTPUT
66	G	PASSENGER DOOR REAR DOOR UNLOCK OUTPUT
67	B	GROUND
68	L	POWER WINDOW POWER SUPPLY (IGN)
69	P	POWER WINDOW POWER SUPPLY (BAT)
70	Y	BAT (F/L)

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L/Y	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L/R	COMBI SW INPUT 1
7	W/R	KEY CTL UNLOCK SW
8	W/B	KEY CTL LOCK SW
9	R	STOP LAMP SW 1

12	GR	CENTRAL DOOR LOCK SW
13	BR	CENTRAL DOOR UNLOCK SW
14	L/G	OPTICAL SENSOR
15	W/L	REAR WINDOW DEFOGGER SW
17	R/G	OPTICAL SENSOR POWER SUPPLY
18	V	SENSOR GND
21	P/L	NATS ANTENNA AMP.
23	R/Y	SECURITY INDICATOR LAMP
25	L/G	NATS ANTENNA AMP.
27	O	A/C SW
28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW
31	G/B	DR DOOR UNLOCK SENSOR
32	L/G	COMBI SW OUTPUT 5
33	Y/L	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/L	COMBI SW OUTPUT 1
37	G/O	SHIFT SW
38	G/Y	RECEIVER COMM
39	L	CANH
40	P	CANL




Terminal No.	Color Of Wire	Signal Name [Specification]
43	W	BACK DOOR SW
44	LG	REAR WIPER STOP POSITION
45	SB	PASSENGER DOOR SW
46	GR/L	REAR RH DOOR SW
47	BR/Y	DRIVER DOOR SW
48	W/G	REAR LH DOOR SW
50	R/W	BK DR LOCK ACT RELAY CONT
51	W	BACK DOOR REQUEST SW
54	L/G	REAR WIPER OUTPUT SW
55	G	REAR DOOR UNLOCK OUTPUT

Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FH4G-SA




Terminal No.	Color Of Wire	Signal Name [Specification]
43	W	BACK DOOR SW
44	LG	REAR WIPER STOP POSITION
45	SB	PASSENGER DOOR SW
46	GR/L	REAR RH DOOR SW
47	BR/Y	DRIVER DOOR SW
48	W/G	REAR LH DOOR SW
50	R/W	BK DR LOCK ACT RELAY CONT
51	W	BACK DOOR REQUEST SW
54	L/G	REAR WIPER OUTPUT SW
55	G	REAR DOOR UNLOCK OUTPUT

Connector No.	M70
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FW-FH4G-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
56	L	INTERIOR ROOM LAMP POWER SUPPLY
57	Y	BAT (FUSE)
59	G	PASSENGER DOOR UNLOCK OUTPUT
60	W/B	TURN SIGNAL LH OUTPUT
61	W/L	TURN SIGNAL RH OUTPUT
63	BR	ROOM LAMP TIMER CONTROL
65	V	ALL DOOR LOCK OUTPUT
66	L/B	DRIVER DOOR UNLOCK OUTPUT
67	B	GROUND
68	L	POWER WINDOW POWER SUPPLY (IGN)
69	P	POWER WINDOW POWER SUPPLY (BAT)
70	Y	BAT (F/L)

Connector No.	M71
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
72	SB	A/C INDICATOR OUTPUT
75	SB	DRIVER DOOR REQUEST SW
78	L/O	PUSH SW
79	L/G	DRIVER DOOR ANT+
80	BR/Y	PASSENGER DOOR ANT+
81	L/Y	PASSENGER DOOR ANT-
82	W/B	BACK DOOR ANT+

83	B/W	BACK DOOR ANT-
84	Y/G	ROOM ANT+
85	Y/L	ROOM ANT-
86	P	LUGGAGE ROOM ANT+
87	L	LUGGAGE ROOM ANT-
90	W/L	PUSH-BUTTON IGNITION SW ILL POWER
91	Y	ACCION IND
92	BR/V	PUSH-BUTTON IGNITION SW ILL GND
93	GR/W	L-KEY WARN BUZZER
96	BR/W	ACC RELAY CONT
97	L/R	STARTER RELAY CONT
98	BR	IGN RELAY (IPDM E/R) CONT
99	W/R	IGN RELAY CONT
100	G	PASSENGER DOOR REQUEST SW
102	G	SHIFT N/P
103	G/Y	FR DISENGAGE SW
104	Y/B	C/V T SHIFT SELECTOR POWER SUPPLY
105	B/O	STOP LAMP SW 2
106	Y/B	BLOWER FAN MOTOR RELAY CONT



Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CST6-TM4

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/O	-
2	R	-
3	G/R	-
4	G/B	-
5	L	-
6	L	-
7	W/R	-
8	G/W	-
9	Y/L	-
10	W	-
31	GR/L	-
32	UB	-
33	R/Y	-
34	SB	-
35	BR	-

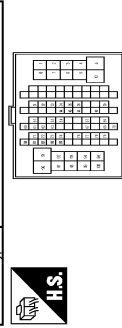

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/O	-
2	R	-
3	G/R	-
4	G/B	-
5	L	-
6	L	-
7	W/R	-
8	G/W	-
9	Y/L	-
10	W	-
31	GR/L	-
32	UB	-
33	R/Y	-
34	SB	-
35	BR	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

JRKWC9349GB

VEHICLE SECURITY SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]


VEHICLE SECURITY SYSTEM

36	G	-	-
39	L/R	-	-
44	G/O	-	-
45	LG/R	-	-
46	GR/W	-	-
48	L/O	-	-
51	BR/W	-	-
53	R/L	-	-
54	O	-	-
57	GR	-	-
59	V	-	-
60	R/W	-	-
61	PU/W	-	-
62	W/L	-	-
63	W/B	-	-
67	Y/R	-	-
69	L/G	-	-
70	SHIELD	-	-
71	P/B	-	-
72	RG	-	-
73	R	-	-
74	L/Y	-	-
76	W/G	-	-
77	GR/R	-	-
78	O	-	-
79	LG	-	-
80	P	-	-
81	L	-	-
82	GR	-	-
83	G/R	-	-
84	B	-	-
91	R	-	-
92	O	-	-
93	Y	-	-
94	R/B	-	-
95	L/W	-	-
96	Y	-	-
97	L	-	-
98	BR/W	-	-
99	W	-	-
100	G/R	-	-

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Type	TH24FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/G	-
2	L/Y	-
3	R	-
4	P/B	-
5	W	-
6	SB	-
7	LG	-
10	GR/B	-
11	G/B	-
12	G/R	-
13	R/G	-
15	R/L	-
16	GR/R	-
17	BR/Y	-
18	PU	-
20	GR/L	-
22	L	-
23	Y/L	-
24	G/W	-



Connector No.	M80
Connector Name	WIRE TO WIRE
Connector Type	TH16FM-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/B	-
2	GR/L	-
5	W	-
6	W/L	-
8	BR/Y	-
9	R/Y	-
11	O	-
13	BR/W	-
14	W/B	-
16	W/G	-

Connector No.	M87
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	TH24FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	G/Y	SIGNAL
4	V	GROUND

JRKWC9350GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000010246096

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition	Value/Status
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
KEY ON SW	Mechanical key is removed from key cylinder	Off
	Mechanical key is inserted to key cylinder	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the lock side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the unlock side	On
DOOR SW-DR	Driver's door closed	Off
	Driver's door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
BACK DOOR SW	Back door closed	Off
	Back door opened	On
LOCK STATUS	NOTE: The item is indicated, but not monitored.	Off
ACC ON SW	Ignition switch OFF	Off
	Ignition switch ACC or ON	On
KEYLESS LOCK	"LOCK" button of key fob is not pressed	Off
	"LOCK" button of key fob is pressed	On
KEYLESS UNLOCK	"UNLOCK" button of key fob is not pressed	Off
	"UNLOCK" button of key fob is pressed	On
SHOCK SENSOR	NOTE: The item is indicated, but not monitored.	NORMAL
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
VEHICLE SPEED	While driving	Equivalent to speedometer reading
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
REVERSE SW CAN	NOTE: The item is indicated, but not used.	Off
		On
TAIL LAMP SW	Lighting switch OFF	Off
	Lighting switch 1ST	On
FR FOG SW	NOTE: The item is indicated, but not monitored.	Off
BUCKLE SW	The seat belt (driver side) is fastened. [Seat belt switch (driver side) OFF]	Off
	The seat belt (driver side) is unfastened. [Seat belt switch (driver side) ON]	On
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off
KYLS TRNK/HAT	NOTE: The item is indicated, but not monitored.	Off
KEYLESS PANIC	PANIC button of key fob is not pressed	Off
	PANIC button of key fob is pressed	On
HI BEAM SW	Lighting switch OFF	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Lighting switch OFF	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Lighting switch OFF	Off
	Lighting switch 2ND	On
AUTO LIGHT SW	NOTE: The item is indicated, but not monitored.	Off
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
PKB SW	Parking brake switch is OFF	Off
	Parking brake switch is ON	On
ENGINE RUN	Engine stopped	Off
	Engine running	On
OPTI SEN (DTCT)	NOTE: The item is indicated, but not monitored.	Close to 5 V
OPTI SEN (FILT)	NOTE: The item is indicated, but not monitored.	Close to 5 V
LIG SEN COND	NOTE: The item is indicated, but not monitored.	OFF
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]


Monitor Item	Condition	Value/Status	
FR WIPER INT	Front wiper switch OFF	Off	A
	Front wiper switch INT	On	
FR WASHER SW	Front washer switch OFF	Off	B
	Front washer switch ON	On	
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7	
FR WIPER STOP	Any position other than front wiper stop position	Off	C
	Front wiper stop position	On	
RR WIPER ON	Rear wiper switch OFF	Off	D
	Rear wiper switch ON	On	
RR WIPER INT	Rear wiper switch OFF	Off	
	Rear wiper switch INT	On	E
RR WASHER SW	Rear washer switch OFF	Off	
	Rear washer switch ON	On	F
RR WIPER STOP	Rear wiper stop position	Off	
	Other than rear wiper stop position	On	G
RAIN SENSOR	NOTE: The item is indicated, but not monitored.	Off	
HAZARD SW	Hazard switch OFF	Off	H
	Hazard switch ON	On	
FAN ON SIG	Blower control dial OFF	Off	
	Other than blower control dial OFF	On	I
AIR COND SW	A/C switch OFF	Off	
	A/C switch ON	On	J
THERMO AMP	Ignition switch ON	Off	
	Evaporator is extremely low temperature	On	
FR DEF SW	Other than A/C mode defroster ON position	Off	SEC
	A/C mode defroster ON position	On	
KEYLESS TRUNK	NOTE: The item is indicated, but not monitored.	Off	L
TRNK OPNR SW	NOTE: The item is indicated, but not monitored.	Off	
TRNK OPN MNTR	NOTE: The item is indicated, but not monitored.	Off	M
HOOD SW	Close the hood	Off	
	Open the hood	On	N
TRANSPONDER	Other than the ignition switch is ON by key registered to BCM.	Off	
	The ignition switch is ON by key registered to BCM.	On	O
INTELLI KEY	NOTE: The item is indicated, but not used.	Off	
AUTO RELOCK	NOTE: The item is indicated, but not monitored.	Off	P
OIL PRESS SW	<ul style="list-style-type: none"> • Ignition switch OFF or ACC • Engine running 	Off	
	Ignition switch ON	On	
BRAKE SW	Brake pedal is not depressed	Off	
	Brake pedal is depressed	On	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

TERMINAL LAYOUT

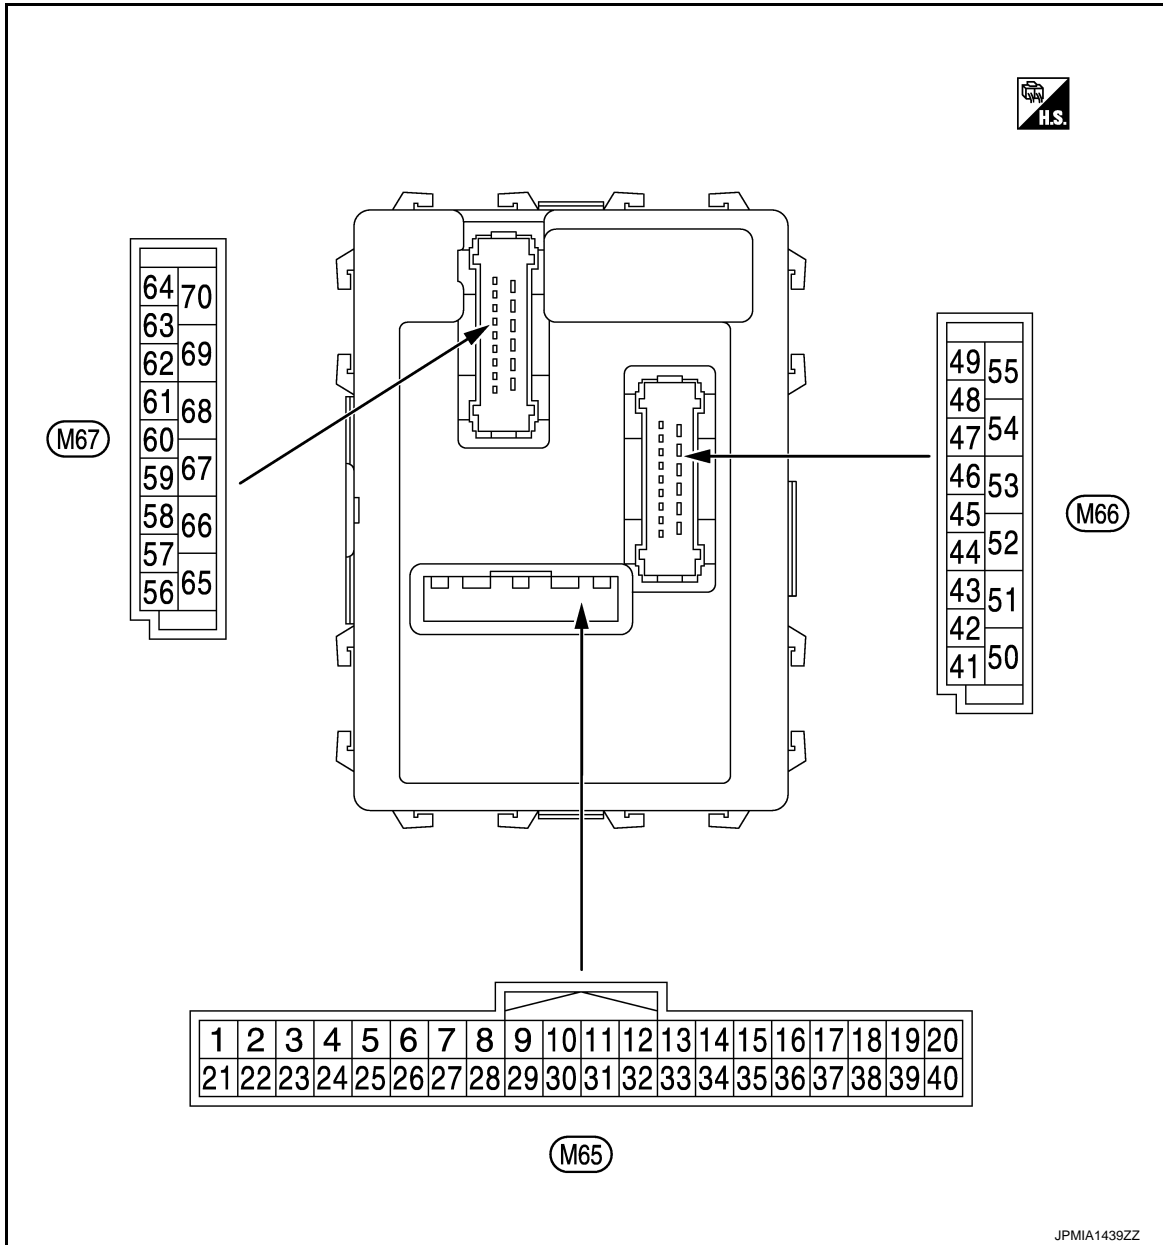

NOTE:

- M65, M66: White
- M67: Black

PHYSICAL VALUES

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
2 (BR/W)	Ground	Combination switch INPUT 5	Input	All switch OFF	0 V
				Turn signal switch RH	
				Lighting switch HI	
				Lighting switch 1ST	
				Lighting switch 2ND	2.0 V
3 (GR)	Ground	Combination switch INPUT 4	Input	All switch OFF	0 V
				Turn signal switch LH	
				Lighting switch PASS	
				Lighting switch 2ND	
4 (L/Y)	Ground	Combination switch INPUT 3	Input	All switch OFF	0 V
				Front wiper switch LO	
				Front wiper switch MIST	
				Front wiper switch INT	

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)		
+	-	Signal name	Input/ Output				
5 (G)	Ground	Combination switch INPUT 2	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V	
					Front washer switch (Wiper intermittent dial 4)		
					Rear washer switch ON (Wiper intermittent dial 4)		
					Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 		1.0 V
					Rear wiper switch ON (Wiper intermittent dial 4)		0.8 V
6 (L/R)	Ground	Combination switch INPUT 1	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V	
					Front wiper switch HI (Wiper intermittent dial 4)		
					Rear wiper switch INT (Wiper intermittent dial 4)		
					Wiper intermittent dial 3 (All switch OFF)		1.0 V
					Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 		1.9 V
					Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 6 • Wiper intermittent dial 7 		0.8 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

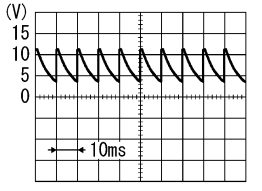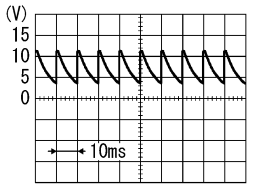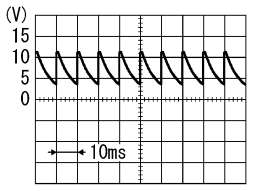Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
7 (W/R)	Ground	Door key cylinder switch UNLOCK	Input	Door key cylin- der switch	NEUTRAL position	 <p style="text-align: center;">7.0 - 8.0 V</p>
					UNLOCK position	
8 (W/B)	Ground	Door key cylinder switch LOCK	Input	Door key cylin- der switch	NEUTRAL position	12 V
					LOCK position	0 V
9 (R)	Ground	Stop lamp switch	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
10 (W/L)	Ground	Rear window defog- ger switch	Input	Rear window defogger switch	OFF (Not pressed)	12 V
					ON (Pressed)	0 V
11 (L/Y)	Ground	Ignition switch ACC	Input	Ignition switch OFF		0 V
				Ignition switch ACC or ON		Battery voltage
12 (SB)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closed)	 <p style="text-align: center;">7.0 - 8.0 V</p>
					ON (When passenger door opened)	
13 (GR/L)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (When rear RH door closed)	 <p style="text-align: center;">7.0 - 8.0 V</p>
					ON (When rear RH door opened)	
18 (V)	Ground	Receiver ground	Input	Ignition switch ON		0 V





A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >






[WITHOUT INTELLIGENT KEY SYSTEM]

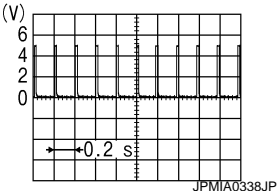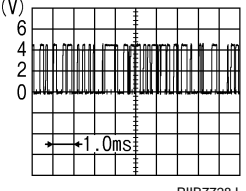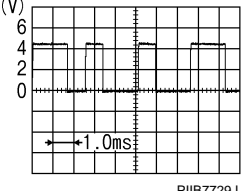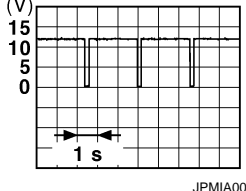Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
19 (BR)	Ground	Remote keyless entry receiver power supply	Input	Insert mechanical key into ignition key cylinder	0 V
				Remove mechanical key from ignition key cylinder (Any door opened)	5 V
				Remove mechanical key from ignition key cylinder (Any door closed)	 <p style="text-align: right; font-size: small;">JPMA0338JP</p>
20 (G/Y)	Ground	Remote keyless entry receiver communication	Input	Insert mechanical key into ignition key cylinder	0 V
				Waiting	 <p style="text-align: right; font-size: small;">PIIB7728J</p>
				Signal receiving	 <p style="text-align: right; font-size: small;">PIIB7729J</p>
21 (P/L)	Ground	NATS antenna amp.	Input/ Output	Just after inserting ignition key in key cylinder	Pointer of tester should move
				Other than above	0 V
23 (R/Y)	Ground	Security indicator	Input	ON	0 V
				Blinking (Ignition switch OFF)	 <p style="text-align: right; font-size: small;">JPMA0014GB</p>
				OFF	12 V
25 (LG)	Ground	NATS antenna amp.	Input/ Output	Just after inserting ignition key in key cylinder	Pointer of tester should move
				Other than above	0 V
26 (GR)	Ground	Thermo control amp.	Input	Ignition switch ON	0 V
				Evaporator is extremely low temperature	12 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

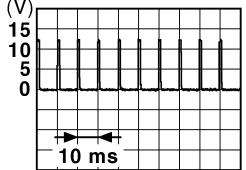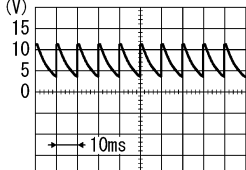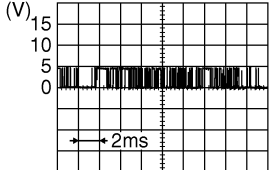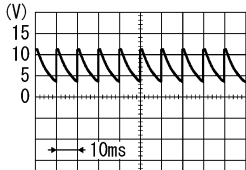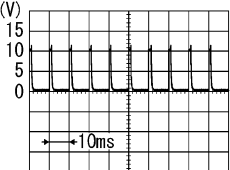Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
27 (Y/G)	Ground	A/C switch	Input	A/C switch	OFF	 <small>JPMIA0012GB</small> 1.0 - 1.5 V
				A/C switch	ON	0 V
28 (G/W)	Ground	Blower fan switch	Input	Fan switch	Blower fan switch OFF	 <small>PKIB4960J</small> 7.0 - 8.0 V
				Fan switch	Blower fan switch ON	0 V
29 (L/W)	Ground	Hazard switch	Input	Hazard switch	OFF	Battery voltage
				Hazard switch	ON	0 V
31 (G/Y)	Ground	Front defroster switch	Input	Ignition switch	ON	0 V
				Ignition switch	Other than A/C mode defroster ON position	 <small>JPMIA0589GB</small> 8.0 - 9.0 V
32 (LG)	Ground	Combination switch OUTPUT 5	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <small>PKIB4960J</small> 7.0 - 8.0 V
				Combination switch	Rear wiper switch ON (Wiper intermittent dial 4)	 <small>PKIB4956J</small> 1.0 V
				Combination switch	Any of the condition below with all switch OFF	<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7







A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[WITHOUT INTELLIGENT KEY SYSTEM]

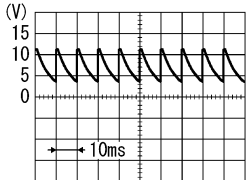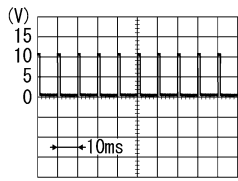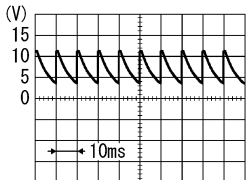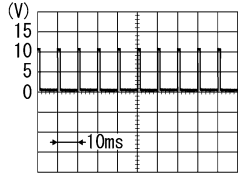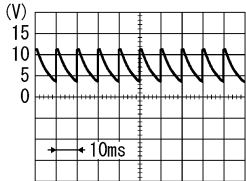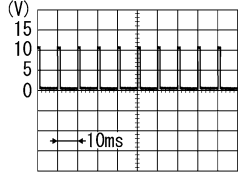Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
33 (Y/L)	Ground	Combination switch OUTPUT 4	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">7.0 - 8.0 V</p>
					Lighting switch 1ST (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">1.2 V</p>
					Rear wiper switch INT (Wiper intermittent dial 4)	
					Any of the condition below with all switch OFF	
<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 						
34 (W)	Ground	Combination switch OUTPUT 3	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">7.0 - 8.0 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">1.2 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	
					Rear washer switch ON (Wiper intermittent dial 4)	
<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 						
35 (R/L)	Ground	Combination switch OUTPUT 2	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">7.0 - 8.0 V</p>
					Lighting switch 2ND	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">1.2 V</p>
					Lighting switch PASS	
					Front wiper switch INT	
Front wiper switch HI						

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

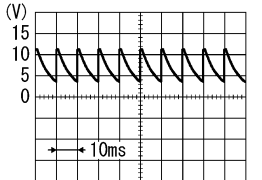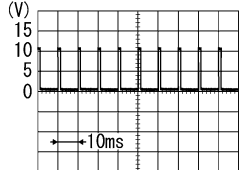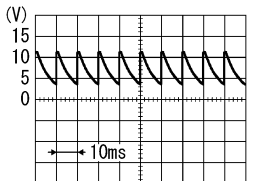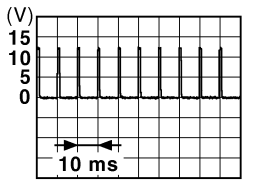Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
36 (L/O)	Ground	Combination switch OUTPUT 1	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 7.0 - 8.0 V
					Turn signal switch RH	 1.2 V
					Turn signal switch LH	
					Front wiper switch LO (Front wiper switch MIST)	
Front washer switch ON						
37 (R/W)	Ground	Key switch	Input	Insert mechanical key into ignition key cylinder	Battery voltage	
				Remove mechanical key from ignition key cylinder	0 V	
38 (O)	Ground	Ignition switch ON	Input	Ignition switch OFF or ACC	0 V	
				Ignition switch ON	Battery voltage	
39 (L)	Ground	CAN-H	Input/ Output	—	—	
40 (P)	Ground	CAN-L	Input/ Output	—	—	
43 (W)	Ground	Back door switch	Input	Back door switch	OFF (When back door closed) ON (When back door opened)	 7.0 - 8.0 V
					0 V	
44 (LG)	Ground	Rear wiper stop po- sition	Input	Ignition switch ON	Rear wiper stop position	12 V
					Any position other than rear wiper stop position	0 V
45 (GR)	Ground	Door lock and unlock switch LOCK	Input	Door lock and unlock switch	NEUTRAL position	 1.0 - 1.5 V
					LOCK position	0 V




A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

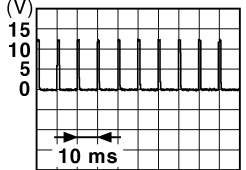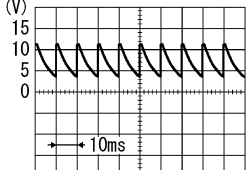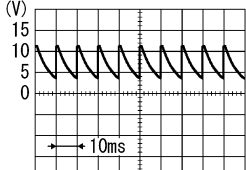Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
46 (BR)	Ground	Door lock and unlock switch UNLOCK	Input	Door lock and unlock switch	NEUTRAL position	 <small>JPMIA0012GB</small> 1.0 - 1.5 V
					UNLOCK position	0 V
47 (BR/Y)	Ground	Driver door switch	Input	Driver door switch	OFF (When driver door closed)	 <small>PKIB4960J</small> 7.0 - 8.0 V
					ON (When driver door opened)	0 V
48 (W/G)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (When rear LH door closed)	 <small>PKIB4960J</small> 7.0 - 8.0 V
					ON (When rear LH door opened)	0 V
50 (SB)	Ground	A/C indicator	Output	A/C indicator	OFF	12 V
					ON	0 V
54 (LG)	Ground	Rear wiper	Output	Ignition switch ON	Rear wiper switch OFF	0 V
					Rear wiper switch ON	12 V
56 (L)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)	0 V	
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)	12 V	
57 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage	
59 (L/B)	Ground	Driver door UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
60 (W/B)	Ground	Turn signal LH	Output	Ignition switch OFF	0 V
				Ignition switch ON	Turn signal switch LH
61 (W/L)	Ground	Turn signal RH	Output	Ignition switch OFF	0 V
				Ignition switch ON	Turn signal switch RH
63 (BR)	Ground	Interior room lamp control signal	Output	Interior room lamp OFF	12 V
				Interior room lamp ON	0 V
65 (V)	Ground	All doors LOCK	Output	All doors LOCK (Actuator is activated)	12 V
				All doors Other than LOCK (Actuator is not activated)	0 V
66 (G)	Ground	Passenger door and rear door UNLOCK	Output	Passenger door and rear door UNLOCK (Actuator is activated)	12 V
				Passenger door and rear door Other than UNLOCK (Actuator is not activated)	0 V
67 (B)	Ground	Ground	Output	Ignition switch ON	0 V
68 (L)	Ground	P/W power supply (IGN)	Output	Ignition switch ON	12 V
69 (P)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF	12 V
70 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage


A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

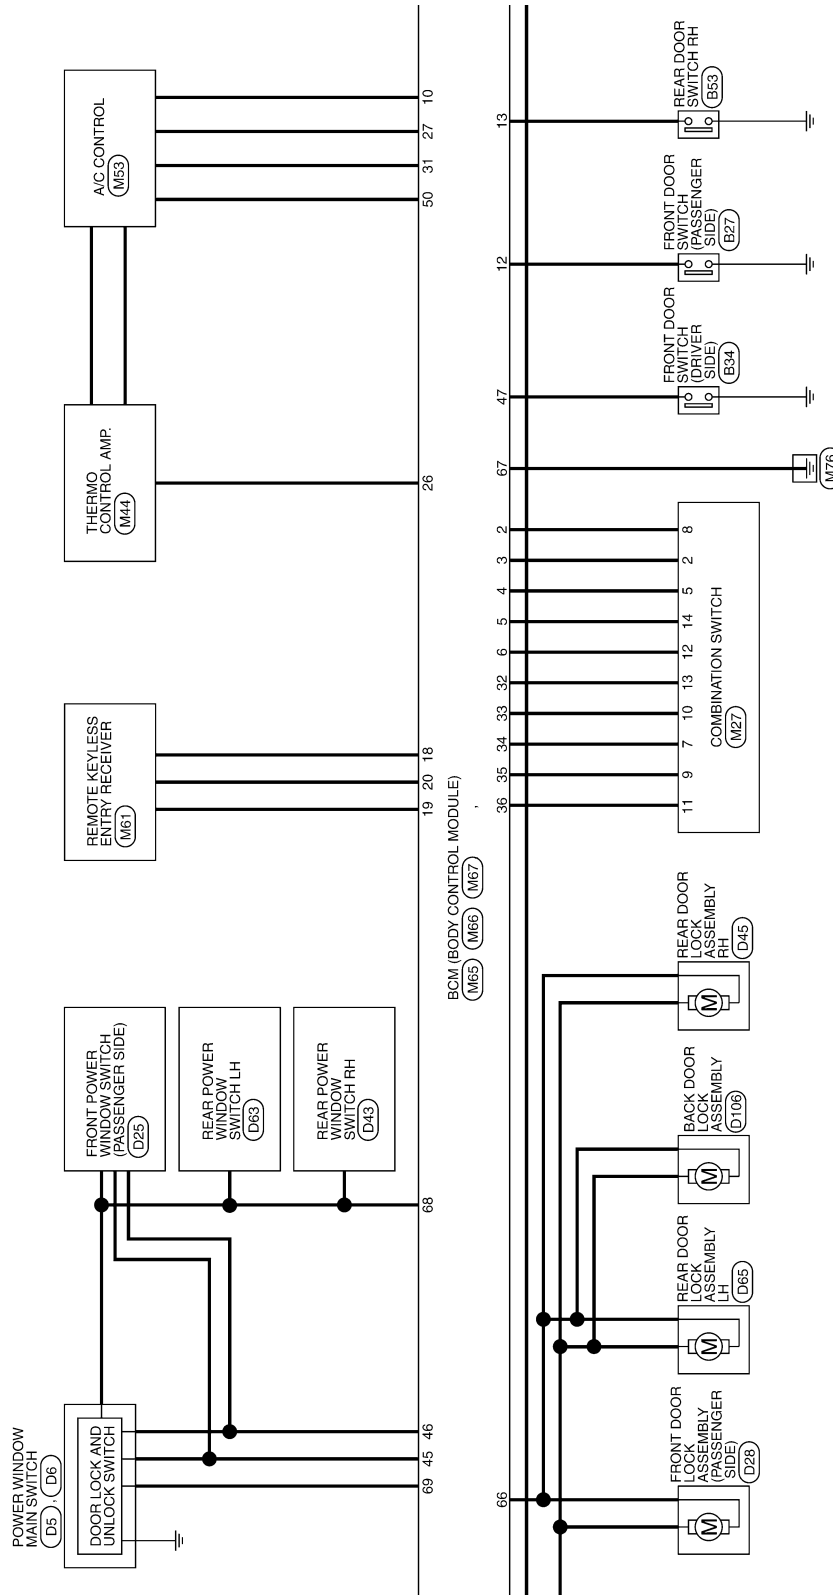

JRMWE7717GB


A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

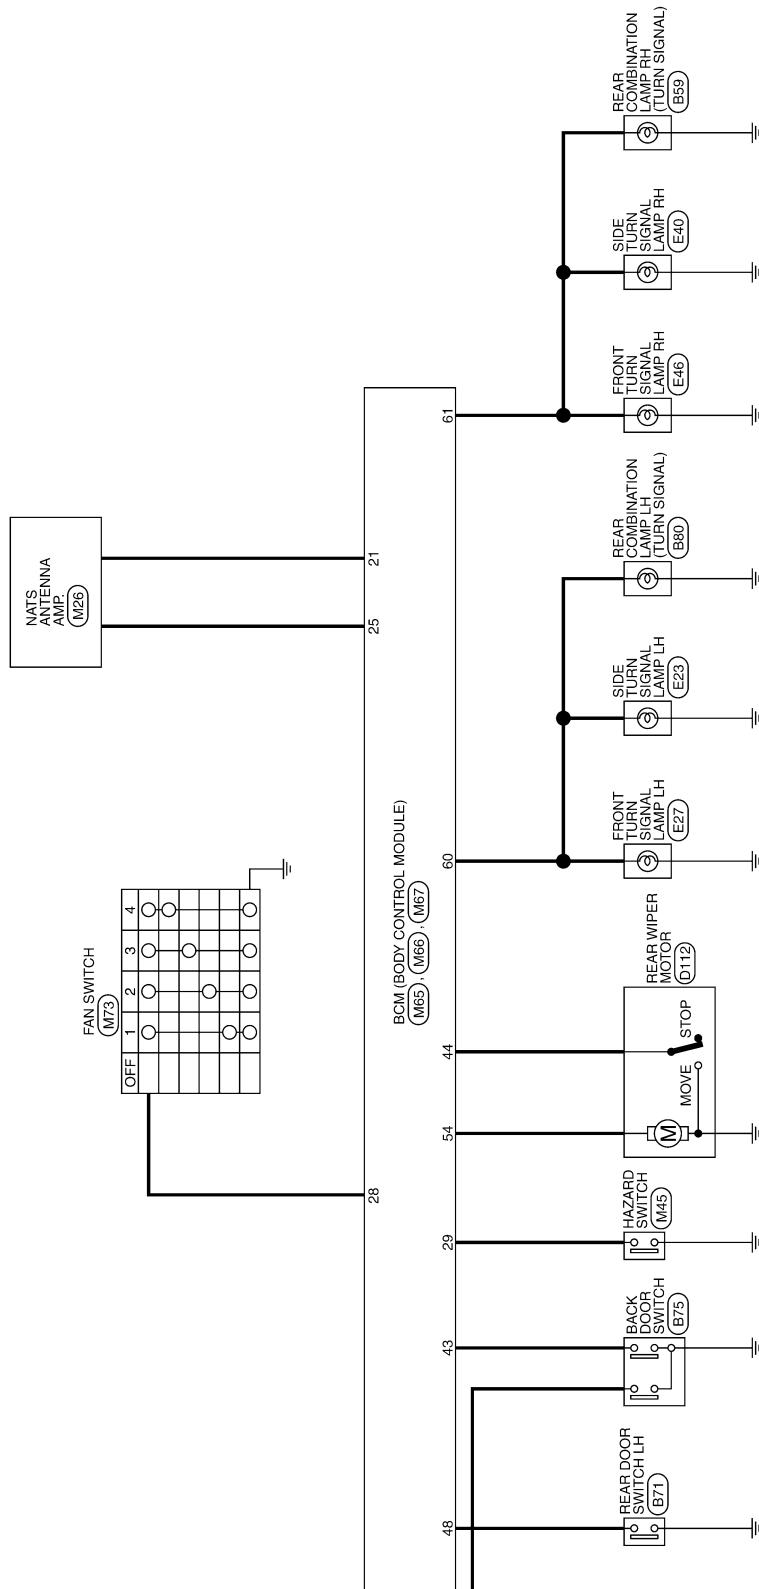

JRMWE7718GB



BCM (BODY CONTROL MODULE)

[WITHOUT INTELLIGENT KEY SYSTEM]

< ECU DIAGNOSIS INFORMATION >



BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY)

Connector No. B11
Connector Name LUGGAGE ROOM LAMP
Connector Type C104FV



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	L	-

Connector No. B27
Connector Name FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type TH04FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	L	-

Connector No. B34
Connector Name FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type TH04FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	B	-
4	W	-
5	R	-
6	V	-

Connector No. B71
Connector Name REAR DOOR SWITCH-LH
Connector Type TH04FV-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	B	-
4	W	-
5	R	-
6	V	-



Connector No. B75
Connector Name BACK DOOR SWITCH
Connector Type TH04FV-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	W	-



WITHOUT INTELLIGENT KEY SYSTEM

Connector No. B80
Connector Name REAR COMBINATION LAMP LH
Connector Type RS06FB-FR

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	B	-
4	B	-
5	R	-
6	GR	-

Connector No. D5
Connector Name POWER WINDOW MAIN SWITCH
Connector Type NST6FW-CS

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	O	-
5	Y	-
6	V	-
7	LG	-
8	BR	-
9	V	-
10	L	-
11	GR	-
12	SB	-
13	W	-
15	G	-
16	W	-

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

JRMWE7826GB



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]



BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY)

Connector No. D6
Connector Name POWER WINDOW MAIN SWITCH
Connector Type NS08FMV-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
17	B	-
18	GR	-
19	P	-

Connector No. D9
Connector Name FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type E06F-GY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	SB	-
3	G	-
4	B	-
5	L	-
6	W	-

Connector No. D25
Connector Name FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type NS12FMV-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BR	-
3	B	-
6	Y	-
7	R	-
8	L	-
11	SB	-
12	W	-

Connector No. D28
Connector Name FRONT DOOR LOCK ASSEMBLY (PASSENGER SIDE)
Connector Type E06F-GY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
5	V	-
6	Y	-

Connector No. D43
Connector Name REAR POWER WINDOW SWITCH RH
Connector Type NS08FMV-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	BR	-
3	O	-
4	G	-
5	R	-

Connector No. D45
Connector Name REAR DOOR LOCK ASSEMBLY RH
Connector Type E06F-GY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
5	W	-
6	P	-

Connector No. D63
Connector Name REAR POWER WINDOW SWITCH LH
Connector Type NS08FMV-CS

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	BR	-
3	O	-
4	G	-
5	R	-

Connector No. D65
Connector Name REAR DOOR LOCK ASSEMBLY LH
Connector Type E06F-GY-RS










Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	G	-

JRMWE7827GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY)																																						
<table border="1"> <tr><td>Connector No.</td><td>D106</td></tr> <tr><td>Connector Name</td><td>BACK DOOR LOCK ASSEMBLY</td></tr> <tr><td>Connector Type</td><td>FEA04FB-FH2-LC</td></tr> </table> 	Connector No.	D106	Connector Name	BACK DOOR LOCK ASSEMBLY	Connector Type	FEA04FB-FH2-LC	<table border="1"> <tr><td>Connector No.</td><td>E11</td></tr> <tr><td>Connector Name</td><td>POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)</td></tr> <tr><td>Connector Type</td><td>M06FELC</td></tr> </table> 	Connector No.	E11	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Type	M06FELC	<table border="1"> <tr><td>Connector No.</td><td>E27</td></tr> <tr><td>Connector Name</td><td>FRONT TURN SIGNAL LAMP LH</td></tr> <tr><td>Connector Type</td><td>RS02FB</td></tr> </table> 	Connector No.	E27	Connector Name	FRONT TURN SIGNAL LAMP LH	Connector Type	RS02FB																		
Connector No.	D106																																					
Connector Name	BACK DOOR LOCK ASSEMBLY																																					
Connector Type	FEA04FB-FH2-LC																																					
Connector No.	E11																																					
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)																																					
Connector Type	M06FELC																																					
Connector No.	E27																																					
Connector Name	FRONT TURN SIGNAL LAMP LH																																					
Connector Type	RS02FB																																					
<table border="1"> <tr><td>Terminal No.</td><td>2</td><td>GR</td><td>Y</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	2	GR	Y	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>9</td><td>BTW</td><td>W</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	9	BTW	W	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>1</td><td>L</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	1	L	-	Terminal Color Of Wire				Signal Name [Specification]			
Terminal No.	2	GR	Y																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	9	BTW	W																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	1	L	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
<table border="1"> <tr><td>Connector No.</td><td>D12</td></tr> <tr><td>Connector Name</td><td>REAR WIPER MOTOR</td></tr> <tr><td>Connector Type</td><td>CJ04FM-TV</td></tr> </table> 	Connector No.	D12	Connector Name	REAR WIPER MOTOR	Connector Type	CJ04FM-TV	<table border="1"> <tr><td>Connector No.</td><td>E12</td></tr> <tr><td>Connector Name</td><td>POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)</td></tr> <tr><td>Connector Type</td><td>NS08FBCS</td></tr> </table> 	Connector No.	E12	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Type	NS08FBCS	<table border="1"> <tr><td>Connector No.</td><td>E40</td></tr> <tr><td>Connector Name</td><td>SIDE TURN SIGNAL LAMP RH</td></tr> <tr><td>Connector Type</td><td>ISTL02FW</td></tr> </table> 	Connector No.	E40	Connector Name	SIDE TURN SIGNAL LAMP RH	Connector Type	ISTL02FW																		
Connector No.	D12																																					
Connector Name	REAR WIPER MOTOR																																					
Connector Type	CJ04FM-TV																																					
Connector No.	E12																																					
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)																																					
Connector Type	NS08FBCS																																					
Connector No.	E40																																					
Connector Name	SIDE TURN SIGNAL LAMP RH																																					
Connector Type	ISTL02FW																																					
<table border="1"> <tr><td>Terminal No.</td><td>1</td><td>P</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	1	P	-	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>18</td><td>Y</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	18	Y	-	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>1</td><td>W</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	1	W	-	Terminal Color Of Wire				Signal Name [Specification]			
Terminal No.	1	P	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	18	Y	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	1	W	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
<table border="1"> <tr><td>Connector No.</td><td>E13</td></tr> <tr><td>Connector Name</td><td>POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)</td></tr> <tr><td>Connector Type</td><td>TH12FM-NH</td></tr> </table> 	Connector No.	E13	Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	Connector Type	TH12FM-NH	<table border="1"> <tr><td>Connector No.</td><td>E23</td></tr> <tr><td>Connector Name</td><td>SIDE TURN SIGNAL LAMP LH</td></tr> <tr><td>Connector Type</td><td>ISTL02FW</td></tr> </table> 	Connector No.	E23	Connector Name	SIDE TURN SIGNAL LAMP LH	Connector Type	ISTL02FW	<table border="1"> <tr><td>Connector No.</td><td>E40</td></tr> <tr><td>Connector Name</td><td>SIDE TURN SIGNAL LAMP RH</td></tr> <tr><td>Connector Type</td><td>ISTL02FW</td></tr> </table> 	Connector No.	E40	Connector Name	SIDE TURN SIGNAL LAMP RH	Connector Type	ISTL02FW																		
Connector No.	E13																																					
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)																																					
Connector Type	TH12FM-NH																																					
Connector No.	E23																																					
Connector Name	SIDE TURN SIGNAL LAMP LH																																					
Connector Type	ISTL02FW																																					
Connector No.	E40																																					
Connector Name	SIDE TURN SIGNAL LAMP RH																																					
Connector Type	ISTL02FW																																					
<table border="1"> <tr><td>Terminal No.</td><td>24</td><td>G</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	24	G	-	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>28</td><td>P</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	28	P	-	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>1</td><td>L</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	1	L	-	Terminal Color Of Wire				Signal Name [Specification]			
Terminal No.	24	G	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	28	P	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	1	L	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
<table border="1"> <tr><td>Terminal No.</td><td>9</td><td>BTW</td><td>W</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	9	BTW	W	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>30</td><td>SB</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	30	SB	-	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>1</td><td>W</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	1	W	-	Terminal Color Of Wire				Signal Name [Specification]			
Terminal No.	9	BTW	W																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	30	SB	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	1	W	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
<table border="1"> <tr><td>Terminal No.</td><td>10</td><td>BTW</td><td>W</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	10	BTW	W	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>31</td><td>W</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	31	W	-	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>2</td><td>BTW</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	2	BTW	-	Terminal Color Of Wire				Signal Name [Specification]			
Terminal No.	10	BTW	W																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	31	W	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	2	BTW	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
<table border="1"> <tr><td>Terminal No.</td><td>13</td><td>W</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	13	W	-	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>33</td><td>O</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	33	O	-	Terminal Color Of Wire				Signal Name [Specification]				<table border="1"> <tr><td>Terminal No.</td><td>2</td><td>BY</td><td>-</td></tr> <tr><td>Terminal Color Of Wire</td><td></td><td></td><td></td></tr> <tr><td>Signal Name [Specification]</td><td></td><td></td><td></td></tr> </table>	Terminal No.	2	BY	-	Terminal Color Of Wire				Signal Name [Specification]			
Terminal No.	13	W	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	33	O	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						
Terminal No.	2	BY	-																																			
Terminal Color Of Wire																																						
Signal Name [Specification]																																						

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

JRMWE7828GB



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]



BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY)

Connector No. E146
Signal Name FRONT TURN SIGNAL LAMP RH
Connector Type RS02FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	BY	-

Connector No. E114
Signal Name STOP LAMP SWITCH
Connector Type M02PE-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	BY	-

Connector No. E115
Signal Name STOP LAMP SWITCH
Connector Type M04FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	O	-
4	G	-

Connector No. M4
Signal Name DATA LINK CONNECTOR
Connector Type BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	O	-
4	G	-
5	B	-
6	L	-
7	GR/R	-
8	O	-
14	P	-
16	LG/R	-

Connector No. M24
Signal Name KEY SWITCH
Connector Type TK06MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	RGW	-
2	LG/R	-

Connector No. M26
Signal Name NATS ANTENNA AMP.
Connector Type TH04FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BAT
2	P/L	CLK
3	B	GND [Without Intelligent Key]
4	LG	DATA [With Intelligent Key]
4	B	GND [With Intelligent Key]
4	LG	DATA [Without Intelligent Key]

Connector No. M27
Signal Name COMBINATION SWITCH
Connector Type TH04FW-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
1	O/B	WASHER (RR)
2	GR	OUTPUT 4
3	RG	WASHER (FR)
4	W	IGN
6	LY	OUTPUT 3
6	B	GROUND
7	V	INPUT 3
8	BRW	OUTPUT 5
9	R/L	INPUT 2
10	Y/L	INPUT 4
11	L/O	INPUT 1
12	L/R	OUTPUT 1
13	LG	INPUT 5
14	G	OUTPUT 2

Connector No. M34
Signal Name COMBINATION METER
Connector Type TH04FW-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CANH
2	P	CANL
3	V	VEHICLE SPEED SIGNAL (2-PULSE)
4	L	VEHICLE SPEED SIGNAL (8-PULSE) [Without NWV]
4	VR	VEHICLE SPEED SIGNAL (8-PULSE) [With NWV]
6	BRY	FUEL LEVEL SENSOR SIGNAL

JRMWE7829GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY)

Connector No.	Signal Name	Color	Wire
7	AIR BAG SIGNAL	R/G	
8	OVERDRIVE CONTROL SWITCH SIGNAL	P	
9	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)	O	
10	PARKING BRAKE SWITCH SIGNAL	SB	
11	HAZARD SWITCH SIGNAL	G/R	
13	ILLUMINATION CONTROL SIGNAL	B/R	
15	ACC POWER SUPPLY	L/Y	
18	SECURITY SIGNAL	R/Y	
19	AMBIENT SENSOR SIGNAL	P/W	
20	AMBIENT SENSOR GROUND	R/W	
21	GROUND	B	
22	GROUND	B	
23	GROUND	B	
24	FUEL LEVEL SENSOR GROUND	PU	
25	VDC GROUND	B	
27	BATTERY POWER SUPPLY	L/G/R	
28	IGNITION SIGNAL	GR	
29	PASSENGER SEAT BELT WARNING SIGNAL	BR	
31	AC AUTO AMP CONNECTOR (ELECTRICAL SOURCE)	R	
35	ENGINE COOLANT TEMPERATURE SIGNAL	BR	
38	ALTERNATOR SIGNAL	GR	

Connector No.	M44
Connector Name	THERMO CONTROL AMP.
Connector Type	506FW



Terminal No.	Color	Wire	Signal Name
1	Y		
2	GR		
3	B		
4	V		
5	B/W		

Connector No.	M45
Connector Name	HAZARD SWITCH
Connector Type	TK04FW



Terminal No.	Color	Wire	Signal Name
1	B		
2	L/W		
3	W		
4	B/R		

Connector No.	M53
Connector Name	A/C CONTROL
Connector Type	TH16FW-NH




Terminal No.	Color	Wire	Signal Name
1	W		
4	R		
5	W/L		
6	G/Y		
8	G		
9	B/R		
10	B/W		
11	V		
12	Y/R		
13	SB		
14	Y		
15	B		
16	L		

Connector No.	M61
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	TK04FW



Terminal No.	Color	Wire	Signal Name
1	V		
2	G/Y		
4	BR		


Connector No.	M65
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH



Terminal No.	Color	Wire	Signal Name
2	BR/W		COMBI SW INPUT 5
3	GR		COMBI SW INPUT 4
4	L/Y		COMBI SW INPUT 3
5	G		COMBI SW INPUT 2
6	L/R		COMBI SW INPUT 1
7	W/R		KEY CYL LOCK SW
8	W/B		KEY CYL LOCK SW
9	R		STOP LAMP SW
10	W/L		REAR WINDOW DEFOGGER SW
11	L/Y		ACC POWER SUPPLY
12	SB		PASSENGER DOOR SW
13	GB/L		REAR RH DOOR SW
14	V		RECEIVER SENSOR GND
18	BR		KEYLESS ENTRY RECEIVER POWER SUPPLY
20	G/Y		KEYLESS ENTRY RECEIVER COMM
21	P/L		NAIS ANTENNA AMP.
23	R/Y		SECURITY INDICATOR LAMP

Terminal No.	Color	Wire	Signal Name
25	LG		NAIS ANTENNA AMP.
26	GR		THERMO CONTROL AMP.
27	Y/G		A/C SW
28	G/W		BLOWER FAN SW
29	L/W		HAZARD SW
31	G/Y		FR DEFROSTER SW
32	LG		COMBI SW OUTPUT 5
33	Y/L		COMBI SW OUTPUT 4
34	W		COMBI SW OUTPUT 3
35	R/L		COMBI SW OUTPUT 2
36	L/O		COMBI SW OUTPUT 1
37	R/W		KEY SWITCH
38	O		IGNITION POWER SUPPLY
39	L		CANH
40	P		CANL

Connector No.	M66
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FE406FW-FH46-SA



Terminal No.	Color	Wire	Signal Name
43	W		BACK DOOR SW
44	LG		REAR WIPER STOP POSITION
45	GR		CENTRAL DOOR LOCK SW
46	BR		CENTRAL DOOR UNLOCK SW
47	B/R		DRIVER DOOR SW
48	W/G		REAR LH DOOR SW
50	SB		A/C INDICATOR OUTPUT
54	LG		REAR WIPER OUTPUT

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]



BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY)

Connector No.	M67
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FHAG-SA

Terminal No.	Wire	Signal Name [Specification]
56	L	INTERIOR ROOM LAMP POWER SUPPLY
57	Y	BAT (ELISE)
59	L/B	DRIVER DOOR UNLOCK OUTPUT
60	W/B	TURN SIGNAL LH OUTPUT
61	W/L	TURN SIGNAL RH OUTPUT
63	BR	ROOM LAMP TIMER CONTROL
65	V	ALL DOOR LOCK OUTPUT
66	G	PASSENGER DOOR REAR DOOR UNLOCK OUTPUT
67	B	GROUND
68	L	POWER WINDOW POWER SUPPLY (IGN)
69	P	POWER WINDOW POWER SUPPLY (BAT)
70	Y	BAT (FL)



Connector No.	M73
Connector Name	FAN SWITCH
Connector Type	M08FW-LC

Terminal No.	Wire	Signal Name [Specification]
1	R	-
2	W	-
3	B	-
4	Y	-
5	L	-
6	GW	-



WITHOUT INTELLIGENT KEY

Connector No.	R4
Connector Name	MAP LAMP
Connector Type	GAA06FW

Terminal No.	Wire	Signal Name [Specification]
2	LG	-
3	B	-
4	Y	-

Connector No.	R6
Connector Name	ROOM LAMP
Connector Type	C02FW

Terminal No.	Wire	Signal Name [Specification]
1	Y	-
2	BR	-

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JRMWE7831GB

INFOID:0000000010246098

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper auto stop signal.

When the rear wiper auto stop signal does not change more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. Pass more than 1 minute after the rear wiper stop.
2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

DTC Inspection Priority Chart

INFOID:0000000010246099

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none">• U1000: CAN COMM• U1010: CONTROL UNIT (CAN)
2	<ul style="list-style-type: none">• B2190: NATS ANTENNA AMP• B2191: DIFFERENCE OF KEY• B2192: ID DISCORD BCM-ECM• B2193: CHAIN OF BCM-ECM• B2195: ANTI SCANNING
3	C1735: IGN CIRCUIT OPEN
4	<ul style="list-style-type: none">• C1704: LOW PRESSURE FL• C1705: LOW PRESSURE FR• C1706: LOW PRESSURE RR• C1707: LOW PRESSURE RL• C1708: [NO DATA] FL• C1709: [NO DATA] FR• C1710: [NO DATA] RR• C1711: [NO DATA] RL• C1716: [PRESSDATA ERR] FL• C1717: [PRESSDATA ERR] FR• C1718: [PRESSDATA ERR] RR• C1719: [PRESSDATA ERR] RL• C1729: VHCL SPEED SIG ERR

SEC

DTC Index

INFOID:0000000010246100

NOTE:

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

CONSULT display	Fail-safe	Tire pressure monitor warn- ing lamp ON	Reference
U1000: CAN COMM	—	—	BCS-120
U1010: CONTROL UNIT (CAN)	—	—	BCS-121
B2190: NATS ANTENNA AMP	×	—	SEC-197
B2191: DIFFERENCE OF KEY	×	—	SEC-200
B2192: ID DISCORD BCM-ECM	×	—	SEC-201
B2193: CHAIN OF BCM-ECM	×	—	SEC-202
B2195: ANTI SCANNING	×	—	SEC-203
C1704: LOW PRESSURE FL	—	×	WT-26
C1705: LOW PRESSURE FR	—	×	
C1706: LOW PRESSURE RR	—	×	
C1707: LOW PRESSURE RL	—	×	
C1708: [NO DATA] FL	—	×	WT-28
C1709: [NO DATA] FR	—	×	
C1710: [NO DATA] RR	—	×	
C1711: [NO DATA] RL	—	×	
C1716: [PRESS DATA ERR] FL	—	×	WT-31
C1717: [PRESS DATA ERR] FR	—	×	
C1718: [PRESS DATA ERR] RR	—	×	
C1719: [PRESS DATA ERR] RL	—	×	
C1729: VHCL SPEED SIG ERR	—	×	WT-33
C1735: IGN CIRCUIT OPEN	—	—	BCS-122

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000010246101

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1/2/3/4
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND, HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N (CVT models)	Off
		Selector lever in P or N position (CVT models)	On
ST RLY -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
DTRL REQ	NOTE: The item is indicated, but not monitored.		Off
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
HOOD SW	NOTE: The item is indicated, but not monitored.		Off

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Monitor Item	Condition	Value/Status
THFT HRN REQ	Not operation	Off
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	On
HORN CHIRP	Not operating	Off
	Door locking with key fob (horn chirp mode)	On

TERMINAL LAYOUT

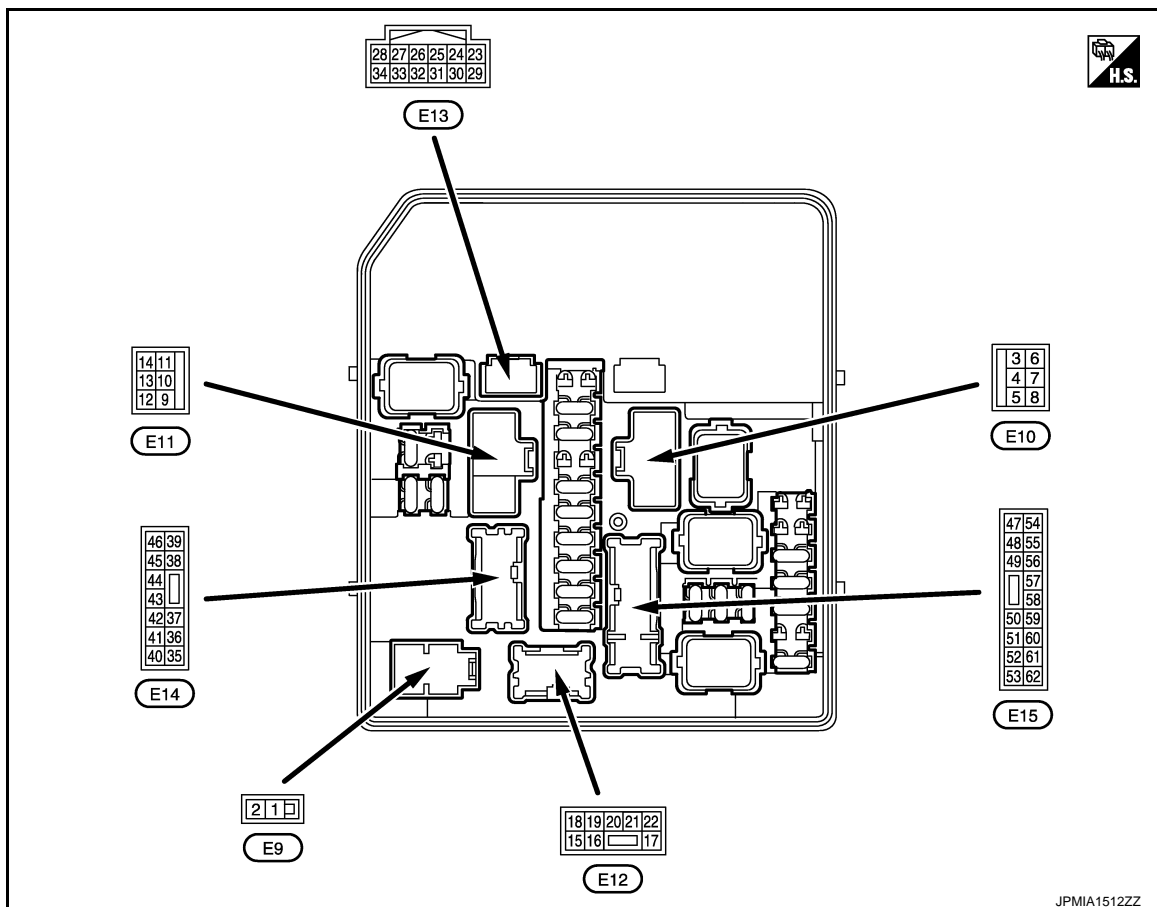

PHYSICAL VALUES

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (G)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
3 (BR)	Ground	Starter motor	Output	Ignition switch ON	0 V
				At engine cranking	Battery voltage
5 (LG)	Ground	Cooling fan relay-1 power supply	Output	Cooling fan OFF	0 V
				Cooling fan operated	Battery voltage
6 (SB)	Ground	Ignition switch START	Output	Any position other ignition switch START	0 V
				Ignition switch START	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
7 (Y)	Ground	Cooling fan relay-2 power supply	Output	Cooling fan OFF		0 V
				Cooling fan LO operated		9.0 V
				Cooling fan HI operated		Battery voltage
8 (V)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
9 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
10 (L)	Ground	Cooling fan motor ground	Output	Cooling fan OFF		0 V
				Cooling fan LO operated		5.0 V
				Cooling fan HI operated		0 V
13 (W)	Ground	Rear window defogger	Output	Ignition switch OFF	Rear window defogger switch OFF	0 V
				Ignition switch ON	Rear window defogger switch ON	Battery voltage
18 (Y)	Ground	Ignition switch	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
19 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
21 (W)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND	Front fog lamp switch OFF	0 V
					Front fog lamp switch ON	Battery voltage
22 (V)	Ground	Front fog lamp (LH)	Output	Lighting switch 2ND	Front fog lamp switch OFF	0 V
					Front fog lamp switch ON	Battery voltage
24 (G)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage
25 (Y)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
26 (P)	Ground	CAN-L	Input/ Output	—		—
27 (L)	Ground	CAN-H	Input/ Output	—		—
31 (W)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> • Approximately 1 second after turning the ignition switch ON • Engine running 		0 - 1.5 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

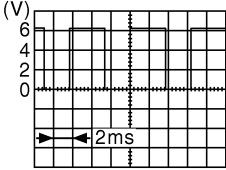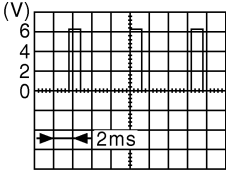Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
33 (O)	Ground	Power generation command signal	Output	Ignition switch ON	Battery voltage
				40 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 <p style="text-align: right; font-size: small;">JPMIA0002GB</p>
				80 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 <p style="text-align: right; font-size: small;">JPMIA0003GB</p>
34 (R)	Ground	Horn relay control	Output	The horn is deactivated	Battery voltage
				The horn is activated	0 V
36 (O)	Ground	Parking lamp (LH)	Output	Ignition switch OFF	Lighting switch OFF
				Ignition switch ON	Lighting switch 1ST
37 (V)	Ground	Parking lamp (RH)	Output	Ignition switch OFF	Lighting switch OFF
				Ignition switch ON	Lighting switch 1ST
38 (G)	Ground	Tail lamp (RH) & illuminations	Output	Ignition switch OFF	Lighting switch OFF
				Ignition switch ON	Lighting switch 1ST
39 (V)	Ground	Front wiper HI	Output	Ignition switch OFF	Front wiper switch OFF
				Ignition switch ON	Front wiper switch HI
40 (R)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	0 - 1.5 V
41 (SB)	Ground	Tail lamp (LH) & license plate lamps	Output	Ignition switch OFF	Lighting switch OFF
				Ignition switch ON	Lighting switch 1ST
43 (G)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
44 (P)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
45 (Y)	Ground	TCM power supply	Output	Ignition switch OFF	Battery voltage
46 (O)	Ground	Front wiper LO	Output	Ignition switch OFF	0 V
				Ignition switch ON	Front wiper switch LO
47 (BR)	Ground	Transmission range switch*1	Input	Select lever in any position other than P or N (Ignition switch ON)	0 V
				Select lever P or N (Ignition switch ON)	Battery voltage
		Clutch interlock switch*2	Input	Release the clutch pedal	0 V
				Depress the clutch pedal	Battery voltage
49 (W)	Ground	Headlamp HI (RH)	Output	Ignition switch OFF	0 V
				Ignition switch ON	<ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS
50 (GR)	Ground	Headlamp HI (LH)	Output	Ignition switch OFF	0 V
				Ignition switch ON	<ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS
51 (R)	Ground	Headlamp LO (LH)	Output	Ignition switch OFF	0 V
				Ignition switch ON	Lighting switch 2ND
52 (P)	Ground	Headlamp LO (RH)	Output	Ignition switch OFF	0 V
				Ignition switch ON	Lighting switch 2ND
54 (GR)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
55 (P)	Ground	Fuel pump power supply	Output	Approximately 1 second or more than after turning the ignition switch ON	0 V
				<ul style="list-style-type: none"> • Approximately 1 second after turning the ignition switch ON • Engine running 	Battery voltage
56 (SB)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF
				<ul style="list-style-type: none"> • A/C switch ON (A/C compressor is operating) 	Battery voltage
57 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF	0 - 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON	0 - 1.0 V

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
58 (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
59 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
60 (V)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
61 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
62 (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage

*2: CVT models

*3: M/T models

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Wiring Diagram — IPDM E/R —

INFOID:000000010246102

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (WITHOUT INTELLIGENT KEY)

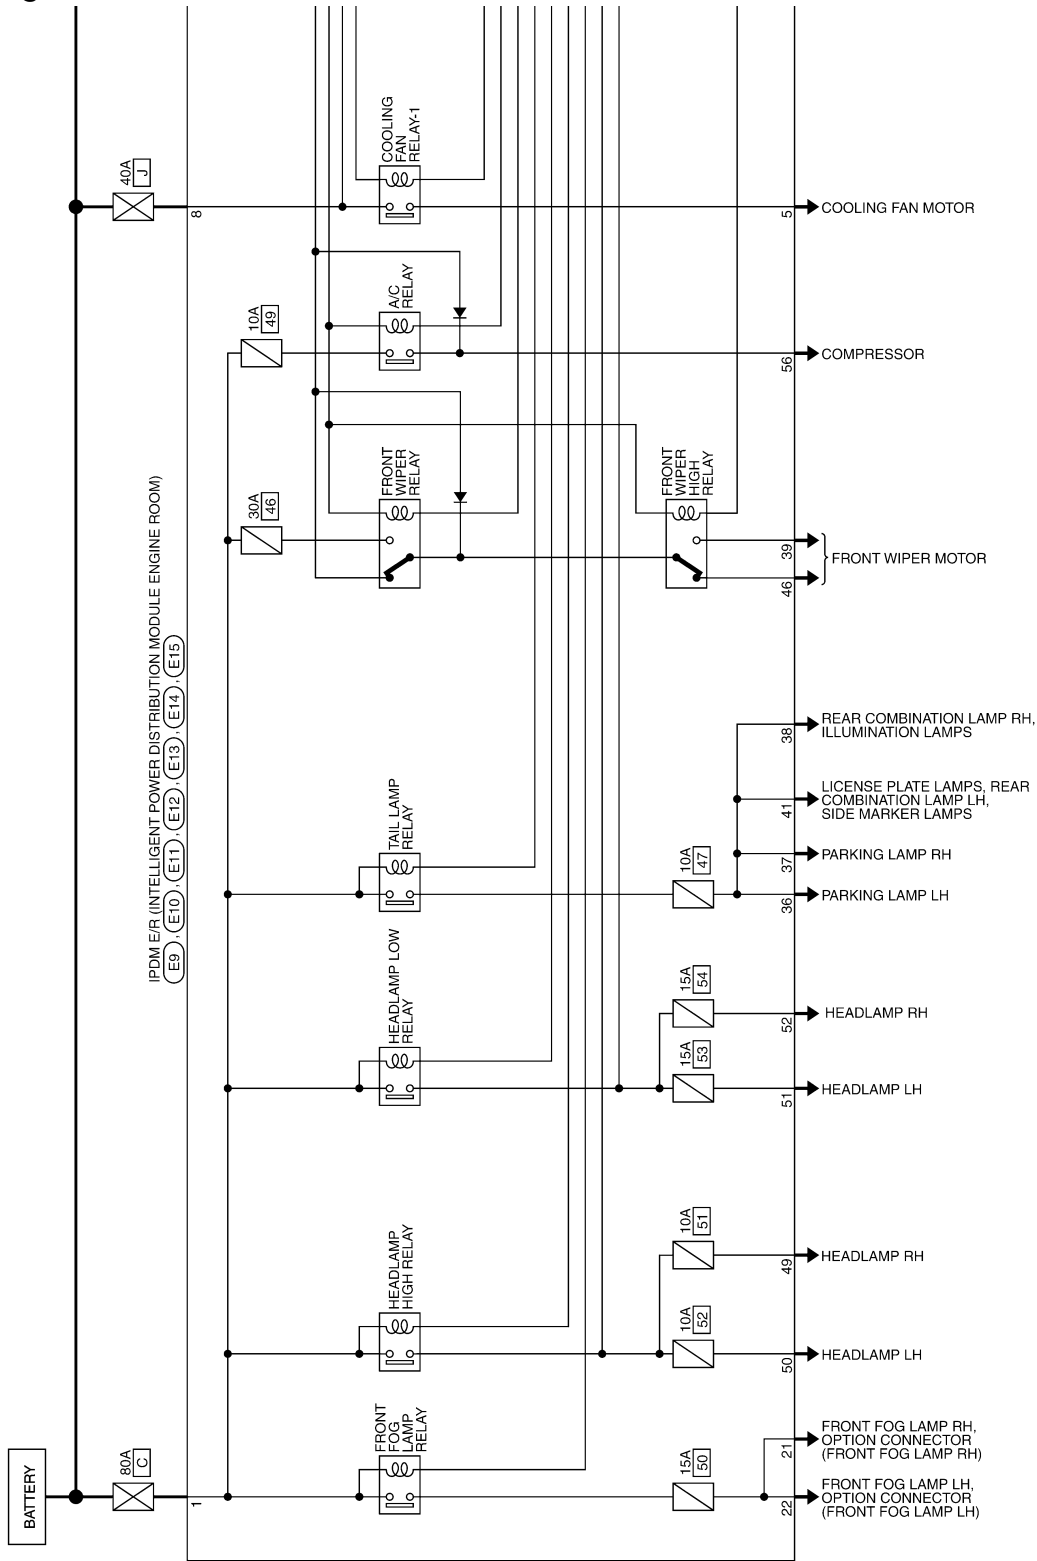

2013/09/19

JRMWE7723GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >


[WITHOUT INTELLIGENT KEY SYSTEM]

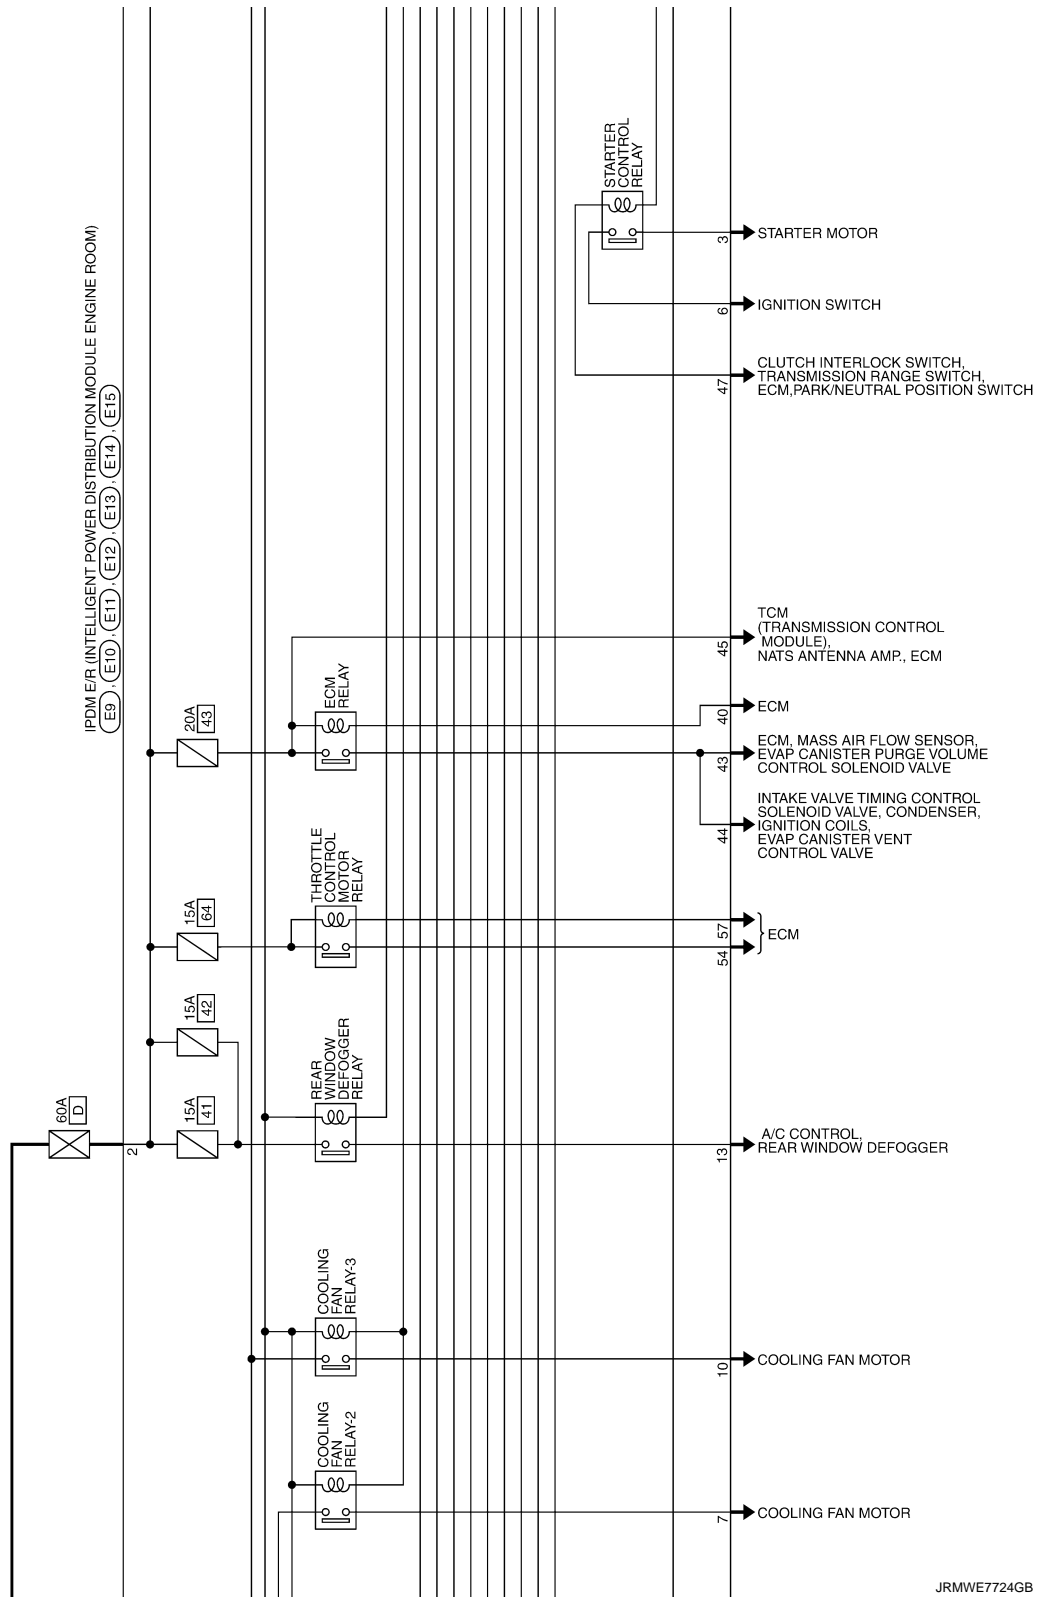

JRMWE7724GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
[WITHOUT INTELLIGENT KEY SYSTEM]
 < ECU DIAGNOSIS INFORMATION >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

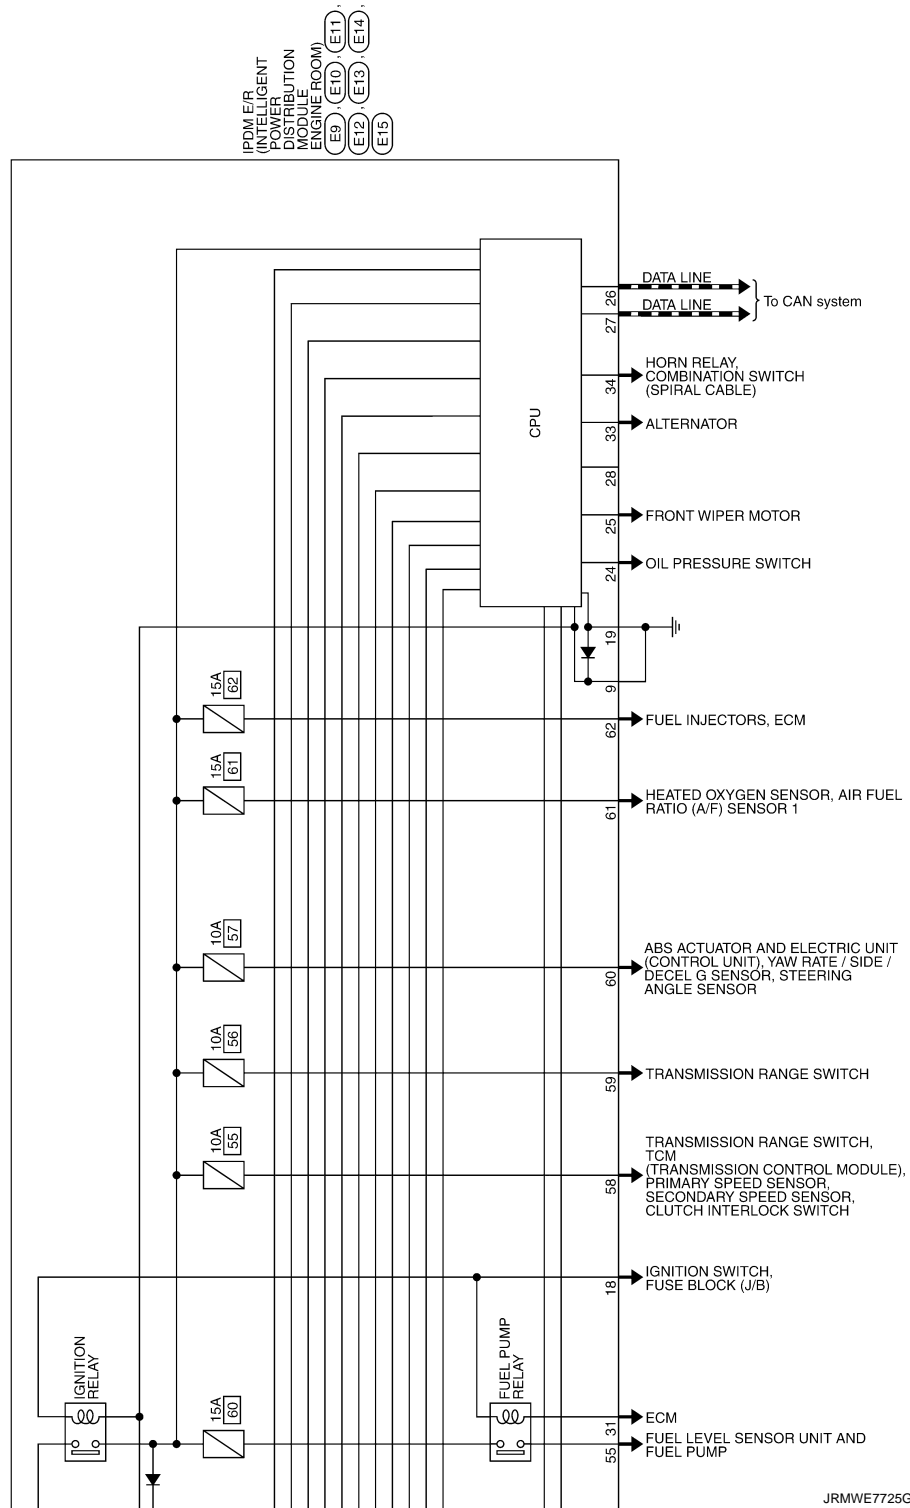

SEC

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >



[WITHOUT INTELLIGENT KEY SYSTEM]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (WITHOUT INTELLIGENT KEY)

Connector No. E9
IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)

Connector Name L02FB-MC

Connector Type M06FB-LC






Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	G	-

Connector No. E10
IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)

Connector Name M06FB-LC



Connector Type M06FB-LC

Connector No. E11
IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)

Connector Name M06FB-LC

Connector Type M06FB-LC






Terminal No.	Color Of Wire	Signal Name [Specification]
9	BAW	-
10	L	-
13	W	-

Connector No. E12
IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)

Connector Name NS08FB-RCS



Connector Type NS08FB-RCS

Connector No. E13
IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)

Connector Name TH12FM-NH

Connector Type TH12FM-NH






Terminal No.	Color Of Wire	Signal Name [Specification]
24	G	-
25	Y	-
26	P	-
27	L	-
28	B	-
30	SB	-
31	W	-
33	O	-
34	R	-

Connector No. E14
IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)

Connector Name NS12FB-RCS



Connector Type NS12FB-RCS

Connector No. E15
IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)

Connector Name NS18FM-CS

Connector Type NS18FM-CS

Terminal No.	Color Of Wire	Signal Name [Specification]
47	BR	-
49	W	-
50	GR	-
51	R	-
52	B	-
54	GR	-
55	P	-
56	SB	-
57	G	-
58	LG	- [With M/T]
59	R	- [With CVT]
60	V	-
61	W	-
62	L	-

JRMWE7836GB

Fail-Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn ON when the ignition switch is turned ON (Cooling fan HI operation) The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn OFF when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF
<ul style="list-style-type: none"> Parking lamps Side marker lamps License plate lamps Illuminations Tail lamps 	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Rear window defogger relay	Rear window defogger relay OFF
Horn	Horn OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit of the ignition relay inside and ignition switch status from BCM via CAN communication.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the ignition switch status from BCM via CAN communication.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

SEC

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition switch status from BCM		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> Detects DTC "B2098: IGN RELAY ON" Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

DTC Index

INFOID:0000000010246104

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now.
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-15
B2098: IGN RELAY ON CIRC	×	PCS-16
B2099: IGN RELAY OFF CIRC	—	PCS-47

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

SYMPTOM DIAGNOSIS

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

Description

INFOID:000000009950308

Security indicator lamp does not blink when ignition switch is in a position other than ON

NOTE:

- Before performing the diagnosis, check "Work Flow". Refer to [SEC-6. "Work Flow"](#).
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

Ignition switch is not in the ON position.

Diagnosis Procedure

INFOID:000000009950309

1. CHECK SECURITY INDICATOR LAMP

Check security indicator lamp.

Refer to [SEC-88. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40. "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM CANNOT BE SET

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM CANNOT BE SET

Description

INFOID:000000009950310

Armed phase is not activated when door is locked using keyfob.

NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of "SECURITY ALARM SET" in "WORK SUPPORT" in "THEFT ALM" using CONSULT.

Diagnosis Procedure

INFOID:000000009950311

1. CHECK REMOTE KEYLESS ENTRY SYSTEM

Lock/unlock door with keyfob.

Refer to [DLK-238. "System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check remote keyless entry system. Refer to [DLK-317. "Diagnosis Procedure"](#).

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40. "Intermittent Incident"](#).

NO >> GO TO 1.

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

Description

INFOID:000000009950312

Alarm does not operate when alarm operating condition is satisfied.

NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

"SECURITY ALARM SET" in "WORK SUPPORT" of "THEFT ALM" is ON when setting on CONSULT.

Diagnosis Procedure

INFOID:000000009950313

1.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-249. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the malfunctioning door switch

2.CHECK HEADLAMP FUNCTION

Check headlamp function.

Refer to [SEC-210. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK HORN FUNCTION

Check horn function.

Refer to [SEC-208. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-40. "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

PRECAUTIONS

< PRECAUTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

PRECAUTION

PRECAUTIONS

Precautions for Removing of Battery Terminal

INFOID:0000000010246065

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

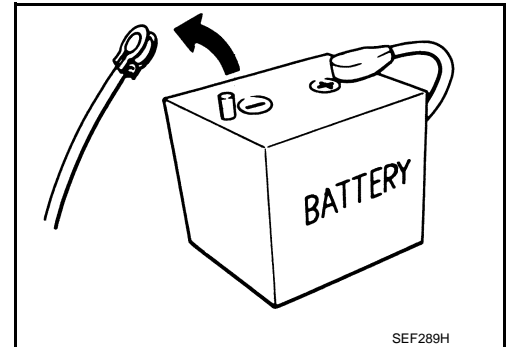

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000009950314

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

NATS ANTENNA AMP.


< REMOVAL AND INSTALLATION >

[WITHOUT INTELLIGENT KEY SYSTEM]

REMOVAL AND INSTALLATION

NATS ANTENNA AMP.

Exploded View

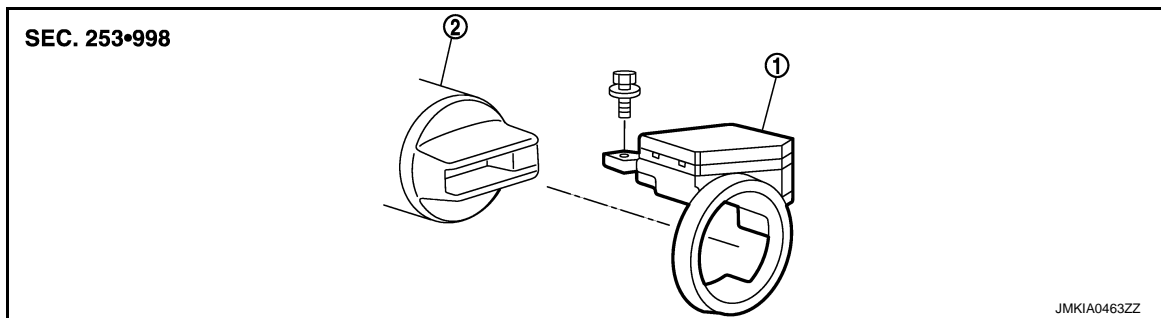


1. NATS antenna amp.
2. Key switch

Removal and Installation

INFOID:000000009950316

REMOVAL

1. Remove the steering column cover.
Refer to [IP-14. "Removal and Installation"](#).
2. Remove the NATS antenna amp. mounting screw (A), and then remove NATS antenna amp. (1) from key switch (2).

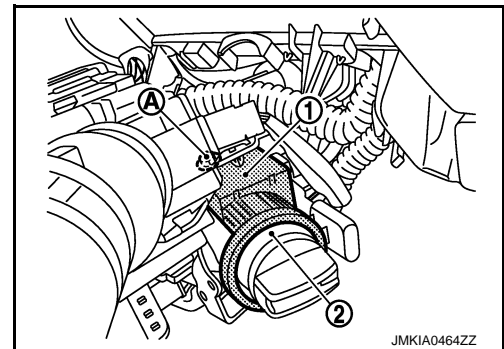

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC