

DLN

Е

F

Н

J

Κ

L

Ν

0

Р

# **CONTENTS**

TRANSFER: ETX13B
BASIC INSPECTION6
DIAGNOSIS AND REPAIR WORK FLOW 6 Work Flow6
SYSTEM DESCRIPTION7
AWD SYSTEM         7           System Diagram         7           System Description         8           Component Parts Location         9           Component Description         10
DIAGNOSIS SYSTEM (AWD CONTROL
UNIT)
DTC/CIRCUIT DIAGNOSIS13
C1201 AWD CONTROL UNIT       13         Description       13         DTC Logic       13         Diagnosis Procedure       13
C1203 ABS ACTUATOR AND ELECTRIC
UNIT (CONTROL UNIT)         14           Description         14           DTC Logic         14           Diagnosis Procedure         14
C1204 AWD SOLENOID       15         Description       15         DTC Logic       15         Diagnosis Procedure       15         Component Inspection       16
C1205 AWD ACTUATOR RELAY

TRANSFER: ETX13B	C1210 ECM18
ASIC INSPECTION	Description
IAGNOSIS AND REPAIR WORK FLOW	Diagnosis Procedure18
Work Flow	
YSTEM DESCRIPTION	Description
71012m 2200km 1101k	Dio Logio
WD SYSTEM	
System Diagram	
System Description	8 Description20
Component Parts Location	
Component Description	Diagnosis Procedure20
IAGNOSIS SYSTEM (AWD CONTROL	POWER SUPPLY AND GROUND CIRCUIT21
NIT)	Doscription
CONSULT-III Function	Diagnosis Procedure21
TC/CIRCUIT DIAGNOSIS	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
1201 AWD CONTROL UNIT	Description23
Description	Component Function Check23
DTC Logic	
Diagnosis Procedure	
1203 ABS ACTUATOR AND ELECTRIC	AWD CONTROL UNIT25
NIT (CONTROL UNIT)	
Description	
DTC Logic	
Diagnosis Procedure	
1204 AWD SOLENOID	DTC Index31
Description	
DTC Logic	
Diagnosis Procedure	
Component Inspection	
1205 AWD ACTUATOR RELAY	Description32
Description	
DTC Logic	
Diagnosis Procedure	
Diagnosis i roccaro	

Description		TRANSFER ASSEMBLY	51
Diagnosis Procedure	33	Exploded View	
HEAVY TIGHT-CORNER BRAKING SYMP-		Removal and Installation	51
TOM OCCURS	34	UNIT DISASSEMBLY AND ASSEMBLY.	54
Description			
Diagnosis Procedure	34	FRONT CASE AND REAR CASE	
VEHICLE DOES NOT ENTER AWD MODE	٥.5	Exploded View	
VEHICLE DOES NOT ENTER AWD MODE .		Disassembly	
Description  Diagnosis Procedure		Assembly	
Diagnosis Procedure	ა၁	Inspection	63
AWD WARNING LAMP BLINKS QUICKLY .	36	MAINSHAFT	65
Description	36	Exploded View	65
AWD WARNING LAMP BLINKS SLOWLY	0.7	Disassembly	
		Assembly	
Description  Diagnosis Procedure		Inspection	66
Diagnosis Procedure	31	FRONT DRIVE SHAFT AND DRIVE CHAIN	60
NOISE, VIBRATION AND HARSHNESS		Exploded View	
(NVH) TROUBLESHOOTING	38	Disassembly	
NVH Troubleshooting Chart		Assembly	
		Inspection	
PRECAUTION	39		
PRECAUTIONS	20	SERVICE DATA AND SPECIFICATIONS	
Precaution for Supplemental Restraint System	39	(SDS)	72
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-			
SIONER"	30	SERVICE DATA AND SPECIFICATIONS	
Precaution Necessary for Steering Wheel Rota-	55	(SDS)	
tion after Battery Disconnect	39	General Specifications	
Service Notice or Precautions for Transfer		FRONT PROPELLER SHAFT: 2S56A	L.
		SYMPTOM DIAGNOSIS	73
PREPARATION	41		
PREPARATION	41	NOISE, VIBRATION AND HARSHNESS	
Special Service Tools	41	(NVH) TROUBLESHOOTING	
Commercial Service Tools		NVH Troubleshooting Chart	73
		PREPARATION	74
PERIODIC MAINTENANCE	44	I ILLI ARATION	74
TRANSFER FLUID	44	PREPARATION	74
Inspection		Commercial Service Tools	74
Draining		DEDICOIO MAINTENANCE	
Refilling	44	PERIODIC MAINTENANCE	75
DEMOVAL AND INCTALLATION		FRONT PROPELLER SHAFT	75
REMOVAL AND INSTALLATION	45	Inspection	-
AWD CONTROL UNIT	45	·	
Exploded View		REMOVAL AND INSTALLATION	76
Removal and Installation		EDONT DROBELLED SUAET	70
		FRONT PROPELLER SHAFT	
FRONT OIL SEAL		Exploded ViewRemoval and Installation	
Exploded View		Inspection	
Removal and Installation	46	110pecuon	/ /
REAR OIL SEAL	10	SERVICE DATA AND SPECIFICATIONS	
Exploded View		(SDS)	78
Removal and Installation		•	
		SERVICE DATA AND SPECIFICATIONS	
UNIT REMOVAL AND INSTALLATION	51	(SDS)	
		General Specifications	78

Propeller Shaft Runout	SERVICE DATA AND SPECIFICATIONS
Journal Axial Play78	(SDS)95
REAR PROPELLER SHAFT: 3S80A-R	General Specifications95
SYMPTOM DIAGNOSIS79	Propeller Shaft Runout95
5 1 WIP 1 OW DIAGNOSIS/9	Journal Axial Play95
NOISE, VIBRATION AND HARSHNESS	FRONT FINAL DRIVE: F160A
(NVH) TROUBLESHOOTING79  NVH Troubleshooting Chart79	SYSTEM DESCRIPTION96
PREPARATION80	FRONT FINAL DRIVE ASSEMBLY96 System Diagram96
PREPARATION80	SYMPTOM DIAGNOSIS97
Commercial Service Tools80	NOISE VIRRATION AND HARSHNESS
PERIODIC MAINTENANCE81	NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING97
REAR PROPELLER SHAFT81	NVH Troubleshooting Chart97
Inspection81	PRECAUTION98
REMOVAL AND INSTALLATION82	PRECAUTIONS98
REAR PROPELLER SHAFT82	Precaution Necessary for Steering Wheel Rota-
Exploded View82	tion after Battery Disconnect98
Removal and Installation83	Service Notice or Precautions for Front Final Drive
Inspection85	98
SERVICE DATA AND SPECIFICATIONS	PREPARATION99
(SDS)87	PREPARATION99
·	Special Service Tools99
SERVICE DATA AND SPECIFICATIONS (SDS)87	Commercial Service Tools101
General Specifications87	PERIODIC MAINTENANCE102
Propeller Shaft Runout87	
Journal Axial Play87	FRONT DIFFERENTIAL GEAR OIL102
REAR PROPELLER SHAFT: 3F80A-1VL107	Inspection102
SYMDTOM DIACNOSIS	Draining
SYMPTOM DIAGNOSIS88	Refilling102
NOISE, VIBRATION AND HARSHNESS	REMOVAL AND INSTALLATION103
(NVH) TROUBLESHOOTING88  NVH Troubleshooting Chart88	SIDE OIL SEAL103
PREPARATION89	RIGHT SIDE103
1 KEI AKATION09	RIGHT SIDE: Exploded View103
PREPARATION89	RIGHT SIDE: Removal and Installation104
Commercial Service Tools89	LEFT SIDE104
DEDIODIO MAINTENANOE	LEFT SIDE :104  LEFT SIDE : Exploded View105
PERIODIC MAINTENANCE90	LEFT SIDE : Exploded view105  LEFT SIDE : Removal and Installation106
REAR PROPELLER SHAFT90 Inspection90	UNIT REMOVAL AND INSTALLATION 107
REMOVAL AND INSTALLATION91	FRONT FINAL DRIVE ASSEMBLY 107
REAR PROPELLER SHAFT91	Exploded View107 Removal and Installation107
Exploded View91	
Removal and Installation91	UNIT DISASSEMBLY AND ASSEMBLY . 109
Inspection94	OIDE OUAET
·	SIDE SHAFT109
SERVICE DATA AND SPECIFICATIONS	Exploded View109
(SDS)95	Disassembly110

Assembly110	2WD	145
Inspection After Disassembly111	2WD : Exploded View	145
DIFFERENTIAL ACCEMBLY	2WD : Removal and Installation	146
DIFFERENTIAL ASSEMBLY 112	AMD	450
Exploded View112	AWD - Exploded View	
Disassembly113	AWD : Exploded View	
Assembly116	AWD : Removal and Installation	151
Adjustment120	SIDE OIL SEAL	156
Inspection After Disassembly124		
DRIVE PINION126	2WD	156
Exploded View126	2WD : Exploded View	156
Disassembly127	2WD : Removal and Installation	157
Assembly128	AMD	450
Adjustment130	AWD	
Inspection After Disassembly132	AWD: Exploded View	
mopeoutin rater bloadsembly	AWD : Removal and Installation	159
SERVICE DATA AND SPECIFICATIONS	UNIT REMOVAL AND INSTALLATION	<b>)N</b> 161
(SDS)134		
` ,	REAR FINAL DRIVE ASSEMBLY	161
SERVICE DATA AND SPECIFICATIONS	21415	
(SDS) 134	2WD	
General Specifications134	2WD : Exploded View	
Drive Gear Runout134	2WD : Removal and Installation	161
Differential Side Gear Clearance134	AWD	162
Preload Torque134	AWD : Exploded View	
Backlash134	AWD : Removal and Installation	
Companion Flange Runout134	7.VVD : Nomovar and motaliation	102
REAR FINAL DRIVE: R200 SYSTEM DESCRIPTION135	UNIT DISASSEMBLY AND ASSEME DIFFERENTIAL ASSEMBLY	
OTOTEM DEGOTAL TION	DITTERENTAL AGGENIDET	
REAR FINAL DRIVE ASSEMBLY 135	2WD	
System Diagram135	2WD : Exploded View	
	2WD : Disassembly	
SYMPTOM DIAGNOSIS137	2WD : Assembly	
NOISE VIDDATION AND HADSHNESS	2WD : Adjustment	
NOISE, VIBRATION AND HARSHNESS	2WD : Inspection After Disassembly	176
(NVH) TROUBLESHOOTING137	AMD	470
NVH Troubleshooting Chart137	AWD - Exploded View	
PRECAUTION139	AWD: Exploded View	
1 NEOAO110N139	AWD : Disassembly AWD : Assembly	
PRECAUTIONS 139		
Service Notice or Precautions for Rear Final Drive.139	AWD: Adjustment	
Control Notice of Freedoment of Freedom Final Entrained	AWD : Inspection After Disassembly	189
PREPARATION140	DRIVE PINION	190
DDED A D A TION		
PREPARATION 140	2WD	
Special Service Tools140	2WD : Exploded View	
Commercial Service Tools142	2WD : Disassembly	
PERIODIC MAINTENANCE144	2WD : Assembly	
PERIODIC MAINTENANCE144	2WD : Adjustment	
REAR DIFFERENTIAL GEAR OIL144	2WD : Inspection After Disassembly	197
Inspection144	AWD	400
Draining144	AWD - Exploded View	
Refilling144	AWD: Exploded View	
144	AWD: Assembly	
REMOVAL AND INSTALLATION145	AWD: Adjustment	
	AWD: Inspection After Disassembly	
FRONT OIL SEAL 145	AWD: Inspection After Disassembly	206

SERVICE DATA AND SPECIFICATIONS (SDS)	208
SERVICE DATA AND SPECIFICATIONS	
(SDS)	208
General Specification	

Drive Gear Runout	208
Differential Side Gear Clearance	208
Preload Torque	208
Backlash	208
Drive Pinion Runout (2WD)	208
Companion Flange Runout (AWD)	209

В

Α

С

DLN

Е

F

G

Н

J

Κ

L

M

Ν

0

#### DIAGNOSIS AND REPAIR WORK FLOW

[TRANSFER: ETX13B]

< BASIC INSPECTION >

# **BASIC INSPECTION**

### DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

#### **DETAILED FLOW**

## 1.INTERVIEW FROM THE CUSTOMER

Clarify customer complaints before inspection. First of all, reproduce symptoms, and understand them fully. Ask customer about his/her complaints carefully. Check symptoms by driving vehicle with customer, if necessary.

#### **CAUTION:**

Customers are not professional. Never guess easily like "maybe the customer means that...," or "maybe the customer mentions this symptom".

>> GO TO 2.

# 2.CHECK AWD WARNING LAMP

Start the engine and drive at 30 km/h (19 MPH) or more for approximately 1 minute.

#### Does AWD warning lamp turn ON?

YES >> GO TO 3.

NO >> GO TO 6.

# 3.PERFORM SELF-DIAGNOSIS

#### (P)With CONSULT-III

- 1. Perform AWD control unit self-diagnosis.
- 2. Check malfunction detected by self-diagnosis.
- 3. Erase AWD control unit self-diagnostic results.

>> GO TO 4.

# 4. CHECK TERMINALS AND HARNESS CONNECTORS

Check pin terminals for damage or loose connection with harness connector.

>> GO TO 5.

# 5.CHECK SYMPTOM REPRODUCTION

#### (P)With CONSULT-III

Perform DTC reproduction procedure for the error system.

#### Is any error detected?

YES >> GO TO 2.

NO >> GO TO 6.

### **6.**PERFORM SYMPTOM DIAGNOSIS

Perform the symptom diagnosis for each system.

#### Is any malfunction present?

YES >> GO TO 2.

NO >> GO TO 7.

7. FINAL CHECK

#### (P)With CONSULT-III

Check input/output signal standard of AWD control unit.

### Is the input/output the standard value?

YES >> INSPECTION END


NO >> GO TO 2.

# SYSTEM DESCRIPTION

# **AWD SYSTEM**

System Diagram

**CONTROL DIAGRAM** 

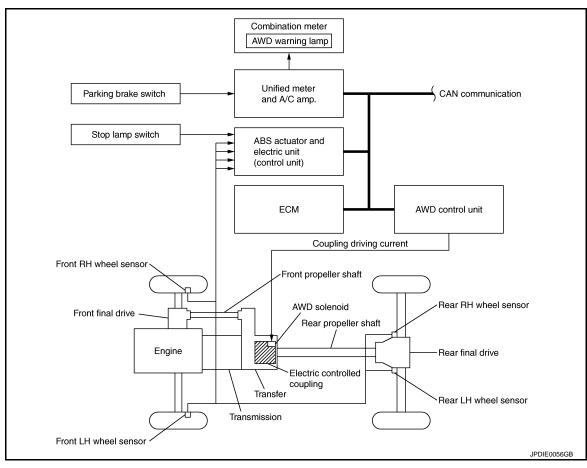

**CROSS-SECTIONAL VIEW** 

Α

В

[TRANSFER: ETX13B]

INFOID:0000000004345228

С

DLN

Е


Н

J

K

Ν

0

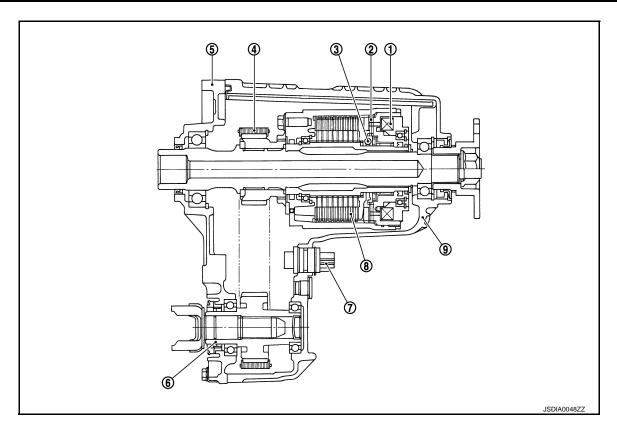

- 1. Electromagnet
- 4. Drive chain
- 7. AWD solenoid connector
- Control clutch
- 5. Front case
- 8. Main clutch

- 3. Cam
- 6. Front drive shaft
- 9. Rear case

# System Description

INFOID:0000000004345229

[TRANSFER: ETX13B]

#### **DESCRIPTION**

- Electronic control allows optimal distribution of torque to front/rear wheels to match road conditions.
- Makes possible stable driving, with no wheel spin, on snowy roads or other slippery surfaces.
- On roads which do not require AWD, it contributes to improved fuel economy by driving in conditions close to rear-wheel drive.
- Sensor inputs determine the vehicle's turning condition, and in response tight cornering/braking are controlled by distributing optimum torque to front wheels.
- It transmits/receives each signal from the following control unit via CAN communication line.

Component parts	Function
ABS actuator and electric unit (control unit)	Transmits the following signals via CAN communication to AWD control unit.  • Vehicle speed signal  • Stop lamp switch signal (brake signal)
ECM	Transmits the following signals via CAN communication to AWD control unit.  • Accelerator pedal position signal  • Engine speed signal
Unified meter and A/C amp.	Transmits conditions of parking brake switch via CAN communication to AWD control unit.


#### NOTE:

- When driving, if there is a large difference between front and rear wheel speed which continues for a long time, fluid temperature of drive system parts becomes too high and AWD warning lamp blinks quickly. (When AWD warning lamp blinks, vehicle changes to rear-wheel drive conditions.) Also, optional distribution of torque sometimes becomes rigid before lamp blinks quickly, but it is not a malfunction.
- If AWD warning lamp is blinking quickly, stop vehicle and allow it to idle for some time. Blinking will stop and AWD system will be restored.


- When driving, AWD warning lamp may blink slowly if there is a significant difference in diameter of the tires. At this time, vehicle performance is not fully available and cautious driving is required. (Continues until the engine is turned OFF.)
- If the warning lamp blinks slowly during driving but remains OFF after the engine is restarted, the system is normal. If it again blinks slowly after driving for some time, vehicle must be inspected.
- When there is a difference of revolution speed between the front and rear wheel the shift occasionally changes to direct 4-wheel driving conditions automatically. This is not a malfunction.

#### **OPERATION PRINCIPLE**

#### **ELECTRIC CONTROLLED COUPLING**

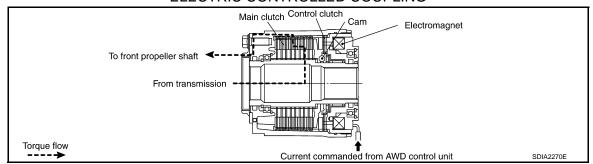


- AWD control unit supplies command current to electric controlled coupling (AWD solenoid).
- 2. Control clutch is engaged by electromagnet and torque is detected in control clutch.
- The cam operates in response to control clutch torque and applies pressure to main clutch.
- 4. Main clutch transmits torque to front wheels according to pressing power.
  - Transmission torque to front wheels is determined according to command current.

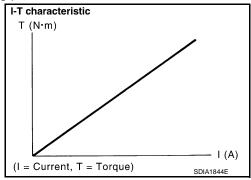

[TRANSFER: ETX13B]

# **Component Parts Location**

INFOID:0000000004345230

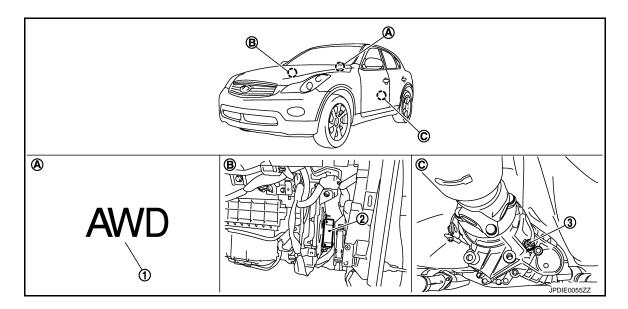

AWD warning lamp

2. AWD control unit

3. AWD solenoid harness connector

Revision: 2010 March DLN-9 2009 EX35

DLN

В

Е

Н

I

J

v

N

Ν

0

### **AWD SYSTEM**

## < SYSTEM DESCRIPTION >

A. Combination meter

B. Glove box assembly removed

C. Transfer assembly

# **Component Description**

INFOID:0000000004345231

[TRANSFER: ETX13B]

Component parts	Reference/Function
AWD control unit	DLN-13, "Description"
Wheel sensors	BRC-37, "Description"
AWD solenoid	DLN-15, "Description"
Electric controlled coupling	Transmits driving force to rear final drive.
AWD warning lamp	DLN-23, "Description"
ABS actuator and electric unit (control unit)	DLN-14, "Description"
ECM	DLN-18, "Description"
Unified meter and A/C amp.	DLN-23, "Description"

### **DIAGNOSIS SYSTEM (AWD CONTROL UNIT)**

< SYSTEM DESCRIPTION >

# **DIAGNOSIS SYSTEM (AWD CONTROL UNIT)**

### CONSULT-III Function

INFOID:0000000004345232

Α

В

DLN

Е

F

J

K

L

Ν

Р

[TRANSFER: ETX13B]

#### **FUNCTION**

CONSULT-III can display each diagnostic item using the diagnostic test modes as follows.

Diagnostic test mode	Function	
ECU Identification	AWD control unit part number can be read.	
Self Diagnostic Result	Self-diagnostic results can be read and erased quickly.	
Data Monitor	Input/Output data in the AWD control unit can be read.	
Active Test	Diagnostic Test Mode in which CONSULT-III drives some actuators apart from the AWD control unit and also shifts some parameters in a specified range.	

#### **ECU IDENTIFICATION**

AWD control unit part number can be read.

#### **SELF-DIAGNOSTIC RESULT**

Before performing the self-diagnosis, start the engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

#### Display Item List

Refer to DLN-31, "DTC Index".

#### How to Erase Self-Diagnostic Results

Before erasing DTC memory, start the engine and drive at 30 km/h (19 MPH) or more for approximately 1 minute. Check that ABS warning lamp turns OFF.

#### NOTE:

When AWD warning lamp is ON with system malfunction of DTC "C1203", run the vehicle at 30 km/h (19MPH) or more for a minute and check that ABS warning lamp is turned OFF. Then turn ignition switch OFF, and start the engine again. Otherwise AWD warning lamp may not turned OFF even if it is normal.

#### DATA MONITOR

Display Item List

Monitor item (Unit)	Remarks
STOP LAMP SW [On/Off]	Stop lamp switch signal status via CAN communication line is displayed.
ENG SPEED SIG [Run/Stop]	Engine status is displayed.
ETS ACTUATOR [On/Off]	Operating condition of AWD actuator relay (integrated in AWD control unit) is displayed.
4WD WARN LAMP [On/Off]	Control status of AWD warning lamp is displayed.
4WD MODE SW [##]	Mode switch is not equipped, but displayed.
4WD MODE MON [AUTO]	Control status of AWD is displayed.
DIS-TIRE MONI [mm]	Improper size tire installed condition is displayed.
P BRAKE SW [On/Off]	Parking brake switch signal status via CAN communication line is displayed.
BATTERY VOLT [V]	Power supply voltage for AWD control unit
THRTL POS SEN [%]	Throttle opening status is displayed.
ETS SOLENOID [A]	Monitored value of current at AWD solenoid
FR RH SENSOR [km/h] or [mph]	Wheel speed calculated by front RH wheel sensor signal is displayed.
FR LH SENSOR [km/h] or [mph]	Wheel speed calculated by front LH wheel sensor signal is displayed.
RR RH SENSOR [km/h] or [mph]	Wheel speed calculated by rear RH wheel sensor signal is displayed.
RR LH SENSOR [km/h] or [mph]	Wheel speed calculated by rear LH wheel sensor signal is displayed.

#### **ACTIVE TEST**

Description

# **DIAGNOSIS SYSTEM (AWD CONTROL UNIT)**

[TRANSFER: ETX13B]

### < SYSTEM DESCRIPTION >

Use this mode to determine and identify the details of a malfunction based on self-diagnostic results or data monitor. AWD control unit gives drive signal to actuator with receiving command from CONSULT-III to check operation of actuator.

Test Item

Test item	Condition	Description
ETS S/V (Detects AWD solenoid)	Vehicle stopped     Engine running     No DTC detected	Change command current value to AWD solenoid, and then change driving mode. (Monitor value is normal if it is within approx. ±10% of command value.)  • Qu: Increase current value in increments of 0.2 A  • Qd: Decrease current value in increments of 0.2 A  • UP: Increase current value in increments of 0.02 A  • DOWN: Decrease current value in increments of 0.02 A

#### **CAUTION:**

Never energize continuously for a long time.

#### C1201 AWD CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

# DTC/CIRCUIT DIAGNOSIS

## C1201 AWD CONTROL UNIT

Description INFOID:0000000004345233

- Controls driving force distribution by signals from each sensor from rear wheel driving mode (0:100) to 4wheel driving mode (50:50).
- Rear wheel driving conditions is available by fail-safe function if malfunction is detected in AWD system.

DTC Logic INFOID:0000000004345234

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1201	CONTROLLER FAILURE	Malfunction has occurred inside AWD control unit.	Internal malfunction of AWD control unit

#### DTC CONFIRMATION PROCEDURE

## 1.DTC REPRODUCTION PROCEDURE

#### (P)With CONSULT-III

- Turn the ignition switch OFF to ON.
- Perform AWD control unit self-diagnosis.

#### Is DTC "C1201" detected?

YES >> Proceed to diagnosis procedure. Refer to <u>DLN-13, "Diagnosis Procedure"</u>.

>> INSPECTION END NO

# Diagnosis Procedure

# PERFORM SELF-DIAGNOSIS

### (E) With CONSULT-III

- Erase AWD control unit self-diagnostic results.
- Turn the ignition switch OFF, and then wait 10 seconds or more.
- Perform AWD control unit self-diagnosis.

#### Is DTC "C1201" detected?

YES >> Replace AWD control unit. Refer to <u>DLN-45</u>, "Exploded View".

NO >> Check AWD control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

DLN

Е

Н

INFOID:0000000004345235

Α

В

C

[TRANSFER: ETX13B]

K

M

Ν

# C1203 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< DTC/CIRCUIT DIAGNOSIS >

# C1203 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Description INFOID:000000004345236

Transmits the following signals via CAN communication to AWD control unit.

- Vehicle speed signal
- Stop lamp switch signal (brake signal)

DTC Logic

#### DTC DETECTION LOGIC

DTC	Display items	Malfunction detected condition	Possible cause
C1203	ABS SYSTEM	Malfunction related to ABS system has been detected by ABS actuator and electric unit (control unit).	ABS malfunction     Malfunction of ABS actuator and electric unit (control unit)     Vehicle speed signal error

#### DTC CONFIRMATION PROCEDURE

## 1.DTC REPRODUCTION PROCEDURE

#### (P)With CONSULT-III

- 1. Start the engine and drive at 30 km/h (19 MPH) or more for approximately 1 minute.
- Perform AWD control unit self-diagnosis.

#### Is DTC "C1203" detected?

YES >> Proceed to diagnosis procedure. Refer to <u>DLN-14, "Diagnosis Procedure"</u>.

NO >> INSPECTION END

### **Diagnosis Procedure**

INFOID:0000000004345238

[TRANSFER: ETX13B]

# 1. PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

#### (P)With CONSULT-III

Perform ABS actuator and electric unit (control unit) self-diagnosis.

#### Is any DTC detected?

YES >> Check the DTC.

NO >> GO TO 2.

### 2.PERFORM SELF-DIAGNOSIS

#### (P)With CONSULT-III

- Erase AWD control unit self-diagnostic results.
- 2. Start the engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
- 3. Make sure that ABS warning lamp turns OFF.
- 4. Perform AWD control unit self-diagnosis.

#### Is DTC "C1203" detected?

YES >> Replace AWD control unit. Refer to <u>DLN-45</u>, "Exploded View".

NO >> Check AWD control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

### C1204 AWD SOLENOID

#### < DTC/CIRCUIT DIAGNOSIS >

### C1204 AWD SOLENOID

Description INFOID:0000000004345239

Controls electric controlled coupling by command current from AWD control unit.

DTC Logic INFOID:0000000004345240

#### DTC DETECTION LOGIC

DTC	Display items	Malfunction detected condition	Possible cause
C1204	4WD SOLENOID	Malfunction related to AWD solenoid has been detected.	Internal malfunction of electronic controlled coupling

DLN

Α

В

[TRANSFER: ETX13B]

#### DTC CONFIRMATION PROCEDURE

# 1. DTC REPRODUCTION PROCEDURE

#### (P)With CONSULT-III

- Turn the ignition switch OFF to ON.
- Perform AWD control unit self-diagnosis.

#### Is DTC "C1204" detected?

>> Proceed to diagnosis procedure. Refer to <u>DLN-15, "Diagnosis Procedure"</u>. YES

NO >> INSPECTION END

# Diagnosis Procedure

# 1. CHECK AWD SOLENOID POWER SUPPLY

- Turn the ignition switch OFF.
- Disconnect AWD control unit harness connector.
- Check the voltage between AWD control unit harness connector and ground.

AWD co	ntrol unit		Voltage
Connector	Terminal		
F108	9	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform the trouble diagnosis for power supply circuit. Refer to <u>DLN-21</u>, "Diagnosis Procedure".

## 2.CHECK AWD SOLENOID GROUND

Check the continuity between AWD control unit harness connector and ground.

AWD co	ntrol unit		Continuity	
Connector	Terminal	_		
F108	10	Ground	Existed	
1 100	11	Giodila	LXISIEU	

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

# 3. CHECK AWD SOLENOID CIRCUIT

- Disconnect AWD solenoid harness connector.
- Check the continuity between AWD control unit harness connector and AWD solenoid harness connector.

**DLN-15** Revision: 2010 March 2009 EX35

F

INFOID:0000000004345241

Ν

AWD co	AWD control unit		AWD solenoid	
Connector	Terminal	Connector	Terminal	Continuity
F108	1	F57	1	Existed
1 100	2	137	2	LAISIEU

3. Check the continuity between AWD control unit harness connector and the ground.

AWD co	ntrol unit	_	Continuity	
Connector	Terminal	_	Continuity	
F108	1	Ground	Not existed	
F100	2	Giouna	Not existed	

4. Check the continuity between AWD solenoid harness connector and the ground.

AWD s	solenoid		Continuity	
Connector	Terminal	_		
F57	1	Ground	Not existed	
137	2	Glound	Not existed	

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

## 4. CHECK AWD SOLENOID

Check the resistance between AWD solenoid harness connector terminals. Refer to <u>DLN-16</u>, "Component <u>Inspection"</u>.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> AWD solenoid is malfunctioning. Replace electric controlled coupling. Refer to <u>DLN-65</u>, "<u>Exploded View</u>".

# 5. CHECK TERMINALS AND HARNESS CONNECTORS

- 1. Check AWD control unit pin terminals for damage or loose connection with harness connector.
- 2. Check AWD solenoid pin terminals for damage or loose connection with harness connector.

### Is the inspection result normal?

YES >> Replace AWD control unit. Refer to <u>DLN-45</u>, "Exploded View".

NO >> Repair or replace error-detected parts.

# Component Inspection

INFOID:0000000004345242

[TRANSFER: ETX13B]

# 1. CHECK AWD SOLENOID

- Turn the ignition switch OFF.
- 2. Disconnect AWD solenoid harness connector.
- 3. Check the resistance between AWD solenoid harness connector terminals.

	Resistance (Approx.)		
Connector	Terr	minal	resistance (Approx.)
F57	1	2	2.45 Ω

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> AWD solenoid is malfunctioning. Replace electric controlled coupling. Refer to <u>DLN-65</u>, "<u>Exploded View</u>".

### C1205 AWD ACTUATOR RELAY

### < DTC/CIRCUIT DIAGNOSIS >

### C1205 AWD ACTUATOR RELAY

Description INFOID:0000000004345243

AWD solenoid is supplied with voltage by the internal circuit of AWD control unit.

DTC Logic INFOID:0000000004345244

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1205	4WD ACTUATOR RLY	Malfunction has been detected from AWD actuator relay integrated with AWD control unit, or malfunction related to AWD solenoid has been detected.	Internal malfunction of AWD control unit

# DLN

Е

Н

Α

В

[TRANSFER: ETX13B]

#### DTC CONFIRMATION PROCEDURE

# 1.DTC REPRODUCTION PROCEDURE

#### (P)With CONSULT-III

- 1. Turn the ignition switch OFF to ON.
- Perform AWD control unit self-diagnosis.

#### Is DTC "C1205" detected?

YES >> Proceed to diagnosis procedure. Refer to <u>DLN-17</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000004345245

# 1.PERFORM SELF-DIAGNOSIS

### (P)With CONSULT-III

- Erase AWD control unit self-diagnostic results.
- Turn ignition switch OFF, and wait 10 seconds or more.
- Perform AWD control unit self-diagnosis.

#### Is DTC "C1205" detected?

YES >> Replace AWD control unit. Refer to <u>DLN-45</u>, "Exploded View".

NO >> Check AWD control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

K

L

Ν

### C1210 ECM

Description INFOID:000000004345246

Transmits the following signals via CAN communication to AWD control unit.

- Accelerator pedal position signal
- Engine speed signal

DTC Logic

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1210	ENGINE SIGNAL 1	Malfunction related to engine signal has been detected.	Malfunction of engine control system

#### DTC CONFIRMATION PROCEDURE

## 1.DTC REPRODUCTION PROCEDURE

#### (P)With CONSULT-III

- 1. Start the engine. Drive the vehicle for a while.
- Perform AWD control unit self-diagnosis.

#### Is DTC "C1210" detected?

YES >> Proceed to diagnosis procedure. Refer to <u>DLN-18</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000004345248

[TRANSFER: ETX13B]

## 1.PERFORM ECM SELF-DIAGNOSIS

#### (P)With CONSULT-III

Perform ECM self-diagnosis.

#### Is any DTC detected?

YES >> Check the DTC.

NO >> GO TO 2.

# 2. PERFORM SELF-DIAGNOSIS

#### (P)With CONSULT-III

- 1. Erase AWD control unit self-diagnostic results.
- Turn the ignition switch OFF.
- 3. Start the engine. Drive the vehicle for a while.
- Make sure that malfunction indicator lamp (MIL) turns OFF.
- 5. Stop the vehicle. Perform AWD control unit self-diagnosis.

#### Is DTC "C1210" detected?

YES >> Replace AWD control unit. Refer to <u>DLN-45, "Exploded View"</u>.

NO >> Check AWD control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

#### **U1000 CAN COMM CIRCUIT**

< DTC/CIRCUIT DIAGNOSIS >

### U1000 CAN COMM CIRCUIT

Description INFOID:0000000004345249

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicate data but selectively reads required data only.

DTC Logic INFOID:0000000004345250

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	AWD control unit is not transmitting/receiving CAN communication signal for 2 seconds or more.	CAN communication error     Malfunction of AWD control unit

#### DTC CONFIRMATION PROCEDURE

### 1.DTC REPRODUCTION PROCEDURE

#### (P)With CONSULT-III

- 1. Turn the ignition switch OFF to ON.
- Perform AWD control unit self-diagnosis.

#### Is DTC "U1000" detected?

YES >> Proceed to diagnosis procedure. Refer to <u>DLN-19</u>, "<u>Diagnosis Procedure</u>".

>> INSPECTION END NO

# Diagnosis Procedure

1.PERFORM SELF-DIAGNOSIS

### (P)With CONSULT-III

Perform AWD control unit self-diagnosis.

#### Is DTC "U1000" detected?

YES >> CAN specification chart. Refer to LAN-17, "Trouble Diagnosis Flow Chart".

>> INSPECTION END NO

DLN

F

Н

INFOID:000000000434525

Α

[TRANSFER: ETX13B]

K

N

### **U1010 CONTROL UNIT (CAN)**

< DTC/CIRCUIT DIAGNOSIS >

# U1010 CONTROL UNIT (CAN)

Description INFOID.000000004345252

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicate data but selectively reads required data only.

DTC Logic INFOID:000000004345253

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1010	CONTROL UNIT (CAN)	Detecting error during the initial diagnosis of CAN controller of AWD control unit.	Malfunction of AWD control unit

#### DTC CONFIRMATION PROCEDURE

### 1.DTC REPRODUCTION PROCEDURE

#### (P)With CONSULT-III

- 1. Turn the ignition switch OFF to ON.
- 2. Perform AWD control unit self-diagnosis.

#### Is DTC "U1010" detected?

YES >> Proceed to diagnosis procedure. Refer to <u>DLN-20</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000004345254

[TRANSFER: ETX13B]

### 1. CHECK AWD CONTROL UNIT

Check AWD control unit harness connector for disconnection and deformation.

#### Is the inspection result normal?

YES >> Replace AWD control unit. Refer to <u>DLN-45, "Exploded View"</u>.

NO >> Repair or replace error-detected parts.

#### POWER SUPPLY AND GROUND CIRCUIT

[TRANSFER: ETX13B] < DTC/CIRCUIT DIAGNOSIS >

### POWER SUPPLY AND GROUND CIRCUIT

Description INFOID:0000000004345255

Supplies power to AWD control unit.

# Diagnosis Procedure

INFOID:0000000004345256

# 1.CHECK AWD CONTROL UNIT POWER SUPPLY (1)

- 1. Turn the ignition switch OFF.
- Disconnect AWD control unit harness connector. 2.
- Check the voltage between AWD control unit harness connector and ground.

DLN

Α

В

AWD co	ntrol unit		Voltage (Approx.)		
Connector	Terminal		voltage (Approx.)		
F108	7	Ground	0 V		

Turn the ignition switch ON.

### **CAUTION:**

#### Never start the engine.

5. Check the voltage between AWD control unit harness connector and ground.

AWD co	ntrol unit		Voltage	
Connector	Terminal		voltage	
F108	7	Ground	Battery voltage	

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

# 2.CHECK AWD CONTROL UNIT POWER SUPPLY (2)

- Turn the ignition switch OFF.
- 2. Check the 10A fuse (#45).
- 3. Disconnect IPDM E/R harness connector E5.
- Check the harness for open or short between AWD control unit harness connector No.7 terminal and IPDM E/R harness connector No.25 terminal.

#### Is the inspection result normal?

YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to PG-53, "Wiring Diagram -**IGNITION POWER SUPPLY -".** 

NO >> Repair or replace error-detected parts.

# 3.CHECK AWD SOLENOID POWER SUPPLY (1)

- 1. Turn the ignition switch OFF.
- Disconnect AWD solenoid harness connector. 2.
- Check the voltage between AWD control unit harness connector and ground.

AWD co	ntrol unit		Voltage		
Connector	Terminal	_	voltage		
F108	9	Ground	Battery voltage		

Turn the ignition switch ON.

#### **CAUTION:**

#### Never start the engine.

5. Check the voltage between AWD control unit harness connector and ground.

**DLN-21** Revision: 2010 March 2009 EX35

Е

Н

M

Ν

#### POWER SUPPLY AND GROUND CIRCUIT

[TRANSFER: ETX13B]

#### < DTC/CIRCUIT DIAGNOSIS >

AWD co	ntrol unit		Voltage
Connector	Terminal	_	vollage
F108	9	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

# 4. CHECK AWD SOLENOID POWER SUPPLY (2)

- Check the 10A fuse (#33).
- 2. Check the harness for open or short between AWD control unit harness connector No.9 terminal and fuse box.

#### Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit. Refer to <u>PG-6, "Wiring Diagram - BAT-TERY POWER SUPPLY -"</u>.

NO >> Repair or replace error-detected parts.

# 5. CHECK AWD SOLENOID GROUND

- 1. Turn the ignition switch OFF.
- 2. Check the continuity between AWD control unit harness connector and ground.

AWD co	ntrol unit		Continuity		
Connector	Terminal		Continuity		
F108	10 Ground		Existed		
F100	11	Ground	Existed		

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace error-detected parts.

#### AWD WARNING LAMP

#### < DTC/CIRCUIT DIAGNOSIS >

### AWD WARNING LAMP

Description INFOID:000000004345257

• Turns ON when there is a malfunction in AWD system. AWD warning lamp indicates the vehicle is in fail-safe mode and shifting to rear-wheel drive or 4-wheel drive (front-wheels still have some driving torque).

Also turns ON when ignition switch is turned ON, for the purpose of lamp check. Turns OFF approximately
for 1 second after the engine starts if system is normal.

#### AWD WARNING LAMP INDICATION

Condition	AWD warning lamp		
Lamp check	Turns ON when ignition switch is turned ON. Turns OFF approx. 1 second after the engine start.		
AWD system malfunction	ON		
Protection function is activated due to heavy load to electric controlled coupling. (AWD system is not malfunctioning and AWD system changes to rear wheel drive.)	Quick blinking: 2 times/second (Blinking in approx. 1 minute and then turning OFF)		
Large difference in diameter of front/rear tires	Slow blinking: 1 time/2 seconds (Continuing to blink until turning ignition switch OFF)		
Other than above (system normal)	OFF		

#### **CAUTION:**

AWD warning lamp also turns ON due to data reception error, CAN communication error etc.

# Component Function Check

INFOID:0000000004345258

[TRANSFER: ETX13B]

Α

DLN

# 1. CHECK AWD WARNING LAMP FUNCTION

- 1. Turn ignition switch ON.
- 2. Make sure that AWD warning lamp lights up.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to <u>DLN-23, "Diagnosis Procedure"</u>.

### Diagnosis Procedure

INFOID:0000000004345259

M

### 1. CHECK POWER SUPPLY AND GROUND CIRCUIT

Perform the trouble diagnosis for power supply and ground circuit. Refer to <u>DLN-21, "Diagnosis Procedure"</u>.

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the damaged parts.

# 2. PERFORM SELF-DIAGNOSIS

#### (P)With CONSULT-III

Perform AWD control unit self-diagnosis.

#### Is any DTC detected?

YES >> Check the DTC.

NO >> GO TO 3.

## 3.CHECK AWD WARNING LAMP SIGNAL

#### (P)With CONSULT-III

1. Turn the ignition switch ON.

#### **CAUTION:**

#### Never start the engine.

2. Check "4WD WARN LAMP" of AWD control unit CONSULT-III "DATA MONITOR".

#### Does the item on "DATA MONITOR" indicate "On"?

YES >> GO TO 4.

#### AWD WARNING LAMP

[TRANSFER: ETX13B]

#### < DTC/CIRCUIT DIAGNOSIS >

NO >> Replace AWD control unit. Refer to <u>DLN-45</u>, "<u>Exploded View</u>".

4. CHECK COMBINATION METER POWER SUPPLY CIRCUIT

Perform the trouble diagnosis for combination meter power supply circuit. Refer to <a href="MWI-53">MWI-53</a>, "COMBINATION METER: Diagnosis Procedure".

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace the damaged parts.

[TRANSFER: ETX13B]

Α

В

# **ECU DIAGNOSIS INFORMATION**

# AWD CONTROL UNIT


Reference Value INFOID:0000000004345260

### VALUES ON THE DIAGNOSIS TOOL

Monitor item	Condition	Value/Status	
STOP LAMP SW	Brake pedal: Depressed	On	
STOP LAIVIP SVV	Brake pedal: Released	Off	DLN
ENG SPEED SIG	Engine stopped (Engine speed: Less than 400 rpm)	Stop	
ENG SPEED SIG	Engine running (Engine speed: 400 rpm or more)	Run	Е
ETS ACTUATOR	Engine stopped (Ignition switch: ON)	Off	
LIGACIDATOR	Engine running	On	F
4WD WARN LAMP	AWD warning lamp: ON	On	
4VVD WARN LAWP	AWD warning lamp: OFF	Off	G
4WD MODE SW	Always	##	
4WD MODE MON	Engine running	AUTO	
	Vehicle running with normal size tire installed	0 – 4 mm	Н
DIS-TIRE MONI	Vehicle running with improper size tire installed (Front/rear tire size difference, wear condition)	4 – 8 mm, 8 – mm	
D DDAKE OW	Parking brake operated	On	
P BRAKE SW	Parking brake not operated	Off	
BATTERY VOLT	Always	Battery voltage	.J
THRTL POS SEN	When depressing accelerator pedal (Value rises gradually in response to throttle position.)	0 – 100%	
ETS SOLENOID	Engine running • At idle speed	Approx. 0.000 A	K
E13 30LENOID	Engine running • 3,000 rpm or more constant	Approx. 0.000 – 0.500 A*	I
	Vehicle stopped	0.00 km/h (0.00 mph)	_
FR RH SENSOR	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Approx. equal to the indication on speedometer (Inside of ±10%)	M
	Vehicle stopped	0.00 km/h (0.00 mph)	
FR LH SENSOR	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Approx. equal to the indication on speedometer (Inside of ±10%)	Ν
	Vehicle stopped	0.00 km/h (0.00 mph)	0
RR RH SENSOR	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Approx. equal to the indication on speedometer (Inside of ±10%)	
	Vehicle stopped	0.00 km/h (0.00 mph)	Р
RR LH SENSOR	Vehicle running CAUTION: Check air pressure of tire under standard condition.	Approx. equal to the indication on speedometer (Inside of ±10%)	

<sup>\*:</sup> The values are changed by throttle opening and engine speed.

#### **TERMINAL LAYOUT**

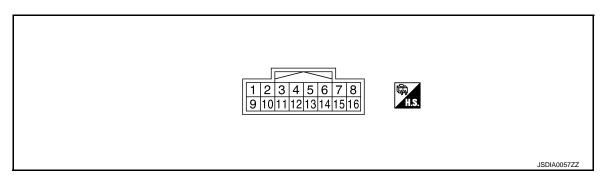

## PHYSICAL VALUES

	nal No. color)	Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output	Condition	value (Applox.)	
1	Ground	AWD solenoid power sup-	Output	Engine speed: At idle	0 V	
(BR)	Giodila	ply	Output	Engine speed: 3,000 rpm or more constant	2.5 V*	
2	Ground	AWD solenoid ground		Engine speed: At idle	0 V	
(Y)	Ground	AVVD soletiola ground	_	Engine speed: 3,000 rpm or more constant	0 V	
7	Ground	Innition quitab	Input	Ignition switch: ON	Battery voltage	
(G)	Ground	Ignition switch	Input	Ignition switch: OFF	0 V	
8 (L)	_	CAN-H	Input/ Output	_	_	
9 (O)	Ground	Power supply (AWD sole- noid)	Input	Always	Battery voltage	
10 (B)	Ground	Ground	_	Always	0 V	
11 (B)	Ground	Ground	_	Always	0 V	
16 (P)	_	CAN-L	Input/ Output	_	_	

<sup>\*:</sup> The values are changed by throttle opening and engine speed.

#### **CAUTION:**

When using circuit tester to measure voltage for inspection, be sure not to extend forcibly any connector terminals.

[TRANSFER: ETX13B] < ECU DIAGNOSIS INFORMATION > Wiring Diagram - AWD SYSTEM -

INFOID:0000000004345261

Р

JCDWA0360GB

Α В COMBINATION METER (AWD) (M53) C ⟨PM⟩: With automatic drive positioner ⟨OP⟩: Without automatic drive positioner M55 DLN UNIFIED METER AND A/C AMP. (M66), (M67) FUSE BLOCK (J/B) (M1) Е ECM M107 F 10A G DATA LINK CONNECTOR (M24) 98 Н J AWD CONTROL UNIT K AWD SOLENOID (F57) L IPDM E/R
(INTELLIGENT
POWER
DISTRIBUTION
MODULE
ENGINE ROOM)
(E5) M M110 IGNITION SWITCH ON or START (Me 82 Ν F100 W95 AWD SYSTEM 0 33 33 BATTERY 2008/08/28

[TRANSFER: ETX13B]

Connector No. E41	Connector Name (CONTROL UNIT)	Connector Type BAA42FB-AHZ4-LH	H.S. TERRITORISH STREET OF THE	Terminal Color   Signal Name [Specification]   146. of Wire   Signal Name [Specification]   157.   CAN'-H   S\$   L   CAN'-H		Connector No. F103	Connector Name WIRE TO WIRE	Connector Type TK36FW-NS10	H.S. COLOR OF THE	Terminal Color   Signal Name [Specification]   Of Wire   Of Wire   Signal Name [Specification]	В	34 B -	35 L	
Connector No. E5	Connector Name DISTRIBUTION MODULE ENGINE ROOM)	Connector Type TH20FW-CS12-M4-IV	H.S. SIGNIFICATION CONTROL OF SIGNIFICATION OF SIGNIFICAT	Terminal Color Signal Name [Specification] No. of Wire 25 G		Connector No. F57	Connector Name AWD SOLENOID	Connector Type RK08FB	HS HS (1234)	Terminal Color Signal Name [Specification]	H	2 Y -		
Connector No. E3	Connector Name WIRE TO WIRE	Connector Type SAA36MB-RS10-SJZ2	H3. (1973.4.15.0.7) 8.19 (1973	Terminal   Color   Signal Name [Specification]   No. of Vitre   27   0		Connector No. F1	Connector Name WIRE TO WIRE	Connector Type SAA36FB-RS10-SJZ2	(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	Terminal Color Signal Name [Specification]	27 0 -			
AWD SYSTEM Connector No.   B1	Connector Name WIRE TO WIRE	Connector Type TH80FW-CS16-TM4	**************************************	Terminal Color   Signul Name [Specification]   Color   Signul Name [Specification]   Signul Na	<u> </u>	Connector No. E106	Connector Name WIRE TO WIRE	Connector Type TH80FW-CS16-TM4	SH	Terminal Color Signal Name [Specification] No.		+	- S 06	


JCDWA0361GB

### **AWD CONTROL UNIT**

[TRANSFER: ETX13B]

Р

Α Signal Name [Specification] Signal Name [Specification] В UNIFIED METER AND A/C AMP. WIRE TO WIRE C 6 V 8 0 5 Connector Name DLN Е Signal Name [Specification] Signal Name [Specification] UNIFIED METER AND A/C AMP. F WIRE TO WIRE G nector Name Н Signal Name [Specification] Signal Name [Specification] COMBINATION METER FUSE BLOCK (J/B) J K L Signal Name [Specification] M DATA LINK CONNECTOR AWD CONTROL UNIT 3 4 Ν SYSTEM 0 JCDWA0362GB

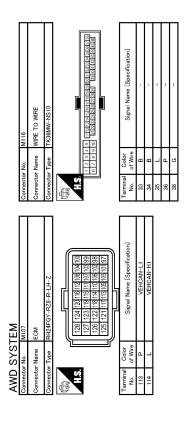

JCDWA0363GB

INFOID:0000000004345262

[TRANSFER: ETX13B]

# AWD system

Fail-Safe

• If any malfunction occurs in AWD electrical system, and control unit detects the malfunction, AWD warning lamp on combination meter turns ON to indicate system malfunction.

• When AWD warning lamp is ON, vehicle changes to rear-wheel drive or shifts to 4-wheel drive (front-wheels still have some driving torque).

Revision: 2010 March **DLN-30** 2009 EX35

### **AWD CONTROL UNIT**

#### < ECU DIAGNOSIS INFORMATION >

• AWD system activates its protection function (shuts down AWD system temporarily) if AWD system detects high load continuously or the front wheel tire size differs from the rear tire size. (AWD system is automatically restored if AWD system no longer detects any overload or the tire size difference is eliminated.)

Mode	Warning lamp	DTC	Detected area (Error area)	Error area and root cause
Protection function	Blinking*1	_	AWD control unit	Transfer assembly in protection mode. It is not malfunction. (Internal temperature rise of electronic controlled coupling)
	Blinking*2	_	Outer diameters of front and rear wheel tires	Malfunction in each tire or different tire diameter
		C1201	AWD control unit	Internal malfunction of AWD control unit
		C1203	ABS actuator and electric unit (control unit)	ABS malfunction  Malfunction of ABS actuator and electric unit (control unit)  Vehicle speed signal error
		C1204	AWD solenoid	Internal malfunction of electronic controlled coupling
Fail-safe	ON	C1205	AWD control unit	Internal malfunction of AWD control unit
		C1210	ECM	Malfunction of engine control system
		U1000	CAN communication line	CAN communication error     Malfunction of AWD control unit
		U1010	AWD control unit	Malfunction of AWD control unit

<sup>\*1:</sup> Quick blinking: 2 times/second (blinking for approximately 1 minute and then turned OFF)

# **DTC Inspection Priority Chart**

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	U1000 CAN COMM CIRCUIT     U1010 CONTROL UNIT (CAN)
2	C1201 CONTROLLER FAILURE     C1205 4WD ACTUATOR RLY
3	C1204 4WD SOLENOID
4	C1203 ABS SYSTEM     C1210 ENGINE SIGNAL 1

DTC Index

DTC	Display Items	Reference
C1201	CONTROLLER FAILURE	DLN-13, "DTC Logic"
C1203	ABS SYSTEM	DLN-14, "DTC Logic"
C1204	4WD SOLENOID	DLN-15, "DTC Logic"
C1205	4WD ACTUATOR RLY	DLN-17, "DTC Logic"
C1210	ENGINE SIGNAL 1	DLN-18, "DTC Logic"
U1000	CAN COMM CIRCUIT	DLN-19, "DTC Logic"
U1010	CONTROL UNIT (CAN)	DLN-20, "DTC Logic"

Revision: 2010 March **DLN-31** 2009 EX35

DLN

Α

В

C

Е

F

G

Н

INFOID:0000000004345263

[TRANSFER: ETX13B]

K

J

M

L

N

Ρ

<sup>\*2:</sup> Slow blinking: 1 time/2 seconds (continuing to blink until ignition switch is turned OFF)

### AWD WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

# SYMPTOM DIAGNOSIS

# AWD WARNING LAMP DOES NOT TURN ON

Description INFOID:000000004345265

AWD warning lamp does not turn ON when the ignition switch is turned to ON.

Diagnosis Procedure

INFOID:0000000004345266

[TRANSFER: ETX13B]

1. CHECK AWD WARNING LAMP

Perform the trouble diagnosis for AWD warning lamp. Refer to <u>DLN-23, "Diagnosis Procedure"</u>. <u>Is the inspection result normal?</u>

YES >> Check each harness connector pin terminal for malfunction or disconnection.

NO >> Repair or replace the error-detected parts.

# AWD WARNING LAMP DOES NOT TURN OFF

AWD WARNING LAMP DOES NOT TURN O	FF
< SYMPTOM DIAGNOSIS >	[TRANSFER: ETX13B]
AWD WARNING LAMP DOES NOT TURN OFF	A
Description	INFOID:000000004345267
AWD warning lamp does not turn OFF several seconds after the engine started.	В
Diagnosis Procedure	INFOID:000000004345268
1.PERFORM SELF-DIAGNOSIS	С
With CONSULT-III Perform AWD control unit self-diagnosis.  Is any DTC detected?	DLN
YES >> Check the DTC. NO >> GO TO 2.	-
2.CHECK AWD WARNING LAMP	E
Perform the trouble diagnosis of the AWD warning lamp. Refer to <a href="DLN-23">DLN-23</a> , "Diagnotes the inspection result normal?  YES >> GO TO 3.	osis Procedure". F
NO >> Repair or replace the error-detected parts.  3.CHECK AWD CONTROL UNIT POWER SUPPLY AND GROUND CIRCUIT	G
Perform the trouble diagnosis of the power supply and ground circuit. Refer to I	DLN-21, "Diagnosis Proce-
dure".  Is the inspection result normal?	Н
YES >> Check each harness connector pin terminal for malfunction or disconn NO >> Repair or replace the error-detected parts.	ection.
	J
	К
	L
	М
	Ν
	0

### **HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS**

< SYMPTOM DIAGNOSIS >

### HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS

Description INFOID:000000004345269

Heavy tight-corner braking symptom occurs when the vehicle is driven and the steering wheel is turned fully to either side after the engine is started.

#### NOTE:

Light tight-corner braking symptom may occur depending on driving conditions. This is not malfunction.

### **Diagnosis Procedure**

INFOID:0000000004345270

[TRANSFER: ETX13B]

# 1.PERFORM ECM SELF-DIAGNOSIS

### (P)With CONSULT-III

Perform ECM self-diagnosis.

#### Is any DTC detected?

YES >> Check the DTC.

NO >> GO TO 2.

# 2.PERFORM SELF-DIAGNOSIS

#### (A) With CONSULT-III

Perform AWD control unit self-diagnosis.

#### Is DTC "U1000" detected?

YES >> CAN specification chart. Refer to LAN-17, "Trouble Diagnosis Flow Chart".

NO >> GO TO 3.

# 3.CHECK AWD SOLENOID

Perform the trouble diagnosis of the AWD solenoid. Refer to <u>DLN-15</u>, "<u>Diagnosis Procedure</u>".

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the error-detected parts.

### 4. CHECK ELECTRIC CONTROLLED COUPLING

- 1. Turn the ignition switch OFF.
- Set the transmission to neutral. Release the parking brake.
- 3. Lift up the vehicle.
- 4. Rotate the rear propeller shaft.
- Hold the front propeller shaft lightly.

#### Does the front propeller shaft rotate?

YES >> Replace electric controlled coupling for mechanical malfunction (clutch sticking etc.). Refer to DLN-65, "Exploded View".

NO >> Check each harness connector pin terminal for disconnection.

### **VEHICLE DOES NOT ENTER AWD MODE**

[TRANSFER: ETX13B] < SYMPTOM DIAGNOSIS >

### VEHICLE DOES NOT ENTER AWD MODE

Description INFOID:0000000004345271

Vehicle does not enter 4-wheel drive mode even though AWD warning lamp turned to OFF.

Diagnosis Procedure

INFOID:0000000004345272

## 1. CHECK AWD WARNING LAMP

Turn the ignition switch ON.

#### Does AWD warning lamp turn ON?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to DLN-23, "Diagnosis Procedure".

# 2.CHECK PARKING BRAKE SWITCH SIGNAL

#### (P)With CONSULT-III

Check "P BRAKE SW" of 4WD control unit CONSULT-III "DATA MONITOR".

Monitor Item	Condition	Status
P BRAKE SW	When the parking brake pedal is operation.	On
	When the parking brake pedal is not operation.	Off

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Perform the trouble diagnosis for parking brake switch circuit. Refer to BRC-78, "Diagnosis Proce-

# 3. CRUISE TEST

Drive the vehicle for a period of time.

#### Does any symptom occur?

>> Replace electric controlled coupling for mechanical malfunction (mechanical engagement of YES clutch is not possible). Refer to DLN-65, "Exploded View".

NO >> Check each harness connector pin terminal for disconnection.

Е

F

DLN

Α

В

C

K

L

M

Ν

### AWD WARNING LAMP BLINKS QUICKLY

[TRANSFER: ETX13B]

< SYMPTOM DIAGNOSIS >

# AWD WARNING LAMP BLINKS QUICKLY

Description INFOID:0000000004345273

While driving, AWD warning lamp blinks 2 times in 1 second and it turns OFF after 1 minute.

- This symptom protects drivetrain parts when a heavy load is applied to the electric controlled coupling and multiple disc clutch temperature increases. Also, optional distribution of torque sometimes becomes rigid before lamp blinks quickly. Both cases are not malfunction.
- When this symptom occurs, stop vehicle and allow it to idle for some times. Blinking will stop and system will be restored.

## AWD WARNING LAMP BLINKS SLOWLY

[TRANSFER: ETX13B] < SYMPTOM DIAGNOSIS > AWD WARNING LAMP BLINKS SLOWLY Α Description INFOID:0000000004345274 AWD warning lamp blinks at approximately 2 seconds intervals while driving. В Diagnosis Procedure INFOID:0000000004345275 1.CHECK TIRE Check the following. Tire pressure DLN Wear condition • Front and rear tire size (There is no difference between front and rear tires.) Is the inspection result normal? Е YES >> GO TO 2. NO >> Repair or replace error-detected parts. And then, drive the vehicle at speed of 20 km/h (12 MPH) or more for 5 seconds or more. Improper size information is initialized accordingly. 2.CHECK INPUT SIGNAL OF TIRE DIAMETER F (P)With CONSULT-III Start the engine. Drive at 20 km/h (12 MPH) or more for approximately 4 minutes. Check "DIS-TIRE MONI" of AWD control unit CONSULT-III "DATA MONITOR". Does the item on "DATA MONITOR" indicate "0 - 4 mm"? Н YES >> INSPECTION END NO >> GO TO 3. 3. TERMINAL INSPECTION Check AWD control unit harness connector for disconnection. Is the inspection result normal? YES >> Replace AWD control unit. Refer to <u>DLN-45</u>, "Exploded View". NO >> Repair or replace the error-detected parts. K L M Ν

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## **NVH Troubleshooting Chart**

INFOID:0000000004345276

[TRANSFER: ETX13B]

Use the chart below to help you find the cause of the symptom. The numbers indicate the order of the inspection. If necessary, repair or replace these parts.

Reference			DLN-44, "Inspection"		DLN-54. "Exploded View"	DLN-54, "Exploded View"	DLN-66, "Inspection"	DLN-66, "Inspection"	DLN-63, "Inspection"
SUSPECTED PA (Possible cause		TRANSFER FLUID (Level low)	TRANSFER FLUID (Wrong)	TRANSFER FLUID (Level too high)	LIQUID GASKET (Damaged)	OIL SEAL (Worn or damaged)	GEAR (Worn or damaged)	BEARING (Worn or damaged)	TRANSFER CASE (Damaged)
Symptom	Noise	1	2				3	3	3
	Transfer fluid leakage		4	1	2	2			3

### **PRECAUTIONS**

[TRANSFER: ETX13B] < PRECAUTION >

## **PRECAUTION**

## **PRECAUTIONS**

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRF-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

#### NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

#### OPERATION PROCEDURE

Connect both battery cables.

#### NOTE:

Supply power using jumper cables if battery is discharged.

- 2. Turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
- 3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
- Perform the necessary repair operation.

DLN

Α

В

Е

Н

INFOID:0000000004887454

Ν

Р

**DLN-39** Revision: 2010 March 2009 EX35

### **PRECAUTIONS**

< PRECAUTION > [TRANSFER: ETX13B]

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)

Perform self-diagnosis check of all control units using CONSULT-III.

## Service Notice or Precautions for Transfer

INFOID:0000000004345278

#### **CAUTION:**

- Never reuse transfer fluid, once it has been drained.
- Check the fluid level or replace the fluid only with the vehicle parked on level ground.
- . During removal or installation, keep inside of transfer clear of dust or dirt.
- Replace all tires at the same time. Always use tires of the proper size and the same brand and pattern. Fitting improper size and unusually worn tires applies excessive force to vehicle mechanism and can cause longitudinal vibration.
- Disassembly should be done in a clean work area, it is preferable to work in dustproof area.
- Before proceeding with disassembly, thoroughly clean the transfer. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they do not interfere with the function of the parts when applied.
- Check appearance of the disassembled parts for damage, deformation, and unusual wear. Replace them with a new ones if necessary.
- Gaskets, seals and O-rings should be replaced any time the transfer is disassembled.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, use it.
- Observe the specified torque when assembling.
- Clean and flush the parts sufficiently and blow-dry them.
- Be careful not to damage sliding surfaces and mating surfaces.
- Clean inner parts with lint-free cloth or towels. Do not use cotton work gloves and rags to prevent adhering fibers.

## **PREPARATION**

[TRANSFER: ETX13B] < PREPARATION >

# **PREPARATION**

## **PREPARATION**

Special Service Tools

Α

Special Service Tools		INFOID:000000000434527	<sup>79</sup> B
he actual shapes of Kent-Moore tools n Tool number (Kent-Moore No.) Tool name	nay differ from those of special service tools illus	Description	_ C
ST27862000 ( — ) Drift		Installing front oil seal	DL
a: 62.5 mm (2.461 in) dia. b: 42 mm (1.65 in) dia.	a b		Е
KV381054S0 (J-34286)	ZZA0194D	Removing rear oil seal	F
Puller			G
	ZZA0601D		Н
ST30720000 (J-25405) Drift		<ul><li>Installing rear oil seal</li><li>Installing mainshaft oil seal</li></ul>	I
a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia.	· · · · · · · · · · · · · · · · · · ·		J
KV40104830	ZZA0811D	Installing rear oil seal	- K
( — ) Drift			I.
a: 70 mm (2.76 in) dia. b: 63.5 mm (2.500 in) dia.	abi		L
	ZZA1003D		M
KV38100300 (J-25523)		Removing mainshaft bearing	
Drift a: 54 mm (2.13 in) dia. b: 46 mm (1.81 in) dia.	° Constitution of the cons		N
c: 32 mm (1.26 in) dia.			0
ST33052000	ZZA1046D	Removing mainshaft assembly	_
Drift	<b>-</b> -b-		Р
a: 28 mm (1.10 in) dia. b: 22 mm (0.87 in) dia.			
	<del></del> <del>a →</del>		
	ZZA1000D		

## **PREPARATION**

< PREPARATION > [TRANSFER: ETX13B]

< PREPARATION >		[TRANSFER: ETX13B]
Tool number (Kent-Moore No.) Tool name		Description
ST30611000 (J-25742-1) Drift bar a: 350 mm (13.78 in) b: 25 mm (0.98 in) dia. c: M12 × 1.5P	a b NT663	Removing rear bearing
ST35321000 ( — ) Drift a: 49 mm (1.93 in) dia. b: 41 mm (1.61 in) dia.	ZZA1000D	Removing rear bearing     Installing mainshaft assembly
KV38104010 ( — ) Drift a: 67 mm (2.64 in) dia. b: 49 mm (1.93 in) dia.	ZZA1000D	Installing front drive shaft rear bearing     Installing rear bearing
ST30621000 (J-25742-5) Drift a: 80 mm (3.15 in) dia. b: 59 mm (2.32 in) dia.	ZZA1000D	Installing mainshaft bearing
ST31214000 (J-25269-B) Drift a: 34 mm (1.34 in) dia. b: 25.5 mm (1.004 in) dia.	a b SZZA0534D	Removing front drive shaft front bearing     Removing front drive shaft rear bearing
ST33200000 (J-26082) Drift a: 60 mm (2.36 in) dia. b: 44.5 mm (1.752 in) dia.	a b ZZA1002D	Installing front drive shaft front bearing

**Commercial Service Tools** 

INFOID:0000000004345280

## **PREPARATION**

< PREPARATION > [TRANSFER: ETX13B]
------------------------------------

PREPARATION >		[TRANSIER. ETATSD	_
Tool name		Description	_
Puller		Removing companion flange	_
	POLONÍ		
	NTO77		
Flange wrench	WO!	Removing and installing self-lock nut	- 
	NT771		
Puller		Removing front drive shaft front bearing     Removing front drive shaft rear bearing	_
	ZZB0823D		_
Power tool		Loosening bolts and nuts	
	PBIC0190E		

Κ

N/I

Ν

0

Ρ

## PERIODIC MAINTENANCE

## TRANSFER FLUID

Inspection INFOID:000000004345281

#### FLUID LEAKAGE

Check transfer surrounding area (oil seal, drain plug, and filler plug etc.) for fluid leakage.

#### **FLUID LEVEL**

1. Remove filler plug (1) and gasket. Then check that fluid is filled up from mounting hole for the filler plug.


#### **CAUTION:**

## Never start engine while checking fluid level.

2. Before installing filler plug, set a new gasket. Install filler plug on transfer and tighten to the specified torque. Refer to <u>DLN-54</u>. "Exploded View".

#### **CAUTION:**

Never reuse gasket.

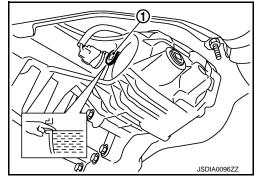

[TRANSFER: ETX13B]

Draining INFOID:000000004345282

- 1. Run the vehicle to warm up the transfer unit sufficiently.
- 2. Stop the engine, and remove the drain plug (1) to drain the transfer fluid.

#### **CAUTION:**


#### When draining fluid, protect exhaust tube flange with cover.

 Apply sealant to drain plug. Install drain plug on transfer and tighten to the specified torque. Refer to <u>DLN-54</u>. "Exploded View".

Use Genuine Silicone RTV or equivalent. Refer to <u>GI-17</u>, "Recommended Chemical Products and Sealants".

#### **CAUTION:**

Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.

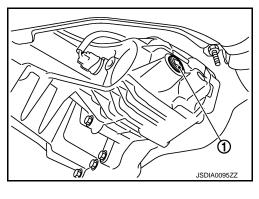

Refilling INFOID:0000000004345283

1. Remove filler plug (1) and gasket. Then fill fluid up to mounting hole for the filler plug.

Fluid and viscosity : Refer to MA-10, "Fluids

and Lubricants".

Fluid capacity : Refer to <u>DLN-72</u>, "General


Specifications".

#### **CAUTION:**

Carefully fill the fluid. (Fill up for approximately 3 minutes.)

- 2. Leave the vehicle for 3 minutes, and check the fluid level again.
- Set a new gasket onto filler plug and install it on transfer and tighten to the specified torque. Refer to <u>DLN-54</u>, "<u>Exploded View</u>". CAUTION:


Never reuse gasket.

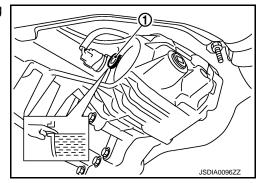

## REMOVAL AND INSTALLATION

## AWD CONTROL UNIT

Exploded View

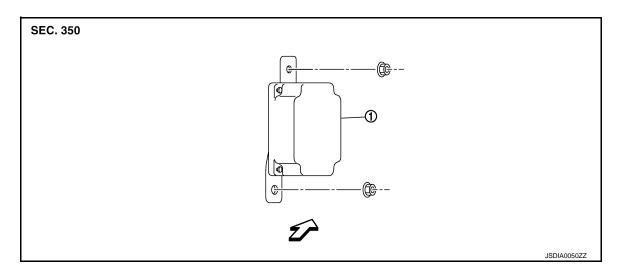


1. AWD control unit

∀ : Vehicle front

## Removal and Installation

## REMOVAL

- 1. Remove the glove box assembly. Refer to IP-13, "Removal and Installation".
- 2. Disconnect AWD control unit harness connector.
- 3. Remove AWD control unit (1) mounting nuts.
- 4. Remove AWD control unit.

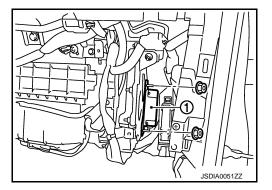

### **INSTALLATION**

Install in the reverse order of removal.

Α

[TRANSFER: ETX13B]

DLN

C

Е

F

G

Н

J

INFOID:0000000004345285


M

Ν

0

## FRONT OIL SEAL

**Exploded View** INFOID:0000000004345286

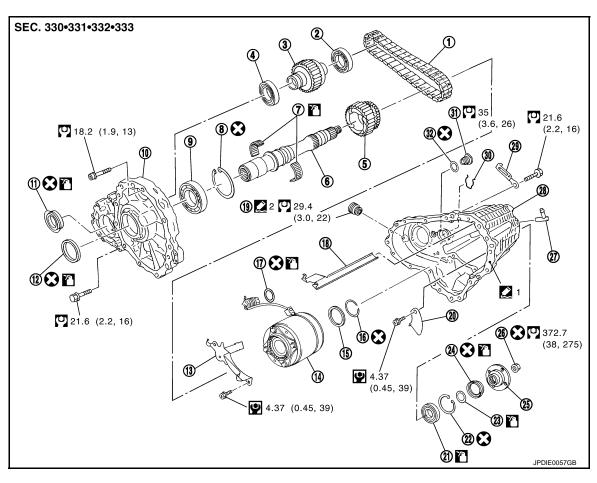

- 1. Drive chain
- Front drive shaft front bearing
- Needle bearing 7.
- 10. Front case
- 13. Oil cover
- 16. Snap ring
- 19. Drain plug
- 22. Snap ring
- 25. Companion flange
- 28. Rear case
- 31. Filler plug

- 2. Front drive shaft rear bearing
- 5. Sprocket
- Snap ring
- 11. Front oil seal
- 14. Electric controlled coupling
- 17. O-ring
- 20. Baffle plate
- 23. Spacer
- 26. Self-lock nut
- 29. Harness bracket
- 32. Gasket

3. Front drive shaft

[TRANSFER: ETX13B]

- Mainshaft 6.
- 9. Mainshaft bearing
- 12. Mainshaft oil seal
- 15. Spacer
- 18. Oil gutter
- 21. Rear bearing
- Rear oil seal
- Breather tube
- 30. Retainer
- 21: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"
- 2: Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"
- ? Apply transfer fluid. Refer to MA-10, "Fluids and Lubricants". Refer to GI-4, "Components" for symbols not described above.

#### Removal and Installation

INFOID:0000000004345287

#### **REMOVAL**


- Remove the drain plug to drain the transfer fluid. Refer to <u>DLN-44</u>, "<u>Draining</u>".
- Remove the front propeller shaft. Refer to <u>DLN-76</u>, "Removal and Installation".

## FRONT OIL SEAL

### < REMOVAL AND INSTALLATION >

3. Remove front oil seal with a suitable tool. **CAUTION:** 


Never damage the front case and front drive shaft.

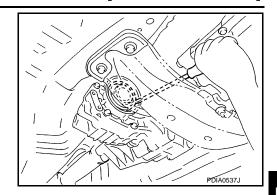

[TRANSFER: ETX13B]

### **INSTALLATION**

- Apply transfer fluid to front oil seal, install it with a drift (A) [SST: ST27862000 ( )] until the end face of front case.
   CAUTION:
  - · Never reuse front oil seal.
  - When installing, never incline front oil seal.
- 2. Install front propeller shaft. Refer to <u>DLN-76</u>, "<u>Removal and Installation</u>".
- 3. Install transfer fluid, check fluid level and for fluid leakage. Refer to <a href="DLN-44">DLN-44</a>, "Inspection".

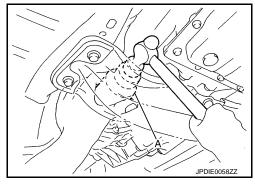

DLN

Α

В

C

F

Е

G

Н

Κ

L


M

Ν

0

## REAR OIL SEAL

Exploded View

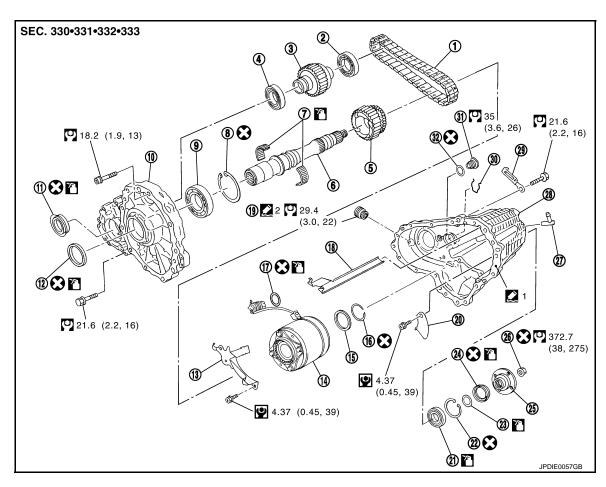

- 1. Drive chain
- 4. Front drive shaft front bearing
- 7. Needle bearing
- 10. Front case
- 13. Oil cover
- 16. Snap ring
- 19. Drain plug
- 22. Snap ring
- 25. Companion flange
- 28. Rear case
- 31. Filler plug

- 2. Front drive shaft rear bearing
- 5. Sprocket
- 8. Snap ring
- 11. Front oil seal
- II. FIOIR OII Sea
- 14. Electric controlled coupling
- 17. O-ring
- 20. Baffle plate
- 23. Spacer
- 26. Self-lock nut
- 29. Harness bracket
- 32. Gasket

3. Front drive shaft

[TRANSFER: ETX13B]

- 6. Mainshaft
- 9. Mainshaft bearing
- 12. Mainshaft oil seal
- 15. Spacer
- 18. Oil gutter
- 21. Rear bearing
- 24. Rear oil seal
- 27. Breather tube
- 30. Retainer
- 21: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"
- 2: Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"
- Apply transfer fluid. Refer to MA-10, "Fluids and Lubricants". Refer to GI-4, "Components" for symbols not described above.

#### Removal and Installation

INFOID:0000000004345289


#### **REMOVAL**

Remove the rear propeller shaft. Refer to <u>DLN-91, "Removal and Installation"</u>.

## **REAR OIL SEAL**

## < REMOVAL AND INSTALLATION >

2. Remove self-lock nut of companion flange with a flange wrench (A) (commercial service tool).

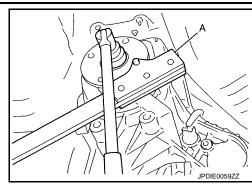


[TRANSFER: ETX13B]

3. Put matching mark (A) on the end of the mainshaft. The mark should be in line with the mark (B) on the companion flange.

CAUTION:


For matching mark, use paint. Never damage mainshaft.

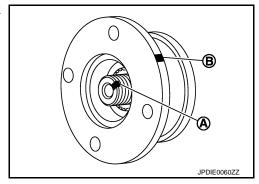

4. Remove the companion flange with a puller (A) (commercial service tool).

#### **CAUTION:**


Never damage the companion flange.

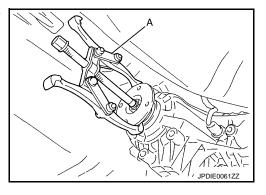

5. Remove the rear oil seal with the puller (A) [SST: KV381054S0 (J-34286)].

#### **CAUTION:**

Never damage the rear case.

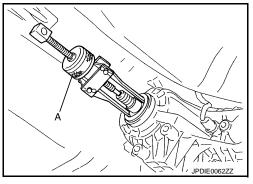

**INSTALLATION** 

Р

Revision: 2010 March **DLN-49** 2009 EX35

Α

В

С

DLN

Е

F

G

Н

K

M

Ν

0

## **REAR OIL SEAL**

#### < REMOVAL AND INSTALLATION >


1. Apply transfer fluid to rear oil seal, install it with the drifts within the dimension (L) shown as follows.

A : Drift [SST: ST30720000 (J-25405)]
B : Drift [SST: KV40104830 ( — )]


L : 6.7 - 7.3 mm (0.264 - 0.287 in)

#### **CAUTION:**

- Never reuse rear oil seal.
- When installing, never incline rear oil seal.
- 2. Align the matching mark (A) of mainshaft with the mark (B) of companion flange, then install the companion flange.

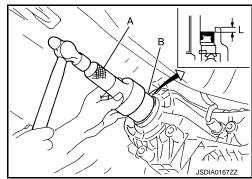

[TRANSFER: ETX13B]

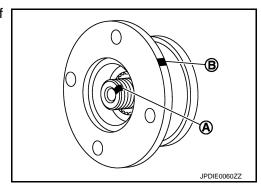


3. Using a flange wrench (A) (commercial service tool), install the self-lock nut of companion flange and tighten to the specified torque.

#### **CAUTION:**

Never reuse self-lock nut.


- 4. Install the rear propeller shaft. Refer to <u>DLN-91</u>, "Removal and <u>Installation"</u>.
- 5. Check fluid level. Refer to <a href="DLN-44">DLN-44</a>, "Inspection".

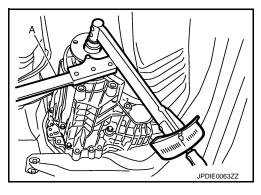

## UNIT REMOVAL AND INSTALLATION

## TRANSFER ASSEMBLY

Exploded View

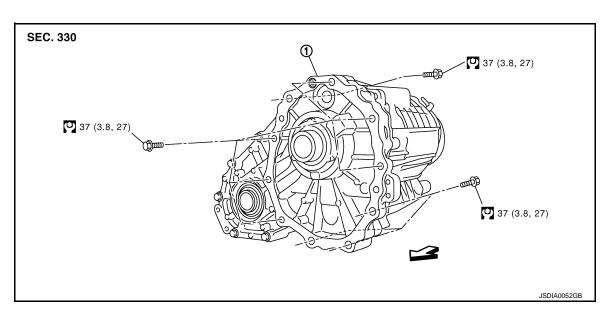

1. Transfer assembly

∀ : Vehicle front

Refer to GI-4, "Components" for symbols in the figure.


#### Removal and Installation

#### REMOVAL

- Remove exhaust front tube with power tool. Refer to <u>EX-6, "Removal and Installation"</u>.
- 2. Remove front propeller shaft. Refer to <u>DLN-76</u>, "Removal and Installation".
- 3. Remove rear propeller shaft. Refer to <u>DLN-91, "Removal and Installation"</u>.
- 4. Disconnect AWD solenoid harness connector and separate harness from transfer assembly.
- 5. Remove transfer air breather hose.
- 6. Remove control rod. Refer to TM-163, "Removal and Installation".
- 7. Support transfer assembly and transmission assembly with a jack.
- 8. Remove rear engine mounting member and engine mounting insulator with power tool. Refer to <u>EM-84</u>, "AWD: Removal and Installation".
- 9. Lower jack to the position where the top transfer mounting bolts can be removed.
- 10. Remove transfer mounting bolts with power tool and separate transfer from transmission.

#### **CAUTION:**

Secure transfer assembly and transmission assembly to a jack.

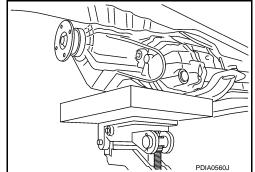

[TRANSFER: ETX13B]

Α

DLN

Ν

INFOID:0000000004345291

#### INSTALLATION


Note the following, and install in the reverse order of removal.

## TRANSFER ASSEMBLY


#### < UNIT REMOVAL AND INSTALLATION >

 When installing the transfer to the transmission, install the mounting bolts following the standard below, tighten bolts to the specified torque.

Bolt No.	1	2	3	4
Quantity	4	3	2	1
Bolt length " $\ell$ " mm (in)	75 (2.95)	45 (1.77)	40 (1.57)	30 (1.18)




:Transmission to transfer.

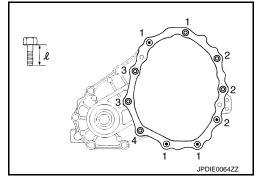


[TRANSFER: ETX13B]


- When installing transfer air breather hose, make sure there are no pinched or restricted areas on the transfer air breather hose caused by bending or winding.
- Set transfer air breather hose with paint mark facing upward.
- Be sure to insert transfer air breather hose (1) into breather tube (2) until hose end reaches the tube's base.

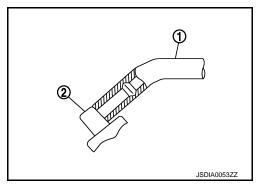

- Do not deviate from the range (L) of the transfer air breather when installing the transfer air breather hose (1) to the harness bracket (2) of the transfer.

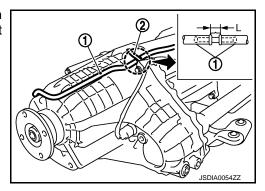


- Install transfer air breather hose (1) with bracket between the adapter case (2) and the transmission case (3) as shown in the figure.

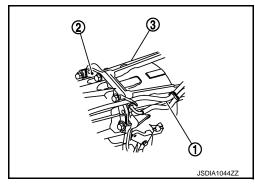

## TRANSFER ASSEMBLY

## < UNIT REMOVAL AND INSTALLATION >

- Be sure to insert air breather hose (1) to transfer tube until hose end reaches the tube bend R portion.
- After the installation, check the fluid level, fluid leakage and the A/T positions. Refer to <u>DLN-44</u>, "<u>Inspection</u>".

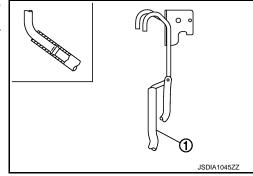

[TRANSFER: ETX13B]

Α

В

С

DLN

Е

F

G

Н

Κ

L

M


Ν

0

## UNIT DISASSEMBLY AND ASSEMBLY

## FRONT CASE AND REAR CASE

Exploded View

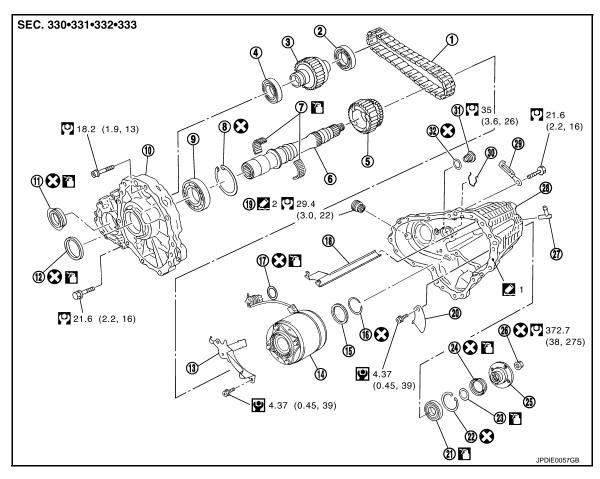

- 1. Drive chain
- 4. Front drive shaft front bearing
- 7. Needle bearing
- 10. Front case
- 13. Oil cover
- 16. Snap ring
- 19. Drain plug
- 22. Snap ring
- 25. Companion flange
- 28. Rear case
- 31. Filler plug

- 2. Front drive shaft rear bearing
- 5. Sprocket
- 8. Snap ring
- 11. Front oil seal
- ---
- 14. Electric controlled coupling
- 17. O-ring
- 20. Baffle plate
- 23. Spacer
- 26. Self-lock nut
- 29. Harness bracket
- 32. Gasket

3. Front drive shaft

[TRANSFER: ETX13B]

- 6. Mainshaft
- 9. Mainshaft bearing
- 12. Mainshaft oil seal
- 15. Spacer
- 18. Oil gutter
- 21. Rear bearing
- 24. Rear oil seal
- 27. Breather tube
- 30. Retainer
- 21: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"
- 2: Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"
- : Apply transfer fluid. Refer to MA-10, "Fluids and Lubricants".

Refer to GI-4, "Components" for symbols not described above.


Disassembly

1. Remove drain plug and filler plug.

## < UNIT DISASSEMBLY AND ASSEMBLY >

Remove mainshaft oil seal from front case with a suitable tool. CAUTION:

Never damage the front case and mainshaft.

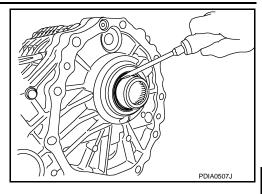

[TRANSFER: ETX13B]

Α

В

C

DLN

Е

Н

K


M

Ν

Remove front oil seal from front case with a suitable tool. CAUTION:


Never damage the front case and front drive shaft.

4. Remove self-lock nut.

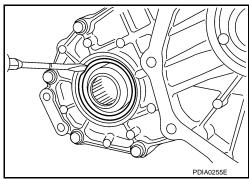

5. Put a matching mark (A) on the end of mainshaft. The mark should be in line with the mark (B) on the companion flange. **CAUTION:** 


For matching mark, use paint. Never damage mainshaft.

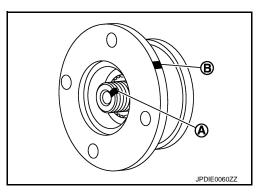

6. Remove companion flange with a puller (A) (commercial service tool).

#### **CAUTION:**


Never damage the companion flange.

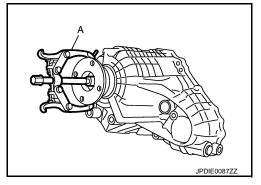

7. Remove rear oil seal from rear case with the puller (A) [SST: KV381054S0 (J-34286)].


#### **CAUTION:**

Never damage the rear case.

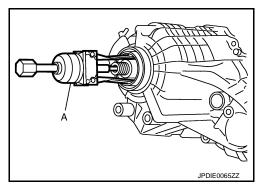


Revision: 2010 March **DLN-55** 2009 EX35

8. Remove spacer (1) from mainshaft.

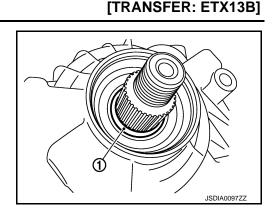

Remove front case and rear case fixing bolts, then remove harness bracket.


Bolts symbol	Quantity	Bolt length "ℓ" mm (in)
A	11	42 (1.65)
В	1	162 (6.38)
С	1	97 (3.82)
TORX bolt	1	40 (1.57)

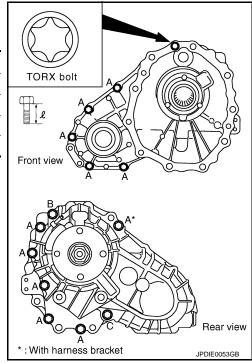


10. Remove front case (1) from rear case by levering it up with a suitable tool.

**CAUTION:** 

Never damage the mating surface.

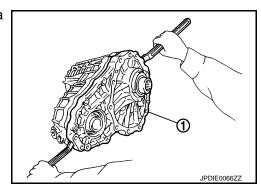


11. Remove snap ring (1) from front case.

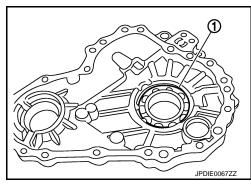

## < UNIT DISASSEMBLY AND ASSEMBLY >

12. Remove mainshaft bearing from front case with the drift (A) [SST: KV38100300 (J-25523)].

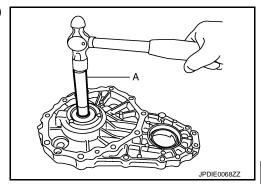

[TRANSFER: ETX13B]

DLN

Е

Α


В

C

13. Remove drive chain and front drive shaft while tapping front drive shaft with plastic hammer.

**CAUTION:** 


Never tap drive chain.

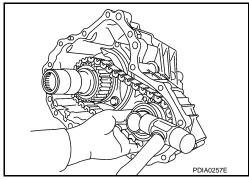


F

Н

14. Remove oil gutter (1) from rear case.

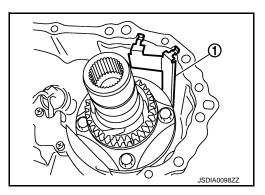

15. Remove oil cover bolts from rear case. And then, remove oil cover (1).

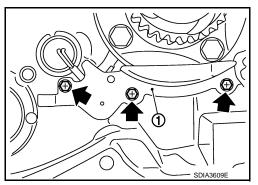

M

Ν


0

Р

16. Remove retainer (1) from AWD solenoid harness connector.

17. Remove AWD solenoid harness connector from rear case.


18. Remove O-ring from AWD solenoid harness connector.

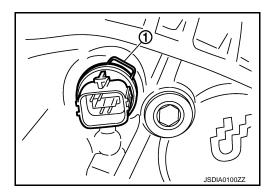

Revision: 2010 March **DLN-57** 2009 EX35


## < UNIT DISASSEMBLY AND ASSEMBLY >

19. Remove mainshaft assembly from rear case with the drift (A) [SST: ST33052000 ( - )].

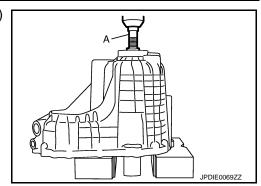


[TRANSFER: ETX13B]

20. Remove snap ring (1) from rear case.

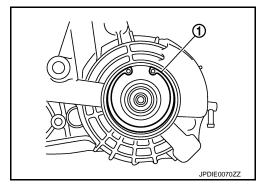


21. Remove rear bearing from rear case with the drifts.

A : Drift bar [SST: ST30611000 (J-25742-1)]
B : Drift [SST: ST35321000 ( — )]

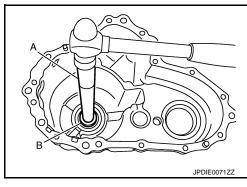

- 22. Remove baffle plate (1) from rear case.
- 23. Remove breather tube from rear case.

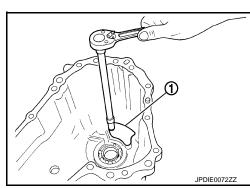

#### < UNIT DISASSEMBLY AND ASSEMBLY >


Assembly

1. Install breather tube with plastic hammer.

#### **CAUTION:**

Pay attention to the direction of breather tube.

2. Install baffle plate to rear case.

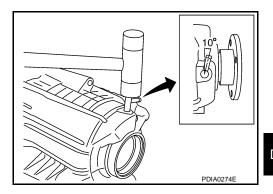

[TRANSFER: ETX13B]

DLN

Е

Н

K

M

Ν


Α

В

3. Install rear bearing to rear case with the drift (A) [SST: KV38104010 ( — )].

#### **CAUTION:**


Apply transfer fluid to inside of rear bearing.

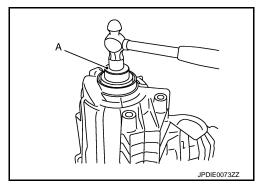

4. Install snap ring (1) to rear case.

#### **CAUTION:**

Never reuse snap ring.

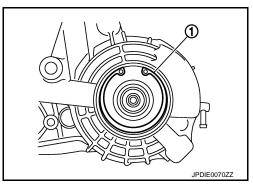


5. Install mainshaft assembly to rear case with the drift (A) [SST: ST35321000 ( — )].

### **CAUTION:**


Transfer fluid should be applied to contact surface of mainshaft and rear bearing.

- Install O-ring to AWD solenoid harness connector. CAUTION:
  - Never reuse O-ring.
  - Apply transfer fluid to O-ring.
- 7. Install AWD solenoid harness connector into rear case.

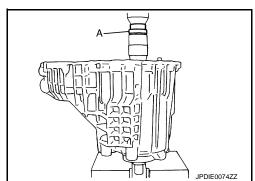


[TRANSFER: ETX13B]

Install retainer (1) to AWD solenoid harness connector.

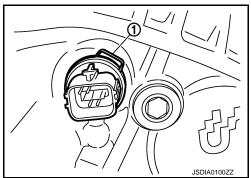

9. Hold electric controlled coupling harness (1) with oil cover hold plate (2), install oil cover (3) to rear case (4). **CAUTION:** 


The harness should be guided by a cut portion.

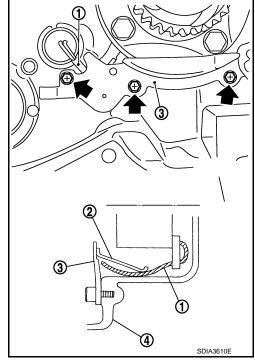

10. Install oil gutter (1) to rear case.

### **CAUTION:**


The tip of oil gutter should be put into rear case groove.

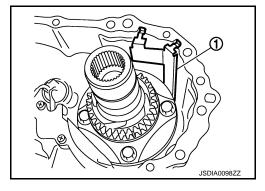

11. Install drive chain to front drive shaft.

#### **CAUTION:**

Identification mark (A) of drive chain should be in the side of front bearing (1) of front drive shaft.

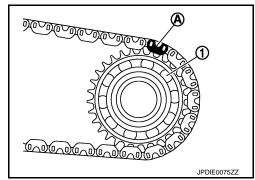


#### < UNIT DISASSEMBLY AND ASSEMBLY >

12. Install drive chain to mainshaft, and then install tap front drive shaft with plastic hammer. Press-fit rear bearing of front drive shaft to rear case.

#### **CAUTION:**

Never tap drive chain.

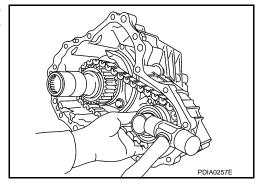

[TRANSFER: ETX13B]

Α

В

DLN

Е


Н

M

Ν

Р


13. Install mainshaft bearing to front case with the drift (A) [SST: ST30621000 (J-25742-5)].

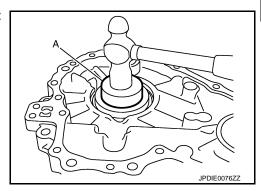

14. Install snap ring (1) to front case.

#### **CAUTION:**


Never reuse snap ring.

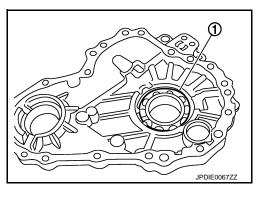

15. Apply liquid gasket to mating surface of rear case.

Use Genuine Anaerobic Liquid Gasket or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".


Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.

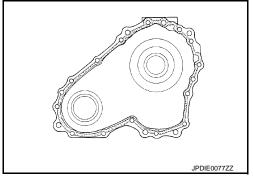

16. Set front case to rear case.

#### **CAUTION:**


Never damage the mating surface transmission side.

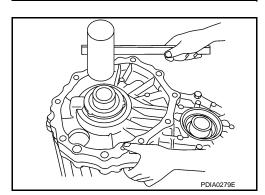

## < UNIT DISASSEMBLY AND ASSEMBLY >

17. Tighten front case and rear case fixing bolts.

Bolts symbol	Quantity	Bolt length " $\ell$ " mm (in)
A	11	42 (1.65)
В	1	162 (6.38)
С	1	97 (3.82)
TORX bolt	1	40 (1.57)

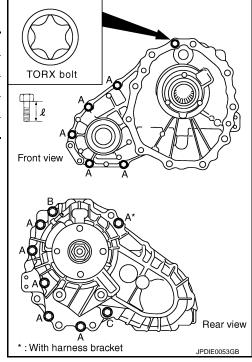


[TRANSFER: ETX13B]

18. Install spacer (1) to mainshaft.

### **CAUTION:**

Apply transfer fluid to spacer.

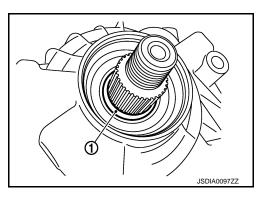


19. Install rear oil seal to rear case with the drifts within the dimension (L) shown as follows.

A : Drift [SST: ST30720000 (J-25405)]
B : Drift [SST: KV40104830 ( — )]

L : 6.7 – 7.3 mm (0.264 – 0.287 in)


#### **CAUTION:**

- Never reuse rear oil seal.
- Apply transfer fluid to rear oil seal.
- When installing, never incline rear oil seal.

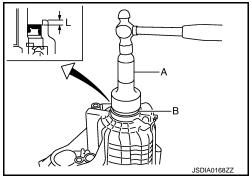

#### < UNIT DISASSEMBLY AND ASSEMBLY >

20. Install companion flange while aligning the matching mark (A) of mainshaft with the mark (B) of companion flange.

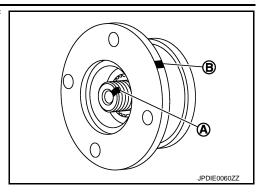


[TRANSFER: ETX13B]

21. Tighten self-lock nut to the specified torque with flange wrench (A) (commercial service tool).

#### **CAUTION:**


Never reuse self-lock nut.

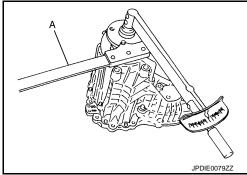

22. Install mainshaft oil seal until it is flush with end face of front case with the drift (A) [SST: ST30720000 (J-25405)].

#### **CAUTION:**

- · Never reuse mainshaft oil seal.
- Apply transfer fluid to mainshaft oil seal.
- When installing, never incline mainshaft oil seal.

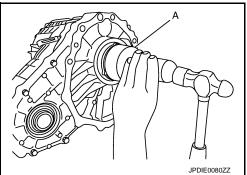

23. Install front oil seal until it is flush with end face of front case with the drift (A) [SST: ST27862000 ( — )].

### **CAUTION:**

- · Never reuse front oil seal.
- · Apply transfer fluid to front oil seal.
- . When installing, never incline front oil seal.
- 24. Apply sealant to threads of drain plug. Then, install it to rear case.

Use Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

#### **CAUTION:**

Remove old sealant and oil adhering to threads.

25. Set gasket to filler plug. Install it to rear case.


#### **CAUTION:**

- Never reuse gasket.
- After oil is filled, tighten filler plug to specified torque.

Inspection INFOID:0000000004345295

Check items below. If necessary, replace them with new ones.

**CASES** 

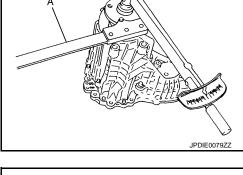

JPDIE0081ZZ

Α

В

DLN

Н


K

M

Ν

## < UNIT DISASSEMBLY AND ASSEMBLY >


- Contact surfaces of bearing for wear, damage, etc.
- · Damage and cracks of case.

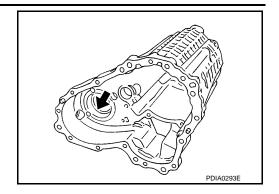

[TRANSFER: ETX13B]


### **BEARING**

• Damage and rough rotation of bearing.

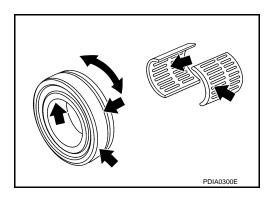


### **SHAFT**

• Damage, peeling, dent, uneven wear, bending, etc. of shaft.

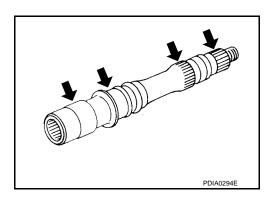


### **GEARS AND CHAIN**

• Excessive wear, damage, peeling, etc. of gear and chain.

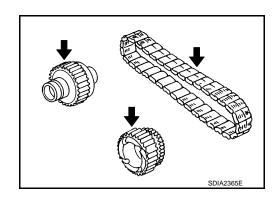

## **MAINSHAFT**

Exploded View

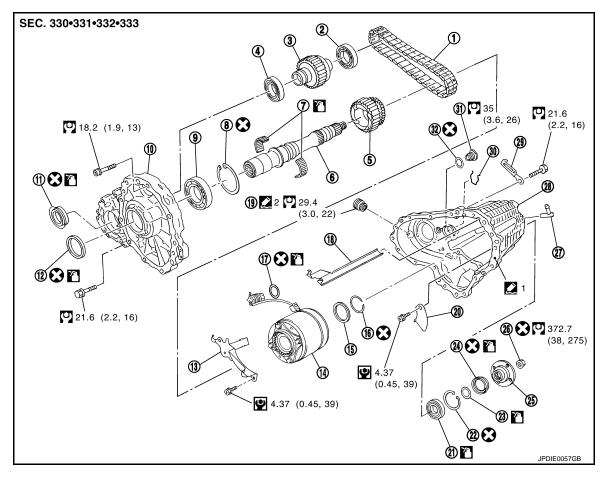

1	١.	Drive	chain

- Front drive shaft front bearing
- 7. Needle bearing
- 10. Front case
- 13. Oil cover
- 16. Snap ring
- Drain plug
- 22. Snap ring
- -
- 25. Companion flange
- 28. Rear case
- 31. Filler plug

- 2. Front drive shaft rear bearing
- 5. Sprocket
- - ·
- 8. Snap ring
- 11. Front oil seal
- 14. Electric controlled coupling
- 17. O-ring
- 20. Baffle plate
- 23. Spacer
- 26. Self-lock nut
- 29. Harness bracket
- 32. Gasket

3. Front drive shaft

[TRANSFER: ETX13B]

Α

В

C

DLN

Н

Ν

Р

- 6. Mainshaft
- 9. Mainshaft bearing
- 12. Mainshaft oil seal
- 15. Spacer
- 18. Oil gutter
- 21. Rear bearing
- 24. Rear oil seal
- 27. Breather tube
- 30. Retainer

21: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"

2: Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"

Apply transfer fluid. Refer to MA-10, "Fluids and Lubricants". Refer to GI-4, "Components" for symbols not described above.


Disassembly INFOID:000000004345297

Separate front case and rear case, then remove mainshaft assembly. Refer to <u>DLN-54, "Disassembly"</u>.

## **MAINSHAFT**

#### < UNIT DISASSEMBLY AND ASSEMBLY >

- 2. Remove snap ring (1) from mainshaft.
- 3. Remove spacer from mainshaft.
- Remove electric controlled coupling and sprocket from mainshaft.
- 5. Remove needle bearing from mainshaft.

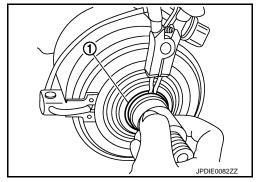

[TRANSFER: ETX13B]

INFOID:0000000004345298


## Assembly

1. Install needle bearing to mainshaft.

#### **CAUTION:**

Apply transfer fluid to periphery of needle bearing.

- 2. Install sprocket and electric controlled coupling to mainshaft.
- Install spacer to main shaft.

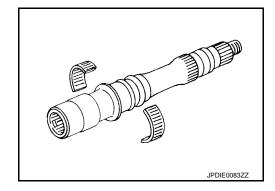


4. Install snap ring (1) to mainshaft.

#### **CAUTION:**

Never reuse snap ring.

5. Install mainshaft assembly to rear case, then install front case and rear case. Refer to <a href="DLN-59">DLN-59</a>, "Assembly".

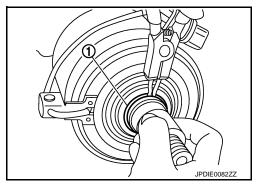


Inspection INFOID:000000004345299

Check items below. If necessary, replace them with new ones.

#### **CASES**

- Contact surfaces of bearing for wear, damage, etc.
- · Damage and cracks of case.

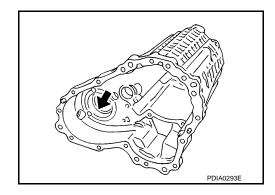


#### **BEARING**

## **MAINSHAFT**

## < UNIT DISASSEMBLY AND ASSEMBLY >

• Damage and rough rotation of bearing.

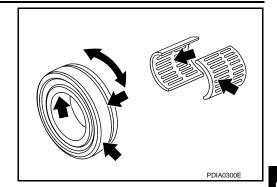

[TRANSFER: ETX13B]

## DLN

Е

F

G

Н


Α

В

C


## SHAFT

• Damage, peeling, dent, uneven wear, bending, etc. of shaft.

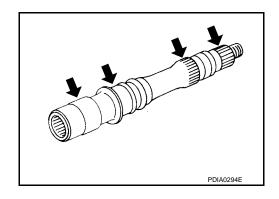

### **GEARS AND CHAIN**

• Excessive wear, damage, peeling, etc. of gear and chain.

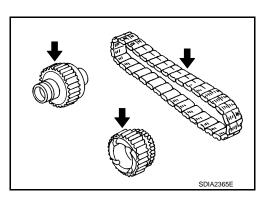


K

M

Ν

0

Exploded View

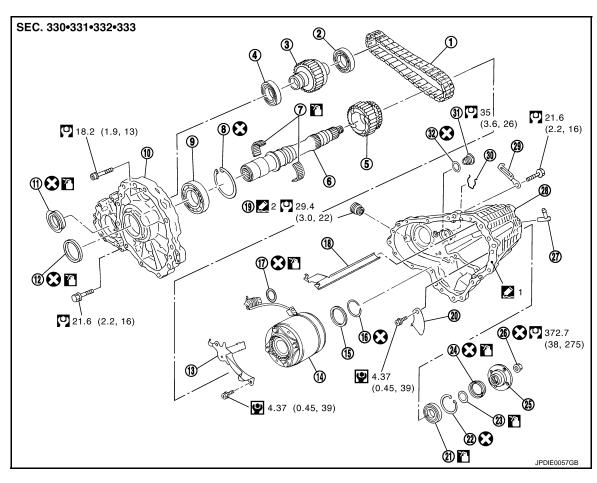

- Drive chain
- 4. Front drive shaft front bearing
- 7. Needle bearing
- 10. Front case
- 13. Oil cover
- 16. Snap ring
- 19. Drain plug
- 22. Snap ring
- 25. Companion flange
- 28. Rear case
- 31. Filler plug

- 2. Front drive shaft rear bearing
- 5. Sprocket
- 8. Snap ring
- 11. Front oil seal
- II. FIUIILUII Sea
- 14. Electric controlled coupling
- 17. O-ring
- 20. Baffle plate
- 23. Spacer
- 26. Self-lock nut
- 29. Harness bracket
- 32. Gasket

3. Front drive shaft

[TRANSFER: ETX13B]

- 6. Mainshaft
- 9. Mainshaft bearing
- 12. Mainshaft oil seal
- 15. Spacer
- 18. Oil gutter
- 21. Rear bearing
- 24. Rear oil seal
- 27. Breather tube
- 30. Retainer
- 21: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"
- 2: Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"
- Apply transfer fluid. Refer to MA-10, "Fluids and Lubricants". Refer to GI-4, "Components" for symbols not described above.

Disassembly INFOID:000000004345300


1. Separate front case and rear case. Refer to <a href="DLN-54">DLN-54</a>, "Disassembly".

### < UNIT DISASSEMBLY AND ASSEMBLY >

2. Remove drive chain and front drive shaft while tapping front drive shaft with plastic hammer.

**CAUTION:** 

Never tap drive chain.

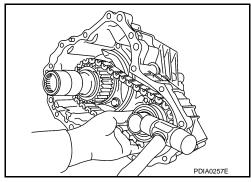


[TRANSFER: ETX13B]

3. Remove front drive shaft front bearing with the drift (A) and puller (B).

A: Drift [SST: ST31214000 (J-25269-B)]


B: Puller (commercial service tool)

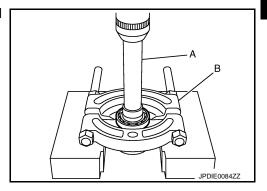

 Remove front drive shaft rear bearing with the drift (A) and puller (B).


A: Drift [SST: ST31214000 (J-25269-B)]

B: Puller (commercial service tool)

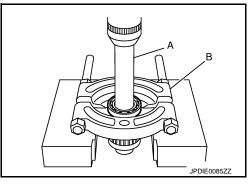

Assembly

1. Install front drive shaft front bearing with the drift (A) [SST: ST33200000 (J-26082)].

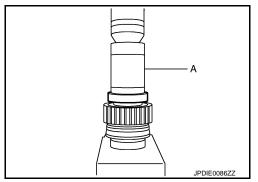

Α

В

С

DLN

Е

F

G

Н

I

J

Κ

L

M


Ν

0

Ρ

### < UNIT DISASSEMBLY AND ASSEMBLY >

 Install front drive shaft rear bearing with the drift (A) [SST: KV38104010 ( — )].

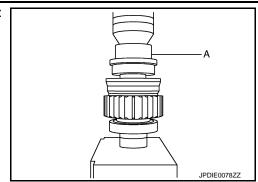


[TRANSFER: ETX13B]

Install drive chain to front drive shaft.

#### **CAUTION:**

Identification mark (A) of drive chain should be in the side of front bearing (1) of front drive shaft.

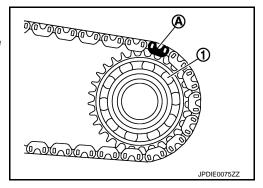


4. Install drive chain to mainshaft, and then install by tapping front drive shaft with plastic hammer. Press-fit rear bearing of front drive shaft to rear case.

#### **CAUTION:**

Never tap drive chain.

5. Install front case to rear case. Refer to <a href="DLN-59">DLN-59</a>, "Assembly".

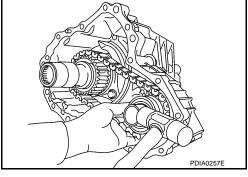


Inspection INFOID:0000000004345303

Check items below. If necessary, replace them with new ones.

#### **CASES**


- Contact surfaces of bearing for wear, damage, etc.
- Damage and cracks of case.

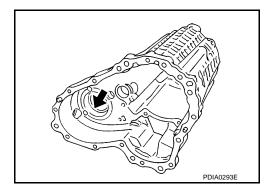

**BEARING** 

## < UNIT DISASSEMBLY AND ASSEMBLY >

• Damage and rough rotation of bearing.

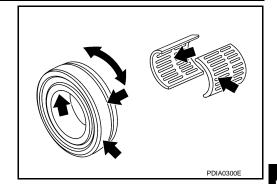

[TRANSFER: ETX13B]

## Α

В

С

## DLN

Е


F

G

Н


### SHAFT

• Damage, peeling, dent, uneven wear, bending, etc. of shaft.

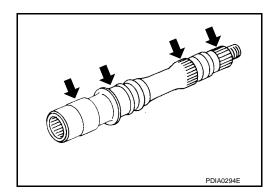

### **GEARS AND CHAIN**

• Excessive wear, damage, peeling, etc. of gear and chain.

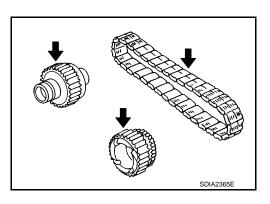

M

Ν

0

## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

## **General Specifications**

INFOID:0000000004345304

[TRANSFER: ETX13B]

		AWD
Applied model		VQ35HR
		A/T
Transfer model		ETX13B
Fluid capacity (Approx.)	ℓ (US pt, Imp pt)	1.25 (2-5/8, 2-1/4)

### NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING [FRONT PROPELLER SHAFT: 2S56A]

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## **NVH Troubleshooting Chart**

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference		DLN-75, "Inspection"	I	I	I	I	DLN-77, "Inspection"	DLN-77, "Inspection"	NVH in DLN section.	NVH in FAX, RAX, FSU and RSU section.	NVH in WT section.	NVH in WT section.	NVH in RAX section.	NVH in BR section.	NVH in ST section.	C DLN E
Possible cause and SUSPECT	ED PARTS	Uneven rotating torque	Center bearing improper installation	Excessive center bearing axial end play	Center bearing mounting (insulator) cracks, damage or deterioration	Excessive joint angle	Rotation imbalance	Excessive runout	DIFFERENTIAL	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING	H I J K
	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×	×	Ν
Symptom	Shake Vibration	×	×	×	×	×	×	×		×	×	×	×	×	×	

<sup>×:</sup> Applicable

**DLN-73** Revision: 2010 March 2009 EX35

Р

Α

В

< PREPARATION >

[FRONT PROPELLER SHAFT: 2S56A]

## **PREPARATION**

## **PREPARATION**

## **Commercial Service Tools**

Tool name		Description
Power tool		Loosening bolts and nuts
	PBIC0190E	

#### FRONT PROPELLER SHAFT

< PERIODIC MAINTENANCE >

[FRONT PROPELLER SHAFT: 2S56A]

## PERIODIC MAINTENANCE

### FRONT PROPELLER SHAFT

Inspection INFOID:0000000004345307

#### **NOISE**

Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.

#### **VIBRATION**

If vibration is present at high speed, inspect propeller shaft runout first.

1. With a dial indicator, measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

∀
 : Vehicle front

Limit

Propeller shaft runout : Refer to <u>DLN-78, "Propeller Shaft Runout".</u>

 If runout still exceeds specifications, separate propeller shaft at final drive companion flange; then rotate companion flange 90, 180, 270 degrees and install propeller shaft.

3. Check runout again. If runout still exceeds specifications, replace propeller shaft assembly.


4. Check the vibration by driving vehicle.

#### RUNOUT MEASURING POINT

Propeller shaft runout measuring point (Point "△").

#### **Standard**

A : 381.5 mm (15.02 in)

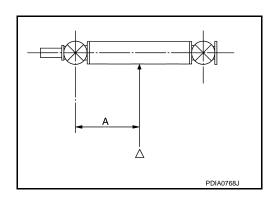

0

DLN

Α

В

C

Е

G

Н

I

J

K

M


Ν

0

## **REMOVAL AND INSTALLATION**

## FRONT PROPELLER SHAFT

Exploded View

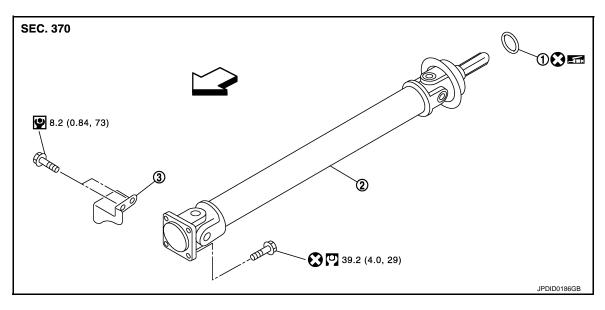

1. O-ring

2. Propeller shaft assembly

3. Heat bracket

∀
 : Vehicle front


Refer to GI-4, "Components" for symbols in the figure.

#### Removal and Installation

INFOID:0000000004345309

#### **REMOVAL**

- 1. Shift the transaxle to the neutral position, and then release the parking brake.
- 2. Remove engine undercover with a power tool.
- 3. Remove front cross bar.
- 4. Remove the three-way catalyst (right bank) with a power tool. Refer to EM-34, "Exploded View".
- 5. Remove heat bracket (1).

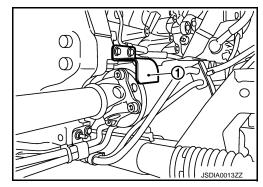

#### FRONT PROPELLER SHAFT

#### < REMOVAL AND INSTALLATION >

#### [FRONT PROPELLER SHAFT: 2S56A]

Put matching mark onto propeller shaft flange yoke and final drive companion flange.

#### **CAUTION:**

For matching mark, use paint. Never damage propeller shaft flange and final drive companion flange.

- Remove the propeller shaft assembly fixing bolts.
- 8. Remove propeller shaft assembly from the front final drive and transfer.

#### **CAUTION:**

Never damage the transfer front oil seal.

- Hang steering hydraulic line not to interfere with work. Refer to ST-51, "AWD: Exploded View".
- 10. Remove propeller shaft assembly from O-ring.

#### INSTALLATION

Note the following, and install in the reverse order of removal.

- Align matching mark to install propeller shaft assembly to final drive companion flange.
- After assembly, perform a driving test to check propeller shaft vibration. If vibration occurred, separate propeller shaft from final drive. Reinstall companion flange after rotating it by 90, 180, 270 degrees. Then perform driving test and check propeller shaft vibration again at each point.

#### **CAUTION:**

- Never damage the transfer front oil seal.
- Never reuse O-ring.
- Apply multi-purpose grease onto O-ring.

Inspection INFOID:0000000004345310

#### **APPEARANCE**

Check propeller shaft for bend and damage. If damage is detected, replace propeller shaft assembly.

#### PROPELLER SHAFT RUNOUT

Check propeller shaft runout at measuring point with a dial indicator. If runout exceeds specifications, replace propeller shaft assembly. For measuring point, refer to DLN-75, "Inspection".

#### Limit

**Propeller shaft runout** 

#### : Refer to <u>DLN-78</u>, "Propeller Shaft Runout".

#### JOURNAL AXIAL PLAY


As shown in the figure, while fixing yoke on one side, check axial play of joint. If it is outside the standard, replace propeller shaft assembly.


#### **Standard**


: Refer to DLN-78, "Journal Journal axial play Axial Play".


#### **CAUTION:**

Never disassemble joints.

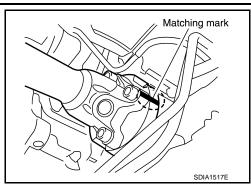

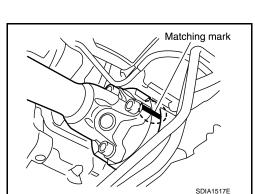

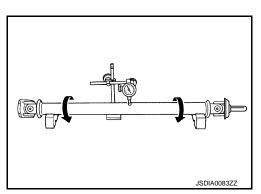

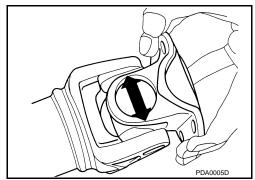

Α

В

DLN

Н

K

M

### **SERVICE DATA AND SPECIFICATIONS (SDS)**

< SERVICE DATA AND SPECIFICATIONS (SDS)

[FRONT PROPELLER SHAFT: 2S56A]

## SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

## **General Specifications**

INFOID:0000000004345311

	AWD
Applied model	VQ35HR
	A/T
Propeller shaft model	2S56A
Number of joints	2
Type of journal bearings (Non-disassembly type)	Shell type
Coupling method with transfer	Sleeve type
Coupling method with front final drive	Flange type
Shaft length (Spider to spider)	763 mm (30.04 in)
Shaft outer diameter	42.7 mm (1.681 in)

## **Propeller Shaft Runout**

INFOID:0000000004345312

	Unit: mm (in)
Item	Limit
Propeller shaft runout	0.8 (0.031)

## Journal Axial Play

	Unit: mm (in)
Item	Standard
Journal axial play	0 (0)
<u> </u>	

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

[REAR PROPELLER SHAFT: 3S80A-R]

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## **NVH Troubleshooting Chart**

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference		DLN-81, "Inspection"	DLN-85, "Inspection"	I	DLN-85, "Inspection"	I	DLN-85, "Inspection"	DLN-85, "Inspection"	NVH in DLN section.	NVH in FAX, RAX, FSU and RSU section.	NVH in WT section.	NVH in WT section.	NVH in RAX section.	NVH in BR section.	NVH in ST section.
Possible cause and SUSPEC		Uneven rotating torque	Center bearing improper installation	Excessive center bearing axial end play	Center bearing mounting (insulator) cracks, damage or deterioration	Excessive joint angle	Rotation imbalance	Excessive runout	DIFFERENTIAL	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Symptom	Shake		×	.,		×	.,	.,		×	×	×	×	×	×
	Vibration	×	×	×	×	×	×	×		×	×		×		×

<sup>×:</sup> Applicable

Revision: 2010 March **DLN-79** 2009 EX35

Р

0

Α

В

DLN

Е

F

Н

K

L

M

Ν

< PREPARATION >

[REAR PROPELLER SHAFT: 3S80A-R]

## **PREPARATION**

## **PREPARATION**

## **Commercial Service Tools**

Tool name		Description
Power tool		Loosening bolts and nuts
	PBIC0190E	

#### [REAR PROPELLER SHAFT: 3S80A-R]

## PERIODIC MAINTENANCE

### REAR PROPELLER SHAFT

Inspection INFOID:000000004345316

#### **NOISE**

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace propeller shaft assembly.

#### **VIBRATION**

If vibration is present at high speed, inspect propeller shaft runout first.

1. With a dial indicator, measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

#### Limit

Propeller shaft runout : Refer to <u>DLN-87, "Propeller Shaft Runout".</u>

- If runout still exceeds specifications, separate propeller shaft at final drive companion flange; then rotate companion flange 120, 240 degrees and install propeller shaft.
- 3. Check runout again. If runout still exceeds specifications, replace propeller shaft assembly.
- 4. Check the vibration by driving vehicle.


#### RUNOUT MEASURING POINT


Propeller shaft runout measuring point (Point "A").

Vehicle front

#### **Standard**

A : 192 mm (7.56 in)
B : 172 mm (6.77 in)
C : 172 mm (6.77 in)

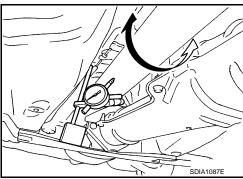

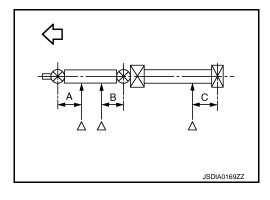

DLN

C

Α

Е

F

G

Н

J

Κ

M

Ν


0

## REMOVAL AND INSTALLATION

### REAR PROPELLER SHAFT

Exploded View

#### APPLIED UP TO VIN NO. JNKAJ09E19M-900084

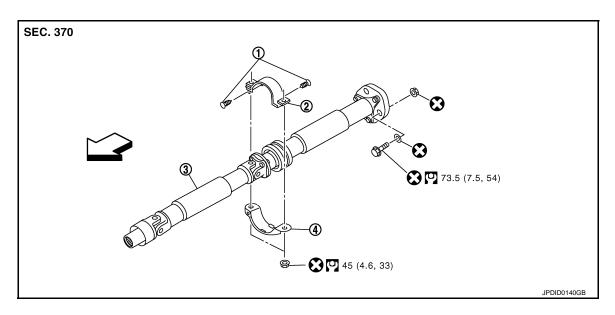

1. Clip


- Center bearing mounting bracket (upper)
- 3. Propeller shaft assembly

4. Center bearing mounting bracket (lower)

∀
 □: Vehicle front

Refer to GI-4, "Components" for symbols in the figure.

#### APPLIED FROM VIN NO. JNKAJ09E19M-900085

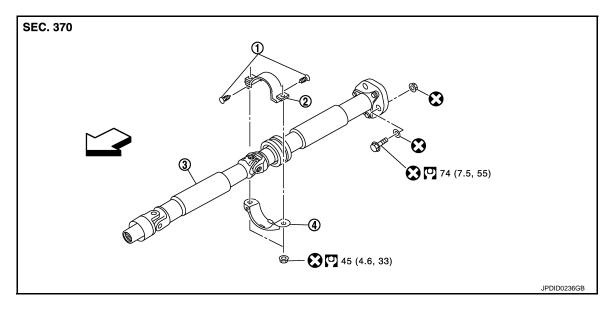

1. Clip

- Center bearing mounting bracket (upper)
- 3. Propeller shaft assembly

 Center bearing mounting bracket (lower)

#### < REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3S80A-R]

∀
 □: Vehicle front


Refer to GI-4, "Components" for symbols in the figure.

#### Removal and Installation

INFOID:0000000004345318

#### **REMOVAL**


- 1. Shift the transaxle to the neutral position, and then release the parking brake.
- 2. Remove the floor reinforcement.
- 3. Remove the center muffler with power tool. Refer to EX-5, "Exploded View".
- 4. Remove the heat plate (1).

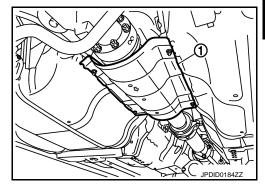

5. Put matching marks ( onto propeller shaft rubber coupling and final drive companion flange.

#### **CAUTION:**

For matching marks, use paint. Never damage propeller shaft rubber coupling and final drive companion flange.

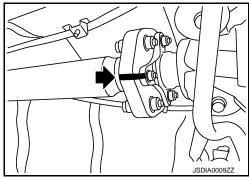


6. Loosen mounting nuts (1) of center bearing mounting brackets (upper/lower).

⟨□ : Vehicle front


#### **CAUTION:**

Tighten mounting nuts temporarily.

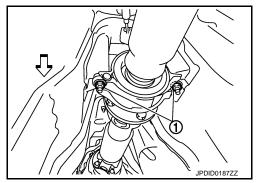

7. Remove propeller shaft assembly fixing bolts and nuts ( ). CAUTION:

Never remove the rubber coupling from the propeller shaft assembly.

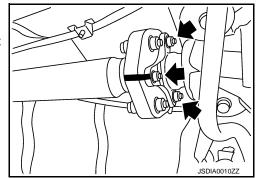

Revision: 2010 March DLN-83 2009 EX35

DLN

Α

В

Е

F

G

Н

|

K

L

M

Ν

0

Ρ


#### < REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3S80A-R]

8. Slightly separate the rubber coupling (1) from the final drive companion flange (2).

#### **CAUTION:**

Never damage the final drive companion flange and rubber coupling.

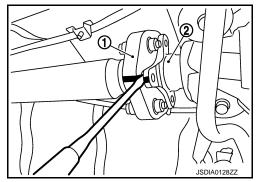

9. Remove center bearing mounting bracket fixing nuts.

#### **CAUTION:**

- The angle (A), which the third axis rubber coupling (1) forms with the final drive companion flange (2), must be 5° or less.
- Never damage the grease seal (3).
- Never damage the rubber coupling.
- Slide the propeller shaft in the vehicle forward direction slightly.
   Separate the propeller shaft from the final drive companion flange.

#### **CAUTION:**

- The angle, which the third axis rubber coupling forms with the final drive companion flange, must be 5° or less.
- Never damage the grease seal.
- Never damage the rubber coupling.
- 11. Remove the propeller shaft assembly from the vehicle.

#### **CAUTION:**


Never damage the rear oil seal of transmission.


12. Remove clip and center bearing mounting bracket (upper/lower).

#### INSTALLATION

Note the following, and install in the reverse order of removal.

- Install center bearing mounting bracket (upper) (1) with its arrow mark (A) facing forward.
- Adjust position of center bearing mounting bracket (upper), center bearing mounting bracket (lower) (2) sliding back and forth to prevent play in thrust direction of center bearing insulator (3). Install center bearing mounting bracket (upper/lower) to vehicle.

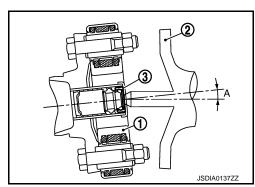


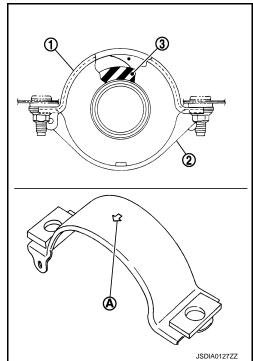

#### < REMOVAL AND INSTALLATION >


[REAR PROPELLER SHAFT: 3S80A-R]

- Align matching marks to install propeller shaft rubber coupling to final drive companion flange.
- After assembly, perform a driving test to check propeller shaft vibration. If vibration occurred, separate propeller shaft from final drive. Reinstall companion flange after rotating it by 120, 240 degrees. Then perform driving test and check propeller shaft vibration again at each point.

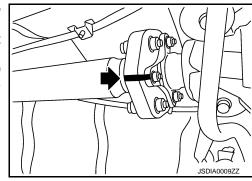


 If propeller shaft or final drive has been replaced, connect them as follows:

- Install the propeller shaft (1) while aligning its matching mark (A) with the matching mark (B) on the joint as close as possible.

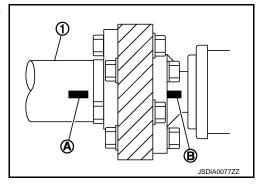

#### **CAUTION:**

- The angle (A), which the third axis rubber coupling (1) forms with the final drive companion flange (2), must be 5° or less.
- Never damage the grease seal (3).
- Never damage the rubber coupling.
- Never damage the rear oil seal of transmission.
- Never damage the rubber coupling, protect it with a shop towel or equivalent.

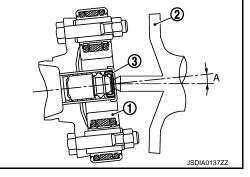

Inspection INFOID:000000004345319

#### **APPEARANCE**

Check propeller shaft for bend and damage. If damage is detected, replace propeller shaft assembly.


#### PROPELLER SHAFT RUNOUT

Check propeller shaft runout at measuring points with a dial indicator. If runout exceeds specifications, replace propeller shaft assembly. For measuring point, refer to <u>DLN-81</u>, "Inspection"

Limit

**Propeller shaft runout** 

: Refer to <u>DLN-87</u>, "Propeller Shaft Runout".

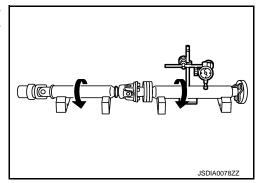

JOURNAL AXIAL PLAY

Α

В

DLN

Е

F

G

Н

I

K

M

Ν

0

#### < REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3S80A-R]


As shown in the figure, while fixing yoke on one side, check axial play of joint. If it is outside the standard, replace propeller shaft assembly.

**Standard** 

Journal axial play : Refer to <u>DLN-87, "Journal Axial Play"</u>.

#### **CAUTION:**

Never disassemble joints.

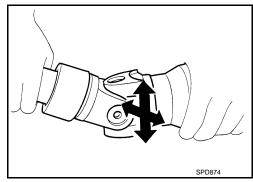

#### **CENTER BEARING**

Check center bearing for noise and damage. If noise or damage is detected, replace propeller shaft assembly. **CAUTION:** 

Never disassemble center bearing.

### **SERVICE DATA AND SPECIFICATIONS (SDS)**

< SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR PROPELLER SHAFT: 3S80A-R]

# SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

**General Specifications** 

INFOID:0000000004345320

Α

В

DLN

Е

F

Н

K

L

Ν

Р

#### APPLIED UP TO VIN NO. JNKAJ09E19M-900084

		2WD	_
Applied model		VQ35HR	
		A/T	
Propeller shaft model		3S80A-R	
Number of joints		3	
	1st joint	Shell type	
Type of journal bearings (Non-disassembly type)	2nd joint	Shell type	
(Non disassembly type)	3rd joint	Rubber coupling type	
Coupling method with tran	nsmission	Sleeve type	
Coupling method with rea	r final drive	Rubber coupling type	
Ch oft longth	1st (Spider to spider)	704 mm (27.72 in)	
Shaft length	2nd (Spider to rubber coupling center)	739 mm (29.09 in)	
Chaft autor diameter	1st	82.6 mm (3.252 in)	
Shaft outer diameter	1st joint 2nd joint 3rd joint d with transmission d with rear final drive  1st (Spider to spider) 2nd (Spider to rubber coupling center) 1st	75.0 mm (2.953 in)	

#### APPLIED FROM VIN NO. JNKAJ09E19M-900085

		2WD
Applied model		VQ35HR
		A/T
Propeller shaft model		3S80A-R
Number of joints		3
	1st joint	Shell type
Type of journal bearings (Non-disassembly type)	2nd joint	Shell type
(Non disassembly type)	3rd joint	Rubber coupling type
Coupling method with tran	nsmission	Sleeve type
Coupling method with rea	r final drive	Rubber coupling type
Ob eff less with	1st (Spider to spider)	720 mm (28.35 in)
Shaft length	2nd (Spider to rubber coupling center)	722 mm (28.43 in)
Chaft autor diameter	1st	82.6 mm (3.252 in)
Shaft outer diameter	2nd	75.0 mm (2.953 in)

## Propeller Shaft Runout

INFOID:0000000004345321

	Office frint (iii)
Item	Limit
Propeller shaft runout	0.8 (0.031)

## Journal Axial Play

INFOID:0000000004345322

	Unit: mm (in)
Item	Standard
Journal axial play	0 (0)

Revision: 2010 March **DLN-87** 2009 EX35

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

### [REAR PROPELLER SHAFT: 3F80A-1VL107]

## SYMPTOM DIAGNOSIS

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## **NVH Troubleshooting Chart**

INFOID:0000000004345323

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference		DLN-90, "Inspection"	DLN-94, "Inspection"	I	DLN-94, "Inspection"	I	DLN-94, "Inspection"	DLN-94, "Inspection"	NVH in DLN section.	NVH in FAX, RAX, FSU and RSU section.	NVH in WT section.	NVH in WT section.	NVH in RAX section.	NVH in BR section.	NVH in ST section.
Possible cause and SUSPEC		Uneven rotating torque	Center bearing improper installation	Excessive center bearing axial end play	Center bearing mounting (insulator) cracks, damage or deterioration	Excessive joint angle	Rotation imbalance	Excessive runout	DIFFERENTIAL	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×	×
Symptom	Shake Vibration		×	· ·	· ·	×	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	~		×	×	×	×	×	×
	VIDIALION	×	×	×	×	×	×	×		×	×		×		×

<sup>×:</sup> Applicable

< PREPARATION >

[REAR PROPELLER SHAFT: 3F80A-1VL107]

## **PREPARATION**

## **PREPARATION**

**Commercial Service Tools** 

Tool name	Description	
Power tool	Loosening bo	olts and nuts
		D
	PBIC0190E	I

Α

В

С

INFOID:0000000004345324

DLN

Е

F

G

Н

1

K

L

M

Ν

0

< PERIODIC MAINTENANCE >

[REAR PROPELLER SHAFT: 3F80A-1VL107]

## PERIODIC MAINTENANCE

### REAR PROPELLER SHAFT

Inspection INFOID:0000000004345325

#### **NOISE**

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace propeller shaft assembly.

#### **VIBRATION**

If vibration is present at high speed, inspect propeller shaft runout first.

1. With a dial indicator, measure propeller shaft runout at runout measuring points by rotating final drive companion flange with hands.

#### Limit

**Propeller shaft runout** 

: Refer to <u>DLN-95</u>, "Propeller Shaft Runout".

- 2. If runout still exceeds specifications, separate propeller shaft at final drive companion flange, then rotate companion flange 60, 120, 180, 240, 300 degrees and install propeller shaft.
- 3. Check runout again. If runout still exceeds specifications, replace propeller shaft assembly.
- 4. Check the vibration by driving vehicle.


#### **RUNOUT MEASURING POINT**


Propeller shaft runout measuring point (Point "A").

< ☐: Vehicle front

#### **Standard**

A : 162 mm (6.38 in)
B : 245 mm (9.65 in)
C : 185 mm (7.28 in)

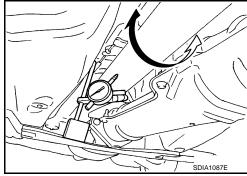

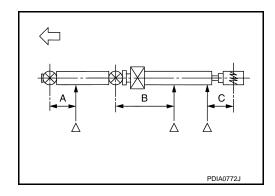


[REAR PROPELLER SHAFT: 3F80A-1VL107]

## REMOVAL AND INSTALLATION

## REAR PROPELLER SHAFT

Exploded View

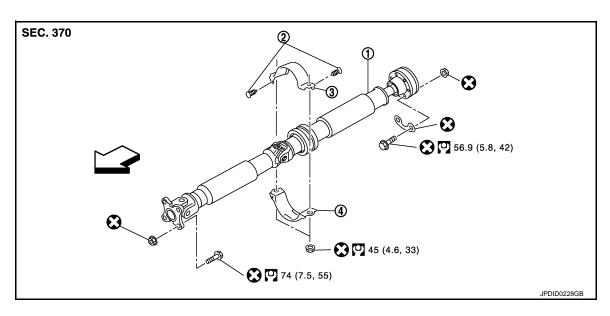

- 1. Propeller shaft assembly
- 2. Clip

3. Center bearing mounting bracket (upper)

Center bearing mounting bracket (lower)


∀
 □: Vehicle front

Refer to GI-4, "Components" for symbols in the figure.

### Removal and Installation

**REMOVAL** 

- 1. Shift the transaxle to the neutral position, and release the parking brake.
- 2. Remove the floor reinforcement.
- 3. Remove the center muffler with power tool. Refer to EX-5, "Exploded View".
- 4. Remove the heat plate (1).

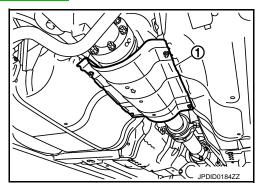

Α

В

C

DLN

Е

Г

G

Н

INFOID:0000000004345327

M

Ν

0


#### < REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3F80A-1VL107]

5. Put matching marks (A) on propeller shaft flange yoke and transfer companion flange.

#### **CAUTION:**


For matching marks, use paint. Never damage propeller shaft flange yoke and transfer companion flange.

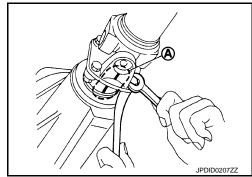

6. Put matching marks (A) on propeller shaft rebro joint and final drive companion flange.

#### **CAUTION:**


For matching marks, use paint. Never damage propeller shaft rebro joint and final drive companion flange.

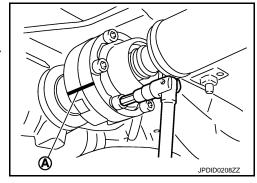

7. Loosen mounting nuts (1) of center bearing mounting brackets (upper/lower).

#### **CAUTION:**

Tighten mounting nuts temporarily.




- 9. Remove center bearing mounting bracket fixing nuts.
- Remove propeller shaft assembly.

#### **CAUTION:**

If constant velocity joint was bent during propeller shaft assembly removal, installation, or transportation, its boot may be damaged. Wrap boot interference area to metal part with shop cloth or rubber to protect boot from breakage.

#### INSTALLATION


Note the following, and install in the reverse order of removal.

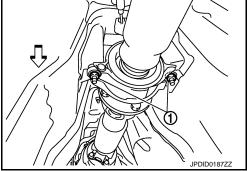


#### < REMOVAL AND INSTALLATION >

[REAR PROPELLER SHAFT: 3F80A-1VL107]


- Install center bearing mounting bracket (upper) (1) with its arrow mark (A) facing forward.
- Adjust position of center bearing mounting bracket (upper), center bearing mounting bracket (lower) (2) sliding back and forth to prevent play in thrust direction of center bearing insulator (3). Install center bearing mounting bracket (upper/lower) to vehicle.

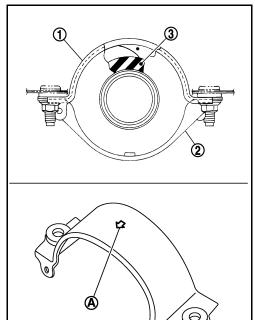

 Align matching marks (A) to install propeller shaft flange yoke and transfer companion flange.

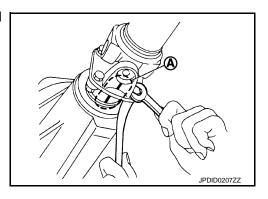

 Align matching marks (A) to install propeller shaft rebro joint and final drive companion flange.

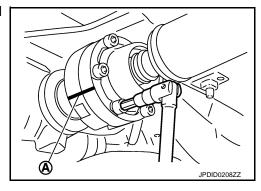

**CAUTION:** 

0

Р

M

Ν

Α

В

C

DLN

Е

F


Н

JPDID0145ZZ

[REAR PROPELLER SHAFT: 3F80A-1VL107]


Tighten mounting bolt and nut in the order shown in the figure.

 After assembly, perform a driving test to check propeller shaft vibration. If vibration occurred, separate propeller shaft from final drive. Reinstall companion flange after rotating it by 60, 120, 180, 240, 300 degrees. Then perform driving test and check propeller shaft vibration again at each point.

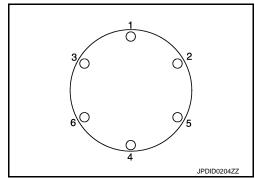

- If propeller shaft or final drive has been replaced, connect them as follows:
- Install the propeller shaft while aligning its matching mark (A) with the matching mark (B) on the joint as close as possible.

Avoid damaging the rebro joint boot, protect it with a shop towel or equivalent.

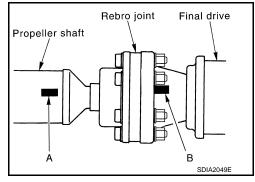

Inspection INFOID:000000004345328

#### **APPEARANCE**

Check propeller shaft for bend and damage. If damage is detected, replace propeller shaft assembly.


#### PROPELLER SHAFT RUNOUT

Check propeller shaft runout at measuring points with a dial indicator. If runout exceeds specifications, replace propeller shaft assembly. For measuring point, refer to <u>DLN-90</u>, "Inspection".

Limit

Propeller shaft runout : Refer to <u>DLN-95, "Propel-</u>

ler Shaft Runout".

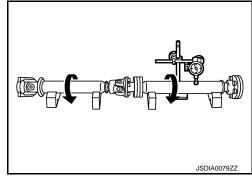

#### JOURNAL AXIAL PLAY


As shown in the figure, while fixing yoke on one side, check axial play of joint. If it is outside the standard, replace propeller shaft assembly.

**Standard** 

Journal axial play : Refer to <u>DLN-95, "Journal Axial Play"</u>.

#### **CAUTION:**

Never disassemble joints.

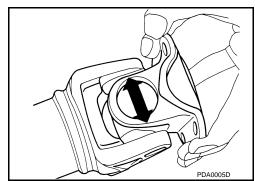

#### **CENTER BEARING**

Check center bearing for noise and damage. If noise or damage is detected, replace propeller shaft assembly. **CAUTION:** 

Never disassemble center bearing.

### **SERVICE DATA AND SPECIFICATIONS (SDS)**

[REAR PROPELLER SHAFT: 3F80A-1VL107] < SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

## **General Specifications**

INFOID:0000000004345329

Α

В

J

K

L

		AWD	
Applied model		VQ35HR	
		A/T	
Propeller shaft model		3F80A-1VL107	DLN
Number of joints	3		
	1st joint	Shell type	
Type of journal bearings (Non-disassembly type)	2nd joint	Shell type	E
(Non disassembly type)	3rd joint	Rebro joint type	<del></del>
Coupling method with transmission		Flange type	F
Coupling method with rear fir	nal drive	Rebro joint type	<del></del>
Ob off low with	1st (Spider to spider)	395 mm (15.55 in)	<del></del>
Shaft length	2nd (Spider to spider)	706 mm (27.80 in)	G
Objett automaliannatum	1st	82.6 mm (3.252 in)	<del></del>
Shaft outer diameter	2nd	75.0 mm (2.953 in)	Ц

## **Propeller Shaft Runout**

INFOID:0000000004345330

	Unit: mm (in)
Item	Limit
Propeller shaft runout	0.8 (0.031)

## Journal Axial Play

INFOID:0000000004345331

	Unit: mm (in)
Item	Standard
Journal axial play	0 (0)

M

Ν

0


[FRONT FINAL DRIVE: F160A]

## SYSTEM DESCRIPTION

## FRONT FINAL DRIVE ASSEMBLY

System Diagram

#### **CROSS-SECTIONAL VIEW**

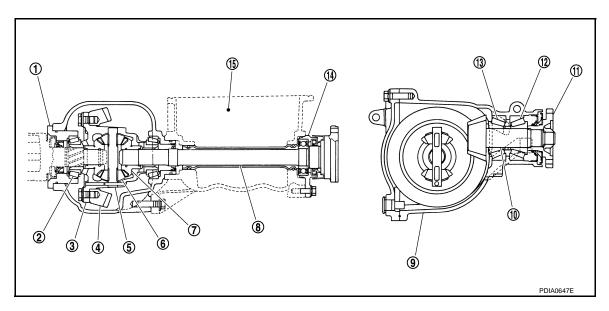

- 1. Side retainer
- 4. Drive gear
- 7. Side gear
- 10. Drive pinion
- 13. Pinion rear bearing

- 2. Side bearing
- 5. Pinion mate shaft
- 8. Side shaft
- 11. Companion flange
- 14. Extension tube retainer
- 3. Differential case
- 6. Pinion mate gear
- 9. Gear carrier
- 12. Pinion front bearing
- 15. Engine assembly

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

[FRONT FINAL DRIVE: F160A]

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## **NVH Troubleshooting Chart**

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference		DLN-124, "Inspection After Disassembly"	DLN-120, "Adjustment"	DLN-124, "Inspection After Disassembly"	DLN-120, "Adjustment"	DLN-120, "Adjustment"	DLN-102, "Inspection"	NVH in DLN section.	NVH in FAX, RAX, FSU and RSU sections.	NVH in WT section.	NVH in WT section.	NVH in FAX and RAX section.	NVH in BR section.	NVH in ST section.
Possible cause and SUSPECTED	) PARTS	Gear tooth rough	Gear contact improper	Tooth surfaces worn	Backlash incorrect	Companion flange excessive runout	Gear oil improper	PROPELLER SHAFT	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
Symptom	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×

<sup>×:</sup> Applicable

Revision: 2010 March **DLN-97** 2009 EX35

L

M

Α

В

C

DLN

Е

F

Н

J

K

INFOID:0000000004345332

Ν

0

#### **PRECAUTIONS**

< PRECAUTION >

## [FRONT FINAL DRIVE: F160A] **PRECAUTION**

## **PRECAUTIONS**

### Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:0000000004345333

#### NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnostic results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

#### **OPERATION PROCEDURE**

Connect both battery cables.

#### NOTE:

Supply power using jumper cables if battery is discharged.

- 2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
- Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
- Perform the necessary repair operation.
- When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
- 6. Perform self-diagnosis check of all control units using CONSULT-III.

### Service Notice or Precautions for Front Final Drive

INFOID:0000000004496758

- Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they never interfere with the function of the parts when applied.
- Overhaul should be done in a clean work area, it is preferable to work in dustproof area.
- · Before disassembly, using steam or white gasoline, completely remove sand and mud from the exterior of the unit, preventing them from entering into the unit during disassembly or assembly.
- Check appearance of the disassembled parts for damage, deformation, and unusual wear. Replace them with new ones if necessary.
- Gaskets, seals and O-rings should be replaced any time when the unit is disassembled.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, observe it.
- Clean and flush the parts sufficiently and blow-dry them.
- Be careful not to damage sliding surfaces and mating surfaces.
- When applying sealant, remove the old sealant from the mounting surface; then remove any moisture, oil, and foreign materials from the application and mounting surfaces.
- Always use shop paper for cleaning the inside of components.
- Avoid using cotton gloves or shop rags to prevent entering of lint.
- During assembly, observe the specified tightening torque, and apply new gear oil, petroleum jelly, or multipurpose grease as specified for each vehicle, if necessary.

#### NOTE:

Front oil seal cannot be replaced on vehicle, because there is not enough room.

## [FRONT FINAL DRIVE: F160A]

## **PREPARATION**

## **PREPARATION**

Special Service Tools

INFOID:0000000004345335

Α

В

ool number Kent-Moore No.) ool name		Description
V381054S0 J-34286) <sup>J</sup> uller		Removing side oil seal (right side)     Removing side bearing outer race
T33400001 J-26082)	ZZA0601D	Installing side oil seal (right side)     Installing front oil seal
orift : 60 mm (2.36 in) dia. : 47 mm (1.85 in) dia.	3 b	
V38102100	ZZA0702D	Installing side oil acel (left side)
J-25803-01) Orift : 44 mm (1.73 in) dia. : 36 mm (1.42 in) dia. : 24.5 mm (0.965 in) dia.	a b	Installing side oil seal (left side)
	ZZA1046D	
CV38100200 — ) Drift : 65 mm (2.56 in) dia. : 49 mm (1.93 in) dia.	ab	Installing side shaft oil seal
T30032000	ZZA1143D	Installing side shaft
J-26010-01) Drift : 80 mm (3.15 in) dia. : 38 mm (1.50 in) dia. : 31 mm (1.22 in) dia.	a b c	Installing pinion rear bearing inner race
(V10111100	S-NT107	Removing carrier cover
J-37228) Seal cutter		

[FRONT FINAL DRIVE: F160A]

PREPARATION >		[FRONT FINAL DRIVE: F160
Tool number (Kent-Moore No.) Tool name		Description
ST3306S001 (J-22888-D) Differential side bearing puller set 1: ST33051001 (J-22888-20) Puller 2: ST33061000 (J-8107-2) Base a: 28.5 mm (1.122 in) dia. b: 38 mm (1.50 in) dia.	2 - a - b - b - NT072	Removing and installing side bearing inner race
ST33230000 (J-25805-01) Drift a: 51 mm (2.01 in) dia. b: 41 mm (1.61 in) dia. c: 28.5 mm (1.122 in) dia.	ZZA1046D	Installing side bearing inner race
ST30611000 (J-25742-1) Drift bar	S-NT090	Installing side bearing outer race (Use with KV31103000)
KV31103000 (J-38982) Drift a: 49 mm (1.93 in) dia. b: 70 mm (2.76 in) dia.	a ZZA1113D	Installing side bearing outer race
ST3127S000 (J-25765-A) Preload gauge	ZZA0806D	Measuring pinion bearing preload and total preload
(J-8129) Spring gauge	NT127	Measuring turning torque

<pre>&lt; PREPARATION &gt;</pre>		[FRONT FINAL DRIVE: F160A]
Tool number (Kent-Moore No.) Tool name		Description
ST37820000 ( — ) Drift a: 39 mm (1.54 in) dia. b: 72 mm (2.83 in) dia.	b a ZZA0836D	Installing pinion front and rear bearing outer race
KV38102510 ( — )		Installing front oil seal
Drift a: 71 mm (2.80 in) dia. b: 65 mm (2.56 in) dia.	a b	
Commercial Service Tools	ZZA0838D	INFOID:0000000004345336
Tool name		Description
	NT035	
Replacer		Removing pinion rear bearing inner race
	ZZA0700D	
Spacer a: 60 mm (2.36 in) dia. b: 36 mm (1.42 in) dia. c: 30 mm (1.18 in)	b c c zzA1133D	Installing pinion front bearing inner race
Power tool		Loosening bolts and nuts
	PBICO190F	

[FRONT FINAL DRIVE: F160A]

## PERIODIC MAINTENANCE

### FRONT DIFFERENTIAL GEAR OIL

Inspection INFOID:000000004345338

#### **OIL LEAKAGE**

Make sure that oil is not leaking from final drive assembly or around it.

#### OIL LEVEL

• Remove filler plug (1) and check oil level from filler plug mounting hole as shown in the figure.


#### **CAUTION:**

Never start engine while checking oil level.

Set a gasket on filler plug (1) and install it on final drive assembly.
 Refer to <u>DLN-109</u>, "<u>Exploded View</u>".

#### **CAUTION:**

Never reuse gasket.

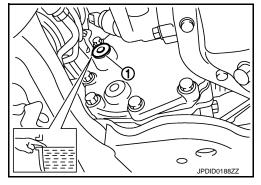


Draining INFOID:000000004345339

- 1. Stop engine.
- 2. Remove drain plug (1) and drain gear oil.
- Set a gasket on drain plug (1) and install it to final drive assembly and tighten to the specified torque. Refer to <u>DLN-109</u>, <u>"Exploded View"</u>.

#### **CAUTION:**

Never reuse gasket.

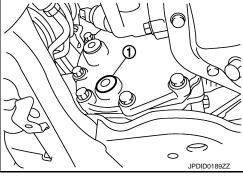

Refilling INFOID:0000000004345340

1. Remove filler plug (1). Fill with new gear oil until oil level reaches the specified level near filler plug mounting hole.

Oil grade and Viscosity : Refer to MA-10, "Fluids

and Lubricants".


Oil capacity : Refer to <u>DLN-134, "Gen-</u>

eral Specifications".

 After refilling oil, check oil level. Set a gasket to filler plug (1), then install it to final drive assembly. Refer to <u>DLN-109</u>. "Exploded View".

#### **CAUTION:**

Never reuse gasket.

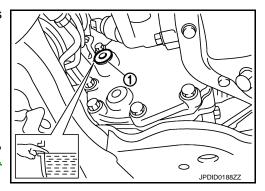


## REMOVAL AND INSTALLATION

SIDE OIL SEAL RIGHT SIDE

RIGHT SIDE: Exploded View

INFOID:0000000004345341

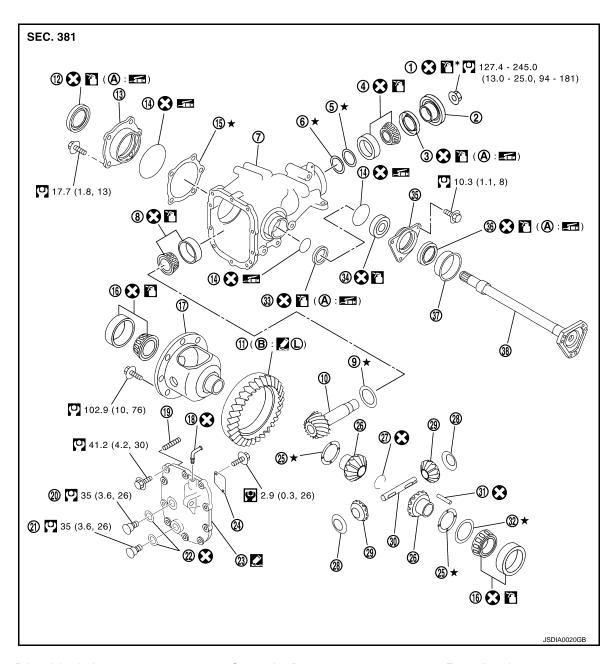

- Drive pinion lock nut 1.
- Pinion front bearing 4.
- 7. Gear carrier
- 10. Drive pinion
- Side retainer 13.
- Side bearing 16.
- 19. Dowel pin
- 22. Gasket
- Side gear thrust washer

- Companion flange 2.
- Drive pinion bearing adjusting wash- 6. 5.
- 8. Pinion rear bearing
- Drive gear 11.
- O-ring 14.
- Differential case 17.
- 20. Filler plug
- 23. Carrier cover
- Side gear

- Front oil seal 3.
- Drive pinion adjusting washer
- 9. Pinion height adjusting washer
- Side oil seal (right side) 12.
- Side bearing adjusting shim 15.
- Breather connector 18.
- 21. Drain plug
- 24. Gear oil defense

DLN

Α

В

C

Е

F

Н

K

L

M

Ν

#### SIDE OIL SEAL

#### < REMOVAL AND INSTALLATION >

#### [FRONT FINAL DRIVE: F160A]

30. Pinion mate shaft

36. Side shaft oil seal

33. Side oil seal (left side)

28. Pinion mate thrust washer 29. Pinion mate gear

31. Lock pin 32. Side bearing adjusting washer

34. Side shaft bearing 35. Extension tube retainer

37. Dust sealA: Oil seal lipB: Screw hole

Apply gear oil.

Apply anti-corrosion oil.

Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Apply Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

#### RIGHT SIDE: Removal and Installation


INFOID:0000000004345342

#### **REMOVAL**

- Remove the front drive shaft. Refer to <u>FAX-24</u>, "<u>Exploded View</u>".
- 2. Remove the side oil seal using a puller (A) [SST: KV381054S0 (J-34286)].

#### **CAUTION:**

Never damage gear carrier.

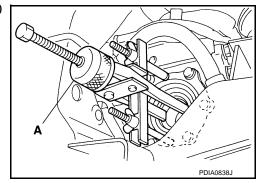


#### **INSTALLATION**

- 1. Apply multi-purpose grease to sealing lips of side oil seal.
- Using the drift (A) [SST: ST33400001 (J-26082)], press-fit side oil seal so that its surface comes face-to-face with the end surface of the side retainer.

#### **CAUTION:**

- Never reuse oil seal.
- When installing, never incline oil seal.
- 3. Install the front drive shaft. Refer to FAX-24, "Exploded View".
- When oil leaks while removing, check oil level after the installation. Refer to <u>DLN-102</u>, "<u>Inspection</u>".

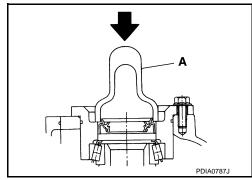

#### LEFT SIDE

**LEFT SIDE: Exploded View** 

INFOID:0000000004345343

Α

В

C

DLN

Е

F


Н

K

M

Ν

Ρ

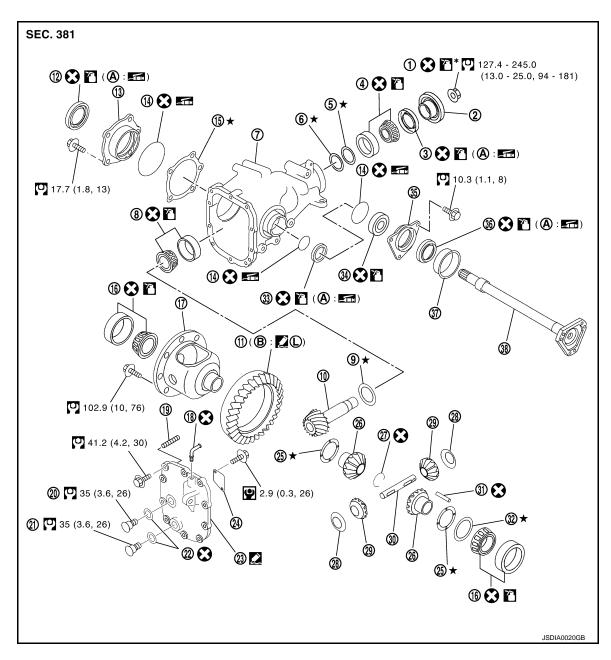

- Drive pinion lock nut
- 4. Pinion front bearing
- 7. Gear carrier
- 10. Drive pinion
- 13. Side retainer
- 16. Side bearing
- 19. Dowel pin
- 22. Gasket
- 25. Side gear thrust washer
- 28. Pinion mate thrust washer
- 31. Lock pin

Revision: 2010 March

34. Side shaft bearing

- 2. Companion flange
- 5. Drive pinion bearing adjusting wash- 6. er
- 8. Pinion rear bearing
- 11. Drive gear
- 14. O-ring
- 17. Differential case
- 20. Filler plug
- 23. Carrier cover
- 26. Side gear
- 29. Pinion mate gear
- 32. Side bearing adjusting washer
- 35. Extension tube retainer

- Front oil seal
- Drive pinion adjusting washer
- 9. Pinion height adjusting washer
- 12. Side oil seal (right side)
- 15. Side bearing adjusting shim
- 18. Breather connector
- 21. Drain plug
- 24. Gear oil defense
- 27. Circular clip
- 30. Pinion mate shaft
- 33. Side oil seal (left side)
- 36. Side shaft oil seal

#### SIDE OIL SEAL

#### < REMOVAL AND INSTALLATION >

[FRONT FINAL DRIVE: F160A]

37. Dust seal 38. Side shaft

A: Oil seal lip B: Screw hole

Apply gear oil.

↑

Apply anti-corrosion oil.

Apply anti-co

Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Apply Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

#### LEFT SIDE: Removal and Installation

INFOID:0000000004345344

#### REMOVAL

Remove the front final drive assembly from vehicle with power tool. Refer to <u>DLN-107, "Exploded View"</u>.
 NOTE:

Left side oil seal is attached to engine assembly. Replace it after removing front final drive assembly from vehicle.

2. Remove the side oil seal using a flat-bladed screwdriver.

#### **CAUTION:**


Never damage gear carrier.

#### INSTALLATION

- Apply multi-purpose grease to sealing lips of side oil seal.
- 2. Using the drift (A) [SST: KV38102100 (J-25803-01)], press-fit side oil seal so that its surface comes face-to-face with the end surface of the gear carrier.

#### **CAUTION:**

- Never reuse oil seal.
- . When installing, never incline oil seal.
- 3. Install the front final drive assembly on vehicle. Refer to <u>DLN-107</u>, "Exploded View".
- 4. Install the front drive shaft. Refer to <a href="#FAX-24">FAX-24</a>, "Exploded View".
- 5. When oil leaks while removing, check oil level after the installation. Refer to <u>DLN-102</u>, "Inspection".

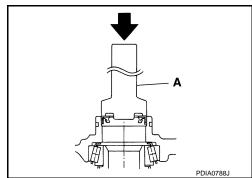


[FRONT FINAL DRIVE: F160A]

## UNIT REMOVAL AND INSTALLATION

### FRONT FINAL DRIVE ASSEMBLY

**Exploded View** INFOID:0000000004345345

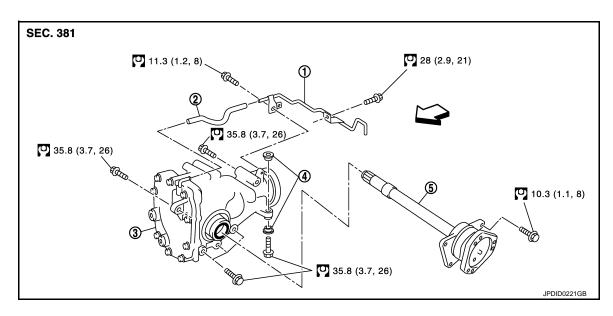

Breather tube Bushing

- Breather hose
- Side shaft

3. Front final drive assembly

⟨□: Vehicle front

Refer to GI-4, "Components" for symbols in the figure.

#### NOTE:

The lower part mounting bolt and bushing (4) may not be equipped.

#### Removal and Installation

#### REMOVAL

- Remove both front drive shaft. Refer to FAX-24, "Exploded View". 1.
- 2. Remove front crossbar with power tool.
- Separate steering outer socket and steering knuckle. Refer to <u>ST-33, "AWD: Exploded View"</u>.
- Remove side shaft.
- 5. Remove three way catalyst (right bank) with power tool. Refer to EM-34, "Exploded View".
- 6. Remove front propeller shaft. Refer to <u>DLN-76</u>, "Exploded View".
- 7. Separate power steering solenoid valve connector.
- Separate power steering hydraulic line. Refer to <u>ST-51, "AWD: Exploded View"</u>.
- Remove stabilizer assembly with power tool. Refer to FSU-36, "Exploded View".
- Separate steering lower joint and steering gear assembly. Refer to ST-33, "AWD: Exploded View".
- 11. Set a suitable jack to engine.
- 12. Remove front suspension member with power tool. Refer to FSU-37, "Exploded View".
- 13. Remove breather hose and tube.
- 14. Remove engine mounting bracket (RH) (Lower) and engine mounting insulator (RH) with power tool. Refer to EM-83, "AWD: Exploded View".
- 15. Remove final drive assembly mounting bolts with power tool and separate front final drive assembly from engine.

#### INSTALLATION

**DLN-107** Revision: 2010 March 2009 EX35

DLN

Α

В

F

Н

INFOID:0000000004345346

N

#### FRONT FINAL DRIVE ASSEMBLY

#### < UNIT REMOVAL AND INSTALLATION >

[FRONT FINAL DRIVE: F160A]

Note the following, install in the reverse order of removal.


- When installing the side shaft, apply multi-purpose grease to contact surface of side shaft and side shaft oil seal.
- Tighten mounting bolts in the order described below when installing front final drive assembly: side of gear carrier (1), upper side of gear carrier (2), part of carrier cover (3), lower part of gear carrier (4).

#### **CAUTION:**

Align the mating faces of gear carrier and oil pan for installation.

#### NOTE:


The lower part mounting bolt may not be equipped.

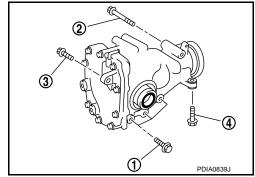

When installing breather hose (1) and tube (2), refer to the figure.
 CAUTION:

Make sure there are no pinched or restricted areas on the breather hose caused by bending or winding when installing it.


- Make sure the paint mark facing up (
- Securely install the hose until it seats the rounded portion of the tube. ( (ront final drive side).
- Securely install the hose until it to paint mark of the tube. ( (vehicle rear side).
- Face the bend of the breather hose (⟨¬) to the engine.
- When oil leaks while removing final drive assembly, check oil level after the installation. Refer to DLN-102, "Inspection".

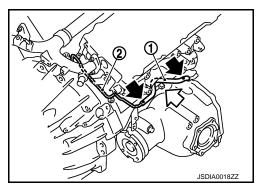

# UNIT DISASSEMBLY AND ASSEMBLY

## SIDE SHAFT

**Exploded View** INFOID:0000000004345347

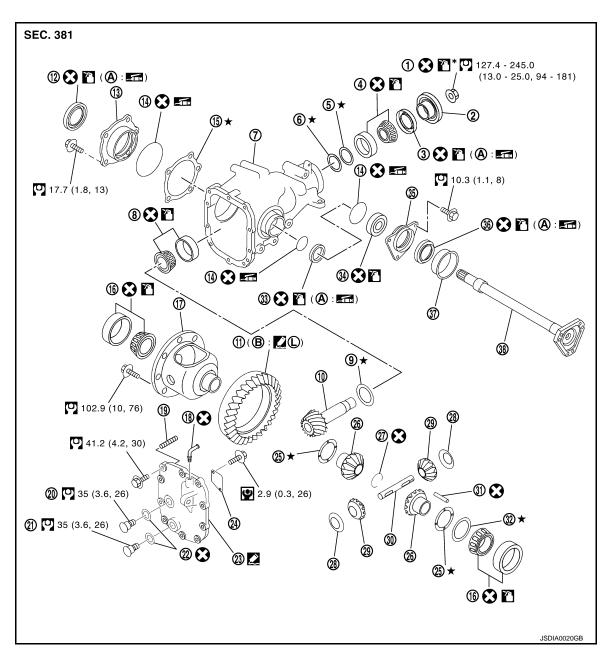

- Drive pinion lock nut
- Pinion front bearing 4.
- 7. Gear carrier
- Drive pinion 10.
- Side retainer 13.
- 16. Side bearing 19.
- Dowel pin
- 22. Gasket
- Side gear thrust washer 25.
- Pinion mate thrust washer

- 2. Companion flange
- Drive pinion bearing adjusting wash- 6. 5.
- 8. Pinion rear bearing
- Drive gear 11.
- 14. O-ring
- 17. Differential case
- 20. Filler plug
- 23. Carrier cover
- 26. Side gear
- 29. Pinion mate gear

- Front oil seal 3.
- Drive pinion adjusting washer
- 9. Pinion height adjusting washer
- 12. Side oil seal (right side)
- Side bearing adjusting shim 15.
- 18. Breather connector
- 21. Drain plug
- 24. Gear oil defense
- 27. Circular clip
- 30. Pinion mate shaft

C

Α

В

DLN

Е

F

Н

K

L

M

Ν

Ρ

## SIDE SHAFT

## < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

31. Lock pin 32. Side bearing adjusting washer 33. Side oil seal (left side)

34. Side shaft bearing 35. Extension tube retainer 36. Side shaft oil seal

37. Dust sealA: Oil seal lipB: Screw hole

Apply gear oil.

\*: Apply anti-corrosion oil.


Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Apply Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

Disassembly INFOID:0000000004345348

1. Hold extension tube retainer with puller, then press out side shaft using a press.

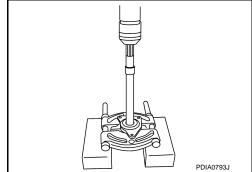


2. Remove side shaft oil seal (1) from extension tube retainer with a suitable tool.

#### **CAUTION:**

Never damage extension tube retainer.

- 3. Remove side shaft bearing from extension tube retainer.
- 4. Remove O-ring from extension tube retainer.
- 5. Remove dust seal from side shaft.

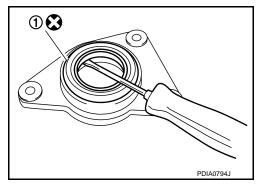


Assembly

 Using the drift (A) [SST: KV38100200 ( — )], install side shaft oil seal.

#### **CAUTION:**

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.
- 2. Install dust seal.

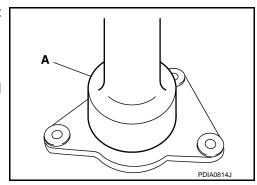


## SIDE SHAFT

#### < UNIT DISASSEMBLY AND ASSEMBLY >

- Support side shaft bearing with the drift (A) [SST: ST30032000 (J-26010-01)], then press side shaft (1) into the side shaft bearing using a press.
- Apply multi-purpose grease to O-ring, and install it to extension tube retainer.

#### **CAUTION:**

Never reuse O-ring.

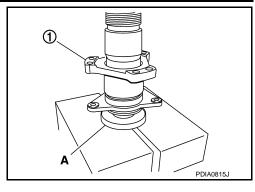

[FRONT FINAL DRIVE: F160A]

INFOID:0000000004345350

## Inspection After Disassembly

#### DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

#### **BEARING**

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

#### SIDE GEAR AND PINION MATE GEAR

- · Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

#### SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

#### OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

## **DIFFERENTIAL CASE**

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

#### COMPANION FLANGE

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

В

Α

DLN

Е

F

Н

Ν


M

L

Р

Revision: 2010 March **DLN-111** 2009 EX35

Exploded View

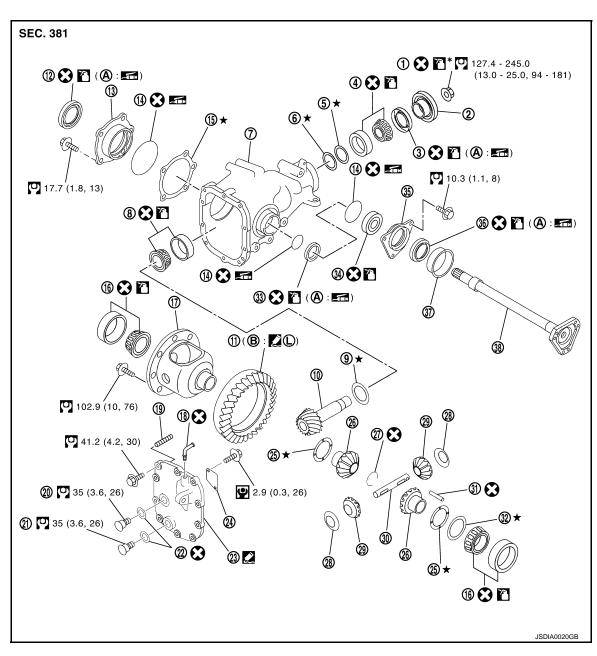

- 1. Drive pinion lock nut
- 4. Pinion front bearing
- 7. Gear carrier
- 10. Drive pinion
- 13. Side retainer
- 16. Side bearing
- 19. Dowel pin
- 22. Gasket
- 25. Side gear thrust washer
- 28. Pinion mate thrust washer
- 31. Lock pin

- 2. Companion flange
- 5. Drive pinion bearing adjusting wash- 6. er
- 8. Pinion rear bearing
- 11. Drive gear
- 14. O-ring
- 17. Differential case
- 20. Filler plug
- 23. Carrier cover
- 26. Side gear
- 29. Pinion mate gear
- 32. Side bearing adjusting washer

- 3. Front oil seal
- 6. Drive pinion adjusting washer
- 9. Pinion height adjusting washer
- 12. Side oil seal (right side)
- 15. Side bearing adjusting shim
- 18. Breather connector
- 21. Drain plug
- 24. Gear oil defense
- Circular clip
- 30. Pinion mate shaft
- 33. Side oil seal (left side)

#### < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

34. Side shaft bearing 35. Extension tube retainer 36. Side shaft oil seal

37. Dust sealA: Oil seal lipB: Screw hole

Apply gear oil.

⚠★: Apply anti-corrosion oil.

Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".


Apply Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

Disassembly INFOID:000000004345352


1. Drain gear oil, if necessary.

- 2. Remove carrier cover mounting bolts.
- 3. Remove carrier cover to insert the seal cutter (A) [SST: KV10111100 (J-37228)] between gear carrier and carrier cover. **CAUTION:** 
  - Never damage the mating surface.
  - Never insert flat-bladed screwdriver, this may damage the mating surface.

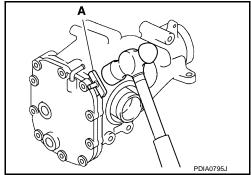


4. Remove side retainer.

- Remove side bearing adjusting shim.
- 6. Remove O-ring from side retainer.

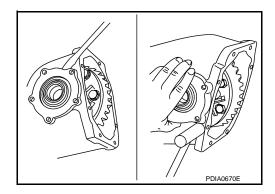

7. Remove differential case assembly from gear carrier.

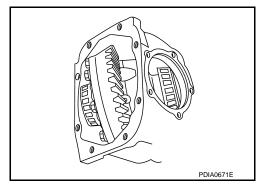

DLN

Α

В

\_

Е

G

J

K

M


Ν

0


#### < UNIT DISASSEMBLY AND ASSEMBLY >

#### [FRONT FINAL DRIVE: F160A]


8. Remove side oil seal (right side) from side retainer.

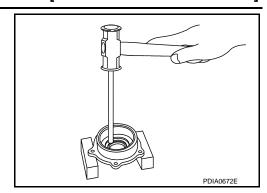

- 9. Remove side bearing outer race with puller (A) [SST: KV381054S0 (J-34286)].
- 10. Remove O-ring from gear carrier.
- 11. Remove side oil seal (left side) from gear carrier.

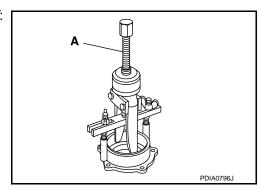

12. Remove side bearing outer race with puller (A) [SST: KV381054S0 (J-34286)].

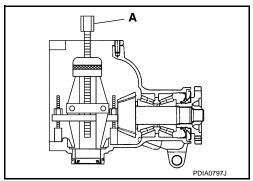


13. Remove side bearing inner race.

To prevent damage to bearing, engage puller jaws in groove  $(\clubsuit)$ .

A: Puller [SST: ST33051001 (J-22888-20)] B: Base [SST: ST33061000 (J-8107-2)]

#### **CAUTION:**

- To prevent damage to the side bearing and drive gear, place copper plates between these parts and vise.
- It is not necessary to remove side bearing inner race except if it is replaced.

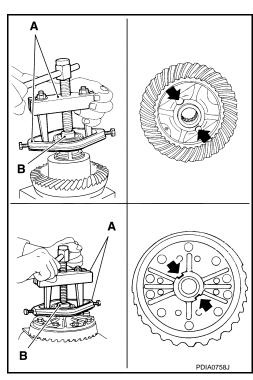

## < UNIT DISASSEMBLY AND ASSEMBLY >

#### [FRONT FINAL DRIVE: F160A]

14. For proper reinstallation, paint matching marks on one differential case assembly.


#### **CAUTION:**

For matching marks, use paint. Never damage differential case and drive gear.

- 15. Remove drive gear mounting bolts.
- 16. Tap drive gear off differential case assembly with a soft hammer. **CAUTION:**


Tap evenly all around to keep drive gear from bending.

17. Remove lock pin of pinion mate shaft with a punch from drive gear side.

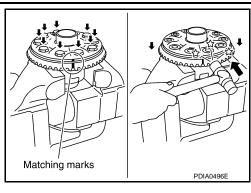


PDIA0759J

18. Remove pinion mate shaft.

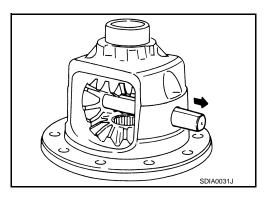

19. Turn pinion mate gear, then remove pinion mate gears, pinion mate thrust washers, side gears and side gear thrust washers from differential case.

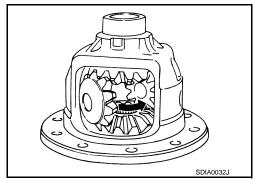

Α

В

C

DLN

Е

F

G

Н

J

K

L


M

Ν


 $\cap$ 

Assembly


1. Install side gear thrust washers with the same thickness as the ones installed prior to disassembly or reinstall the old ones on the side gears.

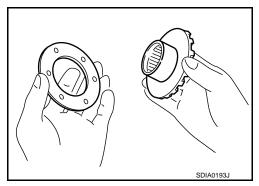


- Install side gears and thrust washers into differential case. CAUTION:
  - Never reuse circular clip.
  - Make sure that the circular clip is installed to side gear (side retainer side).
- 3. Align 2 pinion mate gears in diagonally opposite positions, then rotate and install them into differential case after installing thrust washer to pinion mate gear.

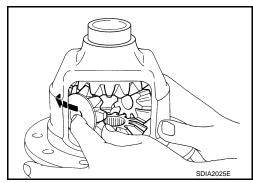

4. Align the lock pin holes on differential case with shaft, and install pinion mate shaft.

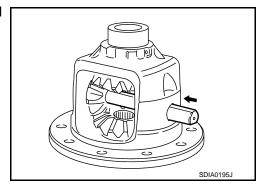

- 5. Measure side gear end play. If necessary, select the appropriate side gear thrust washers.
- Place differential case straight up so that side gear to be measured comes upward.

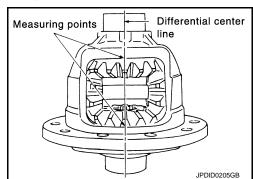

#### < UNIT DISASSEMBLY AND ASSEMBLY >

#### [FRONT FINAL DRIVE: F160A]

b. Using feeler gauge, measure the clearance between side gear back and differential case at 3 different points, while rotating side gear. Average the 3 readings, and then measure the clearance of the other side as well.

**Standard** 

Side gear back clearance

: Refer to <u>DLN-134, "Differential Side Gear Clear-</u>

ance".

#### **CAUTION:**

To prevent side gear from tilting, insert feeler gauges with the same thickness from both sides.

c. If the back clearance is outside the specification, use a thicker/ thinner side gear thrust washer to adjust.

When the back clearance is large:

Use a thicker thrust wash-

When the back clearance is small:

Use a thinner thrust wash-


er.

#### **CAUTION:**


Select a side gear thrust washer for right and left individually.

6. Drive a lock pin into pinion mate shaft, using a punch. Make sure lock pin is flush with differential case. CAUTION:

Never reuse lock pin.

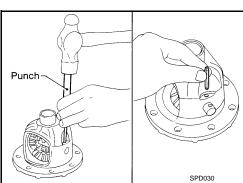

Align the matching mark of drive gear with the mark of differential case, then place drive gear.

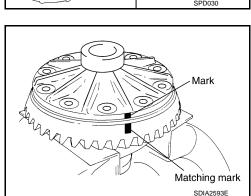

Feeler gauges with the same thickness

Feeler gauges with the same thickness

PDIA0576E

Α

В

С

DLN

Е

F

G

Н

1

K

L

M

Ν

0

## < UNIT DISASSEMBLY AND ASSEMBLY >


[FRONT FINAL DRIVE: F160A]

8. Apply thread locking sealant into the thread hole of drive gear.

 Use Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to <u>GI-17</u>, "<u>Recommended Chemical</u> <u>Products and Sealants</u>".

#### **CAUTION:**


Drive gear back and threaded holes must be cleaned and degreased sufficiently.

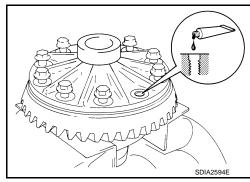

9. Install drive gear on the mounting bolts.

#### **CAUTION:**

Tighten bolts in a crisscross fashion.

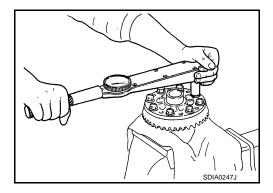


Press side bearing inner races to differential case, using the drift and the base.

A: Drift [SST: ST33230000 (J-25805-01)]

B: Base [SST: ST33061000 (J-8107-2)]

#### **CAUTION:**

Never reuse side bearing inner race.

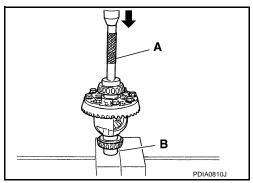


 Press-fit side bearing outer race into side retainer with the drift and the drift bar.

A: Drift bar [SST: ST30611000 (J-25742-1)]

B: Drift [SST: KV31103000 (J-38982)]

#### **CAUTION:**

- At first, using a hammer, tap bearing outer race until it becomes flat to side retainer.
- Never reuse side bearing outer race.

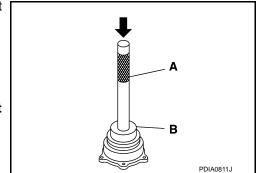


12. Press-fit side bearing outer race into gear carrier with the drift and the drift bar.

A: Drift bar [SST: ST30611000 (J-25742-1)]

B: Drift [SST: KV31103000 (J-38982)]

#### **CAUTION:**


- At first, using a hammer, tap bearing outer race until it becomes flat to gear carrier.
- Never reuse side bearing outer race.

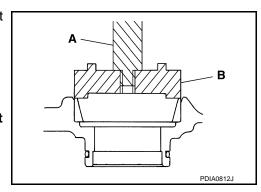

#### < UNIT DISASSEMBLY AND ASSEMBLY >

#### [FRONT FINAL DRIVE: F160A]

- 13. Place the differential case assembly into gear carrier.
- 14. Measure side bearing preload. If necessary, select the appropriate side bearing adjusting shim. Refer to <a href="DLN-120">DLN-120</a>. "Adjustment".

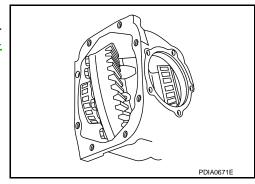


15. Install selected side bearing adjusting shim (1). Refer to <u>DLN-120, "Adjustment"</u>.

Apply multi-purpose grease to O-ring (2), and install it to side retainer.


#### **CAUTION:**

Never reuse O-ring.

17. Install side retainer assembly to gear carrier.

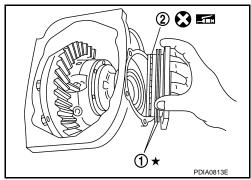


18. Install side retainer mounting bolts.

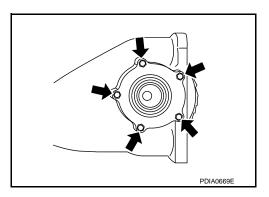

19. Using the drift (A) [SST: ST33400001 (J-26082)], press-fit side oil seal so that its surface comes face-to-face with the end surface of the side retainer.

#### **CAUTION:**

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

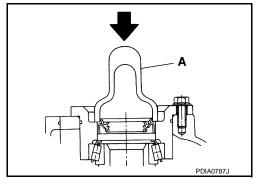


20. Using the drift (A) [SST: KV38102100 (J-25803-01)], press-fit side oil seal so that its surface comes face-to-face with the end surface of gear carrier.

#### **CAUTION:**

- Never reuse oil seal.
- · When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.
- Apply multi-purpose grease to O-ring, and install it to gear carrier.

#### **CAUTION:**

Revision: 2010 March

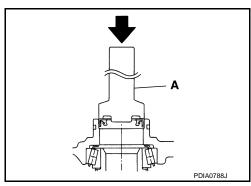

Α

В

C

DLN

Е

F

G

Н

J

1 \

L

M

Ν


0

#### Never reuse O-ring.


- 22. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and total preload torque. Refer to <u>DLN-120</u>, "Adjustment".
  - Recheck above items. Readjust as described above, if necessary.
- 23. Apply sealant (A) to mating surface of carrier cover.
  - Use Genuine Silicone RTV or equivalent. Refer to <u>GI-17</u>, <u>"Recommended Chemical Products and Sealants"</u>.

#### **CAUTION:**

Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.

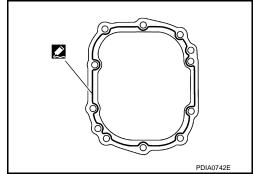


24. Install carrier cover on gear carrier and tighten mounting bolts.

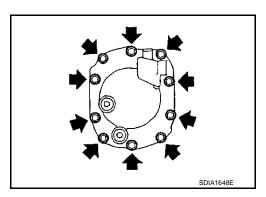

25. Set breather connector angle (A) as shown in the figure.

∀
 : Vehicle front

A :  $0 - 30^{\circ}$ 

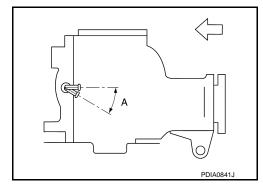

Adjustment

#### TOTAL PRELOAD TORQUE


- Before inspection and adjustment, drain gear oil.
- 1. Rotate drive pinion back and forth 2 to 3 times to check for unusual noise and rotation malfunction.
- 2. Rotate drive pinion at least 20 times to check for smooth operation of the bearing.
- 3. Measure total preload with preload gauge (A) [SST: ST3127S000 (J-25765-A)].

**Standard** 

Total preload torque : Refer to <u>DLN-134, "Preload Torque"</u>.

## NOTE:

Total preload torque = Pinion bearing preload torque + Side bearing preload torque

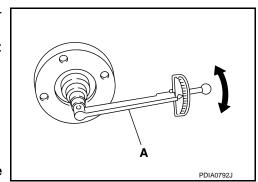

## < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

 If measured value is out of the specification, disassemble it to check and adjust each part. Adjust the pinion bearing preload and side bearing preload.
 Adjust the pinion bearing preload first, then adjust the side bearing preload.

When the preload torque is large

On pinion bearings: Decrease the drive pinion bearing adjusting washer and drive pinion

adjusting washer thickness.

On side bearings: Increase the side bearing adjusting shim thickness. For select parts

refer to parts information.

When the preload torque is small

On pinion bearings: Increase the drive pinion bearing adjusting washer and drive pinion

adjusting washer thickness.

On side bearings: Decrease the side bearing adjusting shim thickness. For select parts

refer to parts information.


SIDE BEARING PRELOAD

Before inspection and adjustment, drain gear oil.

1. Remove carrier cover and side retainer. Refer to <u>DLN-113</u>, "<u>Disassembly</u>".

Make sure all parts are clean. Also, make sure the bearings are well lubricated with gear oil.

3. Place the differential case assembly into gear carrier.

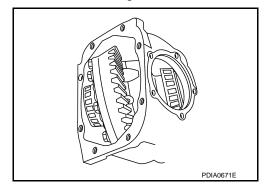


4. Install side bearing adjusting shim before disassembling or shim which thickness is the same as the one before disassembling.


5. Install side retainer assembly to gear carrier.

**CAUTION:** 

Never install O-ring.

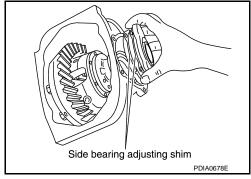

6. Install side retainer mounting bolts to the specified torque.

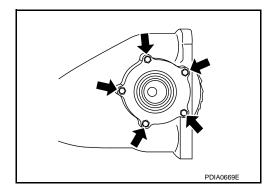

DLN

Α

В

C

Е

F

Н

ı

K

L

M

Ν


#### < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

7. Measure the turning torque of the gear carrier at the drive gear mounting bolts with a spring gauge [SST: — (J-8129)].

**Specification** 

: 34.2 – 39.2 N (3.5 – 4.0 kg, 7.7 – 8.8 lb) of pulling force at the drive gear bolt

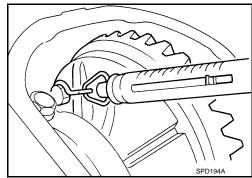

8. If the turning torque is outside the specification, use a thicker/ thinner side bearing adjusting shim to adjust.


If the turning torque is less than the specified range:

Decrease the side bearing adjusting shim thickness.

If the turning torque is greater than the specification:

Increase the side bearing adjusting shim thickness.

Record the total amount of shim thickness required for the correct carrier side bearing preload.

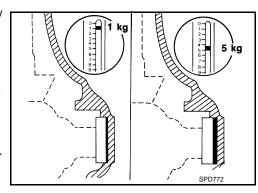

#### **DRIVE GEAR RUNOUT**

- 1. Remove carrier cover. Refer to <a href="DLN-113">DLN-113</a>, "Disassembly".
- 2. Fit a dial indicator to the drive gear back face.
- 3. Rotate the drive gear to measure runout.

Limit

Drive gear runout : Refer to <u>DLN-134, "Drive</u> Gear Runout".

 If the runout is outside of the repair limit, check drive gear assembly condition; foreign material may be caught between drive gear and differential case, or differential case or drive gear may be deformed, etc.



Replace drive gear and drive pinion gear as a set.





Before inspection and adjustment, drain gear oil.

- 1. Remove carrier cover. Refer to <u>DLN-113, "Disassembly"</u>.
- 2. Apply red lead to drive gear.

#### **CAUTION:**

Apply red lead to both the faces of 3 to 4 gears at 4 locations evenly spaced on drive gear.

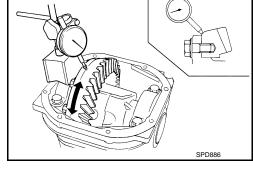

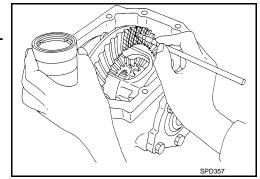

## < UNIT DISASSEMBLY AND ASSEMBLY >


## [FRONT FINAL DRIVE: F160A]

Rotate drive gear back and forth several times, check drive pinion gear to drive gear tooth contact.

**CAUTION:** 

Heel side

Check tooth contact on drive side and reverse side.

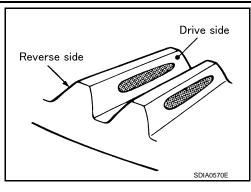

						DL
Back		Drive	side	Pinion height adjusting washer selection value [mm(in)]	Adjustment requirement (Yes/No)	Е
side	Toe side	Toe side	Heel side		(163,116)	-
				+0. 15 (+0. 0059)		F
				+0.12 (+0.0047)	Yes	G
				+0. 09 (+0. 0035)		Н
				+0.06 (+0.0024)		I
				+0. 03 (+0. 0012)		J
<u></u>				0	No	K
			***	-0. 03 (-0. 0012)		L
\	*****			-0.06 (-0.0024)		M
;			***	-0. 09 (-0. 0035)		N
٥	<u></u>		**	-0. 12 (-0. 0047)	Yes	0
\			****	-0. 15 (-0. 0059)		
					1	P

PDIA0667E


**DLN-123** Revision: 2010 March 2009 EX35

Α


В

LN


4. If tooth contact is improperly adjusted, follow the procedure below to adjust the pinion height [dimension (X)].

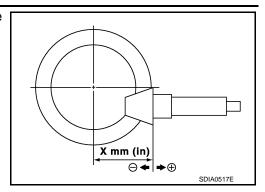

 If the tooth contact is near the face (face contact), or near the heel (heel contact), thicken pinion height adjusting washers to move drive pinion closer to drive gear.

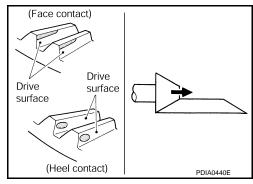

 If the tooth contact is near the flank (flank contact), or near the toe (toe contact), thin pinion height adjusting washers to move drive pinion farther from drive gear.

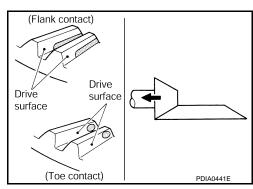

#### **BACKLASH**

Before inspection and adjustment, drain gear oil.

- 1. Remove carrier cover. Refer to <u>DLN-113</u>, "<u>Disassembly</u>".
- 2. Fit a dial indicator to the drive gear face to measure the backlash.

**Standard** 

Backlash : Refer to <u>DLN-134, "Back-lash".</u>

 If the backlash is outside of the specified value, change the thickness of side bearing adjusting washer.



Decrease side bearing adjusting washer thickness.

When the backlash is small:

Increase side bearing adjusting washer thickness.

Inspection After Disassembly

INFOID:0000000004345355

SDIA0009J

DRIVE GEAR AND DRIVE PINION

#### < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

- · Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

#### **BEARING**

Clean up the disassembled parts.

• If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

#### SIDE GEAR AND PINION MATE GEAR

- · Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

#### SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

#### OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

#### DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

#### COMPANION FLANGE

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

DLN

Α

В

C

Е

F

Н

1

K


L

NΛ

Ν

0

Exploded View

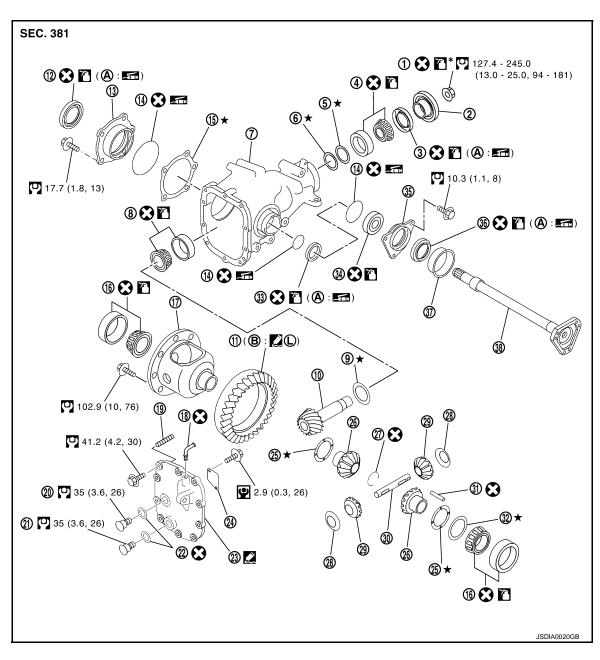

- 1. Drive pinion lock nut
- 4. Pinion front bearing
- 7. Gear carrier
- 10. Drive pinion
- 13. Side retainer
- 16. Side bearing
- 19. Dowel pin
- 22. Gasket
- 25. Side gear thrust washer
- 28. Pinion mate thrust washer
- 31. Lock pin

- 2. Companion flange
- 5. Drive pinion bearing adjusting wash- 6. er
- 8. Pinion rear bearing
- 11. Drive gear
- 14. O-ring
- 17. Differential case
- 20. Filler plug
- 23. Carrier cover
- 26. Side gear
- 29. Pinion mate gear
- 32. Side bearing adjusting washer

- 3. Front oil seal
- 6. Drive pinion adjusting washer
- 9. Pinion height adjusting washer
- 12. Side oil seal (right side)
- 15. Side bearing adjusting shim
- 18. Breather connector
- 21. Drain plug
- 24. Gear oil defense
- Circular clip
- 30. Pinion mate shaft
- 33. Side oil seal (left side)

#### < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

34. Side shaft bearing 35. Extension tube retainer 36. Side shaft oil seal

37. Dust sealA: Oil seal lipB: Screw hole

Apply gear oil.

Apply anti-corrosion oil.

Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".


Apply Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

Disassembly INFOID:000000004345357

1. Remove differential case assembly. Refer to <a href="DLN-113">DLN-113</a>, "Disassembly".

2. Remove drive pinion lock nut with a flange wrench.

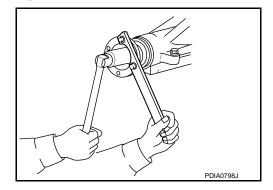

3. Put matching mark (B) on the end of drive pinion. The matching mark should be in line with the matching mark (A) on companion flange (1).

#### **CAUTION:**


For matching mark, use paint. Never damage companion flange and drive pinion.


## NOTE:

The matching mark (A) on the final drive companion flange (1) indicates the maximum vertical runout position.

When replacing companion flange, matching mark is not necessary.

4. Remove companion flange using the suitable puller.

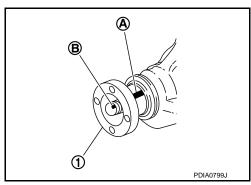

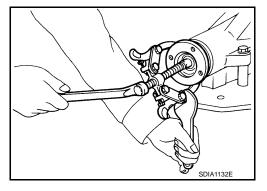

Е

DLN

Α

В

G

Н

J

K

L

M

Ν

0

Ρ


#### < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]


Press drive pinion assembly out of gear carrier. CAUTION:

Never drop drive pinion assembly.

- 6. Remove front oil seal.
- 7. Remove pinion front bearing inner race.
- 8. Remove drive pinion bearing adjusting washer and drive pinion adjusting washer.

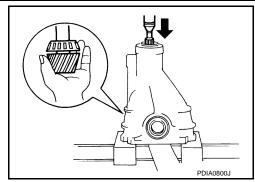


 Remove pinion rear bearing inner race and pinion height adjusting washer with replacer (A) (commercial service tool).

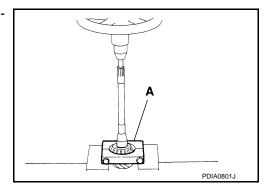

10. Tap pinion front/rear bearing outer races uniformly a brass rod or equivalent to removed.

#### **CAUTION:**

Never damage gear carrier.

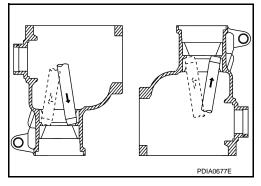


INFOID:0000000004345358

Assembly

Install pinion front and rear bearing outer races using drift (A) [SST: ST37820000 ( — )].

#### **CAUTION:**

- At first, using a hammer, tap bearing outer race until it becomes flat to gear carrier.
- Never reuse pinion front and rear bearing outer race.

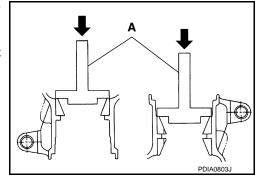

#### < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]


Temporarily install pinion height adjusting washer (1).

When hypoid gear set has been replaced

 Select pinion height adjusting washer. Refer to <u>DLN-130</u>. "Adjustment".

When hypoid gear set has been reused


 Temporarily install the removed pinion height adjusting washer or same thickness washer to drive pinion.

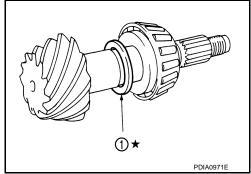

3. Install selected pinion height adjusting washer (2) to drive pinion. Press pinion rear bearing inner race (1) to it, using drift (A) [SST: ST30032000 (J-26010-01)].


#### **CAUTION:**

- Pay attention to the direction of pinion height adjusting washer. (Assemble as shown in the figure.)
- Never reuse pinion rear bearing inner race.

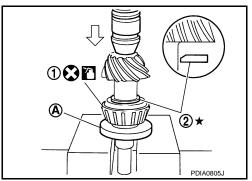


- Temporarily assemble removed drive pinion adjusting washer and drive pinion bearing adjusting washer or same thickness of them to drive pinion.
- 5. Apply gear oil to pinion rear bearing, and assemble drive pinion into gear carrier.
- 6. Apply gear oil to pinion front bearing, and assemble pinion front bearing inner race to drive pinion assembly. CAUTION:

Never reuse pinion front bearing inner race.




8. Adjust pinion bearing preload. If necessary, select the appropriate drive pinion adjusting washer and drive pinion bearing adjusting washer. Refer to DLN-130, "Adjustment".

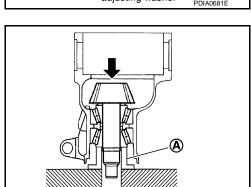

- Using the drifts, install front oil seal as shown in figure.
  - A: Drift [SST: ST33400001 (J-26082)] B: Drift [SST: KV38102510 ( — )]

#### **CAUTION:**

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

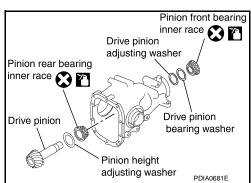

Α PDIA0808J Α

В

DLN

F

Н

M


Ν

PDIA0807J

10. Install companion flange (1).

#### NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange (1).

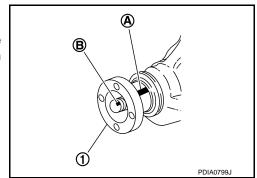

 Apply anti-corrosion oil to the thread and seat of new drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive pinion.

#### **CAUTION:**

#### Never reuse drive pinion lock nut.

12. Tighten to drive pinion lock nut, while adjusting pinion bearing preload torque.

A: Preload gauge [SST: ST3127S000 (J-25765-A)]

#### **Standard**

Pinion bearing preload : Refer to <u>DLN-134, "Preload Torque"</u>.

#### **CAUTION:**

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.
- Install differential case assembly. Refer to <u>DLN-116</u>. "<u>Assembly</u>".
   CAUTION:

#### Never install carrier cover yet.

- 14. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and companion flange runout. Refer to <u>DLN-120</u>, "<u>Adjustment</u>" and <u>DLN-130</u>, "<u>Adjustment</u>". Recheck above items. Readjust the above description, if necessary.
- 15. Check total preload torque. Refer to <a href="DLN-120">DLN-120</a>, "Adjustment".
- Install carrier cover. Refer to DLN-116, "Assembly".

Adjustment

#### PINION GEAR HEIGHT

If the hypoid gear set has been replaced, select the pinion height adjusting washer.

 Use the formula below to calculate pinion height adjusting washer thickness.

#### Washer selection equation:


$$T = T_0 + (t_1 - t_2)$$

T: Correct washer thickness

To: Removed washer thickness

t1: Old drive pinion head letter " $H \times 0.01$ " ("H": machined tolerance 1/100 mm  $\times$  100)

t2: New drive pinion head letter " $H \times 0.01$ " ("H": machined tolerance 1/100 mm  $\times$  100)

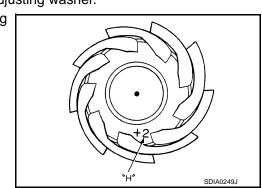

#### **Example:**

 $T = 3.21 + [(2 \times 0.01) - (-1 \times 0.01)] = 3.24$ 

To: 3.21 t1: +2 t2: -1

2. Select the proper pinion height adjusting washer.

If unable to find a washer of desired thickness, use a washer with thickness closest to the calculated value.

# DLN

Е

F

Н

K

M

Ν

Α

В

## **Example:**

Calculated value... T = 3.22 mm Used washer... T = 3.21 mm

## PINION BEARING PRELOAD


Assemble the drive pinion parts if they are disassembled. Refer to <u>DLN-128</u>, "Assembly".

1. Make sure all parts are clean. Also, make sure the bearings are well lubricated with gear oil.

2. Install companion flange (1).

#### NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange (1).

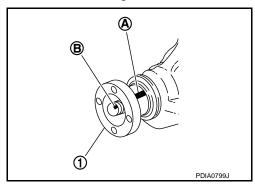

Temporarily tighten removed drive pinion lock nut to drive pinion.
 NOTE:

Use removed drive pinion lock nut only for the preload measurement

- 4. Rotate drive pinion at least 20 times to check for smooth operation of the bearing.
- Tighten to drive pinion lock nut, while adjust pinion bearing preload torque.

A: Preload gauge [SST: ST3127S000 (J-25765-A)]




Pinion bearing preload : Refer to <u>DLN-134, "Preload Torque"</u>.

#### **CAUTION:**

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

**DLN-131** 

6. If the pinion bearing preload torque is outside the specification, use a thicker/thinner drive pinion bearing adjusting washer and drive pinion adjusting washer to adjust.

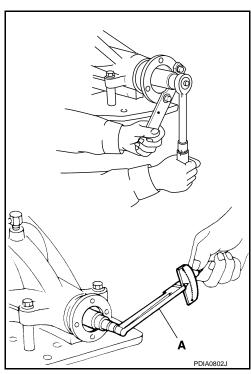

2009 EX35

#### When the preload torque is large:

Decrease the drive pinion bearing adjusting washer and drive pinion adjusting washer thickness. For select parts refer to parts information.

## When the preload is small:

Increase the drive pinion bearing adjusting washer and drive pinion adjusting washer thickness. For select parts refer to parts information.

7. Remove companion flange, after adjustment.


#### COMPANION FLANGE RUNOUT

- 1. Fit a dial indicator onto the companion flange face (inner side of the propeller shaft mounting bolt holes).
- 2. Rotate companion flange to check for runout.

#### Limit

Companion flange runout : Refer to <u>DLN-134, "Companion Flange Runout"</u>.

- 3. Fit a test indicator to the inner side of companion flange (socket diameter).
- 4. Rotate companion flange to check for runout.

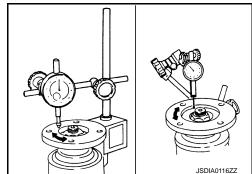

#### Limit

Companion flange runout : Refer to <u>DLN-134, "Companion Flange Runout".</u>

- If the runout value is outside the runout limit, follow the procedure below to adjust.
- a. Check for runout while changing the phase between companion flange and drive pinion by 90° step, and search for the position where the runout is the minimum.
- b. If the runout value is still outside of the limit after the phase has been changed, possible cause will be an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.
- c. If the runout value is still outside of the limit after the check and repair, replace companion flange.

## Inspection After Disassembly

INFOID:0000000004345360

#### DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

#### **BEARING**

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

#### SIDE GEAR AND PINION MATE GEAR

- · Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

#### SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

#### OIL SEAL

• Whenever disassembled, replace.

## < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: F160A]

• If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

#### DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

## **COMPANION FLANGE**

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

DLN

Α

В

С

Е

F

G

Н

J

Κ

L

M

Ν

0

## **SERVICE DATA AND SPECIFICATIONS (SDS)**

< SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

# **General Specifications**

INFOID:0000000004345361

[FRONT FINAL DRIVE: F160A]

		AWD	
Applied model		VQ35HR	
		A/T	
Final drive model		F160A	
Gear ratio		3.133	
Number of teeth (Drive gear/Drive pi	nion)	47/15	
Oil capacity (Approx.)	ℓ (US pt, Imp pt)	0.65 (1-3/8, 1-1/8)	
Number of pinion gears		2	
Drive pinion adjustment spacer type		Solid	

## **Drive Gear Runout**

INFOID:0000000004345362

	Unit: mm (in)
Item	Limit
Drive gear back face runout	0.05 (0.0020)

## Differential Side Gear Clearance

INFOID:0000000004345363

	Unit: mm (in)
Item	Standard
Side gear backlash (Clearance between side gear and differential case)	0.2 (0.008) or less (Each gear should rotate smoothly without excessive resistance during differential motion.)

## **Preload Torque**

INFOID:0000000004345364

Unit: N·m (kg-m, in-lb)

Item	Standard
Pinion bearing (P1)	0.78 – 1.57 (0.08 – 0.16, 7 – 13)
Side bearing (P2)	0.78 - 1.08 (0.08 - 0.11, 7 - 9)
Side bearing to pinion bearing (Total preload) (Total preload = P1 + P2)	1.56 – 2.65 (0.16 – 0.27, 14 – 23)

## Backlash

Unit: mm (in)

Item	Standard
Drive gear to drive pinion gear	0.10 - 0.15 (0.0039 - 0.0059)

## Companion Flange Runout

INFOID:0000000004345366

Unit: mm (in)

Item	Limit				
Companion flange face runout	0.18 (0.0071)				
Inner side of the companion flange runout	0.13 (0.0051)				

[REAR FINAL DRIVE: R200]

# SYSTEM DESCRIPTION

# REAR FINAL DRIVE ASSEMBLY

System Diagram

**CROSS-SECTIONAL VIEW** 

2WD

- 1. Side flange
- 4. Pinion mate shaft
- 7. Drive pinion
- 10. Collapsible spacer
- 2. Pinion mate gear
- 5. Differential case
- 8. Pinion front bearing
- 11. Pinion rear bearing
- 3. Drive gear
- 6. Side bearing
- 9. Companion flange
- 12. Side gear

DLN

C

Α

Е

F

Н

-

J

Κ


L

M

Ν

0

**AWD** 

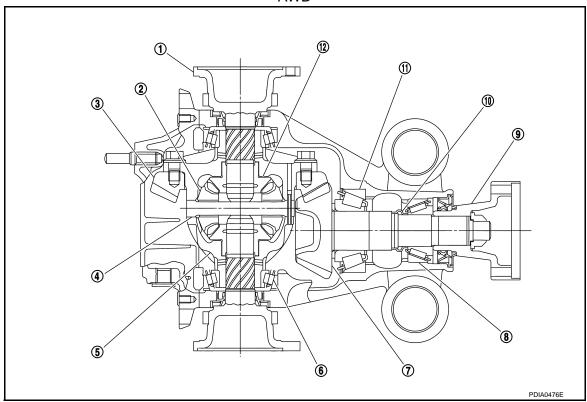

- 1. Side flange
- 4. Pinion mate shaft
- 7. Drive pinion
- 10. Collapsible spacer
- 2. Pinion mate gear
- 5. Differential case
- 8. Pinion front bearing
- 11. Pinion rear bearing
- 3. Drive gear
- 6. Side bearing
- 9. Companion flange
- 12. Side gear

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

[REAR FINAL DRIVE: R200]

Α

В

C

DLN

Е

F

Н

K

INFOID:0000000004345367

< SYMPTOM DIAGNOSIS >

# SYMPTOM DIAGNOSIS

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## **NVH Troubleshooting Chart**

## 2WD

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference		DLN-176, "2WD: Inspection After Disassembly"	DLN-171, "2WD: Adjustment"	DLN-176, "2WD: Inspection After Disassembly"	DLN-171, "2WD: Adjustment"	DLN-171, "2WD: Adjustment"	DLN-144, "Inspection"	NVH in DLN section.	NVH in FAX, RAX, FSU and RSU sections.	NVH in WT section.	NVH in WT section.	NVH in RAX section.	NVH in BR section.	NVH in ST section.
Possible cause and SUSPECTED	) PARTS	Gear tooth rough	Gear contact improper	Tooth surfaces worn	Backlash incorrect	Companion flange excessive runout	Gear oil improper	PROPELLER SHAFT	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
Symptom	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×

<sup>×:</sup> Applicable

## **AWD**

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Ν

M

0

Р

Revision: 2010 March **DLN-137** 2009 EX35

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING [REAR FINAL DRIVE: R200]

< SYMPTOM DIAGNOSIS >

Reference		DLN-189, "AWD: Inspection After Disassembly"	DLN-184, "AWD : Adjustment"	DLN-189, "AWD: Inspection After Disassembly"	DLN-184, "AWD : Adjustment"	DLN-184, "AWD : Adjustment"	DLN-144, "Inspection"	NVH in DLN section.	NVH in FAX, RAX, FSU and RSU sections.	NVH in WT section.	NVH in WT section.	NVH in FAX and RAX section.	NVH in BR section.	NVH in ST section.
Possible cause and SUSPECTED	PARTS	Gear tooth rough	Gear contact improper	Tooth surfaces worn	Backlash incorrect	Companion flange excessive runout	Gear oil improper	PROPELLER SHAFT	AXLE AND SUSPENSION	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
Symptom	Noise	×	×	×	×	×	×	×	×	×	×	×	×	×

<sup>×:</sup> Applicable

## **PRECAUTIONS**

< PRECAUTION > [REAR FINAL DRIVE: R200]

# **PRECAUTION**

## **PRECAUTIONS**

## Service Notice or Precautions for Rear Final Drive

• Check for the correct installation status prior to removal or disassembly. If matching marks are required, be certain they never interfere with the function of the parts when applied.

- Overhaul should be done in a clean work area, it is preferable to work in dustproof area.
- Before disassembly, using steam or white gasoline, completely remove sand and mud from the exterior of the unit, preventing them from entering into the unit during disassembly or assembly.
- Check appearance of the disassembled parts for damage, deformation, and unusual wear. Replace them with new ones, if necessary.
- Gaskets, seals and O-rings should be replaced any time when the unit is disassembled.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, observe it.
- Clean and flush the parts sufficiently and blow-dry them.
- Be careful not to damage sliding surfaces and mating surfaces.
- When applying sealant, remove the old sealant from the mounting surface; then remove any moisture, oil, and foreign materials from the application and mounting surfaces.
- Always use shop paper for cleaning the inside of components.
- Never use cotton gloves or shop rags to prevent entering of lint.
- During assembly, observe the specified tightening torque, and apply new gear oil, petroleum jelly, or multipurpose grease as specified for each vehicle, if necessary.

А

В

INFOID:0000000004496759

DLN

F

G

Н

J

K

L

VI

Ν

0

[REAR FINAL DRIVE: R200]

# **PREPARATION**

## **PREPARATION**

# Special Service Tools

INFOID:0000000004345369

Tool number	nay differ from those of special service tools illus	
(Kent-Moore No.) Tool name		Description
KV40104100		Removing side flange
( — ) Attachment		
A Made III of the American		
	ZZA0804D	
ST36230000 (J-25840-A) Sliding hammer		Removing side flange
	ZZA0803D	
ST3127S000		Measuring pinion bearing preload and total
(J-25765-A) Preload gauge		preload
0 0		
	ZZA0806D	
KV381054S0		Removing front oil seal
(J-34286) Puller		
ST30720000	ZZA0601D	Installing front oil seal
(J-25405)		Installing from oil sear     Installing pinion rear bearing outer race
Drift a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia.		
	ZZA0811D	
KV38107900 (J-39352) Protector	_	Installing side flange
1 10:00:01		
	S-NT129	

## **PREPARATION**

_							
< F	2RI	FΡ	AR	$\Delta T$	()	N	>

[REAR FINAL DRIVE: R200]

< PREPARATION >		[REAR FINAL DRIVE: R200]
Tool number (Kent-Moore No.) Tool name		Description
KV38100200 (J-26233) Drift a: 65 mm (2.56 in) dia. b: 49 mm (1.93 in) dia.	a b ZZA1143D	Installing side oil seal
KV10111100 (J-37228) Seal cutter		Removing rear cover
KV38100800 (J-25604-01) Attachment A: 541 mm (21.30 in) B: 200 mm (7.87 in)	S-NT046	Fixing unit assembly
ST3306S001 (J-22888-D) Differential side bearing puller set 1: ST33051001 (J-22888-20) Puller 2: ST33061000 (J-8107-2) Base a: 28.5 mm (1.122 in) dia. b: 38 mm (1.50 in) dia.	SDIA0267E	Removing and installing side bearing inner race
KV38100300 (J-25523) Drift a: 54 mm (2.13 in) dia. b: 46 mm (1.81 in) dia. c: 32 mm (1.26 in) dia.	ZZA1046D	Installing side bearing inner race
(J-8129) Spring gauge	CONTRACTOR DE LA CONTRA	Measuring turning torque
	NT127	

## **PREPARATION**

_	PR	FP	ΔR	$\Delta T$	ION	`

[REAR FINAL DRIVE: R200]

Tool number (Kent-Moore No.) Tool name		Description
KV40105230 ( — ) Drift a: 92 mm (3.62 in) dia. b: 86 mm (3.39 in) dia. c: 45 mm (1.77 in) dia.	a b C PDIA0591E	Installing pinion rear bearing outer race
ST30611000 (J-25742-1) Drift bar		Installing pinion front bearing outer race (Use with ST30613000)
ST30613000 (J-25742-3) Drift a: 72 mm (2.83 in) dia. b: 48 mm (1.89 in) dia.	S-NT090	Installing pinion front bearing outer race
ST30901000 (J-26010-01) Drift a: 79 mm (3.11 in) dia. b: 45 mm (1.77 in) dia. c: 35.2 mm (1.386 in) dia.	a b c ZZA0978D	Installing pinion rear bearing inner race
(J-34309) Differential shim selector tool	055.05.05 NT134	Adjusting bearing preload and pinion gear height
(J-25269-4) Side bearing disc (2 Req'd)	NI IS	Selecting pinion height adjusting washer
	NT136	

**Commercial Service Tools** 

INFOID:0000000004345370

## **PREPARATION**

#### > PREPARATION >

[REAR FINAL DRIVE: R200]

PREPARATION >		[REAR FINAL DRIVE: R200]
Tool name		Description
Flange wrench		Removing and installing drive pinion lock nut
	NT035	
Replacer		Removing pinion rear bearing inner race
	ZZA0700D	
Spacer a: 60 mm (2.36 in) dia. b: 36 mm (1.42 in) dia. c: 30 mm (1.18 in)	b c	Installing pinion front bearing inner race
	a zzA1133D	
Power tool		Loosening bolts and nuts
	PBIC0190E	

Κ

L

IVI

Ν

0

Ρ

#### [REAR FINAL DRIVE: R200]

## PERIODIC MAINTENANCE

## REAR DIFFERENTIAL GEAR OIL

Inspection INFOID:000000004345372

#### **OIL LEAKAGE**

• Make sure that oil is not leaking from final drive assembly or around it.

#### OIL LEVEL

 Remove filler plug (1) and check oil level from filler plug mounting hole as shown in the figure.


#### **CAUTION:**

#### Never start engine while checking oil level.

Set a gasket on filler plug (1) and install it on final drive assembly.
 Refer to <u>DLN-164</u>, "2WD : <u>Exploded View"</u> (2WD), <u>DLN-177</u>, "AWD : <u>Exploded View"</u> (AWD).

#### **CAUTION:**

Never reuse gasket.

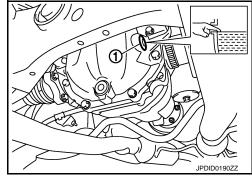


INFOID:0000000004345373

## Draining

- 1. Stop engine.
- 2. Remove drain plug (1) and drain gear oil.
- Set a gasket on drain plug (1) and install it to final drive assembly and tighten to the specified torque. Refer to <u>DLN-164, "2WD : Exploded View"</u> (2WD), <u>DLN-177, "AWD : Exploded View"</u> (AWD).

#### **CAUTION:**

Never reuse gasket.

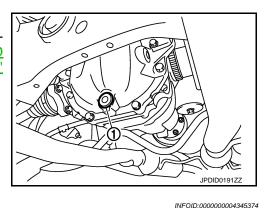

## Refilling

1. Remove filler plug (1). Fill with new gear oil until oil level reaches the specified level near filler plug mounting hole.

Oil grade and viscosity : Refer to

: Refer to MA-10, "Fluids and Lubricants".


Oil capacity : Refer to <u>DLN-208, "Gen-</u>

eral Specification".

 After refilling oil, check oil level. Set a gasket to filler plug (1), then install it to final drive assembly. Refer to <u>DLN-164</u>, "2WD: <u>Exploded View"</u> (2WD), <u>DLN-177</u>, "AWD: <u>Exploded View"</u> (AWD).

#### **CAUTION:**

Never reuse gasket.

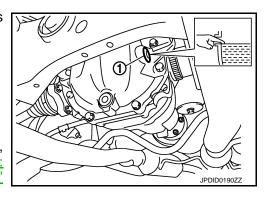

# REMOVAL AND INSTALLATION

# FRONT OIL SEAL

2WD

2WD : Exploded View

INFOID:0000000004345375

Α

В

DLN

Е

F


Н

K

M

Ν

Р

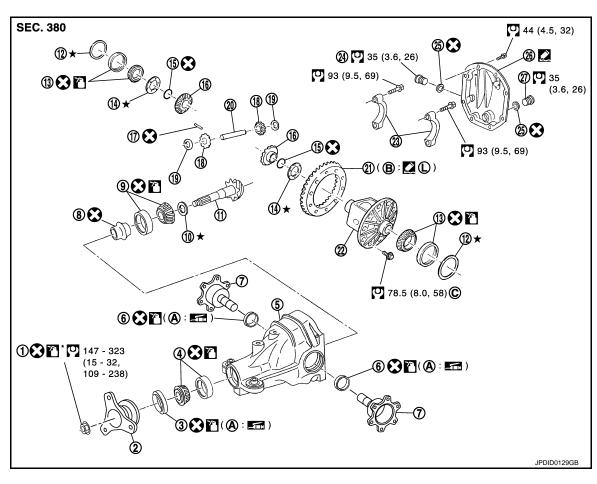

- Drive pinion lock nut
- 4. Pinion front bearing
- 7. Side flange
- 10. Pinion height adjusting washer
- 13. Side bearing
- 16. Side gear
- 19. Pinion mate thrust washer
- 22. Differential case
- 25. Gasket
- A. Oil seal lip

- 2. Companion flange
- 5. Gear carrier
- 8. Collapsible spacer
- 11. Drive pinion
- 14. Side gear thrust washer
- 17. Lock pin
- 20. Pinion mate shaft
- 23. Bearing cap
- 26. Rear cover
- B. Screw hole

- 3. Front oil seal
- 6. Side oil seal
- 9. Pinion rear bearing
- 12. Side bearing adjusting washer
- 15. Circular clip
- 18. Pinion mate gear
- 21. Drive gear
- 24. Filler plug
- 27. Drain plug
- C. For the tightening torque, refer to <u>DLN-167, "2WD : Assembly"</u>.

: Apply gear oil.

\*: Apply anti-corrosion oil.

Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

2WD : Removal and Installation

INFOID:0000000004345376

[REAR FINAL DRIVE: R200]

### **REMOVAL**

#### **CAUTION:**

Verify identification stamp of replacement frequency put in the lower part of gear carrier to determine replacement for collapsible spacer when replacing front oil seal. Refer to "Identification stamp of replacement frequency of front oil seal". If collapsible spacer replacement is necessary, remove final drive assembly and disassemble it to replace front oil seal and collapsible spacer. Refer to <a href="DLN-161">DLN-161</a>, "2WD: Disassembly".


### NOTE:

The reuse of collapsible spacer is prohibited in principle. However, it is reusable on a one-time basis only in cases when replacing front oil seal.

Identification stamp of replacement frequency of front oil seal

- The diagonally shaded area in the figure shows stamping point for replacement frequency of front oil seal.
- The following table shows if collapsible spacer replacement is needed before replacing front oil seal.
   When collapsible spacer replacement is required, disassemble final drive assembly to replace collapsible spacer and front oil seal.
   Refer to DLN-165, "2WD: Disassembly".

Stamp	collapsible spacer replacement		
No stamp	Not required		
"0" or "0" on the far right of stamp	Required		
"01" or "1" on the far right of stamp	Not required		

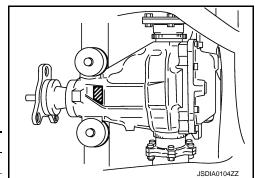

### **CAUTION:**

### Make a stamping after replacing front oil seal.

 After replacing front oil seal, make a stamping on the stamping point in accordance with the table below in order to identify replacement frequency.

### **CAUTION:**

Make a stamping from left to right.

Stamp before stamping	Stamping on the far right	Stamping
No stamp	0	0
"0" (Front oil seal was replaced once.)	1	01
"01" (Collapsible spacer and front oil seal were replaced last time.)	0	010
"0" is on the far right. (Only front oil seal was replaced last time.)	1	01
"1" is on the far right. (Collapsible spacer and front oil seal were replaced last time.)	0	010

- 1. Drain gear oil. Refer to <a href="DLN-144">DLN-144</a>, "Draining".
- 2. Make a judgment if a collapsible spacer replacement is required.
- Remove center muffler with a power tool. Refer to EX-5, "Exploded View".
- 4. Remove rear wheel sensor. Refer to <u>BRC-108</u>, "FRONT WHEEL SENSOR: Exploded View".
- 5. Remove drive shaft from final drive. Then suspend it by wire, etc. Refer to RAX-11, "Exploded View".

## < REMOVAL AND INSTALLATION >


[REAR FINAL DRIVE: R200]

 Install attachment (A) [SST: KV40104100 ( — )] to side flange, and then pull out the side flange with the sliding hammer (B) [SST: ST36230000 (J-25840-A)].

NOTE:

Circular clip installation position: Final drive side


7. Remove rear propeller shaft. Refer to DLN-82, "Exploded View".

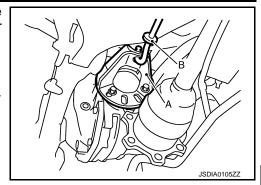

8. Measure the total preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

NOTE:

Record the preload measurement.

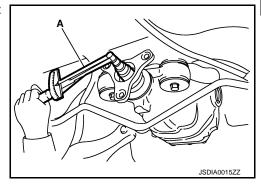


9. Put matching mark (B) on the end of the drive pinion. The matching mark (B) should be in line with the matching mark (A) on companion flange (1).

**CAUTION:** 


For matching mark, use paint. Never damage companion flange and drive pinion.

NOTE:


The matching mark (A) on the final drive companion flange (1) indicates the maximum vertical runout position.

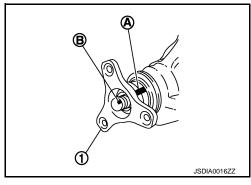

10. Remove drive pinion lock nut using the flange wrench.

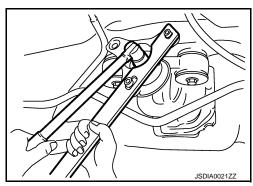

11. Remove companion flange using pullers.

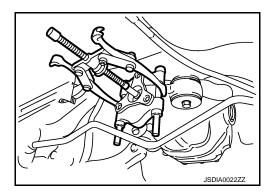

Revision: 2010 March **DLN-147** 2009 EX35

Α

В

DLN

Е

F

G

Н

K


L

M

Ν

0

12. Remove front oil seal using the puller (A) [SST: KV381054S0 (J-34286)].

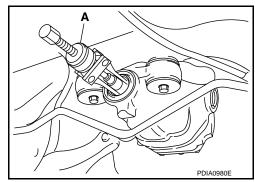


## **INSTALLATION**


- 1. Apply multi-purpose grease to front oil seal lips.
- Install front oil seal using the drift (A) [SST: ST30720000 (J-25405)] as shown in figure.

## **CAUTION:**

- Never reuse oil seal.
- · Never incline oil seal when installing.

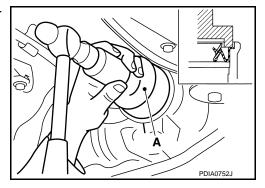

3. Align the matching mark (B) of drive pinion with the matching mark (A) of companion flange (1), and then install the companion flange (1).

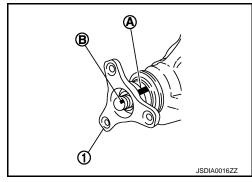

### < REMOVAL AND INSTALLATION >

 Apply anti-corrosion oil to the thread and seat of new drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive pinion.

## **CAUTION:**

### Never reuse drive pinion lock nut.

- 5. Tighten drive pinion lock nut within the limits of specified torque so as to keep the pinion bearing preload within a standard values.
  - A : Preload gauge [SST: ST3127S000 (J-25765-A)]

### **Standard**

**Total preload torque** 

: A value that add 0.1 – 0.4 N·m (0.01 – 0.04 kg-m) to the measured value when removing.

### **CAUTION:**

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- If the preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Never loosen drive pinion lock nut to adjust the preload torque.
- 6. Set a dial indicator (A) vertically to the tip of the drive pinion.
- 7. Rotate drive pinion to check for runout.

### Limit

**Drive pinion runout** 

: Refer to <u>DLN-208</u>, "<u>Drive</u> <u>Pinion Runout (2WD)"</u>.


- If the runout value is still outside of the limit after the phase has been changed, possible causes are an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.
- 8. Make a stamping for identification of front oil seal replacement frequency. Refer to "Identification stamp of replacement frequency of front oil seal". CAUTION:

### Make a stamping after replacing front oil seal.


- Install rear propeller shaft. Refer to <u>DLN-82, "Exploded View"</u>.
- 10. Install side flange with the following procedure.
- a. Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
- After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.
- Put a suitable drift on the center of side flange, then drive it until sound changes.

### NOTE:

When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

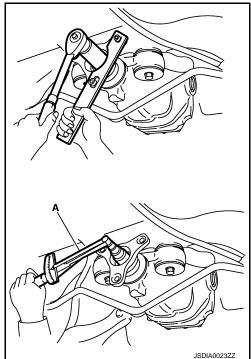

[REAR FINAL DRIVE: R200]

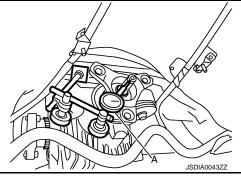

Side oil seal Splange

Α

В

DLN

Е

F

G

Н

|

J

K

M

Ν

0

## [REAR FINAL DRIVE: R200]

INFOID:0000000004345377

 d. Confirm that the dimension of the side flange (1) installation measurement (A) in the figure comes into the following.

## **Standard**


Α


: 326 - 328 mm (12.83 - 12.91 in)

- 11. Install drive shaft. Refer to RAX-11, "Exploded View".
- 12. Install rear wheel sensor. Refer to <a href="BRC-108">BRC-108</a>, "FRONT WHEEL SENSOR: Exploded View".
- 13. Install center muffler. Refer to EX-5, "Exploded View".
- 14. Refill gear oil to the final drive and check oil level. Refer to <u>DLN-144</u>. "Refilling".
- 15. Check the final drive for oil leakage. Refer to <a href="DLN-144">DLN-144</a>, "Inspection".

**AWD** 

AWD: Exploded View

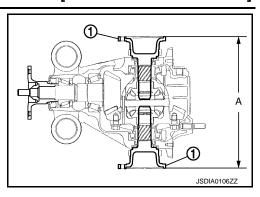

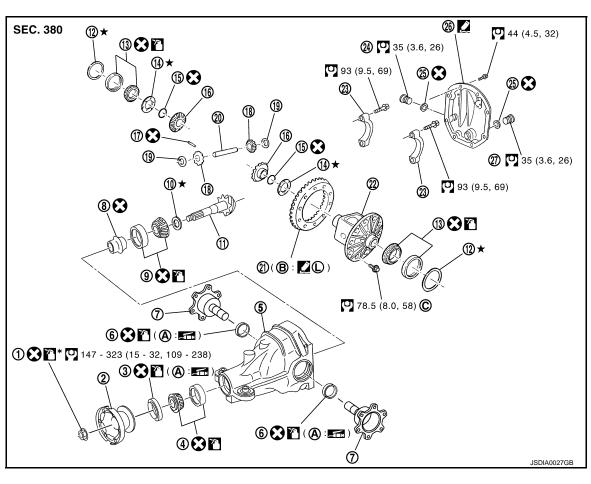

- 1. Drive pinion lock nut
- 4. Pinion front bearing
- 7. Side flange
- 10. Pinion height adjusting washer
- 13. Side bearing
- 16. Side gear
- 19. Pinion mate thrust washer
- 22. Differential case

- 2. Companion flange
- Gear carrier
- 8. Collapsible spacer
- 11. Drive pinion
- 14. Side gear thrust washer
- 17. Lock pin
- 20. Pinion mate shaft
- 23. Bearing cap

- Front oil seal
- 6. Side oil seal
- 9. Pinion rear bearing
- 12. Side bearing adjusting washer
- 15. Circular clip
- 18. Pinion mate gear
- 21. Drive gear
- 24. Filler plug

## < REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

26. Rear cover 25. Gasket 27. Drain plug

Screw hole C. For the tightening torque, refer to A. Oil seal lip B. DLN-180, "AWD: Assembly".

: Apply gear oil.

\*: Apply anti-corrosion oil. Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

(L): Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17. "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

## AWD: Removal and Installation

INFOID:0000000004345378

### REMOVAL

### **CAUTION:**

Verify identification stamp of replacement frequency put in the lower part of gear carrier to determine replacement for collapsible spacer when replacing front oil seal. Refer to "Identification stamp of replacement frequency of front oil seal". If collapsible spacer replacement is necessary, remove final drive assembly and disassemble it to replace front oil seal and collapsible spacer. Refer to DLN-162, "AWD: Removal and Installation" and DLN-177, "AWD: Disassembly".

### NOTE:


The reuse of collapsible spacer is prohibited in principle. However, it is reusable on a one-time basis only in cases when replacing front oil seal.

Identification stamp of replacement frequency of front oil seal

- The diagonally shaded area in the figure shows stamping point for replacement frequency of front oil seal.
- The following table shows if collapsible spacer replacement is needed before replacing front oil seal.

When collapsible spacer replacement is required, disassemble final drive assembly to replace collapsible spacer and front oil seal. Refer to DLN-177, "AWD: Disassembly".

Stamp	collapsible spacer replacement		
No stamp	Not required		
"0" or "0" on the far right of stamp	Required		
"01" or "1" on the far right of stamp	Not required		

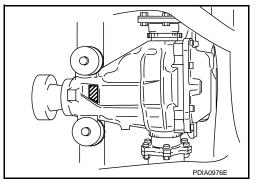

### **CAUTION:**

### Make a stamping after replacing front oil seal.

 After replacing front oil seal, make a stamping on the stamping point in accordance with the table below in order to identify replacement frequency.

## **CAUTION:**

Make a stamping from left to right.

Stamp before stamping	Stamping on the far right	Stamping
No stamp	0	0
"0" (Front oil seal was replaced once.)	1	01
"01" (Collapsible spacer and front oil seal were replaced last time.)	0	010
"0" is on the far right. (Only front oil seal was replaced last time.)	1	01
"1" is on the far right. (Collapsible spacer and front oil seal were replaced last time.)	0	010

**DLN-151** Revision: 2010 March 2009 EX35

DLN

Α

Е

Н

N

## < REMOVAL AND INSTALLATION >


[REAR FINAL DRIVE: R200]

- Drain gear oil. Refer to <u>DLN-144, "Draining"</u>.
- 2. Make a judgment if a collapsible spacer replacement is required.
- 3. Remove center muffler with a power tool. Refer to EX-5, "Exploded View".
- 4. Remove rear wheel sensor. Refer to <a href="https://example.com/BRC-108">BRC-108</a>, "FRONT WHEEL SENSOR: Exploded View".
- Remove drive shaft from final drive. Then suspend it by wire, etc. Refer to RAX-11, "Exploded View".
- Install attachment (A) [SST: KV40104100 ( )] to side flange, and then pull out the side flange with the sliding hammer (B) [SST: ST36230000 (J-25840-A)].

NOTE:

Circular clip installation position: Final drive side


7. Remove rear propeller shaft. Refer to <a href="DLN-91">DLN-91</a>, "Exploded View".

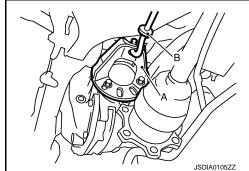

8. Measure the total preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

NOTE:

Record the preload measurement.

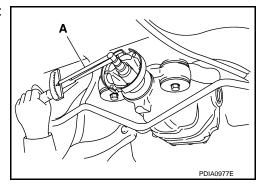


9. Put matching mark (B) on the end of the drive pinion. The matching mark should be in line with the matching mark (A) on companion flange (1).

### **CAUTION:**


For matching mark, use paint. Never damage companion flange and drive pinion.

NOTE:

The matching mark on the final drive companion flange indicates the maximum vertical runout position.

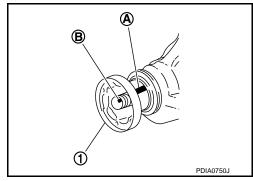


10. Remove drive pinion lock nut using the flange wrench.

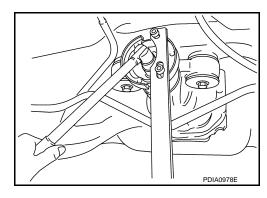


## < REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

11. Remove companion flange using pullers.

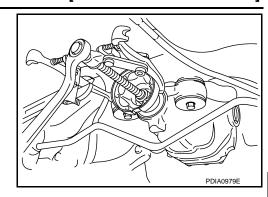

Remove front oil seal using the puller (A) [SST: KV381054S0 (J-34286)].

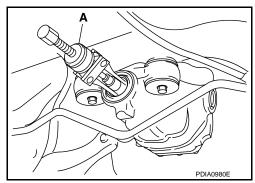


## **INSTALLATION**


- 1. Apply multi-purpose grease to front oil seal lips.
- 2. Install front oil seal using the drift (A) [SST: ST30720000 (J-25405)] as shown in figure.

### **CAUTION:**

- Never reuse oil seal.
- Never incline oil seal when installing.

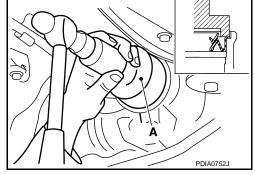

3. Align the matching mark (B) of drive pinion with the matching mark (A) of companion flange (1), and then install the companion flange.

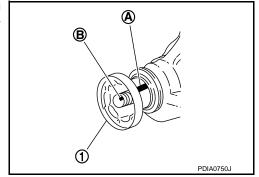

Α

В

DLN

Е

F

G

Н

K

M

Ν

0

Ρ

[REAR FINAL DRIVE: R200]

 Apply anti-corrosion oil to the thread and seat of new drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive pinion.

## **CAUTION:**

## Never reuse drive pinion lock nut.

5. Tighten drive pinion lock nut within the limits of specified torque so as to keep the pinion bearing preload within a standard values.

A : Preload gauge [SST: ST3127S000 (J-25765-A)]

### **Standard**

**Total preload torque** 

: A value that add 0.1 – 0.4 N·m (0.01 – 0.04 kg-m) to the measured value when removing.

### **CAUTION:**

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- If the preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Never loosen drive pinion lock nut to adjust the preload torque.
- 6. Fit a test indicator to the inner side of companion flange (socket diameter).
- 7. Rotate companion flange to check for runout.

#### Limit

**Companion flange runout** 

: Refer to <u>DLN-209</u>, "Companion Flange Runout (AWD)".

- If the runout value is outside the runout limit, follow the procedure below to adjust.
- Check for runout while changing the phase between companion flange and drive pinion by 90° step, and search for the position where the runout is the minimum.
- If the runout value is still outside of the limit after the phase has been changed, possible cause will be an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.
- If the runout value is still outside of the limit after the check and repair, replace companion flange.
- 8. Make a stamping for identification of front oil seal replacement frequency. Refer to "Identification stamp of replacement frequency of front oil seal".


## **CAUTION:**


# Make a stamping after replacing front oil seal.

- 9. Install rear propeller shaft. Refer to <a href="DLN-91">DLN-91</a>, "Exploded View".
- 10. Install side flange with the following procedure.
- a. Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
- After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.
- Put a suitable drift on the center of side flange, then drive it until sound changes.

## NOTE:

When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

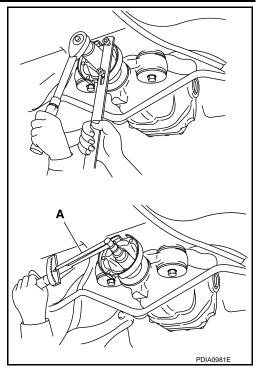

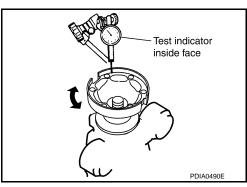

## < REMOVAL AND INSTALLATION >


[REAR FINAL DRIVE: R200]

 Confirm that the dimension of the side flange installation measurement (A) in the figure comes into the following.

## **Standard**

A : 326 – 328 mm (12.83 – 12.91 in)

- 11. Install drive shaft. Refer to <a href="RAX-11">RAX-11</a>, "Exploded View".
- Install rear wheel sensor. Refer to <u>BRC-108</u>, "FRONT WHEEL <u>SENSOR</u>: Exploded View".
- 13. Install center muffler. Refer to EX-5, "Exploded View".
- 14. Refill gear oil to the final drive and check oil level. Refer to <u>DLN-144</u>. "Refilling".
- 15. Check the final drive for oil leakage. Refer to <a href="DLN-144">DLN-144</a>, "Inspection".

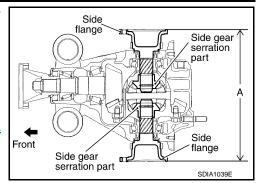

DLN

Α

В

C

Е

F

Н

K

L

M

Ν


0

# SIDE OIL SEAL

2WD

2WD: Exploded View

INFOID:0000000004345379

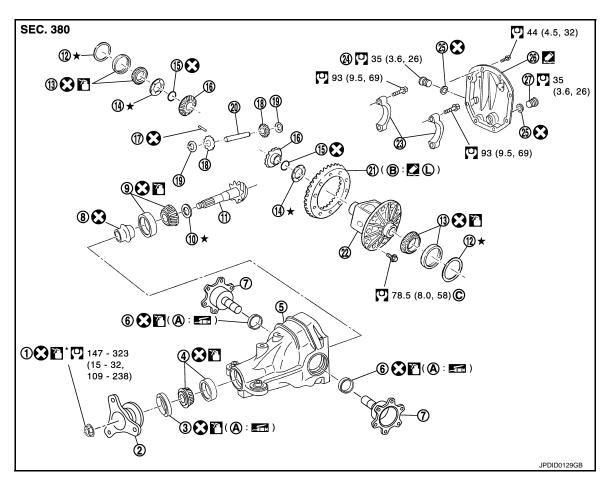

- 1. Drive pinion lock nut
- 4. Pinion front bearing
- 7. Side flange
- 10. Pinion height adjusting washer
- 13. Side bearing
- 16. Side gear
- 19. Pinion mate thrust washer
- 22. Differential case
- 25. Gasket
- A. Oil seal lip

- 2. Companion flange
- 5. Gear carrier
- Collapsible spacer
- 11. Drive pinion
- 14. Side gear thrust washer
- 17. Lock pin
- 20. Pinion mate shaft
- 23. Bearing cap
- 26. Rear cover
- B. Screw hole

- 3. Front oil seal
- 6. Side oil seal
- 9. Pinion rear bearing
- 12. Side bearing adjusting washer
- 15. Circular clip
- 18. Pinion mate gear
- 21. Drive gear
- 24. Filler plug
- 27. Drain plug
- C. For the tightening torque, refer to <u>DLN-167, "2WD : Assembly"</u>.

- Apply gear oil.
- ☆: Apply anti-corrosion oil.
- Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".
- (a): Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

[REAR FINAL DRIVE: R200]

# 2WD: Removal and Installation


INFOID:0000000004345380

## **REMOVAL**

- 1. Remove center muffler with a power tool. Refer to EX-5, "Exploded View".
- Remove rear wheel sensor. Refer to <u>BRC-108</u>, "FRONT WHEEL SENSOR: Exploded View".
- 3. Remove drive shaft from final drive with a power tool. Then suspend it by wire, etc. Refer to <a href="RAX-11">RAX-11</a>. <a href=""">"Exploded View"</a>.
- Install attachment (A) [SST: KV40104100 ( )] to side flange, and then pull out the side flange with the sliding hammer (B) [SST: ST36230000 (J-25840-A)].


NOTE:

Circular clip installation position: Final drive side

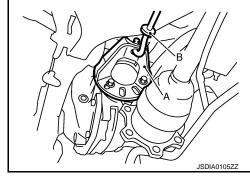


Remove side oil seal, using a suitable tool. CAUTION:

Never damage gear carrier.

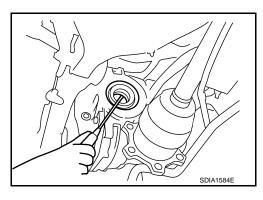


## **INSTALLATION**

- 1. Apply multi-purpose grease to side oil seal lips.
- Install side oil seal until it becomes flush with the case end, using the drift [SST: KV38100200 (J-26233)].
   CAUTION:
  - Never reuse oil seal.
  - . When installing, never incline oil seal.

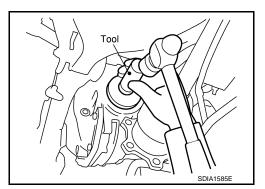

- 3. Install side flange with the following procedure.
- Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
- After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.

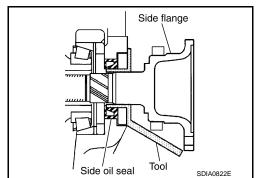

c. Put a suitable drift on the center of side flange, then drive it until sound changes.

Revision: 2010 March **DLN-157** 2009 EX35

DLN

Α

В

C

Е

F

G

Н

J

K

L

M

N

### [REAR FINAL DRIVE: R200]

#### NOTE


When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

d. Confirm that the dimension of the side flange (1) installation measurement (A) in the figure comes into the following.

### **Standard**

A : 326 – 328 mm (12.83 – 12.91 in)

- Install drive shaft. Refer to <u>RAX-11, "Exploded View"</u>.
- Install rear wheel sensor. Refer to <u>BRC-108</u>, "<u>FRONT WHEEL SENSOR</u>: <u>Exploded View</u>".
- 6. Install center muffler. Refer to EX-5, "Exploded View".
- 7. When oil leaks while removing, check oil level after the installation. Refer to <u>DLN-144</u>, "Inspection".

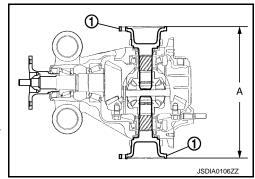

INFOID:0000000004345381

**AWD** 

AWD: Exploded View

**26** SEC. 380 (12)★ 44 (4.5, 32) ®₩7 **(3.6, 26)** 93 (9.5, 69) 29 🕄 **25** ⅎ (35 (3.6, 26) 93 (9.5, 69) ®₿ ®₩7 (12)★ **②**(**B**: **□**) **⑨₩** 78.5 (8.0, 58) ⑥ **※** ↑ (A): **5** ★ 147 - 323 (15 - 32, 109 - 238) 3 🔀 🖺 (A) 🗺 ⑥**ૄ ૄ** (♠: 🚾 **④€**7 (7) JSDIA0027GB

- 1. Drive pinion lock nut
- Pinion front bearing
- 7. Side flange
- 10. Pinion height adjusting washer
- 13. Side bearing
- 16. Side gear
- 19. Pinion mate thrust washer
- 22. Differential case

- 2. Companion flange
- 5. Gear carrier
- Collapsible spacer
- 11. Drive pinion
- 14. Side gear thrust washer
- 17. Lock pin
- 20. Pinion mate shaft
- 23. Bearing cap

- 3. Front oil seal
- 6. Side oil seal
- 9. Pinion rear bearing
- 12. Side bearing adjusting washer
- 15. Circular clip
- 18. Pinion mate gear
- 21. Drive gear
- 24. Filler plug

# SIDE OIL SEAL

# < REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

25. Gasket 26. Rear cover

A. Oil seal lip B. Screw hole 27. Drain plug

C. For the tightening torque, refer to DLN-180, "AWD: Assembly".

В

Α

: Apply gear oil.

★: Apply anti-corrosion oil.

Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

(C): Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17. "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

DLN

# AWD: Removal and Installation

INFOID:0000000004345382

### REMOVAL

1. Remove center muffler with a power tool. Refer to EX-5, "Exploded View".


Remove rear wheel sensor. Refer to BRC-108, "FRONT WHEEL SENSOR: Exploded View".

3. Remove drive shaft from final drive with a power tool. Then suspend it by wire, etc. Refer to RAX-11. "Exploded View".

4. Install attachment (A) [SST: KV40104100 ( — )] to side flange, and then pull out the side flange with the sliding hammer (B) [SST: ST36230000 (J-25840-A)].


NOTE:

Circular clip installation position: Final drive side

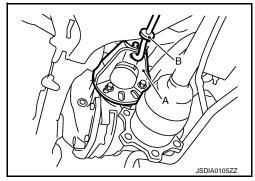

Remove side oil seal, using a suitable tool. **CAUTION:** 

Never damage gear carrier.

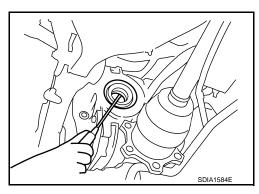


### INSTALLATION

- 1. Apply multi-purpose grease to side oil seal lips.
- 2. Install side oil seal until it becomes flush with the case end, using the drift [SST: KV38100200 (J-26233)].

**CAUTION:** 

- Never reuse oil seal.
- When installing, never incline oil seal.

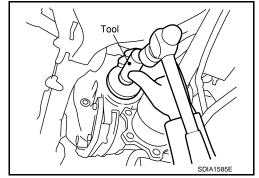

Е

F

Н

M

Ν

Р


**DLN-159** Revision: 2010 March 2009 EX35

# SIDE OIL SEAL

## < REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

- Install side flange with the following procedure.
- Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
- After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.

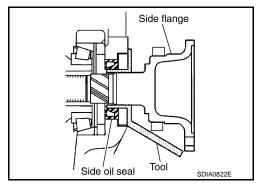

Put a suitable drift on the center of side flange, then drive it until sound changes.
 NOTE:


When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

d. Confirm that the dimension of the side flange installation measurement (A) in the figure comes into the following.

## **Standard**

A : 326 – 328 mm (12.83 – 12.91 in)

- 4. Install drive shaft. Refer to RAX-11, "Exploded View".
- Install rear wheel sensor. Refer to <u>BRC-108</u>, "<u>FRONT WHEEL SENSOR</u>: <u>Exploded View</u>".
- 6. Install center muffler. Refer to EX-5, "Exploded View".
- When oil leaks while removing, check oil level after the installation. Refer to <u>DLN-144</u>, "Inspection".

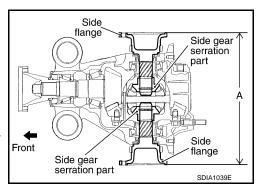

[REAR FINAL DRIVE: R200]


# UNIT REMOVAL AND INSTALLATION

# REAR FINAL DRIVE ASSEMBLY

2WD

2WD: Exploded View

INFOID:0000000004345383

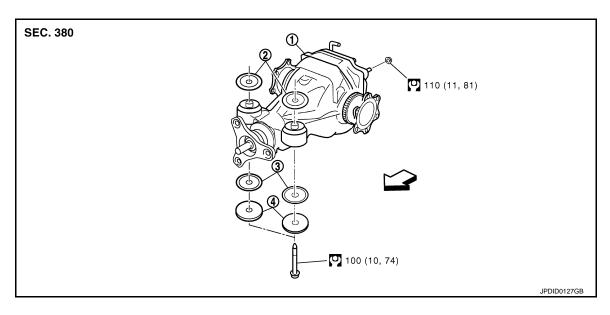

- Rear final drive assembly
- 2. Upper stopper

Lower stopper

Washer

⟨□: Vehicle front


Refer to GI-4, "Components" for symbols in the figure.

# 2WD: Removal and Installation

INFOID:00000000004345384

## **REMOVAL**

- 1. Remove center muffler with a power tool. Refer to EX-5, "Exploded View".
- Remove stabilizer bar with a power tool. Refer to RSU-16, "Exploded View".
- Remove rear propeller shaft from the final drive. Refer to <u>DLN-82</u>. "Exploded View".
- 4. Remove drive shaft from final drive with a power tool. Then suspend it by wire, etc. Refer to RAX-11, "Exploded View".
- Remove breather hose from the final drive.
- 6. Remove rear wheel sensor. Refer to BRC-108, "FRONT WHEEL SENSOR: Exploded View".

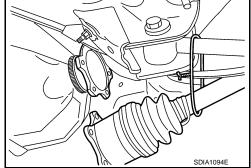

DLN

Α

В

Е

F

Н

L

M

Ν

## **REAR FINAL DRIVE ASSEMBLY**

## < UNIT REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]


Set a suitable jack to rear final drive assembly. CAUTION:

Never place a jack on the rear cover (aluminum case).

 Remove the mounting bolts and nuts connecting to the suspension member, and remove rear final drive assembly with a power tool.

### **CAUTION:**

Secure rear final drive assembly to a suitable jack while removing it.

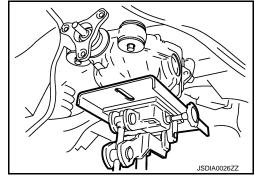

## **INSTALLATION**

Note the following, and installation is in the reverse order of removal.


• When installing breather hose (1), refer to the figure.

⟨
⇒: Vehicle front

## **CAUTION:**

Make sure there are no pinched or restricted areas on the breather hose caused by bending or winding when installing it.


- Insert the resin connector into rear suspension member (2). Install the metal connector (3) in rear cover so that a paint mark becomes forward of the vehicle as shown in the figure. Arrange the breather hose then to pass by over wheel sensor harness.
- When oil leaks while removing final drive assembly, check oil level after the installation. Refer to <a href="DLN-144">DLN-144</a>, "Inspection".

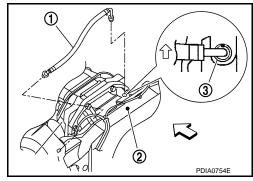

**AWD** 

AWD: Exploded View

INFOID:0000000004345385

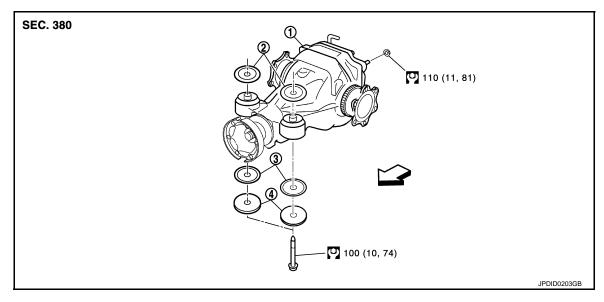

- 1. Rear final drive assembly
- Upper stopper

3. Lower stopper

1. Washer

: Vehicle front

Refer to GI-4, "Components" for symbols in the figure.

## AWD: Removal and Installation

INFOID:0000000004345386


REMOVAL

## **REAR FINAL DRIVE ASSEMBLY**

### < UNIT REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R200]

- 1. Remove center muffler with a power tool. Refer to EX-5. "Exploded View".
- 2. Remove stabilizer bar with a power tool. Refer to RSU-16, "Exploded View".
- Remove rear propeller shaft from the final drive. Refer to <u>DLN-82, "Exploded View"</u>.
- 4. Remove drive shaft from final drive with a power tool. Then suspend it by wire, etc. Refer to <a href="RAX-11">RAX-11</a>, "Exploded View".
- 5. Remove breather hose from the final drive.
- Remove rear wheel sensor. Refer to <u>BRC-108</u>, <u>"FRONT</u> WHEEL SENSOR: Exploded View".

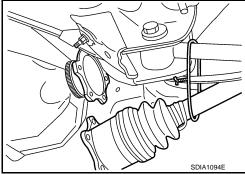

Set a suitable jack to rear final drive assembly.


### **CAUTION:**

Never place a jack on the rear cover (aluminum case).

Remove the mounting bolts and nuts connecting to the suspension member, and remove rear final drive assembly with a power tool.

### **CAUTION:**

Secure rear final drive assembly to a suitable jack while removing it.

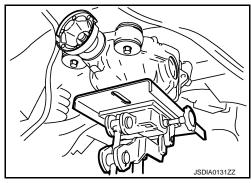

### **INSTALLATION**

Note the following, and installation is in the reverse order of removal.


• When installing breather hose (1), refer to the figure.

∵: Vehicle front

## **CAUTION:**

Make sure there are no pinched or restricted areas on the breather hose caused by bending or winding when installing it.

- Insert the resin connector into rear suspension member (2). Install the metal connector (3) in rear cover so that a paint mark becomes forward of the vehicle as shown in the figure. Arrange the breather hose then to pass by over wheel sensor harness.
- When oil leaks while removing final drive assembly, check oil level after the installation. Refer to <u>DLN-144</u>, "Inspection".

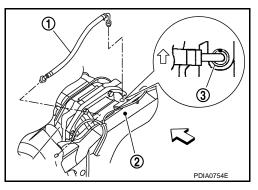

В

Α

DLN

F

G

Н

K

1

M

Ν

0


INFOID:0000000004345387

# UNIT DISASSEMBLY AND ASSEMBLY

# **DIFFERENTIAL ASSEMBLY**

2WD

2WD: Exploded View

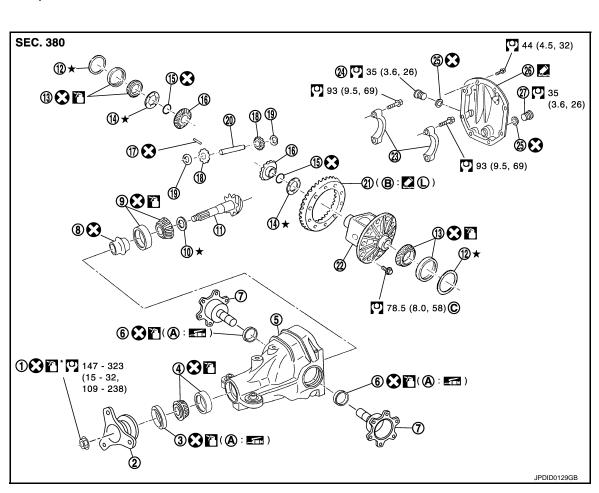

- 1. Drive pinion lock nut
- 4. Pinion front bearing
- 7. Side flange
- 10. Pinion height adjusting washer
- 13. Side bearing
- 16. Side gear
- 19. Pinion mate thrust washer
- 22. Differential case
- 25. Gasket
- A. Oil seal lip

- 2. Companion flange
- 5. Gear carrier
- 8. Collapsible spacer
- 11. Drive pinion
- 14. Side gear thrust washer
- 17. Lock pin
- 20. Pinion mate shaft
- 23. Bearing cap
- 26. Rear cover
- B. Screw hole

- 3. Front oil seal
- 6. Side oil seal
- 9. Pinion rear bearing
- 12. Side bearing adjusting washer
- 15. Circular clip
- 18. Pinion mate gear
- 21. Drive gear
- 24. Filler plug
- 27. Drain plug
- C. For the tightening torque, refer to <u>DLN-167, "2WD : Assembly"</u>.

- : Apply gear oil.
- Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".
- Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

# < UNIT DISASSEMBLY AND ASSEMBLY >


[REAR FINAL DRIVE: R200]

INFOID:0000000004345388


2WD : Disassembly

1. Drain gear oil, if necessary.

- 2. Remove side flange.
- 3. Remove rear cover mounting bolts.
- Remove rear cover to insert the seal cutter (A) [SST: KV10111100 (J-37228)] between gear carrier and rear cover. CAUTION:
  - Never damage the mating surface.
  - Never insert flat-bladed screwdriver, this may damage the mating surface.

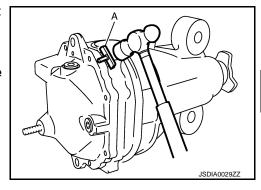


 Using two 45 mm (1.77 in) spacers, mount carrier on the attachment (A) [SST: KV38100800 (J-25604-01)].

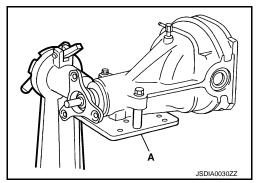


6. For proper reinstallation, paint matching marks on one side of the bearing cap.

## **CAUTION:**

- For matching marks, use paint. Never damage bearing caps and gear carrier.
- Bearing caps are manufactured as integral molding. Use the matching marks to them in their original positions.

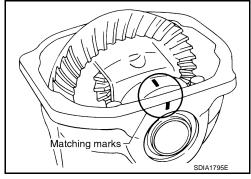

7. Remove bearing caps.

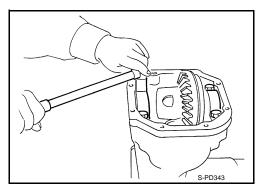

DLN

Α

В

Е

F

G

Н

J

K

L


M

Ν

0


[REAR FINAL DRIVE: R200]

8. Lift differential case assembly out with a suitable tool.

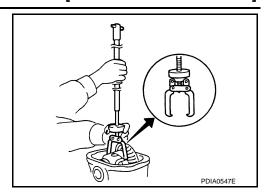

 Keep side bearing outer races together with inner race. Never mix them up.

Also, keep side bearing adjusting washers together with bearings.

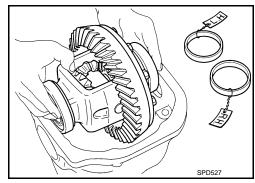


9. Remove side bearing inner race.

To prevent damage to bearing, engage puller jaws in groove  $(\clubsuit)$ .

A : Puller [SST: ST33051001 (J-22888-20)]
B : Base [SST: ST33061000 (J-8107-2)]

## **CAUTION:**

- To prevent damage to the side bearing and drive gear, place copper plates between these parts and vise.
- It is not necessary to remove side bearing inner race except when it is replaced.

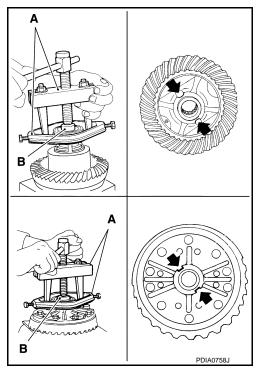


10. For proper reinstallation, paint matching marks on one differential case assembly.

### **CAUTION:**

For matching marks, use paint. Never damage differential case and drive gear.

- 11. Remove drive gear mounting bolts.
- 12. Tap drive gear off differential case assembly with a soft hammer. CAUTION:


Tap evenly all around to keep drive gear from bending.

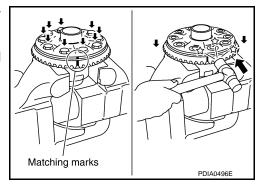


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

13. Remove lock pin of pinion mate shaft with a punch from drive gear side.

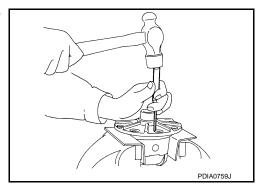


14. Remove pinion mate shaft.

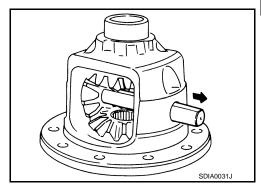

- 15. Turn pinion mate gear, then remove pinion mate gear, pinion mate thrust washer, side gear and side gear thrust washer from differential case.
- 16. Remove circular clip from side gear.

## **CAUTION:**

Never damage side gear.

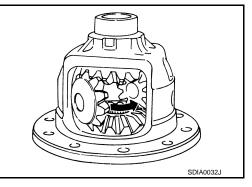

INFOID:0000000004345389


Install circular clip to side gear.

### **CAUTION:**

2WD: Assembly

## Never damage side gear.

2. Install side gear thrust washers with the same thickness as the ones installed prior to disassembly or reinstall the old ones on the side gears.

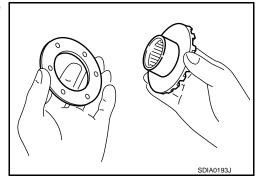

Α

В

С

DLN

Е

F

G

Н

J

- -

M

N

 $\circ$ 


# < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


Install side gears and thrust washers into differential case.
 CAUTION:

## Make sure that the circular clip is installed to side gears.


4. Align 2 pinion mate gears in diagonally opposite positions, then rotate and install them into differential case after installing thrust washer to pinion mate gear.

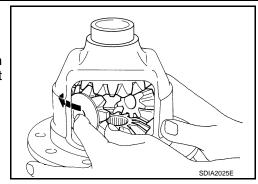

5. Align the lock pin holes on differential case with shaft, and install pinion mate shaft.

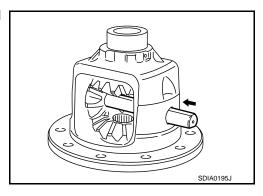

- 6. Measure side gear end play. If necessary, select the appropriate side gear thrust washers.
- a. Place differential case straight up so that side gear to be measured comes upward.

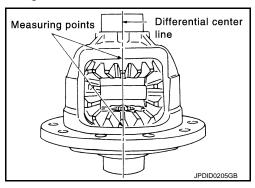

## < UNIT DISASSEMBLY AND ASSEMBLY >

## [REAR FINAL DRIVE: R200]

b. Using feeler gauge, measure the clearance between side gear back and differential case at 3 different points, while rotating side gear. Average the 3 readings, and then measure the clearance of the other side as well.

**Standard** 

Side gear back clearance

: Refer to <u>DLN-208</u>, "<u>Differ-ential Side Gear Clear-</u>

ance".

### **CAUTION:**

To prevent side gear from tilting, insert feeler gauges with the same thickness from both sides.

c. If the back clearance is outside the specification, use a thicker/thinner side gear thrust washer to adjust.

When the back clearance is large:

Use a thicker thrust wash-

When the back clearance is small:

Use a thinner thrust wash-


er.

## **CAUTION:**


Select a side gear thrust washer for right and left individually.

 Drive a lock pin into pinion mate shaft, using a punch. Make sure lock pin is flush with differential case. CAUTION:

Never reuse lock pin.

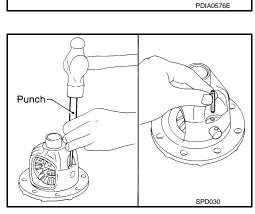

8. Align the matching mark of differential case with the mark of drive gear, then place drive gear.

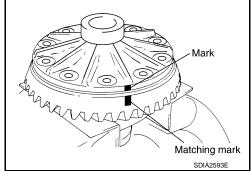


9. Apply thread locking sealant into the thread hole of drive gear.

 Use Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

## **CAUTION:**

Clean and degrease drive gear back and threaded holes sufficiently.

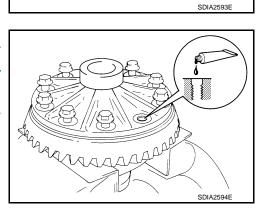

Feeler gauges with the same thickness

Feeler gauges with the same thickness

Α

В

С

DLN

\_

F

G

Н

J

K

L


M

Ν

0

[REAR FINAL DRIVE: R200]


- 10. Install drive gear on the mounting bolts. **CAUTION:** 
  - Tighten bolts in a crisscross fashion.
  - After tightening the bolts to the specified torque, tighten the bolts additionally by turning the bolts 31 to 36 degrees.

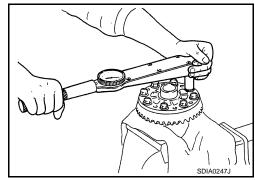


11. Press side bearing inner races to differential case, using the drift (A) [SST: KV38100300 (J-25523)] and the base (B) [SST: ST33061000 (J-8107-2)].

#### **CAUTION:**


Never reuse side bearing inner race.

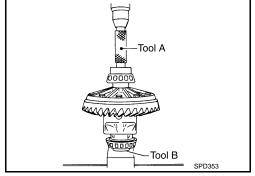


- 12. Install differential case assembly with side bearing outer races into gear carrier.
- 13. Measure side bearing preload. If necessary, select the appropriate side bearing adjusting washers. Refer to <a href="DLN-171">DLN-171</a>, "2WD : Adjustment".

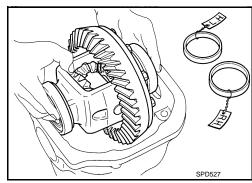

14. Insert selected left and right side bearing adjusting washers in place between side bearings and gear carrier. Refer to <u>DLN-171</u>, "2WD: Adjustment".

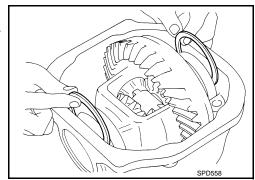

- 15. Align matching marks on bearing cap with that on gear carrier.
- 16. Install bearing caps and tighten bearing cap mounting bolts.

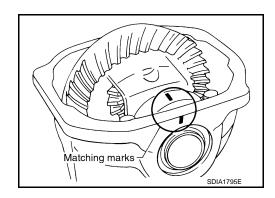

## < UNIT DISASSEMBLY AND ASSEMBLY >

17. Using the drift [SST: KV38100200 (J-26233)], drive side oil seals until it becomes flush with the case end.

### **CAUTION:**

- · Never reuse oil seal.
- . When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.
- 18. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and total preload torque. Refer to <u>DLN-171</u>, "2WD: Adjustment".


Recheck above items. Readjust the above description, if necessary.

- 19. Apply sealant (A) to mating surface of rear cover.
  - Use Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

## **CAUTION:**

Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.


20. Install rear cover on gear carrier and tighten mounting bolts.

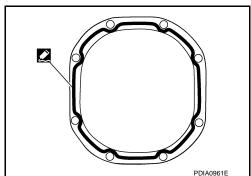

Tool

[REAR FINAL DRIVE: R200]

- Install side flange with the following procedure.
- a. Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
- After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.

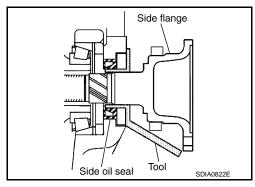


c. Put a suitable drift on the center of side flange, then drive it until sound changes.

When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

d. Confirm that the dimension of the side flange (1) installation measurement (A) in the figure comes into the following.

## **Standard**

A : 326 – 328 mm (12.83 – 12.91 in)

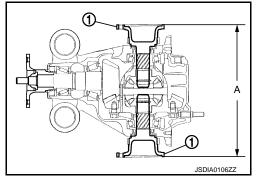

2WD : Adjustment

### INFOID:0000000004345390

## TOTAL PRELOAD TORQUE

Before inspection and adjustment, drain gear oil.

- Secure final drive assembly onto an attachment [SST: KV38100800 (J-25604-01)].
- 2. Remove side flanges.

Revision: 2010 March

**DLN-171** 2009 EX35

Α

В

C

SPD560

DLN

Е

F

G

Н

J

K

M

Ν

O

P

# < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

JSDIA003177

3. Rotate drive pinion back and forth 2 to 3 times to check for unusual noise and rotation malfunction.

 Rotate drive pinion at least 20 times to check for smooth operation of the bearing.

5. Measure total preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

**Standard** 

Total preload torque : Refer to <u>DLN-208, "Pre-</u>

load Torque".



Total preload torque = Pinion bearing preload torque + Side bearing preload torque

• If measured value is out of the specification, disassemble it to check and adjust each part. Adjust the pinion bearing preload and side bearing preload.

Adjust the pinion bearing preload first, then adjust the side bearing preload.

When the preload torque is large

On pinion bearings: Replace the collapsible spacer.

On side bearings: Use thinner side bearing adjusting washers by the same amount to

each side.

When the preload is small

On pinion bearings: Tighten the drive pinion lock nut.


On side bearings: Use thicker side bearing adjusting washers by the same amount to

each side.


### SIDE BEARING PRELOAD

Before inspection and adjustment, drain gear oil.

- Remove rear cover. Refer to <u>DLN-165, "2WD : Disassembly"</u>.
- 2. Make sure all parts are clean. Also, make sure the bearings are well lubricated with gear oil.
- 3. Place the differential case, with side bearings and bearing races installed, into gear carrier.

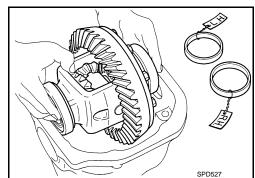

4. Insert left and right original side bearing adjusting washers in place between side bearings and gear carrier.

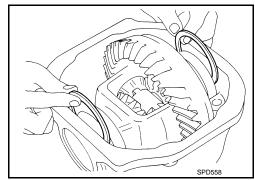

# < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

Α

В


DLN

F

Н

Install bearing caps in their correct locations and tighten bearing cap mounting bolts.

Turn the carrier several times to seat the bearings.

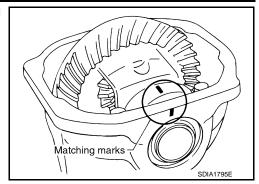


7. Measure the turning torque of the carrier at the drive gear mounting bolts with a spring gauge [SST: — (J-8129)].

**Standard** 

**Specification** : 34.2 - 39.2 N (3.5 - 4.0 kg)7.7 - 8.8 lb) of pulling force

at the drive gear bolt

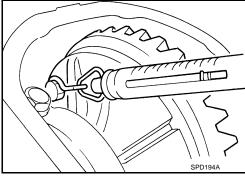

If the turning torque is outside the specification, use a thicker/ thinner side bearing adjusting washer to adjust.

> If the turning torque is less Use a thicker thrust washthan the specified range:

> If the turning torque is Use a thinner thrust washgreater than the specifica-

tion:

## CAUTION:

Select a side bearing adjusting washer for right and left individually.

Record the total amount of washer thickness required for the correct carrier side bearing preload.

## DRIVE GEAR RUNOUT

- 1. Remove rear cover. Refer to <u>DLN-165</u>, "2WD: <u>Disassembly"</u>.
- 2. Fit a dial indicator to the drive gear back face.
- Rotate the drive gear to measure runout.

Limit

**Drive gear runout** : Refer to DLN-208, "Drive Gear Runout".

• If the runout is outside of the repair limit, check drive gear assembly condition; foreign material may be caught between drive gear and differential case, or differential case or drive gear may be deformed, etc.


**CAUTION:** 


Replace drive gear and drive pinion gear as a set.

### TOOTH CONTACT

Before inspection and adjustment, drain gear oil.

Remove rear cover. Refer to DLN-165, "2WD: Disassembly".

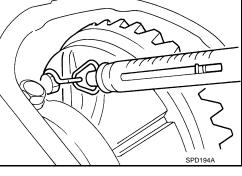

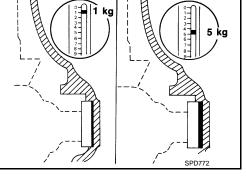

M

K

Ν

SPD886


# < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

2. Apply red lead to drive gear.

# **CAUTION:**


Apply red lead to both the faces of 3 to 4 gears at 4 locations evenly spaced on drive gear.

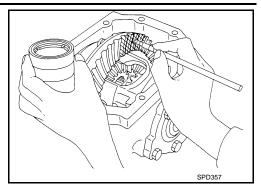

3. Rotate drive gear back and forth several times, check drive pinion gear to drive gear tooth contact.

# **CAUTION:**

Check tooth contact on drive side and reverse side.

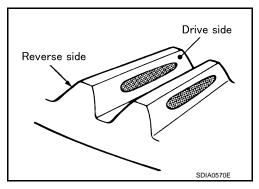


Tooth contact condition		Pinion height adjusting		Adjustment	Possible cause		
Drive si	de	Back side		washer selection valve [ mm (in) ]		(Yes/No)	Possible cause
Heel side	Toe side	Toe side Hee	el side	Thicker	+0.09 (+0.0035)	Yes	Occurrence of noise and scoring sound in all speed ranges.
		Calling	\		+0.06 (+0.0024)		Occurrence of noise when accelerating.
<b></b>			\		+0.03 (+0.0012)	No	_
			\		0		
7			\		-0.03 (-0.0012)		
***	<b>&gt;</b>		\		-0.06 (-0.0024)	Yes	Occurrence of noise at constant speed and decreasing speed.
	<b>*****</b>		\		-0.09 (-0.0035)	Yes	Occurrence of noise and scoring sound in all speed ranges.

SDIA0207E


# < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


4. If tooth contact is improperly adjusted, follow the procedure below to adjust the pinion height [dimension (X)].

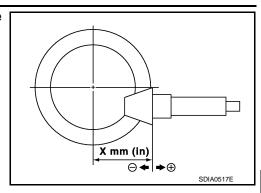

 If the tooth contact is near the face (face contact), or near the heel (heel contact), thicken pinion height adjusting washers to move drive pinion closer to drive gear.

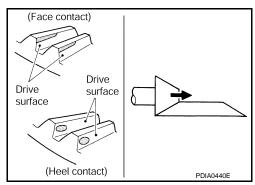

• If the tooth contact is near the flank (flank contact), or near the toe (toe contact), thin pinion height adjusting washers to move drive pinion farther from drive gear.

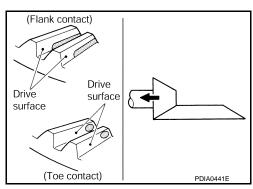

### **BACKLASH**

Before inspection and adjustment, drain gear oil.

- 1. Remove rear cover. Refer to <u>DLN-165</u>, "2WD : <u>Disassembly"</u>.
- Fit a dial indicator to the drive gear face to measure the backlash.

**Standard** 

**Backlash** 

: Refer to <u>DLN-208, "Back-lash".</u>

• If the backlash is outside of the specified value, change the thickness of side bearing adjusting washer.



Make drive gear back side adjusting washer thicker, and drive gear tooth side adjusting washer thinner by the same amount.

When the backlash is small:

Make drive gear back side adjusting washer thinner, and drive gear tooth side adjusting washer thicker by the same amount.



Α

В

С

DLN

Е

F

G

Н

J

K

M

Ν

0

### < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

### **CAUTION:**

Never change the total amount of washers as it changes the bearing preload.

# 2WD: Inspection After Disassembly

INFOID:0000000004345391

## DRIVE GEAR AND DRIVE PINION

- · Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

### **BEARING**

- · Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

## SIDE GEAR AND PINION MATE GEAR

- · Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

### SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- · Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

### OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

### DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

# **COMPANION FLANGE**

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

### AWD

AWD: Exploded View

INFOID:0000000004345392

Α

В

DLN


F

Н

K

L

M

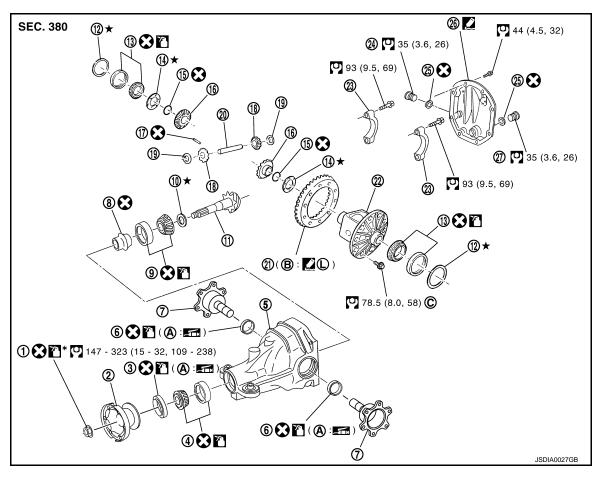

- Drive pinion lock nut
- Pinion front bearing 4.
- 7. Side flange
- 10. Pinion height adjusting washer
- 13. Side bearing
- Side gear 16.
- 19. Pinion mate thrust washer
- 22. Differential case
- 25. Gasket
- Oil seal lip

- 2. Companion flange
- 5. Gear carrier
- Collapsible spacer
- Drive pinion 11.
- 14. Side gear thrust washer
- 17. Lock pin
- 20. Pinion mate shaft
- 23. Bearing cap
- 26. Rear cover
- B. Screw hole

- Side oil seal 6.
- 9. Pinion rear bearing
- 12. Side bearing adjusting washer
- Circular clip 15.
- Pinion mate gear 18.

: Apply gear oil.

\*: Apply anti-corrosion oil.

- Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".
- (2): Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

# AWD : Disassembly

- 1. Drain gear oil, if necessary.
- Remove side flange. 2.

3. Front oil seal

- 21. Drive gear
- 24. Filler plug
- 27. Drain plug
- For the tightening torque, refer to DLN-180, "AWD: Assembly".

INFOID:0000000004345393


2009 EX35

Ν


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

- Remove rear cover mounting bolts.
- 4. Remove rear cover to insert the seal cutter (A) [SST: KV10111100 (J-37228)] between gear carrier and rear cover. CAUTION:
  - Never damage the mating surface.
  - Never insert flat-bladed screwdriver, this may damage the mating surface.

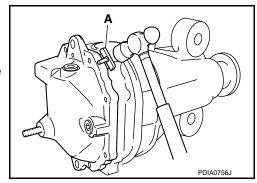


5. Using two 45 mm (1.77 in) spacers, mount carrier on the attachment (A) [SST: KV38100800 (J-25604-01)].

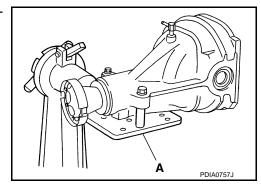


6. For proper reinstallation, paint matching marks on one side of the bearing cap.

### **CAUTION:**

- For matching marks, use paint. Never damage bearing caps and gear carrier.
- Bearing caps are manufactured as integral molding. Use the matching marks to them in their original positions.

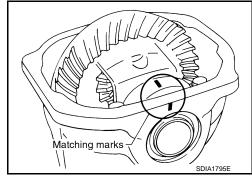


7. Remove bearing caps.

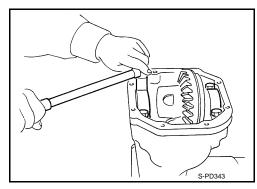

## < UNIT DISASSEMBLY AND ASSEMBLY >


[REAR FINAL DRIVE: R200]

8. Lift differential case assembly out with a suitable tool.

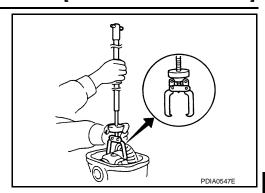

 Keep side bearing outer races together with inner race. Never mix them up.

Also, keep side bearing adjusting washers together with bearings.

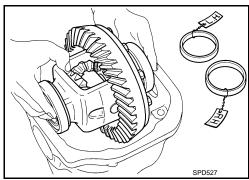


9. Remove side bearing inner race.

To prevent damage to bearing, engage puller jaws in groove (\(\llime\)).

A : Puller [SST: ST33051001 (J-22888-20)]
B : Base [SST: ST33061000 (J-8107-2)]

## **CAUTION:**

- To prevent damage to the side bearing and drive gear, place copper plates between these parts and vise.
- It is not necessary to remove side bearing inner race except when it is replaced.

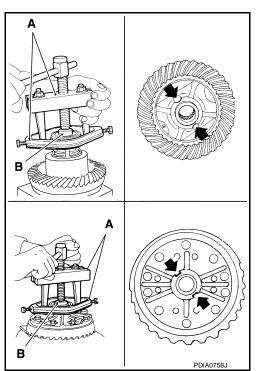


10. For proper reinstallation, paint matching marks on one differential case assembly.

### **CAUTION:**

For matching marks, use paint. Never damage differential case and drive gear.

- 11. Remove drive gear mounting bolts.
- 12. Tap drive gear off differential case assembly with a soft hammer. CAUTION:

Tap evenly all around to keep drive gear from bending.

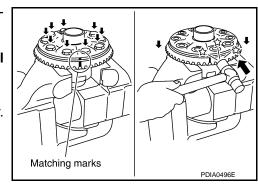

Α

В

С

DLN

Е

F

G

Н

I

J

Κ

L

M

Ν


0

Ρ


# < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

13. Remove lock pin of pinion mate shaft with a punch from drive gear side.

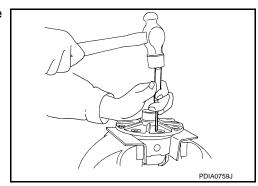


14. Remove pinion mate shaft.

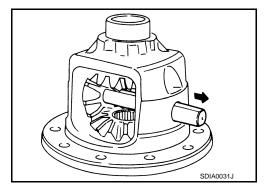

- 15. Turn pinion mate gear, then remove pinion mate gear, pinion mate thrust washer, side gear and side gear thrust washer from differential case.
- 16. Remove circular clip from side gear.

## **CAUTION:**

Never damage side gear.

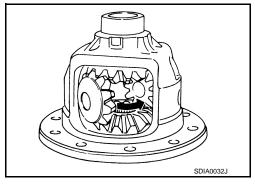


AWD: Assembly

1. Install circular clip to side gear.

## **CAUTION:**

## Never damage side gear.

2. Install side gear thrust washers with the same thickness as the ones installed prior to disassembly or reinstall the old ones on the side gears.

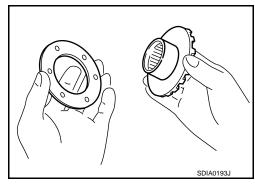


## < UNIT DISASSEMBLY AND ASSEMBLY >

#### [REAR FINAL DRIVE: R200]


Install side gears and thrust washers into differential case. CAUTION:

Make sure that the circular clip is installed to side gears.


4. Align 2 pinion mate gears in diagonally opposite positions, then rotate and install them into differential case after installing thrust washer to pinion mate gear.

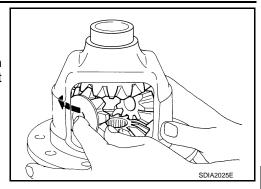

5. Align the lock pin holes on differential case with shaft, and install pinion mate shaft.

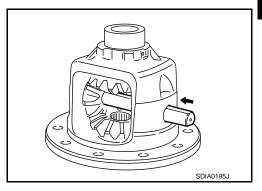

- 6. Measure side gear end play. If necessary, select the appropriate side gear thrust washers.
- a. Place differential case straight up so that side gear to be measured comes upward.

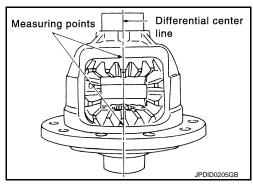

С

В

Α

DLN

Е

F

G

Н

J

K

M

Ν

0

## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

b. Using feeler gauge, measure the clearance between side gear back and differential case at 3 different points, while rotating side gear. Average the 3 readings, and then measure the clearance of the other side as well.

**Standard** 

Side gear back clearance : Refer to <u>DLN-208, "Differ-</u>

ential Side Gear Clear-

ance".

#### **CAUTION:**

To prevent side gear from tilting, insert feeler gauges with the same thickness from both sides.

c. If the back clearance is outside the specification, use a thicker/thinner side gear thrust washer to adjust.

When the back clearance

When the back clearance

Use a thicker thrust wash-

is large:

Use a thinner thrust wash-

is small:


er.

#### **CAUTION:**


Select a side gear thrust washer for right and left individually.

 Drive a lock pin into pinion mate shaft, using a punch. Make sure lock pin is flush with differential case. CAUTION:

Never reuse lock pin.

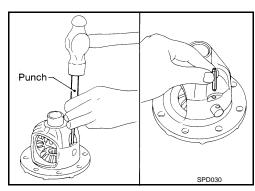


Align the matching mark of differential case with the mark of drive gear, then place drive gear.

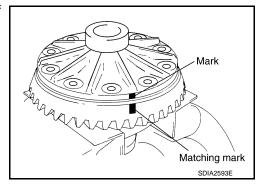


- 9. Apply thread locking sealant into the thread hole of drive gear.
  - Use Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

#### **CAUTION:**

Clean and degrease drive gear back and threaded holes sufficiently.

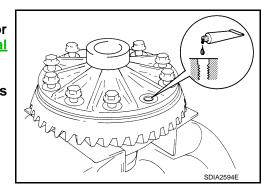


- 10. Install drive gear on the mounting bolts. **CAUTION:** 
  - Tighten bolts in a crisscross fashion.
  - After tightening the bolts to the specified torque, tighten the bolts additionally by turning the bolts 31 to 36 degrees.

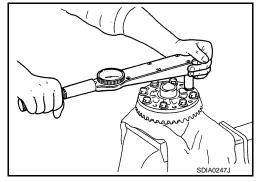

11. Press side bearing inner races to differential case, using the drift (A) [SST: KV38100300 (J-25523)] and the base (B) [SST: ST33061000 (J-8107-2)].


#### **CAUTION:**

Never reuse side bearing inner race.

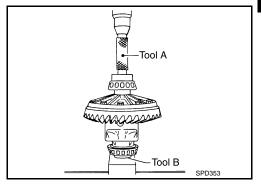


12. Install differential case assembly with side bearing outer races into gear carrier.

13. Measure side bearing preload. If necessary, select the appropriate side bearing adjusting washers. Refer to <a href="DLN-184">DLN-184</a>, "AWD : Adjustment".

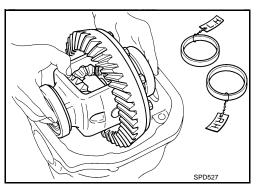


14. Insert selected left and right side bearing adjusting washers in place between side bearings and gear carrier. Refer to <u>DLN-184</u>, "AWD: Adjustment".

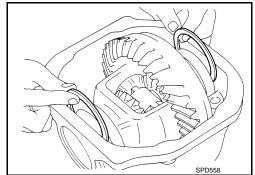

15. Align matching marks on bearing cap with that on gear carrier.

16. Install bearing caps and tighten bearing cap mounting bolts.

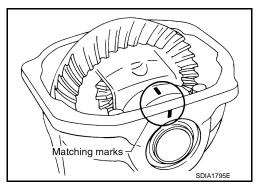

Α

В

DLN

Е

F

G

Н

J

L

M

Ν

0

Р

Revision: 2010 March **DLN-183** 2009 EX35

#### < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

17. Using the drift (A) [SST: KV38100200 (J-26233)], drive side oil seals until it becomes flush with the case end.

#### **CAUTION:**

- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.
- 18. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and total preload torque. Refer to <u>DLN-184</u>, "AWD: Adjustment".

Recheck above items. Readjust the above description, if necessary.





• Use Genuine Silicone RTV or equivalent. Refer to <u>GI-17</u>, <u>"Recommended Chemical Products and Sealants"</u>.

#### **CAUTION:**


Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.

20. Install rear cover on gear carrier and tighten mounting bolts.

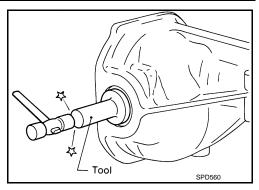

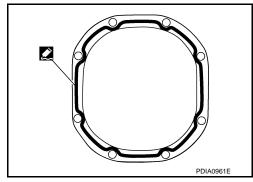

- 21. Install side flange with the following procedure.
- Attach the protector [SST: KV38107900 (J-39352)] to side oil seal.
- b. After the side flange is inserted and the serrated part of side gear has engaged the serrated part of flange, remove the protector.

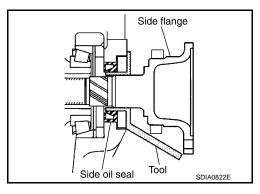


c. Put a suitable drift on the center of side flange, then drive it until sound changes.

When installation is completed, driving sound of the side flange turns into a sound that seems to affect the whole final drive.

d. Confirm that the dimension of the side flange installation measurement (A) in the figure comes into the following.

#### **Standard**

A : 326 – 328 mm (12.83 – 12.91 in)

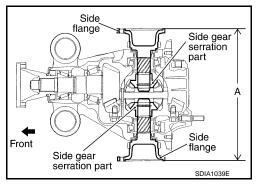

AWD: Adjustment

#### TOTAL PRELOAD TORQUE

Before inspection and adjustment, drain gear oil.

- Secure final drive assembly onto an attachment [SST: KV38100800 (J-25604-01)].
- Remove side flanges.

#### < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

3. Rotate drive pinion back and forth 2 to 3 times to check for unusual noise and rotation malfunction.

4. Rotate drive pinion at least 20 times to check for smooth operation of the bearing.

5. Measure total preload with the preload gauge (A) [SST: ST3127S000 (J-25765-A)].

**Standard** 

Total preload torque : Refer to <u>DLN-208, "Pre-</u>

load Torque".

#### NOTE:

Total preload torque = Pinion bearing preload torque + Side bearing preload torque

• If measured value is out of the specification, disassemble it to check and adjust each part. Adjust the pinion bearing preload and side bearing preload.

Adjust the pinion bearing preload first, then adjust the side bearing preload.

When the preload torque is large

On pinion bearings: Replace the collapsible spacer.

On side bearings: Use thinner side bearing adjusting washers by the same amount to

each side.

When the preload is small

On pinion bearings: Tighten the drive pinion lock nut.

On side bearings: Use thicker side bearing adjusting washers by the same amount to

each side.


#### SIDE BEARING PRELOAD

Before inspection and adjustment, drain gear oil.


1. Remove rear cover. Refer to <a href="DLN-177">DLN-177</a>, "AWD : Disassembly".

Make sure all parts are clean. Also, make sure the bearings are well lubricated with gear oil.

3. Place the differential case, with side bearings and bearing races installed, into gear carrier.

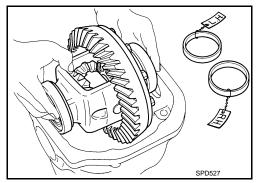

4. Insert left and right original side bearing adjusting washers in place between side bearings and gear carrier.

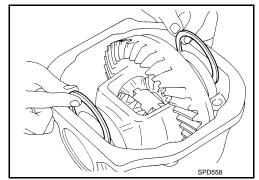

B C

Α

DLN

PDIA0766J

F

Е

0

Н

J

K

M


Ν

0

## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

- Install bearing caps in their correct locations and tighten bearing cap mounting bolts.
- Turn the carrier several times to seat the bearings.

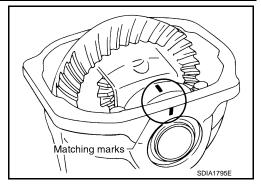


7. Measure the turning torque of the carrier at the drive gear mounting bolts with a spring gauge [SST: — (J-8129)].

**Standard** 

**Specification** 

: 34.2 – 39.2 N (3.5 – 4.0 kg, 7.7 – 8.8 lb) of pulling force at the drive gear bolt

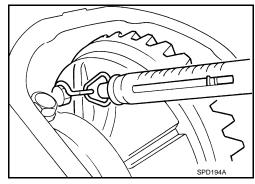

8. If the turning torque is outside the specification, use a thicker/ thinner side bearing adjusting washer to adjust.

If the turning torque is less than the specified range:

Use a thicker thrust washer.

If the turning torque is greater than the specifica-

Use a thinner thrust wash-

tion:

#### **CAUTION:**

Select a side bearing adjusting washer for right and left individually.

9. Record the total amount of washer thickness required for the correct carrier side bearing preload.

#### **DRIVE GEAR RUNOUT**

- 1. Remove rear cover. Refer to <u>DLN-177</u>, "AWD : <u>Disassembly"</u>.
- 2. Fit a dial indicator to the drive gear back face.
- 3. Rotate the drive gear to measure runout.

Limit

**Drive gear runout** 

: Refer to <u>DLN-208, "Drive</u>

Gear Runout".

 If the runout is outside of the repair limit, check drive gear assembly condition; foreign material may be caught between drive gear and differential case, or differential case or drive gear may be deformed, etc.


**CAUTION:** 

Replace drive gear and drive pinion gear as a set.

#### TOOTH CONTACT

Before inspection and adjustment, drain gear oil.

1. Remove rear cover. Refer to <u>DLN-177, "AWD : Disassembly"</u>.

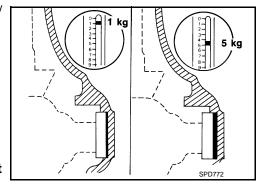


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

2. Apply red lead to drive gear.

#### **CAUTION:**


Apply red lead to both the faces of 3 to 4 gears at 4 locations evenly spaced on drive gear.

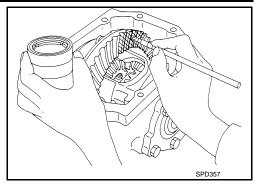

3. Rotate drive gear back and forth several times, check drive pinion gear to drive gear tooth contact.

## **CAUTION:**

Check tooth contact on drive side and reverse side.

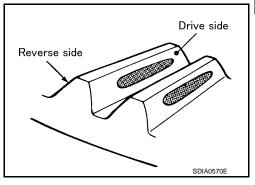

Tooth contact condition		Pinion height adjusting washer selection valve [ mm (in) ]		Adjustment (Yes/No)	Possible cause	
Drive side Back side						
Heel side To	e side	Toe side Heel side	† Thicker	+0.09 (+0.0035)	Yes	Occurrence of noise and scoring sound in all speed ranges.
		(discontinue)		+0.06 (+0.0024)		Occurrence of noise when accelerating.
	1			+0.03 (+0.0012)		
	l			0	No	-
	1			-0.03 (-0.0012)		
****	)		Thinner	-0.06 (-0.0024)	Yes	Occurrence of noise at constant speed and decreasing speed.
	) 			-0.09 (-0.0035)		Occurrence of noise and scoring sound in all speed ranges.

SDIA0207E

Revision: 2010 March **DLN-187** 2009 EX35

Α

В

С

DLN

Е

F

G

Н

0


K

M


0

Ν


4. If tooth contact is improperly adjusted, follow the procedure below to adjust the pinion height [dimension (X)].

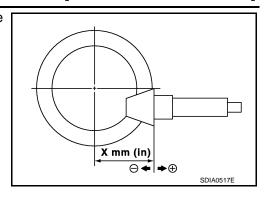

• If the tooth contact is near the face (face contact), or near the heel (heel contact), thicken pinion height adjusting washers to move drive pinion closer to drive gear.

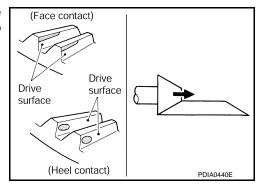

 If the tooth contact is near the flank (flank contact), or near the toe (toe contact), thin pinion height adjusting washers to move drive pinion farther from drive gear.

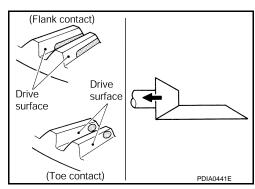

#### **BACKLASH**

Before inspection and adjustment, drain gear oil.

- 1. Remove rear cover. Refer to <u>DLN-177</u>, "AWD : <u>Disassembly"</u>.
- 2. Fit a dial indicator to the drive gear face to measure the backlash.

**Standard** 

Backlash : Refer to <u>DLN-208, "Backlash".</u>

• If the backlash is outside of the specified value, change the thickness of side bearing adjusting washer.



Make drive gear back side adjusting washer thicker, and drive gear tooth side adjusting washer thinner by the same amount.

When the backlash is small:

Make drive gear back side adjusting washer thinner, and drive gear tooth side adjusting washer thicker by the same amount.



#### < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

#### **CAUTION:**

Never change the total amount of washers as it changes the bearing preload.

## AWD: Inspection After Disassembly

INFOID:0000000004345396

#### DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

#### **BEARING**

Clean up the disassembled parts.

• If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

#### SIDE GEAR AND PINION MATE GEAR

- · Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

#### SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

#### OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

#### DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

#### **COMPANION FLANGE**

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

DLN

Α

В

F

Е

Н

J.

K

L


Ν

U

2WD

2WD: Exploded View

INFOID:0000000004345397

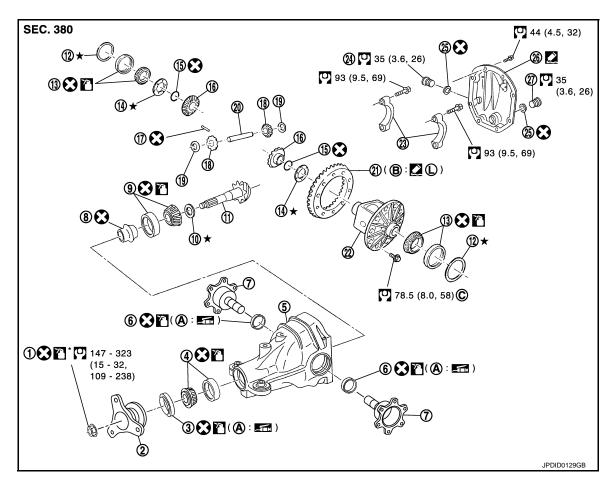

- 1. Drive pinion lock nut
- 4. Pinion front bearing
- 7. Side flange
- 10. Pinion height adjusting washer
- 13. Side bearing
- 16. Side gear
- 19. Pinion mate thrust washer
- 22. Differential case
- 25. Gasket
- A. Oil seal lip

- 2. Companion flange
- 5. Gear carrier
- Collapsible spacer
- 11. Drive pinion
- 14. Side gear thrust washer
- 17. Lock pin
- 20. Pinion mate shaft
- 23. Bearing cap
- 26. Rear cover
- B. Screw hole

- 3. Front oil seal
- 6. Side oil seal
- 9. Pinion rear bearing
- 12. Side bearing adjusting washer
- 15. Circular clip
- 18. Pinion mate gear
- 21. Drive gear
- 24. Filler plug
- 27. Drain plug
- C. For the tightening torque, refer to DLN-167, "2WD: Assembly".

- Apply gear oil.
- \*: Apply anti-corrosion oil.
- Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".
- Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants"

Refer to GI-4, "Components" for symbols not described above.


2WD: Disassembly

[REAR FINAL DRIVE: R200]

INFOID:0000000004345398

Remove differential case assembly. Refer to <u>DLN-165, "2WD: Disassembly"</u>.

2. Remove drive pinion lock nut with the flange wrench.

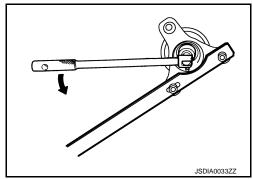

3. Put matching mark (B) on the end of drive pinion. The matching mark should be in line with the matching mark (A) on companion flange (1).

#### **CAUTION:**


For matching mark, use paint. Never damage companion flange and drive pinion.


#### NOTE:

The matching mark on the final drive companion flange indicates the maximum vertical runout position.

When replacing companion flange, matching mark is not necessary.

4. Remove companion flange using the suitable pullers.

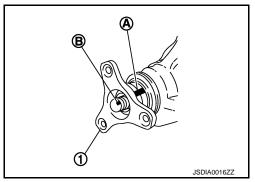


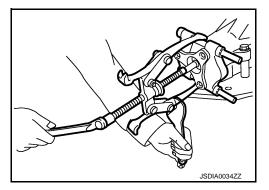

Press drive pinion assembly out of gear carrier. CAUTION:

## Never drop drive pinion assembly.

- 6. Remove front oil seal.
- 7. Remove side oil seal.
- 8. Remove pinion front bearing inner race.
- 9. Remove collapsible spacer.

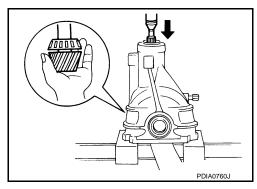

В

Α

DLN

Н

.1

K

L

M

Ν


0

Ρ

#### < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


10. Remove pinion rear bearing inner race and pinion height adjusting washer with the replacer (A) (commercial service tool).

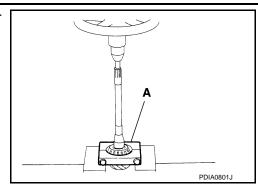

11. Tap pinion front/rear bearing outer races uniformly using a brass rod or equivalent to remove them.

## **CAUTION:**

Never damage gear carrier.

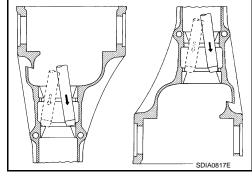

2WD: Assembly

 Install front bearing outer race (1) and rear bearing outer race (2) using drifts.

A : Drift [SST: ST30720000 (J-25405)]


B : Drift [SST: KV40105230 (  $\,-\,$  )]

C : Drift bar [SST: ST30611000 (J-25742-1)]

D : Drift [SST: ST30613000 (J-25742-3)]

#### **CAUTION:**

- At first, using a hammer, tap bearing outer race until it becomes flat to gear carrier.
- Never reuse pinion front and rear bearing outer race.
- 2. Select drive pinion height adjusting washer. Refer to <u>DLN-194</u>, "2WD : Adjustment".

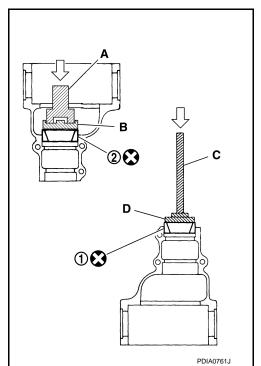


#### < UNIT DISASSEMBLY AND ASSEMBLY >

3. Install selected drive pinion height adjusting washer (2) to drive pinion. Press pinion rear bearing inner race (1) to it, using drift (A) [SST: ST30901000 (J-26010-01)].

#### **CAUTION:**

- Be careful of the direction of pinion height adjusting washer. (Assemble as shown in the figure.)
- Never reuse pinion rear bearing inner race.

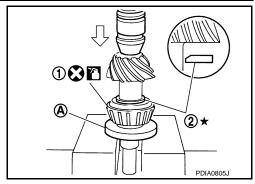

Collapsible spacer

Pinion front bearing inner race

[REAR FINAL DRIVE: R200]

4. Assemble collapsible spacer to drive pinion.


#### **CAUTION:**

Never reuse collapsible spacer.

- Apply gear oil to pinion rear bearing, and assemble drive pinion into gear carrier.
- Apply gear oil to pinion front bearing, and assemble pinion front bearing inner race to drive pinion assembly. CAUTION:

Never reuse pinion front bearing inner race.


7. Using suitable spacer (A), press the pinion front bearing inner race to drive pinion as far as drive pinion nut can be tightened.

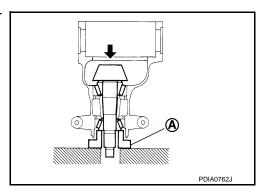

8. Using the drift (A) [SST: ST30720000 (J-25405)], install front oil seal as shown in figure.

#### **CAUTION:**


- · Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

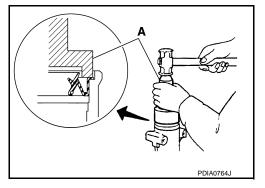

9. Install companion flange (1).

#### NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange (1).

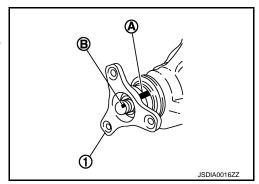

DLN

Α

В

Е

Drive pinion

Pinion rear bearing

inner race 💢 🏠

PDIA0492E

F

G

Н

|

L

M

N

0

#### < UNIT DISASSEMBLY AND ASSEMBLY >

10. Apply anti-corrosion oil to the thread and seat of drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive

#### **CAUTION:**

pinion.

#### Never reuse drive pinion lock nut.

11. Adjust to the drive pinion lock nut tightening torque and pinion bearing preload torque.

A : Preload gauge [SST: ST3127S000 (J-25765-A)]

#### **Standard**

Pinion bearing preload : Refer to <u>DLN-208, "Preload Torque".</u>

#### **CAUTION:**

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- If the preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Never loosen drive pinion lock nut to adjust the preload torque.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.
- 12. Install differential case assembly. Refer to <u>DLN-167, "2WD : Assembly"</u>.



#### Never install rear cover at this timing.


- 13. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and companion flange runout. Refer to <a href="DLN-171">DLN-171</a>, "2WD : Adjustment" and <a href="DLN-194">DLN-194</a>, "2WD : Adjustment". Recheck above items. Readjust the above description, if necessary.
- 14. Check total preload torque. Refer to <u>DLN-171, "2WD: Adjustment"</u>.
- 15. Install rear cover. Refer to <a href="DLN-167">DLN-167</a>, "2WD : Assembly".


## 2WD : Adjustment

## INFOID:0000000004345400

## PINION GEAR HEIGHT

- Make sure all parts are clean and that the bearings are well lubricated.
- 2. Assemble the pinion gear bearings into the differential shim selector tool [SST: (J-34309)].

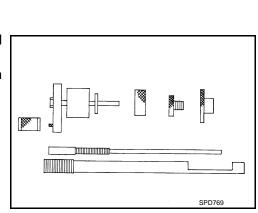

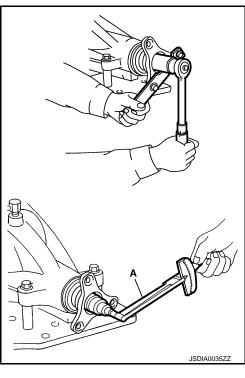



[REAR FINAL DRIVE: R200]

## < UNIT DISASSEMBLY AND ASSEMBLY >


## [REAR FINAL DRIVE: R200]

- **Pinion front bearing**; make sure the J-34309-3 pinion front bearing seat is secured tightly against the J-34309-2 gauge anvil. Then turn the pinion front bearing pilot, J-34309-5, to secure the bearing in its proper position.
- **Pinion rear bearing**; the pinion rear bearing pilot, J-34309-8, is used to center the pinion rear bearing only. The pinion rear bearing locking seat, J-34309-4, is used to lock the bearing to the assembly.
- Installation of J-34309-9 and J-34309-16; place a suitable 2.5 mm (0.098 in) thick plain washer between J-34309-9 and J-34309-16. Both surfaces of J-34309-9 and J-34309-16 must be parallel with a clearance of 2.5 mm (0.098 in).
- Install the pinion rear bearing inner race into gear carrier. Then
  place the pinion preload shim selector tool, J-34309-1, gauge
  screw assembly.

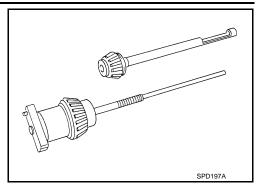


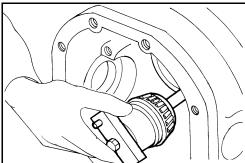

4. Assemble the pinion front bearing inner race and the J-34309-2 gauge anvil. Assemble them together with the J-34309-1 gauge screw in gear carrier. Make sure that the pinion height gauge plate, J-34309-16, turns a full 360 degrees. Tighten the two sections together by hand.

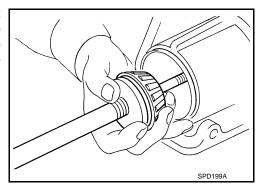

Turn the assembly several times to seat the bearings.

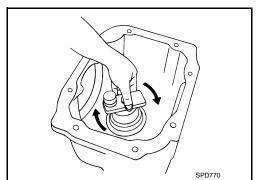


6. Measure the turning torque at the end of the J-34309-2 gauge anvil using preload gauge [SST: ST3127S000 (J-25765-A)].

**Standard** 

Turning torque specification

: 1.0 − 1.3 N·m (0.11 − 0.13 kg-m, 9 − 11 in-lb)

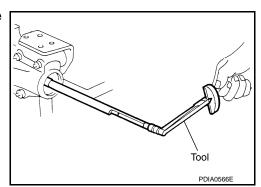

В

С

DLN

Е

F

G

SPD893

Н

I

J

K

L

M

Ν


0

Ρ


Place the J-34309-11 "R200A" pinion height adapter onto the gauge plate and tighten it by hand.

**CAUTION:** 


Make sure all machined surfaces are clean.

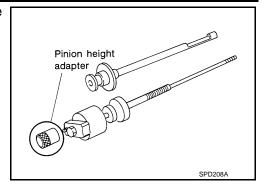


 Position the side bearing discs, J-25269-4, and arbor firmly into the side bearing bores. Install the bearing caps and tighten bearing cap mounting bolts to the specified torque. Refer to <u>DLN-190</u>, "2WD: Exploded View".

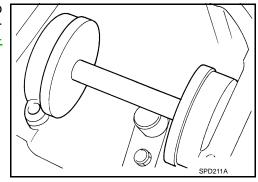

Select the correct standard pinion height adjusting washer thickness. Select by using a standard gauge of 3 mm (0.12 in) and J-34309-101 feeler gauge. Measure the distance between the J-34309-11 pinion height adapter including the standard gauge and the arbor.

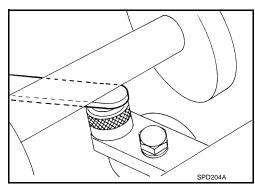


10. Write down exact measurement (the value of feeler gauge).

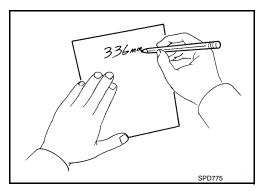


11. Correct the pinion height washer size by referring to the "pinion head number".

There are two numbers painted on the drive pinion. The first one refers to the drive pinion and drive gear as a matched set. This number should be the same as the number on the drive gear. The second number is the "pinion head height number". It refers to the ideal pinion height from standard for quietest operation. Use the following chart to determine the correct pinion height washer.

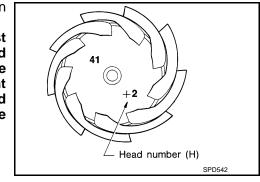

Pinion head height number	Add or remove from the standard pinion height adjusting washer thickness measurement
<b>-6</b>	Add 0.06 mm (0.0024 in)
<b>- 5</b>	Add 0.05 mm (0.0020 in)
– 4	Add 0.04 mm (0.0016 in)
– 3	Add 0.03 mm (0.0012 in)
<b>-2</b>	Add 0.02 mm (0.0008 in)
<b>– 1</b>	Add 0.01 mm (0.0004 in)
0	Use the selected washer thickness
+1	Subtract 0.01 mm (0.0004 in)
+2	Subtract 0.02 mm (0.0008 in)
+3	Subtract 0.03 mm (0.0012 in)
+4	Subtract 0.04 mm (0.0016 in)
+5	Subtract 0.05 mm (0.0020 in)
+6	Subtract 0.06 mm (0.0024 in)

- 12. Select the correct pinion height adjusting washer.
- 13. Remove the J-34309 differential shim selector tool from the final drive housing. Then disassemble to retrieve the pinion bearings.

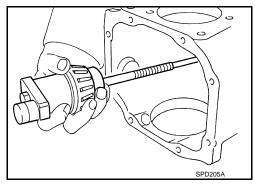


#### DRIVE PINION RUNOUT

- Set a dial indicator (A) vertically to the tip of the drive pinion.
- Rotate drive pinion to check for runout.

#### Limit

: Refer to DLN-208, "Drive **Drive pinion runout** Pinion Runout (2WD)".

If the runout value is outside of the limit, possible causes are an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.

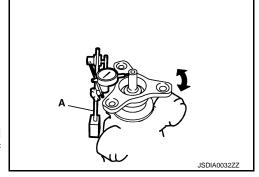

INFOID:0000000004345401

## 2WD: Inspection After Disassembly

#### DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

#### BEARING

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

#### SIDE GEAR AND PINION MATE GEAR

- Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

#### SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

**DLN-197** Revision: 2010 March 2009 EX35

DLN

Α

В

M

Ν

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

#### OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

#### DIFFERENTIAL CASE

- · Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.


#### **COMPANION FLANGE**

- · Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

#### **AWD**

## AWD: Exploded View

INFOID:0000000004345402

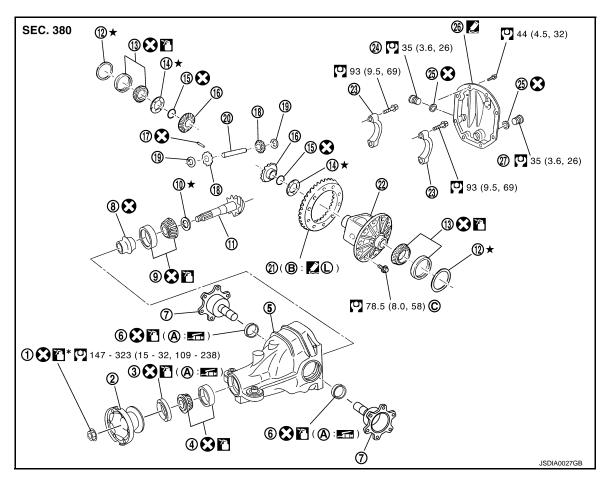

- 1. Drive pinion lock nut
- Pinion front bearing
- 7. Side flange
- 10. Pinion height adjusting washer
- 13. Side bearing
- 16. Side gear
- 19. Pinion mate thrust washer
- 22. Differential case

- 2. Companion flange
- Gear carrier
- 8. Collapsible spacer
- 11. Drive pinion
- 14. Side gear thrust washer
- 17. Lock pin
- 20. Pinion mate shaft
- 23. Bearing cap

- 3. Front oil seal
- 6. Side oil seal
- 9. Pinion rear bearing
- 12. Side bearing adjusting washer
- 15. Circular clip
- 18. Pinion mate gear
- 21. Drive gear
- 24. Filler plug

#### < UNIT DISASSEMBLY AND ASSEMBLY >

## [REAR FINAL DRIVE: R200]

25. GasketA. Oil seal lip

26. Rear cover

B. Screw hole

27. Drain plug

C. For the tightening torque, refer to <u>DLN-180, "AWD: Assembly"</u>. Α

В

Apply gear oil.

\*: Apply anti-corrosion oil.

Apply Genuine Silicone RTV or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Apply Genuine High Strength Thread Locking Sealant or equivalent. Refer to GI-17, "Recommended Chemical Products and Sealants".

Refer to GI-4, "Components" for symbols not described above.

DLN

Е


Н

INFOID:0000000004345403

## AWD: Disassembly

1. Remove differential case assembly. Refer to <a href="DLN-177">DLN-177</a>, "AWD: Disassembly".

2. Remove drive pinion lock nut with the flange wrench.

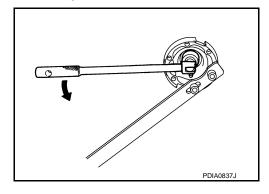

3. Put matching mark (B) on the end of drive pinion. The matching mark should be in line with the matching mark (A) on companion flange (1).

#### **CAUTION:**


For matching mark, use paint. Never damage companion flange and drive pinion.


#### NOTE:

The matching mark on the final drive companion flange indicates the maximum vertical runout position.

When replacing companion flange, matching mark is not necessary.

4. Remove companion flange using the suitable pullers.

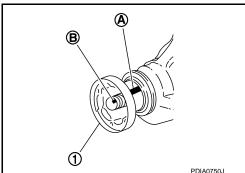

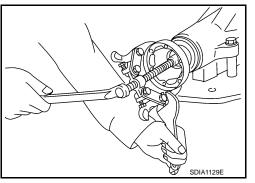

M

K

Ν


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]


Press drive pinion assembly out of gear carrier. CAUTION:

Never drop drive pinion assembly.

- Remove front oil seal.
- 7. Remove side oil seal.
- 8. Remove pinion front bearing inner race.
- 9. Remove collapsible spacer.

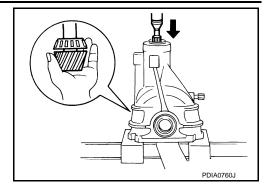


10. Remove pinion rear bearing inner race and pinion height adjusting washer with the replacer (A) (commercial service tool).

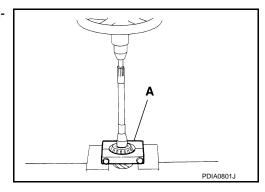

11. Tap pinion front/rear bearing outer races uniformly using a brass rod or equivalent to remove them.

#### **CAUTION:**

Never damage gear carrier.

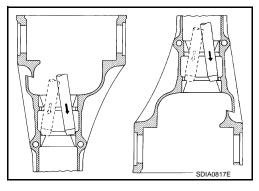

INFOID:0000000004345404

Install front bearing outer race (1) and rear bearing outer race

A : Drift [SST: ST30720000 (J-25405)]

B : Drift [SST: KV40105230 ( - )]

C : Drift bar [SST: ST30611000 (J-25742-1)]


D : Drift [SST: ST30613000 (J-25742-3)]

#### **CAUTION:**


AWD: Assembly

(2) using drifts.

- At first, using a hammer, tap bearing outer race until it becomes flat to gear carrier.
- Never reuse pinion front and rear bearing outer race.
- Select drive pinion height adjusting washer. Refer to <u>DLN-203</u>. "AWD : Adjustment".

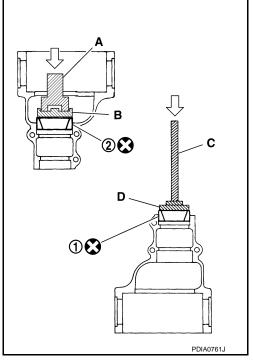

- Install selected drive pinion height adjusting washer (2) to drive pinion. Press pinion rear bearing inner race (1) to it, using drift (A) [SST: ST30901000 (J-26010-01)].
   CAUTION:
  - Be careful of the direction of pinion height adjusting washer. (Assemble as shown in the figure.)
  - Never reuse pinion rear bearing inner race.

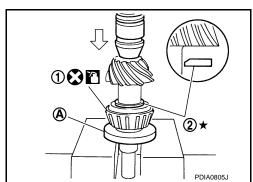


4. Assemble collapsible spacer to drive pinion. **CAUTION**:

#### Never reuse collapsible spacer.

- 5. Apply gear oil to pinion rear bearing, and assemble drive pinion into gear carrier.
- 6. Apply gear oil to pinion front bearing, and assemble pinion front bearing inner race to drive pinion assembly.

#### **CAUTION:**

Never reuse pinion front bearing inner race.

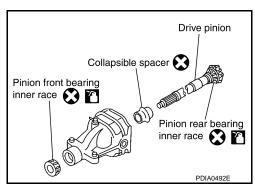

Α

В

C

DLN

Е

F

Н

|

Κ

\_


M

Ν

0

Ρ


7. Using suitable spacer (A), press the pinion front bearing inner race to drive pinion as far as drive pinion nut can be tightened.

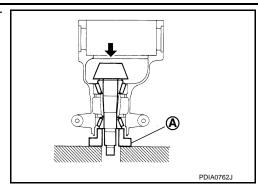

8. Using the drift (A) [SST: ST30720000 (J-25405)], install front oil seal as shown in figure.

#### **CAUTION:**


- Never reuse oil seal.
- When installing, never incline oil seal.
- Apply multi-purpose grease onto oil seal lips, and gear oil onto the circumference of oil seal.

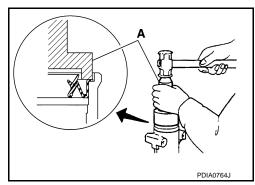

Install companion flange (1).

#### NOTE:

When reusing drive pinion, align the matching mark (B) of drive pinion with the matching mark (A) of companion flange, and then install companion flange.

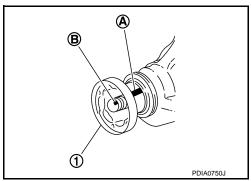

10. Apply anti-corrosion oil to the thread and seat of drive pinion lock nut, and temporarily tighten drive pinion lock nut to drive pinion.

#### **CAUTION:**

#### Never reuse drive pinion lock nut.


- 11. Adjust to the drive pinion lock nut tightening torque and pinion bearing preload torque.
  - A : Preload gauge [SST: ST3127S000 (J-25765-A)]

#### **Standard**

Pinion bearing preload : Refer to <u>DLN-208, "Preload Torque"</u>.

## **CAUTION:**

- Adjust to the lower limit of the drive pinion lock nut tightening torque first.
- If the preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Never loosen drive pinion lock nut to adjust the preload torque.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

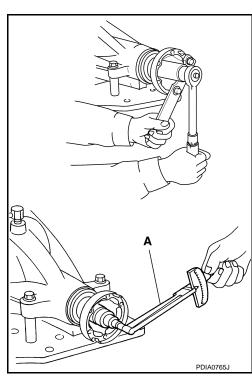

12. Install differential case assembly. Refer to <a href="DLN-180">DLN-180</a>, "AWD : Assembly". CAUTION:


#### Never install rear cover at this timing.

- 13. Check and adjust drive gear runout, tooth contact, drive gear to drive pinion backlash, and companion flange runout. Refer to <a href="DLN-184">DLN-184</a>, "AWD : Adjustment" and <a href="DLN-203">DLN-203</a>, "AWD : Adjustment". Recheck above items. Readjust the above description, if necessary.
- 14. Check total preload torque. Refer to <a href="DLN-184">DLN-184</a>, "AWD : Adjustment".
- 15. Install rear cover. Refer to <u>DLN-180, "AWD : Assembly"</u>.


AWD : Adjustment


#### PINION GEAR HEIGHT

- Make sure all parts are clean and that the bearings are well lubricated.
- 2. Assemble the pinion gear bearings into the differential shim selector tool [SST: (J-34309)].

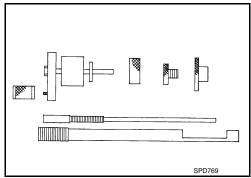

- **Pinion front bearing**; make sure the J-34309-3 pinion front bearing seat is secured tightly against the J-34309-2 gauge anvil. Then turn the pinion front bearing pilot, J-34309-5, to secure the bearing in its proper position.
- **Pinion rear bearing**; the pinion rear bearing pilot, J-34309-8, is used to center the pinion rear bearing only. The pinion rear bearing locking seat, J-34309-4, is used to lock the bearing to the assembly.
- Installation of J-34309-9 and J-34309-16; place a suitable 2.5 mm (0.098 in) thick plain washer between J-34309-9 and J-34309-16. Both surfaces of J-34309-9 and J-34309-16 must be parallel with a clearance of 2.5 mm (0.098 in).
- 3. Install the pinion rear bearing inner race into gear carrier. Then place the pinion preload shim selector tool, J-34309-1, gauge screw assembly.

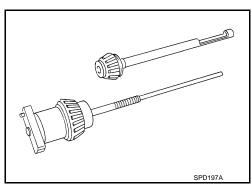

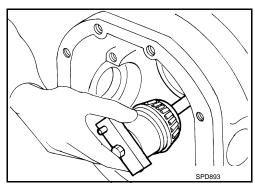

DLN

INFOID:0000000004345405

Α

В

Е

F

Н

|

J

K

M

Ν


0

Ρ


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

4. Assemble the pinion front bearing inner race and the J-34309-2 gauge anvil. Assemble them together with the J-34309-1 gauge screw in gear carrier. Make sure that the pinion height gauge plate, J-34309-16, turns a full 360 degrees. Tighten the two sections together by hand.

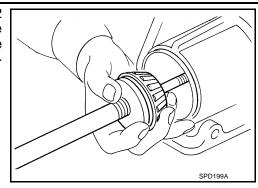


5. Turn the assembly several times to seat the bearings.

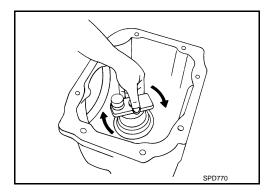

6. Measure the turning torque at the end of the J-34309-2 gauge anvil using preload gauge [SST: ST3127S000 (J-25765-A)].

#### **Standard**


Turning torque specifica: 1.0 - 1.3 N·m (0.11 - 0.13 kg-m, 9 - 11 in-lb)

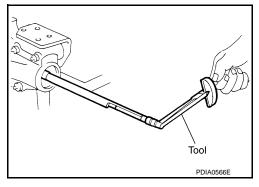


Place the J-34309-11 "R200A" pinion height adapter onto the gauge plate and tighten it by hand.

#### **CAUTION:**

Make sure all machined surfaces are clean.

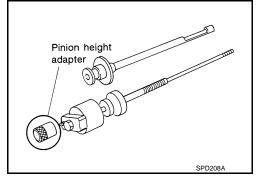


8. Position the side bearing discs, J-25269-4, and arbor firmly into the side bearing bores. Install the bearing caps and tighten bearing cap mounting bolts to the specified torque. Refer to <u>DLN-198</u>, "AWD: Exploded View".

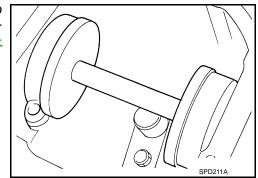


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

Select the correct standard pinion height adjusting washer thickness. Select by using a standard gauge of 3 mm (0.12 in) and J-34309-101 feeler gauge. Measure the distance between the J-34309-11 pinion height adapter including the standard gauge and the arbor.

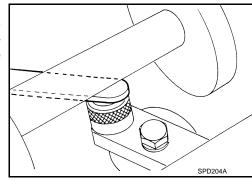


10. Write down exact measurement (the value of feeler gauge).

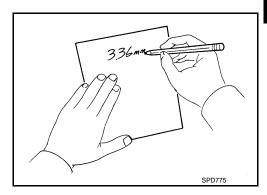

 Correct the pinion height washer size by referring to the "pinion head number".

There are two numbers painted on the drive pinion. The first one refers to the drive pinion and drive gear as a matched set. This number should be the same as the number on the drive gear. The second number is the "pinion head height number". It refers to the ideal pinion height from standard for quietest operation. Use the following chart to determine the correct pinion height washer.

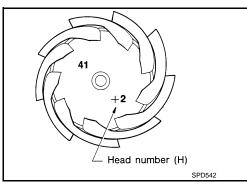

Pinion head height number	Add or remove from the standard pinion height adjusting washer thickness measurement
<del>- 6</del>	Add 0.06 mm (0.0024 in)
<b>- 5</b>	Add 0.05 mm (0.0020 in)
– 4	Add 0.04 mm (0.0016 in)
- 3	Add 0.03 mm (0.0012 in)
<b>-2</b>	Add 0.02 mm (0.0008 in)
– 1	Add 0.01 mm (0.0004 in)
0	Use the selected washer thickness
+1	Subtract 0.01 mm (0.0004 in)
+2	Subtract 0.02 mm (0.0008 in)
+3	Subtract 0.03 mm (0.0012 in)
+4	Subtract 0.04 mm (0.0016 in)
+5	Subtract 0.05 mm (0.0020 in)
+6	Subtract 0.06 mm (0.0024 in)

12. Select the correct pinion height adjusting washer.

Α

В

С

DLN

F

G

Н

|


L

N/I

Ν

 $\cap$ 

13. Remove the J-34309 differential shim selector tool from the final drive housing. Then disassemble to retrieve the pinion bearings.

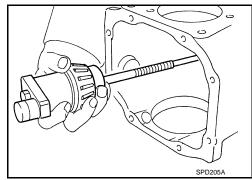

## COMPANION FLANGE RUNOUT

- 1. Fit a test indicator to the inner side of companion flange (socket diameter).
- Rotate companion flange to check for runout.

#### Limit

**Companion flange runout** 

: Refer to <u>DLN-209</u>, "Companion Flange Runout (AWD)".

- If the runout value is outside the runout limit, follow the procedure below to adjust.
- a. Check for runout while changing the phase between companion flange and drive pinion by 90° step, and search for the position where the runout is the minimum.
- b. If the runout value is still outside of the limit after the phase has been changed, possible cause will be an assembly malfunction of drive pinion and pinion bearing and malfunction of pinion bearing. Check for these items and repair if necessary.
- c. If the runout value is still outside of the limit after the check and repair, replace companion flange.

## AWD: Inspection After Disassembly

INFOID:0000000004345406

Test indicator

inside face

## DRIVE GEAR AND DRIVE PINION

- Clean up the disassembled parts.
- If the gear teeth never mesh or line-up correctly, determine the cause and adjust or replace as necessary.
- If the gears are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive gear and drive pinion as a set.

#### **BEARING**

- Clean up the disassembled parts.
- If any chipped (by friction), pitted, worn, rusted or scratched marks, or unusual noise from the bearing is observed, replace as a bearing assembly (as a new set).

#### SIDE GEAR AND PINION MATE GEAR

- · Clean up the disassembled parts.
- If any cracks or damage on the surface of the tooth is found, replace.
- If any worn or chipped mark on the contact sides of the thrust washer is found, replace.

#### SIDE GEAR THRUST WASHER AND PINION MATE THRUST WASHER

- Clean up the disassembled parts.
- If it is chipped (by friction), damaged, or unusually worn, replace.

#### OIL SEAL

- Whenever disassembled, replace.
- If wear, deterioration of adherence (sealing force lips), or damage is detected on the lips, replace them.

#### DIFFERENTIAL CASE

- Clean up the disassembled parts.
- If any wear or crack on the contact sides of the differential case is found, replace.

## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R200]

## **COMPANION FLANGE**

- Clean up the disassembled parts.
- If any chipped mark [about 0.1 mm, (0.004 in)] or other damage on the contact sides of the lips of the companion flange is found, replace.

А

В

С

DLN

Е

F

G

Н

J

K

L

M

Ν

0

## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

# **General Specification**

INFOID:0000000004345407

[REAR FINAL DRIVE: R200]

	2WD AWD		
Applied model	VQ35HR		
	A/T		
Final drive model	R200		
Gear ratio	3.133		
Number of teeth (Drive gear/Drive pinion)	47/15		
Oil capacity (Approx.) $\ell$ (US pt, Imp pt)	1.4 (3, 2-1/2)		
Number of pinion gears	2		
Drive pinion adjustment spacer type	Collapsible		
Drive Gear Runout	INFOID:00000000434540		
Itom	Unit: mm (in		
Drive gear back face runout	0.05 (0.0020)		
	0.03 (0.0020)		
Differential Side Gear Clearance	INFOID:000000000434540		
	Unit: mm (in		
Item	Standard		
Side gear backlash (Clearance between side gear and differential case)	0.2 (0.008) or less (Each gear should rotate smoothly without excessive resistance during differential motion.)		
Preload Torque	INFOID:00000000434541		
	Unit: N·m (kg-m, in-lb		
Item	Standard		
Pinion bearing (P1)	2.65 – 3.23 (0.27 – 0.32, 24 – 28)		
Side bearing (P2)	0.20 - 0.52 (0.02 - 0.05, 2 - 4)		
Side bearing to pinion bearing (Total preload) (Total preload = P1 + P2)	2.85 – 3.75 (0.29 – 0.38, 26 – 33)		
Backlash	INFOID:00000000434541		
	Unit: mm (in		
ltem	Standard		
Drive gear to drive pinion gear	0.10 - 0.15 (0.0039 - 0.0059)		
Drive gear to drive prinori gear			
Drive Pinion Runout (2WD)	INFOID:000000000434541		
	INFOID:000000000434541 Unit: mm (in		

# **SERVICE DATA AND SPECIFICATIONS (SDS)**

< SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR FINAL DRIVE: R200]

# Companion Flange Runout (AWD)

INFOID:0000000004345413

Unit: mm (in)

Item	Limit	
Inner side of the companion flange runout	0.08 (0.0031)	

С

Α

В

DLN

Е

F

G

Н

1

J

K

L

M

Ν

0