

MWI

SECTION

METER, WARNING LAMP & INDICATOR

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

BASIC INSPECTION	4	ODO/TRIP METER	20
DIAGNOSIS AND REPAIR WORKFLOW	4	ODO/TRIP METER : System Diagram	20
Work flow	4	ODO/TRIP METER : System Description	20
SYSTEM DESCRIPTION	6	ODO/TRIP METER : Component Parts Location....	21
METER SYSTEM	6	ODO/TRIP METER : Component Description	22
METER SYSTEM	6	SHIFT POSITION INDICATOR	22
METER SYSTEM : System Diagram	6	SHIFT POSITION INDICATOR : System Diagram...	22
METER SYSTEM : System Description	6	SHIFT POSITION INDICATOR : System Descrip-	
METER SYSTEM : Component Parts Location	10	tion	22
METER SYSTEM : Component Description	11	SHIFT POSITION INDICATOR : Component	
SPEEDOMETER	11	Parts Location	24
SPEEDOMETER : System Diagram	12	SHIFT POSITION INDICATOR : Component De-	
SPEEDOMETER : System Description	12	scription	25
SPEEDOMETER : Component Parts Location	13	WARNING LAMPS/INDICATOR LAMPS	25
SPEEDOMETER : Component Description	14	WARNING LAMPS/INDICATOR LAMPS : System	
TACHOMETER	14	Diagram	25
TACHOMETER : System Diagram	14	WARNING LAMPS/INDICATOR LAMPS : System	
TACHOMETER : System Description	14	Description	25
TACHOMETER : Component Parts Location	15	WARNING LAMPS/INDICATOR LAMPS : Com-	
TACHOMETER : Component Description	16	ponent Parts Location	26
ENGINE COOLANT TEMPERATURE GAUGE	16	WARNING LAMPS/INDICATOR LAMPS : Com-	
ENGINE COOLANT TEMPERATURE GAUGE :		ponent Description	27
System Diagram	16	METER ILLUMINATION CONTROL	27
ENGINE COOLANT TEMPERATURE GAUGE :		METER ILLUMINATION CONTROL : System Di-	
System Description	16	agram	27
ENGINE COOLANT TEMPERATURE GAUGE :		METER ILLUMINATION CONTROL : System De-	
Component Parts Location	17	scription	27
ENGINE COOLANT TEMPERATURE GAUGE :		METER ILLUMINATION CONTROL : Component	
Component Description	18	Parts Location	29
FUEL GAUGE	18	METER ILLUMINATION CONTROL : Component	
FUEL GAUGE : System Diagram	18	Description	30
FUEL GAUGE : System Description	18	INFORMATION DISPLAY	30
FUEL GAUGE : Component Parts Location	19	INFORMATION DISPLAY : System Diagram	30
FUEL GAUGE : Component Description	20	INFORMATION DISPLAY : System Description ...	30
		INFORMATION DISPLAY : Component Parts Lo-	
		cation	34
		INFORMATION DISPLAY : Component descrip-	
		tion	35

MWI

COMPASS	36	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	56
Description	36	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure	56
Component Parts Location	38		
Special Repair Requirement	38		
CLOCK	39	FUEL LEVEL SENSOR SIGNAL CIRCUIT	58
Component Parts Location	39	Description	58
DIAGNOSIS SYSTEM (METER)	40	Component Function Check	58
Diagnosis Description	40	Diagnosis Procedure	58
DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)	42	Component Inspection	59
CONSULT-III Function (METER/M&A)	42	METER CONTROL SWITCH SIGNAL CIRCUIT	61
DTC/CIRCUIT DIAGNOSIS	46	Description	61
U1000 CAN COMM CIRCUIT	46	Diagnosis Procedure	61
Description	46	Component Inspection	62
DTC Logic	46	TRIP A/B RESET SWITCH SIGNAL CIRCUIT..	63
Diagnosis Procedure	46	Description	63
U1010 CONTROL UNIT (CAN)	47	Diagnosis Procedure	63
Description	47	Component Inspection	63
DTC Logic	47	OIL PRESSURE SWITCH SIGNAL CIRCUIT ...	65
Diagnosis Procedure	47	Description	65
B2201 COMMUNICATION ERROR 1	48	Component Function Check	65
Description	48	Diagnosis Procedure	65
DTC Logic	48	Component Inspection	65
Diagnosis Procedure	48	PARKING BRAKE SWITCH SIGNAL CIRCUIT	66
B2202 COMMUNICATION ERROR 2	50	Description	66
Description	50	Diagnosis Procedure	66
DTC Logic	50	Component Inspection	66
Diagnosis Procedure	50	WASHER LEVEL SWITCH SIGNAL CIRCUIT... 	68
B2205 VEHICLE SPEED	52	Description	68
Description	52	Diagnosis Procedure	68
DTC Logic	52	Component Inspection	68
Diagnosis Procedure	52	COMPASS	69
B2267 ENGINE SPEED	53	Wiring Diagram - COMPASS -	69
Description	53	CLOCK	71
DTC Logic	53	Wiring Diagram - CLOCK -	71
Diagnosis Procedure	53	ECU DIAGNOSIS INFORMATION	73
B2268 WATER TEMP	54	COMBINATION METER	73
Description	54	Reference Value	73
DTC Logic	54	Wiring Diagram - METER -	76
Diagnosis Procedure	54	Fail-Safe	86
POWER SUPPLY AND GROUND CIRCUIT	55	DTC Index	87
COMBINATION METER	55	UNIFIED METER AND A/C AMP.	88
COMBINATION METER : Diagnosis Procedure ...	55	Reference Value	88
UNIFIED METER AND A/C AMP.	55	Wiring Diagram - METER -	95
UNIFIED METER AND A/C AMP. : Diagnosis Pro- cedure	55	Fail-Safe	105
		DTC Index	106

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	108	THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT	129
Reference Value	108	Description	129
Wiring Diagram - IPDM E/R -	115	Diagnosis Procedure	129
Fail-safe	118		
DTC Index	120		
SYMPTOM DIAGNOSIS	121	NORMAL OPERATING CONDITION	130
THE FUEL GAUGE POINTER DOES NOT MOVE	121	COMPASS	130
Description	121	COMPASS : Description	130
Diagnosis Procedure	121		
THE METER CONTROL SWITCH IS INOPERATIVE	122	INFORMATION DISPLAY	130
Description	122	INFORMATION DISPLAY : Description	130
Diagnosis Procedure	122		
THE TRIP A/B RESET SWITCH IS INOPERATIVE	123	PRECAUTION	131
Description	123	PRECAUTIONS	131
Diagnosis Procedure	123	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	131
THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON	124	PREPARATION	132
Description	124	PREPARATION	132
Diagnosis Procedure	124	Commercial Service Tools	132
THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF	125	REMOVAL AND INSTALLATION	133
Description	125	COMBINATION METER	133
Diagnosis Procedure	125	Exploded View	133
THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	126	Removal and Installation	133
Description	126	Disassembly and Assembly	133
Diagnosis Procedure	126	UNIFIED METER AND A/C AMP.	134
THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, or DOES NOT DISPLAY	127	Exploded View	134
Description	127	Removal and Installation	134
Diagnosis Procedure	127	METER CONTROL SWITCH	135
THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY	128	Exploded View	135
Description	128	Removal and Installation	135
Diagnosis Procedure	128	TRIP A/B RESET SWITCH	136
		Exploded View	136
		Removal and Installation	136
		COMPASS	137
		Exploded View	137
		Removal and Installation	137
		CLOCK	138
		Exploded View	138
		Removal and Installation	138

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work flow

INFOID:000000006342635

OVERALL SEQUENCE

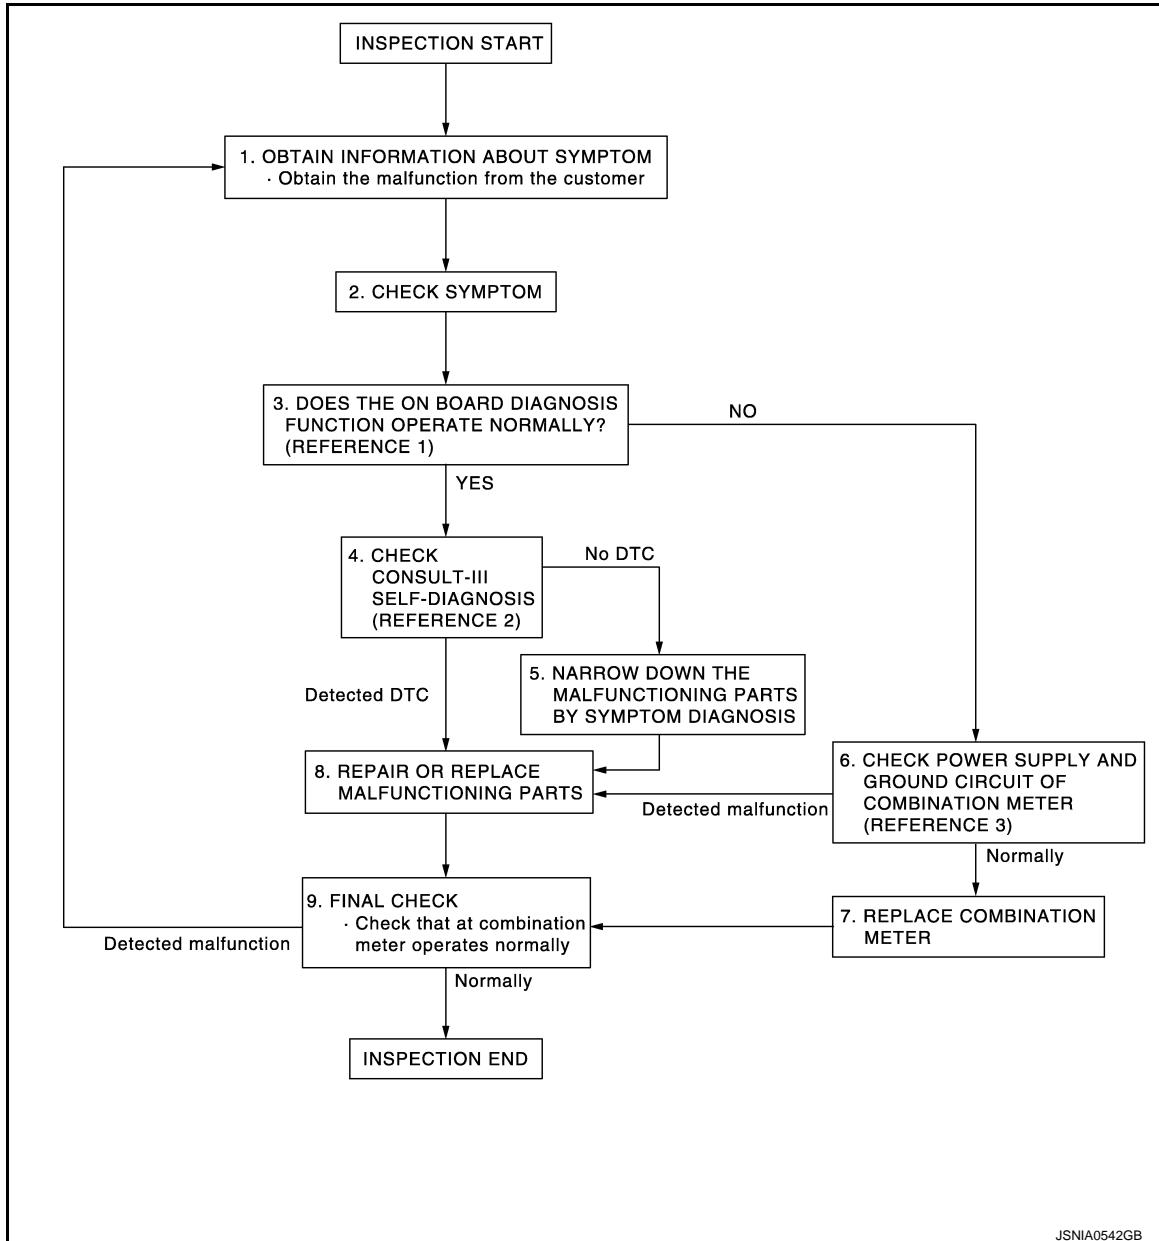

- Reference 1...[MWI-40, "Diagnosis Description"](#).
- Reference 2...[MWI-106, "DTC Index"](#).
- Reference 3...[MWI-55, "COMBINATION METER : Diagnosis Procedure"](#).

DETAILED FLOW

1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

2. CHECK SYMPTOM

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

- Check the symptom based on the information obtained from the customer.
- Check that any other malfunctions are present.

>> GO TO 3.

3.CHECK ON BOARD DIAGNOSIS OPERATION

Check that the on board diagnosis function operates. Refer to [MWI-40, "Diagnosis Description"](#).

Does the on board diagnosis function operate normally?

- YES >> GO TO 4.
NO >> GO TO 6.

4.CHECK CONSULT-III SELF-DIAGNOSIS RESULTS

Connect CONSULT-III and perform self-diagnosis. Refer to [MWI-42, "CONSULT-III Function \(METER/M&A\)"](#).

Are self-diagnosis results normal?

- YES >> GO TO 5.
NO >> GO TO 8.

5.NARROW DOWN THE MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis and narrow down the malfunctioning parts.

>> GO TO 8.

6.CHECK COMBINATION METER POWER SUPPLY AND GROUND CIRCUITS

Inspect combination meter power supply and ground circuits. Refer to [MWI-55, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> GO TO 8.

7.REPLACE COMBINATION METER

Replace combination meter.

>> GO TO 9.

8.REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace the malfunctioning parts.

NOTE:

If DTC is displayed, erase DTC after repair or replace malfunctioning parts.

>> GO TO 9.

9.FINAL CHECK

Check that the combination meter operates normally.

Do they operate normally?

- YES >> INSPECTION END
NO >> GO TO 1.

A

B

C

D

E

F

G

H

I

J

K

L

M

O

P

MWI

METER SYSTEM

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

METER SYSTEM

METER SYSTEM

METER SYSTEM : System Diagram

INFOID:0000000006342636

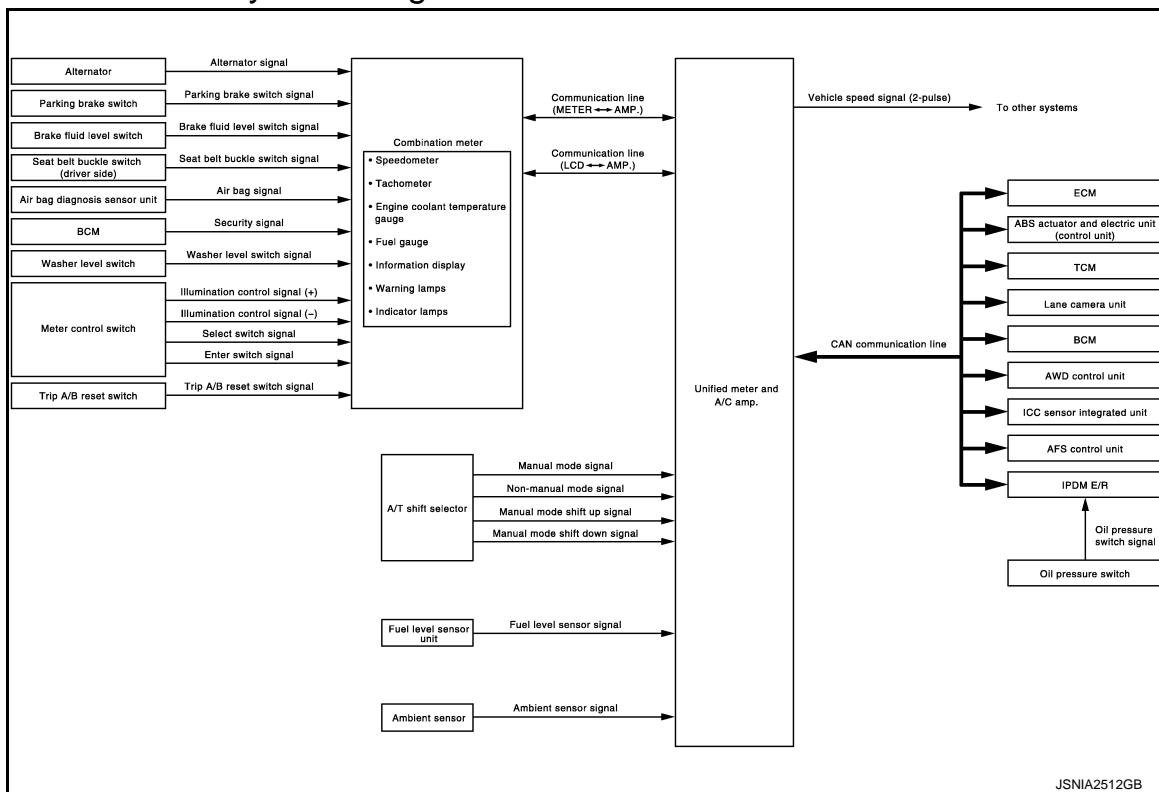

JSNIA2512GB

METER SYSTEM : System Description

INFOID:0000000006342637

COMBINATION METER

- The combination meter retrieves the information required for controlling the operations of the meters, indicator lamps/warning lamps and information display from the communication signals from the unified meter and A/C amp. and the signals from various switches and sensors.
- The combination meter incorporates a trip computer that displays warnings and messages on the information display according to the information received from various units.
- The combination meter incorporates a buzzer function that sounds an audible alarm with the integrated buzzer device. Refer to [WCS-5, "WARNING CHIME SYSTEM : System Description"](#) for further details.
- The combination meter integrates the meter circuit check function and the segment check function that checks the information display operation.

UNIFIED METER AND A/C AMP.

- Receives information required by the combination meter from various units via CAN communication line and transmits it to the combination meter with communication line.
- The unified meter and A/C amp. incorporates a power saving control function that reduces the power consumption according to the vehicle status. Refer to [BCS-15, "System Description"](#) for details.
- The unified meter and A/C amp. incorporates a diagnosis function that allows the technician to perform diagnoses with CONSULT-III.

METER SYSTEM

< SYSTEM DESCRIPTION >

Between unified meter and A/C amp. and combination meter.

Unit	Communication line	Input from combination meter	Output to combination meter
Unified meter and A/C amp.	Communication line (METER <> AMP.)	<ul style="list-style-type: none"> • Parking brake switch signal • Washer level switch signal • Meter day/night condition signal • Illumination control switch signal • Refuel status signal • Low fuel warning lamp signal • Odo data signal 	<ul style="list-style-type: none"> • Vehicle speed signal • Turn indicator signal • High beam request signal • Position light request signal • Engine speed signal • Fuel level sensor signal • Engine coolant temperature signal • A/T CHECK indicator signal • Oil pressure switch signal • Door switch signal • Buzzer output signal • AFS OFF indicator lamp signal • Low tire pressure warning lamp signal • AWD warning lamp signal • VDC OFF indicator signal • SLIP indicator signal • ABS warning lamp signal • Brake warning lamp signal • Malfunctioning indicator lamp signal • Master warning signal • ICC warning lamp signal • Lane departure warning lamp signal • LDP ON indicator lamp signal • IBA OFF indicator lamp • BSW warning lamp signal • Front fog lights request signal
	Communication line (LCD <> AMP.)	<ul style="list-style-type: none"> • Average fuel consumption reset signal • Travel time reset signal • Possible driving distance reset signal • Average vehicle speed reset signal • Select switch signal • Enter switch signal • Trip A/B reset switch signal • Ambient air temperature display signal 	<ul style="list-style-type: none"> • Shift position signal • Manual mode indicator signal • Manual mode shift refusal signal • Meter display signal • Door switch signal • Fuel level sensor signal • Parking brake switch signal • Washer level switch signal • Charge warning signal • Instantaneous fuel consumption display signal • Ambient air temperature display signal • Average fuel consumption display signal • Average vehicle speed display signal • Possible driving distance display signal • Engine speed signal • Vehicle speed signal • TPMS display signal • Fuel filler cap warning display signal

IPDM E/R

- IPDM E/R reads the ON/OFF signals of the oil pressure switch and transmits the oil pressure switch signal to the unified meter and A/C amp. via BCM with the CAN communication line.
- IPDM E/R is equipped with the diagnosis function. It can perform the operation check of oil pressure warning lamp with the auto active test and the diagnosis with CONSULT-III.

MWI

METER CONTROL FUNCTION LIST

O

P

METER SYSTEM

< SYSTEM DESCRIPTION >


X: Applicable

System		Description	Signal source	Via unified meter and A/C amp.
Meter/gauge	Speedometer	Receives vehicle speed signal and indicates vehicle speed.	ABS actuator and electric unit (control unit)	X
	Tachometer	Receives engine speed signal and indicates engine speed.	ECM	X
	Fuel gauge	Receives fuel level sensor signal and indicates fuel level.	Fuel level sensor unit	X
	Engine coolant temperature gauge	Receives engine coolant temperature signal and indicates coolant temperature.	ECM	X
Warning lamp/indicator lamp	Oil pressure warning lamp	Receives oil pressure warning lamp signal and illuminates warning lamp.	IPDM E/R	X
	Master warning	Illuminates according to warning output on information display.	—	X
Information display	Door open warning	Receives door switch signals and displays warning.	BCM	X
	Parking brake release warning	Receives parking brake switch signal and vehicle speed signal and displays warnings.	Parking brake switch ABS actuator and electric unit (control unit)	X
	Low fuel warning	Receives fuel gauge signal and displays warning if fuel level decreases to 12 ℥ (3-1/8 US gal, 2-5/8 Imp gal) or less.	Fuel level sensor unit	X
	Low washer fluid warning	Receives washer level switch signal and displays warning.	Washer level switch	
	Low outside temperature warning	Monitors ambient sensor signal and displays warning if ambient temperature decreases to 3°C (37°F) or less. (If enabled)	Ambient sensor	X
	Low tire pressure warning	Receives TPMS display signals and displays warning.	BCM	X
	Fuel filler cap warning	Receives fuel filler cap warning display signals and displays warning.	ECM	X
	Instantaneous fuel consumption	Calculates instantaneous fuel consumption based on received vehicle speed signals and fuel consumption monitor signal and displays it.	ECM ABS actuator and electric unit (control unit)	X
	Average fuel consumption	Calculates average fuel consumption in a reset-to-reset interval based on received vehicle speed signals and fuel consumption monitor signal and displays it.	ECM ABS actuator and electric unit (control unit)	X
	Average vehicle speed	Calculates average vehicle speed in a reset-to-reset interval based on received vehicle speed signals and displays it.	ABS actuator and electric unit (control unit)	X
	Travel time	Displays accumulated key switch ON time from reset to reset.	—	X
	Travel distance	Calculates accumulated travel distance in a reset-to-reset interval based on received vehicle speed signals and displays it.	ABS actuator and electric unit (control unit)	X
	Possible driving distance	Calculates possible driving distance based on received fuel consumption monitor signal, vehicle speed signals and fuel level sensor signal and displays it.	ECM ABS actuator and electric unit (control unit) Fuel level sensor unit	X
	Ambient air temperature	Corrects ambient air temperature value based on received ambient sensor signals and displays it.	Ambient sensor	X

METER SYSTEM

< SYSTEM DESCRIPTION >

ARRANGEMENT OF COMBINATION METER

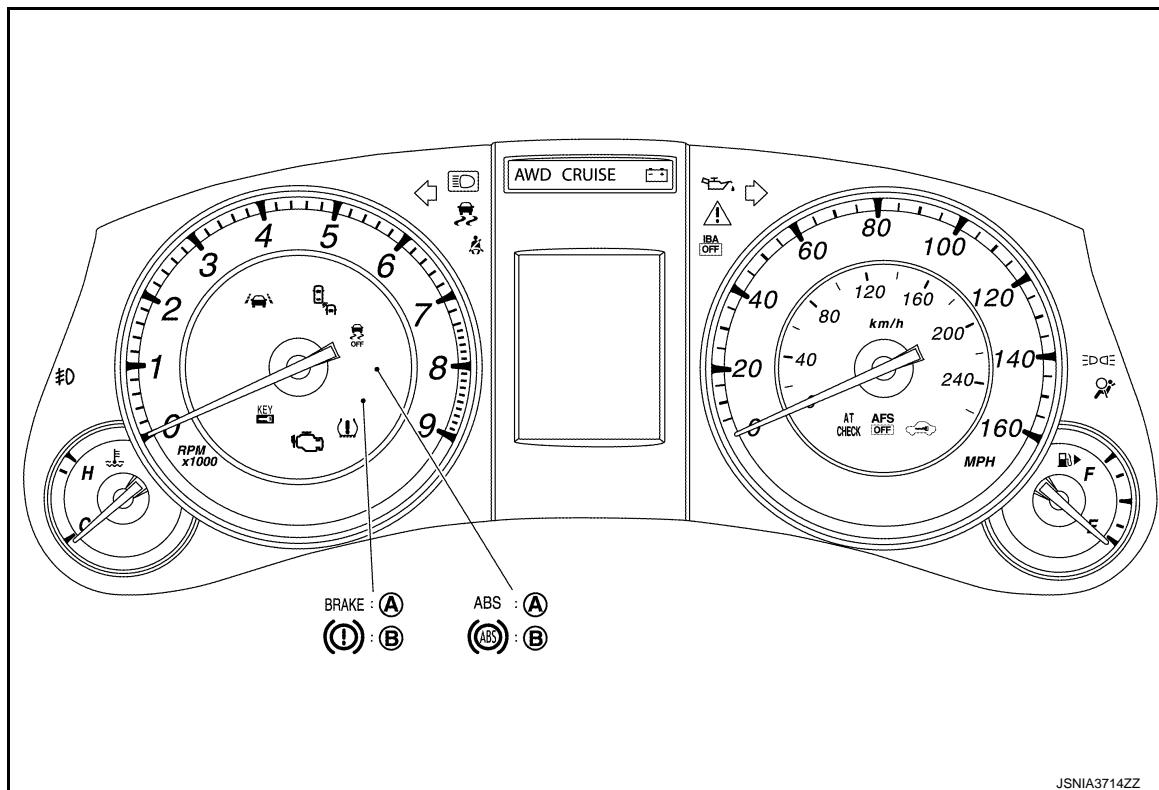

JSNIA3714ZZ

A. U.S.A.

B. Canada

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI


O
P

METER SYSTEM

< SYSTEM DESCRIPTION >

METER SYSTEM : Component Parts Location

INFOID:000000006342638

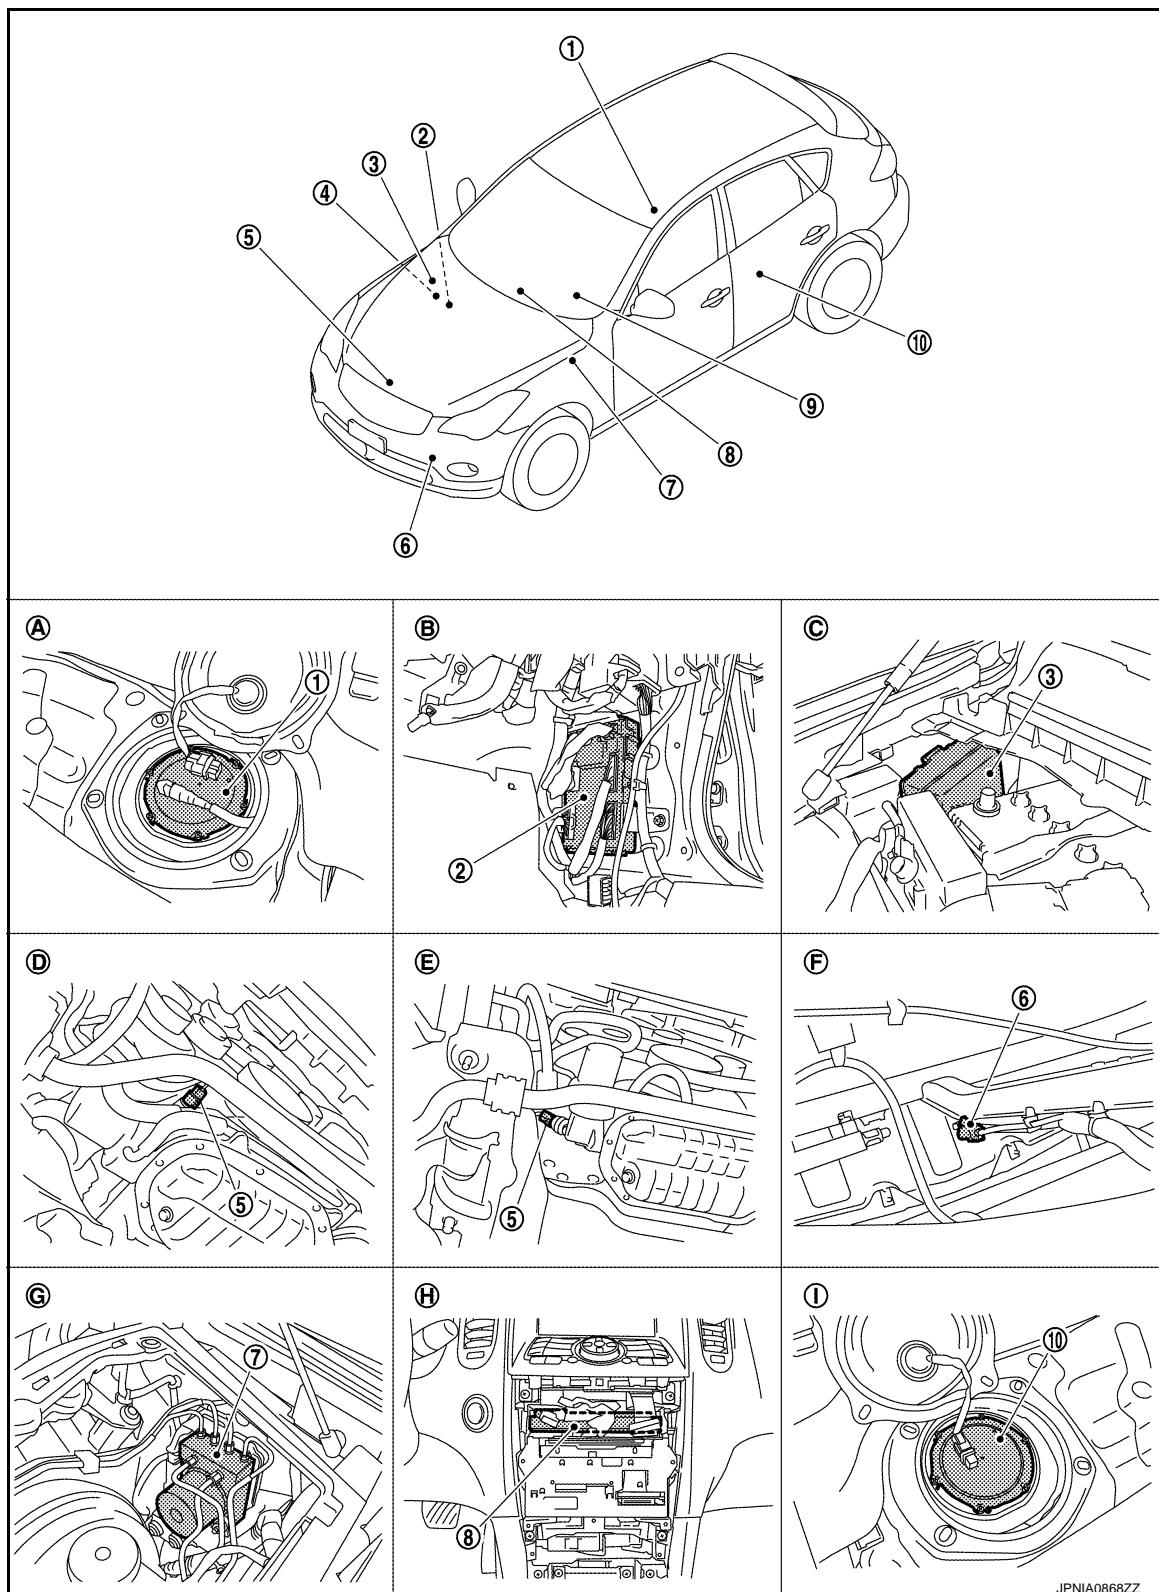

- | | | |
|--|------------------------|-------------------|
| 1. Fuel level sensor unit and fuel pump
(main) | 2. BCM | 3. IPDM E/R |
| 4. ECM
Refer to EC-38, "Component Parts Location" . | 5. Oil pressure switch | 6. Ambient sensor |

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

METER SYSTEM : Component Description

INFOID:0000000006342639

Unit	Description
Combination meter	<p>Controls the following with the signals from the unified meter and A/C amp, switches and sensors.</p> <ul style="list-style-type: none"> • Speedometer • Tachometer • Engine coolant temperature gauge • Fuel gauge • Warning lamps • Indicator lamps • Information display • Warning chime
Unified meter and A/C amp.	<ul style="list-style-type: none"> • The combination meter receives the necessary information from various units via CAN communication line and transmits them to the unified meter and A/C amp. with the communication line that connects both of them. • Transmits the fuel gauge signal from the fuel gauge unit with the communication line that connects the unified meter and A/C amp. and the combination meter. • Reads the signals from the A/T shift selector transmits them to TCM with CAN communication line.
IPDM E/R	IPDM E/R reads the ON/OFF signals of the oil pressure switch and transmits the oil pressure switch signal to the unified meter and A/C amp. via BCM with CAN communication line.
Fuel level sensor unit	Refer to MWI-58, "Description" .
Oil pressure switch	Refer to MWI-65, "Description" .
ECM	<p>Transmits the following signals to the unified meter and A/C amp. with CAN communication line.</p> <ul style="list-style-type: none"> • Engine speed signal • Engine coolant temperature signal • Fuel consumption monitor signal • Fuel filler cap warning display signal
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the unified meter and A/C amp. with CAN communication line.
BCM	<ul style="list-style-type: none"> • Transmits signals provided by various units to the unified meter and A/C amp. with CAN communication line. • Transmits the security signal and TPMS display signal to the combination meter.
A/T shift selector	<p>Transmits the following signals to the unified meter and A/C amp.</p> <ul style="list-style-type: none"> • Manual mode signal • Non-manual mode signal • Manual mode shift up signal • Manual mode shift down signal
TCM	Transmits shift position signal, manual mode indicator signal and manual mode shift refusal signal to the unified meter and A/C amp.
Meter control switch	Refer to MWI-61, "Description" .
Trip A/B reset switch	Refer to MWI-63, "Description" .
Washer level switch	Transmits the washer level signal to the combination meter.
Brake fluid level switch	Transmits the brake fluid level switch signal to the combination meter.
Parking brake switch	Refer to MWI-66, "Description" .


SPEEDOMETER

METER SYSTEM

< SYSTEM DESCRIPTION >

SPEEDOMETER : System Diagram

INFOID:000000006342640

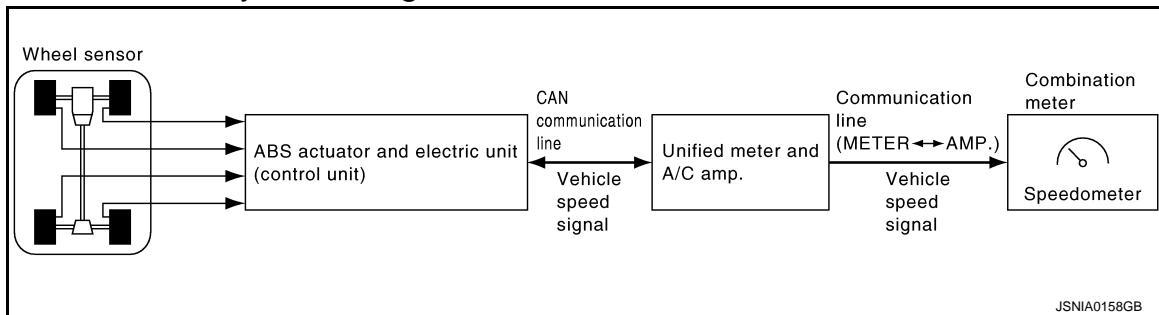

SPEEDOMETER : System Description

INFOID:000000006342641


- The ABS actuator and electric unit (control unit) converts the pulse signal provided by the wheel sensor to a vehicle speed signal and transmits it to the unified meter and A/C amp. with CAN communication line.
- The unified meter and A/C amp. receives the vehicle speed signal from the ABS actuator and electric unit (control unit) with CAN communication line and transmits it to the combination meter by means of communication line.
- The combination meter indicates the vehicle speed according to the vehicle speed signal received from the unified meter and A/C amp. by means of communication line.

METER SYSTEM

< SYSTEM DESCRIPTION >

SPEEDOMETER : Component Parts Location

INFOID:0000000006342642

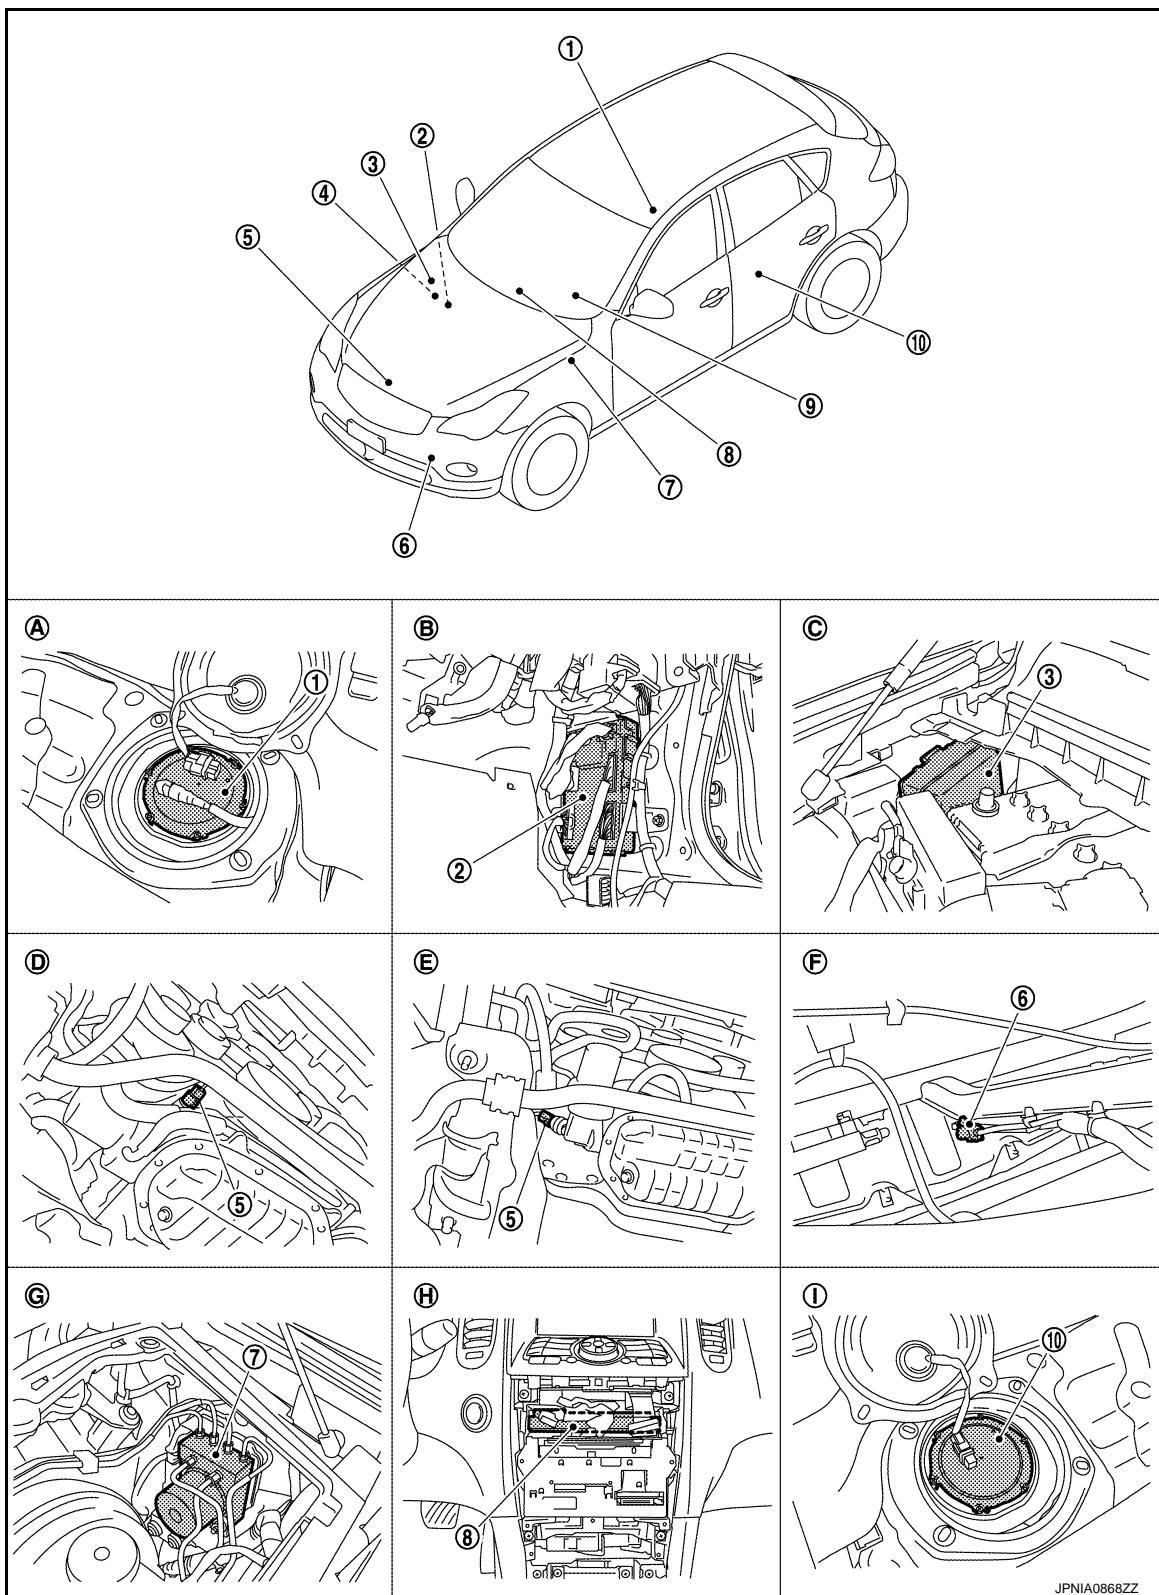

1. Fuel level sensor unit and fuel pump (main)
2. BCM
3. IPDM E/R
4. ECM
Refer to [EC-38, "Component Parts Location"](#).
5. Oil pressure switch
6. Ambient sensor

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O
P

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

SPEEDOMETER : Component Description


INFOID:000000006342643

Unit	Description
Combination meter	Indicates the vehicle speed according to the vehicle speed signal received from the unified meter and A/C amp. by means of communication line.
Unified meter and A/C amp.	Transmits the vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line to the combination meter by means of communication line.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the unified meter and A/C amp. with CAN communication line.

TACHOMETER

TACHOMETER : System Diagram

INFOID:000000006342644

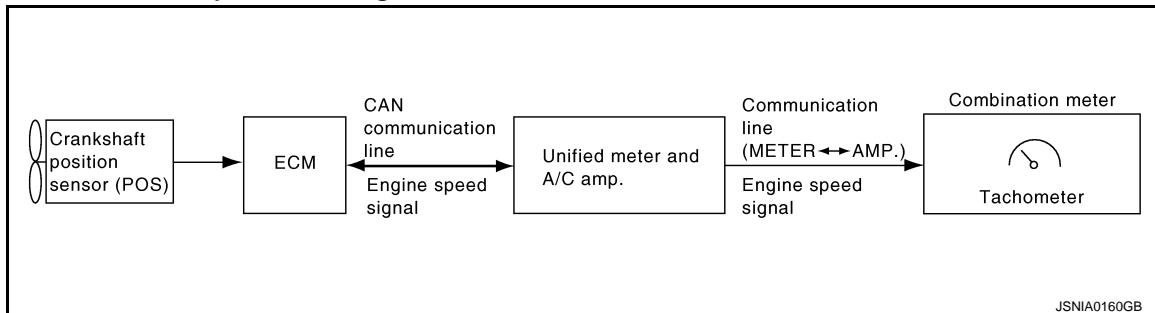

JSNIA0160GB

TACHOMETER : System Description

INFOID:000000006342645


- ECM converts the pulse signal provided by the crankshaft position sensor to an engine speed signal and transmits it to the unified meter and A/C amp. with CAN communication line.
- The unified meter and A/C amp. receives the engine speed signal from ECM with CAN communication line and transmits it to the combination meter by means of communication line.
- Combination meter converts engine speed signal to the angle signal, and commands to tachometer.

METER SYSTEM

< SYSTEM DESCRIPTION >

TACHOMETER : Component Parts Location

INFOID:000000006342646

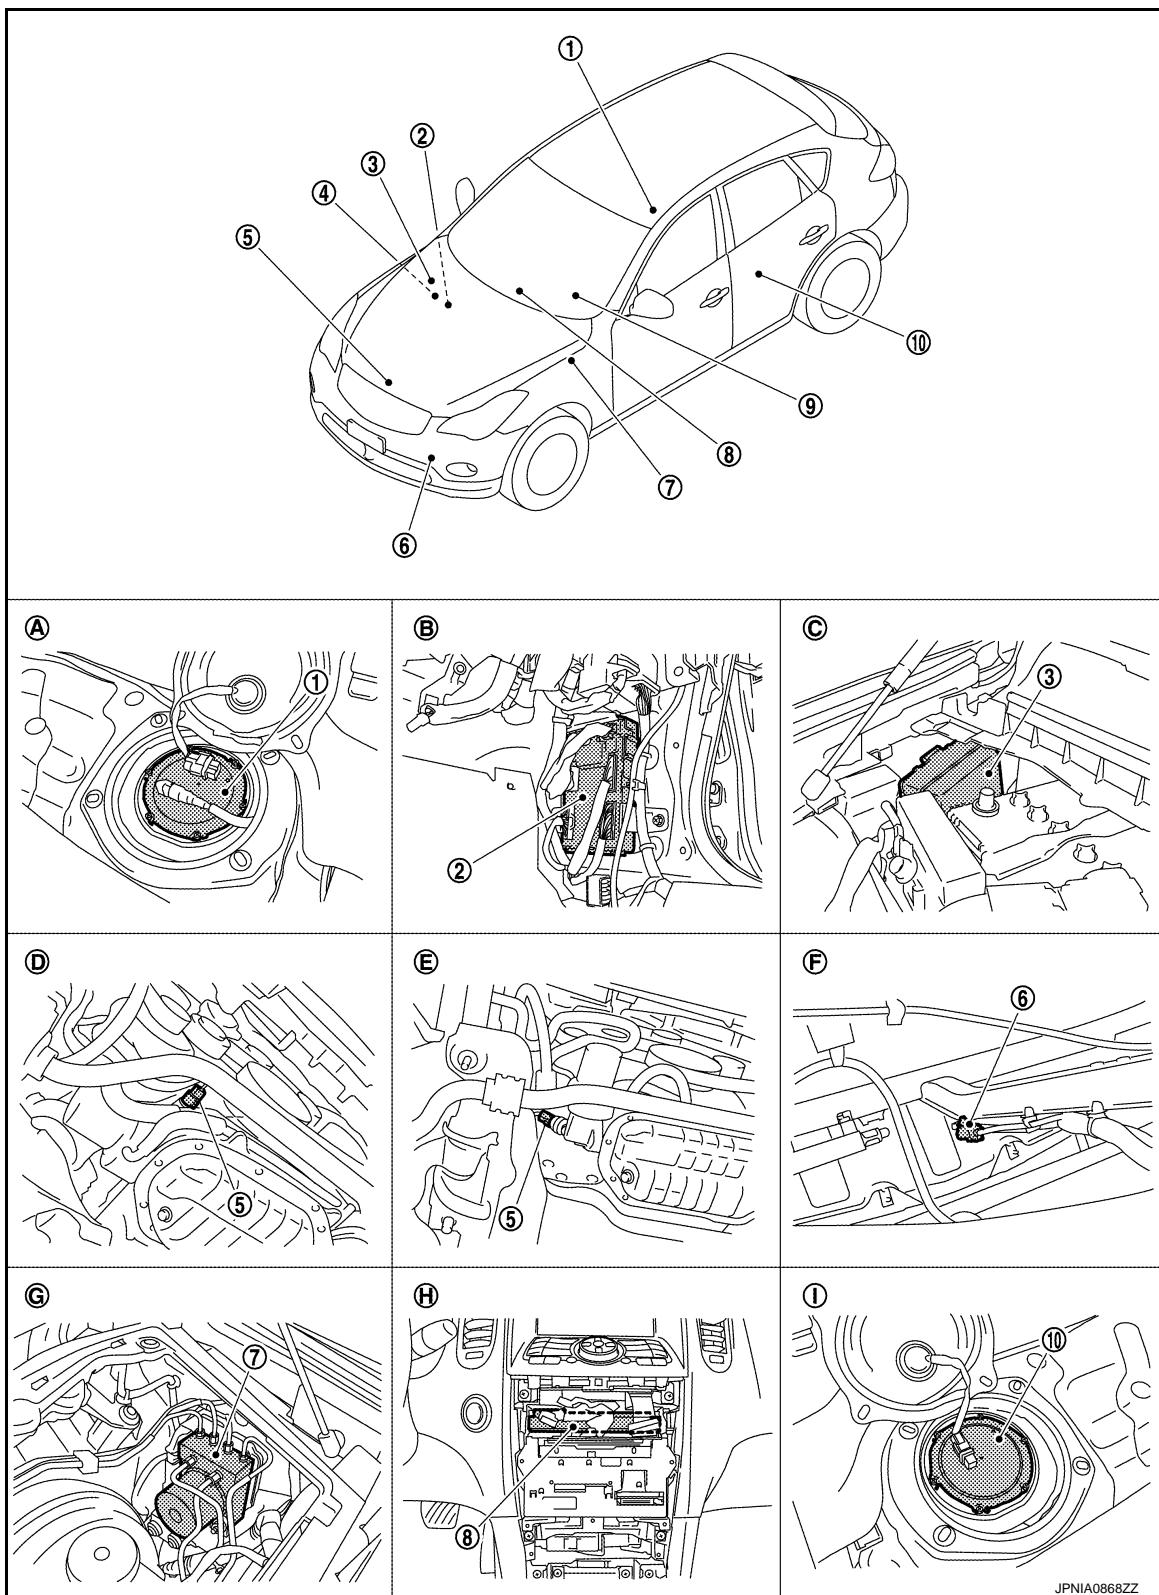

1. Fuel level sensor unit and fuel pump (main)
2. BCM
3. IPDM E/R
4. ECM
Refer to [EC-38, "Component Parts Location"](#).
5. Oil pressure switch
6. Ambient sensor

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

TACHOMETER : Component Description


INFOID:000000006342647

Unit	Description
Combination meter	Indicates the engine speed according to the engine speed signal received from the unified meter and A/C amp. by means of communication line.
Unified meter and A/C amp.	Transmits the engine speed signal received from ECM with CAN communication line to the combination meter by means of communication line.
ECM	Transmits the engine speed signal to the unified meter and A/C amp. with CAN communication line.

ENGINE COOLANT TEMPERATURE GAUGE

ENGINE COOLANT TEMPERATURE GAUGE : System Diagram

INFOID:000000006342648

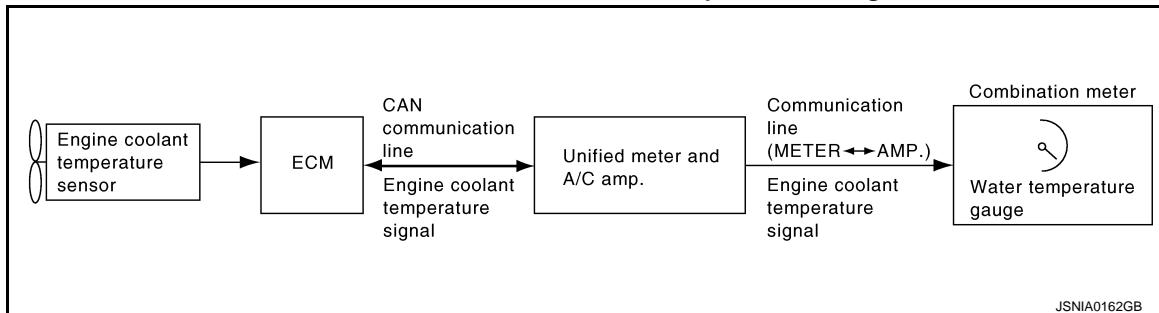

ENGINE COOLANT TEMPERATURE GAUGE : System Description

INFOID:000000006342649


- ECM converses a signal from engine coolant temperature sensor to engine coolant temperature signal, and transmits to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits engine coolant temperature signal to combination meter with communication line.
- Combination meter converses engine coolant temperature signal to the angle signal, and commands to engine coolant temperature gauge.

METER SYSTEM

< SYSTEM DESCRIPTION >

ENGINE COOLANT TEMPERATURE GAUGE : Component Parts Location

INFOID:000000006342650

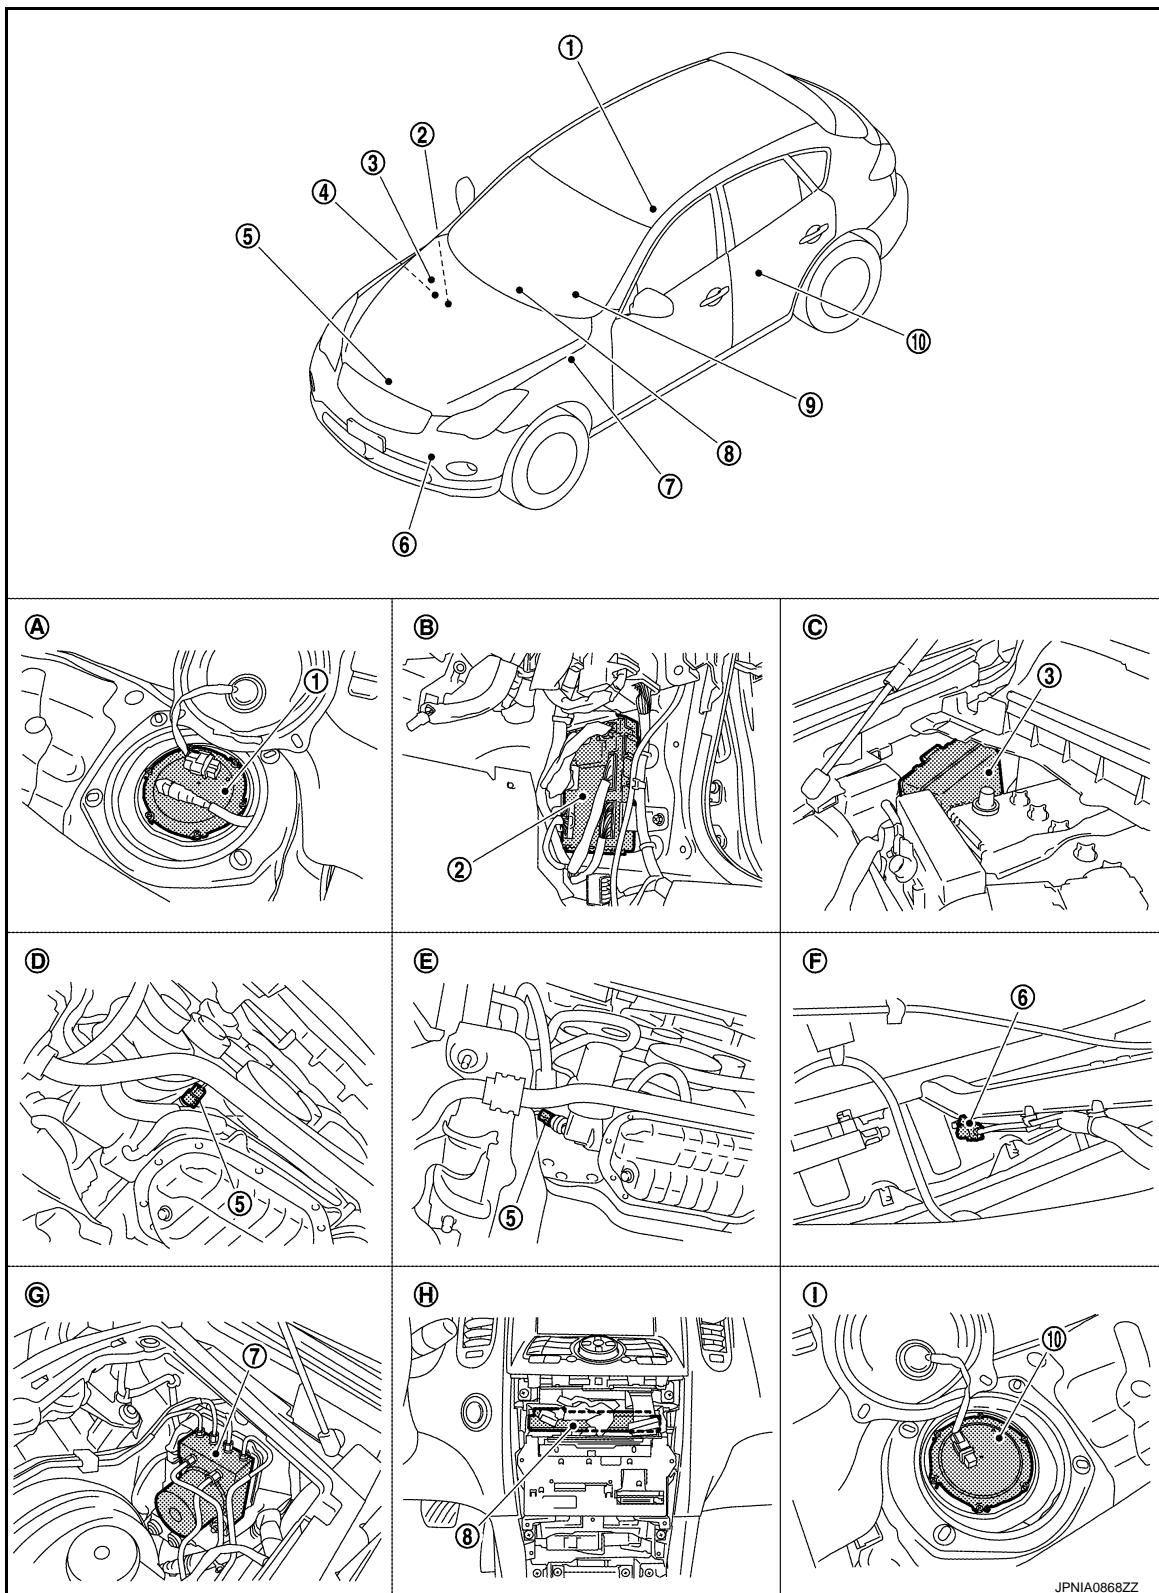

1. Fuel level sensor unit and fuel pump (main)
4. ECM
Refer to [EC-38, "Component Parts Location"](#).

2. BCM
5. Oil pressure switch

3. IPDM E/R
6. Ambient sensor

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI
O
P

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

ENGINE COOLANT TEMPERATURE GAUGE : Component Description


INFOID:0000000006342651

Unit	Description
Combination meter	Indicates the water temperature gauge according to the engine coolant temperature signal received from the unified meter and A/C amp. by means of communication line.
Unified meter and A/C amp.	Transmits the engine coolant temperature signal received from ECM with CAN communication line to the combination meter by means of communication line.
ECM	Transmits the engine coolant temperature signal to the unified meter and A/C amp. with CAN communication line.

FUEL GAUGE

FUEL GAUGE : System Diagram

INFOID:0000000006342652

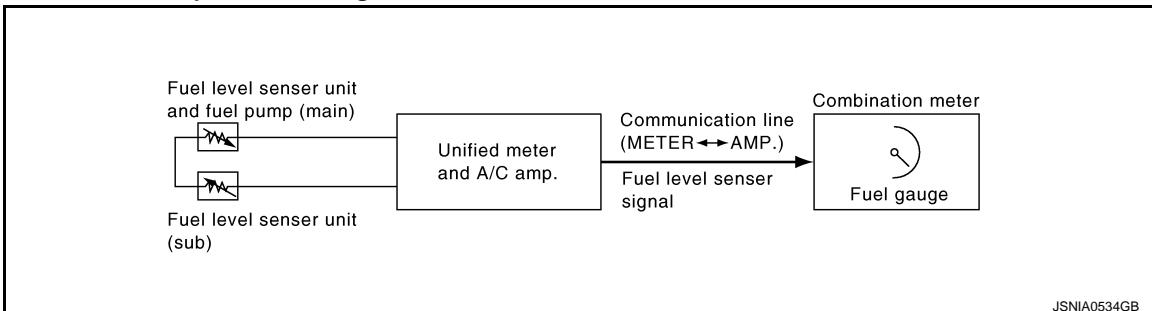

JSNIA0534GB

FUEL GAUGE : System Description

INFOID:0000000006342653

CONTROL OUTLINE

- The unified meter and A/C amp. reads the fuel level sensor signal from the fuel gauge unit and transmits it to the combination meter with the communication line.
- The combination meter indicates the fuel level on the fuel gauge according to the received fuel level sensor signal.

REFUEL CONTROL

The combination meter accelerates the fuel gauge segment if the all conditions listed below are met, or the ignition switch is ON from OFF.


- Ignition switch is ON position
- The vehicle is not moving
- The fuel level change by 15 ℥ (4 US gal, 3-3/10 Imp gal) or more

METER SYSTEM

< SYSTEM DESCRIPTION >

FUEL GAUGE : Component Parts Location

INFOID:000000006342654

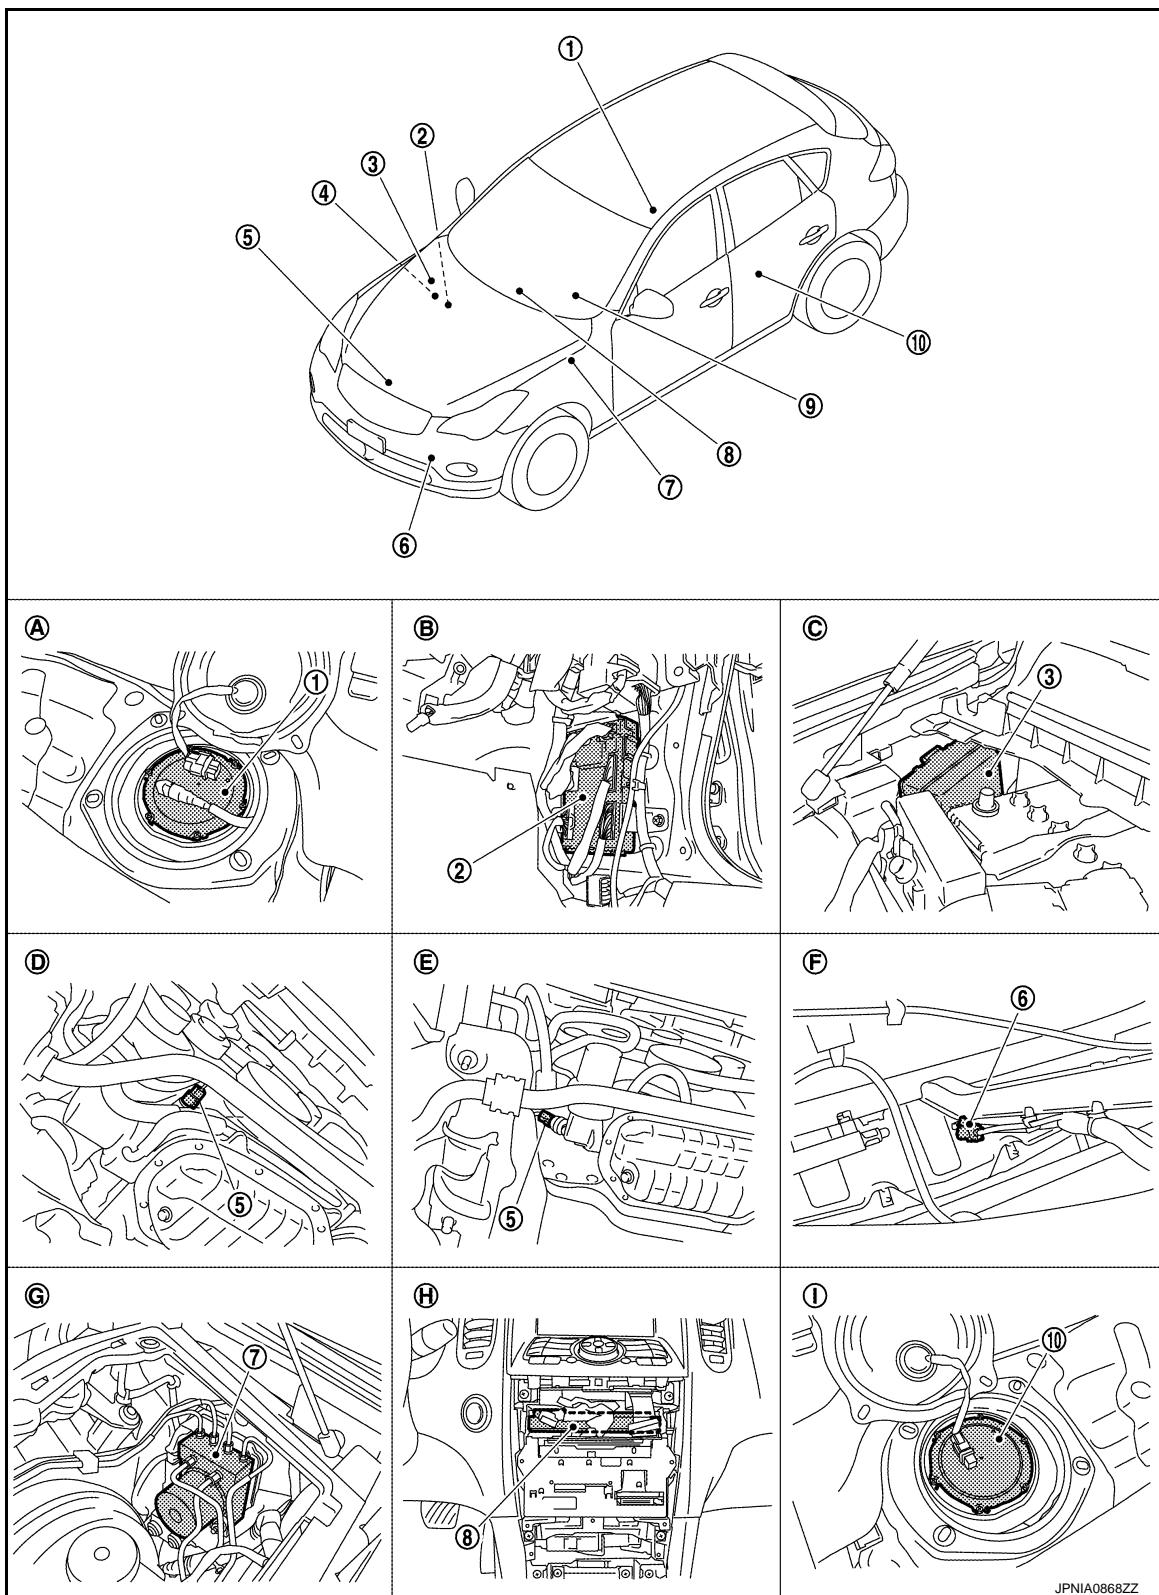

1. Fuel level sensor unit and fuel pump (main)
2. BCM
3. IPDM E/R
4. ECM
Refer to [EC-38, "Component Parts Location"](#).
5. Oil pressure switch
6. Ambient sensor

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O
P

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

FUEL GAUGE : Component Description


INFOID:000000006342655

Unit	Description
Combination meter	Indicates the fuel gauge according to the fuel level sensor signal received from the unified meter and A/C amp. by means of communication line.
Unified meter and A/C amp.	Transmits the fuel level sensor signal from the fuel level sensor unit to the combination meter by means of communication line.
Fuel level sensor unit	Refer to MWI-58, "Description" .

ODO/TRIP METER

ODO/TRIP METER : System Diagram

INFOID:000000006342656

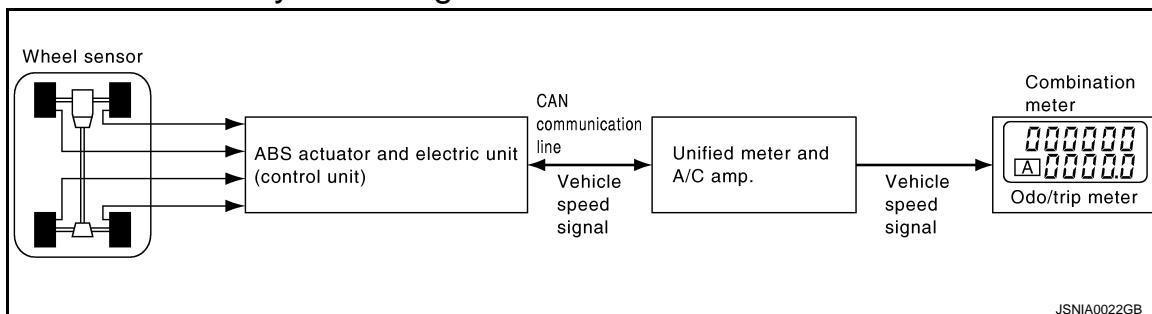

ODO/TRIP METER : System Description

INFOID:000000006342657


- The unified meter and A/C amp. transmits the vehicle speed signal from ABS actuator and electric unit (control unit) to the combination meter.
- The combination meter calculates the vehicle distance according to the vehicle speed signal. The vehicle distance is displayed.

METER SYSTEM

< SYSTEM DESCRIPTION >

ODO/TRIP METER : Component Parts Location

INFOID:0000000006342658

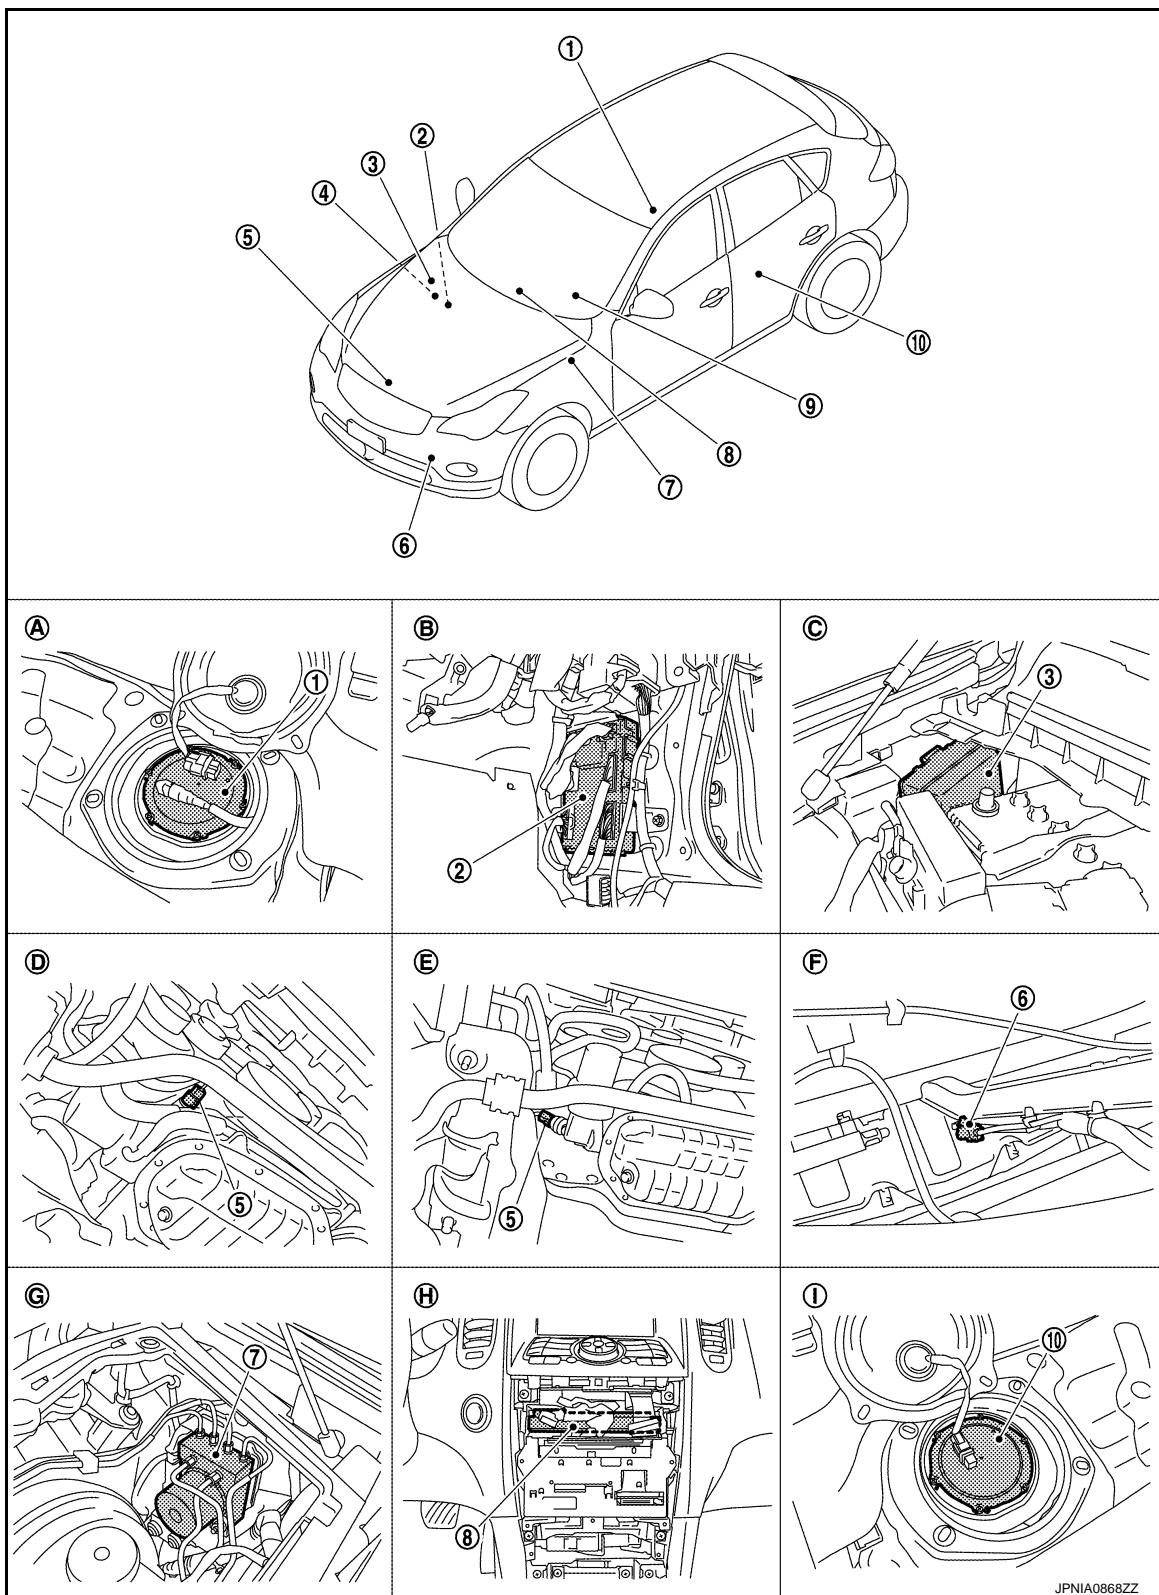

1. Fuel level sensor unit and fuel pump (main)
2. BCM
3. IPDM E/R
4. ECM
Refer to [EC-38, "Component Parts Location"](#).
5. Oil pressure switch
6. Ambient sensor

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

ODO/TRIP METER : Component Description


INFOID:0000000006342659

Unit	Description
Combination meter	The combination meter calculates the vehicle distance according to the vehicle speed signal. The vehicle distance is displayed.
Unified meter and A/C amp.	The unified meter and A/C amp. transmits the vehicle speed signal from ABS actuator and electric unit (control unit) to the combination meter.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the unified meter and A/C amp. with CAN communication line.

SHIFT POSITION INDICATOR

SHIFT POSITION INDICATOR : System Diagram

INFOID:0000000006342660

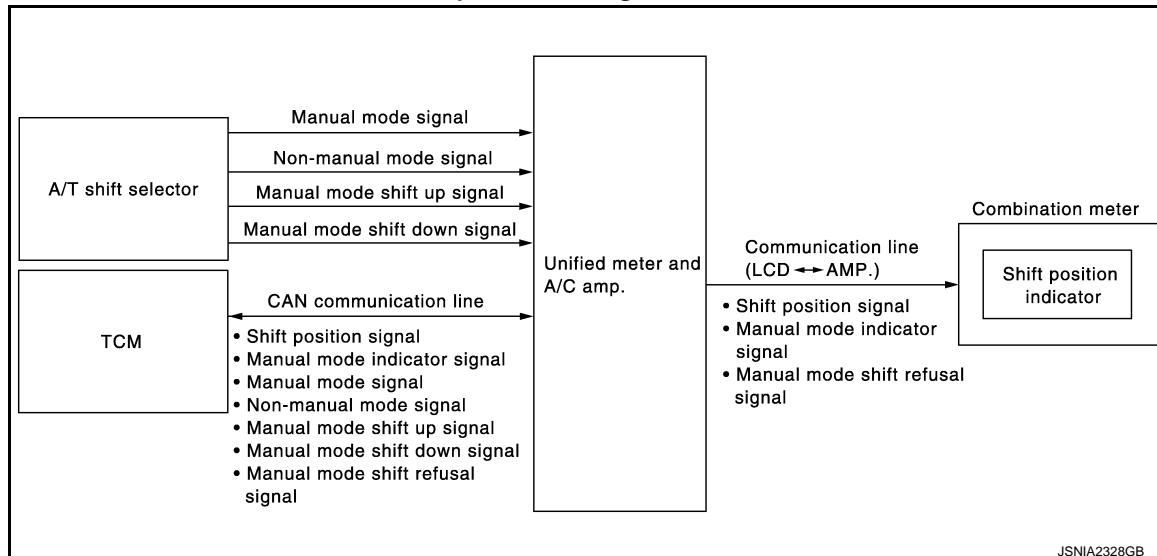

JSNIA2328GB

SHIFT POSITION INDICATOR : System Description

INFOID:0000000006342661

Shift position is displayed in the information display LCD in the combination meter.

MANUAL MODE

- Unified meter and A/C amp. inputs manual mode signal and shift-up/down signal from A/T shift selector (manual mode switch), and transmits the signals to TCM with CAN communication line.
- TCM processes manual mode signal and shift-up/down signal, and transmits manual mode indicator signal and shift position signal to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits manual mode indicator signal and shift position signal to combination meter with the communication line.
- Combination meter indicates A/T gear position and manual mode indicator, when receiving manual mode indicator signal and shift position signal.
- TCM transmits a manual mode shift refusal signal to the unified meter and A/C amp. via CAN communication line when gear shifting cannot be performed in manual mode.
- The unified meter and A/C amp. transmits a manual mode shift refusal signal to the combination meter via communication line.
- The combination meter blinks the shift position indicator and sounds a buzzer when receiving a manual mode shift refusal signal.

METER SYSTEM

< SYSTEM DESCRIPTION >

NON-MANUAL MODE

- Unified meter and A/C amp. inputs non-manual mode signal from A/T shift selector (manual mode switch), and transmits the signals to TCM with CAN communication line.
- TCM transmits shift position signal to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits shift position signal to combination meter with the communication line.
- Combination meter indicates A/T shift position when receiving shift position signal.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O


P

METER SYSTEM

< SYSTEM DESCRIPTION >

SHIFT POSITION INDICATOR : Component Parts Location

INFOID:000000006342662

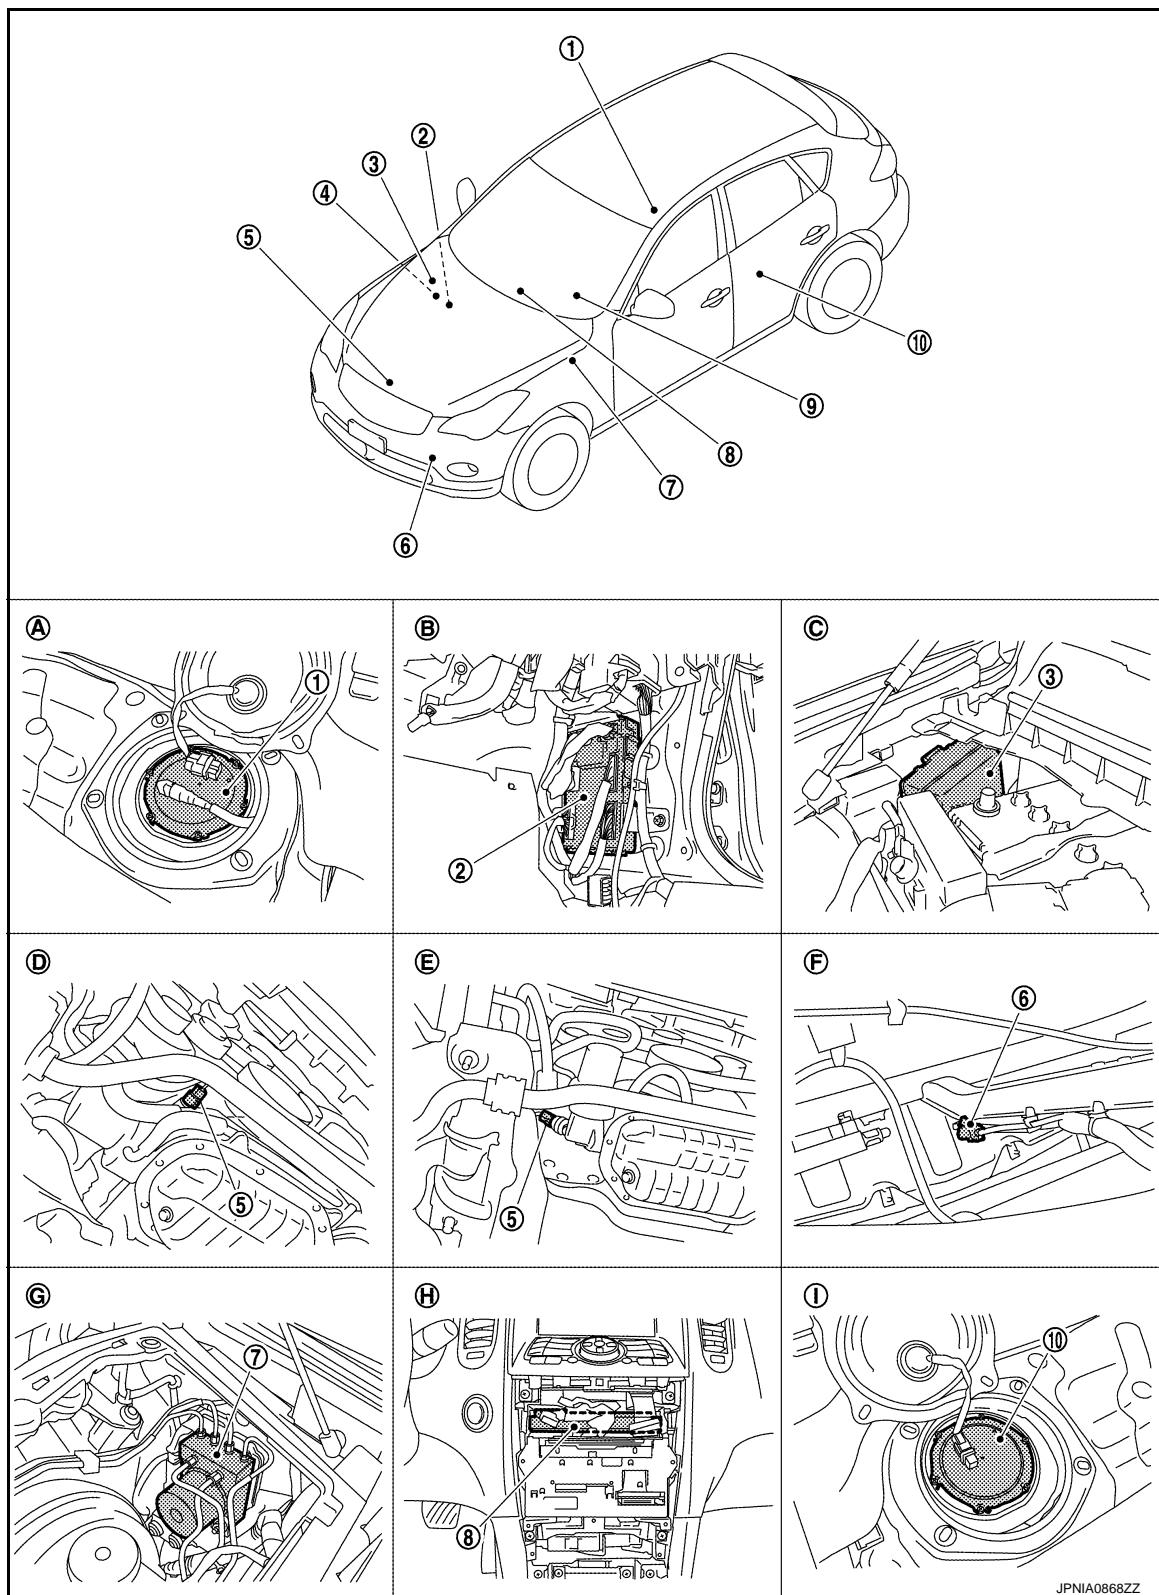

- | | | |
|--|------------------------|-------------------|
| 1. Fuel level sensor unit and fuel pump
(main) | 2. BCM | 3. IPDM E/R |
| 4. ECM
Refer to EC-38, "Component Parts Location" . | 5. Oil pressure switch | 6. Ambient sensor |

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

SHIFT POSITION INDICATOR : Component Description


INFOID:0000000006342663

Unit	Description
Combination meter	Displays the shift position on the information display with shift position signal and manual mode indicator signal received from unified meter and A/C amp.
Unified meter and A/C amp.	<ul style="list-style-type: none"> Transmits the signals from the A/T shift selector to TCM with CAN communication line. Transmits shift position signal and manual mode indicator signal received from TCM with CAN communication line to the combination meter by means of communication line.
A/T shift selector	<p>Transmits the following signals to the unified meter and A/C amp.</p> <ul style="list-style-type: none"> Manual mode signal Non-manual mode signal Manual mode shift up signal Manual mode shift down signal
TCM	Transmits shift position signal, manual mode indicator signal and manual mode shift refusal signal to the unified meter and A/C amp.

WARNING LAMPS/INDICATOR LAMPS

WARNING LAMPS/INDICATOR LAMPS : System Diagram

INFOID:0000000006342664

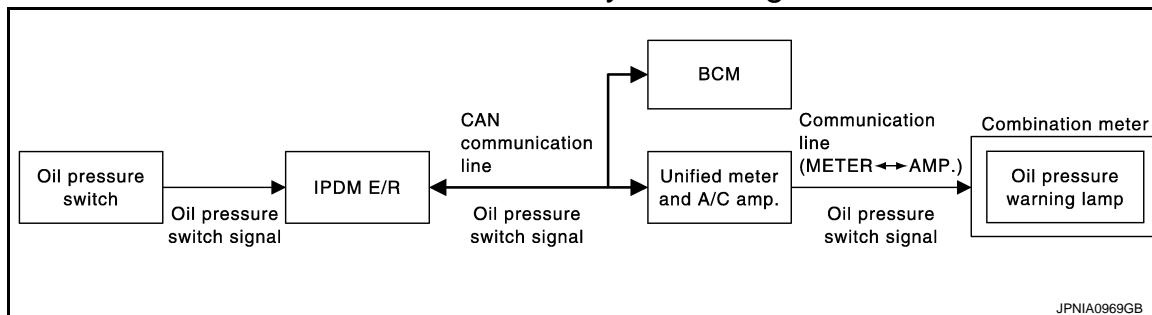

JPNIA0969GB

WARNING LAMPS/INDICATOR LAMPS : System Description

INFOID:0000000006342665

OIL PRESSURE WARNING LAMP

- IPDM E/R inputs oil pressure switch signal from oil pressure switch, and transmits the signal to unified meter and A/C amp. through BCM with CAN communication line.
- Unified meter and A/C amp. transmits oil pressure switch signal to combination meter with communication line.
- Let the combination meter turn oil pressure warning lamp ON with received oil pressure switch signal.


MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

WARNING LAMPS/INDICATOR LAMPS : Component Parts Location

INFOID:0000000006342666

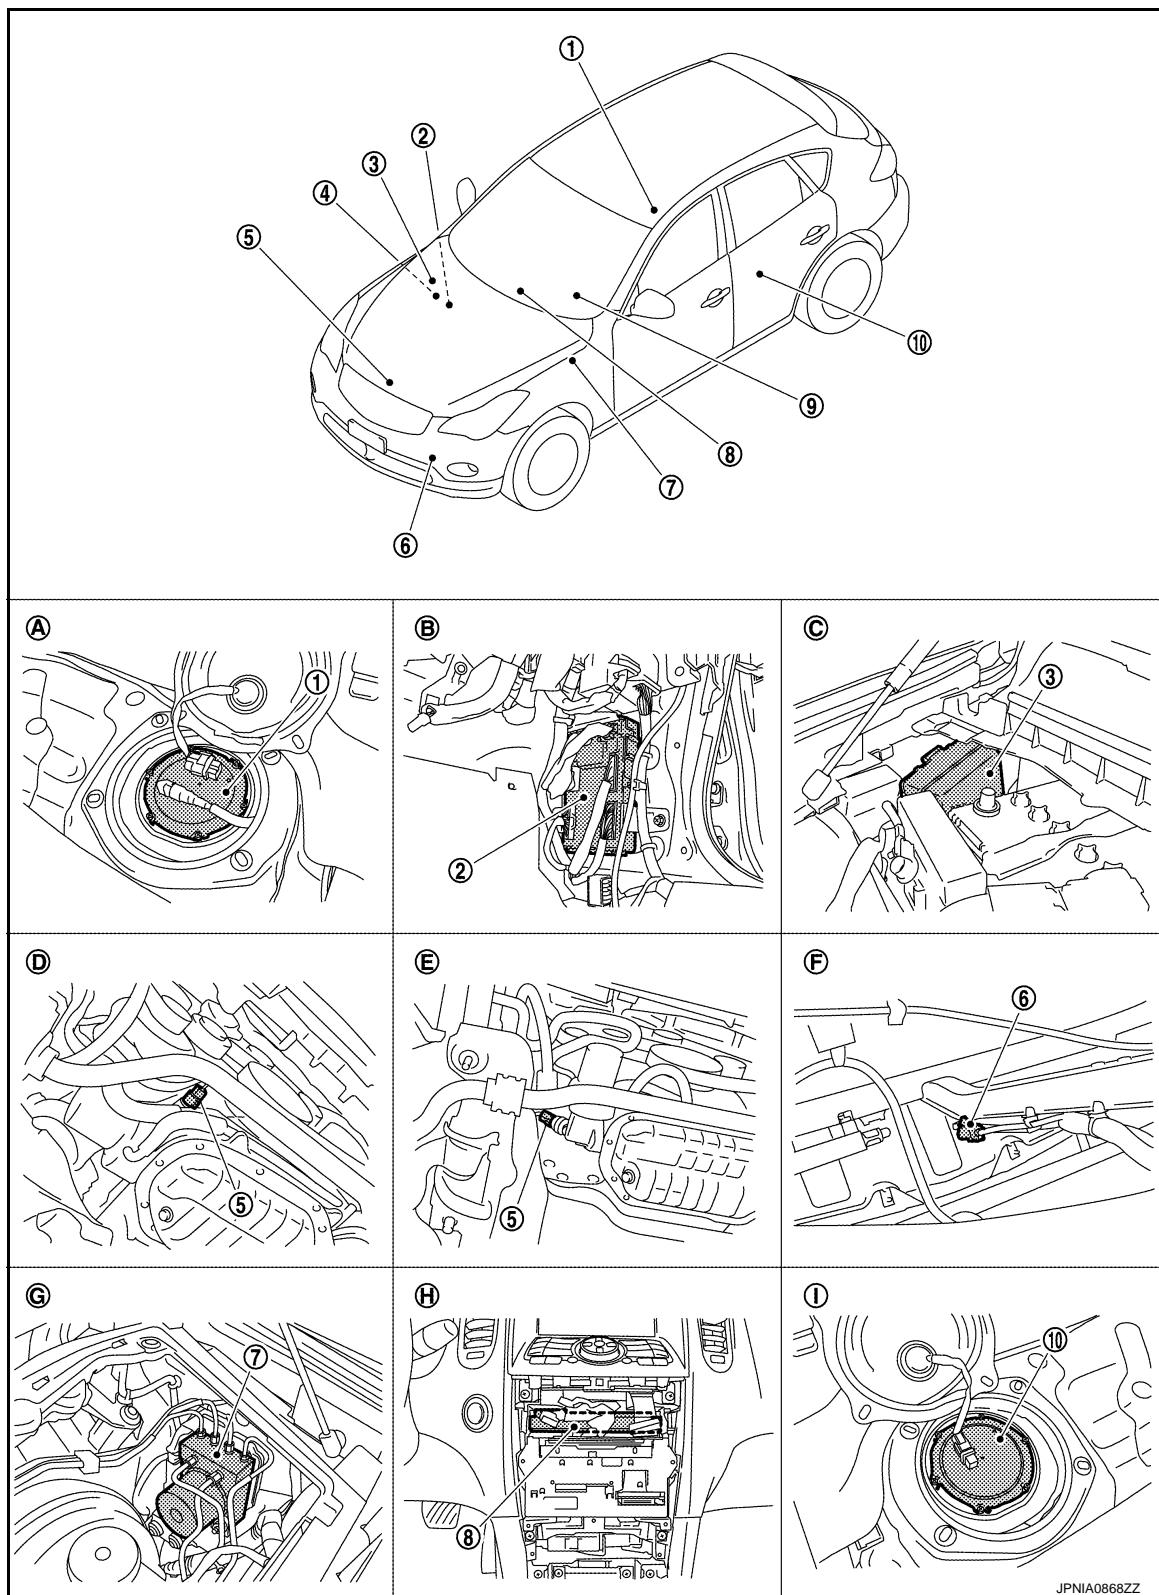

1. Fuel level sensor unit and fuel pump (main)
2. BCM
3. IPDM E/R
4. ECM
Refer to [EC-38, "Component Parts Location"](#).
5. Oil pressure switch
6. Ambient sensor

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

WARNING LAMPS/INDICATOR LAMPS : Component Description


INFOID:0000000006342667

Unit	Description
Combination meter	Turns the oil pressure warning lamp ON/OFF according to the oil pressure switch signal received from the unified meter and A/C amp. by means of communication line.
Unified meter and A/C amp.	Transmits the oil pressure switch signal received from the IPDM E/R with BCM to the combination meter by means of communication line.
IPDM E/R	IPDM E/R reads the ON/OFF signals from the oil pressure switch and transmits the oil pressure switch signal to the unified meter and A/C amp. via BCM with the CAN communication line.
Oil pressure switch	Refer to MWI-65, "Description" .
BCM	Transmits the oil pressure switch signal received from IPDM E/R via CAN communication to the unified meter and A/C amp. via CAN communication line.

METER ILLUMINATION CONTROL

METER ILLUMINATION CONTROL : System Diagram

INFOID:0000000006342668

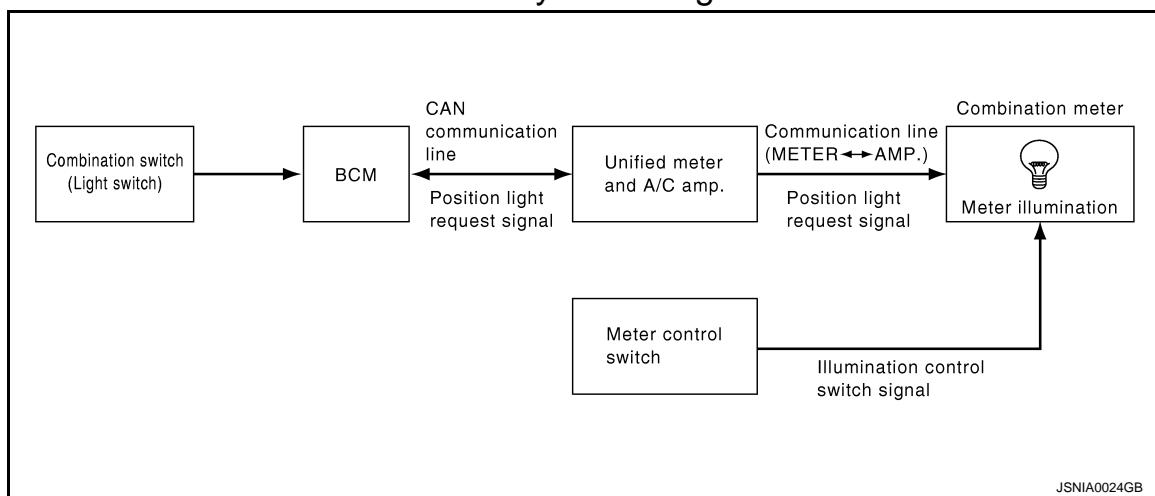

JSNIA0024GB

METER ILLUMINATION CONTROL : System Description

INFOID:0000000006342669

SYSTEM DESCRIPTION

The combination meter controls the meter illumination by the illumination control switch signal from the meter control switch and the position light request signal transmitted by BCM with unified meter and A/C amp.


Daytime Mode

MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

Meter illumination is adjusted to 5 steps by illumination control switch (1) in daytime mode.

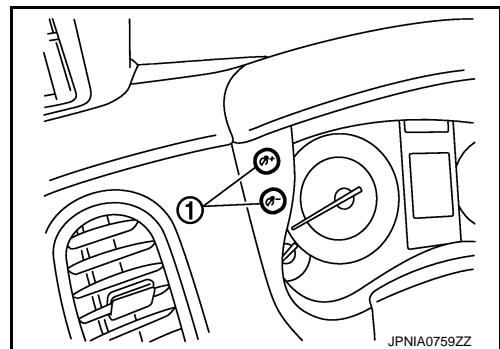

Nighttime Mode


- Combination meter is transferred to nighttime mode with position light request signal from BCM with CAN communication line.
- Meter illumination is adjusted to 22 steps by illumination control switch in nighttime.

METER SYSTEM

< SYSTEM DESCRIPTION >

METER ILLUMINATION CONTROL : Component Parts Location

INFOID:0000000006342670

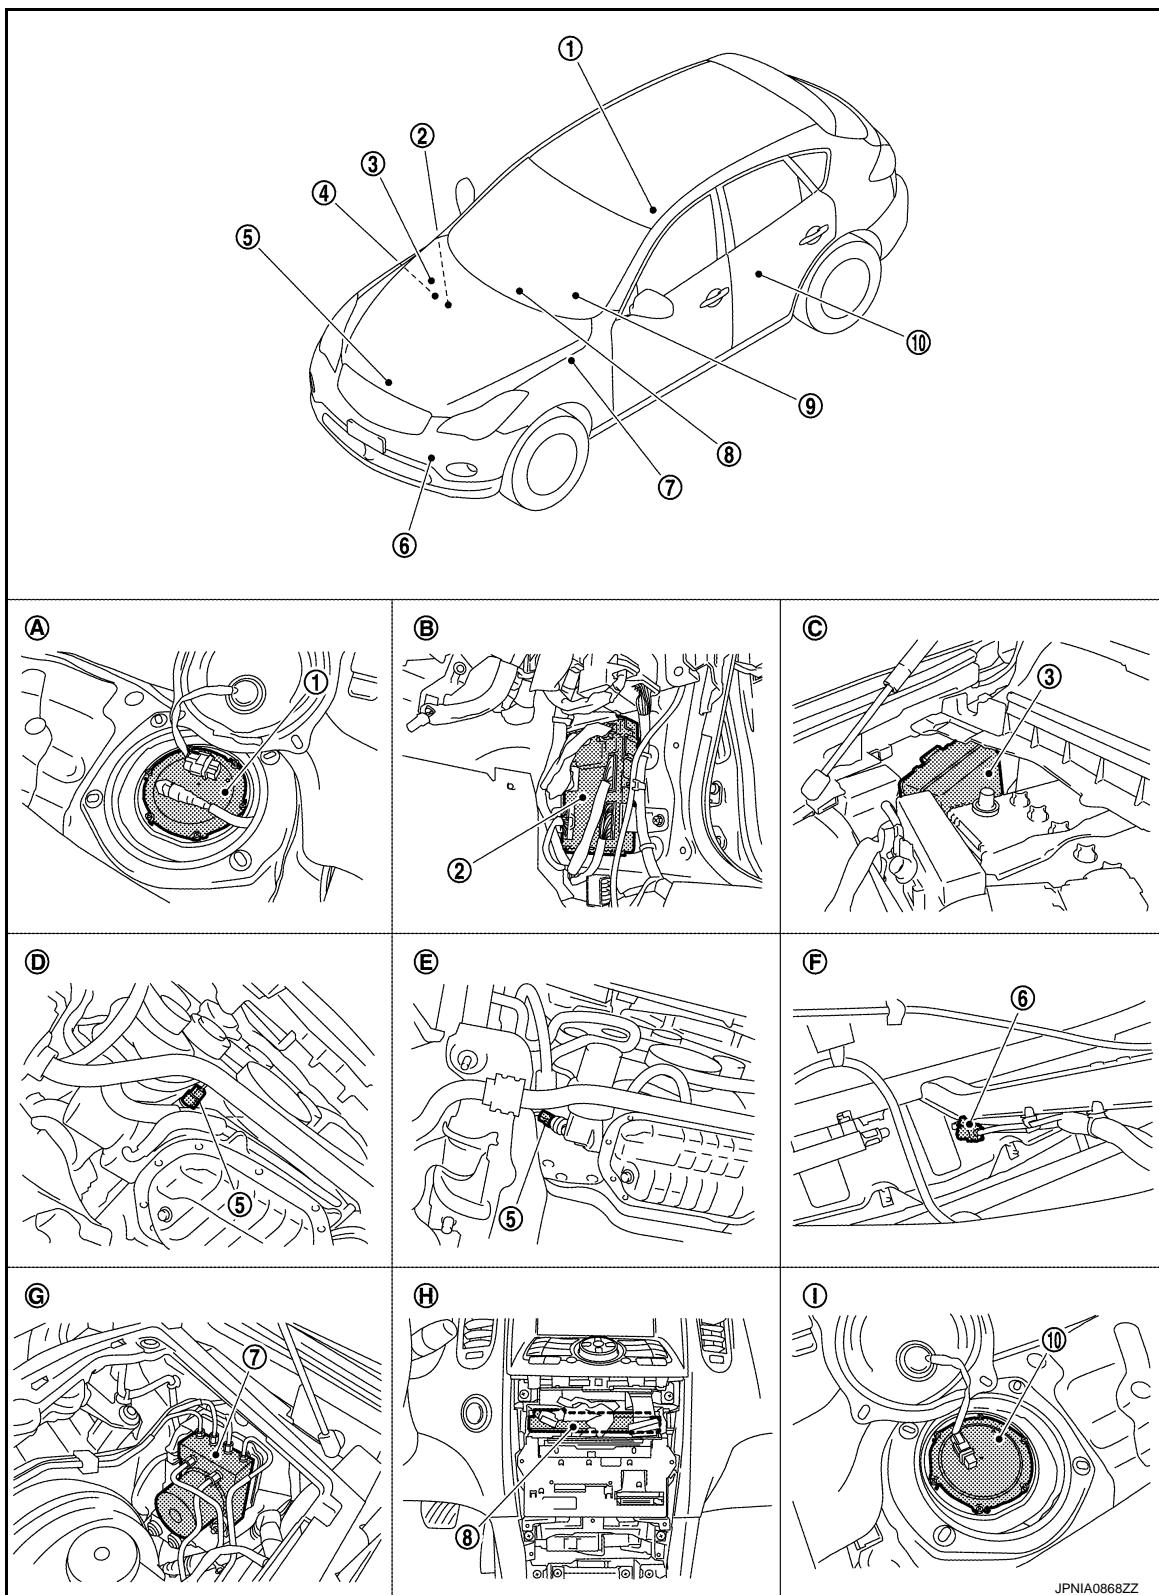

1. Fuel level sensor unit and fuel pump (main)
2. BCM
3. IPDM E/R
4. ECM
Refer to [EC-38, "Component Parts Location"](#).
5. Oil pressure switch
6. Ambient sensor

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

METER ILLUMINATION CONTROL : Component Description


INFOID:0000000006342671

Unit	Description
Combination meter	Controls the meter illumination with the illumination control switch signal from the meter control switch and the position light request signal from unified meter and A/C amp.
Unified meter and A/C amp.	Transmits the position light request signal received from BCM via CAN communication to the combination meter by means of communication.
Meter control switch	Transmits the following signals to the combination meter. • Illumination control switch signal (+) • Illumination control switch signal (-)

INFORMATION DISPLAY

INFORMATION DISPLAY : System Diagram

INFOID:0000000006342672

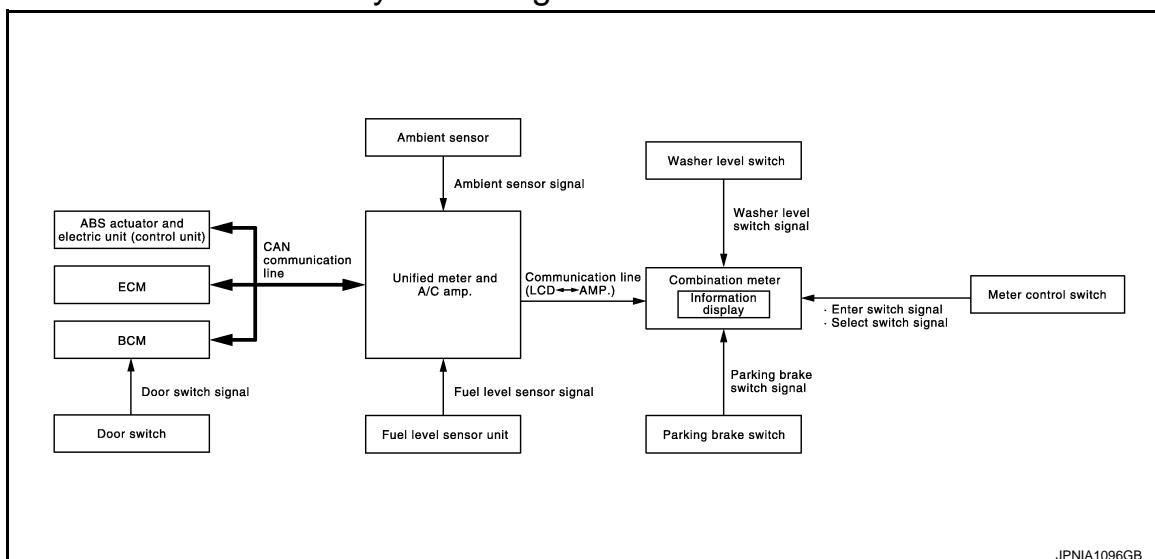

JPNIA1096GB

INFORMATION DISPLAY : System Description

INFOID:0000000006342673

DESCRIPTION

- The combination meter retrieves the information required for controlling the operations of the information display from the communication signals from the unified meter and A/C amp., etc.
- The combination meter incorporates a trip computer that displays the warning / information according to the information received from various units.

PARKING BRAKE RELEASE WARNING

The combination meter indicates parking brake release warning judged with the vehicle speed signal received from the unified meter and A/C amp. by means of communication line and the parking brake switch signal from the parking brake switch.

Warning Operation Condition

Parking brake release warning is judged if all of the following conditions are fulfilled

- Vehicle speed is 7 km/h (4.3 MPH) or higher
- Parking brake switch ON

LOW FUEL WARNING

METER SYSTEM

< SYSTEM DESCRIPTION >

The combination meter indicates low fuel warning judged with the fuel level sensor signal received from the unified meter and A/C amp.

Warning Operation Condition


- Fuel level: Approx. 12 ℥ (3-1/8 US gal, 2-5/8 Imp gal) or less

LOW WASHER FLUID WARNING

The combination meter indicates low washer fluid warning judged with the signal from the washer level switch.

Warning Operation Condition

- Indicates the warning when it is in washer level switch ON condition for 180 seconds or more. Release the warning when it is in washer level switch OFF condition for 30 seconds or more.

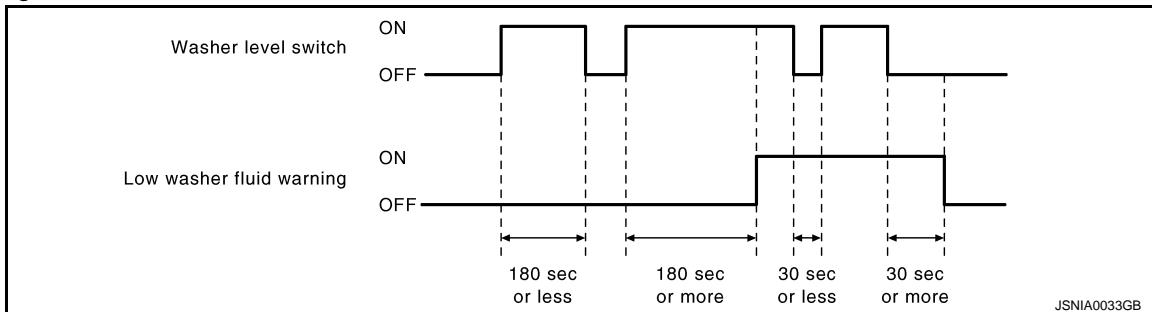

LOW TIRE PRESSURE WARNING

- The unified meter and A/C amp. receives remaining TPMS display signal from the BCM with CAN communication line.
- The unified meter and A/C amp. transmits remaining TPMS display signal to the combination meter with communication line.
- The combination meter indicates low tire pressure warning when receiving remaining TPMS display signal.
- The combination meter indicates low tire pressure warning judged with the TPMS display signal received from the unified meter and A/C amp.

For details, refer to [WT-7, "TIRE PRESSURE MONITORING SYSTEM : System Description"](#).

FUEL FILLER CAP WARNING

- The unified meter and A/C amp. receives remaining fuel filler cap warning display signal from the ECM with CAN communication line.
- The unified meter and A/C amp. transmits remaining fuel filler cap warning display signal to the combination meter with communication line.
- The combination meter indicates fuel filler cap warning when receiving remaining fuel filler cap warning display signal.
- The combination meter indicates fuel filler cap warning judged with the fuel filler cap warning display signal received from the unified meter and A/C amp.

For details, refer to [EC-109, "System Description"](#).

DOOR OPEN WARNING

The combination meter indicates door open warning judged with each door switch signal received from the unified meter and A/C amp. by means of communication line.

INSTANTANEOUS FUEL CONSUMPTION

- The unified meter and A/C amp. receives the fuel consumption monitor signal from ECM and the vehicle speed signal from the ABS actuator and electric unit (control unit) with CAN communication line.
- The unified meter and A/C amp. calculates the instantaneous fuel consumption according to the fuel consumption monitor signal and the vehicle speed signal received with CAN communication line, and transmits it to the combination meter.

MWI

AVERAGE FUEL CONSUMPTION

- The unified meter and A/C amp. receives the fuel consumption monitor signal from ECM and the vehicle speed signal from the ABS actuator and electric unit (control unit) with CAN communication line.
- The unified meter and A/C amp. calculates the average fuel consumption according to the fuel consumption monitor signal and the vehicle speed signal received with CAN communication line, and transmits it to the combination meter.
- The average fuel consumption displayed on the information display is uploaded at approximately 30-second intervals.

O

NOTE:

P

METER SYSTEM

< SYSTEM DESCRIPTION >

When turning ON the ignition switch after triggering a reset or removing/installing the battery, “——” is indicated until 30 seconds/500 m (0.31 miles) of driving.

AVERAGE VEHICLE SPEED

- The unified meter and A/C amp. receives the vehicle speed signal from the ABS actuator and electric unit (control unit) via CAN communication line.
- Measures the time during the ignition switch ON with the unified meter and A/C amp.
- The unified meter and A/C amp. calculates the average vehicle speed according to the above signals. These signals are transmitted to the combination meter with the communication line.
- The average vehicle speed displayed on the information display is uploaded at approximately 30-second intervals.

NOTE:

When turning ON the ignition switch after triggering a reset or removing/installing the battery, “——” is indicated until 30 seconds/500 m (0.31 miles) of driving.

TRAVEL TIME

Measures the time during the ignition switch ON with the unified meter and A/C amp, and transmits it to the combination meter by means of communication line.

TRAVEL DISTANCE

- The unified meter and A/C amp. transmits the vehicle speed signal from ABS actuator and electric unit (control unit) to the combination meter.
- The combination meter calculates the vehicle distance according to the vehicle speed signal. The vehicle distance is displayed.

POSSIBLE DRIVING DISTANCE

The unified meter and A/C amp. calculates possible driving distance according to the vehicle speed signal and fuel consumption monitor signal transmitted via CAN communication and the fuel level sensor signal transmitted from the fuel level sensor. These signals are transmitted to the combination meter with the communication line.

NOTE:

- When turning ON the ignition switch after removing/installing the battery, “——” is indicated until 30 seconds.
- “——” is displayed for 30 seconds after the ignition switch is OFF → ON. It is displayed simultaneously until the vehicle drives approximately 500 m (0.31 mile).
- The indicated values may not match each other when filling the fuel with the ignition switch ON. Refer to [MWI-130, "INFORMATION DISPLAY : Description"](#).

AMBIENT AIR TEMPERATURE

- The unified meter and A/C amp. receives the ambient sensor signal from the ambient sensor.
- The unified meter and A/C amp. calculates the ambient temperature according to the ambient sensor signal, and transmits it to the combination meter.
- The indicated temperature does not increase if the vehicle speed is less than 20 km/h (12 MPH).

NOTE:

- The ambient sensor input value that is displayed on “Data Monitor” of CONSULT-III is the value before the correction. It may not match the indicated temperature on the information display.
- Ambient temperature may be indicated higher than an actual temperature, depending on heat in the engine, a road surface temperature, and so on.

SETTING

Setting item list

Items		Setting range	Setting unit	Description
ALERT	TIME TO REST	No setting - 6 hours	30 minutes, [60 minutes]*	Time to rest is displayed on the information display if the vehicle reached the set travel distance.
	ICY	ON/OFF	—	Low outside temp is displayed on the information display if the ambient temperature is 3°C (37°F) or less.

METER SYSTEM

< SYSTEM DESCRIPTION >

Items	Setting range	Setting unit	Description
MAINTENANCE	ENGINE OIL	No setting - 18,500 miles, (No setting - 30,000 km)	250 miles (500 km), [500 miles (1000 km)]*
	OIL FILTER	No setting - 18,500 miles, (No setting - 30,000 km)	250 miles (500 km), [500 miles (1000 km)]*
	TIRE	No setting - 18,500 miles, (No setting - 30,000 km)	250 miles (500 km), [500 miles (1000 km)]*
	OTHER	No setting - 18,500 miles, (No setting - 30,000 km)	250 miles (500 km), [500 miles (1000 km)]*
DISPLAY	LANGUAGE	ENGLISH/FRANCAIS	—
	UNIT	US/METRIC	—

*: Press and hold the switch (1 second or more).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O


P

METER SYSTEM

< SYSTEM DESCRIPTION >

INFORMATION DISPLAY : Component Parts Location

INFOID:000000006342674

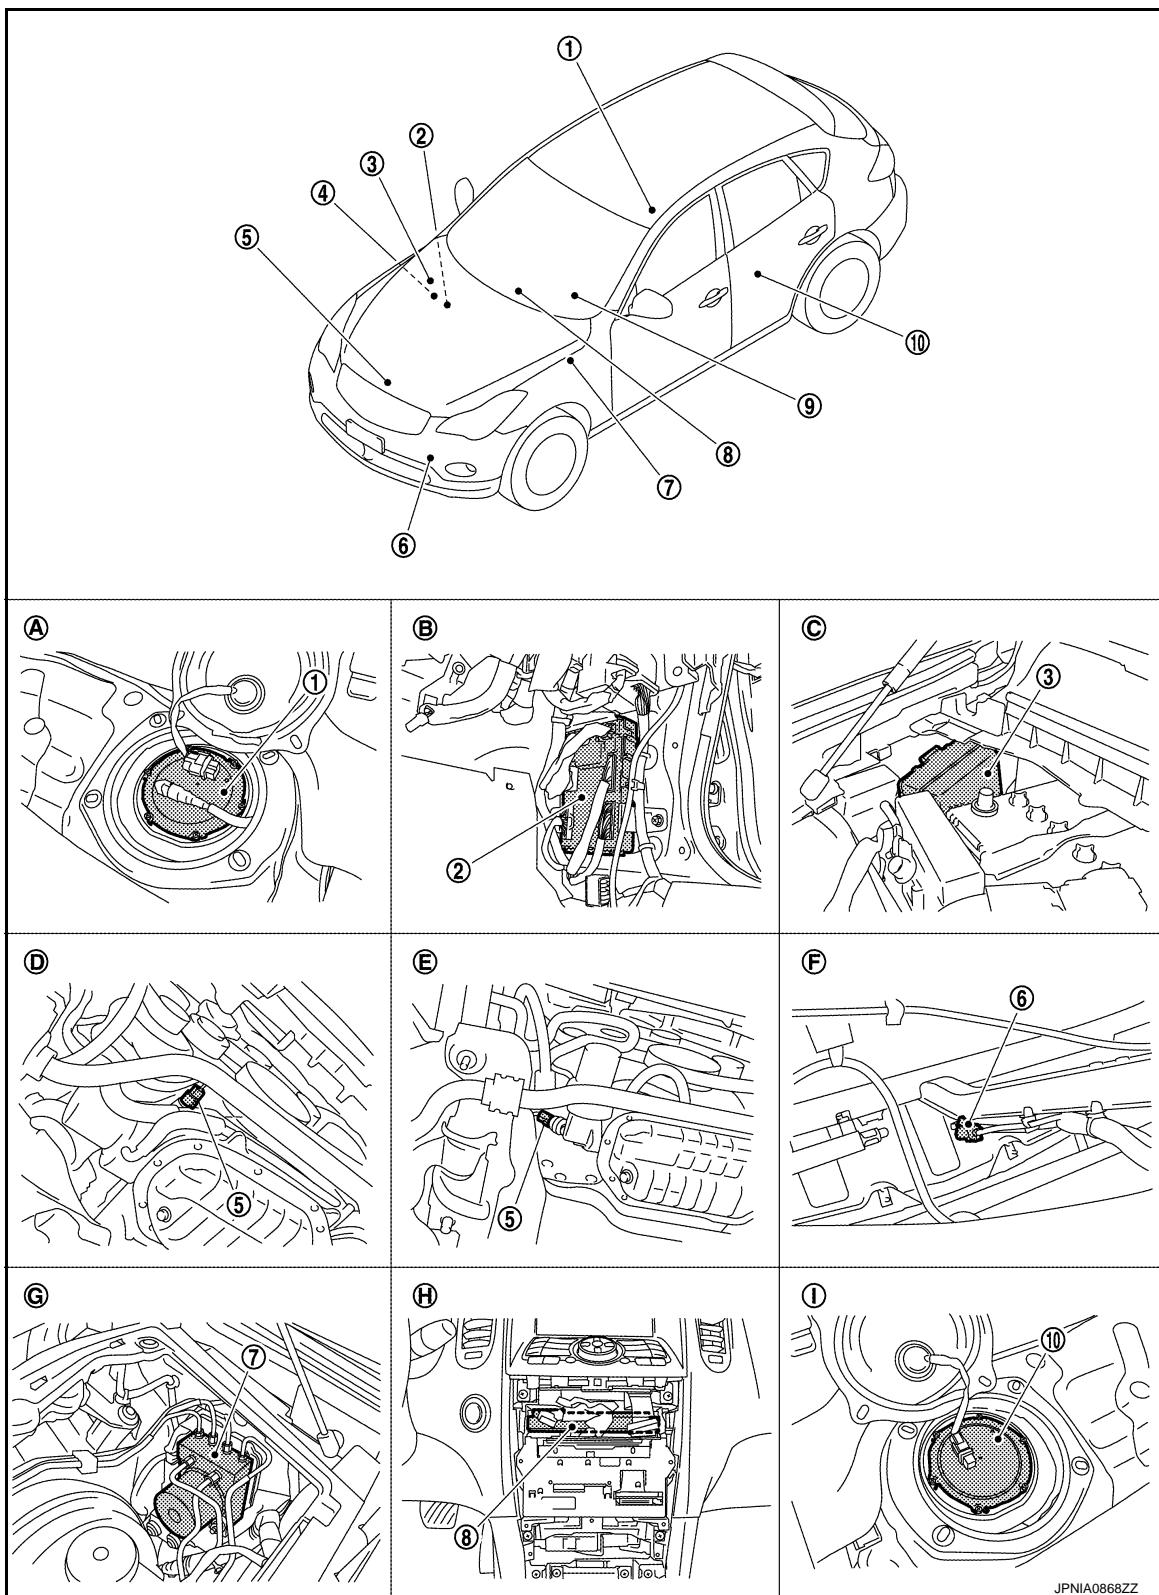

1. Fuel level sensor unit and fuel pump (main)
4. ECM
Refer to [EC-38, "Component Parts Location"](#).

2. BCM
5. Oil pressure switch

3. IPDM E/R
6. Ambient sensor

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|----------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. Unified meter and A/C amp. | 9. Combination meter |
| 10. Fuel level sensor unit (sub) | | |
| A. Rear seat (inside right) | B. Dash side finisher (passenger side) | C. Hoodledge cover (RH) |
| D. 2WD [oil pan (upper) RH side] | E. AWD (oil filter bracket part) | F. Condenser (front) |
| G. Hoodledge cover (LH) | H. Behind cluster lid C | I. Rear seat (inside left) |

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

INFORMATION DISPLAY : Component Description

INFOID:0000000006342675

Unit	Description
Combination meter	Controls the information display with the signals received from the unified meter and A/C amp. by means of communication and the signals from various switches and sensors.
Unified meter and A/C amp.	Transmits signals received from various units to the combination meter by means of communication.
Fuel level sensor unit	Refer to MWI-58, "Description" .
ECM	Transmits the following signals to the unified meter and A/C amp. via CAN communication. <ul style="list-style-type: none">• Engine speed signal• Fuel consumption monitor signal• Fuel filler cap warning display signal
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the unified meter and A/C amp. via CAN communication.
BCM	Transmits signals provided by various units to the unified meter and A/C amp. via CAN communication.
Meter control switch	Transmits the following signals to the combination meter. <ul style="list-style-type: none">• Enter switch signal• Select switch signal
Washer level switch	Transmits the washer level signal to the combination meter.
Parking brake switch	Refer to MWI-66, "Description" .
Door switch	Transmits the door switch signals to BCM.
Ambient sensor	Detects the ambient air temperature and transmits the ambient sensor signal to the unified meter and A/C amp.

COMPASS

< SYSTEM DESCRIPTION >


COMPASS

Description

INFOID:0000000006342676

DESCRIPTION

- This electronic compass is able to display 8 primary directions: N, NE, E, SE, S, SW, W, NW.
- The compass switch (1) is used to operate the compass.

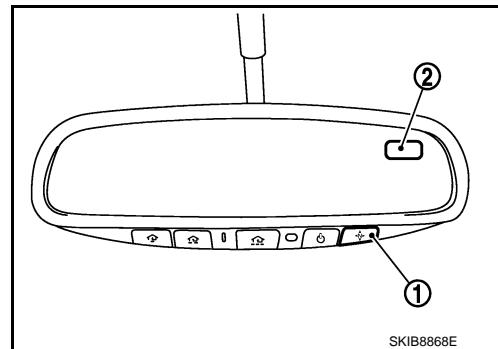

SKIB8868E

Switch Operation

Press	Compass is turned ON/OFF
Press and hold (for 3- 9 sec.)	Compass display (2) turns to zone variation change mode
Press and hold (for more than 9 sec.)	Compass display turns to calibration mode


- All standard compasses determine direction relative to magnetic north; however, this electronic compass is designed to display direction relative to true north.
- The difference between magnetic north and true north varies from place to place across the surface of the earth.
- This electronic compass must be "told" approximately where it is on the earth's surface so that the magnetic north reading can be properly converted into a true north display.
- To tell the electronic compass where it's at, the earth is separated into numbered "Zone Variances". The zone variance number in which the compass is to function must be entered into this electronic compass.
- Each zone is magnetically about 4.2° wide. Typically, anything under 22.5° total zone change is not noticed on the electronic compass display. However, over 22.5° , a reading may be off by one or more primary directions.
- On long trips, a vehicle may leave its original zone and enter one or more new zones. Generally, you do not need to reset the compass zone if you travel between 3 or 4 zones, such as business travel or vacation. The typical driver will not notice any difference on the display within 3 or 4 zones. However, if the vehicle is "permanently" moved to a new location, it is recommended that the compass zone be reset.

ZONE VARIATION SETTING PROCEDURE

COMPASS

< SYSTEM DESCRIPTION >

1. Press and hold the compass switch for 3 – 9 seconds.
2. The current zone setting appears on the compass display.
3. Find the current geographical location number in the zone variation chart.
4. Select the new zone number. (Press the compass switch until the new zone number appears on the compass display.)
5. After select the new zone number, the compass display will automatically shows a direction within a few seconds.
6. Perform the following calibration procedure for more accurate indications.

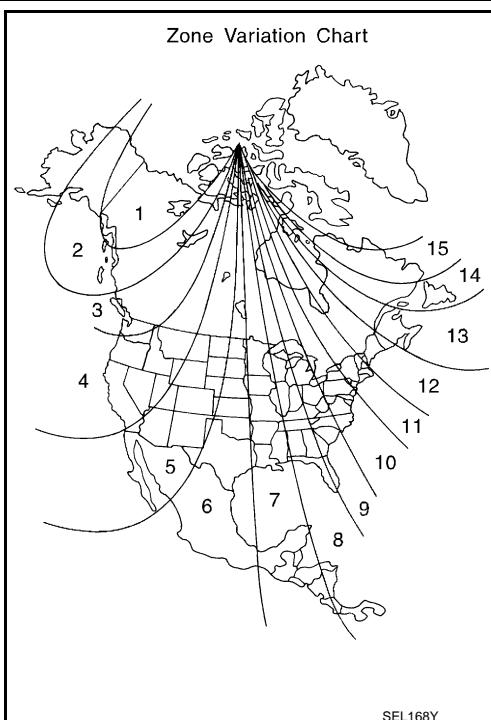

CALIBRATION PROCEDURE

NOTE:

The compass calibrates itself under normal driving conditions. However, occasional circumstances may cause the compass to operate inaccurately. Example: Driving from rural (wide open) areas to crowded city areas, or if an aftermarket (i.e., non original equipment) antenna with a magnetic base is attached to the vehicle. Calibrate the mirror compass if the display shows only one direction or a limited number of directions.

NOTE:

- If "magnetic hats" are used in the dealership for vehicle identification, remove the hat from the vehicle before performing the following steps. Do not put the hat back on the vehicle after the procedure is completed.
- Drive the vehicle to an open level area; away from large metallic objects, structures, and overhead power lines.
- Turn off "non-essential" electrical accessories (rear window defrost, heater/air conditioning, wipers) and close the doors.

1. Verify the correct compass zone setting for the geographical location.
2. Press and hold the compass switch for more than 9 seconds.
3. "C" is displayed on the compass display, when calibration starts.
4. Drive slowly [less than 8 km/h (5 MPH)] in a circle until the "C / CAL" is replaced with primary headings (N, NE, E, SE, S, SW, W, or NW).

NOTE:

This will require driving at least 2 complete 360 degree circles; 3 complete circles may be required.

5. The compass calibration procedure is now complete. The compass should operate normally.

NOTE:

If at any time the compass continually displays the incorrect direction or the reading is erratic or locked, repeat the calibration procedure.

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O
P


COMPASS

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000006342677

- 1 : Compass switch
- 2 : Compass display

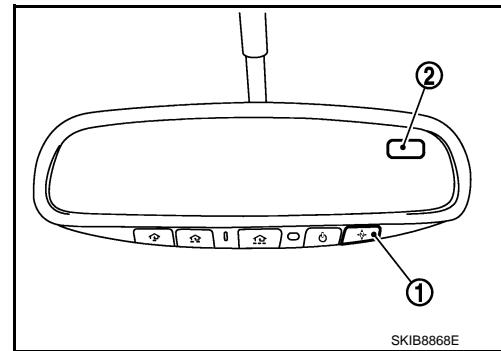

SKIB8868E

Special Repair Requirement

INFOID:000000006342678

1 .PERFORM ZONE VARIATION SETTING

Perform the zone variation setting. Refer to [MWI-36, "Description"](#).

>> GO TO 2.

2 .PERFORM CALIBRATION

Perform the calibration. Refer to [MWI-36, "Description"](#).

>> Setting completion

CLOCK


< SYSTEM DESCRIPTION >

CLOCK

Component Parts Location

INFOID:000000006342679

1 : Clock

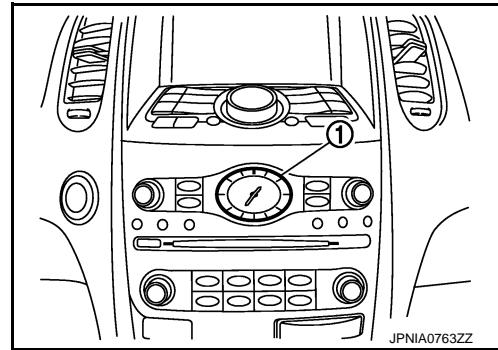

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (METER)

Diagnosis Description

INFOID:0000000006342680

SELF-DIAGNOSIS MODE

- Information display LCD segment operation can be checked in self-diagnosis mode.
- Meters/gauges can be checked in self-diagnosis mode.

OPERATION PROCEDURE

1. Turn ignition switch ON, and switch the trip meter to "trip A" or "trip B".

NOTE:


If the diagnosis function is activated with "trip A" displayed, the mileage on "trip A" is reset to "0000.0".
(The same way for "trip B".)

2. Turn ignition switch OFF.

3. While pressing the trip A/B reset switch (1), turn ignition switch ON again.

4. Make sure that the trip meter displays "0000.0".


5. Press the trip A/B reset switch at least 3 times. (Within 7 seconds after the ignition switch is turned ON.)

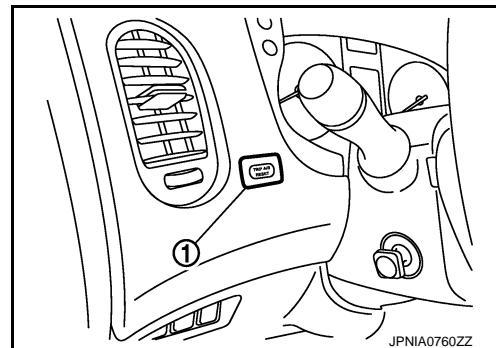

JPNIA0760ZZ

6. The unified meter control unit is turned to self-diagnosis mode.

- Displays "888888" (1) and "8888.8" (2) in the information display LCD (3) for approximately 5 seconds and then blinks the segment dots of the information display LCD alternately.

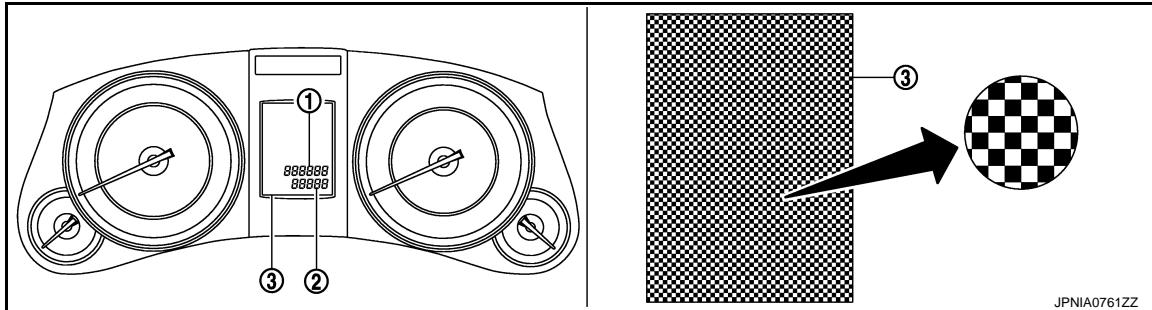

JPNIA0761ZZ

- Water temperature gauge and fuel gauge return to zero, and at the same time.


NOTE:

- Check combination meter power supply and ground circuit when self-diagnosis mode of combination meter does not start. Replace combination meter if normal.
- If any of the segments is not displayed, replace combination meter.

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

7. Each meter activates during pressing trip A/B reset switch.

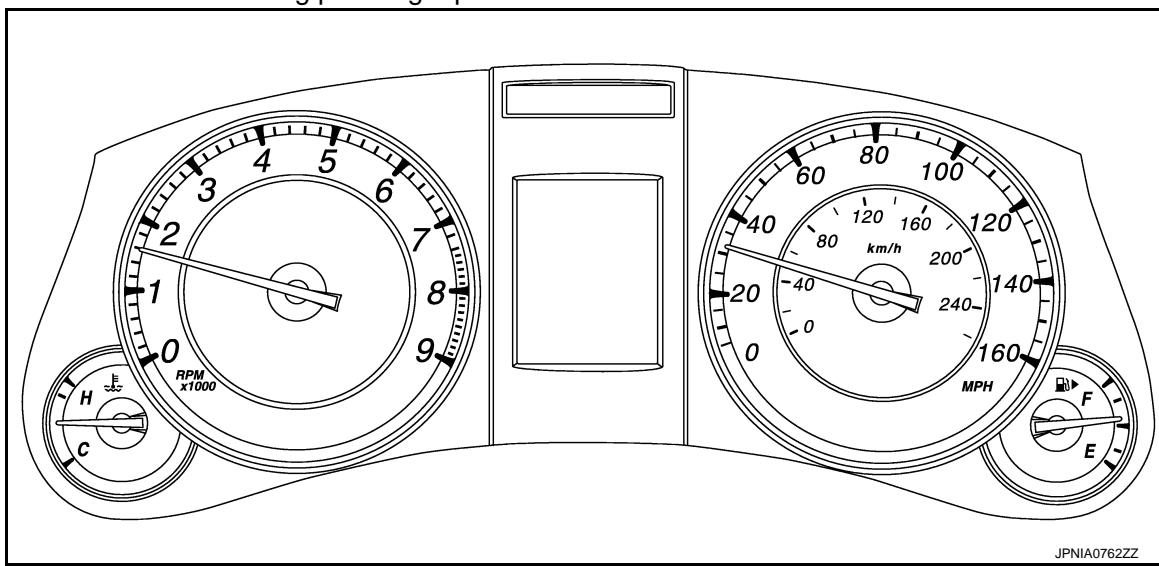

NOTE:

- If any of the meter and gages is not activated, replace combination meter.
- The figure is reference.

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O
P

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

CONSULT-III Function (METER/M&A)

INFOID:0000000006342681

CONSULT-III APPLICATION ITEMS

CONSULT-III can perform the following diagnosis modes with CAN communication with the unified meter and A/C amp.

System	Diagnosis mode	Description
METER/M&A	Self Diagnostic Result	Unified meter and A/C amp. checks the conditions and displays memorized error.
	Data Monitor	Displays unified meter and A/C amp. input/output data in real time.
	Ecu Identification	The unified meter and A/C amp. part number is displayed.

SELF DIAG RESULT

Refer to [MWI-106, "DTC Index".](#)

DATA MONITOR

Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER [km/h] or [mph]	X	<p>Value of vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line.</p> <p>NOTE: 655.35 is displayed when the malfunction signal is received.</p>
SPEED OUTPUT [km/h] or [mph]	X	<p>Vehicle speed signal value transmitted to other units with CAN communication line.</p> <p>NOTE: 655.35 is displayed when the malfunction signal is received.</p>
ODO OUTPUT [km/h] or [mph]		Odometer signal value transmitted to other units with CAN communication line.
TACHO METER [rpm]	X	<p>Value of the engine speed signal received from ECM with CAN communication line.</p> <p>NOTE: 8191.875 is displayed when the malfunction signal is received.</p>
FUEL METER [L]	X	Fuel level indicated on combination meter.
W TEMP METER [°C] or [°F]	X	<p>Value of engine coolant temperature signal received from ECM with CAN communication line.</p> <p>NOTE: 215 is displayed when the malfunction signal is input.</p>
FUEL CAP W/L [On/Off]		Status of fuel filler cap warning display detected from fuel filler cap warning display signal received from ECM via CAN communication.
ABS W/L [On/Off]		Status of ABS warning lamp judged from ABS warning lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.
VDC/TCS IND [On/Off]		Status of VDC OFF indicator lamp judged from VDC OFF indicator lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.
SLIP IND [On/Off]		Status of SLIP indicator lamp judged from SLIP indicator lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.
BRAKE W/L [On/Off]		<p>Status of brake warning lamp judged from brake warning lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.</p> <p>NOTE: Displays "Off" if the brake warning lamp is illuminated when the valve check starts, the parking brake switch is turned ON or the brake fluid level switch is turned ON.</p>
DOOR W/L [On/Off]		Status of door warning judged from door switch signal received from BCM with CAN communication line.

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
HI-BEAM IND [On/Off]		Status of high beam indicator lamp judged from high beam request signal received from BCM with CAN communication line.
TURN IND [On/Off]		Status of turn indicator lamp judged from turn indicator signal received from BCM with CAN communication line.
FR FOG IND [Off]		Status of front fog light indicator lamp detected from front fog light request signal is received from BCM via CAN communication.
RR FOG IND [Off]		This item is displayed, but cannot be monitored.
LIGHT IND [On/Off]		Status of tail lamp indicator lamp judged from position light request signal received from BCM with CAN communication line.
OIL W/L [On/Off]		Status of oil pressure warning lamp judged from oil pressure switch signal received from IPDM E/R with CAN communication line.
MIL [On/Off]		Status of malfunction indicator lamp judged from malfunctioning indicator lamp signal received from ECM with CAN communication line.
GLOW IND [Off]		This item is displayed, but cannot be monitored.
C-ENG2 W/L [Off]		This item is displayed, but cannot be monitored.
CRUISE IND [On/Off]		Status of CRUISE indicator judged from ASCD status signal received from ECM with CAN communication line.
SET IND [On/Off]		<ul style="list-style-type: none"> • Status of SET indicator judged from ASCD status signal received from ECM with CAN communication line. • Status of SET indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
CRUISE W/L [On/Off]		Status of CRUISE warning lamp judged from ICC warning lamp signal received from ICC sensor integrated unit with CAN communication line.
BA W/L [Off]		Status of IBA OFF indicator lamp judged from IBA OFF indicator lamp signal received ICC sensor integrated unit with CAN communication line.
ATC/T-AMT W/L [On/Off]		Status of A/T check warning lamp judged from A/T check indicator signal received from TCM with CAN communication line.
4WD W/L [On/Off]		Status of AWD warning lamp judged from AWD warning lamp signal received from AWD control unit with CAN communication line.
4WD LOCK IND [Off]		This item is displayed, but cannot be monitored.
FUEL W/L [On/Off]		Low-fuel warning status judged by the identified fuel level.
WASHER W/L [On/Off]		Status of washer warning judged from washer level switch input to combination meter.
AIR PRES W/L [On/Off]		Status of low tire pressure warning lamp judged from tire pressure signal received from BCM with CAN communication line.
KEY G/Y W/L [On/Off]		Status of key warning lamp (G/Y) judged from key warning signal received from BCM with CAN communication line.
AFS OFF IND [On/Off]		Status of AFS OFF indicator lamp judged from AFS OFF indicator lamp signal received from AFS control unit with CAN communication line.
4WAS/RAS W/L [Off]		This item is displayed, but cannot be monitored.
DDS W/L [Off]		This item is displayed, but cannot be monitored.
LANE W/L [On/Off]		Status of lane departure warning lamp judged from lane departure warning lamp signal received from lane camera unit with CAN communication line.
LDP IND [On/Off]		Status of LDP ON indicator lamp judged from LDP ON indicator lamp signal received from lane camera unit with CAN communication line.

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
DCA IND [On/Off]		Status of DCA switch indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
BSW W/L [On/Off]		Status of BSW warning lamp judged from BSW warning lamp signal received from BSW control module with CAN communication line.
LCD [B&P N, B&P I, ID NG, ROTAT, SFT P, INSRT, BATT, NO KY, OUTKY, LK WN]		Displays status of Intelligent Key system warning judged from meter display signal received from BCM with CAN communication line.
ACC TARGET [On/Off]		Status of vehicle ahead detection indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
ACC DISTANCE [Off, SHORT, MID, LONG]		Status of set distance indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
ACC OWN VHL [On/Off]		Status of own vehicle indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
ACC SET SPEED		Status of set vehicle speed indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
ACC UNIT [On/Off]		Status of display unit judged from meter display signal received from ICC sensor integrated unit with CAN communication line.
SHIFT IND [P, R, N, D, L, M1, M2, M3, M4, M5, M6, M7]		Status of shift position indicator judged from shift position signal and manual mode indicator signal received from TCM with CAN communication line.
O/D OFF SW [Off]		This item is displayed, but cannot be monitored.
AT S MODE SW [On/Off]		Status of snow mode switch.
AT P MODE SW [Off]		This item is displayed, but cannot be monitored.
M RANGE SW [On/Off]		Status of manual mode switch.
NM RANGE SW [On/Off]		Status of non-manual mode switch.
AT SFT UP SW [On/Off]		Status of manual mode shift up switch.
AT SFT DWN SW [On/Off]		Status of manual mode shift down switch.
ST SFT UP SW [Off]		This item is displayed, but cannot be monitored.
ST SFT DWN SW [Off]		This item is displayed, but cannot be monitored.
COMP F/B SIG [On/Off]		A/C compressor activation condition that ECM judges according to the water temperature and the acceleration degree.
4WD LOCK SW [Off]		This item is displayed, but cannot be monitored.
PKB SW [On/Off]		Status of parking brake switch.
BUCKLE SW [On/Off]		Status of seat belt buckle switch (driver side).
BRAKE OIL SW [On/Off]		Status of brake fluid level switch.
DISTANCE [km]		Value of possible driving distance calculated by unified meter and A/C amp.

DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
OUTSIDE TEMP [°C] or [°F]		<p>Ambient air temperature value converted from ambient sensor signal received from ambient sensor.</p> <p>NOTE: This may not match with the temperature value indicated on the information display. (Because the information display value is a corrected value from the ambient sensor input value.)</p>
FUEL LOW SIG [On/Off]		Status of fuel level low warning signal to output to AV control unit with CAN communication line.
BUZZER [On/Off]	X	Buzzer status (in the combination meter) is judged with the buzzer output signal received from each unit with CAN communication line and the warning output condition of the combination meter.

NOTE:

Some items are not available according to vehicle specification.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000006342682

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-15, "How to Use CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000006342683

DTCT DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
U1000	CAN COMM CIRCUIT	When unified meter and A/C amp. is not transmitting or receiving CAN communication signal for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:000000006342684

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of "METER/M&A".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-42, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

Description

INFOID:0000000006342685

Initial diagnosis of unified meter and A/C amp.

DTC Logic

INFOID:0000000006342686

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
U1010	CONTROL UNIT (CAN)	If any malfunction is detected during initial diagnosis of unified meter and A/C amp. CAN controller	Unified meter and A/C amp.

Diagnosis Procedure

INFOID:0000000006342687

1.REPLACE UNIFIED METER AND A/C AMP.

When DTC "U1010" is detected, replace unified meter and A/C amp.

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

B2201 COMMUNICATION ERROR 1

< DTC/CIRCUIT DIAGNOSIS >

B2201 COMMUNICATION ERROR 1

Description

INFOID:0000000006342688

The communication line (LCD <-> AMP.) is used to communicate signals between the combination meter and the unified meter and A/C amp. in order to control the information display.

DTC Logic

INFOID:0000000006342689

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2201	COMM ERROR 1	If a communication error is present in the communication line (LCD <-> AMP.) for 2 seconds or more	Communication line (LCD <-> AMP.) circuit

Diagnosis Procedure

INFOID:0000000006342690

1. CHECK CONNECTOR

Check combination meter, unified meter and A/C amp. and terminals (combination meter side, unified meter and A/C amp. side, and harness side) for looseness or bent.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal or connector.

2. CHECK CONTINUITY COMMUNICATION CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and unified meter and A/C amp. connector.
3. Check continuity between combination meter harness connector and unified meter and A/C amp. harness connector.

Combination meter		Unified meter and A/C amp.		Continuity
Connector	Terminal	Connector	Terminal	
M53	24	M66	14	Existed
	25		34	

4. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M53	24		
	25		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK UNIFIED METER AND A/C AMP. OUTPUT VOLTAGE

1. Connect unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Check voltage between unified meter and A/C amp. harness connector and ground.

B2201 COMMUNICATION ERROR 1

< DTC/CIRCUIT DIAGNOSIS >

Terminals		Voltage (Approx.)
(+)	(-)	
Unified meter and A/C amp.		
Connector	Terminal	Ground
M66	14	12 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace unified meter and A/C amp.

4. CHECK COMBINATION METER OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Connect combination meter connector.
4. Turn ignition switch ON.
5. Check voltage between combination meter harness connector and ground.

Terminal		Voltage (Approx.)
(+)	(-)	
Combination meter		
Connector	Terminal	Ground
M53	25	5 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination meter.

A

B

C

D

E

F

G

H

J

K

L

M

MWI

O

P

B2202 COMMUNICATION ERROR 2

< DTC/CIRCUIT DIAGNOSIS >

B2202 COMMUNICATION ERROR 2

Description

INFOID:0000000006342691

The communication line (METER <-> AMP.) is used to communicate signals between the combination meter and the unified meter and A/C amp. in order to control the information display.

DTC Logic

INFOID:0000000006342692

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2202	COMM ERROR 2	If a communication error is present in the communication line (METER <-> AMP.) for 2 seconds or more	Communication line (METER <-> AMP.) circuit

Diagnosis Procedure

INFOID:0000000006342693

1. CHECK CONNECTOR

Check combination meter, unified meter and A/C amp. and terminals (combination meter side, unified meter and A/C amp. side, and harness side) for looseness or bent.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal or connector.

2. CHECK CONTINUITY COMMUNICATION CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and unified meter and A/C amp. connector.
3. Check continuity between combination meter harness connector and unified meter and A/C amp. harness connector.

Combination meter		Unified meter and A/C amp.		Continuity
Connector	Terminal	Connector	Terminal	
M53	2	M66	27	Existed
	3		7	

4. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		Not existed
M53	2		
	3		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK UNIFIED METER AND A/C AMP. OUTPUT VOLTAGE

1. Connect unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Check voltage between unified meter and A/C amp. harness connector and ground.

B2202 COMMUNICATION ERROR 2

< DTC/CIRCUIT DIAGNOSIS >

Terminals		Voltage (Approx.)	
(+)	(-)		
Unified meter and A/C amp.			
Connector	Terminal		
M66	27	Ground	5 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace unified meter and A/C amp.

4. CHECK COMBINATION METER OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Connect combination meter connector.
4. Turn ignition switch ON.
5. Check voltage between combination meter harness connector and ground.

Terminals		Voltage (Approx.)	
(+)	(-)		
Combination meter			
Connector	Terminal		
M53	3	Ground	5 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination meter.

A

B

C

D

E

F

G

H

J

K

L

M

MWI

O

P

B2205 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

B2205 VEHICLE SPEED

Description

INFOID:0000000006342694

Vehicle speed signal is transmitted from ABS actuator and electric unit (control unit) via CAN communication to unified meter and A/C amp.

DTC Logic

INFOID:0000000006342695

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2205	VEHICLE SPEED	If the abnormal vehicle speed signal is input from ABS actuator and electric unit (control unit) for 2 seconds or more	<ul style="list-style-type: none">• Wheel sensor• ABS actuator and electric unit (control unit)

Diagnosis Procedure

INFOID:0000000006342696

1. PERFORM SELF-DIAGNOSIS OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform "Self Diagnostic Result" of ABS actuator and electric unit (control unit), and repair or replace malfunctioning parts.

>> Refer to [BRC-31, "CONSULT-III Function"](#).

B2267 ENGINE SPEED

< DTC/CIRCUIT DIAGNOSIS >

B2267 ENGINE SPEED

Description

INFOID:0000000006342697

The engine speed signal is transmitted from ECM to the unified meter and A/C amp. with CAN communication.

DTC Logic

INFOID:0000000006342698

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2267	ENGINE SPEED	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more	<ul style="list-style-type: none">• Crankshaft position sensor (POS)• ECM

Diagnosis Procedure

INFOID:0000000006342699

1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnostic Result" of ECM, and repair or replace malfunctioning parts.

>> Refer to [EC-136, "CONSULT-III Function".](#)

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

B2268 WATER TEMP

< DTC/CIRCUIT DIAGNOSIS >

B2268 WATER TEMP

Description

INFOID:0000000006342700

The engine coolant temperature signal is transmitted from ECM to the unified meter and A/C amp. via CAN communication.

DTC Logic

INFOID:0000000006342701

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2268	WATER TEMP	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more	<ul style="list-style-type: none">• Engine coolant temperature sensor• ECM

Diagnosis Procedure

INFOID:0000000006342702

1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnosis Result" of ECM, and repair or replace malfunctioning parts.

>> Refer to [EC-136, "CONSULT-III Function"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

COMBINATION METER : Diagnosis Procedure

INFOID:000000006342703

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	11
Ignition switch ON or START	4

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between combination meter harness connector and ground.

Terminals			Ignition switch position	Value (Approx.)
(+)		(-)		
Combination meter	Terminal	Signal name		
M53	1	Battery power supply	Ground	OFF
	21	Ignition signal		ON

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between combination meter and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector and ground.

Combination meter	Terminal	Ground	Continuity
Connector			
M53	5		
	15		Existed
	22		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

UNIFIED METER AND A/C AMP.

UNIFIED METER AND A/C AMP. : Diagnosis Procedure

INFOID:000000006342703

1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	11
Ignition switch ACC or ON	19
Ignition switch ON or START	3

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2.CHECK POWER SUPPLY CIRCUIT

Check voltage between unified meter and A/C amp. harness connector and ground.

Terminals			Ignition switch position	Value (Approx.)
(+) Unified meter and A/C amp.		(-) Terminal		
M67	54	Battery power supply	Ground	OFF
	41	ACC power supply		ACC
	53	Ignition signal		ON

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between unified meter and A/C amp. and fuse.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between unified meter and A/C amp. harness connector and ground.

Unified meter and A/C amp.		Ground	Continuity
Connector	Terminal		
M67	55		
	71		Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000006860228

1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C
	50
	51

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Terminals		Voltage (Approx.)	
(+)			
IPDM E/R			
Connector	Terminal		
E4	1	Ground	
		Battery voltage	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Continuity
Connector	Terminal	Ground
E5	12	
E6	41	

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FUEL LEVEL SENSOR SIGNAL CIRCUIT

Description

INFOID:0000000006342706

The fuel level sensor unit and fuel pump (main) and the fuel level sensor unit (sub) detect the fuel level in the fuel tank and transmit the fuel gauge signal to the unified meter and A/C amp.

Component Function Check

INFOID:0000000006342707

1. CHECK UNIFIED METER AND A/C AMP. OUTPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and compare the "FUEL METER" monitor value with the fuel gauge reading on the combination meter.

Fuel gauge pointer	Reference value of data monitor [L]
Full	Approx. 73.8
Three quarters	Approx. 59.2
Half	Approx. 40.7
A quarter	Approx. 20.9
Empty	Approx. 8.8

Does monitor value match fuel gauge reading?

- YES >> INSPECTION END
NO >> Replace combination meter.

Diagnosis Procedure

INFOID:0000000006342708

1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between unified meter and A/C amp. harness connector and ground.

Terminals		Voltage (Approx.)	
(+) (-)			
Unified meter and A/C amp.			
Connector	Terminal		
M67	42	Ground	

(V)

JSNIA0013GB

Does it match fuel gauge reading?

- YES >> GO TO 2.
NO >> Replace unified meter and A/C amp.

2. CHECK FUEL LEVEL SENSOR (SUB) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector and fuel level sensor unit (sub) connector.
3. Check continuity between unified meter and A/C amp. harness connector and fuel level sensor unit (sub) harness connector.

Unified meter and A/C amp.		Fuel level sensor unit (sub)		Continuity
Connector	Terminal	Connector	terminal	
M67	42	B21	1	Existed

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

- Check continuity between unified meter and A/C amp. harness connector and ground.

Unified meter and A/C amp.		Ground	Continuity
Connector	Terminal		Not existed
M67	42		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK FUEL LEVEL SENSOR (MAIN-SUB) CIRCUIT

- Disconnect fuel level sensor unit and fuel pump (main) connector.
- Check continuity between fuel level sensor unit (sub) harness connector and fuel level sensor unit and fuel pump (main) harness connector.

Fuel level sensor unit (sub)		Fuel level sensor unit and fuel pump (main)		Continuity
Connector	Terminal	Connector	terminal	
B21	2	B22	2	Existed

- Check continuity between fuel level sensor unit (sub) harness connector and ground.

Fuel level sensor unit (sub)		Ground	Continuity
Connector	Terminal		Continuity
B21	2		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4.CHECK FUEL LEVEL SENSOR (MAIN) CIRCUIT

Check continuity between fuel level sensor unit and fuel pump (main) harness connector and unified meter and A/C amp. harness connector.

Fuel level sensor unit and fuel pump (main)		Unified meter and A/C amp.		Continuity
Connector	Terminal	Connector	terminal	
B22	5	M67	58	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:0000000006342709

1.REMOVE FUEL LEVEL SENSOR UNIT

Remove the fuel level sensor unit. Refer to [FL-5, "Removal and Installation".](#)

>> GO TO 2.

2.CHECK FUEL LEVEL SENSOR UNIT AND FUEL PUMP (MAIN)


FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Check the resistance between fuel level sensor unit and fuel pump (main).

Fuel level sensor unit and fuel pump (main)		Condition*	Resistance (Approx.)
Terminal			
2	5	Full (A)	3 Ω
		Empty (B)	80 Ω

*: When float rod is contact with stopper.

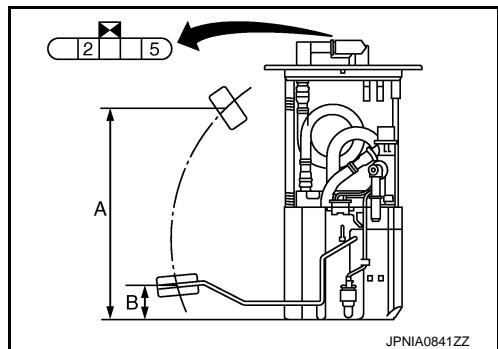

Standard float position

Float position [mm (in)]*	
Full (A)	Approx. 194 (7.64)
Empty (B)	Approx. 30 (1.18)

*: When float rod is contact with stopper.

Is the inspection result normal?

YES >> GO TO 3.


NO >> Replace fuel level sensor unit and fuel pump (main).

3.CHECK FUEL LEVEL SENSOR UNIT (SUB)

Inspect the resistance of fuel level sensor unit (sub).

Fuel level sensor unit (sub)		Condition*	Resistance (Approx.)
Terminal			
1	2	Full (A)	3 Ω
		Empty (B)	43 Ω

*: When float rod is contact with stopper.

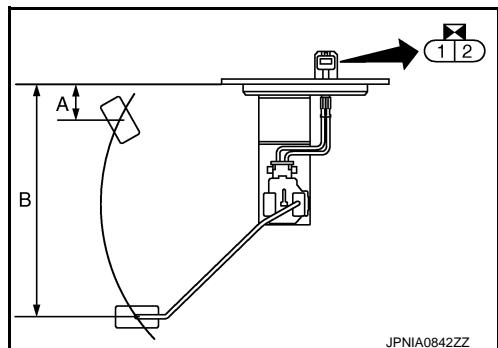

Standard float position

Float position [mm (in)]*	
Full (A)	Approx. 32 (1.26)
Empty (B)	Approx. 203 (7.99)

*: When float rod is contact with stopper.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace fuel level sensor unit (sub).

METER CONTROL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

METER CONTROL SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000006342710

Transmits the following signals to the combination meter.

- + (Illumination control) switch signal (+)
- - (Illumination control) switch signal (-)
- (select) switch signal
- (enter) switch signal

Diagnosis Procedure

INFOID:0000000006342711

1. CHECK METER CONTROL SWITCH INPUT SIGNAL

1. Turn ignition switch ON.
2. Measure voltage between the following terminals of the combination meter.

Combination meter			Condition	Voltage (Approx.)
Connector	Terminal			
	(+)	(-)		
M53	36	16	When (select) switch is pressed	0 V
			Other than the above	5 V
	37	16	When (enter) switch is pressed	0 V
			Other than the above	5 V
	39	16	When - (illumination control) switch is pressed	0 V
			Other than the above	5 V
	40	16	When + (illumination control) switch is pressed	0 V
			Other than the above	5 V

Is the inspection result normal?

YES >> INSPECTION END
NO >> GO TO 2.

2. CHECK METER CONTROL SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the combination meter and meter control switch connectors.
3. Check continuity between combination meter harness connector and meter control switch harness connector.

Combination meter		Meter control switch		Continuity
Connector	Terminal	Connector	Terminal	
M53	16	M54	2	Existed
	36		6	
	37		7	
	39		3	
	40		1	

4. Check continuity between combination meter harness connector and ground.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

METER CONTROL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Combination meter		Ground	Continuity
Connector	Terminal		
M53	16		
	36		
	37		
	39		
	40		Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:000000006342712

1. CHECK METER CONTROL SWITCH UNIT

1. Turn ignition switch OFF.
2. Disconnect the meter control switch connector.
3. Check continuity between the following terminals of the meter control switch.

Combination meter		Operation and status		Continuity
Connector	Terminal			
M54	6	2	Press ● (select) switch	Existed
			Other than the above	Not existed
	7	2	Press □ (enter) switch	Existed
			Other than the above	Not existed
	3	2	Press ⚡- (illumination control) switch	Existed
			Other than the above	Not existed
	1	2	Press ⚡+ (illumination control) switch	Existed
			Other than the above	Not existed

Is inspection result normal?

YES >> INSPECTION END

NO >> Replace meter control switch.

TRIP A/B RESET SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

TRIP A/B RESET SWITCH SIGNAL CIRCUIT

Description

Transmits the trip A/B reset switch signals to the combination meter.

Diagnosis Procedure

1.CHECK TRIP A/B RESET SWITCH INPUT SIGNAL

1. Turn ignition switch ON.
2. Measure voltage between the combination meter harness connector terminals.

Combination meter		Condition		Voltage (Approx.)
Connector	Terminal	(+)	(-)	
M53	38	16	When trip A/B reset switch is pressed	0 V
			Other than the above	5 V

Is the inspection result normal?

YES >> INSPECTION END
NO >> GO TO 2.

2.CHECK TRIP A/B RESET SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the combination meter and meter control switch connectors.
3. Check continuity between combination meter harness connector and trip A/B reset switch harness connector.

Combination meter		Trip A/B reset switch		Continuity
Connector	Terminal	Connector	Terminal	
M53	38	M56	1	Existed
	16		2	

4. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M53	38		Existed
	16		Not existed

Is the inspection result normal?

YES >> INSPECTION END
NO >> Repair harness or connector.

Component Inspection

1.CHECK TRIP A/B RESET SWITCH UNIT

1. Turn ignition switch OFF.
2. Disconnect the trip A/B reset switch connector.
3. Check continuity between the trip A/B reset switch connector terminals.

TRIP A/B RESET SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Trip A/B reset switch		Operation and status	Continuity
Terminal			
1	2	Press trip A/B reset switch	Existed
		Other than the above	Not existed

Is inspection result normal?

YES >> INSPECTION END

NO >> Replace trip A/B reset switch.

OIL PRESSURE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

OIL PRESSURE SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000006342716

Detects the engine oil pressure and transmits the oil pressure switch signal to IPDM E/R.

Component Function Check

INFOID:0000000006342717

1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "OIL W/L" monitor value.

"OIL W/L"	
Ignition switch ON	: On
Engine running	: Off

>> INSPECTION END

Diagnosis Procedure

INFOID:0000000006342718

1. CHECK OIL PRESSURE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and oil pressure switch connector.
3. Check continuity between IPDM E/R harness connector and oil pressure switch harness connector.

IPDM E/R		Oil pressure switch		Continuity
Connector	Terminal	Connector	Terminal	
E7	75	F37	1	Existed

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E7	75		Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair harness or connector.


Component Inspection

INFOID:0000000006342719

1. CHECK OIL PRESSURE SWITCH UNIT

Check continuity between oil pressure switch and ground.

Condition	Continuity
Engine stopped	Existed
Engine running	Not existed

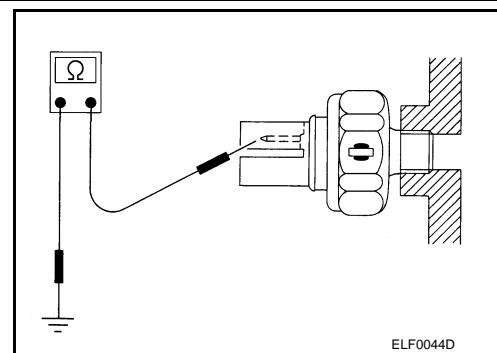

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace oil pressure switch.

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PARKING BRAKE SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000006342720



Transmits the parking brake switch signal to the combination meter.

Diagnosis Procedure

INFOID:0000000006342721

1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check the voltage and waveform between combination meter harness connector and ground.

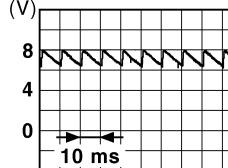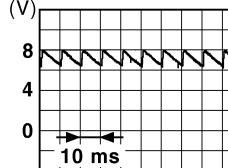Terminals		Condition	Voltage and waveform		
(+) (-)					
Combination meter					
Connector	Terminal	Parking brake applied	Approx. 0 V		
			 JSNIA0007GB		
M53	27	Ground	 JSNIA0007GB		
Parking brake released					

Is the inspection result normal?

- YES >> INSPECTION END
NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and parking brake switch connector.
3. Check continuity between combination meter harness connector and parking brake switch harness connector.

Combination meter		Parking brake switch		Continuity
Connector	Terminal	Connector	Terminal	
M53	27	E107	1	Existed

4. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M53	27		Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair harness or connector.

Component Inspection

INFOID:0000000006342722

1. CHECK PARKING BRAKE SWITCH

Check parking brake switch. Refer to [BRC-86, "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END

PARKING BRAKE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace parking brake switch.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

WASHER LEVEL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

WASHER LEVEL SWITCH SIGNAL CIRCUIT

Description

INFOID:0000000006342723

Transmits the washer level switch signal to the combination meter.

Diagnosis Procedure

INFOID:0000000006342724

1.CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and washer level switch connector.
3. Check continuity between combination meter harness connector and washer level switch harness connector.

Combination meter		Washer level switch		Continuity
Connector	Terminal	Connector	Terminal	
M53	31	E32	1	Existed

4. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M53	31		Not existed

5. Check continuity between washer level switch harness connector and ground.

Washer level switch		Ground	Continuity
Connector	Terminal		
E32	2		Existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Repair harness or connector.

Component Inspection

INFOID:0000000006342725

1.CHECK WASHER LEVEL SWITCH

1. Turn ignition switch OFF.
2. Disconnect washer level switch connector.
3. Check washer level switch.

Terminal		Condition	Continuity
1	2	Washer fluid level is low (washer level switch ON)	Existed
		Washer fluid level is normal (washer level switch OFF)	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace washer level switch. Refer to [WW-107, "Removal and Installation"](#).

COMPASS


< DTC/CIRCUIT DIAGNOSIS >

COMPASS

Wiring Diagram - COMPASS -

INFOID:0000000006342726

PM : With automatic drive positioner
OP : Without automatic drive positioner

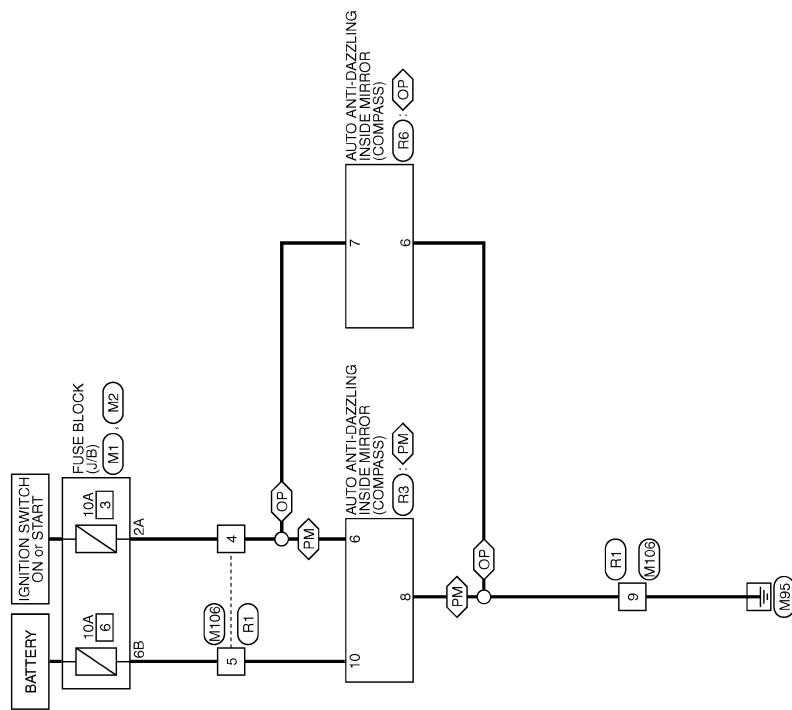

COMPASS

COMPASS

< DTC/CIRCUIT DIAGNOSIS >

COMPASS		Connector No.	M106	4 W — [Without automatic drive positioner]
Connector No.	M1	Connector Name	WIRE TO WIRE	5 G —
Connector Name	FUSE BLOCK (J/B)	Connector Type	NH10FW-CS10	7 BR —
Connector Type	NSDFW-M2			8 Y —
				9 B —
				10 Y —
				11 V —
				12 BR —
				13 R —
				14 W —
				15 SHIELD —
				16 B —
				18 B —

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1A	GR	—	1	G	—
2A	G	—	2	BR	—
3A	L	—	3	L	—
4A	P	—	4	W	—
5A	V	—	5	Y	—
6A	Y	—	7	BR	—
7A	R	—	8	Y	—
8A	L	—	9	B	—
			10	R	—
			11	V	—
			12	R	—
			13	LG	— [With NAVI]
			14	R	— [Without NAVI]
			14	Y	— [Without NAVI]
			15	SHIELD	—
			16	G	— [With NAVI]
			16	BR	— [Without NAVI]
			18	B	—

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
3B	P	—	6	5	WIRE TO WIRE
4B	G	—	6	4	—
5B	EG	—	7	6	AUTO ANTI-DAZZLING INSIDE MIRROR
6B	Y	—	7	5	JAA0/FB
7B	P	—	7	4	IGN
8B	R	—	7	3	GND
9B	SB	—	7	2	BAT

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	G	—	6	B	—
2	SHIELD	—	7	W	—
3	L	—	4	BR	— [With automatic driver positioner]

JCNWA3400GB


CLOCK

< DTC/CIRCUIT DIAGNOSIS >

CLOCK

Wiring Diagram - CLOCK -

INFOID:0000000006342727

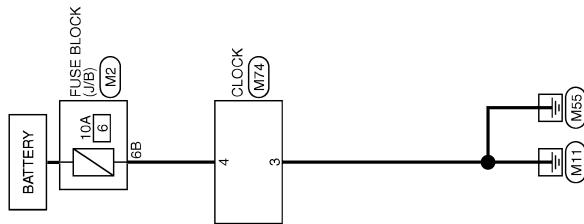

CLOCK


2008/08/28

JCNWA1799GB

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

CLOCK

< DTC/CIRCUIT DIAGNOSIS >

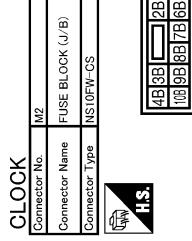

Terminal No.	Color of Wire	Signal Name [Specification]
3B	P	-
4B	G	-
5B	EG	-
6B	Y	-
7B	P	-
8B	R	-
9B	S5	-

Connector No.	M74
Connector Name	CLOCK
Connector Type	TH0DFW-NH

H.S.

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	ILLUMINATION (-)
2	R	ILLUMINATION (+)
3	B	GROUND
4	Y	BAT

JCNWA3401GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION COMBINATION METER


Reference Value

INFOID:000000006342728

VALUES ON THE DIAGNOSIS TOOL

Refer to [MWI-88, "Reference Value".](#)

TERMINAL LAYOUT

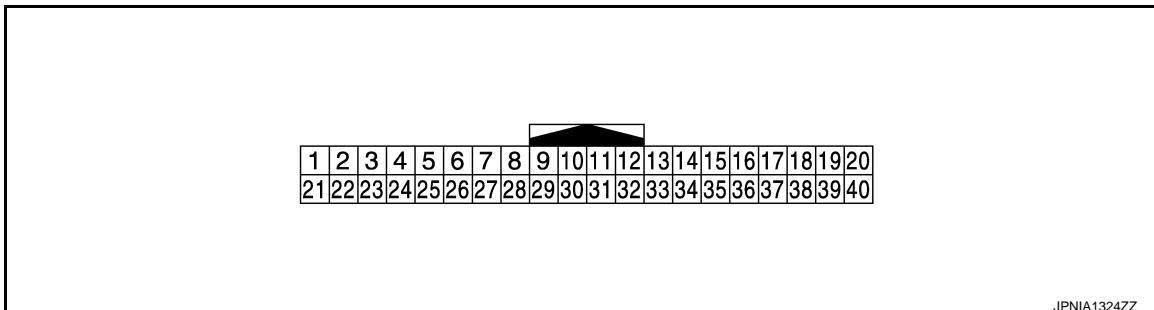

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (GR)	Ground	Battery power supply	Input	Ignition switch OFF	— Battery voltage
2 (LG)	Ground	Communication signal (METER→AMP.)	Output	Ignition switch ON	 (V) JSNIA0027GB
3 (GR)	Ground	Communication signal (AMP.→ METER)	Input	Ignition switch ON	 (V) JSNIA0027GB
5 (B)	Ground	Ground	—	Ignition switch ON	0 V
6 (P)	Ground	Alternator signal	Input	Ignition switch ON	0 V
					Battery voltage
7 (BR)	Ground	Air bag signal	Input	Ignition switch ON	4 V
					0 V
10 (G)	Ground	Security signal	Input	Ignition switch OFF	0 V
					12 V

A

B

C

D

E

F

G

H

I

J

K

L

M





MWI

O

P


COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

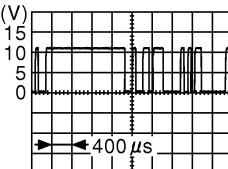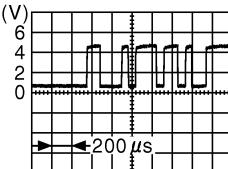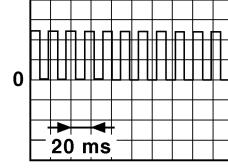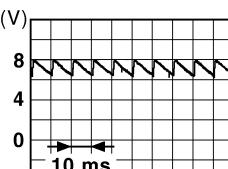Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
15 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
16 (B)	Ground	Meter control switch ground	—	Ignition switch ON	—	0 V
21 (BG)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
22 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
24 (BR)	Ground	Communication signal (LCD→AMP.)	Output	Ignition switch ON	—	 JSNIA0028GB
25 (Y)	Ground	Communication signal (AMP.→LCD)	Input	Ignition switch ON	—	 JSNIA0027GB
26 (R)	Ground	Vehicle speed signal (8-pulse)	Input	Ignition switch ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	NOTE: The maximum voltage varies depending on the specification (destination unit).  JSNIA0012GB
27 (V)	Ground	Parking brake switch signal	Input	Ignition switch ON	Parking brake is applied	0 V
					Parking brake is released	 JSNIA0007GB
28 (W)	Ground	Brake fluid level switch signal	Input	Ignition switch ON	Brake fluid level is normal.	5 V
					The brake fluid level is lower than the low level	0 V

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

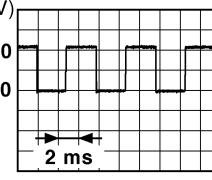Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
29 (SB)	Ground	Seat belt buckle switch signal (driver side)	Input	Ignition switch ON	When driver seat belt is fastened	12 V
					When driver seat belt is unfastened	0 V
30 (G)	Ground	Seat belt buckle switch signal (passenger side)	Input	Ignition switch ON	<ul style="list-style-type: none"> • When getting in the passenger seat • When passenger seat belt is fastened 	12 V
					<ul style="list-style-type: none"> • When getting in the passenger seat • When passenger seat belt is unfastened 	0 V
31 (L)	Ground	Washer level switch signal	Input	Ignition switch ON	Washer level switch ON	0 V
					Washer level switch OFF	5 V
33 (B)	Ground	Illumination control signal	Output	Ignition switch ON	Lighting switch ON, then operate the illumination control switch.	NOTE: When brightness level is midway  <small>JSNIA0010GB</small>
36 (LG)	16 (B)	Select switch signal	Input	Ignition switch ON	When  is pressed	0 V
					Other than the above	5 V
37 (SB)	16 (B)	Enter switch signal	Input	Ignition switch ON	When  is pressed	0 V
					Other than the above	5 V
38 (L)	16 (B)	Trip A/B reset switch signal	Input	Ignition switch ON	When trip A/B reset switch is pressed	0 V
					Other than the above	5 V
39 (P)	16 (B)	Illumination control switch signal (-)	Input	Ignition switch ON	When  switch is pressed	0 V
					Other than the above	5 V
40 (BG)	16 (B)	Illumination control switch signal (+)	Input	Ignition switch ON	When  switch is pressed	0 V
					Other than the above	5 V

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O


P

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - METER -

INFO ID:0000000006342729

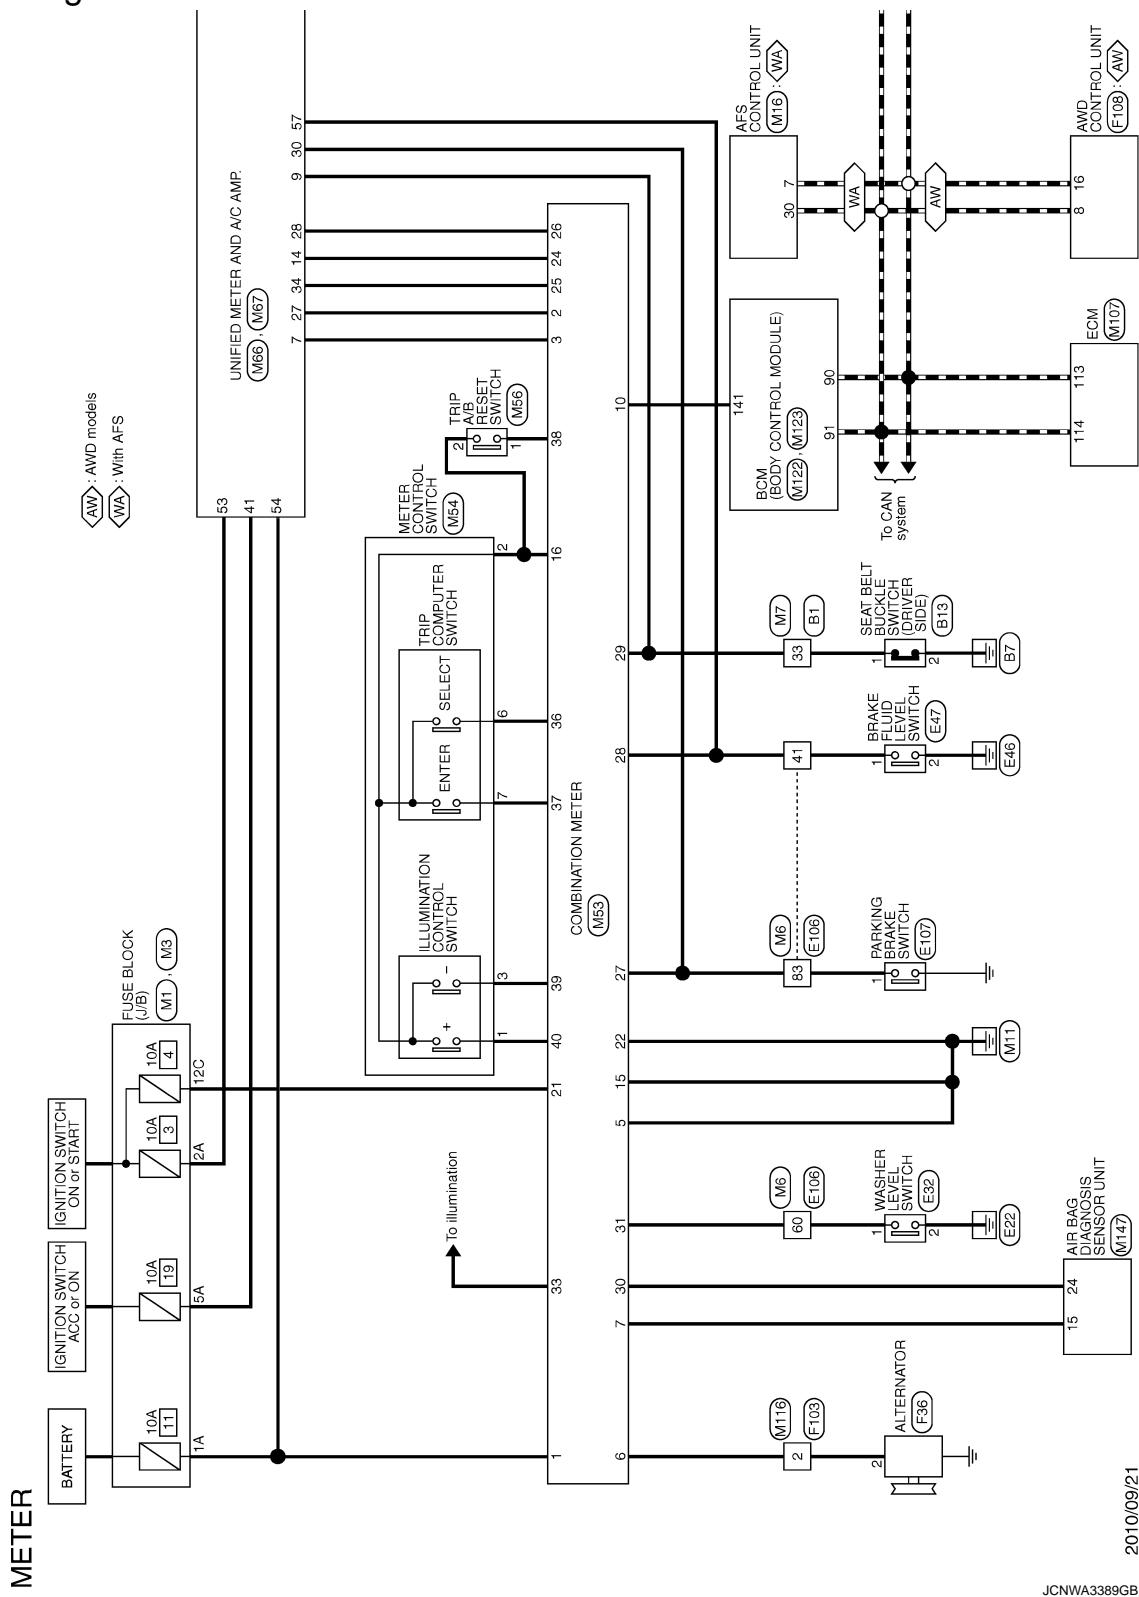

2010/09/21


JCNWA3389GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

-  : With NAVI
-  : Without NAVI
-  : With ICC


* : This connector is not shown in "Harness Layout".

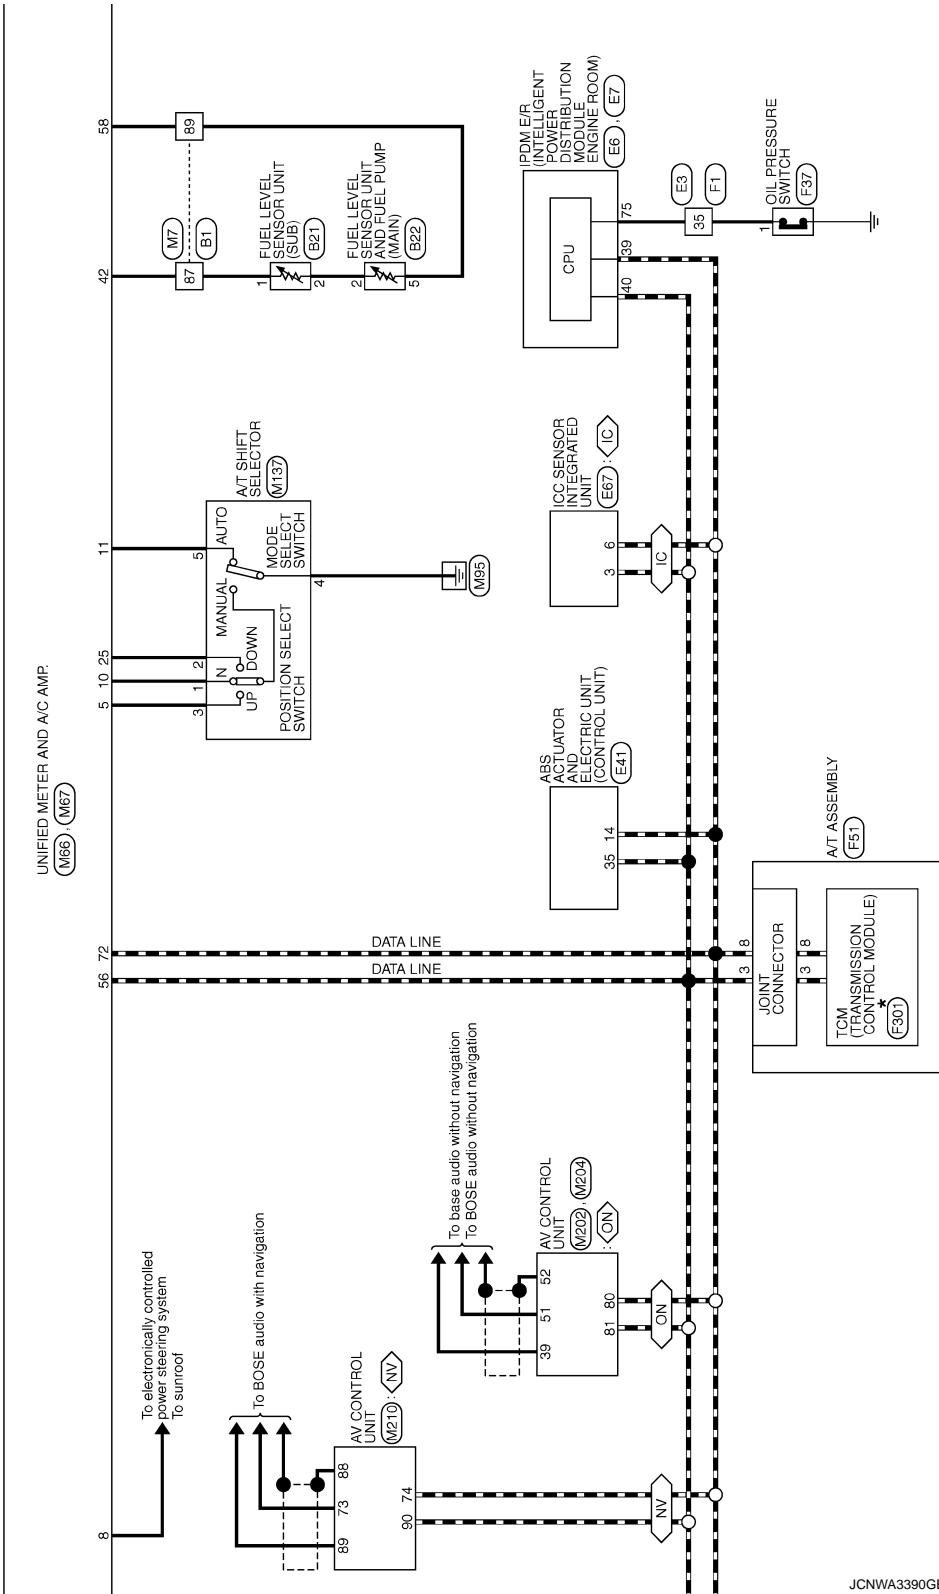

JCNWA3390GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

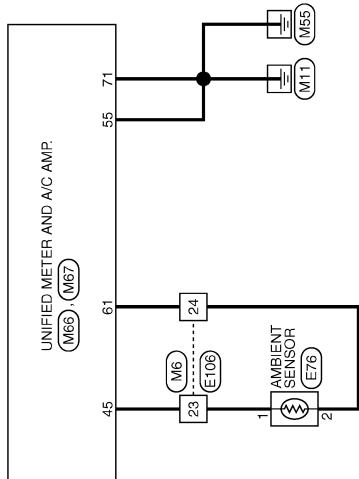

JCNWA3391GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
3	R	-
5	G	-
6	SB	-
7	V	-
8	L	-
12	SB	-
13	LG	-
14	GR	-
15	LG	-
17	W	-
18	SB	-
19	LG	-
20	BR	-
21	SHIELD	-
22	Y	-
24	P	-
27	B	-
28	R	-
29	W	-
30	SHIELD	-
31	SHIELD	-
32	W	-
33	SB	-
34	L	-
35	P	-
36	L	-
37	P	-
38	BR	-
39	Y	-
44	Y	-
45	GR	-
46	LG	-
47	SB	-
49	G	-
50	V	-
60	P	-
61	L	-
62	SHIELD	-

Connector No.	B21
Connector Name	FUEL LEVEL SENSOR UNIT (SUB)
Connector Type	EOSFY-RS



Terminal No.	Color of Wire	Signal Name [Specification]
19	W	-
20	GR	-
21	Y	-
22	G	-
23	W	-
25	SB	-
26	R	-
28	P	-
29	L	-
30	LG	-
31	LG	-
32	R	-
33	P	-
34	W	-
35	SB	-
40	BG	-
41	G	-
42	Y	-
43	BR	-
44	BG	-

Connector No.	B22
Connector Name	FUEL LEVEL SENSOR UNIT AND FUEL PUMP (MAIN)
Connector Type	EOSFY-RS



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	W	-



Connector No.	E6
Connector Name	PCM E INTELLIGENT POWER DISTRIBUTION MODULE BYKNE LOCAL
Connector Type	TH09FW-NH



42	LG	39
43	BR	-
44	BG	-
45	AG	43
46	AG	43

19	W	-
20	BR	-
21	SHIELD	-
22	Y	-
23	SB	-
24	P	-
27	B	-
28	R	-
29	W	-
30	SHIELD	-
31	SHIELD	-
32	W	-
33	SB	-
34	L	-
35	P	-
36	L	-
37	P	-
38	BR	-
39	Y	-
44	Y	-
45	GR	-
46	LG	-
47	SB	-
49	G	-
50	V	-
60	P	-
61	L	-
62	SHIELD	-

Connector No.	E3
Connector Name	WIRE TO WIRE
Connector Type	SAA3MB-RS10-SUJ22



1	P	-
2	W	-
3	B	-
4	R	-
5	B	-

39	P	-
40	L	-
41	B/Y	-
42	Y	-
43	SB	-
44	BR	-
45	G	-

Connector No.	E4
Connector Name	WIRE TO WIRE
Connector Type	SAA3MB-RS10-SUJ22



1	LG	39
2	BR	39
3	BR	39
4	BR	39
5	BR	39

JCNWA3392GB

W

O

P

MWI

M

A

D

T

M

G

I

—

K

L

—

N

—

R

—

M

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER		Connector No.	Connector No.	Connector Name	Connector Type	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	
ECU		E7	E41	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)		I/C SENSOR INTEGRATED UNIT		RS36FB-PW		RS36FB-PW		RS36FB-PW	
Front L/R INTELLIGENT POWER DISTRIBUTION MODULE		Front L/R	Front L/R	BAA42FB-AH24-LH		BAA42FB-AH24-LH		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	TH2DFW-CS12-M4		TH2DFW-CS12-M4		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	Z12FBFR		Z12FBFR		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E32		E32		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E47		E47		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E67		E67		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E76		E76		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E77		E77		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E78		E78		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E79		E79		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E80		E80		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E81		E81		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E82		E82		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E83		E83		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E84		E84		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E85		E85		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E86		E86		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E87		E87		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E88		E88		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E89		E89		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E90		E90		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E91		E91		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E92		E92		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E93		E93		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E94		E94		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E95		E95		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E96		E96		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E97		E97		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E98		E98		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E99		E99		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E100		E100		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E101		E101		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E102		E102		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E103		E103		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E104		E104		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E105		E105		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E106		E106		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E107		E107		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E108		E108		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E109		E109		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E110		E110		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E111		E111		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E112		E112		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E113		E113		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E114		E114		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E115		E115		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E116		E116		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E117		E117		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E118		E118		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E119		E119		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E120		E120		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E121		E121		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E122		E122		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E123		E123		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E124		E124		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E125		E125		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E126		E126		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E127		E127		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E128		E128		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E129		E129		H.S.		H.S.		H.S.	
Front L/R		Front L/R	Front L/R	E130		E130		H.S.		H.S.		H.S.	

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER		Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]	
Terminal No.	Color of Wire	1	R	64	B	63	W	64	B
1	R	-	-	65	G	65	G	65	G
2	W	-	-	66	R	66	R	66	R
3	B	-	-	67	SHEILD	67	SHEILD	67	SHEILD
4	GR	-	-	68	Y	68	Y	68	Y
5	GR	-	-	69	LG	69	LG	69	LG
8	Y	-	-	70	W	70	W	70	W
9	BR	-	-	71	R	71	R	71	R
10	BG	-	-	72	Y	72	Y	72	Y
11	SB	-	-	73	B	73	B	73	B
12	BG	-	-	74	BR	74	BR	74	BR
13	L	-	-	74	L	74	L	74	L
14	R	-	-	75	G	75	G	75	G
15	P	-	-	75	W	75	W	75	W
16	V	-	-	76	Y	76	Y	76	Y
17	SB	-	-	76	Y	76	Y	76	Y
18	Y	-	-	77	R	77	R	77	R
20	BG	-	-	77	P	77	P	77	P
21	L	-	-	78	L	78	L	78	L
22	V	-	-	78	BR	78	BR	78	BR
23	G	-	-	79	Y	79	Y	79	Y
24	P	-	-	79	L	79	L	79	L
25	Y	-	-	80	SB	80	SB	80	SB
26	V	-	-	81	R	81	R	81	R
27	W	-	-	82	SB	82	SB	82	SB
28	G	-	-	83	LG	83	LG	83	LG
31	BG	-	-	84	G	84	G	84	G
32	W	-	-	85	L	85	L	85	L
33	B	-	-	86	P	86	P	86	P
34	R	-	-	87	Y	87	Y	87	Y
35	G	-	-	88	GR	88	GR	88	GR
36	SHEILD	-	-	90	SHEILD	90	SHEILD	90	SHEILD
37	V	-	-	91	W	91	W	91	W
38	BR	-	-	92	Y	92	Y	92	Y
39	BG	-	-	93	Y	93	Y	93	Y
41	W	-	-	94	LG	94	LG	94	LG
42	G	-	-	95	BG	95	BG	95	BG
43	BR	-	-	96	P	96	P	96	P
45	W	-	-	97	R	97	R	97	R

JCNWA3394GB

MWI

COMBINATION METER


< ECU DIAGNOSIS INFORMATION >

METER	F51	-	-	1	-	VIGN
Connector No.	A / ASSEMBLY	B	-	2	-	BATT
Connector Name	RK10FG-DGY	L	-	3	-	CAN-H
Connector Type		P	-	4	-	KLINE
		Y	-	5	-	GND
		G	-	6	-	VIGN
			-	7	-	REV LAMP RLY
			-	8	-	CAN-L
			-	9	-	START RLY
			-	10	-	GND


Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2




Terminal No.	Color of Wire	Signal Name [Specification]
1A	GR	-
2A	G	-
3A	L	-
4A	P	-
5A	V	-
7A	Y	-
8A	R	-
EA	L	-



Terminal No.	Color of Wire	Signal Name [Specification]
6C	R	-
7C	R	-



Terminal No.	Color Wire	Signal Name [Specification]
1	BR	AWD SOL (+)
2	W	AWD SOL (-)
3		OIL TEMP- IGN
7	G	CAN-H
8	L	CAN-L
9	BG	AWD SOL DAT
10	B	GND
11	B	GND
13	LG	OIL TEMP+ VB
15	Y	
16	P	CAN-L



Connector No.	F301	Terminal Color No. of Wire	Signal Name [Specification]
Connector Name	TOM (TRANSMISSION CONTROL MODULE)		
Connector Type	SP10FG		
	 		



COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER		Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]	
Terminal No.	Color of Wire	Terminal No.	Color of Wire	Terminal No.	Color of Wire	Terminal No.	Color of Wire
49	L	-	-	99	V	-	-
50	P	-	-	100	SB	-	-
51	BR	-	-	50	R	-	-
52	L	-	-	60	P	-	-
53	P	-	-	61	L	-	-
54	Y	-	-	62	SHEILD	-	-
56	BR	-	-	63	R	-	-
57	G	-	-	64	G	-	-
59	Y	-	-	65	SHEILD	-	-
60	L	-	-	66	SB	-	-
61	G	-	-	67	V	-	-
62	SB	-	-	68	LG	-	-
63	G	-	-	69	SHEILD	-	-
64	B	-	-	70	W	-	-
65	W	-	-	73	G	-	-
66	R	-	-	74	R	-	-
67	SHEILD	-	-	75	W	-	-
68	Y	-	-	76	W	-	-
69	GR	-	-	77	B	-	-
70	LG	-	-	78	P	-	-
71	LG	-	-	79	GB	-	-
72	Y	-	-	83	BG	-	-
73	SB	-	-	85	LG	-	-
74	BR	-	-	86	R	-	-
74	L	-	-	87	Y	-	-
74	LG	-	-	88	W	-	-
75	G	-	-	89	BR	-	-
76	W	-	-	90	BG	-	-
76	GR	-	-	91	G	-	-
77	R	-	-	92	V	-	-
77	P	-	-	93	BR	-	-
78	LG	-	-	94	V	-	-
78	BR	-	-	95	G	-	-
79	Y	-	-	96	W	-	-
80	SB	-	-	98	W	-	-
81	SB	-	-	99	R	-	-
82	SB	-	-				
83	Y	-	-				
84	G	-	-				
85	L	-	-				
86	P	-	-				
87	W	-	-				
88	GR	-	-				
90	SHEILD	-	-				
91	W	-	-				
92	Y	-	-				
93	BR	-	-				
94	P	-	-				
95	GR	-	-				
96	W	-	-				
97	L	-	-				
98	SHEILD	-	-				

JCNWA3396GB

MWI

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER		
Connector No.	M161	Signal Name [Specification]
Connector Name	AFS CONTROL UNIT	
Connector Type	TH4DFW-NH	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. GND
20	R	
21	BG	[IGNITION] POWER SUPPLY
22	B	GROUND
24	LG	COMMUNICATION SIGNAL (LCD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PIN SE)
7	P	CAN-L
8	B	HSG-R
9	GR	PSG-R
11	R	SNR-1 (-)
13	B	SNR-2 (+)
15	G	SML-1 (+)
17	W	SML-2 (+)
19	AMRS-R	AMRS-L
24	V	PSV-L
25	B	GRD
27	BR	PSG-1
28	BG	HS-R
29	BG	PS-L
30	L	CAN-H
32	G	SNR-2 (+)
34	W	SNR-1 (+)
36	R	SNL-2 (-)
38	B	SNL-1 (-)
40	L	AMDS-L

METER		
Connector No.	M56	Signal Name [Specification]
Connector Name	TRIP A/B RESET SWITCH	
Connector Type	TK02MW	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	UNIFIED METER AND A/C AMP
2	LG	TRIP A/B RESET SWITCH
3	GR	UNIFIED METER AND A/C AMP
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. GND
20	R	
21	BG	[IGNITION] POWER SUPPLY
22	B	GROUND
24	LG	COMMUNICATION SIGNAL (LCD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PIN SE)
7	P	CAN-L
8	B	HSG-R
9	GR	PSG-R
11	R	SNR-1 (-)
13	B	SNR-2 (+)
15	G	SML-1 (+)
17	W	SML-2 (+)
19	AMRS-R	AMRS-L
24	V	PSV-L
25	B	GRD
27	BR	PSG-1
28	BG	HS-R
29	BG	PS-L
30	L	CAN-H
32	G	SNR-2 (+)
34	W	SNR-1 (+)
36	R	SNL-2 (-)
38	B	SNL-1 (-)
40	L	AMDS-L

METER		
Connector No.	M67	Signal Name [Specification]
Connector Name	UNIFIED METER AND A/C AMP	
Connector Type	TH32FW-NH	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	UNIFIED METER AND A/C AMP
2	LG	TRIP A/B RESET SWITCH
3	GR	UNIFIED METER AND A/C AMP
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. GND
20	R	
21	BG	[IGNITION] POWER SUPPLY
22	B	GROUND
24	LG	COMMUNICATION SIGNAL (LCD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PIN SE)
7	P	CAN-L
8	B	HSG-R
9	GR	PSG-R
11	R	SNR-1 (-)
13	B	SNR-2 (+)
15	G	SML-1 (+)
17	W	SML-2 (+)
19	AMRS-R	AMRS-L
24	V	PSV-L
25	B	GRD
27	BR	PSG-1
28	BG	HS-R
29	BG	PS-L
30	L	CAN-H
32	G	SNR-2 (+)
34	W	SNR-1 (+)
36	R	SNL-2 (-)
38	B	SNL-1 (-)
40	L	AMDS-L

METER		
Connector No.	M68	Signal Name [Specification]
Connector Name	UNIFIED METER AND A/C AMP	
Connector Type	TH32FW-NH	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	UNIFIED METER AND A/C AMP
2	LG	TRIP A/B RESET SWITCH
3	GR	UNIFIED METER AND A/C AMP
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. GND
20	R	
21	BG	[IGNITION] POWER SUPPLY
22	B	GROUND
24	LG	COMMUNICATION SIGNAL (LCD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PIN SE)
7	P	CAN-L
8	B	HSG-R
9	GR	PSG-R
11	R	SNR-1 (-)
13	B	SNR-2 (+)
15	G	SML-1 (+)
17	W	SML-2 (+)
19	AMRS-R	AMRS-L
24	V	PSV-L
25	B	GRD
27	BR	PSG-1
28	BG	HS-R
29	BG	PS-L
30	L	CAN-H
32	G	SNR-2 (+)
34	W	SNR-1 (+)
36	R	SNL-2 (-)
38	B	SNL-1 (-)
40	L	AMDS-L

METER		
Connector No.	M69	Signal Name [Specification]
Connector Name	UNIFIED METER AND A/C AMP	
Connector Type	TH32FW-NH	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	UNIFIED METER AND A/C AMP
2	LG	TRIP A/B RESET SWITCH
3	GR	UNIFIED METER AND A/C AMP
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. GND
20	R	
21	BG	[IGNITION] POWER SUPPLY
22	B	GROUND
24	LG	COMMUNICATION SIGNAL (LCD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PIN SE)
7	P	CAN-L
8	B	HSG-R
9	GR	PSG-R
11	R	SNR-1 (-)
13	B	SNR-2 (+)
15	G	SML-1 (+)
17	W	SML-2 (+)
19	AMRS-R	AMRS-L
24	V	PSV-L
25	B	GRD
27	BR	PSG-1
28	BG	HS-R
29	BG	PS-L
30	L	CAN-H
32	G	SNR-2 (+)
34	W	SNR-1 (+)
36	R	SNL-2 (-)
38	B	SNL-1 (-)
40	L	AMDS-L

JCNWA3397GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

ICNWA3398GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER		Connector No.	M141	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT			40 B	40	B	RGB AREA (VS) SIGNAL	52	SB	RGB AREA (VS) SIGNAL
Connector Type	TK28FY-EK-SC			41 SHIELD	41	SHIELD	SHIELD	53	SB	SHIELD
				42 W	42	W	RGB SYNC	54	SB	RGB SYNC
				43 G	43	G	RGB (RED) SIGNAL	55	SB	RGB (RED) SIGNAL
				44 L	44	L	RGB (GREEN) SIGNAL	56	SB	RGB (GREEN) SIGNAL
				45 P	45	P	RGB (BLUE) SIGNAL	57	SB	RGB (BLUE) SIGNAL
				46 V	46	V	COMPOSITE IMAGE SIGNAL GND	58	SB	COMPOSITE IMAGE SIGNAL GND
				47 SB	47	SB	COMPOSITE IMAGE SIGNAL	59	SB	COMPOSITE IMAGE SIGNAL
				48 Y	48	Y	INVERTER VCC	60	SB	INVERTER VCC
				49 BR	49	BR	INVERTER GND	61	SB	INVERTER GND
				50 G	50	G	VP	62	SB	VP
				51 Y	51	Y	COMM (CONT->DISP)	63	SB	COMM (CONT->DISP)
				52 SHIELD	52	SHIELD	SHIELD	64	SB	SHIELD
				57 SHIELD	57	SHIELD	SHIELD	65	SB	SHIELD
				58 SHIELD	58	SHIELD	SHIELD	66	SB	SHIELD
H.S.		Connector No.	M210	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	AV CONTROL UNIT			67 G	67	G	PARKING BRAKE SIGNAL	70	SB	PARKING BRAKE SIGNAL
Connector Type	TH32FW-NH			68 R	68	R	COMPOSITE IMAGE SIGNAL GND	71	SB	COMPOSITE IMAGE SIGNAL GND
				71 SHIELD	71	SHIELD	SHIELD	72	SB	SHIELD
				73 R	73	R	MICROPHONE SHIELD	73	SB	MICROPHONE SHIELD
				74 P	74	P	COMM (CONT->DISP)	74	SB	COMM (CONT->DISP)
				75 LG	75	LG	CAN-L	75	SB	CAN-L
				76 LG	76	LG	AV COMM (L)	76	SB	AV COMM (L)
				79 R	79	R	ILLUMINATION	79	SB	ILLUMINATION
				80 G	80	G	IGNITION SIGNAL	80	SB	IGNITION SIGNAL
				81 BG	81	BG	REVERSE SIGNAL	81	SB	REVERSE SIGNAL
				82 R	82	R	VEHICLE SPEED SIGNAL (S-PULSE)	82	SB	VEHICLE SPEED SIGNAL (S-PULSE)
				83 SHIELD	83	SHIELD	SHIELD	83	SB	SHIELD
				87 G	87	G	MICROPHONE SIGNAL	87	SB	MICROPHONE SIGNAL
				88 SHIELD	88	SHIELD	SHIELD	88	SB	SHIELD
				90 L	90	L	COMM (DISP->CONT)	90	SB	COMM (DISP->CONT)
				91 SB	91	SB	CAN-H	91	SB	CAN-H
				92 SB	92	SB	AV COMM (H)	92	SB	AV COMM (H)
H.S.		Connector No.	M202	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	AV CONTROL UNIT			76 LG	76	LG	AV COMM (L)	77	SB	AV COMM (L)
Connector Type	TH24FW-NH			79 SB	79	SB	AV COMM (L)	80 P	SB	AV COMM (L)
				81 L	81	L	CAN-L	81	SB	CAN-L
				82 B	82	B	SW GND	82	SB	SW GND
				86 SHIELD	86	SHIELD	SHIELD	87 L	SB	TELEPHONE SIGNAL (+)
				87 L	87	L	TELEPHONE SIGNAL (+)	88 P	SB	TELEPHONE SIGNAL (-)
				92 R	92	R	VEHICLE SPEED SIGNAL (S-PULSE)	92	SB	VEHICLE SPEED SIGNAL (S-PULSE)
				93 V	93	V	PARKING BRAKE SIGNAL	93	SB	PARKING BRAKE SIGNAL
				94 BG	94	BG	REVERSE SIGNAL	94	SB	REVERSE SIGNAL
				95 G	95	G	IGNITION SIGNAL	95	SB	IGNITION SIGNAL
				96 Y	96	Y	DISK E/E/C1 SIGNAL	96	SB	DISK E/E/C1 SIGNAL

JCNWA3399GB

INFOID:0000000006342730

Fail-Safe

FAIL-SAFE

Combination meter performs fail-safe operation when unified meter and A/C amp. communication is malfunction.

Solution for communication error between the unified meter and A/C amp. and combination meter.

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Function	Specifications	
Speedometer		A
Tachometer		B
Fuel gauge	Reset to zero by suspending communication.	C
Water temperature gauge		D
Illumination control	When suspending communication, change to nighttime mode.	E
Information display	The display turns off by suspending communication.	F
Buzzer	The buzzer turns off by suspending communication.	G
Warning lamp/indicator lamp	<p>ABS warning lamp SLIP indicator lamp Brake warning lamp CRUISE warning lamp IBA OFF indicator lamp Malfunction indicator lamp</p> <p>High beam indicator Turn signal indicator lamp Tail lamp indicator lamp Oil pressure warning lamp A/T CHECK warning lamp AWD warning lamp Low tire pressure warning lamp Key warning lamp VDC OFF indicator lamp BSW warning lamp AFS OFF indicator lamp Lane departure warning lamp LDP ON indicator lamp Master warning lamp</p>	H
	The lamp turns on by suspending communication. The lamp turns off by suspending communication.	I
		J
		K
		L
		M

DTC Index

INFOID:000000006342731

Refer to [MWI-106, "DTC Index".](#)

MWI

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

UNIFIED METER AND A/C AMP.

Reference Value

INFOID:0000000006342732

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition		Value/Status
SPEED METER [km/h] or [mph]	Ignition switch ON	While driving	Equivalent to speedometer reading NOTE: 655.35 is displayed when the malfunction signal is received
SPEED OUTPUT [km/h] or [mph]	Ignition switch ON	While driving	Equivalent to speedometer reading NOTE: 655.35 is displayed when the malfunction signal is received
ODO OUTPUT [km/h] or [mph]	Ignition switch ON	—	Equivalent to odometer reading in combination meter
TACHO METER [rpm]	Ignition switch ON	While driving	Equivalent to tachometer reading NOTE: 8191.875 is displayed when the malfunction signal is received
FUEL METER [L]	Ignition switch ON	—	Values according to fuel level
W TEMP METER [°C] or [°F]	Ignition switch ON	—	Values according to engine coolant temperature NOTE: 215 is displayed when the malfunction signal is input
FUEL CAP W/L	Ignition switch ON	Fuel filler cap warning display ON	On
		Fuel filler cap warning display OFF	Off
ABS W/L	Ignition switch ON	ABS warning lamp ON	On
		ABS warning lamp OFF	Off
VDC/TCS IND	Ignition switch ON	VDC OFF indicator lamp ON	On
		VDC OFF indicator lamp OFF	Off
SLIP IND	Ignition switch ON	SLIP indicator lamp ON	On
		SLIP indicator lamp OFF	Off
BRAKE W/L	Ignition switch ON	Brake warning lamp ON	On
		Brake warning lamp OFF	Off
DOOR W/L	Ignition switch ON	Door warning displayed	On
		Door warning not displayed	Off
HI-BEAM IND	Ignition switch ON	Hi-beam indicator lamp ON	On
		Hi-beam indicator lamp OFF	Off
TURN IND	Ignition switch ON	Turn indicator lamp ON	On
		Turn indicator lamp OFF	Off
FR FOG IND	Ignition switch ON	Front fog light indicator lamp ON	On
		Front fog light indicator lamp OFF	Off
RR FOG IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
LIGHT IND	Ignition switch ON	Tail lamp indicator lamp ON	On
		Tail lamp indicator lamp OFF	Off

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status	
OIL W/L	Ignition switch ON	Oil pressure warning lamp ON	On	A
		Oil pressure warning lamp OFF	Off	
MIL	Ignition switch ON	Malfunction warning lamp ON	On	B
		Malfunction warning lamp OFF	Off	
GLOW IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	C
C-ENG2 W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	D
CRUISE IND	Ignition switch ON	CRUISE indicator displayed	On	E
		CRUISE indicator not displayed	Off	
SET IND	Ignition switch ON	SET indicator lamp ON	On	F
		SET indicator lamp OFF	Off	
CRUISE W/L	Ignition switch ON	CRUISE warning lamp ON	On	G
		CRUISE warning lamp OFF	Off	
BA W/L	Ignition switch ON	IBA OFF indicator lamp ON	On	H
		IBA OFF indicator lamp OFF	Off	
ATC/T-AMT W/L	Ignition switch ON	A/T check warning lamp ON	On	I
		A/T check warning lamp OFF	Off	
4WD W/L	Ignition switch ON	AWD warning lamp ON	On	J
		AWD warning lamp OFF	Off	
4WD LOCK IND	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	K
FUEL W/L	Ignition switch ON	Low-fuel warning lamp displayed	On	L
		Low-fuel warning lamp not displayed	Off	
WASHER W/L	Ignition switch ON	Washer warning displayed	On	M
		Washer warning not displayed	Off	
AIR PRES W/L	Ignition switch ON	Low tire pressure warning lamp ON	On	N
		Low tire pressure warning lamp OFF	Off	
KEY G/Y W/L	Ignition switch ON	Key warning lamp ON	On	O
		Key warning lamp OFF	Off	
AFS OFF IND	Ignition switch ON	AFS OFF indicator lamp ON	On	P
		AFS OFF indicator lamp OFF	Off	
4WAS/RAS W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	MWI
DDS W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off	
LANE W/L	Ignition switch ON	Lane departure warning lamp ON	On	
		Lane departure warning lamp OFF	Off	
LDP IND	Ignition switch ON	LDP ON indicator lamp ON	On	
		LDP ON indicator lamp OFF	Off	
DCA IND	Ignition switch ON	DCA switch indicator displayed	On	
		DCA switch indicator not displayed	Off	

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
BSW W/L	Ignition switch ON	BSW warning lamp ON	On
		BSW warning lamp OFF	Off
LCD	Ignition switch ON	Engine start information display	B&P I
	Ignition switch ACC	Engine start information display	B&P N
	Ignition switch LOCK	Key ID warning display	ID NG
	Ignition switch LOCK	Steering lock information display	ROTAT
	Ignition switch LOCK	P position warning display	SFT P
	Ignition switch LOCK	Intelligent Key insert information display	INSRT
	Ignition switch LOCK	Intelligent Key low battery warning display	BATT
	Ignition switch ON	Take away warning display	NO KY
	Ignition switch LOCK	Key warning display	OUTKY
	Ignition switch ON	ACC warning display	LK WN
ACC TARGET	Ignition switch ON	Vehicle ahead detection indicator displayed	On
		Vehicle ahead detection indicator not displayed	Off
ACC DISTANCE	Ignition switch ON	When following distance set to "LONG"	LONG
		When following distance set to "MIDDLE"	MID
		When following distance set to "SHORT"	SHORT
		Set distance indicator not displayed	Off
ACC OWN VHL	Ignition switch ON	Own vehicle indicator displayed	On
		Own vehicle indicator not displayed	Off
ACC SET SPEED	Ignition switch ON	Set vehicle speed indicator not displayed	Off
		Set vehicle speed indicator displayed	Indicates the set vehicle speed
ACC UNIT	Ignition switch ON	Set vehicle speed indicator unit display ON	On
		Set vehicle speed indicator unit display OFF	Off
SHIFT IND	Ignition switch ON	Shift position indicator P display	P
		Shift position indicator R display	R
		Shift position indicator N display	N
		Shift position indicator D display	D
		Shift position indicator DS display	L
		Shift position indicator M1 display	M1
		Shift position indicator M2 display	M2
		Shift position indicator M3 display	M3
		Shift position indicator M4 display	M4
		Shift position indicator M5 display	M5
		Shift position indicator M6 display	M6
		Shift position indicator M7 display	M7

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
O/D OFF SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
AT S MODE SW	Ignition switch ON	Snow mode switch ON	On
		Snow mode switch OFF	Off
AT P MODE SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
M RANGE SW	Ignition switch ON	Selector lever manual mode position	On
		Other than the above	Off
NM RANGE SW	Ignition switch ON	Selector lever manual mode position	Off
		Other than the above	On
AT SFT UP SW	Ignition switch ON	Selector lever + position	On
		Other than the above	Off
AT SFT DWN SW	Ignition switch ON	Selector lever – position	On
		Other than the above	Off
ST SFT UP SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
ST SFT DWN SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
COMP F/B SIG	Ignition switch ON	A/C compressor activation condition	On
		A/C compressor deactivation condition	Off
4WD LOCK SW	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
PKB SW	Ignition switch ON	Parking brake switch ON	On
		Parking brake switch OFF	Off
BUCKLE SW	Ignition switch ON	Driver seat belt not fastened	On
		Driver seat belt fastened	Off
BRAKE OIL SW	Ignition switch ON	Brake fluid level switch ON	On
		Brake fluid level switch OFF	Off
DISTANCE [km]	Ignition switch ON	—	Possible driving distance calculated by unified meter and A/C amp.
OUTSIDE TEMP [°C] or [°F]	Ignition switch ON	—	Equivalent to ambient temperature NOTE: This may not match the indicated value on the information display.
FUEL LOW SIG	Ignition switch ON	Low-fuel warning signal output	On
		Low-fuel warning signal not output	Off
BUZZER	Ignition switch ON	Buzzer ON	On
		Buzzer OFF	Off


NOTE:

Some items are not available according to vehicle specification.

TERMINAL LAYOUT




UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

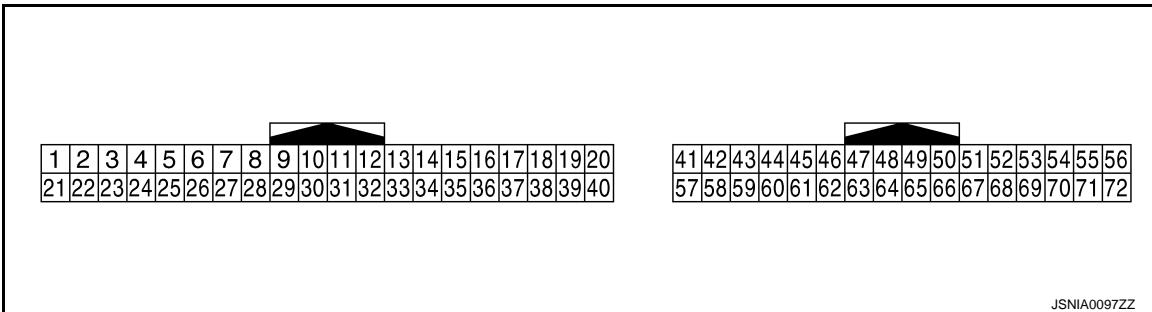





JSNIA0097ZZ

PHYSICAL VALUES

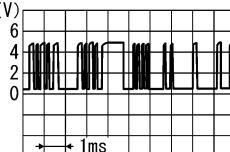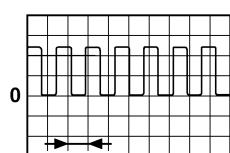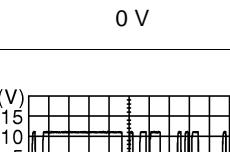Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			Value (Approx.)
5 (L)	Ground	Manual mode shift up signal	Input	Ignition switch ON	Selector lever UP operation	0 V
					Other than the above	12 V
7 (GR)	Ground	Communication signal (AMP. → METER)	Output	Ignition switch ON	—	 SKIA3362E
8 (L)	Ground	Vehicle speed signal (2-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	 JSNIA0015GB
9 (SB)	Ground	Seat belt buckle switch signal (driver side)	Input	Ignition switch ON	When seat belt is fastened	12 V
					When seat belt is not fastened	0 V
10 (W)	Ground	Manual mode signal	Input	Ignition switch ON	Selector lever DS position	0 V
					Other than the above	12 V
11 (G)	Ground	Non-manual mode signal	Input	Ignition switch ON	Selector lever DS position	12 V
					Other than the above	0 V
14 (BR)	Ground	Communication signal (LCD → AMP.)	Input	Ignition switch ON	—	 JSNIA0028GB



UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

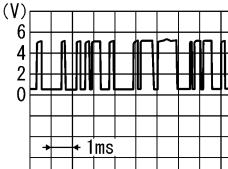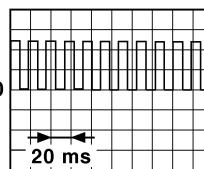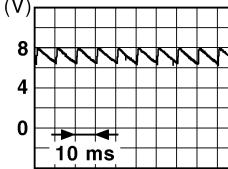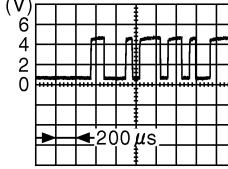Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
20 ^{*1} (L)	Ground	ION ON/OFF signal	Output	Ignition switch ON	Blower motor: ON	0 V
					Blower motor: OFF	12 V
25 (V)	Ground	Manual mode shift down signal	Input	Ignition switch ON	Selector lever down operation	0 V
					Other than the above	12 V
27 (LG)	Ground	Communication signal (METER → AMP.)	Input	Ignition switch ON	—	 SKIA3361E
28 (R)	Ground	Vehicle speed signal (8-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is approx. 40 km/h (25 MPH)]	 JSNIA0012GB
30 (V)	Ground	Parking brake switch signal	Input	Ignition switch ON	Parking brake is applied	0 V
					Parking brake is released	 JSNIA0007GB
34 (Y)	Ground	Communication signal (AMP. → LCD)	Output	Ignition switch ON	—	 JSNIA0027GB
41 (V)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
42 (Y)	Ground	Fuel level sensor signal	Input	Ignition switch ON	—	 JSNIA0013GB

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

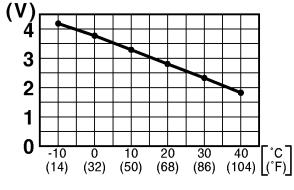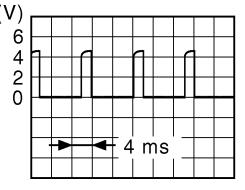Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
45 (P)	Ground	Ambient sensor signal	Input	—	—	 JSNIA0014GB
47*1 (G)	Ground	Exhaust gas / outside odor detecting sensor signal	Input	Ignition switch ON	NOTE: The signal is different by measurement environment of a vehicle	 ZJIA1163J
53 (G)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
54 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
55 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
56 (L)	Ground	CAN-H	—	—	—	—
57 (W)	Ground	Brake fluid level switch signal	Input	Ignition switch ON	Brake fluid level is normal.	5 V
					The brake fluid level is lower than the low level	0 V
58 (BR)	Ground	Fuel level sensor signal ground	—	Ignition switch ON	—	0 V
61 (BR)	Ground	Ambient sensor signal ground	—	Ignition switch ON	—	0 V
63*2 (R)	Ground	—	—	—	—	—
71 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
72 (P)	Ground	CAN-L	—	—	—	—

*1: With ACCS


*2: Unified meter and A/C amp. is not used for control.

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - METER -

INFOID:0000000006849171

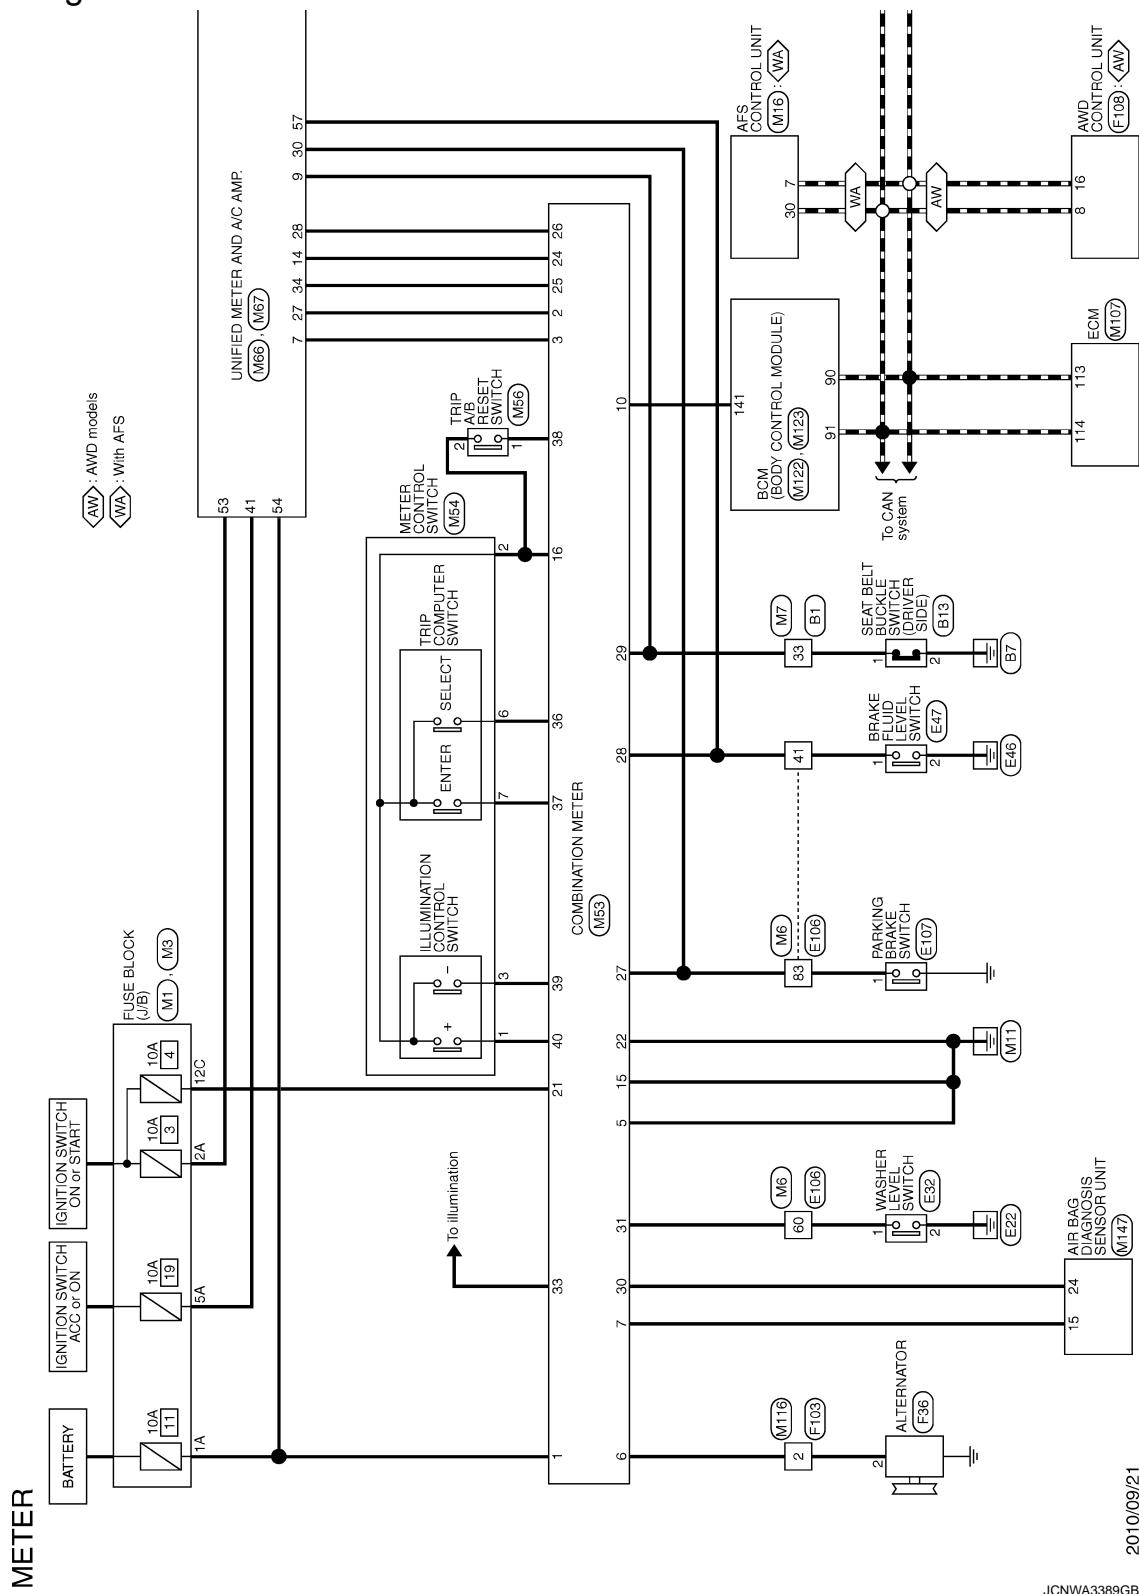


UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

-  : With NAVI
-  : Without NAVI
-  : With ICC

* : This connector is not shown in "Harness Layout".

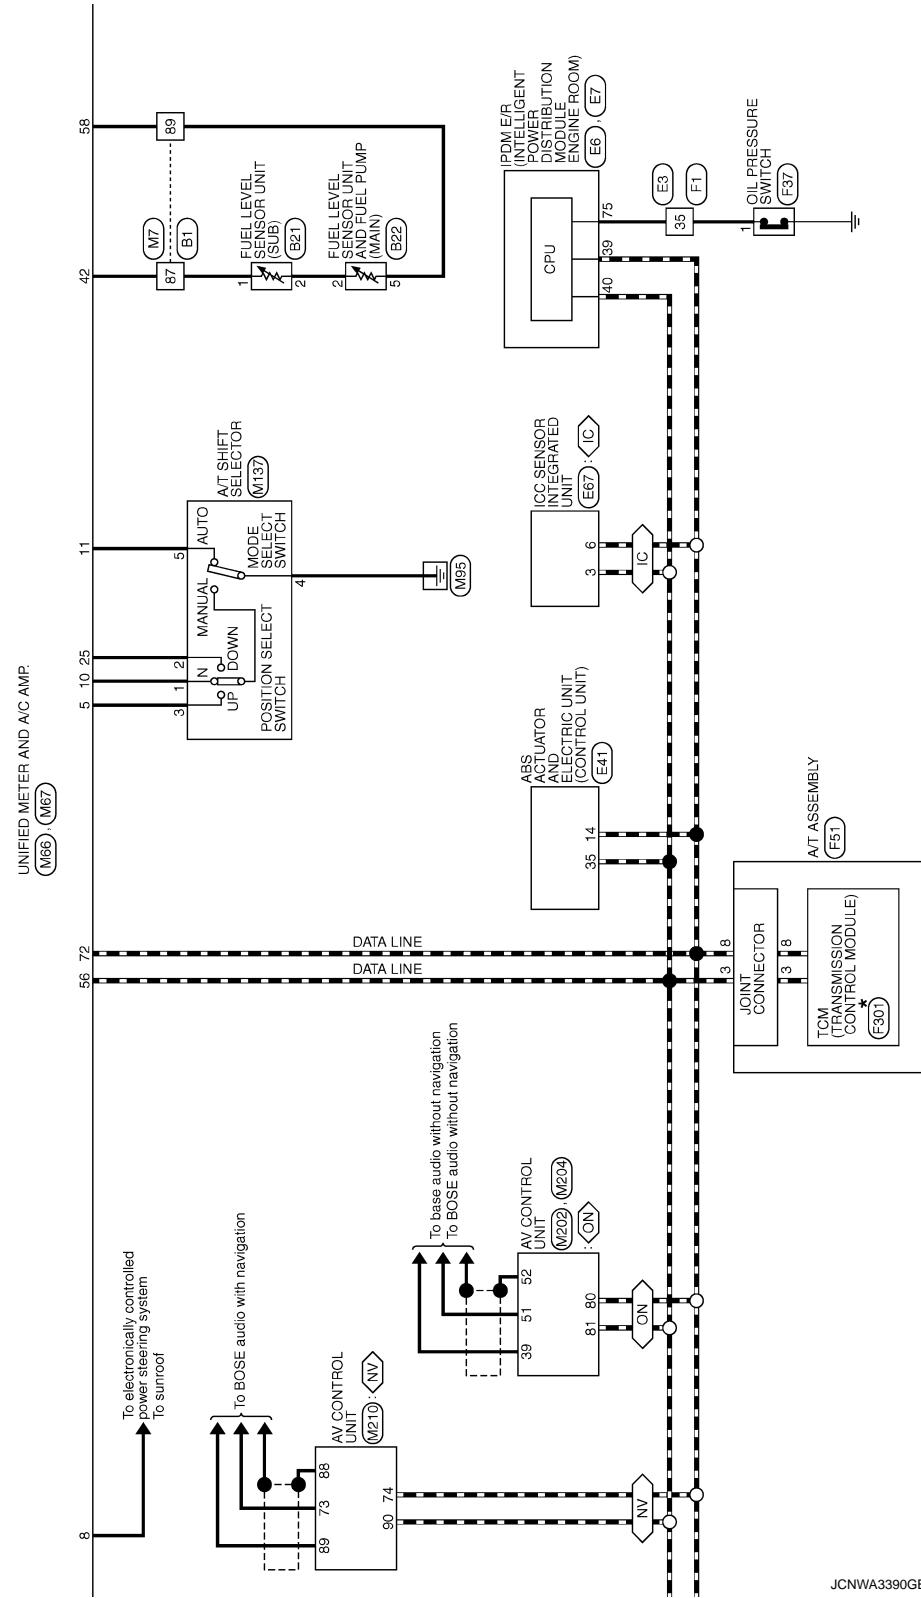

JCNWA3390GB

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

A

B

C

D

E

F

G

H

I

J

K


L

M

MWI

O

P

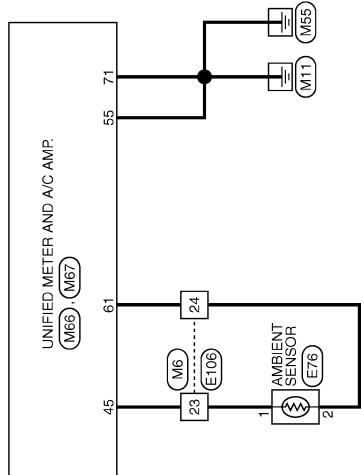

JCNWA3391GB

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

METER		Connector No.	B1	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	WIRE TO WIRE			63	R	
Connector Type	THBDFW-CS16-TM4			64	G	
				65	SHIELD	
				66	W	
				67	V	
				68	SB	
				69	SHIELD	
				70	W	
				73	SB	
				74	L	
				75	V	
				76	BR	
				77	R	
				78	P	
				79	GR	
				83	BG	
				85	Y	
				86	LG	
				87	Y	
				88	R	
				89	B	
				90	BG	
				91	G	
				92	BR	
				93	G	
				94	SB	
				95	G	
				96	Y	
				98	V	
				99	GR	
				100	BR	
				101	W	
				102	SB	
				103	SHIELD	
				104	Y	
				105	W	
				106	SB	
				107	P	
				108	R	
				109	W	
				110	BR	
				111	SB	
				112	SHIELD	
				113	W	
				114	Y	
				115	W	
				116	SB	
				117	P	
				118	BR	
				119	SB	
				120	W	
				121	BR	
				122	Y	
				123	W	
				124	P	
				125	BR	
				126	SB	
				127	W	
				128	BR	
				129	Y	
				130	W	
				131	SB	
				132	SHIELD	
				133	W	
				134	Y	
				135	W	
				136	BR	
				137	Y	
				138	W	
				139	SB	
				140	SHIELD	
				141	W	
				142	Y	
				143	W	
				144	SB	
				145	SHIELD	
				146	W	
				147	Y	
				148	W	
				149	SB	
				150	Y	
				151	W	
				152	P	
				153	BR	
				154	SB	
				155	SHIELD	
				156	W	
				157	Y	
				158	W	
				159	SB	
				160	SHIELD	
				161	W	
				162	SHIELD	

A/C AMP		Connector No.	B21	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	FUEL LEVEL SENSOR UNIT (SUB)			19	W	
Connector Type	ED0FGY-RS			20	GR	
				21	Y	
				22	G	
				23	W	
				25	SE	
				26	R	
				28	P	
				29	L	
				30	LG	
				31	LG	
				32	R	
				33	P	
				34	W	
				35	SE	
				40	BG	
				41	G	
				42	Y	
				43	BR	
				44	BG	
				45	SG	
				46	RG	
				47	GY	
				48	RG	
				49	GR	
				50	RG	
				51	GR	
				52	RG	
				53	GR	
				54	RG	
				55	GR	
				56	RG	
				57	GR	
				58	RG	
				59	GR	
				60	RG	
				61	GR	
				62	RG	

FUEL LEVEL SENSOR UNIT (SUB)		Connector No.	E22	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	FUEL LEVEL SENSOR UNIT (SUB)			1	P	
Connector Type	ED0FGY-RS			2	W	
				3	B	
				4	R	
				5	B	
				39	P	
				40	L	
				41	B/N	
				42	Y	
				43	SE	
				44	BR	
				45	G	
				46	R	
				47	SG	
				48	RG	
				49	GR	
				50	RG	
				51	GR	
				52	RG	
				53	GR	
				54	RG	
				55	GR	
				56	RG	
				57	GR	
				58	RG	
				59	GR	
				60	RG	
				61	GR	
				62	RG	

SEAT BELT BUCKLE SWITCH (DRIVER SIDE)		Connector No.	E13	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)			1	P	
Connector Type	TH0TFW-HH			2	W	
				3	B	
				4	R	
				5	B	
				39	P	
				40	L	
				41	B/N	
				42	Y	
				43	SE	
				44	BR	
				45	G	
				46	R	
				47	SG	
				48	RG	
				49	GR	
				50	RG	
				51	GR	
				52	RG	
				53	GR	
				54	RG	
				55	GR	
				56	RG	
				57	GR	
				58	RG	
				59	GR	
				60	RG	
				61	GR	
				62	RG	

WIRE TO WIRE		Connector No.	E3	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	WIRE TO WIRE			1	P	
Connector Type	SAA3MB-RS10-SUZ2			2	W	
				3	B	
				4	R	
				5	B	
				39	P	
				40	L	
				41	B/N	
				42	Y	
				43	SE	
				44	BR	
				45	G	
				46	R	
				47	SG	
				48	RG	
				49	GR	
				50	RG	
				51	GR	
				52	RG	
				53	GR	
				54	RG	
				55	GR	
				56	RG	
				57	GR	
				58	RG	
				59	GR	
				60	RG	
				61	GR	
				62	RG	

WIRE TO WIRE		Connector No.	E4	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	WIRE TO WIRE			1	P	
Connector Type	SAA3MB-RS10-SUZ2			2	W	
				3	B	
				4	R	
				5	B	
				39	P	
				40	L	
				41	B/N	
				42	Y	
				43	SE	
				44	BR	
				45	G	
				46	R	
				47	SG	
				48	RG	
				49	GR	
				50	RG	
				51	GR	
				52	RG	
				53	GR	
				54	RG	
				55	GR	
				56	RG	
				57	GR	
				58	RG	
				59	GR	
				60	RG	
				61	GR	
				62	RG	

J

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

A

B

C

D

M

T

G

I

—

X


M

O


P

MWI


METER	Connector No. E7	Connector Name FRONT L/R INTELLIGENT POWER DISTRIBUTION MODULE	Connector Type TH20DFW-CS12-M4



Terminal No.	Color of Wire	Signal Name [Specification]
48	L	—
49	BG	—
51	Y	—
53	W	—
54	P	—
55	SB	—
56	LG	—
57	G	—
58	V	—
59	BR	—
70	BG	—
74	P	—
75	SB	—
76	Y	—
77	R	—
80	W	—



Connector No. E1	Connector Name ABS ACTUATOR AND ELECTRIC UNIT (CONTROLLER)	Connector Type BAAD2FB-AHZ4-LH



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	G	UBNR
3	R	UBVR
4	B	GND
5	Y	DS EL
6	BG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
14	P	CAN-H
25	Y	BUS-L
26	LG	DP FL
27	GR	DS RL
28	G	UZ
29	G	DS RR
30	SB	BL S
31	R	VDC OFF SW
35	L	CAN-H
45	B	BUS-H

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	—
2	B	—



Connector No. E17	Connector Name IGC SENSOR INTEGRATED UNIT	Connector Type RS06FB-PR



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	IGNITION
2	L	ITS COMM+H
3	L	CAN-H
4	B	GND
5	P	ITS COMM-L
6	P	CAN-L

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	AMBIENT SENSOR
2	G	RS06FB
3	—	—

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	—
2	P	—

Terminal No.	Color of Wire	Signal Name [Specification]
1	—	—
2	—	—

JCNWAW3393GB

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

METER		Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]	
Terminal No.	Color of Wire	1	R	64	B	63	V	98	SHEILD
2	W	-	-	65	G	99	L	-	-
3	B	-	-	66	R	100	P	-	-
4	GR	-	-	67	SHEILD	-	-	-	-
5	GR	-	-	68	Y	-	-	-	-
8	Y	-	-	69	G	-	-	-	-
9	BR	-	-	70	W	-	-	-	-
10	EG	-	-	71	R	-	-	-	-
11	SB	-	-	72	Y	-	-	-	-
12	BG	-	-	73	B	-	-	-	-
13	L	-	-	74	BR	-	-	-	-
14	R	-	-	74	L	-	-	-	-
15	P	-	-	75	G	-	-	-	-
16	V	-	-	75	W	-	-	-	-
17	SB	-	-	76	Y	-	-	-	-
18	V	-	-	77	R	-	-	-	-
20	EG	-	-	77	V	-	-	-	-
21	L	-	-	78	L	-	-	-	-
22	V	-	-	78	BR	-	-	-	-
23	G	-	-	79	Y	-	-	-	-
24	P	-	-	79	L	-	-	-	-
25	Y	-	-	80	-	-	-	-	-
26	V	-	-	81	R	-	-	-	-
27	W	-	-	82	SB	-	-	-	-
28	G	-	-	83	BR	-	-	-	-
31	EG	-	-	84	G	-	-	-	-
32	W	-	-	85	L	-	-	-	-
33	B	-	-	86	P	-	-	-	-
34	R	-	-	87	Y	-	-	-	-
35	G	-	-	89	GR	-	-	-	-
36	SHEILD	-	-	90	SHEILD	-	-	-	-
37	V	-	-	91	W	-	-	-	-
38	BR	-	-	92	Y	-	-	-	-
39	BG	-	-	93	Y	-	-	-	-
41	W	-	-	94	LG	-	-	-	-
42	G	-	-	95	BR	-	-	-	-
43	BR	-	-	96	P	-	-	-	-
45	W	-	-	97	R	-	-	-	-

Terminal No.	Color of Wire	1	2	3	4
1	G	-	-	-	-
2	V	-	-	-	-
3	P	-	-	-	-
4	C	-	-	-	-

JCNWA3394GB

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

METER

Connector No.	F51								
Connector Name	A/T ASSEMBLY								
Connector Type	TRK0FG-DG7								
1	-	-	VIGN	-	-	-	-	-	
2	-	BATT	-	-	-	-	-	-	
3	-	CANH	-	-	-	-	-	-	
4	-	K LINE	-	-	-	-	-	-	
5	-	GND	-	-	-	-	-	-	
6	-	VIGN	-	-	-	-	-	-	
7	-	REV LAMP RLY	-	-	-	-	-	-	
8	-	CAN-L	-	-	-	-	-	-	
9	-	START RLY	-	-	-	-	-	-	
10	-	GND	-	-	-	-	-	-	

34	B	-
35	L	-
36	P	-
37	Y	-
38	G	-
43	P	-
44	L	-
45	Y	-
46	V	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	BR	-
3	L	-
4	V	-
5	B	-
6	Y	-
7	R	-
8	P	-
9	GR	-
10	B	-

Connector No.	F108
Connector Name	AWD CONTROL UNIT
Connector Type	TH16FW-NH



9C	BG	-
10C	L	-
11C	R	-
12C	BG	-

1	-	VIGN
2	-	BATT
3	-	CANH
4	-	K LINE
5	-	GND
6	-	VIGN
7	-	REV LAMP RLY
8	-	CAN-H
9	-	START RELY
10	-	GND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NSD61FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1A	GR	-
2A	G	-
3A	L	-
4A	P	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS

5C	6C	7C	8C	9C	10C	11C	12C
2C	3C	4C	5C	6C	7C	8C	9C



Terminal No.	Color of Wire	Signal Name [Specification]
6C	R	-
7C	B	-

CAN-L		
P		
16		

Connector No.	F301
Connector Name	TOM (TRANSMISSION CONTROL MODULE)
Connector Type	SP10FG



Terminal No.	Color of Wire	Signal Name [Specification]
U, V, W		



UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

METER		Connector No.	M6	99	V	-
Connector Name	WIRE TO WIRE	Connector No.	160	SB	-	-
Connector Type	THB6MW-CS16-TM4	Connector No.	50	P	R	50
		Connector No.	51	BR	P	60
		Connector No.	52	L	L	61
		Connector No.	53	P	SHEILD	62
		Connector No.	54	Y	SHEILD	63
		Connector No.	56	BR	R	64
		Connector No.	57	G	G	65
		Connector No.	59	W	SE	66
		Connector No.	60	L	V	67
		Connector No.	61	G	LG	68
		Connector No.	62	SB	SHEILD	69
		Terminal No.	63	G	W	70
		Terminal No.	64	B	G	73
		Terminal No.	65	W	R	74
		Terminal No.	66	R	W	75
		Terminal No.	67	SHEILD	W	76
		Terminal No.	68	Y	W	77
		Terminal No.	69	GR	W	78
		Terminal No.	70	LG	- [Without automatic drive positioner]	79
		Terminal No.	71	LG	- [Without automatic drive positioner]	80
		Terminal No.	72	Y	G	83
		Terminal No.	73	SB	BG	85
		Terminal No.	74	BR	R	86
		Terminal No.	74	L	- [With IGC]	87
		Terminal No.	75	R	- [Without IGC]	88
		Terminal No.	75	G	W	89
		Terminal No.	76	W	- [With IGC]	90
		Terminal No.	76	GR	- Without IGC	91
		Terminal No.	77	R	- [With IGC]	92
		Terminal No.	77	P	- Without IGC	93
		Terminal No.	78	L	- [With IGC]	94
		Terminal No.	78	R	- Without IGC	95
		Terminal No.	79	Y	- [With IGC]	96
		Terminal No.	79	W	- Without IGC	98
		Terminal No.	80	SB	V	99
		Terminal No.	81	SB	W	-
		Terminal No.	82	SB	W	-
		Terminal No.	83	Y	R	-
		Terminal No.	84	G	SHEILD	-
		Terminal No.	85	L	SHEILD	-
		Terminal No.	86	P	L	31
		Terminal No.	87	W	P	32
		Terminal No.	88	GR	SB	33
		Terminal No.	89	SHEILD	L	34
		Terminal No.	90	Y	P	35
		Terminal No.	91	W	L	36
		Terminal No.	92	Y	P	37
		Terminal No.	93	BR	BR	38
		Terminal No.	94	P	Y	39
		Terminal No.	95	GR	L	44
		Terminal No.	96	W	GR	45
		Terminal No.	97	L	LG	46
		Terminal No.	98	SB	SB	47

JCNWA3396GB

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

METER

Connector No.	M16	Color of Wire	Signal Name [Specification]
Connector Name	AFS CONTROL UNIT	GR	BATTERY POWER SUPPLY
Connector Type	TH46FW-NH	LG	COMMUNICATION SIGNAL (METER->AMP.)
		GR	COMMUNICATION SIGNAL (AMP->METER)
		GROUND	
		P	ALTERNATOR SIGNAL
		BR	AIR BAG SIGNAL
		G	SECURITY SIGNAL
		GROUND	
		B	METER CONTROL SWITCH GROUND
		BL	ILL. GND
		R	
		BG	[IGNITION]POWER SUPPLY
		B	GROUND
		BR	COMMUNICATION SIGNAL (LCD->AMP.)
		Y	COMMUNICATION SIGNAL (AMP->LCD)
		R	VEHICLE SPEED SIGNAL (8-PULSE)
		W	
		CAN-1	PARKING BRAKE SWITCH SIGNAL
		P	
		HSG-R	BRAKE FLUID LEVEL SWITCH SIGNAL
		GR	
		PSG-R	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
		LG	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
		R	WASHER LEVEL SWITCH SIGNAL
		SMR-1 (-)	
		B	ILLUMINATION CONTROL
		SMR-2 (-)	
		G	
		SMI-1 (+)	
		W	SELECT SWITCH SIGNAL
		SMI-2 (+)	
		LG	ENTER SWITCH SIGNAL
		S5	AMDS-R
		V	PSV-L
		BR	GRND
		B	PSG-1
		LG	HS-R
		EG	PS-L
		L	CAN-H
		EG	
		G	SMR-2 (+)
		W	SMR-1 (+)
		R	SMI-2 (-)
		B	SMI-1 (-)
		L	AMDS-L

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	IGN
2	LG	PSG-R
4	Y	PSV-R
6	W	HSV-R
7	P	
9	B	HSG-R
11	GR	PSF-R
13	R	SMR-1 (-)
15	B	SMR-2 (-)
17	W	SMI-1 (+)
19	S5	SMI-2 (+)
24	V	AMDS-R
25	B	PSV-L
27	BR	GRND
28	EG	PSG-1
29	EG	HS-R
30	L	PS-L
32	G	CAN-H
34	W	
36	R	
38	B	
40	L	

Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP.)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. GND
20	R	
21	BG	[IGNITION]POWER SUPPLY
22	B	GROUND
24	BR	COMMUNICATION SIGNAL (LCD->AMP.)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PULSE)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	BRAKE FLUID LEVEL SWITCH SIGNAL
29	SG	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
33	B	ILLUMINATION CONTROL
36	LG	SELECT SWITCH SIGNAL
37	S5	ENTER SWITCH SIGNAL
38	L	TRIP A/B RESET SWITCH SIGNAL (-)
39	P	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (-)

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	IGN
2	LG	PSG-R
4	Y	PSV-R
6	W	HSV-R
7	P	
9	B	HSG-R
11	GR	PSF-R
13	R	SMR-1 (-)
15	B	SMR-2 (-)
17	G	SMI-1 (+)
19	W	SMI-2 (+)
24	V	AMDS-R
25	B	PSV-L
27	BR	GRND
28	EG	PSG-1
29	EG	HS-R
30	L	PS-L
32	G	CAN-H
34	W	
36	R	
38	B	
40	L	

Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP.)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. GND
20	R	
21	BG	[IGNITION]POWER SUPPLY
22	B	GROUND
24	BR	COMMUNICATION SIGNAL (LCD->AMP.)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PULSE)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	BRAKE FLUID LEVEL SWITCH SIGNAL
29	SG	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
33	B	ILLUMINATION CONTROL
36	LG	SELECT SWITCH SIGNAL
37	S5	ENTER SWITCH SIGNAL
38	L	TRIP A/B RESET SWITCH SIGNAL (-)
39	P	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (-)

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	BATTERY POWER SUPPLY
2	BR	COMMUNICATION SIGNAL (METER->AMP.)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. GND
20	R	
21	BG	[IGNITION]POWER SUPPLY
22	B	GROUND
24	BR	COMMUNICATION SIGNAL (LCD->AMP.)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PULSE)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	BRAKE FLUID LEVEL SWITCH SIGNAL
29	SG	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
33	B	ILLUMINATION CONTROL
36	LG	SELECT SWITCH SIGNAL
37	S5	ENTER SWITCH SIGNAL
38	L	TRIP A/B RESET SWITCH SIGNAL (-)
39	P	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (-)

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	IGN
2	LG	PSG-R
4	Y	PSV-R
6	W	HSV-R
7	P	
9	B	HSG-R
11	GR	PSF-R
13	R	SMR-1 (-)
15	B	SMR-2 (-)
17	G	SMI-1 (+)
19	S5	SMI-2 (+)
24	V	AMDS-R
25	B	PSV-L
27	BR	GRND
28	EG	PSG-1
29	EG	HS-R
30	L	PS-L
32	G	CAN-H
34	W	
36	R	
38	B	
40	L	

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	IGN
2	LG	PSG-R
4	Y	PSV-R
6	W	HSV-R
7	P	
9	B	HSG-R
11	GR	PSF-R
13	R	SMR-1 (-)
15	B	SMR-2 (-)
17	G	SMI-1 (+)
19	S5	SMI-2 (+)
24	V	AMDS-R
25	B	PSV-L
27	BR	GRND
28	EG	PSG-1
29	EG	HS-R
30	L	PS-L
32	G	CAN-H
34	W	
36	R	
38	B	
40	L	

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	IGN
2	LG	PSG-R
4	Y	PSV-R
6	W	HSV-R
7	P	
9	B	HSG-R
11	GR	PSF-R
13	R	SMR-1 (-)
15	B	SMR-2 (-)
17	G	SMI-1 (+)
19	S5	SMI-2 (+)
24	V	AMDS-R
25	B	PSV-L
27	BR	GRND
28	EG	PSG-1
29	EG	HS-R
30	L	PS-L
32	G	CAN-H
34	W	
36	R	
38	B	
40	L	

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	IGN
2	LG	PSG-R
4	Y	PSV-R
6	W	HSV-R
7	P	
9	B	HSG-R
11	GR	PSF-R
13	R	SMR-1 (-)
15	B	SMR-2 (-)
17	G	SMI-1 (+)
19	S5	SMI-2 (+)
24	V	AMDS-R
25	B	PSV-L
27	BR	GRND
28	EG	PSG-1
29	EG	HS-R
30	L	PS-L
32	G	CAN-H
34	W	
36	R	
38	B	
40	L	

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	IGN
2	LG	PSG-R
4	Y	PSV-R
6	W	HSV-R
7	P	
9	B	HSG-R
11	GR	PSF-R
13	R	SMR-1 (-)
15	B	SMR-2 (-)
17	G	SMI-1 (+)
19	S5	SMI-2 (+)
24	V	AMDS-R
25	B	PSV-L
27	BR	GRND
28	EG	PSG-1
29	EG	HS-R
30	L	PS-L
32	G	CAN-H
34	W	
36	R	
38	B	
40	L	

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	IGN
2	LG	PSG-R
4	Y	PSV-R
6	W	HSV-R
7	P	
9	B	HSG-R
11	GR	PSF-R
13	R	SMR-1 (-)
15	B	SMR-2 (-)
17	G	SMI-1 (+)
19	S5	SMI-2 (+)
24	V	AMDS-R
25	B	PSV-L
27	BR	GRND
28	EG	PSG-1
29	EG	HS-R
30	L	PS-L
32	G	CAN-H
34	W	
36	R	
38	B	
40	L	

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

METER		Connector No.	M107	Connector Name	ECM	Connector Type	RJ24FGY-RZB-R-LH-Z	Terminal Color of Wire	WIRE TO WIRE	Signal Name [Specification]	ROOM ANT2+	Terminal Color of Wire	P	Signal Name [Specification]	STOP LAMP SW 2
CONNECTOR M116		Connector No.	M116	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	7.3	G	PASSANGER DOOR ANT-	DR DOOR UNLOCK SENSOR	7.4	SB	PASSANGER DOOR ANT-	KEY SLOT SW
CONNECTOR M119		Connector No.	M119	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	7.5	GR	PASSANGER DOOR ANT+	IGN F/B	7.6	V	DRIVER DOOR ANT-	KEY SLOT SW
CONNECTOR M121		Connector No.	M121	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	7.7	LG	DRIVER DOOR ANT+	PASSENGER DOOR SW	7.8	W	POWER WINDOW SW COMM	POWER WINDOW SW COMM
CONNECTOR M123		Connector No.	M123	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	7.9	BR	ROOM ANT1-	PUSH-BUTTON IGNITION SWILL POWER	8.0	GR	POWER WINDOW SW COMM	PUSH-BUTTON IGNITION SWILL POWER
CONNECTOR M124		Connector No.	M124	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	7.9	BR	ROOM ANT1-	LOCK IND	8.1	W	RECEIVER/SENSOR GND	RECEIVER/SENSOR GND
CONNECTOR M125		Connector No.	M125	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	8.0	GR	ROOM ANT1+	NATS ANT AMP	8.1	W	IGN RELAY (F/B) CONT	NATS ANT AMP
CONNECTOR M126		Connector No.	M126	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	8.2	R	IGN RELAY (F/B) CONT	IGN RELAY (F/B) CONT	8.3	Y	KEYLESS ENTRY RECEIVER COMM	KEYLESS ENTRY RECEIVER COMM
CONNECTOR M127		Connector No.	M127	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	8.7	BR	COMBI SW INPUT 5	COMBI SW INPUT 5	8.8	V	COMBI SW INPUT 3	COMBI SW INPUT 5
CONNECTOR M128		Connector No.	M128	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	8.9	BR	PUSH SW	PUSH SW	9.0	P	CAN-L	CAN-L
CONNECTOR M129		Connector No.	M129	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	9.1	L	CAN-H	CAN-H	9.2	LG	CAN-H	CAN-H
CONNECTOR M130		Connector No.	M130	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	9.3	V	ON IND	KEY SLOT ILL	9.4	Y	PUDDLE LAMP CONT	PUDDLE LAMP CONT
CONNECTOR M131		Connector No.	M131	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	9.5	LG	ACC RELAY CONT	ACC RELAY CONT	9.6	BR	A/T SHIFT SELECTOR POWER SUPPLY	A/T SHIFT SELECTOR POWER SUPPLY
CONNECTOR M132		Connector No.	M132	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	9.7	L	S/L CONDITION 1	S/L CONDITION 1	9.8	P	S/L CONDITION 2	S/L CONDITION 1
CONNECTOR M133		Connector No.	M133	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	9.9	R	SHIFT P	SHIFT P	10.0	G	PASSENGER DOOR REQUEST SW	PASSENGER DOOR REQUEST SW
CONNECTOR M134		Connector No.	M134	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	10.1	SB	DRIVER DOOR REQUEST SW	DRIVER DOOR REQUEST SW	10.2	BR	FLOWER FAN MOTOR RELAY SW	FLOWER FAN MOTOR RELAY SW
CONNECTOR M135		Connector No.	M135	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	10.3	L	KEYLESS ENTRY RECEIVER POWER SUPPLY	KEYLESS ENTRY RECEIVER POWER SUPPLY	10.4	LG	S/L UNIT POWER SUPPLY	S/L UNIT POWER SUPPLY
CONNECTOR M136		Connector No.	M136	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	10.5	W	COMBI SW INPUT 1	COMBI SW INPUT 1	10.6	W	COMBI SW INPUT 2	COMBI SW INPUT 2
CONNECTOR M137		Connector No.	M137	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	10.7	LG	COMBI SW INPUT 3	COMBI SW INPUT 3	10.8	LG	COMBI SW INPUT 4	COMBI SW INPUT 3
CONNECTOR M138		Connector No.	M138	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	10.9	Y	HAZARD SW	HAZARD SW	11.0	G	S/L UNIT COMM	S/L UNIT COMM
CONNECTOR M139		Connector No.	M139	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	11.1	Y	SHFT P	SHFT P	11.2	LG	REAR WINDOW DEFROGGER RELAY CONT	REAR WINDOW DEFROGGER RELAY CONT
CONNECTOR M140		Connector No.	M140	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	11.3	LG	SHFT P	SHFT P	11.4	LG	SHFT P	SHFT P
CONNECTOR M141		Connector No.	M141	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	11.5	LG	SHFT P	SHFT P	11.6	LG	SHFT P	SHFT P
CONNECTOR M142		Connector No.	M142	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	11.7	LG	SHFT P	SHFT P	11.8	LG	SHFT P	SHFT P
CONNECTOR M143		Connector No.	M143	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	11.9	LG	SHFT P	SHFT P	12.0	LG	SHFT P	SHFT P
CONNECTOR M144		Connector No.	M144	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	12.1	LG	SHFT P	SHFT P	12.2	LG	SHFT P	SHFT P
CONNECTOR M145		Connector No.	M145	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	12.3	LG	SHFT P	SHFT P	12.4	LG	SHFT P	SHFT P
CONNECTOR M146		Connector No.	M146	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	12.5	LG	SHFT P	SHFT P	12.6	LG	SHFT P	SHFT P
CONNECTOR M147		Connector No.	M147	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	12.7	LG	SHFT P	SHFT P	12.8	LG	SHFT P	SHFT P
CONNECTOR M148		Connector No.	M148	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	12.9	LG	SHFT P	SHFT P	13.0	LG	SHFT P	SHFT P
CONNECTOR M149		Connector No.	M149	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	13.1	LG	SHFT P	SHFT P	13.2	LG	SHFT P	SHFT P
CONNECTOR M150		Connector No.	M150	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	13.3	LG	SHFT P	SHFT P	13.4	LG	SHFT P	SHFT P
CONNECTOR M151		Connector No.	M151	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	13.5	LG	SHFT P	SHFT P	13.6	LG	SHFT P	SHFT P
CONNECTOR M152		Connector No.	M152	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	13.7	LG	SHFT P	SHFT P	13.8	LG	SHFT P	SHFT P
CONNECTOR M153		Connector No.	M153	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	13.9	LG	SHFT P	SHFT P	14.0	LG	SHFT P	SHFT P
CONNECTOR M154		Connector No.	M154	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	14.1	LG	SHFT P	SHFT P	14.2	LG	SHFT P	SHFT P
CONNECTOR M155		Connector No.	M155	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	14.3	LG	SHFT P	SHFT P	14.4	LG	SHFT P	SHFT P
CONNECTOR M156		Connector No.	M156	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	14.5	LG	SHFT P	SHFT P	14.6	LG	SHFT P	SHFT P
CONNECTOR M157		Connector No.	M157	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	14.7	LG	SHFT P	SHFT P	14.8	LG	SHFT P	SHFT P
CONNECTOR M158		Connector No.	M158	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	14.9	LG	SHFT P	SHFT P	15.0	LG	SHFT P	SHFT P
CONNECTOR M159		Connector No.	M159	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	15.1	LG	SHFT P	SHFT P	15.2	LG	SHFT P	SHFT P
CONNECTOR M160		Connector No.	M160	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	15.3	LG	SHFT P	SHFT P	15.4	LG	SHFT P	SHFT P
CONNECTOR M161		Connector No.	M161	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	15.5	LG	SHFT P	SHFT P	15.6	LG	SHFT P	SHFT P
CONNECTOR M162		Connector No.	M162	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	15.7	LG	SHFT P	SHFT P	15.8	LG	SHFT P	SHFT P
CONNECTOR M163		Connector No.	M163	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	15.9	LG	SHFT P	SHFT P	16.0	LG	SHFT P	SHFT P
CONNECTOR M164		Connector No.	M164	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	16.1	LG	SHFT P	SHFT P	16.2	LG	SHFT P	SHFT P
CONNECTOR M165		Connector No.	M165	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	16.3	LG	SHFT P	SHFT P	16.4	LG	SHFT P	SHFT P
CONNECTOR M166		Connector No.	M166	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	16.5	LG	SHFT P	SHFT P	16.6	LG	SHFT P	SHFT P
CONNECTOR M167		Connector No.	M167	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	16.7	LG	SHFT P	SHFT P	16.8	LG	SHFT P	SHFT P
CONNECTOR M168		Connector No.	M168	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	16.9	LG	SHFT P	SHFT P	17.0	LG	SHFT P	SHFT P
CONNECTOR M169		Connector No.	M169	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	17.1	LG	SHFT P	SHFT P	17.2	LG	SHFT P	SHFT P
CONNECTOR M170		Connector No.	M170	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	17.3	LG	SHFT P	SHFT P	17.4	LG	SHFT P	SHFT P
CONNECTOR M171		Connector No.	M171	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	17.5	LG	SHFT P	SHFT P	17.6	LG	SHFT P	SHFT P
CONNECTOR M172		Connector No.	M172	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	17.7	LG	SHFT P	SHFT P	17.8	LG	SHFT P	SHFT P
CONNECTOR M173		Connector No.	M173	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	17.9	LG	SHFT P	SHFT P	18.0	LG	SHFT P	SHFT P
CONNECTOR M174		Connector No.	M174	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	18.1	LG	SHFT P	SHFT P	18.2	LG	SHFT P	SHFT P
CONNECTOR M175		Connector No.	M175	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	18.3	LG	SHFT P	SHFT P	18.4	LG	SHFT P	SHFT P
CONNECTOR M176		Connector No.	M176	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	18.5	LG	SHFT P	SHFT P	18.6	LG	SHFT P	SHFT P
CONNECTOR M177		Connector No.	M177	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	18.7	LG	SHFT P	SHFT P	18.8	LG	SHFT P	SHFT P
CONNECTOR M178		Connector No.	M178	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	18.9	LG	SHFT P	SHFT P	19.0	LG	SHFT P	SHFT P
CONNECTOR M179		Connector No.	M179	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	19.1	LG	SHFT P	SHFT P	19.2	LG	SHFT P	SHFT P
CONNECTOR M180		Connector No.	M180	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	19.3	LG	SHFT P	SHFT P	19.4	LG	SHFT P	SHFT P
CONNECTOR M181		Connector No.	M181	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	19.5	LG	SHFT P	SHFT P	19.6	LG	SHFT P	SHFT P
CONNECTOR M182		Connector No.	M182	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	19.7	LG	SHFT P	SHFT P	19.8	LG	SHFT P	SHFT P
CONNECTOR M183		Connector No.	M183	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	19.9	LG	SHFT P	SHFT P	20.0	LG	SHFT P	SHFT P
CONNECTOR M184		Connector No.	M184	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	20.1	LG	SHFT P	SHFT P	20.2	LG	SHFT P	SHFT P
CONNECTOR M185		Connector No.	M185	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	20.3	LG	SHFT P	SHFT P	20.4	LG	SHFT P	SHFT P
CONNECTOR M186		Connector No.	M186	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	20.5	LG	SHFT P	SHFT P	20.6	LG	SHFT P	SHFT P
CONNECTOR M187		Connector No.	M187	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	20.7	LG	SHFT P	SHFT P	20.8	LG	SHFT P	SHFT P
CONNECTOR M188		Connector No.	M188	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	20.9	LG	SHFT P	SHFT P	21.0	LG	SHFT P	SHFT P
CONNECTOR M189		Connector No.	M189	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	21.1	LG	SHFT P	SHFT P	21.2	LG	SHFT P	SHFT P
CONNECTOR M190		Connector No.	M190	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	21.3	LG	SHFT P	SHFT P	21.4	LG	SHFT P	SHFT P
CONNECTOR M191		Connector No.	M191	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	21.5	LG	SHFT P	SHFT P	21.6	LG	SHFT P	SHFT P
CONNECTOR M192		Connector No.	M192	Connector Name	WIRED TO WIRE	Connector Type	TK36MW-N10	21.7	LG	SHFT P	SHFT P	21.8	LG	SHFT P	SHFT P</td

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

A

B

C

D

E

F

G

H

1

J


K

L

IV

1

P

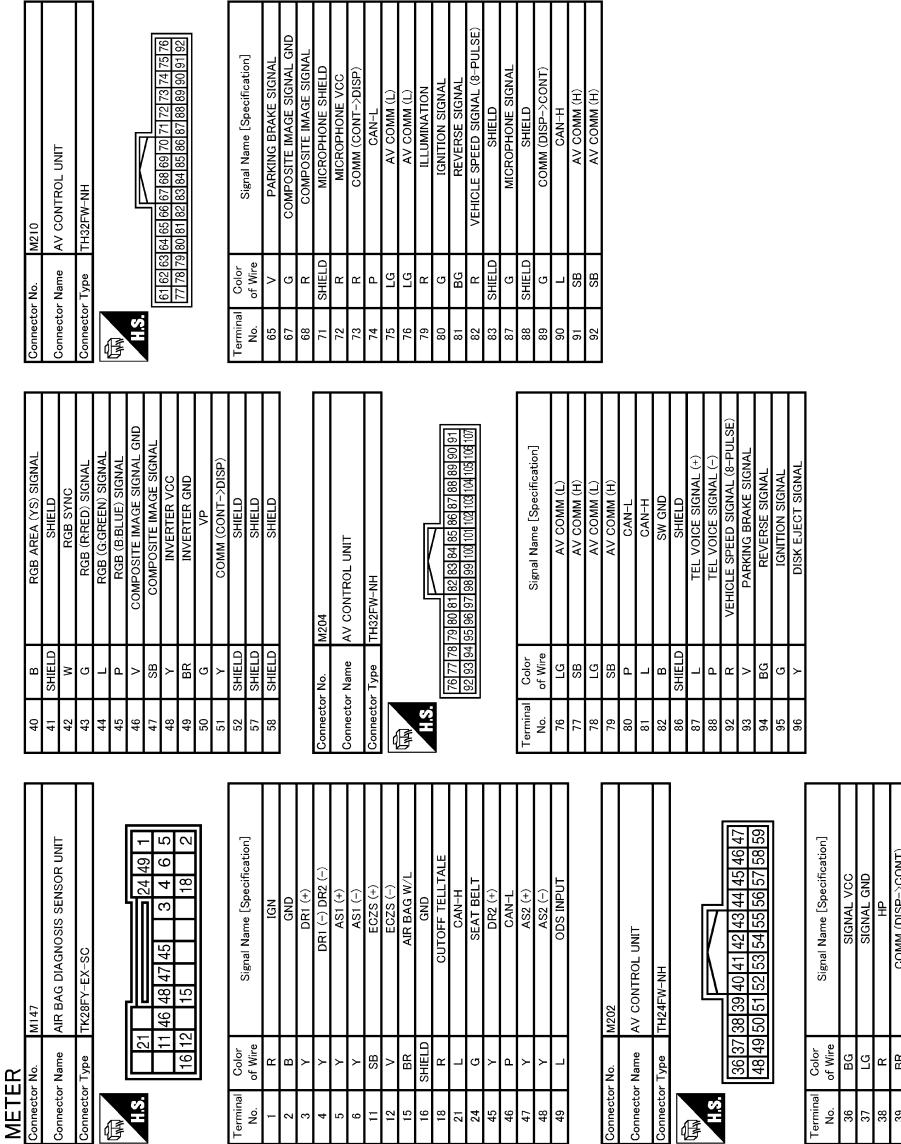

JCNWA3399GB

INFOID:000000006820975

Fail-Safe

FAIL-SAFE

Combination meter performs fail-safe operation when unified meter and A/C amp. communication is malfunction.

Solution for communication error between the unified meter and A/C amp. and combination meter.

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

Function	Specifications
Speedometer	
Tachometer	
Fuel gauge	Reset to zero by suspending communication.
Water temperature gauge	
Illumination control	When suspending communication, change to nighttime mode.
Information display	The display turns off by suspending communication.
Buzzer	The buzzer turns off by suspending communication.
Warning lamp/indicator lamp	ABS warning lamp
	SLIP indicator lamp
	Brake warning lamp
	CRUISE warning lamp
	IBA OFF indicator lamp
	Malfunction indicator lamp
	High beam indicator
	Turn signal indicator lamp
	Tail lamp indicator lamp
	Oil pressure warning lamp
	A/T CHECK warning lamp
	AWD warning lamp
	Low tire pressure warning lamp
	Key warning lamp
	VDC OFF indicator lamp
	BSW warning lamp
	AFS OFF indicator lamp
	Lane departure warning lamp
	LDP ON indicator lamp
	Master warning lamp

DTC Index

INFOID:0000000006342735

Display contents of CONSULT-III	Time	Diagnostic item is detected when ...	Refer to
CAN COMM CIRCUIT [U1000]	CRNT, 1 - 39	When unified meter and A/C amp. is not transmitting or receiving CAN communication signal for 2 seconds or more.	MWI-46
CONTROL UNIT (CAN) [U1010]	CRNT, 1 - 39	When detecting error during the initial diagnosis of CAN controller of unified meter and A/C amp.	MWI-47
COMM ERROR 1 [B2201]	CRNT, 1 - 39	If a communication error is present in the communication line between unified meter and A/C amp. and combination meter for 2 seconds or more.	MWI-48
COMM ERROR 2 [B2202]	CRNT, 1 - 39	If a communication error is present in the communication line between unified meter and A/C amp. and combination meter for 2 seconds or more.	MWI-50
VEHICLE SPEED [B2205]	CRNT, 1 - 39	The abnormal vehicle speed signal is input from ABS actuator and electric unit (control unit) for 2 seconds or more.	MWI-52

UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT-III	Time	Diagnostic item is detected when ...	Refer to
ENGINE SPEED [B2267]	CRNT, 1 - 39	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.	MWI-53
WATER TEMP [B2268]	CRNT, 1 - 39	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.	MWI-54

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS INFORMATION>

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000006860222

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 – 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		• Front fog lamp switch ON • Daytime running light activated (Only for Canada)	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off
		Selector lever in P or N position	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS INFORMATION>

Monitor Item	Condition	Value/Status
ST/INHI RLY	Ignition switch ON	Off
	At engine cranking	INHI ON → ST ON
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN
DETENT SW	Ignition switch ON	<ul style="list-style-type: none"> • Press the selector button with selector lever in P position • Selector lever in any position other than P
	Release the selector button with selector lever in P position	On
S/L RLY -REQ NOTE: For models without steering lock unit, this item is not monitored.	None of the conditions below are present	Off
	<ul style="list-style-type: none"> • Open the driver door after the ignition switch is turned OFF (for a few seconds) • Press the push-button ignition switch when the steering lock is activated 	On
S/L STATE NOTE: For models without steering lock unit, this item is not monitored.	Steering lock is activated	LOCK
	Steering lock is deactivated	UNLOCK
	[DTC: B210A] is detected	UNKWN
DTRL REQ	NOTE: The item is indicated, but not monitored.	Off
OIL P SW	Ignition switch OFF, ACC or engine running	Open
	Ignition switch ON	Close
HOOD SW	Close the hood	Off
	Open the hood	On
HL WASHER REQ	NOTE: The item is indicated, but not monitored.	Off
THFT HRN REQ	Not operation	Off
	<ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	On
HORN CHIRP	Not operating	Off
	Door locking with Intelligent Key (horn chirp mode)	On
CRNRNG LMP REQ	NOTE: The item is indicated, but not monitored.	Off

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI


O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

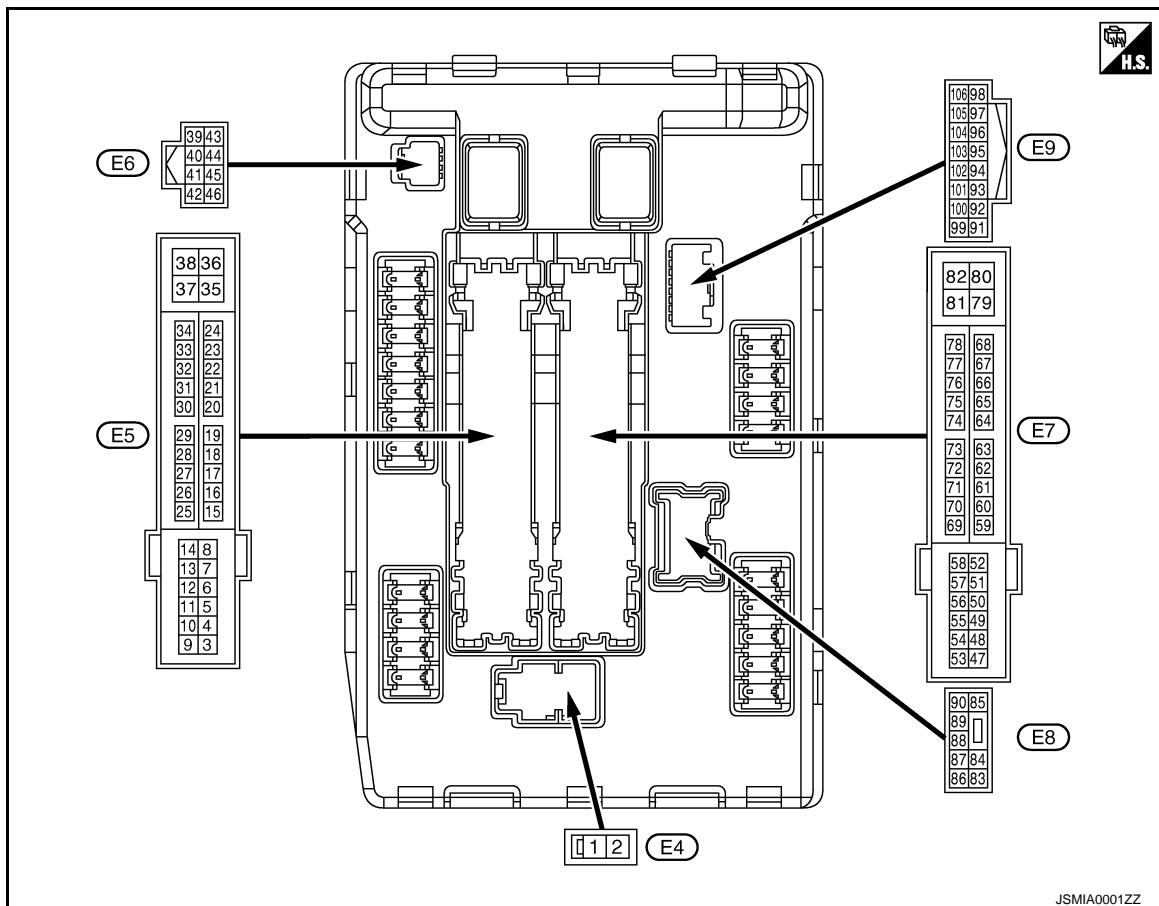

JSMIA0001ZZ

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (V)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
				Front wiper switch LO		Battery voltage
5 (L)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
				Front wiper switch HI		Battery voltage
7 (R)	Ground	Tail, license plate lamps & interior lamps	Output	Ignition switch ON	Lighting switch OFF	0 V
				Lighting switch 1ST		Battery voltage
11* ² (BR)	Ground	Steering lock unit power supply	Output	Ignition switch OFF	A few seconds after open- ing the driver door	Battery voltage
				Ignition switch LOCK	Press the push-button ig- nition switch	Battery voltage
				Ignition switch ACC or ON		0 V
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	Signal name	Input/ Output				
+	-					
13 (Y)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		
				<ul style="list-style-type: none"> • Approximately 1 second after turning the ignition switch ON • Engine running 		
16 (LG)	Ground	Front wiper auto stop	Input	Front wiper stop position		
				Any position other than front wiper stop position		
19 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF		
				Ignition switch ON		
25 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF		
				Ignition switch ON		
26* ¹ (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF		
				Ignition switch ON		
27 (BG)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		
				Ignition switch ON		
28 (L)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		
				Release the push-button ignition switch		
30 (GR)	Ground	Starter relay control	Input	Ignition switch ON		
				Selector lever in any position other than P or N Selector lever P or N		
32* ² (L)	Ground	Steering lock unit condition-1	Input	Steering lock is activated		
				Steering lock is deactivated		
33* ² (P)	Ground	Steering lock unit condition-2	Input	Steering lock is activated		
				Steering lock is deactivated		
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage	K
39 (P)	—	CAN-L	Input/ Output	—	—	L
40 (L)	—	CAN-H	Input/ Output	—	—	M
41 (B/W)	Ground	Ground	—	Ignition switch ON	0 V	MWI
42 (Y)	Ground	Cooling fan relay control	Input	Ignition switch OFF or ACC	0 V	O
				Ignition switch ON	0.7 V	P
43 (SB)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	<ul style="list-style-type: none"> • Press the selector button (Selector lever P) • Selector lever in any position other than P 	Battery voltage
				Release the selector button (selector lever P)	0 V	MWI
44 (BR)	Ground	Horn relay control	Input	The horn is deactivated	Battery voltage	O
				The horn is activated	0 V	P
45 (G)	Ground	Anti theft horn relay control	Input	The horn is deactivated	Battery voltage	MWI
				The horn is activated	0 V	O




IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS INFORMATION>

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	
	+	-			
46 (R)	Ground	Starter relay control	Input	Ignition switch ON	
				Selector lever in any position other than P or N	0 V
				Selector lever P or N	Battery voltage
48 (L)	Ground	A/C relay power supply	Output	Engine running	
				A/C switch OFF	0 V
				A/C switch ON (A/C compressor is operating)	Battery voltage
49 (BG)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
51 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
53 (W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
54 (P)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
55 (SB)	Ground	ECM power supply	Output	Ignition switch OFF	Battery voltage
56 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
57 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
58 (V)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
69 (BR)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	0 – 1.5 V
70 (BG)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF	$\begin{matrix} 0 - 1.0 \text{ V} \\ \downarrow \\ \text{Battery voltage} \\ \downarrow \\ 0 \text{ V} \end{matrix}$
				Ignition switch ON	0 – 1.0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

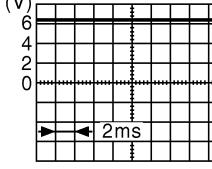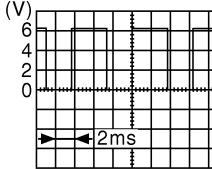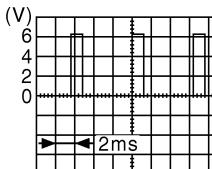Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
74 (P)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Battery voltage
75 (SB)	Ground	Oil pressure switch	Input	Ignition switch ON
				Engine stopped
				Engine running
76 (Y)	Ground	Power generation com- mand signal	Output	Ignition switch ON
				 JPMIA0001GB 6.3 V
				 JPMIA0002GB 3.8 V
				80% is set on "ACTIVE TEST", "AL- TERNATOR DUTY" of "ENGINE"
				 JPMIA0003GB 1.4 V
				80% is set on "ACTIVE TEST", "AL- TERNATOR DUTY" of "ENGINE"
77 (R)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running
				Approximately 1 second or more after turning the ignition switch ON
80 (W)	Ground	Starter motor	Output	At engine cranking
83 (BG)	Ground	Headlamp LO (RH)	Output	Ignition switch ON
				Lighting switch OFF Lighting switch 2ND
84 (V)	Ground	Headlamp LO (LH)	Output	Ignition switch ON
				Lighting switch OFF Lighting switch 2ND
86 (W)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND
				Front fog lamp switch OFF
				<ul style="list-style-type: none"> Front fog lamp switch ON Daytime running light activated (Only for Canada)

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS INFORMATION>

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
87 (L)	Ground	Front fog lamp (LH)	Output Lighting switch 2ND	Front fog lamp switch OFF
				<ul style="list-style-type: none"> Front fog lamp switch ON Daytime running light activated (Only for Can-ada)
88 (GR)	Ground	Washer pump power supply	Output	Ignition switch ON
89 (BR)	Ground	Headlamp HI (RH)	Output Ignition switch ON	Lighting switch OFF
				<ul style="list-style-type: none"> Lighting switch HI Lighting switch PASS
90 (P)	Ground	Headlamp HI (LH)	Output Ignition switch ON	Lighting switch OFF
				<ul style="list-style-type: none"> Lighting switch HI Lighting switch PASS
91 (P)	Ground	Parking lamp (RH)	Output Ignition switch ON	Lighting switch OFF
				Lighting switch 1ST
92 (BG)	Ground	Parking lamp (LH)	Output Ignition switch ON	Lighting switch OFF
				Lighting switch 1ST
97 (V)	Ground	Cooling fan control	Output	Engine idling
104 (LG)	Ground	Hood switch	Input	Close the hood
				Open the hood

*¹: Only for the models with ICC system

*²: Models with steering lock unit


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - IPDM E/R -

INFOID:0000000006860223

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

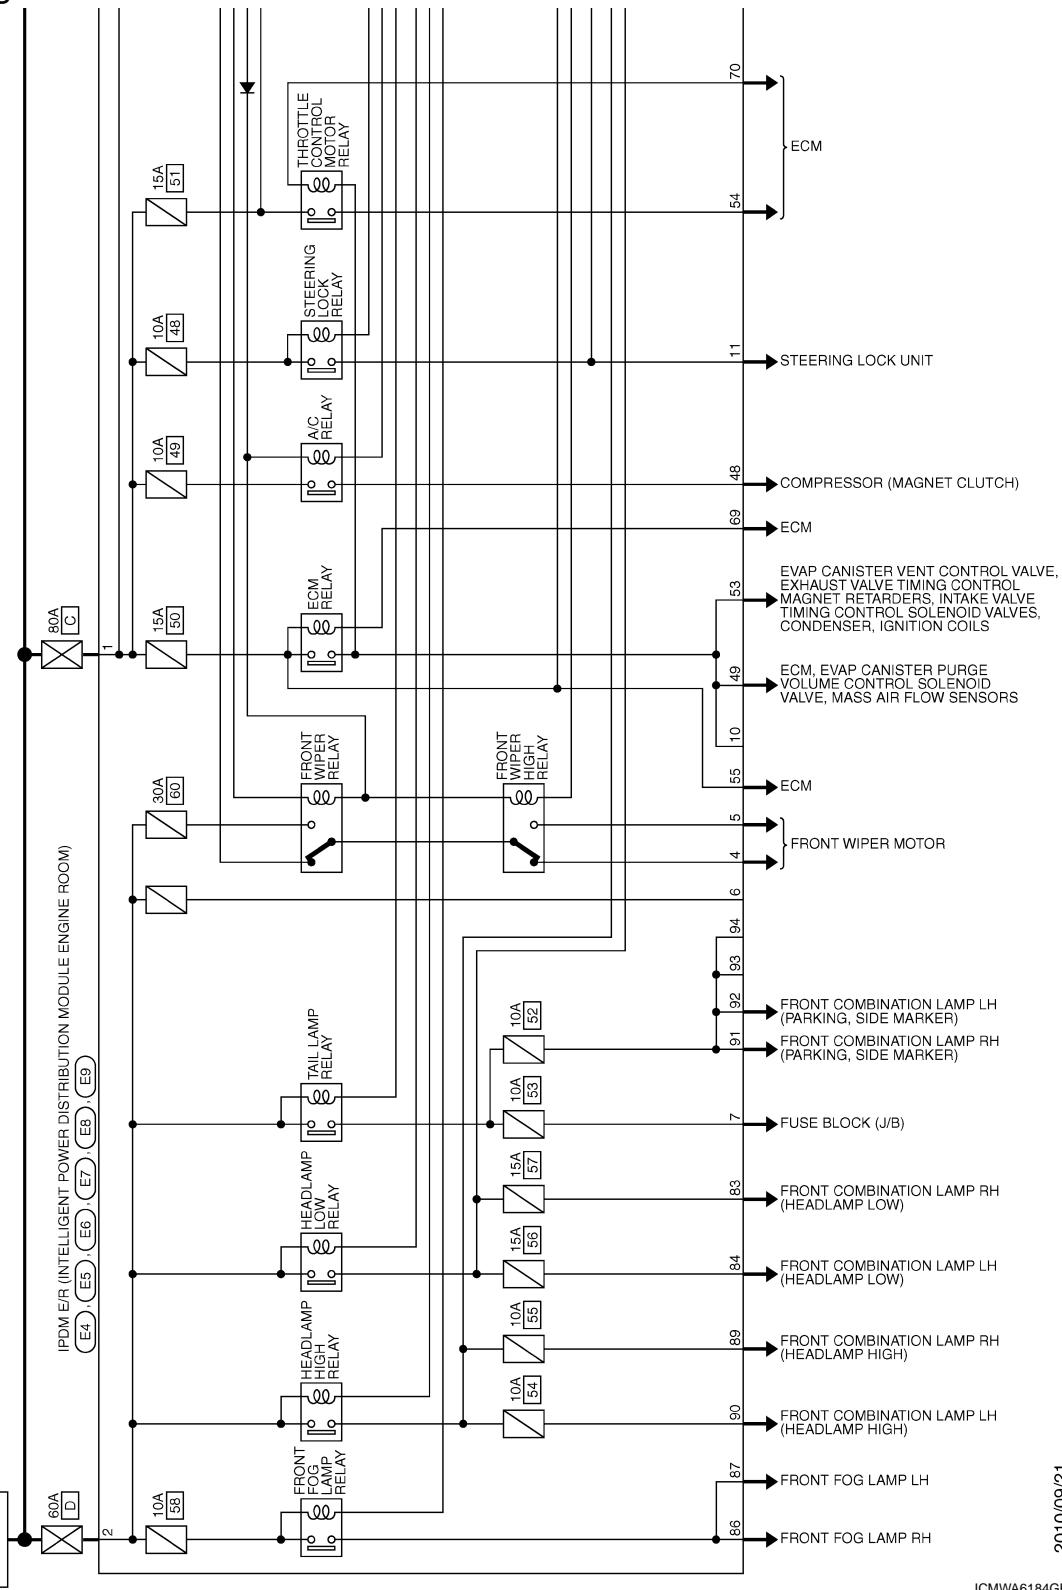


2010/09/21

JCMWA6184GB

MWI

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

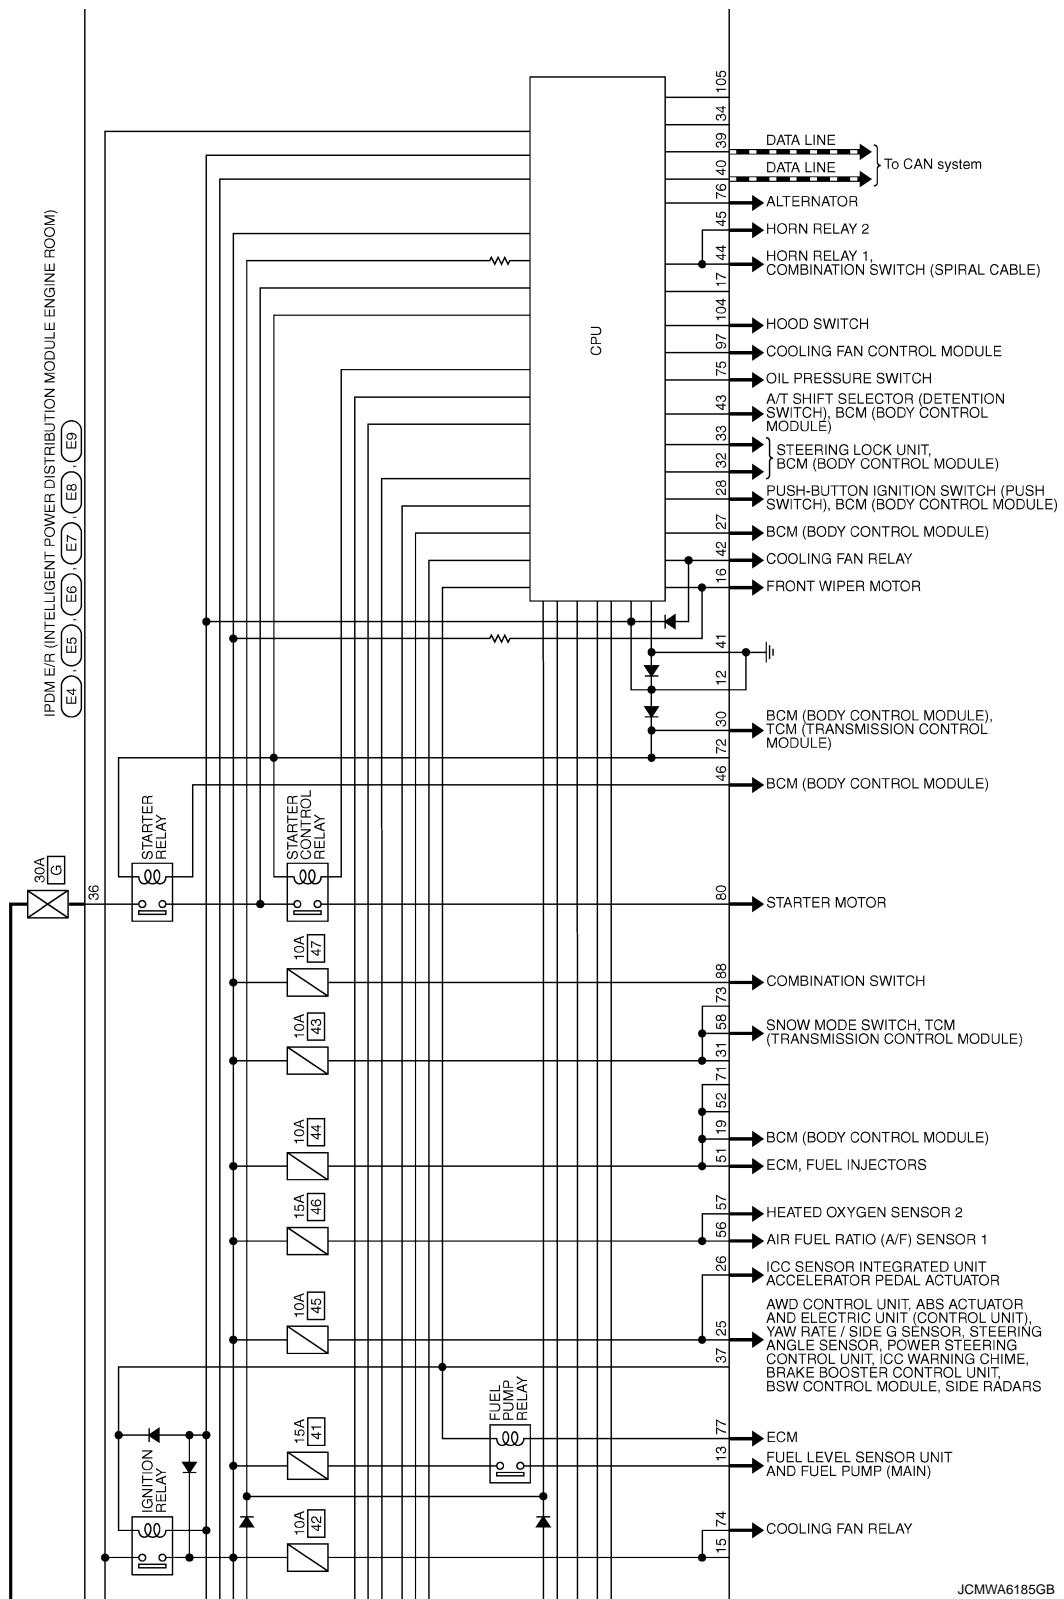

JCMWA6185GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

A

B

C

D

E

F

G

H

I

J

K

L


M

MWI

N

P


IPDM E/R
(INTELLIGENT POWER
DISTRIBUTION MODULE
ENGINE ROOM)
E4 (EB), E6
E5 (EB), E9
E7



JCMW A6186GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)		
Connector No.	Connector Name	Connector Type
E4	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE Engine Room	L02FB-MC
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		
		<img alt="TH16FW-NH" data-b

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> • Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON • Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF
<ul style="list-style-type: none"> • Parking lamps • License plate lamps • Side maker lamps • Illuminations • Tail lamps 	<ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn relay OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Steering lock unit*	Steering lock relay OFF

*: For models with steering lock unit

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> • Detects DTC "B2098: IGN RELAY ON" • Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS INFORMATION >

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000006860225

NOTE:

- The details of time display are as follows.
- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now.
- The number increases like 1 → 2 … 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

x: Applicable

CONSULT display	Fail-safe	Reference
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-15
B2098: IGN RELAY ON	×	PCS-16
B2099: IGN RELAY OFF	—	PCS-17
B2108: S/L RELAY ON*	—	SEC-98
B2109: S/L RELAY OFF*	—	SEC-99
B210A: S/L STATE SW*	—	SEC-100
B210B: START CONT RLY ON	—	SEC-104
B210C: START CONT RLY OFF	—	SEC-105
B210D: STARTER RELAY ON	—	SEC-106
B210E: STARTER RELAY OFF	—	SEC-107
B210F: INTRLCK/PNP SW ON	—	SEC-109
B2110: INTRLCK/PNP SW OFF	—	SEC-111

*: For models without steering lock unit, this DTC is not applied.

THE FUEL GAUGE POINTER DOES NOT MOVE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

THE FUEL GAUGE POINTER DOES NOT MOVE

Description

INFOID:000000006342740

Fuel gauge needle will not move from a certain position.

Diagnosis Procedure

INFOID:000000006342741

1.CHECK UNIFIED METER AND A/C AMP. OUTPUT SIGNAL

1. Connect CONSULT-III.
2. Select the "Data Monitor" for the "METER/M&A" and compare the "FUEL METER" monitor value with the fuel gauge reading on the combination meter. Refer to [MWI-58, "Component Function Check"](#).

Does monitor value match fuel gauge reading?

YES >> GO TO 2.

NO >> Replace combination meter.

2.CHECK FUEL LEVEL SENSOR SIGNAL CIRCUIT

Check the fuel level sensor signal circuit. Refer to [MWI-58, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK FUEL LEVEL SENSOR UNIT

Perform a unit check for the fuel level sensor unit. Refer to [MWI-59, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace fuel level sensor unit. Refer to [FL-5, "Removal and Installation"](#).

4.CHECK FLOAT INTERFERENCE

Check that the float arm interferes with or binds to other components in the fuel tank.

Is the inspection result normal?

YES >> Replace unified meter and A/C amp.

NO >> Repair or replace malfunctioning parts.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE METER CONTROL SWITCH IS INOPERATIVE

< SYMPTOM DIAGNOSIS >

THE METER CONTROL SWITCH IS INOPERATIVE

Description

INFOID:000000006342742

If any of the following malfunctions is found for the meter control switch operation.

- All switches are inoperative.
- The specified switch cannot be operated.

Diagnosis Procedure

INFOID:000000006342743

1.CHECK METER CONTROL SWITCH SIGNAL CIRCUIT

Check the meter control switch signal circuit. Refer to [MWI-61, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair harness or connector.

2.CHECK METER CONTROL SWITCH UNIT

Perform a unit check for the meter control switch. Refer to [MWI-62, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NG >> Replace meter control switch.

THE TRIP A/B RESET SWITCH IS INOPERATIVE

< SYMPTOM DIAGNOSIS >

THE TRIP A/B RESET SWITCH IS INOPERATIVE

Description

The trip A/B reset switch is inoperative.

Diagnosis Procedure

1.CHECK TRIP A/B RESET SWITCH SIGNAL CIRCUIT

Check the trip A/B reset switch signal circuit. Refer to [MWI-61, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK TRIP A/B RESET SWITCH UNIT

Perform a unit check for the trip A/B reset switch. Refer to [MWI-62, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace combination meter.

NG >> Replace trip A/B reset switch.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

Description

INFOID:0000000006342746

The oil pressure warning lamp stays off when the ignition switch is turned ON.

Diagnosis Procedure

INFOID:0000000006342747

1.CHECK OIL PRESSURE WARNING LAMP

Perform auto active test. Refer to [PCS-10, "Diagnosis Description"](#).

Does oil pressure warning lamp blink?

YES >> GO TO 2.

NO >> Replace combination meter.

2.CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-65, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK OIL PRESSURE SWITCH UNIT

Perform a unit check for the oil pressure switch. Refer to [MWI-65, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Replace oil pressure switch.

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

Description

INFOID:000000006342748

The oil pressure warning lamp remains illuminated while the engine is running (normal oil pressure).

Diagnosis Procedure

INFOID:000000006342749

1.CHECK OIL PRESSURE WARNING LAMP

Perform auto active test. Refer to [PCS-10, "Diagnosis Description"](#).

Does oil pressure warning lamp blink?

YES >> GO TO 2.

NO >> Replace combination meter.

2.CHECK IPDM E/R OUTPUT VOLTAGE

1. Disconnect the oil pressure switch connector.
2. Turn ignition switch ON.
3. Check voltage between the oil pressure switch harness connector and ground.

Terminals		Voltage
(+)	(-)	
Oil pressure switch		
Connector	Terminal	Ground
F37	1	Approx. 12 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK OIL PRESSURE SWITCH UNIT

Perform a unit check for the oil pressure switch. Refer to [MWI-65, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Replace oil pressure switch.

4.CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-65, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair harness or connector.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000006342750

- The parking brake warning is displayed during vehicle travel even though the parking brake is released.
- The parking brake warning is not displayed even though driving the vehicle with the parking brake applied.

Diagnosis Procedure

INFOID:000000006342751

1. CHECK PARKING BRAKE WARNING LAMP OPERATION

1. Start engine.
2. Check the operation of the parking brake warning lamp when operating the parking brake.

Condition	Warning lamp status
Parking brake is applied	ON
Parking brake is released	OFF

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> GO TO 2.

2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Check the parking brake switch signal circuit. Refer to [MWI-66, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NG >> Repair harness or connector.

3. CHECK PARKING BRAKE SWITCH UNIT

Perform a unit check for the parking brake switch. Refer to [BRC-86, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace parking brake switch.

THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:0000000006342752

- The warning is still displayed even after washer fluid is added.
- The warning is not displayed even though the washer tank is empty.

Diagnosis Procedure

INFOID:0000000006342753

1.CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

Check the washer level switch signal circuit. Refer to [MWI-68, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair harness or connector.

2.CHECK WASHER LEVEL SWITCH UNIT

Perform a unit check for the washer level switch. Refer to [MWI-68, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace washer level switch. Refer to [WW-107, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

Description

INFOID:000000006342754

- The door ajar warning is displayed even though all of the doors are closed.
- The door ajar warning is not displayed even though a door is ajar.

Diagnosis Procedure

INFOID:000000006342755

1. CHECK BCM INPUT/OUTPUT SIGNAL

Connect CONSULT-III and check the BCM input signals. Refer to [DLK-66, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 3.

2. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "DOOR W/L" monitor value.

"DOOR W/L"	
Door open	: On
Door closed	: Off

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace BCM. Refer to [BCS-86, "Removal and Installation"](#).

3. CHECK DOOR SWITCH SIGNAL CIRCUIT

Check the door switch signal circuit. Refer to [DLK-66, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair harness or connector.

4. CHECK DOOR SWITCH UNIT

Perform a unit check for the door switch. Refer to [DLK-68, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Replace applicable door switch. Refer to [DLK-265, "Removal and Installation"](#).

THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

< SYMPTOM DIAGNOSIS >

THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

Description

INFOID:000000006342756

- The displayed ambient air temperature is higher than the actual temperature.
- The displayed ambient air temperature is lower than the actual temperature.

Diagnosis Procedure

INFOID:000000006342757

NOTE:

Check that the symptom is not applicable to the normal operating condition before starting diagnosis. Refer to [MWI-130, "INFORMATION DISPLAY : Description"](#).

1. CHECK AMBIENT SENSOR SIGNAL CIRCUIT

Check the ambient sensor signal circuit. Refer to [HAC-65, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK AMBIENT SENSOR UNIT

Perform a unit check for the ambient sensor. Refer to [HAC-66, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace unified meter and A/C amp.

NO >> Replace ambient sensor. Refer to [HAC-127, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

COMPASS

COMPASS : Description

INFOID:000000006342758

COMPASS

- The electronic compass is highly protected from changes in most magnetic fields. However, some large changes in magnetic fields can affect it. Some examples are (but not limited to): high tension power lines, large steel buildings, subways, steel bridges, automatic car washes, large piles of scrap metal, etc. While this does not happen very often, it is possible.
- During normal operation, the Compass Mirror will continuously update the compass calibration to adjust for gradual changes in the vehicle's magnetic "remnant" field. If the vehicle is subjected to high magnetic influences, the compass may appear to indicate false headings, become locked, or appear that it is unable to be calibrated. If this occurs, perform the calibration procedure.
- If at any time the compass continually displays the incorrect direction or the reading is erratic or locked, verify the correct zone variance.

Symptom Chart

Symptom	Cause	Solution / Reference
The compass display reads "C".		
Compass shows the wrong direction.		
Compass does not change direction appears "Locked".	<ul style="list-style-type: none">Compass is not calibrated.Incorrect zone variance setting.Large change in magnetic field (Steel bridges, subways, concentrations of metal, carwashes, etc.)Compass was calibrated incorrectly or in the presence of a strong magnetic field.	Perform calibration. Refer to MWI-36, "Description" .
Compass does not show all the directions, one or more is missing.		
The compass was calibrated but it "loses" calibration.		
On long trips the compass shows the wrong direction.		Perform zone variation setting if correct reading is desired in that location. Refer to MWI-36, "Description" .

INFORMATION DISPLAY

INFORMATION DISPLAY : Description

INFOID:000000006342759

AMBIENT AIR TEMPERATURE

The displayed ambient air temperature on the information display may differ from the actual temperature because it is a corrected value calculated from the ambient sensor signal by the unified meter and A/C amp. Refer to [MWI-30, "INFORMATION DISPLAY : System Description"](#) for details on the correction process.

POSSIBLE DRIVING DISTANCE

The calculated possible driving distance may differ from the actual distance to empty if the refueling amount is approximately 15 l (4 US gal, 3-3/10 Imp gal) or less. This is because the refuel control (moves the fuel gauge needle quicker than normal judging that the driver is refueling the vehicle) is not performed in such a case.

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000006342760

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

PREPARATION


<PREPARATION>

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000006342761

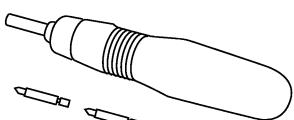Tool name	Description
Power tool  PBIC0191E	Loosening screws

COMBINATION METER

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION COMBINATION METER


Exploded View

INFOID:000000006342762

REMOVAL

Refer to [IP-12, "Exploded View"](#).

DISASSEMBLY

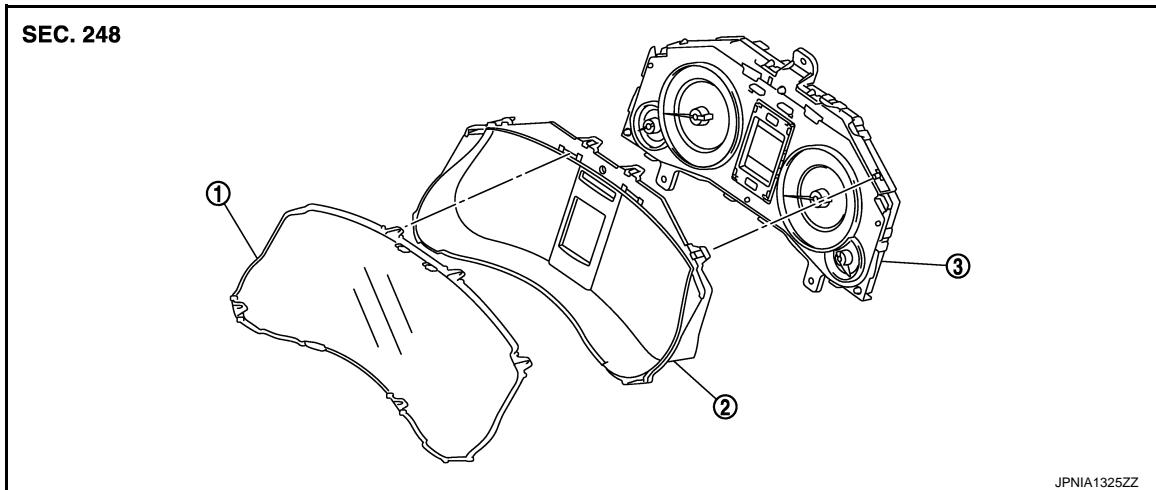

1. Front cover

2. Upper housing


3. Unified meter control unit

Removal and Installation

INFOID:000000006342763

Removal

1. Remove the cluster lid A. Refer to [IP-13, "Removal and Installation"](#).
2. Remove screws (A) and connector, and then remove combination meter (1).

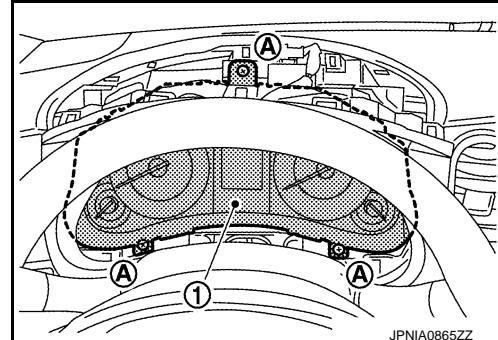

Installation

Install in the reverse order of removal.

Disassembly and Assembly

INFOID:000000006342764

DISASSEMBLY

1. Disengage the tabs to separate the upper housing with the front cover from unified meter control unit.
2. Disengage the tabs to separate the front cover from upper housing.

ASSEMBLY

Assemble in the reverse order of disassembly.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P


UNIFIED METER AND A/C AMP.

< REMOVAL AND INSTALLATION >

UNIFIED METER AND A/C AMP.

Exploded View

INFOID:0000000006342765

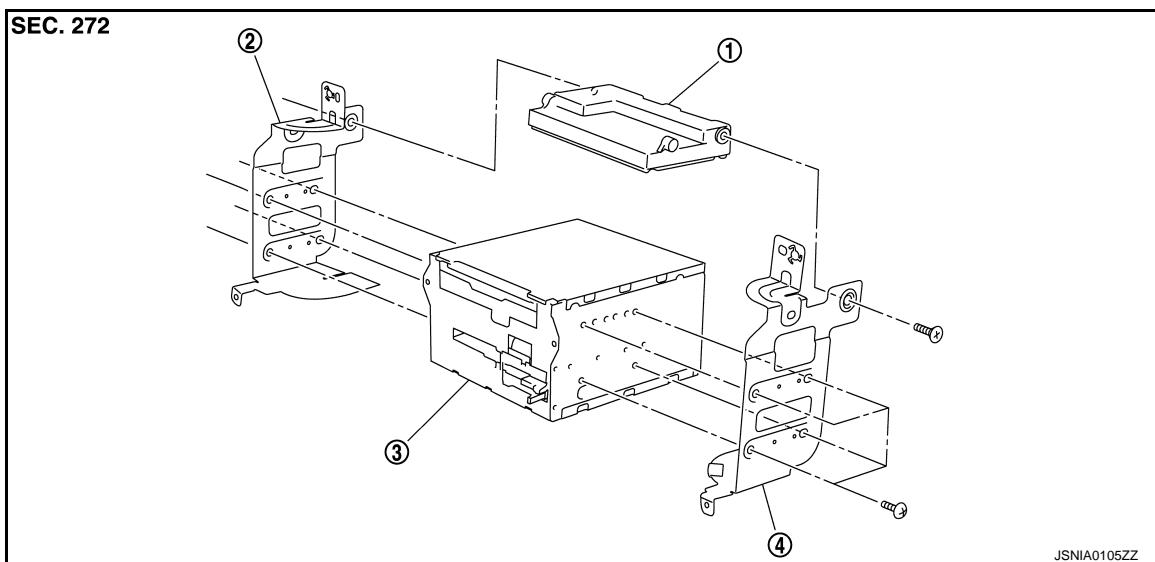

JSNIA0105ZZ


1. Unified meter and A/C amp.
2. Bracket (LH)
3. AV control unit
4. Bracket (RH)

Removal and Installation

INFOID:0000000006342766

REMOVAL

1. Remove AV control unit. Refer to [AV-126, "Exploded View"](#) (BASE AUDIO WITHOUT NAVIGATION), [AV-313, "Exploded View"](#) (BOSE AUDIO WITHOUT NAVIGATION) or [AV-514, "Exploded View"](#) (BOSE AUDIO WITH NAVIGATION).
2. Remove mounting screws (A), and then remove unified meter and A/C amp. (1).

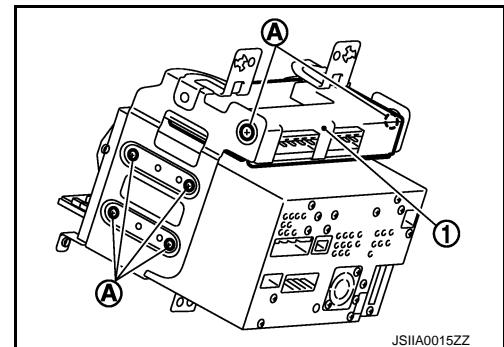

INSTALLATION

Installation is basically the reverse order of removal.

CAUTION:

Since unified meter and A/C amp. connector and AV control unit connector have the same form, be careful not to insert them wrongly.

METER CONTROL SWITCH

< REMOVAL AND INSTALLATION >

METER CONTROL SWITCH


Exploded View

INFOID:0000000006342767

REMOVAL

[IP-12, "Exploded View"](#)

DISASSEMBLY

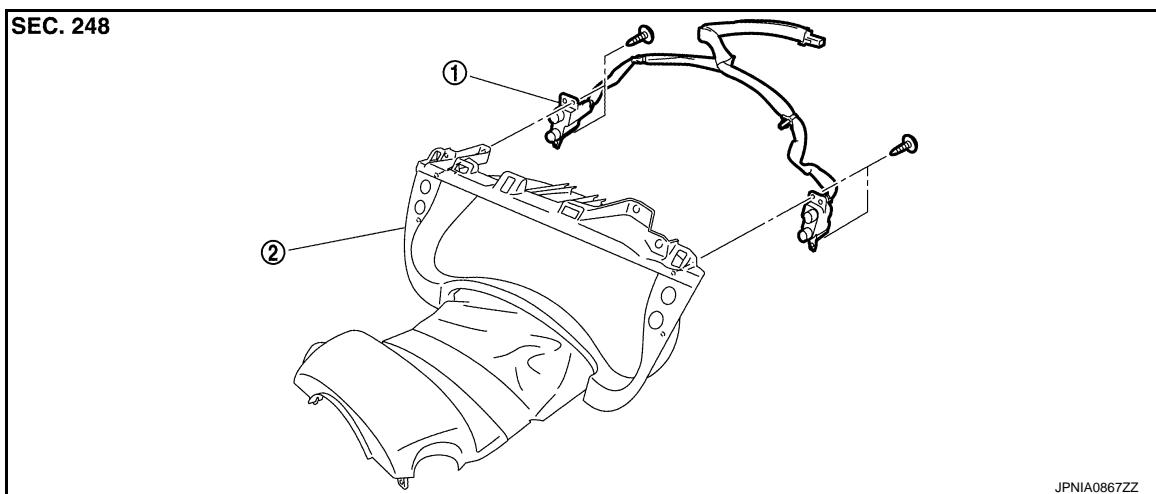

1. Meter control switch

2. Cluster lid A

Removal and Installation

INFOID:0000000006342768

REMOVAL

1. Remove cluster lid A. Refer to [IP-13, "Removal and Installation"](#).
2. Remove screws and remove meter control switch.

INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P


TRIP A/B RESET SWITCH

< REMOVAL AND INSTALLATION >

TRIP A/B RESET SWITCH

Exploded View

INFOID:0000000006342769

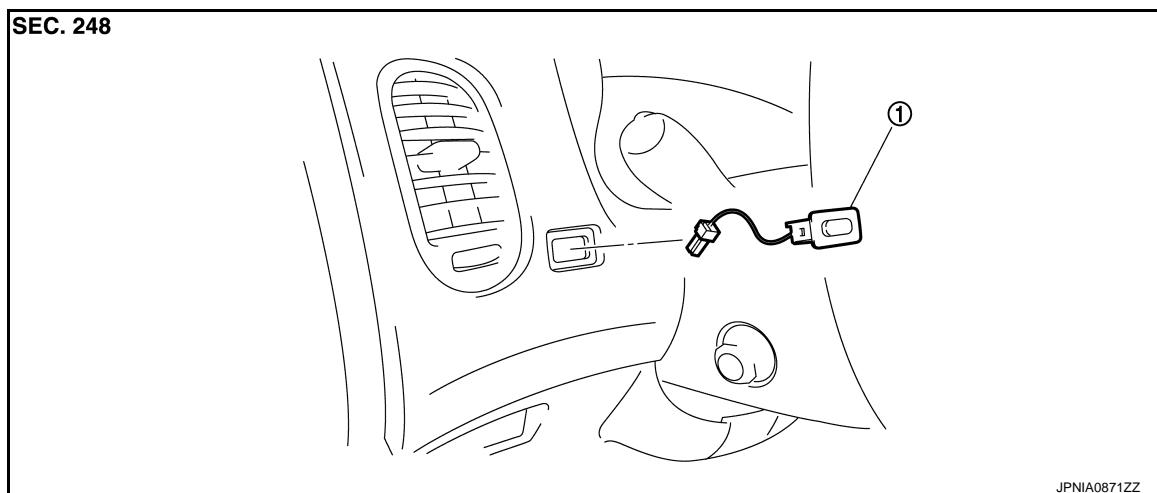

1. Trip A/B reset switch

Removal and Installation

INFOID:0000000006342770

REMOVAL

1. Remove combination meter. Refer to [MWI-133, "Removal and Installation"](#).
2. Press pawls and remove trip A/B reset switch.

INSTALLATION

Install in the reverse order of removal.

COMPASS

< REMOVAL AND INSTALLATION >

COMPASS

Exploded View

INFOID:000000006342771

Refer to [MIR-114. "Exploded View"](#) (with ADP) or [MIR-134. "Exploded View"](#) (without ADP).

Removal and Installation

INFOID:000000006342772

Refer to [MIR-114. "Removal and Installation"](#) (with ADP) or [MIR-134. "Removal and Installation"](#) (without ADP).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

CLOCK

< REMOVAL AND INSTALLATION >

CLOCK


Exploded View

INFOID:000000006342773

REMOVAL

Refer to [IP-12, "Exploded View"](#).

DISASSEMBLY

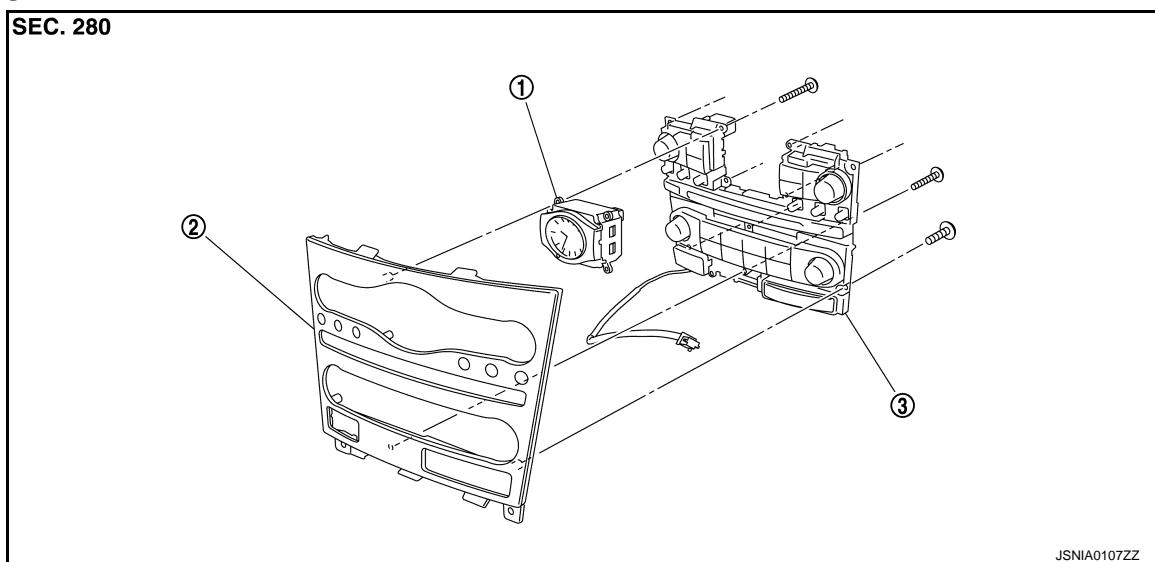

1. Clock

2. Cluster lid C


3. Preset switch

Removal and Installation

INFOID:000000006342774

REMOVAL

1. Remove cluster lid C assembly. Refer to [IP-13, "Removal and Installation"](#).
2. Remove screws (A), (B), (C) and remove clock (1) in conjunction with preset switch (2) from cluster lid C.
3. Disengage the tabs to separate clock.

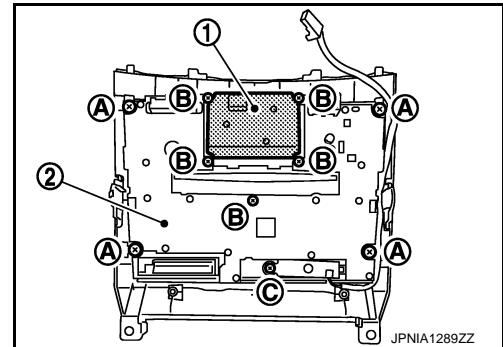

INSTALLATION

Install in the reverse order of removal.

NOTE:

Never confuse screws when installing.