

# SECTION **EXL**

## EXTERIOR LIGHTING SYSTEM

### CONTENTS

<b>PRECAUTION</b> .....	4	Component Parts Location .....	18
<b>PRECAUTIONS</b> .....	4	Component Description .....	18
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	4	<b>TURN SIGNAL AND HAZARD WARNING LAMPS</b> .....	19
Precaution for Work .....	4	System Diagram .....	19
General precautions for service operations .....	4	System Description .....	19
<b>PREPARATION</b> .....	6	Component Parts Location .....	19
<b>PREPARATION</b> .....	6	Component Description .....	19
Special Service Tool .....	6	<b>PARKING, LICENSE PLATE AND TAIL LAMPS</b> .....	21
<b>BASIC INSPECTION</b> .....	7	System Diagram .....	21
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	7	System Description .....	21
Work Flow .....	7	Component Parts Location .....	21
<b>SYSTEM DESCRIPTION</b> .....	10	Component Description .....	22
<b>HEADLAMP</b> .....	10	<b>TRAILER TOW</b> .....	23
System Diagram .....	10	System Diagram .....	23
System Description .....	10	System Description .....	23
Component Parts Location .....	10	Component Parts Location .....	24
Component Description .....	11	Component Description .....	24
<b>DAYTIME LIGHT SYSTEM</b> .....	12	<b>COMBINATION SWITCH READING SYSTEM</b> .....	25
System Diagram .....	12	System Diagram .....	25
System Description .....	12	System Description .....	25
Component Parts Location .....	13	Component Parts Location .....	28
Component Description .....	13	<b>DIAGNOSIS SYSTEM (BCM)</b> .....	29
<b>AUTO LIGHT SYSTEM</b> .....	15	<b>COMMON ITEM</b> .....	29
System Diagram .....	15	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....	29
System Description .....	15	<b>HEADLAMP</b> .....	29
Component Parts Location .....	16	HEADLAMP : CONSULT Function (BCM - HEADLAMP) .....	30
Component Description .....	17	<b>FLASHER</b> .....	31
<b>FRONT FOG LAMP</b> .....	18	FLASHER : CONSULT Function (BCM - FLASHER) .....	31
System Diagram .....	18		
System Description .....	18		

<b>COMB SW</b> .....	31	Terminal Layout .....	60
COMB SW : CONSULT Function (BCM - COMB SW) .....	31	Physical Values .....	60
<b>DIAGNOSIS SYSTEM (IPDM E/R)</b> .....	32	Fail Safe .....	65
Diagnosis Description .....	32	DTC Inspection Priority Chart .....	65
CONSULT Function (IPDM E/R) .....	34	DTC Index .....	66
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	36	<b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> .....	68
<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	36	Reference Value .....	68
<b>BCM (BODY CONTROL MODULE)</b> .....	36	Terminal Layout .....	69
BCM (BODY CONTROL MODULE) : Diagnosis Procedure .....	36	Physical Values .....	69
<b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> .....	37	Fail Safe .....	73
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure .....	37	DTC Index .....	74
<b>HEADLAMP (HI) CIRCUIT</b> .....	39	<b>WIRING DIAGRAM</b> .....	75
Description .....	39	<b>HEADLAMP</b> .....	75
Component Function Check .....	39	Wiring Diagram .....	75
Diagnosis Procedure .....	39	<b>DAYTIME LIGHT SYSTEM</b> .....	79
<b>HEADLAMP (LO) CIRCUIT</b> .....	42	Wiring Diagram .....	79
Description .....	42	<b>AUTO LIGHT SYSTEM</b> .....	86
Component Function Check .....	42	Wiring Diagram .....	86
Diagnosis Procedure .....	42	<b>FRONT FOG LAMP</b> .....	94
Component Inspection .....	45	Wiring Diagram .....	94
<b>DAYTIME LIGHT RELAY CIRCUIT</b> .....	46	<b>TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM</b> .....	98
Description .....	46	Wiring Diagram .....	98
Diagnosis Procedure .....	46	<b>PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM</b> .....	104
Component Inspection .....	47	Wiring Diagram .....	104
<b>FRONT FOG LAMP CIRCUIT</b> .....	48	<b>STOP LAMP</b> .....	110
Description .....	48	Wiring Diagram .....	110
Component Function Check .....	48	<b>BACK-UP LAMP</b> .....	115
Diagnosis Procedure .....	48	Wiring Diagram .....	115
<b>PARKING LAMP CIRCUIT</b> .....	50	<b>TRAILER TOW</b> .....	119
Description .....	50	Wiring Diagram .....	119
Component Function Check .....	50	<b>SYMPTOM DIAGNOSIS</b> .....	128
Diagnosis Procedure .....	50	<b>EXTERIOR LIGHTING SYSTEM SYMPTOMS</b> .....	128
<b>TURN SIGNAL LAMP CIRCUIT</b> .....	53	Symptom Table .....	128
Description .....	53	<b>NORMAL OPERATING CONDITION</b> .....	130
Component Function Check .....	53	Description .....	130
Diagnosis Procedure .....	53	<b>BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM</b> .....	131
<b>OPTICAL SENSOR</b> .....	56	Description .....	131
Description .....	56	Diagnosis Procedure .....	131
Diagnosis Procedure .....	56	<b>DAYTIME LIGHT SYSTEM INOPERATIVE</b> ....	132
<b>ECU DIAGNOSIS INFORMATION</b> .....	57	Description .....	132
<b>BCM (BODY CONTROL MODULE)</b> .....	57	Diagnosis Procedure .....	132
Reference Value .....	57		

<b>BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON</b> .....	<b>133</b>	<b>STOP LAMP</b> .....	<b>143</b>	
Description .....	133	Bulb Replacement .....	143	A
Diagnosis Procedure .....	133	Removal and Installation .....	143	
<b>PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON</b> .....	<b>134</b>	<b>LICENSE PLATE LAMP</b> .....	<b>144</b>	B
Description .....	134	Bulb Replacement .....	144	
Diagnosis Procedure .....	134	Removal and Installation .....	144	
<b>BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON</b> .....	<b>135</b>	<b>REAR COMBINATION LAMP</b> .....	<b>145</b>	C
Description .....	135	Bulb Replacement .....	145	
Diagnosis Procedure .....	135	Removal and Installation .....	145	
<b>PERIODIC MAINTENANCE</b> .....	<b>136</b>	<b>LIGHTING &amp; TURN SIGNAL SWITCH</b> .....	<b>146</b>	D
<b>HEADLAMP</b> .....	<b>136</b>	Removal and Installation .....	146	
Aiming Adjustment .....	136	<b>HAZARD SWITCH</b> .....	<b>147</b>	E
<b>FRONT FOG LAMP</b> .....	<b>138</b>	Removal and Installation .....	147	
Aiming Adjustment .....	138	<b>OPTICAL SENSOR</b> .....	<b>148</b>	F
<b>REMOVAL AND INSTALLATION</b> .....	<b>140</b>	Removal and Installation .....	148	
<b>HEADLAMP</b> .....	<b>140</b>	<b>UNIT DISASSEMBLY AND ASSEMBLY</b> .	<b>149</b>	G
Bulb Replacement .....	140	<b>FRONT COMBINATION LAMP</b> .....	<b>149</b>	
Removal and Installation .....	140	Disassembly and Assembly .....	149	
<b>FRONT FOG LAMP</b> .....	<b>142</b>	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	<b>150</b>	H
Bulb Replacement .....	142	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	<b>150</b>	I
Removal and Installation .....	142	Bulb Specifications .....	150	J

EXL

M

N

O

P

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000010710093

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

#### Precaution for Work

INFOID:0000000010710094

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
  - Water soluble dirt:
    - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
    - Then rub with a soft, dry cloth.
  - Oily dirt:
    - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
    - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
    - Then rub with a soft, dry cloth.
  - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
  - For genuine leather seats, use a genuine leather seat cleaner.

#### General precautions for service operations

INFOID:0000000010710095

- Do not work with wet hands.
- Turn the lighting switch OFF before disconnecting and connecting the connector.

## PRECAUTIONS

### < PRECAUTION >

- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector. A
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb. B
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant. C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

# PREPARATION

< PREPARATION >


## PREPARATION

### PREPARATION

#### Special Service Tool

INFOID:0000000010710096

The actual shape of the tools may differ from those illustrated here.

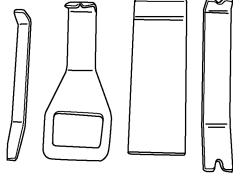Tool number (TechMate No.) Tool name	Description
<p>— (J-46534) Trim Tool Set</p>  <p>AWJIA0483ZZ</p>	Removing trim components

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000010710000

#### OVERALL SEQUENCE

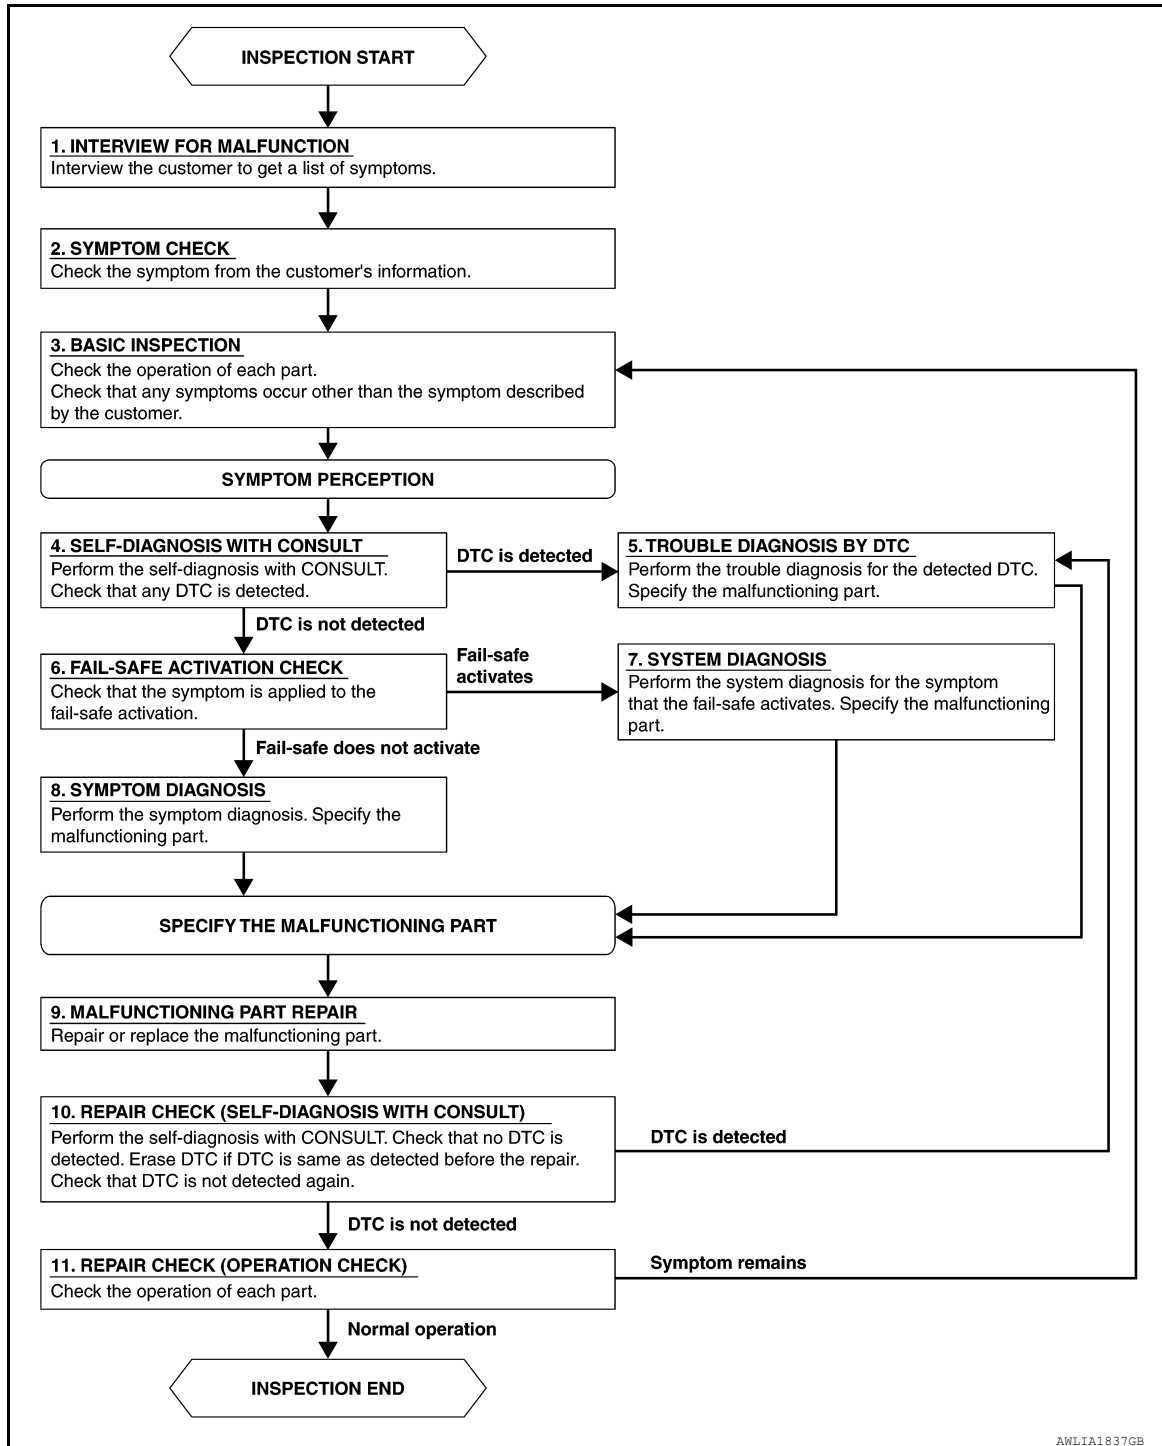

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

---

### DETAILED FLOW

#### 1. INTERVIEW FOR MALFUNCTION

---

Find out what the customer's concerns are.

>> GO TO 2.

#### 2. SYMPTOM CHECK

---

Verify the symptom from the customer's information.

>> GO TO 3.

#### 3. BASIC INSPECTION

---

Check the operation of each part. Check that any concerns occur other than those mentioned in the customer interview.

>> GO TO 4.

#### 4. SELF-DIAGNOSIS WITH CONSULT

---

Perform the self diagnosis with CONSULT. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

#### 5. TROUBLE DIAGNOSIS BY DTC

---

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

#### 6. FAIL-SAFE ACTIVATION CHECK

---

Determine if the customer's concern is related to fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

#### 7. SYSTEM DIAGNOSIS

---

Perform the system diagnosis for the system in which the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

#### 8. SYMPTOM DIAGNOSIS

---

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

#### 9. MALFUNCTION PART REPAIR

---

Repair or replace the malfunctioning part.

>> GO TO 10.

#### 10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

---

Perform the self diagnosis with CONSULT. Verify that no DTCs are detected. Erase all DTCs detected prior to the repair. Verify that DTC is not detected again.

Is any DTC detected?



## DIAGNOSIS AND REPAIR WORKFLOW

### < BASIC INSPECTION >

---

YES >> GO TO 5.

NO >> GO TO 11.

### 11. REPAIR CHECK (OPERATION CHECK)

---

Check the operation of each part.

Does it operate normally?

YES >> Inspection End.

NO >> GO TO 3.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

# HEADLAMP


< SYSTEM DESCRIPTION >

## SYSTEM DESCRIPTION

### HEADLAMP

#### System Diagram

INFOID:0000000010710001

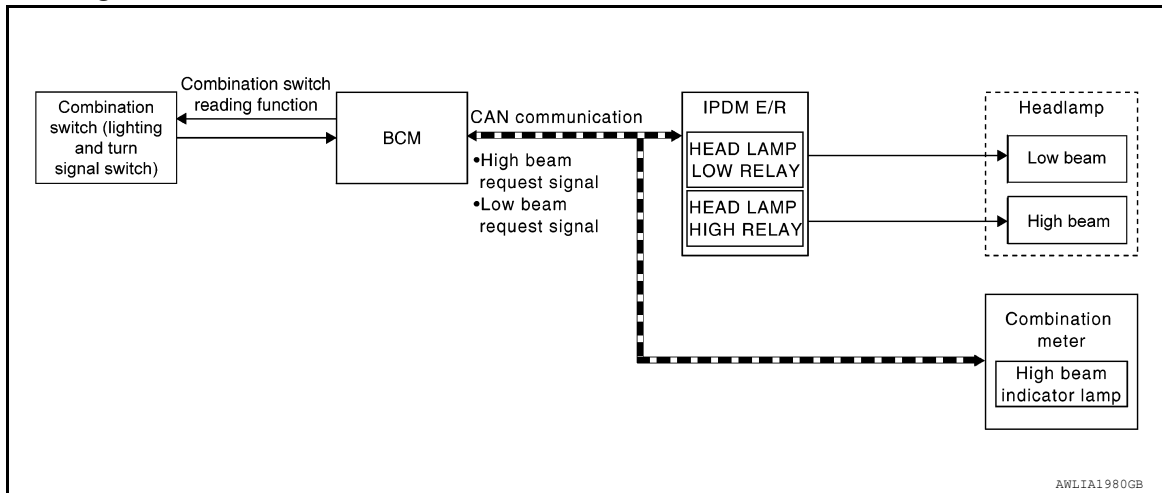

#### System Description

INFOID:0000000010710002

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting and turn signal switch). When the combination switch (lighting and turn signal switch) is placed in the 2nd position, the BCM (body control module) receives input requesting the headlamps and park lamps to illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) via the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.


#### HIGH BEAM OPERATION/FLASH-TO-PASS OPERATION

With the combination switch (lighting and turn signal switch) in the 2ND position and placed in HIGH position, the BCM receives input requesting the headlamp high beams to illuminate. The flash to pass feature can be used any time and also sends a signal to the BCM. This input is communicated to the IPDM E/R via the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil which supplies power to the high beam headlamps.

The combination meter receives a high beam request signal (ON) via the CAN communication lines and turns the high beam indicator lamp ON.

#### Component Parts Location

INFOID:0000000010710003

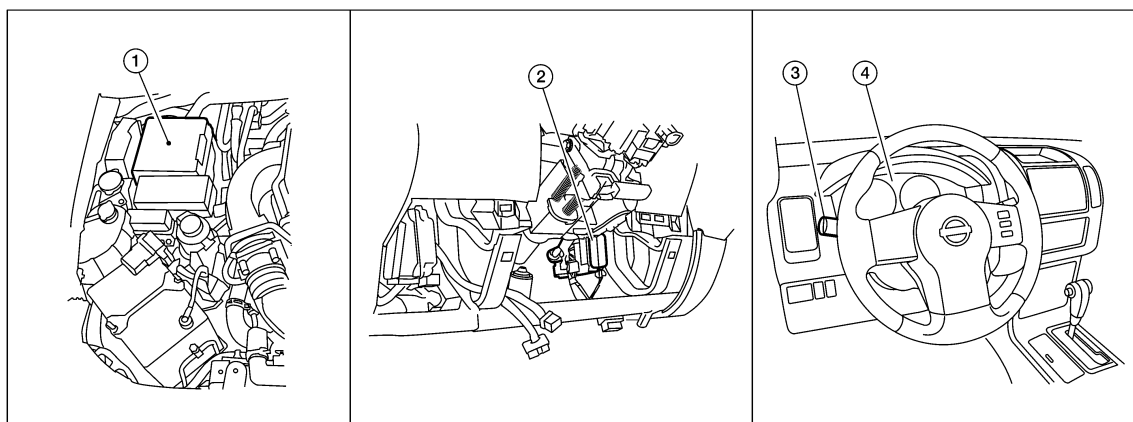

WKIA4957E

HEADLAMP

< SYSTEM DESCRIPTION >

1. IPDM E/R E122, E123, E124

2. BCM M18, M20 (view with lower instru-  
ment panel LH removed)

3. Combination switch (lighting and turn  
signal switch) M28
4. Combination meter M24

Component Description

INFOID:0000000010710004


Part name	Description
BCM	<ul style="list-style-type: none"><li>Receives combination switch (lighting and turn signal switch) request via BCM combination switch reading function.</li><li>Sends headlamp high/low request signal to the IPDM E/R.</li></ul>
IPDM E/R	Activates the headlamp high and headlamp low relays upon request from the BCM.
Combination switch (lighting and turn signal switch)	Outputs lighting requests to the BCM.

# DAYTIME LIGHT SYSTEM

< SYSTEM DESCRIPTION >

## DAYTIME LIGHT SYSTEM

### System Diagram

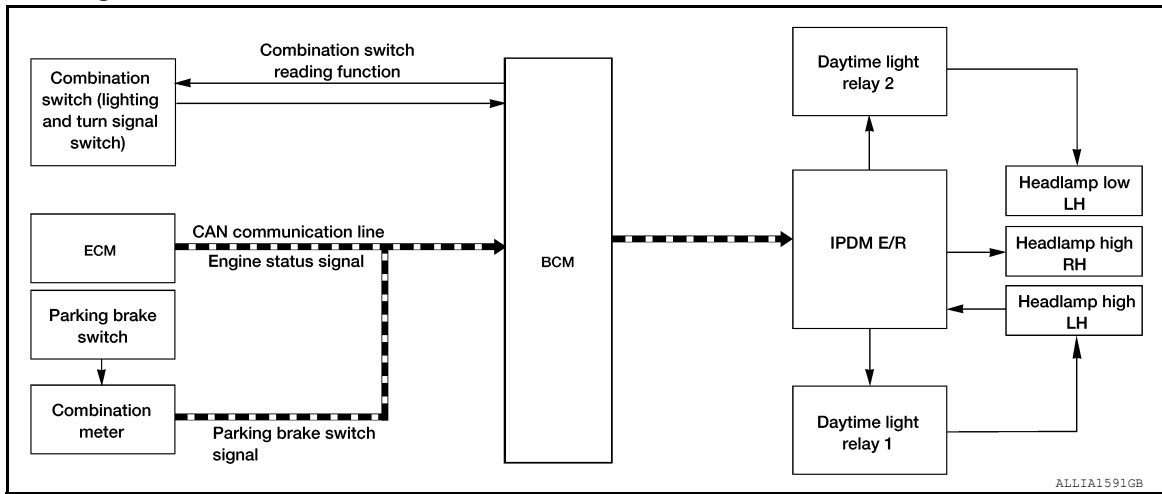

INFOID:0000000010710005

### System Description

INFOID:0000000010710006

The headlamp system for Canada vehicles is equipped with a daytime light control that activates the high beam headlamps at approximately half illumination whenever the engine is operating. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

### OPERATION


The BCM monitors inputs from the parking brake switch and the combination switch (lighting and turn signal switch) to determine when to activate the daytime light system. The BCM sends a daytime light request to the IPDM E/R via the CAN communication lines. The IPDM E/R grounds the daytime light relay 1 which in turn, provides power to the ground side of the LH high beam lamp. Power flows backward through the LH high beam lamp to the IPDM E/R, through the high beam fuses, through the RH high beam lamp circuit to the RH high beam lamp and on to ground. The high beam lamps are wired in series which causes them to illuminate at a reduced intensity. When daytime light relay 2 is open, it prevents headlamp low beam from turning on while daytime lights are operating.

# DAYTIME LIGHT SYSTEM

< SYSTEM DESCRIPTION >

## Component Parts Location

INFOID:0000000010710007

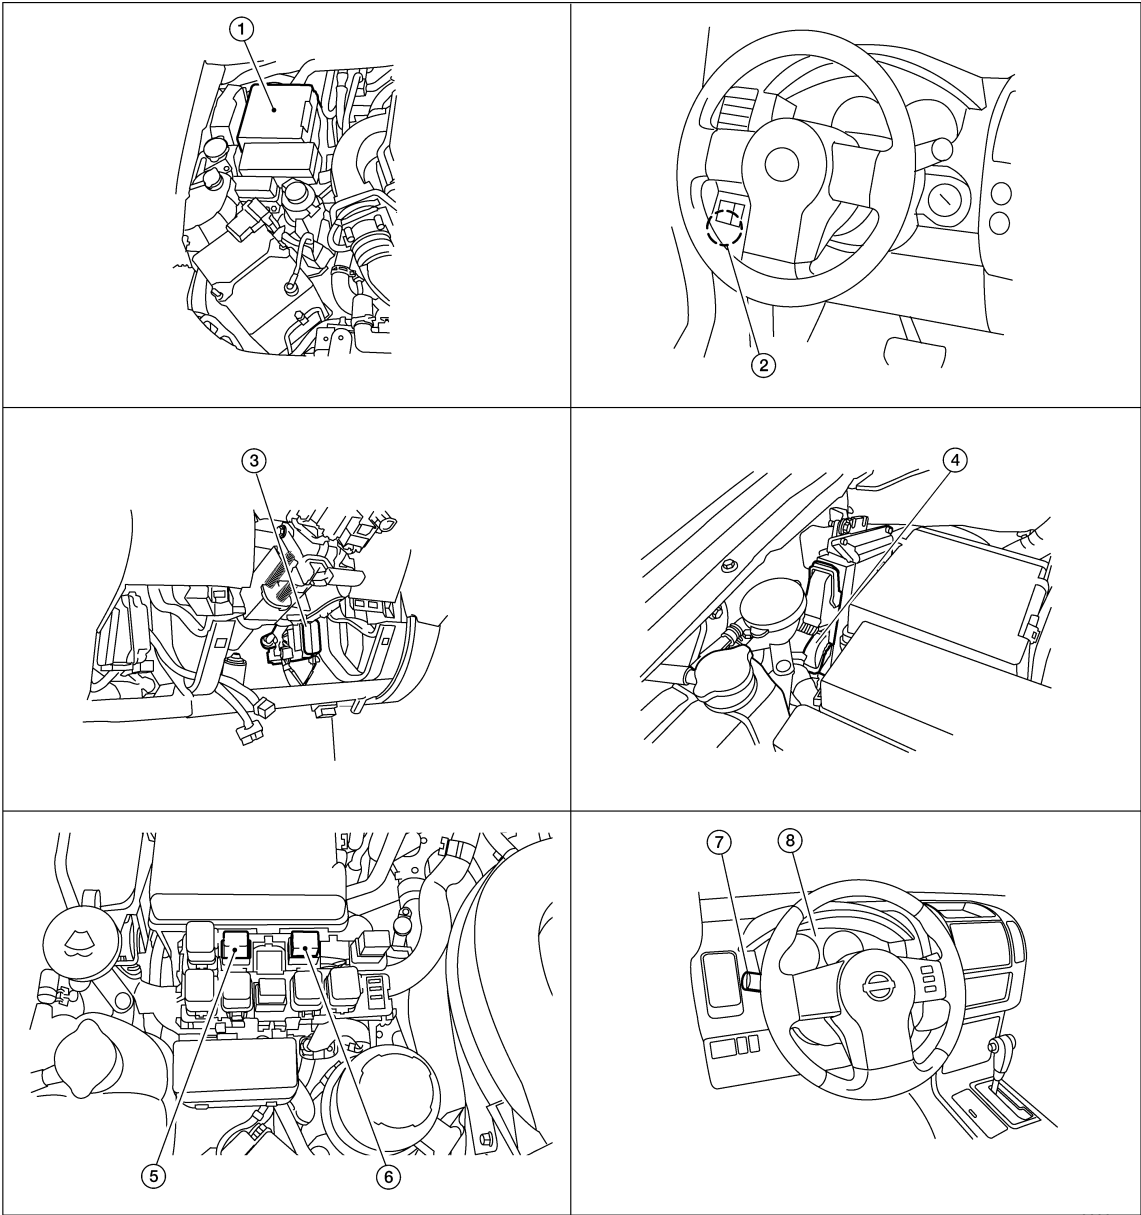

1. IPDM E/R E119, E122, E123, E124    2. Parking brake switch B84    3. BCM M18, M20 (view with lower instrument panel LH removed)
4. ECM (view with ECM cover removed)    5. Daytime light relay 1 E103    6. Daytime light relay 2 E104
7. Combination switch (lighting and turn signal switch) M28    8. Combination meter M24

## Component Description

INFOID:0000000010710008

Part name	Description
BCM	<ul style="list-style-type: none"><li>• Receives combination switch (lighting and turn signal switch) inputs via BCM combination switch reading function.</li><li>• Receives park brake applied input from the park brake switch.</li><li>• Receives engine running status from the ECM via CAN communication.</li></ul>

## DAYTIME LIGHT SYSTEM

### < SYSTEM DESCRIPTION >


IPDM E/R	Receives daytime light request from the BCM and activates the daytime light relay.
Combination switch (lighting and turn signal switch)	Outputs lighting requests to the BCM.
Parking brake switch	Outputs parking brake status to the combination meter which forwards that information to the BCM via CAN communication.
ECM	Outputs engine running status to the BCM.

# AUTO LIGHT SYSTEM

< SYSTEM DESCRIPTION >

## AUTO LIGHT SYSTEM

### System Diagram

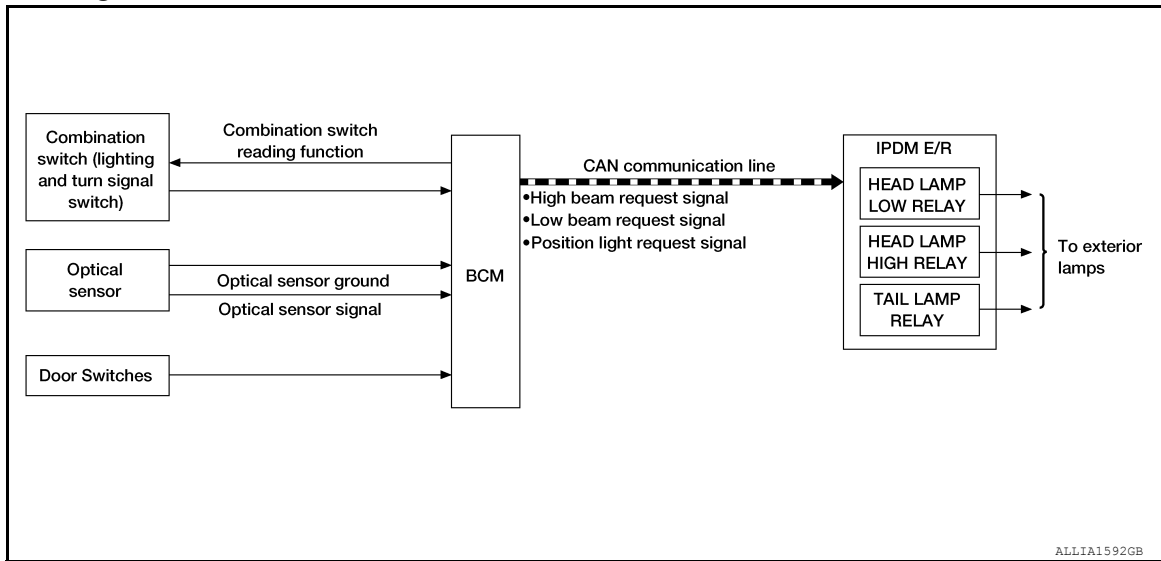

### System Description

INFOID:0000000010710010

The auto light control system has an optical sensor that detects outside brightness.

When the combination switch (lighting and turn signal switch) is in AUTO position, it automatically turns ON/OFF the parking, license plate, tail and headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details, refer to [BCS-19, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\)"](#).

### AUTO LIGHT OPERATION

The auto light system operates the low beam and high beam headlamps, parking lamps, tail lamps and license plate lamps. The BCM monitors the combination switch (lighting and turn signal switch) position as a part of the BCM combination switch reading function. When the combination switch (lighting and turn signal switch) is in the AUTO position, the BCM automatically turns the lamps ON/OFF according to ambient light brightness. When the key is turned OFF and all doors are closed, the auto light system keeps the headlamps ON for 45 seconds.

#### NOTE:


Timing for when lamps turn ON/OFF can be changed by the CONSULT. Refer to [BCS-19, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\)"](#).

# AUTO LIGHT SYSTEM

## < SYSTEM DESCRIPTION >

### Component Parts Location

INFOID:0000000010710011

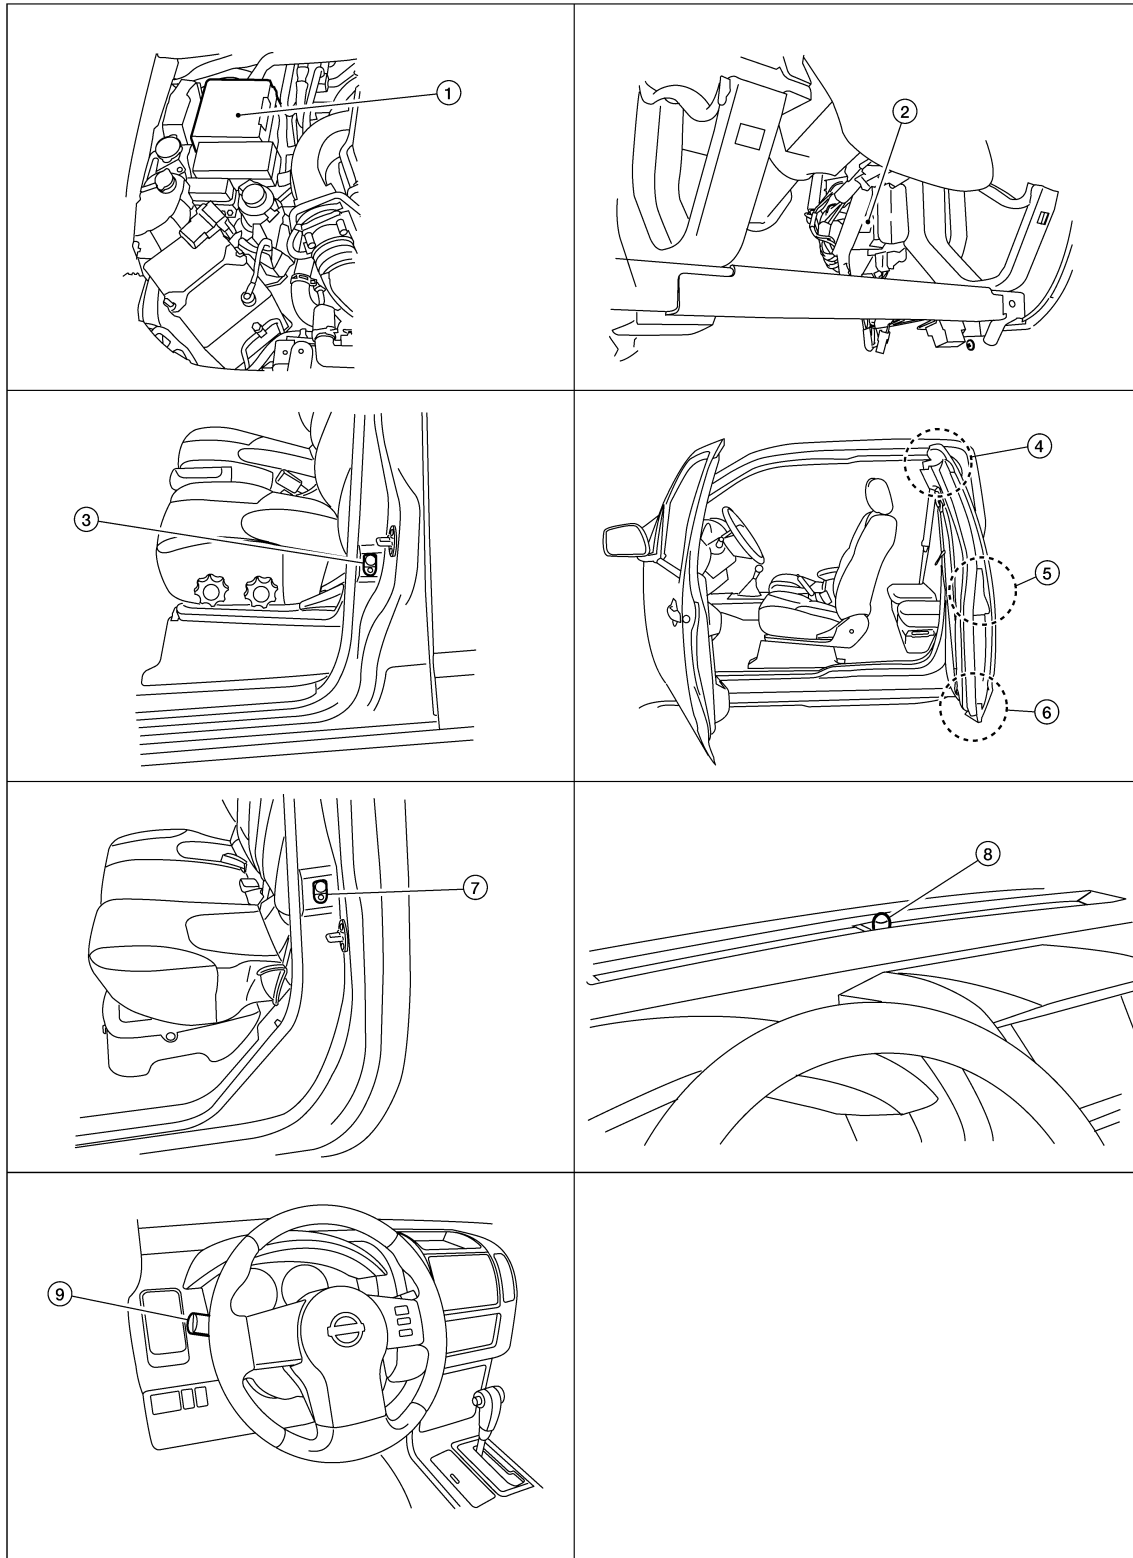

ALLIA12352Z

1. IPDM E/R E122, E123, E124

2. BCM (view with lower instrument panel LH removed) M18, M19, M20

3. Front door switch LH (Crew Cab) (RH similar) B8



# AUTO LIGHT SYSTEM

## < SYSTEM DESCRIPTION >

4. Rear door switch upper LH (King Cab) (RH similar) D211

5. Front door switch LH (King Cab) (RH similar) D213

6. Rear door switch lower LH (King Cab) D212
7. Rear door switch LH (Crew Cab) (RH similar) B18

8. Optical Sensor M14

9. Combination switch M28
- A
- B

## Component Description

INFOID:0000000010710012

Part name	Description
BCM	BCM (Body Control Module) controls auto light operation according to signals from optical sensor, lighting switch and ignition switch.
IPDM E/R	IPDM E/R (Intelligent Power Distribution Module Engine Room) operates parking, license plate, tail and headlamps according to CAN communication signals from BCM.
Combination switch (lighting and turn signal switch)	The lighting switch outputs lighting requests to the BCM.
Optical sensor	Optical sensor detects ambient brightness and converts light (lux) to voltage, then sends the optical sensor signal to BCM.
Door switches	Detects door open/closed status and forwards that status to the BCM.

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P


# FRONT FOG LAMP

< SYSTEM DESCRIPTION >

## FRONT FOG LAMP

### System Diagram

INFOID:0000000010710013

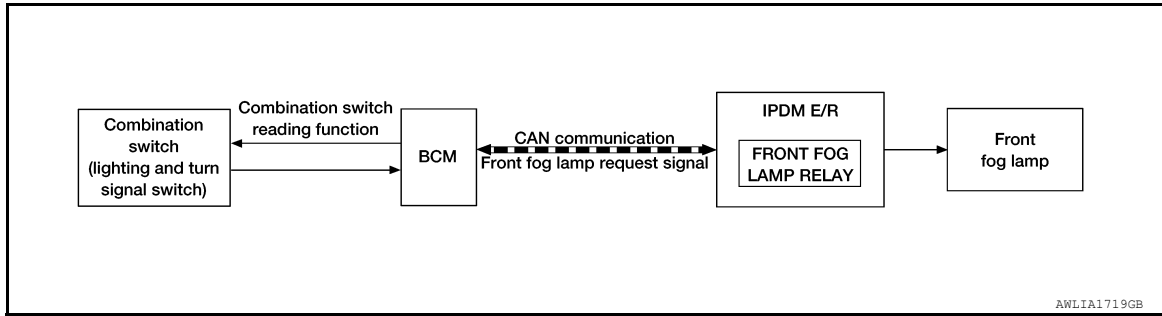

### System Description

INFOID:0000000010710014


The front fog lamps are activated with the combination switch (lighting and turn signal switch). The combination switch (lighting and turn signal switch) signal to the BCM is monitored with the BCM combination switch reading function. When the fog lamps are turned ON with the combination switch (lighting and turn signal switch), the BCM sends a front fog lamp request signal via CAN communication lines to the IPDM E/R. The IPDM E/R grounds the front fog lamp relay coil to activate the front fog lamps.

### FRONT FOG LAMP OPERATION

When the combination switch (lighting and turn signal switch) is in front fog lamp ON position and also in 1ST or 2ND position or AUTO (if equipped) position (headlamp is ON), the BCM detects FR FOG ON and the HEAD LAMP1 or 2 ON. The BCM sends a front fog lamp request ON signal via the CAN communication lines to the IPDM E/R. The IPDM E/R then turns ON the front fog lamp relay sending power to the front fog lamps.

### Component Parts Location

INFOID:0000000010710015

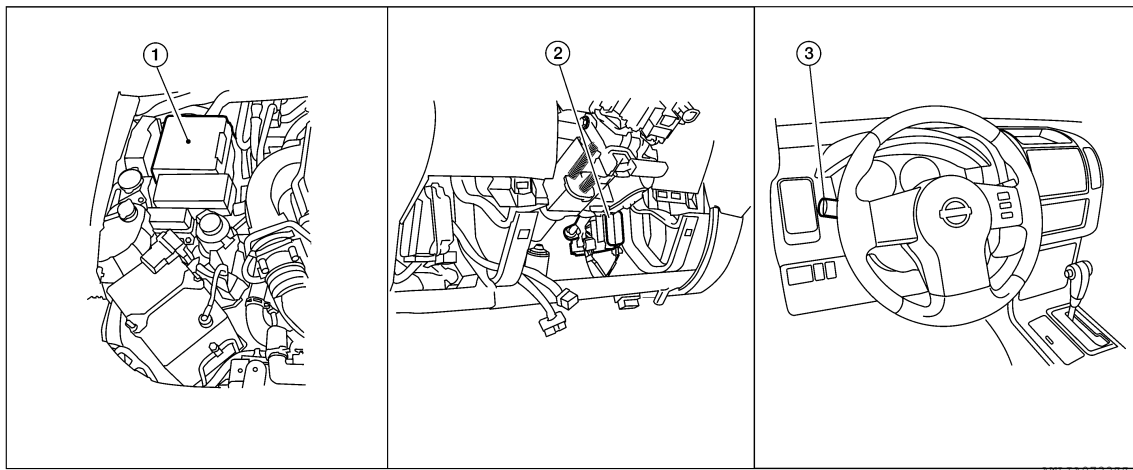

1. IPDM E/R E122, E123, E124
2. BCM M18, M20 (view with lower instrument panel LH removed)
3. Combination switch (lighting and turn signal switch) M28

### Component Description

INFOID:0000000010710016


Part name	Description
BCM	<ul style="list-style-type: none"> <li>Receives lighting switch requests via BCM combination switch reading function.</li> <li>Sends headlamp high/low request signal to the IPDM E/R.</li> </ul>
IPDM E/R	Activates the front fog lamp relay upon request from the BCM.
Combination switch (lighting and turn signal switch)	Outputs lighting requests to the BCM.

# TURN SIGNAL AND HAZARD WARNING LAMPS

< SYSTEM DESCRIPTION >

## TURN SIGNAL AND HAZARD WARNING LAMPS

### System Diagram

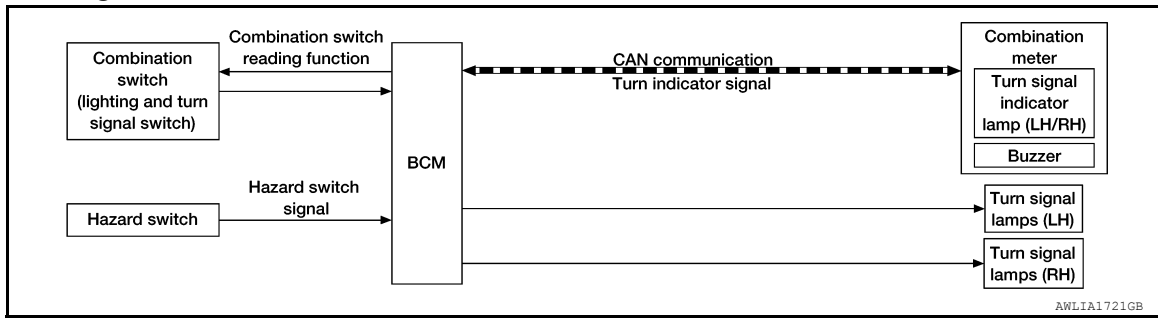

### System Description


#### TURN SIGNAL OPERATION

When the combination switch (lighting and turn signal switch) is in LH or RH position with the ignition switch in ON position, the BCM detects the TURN RH or TURN LH ON request. The BCM outputs the flasher signal to the respective turn signal lamp. The BCM also sends a turn indicator signal ON request via the CAN communication lines to the combination meter. The combination meter then activates the appropriate turn signal indicator and audible buzzer.

#### HAZARD LAMP OPERATION

When the hazard switch is in ON position, the BCM detects the hazard switch signal ON. The BCM outputs the flasher signal (right and left). The BCM sends a hazard indicator signal ON request via the CAN communication lines to the combination meter. The combination meter then activates the hazard indicator and audible buzzer.

### Component Parts Location

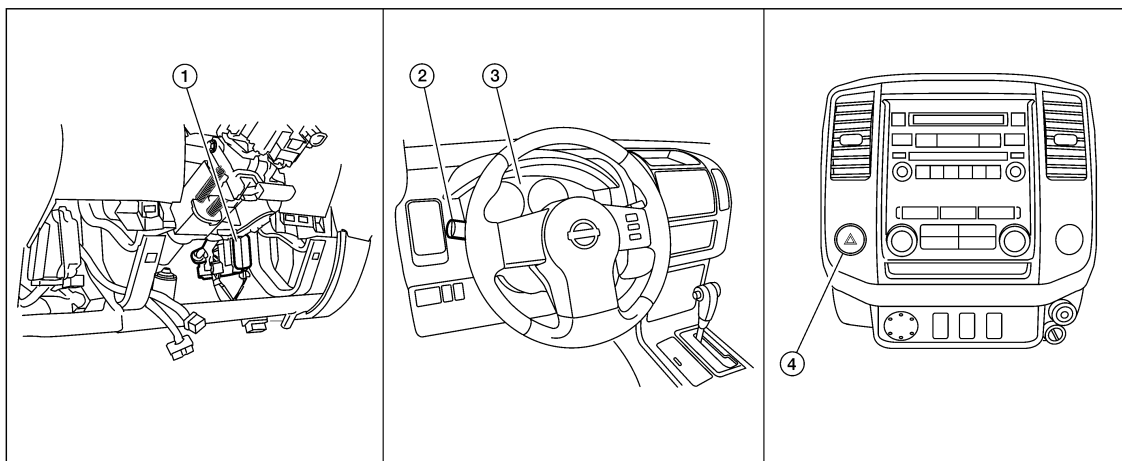

1. BCM M18, M20 (view with lower instrument panel LH removed)
2. Combination switch (lighting and turn signal switch) M28
3. Combination meter M24
4. Hazard switch M55

### Component Description

Part name	Description
BCM	Controls turn signal and hazard flasher operation.

## TURN SIGNAL AND HAZARD WARNING LAMPS

### < SYSTEM DESCRIPTION >


Combination switch (lighting and turn signal switch)	Lighting and turn signal switch requests are output to the BCM.
Hazard switch	Hazard flasher request signal is output to the BCM.
Combination meter	Outputs turn and hazard indicator as requested by the BCM.

# PARKING, LICENSE PLATE AND TAIL LAMPS

< SYSTEM DESCRIPTION >

## PARKING, LICENSE PLATE AND TAIL LAMPS

### System Diagram

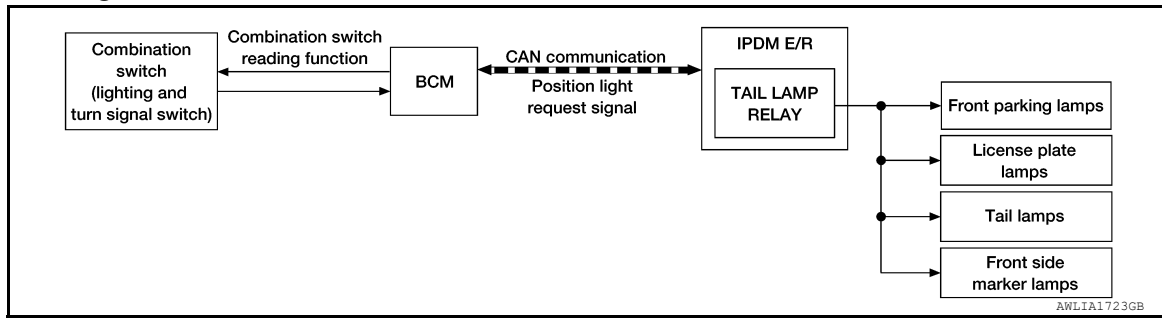

### System Description

INFOID:0000000010710022

#### PARKING, LICENCE PLATE AND TAIL LAMPS OPERATION

When the combination switch (lighting and turn signal switch) is in 1ST position, BCM detects the LIGHTING SWITCH 1ST POSITION ON. The BCM sends a parking light ON request via the CAN communication lines to the IPDM E/R. The IPDM E/R then activates the tail lamp relay which sends power to the parking and instrument illumination circuits.

#### EXTERIOR LAMP BATTERY SAVER CONTROL


With the combination switch (lighting and turn signal switch) in the 2ND position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes unless the combination switch (lighting and turn signal switch) position is changed. If the combination switch (lighting and turn signal switch) position is changed, then the headlamps are turned off.

This setting can be changed by CONSULT. Refer to [BCS-19, "HEADLAMP : CONSULT Function \(BCM - HEADLAMP\)".](#)

### Component Parts Location

INFOID:0000000010710023

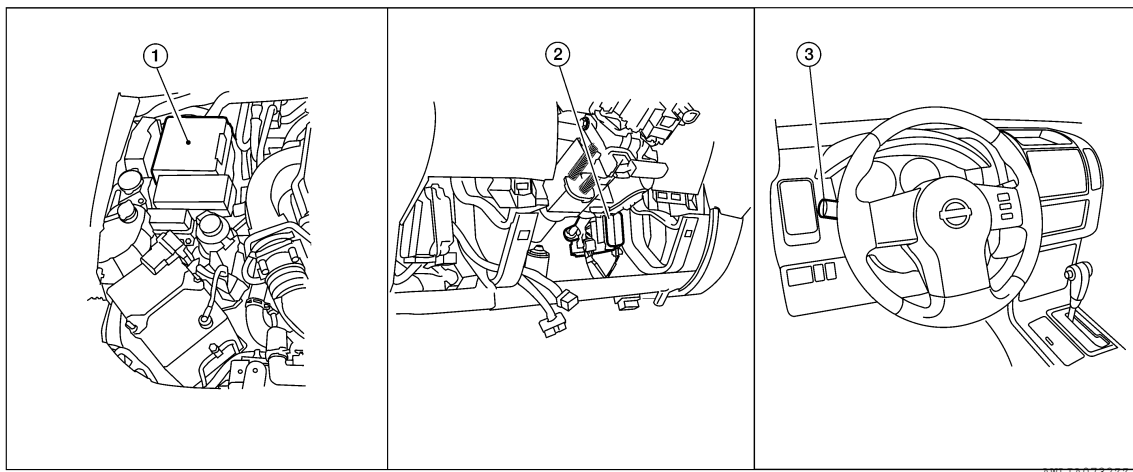

1. IPDM E/R E121, E122, E123, E124
2. BCM M18, M20 (view with lower instrument panel LH removed)
3. Combination switch (lighting and turn signal switch) M28

## PARKING, LICENSE PLATE AND TAIL LAMPS

< SYSTEM DESCRIPTION >

### Component Description

INFOID:0000000010710024


Part name	Description
BCM	<ul style="list-style-type: none"><li>• Receives combination switch (lighting and turn signal switch) requests via BCM combination switch reading function.</li><li>• Sends parking light request signal to the IPDM E/R.</li></ul>
IPDM E/R	Activates the tail lamp relay upon request of the BCM.
Combination switch (lighting and turn signal switch)	Outputs lighting requests to the BCM.

# TRAILER TOW

< SYSTEM DESCRIPTION >

## TRAILER TOW

### System Diagram

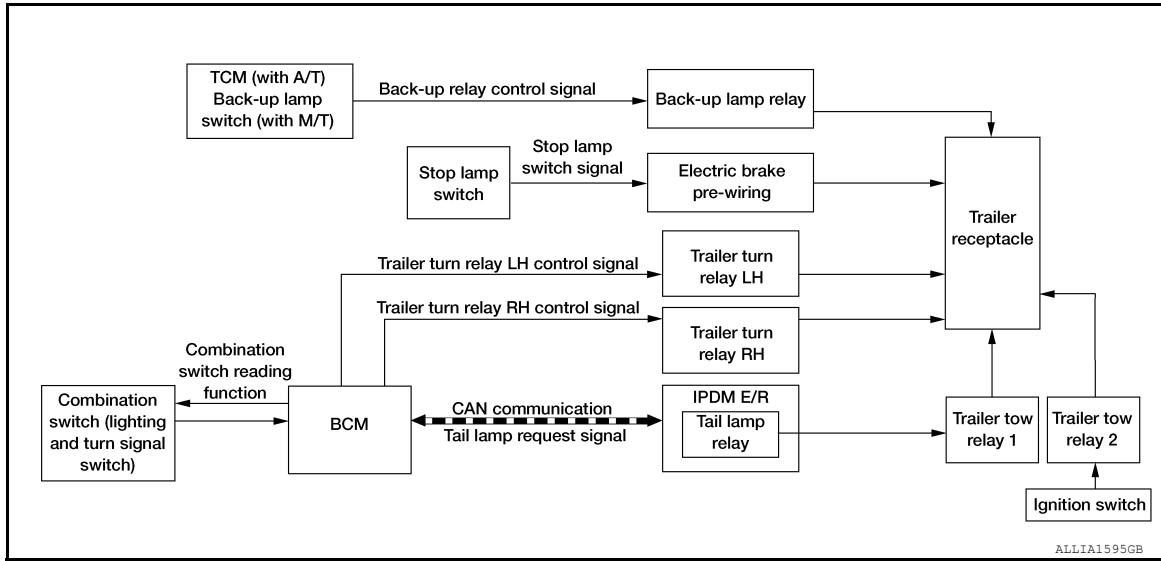

### System Description

INFOID:000000010710026

#### TRAILER TAIL LAMP OPERATION

The trailer tail lamps are controlled by the trailer tow relay 1 that is located on the front of the IPDM E/R. With the combination switch (lighting and turn signal switch) in the 1st position, the BCM detects the LIGHTING SWITCH 1ST POSITION ON. The BCM sends a parking light ON request via the CAN communication lines to the IPDM E/R. The IPDM E/R then activates the tail lamp relay which activates the trailer tow relay 1 and sends power to the trailer receptacle.

#### TRAILER TURN SIGNAL LAMP OPERATION

The trailer turn signal lamps are controlled by the BCM. When the combination switch (lighting and turn signal switch) is in the LH or RH position with the ignition switch ON, the combination switch (lighting and turn signal switch) sends a signal to the BCM. The BCM detects the TURN RH or TURN LH ON request. The BCM sends a control signal to the respective trailer turn relay which sends power to the trailer receptacle.

#### TRAILER HAZARD LAMP OPERATION

The trailer hazard lamps are controlled by the BCM. When the hazard switch is pressed, the BCM detects the the hazard ON request. The BCM then sends a control signal to both trailer turn relays which sends power to the trailer receptacle.

#### TRAILER BRAKE LAMP OPERATION


The trailer brake lamps operate when the brake pedal is pressed sending the stop lamp switch signal to the trailer receptacle.

# TRAILER TOW

## < SYSTEM DESCRIPTION >

### Component Parts Location

INFOID:0000000010710027

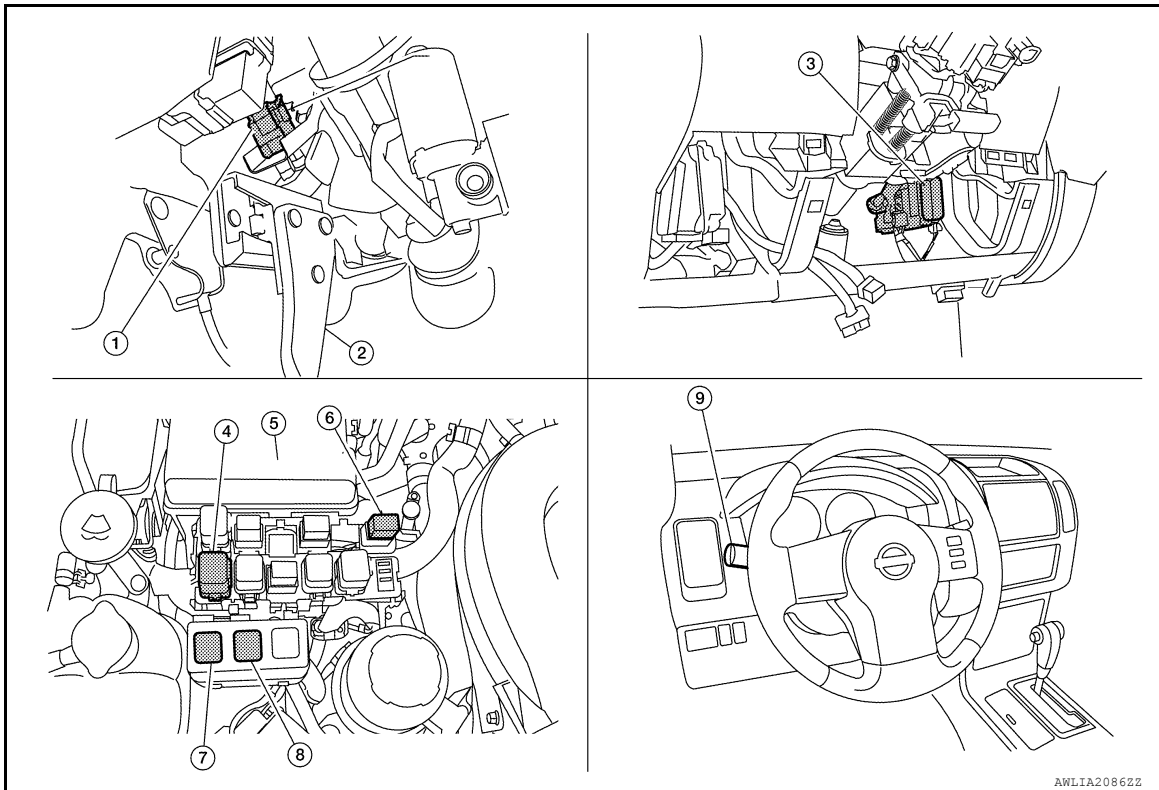

- |  |                              |   |
|--|------------------------------|---|
| 1. Stop lamp switch E38 (with M/T) or E39 (with A/T) (view with lower instrument panel LH removed) | 2. Brake pedal               | 3. BCM, M18, M19, M20 (view with lower instrument panel LH removed) |
| 4. Trailer turn relay LH E164  | 5. IPDM E/R E121, E122, E124 | 6. Trailer turn relay RH E165                                       |
| 7. Trailer tow relay 2 E228  | 8. Trailer tow relay 1 E227  | 9. Combination switch (lighting and turn signal switch) M28         |

### Component Description

INFOID:0000000010710028

Part name	Description
BCM	<ul style="list-style-type: none"> <li>Receives lighting and turn signal requests from combination switch (lighting and turn signal switch).</li> <li>Sends lighting signal request to the IPDM E/R to control the tail lamp relay via CAN communication.</li> <li>Sends turn/hazard/brake control signal to the trailer turn relays.</li> </ul>
IPDM E/R	Activates the tail lamp relay upon request from the BCM via CAN communication.
Combination switch (lighting and turn signal switch)	Outputs lighting and turn signal requests to the BCM.




# COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

## COMBINATION SWITCH READING SYSTEM

### System Diagram

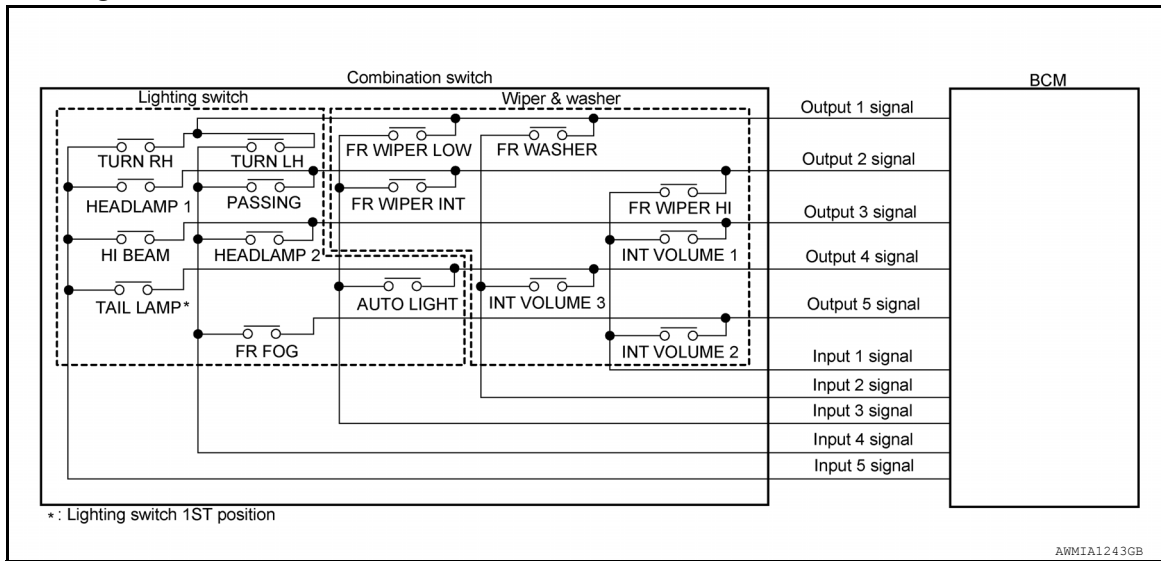

### System Description


INFOID:0000000011350338

#### OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5) and reads a maximum of 20 switch states.

#### COMBINATION SWITCH MATRIX

##### Combination switch circuit

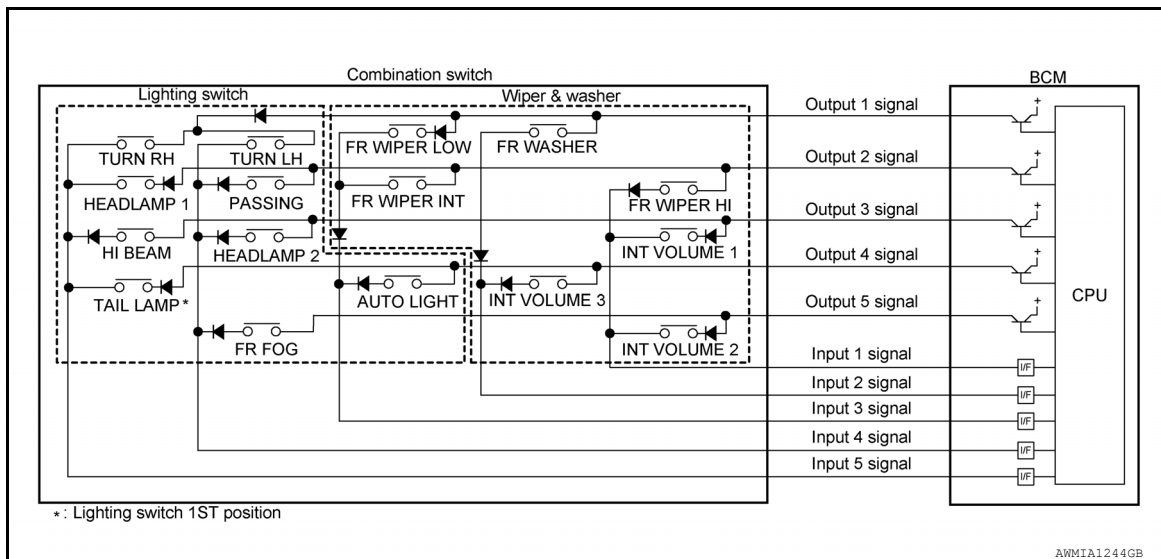

#### Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	INT VOLUME 1	—	—	HEADLAMP 2	HI BEAM

# COMBINATION SWITCH READING SYSTEM


## < SYSTEM DESCRIPTION >

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 4	—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
OUTPUT 5	INT VOLUME 2	—	—	FR FOG	—

## COMBINATION SWITCH READING FUNCTION

### Description


- BCM reads the status of the combination switch at 10 ms intervals normally.

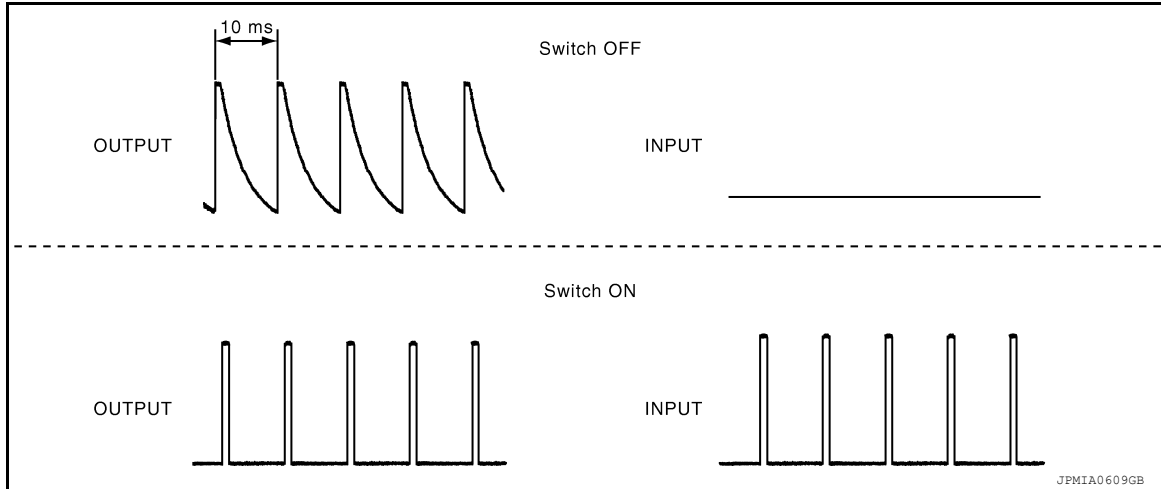

### NOTE:

BCM reads the status of the combination switch at 60 ms intervals when BCM is controlled at low power consumption control mode.

- BCM operates as follows and judges the status of the combination switch.
- It operates the transistor on OUTPUT side in the following order: OUTPUT 1 → 2 → 3 → 4 → 5, and outputs voltage waveform.
- The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.
- It reads this change of the voltage as the status signal of the combination switch.

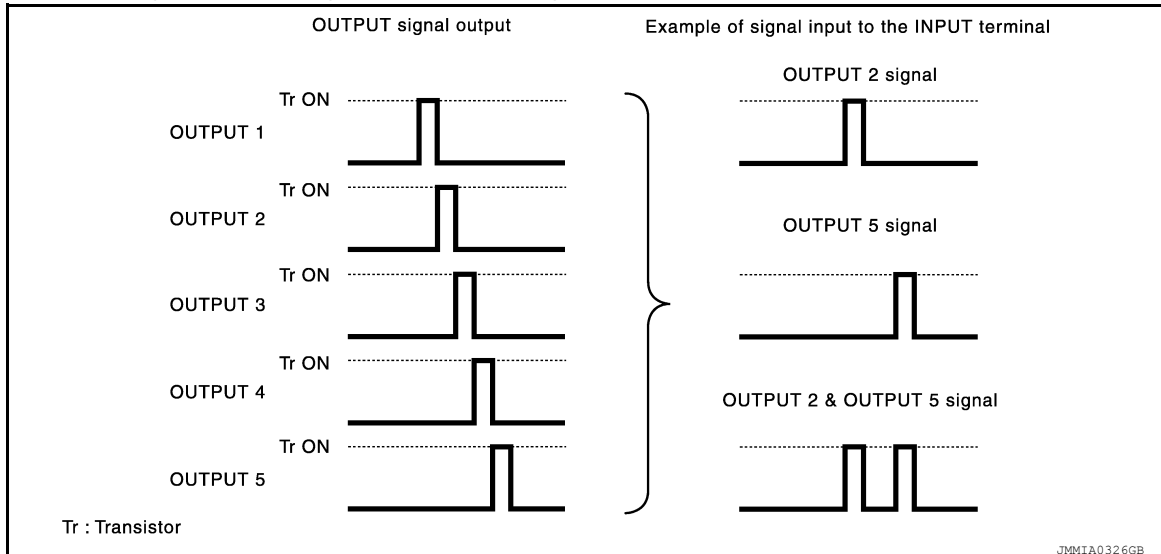

### Operation Example


In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TAIL LAMP) is turned ON

# COMBINATION SWITCH READING SYSTEM

## < SYSTEM DESCRIPTION >


- The circuit between OUTPUT 4 and INPUT 5 is formed when the TAIL LAMP switch is turned ON.

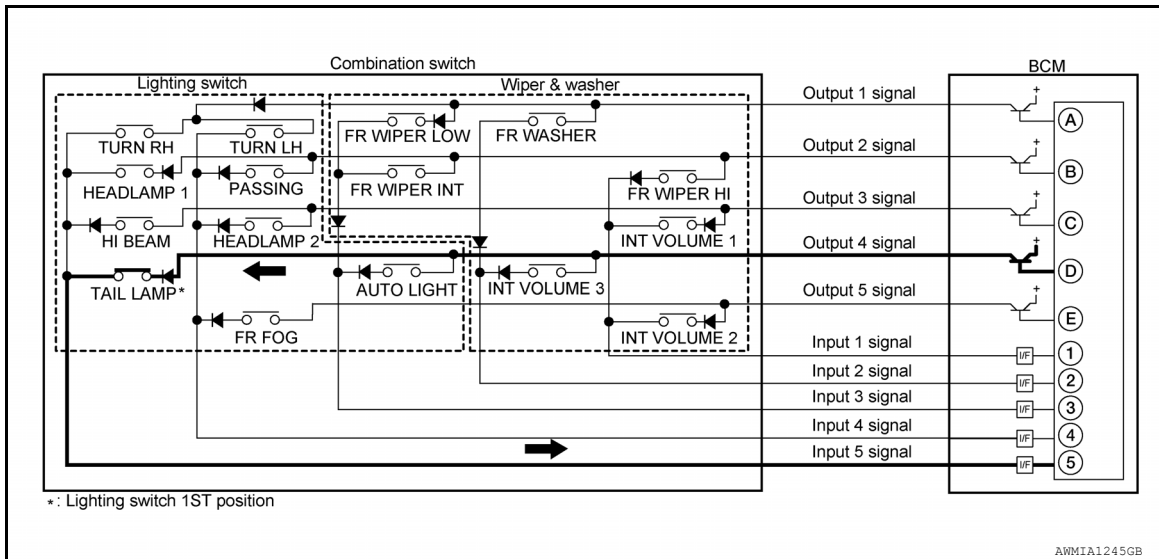

- BCM detects the combination switch status signal “5D” when the signal of OUTPUT 4 is input to INPUT 5.
- BCM judges that the TAIL LAMP switch is ON when the signal “5D” is detected.

Example 2: When some switches (TURN RH, TAIL LAMP) are turned ON

- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.

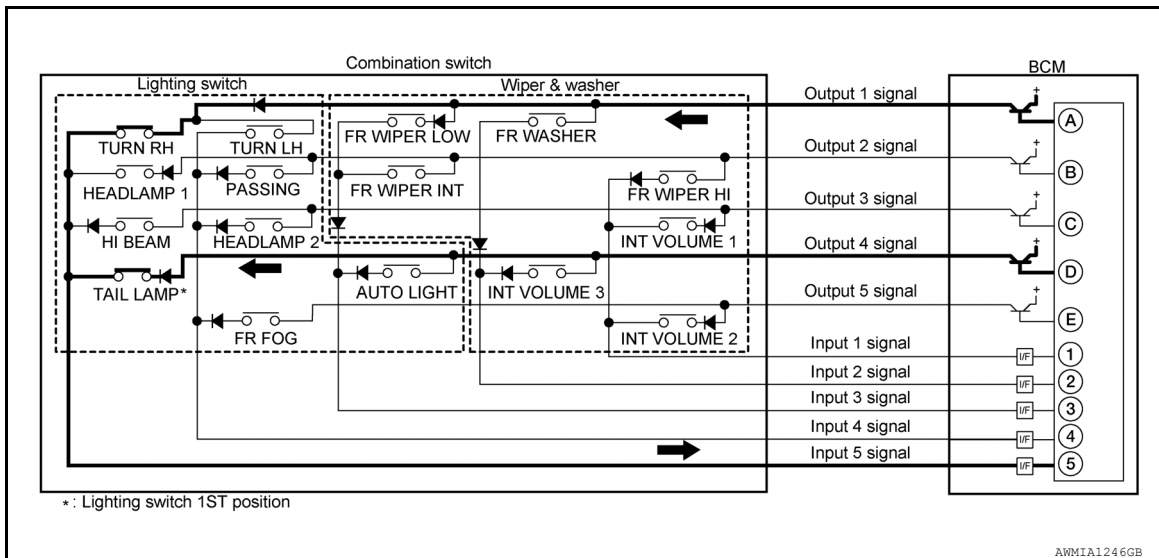

- BCM detects the combination switch status signal “5AD” when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal “5AD” is detected.

## WIPER INTERMITTENT DIAL POSITION SETTING (FRONT WIPER INTERMITTENT OPERATION)

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2, and 3 switches.


# COMBINATION SWITCH READING SYSTEM

## < SYSTEM DESCRIPTION >

Wiper intermittent dial position	Intermittent operation delay interval	INT VOLUME switch ON/OFF status		
		INT VOLUME 1	INT VOLUME 2	INT VOLUME 3
1	Short ↑	ON	ON	ON
2		ON	ON	OFF
3		ON	OFF	OFF
4		OFF	OFF	OFF
5	↓ Long	OFF	OFF	ON
6		OFF	ON	ON
7		OFF	ON	OFF

## Component Parts Location

INFOID:000000011350339

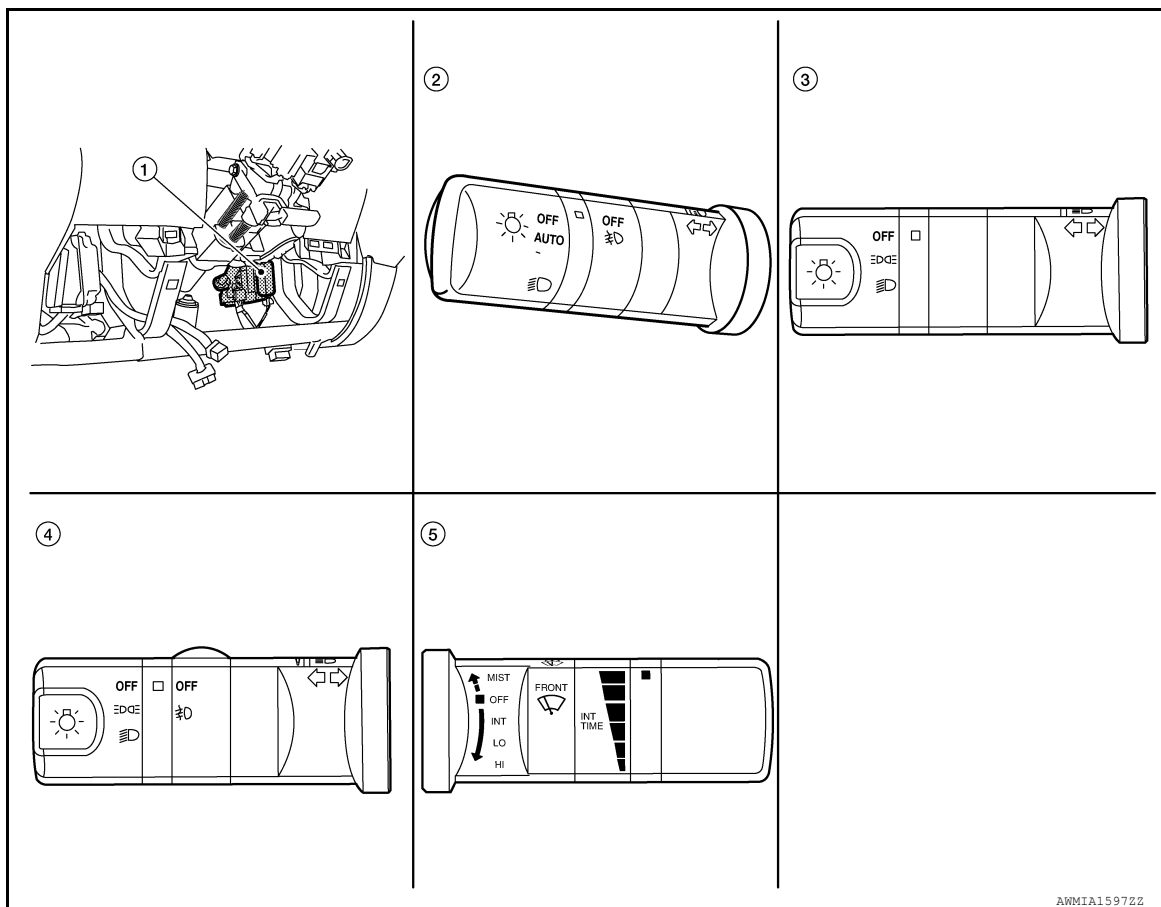

AWMIA15972Z

1. BCM M18, M19, M20 (view with lower instrument panel LH removed)
2. Combination switch (lighting and turn signal switch with auto lights and fog lights) M28
3. Combination switch (lighting and turn signal switch without auto lights and fog lights ) M28
4. Combination switch (lighting and turn signal switch with fog lights without auto lights) M28
5. Combination switch (wiper and washer switch) M28

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

### COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011350340

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> <li>The vehicle specification can be read and saved.</li> <li>The vehicle specification can be written when replacing BCM.</li> </ul>
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

### SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK			x	x	x		
Rear window defogger	REAR DEFOGGER			x	x			
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Remote keyless entry system	MULTI REMOTE ENT			x	x	x		
Exterior lamp	HEAD LAMP			x	x	x		
Wiper and washer	WIPER			x	x	x		
Turn signal and hazard warning lamps	FLASHER			x	x			
Air conditioner	AIR CONDITIONER			x				
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x	x	x			
Interior room lamp battery saver	BATTERY SAVER			x	x	x		
Vehicle security system	THEFT ALM			x	x	x		
RAP system	RETAINED PWR			x	x	x		
Signal buffer system	SIGNAL BUFFER			x	x			
TPMS	AIR PRESSURE MONITOR		x	x	x	x		
Panic alarm system	PANIC ALARM				x			

### HEADLAMP

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## HEADLAMP : CONSULT Function (BCM - HEADLAMP)

INFOID:0000000011350341

### DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
ACC ON SW [On/Off]	Indicates condition of ignition switch ACC position.
HI BEAM SW [On/Off]	Indicates condition of combination switch.
HEAD LAMP SW 1 [On/Off]	
HEAD LAMP SW 2 [On/Off]	
LIGHT SW 1ST [On/Off]	
AUTO LIGHT SW [On/Off]	
PASSING SW [On/Off]	
FR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
TURN SIGNAL R [On/Off]	Indicates condition of combination switch.
TURN SIGNAL L [On/Off]	
CARGO LAMP SW [On/Off]	Indicates condition of cargo lamp switch.
OPTICAL SENSOR [V]	Indicates voltage signal from optical sensor.

### ACTIVE TEST

Test Item	Description
TAIL LAMP	This test is able to check tail lamp operation [Off/On].
HEAD LAMP	This test is able to check head lamp operation [Off/Lo/Hi].
FR FOG LAMP	This test is able to check front fog lamp operation [Off/On].
CARGO LAMP	This test is able to check cargo lamp operation [Off/On].

### WORK SUPPORT

Support Item	Setting	Description
BATTERY SAVER SET	Off	Exterior lamp battery saver function OFF.
	On*	Exterior lamp battery saver function ON.
CUSTOM A/LIGHT SETTING	MODE4	Less sensitive setting than normal setting (Turns ON later than normal operation).
	MODE3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2).
	MODE2	More sensitive setting than normal setting (Turns ON earlier than normal operation).
	MODE1*	Normal.

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

Support Item	Setting		Description
ILL DELAY SET	MODE8	180 sec	Sets delay timer function operation time (All doors closed).
	MODE7	150 sec	
	MODE6	120 sec	
	MODE5	90 sec	
	MODE4	60 sec	
	MODE3	30 sec	
	MODE2	OFF	
	MODE1*	45 sec	

\*: Initial setting

## FLASHER

### FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:0000000011350342

#### DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
HAZARD SW [On/Off]	Indicates condition of hazard switch.
TURN SIGNAL R [On/Off]	Indicates condition of turn signal function of combination switch.
TURN SIGNAL L [On/Off]	
BRAKE SW [On/Off]	Indicates condition of brake switch.

#### ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

## COMB SW

### COMB SW : CONSULT Function (BCM - COMB SW)

INFOID:0000000011350343

#### DATA MONITOR

Monitor Item [Unit]	Description
TURN SIGNAL R [On/Off]	Indicates condition of turn signal operation of combination switch.
TURN SIGNAL L [On/Off]	
HI BEAM SW [On/Off]	Indicates condition of hi beam operation of combination switch.
HEAD LAMP SW 1 [On/Off]	Indicates condition of headlamp operation of combination switch.
HEAD LAMP SW 2 [On/Off]	
LIGHT SW 1ST [On/Off]	Indicates condition of lighting operation of combination switch.
PASSING SW [On/Off]	Indicates condition of passing switch operation of combination switch.
AUTO LIGHT SW [On/Off]	Indicates condition of auto light operation of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog light operation of combination switch.
FR WIPER HI [On/Off]	Indicates condition of front wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WIPER INT [On/Off]	
FR WASHER SW [On/Off]	Indicates condition of front washer operation of combination switch.
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (IPDM E/R)

### Diagnosis Description

INFOID:000000011350344

#### AUTO ACTIVE TEST

##### Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure low warning indicator
- Oil pressure gauge (if equipped)
- Rear window defogger (if equipped)
- Front wipers
- Tail, license and parking lamps
- Front fog lamps (if equipped)
- Headlamps (Hi, Lo)
- A/C compressor (magnetic clutch)
- Cooling fan (if equipped)

##### Operation Procedure

1. Close the hood and front door RH, and lift the wiper arms from the windshield (to prevent windshield damage due to wiper operation).  
**NOTE:**  
When auto active test is performed with hood opened, sprinkle water on windshield before hand.
2. Turn ignition switch OFF.
3. Turn the ignition switch ON and, within 20 seconds, press the front door switch LH 10 times. Then turn the ignition switch OFF.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

##### NOTE:


When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

##### CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-27, "KING CAB : Description"](#) (king cab) or [DLK-29, "CREW CAB : Description"](#) (crew cab).
- Do not start the engine.

##### Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 7 steps are repeated 3 times.

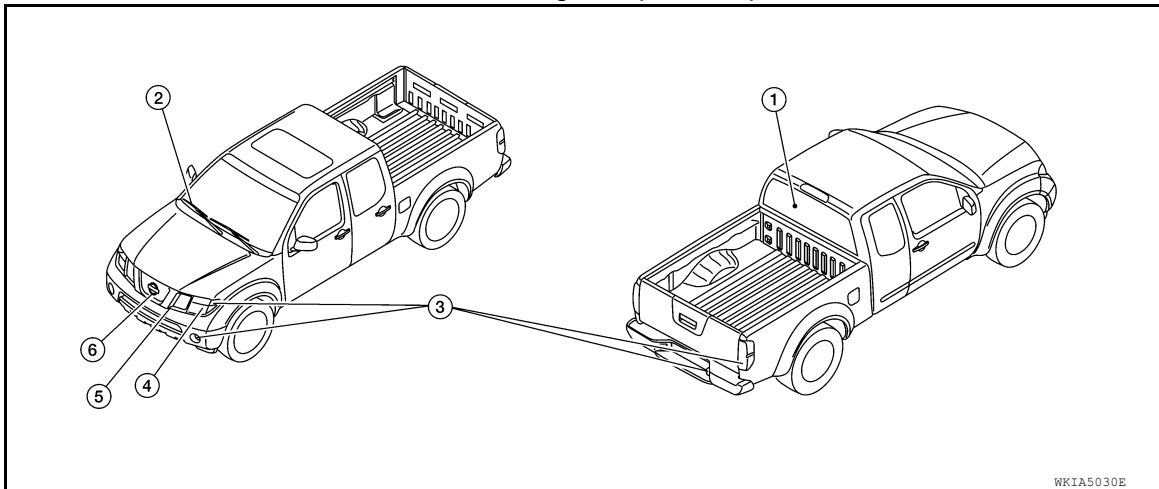

Item Number	Test Item	Operation Time/Frequency
1	Rear window defogger (if equipped)	10 seconds
2	Front wipers	LOW 5 seconds then HIGH 5 seconds
3	Tail, license plate, front fog and parking lamps	10 seconds




# DIAGNOSIS SYSTEM (IPDM E/R)

## < SYSTEM DESCRIPTION >

Item Number	Test Item	Operation Time/Frequency
4	Headlamps	Low ON for 10 seconds, then High ON-OFF five times.
5	A/C compressor (magnet clutch)	ON-OFF 5 times
6	Cooling fan (if equipped)	LOW 5 seconds then HIGH 5 seconds

### Concept of auto active test

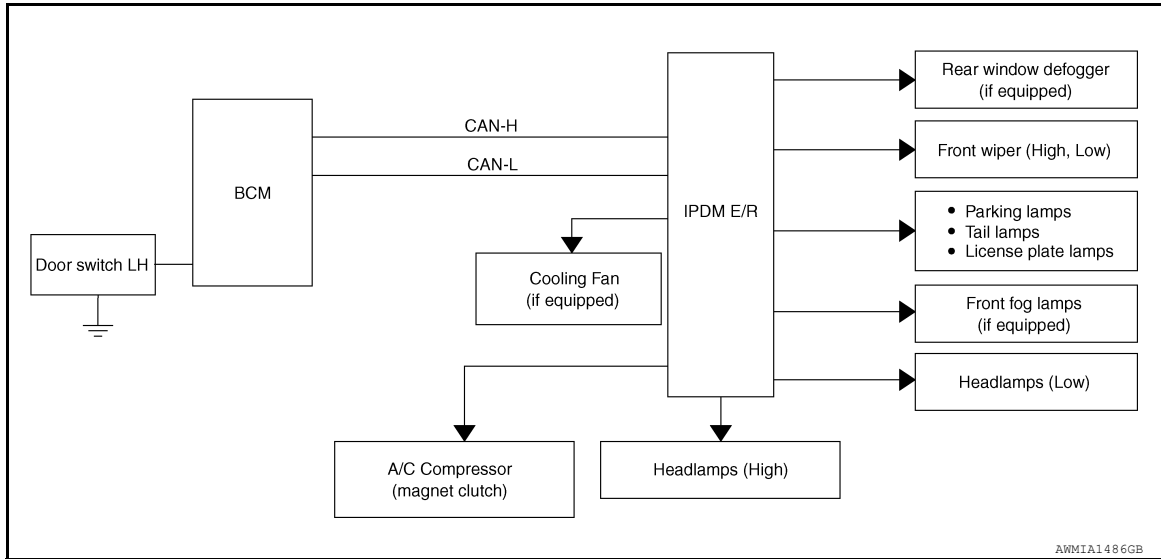

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

### Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Oil pressure low warning indicator does not operate	Perform auto active test. Does the oil pressure low warning indicator operate?	YES <ul style="list-style-type: none"> <li>• IPDM E/R signal input circuit</li> <li>• ECM signal input circuit</li> <li>• CAN communication signal between ECM and combination meter</li> </ul>
		NO <ul style="list-style-type: none"> <li>• CAN communication signal between IPDM E/R, BCM and combination meter</li> </ul>
Oil pressure gauge does not operate	Perform auto active test. Does the oil pressure gauge operate?	YES <ul style="list-style-type: none"> <li>• IPDM E/R signal input circuit</li> </ul>
		NO <ul style="list-style-type: none"> <li>• CAN communication signal between IPDM E/R, BCM and combination meter</li> </ul>
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES <ul style="list-style-type: none"> <li>• BCM signal input circuit</li> </ul>
		NO <ul style="list-style-type: none"> <li>• Harness or connector between front air control and BCM</li> <li>• CAN communication signal between BCM and IPDM E/R</li> </ul>

## DIAGNOSIS SYSTEM (IPDM E/R)

### < SYSTEM DESCRIPTION >

Symptom	Inspection contents		Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> <li>• Front wipers</li> <li>• Tail lamps</li> <li>• License plate lamps</li> <li>• Parking lamps</li> <li>• Front fog lamps (if equipped)</li> <li>• Headlamps (Hi, Lo)</li> </ul>	Perform auto active test. Does the applicable system operate?	YES	BCM signal input system
		NO	<ul style="list-style-type: none"> <li>• Lamp or front wiper motor malfunction</li> <li>• Lamp or front wiper motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R (integrated relay malfunction)</li> </ul>
A/C compressor does not operate	Perform auto active test. Does the A/C compressor operate?	YES	<ul style="list-style-type: none"> <li>• BCM signal input circuit</li> <li>• CAN communication signal between BCM and ECM</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO	<ul style="list-style-type: none"> <li>• Magnetic clutch malfunction</li> <li>• Harness or connector between IPDM E/R and magnetic clutch</li> <li>• IPDM E/R (integrated relay malfunction)</li> </ul>
Cooling fan does not operate (if equipped)	Perform auto active test. Does the cooling fan operate?	YES	<ul style="list-style-type: none"> <li>• ECM signal input circuit</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO	<ul style="list-style-type: none"> <li>• Cooling fan motor malfunction</li> <li>• Harness or connector between IPDM E/R and cooling fan</li> <li>• IPDM E/R (integrated relay malfunction)</li> </ul>

### CONSULT Function (IPDM E/R)

INFOID:0000000011350345

#### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Direct Diagnostic Mode	Description
Self Diagnostic Result	The IPDM E/R self diagnostic results are displayed.
Data Monitor	The IPDM E/R input/output data is displayed in real time.
Active Test	The IPDM E/R activates outputs to test components.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

#### SELF DIAGNOSTIC RESULT

Refer to [PCS-21, "DTC Index"](#).

#### DATA MONITOR

Monitor Item [Unit]	Main Signals	Description
MOTOR FAN REQ [1/2/3/4]	×	Indicates cooling fan speed signal received from ECM on CAN communication line
AC COMP REQ [On/Off]	×	Indicates A/C compressor request signal received from ECM on CAN communication line

# DIAGNOSIS SYSTEM (IPDM E/R)

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Main Signals	Description
TAIL&CLR REQ [On/Off]	×	Indicates position light request signal received from BCM on CAN communication line
HL LO REQ [On/Off]	×	Indicates low beam request signal received from BCM on CAN communication line
HL HI REQ [On/Off]	×	Indicates high beam request signal received from BCM on CAN communication line
FR FOG REQ [On/Off]	×	Indicates front fog light request signal received from BCM on CAN communication line
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Indicates front wiper request signal received from BCM on CAN communication line
WIP AUTO STOP [STOP P/ACT P]	×	Indicates condition of front wiper auto stop signal
WIP PROT [Off/BLOCK]	×	Indicates condition of front wiper fail-safe operation
ST RLY REQ [On/Off]		Indicates starter request signal received from ECM on CAN communication line
IGN RLY [On/Off]	×	Indicates condition of ignition relay
RR DEF REQ [On/Off]	×	Indicates rear defogger request signal received from BCM on CAN communication line
OIL P SW [Open/Close]		Indicates condition of oil pressure switch
DTRL REQ [Off]		Indicates daytime light request signal received from BCM on CAN communication line
THFT HRN REQ [On/Off]		Indicates theft warning horn request signal received from BCM on CAN communication line
HORN CHIRP [On/Off]		Indicates horn reminder signal received from BCM on CAN communication line

## ACTIVE TEST

Test item	Description
REAR DEFOGGER	This test is able to check rear defogger operation [On/Off].
FRONT WIPER	This test is able to check wiper motor operation [Hi/Lo/Off].
MOTOR FAN	This test is able to check cooling fan operation [4/3/2/1].
EXTERNAL LAMPS	This test is able to check external lamp operation [Fog/Hi/Lo/TAIL/Off].
HORN	This test is able to check horn operation [On].

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT

#### BCM (BODY CONTROL MODULE)

#### BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:0000000011350423

Regarding Wiring Diagram information, refer to [BCS-45, "Wiring Diagram"](#).

### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	21 (10A)
70		G (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	1 (10A)

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

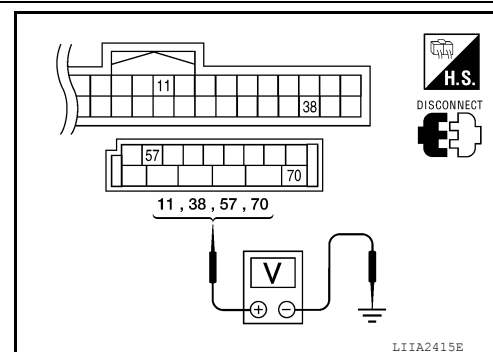

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

### 3. CHECK GROUND CIRCUIT

# POWER SUPPLY AND GROUND CIRCUIT


## < DTC/CIRCUIT DIAGNOSIS >

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

Does continuity exist?

- YES >> Inspection End.  
NO >> Repair or replace harness.

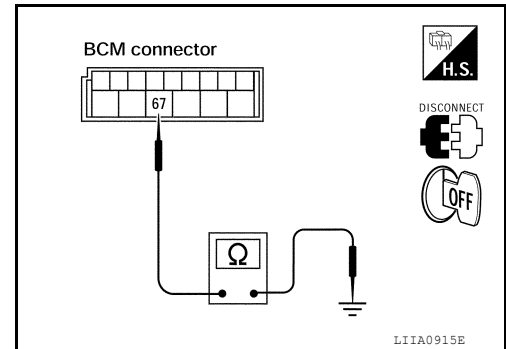

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:0000000011350424

Regarding Wiring Diagram information, refer to [PCS-22. "Wiring Diagram"](#).

## 1. CHECK FUSIBLE LINKS

Check that the following IPDM E/R fusible links are not blown.

Terminal No.	Signal name	Fusible link No.
1	Battery	A, D
2		C
22		A, E, I


Is the fusible link blown?

- YES >> Replace the blown fusible link after repairing the affected circuit.  
NO >> GO TO 2

## 2. CHECK BATTERY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R.
- Check voltage between IPDM E/R harness connectors and ground.

Terminals		Ignition switch position	Voltage (V) (Approx.)
(+)	(-)		
Connector	Terminal		
E118 (A)	1	Ground	Battery voltage
	2		
E120 (B)	22		

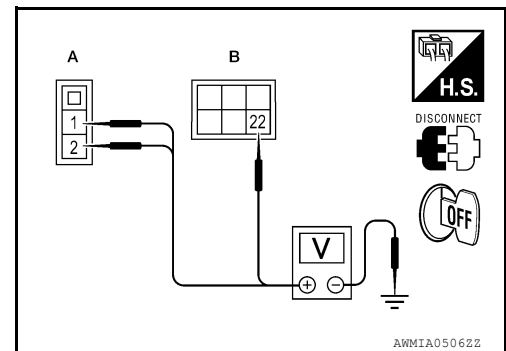

Is there voltage on all pins?

- YES >> GO TO 3  
NO >> Repair or replace harness.

## 3. CHECK GROUND CIRCUIT

- Turn ignition switch OFF.

## POWER SUPPLY AND GROUND CIRCUIT


### < DTC/CIRCUIT DIAGNOSIS >

- Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E122 (A)	38		Yes
E124 (B)	59		

#### Does continuity exist?

- YES >> Inspection End.  
 NO >> Repair or replace harness.

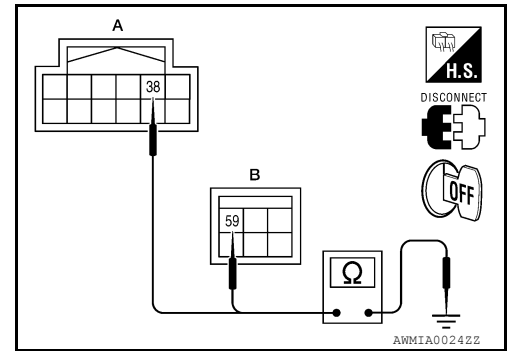

# HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## HEADLAMP (HI) CIRCUIT

### Description

INFOID:0000000010710040

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp high relay based on inputs from the BCM via the CAN communication lines. When the headlamp high relay is energized, power flows through fuses 34 and 35, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp high beam.

### Component Function Check

INFOID:0000000010710041

#### 1.CHECK HEADLAMP (HI) OPERATION

##### ⊗WITHOUT CONSULT

1. Start IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the headlamp switches to the high beam.

##### NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

##### ⓂWITH CONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With the test item operating, check that the headlamp switches to high beam.

**HI** : Headlamp switches to the high beam.

**OFF** : Headlamp OFF

Does the headlamp switch to high beam?

YES >> Headlamp (HI) circuit is normal.

NO >> Refer to [EXL-39, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000010710042

Regarding Wiring Diagram information, refer to [EXL-75, "Wiring Diagram"](#)(without Daytime light system) or [EXL-79, "Wiring Diagram"](#)(with Daytime light system).

#### 1.CHECK HEADLAMP (HI) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open:

Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	35	10A
Headlamp HI (RH)	IPDM E/R	34	10A

Is the fuse open?

YES >> Replace the blown fuse after repairing the affected circuit.

NO >> GO TO 2.


#### 2.CHECK HEADLAMP (HI) OUTPUT VOLTAGE

# HEADLAMP (HI) CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

1. Disconnect the front combination lamp connector E7 (with Daytime light system), E11 (without Daytime light system) or E107.
2. Turn the ignition switch ON.
3. Turn the high beam headlamps ON.
4. With the high beam headlamps ON, check the voltage between the front combination lamp connector and ground.

(+) Connector		Terminal	(-)	Voltage
LH	E7 (with Daytime light system)	1	Ground	Battery voltage
	E11 (without Daytime light system)			
RH	E107			

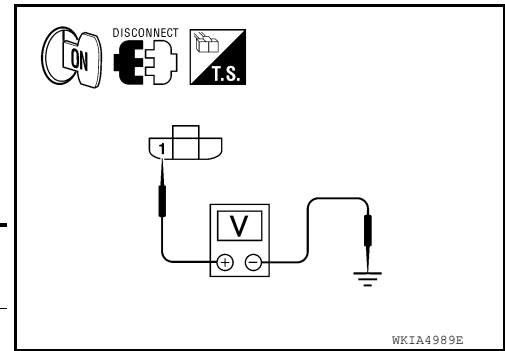


### Is battery voltage present?

- YES >> GO TO 4.  
NO >> GO TO 3.

## 3.CHECK HEADLAMP (HI) CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E123.
3. Check continuity between the IPDM E/R harness connector (A) and the front headlamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E123	E7 (with Daytime light system)	1	Yes
		E11(without Day-time light system)		
RH		E107		

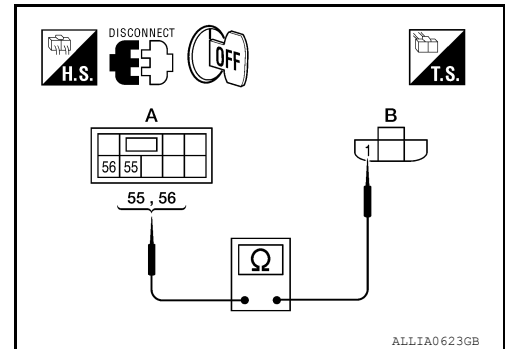


### Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#).  
NO >> Repair the harnesses or connectors.

## 4.CHECK FRONT HEADLAMP (HI) GROUND CIRCUIT

Check continuity between the front headlamp harness connector terminal and ground.

Connector		Terminal	-	Continuity
LH	E7 (with Daytime light system)	2	Ground	Yes
	E11 (without Daytime light system)			
RH	E107			

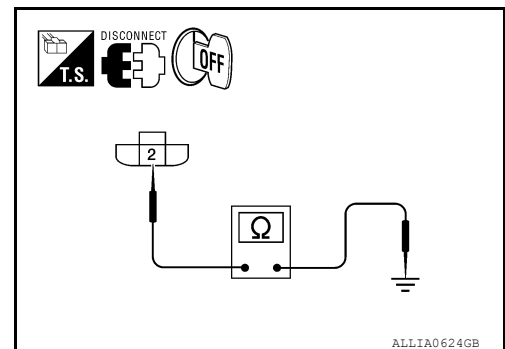

### Does continuity exist?

- YES >> Inspect the headlamp bulb.  
NO (Except LH with Daytime light system)>> Repair the harness.  
NO (LH with Daytime light system)>> GO TO 5.

## 5.CHECK CONTINUITY BETWEEN FRONT HEADLAMP LH (HI) AND DAYTIME LIGHT RELAY 1

1. Disconnect daytime light relay 1 connector.
2. Check continuity between front headlamp LH harness connector and daytime light relay 1 harness connector.



## HEADLAMP (HI) CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

Front headlamp LH		Daytime light relay 1		Continuity
Connector	Terminal	Connector	Terminal	
E7	2	E103	3	Yes

#### Does continuity exist?

YES >> GO TO 6.

NO >> Repair the harness or connector.

### 6.CHECK DAYTIME LIGHT RELAY 1 GROUND CIRCUIT

Check continuity between daytime light relay 1 harness connector and ground.

Daytime light relay 1		Ground	Continuity
Connector	Terminal		
E103	4		Yes

#### Does continuity exist?

YES >> GO TO 7.

NO >> Repair the harness or connector.

### 7.CHECK DAYTIME LIGHT RELAY 1

Check daytime light relay 1. Refer to [EXL-47. "Component Inspection"](#)

#### Is the inspection result normal?

YES >> Inspect the headlamp bulb.

NO >> Replace daytime light relay 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## HEADLAMP (LO) CIRCUIT

### Description

INFOID:0000000010710043

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp low relay based on inputs from the BCM via the CAN communication lines. When the headlamp low relay is energized, power flows through fuses 40 and 41, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp low beam.

### Component Function Check

INFOID:0000000010710044

#### 1. CHECK HEADLAMP (LO) OPERATION

##### ⊗ WITHOUT CONSULT

1. Start IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the headlamp is turned ON.

##### NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

##### Ⓢ WITH CONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With the test items operating, check that the headlamp is turned ON.

**LO** : Headlamp ON  
**OFF** : Headlamp OFF

##### Is the headlamp turned ON?

- YES >> Headlamp (LO) is normal.  
NO >> Refer to [EXL-42, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000010710045

Regarding Wiring Diagram information, refer to [EXL-75, "Wiring Diagram"](#) (without Daytime light system) or [EXL-79, "Wiring Diagram"](#) (with Daytime light system).

#### 1. CHECK HEADLAMP (LO) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open:

Unit	Location	Fuse No.	Capacity
Headlamp LO (LH)	IPDM E/R	40	15A
Headlamp LO (RH)	IPDM E/R	41	15A

##### Is the fuse open?

- YES >> Replace the blown fuse after repairing the affected circuit.  
NO >> GO TO 2.


#### 2. CHECK HEADLAMP (LO) OUTPUT VOLTAGE

# HEADLAMP (LO) CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

1. Disconnect the front headlamp connector.
2. Turn the ignition switch ON.
3. Turn the low beam headlamps ON.
4. With the low beam headlamps ON, check the voltage between the headlamp connector and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	E7 (with Daytime light system)	3	Ground	Battery voltage
	E11 (without Daytime light system)			
RH	E107			

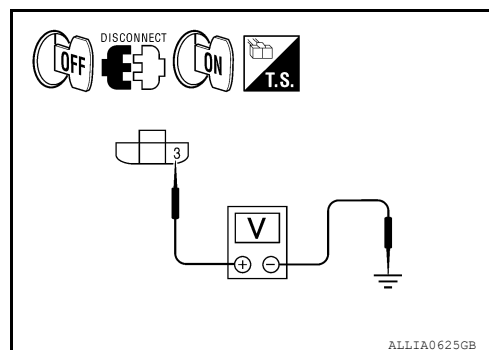

### Is battery voltage present?

YES >> GO TO 8.


NO (Except LH with Daytime light system)>>Check headlamp (LO) circuit for open GO TO 3.

NO (LH with Daytime light system)>>Check headlamp (LO) circuit for open (LH WITH Daytime light system) GO TO 4.

## 3.CHECK HEADLAMP (LO) CIRCUIT FOR OPEN (EXCEPT LH WITH DAYTIME LIGHT SYSTEM)

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E123.
3. Check continuity between the IPDM E/R harness connector (A) and the front headlamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E123	E11	3	Yes
RH		E107		

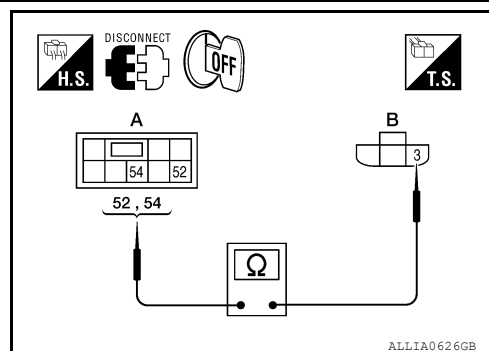

### Does continuity exist?

YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Repair the harnesses or connectors.

## 4.CHECK HEADLAMP (LO) CIRCUIT FOR OPEN (LH WITH DAYTIME LIGHT SYSTEM)

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E123 and daytime light relay 2 connector.
3. Check continuity between the IPDM E/R harness connector and the daytime light relay 2 harness connector.

IPDM E/R		Daytime light relay 2		Continuity
Connector	Terminal	Connector	Terminal	
E123	52	E104	5	Yes
			2	

### Does continuity exist?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

## 5.CHECK DAYTIME LIGHT RELAY 2 CIRCUIT (LH WITH DAYTIME LIGHT SYSTEM)

1. Check continuity between the daytime light relay 2 harness connector and the front headlamp LH harness connector.

# HEADLAMP (LO) CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

Daytime light relay 2		Front headlamp LH		Continuity
Connector	Terminal	Connector	Terminal	
E104	3	E7	3	Yes

2. Check continuity between the daytime light relay 2 harness connector and ground.

Daytime light relay 2		Ground	Continuity
Connector	Terminal		
E104	3		No

Is the measurement value normal?

YES >> GO TO 6.

NO >> Repair the harnesses or connectors.

## 6.CHECK DAYTIME LIGHT RELAY 2 GROUND CIRCUIT

Check continuity between daytime light relay 2 harness connector and ground.

Daytime light relay 2		Ground	Continuity
Connector	Terminal		
E104	1		Yes

Does continuity exist?

YES >> GO TO 7.

NO >> Repair the harness or connector.

## 7.CHECK DAYTIME LIGHT RELAY 2

Check daytime light relay 2. Refer to [EXL-45, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Replace daytime light relay 2.

## 8.CHECK FRONT HEADLAMP (LO) GROUND CIRCUIT

Check continuity between the front headlamp harness connector terminal 2 and ground.

	Connector	Terminal	-	Continuity
LH	E7 (with Daytime light system)	2	Ground	Yes
	E11 (without Daytime light system)			
RH	E107			

Does continuity exist?

YES >> Inspect the headlamp bulb.

NO (Except LH with Daytime light system)>> Repair the harness.


NO (LH with Daytime light system)>> GO TO 9.

## 9.CHECK CONTINUITY BETWEEN FRONT HEADLAMP LH (HI) AND DAYTIME LIGHT RELAY 1

1. Disconnect daytime light relay 1 connector.

2. Check continuity between front headlamp LH harness connector and daytime light relay 1 harness connector.

Front headlamp LH		Daytime light relay 1		Continuity
Connector	Terminal	Connector	Terminal	
E7	2	E103	3	Yes

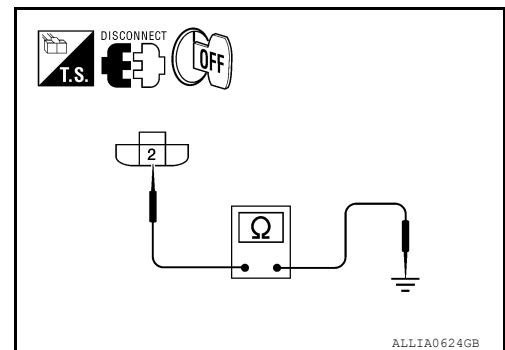

## HEADLAMP (LO) CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

#### Does continuity exist?

YES >> GO TO 10.

NO >> Repair the harness or connector.

### 10. CHECK DAYTIME LIGHT RELAY 1 GROUND CIRCUIT

Check continuity between daytime light relay 1 harness connector and ground.

Daytime light relay 1		Ground	Continuity
Connector	Terminal		
E103	4		Yes

#### Does continuity exist?

YES >> GO TO 11.

NO >> Repair the harness or connector.

### 11. CHECK DAYTIME LIGHT RELAY 1

Check daytime light relay 1. Refer to [EXL-47, "Component Inspection"](#)

#### Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Replace daytime light relay 1.

## Component Inspection

INFOID:0000000010710046

### 1. CHECK DAYTIME LIGHT RELAY 2

1. Turn ignition switch OFF.
2. Remove daytime light relay 2.
3. Check the continuity between daytime light relay 2 terminals under the following conditions:

Terminals	Condition	Continuity
3 and 5	12V direct current supply between terminals 1 and 2	Yes
	No current supply	No

#### Is the inspection result normal?

YES >> Inspection End.

NO >> Replace daytime light relay 2.

EXL

# DAYTIME LIGHT RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DAYTIME LIGHT RELAY CIRCUIT

### Description

INFOID:0000000010710047

The BCM sends a daytime light request to the IPDM E/R via the CAN communication lines. The power flows backward through fuse 45 located in IPDM E/R to daytime light relay 1 and LH high beam lamp to IPDM E/R, through the high beam fuses, through the RH high beam lamp and on to ground. The high beam lamps are wired in series which causes them to illuminate at a reduced intensity. When daytime light relay 2 is open, it prevents headlamp low beam from turning on while daytime lights are operating.

### Diagnosis Procedure

INFOID:0000000010710048

Regarding Wiring Diagram information, refer to [EXL-79, "Wiring Diagram"](#).

### 1.CHECK DAYTIME LIGHT RELAY 1 FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not open:

Unit	Location	Fuse No.	Capacity
Daytime light relay 1	IPDM E/R	45	10A

#### Is the fuse open?

- YES >> Replace the blown fuse after repairing the affected circuit.  
NO >> GO TO 2.

### 2.CHECK IPDM E/R OUTPUT SIGNAL

1. Disconnect the daytime light relay 1 connector.
2. Turn the ignition switch ON.
3. Check the voltage between the daytime light relay 1 harness connector and ground.

(+)		(-)	Voltage
Connector	Terminal		
E103	2	Ground	Battery voltage
	5		

#### Is battery voltage present?

- YES >> GO TO 3.  
NO >> GO TO 5.

### 3.CHECK DAYTIME LIGHT RELAY 1 CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E122.
3. Check continuity between the IPDM E/R harness connector and the daytime light relay 1 harness connector.

IPDM E/R		Daytime light relay 1		Continuity
Connector	Terminal	Connector	Terminal	
E122	44	E103	1	Yes

4. Check continuity between the daytime light relay 1 harness connector and ground.

Connector	Terminal	-	Continuity
E103	1	Ground	No

#### Is the measurement value normal?

# DAYTIME LIGHT RELAY CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 4.  
NO >> Repair the harnesses or connectors.

### 4.CHECK DAYTIME LIGHT RELAY 1

Check daytime light relay 1. Refer to [EXL-47. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Check headlamp (HI) circuit. If OK, replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#). If NG, refer to [EXL-39. "Diagnosis Procedure"](#).  
NO >> Replace daytime light relay1.

### 5.CHECK DAYTIME LIGHT RELAY CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E119.
3. Check continuity between the IPDM E/R harness connector and the daytime light relay 1 harness connector.

IPDM E/R		Daytime light relay 1		Continuity
Connector	Terminal	Connector	Terminal	
E119	10	E103	2	Yes
			5	

Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#).  
NO >> Repair the harnesses or connectors.

## Component Inspection

INFOID:0000000010710049

### 1. CHECK DAYTIME LIGHT RELAY 1

1. Turn ignition switch OFF.
2. Remove daytime light relay 1.
3. Check the continuity between daytime light relay 1 terminals under the following conditions:

Terminals	Condition	Continuity
3 and 5	12V direct current supply between terminals 1 and 2	Yes
	No current supply	No
3 and 4	12V direct current supply between terminals 1 and 2	No
	No current supply	Yes

Is the inspection result normal?

- YES >> Inspection End.  
NO >> Replace daytime light relay 1.

# FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT FOG LAMP CIRCUIT

### Description

INFOID:0000000010710050

The IPDM E/R (intelligent power distribution module engine room) controls the front fog lamp relay based on inputs from the BCM via the CAN communication lines. When the front fog lamp relay is energized, power flows from the front fog lamp relay in the IPDM E/R to the front fog lamps.

### Component Function Check

INFOID:0000000010710051

#### 1.CHECK FRONT FOG LAMP OPERATION

##### ⊗WITHOUT CONSULT

1. Activate IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the front fog lamp is turned ON.

##### ⓅWITH CONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, Check that the front fog lamp is turned ON.

**FOG** : Front fog lamp ON  
**OFF** : Front fog lamp OFF

##### Is the front fog lamp turned ON?

- YES >> Front fog lamp circuit is normal.  
NO >> Refer to [EXL-48, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000010710052

Regarding Wiring Diagram information, refer to [EXL-94, "Wiring Diagram"](#).

#### 1.CHECK FRONT FOG LAMP FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open:

Unit	Location	Fuse No.	Capacity
Front fog lamp	IPDM E/R	56	20A

##### Is the fuse open?

- YES >> Replace the blown fuse after repairing the affected circuit.  
NO >> GO TO 2.

#### 2.CHECK FRONT FOG LAMP OUTPUT VOLTAGE


1. Disconnect the front fog lamp connector.
2. Turn the ignition switch ON.
3. Turn the front fog lamps ON.
4. Check the voltage between the fog lamp connector and ground.

(+)			(-)	Voltage
Connector		Terminal		
LH	E101	1	Ground	Battery voltage
RH	E102	1		

##### Is battery voltage present?

- YES >> GO TO 4.  
NO >> GO TO 3.

#### 3.CHECK FRONT FOG LAMP OPEN CIRCUIT

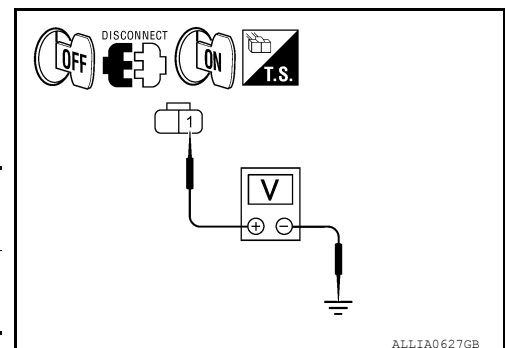



# FRONT FOG LAMP CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector E123.
3. Check continuity between the IPDM E/R harness connector (A) and the front fog lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
LH	E123	E101	1	Yes
RH			1	

### Does continuity exist?

- YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).
- NO >> Repair the harnesses or connectors.



## 4.CHECK FRONT FOG LAMP GROUND CIRCUIT

1. Disconnect the front fog lamp connector.
2. Check continuity between the front fog lamp harness connector terminal and ground.

Connector	Terminal	-	Continuity
LH	E101	2	Yes
RH	E102	2	

### Does continuity exist?

- YES >> Inspect the fog lamp bulb.
- NO >> Repair the harness.

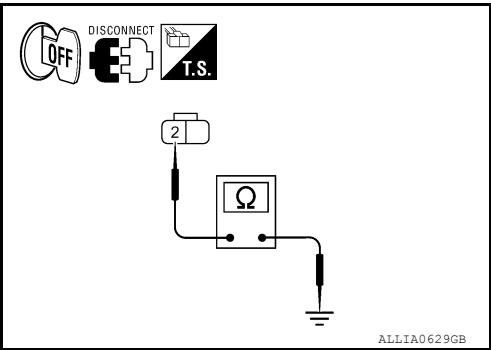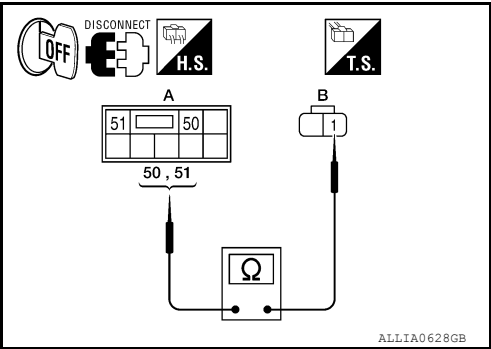

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

EXL

# PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## PARKING LAMP CIRCUIT

### Description

INFOID:0000000010710053

The IPDM E/R (intelligent power distribution module engine room) controls the tail lamp relay based on inputs from the BCM via the CAN communication lines. When the tail lamp relay is energized, power flows through fuse 36 and 37, located in the IPDM E/R. Power then flows to the front and rear combination lamps, license plate lamps.

### Component Function Check

INFOID:0000000010710054

#### 1. CHECK PARKING LAMP OPERATION

##### ⊗ WITHOUT CONSULT

1. Activate IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the parking lamp is turned ON.

##### Ⓟ WITH CONSULT

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the parking lamp is turned ON.

**TAIL : Parking lamp ON**  
**OFF : Parking lamp OFF**

Is the parking lamp turned ON?

- YES >> Parking lamp circuit is normal.  
NO >> Refer to [EXL-50, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000010710055

Regarding Wiring Diagram information, refer to [EXL-104, "Wiring Diagram"](#).

#### 1. CHECK PARKING LAMP FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not open:

Unit	Location	Fuse No.	Capacity
Parking lamps	IPDM E/R	36	10A
		37	10A

Is the fuse open?

- YES >> Replace the blown fuse after repairing the affected circuit.  
NO >> GO TO 2.

#### 2. CHECK TAIL LAMP RELAY OUTPUT (VOLTAGE)

1. Disconnect the front combination lamp connectors, front side marker lamp connectors, rear combination lamp connectors and license plate lamp connectors.
2. Turn the ignition switch ON.
3. Turn the parking lamps ON.
4. With the parking lamps ON, check voltage between the front combination lamp connector and ground.

(+)		Terminal	(-)	Voltage
Connector				
LH	E27	5	Ground	Battery voltage
RH	E111			

5. With the parking lamps ON, check voltage between the front side marker lamp connector and ground.

# PARKING LAMP CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

(+) Connector		Terminal	(-)	Voltage
LH	E17			
RH	E108	7	Ground	Battery voltage

6. With the parking lamps ON, check voltage between the rear combination lamp connector and ground.

(+) Connector		Terminal	(-)	Voltage
LH	C201			
RH	C202	3	Ground	Battery voltage

7. With the parking lamps ON, check voltage between the license plate lamp connector and ground

(+) Connector		Terminal	(-)	Voltage
LH	C203			
RH	C204	1	Ground	Battery voltage

Are voltage readings as specified?

YES >> GO TO 4.

NO >> GO TO 3.

### 3. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT (OPEN)

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector E121, E123 and E124.
- Check continuity between the IPDM E/R harness connector and the front combination lamp harness connector.

Connector		Terminal	Connector	Terminal	Continuity
LH	E121	28	E27	5	Yes
RH	E123	49	E111		

4. Check continuity between the IPDM E/R harness connector and the front side marker lamp harness connector.

Connector		Terminal	Connector	Terminal	Continuity
LH	E121	28	E17	7	Yes
RH	E123	49	E108		

5. Check continuity between the IPDM E/R harness connector and the rear combination lamp harness connector.

IPDM E/R			Rear combination lamp		Continuity
Connector		Terminal	Connector	Terminal	
LH	E124	57	C201	3	Yes
RH			C202		

6. Check continuity between the IPDM E/R harness connector and license plate lamp connector.

## PARKING LAMP CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

IPDM E/R			License plate lamp		Continuity
Connector		Terminal	Connector	Terminal	
LH	E124	57	C203	1	Yes
RH			C204		

#### Are continuity results as specified?

YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Repair the harnesses or connectors.

### 4. CHECK PARKING, LICENSE AND TAIL LAMP GROUND CIRCUITS

1. Check continuity between the front combination lamp harness connector and ground.

Connector		Terminal	-	Continuity
LH	E27	4	Ground	Yes
RH	E111			

2. Check continuity between the front side marker lamp harness connector and ground.

Connector		Terminal	-	Continuity
LH	E17	8	Ground	Yes
RH	E108			

3. Check continuity between the rear combination lamp harness connector and ground.

Connector		Terminal	-	Continuity
LH	C201	2	Ground	Yes
RH	C202			

4. Check continuity between the license plate lamp harness connector and ground.

Connector		Terminal	-	Continuity
LH	C203	2	Ground	Yes
RH	C204			

#### Are continuity results as specified?

YES >> Inspect the parking lamp bulb.

NO >> Repair the harness.

# TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## TURN SIGNAL LAMP CIRCUIT

### Description

INFOID:0000000010710056

The BCM monitors inputs from the combination switch (lighting and turn signal switch) to determine when to activate the turn signals. The BCM outputs voltage direction to the left and right turn signals during turn signal operation or both during hazard warning operation. The BCM sends a turn signal indicator request to the combination meter via the CAN communication lines.

The BCM performs the fast flasher operation (fail-safe) if any bulb or harness of the turn signal lamp circuit is open.

#### NOTE:

Turn signal lamp blinks at normal speed when using the hazard warning lamp.

### Component Function Check

INFOID:0000000010710057

#### 1.CHECK TURN SIGNAL LAMP

##### ① WITH CONSULT

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamp blinks.

**LH** : Turn signal lamp LH blinking

**RH** : Turn signal lamp RH blinking

**OFF** : The turn signal lamp OFF

Does the turn signal lamp blink?

YES >> Turn signal lamp circuit is normal.

NO >> Refer to [EXL-53, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000010710058

Regarding Wiring Diagram information, refer to [EXL-98, "Wiring Diagram"](#).

#### 1.CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb to be sure the proper bulb standard is in use and the bulb is not open.


Is the bulb OK?

YES >> GO TO 2.

NO >> Replace the bulb.

#### 2.CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector and the rear combination lamp connector.
3. Turn the ignition switch ON.
4. With turn signal switch operating, check the voltage between the front combination lamp harness connector and ground.

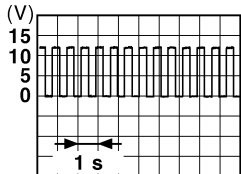(+)		Terminal	(-)	Voltage
Connector				
E27	LH	6	Ground	
E111	RH			


PKID0926E

PKID0926E

## TURN SIGNAL LAMP CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

5. With turn signal switch operating, check the voltage between the rear combination lamp harness connector and ground.

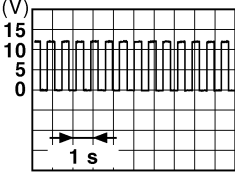(+) Connector		Terminal	(-)	Voltage
C207	LH			
C208	RH	4	Ground	

Is voltage reading as specified?

- YES >> GO TO 5.  
 NO >> GO TO 3.

### 3. CHECK TURN SIGNAL LAMP CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect BCM connector M20.
3. Check continuity between the BCM harness connector and the front combination lamps harness connector.

BCM		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
LH	M20	E27	6	Yes
RH		E111		

4. Check continuity between the BCM harness connector and the rear combination lamp harness connector.

BCM		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
LH	M20	C207	4	Yes
RH		C208	4	

Are continuity results as specified?

- YES >> GO TO 4.  
 NO >> Repair the harnesses or connectors.


### 4. CHECK TURN SIGNAL LAMP SHORT CIRCUIT

Check continuity between the BCM harness connector and ground.

Connector	Terminal	-	Continuity
LH	M20	60	No
RH		61	

Does continuity exist?

- YES >> Repair the harnesses or connectors.  
 NO >> Replace BCM. Refer to [BCS-51, "Removal and Installation"](#).

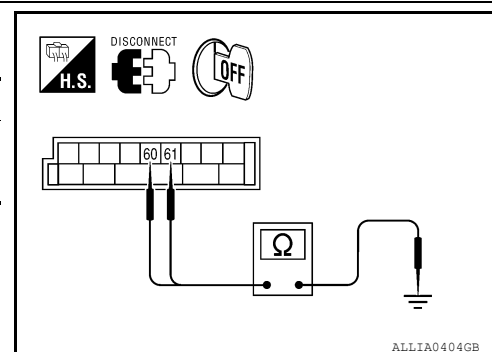

### 5. CHECK TURN SIGNAL LAMP GROUND CIRCUIT

1. Check continuity between the front combination lamp harness connector and ground.

## TURN SIGNAL LAMP CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

Connector		Terminal	-	Continuity
LH	E27	4	Ground	Yes
RH	E111			

2. Check continuity between the rear combination lamp harness connector and ground.

Connector		Terminal	-	Continuity
LH	C207	5	Ground	Yes
RH	C208			

#### Are continuity results as specified?

YES >> Replace the malfunctioning lamp.  
NO >> Repair the harnesses or connectors.

# OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

## OPTICAL SENSOR

### Description

INFOID:0000000010710059

The optical sensor converts the outside brightness (lux) to voltage and transmits the optical sensor signal to the BCM.

### Diagnosis Procedure

INFOID:0000000010710060

Regarding Wiring Diagram information, refer to [EXL-86, "Wiring Diagram"](#).

#### 1. CHECK OPTICAL SENSOR GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector M18 and optical sensor connector M14.
3. Check continuity between BCM harness connector and optical sensor harness connector.

BCM		Optical sensor		Continuity
Connector	Terminal	Connector	Terminal	
M18	18	M14	3	Yes

4. Check continuity between BCM harness connector and ground.

BCM		-	Continuity
Connector	Terminal		
M18	18	Ground	No

Are continuity results as specified?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### 2. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

1. Check continuity between BCM harness connector and optical sensor harness connector.

BCM		Optical sensor		Continuity
Connector	Terminal	Connector	Terminal	
M20	58	M14	4	Yes

2. Check continuity between BCM harness connector and ground.

BCM		—	Continuity
Connector	Terminal		
M20	58	Ground	No

Are the continuity results as specified?

YES >> Replace the optical sensor. Refer to [EXL-148, "Removal and Installation"](#).

NO >> Repair harness or connector.



## BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

### ECU DIAGNOSIS INFORMATION

#### BCM (BODY CONTROL MODULE)

##### Reference Value

INFOID:0000000011350447

##### NOTE:

The Signal Tech II Tool [– (J-50190)] can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Test remote keyless entry keyfob relative signal strength

##### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
ACC ON SW	Ignition switch OFF or ON	Off
	Ignition switch ACC	On
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AUTO LIGHT SW	Lighting switch OFF	Off
	Lighting switch AUTO	On
BRAKE SW	Brake pedal released	Off
	Brake pedal applied	On
BUCKLE SW	Seat belt buckle unfastened	Off
	Seat belt buckle fastened	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CARGO LAMP SW	Cargo lamp switch OFF	Off
	Cargo lamp switch ON	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the LOCK side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the UNLOCK side	On
DOOR SW-AS	Front door RH closed	Off
	Front door RH opened	On
DOOR SW-DR	Front door LH closed	Off
	Front door LH opened	On
DOOR SW-RL	Rear door LH closed	Off
	Rear door LH opened	On
DOOR SW-RR	Rear door RH closed	Off
	Rear door RH opened	On

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
FAN ON SIG	Blower motor fan switch OFF	Off
	Blower motor fan switch ON	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER INT	Front wiper switch OFF	Off
	Front wiper switch INT	On
FR WIPER STOP	Any position other than front wiper stop position	Off
	Front wiper stop position	On
HAZARD SW	When hazard switch is not pressed	Off
	When hazard switch is pressed	On
HEAD LAMP SW 1	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HEAD LAMP SW 2	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HI BEAM SW	High beam switch OFF	Off
	High beam switch HI	On
ID REGST FL1	ID registration of front left tire incomplete	YET
	ID registration of front left tire complete	DONE
ID REGST FR1	ID registration of front right tire incomplete	YET
	ID registration of front right tire complete	DONE
ID REGST RL1	ID registration of rear left tire incomplete	YET
	ID registration of rear left tire complete	DONE
ID REGST RR1	ID registration of rear right tire incomplete	YET
	ID registration of rear right tire complete	DONE
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
KEY CYL LK-SW	Door key cylinder LOCK position	Off
	Door key cylinder other than LOCK position	On
KEY CYL UN-SW	Door key cylinder UNLOCK position	Off
	Door key cylinder other than UNLOCK position	On
KEY ON SW	Mechanical key is removed from key cylinder	Off
	Mechanical key is inserted to key cylinder	On
KEYLESS LOCK	LOCK button of key fob is not pressed	Off
	LOCK button of key fob is pressed	On

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
KEYLESS PANIC	PANIC button of key fob is not pressed	Off
	PANIC button of key fob is pressed	On
KEYLESS UNLOCK	UNLOCK button of key fob is not pressed	Off
	UNLOCK button of key fob is pressed	On
LIGHT SW 1ST	Lighting switch OFF	Off
	Lighting switch 1st	On
OIL PRESS SW	<ul style="list-style-type: none"> <li>Ignition switch OFF or ACC</li> <li>Engine running</li> </ul>	Off
	Ignition switch ON	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5V
	Dark outside of the vehicle	Close to 0V
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
VEHICLE SPEED	While driving	Equivalent to speedometer reading
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off
	Low tire pressure warning lamp in combination meter ON	On

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O


P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal Layout

INFOID:0000000011350448

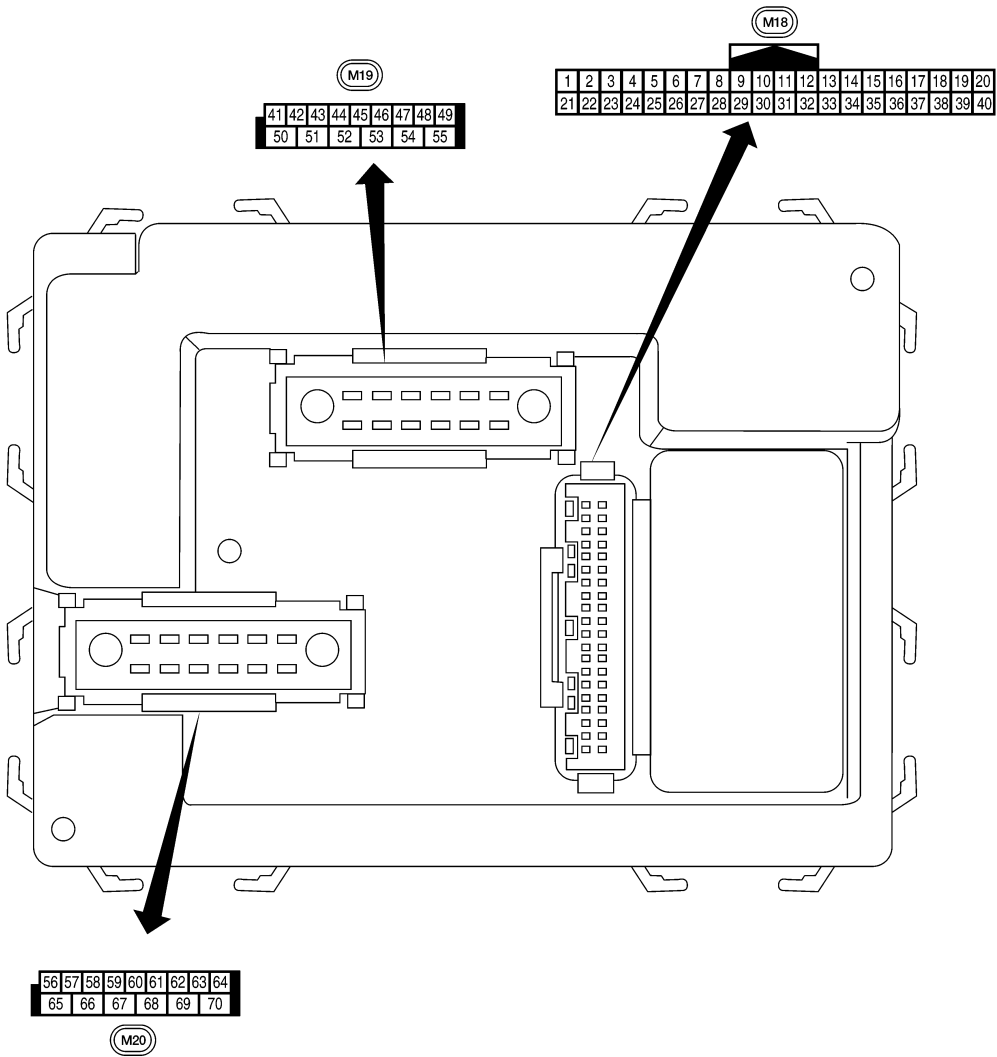


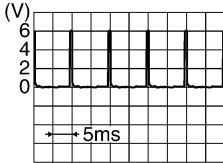

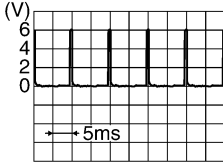
Physical Values

AWMIA15982Z

INFOID:0000000011350449

# BCM (BODY CONTROL MODULE)




## < ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Item	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	P	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
3	SB	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
4	V	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
5	L	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
6	R	Combination switch input 1				
7	GR	Front door lock assembly LH (key cylinder switch) unlock	Input	OFF	ON (open, 2nd turn)	Momentary 1.5V
					OFF (closed)	0V
8	SB	Front door lock assembly LH (key cylinder switch) lock	Input	OFF	On (open)	Momentary 1.5V
					OFF (closed)	0V
9	LG	Brake sw	Input	OFF	OFF (brake pedal is not depressed)	0V
					ON (brake pedal is depressed)	Battery voltage
11	G/B	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	LG	Front door switch RH (All)	Input	OFF	ON (open)	0V
		Rear door switch upper RH (King Cab)			OFF (closed)	Battery voltage
		Rear door switch lower RH (King Cab)				

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P



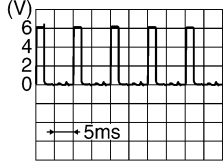
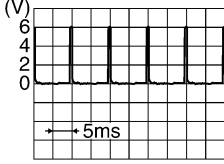
# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

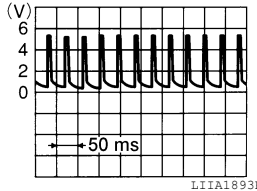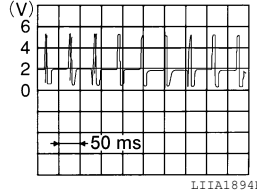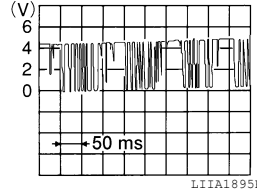Terminal	Wire color	Item	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
13	L	Rear door switch RH (Crew Cab)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	W	Tire pressure warning check connector	Input	OFF	—	5V
18	BR	Remote keyless entry receiver and optical sensor (Ground)	Output	OFF	—	0V
19	V	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	
20	G	Remote keyless entry receiver signal (Signal)	Input	OFF	Stand-by (keyfob buttons released)	
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	
21	GR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move.
23	G	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move.
27	W	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	G	Hazard switch	Input	OFF	ON	0V
					OFF	5V
31	GR	Cargo lamp switch	Input	OFF	ON	0V
					OFF	Battery voltage

# BCM (BODY CONTROL MODULE)





## < ECU DIAGNOSIS INFORMATION >

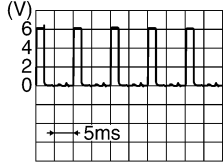Terminal	Wire color	Item	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	BG	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
33	GR	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
34	G	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E
35	BR	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E
36	LG	Combination switch output 1				
37	B	Key switch	Input	OFF	Key inserted	Battery voltage
					Key removed	0V
38	W/R	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN high	—	—	—	—
40	P	CAN low	—	—	—	—
41	Y	Rear window defogger switch	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
45	V	Lock switch	Input	OFF	ON (lock)	0V
					OFF	Battery voltage
46	LG	Unlock switch	Input	OFF	ON (unlock)	0V
					OFF	Battery voltage
47	GR	Front door switch LH (All)	Input	OFF	ON (open)	0V
		Rear door switch upper LH (King Cab)			OFF (closed)	Battery voltage
		Rear door switch lower LH (King Cab)				

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

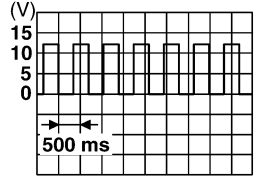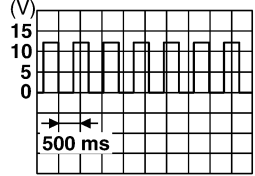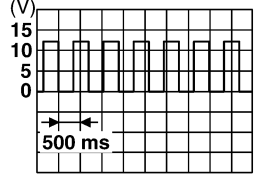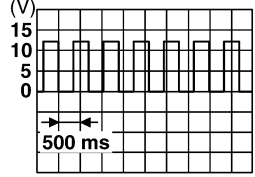Terminal	Wire color	Item	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
48	P	Rear door switch LH (Crew Cab)	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
50	P	Cargo lamp	Output	OFF	Any door open (ON)	0V
					All doors closed (OFF)	Battery voltage
51	BG	Trailer turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
52	LG	Trailer turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
56	R/Y	Battery saver output	Output	OFF	10 minutes after ignition switch is turned OFF	0V
				ON	—	Battery voltage
57	R/Y	Battery power supply	Input	—	—	Battery voltage
58	W	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more
					When optical sensor is not illuminated	0.6V or less
59	GR	Front door lock assembly LH (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
60	LG	Turn signal (left)	Output	ON	Turn left ON	 SKIA3009J
61	G	Turn signal (right)	Output	ON	Turn right ON	 SKIA3009J
63	BR	Interior room/map lamp	Output	OFF	Any door switch ON (open)	0V
					Any door switch OFF (closed)	Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
					ON (lock)	Battery voltage



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Item	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
66	L	Front door lock actuator RH, rear door lock actuators LH/RH (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
67	B	Ground	Input	ON	—	0V
68 <sup>1</sup>	O	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
68 <sup>2</sup>	SB	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
69	P	Power window power supply (BAT)	Output	OFF	—	Battery voltage
70	W	Battery power supply	Input	OFF	—	Battery voltage

1: King cab

2: Crew cab

## Fail Safe

INFOID:0000000011350450

### Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

## DTC Inspection Priority Chart

INFOID:0000000011350451

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> <li>U1000: CAN COMM CIRCUIT</li> </ul>
2	<ul style="list-style-type: none"> <li>B2190: NATS ANTENNA AMP</li> <li>B2191: DIFFERENCE OF KEY</li> <li>B2192: ID DISCORD BCM-ECM</li> <li>B2193: CHAIN OF BCM-ECM</li> </ul>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Priority	DTC
3	<ul style="list-style-type: none"> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• C1735: IGNITION SIGNAL</li> </ul>
4	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1712: [CHECKSUM ERR] FL</li> <li>• C1713: [CHECKSUM ERR] FR</li> <li>• C1714: [CHECKSUM ERR] RR</li> <li>• C1715: [CHECKSUM ERR] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1720: [CODE ERR] FL</li> <li>• C1721: [CODE ERR] FR</li> <li>• C1722: [CODE ERR] RR</li> <li>• C1723: [CODE ERR] RL</li> <li>• C1724: [BATT VOLT LOW] FL</li> <li>• C1725: [BATT VOLT LOW] FR</li> <li>• C1726: [BATT VOLT LOW] RR</li> <li>• C1727: [BATT VOLT LOW] RL</li> </ul>

## DTC Index

INFOID:0000000011350452

### NOTE:

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Low tire pressure warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	—	—	<a href="#">BCS-27</a>
B2190: NATS ANTENA AMP	—	—	<a href="#">SEC-18</a>
B2191: DIFFERENCE OF KEY	—	—	<a href="#">SEC-21</a>
B2192: ID DISCORD BCM-ECM	—	—	<a href="#">SEC-22</a>
B2193: CHAIN OF BCM-ECM	—	—	<a href="#">SEC-24</a>
C1708: [NO DATA] FL	—	X	<a href="#">WT-15</a>
C1709: [NO DATA] FR	—	X	<a href="#">WT-15</a>
C1710: [NO DATA] RR	—	X	<a href="#">WT-15</a>
C1711: [NO DATA] RL	—	X	<a href="#">WT-15</a>
C1712: [CHECKSUM ERR] FL	—	X	<a href="#">WT-17</a>
C1713: [CHECKSUM ERR] FR	—	X	<a href="#">WT-17</a>
C1714: [CHECKSUM ERR] RR	—	X	<a href="#">WT-17</a>
C1715: [CHECKSUM ERR] RL	—	X	<a href="#">WT-17</a>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Low tire pressure warning lamp ON	Reference page
C1716: [PRESSDATA ERR] FL	—	X	<a href="#">WT-19</a>
C1717: [PRESSDATA ERR] FR	—	X	<a href="#">WT-19</a>
C1718: [PRESSDATA ERR] RR	—	X	<a href="#">WT-19</a>
C1719: [PRESSDATA ERR] RL	—	X	<a href="#">WT-19</a>
C1720: [CODE ERR] FL	—	X	<a href="#">WT-17</a>
C1721: [CODE ERR] FR	—	X	<a href="#">WT-17</a>
C1722: [CODE ERR] RR	—	X	<a href="#">WT-17</a>
C1723: [CODE ERR] RL	—	X	<a href="#">WT-17</a>
C1724: [BATT VOLT LOW] FL	—	X	<a href="#">WT-17</a>
C1725: [BATT VOLT LOW] FR	—	X	<a href="#">WT-17</a>
C1726: [BATT VOLT LOW] RR	—	X	<a href="#">WT-17</a>
C1727: [BATT VOLT LOW] RL	—	X	<a href="#">WT-17</a>
C1729: VHCL SPEED SIG ERR	—	X	<a href="#">WT-21</a>
C1735: IGNITION SIGNAL	—	X	<a href="#">WT-22</a>

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:0000000011350475

VALUES ON THE DIAGNOSIS TOOL


Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1, 2, 3, 4
A/C COMP REQ	A/C switch OFF		Off
	A/C switch ON		On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	HI
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
ST RLY REQ	Ignition switch OFF or ACC		Off
	Ignition switch START		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
RR DEF REQ	Rear defogger switch OFF		Off
	Rear defogger switch ON		On
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
DTRL REQ	Daytime light system requested OFF with CONSULT.		Off
	Daytime light system requested ON with CONSULT.		On
THFT HRN REQ	Not operated		Off
	<ul style="list-style-type: none"> <li>• Panic alarm is activated</li> <li>• Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li> </ul>		On
HORN CHIRP	Not operated		Off
	Door locking with keyfob (horn chirp mode)		On

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

## Terminal Layout

INFOID:0000000011350476

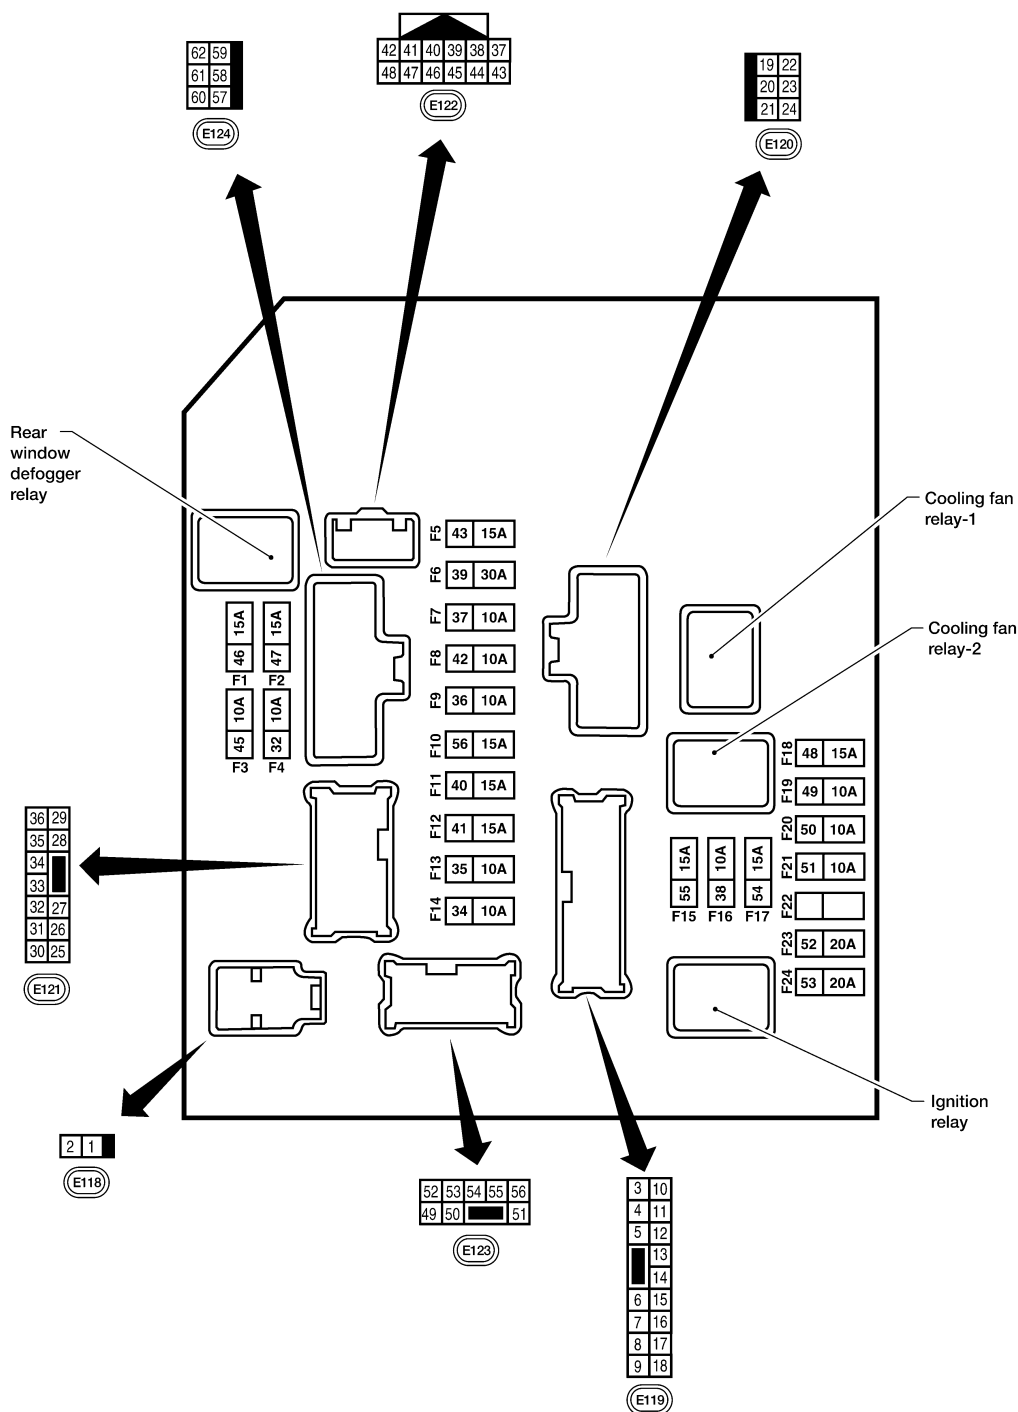

Physical Values

PHYSICAL VALUES

AAMIA0386GB

INFOID:0000000011350477




# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
1	W	Battery power supply	Input	OFF	—	Battery voltage
2	R	Battery power supply	Input	OFF	—	Battery voltage
3	G	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
4	P <sup>1</sup> R <sup>2</sup>	ECM relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
6	V	Throttle control motor relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
7	BR	ECM relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
8	W/R	Fuse 54-Air fuel ratio sensor 1, Heated oxygen sensor 2	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
10	R/B	Fuse 45-Daytime light relay 1	Output	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
11	Y	A/C compressor	Output	ON or START	A/C switch ON or defrost A/C switch	Battery voltage
					A/C switch OFF or defrost A/C switch	0V
12	W/G	Ignition switch supplied power	Input	—	OFF or ACC	0V
					ON or START	Battery voltage
13	R	Fuel pump relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
14	W/G	Fuse 49- Clutch interlock switch, clutch interlock cancel switch, clutch interlock cancel relay 2, TCM	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
15	W/R	Fuse 50-ABS actuator, steering angle sensor	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
16	W/G	Fuse 51-Backup lamp switch, back up lamp relay	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
17	W/G	Fuse 55-Fuel injectors	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
19	W	Starter motor	Output	START	—	Battery voltage
20	BR	Cooling fan motor (low)	Output	ON or START	—	Battery voltage
21	GR	Ignition switch supplied power	Input	—	OFF or ACC	0V
					START	Battery voltage
22	G	Battery power supply	Output	OFF	—	Battery voltage
23	LG	Door mirror defogger output signal	Output	—	When rear defogger switch is ON	Battery voltage
					When raker defogger switch is OFF	0V

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

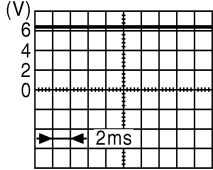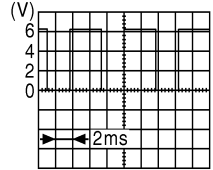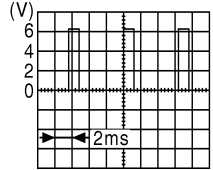Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
24	P	Cooling fan motor (high)	Output	—	Conditions correct for cooling fan operation	Battery voltage
					Conditions not correct for cooling fan operation	0V
27	W/G	Fuse 38-Back up lamp relay, back up lamp switch	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
28	R	LH front parking and front side marker lamp	Output	OFF	Lighting switch 1st position OFF	0V
					ON	Battery voltage
29	G	Trailer tow relay	Output	ON	Lighting switch 1st position OFF	0V
					ON	Battery voltage
30	R/B	Fuse 53-ECM, NATS antenna amp.	Output	—	Ignition switch ON or START	Battery voltage
					Ignition switch OFF or ACC	0V
32	GR	Wiper low speed signal	Output	ON or START	Wiper switch OFF	Battery voltage
					LO or INT	0V
35	L	Wiper high speed signal	Output	ON or START	Wiper switch OFF, LO, INT	Battery voltage
					HI	0V
37	Y	Power generation command signal	Output	—	Ignition switch ON	 <p>JPMIA0001GB</p> <p>6.3 V</p>
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 <p>JPMIA0002GB</p> <p>3.8 V</p>
					40% is set on "Active test," "ALTERNATOR DUTY" of "ENGINE"	 <p>JPMIA0003GB</p> <p>1.4 V</p>
38	B	Ground	Input	—	—	0V
39	L	CAN-H	—	ON	—	—
40	P	CAN-L	—	ON	—	—

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
42	GR	Oil pressure switch	Input	—	Engine running	Battery voltage
					Engine stopped	0V
43	G	Wiper auto stop signal	Input	ON or START	Wiper switch      OFF, LO, INT	Battery voltage
44	R	Daytime light relay control (Canada only)	Input	ON	Daytime light system active	0V
					Daytime light system inactive	Battery voltage
45	LG	Horn relay control	Input	ON	When door locks are operated using keyfob (OFF → ON) <sup>3</sup>	Battery voltage → 0V
46	V	Fuel pump relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
47	W <sup>1</sup> BG <sup>2</sup>	Throttle control motor relay control	Input	—	Ignition switch ON or START	0V
					Ignition switch OFF or ACC	Battery voltage
48	R	Starter relay (inhibit switch)	Input	ON or START	Selector lever in "P" or "N"	0V
					Selector lever any other position	Battery voltage
49	GR	Front RH parking and front side marker lamp	Output	OFF	Lighting switch 1st position      OFF	0V
					Lighting switch 1st position      ON	Battery voltage
50	W	Front fog lamp (LH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch      OFF	0V
					Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch      ON	Battery voltage
51	V	Front fog lamp (RH)	Output	ON or START	Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch      OFF	0V
					Lighting switch must be in the 2nd position (LOW beam is ON) and the front fog lamp switch      ON	Battery voltage
52	P	LH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
54	R	RH low beam head-lamp	Output	—	Lighting switch in 2nd position	Battery voltage
55	G	LH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
56	L	RH high beam head-lamp	Output	—	Lighting switch in 2nd position and placed in HIGH or PASS position	Battery voltage
57	GR	Parking, license, and tail lamp	Output	ON	Lighting switch 1st position      OFF	0V
					Lighting switch 1st position      ON	Battery voltage
59	B	Ground	Input	—	—	0V



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value (Approx.)
				Ignition switch	Operation or condition	
60	GR	Rear window defogger relay	Output	ON or START	Rear defogger switch ON	Battery voltage
					Rear defogger switch OFF	0V
61	R/B	Fuse 32-Trailer tow relay 1	Output	OFF	—	Battery voltage

1: For Mexico

2: Except for Mexico

3: When horn reminder is ON

## Fail Safe

INFOID:0000000011350478

### CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

#### If No CAN Communication Is Available With ECM

Control part	Fail-safe in operation
Cooling fan (if equipped)	<ul style="list-style-type: none"><li>• Turns ON the cooling fan relay when the ignition switch is turned ON</li><li>• Turns OFF the cooling fan relay when the ignition switch is turned OFF</li></ul>

#### If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"><li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li><li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li><li>• Headlamp (LH/RH) high relays OFF</li></ul>
<ul style="list-style-type: none"><li>• Parking lamps</li><li>• License plate lamps</li><li>• Tail lamps</li></ul>	<ul style="list-style-type: none"><li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li><li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li></ul>
Front wiper	<ul style="list-style-type: none"><li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li><li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li></ul>
Rear window defogger	Rear window defogger relay OFF
A/C compressor	A/C relay OFF
Front fog lamps (if equipped)	Front fog lamp relay OFF

### IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Ignition switch	Ignition relay	Tail lamp relay
ON	ON	—
OFF	OFF	—

#### NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

### FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

#### NOTE:

This operation status can be confirmed on the IPDM E/R “DATA MONITOR” that displays “Block” for the item “WIP PROT” while the wiper is stopped.

### STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

### DTC Index

INFOID:0000000011350479

CONSULT display	Fail-safe	TIME <sup>NOTE</sup>		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	<a href="#">PCS-13</a>

#### NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ··· 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

# HEADLAMP


< WIRING DIAGRAM >

## WIRING DIAGRAM

### HEADLAMP

#### Wiring Diagram

INFOID:0000000010710072

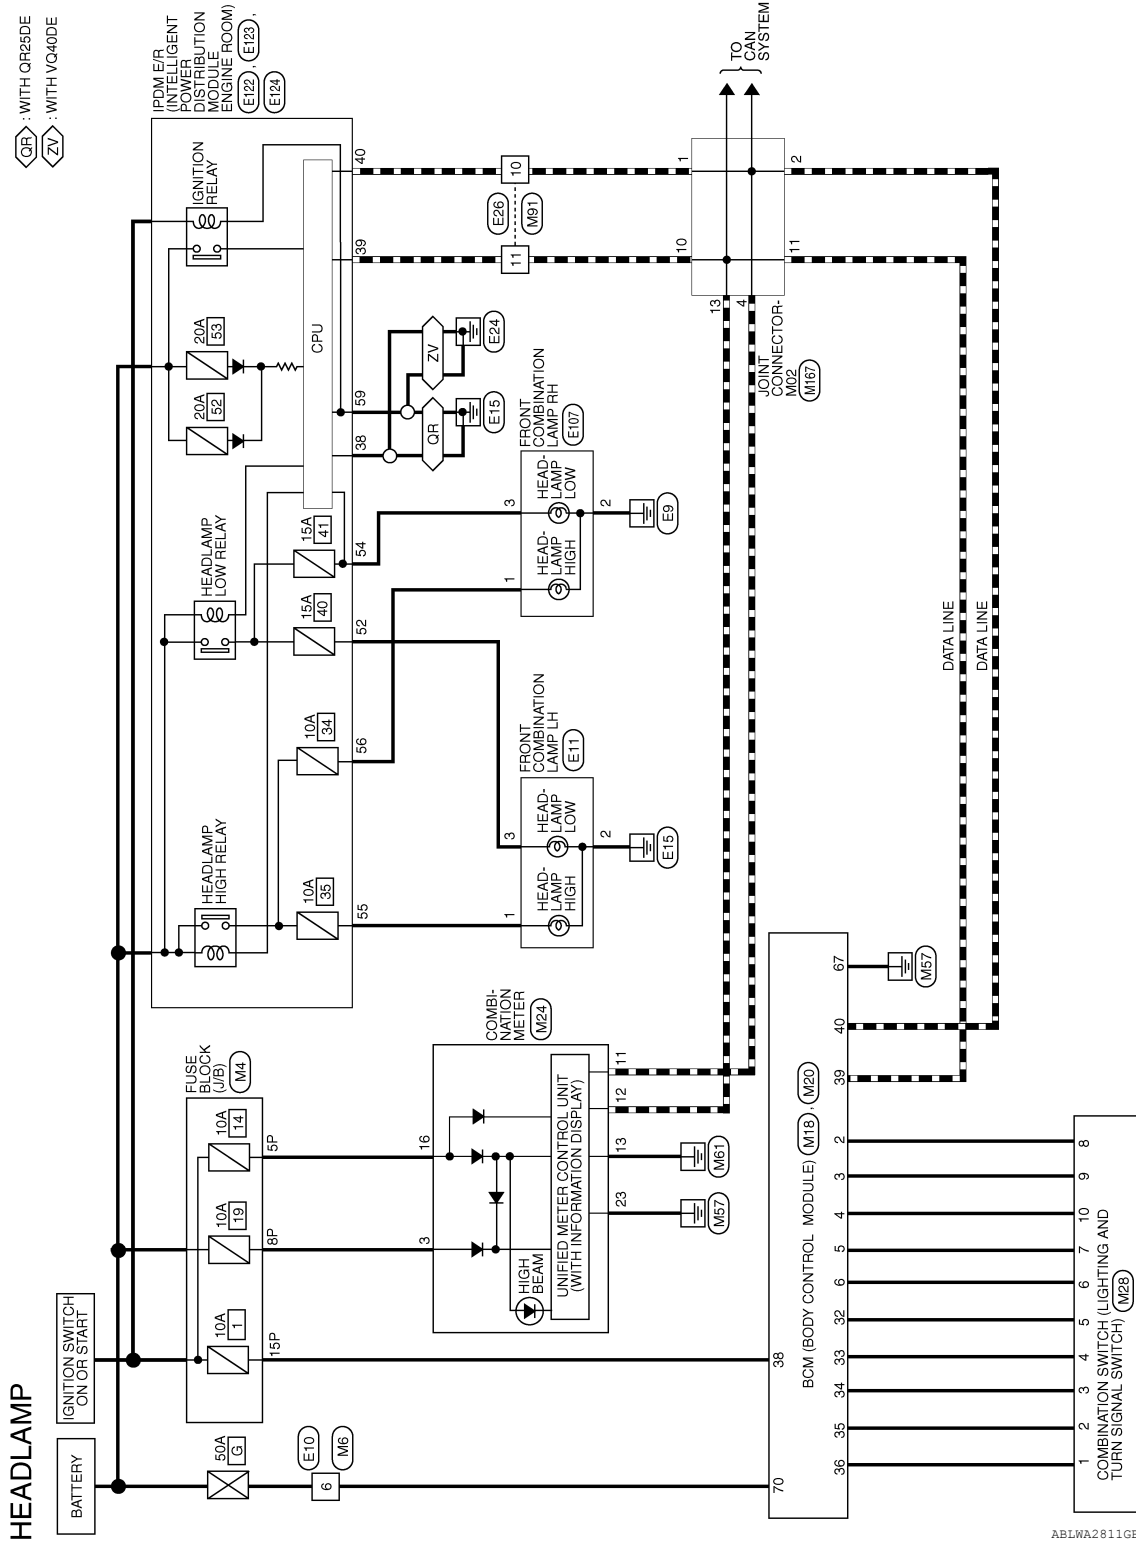

ABLWA2811GB

# HEADLAMP

< WIRING DIAGRAM >

## HEADLAMP CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P	6P	5P	4P	3P	2P	1P		
16P	15P	14P	13P	12P	11P	10P	9P	8P

Terminal No.	Color of Wire	Signal Name
5P	W/G	-
8P	R/Y	-
15P	W/R	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



3	2	1
6	5	4

Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	P	INPUT 5
3	SB	INPUT 4
4	V	INPUT 3

Terminal No.	Color of Wire	Signal Name
5	L	INPUT 2
6	R	INPUT 1
32	BG	OUTPUT 5
33	GR	OUTPUT 4
34	G	OUTPUT 3
35	BR	OUTPUT 2
36	LG	OUTPUT 1
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W	BAT (F/L)

# HEADLAMP

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
4	GR	-
5	BG	-
6	R	-
7	L	-
8	P	-
9	SB	-
10	V	-

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

12	13	10	9	8	7
14	11	1	2	3	4
					5
					6



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	BR	-
3	G	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Terminal No.	Color of Wire	Signal Name
3	R/Y	BATTERY
11	P	CAN-L
12	L	CAN-H
13	GR	GROUND
16	W/G	RUN START
23	B	POWER GND

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3
4	5	6



Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	M167
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE

9	8	7	6	5	4	3	2	1
20	19	18	17	16	15	14	13	12
								11
								10



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-
4	P	-
10	L	-
11	L	-
13	L	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

7	6	5	4	3	2	1
16	15	14	13	12	11	10
					9	8



Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-


ABLIA5604GB

A B C D E F G H I J K EXL M N O P

# HEADLAMP


## < WIRING DIAGRAM >

Connector No.	E11
Connector Name	FRONT COMBINATION LAMP LH (WITHOUT DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-
3	P	-

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

Connector No.	E107
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-
3	R	-

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
52	P	H/LAMP LO LH
54	R	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L	H/LAMP HI RH

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

ABLIA3317GB


# DAYTIME LIGHT SYSTEM

< WIRING DIAGRAM >

## DAYTIME LIGHT SYSTEM

### Wiring Diagram


INFOID:000000010710073

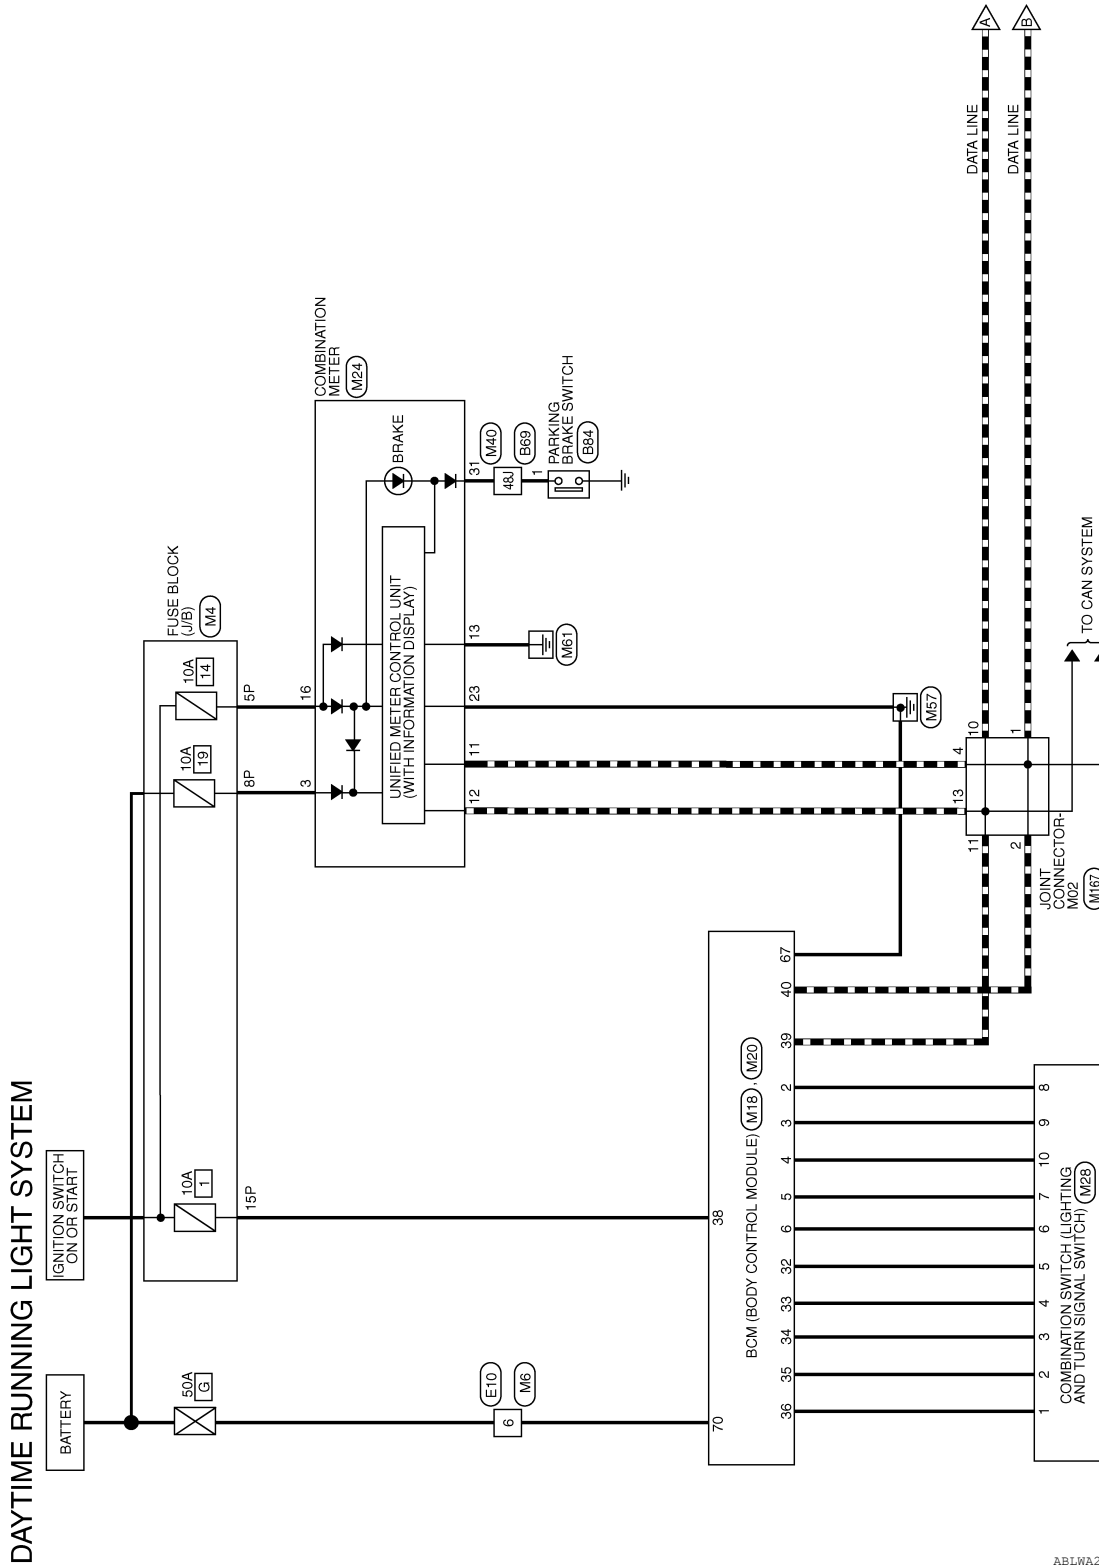

# DAYTIME LIGHT SYSTEM

< WIRING DIAGRAM >

QR : WITH QR25DE  
ZV : WITH VQ40DE

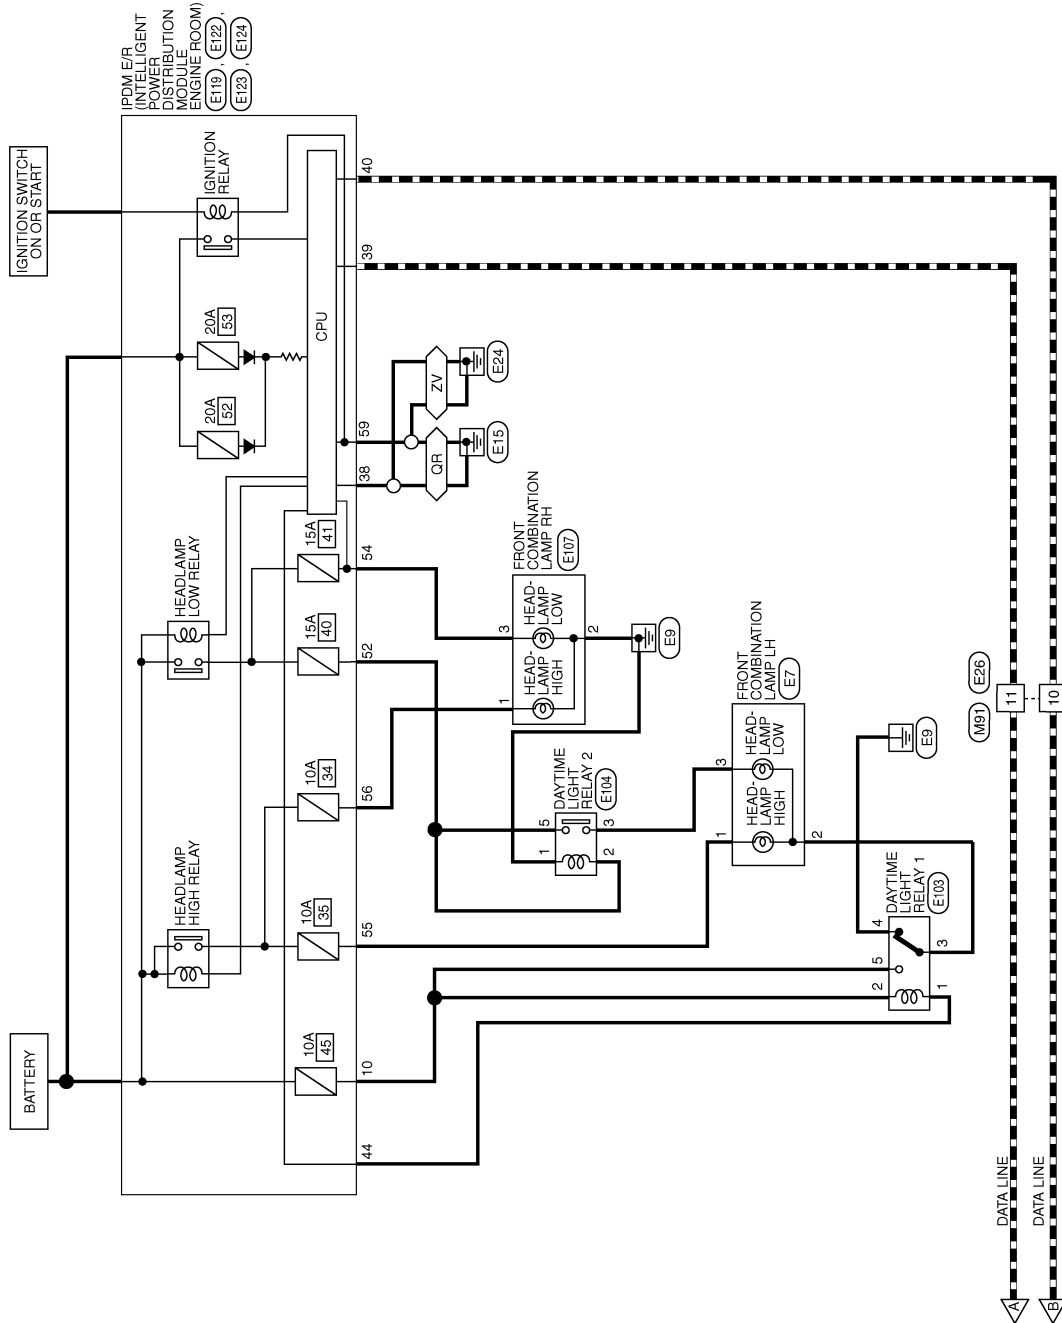

ABLWA2813GB



# DAYTIME LIGHT SYSTEM

< WIRING DIAGRAM >

## DAYTIME RUNNING LIGHT SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P	6P	5P	4P	<div></div>	3P	2P	1P	
16P	15P	14P	13P	12P	11P	10P	9P	8P



3	2	1
6	5	4

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
5P	W/G	-
8P	R/Y	-
15P	W/R	-

Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	P	INPUT 5
3	SB	INPUT 4
4	V	INPUT 3

Terminal No.	Color of Wire	Signal Name
5	L	INPUT 2
6	R	INPUT 1
32	BG	OUTPUT 5
33	GR	OUTPUT 4
34	G	OUTPUT 3
35	BR	OUTPUT 2
36	LG	OUTPUT 1
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W	BAT (F/L)

ABLIA6844GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# DAYTIME LIGHT SYSTEM

## < WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Terminal No.	Color of Wire	Signal Name
3	R/Y	BATTERY
11	P	CAN-L
12	L	CAN-H
13	GR	GROUND
16	W/G	RUN START
23	B	POWER GND
31	G	PARK BRAKE SW


Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



12	13	10	9	8	7
14	11	1	2	3	4
				5	6

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	BR	-
3	G	-
4	GR	-
5	BG	-
6	R	-
7	L	-
8	P	-
9	SB	-
10	V	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

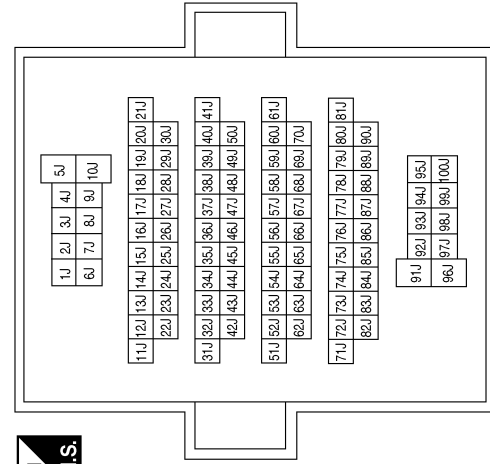

Terminal No.	Color of Wire	Signal Name
48J	G	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



7	6	5	4	3	2	1
16	15	14	13	12	11	10
				9	8	

Connector No.	M167
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



9	8	7	6	5	4	3	2	1
20	19	18	17	16	15	14	13	12
								11
								10

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-
4	P	-
10	L	-
11	L	-
13	L	-

Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

ABLIA6854GB

# DAYTIME LIGHT SYSTEM

< WIRING DIAGRAM >

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4		5	6	7	
8	9	10	11	12	13	14	15	16



Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3
4	5	6



Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	E7
Connector Name	FRONT COMBINATION LAMP LH (WITH DAYTIME LIGHT SYSTEM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-
3	SB	-

Connector No.	E107
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-
3	R	-

Connector No.	E104
Connector Name	DAYTIME LIGHT RELAY 2
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	G	-
3	SB	-
5	P	-

Connector No.	E103
Connector Name	DAYTIME LIGHT RELAY 1
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	-
2	R/B	-
3	B	-
4	GR	-
5	R/B	-

ABLIA6855GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# DAYTIME LIGHT SYSTEM

## < WIRING DIAGRAM >

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

51	50	49
56	55	54
53	52	



Terminal No.	Color of Wire	Signal Name
52	P	H/LAMP LO LH
54	R	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L	H/LAMP HI RH

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

42	41	40	39	38	37
48	47	46	45	44	43



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
44	R	DTRL RLY CONT

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE


9	8	7	6	5	4	3
18	17	16	15	14	13	12
11	10					



Terminal No.	Color of Wire	Signal Name
10	R/B	DTRL RLY SUPPLY

Terminal No.	48J
Color of Wire	G
Signal Name	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

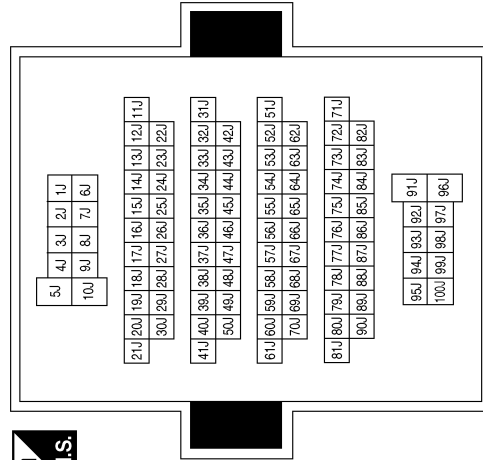

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

59	58	57
62	61	60



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

ABLIA6856GB

DAYTIME LIGHT SYSTEM

< WIRING DIAGRAM >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

Connector No.	B84
Connector Name	PARKING BRAKE SWITCH
Connector Color	BLACK



Terminal No.	1	Color of Wire	G	Signal Name	-
--------------	---	---------------	---	-------------	---

ABLIA6857GB


# AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

## AUTO LIGHT SYSTEM

### Wiring Diagram

INFOID:000000010710074

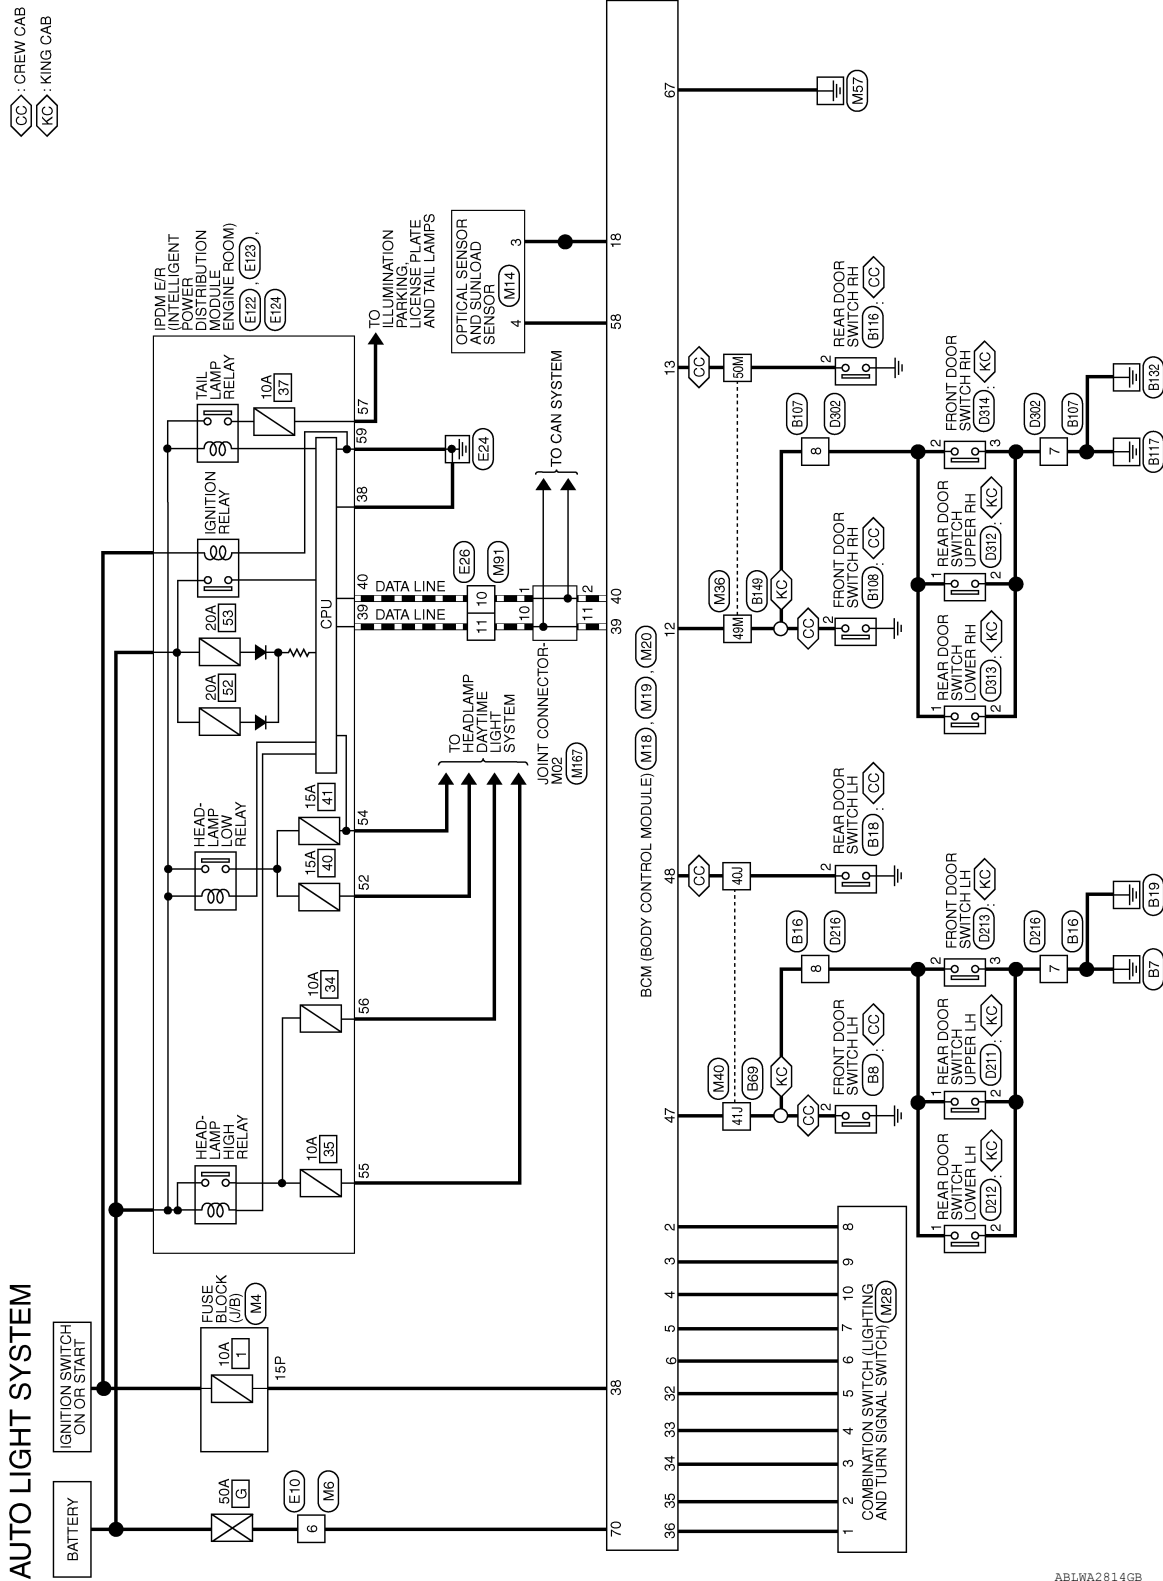

# AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

## AUTO LIGHT SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

7P 6P 9P 4P 1P 16P 13P 14P 13P 12P 11P 10P 9P 8P
---



Terminal No.	Color of Wire	Signal Name
15P	W/R	—

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

3 2 1 6 5 4
----------------



Terminal No.	Color of Wire	Signal Name
6	W	—

Connector No.	M14
Connector Name	OPTICAL SENSOR AND SUNLOAD SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	P	—
4	W	—

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40
---



Terminal No.	Color of Wire	Signal Name
2	P	INPUT 5
3	SB	INPUT 4
4	V	INPUT 3

Terminal No.	Color of Wire	Signal Name
5	L	INPUT 2
6	R	INPUT 1
12	LG	DOOR SW (AS)
13	L	DOOR SW (RR)
18	BR	KEYLESS & AUTO LIGHT SENSOR GND
32	BG	OUTPUT 5
33	GR	OUTPUT 4
34	G	OUTPUT 3
35	BR	OUTPUT 2
36	LG	OUTPUT 1
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

41 42 43 44 45 46 47 48 49 50 51 52 53 54 55
---



Terminal No.	Color of Wire	Signal Name
47	GR	DOOR SW (DR)
48	P	DOOR SW (RL)


ABLIA5606GB

A B C D E F G H I J K EXL M N O P

AUTO LIGHT SYSTEM


< WIRING DIAGRAM >

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

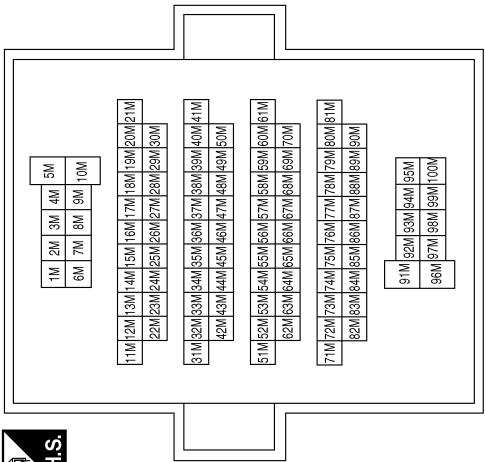

Terminal No.	Color of Wire	Signal Name
49M	LG	-
50M	L	-

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	BR	-
3	G	-
4	GR	-
5	BG	-
6	R	-
7	L	-
8	P	-
9	SB	-
10	V	-

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
58	W	AUTO LIGHT SENSOR INPUT 2
67	B	GND (POWER)
70	W	BAT (F/L)

ABLIA6845GB



AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE




7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8	7	6	5	4	3

Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

Terminal No.	Color of Wire	Signal Name
40J	P	—
41J	GR	—

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

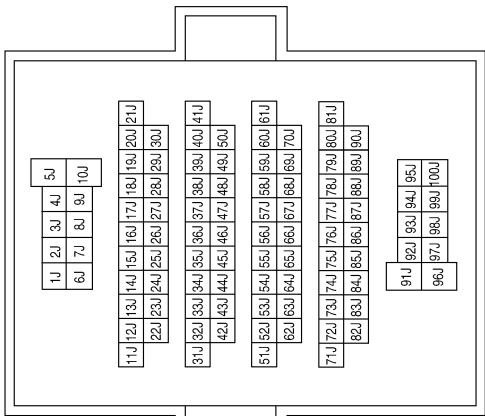

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6
---	---	---	---	---	---

Connector No.	M167
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



9	8	7	6	5	4	3	2	1
20	19	18	17	16	15	14	13	12
11	10	9	8	7	6	5	4	3

Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

Terminal No.	Color of Wire	Signal Name
6	W	—

Terminal No.	Color of Wire	Signal Name
1	P	—
2	P	—
10	L	—
11	L	—

ABLIA5608GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

EXL

# AUTO LIGHT SYSTEM

## < WIRING DIAGRAM >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



59	58	57
62	61	60

Terminal No.	Color of Wire	Signal Name
57	GR	TAIL LAMP
59	B	GND (POWER)

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



51	50	49
56	55	54
53	52	

Terminal No.	Color of Wire	Signal Name
52	P	H/LAMP LO LH
54	R	H/LAMP LO RH
55	G	H/LAMP HI LH
56	L	H/LAMP HI RH

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



42	41	40	39	38	37
48	47	46	45	44	43

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	B18
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



1	2	3
---	---	---

Terminal No.	Color of Wire	Signal Name
2	P	-

Connector No.	B16
Connector Name	WIRE TO WIRE
Connector Color	WHITE



4	3	2	1
8	7	6	5

Terminal No.	Color of Wire	Signal Name
7	B	-
8	GR	-

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH (CREW CAB)
Connector Color	WHITE



1	2	3
---	---	---


Terminal No.	Color of Wire	Signal Name
2	GR	-

ABLIA5609GB

AUTO LIGHT SYSTEM

< WIRING DIAGRAM >


Connector No.	B107
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	B	-
8	LG	-

Terminal No.	Color of Wire	Signal Name
40J	P	-
41J	GR	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

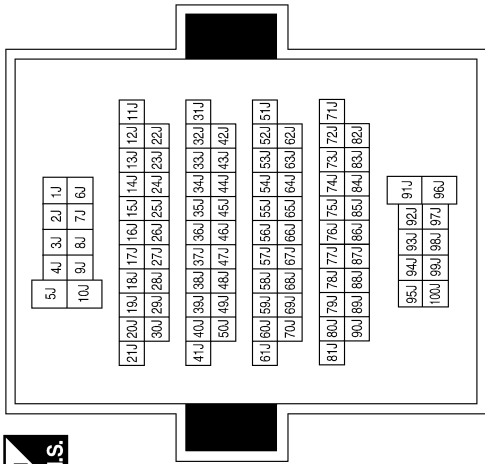


Connector No.	B116
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	L	-

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH (CREW CAB)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	LG	-

ABLIA5610GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

EXL

# AUTO LIGHT SYSTEM

## < WIRING DIAGRAM >


Connector No.	D211
Connector Name	REAR DOOR SWITCH UPPER LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-

Terminal No.	Color of Wire	Signal Name
49M	LG	-
50M	L	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

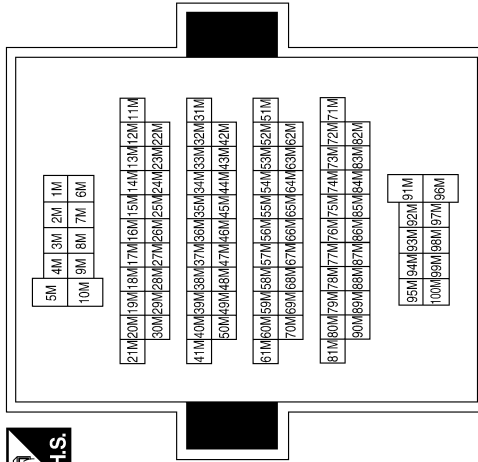


Connector No.	D216
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	B	-
8	LG	-

Connector No.	D213
Connector Name	FRONT DOOR SWITCH LH (KING CAB)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	LG	-
3	B	-

Connector No.	D212
Connector Name	REAR DOOR SWITCH LOWER LH
Connector Color	BLACK





Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-

ABLIA5611GB

AUTO LIGHT SYSTEM



< WIRING DIAGRAM >

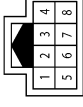Connector No.	D302
Connector Name	WIRE TO WIRE
Connector Color	WHITE





Terminal No.	Color of Wire	Signal Name
7	B	-
8	LG	-

Connector No.	D312
Connector Name	REAR DOOR SWITCH UPPER RH
Connector Color	BLACK





Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-

Connector No.	D313
Connector Name	REAR DOOR SWITCH LOWER RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-

Connector No.	D314
Connector Name	FRONT DOOR SWITCH RH (KING CAB)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	LG	-
3	B	-

ABLIA5673GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

EXL



# FRONT FOG LAMP

< WIRING DIAGRAM >

## FRONT FOG LAMP CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P	6P	5P	4P	<div></div>	3P	2P	1P	
16P	15P	14P	13P	12P	11P	10P	9P	8P



3	2	1
6	5	4

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	15P
Color of Wire	W/R
Signal Name	-

Terminal No.	6
Color of Wire	W
Signal Name	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	P	INPUT 5
3	SB	INPUT 4
4	V	INPUT 3
5	L	INPUT 2
6	R	INPUT 1

Terminal No.	Color of Wire	Signal Name
32	BG	OUTPUT 5
33	GR	OUTPUT 4
34	G	OUTPUT 3
35	BR	OUTPUT 2
36	LG	OUTPUT 1
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W	BAT (F/L)

ABLIA6848GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# FRONT FOG LAMP

## < WIRING DIAGRAM >

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE

7	6	5	4	3	2	1
16	15	14	13	12	11	10
9	8					



Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

Terminal No.	Color of Wire	Signal Name
9	SB	—
10	V	—

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

12	13	10	9	8	7
14	11	1	2	3	4
5	6				



Terminal No.	Color of Wire	Signal Name
1	LG	—
2	BR	—
3	G	—
4	GR	—
5	BG	—
6	R	—
7	L	—
8	P	—

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					



Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3
4	5	6



Terminal No.	Color of Wire	Signal Name
6	W	—

Connector No.	M167
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE

9	8	7	6	5	4	3	2	1
20	19	18	17	16	15	14	13	12
11	10							



Terminal No.	Color of Wire	Signal Name
1	P	—
2	P	—
10	L	—
11	L	—

ABLIA5618GB



# FRONT FOG LAMP

## < WIRING DIAGRAM >

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



42	41	40	39	38	37
48	47	46	45	44	43

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E102
Connector Name	FRONT FOG LAMP RH
Connector Color	BLACK



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	V	-
2	B	-

Connector No.	E101
Connector Name	FRONT FOG LAMP LH
Connector Color	BLACK



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	W	-
2	B	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



59	58	57
62	61	60

Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



51	50	49
56	55	54
53	52	

Terminal No.	Color of Wire	Signal Name
50	W	FR FOG LAMP LH
51	V	FR FOG LAMP RH


ABLIA3309GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

## < WIRING DIAGRAM >

## Wiring Diagram

INFOID:0000000010710076

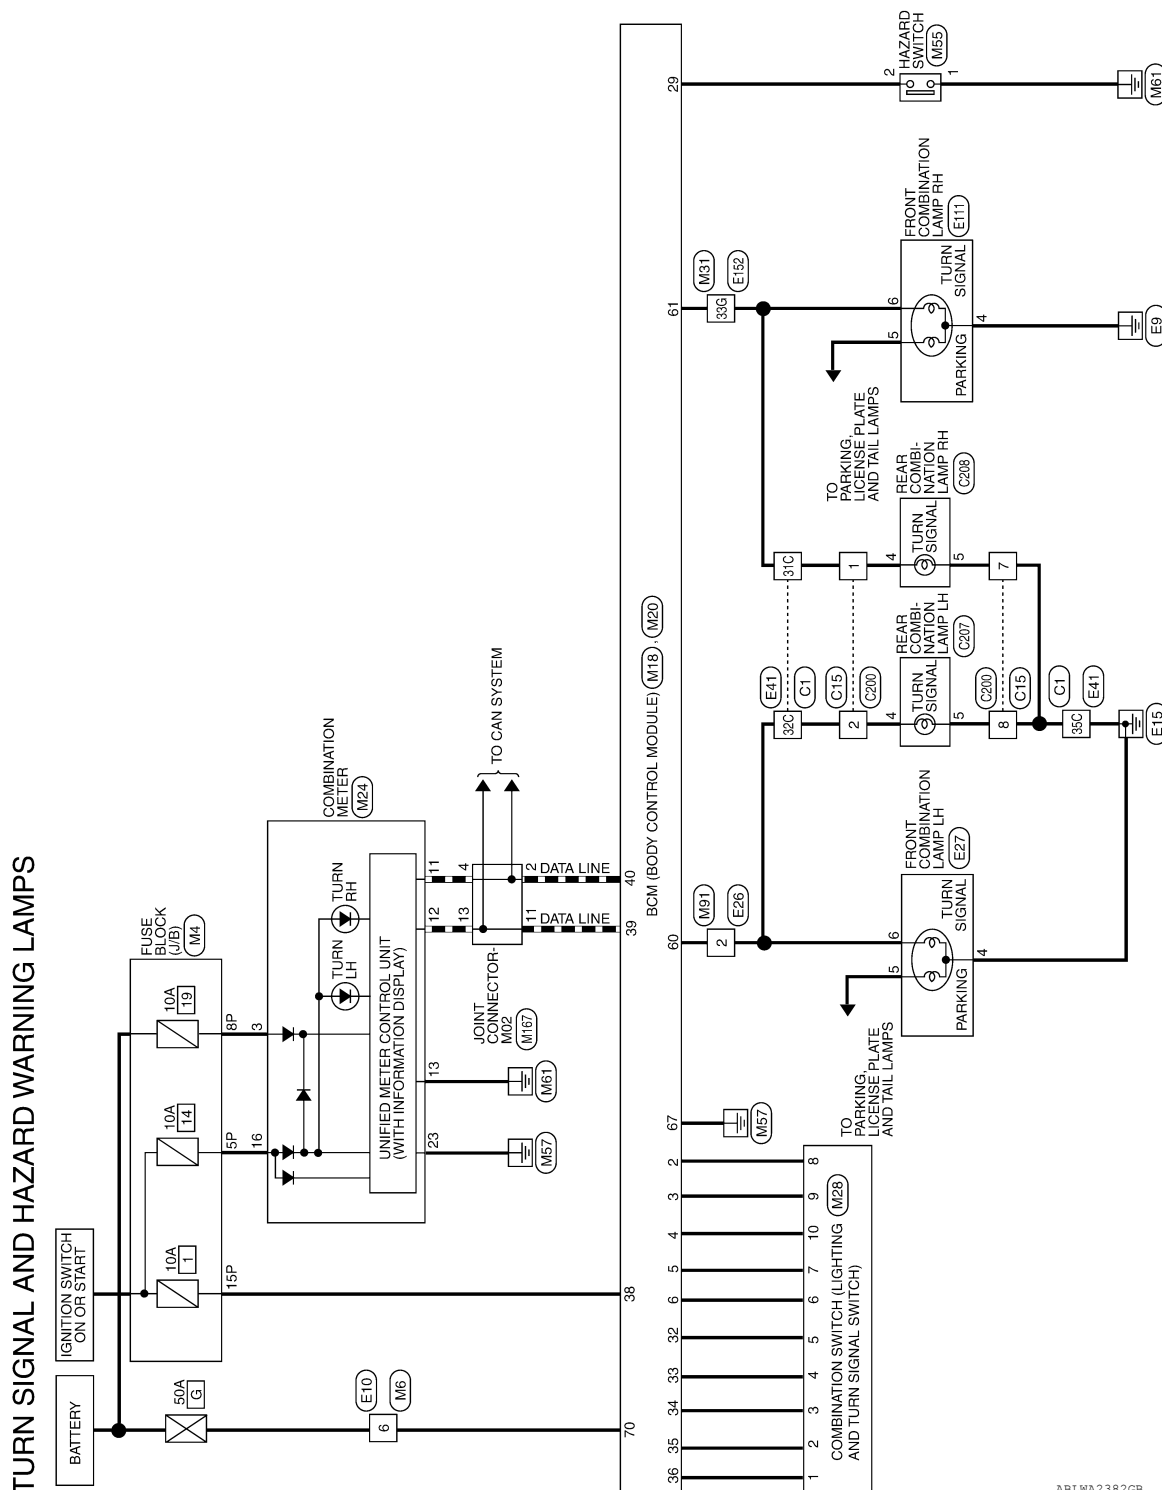

ABLWA2382GB

# TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< WIRING DIAGRAM >

## TURN SIGNAL AND HAZARD WARNING LAMPS CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P 18P 3P 4P	3P 2P 1P
10P 13P 14P 13P 12P 11P 10P 9P 8P	

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



3	2	1
6	5	4

Terminal No.	Color of Wire	Signal Name
5P	W/G	-
8P	R/Y	-
15P	W/R	-

Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	P	INPUT 5
3	SB	INPUT 4
4	V	INPUT 3
5	L	INPUT 2
6	R	INPUT 1
29	G	HAZARD SW

Terminal No.	Color of Wire	Signal Name
32	BG	OUTPUT 5
33	GR	OUTPUT 4
34	G	OUTPUT 3
35	BR	OUTPUT 2
36	LG	OUTPUT 1
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK





56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

Terminal No.	Color of Wire	Signal Name
60	LG	FLASHER OUTPUT (LEFT)
61	G	FLASHER OUTPUT (RIGHT)
67	B	GND (POWER)
70	W	BAT (F/L)

# TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

## < WIRING DIAGRAM >

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
7	L	-
8	P	-
9	SB	-
10	V	-

Terminal No.	Color of Wire	Signal Name
3	R/Y	BATTERY
11	P	CAN-L
12	L	CAN-H
13	GR	GROUND
16	W/G	RUN START
23	B	POWER GND


Terminal No.	Color of Wire	Signal Name
1	LG	-
2	BR	-
3	G	-
4	GR	-
5	BG	-
6	R	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

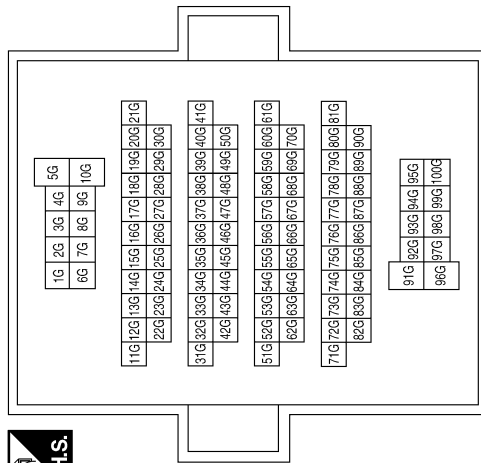

Terminal No.	Color of Wire	Signal Name
33G	G	-

Connector No.	M55
Connector Name	HAZARD SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	G	-

# TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

## < WIRING DIAGRAM >

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



7	6	5	4	3	2	1		
16	15	14	13	12	11	10	9	8

Terminal No.	Color of Wire	Signal Name
2	LG	-

Connector No.	M167
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Terminal No.	Color of Wire	Signal Name
2	P	-
4	P	-
11	L	-
13	L	-

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3
4	5	6

Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
2	LG	-

Connector No.	E27
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
4	B	-
5	R	-
6	LG	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	BLACK



1C	10C	19C	31C	40C
2C	11C	20C	32C	41C
3C	12C	21C	33C	42C
4C	13C	22C	34C	43C
5C	14C	23C	35C	44C
6C	15C	24C	36C	45C
7C	16C	25C	37C	46C
8C	17C		38C	47C
9C	18C		39C	48C

Terminal No.	Color of Wire	Signal Name
31C	L	-
32C	G	-
35C	B	-

ABLIA5657GB

# TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< WIRING DIAGRAM >

Connector No.	E111
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
4	B	—
5	GR	—
6	G	—

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

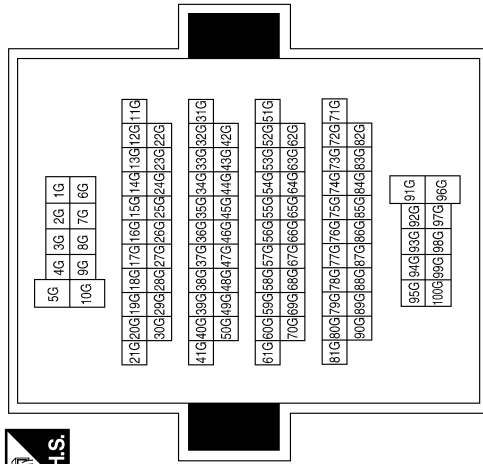


Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	BLACK

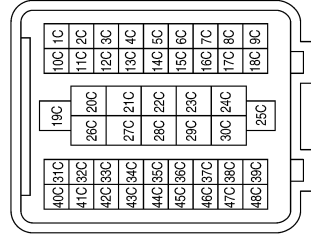

Terminal No.	Color of Wire	Signal Name
31C	L	—
32C	G	—
35C	B	—


Terminal No.	Color of Wire	Signal Name
33G	G	—

Connector No.	C15
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	L	—
2	G	—
7	BR	—
8	B/Y	—

Connector No.	C200
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	L	—
2	G	—
7	BR	—
8	B/Y	—

Connector No.	C207
Connector Name	REAR COMBINATION LAMP LH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
4	G	—
5	B/Y	—

ABLIA5621GB

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< WIRING DIAGRAM >

Connector No.	C208
Connector Name	REAR COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
4	L	-
5	BR	-

ABLIA3304GB

EXL


# PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< WIRING DIAGRAM >

## PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

### Wiring Diagram

INFOID:000000010710077

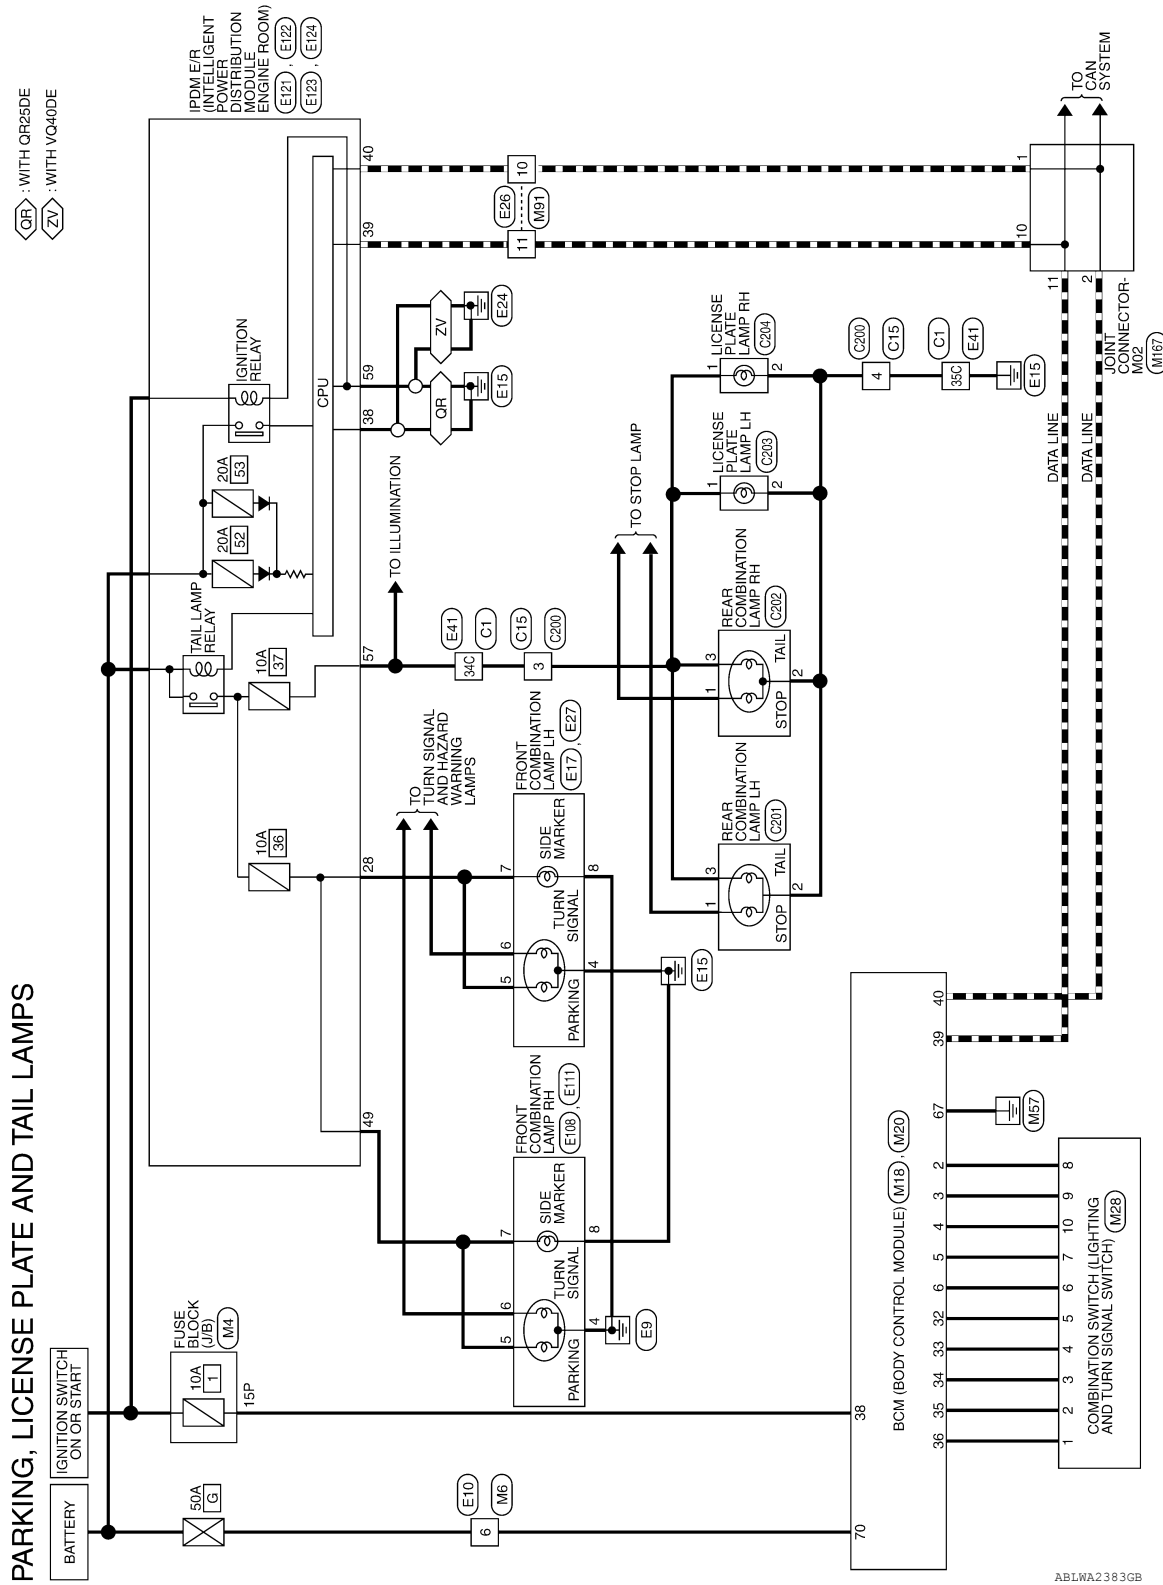

ABLWA2383GB



# PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< WIRING DIAGRAM >

## PARKING, LICENSE PLATE AND TAIL LAMPS CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P 8P 9P 4P 1P	3P 2P 1P
10P 11P 12P 13P 14P 15P 16P 17P 18P 19P 20P	21P 22P 23P 24P 25P 26P 27P 28P 29P 30P 31P 32P 33P 34P 35P 36P 37P 38P 39P 40P



3	2	1
6	5	4

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



3	2	1
6	5	4

Terminal No.	Color of Wire	Signal Name
15P	W/R	-

Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40
--	---

Terminal No.	Color of Wire	Signal Name
2	P	INPUT 5
3	SB	INPUT 4
4	V	INPUT 3
5	L	INPUT 2
6	R	INPUT 1

Terminal No.	Color of Wire	Signal Name
32	BG	OUTPUT 5
33	GR	OUTPUT 4
34	G	OUTPUT 3
35	BR	OUTPUT 2
36	LG	OUTPUT 1
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



56 57 58 59 60 61 62 63 64	65 66 67 68 69 70
----------------------------	-------------------

Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W	BAT (F/L)

ABLIA6846GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< WIRING DIAGRAM >

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



7	6	5	4	3	2	1		
16	15	14	13	12	11	10	9	8

Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

Terminal No.	Color of Wire	Signal Name
9	SB	—
10	V	—

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



12	13	10	9	8	7		
14	11	1	2	3	4	5	6

Terminal No.	Color of Wire	Signal Name
1	LG	—
2	BR	—
3	G	—
4	GR	—
5	BG	—
6	R	—
7	L	—
8	P	—

Connector No.	E17
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	GRAY



Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3
4	5	6

Terminal No.	Color of Wire	Signal Name
7	R	—
8	B	—

Terminal No.	Color of Wire	Signal Name
6	W	—

Connector No.	M167
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																					</
--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----


Terminal No.	Color of Wire	Signal Name
1	P	—
2	P	—
10	L	—
11	L	—

ABLIA5623GB

# PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

## < WIRING DIAGRAM >

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	BLACK

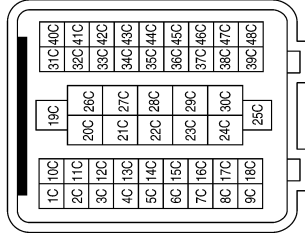


Terminal No.	Color of Wire	Signal Name
34C	GR	-
35C	B	-

Connector No.	E27
Connector Name	FRONT COMBINATION LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
4	B	-
5	R	-
6	LG	-

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
10	P	-
11	L	-

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Connector No.	E111
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
28	R	CLEARANCE FRONT LH

Connector No.	E108
Connector Name	FRONT COMBINATION LAMP RH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
7	R	-
8	B	-

ABLIA5653GB

# PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM


## < WIRING DIAGRAM >

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

Connector No.	E123
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
49	GR	CLEARANCE FRONT RH

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
57	GR	TAIL LAMP
59	B	GND (POWER)

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	BLACK

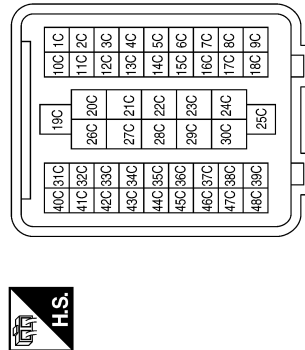

Terminal No.	Color of Wire	Signal Name
34C	GR	-
35C	B	-

Connector No.	C15
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
3	GR	-
4	B	-

Connector No.	C200
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
3	GR	-
4	B	-

# PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< WIRING DIAGRAM >

Connector No.	C203
Connector Name	LICENSE PLATE LAMP LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	V	-
2	B	-

Connector No.	C202
Connector Name	REAR COMBINATION LAMP RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	R	-
2	B	-
3	V	-

Connector No.	C201
Connector Name	REAR COMBINATION LAMP LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	B	-
3	GR	-

Connector No.	C204
Connector Name	LICENSE PLATE LAMP RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	V	-
2	B	-

ABLIA3301GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P


STOP LAMP

< WIRING DIAGRAM >

STOP LAMP

Wiring Diagram

INFOID:000000010710078

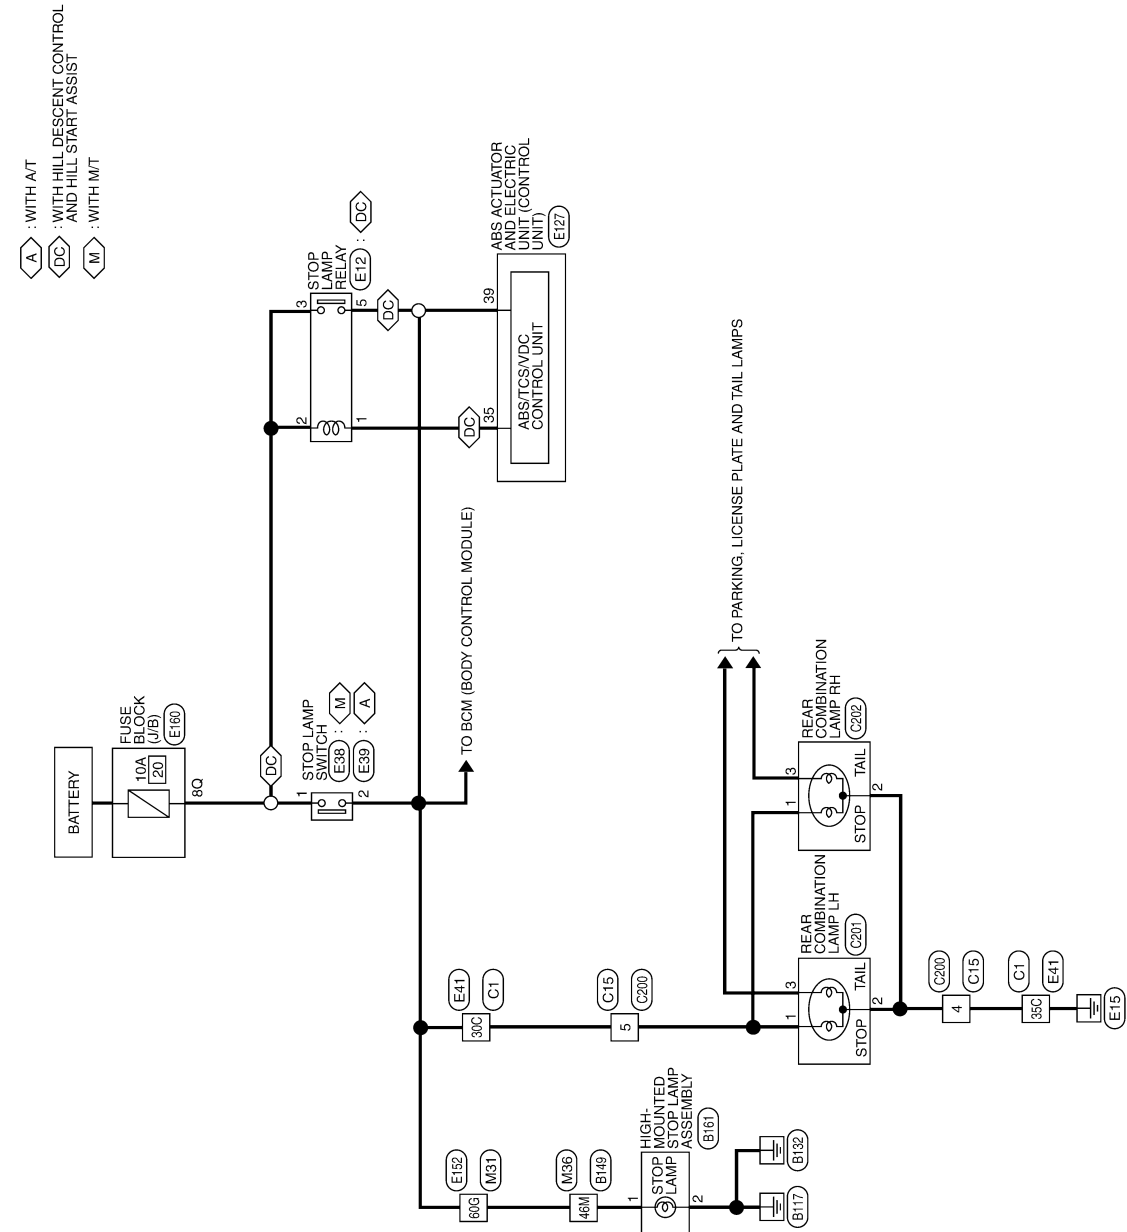


ABLWA2378GB

STOP LAMP


< WIRING DIAGRAM >

STOP LAMP CONNECTORS


Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

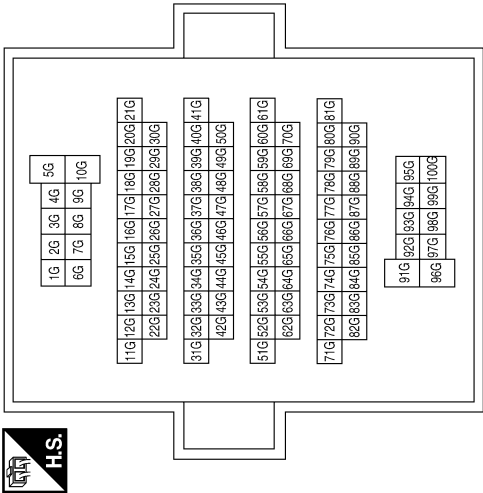

Connector No.	M36
Connector Name	WIRE TO WIRE WHITE
Connector Color	WHITE

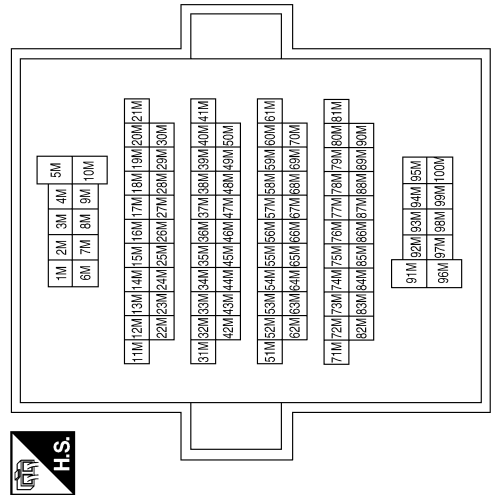


Connector No.	E12
Connector Name	STOP LAMP RELAY
Connector Color	BLUE

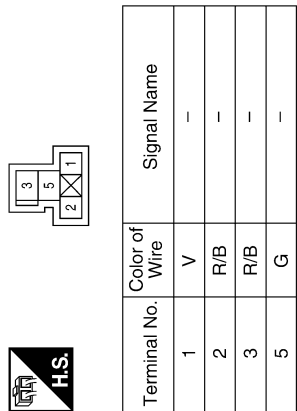


Terminal No.	60G
Color of Wire	L
Signal Name	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH M/T)
Connector Color	BLACK

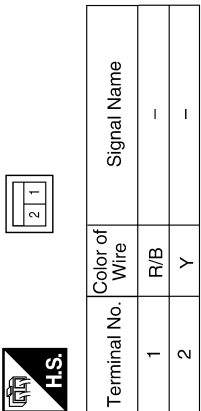

Terminal No.	46M
Color of Wire	L
Signal Name	-

Connector No.	E39
Connector Name	STOP LAMP SWITCH (WITH A/T)
Connector Color	WHITE

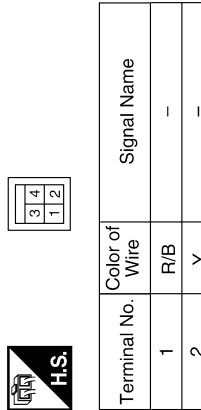


EXL

# STOP LAMP

## < WIRING DIAGRAM >

Connector No.	E127
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Color	BLACK

47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32
16	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1



H.S.



Terminal No.	Color of Wire	Signal Name
35	V	STOP LAMP SW ON
39	SB	STOP LAMP SW

Connector No.	E160
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



3Q	<div></div>	2Q	1Q	
8Q	7Q	6Q	5Q	4Q

Terminal No.	Color of Wire	Signal Name
8Q	R/B	-

Terminal No.	Color of Wire	Signal Name
30C	Y	-
35C	B	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	BLACK

1C	10C	19C	31C	40C
2C	11C	20C	32C	41C
3C	12C	21C	33C	42C
4C	13C	22C	34C	43C
5C	14C	23C	35C	44C
6C	15C	24C	36C	45C
7C	16C	25C	37C	46C
8C	17C	26C	38C	47C
9C	18C	27C	39C	48C



Terminal No.	Color of Wire	Signal Name
60G	L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE



5G	4G	3G	2G	1G
10G	9G	8G	7G	6G

21G	20G	19G	18G	17G	16G	15G	14G	13G	12G	11G
30G	29G	28G	27G	26G	25G	24G	23G	22G		

41G	40G	39G	38G	37G	36G	35G	34G	33G	32G	31G
50G	49G	48G	47G	46G	45G	44G	43G	42G		

61G	60G	59G	58G	57G	56G	55G	54G	53G	52G	51G
70G	69G	68G	67G	66G	65G	64G	63G	62G		

81G	80G	79G	78G	77G	76G	75G	74G	73G	72G	71G
90G	89G	88G	87G	86G	85G	84G	83G	82G		

95G	94G	93G	92G	91G
100G	99G	98G	97G	96G


ABLIA5600GB



# STOP LAMP


< WIRING DIAGRAM >

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	BLACK

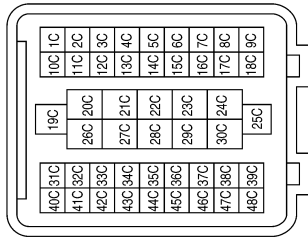


Terminal No.	Color of Wire	Signal Name
30C	Y	-
35C	B	-

Connector No.	C15
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
4	B	-
5	Y	-

Connector No.	C200
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
4	B	-
5	Y	-

Connector No.	C201
Connector Name	REAR COMBINATION LAMP LH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	B	-
3	GR	-

Connector No.	C202
Connector Name	REAR COMBINATION LAMP RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	R	-
2	B	-
3	V	-



ABLIA5601GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

STOP LAMP



< WIRING DIAGRAM >

Connector No.	B161
Connector Name	HIGH-MOUNTED STOP LAMP ASSEMBLY
Connector Color	WHITE

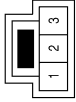

Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

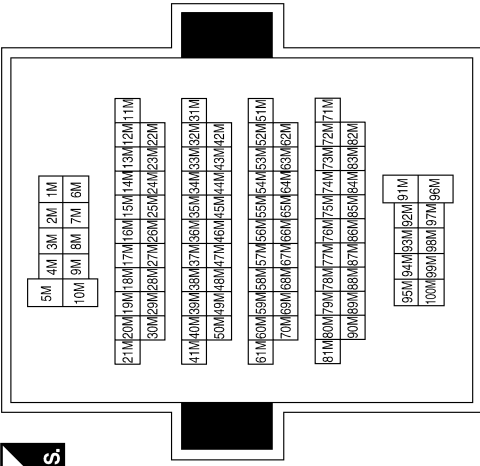

Terminal No.	Color of Wire	Signal Name
46M	L	

BACK-UP LAMP

< WIRING DIAGRAM >


BACK-UP LAMP

Wiring Diagram

INFOID:000000010710079

A : WITH A/T  
M : WITH M/T

BACK-UP LAMP

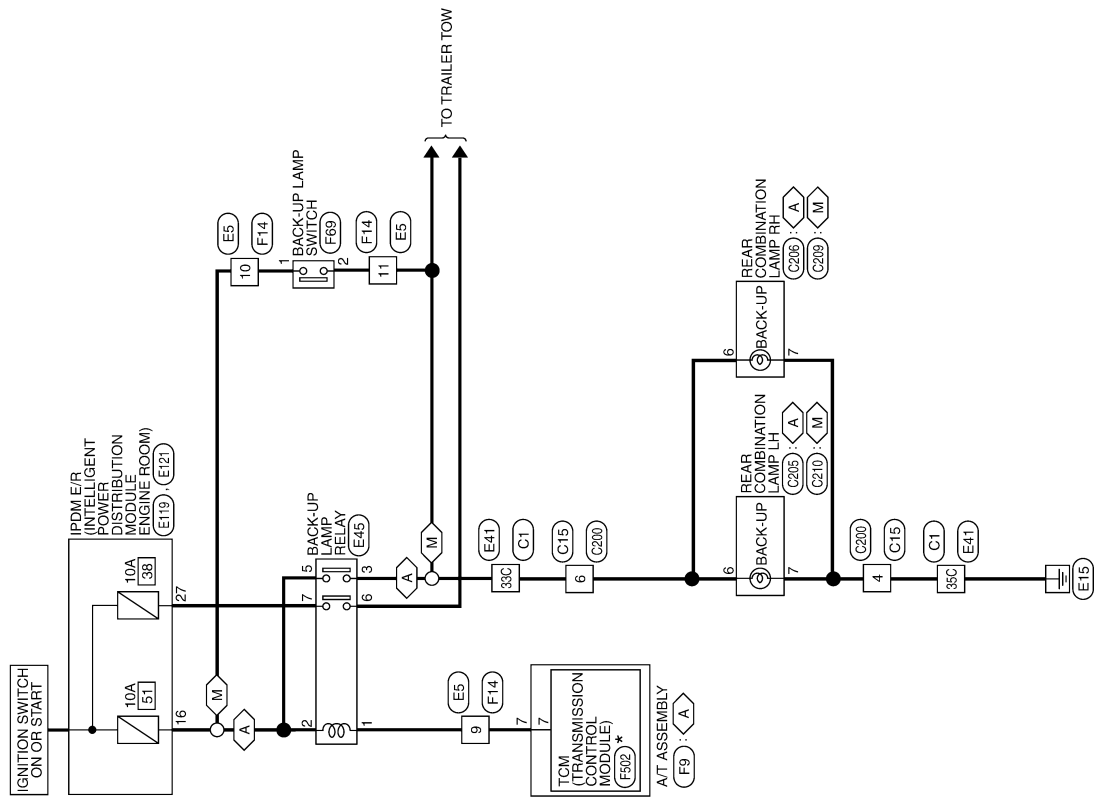

\* : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.

ABLWA1581GB

EXL

M

N

O

P

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O


P

# BACK-UP LAMP

< WIRING DIAGRAM >


## BACK-UP LAMP CONNECTORS

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
9	LG	-
10	W/G	-
11	SB	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	BLACK

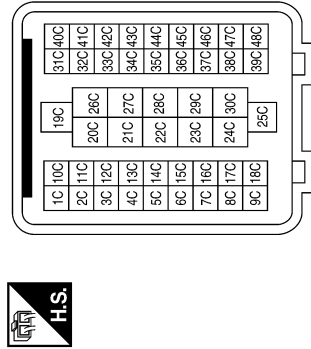


Terminal No.	Color of Wire	Signal Name
33C	SB	-
35C	B	-

Connector No.	E45
Connector Name	BACK-UP LAMP RELAY (WITH A/T)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	LG	-
2	W/G	-
3	SB	-
5	W/G	-
6	Y	-
7	W/G	-

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
16	W/G	REVERSE LAMP

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
27	W/G	T TOW REV LAMP

Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN


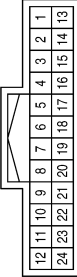


Terminal No.	Color of Wire	Signal Name
7	LG	-

# BACK-UP LAMP



< WIRING DIAGRAM >

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE


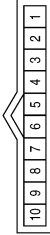
Terminal No.	Color of Wire	Signal Name
9	LG	-
10	W/G	-
11	SB	-

Connector No.	F69
Connector Name	BACK-UP LAMP SWITCH
Connector Color	WHITE


Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	SB	-

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY

Terminal No.	Color of Wire	Signal Name
7	O	REV LAMP RLY

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
33C	SB	-
35C	B	-

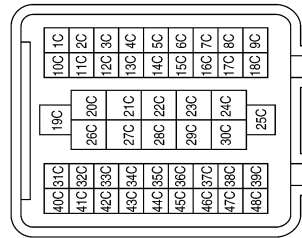Connector No.	C15
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
4	B	-
6	SB	-

Connector No.	C200
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
4	B	-
6	SB	-

BACK-UP LAMP

< WIRING DIAGRAM >

Connector No.	C209
Connector Name	REAR COMBINATION LAMP RH (WITH M/T)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
6	O	-
7	B	-

Connector No.	C206
Connector Name	REAR COMBINATION LAMP RH (WITH A/T)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
6	O	-
7	B	-

Connector No.	C205
Connector Name	REAR COMBINATION LAMP LH (WITH A/T)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
6	SB	-
7	B	-

Connector No.	C210
Connector Name	REAR COMBINATION LAMP LH (WITH M/T)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
6	SB	-
7	B	-

ABL1A1896GB


# TRAILER TOW

< WIRING DIAGRAM >

## TRAILER TOW

### Wiring Diagram

INFOID:000000010710080

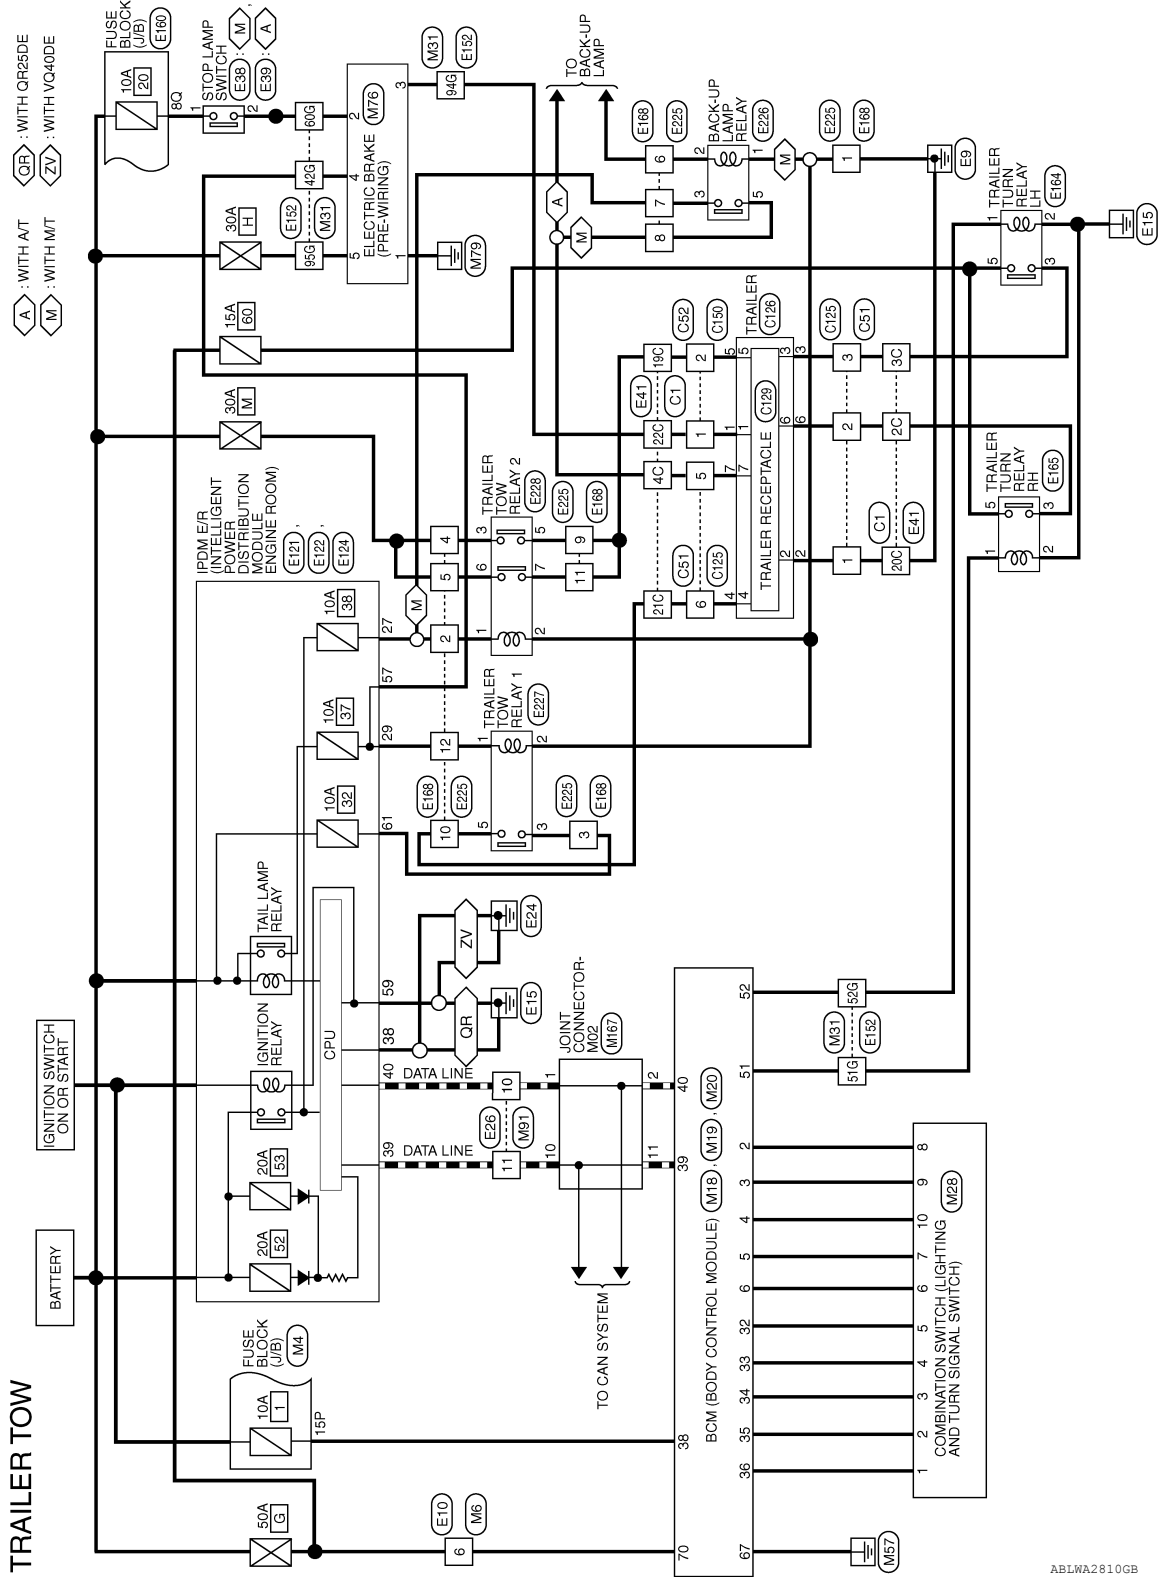

ABLWA2810GB

# TRAILER TOW

< WIRING DIAGRAM >

## TRAILER TOW CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P	6P	5P	4P	<div></div>	3P	2P	1P	
16P	15P	14P	13P	12P	11P	10P	9P	8P



3	2	1
6	5	4

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE



3	2	1
6	5	4

Terminal No.	15P
Color of Wire	W/R
Signal Name	-

Terminal No.	6
Color of Wire	W
Signal Name	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	P	INPUT 5
3	SB	INPUT 4
4	V	INPUT 3
5	L	INPUT 2
6	R	INPUT 1

Terminal No.	Color of Wire	Signal Name
32	BG	OUTPUT 5
33	GR	OUTPUT 4
34	G	OUTPUT 3
35	BR	OUTPUT 2
36	LG	OUTPUT 1
38	W/R	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



41	42	43	44	45	46	47	48	49
50	51	52	53	54	55			

Terminal No.	Color of Wire	Signal Name
51	BG	TRAILER FLASHER OUTPUT (RIGHT)
52	LG	TRAILER FLASHER OUTPUT (LEFT)




TRAILER TOW

< WIRING DIAGRAM >


Terminal No.	Color of Wire	Signal Name
7	L	-
8	P	-
9	SB	-
10	V	-

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	BR	-
3	G	-
4	GR	-
5	BG	-
6	R	-

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
70	W	BAT (F/L)

Connector No.	M76
Connector Name	ELECTRIC BRAKE (PRE-WIRING)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
42G	R	-
51G	BG	-
52G	LG	-
60G	L	-
94G	BR	-
95G	Y	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

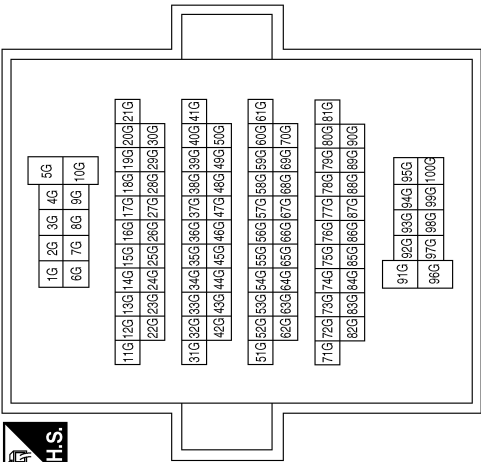

ABLIA6841GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# TRAILER TOW

< WIRING DIAGRAM >

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



7	6	5	4	3	2	1		
16	15	14	13	12	11	10	9	8

Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

Connector No.	M167
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	P	—
2	P	—
10	L	—
11	L	—

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3
4	5	6

Terminal No.	Color of Wire	Signal Name
6	W	—

Connector No.	E26
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
10	P	—
11	L	—

Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH M/T)
Connector Color	BLACK



2	1
---	---

Terminal No.	Color of Wire	Signal Name
1	R/B	—
2	Y	—

Connector No.	E39
Connector Name	STOP LAMP SWITCH (WITH A/T)
Connector Color	WHITE





3	4
1	2

Terminal No.	Color of Wire	Signal Name
1	R/B	—
2	Y	—

TRAILER TOW

< WIRING DIAGRAM >



Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN





Terminal No.	Color of Wire	Signal Name
27	W/G	T TOW REV LAMP
29	G	TRAILER RLY CONT

Terminal No.	Color of Wire	Signal Name
2C	G	-
3C	V	-
4C	Y	-
19C	V	-
20C	B	-
21C	R	-
22C	BR	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	BLACK

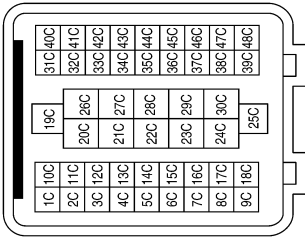



Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
57	GR	TAIL LAMP
59	B	GND (POWER)
61	R/B	TRAIL RLY SUPPLY

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

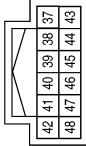

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L

ABLIA5655GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

EXL

# TRAILER TOW

< WIRING DIAGRAM >

Connector No.	E160
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000	1001	1002	1003	1004	1005	1006	1007	1008	1009	1010	1011	1012	1013	1014	1015	1016	1017	1018	1019	1020	1021	1022	1023	1024	1025	1026	1027	1028	1029	1030	1031	1032	1033	1034	1035	1036	1037	1038	1039	1040	1041	1042	1043	1044	1045	1046	1047	1048	1049	1050	1051	1052	1053	1054	1055	1056	1057	1058	1059	1060	1061	1062	1063	1064	1065	1066	1067	1068	1069	1070	1071	1072	1073	1074	1075	1076	1077	1078	1079	1080	1081	1082	1083	1084	1085	1086	1087	1088	1089	1090	1091	1092	1093	1094	1095	1096	1097	1098	1099	1100	1101	1102	1103	1104	1105	1106	1107	1108	1109	1110	1111	1112	1113	1114	1115	1116	1117	1118	1119	1120	1121	1122	1123	1124	1125	1126	1127	1128	1129	1130	1131	1132	1133	1134	1135	1136	1137	1138	1139	1140	1141	1142	1143	1144	1145	1146	1147	1148	1149	1150	1151	1152	1153	1154	1155	1156	1157	1158	1159	1160	1161	1162	1163	1164	1165	1166	1167	1168	1169	1170	1171	1172	1173	1174	1175	1176	1177	1178	1179	1180	1181	1182	1183	1184	1185	1186	1187	1188	1189	1190	1191	1192	1193	1194	1195	1196	1197	1198	1199	1200	1201	1202	1203	1204	1205	1206	1207	1208	1209	1210	1211	1212	1213	1214	1215	1216	1217	1218	1219	1220	1221	1222	1223	1224	1225	1226	1227	1228	1229	1230	1231	1232	1233	1234	1235	1236	1237	1238	1239	1240	1241	1242	1243	1244	1245	1246	1247	1248	1249	1250	1251	1252	1253	1254	1255	1256	1257	1258	1259	1260	1261	1262	1263	1264	1265	1266	1267	1268	1269	1270	1271	1272	1273	1274	1275	1276	1277	1278	1279	1280	1281	1282	1283	1284	1285	1286	1287	1288	1289	1290	1291	1292	1293	1294	1295	1296	1297	1298	1299	1300	1301	1302	1303	1304	1305	1306	1307	1308	1309	1310	1311	1312	1313	1314	1315	1316	1317	1318	1319	1320	1321	1322	1323	1324	1325	1326	1327	1328	1329	1330	1331	1332	1333	1334	1335	1336	1337	1338	1339	1340	1341	1342	1343	1344	1345	1346	1347	1348	1349	1350	1351	1352	1353	1354	1355	1356	1357	1358	1359	1360	1361	1362	1363	1364	1365	1366	1367	1368	1369	1370	1371	1372	1373	1374	1375	1376	1377	1378	1379	1380	1381	1382	1383	1384	1385	1386	1387	1388	1389	1390	1391	1392	1393	1394	1395	1396	1397	1398	1399	1400	1401	1402	1403	1404	1405	1406	1407	1408	1409	1410	1411	1412	1413	1414	1415	1416	1417	1418	1419	1420	1421	1422	1423	1424	1425	1426	1427	1428	1429	1430	1431	1432	1433	1434	1435	1436	1437	1438	1439	1440	1441	1442	1443	1444	1445	1446	1447	1448	1449	1450	1451	1452	1453	1454	1455	1456	1457	1458	1459	1460	1461	1462	1463	1464	1465	1466	1467	1468	1469	1470	1471	1472	1473	1474	1475	1476	1477	1478	1479	1480	1481	1482	1483	1484	1485	1486	1487	1488	1489	1490	1491	1492	1493	1494	1495	1496	1497	1498	1499	1500	1501	1502	1503	1504	1505	1506	1507</
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	--------

TRAILER TOW


< WIRING DIAGRAM >

Connector No.	E226
Connector Name	BACK-UP LAMP RELAY (WITH M/T)
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	B	-
2	BR	-
3	W/G	-
5	SB	-

Connector No.	E225
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W/G	-
3	R/B	-
4	GR	-
5	W	-
6	BR	-
7	W/G	-
8	SB	-
9	L	-
10	R	-
11	O	-
12	G	-

Connector No.	E168
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W/G	-
3	R/B	-
4	GR	-
5	Y	-
6	P	-
7	W/G	-
8	Y	-
9	V	-
10	R	-
11	V	-
12	G	-

Connector No.	E228
Connector Name	TRAILER TOW RELAY 2
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	W/G	-
2	B	-
3	GR	-
5	L	-
6	W	-
7	O	-

Connector No.	E227
Connector Name	TRAILER TOW RELAY 1
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-
3	R/B	-
5	R	-

ABLIA4505GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

EXL

# TRAILER TOW


< WIRING DIAGRAM >

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	BLACK

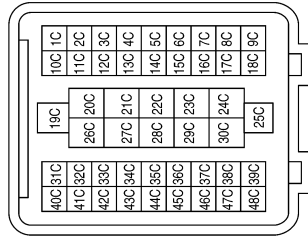

Terminal No.	Color of Wire	Signal Name
2C	G	-
3C	V	-
4C	Y	-
19C	V	-
20C	B	-
21C	R	-
22C	BR	-

Connector No.	C51
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	B	-
2	G	-
3	V	-
5	Y	-
6	R	-

Connector No.	C52
Connector Name	WIRE TO WIRE
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	BR	-
2	V	-

Connector No.	C125
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	W	-
2	G	-
3	V	-
5	B	-
6	BR	-

Connector No.	C126
Connector Name	TRAILER
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	-
2	W	-
3	V	-
4	BR	-
5	L	-
6	G	-
7	B	-

ABLIA5656GB

TRAILER TOW


< WIRING DIAGRAM >

Connector No.	C150
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	-
2	L	-

Connector No.	C129
Connector Name	TRAILER RECEPTACLE
Connector Color	BLACK

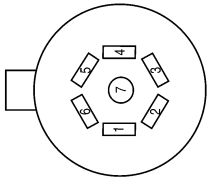

Terminal No.	Color of Wire	Signal Name
1	-	STOP/TURN LH
2	-	GROUND
3	-	ELECTRIC BRAKE
4	-	STOP/TURN RH
5	-	BATTERY
6	-	RUNNING LAMPS
7	-	BACK-UP LAMPS

ABLIA5658GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

EXL

# EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### EXTERIOR LIGHTING SYSTEM SYMPTOMS

#### Symptom Table

INFOID:0000000010710081

#### CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item
Headlamp does not switch to the high beam.	One side	<ul style="list-style-type: none"> <li>Fuse</li> <li>Harness between IPDM E/R and the front combination lamp</li> <li>Front combination lamp</li> <li>IPDM E/R</li> </ul>	Headlamp (HI) circuit Refer to <a href="#">EXL-39</a> .
	Both sides	<b>Symptom diagnosis</b> "BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM" Refer to <a href="#">EXL-131</a> , "Diagnosis Procedure".	
High beam indicator lamp is not turned ON. (Headlamp switches to the high beam.)		<ul style="list-style-type: none"> <li>Combination meter</li> <li>BCM</li> </ul>	<ul style="list-style-type: none"> <li>Combination meter. Data monitor "HI-BEAM IND"</li> <li>BCM (HEAD LAMP) Active test "HEADLAMP"</li> </ul>
Headlamp does not switch to the low beam.	One side	<ul style="list-style-type: none"> <li>Daytime light relay 2</li> <li>Harness between IPDM, daytime light relay 2 and front combination lamp LH.</li> <li>Front combination lamp (Low beam)</li> </ul>	Headlamp (LO) circuit Refer to <a href="#">EXL-42</a> .
	Both sides	<ul style="list-style-type: none"> <li>Combination switch (lighting and turn signal switch)</li> <li>Harness between the combination switch (lighting and turn signal switch) and BCM</li> <li>BCM</li> </ul>	Combination switch (lighting and turn signal switch) Refer to <a href="#">BCS-49</a> .
		High beam request signal	IPDM E/R Data monitor "HL HI REQ"
		IPDM E/R	—
Headlamp does not turn ON.	One side	<ul style="list-style-type: none"> <li>Fuse</li> <li>Bulb</li> <li>Harness between IPDM E/R and the front combination lamp</li> <li>Front combination lamp</li> <li>IPDM E/R</li> </ul>	Headlamp (LO) circuit Refer to <a href="#">EXL-42</a> .
	Both sides	<b>Symptom diagnosis</b> "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to <a href="#">EXL-133</a> , "Diagnosis Procedure".	
Headlamp does not turn OFF.	When the ignition switch is turned ON	<ul style="list-style-type: none"> <li>BCM</li> <li>Combination switch (lighting and turn signal switch)</li> </ul>	Combination switch (lighting and turn signal switch) Refer to <a href="#">BCS-49</a> .



# EXTERIOR LIGHTING SYSTEM SYMPTOMS

## < SYMPTOM DIAGNOSIS >

Symptom		Possible cause	Inspection item
Headlamp is not turned ON/OFF with the lighting switch AUTO.		<ul style="list-style-type: none"> <li>Combination switch (lighting and turn signal switch)</li> <li>Harness between the combination switch (lighting and turn signal switch) and BCM</li> <li>BCM</li> <li>IPDM E/R</li> </ul>	Combination switch (lighting and turn signal switch) Refer to <a href="#">BCS-49</a> .
		<ul style="list-style-type: none"> <li>Optical sensor</li> <li>Harness between the optical sensor and BCM</li> <li>BCM</li> </ul>	Optical sensor Refer to <a href="#">EXL-56</a> .
Daytime light system does not activate.		<ul style="list-style-type: none"> <li>Either high beam bulb</li> <li>Parking brake switch</li> <li>Combination switch (lighting and turn signal switch)</li> <li>BCM</li> <li>IPDM E/R</li> <li>Daytime light relay 1</li> <li>Harness between IPDM E/R and daytime light relay 1.</li> </ul>	Daytime light system description. Refer to <a href="#">EXL-12</a> , " <a href="#">System Description</a> ".
Front fog lamp is not turned ON.	One side	<ul style="list-style-type: none"> <li>Front fog lamp bulb</li> <li>Harness between IPDM E/R and the front combination lamp</li> <li>Front combination lamp</li> <li>IPDM E/R</li> </ul>	Front fog lamp circuit Refer to <a href="#">EXL-48</a> .
	Both side	<b>Symptom diagnosis</b> "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to <a href="#">EXL-135</a> , " <a href="#">Diagnosis Procedure</a> ".	
Parking lamp is not turned ON.	One side	<ul style="list-style-type: none"> <li>Fuse</li> <li>Parking lamp bulb</li> <li>Harness between IPDM E/R and the front/rear combination lamp</li> <li>Front/rear combination lamp</li> <li>IPDM E/R</li> </ul>	Parking lamp circuit Refer to <a href="#">EXL-50</a> .
	Both sides	<b>Symptom diagnosis</b> "PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON" Refer to <a href="#">EXL-134</a> , " <a href="#">Diagnosis Procedure</a> ".	
Turn signal lamp does not blink.	Indicator lamp is normal. (The applicable side performs the high flasher activation).	<ul style="list-style-type: none"> <li>Harness between BCM and each turn signal lamp</li> <li>Turn signal lamp bulb</li> </ul>	Turn signal lamp circuit Refer to <a href="#">EXL-53</a> .
Turn signal indicator lamp does not blink.	One side	Combination meter	—
	Both sides (Always)	<ul style="list-style-type: none"> <li>Turn signal indicator lamp signal</li> <li>Combination meter</li> <li>BCM</li> </ul>	<ul style="list-style-type: none"> <li>Combination meter.</li> <li>Data monitor "TURN IND"</li> <li>BCM (FLASHER)</li> <li>Active test "FLASHER"</li> </ul>
	Both sides (Does blink when activating the hazard warning lamp with the ignition switch OFF)	<ul style="list-style-type: none"> <li>The combination meter power supply and the ground circuit</li> <li>Combination meter</li> </ul>	Power supply and the ground circuit Refer to <a href="#">MWI-31</a> .

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

---

### NORMAL OPERATING CONDITION

#### Description

INFOID:0000000010710082

#### AUTO LIGHT SYSTEM

The auto light system may not turn the headlamp ON/OFF immediately after passing a dark area or a bright area (short tunnel, sky bridge, shadowed area etc.). This is normal.

# BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

< SYMPTOM DIAGNOSIS >

## BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

### Description

INFOID:0000000010710083

The headlamps (both sides) do not switch to high beam when the combination switch (lighting and turn signal switch) is in the HI or PASS setting.

### Diagnosis Procedure

INFOID:0000000010710084

#### 1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION


Check the combination switch (lighting and turn signal switch). Refer to [BCS-49, "Symptom Table"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

#### 2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

 WITH CONSULT DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
HL HI REQ	Combination switch (lighting and turn signal switch) (2ND position)	HI or PASS	ON
		Except for HI or PASS	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-51, "Removal and Installation"](#).

#### 3.HEADLAMP (HI) CIRCUIT INSPECTION

Check the headlamp (HI) circuit. Refer to [EXL-39, "Description"](#).

Is the headlamp (HI) circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

EXL

# DAYTIME LIGHT SYSTEM INOPERATIVE

< SYMPTOM DIAGNOSIS >

## DAYTIME LIGHT SYSTEM INOPERATIVE

### Description

INFOID:000000010710085

The daytime light system is inoperative even though the combination switch (lighting and turn signal switch) and parking brake switch are in the normal setting, also whenever engine is operating.

### Diagnosis Procedure

INFOID:000000010710086

#### NOTE:

Before performing the diagnosis, check that the following is normal:

- High beam lamp function
- Parking brake warning lamp
- Engine operation status

### 1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-49. "Symptom Table"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

### 2.CHECK DAYTIME LIGHT REQUEST SIGNAL INPUT

#### WITH CONSULT DATA MONITOR

1. Parking brake switch is released.
2. Start engine.
3. Select "DTRL REQ" of IPDM E/R DATA MONITOR item.
4. While operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
DTRL REQ	combination switch (lighting and turn signal switch)	1ST or OFF	ON
		Except for 1ST or OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-51. "Removal and Installation"](#).

### 3.DAYTIME LIGHT RELAY CIRCUIT INSPECTION

Check the daytime light relay circuit. Refer to [EXL-46. "Diagnosis Procedure"](#).

Is the daytime light relay circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

# BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

## BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

### Description

INFOID:0000000010710087

The headlamps (both sides) do not turn ON in any combination switch (lighting and turn signal switch) setting.

### Diagnosis Procedure

INFOID:0000000010710088

#### 1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-49, "Symptom Table"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

#### 2.CHECK HEADLAMP (LO) REQUEST SIGNAL INPUT

 WITH CONSULT DATA MONITOR

1. Select "HL LO REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
HL LO REQ	Combination switch (lighting and turn signal switch)	2ND	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-51, "Removal and Installation"](#).

#### 3.HEADLAMP (LO) CIRCUIT INSPECTION

Check the headlamp (LO) circuit. Refer to [EXL-42, "Description"](#).

Is the headlamp (LO) circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

## PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

### Description

INFOID:0000000010710089

The parking, license plate and tail lamps do not turn ON in with any combination switch (lighting and turn signal switch) setting.

### Diagnosis Procedure

INFOID:0000000010710090

#### 1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION


Check the combination switch (lighting and turn signal switch). Refer to [BCS-49. "Symptom Table"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

#### 2.CHECK TAIL LAMP RELAY REQUEST SIGNAL INPUT

 WITH CONSULT DATA MONITOR

1. Select "TAIL & CLR REQ" of IPDM E/R DATA MONITOR item.
2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
TAIL & CLR REQ	Combination switch (lighting and turn signal switch)	1ST	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-51. "Removal and Installation"](#).

#### 3.PARK LAMP CIRCUIT INSPECTION

Check the parking lamp circuit. Refer to [EXL-50. "Description"](#).

Is the tail lamp circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-28. "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

# BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

## BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

### Description

INFOID:0000000010710091

The front fog lamps do not turn ON in any combination switch (lighting and turn signal switch) setting.

### Diagnosis Procedure

INFOID:0000000010710092

#### 1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-49, "Symptom Table"](#).

Is the combination switch (lighting and turn signal switch) normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

#### 2.CHECK FRONT FOG LAMP REQUEST SIGNAL INPUT

 WITH CONSULT DATA MONITOR

1. Select "FR FOG REQ" of IPDM E/R DATA MONITOR item.

2. With operating the combination switch (lighting and turn signal switch), check the monitor status.

Monitor item	Condition		Monitor status
FR FOG REQ	Combination switch (lighting and turn signal switch) (2ND)	ON	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-51, "Removal and Installation"](#).

#### 3.FRONT FOG LAMP CIRCUIT INSPECTION

Check the front fog lamp circuit. Refer to [EXL-48, "Description"](#).

Is the front fog lamp circuit normal?

YES >> Replace IPDM E/R. Refer to [PCS-28, "Removal and Installation of IPDM E/R"](#).

NO >> Repair or replace the malfunctioning part.

# HEADLAMP


< PERIODIC MAINTENANCE >

## PERIODIC MAINTENANCE

### HEADLAMP

#### Aiming Adjustment

INFOID:0000000010710097

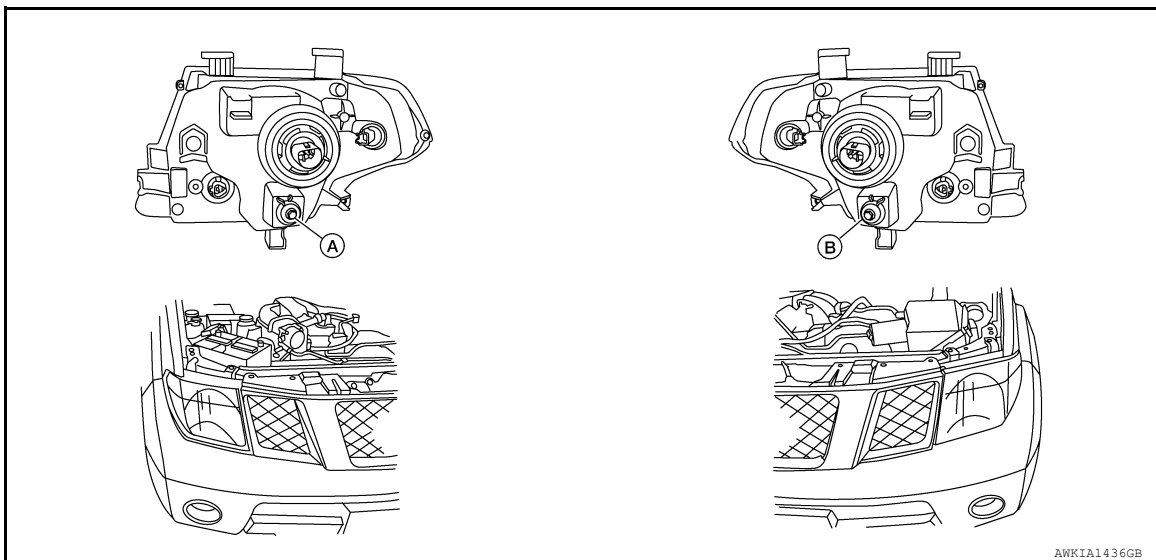

A. Headlamp (RH) adjustment screw

B. Headlamp (LH) adjustment screw

#### NOTE:

- For headlamp aiming details, refer to the regulations in your area.
- If vehicle front body has been repaired or the front combination lamp has been replaced, check headlamp aiming.
- Before performing aiming adjustment, check the following:
  - Confirm headlamp aiming switch is set to "0" (zero) position.
  - Ensure all tires are inflated to correct pressure.
  - Place vehicle and screen on level surface.
  - Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level, and fuel tank full.
  - Confirm spare tire, jack and tools are properly stowed.
  - Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
  - Use adjusting screw to perform aiming adjustment

#### LOW BEAM AND HIGH BEAM

##### CAUTION:

**Do not tighten adjustment screw beyond a torque of 1.67 N·m (17 kg-cm, 15 in-lb) or damage may occur.**

#### NOTE:

By regulation, no means for horizontal aim adjustment is provided from the factory; only vertical aim is adjustable.


1. Turn headlamp low beam on.
2. Use adjustment screw to perform aiming adjustment.
3. Adjust beam pattern until cut-off line (top edge of illumination area) is positioned at same height off ground as bulb center (on H-line). Measure cut-off line within distance A on H-line. See aiming chart below.
  - Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

#### Headlamp Aiming



# HEADLAMP

## < PERIODIC MAINTENANCE >

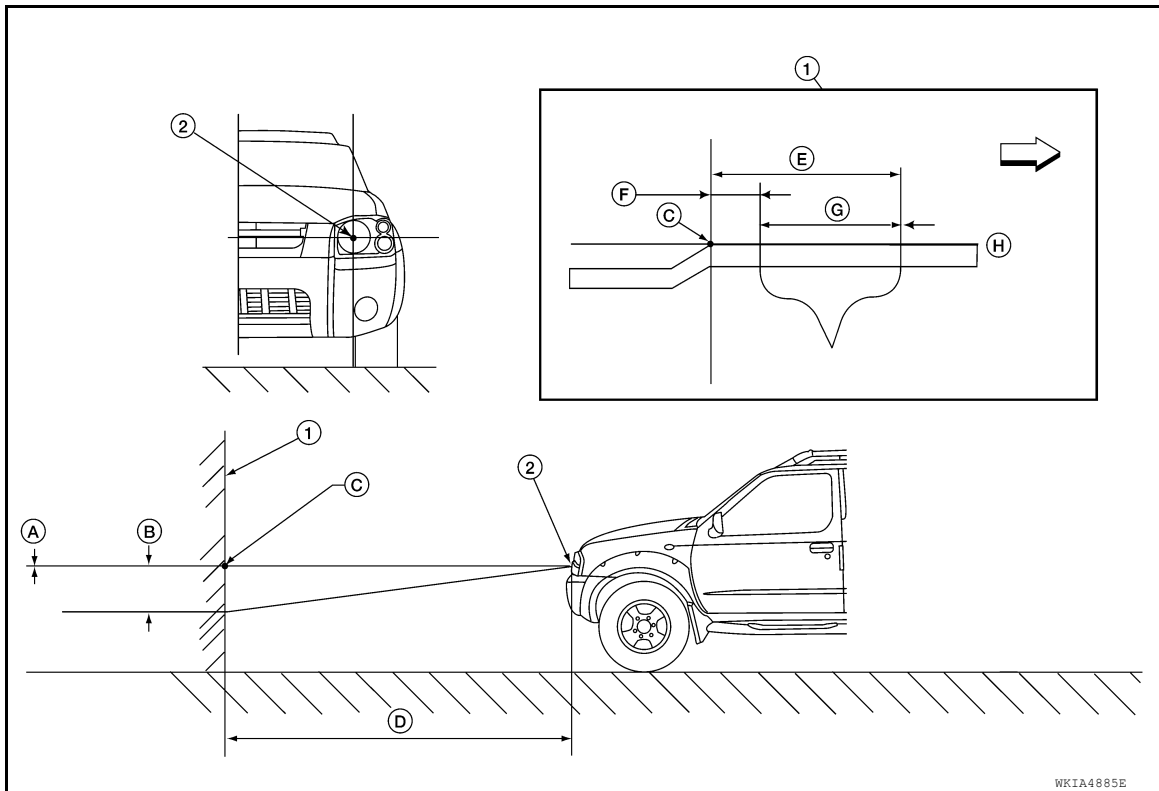

- |  |   |  |
|--|---|--|
| 1 Adjustment screen  | 2 Headlamp bulb center (HV point)   | A Minimum acceptable vertical aim dimension (see aiming chart)   |
| B Maximum acceptable vertical aim dimension (see aiming chart)                         | C H-V point   | D Distance of headlamp aiming screen from vehicle 7.62 m (25 ft) |
| E Maximum aim evaluation distance from vertical center on aiming screen 399 mm (3° R). | F Minimum aim evaluation distance from vertical center on aiming screen 133 mm (1° R) | G Aim evaluation area  |
| H Horizontal aiming evaluation line  | ➡ Right   |  |

### Aiming Chart

A (Minimum acceptable vertical aim dimension)	-3.3 mm (0.13 in)	0.025° up
B (Maximum acceptable vertical aim dimension)	36.6 mm (1.44 in)	0.275° down

EXL

# FRONT FOG LAMP

< PERIODIC MAINTENANCE >

## FRONT FOG LAMP

### Aiming Adjustment

INFOID:0000000010710098


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


Adjust aiming in the vertical direction by turning the adjustment screw.

#### NOTE:

Use a Phillips screwdriver to adjust. Turn screw clockwise to raise pattern and counterclockwise to lower pattern.

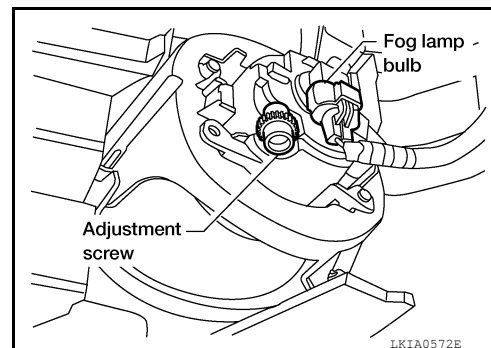

1. Set the distance between the screen and the center of the fog lamp lens as shown.

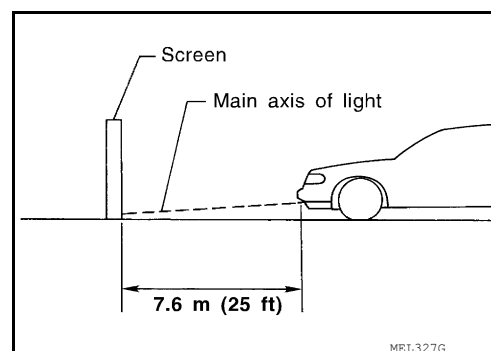


2. Turn front fog lamps ON.
3. Remove front portion of fender protector(s) for adjustment screw access. Refer to [EXT-25. "Removal and Installation"](#).

## FRONT FOG LAMP

### < PERIODIC MAINTENANCE >

4. Adjust front fog lamps using adjustment screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.
  - When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

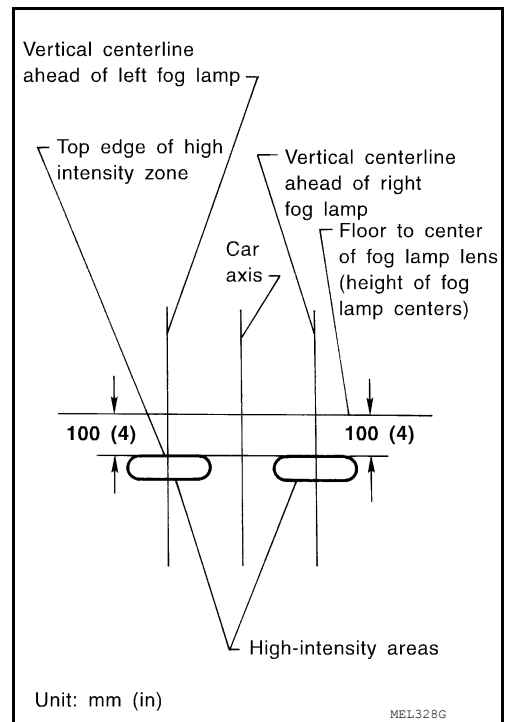

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# HEADLAMP

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### HEADLAMP

#### Bulb Replacement

INFOID:0000000010710099

**WARNING:**

Do not touch bulb with your hand while it is on or right after being turned off. Burning may result.

**CAUTION:**

Do not touch the glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to the bulb. Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

### HEADLAMP

#### Removal

1. Turn front headlamp switch OFF.
2. Disconnect the harness connector from the headlamp.
3. Rotate the headlamp bulb retaining ring counterclockwise and remove.
4. Pull the headlamp bulb straight out from the headlamp assembly.

**CAUTION:**

Grasp only the plastic base when handling headlamp bulb. Do not touch the glass envelope.

#### Installation

Installation is in the reverse order of removal.

**CAUTION:**

After installing bulb, be sure to install the bulb socket and plastic cap securely to ensure watertightness.

### FRONT TURN SIGNAL/PARKING LAMP

#### Removal

1. Turn the bulb socket counterclockwise and remove.
2. Pull the bulb to remove it from the socket.

#### Installation

Installation is in the reverse order of removal.

**CAUTION:**

After installing bulb, be sure to install the bulb socket and plastic cap securely to ensure watertightness.

### FRONT SIDE MARKER LAMP

#### Removal

1. Turn the bulb socket counterclockwise and remove.
2. Pull the bulb to remove it from the socket.

#### Installation

Installation is in the reverse order of removal.

**CAUTION:**

After installing bulb, be sure to install the bulb socket securely for watertightness.

### Removal and Installation

INFOID:0000000010710100

### FRONT COMBINATION LAMP

#### Removal

1. Position front fender protector aside. Refer to [EXT-27. "Removal and Installation of Front Fender Protector"](#).
2. For steel bumper, remove the front bumper upper valance. Refer to [EXT-15. "Removal and Installation"](#).
3. For plastic bumper, remove the front bumper assembly. Refer to [EXT-15. "Removal and Installation"](#).

HEADLAMP

< REMOVAL AND INSTALLATION >

- 4. Remove the front combination lamp bolts.
- 5. Disconnect the harness connector from the front combination lamp and remove.

Installation

Installation is in the reverse order of removal.

NOTE:

After installation, perform headlamp aiming adjustment. Refer to [EXL-136, "Aiming Adjustment"](#).

Front combination lamp bolt : 6.0 N·m (0.61 kg-m, 53 in-lb)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# FRONT FOG LAMP

< REMOVAL AND INSTALLATION >

## FRONT FOG LAMP

### Bulb Replacement

INFOID:000000010710102

#### REMOVAL


1. Position front fender protector aside. Refer to [EXT-27, "Removal and Installation of Front Fender Protector"](#).
2. Disconnect the harness connector from the fog lamp.
3. Turn the bulb counterclockwise to remove it.

#### **WARNING:**

Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.

#### **CAUTION:**

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

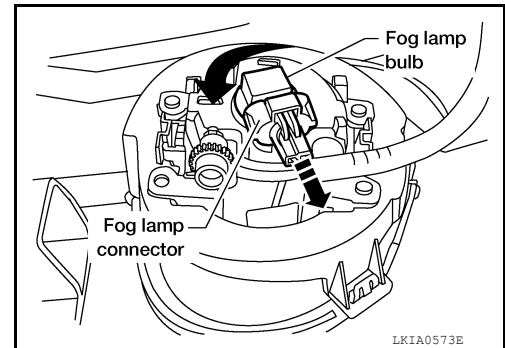

#### INSTALLATION

Installation is in the reverse order of removal.

### Removal and Installation

INFOID:000000010710103

#### REMOVAL


##### **Note:**

The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

1. Position front fender protector aside. Refer to [EXT-27, "Removal and Installation of Front Fender Protector"](#).
2. Disconnect the harness connector from the fog lamp.
3. Remove fog lamp screws and pull fog lamp rearward out of front bumper.

#### **CAUTION:**

- Do not leave fog lamp assembly without bulb for a long period of time. Dust, moisture, smoke, etc. entering the fog lamp body may affect the performance. Remove the bulb from the headlamp assembly just before replacement bulb is installed.
- Grasp only the plastic base when handling the bulb. Do not touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.

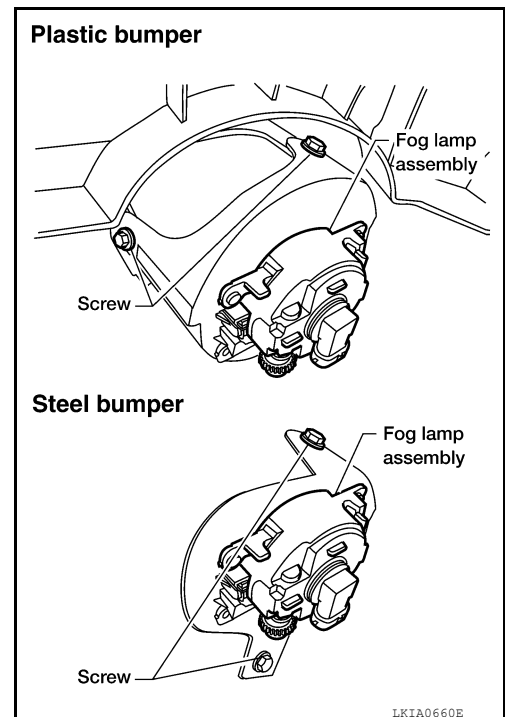

#### INSTALLATION

Installation is in the reverse order of removal.

##### **NOTE:**

After installation, perform front fog lamp aiming adjustment. Refer to [EXL-138, "Aiming Adjustment"](#).

# STOP LAMP

< REMOVAL AND INSTALLATION >

## STOP LAMP


### Bulb Replacement

INFOID:000000010710104

#### HIGH-MOUNTED STOP LAMP

##### Removal

1. Remove high-mounted stop lamp. Refer to [EXL-143, "Removal and Installation"](#).
2. Rotate the center bulb socket counterclockwise and remove.
3. Pull bulb straight out from bulb socket.

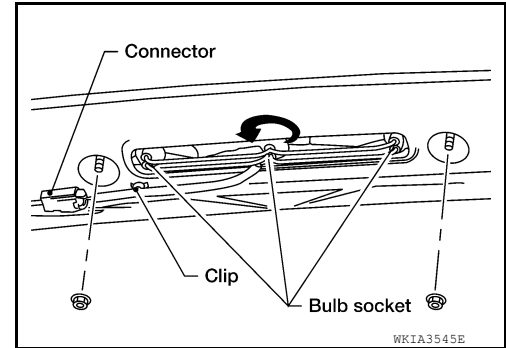

##### Installation

Installation is in the reverse order of removal.


### Removal and Installation

INFOID:000000010710105

#### HIGH-MOUNTED STOP LAMP

##### Removal

1. Remove plugs on headlining.
2. Remove the nuts and remove high-mounted stop lamp from outside of roof outer panel.
3. Rotate the bulb sockets counterclockwise and remove the high-mounted stop lamp assembly.

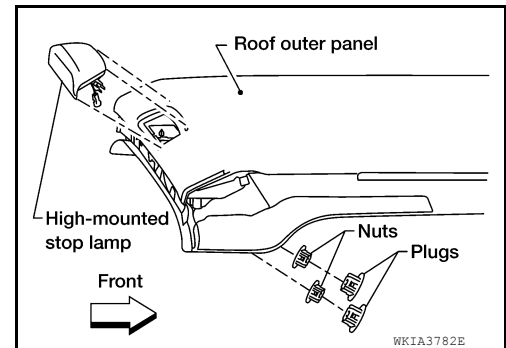

##### Installation

Installation is in the reverse order of removal.

**High-mounted stop lamp nuts : 3.38 N·m (0.34 kg-m, 30 in-lb)**

## LICENSE PLATE LAMP

< REMOVAL AND INSTALLATION >

---

### LICENSE PLATE LAMP

#### Bulb Replacement

INFOID:0000000010710106

#### REMOVAL

1. Turn bulb socket counterclockwise to unlock bulb socket.
2. Pull bulb to remove from bulb socket.

#### INSTALLATION

Installation is in the reverse order of removal.

#### Removal and Installation

INFOID:0000000010710107

#### REMOVAL

1. Disconnect the harness connector from the license plate lamp.
2. Depress tab to remove license plate lamp from rear bumper.

#### INSTALLATION

Installation is in the reverse order of removal.



## REAR COMBINATION LAMP

< REMOVAL AND INSTALLATION >


### REAR COMBINATION LAMP

#### Bulb Replacement

INFOID:000000010710108

#### REMOVAL

1. Remove rear combination lamp. Refer to [EXL-145. "Removal and Installation"](#).
2. Turn bulb socket counterclockwise to remove.
3. Pull bulb straight out away from socket.

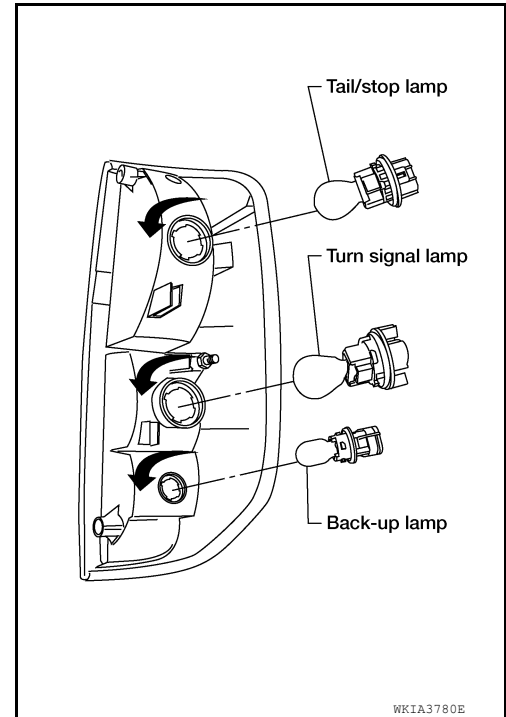

#### INSTALLATION


Installation is in the reverse order of removal.

#### Removal and Installation

INFOID:000000010710109

#### REMOVAL

1. Open tail gate and remove rear combination lamp bolts.
2. Pull combination lamp housing rearward to release locating snap.
3. Rotate each bulb socket counterclockwise and remove.

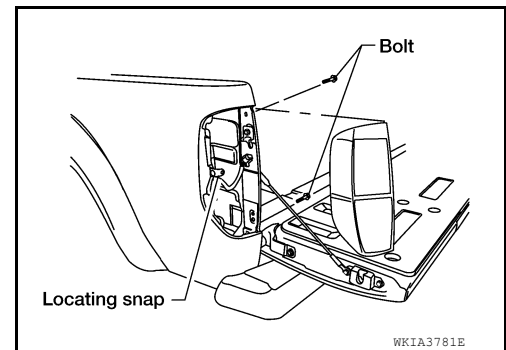

#### INSTALLATION

Installation is in the reverse order of removal.

#### NOTE:

During installation, align locating snap on body prior to installing bolts.

**Rear combination lamp bolts : 2.4 Nm (0.24 kg-m, 21 in-lb)**

# LIGHTING & TURN SIGNAL SWITCH

< REMOVAL AND INSTALLATION >


## LIGHTING & TURN SIGNAL SWITCH

### Removal and Installation

INFOID:0000000010710110

#### REMOVAL

1. Remove instrument lower panel LH. Refer to [IP-18. "Removal and Installation"](#).
2. Remove steering column covers.
3. Disconnect the harness connector from the lighting and turn signal switch.
4. While pressing tabs, pull lighting and turn signal switch toward driver door and release from the steering column.

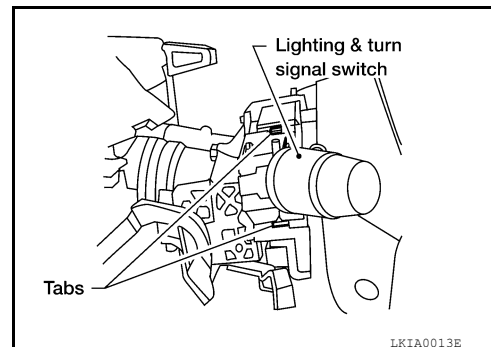

#### INSTALLATION

Installation is in the reverse order of removal.

# HAZARD SWITCH

< REMOVAL AND INSTALLATION >


## HAZARD SWITCH

### Removal and Installation

INFOID:0000000010710111

#### REMOVAL

1. Remove cluster lid C. Refer to [IP-19, "Removal and Installation"](#).
2. Remove the screws and the hazard switch.

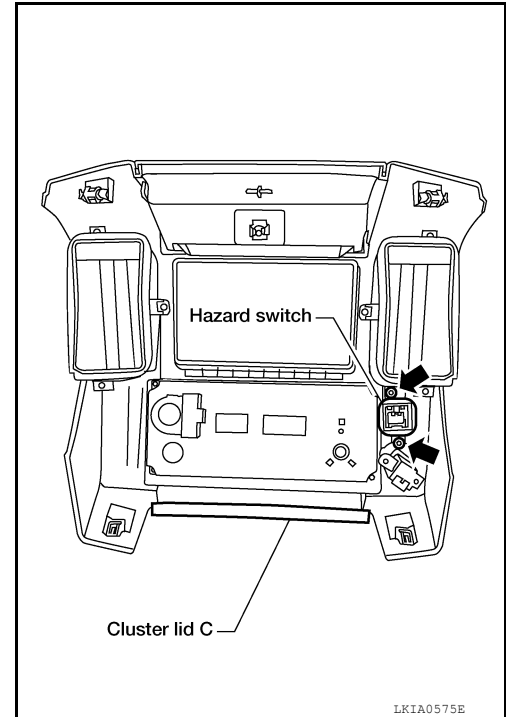

#### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

## OPTICAL SENSOR

< REMOVAL AND INSTALLATION >

---

### OPTICAL SENSOR

#### Removal and Installation

INFOID:0000000010710112

#### REMOVAL

1. Insert a suitable tool between the optical sensor and the instrument panel, then lift the optical sensor upward.
2. Disconnect the harness connector from the optical sensor and remove.

#### INSTALLATION

Installation is in the reverse order of removal.

# FRONT COMBINATION LAMP


< UNIT DISASSEMBLY AND ASSEMBLY >

## UNIT DISASSEMBLY AND ASSEMBLY

### FRONT COMBINATION LAMP

#### Disassembly and Assembly

INFOID:0000000010710101

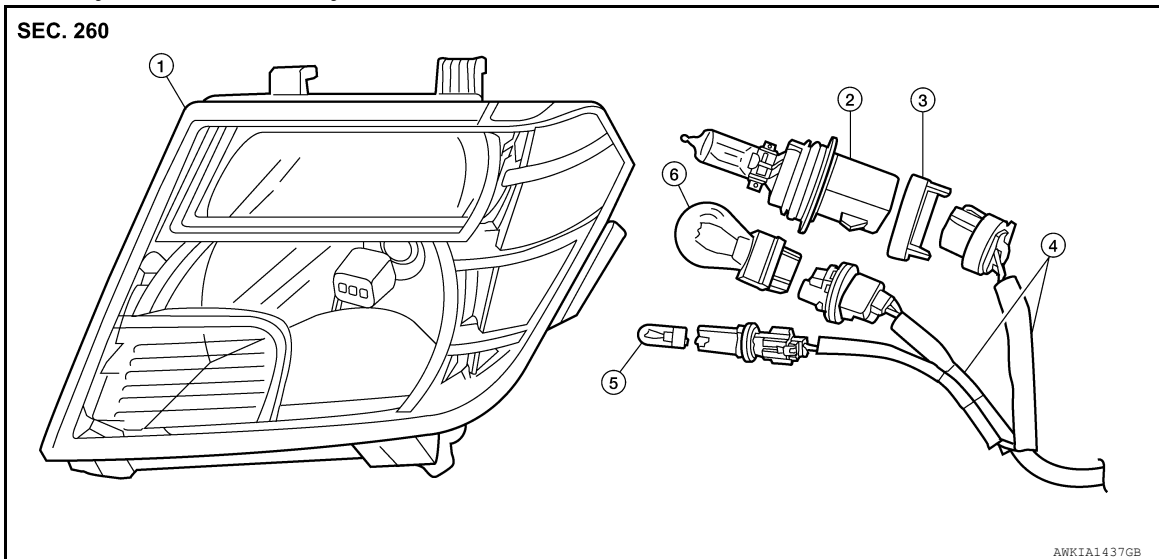

- |                           |                                |  |
|---------------------------|--------------------------------|--|
| 1. Front combination lamp | 2. Headlamp bulb               | 3. Headlamp bulb retaining ring        |
| 4. Harness assembly       | 5. Front side marker lamp bulb | 6. Front turn signal/parking lamp bulb |

#### DISASSEMBLY

##### **WARNING:**

Do not touch bulb with your hand while it is on or right after being turned off. Burning may result.

##### **CAUTION:**

Do not touch the glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to the bulb. Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

1. Rotate headlamp bulb retaining ring counterclockwise and remove.
2. Turn front turn signal/parking lamp bulb socket counterclockwise to unlock and remove.
3. Turn front side marker lamp bulb socket counterclockwise to unlock and remove.

#### ASSEMBLY

Installation is in the reverse order of removal.

##### **CAUTION:**

After installing bulb, be sure to install the bulb socket and plastic cap securely to ensure watertightness.

## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### Bulb Specifications

INFOID:0000000010710113

Item		Wattage (W)*
Front combination lamp	Headlamp (Halogen low beam)	55
	Headlamp (Halogen high beam)	60
	Park/Turn lamp	8/28
	Front side marker lamp	5
Rear combination lamp	Stop/Tail lamp	27/8
	Rear turn signal lamp	27
	Back-up lamp	18
Fog lamp		55
License plate lamp		5
High-mounted stop lamp		12.8
Cargo lamp (in high-mounted stop lamp)		12.8

\*: Always check with the Parts Department for the latest parts information.