

SECTION **DEF**
 DEFOGGER

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
DEF
 M
 N
 O
 P

CONTENTS

BASIC INSPECTION	3	RETRACTABLE HARD TOP CONTROL UNIT	13
DIAGNOSIS AND REPAIR WORKFLOW	3	Description	13
Work Flow	3	Component Function Check	13
SYSTEM DESCRIPTION	4	Diagnosis Procedure	13
REAR WINDOW DEFOGGER SYSTEM	4	REAR WINDOW DEFOGGER	15
System Diagram	4	Description	15
System Description	4	Component Function Check	15
Component Parts Location	5	Diagnosis Procedure	15
Component Description	5	Component Inspection	16
DIAGNOSIS SYSTEM (BCM)	6	DOOR MIRROR DEFOGGER	17
COMMON ITEM	6	Description	17
COMMON ITEM : CONSULT-III Function (BCM -		Component Function Check	17
COMMON ITEM)	6	Diagnosis Procedure	17
REAR WINDOW DEFOGGER	7	DRIVER SIDE DOOR MIRROR DEFOGGER ...	18
REAR WINDOW DEFOGGER : CONSULT-III		Description	18
Function (BCM - REAR DEFOGGER)	7	Component Function Check	18
DTC/CIRCUIT DIAGNOSIS	9	Diagnosis Procedure	18
POWER SUPPLY AND GROUND CIRCUIT	9	Component Inspection	19
BCM (BODY CONTROL MODULE)	9	PASSENGER SIDE DOOR MIRROR DEFOG-	
BCM (BODY CONTROL MODULE) : Diagnosis		GER	20
Procedure	9	Description	20
REAR WINDOW DEFOGGER SWITCH	10	Component Function Check	20
Description	10	Diagnosis Procedure	20
Component Function Check	10	Component Inspection	21
Diagnosis Procedure	10	REAR WINDOW DEFOGGER SYSTEM	22
REAR WINDOW DEFOGGER RELAY	11	Wiring Diagram - DEFOGGER -	22
Description	11	ECU DIAGNOSIS INFORMATION	30
Component Function Check	11	BCM (BODY CONTROL MODULE)	30
Diagnosis Procedure	11	Reference Value	30
Component Inspection	12	Wiring Diagram - BCM -	53
		Fail-safe	58
		DTC Inspection Priority Chart	60
		DTC Index	61

RETRACTABLE HARD TOP CONTROL UNIT	64	DRIVER SIDE	103
Reference Value	64	DRIVER SIDE : Diagnosis Procedure	103
Wiring Diagram	74	PASSENGER SIDE	103
Fail-safe	92	PASSENGER SIDE : Diagnosis Procedure	103
DTC Inspection Priority Chart	95	ON IS NOT DISPLAYED WHEN PRESSING	
DTC Index	98	REAR WINDOW DEFOGGER SWITCH BUT	
SYMPTOM DIAGNOSIS	101	IT IS OPERATED	104
REAR WINDOW DEFOGGER AND DOOR		Diagnosis Procedure	104
MIRROR DEFOGGER DO NOT OPERATE. ..	101	REAR WINDOW DEFOGGER INDICATOR	
Diagnosis Procedure	101	DOES NOT ILLUMINATE	105
REAR WINDOW DEFOGGER DOES NOT		Diagnosis Procedure	105
OPERATE BUT BOTH DOOR MIRROR DE-		PRECAUTION	106
FOGGERS OPERATE.	102	PRECAUTIONS	106
Diagnosis Procedure	102	Precaution for Supplemental Restraint System	
DOOR MIRROR DEFOGGER DOES NOT OP-		(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
ERATE BUT REAR WINDOW DEFOGGER		SIONER"	106
OPERATE	103	REMOVAL AND INSTALLATION	107
BOTH SIDES	103	FILAMENT	107
BOTH SIDES : Diagnosis Procedure	103	Inspection and Repair	107

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006469681

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings the vehicle in.

>> GO TO 2.

2.CHECK DTC

Perform self diagnosis with CONSULT-III

Is any DTC detected?

YES >> Refer to [DEF-61, "DTC Index"](#)

NO >> GO TO 3.

3.REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.

Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 4.

4.IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 3. Then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 5.

5.IDENTIFY MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Perform the diagnosis with "Component diagnosis" of the applicable system.

>> GO TO 6.

6.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 7.

7.FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 3.

Are all malfunctions corrected?

YES >> INSPECTION END

NO >> GO TO 4.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

REAR WINDOW DEFOGGER SYSTEM

System Diagram

INFOID:000000006469682

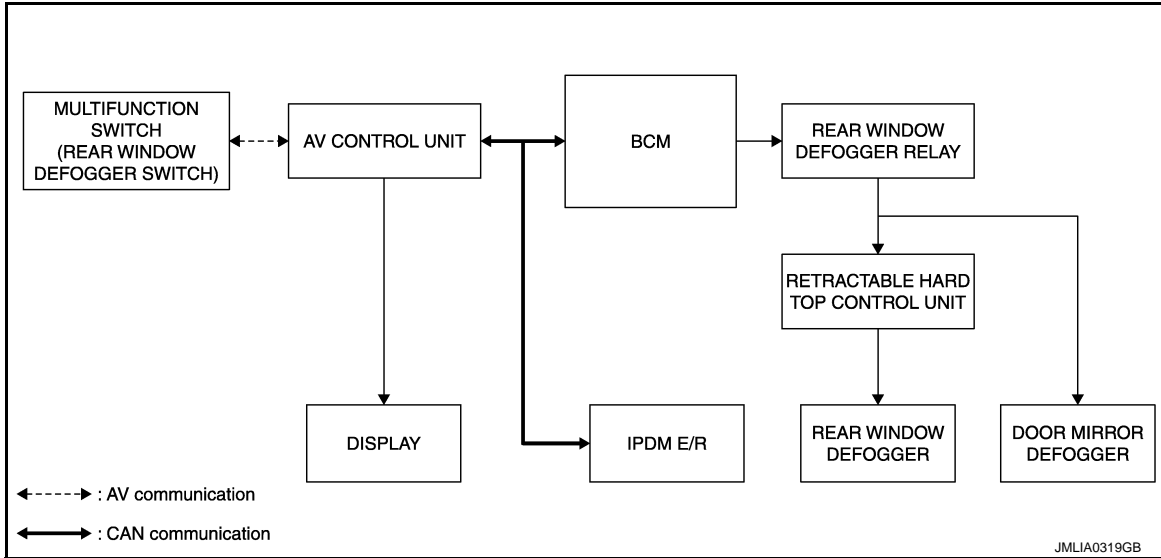

System Description

INFOID:000000006469683

Operation Description

- Turn rear window defogger switch ON when the ignition switch is turned ON. Then multifunction switch (rear window defogger switch) transmits rear window defogger switch signal to AV control unit via AV communication. AV control unit transmits rear window defogger switch signal to BCM via CAN communication.
- BCM turns rear window defogger relay ON and transmit rear window defogger ON signal to IPDM E/R via CAN communication when rear window defogger switch signal is received.
- Door mirror defogger (with mirror defogger) are supplied with power and operate when rear window defogger relay turns ON.
- Rear window defogger relay sends power supply to retractable hard top control unit.
- Retractable hard top control unit detects roof state and controls rear window defogger operate.
- AV control unit transmit rear window defogger control signal to multifunction switch (rear window defogger switch) via AV communication.
- IPDM E/R transmits rear window defogger control signal to AV control unit via CAN communication.

Timer function


- BCM turns rear window defogger relay ON for approximately 15 minutes when rear window defogger switch is turned ON. It makes rear window defogger and door mirror defogger (with mirror defogger) operate.
- Timer is canceled after pressing rear window defogger switch again during timer operation. Then BCM turns rear window defogger relay OFF. The same reaction also occurs during timer operation, if the ignition switch is turned OFF.

REAR WINDOW DEFOGGER SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000006469684

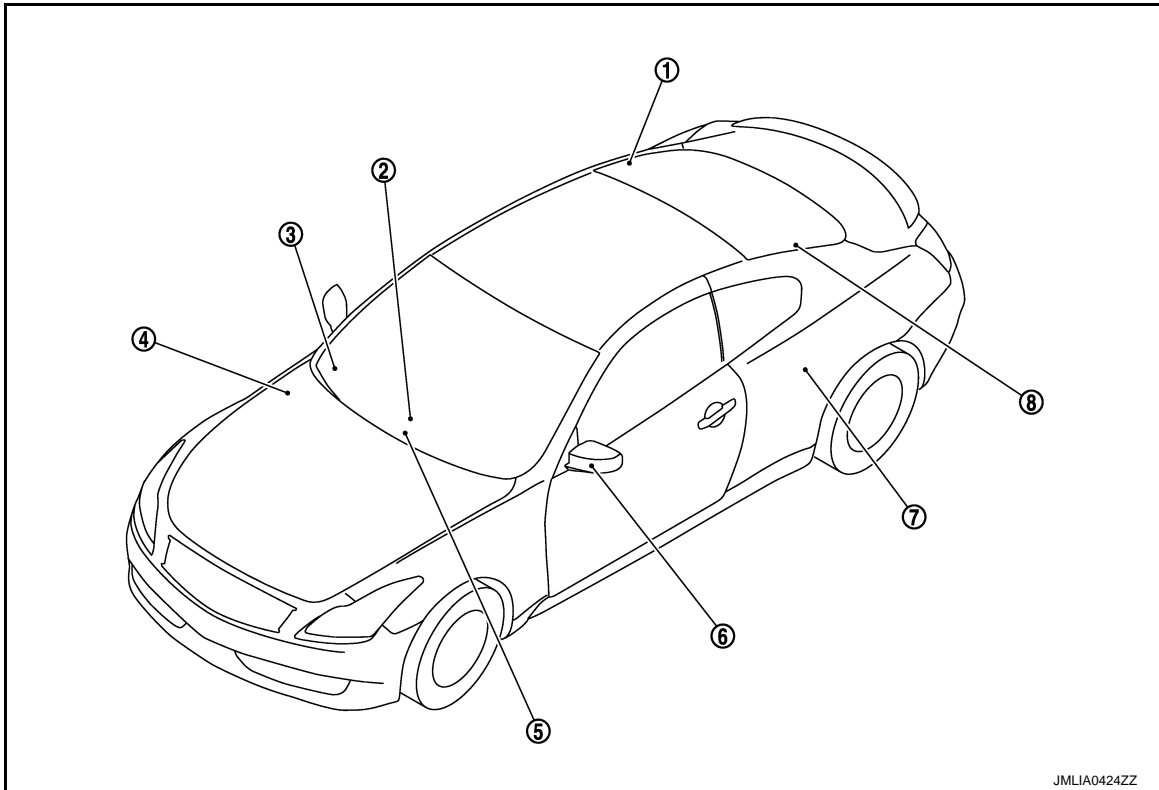

A
B
C
D
E
F
G
H
I
J
K

- | | | |
|--|--|--|
| 1. Rear window defogger connector | 2. Rear window defogger switch (built-in multifunction switch) | 3. BCM
Refer to BCS-6, "Component Parts Location" |
| 4. IPDM E/R
Refer to PCS-4, "Component Parts Location" | 5. AV control unit | 6. Door mirror (driver side) (door mirror defogger) |
| 7. Retractable hard top control unit
Refer to RF-15, "Component Parts Location" | 8. Rear window defogger connector | |

Component Description

INFOID:000000006469685

DEF

BCM	<ul style="list-style-type: none"> Operates the rear window defogger with the operation of rear window defogger switch Performs the timer control of rear window defogger
Rear window defogger relay	Operates the rear window defogger and the door mirror defogger with the control signal from BCM
IPDM E/R	Transmit rear window defogger ON signal to AV control unit via CAN communication
Multifunction switch (Rear window defogger switch)	<ul style="list-style-type: none"> The rear window defogger switch is installed Turns the indicator lamp ON when detecting the operation of rear window defogger
AV control unit	Displays the rear window defogger ON to the display when detecting the operation of rear window defogger
Rear window defogger	Heats the heating wire with the power supply from the rear window defogger relay to prevent the rear window from fogging up
Door mirror defogger	Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up

M
N
O
P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000006939421

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	This function is not used even though it is displayed.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
—	MULTI REMOTE ENT*1			
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×*2	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*1			
• Intelligent Key system • Engine start system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
IVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid open	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	TPMS (AIR PRESSURE MONITOR)	×	×	×

NOTE:

- *1: This item is displayed, but is not used.
- *2: At models with rain sensor this mode is displayed, but is not used.

FREEZE FRAME DATA (FFD)

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT-III.

CONSULT screen item	Indication/Unit	Description
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected
Vehicle Condition	SLEEP>LOCK	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)
	SLEEP>OFF	While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC	While turning power supply position from "LOCK"* to "ACC"
	ACC>ON	While turning power supply position from "ACC" to "IGN"
	RUN>ACC	While turning power supply position from "RUN" to "ACC" (Except emergency stop operation)
	CRANK>RUN	While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT	While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF	While turning power supply position from "ACC" to "OFF"
	OFF>LOCK	While turning power supply position from "OFF" to "LOCK"*
	OFF>ACC	While turning power supply position from "OFF" to "ACC"
	ON>CRANK	While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP	While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP	While turning BCM status from normal mode (Power supply position is "LOCK"*.) to low power consumption mode
	LOCK	Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)*
	OFF	Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
	ACC	Power supply position is "ACC" (Ignition switch ACC)
	ON	Power supply position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)	
CRANKING	Power supply position is "CRANKING" (At engine cranking)	
IGN Counter	0 - 39	<p>The number of times that ignition switch is turned ON after DTC is detected</p> <ul style="list-style-type: none"> The number is 0 when a malfunction is detected now. The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

NOTE:

*: For models without steering lock unit, power supply position changes from "OFF" to "LOCK" when steering lock conditions are satisfied.

REAR WINDOW DEFOGGER

REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)

INFOID:000000006469687

Data monitor

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item	Description
REAR DEF SW	This is displayed even when it is not equipped.
PUSH SW	Indicates [ON/OFF] condition of push switch.

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation. Rear window defogger operates when "ON" on CONSULT-III screen is touched.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM (BODY CONTROL MODULE)

BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000006469688

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Terminal No.	Signal name	Fuse and fusible link No.
1	Battery power supply	I(40A)
11		10(10A)

Is the inspection result normal?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (Approx.)
BCM			
Connector	Terminal	Ground	Battery voltage
M118	1		
M119	11		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER SWITCH

Description

INFOID:000000006469689

- The rear window defogger is operated by turning the rear window defogger switch ON.
- The indicator lamp in the rear window defogger illuminates when the rear window defogger is operating.

Component Function Check

INFOID:000000006469690

1.CHECK REAR WINDOW DEFOGGER SWITCH FUNCTION

Check that the indicator lamp of rear window defogger illuminates when rear window defogger switch ON.

Is the inspection result normal?

- YES >> Rear window defogger switch function is OK.
NO >> Refer to [DEF-10, "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:000000006469691

1.CHECK MULTIFUNCTION SWITCH (REAR WINDOW DEFOGGER SWITCH)

Does multifunction switch operate normally?

Base audio without navigation. Refer to [AV-18, "On Board Diagnosis Function"](#).

Bose audio without navigation. Refer to [AV-138, "On Board Diagnosis Function"](#).

Bose audio with navigation. Refer to [AV-287, "On Board Diagnosis Function"](#).

Is the inspection result normal?

- YES >> INSPECTION END.
NO >> Replace multifunction switch (rear window defogger switch). Refer to [AV-118, "Removal and Installation"](#)

REAR WINDOW DEFOGGER RELAY

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER RELAY

Description

INFOID:000000006469692

Power is supplied to the rear window defogger with BCM control.

Component Function Check

INFOID:000000006469693

1.CHECK REAR WINDOW DEFOGGER RELAY POWER SUPPLY CIRCUIT

1. Perform Active Test ("REAR DEFOGGER") with CONSULT-III.
2. Touch "ON".
3. Check that the rear window heating wire is getting warmer.

Is the inspection result normal?

- YES >> Rear window defogger relay power supply circuit is OK.
NO >> Refer to [DEF-11. "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:000000006469694

1.CHECK FUSE

1. Turn ignition switch off.
2. Check the following.
 - 10A fuse (No.3, located in fuse block (J/B))

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK REAR WINDOW DEFOGGER CIRCUIT 1

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

BCM		Ground	Condition		Voltage (V) (Approx.)
Connector	Terminal				
M123	151	Ground	Rear window defogger switch	ON	0
				OFF	Battery voltage

Is the inspection result normal?

- YES >> GO TO 6.
NO >> GO TO 3.

3.CHECK REAR WINDOW DEFOGGER CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect BCM connector and rear window defogger relay.
3. Check continuity between BCM harness connector and fuse block (J/B) harness connector.

BCM		Fuse block (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
M123	151	M2	4B	Existed

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	151		Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER RELAY

< DTC/CIRCUIT DIAGNOSIS >

4. CHECK REAR WINDOW DEFOGGER RELAY

Check rear window defogger relay.

Refer to [DEF-12, "Component Inspection"](#)

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace rear window defogger relay.

5. CHECK FUSE BLOCK (J/B)

1. Install the rear window defogger relay.
2. Turn ignition switch ON.
3. Check voltage between fuse block (J/B) (fuse block side) and ground.

Fuse block (J/B)		Ground	Voltage (V) (Approx.)
Connector	Terminal		
M2	4B	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace fuse block (J/B).

6. CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-43, "Intermittent Incident"](#)

>> INSPECTION END.

Component Inspection

INFOID:000000006469695

1. CHECK REAR WINDOW DEFOGGER RELAY


1. Turn ignition switch OFF.
2. Disconnect rear window defogger relay.
3. Check rear window defogger relay.

Terminal		Condition	Continuity
Rear window defogger relay			
3	5	12 V direct current supply between terminals 1 and 2.	Existed
		No current supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace rear window defogger relay.

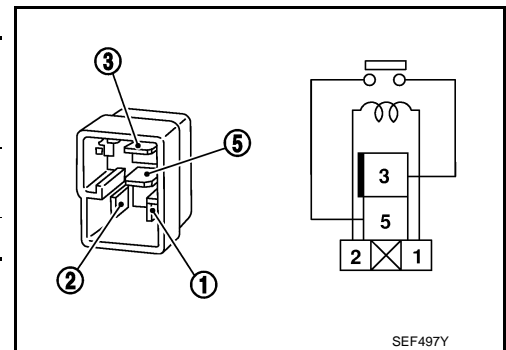

SEF497Y

RETRACTABLE HARD TOP CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

RETRACTABLE HARD TOP CONTROL UNIT

Description

INFOID:000000006469696

Retractable hard top control unit detects roof state and controls rear defogger.

Component Function Check

INFOID:000000006469697

1.CHECK REAR WINDOW DEFOGGER

1. Perform Active Test ("REAR DEFOGGER") with CONSULT-III.
2. Touch "ON".
3. Check that the rear window heating wire is getting warmer.

Is the inspection result normal?

- YES >> Retractable hard top control unit is OK.
NO >> Refer to [DEF-13. "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:000000006469698

1.CHECK FUSE

1. Turn ignition switch OFF.
2. Check the following.
 - 20A fuse [No.14, located in fuse block (J/B)]
 - 20A fuse [No.15, located in fuse block (J/B)]

Is the inspection result normal

- YES >> GO TO 2.
NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK RETRACTABLE HARD TOP CONTROL UNIT CIRCUIT

1. Disconnect retractable hard top control unit connector and fuse block (J/B) connector.
2. Check continuity between retractable hard top control unit and fuse block (J/B) harness connector.

Fuse block (J/B)		Retractable hard top control unit		Continuity
Connector	Terminal	Connector	Terminal	
B6	10G	B84	70	Existed
	11G		69	

3. Check continuity between retractable hard top control unit and ground.

Fuse block (J/B)		Ground	Continuity
Connector	Terminal		
B6	10G		Existed
	11G		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness and ground.

3.CHECK FUSE BLOCK (J/B)

1. Turn ignition switch ON.
2. Check voltage between fuse block (J/B) (fuse block side) and ground.

RETRACTABLE HARD TOP CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

(+)		(-)	Condition	Voltage (V) (Approx.)	
Fuse block (J/B)					
Connector	Terminal				
B6	10G	Ground	Rear window defogger	ON	Battery voltage
			switch	OFF	0
	11G		ON	Battery voltage	
			OFF	0	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace fuse block (J/B).

4. CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-43, "Intermittent Incident"](#)

>> INSPECTION END.

REAR WINDOW DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER

Description

INFOID:000000006469699

Heats the heating wire with the power supply from the retractable hard top control unit to prevent the rear window from fogging up.

Component Function Check

INFOID:000000006469700

1.CHECK REAR WINDOW DEFOGGER

1. Perform Active Test ("REAR DEFOGGER") with CONSULT-III.
2. Touch "ON".
3. Check that the rear window heating wire is getting warmer.

Is the inspection result normal?

- YES >> Rear window defogger is OK.
 NO >> Refer to [DEF-15. "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:000000006469701

1.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between rear window defogger connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
B658	1	Ground	Rear window defogger switch	Battery voltage
			ON	
			OFF	0

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> GO TO 3.

2.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear window defogger connector.
3. Check continuity between rear window defogger harness connector and ground.

Rear window defogger		Ground	Continuity
Connector	Terminal		
B659	2		Existed

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair or replace harness and ground.

3.CHECK REAR WINDOW DEFOGGER CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect retractable hard top control unit connector and rear window defogger connector.
3. Check continuity between retractable hard top control unit and rear window defogger harness connector.

Retractable hard top control unit		Rear window defogger		Continuity
Connector	Terminal	Connector	Terminal	
B84	71	B658	1	Existed
	72	B659		

REAR WINDOW DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between retractable hard top control unit and ground.

Retractable hard top control unit		Ground	Continuity
Connector	Terminal		
B84	71		Existed
	72		

Is the inspection result normal?

YES >> Replace retractable hard top control unit. Refer to [RF-311, "Removal and Installation"](#).

NO >> Repair or replace harness and ground.

4.CHECK FILAMENT

Check filament.

Refer to [DEF-16, "Component Inspection"](#)

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair filament.

5.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-43, "Intermittent Incident"](#)

>> INSPECTION END.

Component Inspection

INFOID:000000006469702

1.CHECK FILAMENT

Check the filament for damage or blown.

Refer to [DEF-107, "Inspection and Repair"](#)

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Repair filament.

DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

DOOR MIRROR DEFOGGER

Description

INFOID:000000006469703

Power is supplied to the door mirror defogger with BCM control.

Component Function Check

INFOID:000000006469704

1.CHECK DOOR MIRROR DEFOGGER

1. Perform Active Test ("REAR DEFOGGER") with CONSULT-III.
2. Touch "ON".
3. Check that both side door mirror glass is getting warmer.

Is the inspection result normal?

- YES >> Door mirror defogger is OK.
NO >> Refer to [DEF-17. "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:000000006469705

1.CHECK FUSE

1. Turn ignition switch OFF.
2. Check the following.
 - 10A fuse (No.13, located in fuse block (J/B))

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK FUSE BLOCK (J/B)

1. Turn ignition switch ON.
2. Check voltage between fuse block (J/B) (fuse block side) and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
Fuse block (J/B)					
Connector	Terminal				
M3	9C	Ground	Rear window de-fogger switch	ON	Battery voltage
			OFF	0	
	10C		Rear window de-fogger switch	ON	Battery voltage
			OFF	0	

Is the inspection result normal?

- YES >> INSPECTION END.
NO >> Replace fuse block (J/B).

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

DRIVER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

DRIVER SIDE DOOR MIRROR DEFOGGER

Description

INFOID:000000006469706

Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

Component Function Check

INFOID:000000006469707

1.CHECK DRIVER SIDE DOOR MIRROR DEFOGGER

1. Perform Active Test ("REAR DEFOGGER") with CONSULT-III.
2. Touch "ON".
3. Check that the driver side door mirror glass is getting warmer.

Is the inspection result normal?

- YES >> Driver side door mirror defogger is OK.
NO >> Refer to [DEF-18, "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:000000006469708

1.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect door mirror (driver side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (driver side) harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Door mirror (driver side)	Terminal			
Connector	Terminal	Ground	Rear window de-fogger switch	ON Battery voltage
D3	4		OFF 0	

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 2.

2.CHECK FUSE BLOCK (J/B) OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect fuse block (J/B) connector.
3. Turn ignition switch ON.
4. Check voltage between fuse block (J/B) harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Fuse block (J/B)	Terminal			
Connector	Terminal	Ground	Rear window de-fogger switch	ON Battery voltage
M3	10C		OFF 0	

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace fuse block (J/B).

3.CHECK DRIVER SIDE DOOR MIRROR DEFOGGER CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between fuse block (J/B) harness connector and door mirror (driver side) harness connector.

DRIVER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

Fuse block (J/B)		Door mirror (driver side)		Continuity
Connector	Terminal	Connector	Terminal	
M3	10C	D3	4	Existed

3. Check continuity between fuse block (J/B) harness connector and ground.

Fuse block (J/B)		Ground	Continuity
Connector	Terminal		
M3	10C	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

4.CHECK GROUND CIRCUIT

- Turn ignition switch OFF.
- Check continuity between door mirror (driver side) harness connector and ground.

Door mirror (driver side)		Ground	Continuity
Connector	Terminal		
D3	8	Ground	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5.CHECK DRIVER SIDE DOOR MIRROR DEFOGGER

Check driver side door mirror defogger.

Refer to [DEF-19, "Component Inspection"](#)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace door mirror (driver side). Refer to [MIR-21, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#)

6.CHECK INTERMITTENT INCIDENT

Check intermittent incident.

Refer to [GI-43, "Intermittent Incident"](#)

Is the inspection result normal?

>> INSPECTION END.

Component Inspection

INFOID:000000006469709

1.CHECK DRIVER SIDE DOOR MIRROR DEFOGGER

- Turn ignition switch OFF.
- Disconnect door mirror (driver side) connector.
- Check continuity between door mirror terminals.

Door mirror (driver side)			Continuity
Connector	Terminal		
D3	4	8	Existed

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace door mirror (driver side). Refer to [MIR-21, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#)

PASSENGER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

PASSENGER SIDE DOOR MIRROR DEFOGGER

Description

INFOID:000000006469710

Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

Component Function Check

INFOID:000000006469711

1.CHECK PASSENGER SIDE DOOR MIRROR DEFOGGER

1. Perform Active Test ("REAR DEFOGGER") with CONSULT-III.
2. Touch "ON".
3. Check that the passenger side door mirror glass is getting warmer.

Is the inspection result normal?

- YES >> Passenger side door mirror defogger is OK.
NO >> Refer to [DEF-20, "Diagnosis Procedure"](#)

Diagnosis Procedure

INFOID:000000006469712

1.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect door mirror (passenger side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (passenger side) harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
D33	4	Ground	Rear window de-fogger switch	ON Battery voltage
			OFF 0	

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 2.

2.CHECK FUSE BLOCK (J/B) OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect fuse block (J/B) connector.
3. Turn ignition switch ON.
4. Check voltage between fuse block (J/B) harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
M3	9C	Ground	Rear window de-fogger switch	ON Battery voltage
			OFF 0	

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace fuse block (J/B).

3.CHECK PASSENGER SIDE DOOR MIRROR DEFOGGER

1. Turn ignition switch OFF.
2. Check continuity between fuse block (J/B) harness connector and door mirror (passenger side) harness connector.

PASSENGER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

Fuse block (J/B)		Door mirror (passenger side)		Continuity
Connector	Terminal	Connector	Terminal	
M3	9C	D33	4	Existed

3. Check continuity between fuse block (J/B) harness connector and ground.

Fuse block (J/B)		Ground	Continuity
Connector	Terminal		
M3	9C	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair or replace harness.

4.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between door mirror (passenger side) harness connector and ground.

Door mirror (passenger side)		Ground	Continuity
Connector	Terminal		
D33	8	Ground	Existed

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

5.CHECK PASSENGER SIDE DOOR MIRROR DEFOGGER

Check passenger side door mirror defogger.
Refer to [DEF-21, "Component Inspection"](#)

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Replace door mirror (passenger side). Refer to [MIR-21, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#)

6.CHECK INTERMITTENT INCIDENT

Check intermittent incident.
Refer to [GI-43, "Intermittent Incident"](#)

>> INSPECTION END.

Component Inspection

INFOID:000000006469713

1.CHECK PASSENGER DOOR MIRROR DEFOGGER

1. Turn ignition switch OFF.
2. Disconnect door mirror (passenger side) connector.
3. Check continuity between door mirror terminals.

Door mirror (passenger side)			Continuity
Connector	Terminal		
D33	4	8	Existed

Is the inspection result normal?

- YES >> INSPECTION END.
NO >> Replace door mirror (passenger side). Refer to [MIR-21, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#).


REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER SYSTEM

Wiring Diagram - DEFOGGER -

INFOID:000000006469714

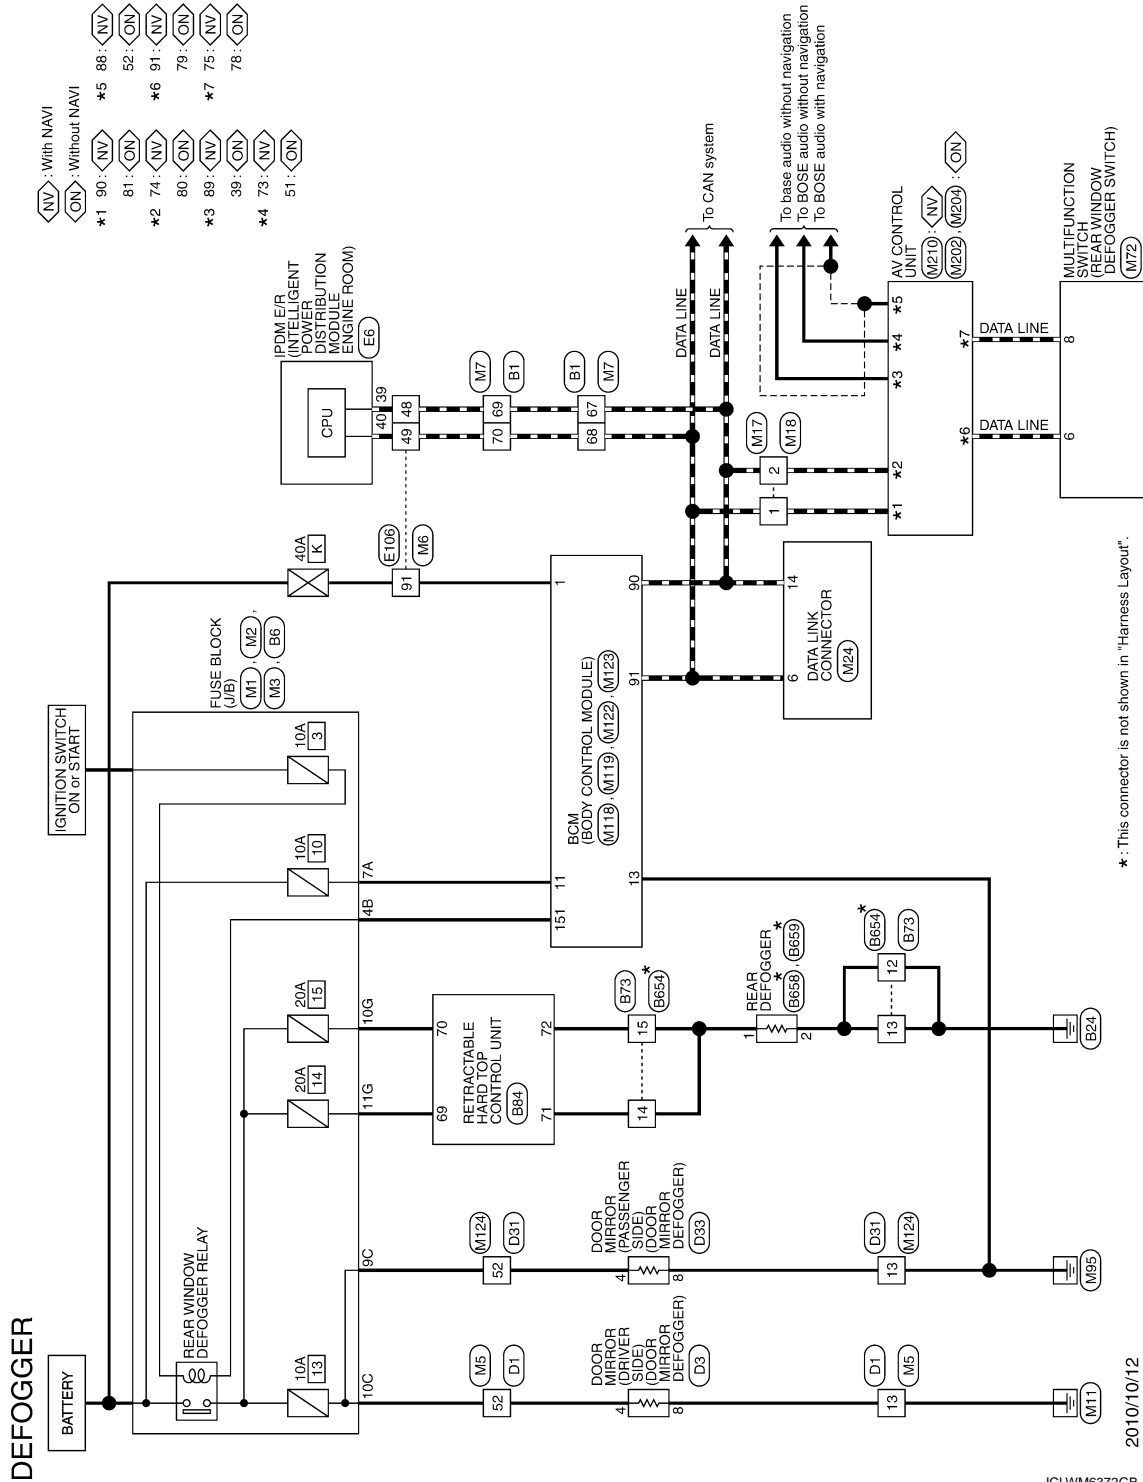


REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80PW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	L	-
3	R	-
4	V	-
5	W	-
6	B	-
8	G	-
9	G	-
10	BR	-
12	SHIELD	-
13	Y	-
14	L	-
15	R	-
16	W	-
17	BR	-
20	G	-
21	SB	-
22	GR	-
23	W	-
24	SB	-
25	BR	-
26	LG	-
27	Y	-
28	R	-
29	V	-
31	SHIELD	-
32	G	-
33	R	-
34	BG	-
35	GR	-
36	BR	-
37	P	- [With climate controlled seat]
37	Y	- [Without climate controlled seat]
38	V	- [With climate controlled seat]
38	GR	- [Without climate controlled seat]
40	SHIELD	-
41	L	-
42	P	-
43	SHIELD	-

44	SB	-
45	V	-
46	W	-
47	SB	-
48	LG	-
49	LG	- [With BOSE system]
49	Y	- [Without BOSE system]
50	SB	- [With BOSE system]
50	LG	- [Without BOSE system]
51	SB	-
52	G	-
53	LG	-
54	BR	-
55	Y	-
56	W	-
57	V	-
58	R	-
60	R	-
61	BG	-
62	B	-
63	L	-
64	P	-
65	B	-
66	SB	-
67	P	-
68	L	-
69	P	-
70	L	-
80	G	-
81	V	-
82	R	-
83	BR	-
84	G	-
85	L	-
86	Y	-
87	GR	-
88	GR	-
89	EG	-
94	P	-
95	GR	-
96	GR	-
97	SB	-
99	Y	-
100	Y/B	-

Connector No.	B6
Connector Name	FUSE BLOCK (U/B)
Connector Type	MS12FBR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
5G	LG	-
6G	G	-
10G	P	-
11G	G	-
12G	Y	-

Connector No.	B7/3
Connector Name	WIRE TO WIRE
Connector Type	MS18FGY-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	G	-
3	BG	-
4	Y	-
5	R	-
6	P	-
7	B	-
12	B	-
13	B	-
14	BR	-
15	W	-
16	GR	-

Connector No.	B84
Connector Name	RETRACTABLE HARD TOP CONTROL UNIT
Connector Type	MS18FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
57	Y	BAT
58	Y	BAT
59	Y	BAT
60	B	BAT
61	B	GND
62	GR	BAT (POWER WINDOW)
63	Y	BAT (POWER WINDOW)
64	B	BAT (POWER WINDOW)
65	B	GND (POWER WINDOW)
66	P	GND (POWER WINDOW)
67	SB	SWITCHING VALVE 1
68	L	SWITCHING VALVE 2
69	G	SWITCHING VALVE GND
70	P	REAR WINDOW DEF IN 1
71	BR	REAR WINDOW DEF IN 2
72	W	REAR WINDOW DEF OUT 1
		REAR WINDOW DEF OUT 2

JCLWM6373GB

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER

Connector No.	B654
Connector Name	WIRE TO WIRE
Connector Type	NS16MGY-CS



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	-	-
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-

Connector No.	B653
Connector Name	REAR DEFOGGER
Connector Type	P01FE-A



1

Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-

Connector No.	B659
Connector Name	REAR DEFOGGER
Connector Type	P01FE-A



2

Terminal No.	Color of Wire	Signal Name [Specification]
2	-	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1

Terminal No.	4
Color of Wire	BR
Signal Name [Specification]	-



Terminal No.	Color of Wire	Signal Name [Specification]
5	P	- [A/T models with automatic drive positioner]
5	B	- [Except for A/T models with automatic drive positioner]
6	SB	-
7	R	-
8	C	-
9	P	-
10	LG	-
11	W	-
12	L	-
13	B	-
14	V	-
15	Y	-
16	Y/B	-
17	Y	-
20	V	-
21	R	-
22	P	-
23	O	-
24	Y	-
25	SB	-

26	GR	-
27	GR	-
28	LG	-
28	G	-
30	Y	-
31	W	-
32	BR	-
33	L	-
34	R	-
35	V	-
37	B	-
38	O	-
39	GR	-
40	G	-
41	Y	-
42	LG	-
43	BR	-
44	V	-
45	P	-
46	W	-
47	V	-
48	P	-
49	W	-
50	SB	-
51	R	-
52	L	-

Connector No.	D3
Connector Name	DOOR MIRROR (DRIVER SIDE)
Connector Type	TH12MW-NH



5	6	7	2	1	4
12	11	10	9	18	18

Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	- [With automatic drive positioner]
1	P	- [Without automatic drive positioner]
2	O	- [With automatic drive positioner]
2	SB	- [Without automatic drive positioner]
4	L	-
5	O	- [With automatic drive positioner]
5	W	- [Without automatic drive positioner]
6	GR	- [With automatic drive positioner]
6	BR	- [Without automatic drive positioner]
7	G	- [With automatic drive positioner]

7	V	- [Without automatic drive positioner]
8	B	-
9	P	-
10	BR	-
11	W	-
12	V	-

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1

Terminal No.	Color of Wire	Signal Name [Specification]
6	BR	-
7	R	-
8	G	-
9	P	-
10	LG	-
11	W	-
12	L	-
13	B	-
14	Y	-
15	W	-
34	Y	-
35	Y/B	-
38	O	-
39	GR	-
40	G	-
41	V	-
42	LG	-
43	BR	-
44	V	-
45	P	-
46	W	-
47	V	-
48	P	-
49	W	-
50	SB	-
51	R	-
52	L	-
53	O	-
54	GR	-
55	G	-

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER

Connector No.	D33
Connector Name	DOOR MIRROR (PASSENGER SIDE)
Connector Type	TH12MW-NH



5	6	7	2	1	4
12	11	10	9	8	

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	- [With automatic drive positioner]
2	Y	- [Without automatic drive positioner]
3	LG	- [With automatic drive positioner]
4	L	- [Without automatic drive positioner]
5	O	- [With automatic drive positioner]
6	GR	- [Without automatic drive positioner]
7	G	- [With automatic drive positioner]
8	G	- [Without automatic drive positioner]
9	O	- [With automatic drive positioner]
10	P	-
11	BR	-
12	V	-

Connector No.	E6
Connector Name	SMALL INTELLIGENT POWER DISTRIBUTION MODULE (FUSE BLOCK)
Connector Type	TH08FYV-NH



42	41	40	39
46	45	44	43

Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/W	-
42	Y	-
43	SB	-
44	LG	-

45	G
46	W

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80PW-CS16-TM4



4	3	2	1
8	7	6	5
12	11	10	9
16	15	14	13
20	19	18	17
24	23	22	21
28	27	26	25
32	31	30	29
36	35	34	33
40	39	38	37
44	43	42	41
48	47	46	45

Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
3	EG	-
4	B/W	-
5	G	-
6	EG	-
7	LG	-
8	G	-
9	R	-
10	W	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	V	-
18	BG	-
19	GR	-
20	LG	-
30	R	-
31	L	-
32	EG	-
33	P	-
34	V	-
35	BR	-
36	W	-
37	Y	-
38	R	-
39	B	-
40	G	-
41	W	-
42	LG	-
43	SR	-
44	GR	-

45	BG
46	LG
47	V
48	P
49	L
59	B
66	LG
67	SB
68	R
69	W
70	G
80	W
81	P
92	G
93	V
94	L
95	Y
97	BR
98	SHIELD
99	L
100	P

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS08FYV-M2



3A	2A	1A
6A	7A	5A

Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	BR	-

6A	Y
7A	GR
8A	L

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



4B	3B	2B	1B
10B	9B	8B	7B
6B	5B	4B	3B

Terminal No.	Color of Wire	Signal Name [Specification]
1B	R	-
3B	P	-
4B	G	-
5B	EG	-
6B	Y	-
7B	P	-
8B	R	-
9B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



5C	4C	3C	2C	1C
12C	11C	10C	9C	8C
7C	6C	5C	4C	3C

Terminal No.	Color of Wire	Signal Name [Specification]
6C	R	-
7C	B	-
8C	W	-
9C	BG	-
10C	L	-
11C	LG	-
12C	R	-

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH80MM-CS15




1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40	41	42	43	44	45

Terminal No.	Color of Wire	Signal Name [Specification]
4	R	-
5	B	-
6	BG	-
7	W	-
8	B	-
9	G	-
10	V	-
11	W	-
12	L	-
13	B	-
14	GR	-
15	Y	-
16	Y/B	-
17	Y	-
20	BG	-
21	W	-
22	P	-
23	BG	-
24	V	-
25	BR	-
26	R	-
27	P	-
28	LG	-
29	SB	-
30	G	-
31	V	-
32	BR	-
33	GR	-
34	G	-
35	L	-
37	B	-
38	G	- [With automatic drive positioner]
38	L	- [Without automatic drive positioner]
39	BR	- [With automatic drive positioner]
39	L	- [Without automatic drive positioner]
40	Y	-
41	BR	- [With automatic drive positioner]
41	G	- [Without automatic drive positioner]

42	R	-
43	G	-
44	Y	-
45	GR	-
46	BR	-
47	V	-
48	LG	-
49	P	-
50	SB	-
51	GR	-
52	L	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MM-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	-
3	R	-
4	G	-
5	G	-
6	BR	-
7	BR	-
8	Y	-
9	R	-
10	W	-
11	GR	-
12	R	-
13	L	-
14	G	-
15	P	-
16	W	-
17	BR	-
18	V	-
19	BG	-
20	L	-
30	R	-
31	L	-
32	Y	-
33	GR	-
34	P	-
35	BR	-

36	BR	-
37	Y	-
38	LG	-
39	SB	-
40	G	-
41	W	-
42	LG	-
43	P	-
44	GR	- [With A/T]
44	R	- [With M/T]
45	BG	-
46	G	-
47	P	-
48	P	-
49	L	-
59	B	-
66	Y	-
67	G	-
68	R	-
69	W	-
70	G	-
80	SB	-
81	R	-
82	V	-
83	W	-
84	L	-
85	BG	-
86	G	-
87	V	-
88	B	-
89	SB	-
90	G	-
91	W	-
92	B	-
93	G	-
94	L	-
95	BR	-
96	L	-
97	P	-
98	SHIELD	-
99	V	-
100	SB	-


JCLWM6376GB

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS (F-TM4)



Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	-
2	LG	-
3	G	-
4	Y	-
5	L	-
6	B	-
8	L	-
9	L	-
10	BR	-
12	SHIELD	-
13	V	-
14	BR	-
15	GR	-
16	LG	-
17	L	-
20	BR	-
21	G	-
22	R	-
23	SB	-
24	B	-
25	W	-
26	Y	-
27	V	-
28	P	-
29	V	-
31	SHIELD	-
32	G	-
33	R	-
34	BG	-
35	GR	-
36	BR	-
37	P	- [With climate controlled seat]
37	L	- [Without climate controlled seat]
38	V	- [With climate controlled seat]
38	GR	- [Without climate controlled seat]
40	SHIELD	-
41	L	-
42	P	-
43	SHIELD	-


44	Y	-
45	BR	-
46	SB	-
47	SB	-
48	LG	-
49	LG	- [With BOSE system]
49	SB	- [Without BOSE system]
50	SB	- [With BOSE system]
50	LG	- [Without BOSE system]
51	R	-
52	V	-
53	P	-
54	BR	-
55	Y	- [With A/T]
55	BG	- [Without A/T]
56	L	-
57	V	-
58	R	-
60	LG	-
61	BG	-
62	B	-
64	SB	-
65	BR	-
66	Y	-
67	P	-
68	L	-
69	P	-
70	L	-
80	G	-
81	LG	-
82	Y	-
83	BR	-
84	V	-
85	L	-
86	Y	-
87	GR	-
91	R	-
93	G	-
94	P	-
95	GR	-
96	Y	-
97	SB	-
99	Y	-
100	Y/B	-

Connector No.	M17
Connector Name	WIRE TO WIRE
Connector Type	TKG2FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	P	-

Connector No.	M18
Connector Name	WIRE TO WIRE
Connector Type	TKG2MW



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	P	-


Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color of Wire	Signal Name [Specification]
3	LG	-
4	B	-

5	BR	-
6	L	-
7	V	-
8	G	-
11	SB	-
14	P	-
16	R	-

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH18FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
3	L	ACC
4	BG	ILL
5	V	ILL CONT
6	SB	AV COMM (H)
8	LG	AV COMM (L)
9	BR	SW GND
14	SB	DISK EJECT SIGNAL
16	G	HAZARD ON

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	BG	POWER WINDOW POWER SUPPLY (RAP)

JCLWM6377GB

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS16FW-CS



4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19

Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	P	PASSENGER DOOR UNLOCK OUTPUT
7	SB	STEP LAMP
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
11	GR	BAT (FUSE)
13	B	GND
14	W	PUSH-BUTTON IGNITION SW ILL GND
15	EG	ACC IND
17	BR	TURN SIGNAL RH (FRONT)
18	EG	TURN SIGNAL LH (FRONT)
19	V	ROOM LAMP TIMER CONTROL

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
72	R	ROOM ANT 2-
73	G	ROOM ANT 2+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT 1-
79	BR	ROOM ANT 1+
80	GR	NATS ANTENNA AMP
81	W	NATS ANTENNA AMP

82	R	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMM
87	Y	COMBI SW INPUT 5
88	EG	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	V	ON IND
95	EG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
97	L	S/L CONDITION 1
98	SB	S/L CONDITION 2
99	R	ASGD CLUTCH SW (Wh M/T)
99	R	SHIFT P (Wh A/T)
100	Y	PASSENGER DOOR REQUEST SW
101	P	DRIVER DOOR REQUEST SW
102	EG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	W	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	W	COMBI SW INPUT 2
110	G	HAZARD SW
111	Y	S/L UNIT COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FC-NH



11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
112	BR	RAIN SENSOR SERIAL LINK
113	G	OPTICAL SENSOR
114	R	CLUTCH INTERLOCK SW
116	SB	STOP LAMP SW 1
118	BR	STOP LAMP SW 2
119	GR	DR DOOR UNLOCK SENSOR
121	SB	KEY SLOT SW
123	W	IGN F/B
124	EG	PASSENGER DOOR SW
129	EG	TRUNK LID OPENER CANCEL SW
132	LG	P/W SW & RHT C/U COMM

133	Y	PUSH-BUTTON IGNITION SW ILL POWER
134	LG	LOCK IND
137	BG	RECEIVER / SENSOR GND
138	Y	RECEIVER / SENSOR POWER SUPPLY
139	L	TIRE PRESSURE RECEIVER COMM
140	GR	SHIFT IN/P
141	R	SECURITY INDICATOR LAMP
142	BR	COMBI SW OUTPUT 5
143	V	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	R	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

Connector No.	M124
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
6	BG	
7	R	
8	G	
9	P	
10	V	
11	SB	- [With BOSE system]
11	GR	- [Without BOSE system]
12	BR	
13	B	
14	G	
15	W	
34	Y	
35	Y/B	
38	W	
39	BG	
40	SB	
41	BR	- [With automatic drive positioner]
41	BR	- [Without automatic drive positioner]
42	R	
43	L	
44	Y	
44	L	
45	R	

46	W	
47	SB	
48	BR	
49	Y	
50	P	
51	LG	
52	EG	
53	Y	
54	L	
55	L	

Connector No.	M202
Connector Name	AV CONTROL UNIT
Connector Type	TH24FW-NH



36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
36	BG	SIGNAL VCC
37	LG	SIGNAL GND
38	R	HP
39	L	COMM (DISP->CONT)
40	B	RGB AREA (YS) SIGNAL
41	SHIELD	SHIELD
42	W	RGB SYNC
43	G	RGB (R/RED) SIGNAL
44	L	RGB (G/GREEN) SIGNAL
45	P	RGB (B/BLUE) SIGNAL
46	V	COMPOSITE IMAGE GND
47	SS	COMPOSITE IMAGE SIGNAL
48	Y	INVERTER VCC
49	BR	INVERTER GND
50	G	VP
51	P	COMM (CONT->DISP)
52	SHIELD	SHIELD
57	SHIELD	SHIELD
58	SHIELD	SHIELD

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

DEFOGGER

Connector No.	M204
Connector Name	AV CONTROL UNIT
Connector Type	TH22FV-NH



76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91
LG	SB	LG	L	SB	LG	SB	P	L	BR	SHIELD	L	GR	SB	SB	SB

75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92
LG	LG	L	G	G	BG	GR	SHIELD	R	SHIELD	L	L	SB	SB	L	SB	SB	
	AV COMM (L)	AV COMM (L)	ILLUMINATION	IGNITION	REVERSE SIGNAL	VEHICLE SPEED (8-PULSE)	SHIELD	MICROPHONE SIGNAL	SHIELD	COMM (DISP->CONT)	CAN-H	AV COMM (H)	AV COMM (H)				

Terminal No.	Color of Wire	Signal Name [Specification]
76	LG	AV COMM (L)
77	SB	AV COMM (H)
78	LG	AV COMM (L)
79	SB	AV COMM (H)
80	P	CAN-L
81	L	CAN-H
82	BR	SW GND
86	SHIELD	SHIELD
87	L	TEL VOICE SIGNAL (+)
88	P	TEL VOICE SIGNAL (-)
92	GR	VEHICLE SPEED (8-PULSE)
93	SB	PARKING BRAKE
94	BG	REVERSE
95	G	IGNITION
96	SB	DISK EJECT SIGNAL

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TH22FV-NH



61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76
SB	SB	P	L	SHIELD	G	P	SB	G	P	P	P	P	P	P	P

Terminal No.	Color of Wire	Signal Name [Specification]
65	SB	PARKING BRAKE
67	P	COMPOSITE IMAGE GND
68	L	COMPOSITE IMAGE SIGNAL
71	SHIELD	MICROPHONE SHIELD
72	G	MICROPHONE VCC
73	P	COMM (CONT->DISP)
74	P	CAN-L

JCLWM6379GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000006965877

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT/AUTO	Off
	Front wiper switch INT/AUTO	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper volume dial is in a dial position 1 - 7	Wiper volume dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	NOTE: The item is indicated, but not monitored.	Off

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
DOOR SW-RL	NOTE: The item is indicated, but not monitored.	Off	A
DOOR SW-BK	NOTE: The item is indicated, but not monitored.	Off	B
CDL LOCK SW	Other than power door lock switch LOCK	Off	C
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	D
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off	E
	Driver door key cylinder LOCK position	On	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off	F
	Driver door key cylinder UNLOCK position	On	
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off	G
HAZARD SW	Hazard switch is OFF	Off	H
	Hazard switch is ON	On	
REAR DEF SW	NOTE: The item is indicated, but not monitored.	Off	I
H/L WASH SW	NOTE: The item is indicated, but not monitored.	Off	J
TR CANCEL SW	Trunk lid opener cancel switch OFF	Off	K
	Trunk lid opener cancel switch ON	On	
TR/BD OPEN SW	Trunk lid opener switch OFF	Off	DEF
	While the trunk lid opener switch is turned ON	On	
TRNK/HAT MNTR	Trunk lid closed	Off	M
	Trunk lid opened	On	
RKE-LOCK	LOCK button of the Intelligent Key is not pressed	Off	N
	LOCK button of the Intelligent Key is pressed	On	
RKE-UNLOCK	UNLOCK button of the Intelligent Key is not pressed	Off	O
	UNLOCK button of the Intelligent Key is pressed	On	
RKE-TR/BD	TRUNK OPEN button of the Intelligent Key is not pressed	Off	P
	TRUNK OPEN button of the Intelligent Key is pressed	On	
RKE-PANIC	PANIC button of the Intelligent Key is not pressed	Off	
	PANIC button of the Intelligent Key is pressed	On	
RKE-P/W OPEN	UNLOCK button of the Intelligent Key is not pressed	Off	
	UNLOCK button of the Intelligent Key is pressed and held	On	
RKE-MODE CHG	LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously	Off	
	LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously	On	
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	
	Dark outside of the vehicle	Close to 0 V	
REQ SW -DR	Driver door request switch is not pressed	Off	
	Driver door request switch is pressed	On	
REQ SW -AS	Passenger door request switch is not pressed	Off	
	Passenger door request switch is pressed	On	
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Trunk lid opener request switch is not pressed	Off
	Trunk lid opener request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off
CLUCH SW	The clutch pedal is not depressed	Off
	The clutch pedal is depressed	On
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW	<ul style="list-style-type: none"> • Selector lever in P position (Except M/T models) • The clutch pedal is depressed (M/T models) 	Off
	<ul style="list-style-type: none"> • Selector lever in any position other than P (Except M/T models) • The clutch pedal is not depressed (M/T models) 	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK NOTE: For models without steering lock unit, this item is not monitored.	Steering is unlocked	Off
	Steering is locked	On
S/L -UNLOCK NOTE: For models without steering lock unit, this item is not monitored.	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-F/B NOTE: For models without steering lock unit, this item is not monitored.	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	<ul style="list-style-type: none"> • Selector lever in any position other than P and N (Except M/T models) • The clutch pedal is not depressed (M/T models) 	Off
	<ul style="list-style-type: none"> • Selector lever in P or N position • The clutch pedal is depressed 	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
SFT P -MET	Selector lever in any position other than P	Off	A
	Selector lever in P position	On	
SFT N -MET	Selector lever in any position other than N	Off	B
	Selector lever in N position	On	
ENGINE STATE	Engine stopped	Stop	
	While the engine stalls	Stall	C
	At engine cranking	Crank	
	Engine running	Run	D
S/L LOCK-IPDM NOTE: For models without steering lock unit, this item is not monitored.	Steering is unlocked	Off	
	Steering is locked	On	E
S/L UNLK-IPDM NOTE: For models without steering lock unit, this item is not monitored.	Steering is locked	Off	
	Steering is unlocked	On	F
S/L RELAY-REQ NOTE: For models without steering lock unit, this item is not monitored.	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK	Off	G
	Steering lock system are not the LOCK condition or the changing condition from LOCK to UNLOCK	On	H
VEH SPEED 1	While driving	Equivalent to speedometer reading	I
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DOOR STAT-DR	Driver door is locked	LOCK	J
	Wait with selective UNLOCK operation (60 seconds)	READY	
	Driver door is unlocked	UNLOCK	
DOOR STAT-AS	Passenger door is locked	LOCK	K
	Wait with selective UNLOCK operation (60 seconds)	READY	
	Passenger door is unlocked	UNLOCK	DEF
ID OK FLAG	Driver side door is open after ignition switch is turned OFF (Selector lever is in the P position except for M/T models)	Reset	
	Ignition switch ON	Set	M
PRMT ENG STRT	The engine start is prohibited	Reset	
	The engine start is permitted	Set	
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset	N
KEY SW -SLOT	The Intelligent Key is not inserted into key slot	Off	
	The Intelligent Key is inserted into key slot	On	O
RKE OPE COUN1	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key	
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—	P
CONFRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done	

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


TERMINAL LAYOUT

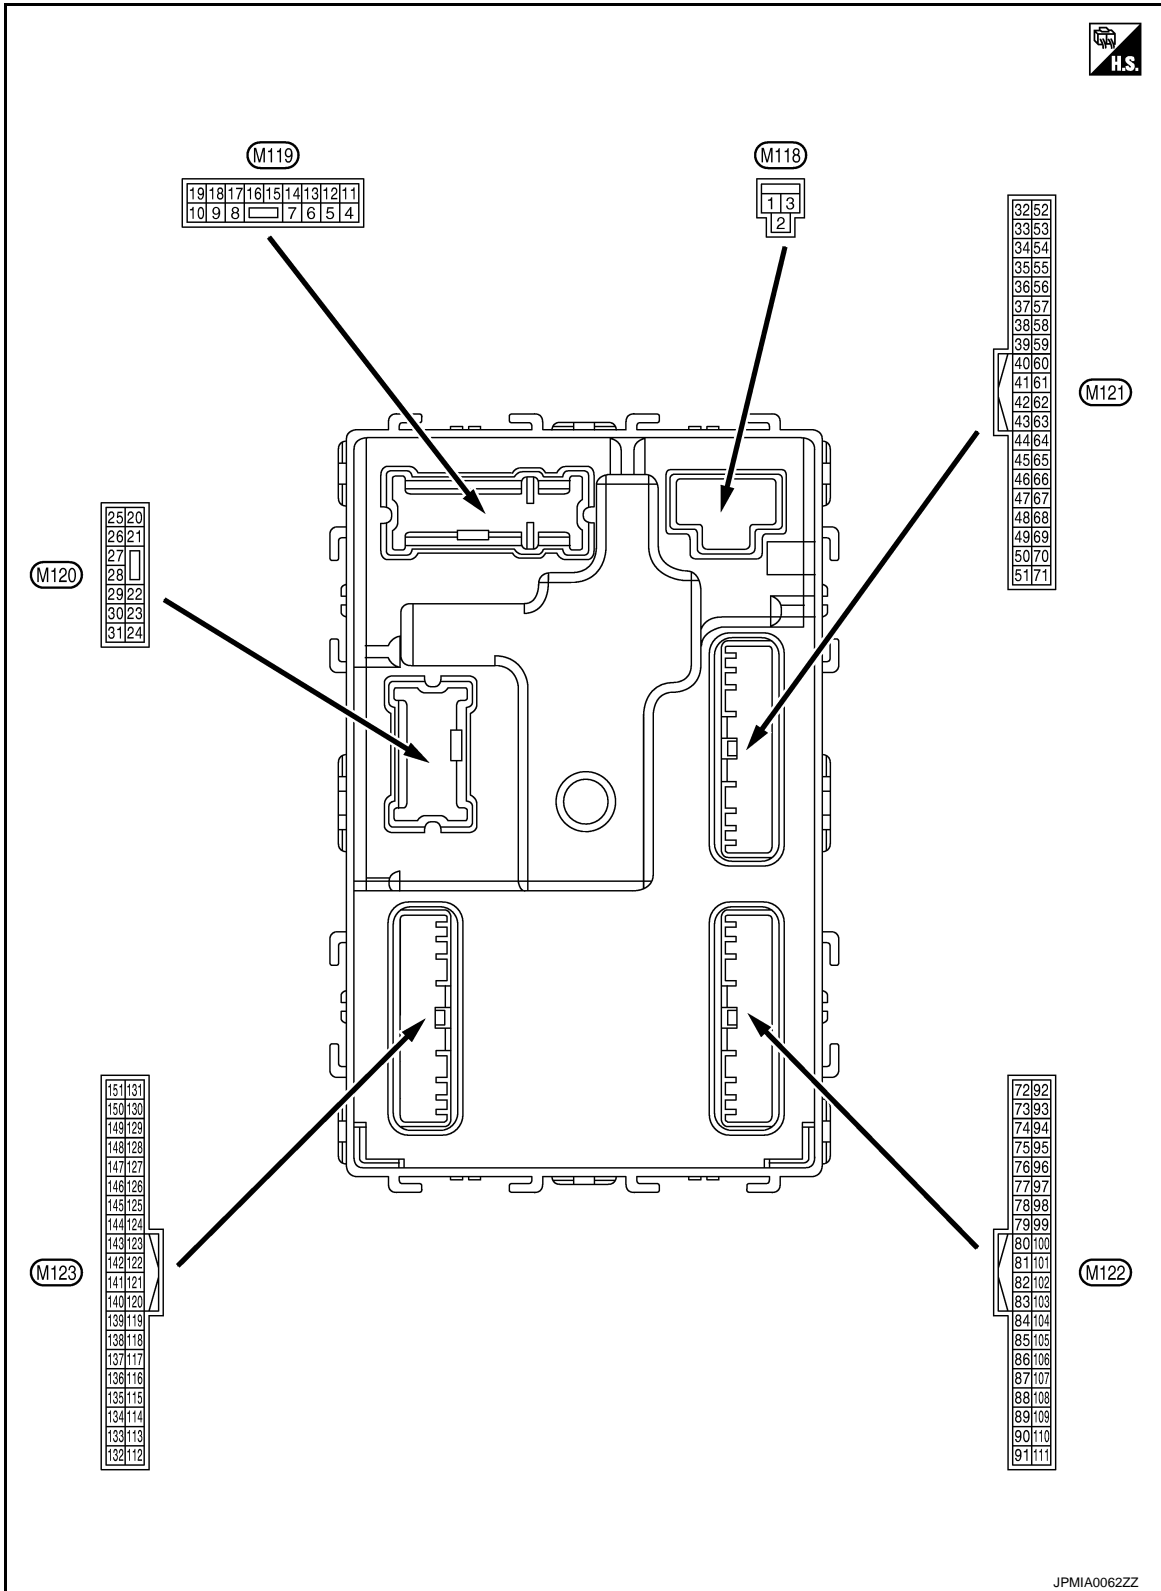

PHYSICAL VALUES





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

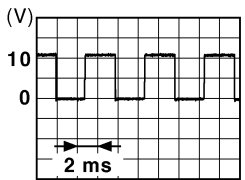Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		12 V
3 (BG)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		12 V
4 (LG)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		12 V
5 (P)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
7 (SB)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	12 V
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	12 V
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
11 (GR)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (W)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p style="text-align: center;">NOTE: When the illumination brightening/dimming level is in the neutral position.</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (BG)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

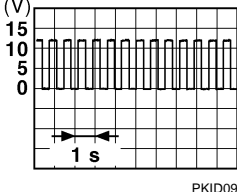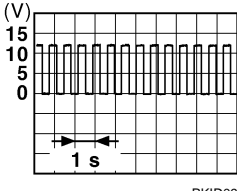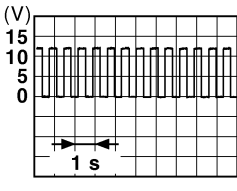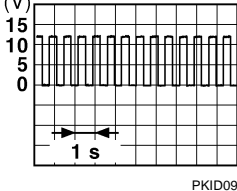Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
17 (BR)	Ground	Turn signal RH (Front)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 6.5 V
18 (BG)	Ground	Turn signal LH (Front)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 6.5 V
19 (V)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	12 V
					ON	0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 6.5 V
23 (Y)	Ground	Trunk lid open	Output	Trunk lid	OPEN (Trunk lid opener actuator is activated)	12 V
					Other than OPEN (Trunk lid opener actuator is not activated)	0 V
25 (Y)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 6.5 V
30 (P)	Ground	Trunk room lamp	Output	Trunk room lamp	ON	0 V
					OFF	12 V





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (SB)	Ground	Trunk room antenna (-)	Output	Ignition switch OFF	<p>JMKIA0062GB</p>
					<p>JMKIA0063GB</p>
35 (V)	Ground	Trunk room antenna (+)	Output	Ignition switch OFF	<p>JMKIA0062GB</p>
					<p>JMKIA0063GB</p>
38 (B)	Ground	Rear bumper antenna (-)	Output	When the trunk lid opener request switch is operated with ignition switch OFF	<p>JMKIA0062GB</p>
					<p>JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


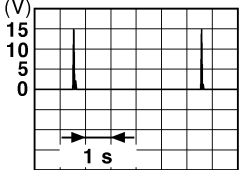
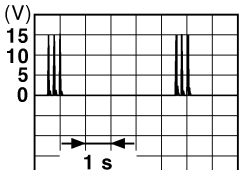
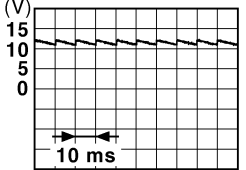
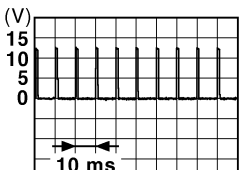
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
39 (W)	Ground	Rear bumper antenna (+)	Output	When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>	
				When the trunk lid opener request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>	
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	12 V
				ON	0 V	
50 (G)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (Trunk lid is closed)	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					ON (Trunk lid is opened)	0 V
52 (BR)	Ground	Starter relay control	Output	Ignition switch ON (A/T models)	When selector lever is in P or N position	12 V
					When selector lever is not in P or N position	0 V
				Ignition switch ON (M/T models)	When the clutch pedal is depressed	Battery voltage
					When the clutch pedal is not depressed	0 V
60*1 (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
61 (SB)	Ground	Trunk lid opener request switch	Input	Trunk lid opener request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
64 (G)	Ground	Intelligent Key warning buzzer (Engine room)	Output	Intelligent Key warning buzzer (Engine room)	Sounding	0 V
					Not sounding	12 V

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

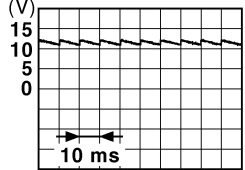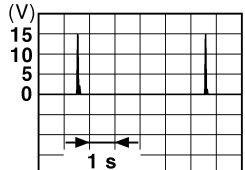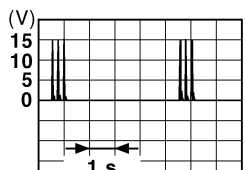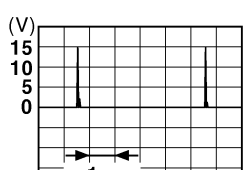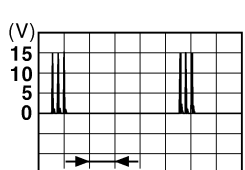Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
67 (GR)	Ground	Trunk lid opener switch	Input	Trunk lid open- er switch	Pressed	0 V
					Not pressed	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
72 (R)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
73 (G)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
74 (SB)	Ground	Passenger door antenna (-)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMkia0062GB</p>
				When the passenger door request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMkia0063GB</p>
75 (BR)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMkia0062GB</p>
				When the passenger door request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMkia0063GB</p>
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMkia0062GB</p>
				When the driver door request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMkia0063GB</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

DEF






BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
77 (LG)	Ground	Driver door antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the driver door request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
78 (Y)	Ground	Room antenna 1 (-) (Instrument panel)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
79 (BR)	Ground	Room antenna 1 (+) (Instrument panel)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)
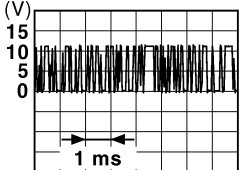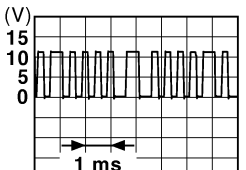
< ECU DIAGNOSIS INFORMATION >


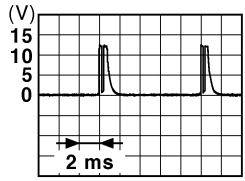
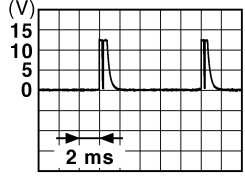
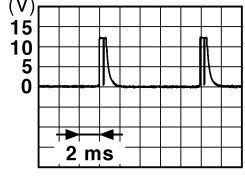
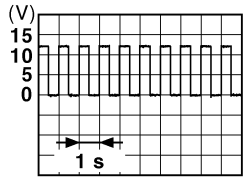
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
83 (Y)	Ground	Remote keyless entry receiver communication	Input/ Output	During waiting		 <p style="text-align: right; font-size: small;">JMKIA0064GB</p>
				When operating either button on the Intelligent Key		 <p style="text-align: right; font-size: small;">JMKIA0065GB</p>
87 (Y)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper volume dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Front fog lamp switch ON (Wiper volume dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 6 • Wiper volume dial 7 	 <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

DEF



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
88 (BG)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper volume dial 4)	 <small>JPMIA0041GB</small> 1.4 V
					Lighting switch HI (Wiper volume dial 4)	 <small>JPMIA0036GB</small> 1.3 V
					Lighting switch 2ND (Wiper volume dial 4)	 <small>JPMIA0037GB</small> 1.3 V
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 3 	 <small>JPMIA0040GB</small> 1.3 V
89*2 (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN-L	Input/ Output	—	—	
91 (L)	Ground	CAN-H	Input/ Output	—	—	
92 (LG)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	0 V
					Blinking	 <small>JPMIA0015GB</small> 6.5 V
					ON	12 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

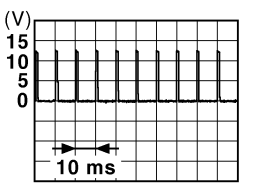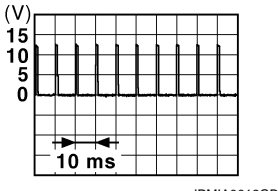Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON	0 V
95 (BG)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	12 V
96 (GR)	Ground	A/T shift selector (Detention switch) power supply	Output	—		12 V
97*2 (L)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	12 V
98*2 (SB)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	12 V
					UNLOCK status	0 V
99 (R)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	12 V
		ASCD clutch switch (M/T models without ICC)		ASCD clutch switch	OFF (Clutch pedal is depressed)	0 V
					ON (Clutch pedal is not depressed)	12 V
		ICC clutch switch (M/T models with ICC)		ICC clutch switch	OFF (Clutch pedal is depressed)	0 V
					ON (Clutch pedal is not depressed)	12 V
100 (Y)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	
101 (P)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	
102 (BG)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
103 (LG)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		12 V
106*2 (W)	Ground	Steering lock unit power supply	Output	Ignition switch	OFF or ACC	12 V
					ON	0 V






A
B
C
D
E
F
G
H
I
J
K

DEF

M
N
O
P

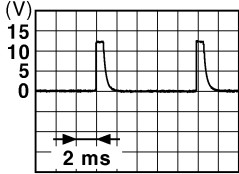

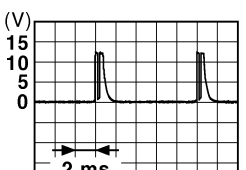
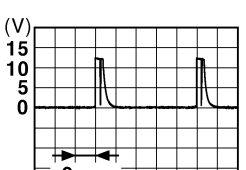
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper volume dial 4)	All switches OFF	 <p style="text-align: right;">1.4 V</p>
					Turn signal switch LH	 <p style="text-align: right;">1.3 V</p>
					Turn signal switch RH	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch LO	 <p style="text-align: right;">1.3 V</p>
					Front washer switch ON	 <p style="text-align: right;">1.3 V</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

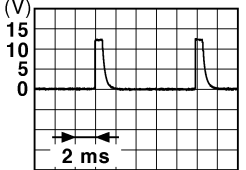



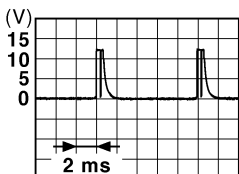
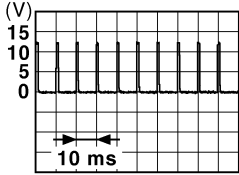
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper volume dial 4) <div style="text-align: right;">  <p>1.4 V</p> </div>
					Lighting switch AUTO (Wiper volume dial 4) <div style="text-align: right;">  <p>1.3 V</p> </div>
					Lighting switch 1ST (Wiper volume dial 4) <div style="text-align: right;">  <p>1.3 V</p> </div>
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 5 • Wiper volume dial 6 <div style="text-align: right;">  <p>1.3 V</p> </div>

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

DEF

BCM (BODY CONTROL MODULE)
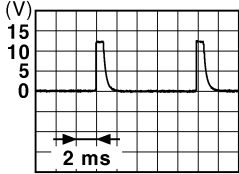
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (W)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper volume dial 4)	All switches OFF	 <p style="text-align: right;">1.4 V</p>
					Lighting switch PASS	 <p style="text-align: right;">1.3 V</p>
					Lighting switch 2ND	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch INT/ AUTO	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch HI	 <p style="text-align: right;">1.3 V</p>
					ON	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	OFF	 <p style="text-align: right;">1.1 V</p>

BCM (BODY CONTROL MODULE)





< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
111*2 (Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	12 V
					LOCK or UNLOCK	<p style="text-align: right; font-size: small;">JMKIA0066GB</p>
					For 15 seconds after UN- LOCK	12 V
				15 seconds or later after UNLOCK	0 V	
112 (BR)	Ground	Rain sensor serial link	Input/ Output	Ignition switch ON	<p style="text-align: right; font-size: small;">JPMIA0156GB</p>	
					8.7 V	
113 (G)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
114 (R)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (Clutch pedal is not depressed)	0 V
					ON (Clutch pedal is de- pressed)	Battery voltage
116 (SB)	Ground	Stop lamp switch 1	Input	—	Battery voltage	
118 (BR)	Ground	Stop lamp switch 2 (Without ICC)	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
		Stop lamp switch 2 (With ICC)		Stop lamp switch OFF (Brake pedal is not depressed) and ICC brake hold relay OFF	0 V	
				Stop lamp switch ON (Brake pedal is de- pressed) or ICC brake hold relay ON	Battery voltage	
119 (GR)	Ground	Driver side door lock assembly (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	<p style="text-align: right; font-size: small;">JPMIA0012GB</p>
						UNLOCK status (Unlock switch sensor ON)

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P






BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

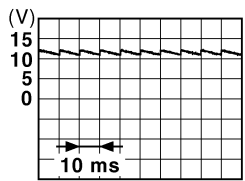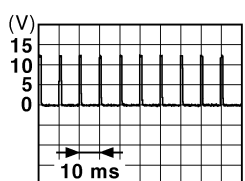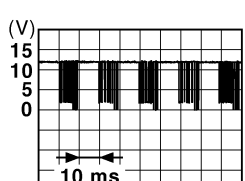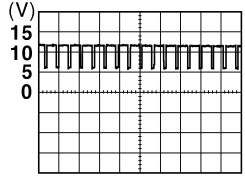Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
121 (SB)	Ground	Key slot switch	Input	When the Intelligent Key is inserted into key slot	12 V	
				When the Intelligent Key is not inserted into key slot	0 V	
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
124 (BG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	 <small>JPMIA0011GB</small> 11.8 V
					ON (Door open)	0 V
129 (BG)	Ground	Trunk lid opener cancel switch	Input	Trunk lid opener cancel switch	CANCEL	 <small>JPMIA0012GB</small> 1.1 V
					ON	0 V
132 (LG)	Ground	Power window switch and R.H.T. control unit communication	Input/ Output	Ignition switch ON	 <small>JPMIA0013GB</small> 10.2 V	
				Ignition switch OFF or ACC	12 V	
133 (Y)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON (Tail lamps OFF)	9.5 V
					ON (Tail lamps ON)	<p style="text-align: center;">NOTE: The pulse width of this wave is varied by the illumination brightening/dimming level.</p>  <small>JPMIA0159GB</small>
					OFF	0 V
134 (LG)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (BG)	Ground	Receiver and sensor ground	Input	Ignition switch ON	0 V	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

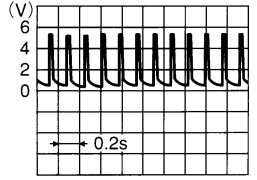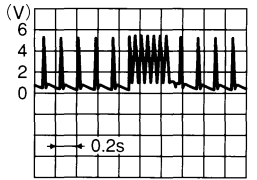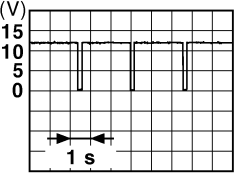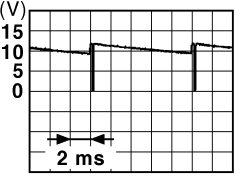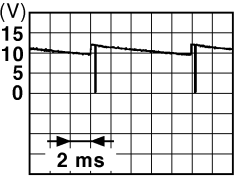Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
138 (Y)	Ground	Receiver and sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V
139 (L)	Ground	Tire pressure receiver communication	Input/ Output	Ignition switch ON	Standby state	 OCC3881D
					When receiving the signal from the transmitter	 OCC3880D
140 (GR)	Ground	Selector lever P/N position (A/T models)	Input	Selector lever	P or N position	12 V
					Except P and N positions	0 V
141 (R)	Ground	Security indicator lamp	Output	Security indicator lamp	ON	0 V
					Blinking	 JPMAI0014GB 11.3 V
					OFF	12 V
142 (BR)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
					Lighting switch 1ST	 JPMAI0031GB 10.7 V
					Lighting switch HI	
					Lighting switch 2ND	
Turn signal switch RH						
143 (V)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper volume dial 4)	0 V
					Front wiper switch HI (Wiper volume dial 4)	 JPMAI0032GB 10.7 V
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 3 • Wiper volume dial 6 • Wiper volume dial 7 	

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DEF

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper volume dial 4)	0 V
					Front washer switch ON (Wiper volume dial 4)	
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 5 • Wiper volume dial 6 	
10.7 V						
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
					Front wiper switch INT/ AUTO	
					Front wiper switch LO	
10.7 V						
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
					Front fog lamp switch ON	
					Lighting switch 2ND	
					Lighting switch PASS	
10.7 V						
150 (R)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	
					ON (Door open)	0 V
151 (G)	Ground	Rear window defog- ger relay control	Output	Rear window defogger	Active	0 V
				Not activated	Battery voltage	

*1: Without steering lock unit


*2: With steering lock unit

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - BCM -

INFOID:000000006965878

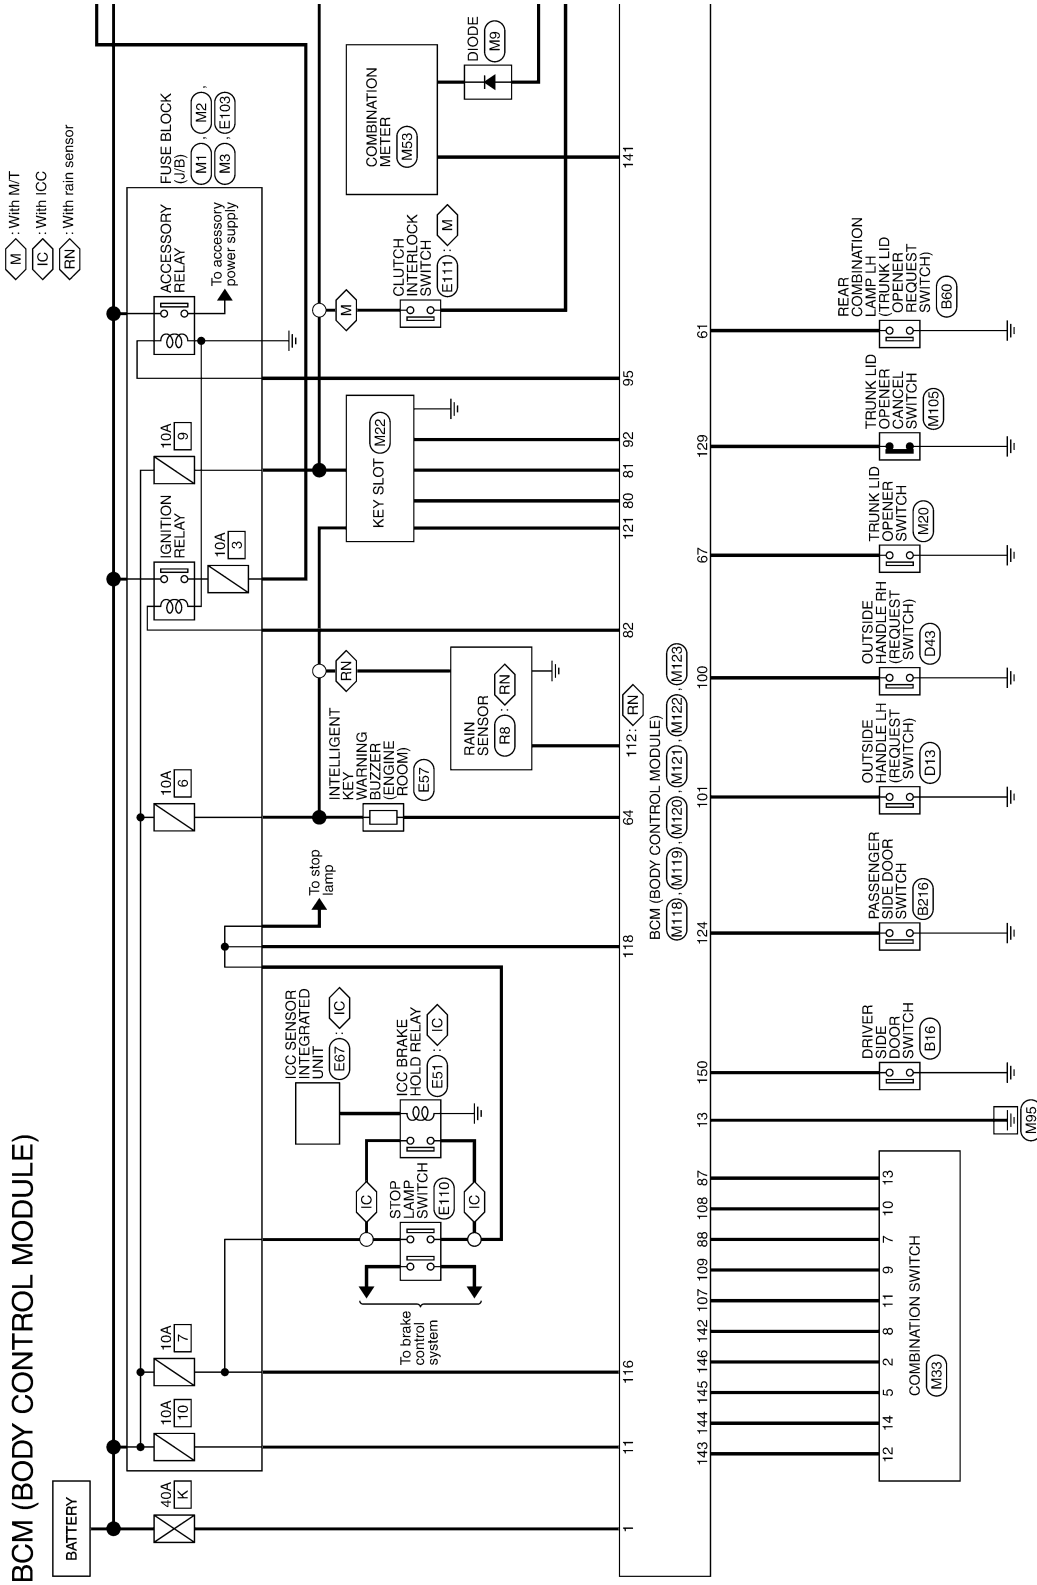

2010/10/12

JCMWN0248GB


A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

SL : With steering lock unit *1 89 : SL 60 : XS
XS : Without steering lock unit

A : With A/T *1
M : With M/T

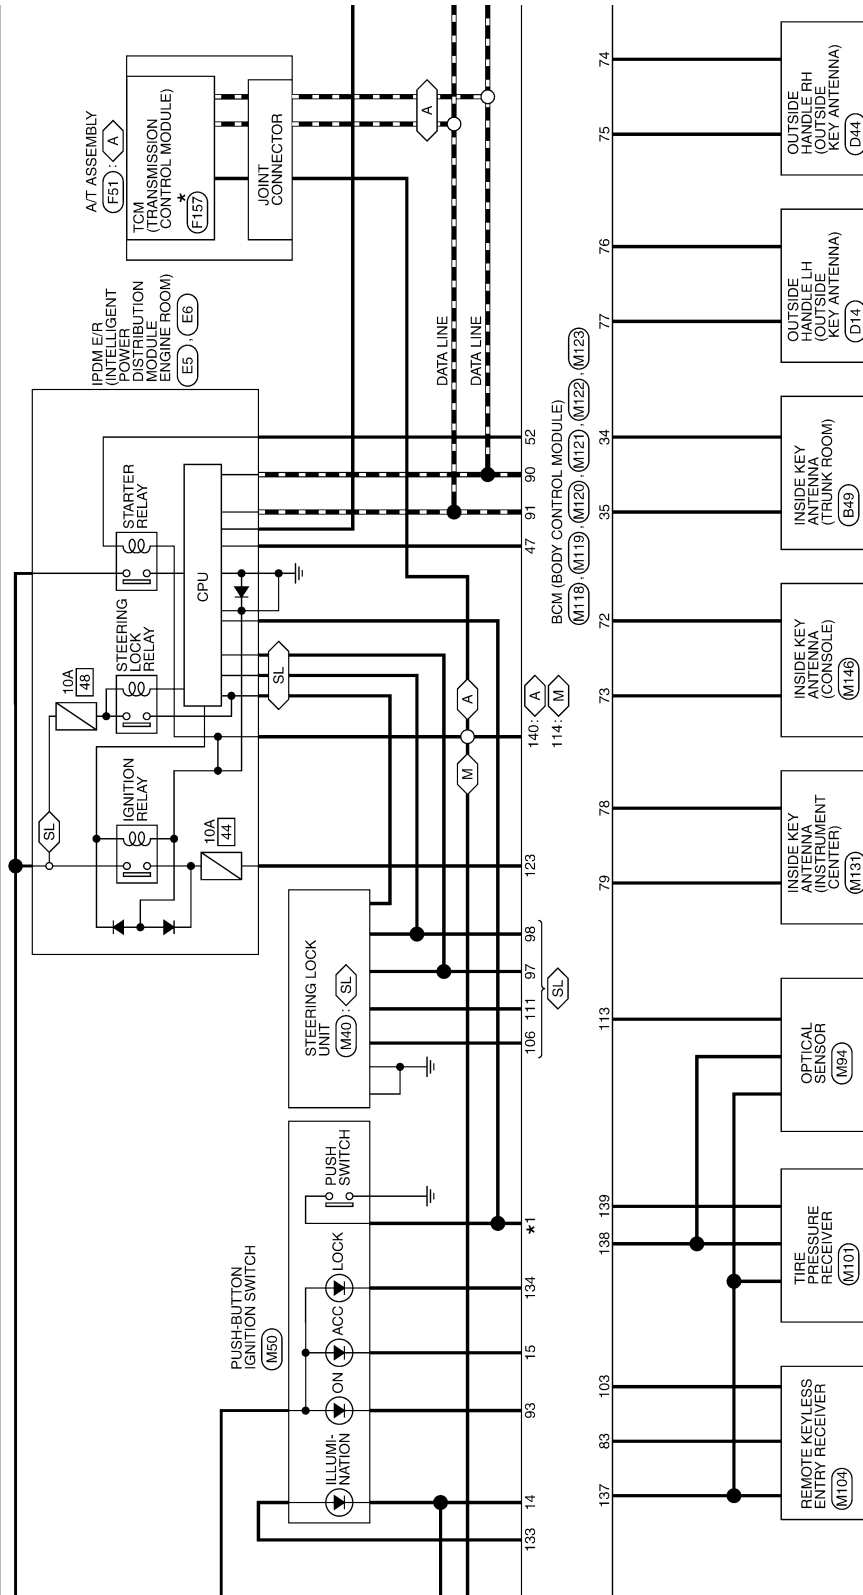


*: This connector is not shown in "Harness Layout".

JCMWN0249GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

A : With A/T
M : With M/T

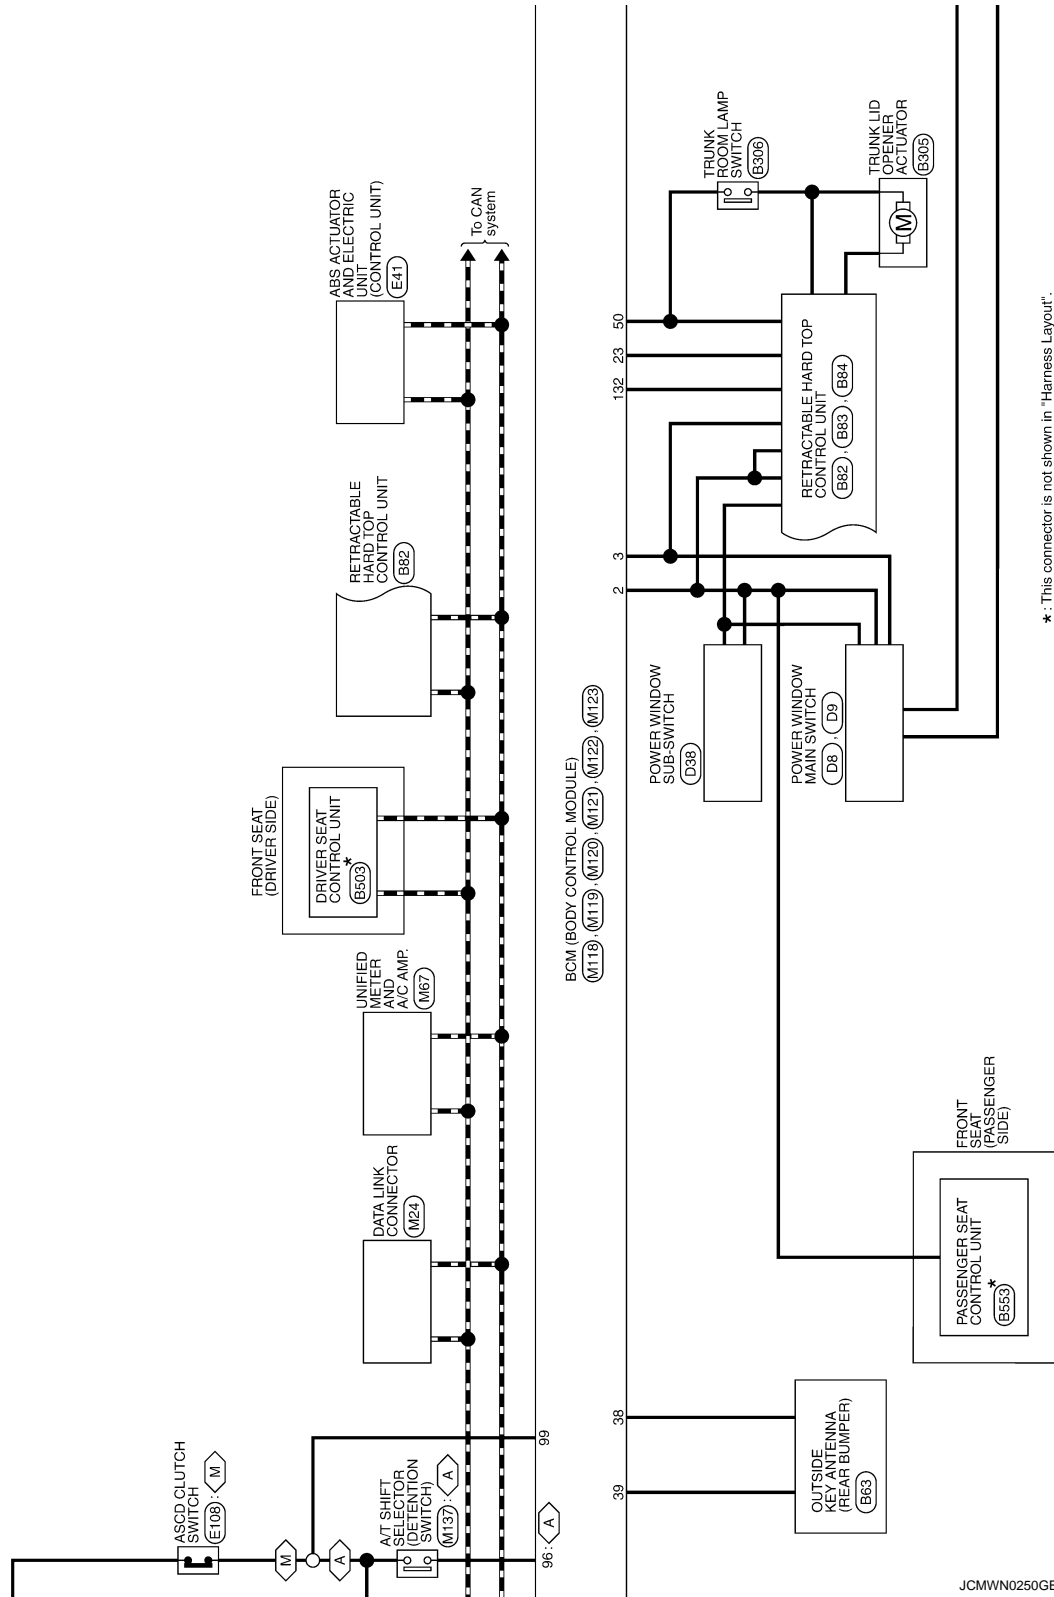


*: This connector is not shown in "Harness Layout".

JCMWN0250GB

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

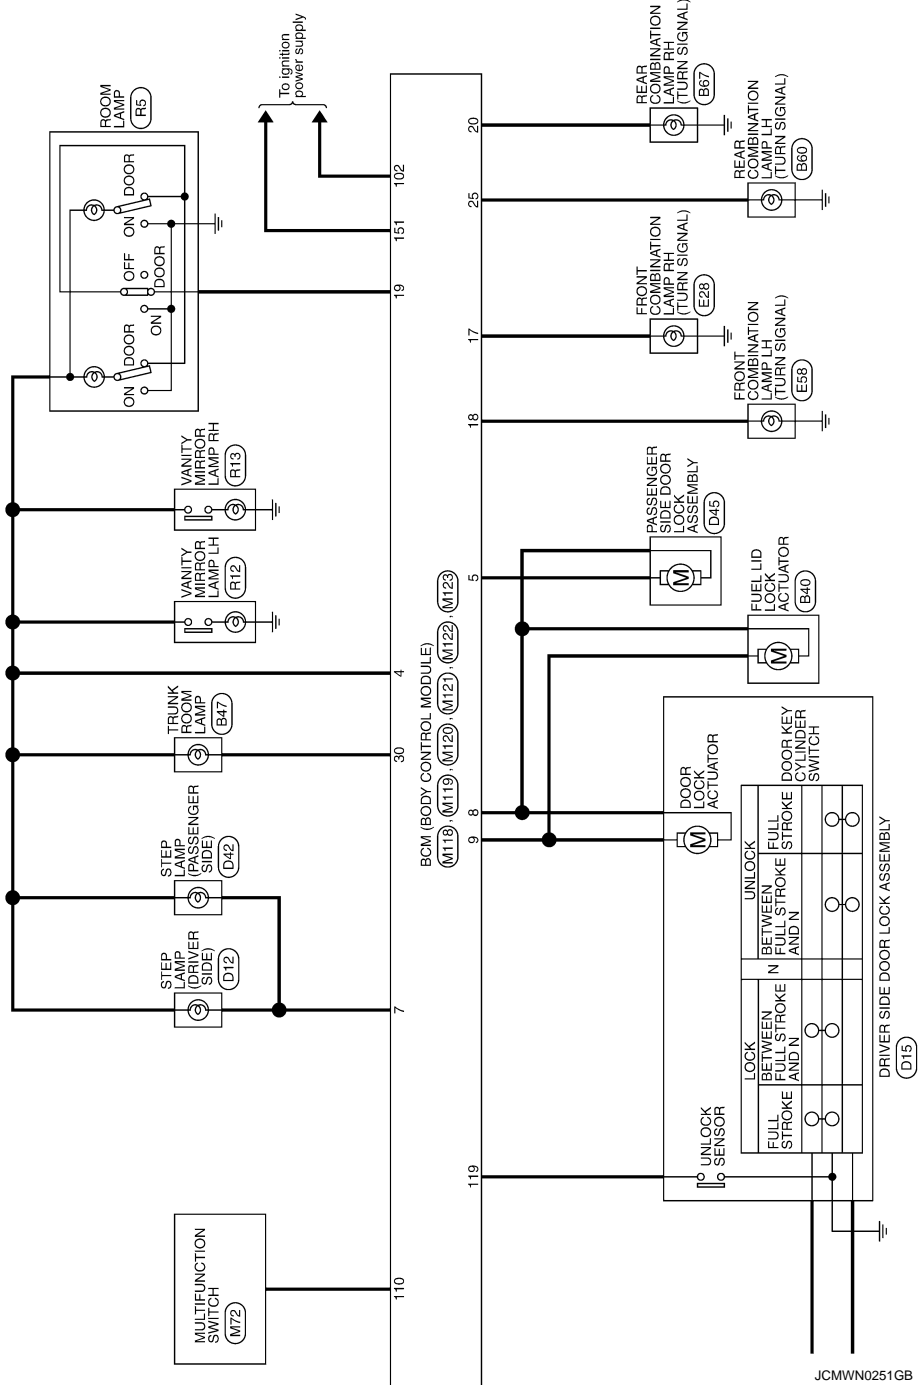


JCMWN0251GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH167V-NH




Terminal No.	Color of Wire	Signal Name [Specification]
1	P	FR WASHER (-)
2	SB	OUTPUT 4
3	L	OUTPUT 3
4	B	GND
5	EG	INPUT 3
6	BR	OUTPUT 5
7	W	INPUT 2
8	R	INPUT 4
9	LG	INPUT 1
10	V	OUTPUT 1
11	Y	INPUT 5
12	G	OUTPUT 2
13		
14		

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LG




Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	EG	POWER WINDOW POWER SUPPLY (RAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FF-CS




Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	P	PASSENGER DOOR UNLOCK OUTPUT
6	SB	STEP LAMP
7	V	ALL DOOR FUEL LID LOCK OUTPUT
8	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
9	GR	BAT (FUSE)
10	B	GND
11	W	PUSH BUTTON IGNITION SW ILL GND
12	EG	ACC IND
13	BR	TURN SIGNAL LH (FRONT)
14	Y	TURN SIGNAL RH (FRONT)
15	LG	ROOM LAMP TIMER CONTROL
16	EG	
17	V	
18		
19		

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
20	V	TURN SIGNAL RH (REAR)
21	Y	TRUNK LID OPEN OUTPUT
22	Y	TURN SIGNAL LH (REAR)
23	Y	TRUNK ROOM LAMP
24	P	
25		
26		
27		
28		
29		
30		
31		

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
34	SB	TRUNK ROOM ANT-
35	V	REAR BUMPER ANT-
36	B	REAR BUMPER ANT+
37	W	REAR BUMPER ANT+
38	Y	IGN RELAY (BDM F/R) CONT
39	Y	TRUNK ROOM LAMP SW
40	G	STARTER RELAY CONT
41	BR	PUSH SW
42	SB	TRUNK LID OPENER REQUEST SW
43	G	I-KEY WARN BUZZER (ENG ROOM)
44	GR	TRUNK LID OPENER SW
45		
46		
47		
48		
49		
50		
51		
52		
53		
54		
55		
56		
57		
58		
59		
60		
61		
62		
63		
64		
65		
66		
67		

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
72	R	ROOM ANT 2-
73	G	ROOM ANT 2+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT 1-
79	BR	ROOM ANT 1+
80	GR	NATS ANTENNA AMP
81	W	NATS ANTENNA AMP
82	R	IGN RELAY (F/B) CONT


83	Y	KEYLESS ENTRY RECEIVER COMM
87	Y	COMBI SW INPUT 5
88	EG	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	V	ACC RELAY CONT
95	EG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
97	L	S/L CONDITION 1
98	SB	S/L CONDITION 2
99	R	ASGD CLUTCH SW [With M/T]
99	R	SHIFT P [With A/T]
100	Y	PASSENGER DOOR REQUEST SW
101	P	DRIVER DOOR REQUEST SW
102	EG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	W	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	W	COMBI SW INPUT 2
110	G	HAZARD SW
111	Y	S/L UNIT COMM

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)	
Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-1N1



Terminal No.	Color of Wire	Signal Name [Specification]
112	BR	RAIN SENSOR SERIAL LINK
113	G	OPTICAL SENSOR
114	R	CLUTCH INTERLOCK SW
116	SB	STOP LAMP SW 1
118	BR	STOP LAMP SW 2
119	GR	DR DOOR UNLOCK SENSOR
121	SB	KEY SLOT SW
123	W	IGN P/B
124	EG	PASSENGER DOOR SW
129	EG	TRUNK LID OPENER CANCEL SW
132	LG	P/W SW & RHT C/U COMM
133	Y	PUSH-BUTTON IGNITION SW ILL POWER
134	LG	LOCK IND
137	EG	RECEIVER / SENSOR GND
138	Y	RECEIVER / SENSOR POWER SUPPLY
139	L	TIRE PRESSURE RECEIVER COMM
140	GR	SHIFT N/P
141	R	SECURITY INDICATOR LAMP
142	BR	COMBI SW OUTPUT 5
143	V	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	R	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

JCMWN0253GB

INFOID:000000006965879

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation	
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC	A
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC	
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC	B
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC	
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC	C
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC	
B2195: ANTI-SCANNING	Inhibit engine cranking	Ignition switch ON → OFF	
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms	D
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal 	E
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN) 	F
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (12 V) • Vehicle speed: 4 km/h (2.5 MPH) or more 	G
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (12 V) • Selector lever P/N position signal: Except P and N positions (0 V) 	H
B2604: PNP/CLUTCH SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (12 V) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF 	I
B2605: PNP/CLUTCH SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (12 V) - PNP switch signal (CAN): ON 	J
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal) 	K
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal) 	DEF
			M
			N
			O
			P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When the following steering lock conditions agree <ul style="list-style-type: none"> • BCM steering lock control status • Steering lock condition No. 1 signal status • Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (12 V) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Steering lock unit status signal (CAN) is received normally • The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: BCM	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E8: CLUTCH SW	Inhibit engine cranking	When any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Clutch switch signal (CAN from ECM): ON - Clutch interlock switch signal: OFF (0 V) • Status 2 <ul style="list-style-type: none"> - Clutch switch signal (CAN from ECM): OFF - Clutch interlock switch signal: ON (Battery voltage)
B26E9: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> • Steering condition No. 1 signal: LOCK (0 V) • Steering condition No. 2 signal: LOCK (12 V)

DTC Inspection Priority Chart

INFOID:000000006965880

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> • U1000: CAN COMM • U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI-SCANNING

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Priority	DTC	A
4	<ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP/CLUTCH SW • B2605: PNP/CLUTCH SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2612: S/L STATUS • B2614: BCM • B2615: BCM • B2616: BCM • B2617: BCMC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E8: CLUTCH SW • B26E9: S/L STATUS • B26EA: KEY REGISTRATION • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED 	B C D E F G H I J
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1734: CONTROL UNIT 	K DEF M
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA 	N O P

DTC Index

INFOID:000000006965881

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-16. "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)".](#)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Refer- ence page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM	—	—	—	—	BCS-35
U1010: CONTROL UNIT (CAN)	—	—	—	—	BCS-36
U0415: VEHICLE SPEED	—	—	—	—	BCS-37
B2013: ID DISCORD BCM-S/L*	×	×	—	—	SEC-49
B2014: CHAIN OF S/L-BCM*	×	×	—	—	SEC-50
B2190: NATS ANTENNA AMP	×	—	—	—	SEC-41
B2191: DIFFERENCE OF KEY	×	—	—	—	SEC-44
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-45
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-47
B2195: ANTI-SCANNING	×	—	—	—	SEC-48
B2553: IGNITION RELAY	—	×	—	—	PCS-49
B2555: STOP LAMP	—	×	—	—	SEC-53
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-55
B2557: VEHICLE SPEED	×	×	×	—	SEC-57
B2560: STARTER CONT RELAY	×	×	×	—	SEC-58
B2562: LOW VOLTAGE	—	×	—	—	BCS-38
B2601: SHIFT POSITION	×	×	×	—	SEC-59
B2602: SHIFT POSITION	×	×	×	—	SEC-62
B2603: SHIFT POSI STATUS	×	×	×	—	SEC-64
B2604: PNP/CLUTCH SW	×	×	×	—	SEC-67
B2605: PNP/CLUTCH SW	×	×	×	—	SEC-69
B2606: S/L RELAY*	×	×	×	—	SEC-71
B2607: S/L RELAY*	×	×	×	—	SEC-72
B2608: STARTER RELAY	×	×	×	—	SEC-74
B2609: S/L STATUS*	×	×	×	—	SEC-76
B260A: IGNITION RELAY	×	×	×	—	PCS-51
B260B: STEERING LOCK UNIT*	—	×	×	—	SEC-80
B260C: STEERING LOCK UNIT*	—	×	×	—	SEC-81
B260D: STEERING LOCK UNIT*	—	×	×	—	SEC-82
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-83
B2612: S/L STATUS*	×	×	×	—	SEC-88
B2614: BCM	—	×	×	—	PCS-53
B2615: BCM	—	×	×	—	PCS-56
B2616: BCM	—	×	×	—	PCS-59
B2617: BCM	×	×	×	—	SEC-92
B2618: BCM	×	×	×	—	PCS-62
B2619: BCM*	×	×	×	—	SEC-94
B261A: PUSH-BTN IGN SW	—	×	×	—	PCS-63
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	SEC-95

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Refer- ence page
B2621: INSIDE ANTENNA	—	×	—	—	DLK-62
B2622: INSIDE ANTENNA	—	×	—	—	DLK-64
B2623: INSIDE ANTENNA	—	×	—	—	DLK-66
B26E8: CLUTCH SW	×	×	×	—	SEC-84
B26E9: S/L STATUS*	×	×	× (Turn ON for 15 seconds)	—	SEC-86
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	SEC-87
C1704: LOW PRESSURE FL	—	—	—	×	WT-24
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	WT-26
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-29
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-30
C1734: CONTROL UNIT	—	—	—	×	WT-31

*: For models without steering lock unit, this DTC is not applied.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP CONTROL UNIT

Reference Value

INFOID:000000006965882

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Status/Value	
LATCH LOCK SEN	State of roof latch	Lock	ON
		Other than above	OFF
		Roof latch lock sensor circuit is short	NG
LATCH STATE SEN	State of roof latch motor	Operate	ON ↔ OFF
		Stop	ON or OFF
		Roof latch lock sensor circuit is short	NG
LATCH OUT(ULK)	Operation of roof latch motor	Unlock is in operation	ON
		Other than above	OFF
		Roof latch motor (UNLOCK) circuit is short	NG
LATCH OUT(LCK)	Operation of roof latch motor	Lock is in operation	ON
		Other than above	OFF
		Roof latch motor (LOCK) circuit is short	NG
LATCH VALUE	State of roof latch	Lock	0
		Halfway position	1-77
		Unlock	78 or more
LATCH LIMIT SW	State of roof latch	Roof is fully close and roof latch is in LOCK	CLOSE
		Other than above	OPEN
LATCH STATE	State of roof latch	Initialization is not complete	NG
		LOCK	CLOSE
		Halfway position	MID
		UNLOCK	OPEN
PS VALUE(DRAW)	State of parcel shelf	Top	Retractable hard top fully open state: 2246 Retractable hard top fully closed state: 2220
		Bottom	1000
PS VALUE(ROTA)	State of parcel shelf	Vertical	3190
		Horizontal	Retractable hard top fully open state: 1340 Retractable hard top fully closed state: 1000
PS OUT(UP)	Operation of parcel shelf	Up operation is in operation	ON
		Other than above	OFF
		Parcel shelf (UP) circuit is short	NG
PS OUT(DOWN)	Operation of parcel shelf	DOWN operation is in operation	ON
		Other than above	OFF
		Parcel shelf (DOWN) circuit is short	NG
PS OUT(VERT)	Operation of parcel shelf	Vertical operation is in operation	ON
		Other than above	OFF
		Parcel shelf (VERTICAL) circuit is short	NG

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Status/Value	
PS OUT(HORI)	Operation of parcel shelf	Horizontal operation is in operation	ON	A
		Other than above	OFF	
		Parcel shelf (HORIZONTAL) circuit is short	NG	B
PS STATE(DRAW)	State of parcel shelf	For the details, refer to RF-37, "PARCEL SHELF FUNCTION : System Description"	1-6	
		State of parcel shelf status sensor (DRAW) is not recognized	NG	C
PS STATE(ROTA)	State of parcel shelf	For the details, refer to RF-37, "PARCEL SHELF FUNCTION : System Description"	1-4	D
		State of parcel shelf status sensor (ROTATE) is not recognized	NG	
ROOF VALUE	Roof status sensor signal		0-1023	E
PUMP OUT(RH)	Operation of hydraulic pump motor	Turning clockwise	ON	
		Other than above	OFF	F
		Hydraulic pump motor (RH) circuit is short	NG	
PUMP OUT(LH)	Operation of hydraulic pump motor	Turning counterclockwise	ON	
		Other than above	OFF	G
		Hydraulic pump motor (LH) circuit is short	NG	
SWITCH VLV 1 OUT	Operation of switching valve 1	Operate	ON	
		Stop	OFF	H
		Switching valve 1 circuit is short	NG	
SWITCH VLV 2 OUT	Operation of switching valve 2	Operate	ON	I
		Stop	OFF	
		Switching valve 2 circuit is short	NG	
ROOF STATE	State of roof	For the details, refer to RF-20, "RETRACTABLE HARD TOP SYSTEM : System Description"	1-42	J
		State of roof is not recognized	NG	K
HYDRAULIC STATE	State of hydraulic system	For the details, refer to RF-31, "HYDRAULIC SYSTEM CONTROL FUNCTION : System Description"	1-22	
		State of hydraulic system is not recognized	NG	DEF
ROOF SW(OPEN)	State of roof open/close switch	OPEN operation is in operation	ON	
		Other than above	OFF	M
ROOF SW(CLOSE)	State of roof open/close switch	CLOSE operation is in operation	ON	
		Other than above	OFF	N
ROOF LINK STATE	State of roof link	For the details, refer to RF-31, "HYDRAULIC SYSTEM CONTROL FUNCTION : System Description"	1-8	O
		State of roof is not recognized	NG	
TRUNK LINK SEN(RH)	State of trunk link lock (RH)	LOCK	ON	
		Other than above	OFF	P
		Trunk link lock (RH) circuit is short or open	NG	
TRUNK LINK SEN(LH)	State of trunk link lock (LH)	LOCK	ON	
		Other than above	OFF	
		Trunk link lock (LH) circuit is short or open	NG	
TR ROOM LAMP SW	State of trunk lid (trunk room lamp switch)	Open	ON	
		Other than above	OFF	

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Status/Value
TRUNK STATUS SEN	State of trunk lid	Fully OPEN	ON
		Other than above	OFF
		Trunk status sensor circuit is short or open	NG
TRUNK OPEN OUT	Operation of trunk lid opener actuator	OPEN operation is in operation	ON
		Other than above	OFF
		Trunk lid opener actuator circuit is short	NG
FLPD LIMIT SW(DWN)	State of flipper door	Both of flipper door (LH/RH) are in DOWN position	ON
		Other than above	OFF
FLPD LIMIT SW(UP)	State of flipper door	Both of flipper door (LH/RH) are in UP position	ON
		Other than above	OFF
FLPD OUT(UP)	Operation of flipper door	UP operation is in operation	ON
		Other than above	OFF
		Flipper door motor (UP) circuit is short	NG
FLPD OUT(DWN)	Operation of flipper door	DOWN operation is in operation	ON
		Other than above	OFF
		Flipper door motor (DOWN) circuit is short	NG
FLPD STATE	State of flipper door	For the details, refer to RF-39, "FLIPPER DOOR FUNCTION : System Description"	1, 2, 4
		State of flipper door is not recognized	NG
R WIN LH OUT(UP)	Operation of rear power window (LH)	UP operation is in operation	ON
		Other than above	OFF
		Rear power window LH (UP) circuit is short	NG
R WIN LH OUT(DWN)	Operation of rear power window (LH)	DOWN operation is in operation	ON
		Other than above	OFF
		Rear power window LH (DOWN) circuit is short	NG
R WIN RH OUT(UP)	Operation of rear power window (RH)	UP operation is in operation	ON
		Other than above	OFF
		Rear power window RH (UP) circuit is short	NG
R WIN RH OUT(DWN)	Operation of rear power window (RH)	DOWN operation is in operation	ON
		Other than above	OFF
		Rear power window RH (DOWN) circuit is short	NG
REAR DEF ON SIG	State of rear window defogger switch	While operating	ON
		Stop	OFF
REAR DEF OUT	State of rear window defogger system	Operate	ON
		Stop	OFF
		Rear window defogger circuit is short	NG
R WIN CURENT(LH)	Current value to rear power window motor (LH)		0-25.5 (A)
R WIN CURENT(RH)	Current value to rear power window motor (RH)		0-25.5 (A)
RR WIN STATE(LH)	State of rear power window (LH)	Upper	UP
		Halfway	MID
		Lower end	DOWN

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


Monitor Item	Condition	Status/Value		
RR WIN STATE(RH)	State of rear power window (RH)	Upper	UP	A
		Halfway	MID	
		Lower end	DOWN	B
RAP SIGNAL	State of RAP	Operate	ON	
		Stop	OFF	
TR MODE SIGNAL	State of trunk mode signal	Output	ON	C
		Stop	OFF	
ROOF STATE(AUDIO)	State of roof	State of fully open	ON	D
		Other than above	OFF	
		Roof state signal (audio) circuit is short	NG	
ROOF BUZZER OUT	State of roof warning buzzer	Operate	ON	E
		Stop	OFF	
		Roof warning buzzer circuit is short	NG	F
LOCAL COMM 1	State of local communication 1	Normal	OK	
		It is in sleep mode	SLEEP	
		Communication error	NG	G
LOCAL COMM 2	State of local communication 2	Normal	OK	
		It is in sleep mode	SLEEP	
		Communication error	NG	H
ROOF MODE	Roof operation mode	Normal	OK	
		Only close operation is possible	CLOSE	I
		Operation is stop	STOP	
		Operation is inhibited	NG	
POP-UP BAR DPLOY	State of pop-up bar	Normal	OK	J
		State of deployment	NG	
POP-UP BAR DIAG	Self-diagnosis result of pop-up bar	Normal	OK	K
		Malfunctioning is detected	NG	
SWITCH VLV COND	Diagnosis result of retractable hard top control unit	Diagnosis result of retractable hard top control unit	OK	DEF
		Switching valve (1/2) system is malfunctioning	NG	
PWR SOURCE COND	Power supply voltage state of retractable hard top control unit	Normal	OK	M
		Malfunction	NG	
CPU COND	Diagnosis result of retractable hard top control unit	CPU is normal	OK	N
		CPU is not normal	NG	
ROOF COND	Diagnosis result of retractable hard top control unit	Roof position is normal	OK	
		Roof position is not normal	NG	O
SENSOR COND	Diagnosis result of retractable hard top control unit	Hole sensor system is normal	OK	
		Hole sensor system is not normal	NG	P
IGN ON SIG(BCM)	Power position signal (via CAN from BCM)	ON	OK	
		Other than above	NG	
VHCL STOP-METER	Vehicle speed signal (via CAN from meter and A/C amp.)	0km/h	OK	
		Other than above	NG	

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Status/Value
CIRCUIT COND	Diagnosis result of retractable hard top control unit	Circuit system is normal
		Circuit system is not normal
ROOF TIMEOUT	State of roof operation	Normal
		Malfunction
CAN COMM	CAN communication status	Normal
		Malfunction
THERMO PROTECT 1	Thermo protection (Stage1)	In non-operation
		In operation
SHIFT R SIG	Shift position	Other than R position
		R position
PRMIT ENG ST(BCM)	Permit engine start signal	Signal is not received
		Signal is in receiving
THERMO PROTECT-2	Thermo protection (Stage2)	In non-operation
		In operation
TONNEAU SW	Tonneau board	Set
		Other than above
BRK LAMP SW(BCM)	Brake lamp switch signal (via CAN from BCM)	Brake is depressed
		Brake is released
THERMO VALUE	Conversion value of thermo protection	0-65535
PWR SOURCE VALUE	Power supply voltage value of retractable hard top control unit	0-20 (V)
ROOF INITIAL(OPEN)	State of performing roof position initialization	Registration of full open position is complete
		Registration of full open position is not complete
ROOF INITIAL(CLOSE)	State of performing roof position initialization	Registration of full closed position is complete
		Registration of full closed position is not complete
PSHELF INITIAL(ROTA)	State of performing parcel shelf position initialization	Registration of rotation position is complete
		Registration of rotation position is not complete
PSHELF INITIAL(DRAW)	State of performing parcel shelf position initialization	Registration of draw position is complete
		Registration of draw position is not complete


TERMINAL LAYOUT

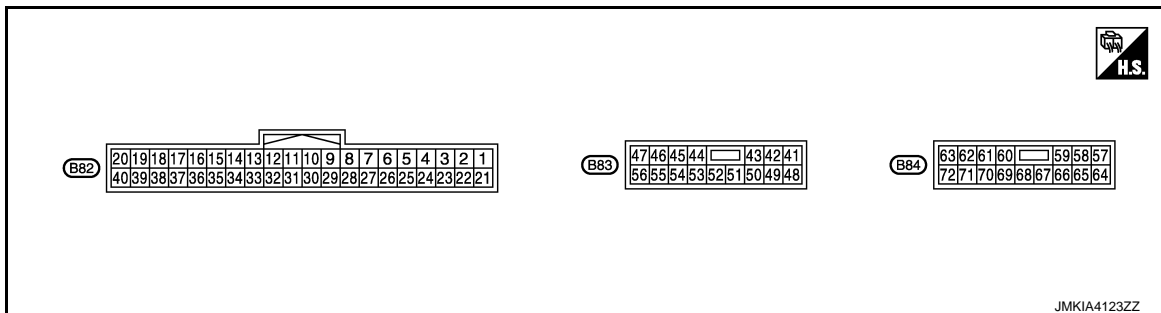

PHYSICAL VALUES

RETRACTABLE HARD TOP CONTROL UNIT




< ECU DIAGNOSIS INFORMATION >

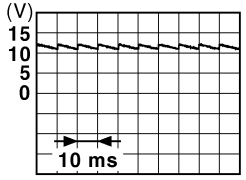Terminal No. (Wire color)		Description		Condition			Value (Approx.)
+	-	Signal name	Input/ Output				
1 (G)	Ground	Roof open/close switch (OPEN)	Input	Ignition switch ON	Roof open/close switch (OPEN)	Pressed	0 V
						Released	Battery voltage
2 (BR)	Ground	Roof open/close switch (CLOSE)	Input	Ignition switch ON	Roof open/close switch (CLOSE)	Pressed	0 V
						Released	Battery voltage
3 (B)	Ground	Flipper door limit switch ground	—	Ignition switch ON	—		0 V
4 (L)	Ground	Tonneau board switch	Input	Ignition switch ON	Tonneau board	Hooked	Battery voltage
						Released	0 V
5 (SB)	Ground	Trunk room lamp switch	Input	Ignition switch ON	Trunk lid	Locked	 <small>JPMIA0011GB</small>
						Other than above	0 V
6 (L)	Ground	Roof latch limit switch	Input	Ignition switch ON	Roof	Close	0 V
						Other than above	Battery voltage
7 (W)	Ground	Flipper door limit switch (UP)	Input	Ignition switch ON	Flipper door LH and RH	Top	0 V
						Other than above	Battery voltage
8 (G)	Ground	Flipper door limit switch (DOWN)	Input	Ignition switch ON	Flipper door LH and RH	Bottom	0 V
						Other than above	Battery voltage
11 (W)	Ground	RAP signal	Input	Ignition switch ON	RAP function	Active	Battery voltage
						Inactive	0 V
12 (Y)	Ground	Back up lamp signal	Input	Ignition switch ON	Shift position	R position	Battery voltage
						Other than above	0 V
13 (BG)	Ground	Sensor power supply	Output	Ignition switch OFF	—		5 V
14 (P)	Ground	Trunk link sensor (LH)	Input	Ignition switch ON	Trunk link lock (LH)	LOCK	0.3 V
						Other than above	1.5 V
15 (SB)	Ground	Trunk link sensor (RH)	Input	Ignition switch ON	Trunk link lock (RH)	LOCK	0.3 V
						Other than above	1.5 V

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P



RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

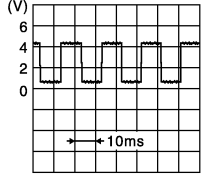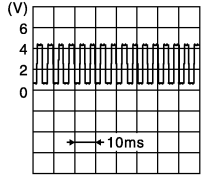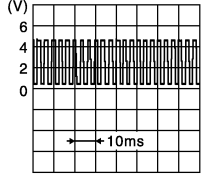Terminal No. (Wire color)		Description		Condition			Value (Approx.)
+	-	Signal name	Input/ Output				
16 (GR)	Ground	Roof latch status sensor	Input	Ignition switch ON	Roof latch	Operate	 <p style="text-align: right; font-size: small;">JMkia4021GB</p>
						Stop	0.5 or 4.5 V
17 (G)	Ground	Roof latch lock sensor	Input	Ignition switch ON	Roof latch	LOCK	1.0 V
						Other than above	3.8 V
18 (LG)	Ground	Trunk status sensor	Input	Ignition switch ON	Trunk lid (front)	Fully open	1.0 V
						Other than above	3.8 V
22 (V)	Ground	Roof status sensor power supply	Output	Ignition switch ON	—		5 V
23 (B)	Ground	Roof status sensor ground	—	Ignition switch ON	—		0 V
24 (GR)	Ground	Parcel shelf status sensor (DRAW)	Input	Ignition switch ON	Parcel shelf motor (DRAW)	Active	 <p style="text-align: right; font-size: small;">JMkia4022GB</p>
						Inactive	0.5 V or 5 V
25 (R)	Ground	Parcel shelf status sensor (ROTATION)	Input	Ignition switch ON	Parcel shelf motor (ROTATE)	Active	 <p style="text-align: right; font-size: small;">JMkia4023GB</p>
						Inactive	0.5 V or 5 V
26 (P)	Ground	Roof status sensor signal	Input	Ignition switch ON	Roof	Fully close → Fully open	0.5 V → 5 V
27 (Y)	Ground	Trunk lid open request signal (BCM)	Output	—	Trunk opener	Operate	0 V → Battery voltage → 0 V
						Other than above	0 V
28 (BG)	Ground	Flipper door motor ground	—	Ignition switch ON	—		0 V

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

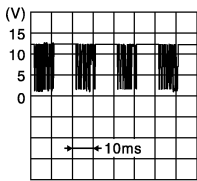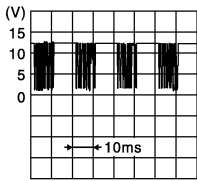Terminal No. (Wire color)		Description		Condition			Value (Approx.)
+	-	Signal name	Input/ Output				
29 (V)	Ground	Local communication (BCM)	Input/ Output	Ignition switch ON	—		 <small>JMKIA4024GB</small>
30 (GR)	Ground	Local communication (POWER WINDOW)	Input/ Output	Ignition switch ON	—		 <small>JMKIA4024GB</small>
31 (L)	Ground	CAN-H	Input/ Output	—	—		—
32 (P)	Ground	CAN-L	Input/ Output	—	—		—
33 (V)	Ground	Roof status signal (AUDIO)	Output	Ignition switch ON	Retractable hard top	Fully open	Battery voltage
						Other than above	0 V
35 (B)	Ground	Roof warning buzzer	Output	Ignition switch ON	Roof warning buzzer	Sounds	0 V
						Not sounds	Battery voltage
36 (Y)	Ground	Hydraulic pump relay (RH)	—	Ignition switch ON	Hydraulic pump motor (RH)	Active	0 V
						Inactive	Battery voltage
37 (W)	Ground	Hydraulic pump relay (LH)	—	Ignition switch ON	Hydraulic pump motor (LH)	Active	0 V
						Inactive	Battery voltage
38 (BR)	Ground	Hydraulic pump relay ground	—	Ignition switch ON	—		0 V
41 (SB)	Ground	Parcel shelf motor (UP)	Output	Ignition switch ON	Parcel shelf motor (DRAW-UP)	Active	Battery voltage
						Inactive	0 V
42 (W)	Ground	Parcel shelf motor (DOWN)	Output	Ignition switch ON	Parcel shelf motor (DRAW-DOWN)	Active	Battery voltage
						Inactive	0 V
43 (BR)	Ground	Hydraulic pump power supply relay	Output	Ignition switch ON	Retractable hard top system	Active	Battery voltage
						Inactive	0 V
44 (R)	Ground	Parcel shelf motor (HORIZONTAL)	Output	Ignition switch ON	Parcel shelf motor (ROTATION-HORI- ZONTAL)	Active	Battery voltage
						Inactive	0 V
45 (BR)	Ground	Parcel shelf motor (VERTICAL)	Output	Ignition switch ON	Parcel shelf motor (ROTATION-VER- TICAL)	Active	Battery voltage
						Inactive	0 V
46 (G)	Ground	Flipper door motor (UP)	Output	Ignition switch ON	Flipper door motor (UP)	Active	Battery voltage
						Inactive	0 V

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition			Value (Approx.)
+	-	Signal name	Input/ Output				
47 (L)	Ground	Flipper door motor (DOWN)	Output	Ignition switch ON	Flipper door motor (DOWN)	Active	Battery voltage
						Inactive	0 V
48 (R)	Ground	Roof latch motor (OPEN)	Output	Ignition switch ON	Roof latch motor (OPEN)	Active	Battery voltage
						Inactive	0 V
49 (Y)	Ground	Roof latch motor (CLOSE)	Output	Ignition switch ON	Roof latch motor (CLOSE)	Active	Battery voltage
						Inactive	0 V
51 (SB)	Ground	Trunk lid opener ac- tuator	Output	—	Trunk lid opener	Operate	0 V → Battery voltage → 0 V
						Stop	0 V
52 (V)	Ground	Trunk lid opener ac- tuator ground	—	Ignition switch ON	—		0 V
53 (BG)	Ground	Rear power window motor LH (UP)	Output	Ignition switch ON	Rear power window motor LH (UP)	Active	Battery voltage
						Inactive	0 V
54 (LG)	Ground	Rear power window motor LH (DOWN)	Output	Ignition switch ON	Rear power window motor LH (DOWN)	Active	Battery voltage
						Inactive	0 V
55 (GR)	Ground	Rear power window motor RH (UP)	Output	Ignition switch ON	Rear power window motor RH (UP)	Active	Battery voltage
						Inactive	0 V
56 (P)	Ground	Rear power window motor RH (DOWN)	Output	Ignition switch ON	Rear power window motor RH (DOWN)	Active	Battery voltage
						Inactive	0 V
57 (Y)	Ground	Power source (ROOF)	Input	—	—		Battery voltage
58 (Y)	Ground	Power source (ROOF)	Input	—	—		Battery voltage
59 (Y)	Ground	Power source (ROOF)	Input	—	—		Battery voltage
60 (B)	Ground	Ground (ROOF)	—	Ignition switch ON	—		0 V
61 (B)	Ground	Ground (ROOF)	—	Ignition switch ON	—		0 V
62 (GR)	Ground	Power source (POWER WINDOW)	Input	—	—		Battery voltage
63 (Y)	Ground	Power source (POWER WINDOW)	Input	—	—		Battery voltage
64 (B)	Ground	Ground (POWER WINDOW)	—	Ignition switch ON	—		0 V
65 (B)	Ground	Ground (POWER WINDOW)	—	Ignition switch ON	—		0 V
66 (P)	Ground	Switching valve 1	Output	Ignition switch ON	Switching valve 1	Active	Battery voltage
						Inactive	0 V

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition			Value (Approx.)
+	-	Signal name	Input/ Output				
67 (SB)	Ground	Switching valve 2	Output	Ignition switch ON	Switching valve 2	Active	Battery voltage
						Inactive	0 V
68 (L)	Ground	Switching valve ground	—	Ignition switch ON	—		0 V
69 (G)	Ground	Power source (REAR WINDOW DEFOGGER)	Input	—	—		Battery voltage
70 (P)	Ground	Power source (REAR WINDOW DEFOGGER)	Input	—	—		Battery voltage
71 (BR)	Ground	Rear window defog- ger power supply	Output	Ignition switch ON	Rear defogger switch ON and roof is fully closed		Battery voltage
72 (W)	Ground	Rear window defog- ger power supply	Output	Ignition switch ON	Rear defogger switch ON and roof is fully closed		Battery voltage

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

DEF

RETRACTABLE HARD TOP CONTROL UNIT


< ECU DIAGNOSIS INFORMATION >

Wiring Diagram

INFOID:000000006965886

RETRACTABLE HARD TOP SYSTEM

*: This connector is not shown in "Harness Layout".

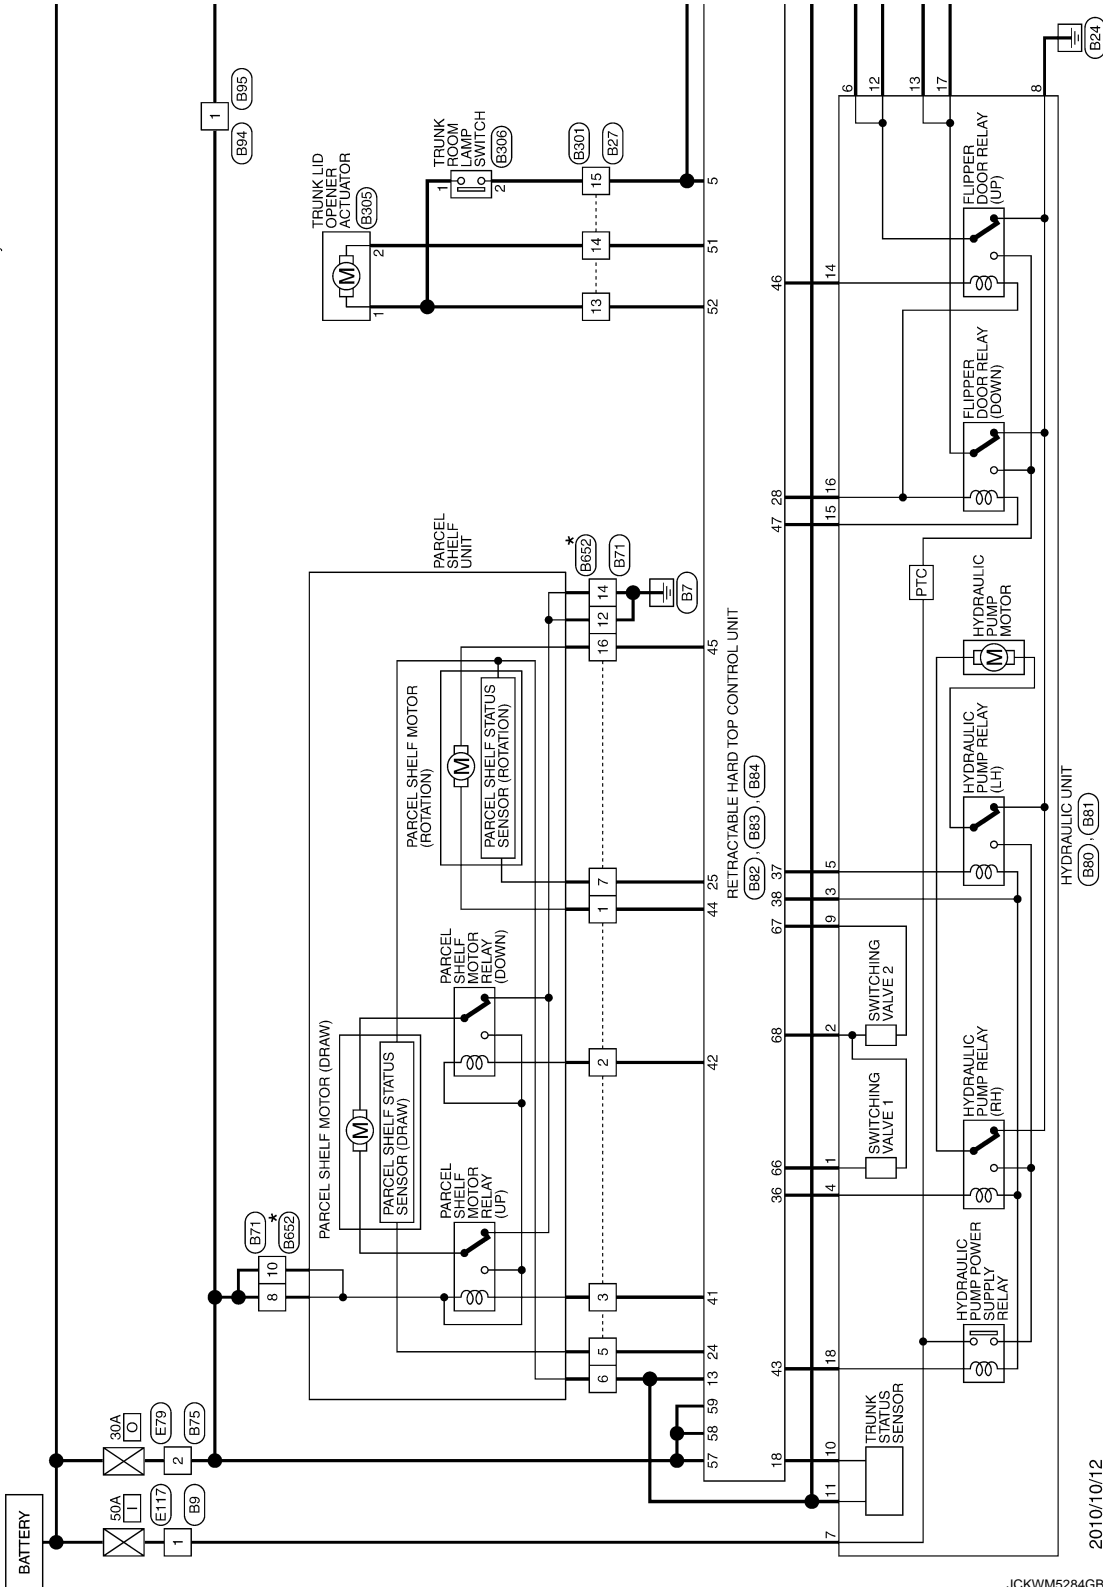


2010/10/12

JCKWM5284GB

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

*: This connector is not shown in "Harness Layout".

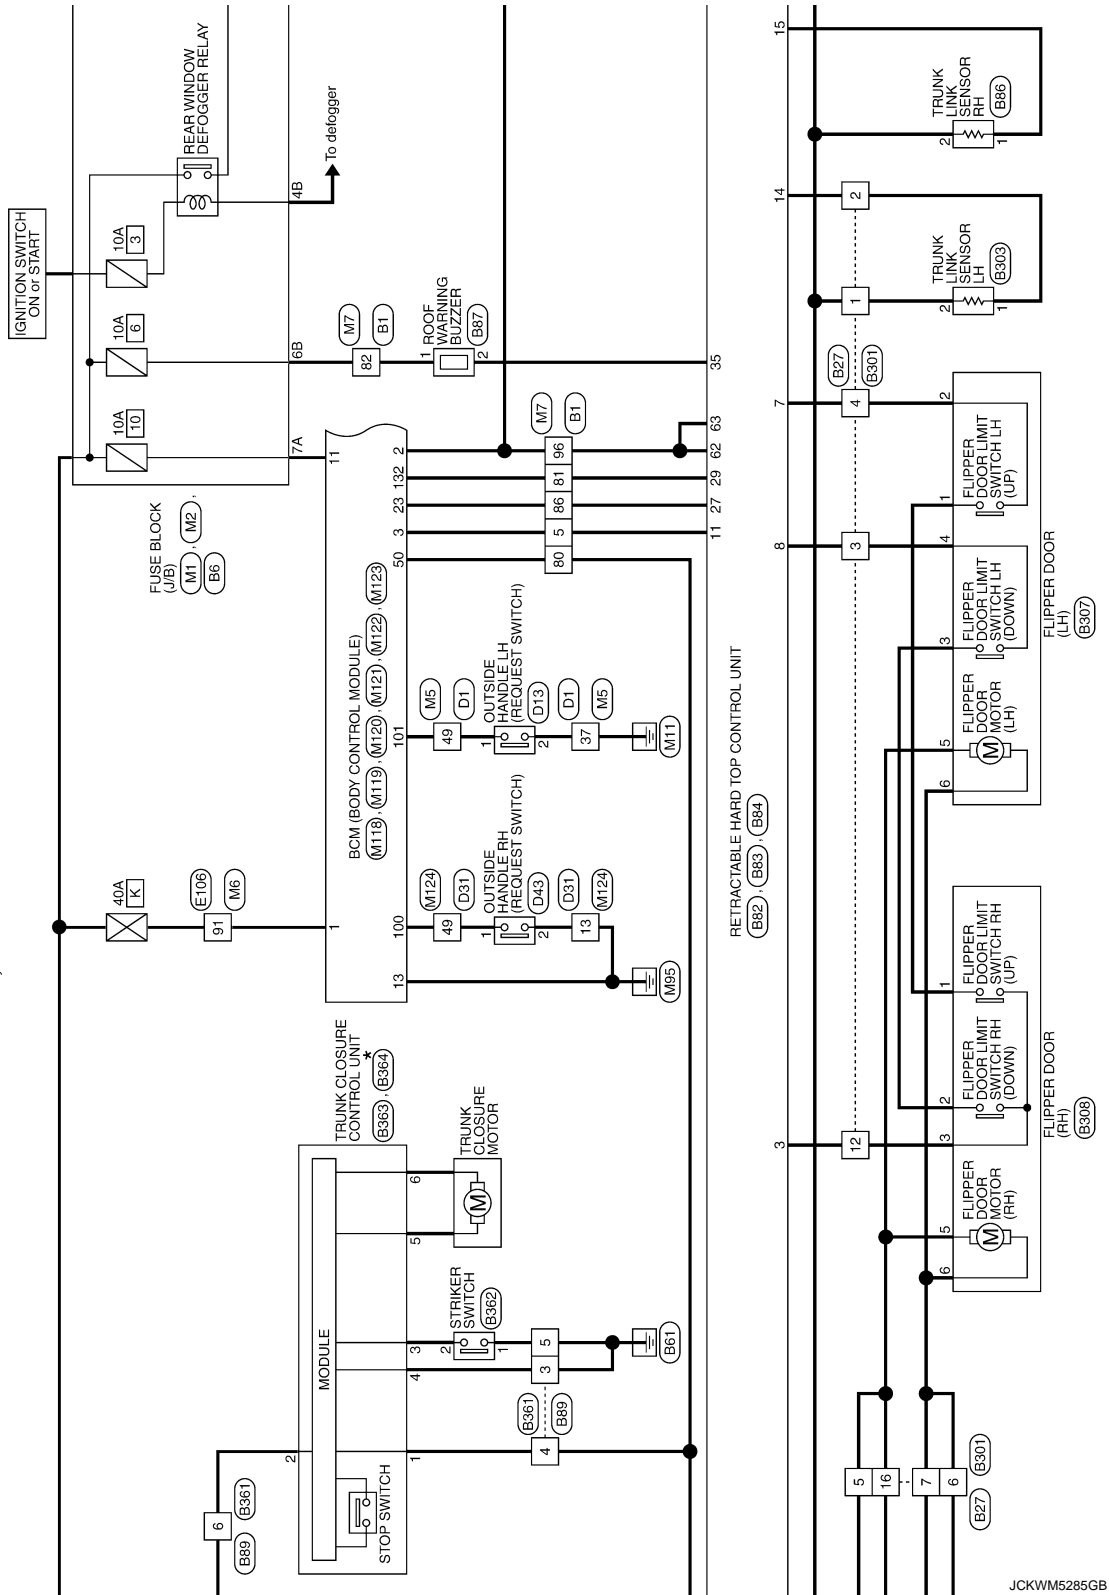

JCKWM5285GB


A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

A : With A/T
M : With M/T


* : This connector is not shown in "Harness Layout".

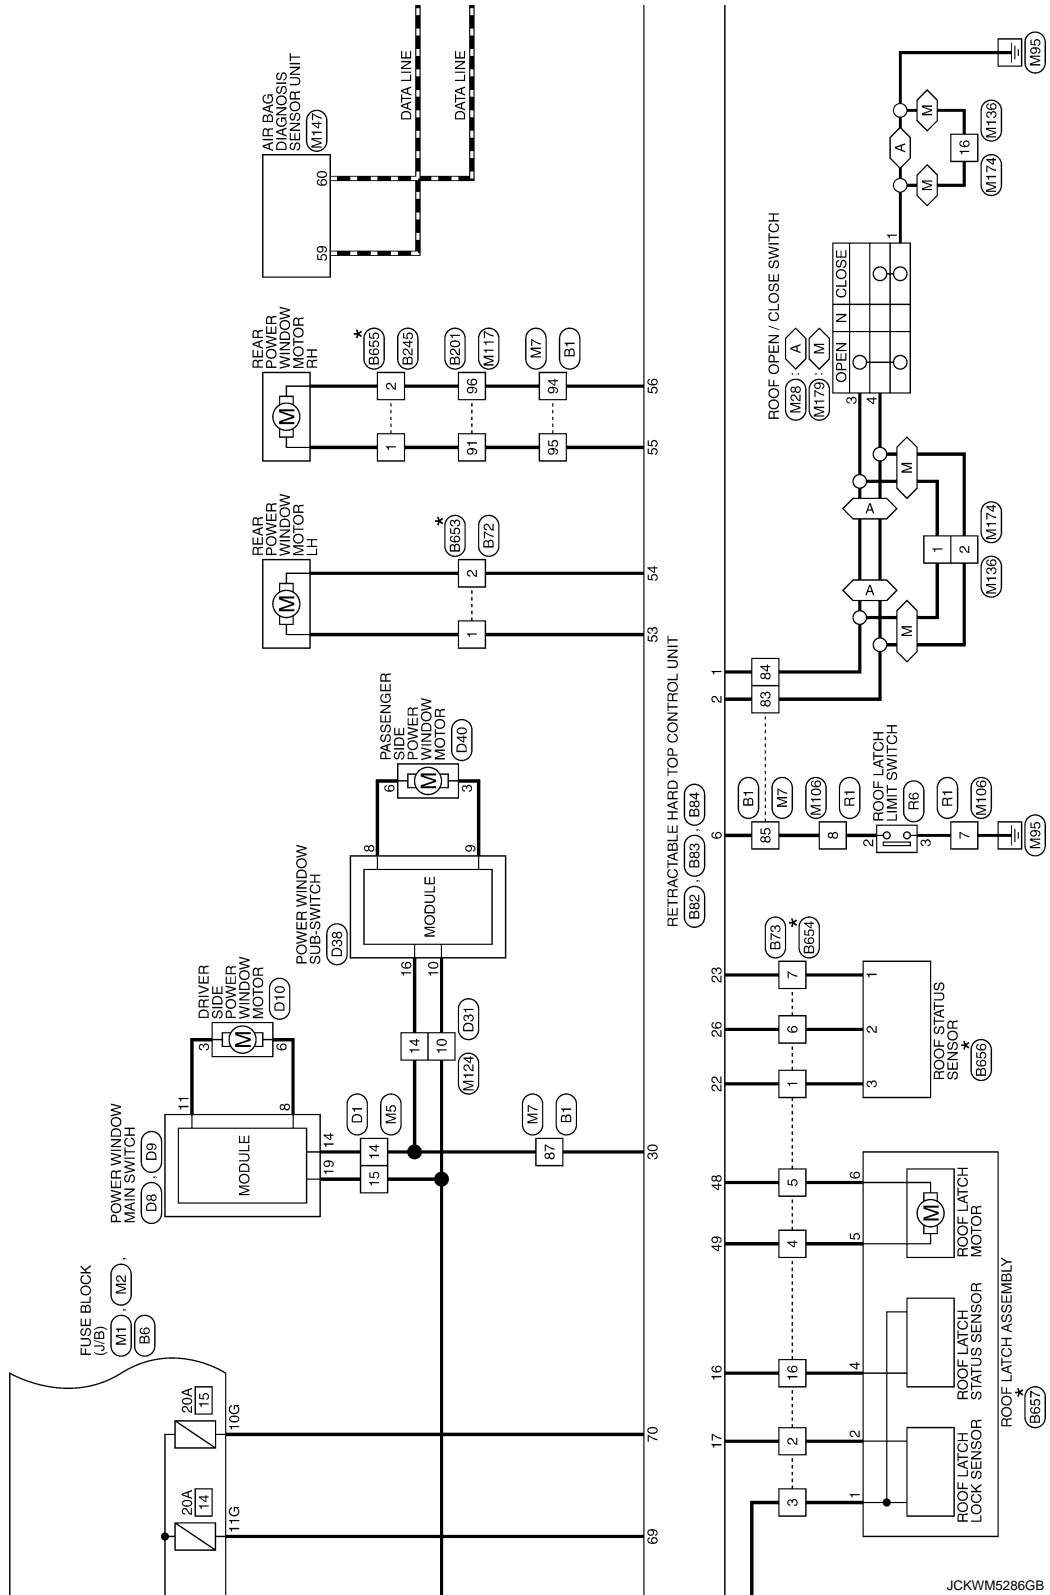

JCKWM5286GB

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

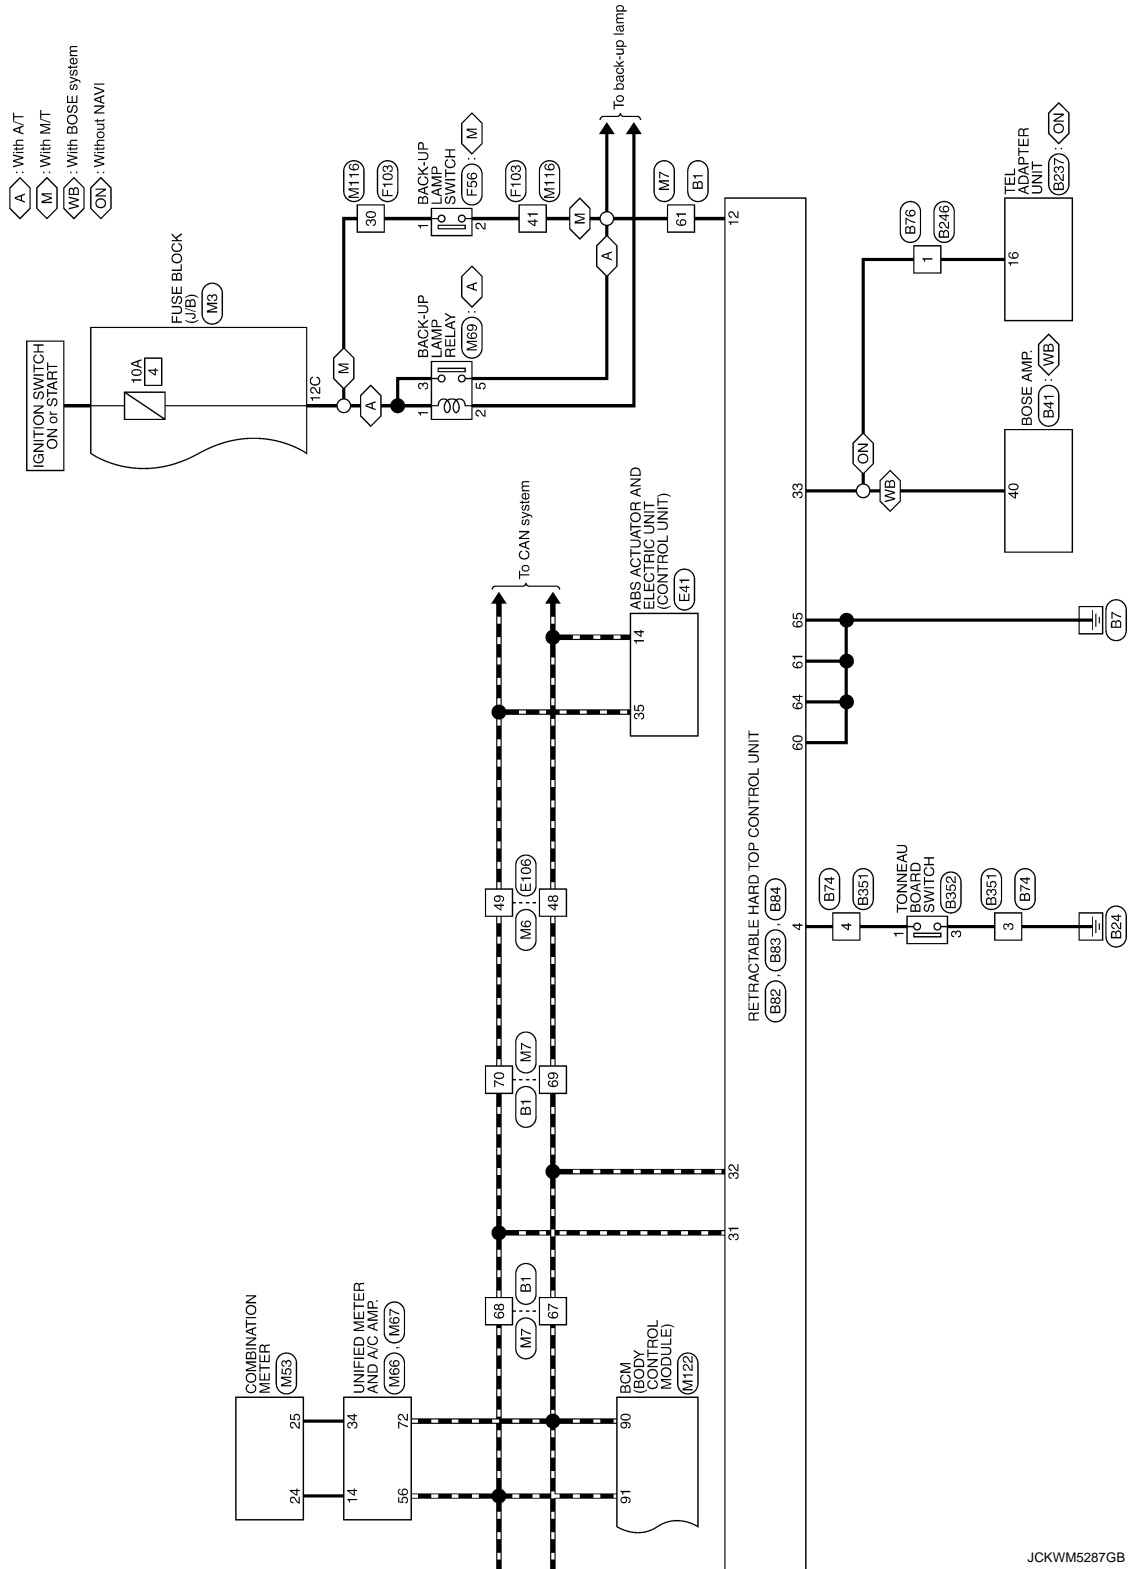

JCKWM5287GB

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	THB07V-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	L	-
3	R	-
4	V	-
5	W	-
6	B	-
8	G	-
10	BR	-
12	SHIELD	-
13	Y	-
14	L	-
15	R	-
16	W	-
17	BR	-
20	G	-
21	SB	-
22	GR	-
23	W	-
24	SB	-
25	BR	-
26	LG	-
27	Y	-
28	R	-
29	V	-
31	SHIELD	-
32	G	-
33	R	-
34	BG	-
35	GR	-
36	BR	-
37	P	- [With climate controlled seat]
37	Y	- [Without climate controlled seat]
38	V	- [With climate controlled seat]
38	GR	- [Without climate controlled seat]
40	SHIELD	-
41	L	-
42	P	-
43	SHIELD	-

44	SB	-
45	V	-
46	W	-
47	SB	-
48	LG	-
49	LG	- [With BOSE system]
49	Y	- [Without BOSE system]
50	SB	- [With BOSE system]
50	LG	- [Without BOSE system]
51	SB	-
52	G	-
53	LG	-
54	BR	-
55	Y	-
56	W	-
57	V	-
58	R	-
60	R	-
61	BG	-
62	B	-
63	L	-
64	P	-
65	B	-
66	SB	-
67	P	-
68	L	-
69	P	-
70	L	-
80	G	-
81	V	-
82	R	-
83	BR	-
84	G	-
85	L	-
86	Y	-
87	GR	-
91	R	-
93	BG	-
94	P	-
95	GR	-
96	GR	-
97	SB	-
99	Y	-
100	Y/B	-

Connector No.	B6
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS1ZFBR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
3G	LG	-
6G	G	-
10G	P	-
11G	G	-
12G	Y	-

Connector No.	B9
Connector Name	WIRE TO WIRE
Connector Type	MO8FV-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	GR	-
4	LG	-
5	BR	-
6	BG	-

Connector No.	B27
Connector Name	WIRE TO WIRE
Connector Type	NS16MP-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	-
2	P	-
3	G	-
4	W	-
5	R	-
6	P	-
7	GR	-
10	LG	-
11	B	-
12	B	-
13	V	-
14	SB	-
15	L	-
16	V	-

JCKWM5288GB

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM

Connector No.	B41
Connector Name	BOSE AMP.
Connector Type	TH40PV-NH

Terminal No.	10	11	12	13	14	15	16	17	18	19	20
Color of Wire											
Signal Name [Specification]											

Terminal No.	9	10	11	12	14	15	16	18	19	20	28	30	31	32	33	34	35	40
Color of Wire	L	G	G	SB	LG	LG	W	W	P	R	Y	Y	SHIELD	SHIELD	SB	SB	V	
Signal Name [Specification]	SOUND SIGNAL LH (-)	SOUND SIGNAL RH (-)	MICROPHONE SIGNAL (-)	VOICE GUIDANCE SIGNAL (-)	AV COMM (L)	AV COMM (L)	ACC	SOUND SIGNAL LH (+)	SOUND SIGNAL RH (+)	MICROPHONE SIGNAL (+)	VOICE GUIDANCE SIGNAL (+)	SHIELD	SHIELD	AV COMM (H)	AV COMM (H)	ROOF STATUS SIGNAL (AUDIO)		

Connector No.	B71
Connector Name	WIRE TO WIRE
Connector Type	NS10FBR-CS

Terminal No.	7	6	5	4	3	2	1
Color of Wire							
Signal Name [Specification]							

Terminal No.	1	2	3	5	6	7	8
Color of Wire	R	W	SB	GR	EG	R	Y
Signal Name [Specification]							

Terminal No.	10	12	14	16
Color of Wire	LG	P	W	BR
Signal Name [Specification]				

Connector No.	B72
Connector Name	WIRE TO WIRE
Connector Type	NS02MW-CS

Terminal No.	1	2
Color of Wire		
Signal Name [Specification]		

Terminal No.	1	2
Color of Wire	EG	LG
Signal Name [Specification]		

Connector No.	B73
Connector Name	WIRE TO WIRE
Connector Type	NS16FSY-CS

Terminal No.	7	6	5	4	3	2	1
Color of Wire							
Signal Name [Specification]							

Terminal No.	1	2	3	4	5	6	7	12	13	14	15	16
Color of Wire	V	G	EG	Y	R	P	B	B	B	B	W	GR
Signal Name [Specification]												

Connector No.	B74
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-NH

Terminal No.	1	2	3	4
Color of Wire				
Signal Name [Specification]				

Terminal No.	3	4
Color of Wire	B	L
Signal Name [Specification]		

Connector No.	B75
Connector Name	WIRE TO WIRE
Connector Type	IM02MW-LC

Terminal No.	1	2
Color of Wire		
Signal Name [Specification]		

Terminal No.	1	2
Color of Wire	L	Y
Signal Name [Specification]		

Connector No.	B76
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH

Terminal No.	1	2	3	4	5	6	7	8
Color of Wire								
Signal Name [Specification]								

Terminal No.	1	4
Color of Wire	V	LG
Signal Name [Specification]		

Terminal No.	5	6	7	8	10	11	12	13	14	15	16
Color of Wire	SR	SHIELD	B	W	SHIELD	B	W	R	SHIELD	G	Y
Signal Name [Specification]											

Connector No.	B80
Connector Name	HYDRAULIC UNIT
Connector Type	NS10FW-CS



Terminal No.	17	18	5	4	3	2	1
Color of Wire							
Signal Name [Specification]							

Terminal No.	1	2	3	4	5	6	9	10	11	12
Color of Wire	P	L	BR	Y	W	R	SR	LG	EG	V
Signal Name [Specification]										

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


RETRACTABLE HARD TOP SYSTEM

Connector No.	B81
Connector Name	HYDRAULIC UNIT
Connector Type	LOPE-MC



Terminal No.	7	8
Color of Wire	Y	B
Signal Name [Specification]	-	-

Connector No.	B82
Connector Name	RETRACTABLE HARD TOP CONTROL UNIT
Connector Type	THOMP-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	ROOF OPEN / CLOSE SWITCH (OPEN)
2	BR	ROOF OPEN / CLOSE SWITCH (CLOSE)
3	B	FLIPPER DOOR LIMIT SWITCH (CLOSE)
4	L	TONNEAU BOARD SWITCH
5	SB	TRUNK ROOM LAMP SWITCH
6	L	ROOF LATCH LIMIT SWITCH
7	W	FLIPPER DOOR LIMIT SWITCH (UP)
8	G	FLIPPER DOOR LIMIT SWITCH (DOWN)
11	W	RETAINED ACC POWER
12	Y	REVERSE SIGNAL
13	BG	PARCEL SHELF STATUS SENSOR POWER SUPPLY
14	P	TRUNK LINK SENSOR SIGNAL (LH)
15	SB	TRUNK LINK SENSOR SIGNAL (RH)
16	GR	ROOF LATCH STATUS SENSOR SIGNAL
17	G	ROOF LATCH LOCK SENSOR SIGNAL
18	LG	TRUNK STATUS SENSOR SIGNAL
22	V	ROOF STATUS SENSOR POWER SUPPLY
23	B	ROOF STATUS SENSOR GND
24	GR	PARCEL SHELF STATUS SENSOR SIGNAL (DRAW)
25	R	PARCEL SHELF STATUS SENSOR SIGNAL (ROTATION)


26	P	ROOF STATUS SENSOR SIGNAL
27	Y	TRUNK LID OPEN REQUEST SIGNAL
28	BG	FLIPPER DOOR RELAY GND
29	V	LOCAL COMMUNICATION (GMA)
30	GR	LOCAL COMMUNICATION (POWER WINDOW)
31	L	CAN-H
32	P	CAN-L
33	V	ROOF STATUS SIGNAL (AUDIO)
35	B	ROOF WARNING BUZZER
36	Y	HYDRAULIC MOTOR RELAY GND (RH)
37	W	HYDRAULIC MOTOR RELAY GND (LH)
38	BR	HYDRAULIC MOTOR RELAY POWER SUPPLY

Connector No.	B83
Connector Name	RETRACTABLE HARD TOP CONTROL UNIT
Connector Type	NS16FER-CS



Terminal No.	Color of Wire	Signal Name [Specification]
41	SB	PARCEL SHELF MOTOR RELAY GND (UP)
42	W	PARCEL SHELF MOTOR RELAY GND (DOWN)
43	BR	HYDRAULIC PUMP POWER SUPPLY RELAY
44	R	MOTOR PARCEL SHELF (HORIZONTAL)
45	BR	MOTOR PARCEL SHELF (VERTICAL)
46	G	FLIPPER DOOR RELAY POWER SUPPLY (UP)
47	L	FLIPPER DOOR RELAY POWER SUPPLY (DOWN)
48	R	ROOF LATCH MOTOR (OPEN)
49	Y	ROOF LATCH MOTOR (CLOSE)
51	SB	TRUNK OPENER ACTUATOR
52	V	TRUNK POWER WINDOW MOTOR LH (UP)
53	BG	REAR POWER WINDOW MOTOR LH (UP)
54	LG	REAR POWER WINDOW MOTOR RH (DOWN)
55	GR	REAR POWER WINDOW MOTOR RH (UP)
56	P	REAR POWER WINDOW MOTOR RH (DOWN)

Connector No.	B84
Connector Name	RETRACTABLE HARD TOP CONTROL UNIT
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
57	Y	BAT
58	Y	BAT
59	Y	BAT
60	B	BAT
61	B	GND
62	GR	BAT (POWER WINDOW)
63	Y	BAT (POWER WINDOW)
64	B	GND (POWER WINDOW)
65	B	GND (POWER WINDOW)
66	P	SWITCHING VALVE 1
67	SB	SWITCHING VALVE 2
68	L	SWITCHING VALVE GND
69	G	REAR WINDOW DEF IN 1
70	P	REAR WINDOW DEF IN 2
71	BR	REAR WINDOW DEF OUT 1
72	W	REAR WINDOW DEF OUT 2

Connector No.	B86
Connector Name	TRUNK LINK SENSOR RH
Connector Type	THOMP-NH



Terminal No.	1	2
Color of Wire	SB	BG
Signal Name [Specification]	-	-

Connector No.	B87
Connector Name	ROOF WARNING BUZZER
Connector Type	RK02FBR



Terminal No.	1	2
Color of Wire	R	B
Signal Name [Specification]	-	-

Connector No.	B89
Connector Name	WIRE TO WIRE
Connector Type	NS30MM-CS



Terminal No.	3	4	5	6
Color of Wire	B	SB	B	Y
Signal Name [Specification]	-	-	-	-

JCKWM5290GB

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM

Connector No.	B84
Connector Name	WIRE TO WIRE
Connector Type	MD1MW-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-

Connector No.	B85
Connector Name	WIRE TO WIRE
Connector Type	MD1FW-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
3	B	-
5	W	-
6	R	-

7	B	- [With climate controlled seat]
7	G	- [Without climate controlled seat]
8	BG	-
9	GR	-
10	LG	-
40	GR	-
41	LG	-
42	BG	-
43	R	-
44	SHIELD	-
45	G	-
47	G	-
48	Y	-
49	SHIELD	-
50	P	-
51	SB	-
52	LG	-
53	L	-
54	G	-
55	GR	-
56	LG	-
57	G	-
58	R	-
67	L	-
68	P	-
80	G	-
81	R	-
82	W	-
83	B	-
84	SHIELD	-
85	O	-
86	BR	-
87	Y	-
88	SHIELD	-
89	SR	-
90	Y	-
91	GR	-
92	P	- [With BOSE system]
92	Y	- [Without BOSE system]
93	L	-
94	SB	-
95	V	-
96	P	-
97	L	- [With BOSE system]
97	LG	- [Without BOSE system]
98	Y/B	-
99	Y	-

Connector No.	B237
Connector Name	TEL ADAPTER UNIT
Connector Type	TH52FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	BATTERY
2	LG	ACC
3	BG	IGNITION
4	B	GND
5	SHIELD	SHIELD
7	R	MICROPHONE SIGNAL
8	SHIELD	MICROPHONE GND
9	Y	TEL VOICE SIGNAL (+)
10	G	TEL VOICE SIGNAL (-)
14	B	GND
16	P	ROOF STATUS SIGNAL (AUDIO)
21	B	CONTROL SIGNAL
23	B	CONTROL SIGNAL
27	B	CONTROL SIGNAL
28	P	VEHICLE SPEED (8-PULSE)
29	G	MICROPHONE VCC

Connector No.	B245
Connector Name	WIRE TO WIRE
Connector Type	NS02MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	P	-

Connector No.	B246
Connector Name	WIRE TO WIRE
Connector Type	TH18FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
4	P	-
5	L	-
6	SHIELD	-
7	B	-
8	W	-
10	SHIELD	-
11	B	-
12	W	-
13	R	-
14	SHIELD	-
15	G	-
16	Y	-

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM

Connector No. B301	WIRE TO WIRE	NS16FW-CS	7 6 5 4 3 2 1 16 15 14 13 12 11 10 9 8
Terminal No.	Color of Wire	Signal Name [Specification]	
1	R	-	
2	GR	-	
3	G	-	
4	W	-	
5	Y	-	
6	P	-	
7	P	-	
10	LG	-	
11	B	-	
12	B	-	
13	V	-	
14	BR	-	
15	L	-	
16	Y	-	

Connector No. B303	TRUNK LINK SENSOR LH	THM4FW-NH	1 2
Terminal No.	Color of Wire	Signal Name [Specification]	
1	GR	-	
2	R	-	

Connector No. B305	TRUNK LID OPENER ACTUATOR	M02FB-LC	1 2
Terminal No.	Color of Wire	Signal Name [Specification]	
1	V	V-	
2	BR	V+	

Connector No. B308	FLIPPER DOOR (RH)	NS06FW-CS	5 6 4 1 3 2
Terminal No.	Color of Wire	Signal Name [Specification]	
1	V	-	
2	BR	-	
3	G	-	
4	W	-	
5	Y	-	
6	P	-	
7	P	-	
10	LG	-	
11	B	-	
12	B	-	
13	V	-	
14	BR	-	
15	L	-	
16	Y	-	

Connector No. B307	FLIPPER DOOR (LH)	NS06FB-CS	5 6 1 2 3 4
Terminal No.	Color of Wire	Signal Name [Specification]	
1	V	SIG-	
2	L	SIG+	

Connector No. B309	SWITCH FD DOWN	NS08FW-CS	3 4 5 6 2 1
Terminal No.	Color of Wire	Signal Name [Specification]	
3	Y	SWITCH FD DOWN	
4	G	SWITCH FD DOWN I	
5	BR	MOTOR FD UP	
6	L	MOTOR FD DOWN	

Connector No. B310	FLIPPER DOOR (RH)	NS06FW-CS	5 6 4 1 3 2
Terminal No.	Color of Wire	Signal Name [Specification]	
1	V	-	
2	BR	-	
3	G	-	
4	W	-	
5	Y	-	
6	P	-	
7	P	-	
10	LG	-	
11	B	-	
12	B	-	
13	V	-	
14	BR	-	
15	L	-	
16	Y	-	

Connector No. B311	WIRE TO WIRE	NS08FW-CS	2 1 6 5 4 3
Terminal No.	Color of Wire	Signal Name [Specification]	
3	B	-	
4	P	-	
5	B	-	
6	Y	-	

Connector No. B351	WIRE TO WIRE	THM4FW-NH	4 3 2 1
Terminal No.	Color of Wire	Signal Name [Specification]	
3	B	-	
4	P	-	
5	B	-	
6	Y	-	

Connector No. B352	TONNEAU BOARD SWITCH	AG9FW	1 2 3
Terminal No.	Color of Wire	Signal Name [Specification]	
1	G	-	
3	B	-	

JCKWM5292GB

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM

Connector No.	E362
Connector Name	STRIKER SWITCH
Connector Type	RV02FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	SIG-
2	GR	SIG+

Connector No.	E363
Connector Name	TRUNK CLOSURE CONTROL UNIT
Connector Type	NS04FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	TRUNK ROOM LAMP SW SIG
2	Y	POWER
3	GR	STRIKER SW SIG
4	B	GND

Connector No.	E364
Connector Name	TRUNK CLOSURE CONTROL UNIT
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1		
2		

5	B	CLOSURE MOTOR GND
6	BR	CLOSURE MOTOR POWER

Connector No.	E322
Connector Name	WIRE TO WIRE
Connector Type	NS16MBR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	--	--
2	--	--
3	--	--
4	--	--
5	--	--
6	--	--
7	--	--
8	--	--
9	--	--
10	--	--
11	--	--
12	--	--
13	--	--
14	--	--
15	--	--
16	--	--

Connector No.	E653
Connector Name	WIRE TO WIRE
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	--	--
2	--	--

Connector No.	E654
Connector Name	WIRE TO WIRE
Connector Type	NS16MGY-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	--	--
2	--	--
3	--	--
4	--	--
5	--	--
6	--	--
7	--	--
8	--	--
9	--	--
10	--	--
11	--	--
12	--	--
13	--	--
14	--	--
15	--	--
16	--	--

Connector No.	E655
Connector Name	WIRE TO WIRE
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	--	--
2	--	--

Connector No.	E656
Connector Name	ROOF STATUS SENSOR
Connector Type	1-962700-1



Terminal No.	Color of Wire	Signal Name [Specification]
1	--	--
2	--	--
3	--	--

Connector No.	E657
Connector Name	ROOF LATCH ASSEMBLY
Connector Type	NS06FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	--	--
2	--	--
4	--	--
5	--	--
6	--	--

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P


JCKWM5293GB

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM


Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
4	BR	-
5	P	- [A/T models with automatic drive position]
6	SB	- [Except for A/T models with automatic drive position]
7	R	-
8	G	-
9	P	-
10	LG	-
11	W	-
12	L	-
13	B	-
14	V	-
15	Y	-
16	Y/B	-
17	Y	-
20	V	-
21	R	-
22	P	-
23	O	-
24	Y	-
25	SB	-
26	GR	-
27	GR	-
28	LG	-
29	G	-
30	Y	-
31	W	-
32	BR	-
33	L	-
34	R	-
35	V	-
37	B	-
38	O	-
39	GR	-
40	G	-
41	Y	-
42	LG	-
43	BR	-


44	V	-
45	P	-
46	W	-
47	V	-
48	P	-
49	W	-
50	SB	-
51	R	-
52	L	-

Connector No.	D8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
2	G	-
4	V	-
5	BR	-
6	W	-
8	L	-
9	W	-
10	SB	-
11	BR	-
13	R	-
14	V	-
15	BG	-

Connector No.	D9
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS50FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
17	W	-
19	B	-


17	B	-
19	Y	-

Connector No.	D10
Connector Name	DRIVER SIDE POWER WINDOW MOTOR
Connector Type	PH60FGY-Z




Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	R	-
3	BR	-
4	BG	-
5	W	-
6	L	-

Connector No.	D13
Connector Name	OUTSIDE HANDLE LH (REQUEST SWITCH)
Connector Type	RK02FL



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
6	BR	-
7	R	-
8	G	-
9	P	-
10	LG	-
11	W	-
12	L	-
13	B	-
14	Y	-
15	W	-
34	Y	-
35	Y/B	-
38	O	-
39	GR	-
40	G	-
41	Y	-
42	LG	-
43	BR	-
44	V	-
45	P	-
46	W	-
47	V	-
48	P	-
49	W	-
50	SB	-
51	R	-
52	L	-
53	O	-
54	GR	-
55	G	-


JCKWM5294GB

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM

Connector No.	D38
Connector Name	POWER WINDOW SUB-SWITCH
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
3	G	
4	BG	
8	L	
9	V	
10	W	
11	B	
12	R	
14	BR	
15	SB	
16	Y	

Connector No.	D40
Connector Name	PASSENGER SIDE POWER WINDOW MOTOR
Connector Type	FH80BFGY-Z




Terminal No.	Color of Wire	Signal Name [Specification]
1	G	
2	R	
3	V	
4	BG	
5	SB	
6	L	

Connector No.	D43
Connector Name	OUTSIDE HANDLE RH (REQUEST SWITCH)
Connector Type	RK02FL



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	
2	B	

Connector No.	E41
Connector Name	AIRB ACTUATOR AND ELECTRIC LIMIT (CONTROL UNIT)
Connector Type	BAA42FB-AH24-LH




Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	L	URMR
3	R	URVR
4	B	GND
5	Y	DS FL
6	BG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
11	V	DIAG-K
14	P	CAN-L
25	Y	BUS-L
26	LG	DP FL
27	GR	DS RL
28	G	UZ
29	P	DS RR
30	SB	BLS
31	R	VDG OFF SWITCH
35	L	CAN-H
45	B	BUS-H

Connector No.	E39
Connector Name	WIRE TO WIRE
Connector Type	MO2FFV-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	
2	LG	

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

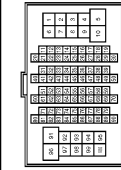

Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	
3	BG	
4	B/W	
5	G	
6	BG	
7	LG	
8	G	
9	R	
10	W	
11	V	
12	R	
13	L	
14	GR	
15	P	
16	W	
17	V	
18	BG	
19	GR	
20	LG	
30	R	

31	L	
32	BG	
33	P	
34	V	
35	BR	
36	W	
37	Y	
38	R	
39	B	
40	G	
41	W	
42	LG	
43	SB	
44	GR	
45	BG	
46	LG	
47	V	
48	P	
49	L	
59	B	
66	LG	
67	SB	
68	R	
69	W	
70	G	
80	W	
81	P	
82	G	
83	V	
84	L	
85	BG	
86	LG	
87	Y	
88	GR	
89	W	
90	W	
91	G	
92	B	
93	GR	
94	L	
95	Y	
96	BR	
97	SHIELD	
98	SHIELD	
99	L	
100	P	

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM

Connector No.	E117
Connector Name	WIRE TO WIRE
Connector Type	MSBMW-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
3	GR	-
4	P	-
5	BR	-
6	BG	-

Connector No.	F56
Connector Name	BACK-UP LAMP SWITCH
Connector Type	RK02FB




Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	O	-

Connector No.	F103
Connector Name	WIRE TO WIRE
Connector Type	TK36FW-NS10




Terminal No.	Color of Wire	Signal Name [Specification]
2	G	-
3	W	-
4	R	-
5	B	-
9	Y	-
10	GR	-
19	O	-
20	Y	-
28	B	-
29	LG	-
30	R	-
31	R	-
41	O	-
42	BR	-
43	P	-
44	L	-
45	Y	-
46	V	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2




Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	BR	-
6A	Y	-
7A	GR	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1B	R	-
3B	P	-
4B	G	-
5B	BG	-
6B	Y	-
7B	P	-
8B	R	-
9B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
9C	R	-
7C	B	-
8C	W	-
9C	BG	-
10C	L	-
11C	LG	-
12C	R	-

JCKWM5296GB


RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP SYSTEM


Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
4	R	-
5	B	-
6	BG	-
7	W	-
8	B	-
9	G	-
10	Y	-
11	W	-
12	L	-
13	B	-
14	GR	-
15	Y	-
16	Y/B	-
17	Y	-
20	BG	-
21	W	-
22	P	-
23	BG	-
24	V	-
25	BR	-
26	R	-
27	P	-
28	LG	-
29	SB	-
30	G	-
31	V	-
32	BR	-
33	GR	-
34	G	-
35	L	-
37	B	-
38	L	- [With automatic drive positioner]
39	BR	- [Without automatic drive positioner]
39	L	- [With automatic drive positioner]
39	L	- [Without automatic drive positioner]
40	Y	- [With automatic drive positioner]
41	BR	- [Without automatic drive positioner]
41	G	- [With automatic drive positioner]
41	G	- [Without automatic drive positioner]

42	R	-
43	G	-
44	Y	-
45	GR	-
46	BR	-
47	V	-
48	LG	-
49	P	-
50	SB	-
51	GR	-
52	L	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

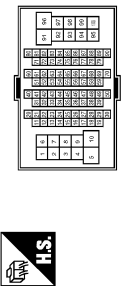

Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	-
3	R	-
4	G	-
5	G	-
6	BR	-
7	BR	-
8	Y	-
9	R	-
10	W	-
11	GR	-
12	R	-
13	L	-
14	P	-
15	G	-
16	W	-
17	BR	-
18	V	-
19	BG	-
20	L	-
30	R	-
31	L	-
32	Y	-
33	GR	-
34	P	-
35	BR	-

36	BR	-
37	Y	-
38	LG	-
39	SB	-
40	G	-
41	W	-
42	LG	-
43	P	-
44	GR	- [With A/T]
44	R	- [With M/T]
45	BG	-
46	G	-
47	P	-
48	L	-
49	L	-
59	B	-
66	Y	-
67	G	-
68	R	-
69	W	-
70	G	-
80	SB	-
81	R	-
82	V	-
83	W	-
84	L	-
85	BG	-
86	G	-
87	V	-
88	B	-
89	SB	-
90	G	-
91	W	-
92	B	-
93	G	-
94	L	-
95	BR	-
97	P	-
98	SHIELD	-
99	V	-
100	SB	-

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


RETRACTABLE HARD TOP SYSTEM

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TIM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	-
2	LG	-
3	G	-
4	V	-
5	L	-
6	B	-
8	L	-
10	BR	-
12	SHIELD	-
13	V	-
14	BR	-
15	GR	-
16	LG	-
17	L	-
20	BR	-
21	G	-
22	R	-
23	SB	-
24	B	-
25	W	-
26	Y	-
27	V	-
28	P	-
29	V	-
31	SHIELD	-
32	G	-
33	R	-
34	BG	-
35	GR	-
36	BR	-
37	P	- [With climate controlled seat]
37	L	- [Without climate controlled seat]
38	V	- [With climate controlled seat]
38	GR	- [Without climate controlled seat]
40	SHIELD	-
41	L	-
42	P	-
43	SHIELD	-

Connector No.	M28
Connector Name	ROOF OPEN / CLOSE SWITCH
Connector Type	TKG8FW-IV



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
3	V	-
4	BR	-
5	R	-
6	GR	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	SAB40FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	W	AIR BAG SIGNAL
7	LG	SECURITY SIGNAL
10	R	GROUND
15	B	METER CONTROL SWITCH GROUND
16	B	ILL GND
18	GR	ILL GND
19	B	ILL GND
20	R	ILL
21	R	IGNITION SIGNAL
22	B	GROUND
24	SB	COMMUNICATION SIGNAL (LCD->AMP)
25	B	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PULSE)

27	V	PARKING BRAKE SWITCH SIGNAL
28	SB	BRAKE FLUID LEVEL SWITCH SIGNAL
29	L	SEAT BELT BUCKLE SW SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
32	R	ILLUMINATION CONTROL SIGNAL
33	LG	SELECT SWITCH SIGNAL
36	SB	ENTER SWITCH SIGNAL
37	L	TRIP A/B RESET SWITCH SIGNAL
39	P	ILLUMINATION CONTROL SWITCH (-)
40	BG	ILLUMINATION CONTROL SWITCH (+)

Connector No.	M86
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	G	STOP LAMP SWITCH
5	L	MANUAL MODE SHIFT UP SIGNAL
6	BG	PADDLE SHIFTER UP SIGNAL
7	GR	COMMUNICATION SIGNAL (AMP->METER)
8	L	VEHICLE SPEED (2-PULSE)
9	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	W	MANUAL MODE SIGNAL
11	G	NON-MANUAL MODE SIGNAL
14	SB	COMMUNICATION SIGNAL (LCD->AMP)
20	G	IDLE ON / OFF SIGNAL
25	V	MANUAL MODE SHIFT DOWN SIGNAL
26	G	PADDLE SHIFTER DOWN SIGNAL
27	LG	COMMUNICATION SIGNAL (METER->AMP)
28	R	VEHICLE SPEED (8-PULSE)
30	V	PARKING BRAKE SWITCH SIGNAL
34	B	COMMUNICATION SIGNAL (AMP->LCD)
38	P	BLOWER MOTOR CONTROL SIGNAL

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM

Connector No.	M87
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH22FN-NH



41	42	43	44	45	46	47	53	54	55	56		
57	58	59	60	61	62	63	65	66	69	70	71	72


Terminal No.	Color of Wire	Signal Name [Specification]
41	BR	ACC POWER SUPPLY
42	BR	FUEL LEVEL SENSOR SIGNAL
43	R	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	V	AMBIENT SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	G	EXHAUST GAS OXIDISE SENSOR DETECTING SENSOR SIGNAL
53	W	IGNITION POWER SUPPLY
54	BG	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	LG	BRAKE FLUID LEVEL SWITCH SIGNAL
58	Y	FUEL LEVEL SENSOR SIGNAL GROUND
59	GR	INTAKE SENSOR GROUND
60	L	IN-VEHICLE SENSOR GROUND
61	R	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	L	ION CONTROL MODE OUTPUT SIGNAL
65	BG	ECV SIGNAL
68	L	A/C LAN SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	GR	GROUND
72	P	CAN-L

Connector No.	M89
Connector Name	BACK-UP LAMP RELAY
Connector Type	MS02FL-M2-LG



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	
2	W	
3	LG	
5	BG	

Connector No.	M106
Connector Name	WIRE TO WIRE
Connector Type	NH10MW-CS10




Terminal No.	Color of Wire	Signal Name [Specification]
1	B	
2	BR	
3	Y	
4	G	
5	SHIELD	
6	R	
7	B	
8	L	
9	R	
10	SB	
11	V	
12	LG	
18	B	
19	P	
20	Y	

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK38MW-NS10



Terminal No.	Color of Wire	Signal Name [Specification]
2	W	
3	BG	
4	R	
5	B	
9	R	
10	R	
19	BG	
20	Y	
28	GR	
29	LG	
30	LG	
31	W	
41	BG	
42	G	
43	P	
44	L	
45	G	
46	Y	

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	
3	B	
5	SB	
6	R	
7	G	
8	SB	
9	GR	
10	LG	
40	Y	
41	G	
42	LG	
43	R	
44	SHIELD	
45	G	
47	P	
48	L	

Terminal No.	Color of Wire	Signal Name [Specification]
49	SHIELD	
50	V	
51	SB	
52	BG	
53	L	
54	G	
55	Y	
56	LG	
57	SB	
58	LG	
67	SB	
68	LG	
80	W	
81	B	
82	R	
83	G	
84	SHIELD	
85	G	
86	L	
87	P	
88	SHIELD	
89	Y	
90	W	
91	GR	
92	P	
93	W	
94	BG	
95	BG	
96	P	
97	L	
98	Y/B	
99	Y	

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS03FB-LG



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	BG	POWER WINDOW POWER SUPPLY (R/P)

JCKWM5299GB

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

RETRACTABLE HARD TOP SYSTEM

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



4	5	6	7	8	9	10		
11	12	13	14	15	16	17	18	19

Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	P	PASSENGER DOOR UNLOCK OUTPUT
7	SB	STEP LAMP
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
11	GR	BAT (FUSE)
13	B	GND
14	W	PUSH-BUTTON IGNITION SW ILL GND
15	EG	ACC IND
17	BR	TURN SIGNAL RH (FRONT)
18	EG	TURN SIGNAL LH (FRONT)
19	V	ROOM LAMP TIMER CONTROL

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS



20	21	22	23	24		
25	26	27	28	29	30	31

Terminal No.	Color of Wire	Signal Name [Specification]
20	V	TURN SIGNAL RH (REAR)
23	Y	TRUNK LID OPEN OUTPUT
25	Y	TURN SIGNAL LH (REAR)
30	P	TRUNK ROOM LAMP

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FY-NH



31	32	33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48	49	50
51	52	53	54	55	56	57	58	59	60
61	62	63	64	65	66	67	68	69	70

Terminal No.	Color of Wire	Signal Name [Specification]
34	SB	TRUNK ROOM ANT-
35	V	TRUNK ROOM ANT+
38	B	REAR BUMPER ANT-
39	W	REAR BUMPER ANT+
47	Y	IGN RELAY (PDM L/R) CONT
50	G	TRUNK ROOM LAMP SW
52	BR	STARTER RELAY CONT
60	BR	PUSH SW
61	SB	TRUNK LID OPENER REQUEST SW
64	G	F-KEY WARM BUZZER (ENG ROOM)
67	GR	TRUNK LID OPENER SW

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



61	62	63	64	65	66	67	68	69	70
71	72	73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88	89	90

Terminal No.	Color of Wire	Signal Name [Specification]
72	R	ROOM ANT 2-
73	G	ROOM ANT 2+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT 1-
79	BR	ROOM ANT 1+
80	GR	NATS ANTENNA AMP
81	W	NATS ANTENNA AMP
82	R	IGN RELAY (F/B) CONT

83	Y	KEYLESS ENTRY RECEIVER COMM
87	Y	COMBI SW INPUT 5
88	BG	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	GAN-H
91	L	GAN-H
92	LG	KEY SLOT ILL
93	V	ON IND
95	BG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
97	L	S/L CONDITION 1
98	SB	S/L CONDITION 2
99	R	ASCD CLUTCH SW [With M/T]
99	R	SHIFT P [With A/T]
100	Y	PASSENGER DOOR REQUEST SW
101	P	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	W	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	W	COMBI SW INPUT 2
110	G	HAZARD SW
111	Y	S/L UNIT COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



111	112	113	114	115	116	117	118	119	120
121	122	123	124	125	126	127	128	129	130
131	132	133	134	135	136	137	138	139	140

Terminal No.	Color of Wire	Signal Name [Specification]
112	BR	RAIN SENSOR SERIAL LINK
113	G	OPTICAL SENSOR
114	R	CLUTCH INTERLOCK SW
116	SB	STOP LAMP SW 1
118	BR	STOP LAMP SW 2
119	GR	DR DOOR UNLOCK SENSOR
121	SB	KEY SLOT SW
123	W	IGN F/B
124	BG	PASSENGER DOOR SW
129	BG	TRUNK LID OPENER CANCEL SW
132	LG	P/W SW & RHT-G/U COMM
133	Y	PUSH-BUTTON IGNITION SW ILL POWER


134	LG	LOCK IND
137	BG	RECEIVER / SENSOR GND
138	Y	RECEIVER / SENSOR POWER SUPPLY
139	L	TIRE PRESSURE RECEIVER COMM
140	GR	SHIFT N/P
141	R	SECURITY INDICATOR LAMP
142	BR	COMBI SW OUTPUT 5
143	V	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	R	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


RETRACTABLE HARD TOP SYSTEM

Connector No.	M124
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS-5




Terminal No.	Color of Wire	Signal Name [Specification]
6	BG	-
7	R	-
8	G	-
9	P	-
10	V	-
11	SB	- [With BOSE system]
11	GR	- [Without BOSE system]
12	BR	-
13	B	-
14	G	-
15	W	-
34	Y	-
35	Y/B	-
38	W	-
39	BG	-
40	SB	-
41	BR	- [With automatic drive positioner]
41	G	- [Without automatic drive positioner]
42	R	-
43	L	-
44	Y	-
45	R	-
46	W	-
47	SB	-
48	BR	-
49	Y	-
50	P	-
51	LG	-
52	BG	-
53	Y	-
54	L	-
55	L	-

Connector No.	M136
Connector Name	WIRE TO WIRE
Connector Type	TH24FP-NH




Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	BR	-
3	R	-
4	GR	-
5	W	-
6	W	-
7	R	-
8	GR	-
9	SB	-
10	R	-
11	L	-
12	GR	-
16	B	-
21	GR	-
22	W	-
23	GR	-
24	W	-

Connector No.	M147
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	NH28FY-EX

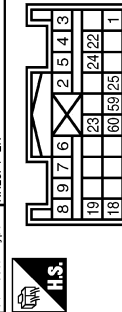


Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	IGN
2	B	GND
3	Y	DR1 (-)
4	Y	DR1 (-)DR2 (-)
5	Y	DR2 (-)

Connector No.	M179
Connector Name	ROOF OPEN / CLOSE SWITCH
Connector Type	TK06FW-IV



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
3	V	-
4	BR	-
5	R	-
6	GR	-


Connector No.	RI
Connector Name	WIRE TO WIRE
Connector Type	NH10FW-GS10

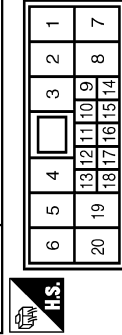

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	BR	-
3	Y	-
4	W	-
5	SHIELD	-
6	O	-
7	B	-
8	L	-
9	Y	-
10	B	-
11	V	-
12	R	-
18	B	-
19	BR	-
20	G	-

6	Y	ASI (+)
7	Y	ASI (-)
8	Y	ASZ (+)
8	Y	ASZ (-)
18	SB	ECZS (+)
19	V	ECZS (-)
22	SHIELD	GND
23	LG	AIRBAG W/L
24	G	SEAT BELT
25	R	CUTOFF TELLTALE
59	L	CAN-H
60	P	CAN-L

Connector No.	M174
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	BR	-
3	R	-
4	GR	-
5	W	-
6	LG	-
7	R	-
8	B	-
9	SB	-
10	O	-
11	L	-
12	G	-
16	B	-
21	GR	-
22	W	-
23	B	-
24	Y	-

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

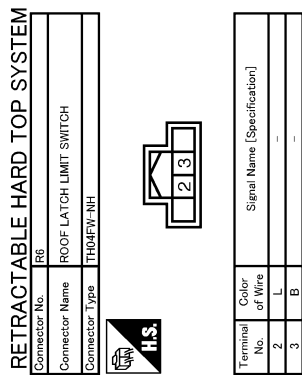

JCKWM5302GB

INFOID:000000006965883

Fail-safe

FAIL-SAFE CONTROL BY DTC

Retractable hard top control unit performs fail-safe control when any DTC are detected.

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT-III		Fail-safe	Cancellation	
U1000	CAN COMM CIRCUIT	Inhibit retractable hard top operation.	Communication is normal	A
U1010	CONTROL UNIT (CAN)	Inhibit retractable hard top operation.	Communication is normal	B
U0140	LOCAL COMM-1	Inhibit retractable hard top operation.	Communication is normal	
U0215	LOCAL COMM-1	Inhibit retractable hard top operation.	Communication is normal	C
B1701	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Replace retractable hard top control unit.	
B1702	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Replace retractable hard top control unit.	
B1709	ROOF SWITCH(OPEN)	Inhibit retractable hard top operation.	Detects roof open/close switch (OPEN) is OFF	D
B170A	ROOF SWITCH(CLOSE)	Inhibit retractable hard top operation.	Detects roof open/close switch (CLOSE) is OFF	
B170B	ROOF SWITCH	Inhibit retractable hard top operation.	Detects roof open/close switch (OPEN/CLOSE) is OFF	E
B170C	TRUNK LINK SENSOR(LH)	Inhibit retractable hard top operation.	Detects normal value	
B170D	TRUNK LINK SENSOR(RH)	Inhibit retractable hard top operation.	Detects normal value	F
B170F	SENSOR POWER SUPPLY	Inhibit retractable hard top operation.	Detects normal value	G
B1710	LATCH STATUS SENSOR	Inhibit retractable hard top operation.	Detects normal value	
B1711	LATCH LOCK SENSOR	Inhibit retractable hard top operation.	Detects normal value	
B1712	TRUNK STATUS SENSOR	Inhibit retractable hard top operation.	Detects normal value	H
B1715	ROOF STATUS SEN PWR	Inhibit retractable hard top operation.	Detects normal value	
B1716	PS STATUS SEN(DRAW)	Inhibit retractable hard top operation.	Detects normal value	I
B1718	PS STATUS SEN(ROTA)	Inhibit retractable hard top operation.	Detects normal value	
B1719	ROOF STATUS SEN	Inhibit retractable hard top operation.	Detects normal value	
B171A	HYDRAULIC PMP(LH)	Inhibit retractable hard top operation.	Detects normal value	J
B171B	HYDRAULIC PMP(RH)	Inhibit retractable hard top operation.	Detects normal value	
B171C	SWITCHING VALVE 1	Inhibit retractable hard top operation.	Detects normal value	
B171D	SWITCHING VALVE 2	Inhibit retractable hard top operation.	Detects normal value	K
B171E	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	
B171F	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	DEF
B1720	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	
B1721	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	
B1722	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	M
B1723	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	
B1724	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	N
B1725	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	
B1726	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	
B1728	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	O
B1729	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	
B172A	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	P
B172B	ROOF STATE SIG(AUDIO)	Inhibit retractable hard top operation.	Detects normal value	
B172D	ROOF WARNING BUZZER	Inhibit retractable hard top operation.	Detects normal value	
B172E	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	
B172F	REAR PWR WINDOW(LH)	Inhibit retractable hard top operation.	Detects normal value	

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT-III		Fail-safe	Cancellation
B1730	REAR PWR WIN-DOW(RH)	Inhibit retractable hard top operation.	Detects normal value
B1731	HYDRAULIC STATE 1	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1732	HYDRAULIC STATE 2	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1733	HYDRAULIC STATE 3	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1734	HYDRAULIC STATE 4	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1735	HYDRAULIC STATE 5	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1736	HYDRAULIC STATE 6	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1737	HYDRAULIC STATE 7	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1738	HYDRAULIC STATE 8	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1739	HYDRAULIC STATE 9	Inhibit retractable hard top operation.	Turn ignition switch OFF
B173A	HYDRAULIC STATE 10	Inhibit retractable hard top operation.	Turn ignition switch OFF
B173B	HYDRAULIC STATE 11	Inhibit retractable hard top operation.	Turn ignition switch OFF
B173C	HYDRAULIC STATE 12	Inhibit retractable hard top operation.	Turn ignition switch OFF
B173D	HYDRAULIC STATE 13	Inhibit retractable hard top operation.	Turn ignition switch OFF
B173E	HYDRAULIC STATE 14	Inhibit retractable hard top operation.	Turn ignition switch OFF
B173F	HYDRAULIC STATE 15	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1740	HYDRAULIC STATE 16	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1741	HYDRAULIC STATE 17	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1742	HYDRAULIC STATE 18	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1743	HYDRAULIC STATE 19	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1744	HYDRAULIC STATE 20	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1745	HYDRAULIC STATE 21	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1746	HYDRAULIC STATE 22	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1747	P SHELF (DRAW) STATE 1	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1748	P SHELF (DRAW) STATE 2	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1749	P SHELF (DRAW) STATE 3	Inhibit retractable hard top operation.	Turn ignition switch OFF
B174A	P SHELF (DRAW) STATE 4	Inhibit retractable hard top operation.	Turn ignition switch OFF
B174B	P SHELF (DRAW) STATE 5	Inhibit retractable hard top operation.	Turn ignition switch OFF
B174C	P SHELF (DRAW) STATE 6	Inhibit retractable hard top operation.	Turn ignition switch OFF
B174D	P SHELF (ROT) STATE 1	Inhibit retractable hard top operation.	Turn ignition switch OFF
B174E	P SHELF (ROT) STATE 2	Inhibit retractable hard top operation.	Turn ignition switch OFF
B174F	P SHELF (ROT) STATE 3	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1750	P SHELF (ROT) STATE 4	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1751	ROOF LATCH STATE 1	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1752	ROOF LATCH STATE 2	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1753	ROOF LATCH STATE 3	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1754	FLIPPER DOOR STATE 1	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1755	FLIPPER DOOR STATE 2	Inhibit retractable hard top operation.	Turn ignition switch OFF
B1756	FLIPPER DOOR STATE 3	Inhibit retractable hard top operation.	Turn ignition switch OFF

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT-III		Fail-safe	Cancellation	
B1757	FLIPPER DOOR STATE 4	Inhibit retractable hard top operation.	Turn ignition switch OFF	A
B1758	THERMO PROTECTION	Inhibit retractable hard top operation.	It is not in thermo protection area (Refer to RF-20. "RETRACTABLE HARD TOP SYSTEM : System Description")	B
B175C	PWR SOURCE(ROOF)	Inhibit retractable hard top operation.	Power source is 11.4 (V) or more for 0.5 second	C
B175D	PWR SOURCE(ROOF)	Inhibit retractable hard top operation.	Power source is 14.5 (V) or more for 4 seconds	
B175E	PWR SOURCE(WINDOW)	Inhibit retractable hard top operation and rear power window operation.	Power source (power window) is 9.5 (V) or less	D
B175F	PWR SOURCE(WINDOW)	Inhibit retractable hard top operation and rear power window operation.	Power source (power window) is 15.5 (V) or more	E
B1760	ROOF CONTROL UNIT	Inhibit rear window defogger operation.	Detects normal value	F
B1761	ROOF CONTROL UNIT	Inhibit retractable hard top operation.	Detects normal value	G
B1762	ROOF STATE	Inhibit retractable hard top operation.	Detects normal value	
B1763	HYDRAULIC STATE	Inhibit retractable hard top operation.	Detects normal value	
B1764	ROOF LATCH STATE	Inhibit retractable hard top operation.	Detects normal value	
B1765	FLIPPER DOOR STATE	Inhibit retractable hard top operation.	Detects normal value	

DTC Inspection Priority Chart

INFOID:000000006965884

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Display contents of CONSULT-III		
1	U1000	CAN COMM CIRCUIT	I
	U1010	CONTROL UNIT (CAN)	J
2	B175C	PWR SOURCE(ROOF)	K
	B175D	PWR SOURCE(ROOF)	
	B175E	PWR SOURCE(WINDOW)	
	B175F	PWR SOURCE(WINDOW)	
3	B1701	ROOF CONTROL UNIT	DEF
	B1702	ROOF CONTROL UNIT	
	B171E	ROOF CONTROL UNIT	
	B171F	ROOF CONTROL UNIT	
	B1720	ROOF CONTROL UNIT	
	B1721	ROOF CONTROL UNIT	
	B1722	ROOF CONTROL UNIT	
	B1723	ROOF CONTROL UNIT	
	B1724	ROOF CONTROL UNIT	
	B1725	ROOF CONTROL UNIT	
	B1726	ROOF CONTROL UNIT	
	B1728	ROOF CONTROL UNIT	
	B1729	ROOF CONTROL UNIT	
	B172A	ROOF CONTROL UNIT	
	B172E	ROOF CONTROL UNIT	
B1760	ROOF CONTROL UNIT		
B1761	ROOF CONTROL UNIT		

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Priority	Display contents of CONSULT-III	
4	B170F	SENSOR POWER SUPPLY
	U0140	LOCAL COMM-1
5	U0215	LOCAL COMM-1
	B1709	ROOF SWITCH(OPEN)
	B170A	ROOF SWITCH(CLOSE)
	B170B	ROOF SWITCH
	B1758	THERMO PROTECTION
	B171A	HYDRAULIC PMP(LH)
	B171B	HYDRAULIC PMP(RH)
	B171C	SWITCHING VALVE 1
	B171D	SWITCHING VALVE 2
	B172F	REAR PWR WINDOW(LH)
	B1730	REAR PWR WINDOW(RH)
	B1715	ROOF STATE SEN PWR
	B170C	TRUNK LINK SENSOR(LH)
	B170D	TRUNK LINK SENSOR(RH)
	B1710	LATCH STATUS SENSOR
	B1711	LATCH LOCK SENSOR
	B1712	TRUNK STATUS SENSOR
	B1716	PS STATUS SEN(ROTA)
B1718	PS STATUS SEN(DRAW)	
B1719	ROOF STATUS SEN	
6	B172D	ROOF WARNING BUZZER

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Priority	Display contents of CONSULT-III		
	B1731	HYDRAULIC STATE 1	A
	B1732	HYDRAULIC STATE 2	
	B1733	HYDRAULIC STATE 3	B
	B1734	HYDRAULIC STATE 4	
	B1735	HYDRAULIC STATE 5	
	B1736	HYDRAULIC STATE 6	C
	B1737	HYDRAULIC STATE 7	
	B1738	HYDRAULIC STATE 8	D
	B1739	HYDRAULIC STATE 9	
	B173A	HYDRAULIC STATE 10	
	B173B	HYDRAULIC STATE 11	E
	B173C	HYDRAULIC STATE 12	
	B173D	HYDRAULIC STATE 13	F
	B173E	HYDRAULIC STATE 14	
	B173F	HYDRAULIC STATE 15	
	B1740	HYDRAULIC STATE 16	G
	B1741	HYDRAULIC STATE 17	
	B1742	HYDRAULIC STATE 18	H
	B1743	HYDRAULIC STATE 19	
7	B1744	HYDRAULIC STATE 20	I
	B1745	HYDRAULIC STATE 21	
	B1746	HYDRAULIC STATE 22	J
	B1747	P SHELF (DRAW) STATE 1	
	B1748	P SHELF (DRAW) STATE 2	K
	B1749	P SHELF (DRAW) STATE 3	
	B174A	P SHELF (DRAW) STATE 4	
	B174B	P SHELF (DRAW) STATE 5	DEF
	B174C	P SHELF (DRAW) STATE 6	
	B174D	P SHELF (ROT) STATE 1	
	B174E	P SHELF (ROT) STATE 2	M
	B174F	P SHELF (ROT) STATE 3	
	B1750	P SHELF (ROT) STATE 4	
	B1751	ROOF LATCH STATE 1	N
	B1752	ROOF LATCH STATE 2	
	B1753	ROOF LATCH STATE 3	
	B1754	FLIPPER DOOR STATE 1	O
	B1755	FLIPPER DOOR STATE 2	
	B1756	FLIPPER DOOR STATE 3	
	B1757	FLIPPER DOOR STATE 4	P
8	B1707	ROOF OPEN STATE	
	B1708	ROOF CLOSE STATE	
9	B1764	ROOF LATCH STATE	
	B1765	FLIPPER DOOR STATE	
10	B1762	ROOF STATE	

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Priority	Display contents of CONSULT-III	
11	B1763	HYDRAULIC STATE
12	B172B	ROOF STATE SIG(AUDIO)

DTC Index

INFOID:000000006965885

NOTE:

For details of Freeze Frame Data, refer to [RF-45, "CONSULT-III Function"](#).

Display contents of CONSULT-III		Fail-safe	Freeze Frame Data	Reference page
No DTC is detected. Further testing may be required.		—	—	—
U1000	CAN COMM CIRCUIT	×	×	RF-92
U1010	CONTROL UNIT (CAN)	×	×	RF-93
U0140	LOCAL COMM-1	×	×	RF-94
U0215	LOCAL COMM-2	×	×	RF-95
B1701	ROOF CONTROL UNIT	×	×	RF-97
B1702	ROOF CONTROL UNIT	×	×	RF-98
B1707	ROOF OPEN STATE	—	×	RF-99
B1708	ROOF CLOSE STATE	—	×	RF-101
B1709	ROOF SWITCH(OPEN)	×	×	RF-103
B170A	ROOF SWITCH(CLOSE)	×	×	RF-105
B170B	ROOF SWITCH	×	×	RF-107
B170C	TRUNK LINK SENSOR(LH)	×	×	RF-109
B170D	TRUNK LINK SENSOR(RH)	×	×	RF-111
B170F	SENSOR POWER SUPPLY	×	×	RF-113
B1710	LATCH STATUS SENSOR	×	×	RF-116
B1711	LATCH LOCK SENSOR	×	×	RF-118
B1712	TRUNK STATUS SENSOR	×	×	RF-120
B1715	ROOF STATUS SEN PWR	×	×	RF-122
B1716	PS STATUS SEN(DRAW)	×	×	RF-124
B1718	PS STATUS SEN(ROTA)	×	×	RF-126
B1719	ROOF STATUS SEN	×	×	RF-128
B171A	HYDRAULIC PMP(LH)	×	×	RF-130
B171B	HYDRAULIC PMP(RH)	×	×	RF-132
B171C	SWITCHING VALVE 1	×	×	RF-134
B171D	SWITCHING VALVE 2	×	×	RF-136
B171E	ROOF CONTROL UNIT	×	×	RF-138
B171F	ROOF CONTROL UNIT	×	×	RF-139
B1720	ROOF CONTROL UNIT	×	×	RF-140
B1721	ROOF CONTROL UNIT	×	×	RF-141
B1722	ROOF CONTROL UNIT	×	×	RF-142
B1723	ROOF CONTROL UNIT	×	×	RF-143
B1724	ROOF CONTROL UNIT	×	×	RF-144
B1725	ROOF CONTROL UNIT	×	×	RF-145
B1726	ROOF CONTROL UNIT	×	×	RF-146
B1728	ROOF CONTROL UNIT	×	×	RF-147

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT-III		Fail-safe	Freeze Frame Data	Reference page
B1729	ROOF CONTROL UNIT	×	×	RF-148
B172A	ROOF CONTROL UNIT	×	×	RF-149
B172B	ROOF STATE SIG(AUDIO)	×	×	RF-150
B172D	ROOF WARNING BUZZER	×	×	RF-152
B172E	ROOF CONTROL UNIT	×	×	RF-154
B172F	REAR PWR WINDOW(LH)	×	×	RF-155
B1730	REAR PWR WINDOW(RH)	×	×	RF-157
B1731	HYDRAULIC STATE 1	×	×	RF-159
B1732	HYDRAULIC STATE 2	×	×	RF-161
B1733	HYDRAULIC STATE 3	×	×	RF-163
B1734	HYDRAULIC STATE 4	×	×	RF-165
B1735	HYDRAULIC STATE 5	×	×	RF-167
B1736	HYDRAULIC STATE 6	×	×	RF-169
B1737	HYDRAULIC STATE 7	×	×	RF-170
B1738	HYDRAULIC STATE 8	×	×	RF-171
B1739	HYDRAULIC STATE 9	×	×	RF-172
B173A	HYDRAULIC STATE 10	×	×	RF-173
B173B	HYDRAULIC STATE 11	×	×	RF-174
B173C	HYDRAULIC STATE 12	×	×	RF-175
B173D	HYDRAULIC STATE 13	×	×	RF-176
B173E	HYDRAULIC STATE 14	×	×	RF-177
B173F	HYDRAULIC STATE 15	×	×	RF-178
B1740	HYDRAULIC STATE 16	×	×	RF-179
B1741	HYDRAULIC STATE 17	×	×	RF-182
B1742	HYDRAULIC STATE 18	×	×	RF-183
B1743	HYDRAULIC STATE 19	×	×	RF-185
B1744	HYDRAULIC STATE 20	×	×	RF-187
B1745	HYDRAULIC STATE 21	×	×	RF-189
B1746	HYDRAULIC STATE 22	×	×	RF-191
B1747	P SHELF (DRAW) STATE 1	×	×	RF-193
B1748	P SHELF (DRAW) STATE 2	×	×	RF-194
B1749	P SHELF (DRAW) STATE 3	×	×	RF-195
B174A	P SHELF (DRAW) STATE 4	×	×	RF-196
B174B	P SHELF (DRAW) STATE 5	×	×	RF-197
B174C	P SHELF (DRAW) STATE 6	×	×	RF-198
B174D	P SHELF (ROT) STATE 1	×	×	RF-199
B174E	P SHELF (ROT) STATE 2	×	×	RF-200
B174F	P SHELF (ROT) STATE 3	×	×	RF-201
B1750	P SHELF (ROT) STATE 4	×	×	RF-202
B1751	ROOF LATCH STATE 1	×	×	RF-203
B1752	ROOF LATCH STATE 2	×	×	RF-204
B1753	ROOF LATCH STATE 3	×	×	RF-205
B1754	FLIPPER DOOR STATE 1	×	×	RF-206
B1755	FLIPPER DOOR STATE 2	×	×	RF-207

A

B

C

D

E

F

G

H

I

J

K

DEF

M

N

O

P

RETRACTABLE HARD TOP CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT-III		Fail-safe	Freeze Frame Data	Reference page
B1756	FLIPPER DOOR STATE 3	×	×	RF-208
B1757	FLIPPER DOOR STATE 4	×	×	RF-209
B1758	THERMO PROTECTION	×	×	RF-210
B175C	PWR SOURCE(ROOF)	×	×	RF-211
B175D	PWR SOURCE(ROOF)	×	×	RF-212
B175E	PWR SOURCE(WINDOW)	×	×	RF-213
B175F	PWR SOURCE(WINDOW)	×	×	RF-215
B1760	ROOF CONTROL UNIT	×	×	RF-217
B1761	ROOF CONTROL UNIT	×	×	RF-218
B1762	ROOF STATE	×	×	RF-219
B1763	HYDRAULIC STATE	×	×	RF-222
B1764	ROOF LATCH STATE	×	×	RF-224
B1765	FLIPPER DOOR STATE	×	×	RF-225

REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGER DO NOT OPERATE.

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGER DO NOT OPERATE.

Diagnosis Procedure

INFOID:000000006469724

1. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit.

Refer to [DEF-9. "BCM \(BODY CONTROL MODULE\) : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CHECK REAR WINDOW DEFOGGER SWITCH

Check rear window defogger switch.

Refer to [DEF-10. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3. CHECK REAR WINDOW DEFOGGER RELAY

Check rear window defogger relay.

Refer to [DEF-11. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGER OPERATE.

< SYMPTOM DIAGNOSIS >

REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGER OPERATE.

Diagnosis Procedure

INFOID:000000006469725

1. CHECK RETRACTABLE HARD TOP CONTROL UNIT CIRCUIT

Check retractable hard top control unit circuit.
Refer to [DEF-13, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair or replace the malfunctioning parts.

2. CHECK REAR WINDOW DEFOGGER

Check rear window defogger.
Refer to [DEF-15, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace the malfunctioning parts.

3. CONFIRM THE OPERATION

Confirm the operation again

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
- NO >> GO TO 1.

DOOR MIRROR DEFOGGER DOES NOT OPERATE BUT REAR WINDOW DEFOGGER OPERATE

< SYMPTOM DIAGNOSIS >

DOOR MIRROR DEFOGGER DOES NOT OPERATE BUT REAR WINDOW DEFOGGER OPERATE

BOTH SIDES

BOTH SIDES : Diagnosis Procedure

INFOID:000000006469726

1.CHECK DOOR MIRROR DEFOGGER

Check door mirror defogger.

Refer to [DEF-17, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

DRIVER SIDE

DRIVER SIDE : Diagnosis Procedure

INFOID:000000006469727

1.CHECK DRIVER SIDE DOOR MIRROR DEFOGGER

Check driver side door mirror defogger.

Refer to [DEF-18, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

PASSENGER SIDE

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000006469728

1.CHECK PASSENGER SIDE DOOR MIRROR DEFOGGER.

Check passenger side door mirror defogger.

Refer to [DEF-20, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

DEF

ON IS NOT DISPLAYED WHEN PRESSING REAR WINDOW DEFOGGER SWITCH BUT IT IS OPERATED

< SYMPTOM DIAGNOSIS >

ON IS NOT DISPLAYED WHEN PRESSING REAR WINDOW DEFOGGER SWITCH BUT IT IS OPERATED

Diagnosis Procedure

INFOID:000000006469729

1.CHECK AV CONTROL UNIT FUNCTION

Check that the AV control unit is operating normally.

Base audio without navigation refer to [AV-65, "Work Flow"](#).

Bose audio without navigation refer to [AV-196, "Work Flow"](#).

Bose audio with navigation refer to [AV-341, "Work Flow"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#) .

NO >> GO TO 1.

REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE

Diagnosis Procedure

INFOID:000000006469730

1. CHECK MULTIFUNCTION SWITCH (REAR WINDOW DEFOGGER SWITCH)

Check rear window defogger operate.

- YES >> Replace multifunction switch (rear window defogger switch). Refer to [AV-118. "Removal and Installation"](#)
- NO >> Check rear window defogger system. Refer to [DEF-3. "Work Flow"](#)

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

DEF

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006469731

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FILAMENT

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION


FILAMENT

Inspection and Repair


INFOID:000000006469732

INSPECTION


1. When measuring voltage, wrap tin foil around the top of the negative probe. Then press the foil against the wire with your finger.

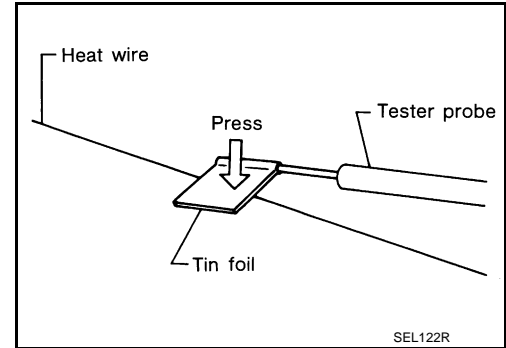

2. Attach probe circuit tester (in Volt range) to middle portion of each filament.

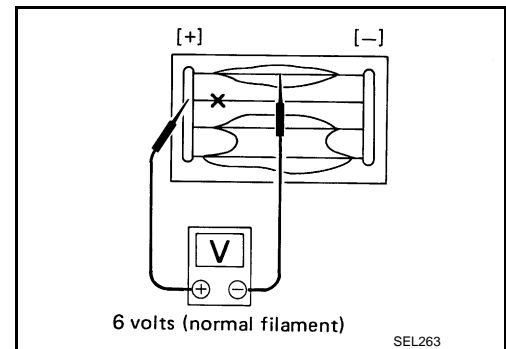

3. If a filament is burned out, circuit tester registers 0 or battery voltage.
4. To locate burned out point, move probe to left and right along filament. Test needle will swing abruptly when probe passes the point.

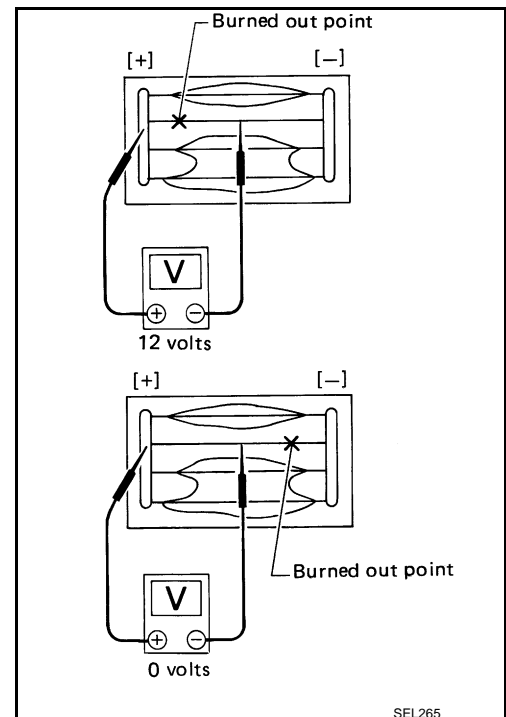

REPAIR

REPAIR EQUIPMENT

- Conductive silver composition (Dupont No. 4817 or equivalent)

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P


FILAMENT

< REMOVAL AND INSTALLATION >


- Ruler 30 cm (11.8 in) long
- Drawing pen
- Heat gun
- Alcohol
- Cloth

REPAIRING PROCEDURE

1. Wipe broken heat wire and its surrounding area clean with a cloth dampened in alcohol.
2. Apply a small amount of conductive silver composition to tip of drawing pen. Shake silver composition container before use.
3. Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.

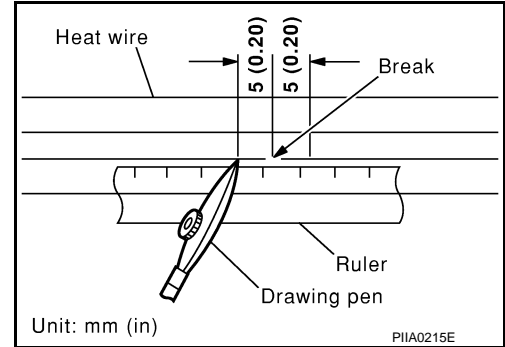

4. After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited. Do not touch repaired area while test is being conducted.

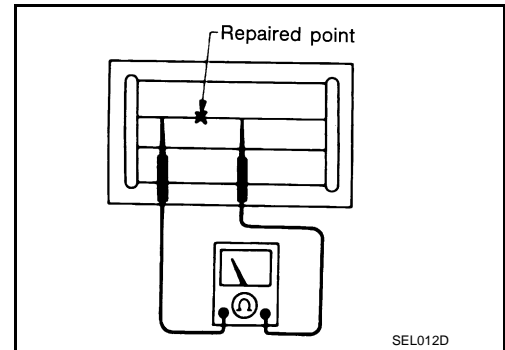

5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet. If a heat gun is not available, let the repaired area dry for 24 hours.

