

# MWI

## SECTION

### METER, WARNING LAMP & INDICATOR

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

## CONTENTS

|   |    |  |    |
|---|----|--|----|
| <b>BASIC INSPECTION</b> .....                                     | 4  | <b>ODO/TRIP METER</b> .....                                    | 19 |
| <b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....                        | 4  | ODO/TRIP METER : System Diagram .....                          | 19 |
| Work flow .....   | 4  | ODO/TRIP METER : System Description .....                      | 19 |
| <b>SYSTEM DESCRIPTION</b> .....                                   | 6  | ODO/TRIP METER : Component Parts Location .....                | 20 |
| <b>METER SYSTEM</b> .....   | 6  | ODO/TRIP METER : Component Description .....                   | 20 |
| <b>METER SYSTEM</b> .....   | 6  | <b>SHIFT POSITION INDICATOR</b> .....                          | 21 |
| METER SYSTEM : System Diagram .....                               | 6  | SHIFT POSITION INDICATOR : System Diagram .....                | 21 |
| METER SYSTEM : System Description .....                           | 6  | SHIFT POSITION INDICATOR : System Description .....            | 21 |
| METER SYSTEM : Component Parts Location .....                     | 10 | SHIFT POSITION INDICATOR : Component Parts Location .....      | 22 |
| METER SYSTEM : Component Description .....                        | 10 | SHIFT POSITION INDICATOR : Component Description .....         | 23 |
| <b>SPEEDOMETER</b> .....  | 11 | <b>WARNING LAMPS/INDICATOR LAMPS</b> .....                     | 23 |
| SPEEDOMETER : System Diagram .....                                | 11 | WARNING LAMPS/INDICATOR LAMPS : System Diagram .....           | 23 |
| SPEEDOMETER : System Description .....                            | 11 | WARNING LAMPS/INDICATOR LAMPS : System Description .....       | 23 |
| SPEEDOMETER : Component Parts Location .....                      | 12 | WARNING LAMPS/INDICATOR LAMPS : Component Parts Location ..... | 24 |
| SPEEDOMETER : Component Description .....                         | 12 | WARNING LAMPS/INDICATOR LAMPS : Component Description .....    | 24 |
| <b>TACHOMETER</b> .....   | 13 | <b>METER ILLUMINATION CONTROL</b> .....                        | 25 |
| TACHOMETER : System Diagram .....                                 | 13 | METER ILLUMINATION CONTROL : System Diagram .....              | 25 |
| TACHOMETER : System Description .....                             | 13 | METER ILLUMINATION CONTROL : System Description .....          | 25 |
| TACHOMETER : Component Parts Location .....                       | 14 | METER ILLUMINATION CONTROL : Component Parts Location .....    | 26 |
| TACHOMETER : Component Description .....                          | 14 | METER ILLUMINATION CONTROL : Component Description .....       | 26 |
| <b>ENGINE COOLANT TEMPERATURE GAUGE</b> .....                     | 15 | <b>INFORMATION DISPLAY</b> .....                               | 27 |
| ENGINE COOLANT TEMPERATURE GAUGE : System Diagram .....           | 15 | INFORMATION DISPLAY : System Diagram .....                     | 27 |
| ENGINE COOLANT TEMPERATURE GAUGE : System Description .....       | 15 | INFORMATION DISPLAY : System Description .....                 | 27 |
| ENGINE COOLANT TEMPERATURE GAUGE : Component Parts Location ..... | 16 | INFORMATION DISPLAY : Component Parts Location .....           | 30 |
| ENGINE COOLANT TEMPERATURE GAUGE : Component Description .....    | 16 | INFORMATION DISPLAY : Component Description .....              | 30 |
| <b>FUEL GAUGE</b> .....   | 17 |  |    |
| FUEL GAUGE : System Diagram .....                                 | 17 |  |    |
| FUEL GAUGE : System Description .....                             | 17 |  |    |
| FUEL GAUGE : Component Parts Location .....                       | 18 |  |    |
| FUEL GAUGE : Component Description .....                          | 18 |  |    |

MWI

|  |           |  |            |
|--|-----------|--|------------|
| <b>COMPASS</b> .....                                       | <b>32</b> | <b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> .....                | <b>51</b>  |
| Description .....  | 32        | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure ..... | 51         |
| Component Parts Location .....                             | 33        |  |            |
| Special Repair Requirement .....                           | 33        |  |            |
| <b>CLOCK</b> .....   | <b>34</b> | <b>FUEL LEVEL SENSOR SIGNAL CIRCUIT</b> .....  | <b>53</b>  |
| Component Parts Location .....                             | 34        | Description .....  | 53         |
| <b>DIAGNOSIS SYSTEM (METER)</b> .....                      | <b>35</b> | Component Function Check .....   | 53         |
| Diagnosis Description .....                                | 35        | Diagnosis Procedure .....  | 53         |
| <b>DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)</b> ..... | <b>37</b> | Component Inspection .....   | 54         |
| CONSULT-III Function (METER/M&A) .....                     | 37        | <b>METER CONTROL SWITCH SIGNAL CIRCUIT</b> .....   | <b>56</b>  |
| <b>DTC/CIRCUIT DIAGNOSIS</b> .....                         | <b>41</b> | Description .....  | 56         |
| <b>U1000 CAN COMM CIRCUIT</b> .....                        | <b>41</b> | Diagnosis Procedure .....  | 56         |
| Description .....  | 41        | Component Inspection .....   | 57         |
| DTC Logic .....  | 41        | <b>OIL PRESSURE SWITCH SIGNAL CIRCUIT</b> ...  | <b>58</b>  |
| Diagnosis Procedure .....                                  | 41        | Description .....  | 58         |
| <b>U1010 CONTROL UNIT (CAN)</b> .....                      | <b>42</b> | Component Function Check .....   | 58         |
| Description .....  | 42        | Diagnosis Procedure .....  | 58         |
| DTC Logic .....  | 42        | Component Inspection .....   | 58         |
| Diagnosis Procedure .....                                  | 42        | <b>PARKING BRAKE SWITCH SIGNAL CIRCUIT</b> .....   | <b>60</b>  |
| <b>B2201 COMMUNICATION ERROR 1</b> .....                   | <b>43</b> | Description .....  | 60         |
| Description .....  | 43        | Component Function Check .....   | 60         |
| DTC Logic .....  | 43        | Diagnosis Procedure (A/T models) .....   | 60         |
| Diagnosis Procedure .....                                  | 43        | Diagnosis Procedure (M/T models) .....   | 61         |
| <b>B2202 COMMUNICATION ERROR 2</b> .....                   | <b>45</b> | Component Inspection .....   | 61         |
| Description .....  | 45        | <b>WASHER LEVEL SWITCH SIGNAL CIRCUIT..</b>  | <b>63</b>  |
| DTC Logic .....  | 45        | Description .....  | 63         |
| Diagnosis Procedure .....                                  | 45        | Diagnosis Procedure .....  | 63         |
| <b>B2205 VEHICLE SPEED</b> .....                           | <b>47</b> | Component Inspection .....   | 63         |
| Description .....  | 47        | <b>COMPASS</b> .....   | <b>64</b>  |
| DTC Logic .....  | 47        | Wiring Diagram - COMPASS - .....   | 64         |
| Diagnosis Procedure .....                                  | 47        | <b>CLOCK</b> .....   | <b>66</b>  |
| <b>B2267 ENGINE SPEED</b> .....                            | <b>48</b> | Wiring Diagram - CLOCK - .....   | 66         |
| Description .....  | 48        | <b>ECU DIAGNOSIS INFORMATION</b> .....   | <b>68</b>  |
| DTC Logic .....  | 48        | <b>COMBINATION METER</b> .....   | <b>68</b>  |
| Diagnosis Procedure .....                                  | 48        | Reference Value .....  | 68         |
| <b>B2268 WATER TEMP</b> .....                              | <b>49</b> | Wiring Diagram - METER - .....   | 71         |
| Description .....  | 49        | Fail-safe .....  | 81         |
| DTC Logic .....  | 49        | DTC Index .....  | 82         |
| Diagnosis Procedure .....                                  | 49        | <b>UNIFIED METER AND A/C AMP.</b> .....  | <b>83</b>  |
| <b>POWER SUPPLY AND GROUND CIRCUIT</b> ....                | <b>50</b> | Reference Value .....  | 83         |
| <b>COMBINATION METER</b> .....                             | <b>50</b> | Wiring Diagram - METER - .....   | 90         |
| COMBINATION METER : Diagnosis Procedure ...                | 50        | Fail-safe .....  | 100        |
| <b>UNIFIED METER AND A/C AMP.</b> .....                    | <b>50</b> | DTC Index .....  | 101        |
| UNIFIED METER AND A/C AMP. : Diagnosis Procedure .....     | 50        | <b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> .....                | <b>103</b> |
|  |           | Reference Value .....  | 103        |
|  |           | Wiring Diagram - IPDM E/R - .....  | 110        |

|  |     |  |     |   |
|--|-----|--|-----|---|
| Fail-safe .....  | 113 | <b>THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT</b> .....  | 124 | A |
| DTC Index .....  | 115 | Description .....  | 124 |   |
| <b>SYMPTOM DIAGNOSIS</b> .....   | 116 | Diagnosis Procedure .....  | 124 | B |
| <b>THE FUEL GAUGE POINTER DOES NOT MOVE</b> .....  | 116 | <b>NORMAL OPERATING CONDITION</b> .....  | 125 |   |
| Description .....  | 116 | <b>COMPASS</b> .....   | 125 | C |
| Diagnosis Procedure .....  | 116 | COMPASS : Description .....  | 125 |   |
| <b>THE METER CONTROL SWITCH IS INOPERATIVE</b> .....                                     | 117 | <b>INFORMATION DISPLAY</b> .....   | 125 | D |
| Description .....  | 117 | INFORMATION DISPLAY : Description .....  | 125 |   |
| Diagnosis Procedure .....  | 117 | <b>PRECAUTION</b> .....  | 126 | E |
| <b>THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON</b> .....                              | 118 | <b>PRECAUTIONS</b> .....   | 126 |   |
| Description .....  | 118 | Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... | 126 | F |
| Diagnosis Procedure .....  | 118 | Precaution for Battery Service .....   | 126 |   |
| <b>THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF</b> .....                             | 119 | <b>PREPARATION</b> .....   | 127 | G |
| Description .....  | 119 | <b>PREPARATION</b> .....   | 127 |   |
| Diagnosis Procedure .....  | 119 | Commercial Service Tools .....   | 127 | H |
| <b>THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY</b> ..... | 120 | <b>REMOVAL AND INSTALLATION</b> .....  | 128 |   |
| Description .....  | 120 | <b>COMBINATION METER</b> .....   | 128 | I |
| Diagnosis Procedure .....  | 120 | Exploded View .....  | 128 |   |
| <b>THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, or DOES NOT DISPLAY</b> .....      | 121 | Removal and Installation .....   | 129 | J |
| Description .....  | 121 | Disassembly and Assembly .....   | 129 |   |
| Diagnosis Procedure .....  | 121 | <b>UNIFIED METER AND A/C AMP.</b> .....  | 130 | K |
| <b>THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY</b> .....             | 122 | Exploded View .....  | 130 |   |
| Description .....  | 122 | Removal and Installation .....   | 130 | L |
| Diagnosis Procedure .....  | 122 | <b>METER CONTROL SWITCH</b> .....  | 131 |   |
| <b>THE TRUNK OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY</b> .....            | 123 | Exploded View .....  | 131 | M |
| Description .....  | 123 | Removal and Installation .....   | 131 |   |
| Diagnosis Procedure .....  | 123 | <b>COMPASS</b> .....   | 132 |   |
|  |     | Exploded View .....  | 132 |   |
|  |     | Removal and Installation .....   | 132 |   |
|  |     | <b>CLOCK</b> .....   | 133 |   |
|  |     | Exploded View .....  | 133 |   |
|  |     | Removal and Installation .....   | 133 |   |

MWI

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work flow

INFOID:000000005807750

#### OVERALL SEQUENCE

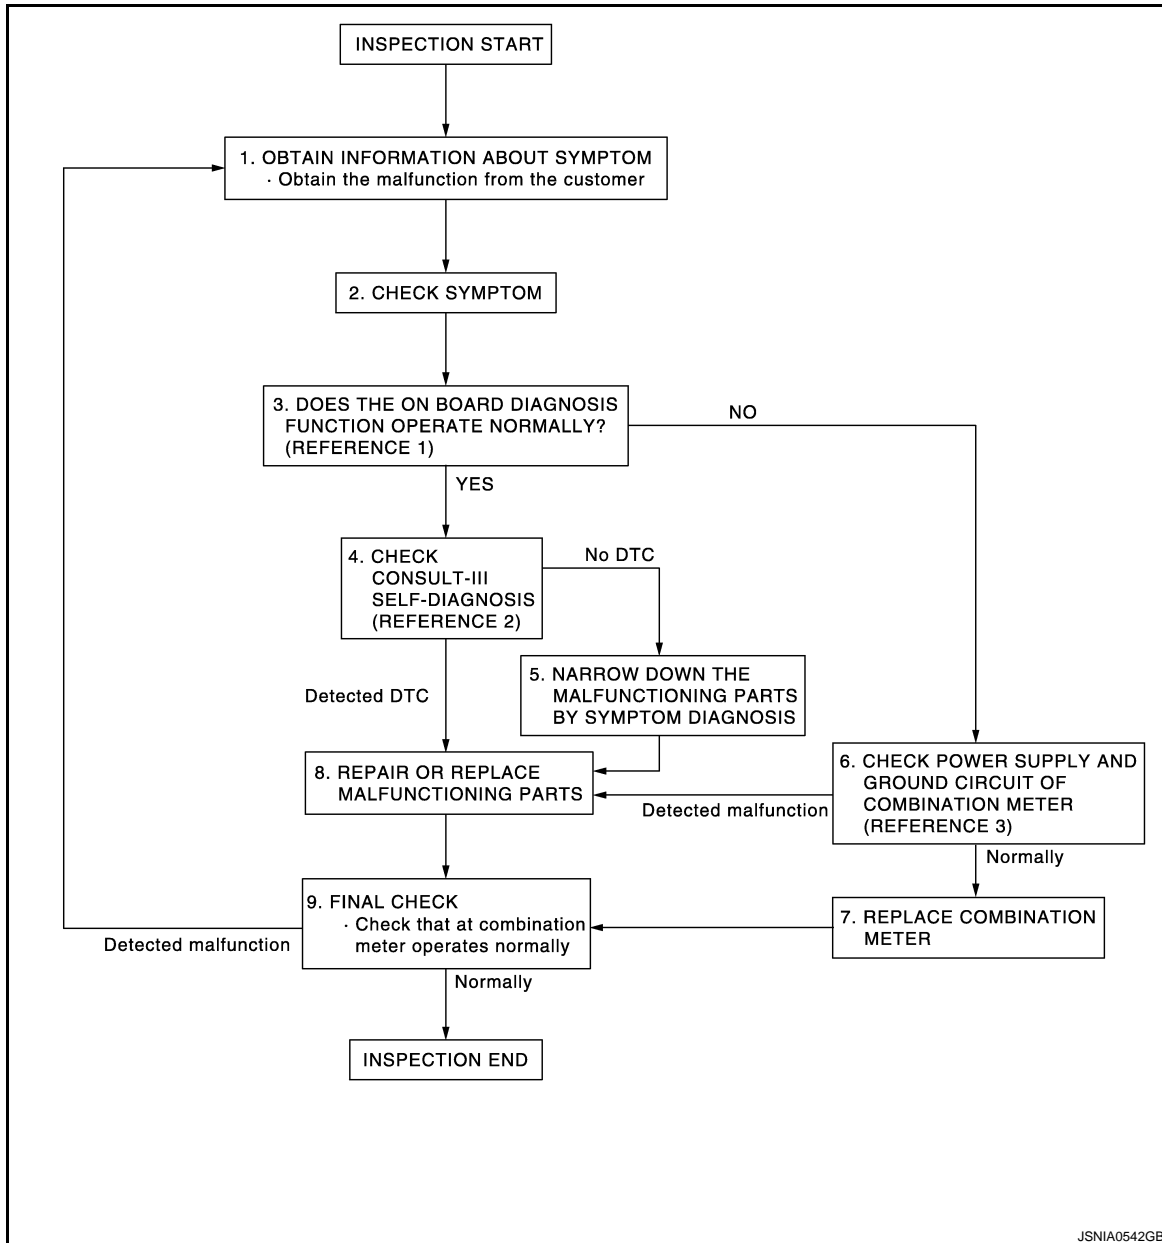

- Reference 1...[MWI-35, "Diagnosis Description"](#).
- Reference 2...[MWI-101, "DTC Index"](#).
- Reference 3...[MWI-50, "COMBINATION METER : Diagnosis Procedure"](#).

#### DETAILED FLOW

##### 1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

##### 2.CHECK SYMPTOM

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

- Check the symptom based on the information obtained from the customer.
- Check that any other malfunctions are present.

>> GO TO 3.

## 3. CHECK ON BOARD DIAGNOSIS OPERATION

Check that the on board diagnosis function operates. Refer to [MWI-35, "Diagnosis Description"](#).

Does the on board diagnosis function operate normally?

YES >> GO TO 4.

NO >> GO TO 6.

## 4. CHECK CONSULT-III SELF-DIAGNOSIS RESULTS

Connect CONSULT-III and perform "Self Diagnostic Result" of "METER/M&A". Refer to [MWI-37, "CONSULT-III Function \(METER/M&A\)"](#).

Are self-diagnosis results normal?

YES >> GO TO 5.

NO >> GO TO 8.

## 5. NARROW DOWN THE MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis and narrow down the malfunctioning parts.

>> GO TO 8.

## 6. CHECK COMBINATION METER POWER SUPPLY AND GROUND CIRCUITS

Check combination meter power supply and ground circuits. Refer to [MWI-50, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 8.

## 7. REPLACE COMBINATION METER

Replace combination meter.

>> GO TO 9.

## 8. REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace the malfunctioning parts.

### NOTE:

If DTC is displayed, erase DTC after repair or replace malfunctioning parts.

>> GO TO 9.

## 9. FINAL CHECK

Check that the combination meter operates normally.

Do they operate normally?

YES >> INSPECTION END

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# METER SYSTEM

< SYSTEM DESCRIPTION >


## SYSTEM DESCRIPTION

### METER SYSTEM

### METER SYSTEM

### METER SYSTEM : System Diagram

INFOID:000000005807751

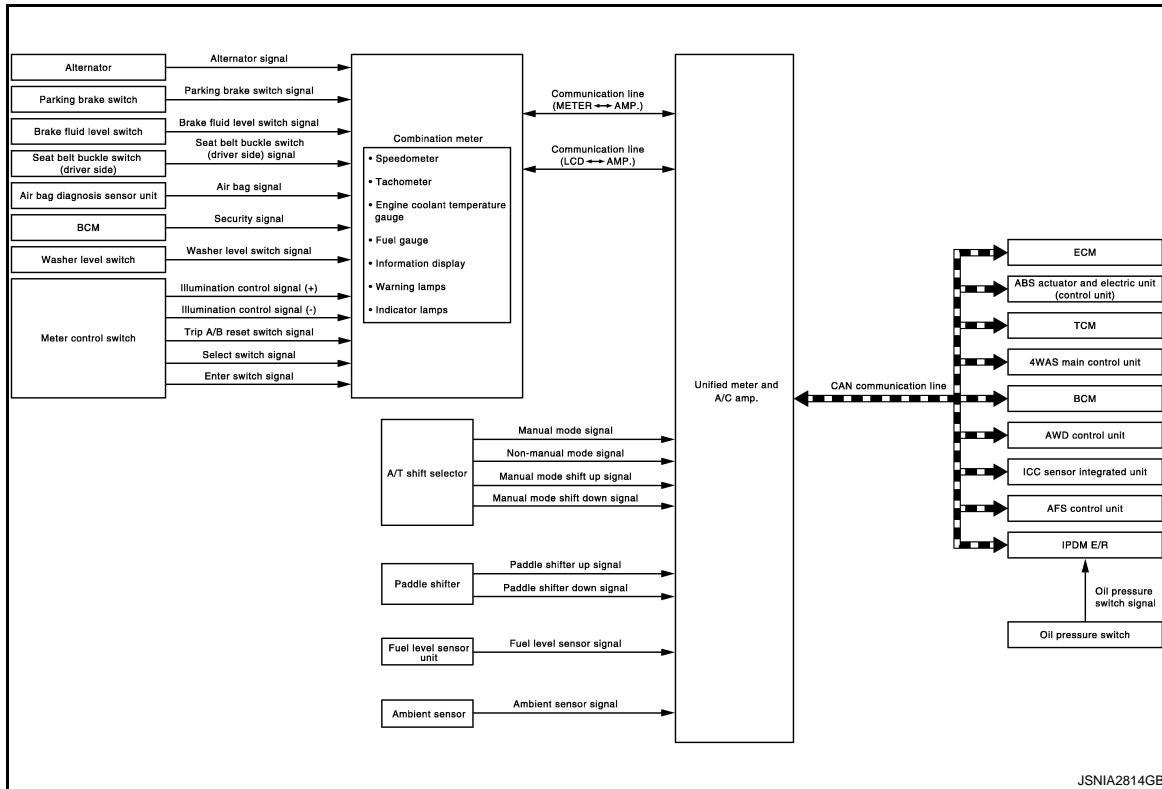

JSNIA2814GB

### METER SYSTEM : System Description

INFOID:000000005807752

#### COMBINATION METER

- The combination meter retrieves the information required for controlling the operations of the meters, indicator lamps/warning lamps and information display from the communication signals from the unified meter and A/C amp. and the signals from various switches and sensors.
- The combination meter incorporates a trip computer that displays warnings and messages on the information display according to the information received from various units.
- The combination meter incorporates a buzzer function that sounds an audible alarm with the integrated buzzer device. Refer to [WCS-5. "WARNING CHIME SYSTEM : System Description"](#) for further details.
- The combination meter integrates the meter circuit check function and the segment check function that checks the information display operation.

#### UNIFIED METER AND A/C AMP.

- Receives information required by the combination meter from various units via CAN communication line and transmits it to the combination meter with communication line.
- The unified meter and A/C amp. incorporates a power saving control function that reduces the power consumption according to the vehicle status. Refer to [BCS-11. "System Description"](#) for details.
- The unified meter and A/C amp. incorporates a diagnosis function that allows the technician to perform diagnoses with CONSULT-III.

# METER SYSTEM

## < SYSTEM DESCRIPTION >

Between unified meter and A/C amp. and combination meter.

| Unit                       | Communication line                  | Input from combination meter   | Output to combination meter  |                            |
|----------------------------|-------------------------------------|--|--|----------------------------|
| Unified meter and A/C amp. | Communication line (METER <-> AMP.) | <ul style="list-style-type: none"> <li>• Parking brake switch signal</li> <li>• Washer level switch signal</li> <li>• Meter day/night condition signal</li> <li>• Illumination control switch signal</li> <li>• Refuel status signal</li> <li>• Low fuel warning lamp signal</li> <li>• Odo data signal</li> </ul>   | <ul style="list-style-type: none"> <li>• Vehicle speed signal</li> <li>• Turn indicator signal</li> <li>• High beam request signal</li> <li>• Engine speed signal</li> <li>• Fuel level sensor signal</li> <li>• Engine coolant temperature signal</li> <li>• A/T CHECK indicator signal</li> <li>• Oil pressure switch signal</li> <li>• Door switch signal</li> <li>• Buzzer output signal</li> <li>• AFS OFF indicator lamp signal</li> <li>• Tire pressure signal</li> <li>• VDC OFF indicator signal</li> <li>• ABS warning lamp signal</li> <li>• Brake warning lamp signal</li> <li>• Malfunction indicator lamp signal</li> <li>• 4WAS warning lamp signal</li> <li>• Master warning signal</li> <li>• AWD warning lamp signal</li> <li>• Front fog light request signal</li> <li>• Position light request signal</li> </ul> | A<br>B<br>C<br>D<br>E<br>F |
|                            | Communication line (LCD <-> AMP.)   | <ul style="list-style-type: none"> <li>• Average fuel consumption reset signal</li> <li>• Travel time reset signal</li> <li>• Possible driving distance reset signal</li> <li>• Average vehicle speed reset signal</li> <li>• Select switch signal</li> <li>• Enter switch signal</li> <li>• Trip A/B reset switch signal</li> <li>• Ambient air temperature display signal</li> </ul> | <ul style="list-style-type: none"> <li>• Shift position signal</li> <li>• Meter display signal</li> <li>• Door switch signal</li> <li>• Trunk switch signal</li> <li>• Fuel level sensor signal</li> <li>• Parking brake switch signal</li> <li>• Washer level switch signal</li> <li>• Charge warning signal</li> <li>• Instantaneous fuel consumption display signal</li> <li>• Ambient air temperature display signal</li> <li>• Average fuel consumption display signal</li> <li>• Average vehicle speed display signal</li> <li>• Possible driving distance display signal</li> <li>• Engine speed signal</li> <li>• Vehicle speed signal</li> </ul>  | G<br>H<br>I<br>J<br>K      |

### IPDM E/R

- IPDM E/R reads the ON/OFF signals of the oil pressure switch and transmits the oil pressure switch signal to the unified meter and A/C amp. via BCM with the CAN communication line.
- IPDM E/R is equipped with the diagnosis function. It can perform the operation check of oil pressure warning lamp with the auto active test and the diagnosis with CONSULT-III.

### METER CONTROL FUNCTION LIST

X: Applicable

| System      |                         | Description   | Signal source                                 | Via unified meter and A/C amp. |   |
|-------------|-------------------------|---|---|--------------------------------|---|
| Meter/gauge | Speedometer             | Receives vehicle speed signal and indicates vehicle speed.                    | ABS actuator and electric unit (control unit) | X                              | O |
|             | Tachometer              | Receives engine speed signal and indicates engine speed.                      | ECM   | X                              |   |
|             | Fuel gauge              | Receives fuel level sensor signal and indicates fuel level.                   | Fuel level sensor unit                        | X                              | P |
|             | Water temperature gauge | Receives engine coolant temperature signal and indicates coolant temperature. | ECM   | X                              |   |

MWI

# METER SYSTEM

## < SYSTEM DESCRIPTION >


| System                          |  | Description   | Signal source                                 | Via unified meter and A/C amp. |
|---------------------------------|--|---|---|--------------------------------|
| Warning lamp/<br>indicator lamp | Oil pressure warning lamp  | Receives oil pressure warning lamp signal and illuminates warning lamp.   | IPDM E/R                                      | X                              |
|                                 | Master warning   | Illuminates according to warning output on information display.   | —   | X                              |
| Information display             | Door open warning  | Receives door switch signals and displays warning.  | BCM   | X                              |
|                                 | Trunk open warning   | Receives trunk lid opener switch signal and displays warning.   | BCM   | X                              |
|                                 | Parking brake release warning  | Receives parking brake switch signal and vehicle speed signal and displays warnings.  | Parking brake switch                          |                                |
|                                 |  |   | ABS actuator and electric unit (control unit) | X                              |
|                                 | Low fuel warning   | Receives fuel gauge signal and displays warning if fuel level decreases to 12 ℓ (3-1/8 US gal, 2-5/8 Imp gal) or less.  | Fuel level sensor unit                        | X                              |
|                                 | Low washer fluid warning   | Receives washer level switch signal and displays warning.   | Washer level switch                           |                                |
|                                 | Low outside temperature warning  | Monitors ambient sensor signal and displays warning if ambient temperature decreases to 3°C (37°F) or less. (If enabled)                                      | Ambient sensor                                | X                              |
|                                 | Instantaneous fuel consumption   | Calculates instantaneous fuel consumption based on received vehicle speed signals and fuel consumption monitor signal and displays it.                        | ECM   | X                              |
|                                 |  |   | ABS actuator and electric unit (control unit) | X                              |
|                                 | Average fuel consumption   | Calculates average fuel consumption in a reset-to-reset interval based on received vehicle speed signals and fuel consumption monitor signal and displays it. | ECM   | X                              |
|                                 |  |   | ABS actuator and electric unit (control unit) | X                              |
|                                 | Average vehicle speed  | Calculates average vehicle speed in a reset-to-reset interval based on received vehicle speed signals and displays it.  | ABS actuator and electric unit (control unit) | X                              |
|                                 | Travel time  | Displays accumulated key switch ON time from reset to reset.  | —   | X                              |
|                                 | Travel distance  | Calculates accumulated travel distance in a reset-to-reset interval based on received vehicle speed signals and displays it.                                  | ABS actuator and electric unit (control unit) | X                              |
| Possible driving distance       | The unified meter and A/C amp. calculates the possible driving distance according to the vehicle speed signal and the fuel level sensor unit received with CAN communication line, and transmits it to the combination meter by means of communication line. | ABS actuator and electric unit (control unit)   | X   |                                |
|                                 |  | Fuel level sensor unit  | X   |                                |
| Ambient air temperature         | Corrects ambient air temperature value based on received ambient sensor signals and displays it.   | Ambient sensor  | X   |                                |



# METER SYSTEM

< SYSTEM DESCRIPTION >

## ARRANGEMENT OF COMBINATION METER

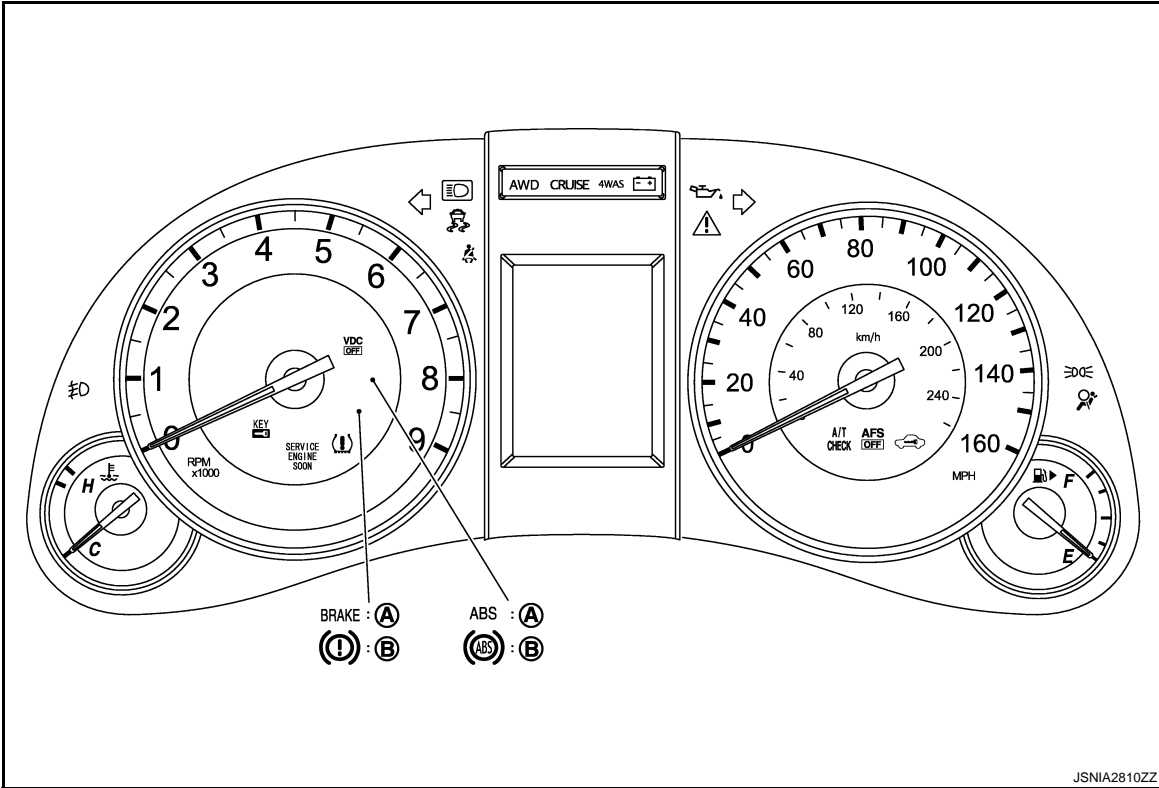

A. U.S.A.

B. Canada

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


MWI

# METER SYSTEM

< SYSTEM DESCRIPTION >

## METER SYSTEM : Component Parts Location

INFOID:000000005807753

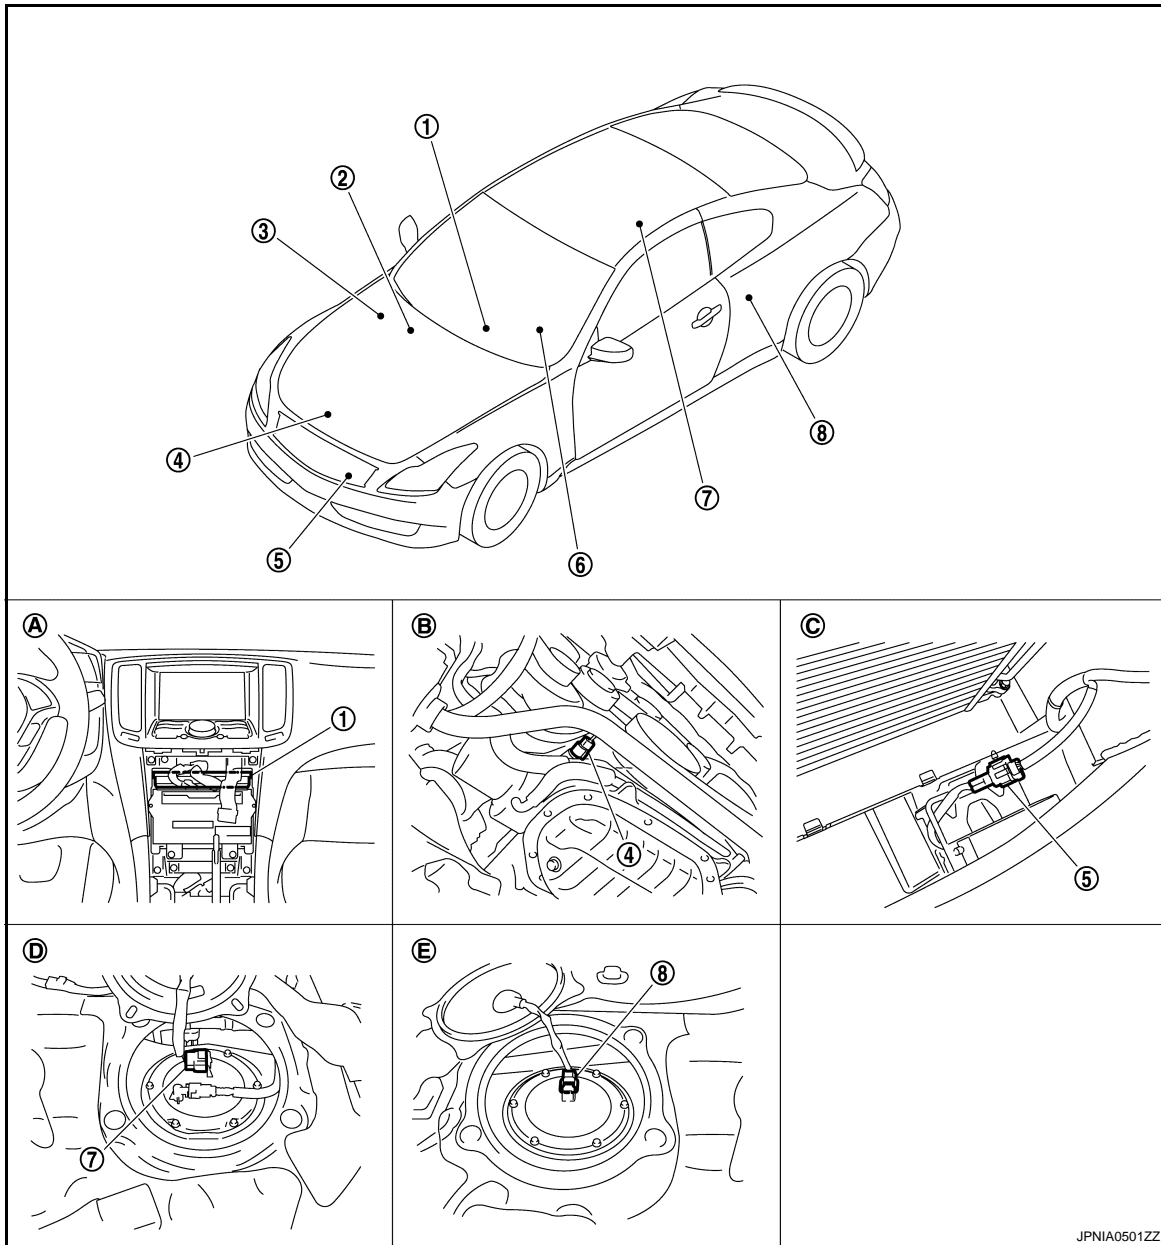

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

## METER SYSTEM : Component Description

INFOID:000000005807754

| Unit              | Description   |
|-------------------|---|
| Combination meter | <p>Controls the following with the signals from the unified meter and A/C amp, switches and sensors.</p> <ul style="list-style-type: none"> <li>• Speedometer</li> <li>• Water temperature gauge</li> <li>• Warning lamps</li> <li>• Information display</li> <li>• Tachometer</li> <li>• Fuel gauge</li> <li>• Indicator lamps</li> <li>• Warning chime</li> </ul> |


# METER SYSTEM

## < SYSTEM DESCRIPTION >

| Unit  | Description  |
|---|--|
| Unified meter and A/C amp.                    | <ul style="list-style-type: none"> <li>The combination meter receives the necessary information from various units via CAN communication line and transmits them to the unified meter and A/C amp. with the communication line that connects both of them.</li> <li>Transmits the fuel gauge signal from the fuel gauge unit with the communication line that connects the unified meter and A/C amp. and the combination meter.</li> <li>Reads the signals from the A/T shift selector and paddle shifter and transmits them to TCM with CAN communication line.</li> </ul> |
| IPDM E/R                                      | IPDM E/R reads the ON/OFF signals of the oil pressure switch and transmits the oil pressure switch signal to the unified meter and A/C amp. via BCM with CAN communication line.   |
| Fuel level sensor unit                        | Refer to <a href="#">MWI-53. "Description"</a> .   |
| Oil pressure switch                           | Refer to <a href="#">MWI-58. "Description"</a> .   |
| ECM   | Transmits the following signals to the unified meter and A/C amp. with CAN communication line. <ul style="list-style-type: none"> <li>Engine speed signal</li> <li>Engine coolant temperature signal</li> <li>Fuel consumption monitor signal</li> </ul>   |
| ABS actuator and electric unit (control unit) | Transmits the vehicle speed signal to the unified meter and A/C amp. with CAN communication line.  |
| BCM   | <ul style="list-style-type: none"> <li>Transmits signals provided by various units to the unified meter and A/C amp. with CAN communication line.</li> <li>Transmits the security signal to the combination meter.</li> </ul>  |
| A/T shift selector                            | Transmits the following signals to the unified meter and A/C amp. <ul style="list-style-type: none"> <li>Manual mode signal</li> <li>Non-manual mode signal</li> <li>Manual mode shift up signal</li> <li>Manual mode shift down signal</li> </ul>   |
| Paddle shifter                                | Transmits the paddle shifter up signal and paddle shifter down signal to the unified meter and A/C amp.  |
| TCM   | Transmits shift position signal to the unified meter and A/C amp.  |
| Meter control switch                          | Refer to <a href="#">MWI-56. "Description"</a> .   |
| Washer level switch                           | Transmits the washer level switch signal to the combination meter.   |
| Brake fluid level switch                      | Transmits the brake fluid level switch signal to the combination meter.  |
| Parking brake switch                          | Refer to <a href="#">MWI-60. "Description"</a> .   |

## SPEEDOMETER

### SPEEDOMETER : System Diagram

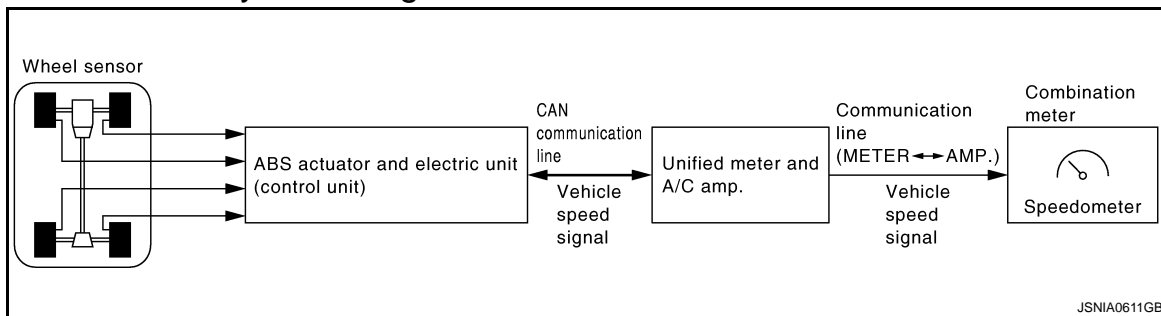

### SPEEDOMETER : System Description

INFOID:0000000005807756


- The ABS actuator and electric unit (control unit) converts the pulse signal provided by the wheel sensor to a vehicle speed signal and transmits it to the unified meter and A/C amp. with CAN communication line.
- The unified meter and A/C amp. receives the vehicle speed signal from the ABS actuator and electric unit (control unit) with CAN communication line and transmits it to the combination meter by means of communication line.
- The combination meter indicates the vehicle speed according to the vehicle speed signal received from the unified meter and A/C amp. by means of communication line.

# METER SYSTEM

< SYSTEM DESCRIPTION >

## SPEEDOMETER : Component Parts Location

INFOID:000000005807757

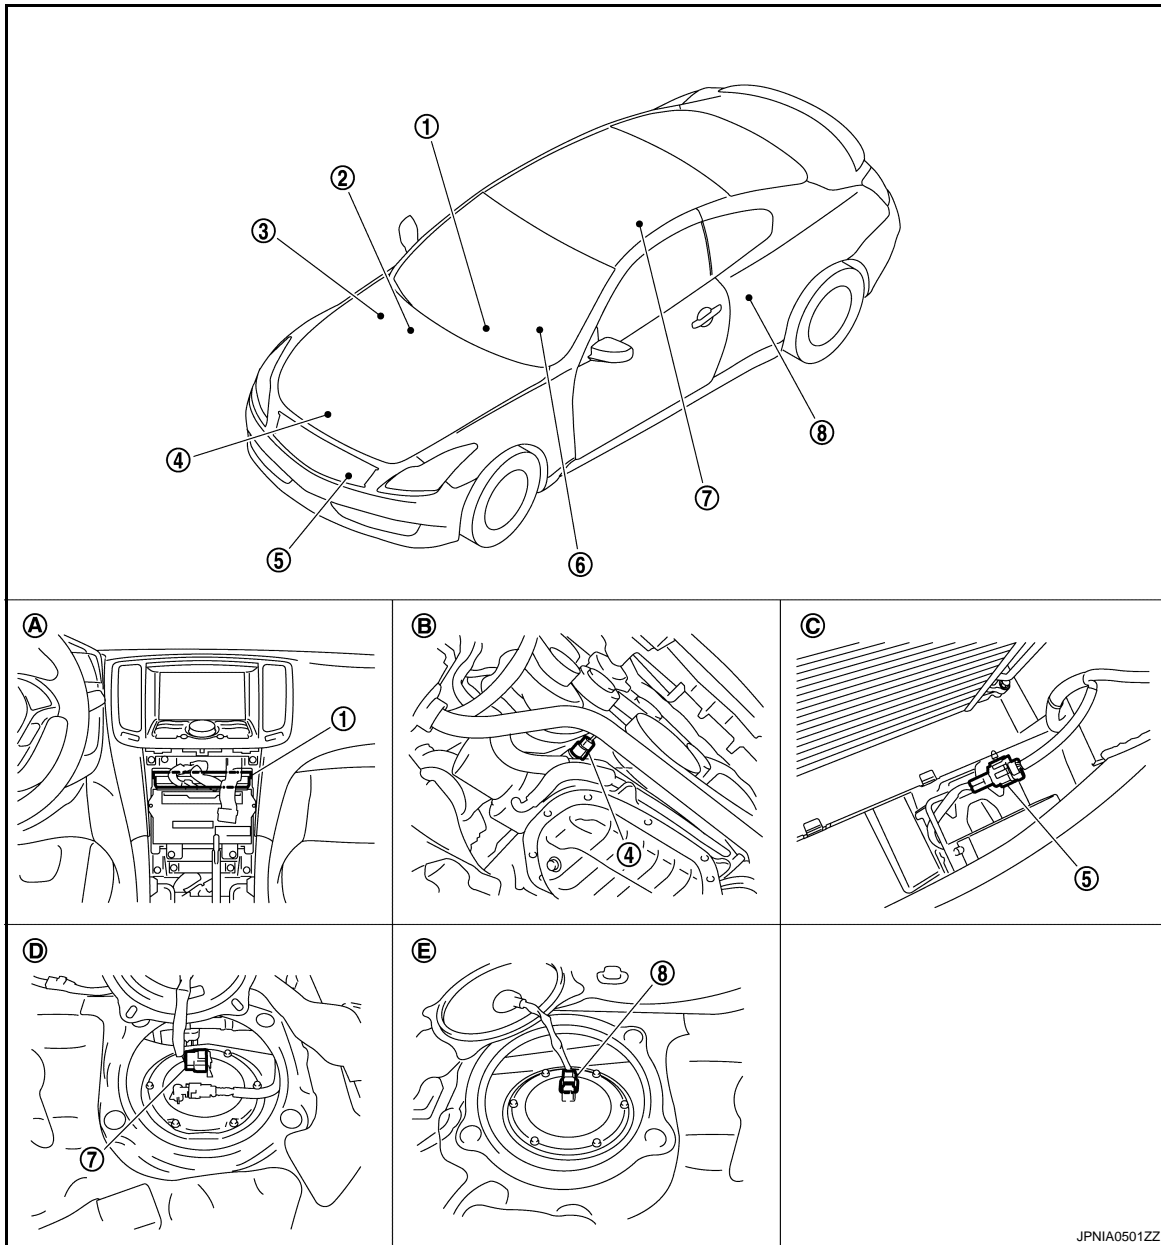

JPNIA0501ZZ

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

## SPEEDOMETER : Component Description

INFOID:000000005807758


| Unit  | Description   |
|---|---|
| Combination meter                             | Indicates the vehicle speed according to the vehicle speed signal received from the unified meter and A/C amp. by means of communication line.                                      |
| Unified meter and A/C amp.                    | Transmits the vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line to the combination meter by means of communication line. |
| ABS actuator and electric unit (control unit) | Transmits the vehicle speed signal to the unified meter and A/C amp. with CAN communication line.   |

# METER SYSTEM

< SYSTEM DESCRIPTION >

## TACHOMETER

### TACHOMETER : System Diagram

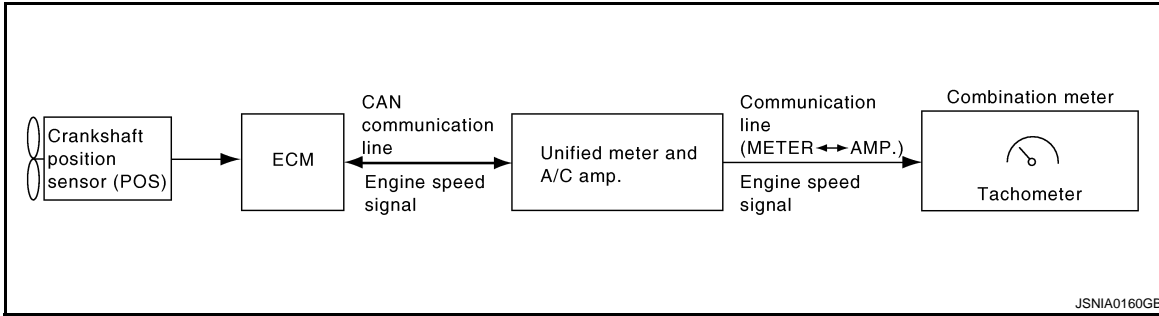

### TACHOMETER : System Description

INFOID:000000005807760

- ECM converts the pulse signal provided by the crankshaft position sensor to an engine speed signal and transmits it to the unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits engine speed signal to combination meter with communication line.
- The unified meter and A/C amp. receives the engine speed signal from ECM with CAN communication line and transmits it to the combination meter by means of communication line.
- Combination meter converses engine speed signal to the angle signal, and commands to tachometer.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P


MWI

# METER SYSTEM

< SYSTEM DESCRIPTION >

## TACHOMETER : Component Parts Location

INFOID:000000005807761

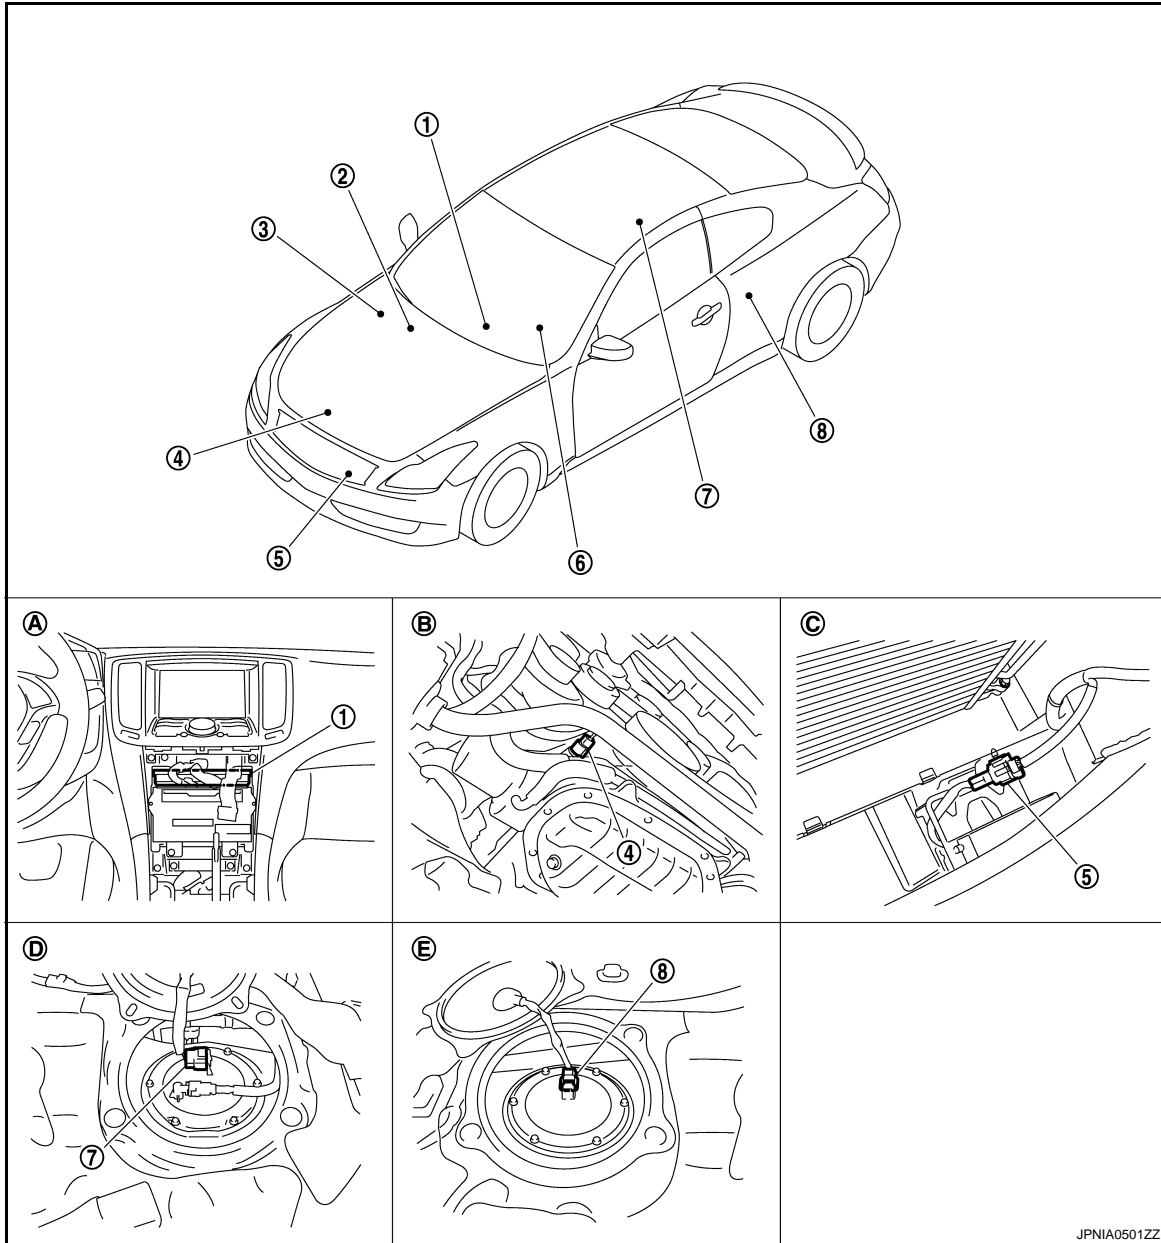

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

## TACHOMETER : Component Description

INFOID:000000005807762

| Unit                       | Description  |
|----------------------------|--|
| Combination meter          | Indicates the engine speed according to the engine speed signal received from the unified meter and A/C amp. by means of communication line. |
| Unified meter and A/C amp. | Transmits the engine speed signal received from ECM with CAN communication line to the combination meter by means of communication line.     |
| ECM                        | Transmits the engine speed signal to the unified meter and A/C amp. with CAN communication line.   |


# METER SYSTEM

< SYSTEM DESCRIPTION >

## ENGINE COOLANT TEMPERATURE GAUGE

### ENGINE COOLANT TEMPERATURE GAUGE : System Diagram

INFOID:000000005807763

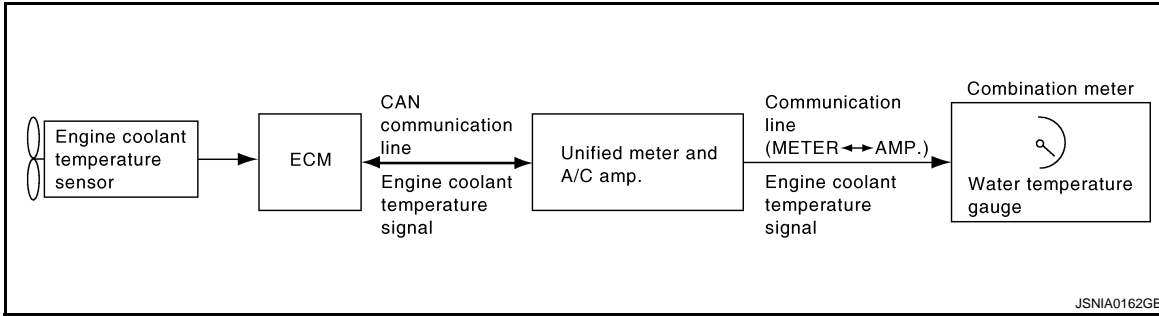

### ENGINE COOLANT TEMPERATURE GAUGE : System Description

INFOID:000000005807764

- ECM converts a signal from engine coolant temperature sensor to engine coolant temperature signal, and transmits to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits engine coolant temperature signal to combination meter with communication line.
- Combination meter converts engine coolant temperature signal to the angle signal, and commands to engine coolant temperature gauge.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

MWI


O  
P

# METER SYSTEM

< SYSTEM DESCRIPTION >

## ENGINE COOLANT TEMPERATURE GAUGE : Component Parts Location

INFOID:000000005807765

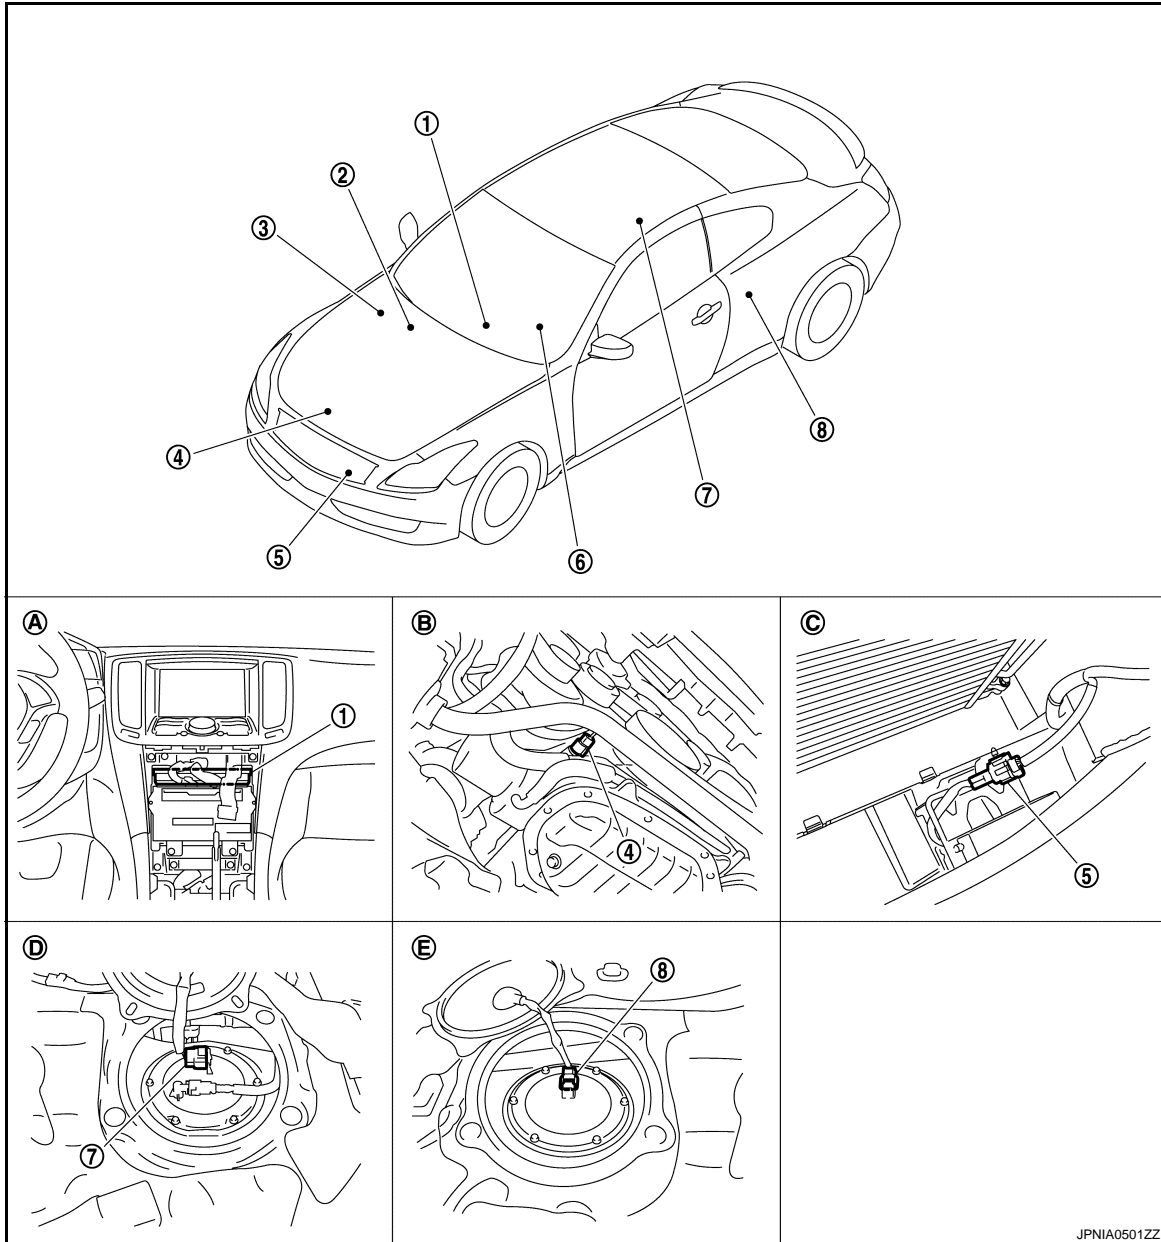

JPNIA0501ZZ

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

## ENGINE COOLANT TEMPERATURE GAUGE : Component Description

INFOID:000000005807766

| Unit              | Description   |
|-------------------|---|
| Combination meter | Indicates the water temperature gauge according to the engine coolant temperature signal received from the unified meter and A/C amp. by means of communication line. |




# METER SYSTEM

## < SYSTEM DESCRIPTION >

| Unit                       | Description  |
|----------------------------|--|
| Unified meter and A/C amp. | Transmits the engine coolant temperature signal received from ECM with CAN communication line to the combination meter by means of communication line. |
| ECM                        | Transmits the engine coolant temperature signal to the unified meter and A/C amp. with CAN communication line.   |

## FUEL GAUGE

### FUEL GAUGE : System Diagram

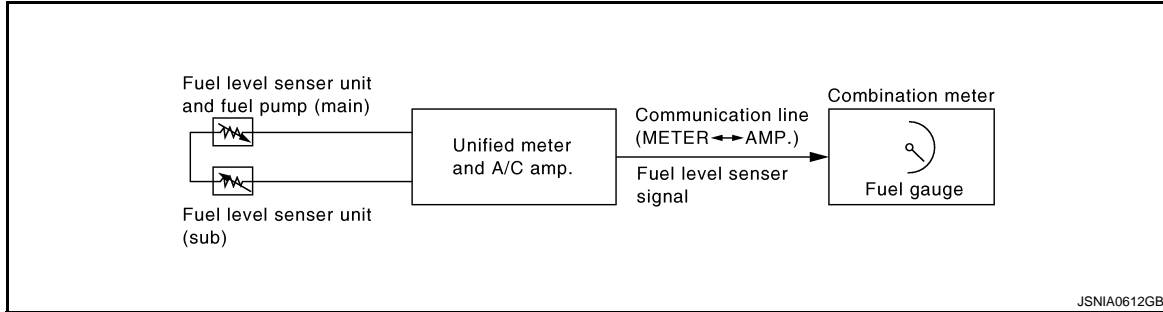

### FUEL GAUGE : System Description

INFOID:0000000005807768

#### CONTROL OUTLINE

- The unified meter and A/C amp. reads the fuel level sensor signal from the fuel gauge unit and transmits it to the combination meter with the communication line.
- The combination meter indicates the fuel level on the fuel gauge according to the received fuel level sensor signal.

#### REFUEL CONTROL

The unit judges that the driver is refueling the vehicle and accelerates the fuel gauge needle movement if the fuel level changes by 15 ℓ (4 US gal, 3-3/10 Imp gal) or more.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


MWI

# METER SYSTEM

< SYSTEM DESCRIPTION >

## FUEL GAUGE : Component Parts Location

INFOID:000000005807769

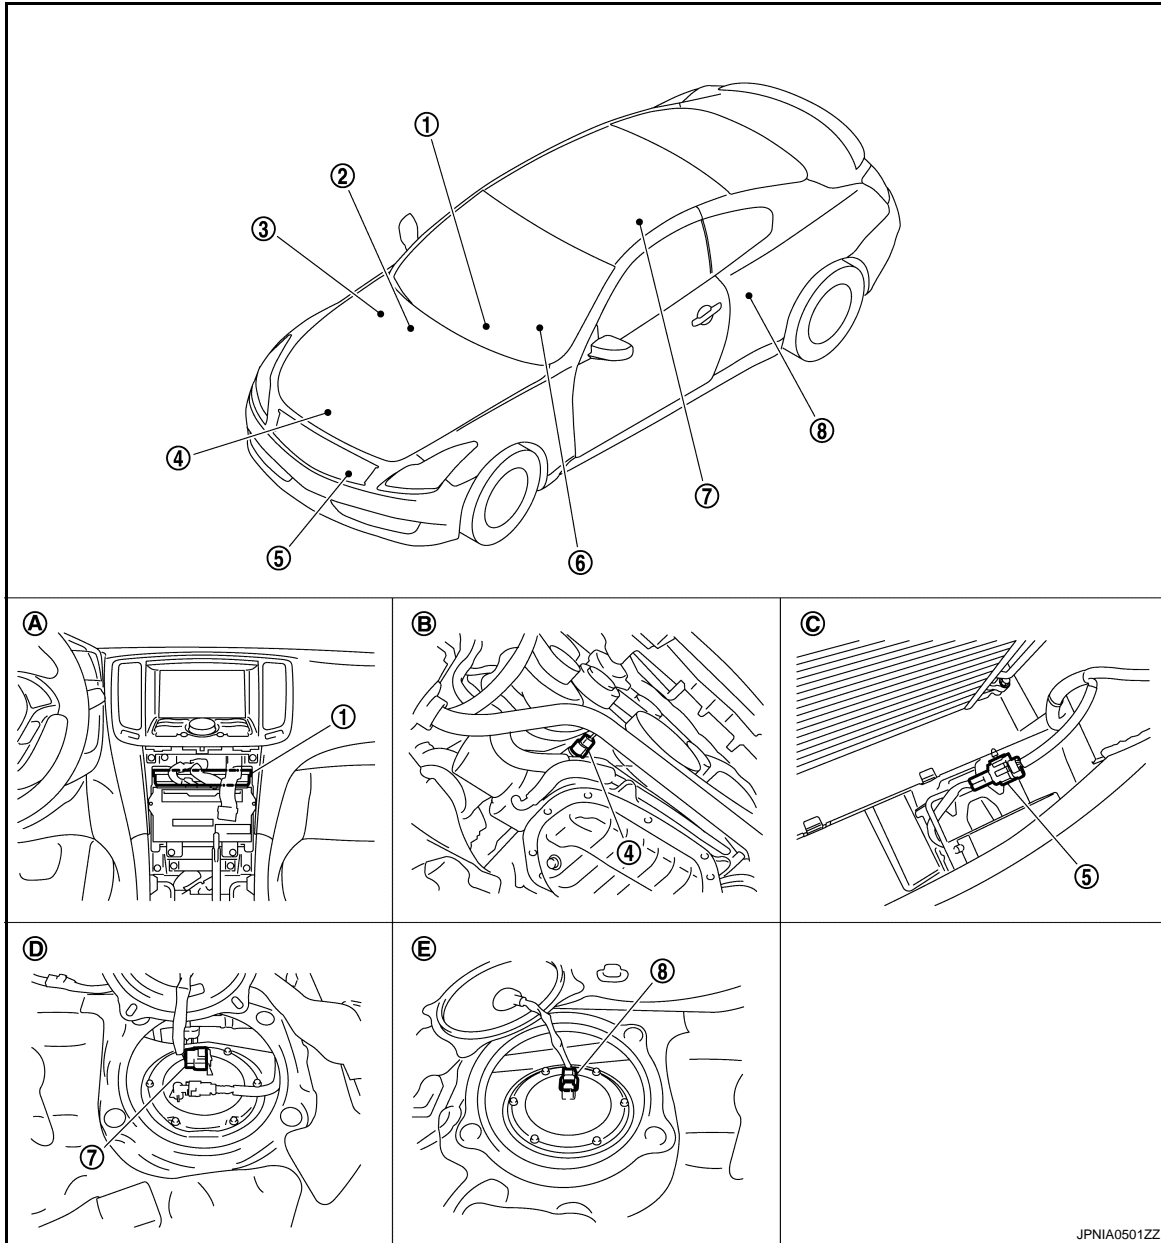

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

## FUEL GAUGE : Component Description

INFOID:000000005807770


| Unit                       | Description   |
|----------------------------|---|
| Combination meter          | Indicates the fuel gauge according to the fuel level sensor signal received from the unified meter and A/C amp. by means of communication line. |
| Unified meter and A/C amp. | Transmits the fuel level sensor signal from the fuel level sensor unit to the combination meter by means of communication line.                 |
| Fuel level sensor unit     | Refer to <a href="#">MWI-53, "Description"</a> .  |

# METER SYSTEM

< SYSTEM DESCRIPTION >

## ODO/TRIP METER

### ODO/TRIP METER : System Diagram

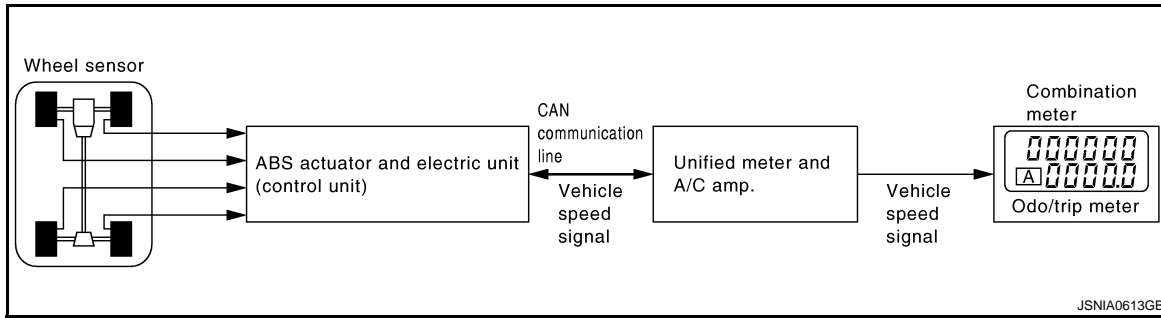

### ODO/TRIP METER : System Description

INFOID:000000005807772

- The unified meter and A/C amp. transmits the vehicle speed signal from ABS actuator and electric unit (control unit) to the combination meter.
- The combination meter calculates the vehicle distance according to the vehicle speed signal. The vehicle distance is displayed.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P


MWI

# METER SYSTEM

< SYSTEM DESCRIPTION >

## ODO/TRIP METER : Component Parts Location

INFOID:000000005807773

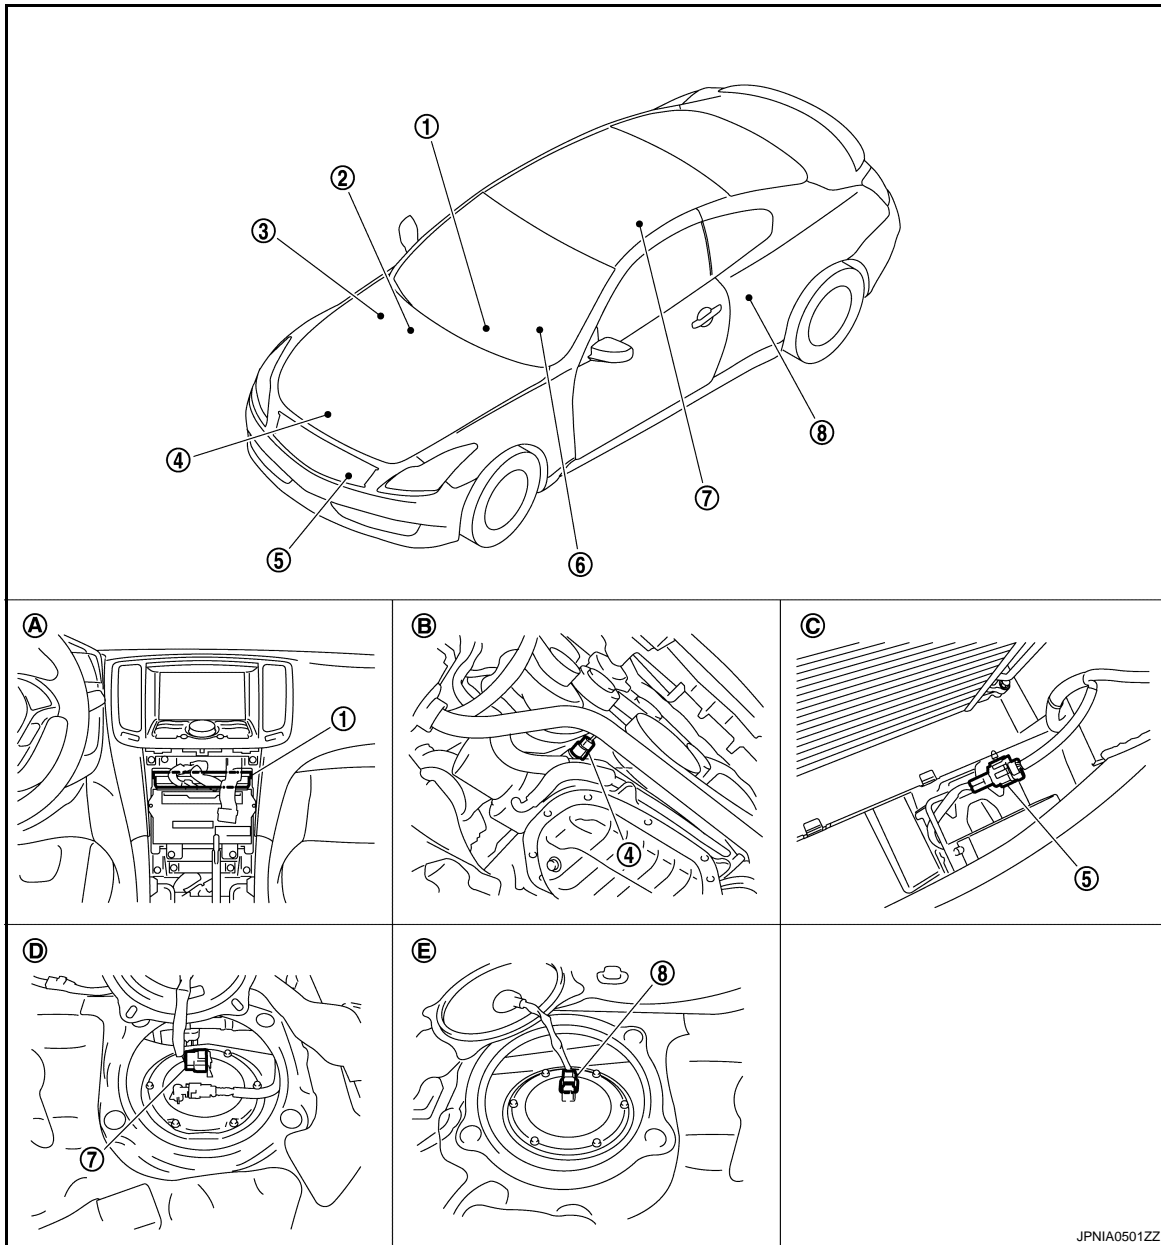

JPNIA0501ZZ

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

## ODO/TRIP METER : Component Description

INFOID:000000005807774


| Unit  | Description  |
|---|--|
| Combination meter                             | The combination meter calculates the vehicle distance according to the vehicle speed signal. The vehicle distance is displayed.                |
| Unified meter and A/C amp.                    | The unified meter and A/C amp. transmits the vehicle speed signal from ABS actuator and electric unit (control unit) to the combination meter. |
| ABS actuator and electric unit (control unit) | Transmits the vehicle speed signal to the unified meter and A/C amp. with CAN communication line.  |

# METER SYSTEM

< SYSTEM DESCRIPTION >

## SHIFT POSITION INDICATOR

### SHIFT POSITION INDICATOR : System Diagram

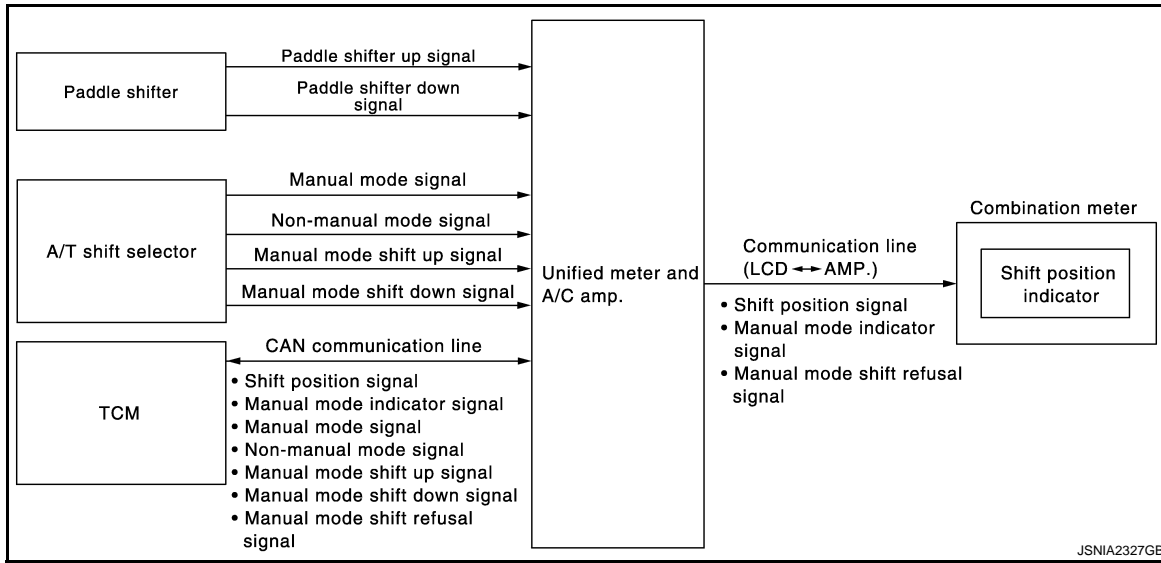

### SHIFT POSITION INDICATOR : System Description

INFOID:000000005874452

Shift position is displayed in the information display LCD in the combination meter.

#### MANUAL MODE

When Operated with A/T Shift Selector

- Unified meter and A/C amp. inputs manual mode signal and manual mode shift-up/down signal from A/T shift selector (manual mode switch), and transmits the signals to TCM with CAN communication line.
- TCM processes manual mode signal and manual mode shift-up/down signal, and transmits manual mode indicator signal and shift position signal to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits manual mode indicator signal and shift position signal to combination meter with the communication line.
- Combination meter indicates A/T gear position and manual mode indicator, when receiving manual mode indicator signal and shift position signal.
- TCM transmits a manual mode shift refusal signal to the unified meter and A/C amp. via CAN communication line when gear shifting cannot be performed in manual mode.
- The unified meter and A/C amp. transmits a manual mode shift refusal signal to the combination meter via communication line.
- The combination meter blinks the shift position indicator and sounds a buzzer when receiving a manual mode shift refusal signal.

When Operated with Paddle Shifter

- Unified meter and A/C amp. inputs manual mode signal from A/T shift selector (manual mode switch) or the paddle shifter-up/down signal from the paddle shifter, and transmits the signals to TCM with communication line.
- TCM processes manual mode signal and paddle shifter-up/down signal, and transmits manual mode indicator signal and shift position signal to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits manual mode indicator signal and shift position signal to combination meter with the communication line.
- Combination meter indicates A/T gear position and manual mode indicator, when receiving manual mode indicator signal and shift position signal.
- TCM transmits a manual mode shift refusal signal to the unified meter and A/C amp. via CAN communication line when gear shifting cannot be performed in manual mode.
- The unified meter and A/C amp. transmits a manual mode shift refusal signal to the combination meter via communication line.
- The combination meter blinks the shift position indicator and sounds a buzzer when receiving a manual mode shift refusal signal.

#### NON-MANUAL MODE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

MWI

O  
P


# METER SYSTEM

## < SYSTEM DESCRIPTION >

- Unified meter and A/C amp. inputs non-manual mode signal from A/T shift selector (manual mode switch), and transmits the signals to TCM with CAN communication line.
- TCM transmits shift position signal to unified meter and A/C amp. with CAN communication line.
- Unified meter and A/C amp. transmits shift position signal to combination meter with the communication line.
- Combination meter indicates shift position when receiving shift position signal.

## SHIFT POSITION INDICATOR : Component Parts Location

INFOID:000000005807777

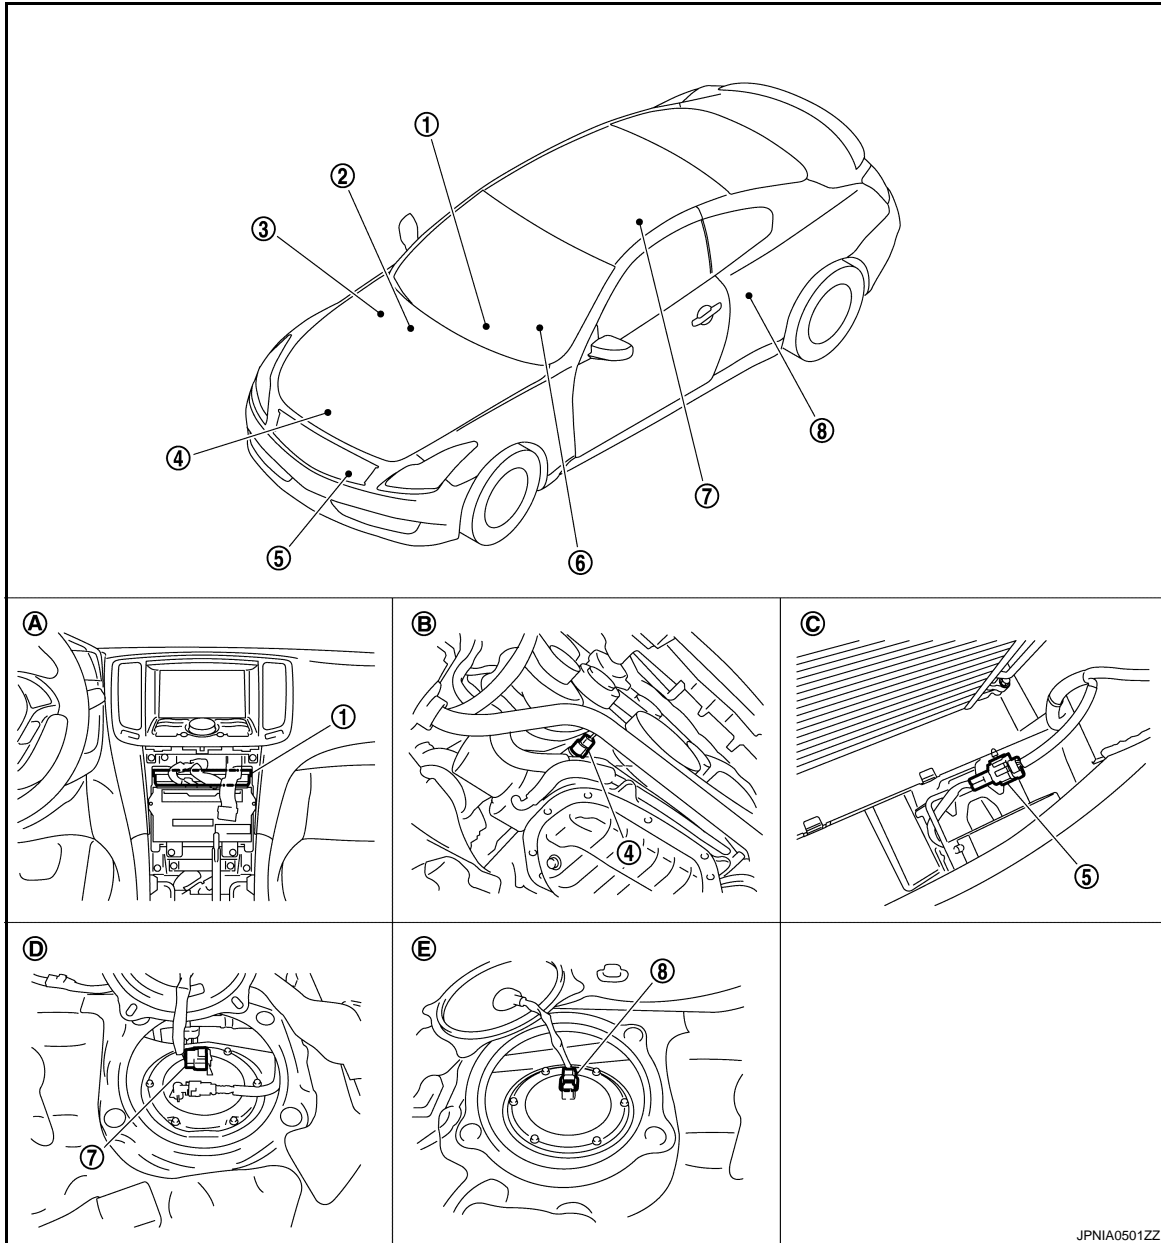

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

# METER SYSTEM

< SYSTEM DESCRIPTION >

## SHIFT POSITION INDICATOR : Component Description


INFOID:000000005809014

| Unit                       | Description   |
|----------------------------|---|
| Combination meter          | <ul style="list-style-type: none"> <li>Displays the shift position on the information display with shift position signal and manual mode indicator signal received from unified meter and A/C amp.</li> <li>The combination meter blinks the shift position indicator and sounds a buzzer when received manual mode shift refusal signal from unified meter and A/C amp.</li> </ul> |
| Unified meter and A/C amp. | <ul style="list-style-type: none"> <li>Transmits the signals from the A/T shift selector to TCM with CAN communication line.</li> <li>Transmits shift position signal, manual mode indicator signal and manual mode shift refusal signal received from TCM with CAN communication line to the combination meter by means of communication line.</li> </ul>                          |
| A/T shift selector         | Transmits the following signals to the unified meter and A/C amp. <ul style="list-style-type: none"> <li>Manual mode signal</li> <li>Manual mode shift up signal</li> <li>Non-manual mode signal</li> <li>Manual mode shift down signal</li> </ul>  |
| TCM                        | Transmits shift position signal, manual mode indicator signal and manual mode shift refusal signal to the unified meter and A/C amp.  |

## WARNING LAMPS/INDICATOR LAMPS

### WARNING LAMPS/INDICATOR LAMPS : System Diagram

INFOID:000000005807779

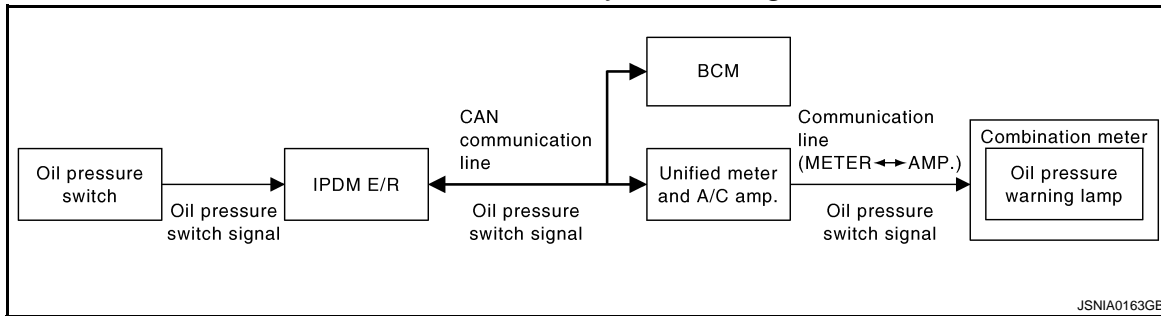

### WARNING LAMPS/INDICATOR LAMPS : System Description

INFOID:000000005807780

#### OIL PRESSURE WARNING LAMP

- IPDM E/R inputs oil pressure switch signal from oil pressure switch, and transmits the signal to unified meter and A/C amp. through BCM with CAN communication line.
- Unified meter and A/C amp. transmits oil pressure switch signal to combination meter with communication line.
- Let the combination meter turn oil pressure warning lamp ON with received oil pressure switch signal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


MWI

# METER SYSTEM

< SYSTEM DESCRIPTION >

## WARNING LAMPS/INDICATOR LAMPS : Component Parts Location

INFOID:000000005807781

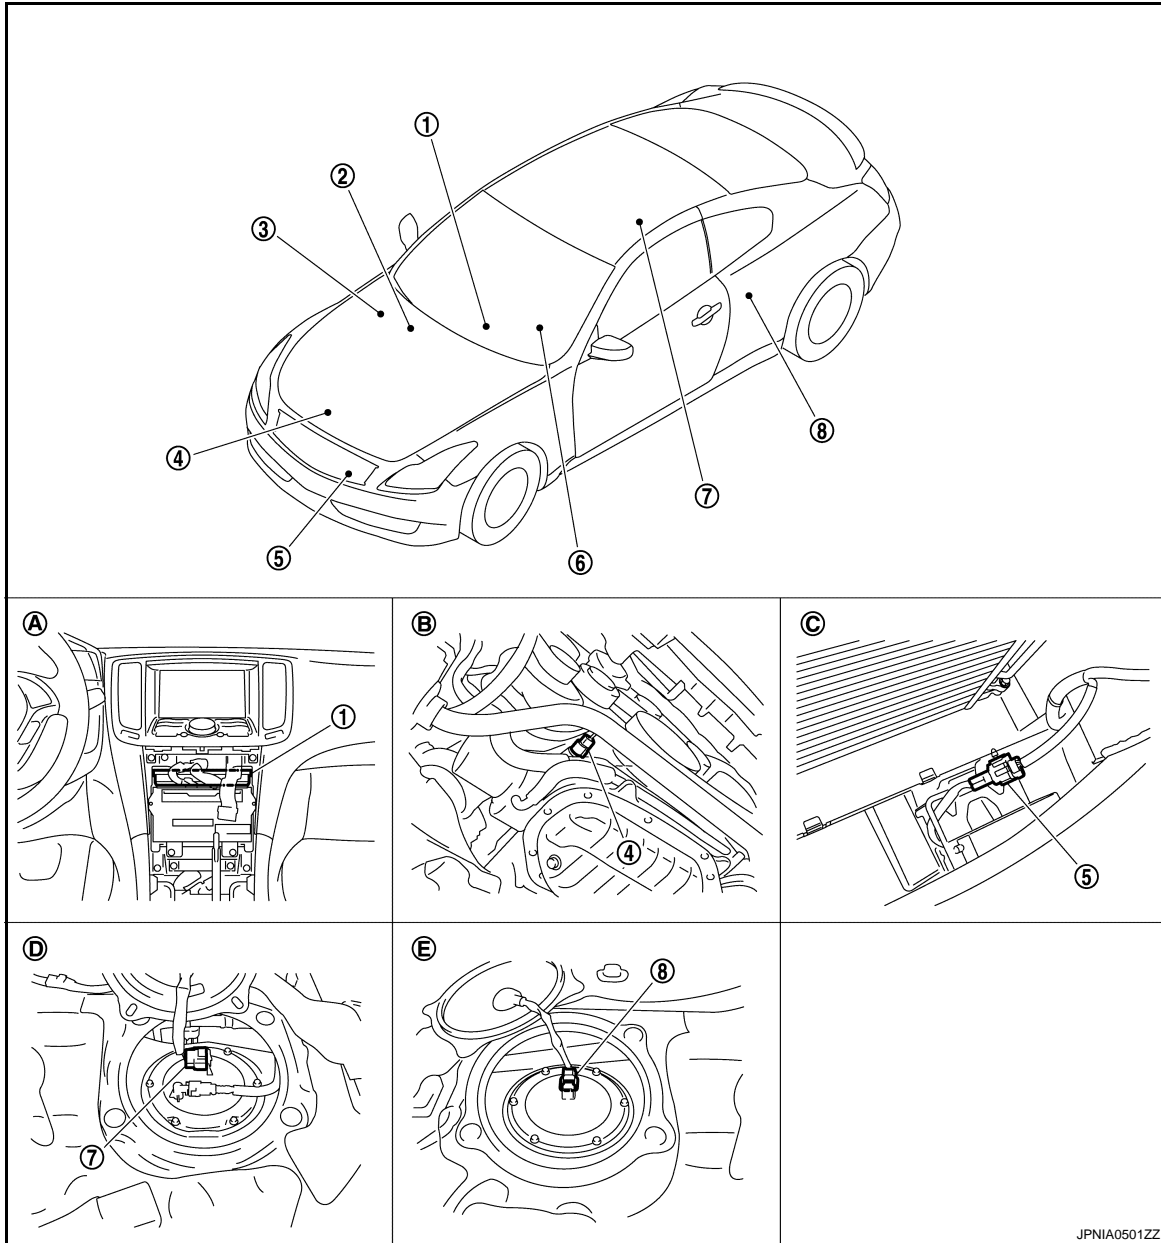

JPNIA0501ZZ

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

## WARNING LAMPS/INDICATOR LAMPS : Component Description

INFOID:000000005807782

| Unit                       | Description  |
|----------------------------|--|
| Combination meter          | Turns the oil pressure warning lamp ON/OFF according to the oil pressure switch signal received from the unified meter and A/C amp. by means of communication line.                    |
| Unified meter and A/C amp. | Transmits the oil pressure switch signal received from the IPDM E/R with BCM to the combination meter by means of communication line.  |
| IPDM E/R                   | IPDM E/R reads the ON/OFF signals from the oil pressure switch and transmits the oil pressure switch signal to the unified meter and A/C amp. via BCM with the CAN communication line. |




# METER SYSTEM

## < SYSTEM DESCRIPTION >

| Unit                | Description   |
|---------------------|---|
| Oil pressure switch | Refer to <a href="#">MWI-58, "Description"</a> .  |
| BCM                 | Transmits the oil pressure switch signal received from IPDM E/R via CAN communication to the unified meter and A/C amp. via CAN communication line. |

## METER ILLUMINATION CONTROL

### METER ILLUMINATION CONTROL : System Diagram

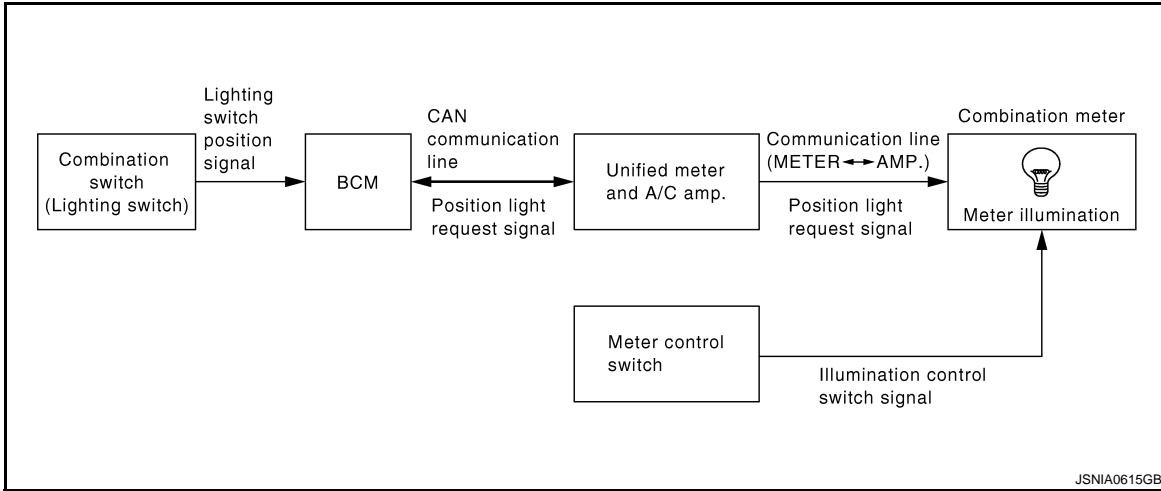

### METER ILLUMINATION CONTROL : System Description


INFOID:000000005807784

#### SYSTEM DESCRIPTION

The combination meter controls the meter illumination by the illumination control switch signal from the meter control switch and the position light request signal transmitted by BCM with unified meter and A/C amp.

#### Daytime Mode

Meter illumination is adjusted to 5 steps by illumination control switch (1) in daytime mode.

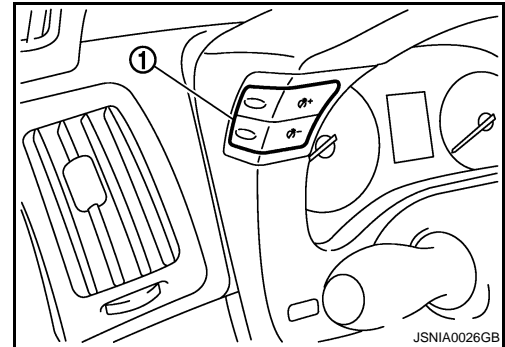

#### Nighttime Mode

- Combination meter is transferred to nighttime mode with position light request signal from BCM with CAN communication line.
- Meter illumination is adjusted to 22 steps by illumination control switch in nighttime.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P


MWI

# METER SYSTEM

< SYSTEM DESCRIPTION >

## METER ILLUMINATION CONTROL : Component Parts Location

INFOID:000000005807785

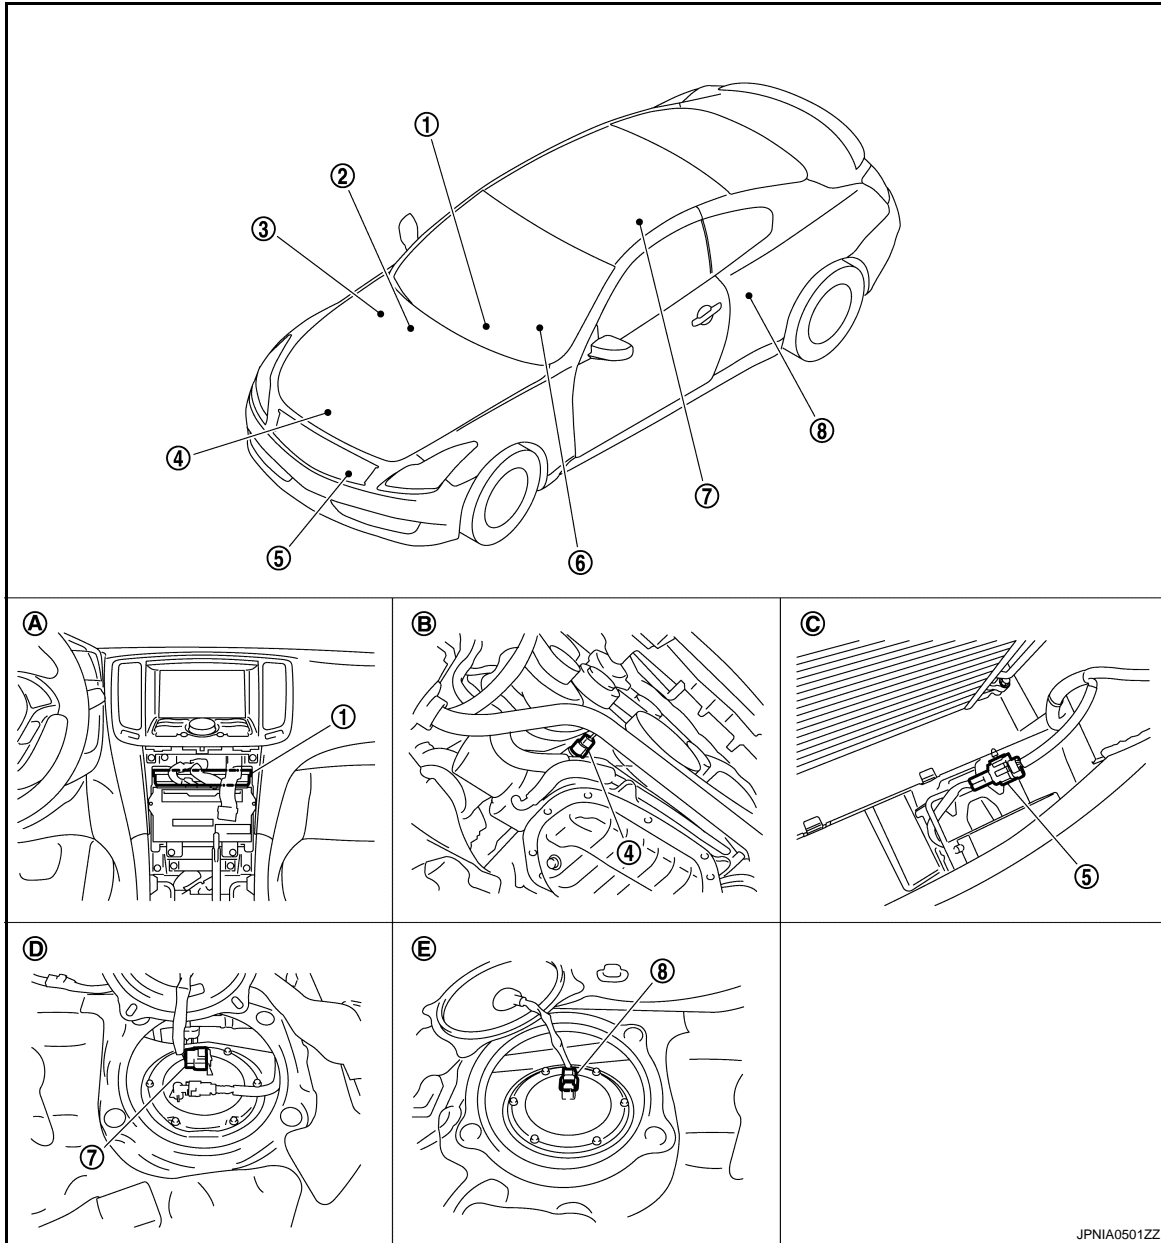

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

## METER ILLUMINATION CONTROL : Component Description

INFOID:000000005807786

| Unit                       | Description   |
|----------------------------|---|
| Combination meter          | Controls the meter illumination with the illumination control switch signal from the meter control switch and the position light request signal from unified meter and A/C amp. |
| Unified meter and A/C amp. | Transmits the position light request signal received from BCM via CAN communication to the combination meter by means of communication.   |


# METER SYSTEM

## < SYSTEM DESCRIPTION >

| Unit                 | Description  |
|----------------------|--|
| Meter control switch | Transmits the following signals to the combination meter. <ul style="list-style-type: none"> <li>• Illumination control switch signal (+)</li> <li>• Illumination control switch signal (-)</li> </ul> |

## INFORMATION DISPLAY

### INFORMATION DISPLAY : System Diagram

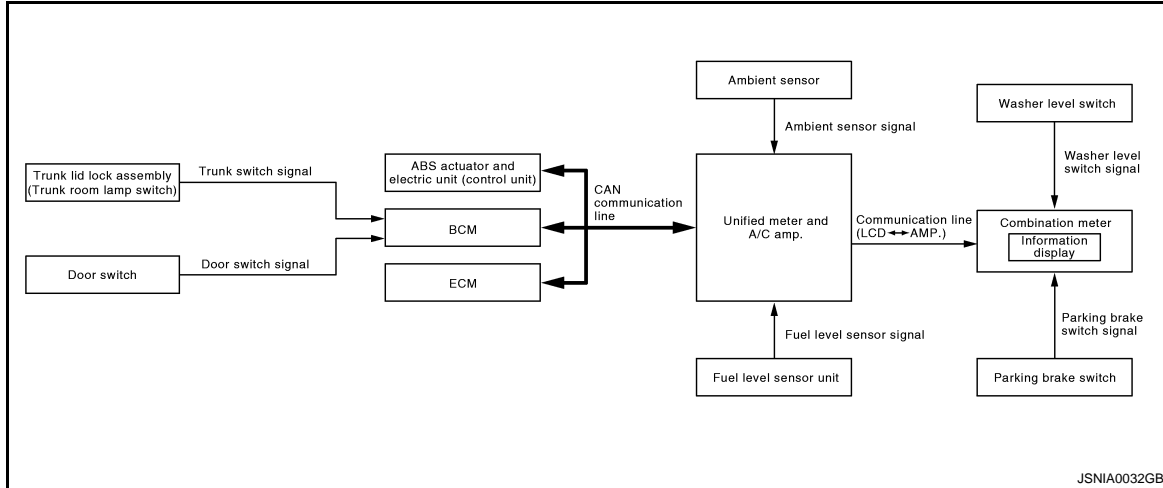

### INFORMATION DISPLAY : System Description

INFOID:000000005807788

#### DESCRIPTION

- The combination meter retrieves the information required for controlling the operations of the information display from the communication signals from the unified meter and A/C amp., etc.
- The combination meter incorporates a trip computer that displays the warning / information according to the information received from various units.

#### PARKING BRAKE RELEASE WARNING

The combination meter indicates parking brake release warning judged with the vehicle speed signal received from the unified meter and A/C amp. by means of communication line and the parking brake switch signal from the parking brake switch.

##### Warning Operation Condition

Parking brake release warning is judged if all of the following conditions are fulfilled

- Vehicle speed is 7 km/h (4.3 MPH) or higher
- Parking brake switch ON

#### LOW FUEL WARNING

The combination meter indicates low fuel warning judged with the fuel level sensor signal received from the unified meter and A/C amp.

##### Warning Operation Condition

- Fuel level: Approx. 12.7 ℓ (3-3/8 US gal, 2-6/8 Imp gal) or less

#### LOW WASHER FLUID WARNING

The combination meter indicates low washer fluid warning judged with the signal from the washer level switch.

##### Warning Operation Condition


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

# METER SYSTEM

## < SYSTEM DESCRIPTION >

- Indicates the warning when it is in washer level switch ON condition for 180 seconds or more. Release the warning when it is in washer level switch OFF condition for 30 seconds or more.

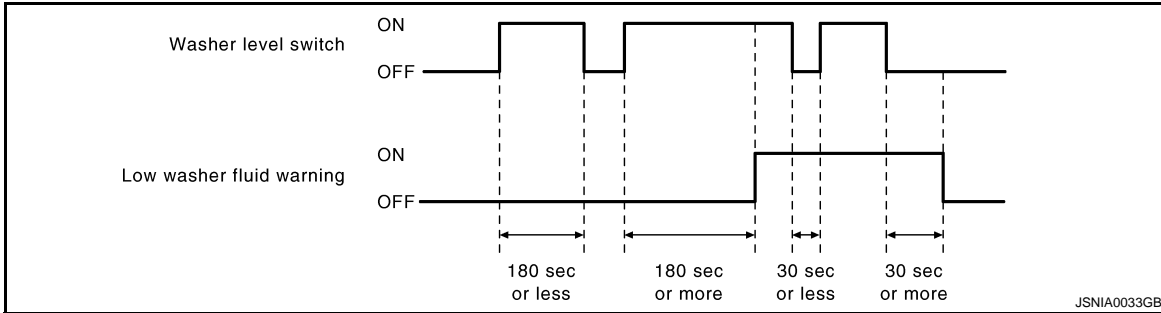

## DOOR/TRUNK OPEN WARNING

- The combination meter indicates door open warning judged with each door switch signal received from the unified meter and A/C amp. by means of communication line.
- The combination meter indicates trunk open warning judged with the trunk switch signal received from the unified meter and A/C amp. by means of communication line.

## INSTANTANEOUS FUEL CONSUMPTION

- The unified meter and A/C amp. receives the fuel consumption monitor signal from ECM and the vehicle speed signal from the ABS actuator and electric unit (control unit) with CAN communication line.
- The unified meter and A/C amp. calculates the instantaneous fuel consumption according to the fuel consumption monitor signal and the vehicle speed signal received with CAN communication line, and transmits it to the combination meter.

## AVERAGE FUEL CONSUMPTION

- The unified meter and A/C amp. receives the fuel consumption monitor signal from ECM and the vehicle speed signal from the ABS actuator and electric unit (control unit) with CAN communication line.
- The unified meter and A/C amp. calculates the average fuel consumption according to the fuel consumption monitor signal and the vehicle speed signal received with CAN communication line, and transmits it to the combination meter.
- The average fuel consumption displayed on the information display is uploaded at approximately 30-second intervals.

### NOTE:

“—” is displayed for approximately 30 seconds just after the reset operation and after the ignition switch is OFF → ON. It is displayed simultaneously until the vehicle drives approximately 500 m (0.31 mile).

## AVERAGE VEHICLE SPEED

- The unified meter and A/C amp. receives the vehicle speed signal from the ABS actuator and electric unit (control unit) via CAN communication line.
- Measures the time during the ignition switch ON with the unified meter and A/C amp.
- The unified meter and A/C amp. calculates the average vehicle speed according to the above signals. These signals are transmitted to the combination meter with the communication line.
- The average vehicle speed displayed on the information display is uploaded at approximately 30-second intervals.

### NOTE:

“—” is displayed for 30 seconds just after the reset operation and after the ignition switch is OFF → ON. It is displayed simultaneously until the vehicle drives approximately 500 m (0.31 mile).

## TRAVEL TIME

Measures the time during the ignition switch ON with the unified meter and A/C amp, and transmits it to the combination meter by means of communication line.

## TRAVEL DISTANCE

- The unified meter and A/C amp. transmits the vehicle speed signal from ABS actuator and electric unit (control unit) to the combination meter.
- The combination meter calculates the vehicle distance according to the vehicle speed signal. The vehicle distance is displayed.

## POSSIBLE DRIVING DISTANCE

# METER SYSTEM

## < SYSTEM DESCRIPTION >

The unified meter and A/C amp. calculates possible driving distance according to the vehicle speed signal transmitted through CAN communication and the fuel level sensor signal transmitted from the fuel level sensor. These signals are transmitted to the combination meter with the communication line.

### NOTE:

- “—” is displayed for 30 seconds after the ignition switch is OFF → ON. It is displayed simultaneously until the vehicle drives approximately 500 m (0.31 mile).
- The indicated values may not match each other when filling the fuel with the ignition switch ON. Refer to [MWI-125, "INFORMATION DISPLAY : Description"](#).

## AMBIENT AIR TEMPERATURE

- The unified meter and A/C amp. receives the ambient sensor signal from the ambient sensor.
- The unified meter and A/C amp. calculates the ambient temperature according to the ambient sensor signal, and transmits it to the combination meter.
- The indicated temperature is corrected by the ignition switch signal, the ambient sensor detection temperature, and the vehicle speed signal. It does not increase if the vehicle speed is less than 20 km/h (12 MPH).

### Correction Process (Ignition Switch OFF → ON)

The ambient temperature sensor detection temperature is not displayed in real time if all of the following conditions are fulfilled. The indicated temperature before the ignition switch OFF is displayed.

- The ignition switch OFF time is less than 3.5 hours.
- The ambient temperature sensor detection temperature is higher than the indicated temperature before the ignition switch OFF.

### Correction Process (Ignition Switch ON)

Perform the following correction if the ambient sensor detection temperature is higher than the indicated temperature when the vehicle speed is 20 km/h (12 MPH) or more.

- Shorten the update time of the indicated temperature according to the increase of the vehicle speed.
- Increase the indicated temperature by 1°C (34°F) per 1 minute until it reaches to the ambient air temperature detection value when the ambient sensor detection temperature is higher than the indicated temperature at 8°C (46°F) or more.

### NOTE:

The ambient sensor input value that is displayed on “Data Monitor” of CONSULT-III is the value before the correction. It may not match the indicated temperature on the information display.

## SETTING

### Setting item list

| Items       |              | Setting range                                       | Setting unit                               | Description  |
|-------------|--------------|---|--|--|
| ALERT       | TIME TO REST | No setting - 6 hours                                | 30 minutes, [60 minutes]*                  | Time to rest is displayed on the information display if the vehicle reached the set travel distance.                 |
|             | ICY          | ON/OFF  | —  | Low outside temperature is displayed on the information display if the ambient temperature is 3°C (37°F) or less.    |
| MAINTENANCE | ENGINE OIL   | No setting - 18,500 miles, (No setting - 30,000 km) | 250 miles (500 km), [500 miles (1000 km)]* | The engine oil replacement interval is displayed on the information display if the vehicle reached the set distance. |
|             | OIL FILTER   | No setting - 18,500 miles, (No setting - 30,000 km) | 250 miles (500 km), [500 miles (1000 km)]* | The oil filter replacement interval is displayed on the information display if the vehicle reached the set distance. |
|             | TIRE         | No setting - 18,500 miles, (No setting - 30,000 km) | 250 miles (500 km), [500 miles (1000 km)]* | The tire replacement interval is displayed on the information display if the vehicle reached the set distance.       |
|             | OTHER        | No setting - 18,500 miles, (No setting - 30,000 km) | 250 miles (500 km), [500 miles (1000 km)]* | The other replacement interval is displayed on the information display if the vehicle reached the set distance.      |
| DISPLAY     | LANGUAGE     | ENGLISH/FRANCAIS                                    | —  | Changing the language setting can be performed.  |
|             | UNIT         | US/METRIC   | —  | Changing the unit setting can be performed.  |


\* : Press and hold the switch (1 second or more).

# METER SYSTEM

< SYSTEM DESCRIPTION >

## INFORMATION DISPLAY : Component Parts Location

INFOID:000000005807789

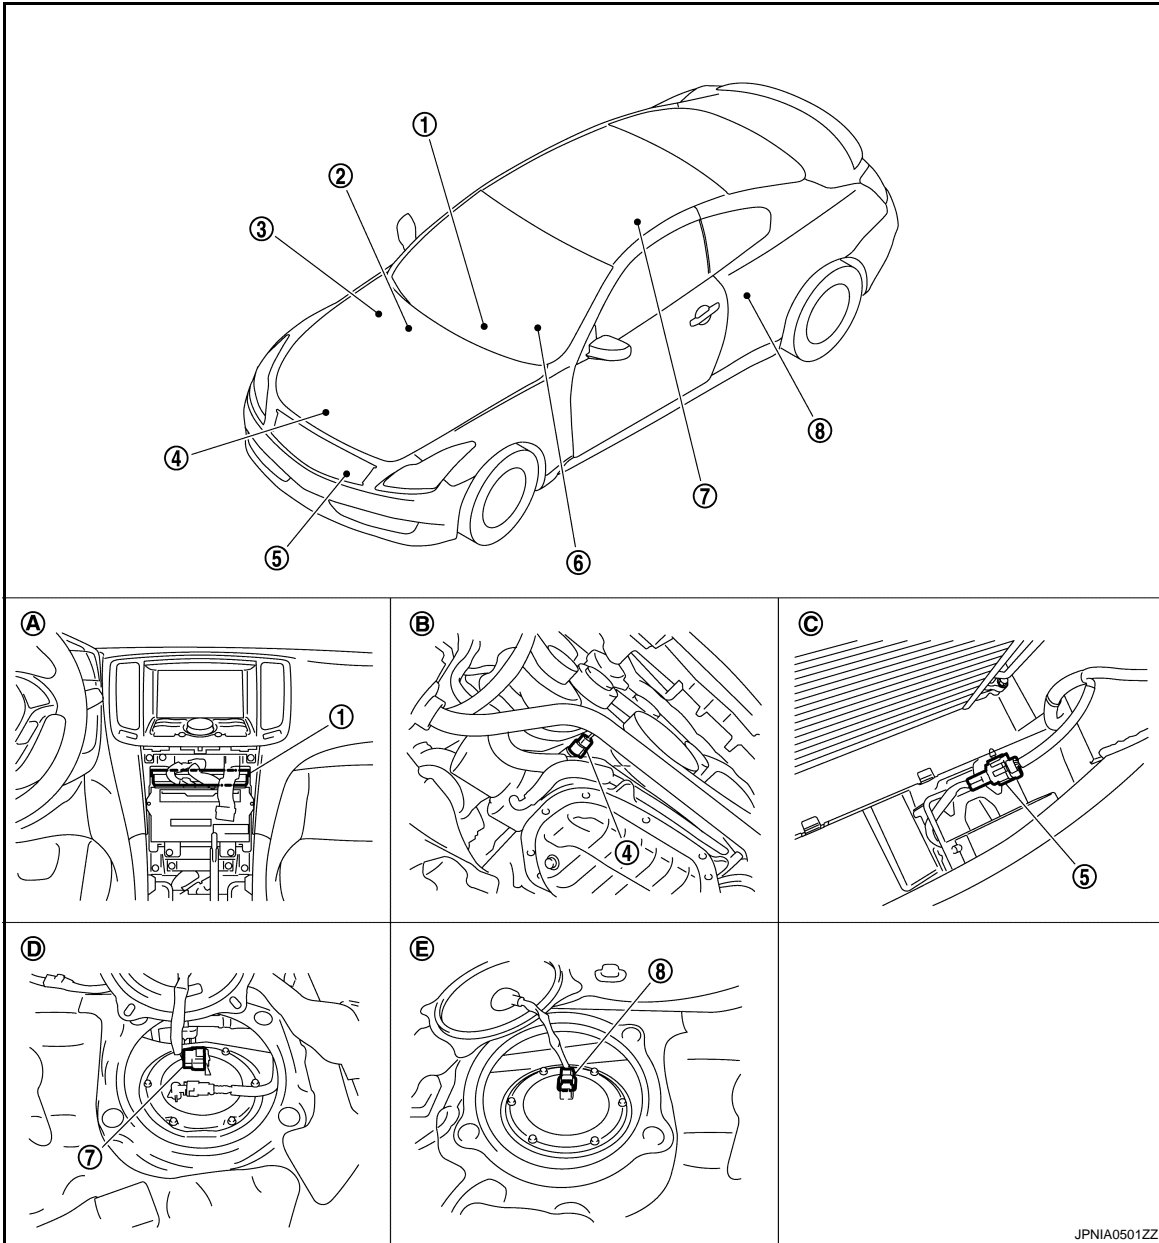

- |  |                                 |                      |
|--|---------------------------------|----------------------|
| 1. Unified meter and A/C amp.                  | 2. BCM                          | 3. IPDM E/R          |
| 4. Oil pressure switch                         | 5. Ambient sensor               | 6. Combination meter |
| 7. Fuel level sensor unit and fuel pump (main) | 8. Fuel level sensor unit (sub) |                      |
| A. Behind cluster lid C                        | B. Oil pan (upper) RH side      | C. Condenser (front) |
| D. Rear seat (lower right)                     | E. Rear seat (lower left)       |                      |

## INFORMATION DISPLAY : Component Description

INFOID:000000005807790

| Unit                       | Description   |
|----------------------------|---|
| Combination meter          | Controls the information display with the signals received from the unified meter and A/C amp. by means of communication and the signals from various switches and sensors. |
| Unified meter and A/C amp. | Transmits signals received from various units to the combination meter by means of communication.   |
| Fuel level sensor unit     | Refer to <a href="#">MWI-53, "Description"</a> .  |

# METER SYSTEM

## < SYSTEM DESCRIPTION >

| Unit  | Description   |
|---|---|
| ECM   | Transmits the following signals to the unified meter and A/C amp. via CAN communication. <ul style="list-style-type: none"> <li>• Engine speed signal</li> <li>• Fuel consumption monitor signal</li> </ul> |
| ABS actuator and electric unit (control unit) | Transmits the vehicle speed signal to the unified meter and A/C amp. via CAN communication.   |
| BCM   | Transmits signals provided by various units to the unified meter and A/C amp. via CAN communication.  |
| Meter control switch                          | Transmits the following signals to the combination meter. <ul style="list-style-type: none"> <li>• Enter switch signal</li> <li>• Select switch signal</li> </ul>   |
| Washer level switch                           | Transmits the washer level switch signal to the combination meter.  |
| Parking brake switch                          | Refer to <a href="#">MWI-60. "Description"</a> .  |
| Door switch                                   | Transmits the door switch signals to BCM.   |
| Trunk room lamp switch                        | Transmits the room lamp switch signal to BCM.   |
| Ambient sensor                                | Detects the ambient air temperature and transmits the ambient sensor signal to the unified meter and A/C amp.   |

A  
B  
C  
D  
E  
F

G

H

I

J

K

L

M

MWI

O

P

# COMPASS

< SYSTEM DESCRIPTION >

## COMPASS

### Description


INFOID:000000005807791

### DESCRIPTION

- This electronic compass is able to display 8 primary directions: N, NE, E, SE, S, SW, W, NW.
- The compass switch (1) is used to operate the compass.

#### Switch Operation


|                                       |   |
|---------------------------------------|---|
| Press                                 | Compass is turned ON/OFF                                |
| Press and hold (for 3 - 9 sec.)       | Compass display (2) turns to zone variation change mode |
| Press and hold (for more than 9 sec.) | Compass display turns to calibration mode               |

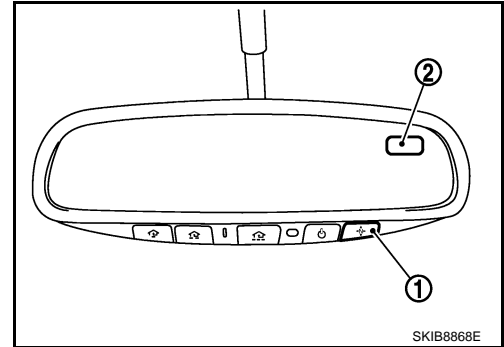

- All standard compasses determine direction relative to Magnetic North; however, this electronic compass is designed to display direction relative to True North.
- The difference between Magnetic North and True North varies from place to place across the surface of the earth.
- This electronic compass must be "told" approximately where it is on the earth's surface so that the Magnetic North reading can be properly converted into a True North display.
- To tell the electronic compass where it's at, the earth is separated into numbered "Zone Variances". The Zone Variance number in which the compass is to function must be entered into this electronic compass.
- Each zone is magnetically about 4.2° wide. Typically, anything under 22.5° total zone change is not noticed on the electronic compass display. However, over 22.5°, a reading may be off by one or more primary directions.
- On long trips, a vehicle may leave its original zone and enter one or more new zones. Generally, you do not need to reset the compass zone if you travel between 3 or 4 zones, such as business travel or vacation. The typical driver will not notice any difference on the display within 3 or 4 zones. However, if the vehicle is "permanently" moved to a new location, it is recommended that the compass zone be reset.

### ZONE VARIATION SETTING PROCEDURE

1. Press and hold the compass switch for 3 – 9 seconds.
2. The current zone setting appears on the compass display.
3. Find the current geographical location number in the Zone Variation Chart.
4. Select the new zone number. (Press the compass switch until the new zone number appears on the compass display.)
5. After select the new zone number, the compass display will automatically shows a direction within a few seconds.
6. Perform the following Calibration Procedure for more accurate indications.

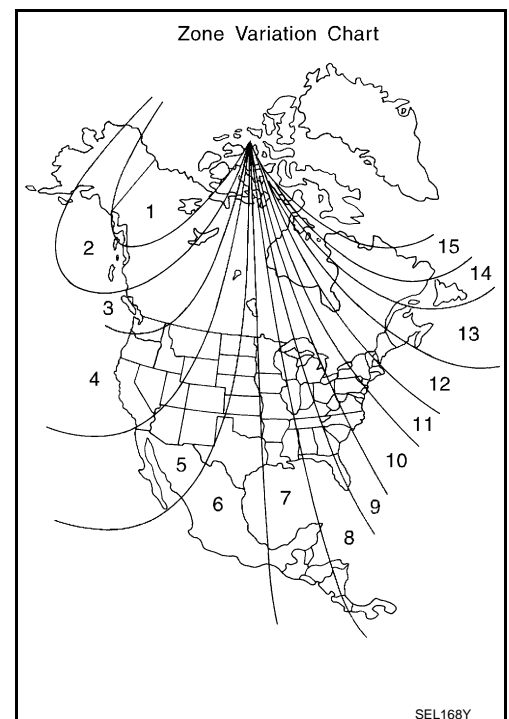



# COMPASS

## < SYSTEM DESCRIPTION >

### CALIBRATION PROCEDURE

#### NOTE:

The compass calibrates itself under normal driving conditions. However, occasional circumstances may cause the compass to operate inaccurately. Example: Driving from rural (wide open) areas to crowded city areas, or if an aftermarket (i.e., non original equipment) antenna with a magnetic base is attached to the vehicle. Calibrate the mirror compass if the display shows only one direction or a limited number of directions.

#### NOTE:

- If “magnetic hats” are used in the dealership for vehicle identification, remove the hat from the vehicle before performing the following steps. Do not put the hat back on the vehicle after the procedure is completed.
- Drive the vehicle to an open level area; away from large metallic objects, structures, and overhead power lines.
- Turn off “non-essential” electrical accessories (rear window defrost, heater/air conditioning, wipers) and close the doors.

1. Verify the correct compass zone setting for the geographical location.
2. Press and hold the compass switch for more than 9 seconds.
3. “C” is displayed on the compass display, when calibration starts.
4. Drive slowly [less than 8 km/h (5 MPH)] in a circle until the “C / CAL” is replaced with primary headings (N, NE, E, SE, S, SW, W, or NW).

#### NOTE:

This will require driving at least 2 complete 360 degree circles; 3 complete circles may be required.

5. The compass calibration procedure is now complete. The compass should operate normally.


#### NOTE:

If at any time the compass continually displays the incorrect direction or the reading is erratic or locked, repeat the calibration procedure.

### Component Parts Location

INFOID:000000005807792

- 1 : Compass switch
- 2 : Compass display

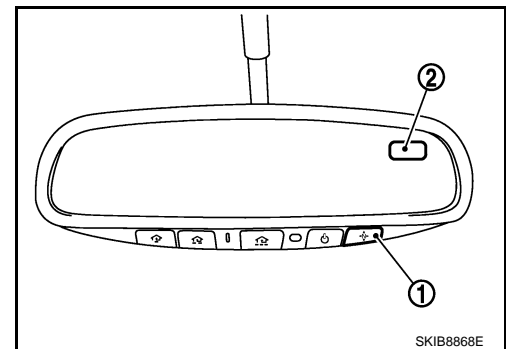

### Special Repair Requirement

INFOID:000000005807793

#### 1.PERFORM ZONE VARIATION SETTING

Perform the zone variation setting. Refer to [MWI-32, "Description"](#).

>> GO TO 2.

#### 2.PERFORM CALIBRATION

Perform the calibration. Refer to [MWI-32, "Description"](#).

>> Setting completion

# CLOCK


< SYSTEM DESCRIPTION >

## CLOCK

### Component Parts Location

INFOID:000000005807794

1 : Clock

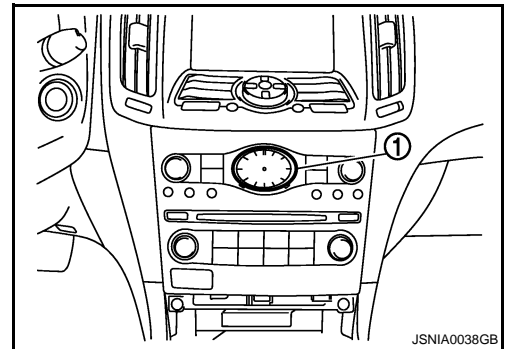

# DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (METER)

### Diagnosis Description

INFOID:000000005807795

### SELF-DIAGNOSIS MODE

- Information display LCD segment operation can be checked in self-diagnosis mode.
- Meters/gauges can be checked in self-diagnosis mode.


### OPERATION PROCEDURE

1. Turn ignition switch ON, and switch the trip meter to "trip A" or "trip B".


**NOTE:**

If the diagnosis function is activated with "trip A" displayed, the mileage on "trip A" is reset to "0000.0". (The same way for "trip B".)

2. Turn ignition switch OFF.
3. While pressing the trip A/B reset switch (1), turn ignition switch ON again.
4. Make sure that the trip meter displays "0000.0".
5. Press the trip A/B reset switch at least 3 times. (Within 7 seconds after the ignition switch is turned ON.)

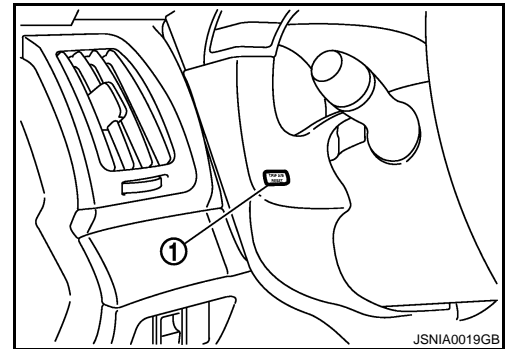

6. The unified meter control unit is turned to self-diagnosis mode.
  - Displays "888888" (1) and "8888.8" (2) in the information display LCD (3) for approximately 5 seconds and then blinks the segment dots of the information display LCD alternately.

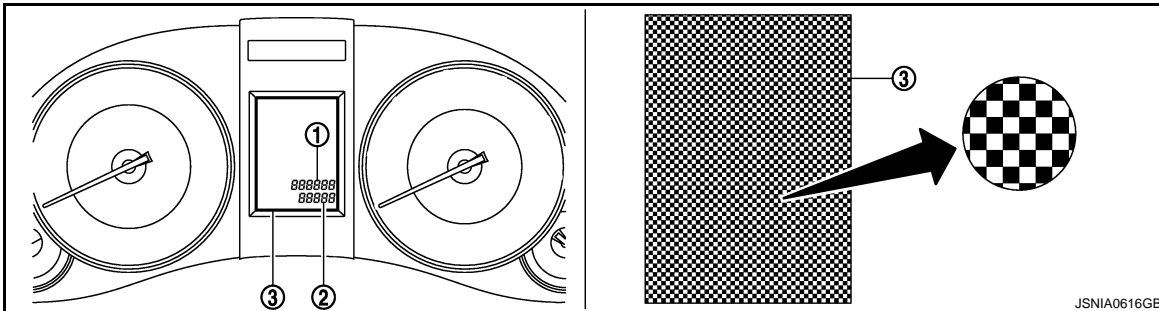

- Water temperature gauge and fuel gauge return to zero, and at the same time.

**NOTE:**

- Check trip A/B reset switch and combination meter power supply and ground circuit when self-diagnosis mode of combination meter does not start. Replace combination meter if they are normal.
- If any of the segments is not displayed, replace combination meter.


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

## DIAGNOSIS SYSTEM (METER)

### < SYSTEM DESCRIPTION >

7. Each meter activates during pressing trip A/B reset switch.

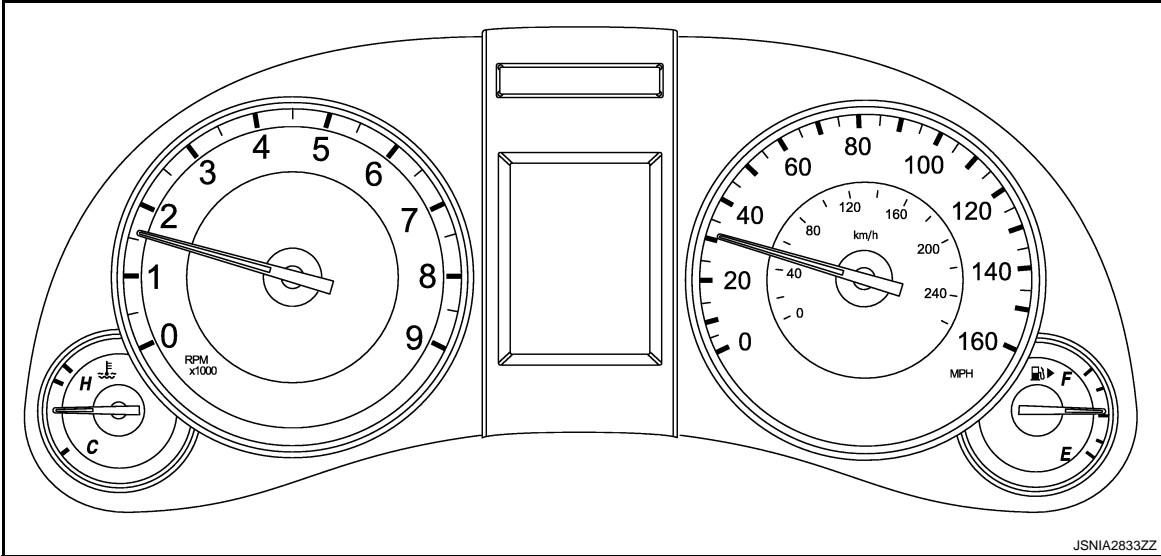

#### NOTE:

- If any of the meter and gages is not activated, replace combination meter.
- The figure is reference.

# DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

### CONSULT-III Function (METER/M&A)

INFOID:000000005807796

#### CONSULT-III APPLICATION ITEMS

CONSULT-III can perform the following diagnosis modes with CAN communication with the unified meter and A/C amp.

| System    | Diagnosis mode         | Description  |
|-----------|------------------------|--|
| METER/M&A | Self Diagnostic Result | Unified meter and A/C amp. checks the conditions and displays memorized error. |
|           | Data Monitor           | Displays unified meter and A/C amp. input/output data in real time.            |

#### SELF DIAG RESULT

Refer to [MWI-101, "DTC Index"](#).

#### DATA MONITOR

Display Item List

X: Applicable

| Display item [Unit]      | MAIN SIGNALS | Description   |
|--------------------------|--------------|---|
| SPEED METER<br>[km/h]    | X            | Value of vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line.<br><b>NOTE:</b><br>655.35 is displayed when the malfunction signal is received.  |
| SPEED OUTPUT<br>[km/h]   | X            | Vehicle speed signal value transmitted to other units with CAN communication line.<br><b>NOTE:</b><br>655.35 is displayed when the malfunction signal is received.  |
| ODO OUTPUT<br>[km]       |              | Odometer signal value transmitted to other units with CAN communication line.   |
| TACHO METER<br>[rpm]     | X            | Value of the engine speed signal received from ECM with CAN communication line.<br><b>NOTE:</b><br>8191.875 is displayed when the malfunction signal is received.   |
| FUEL METER<br>[L]        | X            | Fuel level indicated on combination meter.  |
| W TEMP METER<br>[°C]     | X            | Value of engine coolant temperature signal received from ECM with CAN communication line.<br><b>NOTE:</b><br>215 is displayed when the malfunction signal is input.   |
| ABS W/L<br>[On/Off]      |              | Status of ABS warning lamp judged from ABS warning lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.   |
| VDC/TCS IND<br>[On/Off]  |              | Status of VDC OFF indicator lamp judged from VDC OFF indicator lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.   |
| SLIP IND<br>[On/Off]     |              | Status of SLIP indicator lamp judged from slip indicator lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.   |
| BRAKE W/L<br>[On/Off]    |              | Status of brake warning lamp judged from brake warning lamp signal received from ABS actuator and electric unit (control unit) with CAN communication line.<br><b>NOTE:</b><br>Displays "Off" if the brake warning lamp is illuminated when the valve check starts, the parking brake switch is turned ON or the brake fluid level switch is turned ON. |
| DOOR W/L<br>[On/Off]     |              | Status of door warning judged from door switch signal received from BCM with CAN communication line.  |
| TRUNK/GLAS-H<br>[On/Off] |              | Status of trunk warning judged from trunk switch signal received from BCM with CAN communication line.  |

## DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

### < SYSTEM DESCRIPTION >

| Display item [Unit]       | MAIN SIGNALS | Description  |
|---------------------------|--------------|--|
| HI-BEAM IND<br>[On/Off]   |              | Status of high beam indicator lamp judged from high beam request signal received from BCM with CAN communication line.                 |
| TURN IND<br>[On/Off]      |              | Status of turn indicator lamp judged from turn indicator signal received from BCM with CAN communication line.                         |
| FR FOG IND<br>[On/Off]    |              | Status of front fog lamp indicator lamp judged from front fog light request signal received from BCM with CAN communication line.      |
| RR FOG IND<br>[Off]       |              | This item is displayed, but cannot be monitored.   |
| LIGHT IND<br>[On/Off]     |              | Status of tail lamp indicator lamp judged from position light request signal received from BCM with CAN communication line.            |
| OIL W/L<br>[On/Off]       |              | Status of oil pressure warning lamp judged from oil pressure switch signal received from IPDM E/R with CAN communication line.         |
| MIL<br>[On/Off]           |              | Status of malfunction indicator lamp judged from malfunctioning indicator lamp signal received from ECM with CAN communication line.   |
| GLOW IND<br>[On/Off]      |              | This item is displayed, but cannot be monitored.   |
| C-ENG2 W/L<br>[On/Off]    |              | This item is displayed, but cannot be monitored.   |
| CRUISE IND<br>[On/Off]    |              | Status of CRUISE indicator judged from ASCD status signal received from ECM with CAN communication line.                               |
| SET IND<br>[On/Off]       |              | Status of SET indicator judged from ASCD SET indicator signal received from ECM with CAN communication line.                           |
| CRUISE W/L<br>[On/Off]    |              | Status of CRUISE warning lamp judged from ASCD status signal received from ECM with CAN communication line.                            |
| BA W/L<br>[Off]           |              | This item is displayed, but cannot be monitored.   |
| ATC/T-AMT W/L<br>[On/Off] |              | Status of A/T check warning lamp judged from A/T check indicator signal received from TCM with CAN communication line.                 |
| 4WD W/L<br>[On/Off]       |              | Status of AWD warning lamp judged from AWD warning lamp signal received from AWD control unit with CAN communication line.             |
| 4WD LOCK IND<br>[Off]     |              | This item is displayed, but cannot be monitored.   |
| FUEL W/L<br>[On/Off]      |              | Low-fuel warning lamp status judged by the identified fuel level.  |
| WASHER W/L<br>[On/Off]    |              | Status of washer warning lamp judged from washer level switch input to combination meter.  |
| AIR PRES W/L<br>[On/Off]  |              | Status of low tire pressure warning lamp judged from tire pressure signal received from BCM with CAN communication line.               |
| KEY G/Y W/L<br>[On/Off]   |              | Status of key warning lamp (G/Y) judged from key warning signal received from BCM with CAN communication line.                         |
| AFS OFF IND<br>[On/Off]   |              | Status of AFS OFF indicator lamp judged from AFS OFF indicator lamp signal received from AFS control unit with CAN communication line. |
| 4WAS/RAS W/L<br>[On/Off]  |              | Status of 4WAS warning lamp judged from 4WAS warning lamp signal received from 4WAS main control unit with CAN communication line.     |
| DDS W/L<br>[On/Off]       |              | This item is displayed, but cannot be monitored.   |
| LANE W/L<br>[On/Off]      |              | This item is displayed, but cannot be monitored.   |
| LDP IND<br>[On/Off]       |              | This item is displayed, but cannot be monitored.   |

# DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

## < SYSTEM DESCRIPTION >

| Display item [Unit]   | MAIN SIGNALS | Description   | A   |
|---|--------------|---|-----|
| LCD<br>[B&P N, B&P I, ID NG, ROTAT, SFT P, INSRT, BATT, NO KY,OUTKY, LK WN, C&P N, C&P I] |              | Displays status of Intelligent Key system warning judged from meter display signal received from BCM with CAN communication line.   | B   |
| ACC TARGET<br>[On/Off]  |              | Status of vehicle ahead detection indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.  | C   |
| ACC DISTANCE<br>[Off, SHOR, MID, LONG]  |              | Status of set distance indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.   | D   |
| ACC OWN VHL<br>[On/Off]   |              | Status of own vehicle indicator judged from meter display signal received from ICC sensor integrated unit with CAN communication line.  | E   |
| ACC SET SPEED   |              | Display ICC set vehicle speed from meter display signal received from ICC sensor integrated unit with CAN communication line.   | F   |
| ACC UNIT<br>[On/Off]  |              | Status of display unit judged from meter display signal received from ICC sensor integrated unit with CAN communication line.   | G   |
| O/D OFF SW<br>[On/Off]  |              | This item is displayed, but cannot be monitored.  | H   |
| SHIFT IND<br>[P, R, N, D, M1, M2, M3, M4, M5, M6, M7]                                     |              | Status of shift position indicator judged from shift position signal and manual mode indicator signal received from TCM with CAN communication line.  | I   |
| AT S MODE SW<br>[On/Off]  |              | Status of snow mode switch.   | J   |
| AT P MODE SW<br>[On/Off]  |              | This item is displayed, but cannot be monitored.  | K   |
| M RANGE SW<br>[On/Off]  |              | Status of manual mode switch.   | L   |
| NM RANGE SW<br>[On/Off]   |              | Status of not manual mode switch.   | M   |
| AT SFT UP SW<br>[On/Off]  |              | Status of A/T shift up switch.  | MWI |
| AT SFT DWN SW<br>[On/Off]   |              | Status of A/T shift down switch.  | O   |
| ST SFT UP SW<br>[On/Off]  |              | Status of paddle shifter up switch.   | P   |
| ST SFT DWN SW<br>[On/Off]   |              | Status of paddle shifter down switch.   |     |
| COMP F/B SIG<br>[On/Off]  |              | A/C compressor activation condition that ECM judges according to the water temperature and the acceleration degree.   |     |
| 4WD LOCK SW<br>[Off]  |              | This item is displayed, but cannot be monitored.  |     |
| PKB SW<br>[On/Off]  |              | Status of parking brake switch.   |     |
| BUCKLE SW<br>[On/Off]   |              | Status of seat belt buckle switch.  |     |
| BRAKE OIL SW<br>[On/Off]  |              | Status of brake fluid level switch.   |     |
| DISTANCE<br>[km]  |              | Value of possible driving distance calculated by unified meter and A/C amp.   |     |
| OUTSIDE TEMP<br>[°C or °F]  |              | Ambient air temperature value converted from ambient sensor signal received from ambient sensor.<br><b>NOTE:</b><br>This may not match with the temperature value indicated on the information display. (Because the information display value is a corrected value from the ambient sensor input value.) |     |

## DIAGNOSIS SYSTEM (UNIFIED METER AND A/C AMP.)

### < SYSTEM DESCRIPTION >

| Display item [Unit]      | MAIN SIGNALS | Description   |
|--------------------------|--------------|---|
| FUEL LOW SIG<br>[On/Off] |              | Status of fuel level low warning signal to output to AV control unit with CAN communication line.   |
| BUZZER<br>[On/Off]       | X            | Buzzer status (in the combination meter) is judged with the buzzer output signal received from each unit with CAN communication line and the warning output condition of the combination meter. |

**NOTE:**

Some items are not available according to vehicle specification.



# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### U1000 CAN COMM CIRCUIT

#### Description

INFOID:000000005807797

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-27, "CAN Communication Signal Chart"](#).

#### DTC Logic

INFOID:000000005807798

#### DTC DETECTION LOGIC

| DTC   | Display contents of CONSULT-III | Diagnostic item is detected when ...   | Probable malfunction location |
|-------|---------------------------------|--|-------------------------------|
| U1000 | CAN COMM CIRCUIT                | When unified meter and A/C amp. is not transmitting or receiving CAN communication signal for 2 seconds or more. | CAN communication system      |

#### Diagnosis Procedure

INFOID:000000005807799

#### 1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of "METER/M&A".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-18, "Trouble Diagnosis Flow Chart"](#).  
NO >> Refer to [GI-38, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

## U1010 CONTROL UNIT (CAN)

### Description

INFOID:000000005807800

Initial diagnosis of unified meter and A/C amp.

### DTC Logic

INFOID:000000005807801

### DTC DETECTION LOGIC

| DTC   | Display contents of CONSULT-III | Diagnostic item is detected when ...   | Probable malfunction location |
|-------|---------------------------------|--|-------------------------------|
| U1010 | CONTROL UNIT (CAN)              | If any malfunction is detected during initial diagnosis of unified meter and A/C amp. CAN controller | Unified meter and A/C amp.    |

### Diagnosis Procedure

INFOID:000000005807802

#### 1. REPLACE UNIFIED METER AND A/C AMP.

When DTC "U1010" is detected, replace unified meter and A/C amp.

>> INSPECTION END

# B2201 COMMUNICATION ERROR 1

< DTC/CIRCUIT DIAGNOSIS >

## B2201 COMMUNICATION ERROR 1

### Description

INFOID:000000005807803

The communication line (LCD <-> AMP.) is used to communicate signals between the combination meter and the unified meter and A/C amp. in order to control the information display.

### DTC Logic

INFOID:000000005807804

### DTC DETECTION LOGIC

| DTC   | Display contents of CONSULT-III | Diagnostic item is detected when ...   | Probable malfunction location             |
|-------|---------------------------------|--|---|
| B2201 | COMM ERROR 1                    | If a communication error is present in the communication line (LCD <-> AMP.) for 2 seconds or more | Communication line (LCD <-> AMP.) circuit |

### Diagnosis Procedure

INFOID:000000005807805

#### 1. CHECK CONNECTOR

Check combination meter, unified meter and A/C amp. and terminals (combination meter side, unified meter and A/C amp. side, and harness side) for looseness or bent.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal or connector.

#### 2. CHECK CONTINUITY COMMUNICATION CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and unified meter and A/C amp. connector.
3. Check continuity between combination meter harness connector terminal and unified meter and A/C amp. harness connector terminal.

| Combination meter |           | Unified meter and A/C amp. |           | Continuity |
|-------------------|-----------|----------------------------|-----------|------------|
| Connector         | Terminals | Connector                  | Terminals |            |
| M53               | 24        | M66                        | 14        | Existed    |
|                   | 25        |                            | 34        |            |

4. Check continuity between combination meter harness connector terminal and ground.

| Combination meter |           | Ground | Continuity  |
|-------------------|-----------|--------|-------------|
| Connector         | Terminals |        |             |
| M53               | 24        |        | Not existed |
|                   | 25        |        |             |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

#### 3. CHECK UNIFIED METER AND A/C AMP. OUTPUT VOLTAGE

1. Connect unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Check voltage between unified meter and A/C amp. harness connector terminal and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

## B2201 COMMUNICATION ERROR 1

### < DTC/CIRCUIT DIAGNOSIS >

---

| Terminal                   |          | (-)    | Voltage<br>(Approx.) |
|----------------------------|----------|--------|----------------------|
| (+)                        |          |        |                      |
| Unified meter and A/C amp. |          | Ground | 12 V                 |
| Connector                  | Terminal |        |                      |
| M66                        | 14       |        |                      |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace unified meter and A/C amp.

#### 4. CHECK COMBINATION METER OUTPUT VOLTAGE

---

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Connect combination meter connector.
4. Turn ignition switch ON.
5. Check voltage between combination meter harness connector terminal and ground.

| Terminal          |          | (-)    | Voltage<br>(Approx.) |
|-------------------|----------|--------|----------------------|
| (+)               |          |        |                      |
| Combination meter |          | Ground | 5 V                  |
| Connector         | Terminal |        |                      |
| M53               | 25       |        |                      |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination meter.

# B2202 COMMUNICATION ERROR 2

< DTC/CIRCUIT DIAGNOSIS >

## B2202 COMMUNICATION ERROR 2

### Description

INFOID:000000005807806

The communication line (METER <-> AMP.) is used to communicate signals between the combination meter and the unified meter and A/C amp. in order to control the information display.

### DTC Logic

INFOID:000000005807807

### DTC DETECTION LOGIC

| DTC   | Display contents of CONSULT-III | Diagnostic item is detected when ...   | Probable malfunction location               |
|-------|---------------------------------|--|---|
| B2202 | COMM ERROR 2                    | If a communication error is present in the communication line (METER <-> AMP.) for 2 seconds or more | Communication line (METER <-> AMP.) circuit |

### Diagnosis Procedure

INFOID:000000005807808

#### 1. CHECK CONNECTOR

Check combination meter, unified meter and A/C amp. and terminals (combination meter side, unified meter and A/C amp. side, and harness side) for looseness or bent.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal or connector.

#### 2. CHECK CONTINUITY COMMUNICATION CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and unified meter and A/C amp. connector.
3. Check continuity between combination meter harness connector terminal and unified meter and A/C amp. harness connector terminal.

| Combination meter |           | Unified meter and A/C amp. |           | Continuity |
|-------------------|-----------|----------------------------|-----------|------------|
| Connector         | Terminals | Connector                  | Terminals |            |
| M53               | 2         | M66                        | 27        | Existed    |
|                   | 3         |                            | 7         |            |

4. Check continuity between combination meter harness connector terminal and ground.

| Combination meter |           | Ground | Continuity  |
|-------------------|-----------|--------|-------------|
| Connector         | Terminals |        |             |
| M53               | 2         |        | Not existed |
|                   | 3         |        |             |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

#### 3. CHECK UNIFIED METER AND A/C AMP. OUTPUT VOLTAGE

1. Connect unified meter and A/C amp. connector.
2. Turn ignition switch ON.
3. Check voltage between unified meter and A/C amp. harness connector terminal and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

## B2202 COMMUNICATION ERROR 2

### < DTC/CIRCUIT DIAGNOSIS >

---

| Terminal                   |          | (-)    | Voltage<br>(Approx.) |
|----------------------------|----------|--------|----------------------|
| (+)                        |          |        |                      |
| Unified meter and A/C amp. |          | Ground | 5 V                  |
| Connector                  | Terminal |        |                      |
| M66                        | 27       |        |                      |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace unified meter and A/C amp.

#### 4. CHECK COMBINATION METER OUTPUT VOLTAGE

---

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Connect combination meter connector.
4. Turn ignition switch ON.
5. Check voltage between combination meter harness connector terminal and ground.

| Terminal          |          | (-)    | Voltage<br>(Approx.) |
|-------------------|----------|--------|----------------------|
| (+)               |          |        |                      |
| Combination meter |          | Ground | 5 V                  |
| Connector         | Terminal |        |                      |
| M53               | 3        |        |                      |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination meter.

# B2205 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

## B2205 VEHICLE SPEED

### Description

INFOID:000000005807809

Vehicle speed signal is transmitted from ABS actuator and electric unit (control unit) via CAN communication to unified meter and A/C amp.

### DTC Logic

INFOID:000000005807810

### DTC DETECTION LOGIC

| DTC   | Display contents of CONSULT-III | Diagnostic item is detected when ...   | Probable malfunction location  |
|-------|---------------------------------|--|--|
| B2205 | VEHICLE SPEED                   | If the abnormal vehicle speed signal is input from ABS actuator and electric unit (control unit) for 2 seconds or more | <ul style="list-style-type: none"><li>• Wheel sensor</li><li>• ABS actuator and electric unit (control unit)</li></ul> |

### Diagnosis Procedure

INFOID:000000005807811

#### 1. PERFORM SELF-DIAGNOSIS OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform "Self Diagnostic Result" of ABS actuator and electric unit (control unit), and repair or replace malfunctioning parts.

>> Refer to [BRC-26, "CONSULT-III Function"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# B2267 ENGINE SPEED

< DTC/CIRCUIT DIAGNOSIS >

## B2267 ENGINE SPEED

### Description

INFOID:000000005807812

The engine speed signal is transmitted from ECM to the unified meter and A/C amp. with CAN communication.

### DTC Logic

INFOID:000000005807813

### DTC DETECTION LOGIC

| DTC   | Display contents of CONSULT-III | Diagnostic item is detected when ...  | Probable malfunction location  |
|-------|---------------------------------|---|--|
| B2267 | ENGINE SPEED                    | If ECM continuously transmits abnormal engine speed signals for 2 seconds or more | <ul style="list-style-type: none"><li>• Crankshaft position sensor (POS)</li><li>• ECM</li></ul> |

### Diagnosis Procedure

INFOID:000000005807814

#### 1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnostic Result" of ECM, and repair or replace malfunctioning parts.

>> Refer to [EC-133. "CONSULT-III Function"](#).



# B2268 WATER TEMP

< DTC/CIRCUIT DIAGNOSIS >

## B2268 WATER TEMP

### Description

INFOID:000000005807815

The engine coolant temperature signal is transmitted from ECM to the unified meter and A/C amp. via CAN communication.

### DTC Logic

INFOID:000000005807816

### DTC DETECTION LOGIC

| DTC   | Display contents of CONSULT-III | Diagnostic item is detected when ...   | Probable malfunction location   |
|-------|---------------------------------|--|---|
| B2268 | WATER TEMP                      | If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more | <ul style="list-style-type: none"><li>• Engine coolant temperature sensor</li><li>• ECM</li></ul> |

### Diagnosis Procedure

INFOID:000000005807817

#### 1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnostic Result" of ECM, and repair or replace malfunctioning parts.

>> Refer to [EC-133, "CONSULT-III Function"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

### COMBINATION METER : Diagnosis Procedure

INFOID:000000005807818

#### 1.CHECK FUSE

Check for blown fuses.

| Power source                | Fuse No. |
|-----------------------------|----------|
| Battery                     | 11       |
| Ignition switch ON or START | 4        |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

#### 2.CHECK POWER SUPPLY CIRCUIT

Check voltage between combination meter harness connector terminal and ground.

| Terminals         |        | Ignition switch | Voltage (Approx.) |
|-------------------|--------|-----------------|-------------------|
| (+)               | (-)    |                 |                   |
| Combination meter | Ground | OFF             | Battery voltage   |
| Connector         |        | ON              |                   |
| M53               | 1      |                 |                   |
|                   | 21     |                 |                   |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between combination meter and fuse.

#### 3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector terminal and ground.

| Combination meter |           | Ground | Continuity |
|-------------------|-----------|--------|------------|
| Connector         | Terminals |        |            |
| M53               | 5         | Ground | Existed    |
|                   | 15        |        |            |
|                   | 22        |        |            |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

## UNIFIED METER AND A/C AMP.

### UNIFIED METER AND A/C AMP. : Diagnosis Procedure

INFOID:000000005807819

#### 1.CHECK FUSE

Check for blown fuses.

| Power source | Fuse No. |
|--------------|----------|
| Battery      | 11       |

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

| Power source                | Fuse No. |
|-----------------------------|----------|
| Ignition switch ACC or ON   | 19       |
| Ignition switch ON or START | 3        |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

## 2.CHECK POWER SUPPLY CIRCUIT

Check voltage between unified meter and A/C amp. harness connector terminal and ground.

| Terminals                  |        | Ignition switch | Voltage (Approx.) |
|----------------------------|--------|-----------------|-------------------|
| (+)                        | (-)    |                 |                   |
| Unified meter and A/C amp. | Ground | OFF             | Battery voltage   |
| Connector                  |        | ACC             |                   |
| Terminals                  |        | ON              |                   |
| M67                        | 54     |                 |                   |
|                            | 41     |                 |                   |
|                            | 53     |                 |                   |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between unified meter and A/C amp. and fuse.

## 3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector.
3. Check continuity between unified meter and A/C amp. harness connector terminal and ground.

| Unified meter and A/C amp. |           | Ground | Continuity |
|----------------------------|-----------|--------|------------|
| Connector                  | Terminals |        |            |
| M67                        | 55        |        | Existed    |
|                            | 71        |        |            |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

### IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000005890529

## 1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

| Signal name          | Fuses and fusible link No. |
|----------------------|----------------------------|
| Battery power supply | C                          |
|                      | 50                         |
|                      | 51                         |

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

## 2.CHECK POWER SUPPLY CIRCUIT

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

---

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

| Terminals |          | Voltage<br>(Approx.) |
|-----------|----------|----------------------|
| (+)       | (-)      |                      |
| IPDM E/R  |          | Battery voltage      |
| Connector | Terminal |                      |
| E4        | 1        |                      |

### Is the measurement value normal?

- YES >> GO TO 3.  
NO >> Repair the harness or connector.

## **3.**CHECK GROUND CIRCUIT

---

Check continuity between IPDM E/R harness connectors and the ground.

| IPDM E/R  |          | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal |        | Ground     |
| E5        | 12       |        |            |
| E6        | 41       |        |            |

### Does continuity exist?

- YES >> INSPECTION END  
NO >> Repair the harness or connector.

# FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FUEL LEVEL SENSOR SIGNAL CIRCUIT

### Description

INFOID:000000005807821

The fuel level sensor unit and fuel pump (main) and the fuel level sensor unit (sub) detect the fuel level in the fuel tank and transmit the fuel gauge signal to the unified meter and A/C amp.

### Component Function Check

INFOID:000000005807822

#### 1. CHECK UNIFIED METER AND A/C AMP. OUTPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" for the "METER/M&A" and compare the "FUEL METER" monitor value with the fuel gauge reading on the combination meter.

| Fuel gauge pointer | Reference value of data monitor [lit.] |
|--------------------|--|
| Full               | Approx. 72.8                           |
| Three quarters     | Approx. 59.2                           |
| Half               | Approx. 40.0                           |
| A quarter          | Approx. 20.8                           |
| Empty              | Approx. 5.6                            |

Does monitor value match fuel gauge reading?

- YES >> INSPECTION END  
 NO >> Replace combination meter.

### Diagnosis Procedure

INFOID:000000005807823

#### 1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between unified meter and A/C amp. harness connector terminal and ground.

| Terminal (+) |          | Terminal (-) | Voltage (Approx.)  |
|--------------|----------|--------------|--------------------|
| Connector    | Terminal |              |                    |
| M67          | 42       | Ground       | <p>JSNIA0013GB</p> |

Does it match fuel gauge reading?

- YES >> GO TO 2.  
 NO >> Replace the unified meter and A/C amp.

#### 2. CHECK FUEL LEVEL SENSOR (SUB) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect unified meter and A/C amp. connector and fuel level sensor unit (sub) connector.
3. Check continuity between unified meter and A/C amp. harness connector terminal and fuel level sensor unit (sub) harness connector terminal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# FUEL LEVEL SENSOR SIGNAL CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

| Unified meter and A/C amp. |          | Fuel level sensor unit (sub) |          | Continuity |
|----------------------------|----------|------------------------------|----------|------------|
| Connector                  | Terminal | Connector                    | Terminal |            |
| M67                        | 42       | B21                          | 1        | Existed    |

4. Check continuity between unified meter and A/C amp. harness connector terminal and ground.

| Unified meter and A/C amp. |          | Ground | Continuity  |
|----------------------------|----------|--------|-------------|
| Connector                  | Terminal |        |             |
| M67                        | 42       |        | Not existed |

Is the inspection result normal?

OK >> GO TO 3.

NG >> Repair harness or connector.

### 3. CHECK FUEL LEVEL SENSOR (MAIN-SUB) CIRCUIT

1. Disconnect fuel level sensor unit and fuel pump (main) connector.
2. Check continuity between fuel level sensor unit (sub) harness connector terminal and fuel level sensor unit and fuel pump (main) harness connector terminal.

| Fuel level sensor unit (sub) |          | Fuel level sensor unit (main) |          | Continuity |
|------------------------------|----------|-------------------------------|----------|------------|
| Connector                    | Terminal | Connector                     | Terminal |            |
| B21                          | 2        | B22                           | 2        | Existed    |

3. Check continuity between fuel level sensor unit (sub) harness connector terminal and ground.

| Fuel level sensor unit (sub) |          | Ground | Continuity  |
|------------------------------|----------|--------|-------------|
| Connector                    | Terminal |        |             |
| B21                          | 2        |        | Not existed |

Is the inspection result normal?

OK >> GO TO 4.

NG >> Repair harness or connector.

### 4. CHECK FUEL LEVEL SENSOR (MAIN) CIRCUIT

Check continuity between fuel level sensor unit and fuel pump (main) harness connector terminal and unified meter and A/C amp. harness connector terminal.

| Fuel level sensor unit (main) |          | Unified meter and A/C amp. |          | Continuity |
|-------------------------------|----------|----------------------------|----------|------------|
| Connector                     | Terminal | Connector                  | Terminal |            |
| B22                           | 5        | M67                        | 58       | Existed    |

Is the inspection result normal?

OK >> INSPECTION END

NG >> Repair harness or connector.

## Component Inspection

INFOID:000000005807824

### 1. REMOVE FUEL LEVEL SENSOR UNIT

Remove the fuel level sensor unit. Refer to [FL-5. "Removal and Installation"](#).

>> GO TO 2.


### 2. CHECK FUEL LEVEL SENSOR UNIT AND FUEL PUMP (MAIN)

# FUEL LEVEL SENSOR SIGNAL CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

Check the resistance between fuel level sensor unit and fuel pump (main).

| Terminal |   | Float position | Resistance value ( $\Omega$ ) |
|----------|---|----------------|-------------------------------|
| 2        | 5 | Full (A)       | Approx. 3                     |
|          |   | Empty (B)      | Approx. 80                    |

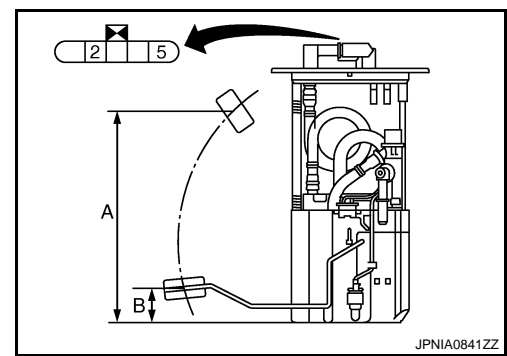

### Standard float position

| Float position [mm (in)] |                      |
|--------------------------|----------------------|
| Full                     | Approx. 206.1 (8.11) |
| Empty                    | Approx. 34.5 (1.36)  |

### Is the inspection result OK?


YES >> GO TO 3.

NO >> Replace fuel level sensor unit and fuel pump (main).

## 3. CHECK FUEL LEVEL SENSOR UNIT (SUB)

Inspect the resistance of fuel level sensor unit (sub).

| Terminal |   | Float position | Resistance value ( $\Omega$ ) |
|----------|---|----------------|-------------------------------|
| 1        | 2 | Full (A)       | Approx. 3                     |
|          |   | Empty (B)      | Approx. 42.5                  |

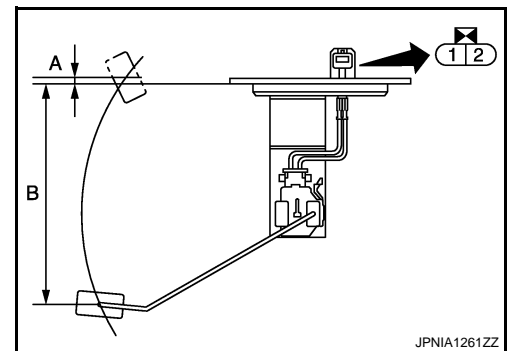

### Standard float position

| Float position [mm (in)] |                      |
|--------------------------|----------------------|
| Full                     | Approx. 5.5 (0.22)   |
| Empty                    | Approx. 176.8 (6.96) |

### Is the inspection result OK?

YES >> INSPECTION END

NO >> Replace fuel level sensor unit (sub).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# METER CONTROL SWITCH SIGNAL CIRCUIT





< DTC/CIRCUIT DIAGNOSIS >

## METER CONTROL SWITCH SIGNAL CIRCUIT

### Description

INFOID:000000005807825

Transmits the following signals to the combination meter.





-  (Illumination control) switch signal (+)
-  (Illumination control) switch signal (-)
- Trip A/B reset switch signal
-  (select) switch signal
-  (enter) switch is pressed

### Diagnosis Procedure

INFOID:000000005807826

#### 1. CHECK METER CONTROL SWITCH INPUT SIGNAL

1. Turn the ignition switch ON.
2. Measure voltage between the following terminals of the combination meter.

| Terminal No. | Condition   | Voltage (Approx.) |
|--------------|---|-------------------|
| 36 - 16      | When  (select) switch is pressed                 | 0 V               |
|              | Other than the above  | 5 V               |
| 37 - 16      | When  (enter) switch is pressed                  | 0 V               |
|              | Other than the above  | 5 V               |
| 38 - 16      | When trip A/B reset switch is pressed   | 0 V               |
|              | Other than the above  | 5 V               |
| 39 - 16      | When  (illumination control) switch is pressed | 0 V               |
|              | Other than the above  | 5 V               |
| 40 - 16      | When  (illumination control) switch is pressed | 0 V               |
|              | Other than the above  | 5 V               |

Is the inspection result normal?

- YES >> INSPECTION END  
 NO >> GO TO 2.

#### 2. CHECK METER CONTROL SWITCH SIGNAL CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the combination meter and meter control switch connectors.
3. Check continuity between combination meter harness connector terminal and meter control switch harness connector terminal.

| Combination meter |           | Meter control switch |           | Continuity |
|-------------------|-----------|----------------------|-----------|------------|
| Connector         | Terminals | Connector            | Terminals |            |
| M53               | 16        | M54                  | 7         | Existed    |
|                   | 36        |                      | 2         |            |
|                   | 37        |                      | 1         |            |
|                   | 39        |                      | 10        |            |
|                   | 40        |                      | 9         |            |
|                   | 38        |                      | 5         |            |

4. Check continuity between combination meter harness connector terminal and ground.



# METER CONTROL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

| Combination meter |           | Ground | Continuity  |
|-------------------|-----------|--------|-------------|
| Connector         | Terminals |        |             |
| M53               | 36        | Ground | Not existed |
|                   | 37        |        |             |
|                   | 39        |        |             |
|                   | 40        |        |             |
|                   | 38        |        |             |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

## Component Inspection

INFOID:000000005807827

### 1. CHECK METER CONTROL SWITCH UNIT

1. Turn the ignition switch OFF.
2. Disconnect the meter control switch connector.
3. Check continuity of the meter control switch.

| Connector | Terminal No. |   | Operation and status                             | Continuity  |
|-----------|--------------|---|--|-------------|
| M54       | 2            | 7 | When ● (select) switch is pressed                | Existed     |
|           |              |   | Other than the above                             | Not existed |
|           | 1            | 7 | When □ (enter) switch is pressed                 | Existed     |
|           |              |   | Other than the above                             | Not existed |
|           | 5            | 7 | When trip A/B reset switch is pressed            | Existed     |
|           |              |   | Other than the above                             | Not existed |
|           | 10           | 7 | When ⚡- (illumination control) switch is pressed | Existed     |
|           |              |   | Other than the above                             | Not existed |
|           | 9            | 7 | When ⚡+ (illumination control) switch is pressed | Existed     |
|           |              |   | Other than the above                             | Not existed |

Is the inspection result OK?

YES >> INSPECTION END

NO >> Replace the meter control switch.

MWI

# OIL PRESSURE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## OIL PRESSURE SWITCH SIGNAL CIRCUIT

### Description

INFOID:000000005807828

Detects the engine oil pressure and transmits the oil pressure switch signal to IPDM E/R.

### Component Function Check

INFOID:000000005807829

#### 1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" for the "METER/M&A" and check the "OIL W/L" monitor value.

"OIL W/L"

Ignition switch ON : On

Engine running : Off

>> INSPECTION END

### Diagnosis Procedure

INFOID:000000005807830

#### 1. CHECK OIL PRESSURE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and oil pressure switch connector.
3. Check continuity between IPDM E/R harness connector terminal and oil pressure switch harness connector terminal.

| IPDM E/R  |          | Oil pressure switch |          | Continuity |
|-----------|----------|---------------------|----------|------------|
| Connector | Terminal | Connector           | Terminal |            |
| E7        | 75       | F37                 | 1        | Existed    |

4. Check continuity between IPDM E/R harness connector terminal and ground.

| IPDM E/R  |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| E7        | 75       |        | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.


### Component Inspection

INFOID:000000005807831

#### 1. CHECK OIL PRESSURE SWITCH

Check continuity between oil pressure switch and ground.

| Condition      | Continuity  |
|----------------|-------------|
| Engine stopped | Existed     |
| Engine running | Not existed |

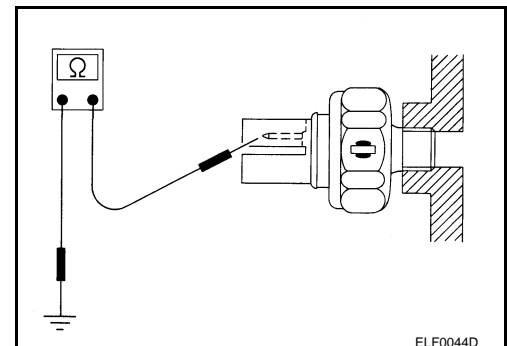

ELF0044D

Is the inspection result normal?

# OIL PRESSURE SWITCH SIGNAL CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

---

YES >> INSPECTION END  
NO >> Replace the oil pressure switch.

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

# PARKING BRAKE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## PARKING BRAKE SWITCH SIGNAL CIRCUIT

### Description

INFOID:000000005807832

Transmits the parking brake switch signal to the combination meter.

### Component Function Check

INFOID:000000005807833

#### 1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" for the "METER/M&A" and check the "PKB SW" monitor value.

"PKB SW"

Parking brake is applied : On

Parking brake is released : Off


>> INSPECTION END

### Diagnosis Procedure (A/T models)

INFOID:000000005807834

#### 1. CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check the voltage and waveform between combination meter harness connector terminal and ground.
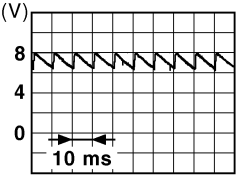
| Terminal  |          | (-)    | Condition              | Voltage<br>(Approx.)   |
|-----------|----------|--------|------------------------|--|
| (+)       |          |        |                        |  |
| Connector | Terminal |        |                        |  |
| M53       | 27       | Ground | Parking brake applied  | 0 V  |
|           |          |        | Parking brake released |  <p style="text-align: right; font-size: small;">JSNIA0007GB</p> |

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

#### 2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and parking brake switch connector.
3. Check continuity between combination meter harness connector terminal and parking brake switch harness connector terminal.

| Combination meter |          | Parking brake switch |          | Continuity |
|-------------------|----------|----------------------|----------|------------|
| Connector         | Terminal | Connector            | Terminal |            |
| M53               | 27       | E107                 | 1        | Existed    |

4. Check continuity between combination meter harness connector terminal and ground.

# PARKING BRAKE SWITCH SIGNAL CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

| Combination meter |          | Ground | Continuity  |
|-------------------|----------|--------|-------------|
| Connector         | Terminal |        |             |
| M53               | 27       |        | Not existed |

Is the inspection result normal?


- YES >> INSPECTION END  
 NO >> Repair harness or connector.

### Diagnosis Procedure (M/T models)

INFOID:000000005807835

#### 1. CHECK COMBINATION METER INPUT SIGNAL

- Turn ignition switch ON.
- Check the voltage and waveform between combination meter harness connector terminal and ground.
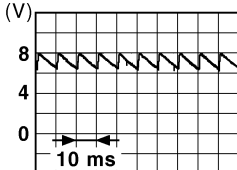
| Terminals |          | Condition              | Voltage (Approx.)   |
|-----------|----------|------------------------|---|
| (+)       |          |                        |   |
| Connector | Terminal |                        |   |
| M53       | 27       | Parking brake applied  | 0 V   |
|           |          | Parking brake released |  |

JSNIA0007GB

Is the inspection result normal?

- YES >> INSPECTION END  
 NO >> GO TO 2.

#### 2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect combination meter connector and parking brake switch connector.
- Check continuity between combination meter harness connector terminal and parking brake switch harness connector terminal.

| Combination meter |          | Parking brake switch |          | Continuity |
|-------------------|----------|----------------------|----------|------------|
| Connector         | Terminal | Connector            | Terminal |            |
| M53               | 27       | B14                  | 1        | Existed    |

- Check continuity between combination meter harness connector terminal and ground.

| Combination meter |          | Ground | Continuity  |
|-------------------|----------|--------|-------------|
| Connector         | Terminal |        |             |
| M53               | 27       |        | Not existed |

Is the inspection result normal?

- YES >> INSPECTION END  
 NO >> Repair harness or connector.

### Component Inspection

INFOID:000000005807836

#### 1. CHECK PARKING BRAKE SWITCH

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

## PARKING BRAKE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

---

Check parking brake switch. Refer to [BRC-71. "Component Inspection"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace parking brake switch.

# WASHER LEVEL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## WASHER LEVEL SWITCH SIGNAL CIRCUIT

### Description

INFOID:000000005807837

Transmits the washer level switch signal to the combination meter.

### Diagnosis Procedure

INFOID:000000005807838

#### 1. CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and washer level switch connector.
3. Check continuity between combination meter harness connector terminal and washer level switch harness connector terminal.

| Combination meter |          | Washer level switch |          | Continuity |
|-------------------|----------|---------------------|----------|------------|
| Connector         | Terminal | Connector           | Terminal |            |
| M53               | 31       | E32                 | 1        | Existed    |

4. Check continuity between combination meter harness connector terminal and ground.

| Combination meter |          | Ground | Continuity  |
|-------------------|----------|--------|-------------|
| Connector         | Terminal |        |             |
| M53               | 31       |        | Not existed |

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Repair harness or connector.

### Component Inspection

INFOID:000000005807839

#### 1. CHECK WASHER LEVEL SWITCH

1. Turn ignition switch OFF.
2. Disconnect washer level switch connector.
3. Check washer level switch.

| Terminal |   | Washer level switch | Continuity  |
|----------|---|---------------------|-------------|
| 1        | 2 | ON                  | Existed     |
|          |   | OFF                 | Not existed |

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace washer level switch. Refer to [WW-50, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI


# COMPASS

< DTC/CIRCUIT DIAGNOSIS >

## COMPASS

### Wiring Diagram - COMPASS -

INFOID:000000005807840

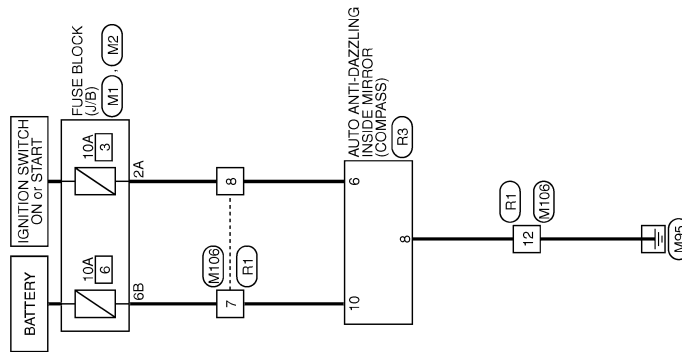

COMPASS

2009/11/05

JCNWM3854GI



# COMPASS

## < DTC/CIRCUIT DIAGNOSIS >

### COMPASS

|                |                  |
|----------------|------------------|
| Connector No.  | M1               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS8FW-MZ         |



|    |    |    |
|----|----|----|
| 3A | 2A | 1A |
| 8A | 7A | 6A |

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1A           | V             | -                           |
| 2A           | LG            | -                           |
| 3A           | L             | -                           |
| 4A           | SB            | -                           |
| 5A           | B             | -                           |
| 6A           | BR            | -                           |
| 7A           | R             | -                           |
| 8A           | L             | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | M2               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS10FW-CS        |



|     |    |    |    |
|-----|----|----|----|
| 4B  | 3B | 2B | 1B |
| 10B | 9B | 8B | 7B |

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1B           | SB            | -                           |
| 2B           | P             | -                           |
| 3B           | G             | -                           |
| 4B           | EG            | -                           |
| 5B           | Y             | -                           |
| 6B           | L             | -                           |
| 7B           | R             | -                           |
| 8B           | R             | -                           |
| 9B           | SB            | -                           |

|                |              |
|----------------|--------------|
| Connector No.  | M106         |
| Connector Name | WIRE TO WIRE |
| Connector Type | NH10MH-CS10  |



|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  |
| 7  | 8  | 9  | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 | 17 | 18 |
| 19 | 20 |    |    |    |    |

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | L             | -                           |
| 3            | SHIELD        | -                           |
| 4            | G             | -                           |
| 5            | BR            | -                           |
| 6            | P             | -                           |
| 7            | Y             | -                           |
| 8            | GR            | -                           |
| 9            | LG            | -                           |
| 10           | V             | -                           |
| 11           | P             | -                           |
| 12           | B             | -                           |
| 13           | P             | -                           |
| 14           | R             | -                           |
| 15           | R             | -                           |
| 16           | G             | -                           |
| 17           | SHIELD        | -                           |
| 18           | B             | -                           |
| 19           | SB            | -                           |
| 20           | R             | -                           |

|                |              |
|----------------|--------------|
| Connector No.  | R1           |
| Connector Name | WIRE TO WIRE |
| Connector Type | NH10PT-CS10  |



|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 6  | 5  | 4  | 3  | 2  | 1  |
| 20 | 19 | 18 | 17 | 16 | 15 |
| 14 | 13 | 12 | 11 | 10 | 9  |
| 8  | 7  |    |    |    |    |

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | L             | - [With 4WAS]               |
| 3            | GR            | - [Without 4WAS]            |
| 4            | G             | -                           |

|    |        |   |
|----|--------|---|
| 5  | BR     | - |
| 6  | Y      | - |
| 7  | G      | - |
| 8  | BR     | - |
| 9  | R      | - |
| 10 | V      | - |
| 11 | B      | - |
| 12 | B      | - |
| 13 | Y      | - |
| 14 | O      | - |
| 15 | O      | - |
| 16 | W      | - |
| 17 | SHIELD | - |
| 18 | B      | - |
| 19 | Y      | - |
| 20 | R      | - |

|                |                                  |
|----------------|----------------------------------|
| Connector No.  | R3                               |
| Connector Name | AUTO ANTI-DAZZLING INSIDE MIRROR |
| Connector Type | TH10FB-NH                        |



|    |   |   |   |   |
|----|---|---|---|---|
| 5  | 4 | 3 | 2 | 1 |
| 10 | 9 | 8 | 7 | 6 |

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6            | BR            | IGN                         |
| 8            | B             | GND                         |
| 10           | G             | BAT                         |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
MWI  
O  
P


# CLOCK

< DTC/CIRCUIT DIAGNOSIS >

## CLOCK

Wiring Diagram - CLOCK -

INFOID:000000005807841

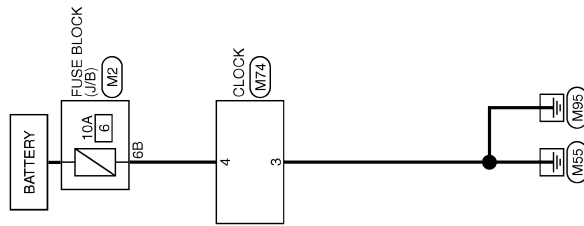

CLOCK

2008/08/22

JCNWM1761GI

# CLOCK

< DTC/CIRCUIT DIAGNOSIS >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


## CLOCK

|                |                  |
|----------------|------------------|
| Connector No.  | M2               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | MS10FW-CS        |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1B           | SB            | -                           |
| 3B           | P             | -                           |
| 4B           | G             | -                           |
| 5B           | BG            | -                           |
| 6B           | Y             | -                           |
| 7B           | L             | -                           |
| 8B           | R             | -                           |
| 9B           | SB            | -                           |

|                |           |
|----------------|-----------|
| Connector No.  | M74       |
| Connector Name | CLOCK     |
| Connector Type | TH04FW-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | ILLUMINATION (-)            |
| 2            | R             | ILLUMINATION (+)            |
| 3            | B             | GND                         |
| 4            | Y             | BAT                         |

JCNWM3856GI



# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

### COMBINATION METER


Reference Value

INFOID:000000005807842

VALUES ON THE DIAGNOSIS TOOL

Refer to [MWI-83. "Reference Value"](#).

TERMINAL LAYOUT




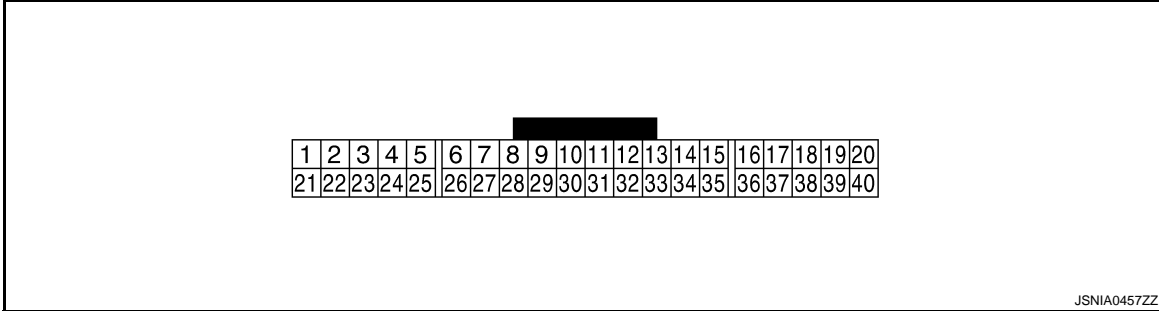


### PHYSICAL VALUES

| Terminal No.<br>(Wire color) |        | Description                           |                  | Condition                 |                           | Value<br>(Approx.) |
|------------------------------|--------|---------------------------------------|------------------|---------------------------|---------------------------|--------------------|
| +                            | -      | Signal name                           | Input/<br>Output |                           |                           |                    |
| 1<br>(V)                     | Ground | Battery power supply                  | Input            | Ignition<br>switch<br>OFF | —                         | Battery voltage    |
| 2<br>(LG)                    | Ground | Communication signal<br>(METER→ AMP.) | Output           | Ignition<br>switch<br>ON  | —                         | <br>JSNIA0027GB    |
| 3<br>(GR)                    | Ground | Communication signal<br>(AMP.→ METER) | Input            | Ignition<br>switch<br>ON  | —                         | <br>JSNIA0027GB    |
| 5<br>(B)                     | Ground | Ground                                | —                | Ignition<br>switch<br>ON  | —                         | 0 V                |
| 6<br>(W)                     | Ground | Alternator signal                     | Input            | Ignition<br>switch<br>ON  | Charge warning lamp ON    | 0 V                |
|                              |        |                                       |                  |                           | Charge warning lamp OFF   | 12 V               |
| 7<br>(LG)                    | Ground | Air bag signal                        | Input            | Ignition<br>switch<br>ON  | Air bag warning lamp ON   | 4 V                |
|                              |        |                                       |                  |                           | Air bag warning lamp OFF  | 0 V                |
| 10<br>(P)                    | Ground | Security signal                       | Input            | Ignition<br>switch<br>OFF | Security warning lamp ON  | 0 V                |
|                              |        |                                       |                  |                           | Security warning lamp OFF | 12 V               |

# COMBINATION METER

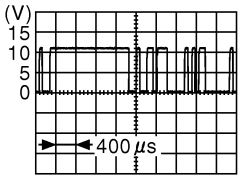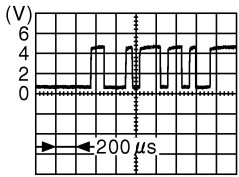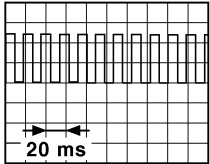
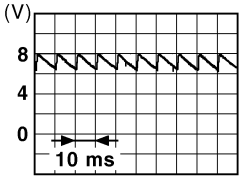




## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                         |                  | Condition                |   | Value<br>(Approx.)  |
|------------------------------|--------|-------------------------------------|------------------|--------------------------|---|---|
| +                            | -      | Signal name                         | Input/<br>Output |                          |   |   |
| 15<br>(B)                    | Ground | Ground                              | —                | Ignition<br>switch<br>ON | —   | 0 V   |
| 16<br>(W)                    | Ground | Meter control switch ground         | —                | Ignition<br>switch<br>ON | —   | 0 V   |
| 21<br>(GR)                   | Ground | Ignition signal                     | Input            | Ignition<br>switch<br>ON | —   | 12 V  |
| 22<br>(B)                    | Ground | Ground                              | —                | Ignition<br>switch<br>ON | —   | 0 V   |
| 24<br>(BR)                   | Ground | Communication signal<br>(LCD→ AMP.) | Output           | Ignition<br>switch<br>ON | —   | <br><small>JSNIA0028GB</small>   |
| 25<br>(Y)                    | Ground | Communication signal<br>(AMP.→ LCD) | Input            | Ignition<br>switch<br>ON | —   | <br><small>JSNIA0027GB</small>  |
| 26<br>(G)                    | Ground | Vehicle speed signal<br>(8-pulse)   | Input            | Ignition<br>switch<br>ON | Speedometer operated<br>[When vehicle speed is ap-<br>prox. 40 km/h (25 MPH)] | <p><b>NOTE:</b><br/>The maximum voltage varies de-<br/>pending on the specification<br/>(destination unit).</p> <br><small>JSNIA0012GB</small> |
| 27<br>(BG)                   | Ground | Parking brake switch signal         | Input            | Ignition<br>switch<br>ON | Parking brake applied   | 0 V   |
|                              |        |                                     |                  |                          | Parking brake released  | <br><small>JSNIA0007GB</small>   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
MWI  
O  
P

# COMBINATION METER
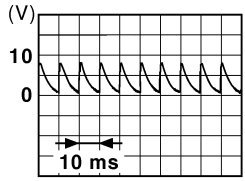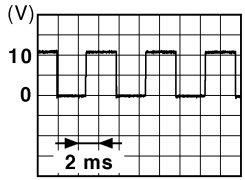
## < ECU DIAGNOSIS INFORMATION >


| Terminal No.<br>(Wire color) |           | Description                                     |                  | Condition          | Value<br>(Approx.)   |
|------------------------------|-----------|---|------------------|--------------------|--|
| +                            | -         | Signal name                                     | Input/<br>Output |                    |  |
| 28<br>(L)                    | Ground    | Brake fluid level switch signal                 | Input            | Ignition switch ON | Brake fluid level is normal.<br><br><small>JSNIA0008GB</small>  |
|                              |           |   |                  |                    | The brake fluid level is lower than the low level  |
| 29<br>(LG)                   | Ground    | Seat belt buckle switch signal (driver side)    | Input            | Ignition switch ON | When driver seat belt is fastened  |
|                              |           |   |                  |                    | When driver seat belt is unfastened  |
| 30<br>(G)                    | Ground    | Seat belt buckle switch signal (passenger side) | Input            | Ignition switch ON | <ul style="list-style-type: none"> <li>When getting in the passenger seat</li> <li>When passenger seat belt is fastened</li> </ul>   |
|                              |           |   |                  |                    | <ul style="list-style-type: none"> <li>When getting in the passenger seat</li> <li>When passenger seat belt is unfastened</li> </ul>   |
| 31<br>(L)                    | Ground    | Washer level switch signal                      | Input            | Ignition switch ON | Washer level switch ON   |
|                              |           |   |                  |                    | Washer level switch OFF  |
| 33<br>(R)                    | Ground    | Illumination control signal                     | Output           | Ignition switch ON | Lighting switch ON, then operate the illumination control switch.<br><br><small>JSNIA0010GB</small> |
| 36<br>(LG)                   | 16<br>(W) | Select switch signal                            | Input            | Ignition switch ON | When  is pressed  |
|                              |           |   |                  |                    | Other than the above   |
| 37<br>(SB)                   | 16<br>(W) | Enter switch signal                             | Input            | Ignition switch ON | When  is pressed  |
|                              |           |   |                  |                    | Other than the above   |
| 38<br>(L)                    | 16<br>(W) | Trip A/B reset switch signal                    | Input            | Ignition switch ON | When trip A/B reset switch is pressed  |
|                              |           |   |                  |                    | Other than the above   |
| 39<br>(P)                    | 16<br>(W) | Illumination control switch signal (-)          | Input            | Ignition switch ON | When  switch is pressed   |
|                              |           |   |                  |                    | Other than the above   |
| 40<br>(BG)                   | 16<br>(W) | Illumination control switch signal (+)          | Input            | Ignition switch ON | When  switch is pressed   |
|                              |           |   |                  |                    | Other than the above   |

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## Wiring Diagram - METER -

INFOID:000000005807843

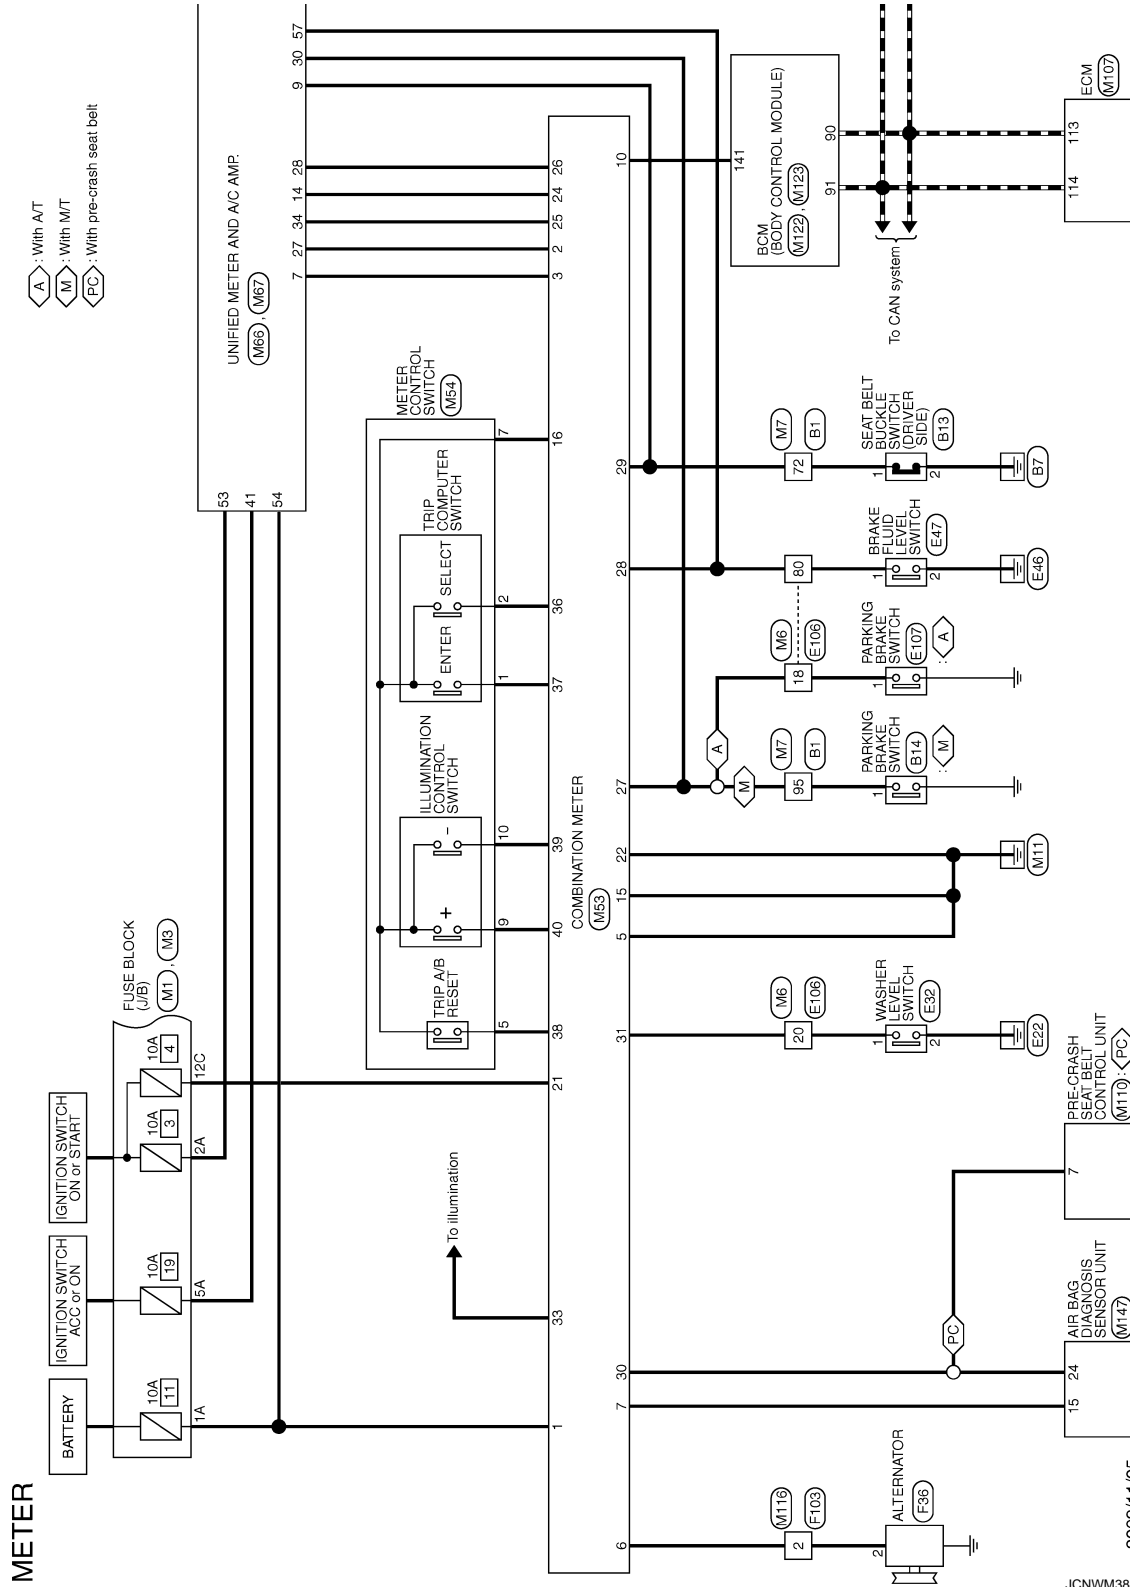

2009/11/05

JCNWM3843GI

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P




# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

- : With 4MAS
- : AWD models
- : With ICC
- : With A/T
- : With paddle shifter switch

\* : This connector is not shown in "Harness Layout".

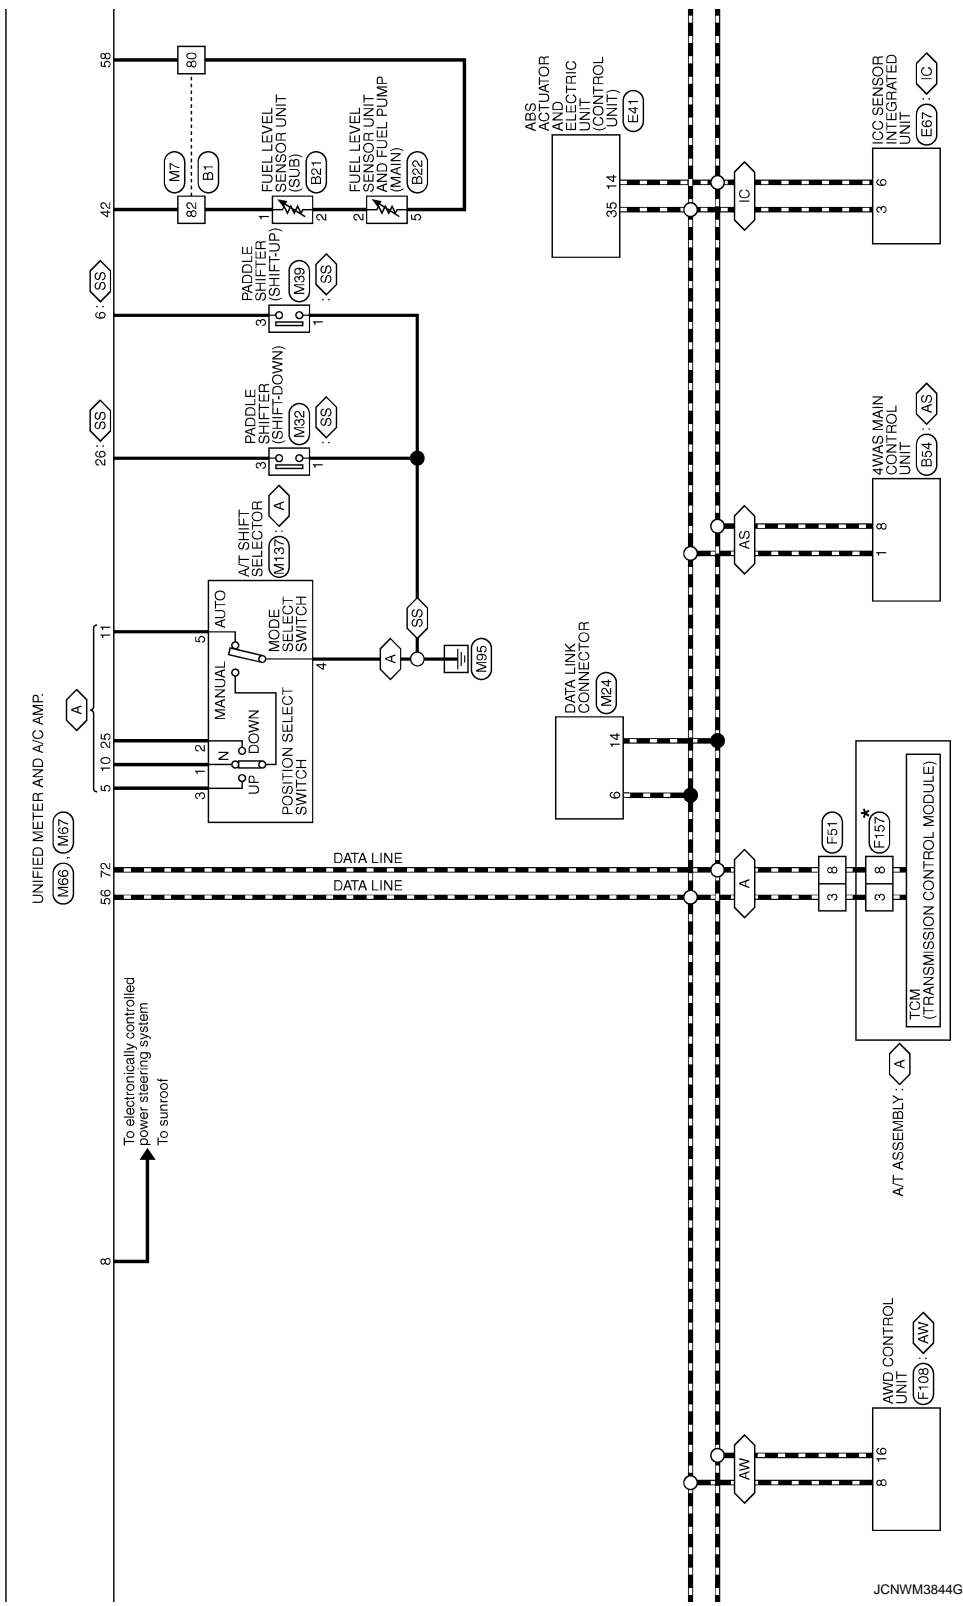

JCNWM3844G1






# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER

|                |                 |
|----------------|-----------------|
| Connector No.  | B1              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80FW-C516-TM4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BG            |                             |
| 2            | G             |                             |
| 3            | W             |                             |
| 5            | Y             |                             |
| 6            | SB            |                             |
| 7            | G             |                             |
| 8            | Y             |                             |
| 9            | GR            |                             |
| 10           | R             |                             |
| 14           | V             |                             |
| 15           | BR            |                             |
| 16           | LG            |                             |
| 17           | W             |                             |
| 20           | L             |                             |
| 21           | P             |                             |
| 22           | L             |                             |
| 23           | P             |                             |
| 31           | L             |                             |
| 32           | P             |                             |
| 33           | LG            |                             |
| 34           | Y             |                             |
| 35           | V             |                             |
| 36           | SB            |                             |
| 37           | SHIELD        |                             |
| 38           | W             |                             |
| 40           | BR            |                             |
| 41           | Y             |                             |
| 42           | SHIELD        |                             |
| 43           | P             |                             |
| 44           | L             |                             |
| 45           | SHIELD        |                             |
| 46           | R             |                             |
| 47           | G             |                             |
| 48           | SHIELD        |                             |
| 49           | SB            |                             |
| 51           | P             |                             |
| 52           | G             |                             |
| 53           | GR            |                             |

|                |                      |
|----------------|----------------------|
| Connector No.  | B14                  |
| Connector Name | PARKING BRAKE SWITCH |
| Connector Type | F01FB-A              |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | V             |                             |

|                |                              |
|----------------|------------------------------|
| Connector No.  | B21                          |
| Connector Name | FUEL LEVEL SENSOR UNIT (SUB) |
| Connector Type | E02FGY-RS                    |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             |                             |
| 2            | W             |                             |

|                |   |
|----------------|---|
| Connector No.  | B22   |
| Connector Name | FUEL LEVEL SENSOR UNIT AND FUEL PUMP (MAIN) |
| Connector Type | E02FGY-RS                                   |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | P             |                             |
| 2            | W             |                             |
| 3            | B             |                             |

|   |   |  |
|---|---|--|
| 4 | R |  |
| 5 | Y |  |

|                |                        |
|----------------|------------------------|
| Connector No.  | B54                    |
| Connector Name | 4WAS MAIN CONTROL UNIT |
| Connector Type | A30FW-M4               |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L             | CAN-H                       |
| 4            | BR            | R-ANG GND                   |
| 5            | W             | R-ANG YCG                   |
| 7            | R             | R-ANG SUP SIG               |
| 8            | P             | CAN-L                       |
| 15           | G             | R-ANG MAIN SIG              |
| 22           | GR            | STOP LAMP                   |
| 25           | SB            | R-MTR RLY                   |
| 27           | V             | IGN                         |
| 31           | BR            | CAN-H                       |
| 32           | Y             | CAN-L                       |
| 34           | B             | GND                         |
| 36           | LG            | P/S SOL                     |
| 37           | P             | R-MTR PWR SUPPLY            |
| 38           | Y             | R-MTR (RH)                  |
| 39           | G             | R-MTR (LH)                  |
| 40           | B             | R-MTR GND                   |

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER


|                |                 |
|----------------|-----------------|
| Connector No.  | E3              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | SA33MB-F32-SH2B |

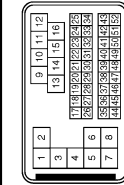

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L/Y           | -                           |
| 2            | SHIELD        | -                           |
| 3            | L/B           | -                           |
| 4            | SHIELD        | -                           |
| 5            | BR            | -                           |
| 7            | G             | -                           |
| 8            | W             | -                           |
| 9            | W             | -                           |
| 10           | Y             | -                           |
| 11           | P             | -                           |
| 12           | SB            | -                           |
| 13           | BR            | -                           |
| 14           | G             | -                           |
| 15           | R             | -                           |
| 16           | LG            | -                           |
| 17           | P             | -                           |
| 18           | Y             | -                           |
| 19           | EG            | -                           |
| 20           | B             | -                           |
| 21           | SB            | -                           |
| 22           | W             | -                           |
| 23           | L             | -                           |
| 24           | G             | -                           |
| 25           | V             | -                           |
| 27           | GR            | -                           |
| 28           | V             | -                           |
| 29           | P             | -                           |
| 30           | R             | -                           |
| 31           | BR            | -                           |
| 32           | Y             | -                           |
| 33           | G             | -                           |
| 34           | BG            | -                           |
| 37           | SHIELD        | -                           |
| 38           | L             | -                           |
| 39           | P             | -                           |
| 40           | R             | -                           |
| 41           | W             | -                           |
| 42           | LG            | -                           |


|    |        |   |
|----|--------|---|
| 43 | G      | - |
| 45 | BG     | - |
| 46 | SHIELD | - |
| 47 | W      | - |
| 48 | BR     | - |
| 49 | GR     | - |
| 50 | B      | - |
| 51 | SB     | - |
| 52 | R      | - |

|                |   |
|----------------|---|
| Connector No.  | E6  |
| Connector Name | IPM L/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) |
| Connector Type | TH08FW-NH   |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 39           | P             | -                           |
| 40           | L             | -                           |
| 41           | B/W           | -                           |
| 42           | Y             | -                           |
| 43           | SB            | -                           |
| 44           | LG            | -                           |
| 45           | G             | -                           |
| 46           | W             | -                           |

|                |   |
|----------------|---|
| Connector No.  | E7  |
| Connector Name | IPM L/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) |
| Connector Type | TH20FW-OS2-M4   |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 47           | BR            | -                           |
| 48           | BR            | -                           |
| 49           | BG            | -                           |
| 51           | Y             | -                           |


|    |    |   |
|----|----|---|
| 53 | W  | - |
| 54 | P  | - |
| 55 | SB | - |
| 56 | LG | - |
| 57 | G  | - |
| 58 | GR | - |
| 59 | BR | - |
| 70 | BG | - |
| 73 | P  | - |
| 74 | G  | - |
| 75 | SB | - |
| 76 | Y  | - |
| 77 | R  | - |
| 80 | W  | - |

|                |                     |
|----------------|---------------------|
| Connector No.  | E32                 |
| Connector Name | WASHER LEVEL SWITCH |
| Connector Type | Z32FBR              |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | LG            | -                           |
| 2            | B             | -                           |

|                |   |
|----------------|---|
| Connector No.  | E41   |
| Connector Name | ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) |
| Connector Type | BAA42FE-ANZ4-LH                               |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | GND                         |
| 2            | L             | UBMR                        |
| 3            | R             | UBVR                        |
| 4            | B             | GND                         |

|    |    |                |
|----|----|----------------|
| 5  | Y  | DS FL          |
| 6  | BG | DP RL          |
| 7  | BR | DP RR          |
| 9  | B  | DS FR          |
| 10 | W  | DS FR          |
| 11 | V  | DIAG-K         |
| 14 | P  | CAN-L          |
| 25 | Y  | BUS-L          |
| 26 | LG | DP FL          |
| 27 | GR | DS RL          |
| 28 | G  | UZ             |
| 29 | P  | DS RR          |
| 30 | SB | BLS            |
| 31 | R  | ESP OFF SWITCH |
| 35 | L  | CAN-H          |
| 45 | B  | BUS-H          |

|                |                          |
|----------------|--------------------------|
| Connector No.  | E47                      |
| Connector Name | BRAKE FLUID LEVEL SWITCH |
| Connector Type | YY02FGY                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | B             | -                           |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER

|                |                            |
|----------------|----------------------------|
| Connector No.  | E67                        |
| Connector Name | ICC SENSOR INTEGRATED UNIT |
| Connector Type | RS02FB-PR                  |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | R             | IGNITION                    |
| 2            | V             | BRAKE HOLD RLY DRIVE SIGNAL |
| 3            | L             | CAN-H                       |
| 4            | B             | GND                         |
| 6            | P             | CAN-L                       |

|                |                |
|----------------|----------------|
| Connector No.  | E76            |
| Connector Name | AMBIENT SENSOR |
| Connector Type | RS02FB         |




|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | G             | -                           |
| 2            | P             | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | E103             |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS16FW-CS        |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1F           | SB            | -                           |
| 2F           | V             | -                           |
| 4F           | G             | -                           |
| 6F           | BG            | -                           |
| 8F           | L             | -                           |
| 9F           | R             | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | E106            |
| Connector Name | WIRES TO WIRE   |
| Connector Type | TH80FW-CS16-TM4 |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | GR            | -                           |
| 3            | BG            | -                           |
| 5            | G             | -                           |
| 6            | BG            | -                           |
| 7            | LG            | -                           |
| 10           | W             | -                           |
| 11           | V             | -                           |
| 12           | R             | -                           |
| 13           | L             | -                           |
| 14           | GR            | -                           |
| 15           | P             | -                           |
| 16           | W             | -                           |
| 17           | V             | -                           |
| 18           | BG            | -                           |
| 19           | GR            | -                           |
| 20           | LG            | -                           |
| 30           | R             | -                           |
| 31           | L             | -                           |
| 32           | BG            | -                           |
| 33           | P             | -                           |
| 34           | V             | -                           |
| 35           | BR            | -                           |
| 36           | W             | -                           |
| 37           | Y             | -                           |
| 38           | R             | -                           |
| 39           | B             | -                           |
| 40           | G             | -                           |
| 41           | W             | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | E110             |
| Connector Name | STOP LAMP SWITCH |
| Connector Type | MM4FW-LC         |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | L             | -                           |
| 2            | V             | -                           |
| 3            | L             | -                           |
| 4            | SB            | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | E119             |
| Connector Name | STOP LAMP SWITCH |
| Connector Type | MM4FW-LC         |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | L             | -                           |
| 2            | V             | -                           |
| 3            | Y             | -                           |
| 4            | W             | -                           |

|     |        |   |
|-----|--------|---|
| 42  | LG     | - |
| 43  | SB     | - |
| 44  | GR     | - |
| 45  | BG     | - |
| 46  | LG     | - |
| 47  | V      | - |
| 48  | P      | - |
| 49  | L      | - |
| 59  | B      | - |
| 66  | LG     | - |
| 67  | SB     | - |
| 68  | R      | - |
| 69  | W      | - |
| 70  | G      | - |
| 80  | W      | - |
| 81  | P      | - |
| 82  | G      | - |
| 83  | V      | - |
| 84  | L      | - |
| 85  | BG     | - |
| 86  | LG     | - |
| 87  | Y      | - |
| 88  | GR     | - |
| 89  | W      | - |
| 91  | G      | - |
| 93  | GR     | - |
| 95  | Y      | - |
| 96  | Y      | - |
| 97  | BR     | - |
| 98  | SHIELD | - |
| 99  | L      | - |
| 100 | P      | - |

|                |                      |
|----------------|----------------------|
| Connector No.  | E107                 |
| Connector Name | PARKING BRAKE SWITCH |
| Connector Type | TB01FW               |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | BG            | -                           |

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER

| Connector No. | Color of Wire | Signal Name [Specification] |
|---------------|---------------|-----------------------------|
| 1             | L/Y           | -                           |
| 2             | SHIELD        | -                           |
| 3             | L/B           | -                           |
| 4             | SHIELD        | -                           |
| 5             | BR            | -                           |
| 7             | G             | -                           |
| 8             | W             | -                           |
| 9             | W             | -                           |
| 10            | G             | -                           |
| 11            | R             | -                           |
| 12            | P             | -                           |
| 13            | L             | -                           |
| 14            | LG            | -                           |
| 15            | R             | -                           |
| 16            | Y             | -                           |
| 17            | W             | -                           |
| 18            | LG            | -                           |
| 19            | P             | -                           |
| 20            | O             | -                           |
| 21            | BR            | -                           |
| 22            | G             | -                           |
| 23            | Y             | -                           |
| 24            | LG            | -                           |
| 25            | V             | -                           |
| 27            | GR            | -                           |
| 28            | BR            | -                           |
| 29            | L             | -                           |
| 30            | R             | -                           |
| 31            | P             | -                           |
| 32            | W             | -                           |
| 33            | SB            | -                           |
| 34            | O             | -                           |
| 37            | SHIELD        | -                           |
| 38            | W             | -                           |
| 39            | Y             | -                           |
| 40            | G             | -                           |
| 41            | B             | -                           |
| 42            | GR            | -                           |

| Connector No. | Color of Wire | Signal Name [Specification] |
|---------------|---------------|-----------------------------|
| 43            | R             | -                           |
| 45            | O             | -                           |
| 46            | SHIELD        | -                           |
| 47            | W/L           | -                           |
| 48            | LG            | -                           |
| 49            | O/L           | -                           |
| 50            | L/Y           | -                           |
| 51            | W             | -                           |
| 52            | L/G           | -                           |


| Connector No. | Color of Wire | Signal Name [Specification] |
|---------------|---------------|-----------------------------|
| F36           | -             | -                           |
| ALTERNATOR    | -             | -                           |
| HS00FB        | -             | -                           |

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | G             | L                           |
| 3            | V             | S                           |
| 4            | W             | C                           |

| Connector No.       | Color of Wire | Signal Name [Specification] |
|---------------------|---------------|-----------------------------|
| F37                 | -             | -                           |
| OIL PRESSURE SWITCH | -             | -                           |
| EQ1FGY-RS-AR        | -             | -                           |


| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BR            | -                           |

| Connector No. | Color of Wire | Signal Name [Specification] |
|---------------|---------------|-----------------------------|
| F51           | -             | -                           |
| A-7 ASSEMBLY  | -             | -                           |
| PK0FG-DGY     | -             | -                           |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | -                           |
| 2            | R             | -                           |
| 3            | L             | -                           |
| 4            | V             | -                           |
| 5            | B             | -                           |
| 6            | G             | -                           |
| 7            | R             | -                           |
| 8            | P             | -                           |
| 9            | GR            | -                           |
| 10           | B             | -                           |


| Connector No. | Color of Wire | Signal Name [Specification] |
|---------------|---------------|-----------------------------|
| F103          | -             | -                           |
| WIRE TO WIRE  | -             | -                           |
| TK3BFW-NS10   | -             | -                           |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | G             | -                           |
| 3            | W             | -                           |
| 4            | R             | -                           |
| 5            | B             | -                           |
| 9            | Y             | -                           |
| 10           | GR            | -                           |
| 19           | O             | -                           |
| 20           | Y             | -                           |
| 28           | B             | -                           |
| 29           | LG            | -                           |
| 30           | R             | -                           |
| 31           | R             | -                           |

| Connector No. | Color of Wire | Signal Name [Specification] |
|---------------|---------------|-----------------------------|
| 33            | B             | -                           |
| 34            | B             | -                           |
| 35            | L             | -                           |
| 36            | P             | -                           |
| 37            | Y             | -                           |
| 38            | G             | -                           |
| 41            | O             | -                           |
| 42            | BR            | -                           |
| 43            | P             | -                           |
| 44            | L             | -                           |
| 45            | G             | -                           |
| 46            | V             | -                           |

| Connector No.    | Color of Wire | Signal Name [Specification] |
|------------------|---------------|-----------------------------|
| F108             | -             | -                           |
| AWD CONTROL UNIT | -             | -                           |
| TH18FW-NH        | -             | -                           |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BR            | AWD SOL (+)                 |
| 2            | Y             | AWD SOL (-)                 |
| 3            | W             | OIL TEMP (-)                |
| 7            | G             | IGN                         |
| 8            | L             | CAN-H                       |
| 9            | O             | AWD SOL BAT                 |
| 10           | B             | GND                         |
| 11           | B             | GND                         |
| 13           | LG            | OIL TEMP (+)                |
| 15           | Y             | VB                          |
| 16           | P             | CAN-L                       |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER

|                |                                   |
|----------------|-----------------------------------|
| Connector No.  | F1B7                              |
| Connector Name | TOM (TRANSMISSION CONTROL MODULE) |
| Connector Type | SP10FG                            |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | VIGN                        |
| 2            | B             | BATT                        |
| 3            | R             | CAN-H                       |
| 4            | O             | K-LINE                      |
| 5            | G             | GND                         |
| 6            | GR            | VIGN                        |
| 7            | L             | REV LAMP RLY                |
| 8            | BR            | CAN-L                       |
| 9            | Y             | STARTER RLY                 |
| 10           | W/B           | GND                         |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1A           | Y             | -                           |
| 2A           | LG            | -                           |
| 3A           | L             | -                           |
| 4A           | SB            | -                           |
| 5A           | L             | -                           |
| 6A           | BR            | -                           |
| 7A           | R             | -                           |
| 8A           | L             | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | M2               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS1ZFW-CS        |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1B           | SB            | -                           |
| 3B           | P             | -                           |
| 4B           | G             | -                           |
| 5B           | BG            | -                           |
| 6B           | Y             | -                           |
| 7B           | L             | -                           |
| 8B           | R             | -                           |
| 9B           | SB            | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | M3               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS1ZFW-CS        |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6C           | V             | -                           |
| 7C           | B             | -                           |
| 8C           | W             | -                           |
| 9C           | BG            | -                           |
| 10C          | L             | -                           |
| 11C          | LG            | -                           |
| 12C          | GR            | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | M6              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH20MW-CS16-TM4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BG            | -                           |
| 3            | R             | -                           |
| 5            | G             | -                           |
| 6            | L             | -                           |
| 7            | W             | -                           |
| 10           | W             | -                           |
| 11           | V             | -                           |
| 12           | R             | -                           |
| 13           | L             | -                           |
| 14           | GR            | -                           |
| 15           | P             | -                           |
| 16           | W             | -                           |
| 17           | BR            | -                           |
| 18           | BG            | -                           |
| 19           | L             | -                           |
| 20           | L             | -                           |
| 30           | R             | -                           |
| 31           | SB            | -                           |
| 32           | Y             | -                           |
| 33           | BG            | -                           |
| 34           | R             | -                           |
| 35           | BR            | -                           |
| 36           | SB            | -                           |
| 37           | Y             | -                           |
| 38           | LG            | -                           |
| 39           | SB            | -                           |
| 40           | P             | -                           |
| 41           | W             | -                           |
| 42           | LG            | -                           |
| 43           | R             | -                           |
| 44           | Y             | - [With A/T]                |
| 44           | P             | - [With M/T]                |
| 45           | BG            | -                           |
| 46           | G             | -                           |
| 47           | V             | -                           |
| 48           | P             | -                           |
| 48           | L             | -                           |
| 59           | B             | -                           |

|     |        |   |
|-----|--------|---|
| 66  | GR     | - |
| 67  | P      | - |
| 68  | L      | - |
| 69  | W      | - |
| 70  | BR     | - |
| 80  | L      | - |
| 81  | R      | - |
| 82  | V      | - |
| 83  | W      | - |
| 84  | L      | - |
| 85  | BG     | - |
| 86  | W      | - |
| 87  | G      | - |
| 88  | B      | - |
| 89  | SB     | - |
| 91  | L      | - |
| 93  | L      | - |
| 95  | Y      | - |
| 96  | R      | - |
| 97  | P      | - |
| 98  | SHIELD | - |
| 99  | V      | - |
| 100 | SB     | - |

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


## METER

|                |                  |
|----------------|------------------|
| Connector No.  | M7               |
| Connector Name | WIRE TO WIRE     |
| Connector Type | TH80MW-CS(E-TM4) |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BG            | -                           |
| 2            | LG            | -                           |
| 3            | BG            | -                           |
| 4            | Y             | -                           |
| 5            | P             | -                           |
| 6            | G             | -                           |
| 7            | L             | -                           |
| 8            | V             | -                           |
| 9            | R             | -                           |
| 10           | R             | -                           |
| 11           | BR            | -                           |
| 12           | BR            | -                           |
| 13           | V             | -                           |
| 14           | L             | -                           |
| 15           | BR            | -                           |
| 16           | P             | -                           |
| 17           | V             | -                           |
| 18           | L             | -                           |
| 19           | P             | -                           |
| 20           | L             | -                           |
| 21           | P             | -                           |
| 22           | L             | -                           |
| 23           | P             | -                           |
| 24           | L             | -                           |
| 25           | P             | -                           |
| 26           | LG            | -                           |
| 27           | SHIELD        | -                           |
| 28           | GR            | -                           |
| 29           | BR            | -                           |
| 30           | Y             | -                           |
| 31           | SHIELD        | -                           |
| 32           | O             | -                           |
| 33           | W             | -                           |
| 34           | SHIELD        | -                           |
| 35           | R             | -                           |
| 36           | G             | -                           |
| 37           | SHIELD        | -                           |
| 38           | SB            | -                           |
| 39           | SB            | -                           |
| 40           | SB            | -                           |
| 41           | Y             | -                           |
| 42           | SHIELD        | -                           |
| 43           | O             | -                           |
| 44           | W             | -                           |
| 45           | SHIELD        | -                           |
| 46           | R             | -                           |
| 47           | G             | -                           |
| 48           | SHIELD        | -                           |
| 49           | SB            | -                           |
| 50           | SB            | -                           |
| 51           | W             | -                           |
| 52           | B             | -                           |
| 53           | SB            | -                           |

|                |                             |
|----------------|-----------------------------|
| Connector No.  | M32                         |
| Connector Name | PADDLE SHIFTER (SHIFT-DOWN) |
| Connector Type | A03FW                       |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | G             | -                           |
| 3            | G             | -                           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M39                       |
| Connector Name | PADDLE SHIFTER (SHIFT-UP) |
| Connector Type | A04FW                     |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | -                           |
| 2            | B             | -                           |
| 3            | BG            | -                           |


|                |                   |
|----------------|-------------------|
| Connector No.  | M53               |
| Connector Name | COMBINATION METER |
| Connector Type | SAB40FW           |



| Terminal No. | Color of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 1            | V             | BATTERY                           |
| 2            | LG            | COMMUNICATION SIGNAL (METER->AMP) |

| Terminal No. | Color of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 3            | GR            | COMMUNICATION SIGNAL (AMP->METER) |
| 4            | B             | GROUND                            |
| 5            | W             | ALTERNATOR SIGNAL                 |
| 6            | W             | ALTERNATOR SIGNAL                 |
| 7            | LG            | AIR BAG SECURITY                  |
| 8            | P             | GROUND                            |
| 9            | B             | GROUND                            |
| 10           | P             | GROUND                            |
| 11           | B             | METER CONTROL SWITCH GROUND       |
| 12           | W             | ILL. GND                          |
| 13           | GR            | ILL. GND                          |
| 14           | B             | ILL. GND                          |
| 15           | R             | ILL.                              |
| 16           | GR            | IGNITION POWER SUPPLY             |
| 17           | B             | GROUND                            |
| 18           | B             | COMMUNICATION SIGNAL (LCD->AMP)   |
| 19           | Y             | COMMUNICATION SIGNAL (AMP->LCD)   |
| 20           | G             | VEHICLE SPEED (8-PULSE)           |
| 21           | BG            | PARKING BRAKE SWITCH              |
| 22           | LG            | SEAT BELT BUCKLE SW (DRIVER SIDE) |
| 23           | LG            | SEAT BELT                         |
| 24           | G             | SEAT BELT                         |
| 25           | L             | WASHER LEVEL SWITCH               |
| 26           | R             | ILLUMINATION CONTROL              |
| 27           | SB            | SELECT SWITCH                     |
| 28           | SB            | ENTER SWITCH                      |
| 29           | L             | TRIP A/B RESET SWITCH             |
| 30           | P             | ILLUMINATION CONTROL SWITCH (-)   |
| 31           | BG            | ILLUMINATION CONTROL SWITCH (+)   |

|                |                      |
|----------------|----------------------|
| Connector No.  | M54                  |
| Connector Name | METER CONTROL SWITCH |
| Connector Type | TH12FW-NH            |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | SB            | -                           |
| 2            | LG            | -                           |
| 3            | B             | -                           |
| 4            | R             | -                           |
| 5            | L             | -                           |
| 6            | W             | -                           |
| 7            | W             | -                           |
| 8            | GR            | -                           |
| 9            | BG            | -                           |
| 10           | P             | -                           |

A B C D E F G H I J K L M N O P

MWI


JCNWM3851G1

# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >


### METER

|                |                            |
|----------------|----------------------------|
| Connector No.  | M66                        |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH42FV-NH                  |



| Terminal No. | Color of Wire | Signal Name [Specification]           |
|--------------|---------------|---------------------------------------|
| 4            | SB            | STOP LAMP SWITCH                      |
| 5            | L             | SHIFT UP                              |
| 6            | EG            | PADDLE UP                             |
| 7            | GR            | COMMUNICATION SIGNAL (AMP->METER)     |
| 8            | L             | VEHICLE SPEED (2-PULSE)               |
| 9            | SB            | SEAT BELT BUCKLE SWITCH (DRIVER SIDE) |
| 10           | W             | MANUAL MODE                           |
| 11           | G             | NON-MANUAL MODE                       |
| 14           | BR            | COMMUNICATION SIGNAL (LCD->AMP)       |
| 20           | G             | IGN ON / OFF SIGNAL                   |
| 23           | L             | AT SNOW SW                            |
| 25           | V             | SHIFT DOWN                            |
| 26           | G             | PADDLE DOWN                           |
| 27           | LG            | COMMUNICATION SIGNAL (METER->AMP)     |
| 28           | G             | VEHICLE SPEED (8-PULSE)               |
| 30           | EG            | PARKING BRAKE SWITCH                  |
| 34           | Y             | COMMUNICATION SIGNAL (AMP->LCD)       |
| 38           | P             | BLOWER MOTOR CONTROL SIGNAL           |


|                |                            |
|----------------|----------------------------|
| Connector No.  | M67                        |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH22FV-NH                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 41           | L             | ACC POWER SUPPLY            |
| 42           | BR            | FUEL LEVEL SENSOR SIGNAL    |
| 43           | V             | INTAKE SENSOR SIGNAL        |
| 44           | LG            | IN-VEHICLE SENSOR SIGNAL    |

|    |    |                                |
|----|----|--------------------------------|
| 45 | V  | AMBIENT SENSOR SIGNAL          |
| 46 | GR | SUNLOAD SENSOR SIGNAL          |
| 47 | W  | GAS SENSOR SIGNAL              |
| 52 | C  | IGNITION POWER SUPPLY          |
| 54 | Y  | BATTERY POWER SUPPLY           |
| 55 | B  | GROUND                         |
| 56 | L  | CAN-H                          |
| 57 | LG | BRAKE FLUID LEVEL SWITCH       |
| 58 | P  | FUEL LEVEL SENSOR GROUND       |
| 59 | Y  | INTAKE SENSOR GROUND           |
| 60 | W  | IN-VEHICLE SENSOR GROUND       |
| 61 | R  | AMBIENT SENSOR GROUND          |
| 62 | SB | SUNLOAD SENSOR GROUND          |
| 63 | L  | IGN CONTROL MODE OUTPUT SIGNAL |
| 65 | EG | ECV SIGNAL                     |
| 69 | P  | A/C LAN SIGNAL                 |
| 70 | R  | EACH DOOR MOTOR POWER SUPPLY   |
| 71 | GR | GROUND                         |
| 72 | P  | CAN-L                          |


|                |                   |
|----------------|-------------------|
| Connector No.  | M107              |
| Connector Name | ECM               |
| Connector Type | RH22FY-RZ6-R-LH-Z |

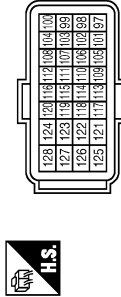

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 97           | R             | APS 1                       |
| 98           | P             | APS 2                       |
| 99           | L             | AVCC-T-APS 1                |
| 100          | W             | GND-APS 1                   |
| 101          | SB            | ASCSW                       |
| 102          | W             | FIPRS                       |
| 103          | GR            | AVCC-Z-APS 2                |
| 104          | V             | GND-APS 2                   |
| 105          | L             | PDPRES                      |
| 106          | W             | TF                          |
| 107          | BG            | AVCC-PDPRES                 |
| 108          | Y             | GND ASCDSW                  |
| 109          | G             | NEUT-H                      |
| 110          | R             | TACHO                       |
| 112          | L             | GND- PDPRES                 |
| 113          | P             | VEHCAN-L                    |
| 114          | L             | VEHCAN-H                    |


|     |    |       |
|-----|----|-------|
| 117 | V  | KLINE |
| 121 | LG | ODCV  |
| 122 | P  | BRAKE |
| 123 | B  | GND   |
| 124 | B  | GND   |
| 125 | R  | VEH   |
| 126 | BR | ENCSW |
| 127 | B  | GND   |
| 128 | B  | GND   |

|                |                                  |
|----------------|----------------------------------|
| Connector No.  | M110                             |
| Connector Name | PRE-CRASH SEAT BELT CONTROL UNIT |
| Connector Type | TH20FW-TB6                       |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | MOTOR (RH) (RELEASE)        |
| 2            | W             | +                           |
| 3            | R             | MOTOR (RH) (FASTEN)         |
| 4            | Y             | MOTOR (LH) (FASTEN)         |
| 5            | W             | GND (DRIVE)                 |
| 6            | R             | MOTOR (LH) (RELEASE)        |
| 7            | Y             | INDICATOR                   |
| 8            | LG            | BUCKLE SW RH                |
| 10           | SB            | BUCKLE SW LH                |
| 13           | W             | IGN                         |
| 16           | W             | SENS OUTPUT 1               |
| 18           | L             | SENS POWER                  |
| 20           | BR            | SENS OUTPUT 2               |
| 21           | B             | SENS GND                    |
| 22           | P             | CAN-L                       |
| 24           | L             | CAN-H                       |
| 28           | B             | GND (CONT)                  |

|                |              |
|----------------|--------------|
| Connector No.  | M116         |
| Connector Name | WIRE TO WIRE |
| Connector Type | TK26MF-NS10  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | W             | -                           |
| 3            | BG            | -                           |
| 4            | P             | -                           |
| 5            | B             | -                           |
| 9            | R             | -                           |
| 10           | R             | -                           |
| 19           | EG            | -                           |
| 20           | Y             | -                           |
| 28           | B             | -                           |
| 29           | LG            | -                           |
| 30           | BR            | -                           |
| 31           | W             | -                           |
| 33           | B             | -                           |
| 34           | B             | -                           |
| 35           | L             | -                           |
| 36           | P             | -                           |
| 37           | V             | -                           |
| 38           | SB            | -                           |
| 41           | BG            | -                           |
| 42           | G             | -                           |
| 43           | P             | -                           |
| 44           | L             | -                           |
| 45           | Y             | -                           |
| 46           | V             | -                           |




# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


## METER

|                |                           |
|----------------|---------------------------|
| Connector No.  | M122                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH4CFB-NH                 |




| Terminal No. | Color of Wire | Signal Name [Specification]              |
|--------------|---------------|--|
| 72           | R             | ROOM ANT 2-                              |
| 73           | G             | ROOM ANT 2+                              |
| 74           | SB            | PASSENGER DOOR ANT-                      |
| 75           | BR            | PASSENGER DOOR ANT+                      |
| 76           | V             | DRIVER DOOR ANT-                         |
| 77           | LG            | DRIVER DOOR ANT+                         |
| 78           | Y             | ROOM ANT 1-                              |
| 79           | BR            | ROOM ANT 1+                              |
| 80           | GR            | NATS ANT AMP                             |
| 81           | W             | NATS ANT AMP                             |
| 82           | V             | IGN RELAY (F/B) CONT                     |
| 83           | Y             | KEYLESS ENTRY RECEIVER COMM              |
| 87           | Y             | COMBI SW INPUT 5                         |
| 88           | GR            | COMBI SW INPUT 3                         |
| 89           | BR            | PUSH SW                                  |
| 90           | P             | CAN-L                                    |
| 91           | L             | CAN-H                                    |
| 92           | LG            | KEY SLOT ILL                             |
| 93           | GR            | ON IND                                   |
| 95           | BG            | ACC RELAY CONT                           |
| 96           | GR            | A/T SHIFT SELECTOR POWER SUPPLY          |
| 97           | L             | S/L CONDITION 1                          |
| 98           | BG            | S/L CONDITION 2                          |
| 99           | P             | SHIFT P (MTR A/T)                        |
| 99           | R             | ICC CLUTCH SW (M/T models with ICC)      |
| 99           | R             | ASC/D CLUTCH SW (M/T models without ICC) |
| 100          | Y             | PASSENGER DOOR REQUEST SW                |
| 101          | R             | DRIVER DOOR REQUEST SW                   |
| 102          | BG            | BLOWER FAN MOTOR RELAY CONT              |
| 103          | LG            | KEYLESS ENTRY RECEIVER POWER SUPPLY      |
| 106          | W             | S/L UNIT POWER SUPPLY                    |
| 107          | LG            | COMBI SW INPUT 1                         |
| 108          | R             | COMBI SW INPUT 4                         |
| 109          | W             | COMBI SW INPUT 2                         |
| 110          | G             | HAZARD SW                                |
| 111          | Y             | S/L UNIT COMM                            |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M123                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH4CFG-NH                 |




| Terminal No. | Color of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 112          | R             | RAIN SENSOR SERIAL LINK           |
| 113          | BG            | OPTICAL SENSOR                    |
| 114          | P             | CLUTCH INTERLOCK SW               |
| 116          | SR            | STOP LAMP SW 1                    |
| 118          | BR            | STOP LAMP SW 2                    |
| 119          | SB            | DR DOOR UNLOCK SENSOR             |
| 121          | G             | KEY SLOT SW                       |
| 121          | G             | IGN F/B                           |
| 124          | LG            | PASSENGER DOOR SW                 |
| 129          | Y             | TRUNK LID OPENER CANCEL SW        |
| 132          | V             | POWER WINDOW SW COMM              |
| 133          | L             | PUSH-BUTTON IGNITION SW ILL POWER |
| 134          | R             | LOCK IND                          |
| 137          | BG            | RECEIVER / SENSOR GND             |
| 138          | V             | RECEIVER / SENSOR POWER SUPPLY    |
| 139          | L             | TIRE PRESSURE RECEIVER COMM       |
| 140          | Y             | SHIFT N/P                         |
| 141          | P             | SECURITY INDICATOR                |
| 142          | LG            | COMBI SW OUTPUT 5                 |
| 143          | V             | COMBI SW OUTPUT 1                 |
| 144          | G             | COMBI SW OUTPUT 2                 |
| 145          | L             | COMBI SW OUTPUT 3                 |
| 146          | SB            | COMBI SW OUTPUT 4                 |
| 149          | W             | TIRE PRESSURE WARN CHECK SW       |
| 150          | R             | DRIVER DOOR SW                    |
| 151          | G             | REAR WINDOW DEFROGGER RELAY CONT  |

|                |                    |
|----------------|--------------------|
| Connector No.  | M137               |
| Connector Name | A/T SHIFT SELECTOR |
| Connector Type | TH12FN-NH          |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | V             | -                           |
| 3            | L             | -                           |
| 4            | BR            | -                           |
| 5            | G             | -                           |
| 7            | Y             | -                           |
| 8            | SB            | -                           |
| 9            | B             | -                           |
| 10           | GR            | -                           |
| 11           | P             | -                           |

|                |                               |
|----------------|-------------------------------|
| Connector No.  | M147                          |
| Connector Name | AIR BAG DIAGNOSIS SENSOR UNIT |
| Connector Type | TK28FY-EX-SC                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | LG            | IGN                         |
| 2            | B             | GND                         |
| 3            | Y             | DR1 (+)                     |
| 4            | Y             | DR 1 (-) DR 2 (-)           |
| 5            | Y             | AS1 (+)                     |
| 6            | Y             | AS1 (-)                     |
| 11           | SB            | EC2S (+)                    |
| 12           | V             | EC2S (-)                    |
| 15           | LG            | AIR BAG W/L                 |
| 16           | SHIELD        | GND                         |
| 18           | R             | CUTOFF TELLTALE             |
| 21           | L             | CAN+H                       |

|    |   |           |
|----|---|-----------|
| 24 | G | SEAT BELT |
| 45 | Y | DR 2 (+)  |
| 46 | P | CAN-L     |
| 47 | Y | AS 2 (+)  |
| 48 | Y | AS 2 (-)  |
| 49 | L | ODS INPUT |

## Fail-safe

### FAIL SAFE

Combination meter performs fail-safe operation when unified meter and A/C amp. communication is malfunction.

Solution for communication error between the unified meter and A/C amp. and combination meter.

JCNWM3853G1

INFOID:000000005807844

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

| Function                      |                                | Specifications   |
|-------------------------------|--------------------------------|--|
| Speedometer                   |                                | Reset to zero by suspending communication.               |
| Tachometer                    |                                |  |
| Fuel gauge                    |                                |  |
| Water temperature gauge       |                                |  |
| Illumination control          |                                | When suspending communication, change to nighttime mode. |
| Information display           |                                | The display turns off by suspending communication.       |
| Buzzer                        |                                | The buzzer turns off by suspending communication.        |
| Warning lamp/indicator lamp   | ABS warning lamp               | The lamp turns on by suspending communication.           |
|                               | VDC OFF indicator lamp         |  |
|                               | SLIP indicator lamp            |  |
|                               | Brake warning lamp             |  |
|                               | CRUISE warning lamp            |  |
|                               | Malfunction indicator lamp     |  |
|                               | High beam indicator            | The lamp turns off by suspending communication.          |
|                               | Turn signal indicator lamp     |  |
|                               | Oil pressure warning lamp      |  |
|                               | A/T CHECK warning lamp         |  |
|                               | Low tire pressure warning lamp |  |
|                               | Key warning lamp               |  |
|                               | AFS OFF indicator lamp         |  |
|                               | 4WAS warning lamp              |  |
|                               | Master warning lamp            |  |
|                               | AWD warning lamp               |  |
|                               | Tail lamp indicator lamp       |  |
| Front fog lamp indicator lamp |                                |  |

## DTC Index

INFOID:000000005807845

Refer to [MWI-101, "DTC Index"](#).

# UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

## UNIFIED METER AND A/C AMP.

### Reference Value

INFOID:000000005807846

### VALUES ON THE DIAGNOSIS TOOL

#### CONSULT-III MONITOR ITEM

| Monitor Item           | Condition             |  | Value/Status  |
|------------------------|-----------------------|--|---|
| SPEED METER<br>[km/h]  | Ignition switch<br>ON | While driving  | Equivalent to speedometer reading<br><b>NOTE:</b><br>655.35 is displayed when the malfunction signal is received        |
| SPEED OUTPUT<br>[km/h] | Ignition switch<br>ON | While driving  | Equivalent to speedometer reading<br><b>NOTE:</b><br>655.35 is displayed when the malfunction signal is received        |
| ODO OUTPUT<br>[km]     | Ignition switch<br>ON | —  | Equivalent to odometer reading in combination meter   |
| TACHO METER<br>[rpm]   | Ignition switch<br>ON | While driving  | Equivalent to tachometer reading<br><b>NOTE:</b><br>8191.875 is displayed when the malfunction signal is received       |
| FUEL METER<br>[L]      | Ignition switch<br>ON | —  | Values according to fuel level  |
| W TEMP METER<br>[°C]   | Ignition switch<br>ON | —  | Values according to engine coolant temperature<br><b>NOTE:</b><br>215 is displayed when the malfunction signal is input |
| ABS W/L                | Ignition switch<br>ON | ABS warning lamp ON  | On  |
|                        |                       | ABS warning lamp OFF   | Off   |
| VDC/TCS IND            | Ignition switch<br>ON | VDC OFF indicator lamp ON  | On  |
|                        |                       | VDC OFF indicator lamp OFF                                       | Off   |
| SLIP IND               | Ignition switch<br>ON | SLIP indicator lamp ON   | On  |
|                        |                       | SLIP indicator lamp OFF  | Off   |
| BRAKE W/L              | Ignition switch<br>ON | Blake warning lamp ON  | On  |
|                        |                       | Blake warning lamp OFF   | Off   |
| DOOR W/L               | Ignition switch<br>ON | Door warning displayed   | On  |
|                        |                       | Door warning not displayed                                       | Off   |
| TRUNK/GLAS-H           | Ignition switch<br>ON | Trunk warning displayed  | On  |
|                        |                       | Trunk warning not displayed                                      | Off   |
| HI-BEAM IND            | Ignition switch<br>ON | Hi-beam indicator lamp ON  | On  |
|                        |                       | Hi-beam indicator lamp OFF                                       | Off   |
| TURN IND               | Ignition switch<br>ON | Turn indicator lamp ON   | On  |
|                        |                       | Turn indicator lamp OFF  | Off   |
| FR FOG IND             | Ignition switch<br>ON | Front fog lamp indicator lamp ON                                 | On  |
|                        |                       | Front fog lamp indicator lamp OFF                                | Off   |
| RR FOG IND             | Ignition switch<br>ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off   |
| LIGHT IND              | Ignition switch<br>ON | Tail lamp indicator lamp ON                                      | On  |
|                        |                       | Tail lamp indicator lamp OFF                                     | Off   |

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

## UNIFIED METER AND A/C AMP.

### < ECU DIAGNOSIS INFORMATION >

| Monitor Item  | Condition          |  | Value/Status |
|---------------|--------------------|--|--------------|
| OIL W/L       | Ignition switch ON | Oil pressure warning lamp ON                                     | On           |
|               |                    | Oil pressure warning lamp OFF                                    | Off          |
| MIL           | Ignition switch ON | Malfunction warning lamp ON                                      | On           |
|               |                    | Malfunction warning lamp OFF                                     | Off          |
| GLOW IND      | Ignition switch ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off          |
| C-ENG2 W/L    | Ignition switch ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off          |
| CRUISE IND    | Ignition switch ON | Cruise indicator displayed                                       | On           |
|               |                    | Cruise indicator not displayed                                   | Off          |
| SET IND       | Ignition switch ON | Set indicator lamp ON  | On           |
|               |                    | Set indicator lamp OFF   | Off          |
| CRUISE W/L    | Ignition switch ON | Cruise warning lamp ON   | On           |
|               |                    | Cruise warning lamp OFF  | Off          |
| BA W/L        | Ignition switch ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off          |
| ATC/T-AMT W/L | Ignition switch ON | A/T check warning lamp ON  | On           |
|               |                    | A/T check warning lamp OFF                                       | Off          |
| 4WD W/L       | Ignition switch ON | AWD warning lamp ON  | On           |
|               |                    | AWD warning lamp OFF   | Off          |
| 4WD LOCK IND  | Ignition switch ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off          |
| FUEL W/L      | Ignition switch ON | Low-fuel warning lamp displayed                                  | On           |
|               |                    | Low-fuel warning lamp not displayed                              | Off          |
| WASHER W/L    | Ignition switch ON | Washer warning displayed   | On           |
|               |                    | Washer warning not displayed                                     | Off          |
| AIR PRES W/L  | Ignition switch ON | Low tire pressure lamp ON  | On           |
|               |                    | Low tire pressure lamp OFF                                       | Off          |
| KEY G/Y W/L   | Ignition switch ON | Key warning lamp ON  | On           |
|               |                    | Key warning lamp OFF   | Off          |
| AFS OFF IND   | Ignition switch ON | AFS OFF indicator lamp ON  | On           |
|               |                    | AFS OFF indicator lamp OFF                                       | Off          |
| 4WAS/RAS W/L  | Ignition switch ON | 4WAS warning lamp ON   | On           |
|               |                    | 4WAS warning lamp OFF  | Off          |
| DDS W/L       | Ignition switch ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off          |
| LANE W/L      | Ignition switch ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off          |
| LDP IND       | Ignition switch ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off          |

## UNIFIED METER AND A/C AMP.

### < ECU DIAGNOSIS INFORMATION >

| Monitor Item                        | Condition                                  |  | Value/Status  |     |
|-------------------------------------|--|--|---------------|-----|
| LCD                                 | Ignition switch ON                         | Engine start information display (A/T model)                     | B&P I         | A   |
|                                     |  | Engine start information display (M/T model)                     | C&P I         |     |
|                                     | Ignition switch ACC                        | Engine start information display (A/T model)                     | B&P N         | B   |
|                                     |  | Engine start information display (M/T model)                     | C&P N         |     |
|                                     | Ignition switch LOCK                       | Key ID warning display   | ID NG         | C   |
|                                     | Ignition switch LOCK                       | Steering lock information display                                | ROTAT         |     |
|                                     | Ignition switch LOCK                       | P position warning display                                       | SFT P         | D   |
|                                     | Ignition switch LOCK                       | Intelligent Key insert information display                       | INSRT         | E   |
|                                     | Ignition switch LOCK                       | Intelligent Key low battery warning display                      | BATT          |     |
|                                     | Ignition switch ON                         | Take away warning display  | NO KY         | F   |
|                                     | Ignition switch LOCK                       | Key warning display  | OUTKY         | G   |
| Ignition switch ON                  | ICC sensor integrated unit warning display | LK WN  |               |     |
| ACC TARGET                          | Ignition switch ON                         | Vehicle ahead detection indicator displayed                      | On            | H   |
|                                     |  | Vehicle ahead detection indicator not displayed                  | Off           |     |
| ACC DISTANCE                        | Ignition switch ON                         | When following distance set to "LONG"                            | LONG          | I   |
|                                     |  | When following distance set to "MIDDLE"                          | MID           |     |
|                                     |  | When following distance set to "SHORT"                           | SHORT         | J   |
|                                     |  | Set distance indicator not displayed                             | Off           |     |
| ACC OWN VHL                         | Ignition switch ON                         | Own vehicle indicator displayed                                  | On            |     |
|                                     |  | Own vehicle indicator not displayed                              | Off           | K   |
| ACC SET SPEED                       | Ignition switch ON                         | ICC set vehicle speed display                                    | Vehicle speed |     |
| ACC UNIT                            | Ignition switch ON                         | Set vehicle speed indicator unit display ON                      | On            | L   |
|                                     |  | Set vehicle speed indicator unit display OFF                     | Off           |     |
| O/D OFF SW                          | Ignition switch ON                         | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off           | M   |
| SHIFT IND                           | Ignition switch ON                         | Shift position indicator P display                               | P             | MWI |
|                                     |  | Shift position indicator R display                               | R             |     |
|                                     |  | Shift position indicator N display                               | N             |     |
|                                     |  | Shift position indicator D display                               | D             | O   |
|                                     |  | Shift position indicator M1 display                              | M1            |     |
|                                     |  | Shift position indicator M2 display                              | M2            |     |
|                                     |  | Shift position indicator M3 display                              | M3            | P   |
|                                     |  | Shift position indicator M4 display                              | M4            |     |
|                                     |  | Shift position indicator M5 display                              | M5            |     |
|                                     |  | Shift position indicator M6 display                              | M6            |     |
| Shift position indicator M7 display | M7   |  |               |     |

## UNIFIED METER AND A/C AMP.

### < ECU DIAGNOSIS INFORMATION >

| Monitor Item              | Condition          |  | Value/Status  |
|---------------------------|--------------------|--|---|
| AT S MODE SW              | Ignition switch ON | Snow mode switch ON  | On  |
|                           |                    | Snow mode switch OFF   | Off   |
| AT P MODE SW              | Ignition switch ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off   |
| M RANGE SW                | Ignition switch ON | Selector lever DS position                                       | On  |
|                           |                    | Other than the above   | Off   |
| NM RANGE SW               | Ignition switch ON | Selector lever DS position                                       | Off   |
|                           |                    | Other than the above   | On  |
| AT SFT UP SW              | Ignition switch ON | Selector lever up position                                       | On  |
|                           |                    | Other than the above   | Off   |
| AT SFT DWN SW             | Ignition switch ON | Selector lever – position  | On  |
|                           |                    | Other than the above   | Off   |
| ST SFT UP SW              | Ignition switch ON | Paddle shifter up operation                                      | On  |
|                           |                    | Other than the above   | Off   |
| ST SFT DWN SW             | Ignition switch ON | Paddle shifter down operation                                    | On  |
|                           |                    | Other than the above   | Off   |
| COMP F/B SIG              | Ignition switch ON | A/C compressor activation condition                              | On  |
|                           |                    | A/C compressor deactivation condition                            | Off   |
| 4WD LOCK SW               | Ignition switch ON | <b>NOTE:</b><br>This item is displayed, but cannot be monitored. | Off   |
| PKB SW                    | Ignition switch ON | Parking brake applied  | On  |
|                           |                    | Parking brake released   | Off   |
| BUCKLE SW                 | Ignition switch ON | Seat belt (driver side) unfastened                               | On  |
|                           |                    | Seat belt (driver side) fastened                                 | Off   |
| BRAKE OIL SW              | Ignition switch ON | Brake fluid level is lower than the low level                    | On  |
|                           |                    | Brake fluid level is normal                                      | Off   |
| DISTANCE [km]             | Ignition switch ON | —  | Possible driving distance calculated by unified meter and A/C amp.  |
| OUTSIDE TEMP [°C] or [°F] | Ignition switch ON | —  | Equivalent to ambient temperature<br><b>NOTE:</b><br>This may not match the indicated value on the information display. |
| FUEL LOW SIG              | Ignition switch ON | Low-fuel warning signal output                                   | On  |
|                           |                    | Low-fuel warning signal not output                               | Off   |
| BUZZER                    | Ignition switch ON | Buzzer ON  | On  |
|                           |                    | Buzzer OFF   | Off   |


**NOTE:**

Some items are not available according to vehicle specification.

### TERMINAL LAYOUT

# UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

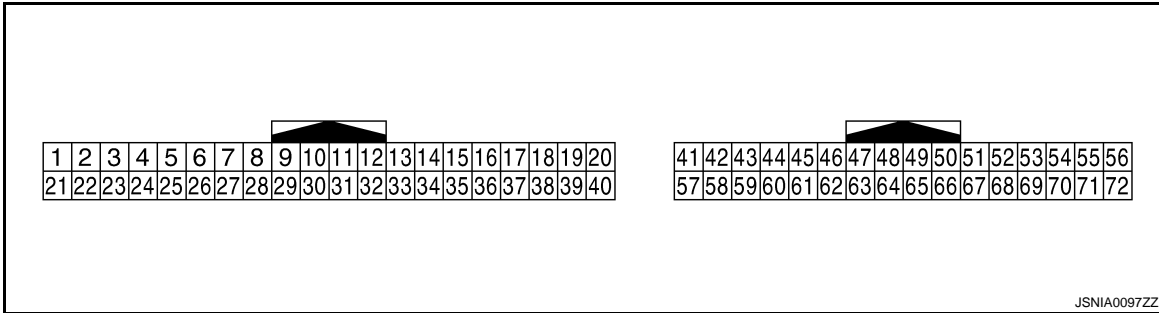

JSNIA0097ZZ

## PHYSICAL VALUES






| Terminal No.<br>(Wire color) |        | Description                                  |                  | Condition           |  | Value<br>(Approx.)  |
|------------------------------|--------|--|------------------|---------------------|--|---|
| +                            | -      | Signal name                                  | Input/<br>Output |                     |  |   |
| 4<br>(SB)                    | Ground | Stop lamp switch signal                      | Input            | Ignition switch OFF | Brake pedal is depressed   | 12 V  |
|                              |        |  |                  |                     | Other than the above   | 0 V   |
| 5<br>(L)                     | Ground | Manual mode shift up signal                  | Input            | Ignition switch ON  | Selector lever up position   | 0 V   |
|                              |        |  |                  |                     | Other than the above   | 12 V  |
| 6<br>(BG)                    | Ground | Paddle shifter up signal                     | Input            | Ignition switch ON  | Paddle shifter up operation  | 0 V   |
|                              |        |  |                  |                     | Other than the above   | 12 V  |
| 7<br>(GR)                    | Ground | Communication signal<br>(AMP. → METER)       | Output           | Ignition switch ON  | —  | <p style="text-align: right; font-size: small;">SKIA3362E</p>   |
| 8<br>(L)                     | Ground | Vehicle speed signal output<br>(2-pulse)     | Output           | Ignition switch ON  | Speedometer operated<br>[When vehicle speed is approx. 40 km/h (25 MPH)] | <p><b>NOTE:</b><br/>The maximum voltage varies depending on the specification (destination unit).</p> <p style="text-align: right; font-size: small;">JSNIA0015GB</p> |
| 9<br>(SB)                    | Ground | Seat belt buckle switch signal (driver side) | Input            | Ignition switch ON  | When seat belt (driver side) is fastened                                 | 12 V  |
|                              |        |  |                  |                     | When seat belt (driver side) is unfastened                               | 0 V   |
| 10<br>(W)                    | Ground | Manual mode signal                           | Input            | Ignition switch ON  | Selector lever DS position   | 0 V   |
|                              |        |  |                  |                     | Other than the above   | 12 V  |
| 11<br>(G)                    | Ground | Not manual mode signal                       | Input            | Ignition switch ON  | Selector lever DS position   | 12 V  |
|                              |        |  |                  |                     | Other than the above   | 0 V   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

# UNIFIED METER AND A/C AMP.




## < ECU DIAGNOSIS INFORMATION >
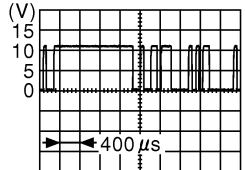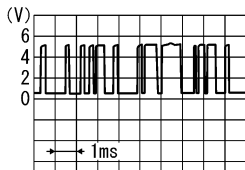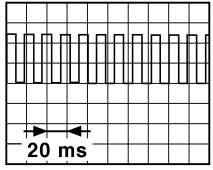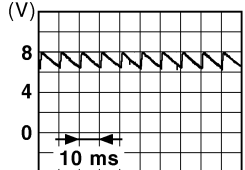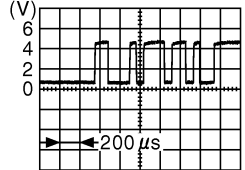
| Terminal No.<br>(Wire color) |        | Description                              |                  | Condition                |   | Value<br>(Approx.)  |
|------------------------------|--------|--|------------------|--------------------------|---|---|
| +                            | -      | Signal name                              | Input/<br>Output |                          |   |   |
| 14<br>(BR)                   | Ground | Communication signal<br>(LCD → AMP.)     | Input            | Ignition<br>switch<br>ON | —   | <br><small>JSNIA0028GB</small>   |
| 23<br>(L)                    | Ground | A/T snow switch signal                   | Input            | Ignition<br>switch<br>ON | Snow mode switch ON   | 12 V  |
|                              |        |  |                  |                          | Snow mode switch OFF  | 0 V   |
| 25<br>(V)                    | Ground | Manual mode shift down<br>signal         | Input            | Ignition<br>switch<br>ON | Selector lever down posi-<br>tion   | 0 V   |
|                              |        |  |                  |                          | Other than the above  | 12 V  |
| 26<br>(G)                    | Ground | Paddle shift down signal                 | Input            | Ignition<br>switch<br>ON | Paddle shifter down opera-<br>tion  | 0 V   |
|                              |        |  |                  |                          | Other than the above  | 12 V  |
| 27<br>(LG)                   | Ground | Communication signal<br>(METER → AMP.)   | Input            | Ignition<br>switch<br>ON | —   | <br><small>SKIA3361E</small>  |
| 28<br>(G)                    | Ground | Vehicle speed signal output<br>(8-pulse) | Output           | Ignition<br>switch<br>ON | Speedometer operated<br>[When vehicle speed is ap-<br>prox. 40 km/h (25 MPH)] | <p><b>NOTE:</b><br/>The maximum voltage varies de-<br/>pending on the specification<br/>(destination unit).</p> <br><small>JSNIA0012GB</small> |
| 30<br>(BG)                   | Ground | Parking brake switch signal              | Input            | Ignition<br>switch<br>ON | Parking brake applied   | 0 V   |
|                              |        |  |                  |                          | Parking brake released  | <br><small>JSNIA0007GB</small>   |
| 34<br>(Y)                    | Ground | Communication signal<br>(AMP. → LCD)     | Output           | Ignition<br>switch<br>ON | —   | <br><small>JSNIA0027GB</small>   |



# UNIFIED METER AND A/C AMP.

## < ECU DIAGNOSIS INFORMATION >
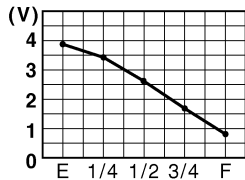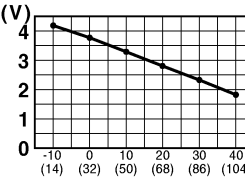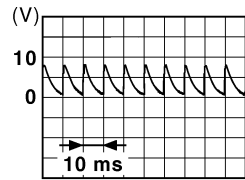
| Terminal No.<br>(Wire color) |        | Description                     |                  | Condition                 |   | Value<br>(Approx.)  |
|------------------------------|--------|---------------------------------|------------------|---------------------------|---|---|
| +                            | -      | Signal name                     | Input/<br>Output |                           |   |   |
| 41<br>(L)                    | Ground | ACC power supply                | Input            | Ignition<br>switch<br>ACC | —   | Battery voltage   |
| 42<br>(BR)                   | Ground | Fuel level sensor signal        | Input            | Ignition<br>switch<br>ON  | —   |  <p style="text-align: right; font-size: small;">JSNIA0013GB</p>   |
| 45<br>(V)                    | Ground | Ambient sensor signal           | Input            | —                         | —   |  <p style="text-align: right; font-size: small;">JSNIA0014GB</p>   |
| 53<br>(G)                    | Ground | Ignition signal                 | Input            | Ignition<br>switch<br>ON  | —   | Battery voltage   |
| 54<br>(Y)                    | Ground | Battery power supply            | Input            | Ignition<br>switch<br>OFF | —   | Battery voltage   |
| 55<br>(B)                    | Ground | Ground                          | —                | Ignition<br>switch<br>ON  | —   | 0 V   |
| 56<br>(L)                    | Ground | CAN-H                           | —                | —                         | —   | —   |
| 57<br>(LG)                   | Ground | Brake fluid level switch signal | Input            | Ignition<br>switch<br>ON  | Brake fluid level is normal.                      |  <p style="text-align: right; font-size: small;">JSNIA0008GB</p> |
|                              |        |                                 |                  |                           | The brake fluid level is lower than the low level | 0 V   |
| 58<br>(P)                    | Ground | Fuel level sensor signal ground | —                | Ignition<br>switch<br>ON  | —   | 0 V   |
| 61<br>(R)                    | Ground | Ambient sensor signal ground    | —                | Ignition<br>switch<br>ON  | —   | 0 V   |
| 71<br>(GR)                   | Ground | Ground                          | —                | Ignition<br>switch<br>ON  | —   | 0 V   |
| 72<br>(P)                    | Ground | CAN-L                           | —                | —                         | —   | —   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


MWI

# UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

## Wiring Diagram - METER -

INFOID:000000005807847

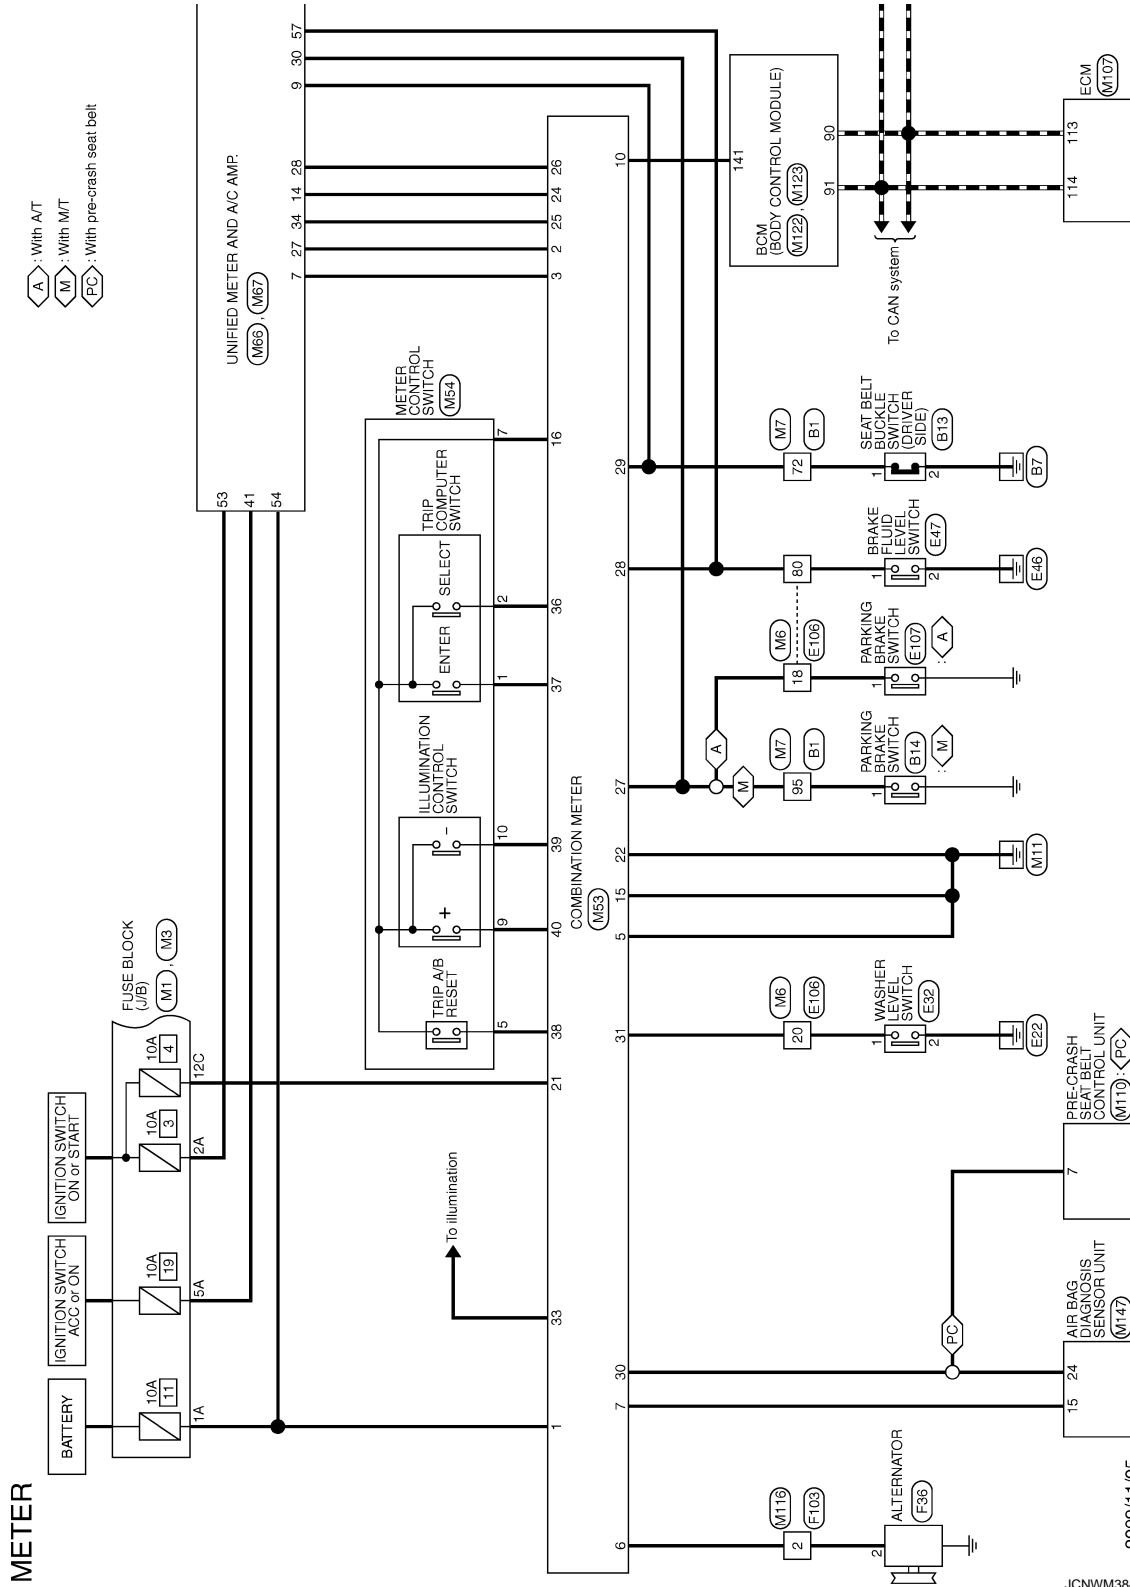

2009/11/05


JCNWM3843GI

# UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

- : With 4MAS
- : With paddle shifter switch
- : With A/T
- : AWD models
- : With ICC

\* : This connector is not shown in "Harness Layout".

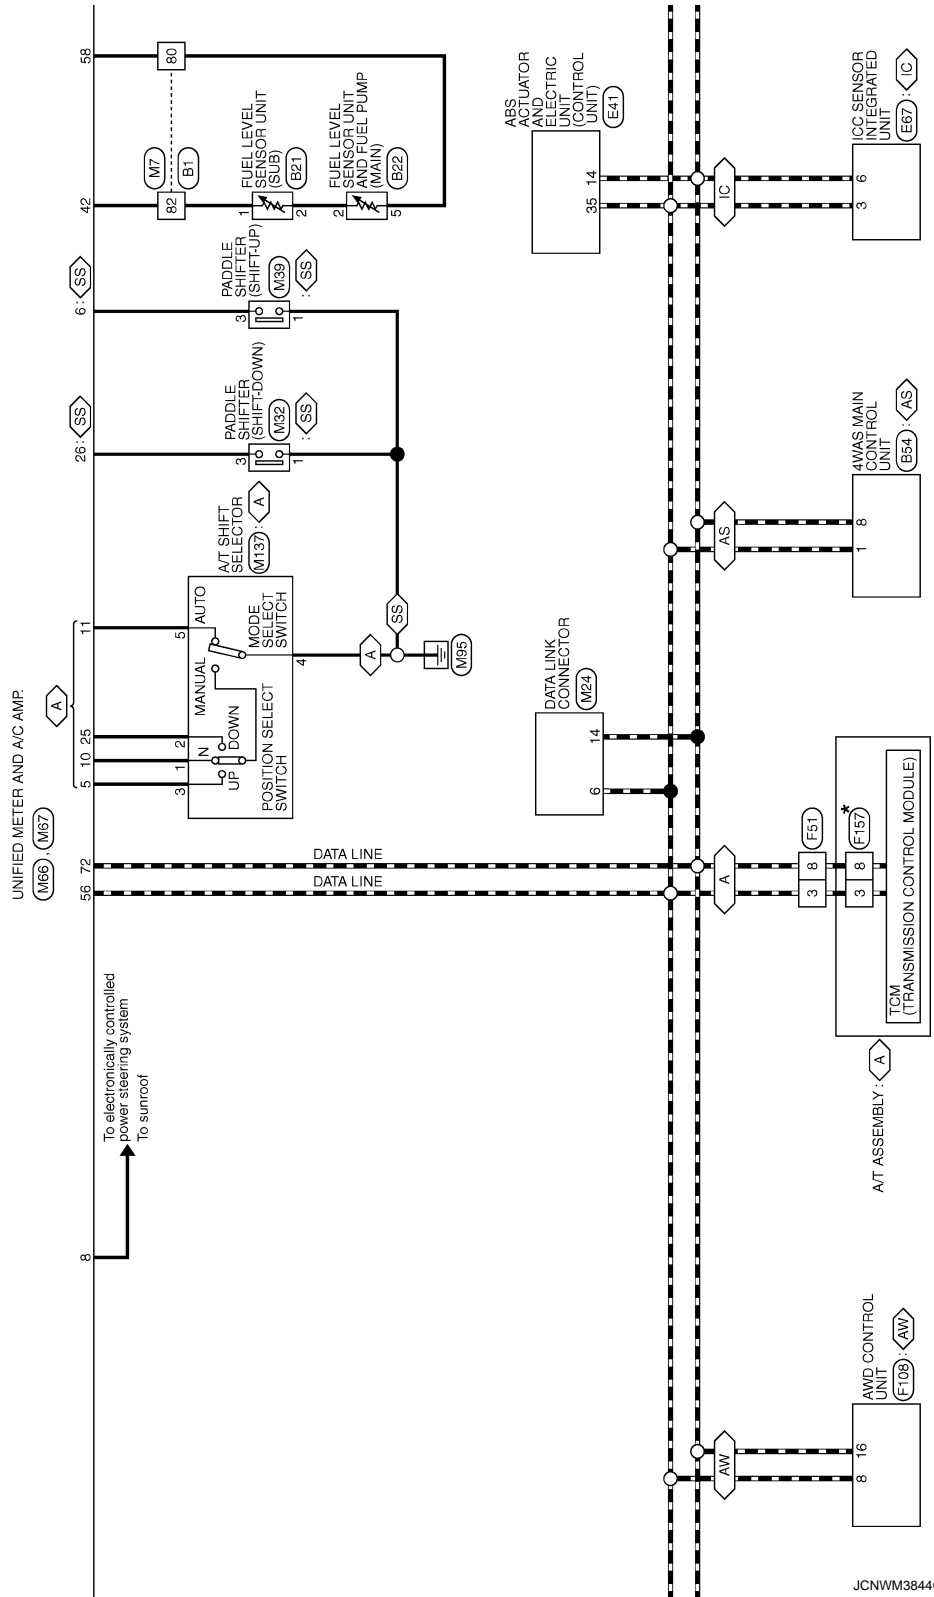


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

# UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

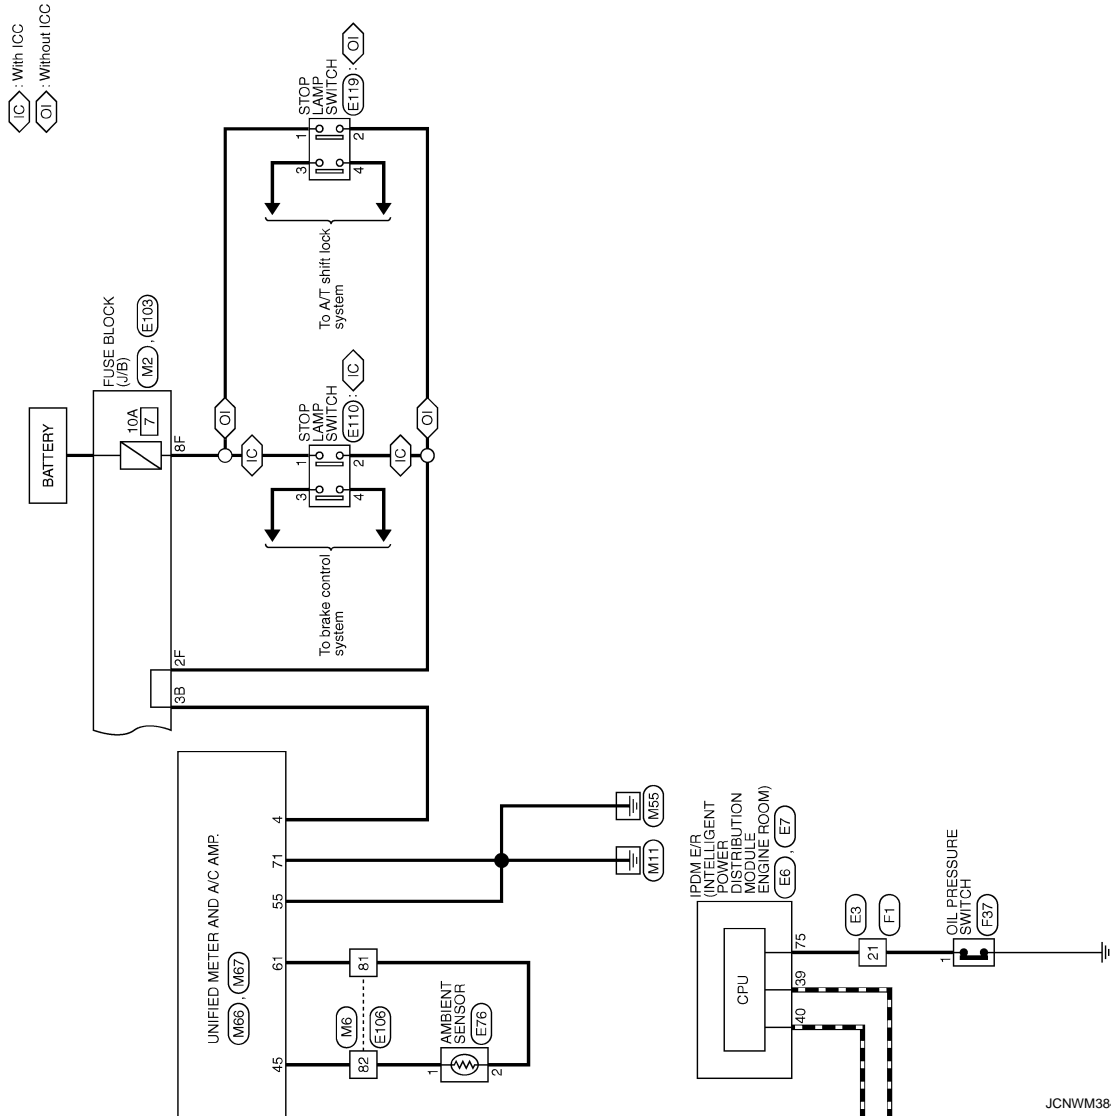


JCNWM3845G1

# UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

## METER

|                |                 |
|----------------|-----------------|
| Connector No.  | B1              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80FW-CS16-TM4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BG            | -                           |
| 2            | G             | -                           |
| 3            | W             | -                           |
| 5            | Y             | -                           |
| 6            | SB            | -                           |
| 7            | G             | -                           |
| 8            | Y             | -                           |
| 9            | GR            | -                           |
| 10           | R             | -                           |
| 14           | V             | -                           |
| 15           | BR            | -                           |
| 16           | LG            | -                           |
| 17           | W             | -                           |
| 20           | L             | -                           |
| 21           | P             | -                           |
| 22           | L             | -                           |
| 23           | P             | -                           |
| 31           | L             | -                           |
| 32           | P             | -                           |
| 33           | LG            | -                           |
| 34           | Y             | -                           |
| 36           | V             | -                           |
| 38           | SB            | -                           |
| 37           | SHIELD        | -                           |
| 38           | W             | -                           |
| 40           | BR            | -                           |
| 41           | Y             | -                           |
| 42           | SHIELD        | -                           |
| 43           | P             | -                           |
| 44           | L             | -                           |
| 45           | SHIELD        | -                           |
| 46           | R             | -                           |
| 47           | G             | -                           |
| 48           | SHIELD        | -                           |
| 49           | SB            | -                           |
| 51           | P             | -                           |
| 52           | G             | -                           |
| 53           | GR            | -                           |

|                |                      |
|----------------|----------------------|
| Connector No.  | B14                  |
| Connector Name | PARKING BRAKE SWITCH |
| Connector Type | P01FE-A              |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | V             | -                           |

|                |                              |
|----------------|------------------------------|
| Connector No.  | B21                          |
| Connector Name | FUEL LEVEL SENSOR UNIT (SUB) |
| Connector Type | E02FGY-RS                    |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | -                           |
| 2            | W             | -                           |

|                |   |
|----------------|---|
| Connector No.  | B22   |
| Connector Name | FUEL LEVEL SENSOR UNIT AND FUEL PUMP (MAIN) |
| Connector Type | E03FGY-RS                                   |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | P             | -                           |
| 2            | W             | -                           |
| 3            | B             | -                           |

|   |   |   |
|---|---|---|
| 4 | R | - |
| 5 | Y | - |

|                |                        |
|----------------|------------------------|
| Connector No.  | B54                    |
| Connector Name | 4WAS MAIN CONTROL UNIT |
| Connector Type | A30FW-M4               |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L             | CAN-H                       |
| 4            | BR            | R-ANG GND                   |
| 5            | W             | R-ANG VCC                   |
| 7            | R             | R-ANG SUB SIG               |
| 8            | P             | CAN-L                       |
| 15           | G             | R-ANG MAIN SIG              |
| 22           | GR            | STOP LAMP                   |
| 25           | SB            | R-MTR RLY                   |
| 27           | V             | IGN                         |
| 31           | BR            | CAN-H                       |
| 32           | Y             | CAN-L                       |
| 34           | B             | GND                         |
| 36           | LG            | P/S SOL                     |
| 37           | P             | R-MTR PWR SUPPLY            |
| 38           | Y             | R-MTR (RH)                  |
| 39           | G             | R-MTR (LH)                  |
| 40           | B             | R-MTR GND                   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


MWI

# UNIFIED METER AND A/C AMP.

## < ECU DIAGNOSIS INFORMATION >

### METER


|                |                 |
|----------------|-----------------|
| Connector No.  | E3              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | SA33MB-FSS-SHZ8 |

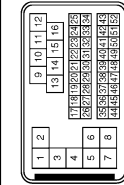

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L/Y           | -                           |
| 2            | SHIELD        | -                           |
| 3            | L/B           | -                           |
| 4            | SHIELD        | -                           |
| 5            | BR            | -                           |
| 6            | G             | -                           |
| 7            | W             | -                           |
| 8            | Y             | -                           |
| 9            | W             | -                           |
| 10           | Y             | -                           |
| 11           | P             | -                           |
| 12           | SB            | -                           |
| 13           | BR            | -                           |
| 14           | G             | -                           |
| 15           | R             | -                           |
| 16           | LG            | -                           |
| 17           | P             | -                           |
| 18           | Y             | -                           |
| 19           | BR            | -                           |
| 20           | B             | -                           |
| 21           | SB            | -                           |
| 22           | W             | -                           |
| 23           | L             | -                           |
| 24           | G             | -                           |
| 25           | Y             | -                           |
| 27           | GR            | -                           |
| 28           | Y             | -                           |
| 29           | P             | -                           |
| 30           | R             | -                           |
| 31           | BR            | -                           |
| 32           | Y             | -                           |
| 33           | G             | -                           |
| 34           | BR            | -                           |
| 37           | SHIELD        | -                           |
| 38           | L             | -                           |
| 39           | P             | -                           |
| 40           | R             | -                           |
| 41           | W             | -                           |
| 42           | LG            | -                           |


|    |        |   |
|----|--------|---|
| 43 | G      | - |
| 45 | BG     | - |
| 46 | SHIELD | - |
| 47 | W      | - |
| 48 | BR     | - |
| 49 | G      | - |
| 50 | B      | - |
| 51 | SB     | - |
| 52 | R      | - |

|                |   |
|----------------|---|
| Connector No.  | E6  |
| Connector Name | IPM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) |
| Connector Type | TH40FW-NH   |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 39           | P             | -                           |
| 40           | L             | -                           |
| 41           | B/W           | -                           |
| 42           | Y             | -                           |
| 43           | SB            | -                           |
| 44           | LG            | -                           |
| 45           | G             | -                           |
| 46           | W             | -                           |

|                |   |
|----------------|---|
| Connector No.  | E7  |
| Connector Name | IPM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) |
| Connector Type | TH40FW-CS12-M4  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 47           | BR            | -                           |
| 48           | BG            | -                           |
| 49           | BG            | -                           |
| 51           | Y             | -                           |


|    |    |   |
|----|----|---|
| 53 | W  | - |
| 54 | P  | - |
| 55 | SB | - |
| 56 | LG | - |
| 57 | G  | - |
| 58 | GR | - |
| 59 | BR | - |
| 70 | BG | - |
| 73 | P  | - |
| 74 | G  | - |
| 75 | SB | - |
| 76 | Y  | - |
| 77 | R  | - |
| 80 | W  | - |

|                |                     |
|----------------|---------------------|
| Connector No.  | E32                 |
| Connector Name | WASHER LEVEL SWITCH |
| Connector Type | E32FBR              |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | LG            | -                           |
| 2            | B             | -                           |

|                |   |
|----------------|---|
| Connector No.  | E41   |
| Connector Name | ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) |
| Connector Type | BA44FB-ANZ4-LH                                |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | GND                         |
| 2            | L             | UBMR                        |
| 3            | R             | LEVR                        |
| 4            | B             | GND                         |

|    |    |                |
|----|----|----------------|
| 5  | Y  | DS FL          |
| 6  | BG | DP RL          |
| 7  | BR | DP RR          |
| 8  | B  | DP FR          |
| 9  | W  | DS FR          |
| 10 | W  | DIAG-K         |
| 11 | V  | CAN-L          |
| 14 | P  | BUS-L          |
| 25 | Y  | DP FL          |
| 26 | LG | DS RL          |
| 27 | GR | UZ             |
| 28 | G  | DS RR          |
| 29 | P  | BLS            |
| 30 | SB | ESP OFF SWITCH |
| 31 | R  | CAN-H          |
| 35 | L  | BUS-H          |
| 45 | B  | BUS-H          |

|                |                          |
|----------------|--------------------------|
| Connector No.  | E47                      |
| Connector Name | BRAKE FLUID LEVEL SWITCH |
| Connector Type | YY02FGY                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | B             | -                           |

# UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

## METER

|                |                            |
|----------------|----------------------------|
| Connector No.  | E67                        |
| Connector Name | ICC SENSOR INTEGRATED UNIT |
| Connector Type | RS08FB-PR                  |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | R             | IGNITION                    |
| 2            | V             | BRAKE HOLD RLY DRIVE SIGNAL |
| 3            | L             | CAN-H                       |
| 4            | B             | GND                         |
| 6            | P             | CAN-L                       |

|                |                |
|----------------|----------------|
| Connector No.  | E76            |
| Connector Name | AMBIENT SENSOR |
| Connector Type | RS02FB         |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | G             | -                           |
| 2            | P             | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | E103             |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS16FV-CS        |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1F           | SB            | -                           |
| 2F           | V             | -                           |
| 4F           | EG            | -                           |
| 6F           | EG            | -                           |
| 8F           | L             | -                           |
| 9F           | R             | -                           |

|                |                 |
|----------------|-----------------|
| Connector No.  | E106            |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80FW-CS16-TM4 |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | GR            | -                           |
| 3            | BG            | -                           |
| 5            | G             | -                           |
| 6            | BG            | -                           |
| 7            | LG            | -                           |
| 10           | W             | -                           |
| 11           | V             | -                           |
| 12           | R             | -                           |
| 13           | L             | -                           |
| 14           | GR            | -                           |
| 15           | P             | -                           |
| 16           | V             | -                           |
| 17           | V             | -                           |
| 18           | BG            | -                           |
| 19           | GR            | -                           |
| 20           | LG            | -                           |
| 30           | R             | -                           |
| 31           | L             | -                           |
| 32           | BG            | -                           |
| 33           | P             | -                           |
| 34           | V             | -                           |
| 35           | BR            | -                           |
| 36           | W             | -                           |
| 37           | Y             | -                           |
| 38           | R             | -                           |
| 39           | B             | -                           |
| 40           | G             | -                           |
| 41           | W             | -                           |

|     |        |   |
|-----|--------|---|
| 42  | LG     | - |
| 43  | SB     | - |
| 44  | GR     | - |
| 45  | BG     | - |
| 46  | LG     | - |
| 47  | V      | - |
| 48  | P      | - |
| 49  | L      | - |
| 59  | B      | - |
| 66  | LG     | - |
| 67  | SB     | - |
| 68  | R      | - |
| 69  | W      | - |
| 70  | G      | - |
| 80  | W      | - |
| 81  | P      | - |
| 82  | G      | - |
| 83  | V      | - |
| 84  | L      | - |
| 85  | BG     | - |
| 86  | LG     | - |
| 87  | Y      | - |
| 88  | GR     | - |
| 89  | W      | - |
| 91  | G      | - |
| 93  | GR     | - |
| 95  | Y      | - |
| 96  | Y      | - |
| 97  | BR     | - |
| 98  | SHIELD | - |
| 99  | L      | - |
| 100 | P      | - |

|                |                      |
|----------------|----------------------|
| Connector No.  | E107                 |
| Connector Name | PARKING BRAKE SWITCH |
| Connector Type | TE01FW               |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | BG            | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | E110             |
| Connector Name | STOP LAMP SWITCH |
| Connector Type | MM04FW-LC        |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | L             | -                           |
| 2            | V             | -                           |
| 3            | L             | -                           |
| 4            | SB            | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | E119             |
| Connector Name | STOP LAMP SWITCH |
| Connector Type | MM04FW-LC        |



|              |               |                             |
|--------------|---------------|-----------------------------|
| Terminal No. | Color of Wire | Signal Name [Specification] |
| 1            | L             | -                           |
| 2            | V             | -                           |
| 3            | Y             | -                           |
| 4            | W             | -                           |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P




# UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

## METER

|                |                 |
|----------------|-----------------|
| Connector No.  | F1              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | SA38FW-RSS-S1Z3 |

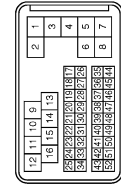

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | L/Y           | -                           |
| 2            | SHIELD        | -                           |
| 3            | L/B           | -                           |
| 4            | SHIELD        | -                           |
| 5            | BR            | -                           |
| 7            | G             | -                           |
| 8            | W             | -                           |
| 9            | W             | -                           |
| 10           | G             | -                           |
| 11           | R             | -                           |
| 12           | P             | -                           |
| 13           | L             | -                           |
| 14           | LG            | -                           |
| 15           | R             | -                           |
| 16           | Y             | -                           |
| 17           | W             | -                           |
| 18           | LG            | -                           |
| 19           | P             | -                           |
| 20           | O             | -                           |
| 21           | BR            | -                           |
| 22           | G             | -                           |
| 23           | Y             | -                           |
| 24           | LG            | -                           |
| 25           | V             | -                           |
| 27           | GR            | -                           |
| 28           | BR            | -                           |
| 29           | L             | -                           |
| 30           | R             | -                           |
| 31           | P             | -                           |
| 32           | W             | -                           |
| 33           | SB            | -                           |
| 34           | O             | -                           |
| 37           | SHIELD        | -                           |
| 38           | W             | -                           |
| 39           | Y             | -                           |
| 40           | G             | -                           |
| 41           | B             | -                           |
| 42           | GR            | -                           |

|    |        |   |
|----|--------|---|
| 43 | R      | - |
| 45 | O      | - |
| 46 | SHIELD | - |
| 47 | W/L    | - |
| 48 | LG     | - |
| 49 | O/L    | - |
| 50 | L/Y    | - |
| 51 | W      | - |
| 52 | L/G    | - |

|                |            |
|----------------|------------|
| Connector No.  | F36        |
| Connector Name | ALTERNATOR |
| Connector Type | HS00FB     |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | G             | L                           |
| 3            | V             | S                           |
| 4            | W             | C                           |

|                |                     |
|----------------|---------------------|
| Connector No.  | F37                 |
| Connector Name | OIL PRESSURE SWITCH |
| Connector Type | EQ1FGY-RS-AR        |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BR            | -                           |

|                |              |
|----------------|--------------|
| Connector No.  | F51          |
| Connector Name | A-T ASSEMBLY |
| Connector Type | RK10FG-DCY   |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | -                           |
| 2            | R             | -                           |
| 3            | L             | -                           |
| 4            | V             | -                           |
| 5            | B             | -                           |
| 6            | G             | -                           |
| 7            | R             | -                           |
| 8            | P             | -                           |
| 9            | GR            | -                           |
| 10           | B             | -                           |


|                |              |
|----------------|--------------|
| Connector No.  | F103         |
| Connector Name | WIRE TO WIRE |
| Connector Type | TK38FW-NS10  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | G             | -                           |
| 3            | W             | -                           |
| 4            | R             | -                           |
| 5            | B             | -                           |
| 9            | Y             | -                           |
| 10           | GR            | -                           |
| 18           | O             | -                           |
| 20           | Y             | -                           |
| 28           | B             | -                           |
| 29           | LG            | -                           |
| 30           | R             | -                           |
| 31           | R             | -                           |

|    |    |   |
|----|----|---|
| 33 | B  | - |
| 34 | B  | - |
| 35 | L  | - |
| 36 | P  | - |
| 37 | Y  | - |
| 38 | G  | - |
| 41 | O  | - |
| 42 | BR | - |
| 43 | P  | - |
| 44 | L  | - |
| 45 | G  | - |
| 46 | V  | - |

|                |                  |
|----------------|------------------|
| Connector No.  | F108             |
| Connector Name | AMD CONTROL UNIT |
| Connector Type | TH18FW-NH        |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BR            | AWD SOL (+)                 |
| 2            | Y             | AWD SOL (-)                 |
| 3            | W             | OIL TEMP (-)                |
| 7            | G             | IGN                         |
| 8            | L             | CAN-H                       |
| 9            | O             | AWD SOL BAT                 |
| 10           | B             | GND                         |
| 11           | B             | GND                         |
| 12           | LG            | OIL TEMP (+)                |
| 13           | Y             | VB                          |
| 16           | P             | CAN-L                       |



# UNIFIED METER AND A/C AMP.

< ECU DIAGNOSIS INFORMATION >

## METER

|                |                                   |
|----------------|-----------------------------------|
| Connector No.  | F157                              |
| Connector Name | TCM (TRANSMISSION CONTROL MODULE) |
| Connector Type | SP10FG                            |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | VIGN                        |
| 2            | B             | BATT                        |
| 3            | R             | CAN-H                       |
| 4            | O             | K-LINE                      |
| 5            | G             | GND                         |
| 6            | GR            | GND                         |
| 7            | L             | VIGN                        |
| 8            | BR            | REV LAMP RLY                |
| 9            | Y             | CAN-L                       |
| 10           | W/B           | STARTER RLY                 |

|                |                  |
|----------------|------------------|
| Connector No.  | M1               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS08FW-M2        |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1A           | V             | -                           |
| 2A           | LG            | -                           |
| 3A           | L             | -                           |
| 4A           | SB            | -                           |
| 5A           | L             | -                           |
| 6A           | BR            | -                           |
| 7A           | R             | -                           |
| 8A           | L             | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | M2               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS12FW-CS        |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1B           | SB            | -                           |
| 3B           | P             | -                           |
| 4B           | G             | -                           |
| 5B           | BG            | -                           |
| 6B           | Y             | -                           |
| 7B           | L             | -                           |
| 8B           | R             | -                           |
| 9B           | SB            | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | M3               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS12FW-CS        |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 10C          | V             | -                           |
| 11C          | B             | -                           |
| 12C          | W             | -                           |

|                |                  |
|----------------|------------------|
| Connector No.  | M5               |
| Connector Name | WIRE TO WIRE     |
| Connector Type | TH02MW-CS1.6-TM4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BG            | -                           |
| 3            | R             | -                           |
| 5            | G             | -                           |
| 6            | L             | -                           |
| 7            | W             | -                           |
| 10           | W             | -                           |
| 11           | V             | -                           |
| 12           | R             | -                           |
| 13           | L             | -                           |
| 14           | GR            | -                           |
| 15           | P             | -                           |
| 16           | W             | -                           |
| 17           | BR            | -                           |
| 18           | BG            | -                           |
| 19           | L             | -                           |
| 20           | L             | -                           |
| 30           | R             | -                           |
| 31           | SB            | -                           |
| 32           | Y             | -                           |
| 33           | BG            | -                           |
| 34           | R             | -                           |
| 35           | BR            | -                           |
| 36           | SB            | -                           |
| 37           | Y             | -                           |
| 38           | LG            | -                           |
| 39           | SB            | -                           |
| 40           | P             | -                           |
| 41           | W             | -                           |
| 42           | LG            | -                           |
| 43           | R             | -                           |
| 44           | Y             | - [With A/T]                |
| 44           | P             | - [With M/T]                |
| 45           | BG            | -                           |
| 46           | G             | -                           |
| 47           | V             | -                           |
| 48           | P             | -                           |
| 49           | L             | -                           |
| 59           | B             | -                           |

|     |        |   |
|-----|--------|---|
| 66  | GR     | - |
| 67  | P      | - |
| 68  | L      | - |
| 69  | W      | - |
| 70  | BR     | - |
| 80  | L      | - |
| 81  | R      | - |
| 82  | V      | - |
| 83  | W      | - |
| 84  | L      | - |
| 85  | BG     | - |
| 86  | W      | - |
| 87  | G      | - |
| 88  | B      | - |
| 89  | SB     | - |
| 91  | L      | - |
| 93  | Y      | - |
| 95  | Y      | - |
| 96  | R      | - |
| 97  | P      | - |
| 98  | SHIELD | - |
| 99  | V      | - |
| 100 | SB     | - |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
MWI  
O  
P

# UNIFIED METER AND A/C AMP.

## < ECU DIAGNOSIS INFORMATION >


### METER

|                |                 |
|----------------|-----------------|
| Connector No.  | M7              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80MW-CS16-TM4 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | BG            | -                           |
| 2            | LG            | -                           |
| 3            | BG            | -                           |
| 4            | Y             | -                           |
| 5            | P             | -                           |
| 6            | G             | -                           |
| 7            | L             | -                           |
| 8            | V             | -                           |
| 9            | R             | -                           |
| 10           | R             | -                           |
| 11           | BR            | -                           |
| 12           | P             | -                           |
| 13           | V             | -                           |
| 14           | L             | -                           |
| 15           | P             | -                           |
| 16           | V             | -                           |
| 17           | L             | -                           |
| 18           | L             | -                           |
| 19           | P             | -                           |
| 20           | L             | -                           |
| 21           | P             | -                           |
| 22           | L             | -                           |
| 23           | P             | -                           |
| 24           | L             | -                           |
| 25           | P             | -                           |
| 26           | LG            | -                           |
| 27           | SB            | -                           |
| 28           | V             | -                           |
| 29           | LG            | -                           |
| 30           | SHIELD        | -                           |
| 31           | GR            | -                           |
| 32           | BR            | -                           |
| 33           | Y             | -                           |
| 34           | SHIELD        | -                           |
| 35           | O             | -                           |
| 36           | W             | -                           |
| 37           | R             | -                           |
| 38           | G             | -                           |
| 39           | SHIELD        | -                           |
| 40           | SB            | -                           |
| 41           | W             | -                           |
| 42           | B             | -                           |
| 43           | Y             | -                           |
| 44           | SHIELD        | -                           |
| 45           | W             | -                           |
| 46           | R             | -                           |
| 47           | G             | -                           |
| 48           | SHIELD        | -                           |
| 49           | SB            | -                           |
| 50           | W             | -                           |
| 51           | B             | -                           |
| 52           | V             | -                           |
| 53           | SB            | -                           |

|                |                             |
|----------------|-----------------------------|
| Connector No.  | M32                         |
| Connector Name | PADDLE SHIFTER (SHIFT-DOWN) |
| Connector Type | A03FW                       |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | G             | -                           |
| 3            | G             | -                           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M39                       |
| Connector Name | PADDLE SHIFTER (SHIFT-UP) |
| Connector Type | A03FW                     |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | B             | -                           |
| 2            | B             | -                           |
| 3            | BG            | -                           |

|                |                   |
|----------------|-------------------|
| Connector No.  | M53               |
| Connector Name | COMBINATION METER |
| Connector Type | SAB40FW           |



| Terminal No. | Color of Wire | Signal Name [Specification]        |
|--------------|---------------|------------------------------------|
| 1            | V             | BATTERY                            |
| 2            | LG            | COMMUNICATION SIGNAL (METER->AMP.) |

| Terminal No. | Color of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 3            | GR            | COMMUNICATION SIGNAL (AMP->METER) |
| 4            | B             | GROUND                            |
| 5            | W             | ALTERNATOR SIGNAL                 |
| 6            | W             | AIR BAG                           |
| 7            | LG            | SECURITY                          |
| 8            | P             | GROUND                            |
| 9            | B             | GROUND                            |
| 10           | W             | METER CONTROL SWITCH GROUND       |
| 11           | GR            | ILL GND                           |
| 12           | B             | ILL GND                           |
| 13           | R             | ILL                               |
| 14           | GR            | IGNITION POWER SUPPLY             |
| 15           | B             | GROUND                            |
| 16           | BR            | COMMUNICATION SIGNAL (LCP->AMP.)  |
| 17           | Y             | COMMUNICATION SIGNAL (AMP->LGD)   |
| 18           | G             | VEHICLE SPEED (8-PULSE)           |
| 19           | G             | PARKING BRAKE SWITCH              |
| 20           | L             | BRAKE FLUID LEVEL SWITCH          |
| 21           | L             | SEAT BELT BUZZER SW (DRIVER SIDE) |
| 22           | G             | SEAT BELT                         |
| 23           | L             | WASHER LEVEL SWITCH               |
| 24           | R             | ILLUMINATION CONTROL              |
| 25           | LG            | SELECT SWITCH                     |
| 26           | SB            | ENTER SWITCH                      |
| 27           | L             | TRIP A/B RESET SWITCH             |
| 28           | L             | ILLUMINATION CONTROL SWITCH (-)   |
| 29           | BG            | ILLUMINATION CONTROL SWITCH (+)   |

|                |                      |
|----------------|----------------------|
| Connector No.  | M54                  |
| Connector Name | METER CONTROL SWITCH |
| Connector Type | TH12FW-NH            |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | SB            | -                           |
| 2            | LG            | -                           |
| 3            | B             | -                           |
| 4            | R             | -                           |
| 5            | L             | -                           |
| 6            | W             | -                           |
| 7            | W             | -                           |
| 8            | GR            | -                           |
| 9            | BG            | -                           |
| 10           | P             | -                           |

# UNIFIED METER AND A/C AMP.

## < ECU DIAGNOSIS INFORMATION >


### METER

|                |                            |
|----------------|----------------------------|
| Connector No.  | M66                        |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH4CFV-NH                  |



| Terminal No. | Color of Wire | Signal Name [Specification]           |
|--------------|---------------|---------------------------------------|
| 4            | SB            | STOP LAMP SWITCH                      |
| 5            | L             | SHIF UP                               |
| 6            | EG            | PADDLE UP                             |
| 7            | GR            | COMMUNICATION SIGNAL (AMP->METER)     |
| 8            | L             | VEHICLE SPEED (2-PULSE)               |
| 9            | SB            | SEAT BELT BUCKLE SWITCH (DRIVER SIDE) |
| 10           | W             | MANUAL MODE                           |
| 11           | G             | NON-MANUAL MODE                       |
| 14           | BR            | COMMUNICATION SIGNAL (LGD->AMP)       |
| 20           | G             | ION ON / OFF SIGNAL                   |
| 23           | L             | AT SNOW SW                            |
| 25           | V             | SHIFT DOWN                            |
| 26           | G             | PADDLE DOWN                           |
| 27           | LG            | COMMUNICATION SIGNAL (METER->AMP)     |
| 28           | G             | VEHICLE SPEED (8-PULSE)               |
| 30           | EG            | PARKING BRAKE SWITCH                  |
| 34           | Y             | COMMUNICATION SIGNAL (AMP->LCD)       |
| 38           | P             | BLOWER MOTOR CONTROL SIGNAL           |


|                |                            |
|----------------|----------------------------|
| Connector No.  | M67                        |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH2CFV-NH                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 41           | L             | ACC POWER SUPPLY            |
| 42           | BR            | FUEL LEVEL SENSOR SIGNAL    |
| 43           | V             | INTAKE SENSOR SIGNAL        |
| 44           | LG            | IN-VEHICLE SENSOR SIGNAL    |

|    |    |                                |
|----|----|--------------------------------|
| 45 | V  | AMBIENT SENSOR SIGNAL          |
| 46 | GR | SUNLOAD SENSOR SIGNAL          |
| 47 | W  | CLAS SENSOR SIGNAL             |
| 53 | G  | IGNITION POWER SUPPLY          |
| 54 | Y  | BATTERY POWER SUPPLY           |
| 55 | B  | GROUND                         |
| 56 | L  | CAN-H                          |
| 57 | LG | BRAKE FLUID LEVEL SWITCH       |
| 58 | P  | FUEL LEVEL SENSOR GROUND       |
| 59 | Y  | INTAKE SENSOR GROUND           |
| 60 | W  | IN-VEHICLE SENSOR GROUND       |
| 61 | R  | AMBIENT SENSOR GROUND          |
| 62 | SB | SUNLOAD SENSOR GROUND          |
| 63 | L  | ION CONTROL MODE OUTPUT SIGNAL |
| 65 | EG | ECV SIGNAL                     |
| 69 | P  | A/C LAM SIGNAL                 |
| 70 | R  | EACH DOOR MOTOR POWER SUPPLY   |
| 71 | GR | GROUND                         |
| 72 | P  | CAN-L                          |


|                |                    |
|----------------|--------------------|
| Connector No.  | M107               |
| Connector Name | ECM                |
| Connector Type | RH24FGY-RZ8-R-LH-Z |

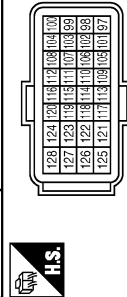

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 97           | R             | APS 1                       |
| 98           | P             | APS 2                       |
| 99           | L             | AVCC-T-APS 1                |
| 100          | W             | GND-APS 1                   |
| 101          | SB            | ASCDSW                      |
| 102          | W             | FTPRS                       |
| 103          | GR            | AVCC-P-APS 2                |
| 104          | V             | GND-APS 2                   |
| 105          | L             | PDPRESS                     |
| 106          | W             | TF                          |
| 107          | BG            | AVCC-PDPRES                 |
| 108          | Y             | GND ASCDSW                  |
| 109          | G             | NEUT-H                      |
| 110          | R             | TACHO                       |
| 112          | L             | GND-APDPRES                 |
| 113          | P             | VEHCAN-L                    |
| 114          | L             | VEHCAN-H                    |


|     |    |       |
|-----|----|-------|
| 117 | V  | KLINE |
| 121 | LG | CDCV  |
| 122 | P  | BRAKE |
| 123 | B  | GND   |
| 124 | B  | GND   |
| 125 | R  | VBR   |
| 126 | BR | BKCSW |
| 127 | B  | GND   |
| 128 | B  | GND   |

|                |                                 |
|----------------|---------------------------------|
| Connector No.  | M110                            |
| Connector Name | PRE-OHSH SEAT BELT CONTROL UNIT |
| Connector Type | TH20FW-TB6                      |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | MOTOR (RH) (RELEASE)        |
| 2            | W             | "B                          |
| 3            | R             | MOTOR (RH) (FASTEN)         |
| 4            | Y             | MOTOR (LH) (FASTEN)         |
| 5            | W             | GND (DRIVE)                 |
| 6            | R             | MOTOR (LH) (RELEASE)        |
| 7            | Y             | INDICATOR                   |
| 8            | LG            | BUCKLE SW RH                |
| 10           | SB            | BUCKLE SW LH                |
| 13           | W             | IGN                         |
| 16           | W             | SENS OUTPUT 1               |
| 18           | L             | SENS POWER                  |
| 20           | BR            | SENS OUTPUT 2               |
| 21           | B             | SENS GND                    |
| 22           | P             | CAN-L                       |
| 24           | L             | CAN-H                       |
| 26           | B             | GND (GONT)                  |

|                |              |
|----------------|--------------|
| Connector No.  | M116         |
| Connector Name | WIRE TO WIRE |
| Connector Type | TK36MF-NS10  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | W             | -                           |
| 3            | BG            | -                           |
| 4            | P             | -                           |
| 5            | B             | -                           |
| 9            | R             | -                           |
| 10           | R             | -                           |
| 19           | BG            | -                           |
| 20           | Y             | -                           |
| 28           | B             | -                           |
| 29           | LG            | -                           |
| 30           | BR            | -                           |
| 31           | W             | -                           |
| 33           | B             | -                           |
| 34           | B             | -                           |
| 35           | L             | -                           |
| 36           | P             | -                           |
| 37           | V             | -                           |
| 38           | SB            | -                           |
| 41           | BG            | -                           |
| 42           | G             | -                           |
| 43           | P             | -                           |
| 44           | L             | -                           |
| 45           | Y             | -                           |
| 46           | V             | -                           |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P




# UNIFIED METER AND A/C AMP.

## < ECU DIAGNOSIS INFORMATION >


### METER

|                |                           |
|----------------|---------------------------|
| Connector No.  | M122                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH4CFB-NH                 |




| Terminal No. | Color of Wire | Signal Name [Specification]             |
|--------------|---------------|---|
| 72           | R             | ROOM ANT 2-                             |
| 73           | G             | ROOM ANT 2+                             |
| 74           | SB            | PASSENGER DOOR ANT-                     |
| 75           | BR            | PASSENGER DOOR ANT+                     |
| 76           | V             | DRIVER DOOR ANT-                        |
| 77           | LG            | DRIVER DOOR ANT+                        |
| 78           | Y             | ROOM ANT 1-                             |
| 79           | BR            | ROOM ANT 1+                             |
| 80           | GR            | NATS ANT AMP                            |
| 81           | W             | NATS ANT AMP                            |
| 82           | V             | IGN RELAY (F/B) CONT                    |
| 83           | Y             | KEYLESS ENTRY RECEIVER COMM             |
| 87           | Y             | COMBI SW INPUT 5                        |
| 88           | GR            | COMBI SW INPUT 3                        |
| 89           | BR            | PUSH SW                                 |
| 90           | P             | CAN-L                                   |
| 91           | L             | CAN-H                                   |
| 92           | LG            | KEY SLOT ILL                            |
| 93           | GR            | ON IND                                  |
| 95           | BG            | ACC RELAY CONT                          |
| 96           | GR            | A/T SHIFT SELECTOR POWER SUPPLY         |
| 97           | L             | S/L CONDITION 1                         |
| 98           | BG            | S/L CONDITION 2                         |
| 99           | P             | SHIFT P. (W/O A/T)                      |
| 99           | R             | ICC CLUTCH SW (M/T models with ICC)     |
| 99           | R             | ASCD CLUTCH SW (M/T models without ICC) |
| 100          | Y             | PASSENGER DOOR REQUEST SW               |
| 101          | R             | DRIVER DOOR REQUEST SW                  |
| 102          | BG            | BLOWER FAN MOTOR RELAY CONT             |
| 103          | LG            | KEYLESS ENTRY RECEIVER POWER SUPPLY     |
| 106          | W             | S/L UNIT POWER SUPPLY                   |
| 107          | LG            | COMBI SW INPUT 1                        |
| 108          | R             | COMBI SW INPUT 4                        |
| 109          | W             | COMBI SW INPUT 2                        |
| 110          | G             | HAZARD SW                               |
| 111          | Y             | S/L UNIT COMM                           |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M123                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH4CFG-NH                 |




| Terminal No. | Color of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 112          | R             | RAIN SENSOR SERIAL LINK           |
| 113          | BG            | OPTICAL SENSOR                    |
| 114          | P             | CLUTCH INTERLOCK SW               |
| 116          | SB            | STOP LAMP SW 1                    |
| 118          | BR            | STOP LAMP SW 2                    |
| 119          | SB            | DR DOOR UNLOCK SENSOR             |
| 121          | G             | KEY-SLOT SW                       |
| 123          | W             | IGN F/B                           |
| 124          | LG            | PASSENGER DOOR SW                 |
| 129          | Y             | TRUNK LID OPENER CANCEL SW        |
| 132          | V             | POWER WINDOW SW COMM              |
| 133          | L             | PUSH-BUTTON IGNITION SW/ILL POWER |
| 134          | R             | LOCK IND                          |
| 137          | BG            | RECEIVER / SENSOR GND             |
| 138          | V             | RECEIVER / SENSOR POWER SUPPLY    |
| 139          | L             | TIRE PRESSURE RECEIVER COMM       |
| 140          | Y             | SHIFT N/P                         |
| 141          | P             | SECURITY INDICATOR                |
| 142          | LG            | COMBI SW OUTPUT 5                 |
| 143          | V             | COMBI SW OUTPUT 1                 |
| 144          | G             | COMBI SW OUTPUT 2                 |
| 145          | L             | COMBI SW OUTPUT 3                 |
| 146          | SB            | COMBI SW OUTPUT 4                 |
| 149          | W             | TIRE PRESSURE WARN CHECK SW       |
| 150          | R             | DRIVER DOOR SW                    |
| 151          | G             | REAR WINDOW DEFROGGER RELAY CONT  |

|                |                    |
|----------------|--------------------|
| Connector No.  | M137               |
| Connector Name | A-T SHIFT SELECTOR |
| Connector Type | TH1ZFW-NH          |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | V             | -                           |
| 3            | L             | -                           |
| 4            | BR            | -                           |
| 5            | G             | -                           |
| 7            | Y             | -                           |
| 8            | SB            | -                           |
| 9            | B             | -                           |
| 10           | GR            | -                           |
| 11           | P             | -                           |

|                |                               |
|----------------|-------------------------------|
| Connector No.  | M147                          |
| Connector Name | AIR BAG DIAGNOSIS SENSOR UNIT |
| Connector Type | TK28FY-EX-SC                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | LG            | IGN                         |
| 2            | B             | GND                         |
| 3            | Y             | DR1 (+)                     |
| 4            | Y             | DR 1 (-) DR 2 (-)           |
| 5            | Y             | AS1 (+)                     |
| 6            | Y             | AS1 (-)                     |
| 11           | SB            | ECZS (+)                    |
| 12           | V             | ECZS (-)                    |
| 15           | LG            | AIR BAG W/L                 |
| 16           | SHIELD        | GND                         |
| 18           | R             | CUTOFF TELLTALE             |
| 21           | L             | CAN-H                       |

|    |   |           |
|----|---|-----------|
| 24 | G | SEAT BELT |
| 45 | Y | DR 2 (+)  |
| 46 | P | CAN-L     |
| 47 | Y | AS 2 (+)  |
| 48 | Y | AS 2 (-)  |
| 49 | L | ODS INPUT |

## Fail-safe

### FAIL SAFE

The unified meter and A/C amp. activates the fail-safe control if CAN communication with each unit is malfunctioning.

JCNWM3853GI

INFOID:000000005807848

# UNIFIED METER AND A/C AMP.

## < ECU DIAGNOSIS INFORMATION >

| Function                      | Specifications   |   |
|-------------------------------|--|---|
| Speedometer                   | Reset to zero by suspending communication.               |   |
| Tachometer                    |  |   |
| Fuel gauge                    | Indicates fuel level                                     |   |
| Water temperature gauge       | Reset to zero by suspending communication.               |   |
| Illumination control          | When suspending communication, change to nighttime mode. |   |
| Information display           | The display turns off by suspending communication.       |   |
| Buzzer                        | The buzzer turns off by suspending communication.        |   |
| Warning lamp/indicator lamp   | ABS warning lamp   | The lamp turns on by suspending communication.        |
|                               | VDC OFF indicator lamp                                   |   |
|                               | SLIP indicator lamp                                      |   |
|                               | Brake warning lamp                                       |   |
|                               | AWD warning lamp   |   |
|                               | 4WAS warning lamp  |   |
|                               | CRUISE warning lamp                                      |   |
|                               | Malfunction indicator lamp                               |   |
|                               | Low tire pressure warning lamp                           | The lamp turns ON after flashing for 1 minute.        |
|                               | AFS OFF indicator lamp                                   | The lamp blinking caused by communication malfunction |
|                               | High beam indicator                                      | The lamp turns off by suspending communication.       |
|                               | Turn signal indicator lamp                               |   |
|                               | Oil pressure warning lamp                                |   |
|                               | A/T CHECK warning lamp                                   |   |
|                               | Key warning lamp   |   |
|                               | Master warning lamp                                      |   |
| Tail lamp indicator lamp      |  |   |
| Front fog lamp indicator lamp |  |   |

## DTC Index

INFOID:000000005807849

| Display contents of CONSULT-III | Time |      | Diagnostic item is detected when...   | Refer to               |
|---------------------------------|------|------|---|------------------------|
| U1000: CAN COMM CIRCUIT         | CRNT | PAST | When unified meter and A/C amp. is not transmitting or receiving CAN communication signal for 2 seconds or more.                              | <a href="#">MWI-41</a> |
| U1010: CONTROL UNIT (CAN)       | CRNT | PAST | When detecting error during the initial diagnosis of CAN controller of unified meter and A/C amp.   | <a href="#">MWI-42</a> |
| B2201: COMM ERROR 1             | CRNT | PAST | If a communication error is present in the communication line between unified meter and A/C amp. and combination meter for 2 seconds or more. | <a href="#">MWI-43</a> |
| B2202: COMM ERROR 2             | CRNT | PAST | If a communication error is present in the communication line between unified meter and A/C amp. and combination meter for 2 seconds or more. | <a href="#">MWI-45</a> |
| B2205: VEHICLE SPEED            | CRNT | PAST | The abnormal vehicle speed signal is input from ABS actuator and electric unit (control unit) for 2 seconds or more.                          | <a href="#">MWI-47</a> |
| B2267: ENGINE SPEED             | CRNT | PAST | If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.  | <a href="#">MWI-48</a> |
| B2268: WATER TEMP               | CRNT | PAST | If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.   | <a href="#">MWI-49</a> |

### NOTE:

The details of TIME display are as follows.

## UNIFIED METER AND A/C AMP.

### < ECU DIAGNOSIS INFORMATION >

---

- CRNT: The malfunctions that are detected now.
- PAST: The malfunctions was detected in the past. IGN counter is displayed on FFD (Freeze Frame data).
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000005890535

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item  | Condition   |   | Value/Status |
|---------------|---|---|--------------|
| RAD FAN REQ   | Engine idle speed   | Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.                                    | 0 - 100 %    |
| AC COMP REQ   | Engine running  | A/C switch OFF  | Off          |
|               |   | A/C switch ON (Compressor is operating)   | On           |
| TAIL&CLR REQ  | Lighting switch OFF   |   | Off          |
|               | Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated) |   | On           |
| HL LO REQ     | Lighting switch OFF   |   | Off          |
|               | Lighting switch 2ND HI or AUTO (Light is illuminated)       |   | On           |
| HL HI REQ     | Lighting switch OFF   |   | Off          |
|               | Lighting switch HI  |   | On           |
| FR FOG REQ    | Lighting switch 2ND or AUTO (Light is illuminated)          | Front fog lamp switch OFF   | Off          |
|               |   | <ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime running light activated (Only for Canada)</li> </ul> | On           |
| FR WIP REQ    | Ignition switch ON  | Front wiper switch OFF  | Stop         |
|               |   | Front wiper switch INT  | 1LOW         |
|               |   | Front wiper switch LO   | Low          |
|               |   | Front wiper switch HI   | Hi           |
| WIP AUTO STOP | Ignition switch ON  | Front wiper stop position   | STOP P       |
|               |   | Any position other than front wiper stop position   | ACT P        |
| WIP PROT      | Ignition switch ON  | Front wiper operates normally   | Off          |
|               |   | Front wiper stops at fail-safe operation  | BLOCK        |
| IGN RLY1 -REQ | Ignition switch OFF or ACC                                  |   | Off          |
|               | Ignition switch ON  |   | On           |
| IGN RLY       | Ignition switch OFF or ACC                                  |   | Off          |
|               | Ignition switch ON  |   | On           |
| PUSH SW       | Release the push-button ignition switch                     |   | Off          |
|               | Press the push-button ignition switch                       |   | On           |
| INTER/NP SW   | Ignition switch ON  | Selector lever in any position other than P or N (A/T models)   | Off          |
|               |   | Release clutch pedal (M/T models)   |              |
|               | Ignition switch ON  | Selector lever in P or N position (A/T models)  | On           |
|               |   | Depress clutch pedal (M/T models)   |              |
| ST RLY CONT   | Ignition switch ON  |   | Off          |
|               | At engine cranking  |   | On           |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >


| Monitor Item   | Condition   | Value/Status    |
|----------------|---|-----------------|
| IHBT RLY -REQ  | Ignition switch ON  | Off             |
|                | At engine cranking  | On              |
| ST/INHI RLY    | Ignition switch ON  | Off             |
|                | At engine cranking  | INHI ON → ST ON |
|                | The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF  | UNKWN           |
| DETENT SW      | Ignition switch ON <ul style="list-style-type: none"> <li>Press the selector button with selector lever in P position</li> <li>Selector lever in any position other than P</li> </ul>   | Off             |
|                | Release the selector button with selector lever in P position<br><b>NOTE:</b><br>Fixed On for M/T models  | On              |
| S/L RLY -REQ   | None of the conditions below are present  | Off             |
|                | <ul style="list-style-type: none"> <li>Open the driver door after the ignition switch is turned OFF (for a few seconds)</li> <li>Press the push-button ignition switch when the steering lock is activated</li> <li>Depress the clutch pedal when the steering lock is activated</li> </ul> | On              |
| S/L STATE      | Steering lock is activated  | LOCK            |
|                | Steering lock is deactivated  | UNLOCK          |
|                | [DTC: B210A] is detected  | UNKWN           |
| DTRL REQ       | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off             |
| OIL P SW       | Ignition switch OFF, ACC or engine running  | Open            |
|                | Ignition switch ON  | Close           |
| HOOD SW        | Close the hood  | Off             |
|                | Open the hood   | On              |
| HL WASHER REQ  | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off             |
| THFT HRN REQ   | Not operation   | Off             |
|                | <ul style="list-style-type: none"> <li>Panic alarm is activated</li> <li>Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li> </ul>  | On              |
| HORN CHIRP     | Not operating   | Off             |
|                | Door locking with Intelligent Key (horn chirp mode)   | On              |
| CRNRNG LMP REQ | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off             |



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

## TERMINAL LAYOUT

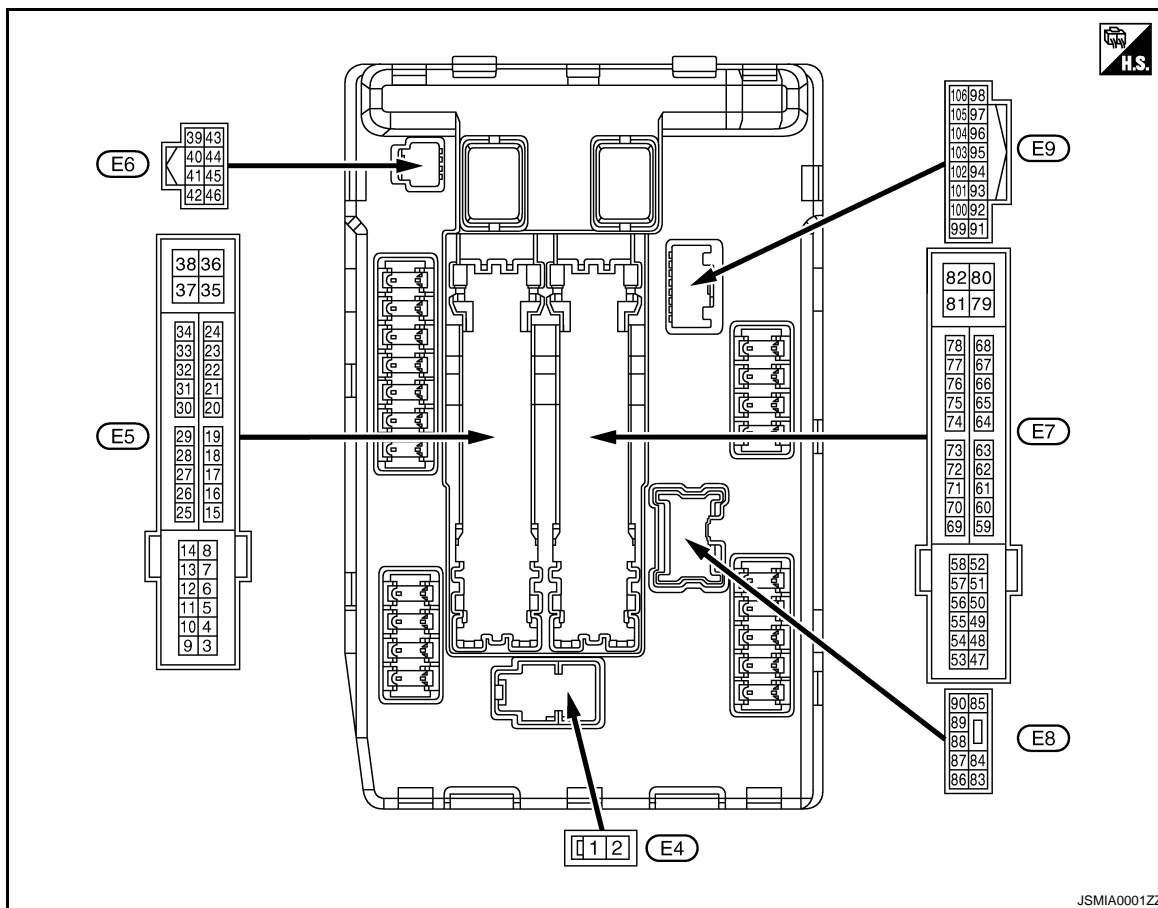

## PHYSICAL VALUES

| Terminal No.<br>(Wire color) |        | Description                               |                  | Condition                 |   | Value<br>(Approx.) |
|------------------------------|--------|---|------------------|---------------------------|---|--------------------|
| +                            | -      | Signal name                               | Input/<br>Output |                           |   |                    |
| 1<br>(W)                     | Ground | Battery power supply                      | Input            | Ignition switch OFF       |   | Battery voltage    |
| 2<br>(L)                     | Ground | Battery power supply                      | Input            | Ignition switch OFF       |   | Battery voltage    |
| 4<br>(V)                     | Ground | Front wiper LO                            | Output           | Ignition switch OFF       | Front wiper switch OFF                      | 0 V                |
|                              |        |   |                  | Ignition switch ON        | Front wiper switch LO                       | Battery voltage    |
| 5<br>(L)                     | Ground | Front wiper HI                            | Output           | Ignition switch OFF       | Front wiper switch OFF                      | 0 V                |
|                              |        |   |                  | Ignition switch ON        | Front wiper switch HI                       | Battery voltage    |
| 7<br>(R)                     | Ground | Tail, license plate lamps & illuminations | Output           | Ignition switch OFF       | Lighting switch OFF                         | 0 V                |
|                              |        |   |                  | Ignition switch ON        | Lighting switch 1ST                         | Battery voltage    |
| 11<br>(BR)                   | Ground | Steering lock unit power supply           | Output           | Ignition switch OFF       | A few seconds after opening the driver door | Battery voltage    |
|                              |        |   |                  | Ignition switch LOCK      | Press the push-button ignition switch       | Battery voltage    |
|                              |        |   |                  | Ignition switch ACC or ON |   | 0 V                |
| 12<br>(B/W)                  | Ground | Ground                                    | —                | Ignition switch ON        |   | 0 V                |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                           |                  | Condition   |   | Value<br>(Approx.) |
|------------------------------|--------|---------------------------------------|------------------|---|---|--------------------|
| +                            | -      | Signal name                           | Input/<br>Output |   |   |                    |
| 13<br>(Y)                    | Ground | Fuel pump power supply                | Output           | Approximately 1 second or more after turning the ignition switch ON   |   | 0 V                |
|                              |        |                                       |                  | <ul style="list-style-type: none"> <li>Approximately 1 second after turning the ignition switch ON</li> <li>Engine running</li> </ul> |   | Battery voltage    |
| 16<br>(LG)                   | Ground | Front wiper auto stop                 | Input            | Ignition switch ON  | Front wiper stop position   | 0 V                |
|                              |        |                                       |                  |   | Any position other than front wiper stop position   | Battery voltage    |
| 19<br>(W)                    | Ground | Ignition relay power supply           | Output           | Ignition switch OFF   |   | 0 V                |
|                              |        |                                       |                  | Ignition switch ON  |   | Battery voltage    |
| 25<br>(G)                    | Ground | Ignition relay power supply           | Output           | Ignition switch OFF   |   | 0 V                |
|                              |        |                                       |                  | Ignition switch ON  |   | Battery voltage    |
| 26*1<br>(R)                  | Ground | Ignition relay power supply           | Output           | Ignition switch OFF   |   | 0 V                |
|                              |        |                                       |                  | Ignition switch ON  |   | Battery voltage    |
| 27<br>(BG)                   | Ground | Ignition relay monitor                | Input            | Ignition switch OFF or ACC  |   | Battery voltage    |
|                              |        |                                       |                  | Ignition switch ON  |   | 0 V                |
| 28<br>(L)                    | Ground | Push-button ignition switch           | Input            | Press the push-button ignition switch   |   | 0 V                |
|                              |        |                                       |                  | Release the push-button ignition switch   |   | Battery voltage    |
| 30<br>(GR)                   | Ground | Starter relay control                 | Input            | A/T models  | Selector lever in any position other than P or N (Ignition switch ON)   | 0 V                |
|                              |        |                                       |                  |   | Selector lever P or N (Ignition switch ON)  | Battery voltage    |
|                              |        |                                       |                  | M/T models  | Release the clutch pedal  | 0 V                |
|                              |        |                                       |                  |   | Depress the clutch pedal  | Battery voltage    |
| 32<br>(V)                    | Ground | Steering lock unit condition-1        | Input            | Steering lock is activated  |   | 0 V                |
|                              |        |                                       |                  | Steering lock is deactivated  |   | Battery voltage    |
| 33<br>(P)                    | Ground | Steering lock unit condition-2        | Input            | Steering lock is activated  |   | Battery voltage    |
|                              |        |                                       |                  | Steering lock is deactivated  |   | 0 V                |
| 36<br>(G)                    | Ground | Battery power supply                  | Input            | Ignition switch OFF   |   | Battery voltage    |
| 39<br>(P)                    | —      | CAN-L                                 | Input/<br>Output | —   |   | —                  |
| 40<br>(L)                    | —      | CAN-H                                 | Input/<br>Output | —   |   | —                  |
| 41<br>(B/W)                  | Ground | Ground                                | —                | Ignition switch ON  |   | 0 V                |
| 42<br>(Y)                    | Ground | Cooling fan relay control             | Input            | Ignition switch OFF or ACC  |   | 0 V                |
|                              |        |                                       |                  | Ignition switch ON  |   | 0.7 V              |
| 43*2<br>(SB)                 | Ground | A/T shift selector (Detention switch) | Input            | Ignition switch ON  | Press the selector button (selector lever P)  | Battery voltage    |
|                              |        |                                       |                  |   | <ul style="list-style-type: none"> <li>Selector lever in any position other than P</li> <li>Release the selector button (selector lever P)</li> </ul> |                    |
| 44<br>(LG)                   | Ground | Horn relay control                    | Input            | The horn is deactivated   |   | Battery voltage    |
|                              |        |                                       |                  | The horn is activated   |   | 0 V                |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)




## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                               |                  | Condition   | Value<br>(Approx.)  |                 |
|------------------------------|--------|---|------------------|---|---|-----------------|
|                              |        | Signal name                               | Input/<br>Output |   |   |                 |
| +                            | -      |   |                  |   |   |                 |
| 45<br>(G)                    | Ground | Anti theft horn relay control             | Input            | The horn is deactivated   | Battery voltage   |                 |
|                              |        |   |                  | The horn is activated   | 0 V   |                 |
| 46<br>(W)                    | Ground | Starter relay control                     | Input            | A/T models  | Selector lever in any position other than P or N (Ignition switch ON) | 0 V             |
|                              |        |   |                  |   | Selector lever P or N (Ignition switch ON)                            | Battery voltage |
|                              |        |   |                  | M/T models  | Release the clutch pedal  | 0 V             |
|                              |        |   |                  |   | Depress the clutch pedal  | Battery voltage |
| 48<br>(BR)                   | Ground | A/C relay power supply                    | Output           | Engine running  | A/C switch OFF  | 0 V             |
|                              |        |   |                  |   | A/C switch ON (A/C compressor is operating)                           | Battery voltage |
| 49<br>(BG)                   | Ground | ECM relay power supply                    | Output           | Ignition switch OFF (More than a few seconds after turning ignition switch OFF)   | 0 V   |                 |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul> | Battery voltage   |                 |
| 51<br>(Y)                    | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   | 0 V   |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage   |                 |
| 53<br>(W)                    | Ground | ECM relay power supply                    | Output           | Ignition switch OFF (More than a few seconds after turning ignition switch OFF)   | 0 V   |                 |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul> | Battery voltage   |                 |
| 54<br>(P)                    | Ground | Throttle control motor relay power supply | Output           | Ignition switch OFF (More than a few seconds after turning ignition switch OFF)   | 0 V   |                 |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul> | Battery voltage   |                 |
| 55<br>(SB)                   | Ground | ECM power supply                          | Output           | Ignition switch OFF   | Battery voltage   |                 |
| 56<br>(LG)                   | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   | 0 V   |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage   |                 |
| 57<br>(G)                    | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   | 0 V   |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage   |                 |
| 58*2<br>(GR)                 | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   | 0 V   |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage   |                 |
| 69<br>(BR)                   | Ground | ECM relay control                         | Output           | Ignition switch OFF (More than a few seconds after turning ignition switch OFF)   | Battery voltage   |                 |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul> | 0 - 1.5 V   |                 |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
MWI  
O  
P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >
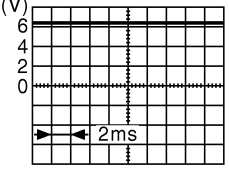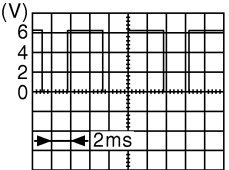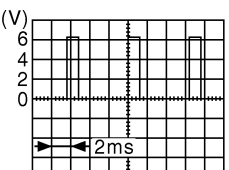
| Terminal No.<br>(Wire color) |        | Description                               |                  | Condition   |                     | Value<br>(Approx.)  |
|------------------------------|--------|---|------------------|---|---------------------|---|
| +                            | -      | Signal name                               | Input/<br>Output |   |                     |   |
| 70<br>(BG)                   | Ground | Throttle control motor re-<br>lay control | Output           | Ignition switch ON → OFF  |                     | 0 - 1.0 V<br>↓<br>Battery voltage<br>↓<br>0 V   |
|                              |        |   |                  | Ignition switch ON  |                     | 0 - 1.0 V   |
| 73*3<br>(P)                  | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   |                     | 0 V   |
|                              |        |   |                  | Ignition switch ON  |                     | Battery voltage   |
| 74<br>(G)                    | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   |                     | 0 V   |
|                              |        |   |                  | Ignition switch ON  |                     | Battery voltage   |
| 75<br>(SB)                   | Ground | Oil pressure switch                       | Input            | Ignition switch ON  | Engine stopped      | 0 V   |
|                              |        |   |                  | Ignition switch ON  | Engine running      | Battery voltage   |
| 76<br>(Y)                    | Ground | Power generation com-<br>mand signal      | Output           | Ignition switch ON  |                     |  <p style="text-align: right;">JPMA0001GB</p> <p style="text-align: center;">6.3 V</p>   |
|                              |        |   |                  | 40% is set on "ACTIVE TEST", "AL-<br>TERNATOR DUTY" of "ENGINE"   |                     |  <p style="text-align: right;">JPMA0002GB</p> <p style="text-align: center;">3.8 V</p> |
|                              |        |   |                  | 80% is set on "ACTIVE TEST", "AL-<br>TERNATOR DUTY" of "ENGINE"   |                     |  <p style="text-align: right;">JPMA0003GB</p> <p style="text-align: center;">1.4 V</p> |
| 77<br>(R)                    | Ground | Fuel pump relay control                   | Output           | <ul style="list-style-type: none"> <li>• Approximately 1 second after turning the ignition switch ON</li> <li>• Engine running</li> </ul> |                     | 0 - 1.0 V   |
|                              |        |   |                  | Approximately 1 second or more after turning the ignition switch ON   |                     | Battery voltage   |
| 80<br>(W)                    | Ground | Starter motor                             | Output           | At engine cranking  |                     | Battery voltage   |
| 83<br>(R)                    | Ground | Headlamp LO (RH)                          | Output           | Ignition switch ON  | Lighting switch OFF | 0 V   |
|                              |        |   |                  | Ignition switch ON  | Lighting switch 2ND | Battery voltage   |
| 84<br>(P)                    | Ground | Headlamp LO (LH)                          | Output           | Ignition switch ON  | Lighting switch OFF | 0 V   |
|                              |        |   |                  | Ignition switch ON  | Lighting switch 2ND | Battery voltage   |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description              |                  | Condition                 |   | Value<br>(Approx.) |
|------------------------------|--------|--------------------------|------------------|---------------------------|---|--------------------|
| +                            | -      | Signal name              | Input/<br>Output |                           |   |                    |
| 86<br>(W)                    | Ground | Front fog lamp (RH)      | Output           | Lighting<br>switch<br>2ND | Front fog lamp switch OFF   | 0 V                |
|                              |        |                          |                  |                           | <ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime running light activated (Only for Canada)</li> </ul> | Battery voltage    |
| 87<br>(L)                    | Ground | Front fog lamp (LH)      | Output           | Lighting<br>switch<br>2ND | Front fog lamp switch OFF   | 0 V                |
|                              |        |                          |                  |                           | <ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime running light activated (Only for Canada)</li> </ul> | Battery voltage    |
| 88<br>(G)                    | Ground | Washer pump power supply | Output           | Ignition switch ON        |   | Battery voltage    |
| 89<br>(BR)                   | Ground | Headlamp HI (RH)         | Output           | Ignition<br>switch ON     | Lighting switch OFF   | 0 V                |
|                              |        |                          |                  |                           | <ul style="list-style-type: none"> <li>• Lighting switch HI</li> <li>• Lighting switch PASS</li> </ul>                                    | Battery voltage    |
| 90<br>(LG)                   | Ground | Headlamp HI (LH)         | Output           | Ignition<br>switch ON     | Lighting switch OFF   | 0 V                |
|                              |        |                          |                  |                           | <ul style="list-style-type: none"> <li>• Lighting switch HI</li> <li>• Lighting switch PASS</li> </ul>                                    | Battery voltage    |
| 91<br>(P)                    | Ground | Parking lamp (RH)        | Output           | Ignition<br>switch ON     | Lighting switch OFF   | 0 V                |
|                              |        |                          |                  |                           | Lighting switch 1ST   | Battery voltage    |
| 92<br>(BG)                   | Ground | Parking lamp (LH)        | Output           | Ignition<br>switch ON     | Lighting switch OFF   | 0 V                |
|                              |        |                          |                  |                           | Lighting switch 1ST   | Battery voltage    |
| 97<br>(V)                    | Ground | Cooling fan control      | Output           | Engine idling             |   | 0 - 5 V            |
| 104<br>(LG)                  | Ground | Hood switch              | Input            | Close the hood            |   | Battery voltage    |
|                              |        |                          |                  | Open the hood             |   | 0 V                |

\*1: Only for the models with ICC system

\*2: A/T models only


\*3: M/T models only

MWI



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

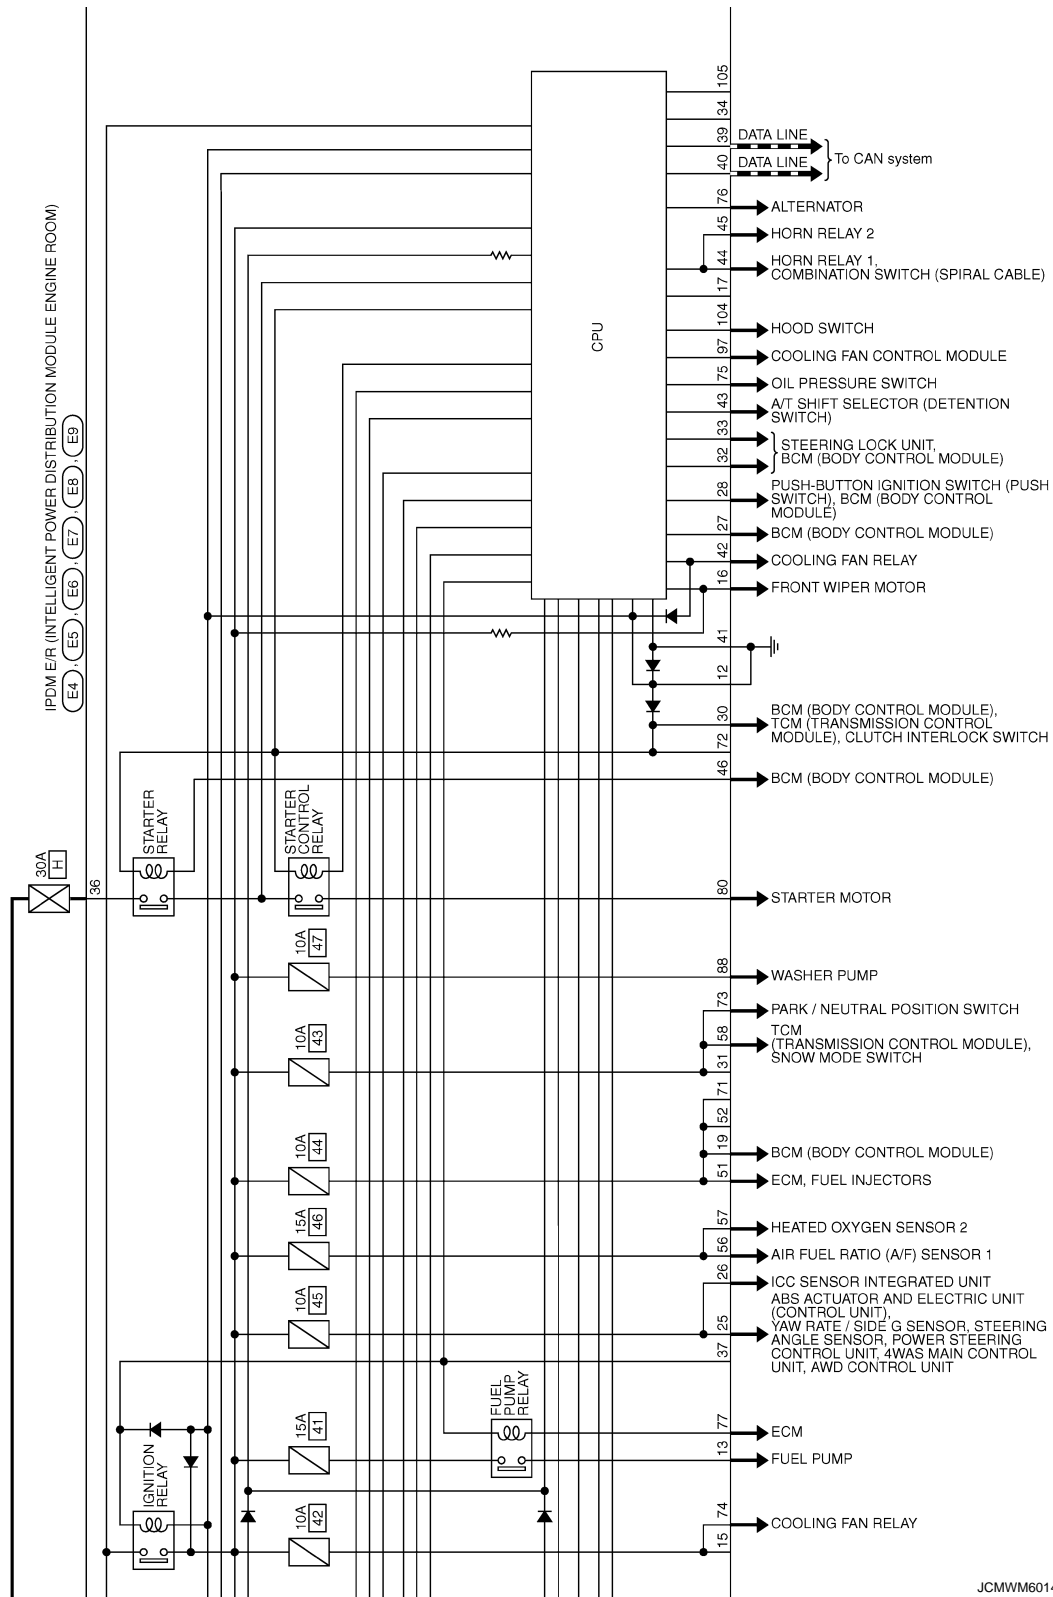

JCMWM6014GI


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

---

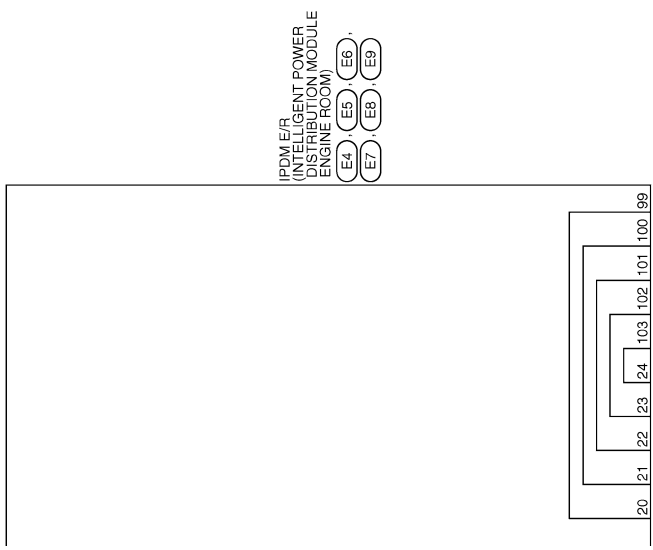

JCMWM6015G



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

|                |  |
|----------------|--|
| Connector No.  | E4   |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | LC2PE-MC   |



|   |   |
|---|---|
| 1 | 2 |
|---|---|

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             | -                           |
| 2            | L             | -                           |

|                |  |
|----------------|--|
| Connector No.  | E5   |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH20FW-CS12-M4-1V  |



|   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 5 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 |
|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 4            | V             | -                           |
| 5            | L             | -                           |
| 6            | R             | -                           |
| 7            | BR            | -                           |
| 11           | BR            | -                           |
| 12           | B/W           | -                           |
| 13           | Y             | -                           |
| 16           | LG            | -                           |
| 19           | W             | -                           |
| 25           | G             | -                           |
| 26           | R             | -                           |
| 27           | BG            | -                           |
| 28           | L             | -                           |
| 30           | GR            | -                           |
| 32           | V             | -                           |
| 33           | P             | -                           |
| 36           | G             | -                           |

|                |  |
|----------------|--|
| Connector No.  | E6   |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH20FW-NH  |



|    |    |    |    |
|----|----|----|----|
| 42 | 41 | 40 | 39 |
|----|----|----|----|

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 39           | P             | -                           |
| 40           | L             | -                           |
| 41           | B/W           | -                           |
| 42           | Y             | -                           |
| 43           | SB            | -                           |
| 44           | LG            | -                           |
| 45           | G             | -                           |
| 46           | W             | -                           |

|                |  |
|----------------|--|
| Connector No.  | E7   |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH20FW-CS12-M4   |



|    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |   |   |   |   |   |   |   |   |   |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|---|---|---|---|---|---|---|---|---|
| 53 | 52 | 51 | 50 | 49 | 48 | 47 | 46 | 45 | 44 | 43 | 42 | 41 | 40 | 39 | 38 | 37 | 36 | 35 | 34 | 33 | 32 | 31 | 30 | 29 | 28 | 27 | 26 | 25 | 24 | 23 | 22 | 21 | 20 | 19 | 18 | 17 | 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|---|---|---|---|---|---|---|---|---|

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 48           | BR            | -                           |
| 49           | BG            | -                           |
| 51           | Y             | -                           |
| 53           | W             | -                           |
| 54           | P             | -                           |
| 55           | SB            | -                           |
| 56           | LG            | -                           |
| 57           | G             | -                           |
| 58           | GR            | -                           |
| 69           | BR            | -                           |
| 70           | BG            | -                           |
| 73           | P             | -                           |
| 74           | G             | -                           |
| 75           | SB            | -                           |

|    |   |   |
|----|---|---|
| 76 | Y | - |
| 77 | R | - |
| 80 | W | - |

|                |  |
|----------------|--|
| Connector No.  | E8   |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | NS08FW-CS  |



|    |    |    |
|----|----|----|
| 85 | 84 | 83 |
|----|----|----|

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 83           | R             | -                           |
| 84           | P             | -                           |
| 85           | W             | -                           |
| 87           | L             | -                           |
| 88           | G             | -                           |
| 89           | BR            | -                           |
| 90           | LG            | -                           |

|                |  |
|----------------|--|
| Connector No.  | E9   |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH18FW-NH  |



|    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|
| 98 | 97 | 96 | 95 | 94 | 93 | 92 | 91 |
|----|----|----|----|----|----|----|----|

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 91           | P             | -                           |
| 92           | BG            | -                           |
| 97           | V             | -                           |
| 104          | LG            | -                           |

### Fail-safe

### CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

| Control part   | Fail-safe operation   |
|----------------|---|
| Cooling fan    | <ul style="list-style-type: none"> <li>• Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON</li> <li>• Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF</li> </ul> |
| A/C compressor | A/C relay OFF   |
| Alternator     | Outputs the power generation command signal (PWM signal) 0%   |

### If No CAN Communication Is Available With BCM

| Control part   | Fail-safe operation  |
|--|--|
| Headlamp   | <ul style="list-style-type: none"> <li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>• Headlamp high relay OFF</li> </ul>  |
| <ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• Side maker lamp</li> <li>• License plate lamps</li> <li>• Illuminations</li> <li>• Tail lamps</li> </ul> | <ul style="list-style-type: none"> <li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>   |
| Front wiper  | <ul style="list-style-type: none"> <li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul> |
| Horn   | Horn relay OFF   |
| Ignition relay   | The status just before activation of fail-safe is maintained.  |
| Starter motor  | Starter control relay OFF  |
| Steering lock unit   | Steering lock relay OFF  |

### IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

| Voltage judgment            |                                     | IPDM E/R judgment         | Operation  |
|-----------------------------|-------------------------------------|---------------------------|--|
| Ignition relay contact side | Ignition relay excitation coil side |                           |  |
| ON                          | ON                                  | Ignition relay ON normal  | —  |
| OFF                         | OFF                                 | Ignition relay OFF normal | —  |
| ON                          | OFF                                 | Ignition relay ON stuck   | <ul style="list-style-type: none"> <li>• Detects DTC "B2098: IGN RELAY ON"</li> <li>• Turns ON the tail lamp relay for 10 minutes</li> </ul> |
| OFF                         | ON                                  | Ignition relay OFF stuck  | Detects DTC "B2099: IGN RELAY OFF"   |

### FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

| Ignition switch | Front wiper switch | Front wiper stop position signal   |
|-----------------|--------------------|--|
| ON              | OFF                | The front wiper stop position signal (stop position) cannot be input for 10 seconds. |
|                 | ON                 | The front wiper stop position signal does not change for 10 seconds.                 |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

### NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

### STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

### DTC Index

INFOID:000000005890538

### NOTE:

- The details of time display are as follows.
- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now.
- The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

| CONSULT display                                      | Fail-safe | Refer to                |
|--|-----------|-------------------------|
| No DTC is detected. further testing may be required. | —         | —                       |
| U1000: CAN COMM CIRCUIT                              | ×         | <a href="#">PCS-14</a>  |
| B2098: IGN RELAY ON                                  | ×         | <a href="#">PCS-15</a>  |
| B2099: IGN RELAY OFF                                 | —         | <a href="#">PCS-16</a>  |
| B2108: STRG LCK RELAY ON                             | —         | <a href="#">SEC-104</a> |
| B2109: STRG LCK RELAY OFF                            | —         | <a href="#">SEC-106</a> |
| B210A: STRG LCK STATE SW                             | —         | <a href="#">SEC-107</a> |
| B210B: START CONT RLY ON                             | —         | <a href="#">SEC-111</a> |
| B210C: START CONT RLY OFF                            | —         | <a href="#">SEC-112</a> |
| B210D: STARTER RELAY ON                              | —         | <a href="#">SEC-113</a> |
| B210E: STARTER RELAY OFF                             | —         | <a href="#">SEC-114</a> |
| B210F: INTRLCK/PNP SW ON                             | —         | <a href="#">SEC-116</a> |
| B2110: INTRLCK/PNP SW OFF                            | —         | <a href="#">SEC-118</a> |

MWI

# THE FUEL GAUGE POINTER DOES NOT MOVE

< SYMPTOM DIAGNOSIS >

---

## SYMPTOM DIAGNOSIS

### THE FUEL GAUGE POINTER DOES NOT MOVE

#### Description

INFOID:000000005807854

Fuel gauge needle will not move from a certain position.

#### Diagnosis Procedure

INFOID:000000005807855

#### 1. CHECK UNIFIED METER AND A/C AMP. OUTPUT SIGNAL

---

1. Connect the CONSULT-III.
2. Select the "Data Monitor" of the "METER/M&A" and compare the "FUEL METER" monitor value with the fuel gauge reading on the combination meter. Refer to [MWI-53, "Component Function Check"](#).

##### Does monitor value match fuel gauge reading?

- YES >> GO TO 2.  
NO >> Replace combination meter.

#### 2. CHECK FUEL LEVEL SENSOR SIGNAL CIRCUIT

---

Check the fuel level sensor signal circuit. Refer to [MWI-53, "Diagnosis Procedure"](#).

##### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair harness or connector.

#### 3. CHECK FUEL LEVEL SENSOR UNIT

---

Check the fuel level sensor unit. Refer to [MWI-54, "Component Inspection"](#).

##### Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace fuel level sensor unit. Refer to [FL-5, "Removal and Installation"](#).

#### 4. CHECK FLOAT INTERFERENCE

---

Check that the float arm interferes with or binds to other components in the fuel tank.

##### Is the inspection result normal?

- YES >> Replace unified meter and A/C amp.  
NO >> Repair or replace malfunctioning parts.

# THE METER CONTROL SWITCH IS INOPERATIVE

< SYMPTOM DIAGNOSIS >

---

## THE METER CONTROL SWITCH IS INOPERATIVE

### Description

INFOID:000000005807856

If any of the following malfunctions is found for the meter control switch operation.

- All switches are inoperative.
- The specified switch cannot be operated.

### Diagnosis Procedure

INFOID:000000005807857

#### 1. CHECK METER CONTROL SWITCH SIGNAL CIRCUIT

---

Check the meter control switch signal circuit. Refer to [MWI-56, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### 2. CHECK METER CONTROL SWITCH

---

Check the meter control switch. Refer to [MWI-57, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace combination meter.

NG >> Replace meter control switch.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

---

## THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

### Description

INFOID:000000005807858

The oil pressure warning lamp stays off when the ignition switch is turned ON.

### Diagnosis Procedure

INFOID:000000005807859

#### 1. CHECK OIL PRESSURE WARNING LAMP

---

Perform auto active test of IPDM E/R. Refer to [PCS-9, "Diagnosis Description"](#).

Is oil pressure warning lamp illuminated?

- YES >> GO TO 2.
- NO >> GO TO 4.

#### 2. CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

---

Check the oil pressure switch signal circuit. Refer to [MWI-58, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair harness or connector.

#### 3. CHECK OIL PRESSURE SWITCH

---

Check the oil pressure switch. Refer to [MWI-58, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace IPDM E/R.
- NO >> Replace oil pressure switch.

#### 4. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

- 
1. Connect the CONSULT-III.
  2. Select the "Data Monitor" of the "METER/M&A" and check the "OIL W/L" monitor value. Refer to [MWI-58, "Component Function Check"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
- NO >> Replace BCM. Refer to [BCS-78, "Removal and Installation"](#).

# THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

## THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

### Description

INFOID:000000005807860

The oil pressure warning lamp remains illuminated while the engine is running. (normal oil pressure)

### Diagnosis Procedure

INFOID:000000005807861

#### 1. CHECK OIL PRESSURE WARNING LAMP

Perform auto active test of IPDM E/R. Refer to [PCS-9, "Diagnosis Description"](#).

Is oil pressure warning lamp illuminated?

- YES >> GO TO 2.
- NO >> GO TO 5.

#### 2. CHECK IPDM E/R OUTPUT VOLTAGE

1. Disconnect the oil pressure switch connector.
2. Turn ignition switch ON.
3. Check voltage between the oil pressure switch harness connector terminal and ground.

| Terminals                        |          | (-)    | Voltage<br>(Approx.) |
|----------------------------------|----------|--------|----------------------|
| (+)                              |          |        |                      |
| Oil pressure switch<br>Connector | Terminal |        |                      |
| F37                              | 1        | Ground | 12 V                 |

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 4.

#### 3. CHECK OIL PRESSURE SWITCH

Check the oil pressure switch. Refer to [MWI-58, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-32, "Removal and Installation"](#).
- NO >> Replace oil pressure switch.

#### 4. CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-58, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair harness or connector.

#### 5. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" of the "METER/M&A" and check the "OIL W/L" monitor value. Refer to [MWI-58, "Component Function Check"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
- NO >> Replace BCM. Refer to [BCS-78, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

---

## THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

### Description

INFOID:000000005807862

- The parking brake warning is displayed during vehicle travel even though the parking brake is released.
- The parking brake warning is not displayed even though driving the vehicle with the parking brake applied.

### Diagnosis Procedure

INFOID:000000005807863

---

#### 1. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

1. Connect the CONSULT-III.
2. Select the "Data Monitor" of the "METER/M&A" and check the "PKB SW" monitor value. Refer to [MWI-60, "Component Function Check"](#).

Is the inspection result normal?

- YES >> Replace combination meter.  
NO >> GO TO 2.

---

#### 2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

Check the parking brake switch signal circuit. Refer to [MWI-60, "Diagnosis Procedure \(A/T models\)"](#) or [MWI-61, "Diagnosis Procedure \(M/T models\)"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NG >> Repair harness or connector.

---

#### 3. CHECK PARKING BRAKE SWITCH

Check the parking brake switch. Refer to [BRC-71, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.  
NO >> Replace parking brake switch.



# THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

## THE LOW WASHER FLUID WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

### Description

INFOID:000000005807864

- The warning is still displayed even after washer fluid is added.
- The warning is not displayed even though the washer tank is empty.

### Diagnosis Procedure

INFOID:000000005807865

#### 1.CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

Check the washer level switch signal circuit. Refer to [MWI-63. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair harness or connector.

#### 2.CHECK WASHER LEVEL SWITCH

Check the washer level switch. Refer to [MWI-63. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
- NO >> Replace washer level switch. Refer to [WW-50. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

## THE DOOR OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

### Description

INFOID:000000005807866

- The door ajar warning is displayed even though all of the doors are closed.
- The door ajar warning is not displayed even though a door is ajar.

### Diagnosis Procedure

INFOID:000000005807867

#### 1. CHECK BCM INPUT SIGNAL

1. Connect the CONSULT-III.
2. Check the BCM input signals. Refer to [DLK-62, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> GO TO 3.

#### 2. CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "DOOR W/L" monitor value.

|             |       |
|-------------|-------|
| "DOOR W/L"  |       |
| Door open   | : On  |
| Door closed | : Off |

Is the inspection result normal?

- YES >> Replace combination meter.
- NO >> Replace BCM. Refer to [BCS-78, "Removal and Installation"](#).

#### 3. CHECK DOOR SWITCH SIGNAL CIRCUIT

Check the door switch signal circuit. Refer to [DLK-62, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair harness or connector.

#### 4. CHECK DOOR SWITCH

Check the door switch. Refer to [DLK-63, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
- NO >> Replace applicable door switch. Refer to [DLK-241, "Removal and Installation"](#).

# THE TRUNK OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

< SYMPTOM DIAGNOSIS >

## THE TRUNK OPEN WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY

### Description

INFOID:000000005807868

- The trunk ajar warning is displayed continuously even though the trunk lid is closed.
- The trunk ajar warning is not displayed even though the trunk lid is open.

### Diagnosis Procedure

INFOID:000000005807869

#### 1.CHECK BCM INPUT SIGNAL

1. Connect the CONSULT-III.
2. Check the BCM input signals. Refer to [DLK-71, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> GO TO 3.

#### 2.CHECK UNIFIED METER AND A/C AMP. INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "TRUNK/GLAS-H" monitor value.

"TRUNK/GLAS-H"

Trunk lid open : On

Trunk lid closed : Off

Is the inspection result normal?

- YES >> Replace combination meter.
- NO >> Replace BCM.

#### 3.CHECK TRUNK ROOM LAMP SWITCH SIGNAL CIRCUIT

Check the trunk room lamp switch signal circuit. Refer to [DLK-71, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair harness or connector.

#### 4.CHECK TRUNK ROOM LAMP SWITCH

Check the trunk room lamp switch. Refer to [DLK-72, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
- NO >> Replace trunk lid lock assembly. Refer to [DLK-239, "TRUNK LID LOCK : Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

MWI

O  
P

# THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

< SYMPTOM DIAGNOSIS >

---

## THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

### Description

INFOID:000000005807870

- The displayed ambient air temperature is higher than the actual temperature.
- The displayed ambient air temperature is lower than the actual temperature.

### Diagnosis Procedure

INFOID:000000005807871

#### **NOTE:**

Check that the symptom is not applicable to the normal operating condition before starting diagnosis. Refer to [MWI-125, "INFORMATION DISPLAY : Description"](#).

#### **1.CHECK AMBIENT SENSOR SIGNAL CIRCUIT**

---

Check the ambient sensor signal circuit. Refer to [HAC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### **2.CHECK AMBIENT SENSOR**

---

Check the ambient sensor. Refer to [HAC-88, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace unified meter and A/C amp.

NO >> Replace ambient sensor. Refer to [HAC-143, "Removal and Installation"](#).

# NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

## NORMAL OPERATING CONDITION COMPASS

### COMPASS : Description

INFOID:000000005807872

#### COMPASS

- The electronic compass is highly protected from changes in most magnetic fields. However, some large changes in magnetic fields can affect it. Some examples are (but not limited to): high tension power lines, large steel buildings, subways, steel bridges, automatic car washes, large piles of scrap metal, etc. While this does not happen very often, it is possible.
- During normal operation, the Compass Mirror will continuously update the compass calibration to adjust for gradual changes in the vehicle's magnetic "remnant" field. If the vehicle is subjected to high magnetic influences, the compass may appear to indicate false headings, become locked, or appear that it is unable to be calibrated. If this occurs, perform the calibration procedure.
- If at any time the compass continually displays the incorrect direction or the reading is erratic or locked, verify the correct zone variance.

#### Symptom Chart

| Symptom   | Cause   | Solution / Reference  |
|---|---|---|
| The compass display reads "C".                                    | <ul style="list-style-type: none"><li>• Compass is not calibrated.</li><li>• Incorrect zone variance setting.</li><li>• Large change in magnetic field (Steel bridges, subways, concentrations of metal, carwashes, etc.)</li><li>• Compass was calibrated incorrectly or in the presence of a strong magnetic field.</li></ul> | Perform Calibration. Refer to <a href="#">MWI-32, "Description"</a> . |
| Compass shows the wrong direction.                                |   |   |
| Compass does not change direction appears "Locked".               |   |   |
| Compass does not show all the directions, one or more is missing. |   |   |
| The compass was calibrated but it "loses" calibration.            |   |   |
| On long trips the compass shows the wrong direction.              | Perform Zone Variation Setting if correct reading is desired in that location. Refer to <a href="#">MWI-32, "Description"</a> .   |   |

## INFORMATION DISPLAY

### INFORMATION DISPLAY : Description

INFOID:000000005807873

#### AMBIENT AIR TEMPERATURE

The displayed ambient air temperature on the information display may differ from the actual temperature because it is a corrected value calculated from the ambient sensor signal by the unified meter and A/C amp. Refer to [MWI-27, "INFORMATION DISPLAY : System Description"](#) for details on the correction process.

#### POSSIBLE DRIVING DISTANCE

The calculated possible driving distance may differ from the actual distance to empty if the refueling amount is approximately 15 ℓ (4 US gal, 3-3/10 Imp gal) or less. This is because the refuel control (moves the fuel gauge needle quicker than normal judging that the driver is refueling the vehicle) is not performed in such a case.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

MWI

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005809244

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Battery Service

INFOID:000000005809245

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

# PREPARATION


< PREPARATION >

## PREPARATION

### PREPARATION

#### Commercial Service Tools

INFOID:000000005874455
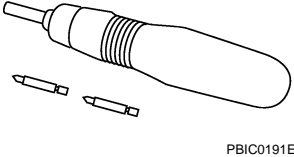
| Tool name  | Description   |
|--|---|
| <p data-bbox="167 520 272 541">Power tool</p>  <p data-bbox="852 632 922 646">PBIC0191E</p> | <p data-bbox="1013 520 1195 541">Loosening screws</p> |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

# COMBINATION METER

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### COMBINATION METER

#### Exploded View


INFOID:000000005807875

#### REMOVAL

Cluster lid A assembly


Refer to [IP-12. "A/T MODELS : Exploded View"](#) (A/T models) or [IP-22. "M/T MODELS : Exploded View"](#) (M/T models).

Combination meter

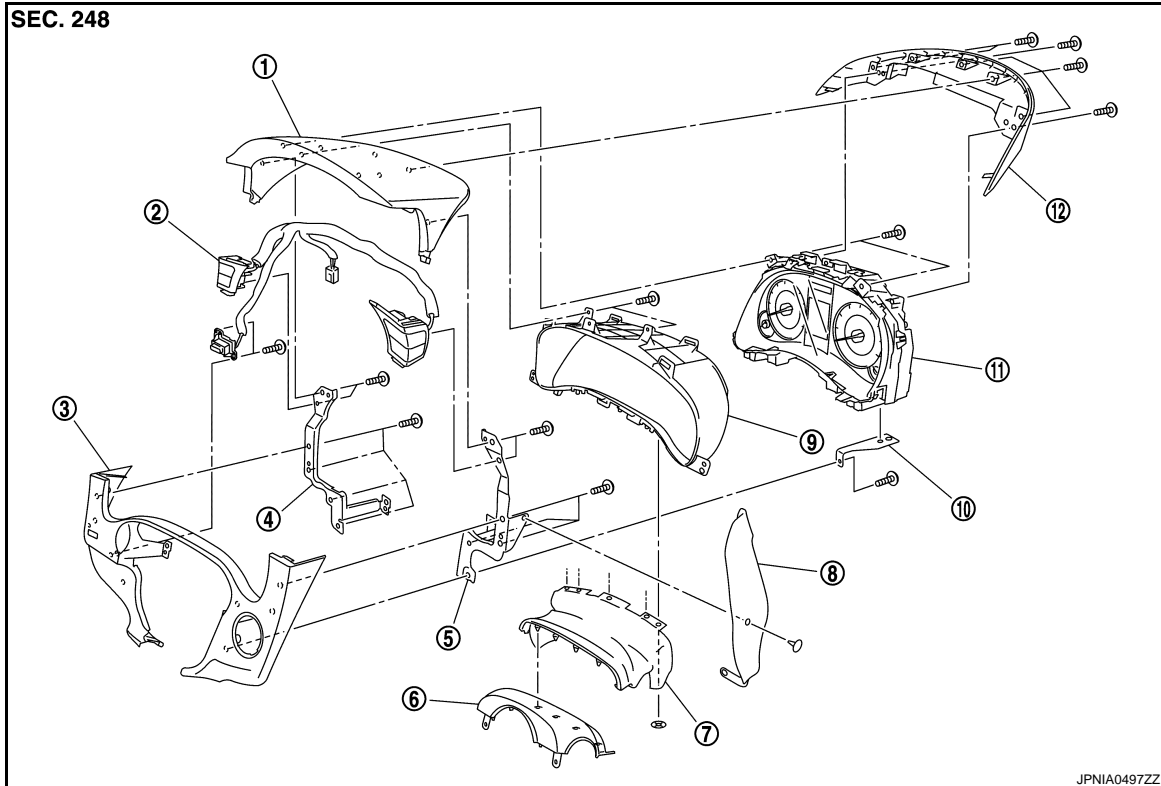

- |                            |                         |                                |
|----------------------------|-------------------------|--------------------------------|
| 1. Cluster lid A           | 2. Meter control switch | 3. Cluster lid A under cover   |
| 4. Bracket (LH)            | 5. Bracket (RH)         | 6. Steering column cover upper |
| 7. Steering column blind   | 8. Blind                | 9. Meter housing               |
| 10. Combination meter stay | 11. Combination meter   | 12. Cluster lid A cover        |

#### DISASSEMBLY

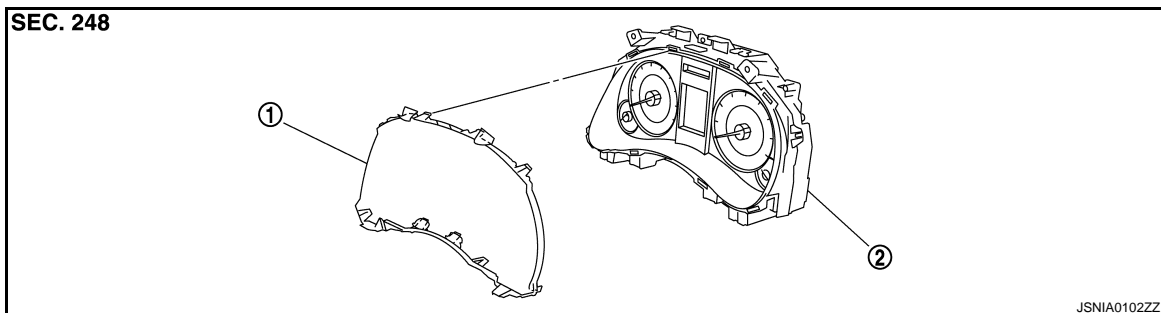

- |                |                               |
|----------------|-------------------------------|
| 1. Front cover | 2. Unified meter control unit |
|----------------|-------------------------------|



# COMBINATION METER


## < REMOVAL AND INSTALLATION >

### Removal and Installation


INFOID:000000005807876

#### REMOVAL

1. Remove cluster lid A assembly. Refer to [JP-13, "A/T MODELS : Removal and Installation"](#) (A/T models) or [JP-23, "M/T MODELS : Removal and Installation"](#) (M/T models).
2. Remove screw (A) and remove combination meter stay (1).
3. Remove screws (B) and remove cluster lid A cover (2).

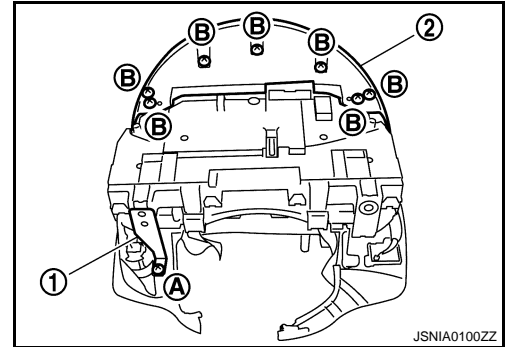

4. Remove screws (A), (B) and remove combination meter (1).
5. Remove meter control switch connector (2) from combination meter.

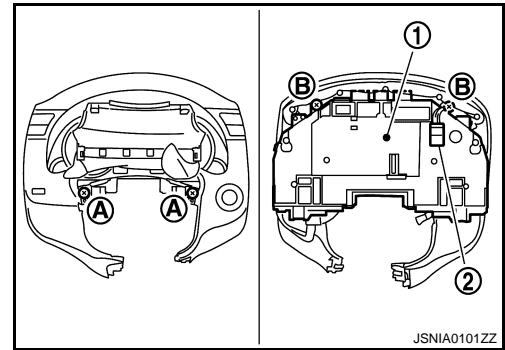

#### INSTALLATION

Install in the reverse order of removal.

#### Disassembly and Assembly

INFOID:000000005807877

#### DISASSEMBLY

Disengage the tabs to separate front cover.

#### ASSEMBLY

Assemble in the reverse order of disassembly.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

MWI

# UNIFIED METER AND A/C AMP.

< REMOVAL AND INSTALLATION >

## UNIFIED METER AND A/C AMP.


### Exploded View

INFOID:000000005807878

#### REMOVAL

Refer to [IP-12. "A/T MODELS : Exploded View"](#) (A/T models) or [IP-22. "M/T MODELS : Exploded View"](#) (M/T models).

#### DISASSEMBLY

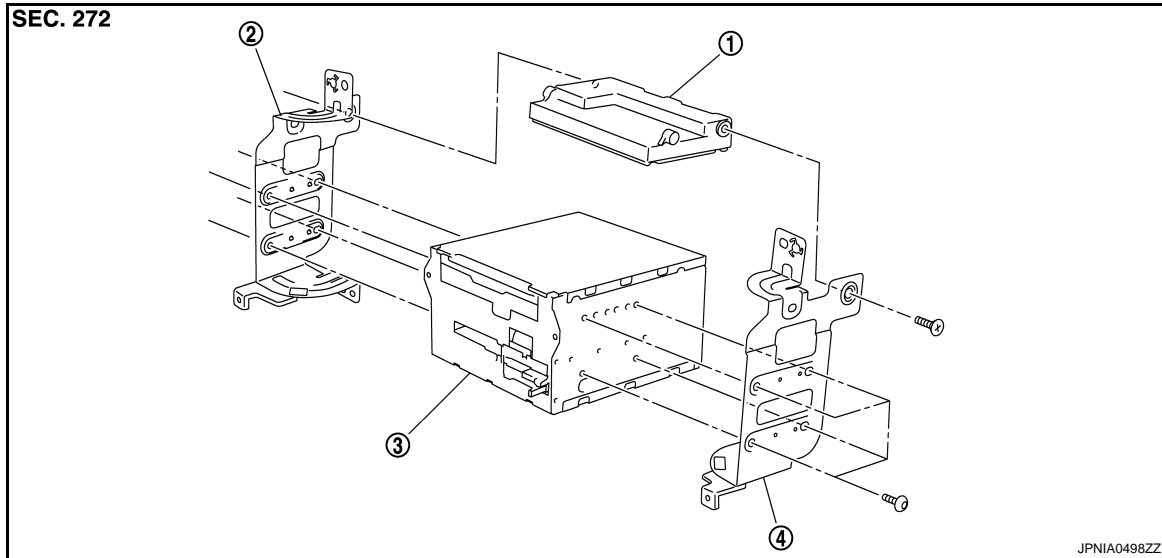

1. Unified meter and A/C amp.
2. Bracket (LH)
3. AV control unit
4. Bracket (RH)

### Removal and Installation

INFOID:000000005807879

#### REMOVAL

1. Remove the display unit. Refer to [AV-90. "Removal and Installation"](#) (Base audio without navigation), [AV-202. "Removal and Installation"](#) (Base audio with rear view camera), [AV-329. "Removal and Installation"](#) (BOSE audio without navigation), or [AV-478. "Removal and Installation"](#) (BOSE audio with navigation).
2. Remove the unified meter and A/C amp and AV control unit as an assembly.
3. Remove the bracket screws and remove the unified meter and A/C amp.

#### INSTALLATION

Install in the reverse order of removal.

#### NOTE:

- Unified meter and A/C amp. screws are different from other screws. Never confuse them when installing.
- Since AV control unit connector and unified meter and A/C amp. connector have the same form, be careful not insert them wrongly.

# METER CONTROL SWITCH

< REMOVAL AND INSTALLATION >

## METER CONTROL SWITCH


### Exploded View

INFOID:000000005807880

### REMOVAL

Refer to [IP-12. "A/T MODELS : Exploded View"](#) (A/T models) or [IP-22. "M/T MODELS : Exploded View"](#) (M/T models).

### DISASSEMBLY

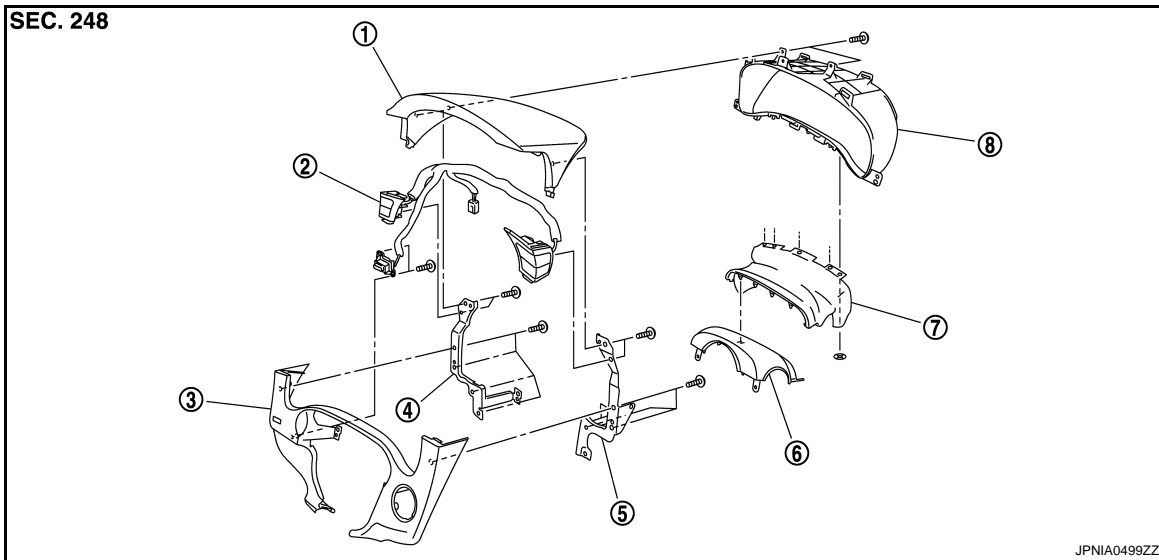


- |                          |                         |                                |
|--------------------------|-------------------------|--------------------------------|
| 1. Cluster lid A         | 2. Meter control switch | 3. Cluster lid A under cover   |
| 4. Bracket (LH)          | 5. Bracket (RH)         | 6. Steering column cover upper |
| 7. Steering column blind | 8. Meter housing        |                                |

### Removal and Installation

INFOID:000000005807881

### REMOVAL

1. Remove combination meter.
2. Remove screws (A) and remove bracket RH (1), LH (2).
3. Remove screws (B) and remove meter control switch.

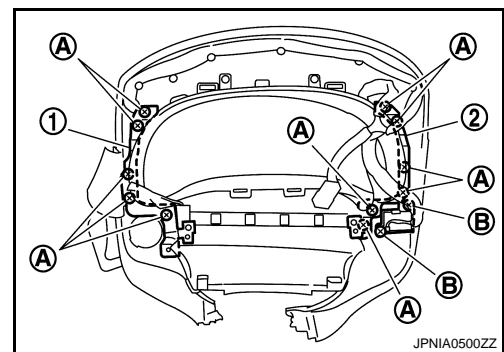

### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

MWI

# COMPASS

< REMOVAL AND INSTALLATION >

---

## COMPASS

### Exploded View

INFOID:000000005807882

Refer to [MIR-17. "Exploded View"](#).

### Removal and Installation

INFOID:000000005807883

Refer to [MIR-17. "Removal and Installation"](#).

# CLOCK

< REMOVAL AND INSTALLATION >

## CLOCK


### Exploded View

INFOID:000000005807884

### REMOVAL

Refer to [IP-12. "A/T MODELS : Exploded View"](#) (A/T models) or [IP-22. "M/T MODELS : Exploded View"](#) (M/T models).

### DISASSEMBLY

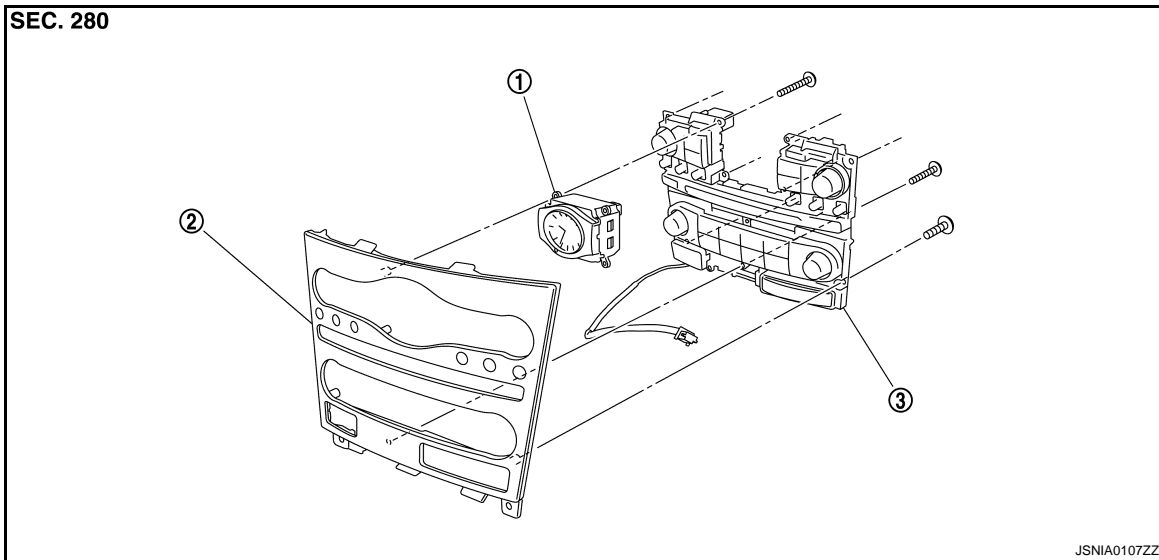

1. Clock

2. Cluster lid C


3. Preset switch

### Removal and Installation

INFOID:000000005807885

### REMOVAL

1. Remove cluster lid C assembly. Refer to [IP-13. "A/T MODELS : Removal and Installation"](#) (A/T models) or [IP-23. "M/T MODELS : Removal and Installation"](#) (M/T models).
2. Remove screws (A), (B), (C) and remove clock (1) in conjunction with preset switch (2) from cluster lid C.
3. Disengage the tabs to separate clock.

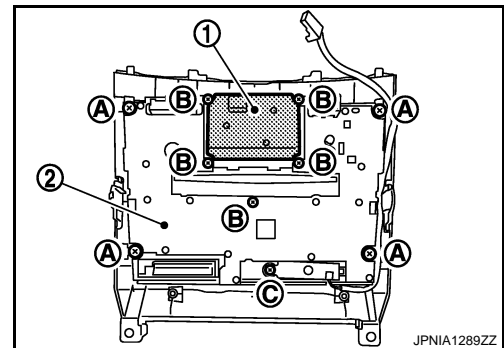

### INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Never confuse screws when installing.