

A  
B  
C

# WW

## SECTION

### WIPER & WASHER

## CONTENTS

|  |    |   |    |    |
|--|----|---|----|----|
| <b>BASIC INSPECTION</b> .....                                | 3  | <b>Component Function Check</b> .....                                     | 23 | F  |
| <b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....                   | 3  | <b>Diagnosis Procedure</b> .....  | 23 |    |
| Work Flow .....  | 3  | <b>FRONT WIPER MOTOR HI CIRCUIT</b> .....                                 | 25 | G  |
| <b>SYSTEM DESCRIPTION</b> .....                              | 5  | Component Function Check .....  | 25 |    |
| <b>FRONT WIPER AND WASHER SYSTEM</b> .....                   | 5  | Diagnosis Procedure .....   | 25 |    |
| <b>WITH RAIN SENSOR</b> .....                                | 5  | <b>FRONT WIPER AUTO STOP SIGNAL CIRCUIT</b> .....                         | 27 | H  |
| WITH RAIN SENSOR : System Diagram .....                      | 5  | Component Function Check .....  | 27 |    |
| WITH RAIN SENSOR : System Description .....                  | 5  | Diagnosis Procedure .....   | 27 | I  |
| WITH RAIN SENSOR : Component Parts Location .....            | 8  | <b>FRONT WIPER MOTOR GROUND CIRCUIT</b> ...                               | 29 |    |
| WITH RAIN SENSOR : Component Description .....               | 8  | Diagnosis Procedure .....   | 29 | J  |
| <b>WITHOUT RAIN SENSOR</b> .....                             | 9  | <b>WASHER SWITCH</b> .....  | 30 |    |
| WITHOUT RAIN SENSOR : System Diagram .....                   | 9  | Description .....   | 30 |    |
| WITHOUT RAIN SENSOR : System Description .....               | 9  | Component Inspection .....  | 30 | K  |
| WITHOUT RAIN SENSOR : Component Parts Location .....         | 12 | <b>RAIN SENSOR</b> .....  | 31 |    |
| WITHOUT RAIN SENSOR : Component Description .....            | 12 | Component Function Check .....  | 31 | WW |
| <b>DIAGNOSIS SYSTEM (BCM)</b> .....                          | 14 | Diagnosis Procedure .....   | 31 |    |
| <b>COMMON ITEM</b> .....                                     | 14 | <b>FRONT WIPER AND WASHER SYSTEM</b> .....                                | 33 |    |
| COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM) ..... | 14 | Wiring Diagram - FRONT WIPER AND WASHER SYSTEM - .....                    | 33 | M  |
| <b>WIPER</b> .....   | 15 | <b>ECU DIAGNOSIS INFORMATION</b> .....                                    | 38 |    |
| WIPER : CONSULT-III Function (BCM - WIPER) ...               | 15 | <b>BCM (BODY CONTROL MODULE)</b> .....                                    | 38 | N  |
| <b>DIAGNOSIS SYSTEM (IPDM E/R)</b> .....                     | 17 | Reference Value .....   | 38 |    |
| Diagnosis Description .....                                  | 17 | Wiring Diagram - BCM - .....  | 62 | O  |
| CONSULT-III Function (IPDM E/R) .....                        | 19 | Fail-safe .....   | 68 |    |
| <b>DTC/CIRCUIT DIAGNOSIS</b> .....                           | 22 | DTC Inspection Priority Chart .....                                       | 70 | P  |
| <b>WIPER AND WASHER FUSE</b> .....                           | 22 | DTC Index .....   | 71 |    |
| Diagnosis Procedure .....                                    | 22 | <b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> ..... | 74 |    |
| <b>FRONT WIPER MOTOR LO CIRCUIT</b> .....                    | 23 | Reference Value .....   | 74 |    |
|  |    | Wiring Diagram - IPDM E/R - .....   | 81 |    |
|  |    | Fail-safe .....   | 84 |    |
|  |    | DTC Index .....   | 86 |    |

|  |           |  |            |
|--|-----------|--|------------|
| <b>SYMPTOM DIAGNOSIS</b> .....   | <b>87</b> | <b>FRONT WASHER PUMP</b> .....             | <b>96</b>  |
| <b>FRONT WIPER AND WASHER SYSTEM SYMPTOMS</b> .....  | <b>87</b> | Exploded View .....                        | 96         |
| <b>WITH RAIN SENSOR</b> .....  | <b>87</b> | Removal and Installation .....             | 96         |
| WITH RAIN SENSOR : Symptom Table .....   | 87        | <b>WASHER LEVEL SWITCH</b> .....           | <b>97</b>  |
| <b>WITHOUT RAIN SENSOR</b> .....   | <b>88</b> | Removal and Installation .....             | 97         |
| WITHOUT RAIN SENSOR : Symptom Table .....  | 89        | <b>FRONT WASHER NOZZLE AND TUBE</b> .....  | <b>98</b>  |
| <b>FRONT WIPER DOES NOT OPERATE</b> .....  | <b>91</b> | Hydraulic Layout .....                     | 98         |
| Description .....  | 91        | Removal and Installation .....             | 98         |
| Diagnosis Procedure .....  | 91        | Inspection and Adjustment .....            | 98         |
| <b>NORMAL OPERATING CONDITION</b> .....  | <b>93</b> | <b>FRONT WIPER ARM</b> .....               | <b>101</b> |
| Description .....  | 93        | Exploded View .....                        | 101        |
| <b>PRECAUTION</b> .....  | <b>94</b> | Removal and Installation .....             | 101        |
| <b>PRECAUTIONS</b> .....   | <b>94</b> | Adjustment .....                           | 101        |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... | 94        | <b>WIPER BLADE</b> .....                   | <b>103</b> |
| Precaution for Procedure without Cowl Top Cover..  | 94        | Exploded View .....                        | 103        |
| <b>REMOVAL AND INSTALLATION</b> .....  | <b>95</b> | Removal and Installation .....             | 103        |
| <b>WASHER TANK</b> .....   | <b>95</b> | Replacement .....                          | 103        |
| Exploded View .....  | 95        | <b>FRONT WIPER DRIVE ASSEMBLY</b> .....    | <b>105</b> |
| Removal and Installation .....   | 95        | Exploded View .....                        | 105        |
|  |           | Removal and Installation .....             | 105        |
|  |           | Disassembly and Assembly .....             | 106        |
|  |           | <b>FRONT WIPER AND WASHER SWITCH</b> ..... | <b>107</b> |
|  |           | Exploded View .....                        | 107        |

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

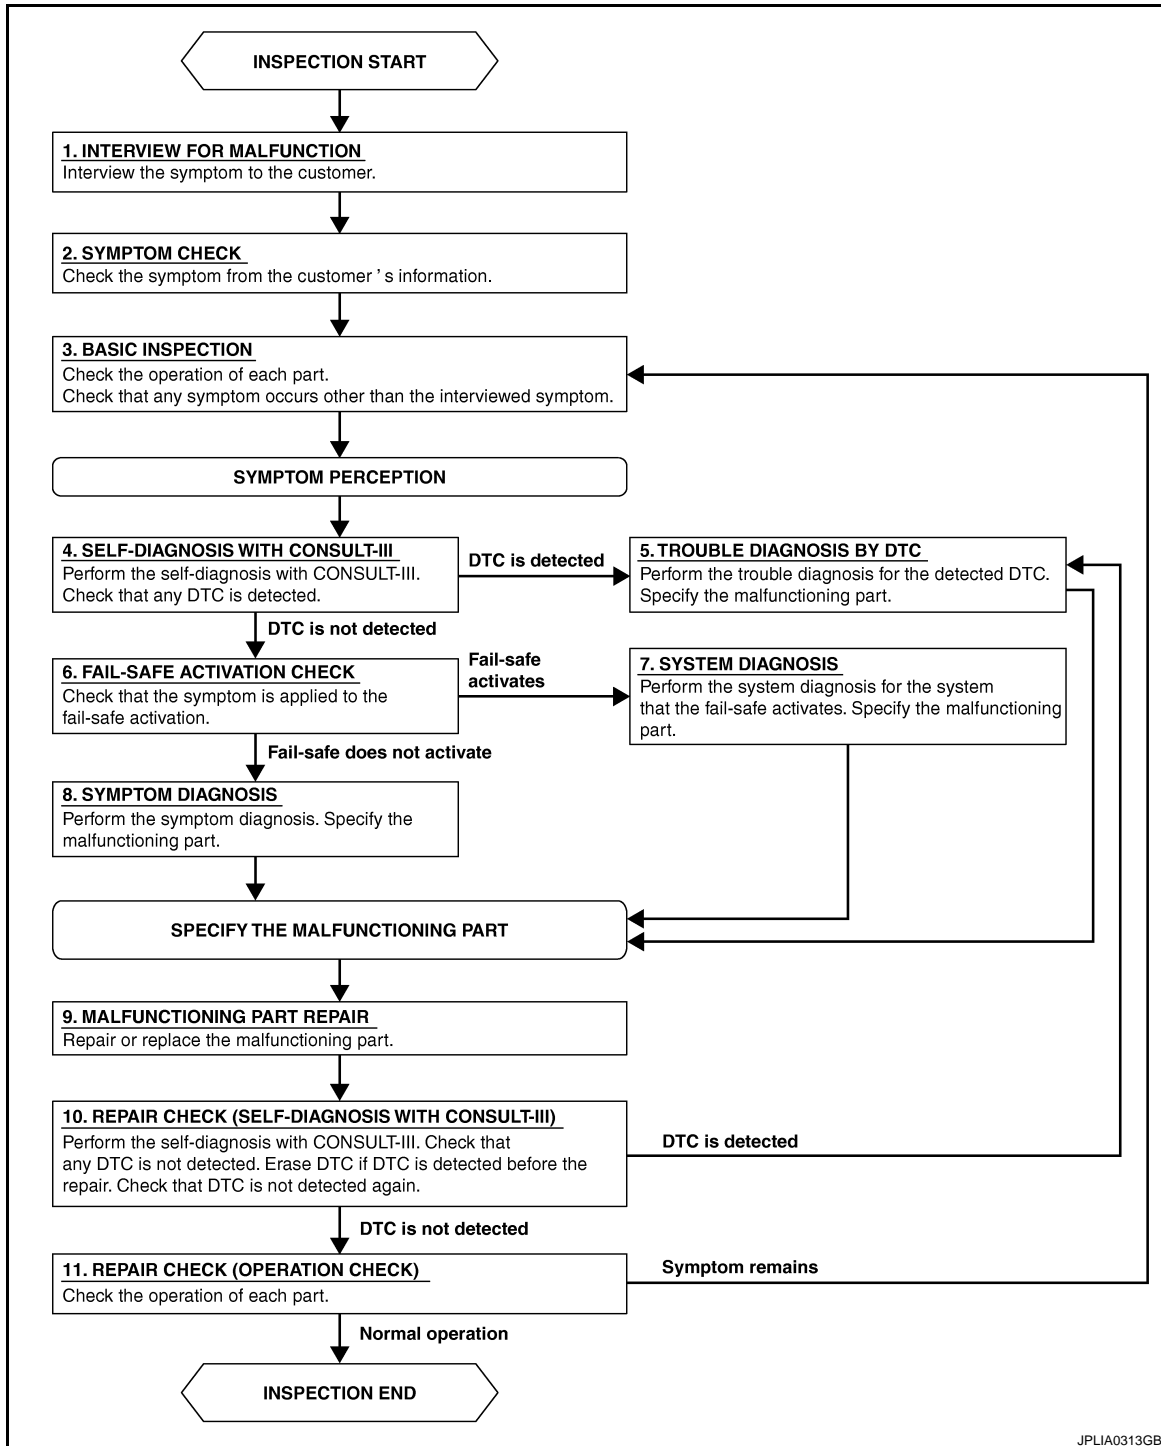
## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000005620265

#### OVERALL SEQUENCE



#### DETAILED FLOW

##### 1. INTERVIEW FOR MALFUNCTION

Interview the symptom to the customer.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

---

>> GO TO 2.

## 2. SYMPTOM CHECK

---

Check the symptom from the customer's information.

>> GO TO 3.

## 3. BASIC INSPECTION

---

Check the operation of each part. Check that any symptom occurs other than the interviewed symptom.

>> GO TO 4.

## 4. SELF-DIAGNOSIS WITH CONSULT-III

---

Perform the self-diagnosis with CONSULT-III. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

## 5. TROUBLE DIAGNOSIS BY DTC

---

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

## 6. FAIL-SAFE ACTIVATION CHECK

---

Check that the symptom is applied to the fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

## 7. SYSTEM DIAGNOSIS

---

Perform the system diagnosis for the system that the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

## 8. SYMPTOM DIAGNOSIS

---

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

## 9. MALFUNCTION PART REPAIR

---

Repair or replace the malfunctioning part.

>> GO TO 10.

## 10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT-III)

---

Perform the self-diagnosis with CONSULT-III. Check that any DTC is not detected. Erase DTC if DTC is detected before the repair. Check that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 11.

## 11. REPAIR CHECK (OPERATION CHECK)

---

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3.

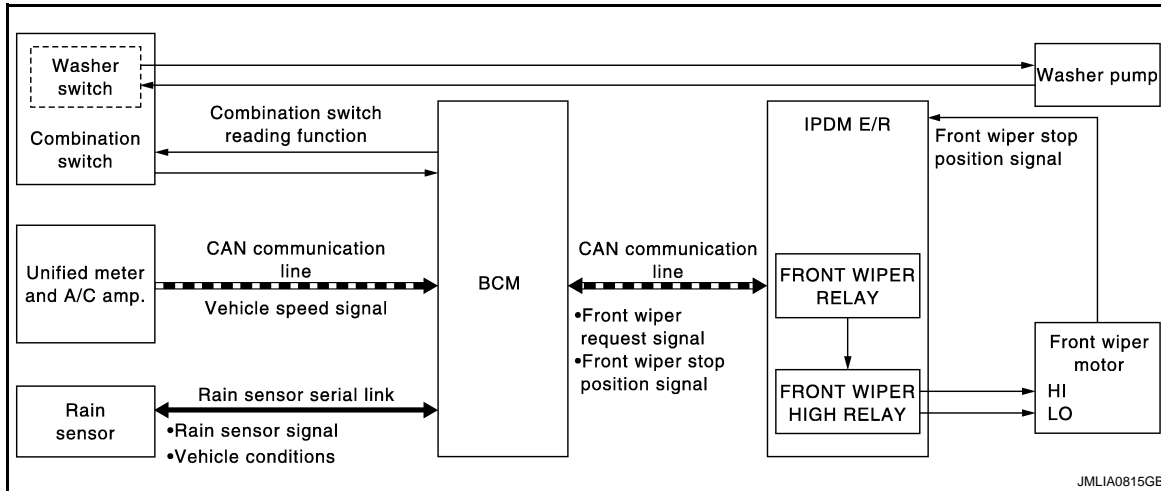
# FRONT WIPER AND WASHER SYSTEM

< SYSTEM DESCRIPTION >

## SYSTEM DESCRIPTION

### FRONT WIPER AND WASHER SYSTEM WITH RAIN SENSOR

#### WITH RAIN SENSOR : System Diagram



#### WITH RAIN SENSOR : System Description

INFOID:000000005839024

##### OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Front wiper control function

Control by IPDM E/R

- Front wiper control function
- Relay control function

Combination meter indicates low washer fluid warning judged by the signal from the washer level switch. For details of low washer fluid warning, refer to [MWI-27. "INFORMATION DISPLAY : System Description"](#).

##### FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R via CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper high relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

##### FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the front wiper LO operating condition.

Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

##### FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R via CAN communication according to the front wiper HI operating condition.

Front wiper HI operating condition

- Ignition switch ON
- Front wiper switch HI

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER AND WASHER SYSTEM

## < SYSTEM DESCRIPTION >

- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

## FRONT WIPER AUTO OPERATION

### Rain Detection

Rain level and sensor conditions are detected by rain sensor.

- BCM transmits the vehicle conditions (vehicle speed, front wiper condition, rain sensor sensitivity setting, etc.) to the rain sensor via the rain sensor serial link.
- Rain sensor judges a wiping speed for front wiper by rain condition and the vehicle conditions. And it transmits the wiping speed request signal to the BCM via the rain sensor serial link.

### Auto Wiping Operation

- BCM receives the wiping speed request signal from the rain sensor via the rain sensor serial link.
- BCM controls front wiper operation according to the wiping speed request signals. And it transmits the front wiper request signals (LO or HI) to the IPDM E/R via CAN communication line.

Front wiper AUTO operating condition

- Ignition switch ON
- Front wiper switch INT

### NOTE:

When the front wiper switch is turned to INT position, front wiper operates once regardless of rainy conditions.

### Rain Sensor Sensitivity Setting

BCM determines rain sensor sensitivity according to wiper volume dial position.

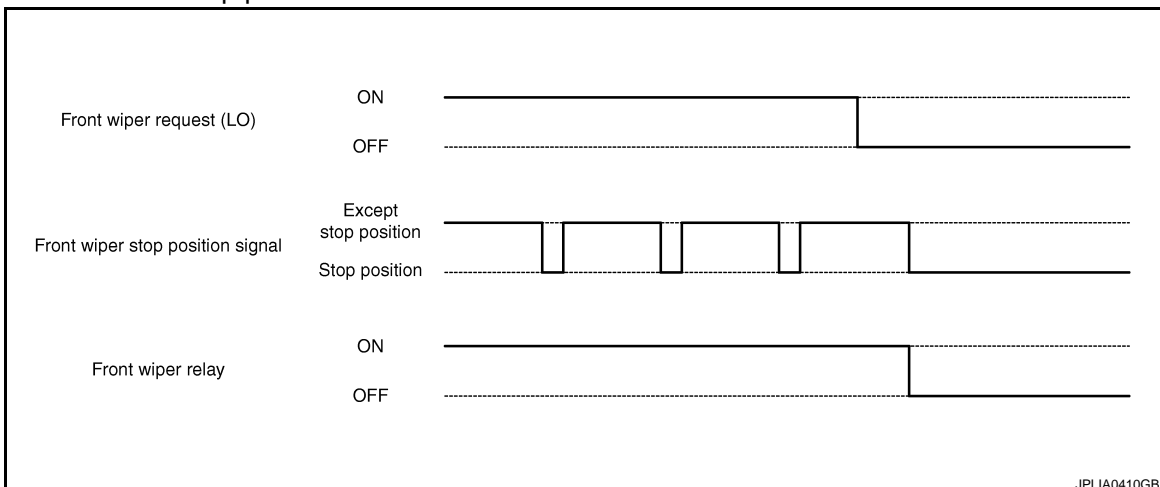
| Wiper volume dial position | Sensitivity             |
|----------------------------|-------------------------|
| 1                          | High sensitivity        |
| 2                          |                         |
| 3                          | Medium-high sensitivity |
| 4                          |                         |
| 5                          | Low-medium sensitivity  |
| 6                          |                         |
| 7                          | Low sensitivity         |

### NOTE:

When the wiper volume dial position is turned up by 1 level under front wiper AUTO operating condition, front wiper operates once.

## FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper stop position signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).
- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.



### NOTE:

# FRONT WIPER AND WASHER SYSTEM

## < SYSTEM DESCRIPTION >

- BCM stops the transmitting of the front wiper request signal when the ignition switch is OFF.
- IPDM E/R turns the front wiper relay OFF when the ignition switch is OFF.

A

## FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 2 times when the front washer switch OFF is detected.

B

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 second or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The washer pump is grounded through the combination switch with the front washer switch ON.

C

## FAIL-SAFE FUNCTION

Front Wiper control

IPDM E/R performs the fail-safe function when the front wiper auto stop circuit is malfunctioning. Refer to [WW-84. "Fail-safe"](#).

D

E

Rain Sensor Malfunction

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO is operating, BCM operates a fail-safe control.

F

G

### **NOTE:**

If rain sensor malfunction is detected when ignition switch is turned OFF ⇒ ON and front wiper switch is in the INT position, BCM operates front wiper LO.

H

I

J

K

WW

M

N

O

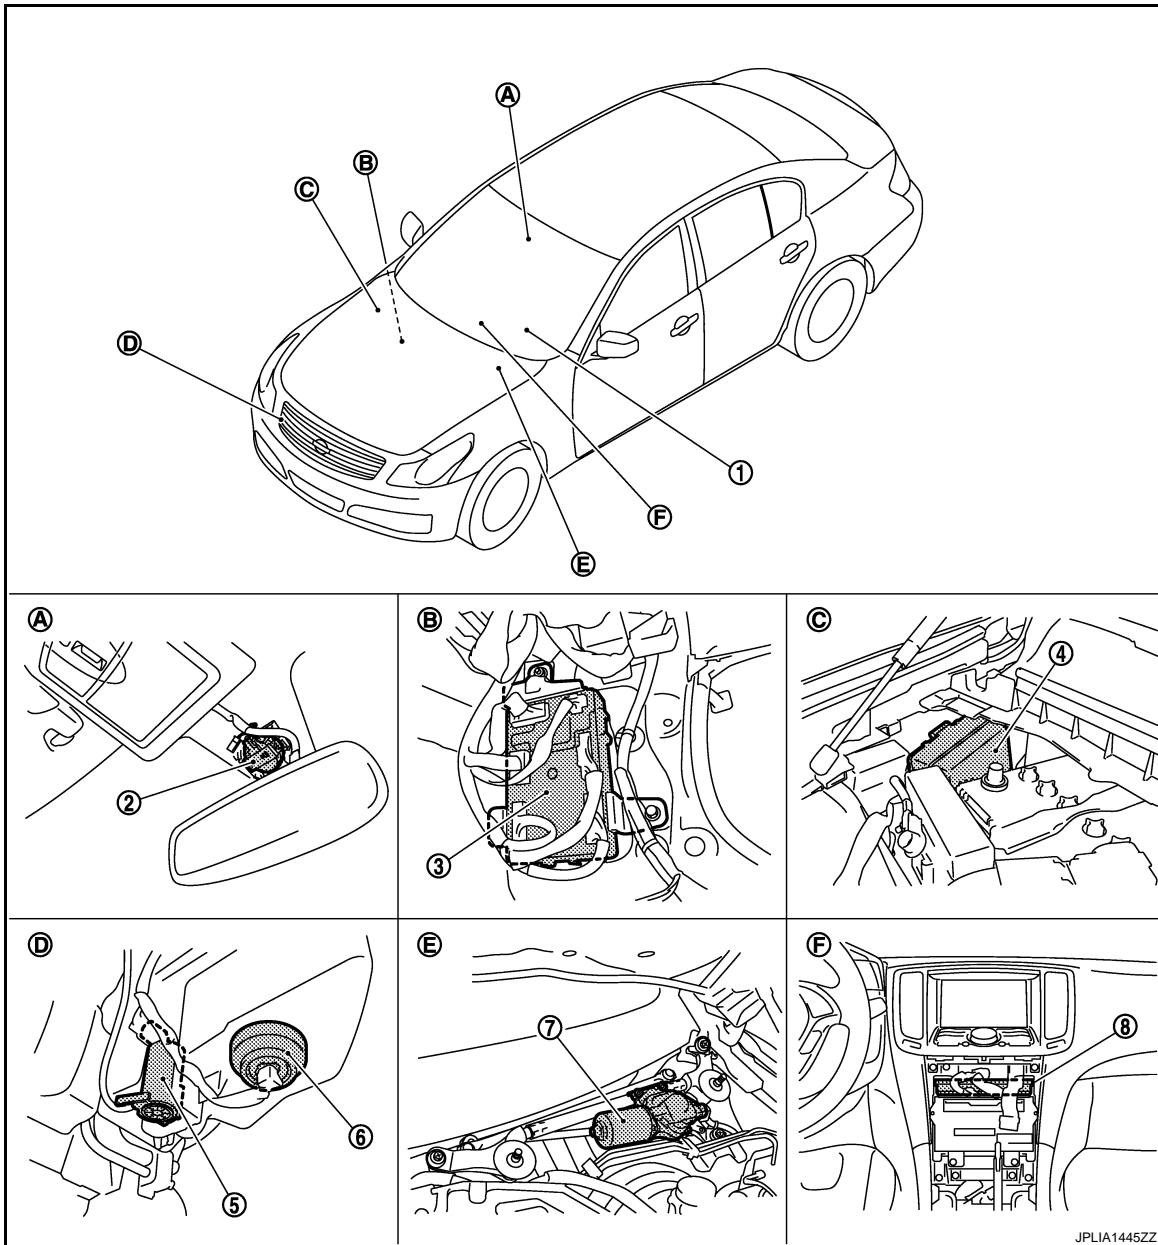
P

# FRONT WIPER AND WASHER SYSTEM

< SYSTEM DESCRIPTION >

## WITH RAIN SENSOR : Component Parts Location

INFOID:000000005839021



- |                               |                                       |                                |
|-------------------------------|---------------------------------------|--------------------------------|
| 1. Combination switch         | 2. Rain sensor                        | 3. BCM                         |
| 4. IPDM E/R                   | 5. Washer pump                        | 6. Washer level switch         |
| 7. Front wiper motor          | 8. Unified meter and A/C amp.         |                                |
| A. Wind shield upper          | B. Dash side lower (Passenger side)   | C. Engine room dash panel (RH) |
| D. Radiator core support (RH) | E. Cowl top, left side of engine room | F. Behind cluster lid C        |

## WITH RAIN SENSOR : Component Description

INFOID:000000005839022

| Part     | Description   |
|----------|---|
| BCM      | <ul style="list-style-type: none"> <li>Judges each switch status by the combination switch reading function.</li> <li>Requests (with CAN communication) the front wiper relay and the front wiper high relay ON to IPDM E/R.</li> </ul> |
| IPDM E/R | <ul style="list-style-type: none"> <li>Controls the integrated relay according to the request (with CAN communication) from BCM.</li> <li>Performs the auto stop control of the front wiper.</li> </ul>                                 |



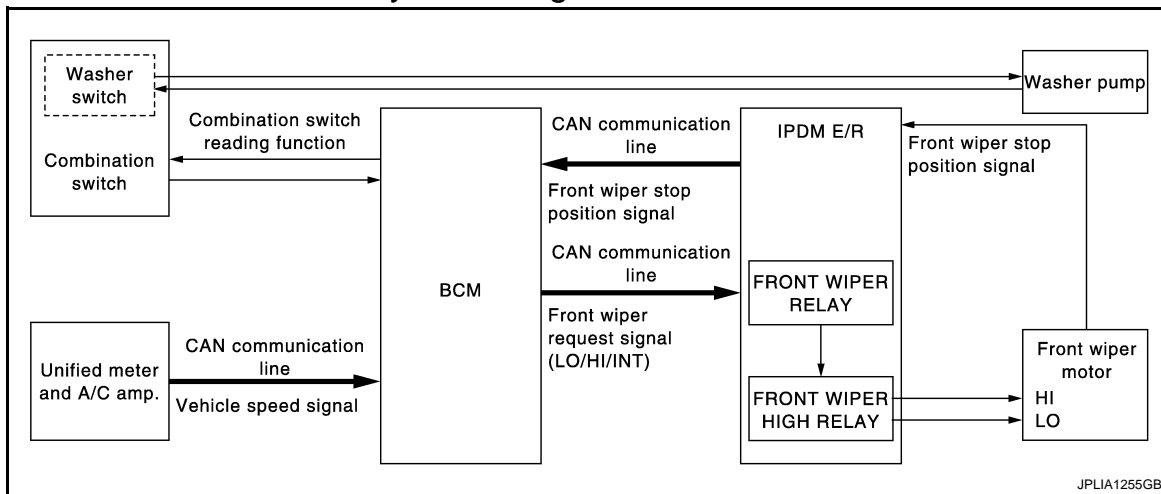
# FRONT WIPER AND WASHER SYSTEM

## < SYSTEM DESCRIPTION >

| Part                                       | Description  |
|--|--|
| Front wiper motor                          | <ul style="list-style-type: none"> <li>IPDM E/R controls front wiper operation.</li> <li>Front wiper auto stop signal is transmitted to IPDM E/R.</li> </ul> |
| Combination switch (Wiper & washer switch) | Refer to <a href="#">BCS-6, "System Description"</a> .   |
| Washer pump                                | Washer fluid is sprayed according to washer switch states.   |
| Unified meter and A/C amp.                 | Transmits the vehicle speed signal to BCM via CAN communication.   |
| Rain sensor                                | Detects water droplets on the windshield with infrared rays, and transmits the rain sensor signal to BCM via the rain sensor serial link.                    |

## WITHOUT RAIN SENSOR

### WITHOUT RAIN SENSOR : System Diagram



### WITHOUT RAIN SENSOR : System Description

INFOID:0000000005620267

#### OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

#### Control by BCM

- Combination switch reading function
- Front wiper control function

#### Control by IPDM E/R

- Front wiper control function
- Relay control function

Combination meter indicates low washer fluid warning judged by the signal from the washer level switch. For details of low washer fluid warning, refer to [MWI-27, "INFORMATION DISPLAY : System Description"](#).

#### FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R via CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper high relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

#### FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the front wiper LO operating condition.

#### Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# FRONT WIPER AND WASHER SYSTEM

## < SYSTEM DESCRIPTION >

### FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R via CAN communication according to the front wiper HI operating condition.

Front wiper HI operating condition

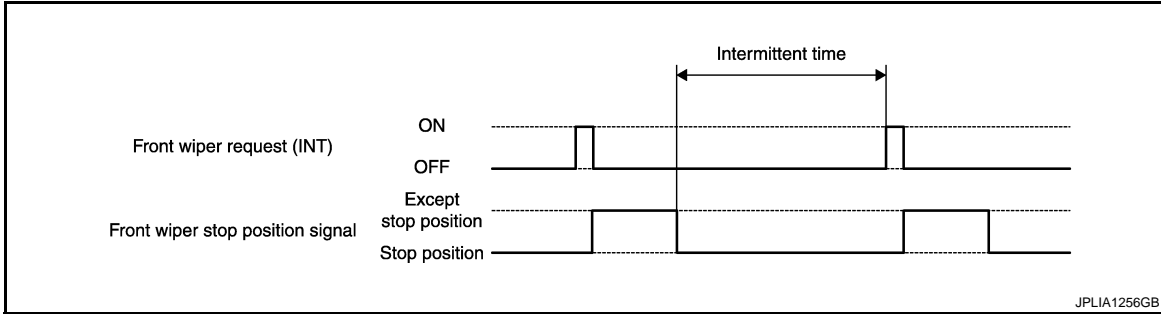
- Ignition switch ON
- Front wiper switch HI
- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

### FRONT WIPER INT OPERATION

- BCM transmits the front wiper request signal (INT) to IPDM E/R via CAN communication depending on the front wiper INT operating condition and intermittent operation delay interval according to the wiper intermittent dial position.

Front wiper INT operating condition

- Ignition switch ON
- Front wiper switch INT
- IPDM E/R turns ON the integrated front wiper relay so that the front wiper is operated only once according to the front wiper request signal (INT).
- BCM detects stop position/except stop position of the front wiper motor according to the front wiper stop position signal received from IPDM E/R via CAN communication.
- BCM transmits the front wiper request signal (INT) again after the intermittent operation delay interval.



#### NOTE:

Factory setting of the front wiper intermittent operation is operation not linked with vehicle speed. Front wiper intermittent operation can be set to operation linked or not linked with vehicle speed using CONSULT-III. Refer to [WW-15. "WIPER : CONSULT-III Function \(BCM - WIPER\)".](#)

Front wiper intermittent operation with vehicle speed

- BCM calculates the intermittent operation delay interval from the following
  - Vehicle speed signal
  - Wiper intermittent dial position

Unit: Second

| Wiper intermittent dial position | Intermittent operation interval | Intermittent operation delay Interval |                                 |                                    |                               |
|----------------------------------|---------------------------------|---------------------------------------|---------------------------------|------------------------------------|-------------------------------|
|                                  |                                 | Vehicle speed                         |                                 |                                    |                               |
|                                  |                                 | 0 – 5 km/h<br>(0 – 3.1 MPH)           | 5 – 35 km/h<br>(3.1 – 21.7 MPH) | 35 – 65 km/h<br>(21.7 – 40.4 MPH)* | 65 km/h (40.4 MPH)<br>or more |
| 1                                | Short<br>↑                      | 0.8                                   | 0.6                             | 0.4                                | 0.24                          |
| 2                                |                                 | 4                                     | 3                               | 2                                  | 1.2                           |
| 3                                |                                 | 10                                    | 7.5                             | 5                                  | 3                             |
| 4                                |                                 | 16                                    | 12                              | 8                                  | 4.8                           |
| 5                                |                                 | 24                                    | 18                              | 12                                 | 7.2                           |
| 6                                | Long<br>↓                       | 32                                    | 24                              | 16                                 | 9.6                           |
| 7                                |                                 | 42                                    | 31.5                            | 21                                 | 12.6                          |

\*: When operation setting is not linked with vehicle speed.

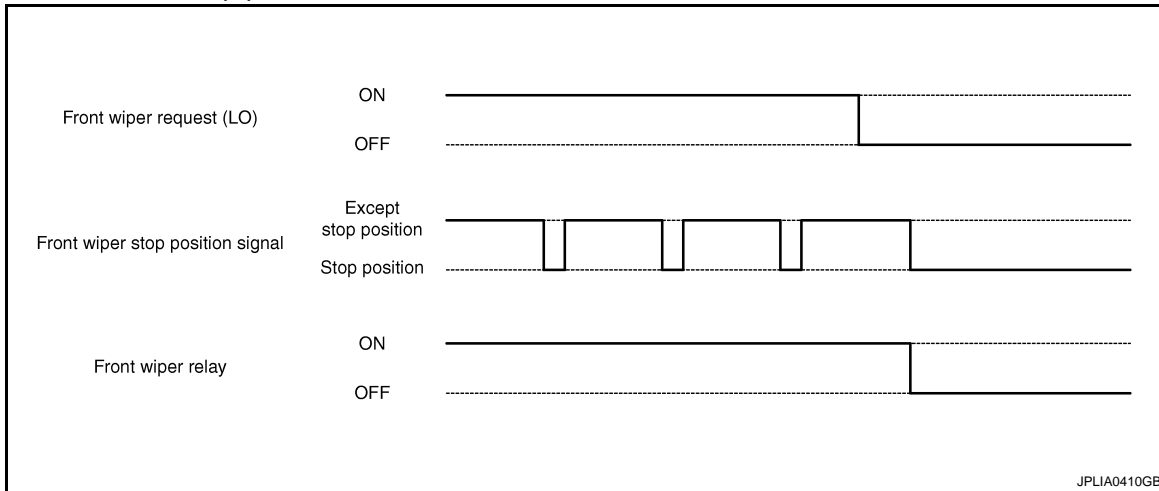
### FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.

# FRONT WIPER AND WASHER SYSTEM

## < SYSTEM DESCRIPTION >

- IPDM E/R detects the front wiper stop position signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).
- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.



### NOTE:

- BCM stops the transmitting of the front wiper request signal when the ignition switch is OFF.
- IPDM E/R turns the front wiper relay OFF when the ignition switch is OFF.

### FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 2 times when the front washer switch OFF is detected.

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 second or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The washer pump is grounded through the combination switch with the front washer switch ON.

### FRONT WIPER FAIL-SAFE OPERATION

IPDM E/R performs the fail-safe function when the front wiper auto stop circuit is malfunctioning. Refer to [PCS-29. "Fail-safe"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

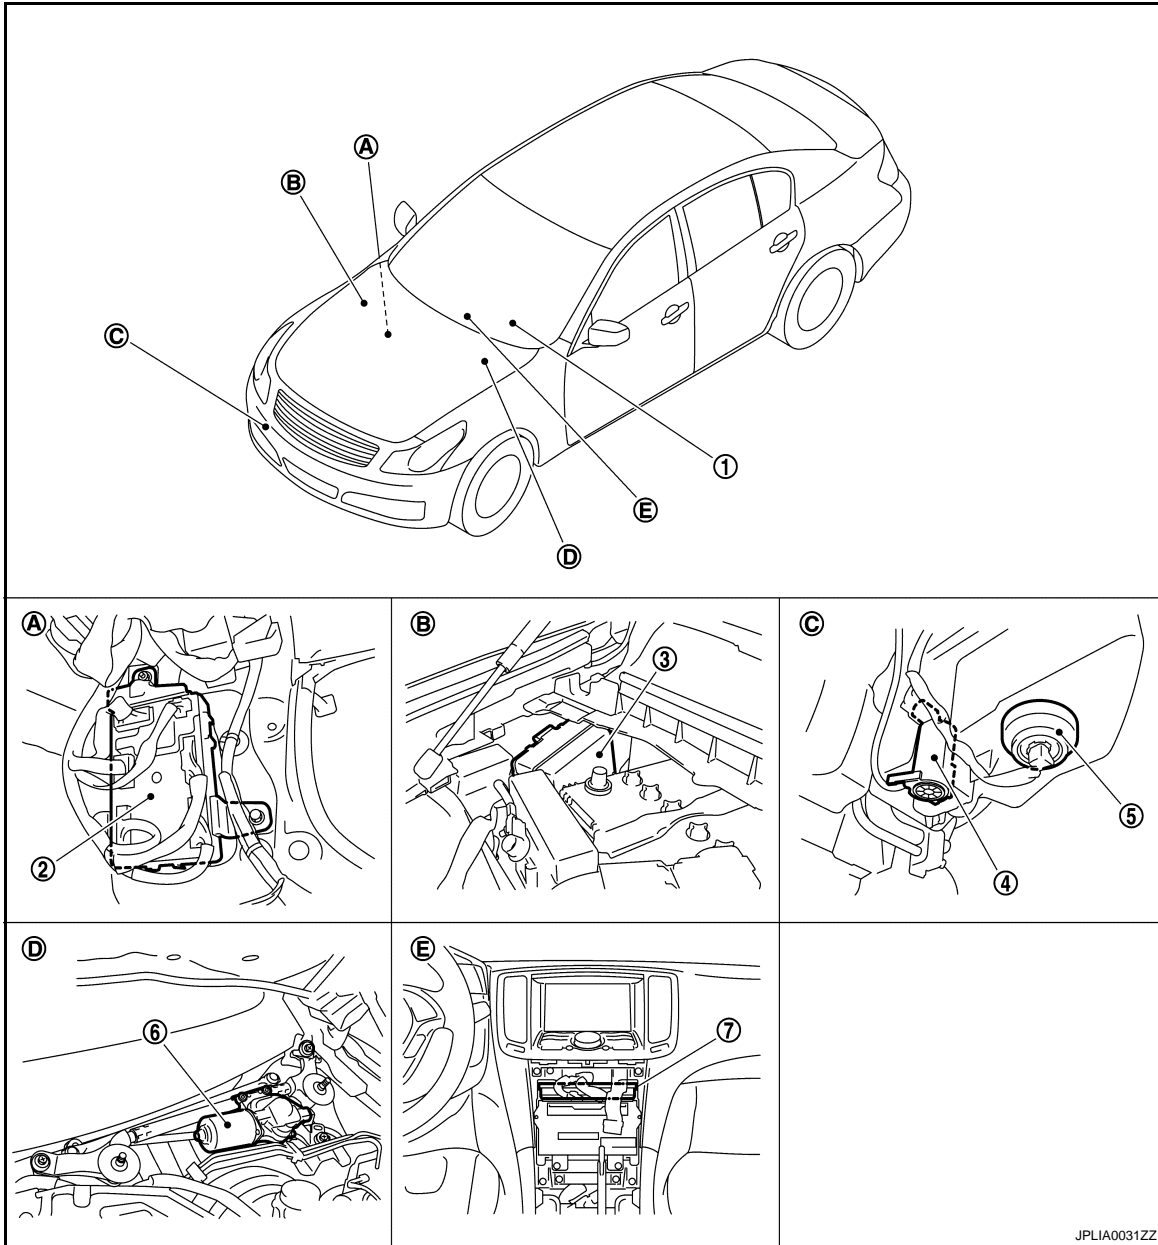
M  
N  
O  
P

# FRONT WIPER AND WASHER SYSTEM

< SYSTEM DESCRIPTION >

## WITHOUT RAIN SENSOR : Component Parts Location

INFOID:000000005620268



JPLIA0031ZZ

- |                                       |                                |                               |
|---------------------------------------|--------------------------------|-------------------------------|
| 1. Combination switch                 | 2. BCM                         | 3. IPDM E/R                   |
| 4. Washer pump                        | 5. Washer level switch         | 6. Front wiper motor          |
| 7. Unified meter and A/C amp.         |                                |                               |
| A. Dash side lower (Passenger side)   | B. Engine room dash panel (RH) | C. Radiator core support (RH) |
| D. Cowl top, left side of engine room | E. Behind cluster lid C        |                               |

## WITHOUT RAIN SENSOR : Component Description

INFOID:000000005620269

| Part     | Description   |
|----------|---|
| BCM      | <ul style="list-style-type: none"> <li>Judges the each switch status by the combination switch reading function.</li> <li>Requests (with CAN communication) the front wiper relay and the front wiper high relay ON to IPDM E/R.</li> </ul> |
| IPDM E/R | <ul style="list-style-type: none"> <li>Controls the integrated relay according to the request (with CAN communication) from BCM.</li> <li>Performs the auto stop control of the front wiper.</li> </ul>                                     |

# FRONT WIPER AND WASHER SYSTEM

## < SYSTEM DESCRIPTION >

| Part                                       | Description   |
|--|---|
| Front wiper motor                          | <ul style="list-style-type: none"><li>• IPDM E/R controls front wiper operation.</li><li>• Front wiper auto stop signal is transmitted to IPDM E/R.</li></ul> |
| Combination switch (Wiper & washer switch) | Refer to <a href="#">BCS-6, "System Description"</a> .  |
| Washer pump                                | Washer fluid is sprayed according to washer switch states.  |
| Unified meter and A/C amp.                 | Transmits the vehicle speed signal to BCM with CAN communication.   |

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000005886405

### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

| Diagnosis mode           | Function Description   |
|--------------------------|--|
| Work Support             | Changes the setting for each system function.  |
| Self Diagnostic Result   | Displays the diagnosis results judged by BCM.  |
| CAN Diag Support Monitor | Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual. |
| Data Monitor             | The BCM input/output signals are displayed.  |
| Active Test              | The signals used to activate each device are forcibly supplied from BCM.                                   |
| Ecu Identification       | The BCM part number is displayed.  |
| Configuration            | This function is not used even though it is displayed.   |

### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

| System  | Sub system selection item   | Diagnosis mode |              |             |
|---|-----------------------------|----------------|--------------|-------------|
|   |                             | Work Support   | Data Monitor | Active Test |
| Door lock   | DOOR LOCK                   | ×              | ×            | ×           |
| Rear window defogger                              | REAR DEFOGGER               |                | ×            | ×           |
| Warning chime                                     | BUZZER                      |                | ×            | ×           |
| Interior room lamp timer                          | INT LAMP                    | ×              | ×            | ×           |
| Exterior lamp                                     | HEAD LAMP                   | ×              | ×            | ×           |
| Wiper and washer                                  | WIPER                       | ×              | ×            | ×           |
| Turn signal and hazard warning lamps              | FLASHER                     | ×              | ×            | ×           |
| —   | AIR CONDITONER*             |                |              |             |
| • Intelligent Key system<br>• Engine start system | INTELLIGENT KEY             | ×              | ×            | ×           |
| Combination switch                                | COMB SW                     |                | ×            |             |
| Body control system                               | BCM                         | ×              |              |             |
| IVIS - NATS                                       | IMMU                        |                | ×            | ×           |
| Interior room lamp battery saver                  | BATTERY SAVER               | ×              | ×            | ×           |
| Trunk lid open                                    | TRUNK                       |                | ×            | ×           |
| Vehicle security system                           | THEFT ALM                   | ×              | ×            | ×           |
| RAP system  | RETAINED PWR                |                | ×            |             |
| Signal buffer system                              | SIGNAL BUFFER               |                | ×            | ×           |
| TPMS  | TPMS (AIR PRESSURE MONITOR) | ×              | ×            | ×           |

#### NOTE:

\*: This item is displayed, but is not used.

### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT-III.

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

| CONSULT screen item | Indication/Unit   | Description  |  |    |
|---------------------|---|--|--|----|
| Vehicle Speed       | km/h  | Vehicle speed of the moment a particular DTC is detected   |  | A  |
| Odo/Trip Meter      | km  | Total mileage (Odometer value) of the moment a particular DTC is detected  |  | B  |
| Vehicle Condition   | SLEEP>LOCK  | Power position status of the moment a particular DTC is detected   | While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")              | C  |
|                     | SLEEP>OFF   |  | While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)              | D  |
|                     | LOCK>ACC  |  | While turning power supply position from "LOCK" to "ACC"   | E  |
|                     | ACC>ON  |  | While turning power supply position from "ACC" to "IGN"  | F  |
|                     | RUN>ACC   |  | While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.) | G  |
|                     | CRANK>RUN   |  | While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)                   | H  |
|                     | RUN>URGENT  |  | While turning power supply position from "RUN" to "ACC" (Emergency stop operation)                                     | I  |
|                     | ACC>OFF   |  | While turning power supply position from "ACC" to "OFF"  | J  |
|                     | OFF>LOCK  |  | While turning power supply position from "OFF" to "LOCK"   | K  |
|                     | OFF>ACC   |  | While turning power supply position from "OFF" to "ACC"  | WW |
|                     | ON>CRANK  |  | While turning power supply position from "IGN" to "CRANKING"   |    |
|                     | OFF>SLEEP   |  | While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode              |    |
|                     | LOCK>SLEEP  |  | While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode             |    |
|                     | LOCK  |  | Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)   |    |
|                     | OFF   |  | Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)  |    |
|                     | ACC   |  | Power supply position is "ACC" (Ignition switch ACC)   |    |
| ON                  | Power supply position is "IGN" (Ignition switch ON with engine stopped) |  |  |    |
| ENGINE RUN          | Power supply position is "RUN" (Ignition switch ON with engine running) |  |  |    |
| CRANKING            | Power supply position is "CRANKING" (At engine cranking)                |  |  |    |
| IGN Counter         | 0 - 39  | The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> <li>• The number is 0 when a malfunction is detected now.</li> <li>• The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.</li> <li>• The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul> |  | M  |

## WIPER

### WIPER : CONSULT-III Function (BCM - WIPER)

INFOID:0000000005620271

## WORK SUPPORT

| Service item          | Setting item | Description   |
|-----------------------|--------------|---|
| WIPER SPEED SETTING*1 | On           | Linked with vehicle speed<br>(Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position) |
|                       | Off*2        | Not linked with vehicle speed<br>(Front wiper intermittent time linked with the wiper intermittent dial position)               |

\*1:Without rain sensor

\*2:Initial setting

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

### DATA MONITOR

| Monitor Item<br>[Unit]    | Description   |
|---------------------------|---|
| VEH SPEED 1<br>[km/h]     | Displays the value of the vehicle speed signal received from unified meter and A/C amp. with CAN communication. |
| PUSH SW<br>[Off/On]       | The switch status input from push-button ignition switch.   |
| FR WIPER HI<br>[Off/On]   | Status of each switch judged by BCM using the combination switch reading function                               |
| FR WIPER LOW<br>[Off/On]  |   |
| FR WASHER SW<br>[Off/On]  |   |
| FR WIPER INT<br>[Off/On]  |   |
| FR WIPER STOP<br>[Off/On] | Displays the status of the front wiper stop position signal received from IPDM E/R with CAN communication.      |
| INT VOLUME<br>[1 – 7]     | Status of each switch judged by BCM using the combination switch reading function                               |

### ACTIVE TEST

| Test item   | Operation | Description   |
|-------------|-----------|---|
| FRONT WIPER | Hi        | Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.   |
|             | Lo        | Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.   |
|             | INT       | Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation. |
|             | Off       | Stops transmitting the front wiper request signal to stop the front wiper operation.  |



# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (IPDM E/R)

### Diagnosis Description

INFOID:000000005886413

### AUTO ACTIVE TEST

#### Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Side maker lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

#### Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)  
**NOTE:**  
When auto active test is performed with hood opened, sprinkle water on windshield beforehand.
2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the front door switch (driver side) 10 times. Then turn the ignition switch OFF.  
**CAUTION:**  
**Close passenger door.**
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

#### **NOTE:**

When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.

#### **CAUTION:**

- **If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-66](#), "[Component Function Check](#)".**
- **Do not start the engine.**

#### Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 6 steps are repeated 3 times.

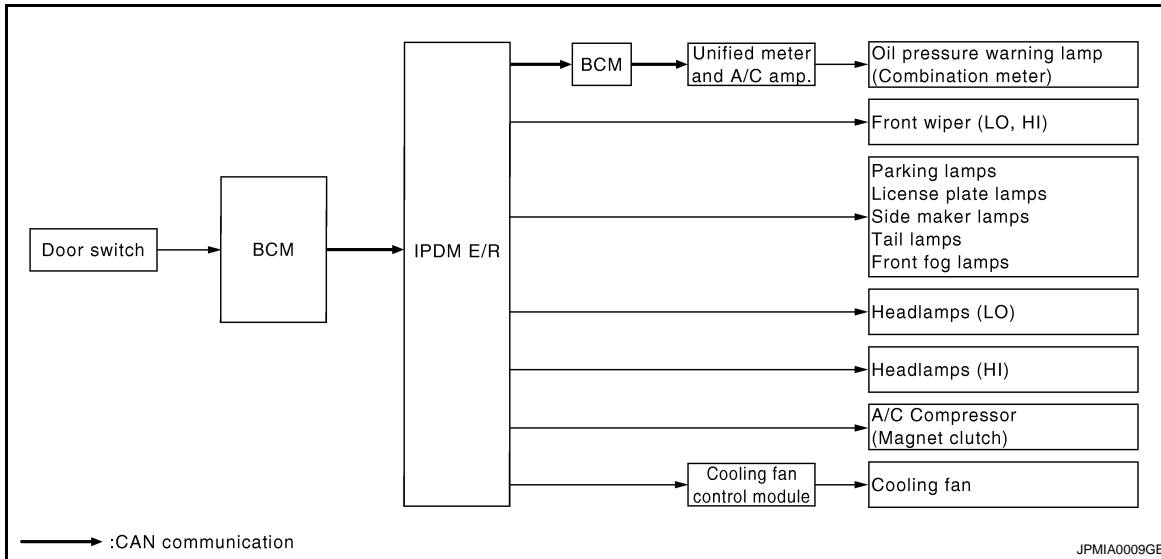
| Operation sequence | Inspection location   | Operation  |
|--------------------|---|--|
| 1                  | Oil pressure warning lamp   | Blinks continuously during operation of auto active test |
| 2                  | Front wiper   | LO for 5 seconds → HI for 5 seconds                      |
| 3                  | <ul style="list-style-type: none"><li>• Parking lamps</li><li>• License plate lamps</li><li>• Side maker lamps</li><li>• Tail lamps</li><li>• Front fog lamps</li></ul> | 10 seconds   |
| 4                  | Headlamps   | LO ↔ HI 5 times  |
| 5                  | A/C compressor (magnet clutch)  | ON ↔ OFF 5 times   |
| 6*                 | Cooling fan   | MID for 5 seconds → HI for 5 seconds                     |

\*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

# DIAGNOSIS SYSTEM (IPDM E/R)

## < SYSTEM DESCRIPTION >

### Concept of auto active test



- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

### Diagnosis chart in auto active test mode

| Symptom   | Inspection contents  | Possible cause   |
|---|--|--|
| Any of the following components do not operate <ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Side maker lamps</li> <li>• Tail lamps</li> <li>• Front fog lamps</li> <li>• Headlamp (HI, LO)</li> <li>• Front wiper (HI, LO)</li> </ul> | Perform auto active test.<br>Does the applicable system operate?       | YES<br>BCM signal input circuit  |
|   |  | NO<br><ul style="list-style-type: none"> <li>• Lamp or motor</li> <li>• Lamp or motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R</li> </ul>   |
| A/C compressor does not operate   | Perform auto active test.<br>Does the magnet clutch operate?           | YES<br><ul style="list-style-type: none"> <li>• Unified meter and A/C amp. signal input circuit</li> <li>• CAN communication signal between unified meter and A/C amp. and ECM</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul> |
|   |  | NO<br><ul style="list-style-type: none"> <li>• Magnet clutch</li> <li>• Harness or connector between IPDM E/R and magnet clutch</li> <li>• IPDM E/R</li> </ul>   |
| Oil pressure warning lamp does not operate  | Perform auto active test.<br>Does the oil pressure warning lamp blink? | YES<br><ul style="list-style-type: none"> <li>• Harness or connector between IPDM E/R and oil pressure switch</li> <li>• Oil pressure switch</li> <li>• IPDM E/R</li> </ul>  |
|   |  | NO<br><ul style="list-style-type: none"> <li>• CAN communication signal between IPDM E/R and BCM</li> <li>• CAN communication signal between BCM and unified meter and A/C amp.</li> <li>• Combination meter</li> </ul>                                |

# DIAGNOSIS SYSTEM (IPDM E/R)

## < SYSTEM DESCRIPTION >

| Symptom                      | Inspection contents  | Possible cause  |
|------------------------------|--|---|
| Cooling fan does not operate | Perform auto active test.<br>Does the cooling fan operate? | YES <ul style="list-style-type: none"> <li>ECM signal input circuit</li> <li>CAN communication signal between ECM and IPDM E/R</li> </ul>   |
|                              |  | NO <ul style="list-style-type: none"> <li>Cooling fan</li> <li>Harness or connector between cooling fan and cooling fan control module</li> <li>Cooling fan control module</li> <li>Harness or connector between IPDM E/R and cooling fan control module</li> <li>Cooling fan relay</li> <li>Harness or connector between IPDM E/R and cooling fan relay</li> <li>IPDM E/R</li> </ul> |

## CONSULT-III Function (IPDM E/R)

INFOID:000000005886414

### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

| Diagnosis mode           | Description   |
|--------------------------|---|
| Ecu Identification       | Allows confirmation of IPDM E/R part number.  |
| Self Diagnostic Result   | Displays the diagnosis results judged by IPDM E/R.                                      |
| Data Monitor             | Displays the real-time input/output data from IPDM E/R input/output data.               |
| Active Test              | IPDM E/R can provide a drive signal to electronic components to check their operations. |
| CAN Diag Support Monitor | The results of transmit/receive diagnosis of CAN communication can be read.             |

### SELF DIAGNOSTIC RESULT

Refer to [WW-86. "DTC Index"](#).

### DATA MONITOR

Monitor item

| Monitor Item<br>[Unit]        | MAIN SIGNALS | Description  |
|-------------------------------|--------------|--|
| RAD FAN REQ [%]               | ×            | Displays the value of the cooling fan speed signal received from ECM via CAN communication.        |
| AC COMP REQ [Off/On]          | ×            | Displays the status of the A/C compressor request signal received from ECM via CAN communication.  |
| TAIL&CLR REQ [Off/On]         | ×            | Displays the status of the position light request signal received from BCM via CAN communication.  |
| HL LO REQ [Off/On]            | ×            | Displays the status of the low beam request signal received from BCM via CAN communication.        |
| HL HI REQ [Off/On]            | ×            | Displays the status of the high beam request signal received from BCM via CAN communication.       |
| FR FOG REQ [Off/On]           | ×            | Displays the status of the front fog light request signal received from BCM via CAN communication. |
| FR WIP REQ [Stop/1LOW/Low/Hi] | ×            | Displays the status of the front wiper request signal received from BCM via CAN communication.     |
| WIP AUTO STOP [STOP P/ACT P]  | ×            | Displays the status of the front wiper auto stop signal judged by IPDM E/R.                        |
| WIP PROT [Off/BLOCK]          | ×            | Displays the status of the front wiper fail-safe operation judged by IPDM E/R.                     |

## DIAGNOSIS SYSTEM (IPDM E/R)

### < SYSTEM DESCRIPTION >

| Monitor Item<br>[Unit]                  | MAIN SIG-<br>NALS | Description  |
|---|-------------------|--|
| IGN RLY1 -REQ<br>[Off/On]               |                   | Displays the status of the ignition switch ON signal received from BCM via CAN communication.                      |
| IGN RLY<br>[Off/On]                     | ×                 | Displays the status of the ignition relay judged by IPDM E/R.  |
| PUSH SW<br>[Off/On]                     |                   | Displays the status of the push-button ignition switch judged by IPDM E/R.   |
| INTER/NP SW<br>[Off/On]                 |                   | Displays the status of the clutch interlock switch (M/T models) or shift position (A/T models) judged by IPDM E/R. |
| ST RLY CONT<br>[Off/On]                 |                   | Displays the status of the starter relay status signal received from BCM via CAN communication.                    |
| IHBT RLY -REQ<br>[Off/On]               |                   | Displays the status of the starter control relay signal received from BCM via CAN communication.                   |
| ST/INH RLY<br>[Off/ ST ON/INH ON/UNKWN] |                   | Displays the status of the starter relay and starter control relay judged by IPDM E/R.                             |
| DETENT SW<br>[Off/On]                   |                   | Displays the status of the A/T shift selector (detention switch) judged by IPDM E/R.                               |
| S/L RLY -REQ<br>[Off/On]                |                   | Displays the status of the steering lock relay request received from BCM via CAN communication.                    |
| S/L STATE<br>[LOCK/UNLOCK/UNKWN]        |                   | Displays the status of the steering lock judged by IPDM E/R.   |
| DTRL REQ<br>[Off/On]                    |                   | <b>NOTE:</b><br>The item is indicated, but not monitored.  |
| OIL P SW<br>[Open/Close]                |                   | Displays the status of the oil pressure switch judged by IPDM E/R.   |
| HOOD SW<br>[Off/On]                     |                   | Displays the status of the hood switch judged by IPDM E/R.   |
| HL WASHER REQ<br>[Off/On]               |                   | <b>NOTE:</b><br>The item is indicated, but not monitored.  |
| THFT HRN REQ<br>[Off/On]                |                   | Displays the status of the theft warning horn request signal received from BCM via CAN communication.              |
| HORN CHIRP<br>[Off/On]                  |                   | Displays the status of the horn reminder signal received from BCM via CAN communication.                           |
| CRNRNG LMP REQ<br>[Off/On]              |                   | <b>NOTE:</b><br>The item is indicated, but not monitored.  |

### ACTIVE TEST

#### Test item

| Test item      | Operation | Description  |
|----------------|-----------|--|
| CORNERING LAMP | Off       | <b>NOTE:</b><br>The item is indicated, but cannot be tested.                   |
|                | LH        |  |
|                | RH        |  |
| HORN           | On        | Operates horn relay 1 and horn relay 2 for 20 ms.                              |
| FRONT WIPER    | Off       | OFF  |
|                | Lo        | Operates the front wiper relay.  |
|                | Hi        | Operates the front wiper relay and front wiper high relay.                     |
| MOTOR FAN      | 1         | OFF  |
|                | 2         | Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.  |
|                | 3         | Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.  |
|                | 4         | Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module. |

## DIAGNOSIS SYSTEM (IPDM E/R)

### < SYSTEM DESCRIPTION >

| Test item        | Operation | Description   |
|------------------|-----------|---|
| HEAD LAMP WASHER | On        | <b>NOTE:</b><br>The item is indicated, but cannot be tested.                              |
| EXTERNAL LAMPS   | Off       | OFF   |
|                  | TAIL      | Operates the tail lamp relay.   |
|                  | Lo        | Operates the headlamp low relay.  |
|                  | Hi        | Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals. |
|                  | Fog       | Operates the front fog lamp relay.  |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# WIPER AND WASHER FUSE

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### WIPER AND WASHER FUSE

#### Diagnosis Procedure

INFOID:000000005620275

#### 1. CHECK FUSES

Check that the following fuses are not fusing.

| Unit              | Location | Fuse No. | Capacity |
|-------------------|----------|----------|----------|
| Front wiper motor | IPDM E/R | #60      | 30 A     |
| Washer pump       | IPDM E/R | #47      | 10 A     |

#### Is the fuse fusing?

- YES >> Replace the fuse with a new one after repairing the applicable circuit.
- NO >> The fuse is normal.

# FRONT WIPER MOTOR LO CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER MOTOR LO CIRCUIT

### Component Function Check

INFOID:000000005620278

#### 1. CHECK FRONT WIPER LO OPERATION

##### ⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-10, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO operation.

##### Ⓜ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

**Lo** : Front wiper (LO) operation

**Off** : Stop the front wiper.

Is front wiper (LO) operation normally?

- YES >> Front wiper motor LO circuit is normal.  
 NO >> Refer to [WW-23, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005620279

#### 1. CHECK FRONT WIPER MOTOR (LO) OUTPUT VOLTAGE

##### Ⓜ CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

| Terminals |          | Test item   | Voltage (Approx.) |
|-----------|----------|-------------|-------------------|
| (+)       | (-)      |             |                   |
| IPDM E/R  |          | FRONT WIPER | Battery voltage   |
| Connector | Terminal |             |                   |
| E5        | 4        |             |                   |
|           |          | Lo          | Battery voltage   |
|           |          | Off         | 0 V               |

Is the measurement value normal?

- YES >> GO TO 2.  
 NO >> Replace IPDM E/R.

#### 2. CHECK FRONT WIPER MOTOR (LO) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

| IPDM E/R  |          | Front wiper motor |          | Continuity |
|-----------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector         | Terminal |            |
| E5        | 4        | E42               | 1        | Existed    |

Does continuity exist?

- YES >> GO TO 3.  
 NO >> Repair the harness or connector.

#### 3. CHECK FRONT WIPER MOTOR (LO) SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

## FRONT WIPER MOTOR LO CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

---

| IPDM E/R  |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| E5        | 4        |        | Not existed |

Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace front wiper motor.



# FRONT WIPER MOTOR HI CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER MOTOR HI CIRCUIT

### Component Function Check

INFOID:000000005620280

#### 1.CHECK FRONT WIPER HI OPERATION

##### IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-10, "Diagnosis Description"](#).
2. Check that the front wiper operates at the HI operation.

##### CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

**Hi** : Front wiper (HI) operation

**Off** : Stop the front wiper.

Is front wiper (HI) operation normally?

- YES >> Front wiper motor HI circuit is normal.  
NO >> Refer to [WW-25, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005620281

#### 1.CHECK FRONT WIPER MOTOR (HI) OUTPUT VOLTAGE

##### CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

| Terminals |          | Test item   | Voltage (Approx.) |
|-----------|----------|-------------|-------------------|
| (+)       | (-)      |             |                   |
| IPDM E/R  |          | FRONT WIPER | Battery voltage   |
| Connector | Terminal |             |                   |
| E5        | 5        |             |                   |
| Ground    |          | Hi          | Battery voltage   |
|           |          | Off         | 0 V               |

Is the measurement value normal?

- YES >> GO TO 2.  
NO >> Replace IPDM E/R.

#### 2.CHECK FRONT WIPER MOTOR (HI) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

| IPDM E/R  |          | Front wiper motor |          | Continuity |
|-----------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector         | Terminal |            |
| E5        | 5        | E42               | 4        | Existed    |

Does continuity exist?

- YES >> GO TO 3.  
NO >> Repair the harness or connector.

#### 3.CHECK FRONT WIPER MOTOR (HI) SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

## FRONT WIPER MOTOR HI CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

---

| IPDM E/R  |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| E5        | 5        |        | Not existed |

Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace front wiper motor.

# FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER AUTO STOP SIGNAL CIRCUIT

### Component Function Check

INFOID:000000005620282

#### 1. CHECK FRONT WIPER (AUTO STOP) SIGNAL

##### CONSULT-III DATA MONITOR

1. Select "WIP AUTO STOP" of IPDM E/R data monitor item.
2. Operate the front wiper.
3. With the front wiper operation, check the monitor status.

| Monitor item  | Condition         |                      | Monitor status |
|---------------|-------------------|----------------------|----------------|
| WIP AUTO STOP | Front wiper motor | Stop position        | STOP P         |
|               |                   | Except stop position | ACT P          |

Is the status of item normal?

- YES >> Auto stop signal circuit is normal.  
 NO >> Refer to [WW-27, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005620283

#### 1. CHECK FRONT WIPER MOTOR (AUTO STOP) OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

| Terminals |          | Voltage (Approx.) |
|-----------|----------|-------------------|
| (+)       | (-)      |                   |
| IPDM E/R  |          | Ground            |
| Connector | Terminal |                   |
| E5        | 16       |                   |
|           |          | Battery voltage   |

Is the measurement value normal?

- YES >> GO TO 3.  
 NO >> GO TO 2.

#### 2. CHECK FRONT WIPER MOTOR (AUTO STOP) SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and ground.

| IPDM E/R  |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| E5        | 16       |        | Not existed |

Does continuity exist?

- YES >> Repair the harnesses or connectors.  
 NO >> Replace IPDM E/R.

#### 3. CHECK FRONT WIPER MOTOR (AUTO STOP) CIRCUIT CONTINUITY

Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

| IPDM E/R  |          | Front wiper motor |          | Continuity |
|-----------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector         | Terminal |            |
| E5        | 16       | E42               | 5        | Existed    |

## FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

---

Does continuity exist?

- YES >> Replace front wiper motor.
- NO >> Repair the harnesses or connectors.

# FRONT WIPER MOTOR GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER MOTOR GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000005620284

#### 1. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Check continuity between front wiper motor harness connector and ground.

| Front wiper motor |          | Ground | Continuity |
|-------------------|----------|--------|------------|
| Connector         | Terminal |        | Existed    |
| E42               | 2        |        |            |

#### Does continuity exist?

- YES >> Front wiper motor ground circuit is normal.  
NO >> Repair the harnesses or connectors.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# WASHER SWITCH

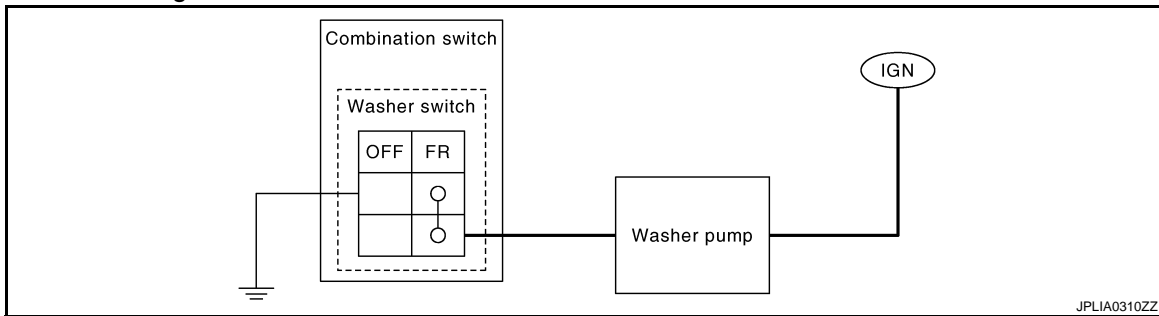
< DTC/CIRCUIT DIAGNOSIS >

## WASHER SWITCH

### Description

INFOID:000000005620285

Washer switch is integrated with combination switch.



### Component Inspection

INFOID:000000005620286

#### 1. CHECK WIPER SWITCH

1. Turn the ignition switch OFF.
2. Disconnect combination switch connector.
3. Check continuity between the combination switch terminals.

| Combination switch |   | Condition              | Continuity |
|--------------------|---|------------------------|------------|
| Terminal           |   |                        |            |
| 1                  | 6 | Front washer switch ON | Existed    |

#### Does continuity exist?

- YES >> Wiper and washer switch is normal.  
NO >> Replace wiper and washer switch.

# RAIN SENSOR

< DTC/CIRCUIT DIAGNOSIS >

## RAIN SENSOR

### Component Function Check

INFOID:000000005839028

#### 1.CHECK FRONT WIPER AUTO OPERATION

1. Clean rain sensor detection area of windshield fully.
2. When the front wiper switch is turned to INT position, front wiper operates once regardless of a rainy condition.

Is front wiper (AUTO) operation normally?

- YES >> Rain sensor circuit is normal.  
NO >> Refer to [WW-31, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005839029

#### 1.CHECK RAIN SENSOR FUSE

1. Turn the ignition switch OFF.
2. Check that the rain sensor 10 A fuse (#6) is not fusing.

Is the fuse fusing?

- YES >> Replace the fuse after repairing the applicable circuit.  
NO >> GO TO 2.

#### 2.CHECK RAIN SENSOR POWER SUPPLY

1. Disconnect rain sensor connector.
2. Check voltage between rain sensor harness connector and ground.

| Terminal              |          | Voltage (Approx.) |
|-----------------------|----------|-------------------|
| (+)                   | (-)      |                   |
| Rain sensor connector | Terminal |                   |
| R9                    | 1        | Battery voltage   |

Is the measurement value normal?

- YES >> GO TO 3.  
NO >> Repair or replace harness.

#### 3.CHECK RAIN SENSOR GROUND CIRCUIT

Check continuity between rain sensor harness connector and ground.

| Rain sensor |          | Ground | Continuity |
|-------------|----------|--------|------------|
| Connector   | Terminal |        |            |
| R9          | 3        |        | Existed    |

Does continuity exist?

- YES >> GO TO 4.  
NO >> Repair or replace harness.

#### 4.CHECK RAIN SENSOR SIGNAL

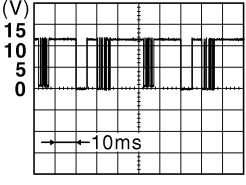
1. Connect rain sensor connector.
2. Turn ignition switch ON.
3. Check signal between BCM harness connector and ground with oscilloscope.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# RAIN SENSOR

## < DTC/CIRCUIT DIAGNOSIS >

| Terminal      |          | Condition          | Signal<br>(Reference value)   |
|---------------|----------|--------------------|---|
| (+)           | (-)      |                    |   |
| BCM connector | Terminal |                    |   |
| M123          | 112      | Ignition switch ON |  <p>Approx. 8.7V</p> |

Is the measurement value normal?

- YES >> Replace rain sensor.  
 NO >> GO TO 5.

### 5. CHECK RAIN SENSOR SIGNAL CIRCUIT FOR OPEN

1. Disconnect BCM connector and rain sensor connector.
2. Check continuity between BCM harness connector and rain sensor harness connector.

| BCM       |          | Rain sensor |          | Continuity |
|-----------|----------|-------------|----------|------------|
| Connector | Terminal | Connector   | Terminal |            |
| M123      | 112      | R9          | 2        | Existed    |

Does continuity exist?

- YES >> GO TO 6.  
 NO >> Repair or replace harness.

### 6. CHECK RAIN SENSOR SIGNAL CIRCUIT FOR SHORT

Check continuity between BCM harness connector and ground.

| BCM       |          | Ground | Continuity  |
|-----------|----------|--------|-------------|
| Connector | Terminal |        |             |
| M123      | 112      |        | Not existed |

Does continuity exist?

- YES >> Repair or replace harness.  
 NO >> Replace BCM. Refer to [BCS-80. "Removal and Installation"](#).



# FRONT WIPER AND WASHER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

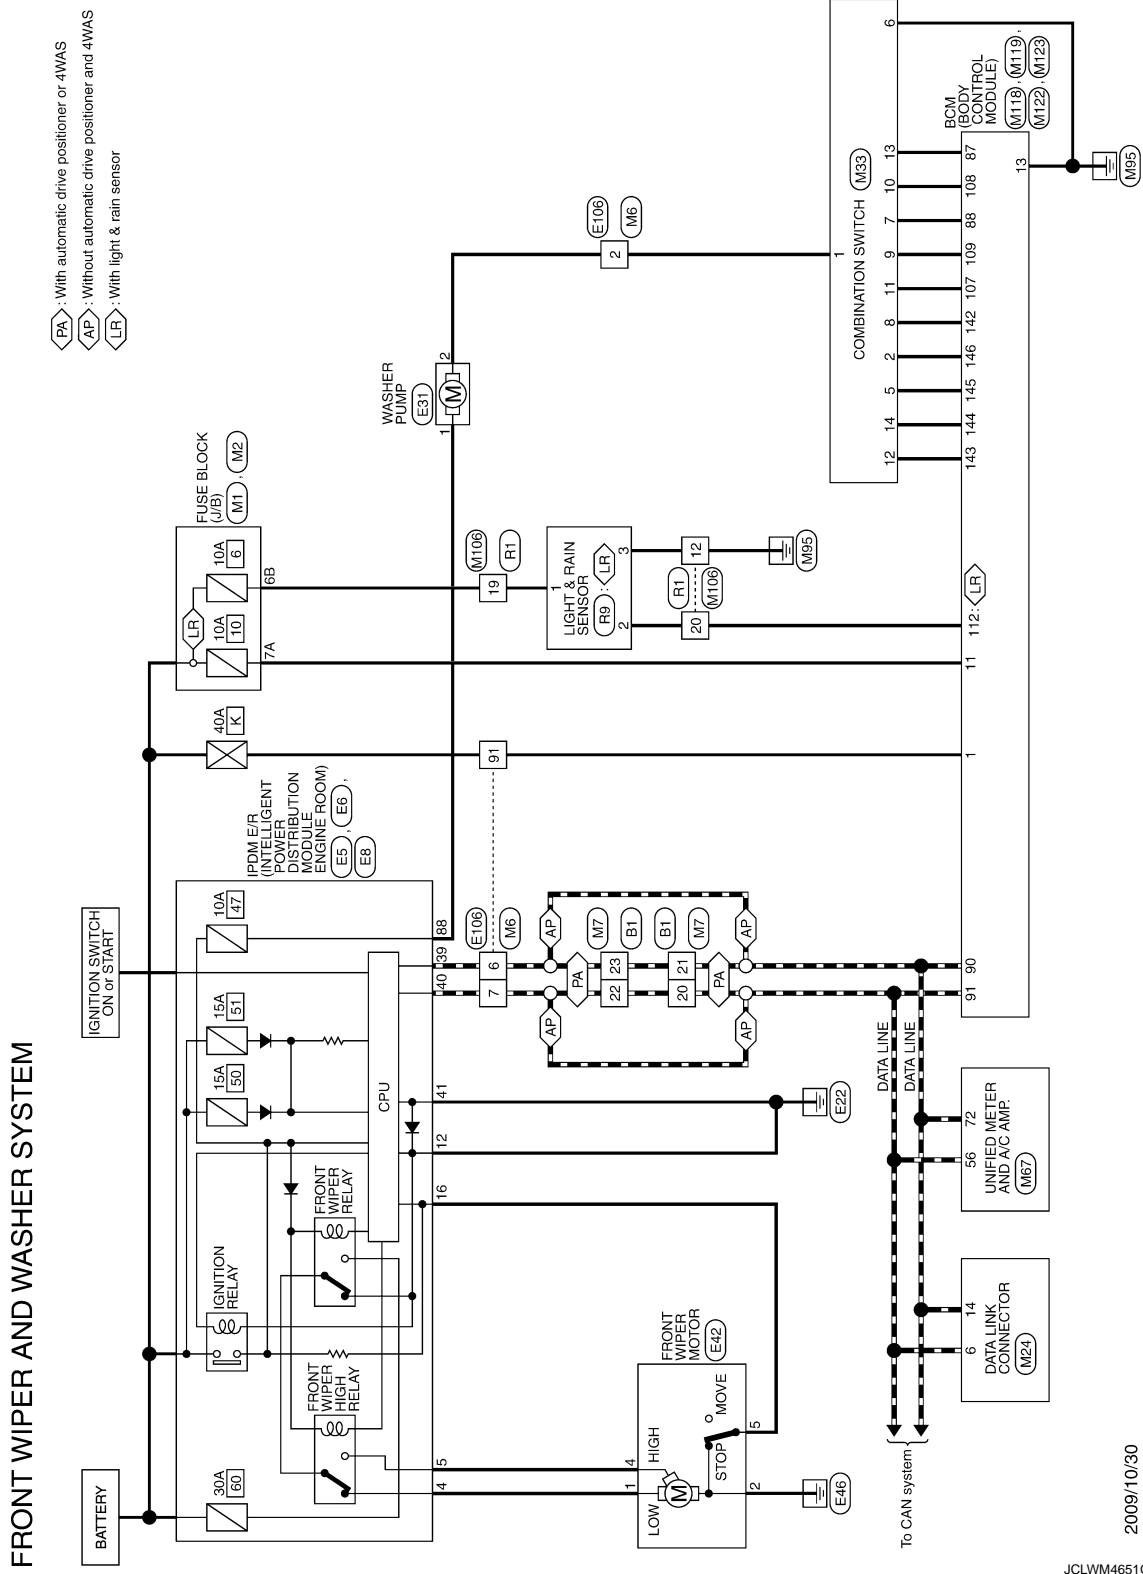
## FRONT WIPER AND WASHER SYSTEM

### Wiring Diagram - FRONT WIPER AND WASHER SYSTEM -

INFOID:000000005839030

**NOTE:**

Although wiring diagram includes "Light & rain sensor" the light function is not used. This service manual indicates "Rain sensor".



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
WW

# FRONT WIPER AND WASHER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER AND WASHER SYSTEM

|                |                 |
|----------------|-----------------|
| Connector No.  | B1              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80FW-CS16-TM4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | GR            | -                           |
| 2            | BG            | -                           |
| 3            | L             | -                           |
| 4            | Y             | -                           |
| 6            | R             | -                           |
| 8            | W             | -                           |
| 9            | V             | -                           |
| 15           | Y             | -                           |
| 16           | BR            | -                           |
| 17           | LG            | -                           |
| 18           | BG            | -                           |
| 20           | L             | -                           |
| 21           | P             | -                           |
| 22           | L             | -                           |
| 23           | P             | -                           |
| 24           | V             | -                           |
| 25           | SB            | -                           |
| 26           | G             | -                           |
| 27           | W             | -                           |
| 28           | R             | -                           |
| 31           | V             | -                           |
| 32           | SB            | -                           |
| 33           | SHIELD        | -                           |
| 34           | W             | -                           |
| 35           | BR            | -                           |
| 36           | Y             | -                           |
| 37           | SHIELD        | -                           |
| 38           | Y             | -                           |
| 39           | SB            | -                           |
| 40           | P             | -                           |
| 41           | L             | -                           |
| 42           | SHIELD        | -                           |
| 43           | R             | -                           |
| 44           | G             | -                           |
| 45           | SHIELD        | -                           |
| 46           | SB            | -                           |
| 55           | BR            | -                           |
| 56           | R             | -                           |

|     |        |   |
|-----|--------|---|
| 58  | V      | - |
| 59  | SB     | - |
| 60  | BR     | - |
| 61  | W      | - |
| 62  | R      | - |
| 63  | L      | - |
| 64  | Y      | - |
| 65  | SHIELD | - |
| 71  | BG     | - |
| 72  | GR     | - |
| 73  | P      | - |
| 74  | L      | - |
| 81  | V      | - |
| 82  | B      | - |
| 84  | Y      | - |
| 85  | G      | - |
| 86  | W      | - |
| 87  | R      | - |
| 88  | BR     | - |
| 89  | Y      | - |
| 90  | SB     | - |
| 91  | BG     | - |
| 92  | BR     | - |
| 93  | P      | - |
| 95  | BG     | - |
| 96  | Y      | - |
| 100 | GR     | - |

|                |  |
|----------------|--|
| Connector No.  | E5   |
| Connector Name | SPWM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) |
| Connector Type | TH20FW-CS12-M4-1V  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 4            | V             | -                           |
| 5            | L             | -                           |
| 6            | SB            | -                           |
| 7            | P             | -                           |
| 11           | W             | -                           |
| 12           | B/W           | -                           |
| 13           | Y             | -                           |
| 16           | LG            | -                           |
| 19           | R             | -                           |


|    |    |   |
|----|----|---|
| 25 | G  | - |
| 26 | Y  | - |
| 27 | BG | - |
| 28 | L  | - |
| 30 | GR | - |
| 32 | V  | - |
| 33 | P  | - |
| 36 | G  | - |

|                |  |
|----------------|--|
| Connector No.  | E6   |
| Connector Name | SPWM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) |
| Connector Type | TH08FW-NH  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 39           | P             | -                           |
| 40           | L             | -                           |
| 41           | B/W           | -                           |
| 42           | GR            | -                           |
| 43           | G             | -                           |
| 44           | LG            | -                           |
| 45           | V             | -                           |
| 46           | SB            | -                           |

|                |  |
|----------------|--|
| Connector No.  | E8   |
| Connector Name | SPWM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM) |
| Connector Type | MS08FW-CS  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 83           | R             | -                           |
| 84           | V             | -                           |
| 86           | W             | -                           |
| 87           | L             | -                           |

|    |    |   |
|----|----|---|
| 88 | G  | - |
| 89 | BR | - |
| 90 | P  | - |

|                |             |
|----------------|-------------|
| Connector No.  | E31         |
| Connector Name | WASHER PUMP |
| Connector Type | ED2FGY-RS   |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | G             | -                           |
| 2            | SB            | -                           |

|                |                   |
|----------------|-------------------|
| Connector No.  | E42               |
| Connector Name | FRONT WIPER MOTOR |
| Connector Type | HS05FGY           |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | V             | -                           |
| 2            | B/W           | -                           |
| 4            | L             | -                           |
| 5            | LG            | -                           |

# FRONT WIPER AND WASHER SYSTEM

## < DTC/CIRCUIT DIAGNOSIS >

### FRONT WIPER AND WASHER SYSTEM

|                |                 |
|----------------|-----------------|
| Connector No.  | E105            |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80FW-CS16-TM4 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | V             |                             |
| 2            | SB            |                             |
| 3            | EG            |                             |
| 5            | W             |                             |
| 6            | P             |                             |
| 7            | L             |                             |
| 11           | V             |                             |
| 12           | P             |                             |
| 13           | R             |                             |
| 14           | W             |                             |
| 15           | L             |                             |
| 16           | GR            |                             |
| 17           | SB            |                             |
| 18           | LG            |                             |
| 29           | G             |                             |
| 31           | L             |                             |
| 32           | EG            |                             |
| 33           | P             |                             |
| 34           | V             |                             |
| 35           | W             |                             |
| 36           | EG            |                             |
| 37           | G             |                             |
| 38           | R             |                             |
| 40           | R             |                             |
| 41           | LG            |                             |
| 42           | SB            |                             |
| 43           | G             |                             |
| 44           | LG            |                             |
| 45           | GR            |                             |
| 46           | BR            |                             |
| 47           | B             |                             |
| 48           | Y             |                             |
| 49           | V             |                             |
| 50           | R             |                             |
| 51           | SB            |                             |
| 52           | P             |                             |
| 53           | G             |                             |
| 54           | B             |                             |

|     |        |  |
|-----|--------|--|
| 57  | GR     |  |
| 58  | V      |  |
| 60  | R      |  |
| 61  | P      |  |
| 82  | G      |  |
| 83  | V      |  |
| 84  | L      |  |
| 85  | W      |  |
| 86  | GR     |  |
| 87  | LG     |  |
| 88  | L      |  |
| 89  | BR     |  |
| 91  | W      |  |
| 92  | LG     |  |
| 93  | GR     |  |
| 94  | SB     |  |
| 95  | GR     |  |
| 96  | R      |  |
| 97  | Y      |  |
| 98  | SHIELD |  |
| 99  | L      |  |
| 100 | P      |  |




|                |                  |
|----------------|------------------|
| Connector No.  | M2               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | MS10FW-CS        |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1B           | SB            |                             |
| 3B           | P             |                             |
| 4B           | G             |                             |
| 5B           | EG            |                             |
| 6B           | Y             |                             |
| 7B           | P             |                             |
| 8B           | R             |                             |
| 9B           | SB            |                             |

|                |                  |
|----------------|------------------|
| Connector No.  | M1               |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS10FW-M2        |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1A           | V             |                             |
| 2A           | G             |                             |
| 3A           | L             |                             |
| 4A           | P             |                             |
| 5A           | L             |                             |
| 6A           | Y             |                             |
| 7A           | R             |                             |
| 8A           | L             |                             |

|                |                 |
|----------------|-----------------|
| Connector No.  | M6              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80MW-CS16-TM4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | W             |                             |
| 2            | GR            |                             |
| 3            | R             |                             |
| 5            | W             |                             |
| 6            | P             |                             |
| 7            | L             |                             |
| 11           | V             |                             |
| 12           | P             |                             |
| 13           | R             |                             |
| 14           | W             |                             |
| 15           | L             |                             |
| 16           | GR            |                             |
| 17           | BR            |                             |
| 18           | L             |                             |

|     |        |  |
|-----|--------|--|
| 29  | G      |  |
| 31  | L      |  |
| 32  | Y      |  |
| 33  | EG     |  |
| 34  | W      |  |
| 35  | BR     |  |
| 36  | P      |  |
| 37  | P      |  |
| 38  | G      |  |
| 40  | V      |  |
| 41  | LG     |  |
| 42  | R      |  |
| 43  | G      |  |
| 44  | G      |  |
| 45  | B      |  |
| 46  | R      |  |
| 47  | EG     |  |
| 48  | SB     |  |
| 49  | Y      |  |
| 49  | L      |  |
| 50  | R      |  |
| 51  | R      |  |
| 52  | W      |  |
| 53  | G      |  |
| 54  | B      |  |
| 57  | B      |  |
| 58  | LG     |  |
| 80  | SB     |  |
| 81  | B      |  |
| 82  | V      |  |
| 83  | W      |  |
| 84  | L      |  |
| 85  | GR     |  |
| 86  | Y      |  |
| 87  | G      |  |
| 88  | G      |  |
| 89  | R      |  |
| 91  | W      |  |
| 92  | Y      |  |
| 93  | EG     |  |
| 94  | L      |  |
| 95  | Y      |  |
| 96  | R      |  |
| 97  | LG     |  |
| 98  | SHIELD |  |
| 99  | V      |  |
| 100 | SB     |  |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


WW

# FRONT WIPER AND WASHER SYSTEM
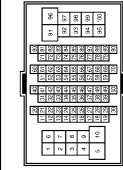
## < DTC/CIRCUIT DIAGNOSIS >


### FRONT WIPER AND WASHER SYSTEM

|                |                 |
|----------------|-----------------|
| Connector No.  | M7              |
| Connector Name | WIRE TO WIRE    |
| Connector Type | TH80MW-CS16-TM4 |



|     |        |   |
|-----|--------|---|
| 56  | B      | - |
| 58  | V      | - |
| 59  | Y      | - |
| 60  | Y      | - |
| 61  | W      | - |
| 62  | R      | - |
| 63  | G      | - |
| 64  | B      | - |
| 65  | SHIELD | - |
| 71  | V      | - |
| 72  | P      | - |
| 73  | SB     | - |
| 74  | V      | - |
| 81  | W      | - |
| 82  | BR     | - |
| 84  | LG     | - |
| 85  | BG     | - |
| 86  | SB     | - |
| 87  | G      | - |
| 88  | GR     | - |
| 89  | L      | - |
| 90  | P      | - |
| 91  | BG     | - |
| 92  | L      | - |
| 93  | P      | - |
| 95  | BG     | - |
| 96  | Y      | - |
| 100 | P      | - |


|                |                     |
|----------------|---------------------|
| Connector No.  | M24                 |
| Connector Name | DATA LINK CONNECTOR |
| Connector Type | BD18FW-P            |



|    |   |   |
|----|---|---|
| 16 | R | - |
|----|---|---|



|                |                    |
|----------------|--------------------|
| Connector No.  | M33                |
| Connector Name | COMBINATION SWITCH |
| Connector Type | TH18FW-NH          |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | GR            | FR WASHER (-)               |
| 2            | SB            | OUTPUT 4                    |
| 5            | L             | OUTPUT 3                    |
| 8            | B             | GND                         |
| 9            | BG            | INPUT 3                     |
| 8            | BR            | OUTPUT 5                    |
| 9            | W             | INPUT 2                     |
| 10           | R             | INPUT 4                     |
| 11           | LG            | INPUT 1                     |
| 12           | P             | OUTPUT 1                    |
| 13           | Y             | INPUT 5                     |
| 14           | G             | OUTPUT 2                    |


|                |                            |
|----------------|----------------------------|
| Connector No.  | M67                        |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH32FW-NH                  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 41           | L             | ACC POWER SUPPLY            |
| 42           | BR            | FUEL LEVEL SENSOR SIGNAL    |
| 43           | BR            | INTAKE SENSOR SIGNAL        |
| 44           | LG            | IN-VEHICLE SENSOR SIGNAL    |
| 45           | V             | AMBIENT SENSOR SIGNAL       |
| 46           | Y             | SUNLOAD SENSOR SIGNAL       |
| 47           | G             | GAS SENSOR SIGNAL           |

|    |    |                                |
|----|----|--------------------------------|
| 53 | W  | IGNITION POWER SUPPLY          |
| 54 | SB | BATTERY POWER SUPPLY           |
| 55 | B  | GROUND                         |
| 56 | B  | CAN-L                          |
| 57 | LG | BRAKE FLUID LEVEL SWITCH       |
| 58 | Y  | FUEL LEVEL SENSOR GROUND       |
| 59 | GR | INTAKE SENSOR GROUND           |
| 60 | W  | IN-VEHICLE SENSOR GROUND       |
| 61 | B  | AMBIENT SENSOR GROUND          |
| 62 | SB | SUNLOAD SENSOR GROUND          |
| 63 | L  | ION CONTROL MODE OUTPUT SIGNAL |
| 65 | BG | ECV SIGNAL                     |
| 69 | P  | A/C LAN SIGNAL                 |
| 70 | R  | EACH DOOR MOTOR POWER SUPPLY   |
| 71 | GR | GROUND                         |
| 72 | P  | CAN-L                          |

|                |              |
|----------------|--------------|
| Connector No.  | M106         |
| Connector Name | WIRE TO WIRE |
| Connector Type | NH10MP-CS10  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | L             | -                           |
| 3            | SHIELD        | -                           |
| 4            | G             | -                           |
| 5            | BR            | -                           |
| 6            | BG            | -                           |
| 7            | Y             | -                           |
| 8            | P             | -                           |
| 9            | LG            | -                           |
| 10           | V             | -                           |
| 11           | B             | -                           |
| 12           | B             | -                           |
| 13           | R             | -                           |
| 15           | R             | -                           |
| 16           | G             | -                           |
| 17           | SHIELD        | -                           |
| 18           | B             | -                           |
| 19           | Y             | -                           |
| 20           | R             | -                           |

# FRONT WIPER AND WASHER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

## FRONT WIPER AND WASHER SYSTEM

|                |                           |
|----------------|---------------------------|
| Connector No.  | M118                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | MDFB-LC                   |



| Terminal No. | Color of Wire | Signal Name [Specification]     |
|--------------|---------------|---------------------------------|
| 1            | W             | BAT (F/L)                       |
| 2            | Y             | POWER WINDOW POWER SUPPLY (BAT) |
| 3            | BG            | POWER WINDOW POWER SUPPLY (RAP) |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M119                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | NS16FW-CS                 |



| Terminal No. | Color of Wire | Signal Name [Specification]        |
|--------------|---------------|------------------------------------|
| 4            | LG            | INTERIOR ROOM LAMP POWER SUPPLY    |
| 5            | P             | PASSENGER DOOR UNLOCK OUTPUT       |
| 7            | SB            | STEP LAMP OUTPUT                   |
| 8            | V             | ALL DOOR FUEL LID LOCK OUTPUT      |
| 9            | G             | DRIVER DOOR FUEL LID UNLOCK OUTPUT |
| 10           | P             | REAR DOOR UNLOCK OUTPUT            |
| 11           | R             | BAT (FUSE)                         |
| 13           | B             | GND                                |
| 14           | W             | PUSH-BUTTON IGNITION SW ILL GND    |
| 15           | BG            | ACC IND                            |
| 17           | W             | TURN SIGNAL RH (FRONT)             |
| 18           | BG            | TURN SIGNAL LH (FRONT)             |
| 19           | V             | ROOM LAMP-TIMER CONTROL            |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M122                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH4QFB-NH                 |




| Terminal No. | Color of Wire | Signal Name [Specification]          |
|--------------|---------------|--------------------------------------|
| 72           | R             | ROOM ANT 2-                          |
| 73           | G             | ROOM ANT 2+                          |
| 74           | SB            | PASSENGER DOOR ANT-                  |
| 75           | BR            | PASSENGER DOOR ANT+                  |
| 76           | V             | DRIVER DOOR ANT-                     |
| 77           | LG            | DRIVER DOOR ANT+                     |
| 78           | V             | ROOM ANT 1-                          |
| 79           | BR            | ROOM ANT 1+                          |
| 80           | GR            | INATS ANT AMP                        |
| 81           | W             | W                                    |
| 82           | SB            | IGN RELAY (F/B) CONT                 |
| 83           | Y             | KEYLESS ENTRY RECEIVER COMM          |
| 87           | Y             | COMBI SW INPUT 5                     |
| 88           | BG            | COMBI SW INPUT 3                     |
| 89           | BR            | PUSH SW                              |
| 90           | P             | CAN-L                                |
| 91           | L             | CAN-H                                |
| 92           | LG            | KEY SLOT ILL                         |
| 93           | GR            | ON IND                               |
| 95           | BG            | ACC RELAY CONT                       |
| 96           | GR            | A/T SHIFT SELECTOR POWER SUPPLY      |
| 97           | L             | S/L CONDITION 1                      |
| 98           | P             | S/L CONDITION 2                      |
| 99           | R             | SHIFT P [Wgr A/T]                    |
| 99           | BR            | ICC CLUTCH SW [With M/T and ICC]     |
| 99           | BR            | ASD CLUTCH SW [With M/T without ICC] |
| 100          | Y             | PASSENGER DOOR REQUEST SW            |
| 101          | P             | DRIVER DOOR REQUEST SW               |
| 102          | BG            | BLOWER FAN MOTOR RELAY CONT          |
| 103          | P             | KEYLESS ENTRY RECEIVER POWER SUPPLY  |
| 106          | SB            | S/L UNIT POWER SUPPLY                |
| 107          | LG            | COMBI SW INPUT 1                     |
| 108          | R             | COMBI SW INPUT 4                     |
| 109          | W             | COMBI SW INPUT 2                     |
| 110          | G             | HAZARD SW                            |
| 111          | Y             | S/L UNIT COMM                        |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M123                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH4QFG-NH                 |



| Terminal No. | Color of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 112          | R             | RAIN SENSOR SERIAL LINK           |
| 113          | BG            | OPTICAL SENSOR                    |
| 114          | R             | CLUTCH INTERLOCK SW               |
| 116          | SB            | STOP LAMP SW 1                    |
| 118          | BR            | STOP LAMP SW 2                    |
| 119          | SB            | DR DOOR UNLOCK SENSOR             |
| 121          | SB            | KEY SLOT SW                       |
| 124          | R             | PASSENGER DOOR SW                 |
| 129          | BG            | TRUNK LID OPENER CANCEL SW        |
| 132          | V             | POWER WINDOW SW COMM              |
| 133          | L             | PUSH-BUTTON IGNITION SW ILL POWER |
| 134          | LG            | LOCK IND                          |
| 137          | BG            | RECEIVER / SENSOR GND             |
| 138          | V             | RECEIVER / SENSOR POWER SUPPLY    |
| 139          | L             | TIRE PRESSURE RECEIVER COMM       |
| 140          | B             | SHIFT N/P                         |
| 141          | W             | SECURITY INDICATOR LAMP           |
| 142          | BR            | COMBI SW OUTPUT 5                 |
| 143          | P             | COMBI SW OUTPUT 1                 |
| 144          | G             | COMBI SW OUTPUT 2                 |
| 145          | L             | COMBI SW OUTPUT 3                 |
| 146          | SB            | COMBI SW OUTPUT 4                 |
| 149          | W             | TIRE PRESSURE WARN CHECK SW       |
| 150          | GR            | DRIVER DOOR SW                    |
| 151          | G             | REAR WINDOW DEFOGGER RELAY CONT   |

|                |              |
|----------------|--------------|
| Connector No.  | R1           |
| Connector Name | WIRE TO WIRE |
| Connector Type | NS10FW-CS10  |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2            | L             | -                           |
| 3            | SHIELD        | -                           |
| 4            | G             | -                           |
| 5            | BR            | -                           |
| 6            | Y             | -                           |
| 7            | GR            | -                           |
| 8            | BR            | -                           |
| 9            | R             | -                           |
| 10           | V             | -                           |
| 11           | B             | -                           |
| 12           | B             | -                           |
| 13           | Y             | -                           |
| 15           | R             | -                           |
| 16           | G             | -                           |
| 17           | SHIELD        | -                           |
| 18           | B             | -                           |
| 19           | Y             | -                           |
| 20           | R             | -                           |

|                |                     |
|----------------|---------------------|
| Connector No.  | R8                  |
| Connector Name | LIGHT & RAIN SENSOR |
| Connector Type | FA808FB             |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | Y             | +B                          |
| 2            | R             | SIG                         |
| 3            | B             | GND                         |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

### BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000005886406

#### VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

| Monitor Item   | Condition   | Value/Status               |
|----------------|---|----------------------------|
| FR WIPER HI    | Other than front wiper switch HI                          | Off                        |
|                | Front wiper switch HI                                     | On                         |
| FR WIPER LOW   | Other than front wiper switch LO                          | Off                        |
|                | Front wiper switch LO                                     | On                         |
| FR WASHER SW   | Front washer switch OFF                                   | Off                        |
|                | Front washer switch ON                                    | On                         |
| FR WIPER INT   | Other than front wiper switch INT/AUTO                    | Off                        |
|                | Front wiper switch INT/AUTO                               | On                         |
| FR WIPER STOP  | Front wiper is not in STOP position                       | Off                        |
|                | Front wiper is in STOP position                           | On                         |
| INT VOLUME     | Wiper volume dial is in a dial position 1 - 7             | Wiper volume dial position |
| TURN SIGNAL R  | Other than turn signal switch RH                          | Off                        |
|                | Turn signal switch RH                                     | On                         |
| TURN SIGNAL L  | Other than turn signal switch LH                          | Off                        |
|                | Turn signal switch LH                                     | On                         |
| TAIL LAMP SW   | Other than lighting switch 1ST and 2ND                    | Off                        |
|                | Lighting switch 1ST or 2ND                                | On                         |
| HI BEAM SW     | Other than lighting switch HI                             | Off                        |
|                | Lighting switch HI  | On                         |
| HEAD LAMP SW 1 | Other than lighting switch 2ND                            | Off                        |
|                | Lighting switch 2ND                                       | On                         |
| HEAD LAMP SW 2 | Other than lighting switch 2ND                            | Off                        |
|                | Lighting switch 2ND                                       | On                         |
| PASSING SW     | Other than lighting switch PASS                           | Off                        |
|                | Lighting switch PASS                                      | On                         |
| AUTO LIGHT SW  | Other than lighting switch AUTO                           | Off                        |
|                | Lighting switch AUTO                                      | On                         |
| FR FOG SW      | Front fog lamp switch OFF                                 | Off                        |
|                | Front fog lamp switch ON                                  | On                         |
| RR FOG SW      | <b>NOTE:</b><br>The item is indicated, but not monitored. | Off                        |
| DOOR SW-DR     | Driver door closed  | Off                        |
|                | Driver door opened  | On                         |
| DOOR SW-AS     | Passenger door closed                                     | Off                        |
|                | Passenger door opened                                     | On                         |
| DOOR SW-RR     | Rear RH door closed                                       | Off                        |
|                | Rear LH door opened                                       | On                         |

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

| Monitor Item   | Condition  | Value/Status |    |
|----------------|--|--------------|----|
| DOOR SW-RL     | Rear LH door closed  | Off          | A  |
|                | Rear LH door opened  | On           |    |
| DOOR SW-BK     | <b>NOTE:</b><br>The item is indicated, but not monitored.                        | Off          | B  |
| CDL LOCK SW    | Other than power door lock switch LOCK   | Off          | C  |
|                | Power door lock switch LOCK  | On           |    |
| CDL UNLOCK SW  | Other than power door lock switch UNLOCK   | Off          | D  |
|                | Power door lock switch UNLOCK  | On           |    |
| KEY CYL LK-SW  | Other than driver door key cylinder LOCK   | Off          | E  |
|                | Driver door key cylinder LOCK  | On           |    |
| KEY CYL UN-SW  | Other than driver door key cylinder UNLOCK                                       | Off          | F  |
|                | Driver door key cylinder LOCK  | On           |    |
| KEY CYL SW-TR  | <b>NOTE:</b><br>The item is indicated, but not monitored.                        | Off          | F  |
| HAZARD SW      | Hazard switch is OFF   | Off          | G  |
|                | Hazard switch is ON  | On           |    |
| REAR DEF SW    | <b>NOTE:</b><br>The item is indicated, but not monitored.                        | Off          | G  |
| H/L WASH SW    | <b>NOTE:</b><br>The item is indicated, but not monitored.                        | Off          | H  |
| TR CANCEL SW   | Trunk lid opener cancel switch OFF   | Off          | I  |
|                | Trunk lid opener cancel switch ON  | On           |    |
| TR/BD OPEN SW  | Trunk lid opener switch OFF  | Off          | J  |
|                | While the trunk lid opener switch is turned ON                                   | On           |    |
| TRNK/HAT MNTR  | Trunk lid closed   | Off          | K  |
|                | Trunk lid opened   | On           |    |
| RKE-LOCK       | LOCK button of the Intelligent Key is not pressed                                | Off          | K  |
|                | LOCK button of the Intelligent Key is pressed                                    | On           |    |
| RKE-UNLOCK     | UNLOCK button of the Intelligent Key is not pressed                              | Off          | WW |
|                | UNLOCK button of the Intelligent Key is pressed                                  | On           |    |
| RKE-TR/BD      | TRUNK OPEN button of the Intelligent Key is not pressed                          | Off          | M  |
|                | TRUNK OPEN button of the Intelligent Key is pressed                              | On           |    |
| RKE-PANIC      | PANIC button of the Intelligent Key is not pressed                               | Off          | N  |
|                | PANIC button of the Intelligent Key is pressed                                   | On           |    |
| RKE-P/W OPEN   | UNLOCK button of the Intelligent Key is not pressed                              | Off          | O  |
|                | UNLOCK button of the Intelligent Key is pressed and held                         | On           |    |
| RKE-MODE CHG   | LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously | Off          | P  |
|                | LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously     | On           |    |
| OPTICAL SENSOR | Bright outside of the vehicle  | Close to 5 V | P  |
|                | Dark outside of the vehicle  | Close to 0 V |    |
| REQ SW -DR     | Driver door request switch is not pressed  | Off          |    |
|                | Driver door request switch is pressed  | On           |    |
| REQ SW -AS     | Passenger door request switch is not pressed                                     | Off          |    |
|                | Passenger door request switch is pressed   | On           |    |

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

| Monitor Item  | Condition   | Value/Status |
|---------------|---|--------------|
| REQ SW -RR    | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off          |
| REQ SW -RL    | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off          |
| REQ SW -BD/TR | Trunk lid opener request switch is not pressed  | Off          |
|               | Trunk lid opener request switch is pressed  | On           |
| PUSH SW       | Push-button ignition switch (push switch) is not pressed  | Off          |
|               | Push-button ignition switch (push switch) is pressed  | On           |
| IGN RLY2 -F/B | Ignition switch in OFF or ACC position  | Off          |
|               | Ignition switch in ON position  | On           |
| ACC RLY -F/B  | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off          |
| CLUCH SW      | The clutch pedal is not depressed   | Off          |
|               | The clutch pedal is depressed   | On           |
| BRAKE SW 1    | The brake pedal is depressed when No. 7 fuse is blown   | Off          |
|               | The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal  | On           |
| BRAKE SW 2    | The brake pedal is not depressed  | Off          |
|               | The brake pedal is depressed  | On           |
| DETE/CANCL SW | <ul style="list-style-type: none"> <li>• Selector lever in P position (Except M/T models)</li> <li>• The clutch pedal is depressed (M/T models)</li> </ul>                          | Off          |
|               | <ul style="list-style-type: none"> <li>• Selector lever in any position other than P (Except M/T models)</li> <li>• The clutch pedal is not depressed (M/T models)</li> </ul>       | On           |
| SFT PN/N SW   | Selector lever in any position other than P and N   | Off          |
|               | Selector lever in P or N position   | On           |
| S/L -LOCK     | Steering is unlocked  | Off          |
|               | Steering is locked  | On           |
| S/L -UNLOCK   | Steering is locked  | Off          |
|               | Steering is unlocked  | On           |
| S/L RELAY-F/B | Ignition switch in OFF or ACC position  | Off          |
|               | Ignition switch in ON position  | On           |
| UNLK SEN -DR  | Driver door is unlocked   | Off          |
|               | Driver door is locked   | On           |
| PUSH SW -IPDM | Push-button ignition switch (push-switch) is not pressed  | Off          |
|               | Push-button ignition switch (push-switch) is pressed  | On           |
| IGN RLY1 -F/B | Ignition switch in OFF or ACC position  | Off          |
|               | Ignition switch in ON position  | On           |
| DETE SW -IPDM | Selector lever in any position other than P   | Off          |
|               | Selector lever in P position  | On           |
| SFT PN -IPDM  | <ul style="list-style-type: none"> <li>• Selector lever in any position other than P and N (Except M/T models)</li> <li>• The clutch pedal is not depressed (M/T models)</li> </ul> | Off          |
|               | <ul style="list-style-type: none"> <li>• Selector lever in P or N position (Except M/T models)</li> <li>• The clutch pedal is depressed (M/T models)</li> </ul>                     | On           |
| SFT P -MET    | Selector lever in any position other than P   | Off          |
|               | Selector lever in P position  | On           |
| SFT N -MET    | Selector lever in any position other than N   | Off          |
|               | Selector lever in N position  | On           |



## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

| Monitor Item   | Condition   | Value/Status                               |    |
|----------------|---|--|----|
| ENGINE STATE   | Engine stopped  | Stop                                       | A  |
|                | While the engine stalls   | Stall                                      |    |
|                | At engine cranking  | Crank                                      | B  |
|                | Engine running  | Run  |    |
| S/L LOCK-IPDM  | Steering is unlocked  | Off  |    |
|                | Steering is locked  | On   | C  |
| S/L UNLK-IPDM  | Steering is locked  | Off  |    |
|                | Steering is unlocked  | On   | D  |
| S/L RELAY-REQ  | Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK   | Off  |    |
|                | Steering lock system is the LOCK condition or the changing condition from LOCK to UNLOCK        | On   | E  |
| VEH SPEED 1    | While driving   | Equivalent to speedometer reading          | F  |
| VEH SPEED 2    | While driving   | Equivalent to speedometer reading          |    |
| DOOR STAT-DR   | Driver door is locked   | LOCK                                       | G  |
|                | Wait with selective UNLOCK operation (60 seconds)   | READY                                      |    |
|                | Driver door is unlocked   | UNLOCK                                     |    |
| DOOR STAT-AS   | Passenger door is locked  | LOCK                                       | H  |
|                | Wait with selective UNLOCK operation (60 seconds)   | READY                                      |    |
|                | Passenger door is unlocked  | UNLOCK                                     |    |
| ID OK FLAG     | Steering is locked  | Reset                                      | I  |
|                | Steering is unlocked  | Set  |    |
| PRMT ENG STRT  | The engine start is prohibited  | Reset                                      | J  |
|                | The engine start is permitted   | Set  |    |
| PRMT RKE STRT  | <b>NOTE:</b><br>The item is indicated, but not monitored.                                       | Reset                                      | K  |
| KEY SW -SLOT   | The Intelligent Key is not inserted into key slot   | Off  |    |
|                | The Intelligent Key is inserted into key slot   | On   | WW |
| RKE OPE COUN1  | During the operation of the Intelligent Key   | Operation frequency of the Intelligent Key |    |
| RKE OPE COUN2  | <b>NOTE:</b><br>The item is indicated, but not monitored.                                       | —  | M  |
| CONFIRM ID ALL | The key ID that the key slot receives is not recognized by any key ID registered to BCM.        | Yet  |    |
|                | The key ID that the key slot receives is recognized by any key ID registered to BCM.            | Done                                       | N  |
| CONFIRM ID4    | The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM. | Yet  | O  |
|                | The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.     | Done                                       |    |
| CONFIRM ID3    | The key ID that the key slot receives is not recognized by the third key ID registered to BCM.  | Yet  | P  |
|                | The key ID that the key slot receives is recognized by the third key ID registered to BCM.      | Done                                       |    |

## BCM (BODY CONTROL MODULE)

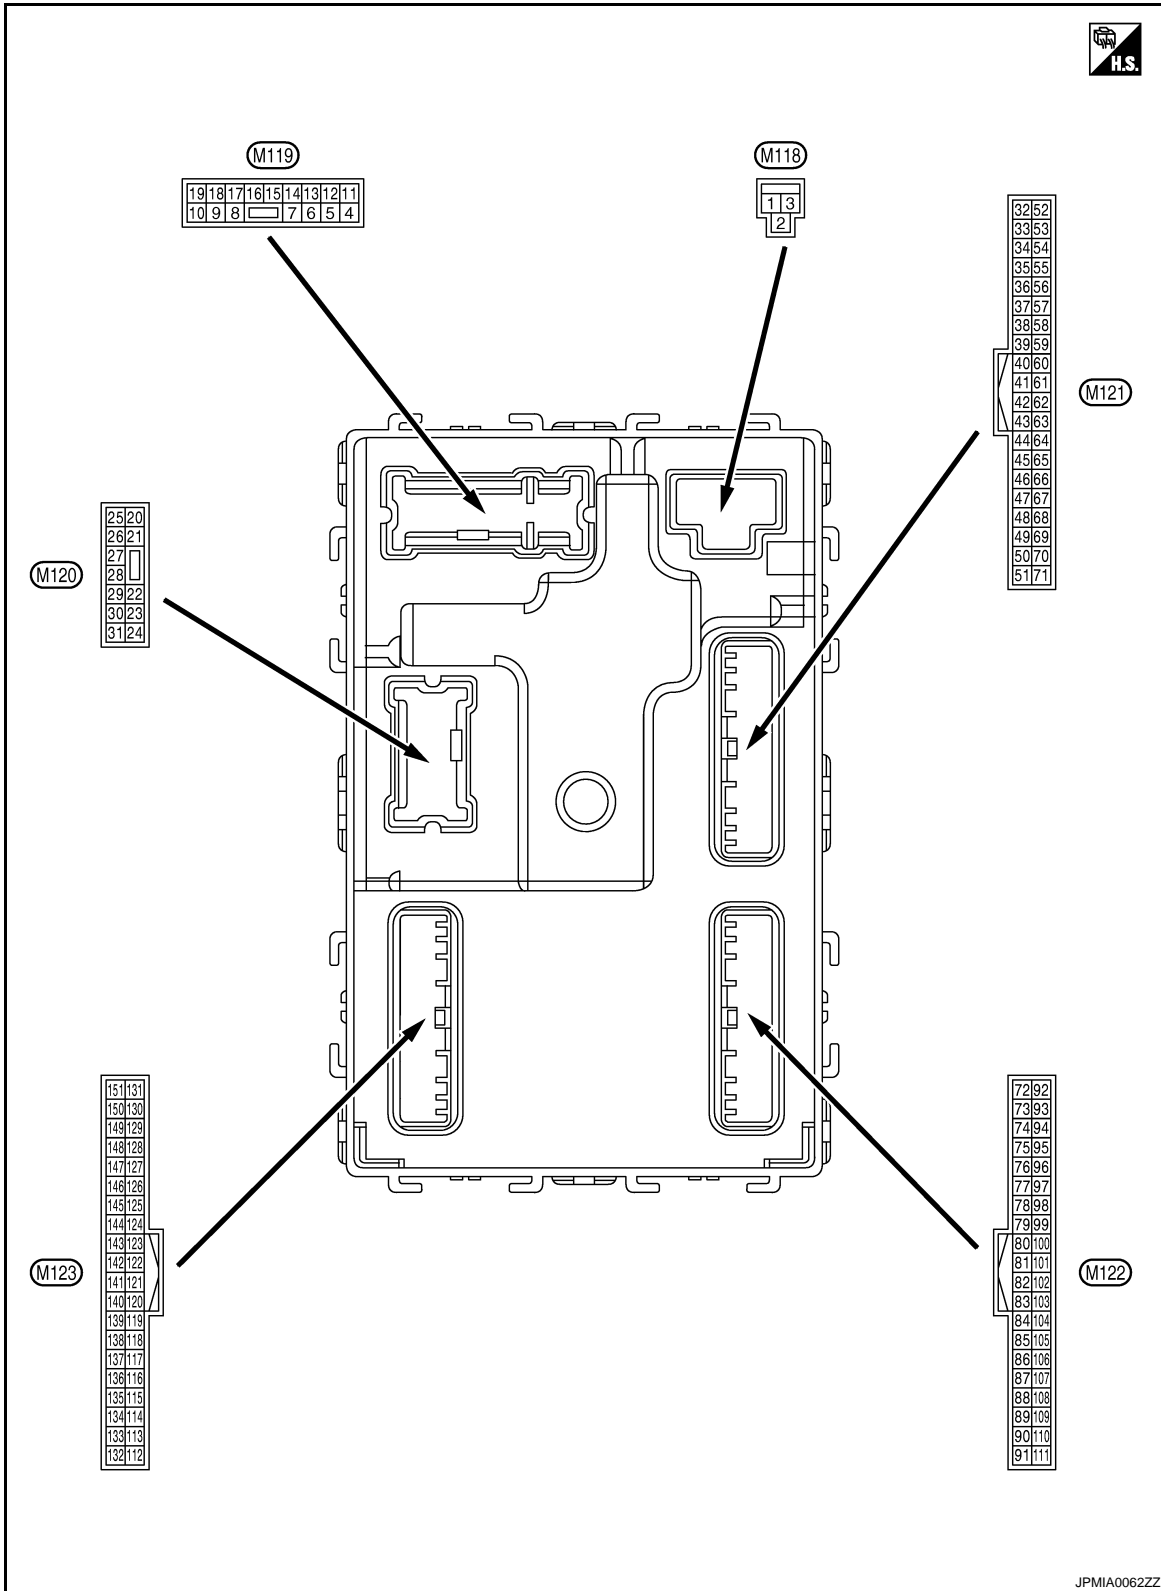
### < ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition   | Value/Status                  |
|--------------|---|-------------------------------|
| CONFIRM ID2  | The key ID that the key slot receives is not recognized by the second key ID registered to BCM. | Yet                           |
|              | The key ID that the key slot receives is recognized by the second key ID registered to BCM.     | Done                          |
| CONFIRM ID1  | The key ID that the key slot receives is not recognized by the first key ID registered to BCM.  | Yet                           |
|              | The key ID that the key slot receives is recognized by the first key ID registered to BCM.      | Done                          |
| TP 4         | The ID of fourth Intelligent Key is not registered to BCM                                       | Yet                           |
|              | The ID of fourth Intelligent Key is registered to BCM   | Done                          |
| TP 3         | The ID of third Intelligent Key is not registered to BCM  | Yet                           |
|              | The ID of third Intelligent Key is registered to BCM  | Done                          |
| TP 2         | The ID of second Intelligent Key is not registered to BCM                                       | Yet                           |
|              | The ID of second Intelligent Key is registered to BCM   | Done                          |
| TP 1         | The ID of first Intelligent Key is not registered to BCM  | Yet                           |
|              | The ID of first Intelligent Key is registered to BCM  | Done                          |
| AIR PRESS FL | Ignition switch ON (Only when the signal from the transmitter is received)                      | Air pressure of front LH tire |
| AIR PRESS FR | Ignition switch ON (Only when the signal from the transmitter is received)                      | Air pressure of front RH tire |
| AIR PRESS RR | Ignition switch ON (Only when the signal from the transmitter is received)                      | Air pressure of rear RH tire  |
| AIR PRESS RL | Ignition switch ON (Only when the signal from the transmitter is received)                      | Air pressure of rear LH tire  |
| ID REGST FL1 | ID of front LH tire transmitter is registered   | Done                          |
|              | ID of front LH tire transmitter is not registered   | Yet                           |
| ID REGST FR1 | ID of front RH tire transmitter is registered   | Done                          |
|              | ID of front RH tire transmitter is not registered   | Yet                           |
| ID REGST RR1 | ID of rear RH tire transmitter is registered  | Done                          |
|              | ID of rear RH tire transmitter is not registered  | Yet                           |
| ID REGST RL1 | ID of rear LH tire transmitter is registered  | Done                          |
|              | ID of rear LH tire transmitter is not registered  | Yet                           |
| WARNING LAMP | Tire pressure indicator OFF   | Off                           |
|              | Tire pressure indicator ON  | On                            |
| BUZZER       | Tire pressure warning alarm is not sounding   | Off                           |
|              | Tire pressure warning alarm is sounding   | On                            |

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## TERMINAL LAYOUT




## PHYSICAL VALUES

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
WW  
M  
N  
O  
P





# BCM (BODY CONTROL MODULE)
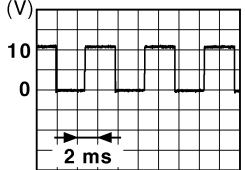
## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description   |                  | Condition   |   | Value<br>(Approx.)   |
|------------------------------|--------|---|------------------|---|---|--|
|                              |        | Signal name   | Input/<br>Output |   |   |  |
| +                            | -      |   |                  |   |   |  |
| 1<br>(W)                     | Ground | Battery power supply                                  | Input            | Ignition switch OFF   |   | Battery voltage  |
| 2<br>(Y)                     | Ground | P/W power supply<br>(BAT)                             | Output           | Ignition switch OFF   |   | 12 V   |
| 3<br>(BG)                    | Ground | P/W power supply<br>(RAP)                             | Output           | Ignition switch ON  |   | 12 V   |
| 4<br>(LG)                    | Ground | Interior room lamp<br>power supply                    | Output           | Interior room lamp battery saver is activated.<br>(Cuts the interior room lamp power supply)        |   | 0 V  |
|                              |        |   |                  | Interior room lamp battery saver is not activated.<br>(Outputs the interior room lamp power supply) |   | 12 V   |
| 5<br>(P)                     | Ground | Passenger door UN-<br>LOCK                            | Output           | Passenger<br>door   | UNLOCK (Actuator is activated)                | 12 V   |
|                              |        |   |                  |   | Other than UNLOCK) Actuator is not activated  | 0 V  |
| 7<br>(SB)                    | Ground | Step lamp   | Output           | Step lamp   | ON  | 0 V  |
|                              |        |   |                  |   | OFF   | 12 V   |
| 8<br>(V)                     | Ground | All doors, fuel lid<br>LOCK                           | Output           | All doors, fuel<br>lid  | LOCK (Actuator is activated)                  | 12 V   |
|                              |        |   |                  |   | Other than LOCK (Actuator is not activated)   | 0 V  |
| 9<br>(G)                     | Ground | Driver door, fuel lid<br>UNLOCK                       | Output           | Driver door,<br>fuel lid  | UNLOCK (Actuator is activated)                | 12 V   |
|                              |        |   |                  |   | Other than UNLOCK (Actuator is not activated) | 0 V  |
| 10<br>(P)                    | Ground | Rear RH door and<br>rear LH door UN-<br>LOCK          | Output           | Rear RH door<br>and rear LH<br>door   | UNLOCK (Actuator is activated)                | 12 V   |
|                              |        |   |                  |   | Other than UNLOCK (Actuator is not activated) | 0 V  |
| 11<br>(R)                    | Ground | Battery power supply                                  | Input            | Ignition switch OFF   |   | Battery voltage  |
| 13<br>(B)                    | Ground | Ground  | —                | Ignition switch ON  |   | 0 V  |
| 14<br>(W)                    | Ground | Push-button ignition<br>switch illumination<br>ground | Output           | Tail lamp   | OFF   | 0 V  |
|                              |        |   |                  |   | ON  | <p><b>NOTE:</b><br/>When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p> |
| 15<br>(BG)                   | Ground | ACC indicator lamp                                    | Output           | Ignition switch   | OFF (LOCK indicator is not illuminated)       | Battery voltage  |
|                              |        |   |                  |   | ACC   | 0 V  |

# BCM (BODY CONTROL MODULE)
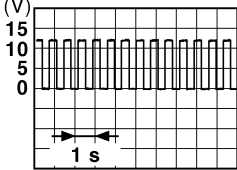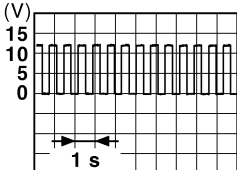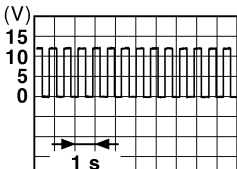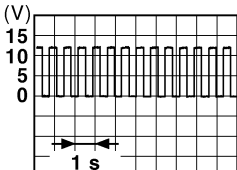
## < ECU DIAGNOSIS INFORMATION >







| Terminal No.<br>(Wire color) |        | Description                |                  | Condition  | Value<br>(Approx.)                                  |  |
|------------------------------|--------|----------------------------|------------------|--|---|--|
| +                            | -      | Signal name                | Input/<br>Output |  |   |  |
| 17<br>(W)                    | Ground | Turn signal RH<br>(Front)  | Output           | Ignition switch<br>OFF   | 0 V   |  |
|                              |        |                            |                  | Ignition switch<br>ON  | Turn signal switch RH                               | <br>6.5 V   |
| 18<br>(BG)                   | Ground | Turn signal LH (Front)     | Output           | Ignition switch<br>OFF   | 0 V   |  |
|                              |        |                            |                  | Ignition switch<br>ON  | Turn signal switch LH                               | <br>6.5 V   |
| 19<br>(V)                    | Ground | Room lamp timer<br>control | Output           | Interior room<br>lamp  | OFF   | 12 V   |
|                              |        |                            |                  | ON   | 0 V   |  |
| 20<br>(V)                    | Ground | Turn signal RH (Rear)      | Output           | Ignition switch<br>OFF   | 0 V   |  |
|                              |        |                            |                  | Ignition switch<br>ON  | Turn signal switch RH                               | <br>6.5 V |
| 23<br>(LG)                   | Ground | Trunk lid open             | Output           | Trunk lid  | OPEN<br>(Trunk lid opener actuator<br>is activated) | 12 V   |
|                              |        |                            |                  | Other than OPEN<br>(Trunk lid opener actuator<br>is not activated) | 0 V   |  |
| 25<br>(Y)                    | Ground | Turn signal LH (Rear)      | Output           | Ignition switch<br>OFF   | 0 V   |  |
|                              |        |                            |                  | Ignition switch<br>ON  | Turn signal switch LH                               | <br>6.5 V |
| 30<br>(P)                    | Ground | Trunk room lamp            | Output           | Trunk room<br>lamp   | ON  | 0 V  |
|                              |        |                            |                  | OFF  | 12 V  |  |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW





# BCM (BODY CONTROL MODULE)
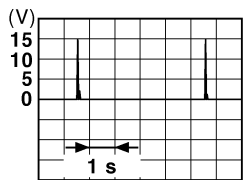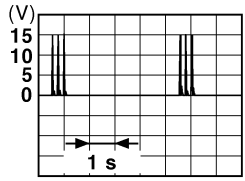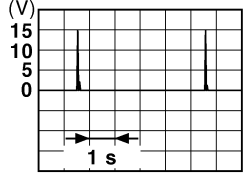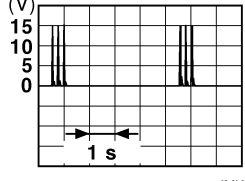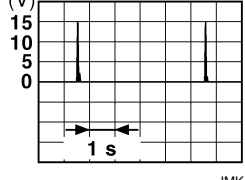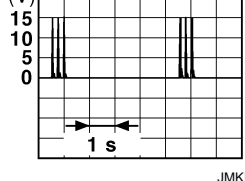
## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                  |                  | Condition   | Value<br>(Approx.)   |
|------------------------------|--------|------------------------------|------------------|---|--|
| +                            | -      | Signal name                  | Input/<br>Output |   |  |
| 34<br>(SB)                   | Ground | Trunk room antenna<br>(-)    | Output           | Ignition switch<br>OFF  | When Intelligent Key is in<br>the passenger compart-<br>ment<br><br><small style="float: right;">JMKIA0062GB</small>  |
|                              |        |                              |                  | When Intelligent Key is not<br>in the passenger compart-<br>ment<br><br><small style="float: right;">JMKIA0063GB</small>   |  |
| 35<br>(V)                    | Ground | Trunk room antenna<br>(+)    | Output           | Ignition switch<br>OFF  | When Intelligent Key is in<br>the passenger compart-<br>ment<br><br><small style="float: right;">JMKIA0062GB</small> |
|                              |        |                              |                  | When Intelligent Key is not<br>in the passenger compart-<br>ment<br><br><small style="float: right;">JMKIA0063GB</small> |  |
| 38<br>(B)                    | Ground | Rear bumper anten-<br>na (-) | Output           | When the trunk<br>lid opener re-<br>quest switch is<br>operated with<br>ignition switch<br>OFF  | When Intelligent Key is in<br>the antenna detection<br>area<br><br><small style="float: right;">JMKIA0062GB</small> |
|                              |        |                              |                  | When Intelligent Key is not<br>in the antenna detection<br>area<br><br><small style="float: right;">JMKIA0063GB</small>  |  |

# BCM (BODY CONTROL MODULE)
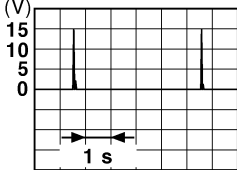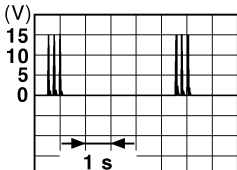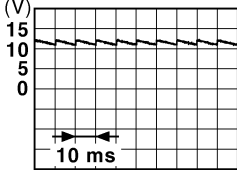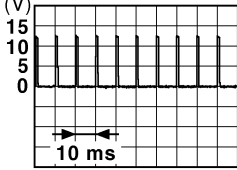
## < ECU DIAGNOSIS INFORMATION >






| Terminal No.<br>(Wire color) |        | Description                                  |                  | Condition   | Value<br>(Approx.)  |
|------------------------------|--------|--|------------------|---|---|
| +                            | -      | Signal name                                  | Input/<br>Output |   |   |
| 39<br>(W)                    | Ground | Rear bumper antenna (+)                      | Output           | When Intelligent Key is in the antenna detection area                         | <br><small>JMKIA0062GB</small>                               |
|                              |        |  |                  | When the trunk lid opener request switch is operated with ignition switch OFF | <br><small>JMKIA0063GB</small>                               |
| 47<br>(Y)                    | Ground | Ignition relay (IPDM E/R) control            | Output           | Ignition switch   | OFF or ACC: 12 V<br>ON: 0 V   |
|                              |        |  |                  | Ignition switch   | OFF (Trunk lid is closed): 11.8 V<br>ON (Trunk lid is opened): 0 V  |
| 50<br>(BG)                   | Ground | Trunk room lamp switch                       | Input            | Trunk room lamp switch  | <br><small>JPMIA0011GB</small>                              |
|                              |        |  |                  | Ignition switch ON (A/T models)   | When selector lever is in P or N position: 12 V<br>When selector lever is not in P or N position: 0 V   |
| 52<br>(R)                    | Ground | Starter relay control                        | Output           | Ignition switch ON (M/T models)   | When the clutch pedal is depressed: Battery voltage<br>When the clutch pedal is not depressed: 0 V  |
|                              |        |  |                  | Ignition switch ON (M/T models)   | ON (Pressed): 0 V   |
| 61<br>(SB)                   | Ground | Trunk lid opener request switch              | Input            | Trunk lid opener request switch   | OFF (Not pressed): 1.0 V<br><br><small>JPMIA0016GB</small> |
|                              |        |  |                  | Intelligent Key warning buzzer (Engine room)                                  | Sounding: 0 V<br>Not sounding: 12 V   |
| 64<br>(G)                    | Ground | Intelligent Key warning buzzer (Engine room) | Output           | Intelligent Key warning buzzer (Engine room)                                  | Sounding: 0 V<br>Not sounding: 12 V   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)
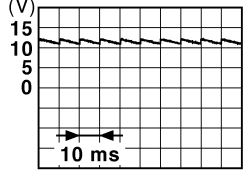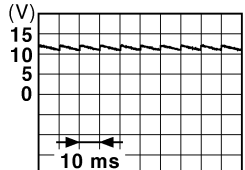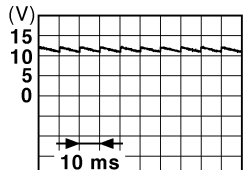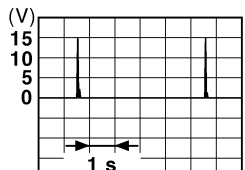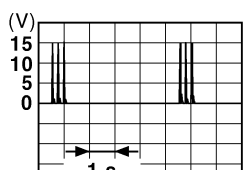
## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                            |                  | Condition  | Value<br>(Approx.)  |   |        |
|------------------------------|--------|--|------------------|--|---|---|--------|
| +                            | -      | Signal name                            | Input/<br>Output |  |   |   |        |
| 67<br>(GR)                   | Ground | Trunk lid opener<br>switch             | Input            | Trunk lid open-<br>er switch                                     | Pressed   | 0 V   |        |
|                              |        |  |                  | Not pressed  |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p>   | 11.8 V  |        |
| 68<br>(BG)                   | Ground | Rear RH door switch                    | Input            | Rear RH door<br>switch   | OFF (When rear RH door<br>closes)   |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p>   | 11.8 V |
|                              |        |  |                  | ON (When rear RH door<br>opens)                                  | 0 V   |   |        |
| 69<br>(L)                    | Ground | Rear LH door switch                    | Input            | Rear LH door<br>switch   | OFF (When rear LH door<br>closes)   |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p>  | 11.8 V |
|                              |        |  |                  | ON (When rear LH door<br>opens)                                  | 0 V   |   |        |
| 72<br>(R)                    | Ground | Room antenna 2 (-)<br>(Center console) | Output           | Ignition switch<br>OFF   | When Intelligent Key is in<br>the passenger compart-<br>ment  |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |        |
|                              |        |  |                  | When Intelligent Key is not<br>in the passenger compart-<br>ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |   |        |



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

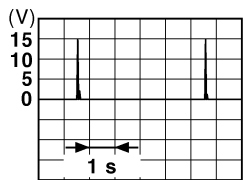
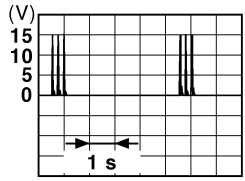
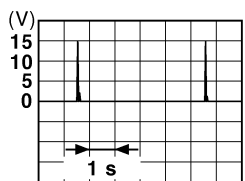
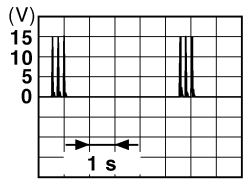
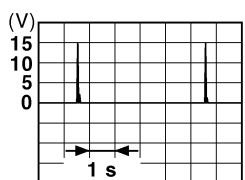
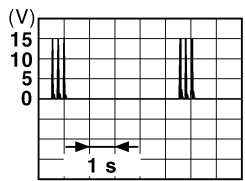
| Terminal No.<br>(Wire color) |        | Description                            |                  | Condition  | Value<br>(Approx.)  |
|------------------------------|--------|--|------------------|--|---|
| +                            | -      | Signal name                            | Input/<br>Output |  |   |
| 73<br>(G)                    | Ground | Room antenna 2 (+)<br>(Center console) | Output           | Ignition switch<br>OFF   | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |  |                  | When Intelligent Key is not<br>in the passenger compart-<br>ment                               | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 74<br>(SB)                   | Ground | Passenger door an-<br>tenna (-)        | Output           | When the pas-<br>senger door re-<br>quest switch is<br>operated with<br>ignition switch<br>OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |  |                  | When Intelligent Key is not<br>in the antenna detection<br>area                                | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 75<br>(BR)                   | Ground | Passenger door an-<br>tenna (+)        | Output           | When the pas-<br>senger door re-<br>quest switch is<br>operated with<br>ignition switch<br>OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
|                              |        |  |                  | When Intelligent Key is not<br>in the antenna detection<br>area                                | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                              |                  | Condition  | Value<br>(Approx.)  |   |
|------------------------------|--------|--|------------------|--|---|---|
|                              |        | Signal name                              | Input/<br>Output |  |   |   |
| +                            | -      |  |                  |  |   |   |
| 76<br>(V)                    | Ground | Driver door antenna<br>(-)               | Output           | When the driver door request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area   | <br><small>JMKIA0062GB</small>   |
|                              |        |  |                  | When Intelligent Key is not in the antenna detection area                | <br><small>JMKIA0063GB</small>   |   |
| 77<br>(LG)                   | Ground | Driver door antenna<br>(+)               | Output           | When the driver door request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area   | <br><small>JMKIA0062GB</small>  |
|                              |        |  |                  | When Intelligent Key is not in the antenna detection area                | <br><small>JMKIA0063GB</small> |   |
| 78<br>(Y)                    | Ground | Room antenna 1 (-)<br>(Instrument panel) | Output           | Ignition switch OFF  | When Intelligent Key is in the passenger compartment  | <br><small>JMKIA0062GB</small> |
|                              |        |  |                  | When Intelligent Key is not in the passenger compartment                 | <br><small>JMKIA0063GB</small> |   |

# BCM (BODY CONTROL MODULE)
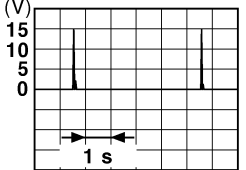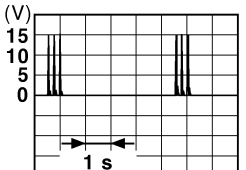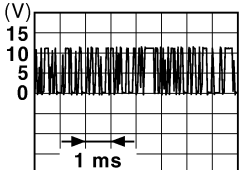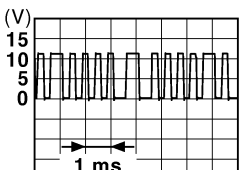
## < ECU DIAGNOSIS INFORMATION >


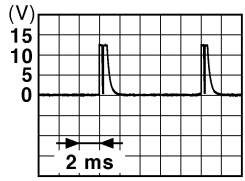
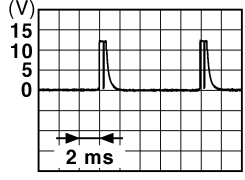
| Terminal No.<br>(Wire color) |        | Description   |                  | Condition  | Value<br>(Approx.)  |   |
|------------------------------|--------|---|------------------|--|---|---|
| +                            | -      | Signal name   | Input/<br>Output |  |   |   |
| 79<br>(BR)                   | Ground | Room antenna 1 (+)<br>(Instrument panel)            | Output           | Ignition switch<br>OFF   |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |   |
|                              |        |   |                  | When Intelligent Key is not<br>in the passenger compart-<br>ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |   |
| 80<br>(GR)                   | Ground | NATS antenna amp.                                   | Input/<br>Output | During waiting   | Ignition switch is pressed<br>while inserting the Intelli-<br>gent Key into the key slot.   | Just after pressing ignition<br>switch. Pointer of tester should<br>move.   |
| 81<br>(W)                    | Ground | NATS antenna amp.                                   | Input/<br>Output | During waiting   | Ignition switch is pressed<br>while inserting the Intelli-<br>gent Key into the key slot.   | Just after pressing ignition<br>switch. Pointer of tester should<br>move.   |
| 82<br>(SB)                   | Ground | Ignition relay [Fuse<br>block (J/B)] control        | Output           | Ignition switch  | OFF or ACC  | 0 V   |
|                              |        |   |                  | ON   | 12 V  |   |
| 83<br>(Y)                    | Ground | Remote keyless entry<br>receiver communica-<br>tion | Input/<br>Output | During waiting   |   |  <p style="text-align: right; font-size: small;">JMKIA0064GB</p> |
|                              |        |   |                  | When operating either button on the Intelli-<br>gent Key         |   |  <p style="text-align: right; font-size: small;">JMKIA0065GB</p> |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

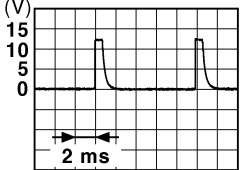

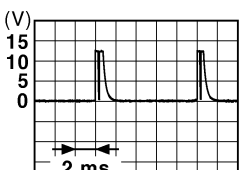

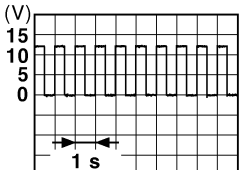
# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                   |                  | Condition   | Value<br>(Approx.)  |  |
|------------------------------|--------|-------------------------------|------------------|---|---|--|
| +                            | -      | Signal name                   | Input/<br>Output |   |   |  |
| 87<br>(Y)                    | Ground | Combination switch<br>INPUT 5 | Input            | Combination<br>switch   | All switches OFF<br>(Wiper volume dial 4)   |  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p> |
|                              |        |                               |                  | Combination<br>switch   | Front fog lamp switch ON<br>(Wiper volume dial 4)   |  <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p> |
|                              |        |                               |                  | Any of the conditions be-<br>low with all switches OFF <ul style="list-style-type: none"> <li>• Wiper volume dial 1</li> <li>• Wiper volume dial 2</li> <li>• Wiper volume dial 6</li> <li>• Wiper volume dial 7</li> </ul> |  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p> |  |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                                  |                  | Condition                                       | Value<br>(Approx.)  |  |
|------------------------------|--------|--|------------------|---|---|--|
| +                            | -      | Signal name                                  | Input/<br>Output |   |   |  |
| 88<br>(BG)                   | Ground | Combination switch<br>INPUT 3                | Input            | Combination<br>switch                           | All switches OFF<br>(Wiper volume dial 4)   |  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>   |
|                              |        |  |                  |   | Lighting switch HI<br>(Wiper volume dial 4)   |  <p style="text-align: right; font-size: small;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>   |
|                              |        |  |                  |   | Lighting switch 2ND<br>(Wiper volume dial 4)  |  <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>  |
|                              |        |  |                  |   | Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper volume dial 1</li> <li>• Wiper volume dial 2</li> <li>• Wiper volume dial 3</li> </ul> |  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p> |
| 89<br>(BR)                   | Ground | Push-button ignition<br>switch (Push switch) | Input            | Push-button ignition<br>switch<br>(push switch) | Pressed   | 0 V  |
|                              |        |  |                  |   | Not pressed   | Battery voltage  |
| 90<br>(P)                    | Ground | CAN-L  | Input/<br>Output | —   | —   |  |
| 91<br>(L)                    | Ground | CAN-H  | Input/<br>Output | —   | —   |  |
| 92<br>(LG)                   | Ground | Key slot illumination                        | Output           | Key slot illumina-<br>tion                      | OFF   | 0 V  |
|                              |        |  |                  |   | Blinking  |  <p style="text-align: right; font-size: small;">JPMIA0015GB</p> <p style="text-align: center;">6.5 V</p> |
|                              |        |  |                  |   | ON  | 12 V   |

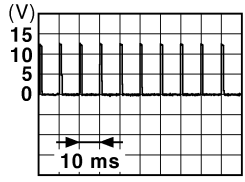
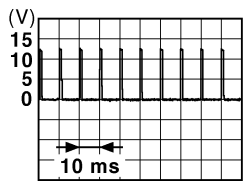
A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K

WW

M  
N  
O  
P

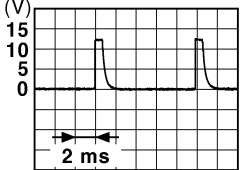

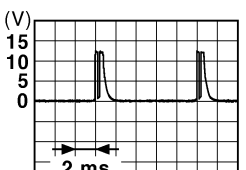

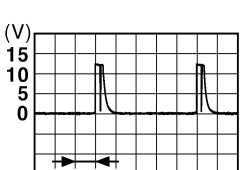
# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description  |                  | Condition                     |   | Value<br>(Approx.)  |
|------------------------------|--------|--|------------------|-------------------------------|---|---|
| +                            | -      | Signal name  | Input/<br>Output |                               |   |   |
| 93<br>(GR)                   | Ground | ON indicator lamp                                  | Output           | Ignition switch               | OFF (LOCK indicator is not illuminated) | Battery voltage   |
|                              |        |  |                  |                               | ON                                      | 0 V   |
| 95<br>(BG)                   | Ground | ACC relay control                                  | Output           | Ignition switch               | OFF                                     | 0 V   |
|                              |        |  |                  |                               | ACC or ON                               | 12 V  |
| 96<br>(GR)                   | Ground | A/T shift selector (Detention switch) power supply | Output           | —                             |   | 12 V  |
| 97<br>(L)                    | Ground | Steering lock condition No. 1                      | Input            | Steering lock                 | LOCK status                             | 0 V   |
|                              |        |  |                  |                               | UNLOCK status                           | 12 V  |
| 98<br>(P)                    | Ground | Steering lock condition No. 2                      | Input            | Steering lock                 | LOCK status                             | 12 V  |
|                              |        |  |                  |                               | UNLOCK status                           | 0 V   |
| 99<br>(R)*1<br>(BR)*2        | Ground | Selector lever P position switch (A/T models)      | Input            | Selector lever                | P position                              | 0 V   |
|                              |        |  |                  |                               | Any position other than P               | 12 V  |
|                              |        | ASCD clutch switch (M/T models without ICC)        |                  | ASCD clutch switch            | OFF (Clutch pedal is depressed)         | 0 V   |
|                              |        |  |                  |                               | ON (Clutch pedal is not depressed)      | 12 V  |
|                              |        | ICC clutch switch (M/T models with ICC)            |                  | ICC clutch switch             | OFF (Clutch pedal is depressed)         | 0 V   |
|                              |        |  |                  |                               | ON (Clutch pedal is not depressed)      | 12 V  |
| 100<br>(Y)                   | Ground | Passenger door request switch                      | Input            | Passenger door request switch | ON (Pressed)                            | 0 V   |
|                              |        |  |                  |                               | OFF (Not pressed)                       |  <p style="text-align: right; font-size: small;">JPMIA0016GB</p> |
| 101<br>(P)                   | Ground | Driver door request switch                         | Input            | Driver door request switch    | ON (Pressed)                            | 0 V   |
|                              |        |  |                  |                               | OFF (Not pressed)                       |  <p style="text-align: right; font-size: small;">JPMIA0016GB</p> |
| 102<br>(BG)                  | Ground | Blower fan motor relay control                     | Output           | Ignition switch               | OFF or ACC                              | 0 V   |
|                              |        |  |                  |                               | ON                                      | 12 V  |
| 103<br>(P)                   | Ground | Remote keyless entry receiver power supply         | Output           | Ignition switch OFF           |   | 12 V  |
| 106<br>(SB)                  | Ground | Steering lock unit power supply                    | Output           | Ignition switch               | OFF or ACC                              | 12 V  |
|                              |        |  |                  |                               | ON                                      | 0 V   |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

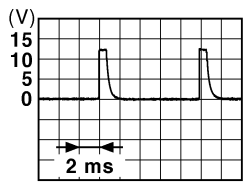
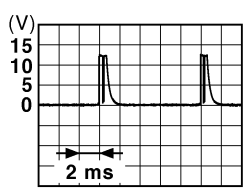
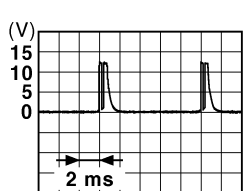
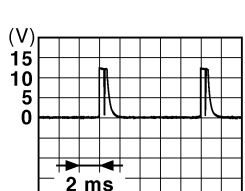
| Terminal No.<br>(Wire color) |        | Description                   |                  | Condition   | Value<br>(Approx.)     |  |
|------------------------------|--------|-------------------------------|------------------|---|------------------------|--|
|                              |        | Signal name                   | Input/<br>Output |   |                        |  |
| +                            | -      |                               |                  |   |                        |  |
| 107<br>(LG)                  | Ground | Combination switch<br>INPUT 1 | Input            | Combination<br>switch<br>(Wiper volume<br>dial 4) | All switches OFF       |  <p style="text-align: right;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>   |
|                              |        |                               |                  |   | Turn signal switch LH  |  <p style="text-align: right;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>   |
|                              |        |                               |                  |   | Turn signal switch RH  |  <p style="text-align: right;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>  |
|                              |        |                               |                  |   | Front wiper switch LO  |  <p style="text-align: right;">JPMIA0038GB</p> <p style="text-align: center;">1.3 V</p> |
|                              |        |                               |                  |   | Front washer switch ON |  <p style="text-align: right;">JPMIA0039GB</p> <p style="text-align: center;">1.3 V</p> |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)

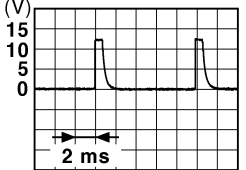

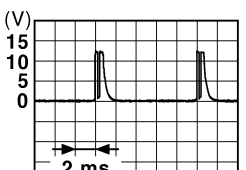



## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                   |                  | Condition             | Value<br>(Approx.)                                |  |
|------------------------------|--------|-------------------------------|------------------|-----------------------|---|--|
| +                            | -      | Signal name                   | Input/<br>Output |                       |   |  |
| 108<br>(R)                   | Ground | Combination switch<br>INPUT 4 | Input            | Combination<br>switch | All switches OFF<br>(Wiper volume dial 4)         |  <p>1.4 V</p>   |
|                              |        |                               |                  |                       | Lighting switch AUTO<br>(Wiper volume dial 4)     |  <p>1.3 V</p>   |
|                              |        |                               |                  |                       | Lighting switch 1ST<br>(Wiper volume dial 4)      |  <p>1.3 V</p>  |
|                              |        |                               |                  |                       | Any of the conditions below with all switches OFF | <ul style="list-style-type: none"> <li>• Wiper volume dial 1</li> <li>• Wiper volume dial 5</li> <li>• Wiper volume dial 6</li> </ul>  <p>1.3 V</p> |



# BCM (BODY CONTROL MODULE)
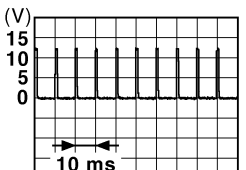
## < ECU DIAGNOSIS INFORMATION >




| Terminal No.<br>(Wire color) |        | Description                   |                  | Condition   | Value<br>(Approx.)  |   |
|------------------------------|--------|-------------------------------|------------------|---|---|---|
| +                            | -      | Signal name                   | Input/<br>Output |   |   |   |
| 109<br>(W)                   | Ground | Combination switch<br>INPUT 2 | Input            | Combination<br>switch<br>(Wiper volume<br>dial 4) | All switches OFF  |  <p style="text-align: right;">1.4 V</p>   |
|                              |        |                               |                  |   | Lighting switch PASS  |  <p style="text-align: right;">1.3 V</p>   |
|                              |        |                               |                  |   | Lighting switch 2ND   |  <p style="text-align: right;">1.3 V</p>  |
|                              |        |                               |                  |   | Front wiper switch INT/<br>AUTO   |  <p style="text-align: right;">1.3 V</p> |
|                              |        |                               |                  |   | Front wiper switch HI   |  <p style="text-align: right;">1.3 V</p> |
|                              |        |                               |                  |   | ON  | 0 V   |
| 110<br>(G)                   | Ground | Hazard switch                 | Input            | Hazard switch                                     |  <p style="text-align: right;">1.1 V</p> |   |
|                              |        |                               |                  | OFF   |   |   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW





# BCM (BODY CONTROL MODULE)
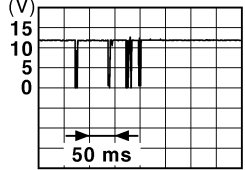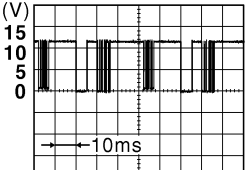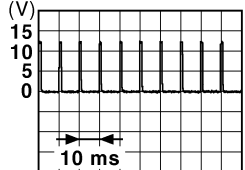
## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description  |                  | Condition   | Value<br>(Approx.)  |   |
|------------------------------|--------|--|------------------|---|---|---|
|                              |        | Signal name  | Input/<br>Output |   |   |   |
| +                            | -      |  |                  |   |   |   |
| 111<br>(Y)                   | Ground | Steering lock unit<br>communication                          | Input/<br>Output | Steering lock   | LOCK status   | 12 V  |
|                              |        |  |                  |   | LOCK or UNLOCK  |  <p style="text-align: right; font-size: small;">JMKIA0066GB</p>   |
|                              |        |  |                  |   | For 15 seconds after UN-<br>LOCK  | 12 V  |
|                              |        |  |                  | 15 seconds or later after<br>UNLOCK   | 0 V   |   |
| 112<br>(R)                   | Ground | Light and rain sensor<br>serial link                         | Input/<br>Output | Ignition switch ON  |  <p style="text-align: right; font-size: small;">JPMIA0156GB</p> |   |
|                              |        |  |                  |   | 8.7 V   |   |
| 113<br>(BG)                  | Ground | Optical sensor   | Input            | Ignition switch<br>ON   | When bright outside of the<br>vehicle   | Close to 5 V  |
|                              |        |  |                  |   | When dark outside of the<br>vehicle   | Close to 0 V  |
| 114<br>(R)                   | Ground | Clutch interlock<br>switch                                   | Input            | Clutch interlock<br>switch  | OFF (Clutch pedal is not<br>depressed)  | 0 V   |
|                              |        |  |                  |   | ON (Clutch pedal is de-<br>pressed)   | Battery voltage   |
| 116<br>(SB)                  | Ground | Stop lamp switch 1   | Input            | —   | Battery voltage   |   |
| 118<br>(BR)                  | Ground | Stop lamp switch 2<br>(Without ICC)                          | Input            | Stop lamp<br>switch   | OFF (Brake pedal is not<br>depressed)   | 0 V   |
|                              |        |  |                  |   | ON (Brake pedal is de-<br>pressed)  | Battery voltage   |
|                              |        | Stop lamp switch 2<br>(With ICC)                             |                  | Stop lamp switch OFF (Brake pedal is not<br>depressed) and ICC brake hold relay OFF | 0 V   |   |
|                              |        |  |                  | Stop lamp switch ON (Brake pedal is de-<br>pressed) or ICC brake hold relay ON      | Battery voltage   |   |
| 119<br>(SB)                  | Ground | Front door lock as-<br>sembly driver side<br>(Unlock sensor) | Input            | Driver door   | LOCK status<br>(Unlock sensor switch<br>OFF)  |  <p style="text-align: right; font-size: small;">JPMIA0012GB</p> |
|                              |        |  |                  |   | UNLOCK status<br>(Unlock switch sensor<br>ON)   | 0 V   |

# BCM (BODY CONTROL MODULE)
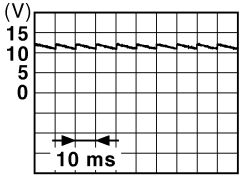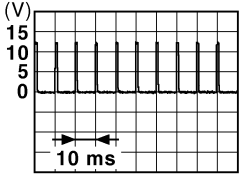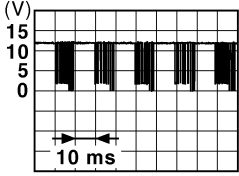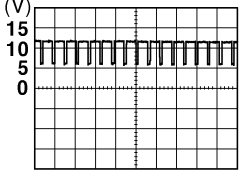
## < ECU DIAGNOSIS INFORMATION >

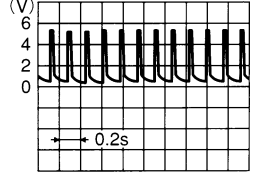

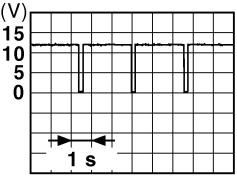
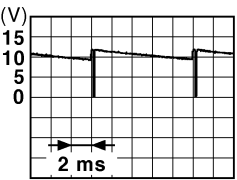
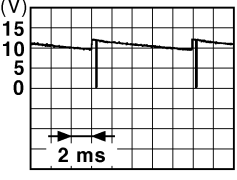
| Terminal No.<br>(Wire color) |        | Description                              |                  | Condition  | Value<br>(Approx.)  |   |
|------------------------------|--------|--|------------------|--|---|---|
|                              |        | Signal name                              | Input/<br>Output |  |   |   |
| +                            | -      |  |                  |  |   |   |
| 121<br>(SB)                  | Ground | Key slot switch                          | Input            | When the Intelligent Key is inserted into key slot     | 12 V  |   |
|                              |        |  |                  | When the Intelligent Key is not inserted into key slot | 0 V   |   |
| 123<br>(V)                   | Ground | IGN feedback                             | Input            | Ignition switch  | OFF or ACC  | 0 V   |
|                              |        |  |                  |  | ON  | Battery voltage   |
| 124<br>(R)                   | Ground | Passenger door switch                    | Input            | Passenger door switch                                  | OFF (Door close)  | <br><small>JPMIA0011GB</small><br>11.8 V   |
|                              |        |  |                  |  | ON (Door open)  | 0 V   |
| 129<br>(BG)                  | Ground | Trunk lid opener cancel switch           | Input            | Trunk lid opener cancel switch                         | CANCEL  | <br><small>JPMIA0012GB</small><br>1.1 V   |
|                              |        |  |                  |  | ON  | 0 V   |
| 132<br>(V)                   | Ground | Power window switch communication        | Input/<br>Output | Ignition switch ON                                     | <br><small>JPMIA0013GB</small><br>10.2 V |   |
|                              |        |  |                  |  | Ignition switch OFF or ACC  | 12 V  |
| 133<br>(L)                   | Ground | Push-button ignition switch illumination | Output           | Push-button ignition switch illumination               | ON (Tail lamps OFF)   | 9.5 V   |
|                              |        |  |                  |  | ON (Tail lamps ON)  | <p><b>NOTE:</b><br/>The pulse width of this wave is varied by the illumination brightening/dimming level.</p> <br><small>JPMIA0159GB</small> |
| 134<br>(LG)                  | Ground | LOCK indicator lamp                      | Output           | LOCK indicator lamp                                    | OFF   | Battery voltage   |
|                              |        |  |                  |  | ON  | 0 V   |
| 137<br>(BG)                  | Ground | Receiver and sensor ground               | Input            | Ignition switch ON                                     | 0 V   |   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW





# BCM (BODY CONTROL MODULE)
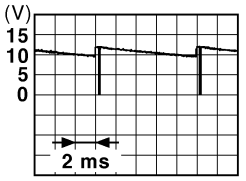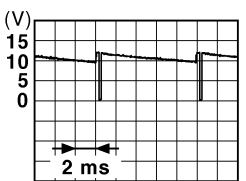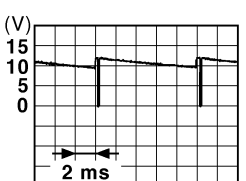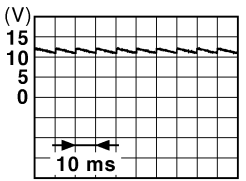
## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                          |                  | Condition   |  | Value<br>(Approx.)  |
|------------------------------|--------|--------------------------------------|------------------|---|--|---|
|                              |        | Signal name                          | Input/<br>Output |   |  |   |
| +                            | -      |                                      |                  |   |  |   |
| 138<br>(V)                   | Ground | Receiver and sensor power supply     | Output           | Ignition switch   | OFF  | 0 V   |
|                              |        |                                      |                  |   | ACC or ON                                      | 5.0 V   |
| 139<br>(L)                   | Ground | Tire pressure receiver communication | Input/<br>Output | Ignition switch ON  | Standby state                                  | <br>OCC3881D     |
|                              |        |                                      |                  |   | When receiving the signal from the transmitter | <br>OCC3880D     |
| 140<br>(B)                   | Ground | Selector lever P/N position          | Input            | Selector lever  | P or N position                                | 12 V  |
|                              |        |                                      |                  |   | Except P and N positions                       | 0 V   |
| 141<br>(W)                   | Ground | Security indicator                   | Output           | Security indicator  | ON   | 0 V   |
|                              |        |                                      |                  |   | Blinking                                       | <br>JPMA0014GB |
| 142<br>(BR)                  | Ground | Combination switch OUTPUT 5          | Output           | Combination switch (Wiper volume dial 4)  | All switches OFF                               | 0 V   |
|                              |        |                                      |                  |   | Lighting switch 1ST                            | <br>JPMA0031GB |
| Lighting switch HI           |        |                                      |                  |   |  |   |
| Lighting switch 2ND          |        |                                      |                  |   |  |   |
|                              |        |                                      |                  | Turn signal switch RH   | 10.7 V   |   |
| 143<br>(P)                   | Ground | Combination switch OUTPUT 1          | Output           | Combination switch  | All switches OFF (Wiper volume dial 4)         | 0 V   |
|                              |        |                                      |                  |   | Front wiper switch HI (Wiper volume dial 4)    | <br>JPMA0032GB |
|                              |        |                                      |                  | Any of the conditions below with all switches OFF   | 10.7 V   |   |
|                              |        |                                      |                  | <ul style="list-style-type: none"> <li>• Wiper volume dial 1</li> <li>• Wiper volume dial 2</li> <li>• Wiper volume dial 3</li> <li>• Wiper volume dial 6</li> <li>• Wiper volume dial 7</li> </ul> |  |   |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                             |                  | Condition   | Value<br>(Approx.)                                |   |        |
|------------------------------|--------|---|------------------|---|---|---|--------|
| +                            | -      | Signal name                             | Input/<br>Output |   |   |   |        |
| 144<br>(G)                   | Ground | Combination switch<br>OUTPUT 2          | Output           | Combination<br>switch                             | All switches OFF<br>(Wiper volume dial 4)         | 0 V   |        |
|                              |        |   |                  |   | Front washer switch ON<br>(Wiper volume dial 4)   |    |        |
|                              |        |   |                  |   | Any of the conditions below with all switches OFF |   | 10.7 V |
|                              |        |   |                  |   |   |   |        |
| 145<br>(L)                   | Ground | Combination switch<br>OUTPUT 3          | Output           | Combination<br>switch<br>(Wiper volume<br>dial 4) | All switches OFF                                  | 0 V   |        |
|                              |        |   |                  |   | Front wiper switch INT/<br>AUTO                   |    |        |
|                              |        |   |                  |   | Front wiper switch LO                             |   | 10.7 V |
|                              |        |   |                  |   | Lighting switch AUTO                              |   |        |
| 146<br>(SB)                  | Ground | Combination switch<br>OUTPUT 4          | Output           | Combination<br>switch<br>(Wiper volume<br>dial 4) | All switches OFF                                  | 0 V   |        |
|                              |        |   |                  |   | Front fog lamp switch ON                          |   |        |
|                              |        |   |                  |   | Lighting switch 2ND                               |   | 10.7 V |
|                              |        |   |                  |   | Lighting switch PASS                              |   |        |
|                              |        |   |                  |   | Turn signal switch LH                             |   |        |
| 149<br>(W)                   | Ground | Tire pressure warning<br>check switch   | Input            | —   | 12 V  |   |        |
| 150<br>(GR)                  | Ground | Driver door switch                      | Input            | Driver door<br>switch                             | OFF (Door close)                                  |  |        |
|                              |        |   |                  |   | ON (Door open)                                    |   | 11.8 V |
| 151<br>(G)                   | Ground | Rear window defog-<br>ger relay control | Output           | Rear window<br>defogger                           | Active  | 0 V   |        |
|                              |        |   |                  | Not activated                                     | Battery voltage                                   |   |        |

- \*1: A/T models
- \*2: M/T models


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
WW  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)
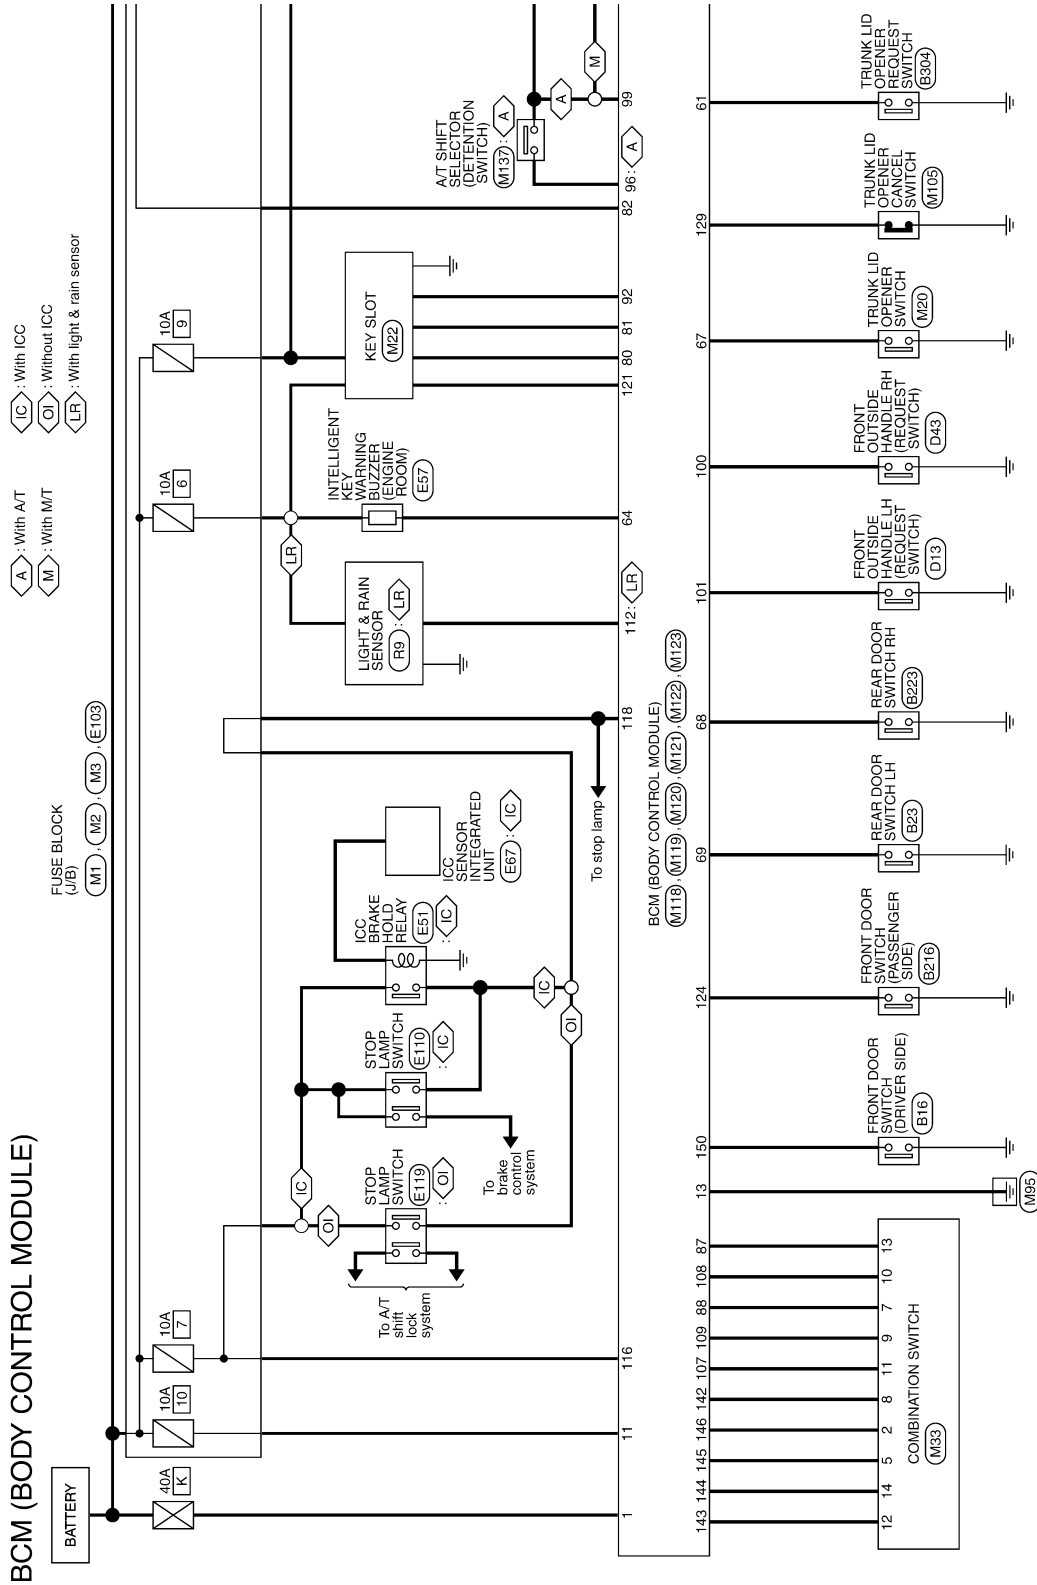
< ECU DIAGNOSIS INFORMATION >

## Wiring Diagram - BCM -

INFOID:000000005886407




2009/10/30

JCMWM5777G

# BCM (BODY CONTROL MODULE)
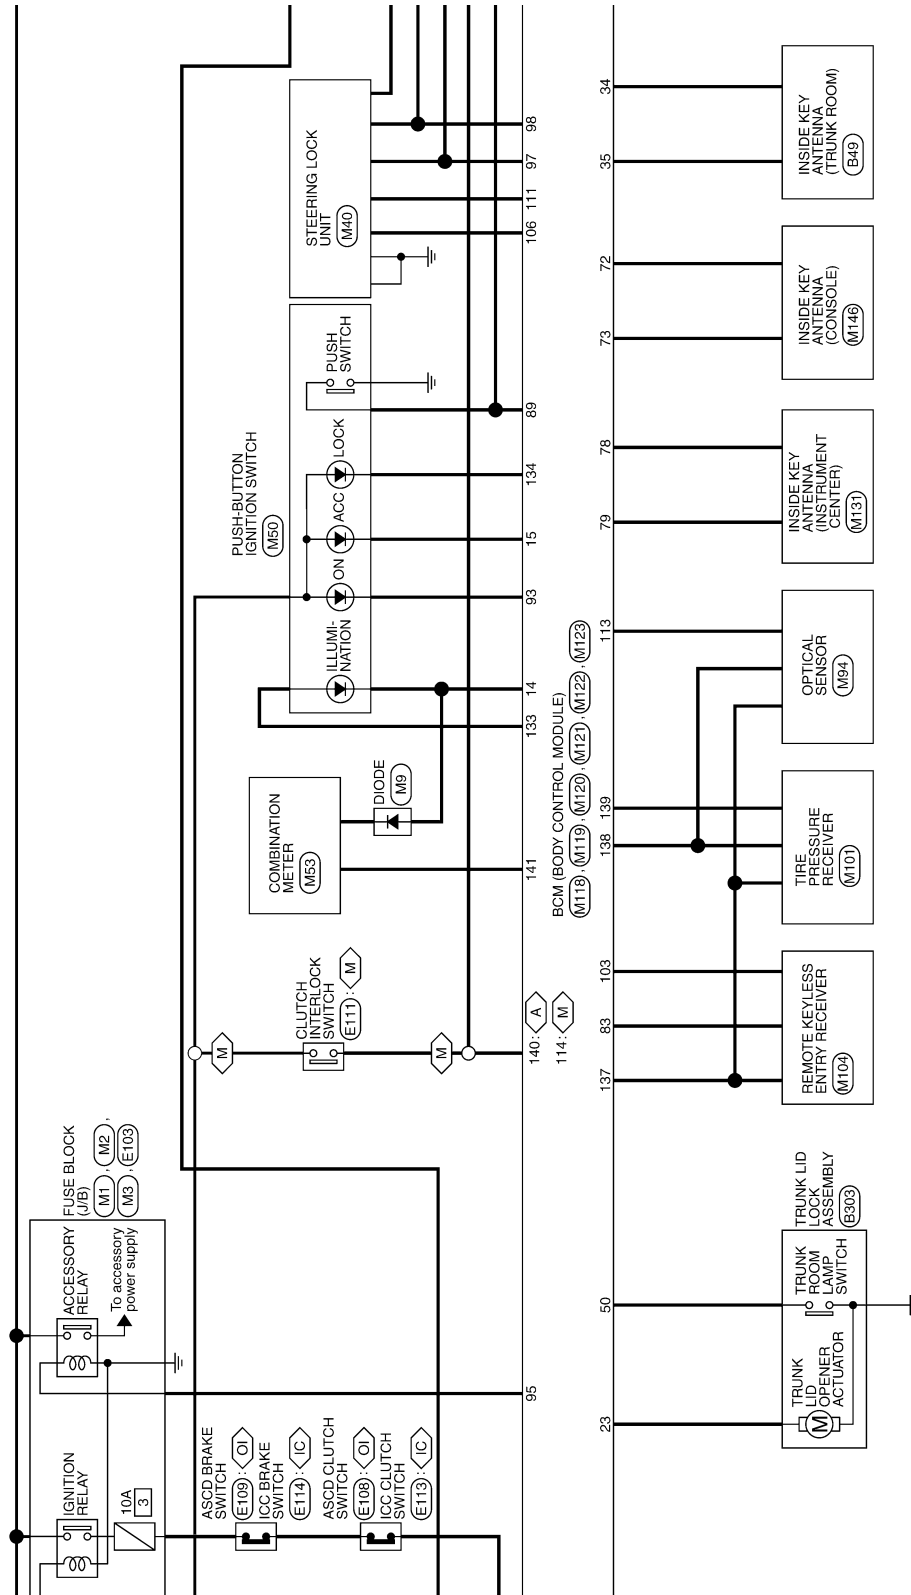
< ECU DIAGNOSIS INFORMATION >

A : With A/T      IC : With ICC  
 M : With M/T      OI : Without ICC




JCMWM5778GI

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WW

# BCM (BODY CONTROL MODULE)
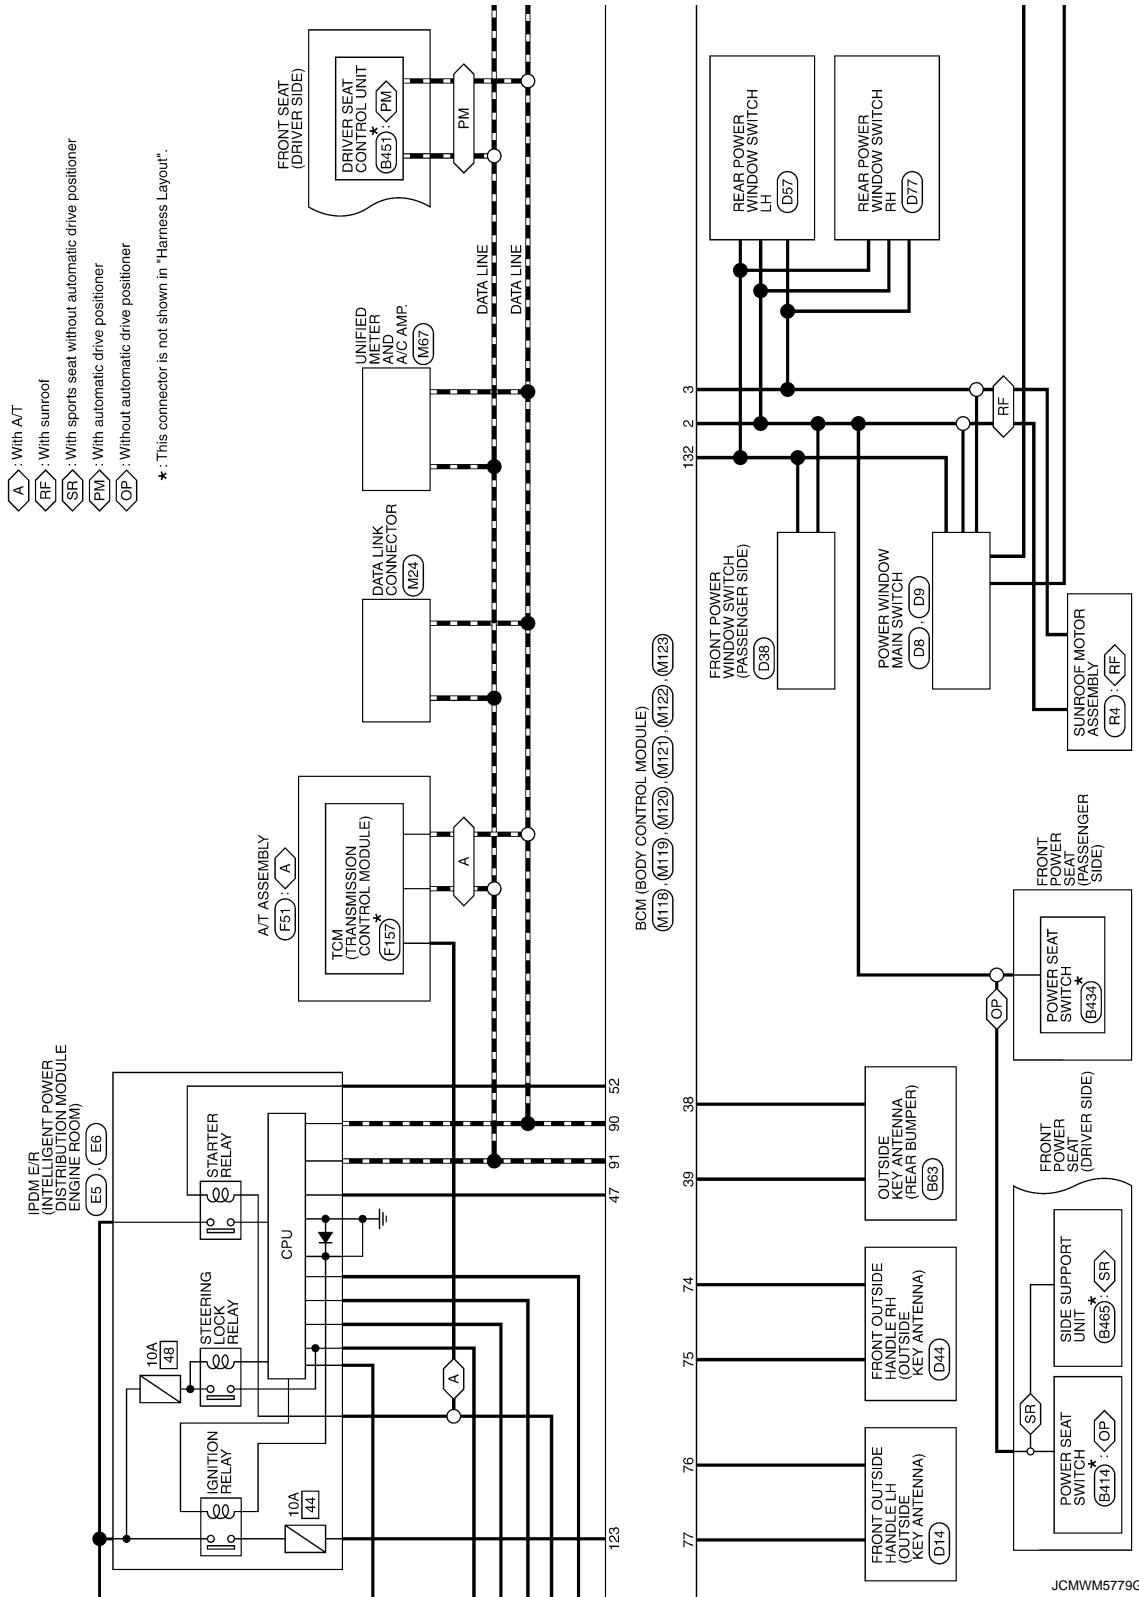
## < ECU DIAGNOSIS INFORMATION >




JCMW5779G



# BCM (BODY CONTROL MODULE)
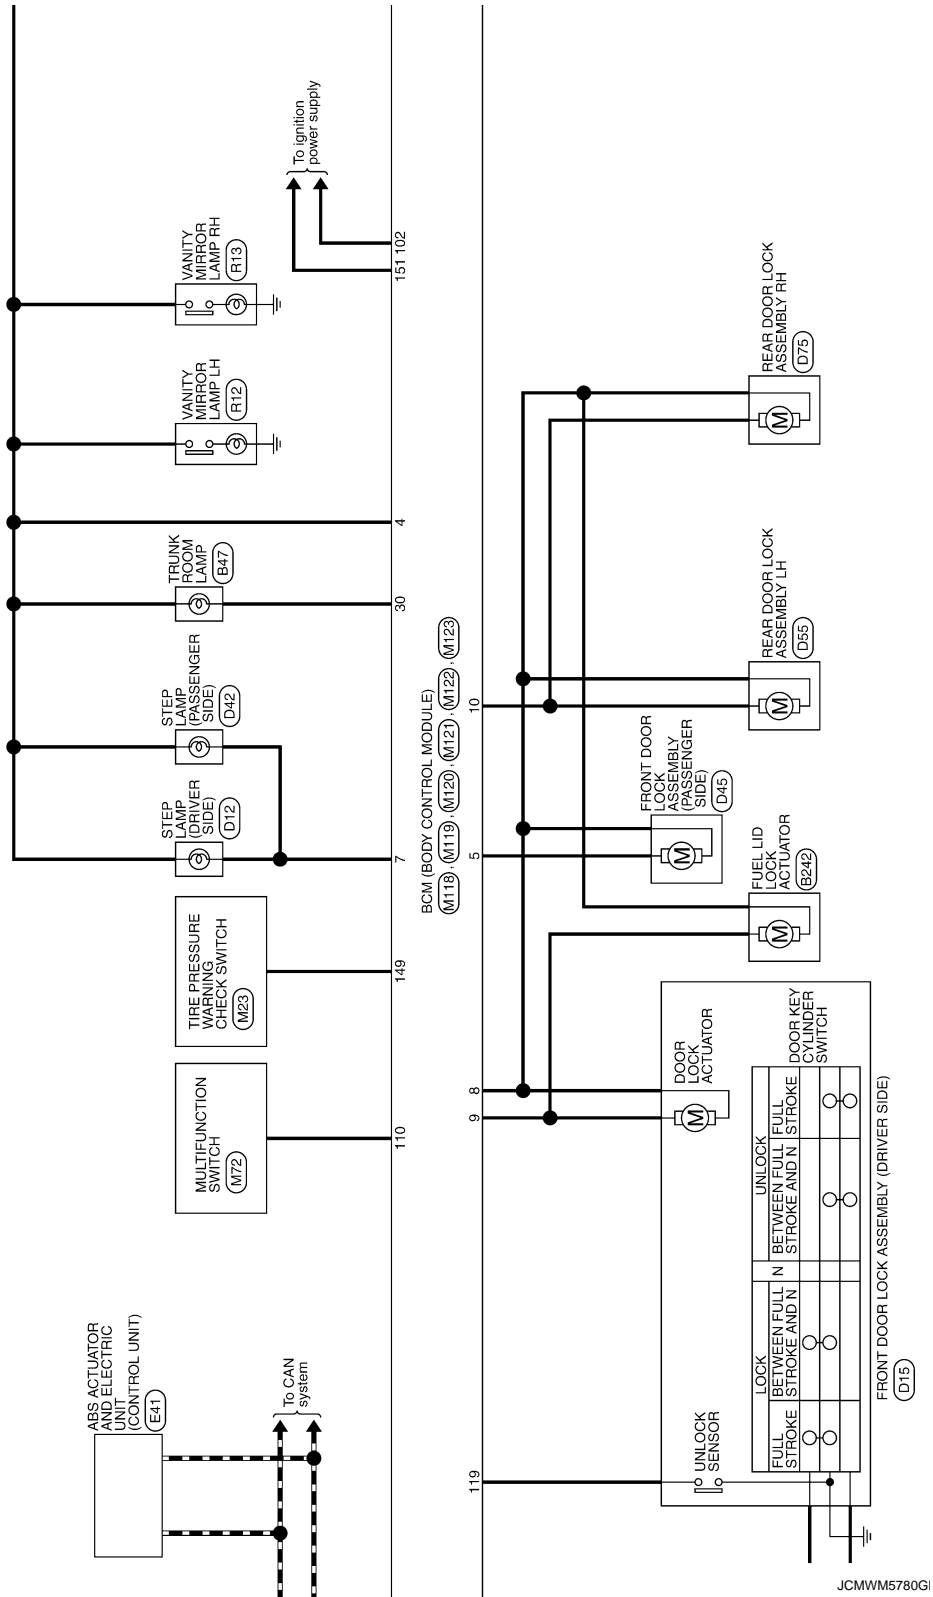
< ECU DIAGNOSIS INFORMATION >




A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# BCM (BODY CONTROL MODULE)
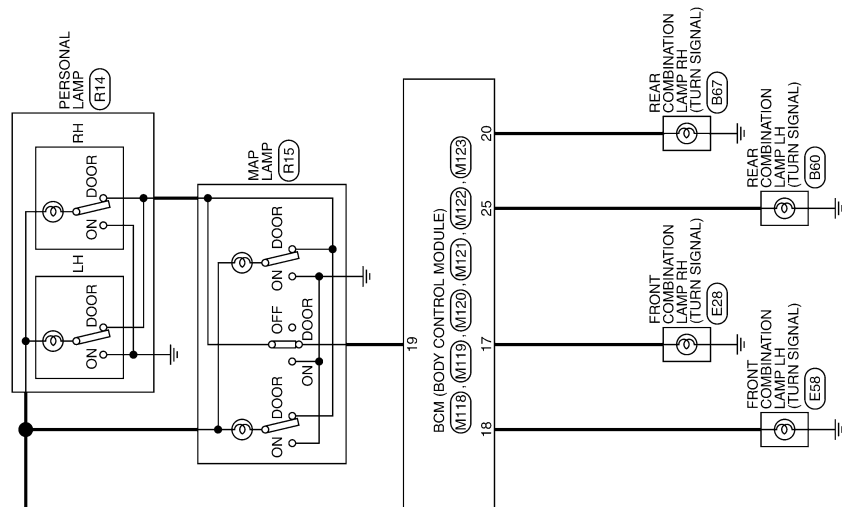
< ECU DIAGNOSIS INFORMATION >




JCMWM5781G

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

|                |                    |
|----------------|--------------------|
| Connector No.  | M33                |
| Connector Name | COMBINATION SWITCH |
| Connector Type | TH16FW-NH          |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1            | GR            | FR WASHER (-)               |
| 2            | SB            | OUTPUT 4                    |
| 5            | L             | OUTPUT 3                    |
| 6            | B             | GND                         |
| 7            | EG            | INPUT 3                     |
| 8            | BR            | OUTPUT 5                    |
| 9            | W             | INPUT 2                     |
| 10           | R             | INPUT 4                     |
| 11           | LG            | INPUT 1                     |
| 12           | P             | OUTPUT 1                    |
| 13           | Y             | INPUT 5                     |
| 14           | G             | OUTPUT 2                    |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M18                       |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | M03FB-LC                  |




| Terminal No. | Color of Wire | Signal Name [Specification]     |
|--------------|---------------|---------------------------------|
| 1            | W             | BAT (E/L)                       |
| 2            | Y             | POWER WINDOW POWER SUPPLY (BAT) |
| 3            | EG            | POWER WINDOW POWER SUPPLY (RAP) |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M119                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | NS12FW-CS                 |




| Terminal No. | Color of Wire | Signal Name [Specification]        |
|--------------|---------------|------------------------------------|
| 4            | LG            | INTERIOR ROOM LAMP POWER SUPPLY    |
| 5            | P             | PASSENGER DOOR UNLOCK OUTPUT       |
| 7            | SB            | STEP LAMP OUTPUT                   |
| 8            | V             | ALL DOOR FUEL LID LOCK OUTPUT      |
| 9            | G             | DRIVER DOOR FUEL LID UNLOCK OUTPUT |
| 10           | P             | REAR DOOR UNLOCK OUTPUT            |
| 11           | R             | BAT FUSE                           |
| 13           | B             | GND                                |
| 14           | W             | PUSH-BUTTON IGNITION SW ILL GND    |
| 15           | EG            | ACC IND                            |
| 17           | W             | TURN SIGNAL RH (FRONT)             |
| 18           | EG            | TURN SIGNAL LH (FRONT)             |
| 19           | V             | ROOM LAMP TIMER CONTROL            |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M120                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | NS12FW-CS                 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 20           | V             | TURN SIGNAL RH (REAR)       |
| 23           | LG            | TRUNK LID OPEN OUTPUT       |
| 25           | Y             | TURN SIGNAL LH (REAR)       |
| 30           | P             | TRUNK ROOM LAMP             |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M121                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FGY-NH                |



| Terminal No. | Color of Wire | Signal Name [Specification]  |
|--------------|---------------|------------------------------|
| 34           | SB            | TRUNK ROOM ANT-              |
| 35           | V             | TRUNK ROOM ANT+              |
| 38           | B             | REAR BUMPER ANT-             |
| 39           | W             | REAR BUMPER ANT+             |
| 47           | Y             | IGN RELAY / BDM E/P CONT     |
| 50           | RG            | TRUNK ROOM LAMP SW           |
| 52           | R             | STARTER RELAY CONT           |
| 61           | SB            | TRUNK LID OPENER REQUEST SW  |
| 64           | G             | I-KEY WARN BUZZER (ENG ROOM) |
| 67           | GR            | TRUNK LID OPENER SW          |
| 68           | BG            | REAR RH DOOR SW              |
| 69           | L             | REAR LH DOOR SW              |

|                |                           |
|----------------|---------------------------|
| Connector No.  | M122                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FB-NH                 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 72           | R             | ROOM ANT 2-                 |
| 73           | G             | ROOM ANT 2+                 |
| 74           | SB            | PASSENGER DOOR ANT-         |
| 75           | BR            | PASSENGER DOOR ANT+         |
| 76           | V             | DRIVER DOOR ANT-            |
| 77           | LG            | DRIVER DOOR ANT+            |
| 78           | Y             | ROOM ANT 1-                 |
| 79           | BR            | ROOM ANT 1+                 |
| 80           | GR            | NATS ANT AMP                |
| 81           | W             | IMATS ANT AMP               |

|     |    |                                       |
|-----|----|---------------------------------------|
| 82  | SB | IGN RELAY IF (B) CONT                 |
| 83  | Y  | KEYLESS ENTRY RECEIVER COMM           |
| 87  | Y  | COMBI SW INPUT 5                      |
| 88  | EG | COMBI SW INPUT 3                      |
| 89  | BR | PUSH SW                               |
| 90  | P  | CAN-L                                 |
| 91  | L  | CAN-H                                 |
| 92  | LG | KEY SLOT ILL                          |
| 93  | GR | ON IND                                |
| 95  | BG | ACC RELAY CONT                        |
| 96  | GR | A/T SHIFT SELECTOR POWER SUPPLY       |
| 97  | L  | S/L CONDITION 1                       |
| 98  | P  | S/L CONDITION 2                       |
| 99  | R  | SHIFT P [With A/T]                    |
| 99  | BR | ICC CLUTCH SW [With M/T and ICC]      |
| 99  | BR | ASCD CLUTCH SW [With M/T without ICC] |
| 100 | Y  | PASSENGER DOOR REQUEST SW             |
| 101 | P  | DRIVER DOOR REQUEST SW                |
| 102 | BG | BLOWER FAN MOTOR RELAY CONT           |
| 103 | P  | KEYLESS ENTRY RECEIVER POWER SUPPLY   |
| 106 | SB | S/L UNIT POWER SUPPLY                 |
| 107 | LG | COMBI SW INPUT 1                      |
| 109 | R  | COMBI SW INPUT 4                      |
| 109 | W  | COMBI SW INPUT 2                      |
| 110 | G  | HAZARD SW                             |
| 111 | Y  | S/L UNIT COMM                         |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


WW

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

**BCM (BODY CONTROL MODULE)**

|                |                           |
|----------------|---------------------------|
| Connector No.  | M123                      |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FG-1N1                |



| Terminal No. | Color of Wire | Signal Name [Specification]       |
|--------------|---------------|-----------------------------------|
| 112          | R             | RAIN SENSOR SERIAL LINK           |
| 113          | BG            | OPTICAL SENSOR                    |
| 114          | R             | CLUTCH INTERLOCK SW               |
| 116          | SB            | STOP LAMP SW 1                    |
| 118          | BR            | STOP LAMP SW 2                    |
| 119          | SB            | DR DOOR UNLOCK SENSOR             |
| 121          | SB            | KEY SLOT SW                       |
| 123          | V             | IGN P/B                           |
| 124          | R             | PASSENGER DOOR SW                 |
| 129          | BG            | TRUNK LID OPENER CANCEL SW        |
| 132          | V             | POWER WINDOW SW COMM              |
| 133          | L             | PUSH-BUTTON IGNITION SW ILL POWER |
| 134          | LG            | LOCK IND                          |
| 137          | BG            | RECEIVER / SENSOR GND             |
| 138          | V             | RECEIVER / SENSOR POWER SUPPLY    |
| 139          | L             | TIRE PRESSURE RECEIVER COMM       |
| 140          | B             | SHIFT N/P                         |
| 141          | W             | SECURITY INDICATOR LAMP           |
| 142          | BR            | COMBI SW OUTPUT 5                 |
| 143          | P             | COMBI SW OUTPUT 1                 |
| 144          | G             | COMBI SW OUTPUT 2                 |
| 145          | L             | COMBI SW OUTPUT 3                 |
| 146          | SB            | COMBI SW OUTPUT 4                 |
| 148          | W             | TIRE PRESSURE WARN CHECK SW       |
| 150          | GR            | DRIVER DOOR SW                    |
| 151          | G             | REAR WINDOW DEFOGGER RELAY CONT   |

JCMW5783G

INFOID:000000005886408

## Fail-safe

### FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

| Display contents of CONSULT | Fail-safe               | Cancellation   |    |
|-----------------------------|-------------------------|--|----|
| B2013: ID DISCORD BCM-S/L   | Inhibit engine cranking | Erase DTC  | A  |
| B2014: CHAIN OF S/L-BCM     | Inhibit engine cranking | Erase DTC  |    |
| B2190: NATS ANTENNA AMP     | Inhibit engine cranking | Erase DTC  | B  |
| B2191: DIFFERENCE OF KEY    | Inhibit engine cranking | Erase DTC  |    |
| B2192: ID DISCORD BCM-ECM   | Inhibit engine cranking | Erase DTC  | C  |
| B2193: CHAIN OF BCM-ECM     | Inhibit engine cranking | Erase DTC  |    |
| B2195: ANTI-SCANNING        | Inhibit engine cranking | Ignition switch ON → OFF   |    |
| B2557: VEHICLE SPEED        | Inhibit steering lock   | When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms   | D  |
| B2560: STARTER CONT RELAY   | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter control relay signal</li> <li>• Starter relay status signal</li> </ul>  | E  |
| B2601: SHIFT POSITION       | Inhibit steering lock   | 500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> <li>• Selector lever P position switch signal</li> <li>• P range signal (CAN)</li> </ul>  | F  |
| B2602: SHIFT POSITION       | Inhibit steering lock   | 5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (12 V)</li> <li>• Vehicle speed: 4 km/h (2.5 MPH) or more</li> </ul>   | G  |
| B2603: SHIFT POSI STATUS    | Inhibit steering lock   | 500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Selector lever P position switch signal: Except P position (12 V)</li> <li>• Selector lever P/N position signal: Except P and N positions (0 V)</li> </ul>   | H  |
| B2604: PNP/CLUTCH SW        | Inhibit steering lock   | 500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P and N position (12 V)</li> <li>- P range signal or N range signal (CAN): ON</li> </ul> </li> <li>• Status 2               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>- P range signal and N range signal (CAN): OFF</li> </ul> </li> </ul> | I  |
| B2605: PNP/CLUTCH SW        | Inhibit steering lock   | 500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>- Interlock/PNP switch signal (CAN): OFF</li> </ul> </li> <li>• Status 2               <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Selector lever P/N position signal: P or N position (12 V)</li> <li>- PNP switch signal (CAN): ON</li> </ul> </li> </ul>                       | J  |
| B2606: S/L RELAY            | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Steering lock relay signal (Request signal)</li> <li>• Steering lock relay signal (Condition signal)</li> </ul>   | K  |
| B2607: S/L RELAY            | Inhibit engine cranking | 500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>• Steering lock relay signal (Request signal)</li> <li>• Steering lock relay signal (Condition signal)</li> </ul>  | WW |
|                             |                         |  | M  |
|                             |                         |  | N  |
|                             |                         |  | O  |
|                             |                         |  | P  |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

| Display contents of CONSULT | Fail-safe  | Cancellation  |
|-----------------------------|--|---|
| B2608: STARTER RELAY        | Inhibit engine cranking  | 500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter motor relay control signal</li> <li>• Starter relay status signal (CAN)</li> </ul>   |
| B2609: S/L STATUS           | <ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit steering lock</li> </ul> | When the following steering lock conditions agree <ul style="list-style-type: none"> <li>• BCM steering lock control status</li> <li>• Steering lock condition No. 1 signal status</li> <li>• Steering lock condition No. 2 signal status</li> </ul>  |
| B260A: IGNITION RELAY       | Inhibit engine cranking  | 500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>• IGN relay (IPDM E/R) control signal: OFF (12 V)</li> <li>• Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>• Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>   |
| B260F: ENG STATE SIG LOST   | Maintains the power supply position attained at the time of DTC detection                                    | When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Power position changes to ACC</li> <li>• Receives engine status signal (CAN)</li> </ul>   |
| B2612: S/L STATUS           | <ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit steering lock</li> </ul> | When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Steering lock unit status signal (CAN) is received normally</li> <li>• The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)</li> </ul>  |
| B2617: BCM                  | Inhibit engine cranking  | 1 second after the starter motor relay control inside BCM becomes normal  |
| B2618: BCM                  | Inhibit engine cranking  | 1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal  |
| B2619: BCM                  | Inhibit engine cranking  | 1 second after the steering lock unit power supply output control inside BCM becomes normal   |
| B261E: VEHICLE TYPE         | Inhibit engine cranking  | BCM initialization  |
| B26E8: CLUTCH SW            | Inhibit engine cranking  | When any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1               <ul style="list-style-type: none"> <li>- Clutch switch signal (CAN from ECM): ON</li> <li>- Clutch interlock switch signal: OFF (0 V)</li> </ul> </li> <li>• Status 2               <ul style="list-style-type: none"> <li>- Clutch switch signal (CAN from ECM): OFF</li> <li>- Clutch interlock switch signal: ON (Battery voltage)</li> </ul> </li> </ul> |
| B26E9: S/L STATUS           | <ul style="list-style-type: none"> <li>• Inhibit engine cranking</li> <li>• Inhibit steering lock</li> </ul> | When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Steering condition No. 1 signal: LOCK (0 V)</li> <li>• Steering condition No. 2 signal: LOCK (12 V)</li> </ul>   |

## DTC Inspection Priority Chart

INFOID:000000005886409

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | DTC   |
|----------|---|
| 1        | B2562: LOW VOLTAGE  |
| 2        | <ul style="list-style-type: none"> <li>• U1000: CAN COMM</li> <li>• U1010: CONTROL UNIT(CAN)</li> </ul>   |
| 3        | <ul style="list-style-type: none"> <li>• B2190: NATS ANTENNA AMP</li> <li>• B2191: DIFFERENCE OF KEY</li> <li>• B2192: ID DISCORD BCM-ECM</li> <li>• B2193: CHAIN OF BCM-ECM</li> <li>• B2195: ANTI-SCANNING</li> </ul> |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

| Priority | DTC   |   |   |                            |
|----------|---|---|---|----------------------------|
| 4        | <ul style="list-style-type: none"> <li>• B2013: ID DISCORD BCM-S/L</li> <li>• B2014: CHAIN OF S/L-BCM</li> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP/CLUTCH SW</li> <li>• B2605: PNP/CLUTCH SW</li> <li>• B2606: S/L RELAY</li> <li>• B2607: S/L RELAY</li> <li>• B2608: STARTER RELAY</li> <li>• B2609: S/L STATUS</li> <li>• B260A: IGNITION RELAY</li> <li>• B260B: STEERING LOCK UNIT</li> <li>• B260C: STEERING LOCK UNIT</li> <li>• B260D: STEERING LOCK UNIT</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2612: S/L STATUS</li> <li>• B2614: BCM</li> <li>• B2615: BCM</li> <li>• B2616: BCM</li> <li>• B2617: BCM</li> <li>• B2618: BCM</li> <li>• B2619: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B261E: VEHICLE TYPE</li> <li>• B26E8: CLUTCH SW</li> <li>• B26E9: S/L STATUS</li> <li>• B26EA: KEY REGISTRATION</li> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• U0415: VEHICLE SPEED</li> </ul> | <p>A</p> <p>B</p> <p>C</p> <p>D</p> <p>E</p> <p>F</p> <p>G</p> <p>H</p> <p>I</p> <p>J</p>   |   |                            |
|          | 5   | <ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1734: CONTROL UNIT</li> </ul> | <p>K</p> <p>WW</p> <p>M</p>   |                            |
|          |   | 6   | <ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA</li> <li>• B2622: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul> | <p>N</p> <p>O</p> <p>P</p> |

### DTC Index

INFOID:000000005886410

#### NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [WW-14, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

| CONSULT display  | Fail-safe | Freeze Frame Data<br>•Vehicle Speed<br>•Odo/Trip Meter<br>•Vehicle condition | Intelligent Key<br>warning lamp ON | Tire pressure<br>monitor warning<br>lamp ON | Refer-<br>ence page     |
|--|-----------|--|------------------------------------|---|-------------------------|
| No DTC is detected.<br>further testing<br>may be required. | —         | —  | —                                  | —   | —                       |
| U1000: CAN COMM  | —         | —  | —                                  | —   | <a href="#">BCS-33</a>  |
| U1010: CONTROL UNIT(CAN)                                   | —         | —  | —                                  | —   | <a href="#">BCS-34</a>  |
| U0415: VEHICLE SPEED                                       | —         | —  | —                                  | —   | <a href="#">BCS-35</a>  |
| B2013: ID DISCORD BCM-S/L                                  | ×         | ×  | —                                  | —   | <a href="#">SEC-55</a>  |
| B2014: CHAIN OF S/L-BCM                                    | ×         | ×  | —                                  | —   | <a href="#">SEC-56</a>  |
| B2190: NATS ANTENNA AMP                                    | ×         | —  | —                                  | —   | <a href="#">SEC-47</a>  |
| B2191: DIFFERENCE OF KEY                                   | ×         | —  | —                                  | —   | <a href="#">SEC-50</a>  |
| B2192: ID DISCORD BCM-ECM                                  | ×         | —  | —                                  | —   | <a href="#">SEC-51</a>  |
| B2193: CHAIN OF BCM-ECM                                    | ×         | —  | —                                  | —   | <a href="#">SEC-53</a>  |
| B2195: ANTI-SCANNING                                       | ×         | —  | —                                  | —   | <a href="#">SEC-54</a>  |
| B2553: IGNITION RELAY                                      | —         | ×  | —                                  | —   | <a href="#">PCS-49</a>  |
| B2555: STOP LAMP   | —         | ×  | —                                  | —   | <a href="#">SEC-59</a>  |
| B2556: PUSH-BTN IGN SW                                     | —         | ×  | ×                                  | —   | <a href="#">SEC-61</a>  |
| B2557: VEHICLE SPEED                                       | ×         | ×  | ×                                  | —   | <a href="#">SEC-63</a>  |
| B2560: STARTER CONT RELAY                                  | ×         | ×  | ×                                  | —   | <a href="#">SEC-64</a>  |
| B2562: LOW VOLTAGE   | —         | ×  | —                                  | —   | <a href="#">BCS-36</a>  |
| B2601: SHIFT POSITION                                      | ×         | ×  | ×                                  | —   | <a href="#">SEC-65</a>  |
| B2602: SHIFT POSITION                                      | ×         | ×  | ×                                  | —   | <a href="#">SEC-68</a>  |
| B2603: SHIFT POSI STATUS                                   | ×         | ×  | ×                                  | —   | <a href="#">SEC-70</a>  |
| B2604: PNP/CLUTCH SW                                       | ×         | ×  | ×                                  | —   | <a href="#">SEC-73</a>  |
| B2605: PNP/CLUTCH SW                                       | ×         | ×  | ×                                  | —   | <a href="#">SEC-75</a>  |
| B2606: S/L RELAY   | ×         | ×  | ×                                  | —   | <a href="#">SEC-77</a>  |
| B2607: S/L RELAY   | ×         | ×  | ×                                  | —   | <a href="#">SEC-78</a>  |
| B2608: STARTER RELAY                                       | ×         | ×  | ×                                  | —   | <a href="#">SEC-80</a>  |
| B2609: S/L STATUS  | ×         | ×  | ×                                  | —   | <a href="#">SEC-82</a>  |
| B260A: IGNITION RELAY                                      | ×         | ×  | ×                                  | —   | <a href="#">PCS-51</a>  |
| B260B: STEERING LOCK UNIT                                  | —         | ×  | ×                                  | —   | <a href="#">SEC-86</a>  |
| B260C: STEERING LOCK UNIT                                  | —         | ×  | ×                                  | —   | <a href="#">SEC-87</a>  |
| B260D: STEERING LOCK UNIT                                  | —         | ×  | ×                                  | —   | <a href="#">SEC-88</a>  |
| B260F: ENG STATE SIG LOST                                  | ×         | ×  | ×                                  | —   | <a href="#">SEC-89</a>  |
| B2612: S/L STATUS  | ×         | ×  | ×                                  | —   | <a href="#">SEC-94</a>  |
| B2614: BCM   | —         | ×  | ×                                  | —   | <a href="#">PCS-53</a>  |
| B2615: BCM   | —         | ×  | ×                                  | —   | <a href="#">PCS-55</a>  |
| B2616: BCM   | —         | ×  | ×                                  | —   | <a href="#">PCS-57</a>  |
| B2617: BCM   | ×         | ×  | ×                                  | —   | <a href="#">SEC-98</a>  |
| B2618: BCM   | ×         | ×  | ×                                  | —   | <a href="#">PCS-59</a>  |
| B2619: BCM   | ×         | ×  | ×                                  | —   | <a href="#">SEC-100</a> |
| B261A: PUSH-BTN IGN SW                                     | —         | ×  | ×                                  | —   | <a href="#">PCS-60</a>  |
| B261E: VEHICLE TYPE  | ×         | ×  | × (Turn ON for 15<br>seconds)      | —   | <a href="#">SEC-101</a> |



## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

| CONSULT display           | Fail-safe | Freeze Frame Data<br>•Vehicle Speed<br>•Odo/Trip Meter<br>•Vehicle condition | Intelligent Key<br>warning lamp ON | Tire pressure<br>monitor warning<br>lamp ON | Refer-<br>ence page    |   |
|---------------------------|-----------|--|------------------------------------|---|------------------------|---|
| B2621: INSIDE ANTENNA     | —         | ×  | —                                  | —   | <a href="#">DLK-59</a> | A |
| B2622: INSIDE ANTENNA     | —         | ×  | —                                  | —   | <a href="#">DLK-61</a> | B |
| B2623: INSIDE ANTENNA     | —         | ×  | —                                  | —   | <a href="#">DLK-63</a> |   |
| B26E8: CLUTCH SW          | ×         | ×  | ×                                  | —   | <a href="#">SEC-90</a> | C |
| B26E9: S/L STATUS         | ×         | ×  | × (Turn ON for 15<br>seconds)      | —   | <a href="#">SEC-92</a> | D |
| B26EA: KEY REGISTRATION   | —         | ×  | × (Turn ON for 15<br>seconds)      | —   | <a href="#">SEC-93</a> | D |
| C1704: LOW PRESSURE FL    | —         | —  | —                                  | ×   | <a href="#">WT-26</a>  | E |
| C1705: LOW PRESSURE FR    | —         | —  | —                                  | ×   |                        |   |
| C1706: LOW PRESSURE RR    | —         | —  | —                                  | ×   |                        |   |
| C1707: LOW PRESSURE RL    | —         | —  | —                                  | ×   |                        |   |
| C1708: [NO DATA] FL       | —         | —  | —                                  | ×   | <a href="#">WT-28</a>  | F |
| C1709: [NO DATA] FR       | —         | —  | —                                  | ×   |                        |   |
| C1710: [NO DATA] RR       | —         | —  | —                                  | ×   |                        |   |
| C1711: [NO DATA] RL       | —         | —  | —                                  | ×   |                        |   |
| C1716: [PRESSDATA ERR] FL | —         | —  | —                                  | ×   | <a href="#">WT-31</a>  | H |
| C1717: [PRESSDATA ERR] FR | —         | —  | —                                  | ×   |                        |   |
| C1718: [PRESSDATA ERR] RR | —         | —  | —                                  | ×   |                        |   |
| C1719: [PRESSDATA ERR] RL | —         | —  | —                                  | ×   |                        |   |
| C1729: VHCL SPEED SIG ERR | —         | —  | —                                  | ×   | <a href="#">WT-33</a>  | I |
| C1734: CONTROL UNIT       | —         | —  | —                                  | ×   | <a href="#">WT-35</a>  | J |

WW

M

N

O

P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000005886415

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item  | Condition   |   | Value/Status |
|---------------|---|---|--------------|
| RAD FAN REQ   | Engine idle speed   | Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.                                    | 0 - 100 %    |
| AC COMP REQ   | Engine running  | A/C switch OFF  | Off          |
|               |   | A/C switch ON<br>(Compressor is operating)  | On           |
| TAIL&CLR REQ  | Lighting switch OFF   |   | Off          |
|               | Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated) |   | On           |
| HL LO REQ     | Lighting switch OFF   |   | Off          |
|               | Lighting switch 2ND HI or AUTO (Light is illuminated)       |   | On           |
| HL HI REQ     | Lighting switch OFF   |   | Off          |
|               | Lighting switch HI  |   | On           |
| FR FOG REQ    | Lighting switch 2ND or AUTO (Light is illuminated)          | Front fog lamp switch OFF   | Off          |
|               |   | <ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime running light activated (Only for Canada)</li> </ul> | On           |
| FR WIP REQ    | Ignition switch ON  | Front wiper switch OFF  | Stop         |
|               |   | Front wiper switch INT  | 1LOW         |
|               |   | Front wiper switch LO   | Low          |
|               |   | Front wiper switch HI   | Hi           |
| WIP AUTO STOP | Ignition switch ON  | Front wiper stop position   | STOP P       |
|               |   | Any position other than front wiper stop position   | ACT P        |
| WIP PROT      | Ignition switch ON  | Front wiper operates normally   | Off          |
|               |   | Front wiper stops at fail-safe operation  | BLOCK        |
| IGN RLY1 -REQ | Ignition switch OFF or ACC                                  |   | Off          |
|               | Ignition switch ON  |   | On           |
| IGN RLY       | Ignition switch OFF or ACC                                  |   | Off          |
|               | Ignition switch ON  |   | On           |
| PUSH SW       | Release the push-button ignition switch                     |   | Off          |
|               | Press the push-button ignition switch                       |   | On           |
| INTER/NP SW   | Ignition switch ON  | Selector lever in any position other than P or N (A/T models)   | Off          |
|               |   | Release clutch pedal (M/T models)   |              |
|               | Ignition switch ON  | Selector lever in P or N position (A/T models)  | On           |
|               |   | Depress clutch pedal (M/T models)   |              |
| ST RLY CONT   | Ignition switch ON  |   | Off          |
|               | At engine cranking  |   | On           |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

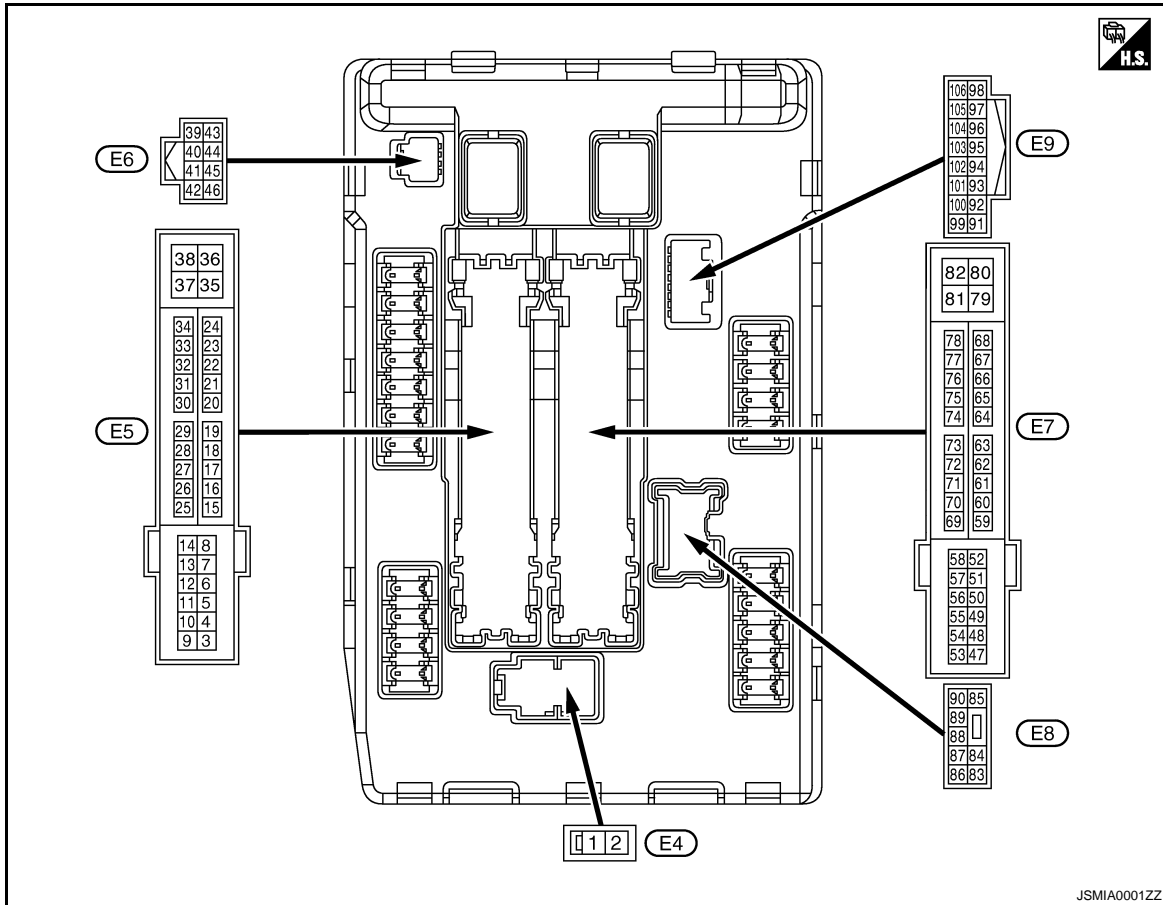
| Monitor Item   | Condition   | Value/Status    |    |
|----------------|---|-----------------|----|
| IHBT RLY -REQ  | Ignition switch ON  | Off             | A  |
|                | At engine cranking  | On              |    |
| ST/INHI RLY    | Ignition switch ON  | Off             | B  |
|                | At engine cranking  | INHI ON → ST ON |    |
|                | The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF  | UNKWN           | C  |
| DETENT SW      | Ignition switch ON  | Off             | D  |
|                | Release the selector button with selector lever in P position<br><b>NOTE:</b><br>Fixed On for M/T models  | On              | E  |
| S/L RLY -REQ   | None of the conditions below are present  | Off             | F  |
|                | <ul style="list-style-type: none"> <li>Open the driver door after the ignition switch is turned OFF (for a few seconds)</li> <li>Press the push-button ignition switch when the steering lock is activated</li> <li>Depress the clutch pedal when the steering lock is activated</li> </ul> | On              | G  |
|                | Steering lock is activated  | LOCK            |    |
| S/L STATE      | Steering lock is deactivated  | UNLOCK          | H  |
|                | [DTC: B210A] is detected  | UNKWN           |    |
|                | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off             | I  |
| OIL P SW       | Ignition switch OFF, ACC or engine running  | Open            |    |
|                | Ignition switch ON  | Close           | J  |
| HOOD SW        | Close the hood  | Off             |    |
|                | Open the hood   | On              |    |
| HL WASHER REQ  | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off             | K  |
| THFT HRN REQ   | Not operation   | Off             |    |
|                | <ul style="list-style-type: none"> <li>Panic alarm is activated</li> <li>Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li> </ul>  | On              | WW |
| HORN CHIRP     | Not operating   | Off             | M  |
|                | Door locking with Intelligent Key (horn chirp mode)   | On              |    |
| CRNRNG LMP REQ | <b>NOTE:</b><br>The item is indicated, but not monitored.   | Off             | N  |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

## TERMINAL LAYOUT



## PHYSICAL VALUES

| Terminal No.<br>(Wire color) |        | Description                                |                  | Condition           |   | Value<br>(Approx.)    |
|------------------------------|--------|--|------------------|---------------------|---|-----------------------|
| +                            | -      | Signal name                                | Input/<br>Output |                     |   |                       |
| 1<br>(W)                     | Ground | Battery power supply                       | Input            | Ignition switch OFF |   | Battery voltage       |
| 2<br>(L)                     | Ground | Battery power supply                       | Input            | Ignition switch OFF |   | Battery voltage       |
| 4<br>(V)                     | Ground | Front wiper LO                             | Output           | Ignition switch ON  | Front wiper switch OFF                      | 0 V                   |
|                              |        |  |                  |                     | Front wiper switch LO                       | Battery voltage       |
| 5<br>(L)                     | Ground | Front wiper HI                             | Output           | Ignition switch ON  | Front wiper switch OFF                      | 0 V                   |
|                              |        |  |                  |                     |   | Front wiper switch HI |
| 6*4<br>(SB)                  | Ground | Daytime running light relay                | Input            | Ignition switch OFF |   | Battery voltage       |
| 7<br>(P)                     | Ground | Tail, license plate lamps & interior lamps | Output           | Ignition switch ON  | Lighting switch OFF                         | 0 V                   |
|                              |        |  |                  |                     |   | Lighting switch 1ST   |
| 11<br>(W)                    | Ground | Steering lock unit power supply            | Output           | Ignition switch OFF | A few seconds after opening the driver door | Battery voltage       |
|                              |        |  |                  |                     | Press the push-button ignition switch       | Battery voltage       |
|                              |        |  |                  |                     | Ignition switch ACC or ON                   | 0 V                   |
| 12<br>(B/W)                  | Ground | Ground                                     | —                | Ignition switch ON  |   | 0 V                   |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                           |                  | Condition   |   | Value<br>(Approx.) |     |
|------------------------------|--------|---------------------------------------|------------------|---|---|--------------------|-----|
| +                            | -      | Signal name                           | Input/<br>Output |   |   |                    |     |
| 13<br>(Y)                    | Ground | Fuel pump power supply                | Output           | Approximately 1 second or more after turning the ignition switch ON   |   | 0 V                | A   |
|                              |        |                                       |                  | <ul style="list-style-type: none"> <li>Approximately 1 second after turning the ignition switch ON</li> <li>Engine running</li> </ul> |   | Battery voltage    | B   |
| 16<br>(LG)                   | Ground | Front wiper auto stop                 | Input            | Ignition switch ON  | Front wiper stop position   | 0 V                | C   |
|                              |        |                                       |                  |   | Any position other than front wiper stop position   | Battery voltage    | D   |
| 19<br>(R)                    | Ground | Ignition relay power supply           | Output           | Ignition switch OFF   |   | 0 V                | E   |
|                              |        |                                       |                  | Ignition switch ON  |   | Battery voltage    |     |
| 25<br>(G)                    | Ground | Ignition relay power supply           | Output           | Ignition switch OFF   |   | 0 V                |     |
|                              |        |                                       |                  | Ignition switch ON  |   | Battery voltage    |     |
| 26*1<br>(Y)                  | Ground | Ignition relay power supply           | Output           | Ignition switch OFF   |   | 0 V                | F   |
|                              |        |                                       |                  | Ignition switch ON  |   | Battery voltage    |     |
| 27<br>(BG)                   | Ground | Ignition relay monitor                | Input            | Ignition switch OFF or ACC  |   | Battery voltage    | G   |
|                              |        |                                       |                  | Ignition switch ON  |   | 0 V                |     |
| 28<br>(L)                    | Ground | Push-button ignition switch           | Input            | Press the push-button ignition switch   |   | 0 V                | H   |
|                              |        |                                       |                  | Release the push-button ignition switch   |   | Battery voltage    |     |
| 30<br>(GR)                   | Ground | Starter relay control                 | Input            | A/T models  | Selector lever in any position other than P or N (Ignition switch ON)   | 0 V                | I   |
|                              |        |                                       |                  |   | Selector lever P or N (Ignition switch ON)  | Battery voltage    |     |
|                              |        |                                       |                  | M/T models  | Release the clutch pedal  | 0 V                | J   |
|                              |        |                                       |                  |   | Depress the clutch pedal  | Battery voltage    |     |
| 32<br>(V)                    | Ground | Steering lock unit condition-1        | Input            | Steering lock is activated  |   | 0 V                | K   |
|                              |        |                                       |                  | Steering lock is deactivated  |   | Battery voltage    |     |
| 33<br>(P)                    | Ground | Steering lock unit condition-2        | Input            | Steering lock is activated  |   | Battery voltage    |     |
|                              |        |                                       |                  | Steering lock is deactivated  |   | 0 V                | WW  |
| 36<br>(G)                    | Ground | Battery power supply                  | Input            | Ignition switch OFF   |   | Battery voltage    |     |
| 39<br>(P)                    | —      | CAN-L                                 | Input/<br>Output | —   |   | —                  | M   |
| 40<br>(L)                    | —      | CAN-H                                 | Input/<br>Output | —   |   | —                  |     |
| 41<br>(B/W)                  | Ground | Ground                                | —                | Ignition switch ON  |   | 0 V                | N   |
| 42<br>(GR)                   | Ground | Cooling fan relay control             | Input            | Ignition switch OFF or ACC  |   | 0 V                | O   |
|                              |        |                                       |                  | Ignition switch ON  |   | 0.7 V              |     |
| 43*2<br>(G)                  | Ground | A/T shift selector (Detention switch) | Input            | Ignition switch ON  | Press the selector button (selector lever P)  | Battery voltage    | P   |
|                              |        |                                       |                  |   | <ul style="list-style-type: none"> <li>Selector lever in any position other than P</li> <li>Release the selector button (selector lever P)</li> </ul> |                    | 0 V |
| 44<br>(LG)                   | Ground | Horn relay control                    | Input            | The horn is deactivated   |   | Battery voltage    |     |
|                              |        |                                       |                  | The horn is activated   |   | 0 V                |     |

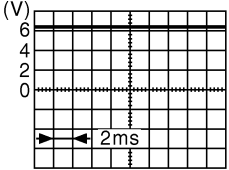
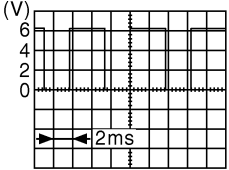
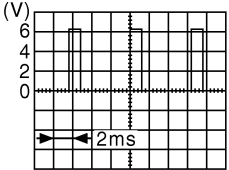
# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                               |                  | Condition   | Value<br>(Approx.)  |                 |
|------------------------------|--------|---|------------------|---|---|-----------------|
|                              |        | Signal name                               | Input/<br>Output |   |   |                 |
| +                            | -      |   |                  |   |   |                 |
| 45<br>(V)                    | Ground | Anti theft horn relay control             | Input            | The horn is deactivated   | Battery voltage   |                 |
|                              |        |   |                  | The horn is activated   | 0 V   |                 |
| 46<br>(SB)                   | Ground | Starter relay control                     | Input            | A/T models  | Selector lever in any position other than P or N (Ignition switch ON) | 0 V             |
|                              |        |   |                  |   | Selector lever P or N (Ignition switch ON)                            | Battery voltage |
|                              |        |   |                  | M/T models  | Release the clutch pedal  | 0 V             |
|                              |        |   |                  |   | Depress the clutch pedal  | Battery voltage |
| 48<br>(L)                    | Ground | A/C relay power supply                    | Output           | Engine running  | A/C switch OFF  | 0 V             |
|                              |        |   |                  |   | A/C switch ON (A/C compressor is operating)                           | Battery voltage |
| 49<br>(BG)                   | Ground | ECM relay power supply                    | Output           | Ignition switch OFF (More than a few seconds after turning ignition switch OFF)   | 0 V   |                 |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul> | Battery voltage   |                 |
| 51<br>(Y)                    | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   | 0 V   |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage   |                 |
| 53<br>(W)                    | Ground | ECM relay power supply                    | Output           | Ignition switch OFF (More than a few seconds after turning ignition switch OFF)   | 0 V   |                 |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul> | Battery voltage   |                 |
| 54<br>(P)                    | Ground | Throttle control motor relay power supply | Output           | Ignition switch OFF (More than a few seconds after turning ignition switch OFF)   | 0 V   |                 |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul> | Battery voltage   |                 |
| 55<br>(SB)                   | Ground | ECM power supply                          | Output           | Ignition switch OFF   | Battery voltage   |                 |
| 56<br>(BR)                   | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   | 0 V   |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage   |                 |
| 57<br>(G)                    | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   | 0 V   |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage   |                 |
| 58*2<br>(GR)                 | Ground | Ignition relay power supply               | Output           | Ignition switch OFF   | 0 V   |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage   |                 |
| 69<br>(BR)                   | Ground | ECM relay control                         | Output           | Ignition switch OFF (More than a few seconds after turning ignition switch OFF)   | Battery voltage   |                 |
|                              |        |   |                  | <ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul> | 0 - 1.5 V   |                 |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                             |                  | Condition   | Value<br>(Approx.)   |                 |
|------------------------------|--------|---|------------------|---|--|-----------------|
| +                            | -      | Signal name                             | Input/<br>Output |   |  |                 |
| 70<br>(BG)                   | Ground | Throttle control motor<br>relay control | Output           | Ignition switch ON → OFF  | 0 - 1.0 V<br>↓<br>Battery voltage<br>↓<br>0 V  |                 |
|                              |        |   |                  | Ignition switch ON  | 0 - 1.0 V  |                 |
| 73*3<br>(P)                  | Ground | Ignition relay power<br>supply          | Output           | Ignition switch OFF   | 0 V  |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage  |                 |
| 74<br>(G)                    | Ground | Ignition relay power<br>supply          | Output           | Ignition switch OFF   | 0 V  |                 |
|                              |        |   |                  | Ignition switch ON  | Battery voltage  |                 |
| 75<br>(SB)                   | Ground | Oil pressure switch                     | Input            | Ignition switch ON  | Engine stopped<br>0 V<br>Engine running<br>Battery voltage                                     |                 |
|                              |        |   |                  |   |  |                 |
| 76<br>(Y)                    | Ground | Power generation<br>command signal      | Output           | Ignition switch ON  | <br>6.3 V   |                 |
|                              |        |   |                  | 40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"  | <br>3.8 V |                 |
|                              |        |   |                  | 80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"  | <br>1.4 V |                 |
| 77<br>(R)                    | Ground | Fuel pump relay control                 | Output           | <ul style="list-style-type: none"> <li>Approximately 1 second after turning the ignition switch ON</li> <li>Engine running</li> </ul> | 0 - 1.0 V  |                 |
|                              |        |   |                  | Approximately 1 second or more after turning the ignition switch ON   | Battery voltage  |                 |
| 80<br>(W)                    | Ground | Starter motor                           | Output           | At engine cranking  | Battery voltage  |                 |
| 83<br>(R)                    | Ground | Headlamp LO (RH)                        | Output           | Ignition switch ON  | Lighting switch OFF  | 0 V             |
|                              |        |   |                  |   | Lighting switch 2ND  | Battery voltage |
| 84<br>(V)                    | Ground | Headlamp LO (LH)                        | Output           | Ignition switch ON  | Lighting switch OFF  | 0 V             |
|                              |        |   |                  |   | Lighting switch 2ND  | Battery voltage |

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

| Terminal No.<br>(Wire color) |        | Description                         |                  | Condition   | Value<br>(Approx.)  |                 |
|------------------------------|--------|-------------------------------------|------------------|---|---|-----------------|
| +                            | -      | Signal name                         | Input/<br>Output |   |   |                 |
| 86<br>(W)                    | Ground | Front fog lamp (RH)                 | Output           | Lighting switch<br>2ND  | Front fog lamp switch OFF   | 0 V             |
|                              |        |                                     |                  |   | <ul style="list-style-type: none"> <li>Front fog lamp switch ON</li> <li>Daytime running light activated (Only for Canada)</li> </ul> | Battery voltage |
| 87<br>(L)                    | Ground | Front fog lamp (LH)                 | Output           | Lighting switch<br>2ND  | Front fog lamp switch OFF   | 0 V             |
|                              |        |                                     |                  |   | <ul style="list-style-type: none"> <li>Front fog lamp switch ON</li> <li>Daytime running light activated (Only for Canada)</li> </ul> | Battery voltage |
| 88<br>(G)                    | Ground | Washer pump power supply            | Output           | Ignition switch ON  | Battery voltage   |                 |
| 89<br>(BR)                   | Ground | Headlamp HI (RH)                    | Output           | Ignition switch<br>ON   | Lighting switch OFF   | 0 V             |
|                              |        |                                     |                  |   | <ul style="list-style-type: none"> <li>Lighting switch HI</li> <li>Lighting switch PASS</li> </ul>                                    | Battery voltage |
| 90<br>(P)                    | Ground | Headlamp HI (LH)                    | Output           | Ignition switch<br>ON   | Lighting switch OFF   | 0 V             |
|                              |        |                                     |                  |   | <ul style="list-style-type: none"> <li>Lighting switch HI</li> <li>Lighting switch PASS</li> </ul>                                    | Battery voltage |
| 91<br>(G)                    | Ground | Parking lamp (RH)                   | Output           | Ignition switch<br>ON   | Lighting switch OFF   | 0 V             |
|                              |        |                                     |                  |   | Lighting switch 1ST   | Battery voltage |
| 92<br>(BG)                   | Ground | Parking lamp (LH)                   | Output           | Ignition switch<br>ON   | Lighting switch OFF   | 0 V             |
|                              |        |                                     |                  |   | Lighting switch 1ST   | Battery voltage |
| 97<br>(V)                    | Ground | Cooling fan control                 | Output           | Engine idling   | 0 - 5 V   |                 |
| 104<br>(LG)                  | Ground | Hood switch                         | Input            | Close the hood  | Battery voltage   |                 |
|                              |        |                                     |                  | Open the hood   | 0 V   |                 |
| 105*4<br>(L)                 | Ground | Daytime running light relay control | Output           | <ul style="list-style-type: none"> <li>Parking lamp</li> <li>License plate lamp</li> <li>Tail lamp</li> </ul> | Turned OFF  | Battery voltage |
|                              |        |                                     |                  | Turned ON   | 0 V   |                 |

\*1: Only for the models with ICC system

\*2: A/T models only

\*3: M/T models only

\*4: With daytime running light system

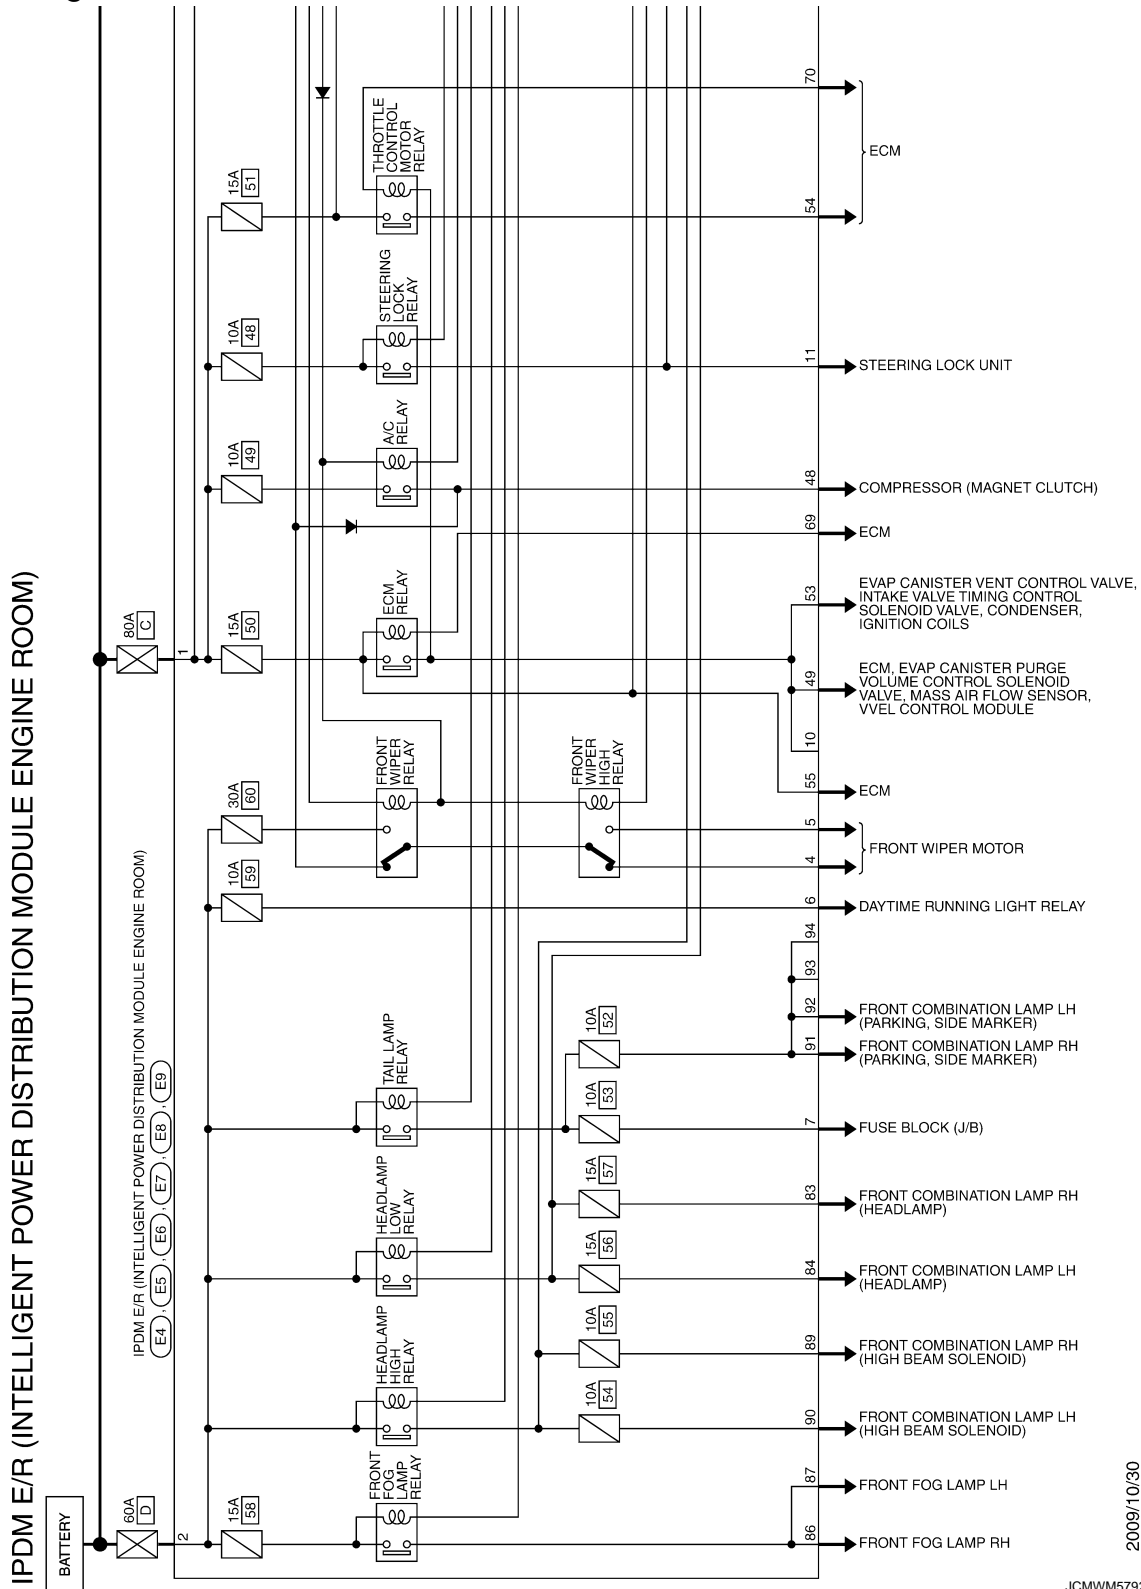


# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

## Wiring Diagram - IPDM E/R -

INFOID:000000005886416




A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
WW  
M  
N  
O  
P

2009/10/30

JCMWM5792GI

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
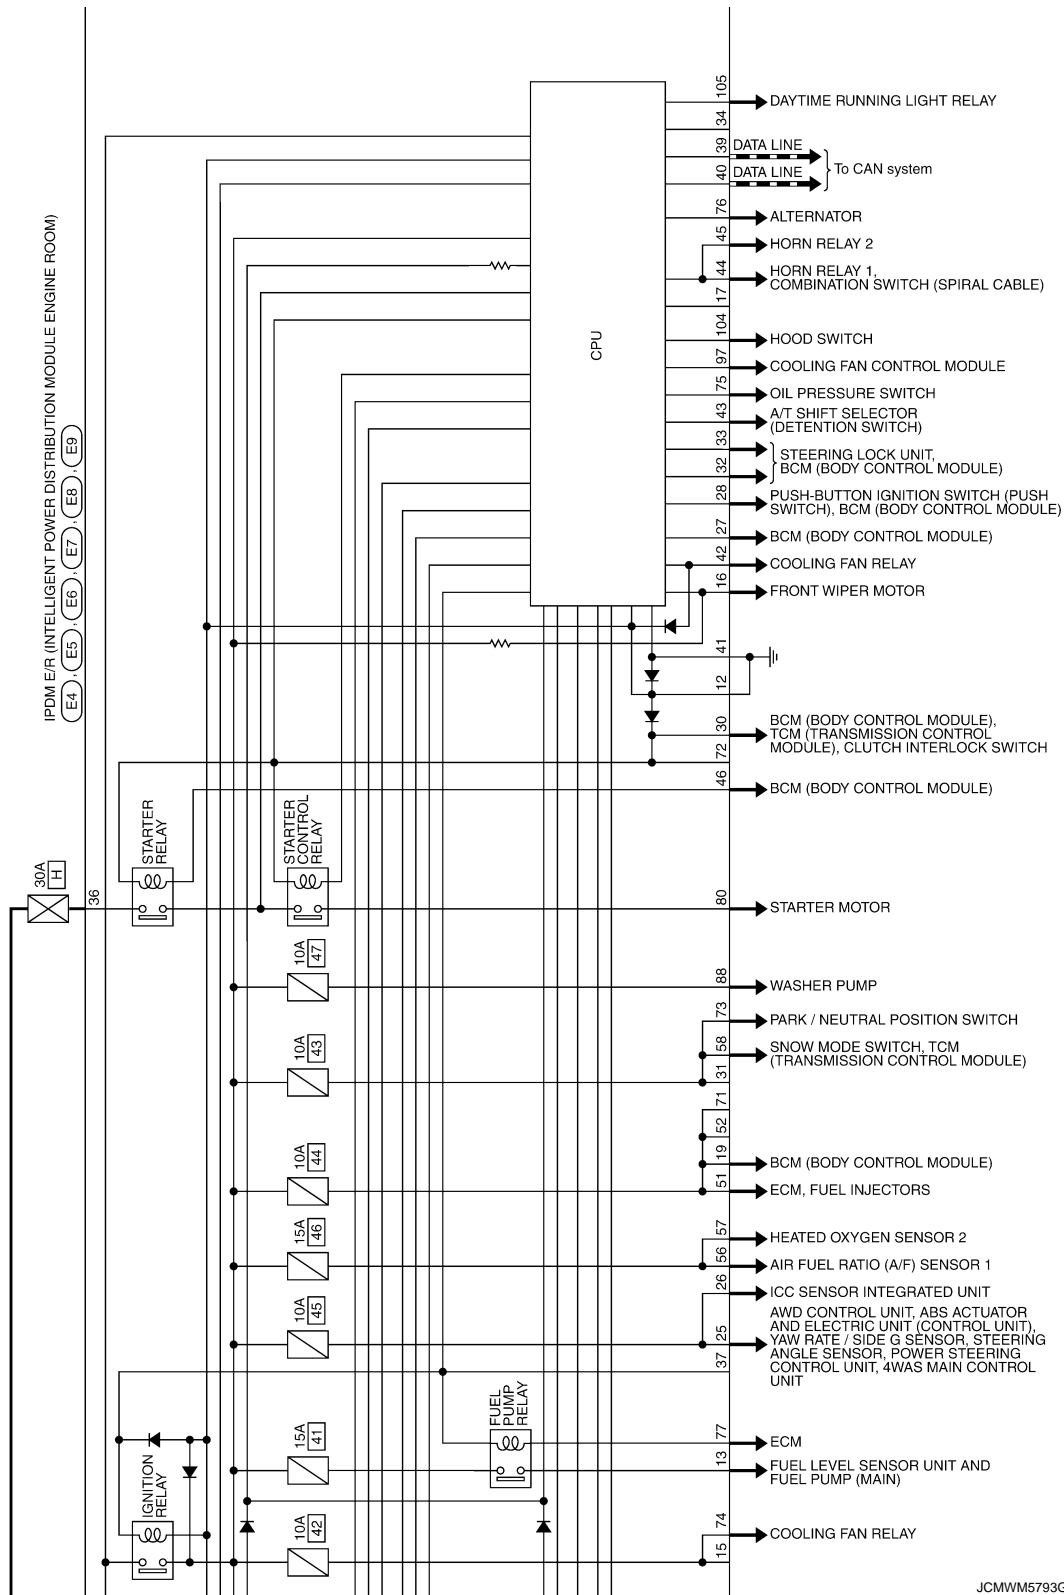
< ECU DIAGNOSIS INFORMATION >



JCMWM5793G

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

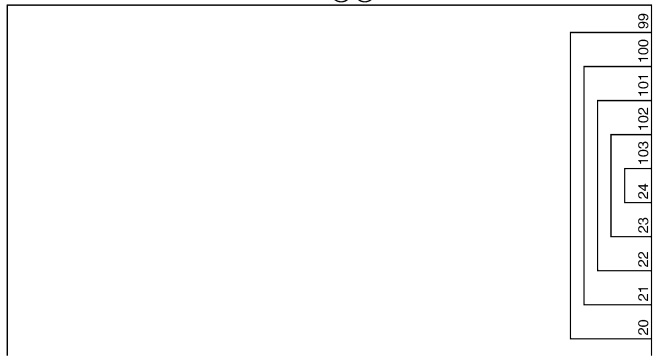
< ECU DIAGNOSIS INFORMATION >

---

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

IPDM E/R  
(INTELLIGENT POWER  
DISTRIBUTION MODULE  
ENGINE ROOM)

(E4) (E5) (E6)  
(E7) (E8) (E9)




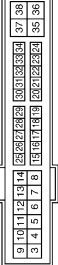

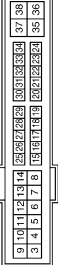





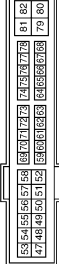

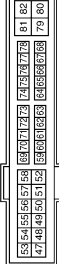

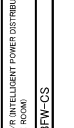

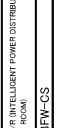






**WW**

JCMWM5794G

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

| IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)  |  |                             |
|---|--|-----------------------------|
| Connector No.   | Connector Name   | Connector Type              |
| E4  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | LOPE-MC                     |
| 1   | W  |                             |
| 2   | L  |                             |
|   |  |                             |
| Terminal No.  | Color of Wire  | Signal Name [Specification] |
| 1   | W  | -                           |
| 2   | L  | -                           |
|   |  |                             |
| Connector No.   | Connector Name   | Connector Type              |
| E5  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | TH20PW-CS12-M4-TV           |
| 3   | W  |                             |
| 4   | L  |                             |
| 5   | SB   |                             |
| 6   | SB   |                             |
| 7   | P  |                             |
| 11  | W  |                             |
| 12  | B/W  |                             |
| 13  | Y  |                             |
| 16  | LG   |                             |
| 19  | R  |                             |
| 25  | G  |                             |
| 26  | Y  |                             |
| 27  | BG   |                             |
| 28  | L  |                             |
| 30  | GR   |                             |
| 32  | V  |                             |
| 33  | P  |                             |
| 36  | G  |                             |
|   |  |                             |
| Terminal No.  | Color of Wire  | Signal Name [Specification] |
| 3   | W  | 33 31 33 33 34              |
| 4   | L  | 25 25 22 23 34              |
| 5   | SB   | 35 31 33 33 34              |
| 6   | SB   | 35 31 33 33 34              |
| 7   | P  | 22 21 22 23 24              |
| 11  | W  | -                           |
| 12  | B/W  | -                           |
| 13  | Y  | -                           |
| 16  | LG   | -                           |
| 19  | R  | -                           |
| 25  | G  | -                           |
| 26  | Y  | -                           |
| 27  | BG   | -                           |
| 28  | L  | -                           |
| 30  | GR   | -                           |
| 32  | V  | -                           |
| 33  | P  | -                           |
| 36  | G  | -                           |
|   |  |                             |
| Connector No.   | Connector Name   | Connector Type              |
| E6  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | TH20PW-NH                   |
| 39  | P  |                             |
| 40  | L  |                             |
| 41  | B/W  |                             |
| 42  | GR   |                             |
| 43  | G  |                             |
| 44  | LG   |                             |
| 45  | V  |                             |
| 46  | SB   |                             |
|   |  |                             |
| Terminal No.  | Color of Wire  | Signal Name [Specification] |
| 39  | P  | -                           |
| 40  | L  | -                           |
| 41  | B/W  | -                           |
| 42  | GR   | -                           |
| 43  | G  | -                           |
| 44  | LG   | -                           |
| 45  | V  | -                           |
| 46  | SB   | -                           |
|    |  |                             |
| Connector No.   | Connector Name   | Connector Type              |
| E7  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | TH20PW-CS12-M4              |
| 47  | L  |                             |
| 48  | L  |                             |
| 49  | BG   |                             |
| 51  | Y  |                             |
| 53  | W  |                             |
| 54  | P  |                             |
| 55  | SB   |                             |
| 56  | BR   |                             |
| 57  | G  |                             |
| 58  | GR   |                             |
| 69  | BR   |                             |
| 70  | BG   |                             |
| 73  | P  |                             |
| 74  | G  |                             |
| 75  | SB   |                             |
|    |  |                             |
| Terminal No.  | Color of Wire  | Signal Name [Specification] |
| 47  | L  | -                           |
| 48  | L  | -                           |
| 49  | BG   | -                           |
| 51  | Y  | -                           |
| 53  | W  | -                           |
| 54  | P  | -                           |
| 55  | SB   | -                           |
| 56  | BR   | -                           |
| 57  | G  | -                           |
| 58  | GR   | -                           |
| 69  | BR   | -                           |
| 70  | BG   | -                           |
| 73  | P  | -                           |
| 74  | G  | -                           |
| 75  | SB   | -                           |
|       |  |                             |
| Connector No.   | Connector Name   | Connector Type              |
| E8  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | NS08FW-CS                   |
| 76  | Y  |                             |
| 77  | R  |                             |
| 80  | W  |                             |
|       |  |                             |
| Terminal No.  | Color of Wire  | Signal Name [Specification] |
| 76  | Y  | -                           |
| 77  | R  | -                           |
| 80  | W  | -                           |
|      |  |                             |
| Connector No.   | Connector Name   | Connector Type              |
| E9  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) | TH18FW-NH                   |
| 83  | R  |                             |
| 84  | V  |                             |
| 85  | W  |                             |
| 87  | L  |                             |
| 88  | G  |                             |
| 89  | BR   |                             |
| 90  | P  |                             |
|      |  |                             |
| Terminal No.  | Color of Wire  | Signal Name [Specification] |
| 83  | R  | -                           |
| 84  | V  | -                           |
| 85  | W  | -                           |
| 87  | L  | -                           |
| 88  | G  | -                           |
| 89  | BR   | -                           |
| 90  | P  | -                           |

JCMWM5795G

INFOID:000000005886417

## Fail-safe

### CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

| Control part   | Fail-safe operation   |
|----------------|---|
| Cooling fan    | <ul style="list-style-type: none"> <li>Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON</li> <li>Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF</li> </ul> |
| A/C compressor | A/C relay OFF   |
| Alternator     | Outputs the power generation command signal (PWM signal) 0%   |

### If No CAN Communication Is Available With BCM

| Control part   | Fail-safe operation  |
|--|--|
| Headlamp   | <ul style="list-style-type: none"> <li>Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>Headlamp high relay OFF</li> </ul>  |
| <ul style="list-style-type: none"> <li>Parking lamps</li> <li>Side maker lamp</li> <li>License plate lamps</li> <li>Illuminations</li> <li>Tail lamps</li> </ul> | <ul style="list-style-type: none"> <li>Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>   |
| Front wiper  | <ul style="list-style-type: none"> <li>The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul> |
| Horn   | Horn relay OFF   |
| Ignition relay   | The status just before activation of fail-safe is maintained.  |
| Starter motor  | Starter control relay OFF  |
| Steering lock unit   | Steering lock relay OFF  |

### IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

| Voltage judgment            |                                     | IPDM E/R judgment         | Operation  |
|-----------------------------|-------------------------------------|---------------------------|--|
| Ignition relay contact side | Ignition relay excitation coil side |                           |  |
| ON                          | ON                                  | Ignition relay ON normal  | —  |
| OFF                         | OFF                                 | Ignition relay OFF normal | —  |
| ON                          | OFF                                 | Ignition relay ON stuck   | <ul style="list-style-type: none"> <li>Detects DTC "B2098: IGN RELAY ON"</li> <li>Turns ON the tail lamp relay for 10 minutes</li> </ul> |
| OFF                         | ON                                  | Ignition relay OFF stuck  | Detects DTC "B2099: IGN RELAY OFF"   |

### FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

| Ignition switch | Front wiper switch | Front wiper stop position signal   |
|-----------------|--------------------|--|
| ON              | OFF                | The front wiper stop position signal (stop position) cannot be input for 10 seconds. |
|                 | ON                 | The front wiper stop position signal does not change for 10 seconds.                 |

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## < ECU DIAGNOSIS INFORMATION >

### NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

### STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

### DTC Index

INFOID:000000005886418

### NOTE:

- The details of time display are as follows.
  - CRNT: A malfunction is detected now.
  - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
  - The number is 0 when is detected now.
  - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
  - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

| CONSULT display  | Fail-safe | Refer to                |
|--|-----------|-------------------------|
| No DTC is detected.<br>further testing<br>may be required. | —         | —                       |
| U1000: CAN COMM CIRCUIT                                    | ×         | <a href="#">PCS-15</a>  |
| B2098: IGN RELAY ON  | ×         | <a href="#">PCS-16</a>  |
| B2099: IGN RELAY OFF                                       | —         | <a href="#">PCS-17</a>  |
| B2108: STRG LCK RELAY ON                                   | —         | <a href="#">SEC-104</a> |
| B2109: STRG LCK RELAY OFF                                  | —         | <a href="#">SEC-106</a> |
| B210A: STRG LCK STATE SW                                   | —         | <a href="#">SEC-107</a> |
| B210B: START CONT RLY ON                                   | —         | <a href="#">SEC-111</a> |
| B210C: START CONT RLY OFF                                  | —         | <a href="#">SEC-112</a> |
| B210D: STARTER RELAY ON                                    | —         | <a href="#">SEC-113</a> |
| B210E: STARTER RELAY OFF                                   | —         | <a href="#">SEC-114</a> |
| B210F: INTRLCK/PNP SW ON                                   | —         | <a href="#">SEC-116</a> |
| B2110: INTRLCK/PNP SW OFF                                  | —         | <a href="#">SEC-118</a> |

# FRONT WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### FRONT WIPER AND WASHER SYSTEM SYMPTOMS WITH RAIN SENSOR

#### WITH RAIN SENSOR : Symptom Table

INFOID:000000005839039

| Symptom                       |                               | Probable malfunction location   | Inspection item  |
|-------------------------------|-------------------------------|---|--|
| Front wiper does not operate. | HI only                       | <ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>         | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .                       |
|                               |                               | <ul style="list-style-type: none"> <li>IPDM E/R</li> <li>Harness between IPDM E/R and front wiper motor</li> <li>Front wiper motor</li> </ul> | Front wiper motor (HI) circuit<br>Refer to <a href="#">WW-25, "Component Function Check"</a> . |
|                               |                               | Front wiper request signal<br><ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>   | IPDM E/R DATA MONITOR<br>"FR WIP REQ"  |
|                               | LO and AUTO                   | <ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>         | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .                       |
|                               |                               | <ul style="list-style-type: none"> <li>IPDM E/R</li> <li>Harness between IPDM E/R and front wiper motor</li> <li>Front wiper motor</li> </ul> | Front wiper motor (LO) circuit<br>Refer to <a href="#">WW-23, "Component Function Check"</a> . |
|                               |                               | Front wiper request signal<br><ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>   | IPDM E/R DATA MONITOR<br>"FR WIP REQ"  |
|                               | AUTO only<br>(Auto operation) | <ul style="list-style-type: none"> <li>Combination switch</li> <li>Harness between combination switch and BCM</li> <li>BCM</li> </ul>         | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .                       |
|                               |                               | <ul style="list-style-type: none"> <li>Rain sensor</li> <li>Harness between rain sensor and BCM</li> <li>BCM</li> </ul>                       | Rain sensor<br>Refer to <a href="#">WW-31, "Component Function Check"</a> .                    |
|                               | HI, LO and AUTO               | SYMPTOM DIAGNOSIS<br>"FRONT WIPER DOES NOT OPERATE"<br>Refer to <a href="#">WW-91, "Diagnosis Procedure"</a> .                                |  |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

## FRONT WIPER AND WASHER SYSTEM SYMPTOMS

### < SYMPTOM DIAGNOSIS >

| Symptom   | Probable malfunction location          | Inspection item   |   |
|---|--|---|---|
| Front wiper does not stop.  | HI only                                | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>   | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .  |
|   |  | <ul style="list-style-type: none"> <li>Front wiper request signal</li> <li>• BCM</li> <li>• IPDM E/R</li> </ul>                                     | IPDM E/R DATA MONITOR<br>"FR WIP REQ"   |
|   |  | IPDM E/R  | —   |
|   | LO only                                | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>   | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .  |
|   |  | <ul style="list-style-type: none"> <li>Front wiper request signal</li> <li>• BCM</li> <li>• IPDM E/R</li> </ul>                                     | IPDM E/R DATA MONITOR<br>"FR WIP REQ"   |
|   |  | IPDM E/R  | —   |
|   | AUTO only<br>(Auto operation)          | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>   | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .  |
|   |  | <ul style="list-style-type: none"> <li>• Rain sensor</li> <li>• Harness between rain sensor and BCM</li> <li>• BCM</li> </ul>                       | Rain sensor<br>Refer to <a href="#">WW-31, "Component Function Check"</a> .   |
|   | Front wiper does not operate normally. | Sensitivity adjustment cannot be performed.   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul> |
| BCM   |  |   | —   |
| Wiper is not linked to the washer operation.  |  | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>         | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .  |
|   |  | BCM   | —   |
| Does not return to stop position. [Repeatedly operates for 10 seconds and then stops for 20 seconds. After that, it stops the operation. (Fail-safe)] |  | <ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Harness between IPDM E/R and front wiper motor</li> <li>• Front wiper motor</li> </ul> | Front wiper auto stop signal circuit<br>Refer to <a href="#">WW-27, "Component Function Check"</a> .  |

### WITHOUT RAIN SENSOR



# FRONT WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## WITHOUT RAIN SENSOR : Symptom Table

INFOID:000000005620297

| Symptom                      |                           | Probable malfunction location   | Inspection item   |  |
|------------------------------|---------------------------|---|---|--|
| Front wiper does not operate | HI only                   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>         | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .                                  |  |
|                              |                           | <ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Harness between IPDM E/R and front wiper motor</li> <li>• Front wiper motor</li> </ul> | Front wiper motor (HI) circuit<br>Refer to <a href="#">WW-25, "Component Function Check"</a> .            |  |
|                              |                           | Front wiper request signal<br><ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>   | IPDM E/R<br>Data monitor "FR WIP REQ"   |  |
|                              | LO and INT                | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>         | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .                                  |  |
|                              |                           | <ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Harness between IPDM E/R and front wiper motor</li> <li>• Front wiper motor</li> </ul> | Front wiper motor (LO) circuit<br>Refer to <a href="#">WW-23, "Component Function Check"</a> .            |  |
|                              |                           | Front wiper request signal<br><ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>   | IPDM E/R<br>Data monitor "FR WIP REQ"   |  |
|                              | INT only                  | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul>         | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .                                  |  |
|                              |                           | Front wiper request signal<br><ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>   | IPDM E/R<br>Data monitor "FR WIP REQ"   |  |
|                              | HI, LO and INT            | SYMPTOM DIAGNOSIS<br>Refer to <a href="#">WW-91, "Diagnosis Procedure"</a> .  |   |  |
|                              | Front wiper does not stop | HI only   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>                     | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> . |
|                              |                           |   | Front wiper request signal<br><ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul> | IPDM E/R<br>Data monitor "FR WIP REQ"                                    |
|                              |                           |   | IPDM E/R  | —  |
| LO only                      |                           | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>   | Combination switch<br>Refer to <a href="#">BCS-78, "Symptom Table"</a> .                                  |  |
|                              |                           | Front wiper request signal<br><ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>   | IPDM E/R<br>Data monitor "FR WIP REQ"   |  |
|                              |                           | IPDM E/R  | —   |  |
| INT only                     |                           | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• BCM</li> </ul>   | Combination switch<br>refer to <a href="#">BCS-78, "Symptom Table"</a> .                                  |  |
|                              |                           | Front wiper request signal<br><ul style="list-style-type: none"> <li>• BCM</li> <li>• IPDM E/R</li> </ul>   | IPDM E/R<br>Data monitor "FR WIP REQ"   |  |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER AND WASHER SYSTEM SYMPTOMS

## < SYMPTOM DIAGNOSIS >

| Symptom  |   | Probable malfunction location   | Inspection item  |
|--|---|---|--|
| Front wiper does not operate normally  | Intermittent adjustment cannot be performed   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul> | Combination switch<br>Refer to <a href="#">BCS-78. "Symptom Table"</a> . |
|  |   | BCM   | —  |
|  | Intermittent control linked with vehicle speed cannot be performed  | Check the wiper setting is linked with vehicle speed.<br>Refer to <a href="#">WW-15. "WIPER : CONSULT-III Function (BCM - WIPER)"</a> .     |  |
|  | Wiper is not linked to the washer operation   | <ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Harness between combination switch and BCM</li> <li>• BCM</li> </ul> | Combination switch<br>Refer to <a href="#">BCS-78. "Symptom Table"</a> . |
| BCM  |   | —   |  |
| Does not return to stop position [Repeatedly operates for 10 seconds and then stops for 20 seconds. After that, it stops the operation. (Fail-safe)] | <ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Harness between IPDM E/R and front wiper motor</li> <li>• Front wiper motor</li> </ul> | Front wiper auto stop signal circuit<br>Refer to <a href="#">WW-27. "Component Function Check"</a> .  |  |

# FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## FRONT WIPER DOES NOT OPERATE

### Description

INFOID:000000005620298

The front wiper does not operate under any operating conditions.

### Diagnosis Procedure

INFOID:000000005620299

#### 1. CHECK WIPER RELAY OPERATION

##### IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-10, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO/Hi operation.

##### CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check that front wiper LO/Hi operation and OFF.

**Lo** : Front wiper LO operation

**Hi** : Front wiper HI operation

**Off** : Stop the front wiper.

##### Does the front wiper operate?

YES >> GO TO 5.

NO >> GO TO 2.

#### 2. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the front wiper motor 30 A (#60) fuse is not fusing.

##### Is the fuse fusing?

YES >> Replace the fuse after repairing the applicable circuit.

NO >> GO TO 3.

#### 3. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Disconnect front wiper motor connector.
2. Check continuity between front wiper motor harness connector and ground.

| Front wiper motor |          | Ground | Continuity |
|-------------------|----------|--------|------------|
| Connector         | Terminal |        | Existed    |
| E42               | 2        |        | Existed    |

##### Does continuity exist?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

#### 4. CHECK FRONT WIPER MOTOR OUTPUT VOLTAGE

##### CONSULT-III ACTIVE TEST

1. Disconnect front wiper motor connector.
2. Turn the ignition switch ON.
3. Select "FRONT WIPER" of IPDM E/R active test item.
4. With operating the test item, check voltage between IPDM E/R harness connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

# FRONT WIPER DOES NOT OPERATE

## < SYMPTOM DIAGNOSIS >

| Terminals |          | Test item   | Voltage (Approx.) |     |                 |
|-----------|----------|-------------|-------------------|-----|-----------------|
| (+)       | (-)      |             |                   |     |                 |
| IPDM E/R  |          | FRONT WIPER |                   |     |                 |
| Connector | Terminal |             |                   |     |                 |
| E5        | 4        |             |                   | Lo  | Battery voltage |
|           | 5        |             |                   | Off | 0 V             |
| Ground    |          | Hi          | Battery voltage   |     |                 |
|           |          | Off         | 0 V               |     |                 |

**Is the measurement normal?**

- YES >> Replace front wiper motor.  
 NO >> Replace IPDM E/R.

## 5.CHECK FRONT WIPER REQUEST SIGNAL INPUT

### ⓐCONSULT-III DATA MONITOR

1. Select "FR WIP REQ" of IPDM E/R data monitor item.
2. Switch the front wiper switch to HI and LO.
3. With operating the front wiper switch, check the monitor status.

| Monitor item | Condition             |     | Monitor status |
|--------------|-----------------------|-----|----------------|
| FR WIPER REQ | Front wiper switch HI | ON  | Hi             |
|              |                       | OFF | Stop           |
|              | Front wiper switch LO | ON  | Low            |
|              |                       | OFF | Stop           |

**Is the status of item normal?**

- YES >> Replace IPDM E/R.  
 NO >> GO TO 6.

## 6.CHECK COMBINATION SWITCH

Perform the inspection of the combination switch. Refer to [BCS-78. "Symptom Table"](#).

**Is combination switch normal?**

- YES >> Replace BCM. Refer to [BCS-80. "Exploded View"](#).  
 NO >> Repair or replace the applicable parts.

# NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

---

## NORMAL OPERATING CONDITION

### Description

INFOID:000000005620300

#### FRONT WIPER MOTOR PROTECTION FUNCTION

- IPDM E/R may stop the front wiper to protect the front wiper motor if any obstruction (operation resistance) such as a large amount of snow is detected during the front wiper operation.
- At that time turn OFF the front wiper and remove the foreign object. Then wait for approximately 20 seconds or more and reactivate the front wiper. The wiper will operate normally.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005620301

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

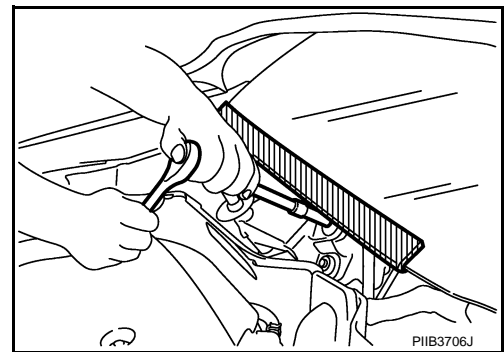
#### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000005620302

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.



# WASHER TANK

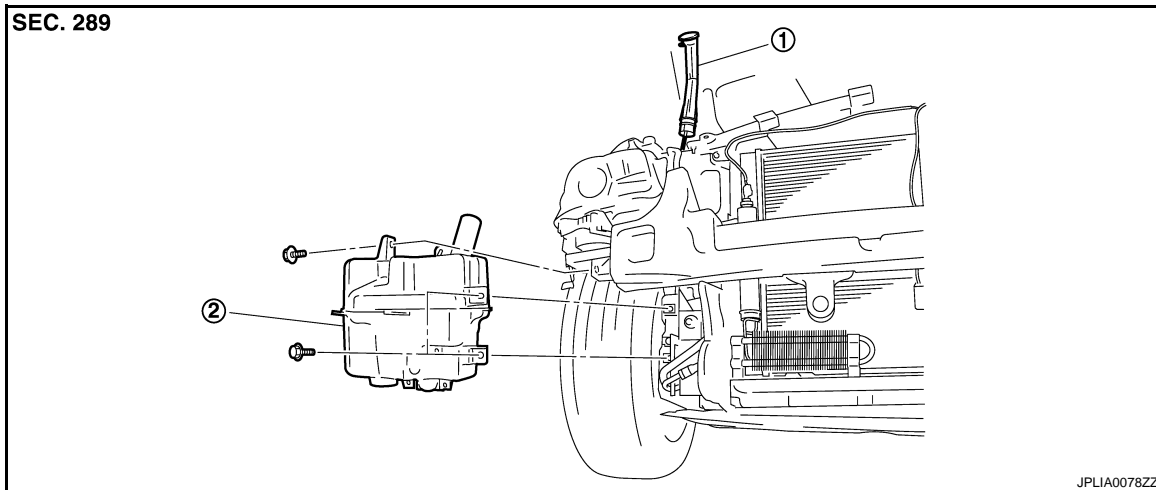
< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### WASHER TANK

Exploded View

INFOID:000000005620303



1. Washer tank inlet

2. Washer tank

### Removal and Installation

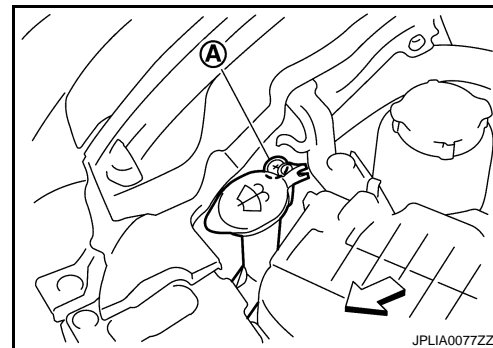
INFOID:000000005620304

#### REMOVAL

1. Remove the clip (A).

← : Vehicle front

2. Pull out the washer tank inlet from the washer tank.
3. Remove the front bumper fascia. Refer to [EXT-15, "Removal and Installation"](#).
4. Disconnect the washer pump connector.
5. Disconnect the washer level switch connector.
6. Disconnect the washer tube.
7. Remove the washer tank mounting bolts.
8. Remove the washer tank from the vehicle.



#### INSTALLATION

Install in the reverse order of removal.

#### **CAUTION:**

**Add water up to the top of the washer tank inlet after installing. Check that there is no leakage.**

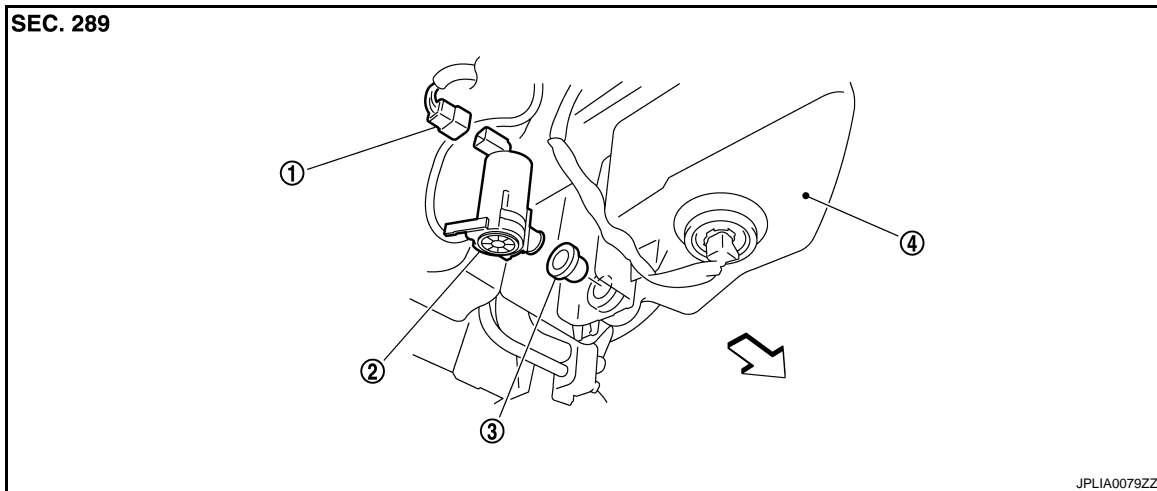
# FRONT WASHER PUMP

< REMOVAL AND INSTALLATION >

## FRONT WASHER PUMP

Exploded View

INFOID:000000005620305



1. Washer pump connector                      2. Washer pump                      3. Packing

4. Washer tank

↩ : Vehicle front

## Removal and Installation

INFOID:000000005620306

### REMOVAL

1. Remove the fender protector RH (front). Refer to [EXT-27, "FENDER PROTECTOR : Removal and Installation"](#).
2. Disconnect the washer pump connector.
3. Disconnect the washer tube.
4. Remove the washer pump from the washer tank.
5. Remove the packing from the washer tank.

### INSTALLATION

Install in the reverse order of removal.

#### **CAUTION:**

**Never twist the packing when installing the washer pump.**



# WASHER LEVEL SWITCH

< REMOVAL AND INSTALLATION >

## WASHER LEVEL SWITCH

---

### Removal and Installation

INFOID:000000005620307

The washer level switch must be replaced together with the washer tank as an assembly. Refer to [WW-95](#), "[Removal and Installation](#)".

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

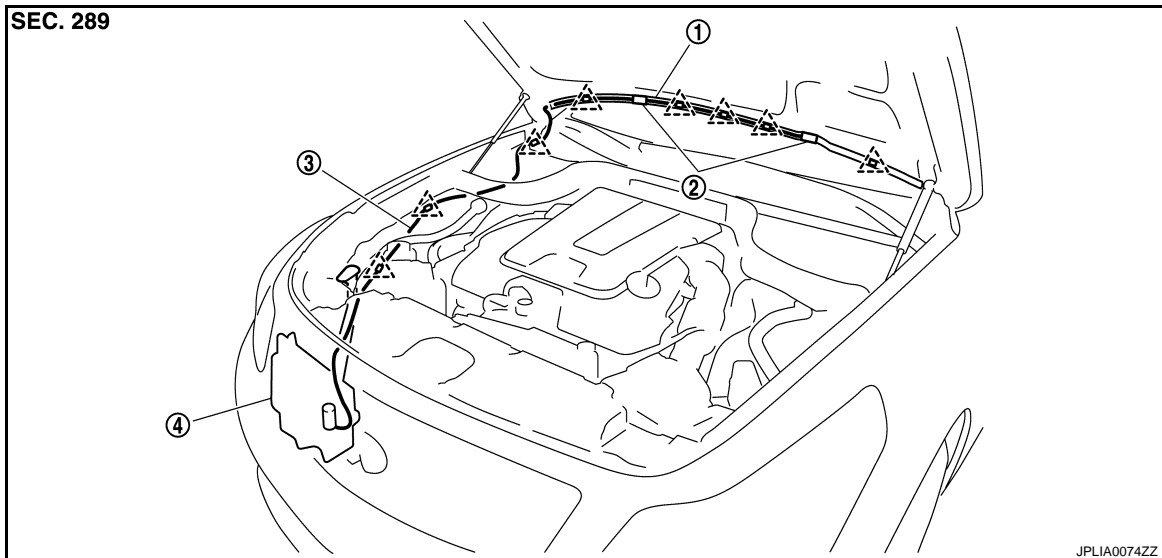
# FRONT WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >

## FRONT WASHER NOZZLE AND TUBE

Hydraulic Layout

INFOID:000000005620308



- 1. Seal rubber
  - 2. Washer nozzle
  - 3. Washer tube
  - 4. Washer tank
- △ : Clip

### Removal and Installation

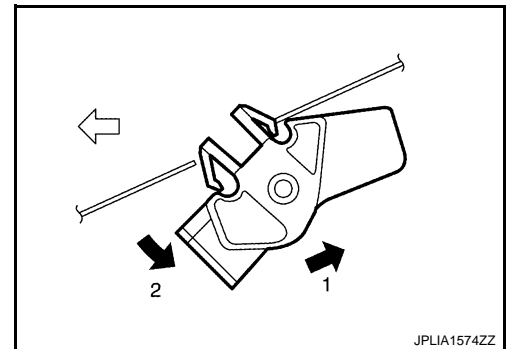
INFOID:00000000567637

#### REMOVAL

1. Open the hood.
2. Remove the front washer nozzle in numerical order shown in the figure.

← : Vehicle front

3. Disconnect the front washer tube from the front washer nozzle.



#### INSTALLATION

1. Connect the front washer tube into the front washer nozzle.
2. Install the front washer nozzle to the hood.
3. Adjust the front washer nozzle spray position. Refer to [WW-98, "Inspection and Adjustment"](#).

#### **CAUTION:**

**The spray positions differ. Check that left and right nozzles are installed correctly.**

### Inspection and Adjustment

INFOID:00000000567638

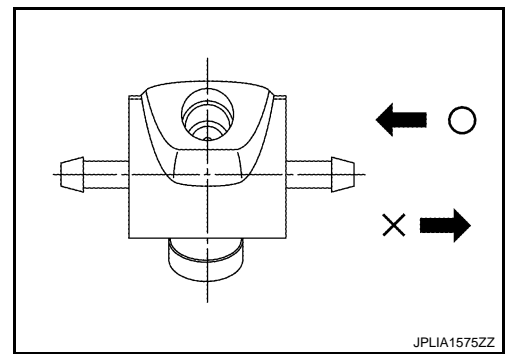
#### INSPECTION

Washer Nozzle Inspection

# FRONT WASHER NOZZLE AND TUBE

## < REMOVAL AND INSTALLATION >

Check that air can pass through the hose by blowing forward (toward the nozzle), and check that air cannot pass through by sucking.




## ADJUSTMENT

Washer Nozzle Spray Position Adjustment

Adjust spray positions to match the positions shown in the figure below.

### NOTE:

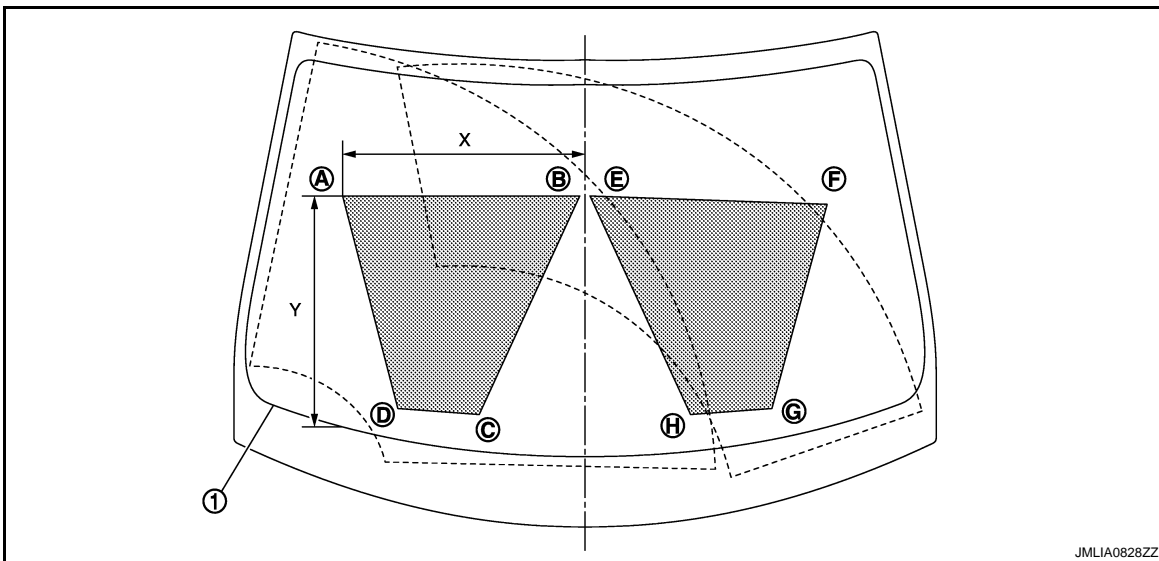This figure is for LHD models and is symmetric with RHD models.




1. Black printed frame line

 : Spray area

Unit: mm (in)

|   | Passenger side |             |            |             | Driver side |             |             |            |
|---|----------------|-------------|------------|-------------|-------------|-------------|-------------|------------|
|   | A              | B           | C          | D           | E           | F           | G           | H          |
| X | 478 (18.82)    | 15 (0.59)   | 208 (8.19) | 368 (14.49) | 13 (0.51)   | 474 (18.66) | 367 (14.45) | 208 (8.19) |
| Y | 452 (17.80)    | 500 (19.69) | 66 (2.60)  | 60 (2.36)   | 501 (19.72) | 441 (17.36) | 59 (2.32)   | 66 (2.60)  |

Check that washer fluid is splayed on 80% or more the splay area () when spraying washer fluid. If the spray area deviates from the specification, adjust the washer nozzle.

### CAUTION:

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

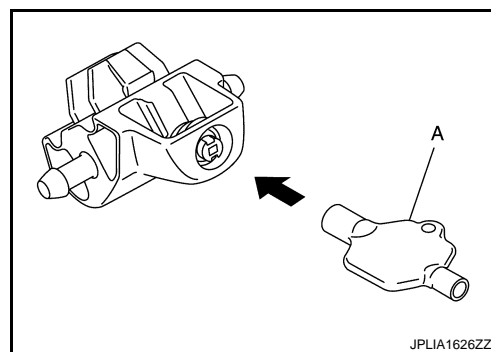
## FRONT WASHER NOZZLE AND TUBE

### < REMOVAL AND INSTALLATION >

- Use washer nozzle adjuster\* (A) for nozzle adjustment.
- Never use needle or small pin.
- \*: Washer nozzle adjuster is included with shipment of nozzle.

#### NOTE:

If wax or dust gets into the nozzle, remove wax or dust with a needle or small pin.



JPLIA1626ZZ


# FRONT WIPER ARM
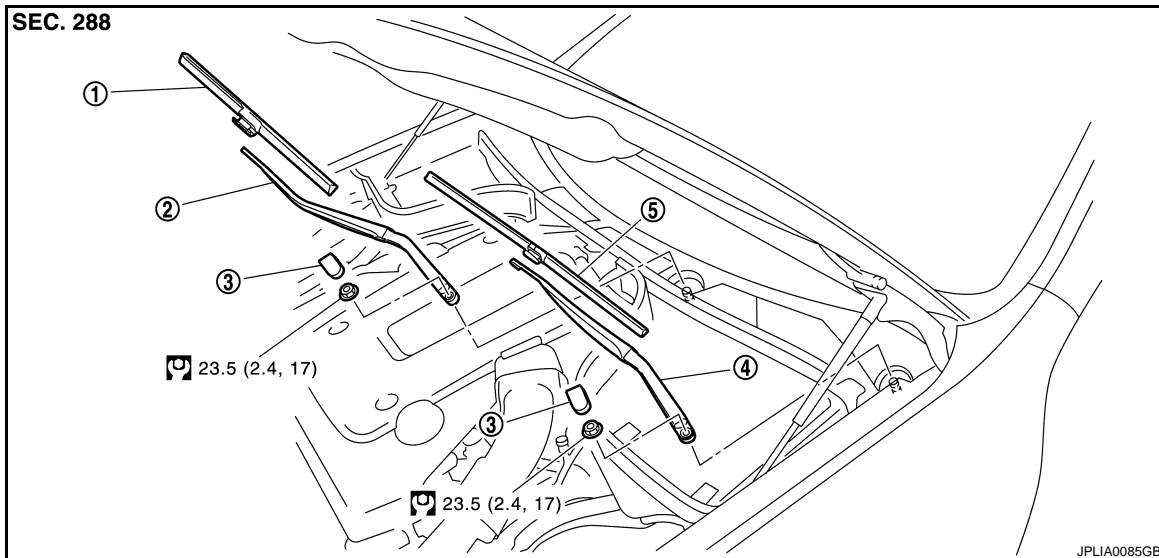
< REMOVAL AND INSTALLATION >

## FRONT WIPER ARM

Exploded View

INFOID:000000005620311



- 1. Wiper blade (RH)
- 2. Wiper arm (RH)
- 3. Wiper arm cap
- 4. Wiper arm (LH)
- 5. Wiper blade (LH)

Refer to [GI-4, "Components"](#) for symbols in the figure.

## Removal and Installation

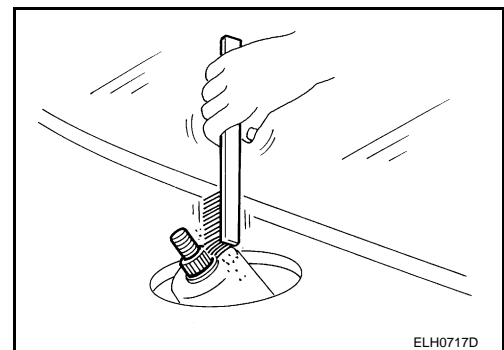
INFOID:000000005620312

### REMOVAL

1. Operate the front wiper to move it to the auto stop position.
2. Open the hood.
3. Remove the wiper arm cap.
4. Remove the wiper arm mounting nut.
5. Raise wiper arm, and remove the wiper arm from the vehicle.

### INSTALLATION

1. Clean wiper arm mount as shown in the figure to prevent nuts from being loosened.
2. Operate the front wiper motor to move the wiper to the auto stop position.
3. Adjust the wiper blade position. Refer to [WW-101, "Adjustment"](#).
4. Install the wiper arm by tightening the mounting nut.
5. Inject the washer fluid.
6. Operate the front wiper to move it to the auto stop position.
7. Check that the wiper blades stop at the specified position.
8. Install the wiper arm cap.



## Adjustment

INFOID:000000005620313

### WIPER BLADE POSITION ADJUSTMENT

Clearance between the end of cowl top cover and the top of wiper blade center

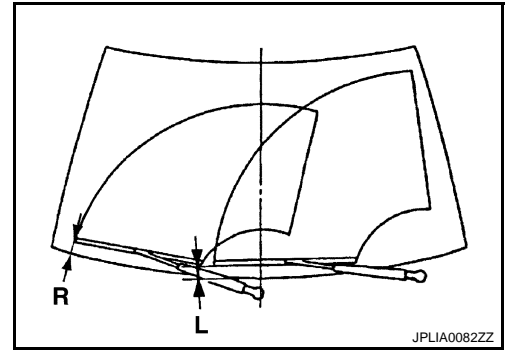
# FRONT WIPER ARM

## < REMOVAL AND INSTALLATION >

Standard clearance

**R** :  $35.0 \pm 7.5$  mm ( $1.38 \pm 0.295$  in)

**L** :  $72.0 \pm 7.5$  mm ( $2.84 \pm 0.295$  in)




# WIPER BLADE

< REMOVAL AND INSTALLATION >

## WIPER BLADE

Exploded View

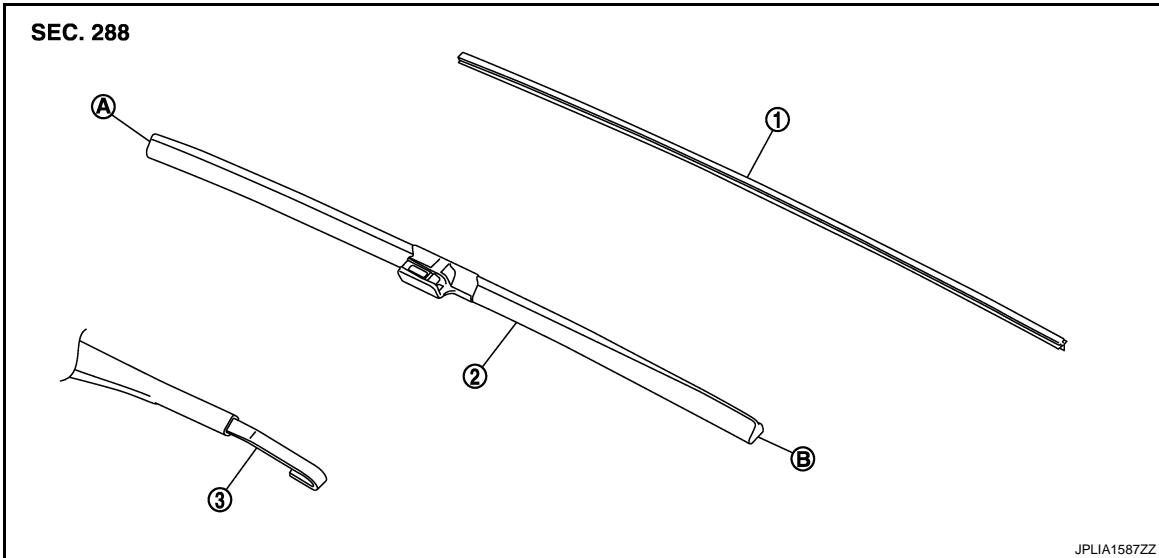INFOID:000000005620314



- |                    |                    |              |
|--------------------|--------------------|--------------|
| 1. Wiper refill    | 2. Wiper blade     | 3. Wiper arm |
| A. Wiper blade end | B. Wiper blade tip |              |

## Removal and Installation

INFOID:000000005620315

### REMOVAL

Remove the wiper blade from the wiper arm.

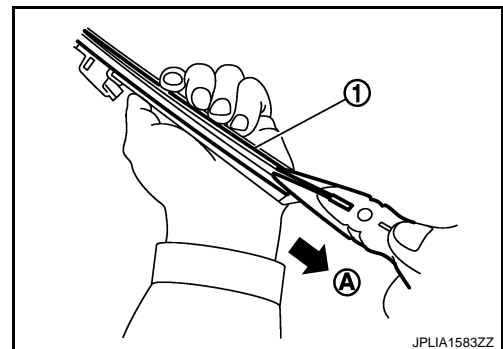
### INSTALLATION

Install the front wiper blade to the wiper arm.

## Replacement

INFOID:000000005620316

1. Hold the rip of old wiper refill (1) at the rear end of the wiper blade with long-nose pliers, and pull out the wiper refill to the direction (A).




2. Insert the tip of new wiper refill (1) into the rear end of wiper blade. Slide the wiper refill to the direction (A) while pressing the wiper refill onto the wiper blade rear end.

### NOTE:

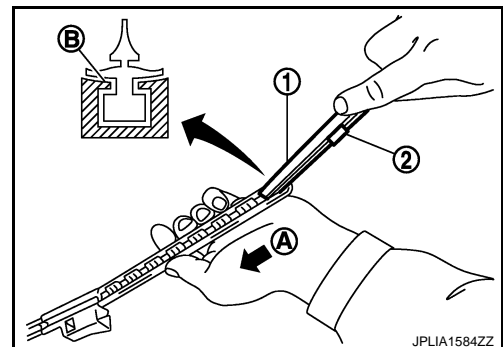- Insert the wiper refill to be held securely by tab (B) of wiper blade.
- After the wiper refill is fully inserted, remove the holder\* (2).

\*: Attached to service parts.



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

WW

## WIPER BLADE

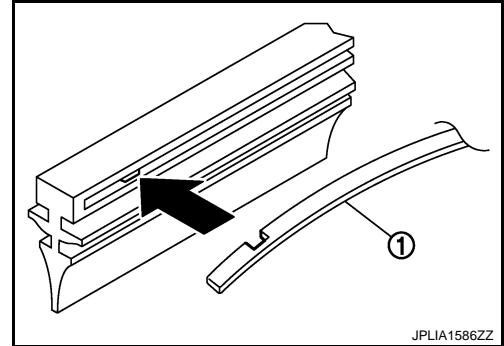
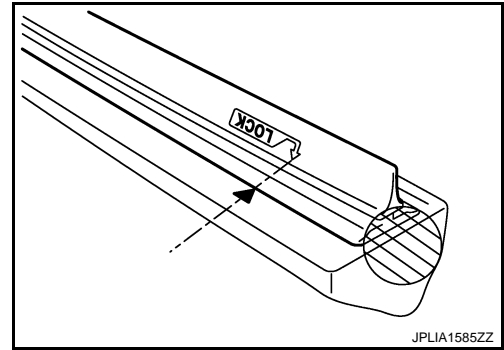
### < REMOVAL AND INSTALLATION >

3. Inert the wiper refill until the stopper at the rear end of wiper refill fits in the tab. Check that "LOCK" mark on wiper refill is aligned with "▼" mark on wiper blade.
4. Untwist the twisted wiper refill (▨) at the rear end of wiper blade, if any.
5. Check the following items after replacing wiper refill.
  - Wiper refill is not twisted at all.
  - Wiper refill thoroughly fits in the tab on wiper blade.
  - Wiper refill is inserted from the proper direction.

#### NOTE:

When the vertebra is detached.

- Insert the vertebra (1) into the wiper blade to the same bending direction.
- If a vertebra has a notch, fit it to a protrusion inside the wiper refill.





# FRONT WIPER DRIVE ASSEMBLY

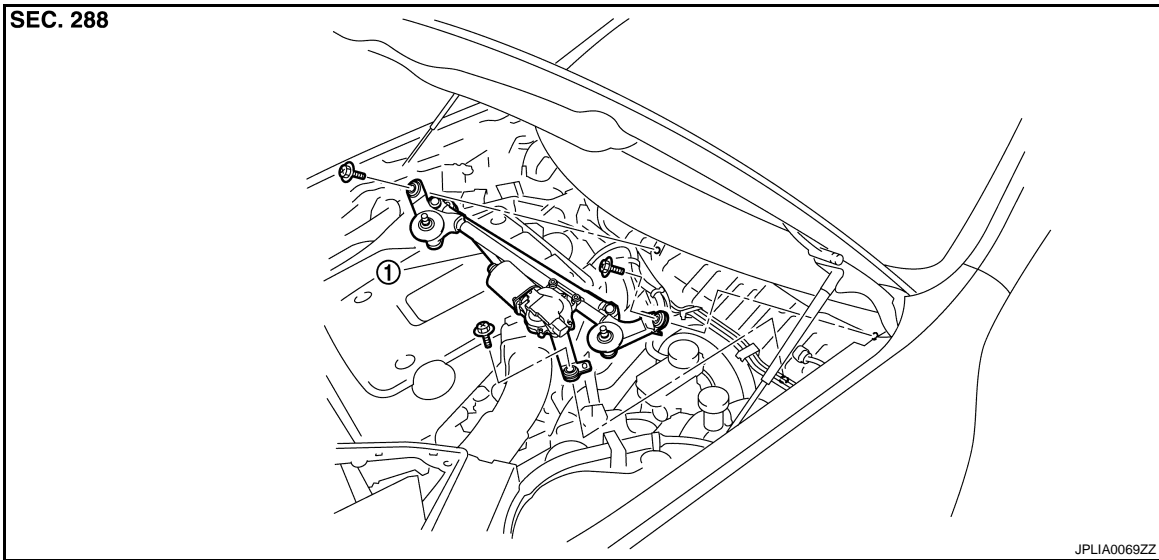
< REMOVAL AND INSTALLATION >

## FRONT WIPER DRIVE ASSEMBLY

Exploded View


INFOID:000000005620317

REMOVAL VIEW




1. Front wiper drive assembly

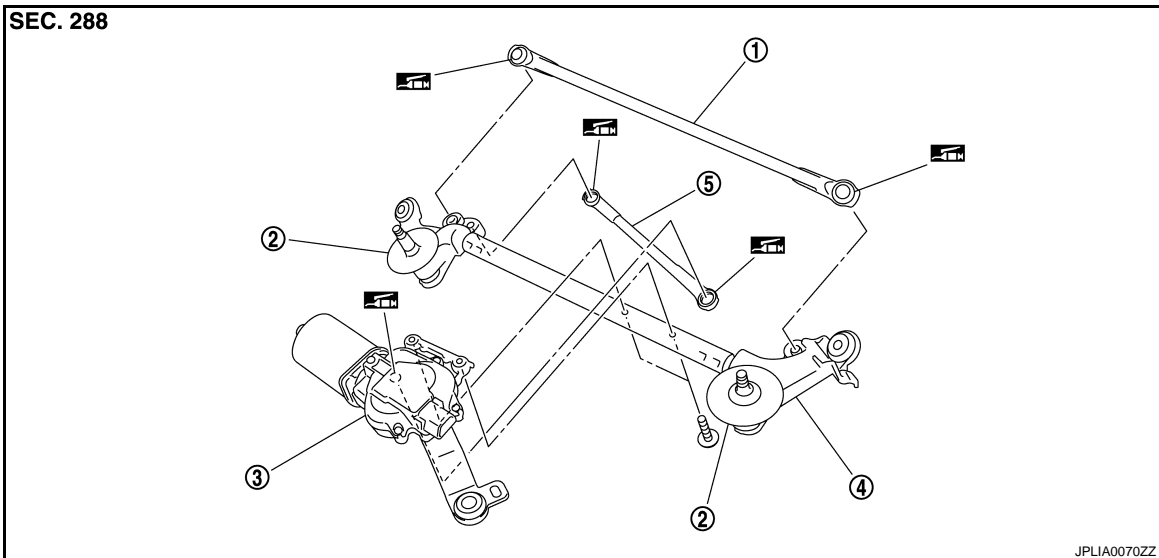DISASSEMBLY VIEW



1. Wiper linkage 1
2. Shaft seal
3. Front wiper motor
4. Wiper frame
5. Wiper linkage 2

: Multi-purpose grease or an equivalent.

Removal and Installation

INFOID:000000005620318

REMOVAL

1. Remove the wiper arm. Refer to [WW-101, "Removal and Installation"](#).
2. Remove the cowl top cover. Refer to [EXT-24, "Removal and Installation"](#).
3. Remove bolts from the front wiper drive assembly.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
WW  
M  
N  
O  
P

# FRONT WIPER DRIVE ASSEMBLY

## < REMOVAL AND INSTALLATION >

---

4. Disconnect the front wiper motor connector.
5. Remove the front wiper drive assembly from the vehicle.

## INSTALLATION

1. Install the front wiper drive assembly to the vehicle.
2. Connect the front wiper motor connector.
3. Operate the front wiper to move it to the auto stop position.
4. Install the cowl top cover. Refer to [EXT-24, "Removal and Installation"](#).
5. Install the wiper arms. Refer to [WW-101, "Removal and Installation"](#).

## Disassembly and Assembly

INFOID:000000005620319

## DISASSEMBLY

1. Remove the wiper linkage 1 and 2 from the front wiper drive assembly.  
**CAUTION:**  
**Never bend the linkage or damage the plastic part of the ball joint when removing the wiper linkage.**
2. Remove the front wiper motor mounting screws, and then remove the front wiper motor from the wiper frame.

## ASSEMBLY

1. Connect the front wiper motor connector.
2. Operate the front wiper to move it to the auto stop position.
3. Disconnect the front wiper motor connector.
4. Install front wiper motor to wiper frame.
5. Install the wiper linkage 2 to the wiper motor and the wiper frame.
6. Install the wiper linkage 1 to the wiper frame.  
**CAUTION:**
  - **Never drop front wiper motor or cause it to come into contact with other parts.**
  - **Be careful for the grease condition at the wiper motor and wiper linkage joint (retainer). Apply Multi-purpose grease or an equivalent if necessary.**

# FRONT WIPER AND WASHER SWITCH

< REMOVAL AND INSTALLATION >

---

## FRONT WIPER AND WASHER SWITCH

Exploded View

INFOID:000000005620320

Refer to [BCS-81, "Exploded View"](#).

A

B

C

D

E

F

G

H

I

J

K

**WW**

M

N

O

P