

A
B
C
D
E

SECTION **BRC**

BRAKE CONTROL SYSTEM

CONTENTS

| | | |
|---|--|------------|
| | | BRC |
| VDC/TCS/ABS | | |
| BASIC INSPECTION | Component Parts Location | 20 |
| DIAGNOSIS AND REPAIR WORK FLOW | Component Description | 22 |
| Work Flow | EBD | 23 |
| Diagnostic Work Sheet | System Diagram | 23 |
| INSPECTION AND ADJUSTMENT | System Description | 23 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT | Component Parts Location | 24 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description | Component Description | 26 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement | DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)] | 27 |
| ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION | CONSULT Function | 27 |
| ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description | DTC/CIRCUIT DIAGNOSIS | 32 |
| ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement | C1101, C1102, C1103, C1104 WHEEL SENSOR | 32 |
| SYSTEM DESCRIPTION | Description | 32 |
| VDC | DTC Logic | 32 |
| System Diagram | Diagnosis Procedure | 32 |
| System Description | Special Repair Requirement | 34 |
| Component Parts Location | C1105, C1106, C1107, C1108 WHEEL SENSOR | 35 |
| Component Description | Description | 35 |
| TCS | DTC Logic | 35 |
| System Diagram | Diagnosis Procedure | 35 |
| System Description | Special Repair Requirement | 39 |
| Component Parts Location | C1109 POWER AND GROUND SYSTEM | 40 |
| Component Description | Description | 40 |
| ABS | DTC Logic | 40 |
| System Diagram | Diagnosis Procedure | 40 |
| System Description | Special Repair Requirement | 41 |
| | C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) | 42 |
| | DTC Logic | 42 |
| | Diagnosis Procedure | 42 |
| | Special Repair Requirement | 42 |

| | | | |
|---|-----------|--|-----------|
| C1111 ABS MOTOR, MOTOR RELAY SYSTEM | 43 | C1145, C1146 YAW RATE/SIDE G SENSOR... | 68 |
| Description | 43 | Description | 68 |
| DTC Logic | 43 | DTC Logic | 68 |
| Diagnosis Procedure | 43 | Diagnosis Procedure | 68 |
| Special Repair Requirement | 44 | Special Repair Requirement | 70 |
| C1115 WHEEL SENSOR | 45 | C1147, C1148, C1149, C1150 USV/HSV LINE.. | 71 |
| Description | 45 | Description | 71 |
| DTC Logic | 45 | DTC Logic | 71 |
| Diagnosis Procedure | 45 | Diagnosis Procedure | 71 |
| Special Repair Requirement | 49 | Special Repair Requirement | 72 |
| C1116 STOP LAMP SWITCH | 50 | C1155 BRAKE FLUID LEVEL SWITCH | 73 |
| Description | 50 | Description | 73 |
| DTC Logic | 50 | DTC Logic | 73 |
| Diagnosis Procedure | 50 | Diagnosis Procedure | 73 |
| Component Inspection | 53 | Component Inspection | 75 |
| Special Repair Requirement | 54 | Special Repair Requirement | 75 |
| C1120, C1122, C1124, C1126 IN ABS SOL | 55 | C1185 ICC UNIT | 76 |
| Description | 55 | Description | 76 |
| DTC Logic | 55 | DTC Logic | 76 |
| Diagnosis Procedure | 55 | Diagnosis Procedure | 76 |
| Special Repair Requirement | 56 | Special Repair Requirement | 76 |
| C1121, C1123, C1125, C1127 OUT ABS SOL.. | 57 | U1000 CAN COMM CIRCUIT | 78 |
| Description | 57 | Description | 78 |
| DTC Logic | 57 | DTC Logic | 78 |
| Diagnosis Procedure | 57 | Diagnosis Procedure | 78 |
| Special Repair Requirement | 58 | Special Repair Requirement | 78 |
| C1130, C1131, C1132 ENGINE SIGNAL | 59 | U1002 SYSTEM COMM (CAN) | 79 |
| Description | 59 | Description | 79 |
| DTC Logic | 59 | DTC Logic | 79 |
| Diagnosis Procedure | 59 | Diagnosis Procedure | 79 |
| Special Repair Requirement | 59 | Special Repair Requirement | 80 |
| C1140 ACTUATOR RELAY SYSTEM | 61 | POWER SUPPLY AND GROUND CIRCUIT | 81 |
| Description | 61 | Description | 81 |
| DTC Logic | 61 | Diagnosis Procedure | 81 |
| Diagnosis Procedure | 61 | PARKING BRAKE SWITCH | 83 |
| Special Repair Requirement | 62 | Description | 83 |
| C1142 PRESS SENSOR | 63 | Diagnosis Procedure | 83 |
| Description | 63 | Component Inspection | 84 |
| DTC Logic | 63 | VDC OFF SWITCH | 85 |
| Diagnosis Procedure | 63 | Description | 85 |
| Special Repair Requirement | 64 | Diagnosis Procedure | 85 |
| C1143 STEERING ANGLE SENSOR | 65 | Component Inspection | 86 |
| Description | 65 | Special Repair Requirement | 86 |
| DTC Logic | 65 | ABS WARNING LAMP | 87 |
| Diagnosis Procedure | 65 | Description | 87 |
| Special Repair Requirement | 66 | Component Function Check | 87 |
| C1144 INCOMPLETE STEERING ANGLE | | Diagnosis Procedure | 87 |
| SENSOR ADJUSTMENT | 67 | Special Repair Requirement | 87 |
| DTC Logic | 67 | BRAKE WARNING LAMP | 88 |
| Diagnosis Procedure | 67 | Description | 88 |
| Special Repair Requirement | 67 | Component Function Check | 88 |

| | | | | |
|--|------------|--|------------|------------|
| Diagnosis Procedure | 88 | PREPARATION | 109 | A |
| Special Repair Requirement | 88 | PREPARATION | 109 | B |
| VDC WARNING LAMP | 89 | Special Service Tool | 109 | |
| Description | 89 | REMOVAL AND INSTALLATION | 110 | |
| Component Function Check | 89 | WHEEL SENSOR | 110 | C |
| Diagnosis Procedure | 89 | FRONT WHEEL SENSOR | 110 | |
| Special Repair Requirement | 89 | FRONT WHEEL SENSOR : Exploded View | 110 | |
| VDC OFF INDICATOR LAMP | 90 | FRONT WHEEL SENSOR : Removal and Installation | 110 | D |
| Description | 90 | REAR WHEEL SENSOR | 111 | E |
| Component Function Check | 90 | REAR WHEEL SENSOR : Exploded View | 111 | |
| Diagnosis Procedure | 90 | REAR WHEEL SENSOR : Removal and Installation | 111 | |
| Special Repair Requirement | 91 | SENSOR ROTOR | 112 | BRC |
| ECU DIAGNOSIS INFORMATION | 92 | FRONT SENSOR ROTOR | 112 | |
| ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) | 92 | FRONT SENSOR ROTOR : Exploded View | 112 | G |
| Reference Value | 92 | FRONT SENSOR ROTOR : Removal and Installation | 112 | |
| Wiring Diagram - BRAKE CONTROL SYSTEM | 96 | REAR SENSOR ROTOR | 112 | H |
| Fail-Safe | 97 | REAR SENSOR ROTOR : Exploded View | 112 | |
| DTC Inspection Priority Chart | 98 | REAR SENSOR ROTOR : Removal and Installation | 112 | I |
| DTC Index | 99 | ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) | 114 | J |
| SYMPTOM DIAGNOSIS | 100 | Exploded View | 114 | |
| EXCESSIVE ABS FUNCTION OPERATION FREQUENCY | 100 | Removal and Installation | 114 | K |
| Diagnosis Procedure | 100 | YAW RATE/SIDE G SENSOR | 116 | |
| UNEXPECTED PEDAL REACTION | 101 | Exploded View | 116 | L |
| Diagnosis Procedure | 101 | Removal and Installation | 116 | |
| THE BRAKING DISTANCE IS LONG | 102 | STEERING ANGLE SENSOR | 117 | M |
| Diagnosis Procedure | 102 | Exploded View | 117 | |
| ABS FUNCTION DOES NOT OPERATE | 103 | Removal and Installation | 117 | N |
| Diagnosis Procedure | 103 | VDC OFF SWITCH | 118 | |
| PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS | 104 | Removal and Installation | 118 | O |
| Diagnosis Procedure | 104 | BRAKE ASSIST (WITH PREVIEW FUNCTION) | | P |
| VEHICLE JERKS DURING VDC/TCS/ABS CONTROL | 105 | SYSTEM DESCRIPTION | 119 | |
| Diagnosis Procedure | 105 | PREVIEW FUNCTION | 119 | |
| NORMAL OPERATING CONDITION | 106 | System Description | 119 | |
| Description | 106 | Component Parts Location | 120 | |
| PRECAUTION | 107 | Component Description | 120 | |
| PRECAUTIONS | 107 | DTC/CIRCUIT DIAGNOSIS | 122 | |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 107 | PREVIEW FUNCTION | 122 | |
| Precaution for Procedure without Cowl Top Cover | 107 | Diagnosis Procedure | 122 | |
| Precaution for Brake System | 107 | SYMPTOM DIAGNOSIS | 123 | |
| Precaution for Brake Control | 108 | | | |
| Precautions for Harness Repair | 108 | | | |

| | | | |
|---|-----|--|-----|
| NORMAL OPERATING CONDITION | 123 | PRECAUTIONS | 124 |
| Description | 123 | Precautions for Preview Function Service | 124 |
| PRECAUTION | 124 | | |

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000008294442

PRECAUTIONS FOR DIAGNOSIS

If steering angle sensor, steering system parts, suspension system parts, ABS actuator and electric unit (control unit) or tires have been replaced, or if wheel alignment has been adjusted, be sure to adjust neutral position of steering angle sensor before driving. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L
- M
- N
- O
- P


BRC

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

OVERALL SEQUENCE

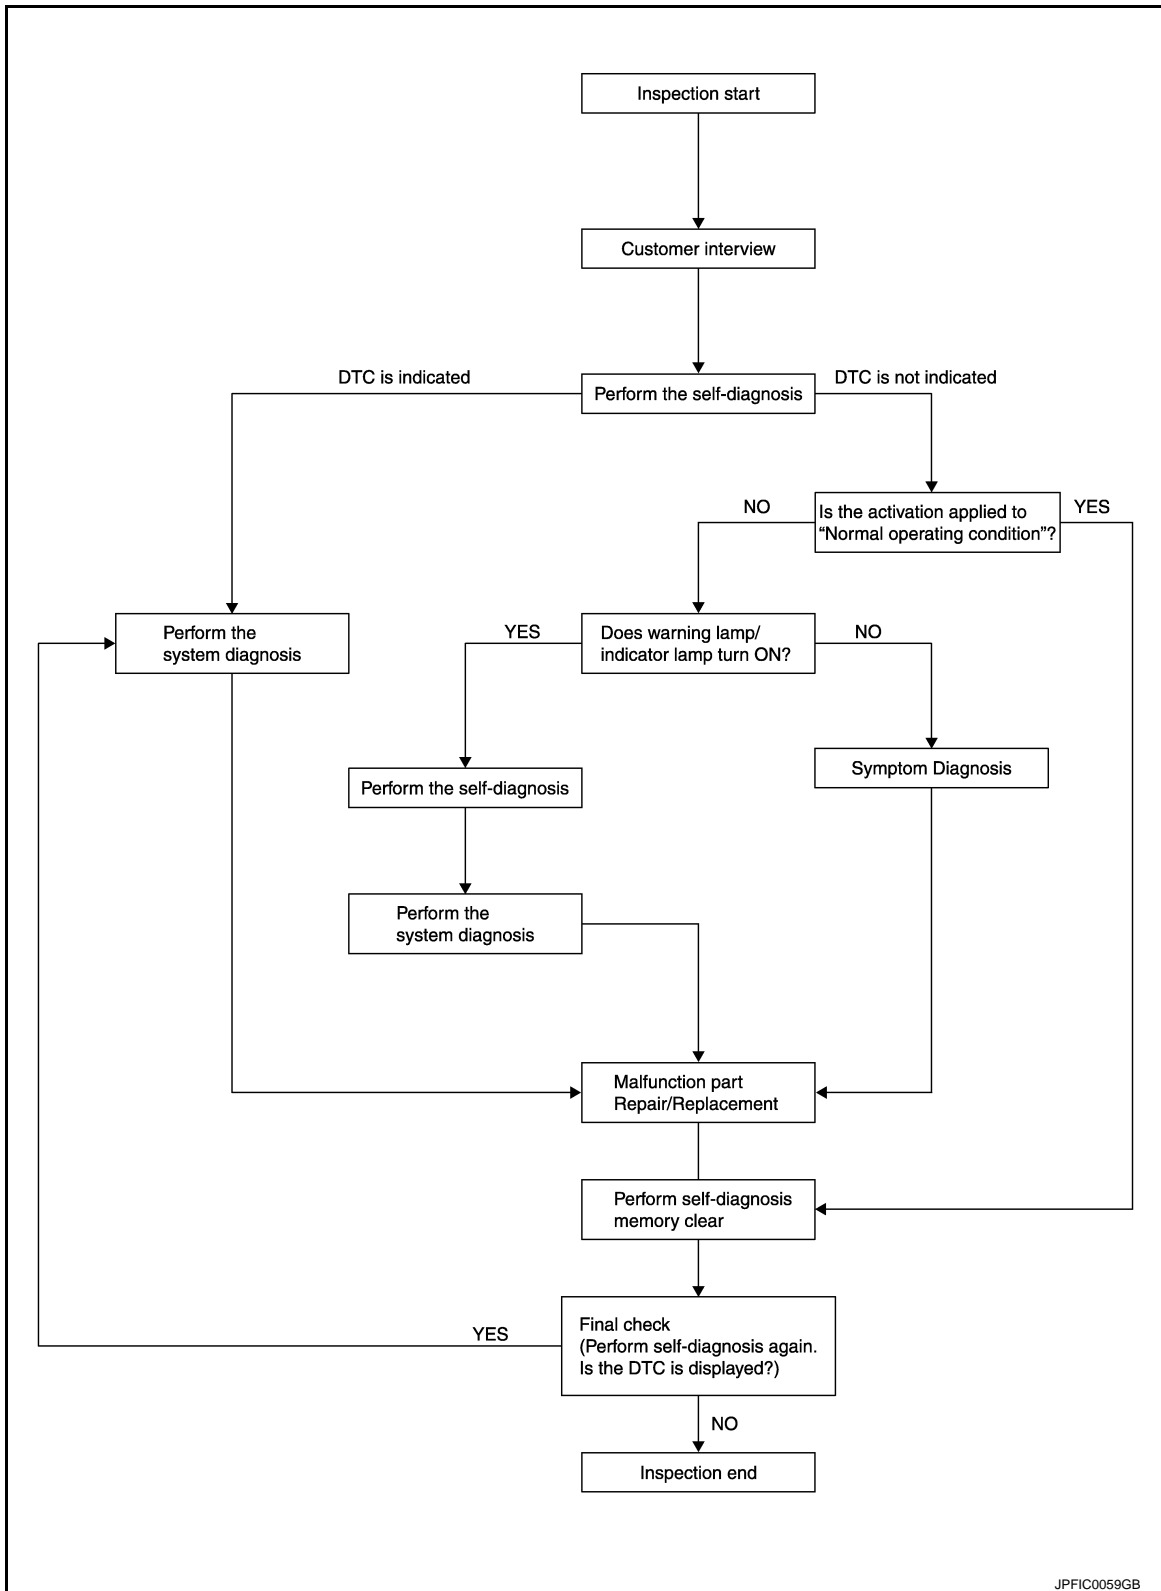

DETAILED FLOW

1. COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the diagnosis work sheet. Refer to [BRC-8, "Diagnostic Work Sheet"](#).

>> GO TO 2.

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

2. PERFORM THE SELF-DIAGNOSIS

Perform self-diagnosis with CONSULT.

Is there any DTC displayed?

- YES >> Record or print self-diagnosis results and freeze frame data (FFD). GO TO 3.
NO >> GO TO 4.

3. PERFORM THE SYSTEM DIAGNOSIS

Perform the diagnosis applicable to the displayed DTC of "ABS" with CONSULT. Refer to [BRC-99, "DTC Index"](#).

>> GO TO 7.

4. CHECK THE SYMPTOM THAT IS NOT CONSIDERED A SYSTEM MALFUNCTION

Check that the symptom is a normal operation that is not considered a system malfunction. Refer to [BRC-106, "Description"](#).

Is the symptom a normal operation?

- YES >> INSPECTION END
NO >> GO TO 5.

5. CHECK THE WARNING LAMP AND INDICATOR LAMP FOR ILLUMINATION

Check that the warning lamp and indicator lamp illuminate.

- ABS warning lamp: Refer to [BRC-87, "Description"](#).
- Brake warning lamp: Refer to [BRC-88, "Description"](#).
- VDC warning lamp: Refer to [BRC-89, "Description"](#).
- VDC OFF indicator lamp: Refer to [BRC-90, "Description"](#).

Is ON/OFF timing normal?

- YES >> GO TO 6.
NO >> GO TO 2.

6. PERFORM THE DIAGNOSIS BY SYMPTOM

Perform self-diagnosis for "ABS" with CONSULT.

>> GO TO 7.

7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 8.

8. MEMORY CLEAR

Perform self-diagnosis memory clear for "ABS" with CONSULT.

>> GO TO 9.

9. FINAL CHECK

Perform the self-diagnosis again, and check that the malfunction is repaired completely.

Is no other DTC present and the repair completed?

- YES >> INSPECTION END
NO >> GO TO 3.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

Diagnostic Work Sheet

INFOID:000000008294443

| | | | |
|---------------------------|---|---|--|
| Customer name MR/MS | Model & Year | VIN | |
| Engine # | Trans. | Mileage | |
| Incident Date | Manuf. Date | In Service Date | |
| Symptoms | <input type="checkbox"/> Noise and vibration (from engine compartment) <input type="checkbox"/> Noise and vibration (from axle) | <input type="checkbox"/> Warning / Indicator activate | <input type="checkbox"/> Firm pedal operation <input type="checkbox"/> Large stroke pedal operation |
| | <input type="checkbox"/> TCS does not work (Rear wheels slip when accelerating) | <input type="checkbox"/> ABS does not work (Wheels lock when braking) | <input type="checkbox"/> Lack of sense of acceleration |
| Engine conditions | <input type="checkbox"/> When starting <input type="checkbox"/> After starting | | |
| Road conditions | <input type="checkbox"/> Low friction road (<input type="checkbox"/> Snow <input type="checkbox"/> Gravel <input type="checkbox"/> Other) <input type="checkbox"/> Bumps / potholes | | |
| Driving conditions | <input type="checkbox"/> Full-acceleration <input type="checkbox"/> High speed cornering <input type="checkbox"/> Vehicle speed: Greater than 10 km/h (6 MPH) <input type="checkbox"/> Vehicle speed: 10 km/h (6 MPH) or less <input type="checkbox"/> Vehicle is stopped | | |
| Applying brake conditions | <input type="checkbox"/> Suddenly <input type="checkbox"/> Gradually | | |
| Other conditions | <input type="checkbox"/> Operation of electrical equipment <input type="checkbox"/> Shift change <input type="checkbox"/> Other descriptions | | |

SFIA3265E

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[VDC/TCS/ABS]

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000008294444

After replacing the ABS actuator and electric unit (control unit), perform the neutral position adjustment for the steering angle sensor.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000008294445

1. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

Perform the neutral position adjustment for the steering angle sensor.

>> Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description

INFOID:000000008294446

When doing work that applies to the list below, make sure to adjust neutral position of steering angle sensor before running vehicle.

×: Required –: Not required

| Situation | Adjustment of steering angle sensor neutral position |
|---|--|
| Removing/Installing ABS actuator and electric unit (control unit) | — |
| Replacing ABS actuator and electric unit (control unit) | × |
| Removing/Installing steering angle sensor | × |
| Replacing steering angle sensor | × |
| Removing/Installing steering components | × |
| Replacing steering components | × |
| Removing/Installing suspension components | × |
| Replacing suspension components | × |
| Removing/Installing tire | — |
| Change tires to new ones | — |
| Tire rotation | — |
| Adjusting wheel alignment | × |

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement

INFOID:000000008294447

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

CAUTION:

To adjust neutral position of steering angle sensor, make sure to use CONSULT. (Adjustment cannot be done without CONSULT.)

1. ALIGN THE VEHICLE STATUS

Stop the vehicle with front wheels in straight-ahead position.

>> GO TO 2.

2. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

1. Select "ABS", "WORK SUPPORT" and "ST ANGLE SENSOR ADJUSTMENT" in order with CONSULT.

< BASIC INSPECTION >

2. Select "START".

CAUTION:

Do not touch steering wheel while adjusting steering angle sensor.

3. After approximately 10 seconds, select "END".

NOTE:

After approximately 60 seconds, it ends automatically.

4. Turn the ignition switch OFF, then turn it ON again.

CAUTION:

Be sure to perform above operation.

>> GO TO 3.

3. CHECK DATA MONITOR

1. Run the vehicle with front wheels in straight-ahead position, then stop.

2. Select "ABS", "DATA MONITOR" and "STR ANGLE SIG" in order with CONSULT, and check the steering angle sensor signal.

STR ANGLE SIG : 0±2.5°

Is the steering angle within the specified range?

YES >> GO TO 4.

NO >> Perform the neutral position adjustment for the steering angle sensor again, GO TO 1.

4. ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memories for "ABS", "ENGINE" and "ICC/ADAS" with CONSULT.

- "ABS": Refer to [BRC-27. "CONSULT Function"](#).
- "ENGINE" (VQ25HR): Refer to [EC-732. "CONSULT Function"](#).
- "ENGINE" (VQ37VHR): Refer to [EC-156. "CONSULT Function"](#).
- "ICC/ADAS": Refer to [CCS-36. "CONSULT Function \(ICC/ADAS\)"](#).

Are the memories erased?


YES >> INSPECTION END

NO >> Check the items indicated by the self-diagnosis.

SYSTEM DESCRIPTION

VDC

System Diagram

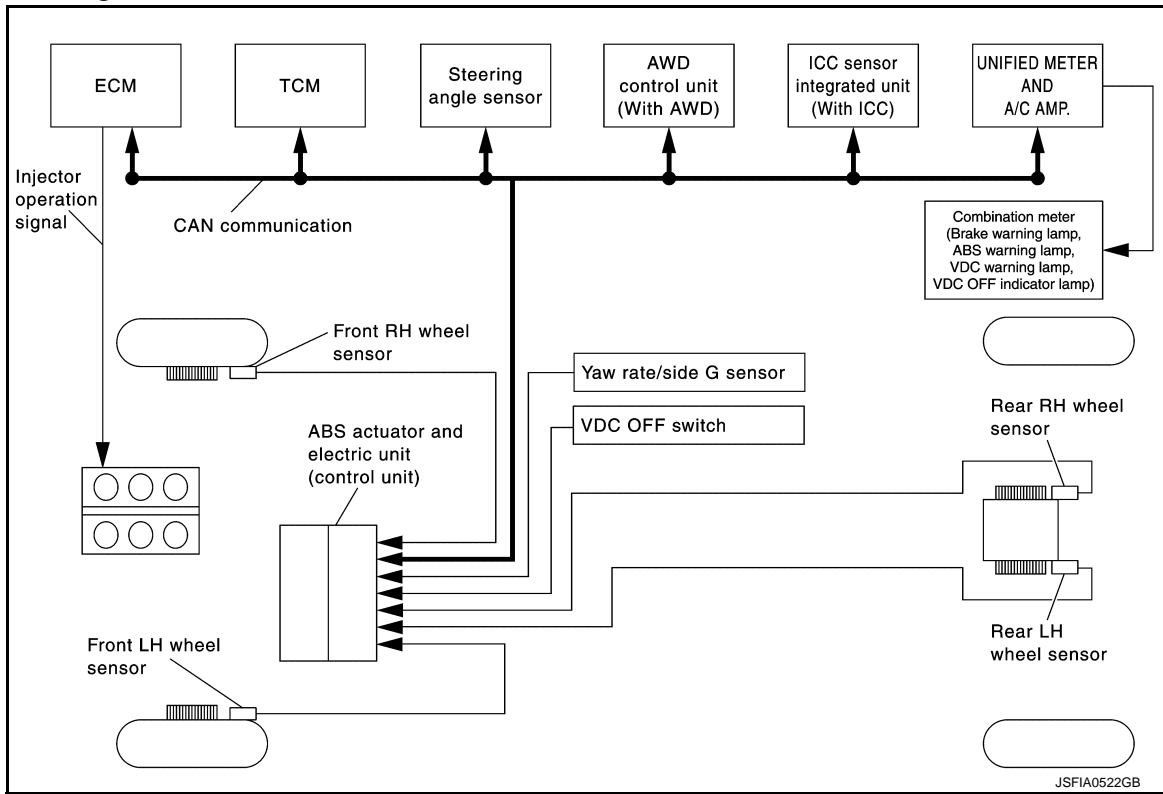


System Description

INFOID:000000008294449

- Vehicle Dynamics Control system detects driver's steering operation amount and brake pedal travel from steering angle sensor and pressure sensor. Using information from yaw rate/side G sensor and wheel sensor, VDC judges driving condition (conditions of under steer and over steer) to improve vehicle driving stability by controlling brake application to 4 wheels and engine output.
- During VDC operation, it informs driver of system operation by flashing VDC warning lamp.
- Electrical system diagnosis by CONSULT is available.

For USA

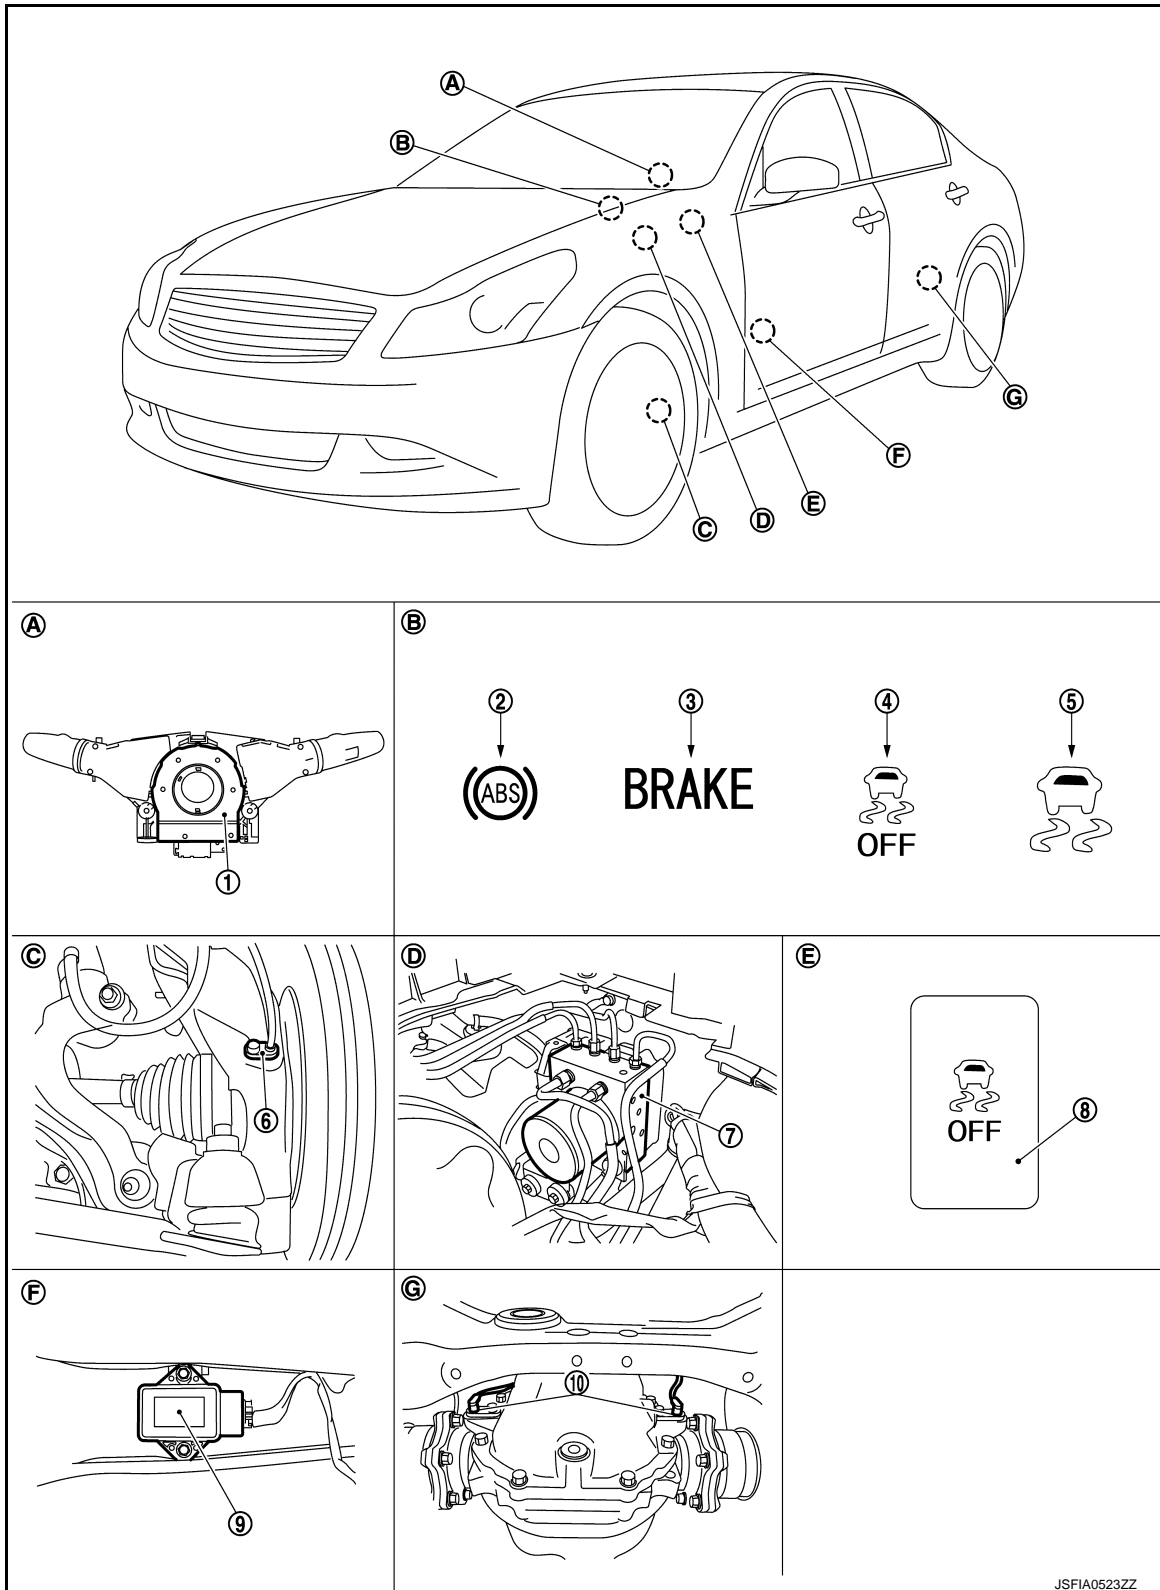

JSFIA0523ZZ

- | | | |
|---------------------------|---------------------|-----------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. VDC warning lamp | 6. Front wheel sensor |


VDC

[VDC/TCS/ABS]

< SYSTEM DESCRIPTION >

- 7. ABS actuator and electric unit (control unit)
- 8. VDC OFF switch
- 9. Yaw rate/side G sensor
- 10. Rear wheel sensor
- A. Back of spiral cable assembly
- B. Combination meter
- C. Steering knuckle
- D. Inside brake master cylinder cover
- E. Instrument driver lower panel
- F. Under center console
- G. Rear final drive assembly

Except for USA

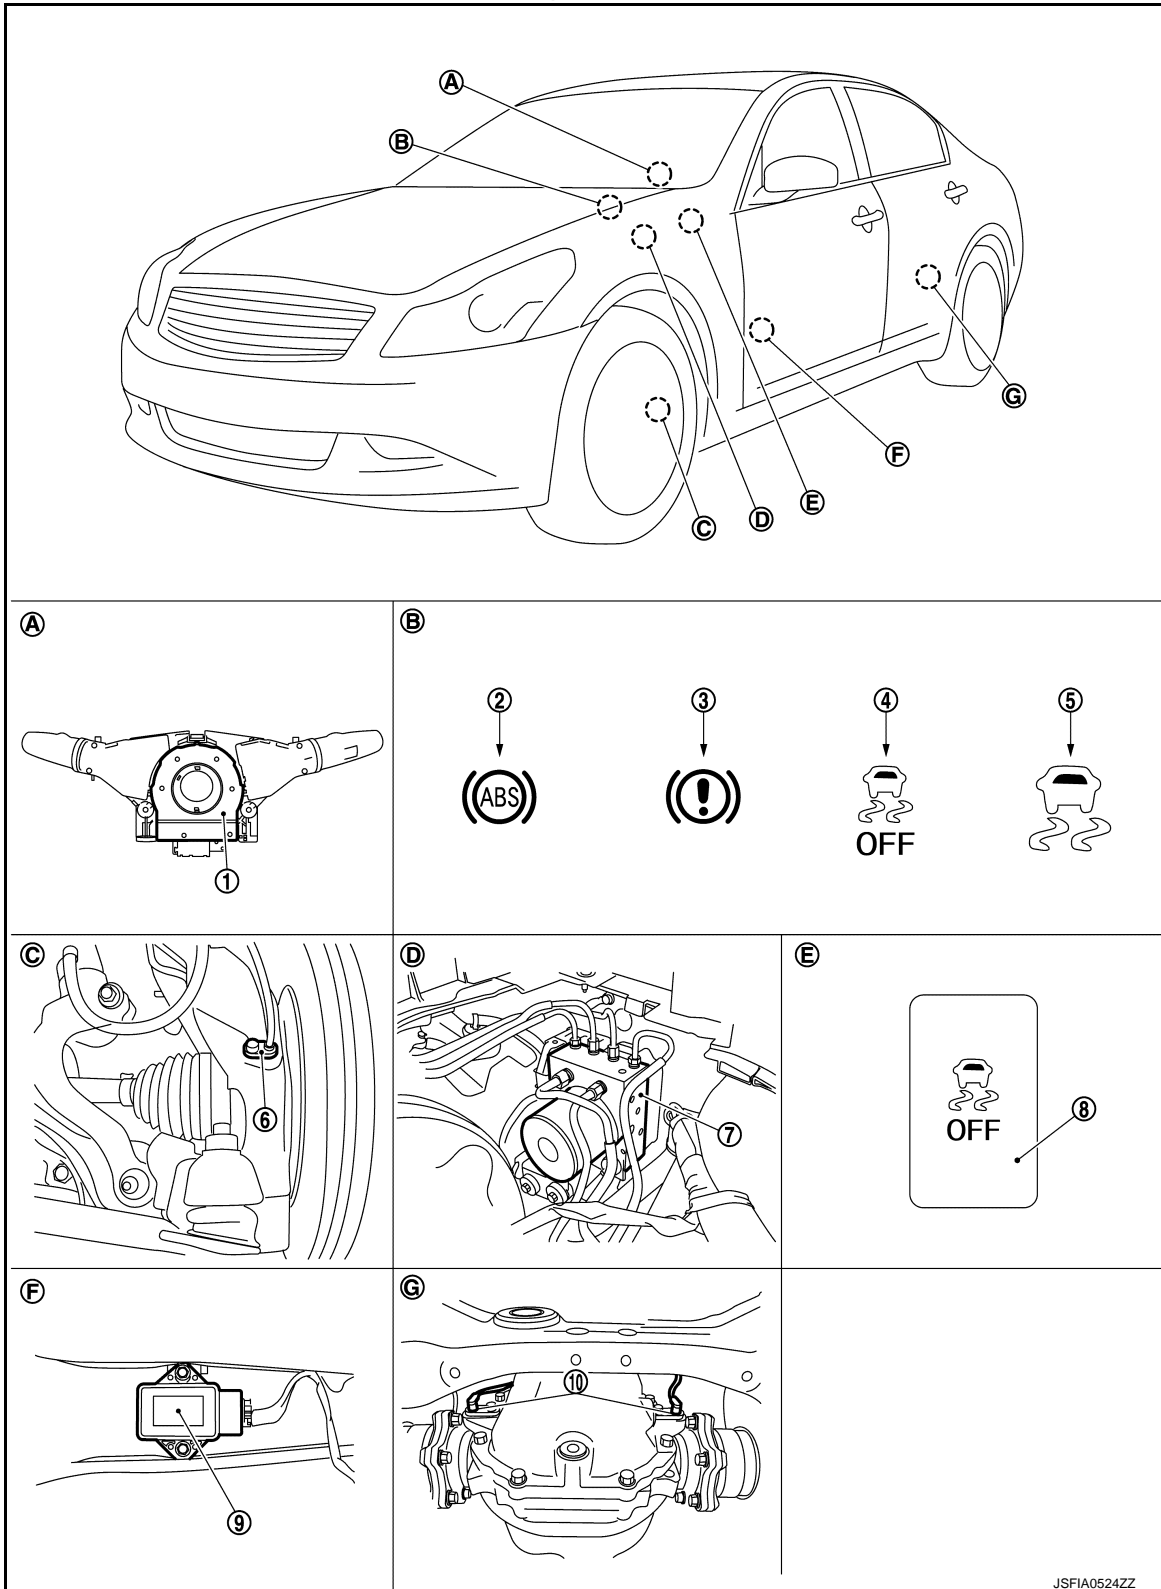

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

JSFIA0524ZZ

< SYSTEM DESCRIPTION >

- | | | |
|--|----------------------------------|---------------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. VDC warning lamp | 6. Front wheel sensor |
| 7. ABS actuator and electric unit (control unit) | 8. VDC OFF switch | 9. Yaw rate/side G sensor |
| 10. Rear wheel sensor | | |
| A. Back of spiral cable assembly | B. Combination meter | C. Steering knuckle |
| D. Inside brake master cylinder cover | E. Instrument driver lower panel | F. Under center console |
| G. Rear final drive assembly | | |


Component Description

INFOID:000000008294451

| Component parts | Reference | |
|---|--|---|
| ABS actuator and electric unit (control unit) | Pump | BRC-43, "Description" |
| | Motor | |
| | Actuator relay | BRC-61, "Description" |
| | Solenoid valve | BRC-55, "Description" , BRC-57, "Description" |
| | Pressure sensor | BRC-63, "Description" |
| | VDC switch-over valve (USV1, USV2, HSV1, HSV2) | BRC-71, "Description" |
| Wheel sensor | BRC-32, "Description" | |
| Yaw rate/side G sensor | BRC-68, "Description" | |
| Steering angle sensor | BRC-65, "Description" | |
| VDC OFF switch | BRC-85, "Description" | |
| ABS warning lamp | BRC-87, "Description" | |
| Brake warning lamp | BRC-88, "Description" | |
| VDC warning lamp | BRC-89, "Description" | |
| VDC OFF indicator lamp | BRC-90, "Description" | |

TCS

System Diagram

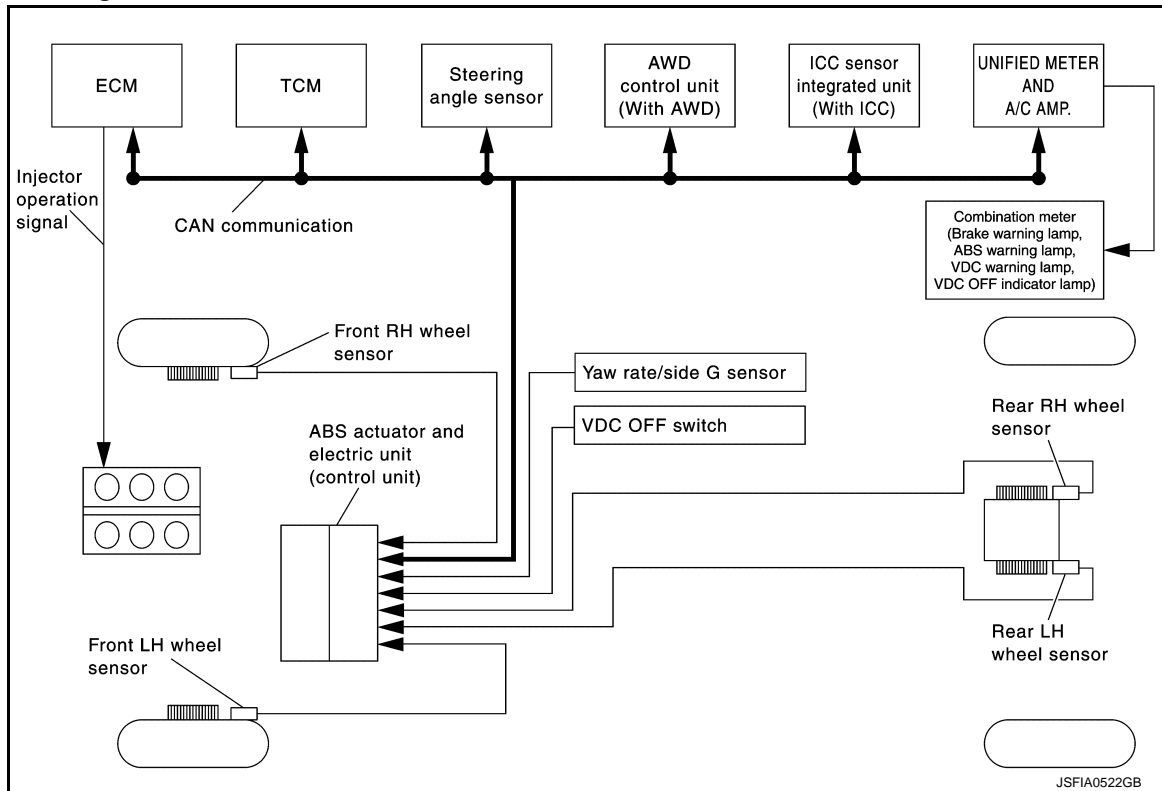

System Description

INFOID:000000008294453

- Traction Control System is a function that electronically controls engine torque, brake fluid pressure and A/T gear position to ensure the optimum slippage ratio at drive wheels by computing wheel speed signals from 4 wheel sensors. When ABS actuator and electric unit (control unit) detects a spin at drive wheels (rear wheels), it compares wheel speed signals from all 4 wheels. At this time, LH and RH rear brake fluid pressure are controlled, while fuel being cut to engine and throttle valve being closed to reduce engine torque by the control unit. Further more, throttle position is continuously controlled to ensure the optimum engine torque at all times.
- During TCS operation, TCS informs driver of system operation by flashing VDC warning lamp.
- Electrical system diagnosis by CONSULT is available.

TCS


[VDC/TCS/ABS]

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000008294454

For USA

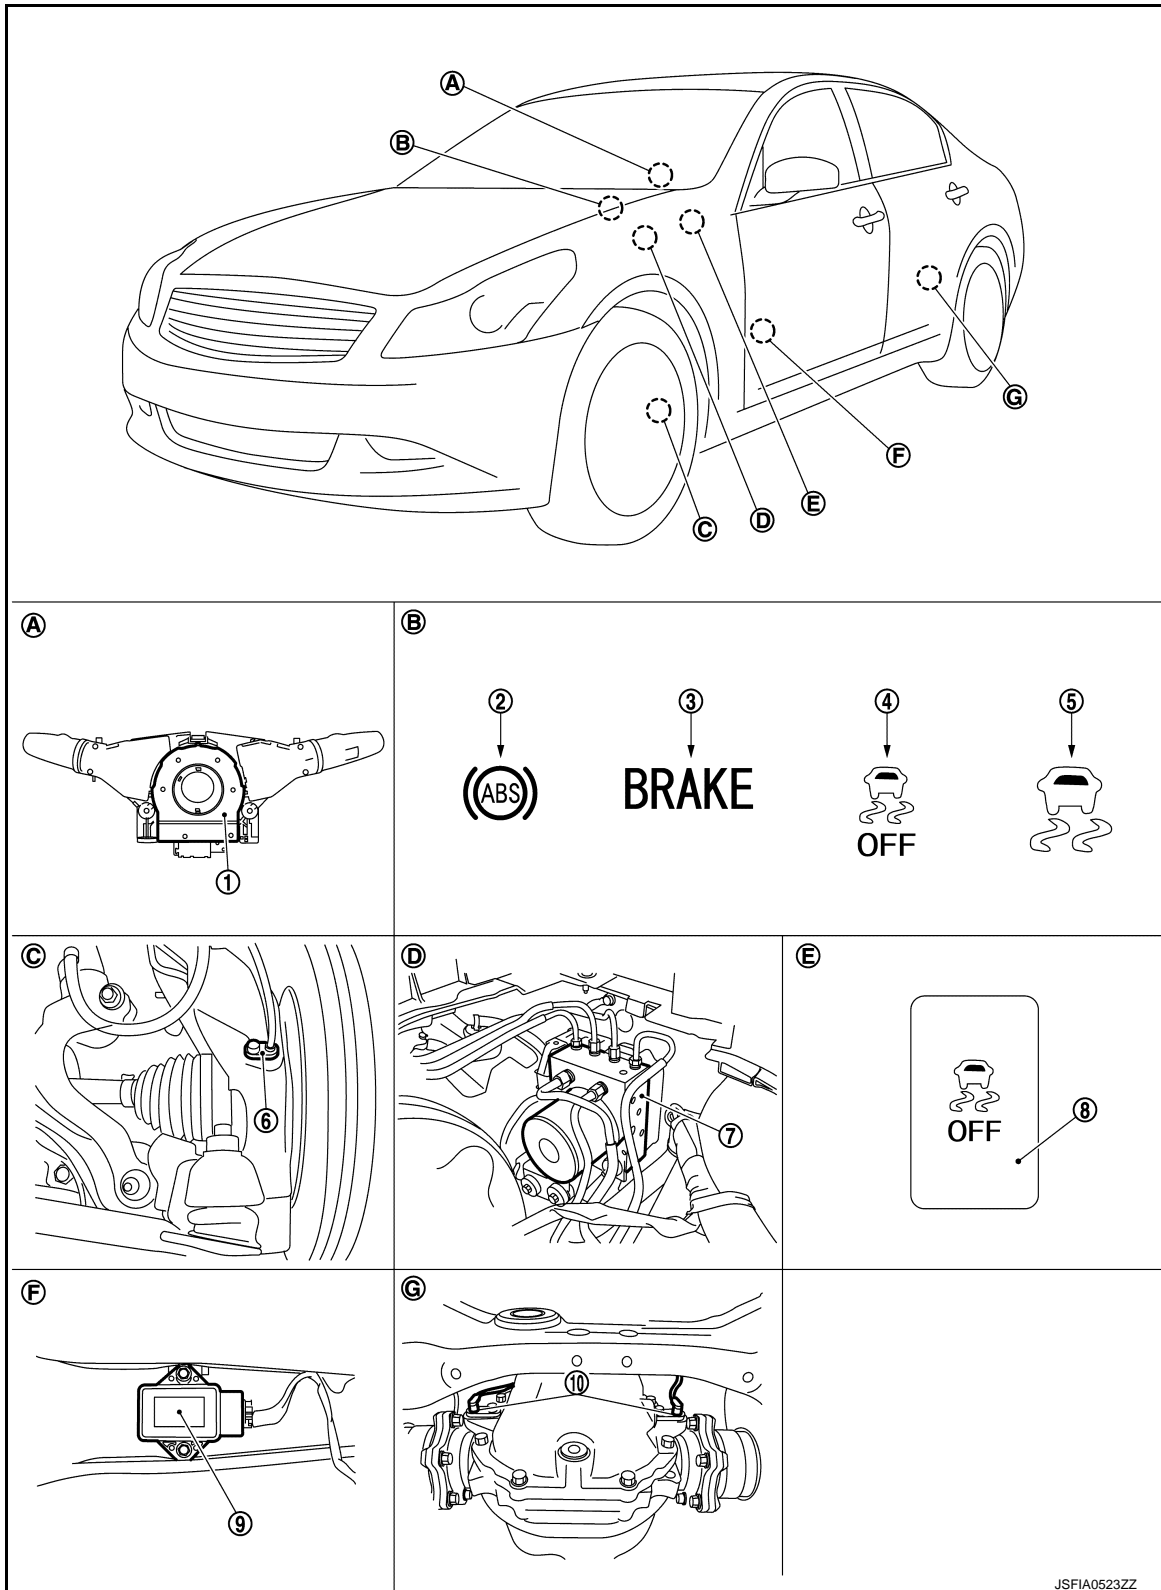

JSFIA0523ZZ

- | | | |
|---------------------------|---------------------|-----------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. VDC warning lamp | 6. Front wheel sensor |


TCS

[VDC/TCS/ABS]

< SYSTEM DESCRIPTION >

- | | | |
|--|----------------------------------|---------------------------|
| 7. ABS actuator and electric unit (control unit) | 8. VDC OFF switch | 9. Yaw rate/side G sensor |
| 10. Rear wheel sensor | | |
| A. Back of spiral cable assembly | B. Combination meter | C. Steering knuckle |
| D. Inside brake master cylinder cover | E. Instrument driver lower panel | F. Under center console |
| G. Rear final drive assembly | | |

Except for USA

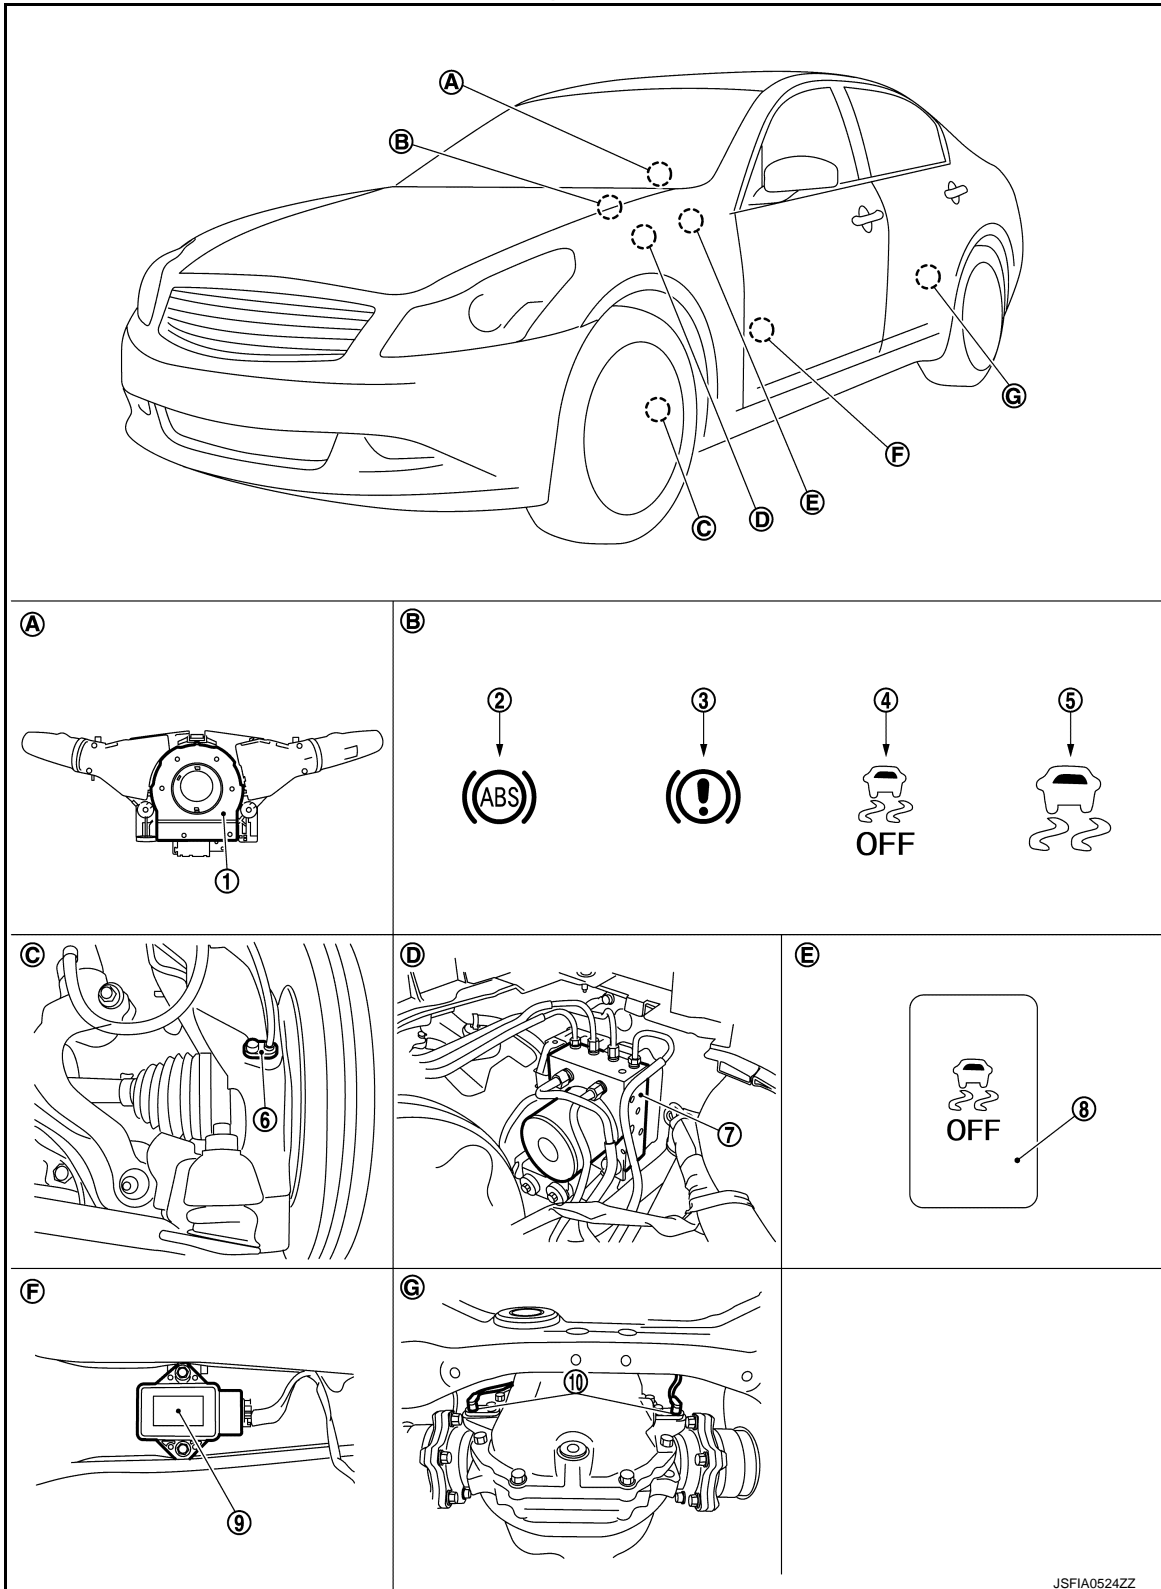

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

JSFIA0524ZZ

< SYSTEM DESCRIPTION >

- | | | |
|--|----------------------------------|---------------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. VDC warning lamp | 6. Front wheel sensor |
| 7. ABS actuator and electric unit (control unit) | 8. VDC OFF switch | 9. Yaw rate/side G sensor |
| 10. Rear wheel sensor | | |
| A. Back of spiral cable assembly | B. Combination meter | C. Steering knuckle |
| D. Inside brake master cylinder cover | E. Instrument driver lower panel | F. Under center console |
| G. Rear final drive assembly | | |

Component Description


INFOID:000000008294455

| Component parts | | Reference |
|---|--|---|
| ABS actuator and electric unit (control unit) | Pump | BRC-43, "Description" |
| | Motor | |
| | Actuator relay | BRC-61, "Description" |
| | Solenoid valve | BRC-55, "Description" , BRC-57, "Description" |
| | Pressure sensor | BRC-63, "Description" |
| | VDC switch-over valve (USV1, USV2, HSV1, HSV2) | BRC-71, "Description" |
| Wheel sensor | BRC-32, "Description" | |
| Yaw rate/side G sensor | BRC-68, "Description" | |
| Steering angle sensor | BRC-65, "Description" | |
| VDC OFF switch | BRC-85, "Description" | |
| ABS warning lamp | BRC-87, "Description" | |
| Brake warning lamp | BRC-88, "Description" | |
| VDC warning lamp | BRC-89, "Description" | |
| VDC OFF indicator lamp | BRC-90, "Description" | |

ABS

System Diagram

INFOID:000000008294456

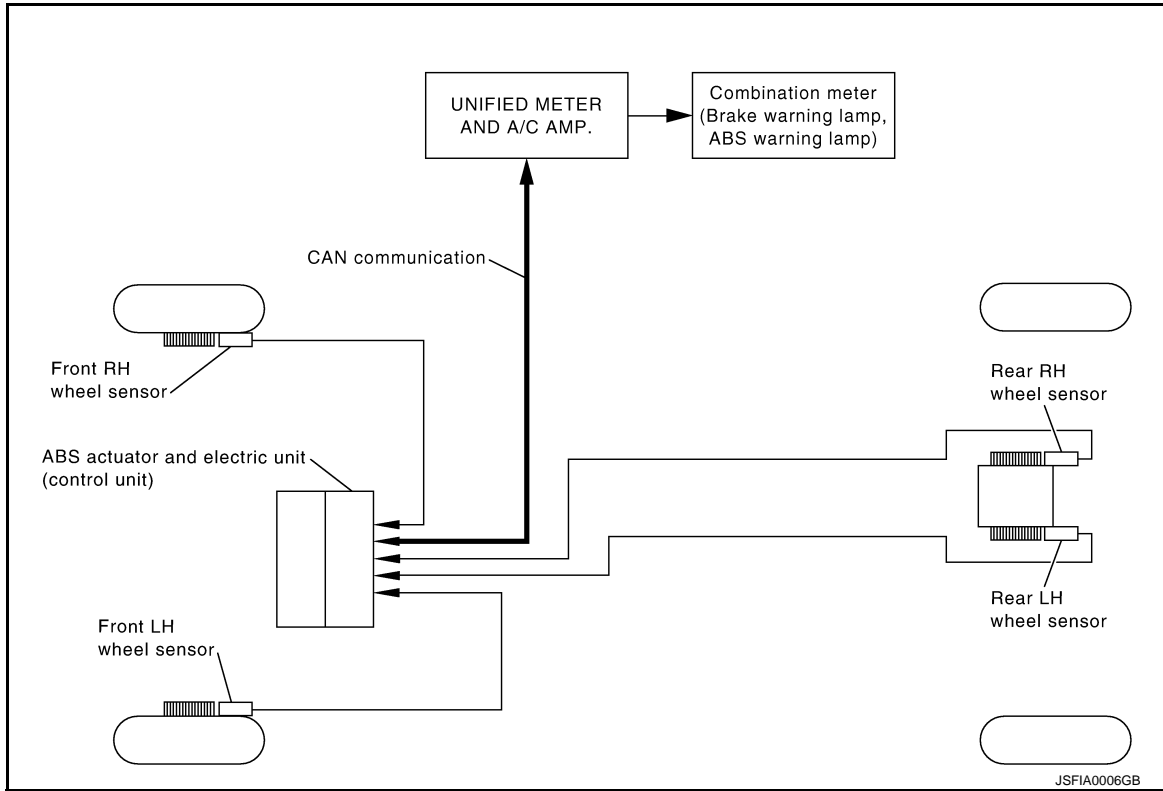

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

System Description

INFOID:000000008294457

- Anti-Lock Braking System detects wheel revolution while braking, electronically controls braking force, and prevents wheel locking during sudden braking. It improves handling stability and maneuverability for avoiding obstacles.
- Electrical system diagnosis by CONSULT is available.

ABS


< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Component Parts Location

INFOID:000000008294458

For USA

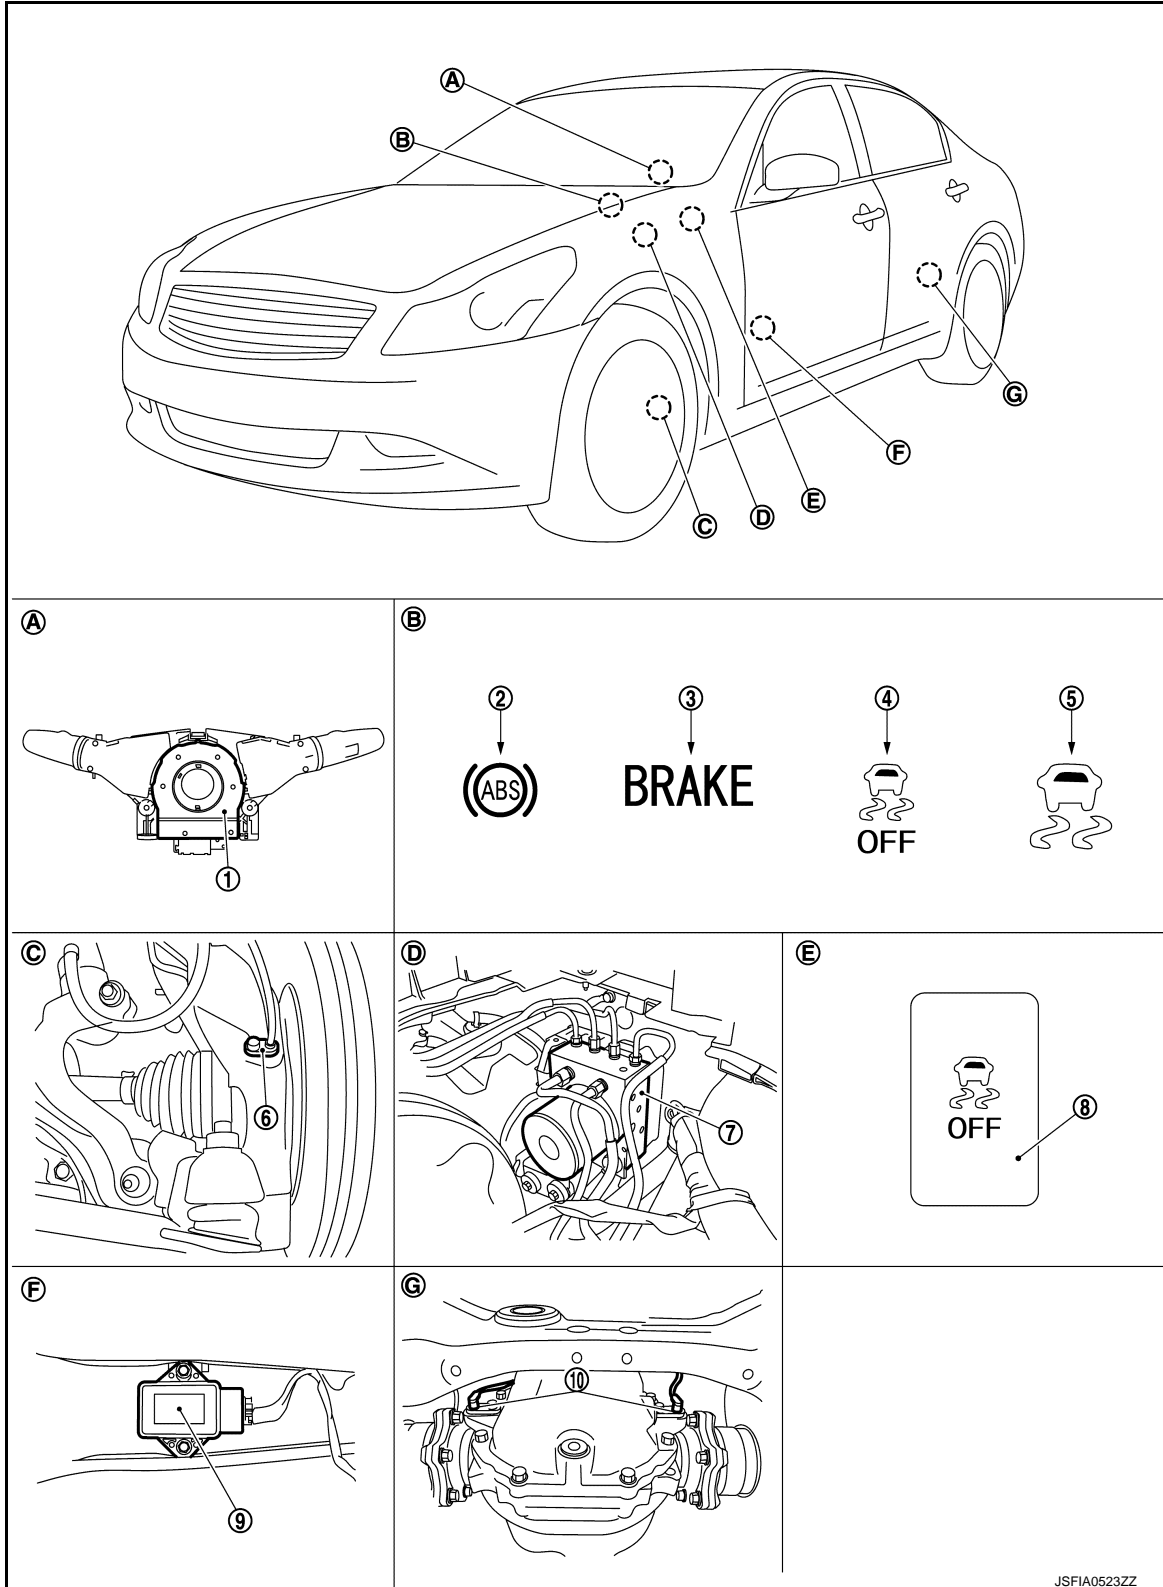

- 1. Steering angle sensor
- 4. VDC OFF indicator lamp

- 2. ABS warning lamp
- 5. VDC warning lamp

- 3. Brake warning lamp
- 6. Front wheel sensor

JSFIA0523ZZ


ABS

[VDC/TCS/ABS]

< SYSTEM DESCRIPTION >

- 7. ABS actuator and electric unit (control unit)
 - 8. VDC OFF switch
 - 9. Yaw rate/side G sensor
 - 10. Rear wheel sensor
-
- A. Back of spiral cable assembly
 - B. Combination meter
 - C. Steering knuckle
 - D. Inside brake master cylinder cover
 - E. Instrument driver lower panel
 - F. Under center console
 - G. Rear final drive assembly

Except for USA

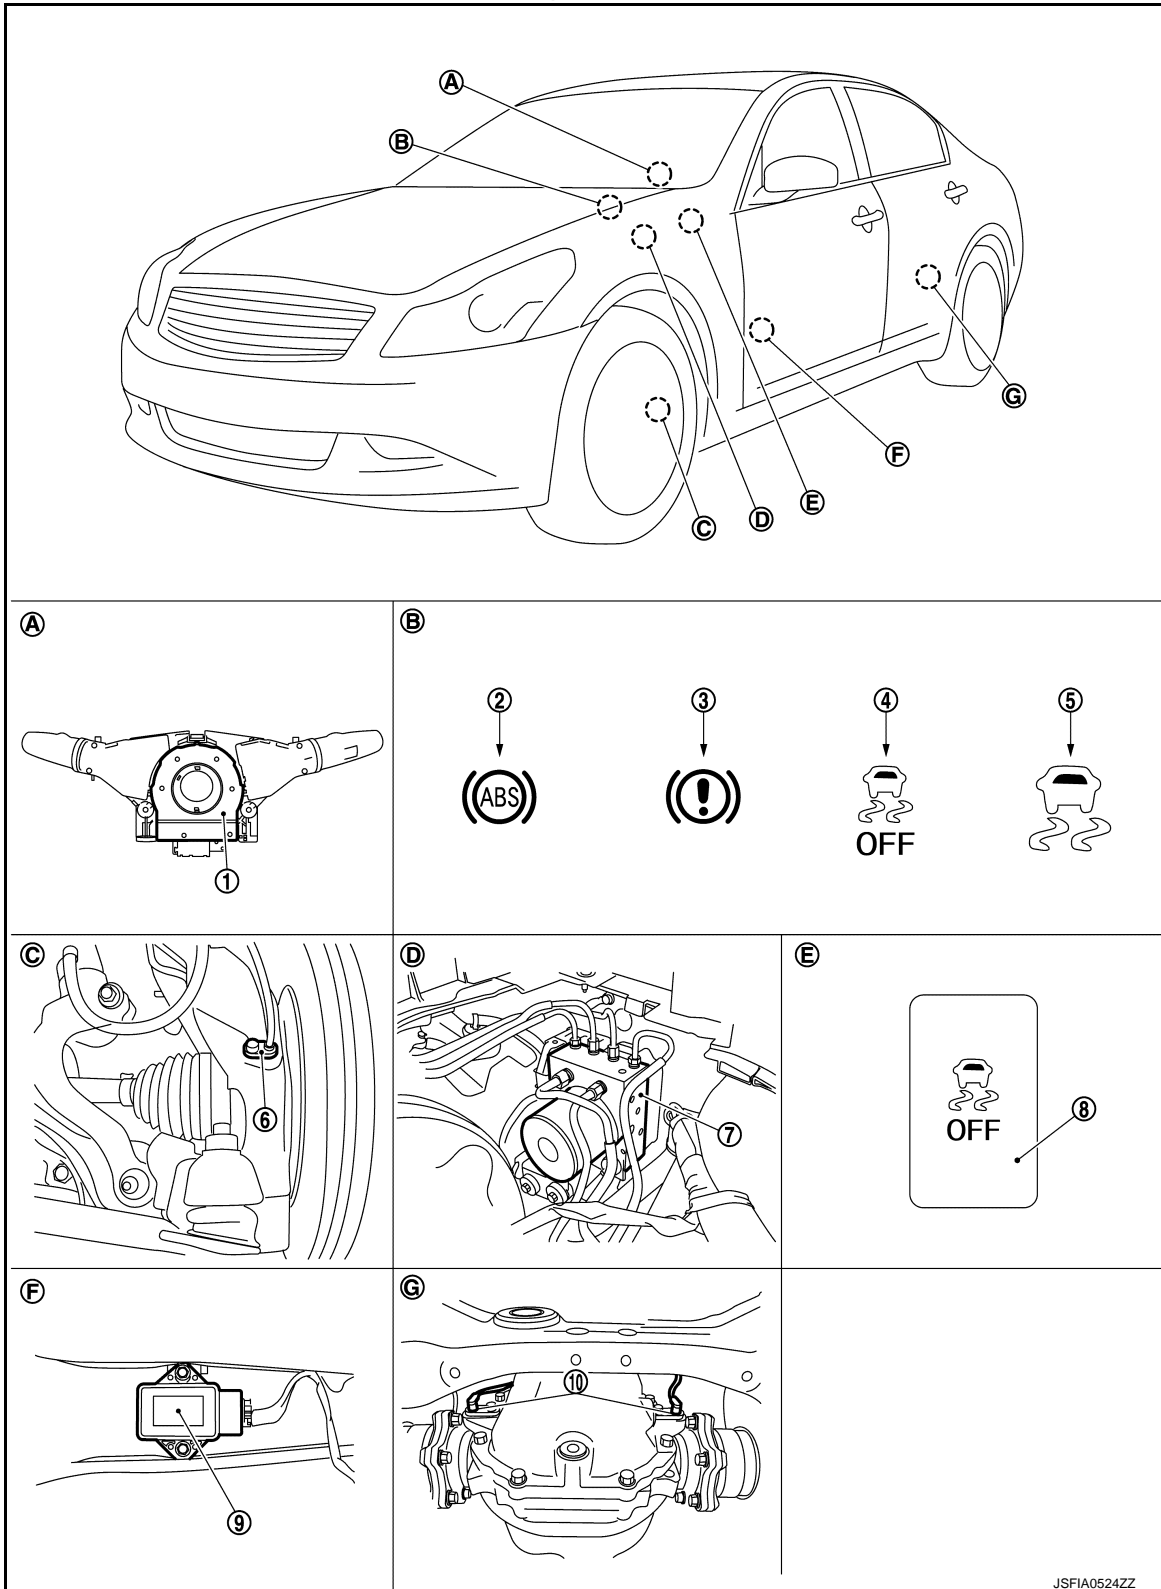

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- | | | |
|--|----------------------------------|---------------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. VDC warning lamp | 6. Front wheel sensor |
| 7. ABS actuator and electric unit (control unit) | 8. VDC OFF switch | 9. Yaw rate/side G sensor |
| 10. Rear wheel sensor | | |
| A. Back of spiral cable assembly | B. Combination meter | C. Steering knuckle |
| D. Inside brake master cylinder cover | E. Instrument driver lower panel | F. Under center console |
| G. Rear final drive assembly | | |

Component Description


INFOID:000000008294459

| Component parts | Reference | |
|---|--|---|
| ABS actuator and electric unit (control unit) | Pump | BRC-43, "Description" |
| | Motor | |
| | Actuator relay | BRC-61, "Description" |
| | Solenoid valve | BRC-55, "Description" , BRC-57, "Description" |
| | Pressure sensor | BRC-63, "Description" |
| | VDC switch-over valve (USV1, USV2, HSV1, HSV2) | BRC-71, "Description" |
| Wheel sensor | BRC-32, "Description" | |
| Yaw rate/side G sensor | BRC-68, "Description" | |
| Steering angle sensor | BRC-65, "Description" | |
| VDC OFF switch | BRC-85, "Description" | |
| ABS warning lamp | BRC-87, "Description" | |
| Brake warning lamp | BRC-88, "Description" | |
| VDC warning lamp | BRC-89, "Description" | |
| VDC OFF indicator lamp | BRC-90, "Description" | |

EBD

System Diagram

INFOID:000000008294460

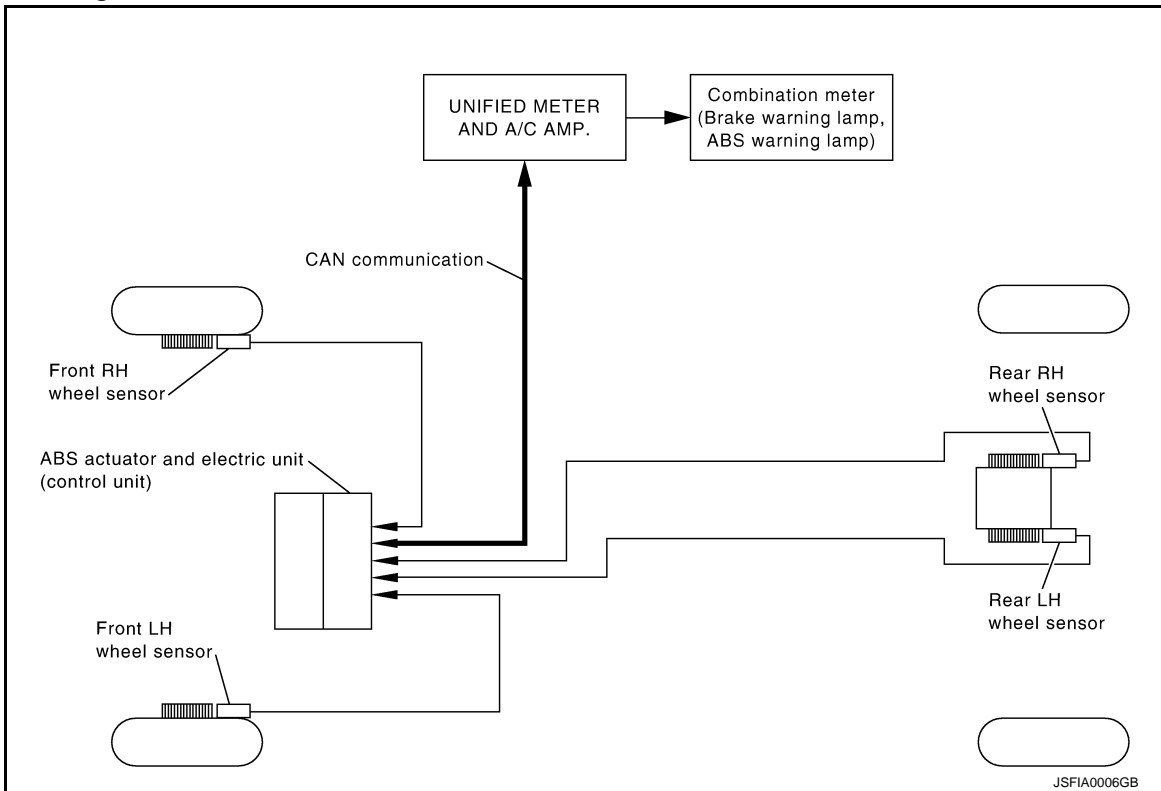

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

System Description

INFOID:000000008294461

- Electric Brake force Distribution is a following function. ABS actuator and electric unit (control unit) detects subtle slippages between the front and rear wheels during braking. Then is electronically controls the rear braking force (brake fluid pressure) to reducing and reduces rear wheel slippage. Accordingly it improves vehicle stability.
- Electrical system diagnosis by CONSULT is available.

EBD


< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Component Parts Location

INFOID:000000008294462

For USA

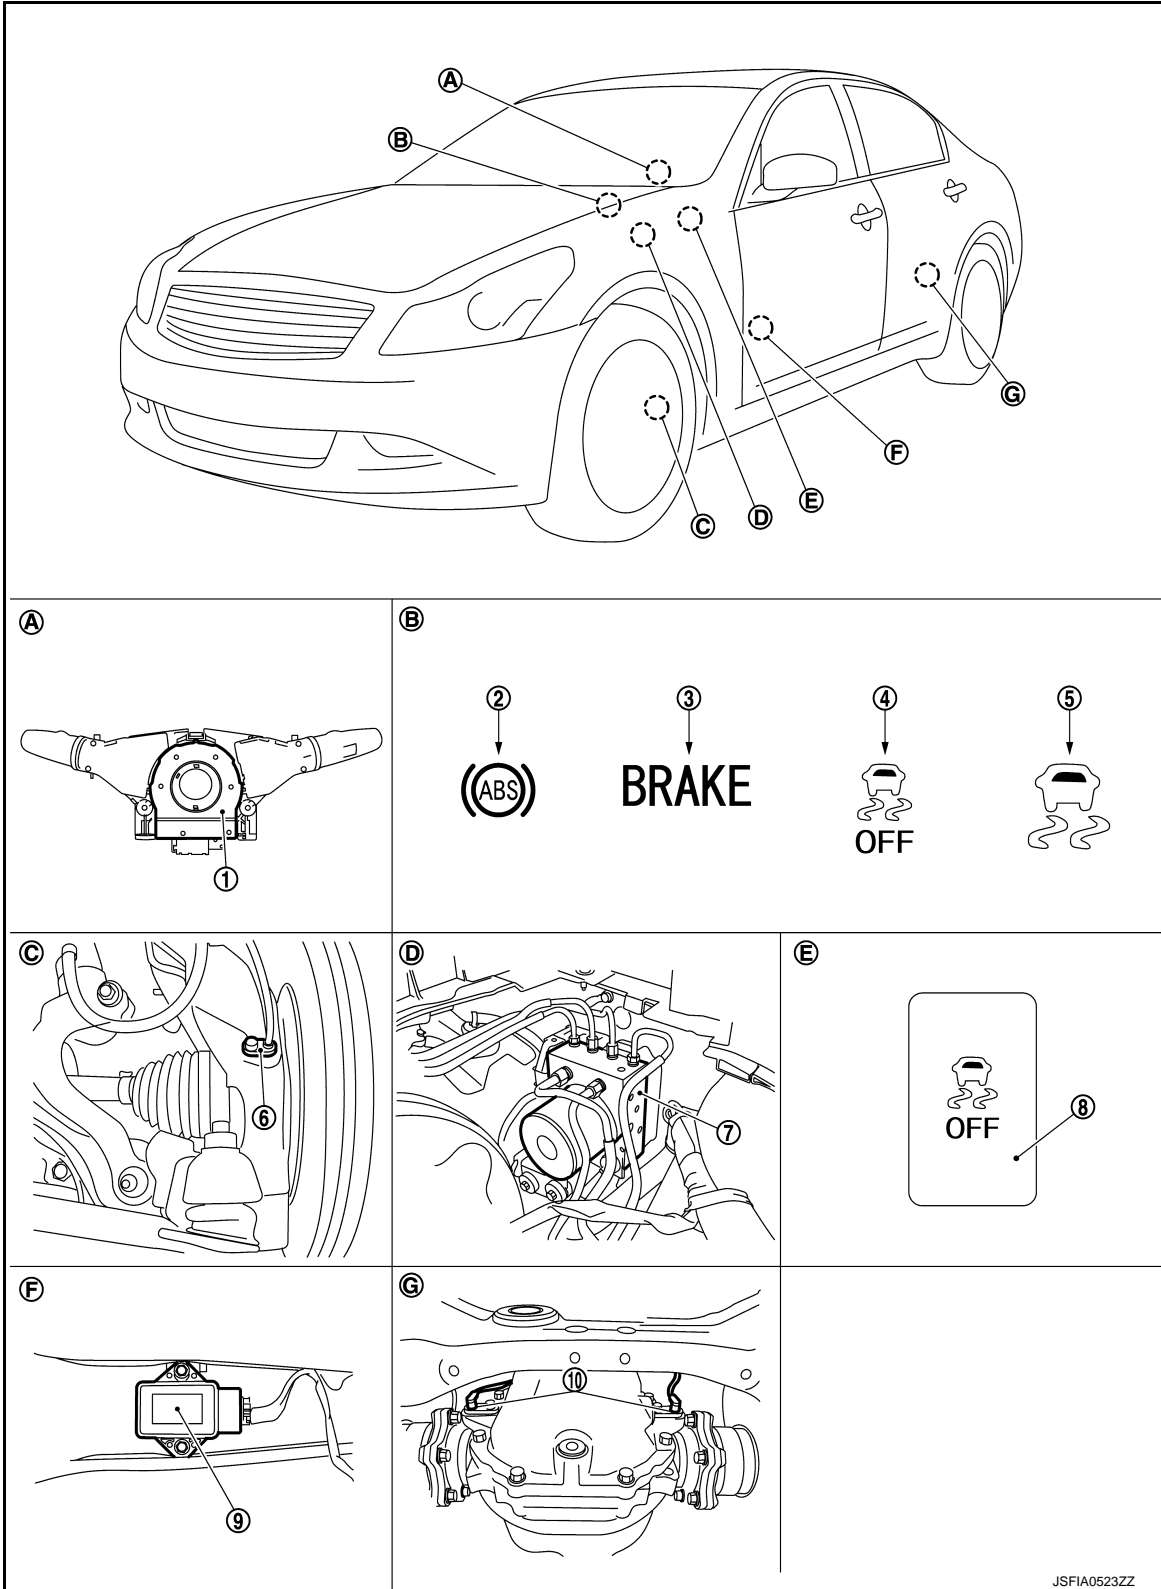

1. Steering angle sensor

2. ABS warning lamp

3. Brake warning lamp

4. VDC OFF indicator lamp

5. VDC warning lamp

6. Front wheel sensor


EBD

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- 7. ABS actuator and electric unit (control unit)
- 8. VDC OFF switch
- 9. Yaw rate/side G sensor
- 10. Rear wheel sensor
- A. Back of spiral cable assembly
- B. Combination meter
- C. Steering knuckle
- D. Inside brake master cylinder cover
- E. Instrument driver lower panel
- F. Under center console
- G. Rear final drive assembly

Except for USA

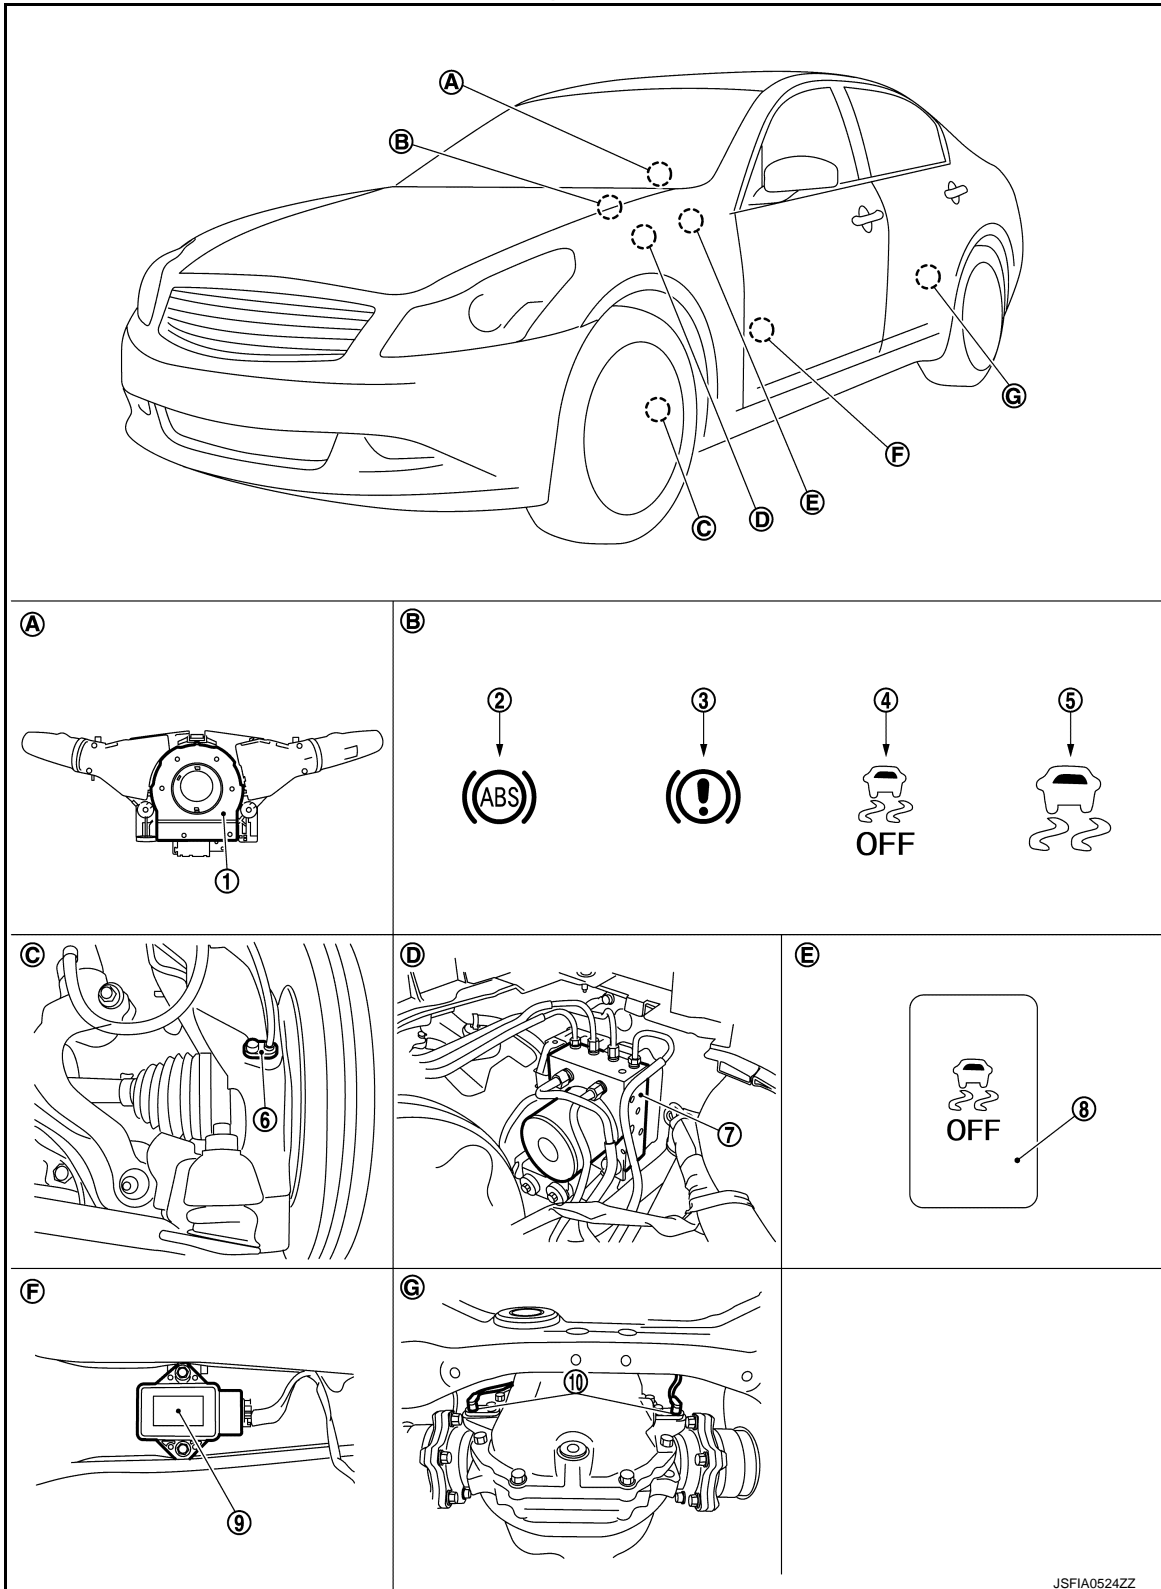

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

JSFIA0524ZZ

< SYSTEM DESCRIPTION >

- | | | |
|--|----------------------------------|---------------------------|
| 1. Steering angle sensor | 2. ABS warning lamp | 3. Brake warning lamp |
| 4. VDC OFF indicator lamp | 5. VDC warning lamp | 6. Front wheel sensor |
| 7. ABS actuator and electric unit (control unit) | 8. VDC OFF switch | 9. Yaw rate/side G sensor |
| 10. Rear wheel sensor | | |
| A. Back of spiral cable assembly | B. Combination meter | C. Steering knuckle |
| D. Inside brake master cylinder cover | E. Instrument driver lower panel | F. Under center console |
| G. Rear final drive assembly | | |

Component Description

INFOID:000000008294463

| Component parts | | Reference |
|---|--|---|
| ABS actuator and electric unit (control unit) | Pump | BRC-43, "Description" |
| | Motor | |
| | Actuator relay | BRC-61, "Description" |
| | Solenoid valve | BRC-55, "Description" , BRC-57, "Description" |
| | Pressure sensor | BRC-63, "Description" |
| | VDC switch-over valve (USV1, USV2, HSV1, HSV2) | BRC-71, "Description" |
| Wheel sensor | BRC-32, "Description" | |
| Yaw rate/side G sensor | BRC-68, "Description" | |
| Steering angle sensor | BRC-65, "Description" | |
| VDC OFF switch | BRC-85, "Description" | |
| ABS warning lamp | BRC-87, "Description" | |
| Brake warning lamp | BRC-88, "Description" | |
| VDC warning lamp | BRC-89, "Description" | |
| VDC OFF indicator lamp | BRC-90, "Description" | |

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

CONSULT Function

INFOID:000000008294464

FUNCTION

CONSULT can display each diagnostic item using the diagnostic test modes shown following.

| Diagnostic test mode | Function |
|------------------------|--|
| Work support | This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT. |
| Self diagnostic result | Self-diagnostic results can be read and erased quickly. |
| Data monitor | Input/Output data in the ABS actuator and electric unit (control unit) can be read. |
| Active test | Diagnostic test mode is which CONSULT drives some actuators apart from the ABS actuator and electric unit (control unit) and also shifts some parameters in a specified range. |
| ECU identification | ABS actuator and electric unit (control unit) part number can be read. |

WORK SUPPORT

| Item | Description |
|----------------------------|---|
| ST ANGLE SENSOR ADJUSTMENT | Adjust the neutral position of the steering angle sensor. |

SELF DIAGNOSTIC RESULT

Operation Procedure

Before performing the self-diagnosis, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

Display Item List

Refer to [BRC-99. "DTC Index"](#).

How to Erase Self-diagnosis Results

After erasing DTC memory for "ABS" with CONSULT, start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp, VDC warning lamp and brake warning lamp turn OFF.

CAUTION:

If memory cannot be erased, perform applicable diagnosis.

NOTE:

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, ABS warning lamp, VDC warning lamp and brake warning lamp will not turn OFF even when the system is normal unless the vehicle is driving at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or in case of brake fluid level switch operation (when brake fluid is insufficient).
- VDC OFF switch should not stay "ON" position.

DATA MONITOR MODE

Display Item List

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

×: Applicable ▼: Optional item

| Monitor item (Unit) | SELECT MONITOR ITEM | | Remarks |
|-----------------------------------|---------------------|--------------|--|
| | ECU INPUT SIGNALS | MAIN SIGNALS | |
| FR LH SENSOR [km/h (MPH)] | × | × | Wheel speed |
| FR RH SENSOR [km/h (MPH)] | × | × | |
| RR LH SENSOR [km/h (MPH)] | × | × | |
| RR RH SENSOR [km/h (MPH)] | × | × | |
| STOP LAMP SW (On/Off) | × | × | Stop lamp switch signal status |
| BATTERY VOLT (V) | × | × | Battery voltage supplied to the ABS actuator and electric unit (control unit) |
| GEAR | × | × | Gear position determined by TCM |
| SLCT LVR POSI | × | × | A/T selector lever position |
| OFF SW (On/Off) | × | × | VDC OFF switch |
| YAW RATE SEN (d/s) | × | × | Yaw rate detected by yaw rate/side G sensor |
| 4WD MODE MON | × | × | AWD activated (only AWD models) |
| ACCEL POS SIG (%) | × | ▼ | Throttle actuator opening/closing is displayed (Linked with accelerator pedal) |
| SIDE G-SENSOR (m/s ²) | × | ▼ | Transverse G detected by yaw rate/side G sensor |
| STR ANGLE SIG (°) | × | ▼ | Steering angle detected by steering angle sensor |
| PRESS SENSOR (bar) | × | ▼ | Brake fluid pressure detected by pressure sensor |
| ENGINE RPM [tr/min (rpm)] | × | ▼ | Engine speed |
| FLUID LEV SW (On/Off) | × | ▼ | Brake fluid level switch signal status |
| PARK BRAKE SW (On/Off) | × | ▼ | Parking brake switch signal status |
| FR RH IN SOL (On/Off) (Note) | ▼ | × | Operation status of each solenoid valve |
| FR RH OUT SOL (On/Off) (Note) | ▼ | × | |
| FR LH IN SOL (On/Off) (Note) | ▼ | × | |
| FR LH OUT SOL (On/Off) (Note) | ▼ | × | |
| RR RH IN SOL (On/Off) (Note) | ▼ | × | |
| RR RH OUT SOL (On/Off) (Note) | ▼ | × | |
| RR LH IN SOL (On/Off) (Note) | ▼ | × | |
| RR LH OUT SOL (On/Off) (Note) | ▼ | × | |

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

| Monitor item (Unit) | SELECT MONITOR ITEM | | Remarks | |
|------------------------------|---------------------|--------------|---|-----|
| | ECU INPUT SIGNALS | MAIN SIGNALS | | |
| MOTOR RELAY (On/Off) | ▼ | × | Motor and motor relay operation | A |
| ACTUATOR RLY (On/Off) (Note) | ▼ | × | Actuator relay operation | B |
| ABS WARN LAMP (On/Off) | ▼ | × | ABS warning lamp | C |
| OFF LAMP (On/Off) | ▼ | × | VDC OFF indicator lamp | D |
| SLIP/VDC LAMP (On/Off) | ▼ | × | VDC warning lamp | E |
| BST OPER SIG | ▼ | ▼ | Not applied but displayed. | E |
| EBD SIGNAL (On/Off) | ▼ | ▼ | EBD operation | BRC |
| ABS SIGNAL (On/Off) | ▼ | ▼ | ABS operation | BRC |
| TCS SIGNAL (On/Off) | ▼ | ▼ | TCS operation | G |
| VDC SIGNAL (On/Off) | ▼ | ▼ | VDC operation | H |
| EBD FAIL SIG (On/Off) | ▼ | ▼ | EBD fail-safe signal | H |
| ABS FAIL SIG (On/Off) | ▼ | ▼ | ABS fail-safe signal | I |
| TCS FAIL SIG (On/Off) | ▼ | ▼ | TCS fail-safe signal | J |
| VDC FAIL SIG (On/Off) | ▼ | ▼ | VDC fail-safe signal | J |
| CRANKING SIG (On/Off) | ▼ | ▼ | Crank operation | K |
| USV [FR-RL] (On/Off) | ▼ | ▼ | VDC switch-over valve | L |
| USV [FL-RR] (On/Off) | ▼ | ▼ | | L |
| HSV [FR-RL] (On/Off) | ▼ | ▼ | | M |
| HSV [FL-RR] (On/Off) | ▼ | ▼ | | M |
| V/R OUTPUT (On/Off) | ▼ | ▼ | Solenoid valve relay activated | N |
| M/R OUTPUT (On/Off) | ▼ | ▼ | Actuator motor and motor relay activated | O |
| 4WD FAIL REQ (On/Off) | ▼ | ▼ | AWD control unit fail-safe signal (only AWD models) | P |
| SNOW MODE SW (On/Off) | ▼ | ▼ | SNOW mode switch | P |
| M-MODE SIG (On/Off) | ▼ | ▼ | Manual mode activated (only A/T models) | P |

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is a operation for checking.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

ACTIVE TEST MODE

CAUTION:

- Never perform active test while driving vehicle.
- Make sure to completely bleed air from brake system.
- The active test cannot be started when ABS warning lamp, VDC warning lamp and brake warning lamp are ON.
- ABS warning lamp, VDC warning lamp and brake warning lamp are ON during active test.
- Erase memory of "ICC/ADAS" with CONSULT, after implementing active test.

NOTE:

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal. (Only solenoid valve and ABS motor.)
- "TEST IS STOPPED" is displayed 10 seconds after operation start.
- After "TEST IS STOPPED" is displayed, to perform test again.

Test Item

ABS SOLENOID VALVE

- Select "Up", "Keep" and "Down". Then use screen monitor to check that solenoid valve operates as shown in the table below.

| Test item | Display item | Display (Note) | | |
|-----------|---------------|----------------|------|------|
| | | Up | Keep | Down |
| FR RH SOL | FR RH IN SOL | Off | On | On |
| | FR RH OUT SOL | Off | Off | On* |
| | USV[FR-RL] | Off | Off | Off |
| | HSV[FR-RL] | Off | Off | Off |
| FR LH SOL | FR LH IN SOL | Off | On | On |
| | FR LH OUT SOL | Off | Off | On* |
| | USV[FL-RR] | Off | Off | Off |
| | HSV[FL-RR] | Off | Off | Off |
| RR RH SOL | RR RH IN SOL | Off | On | On |
| | RR RH OUT SOL | Off | Off | On* |
| | USV[FL-RR] | Off | Off | Off |
| | HSV[FL-RR] | Off | Off | Off |
| RR LH SOL | RR LH IN SOL | Off | On | On |
| | RR LH OUT SOL | Off | Off | On* |
| | USV[FR-RL] | Off | Off | Off |
| | HSV[FR-RL] | Off | Off | Off |

*: On for 1 to 2 seconds after the select, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS SOLENOID VALVE (ACT)

- Select "Up", "ACT UP" and "ACT KEEP". Then use screen monitor to check that solenoid valve operates as shown in the table below.

| Test item | Display item | Display (Note) | | |
|--------------------------|---------------|----------------|--------|----------|
| | | Up | ACT UP | ACT KEEP |
| FR RH ABS SOLENOID (ACT) | FR RH IN SOL | Off | Off | Off |
| | FR RH OUT SOL | Off | Off | Off |
| | USV[FR-RL] | Off | On | On |
| | HSV[FR-RL] | Off | On* | Off |

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

| Test item | Display item | Display (Note) | | |
|--------------------------|---------------|----------------|--------|----------|
| | | Up | ACT UP | ACT KEEP |
| FR LH ABS SOLENOID (ACT) | FR LH IN SOL | Off | Off | Off |
| | FR LH OUT SOL | Off | Off | Off |
| | USV[FL-RR] | Off | On | On |
| | HSV[FL-RR] | Off | On* | Off |
| RR RH ABS SOLENOID (ACT) | RR RH IN SOL | Off | Off | Off |
| | RR RH OUT SOL | Off | Off | Off |
| | USV[FL-RR] | Off | On | On |
| | HSV[FL-RR] | Off | On* | Off |
| RR LH ABS SOLENOID (ACT) | RR LH IN SOL | Off | Off | Off |
| | RR LH OUT SOL | Off | Off | Off |
| | USV[FR-RL] | Off | On | On |
| | HSV[FR-RL] | Off | On* | Off |

A
B
C
D
E
BRC

*: On for 1 to 2 seconds after the select, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS MOTOR

- Select "On" and "Off". Make sure motor relay and actuator relay operates as shown in table below.

| Test item | Display item | Display | |
|-----------|---------------------|---------|-----|
| | | On | Off |
| ABS MOTOR | MOTOR RELAY | On | Off |
| | ACTUATOR RLY (Note) | On | On |

G
H
I
J
K
L
M
N
O
P

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ECU IDENTIFICATION

ABS actuator and electric unit (control unit) part number can be read.

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

DTC/CIRCUIT DIAGNOSIS

C1101, C1102, C1103, C1104 WHEEL SENSOR

Description

INFOID:000000008294465

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294466

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|----------------|---|---|
| C1101 | RR RH SENSOR-1 | Circuit of rear RH wheel sensor is open. Or when the sensor power voltage is outside the standard. | <ul style="list-style-type: none">• Harness or connector• Wheel sensor• ABS actuator and electric unit (control unit) |
| C1102 | RR LH SENSOR-1 | Circuit of rear LH wheel sensor is open. Or when the sensor power voltage is outside the standard. | |
| C1103 | FR RH SENSOR-1 | Circuit of front RH wheel sensor is open. Or when the sensor power voltage is outside the standard. | |
| C1104 | FR LH SENSOR-1 | Circuit of front LH wheel sensor is open. Or when the sensor power voltage is outside the standard. | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-32. "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294467

CAUTION:

Never check the between wheel sensor harness connector terminals.

1. CHECK WHEEL SENSOR

1. Turn the ignition switch OFF.
2. Check the wheel sensor for damage.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. REPLACE WHEEL SENSOR (1)

1. Replace wheel sensor.
 - Front: Refer to [BRC-110. "FRONT WHEEL SENSOR : Exploded View"](#).
 - Rear: Refer to [BRC-111. "REAR WHEEL SENSOR : Exploded View"](#).
2. Erase self-diagnosis result for "ABS".
3. Turn the ignition switch OFF, and wait 10 seconds or more.
4. Start the engine.
5. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
6. Stop the vehicle.

C1101, C1102, C1103, C1104 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

7. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> GO TO 3.

NO >> INSPECTION END

3.CHECK CONNECTOR

1. Turn the ignition switch OFF.

2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

3. Check the wheel sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts, securely lock the harness connector, and GO TO 4.

4.PERFORM SELF-DIAGNOSIS (1)

1. Erase self-diagnosis result for "ABS" with CONSULT.

2. Turn the ignition switch OFF, and wait 10 seconds or more.

3. Start the engine.

4. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.

5. Stop the vehicle.

6. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> GO TO 5.

NO >> INSPECTION END

5.CHECK TERMINAL

1. Turn the ignition switch OFF.

2. Disconnect ABS actuator and electric unit (control unit) harness connector and then check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

3. Disconnect wheel sensor harness connector and check the each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts and GO TO 6.

6.PERFORM SELF-DIAGNOSIS (2)

1. Connect ABS actuator and electric unit (control unit) harness connector.

2. Connect wheel sensor harness connector.

3. Erase self-diagnosis result for "ABS".

4. Turn the ignition switch OFF, and wait 10 seconds or more.

5. Start the engine.

6. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.

7. Stop the vehicle.

8. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> GO TO 7.

NO >> INSPECTION END

7.CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.

2. Disconnect ABS actuator and electric unit (control unit) harness connector.

3. Disconnect wheel sensor harness connector.

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Check the continuity when steering wheel is steered to RH and LH, or center harness in wheel housing is moved.)

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Measurement connector and terminal for power supply circuit

| ABS actuator and electric unit (control unit) | | Wheel sensor | | Continuity |
|---|----------|----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E41 | 26 | E60 (Front LH) | 1 | Existed |
| | 9 | E27 (Front RH) | | |
| | 6 | B334 (Rear LH) | | |
| | 7 | B333 (Rear RH) | | |

Measurement connector and terminal for signal circuit

| ABS actuator and electric unit (control unit) | | Wheel sensor | | Continuity |
|---|----------|----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E41 | 5 | E60 (Front LH) | 2 | Existed |
| | 10 | E27 (Front RH) | | |
| | 27 | B334 (Rear LH) | | |
| | 29 | B333 (Rear RH) | | |

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace error-detected parts and GO TO 8.

8. PERFORM SELF-DIAGNOSIS (3)

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF, and wait 10 seconds or more.
5. Start the engine.
6. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
7. Stop the vehicle.
8. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> GO TO 9.

NO >> INSPECTION END

9. REPLACE WHEEL SENSOR

1. Replace wheel sensor.
 - Front: Refer to [BRC-110, "FRONT WHEEL SENSOR : Exploded View"](#).
 - Rear: Refer to [BRC-111, "REAR WHEEL SENSOR : Exploded View"](#).
2. Erase self-diagnosis result for "ABS" with CONSULT.
3. Turn the ignition switch OFF, and wait 10 seconds or more.
4. Start the engine.
5. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
6. Stop the vehicle.
7. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> INSPECTION END

Special Repair Requirement

INFOID:000000008294468

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1105, C1106, C1107, C1108 WHEEL SENSOR

Description

INFOID:000000008294469

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294470

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|----------------|--|---|
| C1105 | RR RH SENSOR-2 | When the circuit in the rear RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit. | <ul style="list-style-type: none">• Harness or connector• Wheel sensor• ABS actuator and electric unit (control unit) |
| C1106 | RR LH SENSOR-2 | When the circuit in the rear LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit. | |
| C1107 | FR RH SENSOR-2 | When the circuit in the front RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit. | |
| C1108 | FR LH SENSOR-2 | When the circuit in the front LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit. | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-35, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294471

CAUTION:

Never check the between wheel sensor harness connector terminals.

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY SYSTEM

Check the ABS actuator and electric unit (control unit) power supply system. Refer to [BRC-81, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace error-detected parts.

2. CHECK TIRE

1. Turn the ignition switch OFF.
2. Check the tire air pressure, wear and size. Refer to [WT-49, "Tire Air Pressure"](#).

C1105, C1106, C1107, C1108 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Adjust air pressure or replace tire and GO TO 3.

3.CHECK DATA MONITOR (1)

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

- YES >> GO TO 4.
NO >> GO TO 5.

4.PERFORM SELF-DIAGNOSIS (1)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

- YES >> GO TO 5.
NO >> INSPECTION END

5.CHECK WHEEL SENSOR

1. Turn the ignition switch OFF.
2. Check the wheel sensor for damage.
3. Remove dust and foreign matter adhered to the sensor rotor with a vacuum dust collector through the wheel sensor mounting hole.

CAUTION:

Install wheel sensor with no backlash and float, and tighten the mounting bolt to the specified torque.

- Front: Refer to [BRC-110, "FRONT WHEEL SENSOR : Exploded View"](#).
- Rear: Refer to [BRC-111, "REAR WHEEL SENSOR : Exploded View"](#).

Is the inspection result normal?

- YES >> GO TO 8.
NO >> GO TO 6.

6.REPLACE WHEEL SENSOR (1)

1. Replace wheel sensor.
 - Front: Refer to [BRC-110, "FRONT WHEEL SENSOR : Exploded View"](#).
 - Rear: Refer to [BRC-111, "REAR WHEEL SENSOR : Exploded View"](#).
2. Erase self-diagnosis result for "ABS" with CONSULT.
3. Turn the ignition switch OFF, and wait 10 seconds or more.
4. Start the engine.
5. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

6. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

- YES >> GO TO 7.
NO >> GO TO 19.

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

7. PERFORM SELF-DIAGNOSIS (2)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 19.

NO >> INSPECTION END

8. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the wheel sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace error-detected parts, securely lock the harness connector, and GO TO 9.

9. CHECK DATA MONITOR (2)

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 10.

NO >> GO TO 11.

10. PERFORM SELF-DIAGNOSIS (3)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 11.

NO >> INSPECTION END

11. CHECK TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and then check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
3. Disconnect wheel sensor harness connector and check the each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair or replace error-detected parts and GO TO 12.

12. CHECK DATA MONITOR (3)

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS" with CONSULT.
4. Turn the ignition switch OFF, and wait 10 seconds or more.
5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

C1105, C1106, C1107, C1108 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 13.

NO >> GO TO 14.

13.PERFORM SELF-DIAGNOSIS (4)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 14.

NO >> INSPECTION END

14.CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect wheel sensor harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| E41 | 26, 5 | Ground | Not existed |
| | 9, 10 | | |
| | 6, 27 | | |
| | 7, 29 | | |

Is the inspection result normal?

YES >> GO TO 15.

NO >> Repair or replace error-detected parts and GO TO 15.

15.CHECK DATA MONITOR (4)

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS" with CONSULT.
4. Turn the ignition switch OFF, and wait 10 seconds or more.
5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 16.

NO >> GO TO 17.

16.PERFORM SELF-DIAGNOSIS (5)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 17.

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

NO >> INSPECTION END

17. REPLACE WHEEL SENSOR

1. Replace wheel sensor.
 - Front: Refer to [BRC-110. "FRONT WHEEL SENSOR : Exploded View"](#).
 - Rear: Refer to [BRC-111. "REAR WHEEL SENSOR : Exploded View"](#).
2. Erase self-diagnosis result for "ABS" with CONSULT.
3. Turn the ignition switch OFF, and wait 10 seconds or more.
4. Start the engine.
5. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

6. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%. respectively?

YES >> GO TO 18.

NO >> GO TO 19.

18. PERFORM SELF-DIAGNOSIS (6)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 19.

NO >> INSPECTION END

19. REPLACE SENSOR ROTOR

1. Replace sensor rotor.
 - Front: Refer to [BRC-112. "FRONT SENSOR ROTOR : Exploded View"](#).
 - Rear: Refer to [BRC-112. "REAR SENSOR ROTOR : Exploded View"](#).
2. Erase self-diagnosis result for "ABS" with CONSULT.
3. Turn the ignition switch OFF, and wait 10 seconds or more.
4. Start the engine.
5. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
6. Stop the vehicle.
7. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Exploded View"](#).

NO >> INSPECTION END

Special Repair Requirement

INFOID:000000008294472

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1109 POWER AND GROUND SYSTEM

Description

INFOID:000000008294473

Supplies electric power to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294474

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|----------------------------|---|---|
| C1109 | BATTERY VOLTAGE [ABNORMAL] | When the ABS actuator and electric unit (control unit) power supply voltage is lower than normal. | <ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)• IPDM E/R |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1109" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-40, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294475

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| E41 | 28 | Ground | Approx. 0 V |

4. Turn the ignition switch ON.

CAUTION:

Never start the engine.

5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-----------------|
| Connector | Terminal | | |
| E41 | 28 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 10A fuse (#45).

C1109 POWER AND GROUND SYSTEM

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

3. Disconnect IPDM E/R harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and IPDM E/R harness connector.

| ABS actuator and electric unit (control unit) | | IPDM E/R | | Continuity |
|---|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E41 | 28 | E5 | 25 | Existed |

Is the inspection result normal?

YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-22, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).

NO >> Repair or replace error-detected parts.

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| E41 | 1 | Ground | Existed |
| | 4 | | |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4.CHECK TERMINAL

1. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check the IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294476

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

DTC Logic

INFOID:000000008294477

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|--------------------|---|---|
| C1110 | CONTROLLER FAILURE | When there is an internal malfunction in the ABS actuator and electric unit (control unit). | ABS actuator and electric unit (control unit) |
| C1153 | EMERGENCY BRAKE | When ABS actuator and electric unit (control unit) is malfunctioning. (Pressure increase is too much or too little) | |
| C1170 | VARIANT CODING | In a case where VARIANT CODING is different. | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1110", "C1153" or "C1170" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-42. "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294478

1. REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

CAUTION:

Replace ABS actuator and electric unit (control unit) when self-diagnostic result shows items other than those applicable.

>> Replace ABS actuator and electric unit (control unit).

Special Repair Requirement

INFOID:000000008294479

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

Description

INFOID:000000008294480

PUMP

The pump returns the brake fluid stored in the reservoir to the master cylinder by reducing the pressure.

MOTOR

The motor drives the pump according to the signals transmitted by the ABS actuator and electric unit (control unit).

MOTOR RELAY

Activates or deactivates motor according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294481

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|--------------|--|--|
| C1111 | PUMP MOTOR | During the actuator motor operating with ON, when the actuator motor turns OFF, or when the control line for actuator motor relay is open. | <ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) |
| | | During the actuator motor operating with OFF, when the actuator motor turns ON, or when the control line for relay is shorted to ground. | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1111" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-43, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294482

1. CHECK ABS MOTOR AND MOTOR RELAY POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 50A fusible link (#M).
4. Check the voltage between the ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-----------------|
| Connector | Terminal | | |
| E41 | 2 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

2.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| E41 | 1 | Ground | Existed |
| | 4 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294483

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1115 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

C1115 WHEEL SENSOR

Description

INFOID:000000008294484

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294485

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|---------------------------------|---|---|
| C1115 | ABS SENSOR [ABNORMAL SIGNAL] | When wheel sensor input signal is malfunctioning. | <ul style="list-style-type: none">• Harness or connector• Wheel sensor• ABS actuator and electric unit (control unit) |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1115" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-45, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294486

CAUTION:

Never check the between wheel sensor harness connector terminals.

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY SYSTEM

Check the ABS actuator and electric unit (control unit) power supply system. Refer to [BRC-81, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace error-detected parts.

2. CHECK TIRE

1. Turn the ignition switch OFF.
2. Check the tire air pressure, wear and size. Refer to [WT-49, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Adjust air pressure or replace tire and GO TO 3.

3. CHECK DATA MONITOR (1)

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

C1115 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 4.

NO >> GO TO 5.

4.PERFORM SELF-DIAGNOSIS (1)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.

2. Stop the vehicle.

3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1115" detected?

YES >> GO TO 5.

NO >> INSPECTION END

5.CHECK WHEEL SENSOR

1. Turn the ignition switch OFF.

2. Check the wheel sensor for damage.

3. Remove dust and foreign matter adhered to the sensor rotor with a vacuum dust collector through the wheel sensor mounting hole.

CAUTION:

Install wheel sensor with no backlash and float, and tighten the mounting bolt to the specified torque.

• Front: Refer to [BRC-110, "FRONT WHEEL SENSOR : Exploded View"](#).

• Rear: Refer to [BRC-111, "REAR WHEEL SENSOR : Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 6.

6.REPLACE WHEEL SENSOR (1)

1. Replace wheel sensor.

- Front: Refer to [BRC-110, "FRONT WHEEL SENSOR : Exploded View"](#).

- Rear: Refer to [BRC-111, "REAR WHEEL SENSOR : Exploded View"](#).

2. Erase self-diagnosis result for "ABS" with CONSULT.

3. Turn the ignition switch OFF, and wait 10 seconds or more.

4. Start the engine.

5. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

6. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 7.

NO >> GO TO 19.

7.PERFORM SELF-DIAGNOSIS (2)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.

2. Stop the vehicle.

3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1115" detected?

YES >> GO TO 19.

NO >> INSPECTION END

8.CHECK CONNECTOR

1. Turn the ignition switch OFF.

2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

3. Check the wheel sensor harness connector for disconnection or looseness.

C1115 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace error-detected parts, securely lock the harness connector, and GO TO 9.

9. CHECK DATA MONITOR (2)

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the difference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 10.

NO >> GO TO 11.

10. PERFORM SELF-DIAGNOSIS (3)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1115" detected?

YES >> GO TO 11.

NO >> INSPECTION END

11. CHECK TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and then check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
3. Disconnect wheel sensor harness connector and check the each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair or replace error-detected parts and GO TO 12.

12. CHECK DATA MONITOR (3)

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS" with CONSULT.
4. Turn the ignition switch OFF, and wait 10 seconds or more.
5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the difference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 13.

NO >> GO TO 14.

13. PERFORM SELF-DIAGNOSIS (4)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1115" detected?

C1115 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 14.
 NO >> INSPECTION END

14. CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect wheel sensor harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Check the continuity when steering wheel is steered to RH and LH, or center harness in wheel housing is moved.)

Measurement connector and terminal for power supply circuit

| ABS actuator and electric unit (control unit) | | Wheel sensor | | Continuity |
|---|----------|----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E41 | 26 | E60 (Front LH) | 1 | Existed |
| | 9 | E27 (Front RH) | | |
| | 6 | B334 (Rear LH) | | |
| | 7 | B333 (Rear RH) | | |

Measurement connector and terminal for signal circuit

| ABS actuator and electric unit (control unit) | | Wheel sensor | | Continuity |
|---|----------|----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E41 | 5 | E60 (Front LH) | 2 | Existed |
| | 10 | E27 (Front RH) | | |
| | 27 | B334 (Rear LH) | | |
| | 29 | B333 (Rear RH) | | |

5. Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| E41 | 26, 5 | Ground | Not existed |
| | 9, 10 | | |
| | 6, 27 | | |
| | 7, 29 | | |

Is the inspection result normal?

- YES >> GO TO 15.
 NO >> Repair or replace error-detected parts and GO TO 15.

15. CHECK DATA MONITOR (4)

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for “ABS” with CONSULT.
4. Turn the ignition switch OFF, and wait 10 seconds or more.
5. Start the engine.
6. Select “ABS” and “DATA MONITOR”, check the “FR LH SENSOR”, “FR RH SENSOR”, “RR LH SENSOR” and “RR RH SENSOR” with CONSULT.

NOTE:

Set the “DATA MONITOR” recording speed to “10 msec”.

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%. respectively?

- YES >> GO TO 16.

C1115 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 17.

16.PERFORM SELF-DIAGNOSIS (5)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1115" detected?

YES >> GO TO 17.

NO >> INSPECTION END

17.REPLACE WHEEL SENSOR

1. Replace wheel sensor.
 - Front: Refer to [BRC-110. "FRONT WHEEL SENSOR : Exploded View"](#).
 - Rear: Refer to [BRC-111. "REAR WHEEL SENSOR : Exploded View"](#).
2. Erase self-diagnosis result for "ABS" with CONSULT.
3. Turn the ignition switch OFF, and wait 10 seconds or more.
4. Start the engine.
5. Select "ABS" and "DATA MONITOR", check the "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR" with CONSULT.

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

6. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

Regarding the deference at 30 km/h (19 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%. respectively?

YES >> GO TO 18.

NO >> GO TO 19.

18.PERFORM SELF-DIAGNOSIS (6)

1. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
2. Stop the vehicle.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1115" detected?

YES >> GO TO 19.

NO >> INSPECTION END

19.REPLACE SENSOR ROTOR

1. Replace sensor rotor.
 - Front: Refer to [BRC-112. "FRONT SENSOR ROTOR : Exploded View"](#).
 - Rear: Refer to [BRC-112. "REAR SENSOR ROTOR : Exploded View"](#).
2. Erase self-diagnosis result for "ABS".
3. Turn the ignition switch OFF, and wait 10 seconds or more.
4. Start the engine.
5. Drive the vehicle at approx. 30 km/h (19 MPH) or more for approx. 1 minute.
6. Stop the vehicle.
7. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1115" detected?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Exploded View"](#).

NO >> INSPECTION END

Special Repair Requirement

INFOID:000000008294487

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1116 STOP LAMP SWITCH

Description

INFOID:000000008294488

The stop lamp switch transmits the stop lamp switch signal (ON/OFF) to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294489

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|--------------|---|---|
| C1116 | STOP LAMP SW | When a stop lamp switch signal is not input where the brake pedal is depressed. | <ul style="list-style-type: none">• Harness or connector• Stop lamp switch• ABS actuator and electric unit (control unit) |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1116" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-50, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294490

NOTE:

DTC "C1116" may be detected when the brake pedal and the accelerator pedal are simultaneously depressed for 1 minute or more while driving the vehicle. This is not a malfunction.

1. INTERVIEW FROM THE CUSTOMER

Check if the brake pedal and the accelerator pedal are simultaneously depressed for 1 minute or more while driving the vehicle.

Is there such a history?

- YES >> GO TO 2.
NO >> GO TO 3.

2. PERFORM SELF-DIAGNOSIS

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Start the engine.

CAUTION:

Never start the vehicle.

4. Depress the brake pedal several times.
5. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1116" detected?

- YES >> GO TO 3.
NO >> INSPECTION END

3. STOP LAMP FOR ILLUMINATION

Depress brake pedal and check that stop lamp turns ON.

C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Does stop lamp turn ON?

YES >> GO TO 5.

NO >> Check the stop lamp system. GO TO 4.

- Without daytime running light system: Refer to [EXL-61, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure"](#).
- With daytime running light system: Refer to [EXL-62, "WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure"](#).

4.CHECK DATA MONITOR (1)

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Start the engine.

CAUTION:

Never start the vehicle.

4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order with CONSULT. Check that data monitor displays "On" or "Off" when brake pedal is depress or release. Refer to [BRC-92, "Reference Value"](#).
5. Select "ABS", "DATA MONITOR" and "pressure sensor" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depress. Refer to [BRC-92, "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5.CHECK STOP LAMP SWITCH CLEARANCE

1. Turn the ignition switch OFF.
2. Check the stop lamp switch clearance. Refer to [BR-7, "Inspection and Adjustment"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Adjust stop lamp switch clearance. Refer to [BR-7, "Inspection and Adjustment"](#). GO TO 6.

6.CHECK DATA MONITOR (2)

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Start the engine.

CAUTION:

Never start the vehicle.

4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order with CONSULT. Check that data monitor displays "On" or "Off" when brake pedal is depress or release. Refer to [BRC-92, "Reference Value"](#).
5. Select "ABS", "DATA MONITOR" and "pressure sensor" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depress. Refer to [BRC-92, "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 7.

7.CHECK STOP LAMP SWITCH

Check the stop lamp switch. Refer to [BRC-53, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace stop lamp switch. Refer to [BR-18, "Exploded View"](#). GO TO 8.

8.CHECK DATA MONITOR (3)

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Start the engine.

CAUTION:

Never start the vehicle.

C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order with CONSULT. Check that data monitor displays "On" or "Off" when brake pedal is depress or release. Refer to [BRC-92, "Reference Value"](#).
5. Select "ABS", "DATA MONITOR" and "pressure sensor" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depress. Refer to [BRC-92, "Reference Value"](#).

Is the inspection result normal?

- YES >> INSPECTION END
NO >> GO TO 9.

9.CHECK CONNECTOR AND TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
4. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
5. Disconnect stop lamp switch harness connector.
6. Check the stop lamp switch harness connector for disconnection or looseness.
7. Check the stop lamp switch pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 11.
NO >> Repair or replace error-detected parts. GO TO 10.

10.CHECK DATA MONITOR (4)

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect stop lamp switch harness connector.
3. Erase self-diagnosis result for "ABS" with CONSULT.
4. Turn the ignition switch OFF, and wait 10 seconds or more.
5. Start the engine.
CAUTION:
Never start the vehicle.
6. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order with CONSULT. Check that data monitor displays "On" or "Off" when brake pedal is depress or release. Refer to [BRC-92, "Reference Value"](#).
7. Select "ABS", "DATA MONITOR" and "pressure sensor" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depress. Refer to [BRC-92, "Reference Value"](#).

Is the inspection result normal?

- YES >> INSPECTION END
NO >> GO TO 11.

11.CHECK STOP LAMP SWITCH CIRCUIT (1)

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Condition | Voltage |
|---|----------|--------|---------------------------|-----------------|
| Connector | Terminal | | | |
| E41 | 30 | Ground | Brake pedal depressed | Battery voltage |
| | | | Brake pedal not depressed | Approx. 0 V |

4. Turn the ignition switch ON.
5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Condition | Voltage |
|---|----------|--------|---------------------------|-----------------|
| Connector | Terminal | | | |
| E41 | 30 | Ground | Brake pedal depressed | Battery voltage |
| | | | Brake pedal not depressed | Approx. 0 V |

Is the inspection result normal?

C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Exploded View"](#).
 NO >> Repair or replace error-detected parts. GO TO 12.

12.CHECK STOP LAMP SWITCH CIRCUIT (2)

- Turn the ignition switch OFF.
- Disconnect stop lamp switch harness connector.
- Check the continuity between ABS actuator and electric unit (control unit) harness connector and stop lamp switch harness connector.

| ABS actuator and electric unit (control unit) | | Stop lamp switch | | Continuity |
|---|----------|------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E41 | 30 | E110*1 | 4 | Existed |
| | | E119*2 | 2 | |

*1: With ICC

*2: Without ICC

- Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| E41 | 30 | Ground | Not existed |

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Exploded View"](#).
 NO >> Repair or replace error-detected parts. GO TO 13.

13.CHECK DATA MONITOR (5)

- Connect ABS actuator and electric unit (control unit) harness connector.
- Connect stop lamp switch harness connector.
- Erase self-diagnosis result for "ABS" with CONSULT.
- Turn the ignition switch OFF, and wait 10 seconds or more.
- Start the engine.
CAUTION:
Never start the vehicle.
- Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order with CONSULT. Check that data monitor displays "On" or "Off" when brake pedal is depress or release. Refer to [BRC-92. "Reference Value"](#).
- Select "ABS", "DATA MONITOR" and "pressure sensor" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depress. Refer to [BRC-92. "Reference Value"](#).

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Exploded View"](#).

Component Inspection

INFOID:000000008294491

1.CHECK STOP LAMP SWITCH

- Turn the ignition switch OFF.
- Disconnect stop lamp switch harness connector.
- Check the continuity between stop lamp switch connector terminals.

| Stop lamp switch | Condition | Continuity |
|---|--|-------------|
| Terminal | | |
| 1 – 2 (Without ICC) 3 – 4 (With ICC) | Release stop lamp switch (When brake pedal is depressed.) | Existed |
| | Push stop lamp switch (When brake pedal is released.) | Not existed |

C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to [BR-18. "Exploded View"](#).

Special Repair Requirement

INFOID:000000008294492

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1120, C1122, C1124, C1126 IN ABS SOL

Description

INFOID:000000008294493

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294494

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|------------------|---|---|
| C1120 | FR LH IN ABS SOL | When the control unit detects a malfunction in the front LH inlet solenoid circuit. | ABS actuator and electric unit (control unit) |
| C1122 | FR RH IN ABS SOL | When the control unit detects a malfunction in the front RH inlet solenoid circuit. | |
| C1124 | RR LH IN ABS SOL | When the control unit detects a malfunction in the rear LH inlet solenoid circuit. | |
| C1126 | RR RH IN ABS SOL | When the control unit detects a malfunction in the rear RH inlet solenoid circuit. | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1120", "C1122", "C1124" or "C1126" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-55, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294495

1. CHECK SOLENOID VALVE POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 30A fusible link (#L).
4. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-----------------|
| Connector | Terminal | | |
| E41 | 3 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

2. CHECK SOLENOID VALVE GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| E41 | 1 | Ground | Existed |
| | 4 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294496

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1121, C1123, C1125, C1127 OUT ABS SOL

Description

INFOID:000000008294497

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294498

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|-------------------|--|---|
| C1121 | FR LH OUT ABS SOL | When the control unit detects a malfunction in the front LH outlet solenoid circuit. | ABS actuator and electric unit (control unit) |
| C1123 | FR RH OUT ABS SOL | When the control unit detects a malfunction in the front RH outlet solenoid circuit. | |
| C1125 | RR LH OUT ABS SOL | When the control unit detects a malfunction in the rear LH outlet solenoid circuit. | |
| C1127 | RR RH OUT ABS SOL | When the control unit detects a malfunction in the rear RH outlet solenoid circuit. | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1121", "C1123", "C1125" or "C1127" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-57, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294499

1. CHECK SOLENOID VALVE POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 30A fusible link (#L).
4. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-----------------|
| Connector | Terminal | | |
| E41 | 3 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

2. CHECK SOLENOID VALVE GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| E41 | 1 | Ground | Existed |
| | 4 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294500

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1130, C1131, C1132 ENGINE SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1130, C1131, C1132 ENGINE SIGNAL

Description

INFOID:000000008294501

ABS actuator and electric unit (control unit) and ECM exchange the engine signal with CAN communication line.

DTC Logic

INFOID:000000008294502

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|-----------------|---|---|
| C1130 | ENGINE SIGNAL 1 | Major engine components are malfunctioning. | <ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)• ECM• CAN communication line |
| C1131 | ENGINE SIGNAL 2 | | |
| C1132 | ENGINE SIGNAL 3 | | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1130", "C1131" or "C1132" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-59, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294503

1. PERFORM ECM SELF-DIAGNOSIS

Perform self-diagnosis for "ENGINE" with CONSULT.

Is any DTC detected?

- YES >> Check the DTC.
NO >> GO TO 2.

2. PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

1. Erase self-diagnosis results for "ABS" with CONSULT.
2. Turn the ignition switch OFF.
3. Start the engine. Drive the vehicle for a while.
4. Make sure that malfunction indicator lamp (MIL) turns OFF.
5. Stop the engine. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1130", "C1131" or "C1132" detected?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).
NO >> Check the ABS actuator and electric unit (control unit) harness connector terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294504

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

C1130, C1131, C1132 ENGINE SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9](#). "[ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement](#)".

>> END

C1140 ACTUATOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1140 ACTUATOR RELAY SYSTEM

Description

INFOID:000000008294505

Activates or deactivates each solenoid valve according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294506

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|----------------|--|--|
| C1140 | ACTUATOR RELAY | During the actuator relay operating with OFF, when the actuator relay turns ON, or when the control line for the relay is shorted to the ground. | <ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) |
| | | During the actuator relay operating with ON, when the actuator relay turns ON, or when the control line for the relay is open. | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1140" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-61, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294507

1. CHECK ACTUATOR RELAY POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 30A fusible link (#L).
4. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-----------------|
| Connector | Terminal | | |
| E41 | 3 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

2. CHECK ACTUATOR RELAY GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

C1140 ACTUATOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| E41 | 1 | Ground | Existed |
| | 4 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294508

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1142 PRESS SENSOR

Description

INFOID:000000008294509

The pressure sensor converts the brake fluid pressure to an electric signal and transmits it to the ABS actuator and electric unit (control unit). [The pressure sensor is integrated in the ABS actuator and electric unit (control unit).]

DTC Logic

INFOID:000000008294510

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|-------------------|---|---|
| C1142 | PRESS SEN CIRCUIT | Pressure sensor signal line is open or shorted, or pressure sensor is malfunctioning. | <ul style="list-style-type: none"> • Harness or connector • Stop lamp switch • ABS actuator and electric unit (control unit) |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1142" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-63, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294511

1. CHECK STOP LAMP SWITCH

Check the stop lamp switch system. Refer to [BRC-50, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace error-detected parts.

2. CHECK BRAKE SYSTEM

1. Check the brake fluid leakage: Refer to [BR-10, "Inspection"](#).
2. Check the brake piping: Refer to [BR-25, "FRONT : Inspection"](#) (front), [BR-29, "REAR : Inspection"](#) (rear).
3. Check the brake pedal: Refer to [BR-19, "Inspection and Adjustment"](#).
4. Check the master cylinder: Refer to [BR-33, "Inspection"](#).
5. Check the brake booster: Refer to [BR-35, "Inspection and Adjustment"](#).
6. Check the brake booster pressure sensor: Refer to [BR-37, "Inspection"](#).
7. Check the vacuum lines: Refer to [BR-39, "Inspection"](#).
8. Check the front disc brake: Refer to [BR-47, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#) (2 piston type), [BR-51, "BRAKE CALIPER ASSEMBLY \(4 PISTON TYPE\) : Inspection"](#) (4 piston type).
9. Check the rear disc brake: Refer to [BR-60, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Inspection"](#) (1 piston type), [BR-65, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#) (2 piston type).

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Repair or replace error-detected parts.

C1142 PRESS SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

3.PERFORM SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1142" detected?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Exploded View"](#).

NO >> Check the ABS actuator and electric unit (control unit) harness connector terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294512

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1143 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1143 STEERING ANGLE SENSOR

Description

INFOID:000000008294513

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

DTC Logic

INFOID:000000008294514

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|--------------------|--|--|
| C1143 | ST ANG SEN CIRCUIT | Steering angle sensor is malfunctioning. | <ul style="list-style-type: none"> • Harness or connector • Steering angle sensor • ABS actuator and electric unit (control unit) |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1143" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-65, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294515

1. CHECK STEERING ANGLE SENSOR POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect steering angle sensor harness connector.
3. Check the voltage between steering angle sensor harness connector and ground.

| Steering angle sensor | | — | Voltage |
|-----------------------|----------|--------|-------------|
| Connector | Terminal | | |
| M37 | 8 | Ground | Approx. 0 V |

4. Turn the ignition switch ON.
CAUTION:
Never start the engine.
5. Check the voltage between steering angle sensor harness connector and ground.

| Steering angle sensor | | — | Voltage |
|-----------------------|----------|--------|-----------------|
| Connector | Terminal | | |
| M37 | 8 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> GO TO 2.

2. CHECK STEERING ANGLE SENSOR POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.

C1143 STEERING ANGLE SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

2. Check the 10A fuse (#45).
3. Disconnect IPDM E/R harness connector.
4. Check the continuity between steering angle sensor harness connector and IPDM E/R harness connector.

| Steering angle sensor | | IPDM E/R | | Continuity |
|-----------------------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M37 | 8 | E5 | 25 | Existed |

Is the inspection result normal?

YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-22, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).

NO >> Repair or replace error-detected parts.

3.CHECK STEERING ANGLE SENSOR GROUND

Check the continuity between steering angle sensor harness connector and ground.

| Steering angle sensor | | — | Continuity |
|-----------------------|----------|--------|------------|
| Connector | Terminal | | |
| M37 | 7 | Ground | Existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4.CHECK TERMINAL

1. Disconnect ABS actuator and electric unit (control unit) harness connector.
2. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
3. Check the steering angle sensor pin terminals for damage or loose connection with harness connector.
4. Check the IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5.CHECK DATA LINE

Check the "STRG BRANCH LINE CIRCUIT". Refer to [LAN-49, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts. Refer to [BRC-108, "Precautions for Harness Repair"](#).

Special Repair Requirement

INFOID:000000008294516

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

DTC Logic

INFOID:000000008294517

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|-------------------|--|--|
| C1144 | ST ANG SEN SIGNAL | Neutral position of steering angle sensor is not finished. | <ul style="list-style-type: none">• Harness or connector• Steering angle sensor• ABS actuator and electric unit (control unit) |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Select "ABS", "WORK SUPPORT" and "ST ANGLE SENSOR ADJUSTMENT" in order with CONSULT, and perform adjust the neutral position of steering angle sensor.
3. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1144" detected?

YES >> Proceed to diagnosis procedure. Refer to [BRC-67, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294518

1. CHECK STEERING ANGLE SENSOR

Check the steering angle sensor. Refer to [BRC-65, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294519

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1145, C1146 YAW RATE/SIDE G SENSOR

Description

INFOID:000000008294520

The yaw rate/side G sensor detects the yaw rate/side G affecting the vehicle, and transmits the data to the ABS actuator and electric unit (control unit) as an analog voltage signal.

DTC Logic

INFOID:000000008294521

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|--------------------|---|---|
| C1145 | YAW RATE SENSOR | Yaw rate sensor is malfunctioning, or the yaw rate sensor signal line is open or shorted. | <ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)• Yaw rate/side G sensor |
| C1146 | SIDE G-SEN CIRCUIT | Side G sensor is malfunctioning, or circuit of side G sensor is open or shorted. | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1145" or "C1146" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-68, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294522

CAUTION:

- Sudden turns (such as spin turns, acceleration turns), drifting, etc., when VDC function is off (VDC OFF switch "ON") may cause yaw rate/side G sensor system to indicate a malfunction. However, this is not a malfunction, if normal operation can be resumed after restarting engine. Then erase memory of self-diagnosis.
- If vehicle is on turn-table at entrance to parking garage, or on other moving surface, VDC warning lamp may illuminate and CONSULT self-diagnosis may indicate yaw rate sensor system malfunction. However, in this case there is no malfunction in yaw rate sensor system. Take vehicle off of turn-table or other moving surface, and start the engine. Results will return to normal.

1. CHECK YAW RATE/SIDE G SENSOR POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect yaw rate/side G sensor harness connector.
3. Check the voltage between yaw rate/side G sensor harness connector and ground.

| Yaw rate/side G sensor | | — | Voltage |
|------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| M143 | 4 | Ground | Approx. 0 V |

4. Turn the ignition switch ON.

CAUTION:

Never start the engine.

5. Check the voltage between yaw rate/side G sensor harness connector and ground.

C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

| Yaw rate/side G sensor | | — | Voltage |
|------------------------|----------|--------|-----------------|
| Connector | Terminal | | |
| M143 | 4 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 2.

2.CHECK YAW RATE/SIDE G SENSOR POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 10A fuse (#45).
3. Disconnect IPDM E/R harness connector.
4. Check the continuity between yaw rate/side G sensor harness connector and IPDM E/R harness connector.

| Yaw rate/side G sensor | | IPDM E/R | | Continuity |
|------------------------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M143 | 4 | E5 | 25 | Existed |

Is the inspection result normal?

- YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-22, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- NO >> Repair or replace error-detected parts.

3.CHECK YAW RATE/SIDE G SENSOR GROUND

Check the continuity between yaw rate/side G sensor harness connector and ground.

| Yaw rate/side G sensor | | — | Continuity |
|------------------------|----------|--------|------------|
| Connector | Terminal | | |
| M143 | 1 | Ground | Existed |

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace error-detected parts.

4.CHECK YAW RATE/SIDE G SENSOR HARNESS

1. Disconnect ABS actuator and electric unit (control unit) harness connector.
2. Check the continuity between yaw rate/side G sensor harness connector and ABS actuator and electric unit (control unit) harness connector.

| Yaw rate/side G sensor | | ABS actuator and electric unit (control unit) | | Continuity |
|------------------------|----------|---|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M143 | 2 | E41 | 25 | Existed |
| | 3 | | 45 | |

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace error-detected parts. Refer to [BRC-108, "Precautions for Harness Repair"](#).

5.CHECK TERMINAL

1. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check the yaw rate/side G sensor pin terminals for damage or loose connection with harness connector.
3. Check the IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 6.

C1145, C1146 YAW RATE/SIDE G SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace error-detected parts.

6. REPLACE YAW RATE/SIDE G SENSOR

1. Replace yaw rate/side G sensor. Refer to [BRC-116, "Exploded View"](#).
2. Erase self-diagnosis results for "ABS" with CONSULT.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.

CAUTION:

Never start the engine.

5. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1145" or "C1146" detected?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> INSPECTION END

Special Repair Requirement

INFOID:000000008294523

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1147, C1148, C1149, C1150 USV/HSV LINE

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1147, C1148, C1149, C1150 USV/HSV LINE

Description

INFOID:000000008294524

USV1, USV2 (CUT VALVE)

The cut valve shuts off the normal brake fluid path from the master cylinder, when VDC/TCS is activated.

HSV1, HSV2 (SUCTION VALVE)

The suction valve supplies the brake fluid from the master cylinder to the pump, when VDC/TCS is activated.

DTC Logic

INFOID:000000008294525

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|-----------------|---|--|
| C1147 | USV LINE[FL-RR] | VDC switch-over solenoid valve (USV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground. | <ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) |
| C1148 | USV LINE[FR-RL] | VDC switch-over solenoid valve (USV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground. | |
| C1149 | HSV LINE[FL-RR] | VDC switch-over solenoid valve (HSV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground. | |
| C1150 | HSV LINE[FR-RL] | VDC switch-over solenoid valve (HSV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground. | |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1147", "C1148", "C1149" or "C1150" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-71, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294526

1. CHECK VDC SWITCH-OVER VALVE POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 30A fusible link (#L).
4. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-----------------|
| Connector | Terminal | | |
| E41 | 3 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 2.

C1147, C1148, C1149, C1150 USV/HSV LINE

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6. "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

2.CHECK VDC SWITCH-OVER VALVE GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| E41 | 1 | Ground | Existed |
| | 4 | | |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294527

1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1155 BRAKE FLUID LEVEL SWITCH

Description

INFOID:000000008294528

The brake fluid level switch converts the brake fluid level to an electric signal and transmits it to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008294529

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|--------------------|---|--|
| C1155 | BR FLUID LEVEL LOW | Brake fluid level is low or communication line between the ABS actuator and electric unit (control unit) and brake fluid level switch is open or shorted. | <ul style="list-style-type: none">• Harness or connector• Brake fluid level switch• Unified meter and A/C amp.• Combination meter |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1155" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-73, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294530

1. CHECK BRAKE FLUID LEVEL

1. Turn the ignition switch OFF.
2. Check the brake fluid level. Refer to [BR-10, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Refill brake fluid. Refer to [BR-10, "Refilling"](#).

2. PERFORM SELF-DIAGNOSIS (1)

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Turn the ignition switch ON.

CAUTION:

Never start the engine.

4. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1155" detected?

- YES >> INSPECTION END
NO >> GO TO 3.

3. CHECK BRAKE FLUID LEVEL SWITCH

Check the brake fluids level switch. Refer to [BRC-75, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Replace reservoir tank. Refer to [BR-30, "Exploded View"](#). GO TO 4.

C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

4.PERFORM SELF-DIAGNOSIS (2)

1. Erase self-diagnosis result for "ABS" with CONSULT.
2. Turn the ignition switch OFF, and wait 10 seconds or more.
3. Turn the ignition switch ON.

CAUTION:

Never start the engine.

4. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1155" detected?

- YES >> INSPECTION END
NO >> GO TO 5.

5.CHECK CONNECTOR AND TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector.
3. Check the brake fluid level switch harness connector for disconnection or looseness.
4. Check the brake fluid level switch pin terminals for damage or loose connection with harness connector.
5. Disconnect combination meter harness connector.
6. Check the combination meter harness connector for disconnection or looseness.
7. Check the combination meter pin terminals for damage or loose connection with harness connector.
8. Disconnect ABS actuator and electric unit (control unit) harness connector.
9. Check the ABS actuator and electric unit (control unit) harness connector harness connector for disconnection or looseness.
10. Check ABS actuator and electric unit (control unit) harness connector pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair or replace error-detected parts. GO TO 6.

6.PERFORM SELF-DIAGNOSIS (3)

1. Connect brake fluid level switch harness connector.
2. Connect combination meter harness connector.
3. Connect ABS actuator and electric unit (control unit) harness connector.
4. Erase self-diagnosis result for "ABS" with CONSULT.
5. Turn the ignition switch OFF, and wait 10 seconds or more.
6. Turn the ignition switch ON.

CAUTION:

Never start the engine.

7. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1155" detected?

- YES >> INSPECTION END
NO >> GO TO 7.

7.CHECK BRAKE FLUID LEVEL SWITCH HARNESS

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector.
3. Disconnect combination meter harness connector.
4. Disconnect unified meter and A/C amp. harness connector.
5. Check the continuity between brake fluid level switch harness connector and combination meter harness connector.

| Brake fluid level switch | | Combination meter | | Continuity |
|--------------------------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E47 | 1 | M53 | 28 | Existed |

6. Check the continuity between brake fluid level switch harness connector and ground.

C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

| Brake fluid level switch | | — | Continuity |
|--------------------------|----------|--------|-------------|
| Connector | Terminal | | |
| E47 | 1 | Ground | Not existed |

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace error-detected parts. GO TO 8.

8.CHECK BRAKE FLUID LEVEL SWITCH GROUND

Check the continuity between brake fluid level switch harness connector and ground.

| Brake fluid level switch | | — | Continuity |
|--------------------------|----------|--------|------------|
| Connector | Terminal | | |
| E47 | 2 | Ground | Existed |

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace error-detected parts. GO TO 9.

9.CHECK COMBINATION METER

Check the combination meter. Refer to [MWI-38. "CONSULT Function \(METER/M&A\)"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Exploded View"](#).

NO >> Repair or replace combination meter. Refer to [MWI-111. "Exploded View"](#).

Component Inspection

INFOID:000000008294531

1.CHECK BRAKE FLUID LEVEL SWITCH

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector.
3. Check the continuity between brake fluid level switch connector terminals.

| Brake fluid level switch | Condition | Continuity |
|--------------------------|--|-------------|
| Terminal | | |
| 1 – 2 | When brake fluid is full in the reservoir tank. | Not existed |
| | When brake fluid is empty in the reservoir tank. | Existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace reservoir tank. Refer to [BR-30. "Exploded View"](#).

Special Repair Requirement

INFOID:000000008294532

1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

C1185 ICC UNIT

Description

INFOID:000000008294533

The ABS actuator and electric unit (control unit) and the ICC sensor integrated unit exchange signals via the CAN communication line.

DTC Logic

INFOID:000000008294534

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|--------------|--|---|
| C1185 | ACC CONT | ICC sensor integrated unit internal malfunction. | <ul style="list-style-type: none"> Harness or connector ICC sensor integrated unit ABS actuator and electric unit (control unit) CAN communication line |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1185" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-76, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294535

1. PERFORM ICC INTEGRATED UNIT SELF DIAGNOSIS

Perform self-diagnosis for "ICC/ADAS" with CONSULT.

Is any DTC detected?

- YES >> Check the DTC.
 NO >> GO TO 2.

2. PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSIS

1. Erase self-diagnosis results for "ABS" with CONSULT.
2. Turn the ignition switch OFF.
3. Start the engine. Drive the vehicle for a while.
4. Stop the engine. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "C1185" detected?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).
 NO >> Check the ABS actuator and electric unit (control unit) harness connector terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294536

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

U1000 CAN COMM CIRCUIT

Description

INFOID:000000008294537

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000008294538

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|------------------|---|--|
| U1000 | CAN COMM CIRCUIT | When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or more. | <ul style="list-style-type: none">CAN communication lineABS actuator and electric unit (control unit) |

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "U1000" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-78, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294539

1. PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "U1000" detected?

- YES >> Proceed to diagnosis procedure. Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).
NO >> INSPECTION END

Special Repair Requirement

INFOID:000000008294540

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

U1002 SYSTEM COMM (CAN)

Description

INFOID:000000008294541

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000008294542

DTC DETECTION LOGIC

| DTC | Display item | Malfunction detected condition | Possible cause |
|-------|-------------------|---|---|
| U1002 | SYSTEM COMM (CAN) | When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or less. | <ul style="list-style-type: none"> • CAN communication line • ABS actuator and electric unit (control unit) |

A
B
C
D
E
BRC

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT.

Is DTC "U1002" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-79, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008294543

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

1. Select "ABS" and "CAN Diagnosis Support Monitor" in order with CONSULT.
2. Check the malfunction history between each control unit connected to ABS actuator and electric unit (control unit).

Check the result of "PAST"?

All items are "OK">>Check the intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).
"TRANSMIT DIAG" is other than "OK">>GO TO 2.

A control unit other than ABS actuator and electric unit (control unit) is anything other than "OK">>GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

Check the ABS actuator and electric unit (control unit) harness connector terminals No. 14 and 35 for damage or loose connection.

Is the inspection result normal?

- YES >> Erase self-diagnosis results. Then perform self-diagnosis for "ABS" with CONSULT.
- NO >> Recheck the terminals for damage or loose connection. Refer to [LAN-6, "Precautions for Harness Repair"](#).

G
H
I
J
K
L
M
N
O
P

< DTC/CIRCUIT DIAGNOSIS >

3. CHECK APPLICABLE CONTROL UNIT

Check terminals of each harness connector for damage or loose connection.

Is the inspection result normal?

YES >> Erase self-diagnosis results. Then perform self-diagnosis for applicable control unit with CONSULT.

NO >> Recheck the terminals for damage or loose connection. Refer to [LAN-6, "Precautions for Harness Repair"](#).

Special Repair Requirement

INFOID:000000008294544

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

POWER SUPPLY AND GROUND CIRCUIT

Description

INFOID:000000008294545

Supplies power to ABS actuator and electric unit (control unit).

Diagnosis Procedure

INFOID:000000008294546

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-------------|
| Connector | Terminal | | |
| E41 | 28 | Ground | Approx. 0 V |

4. Turn the ignition switch ON.
CAUTION:
Never start the engine.
5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-----------------|
| Connector | Terminal | | |
| E41 | 28 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 10A fuse (#45).
3. Disconnect IPDM E/R harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and IPDM E/R harness connector.

| ABS actuator and electric unit (control unit) | | IPDM E/R | | Continuity |
|---|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E41 | 28 | E5 | 25 | Existed |

5. Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| E41 | 28 | Ground | No existed |

Is the inspection result normal?

- YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-22. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- NO >> Repair or replace error-detected parts.

3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) BATTERY POWER SUPPLY

1. Turn the ignition switch OFF.
2. Check the 50A fusible link (#M) and 30A fusible link (#L).
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

| ABS actuator and electric unit (control unit) | | — | Voltage |
|---|----------|--------|-----------------|
| Connector | Terminal | | |
| E41 | 2 | Ground | Battery voltage |
| | 3 | | |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6. "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

4. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

| ABS actuator and electric unit (control unit) | | — | Continuity |
|---|----------|--------|------------|
| Connector | Terminal | | |
| E41 | 1 | Ground | Existed |
| | 4 | | |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace error-detected parts.

PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

PARKING BRAKE SWITCH

Description

INFOID:000000008294547

Operate the parking brake lever (M/T) or parking brake pedal (A/T), and brake warning lamp in the combination meter turns ON/OFF correctly.

Diagnosis Procedure

INFOID:000000008294548

1. CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect parking brake switch harness connector.
3. Disconnect combination meter harness connector.
4. Check the continuity between parking brake switch harness connector and combination meter harness connector.

| Parking brake switch | | Combination meter | | Continuity |
|----------------------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E107*1 B14*2 | 1 | M53 | 27 | Existed |

*1: A/T models

*2: M/T models

5. Check the continuity between parking brake switch harness connector and ground.

| Parking brake switch | | — | Continuity |
|----------------------|----------|--------|-------------|
| Connector | Terminal | | |
| E107*1 B14*2 | 1 | Ground | Not existed |

*1: A/T models

*2: M/T models

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2. CHECK PARKING BRAKE SWITCH

Check the parking brake switch. Refer to [BRC-84, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace parking brake switch. Refer to [PB-6, "PEDAL TYPE : Exploded View"](#) (pedal type), [PB-7, "LEVER TYPE : Exploded View"](#) (lever type).

3. CHECK CONNECTOR

Check the connector and terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK PARKING BRAKE SWITCH SIGNAL

Select "ABS", "DATA MONITOR" and "PARK BRAKE SW" in order with CONSULT, and perform the parking brake switch inspection.

PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

| Condition | PARK BRAKE SW (DATA MONITOR) |
|--|------------------------------|
| Parking brake lever (M/T) or parking brake pedal (A/T) is active | On |
| Parking brake lever (M/T) or parking brake pedal (A/T) is inactive | Off |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check the combination meter. Refer to [MWI-36. "Diagnosis Description"](#).

Component Inspection

INFOID:000000008294549

1. CHECK PARKING BRAKE SWITCH

1. Turn the ignition switch OFF.
2. Disconnect parking brake switch harness connector.
3. Check the continuity between parking brake switch connector terminal.

| Parking brake switch Terminal | — | Condition | Continuity |
|----------------------------------|--------|--|-------------|
| 1 | Ground | When the parking brake switch is operated. | Existed |
| | | When the parking brake switch is not operated. | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace parking brake switch. Refer to [PB-6. "PEDAL TYPE : Exploded View"](#) (pedal type), [PB-7. "LEVER TYPE : Exploded View"](#) (lever type).

VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF SWITCH

Description

INFOID:000000008294550

VDC OFF switch can deactivate (turn OFF) the VDC/TCS function by pressing the VDC OFF switch.

Diagnosis Procedure

INFOID:000000008294551

1. CHECK VDC OFF SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect VDC OFF switch harness connector.
4. Check the continuity between VDC OFF switch harness connector and ABS actuator and electric unit (control unit) harness connector.

| ABS actuator and electric unit (control unit) | | VDC OFF switch | | Continuity |
|--|----------|----------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E41 | 31 | M19 | 1 | Existed |

5. Check the continuity between VDC OFF switch harness connector and ground.

| VDC OFF switch | | — | Continuity |
|----------------|----------|--------|-------------|
| Connector | Terminal | | |
| M19 | 1 | Ground | Not existed |
| | 2 | | Existed |

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace error-detected parts.

2. CHECK VDC OFF SWITCH

Check the VDC OFF switch. Refer to [BRC-86, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Replace VDC OFF switch. Refer to [BRC-118, "Removal and Installation"](#).

3. CHECK CONNECTOR

1. Disconnect unified meter and A/C amp. harness connector.
2. Check the connector and terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair or replace error-detected parts.

4. CHECK VDC OFF SWITCH SIGNAL

Select "ABS", "DATA MONITOR" and "OFF SW" in order with CONSULT, and perform the VDC OFF switch inspection.

| Condition | OFF SW (DATA MONITOR) |
|--|-----------------------|
| Press the VDC OFF switch when VDC OFF indicator lamp is OFF. | On |
| Press the VDC OFF switch when VDC OFF indicator lamp is ON. | Off |

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Component Inspection

INFOID:000000008294552

1. CHECK VDC OFF SWITCH

1. Turn the ignition switch OFF.
2. Disconnect VDC OFF switch harness connector.
3. Check the continuity between VDC OFF switch connector terminals.

| VDC OFF switch Terminal | Condition | Continuity |
|----------------------------|--------------------------------------|-------------|
| 1 - 2 | When VDC OFF switch is hold pressed. | Existed |
| | When releasing VDC OFF switch. | Not existed |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace VDC OFF switch. Refer to [BRC-118, "Removal and Installation"](#).

Special Repair Requirement

INFOID:000000008294553

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

ABS WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS WARNING LAMP

Description

INFOID:000000008294554

×: ON –: OFF

| Condition | ABS warning lamp |
|---|------------------|
| Ignition switch OFF | – |
| For 1 second after turning ignition switch ON | × |
| 1 second later after turning ignition switch ON | – |
| ABS function is malfunctioning. | × |
| EBD function is malfunctioning. | × |

Component Function Check

INFOID:000000008294555

1. CHECK ABS WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-87, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000008294556

1. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT.

Is any DTC detected?

YES >> Check the DTC.

NO >> GO TO 2.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-36, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294557

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

BRAKE WARNING LAMP

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

BRAKE WARNING LAMP

Description

INFOID:000000008294558

×: ON –: OFF

| Condition | Brake warning lamp (Note 1) |
|---|-----------------------------|
| Ignition switch OFF | – |
| For 1 second after turning ignition switch ON | × (Note 2) |
| 1 second later after turning ignition switch ON | × (Note 2) |
| EBD function is malfunctioning. | × |

NOTE:

- 1: Brake warning lamp will turn on in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- 2: After starting engine, brake warning lamp is turned off.

Component Function Check

INFOID:000000008294559

1. BRAKE WARNING LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-88, "Diagnosis Procedure"](#).

2. BRAKE WARNING LAMP OPERATION CHECK 2

Check that the brake warning lamp in the combination meter turns ON/OFF correctly when operating the parking brake lever (M/T) or the parking brake pedal (A/T).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check the parking brake switch. Refer to [BRC-83, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000008294560

1. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT.

Is any DTC detected?

YES >> Check the DTC.

NO >> GO TO 2.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-36, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294561

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

VDC WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC WARNING LAMP

Description

INFOID:000000008294562

x: ON Δ: Blink -: OFF

| Condition | VDC warning lamp |
|---|------------------|
| Ignition switch OFF | - |
| For 1 second after turning ignition switch ON | x |
| 1 second later after turning ignition switch ON | - |
| VDC/TCS is activated while driving. | Δ |
| VDC/TCS function is malfunctioning. | x |
| ABS function is malfunctioning. | x |
| EBD function is malfunctioning. | x |

Component Function Check

INFOID:000000008294563

1. CHECK VDC WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-89, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000008294564

1. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT.

Is any DTC detected?

YES >> Check the DTC.

NO >> GO TO 2.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-36, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000008294565

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF INDICATOR LAMP

Description

INFOID:000000008294566

×: ON –: OFF

| Condition | VDC OFF indicator lamp |
|--|------------------------|
| Ignition switch OFF | – |
| For 1 second after turning ignition switch ON | × |
| 1 second later after turning ignition switch ON | – |
| VDC OFF switch turned ON. (VDC function is OFF.) | × |

Component Function Check

INFOID:000000008294567

1.VDC OFF INDICATOR LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-90. "Diagnosis Procedure"](#).

2.VDC OFF INDICATOR LAMP OPERATION CHECK 2

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check the VDC OFF switch. Refer to [BRC-85. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000008294568

1.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Perform diagnosis of ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-81. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2.CHECK VDC OFF INDICATOR LAMP SIGNAL (1)

1. Select "ABS", "DATA MONITOR" and "OFF LAMP" according to this order with CONSULT.
2. Turn the ignition switch OFF.
3. Check that data monitor displays "On" for approx. 1 second after ignition switch is turned ON, and then changes to "Off".

CAUTION:

Never start engine.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-114. "Removal and Installation"](#).

3.CHECK VDC OFF INDICATOR LAMP SIGNAL (2)

1. Select "ABS", "DATA MONITOR" and "OFF LAMP" according to this order with CONSULT.
2. Check that data monitor displays "On" or "Off" each time when VDC OFF switch is operated.

Is the inspection result normal?

YES >> Check the combination meter. Refer to [MWI-38. "CONSULT Function \(METER/M&A\)"](#).

NO >> Check the VDC OFF switch system. Refer to [BRC-85. "Diagnosis Procedure"](#).

VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Special Repair Requirement

INFOID:000000008294569

1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BRC

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

ECU DIAGNOSIS INFORMATION

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Reference Value

INFOID:000000008294570

VALUES ON THE DIAGNOSIS TOOL

CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item | Display content | Data monitor | |
|---------------|---|---|--|
| | | Condition | Reference value in normal operation |
| FR LH SENSOR | Wheel speed | Vehicle stopped | 0 [km/h (MPH)] |
| | | Vehicle running (Note 1) | Nearly matches the speed meter display (± 10% or less) |
| FR RH SENSOR | Wheel speed | Vehicle stopped | 0 [km/h (MPH)] |
| | | Vehicle running (Note 1) | Nearly matches the speed meter display (± 10% or less) |
| RR LH SENSOR | Wheel speed | Vehicle stopped | 0 [km/h (MPH)] |
| | | Vehicle running (Note 1) | Nearly matches the speed meter display (± 10% or less) |
| RR RH SENSOR | Wheel speed | Vehicle stopped | 0 [km/h (MPH)] |
| | | Vehicle running (Note 1) | Nearly matches the speed meter display (± 10% or less) |
| STOP LAMP SW | Stop lamp switch signal status | When brake pedal is depressed | On |
| | | When brake pedal is not depressed | Off |
| BATTERY VOLT | Battery voltage supplied to the ABS actuator and electric unit (control unit) | Ignition switch ON | 10 – 16 V |
| GEAR | Gear position determined by TCM | First gear (1GR) | 1 |
| | | Second gear (2GR) | 2 |
| | | Third gear (3GR) | 3 |
| | | Forth gear (4GR) | 4 |
| | | Fifth gear (5GR) | 5 |
| SLCT LVR POSI | A/T selector lever position | P position | P |
| | | R position | R |
| | | N position | N |
| | | D position | D |
| OFF SW | VDC OFF switch ON/OFF | VDC OFF switch ON (When VDC OFF indicator lamp is ON) | On |
| | | VDC OFF switch OFF (When VDC OFF indicator lamp is OFF) | Off |
| YAW RATE SEN | Yaw rate detected by yaw rate/side G sensor | Vehicle stopped | Approx. 0 d/s |
| | | Turning right | Negative value |
| | | Turning left | Positive value |

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

| Monitor item | Display content | Data monitor | |
|---------------|--|--|--|
| | | Condition | Reference value in normal operation |
| ACCEL POS SIG | Throttle actuator opening/closing is displayed (linked with accelerator pedal) | Accelerator pedal not depressed (ignition switch is ON) | 0 % |
| | | Depress accelerator pedal (ignition switch is ON) | 0 - 100 % |
| SIDE G-SENSOR | Transverse G detected by side G sensor | Vehicle stopped | Approx. 0 m/s ² |
| | | Vehicle turning right | Negative value (m/s ²) |
| | | Vehicle turning left | Positive value (m/s ²) |
| STR ANGLE SIG | Steering angle detected by steering angle sensor | Straight-ahead | ±2.5° |
| | | Turn 90° to right | Approx. +90° |
| | | Turn 90° to left | Approx. -90° |
| 4WD MODE MON | AWD activated | Engine running | AUTO |
| PRESS SENSOR | Brake fluid pressure detected by pressure sensor | With ignition switch turned ON and brake pedal released | Approx. 0 bar |
| | | With ignition switch turned ON and brake pedal depressed | -40 to 300 bar |
| ENGINE RPM | With engine running | With engine stopped | 0 [tr/min (rpm)] |
| | | Engine running | Almost in accordance with tachometer display |
| FLUID LEV SW | Brake fluid level switch signal status | When brake fluid level switch ON | On |
| | | When brake fluid level switch OFF | Off |
| PARK BRAKE SW | Parking brake switch signal status | Parking brake switch is active | On |
| | | Parking brake switch is inactive | Off |
| FR RH IN SOL | Operation status of each solenoid valve | Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On |
| | | When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON) | Off |
| FR RH OUT SOL | Operation status of each solenoid valve | Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On |
| | | When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON) | Off |
| FR LH IN SOL | Operation status of each solenoid valve | Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On |
| | | When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON) | Off |
| FR LH OUT SOL | Operation status of each solenoid valve | Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On |
| | | When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON) | Off |
| RR RH IN SOL | Operation status of each solenoid valve | Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On |
| | | When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON) | Off |

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

| Monitor item | Display content | Data monitor | |
|-----------------------|---|--|-------------------------------------|
| | | Condition | Reference value in normal operation |
| RR RH OUT SOL | Operation status of each solenoid valve | Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On |
| | | When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON) | Off |
| RR LH IN SOL | Operation status of each solenoid valve | Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On |
| | | When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON) | Off |
| RR LH OUT SOL | Operation status of each solenoid valve | Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On |
| | | When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON) | Off |
| MOTOR RELAY | Motor and motor relay operation | When the motor relay and motor are operating | On |
| | | When the motor relay and motor are not operating | Off |
| ACTUATOR RLY (Note 2) | Actuator relay operation | When the actuator relay is operating | On |
| | | When the actuator relay is not operating | Off |
| ABS WARN LAMP | ABS warning lamp (Note 3) | When ABS warning lamp is ON | On |
| | | When ABS warning lamp is OFF | Off |
| OFF LAMP | VDC OFF indicator lamp (Note 3) | When VDC OFF indicator lamp is ON | On |
| | | When VDC OFF indicator lamp is OFF | Off |
| SLIP/VDC LAMP | VDC warning lamp (Note 3) | When VDC warning lamp is ON | On |
| | | When VDC warning lamp is OFF | Off |
| SNOW MODE SW | SNOW mode switch | When snow mode switch is ON | On |
| | | When snow mode switch is OFF | Off |
| 4WD FAIL REQ | AWD control unit fail-safe signal | When AWD control unit is fail-safe mode | On |
| | | When AWD control unit is normal | Off |
| BST OPER SIG | Not applied but displayed | — | Off |
| M-MODE SIG | Manual mode activated | When the manual mode is active | On |
| | | When the manual mode is inactive | Off |
| EBD SIGNAL | EBD operation | EBD is active | On |
| | | EBD is inactive | Off |
| ABS SIGNAL | ABS operation | ABS is active | On |
| | | ABS is inactive | Off |
| TCS SIGNAL | TCS operation | TCS is active | On |
| | | TCS is inactive | Off |
| VDC SIGNAL | VDC operation | VDC is active | On |
| | | VDC is inactive | Off |
| EBD FAIL SIG | EBD fail-safe signal | In EBD fail-safe | On |
| | | EBD is normal | Off |
| ABS FAIL SIG | ABS fail-safe signal | In ABS fail-safe | On |
| | | ABS is normal | Off |

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

| Monitor item | Display content | Data monitor | | |
|------------------------|--|---|-------------------------------------|-----|
| | | Condition | Reference value in normal operation | |
| TCS FAIL SIG | TCS fail-safe signal | In TCS fail-safe | On | A |
| | | TCS is normal | Off | B |
| VDC FAIL SIG | VDC fail-safe signal | In VDC fail-safe | On | C |
| | | VDC is normal | Off | |
| CRANKING SIG | Crank operation | Crank is active | On | D |
| | | Crank is inactive | Off | |
| USV[FL-RR] (Note 2) | VDC switch-over valve | When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On | E |
| | | When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON) | Off | |
| USV[FR-RL] (Note 2) | VDC switch-over valve | When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On | BRC |
| | | When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON) | Off | G |
| HSV[FL-RR] (Note 2) | VDC switch-over valve | When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On | H |
| | | When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON) | Off | I |
| HSV[FR-RL] (Note 2) | VDC switch-over valve | When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT) | On | J |
| | | When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON) | Off | K |
| V/R OUTPUT (Note 2) | Solenoid valve relay activated | When the solenoid valve relay is active (When ignition switch OFF) | On | L |
| | | When the solenoid valve relay is not active (in the fail-safe mode) | Off | |
| M/R OUTPUT | Actuator motor and motor relay activated | When the actuator motor and motor relay are active ("ACTIVE TEST" in "ABS" with CONSULT) | On | M |
| | | When the actuator motor and motor relay are inactive | Off | N |

NOTE:

- 1: Confirm tire pressure is normal.
- 2: A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.
- 3: On and off timing for warning lamp and indicator lamp.
 - ABS warning lamp: Refer to [BRC-87, "Description"](#).
 - Brake warning lamp: Refer to [BRC-88, "Description"](#).
 - VDC warning lamp: Refer to [BRC-89, "Description"](#).
 - VDC OFF indicator lamp: Refer to [BRC-90, "Description"](#).


ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Wiring Diagram - BRAKE CONTROL SYSTEM -

INFOID:000000008294571

For connector terminal arrangements, harness layouts, and alphabets in a  (option abbreviation; if not described in wiring diagram), refer to [GI-12, "Connector Information"](#).

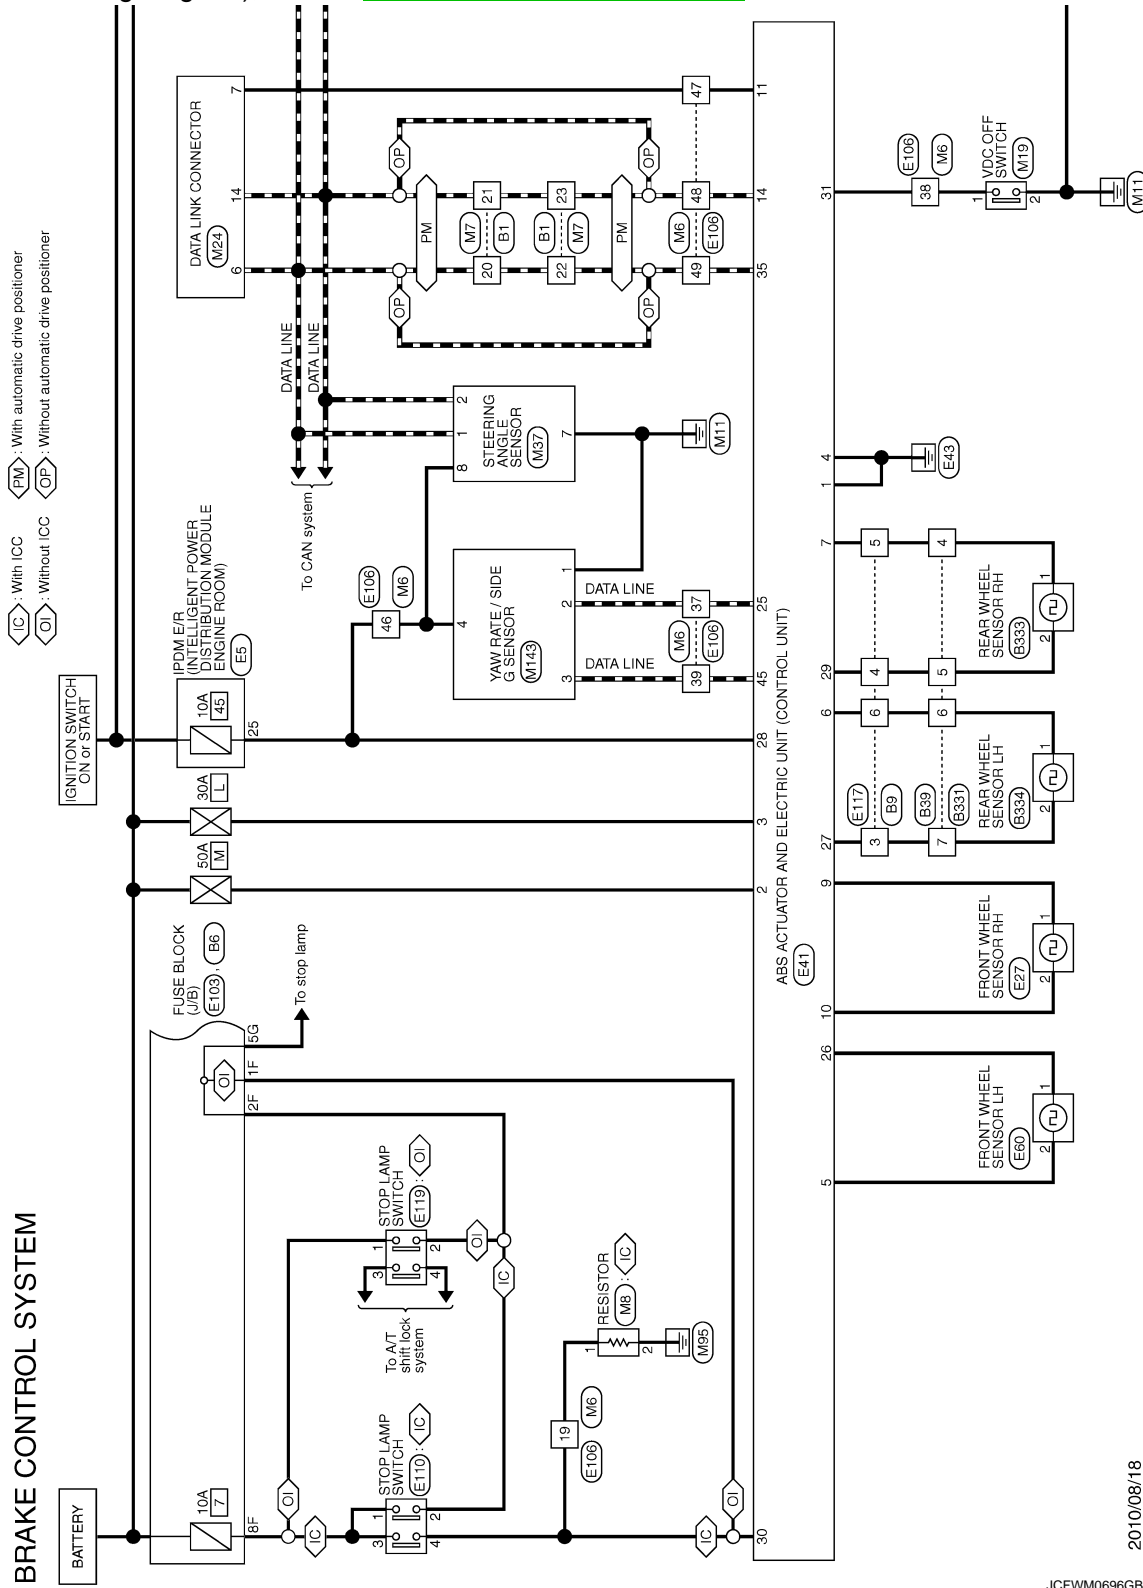

2010/08/18

JCFWM0696GB


ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

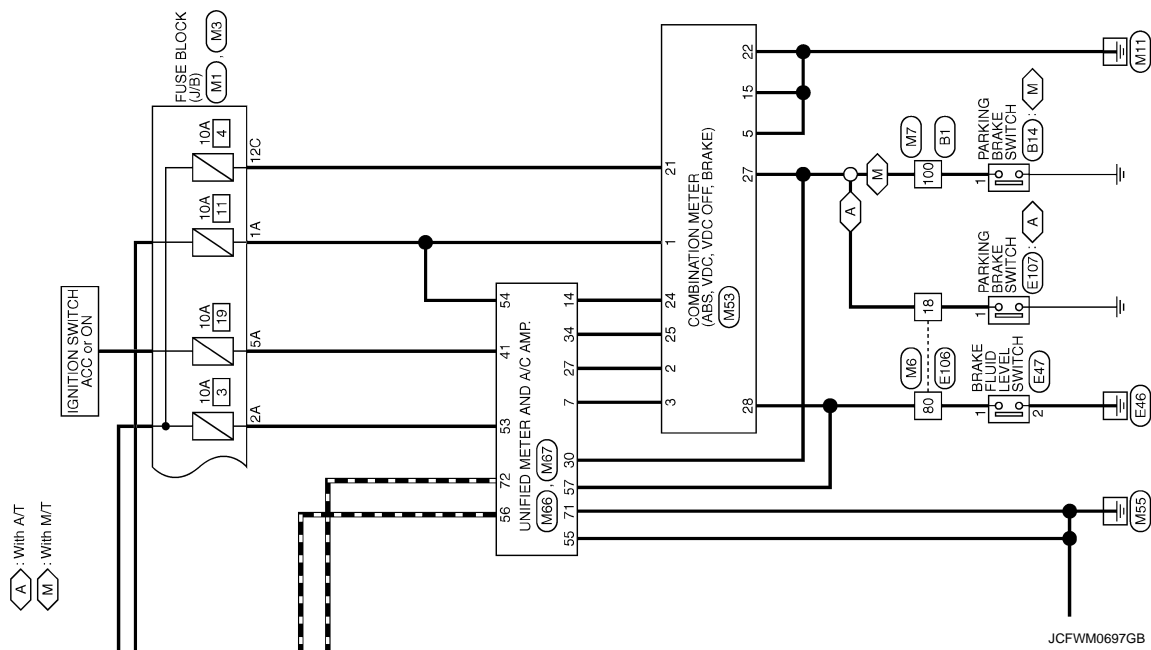

JCFWM0697GB

INFOID:0000000008294572

Fail-Safe

ABS, EBD SYSTEM

If ABS malfunction electrically, ABS warning lamp and VDC warning lamp will turn on. If EBD malfunction electrically, brake warning lamp, ABS warning lamp and VDC warning lamp will turn on. Simultaneously, the VDC, TCS and ABS become one of the following conditions of the fail-safe function.

- For malfunction of ABS, only the EBD is activated and the condition of vehicle is the same condition of vehicles without VDC, TCS and ABS system.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

NOTE:

ABS self-diagnosis sound may be heard. That is a normal condition because a self-diagnosis for "Ignition switch ON" and "The first starting" are being performed.

- For malfunction of EBD, EBD and ABS become inoperative, and the condition of vehicle is the same as the condition of vehicles without VDC, TCS, ABS and EBD system.

VDC, TCS

If VDC, TCS and ABS system malfunction electrically, VDC warning lamp are turned on, and the condition of vehicle is the same as the condition of vehicles without VDC and TCS control.

CAUTION:

If the Fail-Safe function is activated, then perform self-diagnosis for "ABS" with CONSULT.

DTC Inspection Priority Chart

INFOID:000000008294573

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | Detected items (DTC) |
|----------|--|
| 1 | <ul style="list-style-type: none"> • U1000 CAN COMM CIRCUIT • U1002 SYSTEM COMM (CAN) |
| 2 | <ul style="list-style-type: none"> • C1110 CONTROLLER FAILURE • C1153 EMERGENCY BRAKE • C1170 VARIANT CORDING |
| 3 | <ul style="list-style-type: none"> • C1130 ENGINE SIGNAL 1 • C1131 ENGINE SIGNAL 2 • C1132 ENGINE SIGNAL 3 • C1144 ST ANG SEN SIGNAL • C1185 ACC CONT |
| 4 | <ul style="list-style-type: none"> • C1109 BATTERY VOLTAGE [ABNORMAL] • C1111 PUMP MOTOR • C1140 ACTUATOR RELAY |
| 5 | <ul style="list-style-type: none"> • C1101 RR RH SENSOR-1 • C1102 RR LH SENSOR-1 • C1103 FR RH SENSOR-1 • C1104 FR LH SENSOR-1 • C1105 RR RH SENSOR-2 • C1106 RR LH SENSOR-2 • C1107 FR RH SENSOR-2 • C1108 FR LH SENSOR-2 • C1115 ABS SENSOR [ABNORMAL SIGNAL] • C1116 STOP LAMP SW • C1120 FR LH IN ABS SOL • C1121 FR LH OUT ABS SOL • C1122 FR RH IN ABS SOL • C1123 FR RH OUT ABS SOL • C1124 RR LH IN ABS SOL • C1125 RR LH OUT ABS SOL • C1126 RR RH IN ABS SOL • C1127 RR RH OUT ABS SOL • C1142 PRESS SEN CIRCUIT • C1143 ST ANG SEN CIRCUIT • C1145 YAW RATE SENSOR • C1146 SIDE G-SEN CIRCUIT • C1147 USV LINE [FL-RR] • C1148 USV LINE [FR-RL] • C1149 HSV LINE [FL-RR] • C1150 HSV LINE [FR-RL] |
| 6 | <ul style="list-style-type: none"> • C1155 BR FLUID LEVEL LOW |

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC Index

INFOID:000000008294574

| DTC | Items (CONSULT screen terms) | Reference |
|-------|------------------------------|-------------------------------------|
| C1101 | RR RH SENSOR-1 | BRC-32, "DTC Logic" |
| C1102 | RR LH SENSOR-1 | |
| C1103 | FR RH SENSOR-1 | |
| C1104 | FR LH SENSOR-1 | |
| C1105 | RR RH SENSOR-2 | BRC-35, "DTC Logic" |
| C1106 | RR LH SENSOR-2 | |
| C1107 | FR RH SENSOR-2 | |
| C1108 | FR LH SENSOR-2 | |
| C1109 | BATTERY VOLTAGE [ABNORMAL] | BRC-40, "DTC Logic" |
| C1110 | CONTROLLER FAILURE | BRC-42, "DTC Logic" |
| C1111 | PUMP MOTOR | BRC-43, "DTC Logic" |
| C1115 | ABS SENSOR [ABNORMAL SIGNAL] | BRC-45, "DTC Logic" |
| C1116 | STOP LAMP SW | BRC-50, "DTC Logic" |
| C1120 | FR LH IN ABS SOL | BRC-55, "DTC Logic" |
| C1121 | FR LH OUT ABS SOL | BRC-57, "DTC Logic" |
| C1122 | FR RH IN ABS SOL | BRC-55, "DTC Logic" |
| C1123 | FR RH OUT ABS SOL | BRC-57, "DTC Logic" |
| C1124 | RR LH IN ABS SOL | BRC-55, "DTC Logic" |
| C1125 | RR LH OUT ABS SOL | BRC-57, "DTC Logic" |
| C1126 | RR RH IN ABS SOL | BRC-55, "DTC Logic" |
| C1127 | RR RH OUT ABS SOL | BRC-57, "DTC Logic" |
| C1130 | ENGINE SIGNAL 1 | BRC-59, "DTC Logic" |
| C1131 | ENGINE SIGNAL 2 | |
| C1132 | ENGINE SIGNAL 3 | |
| C1140 | ACTUATOR RELAY | BRC-61, "DTC Logic" |
| C1142 | PRESS SEN CIRCUIT | BRC-63, "DTC Logic" |
| C1143 | ST ANG SEN CIRCUIT | BRC-65, "DTC Logic" |
| C1144 | ST ANG SEN SIGNAL | BRC-67, "DTC Logic" |
| C1145 | YAW RATE SENSOR | BRC-68, "DTC Logic" |
| C1146 | SIDE G-SEN CIRCUIT | |
| C1147 | USV LINE [FL-RR] | BRC-71, "DTC Logic" |
| C1148 | USV LINE [FR-RL] | |
| C1149 | HSV LINE [FL-RR] | |
| C1150 | HSV LINE [FR-RL] | |
| C1153 | EMERGENCY BRAKE | BRC-42, "DTC Logic" |
| C1155 | BR FLUID LEVEL LOW | BRC-73, "DTC Logic" |
| C1170 | VARIANT CORDING | BRC-42, "DTC Logic" |
| C1185 | ACC CONT | BRC-76, "DTC Logic" |
| U1000 | CAN COMM CIRCUIT | BRC-78, "DTC Logic" |
| U1002 | SYSTEM COMM (CAN) | BRC-79, "DTC Logic" |

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

SYMPTOM DIAGNOSIS

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

Diagnosis Procedure

INFOID:000000008294575

1. CHECK START

Check the front and rear brake force distribution using a brake tester. Refer to [BR-66, "General Specifications"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Check brake system.

2. CHECK FRONT AND REAR AXLE

Make sure that there is no excessive play in the front and rear axles.

- Front
 - 2WD: Refer to [FAX-6, "Inspection"](#).
 - AWD: Refer to [FAX-14, "Inspection"](#).
- Rear: Refer to [RAX-5, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace error-detected parts.

3. CHECK WHEEL SENSOR AND SENSOR ROTOR

Check the following.

- Wheel sensor installation for damage.
- Sensor rotor installation for damage.
- Wheel sensor connector connection.
- Wheel sensor harness inspection.

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Replace wheel sensor or sensor rotor.
 - Front wheel sensor: Refer to [BRC-110, "FRONT WHEEL SENSOR : Exploded View"](#).
 - Rear wheel sensor: Refer to [BRC-111, "REAR WHEEL SENSOR : Exploded View"](#).
 - Front sensor rotor: Refer to [BRC-112, "FRONT SENSOR ROTOR : Exploded View"](#).
 - Rear sensor rotor: Refer to [BRC-112, "FRONT SENSOR ROTOR : Exploded View"](#).

4. CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp is turned off after the ignition switch is turned ON or when driving.

Is the ABS warning lamp illuminated?

- YES >> Perform self-diagnosis for "ABS" with CONSULT.
- NO >> Normal

UNEXPECTED PEDAL REACTION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

UNEXPECTED PEDAL REACTION

Diagnosis Procedure

INFOID:000000008294576

1.CHECK BRAKE PEDAL STROKE

Check the brake pedal stroke. Refer to [BR-7, "Inspection and Adjustment"](#).

Is the stroke too large?

- YES >> • . Bleed air from brake tube and hose. Refer to [BR-11, "Bleeding Brake System"](#).
- Check the brake pedal, brake booster, and master cylinder for mount play, looseness, brake system fluid leakage, etc.
 - Brake fluid: Refer to [BR-10, "Inspection"](#).
 - Brake pedal: Refer to [BR-7, "Inspection and Adjustment"](#).
 - Brake master cylinder: Refer to [BR-12, "Inspection"](#).
 - Brake booster: Refer to [BR-13, "Inspection"](#).
 - Front disc brake: Refer to [BR-47, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#) (2 piston type), [BR-51, "BRAKE CALIPER ASSEMBLY \(4 PISTON TYPE\) : Inspection"](#) (4 piston type).
 - Rear disc brake: Refer to [BR-60, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Inspection"](#) (1 piston type), [BR-65, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#) (2 piston type).

NO >> GO TO 2.

2.CHECK FUNCTION

Disconnect ABS actuator and electric unit (control unit) harness connector to deactivate ABS. Check if braking force is normal in this condition. Connect harness connector after inspection.

Is the inspection result normal?

YES >> Normal

NO >> Check brake system.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

THE BRAKING DISTANCE IS LONG

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

THE BRAKING DISTANCE IS LONG

Diagnosis Procedure

INFOID:000000008294577

CAUTION:

The stopping distance on slippery road surfaces might be longer when the ABS is operating than when the ABS is not operating.

1. CHECK FUNCTION

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector to deactivate ABS. In this condition, check the stopping distance. After inspection, connect harness connector.

Is the inspection result normal?

- YES >> Normal
NO >> Check the brake system.

ABS FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

ABS FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000008294578

CAUTION:

ABS does not operate when speed is 10 km/h (6 MPH) or lower.

1.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp turns OFF after ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Normal

NO >> Perform self-diagnosis for "ABS" with CONSULT.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

Diagnosis Procedure

INFOID:000000008294579

CAUTION:

Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed (just place a foot on it). However, this is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do vibrations occur?

YES >> GO TO 2.

NO >> Inspect the brake pedal.

2. SYMPTOM CHECK 2

Check that there are ABS operation noises when the engine is started.

Do the operation noises occur?

YES >> GO TO 3.

NO >> Perform self-diagnosis for "ABS" with CONSULT.

3. SYMPTOM CHECK 3

Check symptoms when electrical component (headlamps, etc.) switches are operated.

Do symptoms occur?

YES >> Check if there is a radio, antenna, antenna lead wire, or wiring close to the control unit. If there is, move it farther away.

NO >> Normal

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

Diagnosis Procedure

INFOID:000000008294580

1.SYMPTOM CHECK

Check if the vehicle jerks during VDC/TCS/ABS control.

Is the inspection result normal?

- YES >> Normal.
- NO >> GO TO 2.

2.CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis for "ABS" with CONSULT.

Are self-diagnosis results indicated?

- YES >> Check the corresponding items, make repairs, and perform self-diagnosis for "ABS" with CONSULT.
- NO >> GO TO 3.

3.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and check the terminal for deformation, disconnection, looseness, etc.
3. Securely connect harness connectors and perform self-diagnosis for "ABS" with CONSULT.

Are self-diagnosis results indicated?

- YES >> If poor contact, damage, open or short circuit of connector terminal is found, repair or replace.
- NO >> GO TO 4.

4.CHECK ECM AND TCM SELF-DIAGNOSIS RESULTS

Perform self-diagnosis for "ENGINE" and "TRANSMISSION" with CONSULT.

Are self-diagnosis results indicated?

- YES >> Check the corresponding items.
- NO >> Replace ABS actuator and electric unit (control unit).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

NORMAL OPERATING CONDITION

Description

INFOID:000000008294581

| Symptom | Result |
|---|---|
| Slight vibrations are felt on the brake pedal and the operation noises occur, when VDC, TCS or ABS is activated. | This is a normal condition due to the VDC, TCS or ABS activation. |
| Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads. | |
| The brake pedal moves and generates noises, when TCS or VDC is activated due to rapid acceleration or sharp turn. | |
| The brake pedal vibrates and motor operation noises occur from the engine room, after the engine starts and just after the vehicle starts. | This is a normal, and it is caused by the ABS operation check. |
| Depending on the road conditions, the driver may experience a sluggish feel. | This is normal, because TCS places the highest priority on the optimum traction (stability). |
| TCS may activate momentarily if wheel speed changes when driving over location where friction coefficient varies, when downshifting, or when fully depressing accelerator pedal. | |
| The ABS warning lamp and VDC warning lamp may turn ON when the vehicle is subject to strong shaking or large vibration, such as when the vehicle is rotating on a turntable or located on a ship while the engine is running. | In this case, restart the engine on a normal road. If the normal condition is restored, there is no malfunction. At that time, erase the self-diagnosis memory. |
| VDC may not operate normally or the ABS warning lamp and VDC warning lamp may illuminate, when running on a special road that is extremely slanted (e.g. bank in a circuit course). | |
| A malfunction may occur in the yaw rate/side G sensor system, when the vehicle turns sharply, such as during a spin turn, axle turn, or drift driving, while the VDC function is off (VDC warning lamp illuminated). | |
| The vehicle speed will not increase even though the accelerator pedal is depressed, when inspecting the speedometer on a 2-wheel chassis dynamometer. | Normal (Deactivate the VDC/TCS function before performing an inspection on a chassis dynamometer.) |
| VDC warning lamp may simultaneously turn on when low tire pressure warning lamp turns on. | This is not a VDC system error but results from characteristic change of tire. |

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000008294582

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000008294583

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

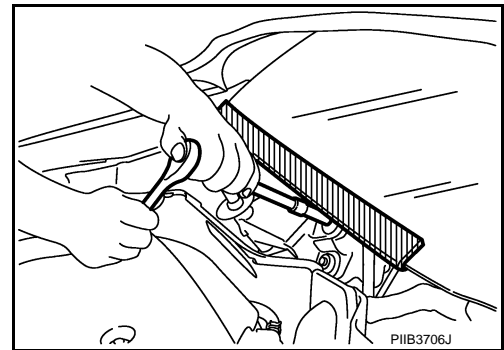

Precaution for Brake System

INFOID:000000008294584

WARNING:

Since dust covering the front and rear brakes has an affect on human body, the dust must be removed with a dust collector. Never splatter the dust with an air blow gun.

- Brake fluid use refer to [MA-16. "FOR NORTH AMERICA : Fluids and Lubricants"](#) (except for Mexico), [MA-18. "FOR MEXICO : Fluids and Lubricants"](#) (for Mexico).
- Never reuse drained brake fluid.
- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

PRECAUTIONS

[VDC/TCS/ABS]

< PRECAUTION >

- Never use mineral oils such as gasoline or light oil. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with a crow-foot (A) and torque wrench (B).
- Always conform the specified tightening torque when installing the brake pipes.
- Brake system is an important safety part. If a brake fluid leak is detected, always disassemble the affected part. If a malfunction is detected, replace part with a new one.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) harness connector or the battery negative terminal before performing the work.

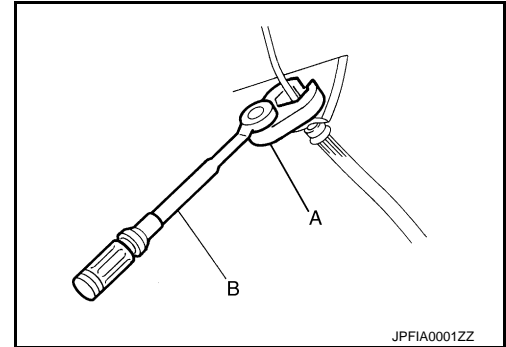

INFOID:000000008294585

Precaution for Brake Control

- When starting engine or when starting vehicle just after starting engine, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is normal condition.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for estimate causes before starting diagnostic servicing. Besides electrical system inspection, check the brake booster operation, brake fluid level, and oil leaks.
- If tire size and type are used in an improper combination, or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- ABS might be out of order or malfunctions by putting a radio (wiring inclusive), an antenna and a lead-in wire near the control unit.
- VDC system may not operate normally or a VDC warning lamp may light.
- When replacing the following parts with parts other than genuine parts or making modifications: Suspension related parts (shock absorber, spring, bushing, etc.), tires, wheels (other than specified sizes), brake-related parts (pad, rotor, caliper, etc.), engine-related parts (muffler, ECM, etc.) and body reinforcement-related parts (roll bar, tower bar, etc.).
- When driving with worn or deteriorated suspension, tires and brake-related parts.

Precautions for Harness Repair


INFOID:000000008294586

COMMUNICATION LINE

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

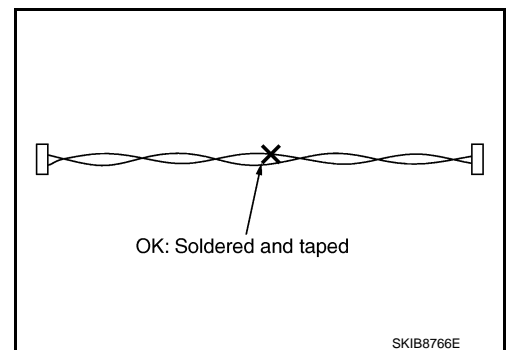


- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause communication error as spliced wires that are separate from the main line or twisted lines lose noise immunity.

- Replace the applicable harness as an assembly if error is detected on the shield lines of communication line.

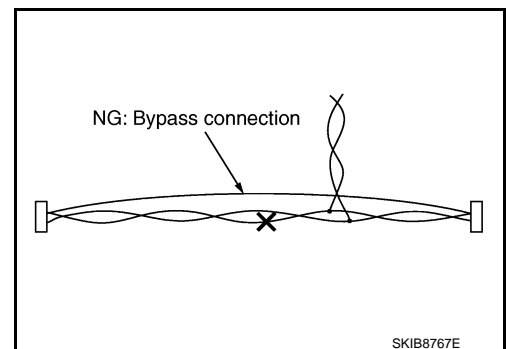




PREPARATION

PREPARATION

Special Service Tool

INFOID:000000008294587

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

| Tool number (Kent-Moore No.) Tool name | Description |
|---|---|
| ST30720000 (J-25405) Drift a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia. |  <p style="text-align: center;">ZZA0701D</p> |
| ST27863000 (—) Drift a: 74.5 mm (2.933 in) dia. b: 62.5 mm (2.461 in) dia. |  <p style="text-align: center;">ZZA0832D</p> |
| KV40104710 (—) a: 76.3 mm (3.004 in) dia. b: 67.9 mm (2.673 in) dia. |  <p style="text-align: center;">ZZA0832D</p> |

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

WHEEL SENSOR

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]


REMOVAL AND INSTALLATION

WHEEL SENSOR

FRONT WHEEL SENSOR

FRONT WHEEL SENSOR : Exploded View

INFOID:000000008294588

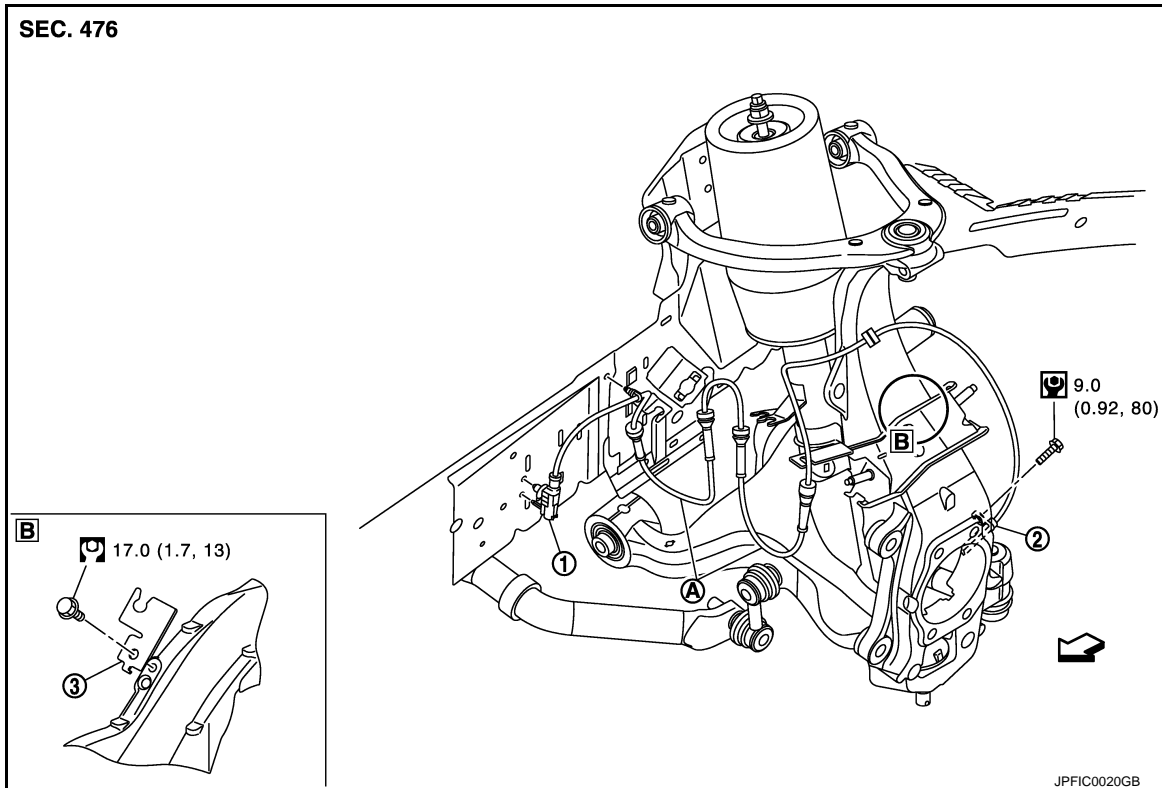

1. Front LH wheel sensor harness connector 2. Front LH wheel sensor 3. Bracket

A. Color line

←: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

NOTE:

The above figure (front side) shows left side. Right side is the mirror image.

FRONT WHEEL SENSOR : Removal and Installation

INFOID:000000008294589

REMOVAL

Note the following, and when removing wheel sensor.

- Never twist sensor harness as much as possible, when removing it. Pull wheel sensors out without pulling sensor harness.
- Be careful to avoid damaging sensor edges or rotor teeth. Remove wheel sensor first before removing front wheel hub and bearing assembly. This is to avoid damage to wheel sensor wiring and loss of wheel sensor function.

INSTALLATION

Note the following, and when installing wheel sensor. Tighten installation bolts to the specified torques.

- When installing, make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor. Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount.

WHEEL SENSOR

< REMOVAL AND INSTALLATION >


[VDC/TCS/ABS]

- When installing wheel sensor, be sure to press rubber grommets in until they lock at locations shown above in the figure. When installed, harness must not be twisted.
- When you see the harness of the wheel sensor from the front side of the vehicle ensure that the color lines (A) are not twisted.

REAR WHEEL SENSOR

REAR WHEEL SENSOR : Exploded View

INFOID:000000008294590

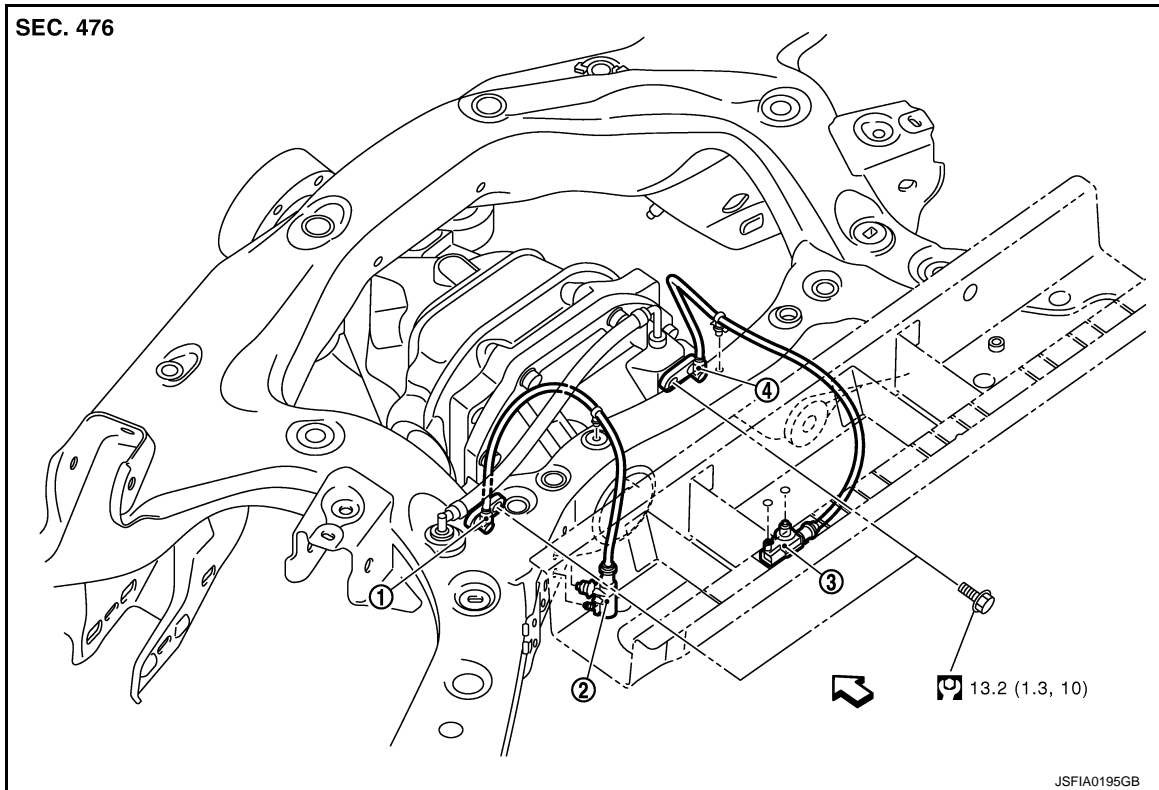

1. Rear LH wheel sensor
2. Rear LH wheel sensor harness connector
3. Rear RH wheel sensor harness connector
4. Rear RH wheel sensor

← Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

REAR WHEEL SENSOR : Removal and Installation

INFOID:000000008294591

REMOVAL

Note the following, when removing sensor harness.

- Never twist sensor harness as much as possible, when removing it. Pull wheel sensors out without pulling sensor harness.
- Be careful to avoid damaging sensor edges or rotor teeth. Remove wheel sensor first before removing side flange. This is to avoid damage to sensor wiring and loss of sensor function.

INSTALLATION

Note the following, when installing wheel sensor. Tighten installation bolts to the specified torques.

- When installing, make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor. Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount.
- When installing wheel sensor, be sure to press rubber grommets in until they lock at locations shown above in the figure. When installed, harness must not be twisted.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

SENSOR ROTOR

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

SENSOR ROTOR

FRONT SENSOR ROTOR

FRONT SENSOR ROTOR : Exploded View

INFOID:000000008294592

Refer to [FAX-7, "Exploded View"](#) (2WD models), [FAX-16, "Exploded View"](#) (AWD models).

FRONT SENSOR ROTOR : Removal and Installation

INFOID:000000008294593

REMOVAL

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [FAX-7, "Exploded View"](#) (2WD models), [FAX-16, "Exploded View"](#) (AWD models).


INSTALLATION

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [FAX-7, "Exploded View"](#) (2WD models), [FAX-16, "Exploded View"](#) (AWD models).

REAR SENSOR ROTOR

REAR SENSOR ROTOR : Exploded View

INFOID:000000008294594

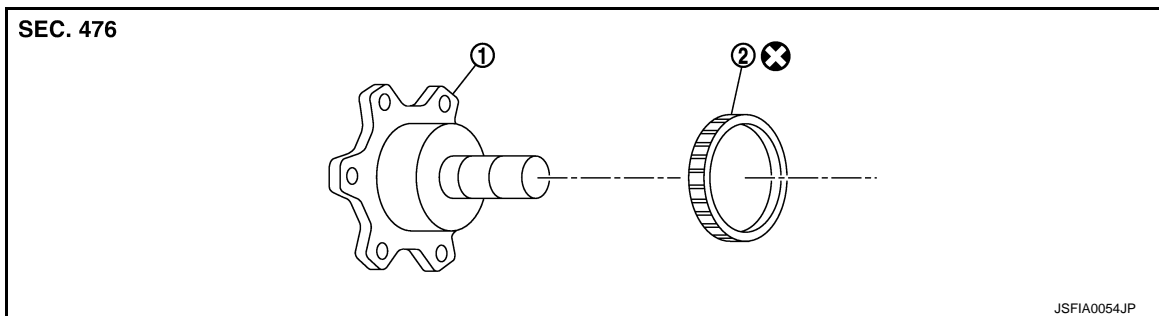

1. Side flange
2. Rear wheel sensor rotor

Refer to [GI-4, "Components"](#) for symbols in the figure.

REAR SENSOR ROTOR : Removal and Installation

INFOID:000000008294595

REMOVAL

- Follow the procedure below to remove rear sensor rotor.
 - Remove side flange.
 - R200 (2WD: VQ25HR) models: Refer to [DLN-175, "2WD \(VQ25HR\) : Exploded View"](#).
 - R200 (2WD: VQ37VHR) models: Refer to [DLN-177, "2WD \(VQ37VHR\) : Exploded View"](#).
 - R200 (AWD) models: Refer to [DLN-178, "AWD : Exploded View"](#).
 - R200V (M/T) models: Refer to [DLN-270, "M/T : Exploded View"](#).
 - R200V (A/T) models: Refer to [DLN-272, "A/T : Exploded View"](#).
 - Using a bearing replacer (suitable tool) and puller (suitable tool), remove sensor rotor from side flange.

INSTALLATION

CAUTION:

Never reuse sensor rotor.

SENSOR ROTOR

[VDC/TCS/ABS]

< REMOVAL AND INSTALLATION >


- Follow the procedure below to install rear sensor rotor.
- Using a drifts, press rear sensor rotor onto side flange.

A: Drift [SST: ST30720000 (J-25405)]

B: Drift [SST: ST27863000 (—)]

C: Drift [SST: KV40104710 (—)]

- Install side flange.
- R200 (2WD: VQ25HR) models: Refer to [DLN-175, "2WD \(VQ25HR\) : Exploded View"](#).
- R200 (2WD: VQ37VHR) models: Refer to [DLN-177, "2WD \(VQ37VHR\) : Exploded View"](#).
- R200 (AWD) models: Refer to [DLN-178, "AWD : Exploded View"](#).
- R200V (M/T) models: Refer to [DLN-270, "M/T : Exploded View"](#).
- R200V (A/T) models: Refer to [DLN-272, "A/T : Exploded View"](#).

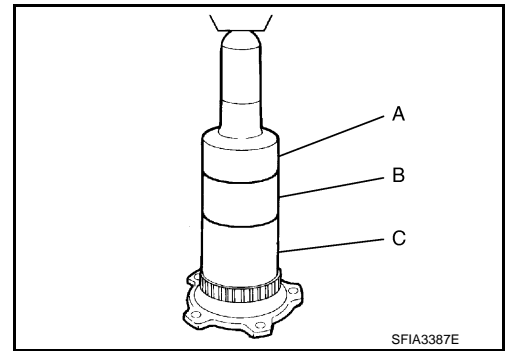

A
B
C
D
E

BRC

G
H
I
J
K
L
M
N
O
P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Exploded View

INFOID:000000008294596

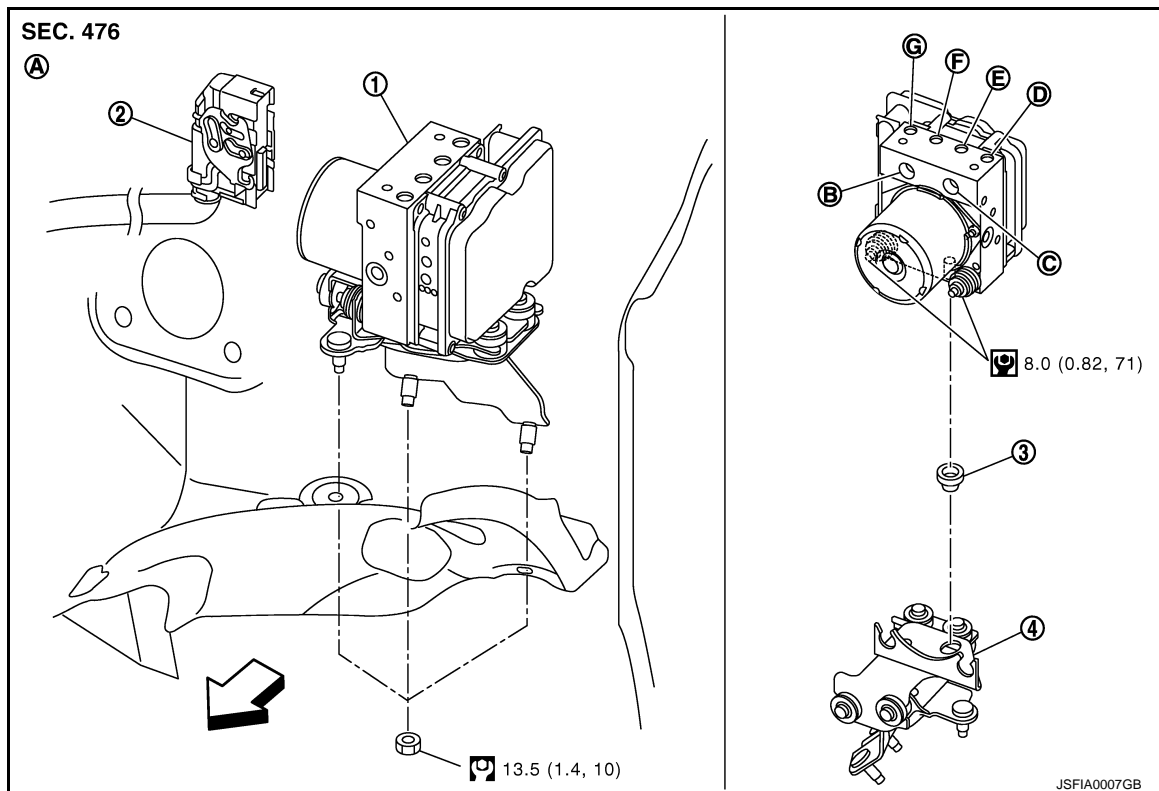

- | | | |
|--|--|--------------------------------------|
| 1. ABS actuator and electric unit (control unit) | 2. Harness connector | 3. Bushing |
| 4. Bracket | | |
| A. Left side of dash panel | B. From master cylinder secondary side | C. From master cylinder primary side |
| D. To front LH brake caliper | E. To rear RH brake caliper | F. To Rear LH brake caliper |
| G. To front RH brake caliper | | |

←: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000008294597

REMOVAL

1. Disconnect the battery cable from negative terminal.
2. Remove cowl top cover. Refer to [EXT-24, "Exploded View"](#).
3. Drain brake fluid. Refer to [BR-10, "Draining"](#).
4. Disconnect ABS actuator and electric unit (control unit) harness connector.
5. Remove brake booster pressure sensor mounting bracket. Hang brake booster pressure sensor mounting bracket not to interfere with work.
6. Loosen brake tube flare nuts, then remove brake tubes from ABS actuator and electric unit (control unit). Refer to [BR-20, "FRONT : Exploded View"](#).
7. Remove brake tube form between ABS actuator and electric unit (control unit) and master cylinder assembly. Refer to [BR-20, "FRONT : Exploded View"](#).
8. Remove tire (front LH side).
9. Remove fender protector (rear): (front LH side). Refer to [EXT-27, "FENDER PROTECTOR : Exploded View"](#).

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

10. Remove ABS actuator and electric unit (control unit) bracket mounting nut.

11. Remove ABS actuator and electric unit (control unit) from vehicle.

CAUTION:

- Never apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Never remove actuator by holding harness.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Install, use flare nut crowfoot and torque wrench. Refer to [BR-20, "FRONT : Exploded View"](#).
- Never apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Never install actuator by holding harness.
- After work is completed, bleed air from brake tube. Refer to [BR-11, "Bleeding Brake System"](#).
- After installing harness connector in the ABS actuator and electric unit (control unit), make sure harness connector is securely locked.
- When replacing ABS actuator and electric unit (control unit), make sure to adjust neutral position of steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

YAW RATE/SIDE G SENSOR


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

YAW RATE/SIDE G SENSOR

Exploded View

INFOID:000000008294598

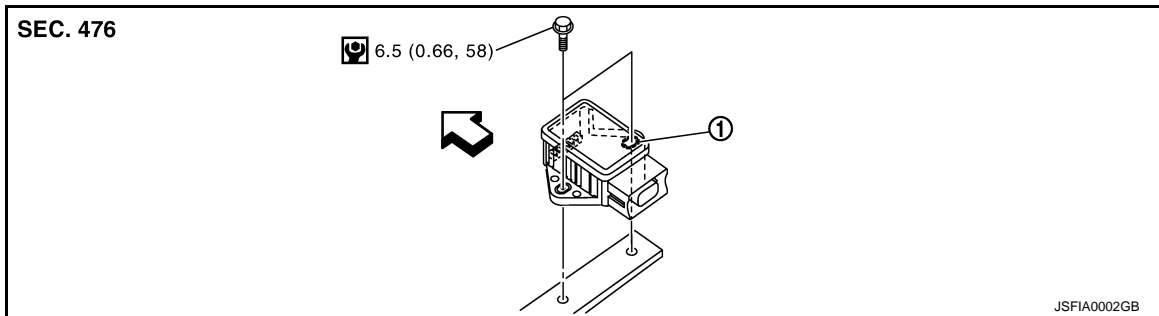

1. Yaw rate/side G sensor

↔: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000008294599

REMOVAL

CAUTION:

Never drop or strike yaw rate/side G sensor, or never use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

1. Remove center console. Refer to [IP-33, "A/T MODELS : Exploded View"](#) (A/T), [IP-38, "M/T MODELS : Exploded View"](#) (M/T).
2. Disconnect yaw rate/side G sensor harness connector.
3. Remove mounting bolts. Remove yaw rate/side G sensor.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

Never drop or strike yaw rate/side G sensor, or never use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

STEERING ANGLE SENSOR


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

STEERING ANGLE SENSOR

Exploded View

INFOID:000000008294600

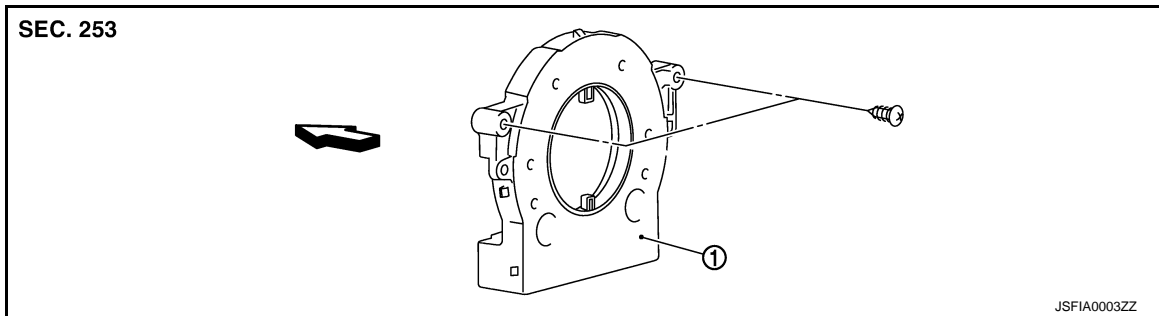

1. Steering angle sensor

↔: Vehicle front

Refer to [GI-4, "Components"](#) for symbol marks in the figure.

Removal and Installation

INFOID:000000008294601

REMOVAL

1. Remove spiral cable assembly. Refer to [SR-13, "Exploded View"](#).
2. Remove steering angle sensor from spiral cable assembly.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

After work, make sure to adjust neutral position of steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

VDC OFF SWITCH

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

VDC OFF SWITCH

Removal and Installation

INFOID:000000008294602

REMOVAL

1. Remove Instrument lower panel LH. Refer to [IP-11. "A/T MODELS : Exploded View"](#) (A/T), [IP-22. "M/T MODELS : Exploded View"](#) (M/T).
2. Remove VDC OFF switch.

INSTALLATION

Install in the reverse order of removal.

PREVIEW FUNCTION

< SYSTEM DESCRIPTION >

[BRAKE ASSIST (WITH PREVIEW FUNCTION)]

SYSTEM DESCRIPTION

PREVIEW FUNCTION

System Description

INFOID:000000008294603

FUNCTION DESCRIPTION

When the Preview Function identifies the need to apply emergency braking by sensing a vehicle ahead in the same lane and the distance and relative speed from it, it applies the brake pre-pressure before the driver depresses the brake pedal and helps improve brake response by reducing pedal free play.

The Preview Function shares component parts and diagnosis with the ICC (Intelligent Cruise Control) system.

CAUTION:

This system is only an aid to assist braking operation and is not a collision warning or avoidance device. It is the driver's responsibility to stay alert, drive safely and be in control of the vehicle at all times.

OPERATION DESCRIPTION

Operation

- The system detects the distance to the vehicle in front with the ICC sensor integrated unit of ICC and judges the necessity of emergency braking.
- The system detects the accelerator pedal release operation of the driver by the accelerator pedal position sensor and estimates the driver's brake operation intention.
- If the system is judged that the emergency braking is necessary and that the driver has the intention to operate the brake, the ABS actuator and electric unit (control unit) applies pre-pressure to reduce brake pedal play.

NOTE:

This system will not operate when the vehicle is moving at approximately 32 km/h (20 MPH) or less.

End of Operation

The pre-pressure function ceases when the following conditions are met:

1. When the driver depresses the accelerator pedal or the brake pedal.
2. If the driver does not operate the accelerator pedal or brake pedal within approximately 1 second.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P


PREVIEW FUNCTION

[BRAKE ASSIST (WITH PREVIEW FUNCTION)]

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000008294604

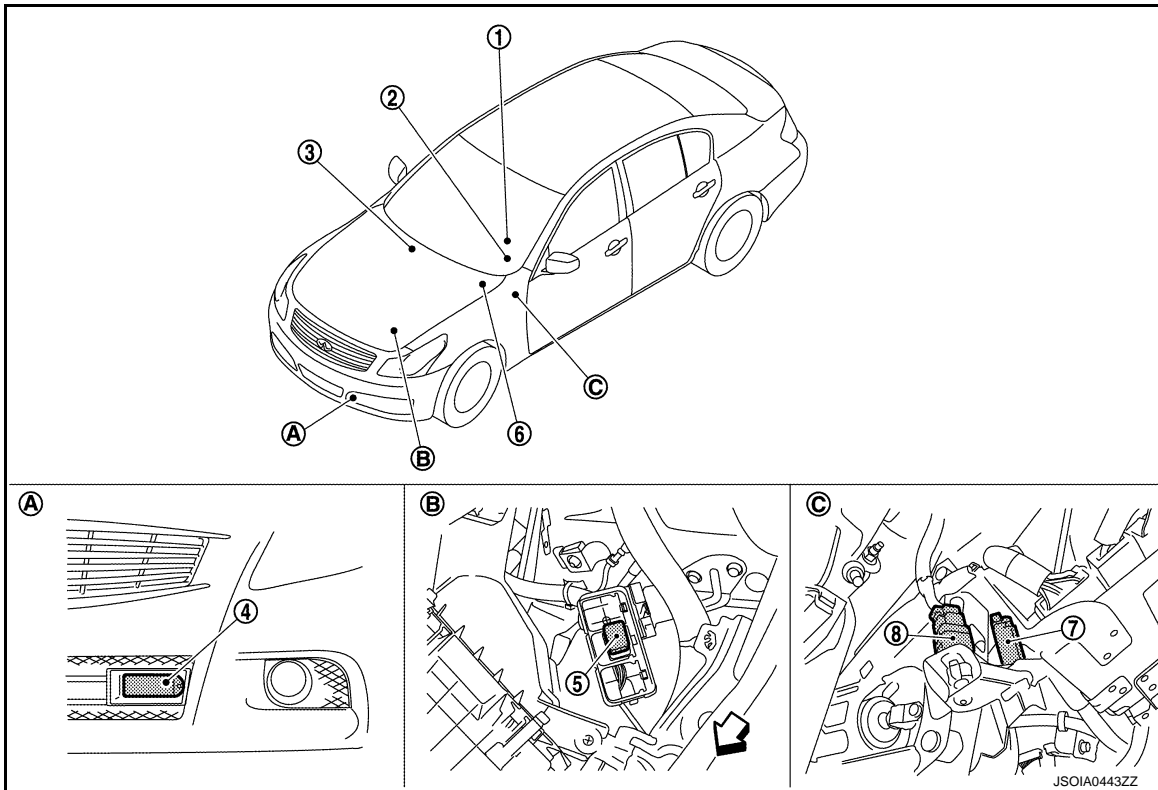

- | | | |
|--|-------------------------|--|
| 1. Information display, ICC system warning lamp, Buzzer (On the combination meter) | 2. ICC steering switch | 3. ECM |
| 4. ICC sensor integrated unit | 5. ICC brake hold relay | 6. ABS actuator and electric unit (control unit) |
| 7. ICC brake switch | 8. Stop lamp switch | |
| A. Front bumper (LH) | B. Engine room (LH) | C. Upper side of brake pedal |

Component Description

INFOID:000000008294605

×: Applicable

| Component | Function Description | | | Description |
|---|----------------------|----|----|--|
| | *1 | *2 | *3 | |
| ICC sensor integrated unit | × | × | × | Refer to CCS-41, "Description" . |
| ECM | × | × | × | Refer to CCS-63, "Description" . |
| ABS actuator and electric unit (control unit) | × | × | × | Refer to CCS-47, "Description" . |
| BCM | × | | | Transmits the front wiper request signal to ICC sensor integrated unit via CAN communication. |
| TCM | × | × | | Refer to CCS-88, "Description" . |
| Unified meter and A/C amp. | × | × | × | Receives the meter display signal, buzzer output signal, and ICC warning lamp signal from ICC sensor integrated unit via CAN communication and transmits them to the combination meter via the communication line. |

PREVIEW FUNCTION

< SYSTEM DESCRIPTION >

[BRAKE ASSIST (WITH PREVIEW FUNCTION)]

| Component | Function Description | | | Description |
|----------------------|----------------------|----|----|--|
| | *1 | *2 | *3 | |
| Combination meter | × | × | × | Performs the following operations using the signals received from the unified meter and A/C amp. via the communication line. <ul style="list-style-type: none"> • Displays the ICC system operation status using the meter display signal. • Illuminates the ICC system warning lamp using the ICC warning lamp signal. • Operates the buzzer (ICC warning chime) using the buzzer output signal. |
| ICC brake switch | × | × | × | Refer to CCS-49. "Description" . |
| Stop lamp switch | × | × | × | |
| ICC brake hold relay | × | | × | Refer to CCS-57. "Description" . |

*1: Vehicle-to-vehicle distance control mode

*2: Conventional (fixed speed) cruise control mode

*3: Brake Assist (With Preview Function)

A
B
C
D
E

G
H
I
J
K
L
M
N
O
P

BRC

DTC/CIRCUIT DIAGNOSIS

PREVIEW FUNCTION

Diagnosis Procedure

INFOID:000000008294606

1. PREVIEW FUNCTION DIAGNOSIS

When the preview function is not operating properly, the buzzer sounds and the preview function warning lamp will come on.

NOTE:

The preview function warning lamp shares the ICC system warning lamp.

>> Go to ICC. Refer to [CCS-4, "Work Flow"](#).

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BRAKE ASSIST (WITH PREVIEW FUNCTION)]

SYMPTOM DIAGNOSIS


NORMAL OPERATING CONDITION

Description

INFOID:000000008294607

PRECAUTIONS FOR PREVIEW FUNCTION

- This system is only an aid to assist braking operation and is not a collision warning or avoidance device. It is the driver's responsibility to stay alert, drive safely and be in control of the vehicle at all times.
- As there is a performance limit to the Preview Function, never rely solely on this system. This system does not correct careless inattentive or absent-minded driving, or overcome poor visibility in rain, fog, or other bad weather. Reduce vehicle speed by depressing the brake, in order to maintain a safe distance between vehicles.
- The system may not detect a vehicle ahead, depending on road or weather conditions. While the vehicle still travels and the Brake Assist System operates under normal conditions, the Preview Function may operate improperly under the following conditions:
 - When rain, snow or dirt adhere to the system sensor
 - When strong light (for example, at sunrise or sunset) is directly shining on the front of the vehicle
 - Winding or hilly roads may cause the sensor to temporarily not detect a vehicle in the same lane or may detect objects or vehicles in other lanes.
 - Vehicle position in the lane may cause the sensor to temporarily not detect a vehicle in the same lane or may detect objects or vehicles in other lanes.
- The system will not detect:
 - Pedestrians or objects in the roadway
 - Oncoming vehicles in the same lane
 - Motorcycles traveling offset in the travel lane as illustrated

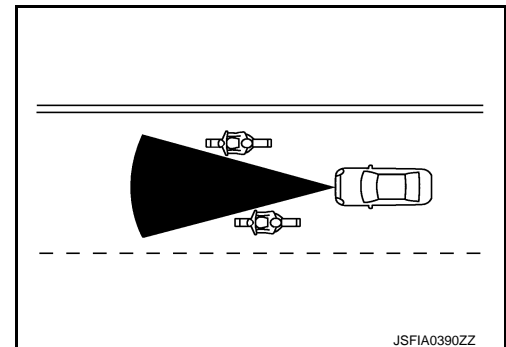

PRECAUTIONS

< PRECAUTION >

[BRAKE ASSIST (WITH PREVIEW FUNCTION)]

PRECAUTION

PRECAUTIONS

Precautions for Preview Function Service

INFOID:000000008294608

CAUTION:

- Never look straight into the laser beam discharger when adjusting laser beam aiming.
- Never use the ICC sensor integrated unit removed from vehicle. Never disassemble or remodel.