

SECTION **EXL**

EXTERIOR LIGHTING SYSTEM

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

CONTENTS

<p style="text-align: center;">XENON TYPE</p> <p>BASIC INSPECTION 4</p> <p>DIAGNOSIS AND REPAIR WORK FLOW 4</p> <p style="padding-left: 20px;">Work Flow4</p> <p>SYSTEM DESCRIPTION 7</p> <p>HEADLAMP SYSTEM 7</p> <p style="padding-left: 20px;">System Diagram7</p> <p style="padding-left: 20px;">System Description7</p> <p style="padding-left: 20px;">Component Parts Location9</p> <p style="padding-left: 20px;">Component Description 10</p> <p>AUTO LIGHT SYSTEM11</p> <p style="padding-left: 20px;">System Diagram 11</p> <p style="padding-left: 20px;">System Description 11</p> <p style="padding-left: 20px;">Component Parts Location 12</p> <p style="padding-left: 20px;">Component Description 13</p> <p>FRONT FOG LAMP SYSTEM14</p> <p style="padding-left: 20px;">System Diagram 14</p> <p style="padding-left: 20px;">System Description 14</p> <p style="padding-left: 20px;">Component Parts Location 15</p> <p style="padding-left: 20px;">Component Description 15</p> <p>TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM16</p> <p style="padding-left: 20px;">System Diagram 16</p> <p style="padding-left: 20px;">System Description 16</p> <p style="padding-left: 20px;">Component Parts Location 17</p> <p style="padding-left: 20px;">Component Description 17</p> <p>PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM18</p> <p style="padding-left: 20px;">System Diagram 18</p> <p style="padding-left: 20px;">System Description 18</p> <p style="padding-left: 20px;">Component Parts Location 19</p> <p style="padding-left: 20px;">Component Description 19</p>	<p>EXTERIOR LAMP BATTERY SAVER SYSTEM20</p> <p style="padding-left: 20px;">System Diagram20</p> <p style="padding-left: 20px;">System Description20</p> <p style="padding-left: 20px;">Component Parts Location21</p> <p style="padding-left: 20px;">Component Description21</p> <p>DIAGNOSIS SYSTEM (BCM)22</p> <p>COMMON ITEM22</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)22</p> <p>HEADLAMP23</p> <p style="padding-left: 20px;">HEADLAMP : CONSULT Function (BCM - HEAD LAMP)23</p> <p>FLASHER25</p> <p style="padding-left: 20px;">FLASHER : CONSULT Function (BCM - FLASHER)25</p> <p>DIAGNOSIS SYSTEM (IPDM E/R)27</p> <p style="padding-left: 20px;">Diagnosis Description27</p> <p style="padding-left: 20px;">CONSULT Function (IPDM E/R)29</p> <p>DTC/CIRCUIT DIAGNOSIS32</p> <p>POWER SUPPLY AND GROUND CIRCUIT32</p> <p>BCM (BODY CONTROL MODULE)32</p> <p style="padding-left: 20px;">BCM (BODY CONTROL MODULE) : Diagnosis Procedure32</p> <p>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)32</p> <p style="padding-left: 20px;">IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure32</p> <p>HEADLAMP (HI) CIRCUIT34</p> <p style="padding-left: 20px;">Description34</p> <p style="padding-left: 20px;">Component Function Check34</p> <p style="padding-left: 20px;">Diagnosis Procedure34</p>
--	---

HEADLAMP (LO) CIRCUIT	37	BACK-UP LAMP	83
Description	37	Wiring Diagram - BACK-UP LAMP -	83
Component Function Check	37	ECU DIAGNOSIS INFORMATION	87
Diagnosis Procedure	37	BCM (BODY CONTROL MODULE)	87
XENON HEADLAMP	39	Reference Value	87
Description	39	Wiring Diagram - BCM -	111
Diagnosis Procedure	39	Fail-safe	124
FRONT FOG LAMP CIRCUIT	41	DTC Inspection Priority Chart	125
Component Function Check	41	DTC Index	126
Diagnosis Procedure	41	IPDM E/R (INTELLIGENT POWER DISTRI-	
PARKING LAMP CIRCUIT	43	BUTION MODULE ENGINE ROOM)	129
Component Function Check	43	Reference Value	129
Diagnosis Procedure	43	Wiring Diagram - IPDM E/R -	136
TURN SIGNAL LAMP CIRCUIT	45	Fail-safe	139
Description	45	DTC Index	141
Component Function Check	45	SYMPTOM DIAGNOSIS	142
Diagnosis Procedure	45	EXTERIOR LIGHTING SYSTEM SYMPTOMS	142
OPTICAL SENSOR	48	Symptom Table	142
Description	48	NORMAL OPERATING CONDITION	144
Component Function Check	48	Description	144
Diagnosis Procedure	48	BOTH SIDE HEADLAMPS DO NOT SWITCH	
HAZARD SWITCH	51	TO HIGH BEAM	145
Description	51	Description	145
Component Function Check	51	Diagnosis Procedure	145
Diagnosis Procedure	51	BOTH SIDE HEADLAMPS (LO) ARE NOT	
TAIL LAMP CIRCUIT	53	TURNED ON	146
Component Function Check	53	Description	146
Diagnosis Procedure	53	Diagnosis Procedure	146
LICENSE PLATE LAMP CIRCUIT	55	PARKING, LICENSE PLATE, SIDE MARKER	
Component Function Check	55	AND TAIL LAMPS ARE NOT TURNED ON ...	147
Diagnosis Procedure	55	Description	147
HEADLAMP SYSTEM	56	Diagnosis Procedure	147
Wiring Diagram - HEADLAMP -	56	BOTH SIDE FRONT FOG LAMPS ARE NOT	
AUTO LIGHT SYSTEM	61	TURNED ON	148
Wiring Diagram - AUTO LIGHT SYSTEM -	61	Description	148
FRONT FOG LAMP SYSTEM	67	Diagnosis Procedure	148
Wiring Diagram - FRONT FOG LAMP -	67	PRECAUTION	149
TURN SIGNAL AND HAZARD WARNING		PRECAUTIONS	149
LAMP SYSTEM	71	Precaution for Supplemental Restraint System	
Wiring Diagram - TURN AND HAZARD WARN-		(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
ING LAMPS -	71	SIONER"	149
PARKING, LICENSE PLATE AND TAIL		Precautions For Xenon Headlamp Service	149
LAMPS SYSTEM	76	Precautions for Removing Battery Terminal	150
Wiring Diagram - PARKING LICENSE PLATE		PERIODIC MAINTENANCE	151
AND TAIL LAMPS -	76	HEADLAMP AIMING ADJUSTMENT	151
STOP LAMP	81	Description	151
Wiring Diagram - STOP LAMP -	81	Aiming Adjustment Procedure	152

FRONT FOG LAMP AIMING ADJUSTMENT ..	153	Removal and Installation	163	
Description	153			A
Aiming Adjustment Procedure	153			
REMOVAL AND INSTALLATION	155			
FRONT COMBINATION LAMP	155			
Exploded View	155			
Removal and Installation	156			
Replacement	156			B
Disassembly and Assembly	157			
FRONT FOG LAMP	158			
Exploded View	158			
Removal and Installation	158			
Replacement	158			
OPTICAL SENSOR	160			
Exploded View	160			
Removal and Installation	160			
LIGHTING & TURN SIGNAL SWITCH	161			
Exploded View	161			
HAZARD SWITCH	162			
Exploded View	162			
STEERING ANGLE SENSOR	163			
		REAR COMBINATION LAMP	164	
		Exploded View	164	
		Removal and Installation	164	
		Replacement	164	B
		HIGH-MOUNTED STOP LAMP	166	
		Exploded View	166	
		Removal and Installation	166	C
		BACK-UP LAMP	167	
		Exploded View	167	
		Removal and Installation	167	
		Replacement	167	D
		LICENSE PLATE LAMP	169	
		Exploded View	169	
		Removal and Installation	169	
		Replacement	169	E
		SERVICE DATA AND SPECIFICATIONS		
		(SDS)	171	F
		SERVICE DATA AND SPECIFICATIONS		
		(SDS)	171	G
		Bulb Specifications	171	
				H
				I
				J
				K
				EXL
				M
				N
				O
				P

EXL

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[XENON TYPE]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000010988581

OVERALL SEQUENCE

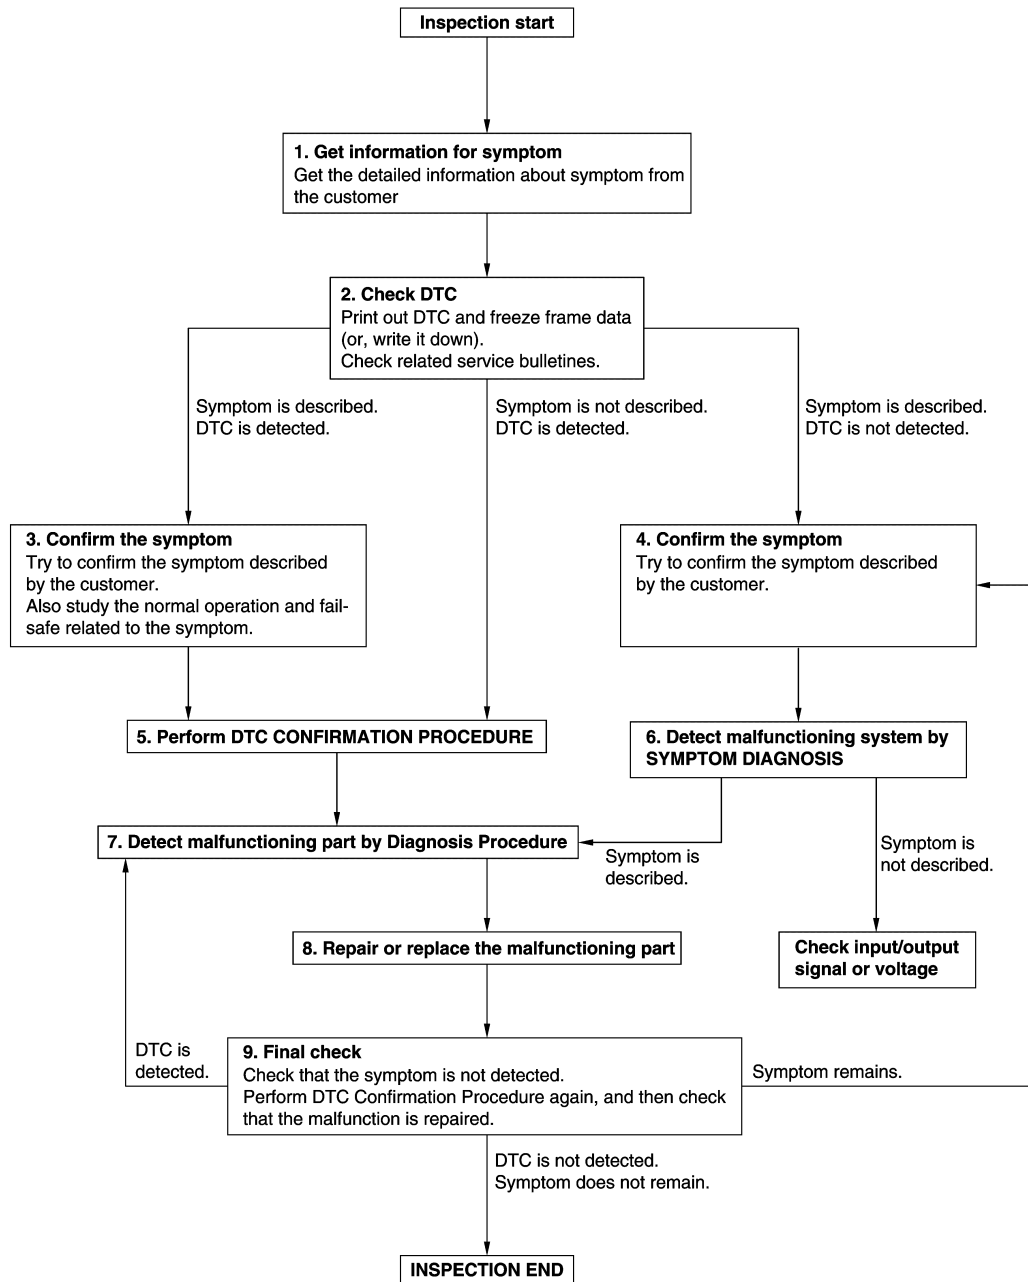

JMKIA8652GB

DETAILED FLOW

Revision: 2014 June

EXL-4

2014 Q40

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[XENON TYPE]

1.GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2.CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

- Symptom is described, DTC is detected>>GO TO 3.
- Symptom is described, DTC is not detected>>GO TO 4.
- Symptom is not described, DTC is detected>>GO TO 5.

3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.
Also study the normal operation and fail-safe related to the symptom.
Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.
Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to DTC INSPECTION PRIORITY CHART, and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

- YES >> GO TO 7.
- NO >> Check according to [GI-41. "Intermittent Incident"](#).

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

- YES >> GO TO 7.
- NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7.DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

DIAGNOSIS AND REPAIR WORK FLOW

[XENON TYPE]

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-41. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.


YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

SYSTEM DESCRIPTION

HEADLAMP SYSTEM

System Diagram

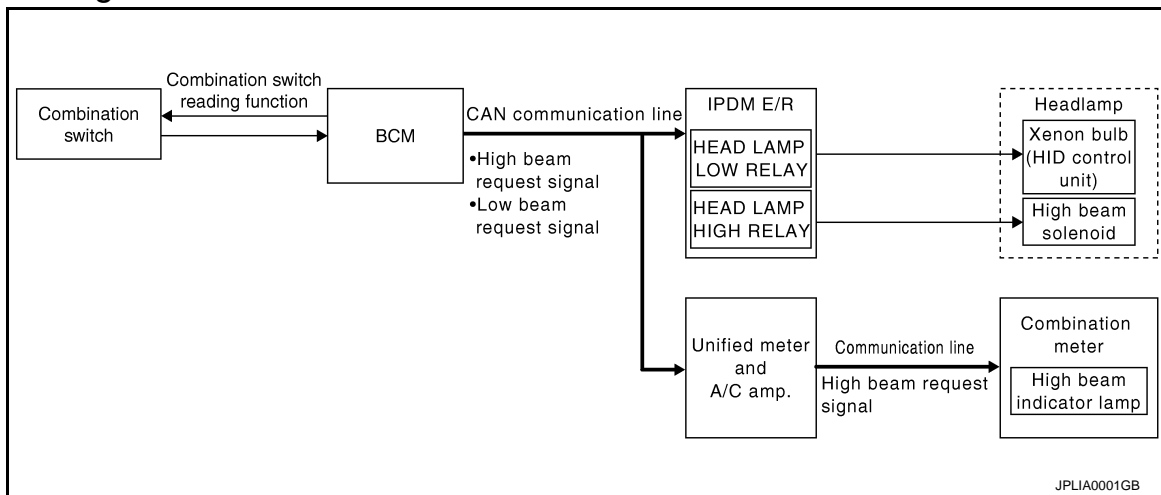

System Description

INFOID:0000000010988583

OUTLINE

- Mobile valve shade type is adopted. Xenon headlamp switches the high beam and the low beam with one xenon bulb each on right and left.
- Headlamp is controlled by combination switch reading function and headlamp control function of BCM, and relay control function of IPDM E/R.

HEADLAMP BASIC OPERATION

- BCM detects the combination switch condition with the combination switch reading function.
- BCM transmits the low beam request signal to IPDM E/R with CAN communication according to the headlamp ON condition.

Headlamp ON condition

- Lighting switch 2ND
- Lighting switch PASS
- Lighting switch AUTO, and the auto light function ON judgment (with auto light system)
- IPDM E/R turns the integrated headlamp low relay ON, and turns the headlamp ON according to the low beam request signal.

HEADLAMP HI/LO SWITCHING OPERATION

- BCM transmits the high beam request signal to IPDM E/R and the combination meter (through unified meter and A/C amp.) with CAN communication according to the high beam switching condition.

High beam switching condition


- Lighting switch HI with the headlamp ON
- Lighting switch PASS
- Combination meter turns the high beam indicator lamp ON according to the high beam request signal.
- IPDM E/R turns the integrated headlamp high relay ON, and turns the headlamp ON according to the high beam request signal.

HEADLAMP SYSTEM

[XENON TYPE]

< SYSTEM DESCRIPTION >

- When the headlamp high relay is turned ON, magnetic force is applied to the high beam solenoid (1) by a current. The mobile valve shade (3) is switched to the high beam position through the actuator rod (2).
- When the headlamp high relay is turned OFF, the current stops. The mobile valve shade returns to the low beam position automatically.

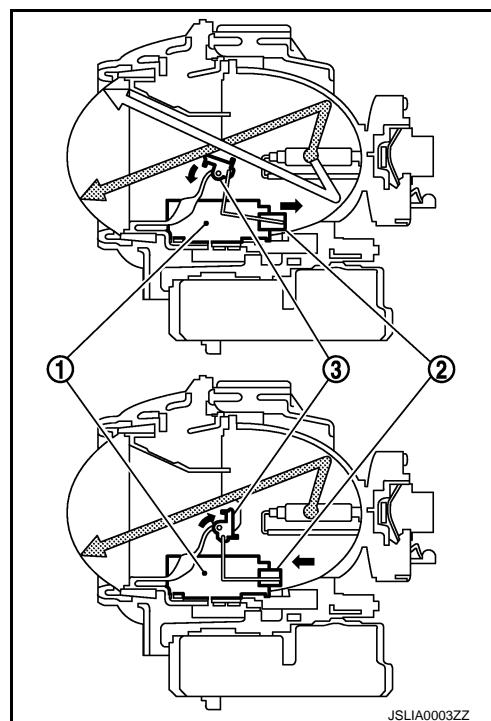


HEADLAMP SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

Component Parts Location

INFOID:000000010988584

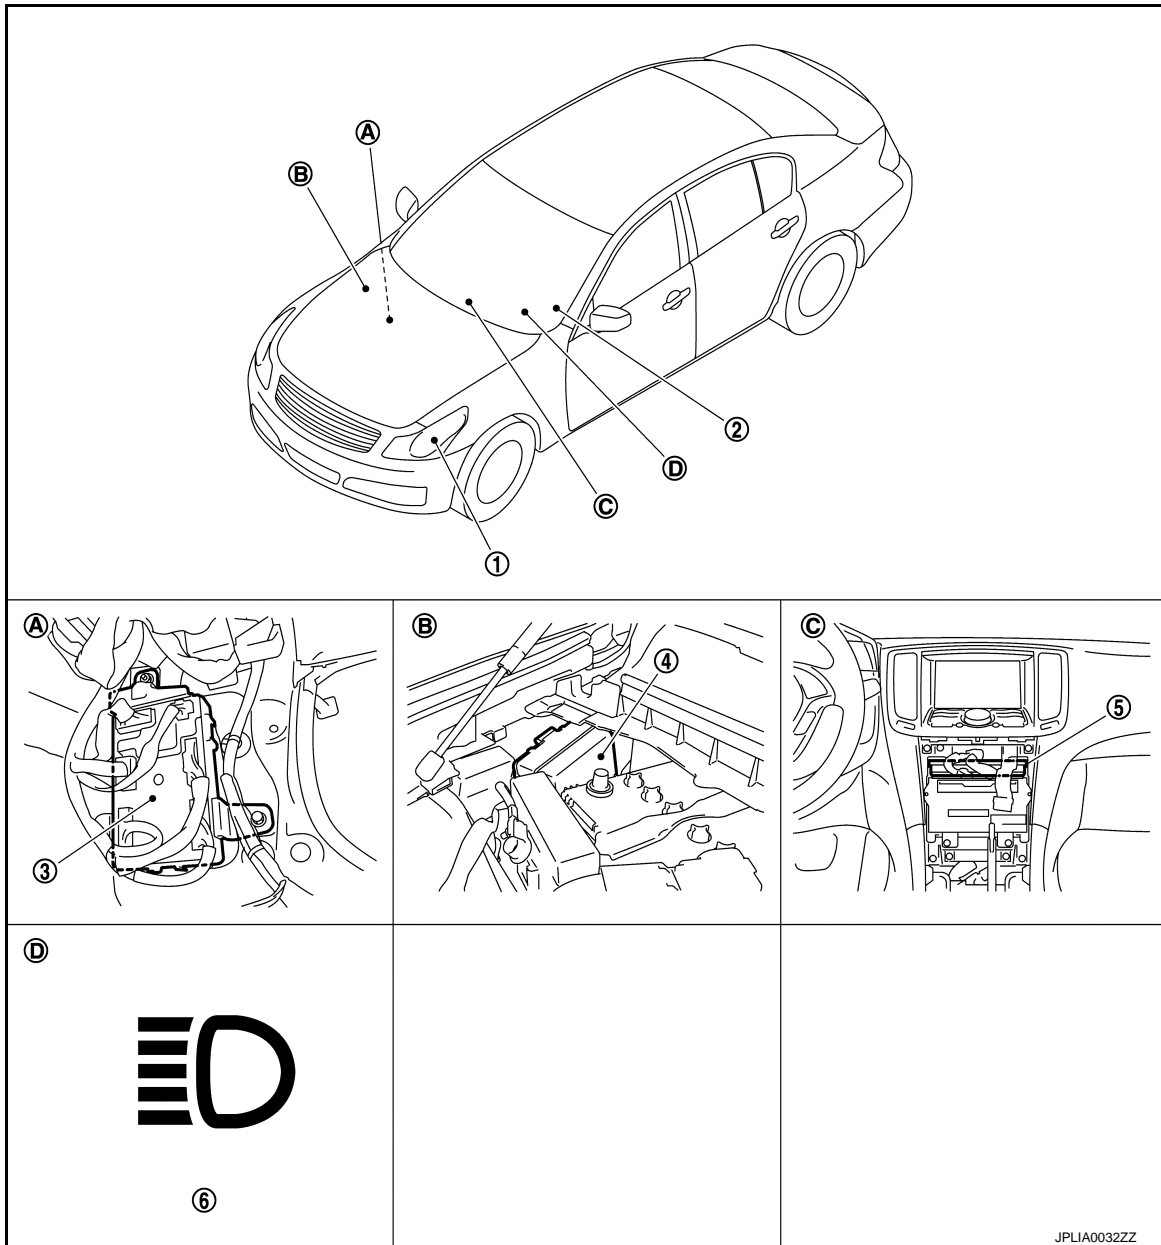

- | | | |
|-------------------------------------|--------------------------------|-----------------------------|
| 1. Headlamp | 2. Combination switch | 3. BCM |
| 4. IPDM E/R | 5. Unified meter and A/C amp. | 6. High beam indicator lamp |
| A. Dash side lower (passenger side) | B. Engine room dash panel (RH) | C. Behind the cluster lid C |
| D. On the combination meter | | |

JPLIA0032ZZ

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

HEADLAMP SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]


Component Description

INFOID:000000010988585

Part	Description	
BCM	<ul style="list-style-type: none">• Detects each switch condition by the combination switch reading function.• Judges that the headlamp is turned ON according to the vehicle condition.- Requests the headlamp relay (High/Low) ON to IPDM E/R (with CAN communication).- Requests the high beam indicator lamp ON to the combination meter [with CAN communication (through unified meter and A/C amp.)].	
IPDM E/R	Controls the integrated relay, and supplies voltage to the load according to the request from BCM (with CAN communication).	
Combination switch (Lighting & turn signal switch)	Refer to BCS-7, "System Diagram" .	
Combination meter (High beam indicator lamp)	Turns the high beam indicator lamp ON according to the request from BCM [with CAN communication (through unified meter and A/C amp.)].	
Headlamp assembly	<ul style="list-style-type: none">• HID control unit• Xenon bulb	Refer to EXL-39, "Description" .
	High beam solenoid	Refer to EXL-34, "Description" .

AUTO LIGHT SYSTEM

System Diagram

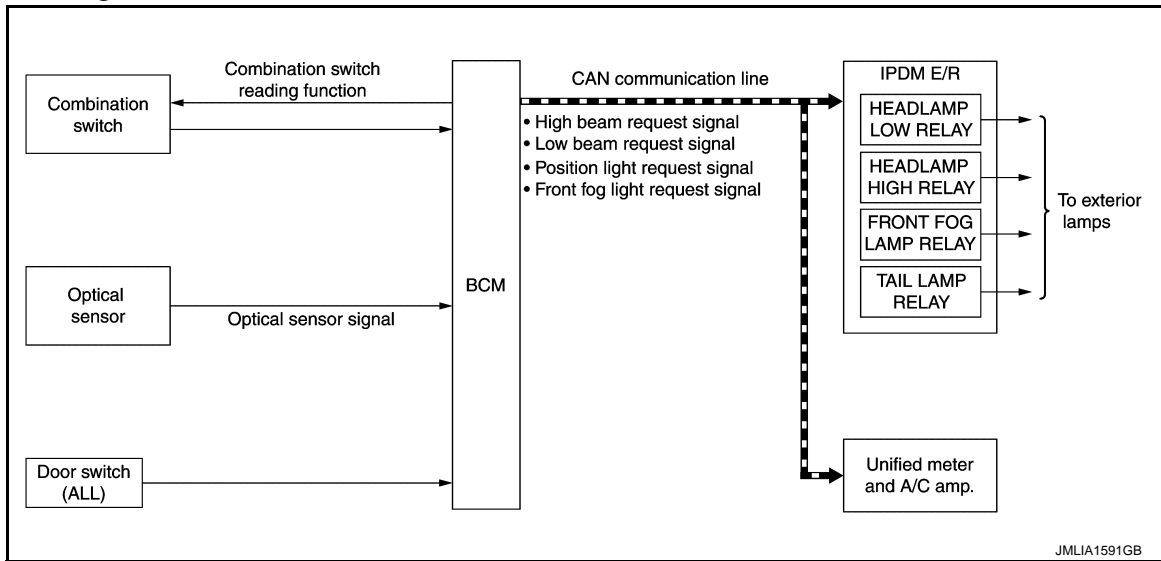

System Description

INFOID:000000010988587

OUTLINE

- Auto light system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Auto light function
- Delay timer function

Control by IPDM E/R

- Relay control function
- Auto light system has the auto light function and the delay timer function.
- Auto light function turns the exterior lamps* and each illumination ON/OFF automatically according to the outside brightness.
- When auto light system turns the exterior lamps ON with the ignition switch OFF, delay timer function turns the exterior lamps OFF depending on the vehicle condition with the auto light function after a certain period of time.

*: Headlamp (LO/HI), parking lamp, tail lamp, side maker lamp and front fog lamp (Headlamp HI and front fog lamp depend on the combination switch condition.)

AUTO LIGHT FUNCTION

- BCM detects the combination switch condition with the combination switch reading function.
- BCM supplies voltage to optical sensor when the ignition switch is turned ON or ACC.
- Optical sensor converts outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.
- BCM judges outside brightness from the optical sensor signal and judges ON/OFF condition of the exterior lamp and each illumination according to the outside brightness.
- BCM transmits each request signal to IPDM E/R with CAN communication according to ON/OFF condition by the auto light function.

NOTE:

ON/OFF timing differs based on the sensitivity from the setting. The setting can be set by CONSULT. Refer to [EXL-23. "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)".](#)

DELAY TIMER FUNCTION

BCM turns the exterior lamp OFF depending on the vehicle condition with the auto light function when the ignition switch is turned OFF.

- Turns the exterior lamp OFF 5 minutes after detecting that any door opens (Door switch ON).
- Turns the exterior lamp OFF a certain period of time* after closing all doors (Door switch ON→OFF).

AUTO LIGHT SYSTEM

[XENON TYPE]

< SYSTEM DESCRIPTION >


- Turns the exterior lamp OFF with the ignition switch ACC or the light switch OFF.
- *: The preset time is 45 seconds. The timer operating time can be set by CONSULT. Refer to [EXL-23, "HEAD-LAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#).

NOTE:

When any position other than the light switch AUTO is set, the auto light system function switches to the exterior lamp battery saver function.

Component Parts Location

INFOID:000000010988588

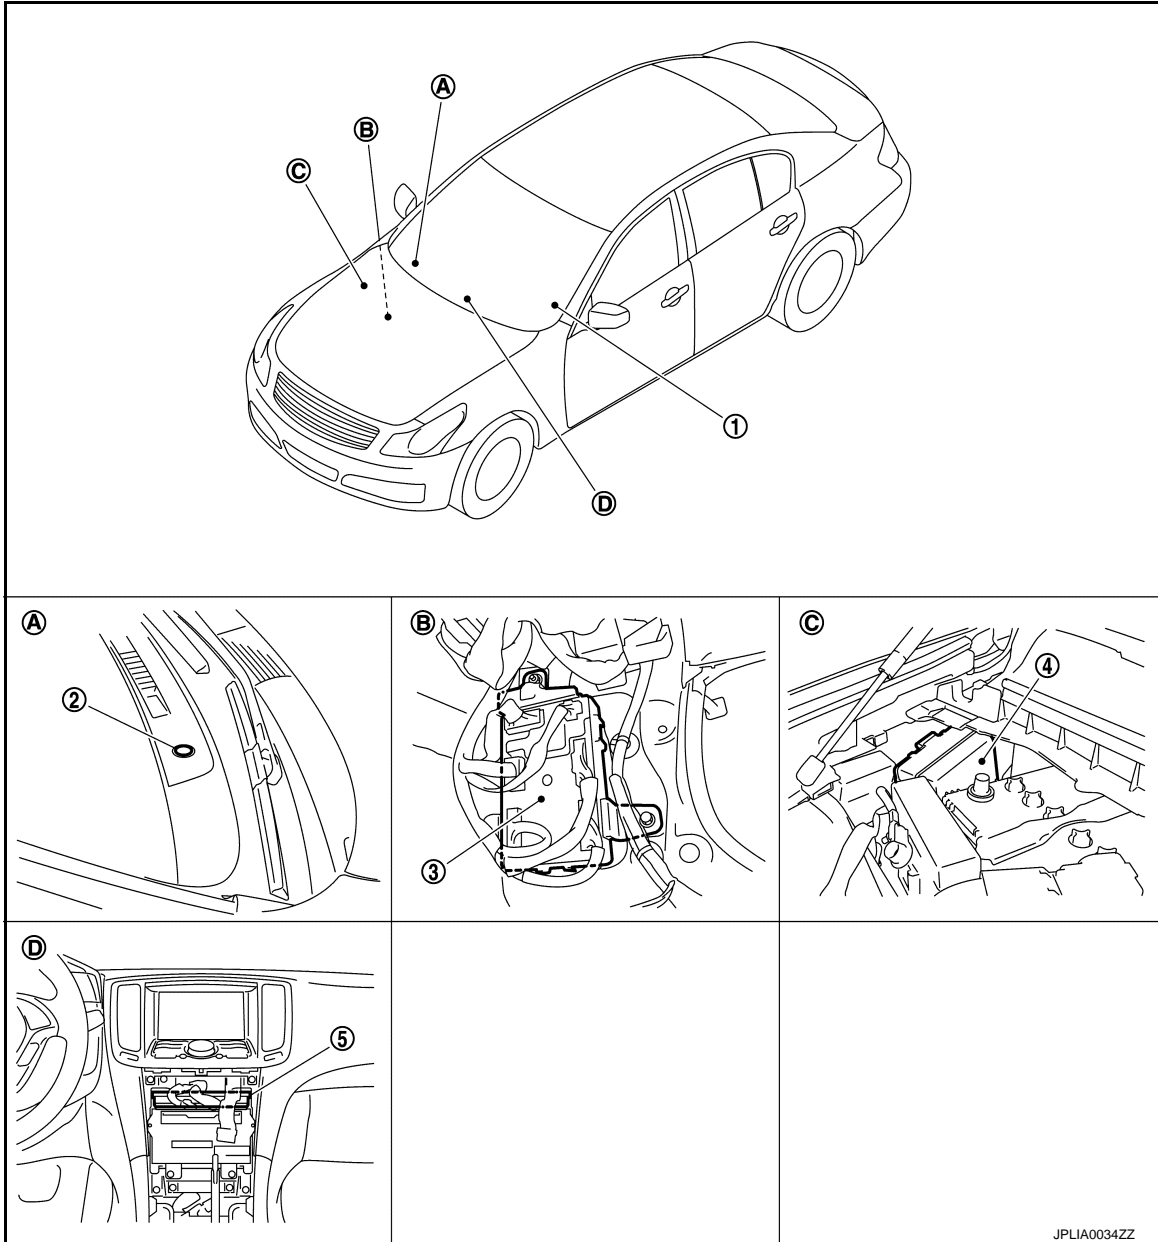

JPLIA0034ZZ

- | | | |
|--------------------------------|-------------------------------------|--------------------------------|
| 1. Combination switch | 2. Optical sensor | 3. BCM |
| 4. IPDM E/R | 5. Unified meter and A/C amp. | |
| A. Instrument upper panel (RH) | B. Dash side lower (passenger side) | C. Engine room dash panel (RH) |
| D. Behind the cluster lid C | | |

AUTO LIGHT SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

Component Description

INFOID:000000010988589


Part	Description
BCM	<ul style="list-style-type: none">• Detects each switch condition by the combination switch reading function.• Judges the outside brightness from the optical sensor signal.• Judges the OFF timing according to the vehicle condition.• Judges the ON/OFF status of the exterior lamp and each illumination according to the outside brightness and the vehicle condition.- Requests ON/OFF of each relay to IPDM E/R (with CAN communication).
IPDM E/R	Controls the integrated relay, and supplies voltage to the load according to the request from BCM (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-7, "System Diagram" .
Optical sensor	Refer to EXL-48, "Description" .

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP SYSTEM

System Diagram

INFOID:000000010988594

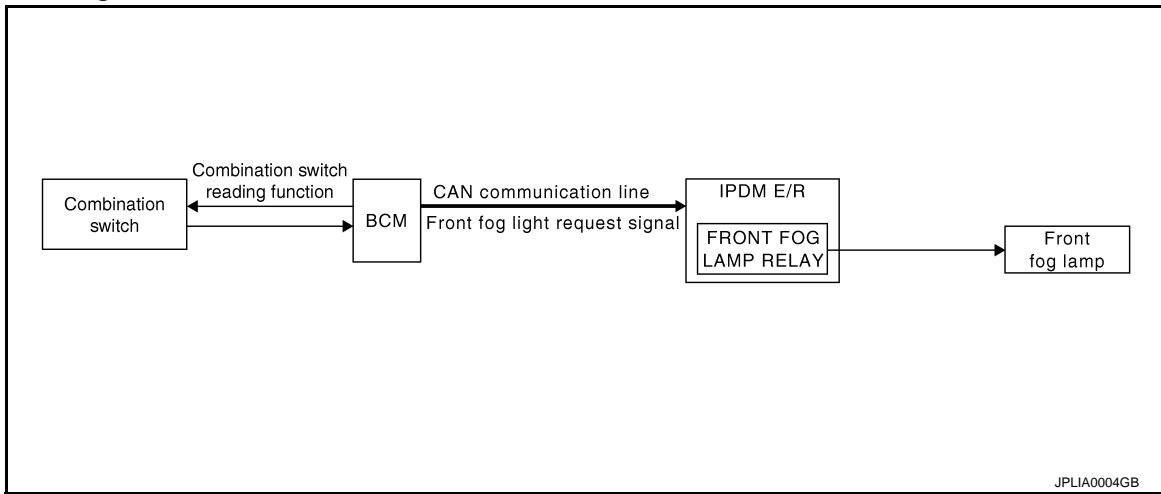

System Description

INFOID:000000010988595

OUTLINE

Front fog lamp is controlled by combination switch reading function and front fog lamp control function of BCM, and relay control function of IPDM E/R.

FRONT FOG LAMP OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front fog light request signal to IPDM E/R with CAN communication according to the front fog lamp ON condition.

Front fog lamp ON condition

- Front fog lamp switch ON with the headlamp ON (except for the high beam ON)
- IPDM E/R turns the integrated front fog lamp relay ON, and turns the front fog lamp ON according to the front fog light request signal.


FRONT FOG LAMP SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

Component Parts Location

INFOID:000000010988596

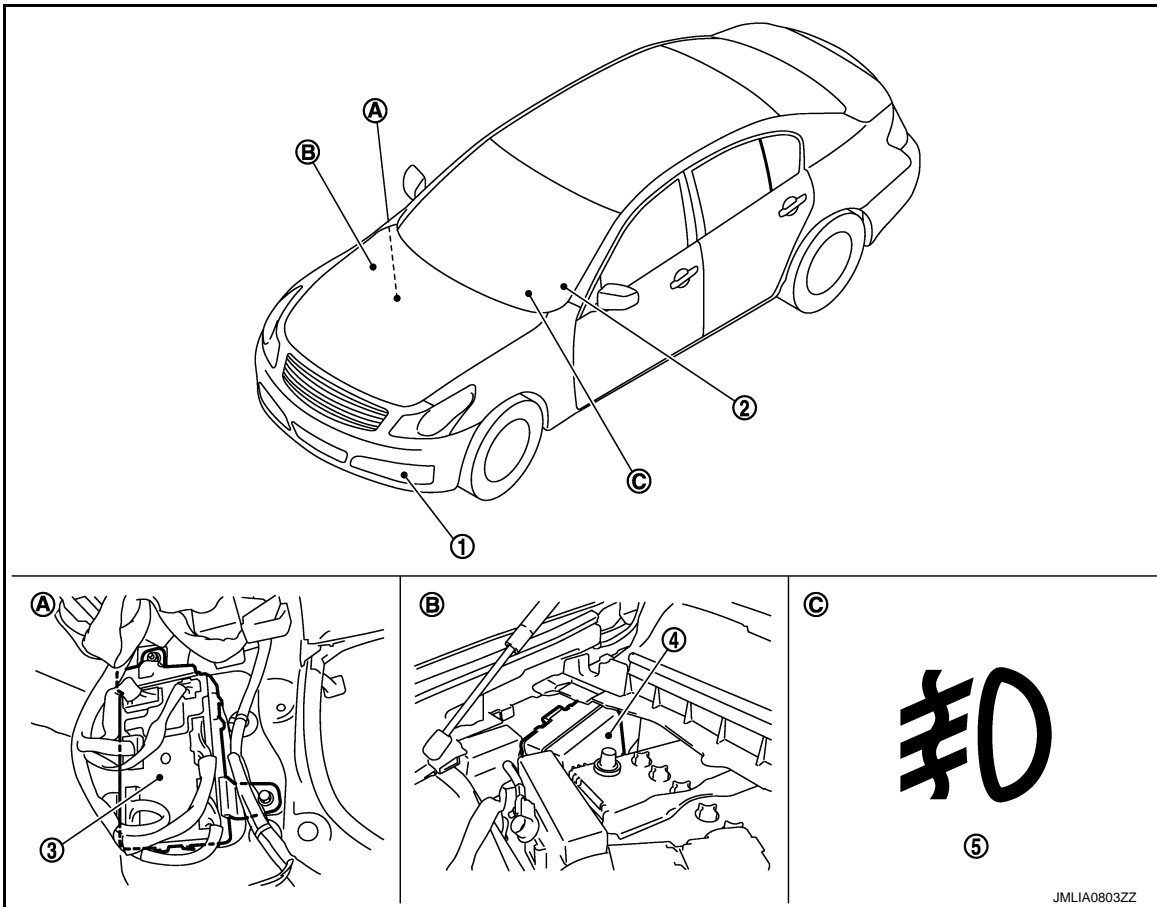

- | | | |
|-------------------------------------|----------------------------------|-----------------------------|
| 1. Front fog lamp | 2. Combination switch | 3. BCM |
| 4. IPDM E/R | 5. Front fog lamp indicator lamp | |
| A. Dash side lower (passenger side) | B. Engine room dash panel (RH) | C. On the combination meter |

Component Description

INFOID:000000010988597

EXL

Part	Description
BCM	<ul style="list-style-type: none"> • Detects each switch condition by the combination switch reading function. • Judges the front fog lamp ON/OFF status according to the vehicle condition. - Requests the front fog lamp relay ON to IPDM E/R (with CAN communication).
IPDM E/R	Controls the integrated relay and supplies voltage to the load according to the request from BCM (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-7. "System Diagram" .

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< SYSTEM DESCRIPTION >

[XENON TYPE]

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

System Diagram

INFOID:000000010988598

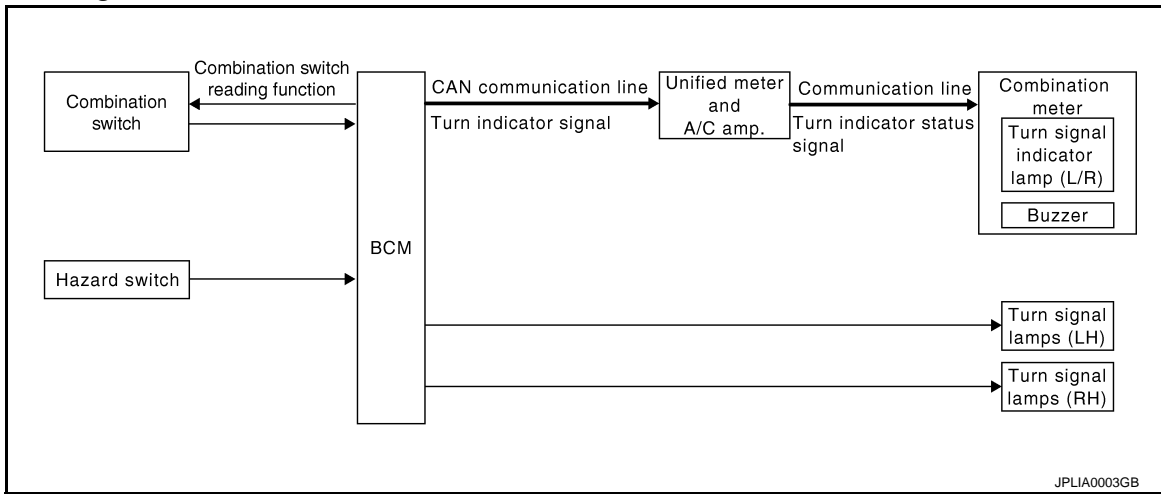

System Description

INFOID:000000010988599

OUTLINE

Turn signal and the hazard warning lamp is controlled by combination switch reading function and the flasher control function of BCM.

TURN SIGNAL LAMP OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM supplies voltage to the right (left) turn signal lamp circuit when the ignition switch is turned ON and the turn signal switch is in the right (left) position. BCM blinks the turn signal lamp.

HAZARD WARNING LAMP OPERATION

BCM supplies voltage to both turn signal lamp circuit when the hazard switch is turned ON. BCM blinks the hazard warning lamp.

TURN SIGNAL INDICATOR LAMP AND TURN SIGNAL SOUND OPERATION

- BCM transmits the turn indicator signal to the combination meter (through unified meter and A/C amp.) with CAN communication while the turn signal lamp and the hazard warning lamp operating.
- Combination meter outputs the turn signal sound with the integrated buzzer while blinking the turn signal indicator lamp according to the turn indicator status signal.

HIGH FLASHER OPERATION

- BCM detects the turn signal lamp circuit status from the current value.
- BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while operating the hazard warning lamp.


TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

Component Parts Location

INFOID:000000010988600

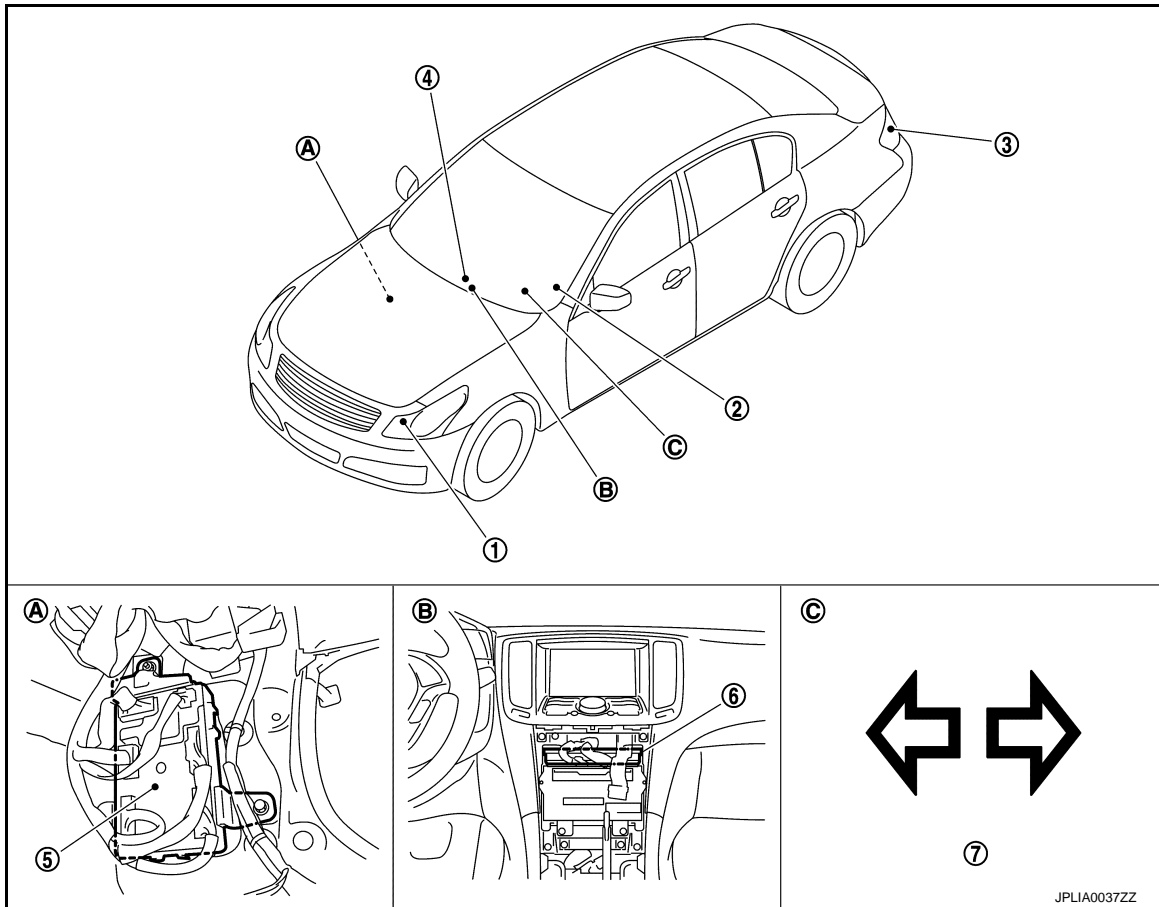

- | | | |
|-------------------------------------|-----------------------------|-------------------------------|
| 1. Front turn signal lamp | 2. Combination switch | 3. Rear turn signal lamp |
| 4. Hazard warning switch | 5. BCM | 6. Unified meter and A/C amp. |
| 7. Turn signal indicator lamp | | |
| A. Dash side lower (passenger side) | B. Behind the cluster lid C | C. On the combination meter |

Component Description

INFOID:000000010988601

Part	Description
BCM	<ul style="list-style-type: none"> • Detects each switch condition by the combination switch reading function. • Judges the blinks of the turn signal lamp and the hazard warning lamp from each switch status. The applicable turn signal lamp blinks. - Requests the turn signal indicator lamp blink to the combination meter (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-7, "System Diagram" .
Hazard switch (Multifunction switch)	Refer to EXL-51, "Description" .
Combination meter (Turn signal indicator lamp & buzzer)	Blinks the turn signal indicator lamp and outputs the turn signal operating sound with integrated buzzer according to the request from BCM [with CAN communication (through unified meter and A/C amp.)].

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM


< SYSTEM DESCRIPTION >

[XENON TYPE]

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

System Diagram

INFOID:000000010988602

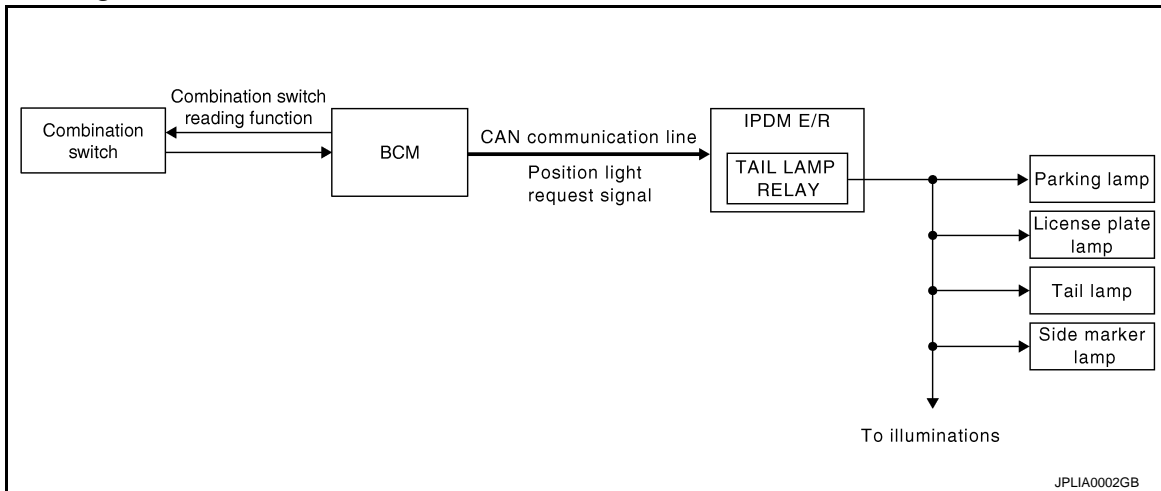

System Description

INFOID:000000010988603

OUTLINE

Parking, license plate, side marker and tail lamps are controlled by combination switch reading function and headlamp control function of BCM, and relay control function of IPDM E/R.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the position light request signal to IPDM E/R with CAN communication according to the ON/OFF condition of the parking, license plate, side marker and tail lamps.

Parking, license plate, side marker and tail lamps ON condition

- Lighting switch 1ST
- Lighting switch 2ND
- Lighting switch AUTO, and the auto light function ON judgment (with auto light system)
- IPDM E/R turns the integrated tail lamp relay ON and turns the parking lamp, license plate, side marker and tail lamps ON according to the position light request signal.


PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

Component Parts Location

INFOID:000000010988604

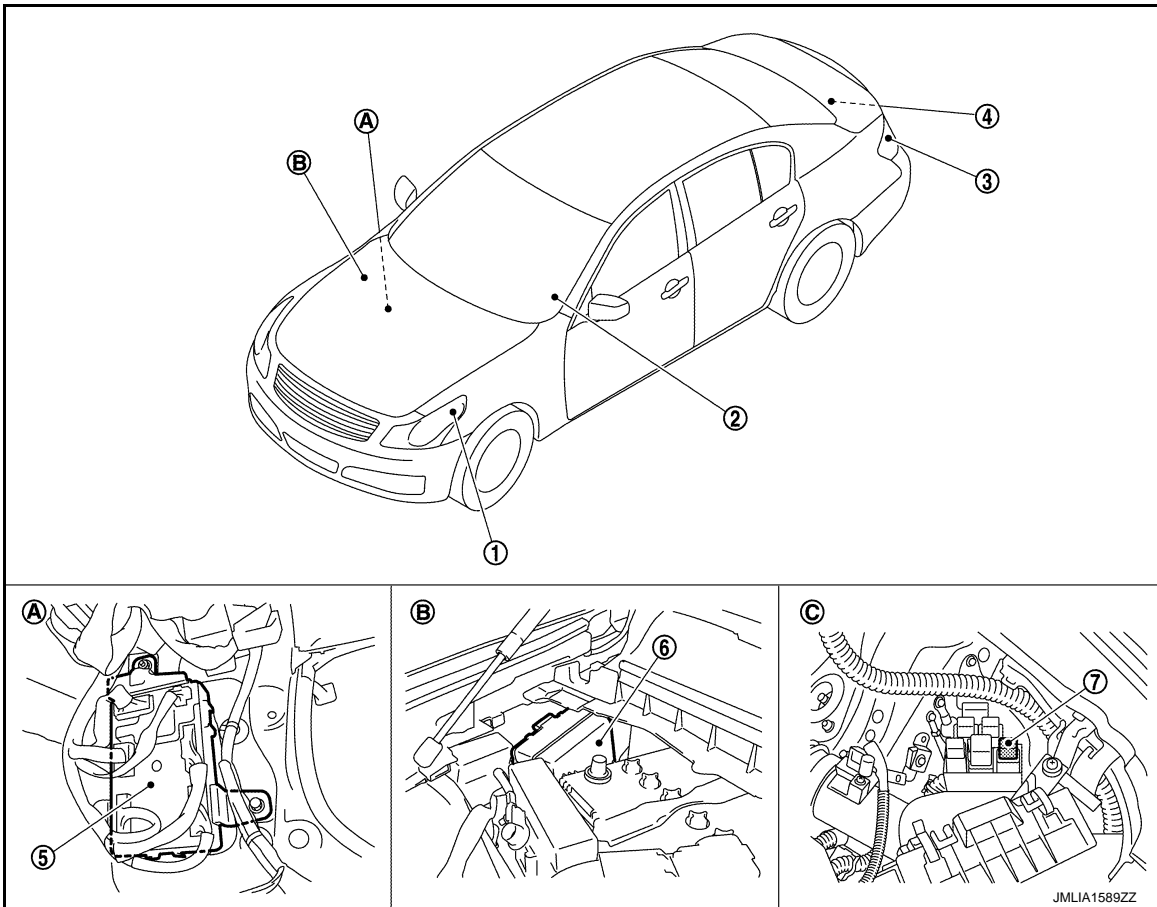

- | | | |
|---|-------------------------------------|---|
| 1. • Parking lamp
• Front side marker lamp | 2. Combination switch | 3. • Tail lamp
• Rear side marker lamp |
| 4. License plate lamp | 5. BCM | 6. IPDM E/R |
| 7. Daytime running light relay* | A. Dash side lower (passenger side) | B. Engine room dash panel (RH) |
| | C. Engine room dash panel (RH) | |

*: Not applicable

Component Description

INFOID:000000010988605

Part	Description
BCM	<ul style="list-style-type: none"> • Detects each switch condition by the combination switch reading function. • Judges the ON/OFF status of the parking, license plate, side marker and tail lamps according to the vehicle condition. - Requests the tail lamp relay ON to IPDM E/R (with CAN communication).
IPDM E/R	Controls the integrated relay and supplies voltage to the load according to the request from BCM (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-7. "System Diagram" .


EXTERIOR LAMP BATTERY SAVER SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

EXTERIOR LAMP BATTERY SAVER SYSTEM

System Diagram

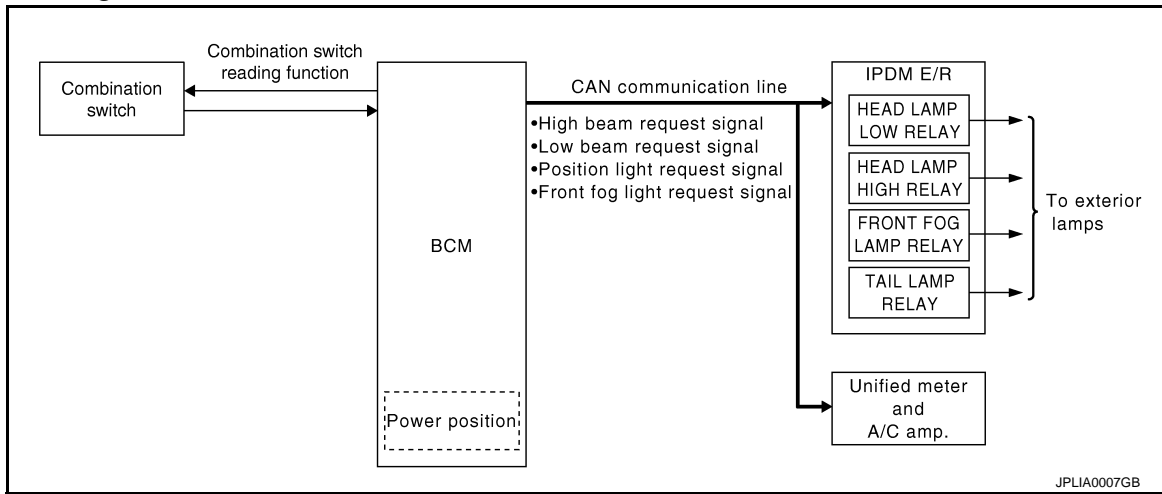

System Description

INFOID:000000010988607

OUTLINE

- Exterior lamp battery saver system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Exterior lamp battery saver function

Control by IPDM E/R

- Relay control function
- BCM turns the exterior lamp* OFF after a period of time to prevent the battery from over-discharge when the ignition switch is turned OFF with the exterior lamp ON.

*: Headlamp (LO/HI), parking lamp, tail lamp, side marker lamp, license plate lamp and front fog lamp

NOTE:

When the lighting switch is turned AUTO, the exterior lamp battery saver switches to the auto light system. Refer to [EXL-11. "System Diagram"](#).

EXTERIOR LAMP BATTERY SAVER ACTIVATION

BCM activates the timer and turns the exterior lamp OFF 5 minutes after the ignition switch is turned from ON → OFF with the exterior lamps ON.

NOTE:

- Headlamp control function turns the exterior lamps ON normally when the ignition switch is turned ACC or the engine started (both before and after the exterior lamp battery saver is turned OFF).
- The timer starts at the time that the lighting switch is turned from OFF → 1ST or 2ND with the exterior lamp OFF.


EXTERIOR LAMP BATTERY SAVER SYSTEM

< SYSTEM DESCRIPTION >

[XENON TYPE]

Component Parts Location

INFOID:000000010988608

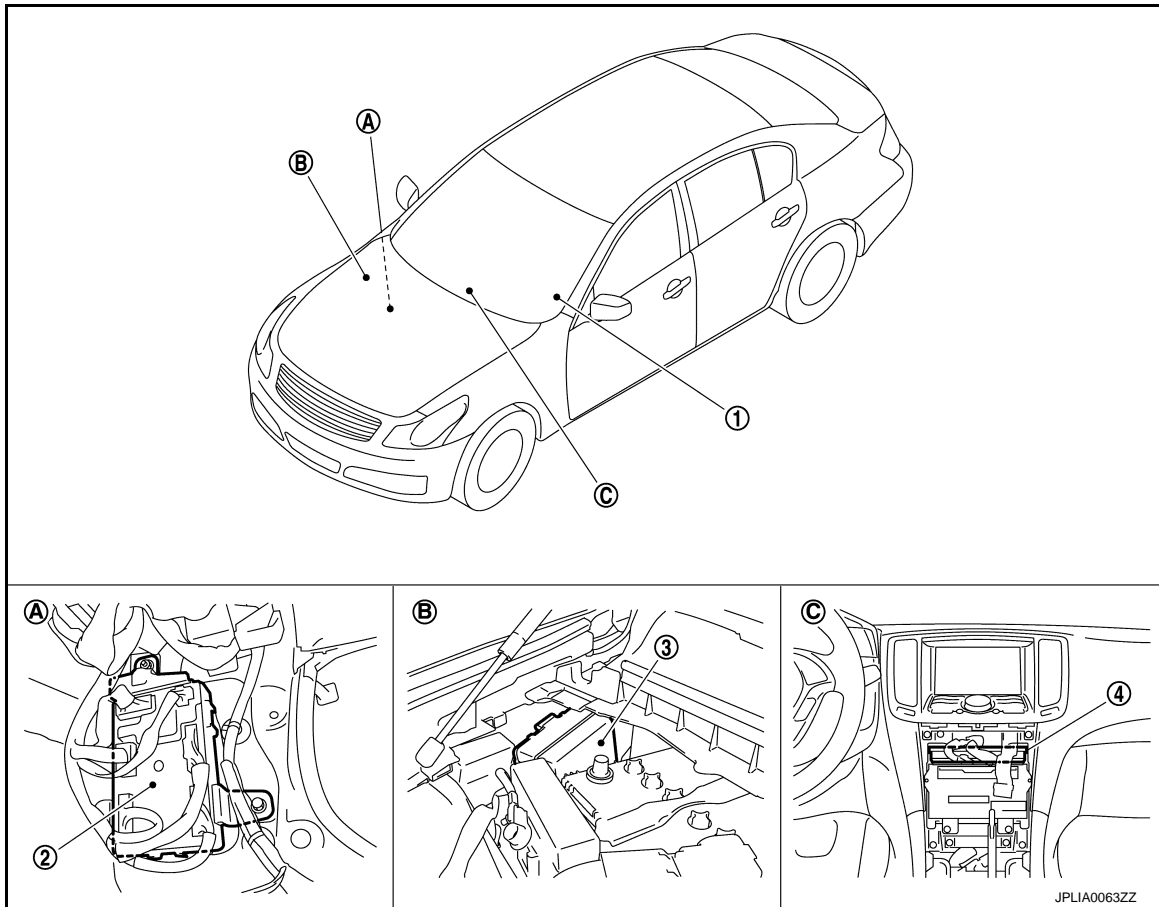

- | | | |
|-------------------------------------|--------------------------------|-----------------------------|
| 1. Combination switch | 2. BCM | 3. IPDM E/R |
| 4. Unified meter and A/C amp. | | |
| A. Dash side lower (passenger side) | B. Engine room dash panel (RH) | C. Behind the cluster lid C |

Component Description

INFOID:000000010988609

EXL

Part	Description
BCM	<ul style="list-style-type: none"> • Detects each switch condition by the combination switch reading function. • Judges the exterior lamp OFF according to the vehicle condition. - Requests each relay OFF to IPDM E/R (with CAN communication).
IPDM E/R	Controls the integrated relay according to the request from BCM (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-7, "System Diagram" .

DIAGNOSIS SYSTEM (BCM)

[XENON TYPE]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000011421472

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	This function is not used even though it is displayed.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
<ul style="list-style-type: none"> • Intelligent Key system • Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
IVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid open	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[XENON TYPE]

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	A
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	B
Vehicle Condition	SLEEP>LOCK	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)	B
	SLEEP>OFF	While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)	C
	LOCK>ACC	While turning power supply position from "LOCK"* to "ACC"	D
	ACC>ON	While turning power supply position from "ACC" to "IGN"	D
	RUN>ACC	While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)	E
	CRANK>RUN	While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)	E
	RUN>URGENT	While turning power supply position from "RUN" to "ACC" (Emergency stop operation)	F
	ACC>OFF	While turning power supply position from "ACC" to "OFF"	F
	OFF>LOCK	While turning power supply position from "OFF" to "LOCK"*	G
	OFF>ACC	While turning power supply position from "OFF" to "ACC"	G
	ON>CRANK	While turning power supply position from "IGN" to "CRANKING"	H
	OFF>SLEEP	While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode	H
	LOCK>SLEEP	While turning BCM status from normal mode (Power supply position is "LOCK"*.) to low power consumption mode	I
	LOCK	Power supply position is "LOCK"*	I
	OFF	Power supply position is "OFF" (Ignition switch OFF)	J
	ACC	Power supply position is "ACC" (Ignition switch ACC)	J
	ON	Power supply position is "IGN" (Ignition switch ON with engine stopped)	K
	ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)	K
CRANKING	Power supply position is "CRANKING" (At engine cranking)	K	
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> The number is 0 when a malfunction is detected now. The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 	EXL

NOTE:

*: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position (A/T models), and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

HEADLAMP

HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:0000000010988611

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Service item	Setting item	Setting	
BATTERY SAVER SET	On*	With the exterior lamp battery saver function	
	Off	Without the exterior lamp battery saver function	
ILL DELAY SET	MODE 1*	45 sec.	Sets delay timer function timer operation time. (All doors closed)
	MODE 2	Without the function	
	MODE 3	30 sec.	
	MODE 4	60 sec.	
	MODE 5	90 sec.	
	MODE 6	120 sec.	
	MODE 7	150 sec.	
	MODE 8	180 sec.	
CUSTOM A/LIGHT SETTING	MODE 1*	Normal	
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation.)	
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.)	
	MODE 4	Less sensitive setting than normal setting (Turns ON later than normal operation.)	

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item [Unit]	Description
PUSH SW [On/Off]	Indicates [ON/OFF] condition of push-button ignition switch.
ENGINE STATE [Stop/Stall/Crank/Run]	Indicates [STOP/STALL/CRANK/RUN] condition of engine states.
VEH SPEED 1 [km/h]	Display the vehicle speed signal received from combination meter by numerical value [Km/h].
KEY SW-SLOT [On/Off]	Indicates [ON/OFF] condition of key slot.
TURN SIGNAL R [On/Off]	Each switch status that BCM judges from the combination switch reading function
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
HI BEAM SW [On/Off]	
HEAD LAMP SW1 [On/Off]	
HEAD LAMP SW2 [On/Off]	
PASSING SW [On/Off]	
AUTO LIGHT SW [On/Off]	
FR FOG SW [On/Off]	

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Monitor item [Unit]	Description
RR FOG SW [On/Off]	NOTE: This item is displayed, but cannot be monitored.
DOOR SW-DR [On/Off]	Indicated [ON/OFF] condition of front door switch (driver side).
DOOR SW-AS [On/Off]	Indicated [ON/OFF] condition of front door switch (passenger side).
DOOR SW-RR [On/Off]	Indicated [ON/OFF] condition of rear door switch RH.
DOOR SW- RL [On/Off]	Indicated [ON/OFF] condition of rear door switch LH.
DOOR SW-BK [On/Off]	NOTE: This item is displayed, but cannot be monitored.
OPTICAL SENSOR [V]	The value of exterior brightness voltage input from the optical sensor

ACTIVE TEST

Test item	Operation	Description
TAIL LAMP	On	Transmits the position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON.
	Off	Stops the position light request signal transmission.
HEAD LAMP	Hi	Transmits the high beam request signal with CAN communication to turn the headlamp (HI).
	Low	Transmits the low beam request signal with CAN communication to turn the headlamp (LO).
	Off	Stops the high & low beam request signal transmission.
FR FOG LAMP	On	Transmits the front fog light request signal to IPDM E/R with CAN communication to turn the front fog lamp ON.
	Off	Stops the front fog light request signal transmission.
RR FOG LAMP	On	NOTE:
	Off	The item is indicated, but cannot be tested.
DAYTIME RUNNING LIGHT	On	NOTE:
	Off	The item is indicated, but cannot be tested.
CORNERING LAMP	RH	NOTE:
	LH	The item is indicated, but cannot be tested.
	Off	
ILL DIM SIGNAL	On	NOTE:
	Off	The item is indicated, but cannot be tested.

FLASHER

FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:0000000010988612

WORK SUPPORT

Service item	Setting item	Setting
HAZARD ANSWER BACK	Lock Only*	With locking only
	Unlk Only	With unlocking only
	Lock/Unlk	With locking/unlocking
	Off	Without the function
		Sets the hazard warning lamp answer back function when the door is lock/unlock with the request switch or the key fob.

DIAGNOSIS SYSTEM (BCM)

[XENON TYPE]

< SYSTEM DESCRIPTION >

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	Indicated [ON/OFF] condition of door request switch (driver side).
REQ SW-AS [On/Off]	Indicated [ON/OFF] condition of door request switch (passenger side).
PUSH SW [On/Off]	Indicates [ON/OFF] condition of push-button ignition switch.
TURN SIGNAL R [On/Off]	Each switch condition that BCM judges from the combination switch reading function
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	The switch status input from the hazard switch
RKE-LOCK [On/Off]	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-PANIC [On/Off]	Indicates [ON/OFF] condition of PANIC button of Intelligent Key.

ACTIVE TEST

Test item	Operation	Description
FLASHER	RH	Outputs the voltage to blink the right side turn signal lamps.
	LH	Outputs the voltage to blink the left side turn signal lamps.
	Off	Stops the voltage to turn the turn signal lamps OFF.

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000011421479

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Side maker lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)
NOTE:
 When auto active test is performed with hood opened, sprinkle water on windshield beforehand.
2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the front door switch (driver side) 10 times. Then turn the ignition switch OFF.
CAUTION:
Close passenger door.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.

CAUTION:

- **If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-66](#), "[Component Function Check](#)".**
- **Do not start the engine.**

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 6 steps are repeated 3 times.

Operation sequence	Inspection location	Operation
1	Oil pressure warning lamp	Blinks continuously during operation of auto active test
2	Front wiper	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none"> • Parking lamps • License plate lamps • Side maker lamps • Tail lamps • Front fog lamps 	10 seconds
4	Headlamps	LO ↔ HI 5 times
5	A/C compressor (magnet clutch)	ON ↔ OFF 5 times
6*	Cooling fan	MID for 5 seconds → HI for 5 seconds


*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Concept of auto active test

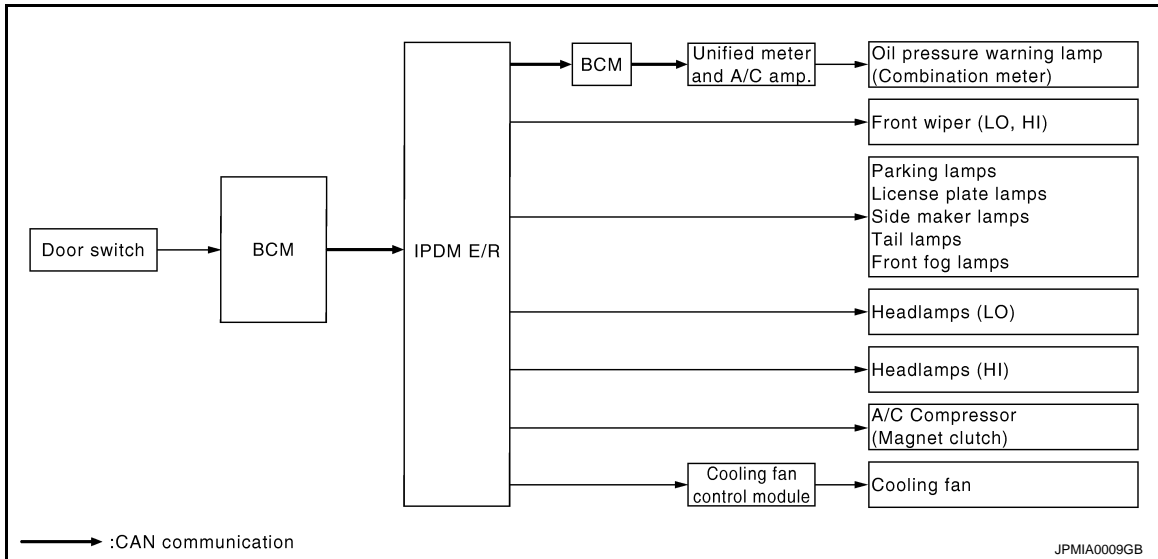

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> • Parking lamps • License plate lamps • Side maker lamps • Tail lamps • Front fog lamps • Headlamp (HI, LO) • Front wiper (HI, LO) 	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES <ul style="list-style-type: none"> • Unified meter and A/C amp. signal input circuit • CAN communication signal between unified meter and A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES <ul style="list-style-type: none"> • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R
		NO <ul style="list-style-type: none"> • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and unified meter and A/C amp. • Combination meter

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Symptom	Inspection contents	Possible cause
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES
		NO

- ECM signal input circuit
- CAN communication signal between ECM and IPDM E/R

- Cooling fan
- Harness or connector between cooling fan and cooling fan control module
- Cooling fan control module
- Harness or connector between IPDM E/R and cooling fan control module
- Cooling fan relay
- Harness or connector between IPDM E/R and cooling fan relay
- IPDM E/R

CONSULT Function (IPDM E/R)

INFOID:000000011421480

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [EXL-141, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIGNALS	Description
RAD FAN REQ [%]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.

DIAGNOSIS SYSTEM (IPDM E/R)

[XENON TYPE]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NALS	Description
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST ON/INHI ON/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the A/T shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		NOTE: The item is indicated, but not monitored.
S/L STATE [LOCK/UNLOCK/UNKWN]		NOTE: The item is indicated, but not monitored.
DTRL REQ [Off/On]		NOTE: The item is indicated, but not monitored.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		Displays the status of the hood switch judged by IPDM E/R.
HL WASHER REQ [Off/On]		NOTE: The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.
CRNRNG LMP REQ [Off/On]		NOTE: The item is indicated, but not monitored.

ACTIVE TEST

Test item	Operation	Description
CORNERING LAMP	Off	NOTE: The item is indicated, but cannot be tested.
	LH	
	RH	
HORN	On	Operates horn relay 1 and horn relay 2 for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[XENON TYPE]

Test item	Operation	Description
MOTOR FAN	1	OFF
	2	Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	NOTE: The item is indicated, but cannot be tested.
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM (BODY CONTROL MODULE)

BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000011421473

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	K
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M118	1	
M119	11	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000011421481

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

Signal name	Fuses and fusible link No.
Battery power supply	C
	50
	51

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Battery voltage
Connector	Terminal	
E4	1	
	2	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	12		Existed
E6	41		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]


HEADLAMP (HI) CIRCUIT

Description

INFOID:0000000110988617

The high beam solenoid drives the mobile valve shade. And the mobile valve shade switches the high beam and low beam of headlamp.

- When the headlamp high relay is turned ON, magnetic force is applied to the high beam solenoid (1) by a current. The mobile valve shade (3) is switched to the high beam position through the actuator rod (2).
- When the headlamp high relay is turned OFF, the current stops. The mobile valve shade returns to the low beam position automatically.

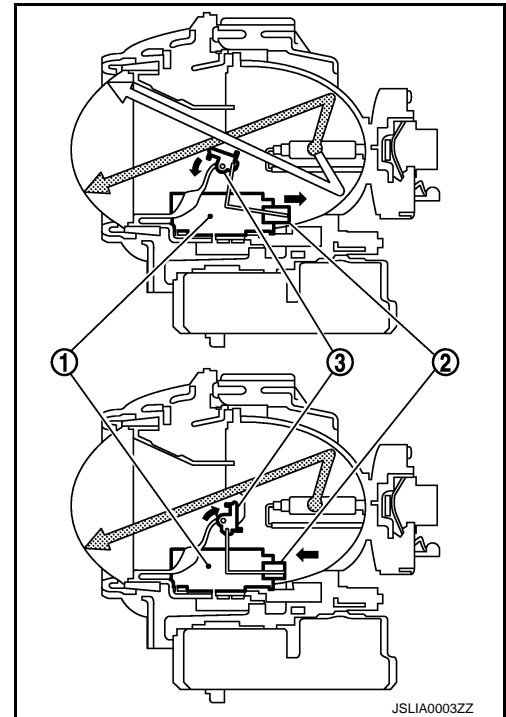

Component Function Check

INFOID:0000000110988618

1. CHECK HEADLAMP (HI) OPERATION

⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the headlamp switches to the high beam.

Ⓟ CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp switches to the high beam.

Hi : Headlamp switches to the high beam.

Off : Headlamp OFF

NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

Does the headlamp switch to the high beam?

- YES >> Headlamp (HI) circuit is normal.
NO >> Refer to [EXL-34, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000110988619

1. CHECK HEADLAMP (HI) OUTPUT VOLTAGE

Ⓟ CONSULT ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector.
3. Turn the ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

HEADLAMP (HI) CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

Terminals			Test item	Voltage (Approx.)		
(+)	(-)					
IPDM E/R			EXTERNAL LAMPS			
Connector	Terminal					
RH	E8	89			Hi	Battery voltage
LH		90			Off	0 V
			Hi	Battery voltage		
			Off	0 V		

Is the measurement value normal?

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK HEADLAMP (HI) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front combination lamp harness connector.

IPDM E/R		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E8	E28	7	Existed
LH		90	E58	

Does continuity exist?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

3. CHECK HEADLAMP (HI) FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Headlamp HI (RH)	IPDM E/R	#54	10 A
Headlamp HI (LH)	IPDM E/R	#53	10 A

Is the fuse fusing?

YES >> GO TO 4.

NO >> Replace IPDM E/R.

4. CHECK FRONT COMBINATION LAMP (HI) SHORT CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between the IPDM E/R harness connector terminal and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E8		Not existed
LH			

Does continuity exist?

YES >> Repair the harnesses or connectors. And then replace the fuse.

NO >> Replace the fuse. (Replace IPDM E/R if the fuse is fusing again.)

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

5. CHECK HEADLAMP GROUND OPEN CIRCUIT

Check continuity between the front combination lamp harness connector and the ground.

Front combination lamp			Ground	Continuity
Connector		Terminal		
RH	E28	4		Existed
LH	E58	4		

Does continuity exist?

YES >> Replace the front combination lamp.

NO >> Repair the harnesses or connectors.

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HEADLAMP (LO) CIRCUIT

Description

INFOID:0000000010988620

Headlamp (LO) circuit is connected to HID control unit integrated in the headlamp. Headlamp (LO) circuit turns xenon headlamp ON.

For the details of HID control unit and the xenon headlamp, refer to [EXL-39, "Description"](#).

Component Function Check

INFOID:0000000010988621

1. CHECK HEADLAMP (LO) OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the headlamp is turned ON.

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp is turned ON.

Lo : Headlamp ON

Off : Headlamp OFF

Is the headlamp turned ON?

YES >> Headlamp (LO) is normal.

NO >> Refer to [EXL-37, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010988622

1. CHECK HEADLAMP (LO) OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector.
3. Turn the ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

Terminals			Test item	Voltage (Approx.)
(+)	(-)			
IPDM E/R			EXTERNAL LAMPS	Battery voltage
Connector	Terminal			
RH	E8	83	Lo	Battery voltage
		84	Off	0 V
LH			Lo	Battery voltage
			Off	0 V

Is the measurement value normal?

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK HEADLAMP (LO) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front combination lamp harness connector.

HEADLAMP (LO) CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E8	E28	5	Existed
LH		84	E58	

Does continuity exist?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

3. CHECK HEADLAMP (LO) FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Lotion	Fuse No.	Capacity
Headlamp LO (RH)	IPDM E/R	#56	15 A
Headlamp LO (LH)	IPDM E/R	#55	15 A

Is the fuse fusing?

YES >> GO TO 4.

NO >> Replace IPDM E/R.

4. CHECK HEADLAMP (LO) SHORT CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between the IPDM E/R harness connector and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E8		Not existed
LH			

Does continuity exist?

YES >> Repair the harnesses or connectors. And then replace the fuse.

NO >> Replace the fuse. (Replace IPDM E/R if the fuse is fusing again.)

5. CHECK HEADLAMP GROUND OPEN CIRCUIT

Check continuity between the front combination lamp harness connector and the ground.

Front combination lamp		Ground	Continuity
Connector	Terminal		
RH	E28		Existed
LH	E58		

Does continuity exist?

YES >> Perform the xenon headlamp diagnosis. Refer to [EXL-39, "Description"](#).

NO >> Repair the harnesses or connectors.

XENON HEADLAMP

Description

INFOID:0000000010988623

OUTLINE


- The lamp light source is by the arch discharge by applying high voltage into the xenon gas-filled bulb instead of the halogen bulb filament.
- Sight becomes more natural and brighter because the amount of light are gained adequately and the color of light is sunshine-like white.
- The xenon bulb drops the amount of light, repeats blinking, and illuminates in red if the bulb reaches the service life.

ILLUMINATION PRINCIPLE

1. Discharging starts in high voltage pulse between bulb electrodes.
2. Xenon gas is activated by current between electrodes. Pale light is emitted.
3. The luminous tube (bulb) temperature elevates. Evaporated halide is activated by discharge. The color of light changes into white.

NOTE:

- Brightness and the color of light may change slightly immediately after the headlamp turned ON until the xenon bulb becomes stable. This is not malfunction.
- Illumination time lag may occur between right and left. This is not malfunction.

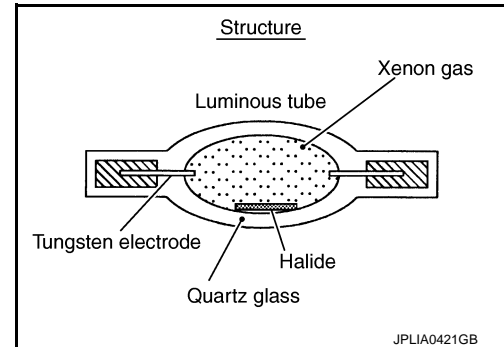

PRECAUTIONS FOR TROUBLE DIAGNOSIS

Representative malfunction examples are; "Light does not turn ON", "Light blinks", and "Brightness is inadequate." The cause often be the xenon bulb. Such malfunctions, however, are occurred occasionally by HID control unit malfunction or lamp case malfunction. Specify the malfunctioning part with diagnosis procedure.

WARNING:

- **Never touch the harness, HID control unit, the inside and metal part of lamp when turning the headlamp ON or operating the light switch.**
- **Never work with wet hands.**

CAUTION:

- **Never perform HID control unit circuit diagnosis with a circuit tester or an equivalent.**
- **Temporarily install the headlamp on the vehicle. Connect the battery to the connector (vehicle side) when checking ON/OFF status.**
- **Disconnect the battery negative terminal before disconnecting the lamp socket connector or the harness connector.**
- **Check for fusing of the fusible link(s), open around connector, short, disconnection if the symptom is caused by electric error.**

NOTE:

- Turn the switch OFF once before turning ON, if the ON/OFF is inoperative.
- The xenon bulb drops the amount of light, repeats blinking, and illuminates in red if the bulb reaches the service life.

Diagnosis Procedure

INFOID:0000000010988624

1. CHECK XENON BULB

Install the normal bulb to the applicable headlamp. Check that the xenon bulb is turned ON.

Is the headlamp turned ON?

- YES >> Replace the xenon bulb.
- NO >> GO TO 2.

2. CHECK HID CONTROL UNIT

Install the normal HID control unit to the applicable headlamp. Check that the lamp is turned ON.

Is the headlamp turned ON?

XENON HEADLAMP

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

YES >> Replace HID control unit.

NO >> GO TO 3.

3. CHECK XENON HEADLAMP HOUSING ASSEMBLY

Install the normal xenon headlamp housing assembly to the applicable headlamp. Check that the xenon headlamp is turned ON.

Is the headlamp turned ON?

YES >> Replace the front combination lamp. (Xenon headlamp housing voltage converter malfunctions.)

NO >> Xenon headlamp is normal. Check the headlamp control system.

FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

FRONT FOG LAMP CIRCUIT

Component Function Check

INFOID:000000010988628

1. CHECK FRONT FOG LAMP OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Activate IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the front fog lamp is turned ON.

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, Check that the front fog lamp is turned ON.

Fog : Front fog lamp ON
Off : Front fog lamp OFF

Is the front fog lamp turned ON?

- YES >> Front fog lamp circuit is normal.
NO >> Refer to [EXL-41, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010988629

1. CHECK FRONT FOG LAMP FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Front fog lamp	IPDM E/R	#57	15 A

Is the fuse fusing?

- YES >> GO TO 2.
NO >> GO TO 3.

2. CHECK FRONT FOG LAMP SHORT CIRCUIT

1. Disconnect IPDM E/R connector and the front fog lamp connector.
2. Check continuity between the IPDM E/R harness connector and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E8	86	Not existed
LH		87	

Does continuity exist?

- YES >> Repair the harnesses or connectors. And then replace the fuse.
NO >> Replace the fuse. (Replace IPDM E/R if the fuse is fusing again.)

3. CHECK FRONT FOG LAMP BULB

Check the applicable lamp bulb.

Is the bulb normal?

- YES >> GO TO 4.
NO >> Replace the bulb.

4. CHECK FRONT FOG LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Disconnect the front fog lamp connector.
2. Turn the ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

FRONT FOG LAMP CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

4. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

Terminals			Test item	Voltage (Approx.)
(+)		(-)		
IPDM E/R			EXTERNAL LAMPS	Battery voltage
Connector	Terminal			
RH	E8	86	Fog	0 V
LH		87	Fog	0 V
			Off	Battery voltage
			Off	0 V

Is the measurement value normal?

YES >> GO TO 5.

NO >> Replace IPDM E/R.

5. CHECK FRONT FOG LAMP OPEN CIRCUIT

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector.
- Check continuity between the IPDM E/R harness connector and the front fog lamp harness connector.

IPDM E/R			Front fog lamp		Continuity
Connector	Terminal		Connector	Terminal	
RH	E8	86	E20	1	Existed
LH		87	E19	1	

Does continuity exist?

YES >> GO TO 6.

NO >> Repair the harnesses or connectors.

6. CHECK FRONT FOG LAMP GROUND CIRCUIT OPEN CIRCUIT

Check continuity between the front fog lamp harness connector and the ground.

Front fog lamp			Ground	Continuity
Connector	Terminal			
RH	E20	2	Ground	Existed
LH	E19	2		

Does continuity exist?

YES >> Refer to [GI-41. "Intermittent Incident"](#).

NO >> Repair the harnesses or connectors.

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

PARKING LAMP CIRCUIT

Component Function Check

INFOID:000000010988630

1. CHECK PARKING LAMP OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Activate IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the parking lamp is turned ON.

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the parking lamp is turned ON.

TAIL : Parking lamp ON
Off : Parking lamp OFF

Is the parking lamp turned ON?

- YES >> Parking lamp circuit is normal.
NO >> Refer to [EXL-43, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010988631

1. CHECK PARKING LAMP FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Location	Fuse No.	Capacity
<ul style="list-style-type: none">• Parking lamp• Front side marker lamp	IPDM E/R	#51	10 A

Is the fuse fusing?

- YES >> GO TO 2.
NO >> GO TO 3.

2. CHECK PARKING LAMP SHORT CIRCUIT

1. Disconnect IPDM E/R connector and the front combination lamp connector.
2. Check continuity between the IPDM E/R harness connector and the ground.

IPDM E/R			Ground	Continuity
Connector	Terminal			
RH	E9	91	Not existed	
LH		92		

Does continuity exist?

- YES >> Repair the harnesses or connectors. And then replace the fuse.
NO >> Replace the fuse. (Replace IPDM E/R if fusing is found again.)

3. CHECK PARKING LAMP BULB AND FRONT SIDE MARKER LAMP

Check the applicable lamp bulb.

Is the bulb normal?

- YES >> GO TO 4.
NO >> Replace the bulb.

4. CHECK PARKING LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Disconnect the front combination lamp connector.
2. Turn the ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

PARKING LAMP CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

4. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

Terminals			Test item	Voltage (Approx.)
(+)		(-)		
IPDM E/R			EXTERNAL LAMPS	Battery voltage
Connector	Terminal			
RH	E9	91	TAIL	0 V
LH		92	Off	Battery voltage
			Off	0 V

Is the measurement value normal?

YES >> GO TO 5.

NO >> Replace IPDM E/R.

5. CHECK PARKING LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front combination lamp harness connector.

IPDM E/R		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E9	E28	8	Existed
LH		92	E58	

Does continuity exist?

YES >> GO TO 6.

NO >> Repair the harnesses or connectors.

6. CHECK PARKING LAMP GROUND OPEN CIRCUIT

Check continuity between the front combination lamp harness connector and the ground.

Front combination lamp			Ground	Continuity
Connector	Terminal			
RH	E28	4		Existed
LH	E58	4		

Does continuity exist?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair the harnesses or connectors.

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

TURN SIGNAL LAMP CIRCUIT

Description

INFOID:0000000010988634

BCM performs the high flasher operation if any bulb or harness of the turn signal lamp circuit is open.

NOTE:

Turn signal lamp blinks at normal speed when using the hazard warning lamp.

Component Function Check

INFOID:0000000010988635

1. CHECK TURN SIGNAL LAMP

CONSULT ACTIVE TEST

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamp blinks.

LH : Turn signal lamp LH blinking

RH : Turn signal lamp RH blinking

Off : The turn signal lamp OFF

Does the turn signal lamp blink?

YES >> Turn signal lamp circuit is normal.

NO >> Refer to [EXL-45, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000010988636

1. CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb.

Is the bulb normal?

YES >> GO TO 2.

NO >> Replace the bulb.

2. CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST



1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp connector or the rear combination lamp connector.
3. Turn the ignition switch ON.
4. Select "FLASHER" of BCM (FLASHER) active test item.
5. With operating the turn signal switch, check the voltage between the BCM harness connector and the ground.



A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL LAMP CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

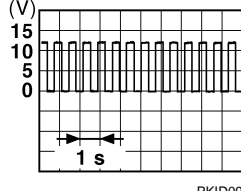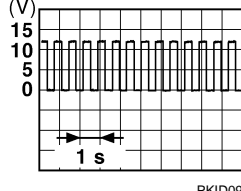Terminals			Test item	Voltage (Approx.)
(+)	(-)			
BCM			FLASHER	Voltage (Approx.)
Connector	Terminal			
RH	M119	17	RH	
		Ground	Off	0 V
LH	M119	18	LH	
		Ground	Off	0 V

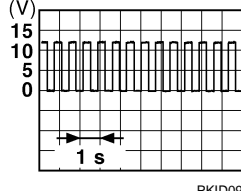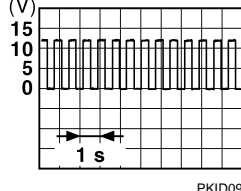Terminals			Test item	Voltage (Approx.)
(+)	(-)			
BCM			FLASHER	Voltage (Approx.)
Connector	Terminal			
RH	M120	20	RH	
		Ground	Off	0 V
LH	M120	25	LH	
		Ground	Off	0 V

Is the measurement value normal?

- YES >> GO TO 3.
- NO >> Replace BCM.

3. CHECK TURN SIGNAL LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector.
3. Check the continuity between the BCM harness connector and the front combination lamp or the rear combination lamp harness connector.

TURN SIGNAL LAMP CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

Front combination lamp

BCM		Front combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	M119	17	E28	Existed
LH		18	E58	

Rear combination lamp

BCM		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	M120	20	B67	Existed
LH		25	B60	

Does continuity exist?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4.CHECK TURN SIGNAL LAMP SHORT CIRCUIT

Check continuity between the BCM harness connector and the ground.

Front

BCM		Ground	Continuity
Connector	Terminal		
RH	M119	17	Not existed
LH		18	

Rear

BCM		Ground	Continuity
Connector	Terminal		
RH	M120	20	Not existed
LH		25	

Does continuity exist?

YES >> Check each bulb socket for internal short circuit, and if check result is normal, replace BCM.

NO >> GO TO 5.

5.CHECK TURN SIGNAL LAMP GROUND OPEN CIRCUIT

Check the continuity between the BCM harness connector and the front combination lamp or the rear combination lamp and the ground.

Front combination lamp

Front combination lamp		Ground	Continuity
Connector	Terminal		
RH	E28	4	Existed
LH	E58	4	

Rear combination lamp

Rear combination lamp		Ground	Continuity
Connector	Terminal		
RH	B67	4	Existed
LH	B60	4	

Does continuity exist?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair the harnesses or connectors.

A
B
C
D
E
F
G
H
I
J
K

EXL

M
N
O
P

OPTICAL SENSOR

Description

INFOID:0000000110988637

Optical sensor converts the outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.

Component Function Check

INFOID:0000000110988638

1.CHECK OPTICAL SENSOR SIGNAL BY CONSULT

CONSULT DATA MONITOR

1. Turn the ignition switch ON.
2. Select "OPTICAL SENSOR" of BCM (HEADLAMP) data monitor item.
3. Turn the lighting switch AUTO.
4. With the optical sensor illuminating, check the monitor status.

Monitor item	Condition	Voltage (Approx.)
OPTICAL SENSOR	Optical sensor	When illuminating
		When shutting off light
		3.1 V or more *
		0.6 V or less

*: Illuminates the optical sensor. The value may be less than the standard value if brightness is weak.

Is the item status normal?

- YES >> Optical sensor is normal.
 NO >> Refer to [EXL-48, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000110988639

1.CHECK OPTICAL SENSOR POWER SUPPLY INPUT

1. Turn the ignition switch ON.
2. Turn the lighting switch AUTO.
3. Check the voltage between the optical sensor harness connector and the ground.

Terminals			
(+)	(-)		
Optical sensor		Ground	Voltage (Approx.)
Connector	Terminal		
M94	1		
			5 V

Is the measurement value normal?

- YES >> GO TO 2.
 NO >> GO TO 4.

2.CHECK OPTICAL SENSOR GROUND INPUT

Check the voltage between the optical sensor harness connector and the ground.

Terminals			
(+)	(-)		
Optical sensor		Ground	Voltage (Approx.)
Connector	Terminal		
M94	3		
			0 V

Is the measurement value normal?

- YES >> GO TO 3.
 NO >> GO TO 6.

OPTICAL SENSOR

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

3. CHECK OPTICAL SENSOR SIGNAL OUTPUT

With illuminating the optical sensor, check the voltage between the optical sensor harness connector and the ground.

Terminals		Condition	Voltage (Approx.)	
(+)	(-)			
Optical sensor		Optical sensor		
Connector	Terminal			
M94	2	Ground	When illuminating	3.1 V or more *
			When shutting off light	0.6 V or less

*: Illuminate the optical sensor. The value may be less than the standard if brightness is weak.

Is the measurement value normal?

YES >> GO TO 7.

NO >> Replace the optical sensor.

4. CHECK OPTICAL SENSOR OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the optical sensor connector and BCM connector.
3. Check continuity between the optical sensor harness connector and the BCM harness connector.

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M94	1	M123	138	Existed

Does continuity exist?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

5. CHECK OPTICAL SENSOR SHORT CIRCUIT

Check the continuity between the optical sensor harness connector and the ground.

Optical sensor		Ground	Continuity
Connector	Terminal		
M94	1		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Replace BCM.

6. CHECK OPTICAL SENSOR GROUND OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the optical sensor connector and BCM connector.
3. Check continuity between the optical sensor harness connector and the BCM harness connector.

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M94	3	M123	137	Existed

Does continuity exist?

YES >> Replace BCM.

NO >> Repair the harnesses or connectors.

7. CHECK OPTICAL SENSOR SIGNAL OPEN CIRCUIT

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

OPTICAL SENSOR

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect the optical sensor connector and BCM connector.
3. Check continuity between the optical sensor harness connector and the BCM harness connector.

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M94	2	M123	113	Existed

Does continuity exist?

YES >> GO TO 8.

NO >> Repair the harnesses or connectors.

8.CHECK OPTICAL SENSOR SHORT CIRCUIT

Check the continuity between the optical sensor harness connector and the ground.

Optical sensor		Ground	Continuity
Connector	Terminal		
M94	2		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Replace BCM.

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HAZARD SWITCH

Description

INFOID:000000010988640

Hazard switch is integrated in the multifunction switch. Hazard switch inputs the signals to BCM when pressing the switch.

Component Function Check

INFOID:000000010988641

1. CHECK HAZARD SWITCH SIGNAL BY CONSULT

CONSULT DATA MONITOR

1. Turn the ignition switch ON.
2. Select "HAZARD SW" of BCM (FLASHER) data monitor item.
3. With operating the hazard switch, check the monitor status.

Monitor item	Condition		Monitor status
HAZARD SW	Hazard switch	While pressing the switch	On
		While not pressing the switch	Off

Is the item status normal?


- YES >> Hazard switch circuit is normal.
 NO >> Refer to [EXL-51, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010988642

1. CHECK HAZARD SWITCH SIGNAL INPUT

With operating the hazard switch, check the voltage between the BCM harness connector and the ground.

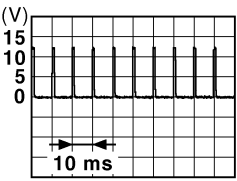Terminals		Condition	Voltage (Approx.)
(+)	(-)		
BCM		Hazard switch	0 V
Connector	Terminal		
M122	110	While pressing the switch	
		While not pressing the switch	
	Ground		

JPMIA0012GB

Is the measurement value normal?

- YES >> Replace BCM.
 NO >> GO TO 2.

2. CHECK HAZARD SWITCH SIGNAL OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the multifunction switch connector and BCM connector.
3. Check continuity between the multifunction switch harness connector and the BCM harness connector.

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

Multifunction switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M72	16	M122	110	Existed

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK HAZARD SWITCH SIGNAL SHORT CIRCUIT

Check continuity between the multifunction switch harness connector and the ground.

Multifunction switch		Ground	Continuity
Connector	Terminal		
M72	16		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 4.

4.CHECK HAZARD SWITCH GROUND OPEN CIRCUIT

Check continuity between the multifunction switch harness connector and the ground.

Multifunction switch		Ground	Continuity
Connector	Terminal		
M72	1		Existed

Does continuity exist?

YES >> Replace the hazard switch (multifunction switch).

NO >> Repair the harnesses or connectors.

TAIL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

TAIL LAMP CIRCUIT

Component Function Check

INFOID:000000010988643

1.CHECK TAIL LAMP OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Activate IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the tail lamp is turned ON.

CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the tail lamp is turned ON.

TAIL : Tail lamp ON
Off : Tail lamp OFF

Is the tail lamp turned ON?

- YES >> Tail lamp circuit is normal.
 NO >> Refer to [EXL-53, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010988644

1.CHECK TAIL LAMP FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
<ul style="list-style-type: none"> • Tail lamp • Rear side marker lamp • License plate lamp 	IPDM E/R	#52	10 A

Is the fuse fusing?

- YES >> Repair the malfunctioning part before replacing the fuse.
 NO >> GO TO 2.

2.CHECK TAIL LAMP OUTPUT VOLTAGE

CONSULT ACTIVE TEST

1. Disconnect the rear combination lamp connector.
2. Turn the ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
4. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R		EXTERNAL LAMPS	Battery voltage
Connector	Terminal		
E5	7	TAIL	0 V
		Off	

Is the measurement value normal?

- YES >> GO TO 3.
 NO >> Replace IPDM E/R.

3.CHECK TAIL LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.

TAIL LAMP CIRCUIT

[XENON TYPE]

< DTC/CIRCUIT DIAGNOSIS >

3. Check continuity between the IPDM E/R harness connector and the rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E5	7	B67	1
LH			B60	1

Does continuity exist?

YES >> GO TO 4.

NO >> Repair the harnesses or connectors.

4. CHECK TAIL LAMP GROUND OPEN CIRCUIT

Check continuity between the rear combination lamp harness connector and the ground.

Rear combination lamp			Ground	Continuity
Connector	Terminal			
RH	B67	4		Existed
LH	B60	4		

Does continuity exist?

YES >> Replace the rear combination lamp.

NO >> Repair the harnesses or connectors.

LICENSE PLATE LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

LICENSE PLATE LAMP CIRCUIT

Component Function Check

INFOID:000000010988647

NOTE:

Check the tail lamp circuit if the tail lamp, the rear side marker lamp and the license plate lamp are not turned ON.

1.CHECK LICENSE PLATE LAMP OPERATION

⊗ IPDM E/R AUTO ACTIVE TEST

1. Activate IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the license plate lamp is turned ON.

Ⓜ CONSULT ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the lighting switch, check that the license plate lamp is turned ON.

TAIL : License plate lamp ON

Off : License plate lamp OFF

Is the license plate lamp turned ON?

YES >> License plate lamp circuit is normal.

NO >> Refer to [EXL-55, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010988648

1.CHECK LICENSE PLATE LAMP BULB

Check the applicable lamp bulb.

Is the bulb normal?

YES >> GO TO 2.

NO >> Replace the bulb.

2.CHECK LICENSE PLATE LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector and the license plate lamp connector.
3. Check continuity between the IPDM E/R harness connector and the license plate lamp harness connector.

IPDM E/R		License plate lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E5	B93	1	Existed
LH		B92	1	

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK LICENSE PLATE LAMP GROUND OPEN CIRCUIT

Check continuity between the license plate lamp harness connector and the ground.

License plate lamp			Ground	Continuity
Connector	Terminal			
RH	B93	2	Existed	
LH	B92	2		

Does continuity exist?

YES >> Check corresponding bulb socket and harness. Repair or replace if necessary.

NO >> Repair the harnesses or connectors.

HEADLAMP SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HEADLAMP SYSTEM

Wiring Diagram - HEADLAMP -

INFOID:000000010988651

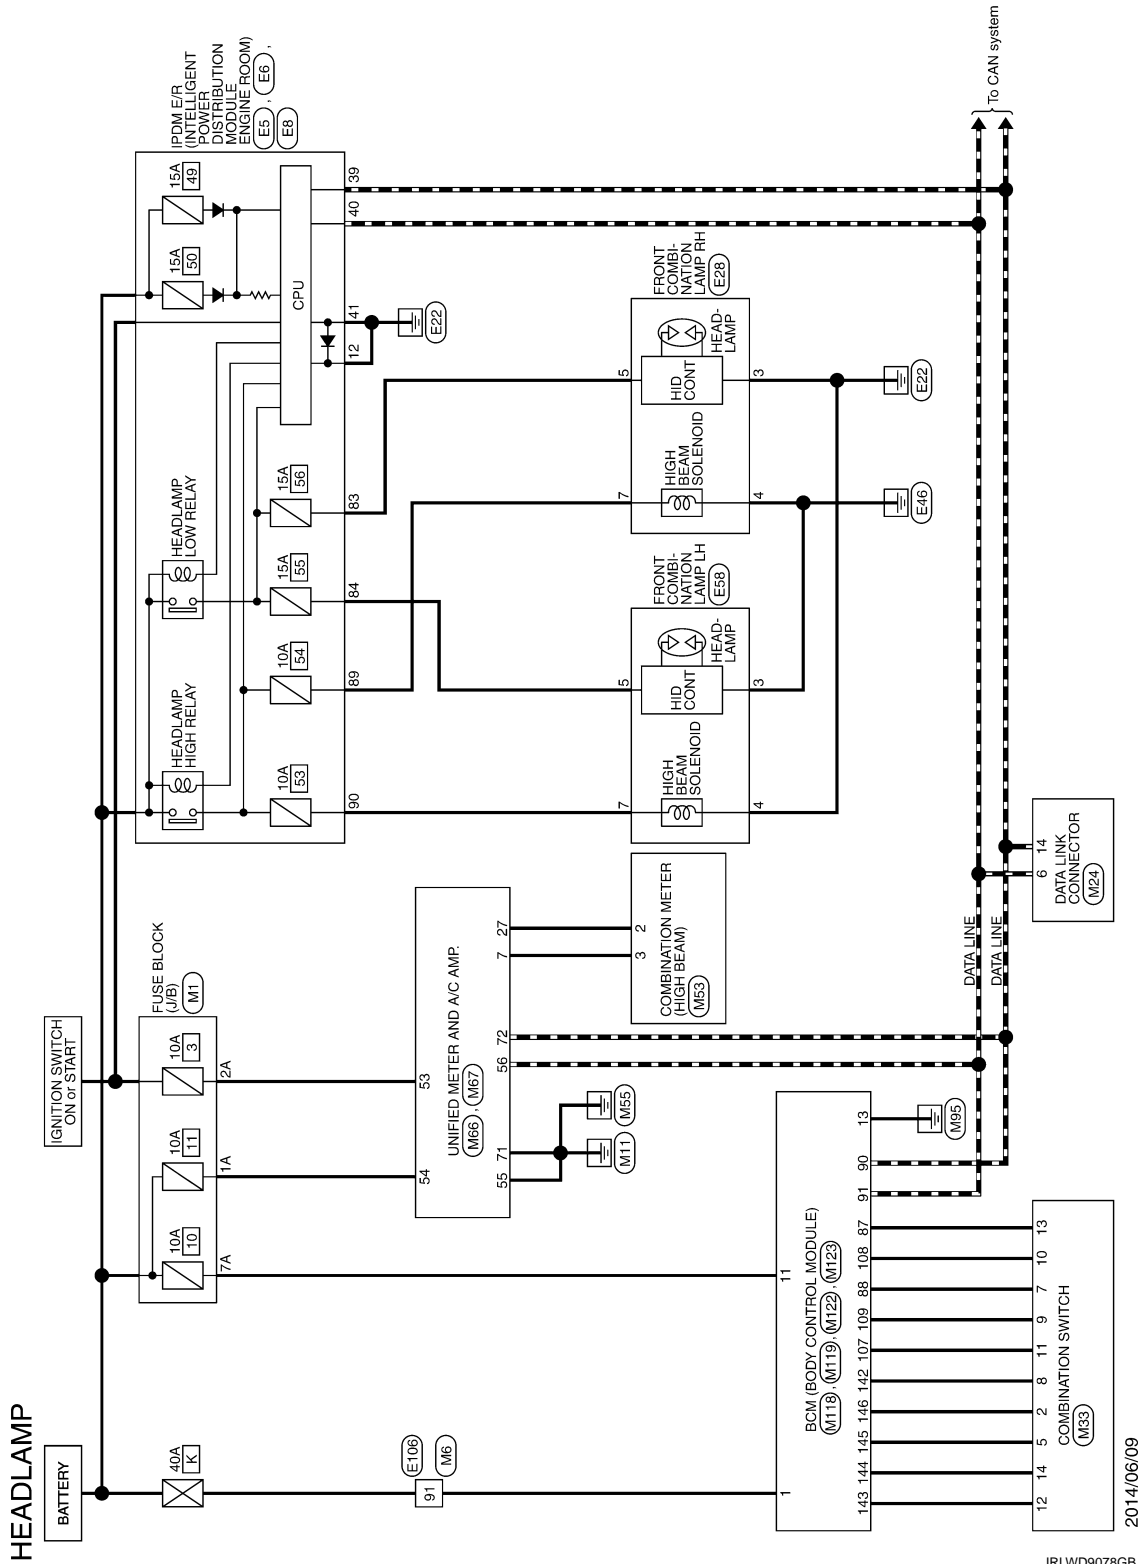

HEADLAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HEADLAMP

Connector No.	E5
Connector Name	INTELLIGENT POWER DISTRIBUTION MODULE ENGINE
Connector Type	TH80FW-CS12-1M4-1V

Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
8	SB	-
7	P	-
12	B/W	-
13	Y	-
16	LG	-
19	R	-
25	G	-
27	BG	-
28	L	-
30	GR	-
36	G	-

Connector No.	E6
Connector Name	INTELLIGENT POWER DISTRIBUTION MODULE ENGINE
Connector Type	TH88FW-4M

Terminal No.	Color Of Wire	Signal Name [Specification]	
42	41	40	39
46	45	44	43

Terminal No.	Color Of Wire	Signal Name [Specification]
4	B/W	-
8	L	-
4	B/W	-
42	GR	-
43	G	-
44	LG	-

HEADLAMP

Connector No.	E5B
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS2BFE-PR

Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	B/W	-
5	GR	-
7	P	-
8	BG	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	T188PW-CS16-TM4

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
3	BG	-
5	G	-
6	Y	-
7	V	-
9	R	-
11	V	-
12	R	-
14	GR	-
15	P	-
16	W	-
17	SB	-

HEADLAMP

Connector No.	E28
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS2BFE-PR

Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	B/W	-
8	V	-
7	BR	-
8	LG	-

Connector No.	E28B
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS2BFE-PR

Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	B/W	-
8	V	-
7	BR	-
8	LG	-

Connector No.	E38
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS2BFE-PR

Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	B/W	-
5	GR	-
7	P	-
8	BG	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	T188PW-CS16-TM4

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
3	BG	-
5	G	-
6	Y	-
7	V	-
9	R	-
11	V	-
12	R	-
14	GR	-
15	P	-
16	W	-
17	SB	-

Terminal No.	Color Of Wire	Signal Name [Specification]
18	BG	-
19	LG	-
32	BG	-
36	SB	-
37	Y	-
38	R	-
39	B	-
41	R	-
42	LG	-
43	G	-
44	GR	-
45	BR	-
46	LG	-
47	V	-
48	L	-
68	GR	-
62	LG	-
80	R	-
81	P	-
82	G	-
83	V	-
84	L	-
85	W	-
89	V	-
91	W	-
93	GR	-
95	LG	-
96	L	-
98	SHIELD	-
99	L	-
100	P	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


HEADLAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HEADLAMP

Connector No. M1
Connector Name FUSE BLOCK (J/B)
Connector Type NS98FW-M2

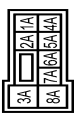


Terminal No. | **Color Of Wire** | **Signal Name [Specification]**

3A	-	-
7A	-	-
8A	-	-
7A	-	-
8A	-	-
6A	-	-
4A	-	-

Terminal No. | **Color Of Wire** | **Signal Name [Specification]**

17	BR	-
18	L	-
20	L	-
31	L	-
32	Y	-
36	R	-
37	Y	-
38	R	-
39	S9	-
41	V	-
42	LG	-
43	P	-
44	B	-
45	EG	-
46	G	-
47	G	-
48	P	-
49	L	-
66	Y	-
67	G	-
80	S9	-
81	B	-
82	V	-
83	W	-
84	L	-
85	GR	-
89	LG	-
91	W	-
92	Y	-
97	GR	-
98	SHIELD	-
99	V	-
100	S9	-


Connector No. M2
Connector Name DATA LINK CONNECTOR
Connector Type BD18FW-P

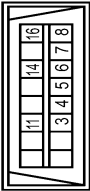

Terminal No. | **Color Of Wire** | **Signal Name [Specification]**

3	LG	-
5	B	-
6	D	-
7	V	-
8	G	-
11	S9	-
14	P	-
16	R	-

Connector No. M3
Connector Name COMBINATION SWITCH
Connector Type TH18FW-1H

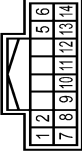

Terminal No. | **Color Of Wire** | **Signal Name [Specification]**


1	GR	FR WASHER (-)
2	SB	OUTPUT 4
5	L	OUTPUT 3
6	B	SPRAY
7	EG	OUTPUT 5
8	ER	INPUT 2
9	W	INPUT 4
10	R	INPUT 1
11	LG	INPUT 1
12	P	OUTPUT 1
13	Y	INPUT 5

Connector No. M4
Connector Name DATA LINK CONNECTOR
Connector Type BD18FW-P

Terminal No. | **Color Of Wire** | **Signal Name [Specification]**

14	G	OUTPUT 2
----	---	----------

Connector No. M5
Connector Name WIRE TO WIRE
Connector Type TH60MW-CS16-TM4



Terminal No. | **Color Of Wire** | **Signal Name [Specification]**

1	EG	-
3	R	-
5	G	-
9	LG	-
10	G	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-

Connector No. M33
Connector Name COMBINATION SWITCH
Connector Type TH18FW-1H

Terminal No. | **Color Of Wire** | **Signal Name [Specification]**

1	V	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER-AMP.)
3	GR	COMMUNICATION SIGNAL (AMP-METER)
5	B	GROUND
6	W	ALTERNATOR SIGNAL
7	LG	AIR BAG SIGNAL
10	W	SECURITY SIGNAL
15	B	GROUND
16	BR	METER CONTROL SWITCH GROUND
18	GR	ILL GND
19	B	ILL GND
20	G	IGNITION SIGNAL
22	B	GROUND
24	BR	COMMUNICATION SIGNAL (GDS-AMP.)
25	Y	COMMUNICATION SIGNAL (AMP-LOD)
26	R	VEHICLE SPEED SIGNAL (SP-PULSE)
27	P	PARKING BRAKE SWITCH SIGNAL
28	SB	BRAKE FLUID LEVEL SWITCH
29	P	SEAT BELT BUCKLE SW SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
33	R	ILLUMINATION CONTROL SIGNAL
36	LG	SELECT SWITCH SIGNAL
37	V	ENTER SWITCH SIGNAL
38	G	TRIP RESET SWITCH SIGNAL
39	G	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	EG	ILLUMINATION CONTROL SWITCH SIGNAL (-)

JRLWD9148GB


HEADLAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HEADLAMP

Connector No.	M85
Connector Name	UNIFIED METER AND A.C. AMP.
Connector Type	TH40FW-NH



Terminal No.	Wire	Signal Name [Specification]
4	G	STOP LAMP SWITCH SIGNAL
5	G	MANUAL MOTOR SIGNAL
7	GR	COMMUNICATION SIGNAL (CD-AMP)
8	L	VEHICLE SPEED SIGNAL (2-PULSE)
9	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	W	MANUAL MODE SIGNAL
11	G	NON-MANUAL MODE SIGNAL
14	BR	COMMUNICATION SIGNAL (LCD-AMP)
23	Y	A/T SNOW SWITCH SIGNAL
25	V	MANUAL MODE SHIFT DOWN SIGNAL
27	LG	COMMUNICATION SIGNAL (METER-AMP)
28	R	VEHICLE SPEED SIGNAL (8-PULSE)
30	V	PARKING BRAKE SWITCH SIGNAL
34	Y	COMMUNICATION SIGNAL (AMP-LCD)
38	P	BLOWER MOTOR CONTROL SIGNAL


Connector No.	M87
Connector Name	UNIFIED METER AND A.C. AMP.
Connector Type	TH42FW-NH



Terminal No.	Wire	Signal Name [Specification]
41	L	ACC POWER SUPPLY
42	BR	FUEL LEVEL SENSOR SIGNAL
43	BR	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	V	AMBIENT SENSOR SIGNAL

Terminal No.	Wire	Signal Name [Specification]
46	Y	SUNLOAD SENSOR SIGNAL
54	W	IGNITION POWER SUPPLY
55	B	BATTERY POWER SUPPLY
56	L	GROUND
57	LG	BRAKE FLUID LEVEL SWITCH
58	Y	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	W	IN-VEHICLE SENSOR GROUND
61	B	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
65	BG	ECV SIGNAL
69	P	A/C LAN SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	GR	GROUND
72	P	CAN-L

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03PE-LC



Terminal No.	Wire	Signal Name [Specification]
1	W	BAT (+/L)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	BG	POWER WINDOW POWER SUPPLY (RAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	N519FP-CS



Terminal No.	Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	SB	PASSENGER DOOR UNLOCK OUTPUT
6	W	ALL DOOR FUEL LID LOCK OUTPUT
8	V	DRIVER DOOR FUEL LID UNLOCK OUTPUT
9	P	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GROUND
14	W	PUSH-BUTTON IGNITION SW ILL GND
15	BG	ACC IND
17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	V	INT ROOM LAMP CONT

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40BE-NH



Terminal No.	Wire	Signal Name [Specification]
72	R	ROOM ANT 2
73	G	ROOM ANT 2a
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT 1-

Terminal No.	Wire	Signal Name [Specification]
79	BR	ROOM ANT 1a
80	GR	IN-VEHICLE ANT AMP
81	SB	ION RELAY (E/B) CONT
82	SB	ION RELAY (E/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMM
87	Y	COMBI SW INPUT 5
88	BG	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL CONT
93	GR	ON IND
95	BG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P
100	Y	PASSENGER DOOR REQUEST SW
101	B	REAR DOOR REQUEST SW
102	BG	BLOWER MOTOR REQUEST SW
103	P	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	W	COMBI SW INPUT 2
110	G	HAZARD SW

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Wire	Signal Name [Specification]
113	BG	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	BR	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	SB	KEY SLOT SW
122	Y	DR DOOR SW
123	R	PASSENGER DOOR SW
129	BG	TRUNK LID OPERATOR CANCEL SW
132	V	POWER WINDOW SW COMM
133	L	PUSH-BUTTON IGNITION SW ILL POWER
134	LG	LOCK IND
137	BG	RECEIVER / SENSOR GND

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

HEADLAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

HEADLAMP	
138	V RECEIVER / SENSOR POWER SUPPLY
140	TIME PRESSURE RECEIVER COMMON
141	B SHEET LAMP
141	W SECURITY IND LAMP CONT
142	BR COMBI SW OUTPUT 5
143	P COMBI SW OUTPUT 1
144	G COMBI SW OUTPUT 2
145	L COMBI SW OUTPUT 3
146	SB COMBI SW OUTPUT 4
150	GR DRIVER DOOR SW
151	G REAR WINDOW DEFROGGER RELAY CONT

JRLWD9150GB

AUTO LIGHT SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

AUTO LIGHT SYSTEM

Wiring Diagram - AUTO LIGHT SYSTEM -

INFOID:000000010988652

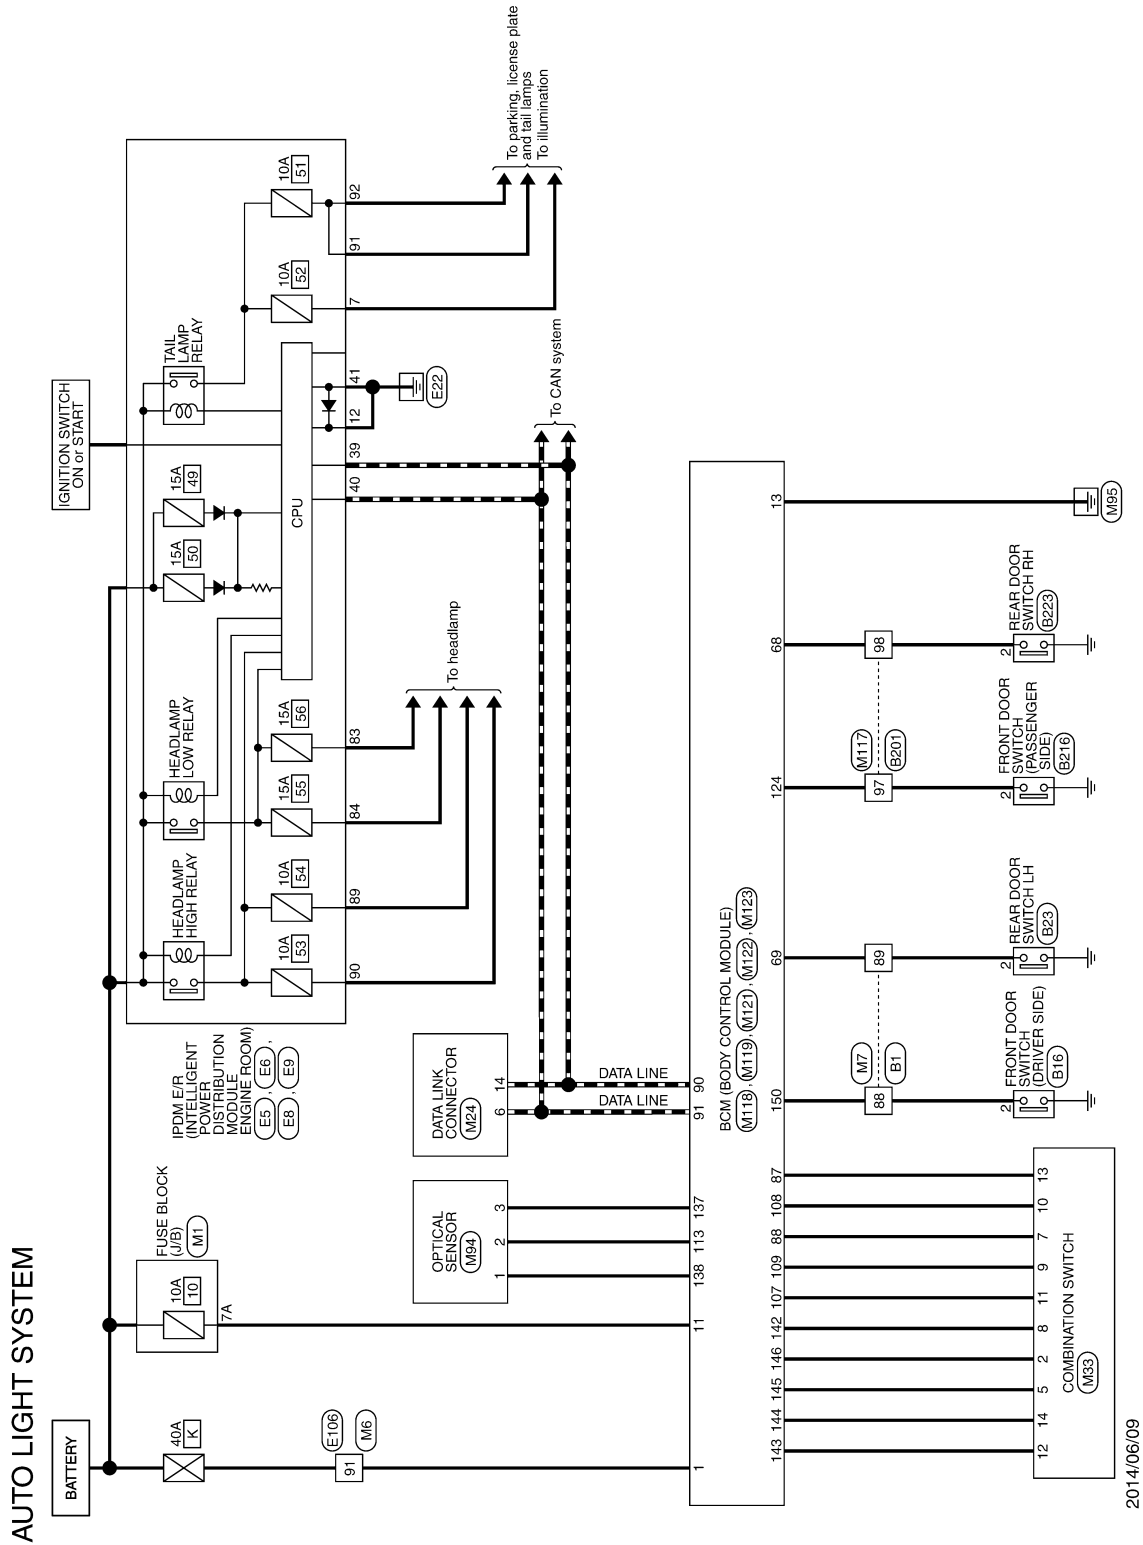

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

AUTO LIGHT SYSTEM


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-C516-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BG	-
3	LG	-
4	Y	-
6	R	-
8	W	-
9	LG	-
24	V	-
25	SB	-
26	G	-
27	W	-
28	R	-
31	V	-
32	SB	-
33	SHIELD	-
35	BR	-
36	Y	-
37	SHIELD	-
38	Y	-
39	SB	-
40	P	-
41	L	-
42	SHIELD	-
43	R	-
44	G	-
45	SHIELD	-
46	SB	-
48	BR	-
58	V	-
59	SB	-
71	BG	-
72	GR	-
73	P	-


74	L	-
84	Y	-
82	B	-
84	Y	-
85	G	-
86	W	-
87	R	-
88	BR	-
89	Y	-
90	SB	-
92	BR	-
93	P	-
95	BG	-

Connector No.	B16
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	AG3FW




Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR	-

Connector No.	B23
Connector Name	REAR DOOR SWITCH LH
Connector Type	AG3FW



Terminal No.	Color Of Wire	Signal Name [Specification]
2	Y	-


Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-C516-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	Y	-
3	Y	-
31	L	-
32	P	-
33	G	-
34	R	-
40	GR	-
41	LG	-
42	BG	-
43	R	-
45	G	-
46	SHIELD	-
47	G	-
48	Y	-
49	SHIELD	-
50	W	-
71	R	-
80	BG	-
81	SHIELD	-
82	G	-
83	P	-
84	L	-
85	SHIELD	-
86	G	-
87	R	-
88	W	-
89	B	-
90	Y	-
92	W	-
93	BG	-
94	R	-
95	SB	-
96	G	-


87	GR	-
88	BR	-
89	P	-
100	L	-

Connector No.	B216
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	AG3FW



Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	-

Connector No.	B223
Connector Name	REAR DOOR SWITCH RH
Connector Type	AG3FW



Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR	-

JRLWD9151GB


AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

AUTO LIGHT SYSTEM

Connector No.	E5
Connector Name	POWER IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH88FW-C512-1M4-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	
8	SB	
7	P	
12	B/W	
13	Y	
16	LG	
19	R	
25	G	
27	EG	
28	L	
30	GR	
36	G	

Connector No.	E6
Connector Name	POWER IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH88FW-4H



Terminal No.	Color Of Wire	Signal Name [Specification]
42	L	
41	B/W	
40	GR	
39	G	
46	LG	
45	V	


46	SB	
----	----	--

Connector No.	E8
Connector Name	POWER IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	NS98FW-GS



Terminal No.	Color Of Wire	Signal Name [Specification]
83	R	
84	V	
86	W	
87	L	
88	G	
89	BR	
90	P	

Connector No.	E9
Connector Name	POWER IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH16FW-4H



Terminal No.	Color Of Wire	Signal Name [Specification]
91	G	
92	EG	
97	V	
106	LG	
104	L	


Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH88FW-C512-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	
3	EG	
6	V	
7	V	
9	R	
11	V	
12	R	
13	L	
14	GR	
15	P	
16	W	
17	SB	
18	EG	
20	LG	
31	EG	
36	SB	
37	Y	
38	R	
39	B	
41	R	
42	LG	
43	G	
44	GR	
45	BR	
46	LG	
47	V	
48	P	
49	L	
67	GR	
67	LG	
80	R	
81	P	
82	G	
83	V	

84	L	
85	V	
87	W	
87	W	
83	GR	
95	LG	
97	SB	
98	SHIELD	
99	L	
100	P	

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS98FW-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	V	
2A	G	
3A	B	
4A	L	
5A	Y	
7A	R	
8A	L	

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

AUTO LIGHT SYSTEM

Connector No.	M85
Connector Name	WIRE TO WIRE
Connector Type	TE80MK-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	G	-
3	LG	-
4	W	-
5	Y	-
6	LG	-
7	W	-
8	LG	-
9	G	-
10	L	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	BR	-
18	P	-
19	L	-
20	L	-
21	Y	-
22	Y	-
23	R	-
24	Y	-
25	LG	-
26	BR	-
27	BG	-
28	LG	-
29	LG	-
30	LG	-
31	V	-
32	LG	-
33	SHIELD	-
34	GR	-
35	GR	-
36	Y	-
37	SHIELD	-
38	SS	-
39	LG	-
40	O	-
41	W	-
42	SHIELD	-
43	W	-


43	R	-
44	C	-
45	SHIELD	-
46	SB	-
47	W	-
48	W	-
49	B	-
50	V	-
51	Y	-
52	SHIELD	-
53	V	-
54	P	-
55	SB	-
56	V	-
57	W	-
58	Y	-
59	Y	-
60	V	-
61	P	-
62	SB	-
63	V	-
64	W	-
65	BR	-
66	LG	-
67	BR	-
68	SB	-
69	SB	-
70	SB	-
71	V	-
72	P	-
73	SB	-
74	V	-
75	W	-
76	BR	-
77	LG	-
78	BR	-
79	SB	-
80	SB	-
81	SB	-
82	LG	-
83	BR	-
84	SB	-
85	SB	-
86	SB	-
87	G	-
88	GR	-
89	L	-
90	P	-
91	L	-
92	L	-
93	P	-
94	LG	-
95	BG	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TE80MK-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	Y	-
4	L	-
5	L	-
6	L	-
7	G	-
8	G	-
9	Y	-
10	Y	-
11	V	-
12	V	-
13	LG	-
14	BR	-
15	BR	-
16	BG	-
17	BG	-
18	LG	-
19	LG	-
20	LG	-
21	V	-
22	SHIELD	-
23	SHIELD	-
24	GR	-
25	GR	-
26	Y	-
27	SHIELD	-
28	SS	-
29	LG	-
30	LG	-
31	O	-
32	W	-
33	SHIELD	-
34	W	-
35	SHIELD	-
36	W	-
37	SHIELD	-
38	SS	-
39	LG	-
40	O	-
41	W	-
42	SHIELD	-

Connector No.	M83
Connector Name	COMBINATION SWITCH
Connector Type	TE16FW-HH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	FR	WASHER (-)
2	SB	OUTPUT 1
3	L	OUTPUT 2
4	L	OUTPUT 3
5	L	GROUND
6	B	GROUND
7	BG	INPUT 3
8	BR	OUTPUT 5
9	W	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	P	OUTPUT 1
13	Y	INPUT 5
14	G	OUTPUT 2


Connector No.	M84
Connector Name	OPTICAL SENSOR
Connector Type	TE03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	POWER
2	BG	OUTPUT
3	B	GROUND

43	R	-
44	C	-
45	SHIELD	-
46	SB	-
47	W	-
48	W	-
49	B	-
50	V	-
51	Y	-
52	SHIELD	-
53	V	-
54	P	-
55	SB	-
56	V	-
57	W	-
58	Y	-
59	Y	-
60	V	-
61	P	-
62	SB	-
63	V	-
64	W	-
65	BR	-
66	LG	-
67	BR	-
68	SB	-
69	SB	-
70	SB	-
71	V	-
72	P	-
73	SB	-
74	V	-
75	W	-
76	BR	-
77	LG	-
78	BR	-
79	SB	-
80	SB	-
81	SB	-
82	LG	-
83	BR	-
84	SB	-
85	SB	-
86	SB	-
87	G	-
88	GR	-
89	L	-
90	P	-
91	L	-
92	L	-
93	P	-
94	LG	-
95	BG	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	ED16FW-P



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	V	-
8	G	-
9	G	-
10	LG	-
11	SB	-
12	P	-
13	R	-
14	P	-
15	R	-
16	R	-

AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

AUTO LIGHT SYSTEM

Connector No.	MT17
Wire TO WIRE	-
Connector Type	TH80MK-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-
3	SB	-
31	SB	-
32	LG	-
33	SB	-
34	LG	-
40	Y	-
41	G	-
42	LG	-
43	R	-
45	G	-
46	SHIELD	-
47	P	-
48	SHIELD	-
49	Y	-
50	Y	-
51	R	-
71	R	-
80	W	-
81	SHIELD	-
82	P	-
83	L	-
84	G	-
85	SHIELD	-
86	W	-
87	B	-
88	R	-
89	G	-
90	Y	-
91	Y	-
92	BR	-
93	Y	-
94	Y	-
95	G	-
96	G	-


37	R	-
38	BG	-
39	P	-
100	L	-

Connector No.	MT18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FE-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (7/Δ)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	BG	POWER WINDOW POWER SUPPLY (RAP)


Connector No.	MT19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	HS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	P	PASSENGER DOOR UNLOCK OUTPUT
7	SB	STEP LAMP CONT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	P	DRIVER DOOR FUEL LID LOCK OUTPUT
10	P	REAR DOOR FUEL LID LOCK OUTPUT
11	R	BAT (GUSE)
13	B	GROUND
14	W	PUSH-BUTTON ILLUMINATION SW ILL GND
15	BG	ACC I/O
17	W	TURN SIGNAL RH (FRONT)

18	BG	TURN SIGNAL LH (FRONT)
19	V	INT ROOM LAMP CONT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-YH



Terminal No.	Color Of Wire	Signal Name [Specification]
34	SB	TRUNK ROOM ANT-
35	V	TRUNK ROOM ANT+
38	B	REAR BUMPER ANT-
39	W	REAR BUMPER ANT+
47	Y	IGN RELAY (PDM E/R) CONT
50	BG	TRUNK ROOM LAMP SW
52	R	STARTER RELAY CONT
60	BR	PUSH SW
61	SB	TRUNK LID OPENER REQUEST SW
64	G	I-KEY/WARN BUZZER (ENG ROOM)
67	GR	TRUNK LID OPENER SW
68	BG	REAR LID DOOR SW
69	L	REAR LID DOOR SW

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FE-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	R	ROOM ANT 2-
73	G	ROOM ANT 2+
74	SB	PASSENGER DOOR ANT-

75	BR	PASSENGER DOOR ANT+
76	G	DRIVER DOOR ANT-
77	G	DRIVER DOOR ANT+
78	Y	ROOM ANT 1+
79	BR	ROOM ANT 1-
80	GR	NATS ANT AMP
81	W	NATS ANT AMP
82	SB	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMM
87	Y	COMBI SW INPUT 3
88	BG	COMBI SW INPUT 5
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL CONT
93	GR	IGN I/O
94	BG	IGN I/O
95	BG	A-T SHIFT SELECTOR POWER SUPPLY
96	R	SHIFT P
100	Y	PASSENGER DOOR REQUEST SW
101	P	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	P	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	W	COMBI SW INPUT 2
110	G	HAZARD SW

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
113	BG	OPTICAL SENSOR
118	BR	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	SB	KEY SLOT SW
123	V	IGN F/B
124	R	PASSENGER DOOR SW
129	BG	TRUNK LID OPENER CANCEL SW

JRLWD9154GB

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

AUTO LIGHT SYSTEM		
132	V	POWER WINDOW SW COMM
132	V	PUSH-BUTTON WINDOW SW ILL POWER
132	LG	LOCK IND
137	BG	RECEIVER / SENSOR GND
138	V	RECEIVER / SENSOR POWER SUPPLY
139	L	TIRE PRESSURE RECEIVER COMM
140	B	SHIFT N/P
141	W	SECURITY IND LAMP CONT
142	BR	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

JRLWD9155GB

FRONT FOG LAMP SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

FRONT FOG LAMP SYSTEM

Wiring Diagram - FRONT FOG LAMP -

INFOID:000000010988654

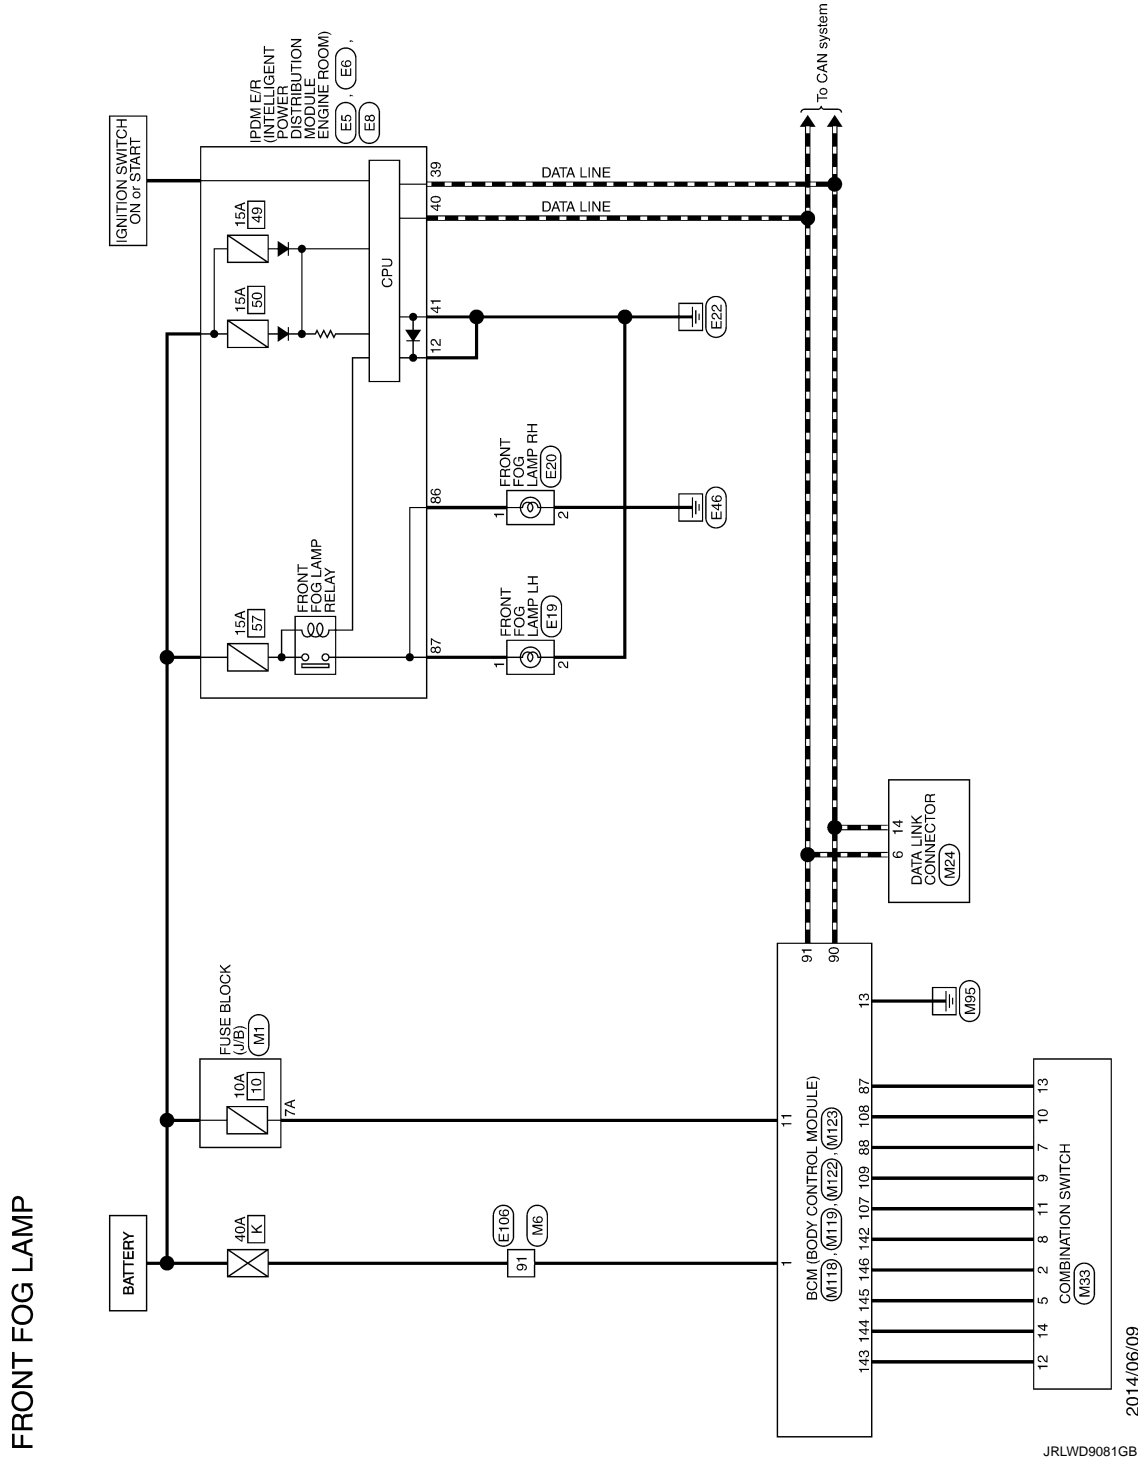

FRONT FOG LAMP

2014/06/09

JRLWD9081GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


FRONT FOG LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

FRONT FOG LAMP

Connector No.	E5
Connector Name	FOUR IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE
Connector Type	TH80FW-AM1-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	Y	
5	SB	
6	SB	
7	P	
12	B/W	
13	Y	
16	LG	
19	R	
25	G	
27	BG	
28	L	
30	GR	
36	G	


Connector No.	E6
Connector Name	FOUR IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE
Connector Type	TH80FW-AM1



Terminal No.	Color Of Wire	Signal Name [Specification]
38	P	
40	L	
41	B/W	
42	GR	
43	G	
44	LG	

45	V	
46	SB	

Connector No.	E8
Connector Name	FOUR IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE
Connector Type	NS90FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
83	R	
84	V	
86	W	
87	L	
88	G	
89	BR	
90	P	

Connector No.	E19
Connector Name	FRONT FOG LAMP LH
Connector Type	FHZ02FB




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	
2	B/W	

Connector No.	E20
Connector Name	FRONT FOG LAMP RH
Connector Type	FHZ02FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
2	B/W	

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CSI-E-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	
3	BG	
5	G	
6	Y	
7	V	
9	R	
11	V	
12	R	
13	L	
14	GR	
15	W	
17	SB	
18	BG	
20	LG	
31	L	
32	BG	

36	SB	
37	Y	
38	R	
39	B	
41	R	
42	LG	
43	G	
44	GR	
45	BR	
46	LG	
47	V	
48	P	
49	L	
56	GR	
57	G	
58	G	
82	G	
83	V	
84	L	
85	W	
89	V	
91	W	
93	GR	
95	LG	
97	SB	
98	SHIELD	
99	L	
100	P	

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS90FW-AM2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	V	
2A	G	
3A	L	
4A	P	

FRONT FOG LAMP SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

FRONT FOG LAMP

5A	V	-
5B	V	-
5A	R	-
5A	L	-


Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TR80MW-C51P-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
3	R	-
5	G	-
6	LG	-
7	W	-
9	G	-
11	V	-
12	R	-
13	LG	-
14	W	-
15	W	-
16	BR	-
18	L	-
20	L	-
31	L	-
32	Y	-
36	R	-
37	Y	-
38	R	-
39	SB	-
41	V	-
42	LG	-
43	G	-
44	S	-
45	BG	-
46	G	-
47	L	-
48	P	-
49	L	-


86	Y	-
87	W	-
88	SB	-
89	B	-
92	V	-
93	W	-
94	L	-
95	GR	-
99	SHIELD	-
99	V	-
100	SB	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW-P



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	V	-
8	G	-
11	SB	-
14	P	-
16	R	-

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	FR WASHER (-)
2	SB	OUTPUT 4
3	SB	OUTPUT 3
4	B	GROUND
5	B	GROUND
7	EG	INPUT 3
8	BR	OUTPUT 5
9	W	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	P	OUTPUT 1
13	Y	INPUT 5
14	G	OUTPUT 2

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (Z/L)
2	W	POWER WINDOW POWER SUPPLY (BAT)
3	BG	POWER WINDOW POWER SUPPLY (RCP)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	SB	PASSENGER DOOR LOCK OUTPUT
7	SB	DRIVER DOOR LOCK OUTPUT
8	V	ALL DOOR FUEL LIEU LOCK OUTPUT
8	G	DRIVER DOOR FUEL LIEU LOCK OUTPUT
10	P	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GROUND
14	W	PUSH-BUTTON IGNITION SW ILL GND
15	BG	ACC IND
17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	V	RNT ROOM LAMP CONT

Connector No.	M22
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	R	ROOM ANT 2
22	G	ROOM ANT 2a
24	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT 1-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

FRONT FOG LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

FRONT FOG LAMP

87	BR	FRONT LAMP
88	BR	FRONT LAMP
89	BR	FRONT LAMP
90	BR	FRONT LAMP
91	BR	FRONT LAMP
92	BR	FRONT LAMP
93	BR	FRONT LAMP
94	BR	FRONT LAMP
95	BR	FRONT LAMP
96	BR	FRONT LAMP
97	BR	FRONT LAMP
98	BR	FRONT LAMP
99	BR	FRONT LAMP
100	BR	FRONT LAMP
101	BR	FRONT LAMP
102	BR	FRONT LAMP
103	BR	FRONT LAMP
104	BR	FRONT LAMP
105	BR	FRONT LAMP
106	BR	FRONT LAMP
107	BR	FRONT LAMP
108	BR	FRONT LAMP
109	BR	FRONT LAMP
110	BR	FRONT LAMP

138	V	RECEIVER / SENSOR POWER SUPPLY
139	L	TIRE PRESSURE MONITOR COMM
140	B	SHIFT P
141	W	SECURITY INEL LAMP CONT
142	BR	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	OR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT.

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	T144DFG-1H1



Terminal No.	Color Of Wire	Signal Name [Specification]
113	BG	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	BR	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	SB	KEY SW SW
122	SB	KEY SW SW
124	R	PASSENGER DOOR SW
129	BG	TRUNK LID OPERER CANCEL SW
132	V	POWER WINDOW SW COMM
133	L	PUSH-BUTTON IGNITION SW ILL POWER
134	LG	LOCK IND
137	BG	RECEIVER / SENSOR GND

JRLWD9158GB

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


[XENON TYPE]

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

Wiring Diagram - TURN AND HAZARD WARNING LAMPS -

INFOID:000000010988655

TURN SIGNAL AND HAZARD WARNING LAMPS

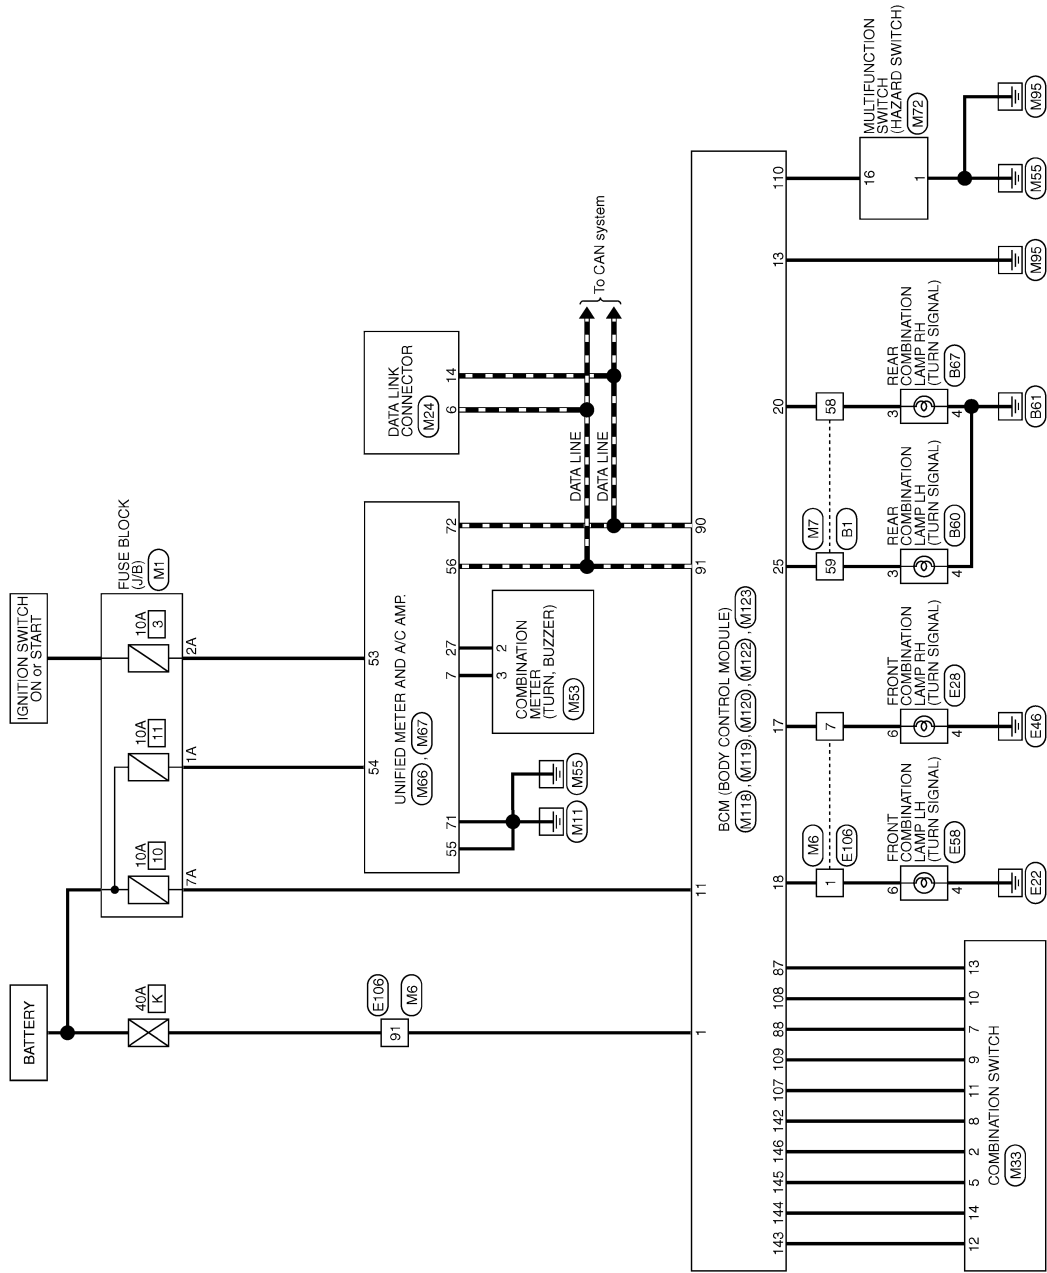

2010/08/18

JCLWM5956GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

TURN SIGNAL AND HAZARD WARNING LAMPS

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	24	Y	-
Terminal No.	32	B	-
Terminal No.	84	Y	-
Terminal No.	85	G	-
Terminal No.	86	W	-
Terminal No.	87	R	-
Terminal No.	88	BR	-
Terminal No.	89	Y	-
Terminal No.	90	SB	-
Terminal No.	92	BR	-
Terminal No.	93	P	-
Terminal No.	95	EG	-

Connector No.	B6D
Connector Name	REAR COMBINATION LAMP LH
Connector Type	NS24FW-CS



Terminal No.	1	LG	-
Terminal No.	2	LG	-
Terminal No.	3	SB	-
Terminal No.	4	B	-

Connector No.	B87
Connector Name	REAR COMBINATION LAMP RH
Connector Type	NS24FW-CS



Terminal No.	1	R	-
Terminal No.	3	LG	-
Terminal No.	4	B	-

Connector No.	E28
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS08FB-PR




Terminal No.	3	B	-
Terminal No.	4	B/W	-
Terminal No.	5	R	-
Terminal No.	6	V	-
Terminal No.	7	BR	-
Terminal No.	8	G	-

Connector No.	E58
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS08FB-PR



Terminal No.	3	B	-
Terminal No.	4	B/W	-
Terminal No.	5	V	-
Terminal No.	6	GR	-
Terminal No.	7	P	-
Terminal No.	8	BG	-

Connector No.	E108
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	1	GR	-
Terminal No.	3	BG	-
Terminal No.	5	G	-
Terminal No.	6	Y	-
Terminal No.	7	V	-
Terminal No.	9	R	-
Terminal No.	13	R	-
Terminal No.	14	L	-
Terminal No.	14	GR	-
Terminal No.	15	P	-
Terminal No.	16	W	-
Terminal No.	17	SB	-

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

TURN SIGNAL AND HAZARD WARNING LAMPS

18	EG	-	-
20	LG	-	-
21	WG	-	-
32	EG	-	-
36	SB	-	-
37	R	-	-
38	Y	-	-
39	B	-	-
41	R	-	-
42	LG	-	-
43	G	-	-
44	GR	-	-
45	BR	-	-
46	L	-	-
47	V	-	-
48	GR	-	-
67	LG	-	-
80	R	-	-
81	P	-	-
82	G	-	-
83	V	-	-
84	L	-	-
85	W	-	-
91	W	-	-
93	GR	-	-
95	LG	-	-
98	SHIELD	-	-
99	L	-	-
100	P	-	-

Connector No.	M1
Connector Name	FUSE BLOCK (1/16)
Connector Type	NS90FW-M2




Terminal No.	Color Of Wire	Signal Name [Specification]
18	EG	-
20	LG	-
21	WG	-
32	EG	-
36	SB	-
37	R	-
38	Y	-
39	B	-
41	R	-
42	LG	-
43	G	-
44	GR	-
45	BR	-
46	L	-
47	V	-
48	GR	-
67	LG	-
80	R	-
81	P	-
82	G	-
83	V	-
84	L	-
85	W	-
91	W	-
93	GR	-
95	LG	-
98	SHIELD	-
99	L	-
100	P	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	EG	-
3	R	-
5	G	-
7	W	-
9	G	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	BR	-
18	P	-
20	L	-
31	L	-
32	Y	-
37	Y	-
38	R	-
39	SB	-
41	V	-
42	LG	-
43	P	-

Connector No.	M1
Connector Name	FUSE BLOCK (1/16)
Connector Type	NS90FW-M2



44	B	-	-
45	EG	-	-
46	W	-	-
47	G	-	-
48	L	-	-
49	P	-	-
66	Y	-	-
67	G	-	-
80	SB	-	-
81	B	-	-
82	V	-	-
83	W	-	-
84	L	-	-
85	GR	-	-
89	LG	-	-
93	W	-	-
95	Y	-	-
97	GR	-	-
98	SHIELD	-	-
99	V	-	-
100	SB	-	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	P	-
4	Y	-
6	L	-
8	G	-
9	Y	-
24	V	-
25	LG	-
26	BR	-
27	EG	-
28	LG	-

31	V	-	-
32	G	-	-
33	SHIELD	-	-
34	CR	-	-
35	BR	-	-
36	Y	-	-
37	SHIELD	-	-
38	SB	-	-
39	LG	-	-
40	O	-	-
41	W	-	-
42	SHIELD	-	-
43	R	-	-
44	G	-	-
45	SHIELD	-	-
46	SB	-	-
48	W	-	-
55	B	-	-
58	Y	-	-
59	V	-	-
71	V	-	-
72	P	-	-
73	SB	-	-
74	V	-	-
81	W	-	-
82	BR	-	-
84	LG	-	-
85	EG	-	-
86	SB	-	-
87	GR	-	-
88	GR	-	-
89	L	-	-
90	P	-	-
92	L	-	-
93	P	-	-
95	EG	-	-

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]


TURN SIGNAL AND HAZARD WARNING LAMPS

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW-P




Terminal No.	14	G	OUTPUT 2
--------------	----	---	----------

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	SA840FW




Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	BATTERY POWER SUPPLY
5	B	COMMUNICATION SIGNAL (AMP-METER)
6	L	GROUND
7	V	ALTERNATOR SIGNAL
8	G	SECURITY SIGNAL
11	SB	METER CONTROL SWITCH GROUND
14	P	ILL GND
16	R	IGNITION SIGNAL

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	FR WASHER (-)
2	SB	OUTPUT 4
5	L	OUTPUT 3
7	EG	SWITCH SIGNAL
8	BR	OUTPUT 5
9	W	INPUT 4
10	R	INPUT 1
11	LG	INPUT 1
12	P	OUTPUT 1
13	Y	INPUT 5

Connector No.	M65
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
4	G	STOP LAMP SWITCH SIGNAL
7	L	MANUAL MODE SHIFTER SIGNAL
8	GR	COMMUNICATION SIGNAL (AMP-METER)
9	L	VEHICLE SPEED SIGNAL (2-PULSE)
10	W	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
11	G	MANUAL MODE SIGNAL
14	BR	NON-MANUAL MODE SIGNAL
23	Y	COMMUNICATION SIGNAL (LCD-AMP)
25	V	A/T SNOW SWITCH SIGNAL
27	LG	MANUAL MODE SHIFTER SIGNAL
28	R	COMMUNICATION SIGNAL (METER-AMP)
30	V	VEHICLE SPEED SIGNAL (8-PULSE)
34	Y	PARKING BRAKE SWITCH SIGNAL
38	P	COMMUNICATION SIGNAL (AMP-LCD)
		BLOWER MOTOR CONTROL SIGNAL


Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
41	L	ACC POWER SUPPLY
42	BR	FUEL LEVEL SENSOR SIGNAL
43	BR	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	V	AMBIENT SENSOR SIGNAL

46	Y	SUNLOAD SENSOR SIGNAL
52	W	IGNITION SENSOR SIGNAL
53	SB	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	LG	BRAKE FLUID LEVEL SWITCH
58	Y	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	W	IN-VEHICLE SENSOR GROUND
61	B	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
65	EG	ECV SIGNAL
69	P	A/C LAM SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	GR	GROUND
72	P	CAN-L

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
3	P	ACC
4	BG	ILL
5	B	ILL CONT
6	SB	AV COMM (H)
8	LG	AV COMM (L)
9	BR	SW GND
14	V	DISK EJECT SIGNAL
16	G	HAZARD ON

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


[XENON TYPE]

TURN SIGNAL AND HAZARD WARNING LAMPS

Connector No.	MT18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS3FB-LC



Connector No.	MT20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FH-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (F.L)
2	W	POWER WINDOW POWER SUPPLY (BAT)
3	BG	POWER WINDOW POWER SUPPLY (BAP)

Connector No.	MT19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	P	PASSENGER DOOR UNLOCK OUTPUT
7	SB	STEP LAMP CONT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID LOCK OUTPUT
10	P	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GROUND
14	W	PUSH-BUTTON (IGNITION SW) ILL GND
15	BG	ACC IND
17	BG	TURN SIGNAL (FRONT)
18	BG	TURN SIGNAL (REAR)
19	V	INT ROOM LAMP CONT

Terminal No.	Color Of Wire	Signal Name [Specification]
82	LG	KEY SLOT ILL CONT
83	GR	ACC RELAY CONT
84	BR	ACC RELAY CONT
86	GR	A/T SHFT SELECTOR POWER SUPPLY
89	R	SHIF P
100	Y	PASSENGER DOOR REQUEST SW
101	P	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	P	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	W	COMBI SW INPUT 2
110	G	HAZARD SW

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH4BFC-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
118	BG	OPTICAL SENSOR
119	BR	STOP LAMP SW 2
121	SB	DR DOOR UNLOCK SENSOR
123	V	KEY SLOT SW
124	R	IGN F/B
129	BG	PASSENGER DOOR SW
132	V	TRUNK LID OPENER CANCEL SW
133	L	POWER WINDOW SW COMM
134	LG	PUSH-BUTTON (IGNITION SW) ILL POWER LOCK IND
137	BG	RECEIVER / SENSOR GND
138	V	RECEIVER / SENSOR POWER SUPPLY
139	B	TIRE PRESSURE RECEIVER COMM
140	R	SECURITY LAMP CONT
142	BR	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4

Connector No.	MT22
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH4DFB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	R	ROOM ANT 2-
73	G	ROOM ANT 2+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT 1-
79	BR	ROOM ANT 1+
80	GR	MATS ANT AMP
81	BR	IGN RELAY (E) CONT
82	SB	KEYLESS ENTRY RECEIVER COMM
83	Y	COMBI SW INPUT 5
88	BG	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H

150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

JRLWD9162GB

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

Wiring Diagram - PARKING LICENSE PLATE AND TAIL LAMPS -

INFOID:000000010988656

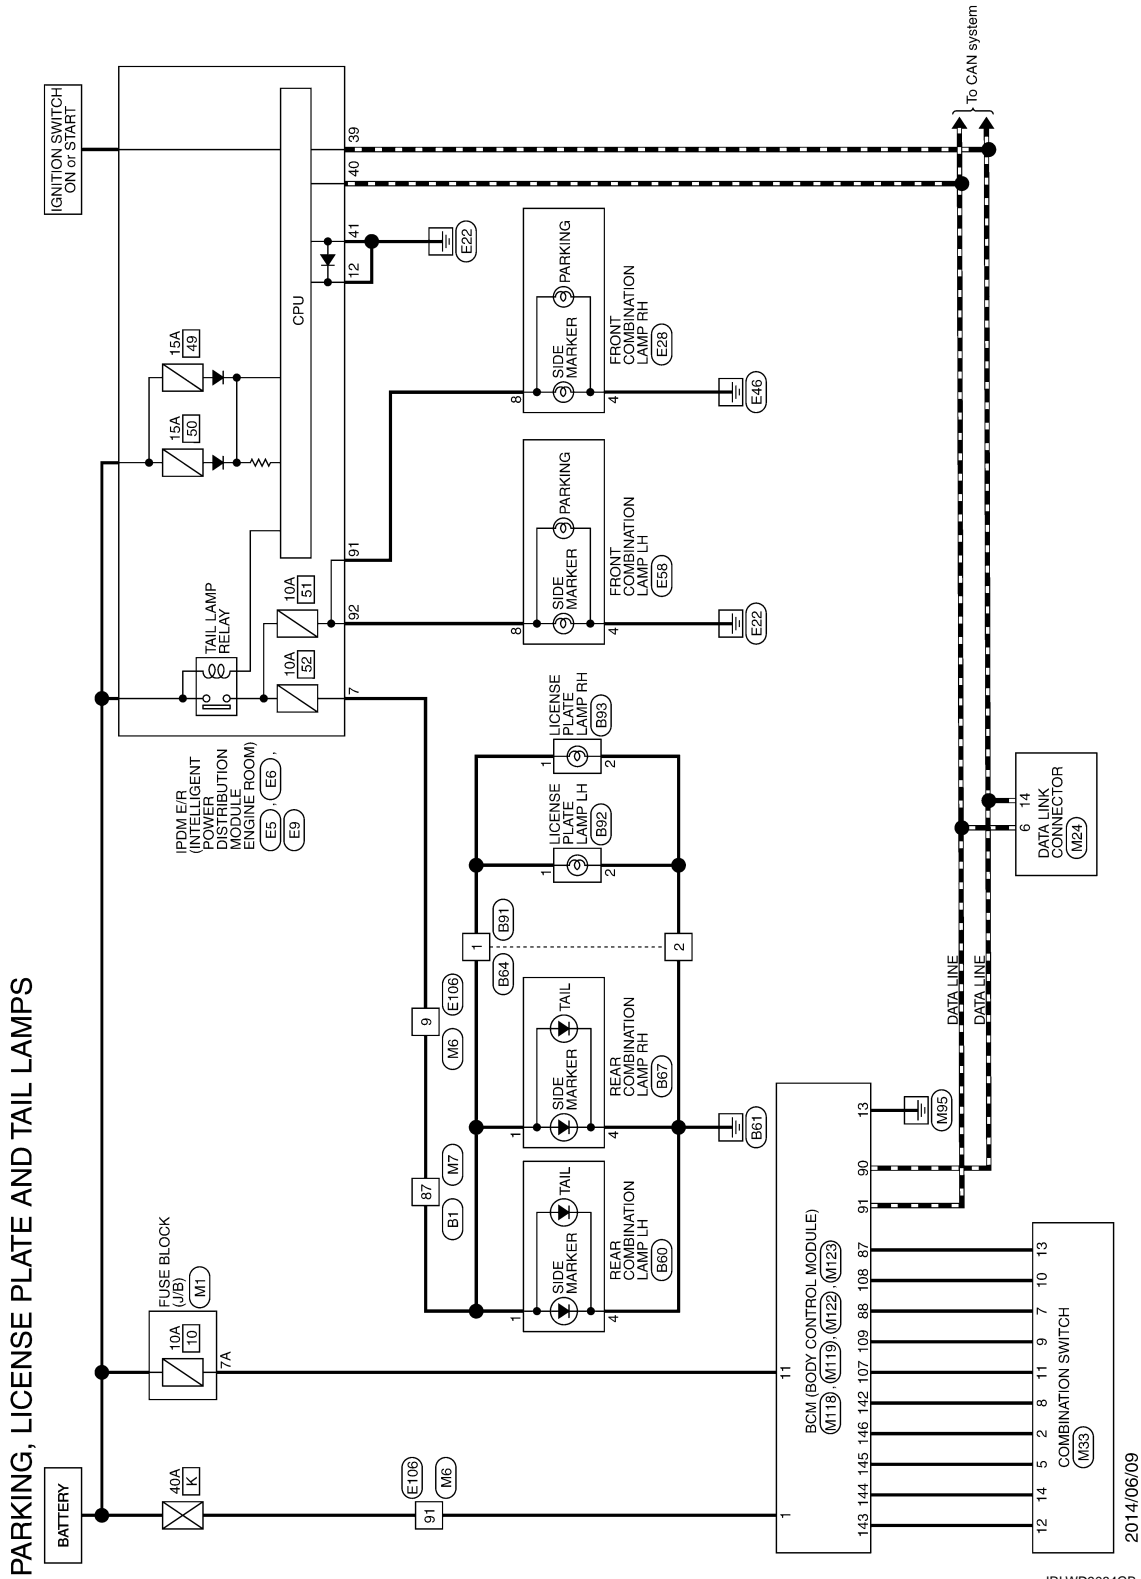

2014/06/09

JRLWD9084GB


PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

PARKING, LICENSE PLATE AND TAIL LAMPS

Connector No.	B81
Connector Name	WIRE TO WIRE
Connector Type	TR80FW-CS16-TM4



74	L	-
75	S	-
82	Y	-
84	Y	-
85	G	-
86	W	-
87	R	-
88	BR	-
89	Y	-
90	SB	-
92	BR	-
93	P	-
95	BG	-

Connector No.	B60
Connector Name	REAR COMBINATION LAMP LH
Connector Type	NSM4FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	LG	-
3	SB	-
4	B	-

Connector No.	B84
Connector Name	WIRE TO WIRE
Connector Type	FR02FCY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	B87
Connector Name	REAR COMBINATION LAMP RH
Connector Type	NSM4FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	V	-
4	B	-

Connector No.	B91
Connector Name	WIRE TO WIRE
Connector Type	FR02MAY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	B92
Connector Name	LICENSE PLATE LAMP LH
Connector Type	FRW0ZFB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-

JRLWD9167GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]


PARKING, LICENSE PLATE AND TAIL LAMPS

Connector No.	E53
Connector Name	LICENSE PLATE LAMP RH
Connector Type	RV02FER




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-

Connector No.	E5
Connector Name	POWER IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH20FW-CS12-MA-1V




Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
6	SB	-
7	P	-
12	B/W	-
13	Y	-
16	LG	-
19	R	-
25	G	-
27	BG	-
28	CR	-
36	G	-

Connector No.	E5
Connector Name	POWER IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH38FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
41	B/W	-
42	GR	-
43	G	-
44	LG	-
45	V	-
46	SB	-

Connector No.	E5
Connector Name	POWER IN INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH18FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
91	G	-
92	BG	-
97	V	-
104	LG	-
105	L	-

Connector No.	E28
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS08FE-PR




Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	B/W	-
5	B	-
6	V	-
7	BR	-
8	G	-

Connector No.	E58
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS08FE-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	B/W	-
5	V	-
6	GR	-
7	P	-
8	BG	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	GR	-
3	G	-
4	G	-
5	G	-
6	V	-
7	V	-
9	R	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	SB	-
18	BG	-
19	LG	-
22	BG	-
26	SB	-
37	Y	-
39	R	-
41	R	-
42	LG	-
43	G	-
44	GR	-
45	BR	-
46	LG	-
47	V	-
48	L	-
62	GR	-
63	LG	-
80	R	-
81	P	-
82	G	-
83	V	-

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

PARKING, LICENSE PLATE AND TAIL LAMPS

84	L	-	-
85	V	-	-
86	Y	-	-
87	W	-	-
88	GR	-	-
89	LG	-	-
90	SB	-	-
91	SHIELD	-	-
92	L	-	-
93	P	-	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS36PW-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	B	-
4A	L	-
5A	Y	-
6A	R	-
7A	GR	-
8A	L	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MP-CS1P-TM



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	R	-
3	GR	-
4	LG	-
5	W	-
6	LG	-
7	W	-
8	GR	-
9	G	-
10	V	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	BR	-
18	P	-
19	L	-
20	Y	-
21	Y	-
22	Y	-
23	Y	-
24	Y	-
25	Y	-
26	R	-
27	R	-
28	R	-
29	SB	-
30	SB	-
31	SB	-
32	SB	-
33	SB	-
34	SB	-
35	SB	-
36	SB	-
37	SB	-
38	SB	-
39	SB	-
40	SB	-
41	SB	-
42	SB	-
43	SB	-
44	SB	-
45	SB	-
46	SB	-
47	SB	-
48	SB	-
49	SB	-
50	SB	-
51	SB	-
52	SB	-
53	SB	-
54	SB	-
55	SB	-
56	SB	-
57	SB	-
58	SB	-
59	SB	-
60	SB	-
61	SB	-
62	SB	-
63	SB	-
64	SB	-
65	SB	-
66	SB	-
67	SB	-
68	SB	-
69	SB	-
70	SB	-
71	SB	-
72	SB	-
73	SB	-
74	SB	-
75	SB	-
76	SB	-
77	SB	-
78	SB	-
79	SB	-
80	SB	-
81	SB	-
82	SB	-
83	SB	-

64	L	-	-
65	GR	-	-
66	LG	-	-
67	W	-	-
68	Y	-	-
69	Y	-	-
70	Y	-	-
71	Y	-	-
72	SHIELD	-	-
73	P	-	-
74	SB	-	-


Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MP-CS1P-TM



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	P	-
4	Y	-
5	Y	-
6	G	-
7	G	-
8	G	-
9	Y	-
10	Y	-
11	V	-
12	V	-
13	BR	-
14	BR	-
15	BR	-
16	BR	-
17	BR	-
18	BR	-
19	BR	-
20	BR	-
21	BR	-
22	BR	-
23	BR	-
24	V	-
25	LG	-
26	BR	-
27	BR	-
28	LG	-
29	LG	-
30	LG	-
31	V	-
32	LG	-
33	SHIELD	-
34	GR	-
35	BR	-
36	BR	-
37	SHIELD	-
38	SB	-
39	LG	-
40	O	-
41	V	-
42	SHIELD	-

43	R	-	-
44	R	-	-
45	SHIELD	-	-
46	SB	-	-
47	W	-	-
48	B	-	-
49	V	-	-
50	V	-	-
51	Y	-	-
52	Y	-	-
53	P	-	-
54	SB	-	-
55	SB	-	-
56	SB	-	-
57	SB	-	-
58	SB	-	-
59	SB	-	-
60	SB	-	-
61	SB	-	-
62	SB	-	-
63	SB	-	-
64	SB	-	-
65	SB	-	-
66	SB	-	-
67	SB	-	-
68	SB	-	-
69	SB	-	-
70	SB	-	-
71	SB	-	-
72	SB	-	-
73	SB	-	-
74	V	-	-
75	W	-	-
76	W	-	-
77	BR	-	-
78	LG	-	-
79	LG	-	-
80	LG	-	-
81	G	-	-
82	G	-	-
83	G	-	-
84	GR	-	-
85	GR	-	-
86	GR	-	-
87	L	-	-
88	L	-	-
89	L	-	-
90	P	-	-
91	P	-	-
92	L	-	-
93	P	-	-
94	BG	-	-
95	BG	-	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD1EPV-P



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	B	-
7	V	-
8	G	-
11	SB	-
14	P	-
16	R	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

PARKING, LICENSE PLATE AND TAIL LAMPS

Connector No.	M23
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	SR	R	FR WASHER (-)
2	SR	R	OUTPUT 1
3	SB	B	OUTPUT 2
4	B	B	OUTPUT 3
5	B	B	GROUND
6	B	B	INPUT 3
7	B	B	INPUT 2
8	BR	R	INPUT 5
9	W	W	INPUT 2
10	R	R	INPUT 4
11	LG	G	INPUT 1
12	P	P	OUTPUT 1
13	Y	Y	INPUT 5
14	G	G	OUTPUT 2


Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LG



Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	Y	BAT (E/L)
2	Y	Y	POWER WINDOW POWER SUPPLY (BAT)
3	BG	G	POWER WINDOW POWER SUPPLY (BAP)

PARKING, LICENSE PLATE AND TAIL LAMPS

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-ES



Terminal No.	Color	Wire	Signal Name [Specification]
4	LG	G	INTERIOR ROOM LAMP POWER SUPPLY
5	SB	B	PASSENGER DOOR UNLOCK OUTPUT
6	SB	B	STEP LAMP CONT
7	SB	B	STEERING LOCK REQUEST SW
8	V	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	P	P	REAR DOOR UNLOCK OUTPUT
11	R	R	BAT (FUSE)
12	B	B	GROUND
13	B	B	PUSH-BUTTON IGNITION SW ILL GND
14	W	W	ACC IND
15	BG	G	TURN SIGNAL RH (FRONT)
16	W	W	TURN SIGNAL LH (FRONT)
17	BG	G	ACC IND
18	BG	G	INT ROOM LAMP CONT
19	V	V	INT ROOM LAMP CONT

Connector No.	M22
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	SR	R	ROOM ANT 1-
2	B	B	ROOM ANT 2-
3	G	G	ROOM ANT 2+
4	SR	R	ROOM ANT 1-
5	SR	R	PASSENGER DOOR ANT-
6	BR	R	PASSENGER DOOR ANT+
7	LG	G	DRIVER DOOR ANT-
8	Y	Y	DRIVER DOOR ANT+

Terminal No.	Color	Wire	Signal Name [Specification]
79	BR	R	ROOM ANT 1-
80	W	W	MISC ANT AMP
81	W	W	MISC ANT AMP
82	SB	B	IGN RELAY (E) CONT
83	Y	Y	KEYLESS ENTRY RECEIVER COMM
87	Y	Y	COMBI SW INPUT 5
88	BG	G	COMBI SW INPUT 3
90	P	P	CAN-L
91	L	L	CAN-H
92	LG	G	KEY SLOT ILL CONT
93	GR	G	ON IND
95	BG	G	ACC RELAY CONT
96	GR	G	A/T SHIFT SELECTOR POWER SUPPLY
99	R	R	SHIFT P
100	B	B	PASSENGER DOOR UNLOCK SW
101	B	B	PASSENGER DOOR UNLOCK SW
102	BG	G	BLOWER FAN MOTOR RELAY CONT
103	P	P	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	G	COMBI SW INPUT 1
108	R	R	COMBI SW INPUT 4
109	W	W	COMBI SW INPUT 2
110	G	G	HAZARD SW

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FC-NH



Terminal No.	Color	Wire	Signal Name [Specification]
113	BG	G	OPTICAL SENSOR
116	SB	B	STOP LAMP SW 1
118	BR	R	STOP LAMP SW 2
119	SB	B	DR DOOR UNLOCK SENSOR
121	Y	Y	KEYLESS SW
124	R	R	PASSENGER DOOR SW
129	BG	G	TRUNK LID OPENER CANCEL SW
132	V	V	POWER WINDOW SW COMM
133	L	L	PUSH-BUTTON IGNITION SW ILL POWER
134	LG	G	LOCK IND
137	BG	G	RECEIVER / SENSOR CND

Terminal No.	Color	Wire	Signal Name [Specification]
138	V	V	RECEIVER / SENSOR POWER SUPPLY
140	L	L	TIME PRESSURE RECEIVER COMM
140	B	B	SHIFTER LOCK SW
141	W	W	SECURITY IND LAMP CONT
142	BR	R	COMBI SW OUTPUT 5
143	P	P	COMBI SW OUTPUT 1
144	G	G	COMBI SW OUTPUT 2
145	L	L	COMBI SW OUTPUT 3
146	SB	B	COMBI SW OUTPUT 4
150	GR	G	DRIVER DOOR SW
151	G	G	REAR WINDOW DEFOGGER RELAY CONT

STOP LAMP


< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

STOP LAMP

Wiring Diagram - STOP LAMP -

INFOID:000000010988657

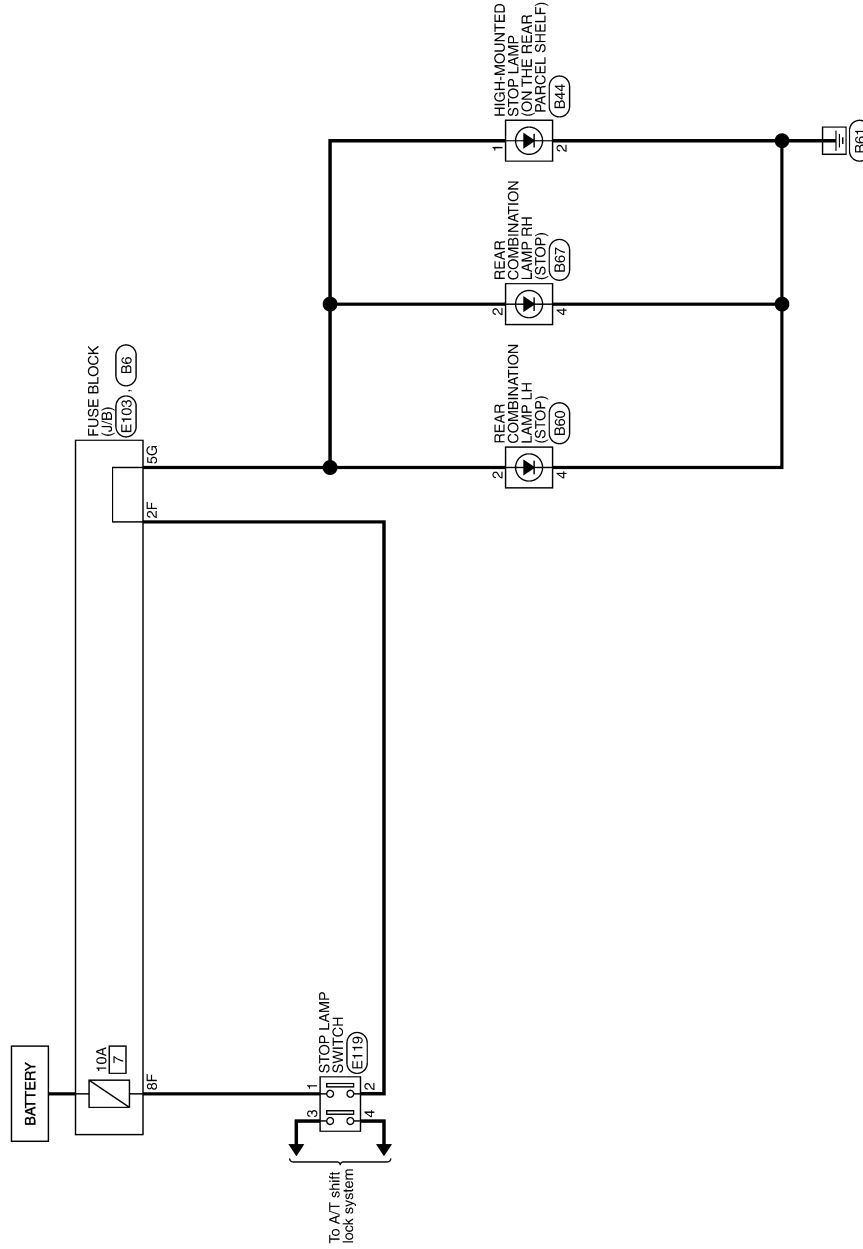

STOP LAMP

2014/06/09

JRLWD9082GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

STOP LAMP

Connector No.	B55
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FBR-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10G	W	-
12G	Y	-
5G	LG	-

STOP LAMP

Connector No.	B44
Connector Name	(XENON MOUNTED STOP LAMP) ON THE REAR PANEL SWLS
Connector Type	TR02MBR-P



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-

Connector No.	B60
Connector Name	REAR COMBINATION LAMP LH
Connector Type	NSM4FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	LG	-
3	SS	-
4	B	-


STOP LAMP

Connector No.	B67
Connector Name	REAR COMBINATION LAMP RH
Connector Type	NSM4FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	V	-
4	B	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS18FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1F	SP	-
2F	SP	-
4F	G	-
6F	BR	-
8F	L	-
9F	P	-

Connector No.	E119
Connector Name	STOP LAMP SWITCH
Connector Type	NSM4FW-LG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	G	-
4	V	-

JRLWD9163GB

BACK-UP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]


BACK-UP LAMP

Wiring Diagram - BACK-UP LAMP -

INFOID:000000010988658

BACK-UP LAMP

*: This connector is not shown in "Harness Layout".

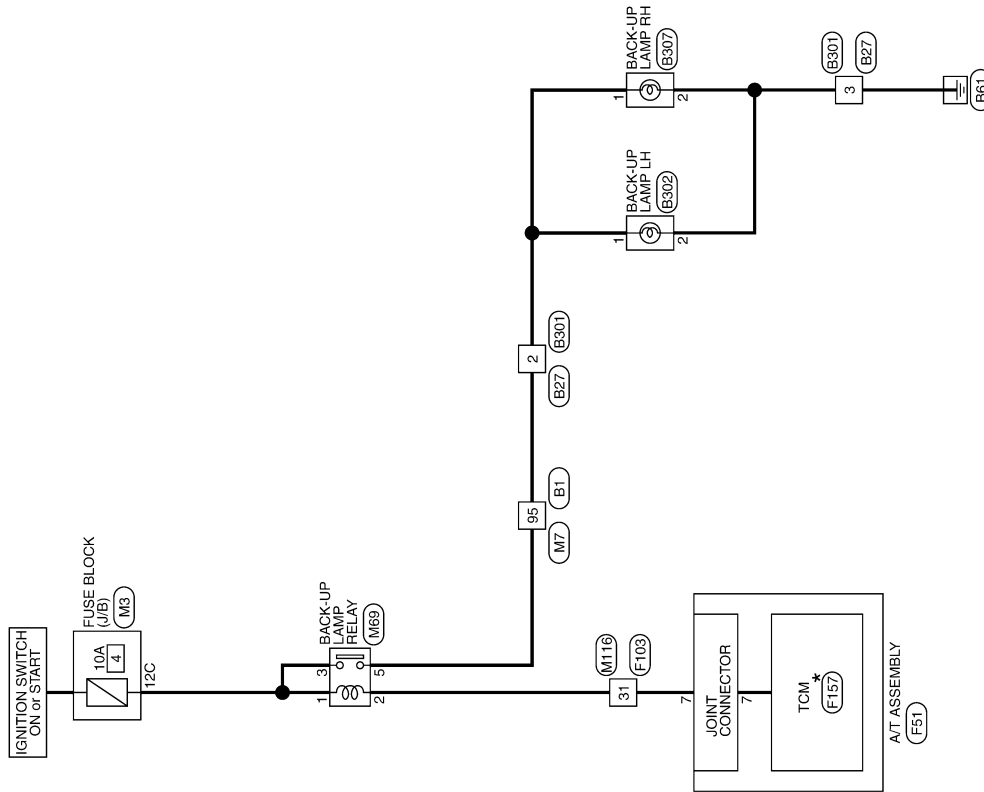

2014/06/09

JRLWD9083GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


BACK-UP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

BACK-UP LAMP

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TR80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	BG	-
3	L	-
4	Y	-
6	R	-
8	W	-
9	LG	-
24	V	-
25	SB	-
26	G	-
27	W	-
28	R	-
31	V	-
32	SB	-
33	SHIELD	-
35	BR	-
36	Y	-
37	SHIELD	-
38	Y	-
39	SB	-
40	P	-
41	L	-
42	SHIELD	-
43	R	-
44	G	-
45	SHIELD	-
46	SB	-
58	BR	-
59	V	-
59	SB	-
71	BG	-
72	GR	-
73	P	-


74	L	-
84	Y	-
82	B	-
84	Y	-
85	G	-
86	W	-
87	R	-
88	BR	-
89	Y	-
90	SB	-
92	BR	-
93	P	-
95	BG	-

Connector No.	B27
Connector Name	WIRE TO WIRE
Connector Type	NS18MW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
3	B	-
4	Y	-
5	B	-
6	W	-
11	G	-
12	SHIELD	-
13	B	-
14	W	-
15	R	-

Connector No.	B301
Connector Name	WIRE TO WIRE
Connector Type	NS18FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
2	BG	-
4	B	-
5	B	-
6	W	-
11	V	-
12	SHIELD	-
13	Y	-
14	W	-
15	R	-

Connector No.	B302
Connector Name	BACK-UP LAMP LH
Connector Type	NS20FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
2	B	-

Connector No.	B307
Connector Name	BACK-UP LAMP RH
Connector Type	NS20FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	B	-

Connector No.	FE1
Connector Name	A/T ASSEMBLY
Connector Type	RK1DFG-DG1



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	R	-
3	L	-
4	V	-
5	B	-
6	G	-
7	R	-
8	P	-
9	GR	-
10	B	-

JRLWD9164GB


BACK-UP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

BACK-UP LAMP

Connector No.	F103
Connector Name	WIRE TO WIRE
Connector Type	TK38PW-NS10




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	
2	G	
3	R	
4	B	
5	B	
6	Y	
7	GR	
8	O	
9	Y	
10	Y	
11	B	
12	B	
13	B	
14	P	
15	P	
16	P	
17	G	
18	P	
19	L	
20	G	
21	V	

Connector No.	F157
Connector Name	TOM
Connector Type	SPT0FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	VGN
2	SHIELD	IGN-L
3	SHIELD	IGN-R
4	SHIELD	K-LINE
5	SHIELD	GROUND
6	SHIELD	VGN
7	SHIELD	REV LAMP RLY
8	SHIELD	CAN-L
9	SHIELD	STARTER RLY
10	SHIELD	GROUND

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12PW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	
11C	LG	
12C	G	
13C	SB	
14C	W	
15C	Y	
16C	W	
17C	BG	


Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TK38MW-CS1P-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	
2	P	
3	Y	
4	Y	
5	L	
6	L	
7	G	
8	G	
9	Y	
10	Y	
11	V	
12	V	
13	LG	
14	LG	
15	BR	
16	BR	
17	BG	
18	BG	
19	LG	
20	LG	
21	V	
22	V	
23	SHIELD	
24	SHIELD	
25	BR	
26	BR	
27	BG	
28	BG	
29	LG	
30	LG	
31	V	
32	LG	
33	SHIELD	
34	BR	
35	BR	
36	V	
37	SHIELD	
38	SB	
39	LG	
40	O	
41	W	
42	SHIELD	
43	R	
44	G	
45	SHIELD	
46	SB	
47	W	
48	W	
49	B	
50	Y	
51	Y	
52	V	
53	V	
54	P	
55	P	
56	SB	
57	V	


81	W	--
82	DR	--
83	BG	--
84	BG	--
85	SB	--
86	SB	--
87	G	--
88	GR	--
89	L	--
90	P	--
91	L	--
92	L	--
93	P	--
94	P	--
95	BG	--

Connector No.	M69
Connector Name	BACK-UP LAMP RELAY
Connector Type	MS20FE-M2-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	
2	LG	
3	LG	
4	BG	
5	BG	

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK38MW-NS10



JRLWD9165GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BACK-UP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[XENON TYPE]

BACK-UP LAMP

Terminal No.	Color	Wire	Signal Name [Specification]
2	W	W	-
3	BG	-	-
4	P	-	-
5	B	-	-
9	R	-	-
10	R	-	-
19	BG	-	-
20	Y	-	-
28	B	-	-
29	LG	-	-
31	W	-	-
33	B	-	-
38	D	-	-
39	L	-	-
39	D	-	-
39	P	-	-
39	R	-	-
39	SB	-	-
42	P	-	-
44	L	-	-
45	Y	-	-
46	SB	-	-

JRLWD9166GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000011421474

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT/AUTO	Off
	Front wiper switch INT/AUTO	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper volume dial is in a dial position 1 - 7	Wiper volume dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Monitor Item	Condition	Value/Status
DOOR SW-RR	Rear RH door closed	Off
	Rear LH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
DOOR SW-BK	NOTE: The item is indicated, but not monitored.	Off
CDL LOCK SW	Other than power door lock switch LOCK	Off
	Power door lock switch LOCK	On
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off
	Power door lock switch UNLOCK	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK	Off
	Driver door key cylinder LOCK	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK	Off
	Driver door key cylinder LOCK	On
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW	NOTE: The item is indicated, but not monitored.	Off
TR CANCEL SW	Trunk lid opener cancel switch OFF	Off
	Trunk lid opener cancel switch ON	On
TR/BD OPEN SW	Trunk lid opener switch OFF	Off
	While the trunk lid opener switch is turned ON	On
TRNK/HAT MNTR	Trunk lid closed	Off
	Trunk lid opened	On
REVERSE SW	NOTE: The item is indicated, but not monitored.	Off
RKE-LOCK	LOCK button of the Intelligent Key is not pressed	Off
	LOCK button of the Intelligent Key is pressed	On
RKE-UNLOCK	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed	On
RKE-TR/BD	TRUNK OPEN button of the Intelligent Key is not pressed	Off
	TRUNK OPEN button of the Intelligent Key is pressed	On
RKE-PANIC	PANIC button of the Intelligent Key is not pressed	Off
	PANIC button of the Intelligent Key is pressed	On
RKE-P/W OPEN	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed and held	On
RKE-MODE CHG	LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Monitor Item	Condition	Value/Status	
REQ SW -AS	Passenger door request switch is not pressed	Off	A
	Passenger door request switch is pressed	On	
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off	B
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off	C
REQ SW -BD/TR	Trunk lid opener request switch is not pressed	Off	
	Trunk lid opener request switch is pressed	On	
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off	D
	Push-button ignition switch (push switch) is pressed	On	
IGN RLY2 -F/B	NOTE: The item is indicated, but not monitored.	Off	E
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off	
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off	F
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off	G
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On	
BRAKE SW 2	The brake pedal is not depressed	Off	H
	The brake pedal is depressed	On	
DETE/CANCL SW	Selector lever in P position	Off	I
	Selector lever in any position other than P	On	
SFT PN/N SW	Selector lever in any position other than P and N	Off	J
	Selector lever in P or N position	On	
S/L -LOCK	NOTE: The item is indicated, but not monitored.	Off	
S/L -UNLOCK	NOTE: The item is indicated, but not monitored.	Off	K
S/L RELAY-F/B	NOTE: The item is indicated, but not monitored.	Off	
UNLK SEN -DR	Driver door is unlocked	Off	EXL
	Driver door is locked	On	
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off	M
	Push-button ignition switch (push-switch) is pressed	On	
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off	N
	Ignition switch in ON position	On	
DETE SW -IPDM	Selector lever in any position other than P	Off	O
	Selector lever in P position	On	
SFT PN -IPDM	Selector lever in any position other than P and N	Off	P
	Selector lever in P or N position	On	
SFT P -MET	Selector lever in any position other than P	Off	P
	Selector lever in P position	On	
SFT N -MET	Selector lever in any position other than N	Off	P
	Selector lever in N position	On	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Monitor Item	Condition	Value/Status
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	NOTE: The item is indicated, but not monitored.	Off
S/L UNLK-IPDM	NOTE: The item is indicated, but not monitored.	Off
S/L RELAY-REQ	NOTE: The item is indicated, but not monitored.	Off
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (60 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (60 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Driver side door is open after ignition switch is turned OFF (Shift position is in the P position)	Reset
	Ignition switch ON	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset
KEY SW -SLOT	The Intelligent Key is not inserted into key slot	Off
	The Intelligent Key is inserted into key slot	On
RKE OPE COUN1	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Monitor Item	Condition	Value/Status
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

TERMINAL LAYOUT

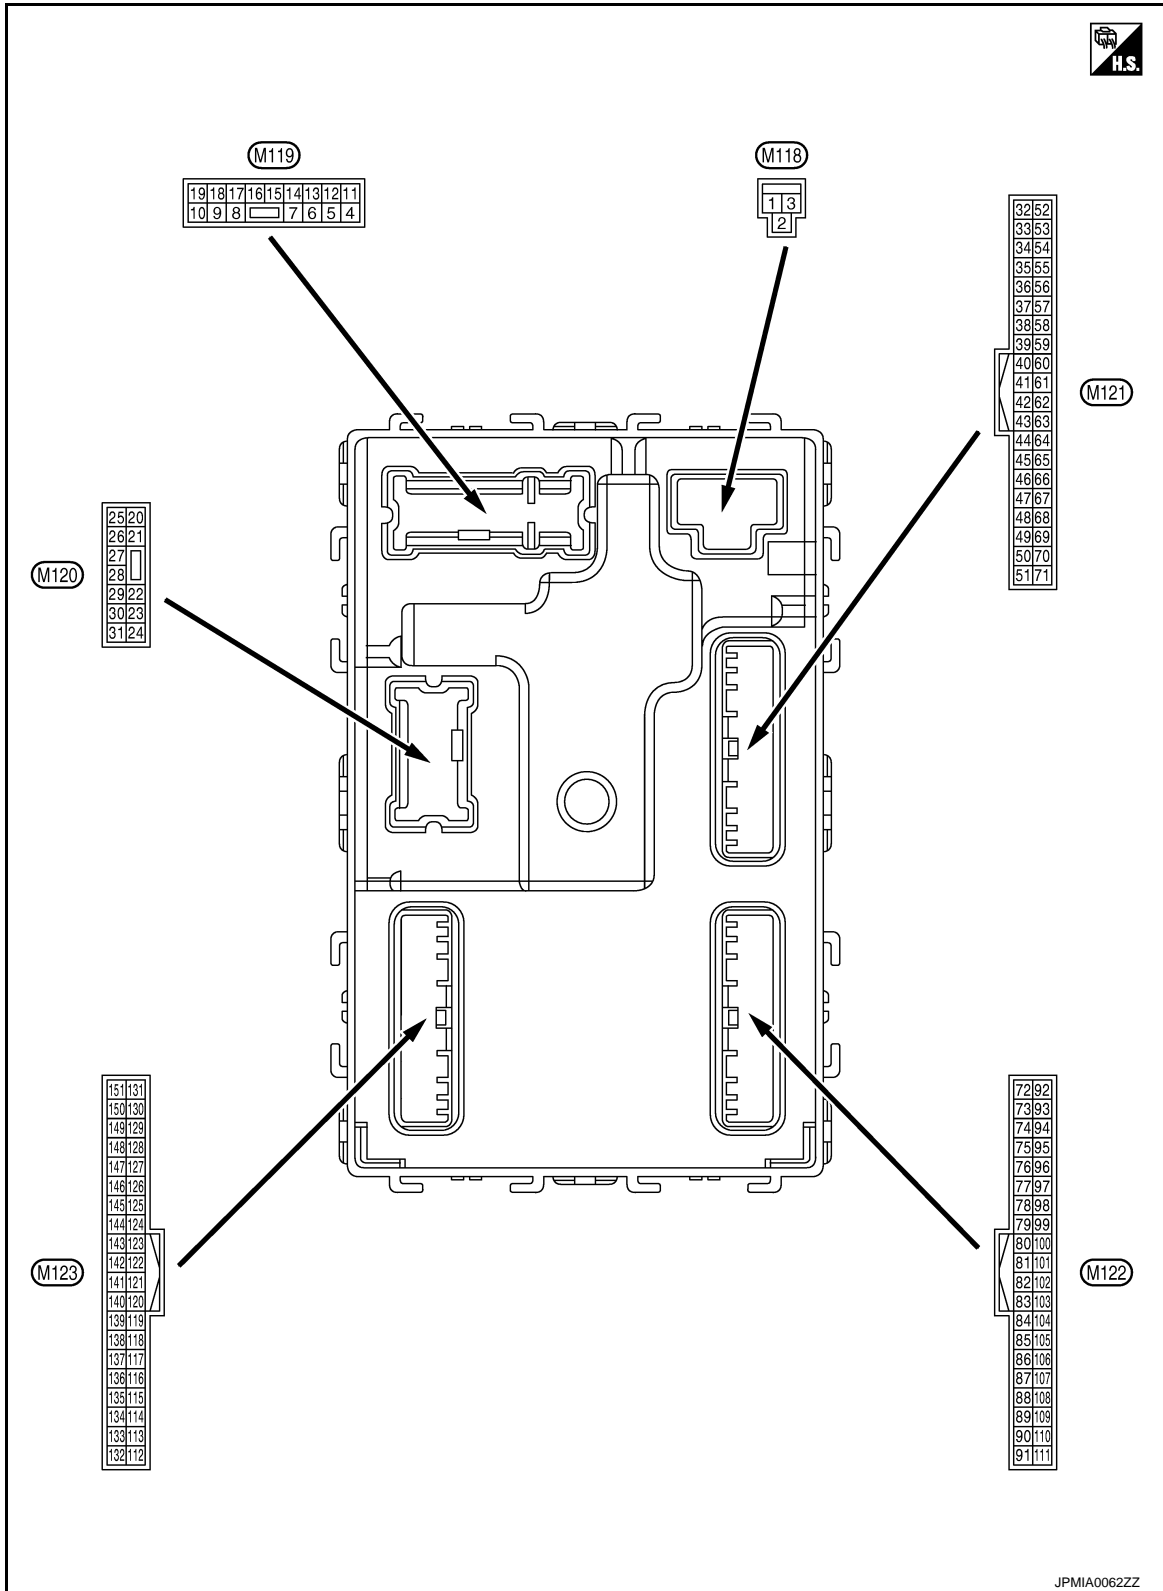


PHYSICAL VALUES

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[XENON TYPE]

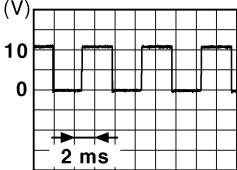Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		12 V
3 (BG)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		12 V
4 (LG)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		12 V
5 (P)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK) Ac- tuator is not activated	0 V
7 (SB)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	12 V
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	12 V
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
10 (P)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (W)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position.</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (BG)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[XENON TYPE]

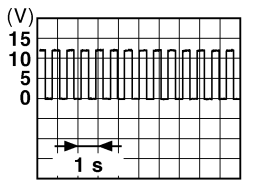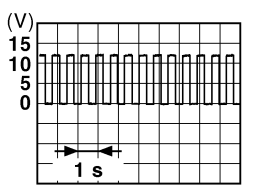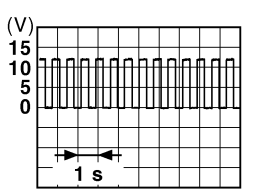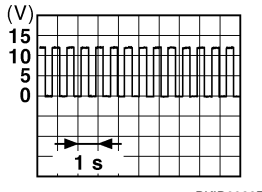Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
17 (W)	Ground	Turn signal RH (Front)	Output	Ignition switch ON	Turn signal switch OFF	0 V
				Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKID0926E</p>	
18 (BG)	Ground	Turn signal LH (Front)	Output	Ignition switch ON	Turn signal switch OFF	0 V
				Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKID0926E</p>	
19 (V)	Ground	Interior room lamp control	Output	Interior room lamp	OFF	12 V
				ON	0 V	
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
				Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKID0926E</p>	
23 (LG)	Ground	Trunk lid open	Output	Trunk lid	OPEN (Trunk lid opener actuator is activated)	12 V
				Other than OPEN (Trunk lid opener actuator is not activated)	0 V	
25 (Y)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
				Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKID0926E</p>	
30 (P)	Ground	Trunk room lamp	Output	Trunk room lamp	ON	0 V
				OFF	12 V	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

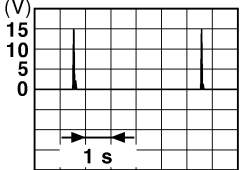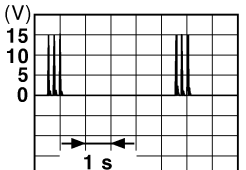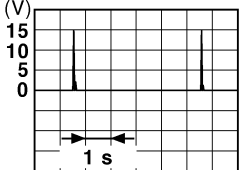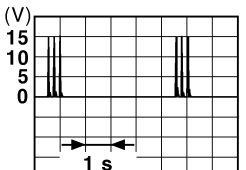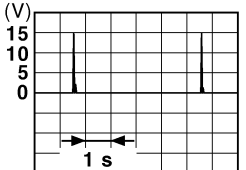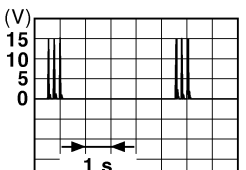Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
34 (SB)	Ground	Trunk room antenna (-)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
35 (V)	Ground	Trunk room antenna (+)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
38 (B)	Ground	Rear bumper antenna (-)	Output	When the trunk lid opener request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>





A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >






[XENON TYPE]

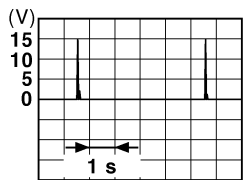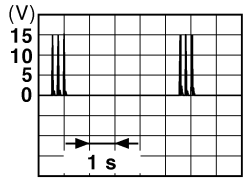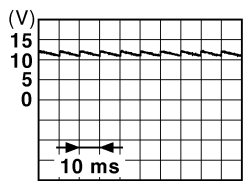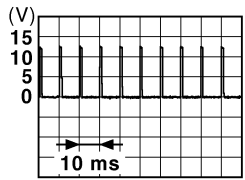Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
39 (W)	Ground	Rear bumper antenna (+)	Output	When the trunk lid opener request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>	
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	12 V
					ON	0 V
50 (BG)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (Trunk lid is closed)	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					ON (Trunk lid is opened)	0 V
52 (R)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position	12 V
					When selector lever is not in P or N position	0 V
60 (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
61 (SB)	Ground	Trunk lid opener request switch	Input	Trunk lid opener request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
64 (G)	Ground	Intelligent Key warning buzzer (Engine room)	Output	Intelligent Key warning buzzer (Engine room)	Sounding	0 V
					Not sounding	12 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

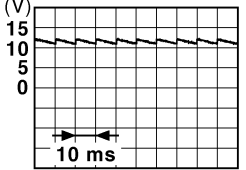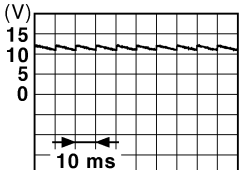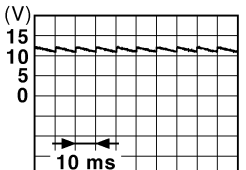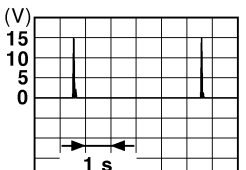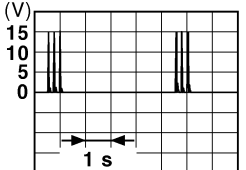Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
67 (GR)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0 V
				Trunk lid opener switch	Not pressed	 <p style="text-align: right; font-size: small;">JPMA0011GB</p>
68 (BG)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (When rear RH door closes)	 <p style="text-align: right; font-size: small;">JPMA0011GB</p>
				Rear RH door switch	ON (When rear RH door opens)	0 V
69 (L)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (When rear LH door closes)	 <p style="text-align: right; font-size: small;">JPMA0011GB</p>
				Rear LH door switch	ON (When rear LH door opens)	0 V
72 (R)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch	OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch	ON	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>







A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[XENON TYPE]

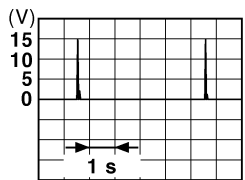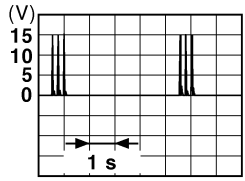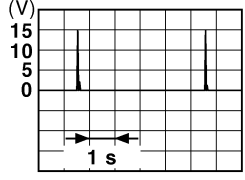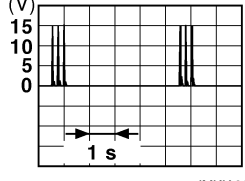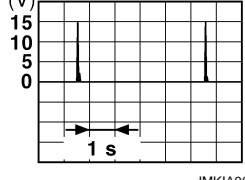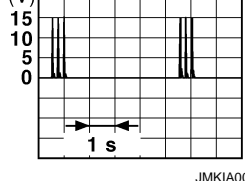Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
73 (G)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment  <small>JMKIA0062GB</small>
				When Intelligent Key is not in the passenger compart- ment  <small>JMKIA0063GB</small>	
74 (SB)	Ground	Passenger door an- tenna (-)	Output	When the pas- senger door re- quest switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small>
				When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small>	
75 (BR)	Ground	Passenger door an- tenna (+)	Output	When the pas- senger door re- quest switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small>
				When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small>	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

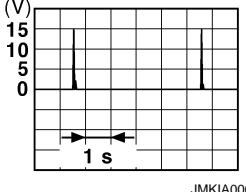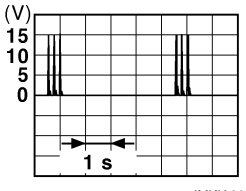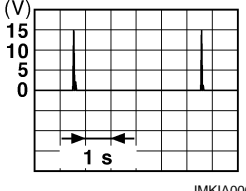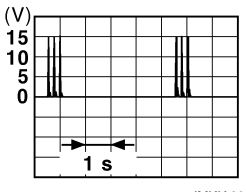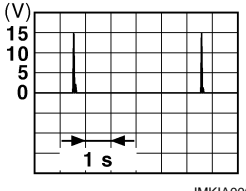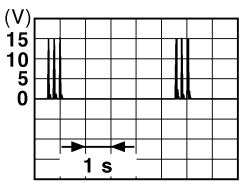Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
76 (V)	Ground	Driver door antenna (-)	Output	When the driver door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area 
				When Intelligent Key is not in the antenna detection area	
77 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area 
				When Intelligent Key is not in the antenna detection area	
78 (Y)	Ground	Room antenna 1 (-) (Instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment 
				When Intelligent Key is not in the passenger compartment	





A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



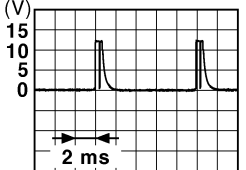
[XENON TYPE]

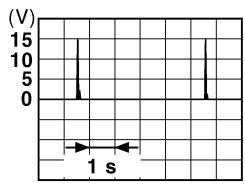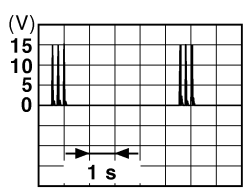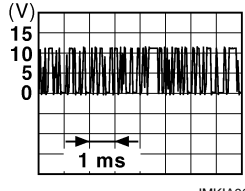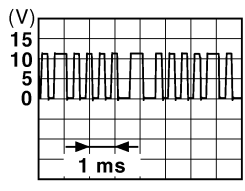Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
79 (BR)	Ground	Room antenna 1 (+) (Instrument panel)	Output	Ignition switch OFF		
				When Intelligent Key is not in the passenger compart- ment		
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	
82 (SB)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
				ON		12 V
83 (Y)	Ground	Remote keyless entry receiver communica- tion	Input/ Output	During waiting		
				When operating either button on the Intelli- gent Key		

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

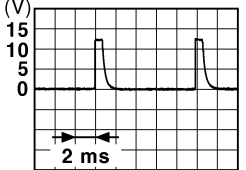Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
87 (Y)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper volume dial 4)	 <p style="text-align: right; margin-right: 50px;">1.4 V</p>
				Combination switch	Front fog lamp switch ON (Wiper volume dial 4)	 <p style="text-align: right; margin-right: 50px;">1.3 V</p>
				Combination switch	Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 6 • Wiper volume dial 7 	 <p style="text-align: right; margin-right: 50px;">1.3 V</p>


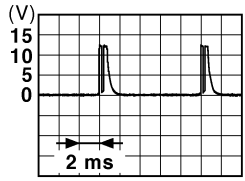
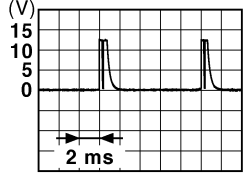
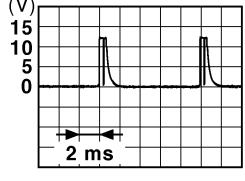
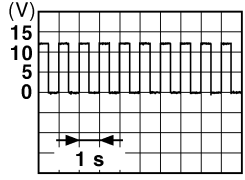
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



[XENON TYPE]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
88 (BG)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper volume dial 4)	 <small>JPMIA0041GB</small> 1.4 V
				Lighting switch HI (Wiper volume dial 4)	 <small>JPMIA0036GB</small> 1.3 V	
				Lighting switch 2ND (Wiper volume dial 4)	 <small>JPMIA0037GB</small> 1.3 V	
				Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper volume dial 1 • Wiper volume dial 2 • Wiper volume dial 3 	 <small>JPMIA0040GB</small> 1.3 V	
90 (P)	Ground	CAN-L	Input/ Output	—	—	
91 (L)	Ground	CAN-H	Input/ Output	—	—	
92 (LG)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	12 V
				Blinking	 <small>JPMIA0015GB</small> 6.5 V	
93 (GR)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
				ON	0 V	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

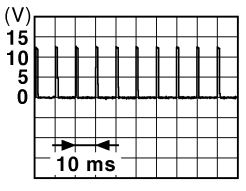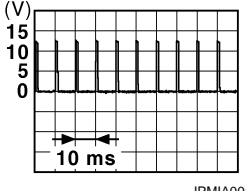Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
95 (BG)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	12 V
96 (GR)	Ground	A/T shift selector (Detention switch) power supply	Output	—		12 V
99 (R)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	12 V
100 (Y)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: center;">1.0 V</p>
101 (P)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: center;">1.0 V</p>
102 (BG)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
103 (P)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		12 V




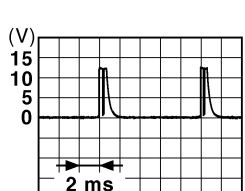
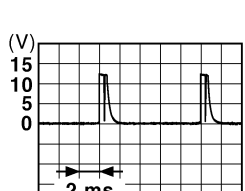
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



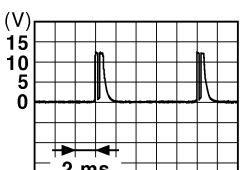
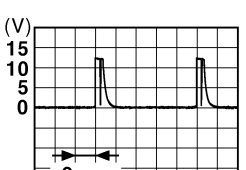
[XENON TYPE]

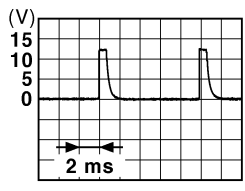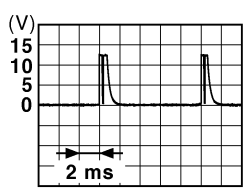Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
107 (LG)	Ground	Combination switch INPUT 1	Input	All switches OFF	 1.4 V
				Turn signal switch LH	 1.3 V
				Turn signal switch RH	 1.3 V
				Front wiper switch LO	 1.3 V
				Front washer switch ON	 1.3 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

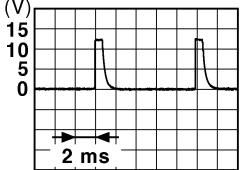Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p style="font-size: small;">JPMA0041GB</p> <p>1.4 V</p> </div> </div>
				Lighting switch AUTO (Wiper volume dial 4)	<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p style="font-size: small;">JPMA0038GB</p> <p>1.3 V</p> </div> </div>
				Lighting switch 1ST (Wiper volume dial 4)	<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p style="font-size: small;">JPMA0036GB</p> <p>1.3 V</p> </div> </div>
				Any of the conditions below with all switches OFF	<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p style="font-size: small;">JPMA0039GB</p> <p>1.3 V</p> </div> </div>







A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




[XENON TYPE]

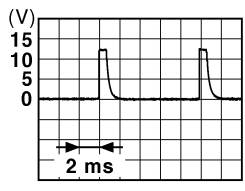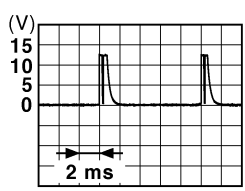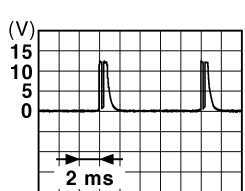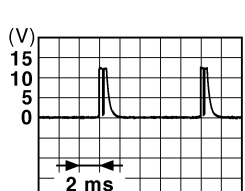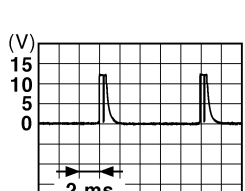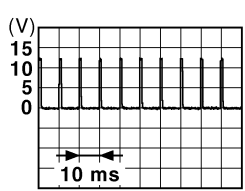Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (W)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper volume dial 4)	All switches OFF	 <small>JPMIA0041GB</small> 1.4 V
					Lighting switch PASS	 <small>JPMIA0037GB</small> 1.3 V
					Lighting switch 2ND	 <small>JPMIA0036GB</small> 1.3 V
					Front wiper switch INT/ AUTO	 <small>JPMIA0038GB</small> 1.3 V
					Front wiper switch HI	 <small>JPMIA0040GB</small> 1.3 V
					ON	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	OFF	 <small>JPMIA0012GB</small> 1.1 V
				OFF	OFF	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]


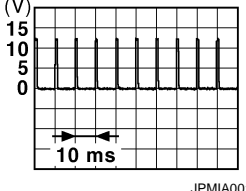
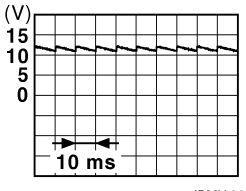
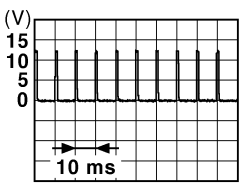
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
113 (BG)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
116 (SB)	Ground	Stop lamp switch 1	Input	—		Battery voltage
118 (BR)	Ground	Stop lamp switch 2 (Without ICC)	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is depressed)	Battery voltage
		Stop lamp switch 2 (With ICC)		Stop lamp switch OFF (Brake pedal is not depressed) and ICC brake hold relay OFF		0 V
				Stop lamp switch ON (Brake pedal is depressed) or ICC brake hold relay ON		Battery voltage
119 (SB)	Ground	Front door lock assembly driver side (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	 1.1 V
					UNLOCK status (Unlock switch sensor ON)	0 V
121 (SB)	Ground	Key slot switch	Input	When the Intelligent Key is inserted into key slot		12 V
				When the Intelligent Key is not inserted into key slot		0 V
123 (V)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
124 (R)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	 11.8 V
					ON (Door open)	0 V
129 (BG)	Ground	Trunk lid opener cancel switch	Input	Trunk lid opener cancel switch	CANCEL	 1.1 V
					ON	0 V

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

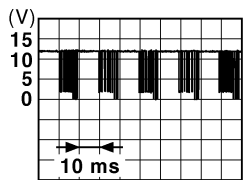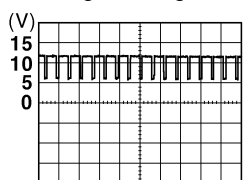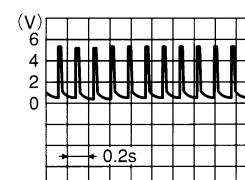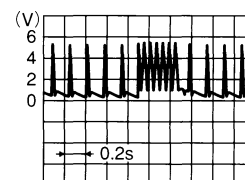



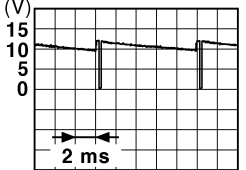
[XENON TYPE]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
132 (V)	Ground	Power window switch communication	Input/ Output	Ignition switch ON	 10.2 V
				Ignition switch OFF or ACC	12 V
133 (L)	Ground	Push-button ignition switch illumination	Output	ON (Tail lamps OFF)	9.5 V
				ON (Tail lamps ON)	<p style="text-align: center;">NOTE: The pulse width of this wave is varied by the illumination brightening/dimming level.</p>  JPMIA0159GB
				OFF	0 V
134 (LG)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF
				ON	Battery voltage
137 (BG)	Ground	Receiver and sensor ground	Input	Ignition switch ON	0 V
138 (V)	Ground	Receiver and sensor power supply	Output	Ignition switch	OFF
				ACC or ON	5.0 V
139 (L)	Ground	Tire pressure receiver communication	Input/ Output	Ignition switch ON	 OCC3881D
				When receiving the signal from the transmitter	 OCC3880D
140 (B)	Ground	Selector lever P/N position	Input	Selector lever	P or N position
				Except P and N positions	12 V
				0 V	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

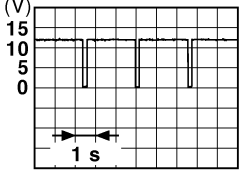[XENON TYPE]



Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
141 (W)	Ground	Security indicator lamp	Output	Security indicator lamp	ON	0 V
				Security indicator lamp	Blinking	 <p style="text-align: right; font-size: small;">JPMA0014GB</p>
142 (BR)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
				Combination switch (Wiper volume dial 4)	Lighting switch 1ST	 <p style="text-align: right; font-size: small;">JPMA0031GB</p>
				Combination switch (Wiper volume dial 4)	Lighting switch HI	
				Combination switch (Wiper volume dial 4)	Lighting switch 2ND	
Combination switch (Wiper volume dial 4)	Turn signal switch RH					
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper volume dial 4)	0 V
				Combination switch	Front wiper switch HI (Wiper volume dial 4)	 <p style="text-align: right; font-size: small;">JPMA0032GB</p>
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper volume dial 4)	0 V
				Combination switch	Front washer switch ON (Wiper volume dial 4)	 <p style="text-align: right; font-size: small;">JPMA0033GB</p>
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
				Combination switch (Wiper volume dial 4)	Front wiper switch INT/AUTO	 <p style="text-align: right; font-size: small;">JPMA0034GB</p>
				Combination switch (Wiper volume dial 4)	Lighting switch AUTO	

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

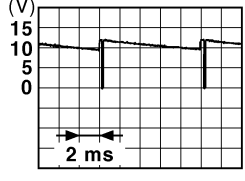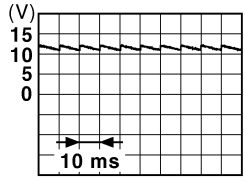Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper volume dial 4)	All switches OFF	0 V
					Front fog lamp switch ON	
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
150 (GR)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	 11.8 V
					ON (Door open)	0 V
151 (G)	Ground	Rear window defog- ger relay control	Output	Rear window defogger	Active	0 V
					Not activated	Battery voltage


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Wiring Diagram - BCM -

INFOID:0000000011421475

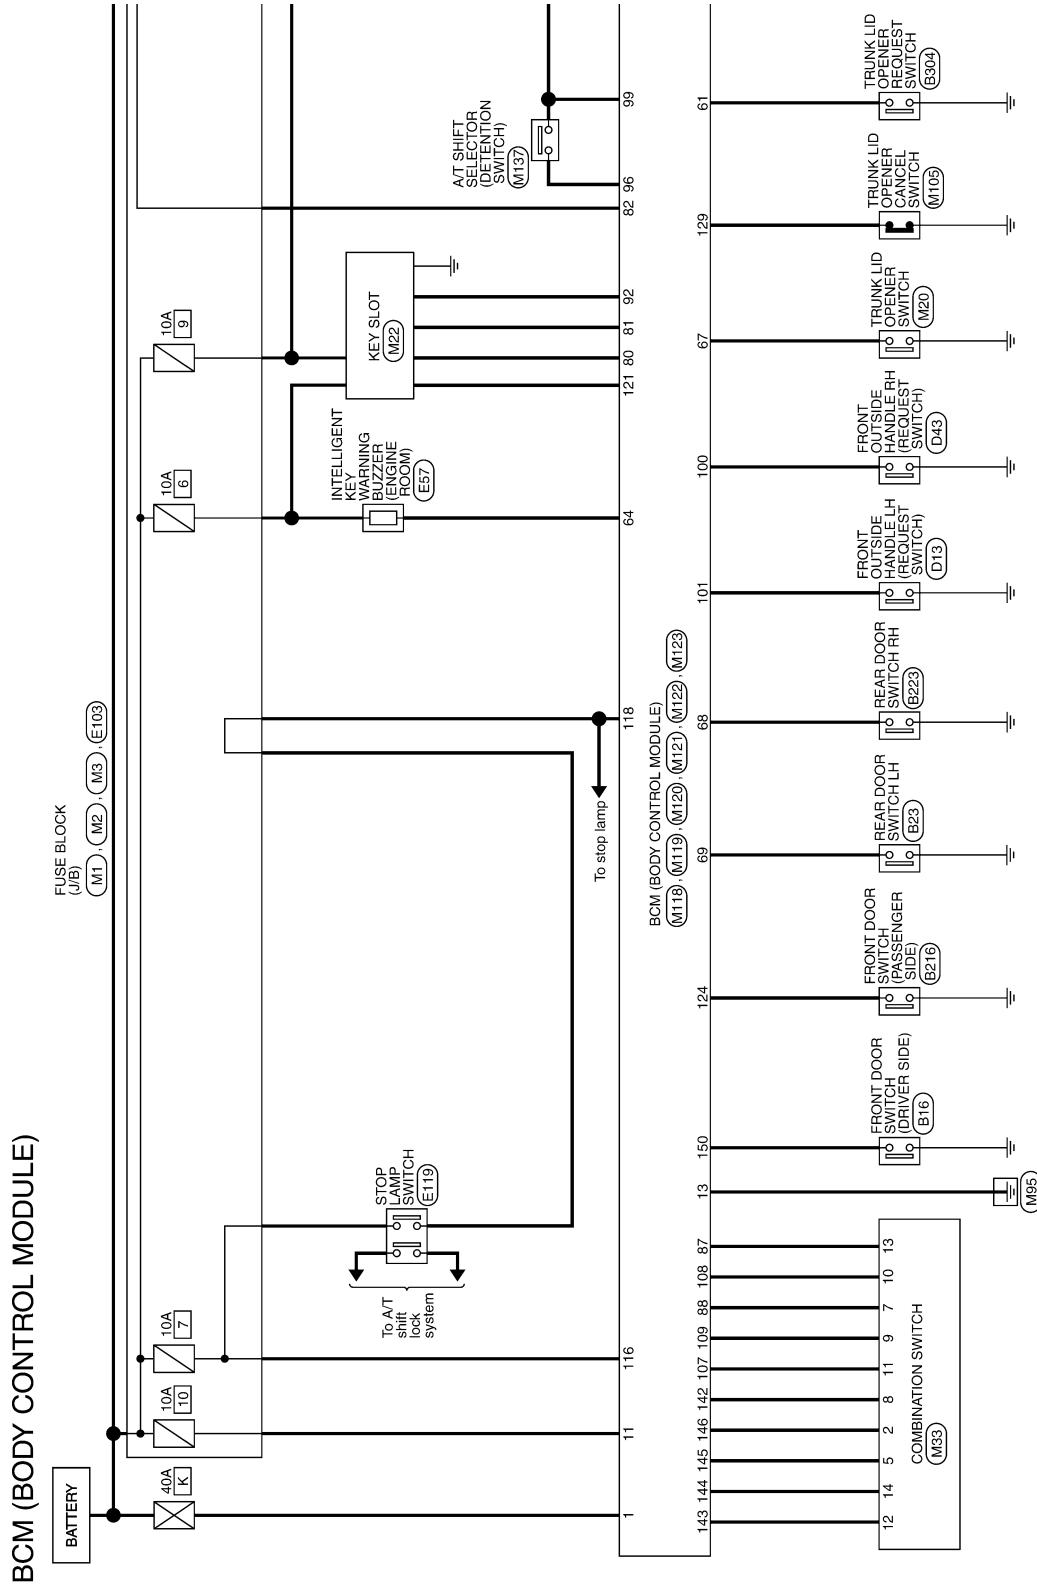

2014/06/09


JRMWF9358GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

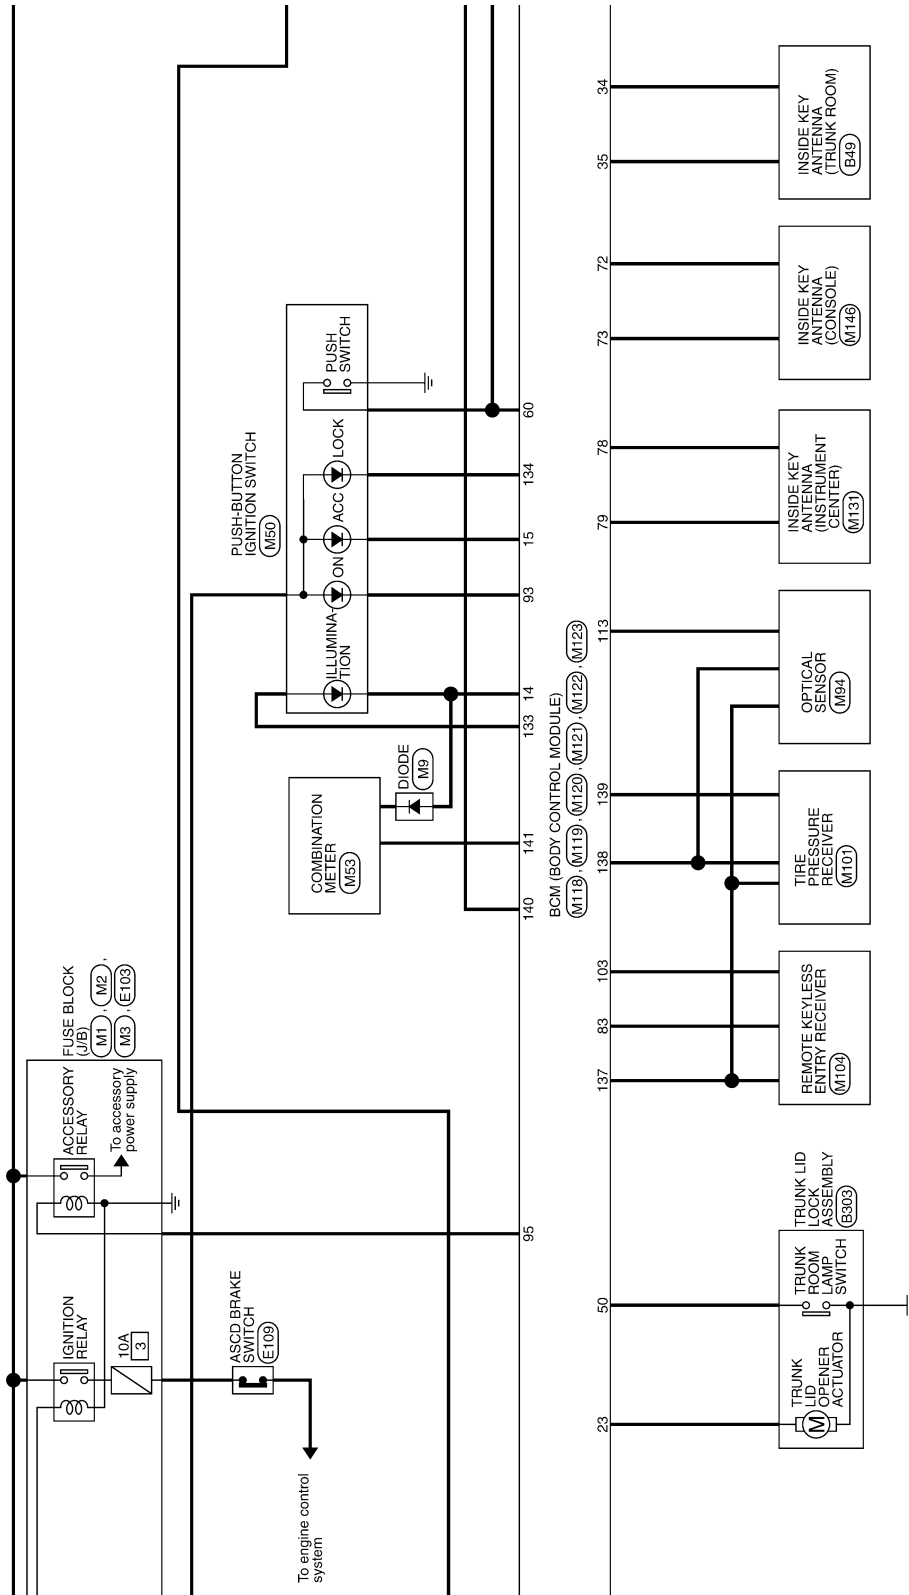


JRMWF9359GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

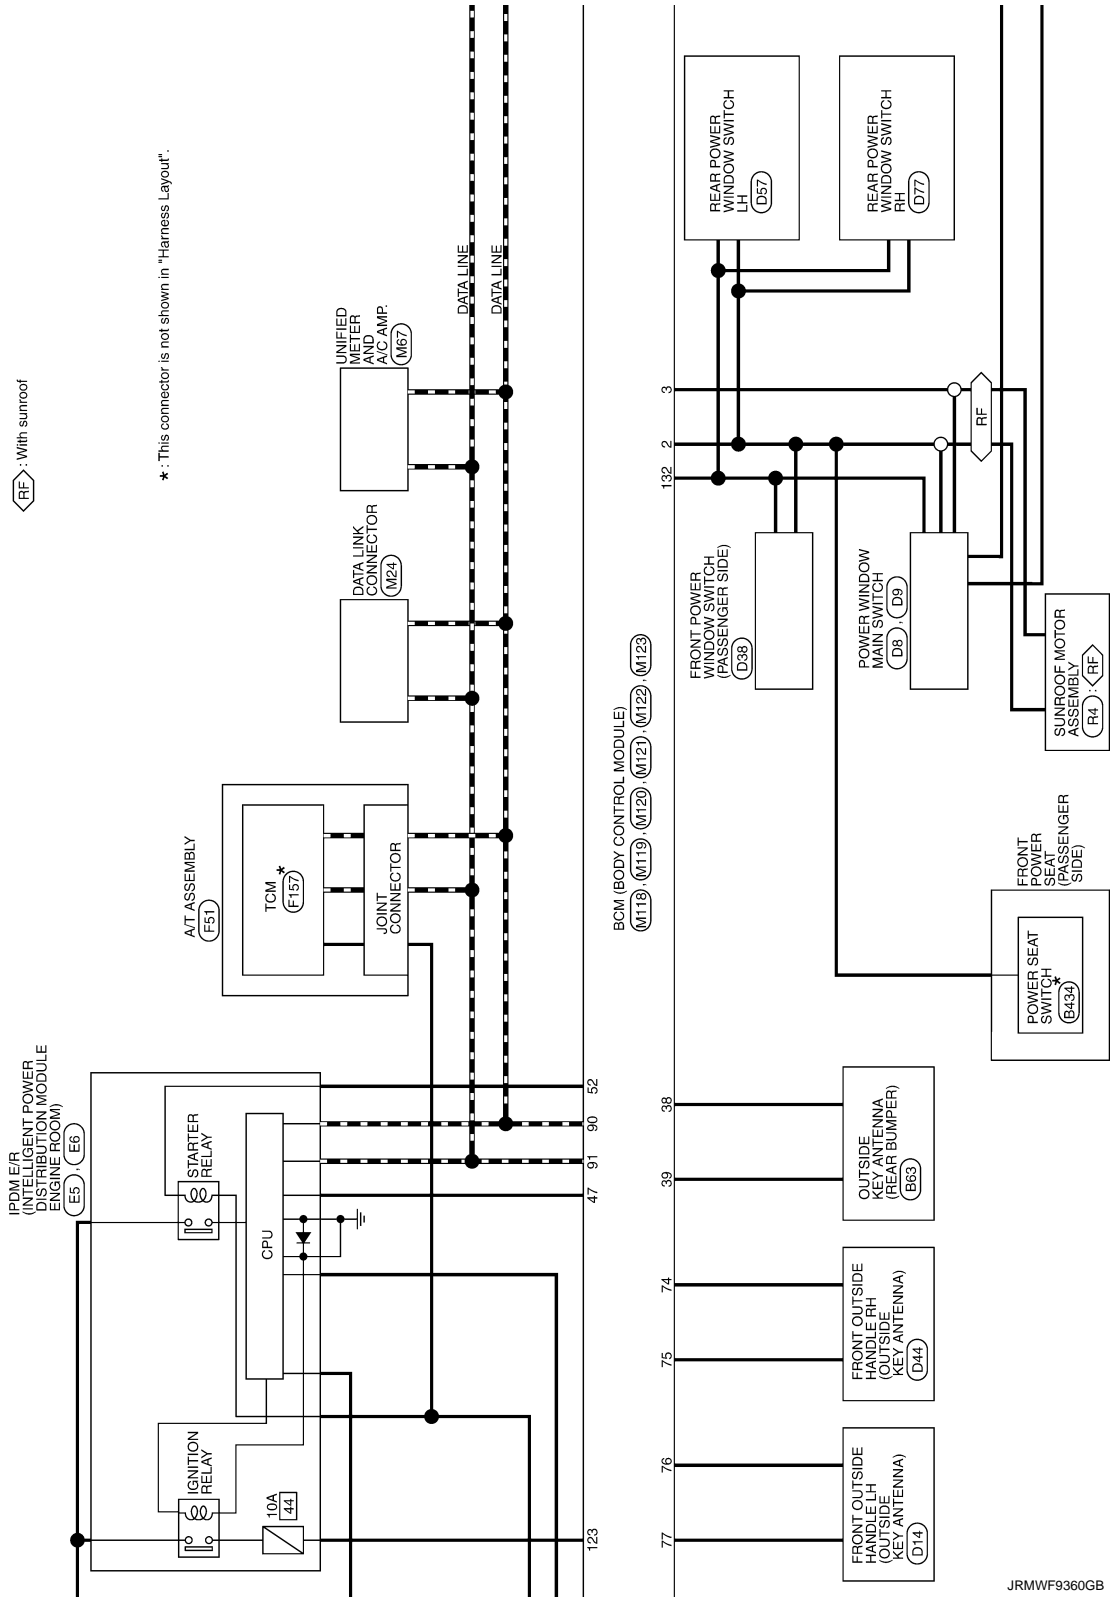

◁ RE ▷ : With sunroof

* : This connector is not shown in "Harness Layout".


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

JRMWF9360GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


[XENON TYPE]

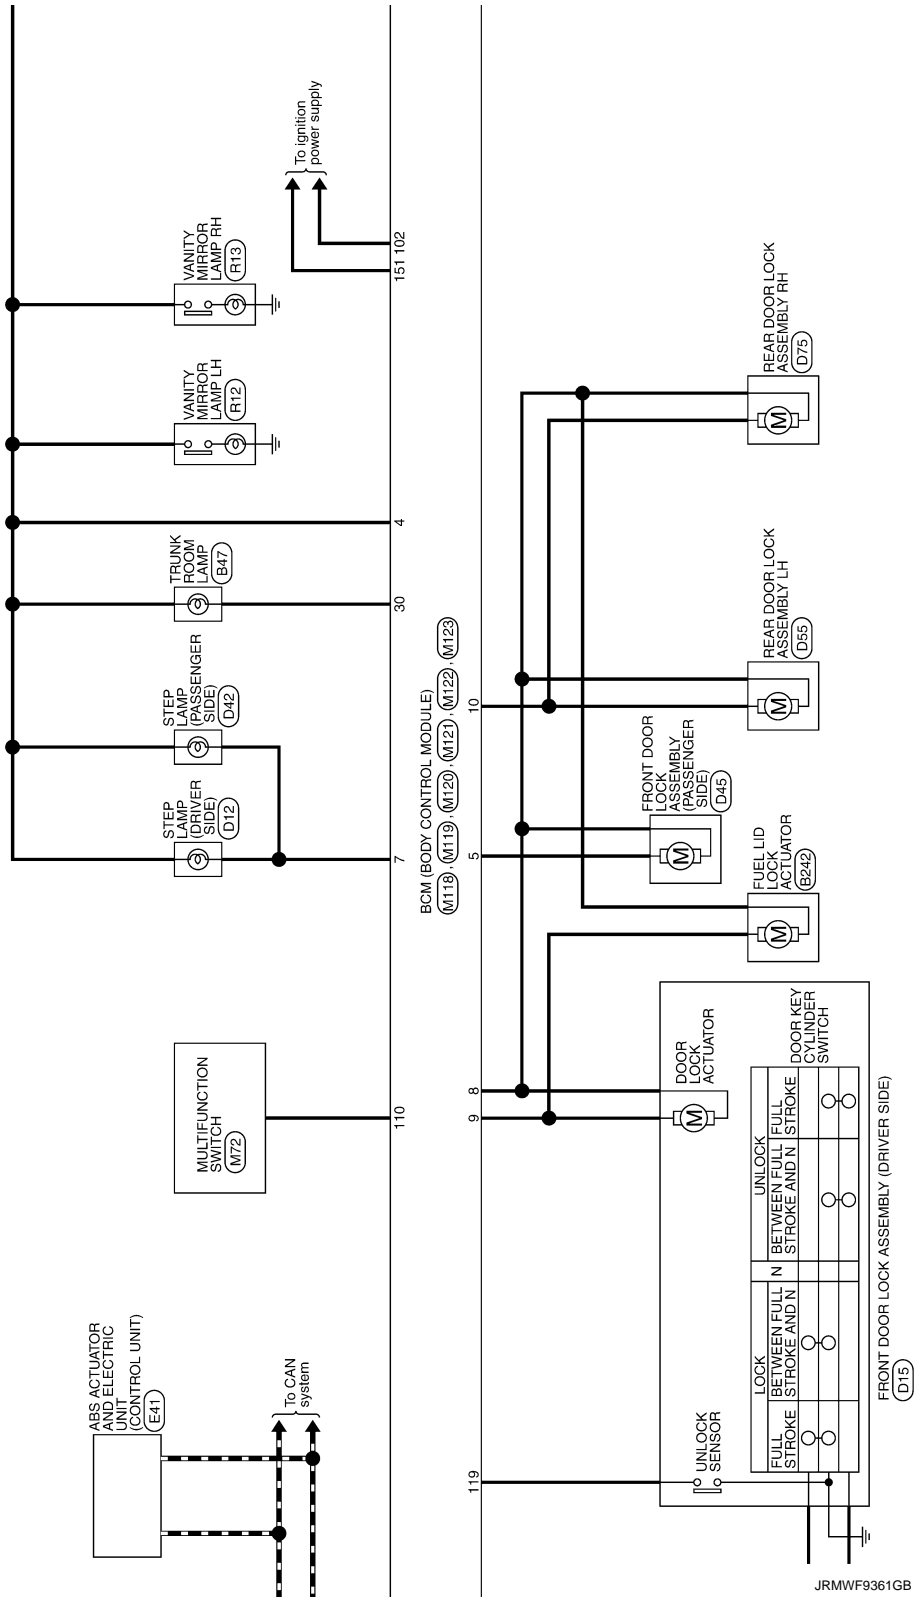

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

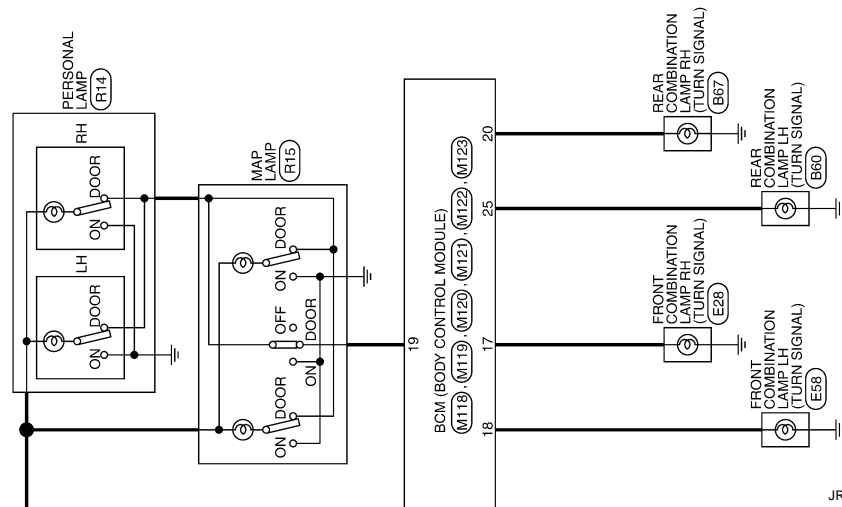

JRMWF9362GB

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]


BCM (BODY CONTROL MODULE)

Connector No.	B16
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	A03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR	

Connector No.	B23
Connector Name	REAR DOOR SWITCH LH
Connector Type	A03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
2	Y	

Connector No.	B47
Connector Name	TRUNK ROOM LAMP
Connector Type	S02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BC	
2	GR	

Connector No.	B49
Connector Name	INSIDE KEY ANTENNA (TRUNK ROOM)
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	
2	P	

Connector No.	B60
Connector Name	REAR COMBINATION LAMP LH
Connector Type	NS04FW-C5



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	
2	LG	
3	SB	
4	B	

Connector No.	B83
Connector Name	OUTSIDE KEY ANTENNA (REAR BUMPER)
Connector Type	RK02FGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	
2	R	

Connector No.	B87
Connector Name	REAR COMBINATION LAMP RH
Connector Type	NS04FW-C5




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	
2	LG	
3	V	
4	B	

Connector No.	B216
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	A03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	

Connector No.	B223
Connector Name	REAR DOOR SWITCH RH
Connector Type	A03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR	

Connector No.	B242
Connector Name	FUEL LID LOCK ACTUATOR
Connector Type	MM0FW-LG



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

BCM (BODY CONTROL MODULE)

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	Y	-

Connector No.	EC03
Connector Name	TRUNK LID LOCK ASSEMBLY
Connector Type	TB03FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-
3	G	-

Connector No.	EB04
Connector Name	TRUNK LID OPENER REQUEST SWITCH
Connector Type	TR02MBR-P



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	B424
Connector Name	POWER SEAT SWITCH
Connector Type	NS16PW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	G/Y	-
3	L/R	-
4	B	-
5	G/W	-
6	SB	-
7	V	-
8	W	-
9	L/R	-
10	L	-

Connector No.	DB
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16PW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
2	LG	-
4	V	-
6	Y	-
8	EG	-
10	SB	-
11	G	-
13	P	-
14	V	-
15	B	-

Connector No.	DB
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS02PW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
17	B	-
19	Y	-

Connector No.	D12
Connector Name	STEP LAMP (DRIVER SIDE)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	SB	-

Connector No.	D13
Connector Name	FRONT OUTSIDE HANDLE LH (REQUEST SWITCH)
Connector Type	RK02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	D14
Connector Name	FRONT OUTSIDE HANDLE LH (OUTSIDE KEY ANTENNA)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	V	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

BCM (BODY CONTROL MODULE)

Connector No.	D1'S
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type	EDFGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	L	-
3	L	-
4	B	-
5	Y	-
6	V	-

Connector No.	D38
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
8	L	-
9	G	-
10	Y	-
11	B	-
12	B	-
15	BG	-
16	V	-

Connector No.	D42
Connector Name	STEP LAMP (PASSENGER SIDE)
Connector Type	TR02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	RS	-
2	SB	-

Connector No.	D43
Connector Name	FRONT OUTSIDE HANDLE RH (REQUEST SWITCH)
Connector Type	RK02FL




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	D44
Connector Name	FRONT OUTSIDE HANDLE RH (OUTSIDE KEY ANTENNA)
Connector Type	RK02MGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	V	-

Connector No.	D45
Connector Name	FRONT DOOR LOCK ASSEMBLY (PASSENGER SIDE)
Connector Type	EDFGY-RS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	LG	-

Connector No.	D55
Connector Name	REAR DOOR LOCK ASSEMBLY LH
Connector Type	EDFGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	G	-

Connector No.	D57
Connector Name	REAR POWER WINDOW SWITCH-LH
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
3	BR	-
4	SB	-
8	W	-
9	L	-
10	W	-
11	B	-
12	GR	-
15	BG	-
16	V	-

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]


BCM (BODY CONTROL MODULE)

Connector No.	D75
Connector Name	REAR DOOR LOCK ASSEMBLY RH
Connector Type	ER8FDY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	LG	-

Connector No.	D77
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Type	NS18FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
3	BR	-
4	SB	-
8	W	-
9	L	-
10	W	-
11	B	-
12	GR	-
15	BG	-
16	Y	-

Connector No.	E5
Connector Name	INTELLIGENT KEY WARNING BUZZER (ENGINE ROOM)
Connector Type	TH88PW-CS12-MA-TV



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	GR	-
6	SB	-
7	P	-
12	B/W	-
16	LG	-
19	R	-
25	G	-
27	BG	-
28	L	-
30	GR	-
36	G	-

Connector No.	E5
Connector Name	INTELLIGENT KEY WARNING BUZZER (ENGINE ROOM)
Connector Type	TH88PW-RH



Terminal No.	Color Of Wire	Signal Name [Specification]
38	P	-
41	B/W	-
42	GR	-
43	G	-
44	LG	-
45	V	-


Connector No.	46
Connector Name	SB

Connector No.	E38
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS08FB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	B/W	-
5	R	-
6	V	-
7	BR	-
8	G	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AH24-LH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	GR	UBMR
3	BG	UBVR
4	P	GROUND
5	B/W	DS BR
6	B	DS BL
7	EG	DP BR
8	B	DP GR
9	W	DS PR
10	W	DS GR
11	V	DIAG-K
14	P	CAN-L

25	V	BUS-L
26	G	DP RL
27	GR	DP RL
28	G	DP RL
29	P	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CAN-H
45	B	BUS-H

Connector No.	E57
Connector Name	INTELLIGENT KEY WARNING BUZZER (ENGINE ROOM)
Connector Type	HK03FB-R



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
3	LG	-

Connector No.	E58
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS08FB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	B/W	-
5	R	-
6	V	-
7	BR	-
8	G	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

BCM (BODY CONTROL MODULE)

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1F	SB	-
2F	V	-
4F	G	-
8F	BR	-
9F	P	-

Connector No.	E109
Connector Name	ASD BRAKE SWITCH
Connector Type	ISZFL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	SB	-

Connector No.	E119
Connector Name	STOP LAMP SWITCH
Connector Type	MMHW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	G	-
3	C	-
4	V	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG-DGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	R	-
3	L	-
4	V	-
5	B	-
6	G	-
7	R	-
8	P	-
9	GR	-
10	B	-

Connector No.	F157
Connector Name	TCM
Connector Type	SP10FG




Terminal No.	Color Of Wire	Signal Name [Specification]
1	SHIELD	VGN
2	SHIELD	RAM
3	SHIELD	CAN-H
4	SHIELD	K-LINE
5	SHIELD	GROUND
6	SHIELD	VGN
7	SHIELD	REV LAMP RLY
8	SHIELD	CAN-L
9	SHIELD	STARTER RLY
10	SHIELD	GROUND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS08FW-M2




Terminal No.	Color Of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	Y	-
7A	R	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1B	SB	-
2B	G	-
3B	G	-
4B	RG	-
5B	RG	-
6B	Y	-
7B	R	-
8B	SB	-
9B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	LG	-
12C	G	-
6C	SB	-
7C	B	-
8C	BB	-

JRMWF9509GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

BCM (BODY CONTROL MODULE)

Connector No.	M19
Connector Name	DIODE
Connector Type	24335-C9900



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	R	-

Connector No.	M20
Connector Name	TRUNK LID OPENER SWITCH
Connector Type	T6045W




Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	B	-
3	LG	-
4	R	-

Connector No.	M22
Connector Name	KEY SLOT
Connector Type	TH12FH-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	BAT
2	GR	GLOCK
3	Y	ILL SAT
4	Y	ILL SAT
5	Y	ILL SAT
6	LG	ILL
7	B	GROUND
11	SB	KEY SWITCH SIGNAL

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW-P



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	V	-
8	G	-
14	SB	-
16	R	-

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	FR WASHER (-)
2	SB	OUTPUT 4
3	SB	OUTPUT 4
4	GR	GROUND
5	B	GROUND
6	B	INPUT 3
7	EG	INPUT 3
8	BR	OUTPUT 5
9	W	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	P	OUTPUT 1
13	Y	INPUT 5
14	G	OUTPUT 2

Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TROBEER



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	B	-
3	B	-
4	BR	-
5	LG	-
6	EG	-
7	GR	-
8	P	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	SABOUP



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	G	COMMUNICATION SIGNAL (WHEEL-ABS)
3	GR	COMMUNICATION SIGNAL (AMP-METER)
4	B	GROUND
5	B	GROUND
6	W	ALTERNATOR SIGNAL
7	LG	AIR BAG SIGNAL
10	W	SECURITY SIGNAL
15	B	GROUND
16	BR	METER CONTROL SWITCH GROUND
18	GR	ILL GND
19	B	ILL GND
20	R	ILL
21	G	IGNITION SIGNAL
22	B	GROUND
24	BR	COMMUNICATION SIGNAL (IG-AMPS)
25	P	COMMUNICATION SIGNAL (SE-ILL-LED)
26	R	VEHICLE SPEED SIGNAL (AP-ILL-LED)
27	P	PARKING BRAKE SWITCH SIGNAL
28	SB	BRAKE FLUID LEVEL SWITCH
29	P	SEAT BELT BUCKLE SW SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
33	R	ILLUMINATION CONTROL SIGNAL
36	LG	SELECT SWITCH SIGNAL
37	Y	ENTER SWITCH SIGNAL
38	G	TRIP A/B RESET SWITCH SIGNAL
39	P	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	EG	ILLUMINATION CONTROL SWITCH SIGNAL (+)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]


BCM (BODY CONTROL MODULE)

Connector No.	M67
Connector Name	UNIFIED METER AND A.C. AMP.
Connector Type	TK32FW-N4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	A/C POWER SUPPLY
2	BR	FUEL LEVEL SENSOR SIGNAL
3	BR	INTAKE SENSOR SIGNAL
4	LG	IN-VEHICLE SENSOR SIGNAL
5	V	AMBIENT SENSOR SIGNAL
6	Y	SUNLOAD SENSOR SIGNAL
7	W	IGNITION POWER SUPPLY
8	SB	BATTERY POWER SUPPLY
9	B	GROUND
10	L	CAN-H
11	LG	BRAKE FLUID LEVEL SWITCH
12	Y	FUEL LEVEL SENSOR GROUND
13	GR	INTAKE SENSOR GROUND
14	W	IN-VEHICLE SENSOR GROUND
15	SB	AMBIENT SENSOR GROUND
16	SB	SUNLOAD SENSOR GROUND
17	SB	ECV SIGNAL
18	P	A/C LAN SIGNAL
19	GR	EACH DOOR MOTOR POWER SUPPLY
20	GR	GROUND
21	P	CAN-L

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH16FW-N4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	P	LC
3	EG	ILL
4	B	ILL CONT
5	SB	AV COMM (H)
6	LG	AV COMM (L)
7	BR	SW GND
8	V	DISK EJECT SIGNAL
9	G	HAZARD ON

Connector No.	M64
Connector Name	OPTICAL SENSOR
Connector Type	TK63PW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	POWER
2	EG	OUTPUT
3	B	GROUND

Connector No.	M101
Connector Name	TIRE PRESSURE RECEIVER
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	GROUND
2	Y	SENSOR
3	Y	BATTERY
4	Y	BATTERY

Connector No.	M104
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	JAB04FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	EG	GROUND
2	Y	SIGNAL OUTPUT
3	P	BATTERY
4	P	BATTERY

Connector No.	M105
Connector Name	TRUNK LID OPENER CANCEL SWITCH
Connector Type	S02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	---
2	EG	---
3	B	---

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT.(F/L)
2	Y	POWER WINDOW POWER SUPPLY (BAT)
3	B	POWER WINDOW POWER SUPPLY (RWP)

JRMWF9511GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]


BCM (BODY CONTROL MODULE)

Connector No.	MT19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16PW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	SB	PASSENGER DOOR UNLOCK OUTPUT
7	SB	TRUNK LID LOCK OUTPUT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	P	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	P	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GROUND
14	W	PUSH-BUTTON IGNITION SW ILL GND
15	EG	ACC IND
17	W	TURN SIGNAL RH (FRONT)
18	EG	TURN SIGNAL LH (FRONT)
19	V	INT ROOM LAMP CONT

Connector No.	MT20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12PW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
20	LG	TURN SIGNAL RH (REAR)
23	C	TRUNK LID OPEN OUTPUT
25	Y	TURN SIGNAL LH (REAR)
30	P	TRUNK ROOM LAMP CONT

Connector No.	MT21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH4PFC-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
24	SB	TRUNK ROOM ANT-
25	SB	TRUNK ROOM ANT+
26	S	REAR DOOR ANT-
27	W	REAR BUMPER ANT-
28	Y	IGN RELAY (UPDM E/R) CONT
29	Y	TRUNK LID OPERATOR SW
30	EG	STARTER RELAY CONT
32	R	PUSH SW
60	BR	TRUNK LID OPENER REQUEST SW
61	SB	I-KEY WARN BLIZZER (ENG ROOM)
64	G	TRUNK LID OPENER SW
67	GR	REAR RH DOOR SW
68	EG	REAR LH DOOR SW
69	L	REAR LH DOOR SW

Connector No.	MT22
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH4PFB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	C	ROOM ANT -
73	C	ROOM ANT +
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT 1-

Terminal No.	Color Of Wire	Signal Name [Specification]
79	BR	ROOM ANT 1+
80	GR	MIS ANT AMP
81	W	IGN RELAY (E/R) CONT
82	SB	KEYLESS ENTRY RECEIVER COMM
83	Y	KEYLESS ENTRY RECEIVER COMM
87	Y	COMBI SW INPUT 5
88	EG	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL CONT
93	GR	ON IND
95	EG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P
100	Y	PASSENGER DOOR REQUEST SW
101	Y	DRIVER DOOR REQUEST SW
102	EG	BLUETOOTH REQUEST SW
103	P	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	W	COMBI SW INPUT 2
110	G	HAZARD SW

Connector No.	MT23
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH4PFC-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
113	BG	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	BR	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	SB	KEY SLOT SW
122	Y	TRUNK LID OPEN SW
124	EG	PASSENGER DOOR CANCEL SW
132	V	POWER WINDOW SW COMM
133	L	PUSH-BUTTON IGNITION SW ILL POWER
134	LG	LOCK IND
137	BG	RECEIVER / SENSOR GND


Terminal No.	Color Of Wire	Signal Name [Specification]
138	V	RECEIVER / SENSOR POWER SUPPLY
139	L	TIRE PRESSURE MONITOR RECEIVER COMM
140	B	SECURITY LAMP CONT
141	W	SECURITY LAMP CONT
142	BR	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFROGGER RELAY CONT

Connector No.	MT31
Connector Name	INBEDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RN02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	Y	-

Connector No.	MT37
Connector Name	A/T SHIFT SELECTOR
Connector Type	TH12FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	L	-
3	L	-
4	B	-
5	G	-

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

EXL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

BCM (BODY CONTROL MODULE)

7	Y	-
8	G	-
9	B	-
10	GR	-
11	R	-

Connector No.	M14E
Connector Name	INSIDE KEY ANTENNA (CONSOLE)
Connector Type	PROZFSY



Terminal No.	1	2
Color Of Wire	G	R
Signal Name [Specification]	-	-

Connector No.	R4
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Type	YEA1MFSY



Terminal No.	1	5	7	8	10
Color Of Wire	GR	P	BR	Y	G
Signal Name [Specification]	SW-BIT 1	SW-BIT 1	SW-BIT 1	SPEED SENSOR (SP) THREE (3GN)	GROUND

Connector No.	RI2
Connector Name	VANITY MIRROR LAMP LH
Connector Type	MCA0ZFW



Terminal No.	1	2
Color Of Wire	B	R
Signal Name [Specification]	-	-

Connector No.	RI3
Connector Name	VANITY MIRROR LAMP RH
Connector Type	MCA0ZFW




Terminal No.	1	2
Color Of Wire	B	R
Signal Name [Specification]	-	-

Connector No.	RI4
Connector Name	PERSONAL LAMP
Connector Type	TH04FW-NH



Terminal No.	1	2	3
Color Of Wire	R	B	Y
Signal Name [Specification]	-	-	-

Connector No.	RI5
Connector Name	MAP LAMP
Connector Type	TR0BFCY



Terminal No.	1	2	3	4	5	6
Color Of Wire	R	Y	Y	B	SHIELD	B
Signal Name [Specification]	-	-	-	-	-	-

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JRMWF9513GB

INFOID:0000000011421476

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> Starter control relay signal Starter relay status signal
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> Starter motor relay control signal Starter relay status signal (CAN)
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> IGN relay (IPDM E/R) control signal: OFF (12 V) Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Power position changes to ACC Receives engine status signal (CAN)
B2617: BCM	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization

DTC Inspection Priority Chart

INFOID:000000011421477

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> U1000: CAN COMM U1010: CONTROL UNIT(CAN)
3	<ul style="list-style-type: none"> B2190: NATS ANTENNA AMP B2191: DIFFERENCE OF KEY B2192: ID DISCORD BCM-ECM B2193: CHAIN OF BCM-ECM B2195: ANTI-SCANNING

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Priority	DTC
4	<ul style="list-style-type: none"> • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP/CLUTCH SW • B2605: PNP/CLUTCH SW • B2608: STARTER RELAY • B260A: IGNITION RELAY • B260F: ENG STATE SIG LOST • B2614: BCM • B2615: BCM • B2616: BCM • B2617: BCM • B2618: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26EA: KEY REGISTRATION • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1734: CONTROL UNIT
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:000000011421478

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [EXL-22. "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM	—	—	—	—	BCS-36
U1010: CONTROL UNIT(CAN)	—	—	—	—	BCS-37
U0415: VEHICLE SPEED	—	—	—	—	BCS-38
B2190: NATS ANTENNA AMP	×	—	—	—	SEC-43

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference
B2191: DIFFERENCE OF KEY	×	—	—	—	SEC-46
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-47
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-49
B2195: ANTI-SCANNING	×	—	—	—	SEC-50
B2553: IGNITION RELAY	—	×	—	—	PCS-49
B2555: STOP LAMP	—	×	—	—	SEC-51
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-53
B2557: VEHICLE SPEED	×	×	×	—	SEC-55
B2560: STARTER CONT RELAY	×	×	×	—	SEC-56
B2562: LOW VOLTAGE	—	×	—	—	BCS-39
B2601: SHIFT POSITION	×	×	×	—	SEC-57
B2602: SHIFT POSITION	×	×	×	—	SEC-60
B2603: SHIFT POSI STATUS	×	×	×	—	SEC-63
B2604: PNP/CLUTCH SW	×	×	×	—	SEC-66
B2605: PNP/CLUTCH SW	×	×	×	—	SEC-68
B2608: STARTER RELAY	×	×	×	—	SEC-70
B260A: IGNITION RELAY	×	×	×	—	PCS-51
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-72
B2614: BCM	—	×	×	—	PCS-53
B2615: BCM	—	×	×	—	PCS-55
B2616: BCM	—	×	×	—	PCS-57
B2617: BCM	×	×	×	—	SEC-74
B2618: BCM	×	×	×	—	PCS-59
B261A: PUSH-BTN IGN SW	—	×	×	—	PCS-60
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	SEC-76
B2621: INSIDE ANTENNA	—	×	—	—	DLK-59
B2622: INSIDE ANTENNA	—	×	—	—	DLK-61
B2623: INSIDE ANTENNA	—	×	—	—	DLK-63
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	SEC-73
C1704: LOW PRESSURE FL	—	—	—	×	WT-25
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	WT-27
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-30
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-31
C1734: CONTROL UNIT	—	—	—	×	WT-32

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000011421482

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off
	Ignition switch ON	Selector lever in P or N position	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]


Monitor Item	Condition	Value/Status
ST/INHI RLY	Ignition switch ON	Off
	At engine cranking	INHI ON → ST ON
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN
DETENT SW	Ignition switch ON <ul style="list-style-type: none"> • Press the selector button with selector lever in P position • Selector lever in any position other than P 	Off
	Release the selector button with selector lever in P position	On
S/L RLY -REQ	NOTE: The item is indicated, but not monitored.	Off
S/L STATE	NOTE: The item is indicated, but not monitored.	UNLOCK
DTRL REQ	NOTE: The item is indicated, but not monitored.	Off
OIL P SW	Ignition switch OFF, ACC or engine running	Open
	Ignition switch ON	Close
HOOD SW	Close the hood	Off
	Open the hood	On
HL WASHER REQ	NOTE: The item is indicated, but not monitored.	Off
THFT HRN REQ	Not operation	Off
	<ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	On
HORN CHIRP	Not operating	Off
	Door locking with Intelligent Key (horn chirp mode)	On
CRNRNG LMP REQ	NOTE: The item is indicated, but not monitored.	Off

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

TERMINAL LAYOUT

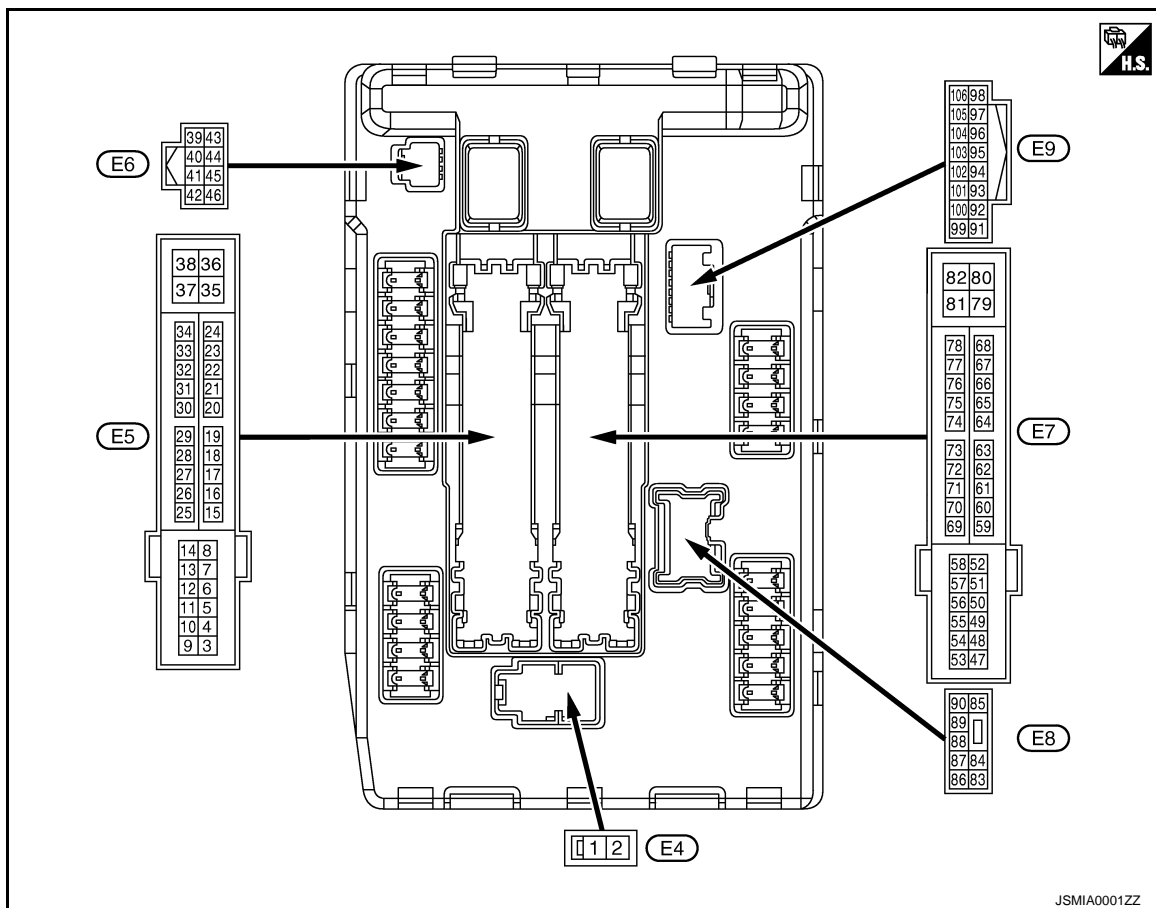

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (V)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch LO	Battery voltage
5 (L)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch HI	Battery voltage
7 (P)	Ground	Tail, license plate lamps & interior lamps	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
13 (Y)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		Battery voltage
16 (LG)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
19 (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
25 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
27 (BG)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC	Battery voltage	
				Ignition switch ON	0 V	
28 (L)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch	0 V	
				Release the push-button ignition switch	Battery voltage	
30 (GR)	Ground	Starter relay control	Input	Selector lever in any position other than P or N (Ignition switch ON)	0 V	
				Selector lever P or N (Ignition switch ON)	Battery voltage	
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage	
39 (P)	—	CAN-L	Input/ Output	—	—	
40 (L)	—	CAN-H	Input/ Output	—	—	
41 (B/W)	Ground	Ground	—	Ignition switch ON	0 V	
42 (GR)	Ground	Cooling fan relay control	Input	Ignition switch OFF or ACC	0 V	
				Ignition switch ON	0.7 V	
43 (G)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	<ul style="list-style-type: none"> • Press the selector button (selector lever P) • Selector lever in any position other than P 	Battery voltage
					Release the selector button (selector lever P)	0 V
44 (LG)	Ground	Horn relay control	Input	The horn is deactivated	Battery voltage	
				The horn is activated	0 V	
45 (V)	Ground	Anti theft horn relay control	Input	The horn is deactivated	Battery voltage	
				The horn is activated	0 V	
46 (SB)	Ground	Starter relay control	Input	Selector lever in any position other than P or N (Ignition switch ON)	0 V	
				Selector lever P or N (Ignition switch ON)	Battery voltage	
				Release the clutch pedal	0 V	
				Depress the clutch pedal	Battery voltage	
48 (L)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage
49 (BG)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V	
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage	

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >




[XENON TYPE]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
51 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	A
				Ignition switch ON	Battery voltage	B
53 (W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V	C
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage	D
54 (P)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V	E
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage	F
55 (SB)	Ground	ECM power supply	Output	Ignition switch OFF	Battery voltage	G
56 (BR)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	H
				Ignition switch ON	Battery voltage	
57 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	I
				Ignition switch ON	Battery voltage	
58 (GR)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	J
				Ignition switch ON	Battery voltage	
69 (BR)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage	K
				<ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	0 - 1.5 V	
70 (BG)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF	0 - 1.0 V ↓ Battery voltage ↓ 0 V	EXL
				Ignition switch ON	0 - 1.0 V	M
74 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	N
				Ignition switch ON	Battery voltage	
75 (SB)	Ground	Oil pressure switch	Input	Ignition switch ON	0 V	O
				Engine running	Battery voltage	

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

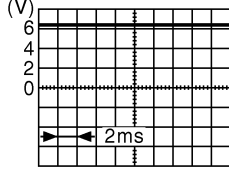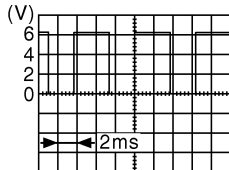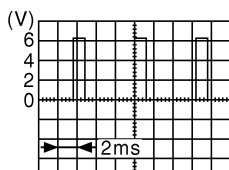Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
76 (Y)	Ground	Power generation command signal	Output	Ignition switch ON		 6.3 V
				40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 3.8 V
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 1.4 V
77 (R)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> • Approximately 1 second after turning the ignition switch ON • Engine running 		0 - 1.0 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
80 (W)	Ground	Starter motor	Output	At engine cranking		Battery voltage
83 (R)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
84 (V)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
86 (W)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND	Front fog lamp switch OFF	0 V
					Front fog lamp switch ON	Battery voltage
87 (L)	Ground	Front fog lamp (LH)	Output	Lighting switch 2ND	Front fog lamp switch OFF	0 V
					Front fog lamp switch ON	Battery voltage
88 (G)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage
89 (BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS 	
90 (P)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS 	

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
91 (G)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
92 (BG)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
97 (V)	Ground	Cooling fan control	Output	Engine idling		0 - 5 V
104 (LG)	Ground	Hood switch	Input	Close the hood		Battery voltage
				Open the hood		0 V

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Wiring Diagram - IPDM E/R -

INFOID:000000011421483

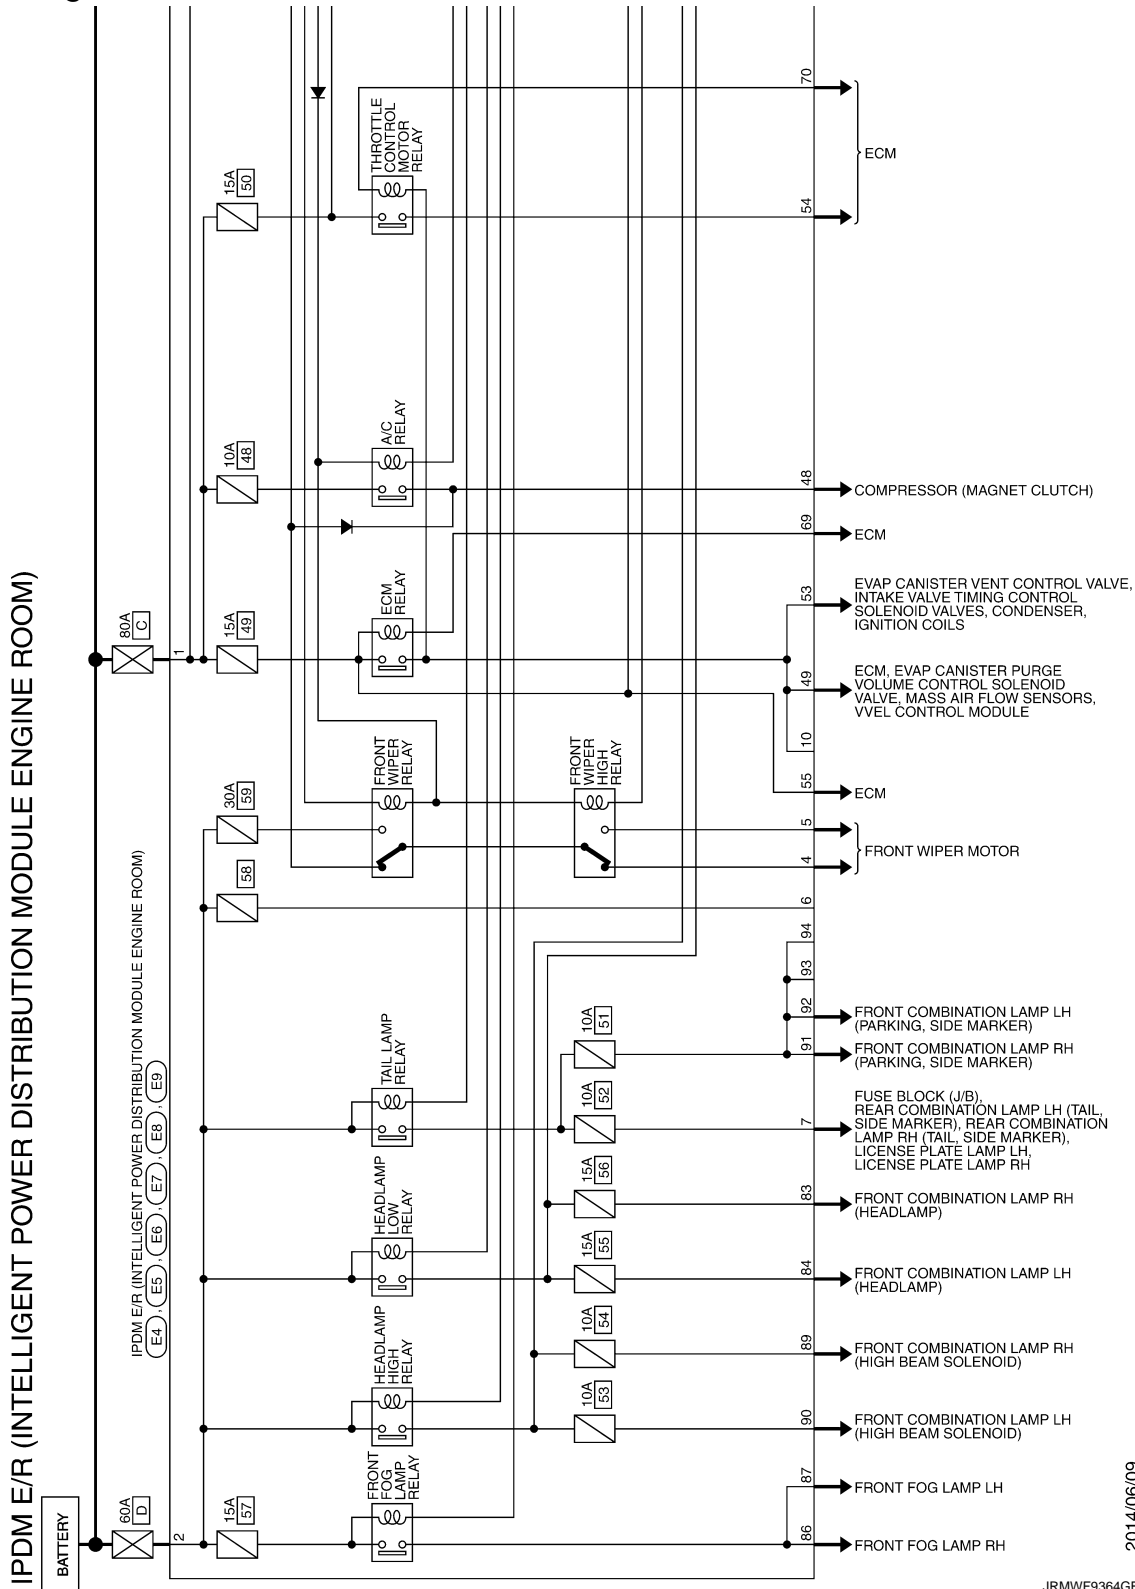


2014/06/09

JRMWF9364GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >


[XENON TYPE]

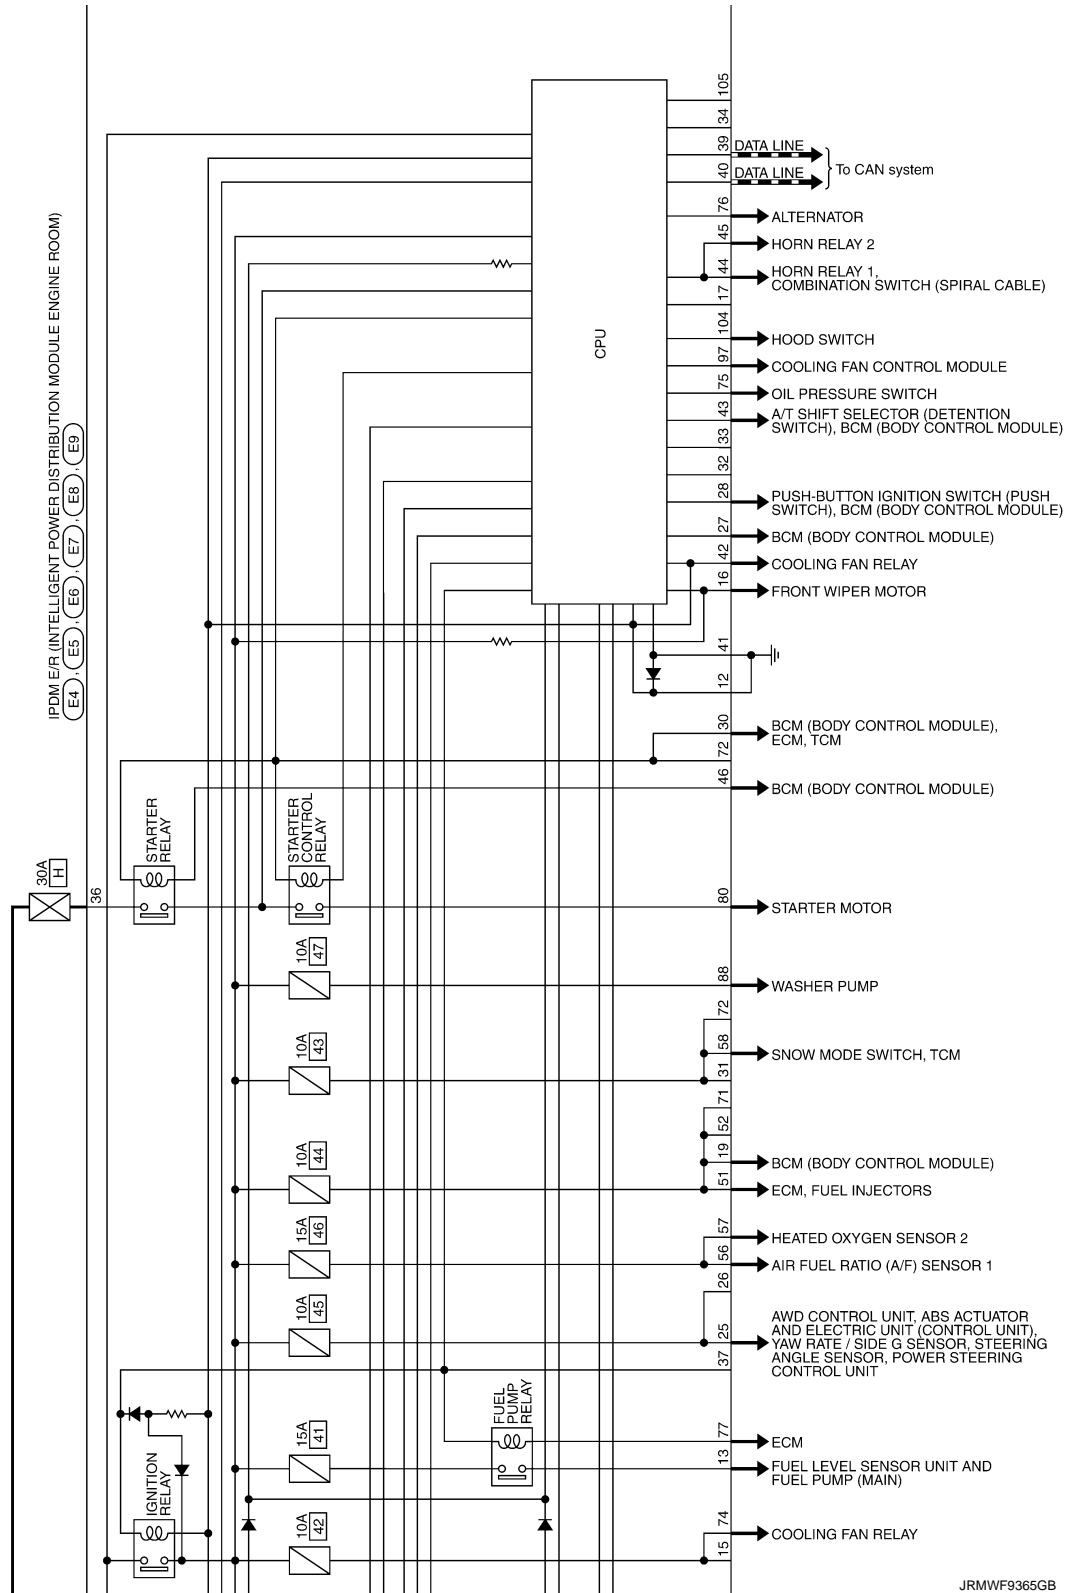

JRMWF9365GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

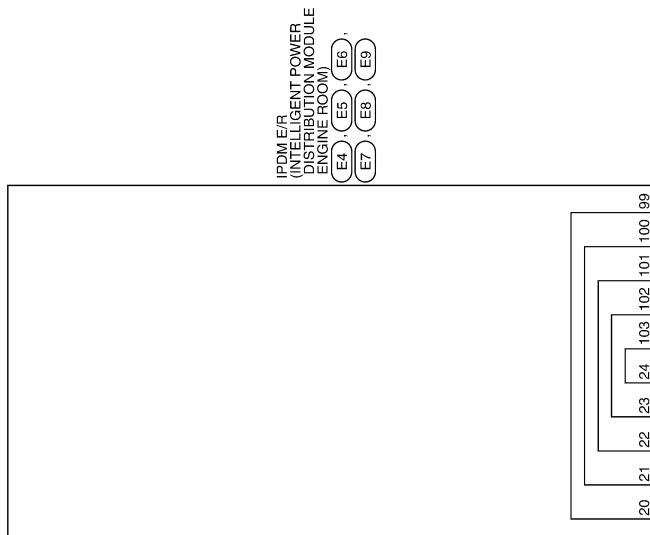

JRMWF9366GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E4
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	LQFPB-MC



Connector No.	E8
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH8BFW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	L	-

Connector No.	E5
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH20FW-CS12-M4-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
38	P	-
39	P	-
40	B/W	-
41	B/W	-
42	GR	-
43	G	-
44	LG	-
45	V	-
46	SB	-

Connector No.	E7
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH20FW-CS12-M4



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
6	SB	-
7	P	-
12	B/W	-
13	Y	-
16	LG	-
19	R	-
23	G	-
27	BG	-
28	L	-
38	GR	-
39	G	-

Terminal No.	Color Of Wire	Signal Name [Specification]
48	L	-
49	BG	-
51	Y	-
53	W	-
54	LG	-
55	BR	-
57	G	-
58	GR	-
69	BR	-
70	BG	-

74	G	-
75	SB	-
76	SB	-
77	R	-
80	W	-

Connector No.	E8
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	NSDBFW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
83	R	-
84	V	-
85	W	-
87	L	-
88	G	-
89	BR	-
90	P	-

Connector No.	E9
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH18FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
86	W	-
82	BG	-
87	V	-
104	LG	-
105	L	-

Fail-safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

JRMWF9518GB

INFOID:0000000011421484

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> • Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON • Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF
<ul style="list-style-type: none"> • Parking lamps • Side maker lamp • License plate lamps • Illuminations • Tail lamps 	<ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Horn	Horn relay OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> • Detects DTC “B2098: IGN RELAY ON CIRC” • Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC “B2099: IGN RELAY OFF CIRC”

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[XENON TYPE]

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:0000000011421485

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now.
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

x: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-14
B2098: IGN RELAY ON CIRC	×	PCS-15
B2099: IGN RELAY OFF CIRC	—	PCS-17
B210B: STR CONT RLY ON CIRC	—	SEC-77
B210C: STR CONT RLY OFF CIRC	—	SEC-78
B210D: STARTER RLY ON CIRC	—	SEC-80
B210E: STARTER RLY OFF CIRC	—	SEC-82
B210F: INTRLCK/PNP SW ON	—	SEC-84
B2110: INTRLCK/PNP SW OFF	—	SEC-86

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

SYMPTOM DIAGNOSIS

EXTERIOR LIGHTING SYSTEM SYMPTOMS

Symptom Table

INFOID:0000000010988668

NOTE:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item
Headlamp does not switch to the high beam.	One side	<ul style="list-style-type: none"> Fuse Harness between IPDM E/R and the front combination lamp Front combination lamp (High beam solenoid) IPDM E/R 	Headlamp (HI) circuit Refer to EXL-34 .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM" Refer to EXL-145 .	
High beam indicator lamp is not turned ON. (Headlamp switches to the high beam.)		<ul style="list-style-type: none"> Combination meter Unified meter and A/C amp. 	<ul style="list-style-type: none"> Unified meter and A/C amp. Data monitor "HI-BEAM IND" BCM (HEAD LAMP) Active test "HEADLAMP"
Headlamp does not switch to the low beam.	One side	Front combination lamp (High beam solenoid)	—
	Both sides	<ul style="list-style-type: none"> Combination switch Harness between the combination switch and BCM BCM 	Combination switch Refer to BCS-87 .
		<ul style="list-style-type: none"> High beam request signal BCM IPDM E/R 	IPDM E/R Data monitor "HL HI REQ"
		IPDM E/R	—
Headlamp is not turned ON.	One side	<ul style="list-style-type: none"> Fuse Xenon bulb Harness between IPDM E/R and the front combination lamp IPDM E/R 	Headlamp (LO) circuit Refer to EXL-37 .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-146 .	
Headlamp is not turned OFF.	When the ignition switch is turned ON	Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-146 .	
	The ignition switch is turned OFF (After activating the battery saver).	IPDM E/R	—
Headlamp is not turned ON/OFF with the lighting switch AUTO.	<ul style="list-style-type: none"> Combination switch Harness between the combination switch and BCM BCM 		Combination switch Refer to BCS-87 .
	<ul style="list-style-type: none"> Optical sensor Harness between the optical sensor and BCM BCM 		Optical sensor Refer to EXL-48 .

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

Symptom	Possible cause	Inspection item		
Front fog lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Front fog lamp bulb • Harness between IPDM E/R and the front fog lamp • IPDM E/R 	Front fog lamp circuit Refer to EXL-41 .	A
	Both side	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-148 .		B
Front fog lamp is not turned ON.			C	
Parking lamp is not turned ON.	<ul style="list-style-type: none"> • Fuse • Parking lamp bulb • Harness between IPDM E/R and the front combination lamp • IPDM E/R 	Parking lamp circuit Refer to EXL-43 .	D	
Tail lamp is not turned ON.	<ul style="list-style-type: none"> • Harness between IPDM E/R and the rear combination lamp • Rear combination lamp 	Tail lamp circuit Refer to EXL-53 .	E	
License plate lamp is not turned ON.	<ul style="list-style-type: none"> • License plate lamp bulb • Harness between IPDM E/R and the license plate lamp 	License plate lamp circuit Refer to EXL-55 .	F	
Tail lamp and the license plate lamp are not turned ON.	<ul style="list-style-type: none"> • Fuse • Harness between IPDM E/R and the rear combination lamp • IPDM E/R 	Tail lamp circuit Refer to EXL-53 .	G	
<ul style="list-style-type: none"> • Parking lamp, the tail lamp and the license plate lamp are not turned ON. • Parking lamp, the tail lamp and the license plate lamp are not turned OFF. (Each illumination is turned ON/OFF.)	Symptom diagnosis "PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-147 .		H	
Turn signal lamp does not blink.	Indicator lamp is normal. (The applicable side performs the high flasher activation.)	<ul style="list-style-type: none"> • Harness between BCM and each turn signal lamp • Turn signal lamp bulb 	Turn signal lamp circuit Refer to EXL-45 .	I
	Indicator lamp is included	<ul style="list-style-type: none"> • Combination switch • Harness between the combination switch and BCM • BCM 	Combination switch Refer to BCS-87 .	J
Turn signal indicator lamp does not blink. (The turn signal indicator lamp is normal.)	One side	Combination meter	—	K
	Both sides (Always)	<ul style="list-style-type: none"> • Turn signal indicator lamp signal - Unified meter and A/C amp. - BCM • Combination meter 	<ul style="list-style-type: none"> • Unified meter and A/C amp. Data monitor "TURN IND" • BCM (FLASHER) Active test "FLASHER"	EXL
	Both sides (Only when activating the hazard warning lamp with the ignition switch OFF)	<ul style="list-style-type: none"> • The combination meter power supply and the ground circuit • Combination meter 	Combination meter Power supply and the ground circuit Refer to MWI-51 .	M
<ul style="list-style-type: none"> • Hazard warning lamp does not activate. • Hazard warning lamp continues activating. (Turn signal is normal.)	<ul style="list-style-type: none"> • Hazard switch • Harness between the hazard switch and BCM • BCM 	Hazard switch Refer to EXL-51 .	N	
			O	
			P	

NORMAL OPERATING CONDITION

Description

INFOID:000000010988670

XENON HEADLAMP

- Brightness and the color of light may change slightly immediately after turning the headlamp ON until the xenon bulb becomes stable. This is normal.
- Illumination time lag may occur between right and left. This is normal.

AUTO LIGHT SYSTEM

The headlamp may not be turned ON/OFF immediately after passing dark area or bright area (short tunnel, sky bridge, shadowed area etc.) while using the auto light system. This causes for the control difference. This is normal.

BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

Description

INFOID:000000010988671

The headlamp (both sides) does not switch to the high beam when setting to the lighting switch HI or PASS.

Diagnosis Procedure

INFOID:000000010988672

1.COMBINATION SWITCH INSPECTION

Check the combination switch. Refer to [BCS-87, "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

 CONSULT DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R data monitor item.

2. With operating the lighting switch, check the monitor status.

Monitor item	Condition		Monitor status
HL HI REQ	Lighting switch (2ND)	HI or PASS	On
		Except for HI or PASS	Off

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM.

3.HEADLAMP (HI) CIRCUIT INSPECTION

Check the headlamp (HI) circuit. Refer to [EXL-34](#).

Is the headlamp (HI) circuit normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace the malfunctioning part.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

Description

INFOID:000000010988673

The headlamps (both sides) are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000010988674

1.COMBINATION SWITCH INSPECTION

Check the combination switch. Refer to [BCS-87, "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK HEADLAMP (LO) REQUEST SIGNAL INPUT

ⓐCONSULT DATA MONITOR

1. Select "HL LO REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition	Monitor status	
HL LO REQ	Lighting switch	2ND	On
		OFF	Off

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM.

3.HEADLAMP (LO) CIRCUIT INSPECTION

Check the headlamp (LO) circuit. Refer to [EXL-37](#).

Is the headlamp (LO) circuit normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace the malfunctioning part.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON

Description

INFOID:000000010988675

The parking, license plate, tail, side marker lamps and each illumination are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000010988676

1.COMBINATION SWITCH INSPECTION

Check the combination switch. Refer to [BCS-87, "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK TAIL LAMP RELAY REQUEST SIGNAL INPUT

CONSULT DATA MONITOR

1. Select "TAIL & CLR REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition	Monitor status	
TAIL & CLR REQ	Lighting switch	1ST	On
		OFF	Off

Is the item status normal?

YES >> Replace IPDM E/R.

NO >> Replace BCM.

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

[XENON TYPE]

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

Description

INFOID:000000010988679

The front fog lamps are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000010988680

1.COMBINATION SWITCH INSPECTION

Check the combination switch. Refer to [BCS-87, "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2.CHECK FRONT FOG LAMP REQUEST SIGNAL INPUT

ⓐCONSULT DATA MONITOR

1. Select "FR FOG REQ" of IPDM E/R data monitor item.
2. With operating the front fog lamp switch, check the monitor status.

Monitor item	Condition	Monitor status	
FR FOG REQ	Front fog lamp switch (Lighting switch 2ND)	ON	On
		OFF	Off

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM.

3.FRONT FOG LAMP CIRCUIT INSPECTION

Check the front fog lamp circuit. Refer to [EXL-41](#).

Is the front fog lamp circuit normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace the malfunctioning part.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010988681

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions For Xenon Headlamp Service

INFOID:000000010988682

WARNING:

Comply with the following warnings to prevent any serious accident.

- Disconnect the battery cable (negative terminal) or the power supply fuse before installing, removing, or touching the xenon headlamp (bulb included). The xenon headlamp contains high-voltage generated parts.
- Never work with wet hands.
- Check the xenon headlamp ON-OFF status after assembling it to the vehicle. Never turn the xenon headlamp ON in other conditions. Connect the power supply to the vehicle-side connector. (Turning it ON outside the lamp case may cause fire or visual impairments.)
- Never touch the bulb glass immediately after turning it OFF. It is extremely hot.

CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Install the xenon bulb securely. (Insufficient bulb socket installation may melt the bulb, the connector, the housing, etc. by high-voltage leakage or corona discharge.)
- Never perform HID circuit inspection with a tester.
- Never touch the xenon bulb glass with hands. Never put oil and grease on it.
- Dispose of the used xenon bulb after packing it in thick vinyl without breaking it.
- Never wipe out dirt and contamination with organic solvent (thinner, gasoline, etc.).

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

PRECAUTIONS

< PRECAUTION >

[XENON TYPE]

Precautions for Removing Battery Terminal

INFOID:000000011412978

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

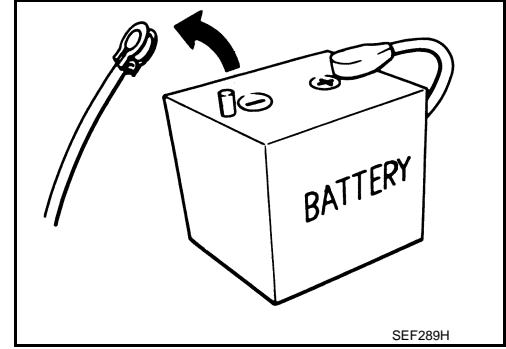

HEADLAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[XENON TYPE]

PERIODIC MAINTENANCE

HEADLAMP AIMING ADJUSTMENT

Description

INFOID:0000000010988683

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the headlamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the trunk room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.


- Wipe out dirt on the headlamp.

CAUTION:

Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.

AIMING ADJUSTMENT SCREW

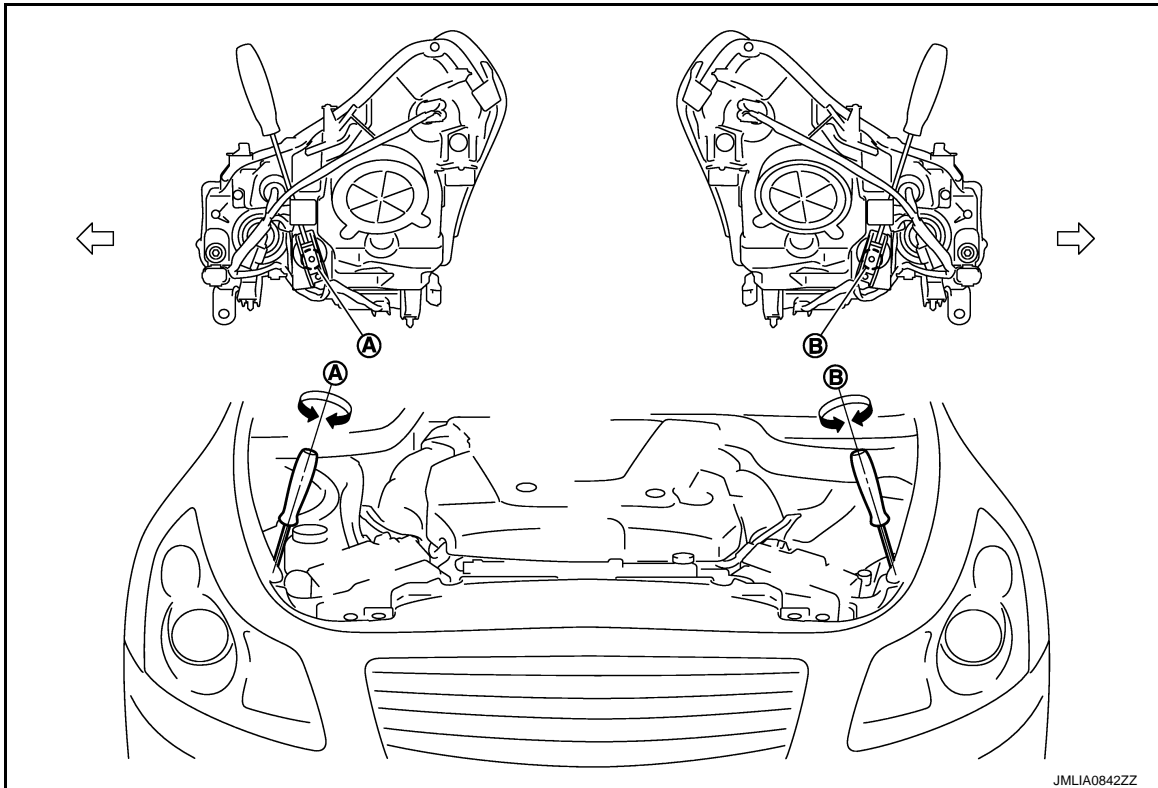

A Headlamp RH adjustment screw

B. Headlamp LH adjustment screw

↔ : Vehicle center

Adjustment screw	Screw driver rotation	Facing direction
A Headlamp RH	Clockwise	UP
	Counterclockwise	DOWN

HEADLAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[XENON TYPE]

Adjustment screw	Screw driver rotation	Facing direction
B Headlamp LH	Clockwise	UP
	Counterclockwise	DOWN

Aiming Adjustment Procedure

INFOID:000000010988684

- Place the screen.

NOTE:

- Stop the vehicle facing the wall.
- Place the board on a plain road vertically.

- Face the vehicle with the screen. Maintain 10 m (32.8 ft) between the headlamp center and the screen.

- Start the engine. Turn the headlamp (LO) ON.

NOTE:

Shut off the headlamp light with the board to prevent from illuminating the adjustment screen.


CAUTION:

Never cover the lens surface with a tape etc. The lens is made of resin.

- Measure the distance (X) between the horizontal center line of headlamp (H) and the cutoff line (A) within the light axis measurement range (R) from the vertical center line ahead of headlamp (V).

Light axis measurement range (R) : 350 ± 175 mm (13.78 ± 6.89 in)

Low beam distribution on the screen

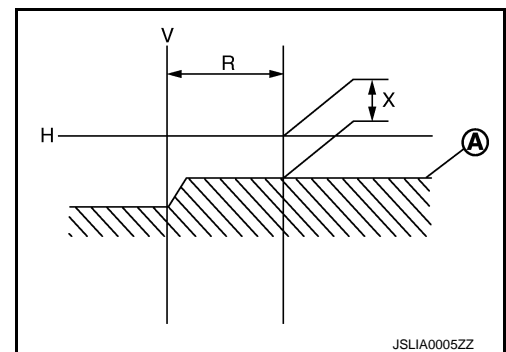


JSLIA0005ZZ

- Adjust the cutoff line height (X) with the aiming adjustment screw so as to enter in the adjustment range (M–N) according to the horizontal center line of headlamp (H).

unit: mm (in)

Horizontal center line of headlamp (H)	Highest cutoff line height (M)	Lowest cutoff line height (N)
700 (27.56) or less	4 (0.16)	30 (1.18)
701(27.60) – 800 (31.50)	4 (0.16)	30 (1.18)
801 (31.54) or more	17 (0.67)	44 (1.73)

Side view

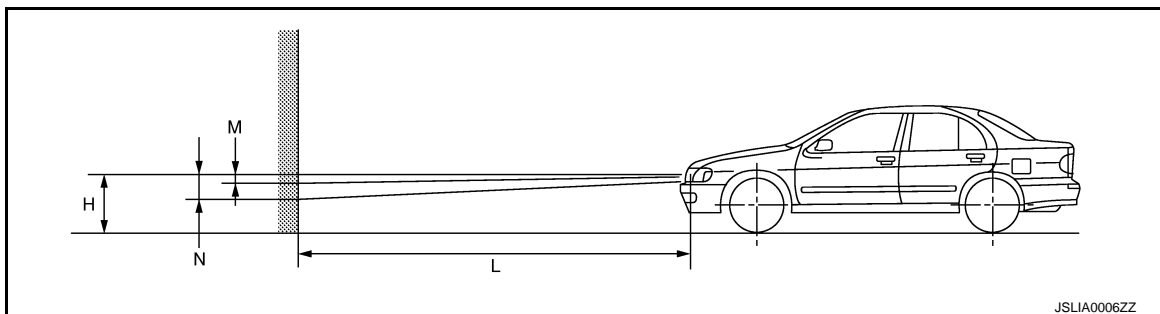

JSLIA0006ZZ

Distance between the headlamp center and the screen (L) : 10 m (32.8 ft)

FRONT FOG LAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[XENON TYPE]

FRONT FOG LAMP AIMING ADJUSTMENT

Description

INFOID:0000000010988685

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the headlamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the trunk room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.

- Wipe out dirt on the headlamp.

CAUTION:

Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.

AIMING ADJUSTMENT SCREW

- Turn the aiming adjusting screw for adjustment.


A: UP

B: DOWN

- For the position and direction of the adjusting screw, refer to the figure.

NOTE:

A screwdriver or hexagonal wrench [6 mm (0.24 in)] can be used for adjustment.

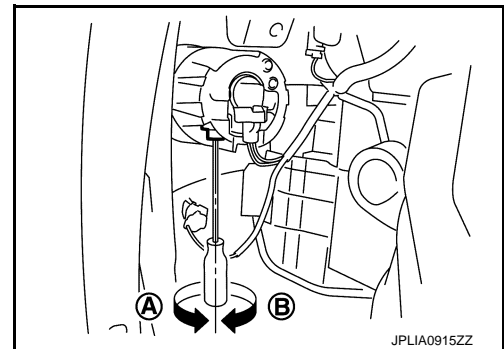

Aiming Adjustment Procedure

INFOID:0000000010988686

1. Place the screen.

NOTE:

- Stop the vehicle facing the wall.
- Place the board on a plain road vertically.

2. Face the vehicle with the screen. Maintain 10 m (32.8 ft) between the front fog lamp center and the screen.

3. Start the engine. Turn the front fog lamp ON.

NOTE:

Shut off the headlamp light with the board to prevent from illuminating the adjustment screen.

CAUTION:

Never cover the lens surface with a tape etc. The lens is made of resin.

4. Adjust the cutoff line height (A) with the aiming adjustment screw so that the distance (X) between the horizontal center line of front fog lamp (H) and (A) becomes 200 mm (7.87 in).


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

FRONT FOG LAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

[XENON TYPE]

Front fog lamp light distribution on the screen

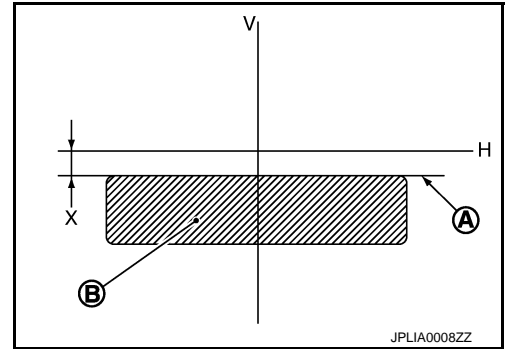

- A : Cutoff line
- B : High illuminance area
- H : Horizontal center line of front fog lamp
- V : Vertical center line of front fog lamp
- X : Cutoff line height

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]


REMOVAL AND INSTALLATION

FRONT COMBINATION LAMP

Exploded View


INFOID:000000010988687

REMOVAL

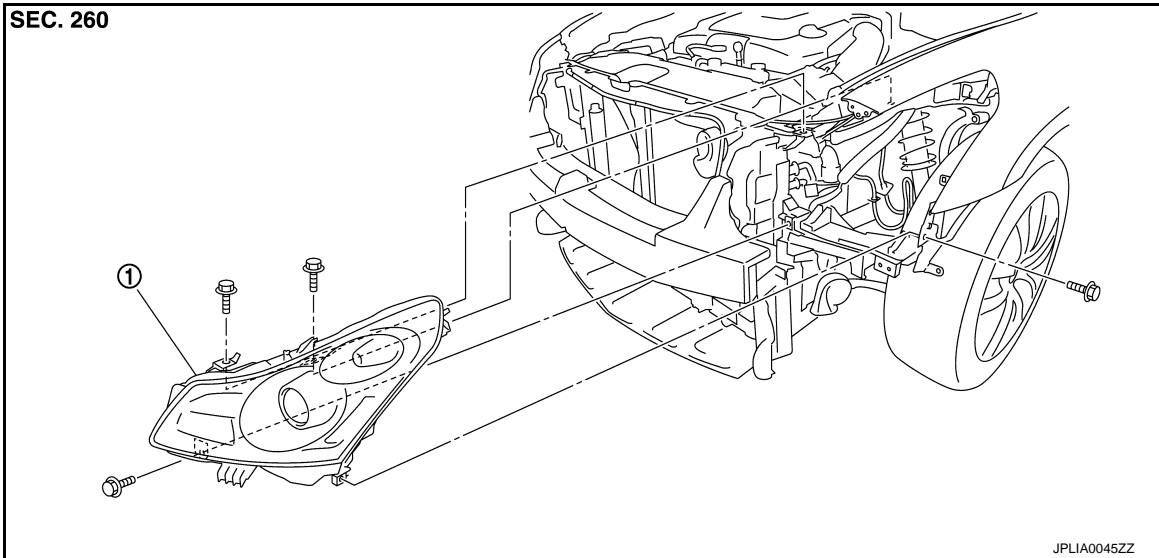

1. Front combination lamp

DISASSEMBLY

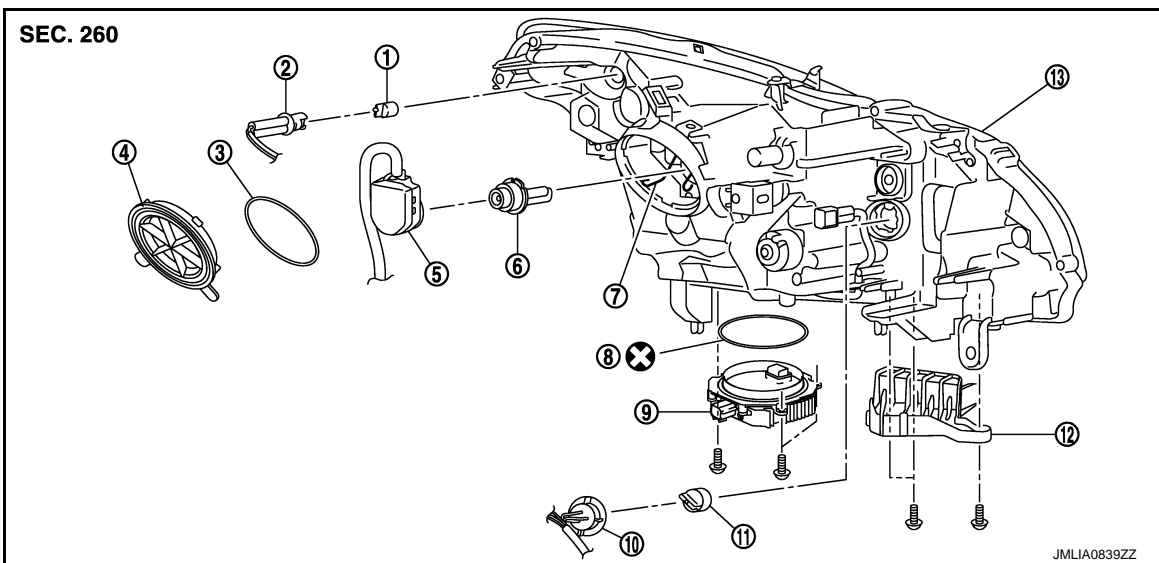

- | | | |
|--|--|----------------------|
| 1. Parking/front side marker bulb | 2. Parking/front side marker bulb socket | 3. Seal packing |
| 4. Resin cap | 5. Xenon bulb socket | 6. Xenon bulb |
| 7. Retaining spring | 8. Seal packing | 9. HID control unit |
| 10. Front turn signal lamp bulb socket | 11. Front turn signal lamp bulb | 12. Headlamp bracket |
| 13. Headlamp housing assembly | | |

⊗ : Always replace after every disassembly.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]

Removal and Installation


INFOID:000000010988688

REMOVAL

CAUTION:

Disconnect the battery negative terminal or remove the fuse.

1. Remove the front bumper fascia. Refer to [EXT-12, "Exploded View"](#).
2. Remove the headlamp mounting bolts.
3. Remove the holding clip (A)* and the harness clip (B).
*: Left side only
4. Pull out the headlamp assembly forward the vehicle.
5. Disconnect the connector before removing the headlamp assembly.

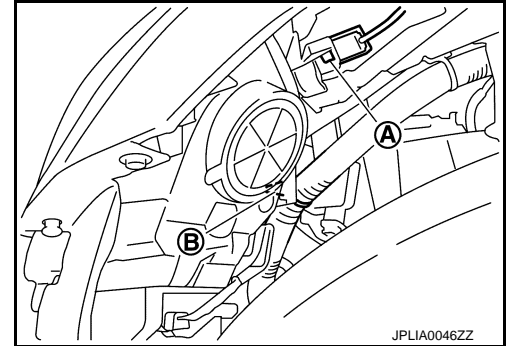

INSTALLATION

Install in the reverse order of removal.

NOTE:

After installation, perform aiming adjustment. Refer to [EXL-151, "Description"](#).

Replacement

INFOID:000000010988689

CAUTION:


- Disconnect the battery negative terminal or remove the fuse.
- After installing the bulb, install the resin cap and the bulb socket securely for watertightness.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

HEADLAMP BULB

1. Remove the fender protector. Refer to [EXT-27, "FENDER PROTECTOR : Exploded View"](#). Keep a service area.
2. Rotate the resin cap counterclockwise and unlock it.
3. Rotate the bulb socket counterclockwise and unlock it.
4. Remove the retaining spring lock. Remove the bulb from the headlamp housing.

CAUTION:

Never break the xenon bulb ceramic tube when replacing the bulb.

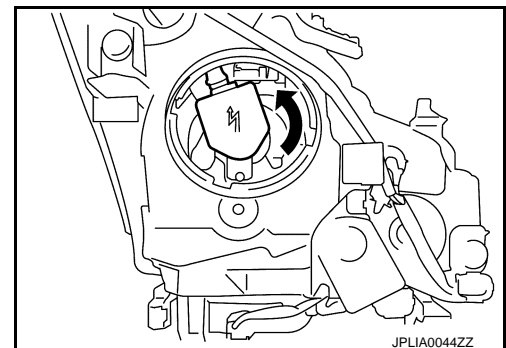

PARKING/FRONT SIDE MARKER LAMP BULB

1. Remove the fender protector. Refer to [EXT-27, "FENDER PROTECTOR : Exploded View"](#). Keep a service area.
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb from the bulb socket.

FRONT TURN SIGNAL LAMP BULB

1. Remove the air cleaner case. Refer to [EM-27, "Exploded View"](#).

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]

2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb from the bulb socket.

A

Disassembly and Assembly

INFOID:000000010988690

DISASSEMBLY

1. Rotate the resin cap counterclockwise and unlock it.
2. Rotate the xenon bulb socket counterclockwise and unlock it.
3. Remove the retaining spring lock. Remove the xenon bulb.
4. Remove the HID control unit installation screw.
5. Disconnect the HID control unit harness, and then remove the HID control unit.
6. Rotate the parking/front side marker lamp bulb socket counterclockwise and unlock it.
7. Remove the bulb from the parking/front side marker lamp bulb socket.
8. Rotate the front turn signal lamp bulb socket counterclockwise and unlock it.
9. Remove the bulb from the front turn signal lamp bulb socket.
10. Remove the bulb socket from the headlamp housing assembly.

B

C

D

E

F

ASSEMBLY

Assemble in the reverse order of disassembly.

CAUTION:

- Install HID control unit securely.
- After installing the bulb, install the resin cap and the bulb socket securely for watertightness.

G

H

I

J

K

EXL

M

N

O

P

FRONT FOG LAMP


< REMOVAL AND INSTALLATION >

[XENON TYPE]


FRONT FOG LAMP

Exploded View

INFOID:000000010988691

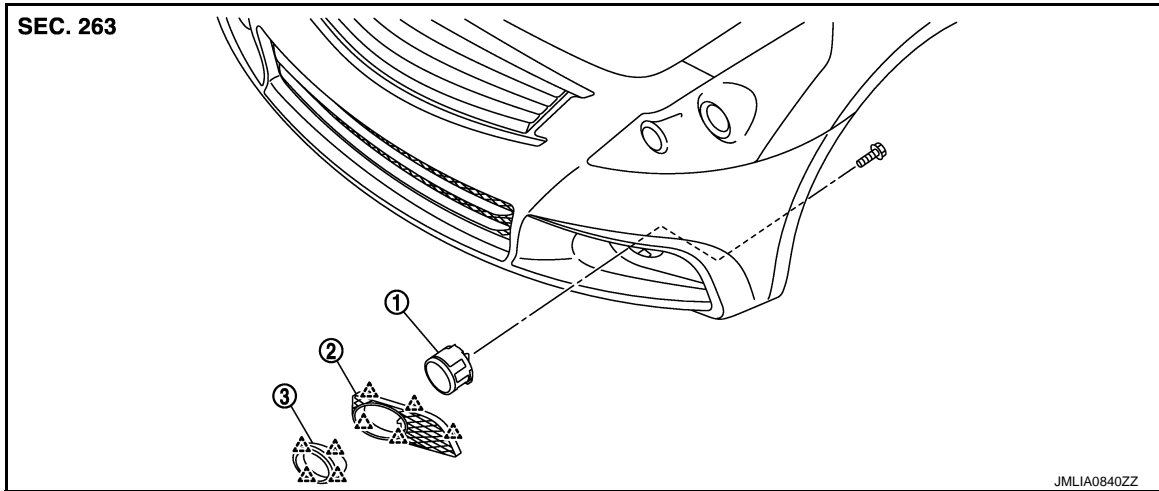

1. Front fog lamp
2. Bumper grille (Sports bumper)
3. Bumper finisher

 : Pawl

Removal and Installation

INFOID:000000010988692

CAUTION:

Disconnect the battery negative terminal or remove the fuse.

REMOVAL

1. Remove the engine lower cover. Refer to [EXT-32, "Removal and Installation"](#).
2. Remove the bumper grille (Sports bumper). Refer to [EXT-12, "Exploded View"](#).
3. Remove the bumper finisher. Refer to [EXT-12, "Exploded View"](#).
4. Disconnect the fog lamp harness connector.
5. Remove the mounting bolt.
6. Disengage the pawl. And then remove the front fog lamp.

INSTALLATION

Installation is the reverse order of removal.

NOTE:

After installation, perform aiming adjustment. Refer to [EXL-153, "Description"](#)

Replacement

INFOID:000000010988693

CAUTION:

- **Disconnect the battery negative terminal or remove the fuse.**
- **Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it. Never touch bulb by hand while it is lit or right after being turned off.**
- **Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.**

FRONT FOG LAMP BULB


1. Remove the front fender protector. Keep the service area. Refer to [EXT-27, "FENDER PROTECTOR : Removal and Installation"](#).

FRONT FOG LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]

2. Remove the front fog lamp bulb connector (1).
3. Rotate the bulb (2) counterclockwise and unlock it.

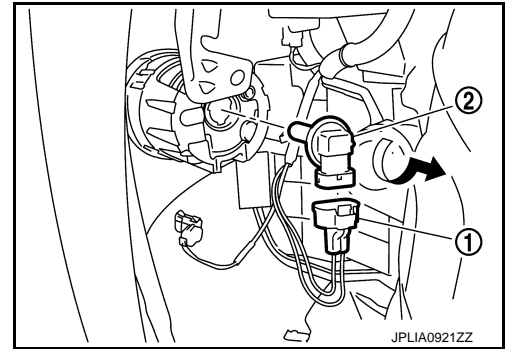

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

OPTICAL SENSOR


< REMOVAL AND INSTALLATION >

[XENON TYPE]

OPTICAL SENSOR

Exploded View

INFOID:000000010988694

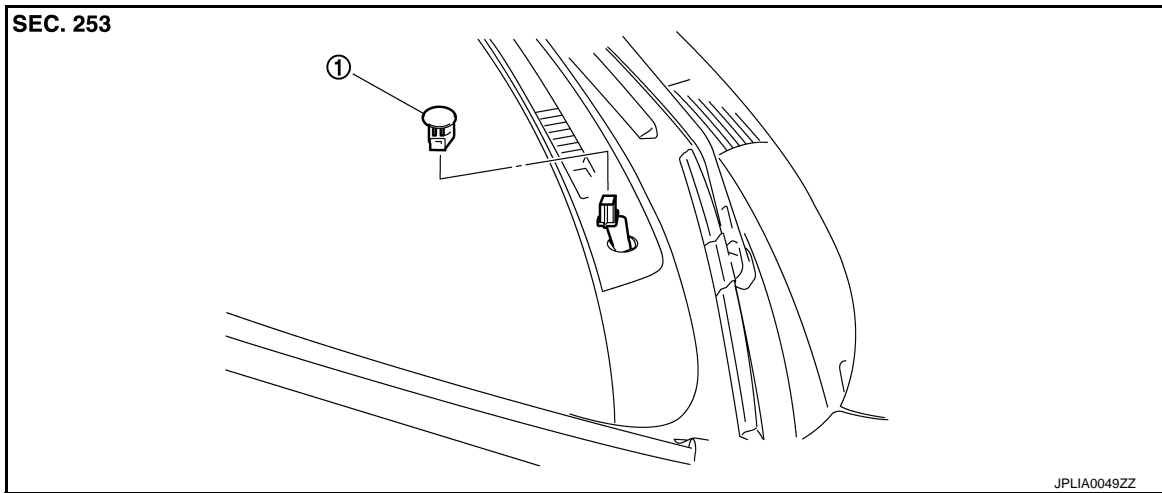

1. Optical sensor

Removal and Installation

INFOID:000000010988695

REMOVAL

1. Insert an appropriate tool between the optical sensor and the instrument upper panel. Pull out the optical sensor upward.
2. Disconnect the connector. Remove the optical sensor.

INSTALLATION

Install in the reverse order of removal.

LIGHTING & TURN SIGNAL SWITCH

< REMOVAL AND INSTALLATION >

[XENON TYPE]

LIGHTING & TURN SIGNAL SWITCH

Exploded View

INFOID:000000010988696

The lighting & turn signal switch is integrated in the combination switch. [BCS-91, "Exploded View"](#).

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- EXL
- M
- N
- O
- P

HAZARD SWITCH

< REMOVAL AND INSTALLATION >

[XENON TYPE]

HAZARD SWITCH

Exploded View

INFOID:000000010988697

The hazard switch is integrated in the multifunction switch. Refer to [AV-115. "Exploded View"](#) (Base audio with Rear view camera) or [AV-261. "Exploded View"](#) (Bose audio with navigation).

STEERING ANGLE SENSOR

< REMOVAL AND INSTALLATION >

[XENON TYPE]

STEERING ANGLE SENSOR

Removal and Installation

INFOID:000000010988698

Refer to [SR-14. "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

REAR COMBINATION LAMP


< REMOVAL AND INSTALLATION >

[XENON TYPE]

REAR COMBINATION LAMP

Exploded View

INFOID:000000010988699

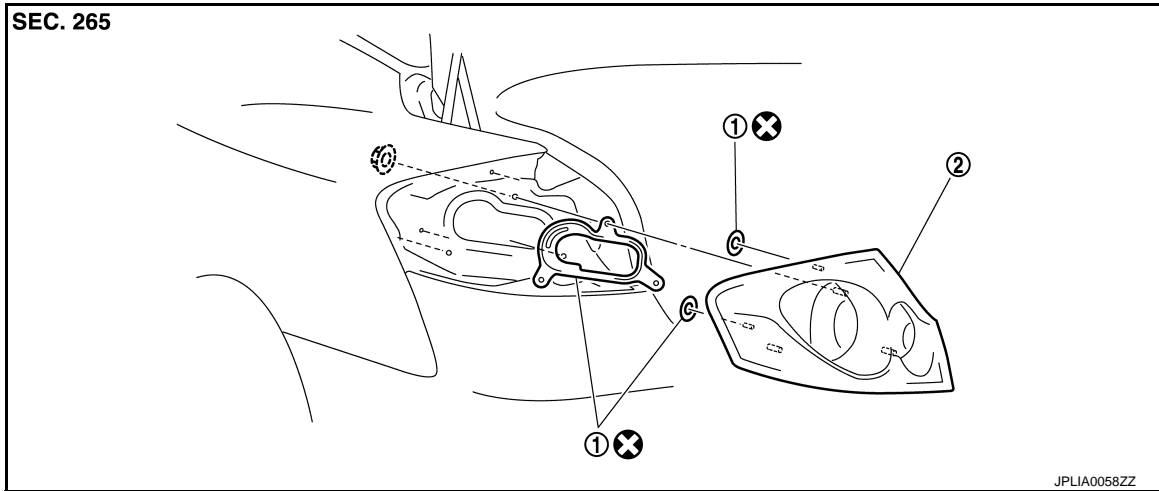

1. Seal packing
2. Rear combination lamp

⊗ : Always replace after every disassembly.

Removal and Installation

INFOID:000000010988700

CAUTION:

Disconnect the battery negative terminal or remove the fuse.

REMOVAL

1. Remove the rear wheel house finisher. Refer to [EXT-28. "REAR WHEEL HOUSE PROTECTOR : Exploded View"](#).
2. Disconnect the rear combination lamp connector.
3. Remove the rear combination lamp mounting nuts.
4. Pull the rear combination lamp toward rear of the vehicle. Remove the rear combination lamp.

INSTALLATION

Install in the reverse order of removal.

Replacement

INFOID:000000010988701

CAUTION:

- **Disconnect the battery negative terminal or remove the fuse.**
- **Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.**
- **Never touch bulb by hand while it is lit or right after being turned off.**
- **Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.**

REAR TURN SIGNAL LAMP BULB


1. Remove the rear wheel house finisher. Refer to [EXT-28. "REAR WHEEL HOUSE PROTECTOR : Exploded View"](#).

REAR COMBINATION LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]

2. Turn the rear turn signal lamp bulb socket (1) counterclockwise and unlock it.
3. Remove the bulb (2) from the socket.

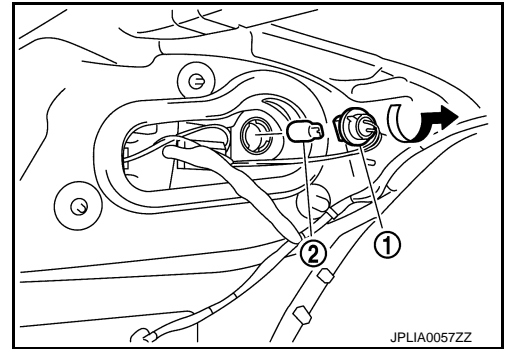

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

HIGH-MOUNTED STOP LAMP


< REMOVAL AND INSTALLATION >

[XENON TYPE]

HIGH-MOUNTED STOP LAMP

Exploded View

INFOID:000000010988702

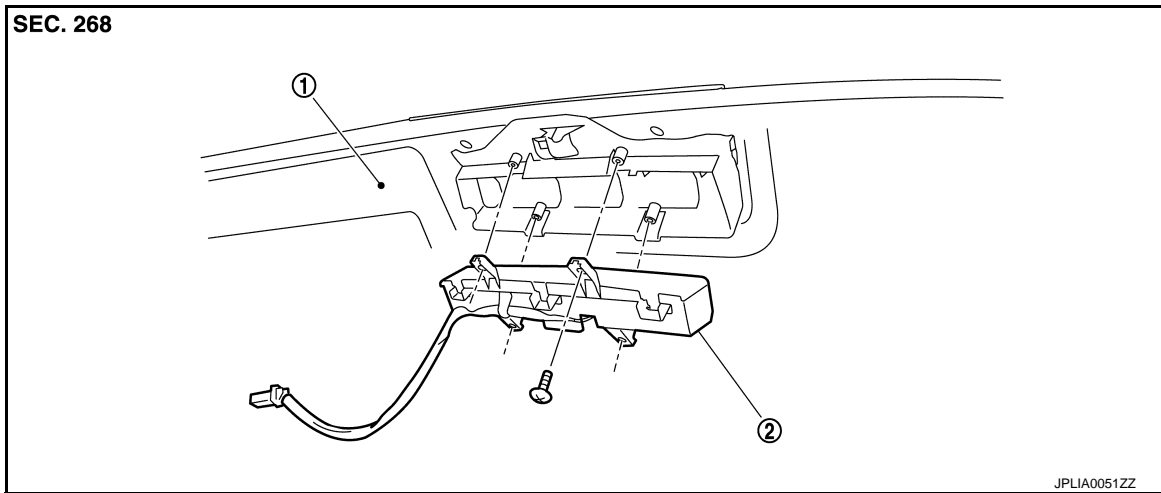

1. Rear parcel shelf finisher

2. High-mounted stop lamp

Removal and Installation

INFOID:000000010988703

REMOVAL

1. Remove the rear parcel shelf finisher. Refer to [INT-20, "Exploded View"](#).
2. Remove the screws. And then remove the high-mounted stop lamp from the rear parcel shelf finisher.

INSTALLATION

Install in the reverse order of removal.

BACK-UP LAMP


< REMOVAL AND INSTALLATION >

[XENON TYPE]

BACK-UP LAMP

Exploded View

INFOID:000000010988704

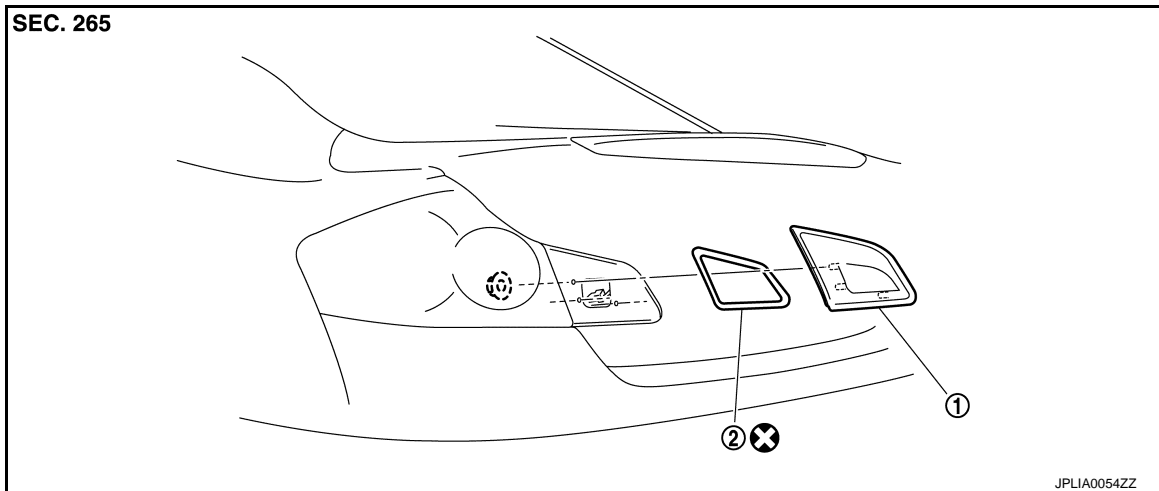

1. Back-up lamp
2. Seal packing

⊗ : Always replace after every disassembly.

Removal and Installation

INFOID:000000010988705

CAUTION:

Disconnect the battery negative terminal or remove the fuse.

REMOVAL

1. Remove the trunk lid finisher inner. Refer to [EXT-41, "Exploded View"](#).
2. Disconnect the back-up lamp connector.
3. Remove the back-up lamp mounting nuts. And then remove the back-up lamp.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Seal packing cannot be reused.

Replacement

INFOID:000000010988706

CAUTION:

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

BACK-UP LAMP BULB

1. Remove the trunk lid finisher inner. Refer to [EXT-41, "Exploded View"](#).
2. Disconnect the back-up lamp connector.


A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BACK-UP LAMP

[XENON TYPE]

< REMOVAL AND INSTALLATION >

3. Turn the bulb socket (1) counterclockwise and unlock it.
4. Remove the bulb (2) from the socket.

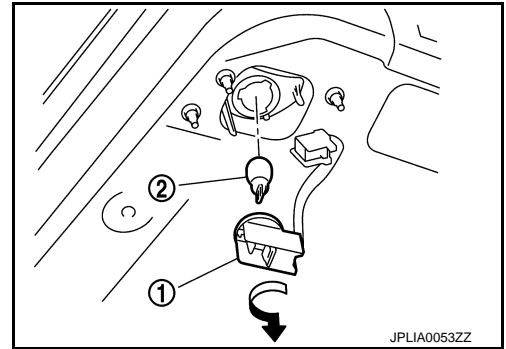

LICENSE PLATE LAMP


< REMOVAL AND INSTALLATION >

[XENON TYPE]

LICENSE PLATE LAMP

Exploded View

INFOID:000000010988707

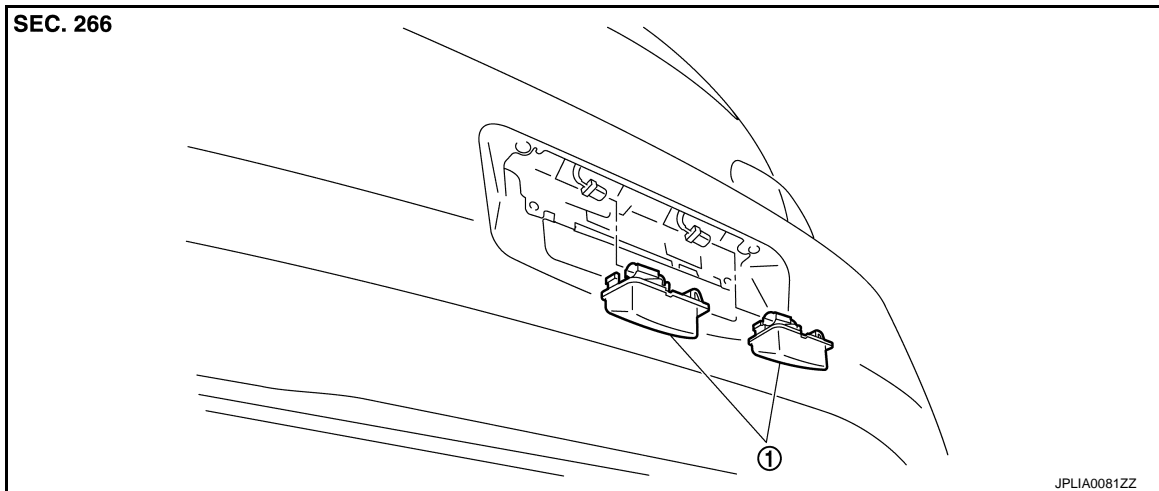

1. License plate lamp


Removal and Installation

INFOID:000000010988708

CAUTION:
Disconnect the battery negative terminal or remove the fuse.

REMOVAL

1. Remove the license plate lamp in numerical order.
2. Disconnect the connector.
3. Remove the license plate lamp.

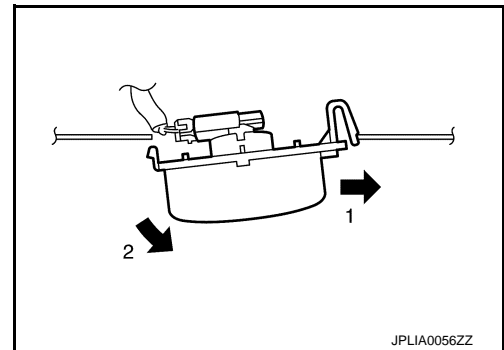

INSTALLATION

1. Connect the connector.
2. Fix the pawl side. And then push the resin clip side.

Replacement

INFOID:000000010988709

CAUTION:

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

LICENSE PLATE LAMP BULB


1. Remove the license plate lamp.

LICENSE PLATE LAMP

< REMOVAL AND INSTALLATION >

[XENON TYPE]

2. Turn the bulb socket (1) counterclockwise and unlock it.
3. Remove the bulb (2) from the socket.

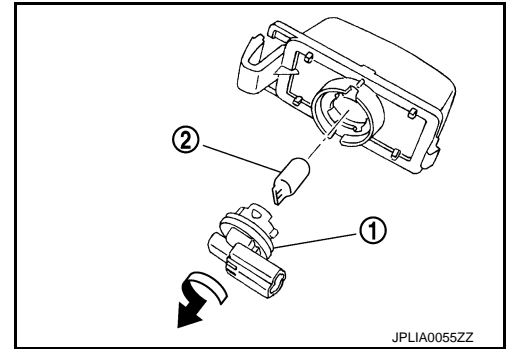

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[XENON TYPE]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Bulb Specifications

INFOID:0000000010988710

Item	Type	Wattage (W)	
Front combination lamp	Headlamp (HI/LO)	D2S (Xenon)	35
	Front turn signal lamp	WY21W (Amber)	21
	Parking/front side marker lamp	WY5W (Amber)	5
Front fog lamp	H8	35	
Rear combination lamp	Stop/tail lamp	LED	—
	Rear turn signal lamp	W21W	21
	Rear side marker lamp	LED	—
	Back-up lamp	W16W	16
License plate lamp	W5W	5	
High-mounted stop lamp	LED	—	

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL