

SECTION **PCS**

POWER CONTROL SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

CONTENTS

| | |
|---|---|
| <p style="text-align: center;">IPDM E/R</p> <p>SYSTEM DESCRIPTION 4</p> <p>RELAY CONTROL SYSTEM 4</p> <p style="padding-left: 20px;">System Diagram4</p> <p style="padding-left: 20px;">System Description4</p> <p style="padding-left: 20px;">Component Parts Location5</p> <p>POWER CONTROL SYSTEM 7</p> <p style="padding-left: 20px;">System Diagram7</p> <p style="padding-left: 20px;">System Description7</p> <p style="padding-left: 20px;">Component Parts Location7</p> <p>SIGNAL BUFFER SYSTEM 8</p> <p style="padding-left: 20px;">System Diagram8</p> <p style="padding-left: 20px;">System Description8</p> <p style="padding-left: 20px;">Component Parts Location8</p> <p>POWER CONSUMPTION CONTROL SYSTEM 9</p> <p style="padding-left: 20px;">System Diagram9</p> <p style="padding-left: 20px;">System Description9</p> <p style="padding-left: 20px;">Component Parts Location 10</p> <p>DIAGNOSIS SYSTEM (IPDM E/R)11</p> <p style="padding-left: 20px;">Diagnosis Description 11</p> <p style="padding-left: 20px;">CONSULT-III Function (IPDM E/R) 13</p> <p>DTC/CIRCUIT DIAGNOSIS16</p> <p>U1000 CAN COMM CIRCUIT16</p> <p style="padding-left: 20px;">Description 16</p> <p style="padding-left: 20px;">DTC Logic 16</p> <p style="padding-left: 20px;">Diagnosis Procedure 16</p> <p>B2098 IGNITION RELAY ON STUCK17</p> <p style="padding-left: 20px;">Description 17</p> <p style="padding-left: 20px;">DTC Logic 17</p> <p style="padding-left: 20px;">Diagnosis Procedure 17</p> <p>B2099 IGNITION RELAY OFF STUCK18</p> | <p style="padding-left: 20px;">Description18</p> <p style="padding-left: 20px;">DTC Logic18</p> <p style="padding-left: 20px;">Diagnosis Procedure18</p> <p>POWER SUPPLY AND GROUND CIRCUIT19</p> <p style="padding-left: 20px;">Diagnosis Procedure19</p> <p>ECU DIAGNOSIS INFORMATION20</p> <p>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)20</p> <p style="padding-left: 20px;">Reference Value20</p> <p style="padding-left: 20px;">Wiring Diagram - IPDM E/R -27</p> <p style="padding-left: 20px;">Fail Safe30</p> <p style="padding-left: 20px;">DTC Index32</p> <p>PRECAUTION33</p> <p>PRECAUTIONS33</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"33</p> <p style="padding-left: 20px;">Precaution for Procedure without Cowl Top Cover...33</p> <p>REMOVAL AND INSTALLATION34</p> <p>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)34</p> <p style="padding-left: 20px;">Exploded View34</p> <p style="padding-left: 20px;">Removal and Installation34</p> <p style="text-align: center;">POWER DISTRIBUTION SYSTEM</p> <p>BASIC INSPECTION36</p> <p>DIAGNOSIS AND REPAIR WORK FLOW36</p> <p style="padding-left: 20px;">Work Flow36</p> <p>SYSTEM DESCRIPTION39</p> <p>POWER DISTRIBUTION SYSTEM39</p> <p style="padding-left: 20px;">System Description39</p> <p style="padding-left: 20px;">Component Parts Location41</p> |
|---|---|

| | | | |
|---|-----------|--|------------|
| Component Description | 42 | B261A PUSH-BUTTON IGNITION SWITCH | 67 |
| DIAGNOSIS SYSTEM (BCM) | 43 | Description | 67 |
| COMMON ITEM | 43 | DTC Logic | 67 |
| COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM) | 43 | Diagnosis Procedure | 67 |
| INTELLIGENT KEY | 44 | POWER SUPPLY AND GROUND CIRCUIT | 69 |
| INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY) | 44 | BCM | 69 |
| DTC/CIRCUIT DIAGNOSIS | 48 | BCM : Diagnosis Procedure | 69 |
| U1000 CAN COMM CIRCUIT | 48 | PUSH-BUTTON IGNITION SWITCH | 70 |
| Description | 48 | Description | 70 |
| DTC Logic | 48 | Component Function Check | 70 |
| Diagnosis Procedure | 48 | Diagnosis Procedure | 70 |
| U1010 CONTROL UNIT (CAN) | 49 | Component Inspection | 71 |
| DTC Logic | 49 | PUSH-BUTTON IGNITION SWITCH POSI- TION INDICATOR | 72 |
| Diagnosis Procedure | 49 | Description | 72 |
| Special Repair Requirement | 49 | Component Function Check | 72 |
| B2553 IGNITION RELAY | 50 | Diagnosis Procedure | 72 |
| Description | 50 | Component Inspection | 73 |
| DTC Logic | 50 | ECU DIAGNOSIS INFORMATION | 74 |
| Diagnosis Procedure | 50 | BCM (BODY CONTROL MODULE) | 74 |
| B260A IGNITION RELAY | 52 | Reference Value | 74 |
| Description | 52 | Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) - | 98 |
| DTC Logic | 52 | Fail-safe | 103 |
| Diagnosis Procedure | 52 | DTC Inspection Priority Chart | 105 |
| B2611 ACC RELAY | 54 | DTC Index | 107 |
| Description | 54 | IPDM E/R (INTELLIGENT POWER DISTRI- BUTION MODULE ENGINE ROOM) | 109 |
| DTC Logic | 54 | Reference Value | 109 |
| Diagnosis Procedure | 55 | Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) - | 116 |
| B2614 ACC RELAY CIRCUIT | 57 | Fail Safe | 121 |
| Description | 57 | DTC Index | 123 |
| DTC Logic | 57 | PRECAUTION | 124 |
| Diagnosis Procedure | 57 | PRECAUTIONS | 124 |
| Component Inspection (Accessory Relay) | 58 | Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" | 124 |
| B2615 BLOWER RELAY CIRCUIT | 60 | Precaution Necessary for Steering Wheel Rota- tion after Battery Disconnect | 124 |
| Description | 60 | SYMPTOM DIAGNOSIS | 126 |
| DTC Logic | 60 | POWER DISTRIBUTION SYSTEM | 126 |
| Diagnosis Procedure | 60 | Symptom Table | 126 |
| Component Inspection (Blower Relay) | 61 | PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE | 128 |
| B2616 IGNITION RELAY CIRCUIT | 63 | Description | 128 |
| Description | 63 | Diagnosis Procedure | 128 |
| DTC Logic | 63 | | |
| Diagnosis Procedure | 63 | | |
| Component Inspection (Ignition Relay) | 64 | | |
| B2618 BCM | 66 | | |
| Description | 66 | | |
| DTC Logic | 66 | | |
| Diagnosis Procedure | 66 | | |

| | | | | |
|---|------------|--|------------|---|
| PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR | 129 | BCM (BODY CONTROL MODULE) | 130 | |
| Description | 129 | Exploded View | 130 | A |
| Diagnosis Procedure | 129 | Removal and Installation | 130 | |
| REMOVAL AND INSTALLATION | 130 | PUSH BUTTON IGNITION SWITCH | 131 | B |
| | | Exploded View | 131 | |
| | | Removal and Installation | 131 | C |

D
E
F
G
H
I
J
K
L
N
O
P

PCS

RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >


[IPDM E/R]

SYSTEM DESCRIPTION

RELAY CONTROL SYSTEM

System Diagram

INFOID:000000001837873

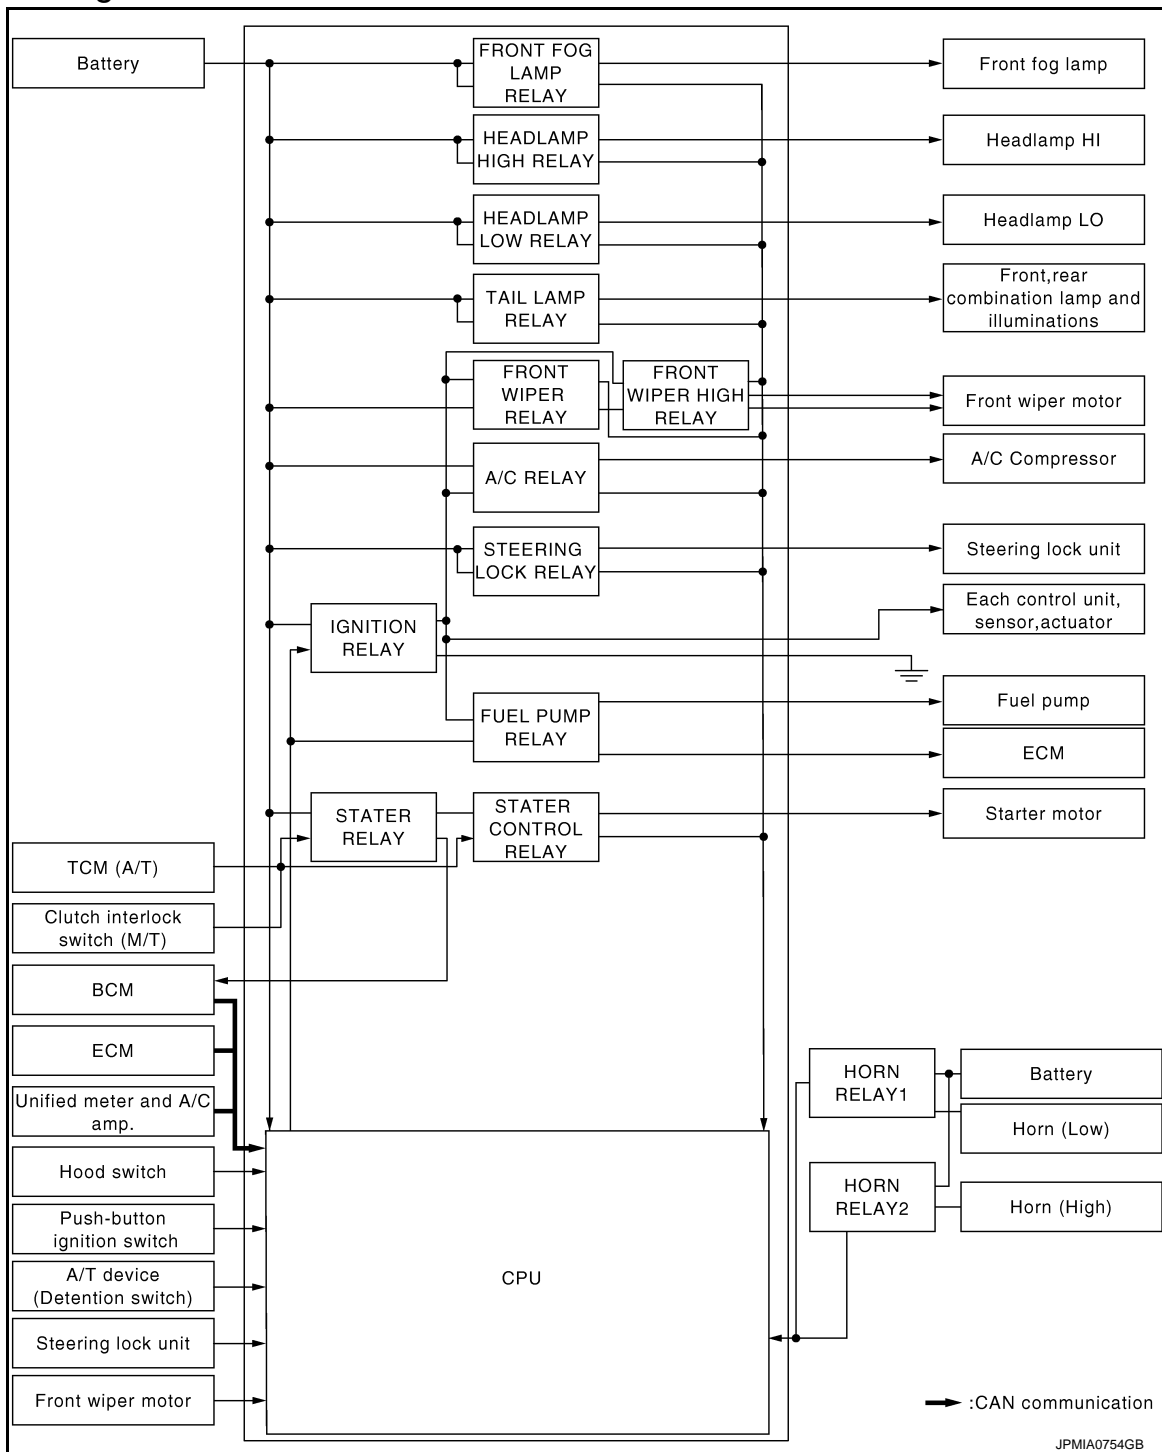

System Description

INFOID:000000001837874

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

CAUTION:

IPDM E/R integrated relays cannot be removed.

RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]


| Control relay | Input/output | Transmit unit | Control part | Reference page |
|---|---|----------------------------------|--|--|
| <ul style="list-style-type: none"> Headlamp low relay Headlamp high relay | <ul style="list-style-type: none"> Low beam request signal High beam request signal | BCM (CAN) | <ul style="list-style-type: none"> Headlamp low Headlamp high | EXL-8 |
| Front fog lamp relay | Front fog light request signal | BCM (CAN) | Front fog lamp | EXL-22 |
| Tail lamp relay | Position light request signal | BCM (CAN) | <ul style="list-style-type: none"> Parking lamp Side marker lamp License plate lamp Tail lamp Illuminations | EXL-26 , INL-10 |
| <ul style="list-style-type: none"> Front wiper relay Front wiper high relay | Front wiper request signal | BCM (CAN) | Front wiper | WW-5 |
| | Front wiper auto stop signal | Front wiper motor | | |
| <ul style="list-style-type: none"> Horn relay 1 Horn relay 2 | <ul style="list-style-type: none"> Theft warning horn request signal Horn reminder signal | BCM (CAN) | <ul style="list-style-type: none"> Horn (low) Horn (high) | SEC-23 |
| <ul style="list-style-type: none"> Starter relay^{NOTE} Starter control relay | Starter control relay signal | BCM (CAN) | Starter motor | SEC-63 , SEC-79 |
| | Steering lock unit condition signal | Steering lock unit | | |
| | Starter relay control signal | TCM Clutch interlock switch | | |
| Steering lock relay | Steering lock relay signal | BCM (CAN) | Steering lock unit | SEC-101 |
| | Steering lock unit condition signal | Steering lock unit | | |
| | A/T device (Detention switch) signal | A/T device (Detention switch) | | |
| A/C relay | A/C compressor request signal | ECM (CAN) | A/C compressor (magnet clutch) | HAC-68 |
| Ignition relay | Ignition switch ON signal | BCM (CAN) | Ignition relay | PCS-17 |
| | Vehicle speed signal | Unified meter and A/C amp. (CAN) | | |
| | Push-button ignition switch signal | Push-button ignition switch | | |

NOTE:

BCM controls the starter relay.

Component Parts Location

INFOID:000000001837875

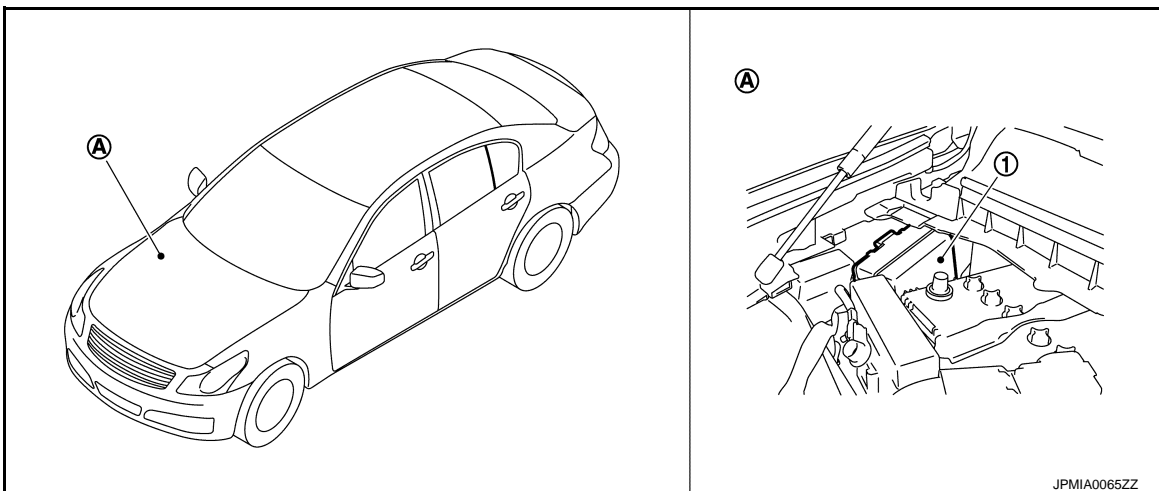

JPMIA0065ZZ

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

1. IPDM E/R
 - A. Engine room dash panel (RH)


POWER CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

POWER CONTROL SYSTEM

System Diagram

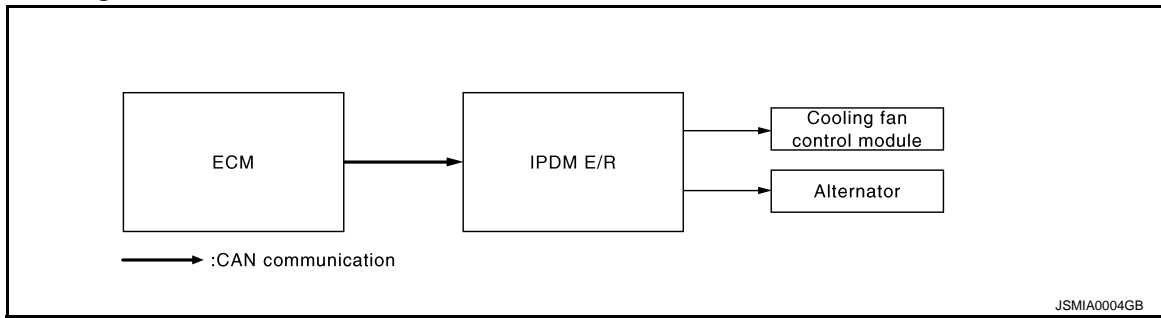

System Description

INFOID:000000001837877

COOLING FAN CONTROL


IPDM E/R outputs pulse duty signal (PWM signal) to the cooling fan control module according to the status of the cooling fan speed request signal received from ECM via CAN communication. Refer to [EC-66, "System Diagram"](#).

ALTERNATOR CONTROL

IPDM E/R outputs power generation command signal (PWM signal) to the alternator according to the status of the power generation command value signal received from ECM via CAN communication. Refer to [CHG-6, "System Diagram"](#).

Component Parts Location

INFOID:000000001837878

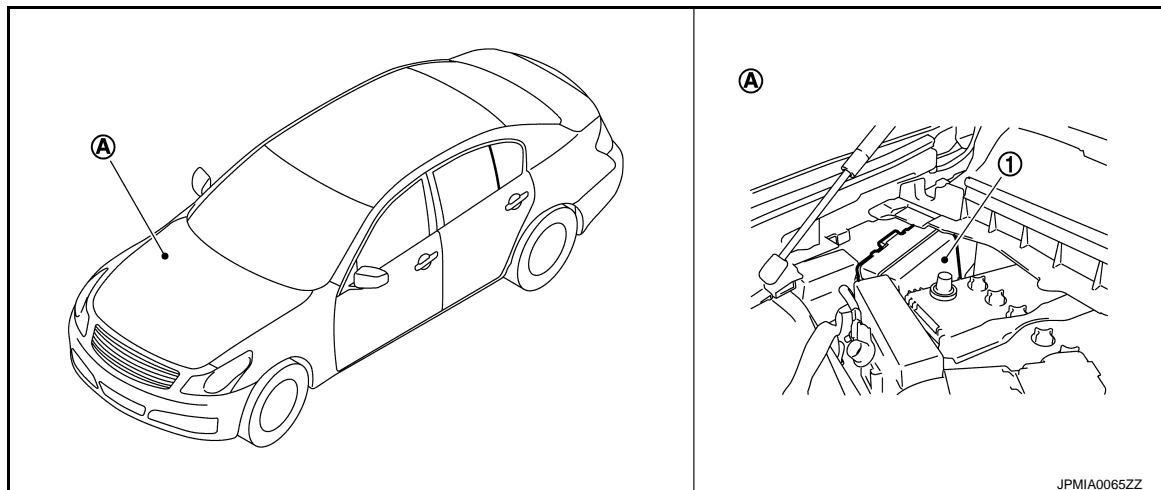

- 1. IPDM E/R
- A. Engine room dash panel (RH)

PCS

SIGNAL BUFFER SYSTEM


[IPDM E/R]

< SYSTEM DESCRIPTION >

SIGNAL BUFFER SYSTEM

System Diagram

INFOID:000000001837879

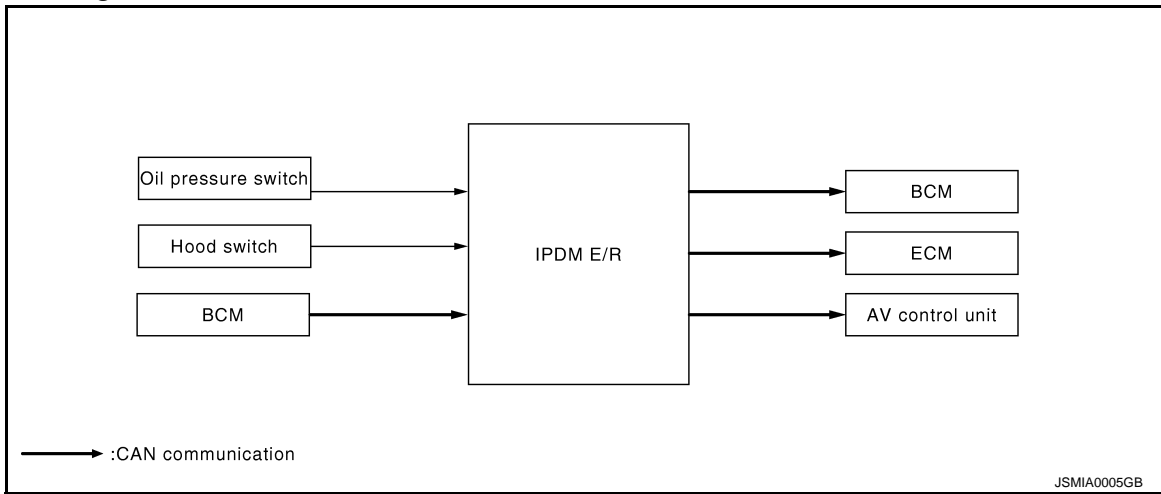


System Description

INFOID:000000001837880

- IPDM E/R reads the status of the oil pressure switch and transmits the oil pressure switch signal to BCM via CAN communication. Refer to [MWI-23, "WARNING LAMPS/INDICATOR LAMPS : System Diagram"](#).
- IPDM E/R reads the status of the hood switch and transmits the hood switch signal to BCM via CAN communication. Refer to [SEC-129, "Description"](#).
- IPDM E/R receives the rear window defogger status signal from BCM via CAN communication and transmits it to ECM and AV control unit via CAN communication. Refer to [DEF-4, "System Diagram"](#).

Component Parts Location


INFOID:000000001837881

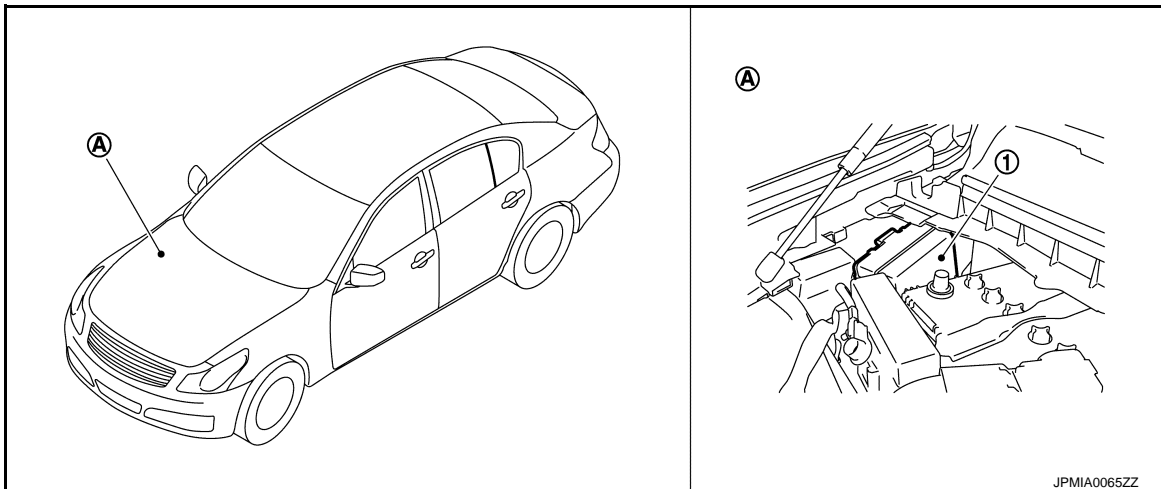

1. IPDM E/R
- A. Engine room dash panel (RH)

POWER CONSUMPTION CONTROL SYSTEM

System Diagram

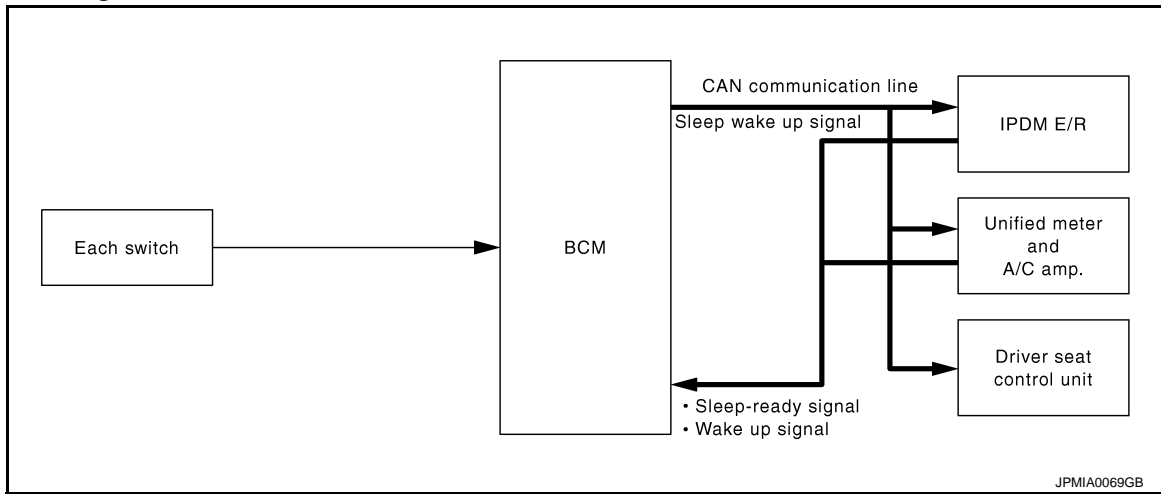

System Description

INFOID:000000001837883

OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

Normal mode (wake-up)

- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

Low power consumption mode (sleep)

- Low power consumption control is active.
- CAN transmission is stopped.

SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
 - Outputting signals to actuators
 - Switches or relays operating
 - Hood switch status is kept for 50 ms or more.
 - Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

WAKE-UP OPERATION

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
 - Ignition switch ON
 - The hood switch status changes.
 - An output request is received from a control unit via CAN communication.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS


POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

Component Parts Location

INFOID:000000001838009

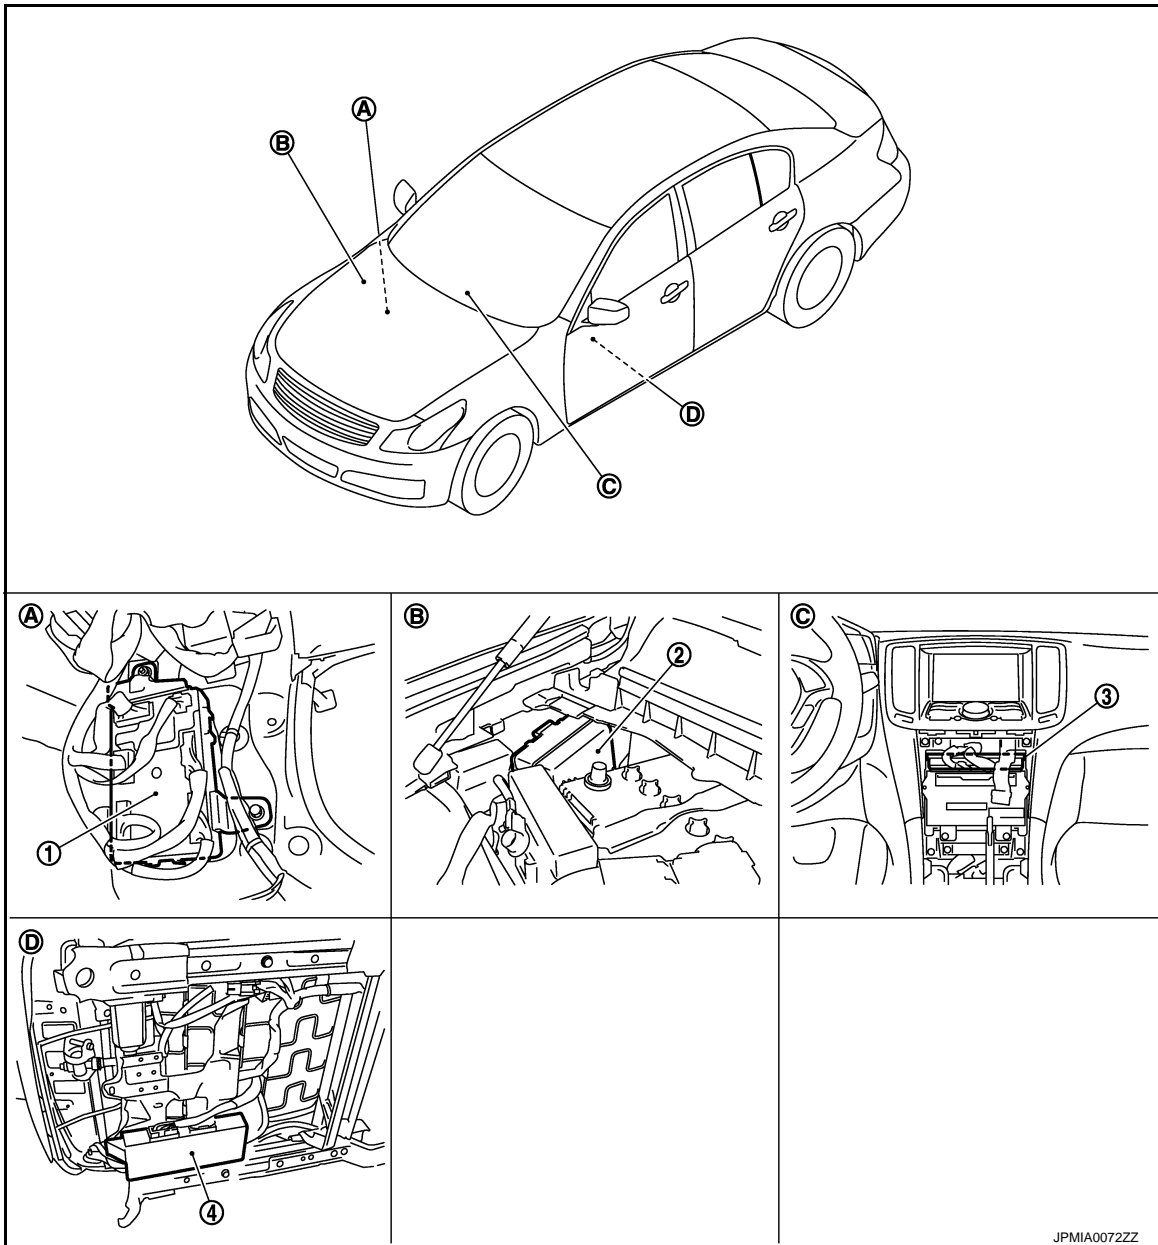

- | | | |
|---|--------------------------------|-------------------------------|
| 1. BCM | 2. IPDM E/R | 3. Unified meter and A/C amp. |
| 4. Driver seat control unit | | |
| A. Dash side lower (passenger side) | B. Engine room dash panel (RH) | C. Behind Cluster lid C |
| D. Backside of the seat cushion (driver seat) | | |

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000001837885

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Side maker lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)
NOTE:
 When auto active test is performed with hood opened, sprinkle water on windshield beforehand.
2. Turn ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.
CAUTION:
Close passenger door.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:


When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-68](#), "[Component Function Check](#)".
- Do not start the engine.

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 6 steps are repeated 3 times.

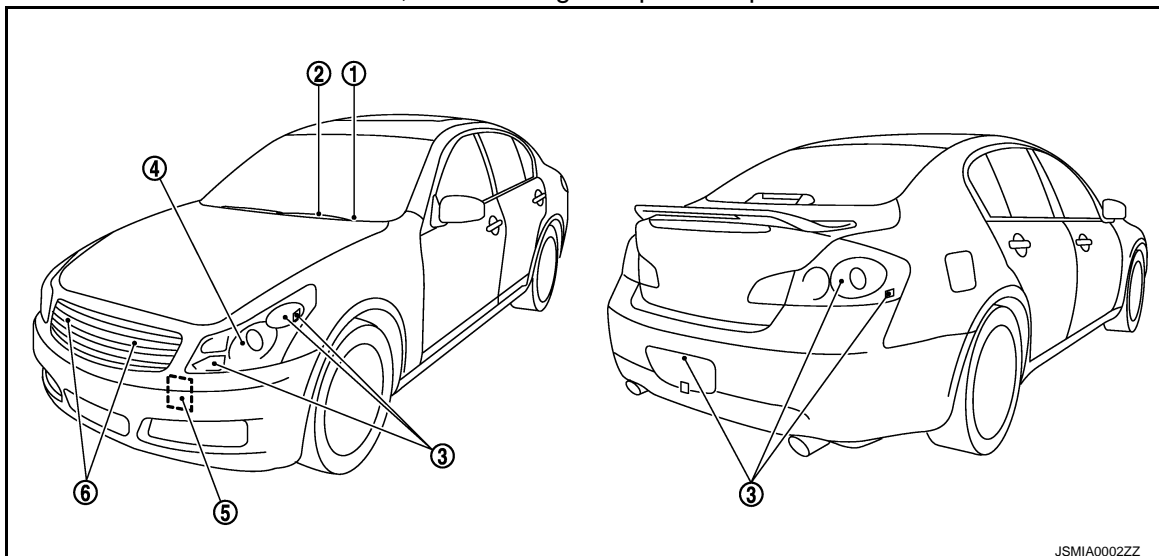

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

DIAGNOSIS SYSTEM (IPDM E/R)


< SYSTEM DESCRIPTION >

[IPDM E/R]

| Operation sequence | Inspection location | Operation |
|--------------------|---|--|
| 1 | Oil pressure warning lamp | Blinks continuously during operation of auto active test |
| 2 | Front wiper | LO for 5 seconds → HI for 5 seconds |
| 3 | <ul style="list-style-type: none"> • Parking lamps • License plate lamps • Side maker lamps • Tail lamps • Front fog lamps | 10 seconds |
| 4 | Headlamps | LO ↔ HI 5 times |
| 5 | A/C compressor (magnet clutch) | ON ↔ OFF 5 times |
| 6* | Cooling fan | MID for 5 seconds → HI for 5 seconds |

*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

Concept of auto active test

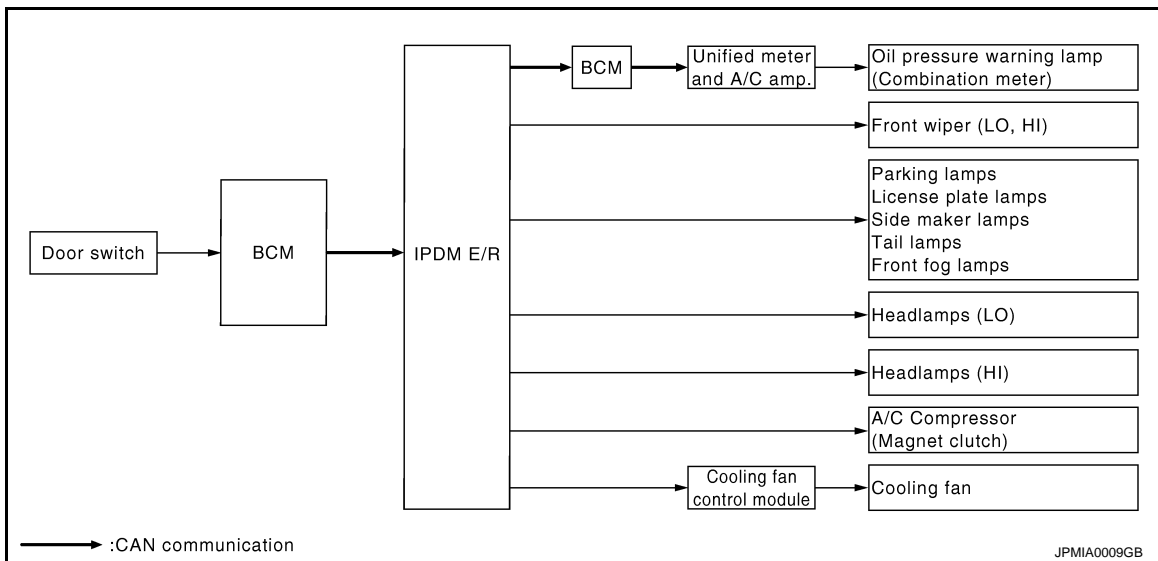

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

| Symptom | Inspection contents | Possible cause | |
|--|--|----------------|--|
| Any of the following components do not operate <ul style="list-style-type: none"> • Parking lamps • License plate lamps • Side maker lamps • Tail lamps • Front fog lamps • Headlamp (HI, LO) • Front wiper | Perform auto active test. Does the applicable system operate? | YES | BCM signal input circuit |
| | | NO | <ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R |

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

| Symptom | Inspection contents | Possible cause |
|--|--|---|
| A/C compressor does not operate | Perform auto active test. Does the magnet clutch operate? | YES <ul style="list-style-type: none"> • Unified meter and A/C amp. signal input circuit • CAN communication signal between unified meter and A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R |
| | | NO <ul style="list-style-type: none"> • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R |
| Oil pressure warning lamp does not operate | Perform auto active test. Does the oil pressure warning lamp blink? | YES <ul style="list-style-type: none"> • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R |
| | | NO <ul style="list-style-type: none"> • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and unified meter and A/C amp. • Combination meter |
| Cooling fan does not operate | Perform auto active test. Does the cooling fan operate? | YES <ul style="list-style-type: none"> • ECM signal input circuit • CAN communication signal between ECM and IPDM E/R |
| | | NO <ul style="list-style-type: none"> • Cooling fan • Harness or connector between cooling fan and cooling fan control module • Cooling fan control module • Harness or connector between IPDM E/R and cooling fan control module • Cooling fan relay • Harness or connector between IPDM E/R and cooling fan relay • IPDM E/R |

A
B
C
D
E
F
G
H
I
J
K
L

CONSULT-III Function (IPDM E/R)

INFOID:000000001837886

PCS

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

| Diagnosis mode | Description |
|--------------------------|---|
| Ecu Identification | Allows confirmation of IPDM E/R part number. |
| Self Diagnostic Result | Displays the diagnosis results judged by IPDM E/R. |
| Data Monitor | Displays the real-time input/output data from IPDM E/R input/output data. |
| Active Test | IPDM E/R can provide a drive signal to electronic components to check their operations. |
| CAN Diag Support Monitor | The results of transmit/receive diagnosis of CAN communication can be read. |

N
O
P

SELF DIAGNOSTIC RESULT

Refer to [PCS-32, "DTC Index"](#).

DATA MONITOR

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Monitor item

| Monitor Item [Unit] | MAIN SIG- NALS | Description |
|------------------------------------|-------------------|--|
| RAD FAN REQ [%] | × | Displays the value of the cooling fan speed signal received from ECM via CAN communication. |
| AC COMP REQ [Off/On] | × | Displays the status of the A/C compressor request signal received from ECM via CAN communication. |
| TAIL&CLR REQ [Off/On] | × | Displays the status of the position light request signal received from BCM via CAN communication. |
| HL LO REQ [Off/On] | × | Displays the status of the low beam request signal received from BCM via CAN communication. |
| HL HI REQ [Off/On] | × | Displays the status of the high beam request signal received from BCM via CAN communication. |
| FR FOG REQ [Off/On] | × | Displays the status of the front fog light request signal received from BCM via CAN communication. |
| FR WIP REQ [Stop/1LOW/Low/Hi] | × | Displays the status of the front wiper request signal received from BCM via CAN communication. |
| WIP AUTO STOP [STOP P/ACT P] | × | Displays the status of the front wiper auto stop signal judged by IPDM E/R. |
| WIP PROT [Off/BLOCK] | × | Displays the status of the front wiper fail-safe operation judged by IPDM E/R. |
| IGN RLY1 -REQ [Off/On] | | Displays the status of the ignition switch ON signal received from BCM via CAN communication. |
| IGN RLY [Off/On] | × | Displays the status of the ignition relay judged by IPDM E/R. |
| PUSH SW [Off/On] | | Displays the status of the push-button ignition switch judged by IPDM E/R. |
| INTER/NP SW [Off/On] | | Displays the status of the clutch interlock switch (M/T models) or A/T shift position (A/T models) judged by IPDM E/R. |
| ST RLY CONT [Off/On] | | Displays the status of the starter relay status signal received from BCM via CAN communication. |
| IHBT RLY -REQ [Off/On] | | Displays the status of the starter control relay signal received from BCM via CAN communication. |
| ST/INH RLY [Off/ ST /INH/UNKWN] | | Displays the status of the starter relay and starter control relay judged by IPDM E/R. |
| DETENT SW [Off/On] | | Displays the status of the A/T device (detention switch) judged by IPDM E/R. |
| S/L RLY -REQ [Off/On] | | Displays the status of the steering lock relay request received from BCM via CAN communication. |
| S/L STATE [LOCK/UNLK/UNKWN] | | Displays the status of the steering lock judged by IPDM E/R. |
| DTRL REQ [Off] | | NOTE: The item is indicated, but not monitored. |
| OIL P SW [Open/Close] | | Displays the status of the oil pressure switch judged by IPDM E/R. |
| HOOD SW [Off/On] | | Displays the status of the hood switch judged by IPDM E/R. |
| HL WASHER REQ [Off] | | NOTE: The item is indicated, but not monitored. |
| THFT HRN REQ [Off/On] | | Displays the status of the theft warning horn request signal received from BCM via CAN communication. |

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

| Monitor Item [Unit] | MAIN SIG- NALS | Description |
|-------------------------|-------------------|--|
| HORN CHIRP [Off/On] | | Displays the status of the horn reminder signal received from BCM via CAN communication. |
| CRNRNG LMP REQ [Off] | | NOTE: The item is indicated, but not monitored. |

ACTIVE TEST

Test item

| Test item | Operation | Description |
|------------------|-----------|---|
| CORNERING LAMP | Off | NOTE: The item is indicated, but cannot be tested. |
| | LH | |
| | RH | |
| HORN | On | Operates horn relay 1 and horn relay 2 for 20 ms. |
| FRONT WIPER | Off | OFF |
| | Lo | Operates the front wiper relay. |
| | Hi | Operates the front wiper relay and front wiper high relay. |
| MOTOR FAN | 1 | OFF |
| | 2 | Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module. |
| | 3 | Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module. |
| | 4 | Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module. |
| HEAD LAMP WASHER | On | NOTE: The item is indicated, but cannot be tested. |
| EXTERNAL LAMPS | Off | OFF |
| | TAIL | Operates the tail lamp relay. |
| | Lo | Operates the headlamp low relay. |
| | Hi | Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals. |
| | Fog | Operates the front fog lamp relay. |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000001837887

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-11, "CAN Communication Control Circuit"](#).

DTC Logic

INFOID:000000001837888

DTC DETECTION LOGIC

| DTC | CONSULT-III display description | DTC Detection Condition | Possible cause |
|-------|---------------------------------|--|--|
| U1000 | CAN COMM CIRCUIT | When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more | In CAN communication system, any item (or items) of the following listed below is malfunctioning. <ul style="list-style-type: none"> • Transmission • Receiving (ECM) • Receiving (BCM) • Receiving (Unified meter and A/C amp.) |

DTC CONFIRMATION PROCEDURE

Diagnosis Procedure

INFOID:000000001837889

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of IPDM E/R.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-19, "Trouble Diagnosis Flow Chart"](#).
 NO >> Refer to [GI-39, "Intermittent Incident"](#).

B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

B2098 IGNITION RELAY ON STUCK

Description

INFOID:000000001837890

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
 - Press and hold the push-button ignition switch for 2 seconds or more.
 - Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:000000001837891

DTC DETECTION LOGIC

| DTC | CONSULT-III display description | DTC Detection Condition | Possible causes |
|-------|---------------------------------|---|----------------------------|
| B2098 | IGN RELAY ON | The ignition relay ON is detected for 1 second at ignition switch OFF (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it) | Ignition relay malfunction |

Diagnosis Procedure

INFOID:000000001837892

1.PERFORM SELF DIAGNOSIS

1. Turn the ignition switch ON.
2. Erase "Self Diagnostic Result" of IPDM E/R.
3. Turn ignition switch OFF, and wait for 1 second or more.
4. Turn the ignition switch ON. Check "Self Diagnostic Result" again.

Is "IGN RELAY ON" displayed?

- YES >> Replace IPDM E/R.
NO >> Refer to [GI-39, "Intermittent Incident"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B2099 IGNITION RELAY OFF STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

B2099 IGNITION RELAY OFF STUCK

Description

INFOID:000000001837893

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
 - Press and hold the push-button ignition switch for 2 seconds or more.
 - Press the push-button ignition switch 3 times within 1.5 seconds.

NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

DTC Logic

INFOID:000000001837894

DTC DETECTION LOGIC

| DTC | CONSULT-III display description | DTC Detection Condition | Possible causes |
|-------|---------------------------------|---|----------------------------|
| B2099 | IGN RELAY OFF | The ignition relay OFF is detected for 1 second at ignition switch ON (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it) | Ignition relay malfunction |

NOTE:

When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the "DTC: B2099" may be detected.

Diagnosis Procedure

INFOID:000000001837895

1. PERFORM SELF DIAGNOSIS

1. Turn the ignition switch ON.
2. Erase "Self Diagnostic Result".
3. Turn ignition switch OFF.
4. Turn the ignition switch ON. Check "Self Diagnostic Result" again.

Is "IGN RELAY OFF" displayed?

- YES >> Replace IPDM E/R.
NO >> Refer to [GI-39, "Intermittent Incident"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000001837896

1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

| Signal name | Fuses and fusible link No. |
|----------------------|----------------------------|
| Battery power supply | C |
| | 50 |
| | 51 |

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and ground.

| Terminals | | Voltage (Approx.) |
|-----------|----------|-------------------|
| (+) | (-) | |
| IPDM E/R | | Battery voltage |
| Connector | Terminal | |
| E4 | 1 | |
| | 2 | |

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and ground.

| IPDM E/R | | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| E5 | 12 | | Existed |
| E6 | 41 | | |

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

ECU DIAGNOSIS INFORMATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000001837897

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item | Condition | | Value/Status |
|---------------|---|---|--------------|
| RAD FAN REQ | Engine idle speed | Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc. | 0 - 100 % |
| AC COMP REQ | Engine running | A/C switch OFF | Off |
| | | A/C switch ON (Compressor is operating) | On |
| TAIL&CLR REQ | Lighting switch OFF | | Off |
| | Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated) | | On |
| HL LO REQ | Lighting switch OFF | | Off |
| | Lighting switch 2ND HI or AUTO (Light is illuminated) | | On |
| HL HI REQ | Lighting switch OFF | | Off |
| | Lighting switch HI | | On |
| FR FOG REQ | Lighting switch 2ND or AUTO (Light is illuminated) | Front fog lamp switch OFF | Off |
| | | <ul style="list-style-type: none"> • Front fog lamp switch ON • Daytime running light activated (Only for Canada) | On |
| FR WIP REQ | Ignition switch ON | Front wiper switch OFF | Stop |
| | | Front wiper switch INT | 1LOW |
| | | Front wiper switch LO | Low |
| | | Front wiper switch HI | Hi |
| WIP AUTO STOP | Ignition switch ON | Front wiper stop position | STOP P |
| | | Any position other than front wiper stop position | ACT P |
| WIP PROT | Ignition switch ON | Front wiper operates normally | Off |
| | | Front wiper stops at fail-safe operation | BLOCK |
| IGN RLY1 -REQ | Ignition switch OFF or ACC | | Off |
| | Ignition switch ON | | On |
| IGN RLY | Ignition switch OFF or ACC | | Off |
| | Ignition switch ON | | On |
| PUSH SW | Release the push-button ignition switch | | Off |
| | Press the push-button ignition switch | | On |
| INTER/NP SW | Ignition switch ON | A/T selector lever in any position other than P or N (A/T models) | Off |
| | | Release clutch pedal (M/T models) | |
| | Ignition switch ON | A/T selector lever in P or N position (A/T models) | On |
| | | Depress clutch pedal (M/T models) | |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

| Monitor Item | Condition | Value/Status |
|----------------|---|--------------|
| ST RLY CONT | Ignition switch ON | Off |
| | At engine cranking | On |
| IHBT RLY -REQ | Ignition switch ON | Off |
| | At engine cranking | On |
| ST/INHI RLY | Ignition switch ON | Off |
| | At engine cranking | INHI → ST |
| | The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF | UNKWN |
| DETENT SW | Ignition switch ON <ul style="list-style-type: none"> • Press the selector button with A/T selector lever in P position • A/T selector lever in any position other than P | Off |
| | Release the A/T selector button with A/T selector lever in P position NOTE: Fixed On for M/T models | On |
| S/L RLY -REQ | None of the conditions below are present | Off |
| | <ul style="list-style-type: none"> • Open the driver door after the ignition switch is turned OFF (for a few seconds) • Press the push-button ignition switch when the steering lock is activated • Depress the clutch pedal when the steering lock is activated | On |
| | | |
| S/L STATE | Steering lock is activated | LOCK |
| | Steering lock is deactivated | UNLK |
| | [DTC: B210A] is detected | UNKWN |
| DTRL REQ | NOTE: The item is indicated, but not monitored. | Off |
| OIL P SW | Ignition switch OFF, ACC or engine running | Open |
| | Ignition switch ON | Close |
| HOOD SW | Close the hood | Off |
| | Open the hood | On |
| HL WASHER REQ | NOTE: The item is indicated, but not monitored. | Off |
| THFT HRN REQ | Not operation | Off |
| | <ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM | On |
| HORN CHIRP | Not operating | Off |
| | Door locking with Intelligent Key (horn chirp mode) | On |
| CRNRNG LMP REQ | NOTE: The item is indicated, but not monitored. | Off |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

TERMINAL LAYOUT

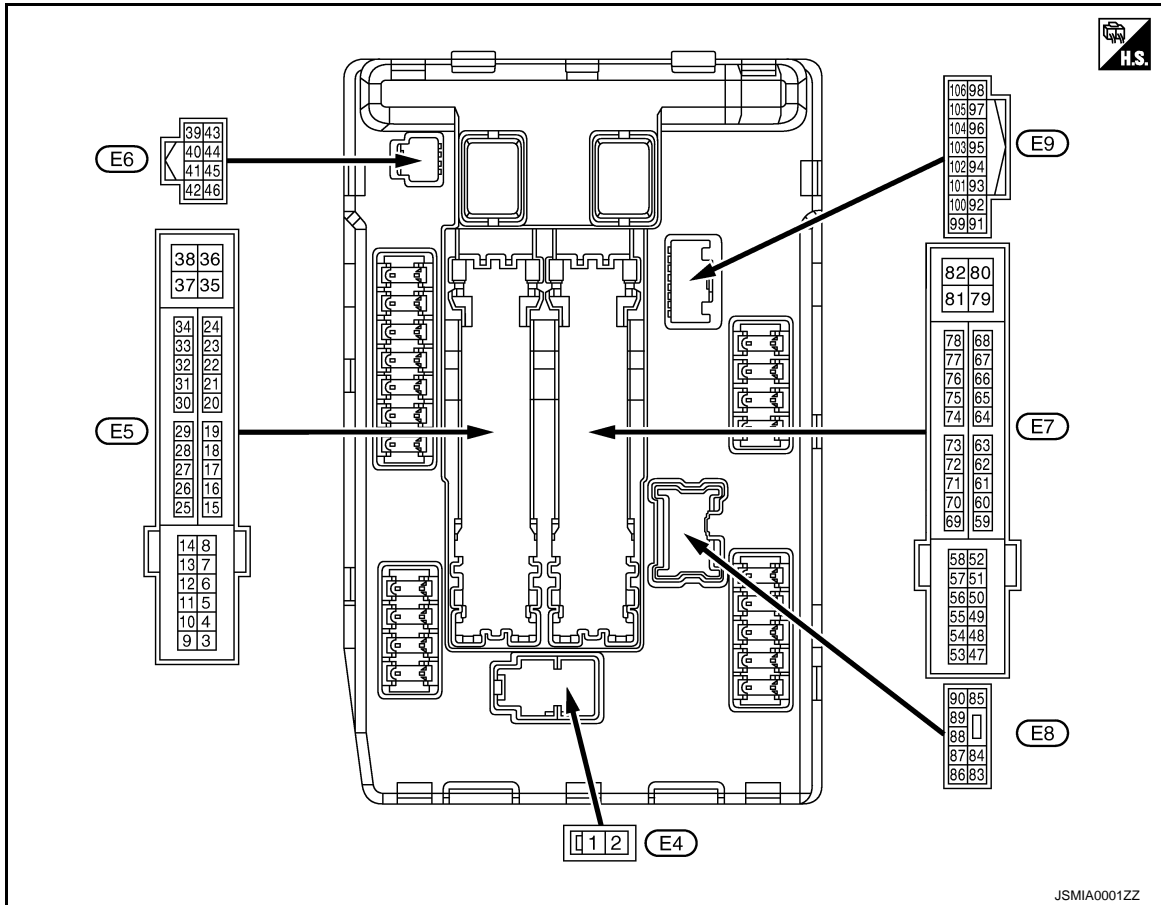

PHYSICAL VALUES

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|--|------------------|---------------------------|---|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 1 (W) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 2 (L) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 4 (V) | Ground | Front wiper LO | Output | Ignition switch OFF | Front wiper switch OFF | 0 V |
| | | | | Ignition switch ON | Front wiper switch LO | Battery voltage |
| 5 (L) | Ground | Front wiper HI | Output | Ignition switch OFF | Front wiper switch OFF | 0 V |
| | | | | Ignition switch ON | Front wiper switch HI | Battery voltage |
| 7 (R) | Ground | Tail, license plate lamps & interior lamps | Output | Ignition switch OFF | Lighting switch OFF | 0 V |
| | | | | Ignition switch ON | Lighting switch 1ST | Battery voltage |
| 11 (BR) | Ground | Steering lock unit power supply | Output | Ignition switch OFF | A few seconds after opening the driver door | Battery voltage |
| | | | | Ignition switch LOCK | Press the push-button ignition switch | Battery voltage |
| | | | | Ignition switch ACC or ON | | 0 V |
| 12 (B/W) | Ground | Ground | — | Ignition switch ON | | 0 V |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) | |
|------------------------------|--------|--------------------------------|------------------|---|---|--------------------|-----|
| | | Signal name | Input/ Output | | | | |
| + | - | | | | | | |
| 13 (Y) | Ground | Fuel pump power supply | Output | Approximately 1 second or more after turning the ignition switch ON | | 0 V | A |
| | | | | <ul style="list-style-type: none"> • Approximately 1 second after turning the ignition switch ON • Engine running | | Battery voltage | B |
| 16 (LG) | Ground | Front wiper auto stop | Input | Ignition switch ON | Front wiper stop position | 0 V | C |
| | | | | | Any position other than front wiper stop position | Battery voltage | D |
| 19 (W) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V | E |
| | | | | Ignition switch ON | | Battery voltage | |
| 25 (G) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V | |
| | | | | Ignition switch ON | | Battery voltage | |
| 26*1 (R) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V | F |
| | | | | Ignition switch ON | | Battery voltage | |
| 27 (O) | Ground | Ignition relay monitor | Input | Ignition switch OFF or ACC | | Battery voltage | G |
| | | | | Ignition switch ON | | 0 V | |
| 28 (L) | Ground | Push-button ignition switch | Input | Press the push-button ignition switch | | 0 V | H |
| | | | | Release the push-button ignition switch | | Battery voltage | |
| 30 (GR) | Ground | Starter relay control | Input | A/T models | A/T selector lever in any position other than P or N (Ignition switch ON) | 0 V | I |
| | | | | | A/T selector lever P or N (Ignition switch ON) | Battery voltage | |
| | | | | M/T models | Release the clutch pedal | 0 V | J |
| | | | | | Depress the clutch pedal | Battery voltage | |
| 32 (L) | Ground | Steering lock unit condition-1 | Input | Steering lock is activated | | 0 V | K |
| | | | | Steering lock is deactivated | | Battery voltage | |
| 33 (P) | Ground | Steering lock unit condition-2 | Input | Steering lock is activated | | Battery voltage | L |
| | | | | Steering lock is deactivated | | 0 V | |
| 36 (G) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage | |
| 39 (P) | — | CAN - L | Input/ Output | — | | — | PCS |
| 40 (L) | — | CAN - H | Input/ Output | — | | — | |
| 41 (B/W) | Ground | Ground | — | Ignition switch ON | | 0 V | N |
| 42 (Y) | Ground | Cooling fan relay control | Input | Ignition switch OFF or ACC | | 0 V | O |
| | | | | Ignition switch ON | | 0.7 V | |
| 43*2 (SB) | Ground | A/T device (Detention switch) | Input | Ignition switch ON | Press the A/T selector button (A/T selector lever P) | Battery voltage | P |
| | | | | | <ul style="list-style-type: none"> • A/T selector lever in any position other than P • Release the A/T selector button (A/T selector lever P) | | 0 V |
| 44 (W) | Ground | Horn relay control | Input | The horn is deactivated | | Battery voltage | |
| | | | | The horn is activated | | 0 V | |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >




[IPDM E/R]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---|---|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 45 (G) | Ground | Anti theft horn relay control | Input | The horn is deactivated | | Battery voltage |
| | | | | The horn is activated | | 0 V |
| 46 (BR) | Ground | Starter relay control | Input | A/T models | A/T selector lever in any position other than P or N (Ignition switch ON) | 0 V |
| | | | | | A/T selector lever P or N (Ignition switch ON) | Battery voltage |
| | | | | M/T models | Release the clutch pedal | 0 V |
| | | | | | Depress the clutch pedal | Battery voltage |
| 48 (L) | Ground | A/C relay power supply | Output | Engine running | A/C switch OFF | 0 V |
| | | | | | A/C switch ON (A/C compressor is operating) | Battery voltage |
| 49 (R) | Ground | ECM relay power supply | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | | 0 V |
| | | | | <ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) | | Battery voltage |
| 51 (G) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 53 (W) | Ground | ECM relay power supply | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | | 0 V |
| | | | | <ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) | | Battery voltage |
| 54 (R) | Ground | Throttle control motor relay power supply | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | | 0 V |
| | | | | <ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) | | Battery voltage |
| 55 (BR) | Ground | ECM power supply | Output | Ignition switch OFF | | Battery voltage |
| 56 (V) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 57 (R) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 58*2 (P) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 69 (W) | Ground | ECM relay control | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | | Battery voltage |
| | | | | <ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) | | 0 - 1.5 V |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]
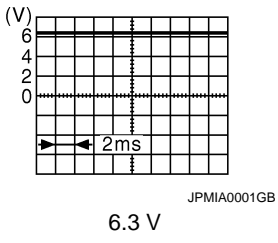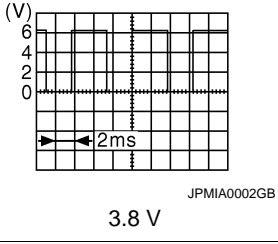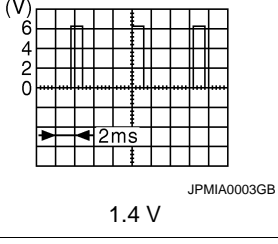
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|--------|---|---------------------|--|
| | | | | | | |
| + | - | | | | | |
| 70 (O) | Ground | Throttle control motor re- lay control | Output | Ignition switch ON → OFF | | 0 -1.0 V ↓ Battery voltage ↓ 0 V |
| | | | | Ignition switch ON | | 0 - 1.0 V |
| 73*3 (P) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 74 (G) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 75 (Y) | Ground | Oil pressure switch | Input | Ignition switch ON | Engine stopped | 0 V |
| | | | | | Engine running | Battery voltage |
| 76 (V) | Ground | Power generation com- mand signal | Output | Ignition switch ON | |  <p style="text-align: center;">6.3 V</p> |
| | | | | 40% is set on "ACTIVE TEST", "AL- TERNATOR DUTY" of "ENGINE" | |  <p style="text-align: center;">3.8 V</p> |
| | | | | 80% is set on "ACTIVE TEST", "AL- TERNATOR DUTY" of "ENGINE" | |  <p style="text-align: center;">1.4 V</p> |
| 77 (L) | Ground | Fuel pump relay control | Output | <ul style="list-style-type: none"> • Approximately 1 second after turning the ignition switch ON • Engine running | | 0 - 1.0 V |
| | | | | Approximately 1 second or more after turning the ignition switch ON | | Battery voltage |
| 80 (W) | Ground | Starter motor | Output | At engine cranking | | Battery voltage |
| 83 (R) | Ground | Headlamp LO (RH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | Lighting switch 2ND | Battery voltage |
| 84 (P) | Ground | Headlamp LO (LH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | Lighting switch 2ND | Battery voltage |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|--------------------------|------------------|---------------------|---|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 86 (W) | Ground | Front fog lamp (RH) | Output | Lighting switch 2ND | <ul style="list-style-type: none"> • Front fog lamp switch ON • Daytime running light activated (Only for Canada) | Battery voltage |
| | | | | | Front fog lamp switch OFF | 0 V |
| 87 (L) | Ground | Front fog lamp (LH) | Output | Lighting switch 2ND | <ul style="list-style-type: none"> • Front fog lamp switch ON • Daytime running light activated (Only for Canada) | Battery voltage |
| | | | | | Front fog lamp switch OFF | 0 V |
| 88 (G) | Ground | Washer pump power supply | Output | Ignition switch ON | | Battery voltage |
| 89 (BR) | Ground | Headlamp HI (RH) | Output | Ignition switch ON | <ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS | Battery voltage |
| | | | | | Lighting switch OFF | 0 V |
| 90 (P) | Ground | Headlamp HI (LH) | Output | Ignition switch ON | <ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS | Battery voltage |
| | | | | | Lighting switch OFF | 0 V |
| 91 (P) | Ground | Parking lamp (RH) | Output | Ignition switch ON | Lighting switch 1ST | Battery voltage |
| | | | | | Lighting switch OFF | 0 V |
| 92 (O) | Ground | Parking lamp (LH) | Output | Ignition switch ON | Lighting switch 1ST | Battery voltage |
| | | | | | Lighting switch OFF | 0 V |
| 97 (V) | Ground | Cooling fan control | Output | Engine idling | | 0 - 5 V |
| 104 (LG) | Ground | Hood switch | Input | Close the hood | | Battery voltage |
| | | | | Open the hood | | 0 V |

*1: Only for the models with ICC system

*2: A/T models only

*3: M/T models only


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Wiring Diagram - IPDM E/R -

INFOID:000000001837898

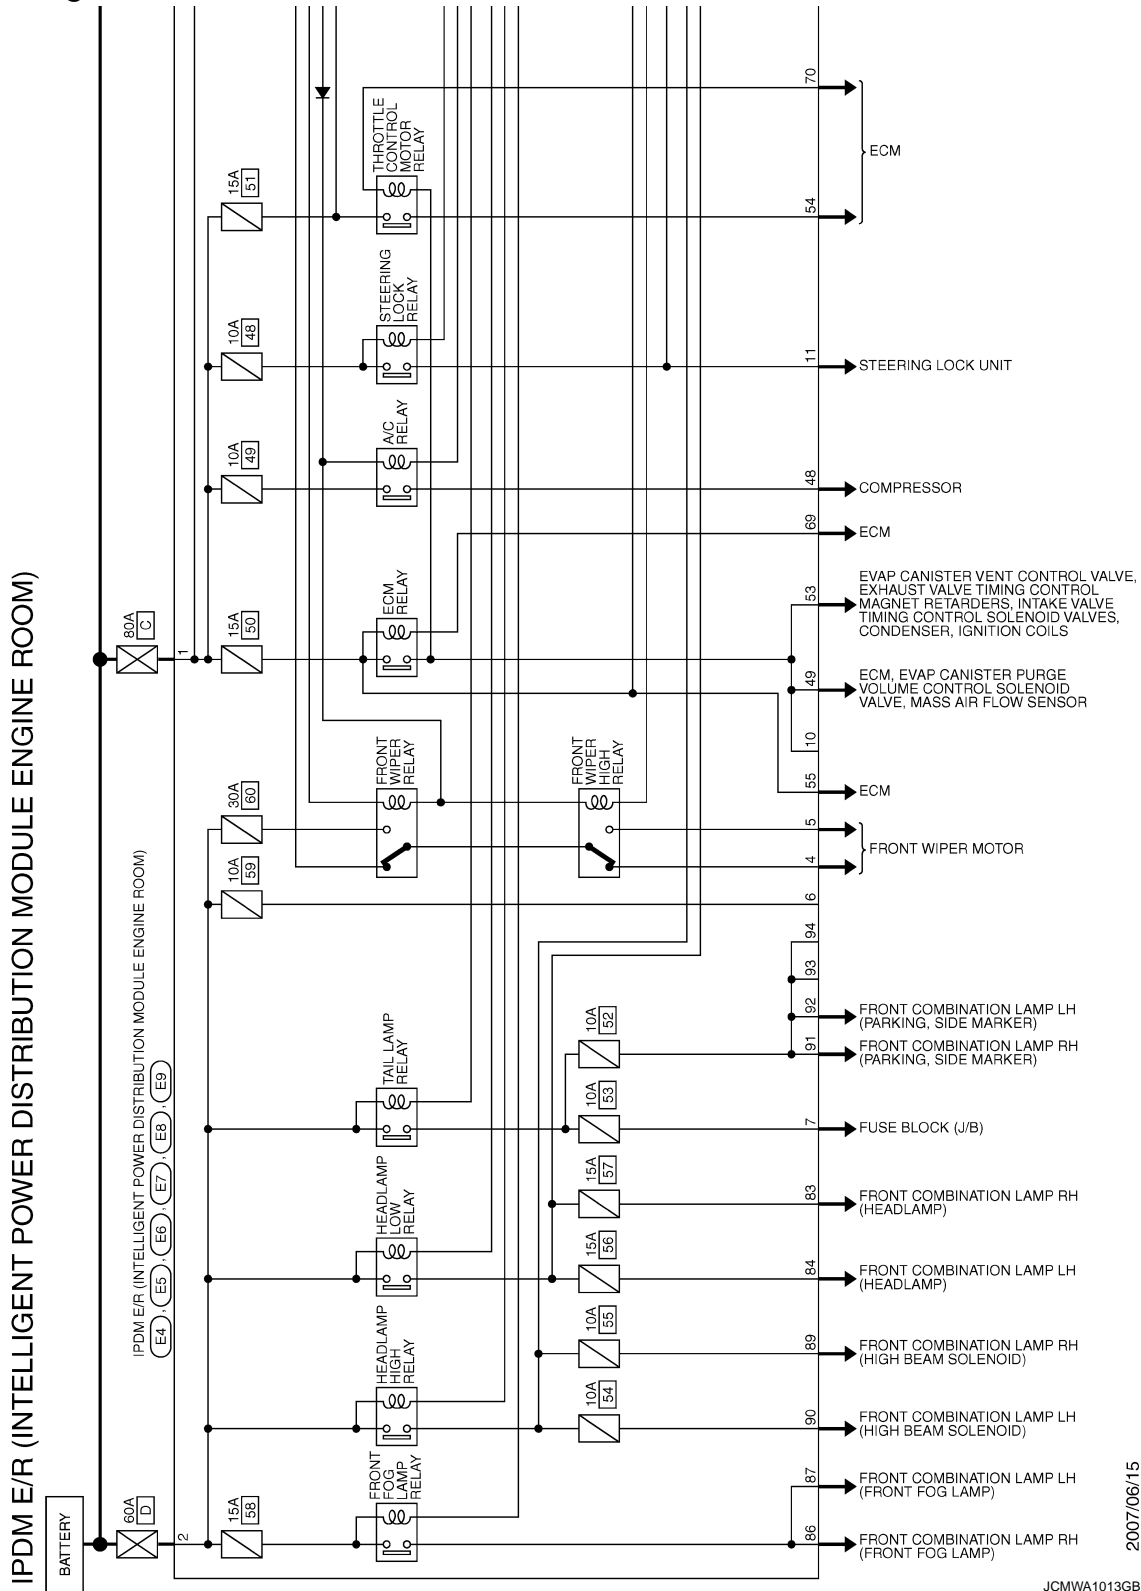

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS


2007/06/15

JCMWA1013GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

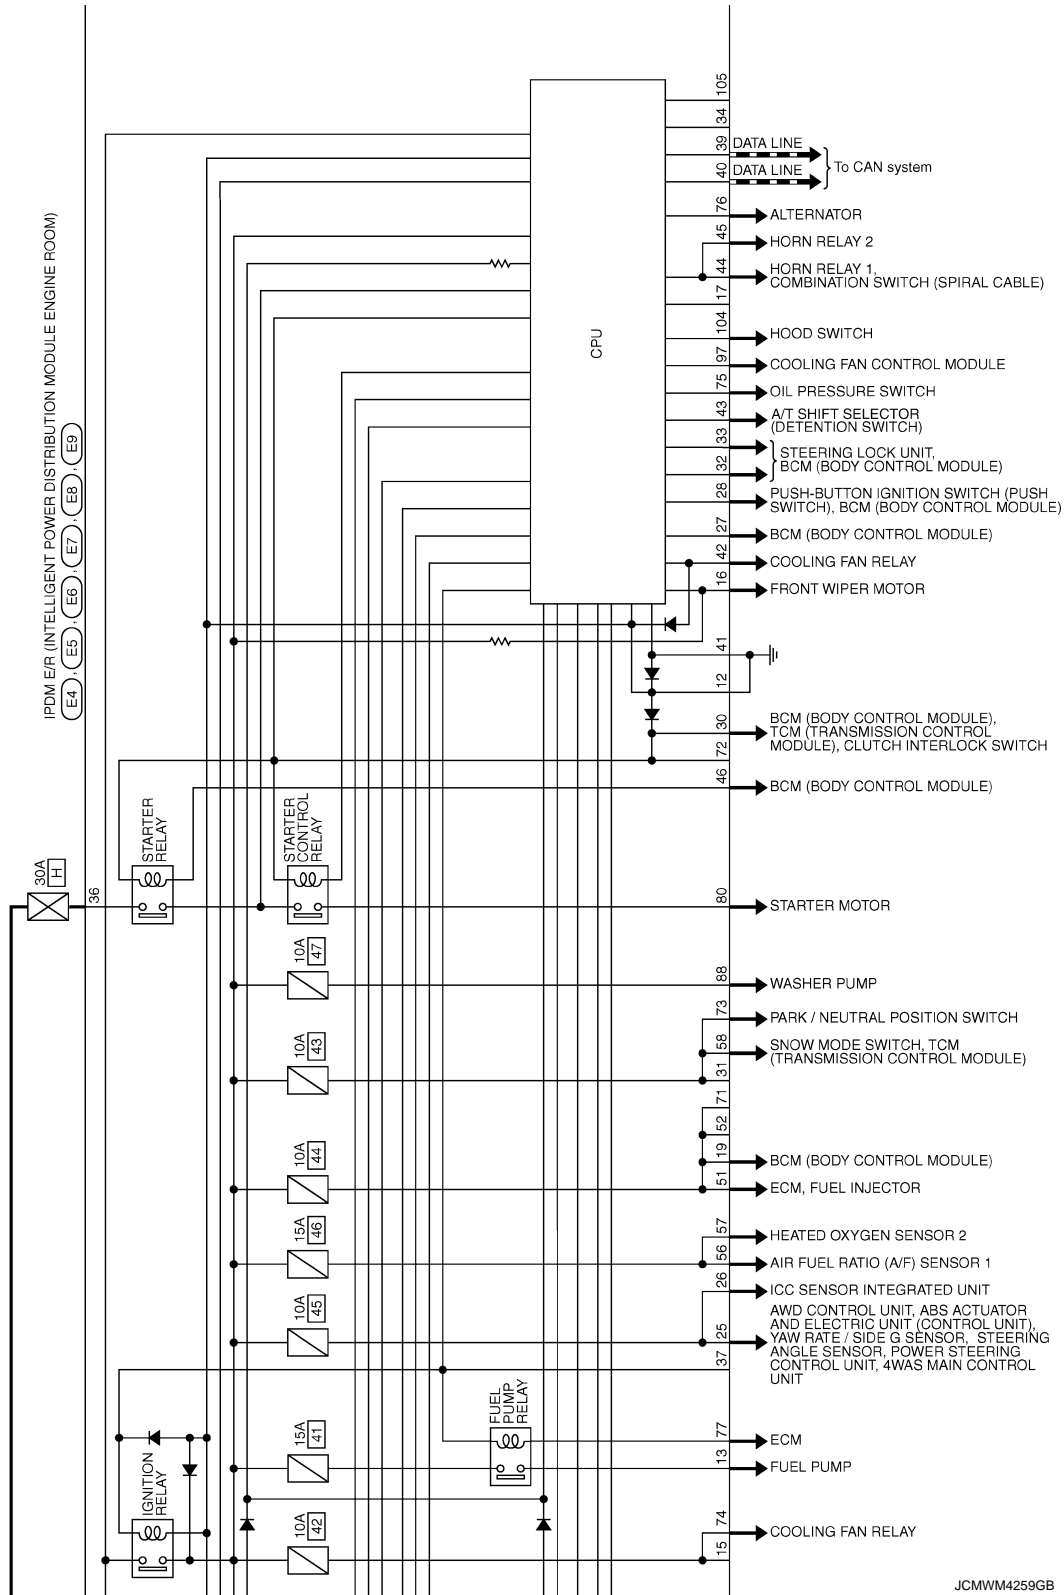

JCMWM4259GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

IPDM E/R
 (INTELLIGENT POWER
 DISTRIBUTION MODULE
 ENGINE ROOM)
 E4, E5, E6,
 E7, E8, E9



PCS

JCMWA1015GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

| | |
|----------------|--|
| Connector No. | E4 |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | L02FB-MC |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | W | - |
| 2 | L | - |

| | |
|----------------|--|
| Connector No. | E5 |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH20FW-CS12-M4-TV |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 4 | V | - |
| 5 | L | - |
| 7 | R | - |
| 11 | BR | - |
| 12 | B/W | - |
| 13 | Y | - |
| 16 | LG | - |
| 19 | W | - |
| 25 | G | - |
| 26 | R | - |
| 27 | O | - |


| | | |
|----|----|---|
| 28 | L | - |
| 30 | GR | - |
| 32 | L | - |
| 33 | P | - |
| 36 | G | - |

| | |
|----------------|--|
| Connector No. | E6 |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH08FW-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 39 | P | - |
| 40 | L | - |
| 41 | B/W | - |
| 42 | Y | - |
| 43 | SB | - |
| 44 | W | - |
| 45 | G | - |
| 46 | BR | - |


| | |
|----------------|--|
| Connector No. | E7 |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH20FW-CS12-M4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 48 | L | - |
| 49 | R | - |
| 51 | G | - |
| 53 | W | - |
| 54 | R | - |
| 55 | BR | - |
| 56 | V | - |
| 57 | R | - |
| 58 | P | - |
| 68 | W | - |
| 70 | O | - |

| | | |
|----|---|---|
| 72 | P | - |
| 74 | G | - |
| 75 | Y | - |
| 76 | V | - |
| 77 | L | - |
| 80 | W | - |

| | |
|----------------|--|
| Connector No. | E8 |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | NS30FP-CS |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 83 | R | - |
| 84 | P | - |
| 86 | W | - |
| 87 | L | - |
| 88 | G | - |
| 89 | BR | - |
| 90 | P | - |

| | |
|----------------|--|
| Connector No. | E9 |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Type | TH10FP-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 91 | P | - |
| 92 | O | - |
| 97 | V | - |
| 104 | LG | - |

Fail Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

JCMWA0940GB

INFOID:000000001837899

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

| Control part | Fail-safe operation |
|----------------|---|
| Cooling fan | <ul style="list-style-type: none"> Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF |
| A/C compressor | A/C relay OFF |
| Alternator | Outputs the power generation command signal (PWM signal) 0% |

If No CAN Communication Is Available With BCM

| Control part | Fail-safe operation |
|---|--|
| Headlamp | <ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF |
| <ul style="list-style-type: none"> Parking lamps License plate lamps Side maker lamps Illuminations Tail lamps | <ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF |
| Front wiper | <ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating. |
| Front fog lamps | Front fog lamp relay OFF |
| Horn | Horn OFF |
| Ignition relay | The status just before activation of fail-safe is maintained. |
| Starter motor | Starter control relay OFF |
| Steering lock unit | Steering lock relay OFF |

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

| DTC | Ignition switch | Ignition relay | Tail lamp relay |
|----------------------|-----------------|----------------|-----------------|
| — | ON | ON | — |
| — | OFF | OFF | — |
| B2098: IGN RELAY ON | OFF | ON | ON (10 minutes) |
| B2099: IGN RELAY OFF | ON | OFF | — |

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

| Ignition switch | Front wiper switch | Front wiper auto stop signal |
|-----------------|--------------------|--|
| ON | OFF | The front wiper auto stop signal (stop position) cannot be input for 10 seconds. |
| | ON | The front wiper auto stop signal does not change for 10 seconds. |

NOTE:

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

[IPDM E/R]

< ECU DIAGNOSIS INFORMATION >

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000001837900

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

| CONSULT display | Fail-safe | Refer to |
|--|-----------|-------------------------|
| No DTC is detected. further testing may be required. | — | — |
| U1000: CAN COMM CIRCUIT | × | PCS-16 |
| B2098: IGN RELAY ON | × | PCS-17 |
| B2099: IGN RELAY OFF | — | PCS-18 |
| B2108: STRG LCK RELAY ON | — | SEC-101 |
| B2109: STRG LCK RELAY OFF | — | SEC-102 |
| B210A: STRG LCK STATE SW | — | SEC-103 |
| B210B: START CONT RLY ON | — | SEC-107 |
| B210C: START CONT RLY OFF | — | SEC-108 |
| B210D: STARTER RELAY ON | — | SEC-109 |
| B210E: STARTER RELAY OFF | — | SEC-110 |
| B210F: INTRLCK/PNP SW ON | — | SEC-113 |
| B2110: INTRLCK/PNP SW OFF | — | SEC-117 |

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000004757576

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000003160822

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

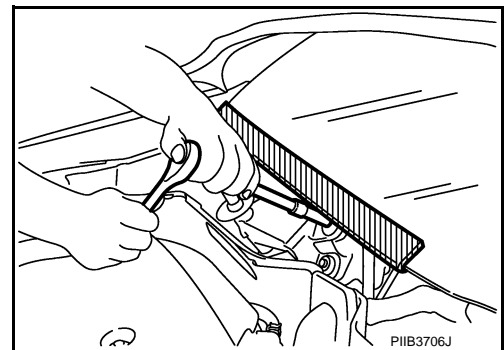


A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

REMOVAL AND INSTALLATION

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Exploded View

INFOID:000000001837902

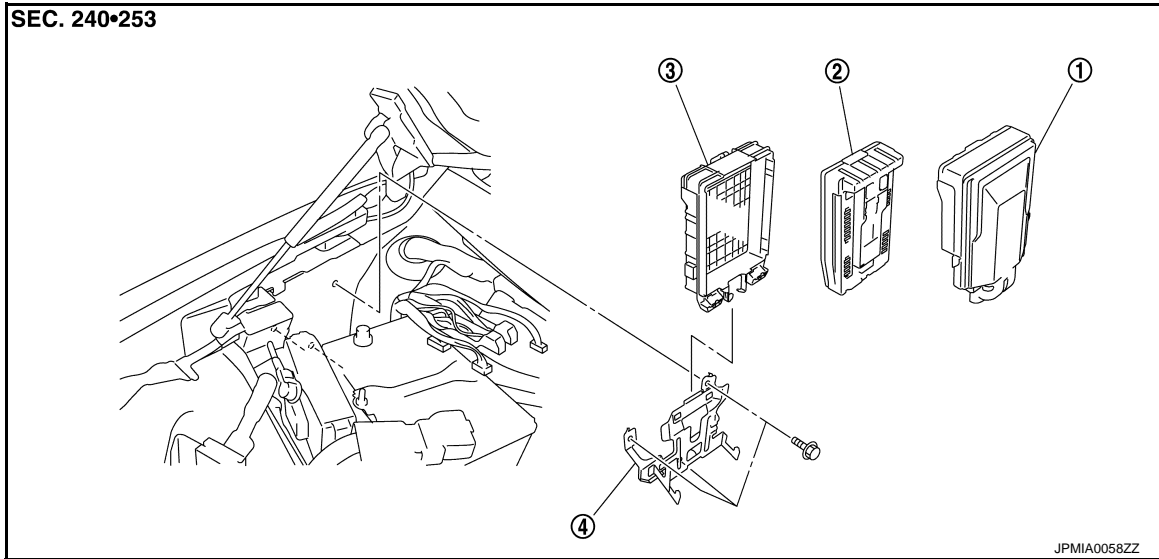

1. IPDM E/R cover A

2. IPDM E/R

3. IPDM E/R cover B

4. Bracket

Removal and Installation


INFOID:000000001837903

CAUTION:

IPDM E/R integrated relays are not serviceable parts, and must not be removed from the unit.

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Remove cowl top cover (RH). Refer to [EXT-20, "Exploded View"](#).
3. Pull up the IPDM E/R assembly while pressing the pawl (A) on the back of the IPDM E/R cover B (1).

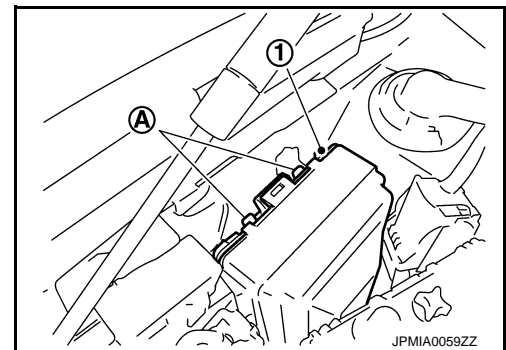


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


[IPDM E/R]

< REMOVAL AND INSTALLATION >

4. Remove the IPDM E/R cover A while pressing the pawl (A) at the lower end of the IPDM E/R cover A (1).
5. Disconnect the harness connector and remove IPDM E/R (2).

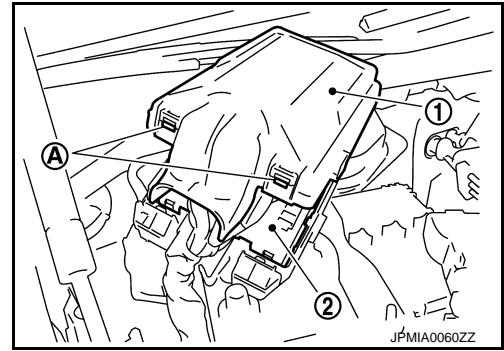

6. Remove the bolt (A) and remove the bracket (1) from the vehicle.

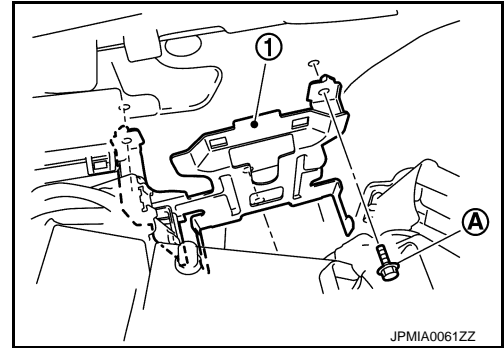

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000003036013

OVERALL SEQUENCE

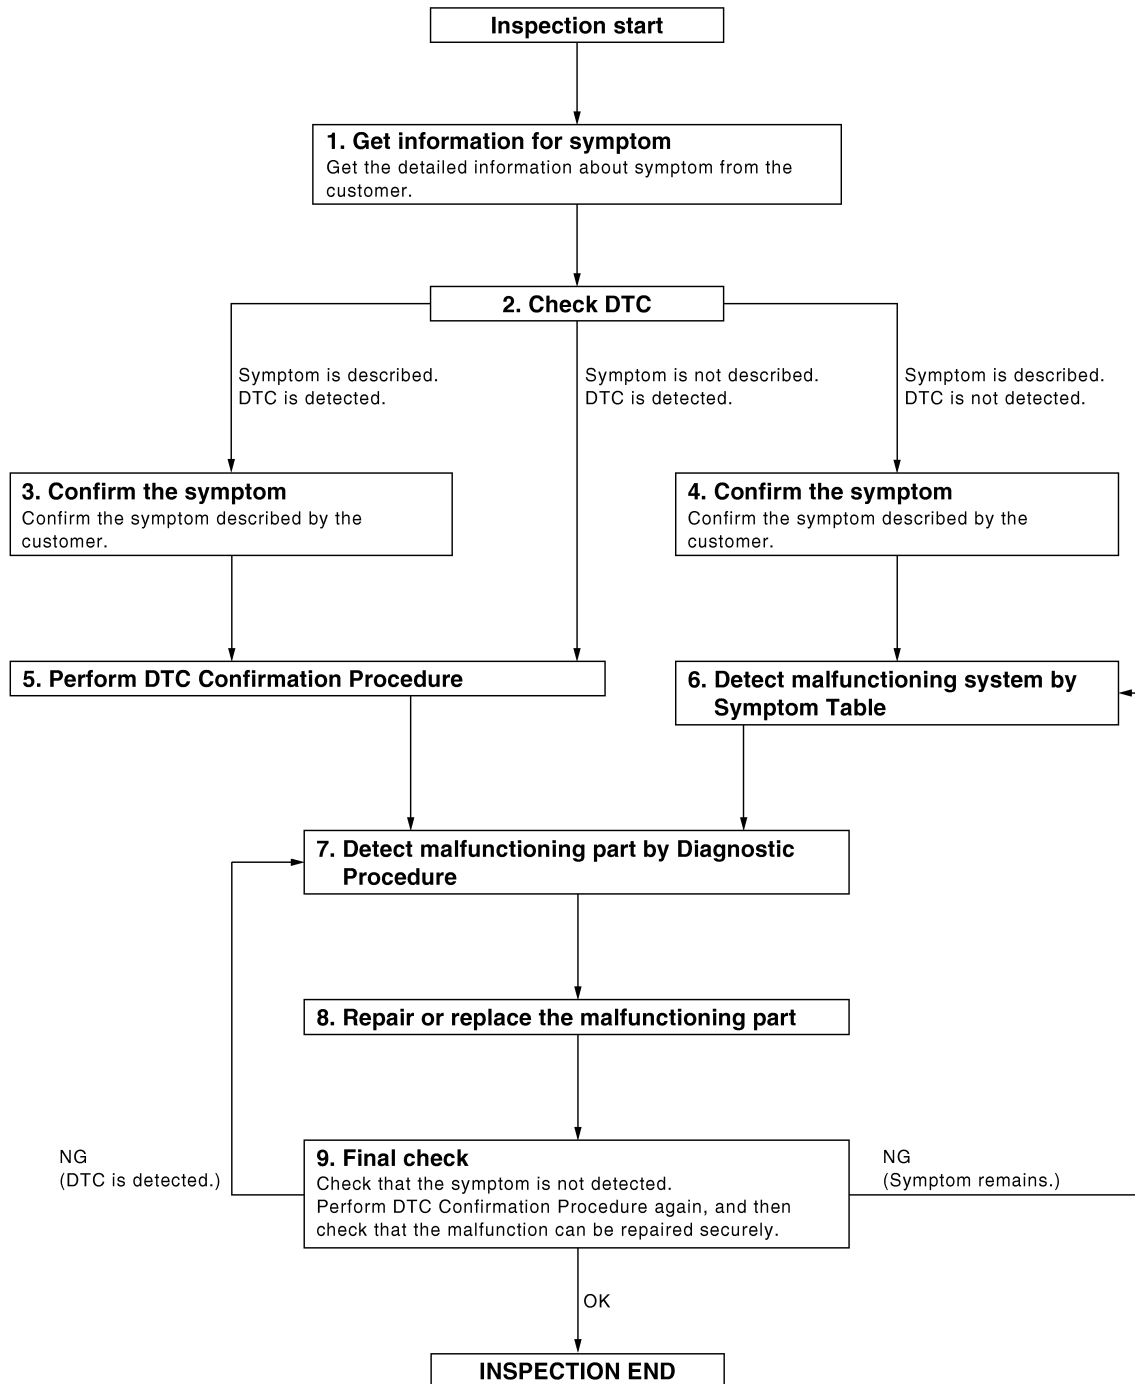

DETAILED FLOW

JMKIA0676GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

1.GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2.CHECK DTC

1. Check DTC for BCM and IPDM E/R.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out with CONSULT-III.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT-III to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the detected DTC, and then check that DTC is detected again.

At this time, always connect CONSULT-III to the vehicle, and check diagnostic results in real time.

If two or more DTCs are detected, refer to [PCS-105. "DTC Inspection Priority Chart"](#), and determine trouble diagnosis order.

NOTE:

Perform Component Function Check if DTC Confirmation Procedure is not included in Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC Confirmation Procedure.

Is DTC detected?

YES >> GO TO 7.

NO >> Refer to [GI-39. "Intermittent Incident"](#).

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to [SEC-220. "Symptom Table"](#) based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 7.

7.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:

The Diagnostic Procedure described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check voltage of related BCM terminals using CONSULT-III.

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC was detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction has been repaired securely.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 7.

YES (Symptom remains)>>GO TO 6.

NO >> **INSPECTION END**

POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

SYSTEM DESCRIPTION

POWER DISTRIBUTION SYSTEM

System Description

INFOID:000000002996214

INPUT/OUTPUT SIGNAL CHART

| Switch | Input Signal to BCM | BCM system | Actuator |
|--|---------------------|---------------------------|--|
| Push-button ignition switch | Push switch | Power distribution system | <ul style="list-style-type: none">• Ignition relay (IPDM E/R)• Ignition relay (fuse block)• ACC relay• Blower relay |
| AT shift selector (A/T models) | P range | | |
| Transmission range switch (A/T models) | N, P range | | |
| Stop lamp switch (A/T models) | Brake ON/OFF | | |
| Clutch interlock switch (M/T models) | Clutch ON/OFF | | |

SYSTEM DESCRIPTION

- PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the push-button ignition switch and performs the power distribution to each power circuit. This system is used instead of the mechanical power supply changing mechanism with the operation of the conventional key cylinder.
 - The push-button ignition switch can be operated when Intelligent Key is in the following condition. Refer to Engine Start Function for details.
 - Intelligent Key is in the detection area of the interior antenna
 - Insert Intelligent Key in to the key slot
 - The push-button ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the following relays to supply power to each power circuit.
 - Ignition relay (inside IPDM E/R)
 - Ignition relay (inside fuse block)
 - ACC relay
 - Blower fan relay
- NOTE:**
The engine switch operation changes due to the conditions of brake pedal, A/T selector lever and vehicle speed.
- The power supply position can be confirmed with the lighting of the indicators near the push-button ignition switch.

BATTERY SAVER SYSTEM

When all the following conditions are met for 60 minutes, the battery saver system will cut off the power supply to prevent battery discharge.

- The ignition switch is in the ACC position
- All doors are closed
- A/T selector lever is in the P position (A/T models)

Reset Condition of Battery Saver System

A/T models

In order to prevent the battery from discharging, the battery saver system will cut off the power supply when all doors are closed, the selector lever is on P position and the ignition switch is left on ACC position for 1 hour. If any of the following conditions are met the battery saver system is released and the steering will change automatically to lock position from OFF position.

- Opening any door
- Operating with request switch on door lock
- Operating with Intelligent Key on door lock

Press push-button ignition switch and ignition switch will change to ACC position from OFF position.

M/T models

If any of the conditions above is met the battery saver system is released but the steering will not lock. In this case, the steering operation OFF to LOCK is prohibited.

STEERING LOCK OPERATION

Steering is locked by steering lock unit when ignition switch is in the OFF position, A/T selector lever is in the P position and any of the following conditions are met.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

POWER DISTRIBUTION SYSTEM

[POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

- Opening door
- Closing door
- Door is locked with request switch
- Door is locked with Intelligent Key

PUSH-BUTTON IGNITION SWITCH OPERATION PROCEDURE

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when it is inserted to the key slot, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,

A/T models

- Brake pedal operating condition
- A/T selector lever position
- Vehicle speed

M/T models

- Clutch pedal operating condition
- Vehicle speed

- Unless each start condition is fulfilled, the engine will not respond regardless of how many times the engine switch is pressed. At that time, illumination repeats the position in the order of LOCK→ACC→ON→OFF.

| Power supply position | Engine start/stop condition | | Push-button ignition switch operation frequency |
|---|---|--|--|
| | •Brake pedal (A/T models) •Clutch pedal (M/T models) | A/T selector lever position (A/T models) | |
| LOCK → ACC | Not depressed | Any position | 1 |
| LOCK → ACC → ON | Not depressed | Any position | 2 |
| LOCK → ACC → ON → OFF | Not depressed | Any position | 3 |
| LOCK → START ACC → START ON → START (Engine start) | Depressed | P or N position (*1) | 1 [If the switch is pressed once, the engine starts from any power supply position (LOCK, ACC, and ON)] |
| Engine is running → OFF (Engine stop) | — | Any position | 1 |
| Engine is running → ACC (Engine stop) | — | Any position other than P (*2) | 1 |
| Engine stall return operation while driving | — | N position | 1 |

*1: When the A/T selector lever position is N position, the engine start condition is different according to the vehicle speed.

- At vehicle speed of less than 4 km/h (2.5MPH), the engine can start only when the brake pedal is depressed.
- At vehicle speed of 4 km/h (2.5MPH) or more, the engine can start even if the brake pedal is not depressed. (It is the same as "Engine stall return operation while driving".)

*2: When the A/T selector lever position is in any position other than P position and when the vehicle speed is 5 km/h (3.1MPH) or more, the engine stop condition is different.

- Press and hold the push-button ignition switch for 2 seconds or more. (When the push-button ignition switch is pressed for too short a time, the operation may be invalid, so properly press and hold to prevent an incorrect operation.)
- Press the push-button ignition switch 3 times or more within 1.5 seconds. (Emergency stop operation)


POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Component Parts Location

INFOID:00000002996215

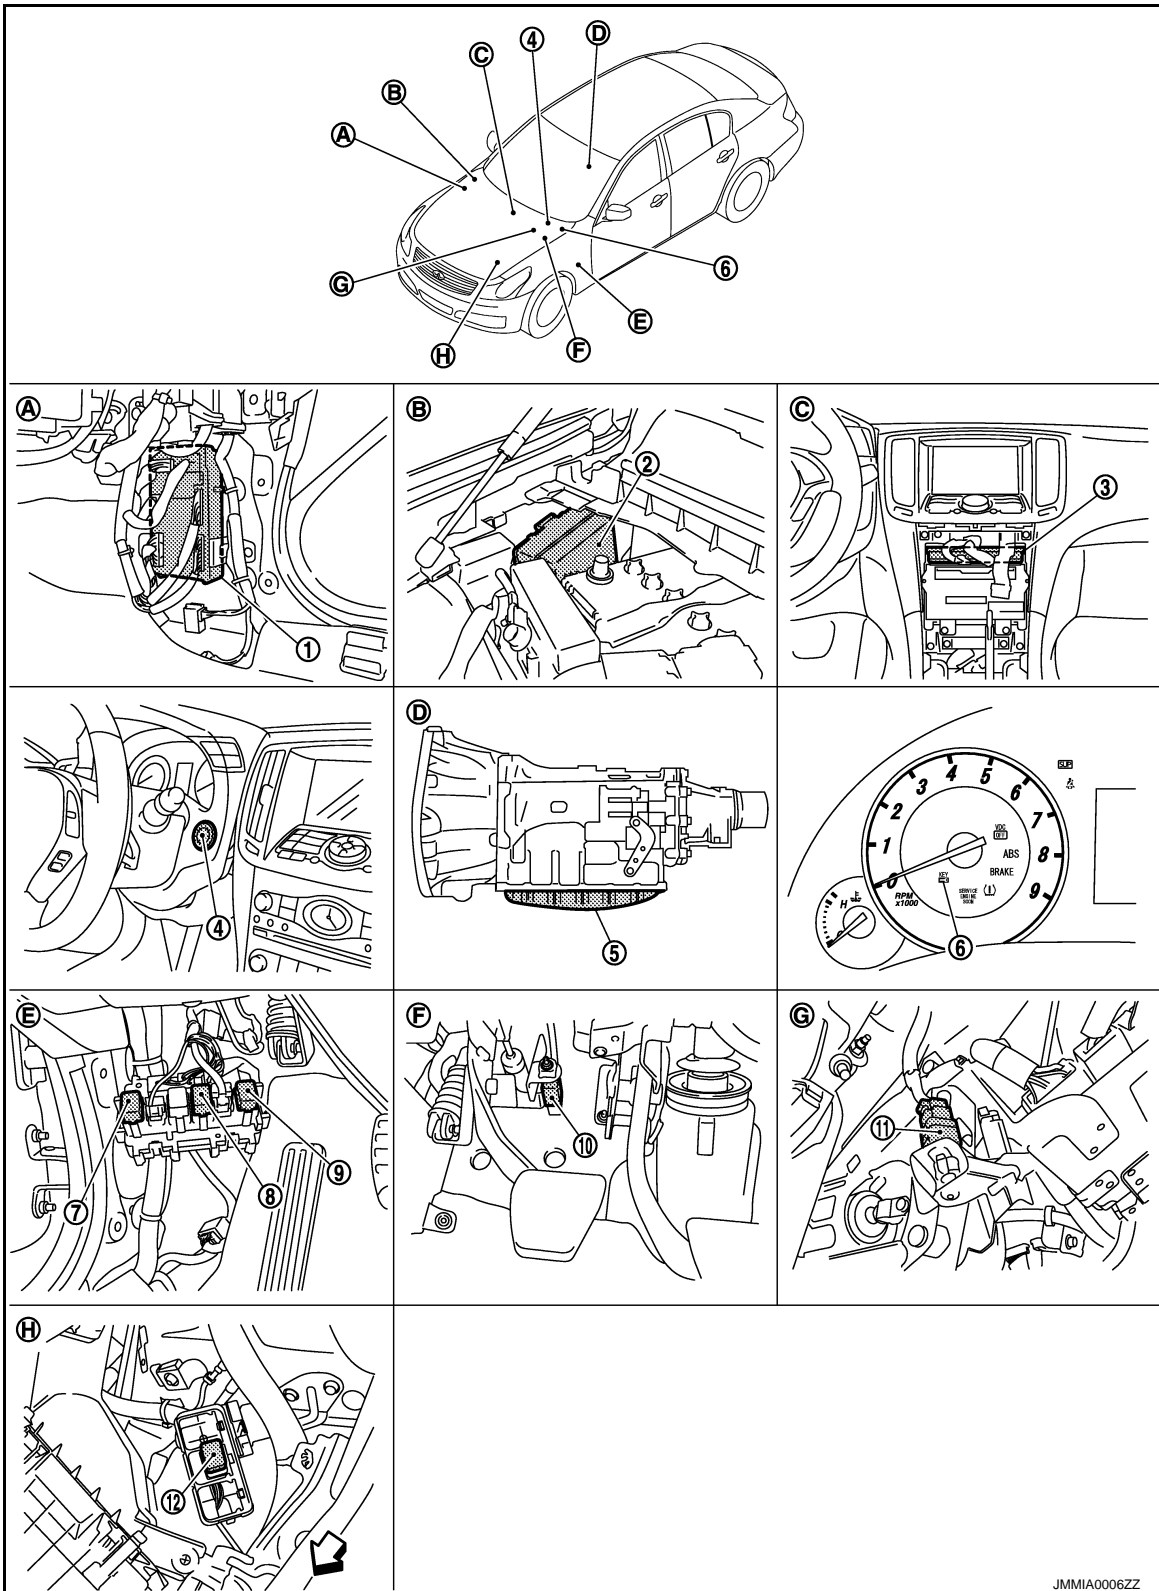

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

- | | | |
|-------------------------------------|---------------------------|---|
| 1. BCM M118, M119, M121, M122, M123 | 2. IPDM E/R E5, E6, E7 | 3. Unified meter and A/C AMP. M66, M67 |
| 4. Push button ignition switch M50 | 5. TCM F151 | 6. Combination meter (Key warning lamp) M53 |
| 7. Ignition relay | 8. Accessory relay | 9. Blower relay |
| 10. Clutch interlock switch E111 | 11. Stop lamp switch E110 | 12. ICC brake hold relay |

JMMIA0006ZZ

POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

- A. Dash side lower (Passenger side). B. Engine room dash panel (RH). C. Behind cluster lid C.
D. Inside of A/T (built into A/T). E. View with dash side LH removed. F. View with instrument driver lower cover removed.
G. View with instrument driver lower cover removed. H. Left view of engine room

Component Description

INFOID:000000002996216

| BCM | Reference |
|--|-------------------------|
| IPDM E/R | PCS-4 |
| Ignition relay (Built-in IPDM E/R) | PCS-18 |
| Ignition relay (Built-in fuse block) | PCS-50 |
| Accessory relay | PCS-54 |
| Blower relay | PCS-60 |
| Stop lamp switch | SEC-58 |
| Transmission range switch (A/T models) | SEC-72 |
| Clutch inter lock switch (M/T models) | SEC-113 |
| Push-button ignition switch | SEC-60 |

DIAGNOSIS SYSTEM (BCM)

[POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000002996217

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

| Diagnosis mode | Function Description |
|--------------------------|--|
| Work Support | Changes the setting for each system function. |
| Self Diagnostic Result | Displays the diagnosis results judged by BCM. |
| CAN Diag Support Monitor | Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual. |
| Data Monitor | The BCM input/output signals are displayed. |
| Active Test | The signals used to activate each device are forcibly supplied from BCM. |
| Ecu Identification | The BCM part number is displayed. |
| Configuration | This function is not used even though it is displayed. |

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

| System | Sub system selection item | Diagnosis mode | | |
|--------------------------------------|-----------------------------|----------------|--------------|-------------|
| | | Work Support | Data Monitor | Active Test |
| Door lock | DOOR LOCK | × | × | × |
| Rear window defogger | REAR DEFOGGER | | × | × |
| Warning chime | BUZZER | | × | × |
| Interior room lamp timer | INT LAMP | × | × | × |
| Exterior lamp | HEAD LAMP | × | × | × |
| Wiper and washer | WIPER | × | × | × |
| Turn signal and hazard warning lamps | FLASHER | × | × | × |
| — | AIR CONDITONER* | | × | |
| Intelligent Key system | INTELLIGENT KEY | × | × | × |
| Combination switch | COMB SW | | × | |
| Body control system | BCM | × | | |
| IVIS - NATS | IMMU | | × | × |
| Interior room lamp battery saver | BATTERY SAVER | × | × | × |
| Trunk open | TRUNK | | × | |
| Vehicle security system | THEFT ALM | × | × | × |
| RAP system | RETAINED PWR | | × | |
| Signal buffer system | SIGNAL BUFFER | | × | × |
| TPMS | TPMS (AIR PRESSURE MONITOR) | × | × | × |

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD) AND IGN COUNTER

Freeze Frame Data

The BCM records the following condition at the moment a particular DTC is detected.

- Vehicle Speed
- Odo/Trip Meter

DIAGNOSIS SYSTEM (BCM)

[POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

- Vehicle Condition (BCM detected condition)

| CONSULT screen terms | Description |
|----------------------|--|
| SLEEP>LOCK | While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK") |
| SLEEP>OFF | While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".) |
| LOCK>ACC | While turning power supply position from "LOCK" to "ACC" |
| ACC>ON | While turning power supply position from "ACC" to "IGN" |
| RUN>ACC | While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.) |
| CRANK>RUN | While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it) |
| RUN>URGENT | While turning power supply position from "RUN" to "ACC" (Emergency stop operation) |
| ACC>OFF | While turning power supply position from "ACC" to "OFF" |
| OFF>LOCK | While turning power supply position from "OFF" to "LOCK" |
| OFF>ACC | While turning power supply position from "OFF" to "ACC" |
| ON>CRANK | While turning power supply position from "IGN" to "CRANKING" |
| OFF>SLEEP | While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode |
| LOCK>SLEEP | While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode |
| LOCK | Power supply position is "LOCK" (Ignition switch OFF with steering is locked.) |
| OFF | Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.) |
| ACC | Power supply position is "ACC" (Ignition switch ACC) |
| ON | Power supply position is "IGN" (Ignition switch ON with engine stopped) |
| ENGINE RUN | Power supply position is "RUN" (Ignition switch ON with engine running) |
| CRANKING | Power supply position is "CRANKING" (At engine cranking) |

IGN Counter

IGN counter indicates the number of times that ignition switch is turned ON after DTC is detected.

- The number is 0 when a malfunction is detected now.
- The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)

INFOID:000000004750937

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

| Diagnosis mode | Function Description |
|-------------------|--|
| WORK SUPPORT | Changes the setting for each system function. |
| SELF-DIAG RESULTS | Displays the diagnosis results judged by BCM. |
| DATA MONITOR | The BCM input/output signals are displayed. |
| ACTIVE TEST | The signals used to activate each device are forcibly supplied from BCM. |

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

| Monitor item | Description | A |
|--------------------------|--|-----|
| REMO CONT ID CONFIR | It can be checked whether Intelligent Key ID code is registered or not in this mode. | A |
| LOCK/UNLOCK BY I-KEY | Door lock/unlock function by door request switch (driver side, passenger side and trunk) mode can be changed to operate (ON) or not operate (OFF) in this mode. | B |
| ENGINE START BY I-KEY | Engine start function mode can be changed to operate (ON) or not operate (OFF) with this mode. | C |
| TRUNK/GLASS HATCH OPEN | Buzzer reminder function mode by trunk opener request switch can be changed to operate (ON) or not operate (OFF) with this mode. | C |
| PANIC ALARM SET | Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode. <ul style="list-style-type: none"> • 0.5 sec. • 1.5 sec. • OFF: Non-operation | D |
| TAKE OUT FROM WIN WARN | Take away warning chime (from window) mode can be changed to operate (ON) or not operate (OFF) with this mode. | E |
| PW DOWN SET | Unlock button pressing time on Intelligent Key button can be selected from the following with this mode. <ul style="list-style-type: none"> • 3 sec. • 5 sec. • OFF: Non-operation | F |
| TRUNK OPEN DELAY | Trunk button pressing time on Intelligent Key button can be selected from the following with this mode. <ul style="list-style-type: none"> • 0.5 sec. • 1.5 sec. • OFF: Non-operation | G |
| LO- BATT OF KEY FOB WARN | Intelligent Key low battery warning mode can be changed to operate (ON) or not operate (OFF) with this mode. | H |
| KEYLESS FUNCTION | Door lock function with Intelligent Key can be changed to operate (ON) or not operate (OFF) with this mode. | I |
| ANTI KEY LOCK IN FUNCTI | Key reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode. | J |
| HAZARD ANSWER BACK | Hazard reminder function mode can be selected from the following with this mode. <ul style="list-style-type: none"> • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK AND UNLOCK: Lock/unlock operation • OFF: Non-operation | K |
| ANS BACK I-KEY LOCK | Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following with this mode. <ul style="list-style-type: none"> • HORN CHIRP: Sound horn • BUZZER: Sound Intelligent Key warning buzzer • OFF: Non-operation | L |
| ANS BACK I-KEY UNLOCK | Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) with this mode. | PCS |
| SHORT CRANKING OUTPUT | Starter motor can operate during the times below. <ul style="list-style-type: none"> • 70 msec • 100 msec • 200 msec | N |
| INSIDE ANT DIAGNOSIS | This function allows inside key antenna self-diagnosis. | O |
| HORN WITH KEYLESS LOCK | Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode. | P |
| AUTO LOCK SET | Auto door lock function mode can be changed to operate (ON) or not operate (OFF) with this mode. | P |

SELF-DIAG RESULT

Refer to [DLK-171, "DTC Index"](#).

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

| Monitor Item | Condition |
|----------------|--|
| VEH SPEED 1 | Display the vehicle speed signal received from combination meter by numerical value [Km/h]. |
| VEH SPEED 2 | Display the vehicle speed signal received from ABS or VDC or CVT by numerical value [Km/h]. |
| RKE OPE COUN1 | When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing. |
| RKE OPE COUN2 | NOTE: This item is displayed, but cannot be monitored. |
| REQ SW -DR | Indicates [ON/OFF] condition of door request switch (driver side). |
| REQ SW -AS | Indicates [ON/OFF] condition of door request switch (passenger side). |
| REQ SW -BD/TR | Indicates [ON/OFF] condition of trunk opener request switch. |
| PUSH SW | Indicates [ON/OFF] condition of push-button ignition switch. |
| IGN RLY2 -F/B | Indicates [ON/OFF] condition of ignition relay 2. |
| ACC RLY -F/B | Indicates [ON/OFF] condition of ACC relay. |
| CLUCH SW | Indicates [ON/OFF] condition of clutch switch. |
| BRAKE SW 1 | Indicates [ON/OFF] condition of brake switch. |
| DETE/CANCL SW | Indicates [ON/OFF] condition of P position. |
| SFT PN/N SW | Indicates [ON/OFF] condition of P or N position. |
| S/L -LOCK | Indicates [ON/OFF] condition of steering lock (LOCK). |
| S/L -UNLOCK | Indicates [ON/OFF] condition of steering lock (UNLOCK). |
| S/L RELAY -F/B | Indicates [ON/OFF] condition of ignition switch. |
| UNLK SEN -DR | Indicates [ON/OFF] condition of driver door UNLOCK status. |
| PUSH SW -IPDM | Indicates [ON/OFF] condition of push-button ignition switch. |
| IGN RLY1 -F/B | Indicates [ON/OFF] condition of ignition relay 1. |
| DETE SW -IPDM | Indicates [ON/OFF] condition of P position. |
| SFT PN -IPDM | Indicates [ON/OFF] condition of P or N position. |
| SFT P -MET | Indicates [ON/OFF] condition of P position. |
| SFT N -MET | Indicates [ON/OFF] condition of N position. |
| ENGINE STATE | Indicates [STOP/START/CRANK/RUN] condition of engine states. |
| S/L LOCK-IPDM | Indicates [ON/OFF] condition of steering lock (LOCK). |
| S/L UNLK-IPDM | Indicates [ON/OFF] condition of steering lock (UNLOCK). |
| S/L RELAY-REQ | Indicates [ON/OFF] condition of steering lock relay. |
| DOOR STAT-DR | Indicates [LOCK/READY/UNLK] condition of driver side door status. |
| DOOR STAT-AS | Indicates [LOCK/READY/UNLK] condition of passenger side door status. |
| ID OK FLAG | Indicates [SET/RESET] condition of key ID. |
| PRMT ENG STRT | Indicates [SET/RESET] condition of engine start possibility. |
| PRMT RKE STRT | NOTE: This item is displayed, but cannot be monitored. |
| KEY SW -SLOT | Indicates [ON/OFF] condition of key slot. |
| TRNK/HAT MNTR | Indicates [ON/OFF] condition of trunk lid. |
| RKE-LOCK | Indicates [ON/OFF] condition of LOCK signal from Intelligent Key. |
| RKE-UNLOCK | Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key. |
| RKE-TR/BD | Indicates [ON/OFF] condition of TRUNK OPEN signal from Intelligent Key. |
| RKE-PANIC | Indicates [ON/OFF] condition of PANIC button of Intelligent Key. |
| RKE-P/W OPEN | Indicates [ON/OFF] condition of P/W DOWN signal from Intelligent Key. |
| RKE-MODE CHG | Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

ACTIVE TEST

| Test item | Description |
|--------------------|---|
| BATTERY SAVER | This test is able to check interior room lamp operation. The interior room lamp will be activated after "ON" on CONSULT-III screen is touched. |
| PW REMOTO DOWN SET | This test is able to check power window down operation. The power window down will be activated after "ON" on CONSULT-III screen is touched. |
| OUTSIDE BUZZER | This test is able to check Intelligent Key warning buzzer operation. Intelligent Key warning buzzer sounds when "ON" on CONSULT-III screen is touched. |
| INSIDE BUZZER | This test is able to check warning chime in combination meter operation. <ul style="list-style-type: none"> • Take away warning chime sounds when "TAKE OUT" on CONSULT-III screen is touched. • Key warning chime sounds when "KEY WARN" on CONSULT-III screen is touched. • P position warning chime sounds when "P RNG WARN" on CONSULT-III screen is touched. • ACC warning chime sounds when "ACC WARN" on CONSULT-III screen is touched. |
| INDICATOR | This test is able to check warning lamp operation. <ul style="list-style-type: none"> • "KEY" Warning lamp illuminates when "KEY IND ON" on CONSULT-III screen is touched. • "KEY" Warning lamp flashes when "KEY IND FSH" on CONSULT-III screen is touched. |
| INT LAMP | This test is able to check interior room lamp operation. The interior room lamp will be activated after "ON" on CONSULT-III screen is touched. |
| LCD | This test is able to check meter display information <ul style="list-style-type: none"> • Engine start information displays when "BRAKE/P" on CONSULT-III screen is touched. • Engine start information displays when "BRAKE/P/ON" on CONSULT-III screen is touched. • Key ID warning displays when "KEY ID NG" on CONSULT-III screen is touched. • Steering lock information displays when "STLCK RELES" on CONSULT-III screen is touched. • P position warning displays when "P RNG IND" on CONSULT-III screen is touched. • Intelligent Key insert information displays when "INSERT KEY" on CONSULT-III screen is touched. • Intelligent Key low battery warning displays when "KEY BAT LOW" on CONSULT-III screen is touched. • Take away through window warning displays when "TK AWAY WDW" on CONSULT-III screen is touched. • Take away warning display when "TAKE AWAY" on CONSULT-III screen is touched. • OFF position warning display when "IGN OFF WARN" on CONSULT-III screen is touched. |
| TRUNK/GLASS HATCH | This test is able to check trunk lid opener actuator open operation. This actuator opens when "ON" on CONSULT-III screen is touched. |
| FLASHER | This test is able to check security hazard lamp operation. The hazard lamps will be activated after "ON" on CONSULT-III screen is touched. |
| HORN | This test is able to check horn operation. The horn will be activated after "ON" on CONSULT-III screen is touched. |
| IGN CONT2 | This test is able to check ignition relay operation. The ignition relay will be activated after "ON" on CONSULT-III screen is touched. |
| P RANGE | This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "ON" on CONSULT-III screen is touched. |
| ENGINE SW ILLUMI | This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT-III screen is touched. |
| LOCK INDICATOR | This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched. |
| ACC INDICATOR | This test is able to check ACC indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched. |
| IGNITION ON IND | This test is able to check IGNITION ON indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched. |
| KEY SLOT ILLUMI | This test is able to check key slot illumination operation. Key slot illumination flash when "ON" on CONSULT-III screen is touched. |

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000002996219

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.
 CAN Communication Signal Chart. Refer to [LAN-29, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000002996220

DTC DETECTION LOGIC

| DTC | CONSULT-III display description | DTC Detection Condition | Possible cause |
|-------|---------------------------------|--|--------------------------|
| U1000 | CAN COMM | When BCM cannot communicate CAN communication signal continuously for 2 seconds or more. | CAN communication system |

Diagnosis Procedure

INFOID:000000002996221

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is DTC "U1000" displayed?

- YES >> Refer to [LAN-19, "Trouble Diagnosis Flow Chart"](#).
 NO >> Refer to [GI-39, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:000000002996222

DTC DETECTION LOGIC

| DTC | CONSULT-III display description | DTC Detection Condition | Possible cause |
|-------|---------------------------------|--|----------------|
| U1010 | CONTROL UNIT(CAN) | BCM detected internal CAN communication circuit malfunction. | BCM |

Diagnosis Procedure

INFOID:000000002996223

1.REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-80. "Exploded View"](#).

Special Repair Requirement

INFOID:000000002996224

1.REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

>> Work end.

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2553 IGNITION RELAY

Description

INFOID:000000002996225

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay (inside fuse box)
- Ignition relay (inside IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

INFOID:000000002996226

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|---|--|
| B2553 | IGNITION RELAY | BCM detects a difference of signal for 2 seconds or more between the following information. <ul style="list-style-type: none"> • Ignition relay (fuse block) ON/OFF operation • Ignition relay (fuse block) feedback. | <ul style="list-style-type: none"> • Harness or connectors (ignition relay feedback circuit is open or short) • IPDM E/R |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions (start the engine), and wait for at least 2 seconds.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

- YES >> Go to [PCS-50, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000002996227

1. CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT-III. Refer to [PCS-123, "DTC Index"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair or replace malfunctioning parts.

2. CHECK IGNITION RELAY FEEDBACK INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector M123.
3. Check voltage between BCM harness connector and ground under the following conditions.

| (+) | | (-) | Condition | Voltage (V) (Approx.) | |
|-----------|----------|--------|-----------------|--------------------------|-----------------|
| BCM | | | | | |
| Connector | Terminal | | | | |
| M123 | 123 | Ground | Ignition switch | OFF | 0 |
| | | | | ON | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 4.

B2553 IGNITION RELAY

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 3.

3. CHECK IGNITION RELAY FEEDBACK CIRCUIT

1. Disconnect IPDM E/R connector E5.
2. Check continuity between BCM harness connector and IPDM E/R harness connector.

| BCM | | IPDM E/R | | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M123 | 123 | E5 | 19 | Existed |

3. Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| M123 | 123 | | Not existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4. CHECK INTERMITTENT INCIDENT

Refer to [GI-39. "Intermittent Incident"](#).

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

B260A IGNITION RELAY**Description**

INFOID:000000002996228

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay (inside fuse block)
- Ignition relay (inside IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

DTC Logic

INFOID:000000002996229

DTC DETECTION LOGIC**NOTE:**

- If DTC B260A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-48, "DTC Logic"](#).
- If DTC B260A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-49, "DTC Logic"](#).
- If DTC B260A is displayed with DTC B261A, first perform the trouble diagnosis for DTC B261A. Refer to [SEC-97, "DTC Logic"](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|--|
| B260A | IGNITION RELAY | BCM detects a difference of signal for 2 second or more between the following information. <ul style="list-style-type: none"> • Ignition relay (IPDM E/R) operation request • Ignition relay feedback from IPDM E/R (CAN). | <ul style="list-style-type: none"> • Harness or connectors (Ignition relay operation circuit is open or shorted.) • IPDM E/R |

DTC CONFIRMATION PROCEDURE**1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON under the following conditions, and wait for at least 2 seconds.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

- YES >> Go to [PCS-52, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000002996230

1. CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT-III. Refer to [PCS-123, "DTC Index"](#).

Is DTC detected?

- YES >> Repair or replace the malfunctioning parts.
NO >> GO TO 2.

2. CHECK IGNITION RELAY INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector M121.
3. Check voltage between BCM harness connector and ground.

B260A IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| BCM | | | |
| Connector | Terminal | | |
| M121 | 47 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK IGNITION RELAY (IPDM E/R) CIRCUIT

1. Disconnect IPDM E/R harness connector E5.
2. Check continuity between IPDM E/R harness connector and BCM harness connector.

| IPDM E/R | | BCM | | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E5 | 27 | M121 | 47 | Existed |

3. Check continuity between IPDM E/R harness connector and ground.

| IPDM E/R | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| E5 | 27 | | Not existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-39. "Intermittent Incident"](#).

>> INSPECTION END

PCS

B2611 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2611 ACC RELAY

Description

INFOID:000000002996231

BCM turns ON the ACC relay to supply ACC power to each ECU when the power supply position changes to ACC.

BCM check ACC relay ON request for consistency with the actual ACC relay operation status.

DTC Logic

INFOID:000000002996232

DTC DETECTION LOGIC

NOTE:

- If DTC B2611 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-48, "DTC Logic"](#).
- If DTC B2611 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-49, "DTC Logic"](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|---|
| B2611 | ACC RELAY | BCM detects a difference of signal for 2 seconds or more between the following information. <ul style="list-style-type: none">• ACC relay ON/OFF operation• ACC relay feedback. | <ul style="list-style-type: none">• Harness or connectors (ACC relay feed back circuit is open or shorted)• Some electronic goods* connect to the cigarette lighter socket |

*: Electronic goods: Personal computer, CD player...

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE-1

1. Turn the power supply position to ACC under the following conditions, and wait for at least 2 seconds.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

- YES >> Go to [PCS-55, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE-2

1. Turn the power supply position ACC to OFF under the following conditions, and wait for at least 2 seconds.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

- YES >> Go to [PCS-55, "Diagnosis Procedure"](#).
NO >> GO TO 3.

3. CHECK CIGARETTE LIGHTER SOCKET CONDITION

Check if the customer uses to connect some electronic goods* to the Cigarette lighter socket.

*: Electronic goods: Personal computer, CD player...

Has electronic good been connected to Cigarette lighter socket?

B2611 ACC RELAY

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> DTC detection is possible.
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000002996233

1.INSPECTION START

Confirm that the electronic good* connect to the cigarette lighter socket.

*: Electronic good: Personal computer, CD player...

Does electronic good connect to the cigarette lighter socket?

- YES >> Disconnect the electronic good, and perform once again the DTC confirmation procedure. Refer to [PCS-54, "DTC Logic"](#).
- NO >> GO TO 2.

2.CHECK ACCESSORY RELAY FEED BACK INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector M123.
3. Check voltage between BCM harness connector and ground under the following conditions.

| (+) | | (-) | Condition | Voltage (V) (Approx.) | |
|-----------|----------|--------|-----------------|--------------------------|----------------------|
| BCM | | | | | |
| Connector | Terminal | | | | |
| M123 | 122 | Ground | Ignition switch | OFF ACC | 0 Battery voltage |

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> GO TO 3.

3.CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect accessory relay.
3. Check voltage between accessory relay harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------------|--|--------|--------------------------|
| Accessory relay | | | |
| Terminal | | | |
| 5 | | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Check harness open or short between accessory relay and battery.

4.CHECK FUSE

Check 10A fuse [No. 19, located fuse block (J/B)].

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace fuse.

5.CHECK ACCESSORY RELAY FEEDBACK CIRCUIT

1. Check continuity between accessory relay harness connector and BCM harness connector.

| Accessory relay | BCM | | Continuity |
|-----------------|----------|-----------|------------|
| | Terminal | Connector | |
| 3 | M123 | 122 | Existed |

2. Check continuity between accessory relay harness connector and ground.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B2611 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| | | |
|-----------------|--------|-------------|
| Accessory relay | Ground | Continuity |
| Terminal | | |
| 3 | | Not existed |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

6.CHECK INTERMITTENT

Refer to [GI-39. "Intermittent Incident"](#).

>> INSPECTION END

B2614 ACC RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2614 ACC RELAY CIRCUIT

Description

INFOID:000000002996234

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:000000002996235

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|---|--|
| B2614 | ACC relay circuit | An immediate operation of ACC relay is requested by BCM, but there is no response for more than 1 second. | <ul style="list-style-type: none">• Harness or connectors (ACC relay circuit is open or shorted)• ACC relay |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to ACC under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

- YES >> Go to [PCS-57, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000002996236

1. CHECK ACCESSORY RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect accessory relay.
3. Check voltage between accessory relay harness connector and ground under the following conditions.

| (+) | (-) | Condition | Voltage (V) (Approx.) |
|-----------------------------|--------|-----------|--------------------------|
| Accessory relay Terminal | | | |
| 1 | Ground | Ignition | 0 |
| | | | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector M123.
3. Check continuity between accessory relay harness connector and BCM harness connector.

B2614 ACC RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| Accessory relay | BCM | | Continuity |
|-----------------|-----------|----------|------------|
| Terminal | Connector | Terminal | |
| 3 | M123 | 122 | Existed |

4. Check continuity between accessory relay harness connector and ground.

| Accessory relay | Ground | Continuity |
|-----------------|--------|-------------|
| Terminal | | Not existed |
| 3 | | |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

3.CHECK ACCESSORY RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between accessory relay harness connector and ground.

| Accessory relay | Ground | Continuity |
|-----------------|--------|------------|
| Terminal | | Existed |
| 2 | | |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair accessory relay ground circuit.

4.CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT-2

Check voltage between accessory relay harness connector and ground.

| (+) | (-) | Voltage (V) (Approx.) |
|-----------------|--------|--------------------------|
| Accessory relay | | |
| Terminal | | |
| 5 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check continuity open or short between accessory relay and battery.

5.CHECK ACCESSORY RELAY

Refer to [PCS-58, "Component Inspection \(Accessory Relay\)"](#).

YES or NO

YES >> GO TO 6.

NO >> Replace accessory relay.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection (Accessory Relay)

INFOID:000000002996237

1.CHECK ACCESSORY RELAY

1. Turn ignition switch OFF.
2. Remove accessory relay.

B2614 ACC RELAY CIRCUIT

[POWER DISTRIBUTION SYSTEM]


< DTC/CIRCUIT DIAGNOSIS >

3. Check the continuity between accessory relay terminals under the following conditions.

| Terminals | Condition | Continuity |
|-----------|--|-------------|
| 3 and 5 | 12 V direct current supply between terminals 1 and 2 | Existed |
| | No current supply | Not existed |

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace accessory relay

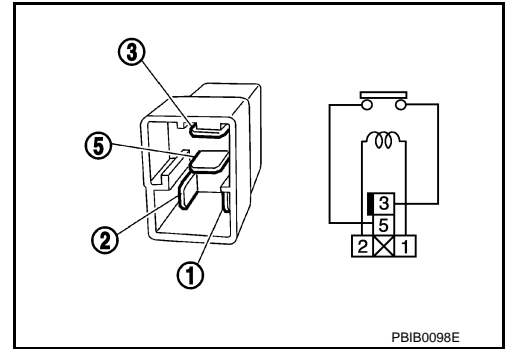

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2615 BLOWER RELAY CIRCUIT

Description

INFOID:000000002996238

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:000000002996239

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|--|
| B2615 | Blower relay circuit | BCM detects a difference of signal for 1 second or more between the following information. <ul style="list-style-type: none">• Blower relay ON/OFF request• Blower relay feedback | <ul style="list-style-type: none">• Harness or connectors (Blower relay circuit is open or shorted)• Blower relay |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

- YES >> Go to [PCS-60, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000002996240

1. CHECK BLOWER RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect blower relay.
3. Check voltage between blower relay harness connector and ground under the following conditions.

| (+) | (-) | Condition | Voltage (V) (Approx.) |
|--------------------------|--------|------------|--------------------------|
| Blower relay Terminal | Ground | OFF or ACC | 0 |
| 1 | | ON | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK BLOWER RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector M122.
3. Check continuity between blower relay harness connector and BCM harness connector.

B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| Blower relay Terminal | BCM | | Continuity |
|--------------------------|-----------|----------|------------|
| | Connector | Terminal | |
| 1 | M122 | 102 | Existed |

4. Check continuity between blower relay harness connector and ground.

| Blower relay Terminal | Ground | Continuity |
|--------------------------|--------|-------------|
| 1 | | Not existed |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

3.CHECK BLOWER RELAY GROUND CIRCUIT

- Turn ignition switch OFF.
- Check continuity between blower relay harness connector and ground.

| Blower relay Terminal | Ground | Continuity |
|--------------------------|--------|------------|
| 2 | | Existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair blower relay ground circuit.

4.CHECK BLOWER RELAY POWER SUPPLY CIRCUIT-2

Check voltage between blower relay harness connector and ground.

| (+) Blower relay Terminal | (-) | Voltage (V) (Approx.) |
|---------------------------------|--------|--------------------------|
| 5 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check continuity open or short between blower relay and battery.

5.CHECK BLOWER RELAY

Refer to [PCS-61. "Component Inspection \(Blower Relay\)".](#)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace blower relay.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-39. "Intermittent Incident".](#)

>> INSPECTION END

Component Inspection (Blower Relay)

INFOID:000000002996241

1.CHECK BLOWER RELAY

- Turn ignition switch OFF.
- Remove blower relay.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B2615 BLOWER RELAY CIRCUIT

[POWER DISTRIBUTION SYSTEM]


< DTC/CIRCUIT DIAGNOSIS >

3. Check the continuity between blower relay terminals under the following conditions.

| Terminals | Condition | Continuity |
|-----------|--|-------------|
| 3 and 5 | 12 V direct current supply between terminals 1 and 2 | Existed |
| | No current supply | Not existed |

Is the inspection result normal?

YES >> INSPECTION END
NO >> Replace blower relay

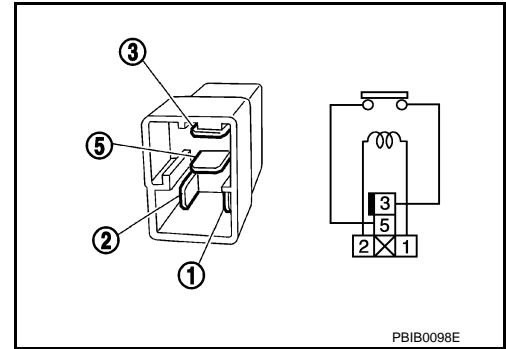

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B2616 IGNITION RELAY CIRCUIT

Description

INFOID:000000002996242

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
BCM checks the power supply position internally.

DTC Logic

INFOID:000000002996243

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|--|
| B2616 | Ignition relay circuit | An immediate operation of ignition relay (fuse block) is requested by BCM, but there is no response for more than 1 second | <ul style="list-style-type: none"> Harness or connectors (Ignition relay circuit is open or shorted) Ignition relay (Fuse block) |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
- Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

- YES >> Go to [PCS-63, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000002996244

1. CHECK IGNITION RELAY POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect ignition relay.
- Check voltage between ignition relay harness connector and ground under the following conditions.

| (+) | (-) | Condition | Voltage (V) (Approx.) |
|----------------------------|--------|----------------------------|--------------------------|
| Ignition relay Terminal | | | |
| 1 | Ground | Ignition switch OFF or ACC | 0 |
| | | Ignition switch ON | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK IGNITION RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM harness connector M122.
- Check continuity between ignition relay harness connector and BCM harness connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| Ignition relay Terminal | BCM | | Continuity |
|----------------------------|-----------|----------|------------|
| | Connector | Terminal | |
| 1 | M122 | 82 | Existed |

4. Check continuity between ignition relay harness connector and ground.

| Ignition relay Terminal | Ground | Continuity |
|----------------------------|--------|-------------|
| 1 | | Not existed |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

3.CHECK IGNITION RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ignition relay harness connector and ground.

| Ignition relay Terminal | Ground | Continuity |
|----------------------------|--------|------------|
| 2 | | Existed |

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair ignition relay ground circuit.

4.CHECK IGNITION RELAY POWER SUPPLY CIRCUIT-2

Check voltage between ignition relay harness connector and ground.

| (+) Ignition relay Terminal | (-) | Voltage (V) (Approx.) |
|-----------------------------------|--------|--------------------------|
| 5 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check continuity open or short between ignition relay and battery.

5.CHECK IGNITION RELAY

Refer to [PCS-64, "Component Inspection \(Ignition Relay\)"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace ignition relay.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection (Ignition Relay)

INFOID:000000002996245

1.CHECK IGNITION RELAY

1. Turn ignition switch OFF.
2. Remove ignition relay.

B2616 IGNITION RELAY CIRCUIT

[POWER DISTRIBUTION SYSTEM]


< DTC/CIRCUIT DIAGNOSIS >

3. Check the continuity between ignition relay terminals under the following conditions.

| Terminals | Condition | Continuity |
|-----------|--|-------------|
| 3 and 5 | 12 V direct current supply between terminals 1 and 2 | Existed |
| | No current supply | Not existed |

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace Ignition relay

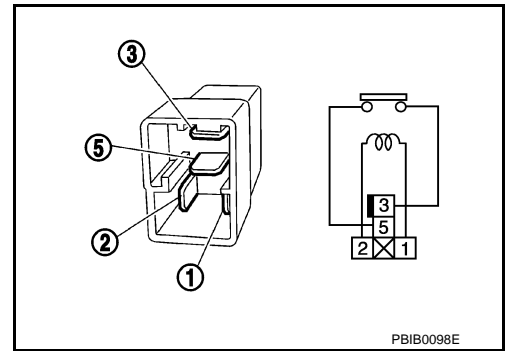

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

B2618 BCM

Description

INFOID:000000002996246

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.
 BCM checks the power supply position internally.

DTC Logic

INFOID:000000002996247

DTC DETECTION LOGIC

NOTE:

- If DTC B2618 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-48, "DTC Logic"](#).
- If DTC B2618 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-49, "DTC Logic"](#).

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|------------------------|--|---|
| B2618 | BCM | An immediate operation of ignition relay (IPDM E/R) is requested by BCM, but there is no response for more than 1 second | <ul style="list-style-type: none"> • BCM |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal
2. Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

- YES >> Go to [PCS-66, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000002996248

1. INSPECTION START

1. Turn ignition switch ON.
2. Select "Self diagnostic result" mode with CONSULT-III.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**
 See [PCS-66, "DTC Logic"](#).

Is the 1st trip DTC B2618 displayed again?

- YES >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#)
 NO >> INSPECTION END

B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

B261A PUSH-BUTTON IGNITION SWITCH

Description

INFOID:000000002996249

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

DTC Logic

INFOID:000000002996250

DTC DETECTION LOGIC

| DTC No. | Trouble diagnosis name | DTC detecting condition | Possible cause |
|---------|-----------------------------|---|---|
| B261A | PUSH-BUTTON IGNITION SWITCH | BCM detects a difference of signal for 1 second or more between the following information. <ul style="list-style-type: none"> Power supply position by push-button ignition switch Power supply position from IPDM E/R (CAN) | <ul style="list-style-type: none"> Harness or connectors (Push-button ignition switch circuit is open or shorted.) |

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- Press the push-button ignition switch under the following conditions, and wait for at least 1 second.

A/T models

- A/T selector lever is in the P or N position
- Do not depress brake pedal

M/T models

- Do not depress clutch pedal

- Check "Self diagnostic result" with CONSULT-III.

Is DTC detected?

- YES >> Go to [PCS-67, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000002996251

1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns to ON.

Does ignition switch turn to ON?

- YES >> GO TO 2.
 NO >> GO TO 4.

2. CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

- Disconnect push-button ignition switch harness connector.
- Check voltage between IPDM E/R harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| IPDM E/R | | | |
| Connector | Terminal | | |
| E5 | 28 | Ground | Battery voltage |

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

3. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

- Disconnect IPDM E/R harness connector E5 and BCM harness connector M122.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

B261A PUSH-BUTTON IGNITION SWITCH

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

| IPDM E/R | | Push-button ignition switch | | Continuity |
|-----------|----------|-----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E5 | 28 | M50 | 4 | Existed |

3. Check continuity between IPDM E/R harness connector and ground.

| IPDM E/R | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| E5 | 28 | | Not existed |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

4.CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)

1. Disconnect push-button ignition switch harness connector.
2. Check voltage between BCM harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| BCM | | | |
| Connector | Terminal | | |
| M122 | 89 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace BCM. Refer to [BCS-80, "Removal and Installation"](#).

5.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM harness connector and IPDM E/R harness connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

| BCM | | Push-button ignition switch | | Continuity |
|-----------|----------|-----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M122 | 89 | M50 | 4 | Existed |

3. Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| M122 | 89 | | Not existed |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair harness or connector.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000003036458

1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

| Signal name | Fuse and fusible link No. |
|----------------------|---------------------------|
| Battery power supply | M |
| | 10 |

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| BCM | | | |
| Connector | Terminal | Ground | Battery voltage |
| M118 | 1 | | |
| M119 | 11 | | |

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| M119 | 13 | | Existed |

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH

Description

INFOID:000000002996254

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

Component Function Check

INFOID:000000002996255

1. CHECK FUNCTION

1. Select "PUSH SW" in "Data Monitor" mode with CONSULT-III.
2. Check the push-button ignition switch signal under the following condition.

| Test item | Condition | Status |
|-----------|--|--------|
| PUSH SW | Push-button ignition switch is pressed | ON |
| | Push-button ignition switch is not pressed | OFF |

Is the indication normal?

- YES >> INSPECTION END
NO >> Go to [PCS-70, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003036454

1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns to ON.

Does ignition switch turn to ON?

- YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

1. Disconnect push-button ignition switch harness connector.
2. Check voltage between IPDM E/R harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| IPDM E/R | | | |
| Connector | Terminal | Ground | Battery voltage |
| E5 | 28 | | |

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

3. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

1. Disconnect IPDM E/R harness connector E5 and BCM harness connector M122.
2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

| IPDM E/R | | Push-button ignition switch | | Continuity |
|-----------|----------|-----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| E5 | 28 | M50 | 4 | Existed |

3. Check continuity between IPDM E/R harness connector and ground.

| IPDM E/R | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| E5 | 28 | | Not existed |

PUSH-BUTTON IGNITION SWITCH

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 6.
 NO >> Repair harness or connector.

4.CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)

1. Disconnect push-button ignition switch harness connector.
2. Check voltage between BCM harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------|----------|--------|--------------------------|
| BCM | | | |
| Connector | Terminal | Ground | Battery voltage |
| M122 | 89 | | |

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> Replace BCM. Refer to [BCS-80. "Removal and Installation"](#).

5.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM harness connector and IPDM E/R harness connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

| BCM | | Push-button ignition switch | | Continuity |
|-----------|----------|-----------------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| M122 | 89 | M50 | 4 | Existed |

3. Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|-------------|
| Connector | Terminal | | |
| M122 | 89 | | Not existed |

Is the inspection result normal?

- YES >> GO TO 6.
 NO >> Repair harness or connector.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-39. "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000002996257

PCS

1.CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals under the following conditions.

| Push-button ignition switch | | | Condition | Continuity |
|-----------------------------|----------|---|-------------|-------------|
| Connector | Terminal | | | |
| M50 | 1 | 4 | Pressed | Existed |
| | | | Not pressed | Not existed |

Is the inspection result normal?

- YES >> INSPECTION END.
 NO >> Replace push-button ignition switch.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

Description

INFOID:000000002996258

The switch that changes the power supply position.

BCM maintains the power supply position status.

BCM changes the power supply position with the operation of the push-button ignition switch.

Component Function Check

INFOID:000000002996259

1. CHECK FUNCTION

1. Check push-button ignition switch ("LOCK INDICATOR", "ACC INDICATOR" and "IGNITION ON IND") in Active Test Mode with CONSULT-III.

| Test item | | Description | |
|--|-----|--------------------|----------------|
| LOCK INDICATOR ACC INDICATOR IGNITION ON IND | ON | Position indicator | Illuminate |
| | OFF | | Not illuminate |

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Refer to [PCS-72, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000002996260

1. CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch harness connector.
3. Check voltage between push-button ignition switch harness connector and ground.

| (+) | | (-) | Voltage (V) (Approx.) |
|-----------------------------|----------|--------|--------------------------|
| Push-button ignition switch | | | |
| Connector | Terminal | Ground | Battery voltage |
| M50 | 8 | | |

Is the inspection normal?

YES >> GO TO 2.

NO >> Check the following.

- 10A fuse [No.9, located in fuse block (J/B)]
- Harness for open or short between push-button ignition switch and fuse

2. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect BCM harness connector and push button ignition switch harness connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

| Indicator | BCM | | Push-button ignition switch | | Continuity |
|-----------|-----------|----------|-----------------------------|----------|------------|
| | Connector | Terminal | Connector | Terminal | |
| LOCK | M123 | 134 | M50 | 5 | Existed |
| ACC | M119 | 15 | | 6 | |
| ON | M122 | 93 | | 7 | |

3. Check continuity between BCM harness connector and ground.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| Indicator | BCM | | Ground | Continuity |
|-----------|-----------|----------|--------|-------------|
| | Connector | Terminal | | |
| LOCK | M123 | 134 | Ground | |
| ACC | M119 | 15 | | Not existed |
| ON | M122 | 93 | | |

Is the inspection normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [PCS-73, "Component Inspection"](#).

Is the inspection normal?

YES >> GO TO 4.

NO >> Replace push-button ignition switch

4.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END

Component Inspection

INFOID:000000002996261

1.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

| Terminal | | Push-button ignition switch position | Continuity |
|-----------------------------|-----|--------------------------------------|------------|
| Push-button ignition switch | | | |
| (+) | (-) | | |
| 8 | 5 | LOCK | Existed |
| | 6 | ACC | |
| | 7 | ON | |

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace push-button ignition switch. Refer to [PCS-131, "Removal and Installation"](#).

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004743911

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

| Monitor Item | Condition | Value/Status |
|----------------|---|----------------------------------|
| FR WIPER HI | Other than front wiper switch HI | Off |
| | Front wiper switch HI | On |
| FR WIPER LOW | Other than front wiper switch LO | Off |
| | Front wiper switch LO | On |
| FR WASHER SW | Front washer switch OFF | Off |
| | Front washer switch ON | On |
| FR WIPER INT | Other than front wiper switch INT | Off |
| | Front wiper switch INT | On |
| FR WIPER STOP | Front wiper is not in STOP position | Off |
| | Front wiper is in STOP position | On |
| INT VOLUME | Wiper intermittent dial is in a dial position 1 - 7 | Wiper intermittent dial position |
| TURN SIGNAL R | Other than turn signal switch RH | Off |
| | Turn signal switch RH | On |
| TURN SIGNAL L | Other than turn signal switch LH | Off |
| | Turn signal switch LH | On |
| TAIL LAMP SW | Other than lighting switch 1ST and 2ND | Off |
| | Lighting switch 1ST or 2ND | On |
| HI BEAM SW | Other than lighting switch HI | Off |
| | Lighting switch HI | On |
| HEAD LAMP SW 1 | Other than lighting switch 2ND | Off |
| | Lighting switch 2ND | On |
| HEAD LAMP SW 2 | Other than lighting switch 2ND | Off |
| | Lighting switch 2ND | On |
| PASSING SW | Other than lighting switch PASS | Off |
| | Lighting switch PASS | On |
| AUTO LIGHT SW | Other than lighting switch AUTO | Off |
| | Lighting switch AUTO | On |
| FR FOG SW | Front fog lamp switch OFF | Off |
| | Front fog lamp switch ON | On |
| RR FOG SW | NOTE: The item is indicated, but not monitored. | Off |
| DOOR SW-DR | Driver door closed | Off |
| | Driver door opened | On |
| DOOR SW-AS | Passenger door closed | Off |
| | Passenger door opened | On |
| DOOR SW-RR | Rear RH door closed | Off |
| | Rear RH door opened | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Monitor Item | Condition | Value/Status | |
|----------------|--|--------------|-----|
| DOOR SW-RL | Rear LH door closed | Off | A |
| | Rear LH door opened | On | |
| DOOR SW-BK | NOTE: The item is indicated, but not monitored. | Off | B |
| CDL LOCK SW | Other than power door lock switch LOCK | Off | C |
| | Power door lock switch LOCK | On | |
| CDL UNLOCK SW | Other than power door lock switch UNLOCK | Off | D |
| | Power door lock switch UNLOCK | On | |
| KEY CYL LK-SW | Other than driver door key cylinder LOCK position | Off | E |
| | Driver door key cylinder LOCK position | On | |
| KEY CYL UN-SW | Other than driver door key cylinder UNLOCK position | Off | E |
| | Driver door key cylinder UNLOCK position | On | |
| KEY CYL SW-TR | NOTE: The item is indicated, but not monitored. | Off | F |
| HAZARD SW | Hazard switch is not pressed | Off | G |
| | Hazard switch is pressed | On | |
| REAR DEF SW | NOTE: The item is indicated, but not monitored. | Off | H |
| H/L WASH SW | NOTE: The item is indicated, but not monitored. | Off | H |
| TR CANCEL SW | Trunk lid opener cancel switch OFF | Off | I |
| | Trunk lid opener cancel switch ON | On | |
| TR/BD OPEN SW | Trunk lid opener switch OFF | Off | J |
| | While the trunk lid opener switch is turned ON | On | |
| TRNK/HAT MNTR | Trunk lid closed | Off | J |
| | Trunk lid opened | On | |
| RKE-LOCK | LOCK button of Intelligent Key is not pressed | Off | K |
| | LOCK button of Intelligent Key is pressed | On | |
| RKE-UNLOCK | UNLOCK button of Intelligent Key is not pressed | Off | L |
| | UNLOCK button of Intelligent Key is pressed | On | |
| RKE-TR/BD | TRUNK OPEN button of Intelligent Key is not pressed | Off | PCS |
| | TRUNK OPEN button of Intelligent Key is pressed | On | |
| RKE-PANIC | PANIC button of Intelligent Key is not pressed | Off | PCS |
| | PANIC button of Intelligent Key is pressed | On | |
| RKE-P/W OPEN | UNLOCK button of Intelligent Key is not pressed | Off | N |
| | UNLOCK button of Intelligent Key is pressed and held | On | |
| RKE-MODE CHG | LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously | Off | O |
| | LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously | On | |
| OPTICAL SENSOR | Bright outside of the vehicle | Close to 5 V | P |
| | Dark outside of the vehicle | Close to 0 V | |
| REQ SW-DR | Driver door request switch is not pressed | Off | P |
| | Driver door request switch is pressed | On | |
| REQ SW-AS | Passenger door request switch is not pressed | Off | P |
| | Passenger door request switch is pressed | On | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Monitor Item | Condition | Value/Status |
|---------------|---|--------------|
| REQ SW-BD/TR | Trunk request switch is not pressed | Off |
| | Trunk request switch is pressed | On |
| PUSH SW | Push-button ignition switch (push switch) is not pressed | Off |
| | Push-button ignition switch (push switch) is pressed | On |
| IGN RLY2 -F/B | Ignition switch in OFF or ACC position | Off |
| | Ignition switch in ON position | On |
| ACC RLY -F/B | Ignition switch in OFF position | Off |
| | Ignition switch in ACC or ON position | On |
| CLUCH SW | The clutch pedal is not depressed | Off |
| | The clutch pedal is depressed | On |
| BRAKE SW 1 | The brake pedal is depressed when No. 7 fuse is blown | Off |
| | The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal | On |
| BRAKE SW 2 | The brake pedal is not depressed | Off |
| | The brake pedal is depressed | On |
| DETE/CANCL SW | <ul style="list-style-type: none"> • Selector lever in P position (Except M/T models) • The clutch pedal is depressed (M/T models) | Off |
| | <ul style="list-style-type: none"> • Selector lever in any position other than P (Except M/T models) • The clutch pedal is not depressed (M/T models) | On |
| SFT PN/N SW | Selector lever in any position other than P and N | Off |
| | Selector lever in P or N position | On |
| S/L -LOCK | Steering is unlocked | Off |
| | Steering is locked | On |
| S/L -UNLOCK | Steering is locked | Off |
| | Steering is unlocked | On |
| S/L RELAY-F/B | Ignition switch in OFF or ACC position | Off |
| | Ignition switch in ON position | On |
| UNLK SEN-DR | Driver door is unlocked | Off |
| | Driver door is locked | On |
| PUSH SW -IPDM | Push-button ignition switch (push-switch) is not pressed | Off |
| | Push-button ignition switch (push-switch) is pressed | On |
| IGN RLY1 -F/B | Ignition switch in OFF or ACC position | Off |
| | Ignition switch in ON position | On |
| DETE SW -IPDM | Selector lever in any position other than P | Off |
| | Selector lever in P position | On |
| SFT PN -IPDM | <ul style="list-style-type: none"> • Selector lever in any position other than P and N (Except M/T models) • The clutch pedal is not depressed (M/T models) | Off |
| | <ul style="list-style-type: none"> • Selector lever in P or N position (Except M/T models) • The clutch pedal is depressed (M/T models) | On |
| SFT P -MET | Selector lever in any position other than P | Off |
| | Selector lever in P position | On |
| SFT N -MET | Selector lever in any position other than N | Off |
| | Selector lever in N position | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Monitor Item | Condition | Value/Status | |
|----------------|---|--|-----|
| ENGINE STATE | Engine stopped | Stop | A |
| | While the engine stalls | Stall | |
| | At engine cranking | Crank | B |
| | Engine running | Run | |
| S/L LOCK-IPDM | Steering is unlocked | Off | |
| | Steering is locked | On | C |
| S/L UNLK-IPDM | Steering is locked | Off | |
| | Steering is unlocked | On | D |
| S/L RELAY-REQ | Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK | Off | |
| | Steering lock system are not the LOCK condition or the changing condition from LOCK to UNLOCK | On | E |
| VEH SPEED 1 | While driving | Equivalent to speedometer reading | |
| VEH SPEED 2 | While driving | Equivalent to speedometer reading | F |
| DOOR STAT-DR | Driver door is locked | LOCK | |
| | Wait with selective UNLOCK operation (5 seconds) | READY | |
| | Driver door is unlocked | UNLK | G |
| DOOR STAT-AS | Passenger door is locked | LOCK | |
| | Wait with selective UNLOCK operation (5 seconds) | READY | |
| | Passenger door is unlocked | UNLK | H |
| ID OK FLAG | Steering is locked | Reset | |
| | Steering is unlocked | Set | I |
| PRMT ENG STRT | The engine start is prohibited | Reset | |
| | The engine start is permitted | Set | J |
| PRMT RKE STRT | NOTE: The item is indicated, but not monitored. | Reset | |
| KEY SW -SLOT | Intelligent Key is not inserted into key slot | Off | |
| | Intelligent Key is inserted into key slot | On | K |
| RKE OPE COUN1 | During the operation of Intelligent Key | Operation frequency of Intelligent Key | |
| RKE OPE COUN2 | NOTE: The item is indicated, but not monitored. | — | L |
| CONFIRM ID ALL | The key ID that the key slot receives is not recognized by any key ID registered to BCM. | Yet | PCS |
| | The key ID that the key slot receives is recognized by any key ID registered to BCM. | Done | |
| CONFIRM ID4 | The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM. | Yet | N |
| | The key ID that the key slot receives is recognized by the fourth key ID registered to BCM. | Done | O |
| CONFIRM ID3 | The key ID that the key slot receives is not recognized by the third key ID registered to BCM. | Yet | |
| | The key ID that the key slot receives is recognized by the third key ID registered to BCM. | Done | P |
| CONFIRM ID2 | The key ID that the key slot receives is not recognized by the second key ID registered to BCM. | Yet | |
| | The key ID that the key slot receives is recognized by the second key ID registered to BCM. | Done | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


| Monitor Item | Condition | Value/Status |
|--------------|--|-------------------------------|
| CONFIRM ID1 | The key ID that the key slot receives is not recognized by the first key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the first key ID registered to BCM. | Done |
| TP 4 | The ID of fourth Intelligent Key is not registered to BCM | Yet |
| | The ID of fourth Intelligent Key is registered to BCM | Done |
| TP 3 | The ID of third Intelligent Key is not registered to BCM | Yet |
| | The ID of third Intelligent Key is registered to BCM | Done |
| TP 2 | The ID of second Intelligent Key is not registered to BCM | Yet |
| | The ID of second Intelligent Key is registered to BCM | Done |
| TP 1 | The ID of first Intelligent Key is not registered to BCM | Yet |
| | The ID of first Intelligent Key is registered to BCM | Done |
| AIR PRESS FL | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of front LH tire |
| AIR PRESS FR | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of front RH tire |
| AIR PRESS RR | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of rear RH tire |
| AIR PRESS RL | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of rear LH tire |
| ID REGST FL1 | ID of front LH tire transmitter is registered | Done |
| | ID of front LH tire transmitter is not registered | Yet |
| ID REGST FR1 | ID of front RH tire transmitter is registered | Done |
| | ID of front RH tire transmitter is not registered | Yet |
| ID REGST RR1 | ID of rear RH tire transmitter is registered | Done |
| | ID of rear RH tire transmitter is not registered | Yet |
| ID REGST RL1 | ID of rear LH tire transmitter is registered | Done |
| | ID of rear LH tire transmitter is not registered | Yet |
| WARNING LAMP | Tire pressure indicator OFF | Off |
| | Tire pressure indicator ON | On |
| BUZZER | Tire pressure warning alarm is not sounding | Off |
| | Tire pressure warning alarm is sounding | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

TERMINAL LAYOUT

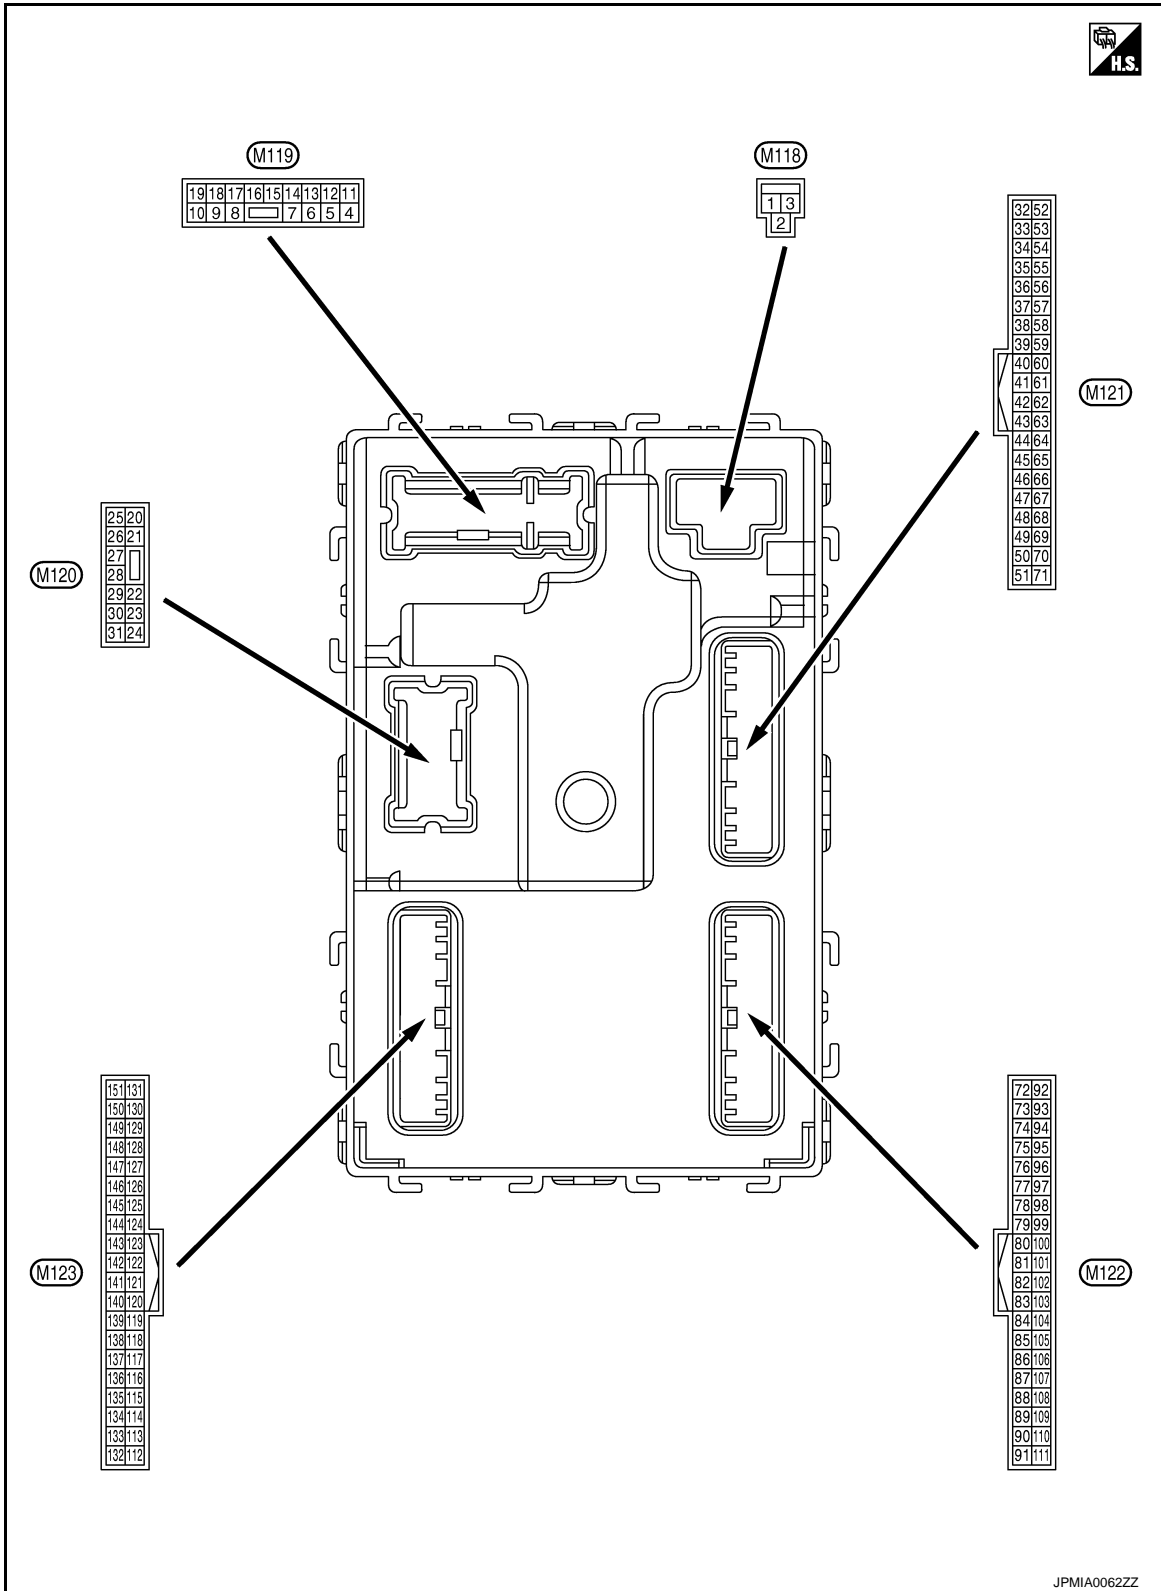


PHYSICAL VALUES

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]




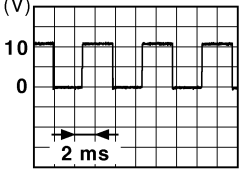
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|--|---|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 1 (W) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 2 (Y) | Ground | P/W power supply (BAT) | Output | Ignition switch OFF | | Battery voltage |
| 3 (O) | Ground | P/W power supply (RAP) | Output | Ignition switch ON | | Battery voltage |
| 4 (LG) | Ground | Interior room lamp power supply | Output | After passing the interior room lamp battery saver operation time | | 0 V |
| | | | | Any other time after passing the interior room lamp battery saver operation time | | Battery voltage |
| 5 (V) | Ground | Passenger door UN- LOCK | Output | Passenger door | UNLOCK (Actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (Actuator is not activated) | 0 V |
| 7 (Y) | Ground | Step lamp | Output | Step lamp | ON | 0 V |
| | | | | | OFF | Battery voltage |
| 8 (V) | Ground | All doors, fuel lid LOCK | Output | All doors, fuel lid | LOCK (Actuator is activated) | Battery voltage |
| | | | | | Other than LOCK (Actuator is not activated) | 0 V |
| 9 (G) | Ground | Driver door, fuel lid UNLOCK | Output | Driver door, fuel lid | UNLOCK (Actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (Actuator is not activated) | 0 V |
| 10 (BR) | Ground | Rear RH door and rear LH door UN- LOCK | Output | Rear RH door and rear LH door | UNLOCK (Actuator is activated) | Battery voltage |
| | | | | | Other than UNLOCK (Actuator is not activated) | 0 V |
| 11 (R) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 13 (B) | Ground | Ground | — | Ignition switch ON | | 0 V |
| 14 (W) | Ground | Push-button ignition switch illumination ground | Output | Tail lamp | OFF | 0 V |
| | | | | | ON | NOTE: When the illumination brightening/dimming level is in the neutral position  |
| 15 (Y) | Ground | ACC indicator lamp | Output | Ignition switch | OFF | Battery voltage |
| | | | | | ACC or ON | 0 V |

JSNIA0010GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]



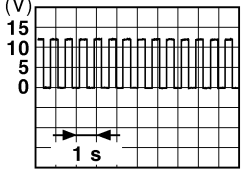
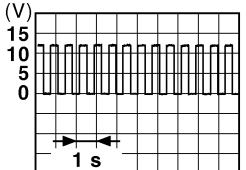
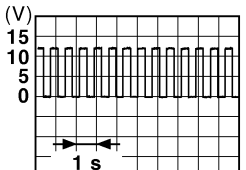
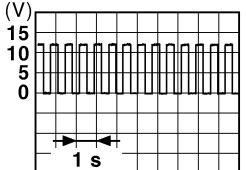
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------|------------------|--------------------|--|--|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 17 (W) | Ground | Turn signal (Front RH) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | Ignition switch ON | Turn signal switch RH |  <p style="text-align: center;">6.5 V</p> |
| 18 (O) | Ground | Turn signal (Front LH) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | Ignition switch ON | Turn signal switch LH |  <p style="text-align: center;">6.5 V</p> |
| 19 (V) | Ground | Room lamp timer control | Output | Interior room lamp | OFF | Battery voltage |
| | | | | Interior room lamp | ON | 0 V |
| 20 (V) | Ground | Turn signal (Rear RH) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | Ignition switch ON | Turn signal switch RH |  <p style="text-align: center;">6.5 V</p> |
| 23 (G) | Ground | Trunk lid opening | Output | Trunk lid | Open (Trunk lid opener actuator is activated) | Battery voltage |
| | | | | Trunk lid | Close (Trunk lid opener actuator is not activated) | 0 V |
| 25 (G) | Ground | Turn signal (Rear LH) | Output | Ignition switch ON | Turn signal switch OFF | 0 V |
| | | | | Ignition switch ON | Turn signal switch LH |  <p style="text-align: center;">6.5 V</p> |
| 30 (R) | Ground | Trunk room lamp | Output | Trunk room lamp | ON | 0 V |
| | | | | Trunk room lamp | OFF | Battery voltage |

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]
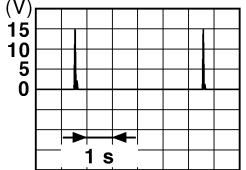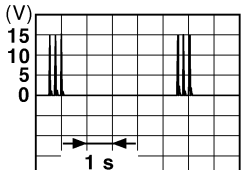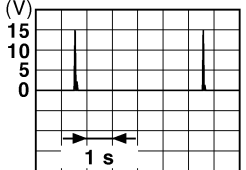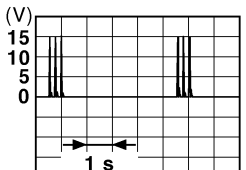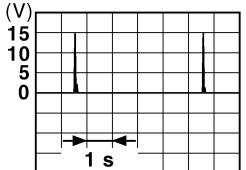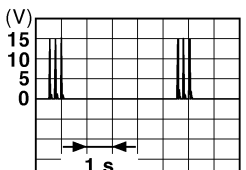
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|------------------------------|------------------|---|--|
| + | - | Signal name | Input/ Output | | |
| 34 (SB) | Ground | Trunk room antenna 1 (-) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the passenger compart- ment  <small>JMKIA0063GB</small> | |
| 35 (V) | Ground | Trunk room antenna 1 (+) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the passenger compart- ment  <small>JMKIA0063GB</small> | |
| 38 (B) | Ground | Rear bumper anten- na (-) | Output | When the trunk lid request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small> |
| | | | | When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small> | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]
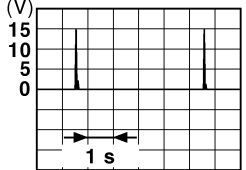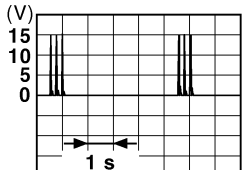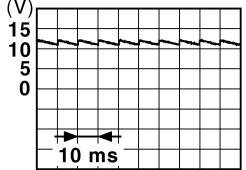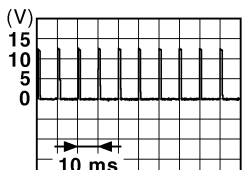
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-----------------------------------|------------------|--|---|--|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 39 (W) | Ground | Rear bumper antenna (+) | Output | When the trunk lid request switch is operated with ignition switch OFF | When Intelligent Key is in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> | |
| 47 (Y) | Ground | Ignition relay (IPDM E/R) control | Output | Ignition switch | OFF or ACC | Battery voltage |
| | | | | | ON | 0 V |
| 50 (R) | Ground | Trunk room lamp switch | Input | Trunk room lamp switch | OFF (Trunk is closed) |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p> |
| | | | | | ON (Trunk is open) | 0 V |
| 52 (SB) | Ground | Starter relay control | Output | Ignition switch OFF (M/T models) | When the clutch pedal is depressed | Battery voltage |
| | | | | | When the clutch pedal is not depressed | 0 V |
| | | | | Ignition switch ON (Except M/T models) | When selector lever is in P or N position and the brake is depressed | Battery voltage |
| | | | | | When selector lever is in P or N position and the brake is not depressed | 0 V |
| 61 (W) | Ground | Trunk request switch | Input | Trunk request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  <p style="text-align: right; font-size: small;">JPMIA0016GB</p> <p style="text-align: center;">1.0 V</p> |
| 64 (V) | Ground | Request switch buzzer | Output | Request switch buzzer | Sounding | 0 V |
| | | | | | Not sounding | Battery voltage |






A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[POWER DISTRIBUTION SYSTEM]
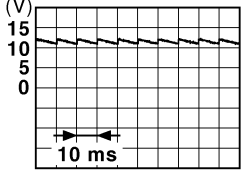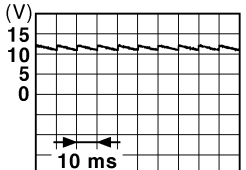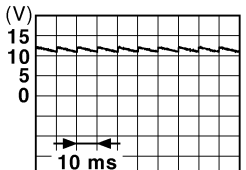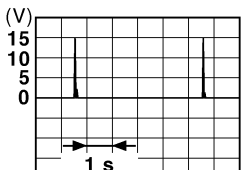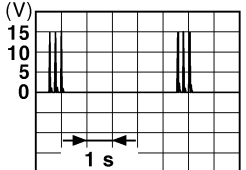
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--|------------------|--|---|---|
| + | - | Signal name | Input/ Output | | | |
| 67 (GR) | Ground | Trunk lid opener switch | Input | Trunk lid opener switch | Pressed | 0 V |
| | | | | Not pressed |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p> | |
| 68 (BR) | Ground | Rear RH door switch | Input | Rear RH door switch | OFF (When rear RH door closes) |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p> |
| | | | | ON (When rear RH door opens) | 0 V | |
| 69 (R) | Ground | Rear LH door switch | Input | Rear LH door switch | OFF (When rear LH door closes) |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p> |
| | | | | ON (When rear LH door opens) | 0 V | |
| 72 (R) | Ground | Room antenna 2 (-) (Center console) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]
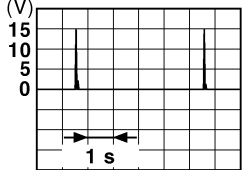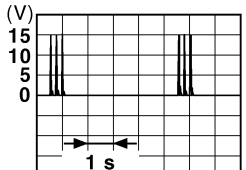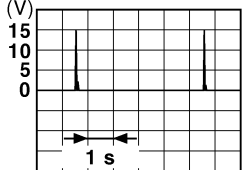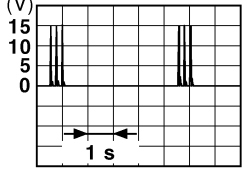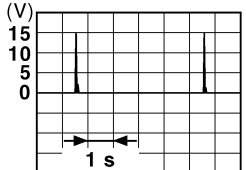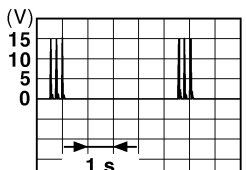
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--|------------------|---|--|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 73 (G) | Ground | Room antenna 2 (+) (Center console) | Output | Ignition switch OFF | When Intelligent Key is in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | | When Intelligent Key is not in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 74 (SB) | Ground | Passenger door an- tenna (-) | Output | When the pas- senger door re- quest switch is operated with ig- nition switch OFF | When Intelligent Key is in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | | When Intelligent Key is not in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 75 (BR) | Ground | Passenger door an- tenna (+) | Output | When the pas- senger door re- quest switch is operated with ig- nition switch OFF | When Intelligent Key is in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | | When Intelligent Key is not in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |







A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]
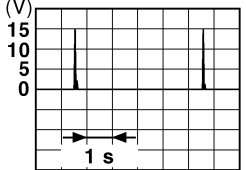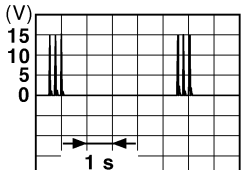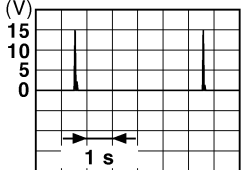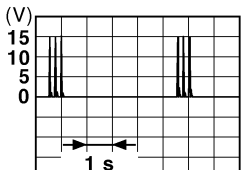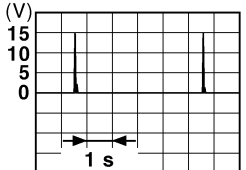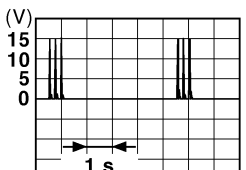
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------------|------------------|--|---|
| + | - | Signal name | Input/ Output | | |
| 76 (V) | Ground | Driver door antenna (-) | Output | When the driver door request switch is operated with ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 77 (LG) | Ground | Driver door antenna (+) | Output | When the driver door request switch is operated with ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 78 (Y) | Ground | Room antenna (-) (Instrument panel) | Output | Ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

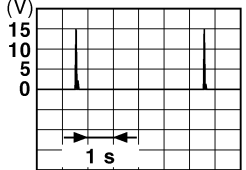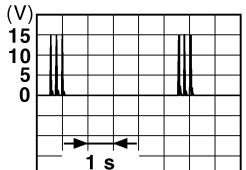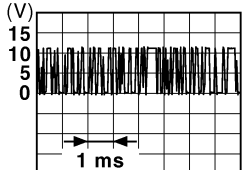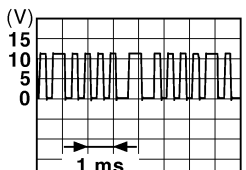

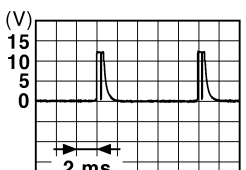
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|---|------------------|---|---|---|
| + | - | Signal name | Input/ Output | | | |
| 79 (BR) | Ground | Room antenna (+) (Instrument panel) | Output | Ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> | |
| | | | | Ignition switch ON |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> | |
| 80 (GR) | Ground | NATS antenna amp (Built in key slot) | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. | Just after pressing ignition switch. Pointer of tester should move. |
| 81 (W) | Ground | NATS antenna amp (Built in key slot) | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. | Just after pressing ignition switch. Pointer of tester should move. |
| 82 (R) | Ground | Ignition relay [fuse block (J/B)] control | Output | Ignition switch | OFF or ACC | 0 V |
| | | | | | ON | Battery voltage |
| 83 (Y) | Ground | Remote keyless entry receiver signal | Input/ Output | During waiting |  <p style="text-align: right; font-size: small;">JMKIA0064GB</p> | |
| | | | | When operating either button on Intelligent Key |  <p style="text-align: right; font-size: small;">JMKIA0065GB</p> | |

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




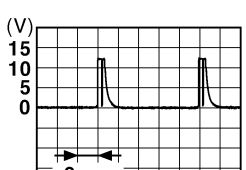
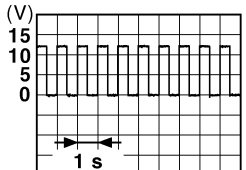
[POWER DISTRIBUTION SYSTEM]
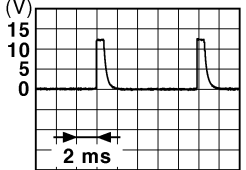
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|---|---|
| + | - | Signal name | Input/ Output | | |
| 87 (BR) | Ground | Combination switch INPUT 5 | Input | All switch OFF (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p> |
| | | | | Front fog lamp switch ON (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p> |
| | | | | Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 |  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p> |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]
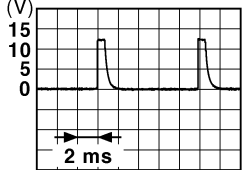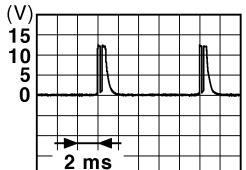
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--|------------------|---|--|--|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 88 (V) | Ground | Combination switch INPUT 3 | Input | Combination switch | All switch OFF (Wiper intermittent dial 4) |  <small>JPMIA0041GB</small> 1.4 V |
| | | | | | Lighting switch HI (Wiper intermittent dial 4) |  <small>JPMIA0036GB</small> 1.3 V |
| | | | | | Lighting switch 2ND (Wiper intermittent dial 4) |  <small>JPMIA0037GB</small> 1.3 V |
| | | | | | Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 |  <small>JPMIA0040GB</small> 1.3 V |
| 89 (BR) | Ground | Push-button ignition switch (Push switch) | Input | Push-button igni- tion switch (push switch) | Pressed Not pressed | 0 V Battery voltage |
| 90 (P) | Ground | CAN - L | Input/ Output | — | — | — |
| 91 (L) | Ground | CAN - H | Input/ Output | — | — | — |
| 92 (LG) | Ground | Key slot illumination | Output | Key slot illumina- tion | OFF | 0 V |
| | | | | | Blinking |  <small>JPMIA0015GB</small> 6.5 V |
| | | | | | ON | Battery voltage |

A
B
C
D
E
F
G
H
I
J
K
L



PCS

N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




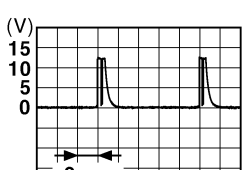

[POWER DISTRIBUTION SYSTEM]
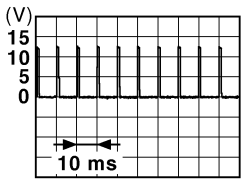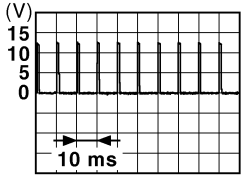
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|-------------------------------|------------------------------------|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 93 (V) | Ground | ON indicator lamp | Output | Ignition switch | OFF or ACC | 0 V |
| | | | | | ON | Battery voltage |
| 95 (O) | Ground | ACC relay control | Output | Ignition switch | OFF | 0 V |
| | | | | | ACC or ON | Battery voltage |
| 96 (GR) | Ground | A/T device (Detention switch) power supply | Output | — | | Battery voltage |
| 97 (L) | Ground | Steering lock condition No. 1 | Input | Steering lock | LOCK status | 0 V |
| | | | | | UNLOCK status | Battery voltage |
| 98 (P) | Ground | Steering lock condition No. 2 | Input | Steering lock | LOCK status | Battery voltage |
| | | | | | UNLOCK status | 0 V |
| 99 (R) | Ground | Selector lever P position switch | Input | Selector lever | P position | 0 V |
| | | | | | Any position other than P | Battery voltage |
| | | ASCD clutch switch (M/T models without ICC) | | ASCD clutch switch | OFF (Clutch pedal is depressed) | 0 V |
| | | | | | ON (Clutch pedal is not depressed) | Battery voltage |
| | | ICC clutch switch (M/T models with ICC) | | ICC clutch switch | OFF (Clutch pedal is depressed) | 0 V |
| | | | | | ON (Clutch pedal is not depressed) | Battery voltage |
| 100 (G) | Ground | Passenger door request switch | Input | Passenger door request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0 V</p> |
| 101 (SB) | Ground | Driver door request switch | Input | Driver door request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0 V</p> |
| 102 (O) | Ground | Blower fan motor relay control | Output | Ignition switch | OFF or ACC | 0 V |
| | | | | | ON | Battery voltage |
| 103 (LG) | Ground | Remote keyless entry receiver power supply | Output | Ignition switch OFF | | Battery voltage |
| 106 (W) | Ground | Steering wheel lock unit power supply | Output | Ignition switch | OFF or ACC | Battery voltage |
| | | | | | ON | 0 V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]



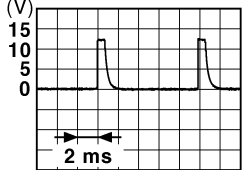
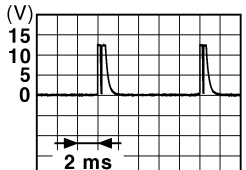
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|--|------------------------|--|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 107 (LG) | Ground | Combination switch INPUT 1 | Input | Combination switch (Wiper intermittent dial 4) | All switch OFF |  1.4 V |
| | | | | | Turn signal switch LH |  1.3 V |
| | | | | | Turn signal switch RH |  1.3 V |
| | | | | | Front wiper switch LO |  1.3 V |
| | | | | | Front washer switch ON |  1.3 V |

A
B
C
D
E
F
G
H
I
J
K
L
PCS
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




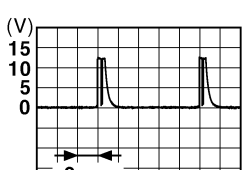

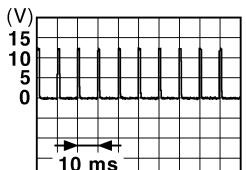
[POWER DISTRIBUTION SYSTEM]
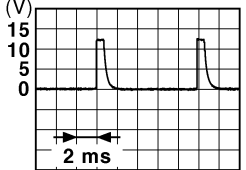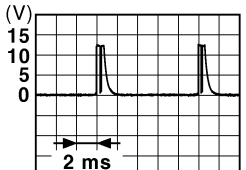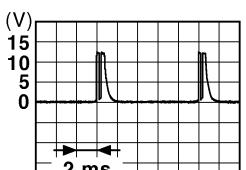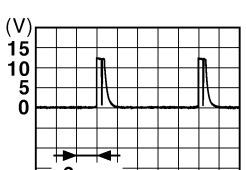
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|-----------------------|--|
| + | - | Signal name | Input/ Output | | |
| 108 (R) | Ground | Combination switch INPUT 4 | Input | Combination switch | All switch OFF (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0041GB</p> <p style="margin: 0;">1.4 V</p> </div> |
| | | | | Combination switch | Lighting switch AUTO (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0038GB</p> <p style="margin: 0;">1.3 V</p> </div> |
| | | | | Combination switch | Lighting switch 1ST (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0036GB</p> <p style="margin: 0;">1.3 V</p> </div> |
| | | | | Combination switch | Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 <div style="text-align: right;">  <p style="font-size: small; margin: 0;">JPMIA0039GB</p> <p style="margin: 0;">1.3 V</p> </div> |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]
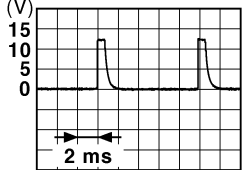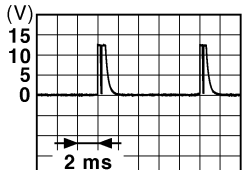
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|---|------------------------|--|
| + | - | Signal name | Input/ Output | | | |
| 109 (Y) | Ground | Combination switch INPUT 2 | Input | Combination switch (Wiper intermit- tent dial 4) | All switch OFF |  1.4 V |
| | | | | | Lighting switch PASS |  1.3 V |
| | | | | | Lighting switch 2ND |  1.3 V |
| | | | | | Front wiper switch INT |  1.3 V |
| | | | | | Front wiper switch HI |  1.3 V |
| | | | | | Pressed | 0 V |
| 110 (G) | Ground | Hazard switch | Input | Hazard switch | Not pressed |  1.1 V |



A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




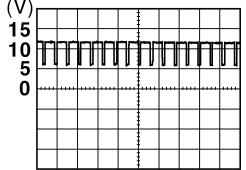
[POWER DISTRIBUTION SYSTEM]
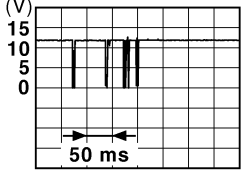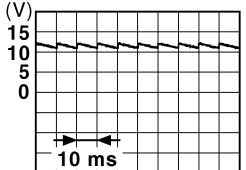
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|--|------------------|--|--|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 111 (Y) | Ground | Steering lock unit communication | Input/ Output | Steering lock | LOCK status | Battery voltage |
| | | | | | LOCK or UNLOCK |  <p style="text-align: right; font-size: small;">JMKIA0066GB</p> |
| | | | | | For 15 seconds after UN- LOCK | Battery voltage |
| | | | | | 15 seconds or later after UNLOCK | 0 V |
| 113 (P) | Ground | Optical sensor signal | Input | Ignition switch ON | When bright outside of the vehicle | Close to 5 V |
| | | | | When dark outside of the vehicle | Close to 0 V | |
| 114 (R) | Ground | Clutch interlock switch | Input | Clutch interlock switch | OFF (Clutch pedal is not depressed) | 0 V |
| | | | | | ON (Clutch pedal is de- pressed) | Battery voltage |
| 116 (SB) | Ground | Stop lamp switch 1 | Input | — | — | Battery voltage |
| 118 (P) | Ground | Stop lamp switch 2 | Input | Stop lamp switch | OFF (Brake pedal is not depressed) | 0 V |
| | | | | | ON (Brake pedal is de- pressed) | Battery voltage |
| | | | | ICC brake hold relay (With ICC) | OFF | 0 V |
| | | | | | ON | Battery voltage |
| 119 (SB) | Ground | Front door lock as- sembly driver side (Unlock sensor) | Input | Driver door | LOCK status |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p> |
| | | | | | UNLOCK status | 0 V |
| | | | | | — | — |
| 121 (R) | Ground | Key slot switch | Input | When Intelligent Key is inserted into key slot | Battery voltage | |
| | | | | When Intelligent Key is not inserted into key slot | 0 V | |
| 122 (V) | Ground | ACC feedback signal | Input | Ignition switch | OFF | 0 V |
| | | | | ACC or ON | Battery voltage | |
| 123 (W) | Ground | IGN feedback signal | Input | Ignition switch | OFF or ACC | 0 V |
| | | | | ON | Battery voltage | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]
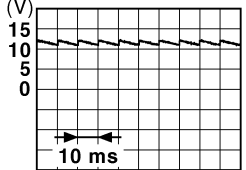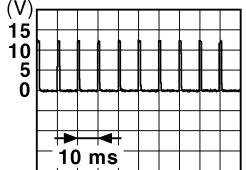
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|---|
| | | Signal name | Input/ Output | | |
| + | - | | | | |
| 124 (LG) | Ground | Passenger door switch | Input | Passenger door switch |  <p style="text-align: right; font-size: small;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p> |
| | | | | OFF (When passenger door closes) | 0 V |
| | | | | ON (When passenger door opens) | 0 V |
| 129 (O) | Ground | Trunk lid opener cancel switch | Input | Trunk lid opener cancel switch |  <p style="text-align: right; font-size: small;">JPMIA0012GB</p> <p style="text-align: center;">1.1 V</p> |
| | | | | CANCEL | 0 V |
| | | | | ON | 0 V |
| 132 (V) | Ground | Power window switch communication | Input/ Output | Ignition switch ON |  <p style="text-align: right; font-size: small;">JPMIA0013GB</p> <p style="text-align: center;">10.2 V</p> |
| | | | | Ignition switch OFF or ACC | 0 V |
| 133 (W) | Ground | Push-button ignition switch illumination | Output | Push-button ignition switch illumination | <p>NOTE: The pulse width of this wave is varied by the illumination brightening/dimming level.</p>  <p style="text-align: right; font-size: small;">JPMIA0159GB</p> |
| | | | | ON (When tail lamps OFF) | 5.5 V |
| | | | | ON (When tail lamps ON) | 0 V |
| | | | | OFF | 0 V |
| 134 (GR) | Ground | LOCK indicator lamp | Output | LOCK indicator lamp | ON |
| | | | | OFF | Battery voltage |
| 137 (O) | Ground | Receiver and sensor ground | Input | Ignition switch ON | 0 V |
| 138 (V) | Ground | Receiver and sensor power supply output | Output | Ignition switch | OFF |
| | | | | ACC or ON | 5.0 V |



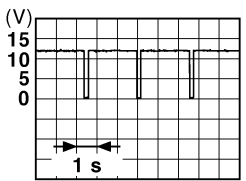
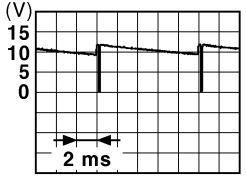
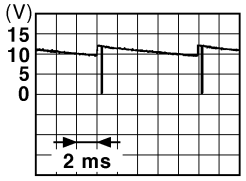
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]
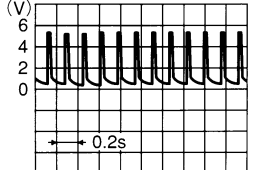
| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|------------------------------------|------------------|---|---|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 139 (L) | Ground | Tire pressure receiver signal | Input/ Output | Ignition switch ON | Standby state |  <small>OCC3881D</small> |
| | | | | | When receiving the signal from the transmitter |  <small>OCC3880D</small> |
| 140 (GR) | Ground | Selector lever P/N position signal | Input | Selector lever | P or N position | 12.0 V |
| | | | | | Except P and N positions | 0 V |
| 141 (G) | Ground | Security indicator signal | Output | Security indicator | ON | 0 V |
| | | | | | Blinking |  <small>JPMIA0014GB</small> 11.3 V |
| 142 (O) | Ground | Combination switch OUTPUT 5 | Output | Combination switch (Wiper intermittent dial 4) | OFF | Battery voltage |
| | | | | | Lighting switch 1ST |  <small>JPMIA0031GB</small> 10.7 V |
| | | | | | Lighting switch HI | |
| | | | | | Lighting switch 2ND | |
| | | | | | Turn signal switch RH | |
| 143 (P) | Ground | Combination switch OUTPUT 1 | Output | Combination switch | All switch OFF (Wiper intermittent dial 4) | 0 V |
| | | | | | Front wiper switch HI (Wiper intermittent dial 4) |  <small>JPMIA0032GB</small> 10.7 V |
| | | | | | Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|---|------------------|---|---|-----------------|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 144 (G) | Ground | Combination switch OUTPUT 2 | Output | Combination switch | All switch OFF (Wiper intermittent dial 4) | 0 V |
| | | | | | Front washer switch ON (Wiper intermittent dial 4) | |
| | | | | | Any of the conditions below with all switch OFF | |
| | | | | | <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 | |
| 145 (L) | Ground | Combination switch OUTPUT 3 | Output | Combination switch (Wiper intermit- tent dial 4) | All switch OFF | 0 V |
| | | | | | Front wiper switch INT | |
| | | | | | Front wiper switch LO | |
| | | | | | Lighting switch AUTO | |
| 146 (SB) | Ground | Combination switch OUTPUT 4 | Output | Combination switch (Wiper intermit- tent dial 4) | All switch OFF | 0 V |
| | | | | | Front fog lamp switch ON | |
| | | | | | Lighting switch 2ND | |
| | | | | | Lighting switch PASS | |
| | | | | | Turn signal switch LH | |
| 149 (W) | Ground | Tire pressure warn- ing check switch | Input | — | 5 V | |
| 150 (GR) | Ground | Driver door switch | Input | Driver door switch | OFF (When driver door closes) | |
| | | | | | ON (When driver door opens) | |
| 151 (G) | Ground | Rear window defog- ger relay | Output | Rear window de- fogger | Active | 0 V |
| | | | | | Not activated | Battery voltage |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) -

INFOID:00000002996263

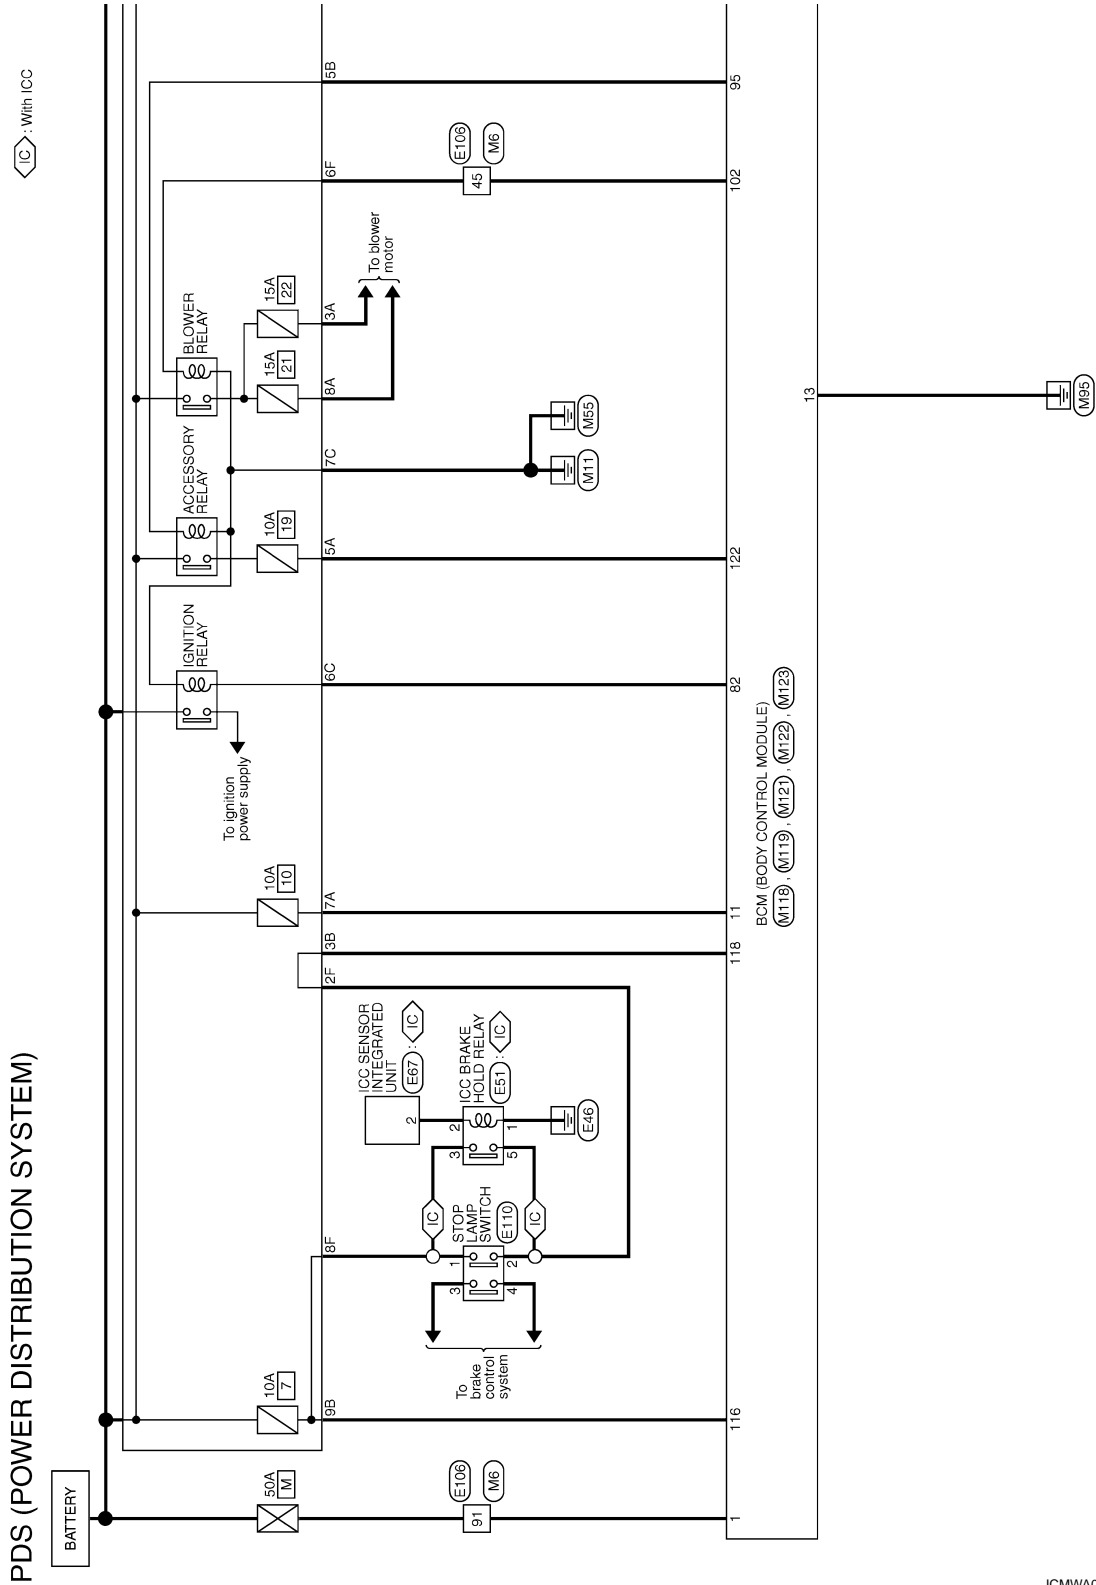


2007/06/15

JCMWA0941GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

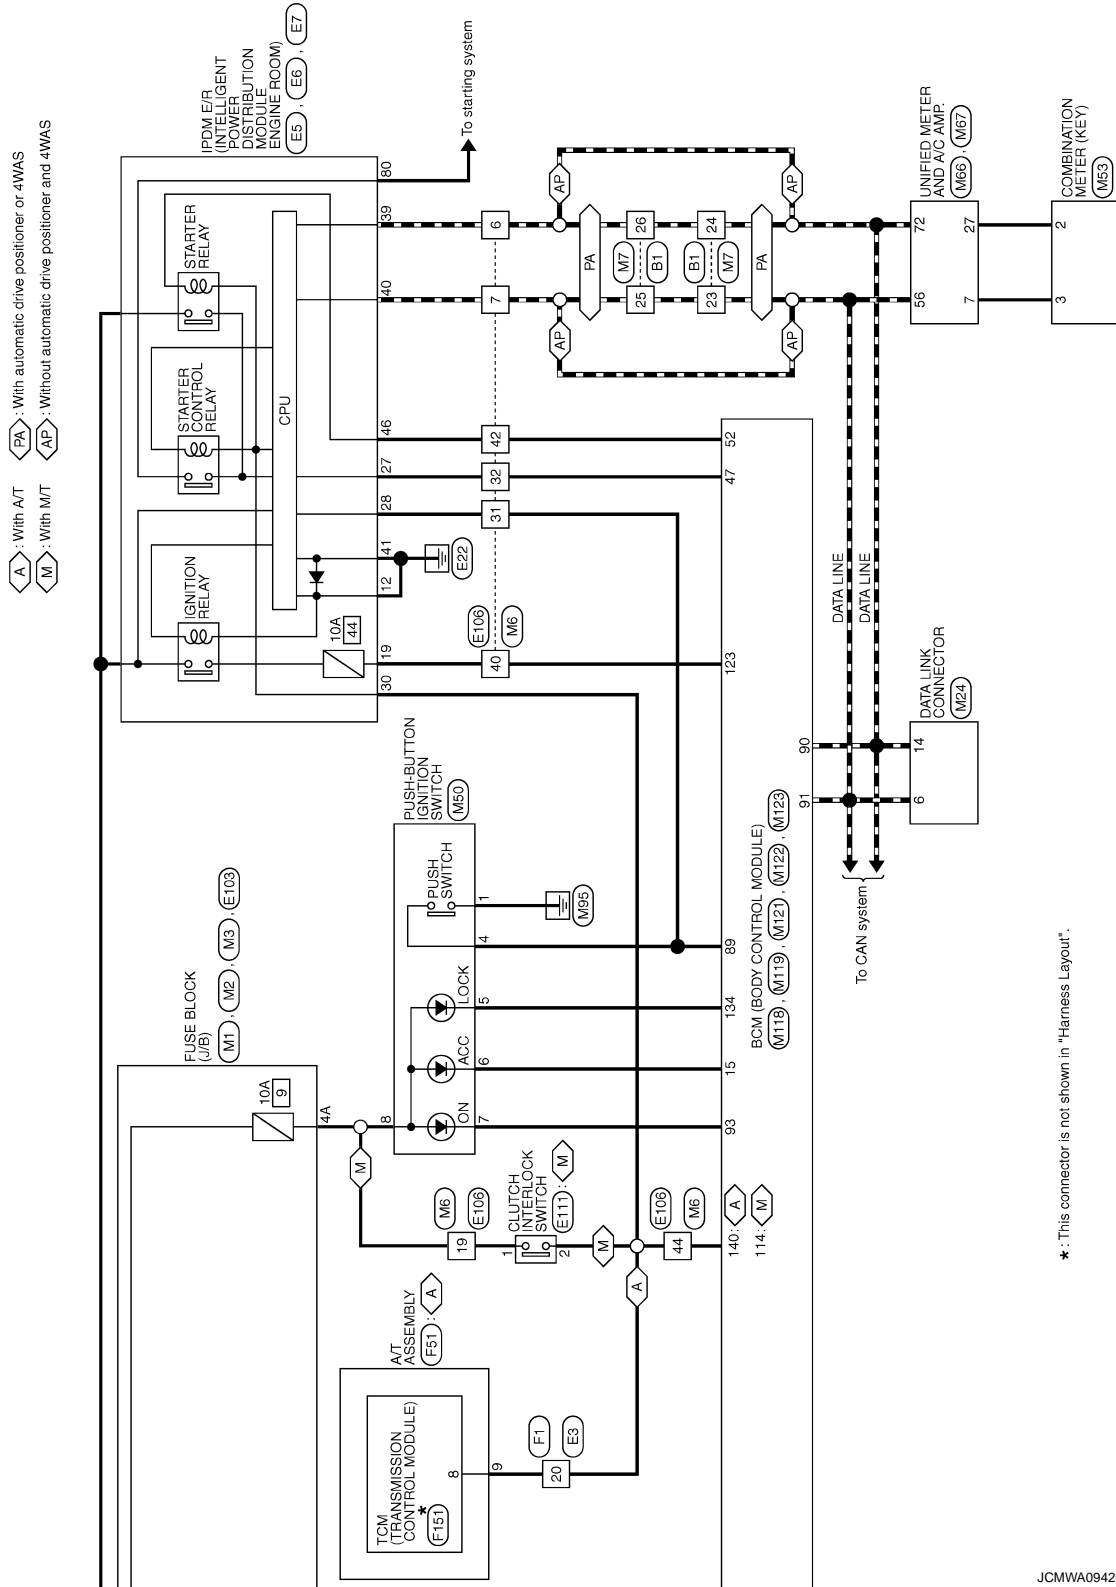

*: This connector is not shown in "Harness Layout".

JCMWA0942GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


PDS (POWER DISTRIBUTION SYSTEM)

| | |
|----------------|-----------------|
| Connector No. | E1 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH20FW-GS16-TM4 |

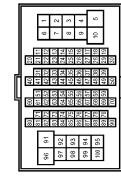

| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 23 | L | - |
| 24 | P | - |
| 25 | L | - |
| 26 | P | - |

| | |
|----------------|-------------------|
| Connector No. | E3 |
| Connector Name | WIRE TO WIRE |
| Connector Type | SAA38MB-RS10-SJ22 |

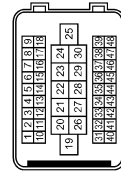


| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 20 | GR | - |

| | |
|----------------|--|
| Connector No. | E5 |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH20FW-GS12-M4-1V |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 12 | B/W | - |
| 19 | W | - |
| 27 | O | - |
| 28 | L | - |
| 30 | GR | - |

| | |
|----------------|--|
| Connector No. | E6 |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH48FW-NH |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 39 | P | - |
| 40 | L | - |
| 41 | B/W | - |
| 46 | BR | - |

| | |
|----------------|--|
| Connector No. | E7 |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH20FW-GS12-M4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 80 | W | - |

| | |
|----------------|----------------------|
| Connector No. | E51 |
| Connector Name | ICC BRAKE HOLD RELAY |
| Connector Type | MS02FL-M2 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | B | - |
| 2 | V | - |
| 3 | R | - |
| 5 | P | - |

| | |
|----------------|----------------------------|
| Connector No. | E67 |
| Connector Name | ICC SENSOR INTEGRATED UNIT |
| Connector Type | RS06FB-FR |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | V | BRK LMP RLY |

| | |
|----------------|------------------|
| Connector No. | E103 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS16FY-CS |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2F | W | - |
| 6F | SB | - |
| 8F | L | - |

JCMWA0943GB


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

| | |
|----------------|-----------------|
| Connector No. | E106 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80FW-GS16-TM4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6 | P | - |
| 7 | L | - |
| 19 | G | - |
| 31 | L | - |
| 32 | O | - |
| 40 | W | - |
| 42 | BR | - |
| 44 | GR | - |
| 45 | SB | - |
| 91 | W | - |

| | |
|----------------|------------------|
| Connector No. | E110 |
| Connector Name | STOP LAMP SWITCH |
| Connector Type | IM04FW-LC |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | L | - |
| 2 | W | - |
| 3 | L | - |
| 4 | SB | - |

| | |
|----------------|-------------------------|
| Connector No. | E111 |
| Connector Name | CLUTCH INTERLOCK SWITCH |
| Connector Type | IS02EL |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | G | - |
| 2 | GR | - |

| | |
|----------------|-------------------|
| Connector No. | F1 |
| Connector Name | WIRE TO WIRE |
| Connector Type | SAA36FB-RS10-SJZZ |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 20 | GR | - |

| | |
|----------------|--------------|
| Connector No. | F51 |
| Connector Name | A/T ASSEMBLY |
| Connector Type | RK1UFG-DGY |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 9 | GR | - |

| | |
|----------------|-----------------------------------|
| Connector No. | F151 |
| Connector Name | TCM (TRANSMISSION CONTROL MODULE) |
| Connector Type | SP1UFBGY |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 8 | G | START RLY |

| | |
|----------------|------------------|
| Connector No. | M1 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | INS06FW-M2 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 3A | L | - |
| 4A | P | - |
| 5A | L | - |
| 7A | R | - |
| 8A | L | - |

| | |
|----------------|------------------|
| Connector No. | M2 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | INS10FW-CS |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 3B | P | - |
| 5B | O | - |
| 9B | SB | - |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

| | |
|----------------|------------------|
| Connector No. | M3 |
| Connector Name | FUSE BLOCK (J/E) |
| Connector Type | NS12FW-GS |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6C | R | - |
| 7C | B | - |

| | |
|----------------|-------------------|
| Connector No. | M6 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80MW-CS (E-TM4) |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6 | P | - |
| 7 | L | - |
| 19 | G | - |
| 31 | L | - |
| 32 | Y | - |
| 40 | W | - |
| 42 | SB | - |
| 44 | GR | - [With A/T] |
| 44 | R | - [With M/T] |
| 45 | O | - |
| 91 | W | - |

| | |
|----------------|-------------------|
| Connector No. | M7 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80MW-CS (E-TM4) |

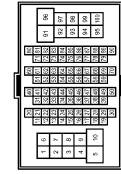


| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 23 | L | - |
| 24 | P | - |
| 25 | L | - |
| 26 | P | - |

| | |
|----------------|---------------------|
| Connector No. | M24 |
| Connector Name | DATA LINK CONNECTOR |
| Connector Type | BD16FW |

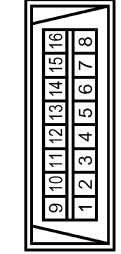


| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6 | L | - |
| 14 | P | - |

| | |
|----------------|-------------------------------|
| Connector No. | M50 |
| Connector Name | PUSH-BUTTON (IGNITION SWITCH) |
| Connector Type | TK08FBR |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | GR | - |
| 4 | BR | - |
| 5 | LG | - |
| 6 | O | - |
| 7 | V | - |
| 8 | P | - |

| | |
|----------------|-------------------|
| Connector No. | M53 |
| Connector Name | COMBINATION METER |
| Connector Type | SAB4DFW |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | LG | COMM (METER->AMP2) |
| 3 | GR | COMM (AMP->METER) |

| | |
|----------------|----------------------------|
| Connector No. | M66 |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH40PW-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 7 | GR | COMM (AMP->METER) |
| 27 | LG | COMM (METER->AMP) |

| | |
|----------------|----------------------------|
| Connector No. | M67 |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH32FW-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 56 | L | CAN-H |
| 72 | P | CAN-L |

JCMWA0945GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

| | |
|----------------|---------------------------|
| Connector No. | M118 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TM35E-LC |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | W | BAT (F/L) |

| | |
|----------------|---------------------------|
| Connector No. | M119 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | NS16FW-CS |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 11 | R | BAT (FUSE) |
| 13 | B | GND |
| 15 | O | ACC LED |

| | |
|----------------|---------------------------|
| Connector No. | M121 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FGY-NH |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 47 | Y | ING USM CONT1 |
| 52 | SB | ST CONT USM |

| | |
|----------------|---------------------------|
| Connector No. | M122 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40EP-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 82 | R | IGN ELEC CONT |
| 89 | BR | ENG SW |
| 90 | P | CAN-L |
| 91 | L | CAN-H |
| 93 | V | ON LED |
| 95 | O | ACC CONT |
| 102 | O | IGN2 CONT |

| | |
|----------------|---------------------------|
| Connector No. | M123 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FG-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 114 | R | CLUTCH SW |
| 116 | SB | STOP LAMP LOW |
| 118 | BR | STOP LAMP HIGH |
| 122 | V | ACC F/B |
| 123 | W | IGN F/B |
| 134 | LG | LOCK LED |
| 140 | GR | SHIFT N/P |

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JCMWA0946GB

INFOID:000000004743912

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|--|---|
| B2013: ID DISCORD BCM-S/L | Inhibit engine cranking | Erase DTC |
| B2014: CHAIN OF S/L-BCM | Inhibit engine cranking | Erase DTC |
| B2190: NATS ANTenna AMP | Inhibit engine cranking | Erase DTC |
| B2191: DIFFERENCE OF KEY | Inhibit engine cranking | Erase DTC |
| B2192: ID DISCORD BCM-ECM | Inhibit engine cranking | Erase DTC |
| B2193: CHAIN OF BCM-ECM | Inhibit engine cranking | Erase DTC |
| B2195: ANTI SCANNING | Inhibit engine cranking | Ignition switch ON → OFF |
| B2557: VEHICLE SPEED | Inhibit steering lock | When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms |
| B2560: STARTER CONT RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal |
| B2563: HI VOLTAGE | <ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock | 500 ms after the power supply voltage decreases to less than 18 V |
| B2601: SHIFT POSITION | Inhibit steering lock | 500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN) |
| B2602: SHIFT POSITION | Inhibit steering lock | 5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more |
| B2603: SHIFT POSI STATUS | Inhibit steering lock | 500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V) |
| B2604: PNP SW | Inhibit steering lock | 500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF |
| B2605: PNP SW | Inhibit steering lock | 500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position <ul style="list-style-type: none"> - Power position: IGN - Selector lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON |
| B2606: S/L RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal) |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|--|---|
| B2607: S/L RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> Steering lock relay signal (Request signal) Steering lock relay signal (Condition signal) |
| B2608: STARTER RELAY | Inhibit engine cranking | 500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> Starter motor relay control signal Starter relay status signal (CAN) |
| B2609: S/L STATUS | <ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock | When the following steering lock conditions agree <ul style="list-style-type: none"> BCM steering lock control status Steering lock condition No. 1 signal status Steering lock condition No. 2 signal status |
| B260A: IGNITION RELAY | Inhibit engine cranking | 500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> IGN relay (IPDM E/R) control signal: OFF (Battery voltage) Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal) |
| B260F: ENG STATE SIG LOST | Maintains the power supply position attained at the time of DTC detection | When any of the following conditions are fulfilled <ul style="list-style-type: none"> Power position changes to ACC Receives engine status signal (CAN) |
| B2612: S/L STATUS | <ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock | When any of the following conditions are fulfilled <ul style="list-style-type: none"> Steering lock unit status signal (CAN) is received normally The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R) |
| B2617: STARTER RELAY CIRC | Inhibit engine cranking | 1 second after the starter motor relay control inside BCM becomes normal |
| B2618: BCM | Inhibit engine cranking | 1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal |
| B2619: BCM | Inhibit engine cranking | 1 second after the steering lock unit power supply output control inside BCM becomes normal |
| B261E: VEHICLE TYPE | Inhibit engine cranking | BCM initialization |
| B26E1: ENG STATE NO RES | Inhibit engine cranking | When any of the following conditions are fulfilled <ul style="list-style-type: none"> Power position changes to ACC Receives engine status signal (CAN) |

HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.

BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while activating the hazard warning lamp.

DTC Inspection Priority Chart

INFOID:000000004743913

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | DTC |
|----------|--|
| 1 | <ul style="list-style-type: none"> B2562: LOW VOLTAGE B2563: HI VOLTAGE |
| 2 | <ul style="list-style-type: none"> U1000: CAN COMM U1010: CONTROL UNIT(CAN) |
| 3 | <ul style="list-style-type: none"> B2190: NATS ANTENA AMP B2191: DIFFERENCE OF KEY B2192: ID DISCORD BCM-ECM B2193: CHAIN OF BCM-ECM B2195: ANTI SCANNING |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Priority | DTC |
|----------|---|
| 4 | <ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2611: ACC RELAY • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E1: ENG STATE NO RES • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG |
| 5 | <ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1712: [CHECKSUM ERR] FL • C1713: [CHECKSUM ERR] FR • C1714: [CHECKSUM ERR] RR • C1715: [CHECKSUM ERR] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1720: [CODE ERR] FL • C1721: [CODE ERR] FR • C1722: [CODE ERR] RR • C1723: [CODE ERR] RL • C1724: [BATT VOLT LOW] FL • C1725: [BATT VOLT LOW] FR • C1726: [BATT VOLT LOW] RR • C1727: [BATT VOLT LOW] RL • C1734: CONTROL UNIT |
| 6 | <ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

DTC Index

INFOID:000000004743914

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data and IGN Counter, refer to [BCS-13, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

| CONSULT display | Fail-safe | Freeze Frame Data | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Reference page |
|--|-----------|-------------------|---------------------------------|---------------------------------------|------------------------|
| No DTC is detected. further testing may be required. | — | — | — | — | — |
| U1000: CAN COMM | — | — | — | — | BCS-33 |
| U1010: CONTROL UNIT(CAN) | — | — | — | — | BCS-34 |
| U0415: VEHICLE SPEED SIG | — | — | — | — | BCS-35 |
| B2013: ID DISCORD BCM-S/L | × | × | — | — | SEC-54 |
| B2014: CHAIN OF S/L-BCM | × | × | — | — | SEC-55 |
| B2190: NATS ANTENA AMP | × | — | — | — | SEC-46 |
| B2191: DIFFERENCE OF KEY | × | — | — | — | SEC-49 |
| B2192: ID DISCORD BCM-ECM | × | — | — | — | SEC-50 |
| B2193: CHAIN OF BCM-ECM | × | — | — | — | SEC-52 |
| B2195: ANTI SCANNING | × | — | — | — | SEC-53 |
| B2553: IGNITION RELAY | — | × | — | — | PCS-50 |
| B2555: STOP LAMP | — | × | — | — | SEC-58 |
| B2556: PUSH-BTN IGN SW | — | × | × | — | SEC-60 |
| B2557: VEHICLE SPEED | × | × | × | — | SEC-62 |
| B2560: STARTER CONT RELAY | × | × | × | — | SEC-63 |
| B2562: LOW VOLTAGE | — | × | — | — | BCS-36 |
| B2563: HI VOLTAGE | × | × | × | — | BCS-37 |
| B2601: SHIFT POSITION | × | × | × | — | SEC-64 |
| B2602: SHIFT POSITION | × | × | × | — | SEC-67 |
| B2603: SHIFT POSI STATUS | × | × | × | — | SEC-69 |
| B2604: PNP SW | × | × | × | — | SEC-72 |
| B2605: PNP SW | × | × | × | — | SEC-74 |
| B2606: S/L RELAY | × | × | × | — | SEC-76 |
| B2607: S/L RELAY | × | × | × | — | SEC-77 |
| B2608: STARTER RELAY | × | × | × | — | SEC-79 |
| B2609: S/L STATUS | × | × | × | — | SEC-81 |
| B260A: IGNITION RELAY | × | × | × | — | PCS-52 |
| B260B: STEERING LOCK UNIT | — | × | × | — | SEC-85 |
| B260C: STEERING LOCK UNIT | — | × | × | — | SEC-86 |
| B260D: STEERING LOCK UNIT | — | × | × | — | SEC-87 |
| B260F: ENG STATE SIG LOST | × | × | × | — | SEC-88 |
| B2611: ACC RELAY | — | × | — | — | PCS-54 |
| B2612: S/L STATUS | × | × | × | — | SEC-90 |
| B2614: ACC RELAY CIRC | — | × | × | — | PCS-57 |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| CONSULT display | Fail-safe | Freeze Frame Data | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Reference page |
|---------------------------|-----------|-------------------|---------------------------------|---------------------------------------|-------------------------|
| B2615: BLOWER RELAY CIRC | — | × | × | — | PCS-60 |
| B2616: IGN RELAY CIRC | — | × | × | — | PCS-63 |
| B2617: STARTER RELAY CIRC | × | × | × | — | SEC-94 |
| B2618: BCM | × | × | × | — | PCS-66 |
| B2619: BCM | × | × | × | — | SEC-96 |
| B261A: PUSH-BTN IGN SW | — | × | × | — | SEC-97 |
| B261E: VEHICLE TYPE | × | × | × (Turn ON for 15 seconds) | — | SEC-100 |
| B2621: INSIDE ANTENNA | — | × | — | — | DLK-61 |
| B2622: INSIDE ANTENNA | — | × | — | — | DLK-63 |
| B2623: INSIDE ANTENNA | — | × | — | — | DLK-65 |
| B26E1: ENG STATE NO RES | × | × | × | — | SEC-89 |
| C1704: LOW PRESSURE FL | — | — | — | × | WT-15 |
| C1705: LOW PRESSURE FR | — | — | — | × | WT-15 |
| C1706: LOW PRESSURE RR | — | — | — | × | WT-15 |
| C1707: LOW PRESSURE RL | — | — | — | × | WT-15 |
| C1708: [NO DATA] FL | — | — | — | × | WT-17 |
| C1709: [NO DATA] FR | — | — | — | × | WT-17 |
| C1710: [NO DATA] RR | — | — | — | × | WT-17 |
| C1711: [NO DATA] RL | — | — | — | × | WT-17 |
| C1712: [CHECKSUM ERR] FL | — | — | — | × | WT-20 |
| C1713: [CHECKSUM ERR] FR | — | — | — | × | WT-20 |
| C1714: [CHECKSUM ERR] RR | — | — | — | × | WT-20 |
| C1715: [CHECKSUM ERR] RL | — | — | — | × | WT-20 |
| C1716: [PRESSDATA ERR] FL | — | — | — | × | WT-23 |
| C1717: [PRESSDATA ERR] FR | — | — | — | × | WT-23 |
| C1718: [PRESSDATA ERR] RR | — | — | — | × | WT-23 |
| C1719: [PRESSDATA ERR] RL | — | — | — | × | WT-23 |
| C1720: [CODE ERR] FL | — | — | — | × | WT-25 |
| C1721: [CODE ERR] FR | — | — | — | × | WT-25 |
| C1722: [CODE ERR] RR | — | — | — | × | WT-25 |
| C1723: [CODE ERR] RL | — | — | — | × | WT-25 |
| C1724: [BATT VOLT LOW] FL | — | — | — | × | WT-28 |
| C1725: [BATT VOLT LOW] FR | — | — | — | × | WT-28 |
| C1726: [BATT VOLT LOW] RR | — | — | — | × | WT-28 |
| C1727: [BATT VOLT LOW] RL | — | — | — | × | WT-28 |
| C1729: VHCL SPEED SIG ERR | — | — | — | × | WT-31 |
| C1734: CONTROL UNIT | — | — | — | × | WT-32 |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000002996301

VALUES ON THE DIAGNOSIS TOOL

| Monitor Item | Condition | | Value/Status |
|---------------|---|---|--------------|
| RAD FAN REQ | Engine idle speed | Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc. | 0 - 100 % |
| AC COMP REQ | Engine running | A/C switch OFF | Off |
| | | A/C switch ON (Compressor is operating) | On |
| TAIL&CLR REQ | Lighting switch OFF | | Off |
| | Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated) | | On |
| HL LO REQ | Lighting switch OFF | | Off |
| | Lighting switch 2ND HI or AUTO (Light is illuminated) | | On |
| HL HI REQ | Lighting switch OFF | | Off |
| | Lighting switch HI | | On |
| FR FOG REQ | Lighting switch 2ND or AUTO (Light is illuminated) | Front fog lamp switch OFF | Off |
| | | <ul style="list-style-type: none"> • Front fog lamp switch ON • Daytime running light activated (Only for Canada) | On |
| FR WIP REQ | Ignition switch ON | Front wiper switch OFF | Stop |
| | | Front wiper switch INT | 1LOW |
| | | Front wiper switch LO | Low |
| | | Front wiper switch HI | Hi |
| WIP AUTO STOP | Ignition switch ON | Front wiper stop position | STOP P |
| | | Any position other than front wiper stop position | ACT P |
| WIP PROT | Ignition switch ON | Front wiper operates normally | Off |
| | | Front wiper stops at fail-safe operation | BLOCK |
| IGN RLY1 -REQ | Ignition switch OFF or ACC | | Off |
| | Ignition switch ON | | On |
| IGN RLY | Ignition switch OFF or ACC | | Off |
| | Ignition switch ON | | On |
| PUSH SW | Release the push-button ignition switch | | Off |
| | Press the push-button ignition switch | | On |
| INTER/NP SW | Ignition switch ON | A/T selector lever in any position other than P or N (A/T models) | Off |
| | | Release clutch pedal (M/T models) | |
| | Ignition switch ON | A/T selector lever in P or N position (A/T models) | On |
| | | Depress clutch pedal (M/T models) | |
| ST RLY CONT | Ignition switch ON | | Off |
| | At engine cranking | | On |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


| Monitor Item | Condition | Value/Status |
|----------------|---|--------------|
| IHBT RLY -REQ | Ignition switch ON | Off |
| | At engine cranking | On |
| ST/INHI RLY | Ignition switch ON | Off |
| | At engine cranking | INHI → ST |
| | The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF | UNKWN |
| DETENT SW | Ignition switch ON <ul style="list-style-type: none"> • Press the selector button with A/T selector lever in P position • A/T selector lever in any position other than P | Off |
| | Release the A/T selector button with A/T selector lever in P position NOTE: Fixed On for M/T models | On |
| S/L RLY -REQ | None of the conditions below are present | Off |
| | <ul style="list-style-type: none"> • Open the driver door after the ignition switch is turned OFF (for a few seconds) • Press the push-button ignition switch when the steering lock is activated • Depress the clutch pedal when the steering lock is activated | On |
| S/L STATE | Steering lock is activated | LOCK |
| | Steering lock is deactivated | UNLK |
| | [DTC: B210A] is detected | UNKWN |
| DTRL REQ | NOTE: The item is indicated, but not monitored. | Off |
| OIL P SW | Ignition switch OFF, ACC or engine running | Open |
| | Ignition switch ON | Close |
| HOOD SW | Close the hood | Off |
| | Open the hood | On |
| HL WASHER REQ | NOTE: The item is indicated, but not monitored. | Off |
| THFT HRN REQ | Not operation | Off |
| | <ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM | On |
| HORN CHIRP | Not operating | Off |
| | Door locking with Intelligent Key (horn chirp mode) | On |
| CRNRNG LMP REQ | NOTE: The item is indicated, but not monitored. | Off |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

TERMINAL LAYOUT

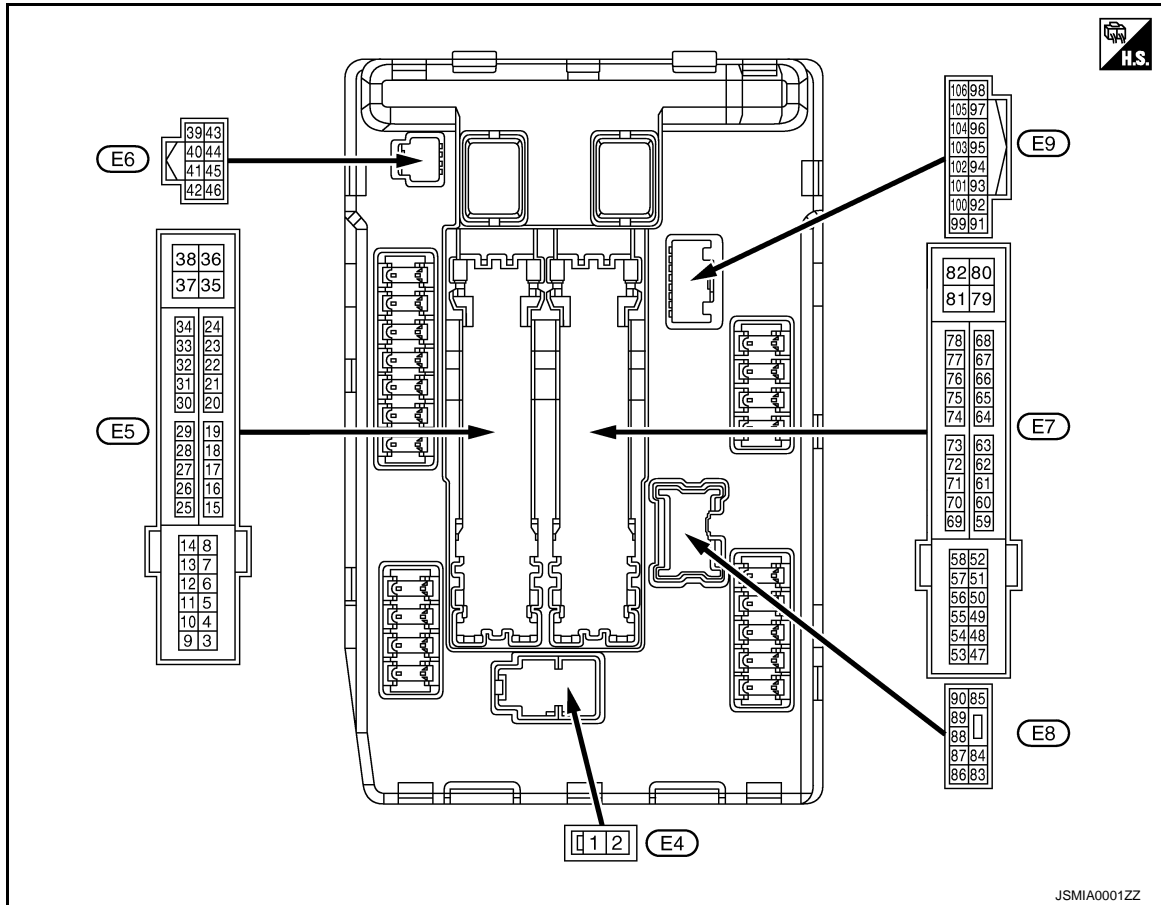

PHYSICAL VALUES

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---------------------------|--|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 1 (W) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 2 (L) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 4 (V) | Ground | Front wiper LO | Output | Ignition switch OFF | Front wiper switch OFF | 0 V |
| | | | | Ignition switch ON | Front wiper switch LO | Battery voltage |
| 5 (L) | Ground | Front wiper HI | Output | Ignition switch OFF | Front wiper switch OFF | 0 V |
| | | | | Ignition switch ON | Front wiper switch HI | Battery voltage |
| 7 (R) | Ground | Tail, license plate lamps & interior lamps | Output | Ignition switch OFF | Lighting switch OFF | 0 V |
| | | | | Ignition switch ON | Lighting switch 1ST | Battery voltage |
| 11 (BR) | Ground | Steering lock unit power supply | Output | Ignition switch OFF | A few seconds after open- ing the driver door | Battery voltage |
| | | | | Ignition switch LOCK | Press the push-button ig- nition switch | Battery voltage |
| | | | | Ignition switch ACC or ON | | 0 V |
| 12 (B/W) | Ground | Ground | — | Ignition switch ON | | 0 V |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|--------------------------------|------------------|---|---|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 13 (Y) | Ground | Fuel pump power supply | Output | Approximately 1 second or more after turning the ignition switch ON | | 0 V |
| | | | | <ul style="list-style-type: none"> • Approximately 1 second after turning the ignition switch ON • Engine running | | Battery voltage |
| 16 (LG) | Ground | Front wiper auto stop | Input | Ignition switch ON | Front wiper stop position | 0 V |
| | | | | | Any position other than front wiper stop position | Battery voltage |
| 19 (W) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 25 (G) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 26*1 (R) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 27 (O) | Ground | Ignition relay monitor | Input | Ignition switch OFF or ACC | | Battery voltage |
| | | | | Ignition switch ON | | 0 V |
| 28 (L) | Ground | Push-button ignition switch | Input | Press the push-button ignition switch | | 0 V |
| | | | | Release the push-button ignition switch | | Battery voltage |
| 30 (GR) | Ground | Starter relay control | Input | A/T models | A/T selector lever in any position other than P or N (Ignition switch ON) | 0 V |
| | | | | | A/T selector lever P or N (Ignition switch ON) | Battery voltage |
| | | | | M/T models | Release the clutch pedal | 0 V |
| | | | | | Depress the clutch pedal | Battery voltage |
| 32 (L) | Ground | Steering lock unit condition-1 | Input | Steering lock is activated | | 0 V |
| | | | | Steering lock is deactivated | | Battery voltage |
| 33 (P) | Ground | Steering lock unit condition-2 | Input | Steering lock is activated | | Battery voltage |
| | | | | Steering lock is deactivated | | 0 V |
| 36 (G) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 39 (P) | — | CAN - L | Input/ Output | — | | — |
| 40 (L) | — | CAN - H | Input/ Output | — | | — |
| 41 (B/W) | Ground | Ground | — | Ignition switch ON | | 0 V |
| 42 (Y) | Ground | Cooling fan relay control | Input | Ignition switch OFF or ACC | | 0 V |
| | | | | Ignition switch ON | | 0.7 V |
| 43*2 (SB) | Ground | A/T device (Detention switch) | Input | Ignition switch ON | Press the A/T selector button (A/T selector lever P) | Battery voltage |
| | | | | | <ul style="list-style-type: none"> • A/T selector lever in any position other than P • Release the A/T selector button (A/T selector lever P) | |
| 44 (W) | Ground | Horn relay control | Input | The horn is deactivated | | Battery voltage |
| | | | | The horn is activated | | 0 V |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---|---|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 45 (G) | Ground | Anti theft horn relay control | Input | The horn is deactivated | | Battery voltage |
| | | | | The horn is activated | | 0 V |
| 46 (BR) | Ground | Starter relay control | Input | A/T models | A/T selector lever in any position other than P or N (Ignition switch ON) | 0 V |
| | | | | | A/T selector lever P or N (Ignition switch ON) | Battery voltage |
| | | | | M/T models | Release the clutch pedal | 0 V |
| | | | | | Depress the clutch pedal | Battery voltage |
| 48 (L) | Ground | A/C relay power supply | Output | Engine running | A/C switch OFF | 0 V |
| | | | | | A/C switch ON (A/C compressor is operating) | Battery voltage |
| 49 (R) | Ground | ECM relay power supply | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | | 0 V |
| | | | | <ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) | | Battery voltage |
| 51 (G) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 53 (W) | Ground | ECM relay power supply | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | | 0 V |
| | | | | <ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) | | Battery voltage |
| 54 (R) | Ground | Throttle control motor relay power supply | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | | 0 V |
| | | | | <ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) | | Battery voltage |
| 55 (BR) | Ground | ECM power supply | Output | Ignition switch OFF | | Battery voltage |
| 56 (V) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 57 (R) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 58*2 (P) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 69 (W) | Ground | ECM relay control | Output | Ignition switch OFF (More than a few seconds after turning ignition switch OFF) | | Battery voltage |
| | | | | <ul style="list-style-type: none"> • Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF) | | 0 - 1.5 V |




A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]
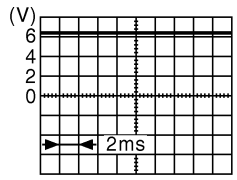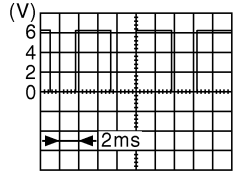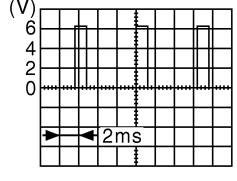
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---|---------------------|--|
| + | - | Signal name | Input/ Output | | | |
| 70 (O) | Ground | Throttle control motor re- lay control | Output | Ignition switch ON → OFF | | 0 -1.0 V ↓ Battery voltage ↓ 0 V |
| | | | | Ignition switch ON | | 0 - 1.0 V |
| 73*3 (P) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 74 (G) | Ground | Ignition relay power supply | Output | Ignition switch OFF | | 0 V |
| | | | | Ignition switch ON | | Battery voltage |
| 75 (Y) | Ground | Oil pressure switch | Input | Ignition switch ON | Engine stopped | 0 V |
| | | | | Ignition switch ON | Engine running | Battery voltage |
| 76 (V) | Ground | Power generation com- mand signal | Output | Ignition switch ON | |  <p style="text-align: right; font-size: small;">JPMIA0001GB</p> <p style="text-align: center;">6.3 V</p> |
| | | | | 40% is set on "ACTIVE TEST", "AL- TERNATOR DUTY" of "ENGINE" | |  <p style="text-align: right; font-size: small;">JPMIA0002GB</p> <p style="text-align: center;">3.8 V</p> |
| | | | | 80% is set on "ACTIVE TEST", "AL- TERNATOR DUTY" of "ENGINE" | |  <p style="text-align: right; font-size: small;">JPMIA0003GB</p> <p style="text-align: center;">1.4 V</p> |
| 77 (L) | Ground | Fuel pump relay control | Output | <ul style="list-style-type: none"> • Approximately 1 second after turning the ignition switch ON • Engine running | | 0 - 1.0 V |
| | | | | Approximately 1 second or more after turning the ignition switch ON | | Battery voltage |
| 80 (W) | Ground | Starter motor | Output | At engine cranking | | Battery voltage |
| 83 (R) | Ground | Headlamp LO (RH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | Lighting switch 2ND | Battery voltage |
| 84 (P) | Ground | Headlamp LO (LH) | Output | Ignition switch ON | Lighting switch OFF | 0 V |
| | | | | | Lighting switch 2ND | Battery voltage |

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|--------------------------|------------------|---------------------------|---|--------------------|
| + | - | Signal name | Input/ Output | | | |
| 86 (W) | Ground | Front fog lamp (RH) | Output | Lighting switch 2ND | <ul style="list-style-type: none"> • Front fog lamp switch ON • Daytime running light activated (Only for Canada) | Battery voltage |
| | | | | Front fog lamp switch OFF | 0 V | |
| 87 (L) | Ground | Front fog lamp (LH) | Output | Lighting switch 2ND | <ul style="list-style-type: none"> • Front fog lamp switch ON • Daytime running light activated (Only for Canada) | Battery voltage |
| | | | | Front fog lamp switch OFF | 0 V | |
| 88 (G) | Ground | Washer pump power supply | Output | Ignition switch ON | | Battery voltage |
| 89 (BR) | Ground | Headlamp HI (RH) | Output | Ignition switch ON | <ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS | Battery voltage |
| | | | | Lighting switch OFF | 0 V | |
| 90 (P) | Ground | Headlamp HI (LH) | Output | Ignition switch ON | <ul style="list-style-type: none"> • Lighting switch HI • Lighting switch PASS | Battery voltage |
| | | | | Lighting switch OFF | 0 V | |
| 91 (P) | Ground | Parking lamp (RH) | Output | Ignition switch ON | Lighting switch 1ST | Battery voltage |
| | | | | Lighting switch OFF | 0 V | |
| 92 (O) | Ground | Parking lamp (LH) | Output | Ignition switch ON | Lighting switch 1ST | Battery voltage |
| | | | | Lighting switch OFF | 0 V | |
| 97 (V) | Ground | Cooling fan control | Output | Engine idling | | 0 - 5 V |
| 104 (LG) | Ground | Hood switch | Input | Close the hood | | Battery voltage |
| | | | | Open the hood | | 0 V |

*1: Only for the models with ICC system

*2: A/T models only

*3: M/T models only

PCS


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) -

INFOID:000000003076998

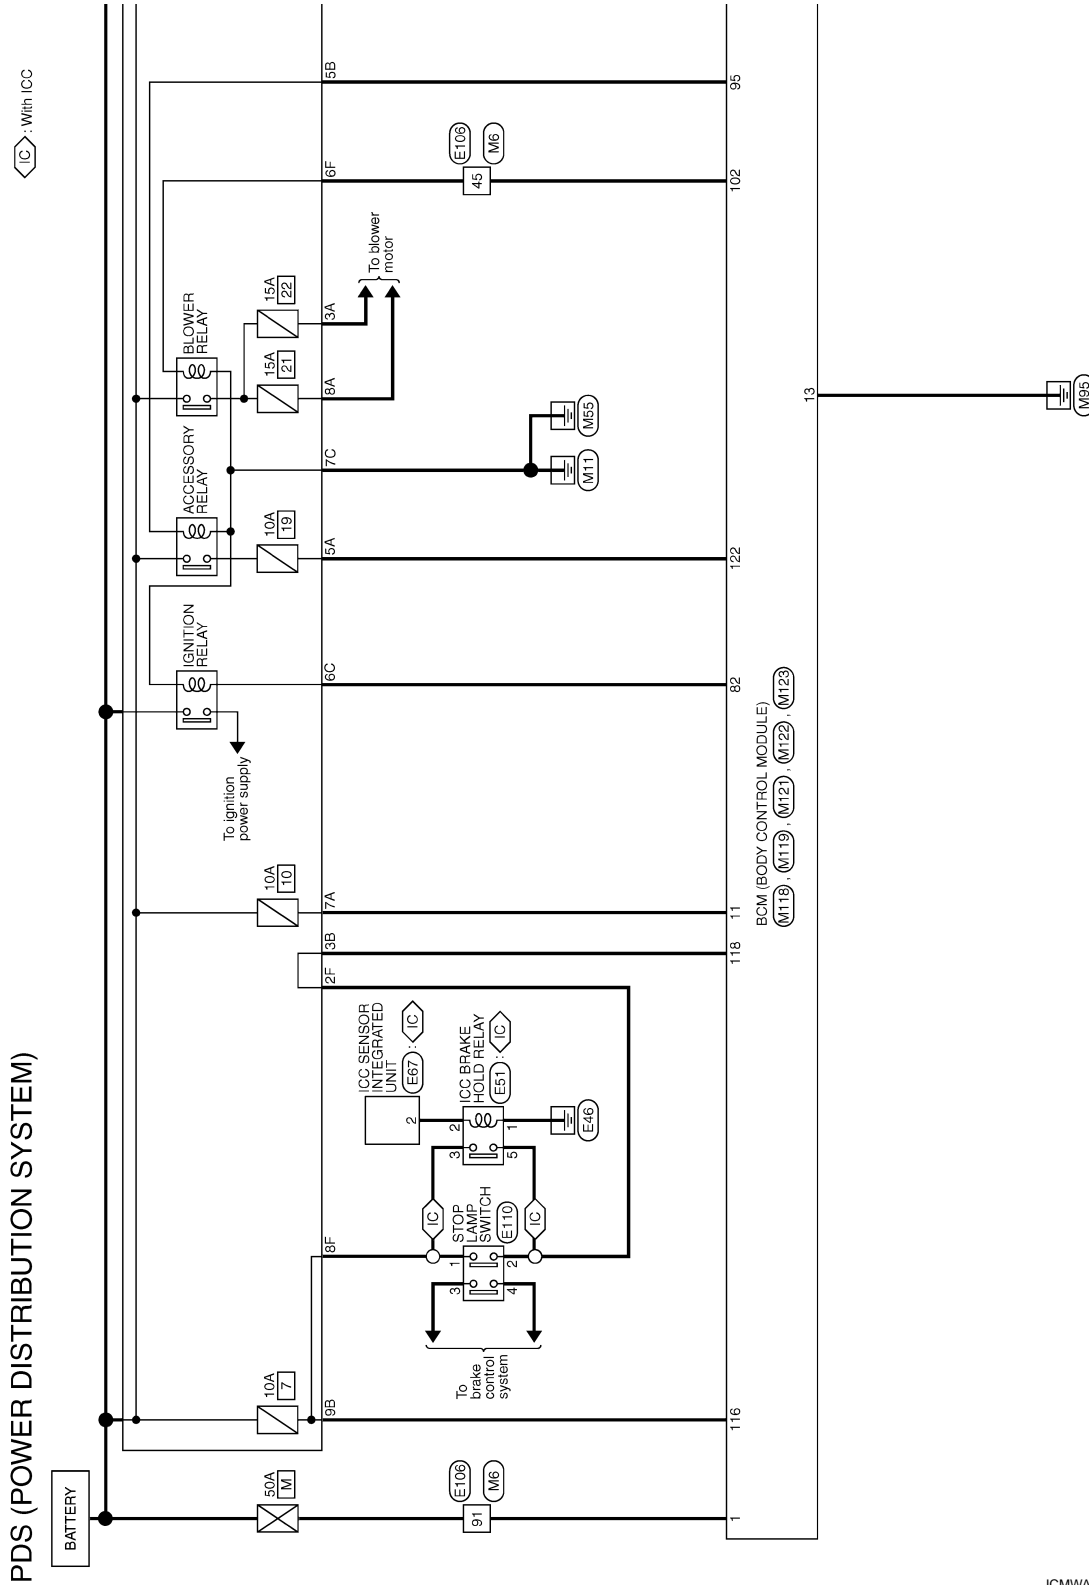


2007/06/15

JCMWA0941GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

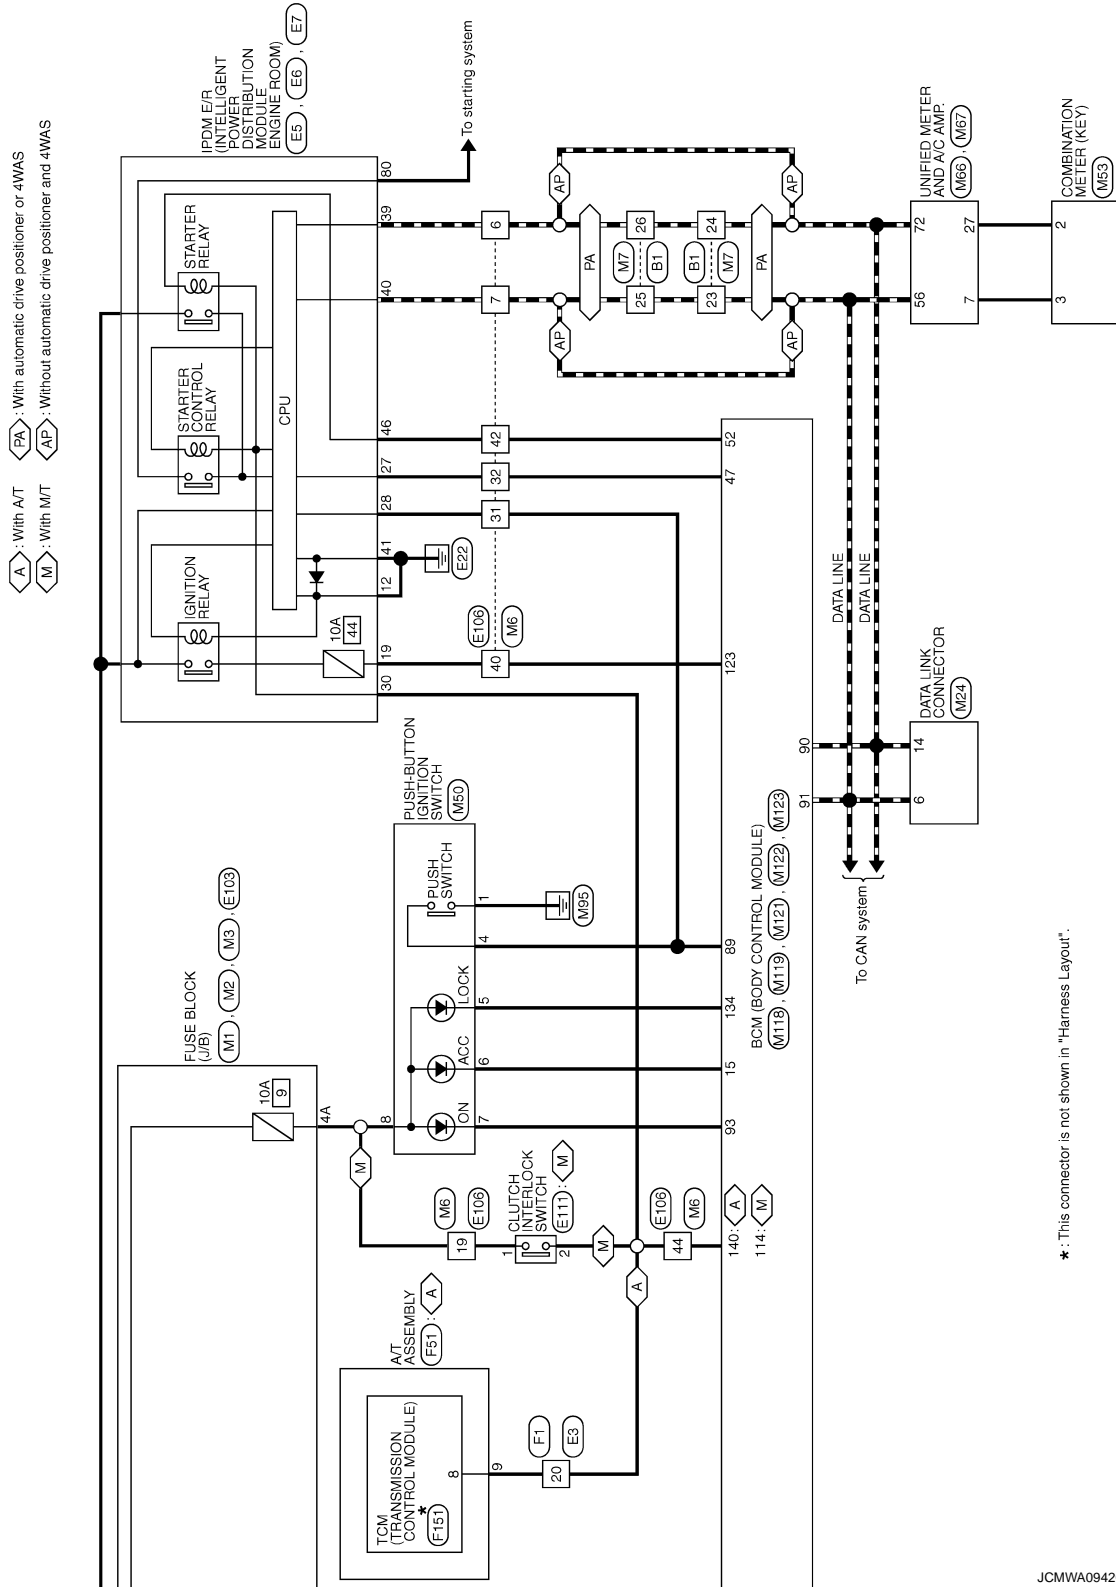

*: This connector is not shown in "Harness Layout".

JCMWA0942GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]


PDS (POWER DISTRIBUTION SYSTEM)

| | |
|----------------|-----------------|
| Connector No. | E1 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH8DFW-GS16-TM4 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 23 | L | - |
| 24 | P | - |
| 25 | L | - |
| 26 | P | - |

| | |
|----------------|-------------------|
| Connector No. | E3 |
| Connector Name | WIRE TO WIRE |
| Connector Type | SAA38MB-RS10-SJ22 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 20 | GR | - |

| | |
|----------------|--|
| Connector No. | E5 |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH2DFW-GS12-M4-1V |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 12 | B/W | - |
| 19 | W | - |
| 27 | O | - |
| 28 | L | - |
| 30 | GR | - |

| | |
|----------------|--|
| Connector No. | E6 |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH8DFW-NH |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 39 | P | - |
| 40 | L | - |
| 41 | B/W | - |
| 46 | BR | - |

| | |
|----------------|--|
| Connector No. | E7 |
| Connector Name | IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM |
| Connector Type | TH2DFW-GS12-M4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 80 | W | - |

| | |
|----------------|----------------------|
| Connector No. | E51 |
| Connector Name | ICC BRAKE HOLD RELAY |
| Connector Type | MS02FL-M2 |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | B | - |
| 2 | V | - |
| 3 | R | - |
| 5 | P | - |

| | |
|----------------|----------------------------|
| Connector No. | E67 |
| Connector Name | ICC SENSOR INTEGRATED UNIT |
| Connector Type | RS06FB-FR |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | V | BRK LMP RLY |

| | |
|----------------|------------------|
| Connector No. | E103 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | NS16FY-CS |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2F | W | - |
| 6F | SB | - |
| 8F | L | - |


JCMWA0943GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)

| | |
|----------------|-----------------|
| Connector No. | E106 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80FW-GS16-TM4 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6 | P | - |
| 7 | L | - |
| 19 | G | - |
| 31 | L | - |
| 32 | O | - |
| 40 | W | - |
| 42 | BR | - |
| 44 | GR | - |
| 45 | SB | - |
| 91 | W | - |

| | |
|----------------|------------------|
| Connector No. | E110 |
| Connector Name | STOP LAMP SWITCH |
| Connector Type | IM04FW-LC |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | L | - |
| 2 | W | - |
| 3 | L | - |
| 4 | SB | - |

| | |
|----------------|-------------------------|
| Connector No. | E111 |
| Connector Name | CLUTCH INTERLOCK SWITCH |
| Connector Type | IS02EL |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | G | - |
| 2 | GR | - |

| | |
|----------------|-------------------|
| Connector No. | F1 |
| Connector Name | WIRE TO WIRE |
| Connector Type | SAA36FB-RS10-SJZZ |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 20 | GR | - |

| | |
|----------------|--------------|
| Connector No. | F51 |
| Connector Name | A/T ASSEMBLY |
| Connector Type | RK1UFG-DGY |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 9 | GR | - |

| | |
|----------------|-----------------------------------|
| Connector No. | F151 |
| Connector Name | TCM (TRANSMISSION CONTROL MODULE) |
| Connector Type | SP1UFBGY |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 8 | G | START RLY |

| | |
|----------------|------------------|
| Connector No. | M1 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | INS06FW-M2 |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 3A | L | - |
| 4A | P | - |
| 5A | L | - |
| 7A | R | - |
| 8A | L | - |

| | |
|----------------|------------------|
| Connector No. | M2 |
| Connector Name | FUSE BLOCK (J/B) |
| Connector Type | INS10FW-CS |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 3B | P | - |
| 5B | O | - |
| 9B | SB | - |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS


JCMWA0944GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]


PDS (POWER DISTRIBUTION SYSTEM)

| | |
|----------------|------------------|
| Connector No. | M3 |
| Connector Name | FUSE BLOCK (J/E) |
| Connector Type | NS12FW-GS |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6C | R | |
| 7C | B | |

| | |
|----------------|-------------------|
| Connector No. | M6 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80MW-CS (E-TM4) |

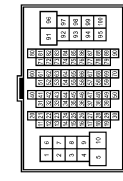


| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6 | P | |
| 7 | L | |
| 19 | G | |
| 31 | L | |
| 32 | Y | |
| 40 | W | |
| 42 | SB | |
| 44 | GR | [With A/T] |
| 44 | R | [With M/T] |
| 45 | O | |
| 91 | W | |

| | |
|----------------|-------------------|
| Connector No. | M7 |
| Connector Name | WIRE TO WIRE |
| Connector Type | TH80MW-CS (E-TM4) |

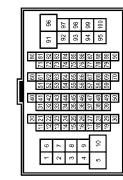


| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 23 | L | |
| 24 | P | |
| 25 | L | |
| 26 | P | |

| | |
|----------------|---------------------|
| Connector No. | M24 |
| Connector Name | DATA LINK CONNECTOR |
| Connector Type | BD16FW |

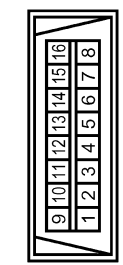


| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 6 | L | |
| 14 | P | |

| | |
|----------------|-------------------------------|
| Connector No. | M50 |
| Connector Name | PUSH-BUTTON (IGNITION SWITCH) |
| Connector Type | TK08FBR |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | GR | |
| 4 | BR | |
| 5 | LG | |
| 6 | O | |
| 7 | V | |
| 8 | P | |

| | |
|----------------|-------------------|
| Connector No. | M53 |
| Connector Name | COMBINATION METER |
| Connector Type | SAB4DFW |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 2 | LG | COMM (METER->AMP2) |
| 3 | GR | COMM (AMP->METER) |

| | |
|----------------|----------------------------|
| Connector No. | M86 |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH40PW-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 7 | GR | COMM (AMP->METER) |
| 27 | LG | COMM (METER->AMP) |

| | |
|----------------|----------------------------|
| Connector No. | M87 |
| Connector Name | UNIFIED METER AND A/C AMP. |
| Connector Type | TH32FW-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 56 | L | CAN-H |
| 72 | P | CAN-L |

JCMWA0945GB

PDS (POWER DISTRIBUTION SYSTEM)

| | |
|----------------|---------------------------|
| Connector No. | M118 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | IM3BE-LC |




| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 1 | W | BAT (F/L) |

| | |
|----------------|---------------------------|
| Connector No. | M119 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | NS16FW-CS |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 11 | R | BAT (FUSE) |
| 13 | B | GND |
| 15 | O | ACC LED |

| | |
|----------------|---------------------------|
| Connector No. | M121 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FGY-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 47 | Y | ING USM CONT1 |
| 52 | SB | ST CONT USM |

| | |
|----------------|---------------------------|
| Connector No. | M122 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FB-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 82 | R | IGN ELEC CONT |
| 89 | BR | ENG SW |
| 90 | P | CAN-L |
| 91 | L | CAN-H |
| 93 | V | ON LED |
| 95 | O | ACC CONT |
| 102 | O | IGN2 CONT |

| | |
|----------------|---------------------------|
| Connector No. | M123 |
| Connector Name | BCM (BODY CONTROL MODULE) |
| Connector Type | TH40FG-NH |



| Terminal No. | Color of Wire | Signal Name [Specification] |
|--------------|---------------|-----------------------------|
| 114 | R | CLUTCH SW |
| 116 | SB | STOP LAMP LOW |
| 118 | BR | STOP LAMP HIGH |
| 122 | V | ACC F/B |
| 123 | W | IGN F/B |
| 134 | LG | LOCK LED |
| 140 | GR | SHIFT N/P |

Fail Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

JCMWA0946GB

INFOID:000000002996303

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

| Control part | Fail-safe operation |
|----------------|---|
| Cooling fan | <ul style="list-style-type: none"> • Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON • Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF |
| A/C compressor | A/C relay OFF |
| Alternator | Outputs the power generation command signal (PWM signal) 0% |

If No CAN Communication Is Available With BCM

| Control part | Fail-safe operation |
|---|--|
| Headlamp | <ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF |
| <ul style="list-style-type: none"> • Parking lamps • License plate lamps • Side maker lamps • Illuminations • Tail lamps | <ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF |
| Front wiper | <ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating. |
| Front fog lamps | Front fog lamp relay OFF |
| Horn | Horn OFF |
| Ignition relay | The status just before activation of fail-safe is maintained. |
| Starter motor | Starter control relay OFF |
| Steering lock unit | Steering lock relay OFF |

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

| DTC | Ignition switch | Ignition relay | Tail lamp relay |
|----------------------|-----------------|----------------|-----------------|
| — | ON | ON | — |
| — | OFF | OFF | — |
| B2098: IGN RELAY ON | OFF | ON | ON (10 minutes) |
| B2099: IGN RELAY OFF | ON | OFF | — |

NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

| Ignition switch | Front wiper switch | Front wiper auto stop signal |
|-----------------|--------------------|--|
| ON | OFF | The front wiper auto stop signal (stop position) cannot be input for 10 seconds. |
| | ON | The front wiper auto stop signal does not change for 10 seconds. |

NOTE:

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000002996304

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

| CONSULT display | Fail-safe | Refer to |
|--|-----------|-------------------------|
| No DTC is detected. further testing may be required. | — | — |
| U1000: CAN COMM CIRCUIT | × | PCS-16 |
| B2098: IGN RELAY ON | × | PCS-17 |
| B2099: IGN RELAY OFF | — | PCS-18 |
| B2108: STRG LCK RELAY ON | — | SEC-101 |
| B2109: STRG LCK RELAY OFF | — | SEC-102 |
| B210A: STRG LCK STATE SW | — | SEC-103 |
| B210B: START CONT RLY ON | — | SEC-107 |
| B210C: START CONT RLY OFF | — | SEC-108 |
| B210D: STARTER RELAY ON | — | SEC-109 |
| B210E: STARTER RELAY OFF | — | SEC-110 |
| B210F: INTRLCK/PNP SW ON | — | SEC-113 |
| B2110: INTRLCK/PNP SW OFF | — | SEC-117 |

PCS

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000002996271

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000002996272

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Turn the push-button ignition switch to ACC position.
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.

PRECAUTIONS

< PRECAUTION >

[POWER DISTRIBUTION SYSTEM]

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT-III.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

SYMPTOM DIAGNOSIS

POWER DISTRIBUTION SYSTEM

Symptom Table

INFOID:000000002996273

The engine start function, door lock function, power distribution system and NATS-IVIS/NMS in the Intelligent Key system are closely related to each other regarding control. Narrow down the functional area in question by performing following table to identify which function is malfunctioning. The vehicle security function can operate only when the door lock and power distribution system are operating normally. Therefore, it is easy to identify any factor unique to the vehicle security system by performing following table.

Use the chart below to help you find the cause of the symptom. The numbers indicate the order of the inspection.

NOTE:

Before starting vehicle security system operation check, the following condition are met.

- Open front windows
- Turn ignition switch OFF
- Pull out Intelligent Key from key slot.

| NO. | Function | Operation condition | Symptom | Diagnostic Item | Reference page |
|-----|--|--|--|-----------------|-------------------------|
| 1 | INTELLIGENT KEY SYSTEM/ DOOR LOCK FUNCTION | Lock/unlock door with door request switch. (Intelligent Key is into the outside key antenna detection area) | Door does not lock/unlock | — | DLK-173 |
| 2 | POWER DISTRIBUTION FUNCTION | Press push-button ignition switch under the following condition. A/T models • A/T selector lever position is in P or N position • Do not depress brake pedal M/T models • Do not depress clutch pedal | Push-button ignition switch is not operated | — | PCS-128 |
| 3 | INTELLIGENT KEY SYSTEM/ ENGINE START FUNCTION | Start engine with Intelligent Key into the vehicle (inside key antenna detection area) | Engine can not start with Intelligent Key | — | SEC-222 |
| 4 | | Open the door after ignition switch turn NO to OFF. | Steering is not locked | — | SEC-223 |
| 5 | INFINITI VEHICLE IMMOBILIZEER SYSTEM-NATS FUNCTION | Start engine with Intelligent Key into the key slot. | Engine can not start (Intelligent Key into the key slot) | — | SEC-224 |
| 6 | | Insert Intelligent Key into the keyslot. | Keyslot indicator is not illuminate | — | SEC-229 |

POWER DISTRIBUTION SYSTEM

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

| NO. | Function | Operation condition | Symptom | Diagnostic Item | Reference page |
|-----|-----------------------------|---|---|-------------------|-------------------------|
| 7 | VEHICLE SECURITY SYSTEM | Lock all doors with Intelligent Key or door request switch | Vehicle security system can not be set | — | SEC-226 |
| | | Lock all doors with Intelligent Key or door request switch | Security indicator does not turn ON | — | PCS-129 |
| | | In the armed phase, open the door | Vehicle security alarm does not activate | Horn Head lamp | SEC-227 |
| | | When alarm sound, press Intelligent Key button | Vehicle security system can not be canceled | — | SEC-228 |
| | | When alarm sound, press door request switch | | — | SEC-228 |
| 8 | POWER DISTRIBUTION FUNCTION | Press push-button ignition switch under the following condition. A/T models <ul style="list-style-type: none"> • A/T selector lever position is in P or N position • Do not depress brake pedal M/T models <ul style="list-style-type: none"> • Do not depress clutch pedal | Push-button ignition switch position indicator does not turn on | — | PCS-129 |

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

Description

INFOID:000000002996274

- Before performing the diagnosis in the following table, check “Work Flow”. Refer to [PCS-36, "Work Flow"](#).
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT-III.
- Intelligent Key is not inserted in key slot.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:000000002996275

1.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-70, "Component Function Check"](#).

Is the inspection normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

Description

INFOID:000000002996276

- Before performing the diagnosis in the following table, check “Work Flow”. Refer to [PCS-36. "Work Flow"](#).

Diagnosis Procedure

INFOID:000000002996277

1. CHECK PUSH-BUTTON IGNITION SWITCH INDICATOR

Check push-button ignition switch indicator.

Refer to [PCS-72. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39. "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PCS

BCM (BODY CONTROL MODULE)

< REMOVAL AND INSTALLATION >


[POWER DISTRIBUTION SYSTEM]

REMOVAL AND INSTALLATION

BCM (BODY CONTROL MODULE)

Exploded View

INFOID:000000003036059

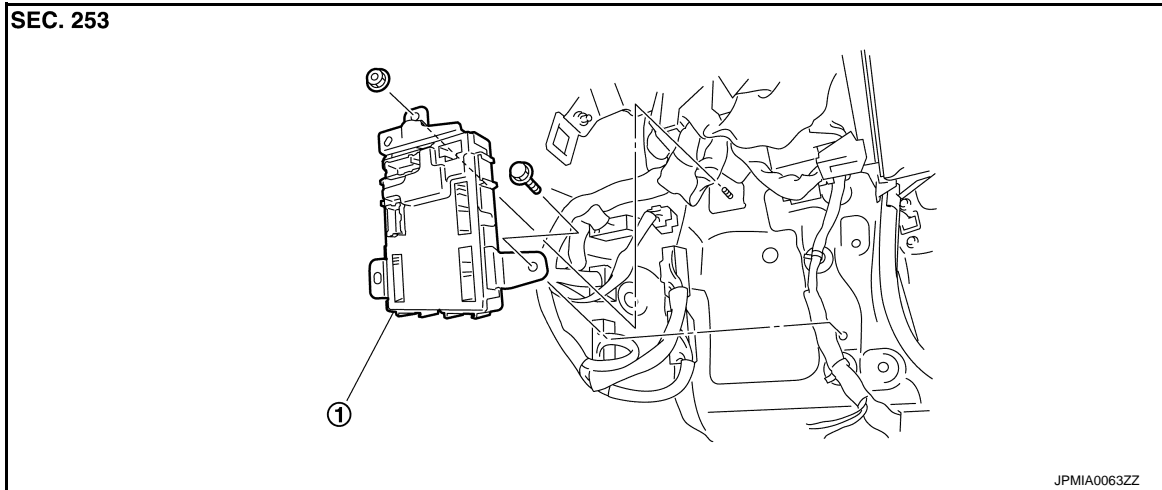

1. BCM

Removal and Installation

INFOID:000000003036060

REMOVAL

1. Remove dash side finisher (passenger side). Refer to [INT-14, "Exploded View"](#).
2. Remove bolt and nut.
3. Remove BCM and disconnect the connector.

INSTALLATION

Install in the reverse order of removal.

PUSH BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

[POWER DISTRIBUTION SYSTEM]

PUSH BUTTON IGNITION SWITCH

Exploded View

INFOID:000000002996280


Refer to [JP-11, "Exploded View"](#).

Removal and Installation

INFOID:000000002996281

REMOVAL

1. Remove the cluster lid A assembly. Refer to [JP-12, "Removal and Installation"](#).
2. Remove the push-button ignition switch (1) from cluster lid A assembly, and then remove pawl (A). Press push-button ignition switch (1) back to disengage from cluster lid A assembly.

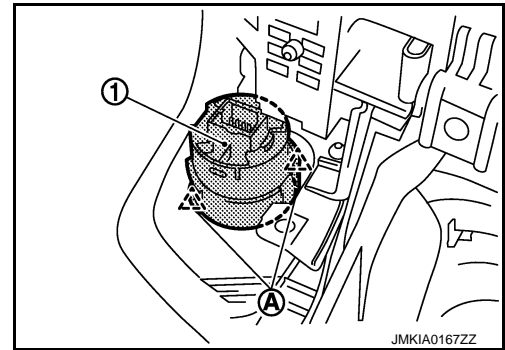

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
L

PCS

N
O
P