

# SECTION **BRC**

## BRAKE CONTROL SYSTEM

A  
B  
C  
D  
E

### CONTENTS

<b>VDC/TCS/ABS</b>		
<b>BASIC INSPECTION</b> .....	4	
<b>DIAGNOSIS AND REPAIR WORK FLOW</b> .....	4	
Work Flow .....	4	
Diagnostic Work Sheet .....	7	
<b>INSPECTION AND ADJUSTMENT</b> .....	8	
<b>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT</b> .....	8	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description .....	8	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement .....	8	
<b>ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION</b> .....	8	
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description .....	8	
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement .....	8	
<b>SYSTEM DESCRIPTION</b> .....	10	
<b>VDC</b> .....	10	
System Diagram .....	10	
System Description .....	10	
Component Parts Location .....	11	
Component Description .....	13	
<b>TCS</b> .....	14	
System Diagram .....	14	
System Description .....	14	
Component Parts Location .....	15	
Component Description .....	17	
<b>ABS</b> .....	18	
System Diagram .....	18	
System Description .....	18	
Component Parts Location .....	19	
Component Description .....	21	
<b>EBD</b> .....	22	
System Diagram .....	22	
System Description .....	22	
Component Parts Location .....	23	
Component Description .....	25	
<b>DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]</b> .....	26	
CONSULT-III Function .....	26	
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	31	
<b>C1101, C1102, C1103, C1104 WHEEL SENSOR</b> .....	31	
Description .....	31	
DTC Logic .....	31	
Diagnosis Procedure .....	31	
Special Repair Requirement .....	32	
<b>C1105, C1106, C1107, C1108 WHEEL SENSOR</b> .....	33	
Description .....	33	
DTC Logic .....	33	
Diagnosis Procedure .....	33	
Special Repair Requirement .....	34	
<b>C1109 POWER AND GROUND SYSTEM</b> .....	36	
Description .....	36	
DTC Logic .....	36	
Diagnosis Procedure .....	36	
Special Repair Requirement .....	37	
<b>C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)</b> .....	38	
DTC Logic .....	38	
Diagnosis Procedure .....	38	
Special Repair Requirement .....	38	

BRC

G  
H  
I  
J  
K  
L  
M  
N  
O  
P

<b>C1111 ABS MOTOR, MOTOR RELAY SYSTEM</b> .....	<b>39</b>	<b>C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT</b> .....	<b>57</b>
Description .....	39	DTC Logic .....	57
DTC Logic .....	39	Diagnosis Procedure .....	57
Diagnosis Procedure .....	39	Special Repair Requirement .....	57
Special Repair Requirement .....	40	<b>C1145, C1146 YAW RATE/SIDE G SENSOR...</b>	<b>58</b>
<b>C1114 ACTUATOR RELAY SYSTEM</b> .....	<b>41</b>	Description .....	58
Description .....	41	DTC Logic .....	58
DTC Logic .....	41	Diagnosis Procedure .....	58
Diagnosis Procedure .....	41	Special Repair Requirement .....	60
Special Repair Requirement .....	42	<b>C1147, C1148, C1149, C1150 USV/HSV LINE..</b>	<b>61</b>
<b>C1115 WHEEL SENSOR</b> .....	<b>43</b>	Description .....	61
Description .....	43	DTC Logic .....	61
DTC Logic .....	43	Diagnosis Procedure .....	61
Diagnosis Procedure .....	43	Special Repair Requirement .....	62
Special Repair Requirement .....	44	<b>C1155 BRAKE FLUID LEVEL SWITCH</b> .....	<b>63</b>
<b>C1116 STOP LAMP SWITCH</b> .....	<b>45</b>	Description .....	63
Description .....	45	DTC Logic .....	63
DTC Logic .....	45	Diagnosis Procedure .....	63
Diagnosis Procedure .....	45	Component Inspection .....	64
Component Inspection .....	46	Special Repair Requirement .....	64
Special Repair Requirement .....	46	<b>C1185 ICC UNIT</b> .....	<b>65</b>
<b>C1120, C1122, C1124, C1126 IN ABS SOL</b> ....	<b>47</b>	Description .....	65
Description .....	47	DTC Logic .....	65
DTC Logic .....	47	Diagnosis Procedure .....	65
Diagnosis Procedure .....	47	Special Repair Requirement .....	65
Special Repair Requirement .....	48	<b>U1000 CAN COMM CIRCUIT</b> .....	<b>66</b>
<b>C1121, C1123, C1125, C1127 OUT ABS SOL..</b>	<b>49</b>	Description .....	66
Description .....	49	DTC Logic .....	66
DTC Logic .....	49	Diagnosis Procedure .....	66
Diagnosis Procedure .....	49	Special Repair Requirement .....	66
Special Repair Requirement .....	50	<b>U1002 SYSTEM COMM (CAN)</b> .....	<b>67</b>
<b>C1130, C1131, C1132 ENGINE SIGNAL</b> .....	<b>51</b>	Description .....	67
Description .....	51	DTC Logic .....	67
DTC Logic .....	51	Diagnosis Procedure .....	67
Diagnosis Procedure .....	51	Special Repair Requirement .....	68
Special Repair Requirement .....	51	<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	<b>69</b>
<b>C1138 4WAS SYSTEM</b> .....	<b>52</b>	Description .....	69
Description .....	52	Diagnosis Procedure .....	69
DTC Logic .....	52	<b>PARKING BRAKE SWITCH</b> .....	<b>71</b>
Diagnosis Procedure .....	52	Description .....	71
Special Repair Requirement .....	52	Component Function Check .....	71
<b>C1142 PRESS SENSOR</b> .....	<b>53</b>	Diagnosis Procedure .....	71
Description .....	53	Component Inspection .....	71
DTC Logic .....	53	<b>VDC OFF SWITCH</b> .....	<b>73</b>
Diagnosis Procedure .....	53	Description .....	73
Special Repair Requirement .....	54	Component Function Check .....	73
<b>C1143 STEERING ANGLE SENSOR</b> .....	<b>55</b>	Diagnosis Procedure .....	73
Description .....	55	Component Inspection .....	74
DTC Logic .....	55	<b>ABS WARNING LAMP</b> .....	<b>75</b>
Diagnosis Procedure .....	55	Description .....	75
Special Repair Requirement .....	56		

Component Function Check .....	75	Precaution for Brake System .....	100	
Diagnosis Procedure .....	75	Precaution for Brake Control .....	100	A
<b>BRAKE WARNING LAMP .....</b>	<b>76</b>	Precautions for Harness Repair .....	101	
Description .....	76	<b>PREPARATION .....</b>	<b>102</b>	B
Component Function Check .....	76	<b>PREPARATION .....</b>	<b>102</b>	
Diagnosis Procedure .....	76	Special Service Tool .....	102	C
<b>VDC OFF INDICATOR LAMP .....</b>	<b>77</b>	Commercial Service Tool .....	102	
Description .....	77	<b>REMOVAL AND INSTALLATION .....</b>	<b>103</b>	D
Component Function Check .....	77	<b>WHEEL SENSOR .....</b>	<b>103</b>	
Diagnosis Procedure .....	77	Exploded View .....	103	E
<b>SLIP INDICATOR LAMP .....</b>	<b>78</b>	Removal and Installation .....	103	
Description .....	78	<b>SENSOR ROTOR .....</b>	<b>104</b>	
Component Function Check .....	78	<b>FRONT SENSOR ROTOR .....</b>	<b>104</b>	
Diagnosis Procedure .....	78	FRONT SENSOR ROTOR : Exploded View .....	104	BRC
<b>ECU DIAGNOSIS INFORMATION .....</b>	<b>79</b>	FRONT SENSOR ROTOR : Removal and Instal- lation .....	104	
<b>ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) .....</b>	<b>79</b>	<b>REAR SENSOR ROTOR .....</b>	<b>104</b>	G
Reference Value .....	79	REAR SENSOR ROTOR : Exploded View .....	104	
Wiring Diagram - BRAKE CONTROL SYSTEM - ....	83	REAR SENSOR ROTOR : Removal and Installa- tion .....	104	H
Fail-Safe .....	89	<b>ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) .....</b>	<b>105</b>	I
DTC No. Index .....	90	Exploded View .....	105	
<b>SYMPTOM DIAGNOSIS .....</b>	<b>92</b>	Removal and Installation .....	105	
<b>EXCESSIVE ABS FUNCTION OPERATION FREQUENCY .....</b>	<b>92</b>	<b>YAW RATE/SIDE G SENSOR .....</b>	<b>107</b>	J
Diagnosis Procedure .....	92	Exploded View .....	107	
<b>UNEXPECTED PEDAL REACTION .....</b>	<b>93</b>	Removal and Installation .....	107	K
Diagnosis Procedure .....	93	<b>STEERING ANGLE SENSOR .....</b>	<b>108</b>	
<b>THE BRAKING DISTANCE IS LONG .....</b>	<b>94</b>	Exploded View .....	108	L
Diagnosis Procedure .....	94	Removal and Installation .....	108	
<b>ABS FUNCTION DOES NOT OPERATE .....</b>	<b>95</b>	<b>BRAKE ASSIST</b>		
Diagnosis Procedure .....	95	<b>SYSTEM DESCRIPTION .....</b>	<b>109</b>	M
<b>PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS .....</b>	<b>96</b>	<b>PREVIEW FUNCTION .....</b>	<b>109</b>	
Diagnosis Procedure .....	96	System Description .....	109	N
<b>VEHICLE JERKS DURING VDC/TCS/ABS CONTROL .....</b>	<b>97</b>	Component Parts Location .....	110	
Diagnosis Procedure .....	97	Component Description .....	111	O
<b>NORMAL OPERATING CONDITION .....</b>	<b>98</b>	<b>DTC/CIRCUIT DIAGNOSIS .....</b>	<b>112</b>	
Description .....	98	<b>PREVIEW FUNCTION .....</b>	<b>112</b>	
<b>PRECAUTION .....</b>	<b>99</b>	Diagnosis Procedure .....	112	P
<b>PRECAUTIONS .....</b>	<b>99</b>	<b>SYMPTOM DIAGNOSIS .....</b>	<b>113</b>	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	99	<b>NORMAL OPERATING CONDITION .....</b>	<b>113</b>	
Precaution Necessary for Steering Wheel Rota- tion after Battery Disconnect .....	99	Description .....	113	
Precaution for Procedure without Cowl Top Cover. 100	100	<b>PRECAUTION .....</b>	<b>114</b>	
		<b>PRECAUTIONS .....</b>	<b>114</b>	
		Precautions for Preview Function Service .....	114	

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

#### Work Flow

INFOID:000000005817607

#### PRECAUTIONS FOR DIAGNOSIS


If steering angle sensor, steering system parts, suspension system parts, ABS actuator and electric unit (control unit) or tires have been replaced, or if wheel alignment has been adjusted, be sure to adjust neutral position of steering angle sensor before driving. Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

# DIAGNOSIS AND REPAIR WORK FLOW

[VDC/TCS/ABS]

< BASIC INSPECTION >

OVERALL SEQUENCE

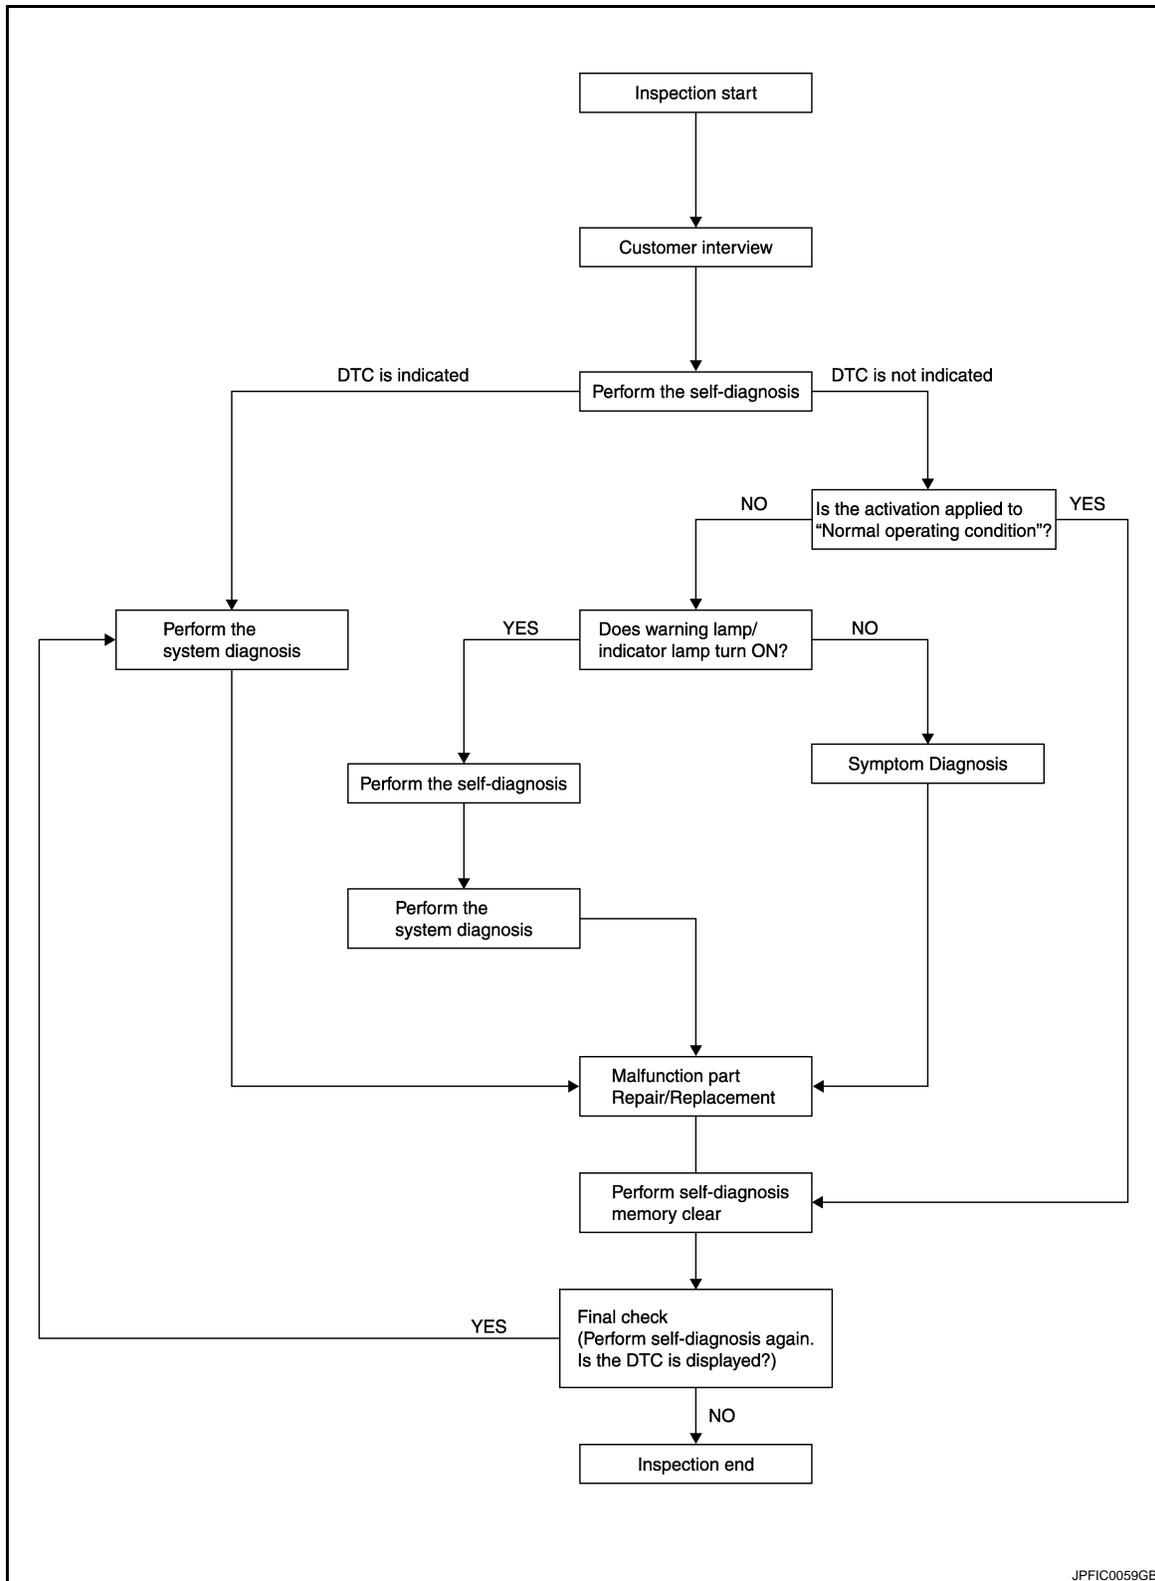

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## DETAILED FLOW

### 1. COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the diagnosis work sheet. Refer to [BRC-7, "Diagnostic Work Sheet"](#).

>> GO TO 2.

# DIAGNOSIS AND REPAIR WORK FLOW

[VDC/TCS/ABS]

< BASIC INSPECTION >

---

## 2. PERFORM THE SELF-DIAGNOSIS

---

Perform self-diagnosis for "ABS" with CONSULT-III.

Is there any DTC displayed?

YES >> GO TO 3.

NO >> GO TO 4.

---

## 3. PERFORM THE SYSTEM DIAGNOSIS

---

Perform the diagnosis applicable to the displayed DTC of "ABS" with CONSULT-III. Refer to [BRC-90, "DTC No. Index"](#).

>> GO TO 7.

---

## 4. CHECK THE SYMPTOM THAT IS NOT CONSIDERED A SYSTEM MALFUNCTION

---

Check that the symptom is a normal operation that is not considered a system malfunction. Refer to [BRC-98, "Description"](#).

Is the symptom a normal operation?

YES >> INSPECTION END

NO >> GO TO 5.

---

## 5. CHECK THE WARNING LAMP AND INDICATOR LAMP FOR ILLUMINATION

---

Check that the warning lamp and indicator lamp illuminate.

- ABS warning lamp: Refer to [BRC-75, "Description"](#).
- Brake warning lamp: Refer to [BRC-76, "Description"](#).
- VDC OFF indicator lamp: Refer to [BRC-77, "Description"](#).
- SLIP indicator lamp: Refer to [BRC-78, "Description"](#).

Is ON/OFF timing normal?

YES >> GO TO 6.

NO >> GO TO 2.

---

## 6. PERFORM THE DIAGNOSIS BY SYMPTOM

---

Perform self-diagnosis for "ABS" with CONSULT-III.

>> GO TO 7.

---

## 7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

---

Repair or replace the specified malfunctioning parts.

>> GO TO 8.

---

## 8. MEMORY CLEAR

---

Perform self-diagnosis memory clear for "ABS" with CONSULT-III.

>> GO TO 9.

---

## 9. FINAL CHECK

---

Perform the self-diagnosis again, and check that the malfunction is repaired completely.

Is no other DTC present and the repair completed?

YES >> INSPECTION END

NO >> GO TO 3.

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

## Diagnostic Work Sheet

INFOID:000000005817608

Customer name MR/MS	Model & Year	VIN	
Engine #	Trans.	Mileage	
Incident Date	Manuf. Date	In Service Date	
Symptoms	<input type="checkbox"/> Noise and vibration (from engine compartment) <input type="checkbox"/> Noise and vibration (from axle)	<input type="checkbox"/> Warning / Indicator activate	<input type="checkbox"/> Firm pedal operation Large stroke pedal operation
	<input type="checkbox"/> TCS does not work (Rear wheels slip when accelerating)	<input type="checkbox"/> ABS does not work (Wheels lock when braking)	<input type="checkbox"/> Lack of sense of acceleration
Engine conditions	<input type="checkbox"/> When starting <input type="checkbox"/> After starting		
Road conditions	<input type="checkbox"/> Low friction road ( <input type="checkbox"/> Snow <input type="checkbox"/> Gravel <input type="checkbox"/> Other ) <input type="checkbox"/> Bumps / potholes		
Driving conditions	<input type="checkbox"/> Full-acceleration <input type="checkbox"/> High speed cornering <input type="checkbox"/> Vehicle speed: Greater than 10 km/h (6 MPH) <input type="checkbox"/> Vehicle speed: 10 km/h (6 MPH) or less <input type="checkbox"/> Vehicle is stopped		
Applying brake conditions	<input type="checkbox"/> Suddenly <input type="checkbox"/> Gradually		
Other conditions	<input type="checkbox"/> Operation of electrical equipment <input type="checkbox"/> Shift change <input type="checkbox"/> Other descriptions		

A  
B  
C  
D  
E  
**BRC**  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

SFIA3265E

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[VDC/TCS/ABS]

## INSPECTION AND ADJUSTMENT

### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000005656634

After replacing the ABS actuator and electric unit (control unit), perform the neutral position adjustment for the steering angle sensor.

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000005656635

#### 1. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

Perform the neutral position adjustment for the steering angle sensor.

>> Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

### ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

#### ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description

INFOID:000000005656636

In case of doing work that applies to the list below, make sure to adjust neutral position of steering angle sensor before running vehicle.

×: Required –: Not required

Situation	Adjustment of steering angle sensor neutral position
Removing/Installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	×
Removing/Installing steering angle sensor	×
Replacing steering angle sensor	×
Removing/Installing 4WAS components	×
Replacing 4WAS components	×
Removing/Installing steering components	×
Replacing steering components	×
Removing/Installing suspension components	×
Replacing suspension components	×
Change tires to new ones	—
Tire rotation	—
Adjusting wheel alignment	×

#### ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement

INFOID:000000005817609

### ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

#### **CAUTION:**

**To adjust neutral position of steering angle sensor, make sure to use CONSULT-III.  
(Adjustment cannot be done without CONSULT-III.)**

#### 1. ALIGN THE VEHICLE STATUS

Stop the vehicle with front wheels in straight-ahead position.

>> GO TO 2.

#### 2. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

# INSPECTION AND ADJUSTMENT

[VDC/TCS/ABS]

## < BASIC INSPECTION >

1. Select "ABS", "WORK SUPPORT" and "ST ANGLE SENSOR ADJUSTMENT" in order with CONSULT-III.
2. Select "START".

**CAUTION:**

**Do not touch steering wheel while adjusting steering angle sensor.**

3. After approximately 10 seconds, select "END".

**NOTE:**

After approximately 60 seconds, it ends automatically.

4. Turn ignition switch OFF, then turn it ON again.

**CAUTION:**

**Be sure to perform above operation.**

>> GO TO 3.

## 3. CHECK DATA MONITOR

1. Run the vehicle with front wheels in straight-ahead position, then stop.
2. Select "ABS", "DATA MONITOR" and "STR ANGLE SIG" in order with CONSULT-III, and check steering angle sensor signal.

**STR ANGLE SIG : 0±2.5°**

Is the steering angle within the specified range?

YES >> GO TO 4.

NO >> Perform the neutral position adjustment for the steering angle sensor again, GO TO 1.

## 4. ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memories for "ABS", "ENGINE", "4WAS(FRONT)", "4WAS(MAIN)/RAS/HICAS" and "ICC" with CONSULT-III.

- "ABS": Refer to [BRC-26. "CONSULT-III Function"](#).
- "ENGINE": Refer to [EC-133. "CONSULT-III Function"](#).
- "4WAS(MAIN)/RAS/HICAS": Refer to [STC-45. "CONSULT-III Function \[4WAS\(MAIN\)/RAS/HICAS\]"](#).
- "4WAS(FRONT)": Refer to [STC-41. "CONSULT-III Function \[4WAS\(FRONT\)\]"](#).
- "ICC": Refer to [CCS-38. "CONSULT-III Function \(ICC\)"](#).

Are the memories erased?

YES >> INSPECTION END

NO >> Check the items indicated by the self-diagnosis.


A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SYSTEM DESCRIPTION

## VDC

### System Diagram

INFOID:000000005656638

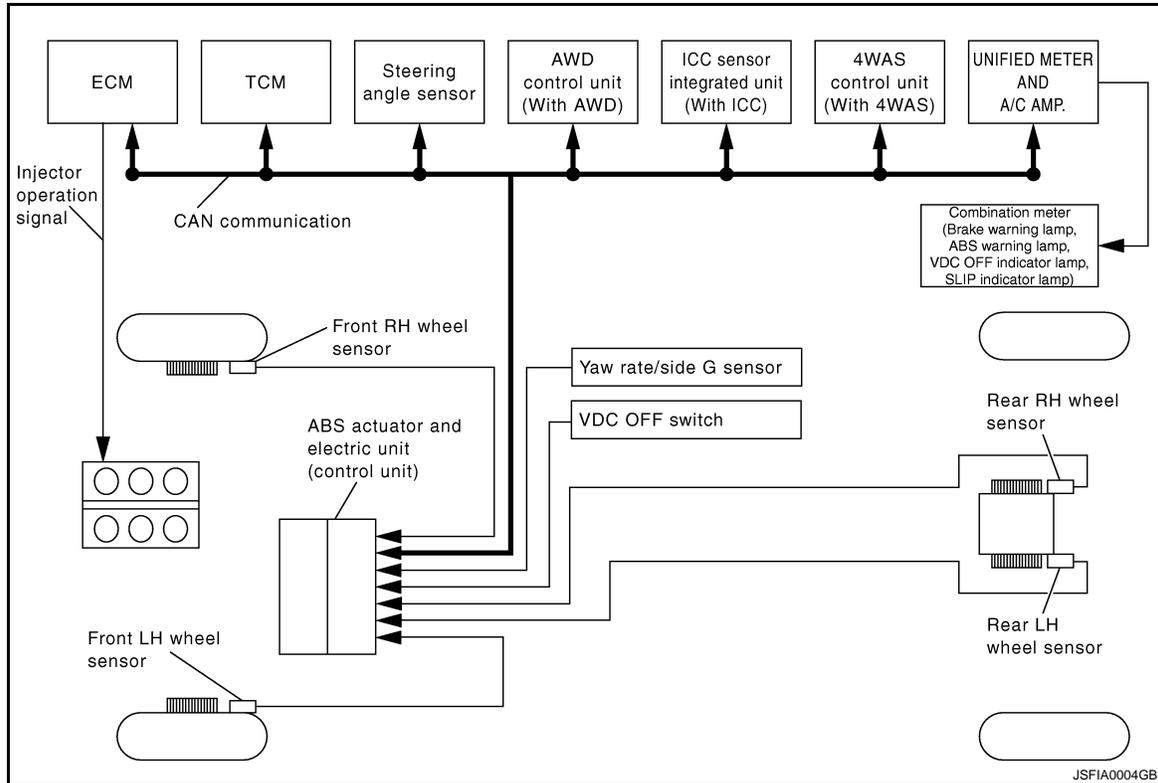


### System Description

INFOID:000000005656639

- Vehicle Dynamics Control system detects driver's steering operation amount and brake pedal travel from steering angle sensor and pressure sensor. Using information from yaw rate/side G sensor and wheel sensor, VDC judges driving condition (conditions of under steer and over steer) to improve vehicle driving stability by controlling brake application to 4 wheels and engine output.
- During VDC operation, it informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT-III is available.

For USA

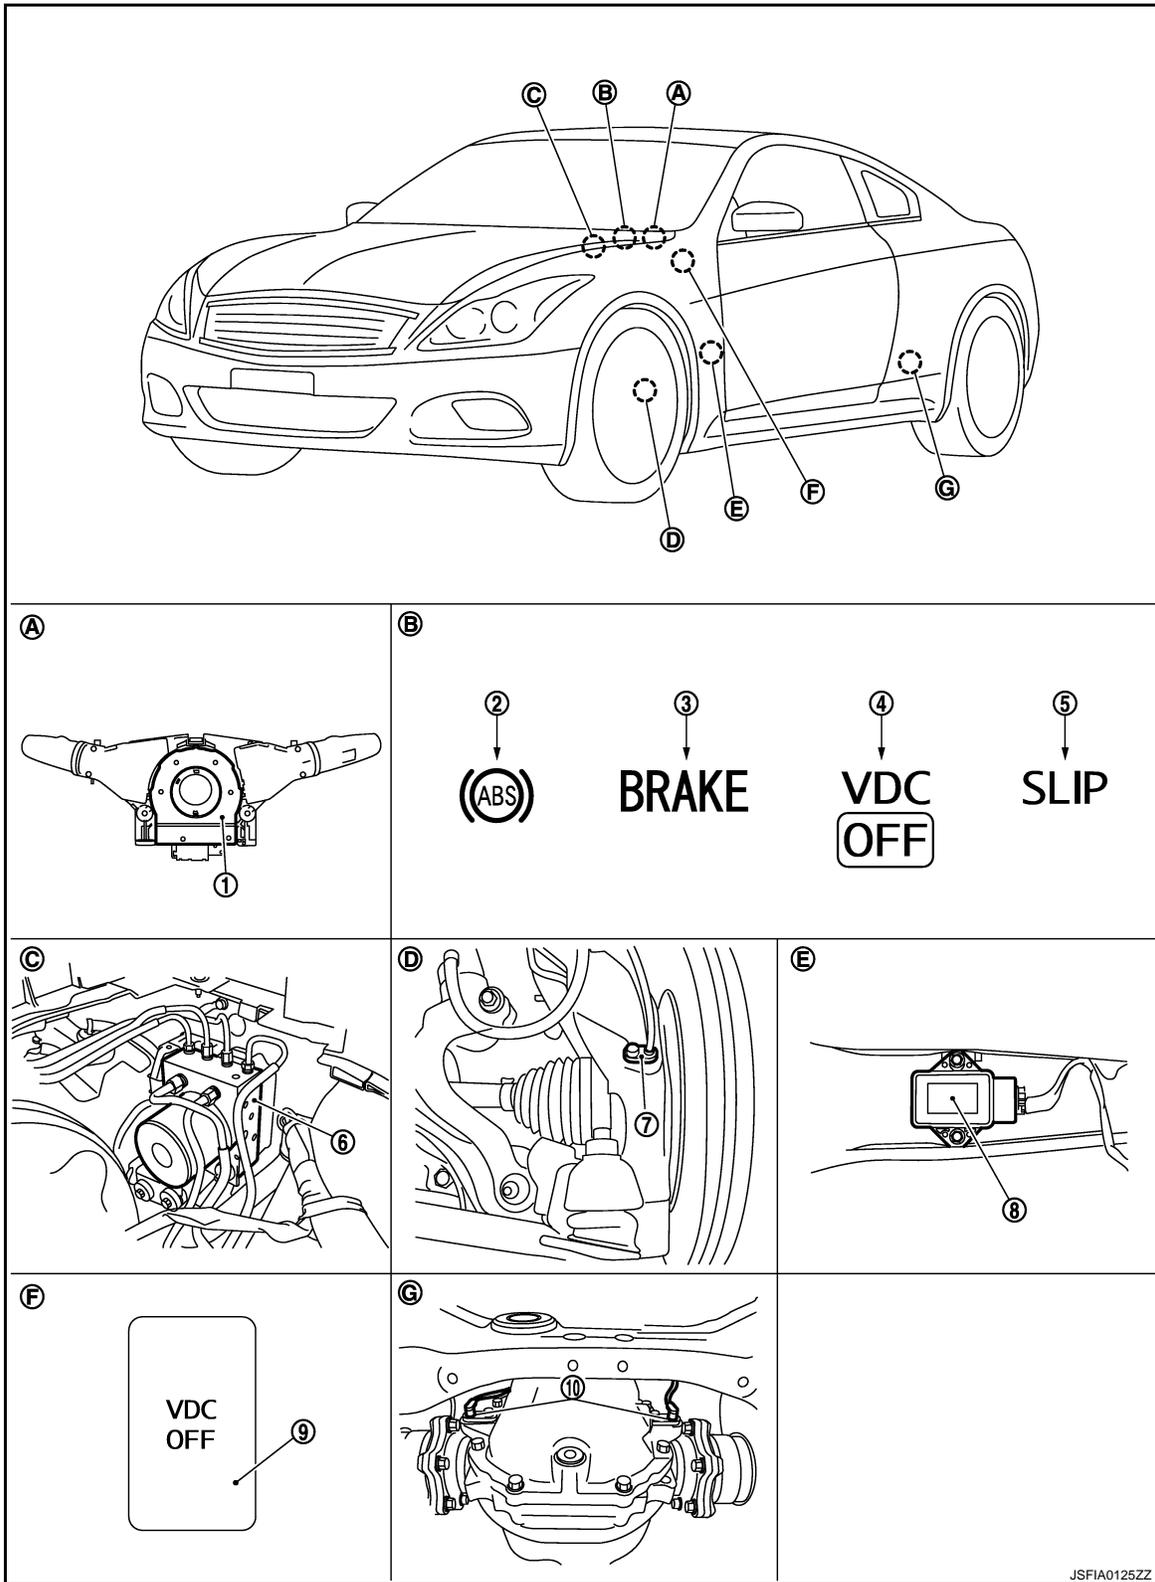

- |                           |                        |  |
|---------------------------|------------------------|--|
| 1. Steering angle sensor  | 2. ABS warning lamp    | 3. Brake warning lamp                            |
| 4. VDC OFF indicator lamp | 5. SLIP indicator lamp | 6. ABS actuator and electric unit (control unit) |

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# VDC

[VDC/TCS/ABS]

## < SYSTEM DESCRIPTION >

- 7. Front wheel sensor
- 8. Yaw rate/side G sensor
- 9. VDC OFF switch
- 10. Rear wheel sensor
- A. Back of spiral cable assembly
- B. Combination meter
- C. Inside brake master cylinder cover
- D. Steering knuckle
- E. Under center console
- F. Instrument driver lower panel
- G. Rear final drive assembly

For Canada

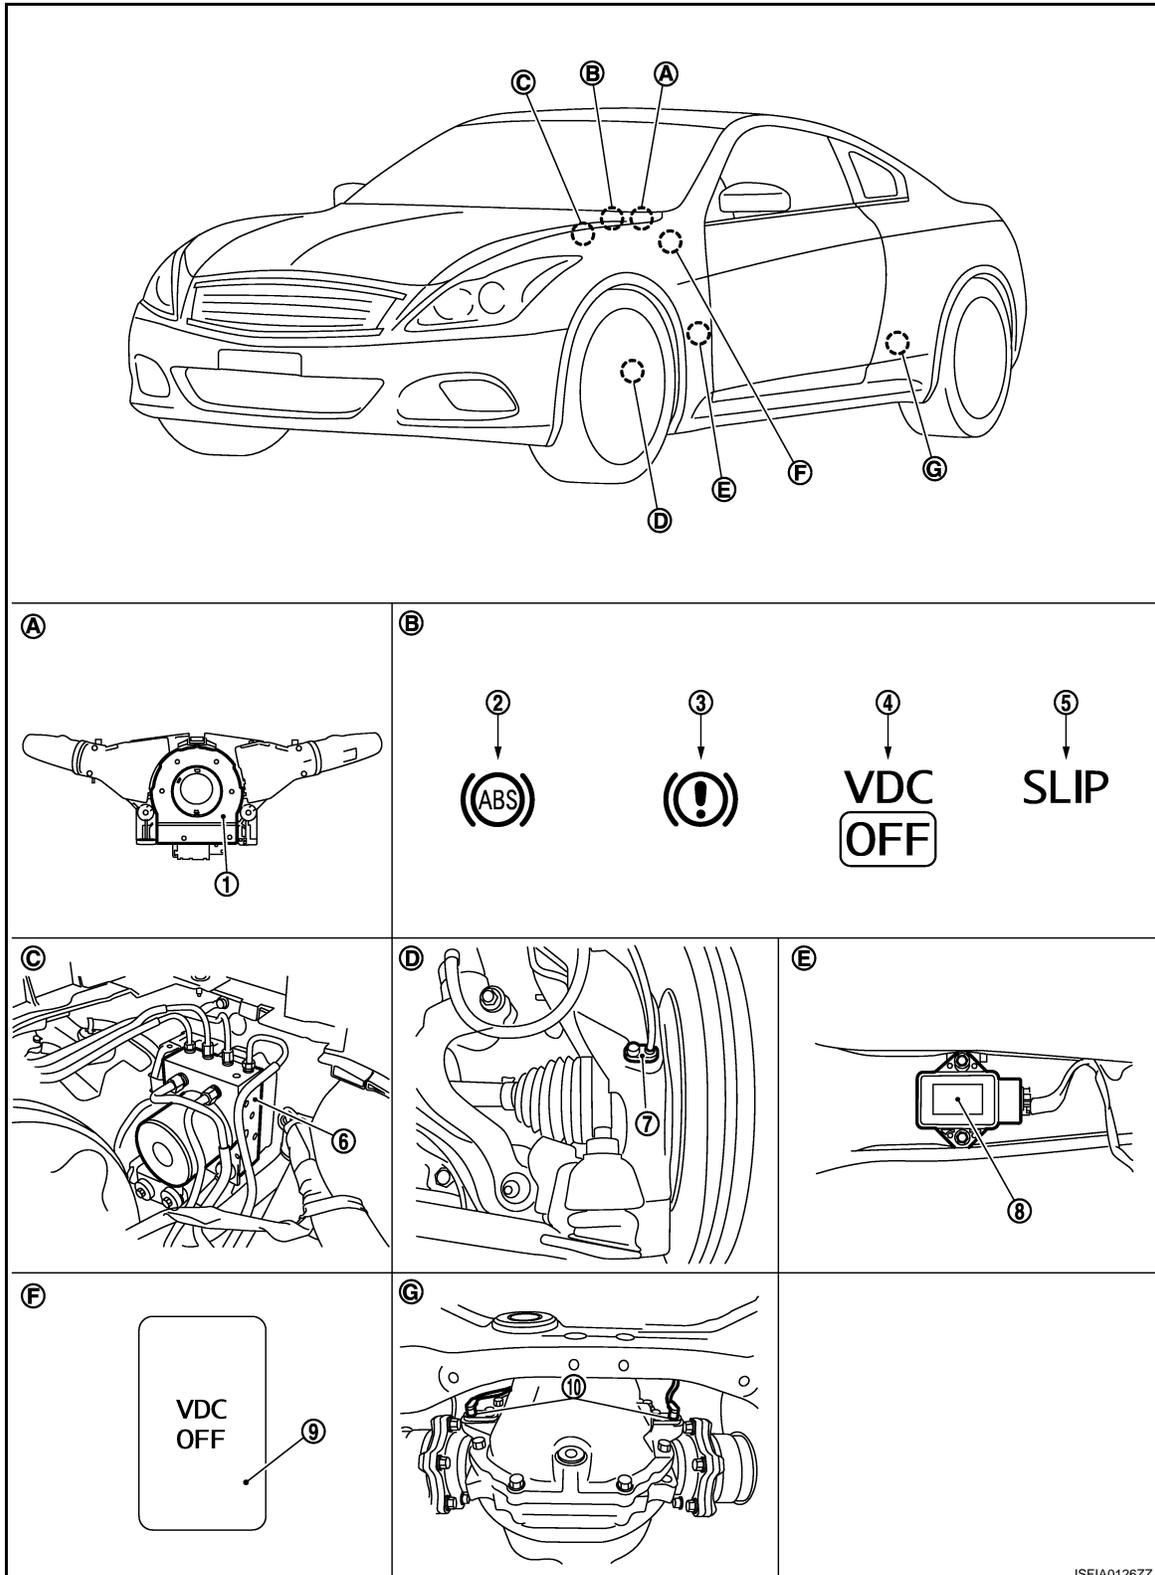

JSFIA0126ZZ

# VDC

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- |                                  |                           |  |   |
|----------------------------------|---------------------------|--|---|
| 1. Steering angle sensor         | 2. ABS warning lamp       | 3. Brake warning lamp                            | A |
| 4. VDC OFF indicator lamp        | 5. SLIP indicator lamp    | 6. ABS actuator and electric unit (control unit) | B |
| 7. Front wheel sensor            | 8. Yaw rate/side G sensor | 9. VDC OFF switch                                | C |
| 10. Rear wheel sensor            |                           |  | D |
| A. Back of spiral cable assembly | B. Combination meter      | C. Inside brake master cylinder cover            | E |
| D. Steering knuckle              | E. Under center console   | F. Instrument driver lower panel                 | F |
| G. Rear final drive assembly     |                           |  |   |

## Component Description

INFOID:000000005656641


Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	<a href="#">BRC-39, "Description"</a>
	Motor	
	Actuator relay (Main relay)	<a href="#">BRC-41, "Description"</a>
	Solenoid valve	<a href="#">BRC-47, "Description"</a>
	Pressure sensor	<a href="#">BRC-53, "Description"</a>
	VDC switch-over valve (USV1, USV2, HSV1, HSV2)	<a href="#">BRC-61, "Description"</a>
Wheel sensor	<a href="#">BRC-39, "Description"</a>	
Yaw rate/side G sensor	<a href="#">BRC-58, "Description"</a>	
Steering angle sensor	<a href="#">BRC-55, "Description"</a>	
VDC OFF switch	<a href="#">BRC-73, "Description"</a>	
ABS warning lamp	<a href="#">BRC-75, "Description"</a>	
Brake warning lamp	<a href="#">BRC-76, "Description"</a>	
VDC OFF indicator lamp	<a href="#">BRC-77, "Description"</a>	
SLIP indicator lamp	<a href="#">BRC-78, "Description"</a>	

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## TCS

## System Diagram

INFOID:000000005656642

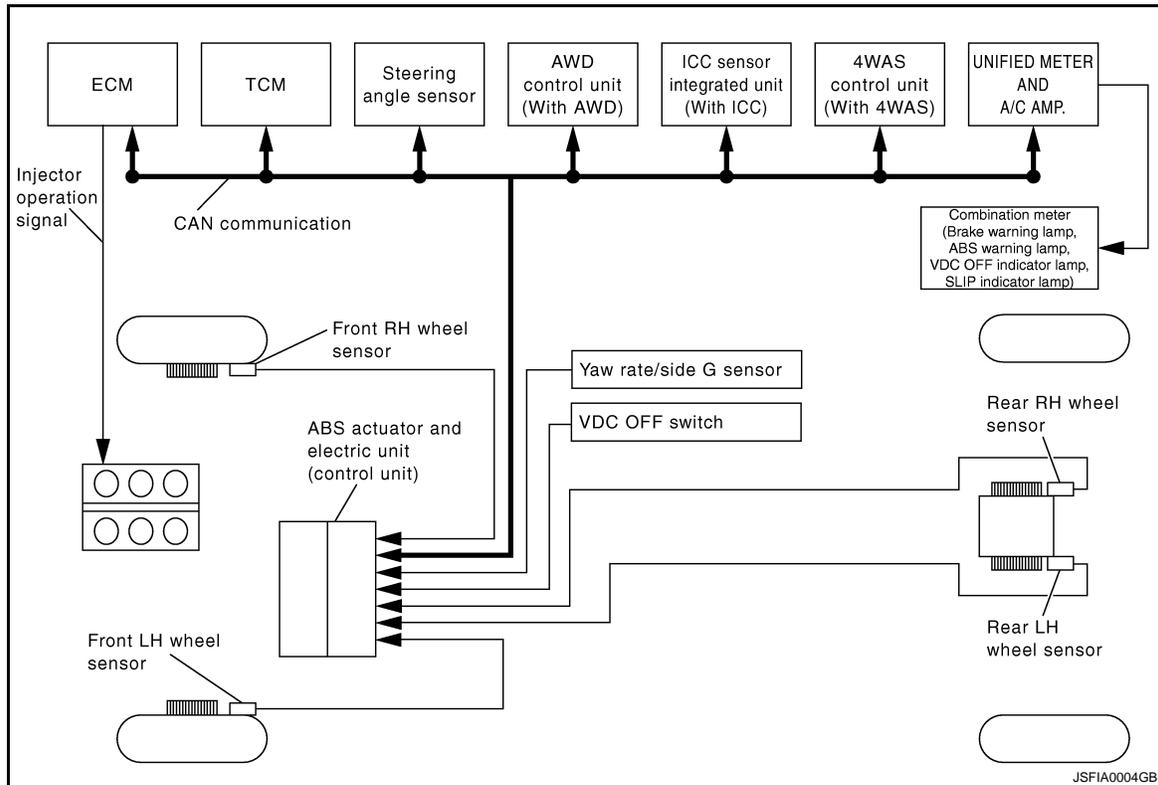


## System Description

INFOID:000000005656643

- Traction Control System is a function that electronically controls engine torque, brake fluid pressure and A/T gear position to ensure the optimum slippage ratio at drive wheels by computing wheel speed signals from 4 wheel sensors. When ABS actuator and electric unit (control unit) detects a spin at drive wheels (rear wheels), it compares wheel speed signals from all 4 wheels. At this time, LH and RH rear brake fluid pressure are controlled, while fuel being cut to engine and throttle valve being closed to reduce engine torque by the control unit. Further more, throttle position is continuously controlled to ensure the optimum engine torque at all times.
- During TCS operation, it informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT-III is available.

For USA

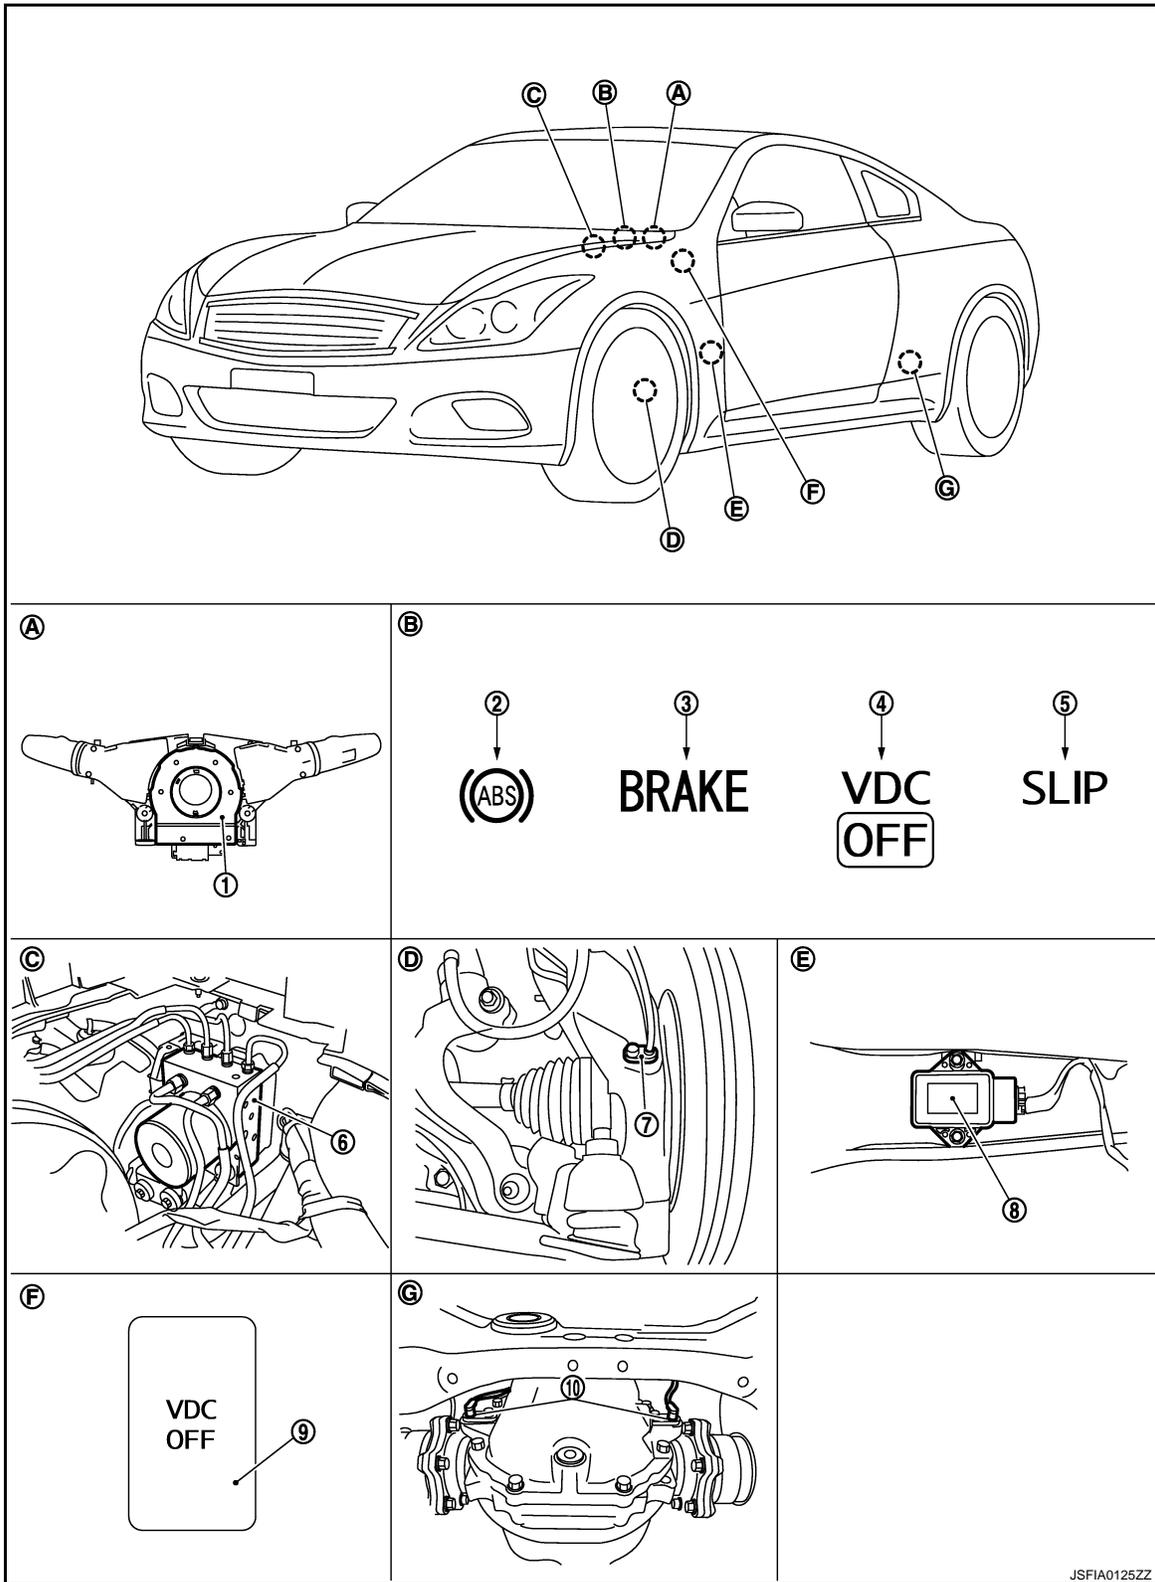

- |                           |                        |  |
|---------------------------|------------------------|--|
| 1. Steering angle sensor  | 2. ABS warning lamp    | 3. Brake warning lamp                            |
| 4. VDC OFF indicator lamp | 5. SLIP indicator lamp | 6. ABS actuator and electric unit (control unit) |

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# TCS

[VDC/TCS/ABS]

## < SYSTEM DESCRIPTION >

- |                                  |                           |                                       |
|----------------------------------|---------------------------|---------------------------------------|
| 7. Front wheel sensor            | 8. Yaw rate/side G sensor | 9. VDC OFF switch                     |
| 10. Rear wheel sensor            |                           |                                       |
| A. Back of spiral cable assembly | B. Combination meter      | C. Inside brake master cylinder cover |
| D. Steering knuckle              | E. Under center console   | F. Instrument driver lower panel      |
| G. Rear final drive assembly     |                           |                                       |

For Canada

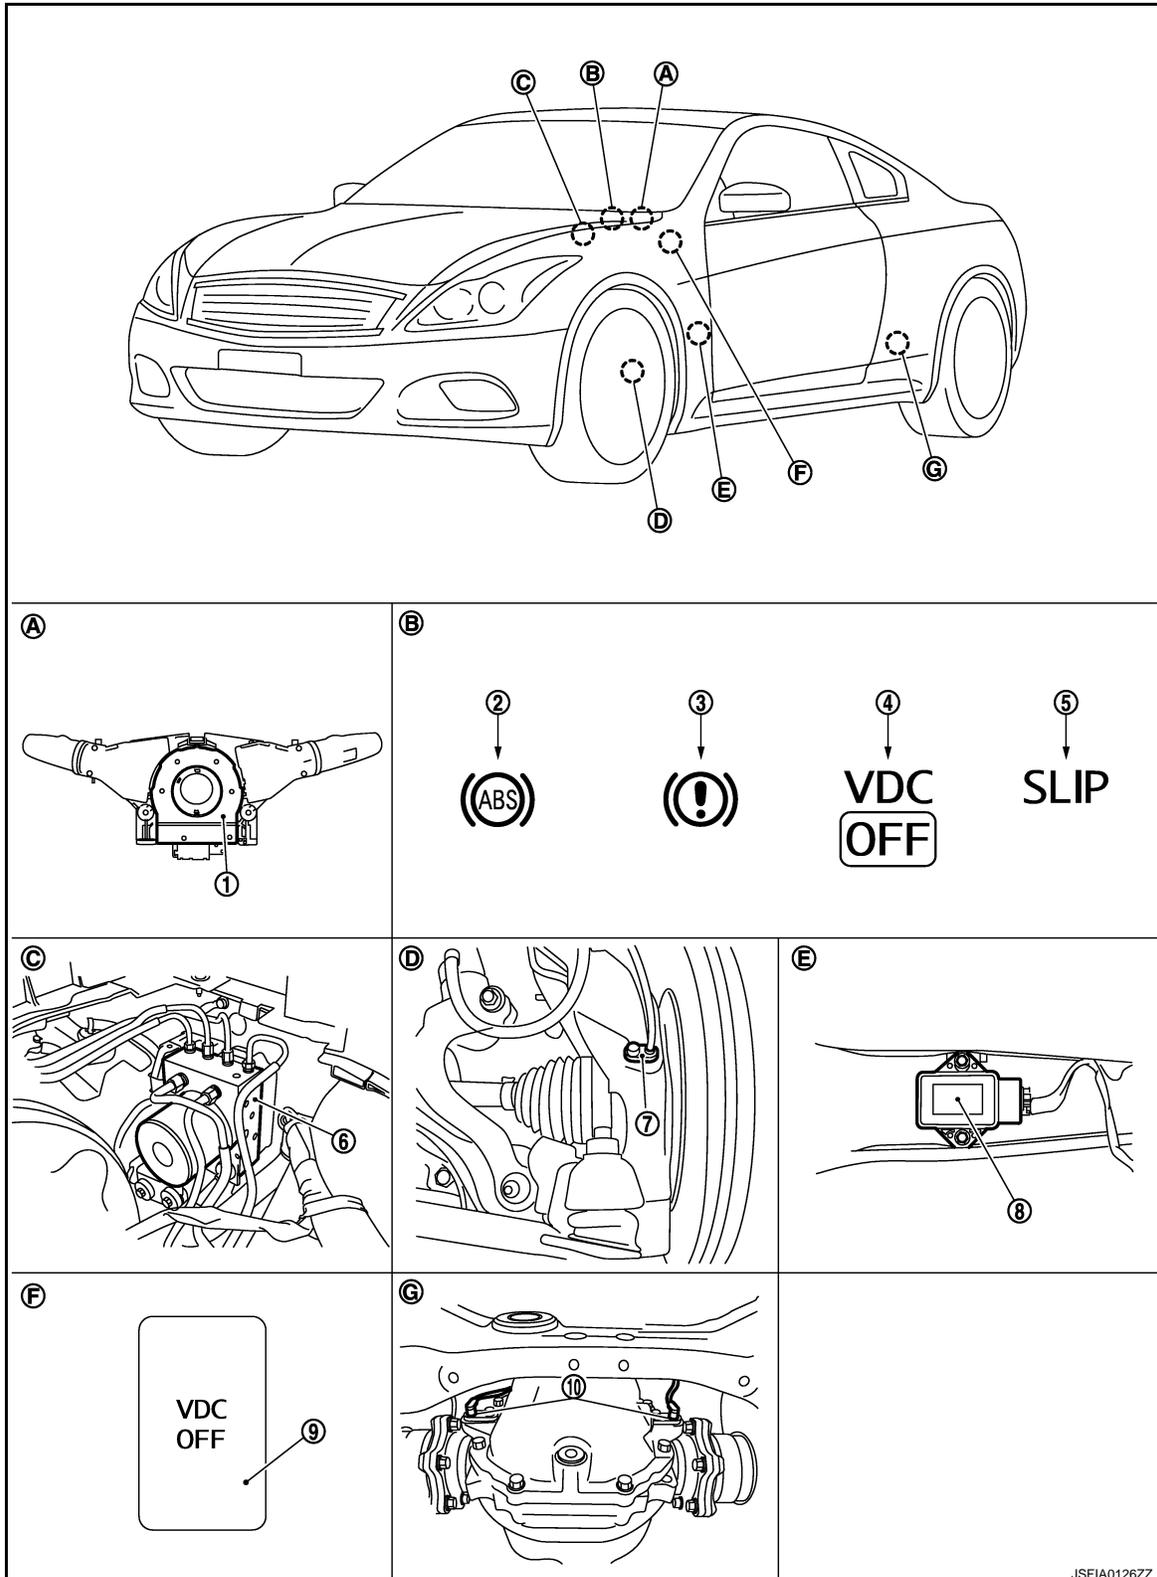

JSFIA0126ZZ

# TCS

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- |                                  |                           |  |   |
|----------------------------------|---------------------------|--|---|
| 1. Steering angle sensor         | 2. ABS warning lamp       | 3. Brake warning lamp                            | A |
| 4. VDC OFF indicator lamp        | 5. SLIP indicator lamp    | 6. ABS actuator and electric unit (control unit) |   |
| 7. Front wheel sensor            | 8. Yaw rate/side G sensor | 9. VDC OFF switch                                | B |
| 10. Rear wheel sensor            |                           |  |   |
| A. Back of spiral cable assembly | B. Combination meter      | C. Inside brake master cylinder cover            | C |
| D. Steering knuckle              | E. Under center console   | F. Instrument driver lower panel                 |   |
| G. Rear final drive assembly     |                           |  |   |

## Component Description

INFOID:000000005656645


Component parts	Reference	
ABS actuator and electric unit (control unit)	Pump	<a href="#">BRC-39, "Description"</a>
	Motor	
	Actuator relay (Main relay)	<a href="#">BRC-41, "Description"</a>
	Solenoid valve	<a href="#">BRC-47, "Description"</a>
	Pressure sensor	<a href="#">BRC-53, "Description"</a>
	VDC switch-over valve (USV1, USV2, HSV1, HSV2)	<a href="#">BRC-61, "Description"</a>
Wheel sensor	<a href="#">BRC-31, "Description"</a>	
Yaw rate/side G sensor	<a href="#">BRC-58, "Description"</a>	
Steering angle sensor	<a href="#">BRC-55, "Description"</a>	
VDC OFF switch	<a href="#">BRC-73, "Description"</a>	
ABS warning lamp	<a href="#">BRC-75, "Description"</a>	
Brake warning lamp	<a href="#">BRC-76, "Description"</a>	
VDC OFF indicator lamp	<a href="#">BRC-77, "Description"</a>	
SLIP indicator lamp	<a href="#">BRC-78, "Description"</a>	

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

ABS

System Diagram

INFOID:000000005656646

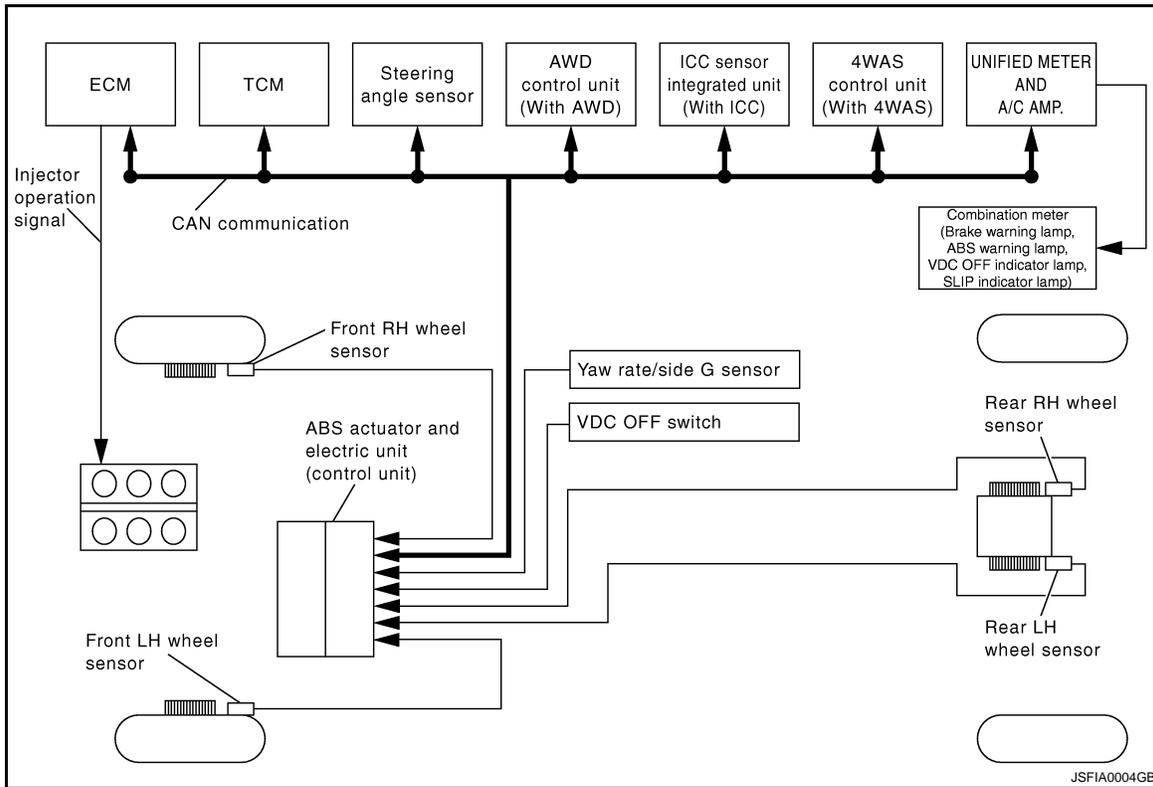

System Description

INFOID:000000005656647

- Anti-Lock Braking System is a function that detects wheel revolution while braking, electronically controls braking force, and prevents wheel locking during sudden braking. It improves handling stability and maneuverability for avoiding obstacles.
- Electrical system diagnosis by CONSULT-III is available.

# ABS


[VDC/TCS/ABS]

< SYSTEM DESCRIPTION >

## Component Parts Location

INFOID:000000005656648

For USA

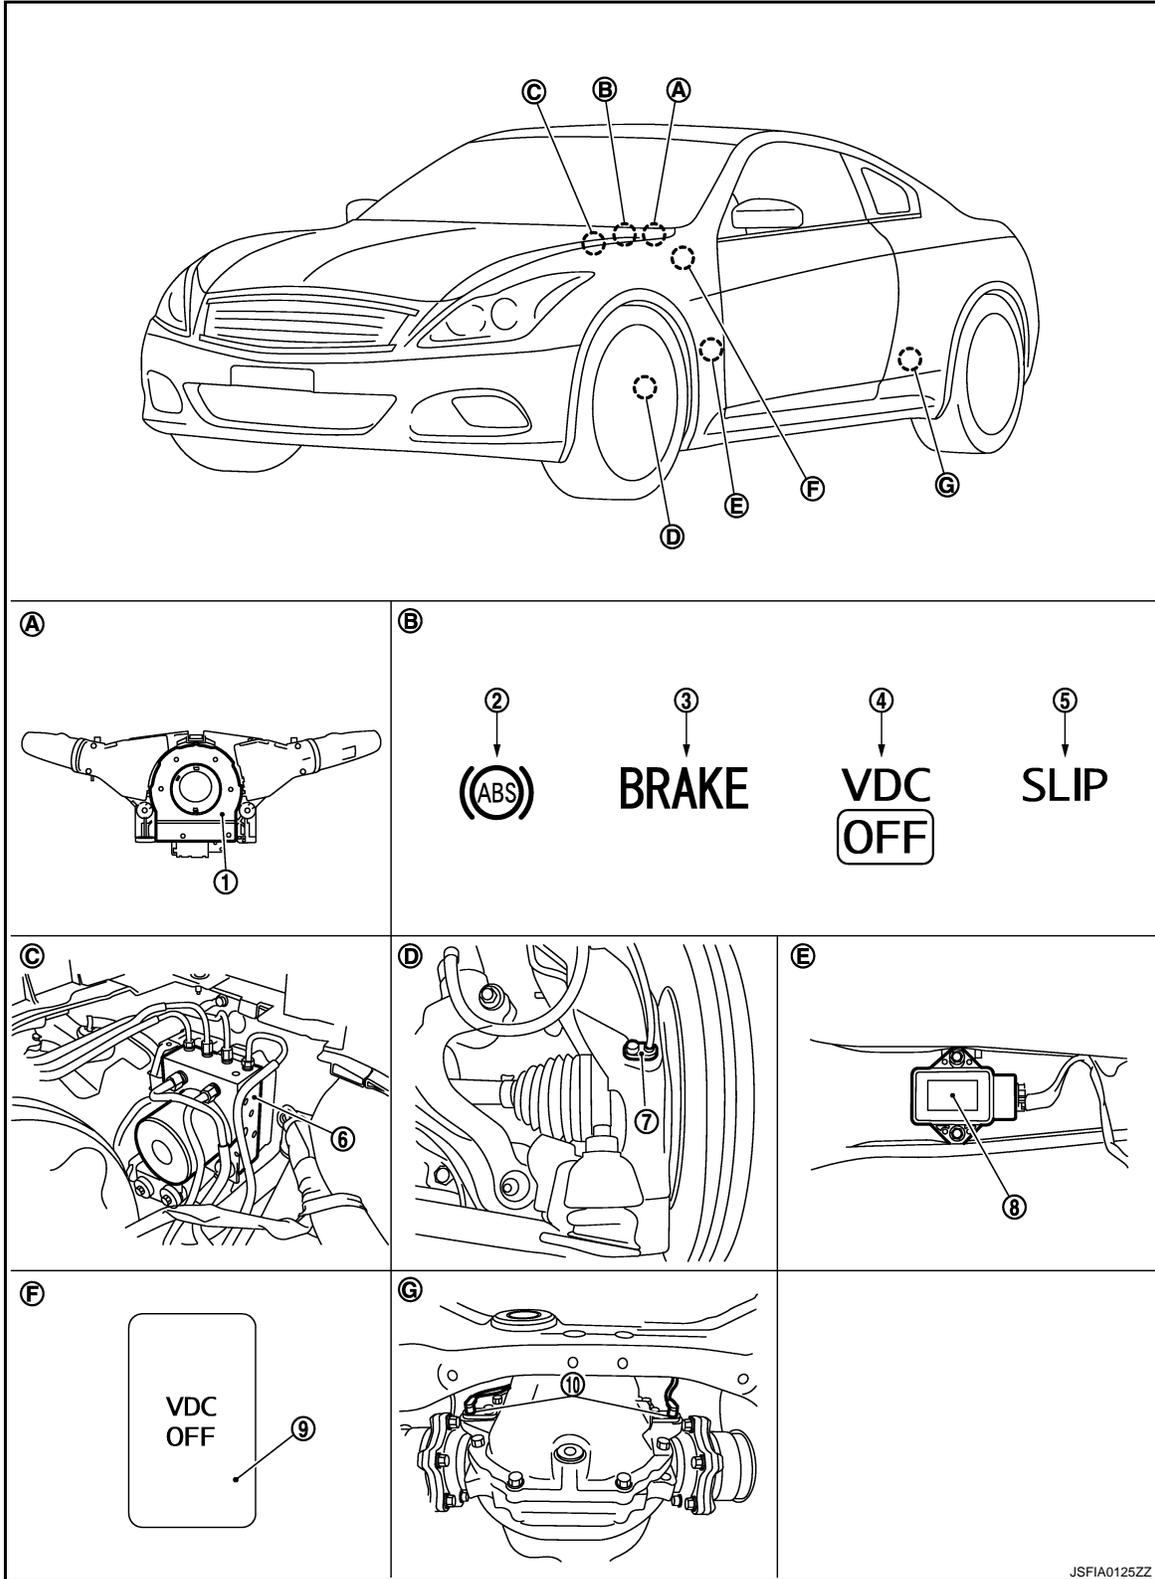

- |                           |                        |  |
|---------------------------|------------------------|--|
| 1. Steering angle sensor  | 2. ABS warning lamp    | 3. Brake warning lamp                            |
| 4. VDC OFF indicator lamp | 5. SLIP indicator lamp | 6. ABS actuator and electric unit (control unit) |

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# ABS

[VDC/TCS/ABS]

## < SYSTEM DESCRIPTION >

- 7. Front wheel sensor
- 8. Yaw rate/side G sensor
- 9. VDC OFF switch
- 10. Rear wheel sensor
- A. Back of spiral cable assembly
- B. Combination meter
- C. Inside brake master cylinder cover
- D. Steering knuckle
- E. Under center console
- F. Instrument driver lower panel
- G. Rear final drive assembly

For Canada

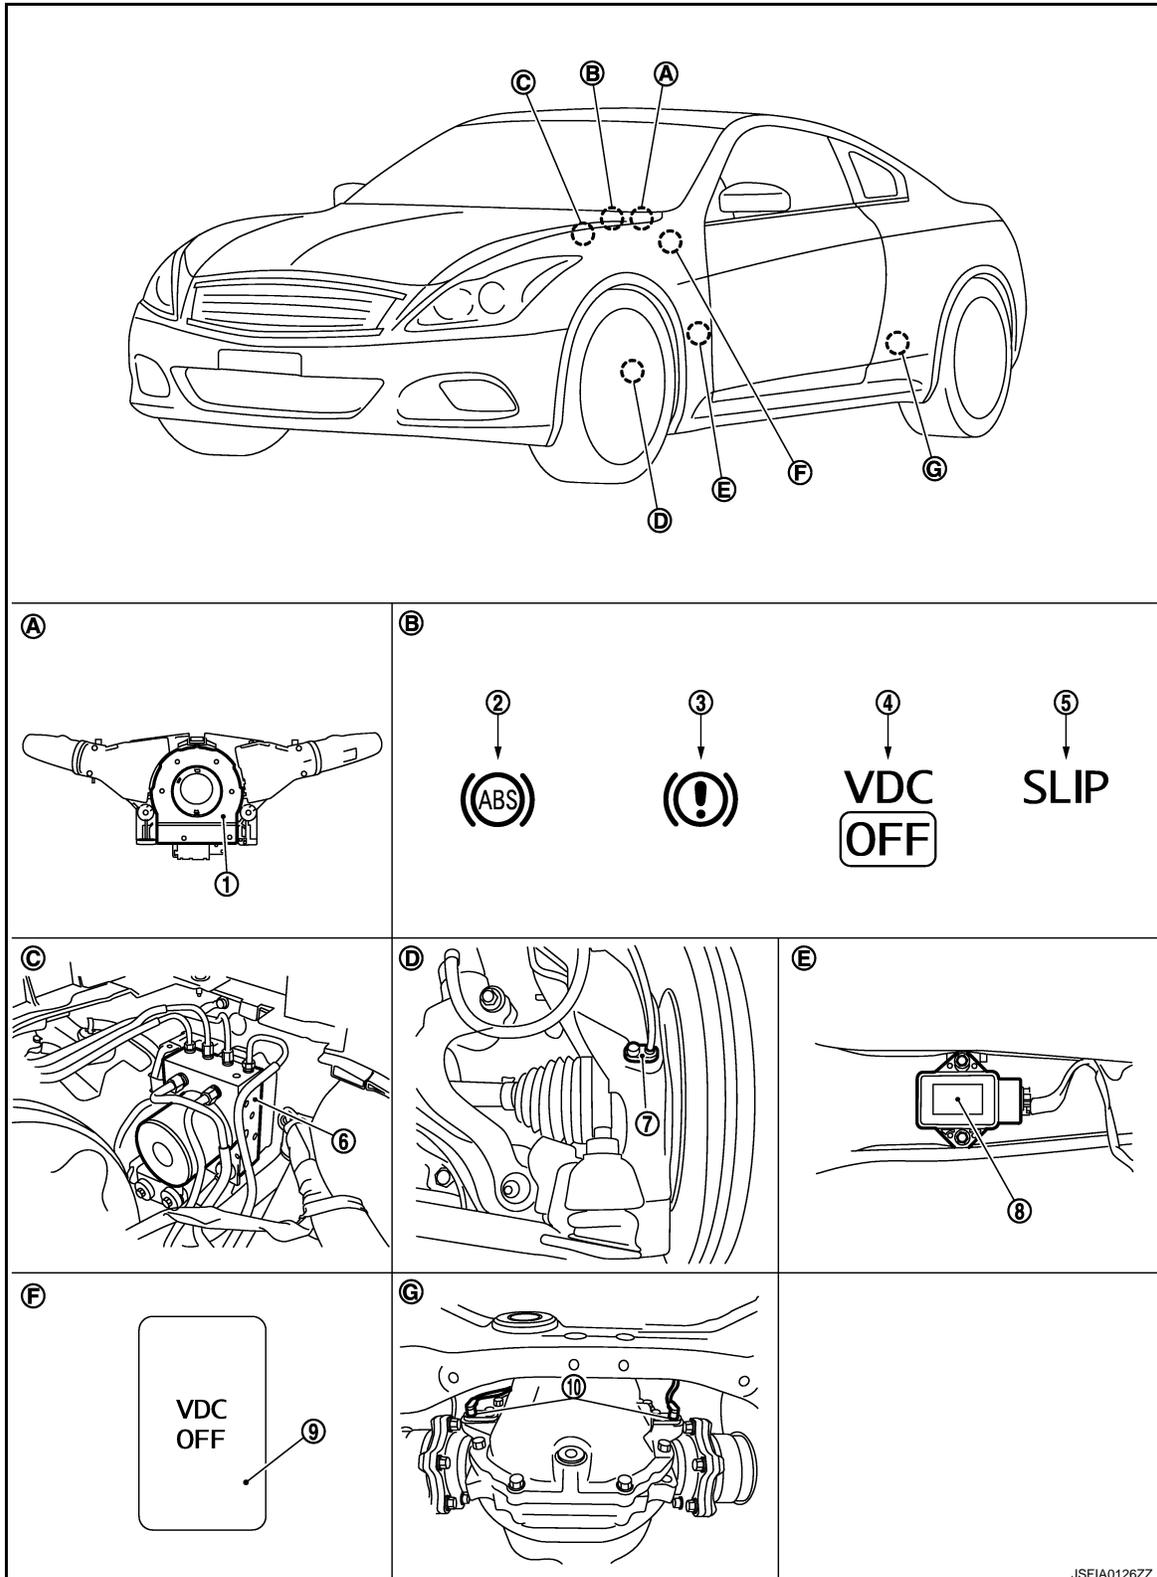

JSFIA0126ZZ

# ABS

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- |                                  |                           |  |   |
|----------------------------------|---------------------------|--|---|
| 1. Steering angle sensor         | 2. ABS warning lamp       | 3. Brake warning lamp                            | A |
| 4. VDC OFF indicator lamp        | 5. SLIP indicator lamp    | 6. ABS actuator and electric unit (control unit) |   |
| 7. Front wheel sensor            | 8. Yaw rate/side G sensor | 9. VDC OFF switch                                | B |
| 10. Rear wheel sensor            |                           |  |   |
| A. Back of spiral cable assembly | B. Combination meter      | C. Inside brake master cylinder cover            | C |
| D. Steering knuckle              | E. Under center console   | F. Instrument driver lower panel                 |   |
| G. Rear final drive assembly     |                           |  |   |

## Component Description

INFOID:000000005656649


Component parts	Reference	
ABS actuator and electric unit (control unit)	Pump	<a href="#">BRC-39, "Description"</a>
	Motor	
	Actuator relay (Main relay)	<a href="#">BRC-41, "Description"</a>
	Solenoid valve	<a href="#">BRC-47, "Description"</a>
	Pressure sensor	<a href="#">BRC-53, "Description"</a>
	VDC switch-over valve (USV1, USV2, HSV1, HSV2)	<a href="#">BRC-61, "Description"</a>
Wheel sensor	<a href="#">BRC-31, "Description"</a>	
Yaw rate/side G sensor	<a href="#">BRC-58, "Description"</a>	
Steering angle sensor	<a href="#">BRC-55, "Description"</a>	
VDC OFF switch	<a href="#">BRC-73, "Description"</a>	
ABS warning lamp	<a href="#">BRC-75, "Description"</a>	
Brake warning lamp	<a href="#">BRC-76, "Description"</a>	
VDC OFF indicator lamp	<a href="#">BRC-77, "Description"</a>	
SLIP indicator lamp	<a href="#">BRC-78, "Description"</a>	

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## EBD

## System Diagram

INFOID:000000005656650

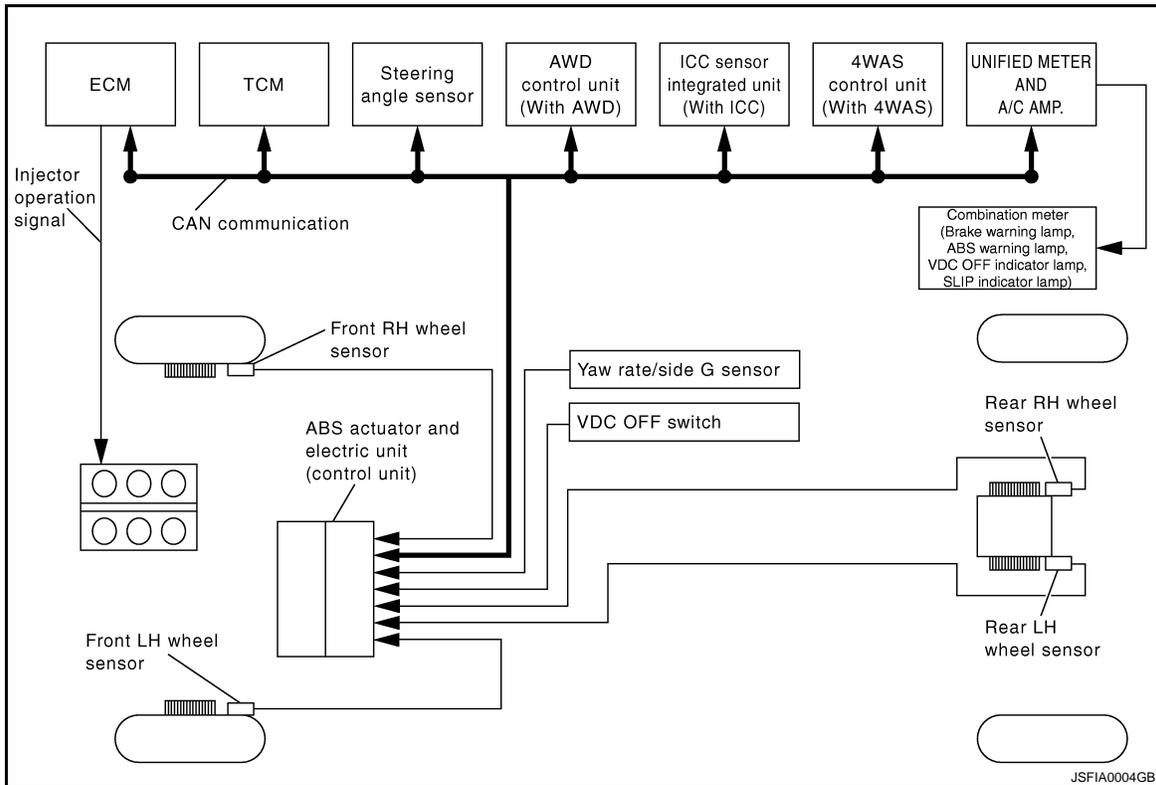


## System Description

INFOID:000000005656651

- Electric Brake force Distribution is a following function. ABS actuator and electric unit (control unit) detects subtle slippages between the front and rear wheels during braking. Then is electronically controls the rear braking force (brake fluid pressure) to reducing and reduces rear wheel slippage. Accordingly it improves vehicle stability.
- Electrical system diagnosis by CONSULT-III is available.

For USA

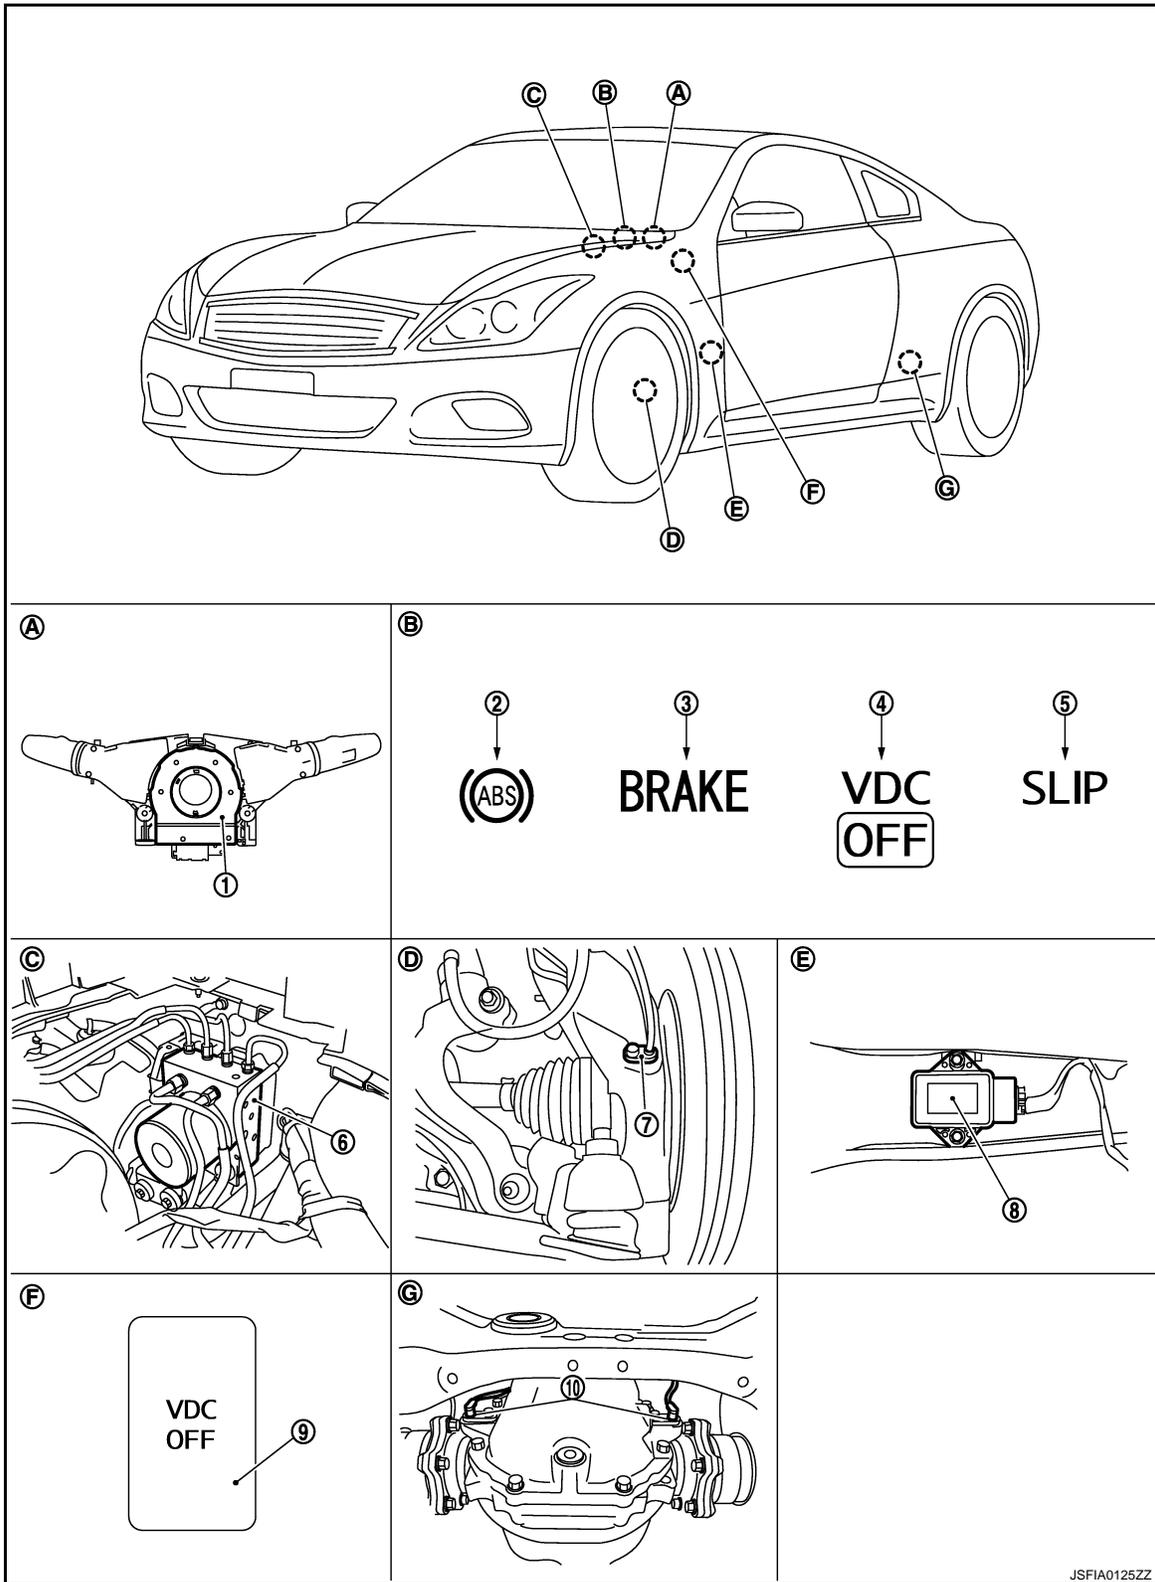

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

- 1. Steering angle sensor
- 2. ABS warning lamp
- 3. Brake warning lamp
- 4. VDC OFF indicator lamp
- 5. SLIP indicator lamp
- 6. ABS actuator and electric unit (control unit)

JSFIA0125ZZ


# EBD

## < SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- 7. Front wheel sensor
- 8. Yaw rate/side G sensor
- 9. VDC OFF switch
- 10. Rear wheel sensor
- A. Back of spiral cable assembly
- B. Combination meter
- C. Inside brake master cylinder cover
- D. Steering knuckle
- E. Under center console
- F. Instrument driver lower panel
- G. Rear final drive assembly

For Canada

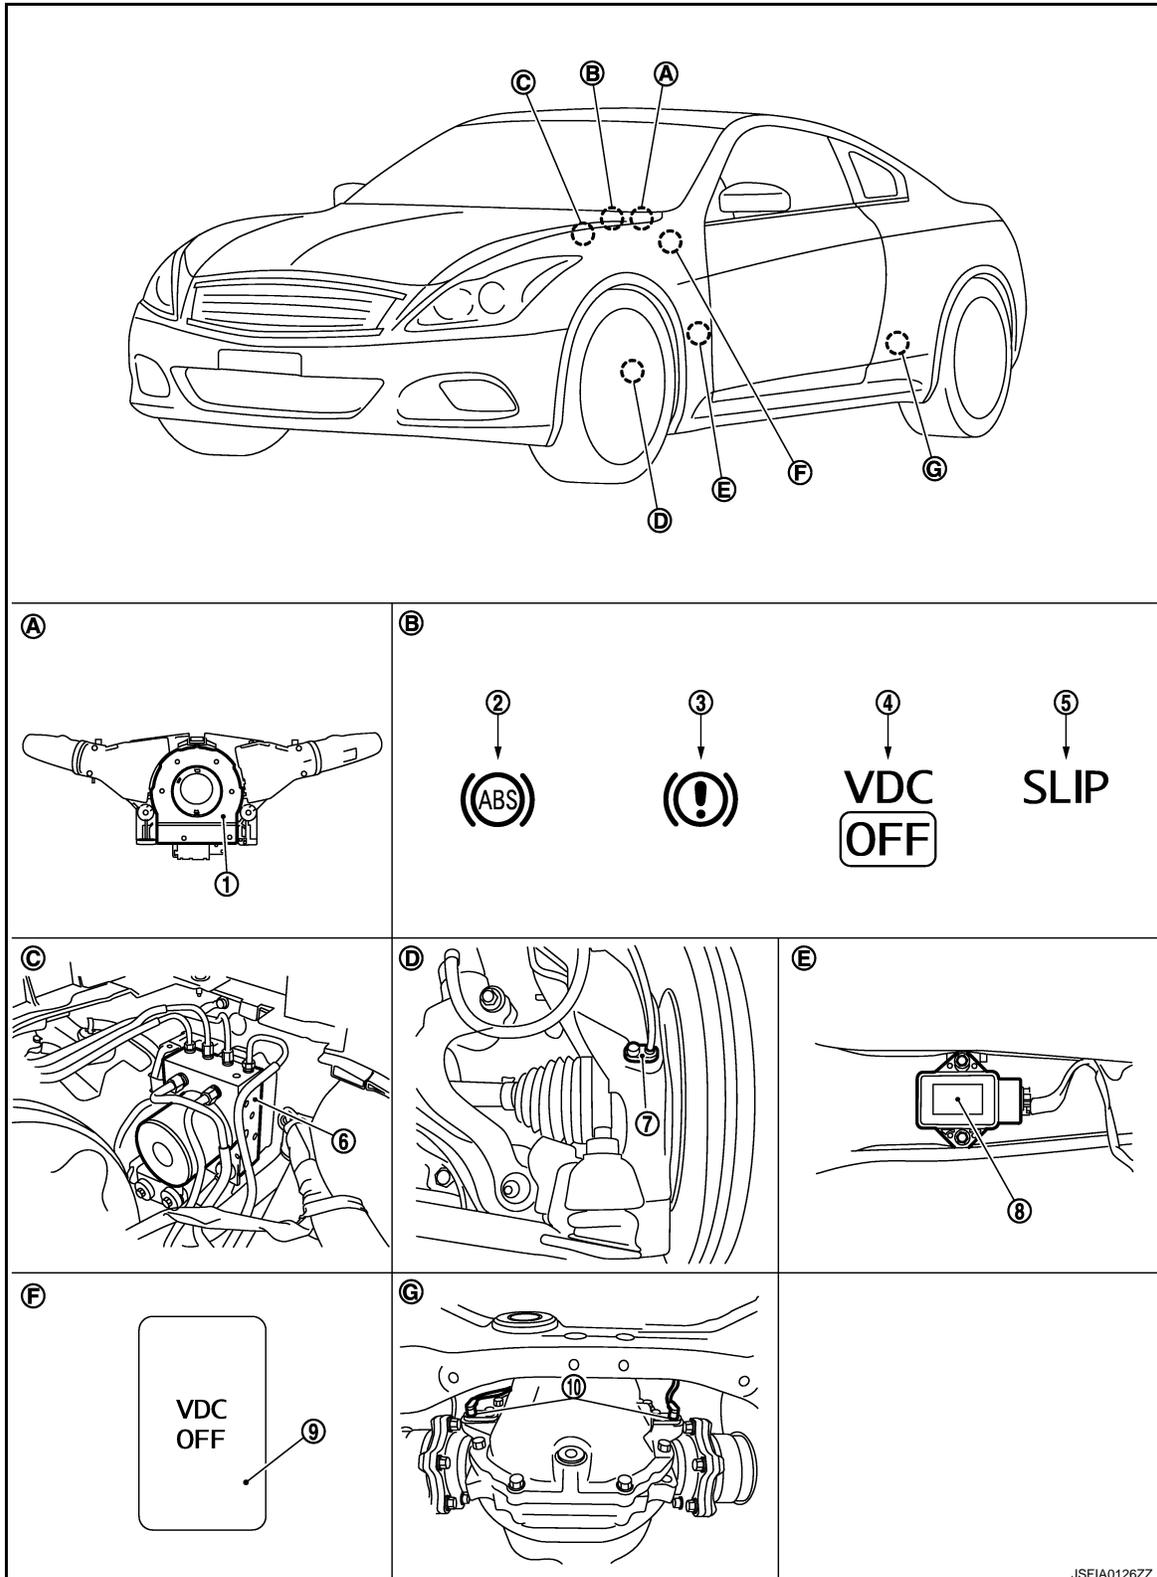

JSFIA0126ZZ

< SYSTEM DESCRIPTION >

- |                                  |                           |  |   |
|----------------------------------|---------------------------|--|---|
| 1. Steering angle sensor         | 2. ABS warning lamp       | 3. Brake warning lamp                            | A |
| 4. VDC OFF indicator lamp        | 5. SLIP indicator lamp    | 6. ABS actuator and electric unit (control unit) | B |
| 7. Front wheel sensor            | 8. Yaw rate/side G sensor | 9. VDC OFF switch                                | C |
| 10. Rear wheel sensor            |                           |  | D |
| A. Back of spiral cable assembly | B. Combination meter      | C. Inside brake master cylinder cover            | E |
| D. Steering knuckle              | E. Under center console   | F. Instrument driver lower panel                 | F |
| G. Rear final drive assembly     |                           |  |   |

Component Description

INFOID:000000005656653

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	<a href="#">BRC-39, "Description"</a>
	Motor	
	Actuator relay (Main relay)	<a href="#">BRC-41, "Description"</a>
	Solenoid valve	<a href="#">BRC-47, "Description"</a>
	Pressure sensor	<a href="#">BRC-53, "Description"</a>
	VDC switch-over valve (USV1, USV2, HSV1, HSV2)	<a href="#">BRC-61, "Description"</a>
Wheel sensor	<a href="#">BRC-31, "Description"</a>	
Yaw rate/side G sensor	<a href="#">BRC-58, "Description"</a>	
Steering angle sensor	<a href="#">BRC-55, "Description"</a>	
VDC OFF switch	<a href="#">BRC-73, "Description"</a>	
ABS warning lamp	<a href="#">BRC-75, "Description"</a>	
Brake warning lamp	<a href="#">BRC-76, "Description"</a>	
VDC OFF indicator lamp	<a href="#">BRC-77, "Description"</a>	
SLIP indicator lamp	<a href="#">BRC-78, "Description"</a>	

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

## DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

### CONSULT-III Function

INFOID:000000005656654

#### FUNCTION

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-III.
Self-diagnostic result	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the ABS actuator and electric unit (control unit) can be read.
Active test	Diagnostic test mode is which CONSULT-III drives some actuators apart from the ABS actuator and electric unit (control unit) and also shifts some parameters in a specified range.
ECU identification	ABS actuator and electric unit (control unit) part number can be read.

#### WORK SUPPORT

Item	Description
ST ANGLE SENSOR ADJUSTMENT	Adjusts the neutral position of the steering angle sensor.

#### SELF-DIAGNOSTIC RESULT

##### Operation Procedure

Before performing the self-diagnosis for "ABS" with CONSULT-III, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

##### Display Item List

Refer to [BRC-90, "DTC No. Index"](#).

##### How to Erase Self-diagnosis Results

After erasing DTC memory for "ABS" with CONSULT-III, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp turn OFF.

##### **CAUTION:**

**If memory cannot be erased, perform applicable diagnosis.**

##### **NOTE:**

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp will not turn OFF even when the system is normal unless the vehicle is driving at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or in case of brake fluid level switch operation (when brake fluid is insufficient).
- VDC OFF switch should not stay in "ON" position.

#### DATA MONITOR MODE

Display Item List

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

×: Applicable ▼: Optional item

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks	
	ECU INPUT SIGNALS	MAIN SIGNALS		
FR LH SENSOR [km/h (MPH)]	×	×	Wheel speed	A
FR RH SENSOR [km/h (MPH)]	×	×		B
RR LH SENSOR [km/h (MPH)]	×	×		C
RR RH SENSOR [km/h (MPH)]	×	×		D
STOP LAMP SW (On/Off)	×	×	Stop lamp switch signal status	E
BATTERY VOLT (V)	×	×	Battery voltage supplied to the ABS actuator and electric unit (control unit)	
GEAR	×	×	Gear position determined by TCM	<b>BRC</b>
SLCT LVR POSI	×	×	A/T selector lever position	
OFF SW (On/Off)	×	×	VDC OFF switch	G
YAW RATE SEN (d/s)	×	×	Yaw rate detected by yaw rate/side G sensor	
4WD MODE MON	×	×	AWD activated (only AWD models)	H
ACCEL POS SIG (%)	×	▼	Throttle actuator opening/closing is displayed (Linked with accelerator pedal)	
SIDE G-SENSOR (m/s <sup>2</sup> )	×	▼	Transverse G detected by yaw rate/side G sensor	I
STR ANGLE SIG (°)	×	▼	Steering angle detected by steering angle sensor	J
PRESS SENSOR (bar)	×	▼	Brake fluid pressure detected by pressure sensor	
ENGINE RPM [tr/min (rpm)]	×	▼	Engine speed	K
FLUID LEV SW (On/Off)	×	▼	Brake fluid level switch signal status	L
PARK BRAKE SW (On/Off)	×	▼	Parking brake switch signal status	
FR RH IN SOL (On/Off)	▼	×	Operation status of each solenoid valve	M
FR RH OUT SOL (On/Off)	▼	×		N
FR LH IN SOL (On/Off)	▼	×		
FR LH OUT SOL (On/Off)	▼	×		O
RR RH IN SOL (On/Off)	▼	×		
RR RH OUT SOL (On/Off)	▼	×		P
RR LH IN SOL (On/Off)	▼	×		
RR LH OUT SOL (On/Off)	▼	×		

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
MOTOR RELAY (On/Off)	▼	×	Motor and motor relay operation
ACTUATOR RLY (On/Off)	▼	×	Actuator relay operation
ABS WARN LAMP (On/Off)	▼	×	ABS warning lamp
OFF LAMP (On/Off)	▼	×	VDC OFF indicator lamp
SLIP/VDC LAMP (On/Off)	▼	×	SLIP indicator lamp
BST OPER SIG	▼	▼	Not applied but displayed.
EBD SIGNAL (On/Off)	▼	▼	EBD operation
ABS SIGNAL (On/Off)	▼	▼	ABS operation
TCS SIGNAL (On/Off)	▼	▼	TCS operation
VDC SIGNAL (On/Off)	▼	▼	VDC operation
EBD FAIL SIG (On/Off)	▼	▼	EBD fail-safe signal
ABS FAIL SIG (On/Off)	▼	▼	ABS fail-safe signal
TCS FAIL SIG (On/Off)	▼	▼	TCS fail-safe signal
VDC FAIL SIG (On/Off)	▼	▼	VDC fail-safe signal
CRANKING SIG (On/Off)	▼	▼	Crank operation
USV [FR-RL] (On/Off)	▼	▼	VDC switch-over valve
USV [FL-RR] (On/Off)	▼	▼	
HSV [FR-RL] (On/Off)	▼	▼	
HSV [FL-RR] (On/Off)	▼	▼	
V/R OUTPUT (On/Off)	▼	▼	Solenoid valve relay activated
M/R OUTPUT (On/Off)	▼	▼	Actuator motor and motor relay activated

## ACTIVE TEST MODE

### CAUTION:

- Do not perform active test while driving vehicle.
- Make sure to completely bleed air from brake system.
- The active test cannot be performed with the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp are ON.
- ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp are ON during active test.

### NOTE:

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal. (Only solenoid valve and ABS motor.)
- "TEST IS STOPPED" in "ABS" with CONSULT-III is displayed 10 seconds after operation start.
- After "TEST IS STOPPED" in "ABS" with CONSULT-III is displayed, to perform test again.

Test Item

## ABS SOLENOID VALVE

- Select "Up", "Keep" and "Down" of "ACTIVE TEST" in "ABS" with CONSULT-III. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item (Note)	Display		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
	USV [FR-RL]	Off	Off	Off
	HSV [FR-RL]	Off	Off	Off
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
	USV [FL-RR]	Off	Off	Off
	HSV [FL-RR]	Off	Off	Off
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
	USV [FL-RR]	Off	Off	Off
	HSV [FL-RR]	Off	Off	Off
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*
	USV [FR-RL]	Off	Off	Off
	HSV [FR-RL]	Off	Off	Off

\*: On for 1 to 2 seconds after the select, and then Off.

### NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

## ABS SOLENOID VALVE (ACT)

- Select "Up", "ACT UP" and "ACT KEEP" of "ACTIVE TEST" in "ABS" with CONSULT-III. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item (Note)	Display		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	USV [FR-RL]	Off	On	On
	HSV [FR-RL]	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	USV [FL-RR]	Off	On	On
	HSV [FL-RR]	Off	On*	Off

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Test item	Display item (Note)	Display		
		Up	ACT UP	ACT KEEP
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	USV [FL-RR]	Off	On	On
	HSV [FL-RR]	Off	On*	Off
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	USV [FR-RL]	Off	On	On
	HSV [FR-RL]	Off	On*	Off

\*: On for 1 to 2 seconds after the select, and then Off.

**NOTE:**

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

**ABS MOTOR**

- Select “On” and “Off” of “ACTIVE TEST” in “ABS” with CONSULT-III. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

**NOTE:**

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

**ECU IDENTIFICATION**

ABS actuator and electric unit (control unit) part number can be read.

# C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## DTC/CIRCUIT DIAGNOSIS

### C1101, C1102, C1103, C1104 WHEEL SENSOR

#### Description

INFOID:000000005817610

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

#### DTC Logic

INFOID:000000005817611

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1101	RR RH SENSOR-1	Circuit of rear RH wheel sensor is open. Or when the sensor power voltage is outside the standard.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Wheel sensor</li><li>• ABS actuator and electric unit (control unit)</li></ul>
C1102	RR LH SENSOR-1	Circuit of rear LH wheel sensor is open. Or when the sensor power voltage is outside the standard.	
C1103	FR RH SENSOR-1	Circuit of front RH wheel sensor is open. Or when the sensor power voltage is outside the standard.	
C1104	FR LH SENSOR-1	Circuit of front LH wheel sensor is open. Or when the sensor power voltage is outside the standard.	

#### DTC CONFIRMATION PROCEDURE

##### 1. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

- YES >> Proceed to diagnosis. Refer to [BRC-31, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:000000005817612

#### **CAUTION:**

**Do not check between wheel sensor terminals.**

##### 1. CHECK TIRES

Check air pressure, wear and size. Refer to [WT-61, "Tire"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

##### 2. CHECK SENSOR AND SENSOR ROTOR

- Check sensor rotor for damage.
- Check wheel sensor for damage, disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair wheel sensor mount or replace sensor rotor. Then perform self-diagnosis for "ABS" with CONSULT-III.

##### 3. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect malfunctioning wheel sensor connector.
4. Check terminal to see if it is deformed, disconnected, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.

# C1101, C1102, C1103, C1104 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace error-detected parts.

## 4. CHECK WHEEL SENSOR HARNESS

1. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

Measurement terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	9	E27 (Front RH)	1	Existed
	26	E60 (Front LH)		
	7	B33 (Rear RH)		
	6	B34 (Rear LH)		

Measurement terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	10	E27 (Front RH)	2	Existed
	5	E60 (Front LH)		
	29	B33 (Rear RH)		
	27	B34 (Rear LH)		

2. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E41	9, 10	E41	1, 4	Not existed
	26, 5			
	7, 29			
	6, 27			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

## 5. REPLACE WHEEL SENSOR

1. Replace wheel sensor.
2. Erase self-diagnosis results for "ABS" with CONSULT-III.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.

**CAUTION:**

**Never start the engine.**

5. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> INSPECTION END

## Special Repair Requirement

INFOID:000000005817613

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1105, C1106, C1107, C1108 WHEEL SENSOR

### Description

INFOID:000000005817628

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005817629

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1105	RR RH SENSOR-2	When the circuit in the rear RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Wheel sensor</li><li>• ABS actuator and electric unit (control unit)</li></ul>
C1106	RR LH SENSOR-2	When the circuit in the rear LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	
C1107	FR RH SENSOR-2	When the circuit in the front RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	
C1108	FR LH SENSOR-2	When the circuit in the front LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

- YES >> Proceed to diagnosis. Refer to [BRC-33, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817630

#### CAUTION:

**Do not check between wheel sensor terminals.**

#### 1. CHECK TIRES

Check air pressure, wear and size. Refer to [WT-61, "Tire"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2. CHECK SENSOR AND SENSOR ROTOR

- Check sensor rotor for damage.
- Check wheel sensor for damage, disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair wheel sensor mount or replace sensor rotor. Then perform self-diagnosis for "ABS" with CONSULT-III.

#### 3. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.

# C1105, C1106, C1107, C1108 WHEEL SENSOR

[VDC/TCS/ABS]

## < DTC/CIRCUIT DIAGNOSIS >

3. Disconnect malfunctioning wheel sensor connector.
4. Check terminal to see if it is deformed, disconnected, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> Repair or replace error-detected parts.

### 4.CHECK WHEEL SENSOR HARNESS

1. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

Measurement terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	9	E27 (Front RH)	1	Existed
	26	E60 (Front LH)		
	7	B33 (Rear RH)		
	6	B34 (Rear LH)		

Measurement terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	10	E27 (Front RH)	2	Existed
	5	E60 (Front LH)		
	29	B33 (Rear RH)		
	27	B34 (Rear LH)		

2. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E41	9, 10	E41	1, 4	Not existed
	26, 5			
	7, 29			
	6, 27			

Is the inspection result normal?

- YES >> GO TO 5.  
 NO >> Repair or replace error-detected parts.

### 5.REPLACE WHEEL SENSOR

1. Replace wheel sensor.
2. Erase self-diagnosis results for "ABS" with CONSULT-III.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.

**CAUTION:**

**Never start the engine.**

5. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

- YES >> Replace ABS actuator and electric unit (control unit).  
 NO >> INSPECTION END

## Special Repair Requirement

INFOID:0000000005817753

### 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

## C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

A

B

C

D

E

**BRC**

G

H

I

J

K

L

M

N

O

P

# C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1109 POWER AND GROUND SYSTEM

### Description

INFOID:000000005817632

Supplies electric power to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005817633

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1109	BATTERY VOLTAGE [ABNORMAL]	When the ABS actuator and electric unit (control unit) power supply voltage is lower than normal.	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit)</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch OFF to ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1109" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-36, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817634

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check terminal for deformation, disconnection, looseness, etc.

#### Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace error-detected parts.

#### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY

1. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Condition	Voltage
Connector	Terminal			
E41	28	Ground	Ignition switch: OFF	Approx. 0 V

2. Turn the ignition switch ON.

#### **CAUTION:**

**Never start the engine.**

3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Condition	Voltage
Connector	Terminal			
E41	28	Ground	Ignition switch: ON	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> GO TO 3.

#### 3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check 10A fusible link (45).
3. Disconnect IPDM E/R harness connector.

# C1109 POWER AND GROUND SYSTEM

[VDC/TCS/ABS]

## < DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between ABS actuator and electric unit (control unit) harness connector and IPDM E/R harness connector.

ABS actuator and electric unit (control unit)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E41	28	E5	25	Existed

Is the inspection result normal?

YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-63. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).

NO >> Repair or replace error-detected parts.

## 4.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace error-detected parts. (Check ABS earth bolt for tightness and corrosion.)

## Special Repair Requirement

INFOID:000000005817755

## 1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

**C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)**  
 < DTC/CIRCUIT DIAGNOSIS > [VDC/TCS/ABS]

**C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)**

DTC Logic

INFOID:000000005817636

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1110	CONTROLLER FAILURE	When there is an internal malfunction in the ABS actuator and electric unit (control unit).	ABS actuator and electric unit (control unit)
C1153	EMERGENCY BRAKE	When ABS actuator and electric unit (control unit) is malfunctioning. (Pressure increase is too much or too little)	
C1170	VARIANT CODING	In a case where VARIANT CODING is different.	

DTC CONFIRMATION PROCEDURE

**1**.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1110", "C1153" or "C1170" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-38, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000005817637

**1**.REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

**CAUTION:**

Replace ABS actuator and electric unit (control unit) when self-diagnostic result shows items other than those applicable.

>> Replace ABS actuator and electric unit (control unit).

Special Repair Requirement

INFOID:000000005817756

**1**.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1111 ABS MOTOR, MOTOR RELAY SYSTEM

### Description

INFOID:000000005817639

#### PUMP

The pump returns the brake fluid stored in the reservoir to the master cylinder by reducing the pressure.

#### MOTOR

The motor drives the pump according to the signals transmitted by the ABS actuator and electric unit (control unit).

#### MOTOR RELAY

Activates or deactivates motor according to the signals transmitted by the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005817640

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1111	PUMP MOTOR	During the actuator motor operating with ON, when the actuator motor turns OFF, or when the control line for actuator motor relay is open.	<ul style="list-style-type: none"> <li>Harness or connector</li> <li>ABS actuator and electric unit (control unit)</li> </ul>
		During the actuator motor operating with OFF, when the actuator motor turns ON, or when the control line for relay is shorted to ground.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

- Turn the ignition switch ON.
- Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1111" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-39, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817641

#### 1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Disconnect ABS actuator and electric unit (control unit) connector.
- Check terminal for deformation, disconnect, looseness, etc.

#### Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace error-detected parts.

#### 2. CHECK ABS MOTOR AND MOTOR RELAY POWER SUPPLY CIRCUIT

- Check the 50A fusible link (M).
- Check the voltage between the ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E41	2	Ground	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

# C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## 3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005817757

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1114 ACTUATOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1114 ACTUATOR RELAY SYSTEM

### Description

INFOID:000000005817644

Activates or deactivates each solenoid valve according to the signals transmitted by the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005817645

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1114	MAIN RELAY	During the actuator relay operating with OFF, when the actuator relay turns ON, or when the control line for the relay is shorted to the ground.	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit)</li> </ul>
		During the actuator relay operating with ON, when the actuator relay turns ON, or when the control line for the relay is open.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1114" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-41, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817646

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace error-detected parts.

#### 2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Check the 30A fusible link (L).
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E41	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

#### 3. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

# C1114 ACTUATOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005817758

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1115 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1115 WHEEL SENSOR

### Description

INFOID:000000005817648

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005817649

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1115	ABS SENSOR [ABNORMAL SIGNAL]	When wheel sensor input signal is malfunctioning.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Wheel sensor</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1115" detected?

- YES >> Proceed to diagnosis. Refer to [BRC-43. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817650

#### **CAUTION:**

**Do not check between wheel sensor terminals.**

#### 1. CHECK TIRES

Check air pressure, wear and size. Refer to [WT-61. "Tire"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2. CHECK SENSOR AND SENSOR ROTOR

- Check sensor rotor for damage.
- Check wheel sensor for damage, disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair wheel sensor mount or replace sensor rotor. Then perform self-diagnosis for "ABS" with CONSULT-III.

#### 3. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect wheel sensor connector.
4. Check terminal to see if it is deformed, disconnected, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace error-detected parts.

#### 4. CHECK WHEEL SENSOR HARNESS

1. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

# C1115 WHEEL SENSOR

[VDC/TCS/ABS]

## < DTC/CIRCUIT DIAGNOSIS >

Measurement terminal for power supply circuit				
ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	9	E27 (Front RH)	1	Existed
	26	E60 (Front LH)		
	7	B33 (Rear RH)		
	6	B34 (Rear LH)		

Measurement terminal for signal circuit				
ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	10	E27 (Front RH)	2	Existed
	5	E60 (Front LH)		
	29	B33 (Rear RH)		
	27	B34 (Rear LH)		

2. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E41	9, 10	E41	1, 4	Not existed
	26, 5			
	7, 29			
	6, 27			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

## 5. REPLACE WHEEL SENSOR

1. Replace wheel sensor.
2. Erase self-diagnosis results for "ABS" with CONSULT-III.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.

### **CAUTION:**

**Never start the engine.**

5. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1115" detected?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> INSPECTION END

## Special Repair Requirement

INFOID:000000005817759

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1116 STOP LAMP SWITCH

### Description

INFOID:000000005817657

The stop lamp switch transmits the stop lamp switch signal (ON/OFF) to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005817658

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1116	STOP LAMP SW	When a stop lamp switch signal is not input where the brake pedal is depressed.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Stop lamp switch</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1116" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-45, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817659

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect stop lamp switch harness connector.
4. Check terminal for deformation, disconnection, looseness, etc.
5. Reconnect ABS actuator and electric unit (control unit) and stop lamp switch connectors securely.
6. Start the engine.
7. Repeat pumping brake pedal carefully several times, and perform self-diagnosis for "ABS" with CONSULT-III.

#### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Poor connection of connector terminal. Repair or replace error-detected.

#### 2. CHECK STOP LAMP SWITCH CLEARANCE

Check stop lamp switch clearance. Refer to [BR-8, "Inspection and Adjustment"](#).

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Adjust stop lamp switch clearance. Refer to [BR-8, "Inspection and Adjustment"](#).

#### 3. CHECK STOP LAMP SWITCH

Check stop lamp switch. Refer to [BRC-46, "Component Inspection"](#).

#### Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace stop lamp switch. Refer to [BR-19, "Exploded View"](#).

#### 4. CHECK STOP LAMP SWITCH CIRCUIT

Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

# C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		Condition	Voltage
Connector	Terminal		
E41	30	Brake pedal is depressed	Battery voltage
		Brake pedal is released	Approx. 0 V

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).  
NO >> Repair or replace error-detected parts.

## Component Inspection

INFOID:000000005817660

### 1. CHECK STOP LAMP SWITCH

1. Turn the ignition switch OFF.
2. Disconnect stop lamp switch connector.
3. Check the continuity between stop lamp switch connector terminals.

Stop lamp switch	Condition	Continuity
Terminal		
1 – 2 (Without ICC) 3 – 4 (With ICC)	Release stop lamp switch (When brake pedal is depressed.)	Existed
	Push stop lamp switch (When brake pedal is released.)	Not existed

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace stop lamp switch. Refer to [BR-19. "Exploded View"](#).

## Special Repair Requirement

INFOID:000000005817760

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1120, C1122, C1124, C1126 IN ABS SOL

### Description

INFOID:000000005817662

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005817663

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1120	FR LH IN ABS SOL	When the control unit detects a malfunction in the front LH inlet solenoid circuit.	ABS actuator and electric unit (control unit)
C1122	FR RH IN ABS SOL	When the control unit detects a malfunction in the front RH inlet solenoid circuit.	
C1124	RR LH IN ABS SOL	When the control unit detects a malfunction in the rear LH inlet solenoid circuit.	
C1126	RR RH IN ABS SOL	When the control unit detects a malfunction in the rear RH inlet solenoid circuit.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1120", "C1122", "C1124" or "C1126" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-47, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817664

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace error-detected parts.

#### 2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Check the 30A fusible link (L).
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E41	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

#### 3. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

# C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005817761

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1121, C1123, C1125, C1127 OUT ABS SOL

### Description

INFOID:000000005817667

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005817668

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1121	FR LH OUT ABS SOL	When the control unit detects a malfunction in the front LH outlet solenoid circuit.	ABS actuator and electric unit (control unit)
C1123	FR RH OUT ABS SOL	When the control unit detects a malfunction in the front RH outlet solenoid circuit.	
C1125	RR LH OUT ABS SOL	When the control unit detects a malfunction in the rear LH outlet solenoid circuit.	
C1127	RR RH OUT ABS SOL	When the control unit detects a malfunction in the rear RH outlet solenoid circuit.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1121", "C1123", "C1125" or "C1127" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-49, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817669

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace error-detected parts.

#### 2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Check the 30A fusible link (L).
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E41	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

#### 3. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

# C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005817762

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1130, C1131, C1132 ENGINE SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1130, C1131, C1132 ENGINE SIGNAL

### Description

INFOID:000000005817671

ABS actuator and electric unit (control unit) and ECM exchange the engine signal with CAN communication line.

### DTC Logic

INFOID:000000005817672

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1130	ENGINE SIGNAL 1	Major engine components are malfunctioning.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit)</li><li>• ECM</li><li>• CAN communication line</li></ul>
C1131	ENGINE SIGNAL 2		
C1132	ENGINE SIGNAL 3		

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1130", "C1131" or "C1132" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-51, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817673

#### 1. ECM SELF-DIAGNOSIS

Perform self-diagnosis for "ENGINE" with CONSULT-III.

Is any item indicated on the self-diagnosis display?

- YES >> Check the malfunctioning system.  
NO >> GO TO 2.

#### 2. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

1. Erase self-diagnosis results for "ABS" with CONSULT-III.
2. Turn the ignition switch OFF.
3. Start the engine. Drive the vehicle for a while.
4. Make sure that malfunction indicator lamp (MIL) turns OFF.
5. Stop the engine. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1130", "C1131" or "C1132" detected?

- YES >> Replace ABS actuator and electric unit (control unit).  
NO >> Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005817763

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

**C1138 4WAS SYSTEM**

**Description**

INFOID:000000005656706

The ABS actuator and electric unit (control unit) and the 4WAS control unit exchange signals via the CAN communication line.

**DTC Logic**

INFOID:000000005656707

**DTC DETECTION LOGIC**

DTC	Display item	Malfunction detected condition	Possible cause
C1138	4WAS CIRCUIT	Abnormal condition in major 4WAS parts.	<ul style="list-style-type: none"> <li>• ABS actuator and electric unit (control unit)</li> <li>• 4WAS system</li> <li>• CAN communication line</li> </ul>

**DTC CONFIRMATION PROCEDURE**

**1. CHECK SELF-DIAGNOSIS RESULTS**

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1138" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-52. "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

**Diagnosis Procedure**

INFOID:000000005656708

**1.**

Perform self-diagnosis for "4WAS(FRONT)" and "4WAS(MAIN/RAS/HICAS)" with CONSULT-III.

Is any item indicated on the self-diagnosis display?

- YES >> Check the malfunction system.  
 NO >> GO TO 2.

**2. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS**

1. Erase self-diagnosis results for "ABS" with CONSULT-III.
2. Turn the ignition switch OFF.
3. Start the engine. Drive the vehicle for a while.
4. Make sure that 4WAS warning lamp turns OFF.
5. Stop the engine. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1138" detected?

- YES >> Replace ABS actuator and electric unit (control unit).  
 NO >> Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector. If any items and damaged, repair or replace error-detected parts.

**Special Repair Requirement**

INFOID:000000005817764

**1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION**

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1142 PRESS SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

## C1142 PRESS SENSOR

### Description

INFOID:000000005817675

The pressure sensor converts the brake fluid pressure to an electric signal and transmits it to the ABS actuator and electric unit (control unit). [The pressure sensor is integrated in the ABS actuator and electric unit (control unit).]

### DTC Logic

INFOID:000000005817676

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1142	PRESS SEN CIRCUIT	Pressure sensor signal line is open or shorted, or pressure sensor is malfunctioning.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Stop lamp switch</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1142" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-53, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817677

#### 1. CHECK STOP LAMP SWITCH

Check stop lamp switch system. Refer to [BRC-45, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace malfunction component.

#### 2. CHECK BRAKE SYSTEM

1. Check brake fluid leakage: Refer to [BR-11, "Inspection"](#).
2. Check front brake piping: Refer to [BR-25, "FRONT : Inspection"](#).
3. Check rear brake piping: Refer to [BR-29, "REAR : Inspection"](#).
4. Check brake pedal: Refer to [BR-20, "Inspection and Adjustment"](#).
5. Check master cylinder: Refer to [BR-32, "Inspection"](#).
6. Check brake booster: Refer to [BR-34, "Inspection and Adjustment"](#).
7. Check brake booster pressure sensor: Refer to [BR-36, "Inspection"](#).
8. Check vacuum lines: Refer to [BR-37, "Inspection"](#).
9. Check front disc brake: Refer to [BR-48, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Inspection"](#) (1 piston type), [BR-52, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#) (2 piston type), [BR-56, "BRAKE CALIPER ASSEMBLY \(4 PISTON TYPE\) : Inspection"](#) (4 piston type).
10. Check rear disc brake: Refer to [BR-67, "BRAKE CALIPER ASSEMBLY \(FRONT CALIPER 1 PISTON TYPE\) : Inspection"](#) (front caliper 1 piston type), [BR-72, "BRAKE CALIPER ASSEMBLY \(FRONT CALIPER 2 PISTON TYPE\) : Inspection"](#) (front caliper 2 piston type), [BR-76, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#) (2 piston type).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace error-detected parts.

#### 3. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1142" detected?

## C1142 PRESS SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace ABS actuator and electric unit (control unit).  
NO >> Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005817765

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1143 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1143 STEERING ANGLE SENSOR

### Description

INFOID:000000005817679

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

### DTC Logic

INFOID:000000005817680

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1143	ST ANG SEN CIRCUIT	Steering angle sensor is malfunctioning.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Steering angle sensor</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1143" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-55. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817681

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect steering angle sensor connector.
4. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2. CHECK STEERING ANGLE SENSOR POWER SUPPLY

1. Check the voltage between steering angle sensor harness connector and ground.

Steering angle sensor		—	Condition	Voltage
Connector	Terminal			
M37	8	Ground	Ignition switch: OFF	Approx. 0 V

2. Turn the ignition switch ON.

**CAUTION:**

**Never start the engine.**

3. Check the voltage between steering angle sensor harness connector and ground.

Steering angle sensor		—	Condition	Voltage
Connector	Terminal			
M37	8	Ground	Ignition switch: ON	Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> GO TO 3.

#### 3. CHECK STEERING ANGLE SENSOR POWER SUPPLY CIRCUIT

# C1143 STEERING ANGLE SENSOR

[VDC/TCS/ABS]

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Check 10 A fusible link (45).
3. Disconnect IPDM E/R harness connector.
4. Check continuity between steering angle sensor harness connector and IPDM E/R harness connector.

Steering angle sensor		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M37	8	E5	25	Existed

### Is the inspection result normal?

YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-63, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).

NO >> Repair or replace error-detected parts.

## 4.CHECK STEERING ANGLE SENSOR GROUND

Check continuity between steering angle sensor harness connector and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M37	7	Ground	Existed

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

## 5.CHECK DATA LINE

Check "STRG BRANCH LINE CIRCUIT". Refer to [LAN-54, "Diagnosis Procedure"](#).

### Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005817682

## 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering angle sensor or the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

# C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

### DTC Logic

INFOID:000000005817699

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1144	ST ANG SEN SIGNAL	Neutral position of steering angle sensor is not finished.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Steering angle sensor</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Select "ABS", "WORK SUPPORT" and "ST ANGLE SENSOR ADJUSTMENT" in order with CONSULT-III, and perform adjust the neutral position of steering angle sensor.
3. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1144" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-57. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817700

#### 1. CHECK STEERING ANGLE SENSOR

Check steering angle sensor. Refer to [BRC-55. "Diagnosis Procedure"](#).

#### Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).  
NO >> Repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005817775

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering angle sensor or the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> END

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1145, C1146 YAW RATE/SIDE G SENSOR

### Description

INFOID:000000005817702

The yaw rate/side G sensor detects the yaw rate/side G affecting the vehicle, and transmits the data to the ABS actuator and electric unit (control unit) as an analog voltage signal.

### DTC Logic

INFOID:000000005817703

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1145	YAW RATE SENSOR	Yaw rate sensor is malfunctioning, or the yaw rate sensor signal line is open or shorted.	• Harness or connector • ABS actuator and electric unit (control unit) • Yaw rate/side G sensor
C1146	SIDE G-SEN CIRCUIT	Side G sensor is malfunctioning, or circuit of side G sensor is open or shorted.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1145" or "C1146" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-58. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817704

#### CAUTION:

- Sudden turns (such as spin turns, acceleration turns), drifting, etc., when VDC function is off (VDC OFF switch "ON") may cause yaw rate/side G sensor system to indicate a malfunction. However, this is not a malfunction, if normal operation can be resumed after restarting engine. Then erase memory of self-diagnosis.
- If vehicle is on turn-table at entrance to parking garage, or on other moving surface, VDC OFF indicator lamp may illuminate and CONSULT-III self-diagnosis may indicate yaw rate sensor system malfunction. However, in this case there is no malfunction in yaw rate sensor system. Take vehicle off of turn-table or other moving surface, and start the engine. Results will return to normal.

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Disconnect yaw rate/side G sensor connector.
4. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2. CHECK YAW RATE/SIDE G SENSOR POWER SUPPLY

1. Check the voltage between yaw rate/side G sensor harness connector and ground.

Yaw rate/side G sensor		—	Condition	Voltage
Connector	Terminal			
M143	4	Ground	Ignition switch: OFF	Approx. 0 V

2. Turn the ignition switch ON.

#### CAUTION:

**Never start the engine.**

3. Check the voltage between yaw rate/side G sensor harness connector and ground.

# C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Yaw rate/side G sensor		—	Condition	Voltage
Connector	Terminal			
M143	4	Ground	Ignition switch: ON	Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 3.

## 3. CHECK YAW RATE/SIDE G SENSOR POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check 10 A fusible link (45).
3. Disconnect IPDM E/R harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and IPDM E/R harness connector.

Yaw rate/side G sensor		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M143	4	E5	25	Existed

Is the inspection result normal?

- YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-63, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- NO >> Repair or replace error-detected parts.

## 4. CHECK YAW RATE/SIDE G SENSOR GROUND

Check the continuity between yaw rate/side G sensor harness connector and ground.

Yaw rate/side G sensor		—	Continuity
Connector	Terminal		
M143	1	Ground	Existed

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace error-detected parts.

## 5. CHECK YAW RATE/SIDE G SENSOR HARNESS

Check the continuity between yaw rate/side G sensor harness connector and ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)		Yaw rate/side G sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	25	M143	2	Existed
	45		3	

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace error-detected parts. Refer to [BRC-101, "Precautions for Harness Repair"](#).

## 6. REPLACE YAW RATE/SIDE G SENSOR

1. Replace yaw rate/side G sensor.
2. Erase self-diagnosis results for "ABS" with CONSULT-III.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.

**CAUTION:**

**Never start the engine.**

5. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1145" or "C1146" detected?

## C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

YES >> Replace ABS actuator and electric unit (control unit).  
NO >> INSPECTION END

### Special Repair Requirement

INFOID:000000005817766

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1147, C1148, C1149, C1150 USV/HSV LINE

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1147, C1148, C1149, C1150 USV/HSV LINE

### Description

INFOID:000000005817706

#### USV1, USV2 (CUT VALVE)

The cut valve shuts off the normal brake fluid path from the master cylinder, when VDC/TCS is activated.

#### HSV1, HSV2 (SUCTION VALVE)

The suction valve supplies the brake fluid from the master cylinder to the pump, when VDC/TCS is activated.

### DTC Logic

INFOID:000000005817707

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1147	USV LINE[FL-RR]	VDC switch-over solenoid valve (USV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit)</li> </ul>
C1148	USV LINE[FR-RL]	VDC switch-over solenoid valve (USV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	
C1149	HSV LINE[FL-RR]	VDC switch-over solenoid valve (HSV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	
C1150	HSV LINE[FR-RL]	VDC switch-over solenoid valve (HSV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1147", "C1148", "C1149" or "C1150" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-61, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817708

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace error-detected parts.

#### 2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Check the 30A fusible link (L).
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E41	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.

# C1147, C1148, C1149, C1150 USV/HSV LINE

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6. "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

## 3.CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005817767

## 1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1155 BRAKE FLUID LEVEL SWITCH

### Description

INFOID:000000005817710

The brake fluid level switch converts the brake fluid level to an electric signal and transmits it to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005817711

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1155	BR FLUID LEVEL LOW	Brake fluid level is low or communication line between the ABS actuator and electric unit (control unit) and brake fluid level switch is open or shorted.	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• Brake fluid level switch</li> <li>• Unified meter and A/C amp.</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1155" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-63. "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817712

#### 1. CHECK BRAKE FLUID LEVEL

Check the brake fluid level. Refer to [BR-11. "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Refill the brake fluid. Refer to [BR-11. "Refilling"](#).

#### 2. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch connector.
3. Disconnect unified meter and A/C amp. connector.
4. Check terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Repair or replace error-detected parts.

#### 3. CHECK BRAKE FLUID LEVEL SWITCH

Check brake fluid level switch. Refer to [BRC-64. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> Brake fluid level switch is malfunction. Replace reservoir tank.

#### 4. CHECK BRAKE FLUID LEVEL SWITCH CIRCUIT

1. Check the continuity between brake fluid level switch harness connector and unified meter and A/C amp. harness connector.

Unified meter and A/C amp.		Brake fluid level switch		Continuity
Connector	Terminal	Connector	Terminal	
M67	57	E47	1	Existed

2. Check the continuity between brake fluid level switch harness connector and ground.

# C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Brake fluid level switch		—	Continuity
Connector	Terminal		
E47	2	Ground	Existed

3. Check the continuity between unified meter and A/C amp. harness connector and ground.

Unified meter and A/C amp.		—	Continuity
Connector	Terminal		
M67	57	Ground	Not existed

Is the inspection result normal?

- YES >> Replace unified meter and A/C amp.
- NO >> Repair or replace error-detected parts.

## Component Inspection

INFOID:000000005817713

### 1. CHECK BRAKE FLUID LEVEL SWITCH

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch connector.
3. Check the continuity between brake fluid level switch connector terminals.

Brake fluid level switch	Condition	Continuity
Terminal		
1 – 2	When brake fluid is full in the reservoir tank.	Not existed
	When brake fluid is empty in the reservoir tank.	Existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace reservoir tank. Refer to [BR-30. "Exploded View"](#).

## Special Repair Requirement

INFOID:000000005817768

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# C1185 ICC UNIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1185 ICC UNIT

### Description

INFOID:000000005817715

The ABS actuator and electric unit (control unit) and the ICC sensor integrated unit exchange signals via the CAN communication line.

### DTC Logic

INFOID:000000005817716

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1185	ACC CONT	ICC sensor integrated unit internal malfunction.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ICC sensor integrated unit</li><li>• ABS actuator and electric unit (control unit)</li><li>• CAN communication line</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1185" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-65, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817717

#### 1. CHECK ICC SENSOR INTEGRATED UNIT CIRCUIT

Perform self-diagnosis for "ICC" with CONSULT-III.

#### Is any item indicated on the self-diagnosis display?

- YES >> Repair or replace error-detected parts.  
NO >> GO TO 2.

#### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1185" detected?

- YES >> Repair or replace error-detected parts.  
NO >> INSPECTION END

### Special Repair Requirement

INFOID:000000005817769

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## U1000 CAN COMM CIRCUIT

### Description

INFOID:000000005817719

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:000000005817720

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or more.	<ul style="list-style-type: none"><li>CAN communication line</li><li>ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "U1000" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-66. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005817721

#### 1. PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "U1000" detected?

- YES >> Proceed to diagnosis procedure. Refer to [LAN-18. "Trouble Diagnosis Flow Chart"](#).  
NO >> INSPECTION END

### Special Repair Requirement

INFOID:000000005817770

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

## U1002 SYSTEM COMM (CAN)

### Description

INFOID:000000005900367

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:000000005900364

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1002	SYSTEM COMM	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or less.	<ul style="list-style-type: none"> <li>CAN communication line</li> <li>ABS actuator and electric unit (control unit)</li> </ul>

A  
B  
C  
D  
E  
**BRC**

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

- Turn the ignition switch ON.
- Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "U1002" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-67, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005900365

#### **CAUTION:**

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.

#### 1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

- Select "ABS" and "CAN Diagnosis Support Monitor" in order with CONSULT-III.
- Check malfunction history between each control unit connected to ABS actuator and electric unit (control unit).

#### Check the result of "PAST"?

- All items are "OK">>INSPECTION END  
 "TRANSMIT DIAG" is other than "OK">>GO TO 2.  
 A control unit other than ABS actuator and electric unit (control unit) is anything other than "OK">>GO TO 3.

#### 2. CHECK TRANSMITTING SIDE UNIT

Check the ABS actuator and electric unit (control unit) harness connector terminals No. 14 and 35 for damage or loose connection.

#### Is the inspection result normal?

- YES >> Erase self-diagnosis results. Then perform self-diagnosis for "ABS" with CONSULT-III.  
 NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#).

#### 3. CHECK APPLICABLE CONTROL UNIT

Check terminals of each CAN communication line harness connector for damage or loose connection.

#### Is the inspection result normal?

- YES >> Erase self-diagnosis results. Then perform self-diagnosis for applicable control unit with CONSULT-III.

G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## U1002 SYSTEM COMM (CAN)

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Recheck terminals for damage or loose connection. Refer to [LAN-7, "Precautions for Harness Repair"](#).

### Special Repair Requirement

INFOID:000000005900368

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit). Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

>> END

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## POWER SUPPLY AND GROUND CIRCUIT

### Description

INFOID:000000005817723

Supplies power to ABS actuator and electric unit (control unit).

### Diagnosis Procedure

INFOID:000000005817724

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Condition	Voltage
Connector	Terminal			
E41	28	Ground	Ignition switch: OFF	Approx. 0 V

4. Turn the ignition switch ON.  
**CAUTION:**  
**Never start the engine.**
5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Condition	Voltage
Connector	Terminal			
E41	28	Ground	Ignition switch: ON	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check 10A fusible link (45).
3. Disconnect IPDM E/R harness connector.
4. Check continuity between ABS actuator and electric unit (control unit) harness connector and IPDM E/R harness connector.

ABS actuator and electric unit (control unit)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E41	28	E5	25	Existed

Is the inspection result normal?

- YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-63, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- NO >> Repair or replace error-detected parts.

#### 3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY

1. Turn the ignition switch OFF.
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E41	2	Ground	Battery voltage
	3		

Is the inspection result normal?

- YES >> GO TO 4.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# POWER SUPPLY AND GROUND CIRCUIT

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Perform the trouble diagnosis for battery power supply circuit. Refer to [PG-6. "Wiring Diagram - BATTERY POWER SUPPLY -"](#).

## 4. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace error-detected parts.

# PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## PARKING BRAKE SWITCH

### Description

INFOID:000000005656743

The parking brake switch converts the status of the parking brake lever (M/T models) or the parking brake pedal (A/T models) to an electric signal and transmits it to the ABS actuator and electric unit (control unit).

### Component Function Check

INFOID:000000005656744

#### 1.CHECK PARKING BRAKE SWITCH OPERATION

Operate the parking brake lever (M/T models) or the parking brake pedal (A/T models). Then check that the brake warning lamp in the combination meter turns on/off correctly.

Condition	Brake warning lamp illumination status
When the parking brake switch is operation	ON
When the parking brake switch is not operation.	OFF

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to diagnosis procedure. Refer to [BRC-71, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005656745

#### 1.CHECK PARKING BRAKE SWITCH

Check parking brake switch. Refer to [BRC-71, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace parking brake switch.

#### 2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-35, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace combination meter.

#### 3.CHECK DATA MONITOR

Select "ABS", "DATA MONITOR" and "PARK BRAKE SW" in order with CONSULT-III, and perform the parking brake switch inspection.

Condition	PARK BRAKE SW (DATA MONITOR)
Parking brake switch is active	On
Parking brake switch is inactive	Off

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check unified meter and A/C amp. Refer to [MWI-37, "CONSULT-III Function \(METER/M&A\)"](#).

### Component Inspection

INFOID:000000005656746

#### 1.CHECK PARKING BRAKE SWITCH

1. Turn ignition switch OFF.
2. Disconnect parking brake switch connector.
3. Check continuity between parking brake switch connector terminal.

# PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Parking brake switch Terminal	—	Condition	Continuity
1	Ground	When the parking brake switch is operated.	Existed
		When the parking brake switch is not operated.	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace parking brake switch.

# VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## VDC OFF SWITCH

### Description

INFOID:000000005656747

VDC OFF switch can deactivate (turn OFF) the VDC/TCS function by pressing the VDC OFF switch.

### Component Function Check

INFOID:000000005656748

#### 1.CHECK VDC OFF SWITCH OPERATION

Turn ON/OFF the VDC OFF switch and check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly.

Condition	VDC OFF indicator lamp illumination status
Press the VDC OFF switch when VDC OFF indicator OFF.	ON
Press the VDC OFF switch when VDC OFF indicator ON.	OFF

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-73. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005656749

#### 1.CHECK VDC OFF SWITCH

Check VDC OFF switch. Refer to [BRC-74. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> VDC OFF switch is malfunctioning. Replace VDC OFF switch.

#### 2.CHECK VDC OFF SWITCH HARNESS

1. Disconnect ABS actuator and electric unit (control unit) connector.
2. Disconnect VDC OFF switch connector.
3. Check continuity between VDC OFF switch connector and ABS actuator and electric unit (control unit) connector.

ABS actuator and electric unit (control unit)		VDC OFF switch		Continuity
Connector	Terminal	Connector	Terminal	
E41	31	M19	1	Existed

4. Check continuity between ABS actuator and electric unit (control unit) connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	31	Ground	Not existed

5. Check continuity between VDC OFF switch connector and ground.

VDC OFF switch		—	Continuity
Connector	Terminal		
M19	2	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

# VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## 3.CHECK COMBINATION METER

1. Connect ABS actuator and electric unit (control unit) connector.
2. Connect VDC OFF switch connector.
3. Check if the indication and operation of combination meter are normal. Refer to [MWI-35. "Diagnosis Description"](#).

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit).  
NO >> Repair or replace combination meter.

## Component Inspection

INFOID:000000005656750

## 1.CHECK VDC OFF SWITCH

1. Turn ignition switch OFF.
2. Disconnect VDC OFF switch connector.
3. Check continuity between VDC OFF switch connector terminals.

VDC OFF switch Terminal	Condition	Continuity
1 - 2	When VDC OFF switch is hold pressed.	Existed
	When releasing VDC OFF switch.	Not existed

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace VDC OFF switch.

# ABS WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## ABS WARNING LAMP

### Description

INFOID:000000005656751

×: ON –: OFF

Condition	ABS warning lamp
Ignition switch OFF	–
For 1 second after turning ON ignition switch	×
1 second later after turning ON ignition switch	–
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

### Component Function Check

INFOID:000000005656752

#### 1.CHECK ABS WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-75. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005656753

#### 1.CHECK SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check items displayed by self-diagnosis.

#### 2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-35. "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

## BRAKE WARNING LAMP

### Description

INFOID:000000005656754

×: ON –: OFF

Condition	Brake warning lamp (Note 1)
Ignition switch OFF	–
For 1 second after turning ignition switch ON	× (Note 2)
1 second later after turning ignition switch ON	× (Note 2)
EBD function is malfunctioning.	×

**NOTE:**

- 1: Brake warning lamp will turn on in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- 2: After starting engine, brake warning lamp is turned off.

### Component Function Check

INFOID:000000005656755

#### 1. BRAKE WARNING LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-76, "Diagnosis Procedure"](#).

#### 2. BRAKE WARNING LAMP OPERATION CHECK 2

Check that the brake warning lamp in the combination meter turns ON/OFF correctly when operating the parking brake lever (M/T models) or the parking brake pedal (A/T models).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check parking brake switch. Refer to [BRC-71, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005656756

#### 1. CHECK PARKING BRAKE SWITCH

Check that the brake warning lamp in the combination meter turns ON/OFF correctly when operating the parking brake lever (M/T models) or the parking brake pedal (A/T models).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check parking brake switch. Refer to [BRC-71, "Diagnosis Procedure"](#).

#### 2. CHECK SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check items displayed by self-diagnosis.

#### 3. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-35, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

# VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## VDC OFF INDICATOR LAMP

### Description

INFOID:000000005656757

x: ON –: OFF

Condition	VDC OFF indicator lamp
Ignition switch OFF	–
For 1 second after turning ignition switch ON	x
1 second later after turning ignition switch ON	–
VDC OFF switch turned ON. (VDC function is OFF.)	x
VDC/TCS function is malfunctioning.	x
ABS function is malfunctioning.	x
EBD function is malfunctioning.	x

### Component Function Check

INFOID:000000005656758

#### 1.VDC OFF INDICATOR LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-77, "Diagnosis Procedure"](#).

#### 2.VDC OFF INDICATOR LAMP OPERATION CHECK 2

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check VDC OFF switch. Refer to [BRC-73, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005656759

#### 1.CHECK VDC OFF SWITCH

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check VDC OFF switch. Refer to [BRC-73, "Diagnosis Procedure"](#).

#### 2.CHECK SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check items displayed by self-diagnosis.

#### 3.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-35, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

# SLIP INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## SLIP INDICATOR LAMP

### Description

INFOID:000000005656760

×: ON –: OFF

Condition	SLIP indicator lamp
Ignition switch OFF	–
For 1 second after turning ignition switch ON	×
1 second later after turning ignition switch ON	–
VDC/TCS function is malfunctioning.	×
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

### Component Function Check

INFOID:000000005656761

#### 1.CHECK SLIP INDICATOR LAMP OPERATION

Check that the lamp illuminates for approximately 1 second after the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-78. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005656762

#### 1.CHECK SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check items displayed by self-diagnosis.

#### 2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-35. "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit).

NO >> Repair or replace combination meter.

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## ECU DIAGNOSIS INFORMATION

### ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

#### Reference Value

INFOID:000000005656763

#### VALUES ON THE DIAGNOSIS TOOL

#### CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

#### CONSULT-III MONITOR ITEM

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
FR LH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speed meter display (± 10% or less)
FR RH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speed meter display (± 10% or less)
RR LH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speed meter display (± 10% or less)
RR RH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speed meter display (± 10% or less)
STOP LAMP SW	Stop lamp switch signal status	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
BATTERY VOLT	Battery voltage supplied to the ABS actuator and electric unit (control unit)	Ignition switch ON	10 – 16 V
GEAR	Gear position determined by TCM	First gear (1GR)	1
		Second gear (2GR)	2
		Third gear (3GR)	3
		Forth gear (4GR)	4
		Fifth gear (5GR)	5
SLCT LVR POSI	A/T selector lever position	P position	P
		R position	R
		N position	N
		D position	D
OFF SW	VDC OFF switch ON/OFF	VDC OFF switch ON (When VDC OFF indicator lamp is ON)	On
		VDC OFF switch OFF (When VDC OFF indicator lamp is OFF)	Off
YAW RATE SEN	Yaw rate detected by yaw rate/side G sensor	Vehicle stopped	Approx. 0 d/s
		Turning right	Negative value
		Turning left	Positive value
ACCEL POS SIG	Throttle actuator opening/closing is displayed (linked with accelerator pedal)	Accelerator pedal not depressed (ignition switch is ON)	0 %
		Depress accelerator pedal (ignition switch is ON)	0 - 100 %

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
SIDE G-SENSOR	Transverse G detected by side G sensor	Vehicle stopped	Approx. 0 m/s <sup>2</sup>
		Turning right	Negative value (m/s <sup>2</sup> )
		Turning left	Positive value (m/s <sup>2</sup> )
STR ANGLE SIG	Steering angle detected by steering angle sensor	Straight-ahead	±2.5°
		Turn 90° to right	Approx. +90°
		Turn 90° to left	Approx. -90°
4WD MODE MON (Note 2)	AWD activated	Engine running	AUTO
PRESS SENSOR	Brake fluid pressure detected by pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	-40 to 300 bar
ENGINE RPM	With engine running	With engine stopped	0 [tr/min (rpm)]
		Engine running	Almost in accordance with tachometer display
FLUID LEV SW	Brake fluid level switch signal status	When brake fluid level switch ON	On
		When brake fluid level switch OFF	Off
PARK BRAKE SW	Parking brake switch signal status	Parking brake switch is active	On
		Parking brake switch is inactive	Off
FR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
RR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
MOTOR RELAY	Motor and motor relay operation	When the motor relay and motor are operating	On
		When the motor relay and motor are not operating	Off
ACTUATOR RLY (Note 3)	Actuator relay operation	When the actuator relay is operating	On
		When the actuator relay is not operating	Off
ABS WARN LAMP	ABS warning lamp (Note 4)	When ABS warning lamp is ON	On
		When ABS warning lamp is OFF	Off
OFF LAMP	VDC OFF indicator lamp (Note 4)	When VDC OFF indicator lamp is ON	On
		When VDC OFF indicator lamp is OFF	Off
SLIP/VDC LAMP	SLIP indicator lamp (Note 4)	When SLIP indicator lamp is ON	On
		When SLIP indicator lamp is OFF	Off
BST OPER SIG	Not applied but displayed	—	Off
EBD SIGNAL	EBD operation	EBD is active	On
		EBD is inactive	Off
ABS SIGNAL	ABS operation	ABS is active	On
		ABS is inactive	Off
TCS SIGNAL	TCS operation	TCS is active	On
		TCS is inactive	Off
VDC SIGNAL	VDC operation	VDC is active	On
		VDC is inactive	Off
EBD FAIL SIG	EBD fail-safe signal	In EBD fail-safe	On
		EBD is normal	Off
ABS FAIL SIG	ABS fail-safe signal	In ABS fail-safe	On
		ABS is normal	Off
TCS FAIL SIG	TCS fail-safe signal	In TCS fail-safe	On
		TCS is normal	Off
VDC FAIL SIG	VDC fail-safe signal	In VDC fail-safe	On
		VDC is normal	Off
CRANKING SIG	Crank operation	Crank is active	On
		Crank is inactive	Off

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
USV [FL-RR] (Note 3)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
USV [FR-RL] (Note 3)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
HSV [FL-RR] (Note 3)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
HSV [FR-RL] (Note 3)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
V/R OUTPUT (Note 3)	Solenoid valve relay activated	When the solenoid valve relay is active (When ignition switch OFF)	On
		When the solenoid valve relay is not active (in the fail-safe mode)	Off
M/R OUTPUT	Actuator motor and motor relay activated	When the actuator motor and motor relay are active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator motor and motor relay are inactive	Off

**NOTE:**

- 1: Confirm tire pressure is normal.
- 2: Only AWD models.
- 3: A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.
- 4: On and off timing for warning lamp and indicator lamp.
  - ABS warning lamp: Refer to [BRC-75, "Description"](#).
  - Brake warning lamp: Refer to [BRC-76, "Description"](#).
  - VDC OFF indicator lamp: Refer to [BRC-77, "Description"](#).
  - SLIP indicator lamp: Refer to [BRC-78, "Description"](#).




# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

A : With A/T  
M : With M/T

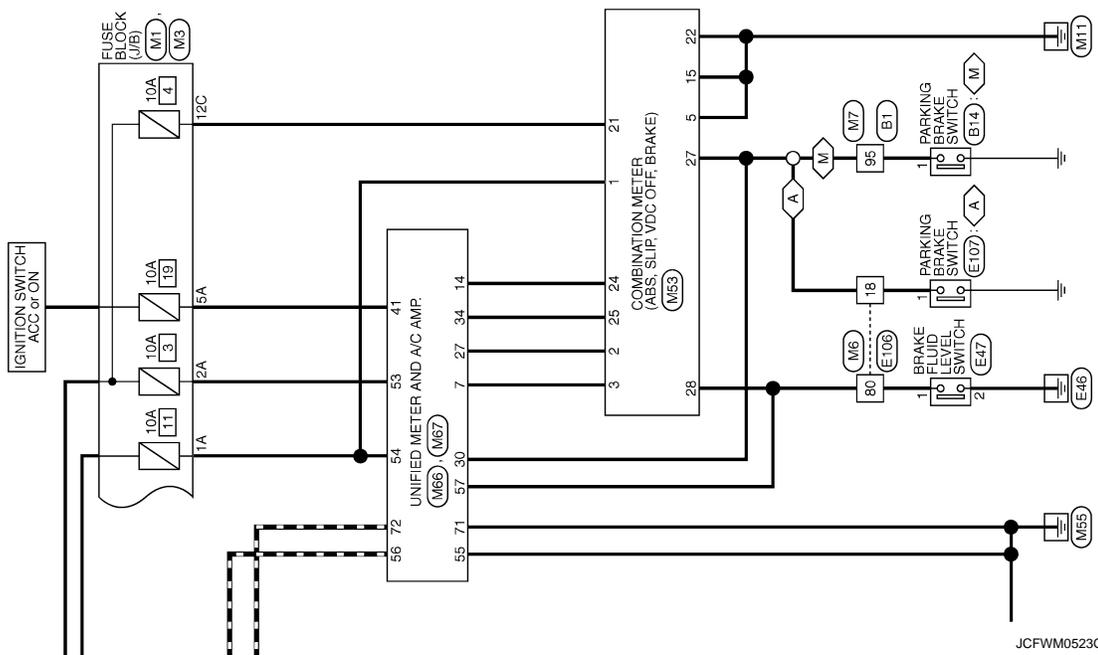


# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## BRAKE CONTROL SYSTEM


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	
2	G	
3	W	
3	Y	
6	SB	
7	G	
8	Y	
9	GR	
10	R	
14	V	
15	BR	
16	LG	
17	W	
20	L	
21	P	
22	L	
23	P	
31	L	
32	P	
33	LG	
34	Y	
35	Y	
36	SB	
37	SHIELD	
38	W	
40	BR	
41	Y	
42	SHIELD	
43	P	
44	L	
45	SHIELD	
46	R	
47	G	
48	SHIELD	
49	SB	
51	P	
52	G	
53	GR	


54	V	
55	LG	
56	GR	
57	SB	
58	G	
60	Y	
61	L	
62	BR	
63	W	
64	R	
65	L	
66	Y	
67	SHIELD	
71	V	
72	GR	
73	P	
74	L	
75	BR	
76	SB	
80	Y	
81	R	
82	B	
95	V	

Connector No.	B8
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FBR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4G	R	
5G	LG	
6G	G	
10G	W	
11G	W	
12G	Y	

Connector No.	B9
Connector Name	WIRE TO WIRE
Connector Type	IM06FW-LC




Terminal No.	Color of Wire	Signal Name [Specification]
2	R	
3	GR	
4	LG	
5	BR	
6	BG	

Connector No.	B14
Connector Name	PARKING BRAKE SWITCH
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	

Connector No.	B33
Connector Name	REAR WHEEL SENSOR RH
Connector Type	AAZ02FBI



Terminal No.	Color of Wire	Signal Name [Specification]


1	BR	
2	LG	

Connector No.	B34
Connector Name	REAR WHEEL SENSOR LH
Connector Type	AAZ02FBI



Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	
2	GR	

Connector No.	E5
Connector Name	SPDLE R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-IM-IV



Terminal No.	Color of Wire	Signal Name [Specification]
4	V	
5	L	
7	R	
11	BR	
12	B/W	
13	Y	
16	LG	
19	W	
25	G	
26	R	
27	BG	
28	L	
30	GR	
32	V	
33	B	
38	G	

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## BRAKE CONTROL SYSTEM

Connector No.	E27
Connector Name	FRONT WHEEL SENSOR RH
Connector Type	AAZ02FB1



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	W	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AHZA-LH



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	L	URBR
3	R	URVR
4	B	GND
5	Y	DS FL
6	BG	DP FL
7	BR	DP RR
8	B	DP FR
10	W	DS FR
11	V	DIAG-K
14	P	CAN-L
25	Y	BUS-L
26	LG	DP FL
27	GR	DS RL
28	G	UZ
29	P	DS RR
30	SB	BLS
31	R	ESP OFF SWITCH
35	L	CAN-H
45	B	BUS-H

Connector No.	E47
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Type	TY02FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	E60
Connector Name	FRONT WHEEL SENSOR LH
Connector Type	AAZ02FB1



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-


Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1F	SB	-
2F	V	-

4F	G	-
6F	BG	-
8F	L	-
9F	R	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
3	BG	-
5	G	-
6	BG	-
7	LG	-
10	W	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	V	-
18	BG	-
19	GR	-
20	LG	-
30	R	-
31	L	-
32	BG	-
33	P	-
34	V	-
35	BR	-
36	W	-
37	Y	-
38	R	-
39	B	-
40	G	-
41	W	-
42	LG	-
43	SB	-
44	GR	-
45	BG	-

46	LG	-
47	V	-
48	P	-
49	L	-
50	B	-
60	LG	-
67	SB	-
69	R	-
70	W	-
80	W	-
81	P	-
82	G	-
83	V	-
84	L	-
85	BG	-
86	LG	-
87	Y	-
88	GR	-
89	W	-
91	G	-
92	GR	-
93	Y	-
96	Y	-
97	BR	-
98	SHIELD	-
99	L	-
100	P	-

Connector No.	E107
Connector Name	PARKING BRAKE SWITCH
Connector Type	TB01FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	-

JCFWM0525G1

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## BRAKE CONTROL SYSTEM

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



1	2
3	4

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	V	-
3	L	-
4	SB	-

Connector No.	E117
Connector Name	WIRE TO WIRE
Connector Type	M03RW-LC



1	2	3
4	5	6

Terminal No.	Color of Wire	Signal Name [Specification]
2	L	-
3	GR	-
4	P	-
5	BR	-
6	BG	-

Connector No.	E119
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



1	2
3	4

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	V	-
3	Y	-
4	W	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS09FV-M2



3A	2A	1A
8A	7A	6A
4A	5A	4A

Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	LG	-
3A	L	-
4A	SB	-
5A	L	-
6A	BR	-
7A	R	-
8A	L	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FV-CS



5C	4C	3C	2C	1C
12C	11C	10C	9C	8C
7C	6C	5C	4C	3C
2C	1C	-	-	-

Terminal No.	Color of Wire	Signal Name [Specification]
6C	V	-
7C	B	-
8C	W	-
9C	BG	-
10C	L	-
11C	LG	-
12C	GR	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MV-CS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	-
3	R	-
5	G	-
6	L	-
7	W	-
10	W	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	BR	-
18	BG	-
19	L	-

20	L	-
30	R	-
31	SB	-
32	Y	-
33	BG	-
34	R	-
35	BR	-
36	SB	-
37	Y	-
38	LG	-
39	SB	-
40	P	-
41	W	-
42	LG	-
43	R	-
44	Y	- [With A/T]
44	P	- [With M/T]
45	BG	-
46	G	-
47	V	-
48	P	-
49	L	-
59	B	-
66	GR	-
67	P	-
68	L	-
69	W	-
70	BR	-
80	L	-
81	R	-
82	V	-
83	W	-
84	L	-
85	BG	-
86	W	-
87	G	-
88	B	-
89	SB	-
91	L	-
93	Y	-
95	Y	-
96	R	-
97	P	-
98	SHIELD	-
99	V	-
100	SB	-

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## BRAKE CONTROL SYSTEM

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-GS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	BG	-
2	LG	-
3	BG	-
5	Y	-
6	P	-
7	G	-
8	L	-
9	V	-
10	R	-
14	R	-
15	BR	-
16	P	-
17	V	-
20	L	-
21	P	-
22	L	-
23	P	-
31	L	-
32	P	-
33	LG	-
34	SB	-
35	V	-
36	LG	-
37	SHIELD	-
38	GR	-
40	BR	-
41	Y	-
42	SHIELD	-
43	O	-
44	W	-
45	SHIELD	-
46	R	-
47	G	-
48	SHIELD	-
49	SB	-
51	W	-
52	B	-
53	SB	-


54	V	-
55	Y	-
56	L	-
57	W	-
58	EG	-
60	L	-
61	G	-
62	B	-
63	G	-
64	R	-
65	W	-
66	Y	-
67	SHIELD	-
71	R	-
72	LG	-
73	SB	-
74	V	-
75	LG	-
76	P	-
80	P	-
81	W	-
82	BR	-
85	BG	-

Connector No.	M8
Connector Name	RESISTOR
Connector Type	M02PBR-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	B	-

Connector No.	M19
Connector Name	VDC OFF SWITCH
Connector Type	TK08FGY




Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	B	-
3	W	-
4	B	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16F1P-P



Terminal No.	Color of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	V	-
8	LG	-
11	SB	-
14	P	-
16	Y	-

Connector No.	M37
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-RH



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	CAN-H
2	P	CAN-L
7	B	GND
8	G	IGN

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >


[VDC/TCS/ABS]

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

## BRAKE CONTROL SYSTEM

Connector No.	M63
Connector Name	COMBINATION METER
Connector Type	SAB4FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BATTERY
2	LG	COMMUNICATION SIGNAL (METER->AMP)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	W	ALTERNATOR SIGNAL
7	LG	AIR BAG SECURITY
10	P	GROUND
15	B	METER CONTROL SWITCH GROUND
16	W	ILL GND
18	GR	ILL GND
19	B	ILL
20	R	ILL
21	GR	IGNITION POWER SUPPLY
22	B	GROUND
24	BR	COMMUNICATION SIGNAL (LCD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	G	VEHICLE SPEED (8-PULSE)
27	BG	PARKING BRAKE SWITCH
28	L	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
29	LG	SEAT BELT BUCKLE SW (DRIVER SIDE)
30	G	SEAT BELT
31	L	WASHER LEVEL SWITCH
33	R	ILLUMINATION CONTROL
36	LG	SELECT SWITCH
37	SB	ENTER SWITCH
38	L	TRIP A/B RESET SWITCH
39	P	ILLUMINATION CONTROL SWITCH (-)
40	BG	ILLUMINATION CONTROL SWITCH (+)

Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH42FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	SB	STOP LAMP SWITCH
5	L	SHIFT UP
6	BG	PADDLE UP
7	GR	COMMUNICATION SIGNAL (AMP->METER)
8	L	VEHICLE SPEED (2-PULSE)
9	SB	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
10	W	MANUAL MODE
11	G	NON-MANUAL MODE
14	BR	COMMUNICATION SIGNAL (LCD->AMP)
20	G	ION ON / OFF SIGNAL
23	L	AT SNOW SW
25	V	SHIFT DOWN
26	G	PADDLE DOWN
27	LG	COMMUNICATION SIGNAL (METER->AMP)
28	G	VEHICLE SPEED (8-PULSE)
30	BG	PARKING BRAKE SWITCH
34	Y	COMMUNICATION SIGNAL (AMP->LCD)
38	P	BLOWER MOTOR CONTROL SIGNAL

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH42FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
41	L	ACC POWER SUPPLY
42	BR	FUEL LEVEL SENSOR SIGNAL
43	V	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL

45	V	AMBIENT SENSOR SIGNAL
46	GR	SUNLOAD SENSOR SIGNAL
47	W	GAS SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	Y	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	LG	BRAKE FLUID LEVEL SWITCH
58	P	FUEL LEVEL SENSOR GROUND
59	Y	INTAKE SENSOR GROUND
60	W	IN-VEHICLE SENSOR GROUND
61	R	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	L	ION CONTROL MODE OUTPUT SIGNAL
65	BG	ECV SIGNAL
69	P	A/C LAMP SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	GR	GROUND
72	P	CAN-L

Connector No.	M143
Connector Name	YAW RATE / SIDE G SENSOR
Connector Type	AAZ04FB



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	Y	BUS-L
3	SB	BUS-H
4	G	12V

## Fail-Safe

### ABS, EBD SYSTEM

If ABS malfunction electrically, ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp will turn on. If EBD malfunction electrically, brake warning lamp, ABS warning lamp, VDC OFF indicator lamp and SLIP indicator lamp will turn on. Simultaneously, the VDC/TCS/ABS become one of the following conditions of the fail-safe function.

JCFWM0528Gf

INFOID:000000005656765

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

- For malfunction of ABS, only the EBD is activated and the condition of vehicle is the same condition of vehicles without TCS/ABS system.

**NOTE:**

ABS self-diagnosis sound may be heard. That is a normal condition because a self-diagnosis for "Ignition switch ON" and "The first starting" are being performed.

- For malfunction of EBD, EBD and ABS become inoperative, and the condition of vehicle is the same as the condition of vehicles without TCS/ABS, EBD system.

VDC / TCS

If VDC/TCS/ABS system malfunction electrically, VDC OFF indicator lamp, SLIP indicator lamp are turned on, and the condition of vehicle is the same as the condition of vehicles without VDC/TCS control.

**CAUTION:**

If the Fail-Safe function is activated, then perform self-diagnosis for "ABS" with CONSULT-III.

DTC No. Index

INFOID:000000005656766

DTC	Items (CONSULT screen terms)	Reference
C1101	RR RH SENSOR-1	<a href="#">BRC-31, "DTC Logic"</a>
C1102	RR LH SENSOR-1	
C1103	FR RH SENSOR-1	
C1104	FR LH SENSOR-1	
C1105	RR RH SENSOR-2	<a href="#">BRC-33, "DTC Logic"</a>
C1106	RR LH SENSOR-2	
C1107	FR RH SENSOR-2	
C1108	FR LH SENSOR-2	
C1109	BATTERY VOLTAGE [ABNORMAL]	<a href="#">BRC-36, "DTC Logic"</a>
C1110	CONTROLLER FAILURE	<a href="#">BRC-38, "DTC Logic"</a>
C1111	PUMP MOTOR	<a href="#">BRC-39, "DTC Logic"</a>
C1114	MAIN RELAY	<a href="#">BRC-41, "DTC Logic"</a>
C1115	ABS SENSOR [ABNORMAL SIGNAL]	<a href="#">BRC-43, "DTC Logic"</a>
C1116	STOP LAMP SW	<a href="#">BRC-45, "DTC Logic"</a>
C1120	FR LH IN ABS SOL	<a href="#">BRC-47, "DTC Logic"</a>
C1121	FR LH OUT ABS SOL	<a href="#">BRC-49, "DTC Logic"</a>
C1122	FR RH IN ABS SOL	<a href="#">BRC-47, "DTC Logic"</a>
C1123	FR RH OUT ABS SOL	<a href="#">BRC-49, "DTC Logic"</a>
C1124	RR LH IN ABS SOL	<a href="#">BRC-47, "DTC Logic"</a>
C1125	RR LH OUT ABS SOL	<a href="#">BRC-49, "DTC Logic"</a>
C1126	RR RH IN ABS SOL	<a href="#">BRC-47, "DTC Logic"</a>
C1127	RR RH OUT ABS SOL	<a href="#">BRC-49, "DTC Logic"</a>
C1130	ENGINE SIGNAL 1	<a href="#">BRC-51, "DTC Logic"</a>
C1131	ENGINE SIGNAL 2	
C1132	ENGINE SIGNAL 3	
C1138	4WAS CIRCUIT	<a href="#">BRC-52, "DTC Logic"</a>
C1142	PRESS SEN CIRCUIT	<a href="#">BRC-53, "DTC Logic"</a>
C1143	ST ANG SEN CIRCUIT	<a href="#">BRC-55, "DTC Logic"</a>
C1144	ST ANG SEN SIGNAL	<a href="#">BRC-57, "DTC Logic"</a>
C1145	YAW RATE SENSOR	<a href="#">BRC-58, "DTC Logic"</a>
C1146	SIDE G-SEN CIRCUIT	

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC	Items (CONSULT screen terms)	Reference
C1147	USV LINE [FL-RR]	<a href="#">BRC-61, "DTC Logic"</a>
C1148	USV LINE [FR-RL]	
C1149	HSV LINE [FL-RR]	
C1150	HSV LINE [FR-RL]	
C1153	EMERGENCY BRAKE	<a href="#">BRC-38, "DTC Logic"</a>
C1155	BR FLUID LEVEL LOW	<a href="#">BRC-63, "DTC Logic"</a>
C1170	VARIANT CORDING	<a href="#">BRC-38, "DTC Logic"</a>
C1185	ACC CONT	<a href="#">BRC-65, "DTC Logic"</a>
U1000	CAN COMM CIRCUIT	<a href="#">BRC-66, "DTC Logic"</a>
U1002	SYSTEM COMM	<a href="#">BRC-67, "DTC Logic"</a>

A  
B  
C  
D  
E  
  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## SYMPTOM DIAGNOSIS

### EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

#### Diagnosis Procedure

INFOID:000000005656767

#### 1. CHECK START

Check front and rear brake force distribution using a brake tester. Refer to [BR-77. "General Specifications"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check brake system.

#### 2. CHECK FRONT AND REAR AXLE

Make sure that there is no excessive play in the front and rear axles.

- Front
  - 2WD: refer to [FAX-6. "Inspection"](#).
  - AWD: refer to [FAX-15. "Inspection"](#).
- Rear: refer to [RAX-5. "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning components.

#### 3. CHECK WHEEL SENSOR AND SENSOR ROTOR

Check the following.

- Wheel sensor installation for damage.
- Sensor rotor installation for damage.
- Wheel sensor connector connection.
- Wheel sensor harness inspection.

Is the inspection result normal?

YES >> GO TO 4.

NO >> 

- Replace wheel sensor or sensor rotor.
- Repair harness.

#### 4. CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp is turned off after the ignition switch is turned ON or when driving.

Is the ABS warning lamp illuminated?

YES >> Perform self-diagnosis for "ABS" with CONSULT-III.

NO >> Normal

# UNEXPECTED PEDAL REACTION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## UNEXPECTED PEDAL REACTION

### Diagnosis Procedure

INFOID:000000005656768

#### 1.CHECK BRAKE PEDAL STROKE

Check brake pedal stroke. Refer to [BR-8, "Inspection and Adjustment"](#).

Is the stroke too large?

- YES >>
- Bleed air from brake tube and hose. Refer to [BR-12, "Bleeding Brake System"](#).
  - Check brake pedal, brake booster, and master cylinder for mount play, looseness, brake system fluid leakage, etc.
  - Brake pedal: Refer to [BR-8, "Inspection and Adjustment"](#).
  - Brake master cylinder: Refer to [BR-13, "Inspection"](#).
  - Brake booster: Refer to [BR-14, "Inspection"](#).
  - Brake fluid: Refer to [BR-11, "Inspection"](#).

NO >> GO TO 2.

#### 2.CHECK FUNCTION

Disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. Check if braking force is normal in this condition. Connect connector after inspection.

Is the inspection result normal?

- YES >> Normal  
NO >> Check brake system.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## THE BRAKING DISTANCE IS LONG

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

---

### THE BRAKING DISTANCE IS LONG

#### Diagnosis Procedure

INFOID:000000005656769

**CAUTION:**

The stopping distance on slippery road surfaces might be longer when the ABS is operating than when the ABS is not operating.

#### 1. CHECK FUNCTION

---

Turn ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector to deactivate ABS. In this condition, check stopping distance. After inspection, connect connector.

Is the inspection result normal?

YES >> Normal

NO >> Check brake system.

# ABS FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## ABS FUNCTION DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000005656770

**CAUTION:**

**ABS does not operate when speed is 10 km/h (6 MPH) or lower.**

**1. CHECK ABS WARNING LAMP DISPLAY**

Make sure that the ABS warning lamp turns OFF after ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Normal

NO >> Perform self-diagnosis for "ABS" with CONSULT-III.

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

# PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

### Diagnosis Procedure

INFOID:000000005656771

#### **CAUTION:**

Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed (just place a foot on it). However, this is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

#### 1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do vibrations occur?

- YES >> GO TO 2.
- NO >> Inspect the brake pedal.

#### 2. SYMPTOM CHECK 2

Check that there are ABS operation noises when the engine is started.

Do the operation noises occur?

- YES >> GO TO 3.
- NO >> Perform self-diagnosis for "ABS" with CONSULT-III.

#### 3. SYMPTOM CHECK 3

Check symptoms when electrical component (headlamps, etc.) switches are operated.

Do symptoms occur?

- YES >> Check if there is a radio, antenna, antenna lead wire, or wiring close to the control unit. If there is, move it farther away.
- NO >> Normal

# VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

### Diagnosis Procedure

INFOID:000000005656772

#### 1.SYMPTOM CHECK

Check if the vehicle jerks during VDC/TCS/ABS control.

Is the inspection result normal?

- YES >> Normal.
- NO >> GO TO 2.

#### 2.CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis for "ABS" with CONSULT-III.

Are self-diagnosis results indicated?

- YES >> Check corresponding items, make repairs, and perform self-diagnosis for "ABS" with CONSULT-III.
- NO >> GO TO 3.

#### 3.CHECK CONNECTOR

1. Turn ignition switch OFF and disconnect ABS actuator and electric unit (control unit) connector and check terminal for deformation, disconnection, looseness, etc.
2. Securely connect connectors and perform self-diagnosis for "ABS" with CONSULT-III.

Are self-diagnosis results indicated?

- YES >> If poor contact, damage, open or short circuit of connector terminal is found, repair or replace.
- NO >> GO TO 4.

#### 4.CHECK ECM AND A/T SELF-DIAGNOSIS RESULTS

Perform self-diagnosis for "ENGINE" and "TRANSMISSION" with CONSULT-III.

Are self-diagnosis results indicated?

- YES >> Check the corresponding items.
- NO >> Replace ABS actuator and electric unit (control unit).

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

# NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## NORMAL OPERATING CONDITION

### Description

INFOID:000000005656773

Symptom	Result
Slight vibrations are felt on the brake pedal and the operation noises occur, when VDC, TCS or ABS is activated.	This is a normal condition due to the VDC, TCS or ABS activation.
Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.	
The brake pedal moves and generates noises, when TCS or VDC is activated due to rapid acceleration or sharp turn.	
The brake pedal vibrates and motor operation noises occur from the engine room, after the engine starts and just after the vehicle starts.	This is a normal, and it is caused by the ABS operation check.
Depending on the road conditions, the driver may experience a sluggish feel.	This is normal, because TCS places the highest priority on the optimum traction (stability).
TCS may activate momentarily if wheel speed changes when driving over location where friction coefficient varies, when downshifting, or when fully depressing accelerator pedal.	
The ABS warning lamp, VDC OFF indicator lamp and SLIP indicator lamp may turn ON when the vehicle is subject to strong shaking or large vibration, such as when the vehicle is rotating on a turntable or located on a ship while the engine is running.	In this case, restart the engine on a normal road. If the normal condition is restored, there is no malfunction. At that time, erase the self-diagnosis memory.
VDC may not operate normally or the ABS warning lamp, VDC OFF indicator lamp, and SLIP indicator lamp may illuminate, when running on a special road that is extremely slanted (e.g. bank in a circuit course).	
A malfunction may occur in the yaw rate/side G sensor system, when the vehicle turns sharply, such as during a spin turn, axle turn, or drift driving, while the VDC function is off (VDC OFF indicator lamp illuminated).	
The vehicle speed will not increase even though the accelerator pedal is depressed, when inspecting the speedometer on a 2-wheel chassis dynamometer.	Normal (Deactivate the VDC/TCS function before performing an inspection on a chassis dynamometer.)
VDC OFF indicator lamp and SLIP indicator lamp may simultaneously turn on when low tire pressure warning lamp turns on.	This is not a VDC system error but results from characteristic change of tire.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005861668

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000005861669

**NOTE:**

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.
  - NOTE:**  
Supply power using jumper cables if battery is discharged.
2. Turn the push-button ignition switch to ACC position.  
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# PRECAUTIONS

[VDC/TCS/ABS]


## < PRECAUTION >

- When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
- Perform self-diagnosis check of all control units using CONSULT-III.

### Precaution for Procedure without Cowl Top Cover

INFOID:000000005861670

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

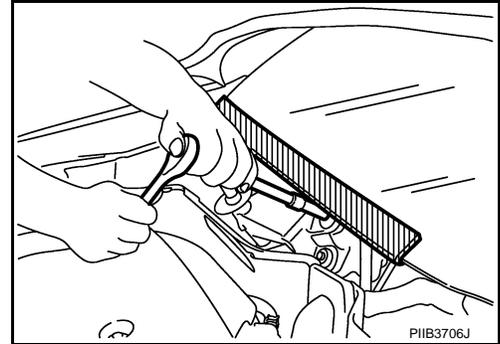


### Precaution for Brake System

INFOID:000000005656776

#### **WARNING:**

**Clean brake pads and shoes with a waste cloth, then wipe with a dust collector.**

- Brake fluid use refer to [MA-10, "Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Never use mineral oils such as gasoline or light oil. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with a crow-foot (A) and torque wrench (B).
- Always conform the specified tightening torque when installing the brake pipes.
- Brake system is an important safety part. If a brake fluid leak is detected, always disassemble the affected part. If a malfunction is detected, replace part with a new one.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) connector or the battery negative terminal before performing the work.

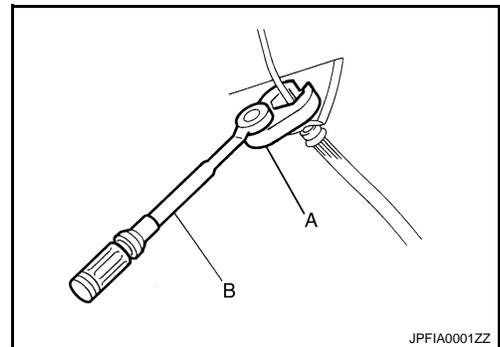

### Precaution for Brake Control

INFOID:000000005656777

- When starting engine or when starting vehicle just after starting engine, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is normal condition.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for estimate causes before starting diagnostic servicing. Besides electrical system inspection, check brake booster operation, brake fluid level, and oil leaks.
- If tire size and type are used in an improper combination, or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- ABS might be out of order or malfunctions by putting a radio (wiring inclusive), an antenna and a lead-in wire near the control unit.
- VDC system may not operate normally or a VDC OFF indicator lamp or SLIP indicator lamp may light.
- When replacing the following parts with parts other than genuine parts or making modifications: Suspension related parts (shock absorber, spring, bushing, etc.), tires, wheels (other than specified sizes), brake-related parts (pad, rotor, caliper, etc.), engine-related parts (muffler, ECM, etc.) and body reinforcement-related parts (roll bar, tower bar, etc.).
- When driving with worn or deteriorated suspension, tires and brake-related parts.

# PRECAUTIONS

< PRECAUTION >

[VDC/TCS/ABS]

## Precautions for Harness Repair


INFOID:000000005861672

### COMMUNICATION LINE

- Solder the repaired area and wrap tape around the soldered area.

**NOTE:**

A fray of twisted lines must be within 110 mm (4.33 in).

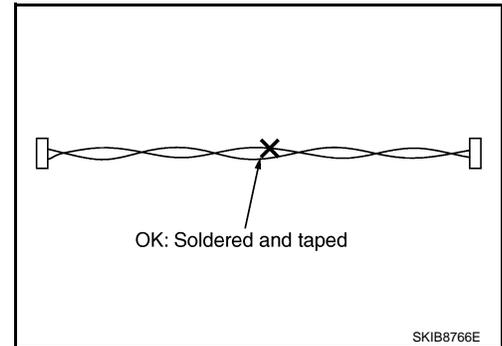


- Bypass connection is never allowed at the repaired area.

**NOTE:**

Bypass connection may cause communication error as spliced wires that are separate from the main line or twisted lines lose noise immunity.

- Replace the applicable harness as an assembly if error is detected on the shield lines of communication line.

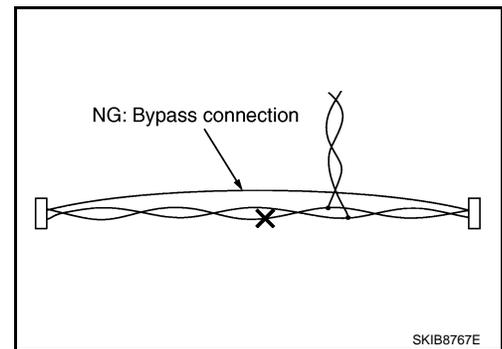

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# PREPARATION

< PREPARATION >

[VDC/TCS/ABS]




## PREPARATION

### PREPARATION

#### Special Service Tool


INFOID:000000005656778

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name		Description
ST30720000 (J-25405) Drift a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia.	 <p style="text-align: right; font-size: small;">ZZA0701D</p>	Installing rear sensor rotor
ST27863000 ( — ) Drift a: 74.5 mm (2.933 in) dia. b: 62.5 mm (2.461 in) dia.	 <p style="text-align: right; font-size: small;">ZZA0832D</p>	
KV40104710 ( — ) a: 76.3 mm (3.004 in) dia. b: 67.9 mm (2.673 in) dia.	 <p style="text-align: right; font-size: small;">ZZA0832D</p>	

#### Commercial Service Tool

INFOID:000000005656779

Tool name		Description
1. Flare nut crowfoot a: 10 mm (0.39 in) / 12 mm (0.47 in) 2. Torque wrench	 <p style="text-align: right; font-size: small;">S-NT360</p>	Installing brake tube

# WHEEL SENSOR

< REMOVAL AND INSTALLATION >


[VDC/TCS/ABS]

## REMOVAL AND INSTALLATION

### WHEEL SENSOR

#### Exploded View

INFOID:0000000005656780

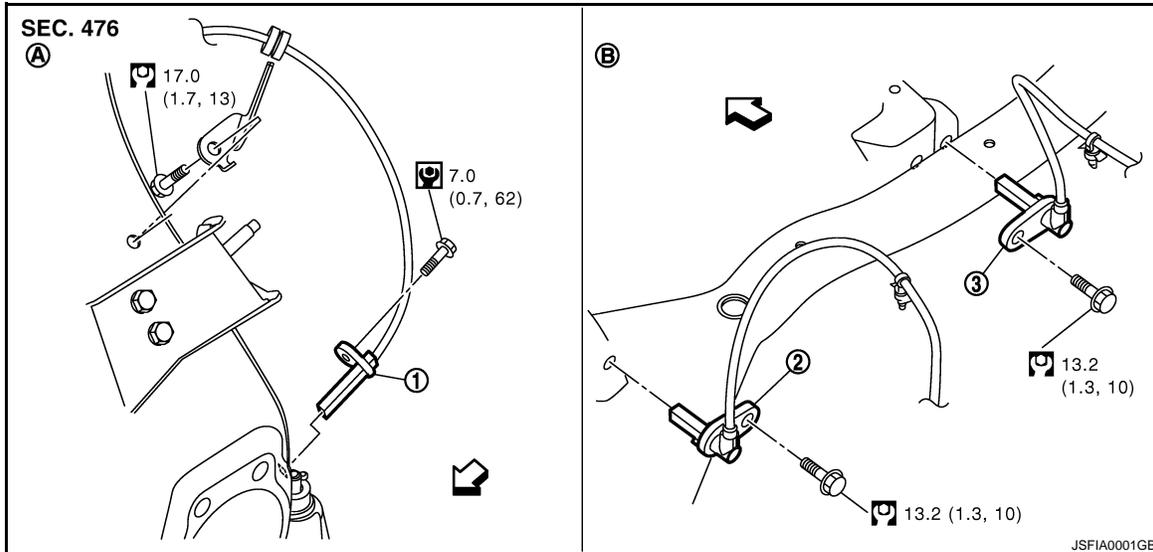

1. Front LH wheel sensor      2. Rear LH wheel sensor      3. Rear RH wheel sensor

- A. Front      B. Rear

↔: Vehicle front

Refer to [GI-4, "Components"](#) for symbol marks in the figure.

#### NOTE:

The above figure (front side) shows left side. Right side is the mirror image.

### Removal and Installation

INFOID:0000000005656781

#### REMOVAL

Pay attention to the following when removing sensor.

#### CAUTION:

- Do not twist sensor harness as much as possible, when removing it. Pull sensors out without pulling sensor harness.
- Take care to avoid damaging sensor edges or rotor teeth. Remove wheel sensor first before removing front or rear wheel hub. This is to avoid damage to sensor wiring and loss of sensor function.

#### INSTALLATION

Pay attention to the following when installing wheel sensor. Tighten installation bolts to the specified torques.

- When installing, make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor. Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount.
- When installing wheel sensor, be sure to press rubber grommets in until they lock at locations shown above in the figure. When installed, harness must not be twisted.

# SENSOR ROTOR

[VDC/TCS/ABS]

< REMOVAL AND INSTALLATION >

## SENSOR ROTOR

### FRONT SENSOR ROTOR

#### FRONT SENSOR ROTOR : Exploded View

INFOID:000000005656782

Refer to [FAX-7, "Exploded View"](#) (2WD models), [FAX-17, "Exploded View"](#) (AWD models).

#### FRONT SENSOR ROTOR : Removal and Installation

INFOID:000000005656783

#### REMOVAL

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [FAX-7, "Exploded View"](#) (2WD models), [FAX-17, "Exploded View"](#) (AWD models).


#### INSTALLATION

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [FAX-7, "Exploded View"](#) (2WD models), [FAX-17, "Exploded View"](#) (AWD models).

## REAR SENSOR ROTOR

#### REAR SENSOR ROTOR : Exploded View

INFOID:000000005656784

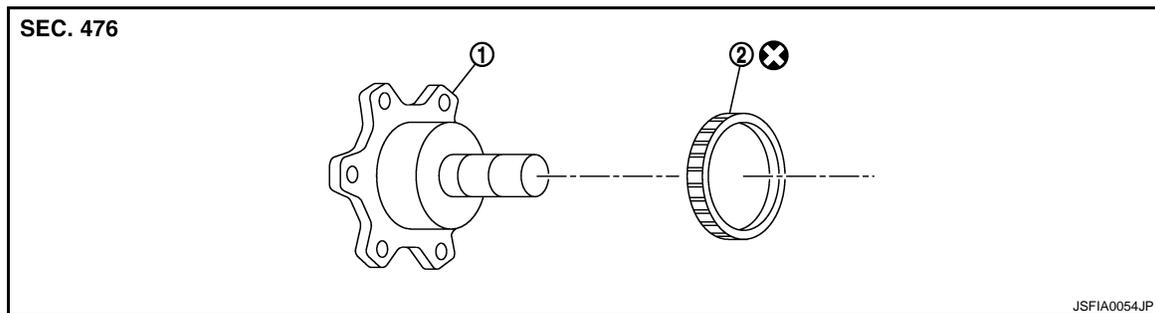

1. Side flange
2. Rear wheel sensor rotor

Refer to [GI-4, "Components"](#) for symbol marks in the figure.

#### REAR SENSOR ROTOR : Removal and Installation

INFOID:000000005656785

#### REMOVAL

- Follow the procedure below to remove rear sensor rotor.
- Remove side flange. Refer to [DLN-179, "2WD : Exploded View"](#) (R200: 2WD models), [DLN-192, "AWD : Exploded View"](#) (R200: AWD models), [DLN-252, "M/T : Exploded View"](#) (R200V: M/T models), [DLN-264, "A/T : Exploded View"](#) (R200V: A/T models).
- Using a bearing replacer (suitable tool) and puller (suitable tool), remove sensor rotor from side flange.

#### INSTALLATION

#### CAUTION:

**Do not reuse sensor rotor.**


- Follow the procedure below to install rear sensor rotor.
- Using a drifts, press rear sensor rotor onto side flange.

**A: Drift [SST: ST30720000 (J-25405)]**

**B: Drift [SST: ST27863000 ( — )]**

**C: Drift [SST: KV40104710 ( — )]**

- Install side flange. Refer to [DLN-179, "2WD : Exploded View"](#) (R200: 2WD models), [DLN-192, "AWD : Exploded View"](#) (R200: AWD models), [DLN-252, "M/T : Exploded View"](#) (R200V: M/T models), [DLN-264, "A/T : Exploded View"](#) (R200V: A/T models).

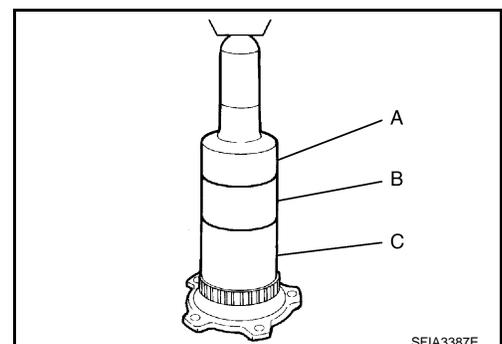

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

## ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Exploded View

INFOID:000000005656786

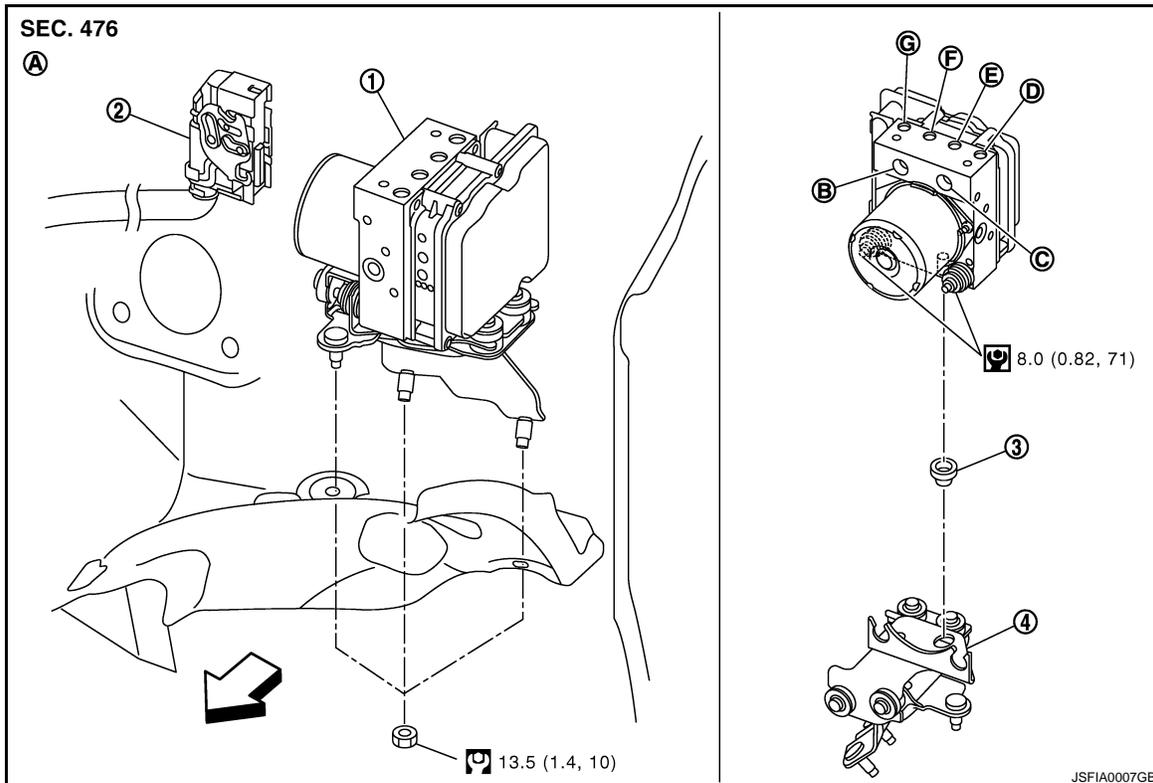

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

- |  |  |                                      |
|--|--|--------------------------------------|
| 1. ABS actuator and electric unit (control unit) | 2. Connector                           | 3. Bushing                           |
| 4. Bracket                                       |  |                                      |
| A. Left side of dash panel                       | B. From master cylinder secondary side | C. From master cylinder primary side |
| D. To front LH brake caliper                     | E. To rear RH brake caliper            | F. To Rear LH brake caliper          |
| G. To front RH brake caliper                     |  |                                      |

← Vehicle front

Refer to [GI-4, "Components"](#) for symbol marks in the figure.

## Removal and Installation

INFOID:000000005656787

### REMOVAL

#### CAUTION:

- Before servicing, disconnect the battery cable from negative terminal.
- To remove brake tube, use a flare nut wrench to prevent flare nuts and brake tube from being damaged. To install, use flare nut crowfoot and torque wrench.
- Do not apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Do not remove and install actuator by holding harness.
- After work is completed, bleed air from brake tube. Refer to [BR-12, "Bleeding Brake System"](#).

1. Remove cowl top cover. Refer to [EXT-22, "Exploded View"](#).
2. Disconnect ABS actuator and electric unit (control unit) connector.
3. Loosen brake tube flare nuts, then remove brake tubes from ABS actuator and electric unit (control unit).
4. Remove tire (front LH side).
5. Remove fender protector (rear): (front LH side). Refer to [EXT-25, "FENDER PROTECTOR : Exploded View"](#).
6. Remove ABS actuator and electric unit (control unit) bracket mounting nut.

## ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

7. Remove ABS actuator and electric unit (control unit) from vehicle.

### INSTALLATION

Note the following, and install in the reverse order of removal.

#### **CAUTION:**

- Before servicing, disconnect the battery cable from negative terminal.
- To remove brake tube, use a flare nut wrench to prevent flare nuts and brake tube from being damaged. To install, use flare nut crowfoot and torque wrench.
- Do not apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Do not remove and install actuator by holding harness.
- After work is completed, bleed air from brake tube. Refer to [BR-12. "Bleeding Brake System"](#).
- After installing harness connector in the ABS actuator and electric unit (control unit), make sure connector is securely locked.
- When replacing ABS actuator and electric unit (control unit), make sure to adjust neutral position of steering angle sensor. Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

# YAW RATE/SIDE G SENSOR


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

## YAW RATE/SIDE G SENSOR

### Exploded View

INFOID:000000005656788

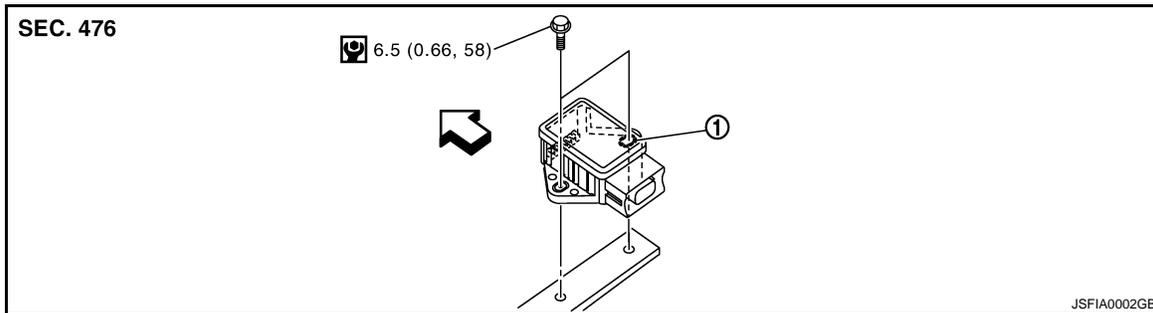

1. Yaw rate/side G sensor

↔: Vehicle front

Refer to [GI-4. "Components"](#) for symbol makes in the figure.

### Removal and Installation

INFOID:000000005656789

#### REMOVAL

##### CAUTION:

- Do not drop or strike yaw rate/side G sensor, or do not use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

1. Remove center console. Refer to [IP-33. "A/T MODELS : Exploded View"](#) (A/T models), [IP-38. "M/T MODELS : Exploded View"](#) (M/T models).
2. Disconnect yaw rate/side G sensor harness connector.
3. Remove mounting bolts. Remove yaw rate/side G sensor.

#### INSTALLATION

Note the following, and install in the reverse order of removal.

##### CAUTION:

- Do not drop or strike yaw rate/side G sensor, or do not use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STEERING ANGLE SENSOR


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

## STEERING ANGLE SENSOR

Exploded View

INFOID:000000005656790

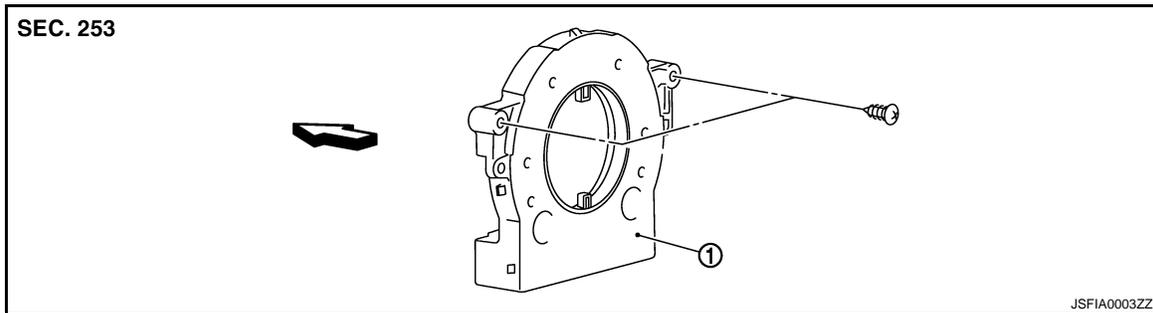

1. Steering angle sensor

↩: Vehicle front

## Removal and Installation

INFOID:000000005656791

### REMOVAL

1. Remove spiral cable assembly. Refer to [SR-14. "Exploded View"](#).
2. Remove steering angle sensor from spiral cable assembly.

### INSTALLATION

Note the following, and install in the reverse order of removal.

#### **CAUTION:**

- After work, make sure to adjust neutral position of steering angle sensor. Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).
- Perform 4WAS front actuator adjustment. Refer to [STC-29. "4WAS FRONT ACTUATOR NEUTRAL POSITION ADJUSTMENT : Description"](#).

SYSTEM DESCRIPTION

PREVIEW FUNCTION

System Description

INFOID:000000005656792

FUNCTION DESCRIPTION

When the Preview Function identifies the need to apply emergency braking by sensing a vehicle ahead in the same lane and the distance and relative speed from it, it applies the brake pre-pressure before the driver depress the brake pedal and helps improve brake response by reducing pedal free play.

The Preview Function shares component parts and diagnosis with the ICC (Intelligent Cruise Control) system.

**CAUTION:**

**This system is only an aid to assist braking operation and is not a collision warning or avoidance device. It is the driver’s responsibility to stay alert, drive safely and be in control of the vehicle at all times.**

OPERATION DESCRIPTION

Operation

- The system detects the distance to the vehicle in front with the ICC sensor integrated unit of ICC and judges the necessity of emergency braking.
- The system detects the accelerator pedal release operation of the driver by the accelerator pedal position sensor and estimates the driver's brake operation intention.
- If the system is judged that the emergency braking is necessary or that the driver has the intention to operate the brake it supplies the power supply to the brake booster to apply pre-pressure and adjusts the brake play.

**NOTE:**

This system will not operate when the vehicle is moving at approximately 32 km/h (20 MPH) or less.

End of Operation

The pre-pressure function ceases when the following conditions are met:

1. When the driver depresses the accelerator pedal or the brake pedal.
2. If the driver does not operate the accelerator pedal or brake pedal within approximately 1 second.

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**


# PREVIEW FUNCTION

[BRAKE ASSIST]

< SYSTEM DESCRIPTION >

## Component Parts Location

INFOID:000000005656793

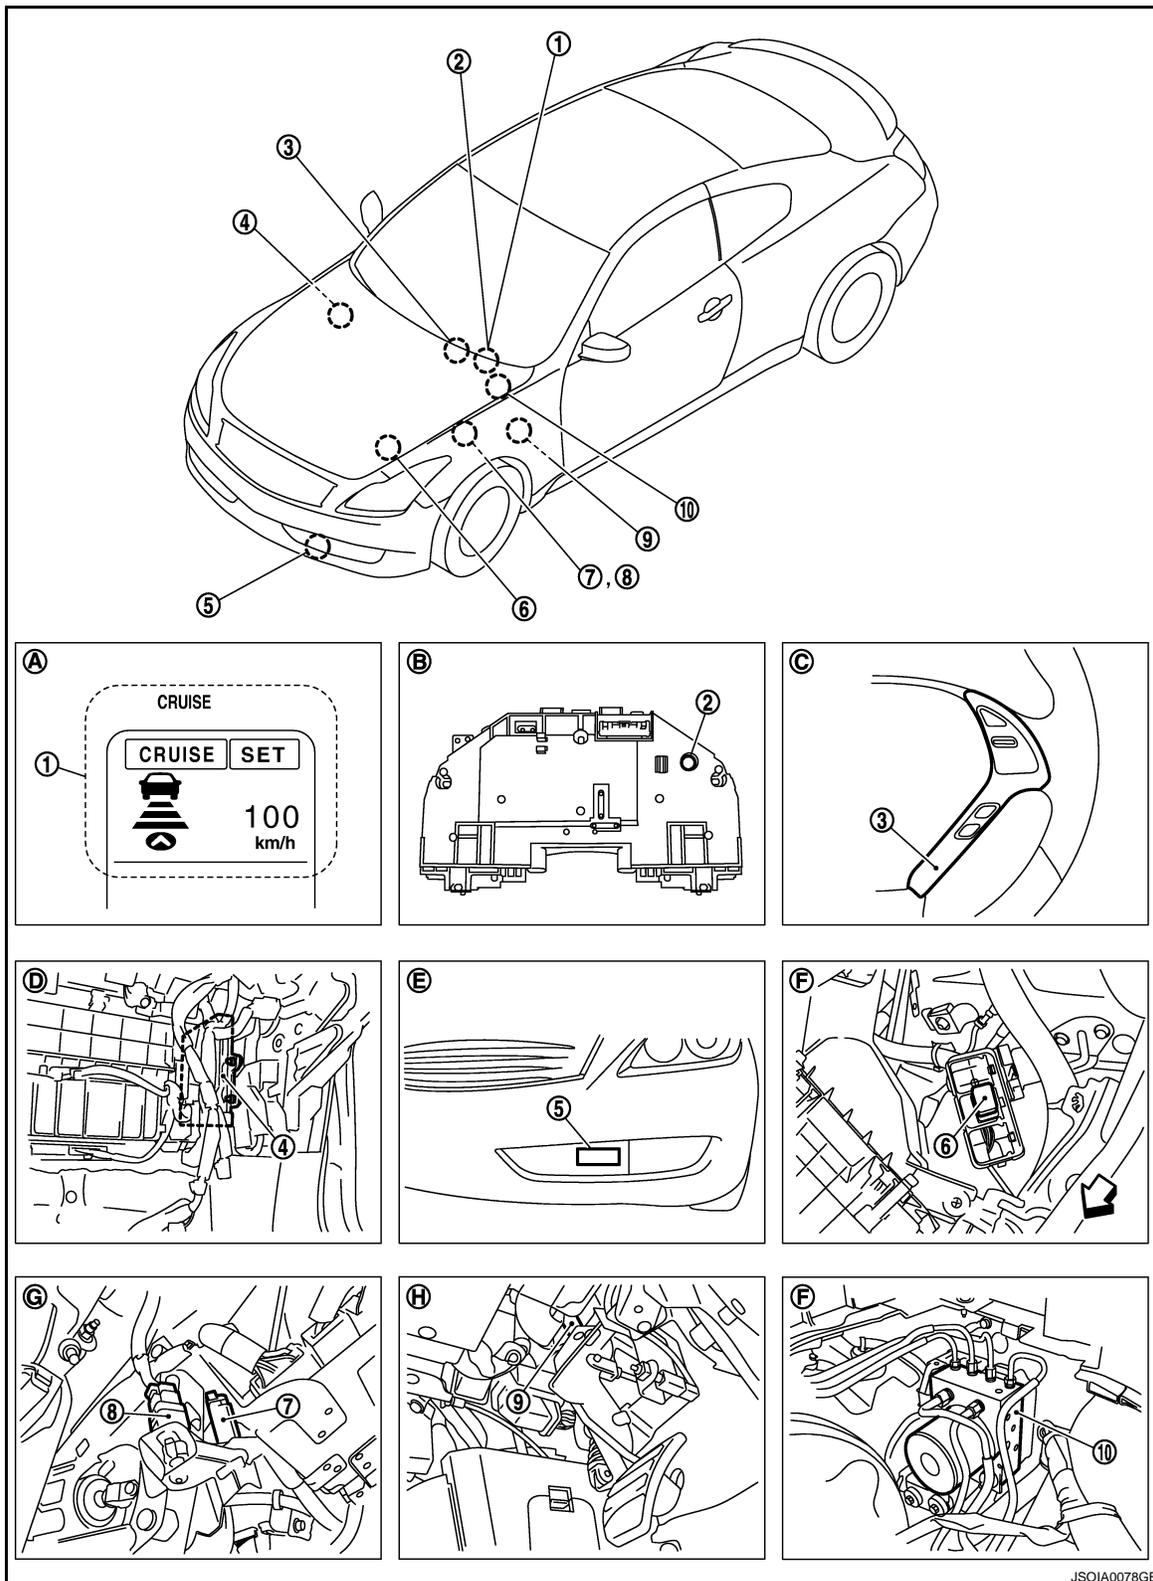

JSOIA0078GB

- |   |                               |                         |
|---|-------------------------------|-------------------------|
| 1. ICC system display                             | 2. Buzzer                     | 3. ICC steering switch  |
| 4. ECM  | 5. ICC sensor integrated unit | 6. ICC brake hold relay |
| 7. ICC brake switch                               | 8. Stop lamp switch           | 9. ICC clutch switch    |
| 10. ABS actuator and electric unit (control unit) |                               |                         |

# PREVIEW FUNCTION

< SYSTEM DESCRIPTION >

[BRAKE ASSIST]

- |   |                              |                      |
|---|------------------------------|----------------------|
| A. In combination meter                     | B. Back of combination meter | C. Steering wheel RH |
| D. Instrument passenger lower cover removed | E. Front bumper LH           | F. Engine room LH    |
| G. Brake pedal                              | H. Clutch pedal              |                      |
- ↶ : Vehicle front

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## Component Description

INFOID:000000005656794

×: Applicable

Component	Function Description			Description
	*1	*2	*3	
ICC sensor integrated unit	×	×	×	Refer to <a href="#">CCS-43, "Description"</a> .
ECM	×	×	×	Refer to <a href="#">CCS-70, "Description"</a> .
ABS actuator and electric unit (control unit)	×	×	×	Refer to <a href="#">CCS-50, "Description"</a> .
BCM	×			Transmits the front wiper request signal to ICC sensor integrated unit via CAN communication.
Unified meter and A/C amp.	×	×	×	Receives the meter display signal, buzzer output signal, and ICC warning lamp signal from ICC sensor integrated unit via CAN communication and transmits them to the combination meter via the communication line.
Combination meter	×	×	×	Performs the following operations using the signals received from the unified meter and A/C amp. via the communication line. <ul style="list-style-type: none"> <li>Displays the ICC system operation status using the meter display signal.</li> <li>Illuminates the ICC system warning lamp using the ICC warning lamp signal.</li> <li>Operates the buzzer (ICC warning chime) using the buzzer output signal.</li> </ul>
ICC brake switch	×	×	×	Refer to <a href="#">CCS-52, "Description"</a> .
Stop lamp switch	×	×	×	
ICC brake hold relay	×		×	Refer to <a href="#">CCS-64, "Description"</a> .
Transmission range switch	×	×		Refer to <a href="#">CCS-103, "Description"</a> .
ICC clutch switch	×	×		Refer to <a href="#">CCS-52, "Description"</a> .

**BRC**

\*1: Vehicle-to-vehicle distance control mode

\*2: Conventional (fixed speed) cruise control mode

\*3: Brake Assist (With Preview Function)

---

## DTC/CIRCUIT DIAGNOSIS

### PREVIEW FUNCTION

#### Diagnosis Procedure

INFOID:000000005656795

#### 1. PREVIEW FUNCTION DIAGNOSIS

---

When the preview function is not operating properly, the buzzer sounds and the preview function warning lamp will come on.

**NOTE:**

The preview function warning lamp shares the ICC system warning lamp.

>> Go to ICC. Refer to [CCS-4, "Work Flow"](#).

# SYMPTOM DIAGNOSIS

## NORMAL OPERATING CONDITION

### Description


INFOID:000000005656796

### PRECAUTIONS FOR PREVIEW FUNCTION

- This system is only an aid to assist braking operation and is not a collision warning or avoidance device. It is the driver's responsibility to stay alert, drive safely and be in control of the vehicle at all times.
- As there is a performance limit to the Preview Function, never rely solely on this system. This system does not correct careless inattentive or absent-minded driving, or overcome poor visibility in rain, fog, or other bad weather. Reduce vehicle speed by depressing the brake, in order to maintain a safe distance between vehicles.
- The system may not detect a vehicle ahead, depending on road or weather conditions. While the vehicle still travels and the Brake Assist System operates under normal conditions, the Preview Function may operate improperly under the following conditions:
  - When rain, snow or dirt adhere to the system sensor
  - When strong light (for example, at sunrise or sunset) is directly shining on the front of the vehicle
  - Winding or hilly roads may cause the sensor to temporarily not detect a vehicle in the same lane or may detect objects or vehicles in other lanes.
  - Vehicle position in the lane may cause the sensor to temporarily not detect a vehicle in the same lane or may detect objects or vehicles in other lanes.
- The system will not detect:
  - Pedestrians or objects in the roadway
  - Oncoming vehicles in the same lane
  - Motorcycles traveling offset in the travel lane as illustrated
- When the Preview Function operates, the brake pedal may move slightly and may make a small noise. This is not a system malfunction.

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

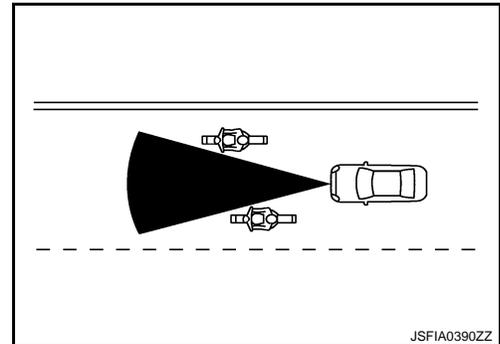

## PRECAUTION

### PRECAUTIONS

#### Precautions for Preview Function Service

*INFOID:000000005656797*

**CAUTION:**

- **Never look straight into the laser beam discharger when adjusting laser beam aiming.**
- **Never use the ICC sensor integrated unit removed from vehicle. Never disassemble or remodel.**