

A
B
C

SECTION **WW**

WIPER & WASHER

CONTENTS

BASIC INSPECTION	3	Diagnosis Procedure	24	F
DIAGNOSIS AND REPAIR WORK FLOW	3	FRONT WIPER MOTOR GROUND CIRCUIT ...	26	
Work Flow	3	Diagnosis Procedure	26	G
SYSTEM DESCRIPTION	6	WASHER SWITCH	27	
FRONT WIPER AND WASHER SYSTEM	6	Description	27	
System Diagram	6	Component Inspection	27	H
System Description	6	FRONT WIPER AND WASHER SYSTEM	28	
Component Parts Location	9	Wiring Diagram - FRONT WIPER AND WASHER		
Component Description	9	SYSTEM -	28	I
DIAGNOSIS SYSTEM (BCM)	11	ECU DIAGNOSIS INFORMATION	32	
COMMON ITEM	11	BCM (BODY CONTROL MODULE)	32	J
COMMON ITEM : CONSULT Function (BCM -		Reference Value	32	
COMMON ITEM)	11	Wiring Diagram - BCM -	55	
WIPER	12	Fail-safe	67	K
WIPER : CONSULT Function (BCM - WIPER)	12	DTC Inspection Priority Chart	69	
DIAGNOSIS SYSTEM (IPDM E/R)	14	DTC Index	70	
Diagnosis Description	14	IPDM E/R (INTELLIGENT POWER DISTRI-		
CONSULT Function (IPDM E/R)	16	BUTION MODULE ENGINE ROOM)	72	
DTC/CIRCUIT DIAGNOSIS	19	Reference Value	72	M
WIPER AND WASHER FUSE	19	Wiring Diagram - IPDM E/R -	79	
Description	19	Fail-safe	82	
Diagnosis Procedure	19	DTC Index	84	N
FRONT WIPER MOTOR LO CIRCUIT	20	SYMPTOM DIAGNOSIS	85	
Component Function Check	20	WIPER AND WASHER SYSTEM SYMPTOMS		O
Diagnosis Procedure	20	Symptom Table	85	
FRONT WIPER MOTOR HI CIRCUIT	22	NORMAL OPERATING CONDITION	87	P
Component Function Check	22	Description	87	
Diagnosis Procedure	22	FRONT WIPER DOES NOT OPERATE	88	
FRONT WIPER STOP POSITION SIGNAL		Description	88	
CIRCUIT	24	Diagnosis Procedure	88	
Component Function Check	24	PRECAUTION	90	

A
B
C
D
E
F
G
H
I
J
K
WW
M
N
O
P

PRECAUTIONS	90	Hydraulic Layout	95
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	90	Removal and Installation	95
Precaution for Procedure without Cowl Top Cover... ..	90	Inspection and Adjustment	95
Precaution for Battery Service	90	FRONT WIPER ARM	98
Precautions for Removing Battery Terminal	91	Exploded View	98
REMOVAL AND INSTALLATION	92	Removal and Installation	98
WASHER TANK	92	Adjustment	99
Exploded View	92	WIPER BLADE	100
Removal and Installation	92	Exploded View	100
WASHER PUMP	93	Removal and Installation	100
Exploded View	93	Replacement	100
Removal and Installation	93	FRONT WIPER DRIVE ASSEMBLY	102
WASHER LEVEL SWITCH	94	Exploded View	102
Removal and Installation	94	Removal and Installation	102
FRONT WASHER NOZZLE AND TUBE	95	Disassembly and Assembly	103
		WIPER AND WASHER SWITCH	104
		Exploded View	104

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000011487306

OVERALL SEQUENCE

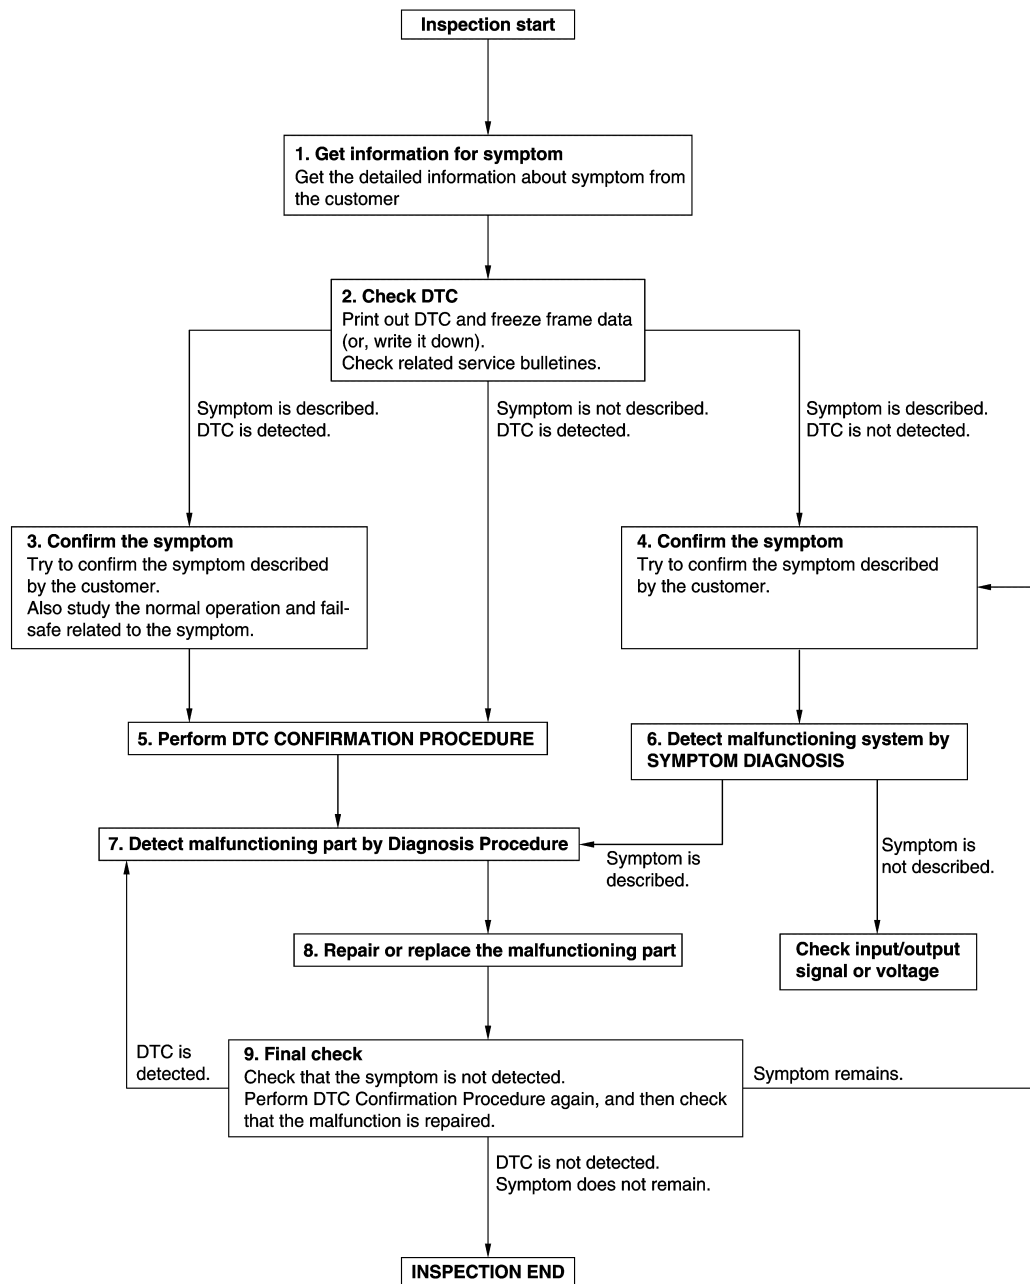

DETAILED FLOW

JMKIA8652GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

1. GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to DTC INSPECTION PRIORITY CHART, and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-39. "Intermittent Incident"](#).

6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-39. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW


FRONT WIPER AND WASHER SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

FRONT WIPER AND WASHER SYSTEM

System Diagram

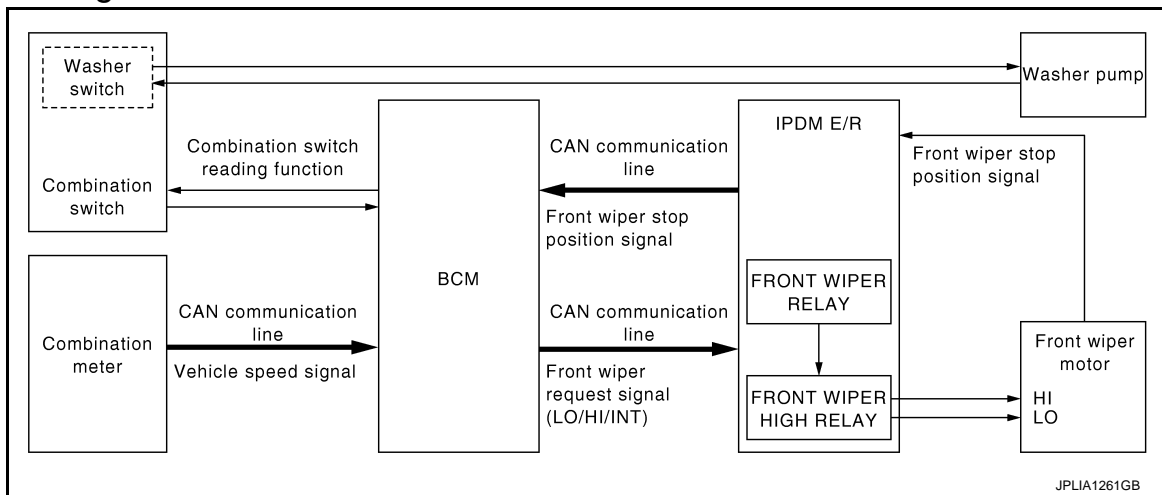

System Description

INFOID:000000011487308

OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Front wiper control function

Control by IPDM E/R

- Front wiper control function
- Relay control function

FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R with CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper high relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the front wiper LO operating condition.

Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R with CAN communication according to the front wiper HI operating condition.

Front wiper HI operating condition

- Ignition switch ON
- Front wiper switch HI
- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

FRONT WIPER INT OPERATION


FRONT WIPER AND WASHER SYSTEM

< SYSTEM DESCRIPTION >

- BCM transmits the front wiper request signal (INT) to IPDM E/R with CAN communication depending on the front wiper INT operating condition and intermittent operation delay interval according to the wiper intermittent dial position.

Front wiper INT operating condition

- Ignition switch ON
- Front wiper switch INT
- IPDM E/R turns ON the integrated front wiper relay so that the front wiper is operated only once according to the front wiper request signal (INT).
- BCM detects stop position/except stop position of the front wiper motor according to the front wiper stop position signal received from IPDM E/R with CAN communication.
- BCM transmits the front wiper request signal (INT) again after the intermittent operation delay interval.

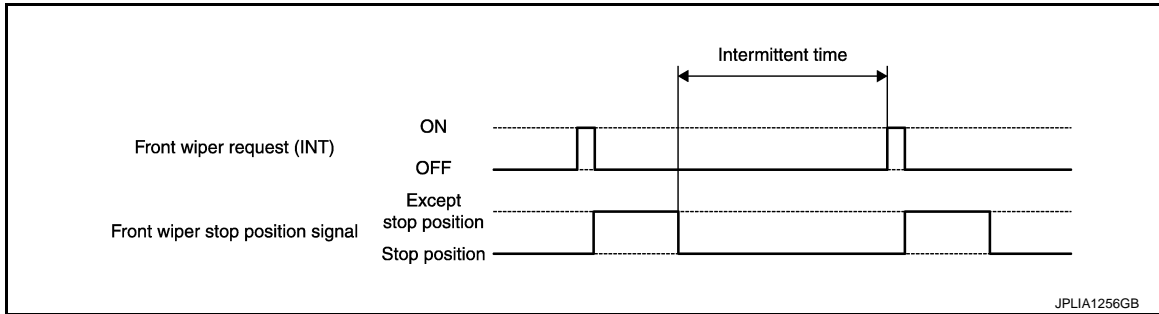

NOTE:

Factory setting of the front wiper intermittent operation is the operation without vehicle speed. Front wiper intermittent operation can be set to the operation with vehicle speed by CONSULT. Refer to [WW-12, "WIPER : CONSULT Function \(BCM - WIPER\)"](#).

Front wiper intermittent operation

BCM determines intermittent operation delay interval according to a wiper volume.

Unit: Second

Wiper intermittent dial position	Intermittent operation interval	Intermittent operation delay Interval (s)
1	Short ↑	0.4
2		2
3		5
4		8
5	↓ Long	12
6		16
7		21


FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper stop position signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).

FRONT WIPER AND WASHER SYSTEM

< SYSTEM DESCRIPTION >

- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.

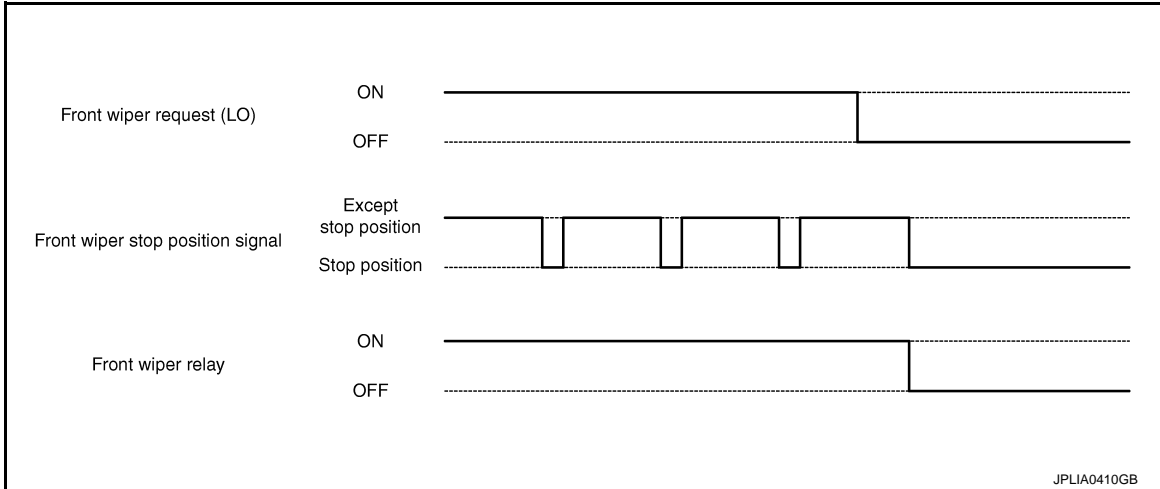

NOTE:

- BCM stops the transmitting of the front wiper request signal when the ignition switch OFF.
- IPDM E/R turns the front wiper relay OFF when the ignition switch OFF.

FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 2 times when the front washer switch OFF is detected.

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 second or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The washer pump is grounded through the combination switch when the front washer switch ON.

FRONT WIPER FAIL-SAFE OPERATION


When the front wiper stop position signal circuit is malfunctioning, IPDM E/R performs the fail-safe function. Refer to [PCS-30, "Fail-safe"](#).

FRONT WIPER AND WASHER SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000011487309

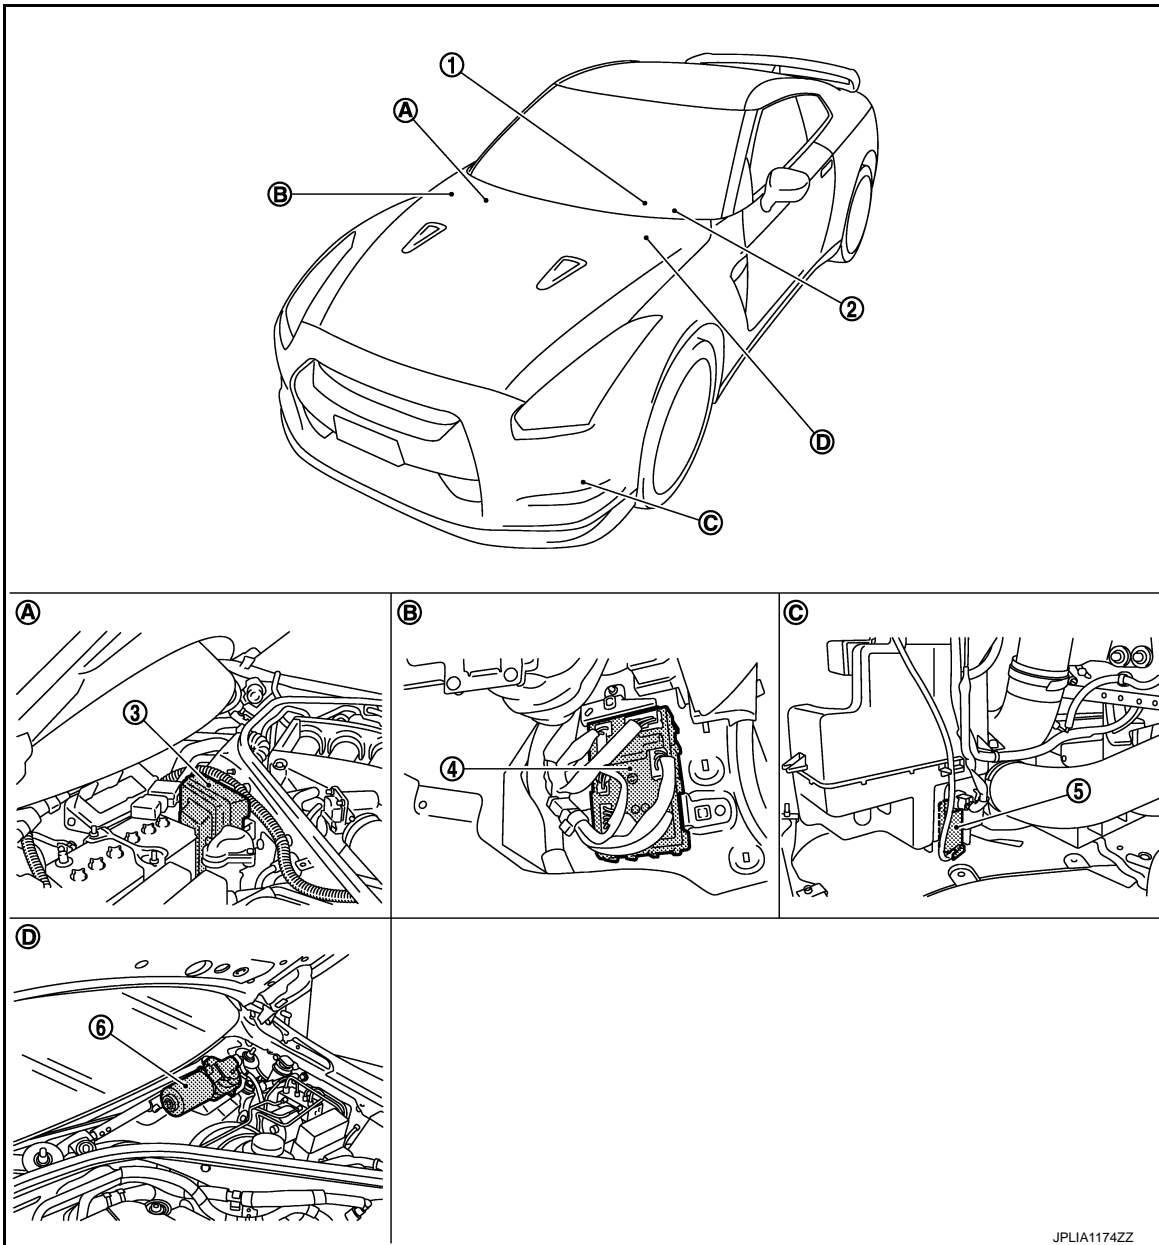

- | | | |
|---------------------------------------|-------------------------------------|-------------------------------|
| 1. Combination switch | 2. Combination meter | 3. IPDM E/R |
| 4. BCM | 5. Washer pump | 6. Front wiper motor |
| A. Engine room dash panel (RH) | B. Dash side lower (Passenger side) | C. Radiator core support (RH) |
| D. Cowl top, left side of engine room | | |

Component Description

INFOID:000000011487310

Part	Description
BCM	<ul style="list-style-type: none"> • Detects the each switch status by the combination switch reading function. • Requests (with CAN communication) the front wiper relay and the front wiper high relay ON to IPDM E/R.
IPDM E/R	<ul style="list-style-type: none"> • Controls the integrated relay according to the request (with CAN communication) from BCM. • Performs the auto stop control of the front wiper.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

FRONT WIPER AND WASHER SYSTEM

< SYSTEM DESCRIPTION >

Part	Description
Combination switch (Wiper & washer switch)	Refer to BCS-9, "System Description" .
Combination meter	Transmits the vehicle speed signal to BCM with CAN communication.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011813660

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
Intelligent Key system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid opener system	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK" to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and shift lever is except P position.)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
	LOCK		Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
	OFF		Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)		
CRANKING	Power supply position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	<p>The number of times that ignition switch is turned ON after DTC is detected</p> <ul style="list-style-type: none"> The number is 0 when a malfunction is detected now. The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 	

WIPER

WIPER : CONSULT Function (BCM - WIPER)

INFOID:0000000011487312

WORK SUPPORT

Service item	Setting item	Description
WIPER SPEED SETTING	On	With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position)
	Off*	Without vehicle speed (Front wiper intermittent time linked with the wiper intermittent dial position)

*:Factory setting

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	Description
PUSH SW [Off/On]	The switch status input from push-button ignition switch.
VEHICLE SPEED 1 [km/h]	The value of the vehicle speed signal received from combination meter with CAN communication.
FR WIPER HI [Off/On]	Each switch status that BCM judges from the combination switch reading function.
FR WIPER LOW [Off/On]	
FR WASHER SW [Off/On]	
FR WIPER INT [Off/On]	
FR WIPER STOP [Off/On]	Front wiper motor (stop position) status received from IPDM E/R with CAN communication.
INT VOLUME [1 – 7]	Each switch status that BCM judges from the combination switch reading function.

ACTIVE TEST

Test item	Operation	Description
FR WIPER	Hi	Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.
	Lo	Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.
	INT	Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation.
	Off	Stops transmitting the front wiper request signal to stop the front wiper operation.

WW

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000011813661

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Side marker lamps
- Tail lamps
- Daytime running light
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

CAUTION:

Close passenger door.

4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.

CAUTION:

- **If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-63, "Component Function Check"](#).**
- **Do not start the engine.**

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 5 steps are repeated 3 times.


Operation sequence	Inspection location	Operation
1	Front wiper	LO for 5 seconds → HI for 5 seconds
2	<ul style="list-style-type: none">• Parking lamps• License plate lamps• Side marker lamps• Tail lamps• Daytime running light	10 seconds
3	Headlamps	LO ↔ HI 5 times
4	A/C compressor (magnet clutch)	ON ↔ OFF 5 times
5*	Cooling fan	MID for 5 seconds → HI for 5 seconds

*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Concept of auto active test

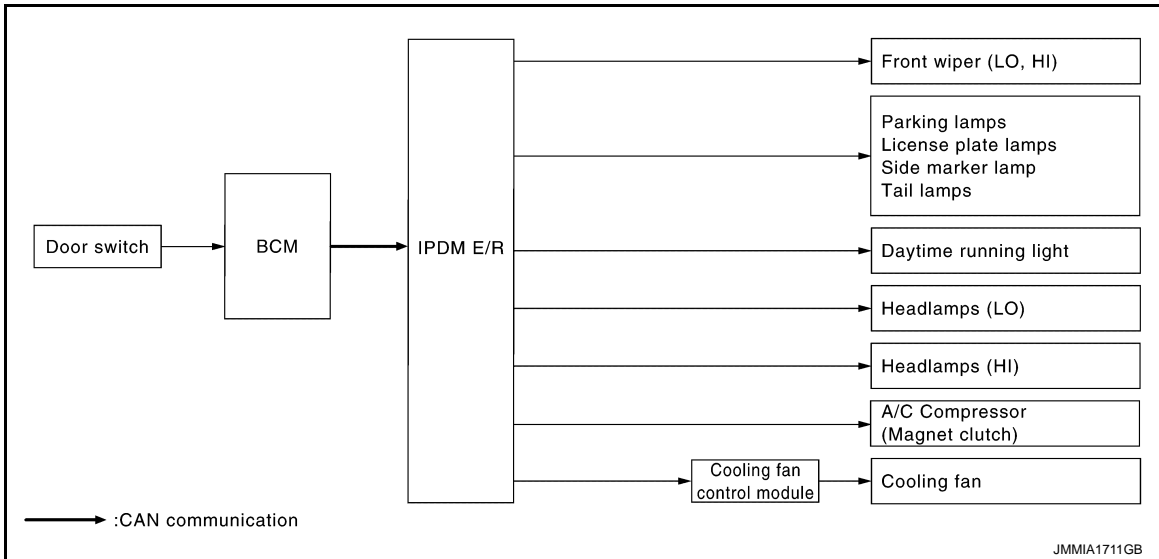

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> • Headlamp (HI, LO) • Front wiper (HI, LO) • Daytime running light 	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
Any of the following components do not operate <ul style="list-style-type: none"> • Parking lamps • License plate lamps • Tail lamps • Side marker lamps 	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Lamp • Lamp ground circuit • Harness or connector between daytime running light relay and applicable system • Harness or connector between IPDM E/R and daytime running relay • Daytime running relay power supply circuit • IPDM E/R • Daytime running light relay
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES <ul style="list-style-type: none"> • A/C amp. signal input circuit • CAN communication signal between A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Symptom	Inspection contents	Possible cause
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> ECM signal input circuit CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> Cooling fan Harness or connector between cooling fan and cooling fan control module Cooling fan control module Harness or connector between IPDM E/R and cooling fan control module Cooling fan relay Harness or connector between IPDM E/R and cooling fan relay IPDM E/R

CONSULT Function (IPDM E/R)

INFOID:000000011813662

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-32. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIGNALS	Description
RAD FAN REQ [%]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog lamp request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper stop position signal judged by IPDM E/R.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NALS	Description
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST ON/INHI ON/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the A/T shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		Displays the status of the steering lock relay request signal received from BCM via CAN communication.
S/L STATE [LOCK/UNLOCK/UNKWN]		Displays the status of the steering lock judged by IPDM E/R.
DTRL REQ [Off/On]	×	Displays the status of the daytime running light request signal received from BCM via CAN communication.
OIL P SW [Open/Close]		NOTE: The item is indicated, but not monitored.
HOOD SW [Off/On]		Displays the status of the hood switch judged by IPDM E/R.
HL WASHER REQ [Off/On]		NOTE: The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.
CRNRNG LMP REQ [Off/On]		NOTE: The item is indicated, but not monitored.

ACTIVE TEST

Test item	Operation	Description
CORNERING LAMP	Off	NOTE: The item is indicated, but cannot be tested.
	LH	
	RH	
HORN	On	Operates horn relay 1 and horn relay 2 for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Test item	Operation	Description
MOTOR FAN	1	OFF
	2	Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	NOTE: The item is indicated, but cannot be tested.
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay

WIPER AND WASHER FUSE

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

WIPER AND WASHER FUSE

Description

INFOID:000000011487315

Fuse list

Unit	Location	No.	Capacity
Front wiper motor	IPDM E/R	60	30 A
Washer pump	IPDM E/R	47	10 A

Diagnosis Procedure

INFOID:000000011487316

1.CHECK FUSES

Check that the following fuses are not fusing.

Unit	Location	No.	Capacity
Front wiper motor	IPDM E/R	60	30 A
Washer pump	IPDM E/R	47	10 A

Is the fuse fusing?

- YES >> Replace the fuse with a new one after repairing the applicable circuit.
- NO >> The fuse is normal.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER MOTOR LO CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER MOTOR LO CIRCUIT

Component Function Check

INFOID:000000011487317

1. CHECK FRONT WIPER LO OPERATION

⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO operation.

Ⓟ CONSULT ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

Lo : Front wiper (LO) operation

Off : Stop the front wiper.

Is front wiper (LO) operation normally?

- YES >> Front wiper motor LO circuit is normal.
NO >> Refer to [WW-20, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011487318

1. CHECK FRONT WIPER MOTOR (LO) OUTPUT VOLTAGE

1. Turn the ignition switch OFF, and wait for 20 seconds or more.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON, and wait for 10 seconds.
4. Check voltage between IPDM E/R harness connector and ground.

Terminals		Ground	Voltage (Approx.)
(+)	(-)		
IPDM E/R		Ground	Battery voltage (10 seconds*)
Connector	Terminal		
E5	4		

*: According to IPDM E/R front wiper control function, IPDM E/R supplies voltage for 10 seconds (battery voltage) and then stops for 20 seconds (0 V). This operations repeats 5 times, and then IPDM E/R stops voltage supply. To perform the check again, turn ignition switch OFF, wait for 20 seconds or more, and then perform the check.

Is the measurement value normal?

- YES >> GO TO 2.
NO >> Replace IPDM E/R.

2. CHECK FRONT WIPER MOTOR (LO) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E5	4	E42	1	Existed

Does continuity exist?

- YES >> GO TO 3.
NO >> Repair the harness or connector.

3. CHECK FRONT WIPER MOTOR (LO) SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

FRONT WIPER MOTOR LO CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	4		Not existed

Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace front wiper motor.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

FRONT WIPER MOTOR HI CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER MOTOR HI CIRCUIT

Component Function Check

INFOID:000000011487319

1. CHECK FRONT WIPER HI OPERATION

⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the front wiper operates at the HI operation.

Ⓟ CONSULT ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

Hi : Front wiper (HI) operation

Off : Stop the front wiper.

Is front wiper (HI) operation normally?

YES >> Front wiper motor HI circuit is normal.

NO >> Refer to [WW-22, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011487320

1. CHECK FRONT WIPER MOTOR (HI) OUTPUT VOLTAGE

Ⓟ CONSULT ACTIVE TEST

1. Turn the ignition switch OFF, and wait for 20 seconds or more.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON, and wait for 10 seconds.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R		FRONT WIPER	Battery voltage (10 seconds*)
Connector	Terminal		
E5	5	Hi	

*: According to IPDM E/R front wiper control function, IPDM E/R supplies voltage for 10 seconds (battery voltage) and then stops for 20 seconds (0 V). This operations repeats 5 times, and then IPDM E/R stops voltage supply. To perform the check again, turn ignition switch OFF, wait for 20 seconds or more, and then perform the check.

Is the measurement value normal?

YES >> GO TO 2.

NO >> Replace IPDM E/R.

2. CHECK FRONT WIPER MOTOR (HI) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E5	5	E42	4	Existed

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harness or connector.

FRONT WIPER MOTOR HI CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

3.CHECK FRONT WIPER MOTOR (HI) SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	5		Not existed

Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace front wiper motor.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER STOP POSITION SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER STOP POSITION SIGNAL CIRCUIT

Component Function Check

INFOID:000000011487321

1.CHECK FRONT WIPER STOP POSITION SIGNAL

ⓐCONSULT DATA MONITOR

1. Select "WIP AUTO STOP" of IPDM E/R data monitor item.
2. Operate the front wiper.
3. With the front wiper operation, check the monitor status.

Monitor item	Condition		Monitor status
WIP AUTO STOP	Front wiper motor	Stop position	STOP P
		Except stop position	ACT P

Is the status of item normal?

- YES >> Front wiper stop position signal circuit is normal.
NO >> Refer to [WW-24, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000011487322

1.CHECK FRONT WIPER MOTOR OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Battery voltage
Connector	Terminal	
E5	16	

Is the measurement value normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK FRONT WIPER MOTOR SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	16		Not existed

Does continuity exist?

- YES >> Repair the harness or connector.
NO >> Replace IPDM E/R.

3.CHECK FRONT WIPER MOTOR CIRCUIT CONTINUITY

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

FRONT WIPER STOP POSITION SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E5	16	E42	5	Existed

Does continuity exist?

- YES >> Replace front wiper motor.
- NO >> Repair the harness or connector.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER MOTOR GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER MOTOR GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000011487323

1. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		Existed
E42	2		

Does continuity exist?

- YES >> Front wiper motor ground circuit is normal.
NO >> Repair the harness or connector.

WASHER SWITCH


< DTC/CIRCUIT DIAGNOSIS >

WASHER SWITCH

Description

INFOID:000000011487324

Washer switch is integrated with combination switch.

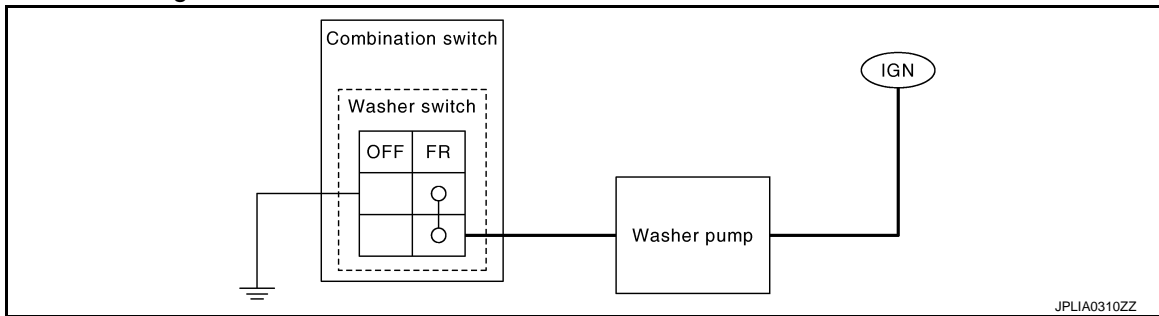

JPLIA0310ZZ

Component Inspection

INFOID:000000011487325

1. CHECK WIPER SWITCH

1. Turn the ignition switch OFF.
2. Disconnect combination switch connector.
3. Check continuity between the combination switch terminals.

Combination switch		Condition	Continuity
Terminal			
1	6	Front washer switch ON	Existed

Does continuity exist?

- YES >> Wiper and washer switch is normal.
NO >> Replace combination switch (Wiper and washer switch).

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW


FRONT WIPER AND WASHER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER AND WASHER SYSTEM

Wiring Diagram - FRONT WIPER AND WASHER SYSTEM -

INFOID:000000011487326

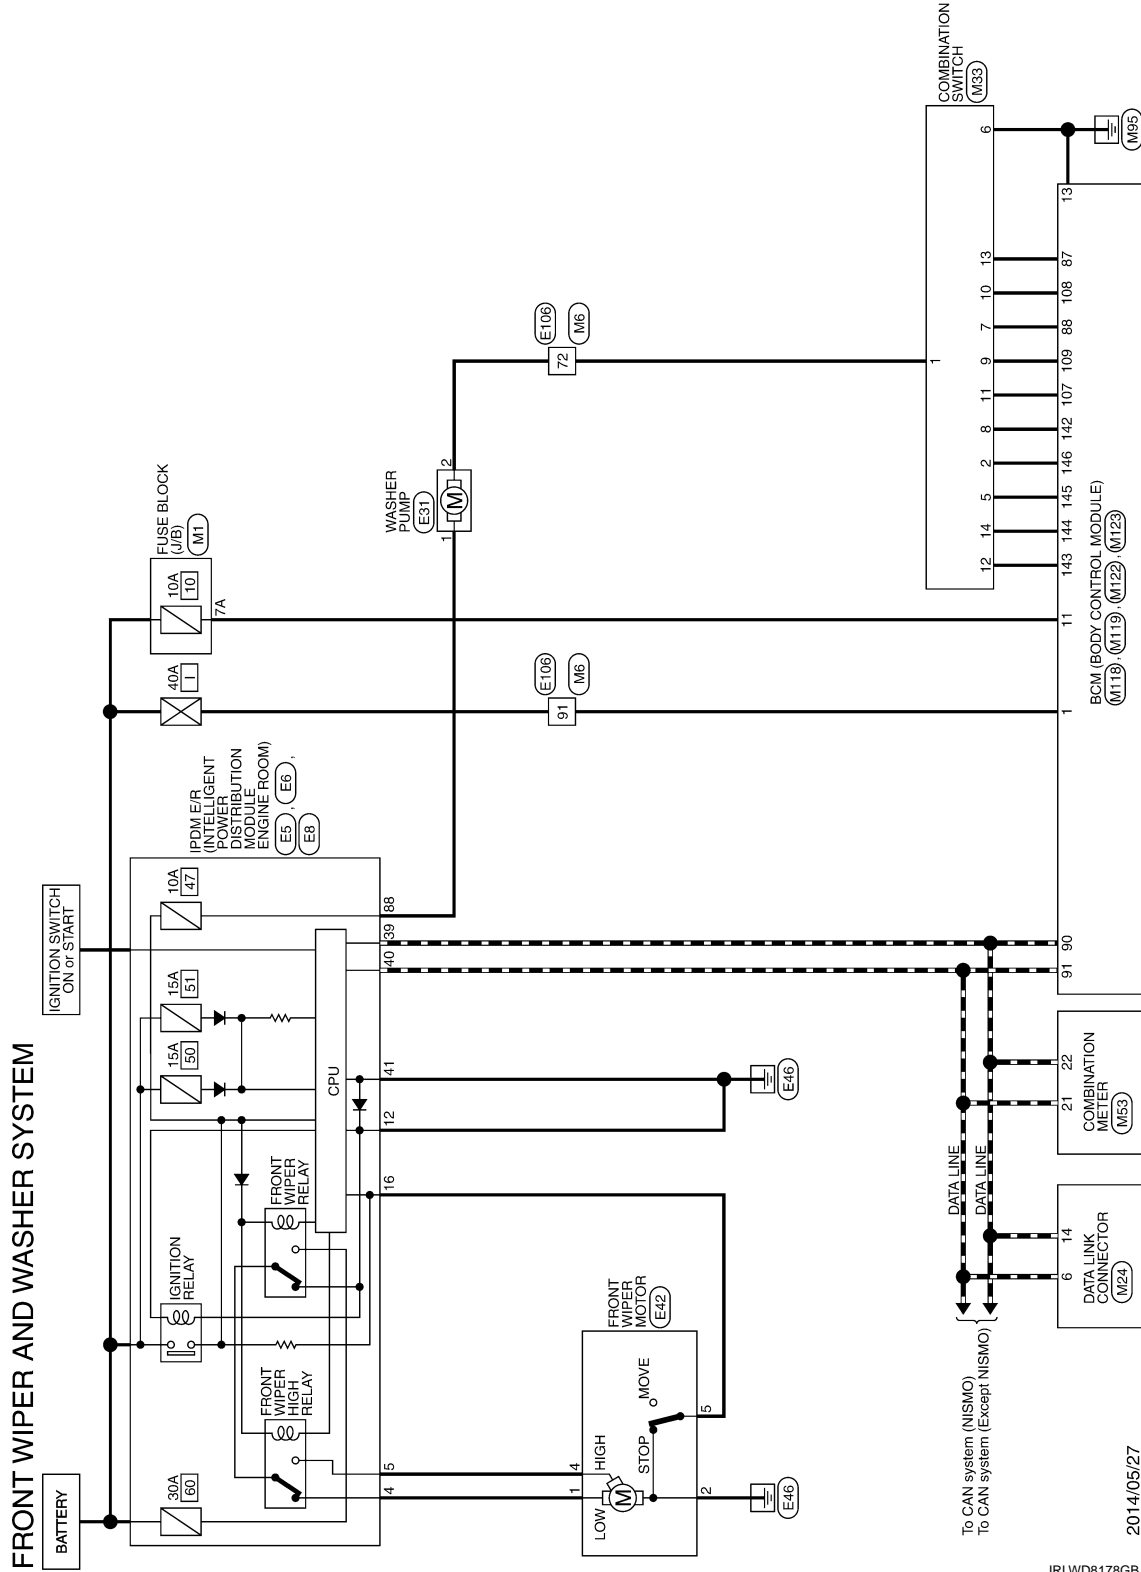


FRONT WIPER AND WASHER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER AND WASHER SYSTEM

Connector No.	E5
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V




Connector No.	E8
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS08FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	Y	-
6	Y	-
7	R	-
10	W	-
11	SB	-
12	BW	-
13	R	-
16	LG	-
25	BG	-
27	Y	-
28	G	-
30	GR	-
32	L	-
33	P	-
36	LG	-

Connector No.	E5
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	BY	-

42	G
43	SB
44	W
46	BG

Connector No.	E8
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS08FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
83	R	-
84	P	-
86	W	-
87	L	-
88	G	-
89	BR	-
90	BG	-

Connector No.	E31
Connector Name	WASHER PUMP
Connector Type	EC22FY-RS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	SB	-

Connector No.	E42
Connector Name	FRONT WIPER MOTOR
Connector Type	HS05FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	BW	-
4	L	-
5	LG	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
3	BG	-
4	BG	-
5	P	-
6	R	-
7	BG	-
8	P	-
9	W	-
10	Y	-
11	SB	-
12	BG	-
13	P	-
14	L	-
15	SB	-
16	BG	-

Terminal No.	Color Of Wire	Signal Name [Specification]
17	SHIELD	-
18	L	-
19	P	-
20	B	-
21	Y	-
22	V	-
23	Y	-
24	V	-
25	BR	-
26	L	-
27	SHIELD	-
28	G	-
29	R	-
30	W	-
31	V	-
32	G	-
33	GR	-
34	P	-
35	LG	-
36	G	-
37	Y	-
38	SB	-
39	GR	-
40	G	-
41	V	-
42	V	-
43	L	-
44	BR	-
45	G	-
46	SB	-
48	BG	-
49	L	-
50	R	-
51	SHIELD	-
60	P	-
61	L	-
71	LG	-
72	SB	-
74	P	-
75	BR	-
76	LG	-
77	V	-
78	BR	-
79	W	-
80	V	-
81	GR	-
82	BG	-
84	P	-
85	P	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW


FRONT WIPER AND WASHER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER AND WASHER SYSTEM


85	GR	-	-
87	R	-	-
88	L	-	-
89	BG	-	-
90	G	-	-
91	GR	-	-
92	R	-	-
93	R	-	-
94	LG	-	-
95	G	-	-
96	GR	-	-
97	L	-	-
98	LG	-	-
99	BG	-	-
100	L	-	-

Connector No.	M1
Connector Name	FUSE BLOCK (JIB)
Connector Type	NS68FW-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	LG	-
5A	SB	-
6A	Y	-
7A	R	-
8A	L	-


Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	R	-
3	R	-
4	G	-
5	Y	-
6	P	-
7	W	-
8	V	-
9	L	-
10	Y	-
11	G	-
12	BG	-
13	R	-
14	L	-
15	BR	-
16	R	-
17	SHIELD	-
18	L	-
19	P	-
20	B	-
21	W	-
22	GR	-
23	L	-
24	V	-
25	BR	-
26	G	-
27	SHIELD	-
28	G	-
29	R	-
30	W	-
31	V	-
32	G	-
33	GR	-
34	LG	-
35	P	-
36	L	-
37	W	-


38	Y	-	-
39	GR	-	-
40	BG	-	-
41	W	-	-
42	R	-	-
43	Y	-	-
44	BR	-	-
45	G	-	-
46	LG	-	-
48	W	-	-
49	L	-	-
50	R	-	-
51	SHIELD	-	-
60	SB	-	-
61	V	-	-
71	W	-	-
72	LG	-	-
74	B	-	-
75	BR	-	-
76	LG	-	-
77	R	-	-
78	BR	-	-
79	W	-	-
80	Y	-	-
81	BG	-	-
82	SB	-	-
84	Y	-	-
85	P	-	-
86	GR	-	-
87	R	-	-
88	L	-	-
89	G	-	-
90	P	-	-
91	W	-	-
92	R	-	-
93	LG	-	-
94	W	-	-
95	SB	-	-
96	L	-	-
97	L	-	-
98	Y	-	-
99	BG	-	-
100	L	-	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	R	-
4	B	-
5	B	-
6	L	-
7	V	-
8	G	-
11	G	-
14	P	-
16	Y	-

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH68FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	SB	-
5	L	-
6	B	-
7	V	-
8	BG	-
9	Y	-
10	R	-
11	LG	-
12	P	-
13	BR	-

FRONT WIPER AND WASHER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER AND WASHER SYSTEM

14	G	-
----	---	---

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	SAB40FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	W	IGNITION POWER SUPPLY
3	B	GROUND
4	B	ILLUMINATION GROUND
5	B	GROUND
6	W	METER CONTROL SWITCH GROUND
7	Y	AC AUTO AMP. CONNECTION CONDITION SIGNAL
8	SB	AMBIENT SENSOR GROUND
9	P	AMBIENT SENSOR SIGNAL
12	L	VEHICLE SPEED SIGNAL (2-PULSE)
13	V	VEHICLE SPEED SIGNAL (8-PULSE)
14	B	OIL PRESSURE SENSOR GROUND
15	R	AIR BAG SIGNAL
16	R	LED HEAD LAMP (RH) WARNING SIGNAL
18	L	FUEL LEVEL SENSOR GROUND
19	R	OIL LEVEL SENSOR GROUND
20	W	OIL LEVEL SENSOR SIGNAL
21	L	CANH
22	P	CANH
23	LG	ILLUMINATION CONTROL SWITCH SIGNAL (L)
24	BR	ILLUMINATION CONTROL SWITCH SIGNAL (R)
25	G	TRIP A/B RESET SWITCH SIGNAL
26	BG	ENTER SWITCH SIGNAL
27	SB	SELECT SWITCH SIGNAL
28	BR	ALTERNATOR
29	G	SEAT BELT Buckle SWITCH SIGNAL (PASSENGER SIDE)
30	LG	SEAT BELT Buckle SWITCH SIGNAL (DRIVER SIDE)
31	V	PARKING BRAKE SWITCH SIGNAL
32	V	BRAKE FLUID LEVEL SWITCH SIGNAL
33	L	WASHER LEVEL SWITCH SIGNAL
34	GR	OIL PRESSURE SENSOR POWER
35	W	OIL PRESSURE SENSOR SIGNAL
38	BG	FUEL LEVEL SENSOR SIGNAL

39	Y	LED HEAD LAMP (LH) WARNING SIGNAL
40	V	ILLUMINATION CONTROL

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	R	POWER WINDOW POWER SUPPLY (BAT)
3	W	POWER WINDOW POWER SUPPLY (TRAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
4	R	INTERIOR ROOM LAMP POWER SUPPLY
5	G	PASSENGER DOOR UNLOCK OUTPUT
6	V	STEP LAMP
7	Y	ALL DOOR FUEL LID LOCK OUTPUT
8	V	DRIVER DOOR FUEL LID UNLOCK OUTPUT
9	G	BAT (F/USE)
10	B	GROUND
11	R	PUSH-BUTTON (IGNITION SW) ILL. GND
12	P	ACC. ILL.
13	V	TURN SIGNAL (RH FRONT) OUTPUT
14	BG	TURN SIGNAL (LH FRONT) OUTPUT
15	V	ROOM LAMP-TIMER CONTROL
16	V	ROOM LAMP-TIMER CONTROL

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	R	ROOM ANT2-
73	G	ROOM ANT2-
74	SB	PASSENGER DOOR ANT+
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT+
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT1-
79	BR	ROOM ANT1-
80	GR	IMMOBI ANTENNA CONTROL
81	L	IMMOBI ANTENNA SIGNAL
82	R	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMM
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CANH
91	L	CANH
92	LG	KEY SLOT ILL OUTPUT
93	V	ON ILL
95	BG	ACC RELAY CONT
96	SB	A/T SHIFT SELECTOR POWER SUPPLY
97	L	S/L CONDITION 1
98	R	S/L CONDITION 2
99	G	SHIFT P
100	W	PASSENGER DOOR REQUEST SW
101	V	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	P	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	G	HAZARD SW
111	Y	S/L UNIT COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
113	P	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	B	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	R	KEY SLOT SW
123	BR	IGN F/B
124	LG	PASSENGER DOOR SW LOCK
128	P	DOOR LOCK UNLOCK SW LOCK
129	BG	TRUNK CANCEL SW
131	BR	DOOR LOCK UNLOCK SW UNLOCK
133	W	PUSH-BUTTON (IGNITION SW) ILL POWER
134	GR	LOCK IND
137	L	RECEIVER GND
138	Y	RECEIVER SENSOR POWER SUPPLY
140	BR	SHIFT N/P
141	G	SECURITY INDICATOR
142	BG	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000011813663

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	NOTE: The item is indicated, but not monitored.	Off

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
DOOR SW-RL	NOTE: The item is indicated, but not monitored.	Off	A
DOOR SW-BK	NOTE: The item is indicated, but not monitored.	Off	B
CDL LOCK SW	Other than power door lock switch LOCK	Off	C
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	D
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	NOTE: The item is indicated, but not monitored.	Off	E
KEY CYL UN-SW	NOTE: The item is indicated, but not monitored.	Off	F
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off	G
HAZARD SW	Hazard switch is not pressed	Off	H
	Hazard switch is pressed	On	
REAR DEF SW	NOTE: The item is indicated, but not monitored.	Off	I
H/L WSR SW	NOTE: The item is indicated, but not monitored.	Off	J
TR CANCEL SW	Trunk lid opener cancel switch OFF	Off	K
	Trunk lid opener cancel switch ON	On	
TR/BD OPEN SW	Trunk lid opener switch OFF	Off	WW
	While the trunk lid opener switch is turned ON	On	
TRNK/HAT MNTR	Trunk lid closed	Off	M
	Trunk lid opened	On	
REVERSE SW	NOTE: The item is indicated, but not monitored.	Off	N
RKE-LOCK	LOCK button of Intelligent Key is not pressed	Off	O
	LOCK button of Intelligent Key is pressed	On	
RKE-UNLOCK	UNLOCK button of Intelligent Key is not pressed	Off	P
	UNLOCK button of Intelligent Key is pressed	On	
RKE-TR/BD	TRUNK OPEN button of Intelligent Key is not pressed	Off	P
	TRUNK OPEN button of Intelligent Key is pressed	On	
RKE-PANIC	PANIC button of Intelligent Key is not pressed	Off	P
	PANIC button of Intelligent Key is pressed	On	
RKE-P/W OPEN	UNLOCK button of Intelligent Key is not pressed	Off	P
	UNLOCK button of Intelligent Key is pressed and held	On	
RKE-MODE CHG	LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	Off	P
	LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	On	
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	P
	Dark outside of the vehicle	Close to 0 V	
REQ SW-DR	Driver door request switch is not pressed	Off	P
	Driver door request switch is pressed	On	
REQ SW-AS	Passenger door request switch is not pressed	Off	P
	Passenger door request switch is pressed	On	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
REQ SW-RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW-RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW-BD/TR	Trunk lid opener request switch is not pressed	Off
	Trunk lid opener request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	NOTE: The item is indicated, but not monitored.	Off
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW	Shift lever in P position	Off
	Shift lever in any position other than P	On
SFT PN/N SW	Shift lever in any position other than P and N	Off
	Shift lever in P or N position	On
S/L -LOCK	Steering is unlocked	Off
	Steering is locked	On
S/L -UNLOCK	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN-DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Shift lever in any position other than P	Off
	Shift lever in P position	On
SFT PN -IPDM	Shift lever in any position other than P and N	Off
	Shift lever in P or N position	On
SFT P -MET	Shift lever in any position other than P	Off
	Shift lever in P position	On
SFT N -MET	Shift lever in any position other than N	Off
	Shift lever in N position	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
ENGINE STATE	Engine stopped	Stop	A
	While the engine stalls	Stall	
	At engine cranking	Crank	B
	Engine running	Run	
S/L LOCK-IPDM	Steering is unlocked	Off	
	Steering is locked	On	C
S/L UNLK-IPDM	Steering is locked	Off	
	Steering is unlocked	On	D
S/L RELAY-REQ	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK	Off	
	Steering lock system is the LOCK condition or the changing condition from LOCK to UNLOCK	On	E
VEH SPEED 1	While driving	Equivalent to speedometer reading	F
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DOOR STAT-DR	Driver door is locked	LOCK	G
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Driver door is unlocked	UNLOCK	
DOOR STAT-AS	Passenger door is locked	LOCK	H
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Passenger door is unlocked	UNLOCK	
ID OK FLAG	Steering is locked	Reset	I
	Steering is unlocked	Set	
PRMT ENG STRT	The engine start is prohibited	Reset	J
	The engine start is permitted	Set	
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset	K
KEY SW -SLOT	Intelligent Key is not inserted into key slot	Off	
	Intelligent Key is inserted into key slot	On	WW
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key	
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—	M
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done	N
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet	O
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done	
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet	P
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done	

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

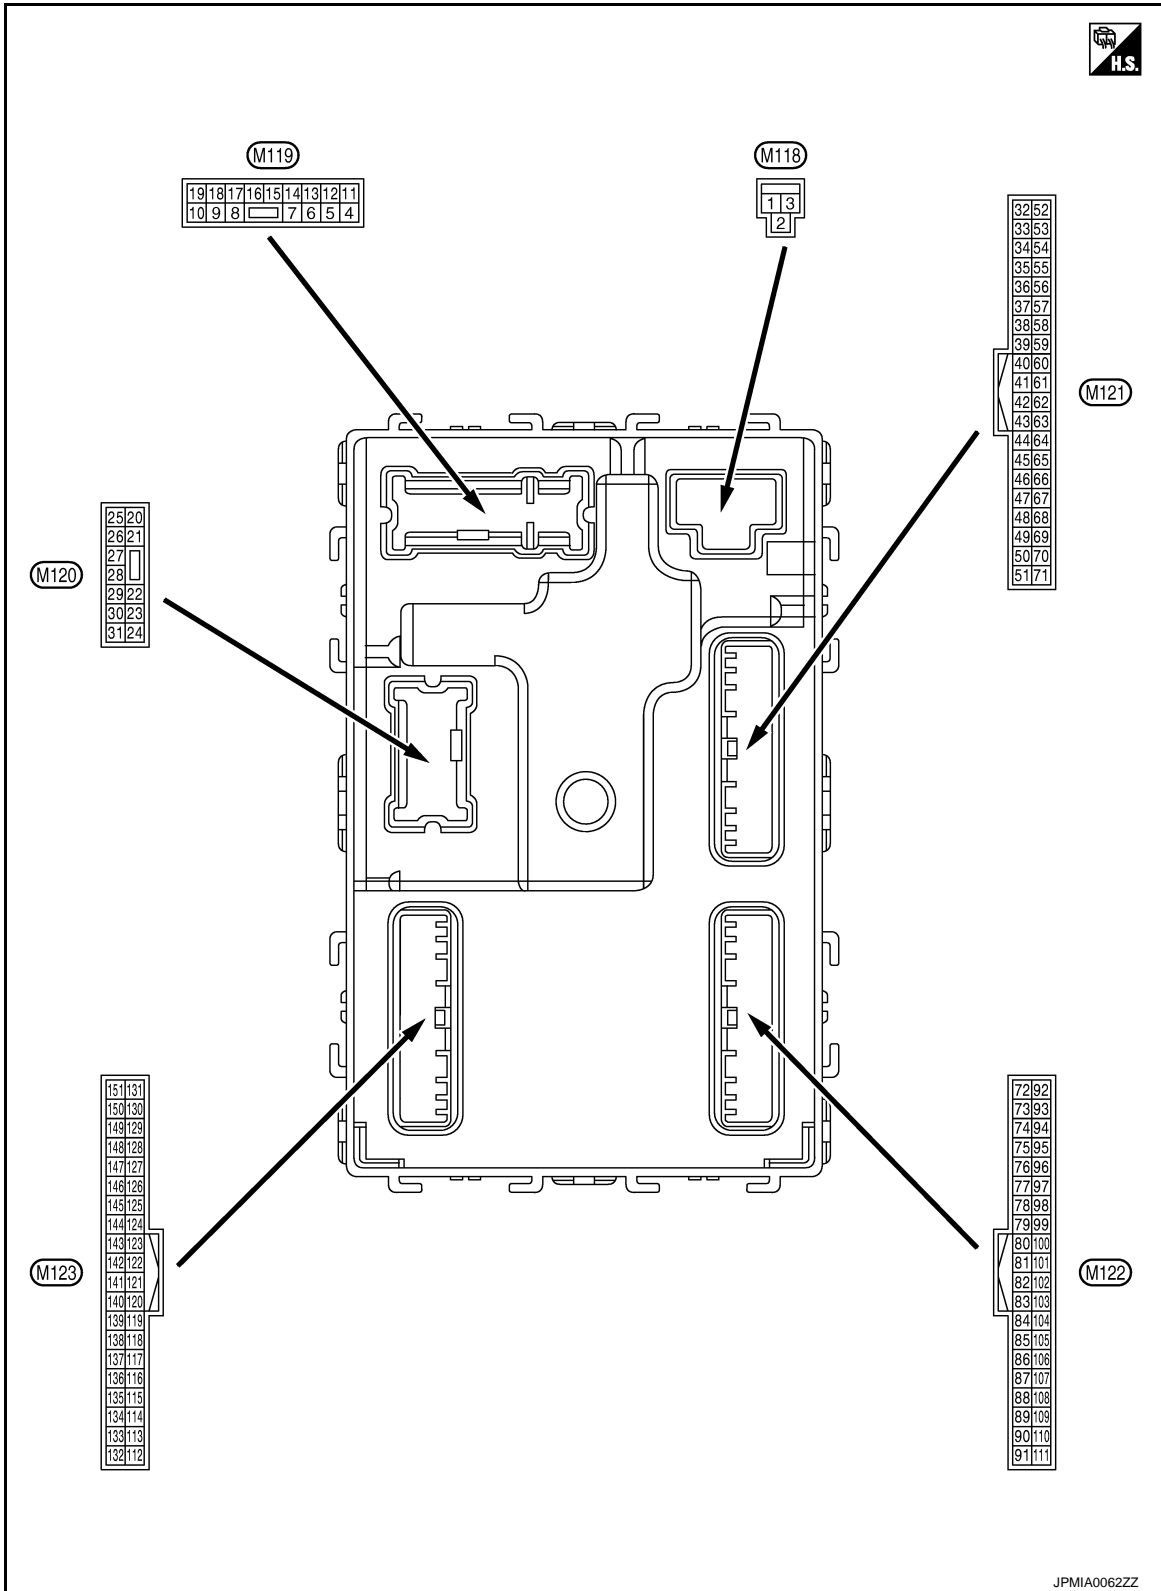


A
B
C
D
E
F
G
H
I
J
K
WW
M
N
O
P

PHYSICAL VALUES





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

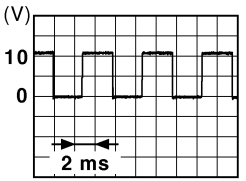Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (W)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		Battery voltage
4 (R)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0 V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
5 (G)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (Y)	Ground	Step lamp control signal	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (P)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC or ON	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


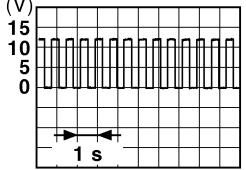
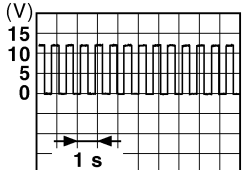
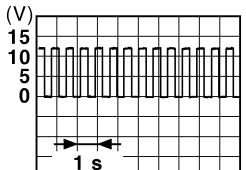
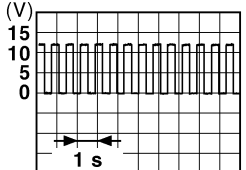
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
17 (W)	Ground	Turn signal RH (Front)	Output		
				Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
18 (BG)	Ground	Turn signal LH (Front)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
19 (V)	Ground	Interior room lamp control signal	Output	Interior room lamp	OFF Battery voltage
				ON	0 V
20 (SB)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
23 (G)	Ground	Trunk lid open	Output	Trunk lid	Open (Trunk lid opener ac- tuator is activated) Battery voltage
				Close (Trunk lid opener ac- tuator is not activated)	0 V
25 (V)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
30 (BG)	Ground	Trunk room lamp control signal	Output	Trunk room lamp	ON 0 V
				OFF	Battery voltage

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

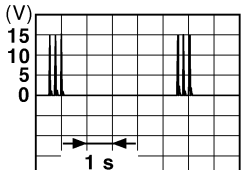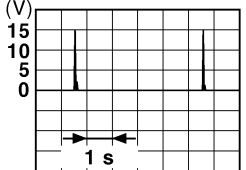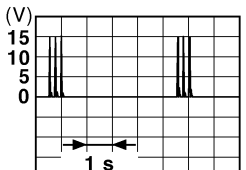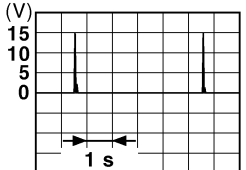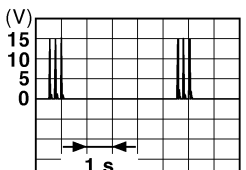Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (P)	Ground	Trunk room antenna (-)	Output		
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
35 (L)	Ground	Trunk room antenna (+)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
38 (R)	Ground	Rear bumper anten- na (-)	Output	When the trunk lid opener re- quest switch is operated with ig- nition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)






< ECU DIAGNOSIS INFORMATION >

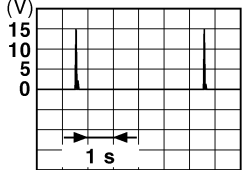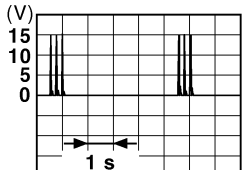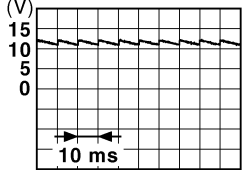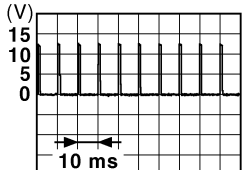Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
39 (BR)	Ground	Rear bumper antenna (+)	Output	When the trunk lid opener request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC ON Battery voltage 0 V
50 (R)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p> 11.8 V
				ON (Trunk is open)	0 V
52 (SB)	Ground	Starter relay control	Output	Ignition switch ON	When shift lever is in P or N position Battery voltage When shift lever is not in P or N position 0 V
61 (W)	Ground	Trunk lid opener request switch	Input	Trunk lid opener request switch	ON (Pressed) 0 V OFF (Not pressed)  <p style="text-align: right; font-size: small;">JPMIA0016GB</p> 1.0 V
64 (BG)	Ground	Intelligent Key warning buzzer (Engine room)	Output	Intelligent Key warning buzzer (Engine room)	Sounding 0 V Not sounding Battery voltage

A
B
C
D
E
F
G
H
I
J
K
WW
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

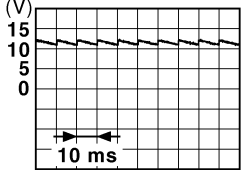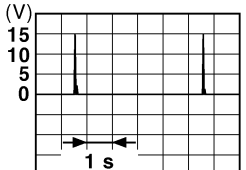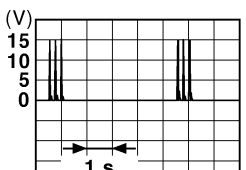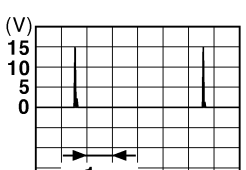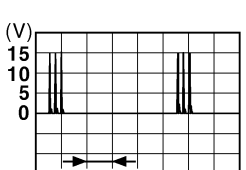Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
67 (G)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0 V
					Not pressed	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
72 (R)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
73 (G)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
74 (SB)	Ground	Passenger door antenna (-)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
75 (BR)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
77 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
78 (Y)	Ground	Room antenna 1 (-) (Instrument panel)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
79 (BR)	Ground	Room antenna 1 (+) (Instrument panel)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)
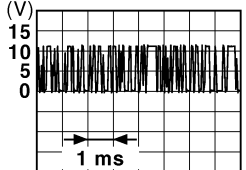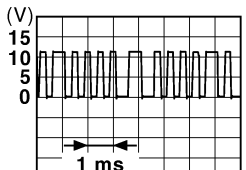
< ECU DIAGNOSIS INFORMATION >




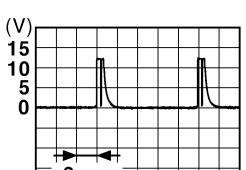
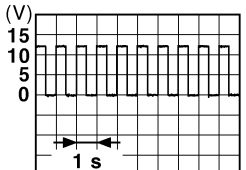
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (L)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
83 (Y)	Ground	Remote keyless entry receiver communication	Input/ Output	During waiting		 <p style="text-align: right; font-size: small;">JMKIA0064GB</p>
				When operating either button on Intelligent Key		 <p style="text-align: right; font-size: small;">JMKIA0065GB</p>
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Any of the conditions below with all switches OFF	<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

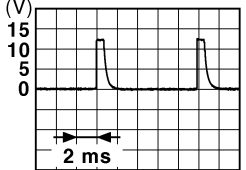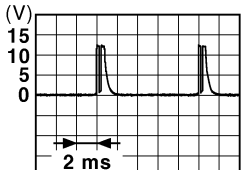Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMA0037GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switches OFF	<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3  <p style="text-align: right; font-size: small;">JPMA0040GB</p> <p style="text-align: center;">1.3 V</p>
89 (BR)	Ground	Push-button ignition switch (push switch)	Input	Push-button igni- tion switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN - L	Input/ Output	—	—	
91 (L)	Ground	CAN - H	Input/ Output	—	—	
92 (LG)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	Battery voltage
					Blinking	 <p style="text-align: right; font-size: small;">JPMA0015GB</p> <p style="text-align: center;">6.5 V</p>
					ON	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

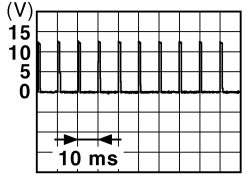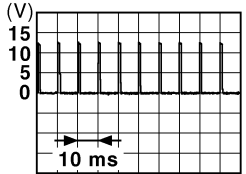

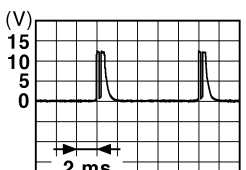
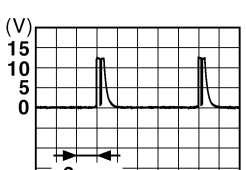
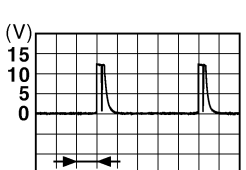
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON or ACC	0 V
95 (BG)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (SB)	Ground	A/T shift selector (detention switch) power supply	Output	—		Battery voltage
97 (L)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98 (R)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (G)	Ground	Shift lever P position switch	Input	Shift lever	P position	0 V
					Any position other than P	Battery voltage
100 (W)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 1.0 V JPMIA0016GB
101 (V)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 1.0 V JPMIA0016GB
102 (BG)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (LG)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage
106 (P)	Ground	Steering lock unit power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

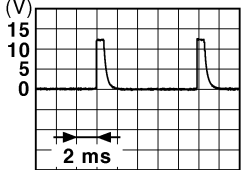Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermittent dial 4)	All switches OFF	 <p style="text-align: right;">JPMIA0041GB 1.4 V</p>
					Turn signal switch LH	 <p style="text-align: right;">JPMIA0037GB 1.3 V</p>
					Turn signal switch RH	 <p style="text-align: right;">JPMIA0036GB 1.3 V</p>
					Front wiper switch LO	 <p style="text-align: right;">JPMIA0038GB 1.3 V</p>
					Front washer switch ON	 <p style="text-align: right;">JPMIA0039GB 1.3 V</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



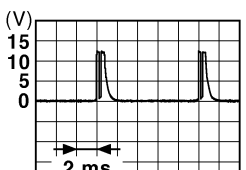
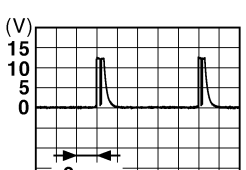
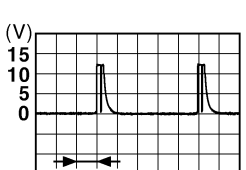
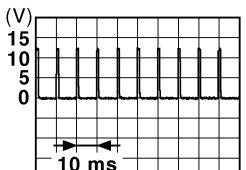
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper intermittent dial 4) <div style="text-align: right;"> </div>
				Lighting switch AUTO (Wiper intermittent dial 4)	
				Lighting switch 1ST (Wiper intermittent dial 4)	
				Any of the conditions below with all switches OFF	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

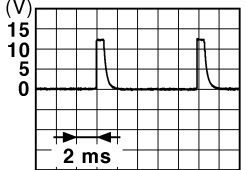Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	 <p style="text-align: right;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Lighting switch PASS	 <p style="text-align: right;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>
					Lighting switch 2ND	 <p style="text-align: right;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Front wiper switch INT	 <p style="text-align: right;">JPMIA0038GB</p> <p style="text-align: center;">1.3 V</p>
					Front wiper switch HI	 <p style="text-align: right;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>
					Pressed	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	Not pressed	 <p style="text-align: right;">JPMIA0012GB</p> <p style="text-align: center;">1.1 V</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


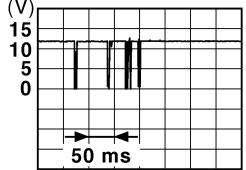
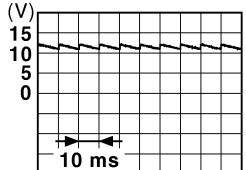
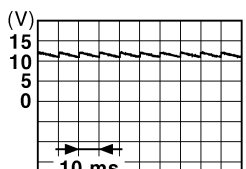
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
111 (Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	Battery voltage
					LOCK or UNLOCK	 <p style="text-align: right; font-size: small;">JMKIA0066GB</p>
					For 15 seconds after UN- LOCK	Battery voltage
					15 seconds or later after UNLOCK	0 V
113 (P)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
				When dark outside of the vehicle	Close to 0 V	
116 (SB)	Ground	Stop lamp switch 1	Input	—	Battery voltage	
118 (P)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
119 (SB)	Ground	Driver side door lock actuator (Unlock sen- sor)	Input	Driver door	LOCK status (Unlock sen- sor switch OFF)	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					UNLOCK status (Unlock sensor switch ON)	0 V
					11.8 V	
121 (R)	Ground	Key slot switch	Input	When Intelligent Key is inserted into key slot	Battery voltage	
				When Intelligent Key is not inserted into key slot	0 V	
123 (BR)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
				ON	Battery voltage	
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closes)	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					ON (When passenger door opens)	0 V

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW




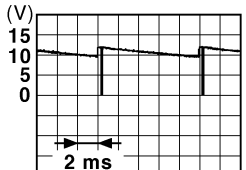
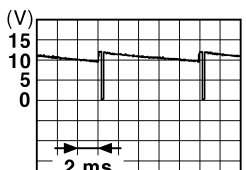
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

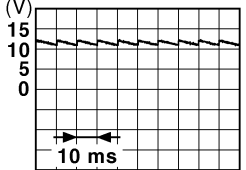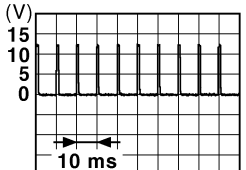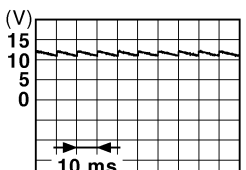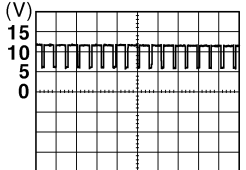Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
128 (P)	Ground	Door lock and unlock switch LOCK	Input	Door lock and un- lock switch (pow- er window main switch or power window sub- switch)	NEUTRAL position  JPMIA0011GB 11.8 V
				LOCK position	0 V
129 (BG)	Ground	Trunk lid opener can- cel switch	Input	Trunk lid opener cancel switch	CANCEL  JPMIA0012GB 1.1 V
				ON	0 V
131 (BR)	Ground	Door lock and unlock switch UNLOCK	Input	Door lock and un- lock switch (pow- er window main switch or power window sub- switch)	NEUTRAL position  JPMIA0011GB 11.8 V
				LOCK position	0 V
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumina- tion	ON (When tail lamps OFF) 5.5 V
				ON (When tail lamps ON)  JPMIA0159GB	
				OFF	0 V
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	ON 0 V
				OFF	Battery voltage
137 (L)	Ground	Receiver and sensor ground	Input	Ignition switch ON	0 V
138 (Y)	Ground	Sensor power supply	Output	Ignition switch	OFF 0 V
					ACC or ON 5.0 V
140 (BR)	Ground	Shift lever P/N posi- tion	Input	Shift lever	P or N position 12 V
					Except P and N positions 0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

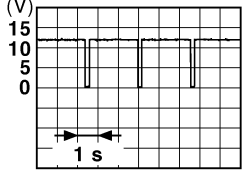
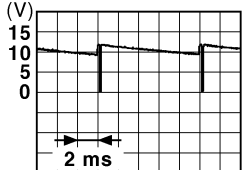
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
141 (G)	Ground	Security indicator	Output	Security indicator	ON	0 V
				Blinking	 <p style="text-align: right; font-size: small;">JPMA0014GB</p>	11.3 V
142 (BG)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	OFF	Battery voltage
				Lighting switch 1ST	 <p style="text-align: right; font-size: small;">JPMA0031GB</p>	10.7 V
				Lighting switch HI		
				Lighting switch 2ND		
				Turn signal switch RH		
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V
				 <p style="text-align: right; font-size: small;">JPMA0032GB</p>	10.7 V	
						Front wiper switch HI (Wiper intermittent dial 4)
						Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V
				 <p style="text-align: right; font-size: small;">JPMA0033GB</p>	10.7 V	
						Front washer switch ON (Wiper intermittent dial 4)
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF	0 V
				 <p style="text-align: right; font-size: small;">JPMA0034GB</p>	10.7 V	
						Front wiper switch INT
						Lighting switch AUTO

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

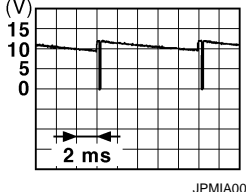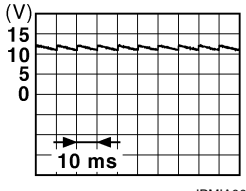
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
146 (SB)	Ground	Combination switch OUTPUT 4	Output	All switches OFF	0 V
				Lighting switch 2ND	
				Lighting switch PASS	
				Turn signal switch LH	
150 (GR)	Ground	Driver door switch	Input	OFF (When driver door closes)	
				ON (When driver door opens)	0 V
151 (G)	Ground	Rear window defogger relay control	Output	Active	0 V
				Not activated	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - BCM -

INFOID:000000011813664

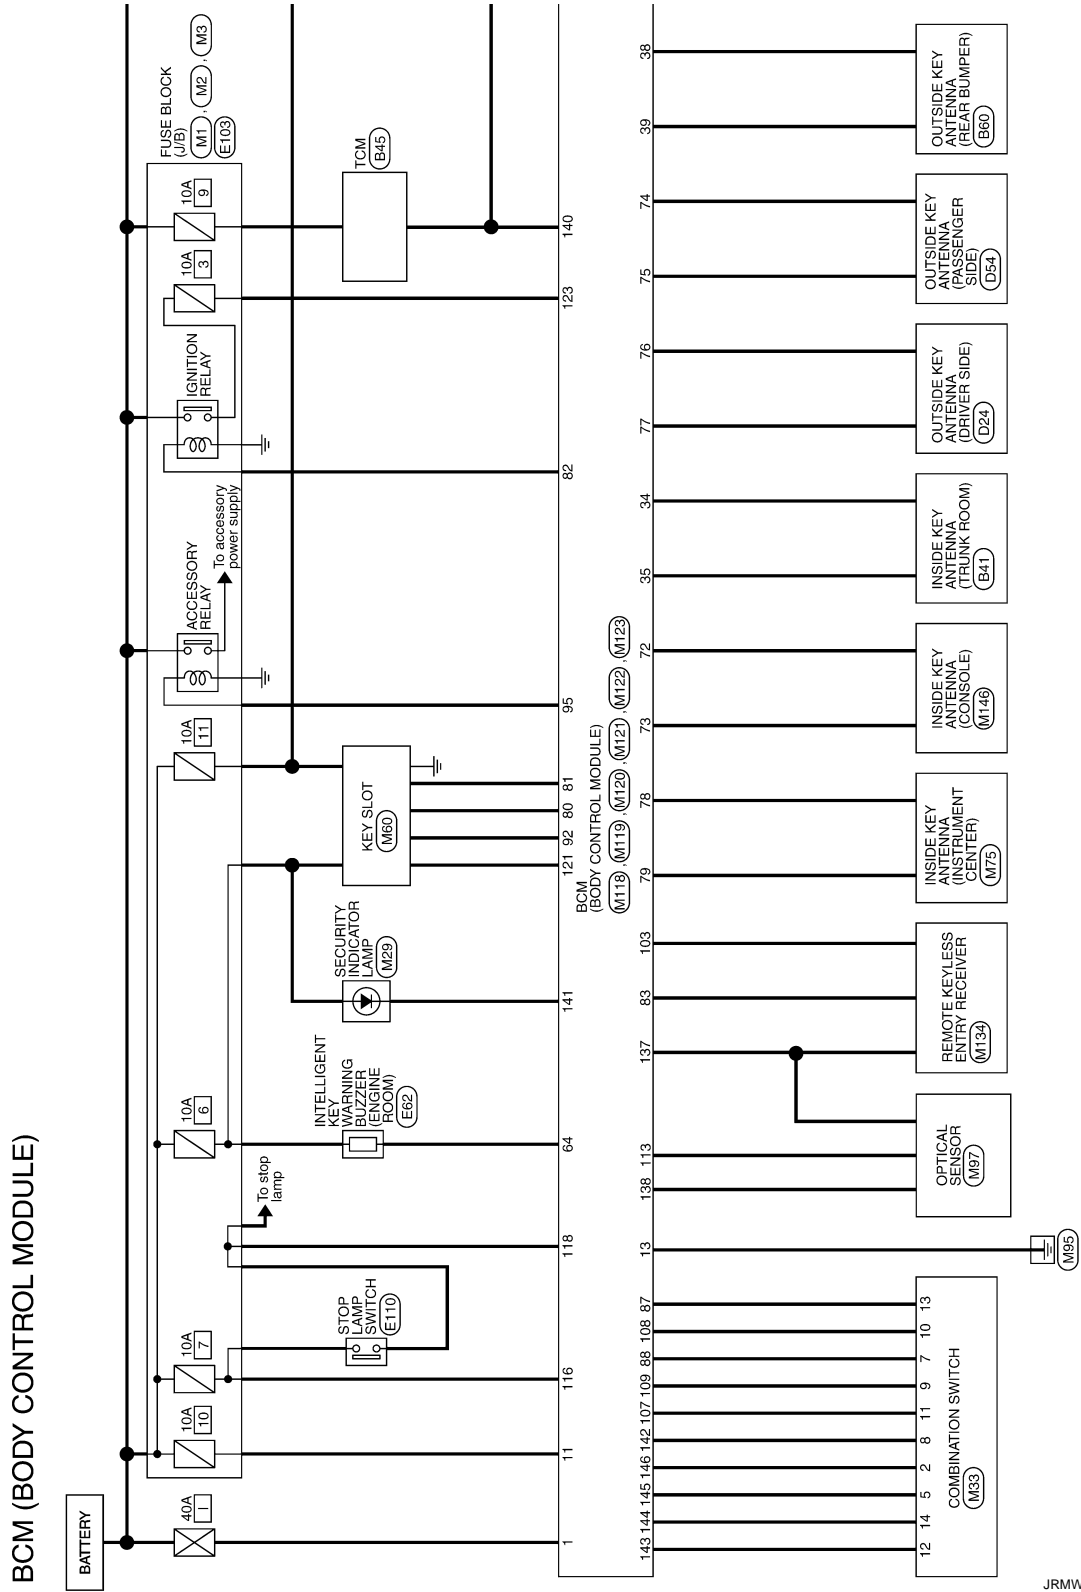

2014/10/01


JRMWG7988GB

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P



BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

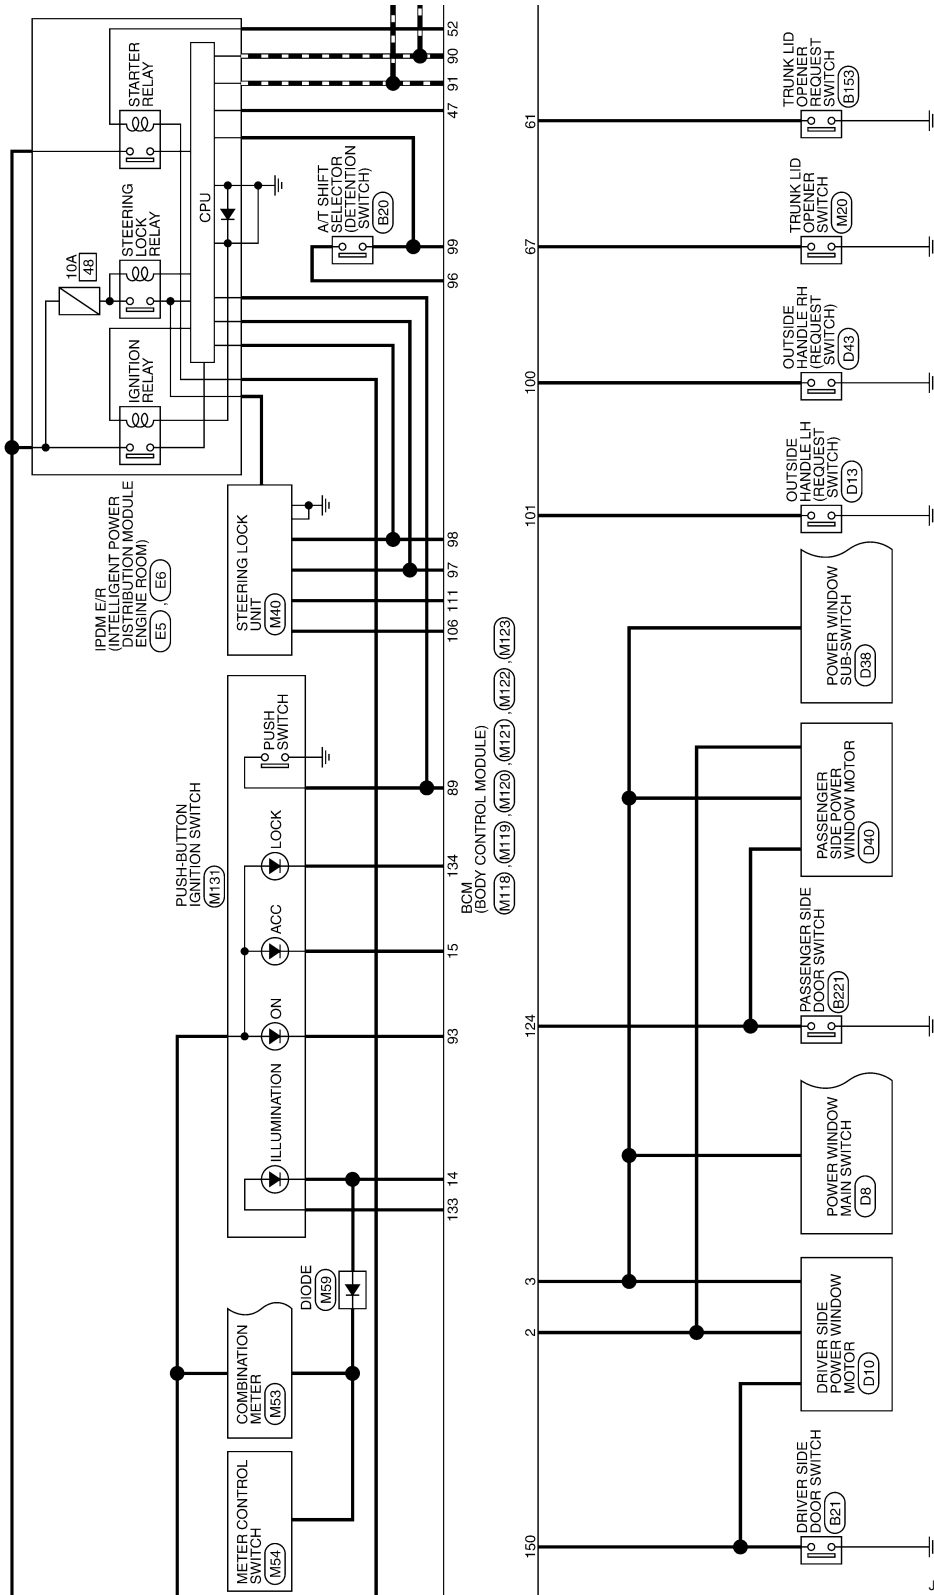

JRMWG7989GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

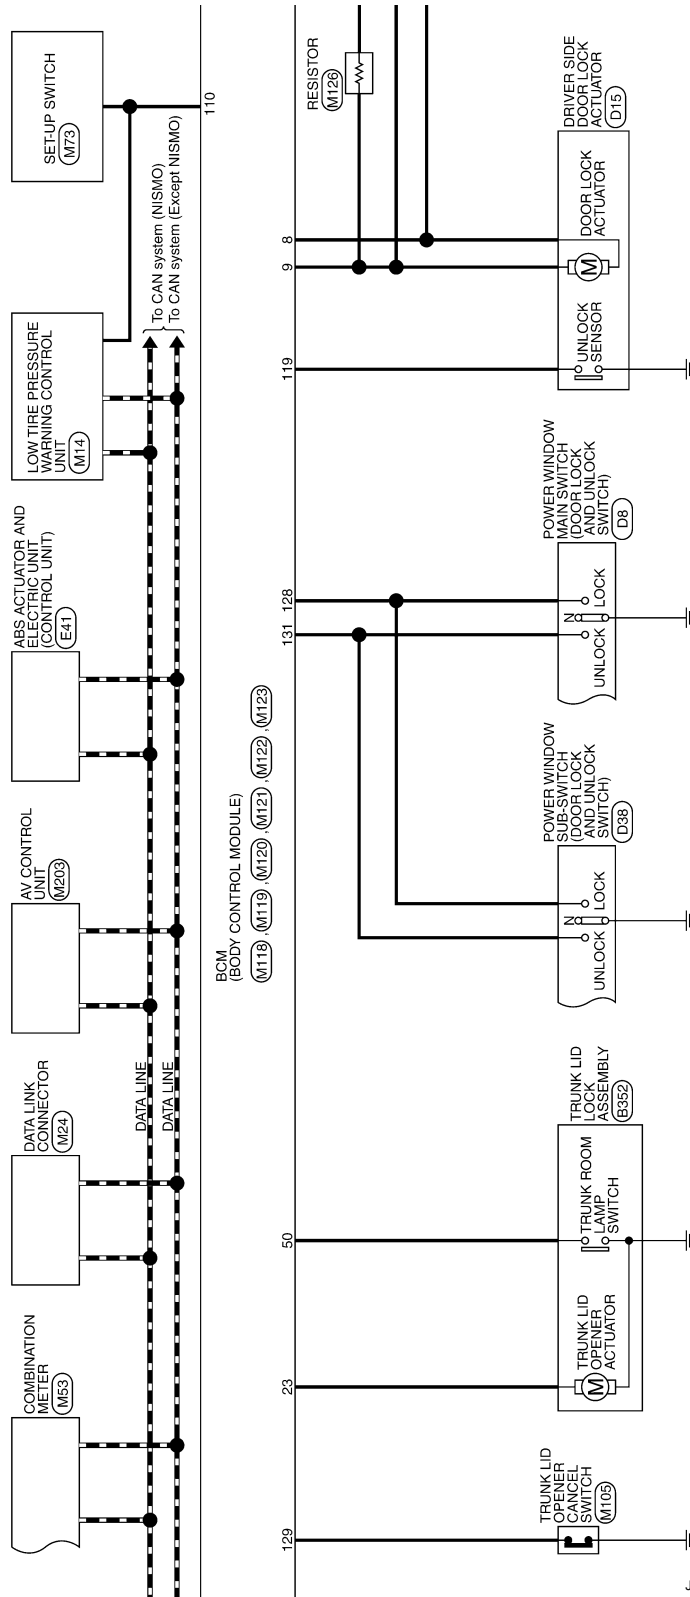


JRMWG7990GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

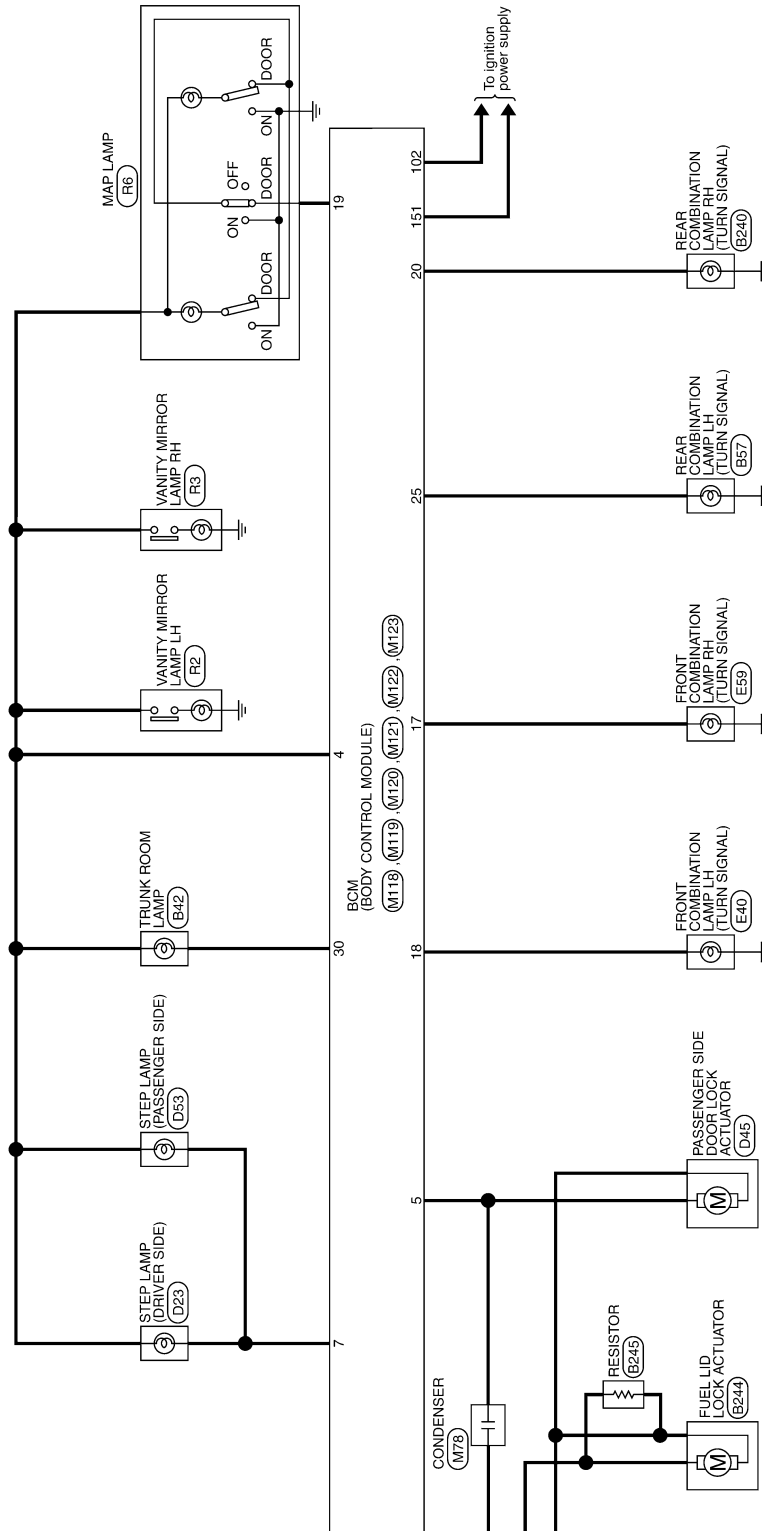


JRMWG7991GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


BCM (BODY CONTROL MODULE)

Connector No.	B20
Connector Name	A/T SHIFT SELECTOR
Connector Type	1H24FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	GR	GR	BCM VCC IN
2	BG	BG	KEY I/LOCK(P)
3	B	B	GROUND
5	G	G	RANGE SENSOR No.1 SIGNAL
6	B	B	GROUND
8	V	V	RANGE SENSOR No.1 SIGNAL
10	G	G	RANGE SENSOR No.3 SIGNAL
12	GR	GR	RANGE SENSOR No.5 SIGNAL
13	Y	Y	VIGN
14	W	W	SHIFT LOCK SOLENOID CONTROL SIGNAL
15	LG	LG	RANGE SENSOR POWER SOURCE 2
16	L	L	RANGE SENSOR POWER SOURCE 1
17	R	R	ILLUMINATION
18	B	B	GROUND
20	BR	BR	AUTOMANUAL RANGE CHANGE SWITCH 1 SIGNAL
21	P	P	RANGE SENSOR No.4 SIGNAL
22	BR	BR	ILLUMINATION GND
23	R	R	RANGE SENSOR No.2 SIGNAL
24	V	V	AUTOMANUAL RANGE CHANGE SWITCH 2 SIGNAL

Connector No.	B21
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A03FW




Terminal No.	Color	Wire	Signal Name [Specification]
1	LG	LG	
2	LG	LG	

Connector No.	B41
Connector Name	INSIDE KEY ANTENNA (TRUNK ROOM)
Connector Type	PK02FGY



Terminal No.	Color	Wire	Signal Name [Specification]
1	L	L	
2	P	P	

Connector No.	B42
Connector Name	TRUNK ROOM LAMP
Connector Type	S02FW



Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	Y	
2	LG	LG	

Connector No.	B45
Connector Name	TCM
Connector Type	RH40FB-R28-L-LHZ



Terminal No.	Color	Wire	Signal Name [Specification]
1	W	W	POWER SUPPLY (MEMORY BACK-UP)-2
3	B	B	GROUND
4	B	B	GROUND
5	W	W	POWER SUPPLY (MEMORY BACK-UP)-3
7	B	B	GROUND
8	B	B	GROUND
9	P	P	POWER SUPPLY (MEMORY BACK-UP)-1
10	LG	LG	BACK-UP LAMP SIGNAL
11	L	L	CANH
14	V	V	POWER OFF
15	P	P	CANL
18	W	W	STOP LAMP SWITCH SIGNAL
17	Y	Y	IGNITION SWITCH SIGNAL
19	GR	GR	STARTER RELAY SIGNAL
23	BR	BR	AUTOMANUAL RANGE CHANGE SWITCH 1 SIGNAL
25	L	L	RANGE SENSOR POWER SOURCE 1
26	LG	LG	RANGE SENSOR POWER SOURCE 2

27	G	G	RANGE SENSOR No.1 SIGNAL
28	V	V	AUTOMANUAL RANGE CHANGE SWITCH 2 SIGNAL
31	SB	SB	ENGINE SPEED SIGNAL
33	V	V	RANGE SENSOR No.1 SIGNAL
34	BG	BG	SAVE MODE SWITCH SIGNAL
35	G	G	RANGE SENSOR No.3 SIGNAL
37	GR	GR	RANGE SENSOR No.2 SIGNAL
38	R	R	RANGE SENSOR No.4 SIGNAL
39	W	W	PADDLE SHIFTER (SHIFT UP) SWITCH SIGNAL
42	L	L	PADDLE SHIFTER (SHIFT DOWN) SWITCH SIGNAL
43	P	P	RANGE SENSOR No.4 SIGNAL
44	GR	GR	RANGE SENSOR No.5 SIGNAL
45	BG	BG	R MODE LAMP SIGNAL
46	W	W	SHIFT LOCK SOLENOID CONTROL SIGNAL
47	G	G	SAVE MODE LAMP SIGNAL

Connector No.	B57
Connector Name	REAR COMBINATION LAMP LH
Connector Type	NS56MW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
1	W	W	
2	R	R	
3	B	B	
4	SB	SB	
5	R	R	
6	Y	Y	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	B60
Connector Name	OUTSIDE KEY ANTENNA (REAR BUMPER)
Connector Type	FKG2FGY




Terminal Color Of No.	Wire	Signal Name [Specification]
1	BR	-
2	R	-

Connector No.	B153
Connector Name	TRUNK LID OPENER REQUEST SWITCH
Connector Type	FKG2ML



Terminal Color Of No.	Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	B221
Connector Name	PASSENGER SIDE DOOR SWITCH
Connector Type	A03FW



Terminal Color Of No.	Wire	Signal Name [Specification]
2	GR	-

Connector No.	B240
Connector Name	REAR COMBINATION LAMP RH
Connector Type	NS68MW-CS



Terminal Color Of No.	Wire	Signal Name [Specification]
1	Y	-
2	R	-
3	B	-
4	Y	-
5	R	-
6	BG	-

Connector No.	B244
Connector Name	FUEL LID LOCK ACTUATOR
Connector Type	M04FW-LC



Terminal Color Of No.	Wire	Signal Name [Specification]
1	G	-
2	V	-

Connector No.	B245
Connector Name	RESISTOR
Connector Type	M04FL-R




Terminal Color Of No.	Wire	Signal Name [Specification]
1	V	-
2	G	-

Connector No.	B352
Connector Name	TRUNK LID LOCK ASSEMBLY
Connector Type	TB03FW-IV



Terminal Color Of No.	Wire	Signal Name [Specification]
1	GR	-
2	B	-
3	P	-

Connector No.	D8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS



Terminal Color Of No.	Wire	Signal Name [Specification]
2	W	-
3	R	-
5	GR	-
6	SB	-
7	O	-
8	B	-
10	G	-
11	L	-
13	BR	-
15	LG	-
16	V	-

JRMWG7993GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	D10
Connector Name	DRIVER SIDE POWER WINDOW MOTOR
Connector Type	NUJ8FDGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
3	G	-
4	L	-
6	GR	-
7	R	-
8	B	-

Connector No.	D13
Connector Name	OUTSIDE HANDLE LH (REQUEST SWITCH)
Connector Type	FKQ2MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	D15
Connector Name	DRIVER SIDE DOOR LOCK ACTUATOR
Connector Type	FSM4FGY-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	SB	-
3	G	-
4	B	-

Connector No.	D23
Connector Name	STEP LAMP (DRIVER SIDE)
Connector Type	G22FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	Y	-

Connector No.	D24
Connector Name	OUTSIDE KEY ANTENNA (DRIVER SIDE)
Connector Type	FKQ2MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	V	-

Connector No.	D38
Connector Name	POWER WINDOW SUB-SWITCH
Connector Type	NS16FW-LS



Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	-
3	V	-
5	SB	-
6	O	-
7	LG	-
8	B	-
9	BR	-
11	W	-
14	R	-
15	G	-
16	L	-

Connector No.	D40
Connector Name	PASSENGER SIDE POWER WINDOW MOTOR
Connector Type	NUJ8FDGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
3	G	-
4	L	-
6	LG	-
7	R	-
8	B	-

Connector No.	D43
Connector Name	OUTSIDE HANDLE RH (REQUEST SWITCH)
Connector Type	FKQ2MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

JRMWG7994GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	D45
Connector Name	PASSENGER SIDE DOOR LOCK ACTUATOR
Connector Type	RSM4FGY-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
3	G	-

Connector No.	D55
Connector Name	STEP LAMP (PASSENGER SIDE)
Connector Type	C02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	Y	-

Connector No.	D54
Connector Name	OUTSIDE KEY ANTENNA (PASSENGER SIDE)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	V	-

Connector No.	E5
Connector Name	FROM ECU INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	THE0FW-0S12-M4-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
6	Y	-
7	R	-
10	W	-
11	SB	-
12	B/W	-
13	R	-
16	LG	-
25	BG	-
27	Y	-
28	G	-
30	GR	-
32	P	-
33	P	-
36	LG	-

Connector No.	E6
Connector Name	FROM ECU INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/Y	-
42	G	-
43	SB	-
44	W	-
46	BG	-

Connector No.	E40
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS08FB-FR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/W	-
2	B/G	-
3	Y	-
4	B/P	-
5	P	-
6	G	-
7	BG	-
8	R	-

Connector No.	E41
Connector Name	ABS ACTIVATOR AND ELECTRIC LAMP CONTROL UNIT
Connector Type	AEZ43FB-AJZ4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	LBMR
2	V	DIAG-K
3	GR	VDC OFF SW
4	W	BLS
6	G	VDC UP SW
11	Y	CAN-H
15	P	CAN-L
16	B	GROUND
26	W	CAN-L
27	BR	G SENSOR GROUND
29	BG	UZ
30	L	CANH
32	BG	UBVR
33	W	DS FR
34	BG	DP FR
35	Y	VDC TOP POSITION LED
36	L	DP RL
37	R	DS RL
38	V	BRAKE FLUID LEVEL SW
39	G	G SENSOR POWER
42	V	DS RR
43	LG	DP RR
44	SB	VDC TOP POSITION LED
45	W	DP FL
46	R	DS FL
47	B	GROUND

JRMWG7995GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	E59
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS08FB-FR




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	BR	-
3	FR	-
4	BO	-
5	R	-
6	V	-
7	BR	-
8	BG	-

Connector No.	E62
Connector Name	INTELLIGENT KEY WARNING BUZZER
Connector Type	FK03FBR-DGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	GR	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
10F	GR	-
11F	Y	-
14F	LG	-
15F	P	-
2F	W	-
4F	W	-
6F	BG	-
8F	L	-
9F	R	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-MZ




Terminal No.	Color Of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	LG	-
5A	SB	-
6A	Y	-
7A	R	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10B	Y	-
1B	R	-
3B	P	-
4B	G	-
5B	BG	-
6B	Y	-
7B	R	-
8B	R	-
9B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	R	-
12C	W	-
9C	R	-
7C	B	-
8C	BR	-

Connector No.	M14
Connector Name	LOW THE PRESSURE WARNING CONTROL UNIT
Connector Type	TH32FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	CANL
2	L	CANH
3	BG	RR TUNER (SIG)
4	L	RL TUNER (SIG)
5	R	FR TUNER (SIG)
6	W	FL TUNER (SIG)
7	SB	RR TUNER (PWR)
8	GR	RL TUNER (PWR)
9	R	FR TUNER (PWR)
10	LG	FL TUNER (PWR)
12	W	SW SIG
15	G	IGN
19	R	RR TUNER (PSS)
20	BG	RL TUNER (PSS)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

JRMWG7996GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)		
21 P	FR TUNER (RSS)	
22 G	FL TUNER (RSS)	
23 GR	RR TUNER (GND)	
24 V	RL TUNER (GND)	
25 L	FR TUNER (GND)	
26 BR	FL TUNER (GND)	
30 G	FLASHER SIG	
32 B	GROUND	
Connector No.	M20	
Connector Name	TRUNK LID OPENER SWITCH	
Connector Type	TK04FW	
Terminal No.	Wire	Signal Name [Specification]
1	G	-
2	B	-
3	R	-
4	V	-
Connector No.	M24	
Connector Name	DATA LINK CONNECTOR	
Connector Type	BD16FW	
Terminal No.	Wire	Signal Name [Specification]
1	G	-
2	B	-
3	R	-
4	V	-
Connector No.	M20	
Connector Name	TRUNK LID OPENER SWITCH	
Connector Type	TK04FW	
Terminal No.	Wire	Signal Name [Specification]
1	G	-
2	B	-
3	R	-
4	V	-
Connector No.	M24	
Connector Name	DATA LINK CONNECTOR	
Connector Type	BD16FW	
Terminal No.	Wire	Signal Name [Specification]
3	R	-
4	B	-
5	B	-
6	L	-
7	V	-
8	G	-
Connector No.	M29	
Connector Name	SECURITY INDICATOR LAMP	
Connector Type	TK02FBR	
Terminal No.	Wire	Signal Name [Specification]
1	Y	-
2	G	-
Connector No.	M40	
Connector Name	STEERING LOCK UNIT	
Connector Type	TH08FW-NH	
Terminal No.	Wire	Signal Name [Specification]
1	BR	SIL 12V (MECHANICAL)
2	Y	SIL (K LINE)
3	L	SIL COND/L10N1
5	B	GND
6	B	GND
7	P	SIL 12V(CPU)
8	R	SIL COND/L10N2
Connector No.	M53	
Connector Name	COMBINATION SWITCH	
Connector Type	TH16FW-NH	
Terminal No.	Wire	Signal Name [Specification]
1	LG	-
2	SB	-
5	L	-
6	B	-
7	V	-
8	BG	-
9	Y	-
10	R	-
11	LG	-
12	P	-
13	BR	-
14	G	-
Connector No.	M53	
Connector Name	COMBINATION METER	
Connector Type	SAB40FW	
Terminal No.	Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	W	IGNITION POWER SUPPLY
3	B	GROUND
4	B	ILLUMINATION GROUND
5	B	GROUND
6	W	METER CONTROL SWITCH GROUND
7	Y	ACT/AMP CONNECTION/ELECTRONIC SIGNAL
8	SB	AMBIENT SENSOR GROUND
9	P	AMBIENT SENSOR SIGNAL
12	L	VEHICLE SPEED SIGNAL (2-PULSE)
13	V	VEHICLE SPEED SIGNAL (8-PULSE)
14	B	OIL PRESSURE SENSOR GROUND
15	R	AIR BAG SIGNAL
Connector No.	M54	
Connector Name	METER CONTROL SWITCH	
Connector Type	TH12FW-NH	
Terminal No.	Wire	Signal Name [Specification]
1	BR	-
2	W	-
3	LG	-
4	R	-
5	V	-
6	BG	-
7	SB	-
8	G	-
Connector No.	M54	
Connector Name	METER CONTROL SWITCH	
Connector Type	TH12FW-NH	
Terminal No.	Wire	Signal Name [Specification]
16	R	LED HEAD LAMP (RH) WARNING SIGNAL
18	L	FUEL LEVEL SENSOR GROUND
19	R	OIL LEVEL SENSOR GROUND
20	W	OIL LEVEL SENSOR SIGNAL
21	L	CAN-H
22	P	CAN-L
23	LG	ILLUMINATION CONTROL SWITCH SIGNAL (-)
24	BR	ILLUMINATION CONTROL SWITCH SIGNAL (+)
25	G	TRIP AB RESET SWITCH SIGNAL
26	BG	ENTER SWITCH SIGNAL
27	SB	SELECT SWITCH SIGNAL
28	BR	ALL TERNATOR
29	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
30	LG	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
31	V	PARKING BRAKE SWITCH SIGNAL
32	V	BRAKE FLUID LEVEL SWITCH SIGNAL
33	L	WASHER LEVEL SWITCH SIGNAL
34	GR	OIL PRESSURE SENSOR POWER
35	W	OIL PRESSURE SENSOR SIGNAL
38	RG	FUEL LEVEL SENSOR SIGNAL
39	Y	LED HEAD LAMP (LH) WARNING SIGNAL
40	V	ILLUMINATION CONTROL

JRMWG7997GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


BCM (BODY CONTROL MODULE)

Connector No.	M59
Connector Name	DIODE
Connector Type	24335_C9800



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	P	-

Connector No.	M60
Connector Name	KEY SLOT
Connector Type	TH12FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	BAT
2	GR	CLOCK
3	L	DATA
5	Y	ILL BATT
6	LG	ILL
7	B	GND
11	R	KEY SWITCH SIGNAL

Connector No.	M73
Connector Name	SET-UP SWITCH
Connector Type	TK24FW-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	VDC TOP POSITION LED
2	R	ILL
3	W	VDC TOP POSITION LED
4	V	VDC GND
5	L	VDC UP SW
6	P	E-SUS R MODE SW SIG
8	LG	E-SUS COMF MODE LAMP SIG
10	G	SAVE MODE LAMP SIGNAL
11	W	R MODE SWITCH SIGNAL
12	GR	VDC DN SW
13	G	HAZARD SW
16	R	R MODE LAMP SIGNAL
17	B	SW GND
18	G	IGN
19	BG	E-SUS R MODE LAMP SIG
23	BR	SAVE MODE SWITCH SIGNAL
24	R	E-SUS COMF MODE SW SIG

Connector No.	M75
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	Y	-

Connector No.	M78
Connector Name	CONDENSER
Connector Type	M02FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	G	-

Connector No.	M97
Connector Name	OPTICAL SENSOR
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	POWER
2	P	OUTPUT
3	V	GROUND

Connector No.	M105
Connector Name	TRUNK LID OPENER CANCEL SWITCH
Connector Type	S02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	B	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (FL)
2	R	POWER WINDOW POWER SUPPLY(BAT)
3	W	POWER WINDOW POWER SUPPLY(BAT)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

JRMWG7998GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)		
Connector No.	Wire	Signal Name [Specification]
M119		BCM (BODY CONTROL MODULE)
Connector Name		BCM (BODY CONTROL MODULE)
Connector Type		NS16FW-CS
Terminal No.	Wire	Signal Name [Specification]
4	R	INTERIOR ROOM LAMP POWER SUPPLY
5	G	PASSENGER DOOR UNLOCK OUTPUT
6	Y	STEP LAMP
7	V	ALL DOOR FUEL LID LOCK OUTPUT
8	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
9	R	BAT (FUSE)
11	B	GND
13	B	GND
14	P	PUSH-BUTTON IGNITION SW (LL) GND
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT) OUTPUT
18	EG	TURN SIGNAL LH (FRONT) OUTPUT
19	V	ROOM LAMP TIMER CONTROL
Connector No.		M120
Connector Name		BCM (BODY CONTROL MODULE)
Connector Type		NS12FW-CS
Terminal No.	Wire	Signal Name [Specification]
20	SB	TURN SIGNAL RH (REAR) OUTPUT
23	G	TRUNK LID OPEN OUTPUT
25	V	TURN SIGNAL LH (REAR) OUTPUT
30	EG	TRUNK ROOM LAMP OUTPUT
Connector No.		M121
Connector Name		BCM (BODY CONTROL MODULE)
Connector Type		TH40FGY-NH
Terminal No.	Wire	Signal Name [Specification]
34	P	TRUNK ROOM ANT-
35	L	TRUNK ROOM ANT+
38	R	REAR BUMPER ANT-
39	ER	REAR BUMPER ANT+
47	Y	IGN RELAY (RPM) EGR CONT
50	R	TRUNK ROOM LAMP SW
52	SB	STARTER RELAY CONT
61	W	TRUNK LID REQUEST SW
64	EG	KEY WARN BUZZER (ENG ROOM)
67	G	TRUNK LID OPENER SW
Connector No.		M122
Connector Name		BCM (BODY CONTROL MODULE)
Connector Type		TH40FB-NH
Terminal No.	Wire	Signal Name [Specification]
72	R	ROOM ANT2-
73	G	ROOM ANT2+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT1-
79	BR	ROOM ANT1+
80	GR	IMMOBI ANTENNA CONTROL
81	L	IMMOBI ANTENNA SIGNAL
Connector No.		M123
Connector Name		BCM (BODY CONTROL MODULE)
Connector Type		TH40FG-NH
Terminal No.	Wire	Signal Name [Specification]
82	R	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMM
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL OUTPUT
93	V	ON IND
95	EG	ACC RELAY CONT
96	SB	AT SHIFT SELECTOR POWER SUPPLY
97	L	S/L CONDITION 1
98	R	S/L CONDITION 2
99	G	SHIFT P
100	W	PASSENGER DOOR REQUEST SW
101	V	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	P	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	G	HAZARD SW
111	Y	S/L UNIT COMM
Connector No.		M126
Connector Name		RESISTOR
Connector Type		M04FL-R
Terminal No.	Wire	Signal Name [Specification]
1	G	
2	L	
Connector No.		M131
Connector Name		PUSH-BUTTON IGNITION SWITCH
Connector Type		TK08FB-R
Terminal No.	Wire	Signal Name [Specification]
1	B	
2	P	
3	W	
Connector No.		M124
Connector Name		BCM (BODY CONTROL MODULE)
Connector Type		TH40FG-NH
Terminal No.	Wire	Signal Name [Specification]
113	P	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	R	KEY SLOT SW
123	BR	IGN EFB
124	LG	PASSENGER DOORS SW
126	B	DOOR LOCK UNLOCK SW LOCK
129	BG	TRUNK GANSEL SW
131	BR	DOOR LOCK UNLOCK SW UNLOCK
Connector No.		M125
Connector Name		BCM (BODY CONTROL MODULE)
Connector Type		TH40FG-NH
Terminal No.	Wire	Signal Name [Specification]
133	W	PUSH-BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND
137	L	RECEIVER GND
138	Y	REVERSE SENSOR POWER SUPPLY
140	BR	SHIFT NP
141	G	SECURITY INDICATOR
142	BG	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

JRMWG7999GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

4	BR	-	-
5	GR	-	-
6	Y	-	-
7	V	-	-
8	G	-	-

Connector No.	M134
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	JAB04FB




Terminal No.	Wire	Signal Name [Specification]
1	L	GND
2	Y	SIGNAL OUTPUT
4	LG	BATTERY

Connector No.	M146
Connector Name	INSIDE KEY ANTENNA (CONSOLE)
Connector Type	RK02FGY



Terminal No.	Wire	Signal Name [Specification]
1	G	-
2	R	-

Connector No.	M203
Connector Name	AV CONTROL UNIT
Connector Type	TH02FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
65	R	PARKING BRAKE
67	W	COMPOSITE IMAGE GND
68	R	COMPOSITE IMAGE SIGNAL
71	SHIELD	MICROPHONE GND
72	L	MICROPHONE VCC
73	V	COMM (CONT-DISP)
74	P	CAN-L
75	R	AV COMM (L)
76	R	AV COMM (L)
79	R	ILLUMINATION
80	W	IGNITION
81	BG	REVERSE
82	V	VEHICLE SPEED (8-PULSE)
83	SHIELD	SHIELD
84	B	COMPOSITE SYNCHRONIZING SIGNAL
87	P	MICROPHONE SIGNAL
88	SHIELD	SHIELD
89	SB	COMM (DISP-CONT)
90	L	CAN-H
91	G	AV COMM (H)
92	G	AV COMM (H)

Connector No.	R2
Connector Name	VANITY MIRROR LAMP LH
Connector Type	MCA02FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-

Connector No.	R3
Connector Name	VANITY MIRROR LAMP RH
Connector Type	MCA02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-

Connector No.	R6
Connector Name	MAP LAMP
Connector Type	TK06FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	V	-
3	B	-

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JRMWG8000GB

INFOID:000000011813665

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Shift lever P position switch signal • P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Shift lever P position switch signal: Except P position (Battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Shift lever P position switch signal: Except P position (Battery voltage) • Shift lever P/N position signal: Except P and N positions (0 V)
B2604: PNP/CLUTCH SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Shift lever P/N position signal: P and N position (Battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Shift lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF
B2605: PNP/CLUTCH SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position <ul style="list-style-type: none"> - Power position: IGN - Shift lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Shift lever P/N position signal: P or N position (Battery voltage) - PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When the following steering lock conditions agree <ul style="list-style-type: none"> • BCM steering lock control status • Steering lock condition No. 1 signal status • Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Steering lock unit status signal (CAN) is received normally • The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: BCM	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E9: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> • Steering condition No. 1 signal: LOCK (0 V) • Steering condition No. 2 signal: LOCK (Battery voltage)

DTC Inspection Priority Chart

INFOID:000000011813666

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> • U1000: CAN COMM • U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI-SCANNING

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Priority	DTC
4	<ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP/CLUTCH SW • B2605: PNP/CLUTCH SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2612: S/L STATUS • B2614: BCM • B2615: BCM • B2616: BCM • B2617: BCM • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E9: S/L STATUS • B26EA: KEY REGISTRATION • U0415: VEHICLE SPEED
5	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA
6	B26E7: TPMS CAN COMM

DTC Index

INFOID:000000011813667

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-17, "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference page
No DTC is detected. Further testing may be required.	—	—	—	—
U1000: CAN COMM	—	—	—	BCS-36
U1010: CONTROL UNIT (CAN)	—	—	—	BCS-37
U0415: VEHICLE SPEED	—	—	—	BCS-38
B2013: ID DISCORD BCM-S/L	×	×	—	SEC-48
B2014: CHAIN OF S/L-BCM	×	×	—	SEC-49
B2190: NATS ANTENNA AMP	×	—	—	SEC-40

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference page	A
B2191: DIFFERENCE OF KEY	×	—	—	SEC-43	B
B2192: ID DISCORD BCM-ECM	×	—	—	SEC-44	C
B2193: CHAIN OF BCM-ECM	×	—	—	SEC-46	D
B2195: ANTI-SCANNING	×	—	—	SEC-47	E
B2553: IGNITION RELAY	—	×	—	PCS-50	F
B2555: STOP LAMP	—	×	—	SEC-52	G
B2556: PUSH-BTN IGN SW	—	×	×	SEC-54	H
B2557: VEHICLE SPEED	×	×	×	SEC-56	I
B2560: STARTER CONT RELAY	×	×	×	SEC-57	J
B2562: LOW VOLTAGE	—	×	—	BCS-39	K
B2601: SHIFT POSITION	×	×	×	SEC-58	L
B2602: SHIFT POSITION	×	×	×	SEC-61	M
B2603: SHIFT POSI STATUS	×	×	×	SEC-63	N
B2604: PNP/CLUTCH SW	×	×	×	SEC-65	O
B2605: PNP/CLUTCH SW	×	×	×	SEC-67	P
B2606: S/L RELAY	×	×	×	SEC-69	Q
B2607: S/L RELAY	×	×	×	SEC-70	R
B2608: STARTER RELAY	×	×	×	SEC-72	S
B2609: S/L STATUS	×	×	×	SEC-74	T
B260A: IGNITION RELAY	×	×	×	PCS-52	U
B260B: STEERING LOCK UNIT	—	×	×	SEC-78	V
B260C: STEERING LOCK UNIT	—	×	×	SEC-79	W
B260D: STEERING LOCK UNIT	—	×	×	SEC-80	X
B260F: ENG STATE SIG LOST	×	×	×	SEC-81	Y
B2612: S/L STATUS	×	×	×	SEC-84	Z
B2614: BCM	—	×	×	PCS-54	AA
B2615: BCM	—	×	×	PCS-56	AB
B2616: BCM	—	×	×	PCS-58	AC
B2617: BCM	×	×	×	SEC-88	AD
B2618: BCM	×	×	×	PCS-60	AE
B2619: BCM	×	×	×	SEC-90	AF
B261A: PUSH-BTN IGN SW	—	×	×	SEC-91	AG
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	SEC-93	AH
B2621: INSIDE ANTENNA	—	×	—	DLK-56	AI
B2622: INSIDE ANTENNA	—	×	—	DLK-58	AJ
B2623: INSIDE ANTENNA	—	×	—	DLK-60	AK
B26E7: TPMS CAN COMM	—	—	—	BCS-40	AL
B26E9: S/L STATUS	×	×	× (Turn ON for 15 seconds)	SEC-82	AM
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	SEC-83	AN

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000011813668

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND or HI		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND or HI		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Daytime running light system is not operated		Off
	Daytime running light system is operated		On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Shift lever in any position other than P or N	Off
	Ignition switch ON	Shift lever in P or N position	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
ST/INHI RLY	Ignition switch ON	Off	A
	At engine cranking	INHI → ST ON	
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN	B
DETENT SW	Ignition switch ON	<ul style="list-style-type: none"> Press the knob button with shift lever in P position Shift lever in any position other than P 	C
	Release the knob button with shift lever in P position	On	D
S/L RLY -REQ	None of the conditions below are present	Off	
	<ul style="list-style-type: none"> Open the driver door after the ignition switch is turned OFF (for a few seconds) Press the push-button ignition switch when the steering lock is activated 	On	E
S/L STATE	Steering lock is activated	LOCK	
	Steering lock is deactivated	UNLOCK	F
	[DTC: B210A] is detected	UNKWN	
DTRL REQ	Lighting switch OFF	Off	G
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)	On	
OIL P SW	NOTE: The item is indicated, but not monitored.	Open	H
HOOD SW	Close the hood	Off	
	Open the hood	On	I
HL WASHER REQ	NOTE: The item is indicated, but not monitored.	Off	
THFT HRN REQ	Not operating	Off	J
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	On	
HORN CHIRP	Not operating	Off	K
	<ul style="list-style-type: none"> Door locking with Intelligent Key (horn chirp mode) Door locking with key fob (horn chirp mode) 	On	
CRNRNG LMP REQ	NOTE: The item is indicated, but not monitored.	Off	WW

WW

M

N


O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

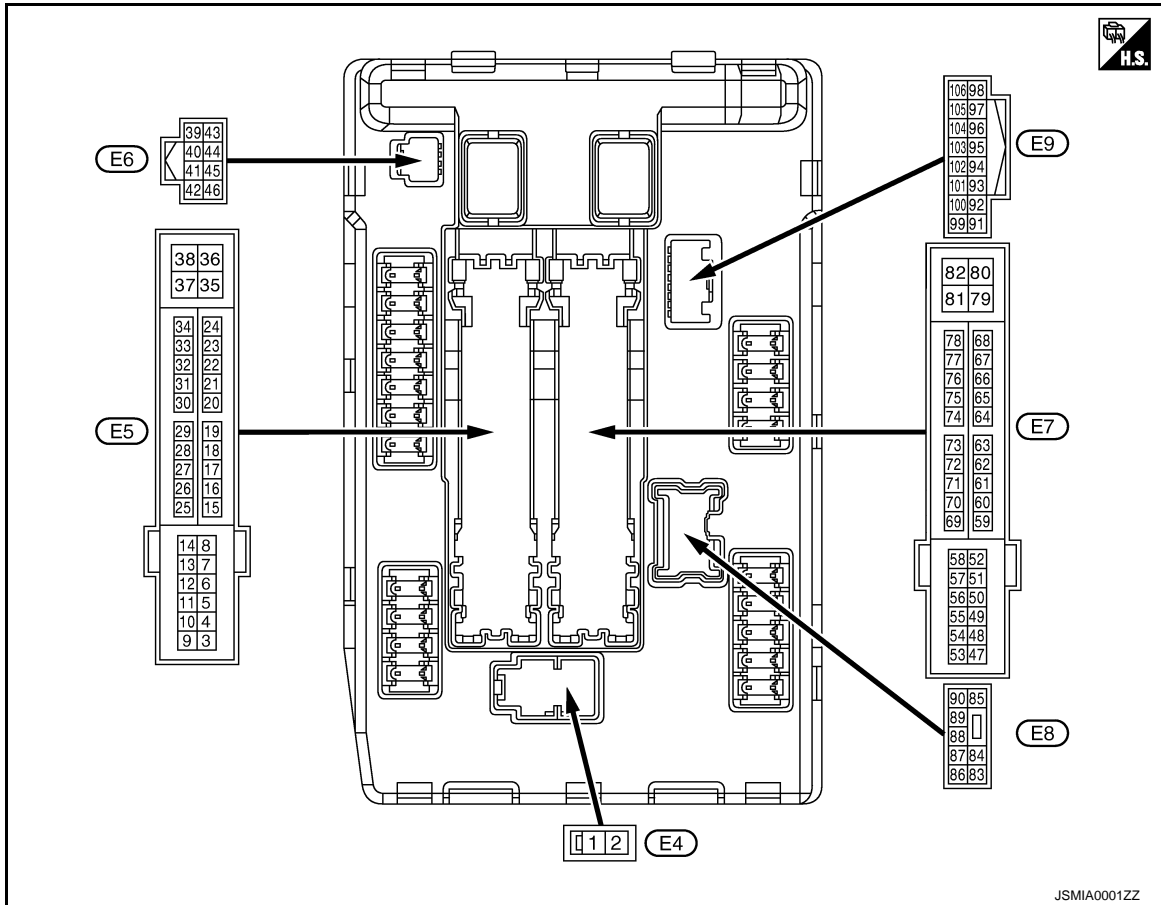

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (Y)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (V)	Ground	Front wiper LO	Output	Ignition switch OFF	Front wiper switch OFF	0 V
				Ignition switch ON	Front wiper switch LO	Battery voltage
5 (L)	Ground	Front wiper HI	Output	Ignition switch OFF	Front wiper switch OFF	0 V
				Ignition switch ON	Front wiper switch HI	Battery voltage
6 (Y)	Ground	Daytime running light relay power supply	Input	Ignition switch OFF	Lighting switch OFF	Battery voltage
				Ignition switch ON	Lighting switch 1ST	0 V
7 (R)	Ground	Illuminations	Output	Ignition switch OFF	Lighting switch OFF	0 V
				Ignition switch ON	Lighting switch 1ST	Battery voltage
10 (W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 		Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)	
+	-	Signal name	Input/ Output				
11 (SB)	Ground	Steering lock unit power supply	Output	Ignition switch OFF	A few seconds after opening the driver door	Battery voltage	A
				Ignition switch LOCK	Press the push-button ignition switch	Battery voltage	B
				Ignition switch ACC or ON		0 V	C
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V	D
13 (R)	Ground	Fuel pump power supply	Output	Ignition switch OFF		0 V	D
				<ul style="list-style-type: none"> Ignition switch ON Engine running 		Battery voltage	E
16 (LG)	Ground	Front wiper stop position	Input	Ignition switch ON	Front wiper stop position	0 V	E
					Any position other than front wiper stop position	Battery voltage	F
25 (O)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V	F
				Ignition switch ON		Battery voltage	G
27 (Y)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage	G
				Ignition switch ON		0 V	H
28 (G)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V	H
				Release the push-button ignition switch		Battery voltage	I
30 (GR)	Ground	Starter relay control	Input	Shift lever in any position other than P or N (Ignition switch ON)		0.4 V	I
				Shift lever P or N (Ignition switch ON)		Battery voltage	J
32 (L)	Ground	Steering lock unit condition-1	Input	Steering lock is activated		0 V	J
				Steering lock is deactivated		Battery voltage	K
33 (P)	Ground	Steering lock unit condition-2	Input	Steering lock is activated		Battery voltage	K
				Steering lock is deactivated		0 V	L
36 (LG)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage	L
39 (P)	—	CAN-L	Input/ Output	—		—	WW
40 (L)	—	CAN-H	Input/ Output	—		—	M
41 (B/Y)	Ground	Ground	—	Ignition switch ON		0 V	M
42 (G)	Ground	Cooling fan relay control	Input	Ignition switch OFF or ACC		Battery voltage	N
				Ignition switch ON		0.7 V	O
43 (SB)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	<ul style="list-style-type: none"> Press the knob button (Shift lever P) Shift lever in any position other than P 	Battery voltage	O
					Release the knob button (Shift lever P)	0 V	P
44 (W)	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage	P
				The horn is activated		0 V	
46 (O)	Ground	Starter relay control	Input	Shift lever in any position other than P or N (Ignition switch ON)		0 V	
				Shift lever P or N (Ignition switch ON)		Battery voltage	




IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
48 (L)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage
49 (P)	Ground	ECM relay power supply	Output		Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
					<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
51 (LG)	Ground	Ignition relay power supply	Output		Ignition switch OFF	0 V
					Ignition switch ON	Battery voltage
53 (SB)	Ground	ECM relay power supply	Output		Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
					<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
54 (W)	Ground	Throttle control motor relay power supply	Output		Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
					<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
55 (O)	Ground	ECM power supply	Output		Ignition switch OFF	Battery voltage
56 (R)	Ground	Ignition relay power supply	Output		Ignition switch OFF	0 V
					Ignition switch ON	Battery voltage
57 (G)	Ground	Ignition relay power supply	Output		Ignition switch OFF	0 V
					Ignition switch ON	Battery voltage
58 (Y)	Ground	Ignition relay power supply	Output		Ignition switch OFF	0 V
					Ignition switch ON	Battery voltage
69 (O)	Ground	ECM relay control	Output		Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage
					<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	0 - 1.5 V
70 (G)	Ground	Throttle control motor relay control	Output		Ignition switch ON → OFF	0 - 1.0 V ↓ Battery voltage ↓ 0 V
					Ignition switch ON	0 - 1.0 V
71 (SB)	Ground	Ignition relay power supply	Output		Ignition switch OFF	0 V
					Ignition switch ON	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

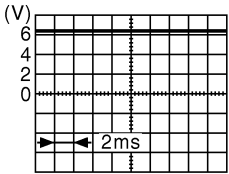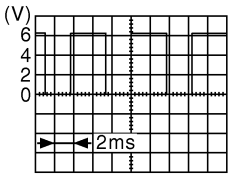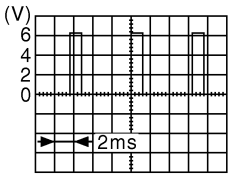Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
74 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
76 (P)	Ground	Power generation command signal	Output	Ignition switch ON	 <small>JPMIA0001GB</small> 6.3 V	
				40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 <small>JPMIA0002GB</small> 3.8 V	
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 <small>JPMIA0003GB</small> 1.4 V	
77 (B/W)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> • Ignition switch ON • Engine running 	0 V	
80 (W)	Ground	Starter motor	Output	At engine cranking	Battery voltage	
83 (R)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
				Lighting switch 2ND	Battery voltage	
84 (P)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
				Lighting switch 2ND	Battery voltage	
86* (W)	Ground	Daytime running light (RH)	Output	Daytime running light system	Not operated	0 V
				Operated	Battery voltage	
87* (L)	Ground	Daytime running light (LH)	Output	Daytime running light system	Not operated	0 V
				Operated	Battery voltage	
88 (G)	Ground	Washer pump power supply	Output	Ignition switch ON	Battery voltage	
89 (BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
				• Lighting switch HI • Lighting switch PASS	Battery voltage	
90 (O)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
				• Lighting switch HI • Lighting switch PASS	Battery voltage	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >


Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
97 (Y)	Ground	Cooling fan control	Output	Engine idling	0 - 5 V
104 (LG)	Ground	Hood switch	Input	Close the hood	Battery voltage
				Open the hood	0 V
105 (GR)	Ground	Daytime running light relay control	Input	Ignition switch ON	Battery voltage
				Lighting switch OFF	Battery voltage
				Lighting switch 1ST	0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - IPDM E/R -

INFOID:000000011813669

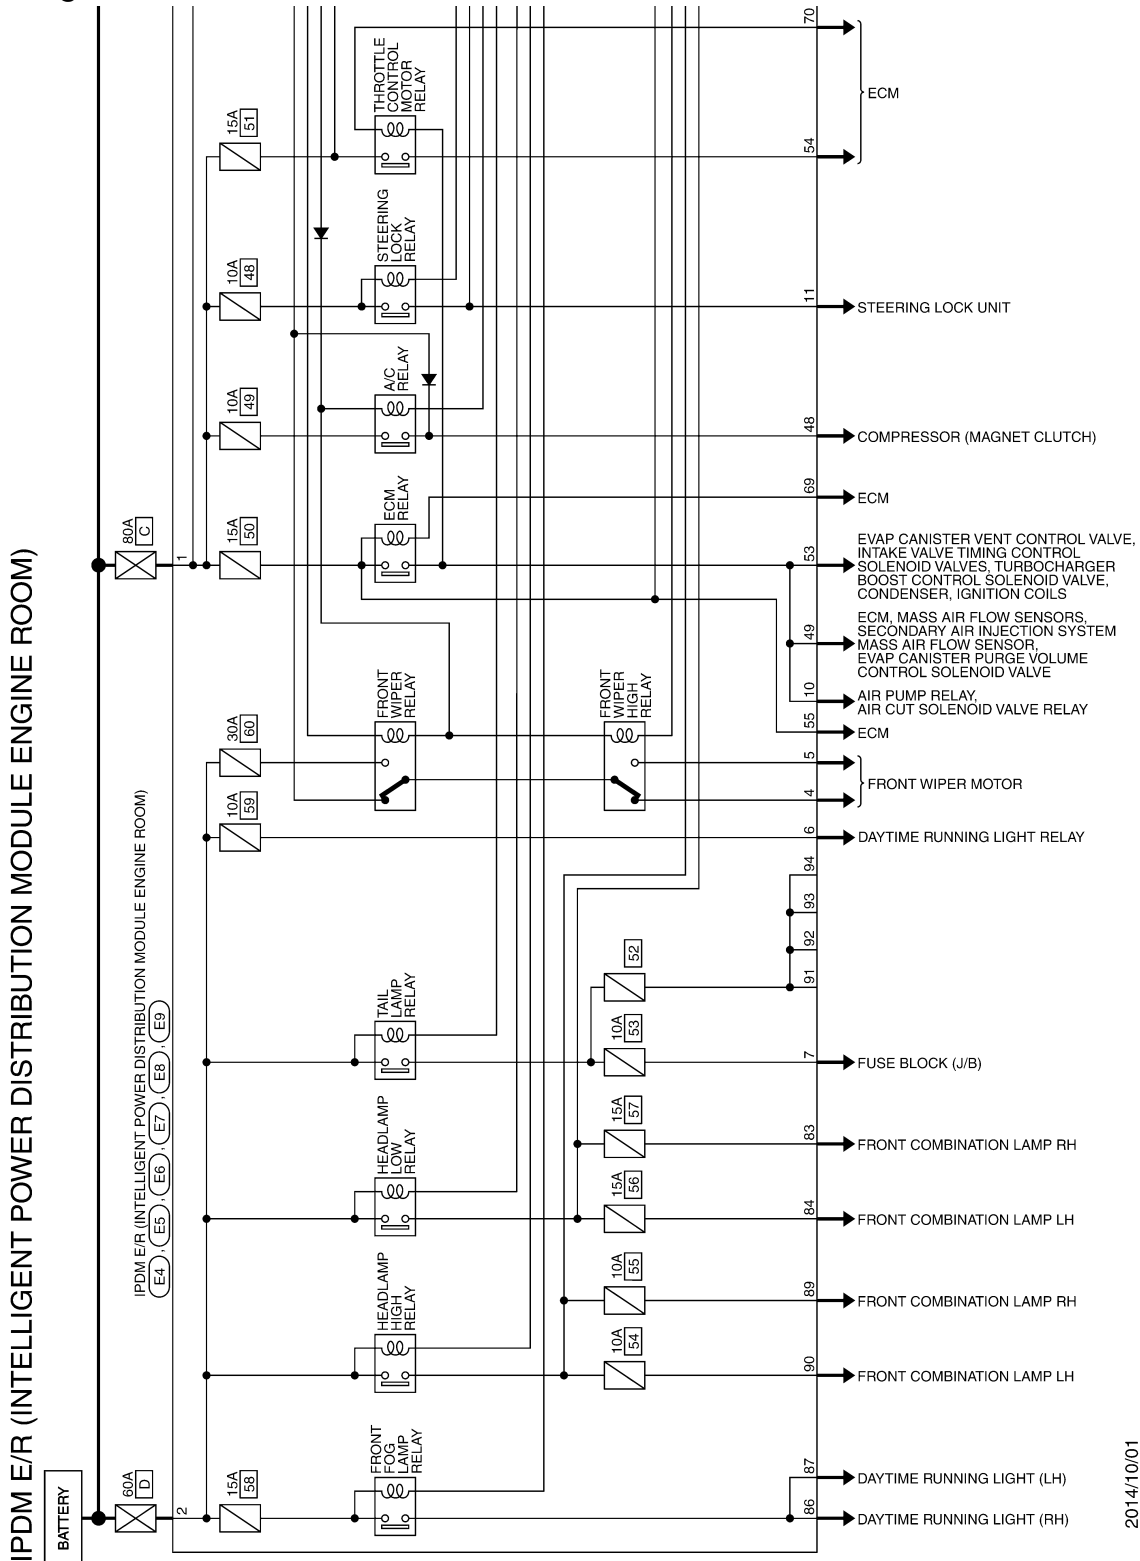

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


WW

2014/10/01

JRMWG8094GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

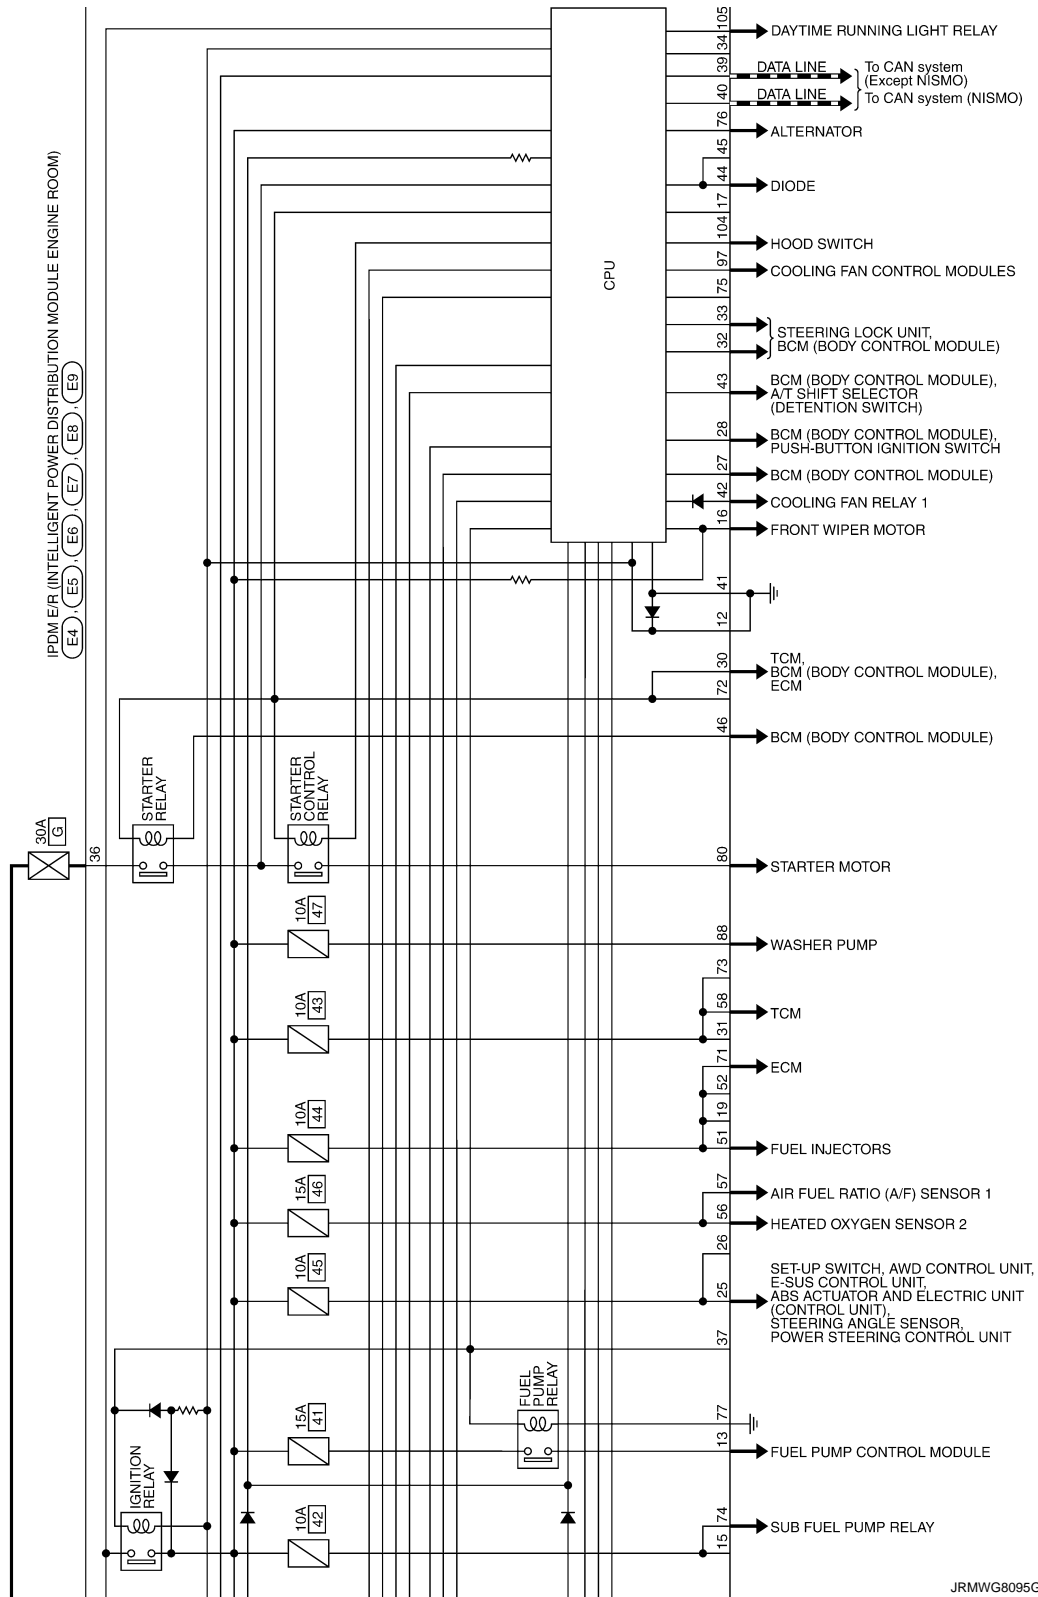


JRMWG8095GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

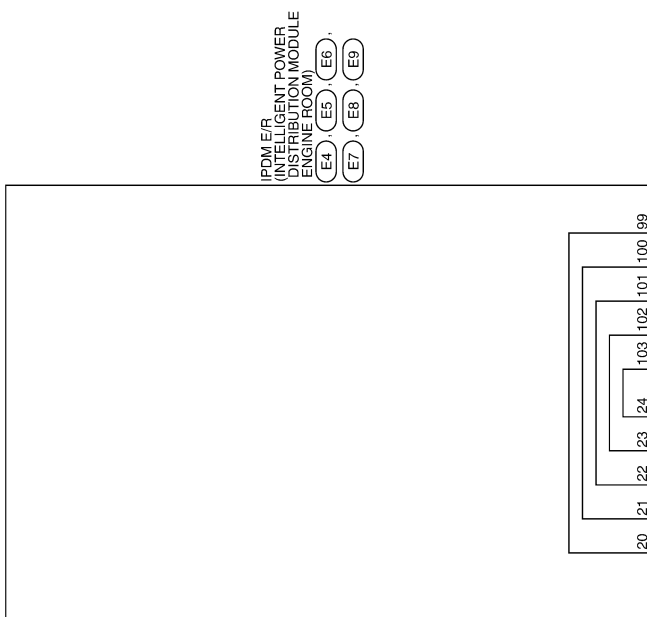








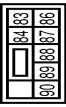

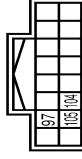


WW

JRMWG8096GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)			
Connector No.	E4	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	
Connector Name	LU2FBMC		
Connector Type			
			
Terminal Color Of No.	Wire	Signal Name [Specification]	
1	W	-	
2	Y	-	
			
Connector No.	E5	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	
Connector Name	TH20FW-CS2-M4-1V		
Connector Type			
			
Terminal Color Of No.	Wire	Signal Name [Specification]	
1	W	-	
2	Y	-	
			
Connector No.	E6	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	
Connector Name	TH38FW-NH		
Connector Type			
			
Terminal Color Of No.	Wire	Signal Name [Specification]	
39	P	-	
40	L	-	
41	BY	-	
42	G	-	
43	SB	-	
44	W	-	
46	BG	-	
			
Connector No.	E7	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	
Connector Name	TH20FW-CS2-M4		
Connector Type			
			
Terminal Color Of No.	Wire	Signal Name [Specification]	
48	L	-	
49	P	-	
51	LG	-	
53	SB	-	
54	W	-	
55	BG	-	
56	R	-	
57	G	-	
58	Y	-	
69	BG	-	
70	G	-	
71	SB	-	
			
Connector No.	E8	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	
Connector Name	NS08FW-CS		
Connector Type			
			
Terminal Color Of No.	Wire	Signal Name [Specification]	
83	R	-	
84	P	-	
86	W	-	
87	L	-	
88	G	-	
89	BR	-	
90	BG	-	
			
Connector No.	E9	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	
Connector Name	TH16FW-NH		
Connector Type			
			
Terminal Color Of No.	Wire	Signal Name [Specification]	
97	Y	-	
104	LG	-	
105	GR	-	
			

JRMWG8015GB

INFOID:000000011813670

Fail-safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> • Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON • Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF
A/C compressor	A/C relay OFF

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF
Illuminations	<ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Steering lock unit	Steering lock relay OFF
<ul style="list-style-type: none"> • Parking lamps • License plate lamps • Side marker lamps • Tail lamps 	Daytime running light relay OFF
Daytime running light	Front fog lamp relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay and daytime running light relay* for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

WW

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> • Detects DTC "B2098: IGN RELAY ON CIRC" • Turns ON the tail lamp relay and daytime running light relay* for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF CIRC"

*: With daytime running light system

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000011813671

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now.
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-14
B2098: IGN RELAY ON CIRC	×	PCS-15
B2099: IGN RELAY OFF CIRC	—	PCS-17
B2108: S/L RELAY ON	—	SEC-94
B2109: S/L RELAY OFF	—	SEC-95
B210A: S/L STATE SW	—	SEC-96
B210B: STR CONT RLY ON CIRC	—	SEC-100
B210C: STR CONT RLY OFF CIRC	—	SEC-101
B210D: STARTER RLY ON CIRC	—	SEC-102
B210E: STARTER RLY OFF CIRC	—	SEC-103
B210F: INTRLCK/PNP SW ON	—	SEC-105
B2110: INTRLCK/PNP SW OFF	—	SEC-107

WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

WIPER AND WASHER SYSTEM SYMPTOMS

Symptom Table

INFOID:000000011487336

CAUTION:

Perform the self-diagnosis with CONSULT before performing the diagnosis by symptom. Perform the diagnosis by DTC if DTC is detected.

Symptom		Probable malfunction location	Inspection item
Front wiper does not operate.	HI only	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-86, "Symptom Table" .
		<ul style="list-style-type: none"> • IPDM E/R • Harness between IPDM E/R and front wiper motor • Front wiper motor 	Front wiper motor (HI) circuit Refer to WW-22, "Component Function Check" .
		Front wiper request signal <ul style="list-style-type: none"> • BCM • IPDM E/R 	IPDM E/R DATA MONITOR "FR WIP REQ"
	LO and INT	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-86, "Symptom Table" .
		<ul style="list-style-type: none"> • IPDM E/R • Harness between IPDM E/R and front wiper motor • Front wiper motor 	Front wiper motor (LO) circuit Refer to WW-20, "Component Function Check" .
		Front wiper request signal <ul style="list-style-type: none"> • BCM • IPDM E/R 	IPDM E/R DATA MONITOR "FR WIP REQ"
	INT only	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-86, "Symptom Table" .
		Front wiper request signal <ul style="list-style-type: none"> • BCM • IPDM E/R 	IPDM E/R DATA MONITOR "FR WIP REQ"
	HI, LO and INT	SYMPTOM DIAGNOSIS "FRONT WIPER DOES NOT OPERATE" Refer to WW-88, "Diagnosis Procedure" .	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom	Probable malfunction location	Inspection item	
Front wiper does not stop.	HI only	<ul style="list-style-type: none"> • Combination switch • BCM 	Combination switch Refer to BCS-86, "Symptom Table" .
		Front wiper request signal	IPDM E/R DATA MONITOR "FR WIP REQ"
		IPDM E/R	—
	LO only	<ul style="list-style-type: none"> • Combination switch • BCM 	Combination switch Refer to BCS-86, "Symptom Table" .
		Front wiper request signal	IPDM E/R DATA MONITOR "FR WIP REQ"
		IPDM E/R	—
	INT only	<ul style="list-style-type: none"> • Combination switch • BCM 	Combination switch Refer to BCS-86, "Symptom Table" .
		Front wiper request signal	IPDM E/R DATA MONITOR "FR WIP REQ"
	Front wiper does not operate normally.	Intermittent adjustment cannot be performed.	<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM
BCM			—
Intermittent control linked with vehicle speed cannot be performed.		Check the vehicle speed detection wiper setting. Refer to WW-12, "WIPER : CONSULT Function (BCM - WIPER)" . NOTE: Factory setting of the front wiper intermitted operation is the operation without vehicle speed.	
Wiper is not linked to the washer operation.		<ul style="list-style-type: none"> • Combination switch • Harness between combination switch and BCM • BCM 	Combination switch Refer to BCS-86, "Symptom Table" .
		BCM	—
Does not return to stop position. [Repeatedly operates for 10 seconds and then stops for 20 seconds. After that, it stops the operation. (Fail-safe)]	<ul style="list-style-type: none"> • IPDM E/R • Harness between IPDM E/R and front wiper motor • Front wiper motor 	Front wiper stop position signal circuit Refer to WW-24, "Component Function Check" .	

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000011487337

FRONT WIPER MOTOR PROTECTION FUNCTION

- IPDM E/R may stop the front wiper to protect the front wiper motor if any obstruction (operation resistance) such as a large amount of snow is detected during the front wiper operation.
- At that time turn OFF the front wiper and remove the foreign object. Then wait for approximately 20 seconds or more and reactivate the front wiper. The wiper will operate normally.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

FRONT WIPER DOES NOT OPERATE

Description

INFOID:000000011487338

The front wiper does not operate under any operating conditions.

Diagnosis Procedure

INFOID:000000011487339

1. CHECK WIPER RELAY OPERATION

⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-9, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO/HI operation.

Ⓟ CONSULT ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check that front wiper LO/HI operation and OFF.

Lo : Front wiper LO operation

Hi : Front wiper HI operation

Off : Stop the front wiper.

Does the front wiper operate?

YES >> GO TO 4.

NO >> GO TO 2.

2. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the front wiper motor 30 A (#60) fuse is not fusing.

Is the fuse fusing?

YES >> Replace the fuse after repairing the applicable circuit.

NO >> GO TO 3.

3. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Disconnect front wiper motor connector.
2. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		Existed
E42	2		

Does continuity exist?

YES >> GO TO 4.

NO >> Repair the harness or connector.

4. CHECK FRONT WIPER REQUEST SIGNAL INPUT

Ⓟ CONSULT DATA MONITOR

1. Select "FR WIP REQ" of IPDM E/R data monitor item.
2. Switch the front wiper switch to HI and LO.
3. With operating the front wiper switch, check the monitor status.

Monitor item	Condition	Monitor status	
FR WIPER REQ	Front wiper switch HI	ON	Hi
		OFF	Stop
	Front wiper switch LO	ON	Low
		OFF	Stop

Is the status of item normal?

YES >> Replace IPDM E/R.

FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

NO >> GO TO 5.

5.CHECK COMBINATION SWITCH

Perform the inspection of the combination switch. Refer to [BCS-86, "Symptom Table"](#).

Is combination switch normal?

YES >> Replace BCM. Refer to [BCS-89, "Exploded View"](#).

NO >> Repair or replace the applicable parts.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011487340

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000011487341

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

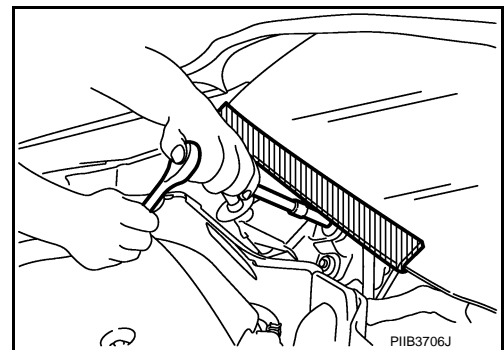

Precaution for Battery Service

INFOID:000000011487342

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

PRECAUTIONS

< PRECAUTION >

Precautions for Removing Battery Terminal

INFOID:000000011487343

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

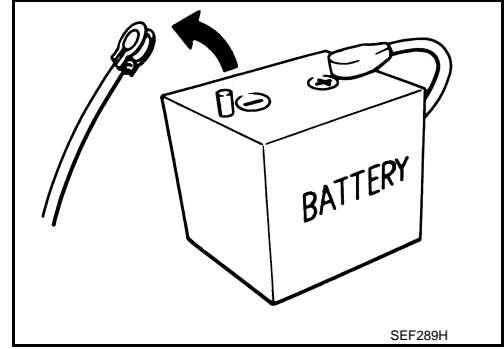

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

WASHER TANK


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

WASHER TANK

Exploded View

INFOID:000000011487344

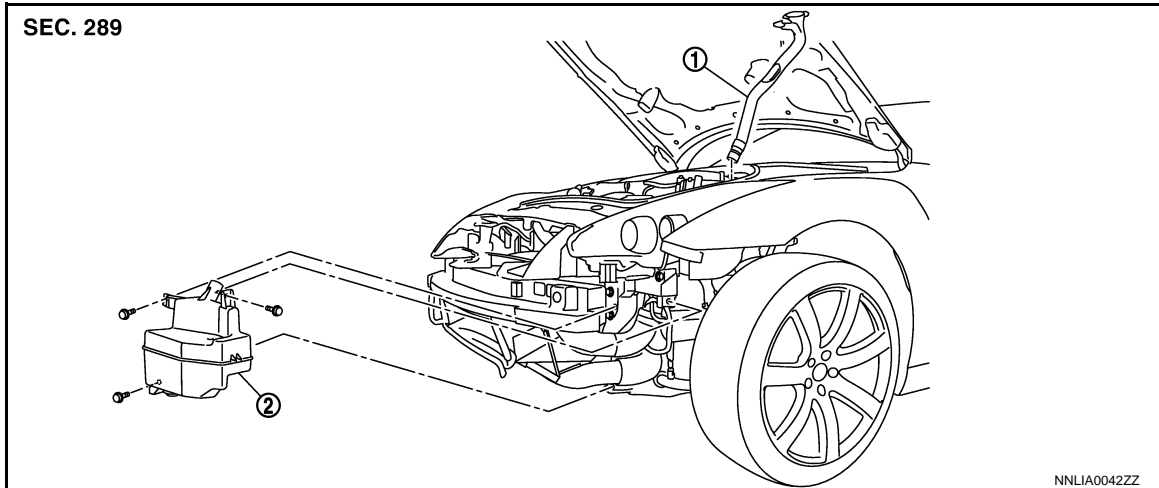

1. Washer tank inlet

2. Washer tank

Removal and Installation


INFOID:000000011487345

REMOVAL

1. Remove the clip (A)

← : Vehicle front

2. Pull out the washer tank inlet from the washer tank.
3. Remove the front bumper fascia. Refer to [EXT-14, "Exploded View"](#).
4. Disconnect the washer pump connector.
5. Disconnect the washer level switch connector.
6. Disconnect the front washer tube.
7. Remove the washer tank mounting bolts.
8. Remove the washer tank from the vehicle.

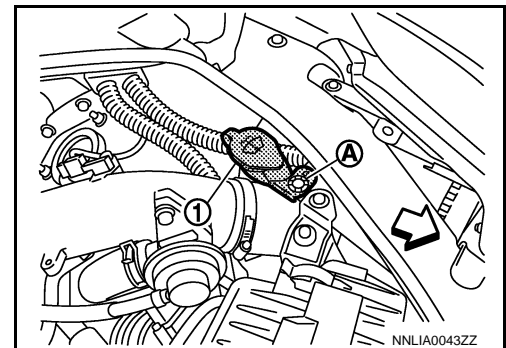

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Add water up to the top of the washer tank inlet after installing. Check that there is no leakage.


WASHER PUMP

< REMOVAL AND INSTALLATION >

WASHER PUMP

Exploded View

INFOID:000000011487346

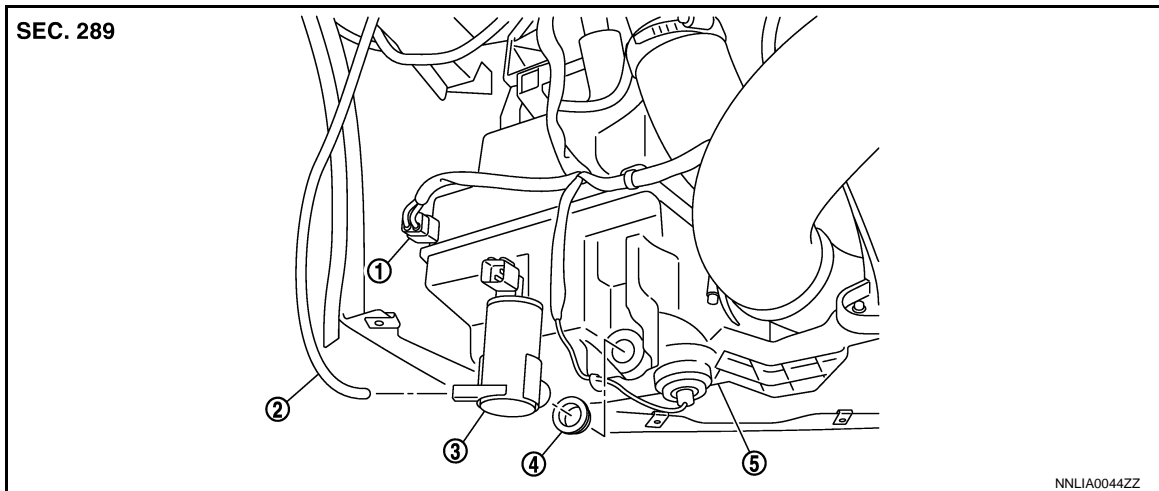

- | | | |
|--------------------------|----------------------|----------------|
| 1. Washer pump connector | 2. Front washer tube | 3. Washer pump |
| 4. Packing | 5. Washer tank | |

Removal and Installation

INFOID:000000011487347

REMOVAL

1. Remove the fender protector LH (front). Refer to [EXT-31. "FENDER PROTECTOR : Exploded View"](#).
2. Disconnect the washer pump connector.
3. Disconnect the front washer tube.
4. Remove the washer pump from the washer tank.
5. Remove the packing from the washer tank.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Never twist the packing when installing the washer pump.

A
B
C
D
E
F
G
H
I
J
K
P

WW

WASHER LEVEL SWITCH

< REMOVAL AND INSTALLATION >

WASHER LEVEL SWITCH

Removal and Installation

INFOID:000000011487348

The washer level switch must be replaced together with the washer tank as an assembly. Refer to [WW-92](#), "[Removal and Installation](#)".


FRONT WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >



FRONT WASHER NOZZLE AND TUBE

Hydraulic Layout

INFOID:000000011487349

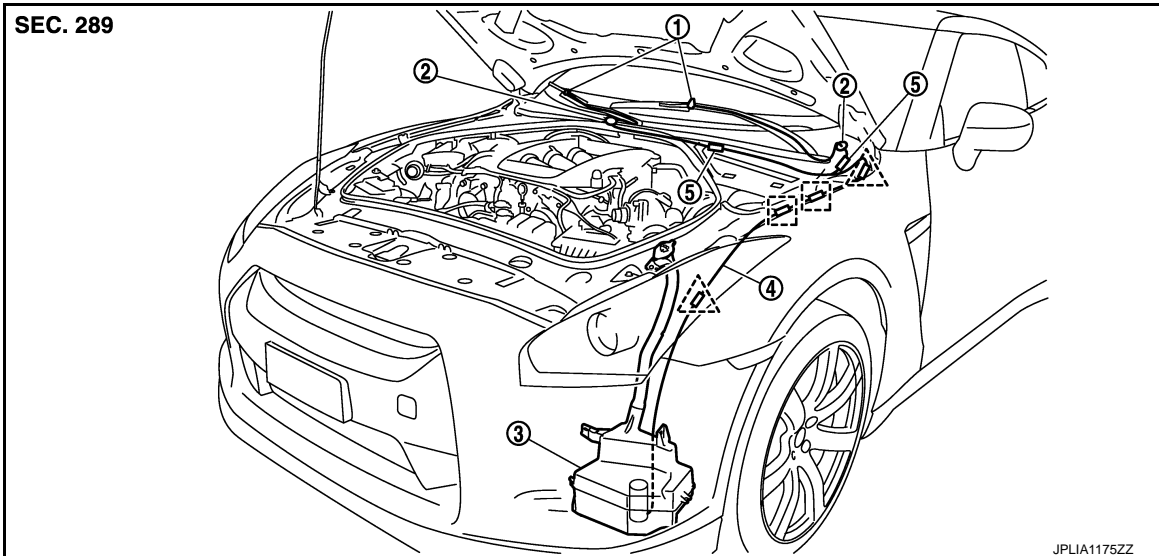

- 1. Front washer nozzle
- 2. Front washer joint
- 3. Washer tank
- 4. Front washer tube
- 5. Check valve

-  Clip A
-  Clip B

Removal and Installation

INFOID:000000011487350

FRONT WASHER NOZZLE


The front washer nozzle must be replaced together with the front wiper arm as an assembly. Refer to [WW-98](#), "[Exploded View](#)".

CAUTION:

Never remove/install the front washer nozzle from the front wiper arm assembly.

FRONT WASHER JOINT

1. Remove upwards while pressing pawl (A) on reverse side.
2. Disconnect front washer tube.

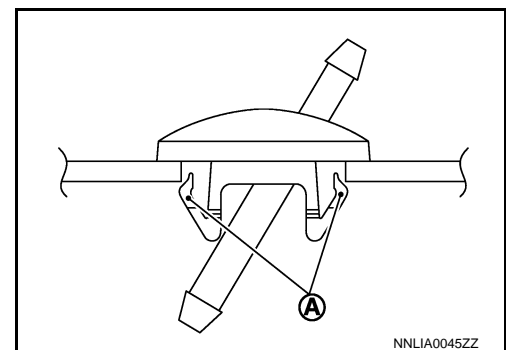

Inspection and Adjustment

INFOID:000000011487351

INSPECTION


Check valve Inspection

A
B
C
D
E
F
G
H
I
J
K
WW
M
N
O
P

FRONT WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >


Check that air can pass through the hose by blowing forward (toward the nozzle), and check that air cannot pass through by sucking.

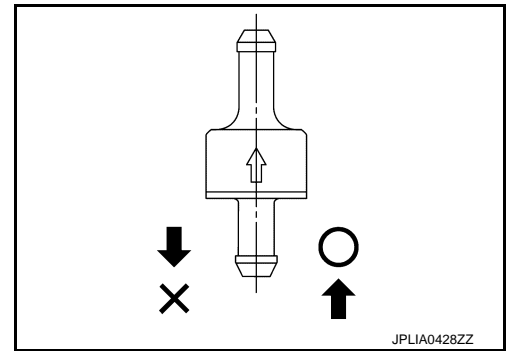

ADJUSTMENT

Front Washer Nozzle Spray Position Adjustment

Adjust spray positions to match the positions shown in the figure. Remove the wiper motor connector to ensure front wiper arms do not move.

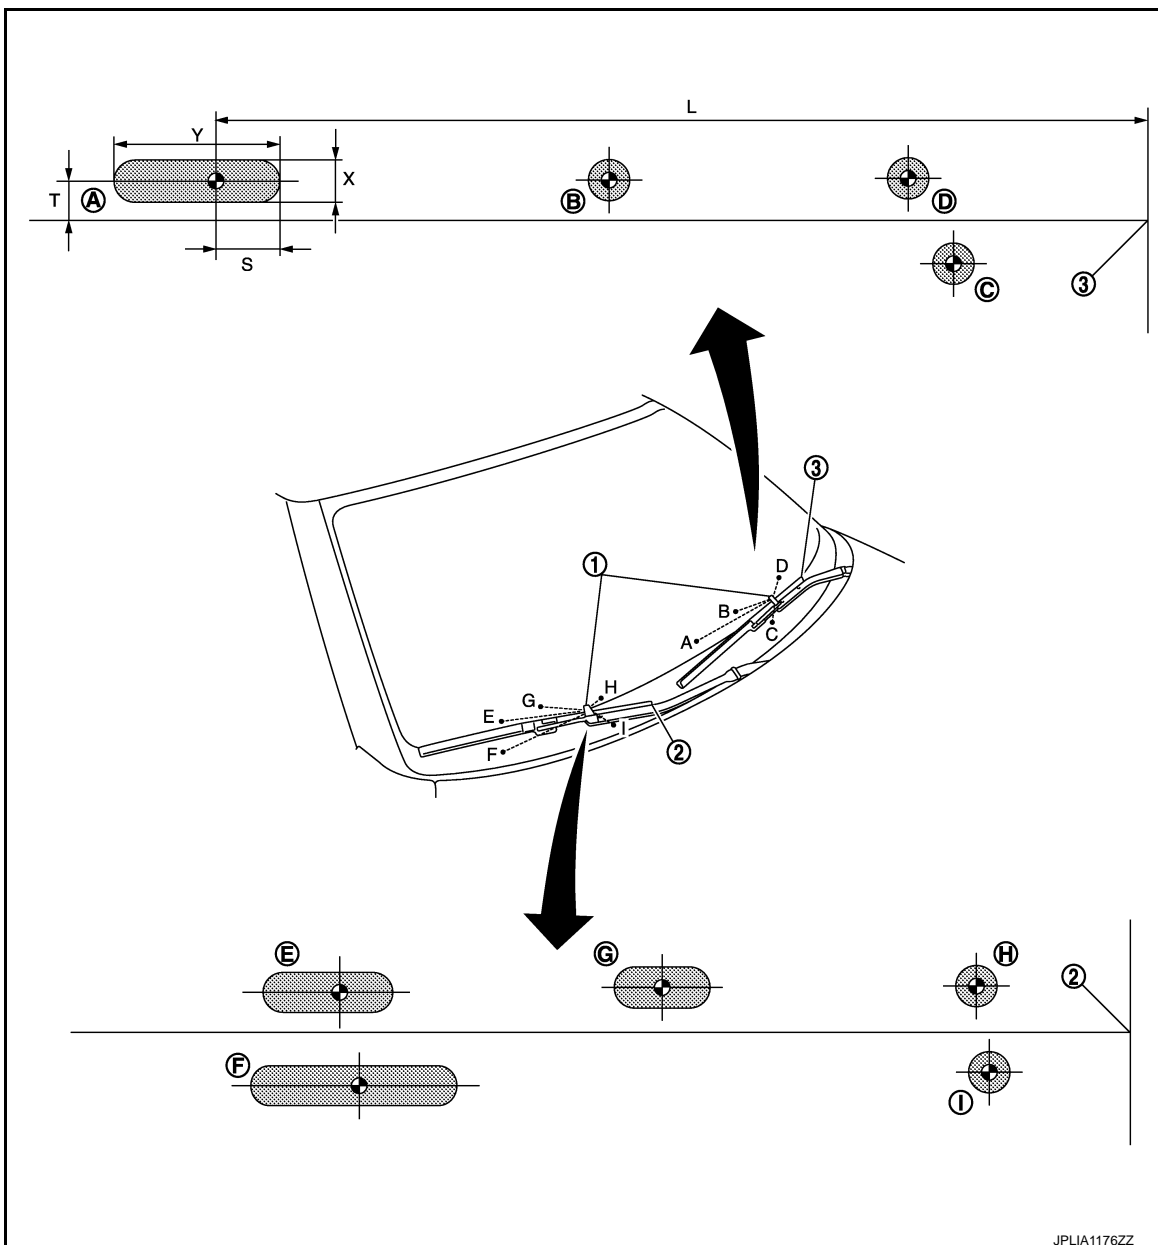


FRONT WASHER NOZZLE AND TUBE

< REMOVAL AND INSTALLATION >

1. Front washer nozzle 2. Passenger side blade rubber end 3. Driver side blade rubber end

: Spray area

: Target spray position


Unit: mm (in)

Spray position	T	L	X	Y	S
A	29 (1.14)	448 (17.64)	20 (0.79)	50 (1.97)	25 (0.98)
B	34 (1.34)	235 (9.25)	20 (0.79)	20 (0.79)	10 (0.39)
C	-18 (-0.71)	112 (4.41)	20 (0.79)	20 (0.79)	10 (0.39)
D	29 (1.14)	115 (4.53)	20 (0.79)	20 (0.79)	10 (0.39)
E	30 (1.18)	304 (11.97)	20 (0.79)	30 (1.18)	15 (0.59)
F	-40 (-1.57)	237 (9.33)	20 (0.79)	60 (2.36)	30 (1.18)
G	35 (1.38)	197 (7.76)	20 (0.79)	30 (1.18)	15 (0.59)
H	30 (1.18)	73 (2.87)	20 (0.79)	20 (0.79)	10 (0.39)
I	-17 (-0.67)	68 (2.68)	20 (0.79)	20 (0.79)	10 (0.39)

Insert a needle or similar object (A) into the spray opening (1) and move up/down and left/right to adjust the spray position.

NOTE:

If wax or dust gets into the nozzle, remove wax or dust with a needle or small pin.

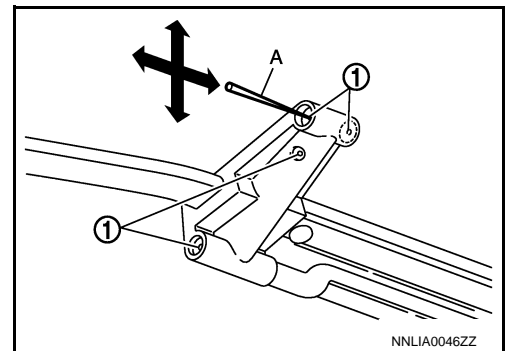

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW


FRONT WIPER ARM

< REMOVAL AND INSTALLATION >

FRONT WIPER ARM

Exploded View

INFOID:000000011487352

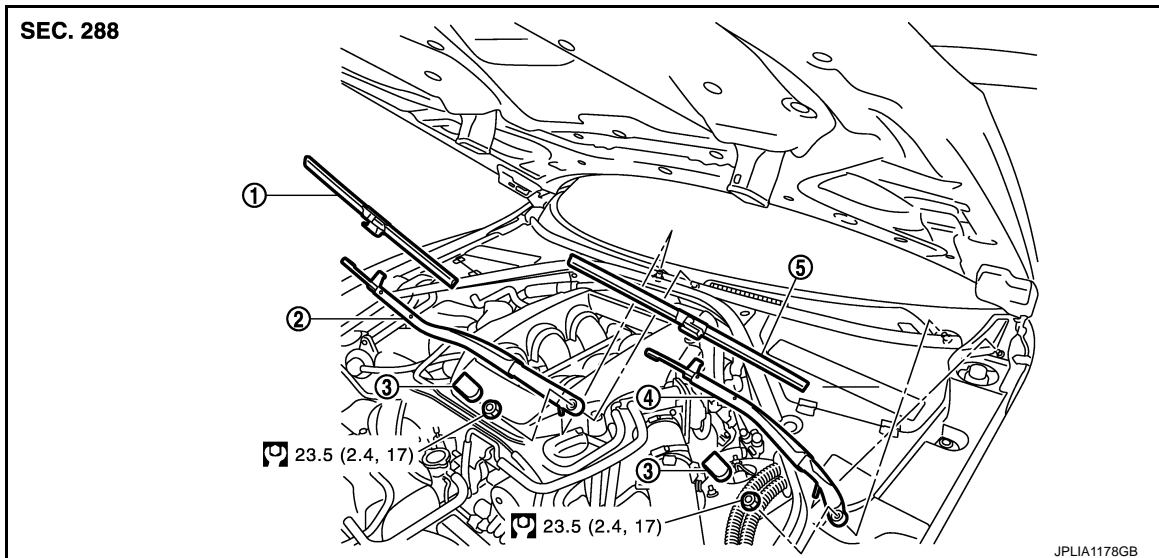

- | | | |
|---------------------------|---------------------------|------------------------|
| 1. Front wiper blade (RH) | 2. Front wiper arm (RH) | 3. Front wiper arm cap |
| 4. Front wiper arm (LH) | 5. Front wiper blade (LH) | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation


INFOID:000000011487353

REMOVAL

1. Operate the front wiper to move it to the auto stop position.
2. Open the hood.
3. Remove the front wiper arm caps.
4. Remove the front wiper arm mounting nuts.
5. Disconnect the front washer tube from the front washer joint.
6. Raise front wiper arm, and remove front wiper arm from the vehicle.

INSTALLATION

1. Clean wiper arm mount as shown in the figure to prevent nuts from being loosened.

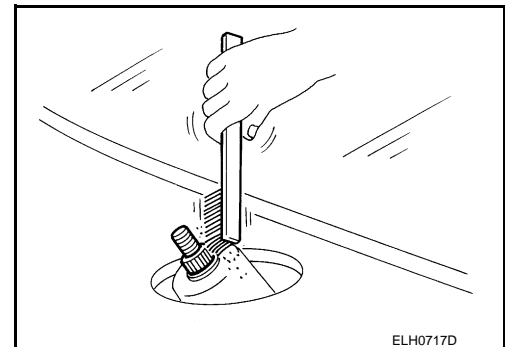

2. Operate the front wiper motor to move the front wiper to the auto stop position.
3. Adjust the front wiper blade position. Refer to [WW-99, "Adjustment"](#).
4. Install the front wiper arm by tightening the mounting nuts.
5. Connect the front washer tube to the front washer joint.
6. Inject the washer fluid.

FRONT WIPER ARM

< REMOVAL AND INSTALLATION >

7. Operate the front wiper to move it to the auto stop position.
8. Check that the front wiper blades stop at the specified position.
9. Install the front wiper arm caps.

Adjustment

INFOID:000000011487354


WIPER BLADE POSITION ADJUSTMENT

Clearance between the end of cowl top cover and the top of wiper blade center

Standard clearance

R : 35.1 ± 7.5 mm (1.382 ± 0.295 in)


L : 46.9 ± 7.5 mm (1.846 ± 0.295 in)

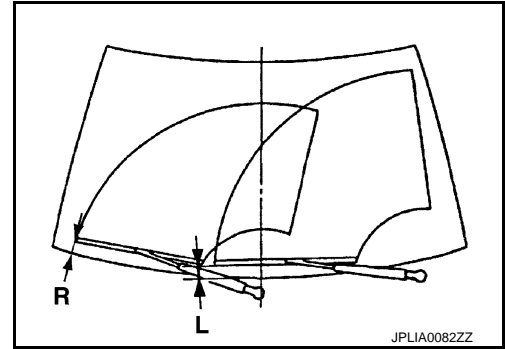

NOTE:

For the passenger side wiper arm the corresponding parts differ according to the length of the wiper blade, and are distinguished by the beginning number identification stamped on the portion indicated by the arrow as shown in the figure.

Wiper blade	Beginning number
475 mm (18.70 in)	—
525 mm (20.67 in)	39

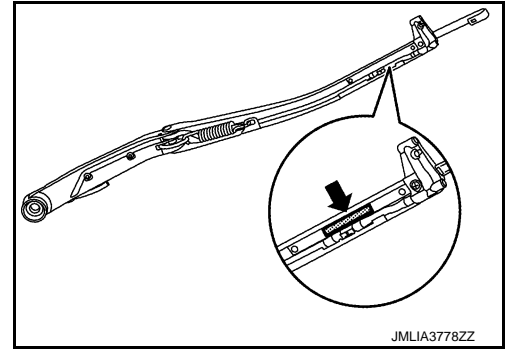

A
B
C
D
E
F
G
H
I
J
K

WW


WIPER BLADE

< REMOVAL AND INSTALLATION >

WIPER BLADE

Exploded View

INFOID:000000011487355

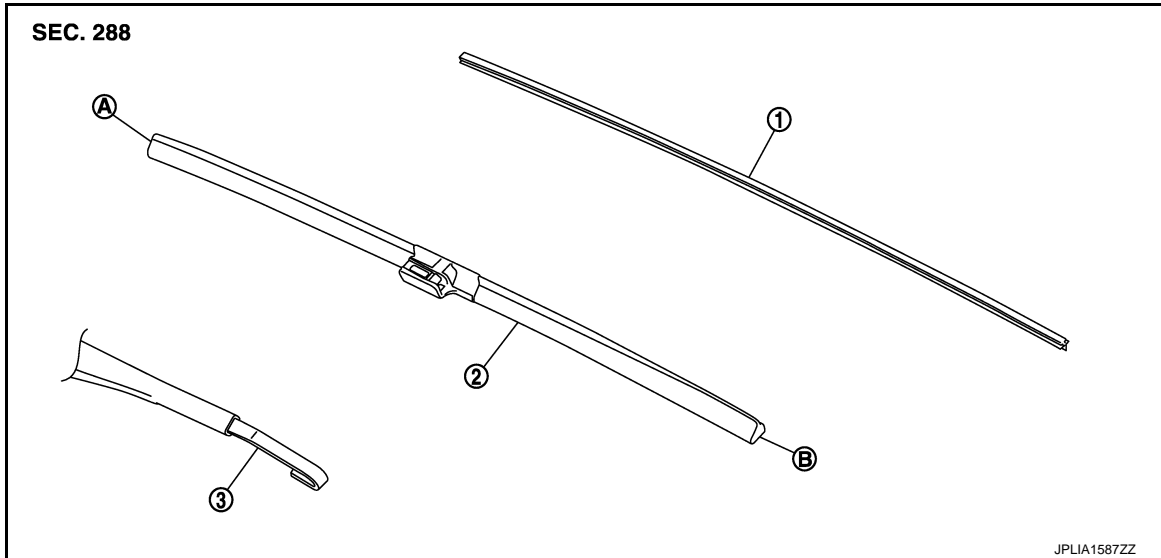

- | | | |
|--------------------|--------------------|--------------|
| 1. Wiper refill | 2. Wiper blade | 3. Wiper arm |
| A. Wiper blade end | B. Wiper blade tip | |

Removal and Installation

INFOID:000000011487356

REMOVAL

Remove the wiper blade from the wiper arm.


INSTALLATION

Install the front wiper blade to the wiper arm.

Replacement

INFOID:000000011487357

1. Hold the rip of old wiper refill (1) at the rear end of the wiper blade with long-nose pliers, and pull out the wiper refill to the direction (A).

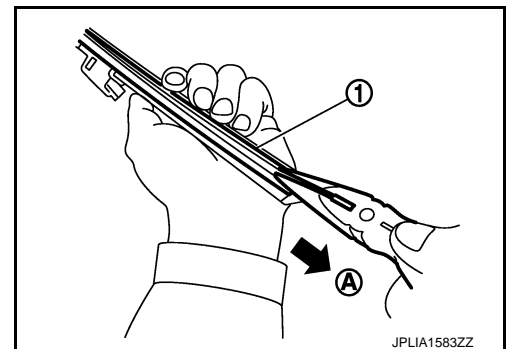


2. Insert the tip of new wiper refill (1) into the rear end of wiper blade. Slide the wiper refill to the direction (A) while pressing the wiper refill onto the wiper blade rear end.

NOTE:

- Insert the wiper refill to be held securely by tab (B) of wiper blade.
- After the wiper refill is fully inserted, remove the holder* (2).


*: Attached to service parts.

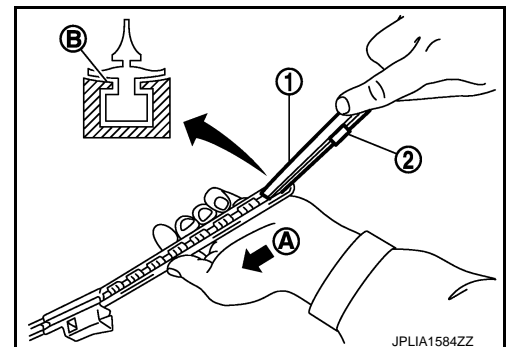

WIPER BLADE


< REMOVAL AND INSTALLATION >

3. Insert the wiper refill until the stopper at the rear end of wiper refill fits in the tab. Check that "LOCK" mark on wiper refill is aligned with "▼" mark on wiper blade.
4. Untwist the twisted wiper refill (▨) at the rear end of wiper blade, if any.
5. Check the following items after replacing wiper refill.
 - Wiper refill is not twisted at all.
 - Wiper refill thoroughly fits in the tab on wiper blade.
 - Wiper refill is inserted from the proper direction.

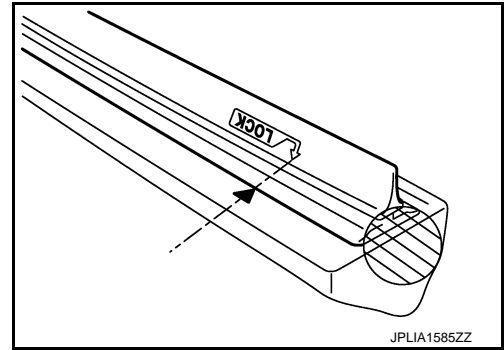

NOTE:


- When the vertebra is detached.
- Insert the vertebra (1) into the wiper blade to the same bending direction.
 - If a vertebra has a notch, fit it to a protrusion inside the wiper refill.

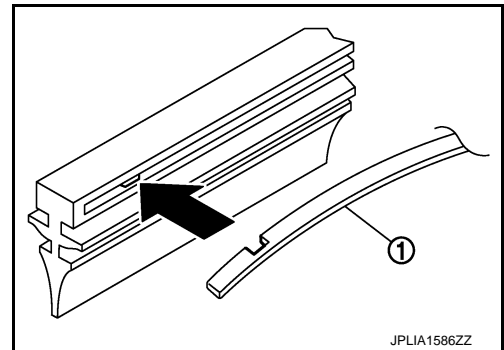

NOTE:

For the passenger side wiper blade there are two length types. They can be identified by the arrow as shown in the figure.

Red paint mark	Without paint mark
475 mm (18.70 in)	525 mm (20.67 in)

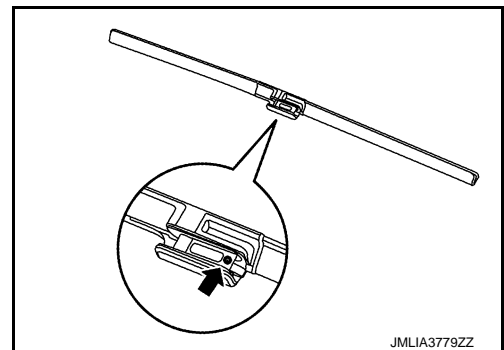

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

FRONT WIPER DRIVE ASSEMBLY


< REMOVAL AND INSTALLATION >

FRONT WIPER DRIVE ASSEMBLY

Exploded View


INFOID:000000011487358

REMOVAL

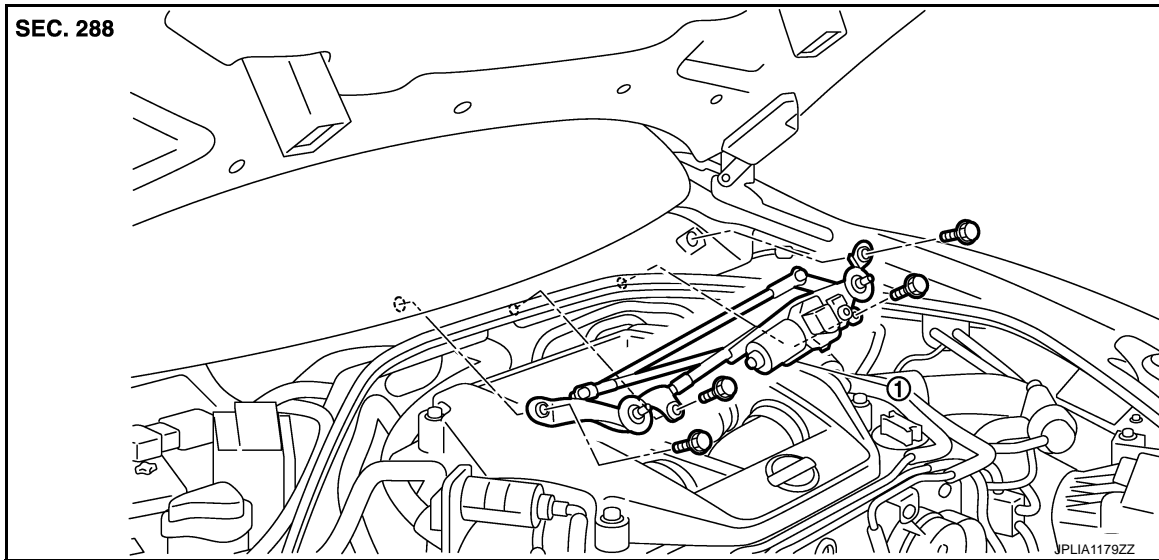


1. Front wiper drive assembly

DISASSEMBLY

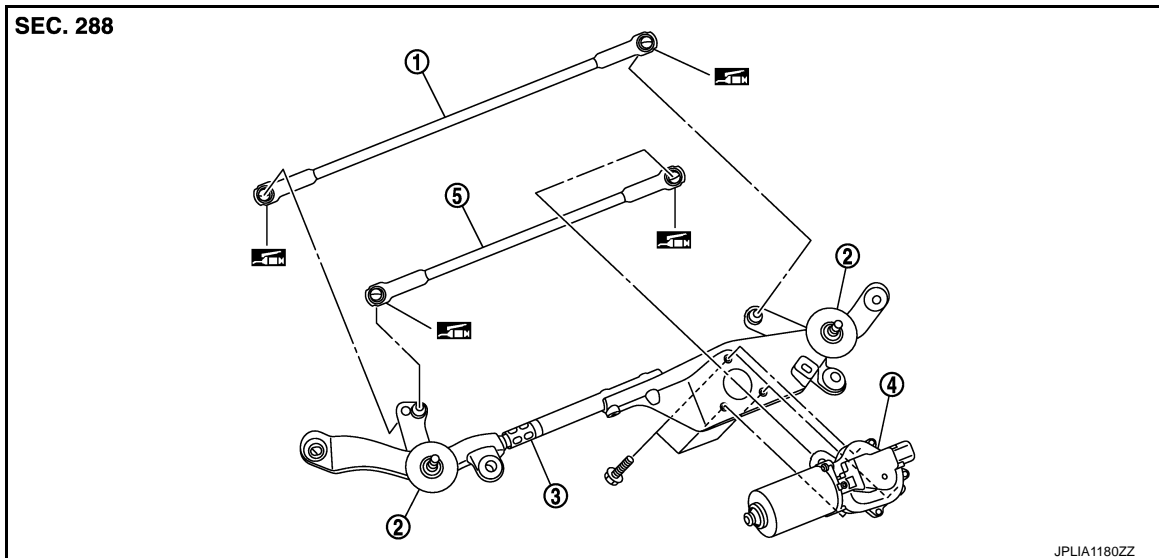

- | | | |
|--------------------------|--------------------------|----------------------|
| 1. Front wiper linkage 1 | 2. Shaft seal | 3. Front wiper frame |
| 4. Front wiper motor | 5. Front wiper linkage 2 | |

: Multi-purpose grease or an equivalent.

Removal and Installation

INFOID:000000011487359

REMOVAL

1. Remove the front wiper arm. Refer to [WW-98, "Exploded View"](#).
2. Remove the cowl top cover. Refer to [EXT-29, "Removal and Installation"](#).
3. Remove the front wiper drive assembly mounting bolts.

FRONT WIPER DRIVE ASSEMBLY

< REMOVAL AND INSTALLATION >

4. Disconnect the front wiper motor connector.
5. Remove the front wiper drive assembly from the vehicle.

A

INSTALLATION

1. Install the front wiper drive assembly to the vehicle.
2. Connect the front wiper motor connector.
3. Operate the front wiper to move it to the auto stop position.
4. Install the cowl top cover. Refer to [EXT-29. "Removal and Installation"](#).
5. Install the front wiper arms. Refer to [WW-98. "Exploded View"](#).

B

C

Disassembly and Assembly

INFOID:000000011487360

D

DISASSEMBLY

1. Remove the front wiper linkage 1 and 2 from the front wiper drive assembly.
CAUTION:
Never bend the linkage or damage the plastic part of the ball joint when removing the wiper linkage.
2. Remove the front wiper motor mounting screws, and then remove the front wiper motor from the front wiper frame.

E

F

ASSEMBLY

1. Connect the front wiper motor connector.
2. Operate the front wiper to move it to the auto stop position.
3. Disconnect the front wiper motor connector.
4. Install the front wiper motor to the front wiper frame.
5. Install the front wiper linkage 2 to the front wiper motor and the front wiper frame.
6. Install the front wiper linkage 1 to the front wiper frame.
CAUTION:
 - **Never drop front wiper motor or cause it to come into contact with other parts.**
 - **Be careful for the grease condition at the front wiper motor and front wiper linkage joint (retainer). Apply Multi-purpose grease or an equivalent if necessary.**

G

H

I

J

K

WW

M

N

O

P

WIPER AND WASHER SWITCH

< REMOVAL AND INSTALLATION >

WIPER AND WASHER SWITCH

Exploded View

INFOID:000000011487361

Refer to [BCS-90. "Exploded View"](#).