

D

Е

CONTENTS

MR16DDT
PRECAUTION10
PRECAUTIONS
PREPARATION14
PREPARATION
SYSTEM DESCRIPTION16
COMPONENT PARTS16
ENGINE CONTROL SYSTEM
ECM
High Pressure Fuel Pump24Fuel Rail Pressure Sensor25Low Pressure Fuel Pump25Fuel Tank Temperature Sensor25
Fuel Level Sensor

Turbocharger Boost Sensor (With Intake Air Temperature Sensor 2)27	F
Engine Coolant Temperature Sensor28	
Crankshaft Position Sensor (POS)28	G
Camshaft Position Sensor (PHASE)29	0
Intake Valve Timing Control Solenoid Valve29	
Exhaust Valve Timing Control Position Sensor29	
Exhaust Valve Timing Control Solenoid Valve30	Н
Air Fuel Ratio (A/F) Sensor 130	
Heated Oxygen Sensor 230	
Knock Sensor31	
Engine Oil Pressure Sensor31	
Engine Oil Temperature Sensor32	
Cooling Fan32	J
EVAP Canister Purge Volume Control Solenoid	
Valve32	
EVAP Canister Vent Control Valve33	12
EVAP Control System Pressure Sensor33	K
Battery Current Sensor (With Battery Tempera-	
ture Sensor)33	
Malfunction Indicator lamp (MIL)34	L
Oil Pressure Warning Lamp34	
Refrigerant Pressure Sensor34	
Stop Lamp Switch & Brake Pedal Position Switch34	M
Clutch Pedal Position Switch35	
ASCD Steering Switch35	
Information Display35	ь і
• •	Ν
STRUCTURE AND OPERATION36	
Positive Crankcase Ventilation36	
On Board Refueling Vapor Recovery (ORVR)37	0
SYSTEM38	
ENGINE CONTROL CYCTEM	Р
ENGINE CONTROL SYSTEM38	
ENGINE CONTROL SYSTEM: System Diagram38	
ENGINE CONTROL SYSTEM : System Descrip-	
tion38	
DIRECT INJECTION GASOLINE SYSTEM39	
DIRECT INJECTION GASOLINE SYSTEM:	
System Diagram 40	

DIRECT INJECTION GASOLINE SYSTEM : System Description	
tem bescription	Diagram55
FUEL PRESSURE CONTROL	EVAPORATIVE EMISSION SYSTEM : System
FUEL PRESSURE CONTROL: System Diagram	Description
FUEL PRESSURE CONTROL : System Descrip-	AUTOMATIC SPEED CONTROL DEVICE (ASCD) 56
tion	
ELECTRIC IGNITION SYSTEM	AUTOMATIC SPEED CONTROL DEVICE (AS-
ELECTRIC IGNITION SYSTEM:	CD): System Description57
System Diagram	. 45
ELECTRIC IGNITION SYSTEM : System De-	INTEGRATED CONTROL SYSTEM57
scription	· · · · · · · · · · · · · · · · · · ·
INTAKE VALVE TIMING CONTROL	agram58 INTEGRATED CONTROL SYSTEM : System De-
INTAKE VALVE TIMING CONTROL : System Di-	scription58
agram	. 46
INTAKE VALVE TIMING CONTROL: System De-	
scription	. 46 CAN COMMUNICATION : System Description 59
EXHAUST VALVE TIMING CONTROL	47 OPERATION 60
EXHAUST VALVE TIMING CONTROL : System	
Diagram	47 AUTOMATIC SPEED CONTROL DEVICE (ASCD) 60
EXHAUST VALVE TIMING CONTROL : System	AUTOMATIC SPEED CONTROL DEVICE (AS-
Description	. 47 CD): Switch Name and Function60
TURBOCHARGER BOOST CONTROL	48 ON BOARD DIAGNOSTIC (OBD) SYSTEM 62
TURBOCHARGER BOOST CONTROL : System	Diagnosis Description62
Diagram	00-70-1-0-1-0-1-0-1-0-1-0-1-0-1-0-1-0-1-
TURBOCHARGER BOOST CONTROL : System	
Description	DIAGNOSIS SYSTEM (ECM) 63
ENGINE PROTECTION CONTROL AT LOW EN-	DIAGNOSIS DESCRIPTION63
GINE OIL PRESSURE	DIAGNOSIS DESCRIPTION : 1st Trip Detection
ENGINE PROTECTION CONTROL AT LOW EN-	
GINE OIL PRESSURE : System Diagram	50 DIAGNOSIS DESCRIPTION : DTC and Freeze
ENGINE PROTECTION CONTROL AT LOW EN-	Frame Data63
GINE OIL PRESSURE : System Description	50 DIAGNOSIS DESCRIPTION : Counter System 64
	DIAGNOSIS DESCRIPTION: Driving Pattern 67
FUEL FILLER CAP WARNING SYSTEM	•
FUEL FILLER CAP WARNING SYSTEM:	Test (SRT) Code
System DiagramFUEL FILLER CAP WARNING SYSTEM: System	nostic Trouble Code (Permanent DTC)69
Description	
Description	tor Lamp (MIL)70
AIR CONDITIONING CUT CONTROL	52 On Board Diagnosis Function
AIR CONDITIONING CUT CONTROL : System	CONSULT Function73
Diagram	. 52
AIR CONDITIONING CUT CONTROL : System	ECU DIAGNOSIS INFORMATION84
Description	. 52 ECM84
COOLING FAN CONTROL	
COOLING FAN CONTROL : System Diagram	Transfer value infinition
COOLING FAN CONTROL : System Description	
	DTC Index 102
STARTER MOTOR DRIVE CONTROL	54 Test Value and Test Limit
STARTER MOTOR DRIVE CONTROL : System	54 14/10/10/0 014 00 444
Diagram STARTER MOTOR DRIVE CONTROL : System	. 54 WIRING DIAGRAM114
Description	. 54 ENGINE CONTROL SYSTEM114
	Wiring Diagram114

BASIC INSPECTION120	U0101 CAN COMM CIRCUIT	162
	Description	162
DIAGNOSIS AND REPAIR WORKFLOW120	DTC Logic	
Work Flow120	Diagnosis Procedure	162
Diagnostic Work Sheet123		
DACIC INCRECTION 405	U0122 VEHICLE DYNAMICS CONTROL	
BASIC INSPECTION125	MODULE	
Work Procedure125	Description	163
ADDITIONAL SERVICE WHEN REPLACING	DTC Logic	
ECM129	Diagnosis Procedure	163
	HARRA CAN COMM CIRCUIT	
Description	U1001 CAN COMM CIRCUIT	
Work Procedure129	Description	
ACCELERATOR PEDAL RELEASED POSI-	DTC Logic	
TION LEARNING131	Diagnosis Procedure	164
Description	P0011 IVT CONTROL	165
Work Procedure		
Work Flocedure131	DTC Logic	
THROTTLE VALVE CLOSED POSITION	Diagnosis Procedure	
LEARNING132	Component Inspection	167
Description	P0014 EVT CONTROL	168
Work Procedure	DTC Logic	
WORKT TOOCGUTC	Diagnosis Procedure	
IDLE AIR VOLUME LEARNING133	Component Inspection	
Description	Component inspection	170
Work Procedure	P0031, P0032 A/F SENSOR 1 HEATER	172
	DTC Logic	
G SENSOR CALIBRATION135	Diagnosis Procedure	
Description	Component Inspection	
Work Procedure135		
	P0037, P0038 HO2S2 HEATER	175
MIXTURE RATIO SELF-LEARNING VALUE	DTC Logic	175
CLEAR136	Diagnosis Procedure	175
Description136	Component Inspection	176
Work Procedure136		_
FUEL PRESSURE	P0045, P0047, P0048 TC BOOST CONTRO	
FUEL PRESSURE137	SOLENOID VALVE	
Work Procedure137	DTC Logic	178
HOW TO SET SRT CODE139	Diagnosis Procedure	
	Component Inspection	179
Description		
•	P0075 IVT CONTROL SOLENOID VALVE	
Work Procedure142	DTC Logic	180
HOW TO ERASE PERMANENT DTC145	Diagnosis Procedure	
Description	Component Inspection	181
Work Procedure (Group A)146	DOOTO EVE CONTROL COLENOIS VALVE	400
Work Procedure (Group B)148	P0078 EVT CONTROL SOLENOID VALVE	
140	DTC Logic	
DTC/CIRCUIT DIAGNOSIS151	Diagnosis Procedure	
	Component Inspection	184
TROUBLE DIAGNOSIS - SPECIFICATION	P0087 FRP CONTROL SYSTEM	106
VALUE151		
Description151	DTC Logic	
Component Function Check	Diagnosis Procedure	187
Diagnosis Procedure152	Component Inspection (High Pressure Fuel	407
	Pump)	187
POWER SUPPLY AND GROUND CIRCUIT 158	P0088 FRP CONTROL SYSTEM	190
Diagnosis Procedure158		
•	DTC Logic	
	Diagnosis Procedure	189

Component Inspection (High Pressure Fuel	DTC Logic	222
Pump)1	90 Diagnosis Procedure	222
DOGGO LIIGU DDEGGUDE EUEL DUMD	Component Inspection	223
P0090 HIGH PRESSURE FUEL PUMP 1		005
DTC Logic		
Diagnosis Procedure	•	
Component Inspection (High Pressure Fuel Pump)1	Diagnosis Procedure	
P0096 IAT SENSOR 2 1	96 P0127 IAT SENSOR	227
DTC Logic1		
Component Function Check1		
Diagnosis Procedure1	<u> </u>	
Component Inspection1	97	
DOOG BOOK IAT CENCOD A	P0128 THERMOSTAT FUNCTION .	
P0097, P0098 IAT SENSOR 2 1		
DTC Logic1		
Diagnosis Procedure1		230
Component Inspection2	P0130 A/F SENSOR 1	232
P0101 MAF SENSOR 2		
DTC Logic2	3	
Diagnosis Procedure2		
Component Inspection2		
P0102, P0103 MAF SENSOR 2		
DTC Logic2		
Diagnosis Procedure2	207	
Component Inspection2	DOADO A /F CENICOD A	239
	DTC Logic	
P0111 IAT SENSOR 1 2	3	240
DTC Logic2		242
Component Function Check2	DTO L	
Diagnosis Procedure2	D'annaile Daniel I an	
Component Inspection2		
P0112, P0113 IAT SENSOR 1 2	₂₁₄ P0137 HO2S2	247
DTC Logic2	DTC Logic	
Diagnosis Procedure2	Component Function Check	
Component Inspection2	Diagnosis Procedure	
DOMAS ECT SENSOD	Component Inspection	250
P0116 ECT SENSOR 2	D0420 U0262	253
DTC Logic2 Component Function Check2	5.10	
Diagnosis Procedure2	Common and Franchism Obselv	
Component Inspection	Discount Description	
Component inspection	Component Inspection	
P0117, P0118 ECT SENSOR 2	118	
DTC Logic2		
Diagnosis Procedure2	On an an anata Francistica Obracia	
Component Inspection2	Component Function Check	
P011C IAT SENSOR 2	Diagnosis Procedure Component Inspection	
DTC Logic2	·	204
Diagnosis Procedure2	DO474 FUEL IN IECTION CVCTEM I	FUNC-
Component Inspection (Intake Air Temperature	TION	266
Sensor 1)2	D-T-0.1	
Component Inspection (Intake Air Temperature	Diagnosis Procedure	
Sensor 2)2	221	
	PUT/2 FUEL INJECTION STSTEWN	
P0122, P0123 TP SENSOR 2		
	DTC Logic	270

Diagnosis Procedure2	Component Inspection312
P0181 FTT SENSOR2	74 P0335 CKP SENSOR (POS)313
DTC Logic2	
Component Function Check	75 Diagnosis Procedure 313
Diagnosis Procedure2	
Component Inspection	77
	P0340 CMP SENSOR (PHASE)316
P0182, P0183 FTT SENSOR2	78 DTC Logic316
DTC Logic2	78 Diagnosis Procedure317
Diagnosis Procedure2	Component Inspection318
Component Inspection2	79
DOLOG DOLOG DOLOG EDD OFNOOD	P0420 THREE WAY CATALYST FUNCTION . 320
P0190, P0192, P0193 FRP SENSOR2	
DTC Logic	
Diagnosis Procedure2	
Component Inspection2	P0441 EVAP CONTROL SYSTEM325
P0191 FRP SENSOR2	
	3
DTC Logic	
Diagnosis Procedure	
Component Inspection2	P0443 EVAP CANISTER PURGE VOLUME
P0196 EOT SENSOR2	
DTC Logic2	
Component Function Check	101 Diamasia Dasasahan
Diagnosis Procedure	3
	· · · · · · · · · · · · · · · · · · ·
Component Inspection2	P0444, P0445 EVAP CANISTER PURGE
P0197, P0198 EOT SENSOR2	
DTC Logic2	
Diagnosis Procedure2	
Component Inspection	
·	Component mopeoution
P0201, P0202, P0203, P0204 FUEL INJEC-	P0447 EVAP CANISTER VENT CONTROL
TOR2	V/\= V=
DTC Logic2	
Diagnosis Procedure2	Diagnosis Procedure
DOSSO DOSSO TO SENSOD	Component Inspection 340
P0222, P0223 TP SENSOR2	90
DTC Logic	
Diagnosis Procedure	
Component Inspection2	2.0 209.0
P0234 TC SYSTEM2	Diagnosis Procedure343
DTC Logic	Component Inspection 344
Component Function Check	
Diagnosis Procedure3	10101 27/11 001111102 010121111 1120
Diagnosis i rocedure	001\L 0L1\001\
P0237, P0238 TC BOOST SENSOR3	02 DTC Logic
DTC Logic3	Diagnosis Procedure347
Diagnosis Procedure3	
Component Inspection	
·	10402 EVAL GOITH OF GIGIEM I REG
P0300, P0301, P0302, P0303, P0304 MIS-	301 CE11001
FIRE3	05 DTC Logic
DTC Logic3	Diagnosis Procedure351
Diagnosis Procedure3	
	DOAES EVAD CONTROL SYSTEM DRES
P0327, P0328 KS3	OII SUDE SENSOD
DTC Logic3	DTC Logic
Diagnosis Procedure3	DTC Logic353

2013 JUKE

Diagnosis Procedure354	Diagnosis Procedure	383
Component Inspection356	Component Inspection	384
P0456 EVAP CONTROL SYSTEM 357	P0603 ECM POWER SUPPLY	385
DTC Logic357	DTC Logic	
Diagnosis Procedure358	Diagnosis Procedure	
Component Inspection362	-	
DO 400 FUEL LEVEL SENSOD	P0605 ECM	
P0460 FUEL LEVEL SENSOR	DTC Logic	
DTC Logic	Diagnosis Procedure	387
Diagnosis Flocedule505	P0607 ECM	389
P0461 FUEL LEVEL SENSOR 364	DTC Logic	389
DTC Logic364	Diagnosis Procedure	389
Component Function Check364	DOGA FOLL DROTEOTION	
Diagnosis Procedure365	P0611 ECM PROTECTION	
DOACO DOACO FUEL LEVEL CENCOD	Description	
P0462, P0463 FUEL LEVEL SENSOR 366	DTC Logic	
DTC Logic	Diagnosis Procedure	390
Diagnosis Procedure366	P062B ECM	391
P0500 VSS 367	Description	
	DTC Logic	
EXCEPT FOR M/T MODELS367	Diagnosis Procedure	
EXCEPT FOR M/T MODELS : Description367	•	
EXCEPT FOR M/T MODELS : DTC Logic367	P0643 SENSOR POWER SUPPLY	
EXCEPT FOR M/T MODELS : Diagnosis Proce-	DTC Logic	
dure367	Diagnosis Procedure	392
M/T MODELS368	P0850 PNP SWITCH	394
M/T MODELS : Description368	Description	
M/T MODELS : DTC Logic368	DTC Logic	
M/T MODELS : Component Function Check369	Component Function Check	
M/T MODELS : Diagnosis Procedure370	Diagnosis Procedure	
P0501, P2159 VEHICLE SPEED SENSOR 371	P1078 EVT CONTROL POSITION SENSOR	200
Description	DTC Logic	
DTC Logic	Diagnosis Procedure	
Diagnosis Procedure371	Component Inspection	
	Component inspection	400
P0506 ISC SYSTEM	P1148 CLOSED LOOP CONTROL	402
Description372	DTC Logic	
DTC Logic372	Diagnosis Procedure	402
Diagnosis Procedure372	P1197 OUT OF GAS	402
P0507 ISC SYSTEM	Description	
Description	DTC Logic	
DTC Logic	Diagnosis Procedure	
Diagnosis Procedure374	Diagnosis i Tocedure	403
	P1212 TCS COMMUNICATION LINE	405
P050A, P050E COLD START CONTROL 376	Description	405
Description376	DTC Logic	405
DTC Logic	Diagnosis Procedure	405
Diagnosis Procedure377	D1217 ENGINE OVED TEMPERATURE	400
P0520 EOP SENSOR 378	P1217 ENGINE OVER TEMPERATURE	
DTC Logic	DTC Logic	
Diagnosis Procedure378	Component Function Check	
Component Inspection	Diagnosis Procedure	407
·	P1225 TP SENSOR	409
P0524 ENGINE OIL PRESSURE 382	DTC Logic	
DTC Logic382	Diagnosis Procedure	

P1226 TP SENSOR	. 410	P158A ECM	441
DTC Logic		DTC Logic	
Diagnosis Procedure		Diagnosis Procedure	
P1423, P1424 COLD START CONTROL	444	P159A, P159C, P159D G SENSOR	442
Description		DTC Logic	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure	. 411	Component Inspection	444
P1451 PRESSURE SENSOR	. 413	P159B G SENSOR	446
DTC Logic	. 413	DTC Logic	446
Diagnosis Procedure	. 413	Diagnosis Procedure	447
Component Inspection (EVAP Control System		Component Inspection	449
Pressure Sensor)	. 414	·	
Component Inspection (Turbocharger Boost Sen-		P1650 STARTER MOTOR RELAY 2	
sor)		Description	451
,		DTC Logic	451
P1550 BATTERY CURRENT SENSOR	. 416	Diagnosis Procedure	
DTC Logic	. 416	-	
Diagnosis Procedure		P1651 STARTER MOTOR RELAY	
Component Inspection		Description	
·	=	DTC Logic	
1551, P1552 BATTERY CURRENT SEN-		Diagnosis Procedure	455
SOR	.419		
DTC Logic	. 419	P1652 STARTER MOTOR SYSTEM COMM	457
Diagnosis Procedure		Description	457
Component Inspection		DTC Logic	457
		Diagnosis Procedure	457
1553 BATTERY CURRENT SENSOR	. 422	D	
DTC Logic	. 422	P1805 BRAKE SWITCH	
Diagnosis Procedure	. 422	DTC Logic	
Component Inspection		Diagnosis Procedure	
		Component Inspection (Stop Lamp Switch)	460
P1554 BATTERY CURRENT SENSOR	. 425	DOOC DOOC A/E CENCOD 4	404
DTC Logic	. 425	P2096, P2097 A/F SENSOR 1	
Component Function Check	. 425	DTC Logic	
Diagnosis Procedure	. 426	Diagnosis Procedure	461
Component Inspection		P2100, P2103 THROTTLE CONTROL MO-	
		•	405
P1556, P1557 BATTERY TEMPERATURE		TOR RELAY	
SENSOR	. 429	DTC Logic	
DTC Logic	. 429	Diagnosis Procedure	465
Diagnosis Procedure	. 429	P2101 ELECTRIC THROTTLE CONTROL	
Component Inspection	. 430	FUNCTION	407
·			
21564 ASCD STEERING SWITCH		DTC Logic	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure	. 431	Component Inspection	469
Component Inspection	. 433	P2118 THROTTLE CONTROL MOTOR	470
·			
1572 ASCD BRAKE SWITCH		DTC Logic	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure	. 435	Component Inspection	471
Component Inspection (Brake Pedal Position		P2119 ELECTRIC THROTTLE CONTROL	
Switch)	. 437		4=-
Component Inspection (Stop Lamp Switch)		ACTUATOR	
		DTC Logic	
P1574 ASCD VEHICLE SPEED SENSOR		Diagnosis Procedure	472
Description		D2122 D2122 ADD SENSOD	474
DTC Logic		P2122, P2123 APP SENSOR	
Diagnosis Procedure		DTC Logic	4/4

Diagnosis Procedure		Diagnosis Procedure	510
Component Inspection	475	COOLING FAN	512
P2127, P2128 APP SENSOR	477	Component Function Check	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure		Component Inspection (Cooling Fan Motor)	
Component Inspection		Component Inspection (Cooling Fan Relay)	
P2135 TP SENSOR	480	ON BOARD REFUELING VAPOR RECOV-	
DTC Logic		ERY (ORVR)	515
Diagnosis Procedure	480	Component Function Check	
Component Inspection	481	Diagnosis Procedure	515
P2138 APP SENSOR	400	Component Inspection (Refueling EVAP vapor of	cut
		valve)	517
DTC Logic Diagnosis Procedure		Component Inspection (Drain filter)	519
Component Inspection		REFRIGERANT PRESSURE SENSOR	520
Component inspection		Component Function Check	
P2162 VEHICLE SPEED SENSOR	487	Diagnosis Procedure	
Description	487	Diagnosis i roccare	020
DTC Logic		BRAKE PEDAL POSITION SWITCH	522
Diagnosis Procedure	487	Component Function Check	522
P2263 TC SYSTEM	400	Diagnosis Procedure	522
		Component Inspection (Brake Pedal Position	
DTC Logic Component Function Check		Switch)	523
Diagnosis Procedure		CLUTCH PEDAL POSITION SWITCH	E24
Component Inspection (Turbocharger Boost C		Component Function Check	
trol Solenoid Valve)		Diagnosis Procedure	
Component Inspection (Turbocharger Boost S		Component Inspection	
sor)	492	Component mopeotion	020
,		INFORMATION DISPLAY (ASCD)	
FUEL INJECTOR		Component Function Check	
Component Function Check		Diagnosis Procedure	526
Diagnosis Procedure		MALFUNCTION INDICATOR LAMP	5 27
Component Inspection (Fuel Injector)		Component Function Check	
Component Inspection (Fuel Injector Relay)	496	Diagnosis Procedure	
LOW PRESSURE FUEL PUMP	498	· ·	
Component Function Check		SYMPTOM DIAGNOSIS	528
Diagnosis Procedure			
Component Inspection	499	ENGINE CONTROL SYSTEM	
LUCU DDECCUDE EUEL DUMB		Symptom Table	528
HIGH PRESSURE FUEL PUMP		ASCD TEMPORARY RELEASE CANNOT B	3E
Component Function Check		PERFORMED BY THE CLUTCH PEDAL	
Diagnosis Procedure Component Inspection (High Pressure Fuel	501	Diagnosis Procedure	
Pump)	504	-	
Component Inspection (High Pressure Fuel Pu		INFORMATION DISPLAY IS MALFUNCTIO	N-
Relay)	•	ING	
rtolay)		Diagnosis Procedure	534
IGNITION SIGNAL	506	NORMAL OPERATING CONDITION	505
Component Function Check	506	NORMAL OPERATING CONDITION	
Diagnosis Procedure		Description	535
Component Inspection (Ignition Coil with Power		PERIODIC MAINTENANCE	536
Transistor)			
Component Inspection (Condenser)	509	IDLE SPEED	
ELECTRICAL LOAD SIGNAL	510	Inspection	536
Description		IGNITION TIMING	527
Component Function Check		Inspection	
1			557

EVAPORATIVE EMISSION SYSTEM538	Removal and Installation	.542
Inspection	SERVICE DATA AND SPECIFICATIONS	
EVAP LEAK CHECK 539	(SDS)	543
Inspection539		
POSITIVE CRANKCASE VENTILATION541	SERVICE DATA AND SPECIFICATIONS (SDS)	543
Inspection541	Idle Speed	.543
REMOVAL AND INSTALLATION542	Ignition Timing	.543
NEWOVAL AND INSTALLATION	Calculated Load Value	
ECM542	Mass Air Flow Sensor	.543

Α

EC

D

Е

F

G

Н

J

Κ

L

 \mathbb{N}

Ν

0

Ρ

< PRECAUTION > [MR16DDT]

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the
 ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with
 a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing
 serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:0000000008274424

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

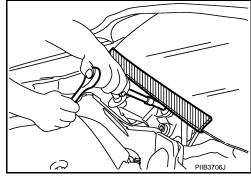

On Board Diagnostic (OBD) System of Engine and CVT

INFOID:0000000008274425

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the negative battery cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will
 cause the MIL to light up due to the open circuit. (Be sure the connector is free from water, grease,
 dirt, bent terminals, etc.)


[MR16DDT] < PRECAUTION >

· Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG-5, "Harness Connec-

- Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to light up due to the short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to the malfunction of the EVAP system or fuel injection system,
- Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.

General Precautions


- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is
- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery cable. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned OFF.
- Before removing parts, turn ignition switch OFF and then disconnect battery ground cable.

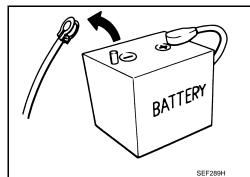


- Do not disassemble ECM.
- If a battery cable is disconnected, the memory will return to the ECM value.

The ECM will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a malfunction. Do not replace parts because of a slight variation.

- If the battery is disconnected, the following emission-related diagnostic information will be lost within 24 hours.
- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values
- When connecting ECM harness connector (1), fasten (B) it securely with a lever as far as it will go as shown in the figure.
 - 2. **FCM**
 - Α. Loosen

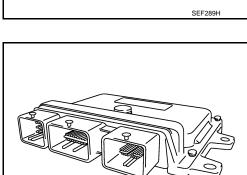

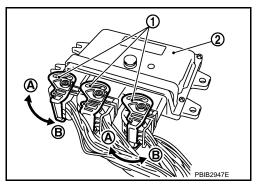

EC

INFOID:0000000008274426

Е

D

M


N


< PRECAUTION > [MR16DDT]


 When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break).


Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.

- Securely connect ECM harness connectors.
 A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep engine control system harness at least 10 cm (4 in) away from adjacent harness, to prevent engine control system malfunctions due to receiving external noise, degraded operation of ICs, etc.
- Keep engine control system parts and harness dry.
- Before replacing ECM, perform ECM Terminals and Reference Value inspection and make sure ECM functions properly. Refer to EC-84, "Reference Value".
- Handle mass air flow sensor carefully to avoid damage.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble electric throttle control actuator.
- Even a slight leak in the air intake system can cause serious incidents.
- Do not shock or jar the camshaft position sensor (PHASE), crankshaft position sensor (POS).

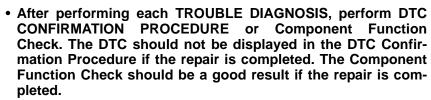

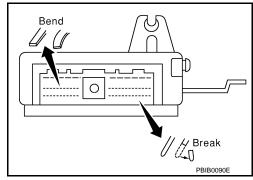


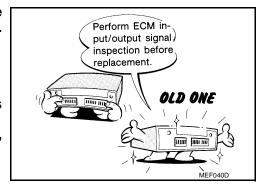

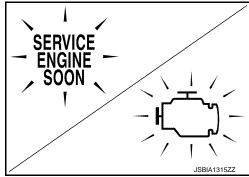


< PRECAUTION > [MR16DDT]


 When measuring ECM signals with a circuit tester, never allow the two tester probes to contact.
 Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

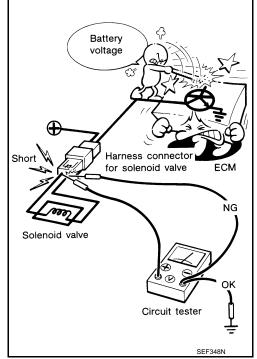

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.
- · Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

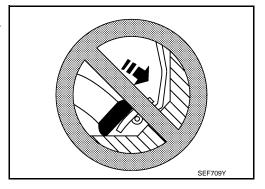

- When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.
- Keep the antenna as far as possible from the electronic control units.
- Keep the antenna feeder line more than 20 cm (8 in) away from the harness of electronic controls.
 Do not let them run parallel for a long distance.
- Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
- Be sure to ground the radio to vehicle body.

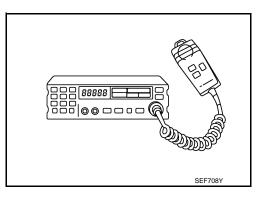

Α

EC

0

D

F

Е

G

Н

.1

Κ

M

Ν

0

Ρ

< PREPARATION > [MR16DDT]

PREPARATION

PREPARATION

Special Service Tools

INFOID:0000000008274427

NOTE:

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name		Description
(J-44321) Fuel pressure gauge kit	LEC642	Checks fuel pressure
(J-44321-6) Fuel pressure adapter	LBIA0376E	Connects fuel pressure gauge to quick connector type fuel lines.
KV10120000 Fuel tube adapter	JSBIA0410ZZ	Measures fuel pressure

Commercial Service Tools

INFOID:0000000008274428

Tool name (Kent-Moore No.)		Description
Leak detector i.e.: (J-41416)	S-NT703	Locates the EVAP leak
EVAP service port adapter i.e.: (J-41413-OBD)	S-NT704	Applies positive pressure through EVAP service port

PREPARATION

< PREPARATION > [MR16DDT]

	[MR16DDT]
	Description
	Checks fuel tank vacuum relief valve opening pressure
	·
S-NT815	
	Removes and installs engine coolant temperature sensor
19 mm (0.75 in) More than 32 mm (1.26 in)	
S-NT705	Reconditions the exhaust system threads before
a b	installing a new oxygen sensor. Use with anti- seize lubricant shown below.
Mating surface shave	a: 18 mm diameter with pitch 1.5 mm for Zirco-
S cylinder S	nia Oxygen Sensor b: 12 mm diameter with pitch 1.25 mm for Tita-
FlutesAEM488	nia Oxygen Sensor
	Lubricates oxygen sensor thread cleaning tool when reconditioning exhaust system threads.
	when reconditioning exhaust system unleaus.
S-N1779	
	19 mm (0.75 in) Nore than 32 mm (1.26 in) S-NT705

Revision: 2014 February EC-15 2013 JUKE

L

 \mathbb{N}

Ν

0

Р


SYSTEM DESCRIPTION

COMPONENT PARTS ENGINE CONTROL SYSTEM

ENGINE CONTROL SYSTEM: Component Parts Location

INFOID:0000000008274429

ENGINE ROOM COMPARTMENT

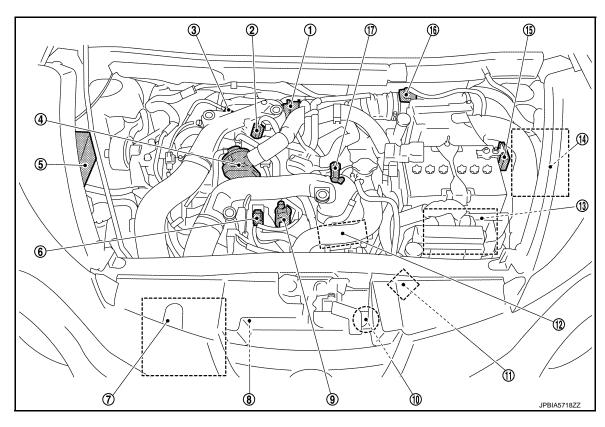

- Boost control actuator
- Turbocharger boost control solenoid 3. valve
- 4. Recirculation valve
- 5. Relay box
 - · Fuel injector relay
 - Fuel pump relay


Inter cooler

13. ECM

- Refrigerant pressure sensor Refer to <u>HAC-6</u>, "Component Parts <u>Location"</u>.
- Cooling fan motor
- 11. Cooling fan control module
- 14.
- 16. Mass air flow sensor (with intake air temperature sensor 1)
- 14. IPDM E/R
 Refer to PCS-5, "Component Parts
 Location".
- 17. Turbocharger boost sensor (with intake air temperature sensor 2)

- A/F sensor 1
- EVAP canister purge volume control solenoid valve
- 9. EVAP service port
- Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- 15. Battery current sensor (with battery temperature sensor)

ENGINE COMPARTMENT

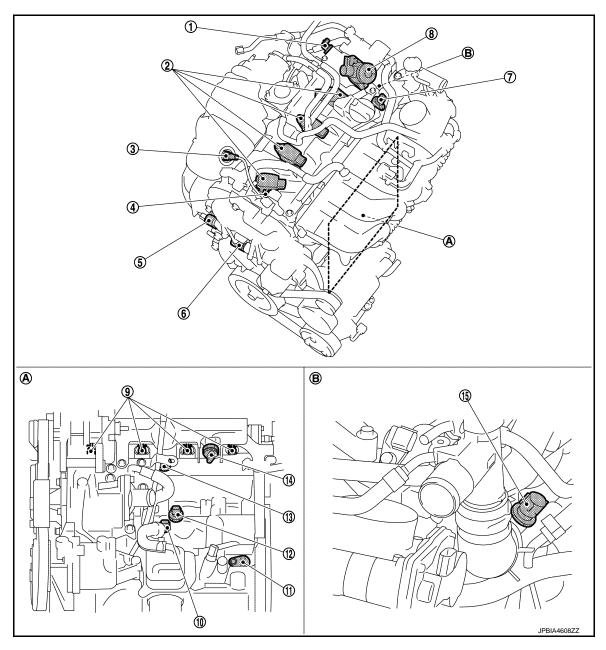

- Exhaust valve timing control position sensor
- 4. PCV valve
- 7. Camshaft position sensor (PHASE)
- 10. Engine oil temperature sensor
- 13. Knock sensor
- A. Cylinder block left side

EXHAUST COMPARTMENT

2WD

- 2. Ignition coil (with power transistor)
- Exhaust valve timing control solenoid valve
- 8. High pressure fuel pump
- 11. Crankshaft position sensor (POS)
- 14 Fuel rail pressure sensor
- B. Engine rear end

- 3. A/F sensor 1
- Intake valve timing control solenoid valve
- 9. Fuel injector
- 12. Engine oil pressure sensor
- 15. Engine coolant temperature sensor

EC

Α

D

Е

F

G

Н


Κ

M

Ν

0


Р

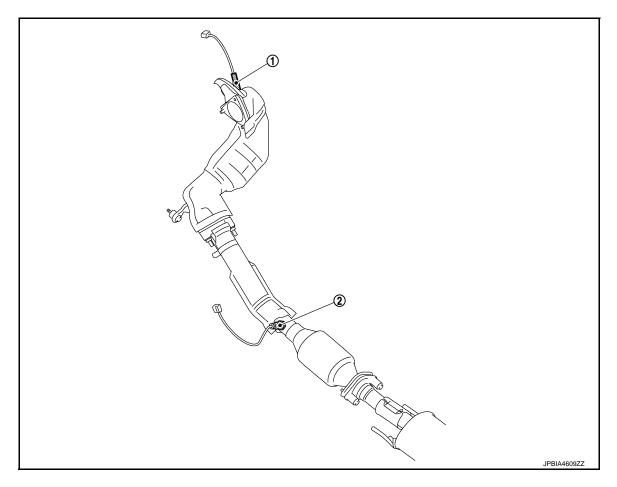

1. A/F sensor 1

2. Heated oxygen sensor 2

AWD

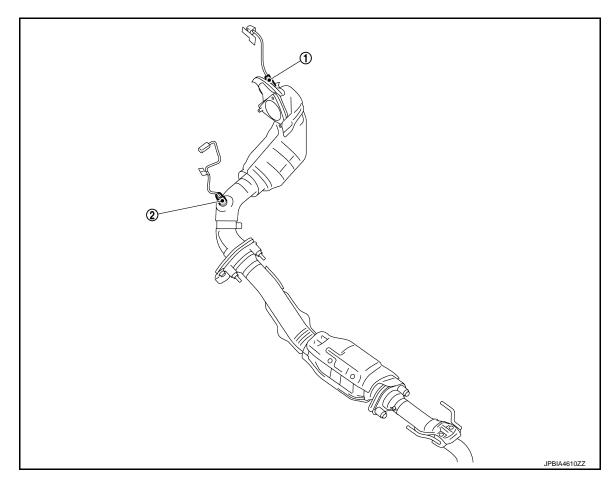

1. A/F sensor 1

2. Heated oxygen sensor 2

BODY COMPARTMENT

Α

EC

_

D

Е

F

G

Н

-

J

K


L

 \mathbb{N}

Ν

0

Р

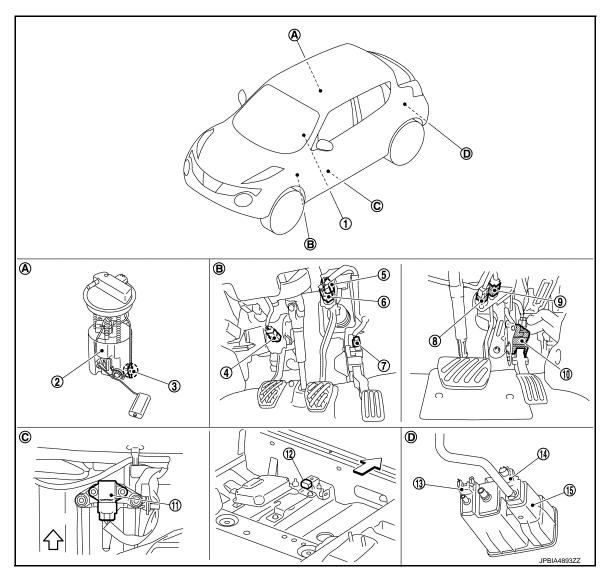

- 1. ASCD steering switch
- 4. Clutch pedal position switch (with M/T models)
- Accelerator pedal position sensor (with M/T models)
- 10. Accelerator pedal position sensor (with CVT models)
- 13. EVAP control system pressure sensor 14.
- A. Under of right side second seat
- D. Fuel tank rear

- Fuel level sensor unit, fuel filter and fuel pump assembly
- 5. Brake pedal position switch (with M/T models)
- 8. Brake pedal position switch (with CVT models)
- 11. G sensor (with 2WD models)
- 14. EVAP canister vent control valve
- B. Periphery of pedals

- 3. Fuel tank temperature sensor
- 6. Stop lamp switch (with M/T models)
- 9. Stop lamp switch (with CVT models)
- G sensor (with AWD models)
 EVAP canister
- C. Under of left side front seat

ENGINE CONTROL SYSTEM : Component Description

INFOID:0000000008274430

Component	Reference
ECM	EC-22, "ECM"
Accelerator pedal position sensor	EC-22, "Accelerator Pedal Position Sensor"

COMPONENT PARTS


< SYSTEM DESCRIPTION >

[MR16DDT]

Component	Reference	
Electric throttle control actuator		
Throttle control motor	EC-22, "Electric Throttle Control Actuator"	
Throttle position sensor		
Ignition coil with power transistor	EC-23, "Ignition Coil With Power Transistor"	
Fuel injector	EC-24, "Fuel Injector"	
High pressure fuel pump	EC-24, "High Pressure Fuel Pump"	
Fuel rail pressure sensor	EC-25, "Fuel Rail Pressure Sensor"	
Low pressure fuel pump	EC-25, "Low Pressure Fuel Pump"	
Fuel tank temperature sensor	EC-25, "Fuel Tank Temperature Sensor"	
Fuel level sensor	EC-25, "Fuel Level Sensor"	
Mass air flow sensor	EC-26, "Mass Air Flow Sensor (With Intake Air Temperature Sen	
Intake air temperature sensor 1	sor 1)"	
Turbocharger		
Boost control actuator	EC-26. "Turbocharger"	
Turbocharger boost control solenoid valve		
Turbocharger boost sensor	EC-27, "Turbocharger Boost Sensor (With Intake Air Temperature	
Intake air temperature sensor 2	Sensor 2)"	
Engine coolant temperature sensor	EC-28. "Engine Coolant Temperature Sensor"	
Crankshaft position sensor	EC-28, "Crankshaft Position Sensor (POS)"	
Camshaft position sensor	EC-29, "Camshaft Position Sensor (PHASE)"	
Intake valve timing control solenoid valve	EC-29. "Intake Valve Timing Control Solenoid Valve"	
Exhaust valve timing control position sensor	EC-29, "Exhaust Valve Timing Control Position Sensor"	
Exhaust valve timing control solenoid valve	EC-30, "Exhaust Valve Timing Control Solenoid Valve"	
Air fuel ratio (A/F) sensor 1	EC-30, "Air Fuel Ratio (A/F) Sensor 1"	
Heated oxygen sensor 2	EC-30. "Heated Oxygen Sensor 2"	
Knock sensor	EC-31, "Knock Sensor"	
Engine oil pressure sensor	EC-31, "Engine Oil Pressure Sensor"	
Engine oil temperature sensor	EC-32, "Engine Oil Temperature Sensor"	
Cooling fan	EC-32, "Cooling Fan"	
EVAP canister purge volume control solenoid valve	EC-32, "EVAP Canister Purge Volume Control Solenoid Valve"	
EVAP canister vent control valve	EC-33, "EVAP Canister Vent Control Valve"	
EVAP control system pressure sensor	EC-33, "EVAP Control System Pressure Sensor"	
Battery current sensor	EC-33, "Battery Current Sensor (With Battery Temperature Sen-	
Battery temperature sensor	sor)"	
Malfunction indicator lamp (MIL)	EC-34, "Malfunction Indicator lamp (MIL)"	
Oil pressure warning lamp	EC-34, "Oil Pressure Warning Lamp"	
Refrigerant pressure sensor	EC-34, "Refrigerant Pressure Sensor"	
Stop lamp switch		
Brake pedal position switch	EC-34, "Stop Lamp Switch & Brake Pedal Position Switch"	
Clutch pedal position switch	EC-35, "Clutch Pedal Position Switch"	
ASCD steering switch	EC-35, "ASCD Steering Switch"	
Information display	EC-35, "Information Display"	

ECM INFOID:0000000008274431


The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The ECM controls the engine.

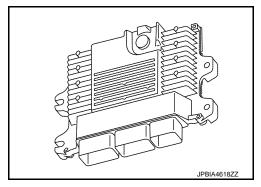

INFOID:0000000008274432


Accelerator Pedal Position Sensor

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

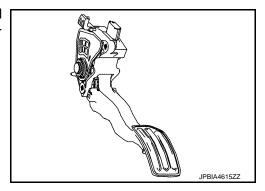

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometers which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the accelerator pedal and feed the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

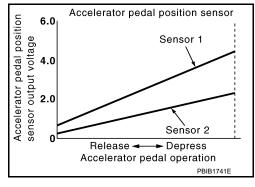


INFOID:0000000008274433

Electric Throttle Control Actuator

OUTLINE

Electric throttle control actuator consists of throttle body, throttle valve, throttle control motor and throttle position sensor.

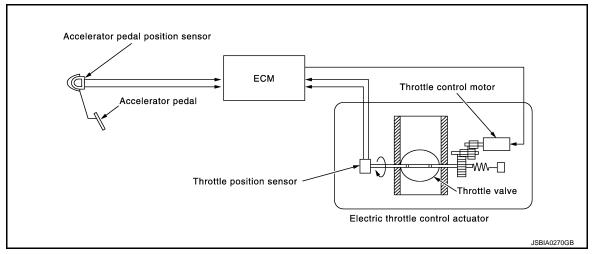

THROTTLE CONTROL MOTOR RELAY

Power supply for the throttle control motor is provided to the ECM via throttle control motor relay. The throttle control motor relay is ON/OFF controlled by the ECM. When the ignition switch is turned ON, the ECM sends an ON signal to throttle control motor relay and battery voltage is provided to the ECM. When the ignition switch is turned OFF, the ECM sends an OFF signal to throttle control motor relay and battery voltage is not provided to the ECM.


THROTTLE CONTROL MOTOR

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feed-back to the ECM to control the throttle control motor to make the throttle valve opening angle properly in response to driving condition.


THROTTLE POSITION SENSOR

The throttle position sensor responds to the throttle valve movement. The throttle position sensor has two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signal to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

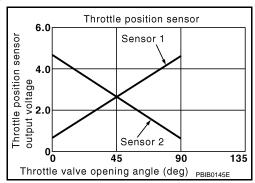

Ignition Coil With Power Transistor

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns ON and OFF the ignition coil primary circuit. This ON/OFF operation induces the proper high voltage in the coil secondary circuit.

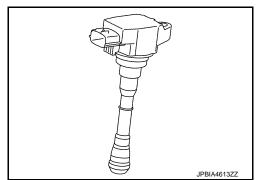

EC

Α

С

Е

Г

Н

J

K

L

M

N

INFOID:0000000008274434


0

Ρ

[MR16DDT]

Fuel Injector

For the fuel injector, a high pressure fuel injector is used and this enables a high-pressure fuel injection at a high voltage within a short time. The ECM is equipped with an injector driver unit and actuates the fuel injector at a high voltage (approximately 65 V at the maximum).

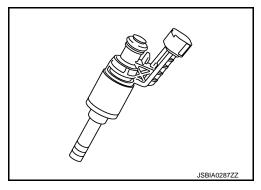


High Pressure Fuel Pump

INFOID:0000000008274436


The high pressure fuel pump is activated by the exhaust camshaft.

ECM controls the high pressure fuel pump control solenoid valve built into the high pressure fuel pump and adjusts the amount of discharge by changing the suction timing of the low pressure fuel.

Operating Description

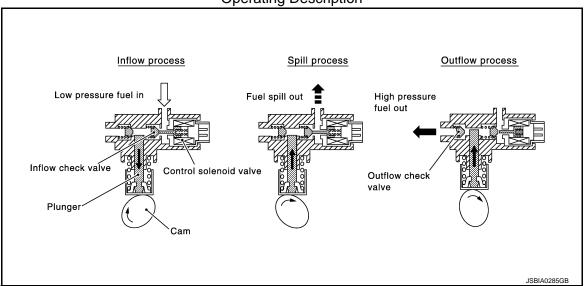

Operating Chart

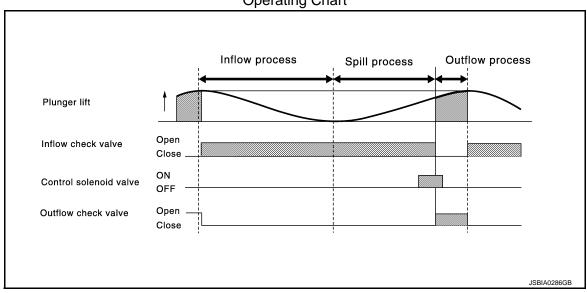


sor as a feedback signal.

INFOID:0000000008274437

INFOID:00000000008274438


Fuel Rail Pressure Sensor

The fuel rail pressure (FRP) sensor is placed to the fuel rail and measures fuel pressure in the fuel rail. The sensor transmits voltage signal to the ECM. As the pressure increases, the voltage rises. The ECM controls the fuel pressure in the fuel rail by operating high pressure fuel pump. The ECM uses the signal from fuel rail pressure sensors.

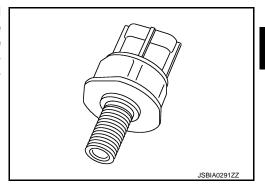


Low Pressure Fuel Pump

The low pressure fuel pump is integrated with a fuel pressure regulator and a fuel filter. This pump is build into the fuel tank.

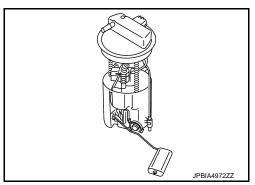

Fuel Tank Temperature Sensor

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

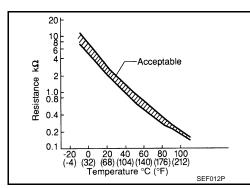

<Reference data>

Fuel Level Sensor

Fluid temperature [°C (°F)]	Voltage* [V]	Resistance $[k\Omega]$
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

^{*:} These data are reference values and are measured between ECM terminals.

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

EC

Α

D

_

F

G

. .

INFOID:0000000008274439

INFOID:0000000008274440

J

Κ

M

Ν

 \cap

Mass Air Flow Sensor (With Intake Air Temperature Sensor 1)


INFOID:0000000008274441

INFOID:0000000008274442

MASS AIR FLOW SENSOR

The mass air flow sensor (1) is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. The mass air flow sensor controls the temperature of the hot wire to a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the electric current supplied to hot wire is changed to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

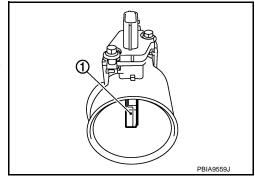

INTAKE AIR TEMPERATURE SENSOR 1


The intake air temperature sensor 1 is built-into mass air flow sensor. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

<Reference data>


Intake air temperature [°C (°F)]	Voltage [*] (V)	Resistance (kΩ)
25 (77)	3.3	1.800 - 2.200
80 (176)	1.2	0.283 - 0.359

^{*:} These data are reference values and are measured between ECM terminals.

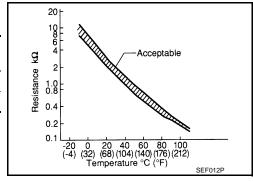

Turbocharger

Turbocharger boost is controlled by adjusting the pressure to the diaphragm of the boost control actuator.

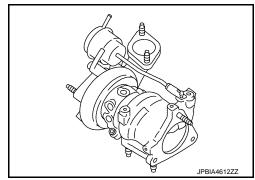


TURBOCHARGER BOOST CONTROL SOLENOID VALVE

Turbocharger boost control solenoid valve is ON/OFF duty controlled by ECM.

[MR16DDT]

And it adjusts the pressure in the diaphragm of the boost control actuator. The longer the turbocharger boost control solenoid valve is ON, the higher the boost is increased.

- A. From boost pipe
- B. To boost control actuator
- C. To Air cleaner

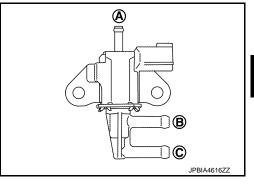



Turbocharger Boost Sensor (With Intake Air Temperature Sensor 2)

INFOID:0000000008274443

TURBOCHARGER BOOST SENSOR

The turbocharger boost sensor detects the pressure of the outlet side of the intercooler. When increasing the pressure, the output voltage of the sensor to the ECM increases.

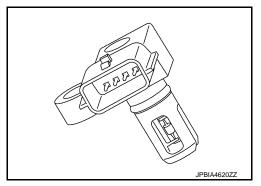

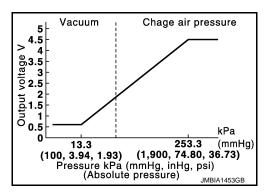

INTAKE AIR TEMPERATURE SENSOR 2


The intake air temperature sensor 2 is built-into turbocharger boost sensor. The sensor detects intake air temperature and transmits a signal to the ECM.

The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

<Reference data>

Intake air temperature [°C (°F)]	Voltage [*] (V)	Resistance (kΩ)
25 (77)	3.3	1.800 - 2.200
80 (176)	1.2	0.283 - 0.359

^{*:} These data are reference values and are measured between ECM terminals.

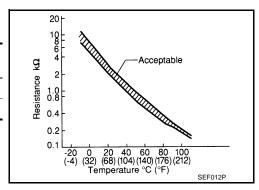

EC

Α

D

Е

F

G

Н

J

Κ

N

Ν


0

Ρ

Engine Coolant Temperature Sensor

INFOID:0000000008274444


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

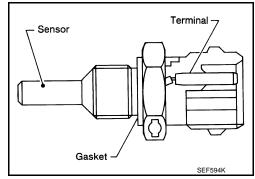

<Reference data>

Engine coolant temperature [°C (°F)]	Voltage [*] (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.37 - 2.63
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

^{*:} These data are reference values and are measured between ECM terminals.

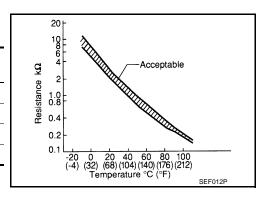

INFOID:0000000008274445

Crankshaft Position Sensor (POS)

The crankshaft position sensor (POS) is located on the oil pan facing the gear teeth (cogs) of the signal plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet and Hall IC.


When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.


The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

ECM receives the signals as shown in the figure.

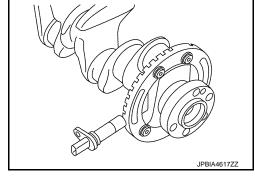

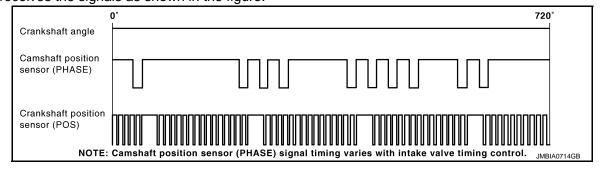

INFOID:0000000008274446

Camshaft Position Sensor (PHASE)

The camshaft position sensor (PHASE) senses the retraction of intake camshaft to identify a particular cylinder. The camshaft position sensor (PHASE) senses the piston position.

When the crankshaft position sensor (POS) system becomes inoperative, the camshaft position sensor (PHASE) provides various controls of engine parts instead, utilizing timing of cylinder identification signals.


The sensor consists of a permanent magnet and Hall IC.

When engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

ECM receives the signals as shown in the figure.

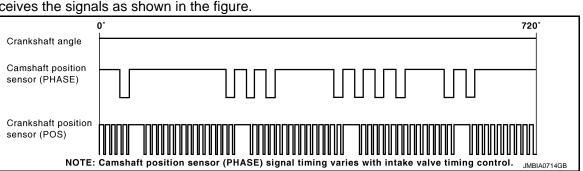

Intake Valve Timing Control Solenoid Valve

Intake valve timing control solenoid valve is activated by ON/OFF pulse duty (ratio) signals from the ECM.

The intake valve timing control solenoid valve changes the oil amount and direction of flow through intake valve timing control unit or stops oil flow.

The longer pulse width advances valve angle.

The shorter pulse width retards valve angle.

When ON and OFF pulse widths become equal, the solenoid valve stops oil pressure flow to fix the intake valve angle at the control position.

Exhaust Valve Timing Control Position Sensor

Exhaust valve timing control position sensor detects the protrusion of the signal plate installed to the exhaust camshaft front end.


This sensor signal is used for sensing a position of the exhaust camshaft.

The sensor consists of a permanent magnet and Hall IC.


When engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to


Due to the changing magnetic field, the voltage from the sensor changes.

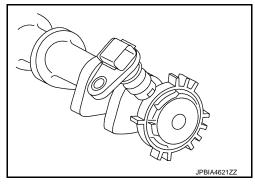

INFOID:0000000008274447

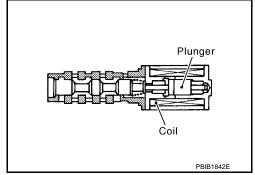

INFOID:0000000008274448

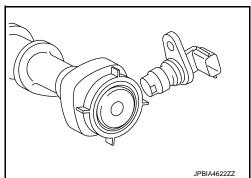

EC

Α

D

M

N

2013 JUKE

Exhaust Valve Timing Control Solenoid Valve

INFOID:0000000008274449


Exhaust valve timing control solenoid valve is activated by ON/OFF pulse duty (ratio) signals from the ECM.

The exhaust valve timing control solenoid valve changes the oil amount and direction of flow through exhaust valve timing control unit or stops oil flow.

The longer pulse width retards valve angle.

The shorter pulse width advances valve angle.

When ON and OFF pulse widths become equal, the solenoid valve stops oil pressure flow to fix the exhaust valve angle at the control position.

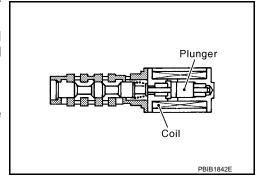

INFOID:0000000008274450


Air Fuel Ratio (A/F) Sensor 1

DESCRIPTION


The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

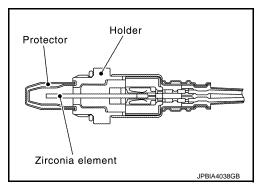

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of approximately 760° C (1,400°F).

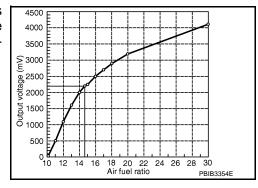

A/F SENSOR 1 HEATER

A/F sensor 1 heater is integrated in the sensor.

The ECM performs ON/OFF duty control of the A/F sensor 1 heater corresponding to the engine operating condition to keep the temperature of A/F sensor 1 element within the specified range.

Heated Oxygen Sensor 2

INFOID:0000000008274451

DESCRIPTION

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[MR16DDT]

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

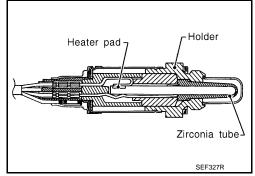

HEATED OXYGEN SENSOR 2 HEATER


Heated oxygen sensor 2 heater is integrated in the sensor.

The ECM performs ON/OFF control of the heated oxygen sensor 2 heater corresponding to the engine speed, amount of intake air and engine coolant temperature.

Engine speed	Heated oxygen sensor 2 heater
Above 3,600 rpm	OFF
Below 3,600 rpm after the following conditions are met. Engine: After warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load	ON


Knock Sensor

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM.

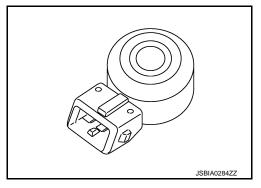

Engine Oil Pressure Sensor

The engine oil pressure (EOP) sensor is detects engine oil pressure and transmits a voltage signal to the ECM.

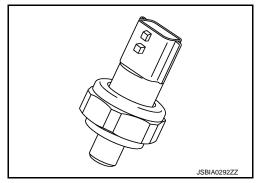

Α

EC

D

Е

F

J

K

INFOID:0000000008274453

M


Ν

Ρ

Engine Oil Temperature Sensor


INFOID:0000000008274454

The engine oil temperature sensor is used to detect the engine oil temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine oil temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

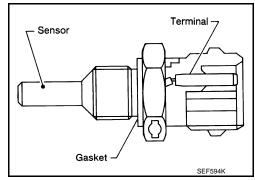

<Reference data>

Engine oil temperature [°C (°F)]	Voltage [*] (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.37 - 2.63
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260
110 (230)	0.6	0.143 - 0.153

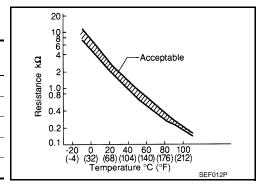

^{*:} These data are reference values and are measured between ECM terminals.

Cooling Fan

INFOID:0000000008274455

COOLING FAN CONTROL MODULE

Cooling fan control module receives ON/OFF pulse duty signal from IPDM E/R. Corresponding to this ON/OFF pulse duty signal, cooling fan control module sends cooling fan motor operating voltage to cooling fan motor. The revolution speed of cooling fan motor is controlled by duty cycle of the voltage.


COOLING FAN MOTOR

Cooling fan motor receives cooling fan motor operating voltage from cooling fan control module. The revolution speed of cooling fan motor is controlled by duty cycle of the voltage.

EVAP Canister Purge Volume Control Solenoid Valve

INFOID:0000000008274456

The EVAP canister purge volume control solenoid valve uses a ON/ OFF duty to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

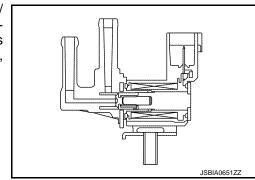

EVAP Canister Vent Control Valve


INFOID:0000000008274457

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.


When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

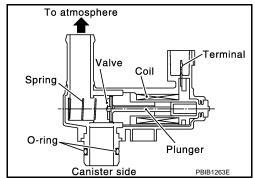

INFOID:0000000008274458

EVAP Control System Pressure Sensor

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

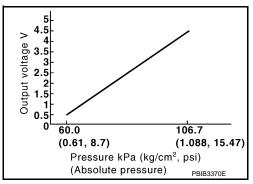


Battery Current Sensor (With Battery Temperature Sensor)

INFOID:0000000008274459

OUTLINE

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator.

Based on sensor signals, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to CHG-7, "POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM: System Description".

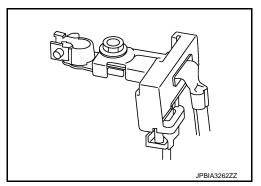

CAUTION:

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then the battery discharge may occur.

BATTERY CURRENT SENSOR

The battery current sensor is installed to the battery negative cable. The sensor measures the charging/discharging current of the battery.

BATTERY TEMPERATURE SENSOR

Р

EC-33 Revision: 2014 February 2013 JUKE

EC

Α

D

< SYSTEM DESCRIPTION >


Battery temperature sensor is integrated in battery current sensor. The sensor measures temperature around the battery.

The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Temperature [°C (°F)]	Voltage [*] (V)	Resistance (k Ω)
25 (77)	3.333	1.9 - 2.1
90 (194)	0.969	0.222 - 0.258

^{*:} These data are reference values and are measured between battery temperature sensor signal terminal and sensor ground.

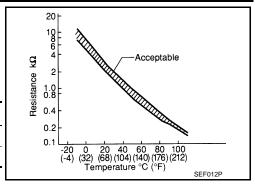


Malfunction Indicator lamp (MIL)

The Malfunction Indicator lamp (MIL) is located on the combination meter.

The MIL will illuminate when the ignition switch is turned ON without the engine running. This is a bulb check.

When the engine is started, the MIL should turn OFF. If the MIL remains illuminated, the on board diagnostic system has detected an engine system malfunction.

For details, refer to <u>EC-70</u>, "<u>DIAGNOSIS DESCRIPTION</u>: <u>Malfunction Indicator Lamp (MIL)</u>".

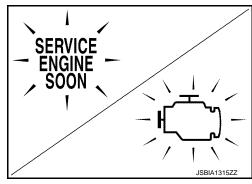


INFOID:0000000008274461

INFOID:0000000008274460

Oil Pressure Warning Lamp

Oil pressure warning lamp is located on the combination meter. It indicates the low pressure of the engine oil and the malfunction of the engine oil pressure system.


Combination meter turns the oil pressure warning lamp ON/OFF according to the oil pressure warning lamp signal received from ECM via CAN communication.

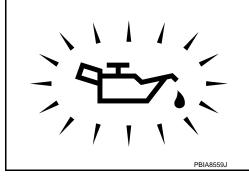

Refrigerant Pressure Sensor

INFOID:0000000008274462

The refrigerant pressure sensor is installed at the condenser of the air conditioner system. The sensor uses an electrostatic volume pressure transducer to convert refrigerant pressure to voltage. The voltage signal is sent to ECM, and ECM controls cooling fan system.

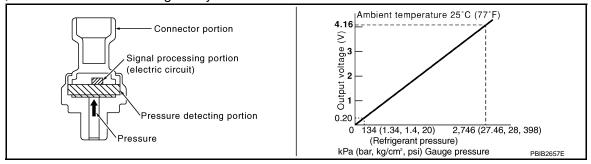

Stop Lamp Switch & Brake Pedal Position Switch

INFOID:0000000008274463

Stop lamp switch and brake pedal position switch are installed to brake pedal bracket. ECM detects the state of the brake pedal by those two types of input (ON/OFF signal).

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[MR16DDT]

Brake pedal	Brake pedal position switch	Stop lamp switch
Released	ON	OFF
Depressed	OFF	ON

EC

D

Α

Clutch Pedal Position Switch

INFOID:00000000008274464

When the clutch pedal is depressed, the clutch pedal position switch turns OFF and the clutch pedal position switch signal is sent to the ECM. The ECM judges the clutch pedal conditions via the signal (ON or OFF).

ASCD Steering Switch

INFOID:0000000008274465

ASCD steering switch has variant values of electrical resistance for each button. ECM reads voltage variation of switch, and determines which button is operated.

Information Display

INFOID:0000000008274466

The operation mode of the ASCD is indicated on the information display in the combination meter. ECM transmits the status signal to the combination meter via CAN communication according to ASCD operation.

G

F

Н

K

N /I

L

Ν


0

Р

STRUCTURE AND OPERATION

Positive Crankcase Ventilation

INFOID:0000000008274467

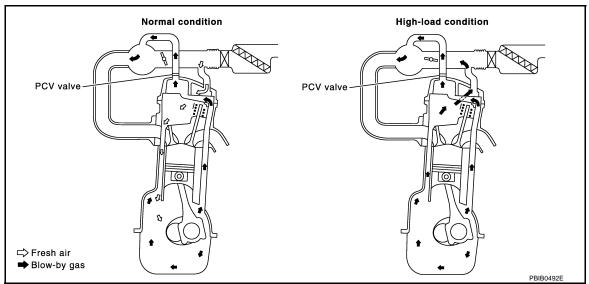

This system returns blow-by gas to the intake manifold.

The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold.


During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve.

Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air.

The ventilating air is then drawn from the air inlet tubes into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover.


Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the air inlet tubes under all conditions.

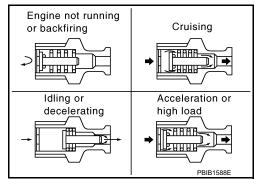

2013 JUKE

On Board Refueling Vapor Recovery (ORVR)

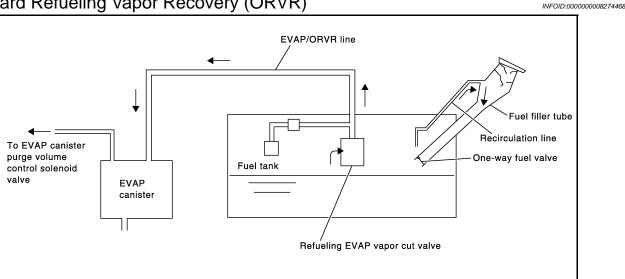

From the beginning of refueling, the air and vapor inside the fuel tank go through refueling EVAP vapor cut valve and EVAP/ORVR line to the EVAP canister. The vapor is absorbed by the EVAP canister and the air is released to the atmosphere.

When the refueling has reached the full level of the fuel tank, the refueling EVAP vapor cut valve is closed and refueling is stopped because of auto shut-off. The vapor which was absorbed by the EVAP canister is purged during driving.

WARNING:

When conducting inspections below, be sure to observe the following:

- Put a "CAUTION: FLAMMABLE" sign in workshop.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from work area.
- Be sure to furnish the workshop with a CO2 fire extinguisher.

CAUTION:

- Before removing fuel line parts, carry out the following procedures:
- Put drained fuel in an explosion-proof container and put lid on securely.
- Release fuel pressure from fuel line. Refer to EC-538, "Inspection".
- Disconnect battery ground cable.
- · Always replace O-ring when the fuel gauge retainer is removed.
- Do not kink or twist hose and tube when they are installed.
- Do not tighten hose and clamps excessively to avoid damaging hoses.
- After installation, run engine and check for fuel leaks at connection.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically. Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.

EC

Α

D

Е

Г

Н

J

Κ

L

N


Р

SYSTEM

ENGINE CONTROL SYSTEM

ENGINE CONTROL SYSTEM: System Diagram

INFOID:0000000008274469

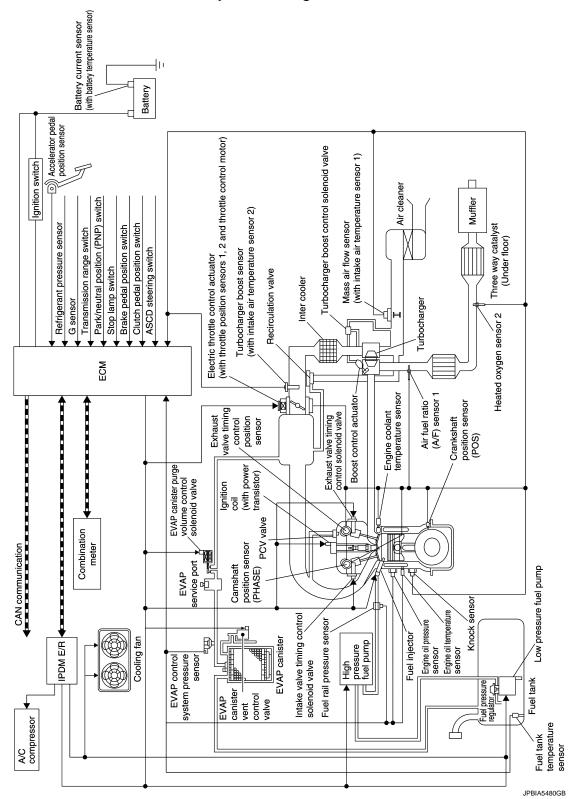

ENGINE CONTROL SYSTEM: System Description

INFOID:0000000008274470

ECM controls the engine by various functions.

SYSTEM

[MR16DDT]

Function	Reference	Δ
Direct injection gasoline system	EC-40, "DIRECT INJECTION GASOLINE SYSTEM : System Description"	
Fuel pressure control	EC-43. "FUEL PRESSURE CONTROL : System Description"	EC
Electric ignition control	EC-45. "ELECTRIC IGNITION SYSTEM : System Description"	
Intake valve timing control	EC-46, "INTAKE VALVE TIMING CONTROL: System Description"	
Exhaust valve timing control	EC-47, "EXHAUST VALVE TIMING CONTROL : System Description"	C
Turbocharger boost control	EC-49, "TURBOCHARGER BOOST CONTROL : System Description"	D
Engine protection control (Low engine oil pressure)	EC-50, "ENGINE PROTECTION CONTROL AT LOW ENGINE OIL PRESSURE: System Description"	
Fuel filler cap warning system	EC-51, "FUEL FILLER CAP WARNING SYSTEM : System Description"	
Air conditioning cut control	EC-52, "AIR CONDITIONING CUT CONTROL : System Description"	F
Cooling fan control	EC-54, "COOLING FAN CONTROL : System Description"	
Starter motor drive control	EC-54, "STARTER MOTOR DRIVE CONTROL : System Description"	G
Evaporative emission system	EC-55, "EVAPORATIVE EMISSION SYSTEM : System Description"	
ASCD (Automatic speed control device)	EC-57, "AUTOMATIC SPEED CONTROL DEVICE (ASCD) : System Description"	Н
Integrated control system	EC-58, "INTEGRATED CONTROL SYSTEM : System Description"	I
CAN communication	EC-59, "CAN COMMUNICATION : System Description"	

DIRECT INJECTION GASOLINE SYSTEM

K

J

L

M


Ν

0

Ρ

DIRECT INJECTION GASOLINE SYSTEM: System Diagram

VFOID:0000000000827447

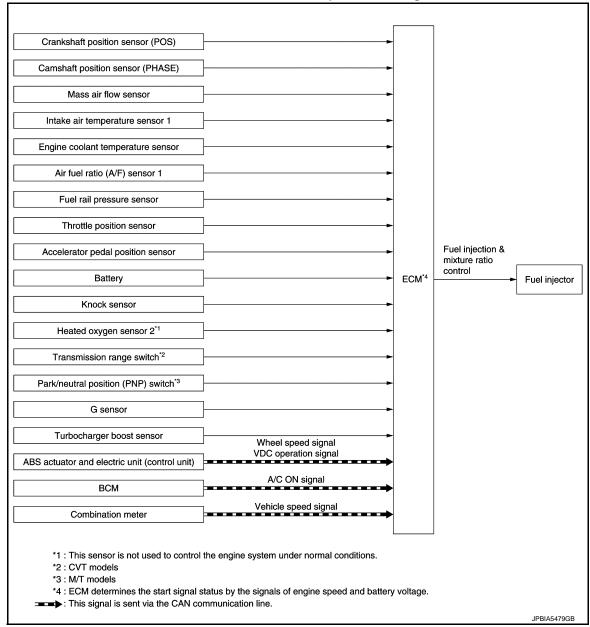

DIRECT INJECTION GASOLINE SYSTEM : System Description

INFOID:0000000008274472

INPUT/OUTPUT SIGNAL CHART

Sensor		Input signal to ECM	ECM func- tion	Actuator	А
Crankshaft position sensor (POS)	Engine speed*4	1			
Camshaft position sensor (PHASE)	Camshaft posit	ion			EC
Mass air flow sensor	Amount of intal	ke air			
Intake air temperature sensor 1	Intake air temperature				C
Engine coolant temperature sensor	Engine coolant temperature				
Air fuel ratio (A/F) sensor 1	Density of oxyg	en in exhaust gas			
Fuel rail pressure sensor	Fuel rail pressu	ire			D
Throttle position sensor	Throttle position	n			
Accelerator pedal position sensor	Accelerator ped	dal position	Fuelinjection		Е
Battery	Battery voltage	*4	& mixture ra-	Fuel injector	
Knock sensor	Engine knockin	g condition	LIO CONTION		
Heated oxygen sensor 2*1	Density of oxyg	gen in exhaust gas			F
Transmission range switch*2	Coorposition				
Park/neutral position (PNP) switch*3	Gear position				G
G sensor	Inclination angl	е			
Turbocharger boost sensor	Turbocharger b	oost			
ABS actuator and electric unit (control unit)	CAN commu- nication	Wheel speed signal VDC/TCS operation command			Н
BCM	CAN commu- nication	A/C ON signal	-		I
Combination meter	CAN commu- nication	Vehicle speed signal			

^{*1:} This sensor is not used to control the engine system under normal conditions.

SYSTEM DESCRIPTION

The adoption of the direct fuel injection method enables more accurate adjustment of fuel injection quantity by injecting atomized high-pressure fuel directly into the cylinder. This method allows high-powered engine, low fuel consumption, and emissions-reduction.

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed, intake air, fuel rail pressure and boost) from the crankshaft position sensor, camshaft position sensor, mass air flow sensor, fuel rail pressure sensor and the turbocharger boost sensor.

VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.

<Fuel increase>

- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever position is changed from N to D (CVT models)
- High-load, high-speed operation

<Fuel decrease>

- During deceleration
- During high engine speed operation

EC-41 Revision: 2014 February 2013 JUKE

K

Р

^{*2:} CVT models

^{*3:} M/T models

^{*4:} ECM determines the start signal status by the signals of engine speed and battery voltage.

FUEL INJECTION CONTROL

Stratified-charge Combustion

Stratified-charge combustion is a combustion method which enables extremely lean combustion by injecting fuel in the latter half of a compression process, collecting combustible air-fuel around the spark plug, and forming fuel-free airspace around the mixture.


Right after a start with the engine cold, the catalyst warm-up is accelerated by stratified-charge combustion.

Homogeneous Combustion

Homogeneous combustion is a combustion method that fuel is injected during intake process so that combustion occurs in the entire combustion chamber, as is common with conventional methods.

As for a start except for starts with the engine cold, homogeneous combustion occurs.

MIXTURE RATIO FEEDBACK CONTROL (CLOSED LOOP CONTROL)

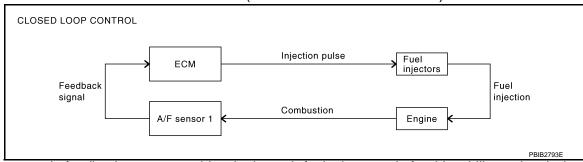

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst (manifold) can better reduce CO, HC and NOx emissions. This system uses A/F sensor 1 in the exhaust manifold to monitor whether the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about A/F sensor 1, refer to EC-30, "Air Fuel Ratio (A/F) Sensor 1". This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Heated oxygen sensor 2 is located downstream of the three way catalyst (manifold). Even if the switching characteristics of A/F sensor 1 shift, the air-fuel ratio is controlled to stoichiometric by the signal from heated oxygen sensor 2.

- Open Loop Control
 - The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.
- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of A/F sensor 1 or its circuit
- Insufficient activation of A/F sensor 1 at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- After shifting from N to D (CVT models)
- When starting the engine

MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from A/F sensor 1. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. Both manufacturing differences (i.e., mass air flow sensor hot wire) and characteristic changes during operation (i.e., fuel injector clogging) directly affect mixture ratio.

Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes "short-term fuel trim" and "long-term fuel trim".


"Short term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from A/F sensor 1 indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

"Long-term fuel trim" is overall fuel compensation carried out over time to compensate for continual deviation of the "short-term fuel trim" from the central value. Continual deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

FUEL INJECTION TIMING

Sequential Direct Injection Gasoline System

Fuel is injected into each cylinder during each engine cycle according to the ignition order.

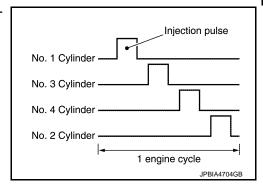

STRATIFIED-CHARGE START CONTROL

The use of the stratified-charge combustion method enables emissions-reduction when starting the engine with engine coolant temperature between 5°C (41°F) and 40°C (104°F).

FUEL SHUT-OFF

Fuel to each cylinder is shut-off during deceleration, operation of the engine at excessively high speed or operation of the vehicle at excessively high speed.

FUEL PRESSURE CONTROL

FUEL PRESSURE CONTROL: System Diagram

Crankshaft position sensor (POS) Exhaust valve timing control position sensor Fuel rail pressure sensor Fuel rail pressure control High pressure ECM* Engine coolant temperature sensor fuel pump Throttle position sensor Accelerator pedal position sensor Battery *: ECM determines the start signal status by the engine speed signal and battery voltage. JPBIA4920GE

FUEL PRESSURE CONTROL: System Description

INPUT/OUTPUT SIGNAL CHART

EC

D

Е

Н

INFOID:0000000008274473

N


INFOID:0000000008274474

Р

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed*		
Exhaust valve timing control position sensor	Camshaft position		
Fuel rail pressure sensor	Fuel rail pressure	1	
Engine coolant temperature sensor	Engine coolant temperature	Fuel rail pres- sure control	High pressure fuel pump
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position		
Battery	Battery voltage*		

^{*:} ECM determines the start signal status by the engine speed signal and battery voltage.

System Description

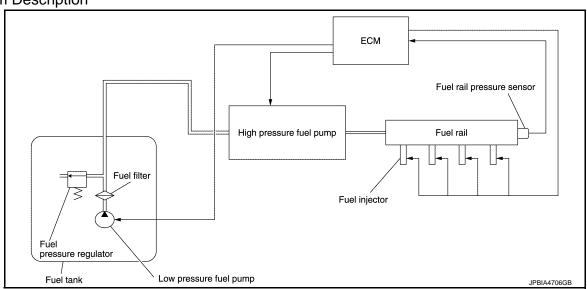

Low fuel pressure control

- The low fuel pressure pump is controlled by ECM. The pumped fuel passes through the fuel filter and is sent to the high pressure fuel pump.
- Low fuel pressure is adjusted by the fuel pressure regulator.

High fuel pressure control

The high pressure fuel pump raises the pressure of the fuel sent from the low pressure fuel pump. Actuated by the exhaust camshaft, the high pressure fuel pump activates the high pressure fuel pump solenoid based on a signal received from ECM, and adjusts the amount of discharge by changing the timing of closing the inlet check valve to control fuel rail pressure.


ELECTRIC IGNITION SYSTEM

JPBIA4921GB

INFOID:0000000008274476

Α

ELECTRIC IGNITION SYSTEM: System Diagram

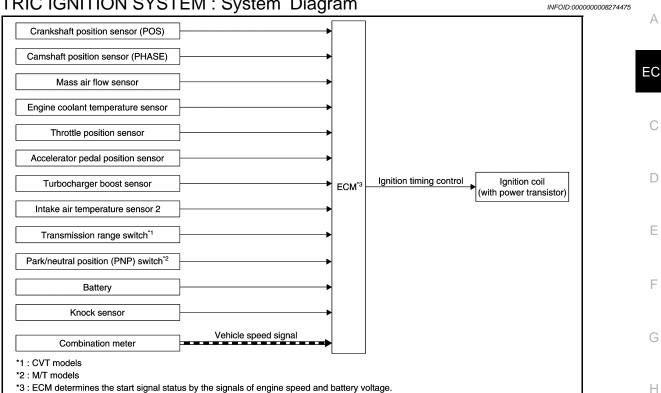

ELECTRIC IGNITION SYSTEM: System Description

: This signal is sent through CAN communication line.

INPUT/OUTPUT SIGNAL CHART

Sensor	ı	nput Signal to ECM	ECM func- tion	Actuator
Crankshaft position sensor (POS)	Engine speed	Engine speed*3		
Camshaft position sensor (PHASE)	Piston position			
Mass air flow sensor	Amount of inta	ıke air		
Engine coolant temperature sensor	Engine coolan	t temperature		
Throttle position sensor	Throttle position	Throttle position		
Accelerator pedal position sensor	Accelerator pe	Accelerator pedal position		Ignition coil (with power transistor)
Turbocharger boost sensor	Turbocharger	Turbocharger boost		
Intake air temperature sensor 2	Intake air temp	Intake air temperature		
Transmission range switch*1	Gear position			
Park/neutral position (PNP) switch*2	Gear position			
Battery	Battery voltage*			
Knock sensor	Engine knocking condition			
Combination meter	CAN commu- nication	Vehicle speed signal		

^{*1:} CVT models

SYSTEM DESCRIPTION

Firing order: 1 - 3 - 4 - 2

^{*2:} M/T models

^{*3:} ECM determines the start signal status by the signals of engine speed and battery voltage.

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM.

The ECM receives information such as the injection pulse width and camshaft position sensor (PHASE) signal. Computing this information, ignition signals are transmitted to the power transistor.

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.


- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions. If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

INTAKE VALVE TIMING CONTROL

INTAKE VALVE TIMING CONTROL: System Diagram

INFOID:0000000008274477

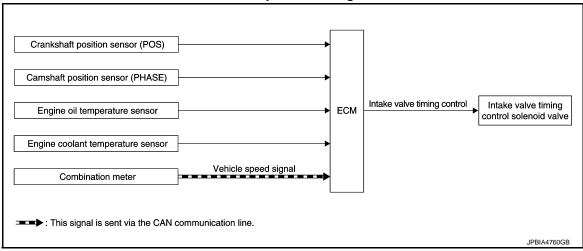

INTAKE VALVE TIMING CONTROL: System Description

INFOID:0000000008274478

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM		ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed and pictor position			
Camshaft position sensor (PHASE)	Engine speed and piston position			Intake valve timing control solenoid valve
Engine oil temperature sensor	Engine oil temperature		Intake valve tim- ing control	
Engine coolant temperature sensor	Engine coolant temperature			
Combination meter	CAN commu- nication	Vehicle speed		

Α


EC

D

K

Ν

SYSTEM DESCRIPTION

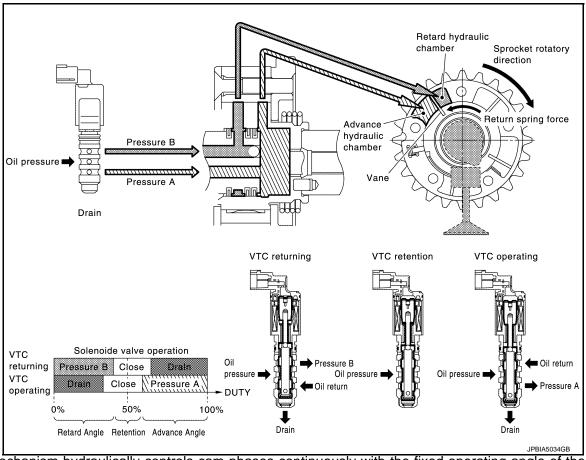


This mechanism hydraulically controls cam phases continuously with the fixed operating angle of the intakevalve.

The ECM receives signals such as crankshaft position, camshaft position, engine speed, and engine coolanttemperature. Then, the ECM sends ON/OFF pulse duty signals to the intake valve timing (IVT) control solenoid valve depending on driving status. This makes it possible to control the shut/open timing of the intake valve to increase engine torque in low/mid speed range and output in high-speed range.

EXHAUST VALVE TIMING CONTROL

EXHAUST VALVE TIMING CONTROL: System Diagram

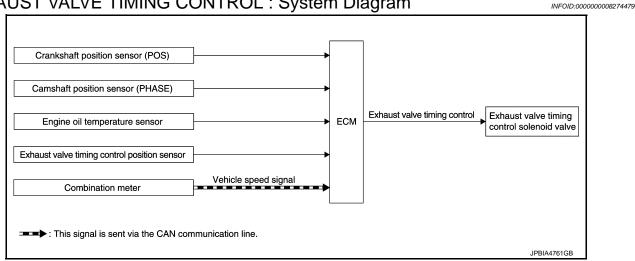


EXHAUST VALVE TIMING CONTROL: System Description

INFOID:0000000008274480

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM		ECM function	Actuator
Crankshaft position sensor (POS)	Coning and and nieton position			
Camshaft position sensor (PHASE)	Engine speed and piston position			
Engine oil temperature sensor	Engine oil temperature		Exhaust valve	Exhaust valve timing control solenoid valve
Exhaust valve timing control position sensor	Exhaust valve timing signal		timing control	
Combination meter	CAN commu- nication	Vehicle speed signal		

SYSTEM DESCRIPTION

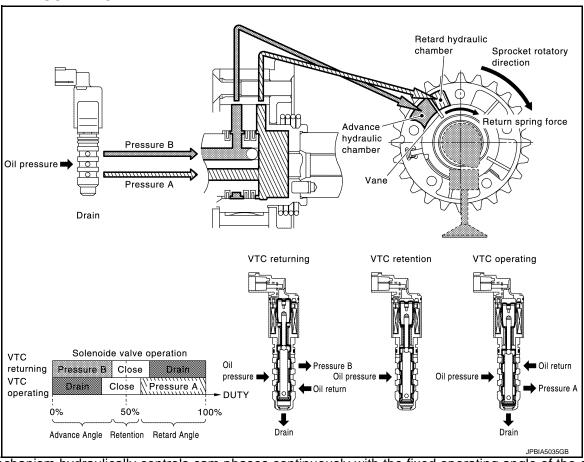

This mechanism hydraulically controls cam phases continuously with the fixed operating angle of the exhaust valve.

The ECM receives signals such as crankshaft position, camshaft position, engine speed, and engine oil temperature. Then, the ECM sends ON/OFF pulse duty signals to the exhaust valve timing (EVT) control solenoid valve depending on driving status. This makes it possible to control the shut/open timing of the exhaust valve to increase engine torque and output in a range of high engine speed.

TURBOCHARGER BOOST CONTROL

INFOID:0000000008274481

Α


EC

D

M

Р

TURBOCHARGER BOOST CONTROL: System Diagram

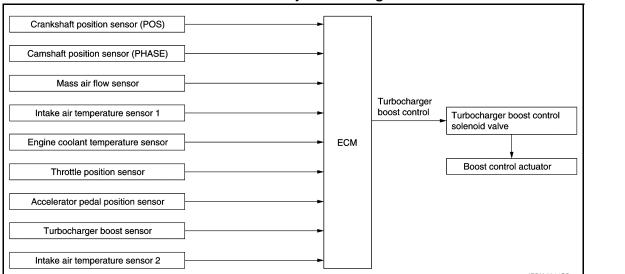

TURBOCHARGER BOOST CONTROL: System Description

INFOID:0000000008274482

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine and d		
Camshaft position sensor (PHASE)	Engine speed	Turbocharger boost control	Turbocharger boost control solenoid valve ↓ Boost control actuator
Mass air flow sensor	Amount of intake air		
Intake air temperature sensor 1	Intake air temperature		
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position		
Turbocharger boost sensor	Turbocharger boost		
Intake air temperature sensor 2	Intake air temperature		


SYSTEM DESCRIPTION

Depending on driving conditions, the ECM performs ON/OFF duty control of the turbocharger boost control solenoid valve and controls the boost by adjusting the pressure to the diaphragm of the boost control actuator. When driving conditions demand an increase in boost, the ECM prolongs the ON time of the turbocharger boost control solenoid valve and moves the boost control valve towards the closing direction by reducing the pressure in the diaphragm of the boost control actuator. The emission gas to the turbine wheel is then increased. When driving conditions demand a decrease in boost, the ECM shortens the ON time of the turbocharger boost control solenoid valve and moves the boost control valve towards the opening position by increasing the pressure in the diaphragm of the boost control actuator. The emission bypassing to the turbine wheel is then increased. Thus, by performing the most optimal boost control, the ECM improves engine output and response.

NOTE:

The boost varies depending on the vehicle and driving conditions.

BOOST CONTROL ACTUATOR LINE DRAWING

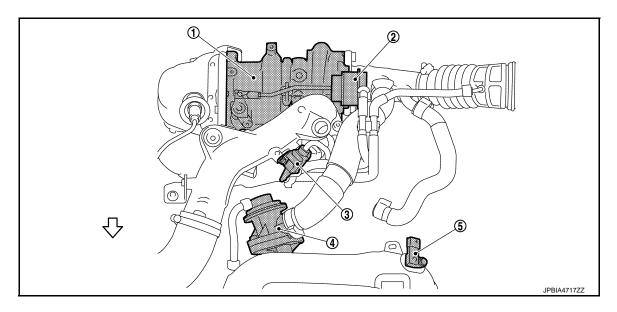


1. Turbocharger

- Boost control actuator
- Turbocharger boost control solenoid valve

- Recirculation valve
- Turbocharger boost sensor (with intake air temperature sensor 2)

⟨□: Vehicle front

ENGINE PROTECTION CONTROL AT LOW ENGINE OIL PRESSURE ENGINE PROTECTION CONTROL AT LOW ENGINE OIL PRESSURE : System Diagram INFOID.00000008274483

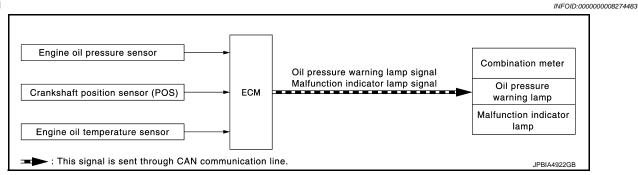

ENGINE PROTECTION CONTROL AT LOW ENGINE OIL PRESSURE: System Description

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Engine oil pressure sensor	Engine pressure	Engine protection control	
Crankshaft position sensor (POS)	Engine speed	Oil pressure warning lamp signal	Combination meter Oil pressure warning lamp
Engine oil temperature sensor	Engine oil temperature	FUel cut control	

SYSTEM DESCRIPTION

- The engine protection control at low engine oil pressure warns the driver of a decrease in engine oil pressure by the oil pressure warning lamp a before the engine becomes damaged.
- When detecting a decrease in engine oil pressure at an engine speed less than 1,000 rpm, ECM transmits
 an oil pressure warning lamp signal to the combination meter. The combination meter turns ON the oil pressure warning lamp, according to the signal.

Α

EC

D

Е

M


Ν

Decrease in engine oil	Engine speed	Combination meter
pressure	Lingine speed	Oil pressure warning lamp
Detection	Less than 1,000 rpm	ON*
Detection	1,000 rpm or more	ON

*: When detecting a normal engine oil pressure, ECM turns OFF the oil pressure warning lamp.

FUEL FILLER CAP WARNING SYSTEM

FUEL FILLER CAP WARNING SYSTEM: System Diagram

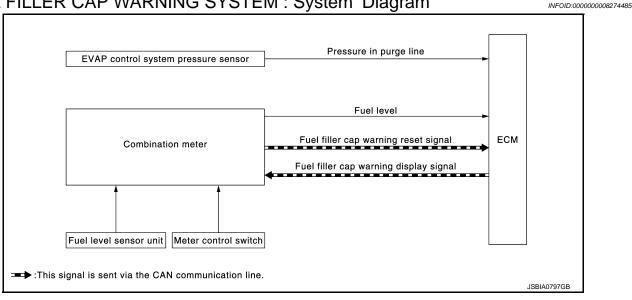

FUEL FILLER CAP WARNING SYSTEM: System Description

INFOID:0000000008274486

INPUT/OUTPUT SIGNAL CHART

l	r	1	p	u	Į

Unit/Sensor	Input signal to ECM	ECM function
EVAP control system pressure sensor	Pressure in purge line	
Combination mater	Fuel level	Fuel filler cap warning control
Combination meter	Fuel filler cap warning reset signal*	

^{*:} This signal is sent to the ECM via the CAN communication line.

Output

Unit	Output signal	Actuator
ECM	Fuel filler cap warning display signal*	Combination meter

^{*:} This signal is sent to the combination meter via the CAN communication line.

SYSTEM DESCRIPTION

The fuel filler cap warning system alerts the driver to the prevention of the fuel filler being left uncapped and malfunction occurrences after refueling, by turning ON the fuel filler cap warning display on the combination

ECM judges a refueled state, based on a fuel level signal transmitted from the combination meter.

When a very small leak is detected through the EVAP leak diagnosis performed after judging the refueled state, ECM transmits a fuel filler cap warning display signal (request for display ON) to the combination meter via CAN communication.

When receiving the signal, the combination meter turns ON the fuel filler cap warning display.

Check fuel filler cap installation condition when the fuel filler cap warning display turns ON.

Reset Operation

The fuel filler cap warning lamp tunes OFF, according to any condition listed below:

- Reset operation is performed by operating the meter control switch on the combination meter. Refer to <u>MWI-18</u>, "Switch Name and Function".
- When the reset operation is performed, the combination meter transmits a fuel filler cap warning reset signal to ECM via CAN communication. ECM transmits a fuel filler cap warning display signal (request for display OFF) to the combination meter via CAN communication. When receiving the signal, the combination meter turns OFF the fuel filler cap warning display.
- EVAP leak diagnosis result is normal.
- · Fuel refilled.
- DTC erased by using CONSULT.


NOTE:

MIL turns ON if a malfunction is detected in leak diagnosis results again at the trip after the fuel filler cap warning display turns ON/OFF.

AIR CONDITIONING CUT CONTROL

AIR CONDITIONING CUT CONTROL: System Diagram

INFOID:0000000008274487

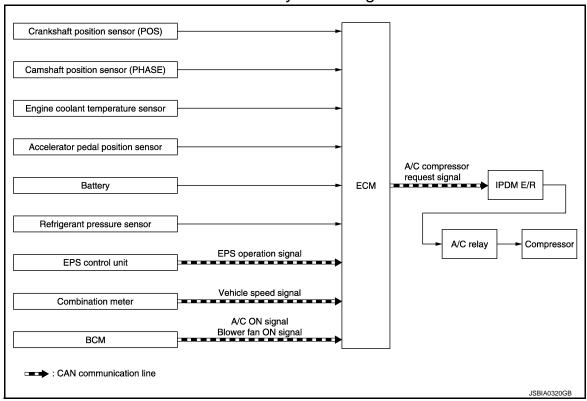

AIR CONDITIONING CUT CONTROL: System Description

INFOID:0000000008274488

INPUT/OUTPUT SIGNAL CHART

Α

D

Е

F

Ν

Р

Sensor	In	put Signal to ECM	ECM function	Actuator	
Crankshaft position sensor (POS)	*				_
Camshaft position sensor (PHASE)	Engine speed*				
Engine coolant temperature sensor	Engine coolan	t temperature			E
Accelerator pedal position sensor	Accelerator pe	edal position			
Battery	Battery voltage	e [*]		IPDM E/R	(
Refrigerant pressure sensor	Refrigerant pre	essure	Air conditioner	↓ Air conditioner relay	
EPS control unit	CAN commu- nication	EPS operation signal	cut control	↓ Compressor	[
Combination meter	CAN commu- nication	Vehicle speed signal			
BCM	CAN commu- nication	A/C ON signal			[

^{*:} ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION


This system improves engine operation when the air conditioner is used.

Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- · When cranking the engine.
- At high engine speeds.
- When the engine coolant temperature becomes excessively high.
- When operating power steering during low engine speed or low vehicle speed.
- When engine speed is excessively low.
- When refrigerant pressure is excessively low or high.

COOLING FAN CONTROL

COOLING FAN CONTROL: System Diagram

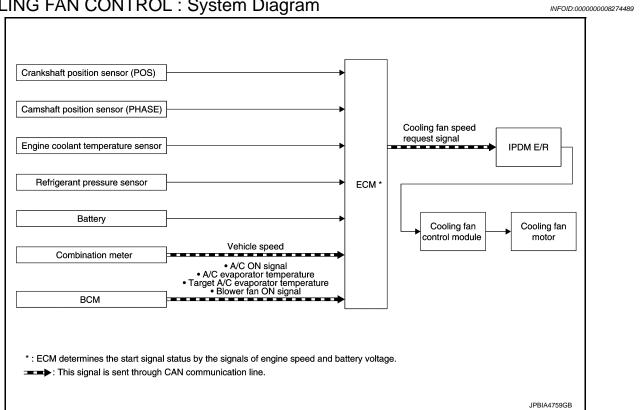

COOLING FAN CONTROL: System Description

INFOID:0000000008274490

INPUT/OUTPUT SIGNAL CHART

Sensor	Inpu	t signal to ECM	ECM function	Actuator	
Crankshaft position sensor (POS)	Engine speed*				
Camshaft position sensor (PHASE)	Engine speed				
Engine coolant temperature sensor	Engine coolant	temperature			
Refrigerant pressure sensor	Refrigerant pre	Refrigerant pressure			
Battery	Battery voltage [*]			IPDM E/R ↓ Cooling fan control module	
Combination meter	CAN communication Vehicle speed signal		Cooling fan control		
		A/C ON signal		↓ Cooling fan motor	
BCM	CAN commu-	A/C evaporator temper- ature*		Cooling fair motor	
BOW	nication	Target A/C evaporator temperature*			
		Blower fan ON signal*			

^{*:} The ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION


ECM controls cooling fan speed corresponding to vehicle speed, engine coolant temperature, A/C ON signal and refrigerant pressure.

Cooling fan control signal is sent to IPDM E/R from ECM by CAN communication line. Then, IPDM E/R sends ON/OFF pulse duty signal to cooling fan control module. Corresponding to this ON/OFF pulse duty signal, cooling fan control module gives cooling fan motor operating voltage to cooling fan motors. Cooling fan speed is controlled by duty cycle of cooling fan motor operating voltage sent from cooling fan control module.

STARTER MOTOR DRIVE CONTROL

STARTER MOTOR DRIVE CONTROL: System Diagram

INFOID:0000000008274491

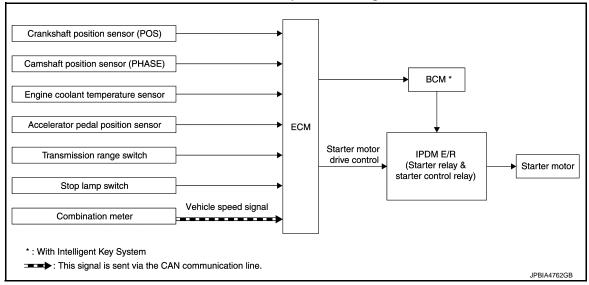

STARTER MOTOR DRIVE CONTROL: System Description

INFOID:0000000008274492

INPUT/OUTPUT SIGNAL CHART

Α

EC

D

F

Н

Ν

P

INFOID:0000000008274494

Sensor	Input signal to ECM	ECM function	Actuator	
Crankshaft position sensor (POS)	Engine speed			
Camshaft position sensor (PHASE)	Piston position			
Engine coolant temperature sensor	Engine coolant temperature		• BCM*	
Accelerator pedal position sensor	Accelerator pedal position	Starter motor	IPDM E/R (Starter relay & starter control relay)	
Transmission range switch	Gear position	drive control		
Stop lamp switch	Brake pedal position		er control relay)	
Combination meter	CAN communication Vehicle speed signal			

^{*:} With Intelligent Key system

SYSTEM DESCRIPTION

When rapid deceleration occurs during engine runs or idle speed decreases due to heavy load conditions, ECM detects a decrease in idle speed and restarts the engine to secure reliability in handleability by transmitting a cranking request signal to IPDM E/R for activating the starter motor under the following conditions:


- Selector lever: P or any position other than N
- Idle switch: ON (Accelerator pedal not depressed)
- Brake switch: ON (Brake pedal depressed)

Models with no Intelligent Key System transmit a control signal directly to IPDM E/R. On the other hand, models with the Intelligent Key System transmit a control signal to IPDM E/R by way of BCM via CAN communica-

IPDM E/R detects an operating state of the starter motor relay and the starter motor control relay and transmits a feed back signal to ECM via CAN Communication.

EVAPORATIVE EMISSION SYSTEM

EVAPORATIVE EMISSION SYSTEM: System Diagram

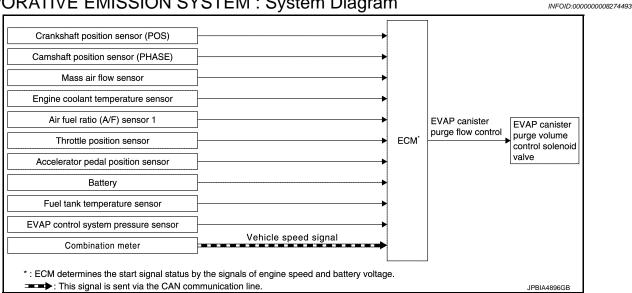


EVAPORATIVE EMISSION SYSTEM: System Description

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed*		
Camshaft position sensor (PHASE)	Piston position		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Air fuel ratio (A/F) sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		EVAP canister purge vol- ume control solenoid valve
Throttle position sensor	Throttle position	EVAP canister	
Accelerator pedal position sensor	Accelerator pedal position	purge flow control	
Battery	Battery voltage*		
Fuel tank temperature sensor	Fuel temperature in fuel tank		
EVAP control system pressure sensor	Pressure in purge line		
Combination meter	CAN communication Vehicle speed		

^{*:} ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

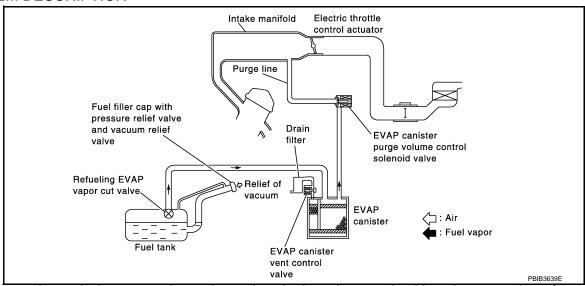

The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.

The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank.

The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases.

EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

Α

EC

D


Н

M

Ν

Р

AUTOMATIC SPEED CONTROL DEVICE (ASCD) : System Diagram

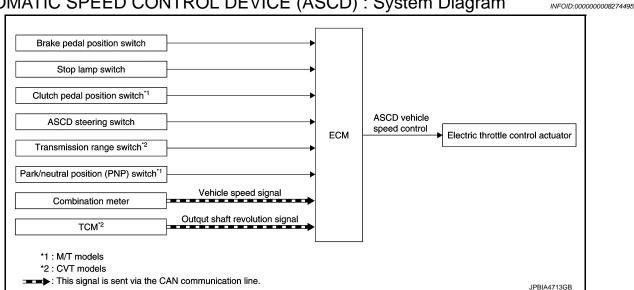

AUTOMATIC SPEED CONTROL DEVICE (ASCD): System Description

INFOID:0000000008274496

INPUT/OUTPUT SIGNAL CHART

Sensor	Ir	nput signal to ECM	ECM function	Actuator
Brake pedal position switch	5			
Stop lamp switch	- Brake pedal of	Brake pedal operation		
Clutch pedal position switch*1	Clutch pedal o	Clutch pedal operation		
ASCD steering switch	ASCD steering switch operation			
Transmission range switch*2	Gear position		ASCD vehicle speed control	Electric throttle control actuator
Park/neutral position (PNP) switch*1	Gear position		CONTROL	dotadioi
Combination meter	CAN commu- nication	Vehicle speed signal		
TCM ^{*2}	CAN commu- nication	Output shaft revolution signal		

^{*1:} M/T models

BASIC ASCD SYSTEM

Refer to Owner's Manual for ASCD operating instructions.

Automatic Speed Control Device (ASCD) allows a driver to keep vehicle at predetermined constant speed without depressing accelerator pedal. Driver can set vehicle speed in advance between approximately 40 km/h (25 MPH) and 144 km/h (90 MPH).

ECM controls throttle angle of electric throttle control actuator to regulate engine speed.

Operation status of ASCD is indicated by CRUISE indicator and SET indicator in combination meter. If any malfunction occurs in ASCD system, it automatically deactivates control.

Refer to <u>EC-60</u>, "<u>AUTOMATIC SPEED CONTROL DEVICE (ASCD)</u>: <u>Switch Name and Function"</u> for ASCD operating instructions.

NOTE:


Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws. INTEGRATED CONTROL SYSTEM

^{*2:} CVT models


INTEGRATED CONTROL SYSTEM: System Diagram

INFOID:0000000008274497

CVT models

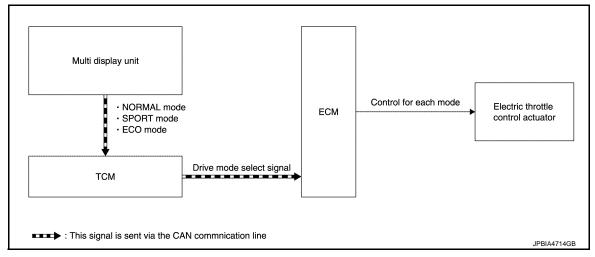

M/T models

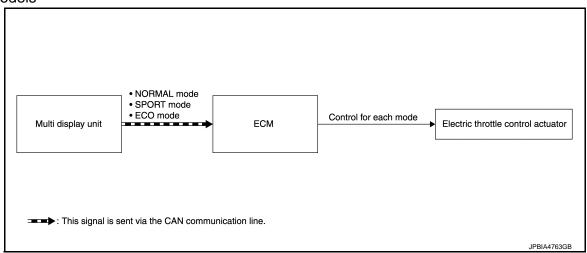

INTEGRATED CONTROL SYSTEM: System Description

INFOID:0000000008274498

CVT models

System Description

TCM transmits a drive mode select signal to ECM via CAN communication, according to a NORMAL mode signal, SPORT mode signal, or ECO mode signal received from the multi display unit via CAN communication. ECM controls torque and throttle opening angle characteristics appropriate for each mode, based on a received drive mode select signal.

NOTE:

- Because of the multi display unit operation, the display may indicate that the mode is switching. However, the mode may not actually switch due to CAN communication error.
- When a CAN communication error occurs between ECM and TCM, the mode switches to NORMAL mode.

M/T models

System Description

ECM controls torque and throttle opening angle characteristics appropriate for each mode, based on a NOR-MAL mode signal, SPORT mode signal, or ECO mode signal received from the multi display unit via CAN communication.

NOTE:

 Because of the multi display unit operation, the display may indicate that the mode is switching. However, the mode may not actually switch due to CAN communication error.

SYSTEM

< SYSTEM DESCRIPTION >

[MR16DDT]

• When a CAN communication error occurs between ECM and the multi display unit, the mode switches to NORMAL mode.

Control By Mode

Mode	Control
NORMAL mode	Offers a better balance of fuel economy and traveling performance.
SPORT mode	Allows throttle opening angle change and torque control for obtaining reality and acceleration performance appropriate to a winding run.
ECO mode	Allows throttle opening angle change and torque control for assisting better fuel efficiency.

CAN COMMUNICATION

CAN COMMUNICATION: System Description

INFOID:0000000008274499

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Refer to LAN-28, "CAN COMMUNICATION SYSTEM: CAN Communication Signal Chart", about CAN communication for detail.

G

Α

EC

D

Е

Н

.

K

N

0

Р


OPERATION

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

AUTOMATIC SPEED CONTROL DEVICE (ASCD): Switch Name and Function

INFOID:0000000008274500

SWITCHES AND INDICATORS

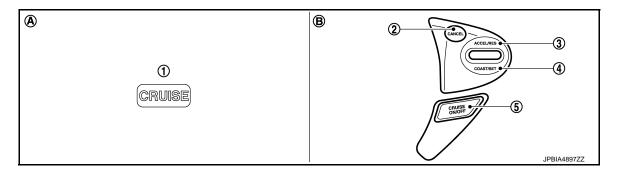

- CRUISE indicator
- 2. CANCEL switch
- ACCEL/RES switch

- 4. COAST/SET switch
- ASCD MAIN switch
- A. On the combination meter
- B. On the steering wheel

SET SPEED RANGE

ASCD system can be set the following vehicle speed.

Minimum speed (Approx.)	Maximum speed (Approx.)
40 km/h (25 MPH)	144 km/h (90 MPH)

SWITCH OPERATION

Item	Function
CANCEL switch	Cancels the cruise control driving.
ACCEL/RES switch	Resumes the set speed. Increases speed incrementally during cruise control driving.
COAST/SET switch	Sets desired cruise speed.Decreases speed incrementally during cruise control driving.
ASCD MAIN switch	Master switch to activate the ASCD system.

SET OPERATION

Press MAIN switch. (The CRUISE indicator in combination meter illuminates.)

When vehicle speed reaches a desired speed between approximately 40 km/h (25 MPH) and 144 km/h (90 MPH), press COAST/SET switch.

ACCELERATE OPERATION

If the ACCEL/RES switch is pressed during the cruise control driving, increase the vehicle speed until the switch is released or vehicle speed reaches maximum speed controlled by the system. And then ASCD will keep the new set speed.

CANCEL OPERATION

- When any of following conditions exist, the cruise operation is canceled.
- CANCEL switch is pressed
- ASCD MAIN switch is pressed (Set speed is cleared)
- More than 2 switches at ASCD steering switch are pressed at the same time (Set speed is cleared)
- Brake pedal is depressed
- Clutch pedal is depressed or gear position is changed to neutral position. (M/T models)
- Selector lever is changed to N, P or R position (CVT models)
- Vehicle speed decreased to 13 km/h (8 MPH) lower than the set speed
- TCS system is operated

OPERATION

< SYSTEM DESCRIPTION >

[MR16DDT]

- When the ECM detects any of the following conditions, the ECM cancels the cruise operation and informs the driver by blinking CRUISE indicator lamp.
- Engine coolant temperature is slightly higher than the normal operating temperature, CRUISE indicator lamp is blinked slowly.

NOTE:

Engine coolant temperature decreases to the normal operating temperature, CRUISE indicator lamp stop blinking and the cruise operation is able to work.

- Malfunction for some self-diagnoses regarding ASCD control: CRUISE indicator will blink quickly.
- When ASCD MAIN switch is turned to OFF during the cruise control driving, all of ASCD operations is canceled and vehicle speed memory is erased.

COAST OPERATION

When the COAST/SET switch is pressed during the cruise control driving, decrease vehicle set speed until the switch is released. And then ASCD will keep the new set speed.

RESUME OPERATION

- When the ACCEL/RES switch is pressed after the cancel operation other than pressing ASCD MAIN switch is performed, vehicle speed is return to last set speed. To resume vehicle set speed, vehicle condition must meet following conditions.
- Brake pedal is released
- Clutch pedal is released (M/T models)
- Selector lever is in other than P and N positions (CVT models)
- Vehicle speed is greater than 40 km/h (25 MPH) and less than 144 km/h (90 MPH)

EC

Α

D

Е

F

Н

K

L

Ν

Р

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SYSTEM DESCRIPTION >

[MR16DDT]

ON BOARD DIAGNOSTIC (OBD) SYSTEM

Diagnosis Description

INFOID:0000000008274501

This system is an on board diagnostic system that records exhaust emission-related diagnostic information and detects a sensors/actuator-related malfunction. A malfunction is indicated by the malfunction indicator lamp (MIL) and stored in control module memory as a DTC. The diagnostic information can be obtained with the diagnostic tool (GST: Generic Scan Tool).

GST (Generic Scan Tool)

INFOID:0000000008274502

When GST is connected with a data link connector equipped on the vehicle side, it will communicate with the control module equipped in the vehicle and then enable various kinds of diagnostic tests. Refer to GI-51, "Description".

NOTE:

Service \$0A is not applied for regions where it is not mandated.

< SYSTEM DESCRIPTION >

[MR16DDT]

DIAGNOSIS SYSTEM (ECM) DIAGNOSIS DESCRIPTION

DIAGNOSIS DESCRIPTION: 1st Trip Detection Logic and Two Trip Detection Logic

INFOID:0000000008274503

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MIL will not illuminate at this stage. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MIL illuminates. The MIL illuminates at the same time when the DTC is stored. <2nd trip> The "trip" in the "Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to illuminate or blink the MIL, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

×: Applicable —: Not applicable

		М	IL	DTC		1st trip	1st trip DTC	
Items	1st trip		2nd trip		1st trip	2nd trip	1st trip	2nd trip
	Blinking	Illuminat- ed	Blinking	Illuminat- ed	displaying	displaying	displaying	display- ing
Misfire (Possible three way catalyst damage) — DTC: P0300 – P0304 is being detected	×	_	_	_	_	_	×	_
Misfire (Possible three way catalyst damage) — DTC: P0300 – P0304 is being detected	_	_	×	_	_	×	_	_
One trip detection diagnoses (Refer to EC-102, "DTC Index".)	_	×	_	_	×	_	_	_
Except above		_	_	×		×	×	_

DIAGNOSIS DESCRIPTION: DTC and Freeze Frame Data

INFOID:0000000008274504

DTC AND 1ST TRIP DTC

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not recur, the 1st trip DTC will not be displayed.

If a malfunction is detected during the 1st trip, the 1st trip DTC is saved in the ECM memory. The MIL will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are saved in the ECM memory and the MIL lights up. In other words, the DTC is stored in the ECM memory and the MIL lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MIL during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.

For malfunctions in which 1st trip DTCs are displayed, refer to EC-102, "DTC Index". These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT.

1st trip DTC is specified in Service \$07 of SAE J1979/ISO 15031-5. 1st trip DTC detection occurs without illuminating the MIL and therefore does not warn the driver of a malfunction.

When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in Work Flow procedure Step 2, refer to EC-120, "Work Flow". Then perform DTC Confirmation Procedure or Component Function Check to try to duplicate the malfunction. If the malfunction is duplicated, the item requires repair.

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed, absolute throttle position, base fuel schedule and intake air temperature at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT or GST. The 1st trip freeze frame data can only be displayed on the CONSULT screen.

EC

Α

Е

INFOID:0000000008274505

< SYSTEM DESCRIPTION >

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority		Items		
1	Freeze frame data	Misfire — DTC: P0300 – P0304 Fuel Injection System Function — DTC: P0171		
2		Except the above items		
3	1st trip freeze frame d	ata		

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was saved in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased.

DIAGNOSIS DESCRIPTION: Counter System

RELATIONSHIP BETWEEN MIL, 1ST TRIP DTC, DTC, AND DETECTABLE ITEMS

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MIL will come on.
- The MIL will turn OFF after the vehicle is driven 3 times (driving pattern B) with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The "TIME" in "SELF-DIAGNOSTIC RESULTS" mode of CONSULT will count the number of times the vehicle is driven.
- The 1st trip DTC is not displayed when the self-diagnosis results in OK for the 2nd trip.

COUNTER SYSTEM CHART

Items	Fuel Injection System	Misfire	Other
MIL (turns OFF)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1, *2	*1, *2	1 (pattern B)

For details about patterns B and C under "Fuel Injection System" and "Misfire", see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".

For details about patterns A and B under Other, see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".

- *1: Clear timing is at the moment OK is detected.
- *2: Clear timing is when the same malfunction is detected in the 2nd trip.

Relationship Between MIL, DTC, 1st Trip DTC and Driving Patterns for "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System"

Α


EC

D

M

Ν

Р

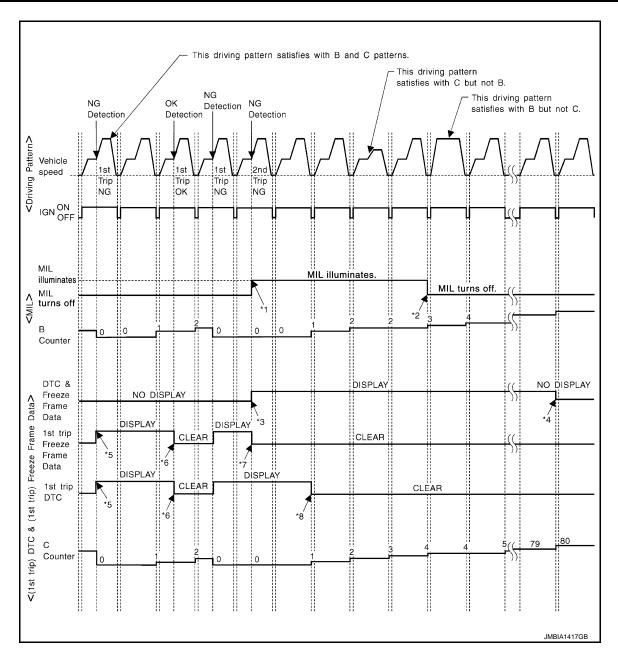

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

- *2: MIL will turn OFF after vehicle is driv- *3: When the same malfunction is deen 3 times (pattern B) without any malfunctions.
- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.
- tected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *6: The 1st trip DTC and the 1st trip freeze frame data will be cleared at the moment OK is detected.

Explanation for Driving Patterns for "Misfire < Exhaust Quality Deterioration>", "Fuel Injection System"

Driving Pattern B

Refer to EC-67, "DIAGNOSIS DESCRIPTION: Driving Pattern".

Driving Pattern C

Refer to EC-67, "DIAGNOSIS DESCRIPTION: Driving Pattern".

Example:


If the stored freeze frame data is as per the following:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)

To be satisfied with driving pattern C, the vehicle should run under the following conditions:

Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than 70° C (158° F)

Relationship Between MIL, DTC, 1st Trip DTC and Driving Patterns Except For "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System"

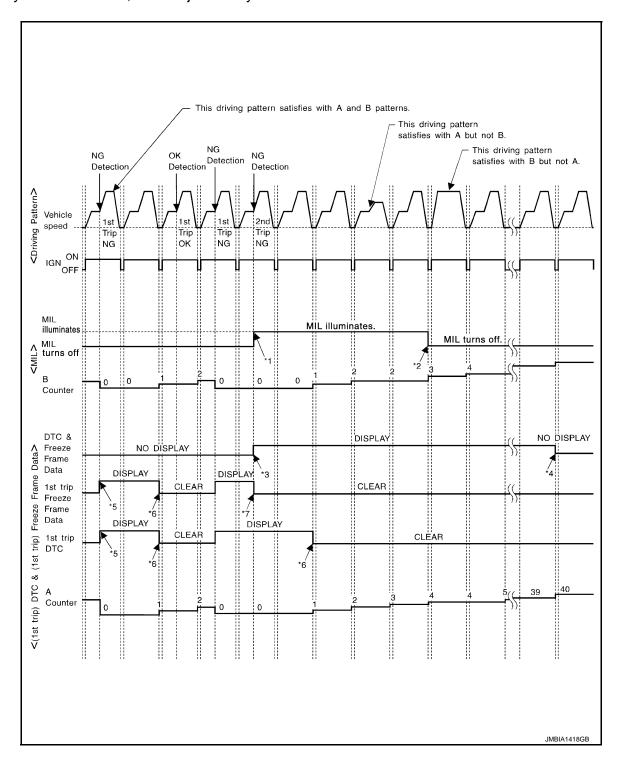

DIAGNOSIS SYSTEM (ECM)

< SYSTEM DESCRIPTION >

[MR16DDT]

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- en 3 times (pattern B) without any malfunctions.
- *2: MIL will turn OFF after vehicle is driv- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)

*7: When the same malfunction is detected in the 2nd trip, the 1st trip

freeze frame data will be cleared.

- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.

EC

Α

D

Explanation for Driving Patterns Except for "Misfire < Exhaust Quality Deterioration>", "Fuel Injection System"

Driving Pattern A

Refer to EC-67, "DIAGNOSIS DESCRIPTION: Driving Pattern".

Driving Pattern B

Refer to EC-67, "DIAGNOSIS DESCRIPTION: Driving Pattern".

DIAGNOSIS DESCRIPTION: Driving Pattern

INFOID:0000000008274506

CAUTION:

Always drive at a safe speed.

DRIVING PATTERN A

Driving pattern A means a trip satisfying the following conditions.

- Engine speed reaches 400 rpm or more.
- Engine coolant temperature rises by 20°C (36°F) or more after starting the engine.
- Engine coolant temperature reaches 70°C (158°F) or more.
- The ignition switch is turned from ON to OFF.

- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern A.

DRIVING PATTERN B

Driving pattern B means a trip satisfying the following conditions.

- Engine speed reaches 400 rpm or more.
- Engine coolant temperature reaches 70°C (158°F) or more.
- Vehicle speed of 70 120 km/h (44 75 MPH) is maintained for 60 seconds or more under the control of closed loop.
- Vehicle speed of 30 60 km/h (19 37 MPH) is maintained for 10 seconds or more under the control of closed loop.
- Under the closed loop control condition, the following state reaches 12 seconds or more in total: Vehicle speed of 4 km/h (2 MPH) or less with idling condition.
- The state of driving at 10 km/h (7 MPH) or more reaches 10 minutes or more in total.
- A lapse of 22 minutes or more after engine start.

NOTE:

- Drive the vehicle at a constant velocity.
- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern B.

DRIVING PATTERN C

Driving pattern C means operating vehicle as per the following:

The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data) ±375 rpm

EC-67 Revision: 2014 February 2013 JUKE

Е

F

Н

L

Ν

DIAGNOSIS SYSTEM (ECM)

< SYSTEM DESCRIPTION >

[MR16DDT]

Calculated load value: (Calculated load value in the freeze frame data) x (1±0.1) [%] Engine coolant temperature condition:

- When the freeze frame data shows lower than 70°C (158°F), engine coolant temperature should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), engine coolant temperature should be higher than or equal to 70°C (158°F).

NOTF:

- When the same malfunction is detected regardless of the above vehicle conditions, reset the counter of driving pattern C.
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern C.
- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

DRIVING PATTERN D

Driving pattern D means a trip satisfying the following conditions.

- The state of driving at 40 km/h (25 MPH) reaches 300 seconds or more in total.
- Idle speed lasts 30 seconds or more.
- A lapse of 600 seconds or more after engine start.

NOTE:

- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern D.
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern D.

DIAGNOSIS DESCRIPTION: System Readiness Test (SRT) Code

INFOID:0000000008274507

System Readiness Test (SRT) code is specified in Service \$01 of SAE J1979/ISO 15031-5.

As part of an enhanced emissions test for Inspection & Maintenance (I/M), certain states require the status of SRT be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.

If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating "INCMP", use the information in this Service Manual to set the SRT to "CMPLT".

In most cases the ECM will automatically complete its self-diagnosis cycle during normal usage, and the SRT status will indicate "CMPLT" for each application system. Once set as "CMPLT", the SRT status remains "CMPLT" until the self-diagnosis memory is erased.

Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern; the SRT will indicate "INCMP" for these items.

NOTE:

The SRT will also indicate "INCMP" if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.

If, during the state emissions inspection, the SRT indicates "CMPLT" for all test items, the inspector will continue with the emissions test. However, if the SRT indicates "INCMP" for one or more of the SRT items the vehicle is returned to the customer untested.

NOTE:

If permanent DTC is stored or MIL illuminates during the state emissions inspection, the vehicle is also returned to the customeruntested even though the SRT indicates "CMPLT" for all test items. therefore, it is important to check SRT ("CMPLT"), DTC (No DTCs) and permanent DTC (No permanent DTC) before the inspection.

SRT SET TIMING

SRT is set as "CMPLT" after self-diagnosis has been performed one or more times. Completion of SRT is done regardless of whether the result is OK or NG. The set timing is different between OK and NG results and is shown in the table below.

Α

EC

Е

Н

M

Ν

		Example					
Self-diagnosis result		Diagnosis	$\begin{array}{cccccccccccccccccccccccccccccccccccc$				
All OK	Case 1	P0400	OK (1)	—(1)	OK (2)	— (2)	
		P0402	OK (1)	— (1)	— (1)	OK (2)	
		P1402	OK (1)	OK (2)	— (2)	— (2)	
		SRT of EGR	"CMPLT"	"CMPLT"	"CMPLT"	"CMPLT"	
	Case 2	P0400	OK (1)	— (1)	— (1)	— (1)	
		P0402	— (0)	— (0)	OK (1)	— (1)	
		P1402	OK (1)	OK (2)	— (2)	— (2)	
		SRT of EGR	"INCMP"	"INCMP"	"CMPLT"	"CMPLT"	
NG exists	Case 3	P0400	OK	ОК	_	_	
		P0402	_	_	_	_	
		P1402	NG	_	NG	NG (Consecutiv NG)	
		(1st trip) DTC	1st trip DTC	_	1st trip DTC	DTC (= MIL ON)	
		SRT of EGR	"INCMP"	"INCMP"	"INCMP"	"CMPLT"	

OK: Self-diagnosis is carried out and the result is OK.

NG: Self-diagnosis is carried out and the result is NG.

-: Self-diagnosis is not carried out.

When all SRT related self-diagnoses show OK results in a single cycle (Ignition OFF-ON-OFF), the SRT will indicate "CMPLT". \rightarrow Case 1 above

When all SRT related self-diagnoses show OK results through several different cycles, the SRT will indicate "CMPLT" at the time the respective self-diagnoses have at least one OK result. → Case 2 above

If one or more SRT related self-diagnoses show NG results in 2 consecutive cycles, the SRT will also indicate "CMPLT". \rightarrow Case 3 above

The table above shows that the minimum number of cycles for setting SRT as "INCMP" is the number one (1) for each self-diagnosis (Case 1 & 2) or the number two (2) for one of self-diagnoses (Case 3). However, in preparation for the state emissions inspection, it is unnecessary for each self-diagnosis to be executed twice (Case 3) for the following reasons:

- The SRT will indicate "CMPLT" at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires "CMPLT" of the SRT only with OK self-diagnosis results.
- During SRT driving pattern, the 1st trip DTC (NG) is detected prior to "CMPLT" of SRT and the self-diagnosis memory must be erased from the ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate "INCMP".

NOTE:

SRT can be set as "CMPLT" together with the DTC(s). Therefore, DTC check must always be carried out prior to the state emission inspection even though the SRT indicates "CMPLT".

DIAGNOSIS DESCRIPTION: Permanent Diagnostic Trouble Code (Permanent DTC)

INFOID:0000000008274508

Permanent DTC is defined in SAE J1979/ISO 15031-5 Service \$0A.

ECM stores a DTC issuing a command of turning on MIL as a permanent DTC and keeps storing the DTC as a permanent DTC until ECM judges that there is no presence of malfunction.

Permanent DTCs cannot be erased by using the erase function of CONSULT or Generic Scan Tool (GST) and by disconnecting the battery to shut off power to ECM. This prevents a vehicle from passing the in-use inspection without repairing a malfunctioning part.

When not passing the in-use inspection due to more than one permanent DTC, permanent DTCs should be erased, referring to this manual.

NOTE:

- The important items in in-use inspection are that MIL is not ON, SRT test items are set, and permanent DTCs are not included.
- Permanent DTCs do not apply for regions that permanent DTCs are not regulated by law.

Revision: 2014 February EC-69 2013 JUKE

ENGINE

PERMANENT DTC SET TIMING

The setting timing of permanent DTC is stored in ECM with the lighting of MIL when a DTC is confirmed.

DIAGNOSIS DESCRIPTION: Malfunction Indicator Lamp (MIL)

INFOID:0000000008274509

When emission-related ECU detects a malfunction in the emission control systems components and/or the powertrain control components (which affect vehicle emissions), it turns on/blinks MIL to inform the driver that a malfunction has been detected.

 The MIL illuminates when ignition switch is turned ON (engine is not running).

NOTE:

Check the MIL circuit if MIL does not illuminate. Refer to <u>EC-527</u>, "Diagnosis Procedure".

When the engine is started, the MIL should go off.

NOTE:

If MIL continues to illuminate/blink, perform self-diagnoses and inspect/repair accordingly because an emission-related ECU has detected a malfunction in the emission control systems components and/or the powertrain control components (which affect vehicle emissions).

On Board Diagnosis Function

INFOID:0000000008274510

ON BOARD DIAGNOSIS ITEM

The on board diagnostic system has the following functions.

Diagnostic test mode	Function							
Bulb check	MIL can be checked.							
SRT status	ECM can read if SRT codes are set.							
Malfunction warning	If ECM detects a malfunction, it illuminates or blinks MIL to inform the driver that a malfunction has been detected.							
Self-diagnostic results	DTCs or 1st trip DTCs stored in ECM can be read.							
Accelerator pedal released position learning	ECM can learn the accelerator pedal released position. Refer to EC-131, "Work Procedure".							
Throttle valve closed position learning	ECM can learn the throttle valve closed position. Refer to <u>EC-132</u> , "Work <u>Procedure"</u> .							
Idle air volume learning	ECM can learn the idle air volume. Refer to EC-133, "Work Procedure".							
Mixture ratio self-learning value clear	Mixture ratio self-learning value can be erased. Refer to EC-136, "Work Procedure".							

BULB CHECK MODE

Description

This function allows damage inspection in the MIL bulb (blown, open circuit, etc.).

Operation Procedure

- Turn ignition switch ON.
- The MIL on the instrument panel should stay ON.
 If it remains OFF, check MIL circuit. Refer to <u>EC-527</u>, "<u>Diagnosis Procedure</u>".

SRT STATUS MODE


Description

This function allows to read if ECM has completed the self-diagnoses of major emission control systems and components. For SRT, refer to EC-68, "DIAGNOSIS DESCRIPTION: System Readiness Test (SRT) Code".

Operation Procedure

- 1. Turn ignition switch ON and wait 20 seconds.
- 2. SRT status is indicated as shown blow.
 - ECM continues to illuminate MIL if all SRT codes are set.

ECM blinks MIL for about 10 seconds if all SRT codes are not set.

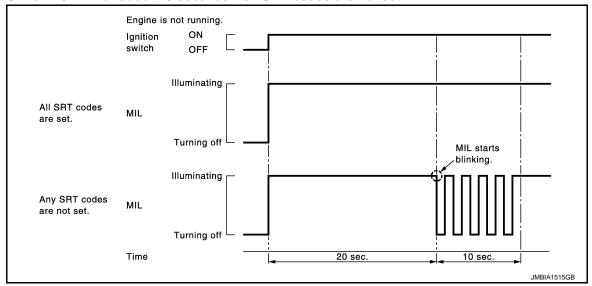

MALFUNCTION WARNING MODE

Description

In this function ECM turns on or blinks MIL when it detects a malfunction in the emission control system components and/or the powertrain control components (which affect vehicle emissions) to inform the driver that a malfunction has been detected.

Operation Procedure

- Turn ignition switch ON.
- Check that MIL illuminates. If it remains OFF, check MIL circuit. Refer to EC-527, "Diagnosis Procedure".
- Start engine and let it idle.
 - For two trip detection logic diagnoses, ECM turns on MIL when it detects the same malfunction twice in the two consecutive driving cycles.
 - For 1st trip detection logic diagnoses, ECM turns on MIL when it detects a malfunction in one driving
 - ECM blinks MIL when it detects a malfunction that may damage the three way catalyst (misfire).

SELF-DIAGNOSTIC RESULTS MODE

Description

This function allows to indicate DTCs or 1st trip DTCs stored in ECM according to the number of times MIL is blinking.

How to Set Self-diagnostic Results Mode

NOTE:

- It is better to count the time accurately with a clock.
- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.
- After ignition switch is turned off, ECM is always released from the "self-diagnostic results" mode.
- Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
- Repeat the following procedure quickly five times within 5 seconds.
 - Fully depress the accelerator pedal.
 - Fully release the accelerator pedal.
- 3. Wait 7 seconds, fully depress the accelerator pedal and keep it depressed for approx. 10 seconds until the MIL starts blinking.

NOTE:

Revision: 2014 February

Do not release the accelerator pedal for 10 seconds if MIL starts blinking during this period. This blinking is displaying SRT status and is continued for another 10 seconds.

Fully release the accelerator pedal. ECM has entered to "Self-diagnostic results" mode.

EC-71

Α

EC

D

F

Н

K


L

M

2013 JUKE

NOTE:


Wait until the same DTC (or 1st trip DTC) appears to completely confirm all DTCs.

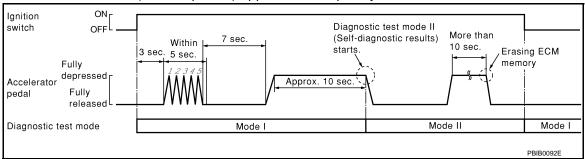

How to Read Self-diagnostic Results

The DTC and 1st trip DTC are indicated by the number of blinks of the MIL as shown below.

The DTC and 1st trip DTC are displayed at the same time. If the MIL does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MIL illuminates in "malfunction warning" mode, it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the CONSULT or GST. A DTC will be used as an example for how to read a code.

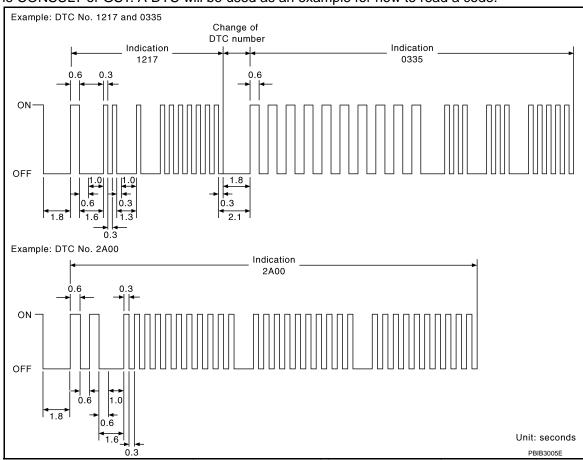

A particular trouble code can be identified by the number of four-digit numeral flashes per the following.

Number	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
Flashes	10	1	2	3	4	5	6	7	8	9	11	12	13	14	15	16

The length of time the 1,000th-digit numeral flashes on and off is 1.2 seconds consisting of an ON (0.6-seconds) - OFF (0.6-seconds) cycle.

The 100th-digit numeral and lower digit numerals consist of a 0.3-seconds ON and 0.3-seconds OFF cycle. A change from one digit numeral to another occurs at an interval of 1.0-second OFF. In other words, the later numeral appears on the display 1.3 seconds after the former numeral has disappeared.

A change from one trouble code to another occurs at an interval of 1.8-seconds OFF.

< SYSTEM DESCRIPTION >

[MR16DDT]

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC 0000 refers to no malfunction. Refer to <u>EC-102</u>, "<u>DTC Index</u>".

How to Erase Self-diagnostic Results

By performing this procedure, ECM memory is erased and the following diagnostic information is erased as well.

- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- · Freeze frame data
- · 1st trip freeze frame data
- · System readiness test (SRT) codes
- Test values

NOTE:

Also, if a battery terminal is disconnected, ECM memory is erased and the diagnostic information as listed above is erased. (The amount of time required for erasing may vary from a few seconds to several hours.)

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Set ECM in "self-diagnostic results" mode.
- The diagnostic information has been erased from the backup memory in the ECM. Fully depress the accelerator pedal and keep it depressed for more than 10 seconds.
- 7. Fully release the accelerator pedal, and confirm the DTC 0000 is displayed.

CONSULT Function

INFOID:0000000008274511

FUNCTION

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT unit.
Self-diagnostic results	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*
Data monitor	Input/Output data in the ECM can be read.
Active test	Diagnostic Test Mode in which CONSULT drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
DTC & SRT confirmation	The status of system monitoring tests and the self-diagnosis status/results can be confirmed.
ECU part number	ECM part number can be read.

^{*:} The following emission-related diagnostic information is cleared when the ECM memory is erased.

- · Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes
- · Test values

WORK SUPPORT MODE

Work Item

P

Revision: 2014 February EC-73 2013 JUKE

EC

Α

D

Е

F

3

Н

\

M

N

< SYSTEM DESCRIPTION >

Work item	Condition	Usage
IDLE AIR VOL LEARN	The idle air volume that keeps the engine within the specified range is memorized in ECM.	When learning the idle air volume
EVAP SYSTEM CLOSE	Close the EVAP canister vent control valve in order to make EVAP system close under the following conditions. Ignition switch ON Engine not running Ambient temperature is above 0°C (32°F) No vacuum and no high pressure in EVAP system Fuel tank temperature is more than 0°C (32°F) Within 10 minutes after starting "EVAP SYSTEM CLOSE" When trying to execute "EVAP SYSTEM CLOSE" under the condition except above, CONSULT will discontinue it and display appropriate instruction. NOTE: When starting engine, CONSULT may display "Battery voltage is low. Charge battery", even in using charged battery.	When detecting EVAP vapor leak point of EVAP system
FUEL PRESSURE RELEASE	Crank a few times after engine stalls.	When releasing fuel pressure from fuel line
TARGET IGN TIM ADJ*	Idle condition	When adjusting target ignition timing
TARGET IDLE RPM ADJ*	Idle condition	When setting target idle speed
VIN REGISTRATION	In this mode, VIN is registered in ECM.	When registering VIN in ECM
SELF-LEARNING CONT	The coefficient of self-learning control mixture ratio returns to the original coefficient.	When clearing mixture ratio self- learning value
G SENSOR CALIBRATION	Park the vehicle on a flat road.Adjust pressure in all tires to the specified value.	Calibrates G sensor.
CLSD THL POS LEARN	Ignition on and engine stopped.	When learning the throttle valve closed position

^{*:} This function is not necessary in the usual service procedure.

SELF-DIAG RESULTS MODE

Self Diagnostic Item

Regarding items of DTC and 1st trip DTC, refer to EC-102, "DTC Index".

How to Read DTC and 1st Trip DTC

DTCs and 1st trip DTCs related to the malfunction are displayed in "self-diag results".

- When ECM detects a 1st trip DTC, "1t" is displayed for "TIME".
- When ECM has detected a current DTC, "0" is displayed for "TIME".
- If "TIME" is neither "0" nor "1t", the DTC occurred in the past and ECM shows the number of times the vehicle has been driven since the last detection of the DTC.

How to Erase DTC and 1st Trip DTC

NOTE:

- If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
- If the DTC is not for CVT related items (see EC-102, "DTC Index"), skip step 1.
- Erase DTC in TCM. Refer to <u>TM-103, "CONSULT Function"</u>.
- 2. Select "ENGINE" with CONSULT.
- Select "SELF-DIAG RESULTS".
- Touch "ERASE". (DTC in ECM will be erased.)

Freeze Frame Data and 1st Trip Freeze Frame Data

< SYSTEM DESCRIPTION >

[MR16DDT]

Freeze frame data item*	Description
DIAG TROUBLE CODE [PXXXX]	The engine control component part/control system has a trouble code the is displayed as PXXXX. (Refer to EC-102, "DTC Index".)
FUEL SYS-B1	"Fuel injection system status" at the moment a malfunction is detected is displayed.
FUEL SYS-B2	One of the following mode is displayed. Mode2: Open loop due to detected system malfunction Mode3: Open loop due to driving conditions (power enrichment, deceleration enleanment) Mode4: Closed loop - using oxygen sensor(s) as feedback for fuel control Mode5: Open loop - has not yet satisfied condition to go to closed loop
CAL/LD VALUE [%]	The calculated load value at the moment a malfunction is detected is displayed.
COOLANT TEMP [°C] or [°F]	The engine coolant temperature at the moment a malfunction is detected is displayed.
L-FUEL TRM-B1 [%]	"Long-term fuel trim" at the moment a malfunction is detected is displayed.
L-FUEL TRM-B2 [%]	 The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim.
S-FUEL TRM-B1 [%]	"Short-term fuel trim" at the moment a malfunction is detected is displayed.
S-FUEL TRM-B2 [%]	The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule.
ENGINE SPEED [rpm]	The engine speed at the moment a malfunction is detected is displayed.
VEHICL SPEED [km/h] or [mph]	The vehicle speed at the moment a malfunction is detected is displayed.
ABSOL TH-P/S [%]	The throttle valve opening angle at the moment a malfunction is detected is displayed.
B/FUEL SCHDL [msec]	The base fuel schedule at the moment a malfunction is detected is displayed.
INT/A TEMP SE [°C] or [°F]	The intake air temperature at the moment a malfunction is detected is displayed.
INT MANI PRES [kPa]	
COMBUST CONDI- TION	These items are displayed but are not applicable to this model.

^{*:} The items are the same as those of 1st trip freeze frame data.

DATA MONITOR MODE

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitored Item

For reference values of the following items, refer to EC-84, "Reference Value".

×: Applicable

K

M

		Monitor Ite	m Selection			
Monitored item	Unit	ECU IN- PUT SIG- NALS	MAIN SIGNALS	Description	Remarks	Γ
ENG SPEED	rpm	×	×	Indicates the engine speed computed from the signal of the crankshaft position sensor (POS) and camshaft position sensor (PHASE).	Accuracy becomes poor if engine speed drops below the idle rpm. If the signal is interrupted while the engine is running, an abnormal value may be indicated.	(
MAS A/F SE-B1	V	×	×	The signal voltage of the mass air flow sensor is displayed.	 When the engine is stopped, a certain value is indicated. When engine is running specification range is indicated in "SPEC". 	

		Monitor Ite	m Selection		
Monitored item	Unit	ECU IN- PUT SIG- NALS	MAIN SIGNALS	Description	Remarks
B/FUEL SCHDL	msec	×	×	"Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction.	When engine is running specification range is indicated in "SPEC".
A/F ALPHA-B1	%			The mean value of the air-fuel ratio feedback correction factor per cycle is indicated.	 When the engine is stopped, a certain value is indicated. When engine is running specification range is indicated in "SPEC". This data also includes the data for the air-fuel ratio learning control.
COOLANT TEMP/S	°C or °F	×	×	The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed.	When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is displayed.
A/F SEN1 (B1)	V	×	×	The A/F signal computed from the input signal of the air fuel ratio (A/F) sensor 1 is displayed.	
HO2S2 (B1)	V	×	×	The signal voltage of the heated oxygen sensor 2 is displayed.	
HO2S2 MNTR(B1)	RICH / LEAN		×	 Display of heated oxygen sensor 2 signal: RICH: means the amount of oxygen after three way catalyst is relatively small. LEAN: means the amount of oxygen after three way catalyst is relatively large. 	When the engine is stopped, a certain value is indicated.
VHCL SPEED SE	km/h or mph	×	×	The vehicle speed computed from the vehicle speed signal sent from combination meter is displayed.	
BATTERY VOLT	V			The power supply voltage of ECM is displayed.	
ACCEL SEN 1 ACCEL SEN 2	V			The accelerator pedal position sensor signal voltage is displayed.	ACCEL SEN 2 signal is converted by ECM internally. Thus, it differs from ECM terminal voltage signal.
TP SEN 1-B1		×	×	The throttle position sensor signal	TP SEN 2-B1 signal is converted by
TP SEN 2-B1	V	×	×	voltage is displayed.	ECM internally. Thus, it differs from ECM terminal voltage signal.
FUEL T/TMP SE	°C or °F			The fuel temperature (determined by the signal voltage of the fuel tank temperature sensor) is displayed.	
EVAP SYS PRES	V			The signal voltage of EVAP control system pressure sensor is displayed.	
FUEL LEVEL SE	V	×		The signal voltage of the fuel level sensor is displayed.	
START SIGNAL	ON/ OFF			Indicates start signal status [ON/ OFF] computed by the ECM accord- ing to the signals of engine speed and battery voltage.	After starting the engine, [OFF] is displayed regardless of the starter signal.
CLSD THL POS	ON/ OFF	×	×	Indicates idle position [ON/OFF] computed by ECM according to the accelerator pedal position sensor signal.	

< SYSTEM DESCRIPTION >

		Monitor Ite	m Selection		
Monitored item	Unit	ECU IN- PUT SIG- NALS	MAIN SIGNALS	Description	Remarks
AIR COND SIG	ON/ OFF	×	×	Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal.	
PW/ST SIGNAL	ON/ OFF	×	×	[ON/OFF] condition of the power steering system (determined by the signal sent from EPS control unit) is indicated.	
LOAD SIGNAL	ON/ OFF	×	×	 Indicates [ON/OFF] condition from the electrical load signal. ON: Rear window defogger switch is ON and/or lighting switch is in 2nd position. OFF: Both rear window defogger switch and lighting switch are OFF. 	
IGNITION SW	ON/ OFF	×	×	Indicates [ON/OFF] condition from ignition switch signal.	
HEATER FAN SW	ON/ OFF	×		Indicates [ON/OFF] condition from the heater fan switch signal.	
BRAKE SW	ON/ OFF			Indicates [ON/OFF] condition from the stop lamp switch signal.	
IGN TIMING	BTD C		×	Indicates the ignition timing computed by ECM according to the input signals.	When the engine is stopped, a certain value is indicated.
COMBUSTION	_			These items are displayed but are not applicable to this model.	
CAL/LD VALUE	%			"Calculated load value" indicates the value of the current airflow divided by peak airflow.	
MASS AIRFLOW	g/s			Indicates the mass airflow computed by ECM according to the signal voltage of the mass airflow sensor.	
PURG VOL C/V	%			 Indicates the EVAP canister purge volume control solenoid valve control value computed by the ECM according to the input signals. The opening becomes larger as the value increases. 	
INT/V TIM(B1)	°CA			Indicates [°CA] of intake camshaft advance angle.	
EXHV TIM B1	°CA			Indicates [°CA] of exhaust camshaft advance angle.	
INT/V SOL(B1)	%			 The control value of the intake valve timing control solenoid valve (determined by ECM according to the input signals) is indicated. The advance angle becomes larger as the value increases. 	
AIR COND RLY	ON/ OFF			The air conditioner relay control condition (determined by ECM according to the input signals) is indicated.	
FUEL PUMP RLY	ON/ OFF			Indicates the fuel pump relay control condition determined by ECM according to the input signals.	

		Monitor Ite	m Selection		
Monitored item	Unit	ECU IN- PUT SIG- NALS	MAIN SIGNALS	Description	Remarks
VENT CONT/V	ON/ OFF			The control condition of the EVAP canister vent control valve (determined by ECM according to the input signals) is displayed. ON: Closed OFF: Open	
THRTL RELAY	ON/ OFF			Indicates the throttle control motor relay control condition determined by the ECM according to the input signals.	
HO2S2 HTR (B1)	ON/ OFF			Indicates [ON/OFF] condition of heated oxygen sensor 2 heater determined by ECM according to the input signals.	
ALT DUTY SIG	ON/ OFF			The control condition of the power generation voltage variable control (determined by ECM according to the input signals) is indicated. ON: Power generation voltage variable control is active. OFF: Power generation	
I/P PULLY SPD	rpm			Indicates the engine speed computed from the input speed sensor signal.	
VEHICLE SPEED	km/h or mph			The vehicle speed computed from the vehicle speed signal sent from TCM is displayed.	
IDL A/V LEARN	YET/ CM- PLT			 Display the condition of Idle Air Volume Learning YET: Idle air volume learning has not been performed yet. CMPLT: Idle air volume learning has already been performed successfully. 	
TRVL AFTER MIL	km/h or mph			Distance traveled while MIL is activated.	
ENG OIL TEMP	°C or °F			The engine oil temperature (determined by the signal voltage of the engine oil temperature sensor) is displayed.	
A/F S1 HTR(B1)	%			 Air fuel ratio (A/F) sensor 1 heater control value computed by ECM according to the input signals. The current flow to the heater becomes larger as the value increases. 	
VHCL SPEED SE	km/h or mph			The vehicle speed computed from the vehicle speed signal sent from combination meter is displayed.	
SET VHCL SPD	km/h or mph			The preset vehicle speed is displayed.	
MAIN SW	ON/ OFF			Indicates [ON/OFF] condition from ASCD MAIN switch signal.	

< SYSTEM DESCRIPTION >

		Monitor Ite	m Selection		
Monitored item	Unit	ECU IN- PUT SIG- NALS	MAIN SIGNALS	Description	Remarks
CANCEL SW	ON/ OFF			Indicates [ON/OFF] condition from CANCEL switch signal.	
RESUME/ACC SW	ON/ OFF			Indicates [ON/OFF] condition from ACCEL/RES switch signal.	
SET SW	ON/ OFF			Indicates [ON/OFF] condition from COAST/SET switch signal.	
BRAKE SW1	ON/ OFF			Indicates [ON/OFF] condition from brake pedal position switch signal.	
BRAKE SW2	ON/ OFF			Indicates [ON/OFF] condition of stop lamp switch signal.	
VHCL SPD CUT	NON/ CUT			 Indicates the vehicle cruise condition. NON: Vehicle speed is maintained at the ASCD set speed. CUT: Vehicle speed decreased to excessively low compared with the ASCD set speed, and ASCD operation is cut off. 	
LO SPEED CUT	NON/ CUT			 Indicates the vehicle cruise condition. NON: Vehicle speed is maintained at the ASCD set speed. CUT: Vehicle speed decreased to excessively low, and ASCD operation is cut off. 	
AT OD MONITOR	ON/ OFF			Indicates [ON/OFF] condition of CVT O/D according to the input signal from the TCM.	For M/T models, always "OFF" is displayed.
AT OD CANCEL	ON/ OFF			Indicates [ON/OFF] condition of CVT O/D cancel request signal.	For M/T models, always "OFF" is displayed.
CRUISE LAMP	ON/ OFF			Indicates [ON/OFF] condition of CRUISE lamp determined by the ECM according to the input signals.	
SET LAMP	ON/ OFF			NOTE: The item is indicated, but not used.	
FAN DUTY	%			Indicates a command value for cooling fan. The value is calculated by ECM based on input signals.	
ALT DUTY	%			Indicates the duty ratio of the power generation command value. The ratio is calculated by ECM based on the battery current sensor signal.	
BAT CUR SEN	mV			The signal voltage of battery current sensor is displayed.	
A/F ADJ-B1	_			Indicates the correction of a factor stored in ECM. The factor is calculated from the difference between the target air-fuel ratio stored in ECM and the air-fuel ratio calculated from A/F sensor 1 signal.	
P/N POSI SW	ON/ OFF	×	×	Indicates [ON/OFF] condition from the park/neutral position (PNP) signal.	

			m Selection		
Monitored item	Unit	ECU IN- PUT SIG- NALS	MAIN SIGNALS	Description	Remarks
INT/A TEMP SE	°C or °F	×	×	The intake air temperature (determined by the signal voltage of the intake air temperature sensor1) is indicated.	
AC PRESS SEN	V			The signal voltage from the refrigerant pressure sensor is displayed.	
FUEL PRES SEN	MPa			Indicates the fuel rail pressure computed by ECM according to the input signals.	
TURBO BST SEN	V			The turbocharger boost sensor signal voltage is displayed.	
ATOM PRES SEN	V			The atmospheric pressure sensor signal voltage is displayed.	
FUEL INJ TIM	deg			Indicates the fuel injection timing computed by ECM according to the input signals.	
FUEL INJ B1	msec			ECM-calculated injection pulse width of the fuel injector on the Bank 1 side.	
EVAP LEAK DIAG	YET/ CM- PLT			 Indicates the condition of EVAP leak diagnosis. YET: EVAP leak diagnosis has not been performed yet. CMPLT: EVAP leak diagnosis has been performed successfully. 	
EVAP DIAG READY	ON/ OFF			 Indicates the ready condition of EVAP leak diagnosis. ON: Diagnosis has been ready condition. OFF: Diagnosis has not been ready condition. 	
BAT TEMP SEN	V			The signal voltage from the battery temperature sensor is displayed.	
THRTL STK CNT B1	_			NOTE: The item is indicated, but not used.	
HO2 S2 DIAG1(B1)	INC- MP/ CM- PLT			 Indicates DTC P0139 self-diagnosis (delayed response) condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete. 	
HO2 S2 DIAG2(B1)	INC- MP/ CM- PLT			 Indicates DTC P0139 self-diagnosis (slow response) condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete. 	
H/P FUEL PUMP DEG	deg			Displays ECM-calculated fuel discharge position of the high pressure fuel pump.	
FUEL PRES SEN V	mV			The signal voltage of FRP sensor is displayed.	
EOP SENSOR	mV			The signal voltage of EOP sensor is displayed.	

< SYSTEM DESCRIPTION >

[MR16DDT]

Α

D

Е

		Monitor Ite	m Selection			
Monitored item	Unit	ECU IN- PUT SIG- NALS	MAIN SIGNALS	Description	Remarks	
ECM TEMP 1	°C or			The ECM temperature is indicated.		E
ECM TEMP 2	°F			The Low temperature is indicated.		
BOOST S/V DUTY	%			The turbocharger boost control sole- noid valve control condition (detem- ined by ECM according to the input signal) is indicated.		
G SENSOR	mV			The signal voltage of G sensor is displayed.		

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ACTIVE TEST MODE

Test Item

Test item	Condition	Judgement	Check item (Remedy)
VENT CONTROL/V	Ignition switch ON (Engine stopped) Turn solenoid valve ON and OFF with the CONSULT and listen to operating sound.	Solenoid valve makes an operating sound.	Harness and connectors EVAP canister vent control solenoid valve
ENG COOLANT TEMP	Engine: Return to the original trouble condition Change the engine coolant temperature using CONSULT.	If trouble symptom disappears, see CHECK ITEM.	Harness and connectors Engine coolant temperature sensor Fuel injector
FUEL INJECTION	 Engine: Return to the original trouble condition Change the amount of fuel injection using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	Harness and connectorsFuel injectorAir fuel ratio (A/F) sensor 1
FUEL/T TEMP SEN	Change the fuel tank temperature u	sing CONSULT.	
PURG VOL CONT/V	 Engine: After warming up, run engine at 1,500 rpm. Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT. 	Engine speed changes according to the opening percent.	Harness and connectors Solenoid valve
FUEL PUMP RELAY	Ignition switch: ON (Engine stopped) Turn the fuel pump relay "ON" and "OFF" using CONSULT and listen to operating sound.	Fuel pump relay makes the operating sound.	Harness and connectors Fuel pump relay
IGNITION TIMING	Engine: Return to the original trouble condition Timing light: Set Retard the ignition timing using CONSULT.	If trouble symptom disappears, see CHECK ITEM.	Perform Idle Air Volume Learning.
FAN DUTY CON- TROL [*]	Ignition switch: ON Change duty ratio using CON-SULT.	Cooling fan speed changes.	 Harness and connectors Cooling fan motor Cooling fan relay Cooling fan control module IPDM E/R

< SYSTEM DESCRIPTION >

Test item	Condition	Judgement	Check item (Remedy)
ALTERNATOR DUTY	Ignition switch: ON Change duty ratio using CON- SULT.	Battery voltage changes.	Harness and connectors Alternator IPDM E/R
POWER BALANCE	 Engine: After warming up, idle the engine. A/C switch OFF Shift lever: P or N (CVT), Neutral (M/T) Cut off each fuel injector signal one at a time using CONSULT. 	Engine runs rough or dies.	 Harness and connectors Compression Fuel injector Power transistor Spark plug Ignition coil

^{*:} Leaving cooling fan OFF with CONSULT while engine is running may cause the engine to overheat.

DTC & SRT CONFIRMATION MODE

SRT STATUS Mode

- For items whose SRT codes are set, "CMPLT" is displayed on the CONSULT screen; for items whose SRT codes are not set, "INCMP" is displayed.
- "SRT STATUS" provides the presence or absence of permanent DTCs stored in ECM memory.

PERMANENT DTC STATUS Mode


How to display permanent DTC status

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "PERMANENT DTC STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT.

Permanent DTCs stored in ECM memory are displayed on the CONSULT screen to show if a driving pattern required for erasing permanent DTCs is complete (CMPLT) or incomplete (INCMP).

CAUTION:

Since the "PERMANENT DTC STATUS" screen displays the previous trip information, repeat the following twice to update the information: "Ignition switch OFF", "Wait for more than 10 seconds" and "Ignition switch ON".

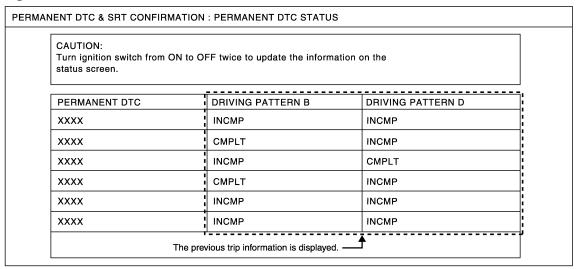

JSBIA0062GB

NOTE:

This mode is not used in regions that permanent DTCs are not regulated by law.

SRT WORK SUPPORT Mode

This mode enables a technician to drive a vehicle to set the SRT while monitoring the SRT status.

PERMANENT DTC WORK SUPPORT Mode

This mode enables a technician to drive a vehicle to complete the driving pattern that is required for erasing permanent DTC.

NOTE:

< SYSTEM DESCRIPTION >

[MR16DDT]

This mode is not used in regions that permanent DTCs are not regulated by law.

DTC WORK SUPPORT Mode

Test mode	Test item	Corresponding DTC No.	Reference page
EVAPORATIVE SYS-	PURG VOL CN/V P1444	P0443	EC-330
TEM	PURG FLOW P0441	P0441	EC-325
	HO2S2 (B1) P1146	P0138	EC-253
HO2S2	HO2S2 (B1) P1147	P0137	EC-247
	HO2S2 (B1) P0139	P0139	EC-260
A/F SEN1	A/F SEN1 (B1) P1278/P1279	P0133	EC-242
A/I SLIVI	A/F SEN1 (B1) P1276	P0130	EC-232

C D

Α

G

F

Н

J

Κ

L

M

Ν

0

Ρ

ECU DIAGNOSIS INFORMATION

ECM

Reference Value

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

- •Numerical values in the following table are reference values.
- •These values are input/output values that ECM receives/transmits and may differ from actual operations. Example:

The ignition timing shown by the timing light may differ from the ignition timing displayed on the data monitor. This occurs because the timing light shows a value calculated by ECM according to signals received from the cam shaft position sensor and other sensors related to ignition timing.

For outlines of following items, refer to EC-73, "CONSULT Function".

Monitor Item	С	condition	Values/Status
ENG SPEED	Run engine and compare CONSULT	Almost the same speed as the tachometer indication.	
MAS A/F SE-B1	See EC-152, "Diagnosis Procedure"		
B/FUEL SCHDL	See EC-152, "Diagnosis Procedure"		
A/F ALPHA-B1	See EC-152, "Diagnosis Procedure"		
COOLANT TEMP/S	Engine: After warming up		More than 70°C (158°F)
A/F SEN1 (B1)	Engine: After warming up	Maintaining engine speed at 2,000 rpm	Fluctuates around 2.2 V
HO2S2 (B1)	are met Engine: After warming up	00 rpm quickly after the following conditions en 3,500 and 4,000 rpm for 1 minute and at	0 - 0.3 V ←→ Approx. 0.6 - 1.0 V
HO2S2 MNTR(B1)	Revving engine from idle up to 3,00 are met. Engine: After warming up After keeping engine speed betwee idle for 1 minute under no load	$LEAN \longleftrightarrow RICH$	
VHCL SPEED SE	Turn drive wheels and compare COI tion.	Almost the same speed as speedometer indication.	
BATTERY VOLT	Ignition switch: ON (Engine stopped)	11 - 14 V
ACCEL SEN 1	Ignition switch: ON	Accelerator pedal: Fully released	0.6 - 0.9 V
ACCEL SENT	(Engine stopped)	Accelerator pedal: Fully depressed	4.0 - 4.8 V
ACCEL SEN 2*1	Ignition switch: ON	Accelerator pedal: Fully released	0.3 - 4.7 V
ACCEL SEN 2	(Engine stopped)	Accelerator pedal: Fully depressed	1.95 - 2.4 V
TD OFN 4 D4	• Ignition switch: ON	Accelerator pedal: Fully released	More than 0.36 V
TP SEN 1-B1	(Engine stopped)Selector lever: D (CVT), 1st (M/T)	Accelerator pedal: Fully depressed	Less than 4.75 V
	Ignition switch: ON	Accelerator pedal: Fully released	More than 0.36 V
TP SEN 2-B1*	(Engine stopped) • Selector lever: D (CVT), 1st (M/T)	Less than 4.75 V	
FUEL T/TMP SE	Ignition switch: ON	Indicates fuel tank tempera- ture.	
EVAP SYS PRES	Ignition switch: ON	Approx 0.5 - 4.6 V	
FUEL LEVEL SE	Ignition switch: ON		Depending on fuel level of fuel tank.
START SIGNAL	Ignition switch: $ON \rightarrow START \rightarrow ON$	I	$OFF \to ON \to OFF$

ECM

Monitor Item	C	Condition		
01.0D.T!!! D00	Ignition switch: ON	Accelerator pedal: Fully released	ON	
CLSD THL POS	(Engine stopped)	Accelerator pedal: Slightly depressed	OFF	
	Engine Afterwaring 1979	Air conditioner switch: OFF	OFF	
AIR COND SIG	Engine: After warming up, idle the engine	Air conditioner switch: ON (Compressor operates.)	ON	
PW/ST SIGNAL	Engine: After warming up, idle the	Steering wheel: Not being turned	OFF	
W/ST SIGNAL	engine	Steering wheel: Being turned	ON	
OAD SIGNAL	Ignition switch: ON	Rear window defogger switch: ON and/or Lighting switch: 2nd position	ON	
LOAD SIGNAL	ignition switch. ON	Rear window defogger switch and lighting switch: OFF	OFF	
GNITION SW	Ignition switch: $ON \rightarrow OFF \rightarrow ON$		$ON \to OFF \to ON$	
IEATER FAN SW	Engine: After warming up, idle the	Heater fan switch: ON	ON	
ILATER FAIN 300	engine	Heater fan switch: OFF	OFF	
BRAKE SW	Ignition switch: ON	Brake pedal: Fully released	OFF	
DUAVE OAA	Ignition switch: ON	Brake pedal: Slightly depressed	ON	
	Engine: After warming up	Idle	5° - 15° BTDC	
GN TIMING	 Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	30° - 50° BTDC	
COMBUSTION		_	These items are displayed but are not applicable to this model.	
	Engine: After warming up	Idle	5 - 35 %	
CAL/LD VALUE	 Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load 	2,500 rpm	5 - 35 %	
	Engine: After warming up	Idle	1.0 - 5.0 g/s	
MASS AIRFLOW	 Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load 	2,500 rpm	2.0 - 10.0 g/s	
PURG VOL C/V	Engine: After warming up Selector lever: P or N (CVT), Neutral (M/T)	Idle (Accelerator pedal: Not depressed even slightly, after engine starting.)	0 - 10 %	
	Air conditioner switch: OFFNo load	2,000 rpm	0 - 20 %	
	Engine: After warming up	Idle	_5° - 5°CA	
NT/V TIM(B1)	 Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	Approx. 0° - 20°CA	
	Engine: After warming up	Idle	–5° - 5°CA	
EXH/V TIM B1	 Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load 	Around 2,500 rpm while the engine speed is rising	Approx. 0° - 30°CA	
	Engine: After warming up	Idle	0 %	
NT/V SOL(B1)	 Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	Approx. 0% - 60 %	


Monitor Item		Condition	Values/Status
Monitor Rom		Air conditioner switch: OFF	OFF
AIR COND RLY	Engine: After warming up, idle the engine	Air conditioner switch: ON (Compressor operates)	ON
VENT CONT/V	Ignition switch: ON	1	OFF
FUEL PUMP RLY	For 1 seconds after turning ignition Engine running or cranking	n switch: ON	ON
	Except above		OFF
THRTL RELAY	Ignition switch: ON		ON
HO2S2 HTR (B1)	- Engine: After warming up	after the following conditions are met. en 3,500 and 4,000 rpm for 1 minute and at	ON
	Engine speed: Above 3,600 rpm		OFF
ALT DUTY SIG	Power generation voltage variable of	control: Operating	ON
ALI DOTT SIG	Power generation voltage variable of	control: Not operating	OFF
I/P PULLY SPD	Vehicle speed: More than 20 km/h (12 MPH)	Almost the same speed as the tachometer indication
VEHICLE SPEED	Turn drive wheels and compare CO tion.	NSULT value with the speedometer indica-	Almost the same speed as the speedometer indication
IDL A/V LEARN	Engine: running	Idle air volume learning has not been performed yet.	YET
IDLA/V LLAKIN	Lingine. running	Idle air volume learning has already been performed successfully.	CMPLT
TRVL AFTER MIL	Ignition switch: ON	Vehicle has traveled after MIL has illuminated.	0 - 65,535 km (0 - 40,723 miles)
ENG OIL TEMP	Engine: After warming up	More than 70°C (158°F)	
A/F S1 HTR(B1)	Engine: After warming up, idle the e (More than 140 seconds after starting		4 - 100 %
SET VHCL SPD	Engine: Running	ASCD: Operating	The preset vehicle speed is displayed
MAIN SW	Ignition quitable ONI	MAIN switch: Pressed	ON
IVIAIN SVV	Ignition switch: ON	MAIN switch: Released	OFF
CANCEL SW	Ignition switch: ON	CANCEL switch: Pressed	ON
CANCEL 3W	Igrillion switch. ON	CANCEL switch: Released	OFF
RESUME/ACC SW	Ignition switch: ON	ACCEL/RES switch: Pressed	ON
RESUME/ACC SW	Ignition switch. ON	ACCEL/RES switch: Released	OFF
OFT OW	Louisian auditalu ON	COAST/SET switch: Pressed	ON
SET SW	Ignition switch: ON	COAST/SET switch: Released	OFF
BRAKE SW1		Brake pedal: Fully released	ON
(Brake pedal position switch)	Ignition switch: ON	Brake pedal: Slightly depressed	OFF
BRAKE SW2	Ignition switch: ON	Brake pedal: Fully released	OFF
(Stop lamp switch)	ignatori owitori. Ort	Brake pedal: Slightly depressed	ON
VHCL SPD CUT	Ignition switch: ON		NON
LO SPEED CUT	Ignition switch: ON	NON	
AT OD MONITOR	Ignition switch: ON		OFF
AT OD CANCEL	Ignition switch: ON		OFF
CRUISE LAMP	Ignition switch: ON	MAIN switch: Pressed at the 1st time \rightarrow at the 2nd time	$ON \to OFF$

Monitor Item	C	Condition	Values/Status
SET LAMP	NOTE: The item is indicated, but not used.		
FAN DUTY	Engine: Running		0 - 100 %
ALT DUTY	Engine: Idle		0 - 80 %
BAT CUR SEN	 Engine speed: Idle Battery: Fully charged*2 Selector lever: P or N (CVT), Neu Air conditioner switch: OFF No load 	tral (M/T)	Approx. 2,600 - 3,500 mV
A/F ADJ-B1	Engine: Running		-0.450 - 0.330
P/N POSI SW	Ignition switch: ON	Selector lever: P or N (CVT), Neutral (M/T)	ON
		Selector lever: Except above	OFF
INT/A TEMP SE	Ignition switch: ON		Indicates intake air temperature
AC PRESS SEN	Engine: Idle Both A/C switch and blower fan sv	witch: ON (Compressor operates)	1.0 - 4.0 V
	 Engine: After warming up Selector lever: P or N (CVT), 	Idle	Approx. 2.74 MPa
FUEL PRES SEN	Neutral (M/T) • Air conditioner switch: OFF • No load	2,000 rpm	Approx. 3.0 MPa
	 Engine speed: Idle Selector lever: D (CVT), Neutral (M/T) Fuel: Premium gasoline 	 The accelerator pedal is depressed to a half stroke position or more. The readings of boost in the multi-func- tion meter are the same as the ambient pressure or more. Engine speed: More than 3,000 rpm 	3.07 - 3.15 V
TURBO BST SEN	 Engine speed: Idle Selector lever: D (CVT), Neutral (M/T) Fuel: Regular gasoline 	 The accelerator pedal is depressed to a half stroke position or more. The readings of boost in the multi-func- tion meter are the same as the ambient pressure or more. Engine speed: More than 3,000 rpm 	2.91 - 2.99 V
ATOM PRES SEN	Ignition switch: ON		1.80 - 4.80 V
	Engine: After warming upSelector lever: P or N (CVT),	Idle	Approx. 30 deg
FUEL INJ TIM	Neutral (M/T) • Air conditioner switch: OFF • No load	2,000 rpm	Approx. 30 deg
	Engine: After warming up Selector lever: P or N (CVT),	Idle	Approx. 0.8 msec
FUEL INJ B1	Neutral (M/T) • Air conditioner switch: OFF • No load	2,000 rpm	Approx. 1.1 msec
EVAP LEAK DIAG	Ignition switch: ON	I.	Indicates the condition of EVAP leak diagnosis.
EVAP DIAG READY	Ignition switch: ON		Indicates the ready condition of EVAP leak diagnosis.
BAT TEMP SEN	 Engine: After warming up Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load 	Idle	Indicates the temperature around the battery.
THRTL STK CNT B1	NOTE: The item is indicated, but not used.		

Monitor Item		Condition	Values/Status
	DTC P0139 self-diagnosis (delaye	INCMP	
HO2 S2 DIAG1(B1)	DTC P0139 self-diagnosis (delayed cessfully.	CMPLT	
	DTC P0139 self-diagnosis (slow re	esponse) has not been performed yet.	INCMP
HO2 S2 DIAG2(B1)	DTC P0139 self-diagnosis (slow recessfully.	esponse) has already been performed suc-	CMPLT
	Engine: After warming up	Idle	Approx. 255 - 275 deg
H/P FUEL PUMP DEG	Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load	2,000 rpm	Approx. 255 - 275 deg
	Engine: After warming up	Idle	Approx. 1,140 - 1,460 mV
FUEL PRES SEN V	 Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load 	Revving engine from idle to 4,000 rpm quickly	Approx. 1,300 - 2,900 mV
	Engine: After warming up	Idle	Approx. 1,450 mV
EOP SENSOR	Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load	2,000 rpm	Approx. 2,850 mV
ECM TEMP 1	Engine: After cooling Ignition switch: ON		Indicates the temperature around the ECM.
ECM TEMP 2	Engine: After cooling Ignition switch: ON		Indicates the temperature around the ECM.
		Idle	0 %
BOOST S/V DUTY	Engine: After warming up	 The accelerator pedal is depressed to a half stroke position or more. Engine speed: Below 3,000 rpm 	100 %
		 The accelerator pedal is depressed to a half stroke position or more. Engine speed: More than 3,000 rpm 	30 - 60 %
G SENSOR	Vehicle is level		Approx. 2,500 mV

^{*1:} Accelerator pedal position sensor 2 signal and throttle position sensor 2 signal are converted by ECM internally. Thus, they differ from ECM terminals voltage signal.

TERMINAL LAYOUT

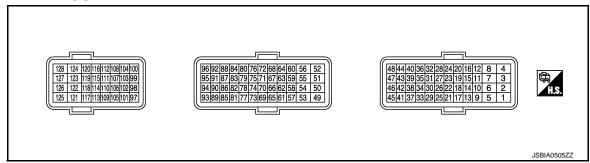

PHYSICAL VALUES

NOTE:

- ECM is located in the engine room left side near battery.
- Connect a break-out box (EG17550000) and harness adapter (EG17550400) between the ECM and ECM harness connector.
- Use extreme care not to 2 pins at one time.
- Data is for comparison and may not be exact.

^{*2:} Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-88, "How to Handle Battery".

Α

- Specification data are reference values and are measured between each terminal and ground.
 Pulse signal is measured by CONSULT.

	minal No. ire color)	Description		Condition	Value
+	-	Signal name	Input/ Output	Condition	(Approx.)
1 (B)	_	ECM ground (Fuel injector)	_	_	_ C
2 (B)	_	ECM ground (Fuel injector)	_	_	
3 (G)	1	Fuel injector No. 1, 4 (HI)	Output	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	BATTERY VOLTAGE (11 - 14 V) ★ 100mSec/div E 20V/div JPBIA4718ZZ
4 (Y)	(B)	Fuel injector No. 2, 3 (HI)		[Engine is running] • Engine speed is 2,000 rpm	BATTERY VOLTAGE (11 - 14 V) ★ 100mSec/div
					20V/div JPBIA4719ZZ
5 (R) 6 (BR)	1	Fuel injector No. 1 (LO) Fuel injector No. 2 (LO)	Output	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	BATTERY VOLTAGE (11 - 14 V) ★ 100mSec/div 20V/div JPBIA4720ZZ
7 (W) 8 (R)	(B)	Fuel injector No. 3 (LO) Fuel injector No. 4 (LO)	Output	[Engine is running] • Engine speed is 2,000 rpm	BATTERY VOLTAGE (11 - 14 V) ★ 100mSec/div M 20V/div JPBIA4721ZZ
9 (W)	_	Sensor ground (Mass air flow sensor, in- take air temperature sensor1)	_	_	— P
10 (LG)	_	Sensor ground (Engine coolant temperature sensor)	_	_	
11 (P)	_	Sensor ground (Engine oil temperature sensor)	_	_	_

	minal No. ire color)	Description		Condition	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
12 (BR)	_	Sensor ground (Refrigerant pressure sensor, EVAP control sys- tem pressure sensor)	_	_	_
				[Ignition switch: ON] • Engine stopped	0.4 V
13 (G)	9 (W)	Mass air flow sensor	Input	[Engine is running]Warm-up conditionIdle speed	0.9 - 1.2 V
(-)	(17)			[Engine is running]Warm-up conditionEngine is revving from idle to about 4,000 rpm	0.9 - 1.2 to 2.4 V (Check for linear voltage rise in response to engine being increased to about 4,000 rpm.)
14 (L)	10 (LG)	Engine coolant tempera- ture sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with engine coolant temperature.
15 (L)	12 (BR)	EVAP control system pressure sensor	Input	[Ignition switch: ON]	0.5 - 4.6 V
17 (Y)	9 (W)	Intake air temperature sensor 1	Input	[Engine is running]	0 - 4.8 V Output voltage varies with intake air temperature.
18	44			[Engine is running]Warm-up conditionIdle speed	1.14 - 1.46 V
(GR)	(SB)	Fuel rail pressure sensor	Input	[Engine is running]Warm-up conditionRevving engine from idle to 4,000 rpm quickly	1.3 - 2.9 V
19 (P)	12 (BR)	Refrigerant pressure sensor	Input	 [Engine is running] Warm-up condition Both A/C switch and blower fan motor switch: ON (Compressor operates) 	1.0 - 4.0 V
21 (W)	127 (B/Y)	A/F sensor 1	Input	[Ignition switch: ON]	2.2 V
22 (Y)	11 (P)	Engine oil temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with engine oil temperature.
23 (W)	12 (BR)	Sensor power supply (Refrigerant pressure sensor, EVAP control sys- tem pressure sensor)	_	[Ignition switch: ON]	5.0 V
25 (B)	127 (B/Y)	A/F sensor 1	Input	[Engine is running] • Engine speed is 2,000 rpm	1.8 V Output voltage varies with air fuel ratio.
29 (W)	33 (R)	Heated oxygen sensor 2	Input	 [Engine is running] Revving engine from idle to 3,000 rpm quickly after the following conditions are met Engine: after warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load 	0 - 1.0 V

	ninal No. re color)	Description		0	Value							
+	_	Signal name	Input/ Output	Condition	(Approx.)							
33 (R)	_	Sensor ground (Heated oxygen sensor 2)		_	_							
35 (—)	_	Sensor ground (Knock sensor)	_	_	_							
36 (W)	35 (—)	Knock sensor	Input	[Engine is running] • Idle speed	2.5 V							
38 (B)	_	Shield	_	_	_							
39 (R)	44 (SB)	Sensor power supply (Fuel rail pressure sensor, turbocharger boost sen- sor, engine oil pressure sensor)	_	[Ignition switch: ON]	5.0 V							
41	44	Turbocharger boost sen-	lanut	[Engine is running]Warm-up conditionIdle speed	1.9 V							
(W)	(SB)	sor	Input	[Engine is running]Warm-up conditionEngine speed is 2,000 rpm	2.0 V							
43	44	Engine oil pressure sen-	Input	[Engine is running]Warm-up conditionIdle speed	1.3 V★ 5mSec/div 2V/div JPBIA3359ZZ							
(G)	(SB)	sor								•	[Engine is running]Warm-up conditionEngine speed is 2,000 rpm	2.7 V★ 5mSec/div 2V/div JPBIA3360ZZ
44 (SB)	_	Sensor ground (Fuel rail pressure sensor, turbocharger boost sen- sor, engine oil pressure sensor)	-	_	_							
49 (G)	_	Fuel injector driver power supply 1	Input	[Engine is running]Warm-up conditionIdle speed	BATTERY VOLTAGE (11 - 14 V)							
50 (B)	_	ECM ground (High pressure fuel pump)	_	_	_							
51 (GR)	127 (B/Y)	Throttle control motor (Open)	Output	[Ignition switch: ON] • Engine stopped • Selector lever: D (CVT), 1st (M/T) • Accelerator pedal: Fully depressed	3.2 V★ 1mSec/div 5V/div JMBIA0324GB							

	minal No. ire color)	Description		Condition	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
52 (BR)	127 (B/Y)	Throttle control motor (Close)	Output	[Ignition switch: ON] • Engine stopped • Selector lever: D (CVT), 1st (M/T) • Accelerator pedal: Fully released	1.8 V★ 5mSec/div 5V/div JMBIA0326GB
53 (BR)	_	Fuel injector driver power supply 2	Input	[Engine is running]Warm-up conditionIdle speed	BATTERY VOLTAGE (11 - 14 V)
54 (R)	_	High pressure fuel pump driver power supply	Input	[Engine is running]Warm-up conditionIdle speed	BATTERY VOLTAGE (11 - 14 V)
55 (BR)	50 (B)	High pressure fuel pump (HI)	Output	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle [Engine is running] Engine speed is 2,000 rpm 	BATTERY VOLTAGE (11 - 14 V) ★ 20mSec/div 5V/div JPBIA4722ZZ BATTERY VOLTAGE (11 - 14 V) ★ 20mSec/div JPBIA4723ZZ
56 (Y)	127 (B/Y)	High pressure fuel pump (LO)	Output	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle [Engine is running] Engine speed is 2,000 rpm 	BATTERY VOLTAGE (11 - 14 V) ★ 20mSec/div 20V/div JPBIA4724ZZ BATTERY VOLTAGE (11 - 14 V) ★ 20mSec/div 20V/div JPBIA4725ZZ
58 (G)	_	Sensor power supply [Crankshaft position sen- sor (POS)]	_	[Ignition switch: ON]	5 V

	ninal No. re color)	Description		Condition	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
59 (L)	_	Sensor ground [Camshaft position sensor (PHASE), exhaust valve timing control position sensor]	_		_
60 (W)	_	Sensor ground [Crankshaft position sensor (POS)]	_	_	_
62 (B)	_	Sensor power supply (Throttle position sensor)	_	[Ignition switch: ON]	5 V
63	59	Camshaft position sensor	Input	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	1.0 - 2.0★ 10mSec/div 2V/div JPBIA4726ZZ
(BR)		mput	[Engine is running] • Engine speed is 2,000 rpm	1.0 - 2.0★ 10mSec/div 2V/div JPBIA4727ZZ	
64	60	Crankshaft position sen-	land	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	4.0 V★ 5mSec/div 2V/div JPBIA4728ZZ
(R)	(W)	sor (POS)	Input	[Engine is running] • Engine speed: 2,000 rpm	4.0 V★ 5mSec/div 2V/div JPBIA4729ZZ
66 (SB)	127 (B/Y)	Starter relay control	Output	[Engine is running] • Warm-up condition • Idle speed [Engine is running] • Warm-up condition • Selector lever: D position • Brake pedal: Slightly depressed • Engine speed: Less than 1,500 rpm	BATTERY VOLTAGE (11 - 14 V) 0 V (At the time of starter motor drive)

	minal No. ire color)	Description		Condition	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
67	59	59 Exhaust valve timing con-	Input	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	1.0 - 2.0★ 50mSec/div 2V/div JPBIA4730ZZ
(LG)	(L)	trol position sensor	При	[Engine is running] • Engine speed is 2,000 rpm	1.0 - 2.0★ 50mSec/div 2V/div JPBIA4731ZZ
68 (Y)	_	Sensor power supply (Battery current sensor, battery temperature sen- sor, G sensor)	_	[Ignition switch: ON]	5 V
69 (L)	127 (B/Y)	EVAP canister vent control valve	Output	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
72 (GR)	_	Sensor power supply [Camshaft position sen- sor (PHASE), exhaust valve timing control posi- tion sensor]	_	[Ignition switch: ON]	5 V
73	127	Turbocharger boost con-	Output	[Engine is running]Warm-up conditionIdle speed	BATTERY VOLTAGE (11 - 14 V)
(BR)	(B/Y)	trol solenoid valve	Output	[Engine is running]Warm-up conditionEngine speed is 2,000 rpm	8.0 V
74 (R)	_	Sensor ground (Throttle position sensor 1, 2)	_	_	_
75	74	Throttle position concer 1	loout	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully released 	More than 0.36 V
(G)	(R)	Throttle position sensor 1	Input	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully depressed 	Less than 4.75 V
76	74	Throttle position sensor 2	Input	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully released 	Less than 4.75 V
(W)	(R)	THIOLIGE POSITION SENSON 2	прис	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully depressed 	More than 0.36 V

	ninal No. re color)	Description		O - m alisti - m	Value
+	-	Signal name	Input/ Output	Condition	(Approx.)
77 (Y)	127 (B/Y)	Throttle control motor re-	Output	[Ignition switch: OFF]	BATTERY VOLTAGE (11 - 14 V)
79 (BG)	87 (BR)	Battery temperature sensor	Input	[Ignition switch: ON] [Engine is running] • Battery temperature: 25°C (°F) • Idle speed	0 - 1.0 V 3.3 V
80 (G)	87 (BR)	Battery current sensor	Input	[Engine is running]Battery: Fully charged*Idle speed	2.6 - 3.5 V
			[Engine is running]Warm-up conditionIdle speed	0 V	
81 (W)	127 (B/Y)	Intake valve timing control solenoid valve	Output	[Engine is running]Warm-up conditionWhen revving engine up to 2,000rpm Quickly	BATTERY VOLTAGE (11 - 14 V) ★ 5V/div JMBIA0038GB
82 (R) 86		Ignition signal No. 1 Ignition signal No. 2		 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending 	0 - 0.3 V★ 100mSec/div
90 (P) 94 SB)	127 (B/Y)	Ignition signal No. 3 Ignition signal No. 4	Output	on rpm at idle [Engine is running] • Warm-up condition • Engine speed: 2,000 rpm	2V/div JPBIA4733ZZ 0.2 - 0.5 V★ 100mSec/div
83 G)	87 (BR)	G sensor	Input	[Engine is running] • Warm-up condition • Idle speed	2V/div JPBIA4734ZZ 2.5 V
84 (P)	127 (B/Y)	Fuel tank temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with fuel tank temperature
85 G)	127 (B/Y)	Exhaust valve timing control solenoid valve	Output	 [Engine is running] Warm-up condition Idle speed [Engine is running] Warm-up condition Engine speed: 2,000 rpm 	0 V BATTERY VOLTAGE (11 - 14 V)
87 BR)	_	Sensor ground (Battery current sensor, battery temperature sen- sor, G sensor)	_	_	_

	ninal No. re color)	Description		O an althion	Value
+	-	Signal name	Input/ Output	Condition	(Approx.)
88 (V)	44 (SB)	Intake air temperature sensor 2	Input	[Engine is running]Warm-up conditionIdle speed	0 - 4.8 V Output voltage varies with intake air temperature.
				[Ignition switch: OFF]	3.6 V
92	127		_	[Ignition switch: ON]	0 V
(R)	92 127 (R) (B/Y) Cr	Cranking request signal	Output	[Engine is running]Warm-up conditionIdle speed	BATTERY VOLTAGE (11 - 14 V)
95 (L)	127 (BW)	127 (B/Y) EVAP canister purge volume control solenoid valve Out	Output	[Engine is running]Idle speedAccelerator pedal: Not depressed even slightly, after engine starting	BATTERY VOLTAGE (11 - 14 V)★ 50mSec/div 10V/div JMBIA0327GB
	(6/1)			[Engine is running]Engine speed: About 2,000 rpm (More than 100 seconds after starting engine.)	10 V★ 50mSec/div 10V/div JMBIA0328GB
99 (P)	_	CAN communication line (CAN-L)	Input/ Output	_	_
100 (L)	_	CAN communication line (CAN-H)	Input/ Output	_	_
101 (V)	_	Sensor power supply (Accelerator pedal position sensor 1)	_	[Ignition switch: ON]	5 V
102	105	Accelerator pedal posi-	Input	[Ignition switch: ON]Engine stoppedAccelerator pedal: Fully released	0.6 - 0.9 V
(R)	(P) — (CAN-L) 100 — CAN comr (L) — Sensor po (Accelerate tion senso) 102 105 Accelerate tion senso (R) (GR) toon senso	tion sensor 1		[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed	3.9 - 4.7 V
(P) — (CAN-L) Output 100 — (CAN-H) Input/ Output 101 — Sensor power supply (Accelerator pedal position sensor 1) 102 105 Accelerator pedal position sensor 1 108 (GR) Accelerator pedal position sensor 1 109 Input [Ignition switch: 0]	[Ignition switch: ON] • Selector lever: P or N (CVT), Neutral (M/T)	BATTERY VOLTAGE (11 - 14 V)			
(511)	(3/1)			[Ignition switch: ON] • Selector lever: Except above	0 V
104 (R)	127 (B/Y)	Data link connector	Input/ Output	[Ignition switch: ON] • CONSULT or GST: Disconnected	10.5 V
105 (GR)	_	Sensor ground (Accelerator pedal position sensor 1)	_	_	_
106 (Y)	127 (B/Y)	Power supply for ECM (Backup)	Input	[Ignition switch: OFF]	BATTERY VOLTAGE (11 - 14 V)

	ninal No. re color)	Description		2	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
108	127	Clutch pedal position		[Ignition switch: ON] • Clutch pedal: Fully released	0 V
(GR)	(B/Y)	switch	Input	[Ignition switch: ON] • Clutch pedal: Fully depressed	BATTERY VOLTAGE (11 - 14 V)
109	127	lauriai aurauria ala	laasst	[Ignition switch: OFF]	0 V
(O)	(B/Y)	Ignition switch	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
				[Ignition switch: ON] • ASCD steering switch: OFF	4 V
				[Ignition switch: ON] • MAIN switch: Pressed	0 V
110 111 (P) (B)	ASCD steering switch	Input	[Ignition switch: ON] • CANCEL switch: Pressed	1 V	
			[Ignition switch: ON] • ACCEL/RES switch: Pressed	3 V	
				[Ignition switch: ON] • COAST/SET switch: Pressed	2 V
111 (B)	_	Sensor ground (ASCD steering switch)	_	_	_
112 127 (BR) (B/Y)	ECM relay (Self shut-off)	Output	[Engine is running] [Ignition switch: OFF] • A few seconds after turning ignition switch OFF	0 - 1.0 V	
			[Ignition switch: OFF] • More than a few seconds after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14 V)	
115	127	Chan laws switch	l ([Ignition switch: OFF] • Brake pedal: Fully released	0 V
(SB)	(B/Y)	Stop lamp switch	Input	[Ignition switch: OFF] • Brake pedal: Slightly depressed	BATTERY VOLTAGE (11 - 14 V)
116	127	Brake pedal position	lanut	[Ignition switch: OFF] • Brake pedal: Fully released	BATTERY VOLTAGE (11 - 14 V)
(G)	(B/Y)	switch	Input	[Ignition switch: ON] • Brake pedal: Slightly depressed	0 V
117 (Y)	127 (B/Y)	Fuel pump relay	Output	[Ignition switch: ON] • For 1 second after turning ignition switch ON [Engine is running]	0 - 1.0 V
118 (O)	_	Sensor power supply (Accelerator pedal position sensor 2)	_	[Ignition switch: ON]	5 V
119	120	Accelerator pedal posi-	Inn::4	[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released	0.3 - 0.6 V
(BR)	(Y)	tion sensor 2	Input	[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed	1.95 - 2.4 V
120 (Y)	_	Sensor ground (Accelerator pedal position sensor 2)	_	_	_
121 (G)	127 (B/Y)	Power supply for ECM	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)

	minal No. ire color)	Description		Condition	Value		
+	_	Signal name	Input/ Output	[Engine is running] • Engine speed: Below 3,600 rpm a ter the following conditions are me - Engine: after warming up - Keeping the engine speed betwee 3,500 and 4,000 rpm for 1 minute	(Approx.)		
122 (GR)	127 (B/Y)	Throttle control motor power supply	Input	[Ignition switch: ON] — [Engine is running] • Warm-up condition • Idle speed (More than 140 seconds after starting engine) [Engine is running] • Engine speed: Below 3,600 rpm after the following conditions are met - Engine: after warming up - Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load	[Ignition switch: ON] BATTERY VOLTAGE (11 - 14 V)		
123 (B/Y)	_	ECM ground	_	_	_		
124 (B/Y)	_	ECM ground	_	_	_		
125 (L)	127 (B/Y)	A/F sensor 1 heater	Input	Warm-up conditionIdle speed (More than 140 seconds after start-	2.9 - 8.8 V★ 100mSec/div 5V/div JPBIA4732ZZ		
126 (W)	33 (R)	Heated oxygen sensor 2 heater	Output	 Engine speed: Below 3,600 rpm after the following conditions are met Engine: after warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load [Ignition switch: ON] Engine stopped 	10 V★ 50mSec/div 10V/div JMBIA0325GB BATTERY VOLTAGE (11 - 14 V)		
127 (B/Y)		ECM ground	_	Engine speed: Above 3,600 rpm —			

Fail Safe

NON DTC RELATED ITEM

Detected items	Engine operating condition in fail-safe mode	Remarks	Reference page
Malfunction indicator circuit	Engine speed will not rise more than 2,500 rpm due to the fuel cut	When there is an open circuit on MIL circuit, the ECM cannot warn the driver by lighting up MIL when there is malfunction on engine control system. Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the driver that engine control system malfunctions and MIL circuit is open by means of operating fail safe function. The fail safe function also operates when above diagnoses except MIL circuit are detected and demands the driver to repair the malfunction.	EC-527, "Component Function Check"

DTC RELATED ITEM

DTC No.	Detected items	Engine operating condition in fail safe mode
P0011	Intake valve timing control	The signal is not energized to the intake valve timing control solenoid valve and the valve control does not function.
P0014	Exhaust valve timing control	The signal is not energized to the exhaust valve timing control magnet retarder and the magnet retarder control does not function.

TC No.	Detected items	Engine opera	ting condition in fail safe mode			
P0045 P0048	Turbocharger boost control solenoid valve	Sets the duty ratio of the turbocharg the boost to the lower limit.	er boost control solenoid valve to 0%, and decreases			
P0047		The ECM controls the electric thrott	le control actuator and restricts the torque.			
P0087 P0090	FRP control system	Engine torque is limited or engine s	peed is limited.			
P0088		Engine speed is limited.				
P0101 P0102 P0103	Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut. Engine coolant temperature will be determined by ECM based on the following conditions CONSULT displays the engine coolant temperature decided by ECM.				
P0117 P0118	Engine coolant tempera- ture sensor circuit					
		Condition	Engine coolant temperature decided (CONSULT display)			
		Just as ignition switch is turned ON or START	40°C (104°F)			
		Approx. 4 minutes or more after engine starting	80°C (176°F)			
		Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)			
		When the fail safe system for engine coolant temperature sensor is activated, the cooling fan operates while engine is running.				
P0122 P0123 P0222 P0223 P2135	Throttle position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.				
P0190	FRP sensor	 Engine speed is limited. High pressure fuel pump is activated at maximum discharge pressure. 				
P0196 P0197 P0198	Engine oil temperature sensor	Exhaust valve timing control does n	ot function.			
P0201 P0202 P0203 P0204	Injector		Fuel injection shut-off of malfunction cylinder. Mixture ratio feedback control does not function.			
P0234	Turbocharger system	The ECM controls the electric thrott	le control actuator and restricts the torque.			
P0237 P0238	Turbocharger boost sensor	Sets the duty ratio of the turbocharg the boost to the lower limit.	er boost control solenoid valve to 0%, and decreases			
P0500	Vehicle speed sensor	The cooling fan operates (Highest)	while engine is running.			
P0524	Engine oil pressure	 ECM illuminates oil pressure war Engine speed will not rise more ti Fail-safe is canceled when ignition 	·			
P0605	ECM	(When ECM calculation function is ECM stops the electric throttle cont fixed opening (approx. 5 degrees) b	rol actuator control, throttle valve is maintained at a			
		Engine speed will not rise more that	n 3,500 rpm due to the fuel cut.			
P0607	╡	Engine torque is limited.				
P0607 P062B		Idle engine speed is increased.Fuel injector power supply shut-oHigh fuel pressure limitation.	ff.			

DTC No.	Detected items	Engine opera	ating condition in fail safe mode			
P1805	Brake switch	ECM controls the electric throttle control actuator by regulating the throttle opening to a small range. Therefore, acceleration will be poor.				
		Vehicle condition	Driving condition			
		When engine is idling	Normal			
		When accelerating	Poor acceleration			
P1197	Out of gas	Engine torque is limited.				
P2100 P2103	Throttle control motor relay	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring. ECM stops the electric throttle control actuator control, throttle valve is maintained at a				
P2101	Electric throttle control function	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.				
P2118	Throttle control motor	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.				
P2119	Electric throttle control actuator	lectric throttle control ac- (When electric throttle control actuator does not function properly due to the return				
		(When throttle valve opening angle in fail safe mode is not in specified range:) ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less.				
		(When ECM detects the throttle valve is stuck open:) While the vehicle is driving, it slows down gradually by fuel cut. After the vehicle stops, the engine stalls. The engine can restart in the Neutral position, and engine speed will not exceed 1,000 rpm or more.				
P2122 P2123 P2127 P2128 P2138	Accelerator pedal position sensor	order for the idle position to be with	le control actuator in regulating the throttle opening in in +10 degrees. eed of the throttle valve to be slower than the normal			

DTC Inspection Priority Chart

INFOID:0000000008274514

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)	
1	U0101 U0122 U1001 CAN communication line	
	P0096 P0097 P0098 Intake air temperature sensor 2	
	P0101 P0102 P0103 Mass air flow sensor	E
	P0111 P0112 P0113 Intake air temperature sensor 1	
	P0116 P0117 P0118 Engine coolant temperature sensor	
	P0122 P0123 P0222 P0223 P1225 P1226 P2135 Throttle position sensor P0122 P0123 P0222 P0223 P1225 P1226 P2135 Throttle position sensor	
	P0128 Thermostat function P0107 P0100 F - in the state of the	
	P0197 P0198 Engine oil temperature sensor P0207 P0208 Knowledge and a possor	
	P0327 P0328 Knock sensor P0325 Creakehoft position sensor (POS)	
	P0335 Crankshaft position sensor (POS) P0340 Complet position sensor (PHASE)	
	P0340 Camshaft position sensor (PHASE)P0460 P0461 P0462 P0463 Fuel level sensor	
	P0500 P0501 P2159 P2162 Vehicle speed sensor	
	P0520 Engine oil pressure sensor	
	P0603 P0605 P0607 P0611 P062B ECM	
	P0643 Sensor power supply	
	P0705 Transmission range switch	
	P0850 Park/neutral position (PNP) switch	
	• P1197 Out of gas [*]	
	 P1550 P1551 P1552 P1553 P1554 Battery current sensor 	
	P1556 P1557 Batter temperature sensor	
	• P158A ECM	
	 P159A P159B P159C P159D G sensor 	
	• P1610 - P1615 NATS	
	• P1650 P1651 P1652 Starter motor relay	
	P2122 P2123 P2127 P2128 P2138 Accelerator pedal position sensor	

EC-101 2013 JUKE Revision: 2014 February

J

Κ

 \mathbb{N}

L

Ν

0

Р

Priority	Detected items (DTC)
2	 P0031 P0032 Air fuel ratio (A/F) sensor 1 heater P0037 P0038 Heated oxygen sensor 2 heater P0045 P0047 P0048 Turbocharger boost control solenoid valve P0075 Intake valve timing control solenoid valve P0078 Exhaust valve timing control solenoid valve P0130 P0131 P0132 P0133 P2096 P2097 Air fuel ratio (A/F) sensor 1 P0137 P0138 P0139 Heated oxygen sensor 2 P0237 P0238 Turbocharger boost sensor P0441 EVAP control system purge flow monitoring P0443 P0444 P0445 EVAP canister purge volume control solenoid valve P0710 P0715 P0720 P0740 P0744 P0745 P0746 P0776 P0778 P0840 P1740 P1777 P1778 CVT related sensors, solenoid valves and switches P1078 Exhaust valve timing position sensor P1451 Pressure sensor P1217 Engine over temperature (OVERHEAT) P1805 Brake switch P2100 P2103 Throttle control motor relay P2101 Electric throttle control function P2118 Throttle control motor
3	 P0011 Intake valve timing control P0014 Exhaust valve timing control P0087 P0088 P0090 FRP control system P0171 P0172 Fuel injection system function P0201 - P0204 Injector P0234 P2263 Turbocharger system P0300 - P0304 Misfire P0420 Three way catalyst function P0442 P0456 EVAP control system (Small leak, very small leak) P0455 EVAP control system (Gross leak) P0506 P0507 Idle speed control system P050A P050E P1423 P1424 Cold start control P0524 Engine oil pressure P1148 Closed loop control P1212 TCS communication line P1574 ASCD steering switch P1574 ASCD vehicle speed sensor P2119 Electric throttle control actuator

NOTE:

*: If "P1197" is displayed with other DTC in priority 1, perform trouble diagnosis for "P1197" first.

DTC Index

×:Applicable —: Not applicable

DTC*1		Items	SRT			Permanent	Reference
CONSULT GST*2	ECM*3	(CONSULT screen terms)	code	Trip	MIL	DTC group*4	page
U0101	0101	LOST COMM (TCM)	_	1	×	В	EC-162
U0122	0122	VDC MDL	_	2	×	В	EC-163
U1001	1001 ^{*5}	CAN COMM CIRCUIT	_	2	_	_	EC-164
P0000	0000	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	_	_	Flashing ^{*9}	_	_
P0011	0011	INT/V TIM CONT-B1	×	2	×	В	EC-165
P0014	0014	EXH/V TIM CONT-B1	_	2	×	В	EC-168
P0031	0031	A/F SEN1 HTR (B1)	_	2	×	В	EC-172
P0032	0032	A/F SEN1 HTR (B1)	_	2	×	В	EC-172

DTC*	1		ODT			Permanent	D. (
CONSULT GST ^{*2}	ECM*3	Items (CONSULT screen terms)	SRT	Trip	MIL	DTC group*4	Reference page	
P0037	0037	HO2 HTR (B1)	_	2	×	В	EC-175	
P0038	0038	HO2 HTR (B1)	_	2	×	В	EC-175	-
P0045	0045	TC BOOST SOL/V	_	2	×	В	EC-178	_
P0047	0047	TC/SC BOOST CONT A	_	1	×	В	EC-178	_
P0048	0048	TC/SC BOOST CONT A	_	1	×	В	EC-178	_
P0075	0075	INT/V TIM V/CIR-B1		2	×	В	EC-180	_
P0078	0078	EX V/T ACT/CIRC-B1	_	2	×	В	EC-183	_
P0087	0087	LOW FUEL PRES		2	×	A or B	EC-186	_
P0088	0088	HIGH FUEL PRES		2	×	A or B	EC-189	_
P0090	0090	FUEL PUMP		2	×	В	EC-191	_
P0096	0096	IAT SENSOR 2 B1		2	×	В	EC-196	_
P0097	0097	IAT SENSOR 2 B1	_	2	×	В	EC-198	_
P0098	0098	IAT SENSOR 2 B1	1 – 1	2	×	В	EC-198	_
P0101	0101	MAF SEN/CIRCUIT-B1	1 – 1	2	×	В	EC-202	_
P0102	0102	MAF SEN/CIRCUIT-B1	_	1	×	В	EC-207	_
P0103	0103	MAF SEN/CIRCUIT-B1		1	×	В	EC-207	_
P0111	0111	IAT SENSOR 1 B1	_	2	×	А	EC-212	_
P0112	0112	IAT SEN/CIRCUIT-B1	1 – 1	2	×	В	EC-214	_
P0113	0113	IAT SEN/CIRCUIT-B1		2	×	В	EC-214	_
P0116	0116	ECT SEN/CIRC	_	2	×	А	EC-216	_
P0117	0117	ECT SEN/CIRC	_	1	×	В	EC-218	_
P0118	0118	ECT SEN/CIRC	1 – 1	1	×	В	EC-218	_
P011C	011C	CAT/IAT CRRLTN B1	_	2	×	В	EC-220	_
P0122	0122	TP SEN 2/CIRC-B1	_	1	×	В	EC-222	_
P0123	0123	TP SEN 2/CIRC-B1	1 – 1	1	×	В	EC-222	_
P0125	0125	ECT SENSOR		2	×	В	EC-225	_
P0127	0127	IAT SENSOR-B1	1 – 1	2	×	В	EC-227	_
P0128	0128	THERMSTAT FNCTN	1 – 1	2	×	А	EC-229	_
P0130	0130	A/F SENSOR1 (B1)	×	2	×	А	EC-232	_
P0131	0131	A/F SENSOR1 (B1)	_	2	×	В	EC-236	_
P0132	0132	A/F SENSOR1 (B1)	_	2	×	В	EC-239	_
P0133	0133	A/F SENSOR1 (B1)	×	2	×	А	EC-242	_
P0137	0137	HO2S2 (B1)	×	2	×	А	EC-247	_
P0138	0138	HO2S2 (B1)	×	2	×	А	EC-253	_
P0139	0139	HO2S2 (B1)	×	2	×	А	EC-260	_
P0171	0171	FUEL SYS-LEAN-B1	_	2	×	В	EC-266	_
P0172	0172	FUEL SYS-RICH-B1	_	2	×	В	EC-270	_
P0181	0181	FTT SENSOR	_	2	×	A and B	EC-274	_
P0182	0182	FTT SEN/CIRCUIT	_	2	×	В	EC-278	_
P0183	0183	FTT SEN/CIRCUIT	_	2	×	В	EC-278	_
P0190	0190	FUEL PRES SEN/CIRC	_	2	×	В	EC-281	_
P0191	0191	FRP SENSOR A	+_+	2	×	A	EC-285	_

DTC*	1	Itama	SRT			Permanent	Deference
CONSULT GST*2	ECM*3	Items (CONSULT screen terms)	code	Trip	MIL	DTC group*4	Reference page
P0192	0192	FRP SEN/CIRC	_	2	×	В	EC-281
P0193	0193	FRP SEN/CIRC	_	2	×	В	EC-281
P0196	0196	EOT SENSOR	_	2	×	A and B	EC-289
P0197	0197	EOT SEN/CIRC	_	2	×	В	EC-293
P0198	0198	EOT SEN/CIRC	_	2	×	В	EC-293
P0201	0201	INJECTOR CIRC-CYL1	_	2	×	В	EC-295
P0202	0202	INJECTOR CIRC-CYL2	_	2	×	В	EC-295
P0203	0203	INJECTOR CIRC-CYL3	_	2	×	В	EC-295
P0204	0204	INJECTOR CIRC-CYL4	_	2	×	В	EC-295
P0222	0222	TP SEN 1/CIRC-B1	_	1	×	В	EC-296
P0223	0223	TP SEN 1/CIRC-B1	_	1	×	В	EC-296
P0234	0234	TC SYSTEM-B1	_	1	×	В	EC-299
P0237	0237	TC BOOST SEN/CIRC-B1	_	2	×	В	EC-302
P0238	0238	TC BOOST SEN/CIRC-B1	_	2	×	В	EC-302
P0300	0300	MULTI CYL MISFIRE	_	1 or 2	× or —	В	EC-305
P0301	0301	CYL 1 MISFIRE	_	1 or 2	× or —	В	EC-305
P0302	0302	CYL 2 MISFIRE	_	1 or 2	× or —	В	EC-305
P0303	0303	CYL 3 MISFIRE	_	1 or 2	× or —	В	EC-305
P0304	0304	CYL 4 MISFIRE	_	1 or 2	× or —	В	EC-305
P0327	0327	KNOCK SEN/CIRC-B1	_	2	_	_	EC-311
P0328	0328	KNOCK SEN/CIRC-B1	_	2	_	_	EC-311
P0335	0335	CKP SEN/CIRCUIT	_	2	×	В	EC-313
P0340	0340	CMP SEN/CIRC-B1	_	2	×	В	EC-316
P0420	0420	TW CATALYST SYS-B1	×	2	×	Α	EC-320
P0441	0441	EVAP PURG FLOW/MON	×	2	×	Α	EC-325
P0443	0443	PURG VOLUME CONT/V	_	2	×	А	EC-330
P0444	0444	PURG VOLUME CONT/V	_	2	×	В	EC-335
P0445	0445	PURG VOLUME CONT/V	_	2	×	В	EC-335
P0447	0447	VENT CONTROL VALVE	_	2	×	В	EC-338
P0448	0448	VENT CONTROL VALVE	_	2	×	В	EC-342
P0451	0451	EVAP SYS PRES SEN	_	2	×	А	EC-346
P0452	0452	EVAP SYS PRES SEN	_	2	×	В	EC-350
P0453	0453	EVAP SYS PRES SEN	_	2	×	А	EC-353
P0456	0456	EVAP VERY SML LEAK	×*6	2	×	A	EC-357
P0460	0460	FUEL LEV SEN SLOSH	_	2	×	A	EC-363
P0461	0461	FUEL LEVEL SENSOR	_	2	×	В	EC-364
P0462	0462	FUEL LEVEL SEN/CIRC	_	2	×	В	EC-366
P0463	0463	FUEL LEVEL SEN/CIRC	_	2	×	В	EC-366
P0500	0500	VEHICLE SPEED SEN A*7	_	2	×	В	EC-367 (C EC-368 (M
P0501	0501	VEHICLE SPEED SEN A	_	2	×	В	EC-371
P0506	0506	ISC SYSTEM		2	×	В	EC-372

DTC*	1	Items	SRT			Permanent	Reference
ONSULT GST ^{*2}	ECM*3	(CONSULT screen terms)	code	Trip	MIL	DTC group*4	page
P0507	0507	ISC SYSTEM	_	2	×	В	EC-374
P050A	050A	COLD START CONTROL	_	2	×	А	EC-376
P050E	050E	COLD START CONTROL	_	2	×	Α	EC-376
P0520	0520	EOP SENSOR/SWITCH	_	2	_	_	EC-378
P0524	0524	ENGINE OIL PRESSURE	_	1	_	_	EC-382
P0603	0603	ECM BACK UP/CIRCUIT*8	_	2	×	В	EC-385
P0605	0605	ECM	_	1 or 2	× or —	В	EC-387
P0607	0607	ECM	_	1 (CVT) 2 (M/T)	× (CVT) — (M/T)	В	EC-389
P0611	0611	FIC MODULE	_	2	×	В	EC-390
P062B	062B	ECM	_	2	×	В	EC-391
P0643	0643	SENSOR POWER/CIRC	_	1	×	В	EC-392
P0705	0705	T/M RANGE SENSOR A	_	2	×	В	TM-144
P0710	0710	FLUID TEMP SENSOR A	_	1	×	В	TM-147
P0715	0715	INPUT SPEED SENSOR A	_	2	×	В	TM-150
P0720	0720	OUTPUT SPEED SENSOR*7	_	2	×	В	<u>TM-153</u>
P0740	0740	TORQUE CONVERTER	_	2	×	В	<u>TM-157</u>
P0744	0744	TORQUE CONVERTER	_	2	×	В	<u>TM-160</u>
P0745	0745	PC SOLENOID A	_	2	×	В	TM-162
P0746	0746	PC SOLENOID A	_	1	×	В	<u>TM-164</u>
P0776	0776	PC SOLENOID B	_	2	×	В	<u>TM-166</u>
P0778	0778	PC SOLENOID B	_	2	×	В	<u>TM-168</u>
P0840	0840	FLUID PRESS SEN/SW A	_	2	×	В	<u>TM-173</u>
P0850	0850	P-N POS SW/CIRCUIT	_	2	×	В	EC-394
P1078	1078	EXH TIM SEN/CIRC-B1	_	2	×	В	EC-398
P1148	1148	CLOSED LOOP-B1	_	1	×	А	EC-402
P1197	1197	FUEL RUN OUT	_	2	_	_	EC-403
P1212	1212	TCS/CIRC	_	2	_	_	EC-405
P1217	1217	ENG OVER TEMP	_	1	×	В	EC-406
P1225	1225	CTP LEARNING-B1	_	2	_	_	EC-409
P1226	1226	CTP LEARNING-B1	_	2	_	_	EC-410
P1423	1423	COLD START CONTROL	_	2	×	В	EC-411
P1424	1424	COLD START CONTROL	_	2	×	В	EC-411
P1451	1451	TC/SC PRES-EVAP PRES	_	2	×	В	EC-413
P1550	1550	BAT CURRENT SENSOR	_	2	_	_	EC-416
P1551	1551	BAT CURRENT SENSOR	_	2	_	_	EC-419
P1552	1552	BAT CURRENT SENSOR	_	2	_	_	EC-419
P1553	1553	BAT CURRENT SENSOR	_	2	_	_	EC-422
P1554	1554	BAT CURRENT SENSOR	_	2	_	_	EC-425
P1556	1556	BAT TMP SEN/CIRC	_	2	_	_	EC-429
P1557	1557	BAT TMP SEN/CIRC	_	2	_	_	EC-429
P1564	1564	ASCD SW	_	1	_	_	EC-431

DTC*1		14	CDT			Permanent	Deference
CONSULT GST*2	ECM*3	Items (CONSULT screen terms)	SRT code	Trip	MIL	DTC group*4	Reference page
P1572	1572	ASCD BRAKE SW	_	1	_	_	EC-434
P1574	1574	ASCD VHL SPD SEN	_	1	_	_	EC-439
P158A	158A	G SENSOR	_	1	_	_	EC-441
P159A	159A	G SENSOR	_	2	_	_	EC-442
P159B	159B	G SENSOR	_	2	×	В	EC-446
P159C	159C	G SENSOR	_	2	×	В	EC-442
P159D	159D	G SENSOR	_	2	×	В	EC-442
P1610	1610	LOCK MODE	_	2	_	_	SEC-140
P1611	1611	ID DISCORD, IMMU-ECM	_	2	_	_	SEC-141
P1612	1612	CHAIN OF ECM-IMMU	_	2	_	_	SEC-142
P1614	1614	CHAIN OF IMMU-KEY	_	2	_	_	SEC-143
P1615	1615	DIFFERENCE OF KEY	_	2	_	_	SEC-146
P1650	1650	STR MTR RELAY 2	_	2	×	В	EC-451
P1651	1651	STR MTR RELAY	_	2	×	В	EC-454
P1652	1652	STR MTR SYS COMM	_	1	×	В	EC-457
P1740	1740	SLCT SOLENOID	_	2	×	В	<u>TM-190</u>
P1777	1777	STEP MOTOR	_	1	×	В	TM-192
P1778	1778	STEP MOTOR	_	2	×	В	TM-195
P1805	1805	BRAKE SW/CIRCUIT	_	2	_	_	EC-459
P2096	2096	POST CAT FUEL TRIM SYS B1	_	2	×	А	EC-461
P2097	2097	POST CAT FUEL TRIM SYS B1	_	2	×	А	EC-461
P2100	2100	ETC MOT PWR-B1	_	1	×	В	EC-465
P2101	2101	ETC FNCTN/CIRC-B1	_	1	×	В	EC-467
P2103	2103	ETC MOT PWR	_	1	×	В	EC-465
P2118	2118	ETC MOT-B1	_	1	×	В	EC-470
P2119	2119	ETC ACTR-B1	_	1	×	В	EC-472
P2122	2122	APP SEN 1/CIRC	_	1	×	В	EC-474
P2123	2123	APP SEN 1/CIRC	_	1	×	В	EC-474
P2127	2127	APP SEN 2/CIRC	_	1	×	В	EC-477
P2128	2128	APP SEN 2/CIRC	_	1	×	В	EC-477
P2135	2135	TP SENSOR-B1	_	1	×	В	EC-480
P2138	2138	APP SENSOR	_	1	×	В	EC-483
P2159	2159	VEHICLE SPEED SEN B	_	2	×	В	EC-371
P2162	2162	VEHICLE SPEED SEN A-B	_	2	×	В	EC-487
P2263	2263	TC SYSTEM-B1	_	2	×	В	EC-489

^{*1: 1}st trip DTC No. is the same as DTC No.

^{*2:} This number is prescribed by SAE J1979/ ISO 15031-5.

^{*3:} In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.

^{*4:} Refer to EC-145, "Description".

^{*5:} The troubleshooting for this DTC needs CONSULT.

^{*6:} SRT code will not be set if the self-diagnostic result is NG.

^{*7:} When the fail-safe operations for both self-diagnoses occur, the MIL illuminates.

^{*8:} This self-diagnosis is not for ECM power supply circuit, even though "ECM BACK UP/CIRCUIT" is displayed on CONSULT screen.

^{*9:} When the ECM is in the mode that displays SRT status, MIL may blink. For details, Refer to EC-70, "On Board Diagnosis Function".

Test Value and Test Limit

INFOID:0000000008274516

The following is the information specified in Service \$06 of SAE J1979/ISO 15031-5.

The test value is a parameter used to determine whether a system/circuit diagnostic test is OK or NG while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

These data (test value and test limit) are specified by On Board Monitor ID (OBDMID), Test ID (TID), Unit and Scaling ID and can be displayed on the GST screen.

The items of the test value and test limit will be displayed with GST screen which items are provided by the ECM. (e.g., if bank 2 is not applied on this vehicle, only the items of bank 1 are displayed)

EC

Α

D

Е

F

Н

K

L

M

Ν

Р

Item	OBD- MID	Self-diagnostic test item	DTC	Test value and Test limit (GST display) Unit and Scaling ID		Description
			P0131	83H	0BH	Minimum sensor output voltage for test cycle
			P0131	84H	0BH	Maximum sensor output voltage for test cycle
			P0130	85H	0BH	Minimum sensor output voltage for test cycle
			P0130	86H	0BH	Maximum sensor output voltage for test cycle
			P0133	87H	04H	Response rate: Response ratio (lean to rich)
			P0133	88H	04H	Response rate: Response ratio (rich to lean)
			P2A00	89H	84H	The amount of shift in air fuel ratio
		Air fuel ratio (A/F) sensor 1 (Bank 1)	P2A00	8AH	84H	The amount of shift in air fuel ratio
			P0130	8BH	0BH	Difference in sensor output voltage
	01H		P0133	8CH	83H	Response gain at the limited frequency
			P014C	8DH	04H	O2 sensor slow response - Rich to lean bank 1 sensor 1
			P014C	8EH	04H	O2 sensor slow response - Rich to lean bank 1 sensor 1
			P014D	8FH	84H	O2 sensor slow response - Lean to rich bank 1 sensor 1
HO2S			P014D	90H	84H	O2 sensor slow response - Lean to rich bank 1 sensor 1
			P015A	91H	01H	O2 sensor delayed response - Rich to lean bank 1 sensor 1
			P015A	92H	01H	O2 sensor delayed response - Rich to lean bank 1 sensor 1
			P015B	93H	01H	O2 sensor delayed response - Lean to rich bank 1 sensor 1
			P015B	94H	01H	O2 sensor delayed response - Lean to rich bank 1 sensor 1
		Heated oxygen sensor 2 (Bank 1)	P0138	07H	0CH	Minimum sensor output voltage for test cycle
	02H		P0137	08H	0CH	Maximum sensor output voltage for test cycle
			P0138	80H	0CH	Sensor output voltage
			P0139	81H	0CH	Difference in sensor output voltage
			P0139	82H	11H	Rear O2 sensor delay response diagnosis
	03H	Heated oxygen sensor 3 (Bank 1)	P0143	07H	0CH	Minimum sensor output voltage for test cycle
			P0144	08H	0CH	Maximum sensor output voltage for test cycle
			P0146	80H	0CH	Sensor output voltage
			P0145	81H	0CH	Difference in sensor output voltage

[MR16DDT]

				li	e and Test mit		
Item	OBD- MID	Self-diagnostic test item	DTC -	(GST	display)	Description	
	MID	-		TID	Unitand Scaling ID		
			P0151	83H	0BH	Minimum sensor output voltage for test cycle	
			P0151	84H	0BH	Maximum sensor output voltage for test cycle	
			P0150	85H	0BH	Minimum sensor output voltage for test cycle	
			P0150	86H	0BH	Maximum sensor output voltage for test cycle	
			P0153	87H	04H	Response rate: Response ratio (lean to rich)	
			P0153	88H	04H	Response rate: Response ratio (rich to lean)	
			P2A03	89H	84H	The amount of shift in air fuel ratio	
			P2A03	8AH	84H	The amount of shift in air fuel ratio	
		Air fuel ratio (A/F) sensor 1 (Bank 2)	P0150	8BH	0BH	Difference in sensor output voltage	
HO2S	05H		P0153	8CH	83H	Response gain at the limited frequency	
			P014E	8DH	04H	O2 sensor slow response - Rich to lean bank 2 sensor 1	
			P014E	8EH	04H	O2 sensor slow response - Rich to lean bank 2 sensor 1	
			P014F	8FH	84H	O2 sensor slow response - Lean to rich bank 2 sensor 1	
			P014F	90H	84H	O2 sensor slow response - Lean to rich bank 2 sensor 1	
			P015C	91H	01H	O2 sensor delayed response - Rich to lean bank 2 sensor 1	
			P015C	92H	01H	O2 sensor delayed response - Rich to lean bank 2 sensor 1	
			P015D	93H	01H	O2 sensor delayed response - Lean to rich bank 2 sensor 1	
			P015D	94H	01H	O2 sensor delayed response - Lean to rich bank 2 sensor 1	
		Heated oxygen sensor 2 (Bank 2)	P0158	07H	0CH	Minimum sensor output voltage for test cycle	
			P0157	08H	0CH	Maximum sensor output voltage for test cycle	
	06H		P0158	80H	0CH	Sensor output voltage	
			P0159	81H	0CH	Difference in sensor output voltage	
			P0159	82H	11H	Rear O2 sensor delay response diagnosis	
		Heated oxygen sensor 3 (Bank2)	P0163	07H	0CH	Minimum sensor output voltage for test cycle	
	07H		P0164	08H	0CH	Maximum sensor output voltage for test cycle	
			P0166	80H	0CH	Sensor output voltage	
			P0165	81H	0CH	Difference in sensor output voltage	

				Test valu	e and Test	
	OBD- MID	Self-diagnostic test item			mit display)	- Description
Item			DTC -	(631	Unitand	
				TID	Scaling ID	
		Three way catalyst function (Bank1)	P0420	80H	01H	O2 storage index
	6411		P0420	82H	01H	Switching time lag engine exhaust index value
	21H		P2423	83H	0CH	Difference in 3rd O2 sensor output voltage
CATA-			P2423	84H	84H	O2 storage index in HC trap catalyst
LYST			P0430	80H	01H	O2 storage index
	22H	Three way catalyst function	P0430	82H	01H	Switching time lag engine exhaust index value
	2211	(Bank2)	P2424	83H	0CH	Difference in 3rd O2 sensor output voltage
			P2424	84H	84H	O2 storage index in HC trap catalyst
	31H	EGR function	P0400	80H	96H	Low flow faults: EGR temp change rate (short term)
			P0400	81H	96H	Low flow faults: EGR temp change rate (long term)
EGR SYSTEM			P0400	82H	96H	Low flow faults: Difference between max EGR temp and EGR temp under idling condition
			P0400	83H	96H	Low flow faults: Max EGR temp
			P1402	84H	96H	High Flow Faults: EGR temp increase rate
	35H	VVT Monitor (Bank1)	P0011	80H	9DH	VTC intake function diagnosis (VTC alignment check diagnosis)
			P0014	81H	9DH	VTC exhaust function diagnosis (VTC alignment check diagnosis)
			P0011	82H	9DH	VTC intake function diagnosis (VTC drive failure diagnosis)
			P0014	83H	9DH	VTC exhaust function diagnosis (VTC drive failure diagnosis)
			P100A	84H	10H	VEL slow response diagnosis
VVT			P1090	85H	10H	VEL servo system diagnosis
SYSTEM		VVT Monitor (Bank2)	P0021	80H	9DH	VTC intake function diagnosis (VTC alignment check diagnosis)
	36H		P0024	81H	9DH	VTC exhaust function diagnosis (VTC alignment check diagnosis)
			P0021	82H	9DH	VTC intake function diagnosis (VTC drive failure diagnosis)
			P0024	83H	9DH	VTC exhaust function diagnosis (VTC drive failure diagnosis)
			P100B	84H	10H	VEL slow response diagnosis
			P1093	85H	10H	VEL servo system diagnosis

[MR16DDT]

				Test value and Test limit		
Item	OBD-	Self-diagnostic test item	DTC	(GST	display)	Description
	MID			TID	Unitand Scaling ID	2200,
	39H	EVAP control system leak (Cap Off)	P0455	80H	0CH	Difference in pressure sensor output voltage before and after pull down
	звн	EVAP control system leak (Small leak)	P0442	80H	05H	Leak area index (for more than 0.04 inch)
			P0456	80H	05H	Leak area index (for more than 0.02 inch)
EVAP SYSTEM	3СН	EVAP control system leak (Very small leak)	P0456	81H	FDH	Maximum internal pressure of EVAP system during monitoring
			P0456	82H	FDH	Internal pressure of EVAP system at the end of monitoring
	3DH	Purge flow system	P0441	83H	0CH	Difference in pressure sensor output voltage before and after vent control valve close
	41H	A/F sensor 1 heater (Bank 1)	Low Input: P0031 High Input: P0032	81H	0BH	Converted value of heater electric current to voltage
	42H	Heated oxygen sensor 2 heater (Bank 1)	Low Input: P0037 High Input: P0038	80H	0CH	Converted value of heater electric current to voltage
O2 SEN- SOR HEATER	43H	Heated oxygen sensor 3 heater (Bank 1)	P0043	80H	0CH	Converted value of heater electric current to voltage
	45H	A/F sensor 1 heater (Bank 2)	Low Input: P0051 High Input: P0052	81H	0BH	Converted value of heater electric current to voltage
	46H	Heated oxygen sensor 2 heater (Bank 2)	Low Input: P0057 High Input: P0058	80H	0CH	Converted value of heater electric current to voltage
	47H	Heated oxygen sensor 3 heater (Bank 2)	P0063	80H	0CH	Converted value of heater electric current to voltage
	71H	71H Secondary air system	P0411	80H	01H	Secondary air injection system incor- rect flow detected
			Bank1: P0491 Bank2: P0492	81H	01H	Secondary air injection system insufficient flow
			P2445	82H	01H	Secondary air injection system pump stuck off
SEC- OND- ARY AIR			P2448	83H	01H	Secondary air injection system high airflow
ANT AIR			Bank1: P2440 Bank2: P2442	84H	01H	Secondary air injection system switching valve stuck open
			P2440	85H	01H	Secondary air injection system switching valve stuck open
			P2444	86H	01H	Secondary air injection system pump stuck on
			P0171 or P0172	80H	2FH	Long term fuel trim
	81H	Fuel injection system function (Bank 1)	P0171 or P0172	81H	24H	The number of lambda control clamped
FUEL			P117A	82H	03H	Cylinder A/F imbalance monitoring
SYSTEM			P0174 or P0175	80H	2FH	Long term fuel trim
	82H	Fuel injection system function (Bank 2)	P0174 or P0175	81H	24H	The number of lambda control clamped
			P117B	82H	03H	Cylinder A/F imbalance monitoring

tt.	OBD-	Self-diagnostic test item	DTC -	Test value and Test limit (GST display)		December
Item	MID			TID	Unitand Scaling ID	Description
			P0301	80H	24H	Misfiring counter at 1000 revolution o the first cylinder
			P0302	81H	24H	Misfiring counter at 1000 revolution of the second cylinder
			P0303	82H	24H	Misfiring counter at 1000 revolution of the third cylinder
			P0304	83H	24H	Misfiring counter at 1000 revolution of the fourth cylinder
		Multiple cylinder misfires	P0305	84H	24H	Misfiring counter at 1000 revolution of the fifth cylinder
			P0306	85H	24H	Misfiring counter at 1000 revolution of the sixth cylinder
	A1H		P0307	86H	24H	Misfiring counter at 1000 revolution of the seventh cylinder
MOSIDS			P0308	87H	24H	Misfiring counter at 1000 revolution of the eighth cylinder
			P0300	88H	24H	Misfiring counter at 1000 revolution of the multiple cylinders
			P0301	89H	24H	Misfiring counter at 200 revolution of the first cylinder
MISFIRE			P0302	8AH	24H	Misfiring counter at 200 revolution of the second cylinder
			P0303	8BH	24H	Misfiring counter at 200 revolution of the third cylinder
			P0304	8CH	24H	Misfiring counter at 200 revolution of the fourth cylinder
			P0305	8DH	24H	Misfiring counter at 200 revolution of the fifth cylinder
			P0306	8EH	24H	Misfiring counter at 200 revolution of the sixth cylinder
			P0307	8FH	24H	Misfiring counter at 200 revolution of the seventh cylinder
			P0308	90H	24H	Misfiring counter at 200 revolution of the eighth cylinder
			P0300	91H	24H	Misfiring counter at 1000 revolution of the single cylinder
			P0300	92H	24H	Misfiring counter at 200 revolution of the single cylinder
			P0300	93H	24H	Misfiring counter at 200 revolution of the multiple cylinders

[MR16DDT]

	OBD- MID	Self-diagnostic test item	DTO	Test value and Test limit (GST display)		
Item			DTC	TID	Unitand Scaling ID	Description
	A2H	No. 1 cylinder misfire	P0301	овн	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles
			P0301	0CH	24H	Misfire counts for last/current driving cycles
	АЗН	No. 2 cylinder misfire	P0302	ОВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0302	0CH	24H	Misfire counts for last/current driving cycles
MISFIRE	A4H	No. 3 cylinder misfire	P0303	овн	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0303	0CH	24H	Misfire counts for last/current driving cycles
	A5H	No. 4 cylinder misfire	P0304	овн	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0304	0CH	24H	Misfire counts for last/current driving cycles
	A6H	No. 5 cylinder misfire	P0305	овн	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0305	0CH	24H	Misfire counts for last/current driving cycles
	A7H	No. 6 cylinder misfire	P0306	0BH	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0306	0CH	24H	Misfire counts for last/current driving cycles
	A8H	No. 7 cylinder misfire	P0307	овн	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0307	0CH	24H	Misfire counts for last/current driving cycles
	A9H	No. 8 cylinder misfire	P0308	0BH	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles
			P0308	0CH	24H	Misfire counts for last/current driving cycles

Н


< WIRING DIAGRAM > [MR16DDT]


WIRING DIAGRAM

ENGINE CONTROL SYSTEM


Wiring Diagram


For connector terminal arrangements, harness layouts, and alphabets in a (option abbreviation; if not

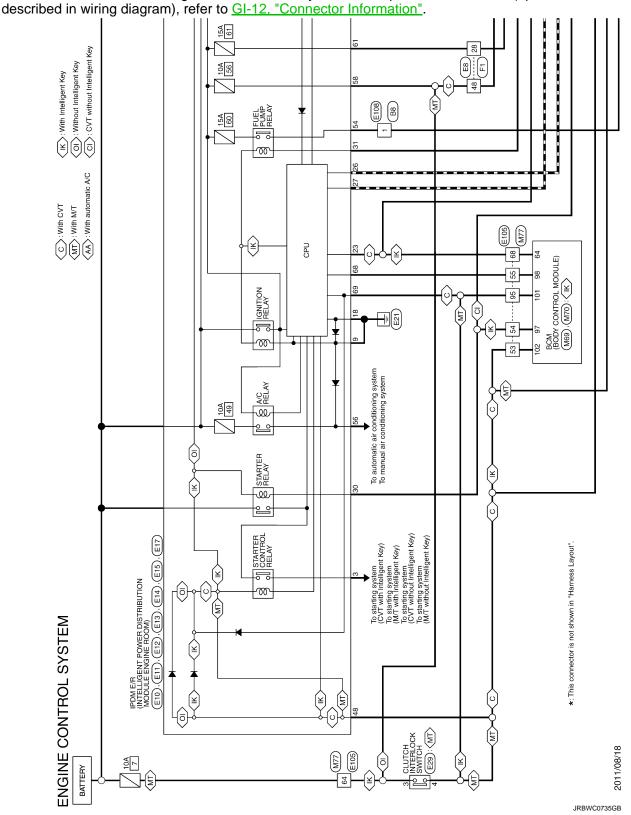

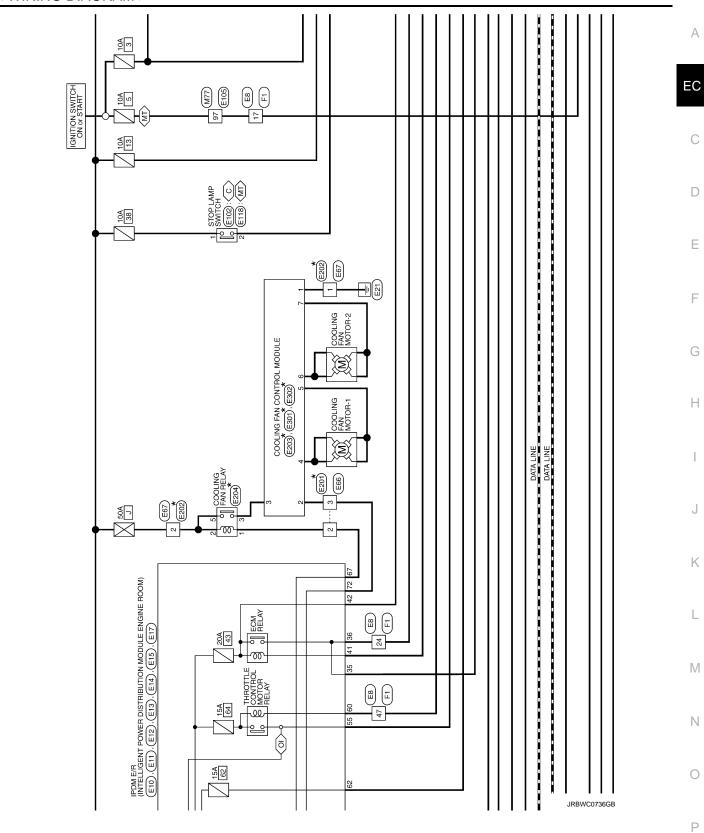


< WIRING DIAGRAM > [MR16DDT]

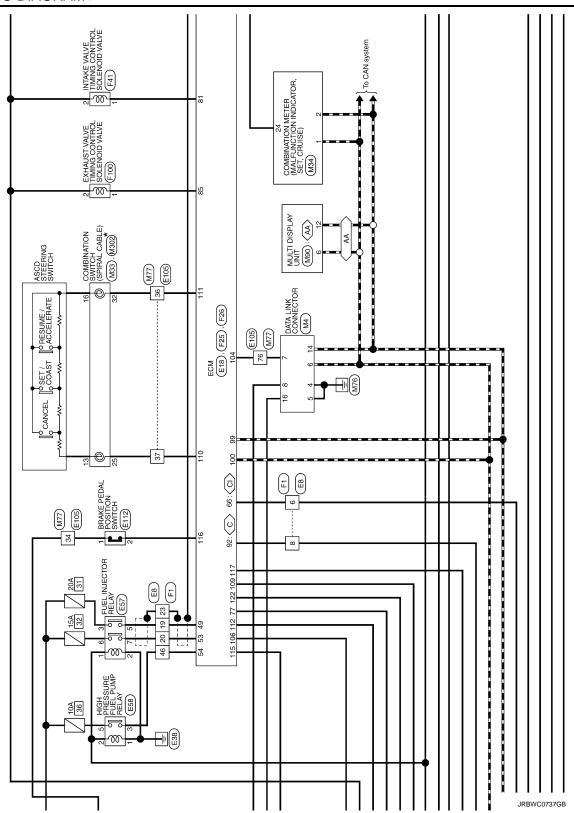


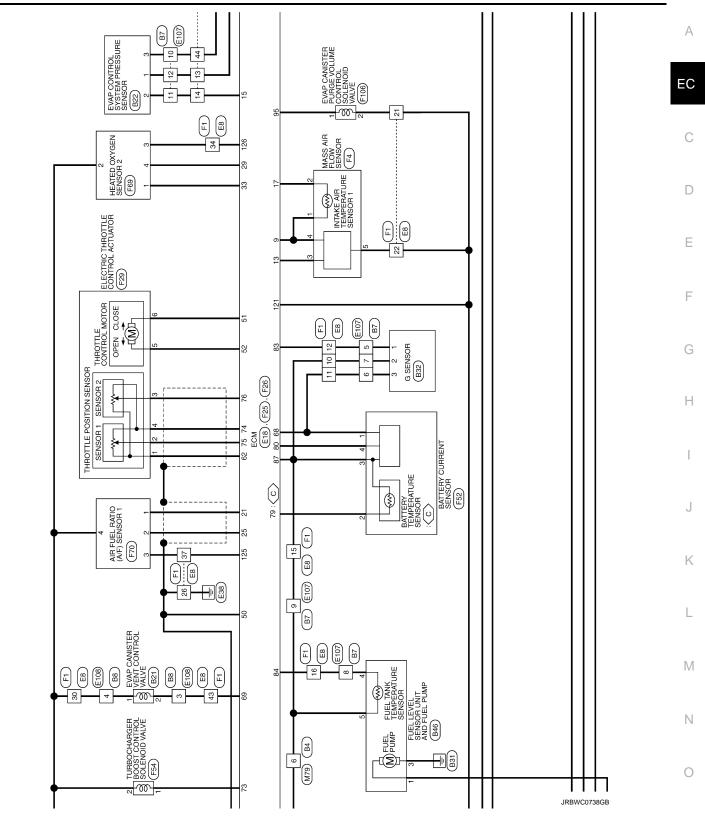

Ρ

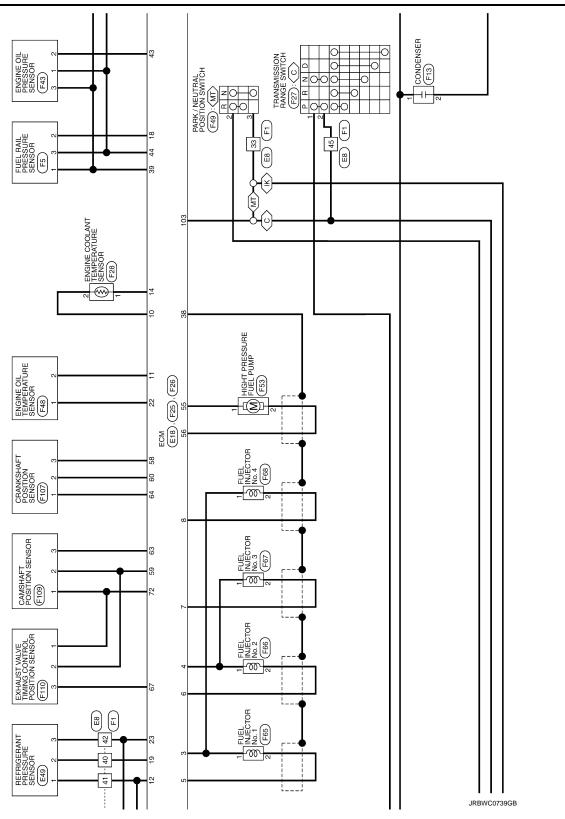

Α

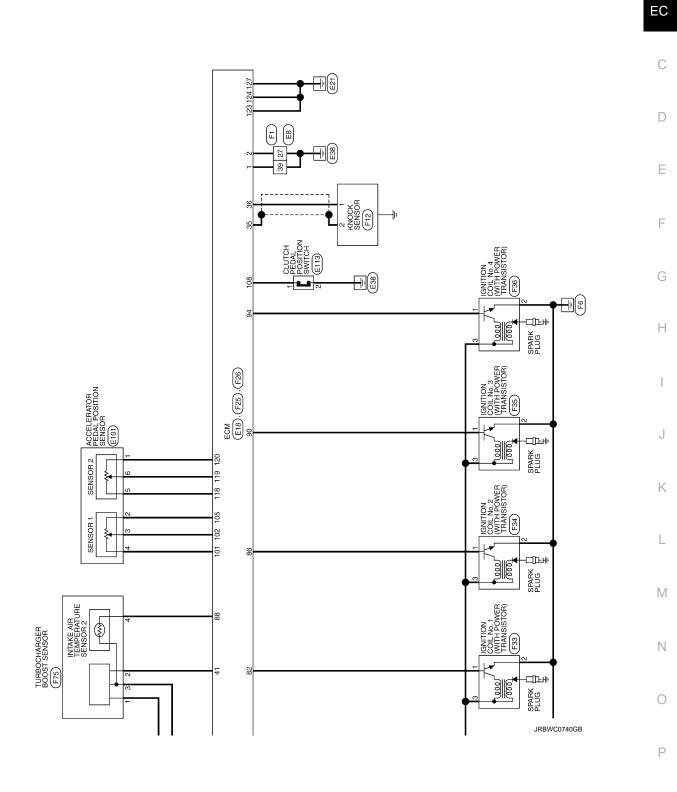


< BASIC INSPECTION > [MR16DDT]

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

OVERALL SEQUENCE

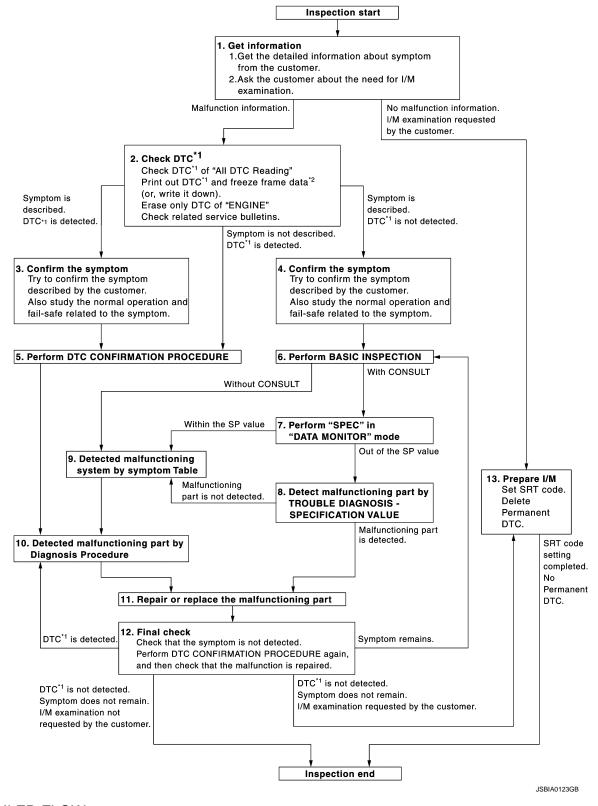

[MR16DDT] < BASIC INSPECTION >

1.GET INFORMATION FOR SYMPTOM

1. Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the "Diagnostic Work Sheet". (Refer to EC-123, "Diagnostic Work Sheet".)

Ask if the customer requests I/M examination.

Malfunction information, obtained>>GO TO 2.

No malfunction information, but a request for I/M examination>>GO TO 13.

2.CHECK DTC

- Check DTC.
- 2. Perform the following procedure if DTC is displayed.
- Record DTC and freeze frame data. (Print them out with CONSULT or GST.)
- Erase only DTC of "ENGINE".
 - (F) With CONSULT: "How to Erase DTC and 1st Trip DTC" in EC-73, "CONSULT Function".
- Without CONSULT: "How to Erase Self-diagnostic Results" in EC-70, "On Board Diagnosis Function".
- Study the relationship between the cause detected by DTC and the symptom described by the customer. (Symptom Matrix Chart is useful. Refer to EC-528, "Symptom Table".)
- Check related service bulletins for information.

Are any symptoms described and any DTCs detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.confirm the symptom

Try to confirm the symptom described by the customer (except MIL ON).

Also study the normal operation and fail-safe related to the symptom. Refer to EC-535, "Description" and EC-98, "Fail Safe".

Diagnosis Work Sheet is useful to verify the incident.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

f 4 . CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom. Refer to Refer to EC-528, "Symptom Table" and EC-98, "Fail Safe".

Diagnosis Work Sheet is useful to verify the incident.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

${f 5}$.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the displayed DTC, and then check that DTC is detected

If two or more DTCs are detected, refer to EC-100, "DTC Inspection Priority Chart" and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIR-MATION PROCEDURE.

Is DTC detected?

YES >> GO TO 10.

Revision: 2014 February

NO >> Check according to GI-43, "Intermittent Incident".

Α

EC

Е

Н

Ν

2013 JUKE

< BASIC INSPECTION > [MR16DDT]

6. PERFORM BASIC INSPECTION

Perform EC-125, "Work Procedure".

Do you have CONSULT?

YES >> GO TO 7. NO >> GO TO 9.

7.PERFORM SPEC IN DATA MONITOR MODE

(E)With CONSULT

Check that "MAS A/F SE-B1", "MAS A/F SE-B2", "B/FUEL SCHDL", "A/F ALPHA-B1" and "A/F ALPHA-B2" are within the SP value using "SPEC" in "DATA MONITOR" mode with CONSULT. Refer to <u>EC-151</u>, "Component Function Check".

Is the measurement value within the SP value?

YES >> GO TO 9. NO >> GO TO 8.

f 8.DETECT MALFUNCTIONING PART BY TROUBLE DIAGNOSIS - SPECIFICATION VALUE

Detect malfunctioning part according to EC-152, "Diagnosis Procedure".

Is a malfunctioning part detected?

YES >> GO TO 11. NO >> GO TO 9.

9.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to <u>EC-528</u>, "Symptom Table" based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptoms.

>> GO TO 10.

10. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

Inspect according to Diagnosis Procedure of the system.

NOTE:

The Diagnosis Procedure in EC section described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnosis Procedure. For details, refer to GI-46, "Circuit Inspection".

Is a malfunctioning part detected?

YES >> GO TO 11.

NO >> Monitor input data from related sensors or check voltage of related ECM terminals using CON-SULT. Refer to <u>EC-84</u>, "<u>Reference Value</u>".

11. REPAIR OR REPLACE THE MALFUNCTIONING PART

- 1. Repair or replace the malfunctioning part.
- 2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
- 3. Check DTC. If DTC is displayed, erase it. Refer to the following.
 - (F) With CONSULT: "How to Erase DTC and 1st Trip DTC" in EC-73, "CONSULT Function".
 - Without CONSULT: "How to Erase Self-diagnostic Results" in EC-70, "On Board Diagnosis Function".

>> GO TO 12.

12. FINAL CHECK

When DTC was detected in step 2, perform DTC CONFIRMATION PROCEDURE or Component Function Check again, and then check that the malfunction have been completely repaired.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 10.

YES-2 >> Symptom remains: GO TO 6.

< BASIC INSPECTION > [MR16DDT]

NO-1 >> No request for I/M examination from the customer: Before returning the vehicle to the customer, always erase unnecessary DTC in ECM and TCM ((E)With CONSULT: Refer to "How to Erase DTC and 1st Trip DTC" in EC-73, "CONSULT Function", (E)Without CONSULT: Refer to "How to Erase Self-diagnostic Results" in EC-70, "On <a href="Board Diagnosis Function"). If the completion of SRT is needed, drive vehicle under the specific driving pattern. Refer to EC-140, "SRT Set Driving Pattern".

NO-2 >> I/M examination, requested from the customer: GO TO 13.

13. PREPARE FOR I/M EXAMINATION

- Set SRT codes, Refer to EC-139, "Description".
- 2. Erase permanent DTCs. Refer to EC-145, "Description".

>> INSPECTION END

Diagnostic Work Sheet

DESCRIPTION

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make troubleshooting faster and more accurate.

In general, each customer feels differently about symptoms. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the WORKSHEET SAMPLE below in order to organize all the information for troubleshooting. Some conditions may cause the MIL to illuminate or blink, and DTC to be detected. Examples:

- Vehicle ran out of fuel, which caused the engine to misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere.

KEY POINTS

WHAT Vehicle & engine model
WHEN Date, Frequencies
WHERE..... Road conditions
HOW Operating conditions,
Weather conditions,
Symptoms

SEF907L

INFOID:0000000008274519

4.

EC

Е

D

0

Н

N /I

Ν

0

Р

< BASIC INSPECTION >

[MR16DDT]

WORKSHEET SAMPLE

Customer name MR/MS		Model & Year	VIN						
Engine #		Trans.	Mileage						
Incident Date		Manuf. Date	In Service Date						
Fuel and fuel filler cap		☐ Vehicle ran out of fuel causing misfire☐ Fuel filler cap was left off or incorrectly screwed on.							
Symptoms	☐ Startability	☐ Impossible to start ☐ No combust ☐ Partial combustion affected by th ☐ Partial combustion NOT affected ☐ Possible but hard to start ☐ Other	nrottle position I by throttle position						
	□ Idling	☐ No fast idle ☐ Unstable ☐ High idle ☐ Low idle ☐ Others []							
,,,,	☐ Driveability	☐ Stumble ☐ Surge ☐ Knock ☐ Intake backfire ☐ Exhaust backfi ☐ Others [Intake backfire Exhaust backfire						
	☐ Engine stall	☐ At the time of start ☐ While idling ☐ While accelerating ☐ While dece ☐ Just after stopping ☐ While loadi	lerating						
Incident occur	rrence	☐ Just after delivery ☐ Recently ☐ In the morning ☐ At night ☐ In the daytime							
Frequency		☐ All the time ☐ Under certain conditions ☐ Sometimes							
Weather cond	litions	☐ Not affected							
	Weather	☐ Fine ☐ Raining ☐ Snowing	☐ Others []						
	Temperature	☐ Hot ☐ Warm ☐ Cool ☐] Cold ☐ Humid °F						
		☐ Cold ☐ During warm-up ☐ /	After warm-up						
Engine conditions		Engine speed0 2,000	4,000 6,000 8,000 rpm						
Road conditions		☐ In town ☐ In suburbs ☐ Hig	hway						
Driving conditions		 Not affected At starting While idling While accelerating While decelerating While turning (RH/LH) 							
		Vehicle speed	30 40 50 60 MPH						
Malfunction in	dicator lamp	☐ Turned on ☐ Not turned on							

MTBL0017

Α

EC

D

Е


Н


BASIC INSPECTION

Work Procedure

1.INSPECTION START

- 1. Check service records for any recent repairs that may indicate a related malfunction, or a current need for scheduled maintenance.
- 2. Open engine hood and check the following:
- Harness connectors for improper connections
- Wiring harness for improper connections, pinches and cut
- Vacuum hoses for splits, kinks and improper connections
- Hoses and ducts for leaks
- Air cleaner clogging
- Gasket
- 3. Confirm that electrical or mechanical loads are not applied.
- Headlamp switch is OFF.
- Air conditioner switch is OFF.
- Rear window defogger switch is OFF.
- Steering wheel is in the straight-ahead position, etc.
- Start engine and warm it up until engine coolant temperature indicator points the middle of gauge. Ensure engine stays below 1,000 rpm.

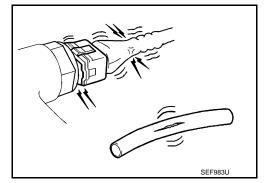


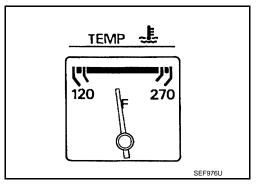

- 5. Run engine at about 2,000 rpm for about 2 minutes under no load.
- 6. Make sure that no DTC is displayed with CONSULT or GST.

Is any DTC detected?

YES >> GO TO 2. NO >> GO TO 3.

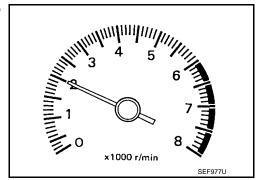

2. REPAIR OR REPLACE

Repair or replace components as necessary according to corresponding Diagnostic Procedure.

>> GO TO 3.

3.CHECK TARGET IDLE SPEED

1. Run engine at about 2,000 rpm for about 2 minutes under no load.

K

L

M

N

Р

BASIC INSPECTION

< BASIC INSPECTION > [MR16DDT]


2. Rev engine (2,000 to 3,000 rpm) two or three times under no load, then run engine at idle speed for about 1 minute.

Check idle speed.

For procedure, refer to <u>EC-536</u>, "Inspection". For specification, refer to <u>EC-543</u>, "Idle Speed".

Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 4.

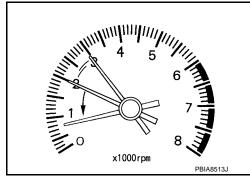

4. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

- Stop engine.
- 2. Perform EC-131, "Work Procedure".

>> GO TO 5.

5. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform EC-132, "Work Procedure".

>> GO TO 6.

6. PERFORM IDLE AIR VOLUME LEARNING

Perform EC-133, "Work Procedure".

Is Idle Air Volume Learning carried out successfully?

YES >> GO TO 7.

NO >> Follow the instruction of Idle Air Volume Learning. Then GO TO 4.

7. CHECK TARGET IDLE SPEED AGAIN

- 1. Start engine and warm it up to normal operating temperature.
- 2. Check idle speed.

For procedure, refer to EC-536, "Inspection".

For specification, refer to EC-543, "Idle Speed".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 8.

8.DETECT MALFUNCTIONING PART

Check the Following.

- Check camshaft position sensor (PHASE) and circuit. Refer to EC-316, "DTC Logic".
- Check crankshaft position sensor (POS) and circuit. Refer to <u>EC-313</u>, "DTC Logic".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace. Then GO TO 4

9. CHECK ECM FUNCTION

- 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is a rare case.)
- 2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to SEC-37, "ECM: Work Procedure" (with intelligent key system) or SEC-137, "ECM: Work Procedure" (without intelligent key system).

>> GO TO 4.

10. CHECK IGNITION TIMING

Run engine at idle.

BASIC INSPECTION

[MR16DDT] < BASIC INSPECTION >


Check ignition timing with a timing light. For procedure, refer to EC-537, "Inspection" For specification, refer to EC-543, "Ignition Timing".

1 : Timing indicator

Is the inspection result normal?

YES >> INSPECTION END.

NO >> GO TO 11.

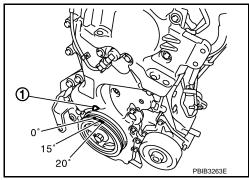

11. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

- Stop engine.
- 2. Perform EC-131, "Work Procedure".

>> GO TO 12.

12. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform EC-132, "Work Procedure".

>> GO TO 13.

13. PERFORM IDLE AIR VOLUME LEARNING

Perform EC-133, "Work Procedure".

Is Idle Air Volume Learning carried out successfully?

YES >> GO TO 14.

NO >> Follow the instruction of Idle Air Volume Learning. Then GO TO 4.

14. CHECK TARGET IDLE SPEED AGAIN

- Start engine and warm it up to normal operating temperature.
- 2. Check idle speed.

For procedure, refer to EC-536, "Inspection".

For specification, refer to EC-543, "Idle Speed".

Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 17.

15. CHECK IGNITION TIMING AGAIN

Run engine at idle.


Check ignition timing with a timing light. For procedure, refer to EC-537, "Inspection". For specification, refer to EC-543, "Ignition Timing".

1 : Timing indicator

Is the inspection result normal?

YES >> INSPECTION END.

NO >> GO TO 16.

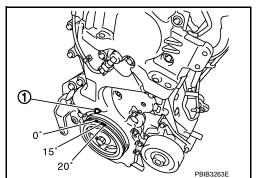

16. CHECK TIMING CHAIN INSTALLATION

Check timing chain installation. Refer to EM-72, "Exploded View".

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair the timing chain installation. Then GO TO 4.

EC-127

Α

EC

D

Е

M

N

BASIC INSPECTION

< BASIC INSPECTION > [MR16DDT]

17. DETECT MALFUNCTIONING PART

Check the following.

- Check camshaft position sensor (PHASE) and circuit. Refer to EC-316, "DTC Logic".
- Check crankshaft position sensor (POS) and circuit. Refer to <u>EC-313</u>, "<u>DTC Logic</u>".

Is the inspection result normal?

YES >> GO TO 18.

NO >> Repair or replace. Then GO TO 4

18. CHECK ECM FUNCTION

- 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is a rare case.)
- Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to <u>SEC-37</u>, "ECM: Work Procedure" (with intelligent key system) or <u>SEC-137</u>, "ECM: Work Procedure" (without intelligent key system).

>> GO TO 4.

ADDITIONAL SERVICE WHEN REPLACING ECM [MR16DDT] < BASIC INSPECTION > ADDITIONAL SERVICE WHEN REPLACING ECM Α Description INFOID:0000000008274521 When replacing ECM, the following procedure must be performed. (For details, refer to EC-129, "Work Proce-EC dure".) PROGRAMMING OPERATION NOTE: After replacing with a blank ECM, programming is required to write ECM information. Be sure to follow the procedure to perform the programming. Work Procedure D INFOID:0000000008274522 1. CHECK ECM PART NUMBER Е Check ECM part number to see whether it is blank ECM or not. NOTE: Part number of blank ECM is 23703 - xxxxx. · Check the part number when ordering ECM or with delivered package label. F Is the ECM a blank ECM? YES >> GO TO 2. NO >> GO TO 4. 2.SAVE ECM PART NUMBER Read out the part number from the old ECM and save the number, following the programming instructions. Refer to "CONSULT Operation Manual". NOTE: The ECM part number is saved in CONSULT. • Even when ECM part number is not saved in CONSULT, go to 3. >> GO TO 3. 3.PERFORM ECM PROGRAMMING After replacing ECM, perform the ECM programming. Refer to "CONSULT Operation Manual". NOTE: Refer to EC-542, "Removal and Installation" for replacement of ECM. • During programming, maintain the following conditions: - Ignition switch: ON - Electric load: OFF - Brake pedal: Not depressed Battery voltage: 12 - 13.5 V (Be sure to check the value of battery voltage by selecting "BATTERY VOLT" in "Data monitor" of CONSULT.) M >> GO TO 5. 4.REPLACE ECM Ν Replace ECM. Refer to EC-542, "Removal and Installation". >> GO TO 5.

 ${f 5.}$ PERFORM INITIALIZATION OF NVIS (NATS) SYSTEM AND REGISTRATION OF ALL NVIS (NATS) IGNI-TION KEY IDS

Р

Refer to SEC-37, "ECM: Work Procedure" (with intelligent key system) or SEC-137, "ECM: Work Procedure" (without intelligent key system).

>> GO TO 6.

6.PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

EC-129 Revision: 2014 February 2013 JUKE

ADDITIONAL SERVICE WHEN REPLACING ECM

< BASIC INSPECTION > [MR16DDT]

Refer to EC-131, "Work Procedure".

>> GO TO 7.

7. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-132, "Work Procedure".

>> GO TO 8.

8. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-133, "Work Procedure".

>> GO TO 9.

9. PERFORM G SENSOR CALIBRATION

Refer to EC-135, "Work Procedure".

>> END

ACCELERATOR PEDAL RELEASED POSITION LEARNING

< BASIC INSPECTION > [MR16DDT]

ACCELERATOR PEDAL RELEASED POSITION LEARNING

Description INFOID:0000000008274523

Accelerator Pedal Released Position Learning is a function of ECM to learn the fully released position of the accelerator pedal by monitoring the accelerator pedal position sensor output signal. It must be performed each time harness connector of accelerator pedal position sensor or ECM is disconnected.

EC

INFOID:0000000008274524

Α

Work Procedure

1.START

- 1. Make sure that accelerator pedal is fully released.
- 2. Turn ignition switch ON and wait at least 2 seconds.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON and wait at least 2 seconds.
- 5. Turn ignition switch OFF and wait at least 10 seconds.

>> END

Е

D

F

Н

J

K

M

L

Ν

Р

THROTTLE VALVE CLOSED POSITION LEARNING

< BASIC INSPECTION > [MR16DDT]

THROTTLE VALVE CLOSED POSITION LEARNING

Description INFOID:000000008274525

Throttle Valve Closed Position Learning is a function of ECM to learn the fully closed position of the throttle valve by monitoring the throttle position sensor output signal. It must be performed each time the harness connector of the electric throttle control actuator or ECM is disconnected or electric throttle control actuator inside is cleaned.

Work Procedure

1.START

(P)With CONSULT

- 1. Turn ignition switch ON.
- Select "CLSD THL POS LEARN" in "WORK SUPPORT" mode of "ENGINE" using CONSULT.
- 3. Follow the instructions on the CONSULT display.
- 4. Turn ignition switch OFF and wait at least 10 seconds.

 Check that throttle valve moves during the above 10 seconds by confirming the operating sound.

♥Without CONSULT

1. Start the engine.

NOTE:

Engine coolant temperature is 25°C (77°F) or less before engine starts.

2. Warm up the engine.

NOTE:

Raise engine coolant temperature until it reaches 65°C (149°F) or more.

3. Turn ignition switch OFF and wait at least 10 seconds.

Check that throttle valve moves during the above 10 seconds by confirming the operating sound.

>> END

IDLE AIR VOLUME LEARNING

[MR16DDT] < BASIC INSPECTION >

IDLE AIR VOLUME LEARNING

Description INFOID:0000000008274527

Idle Air Volume Learning is a function of ECM to learn the idle air volume that keeps each engine idle speed within the specific range. It must be performed under any of the following conditions:

- Each time electric throttle control actuator or ECM is replaced.
- Idle speed or ignition timing is out of specification.

Work Procedure

1.PRECONDITIONING

Make sure that all of the following conditions are satisfied.

Learning will be cancelled if any of the following conditions are missed for even a moment.

- Battery voltage: More than 12.9 V (At idle)
- Engine coolant temperature: 70 100°C (158 212°F)
- Selector lever : P or N (CVT), Neutral (M/T)
- Electric load switch: OFF

(Air conditioner, headlamp, rear window defogger)

On vehicles equipped with daytime running light systems, set lighting switch to the 1st position to light only small lamps.

- Steering wheel: Neutral (Straight-ahead position)
- Vehicle speed: Stopped
- Transmission: Warmed-up
- CVT models
- (A)With CONSULT: Drive vehicle until "ATF TENP SEN" in "DATA MONITOR" mode of "CVT" system indicates less than 0.9 V.
- \(\oldsymbol{\text{W}} \) Without CONSULT: Drive vehicle for 10 minutes.
- M/T models
- Drive vehicle for 10 minutes.

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 3.

2.IDLE AIR VOLUME LEARNING

(P)With CONSULT

- Perform Accelerator Pedal Released Position Learning. Refer to EC-131, "Work Procedure".
- Perform Throttle Valve Closed Position Learning. Refer to EC-132, "Work Procedure".
- 3. Start engine and warm it up to normal operating temperature.
- Select "IDLE AIR VOL LEARN" in "WORK SUPPORT" mode of "ENGINE".
- Touch "START" and wait 20 seconds.

Is "CMPLT" displayed on CONSULT screen?

YES >> GO TO 4.

NO >> GO TO 5.

3.IDLE AIR VOLUME LEARNING

- It is better to count the time accurately with a clock.
- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.
- 1. Perform Accelerator Pedal Released Position Learning. Refer to EC-131, "Work Procedure".
- Perform Throttle Valve Closed Position Learning. Refer to EC-132, "Work Procedure".
- 3. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
- Repeat the following procedure quickly five times within 5 seconds.
- Fully depress the accelerator pedal.
- Fully release the accelerator pedal.

EC

Α

INFOID:0000000008274528

D

Ν


Р

IDLE AIR VOLUME LEARNING

< BASIC INSPECTION > [MR16DDT]

Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 20 seconds until the MIL stops blinking and turned ON.

- 8. Fully release the accelerator pedal within 3 seconds after the MIL turned ON.
- 9. Start engine and let it idle.
- 10. Wait 20 seconds.

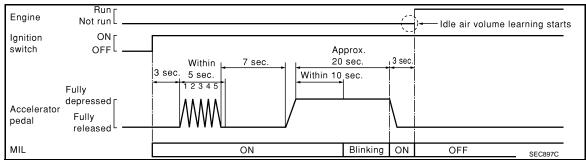

>> GO TO 4

4. CHECK IDLE SPEED AND IGNITION TIMING

Rev up the engine two or three times and make sure that idle speed and ignition timing are within the specifications. For specification, refer to <u>EC-543</u>, "Idle Speed" and <u>EC-543</u>, "Ignition Timing".

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following

- · Check that throttle valve is fully closed.
- Check PCV valve operation.
- Check that downstream of throttle valve is free from air leakage.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning part.

O. DETECT MALFUNCTIONING PART

Engine component parts and their installation condition are questionable. Check and eliminate the cause of the incident.

It is useful to perform "TROUBLE DIAGNOSIS - SPECIFICATION VALUE". Refer to <u>EC-151</u>, "<u>Description</u>". If any of the following conditions occur after the engine has started, eliminate the cause of the incident and perform Idle Air Volume Learning all over again:

- Engine stalls.
- · Erroneous idle.

>> INSPECTION END

G SENSOR CALIBRATION

[MR16DDT] < BASIC INSPECTION >

G SENSOR CALIBRATION

Description INFOID:0000000008274529

ECM stores calibration data (inherent characteristic value) of G sensor to provide accurate control. Therefore, it is required to perform calibration of G sensor after the following work is performed.

- Removal/installation or replacement of G sensor
- Replacement of ECM

Work Procedure INFOID:0000000008274530

1. PREPARATION BEFORE CALIBRATION PROCEDURE

- Park the vehicle on a level surface.
- Adjust air pressure of all tires to the specified pressure. WT-51, "Tire Air Pressure".

>> GO TO 2.

2.PERFORM CALIBRATION

(P)With CONSULT

Turn ignition switch ON.

CAUTION:

Never start engine.

- Select "Work Support" mode in "ENGINE.
- Select "G SENSOR CALIBRATION".
- Touch "Start".

CAUTION:

Never swing the vehicle during "G sensor calibration".

Is "COMPLETED" displayed?

YES >> END

NO >> Perform steps 1 and 2 again.

EC-135 Revision: 2014 February 2013 JUKE

EC

Α

D

Е

Н

K

L

M

Ν

Р

MIXTURE RATIO SELF-LEARNING VALUE CLEAR

< BASIC INSPECTION > [MR16DDT]

MIXTURE RATIO SELF-LEARNING VALUE CLEAR

Description INFOID:000000008274531

This describes how to erase the mixture ratio self-learning value. For the actual procedure, follow the instructions in "Diagnosis Procedure".

Work Procedure

1.START

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode of "ENGINE" using CONSULT.
- 3. Clear mixture ratio self-learning value by touching "CLEAR".

@With GST

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF.
- 3. Disconnect mass air flow sensor harness connector.
- 4. Restart engine and let it idle for at least 5 seconds.
- 5. Stop engine and reconnect mass air flow sensor harness connector.
- 6. Select Service \$03 with GST. Make sure DTC P0102 is detected.
- 7. Select Service \$04 with GST to erase the DTC P0102.

>> END

FUEL PRESSURE

< BASIC INSPECTION > [MR16DDT]

FUEL PRESSURE

Work Procedure

FUEL PRESSURE RELEASE

1. FUEL PRESSURE RELEASE

(P)With CONSULT

- 1. Turn ignition switch ON.
- 2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode of "ENGINE" using CONSULT.
- Start engine.
- 4. After engine stalls, crank it two or three times to release all fuel pressure.
- 5. Turn ignition switch OFF.

- 1. Remove fuel pump fuse located in IPDM E/R.
- 2. Start engine.
- 3. After engine stalls, crank it two or three times to release all fuel pressure.
- 4. Turn ignition switch OFF.
- 5. Reinstall fuel pump fuse after servicing fuel system.

>> END

FUEL PRESSURE CHECK

CAUTION:

- Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.
- The fuel hose connection method used when taking fuel pressure check must not be used for other purposes.
- Be careful not to scratch or put debris around connection area when servicing, so that the quick connector maintains sealability with O-rings inside.
- Do not perform fuel pressure check with electrical systems operating (i.e. lights, rear defogger, A/C, etc.) Fuel pressure gauge may indicate false readings due to varying engine load and changes in manifold vacuum.

NOTE:

Prepare pans or saucers under the disconnected fuel line because the fuel may spill out. The fuel pressure cannot be completely released because F15 models do not have fuel return system.

1.FUEL PRESSURE CHECK

- Release fuel pressure to zero.
- Prepare fuel hose for fuel pressure check (B) and fuel tube adapter [SST: KV10120000] (D), then connect fuel pressure gauge (A).

: To high pressure fuel pump.

C : Clamp

CAUTION:

- Use suitable fuel hose for fuel pressure check (genuine NISSAN fuel hose without quick connector).
- To avoid unnecessary force or tension to hose, use moderately long fuel hose for fuel pressure check.
- · Do not use the fuel hose for checking fuel pressure with damage or cracks on it.
- Use Pressure Gauge to check fuel pressure.
- 3. Remove fuel hose.

CAUTION:

Do not twist or kink fuel hose because it is plastic hose.

PBIB2982E

С

Α

EC

D

Е

F

. .

|

J

K

L

M

Ν

С

Р

Revision: 2014 February EC-137 2013 JUKE

FUEL PRESSURE

< BASIC INSPECTION > [MR16DDT]

4. Connect fuel hose for fuel pressure check (1) to high pressure fuel pump with clamp (2) as shown in the figure.

CAUTION:

- Wipe off oil or dirt from hose insertion part using cloth moistened with gasoline.
- Apply proper amount of gasoline between top of the high pressure fuel pump (3) and spool (4).
- Insert fuel hose for fuel pressure check until it touches the spool on high pressure fuel pump.
- Use NISSAN genuine hose clamp (part number: 16439 N4710 or 16439 40U00).
- When reconnecting fuel line, always use new clamps.
- Use a torque driver to tighten clamps.


Tightening torque: 1 - 1.5 N·m (0.1 - 0.15 kg-m, 9 - 13 in-lb)

- Install hose clamp to the position within 1 2 mm (0.04 0.08 in).
- Make sure that clamp screw does not contact adjacent parts.
- After connecting fuel hose for fuel pressure check, pull the hose with a force of approximately 98
 N (10 kg, 22 lb) to confirm fuel tube does not come off.
- 5. Connect fuel tube adapter to quick connector.
 - A : Fuel pressure gauge
 - B : Fuel hose for fuel pressure check
- Turn ignition switch ON and check for fuel leakage.
- Start engine and check for fuel leakage.
- 8. Read the indication of fuel pressure gauge.

CAUTION:

- Do not perform fuel pressure check with system operating. Fuel pressure gauge may indicate false readings.
- During fuel pressure check, confirm for fuel leakage from fuel connection every 3 minutes.



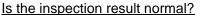

YES >> INSPECTION END

NO >> GO TO 2.


2.check fuel hoses


- 1. Check the following.
- Fuel hoses for clogging
- Fuel filter for clogging
- Low pressure fuel pump
- Fuel pressure regulator for clogging

Is the inspection result normal?

YES >> Replace fuel pressure regulator.

NO >> Repair or replace error-detected parts.

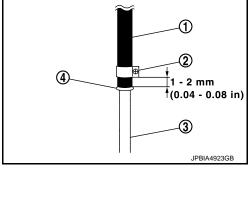

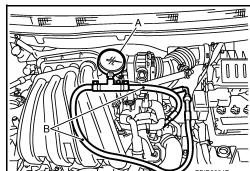

HOW TO SET SRT CODE

< BASIC INSPECTION > [MR16DDT]

HOW TO SET SRT CODE

Description INFOID:0000000008274534

OUTLINE

In order to set all SRTs, the self-diagnoses as in the "SRT ITEM" table must have been performed at least once. Each diagnosis may require actual driving for a long period of time under various conditions.

SRT ITEM

The table below shows required self-diagnostic items to set the SRT to "CMPLT".

SRT item ^{*1} (CONSULT indication)	Performance Priority*2	Required self-diagnostic items to set the SRT to "CMPLT"	Corresponding DTC No.
CATALYST	1	Three way catalyst function	P0420
EVAP SYSTEM	1	EVAP control system purge flow monitoring	P0441
	1	EVAP control system	P0456
HO2S	1	Air fuel ratio (A/F) sensor 1	P0133
		Heated oxygen sensor 2	P0137
		Heated oxygen sensor 2	P0138
		Heated oxygen sensor 2	P0139
EGR/VVT SYSTEM	2	Intake value timing control function	P0011

^{*1:} Though displayed on the CONSULT screen, "HO2S HTR" is not SRT item.

SRT SERVICE PROCEDURE

Н

Α

EC

C

D

Е

F

Κ

L

M


Ν

0

Р

^{*2:} If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure), one by one based on the priority for models with CONSULT.

If a vehicle has failed the state emissions inspection due to one or more SRT items indicating "INCMP", review the flowchart diagnostic sequence, referring to the following flowchart.

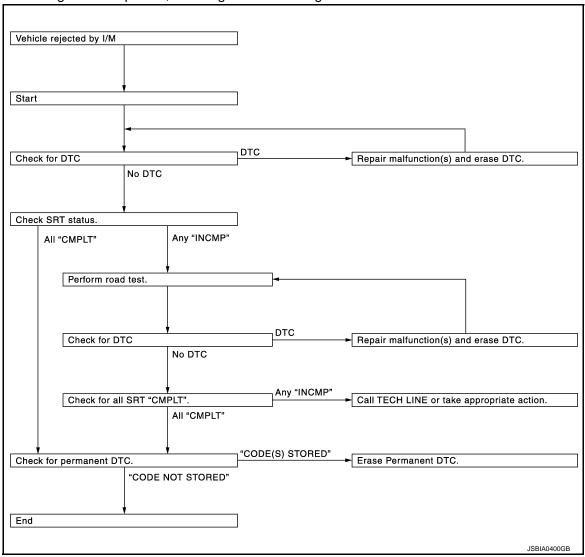


SRT Set Driving Pattern

INFOID:0000000008274535

CAUTION:

Always drive the vehicle in safe manner according to traffic conditions and obey all traffic laws.

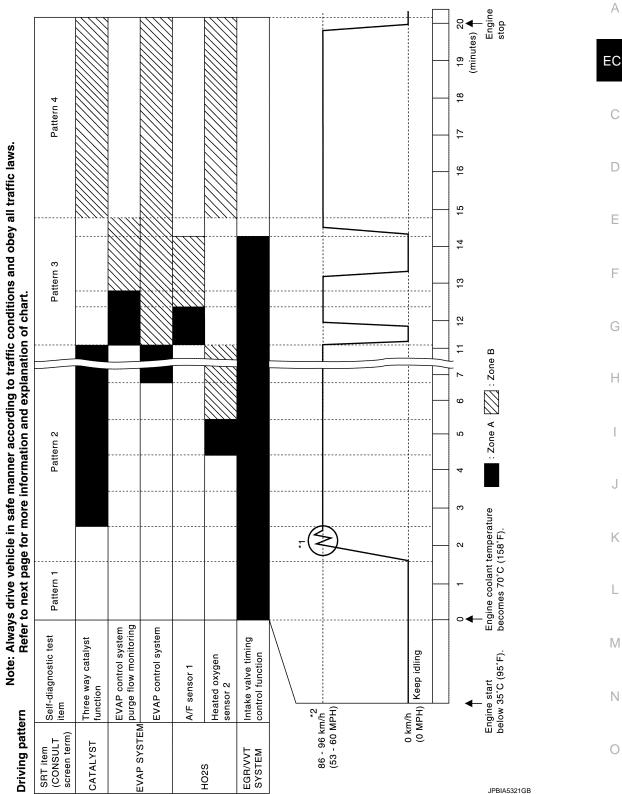

^{*1:} Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.

^{*2:} Checking the vehicle speed with GST is advised.

[•] The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.

^{• &}quot;Zone A" is the fastest time where required for the diagnosis under normal conditions*. If the diagnosis is not completed within "Zone A", the diagnosis can still be performed within "Zone B".

< BASIC INSPECTION > [MR16DDT]

- *: Normal conditions
- Sea level
- Flat road
- Ambient air temperature: 20 30°C (68 86°F)

NOTE:

Diagnosis is performed as quickly as possible under normal conditions. However, under other conditions, diagnosis may also be performed. [For example: ambient air temperature other than $20 - 30^{\circ}$ C ($68 - 86^{\circ}$ F)]

Work Procedure

1. CHECK DTC

Check DTC.

Is any DTC detected?

YES >> Repair malfunction(s) and erase DTC. Refer to EC-102, "DTC Index".

NO >> GO TO 2.

2.CHECK SRT STATUS

(P)With CONSULT

Select "SRT STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT.

®Without CONSULT

Perform "SRT status" mode with EC-70, "On Board Diagnosis Function".

⊕With GST

Select Service \$01 with GST.

Is SRT code(s) set?

YES >> GO TO 11.

NO-1 >> With CONSULT: GO TO 3.

NO-2 >> Without CONSULT: GO TO 4.

3.DTC CONFIRMATION PROCEDURE

- I. Select "SRT WORK SUPPORT" in "DTC & SRT CONFIRMATION" mode with CONSULT.
- For SRT(s) that is not set, perform the corresponding "DTC CONFIRMATION PROCEDURE" according to the "Performance Priority" in the "SRT ITEM" table. Refer to <u>EC-139</u>, "<u>Description</u>".
- Check DTC.

Is any DTC detected?

YES >> Repair malfunction(s) and erase DTC. Refer to <u>EC-102</u>, "DTC Index".

NO >> GO TO 10.

4.PERFORM ROAD TEST

- Check the "Performance Priority" in the "SRT ITEM" table. Refer to EC-139, "Description".
- Perform the most efficient SRT set driving pattern to set the SRT properly. Refer to <u>EC-140, "SRT Set Driving Pattern"</u>.

In order to set all SRTs, the SRT set driving pattern must be performed at least once.

>> GO TO 5.

5. PATTERN 1

- Check the vehicle condition;
- Engine coolant temperature is –10 to 35°C (14 to 95°F).
- Fuel tank temperature is more than 0°C (32°F).
- 2. Start the engine.
- 3. Keep engine idling until the engine coolant temperature is greater than 70°C (158°F)

NOTE:

ECM terminal voltage is follows;

- Engine coolant temperature
- -10 to 35°C (14 to 95°F): 3.0 4.3 V
- 70°(158°F): Less than 4.1 V
- Fuel tank temperature: Less than 1.4 V

Refer to EC-84, "Reference Value".

>> GO TO 6.

6. PATTERN 2

1. Drive the vehicle. And depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds.

2. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again

NOTE:


- Checking the vehicle speed with GST is advised.
- When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted.
 In this case, the time required for diagnosis may be extended.

>> GO TO 7.

7. PATTERN 3

- Operate vehicle following the driving pattern shown in the figure.
- Release the accelerator pedal during deceleration of vehicle speed from 90 km/h (56 MPH) to 0 km/h (0 MPH).


>> GO TO 8.

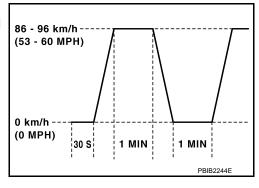

8. PATTERN 4

- Operate vehicle following the driving pattern shown in the figure.
- Drive the vehicle in a proper gear at 60 km/h (38 MPH) and maintain the speed.
- Release the accelerator pedal fully at least 5 seconds.
- Repeat the above two steps at least 5 times.

>> GO TO 9.

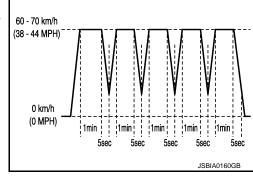

9. PATTERN 5

- The accelerator pedal must be held very steady during steady-state driving.
- If the accelerator pedal is moved, the test must be conducted again.

>> GO TO 10.

10. CHECK SRT STATUS

With CONSULT

Select "SRT STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT.

Perform "SRT status" mode with EC-70. "On Board Diagnosis Function".

Select Service \$01 with GST.

Is SRT(s) set?

YES >> GO TO 11.

NO >> Call TECH LINE or take appropriate action.

11. CHECK PERMANENT DTC

EC

Α

Е

D

G

Н

I

J

Κ

L

M

. .

Ν

0

Р

Ρ

HOW TO SET SRT CODE

< BASIC INSPECTION > [MR16DDT]

NOTE:

Permanent DTC cannot be checked with a tool other than CONSULT or GST.

(I) With CONSULT

Select "SRT STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT.

With GST

Select Service \$0A with GST.

Is permanent DTC(s) detected?

YES >> Proceed to EC-151, "Description".

NO >> END

< BASIC INSPECTION > [MR16DDT]


HOW TO ERASE PERMANENT DTC

Description INFOID:000000008274537

OUTLINE

When a DTC is stored in ECM

When a DTC is stored in ECM and MIL is ON, a permanent DTC is erased with MIL shutoff if the same malfunction is not detected after performing the driving pattern for MIL shutoff three times in a raw.

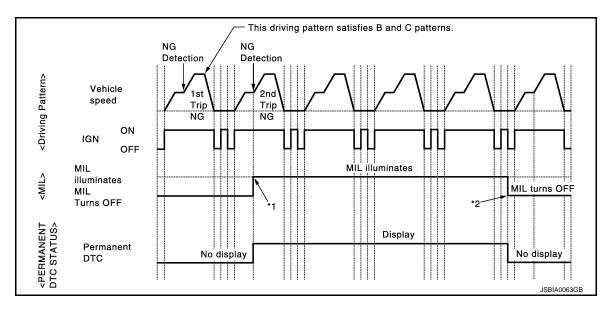

^{*1:} When the same malfunction is detected in two consecutive trips, MIL will illuminate.

 MIL will turn off after vehicle is driven 3 times (driving pattern B) without any malfunctions.

When a DTC is not stored in ECM

The erasing method depends on a permanent DTC stored in ECM. Refer to the following table.

			×: Appl	icable —: Not applicable
Group*	Perform "DTC CONFIRMATION PROCE-	Driving pattern		Reference
Group	DURE" for applicable DTCs.	В	D	Kelerence
А	×	_	_	EC-146
В	_	×	×	EC-148

^{*:} For group, refer to EC-102, "DTC Index".

PERMANENT DTC ITEM

For permanent DTC items, MIL turns ON. Refer to EC-102, "DTC Index".

EC

Α

D

Е

F

G

Н

K


L

M

Ν


 \cap

PERMANENT DTC SERVICE PROCEDURE

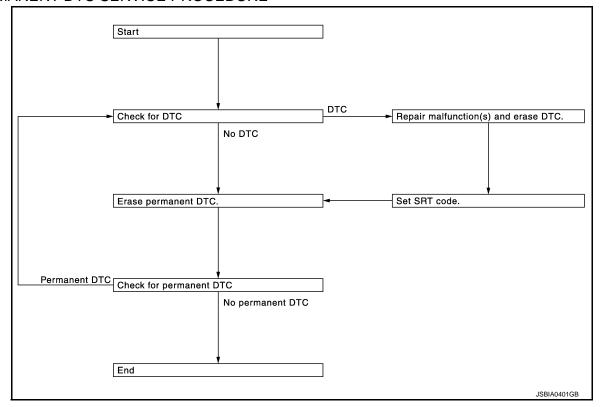

Work Procedure (Group A)

INFOID:0000000008274538

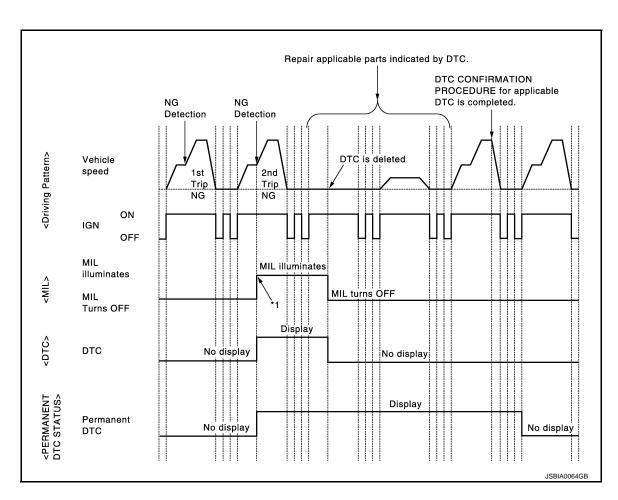


HOW TO ERASE PERMANENT DTC

< BASIC INSPECTION > [MR16DDT]

*1: When the same malfunction is de-Α tected in two consecutive trips, MIL will illuminate. 1.CHECK DTC EC Check DTC. Is any DTC detected? YES >> Repair malfunction(s) and erase DTC. Refer to EC-70, "On Board Diagnosis Function", EC-73, "CONSULT Function". NO >> GO TO 2. D 2.CHECK PERMANENT DTC (P)With CONSULT Е Turn ignition switch OFF and wait at least 10 seconds. 2. Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. F Select "PERMANENT DTC STATUS" mode with CONSULT. @With GST 1. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. 3. Turn ignition switch OFF and wait at least 10 seconds. 4. Turn ignition switch ON. Select Service \$0A with GST. Н Is any permanent DTC detected? YES >> GO TO 3. NO >> END 3.perform dtc confirmation procedure Perform "DTC CONFIRMATION PROCEDURE" for DTCs which are the same as permanent DTCs stored in ECM. Refer to EC-102, "DTC Index". >> GO TO 4. K 4. CHECK PERMANENT DTC (P)With CONSULT Ĭ. L Turn ignition switch OFF and wait at least 10 seconds. 2. Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds. 3. 4. Turn ignition switch ON. Select "PERMANENT DTC STATUS" mode with CONSULT. 1. Turn ignition switch OFF and wait at least 10 seconds. N Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. Select Service \$0A with GST. Is any permanent DTC detected? YES >> GO TO 1. NO Р >> END

Work Procedure (Group B)

INFOID:0000000008274539

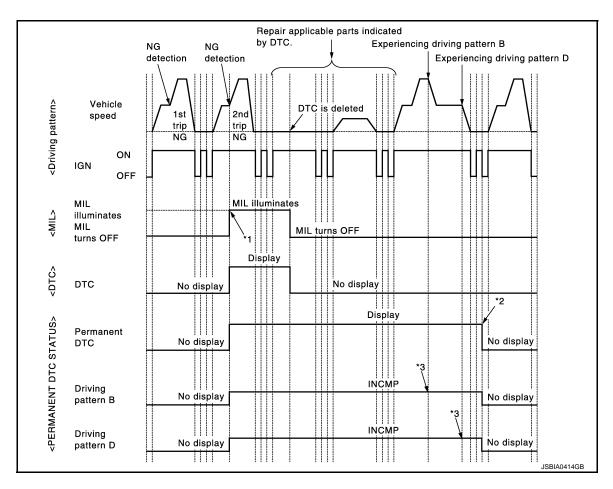

- *1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- *2: After experiencing driving pattern B and D, permanent DTC is erased.
- Indication does not change unless the ignition switch is turned from ON to OFF twice even after experiencing driving pattern B or D.

NOTE:

Drive the vehicle according to only driving patterns indicating "INCMP" in driving patterns B and D on the "PERMANENT DTC STATUS" screen.

1. CHECK DTC

Check DTC.

Is any DTC detected?

YES >> Repair malfunction(s) and erase DTC. Refer to <u>EC-70, "On Board Diagnosis Function"</u>, <u>EC-73, "CONSULT Function"</u>.

NO >> GO TO 2.

2. CHECK PERMANENT DTC

(P)With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select "PERMANENT DTC STATUS" mode with CONSULT.

With GST

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

HOW TO ERASE PERMANENT DTC

[MR16DDT] < BASIC INSPECTION > Turn ignition switch ON. Select Service \$0A with GST. Α Is any permanent DTC detected? YES >> GO TO 3. NO >> END EC 3.drive driving pattern b **CAUTION:** Always drive at a safe speed. Never erase self-diagnosis results. If self-diagnosis results are erased during the trip of driving pattern B or D, the counter of driving pattern B and D is reset. D (P)With CONSULT Start engine and warm it up to normal operating temperature. Use "PERMANENT DTC WORK SUPPORT" mode with CONSULT to drive the vehicle according to driving pattern B. Refer to EC-73, "CONSULT Function", EC-67, "DIAGNOSIS DESCRIPTION: Driving Pattern". **With GST** F 1. Start engine and warm it up to normal operating temperature. 2. Drive the vehicle according to driving pattern B. Refer to EC-67, "DIAGNOSIS DESCRIPTION: Driving Pattern". >> GO TO 4. 4. CHECK PERMANENT DTC (II) With CONSULT 1. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. Select "PERMANENT DTC STATUS" mode with CONSULT. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. 2. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. Select Service \$0A with GST. Is any permanent DTC detected? YFS >> GO TO 5. NO >> END ${f 5}$. DRIVE DRIVING PATTERN D M **CAUTION:** Always drive at a safe speed. Ν Never erase self-diagnosis results. If self-diagnosis results are erased during the trip of driving pattern B or D, the counter of driving pattern B and D is reset. Drive the vehicle according to driving pattern D. Refer to EC-67, "DIAGNOSIS DESCRIPTION: Driving Pattern". >> GO TO 6. Р **6.**CHECK PERMANENT DTC With CONSULT Turn ignition switch OFF and wait at least 10 seconds. 2. Turn ignition switch ON.

Turn ignition switch OFF and wait at least 10 seconds.

3.

Turn ignition switch ON.

HOW TO ERASE PERMANENT DTC

[MR16DDT] < BASIC INSPECTION >

Select "PERMANENT DTC STATUS" mode with CONSULT.

- With GST1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON.
- 5. Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 1.

NO >> END

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Α

 \Box

Е

Н

DTC/CIRCUIT DIAGNOSIS

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

Description EC

The specification (SP) value indicates the tolerance of the value that is displayed in "SPEC" of "DATA MONITOR" mode of CONSULT during normal operation of the Engine Control System. When the value in "SPEC" of "DATA MONITOR" mode is within the SP value, the Engine Control System is confirmed OK. When the value in "SPEC" of "DATA MONITOR" mode is NOT within the SP value, the Engine Control System may have one or more malfunctions.

The SP value is used to detect malfunctions that may affect the Engine Control System, but will not light the MIL.

The SP value will be displayed for the following three items:

- B/FUEL SCHDL (The fuel injection pulse width programmed into ECM prior to any learned on board correction)
- A/F ALPHA-B1 (The mean value of air-fuel ratio feedback correction factor per cycle)
- MAS A/F SE-B1 (The signal voltage of the mass air flow sensor)

Component Function Check

INFOID:0000000008274541

1.START

Make sure that all of the following conditions are satisfied.

- Vehicle driven distance: More than 5,000 km (3,107 miles)
- Barometric pressure: 98.3 104.3 kPa (1.003 1.064 kg/cm², 14.25 15.12 psi)
- Atmospheric temperature: 20 30°C (68 86°F)
- Engine coolant temperature: 75 95°C (167 203°F)
- Transmission: Warmed-up
- CVT models: After the engine is warmed up to normal operating temperature, drive vehicle until "FLUID TEMP SE" (CVT fluid temperature sensor signal) indicates more than 60°C (140°F).
- M/T models: After the engine is warmed up to normal operating temperature, drive vehicle for 5 minutes.
- Electrical load: Not applied
- Rear window defogger switch, air conditioner switch, lighting switch are OFF. Steering wheel is straight ahead.
- Engine speed: Idle

K

M

Ν

>> GO TO 2.

2.PERFORM "SPEC" OF "DATA MONITOR" MODE

(P)With CONSULT

NOTE:

Perform "SPEC" in "DATA MONITOR" mode in maximum scale display.

- 1. Perform EC-125, "Work Procedure".
- 2. Select "B/FUEL SCHDL", "A/F ALPHA-B1" and "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Make sure that monitor items are within the SP value.

Is the inspection result normal?

YES >> END

NO >> Proceed to <u>EC-152</u>, "<u>Diagnosis Procedure</u>".


0

Revision: 2014 February EC-151 2013 JUKE

Diagnosis Procedure

INFOID:0000000008274542

OVERALL SEQUENCE

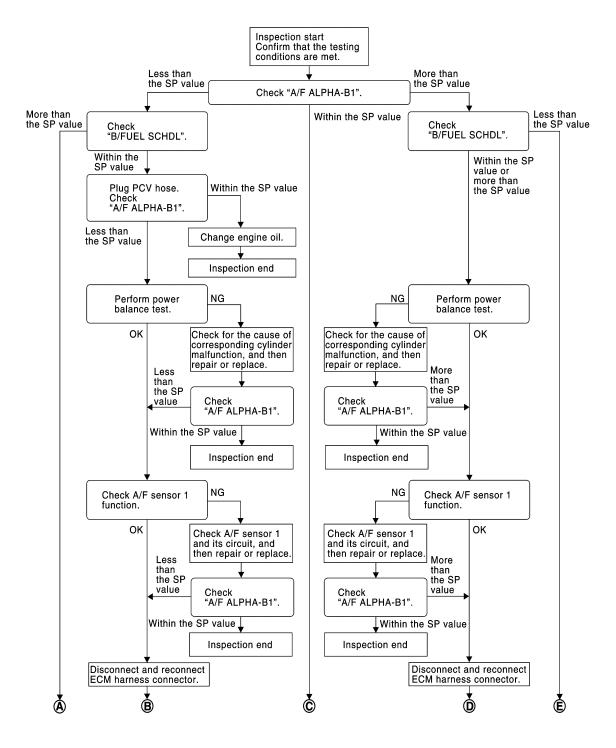


JSBIA1063GB

Α

D

N

Р

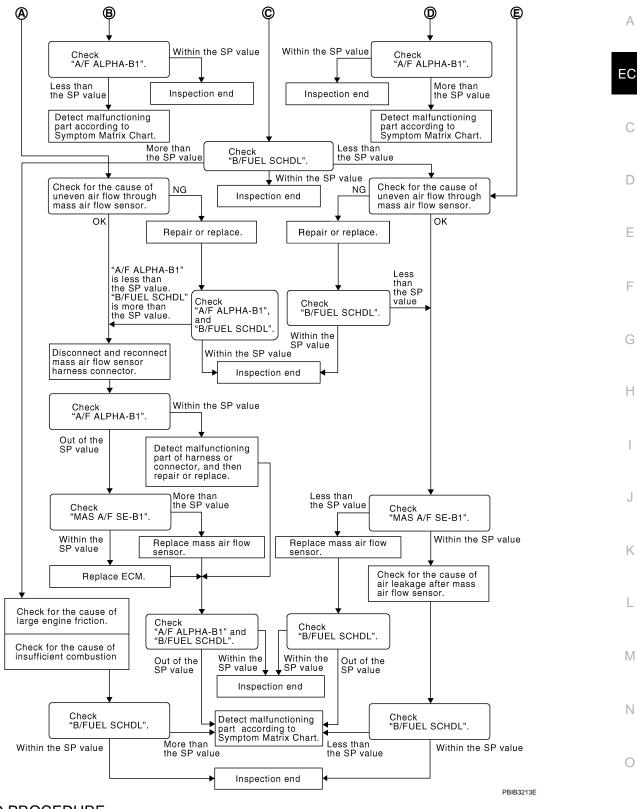

DETAILED PROCEDURE

1.CHECK "A/F ALPHA-B1"

With CONSULT

- 2. Confirm that the testing conditions are met. Refer to EC-151, "Component Function Check".
- Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within 3. the SP value.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

NOTE:

Check "A/F ALPHA-B1" for approximately 1 minute because it may fluctuate. It is NG if the indication is out of the SP value even a little.

Is the measurement value within the SP value?

YES >> GO TO 14.

NO-1 >> Less than the SP value: GO TO 2.

NO-2 >> More than the SP value: GO TO 3.

2.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 4.

NO >> More than the SP value: GO TO 16.

3.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 6.

NO-1 >> More than the SP value: GO TO 6.

NO-2 >> Less than the SP value: GO TO 22.

4.CHECK "A/F ALPHA-B1"

- 1. Stop the engine.
- 2. Disconnect PCV hose, and then plug it.
- 3. Start engine.
- Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 5.

NO >> GO TO 6.

5. CHANGE ENGINE OIL

- 1. Stop the engine.
- Change engine oil.

NOTE:

This symptom may occur when a large amount of gasoline is mixed with engine oil because of driving conditions (such as when engine oil temperature does not rise enough since a journey distance is too short during winter). The symptom will not be detected after changing engine oil or changing driving condition.

>> INSPECTION END

6. PERFORM POWER BALANCE TEST

- Perform "POWER BALANCE" in "ACTIVE TEST" mode.
- Make sure that the each cylinder produces a momentary engine speed drop.

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 7.

7.DETECT MALFUNCTIONING PART

Check the following.

- Ignition coil and its circuit (Refer to <u>EC-506, "Component Function Check"</u>.)
- Fuel injector and its circuit (Refer to <u>EC-493, "Component Function Check"</u>.)
- 3. Intake air leakage
- 4. Low compression pressure (Refer to EM-15, "Inspection".)

Is the inspection result normal?

< DTC/CIRCUIT DIAGNOSIS >	[MR16DDT]
YES >> Replace fuel injector and then GO TO 8. NO >> Repair or replace malfunctioning part and then GO TO 8.	
8.CHECK "A/F ALPHA-B1"	
 Start engine. Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the the SP value. 	e indication is within
Is the measurement value within the SP value?	,
YES >> INSPECTION END	(
NO >> GO TO 9. 9. CHECK A/F SENSOR 1 FUNCTION	
Perform all DTC CONFIRMATION PROCEDURE related with A/F sensor 1.	
• For DTC P0130, refer to EC-232, "DTC Logic".	
 For DTC P0131, refer to <u>EC-236, "DTC Logic"</u>. For DTC P0132, refer to <u>EC-239, "DTC Logic"</u>. 	I
• For DTC P0133, refer to EC-242, "DTC Logic".	
Is any DTC detected?	
YES >> GO TO 10. NO >> GO TO 12.	
10.check a/f sensor 1 circuit	
Perform DIAGNOSTIC PROCEDURE according to corresponding DTC.	
>> GO TO 11.	
11.CHECK "A/F ALPHA-B1"	
 Start engine. Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the the SP value. 	indication is within
Is the measurement value within the SP value?	
YES >> INSPECTION END NO >> GO TO 12.	
12. DISCONNECT AND RECONNECT ECM HARNESS CONNECTOR	
1. Stop the engine.	
2. Disconnect ECM harness connector.	
3. Check pin terminal and connector for damage, and then reconnect it.	
>> GO TO 13.	
13.CHECK "A/F ALPHA-B1"	
 Start engine. Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the the SP value. 	indication is within
Is the measurement value within the SP value?	
YES >> INSPECTION END	
NO >> Detect malfunctioning part according to EC-528 , "Symptom Table".	
14.CHECK "B/FUEL SCHDL"	
Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the ind SP value.	lication is within the
Is the measurement value within the SP value?	
YES >> INSPECTION END	
NO-1 >> More than the SP value: GO TO 15. NO-2 >> Less than the SP value: GO TO 22.	
15. DETECT MALFUNCTIONING PART	

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Check for the cause of large engine friction. Refer to the following.
- Engine oil level is too high
- Engine oil viscosity
- Belt tension of power steering, alternator, A/C compressor, etc. is excessive
- Noise from engine
- Noise from transmission, etc.
- 2. Check for the cause of insufficient combustion. Refer to the following.
- Valve clearance malfunction
- Intake valve timing control function malfunction
- Camshaft sprocket installation malfunction, etc.

>> Repair or replace malfunctioning part, and then GO TO 27.

16. CHECK INTAKE SYSTEM

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Improper specification of intake air system

Is the inspection result normal?

YES >> GO TO 21.

NO >> Repair or replace malfunctioning part, and then GO TO 17.

17. CHECK "A/F ALPHA-B1", AND "B/FUEL SCHDL"

Select "A/F ALPHA-B1" and "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that each indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> "B/FUEL SCHDL" is more, "A/F ALPHA-B1" is less than the SP value: GO TO 18.

$18. \mathsf{DISCONNECT}$ and reconnect mass air flow sensor harness connector

- 1. Stop the engine.
- 2. Disconnect mass air flow sensor harness connector.
- 3. Check pin terminal and connector for damage and then reconnect it again.

>> GO TO 19.

19.CHECK "A/F ALPHA-B1"

- Start engine.
- Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> Detect malfunctioning part of mass air flow sensor circuit and repair it. Refer to EC-207, "DTC <a href="Logic". Then GO TO 26.

NO >> GO TO 20.

20. CHECK "MAS A/F SE-B1"

Select "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 21.

NO >> More than the SP value: Replace mass air flow sensor, and then GO TO 26.

21.REPLACE ECM

- 1. Replace ECM. Refer to EC-542, "Removal and Installation".
- Perform <u>EC-129</u>, "Work Procedure".

>> GO TO 26.

TROUBLE DIAGNOSIS - SPECIFICATION VALUE [MR16DDT] < DTC/CIRCUIT DIAGNOSIS > 22. CHECK INTAKE SYSTEM Check for the cause of uneven air flow through mass air flow sensor. Refer to the following. Crushed air ducts Malfunctioning seal of air cleaner element EC · Uneven dirt of air cleaner element Improper specification of intake air system Is the inspection result normal? YES >> GO TO 24. NO >> Repair or replace malfunctioning part, and then GO TO 23. 23. CHECK "B/FUEL SCHDL" D Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value. Is the measurement value within the SP value? Е >> INSPECTION END NO >> Less than the SP value: GO TO 24. 24.CHECK "MAS A/F SE-B1" F Select "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value. Is the measurement value within the SP value? YES >> GO TO 25. NO >> Less than the SP value: Replace mass air flow sensor, and then GO TO 27. Н 25. CHECK INTAKE SYSTEM Check for the cause of air leak after the mass air flow sensor. Refer to the following. Disconnection, looseness, and cracks in air duct Looseness of oil filler cap · Disconnection of oil level gauge Open stuck, breakage, hose disconnection, or cracks of PCV valve • Disconnection or cracks of EVAP purge hose, open stuck of EVAP canister purge volume control solenoid valve Malfunctioning seal of rocker cover gasket Disconnection, looseness, or cracks of hoses, such as vacuum hose, connecting to intake air system parts K Malfunctioning seal of intake air system, etc. >> GO TO 27. L 26.CHECK "A/F ALPHA-B1" AND "B/FUEL SCHDL" Select "A/F ALPHA-B1" and "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that each indication is within the SP value. Is the measurement value within the SP value? YES >> INSPECTION END Ν NO >> Detect malfunctioning part according to <a>EC-528, "Symptom Table". 27.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and then make sure that the indication is

>> Detect malfunctioning part according to EC-528, "Symptom Table".

Р

within the SP value.

YES

NO

Is the measurement value within the SP value?

>> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

2013 JUKE

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000008274543

1. CHECK FUSE

Check that the following fuse is not fusing.

Location	Fuse No.	Capacity
IPDM E/R	#43	20 A
	#62	15 A

Is the fuse fusing?

YES >> Replace the fuse after repairing the applicable circuit.

NO >> GO TO 2.

2. CHECK GROUND CONNECTION

1. Turn ignition switch OFF.

2. Check ground connection E21 and E38. Refer to GI-46, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace ground connection.

${f 3.}$ CHECK ECM GROUND CIRCUIT

1. Disconnect ECM harness connectors.

2. Check the continuity between ECM harness connector and ground.

	+		
E	СМ	_	Continuity
Connector	Terminal		
F25	1		
123	2		
	123	Ground	Existed
E18	124		
	127		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK ECM POWER SUPPLY (MAIN)-I

- 1. Reconnect ECM harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between ECM harness connector terminals.

	ECM		
Connector	+	_	Voltage
Connector	Terminal		
E18	121	127	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 6.

5. CHECK ECM POWER SUPPLY (MAIN)-II

1. Turn ignition switch OFF and wait at least 10 seconds.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

2. Check the voltage between ECM harness connector terminals as per the following.

ECM			\	
Connector	nnector –		Condition	Voltage (Approx.)
Connector	Terr	minal		, , ,
E18	121	127	After turning ignition switch OFF, battery voltage will exist for a few seconds	Drop to 0 V

EC

Α

Is the inspection result normal?

YES >> GO TO 9. NO >> GO TO 7.

D

Е

F

6.CHECK ECM POWER SUPPLY (MAIN) CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connectors.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between ECM harness connector and IPDM E/R harness connector.

+				
E	ECM		IPDM E/R	
Connector	Terminal	Connector	Terminal	
E18	121	E14	35	Existed

Ν

Р

5. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

7.CHECK ECM RELAY CONTROL SIGNAL

Check the voltage between ECM harness connector terminals as per the following.

ECM			Maltana	
Connector	+	_	Condition	Voltage (Approx.)
Connector	Terr	ninal		, , ,
			Ignition switch ON	0 V
E18	112	127	Turn ignition switch OFF and wait at least 10 seconds.	Battery voltage

Is the inspection result normal?

YES >> Check Intermittent Incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 8.

8.CHECK ECM RELAY CONTROL SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between ECM harness connector and IPDM E/R harness connector.

+		-		
E	CM	IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E18	112	E14	41	Existed

5. Also check harness for short to ground and to power.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to PCS-35, "Removal and Installation".

NO >> Repair or replace error-detected parts.

9. CHECK IGNITION SWITCH SIGNAL

Turn ignition switch ON.

Check the voltage between ECM harness connector terminals.

ECM			V. B.	
Connector	+	-	Condition	Voltage (Approx.)
Connector	Terr	minal		(11 -)
E18	109	127	Ignition switch OFF	0 V
LIO	109 127	Ignition switch ON	Battery voltage	

Is the inspection result normal?

YES >> GO TO 11.

NO >> GO TO 10.

10.check ignition switch signal circuit

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between ECM harness connector and IPDM E/R harness connector.

+		_		
ECM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E18	109	E15	62	Existed

5. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

11. CHECK ECM POWER SUPPLY (BACK-UP)

Check the voltage between ECM harness connector terminals.

ECM			
Connector	+	_	Voltage
Connector	Terminal		
E18	106	127	Battery voltage

Is the inspection result normal?

YES >> Check Intermittent Incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 12.

12.CHECK ECM POWER SUPPLY (BACK-UP) CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- Check the continuity between ECM harness connector and IPDM E/R harness connector.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

+		_		
ECM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E18	106	E14	42	Existed

5. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

EC

Α

D

Е

F

G

Н

K

L

M

Ν

0

U0101 CAN COMM CIRCUIT

Description INFOID:000000008274544

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
U0101	LOST COMM (TCM) (Lost communication with TCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) with TCM for 2 seconds or more.	CAN communication line between TCM and ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- 2. Check DTC.

Is DTC detected?

YES >> Proceed to EC-162, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274546

Perform the trouble diagnosis for CAN communication system. Refer to <u>LAN-15</u>, "Trouble <u>Diagnosis Flow Chart"</u>.

U0122 VEHICLE DYNAMICS CONTROL MODULE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Α

EC

D

Е

Н

U0122 VEHICLE DYNAMICS CONTROL MODULE

Description INFOID:0000000008274547

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
U0122	VDC MDL (Lost communication with vehi- cle dynamics control module)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission related diagnosis) with ABS actuator and electric unit (control unit) for 2 seconds or more.	CAN communication line between ECM and ABS actuator and electric unit (control unit) (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- Check DTC.

Is DTC detected?

YES >> Proceed to <u>EC-163</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

Diagnosis Procedure

Perform the trouble diagnosis for CAN communication system. Refer to <u>LAN-15</u>, "Trouble <u>Diagnosis Flow</u> Chart".

INFOID:0000000008274549

Revision: 2014 February

EC-163

2013 JUKE

L

N

0

U1001 CAN COMM CIRCUIT

DescriptionINFOID:000000008274550

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
U1001	CAN COMM CIRCUIT (CAN communication line)	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission related diagnosis) for 2 seconds or more.	Harness or connectors (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-164, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274552

Perform the trouble diagnosis for CAN communication system. Refer to <u>LAN-15</u>, "Trouble <u>Diagnosis Flow Chart"</u>.

P0011 IVT CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0011 IVT CONTROL

DTC Logic INFOID:0000000008274553

DTC DETECTION LOGIC

NOTE:

If DTC P0011 is displayed with DTC P0075, first perform the trouble diagnosis for EC-392, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0011	INT/V TIM CONT-B1 (Intake valve timing control performance)	There is a gap between angle of target and phase-control angle degree.	Crankshaft position sensor (POS) Camshaft position sensor (PHASE) Intake valve control solenoid valve Accumulation of debris to the signal pick-up portion of the camshaft Timing chain installation Foreign matter caught in the oil groove for intake valve timing control

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10 V and 16 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Start engine and warm it up to normal operating temperature.
- Maintain the following conditions for at least 6 consecutive seconds. Hold the accelerator pedal as steady as possible.

EC-165

ENG SPEED	1,200 - 2,000 rpm
COOLAN TEMP/S	More than 60°C (140°F)
Selector lever	P or N position (CVT) Neutral position (M/T)

- Stop vehicle with engine running and let engine idle for 10 seconds.
- Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-166. "Diagnosis Procedure".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE-II

(P)With CONSULT

1. Maintain the following conditions for at least 20 consecutive seconds.

EC

Α

D

Е

F

Н

K

N

Р

2013 JUKE

INFOID:0000000008274554

ENG SPEED	1,200 - 3,175 rpm (A constant rotation is maintained.)
COOLAN TEMP/S	More than 60°C (140°F)
Selector lever	D position (CVT) 1st or 2nd position (M/T)
Driving location	Driving vehicle uphill (Increased engine load will help maintain the driving conditions required for this test.)

CAUTION:

Always drive at a safe speed.

2. Check 1st trip DTC.

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-166, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure


1. CHECK OIL PRESSURE WARNING LAMP

1. Start engine.

2. Check oil pressure warning lamp and confirm it is not illuminated.

Is oil pressure warning lamp illuminated?

YES >> Check the engine oil level. Refer to <u>LU-8, "Inspection"</u>. NO >> GO TO 2.

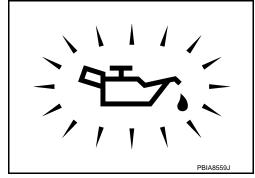

2. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Check the intake valve timing control solenoid valve. Refer to <u>EC-167</u>, "Component Inspection". Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace intake valve timing control solenoid valve. Refer to EM-72, "Exploded View".

3.check crankshaft position sensor (pos)

Check the crankshaft position sensor (POS). Refer to EC-315, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace crankshaft position sensor (POS). Refer to EM-110, "Exploded View".

4. CHECK CAMSHAFT POSITION SENSOR (PHASE)

Check the camshaft position sensor (PHASE). Refer to <u>EC-318</u>, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace camshaft position sensor (PHASE). Refer to <u>EM-84, "Exploded View"</u>.

5. CHECK CAMSHAFT (INT)

Check the following.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]


- Accumulation of debris to the signal plate of camshaft (1) rear end
- · Chipping signal plate of camshaft rear end

Is the inspection result normal?

YES >> GO TO 6.

NO

>> Remove debris and clean the signal plate of camshaft rear end or replace camshaft. Refer to EM-85, "Removal and Installation".

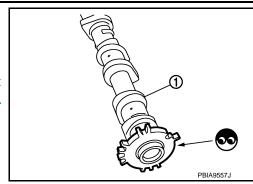

6.CHECK TIMING CHAIN INSTALLATION

Check service records for any recent repairs that may cause timing chain misaligned.

Are there any service records that may cause timing chain misaligned?

>> Check timing chain installation. Refer to EM-73, "Removal and Installation".

>> GO TO 7. NO

7.CHECK LUBRICATION CIRCUIT

Refer to EM-88, "Inspection", "INSPECTION AFTER INSTALLATION".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Clean lubrication line.

Component Inspection

1. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-I

- 1. Turn ignition switch OFF.
- 2. Disconnect intake valve timing control solenoid valve harness connector.
- Check resistance between intake valve timing control solenoid valve terminals as per the following.

Intake valve timing control solenoid valve		
+ –		Resistance
Terr	minal	
1	2	6.7 - 7.7 Ω [at 20°C (68°F)]
1	Ground	∞ Ω
2	Giodila	(Continuity should not exist)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace intake valve timing control solenoid valve. Refer to EM-72, "Exploded View".

2.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-II

Remove intake valve timing control solenoid valve. Refer to EM-72, "Exploded View".

Provide 12 V DC between intake valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Make sure that the plunger moves as shown in the figure.

CAUTION:

Do not apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.

NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace intake valve timing control solenoid valve. Refer to EM-72, "Exploded View".

JMBIA2107ZZ

Α

EC

D

Е

INFOID:0000000008274555

P0014 EVT CONTROL

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P0014 is displayed with DTC P0078, first perform trouble diagnosis for DTC P0078. Refer to <u>EC-183, "DTC Logic"</u>.
- If DTC P0014 is displayed with P1078, first perform trouble diagnosis for P1078. Refer to <u>EC-398</u>, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0014	EXH/V TIM CONT-B1 (Exhaust valve timing control performance)	There is a gap between angle of target and phase-control angle degree.	Crankshaft position sensor (POS) Camshaft position sensor (PHASE) Exhaust valve timing control position sensor Exhaust valve control solenoid valve Accumulation of debris to the signal pick-up portion of the camshaft Timing chain installation Foreign matter caught in the oil groove for exhaust valve timing control

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10 V and 16 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Start engine and warm it up to the normal operating temperature.
- 3. Maintain the following conditions for at least 6 consecutive seconds. Hold the accelerator pedal as steady as possible.

ENG SPEED	1,200 - 2,000 rpm (A constant rotation is maintained.)
COOLAN TEMP/S	More than 60°C (140°F)
Selector lever	P or N position (CVT) Neutral position (M/T)

- Let engine idle for 10 seconds.
- 5. Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-169, "Diagnosis Procedure"

NO >> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-II

(P)With CONSULT

- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Maintain the following conditions for at least 20 consecutive seconds.

ENG SPEED	1,700 - 2,950 rpm (A constant rotation is maintained.)	
COOLAN TEMP/S	More than 70°C (158°F)	
Selector lever	D position (CVT) 1st or 2nd position (M/T)	
Driving location uphill	Driving vehicle uphill (Increased engine load will help maintain the driving conditions required for this test.)	

CAUTION:

Always drive at a safe speed.

3. Check 1st trip DTC.

@With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-169, "Diagnosis Procedure"

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK OIL PRESSURE WARNING LAMP

- 1. Start engine.
- Check oil pressure warning lamp and confirm it is not illuminated.

Is oil pressure warning lamp illuminated?

YES >> Check the engine oil level. Refer to <u>LU-8, "Inspection"</u>. NO >> GO TO 2.



2. CHECK EXHAUST VALVE TIMING CONTROL SOLENOID VALVE

Check the exhaust valve timing control solenoid valve. Refer to <u>EC-167</u>, "Component Inspection". Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace exhaust valve timing control solenoid valve. Refer to EM-72, "Exploded View".

3. CHECK CRANKSHAFT POSITION SENSOR (POS)

Check the crankshaft position sensor (POS). Refer to EC-315, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace crankshaft position sensor (POS). Refer to EM-110, "Exploded View".

4. CHECK EXHAUST VALVE TIMING CONTROL POSITION SENSOR

Check the exhaust valve timing control position sensor. Refer to EC-318, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

Revision: 2014 February

NO >> Replace exhaust valve timing control position sensor. Refer to EM-84, "Exploded View".

EC-169

5.CHECK CAMSHAFT (EXH)

EC

D

Е

F

G

INFOID:00000000008274557

Н

J

Κ

[\/

IVI

N

0

< DTC/CIRCUIT DIAGNOSIS >

Check the following.


- Accumulation of debris to the signal plate of camshaft rear end
- · Chipping signal plate of camshaft rear end

Is the inspection result normal?

YES >> GO TO 6.

NO

>> Remove debris and clean the signal plate of camshaft rear end or replace camshaft. Refer to EM-85, "Removal and Installation".

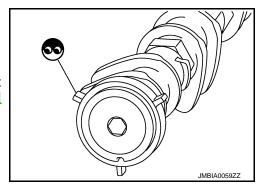

6. CHECK TIMING CHAIN INSTALLATION

Check service records for any recent repairs that may cause timing chain misaligned.

Are there any service records that may cause timing chain misaligned?

YES >> Check timing chain installation. Refer to EM-73, "Removal and Installation".

NO >> GO TO 7.

7. CHECK LUBRICATION CIRCUIT

Refer to EM-88, "Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Clean lubrication line.

Component Inspection

INFOID:0000000008274558

1. CHECK EXHAUST VALVE TIMING CONTROL SOLENOID VALVE-I

- Turn ignition switch OFF.
- Disconnect exhaust valve timing control solenoid valve harness connector.
- 3. Check resistance between exhaust valve timing control solenoid valve terminals as per the following.

Exhaust valve timing	control solenoid valve	
+ -		Resistance
Terr	minal	
1	2	7.0 - 7.7 Ω [at 20°C (68°F)]
1	Ground	Ω
2	Ground	(Continuity should not exist)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace exhaust valve timing control solenoid valve. Refer to EM-72, "Exploded View".

2.CHECK EXHAUST VALVE TIMING CONTROL SOLENOID VALVE-II

- Remove exhaust valve timing control solenoid valve. Refer to <u>EM-72, "Exploded View"</u>.
- Provide 12 V DC between exhaust valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Check that the plunger moves as shown in the figure.

CAUTION:


Do not apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in exhaust valve timing control solenoid valve.

NOTE:

Always replace O-ring when exhaust valve timing control solenoid valve is removed.

Is the inspection result normal?

YES >> INSPECTION END

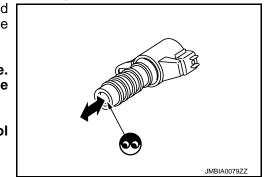

P0014 EVT CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

NO >> Replace exhaust valve timing control solenoid valve. Refer to EM-72, "Exploded View".

EC

Α

D

С

Е

F

G

Н

1

J

Κ

L

M

Ν

0

Ρ

P0031, P0032 A/F SENSOR 1 HEATER

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0031	A/F SEN 1 HTR (B1) (Air fuel ratio (A/F) sensor 1 heater control circuit low)	The current amperage in the A/F sensor 1 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the A/F sensor 1 heater.)	 Harness or connectors (A/F sensor 1 heater circuit is open or shorted.) A/F sensor 1 heater
P0032	A/F SEN 1 HTR (B1) (Air fuel ratio (A/F) sensor 1 heater control circuit high)	The current amperage in the A/F sensor 1 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the A/F sensor 1 heater.)	Harness or connectors (A/F sensor 1 heater circuit is shorted.) A/F sensor 1 heater

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than between 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 10 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-172, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274560

1.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect air fuel ratio (A/F) sensor 1 harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between A/F sensor 1 harness connector and ground.

	+		
A/F se	ensor 1	_	Voltage
Connector Terminal			
F70	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2.CHECK A/F SENSOR 1 HEATER OUTPUT SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.

P0031, P0032 A/F SENSOR 1 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

+		_		
A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F70	3	E18	125	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

3.CHECK A/F SENSOR 1 HEATER

Check the A/F sensor 1 heater. Refer to EC-173, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 4.

4.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1. Refer to EM-41, "Exploded View". **CAUTION:**

 Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

 Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

Component Inspection

1.CHECK AIR FUEL RATIO (A/F) SENSOR 1

- Turn ignition switch OFF.
- Disconnect A/F sensor 1 harness connector.
- Check resistance between A/F sensor 1 terminals as per the following.

A/F se	ensor 1		
+ -		Resistance	
Terr	minal		
	4	1.8 - 2.44 Ω [at 20°C (68°F)]	
3	1		
	2	Ω	
4	1	(Continuity should not exist)	
	2		

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-41, "Exploded View". **CAUTION:**

 Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

EC-173 2013 JUKE Revision: 2014 February

EC

Α

Е

F

INFOID:0000000008274561

K

N

P0031, P0032 A/F SENSOR 1 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

• Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

P0037, P0038 HO2S2 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0037, P0038 HO2S2 HEATER

DTC Logic

DTC DETECTION LOGIC

	_	
	_	ι.

Е

Н

K

L

M

Ν

Р

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0037	HO2 HTR (B1) (Heated oxygen sensor 2 heater control circuit low)	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	Harness or connectors (Heated oxygen sensor 2 heater circuit is open or shorted.) Heated oxygen sensor 2 heater
P0038	HO2 HTR (B1) (Heated oxygen sensor 2 heater control circuit high)	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	 Harness or connectors (Heated oxygen sensor 2 heater circuit is shorted.) Heated oxygen sensor 2 heater

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Check 1st trip DTC.
- **With GST**

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-175, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274563

1. CHECK HO2S2 POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between HO2S2 harness connector and ground.

	+		
НО	2S2	_	Voltage
Connector	Terminal		
F69	2	Ground	Battery voltage

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2.CHECK HO2S2 OUTPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between HO2S2 harness connector and ECM harness connector.

+		_		
HO2S2		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F69	3	E18	126	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK HEATED OXYGEN SENSOR 2 HEATER

Check the heated oxygen sensor 2 heater. Refer to EC-176, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 4.

4. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

Component Inspection

INFOID:0000000008274564

1. CHECK HEATED OXYGEN SENSOR 2 HEATER

- 1. Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- 3. Check resistance between HO2S2 terminals as per the following.

+	_	
Heated oxygen sensor 2		Resistance
Terminal		
2	3	3.3 - 4.4 Ω [at 25°C (77°F)]
	1	
1	1 3	
	4	∞ Ω
	1 (Continuity should not exi	(Continuity should not exist)
4	2	
	3	

Is the inspection result normal?

P0037, P0038 HO2S2 HEATER

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS > YES >> INSPECTION END NO >> GO TO 2. Α 2. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

• Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

• Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

EC

D

Е

F

Н

K

L

M

Ν

0

P0045, P0047, P0048 TC BOOST CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0045, P0047, P0048 TC BOOST CONTROL SOLENOID VALVE

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0045	TC BOOST SOL/V (Turbocharger boost control solenoid valve circuit open)	ECM detected the turbocharger boost control solenoid valve circuit is open.	
P0047	TC/SC BOOST CONT A (Turbocharger boost control solenoid valve circuit low in- put)	ECM detected the turbocharger boost control solenoid valve circuit is short to ground.	Harness or connectors (Turbocharger boost control solenoid valve circuit is open or shorted.) Turbocharger boost control solenoid valve
P0048	TC/SC BOOST CONT A (Turbocharger boost control solenoid valve circuit high input)	ECM detected the turbocharger boost control solenoid valve circuit is short to power.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-178, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274566

1.CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect turbocharger boost control solenoid valve harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between turbocharger boost control solenoid valve harness connector and ground.

	+			
_	oost control sole- valve	_	Voltage	
Connector	Terminal			
F54 2		Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

Turn ignition switch OFF.

P0045, P0047, P0048 TC BOOST CONTROL SOLENOID VALVE

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS >

- Disconnect IPDM E/R harness connector.
- Check the continuity between turbocharger boost control solenoid valve harness connector and IPDM E/R harness connector.

+		_		
Turbocharger boost control solenoid valve		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F54	2	E14	36	Existed

Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check turbocharger boost control solenoid valve output signal circuit

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between turbocharger boost control solenoid valve harness connector and ECM harness connector.

+		-		
Turbocharger boost control solenoid valve		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F54	1	F26	73	Existed

Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

f 4.CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE

Check the turbocharger boost control solenoid valve. Refer to EC-179, "Component Inspection".

Is the inspection result normal?

YFS >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

>> Replace turbocharger boost control solenoid valve. Refer to EM-37, "Exploded View". NO

Component Inspection

1. CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE

- Turn ignition switch OFF
- 2. Disconnect turbocharger boost control solenoid valve harness connector.
- Disconnect hoses connected to turbocharger boost control solenoid valve.
- Check air passage continuity of turbocharger boost control solenoid valve as per the following conditions.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12 V direct current supply between terminals 1 and 2	Existed	Not existed
No supply	Not existed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace turbocharger boost control solenoid valve. Refer to EM-37, "Exploded View". EC

Е

INFOID:0000000008274567

M

N

P0075 IVT CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0075 IVT CONTROL SOLENOID VALVE

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name ((Trouble diagnosis content))	DTC detecting condition	Possible cause
P0075	INT/V TIM V/CIR-B1 (Intake valve timing control solenoid valve circuit)	An improper voltage is sent to the ECM through intake valve timing control solenoid valve.	Harness or connectors (Intake valve timing control solenoid valve circuit is open or shorted.) Intake valve timing control solenoid valve

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO2.

2.perform dtc confirmation procedure

- 1. Start engine and let it idle for 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-180, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274569

1.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect intake valve timing (IVT) control solenoid valve harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between intake valve timing control solenoid valve harness connector and ground.

	+		
IVT control s	olenoid valve	_	Voltage
Connector	Terminal		
F41	2	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- Check the continuity between IVT control solenoid valve harness connector and IPDM E/R harness connector.

P0075 IVT CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Α

EC

D

F

+		+		
IVT control s	solenoid valve	IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F41	2	E14	36	Existed
Also check harness for short to ground.				

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 3.}$ CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between IVT control solenoid valve harness connector and ECM harness connector.

+		+		
IVT control s	olenoid valve	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F41	1	F26	81	Existed

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Check the intake valve timing control solenoid valve. Refer to EC-181, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace intake valve timing control solenoid valve.

Component Inspection

${\bf 1.} {\sf CHECK\ INTAKE\ VALVE\ TIMING\ CONTROL\ SOLENOID\ VALVE-I}$

- Turn ignition switch OFF.
- 2. Disconnect intake valve timing control solenoid valve harness connector.
- 3. Check resistance between intake valve timing control solenoid valve terminals as per the following.

Intake valve timing of	control solenoid valve	
+ -		Resistance
Terr	minal	
1	2	6.7 - 7.7 Ω [at 20°C (68°F)]
1	Ground	$\infty \Omega$
2	Glound	(Continuity should not exist)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace intake valve timing control solenoid valve. Refer to EM-72, "Exploded View".

2.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-II

Remove intake valve timing control solenoid valve. Refer to <u>EM-72, "Exploded View"</u>.

INFOID:00000000008274570

N

Revision: 2014 February

P0075 IVT CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

2. Provide 12 V DC between intake valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Make sure that the plunger moves as shown in the figure.

CAUTION:

Do not apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.


NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace intake valve timing control solenoid valve. Refer to EM-72, "Exploded View".

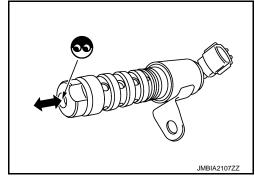

P0078 EVT CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0078 EVT CONTROL SOLENOID VALVE

DTC Logic

DTC DETECTION LOGIC

D

Е

Н

K

M

N

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0078	EX V/T ACT/CIRC-B1 (Exhaust valve timing control sole- noid valve circuit)	An improper voltage is sent to the ECM through exhaust valve timing control solenoid valve.	Harness or connectors (Exhaust valve timing control solenoid valve circuit is open or shorted.) Exhaust valve timing control solenoid valve

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-183, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274572

1. CHECK EXHAUST VALVE TIMING CONTROL SOLENOID VALVE POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect exhaust valve timing (EVT) control solenoid valve harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between exhaust valve timing control solenoid valve harness connector and ground.

+			
EVT control solenoid valve		_	Voltage
Connector	Terminal		
F100	2	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.check exhaust valve timing control solenoid valve power supply circuit

- Turn ignition switch OFF.
- Disconnect IPDM E/R harness connector.
- Check the continuity between EVT control solenoid valve harness connector and IPDM E/R harness connector.

EC-183

+		+		
EVT control s	solenoid valve	IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F100	2	E14	36	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check exhaust valve timing control solenoid valve ground circuit

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVT control solenoid valve harness connector and ECM harness connector.

+		+		
EVT control s	solenoid valve	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F100	1	F26	85	Existed

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4.CHECK EXHAUST VALVE TIMING CONTROL SOLENOID VALVE

Check the exhaust valve timing control solenoid valve. Refer to EC-181, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace exhaust valve timing control solenoid valve.

Component Inspection

INFOID:0000000008274573

1. CHECK EXHAUST VALVE TIMING CONTROL SOLENOID VALVE-I

- Turn ignition switch OFF.
- 2. Disconnect exhaust valve timing control solenoid valve harness connector.
- 3. Check resistance between exhaust valve timing control solenoid valve terminals as per the following.

Exhaust valve timing	control solenoid valve	
+ -		Resistance
Terr	minal	
1	2	7.0 - 7.7 Ω [at 20°C (68°F)]
1	Ground	∞ Ω
2	Glound	(Continuity should not exist)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace exhaust valve timing control solenoid valve. Refer to EM-72, "Exploded View".

2.CHECK EXHAUST VALVE TIMING CONTROL SOLENOID VALVE-II

1. Remove exhaust valve timing control solenoid valve. Refer to EM-72, "Exploded View".

P0078 EVT CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Provide 12 V DC between exhaust valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Check that the plunger moves as shown in the figure.

CAUTION:


Do not apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in exhaust valve timing control solenoid valve.


NOTE:

Always replace O-ring when exhaust valve timing control solenoid valve is removed.

Is the inspection result normal?

YES >> INSPECTION END

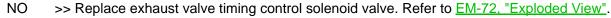

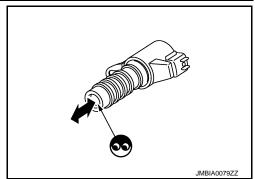

EC

Α

С

D

Е

F

G

Н

Κ

L

M

Ν

0

P0087 FRP CONTROL SYSTEM

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P0087 is displayed with DTC P0090 and/or P1197, first perform the trouble diagnosis for DTC P0090 and/or P1197.
- DTC P0087 may be displayed when running out of gas or air accumulation.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0087	LOW FUEL PRES (High fuel pressure too low)	 Fuel rail pressure does not reach 1.3 MPa (13 bar, 13.3 kg/cm2, 188.5 psi) at engine cold start [water temperature 5°C (41°F) – 40°C (104°F)]. Fuel rail pressure remains at 8.5 MPa (85 bar, 86.7 kg/cm2, 1232.8 psi) or less for 1 second or more during engine idle condition after cold start [water temperature 5°C (41°F) – 40°C (104°F)]. The following condition continues for 5 seconds or more after engine start (regardless of water temperature): Target fuel pressure – Actual fuel pressure ≥ 2.7 MPa (27 bar, 27.5 kg/cm2, 392 psi). 	Fuel system Leakage in fuel line High pressure fuel pump Low pressure fuel pump Damage in lifter

DTC CONFIRMATION PROCEDURE

1. CHECK FUEL LEAKAGE

- 1. Turn ignition switch ON.
- Visually check the piping between low pressure fuel pump and fuel injectors for fuel leakage.
- 3. Start the engine.
- 4. Visually check the piping between low pressure fuel pump and fuel injectors for fuel leakage.

Is inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.
- Before performing the following procedure, check that the fuel tank is 1/8 full of fuel.

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-1

(P)WITH CONSULT

- 1. Turn ignition switch ON.
- 2. Select "COOLAN TEMP/S" in "DATA MONITOR" mode of "ENGNE" using CONSULT.
- Check the following condition;.

P0087 FRP CONTROL SYSTEM

PUUOI FRE CUNTRUL STSTEINI	
< DTC/CIRCUIT DIAGNOSIS >	[MR16DDT]
WITH GST	
Follow the above steps for "WITH CONSULT".	А
Is the condition satisfied? YES >> GO TO 4.	
NO >> 1. Satisfy the condition.	EC
2. Retry from step 1.	
4.PERFORM DTC CONFIRMATION PROCEDURE-2	0
®WITH CONSULT	
 Start the engine and let it idle for 10 seconds. Check 1st trip DTC. 	
SHOOK 13t trip 510. SWITH GST	D
Follow the above steps for "WITH CONSULT".	
Is 1st trip DTC detected?	Е
YES >> Proceed to <u>EC-187, "Diagnosis Procedure"</u> . NO >> GO TO 5.	
5. PERFORM DTC CONFIRMATION PROCEDURE-3	
®WITH CONSULT	F
1. Select "COOLAN TEMP/S" in "DATA MONITOR" mode of "ENGINE" using CONSULT.	
2. Maintain the following condition for 10 seconds or more at idle.	G
COOLAN TEMP/S : 70°C (104°F) or more	Н
3. Check 1st trip DTC.	11
WITH GST Follow the above steps for "WITH CONSULT".	
Is 1st trip DTC detected?	I
YES >> Proceed to EC-187, "Diagnosis Procedure".	
NO >> INSPECTION END.	J
Diagnosis Procedure	INFOID:0000000008835874
1.PERFORM THE HIGH PRESSURE FUEL PUMP COMPONENT INSPECTION	IZ.
Perform the high pressure fuel pump component inspection. Refer to EC-187, "Component In	K nspection (High
Pressure Fuel Pump)".	
Is the inspection result normal?	L
YES >> GO TO 2. NO >> Replace the fuel pump. <u>EM-46, "Removal and Installation"</u> .	
2. CHECK FUEL LEAKAGE	M
1. Start the engine.	
 Visually check that the fuel pump, fuel rail, and fuel piping have no fuel leakage. 	
Is the inspection result normal?	N
YES >> Check that the fuel system has no breakage, bend, and crush. Refer to FL-4, "Inst	<u>oection"</u> .
NO >> Repair or Replace the error-detected parts.	0
Component Inspection (High Pressure Fuel Pump)	INFOID:0000000008835875
1.CHECK HIGH PRESSURE FUEL PUMP-1	Р
1. Turn ignition switch OFF.	
 Disconnect high pressure fuel pump harness connector. Check the resistance between high pressure fuel pump terminals. 	
Check the resistance between high pressure fuel pump terminals.	

Revision: 2014 February EC-187 2013 JUKE

P0087 FRP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

+ High pressu	- ire fuel pump	Condition		Resistance (Approx.)	
Terminal				(, (pp. 6))	
1	2	Temperature °C (°F)	20 – 30 (68 - 86)	$0.46 - 0.56 \Omega$	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace high pressure fuel pump. Refer to EM-46, "Removal and Installation".

2. CHECK HIGH PRESSURE FUEL PUMP-2

(P)WITH CONSULT

- 1. Reconnect high pressure fuel pump harness connector.
- 2. Start the engine.
- 3. Check "FUEL PRES SEN V" in "DATA MONITOR" mode of "ECM" using CONSULT.

Monitor item	Condition	Voltage (Approx.)
FUEL PRES SEN V	Engine speed: idle	1,140 – 1,460 mV
TOLL FIXES SEN V	Engine speed: Revving engine from idle to 4,000 rpm quickly	1,140 – 3,060 mV

NUMBER OF THE PROPERTY OF THE

- 1. Reconnect high pressure fuel pump harness connector.
- 2. Start the engine.
- 3. Check FRP sensor signal voltage.

ECM				Value	
Connector	+ Terminal		Condition	Value (Approx.)	
Connector					
F25 18 44		44	Engine speed: idle	1,140 – 1,460 mV	
1 25	18 44		Engine speed: Revving engine from idle to 4,000 rpm quickly	1,140 – 3,060 mV	

YES >> INSPECTION END

NO >> Replace high pressure fuel pump. Refer to EM-46, "Removal and Installation".

P0088 FRP CONTROL SYSTEM

DTC Logic INFOID:0000000008835876

DTC DETECTION LOGIC

NOTE:

If DTC P0088 is displayed with DTC P0090, first perform the trouble diagnosis for DTC P0090.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0088	HIGH FUEL PRES (High fuel pressure too high)	 Fuel rail pressure remains at more than 12.5 MPa (125 bar, 127.5 kg/cm2, 1812.5 psi) for 1 second or more during engine idle condition after cold start [water temperature 5°C (41°F) - 40°C (104°F)]. The following condition continues for 5 seconds or more after engine start (regardless of water temperature): Actual fuel pressure – Target fuel pressure ≥ 2.7 MPa (27 bar, 27.5 kg/cm², 392 psi) 	Harness or connector (The high pressure fuel pump circuit is open or shorted) High pressure fuel pump

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.
- Before performing the following procedure, check that the fuel tank is 1/8 full of fuel.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-1

Warm up the engine to the normal operating temperature and keep the engine speed at idle for 10 seconds.

NOTE:

Warm up the engine until "COOLANT TEMP/S" on "DATA MONITOR" mode of "ENGINE" using CON-SULTIII reaches at least 70°C (158°F).

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-191, "Diagnosis Procedure".

NO >> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-2

- Cool the engine until the engine coolant temperature reaches 60°C (140°F) or less.
- Start the engine and wait at least 40 seconds. 2.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-191, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

 ${f 1}$.PERFORM THE HIGH PRESSURE FUEL PUMP COMPONENT INSPECTION

Α

EC

Е

D

F

Н

K

Ν

P0088 FRP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Perform the high pressure fuel pump component inspection. Refer to <u>EC-190, "Component Inspection (High</u> Pressure Fuel Pump)".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the fuel pump. <u>EM-46, "Removal and Installation"</u>.

2. CHECK FUEL LEAKAGE

- 1. Start the engine.
- Visually check that the fuel pump, fuel rail, and fuel piping have no fuel leakage.

Is the inspection result normal?

YES >> Check that the fuel system has no breakage, bend, and crush. Refer to FL-4. "Inspection".

NO >> Repair or Replace the error-detected parts.

Component Inspection (High Pressure Fuel Pump)

INFOID:0000000008835878

1. CHECK HIGH PRESSURE FUEL PUMP-1

- 1. Turn ignition switch OFF.
- 2. Disconnect high pressure fuel pump harness connector.
- Check the resistance between high pressure fuel pump terminals.

+	_	Condition		Resistance (Approx.)	
High pressu	re fuel pump				
Terminal				(11 -)	
1	2	Temperature °C (°F)	20 – 30 (68 - 86)	$0.46 - 0.56 \Omega$	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace high pressure fuel pump. Refer to EM-46, "Removal and Installation".

2.CHECK HIGH PRESSURE FUEL PUMP-2

(P)WITH CONSULT

- Reconnect high pressure fuel pump harness connector.
- Start the engine.
- Check "FUEL PRES SEN V" in "DATA MONITOR" mode of "ECM" using CONSULT.

Monitor item	Condition	Voltage (Approx.)
FUEL PRES SEN V	Engine speed: idle	1,140 – 1,460 mV
TOLET RES SEN V	Engine speed: Revving engine from idle to 4,000 rpm quickly	1,140 – 3,060 mV

NWITHOUT CONSULT

- 1. Reconnect high pressure fuel pump harness connector.
- Start the engine.
- Check FRP sensor signal voltage.

ECM				.,,
Connector	+ -		Condition	Value (Approx.)
Connector	Term	ninal		(11 - 7
F25	18	44	Engine speed: idle	1,140 – 1,460 mV
		77	Engine speed: Revving engine from idle to 4,000 rpm quickly	1,140 – 3,060 mV

YES >> INSPECTION END

NO >> Replace high pressure fuel pump. Refer to EM-46, "Removal and Installation".

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0090 HIGH PRESSURE FUEL PUMP

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P0090 is displayed with DTC P1197, first perform the trouble diagnosis for DTC P1197.
- DTC P0090 may be displayed when running out of gas.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0090	FUEL PUMP (High pressure fuel pump circuit)	 Fuel rail pressure remains at 1.1 MPa (11 bar, 11.2 kg/ cm², 159.5 psi) or less for 5 seconds or more during engine rev. Fuel rail pressure remains at 18.5 MPa (185 bar, 188.7 kg/ cm², 2682.5 psi) or more for 0.3 seconds or more during engine rev. 	Harness or connectors (The fuel pump circuit is open or shorted.) High pressure fuel pump

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.
- Before performing the following procedure, check that the fuel tank is 1/8 full of fuel.

>> GO TO 2.

2.perform dtc confirmation procedure-i

(P)WITH CONSULT

- Start engine.
- Select "COOLAN TEMP/S" in "DATA MONITOR" mode of "ENGNE" using CONSULT.
- 3. Maintain the following condition for 5 seconds or more at idle.

COOLAN TEMP/S : 70°C (104°F) or more

4. Check 1st trip DTC.

WITH GST

Follow the above steps for "WITH CONSULT".

Is 1st trip DTC detected?

YES >> Proceed to <u>EC-191, "Diagnosis Procedure"</u>.

NO >> INSPECTION END

Diagnosis Procedure

1.CHECK HIGH PRESSURE FUEL PUMP POWER SUPPLY

- 1. Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector and ground.

EC

Α

D

F

Е

Н

ı

J

K

IVI

Ν

0

INFOID:0000000008835880

< DTC/CIRCUIT DIAGNOSIS >

E	+ CM	_	Voltage
Connector	Terminal		
F26	54	Ground	Battery voltage

Is inspection result normal?

YES >> GO TO 8. NO >> GO TO 2.

2.CHECK HIGH PRESSURE FUEL PUMP POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect fuel injector relay harness connector.
- Check the continuity between ECM harness connector and high pressure fuel pump relay harness connector.

+		_		
E	СМ	High pressure fuel pump re- lay		Continuity
Connector	Terminal	Connector	Terminal	
F26	54	E58	3	Existed

5. Also check harness for short to ground.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts

$3. {\sf CHECK}$ HIGH PRESSURE FUEL PUMP RELAY POWER SUPPLY (CONTACT SIDE)

Check the voltage between high pressure fuel pump relay harness connector and ground.

	+		
High pressure	fuel pump relay	_	Voltage
Connector	Terminal		
E58	5	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> Perform the trouble diagnosis for power supply circuit.

4. CHECK HIGH PRESSURE FUEL PUMP RELAY POWER SUPPLY (EXCITATION COIL SIDE)

- 1. Reconnect all harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Check the voltage between high pressure fuel pump relay harness connector and ground.

-				
		+		
	High pressure	fuel pump relay	_	Voltage
	Connector	Terminal		
_	E58	2	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5

 ${\bf 5.} {\tt CHECK\ HIGH\ PRESSURE\ FUEL\ PUMP\ RELAY\ POWER\ SUPPLY\ CIRCUIT\ (EXCITATION\ COIL\ SIDE)}$

1. Turn ignition switch OFF.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- 2. Disconnect high pressure fuel pump relay harness connector.
- Disconnect IPDM E/R harness connector.
- check the continuity between ipdm e/r harness connector and high pressure fuel pump harness connector

	+		_	
IPDN	M E/R	High pressure fuel pump re- lay		Continuity
Connector	Terminal	Connector Terminal		
E14	35	E58	2	Existed

Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

6.CHECK HIGH PRESSURE FUEL PUMP RELAY GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect high pressure fuel pump relay harness connector.
- 3. Check the continuity between high pressure fuel pump relay harness connector and ground.

	+		
High pressure fuel pump relay		_	Continuity
Connector	Terminal		
E58	1	Ground	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts.

.CHECK HIGH PRESSURE FUEL PUMP RELAY

Check the high pressure fuel pump relay. Refer to <u>EC-505</u>, "Component Inspection (High Pressure Fuel Pump Relay)".

Is inspection result normal?

YES >> GO TO 8.

NO >> Replace high pressure fuel pump relay. Refer to <u>PG-8</u>, "Standardized Relay".

8.CHECK HIGH PRESSURE FUEL PUMP CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector and high pressure fuel pump harness connector.
- 3. Check the continuity between ECM harness connector and high pressure fuel pump harness connector.

	+		_	
E	СМ	High pressure fuel pump		Continuity
Connector	Terminal	Connector	Terminal	
F26	55	F53	1	Existed
1 20	56	1 33	2	LXISIEU

4. Also check harness for short to ground and to power.

Is inspection result normal?

YES >> GO TO 9.

Revision: 2014 February

NO >> Repair or replace error-detected parts.

9. CHECK HIGH PRESSURE FUEL PUMP

Check the high pressure fuel pump. Refer to EC-194, "Component Inspection (High Pressure Fuel Pump)".

Е

Α

EC

Н

J

K

M

N

O

Р

2013 JUKE

< DTC/CIRCUIT DIAGNOSIS > [MR16DDT]

Is inspection result normal?

YES >> GO TO 10.

NO >> Replace high pressure fuel pump. Refer to <a>EM-46, "Exploded View".

10.check high pressure fuel pump installation condition

1. Turn ignition switch OFF.

2. Check that the high pressure fuel pump is installed with no backlash and looseness.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace error-detected parts.

11. CHECK CAMSHAFT

- 1. Remove camshaft. Refer to EM-84, "Exploded View".
- Check camshaft. Refer to <u>EM-88, "Inspection"</u>.

Is inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace camshaft. Refer to EM-84, "Exploded View".

Component Inspection (High Pressure Fuel Pump)

INFOID:0000000008835881

1. CHECK HIGH PRESSURE FUEL PUMP-1

- 1. Turn ignition switch OFF.
- 2. Disconnect high pressure fuel pump harness connector.
- 3. Check the resistance between high pressure fuel pump terminals.

+	-	Condition		Resistance
High pressu	ire fuel pump			(Approx.)
Terr	minal			, , ,
1	2	Temperature °C (°F)	20 – 30 (68 - 86)	0.46 - 0.56 Ω

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace high pressure fuel pump. Refer to EM-46, "Removal and Installation".

2.CHECK HIGH PRESSURE FUEL PUMP-2

(P)WITH CONSULT

- 1. Reconnect high pressure fuel pump harness connector.
- Start the engine.
- Check "FUEL PRES SEN V" in "DATA MONITOR" mode of "ECM" using CONSULT.

Monitor item	Condition	Voltage (Approx.)
FUEL PRES SEN V	Engine speed: idle	1,140 – 1,460 mV
TOLLT RES SEN V	Engine speed: Revving engine from idle to 4,000 rpm quickly	1,140 – 3,060 mV

NWITHOUT CONSULT

- 1. Reconnect high pressure fuel pump harness connector.
- 2. Start the engine.
- Check FRP sensor signal voltage.

	ECM			
Connector	+	_	Condition	Value (Approx.)
Connector	Term	ninal		(11 - 7
F25	18	44	Engine speed: idle	1,140 – 1,460 mV
1 25	10	77	Engine speed: Revving engine from idle to 4,000 rpm quickly	1,140 – 3,060 mV

< DTC/CIRCUIT DIAGNOSIS > [MR16DDT]

YES >> INSPECTION END

NO >> Replace high pressure fuel pump. Refer to EM-46, "Removal and Installation".

EC

Α

С

D

Е

F

G

Н

J

Κ

L

M

Ν

0

P0096 IAT SENSOR 2

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0096	IAT SENSOR 2 B1 [Intake air temperature (IAT) sensor 2 circuit range/performance]	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor 1, IAT sensor 2, ECT sensor, FTT sensor, and EOT sensor) shows that the voltage signal of the IAT sensor 2 is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the IAT sensor 2 circuit) IAT sensor 2

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 3.

NO >> GO TO 2.

2. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-197, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the IAT sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-197, "Diagnosis Procedure".

3. PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 60 minutes.
- 2. Move the vehicle to a cool place.

NOTF:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

3. Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

4. Start engine and let it idle for 5 minutes or more.

CAUTION:

Never turn ignition switch OFF during idling.

P0096 IAT SENSOR 2 [MR16DDT] < DTC/CIRCUIT DIAGNOSIS > Check 1st trip DTC. Α Is 1st trip DTC detected? >> Proceed to EC-197, "Diagnosis Procedure". YES NO >> INSPECTION END EC Component Function Check INFOID:0000000008274578 1.CHECK INTAKE AIR TEMPERATURE (IAT) SENSOR 2 Turn ignition switch OFF. 2. Disconnect turbocharger boost sensor harness connector. Check resistance between turbocharger boost sensor terminals as follows. D Turbocharger boost sensor Condition Resistance ($k\Omega$) Е **Terminal** 3 4 Temperature [°C (°F)] 25 (77) 1.80 - 2.20Is the inspection result normal? YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident". >> Proceed to EC-197, "Diagnosis Procedure". NO Diagnosis Procedure INFOID:0000000008274579 1. CHECK INTAKE AIR TEMPERATURE (IAT) SENSOR 2 Check intake air temperature sensor 2. Refer to EC-197, "Component Inspection". Is the inspection result normal? YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident". >> Replace turbocharger boost sensor (with intake temperature sensor 2). Refer to EM-30, NO "Exploded View". Component Inspection INFOID:0000000008274580 1.CHECK INTAKE AIR TEMPERATURE SENSOR 2Turn ignition switch OFF. Disconnect turbocharger boost sensor harness connector. Check resistance between turbocharger boost sensor terminals as follows. Turbocharger boost sensor Condition Resistance ($k\Omega$) **Terminals** 3 Temperature [°C (°F)] 25 (77) 1.80 - 2.20Ν Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace turbocharger boost sensor (with intake air temperature sensor 2). Refer to EM-27. <a href="Exploded View".

Revision: 2014 February EC-197 2013 JUKE

P0097, P0098 IAT SENSOR 2

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0097	IAT SENSOR 2 B1 (Intake air temperature sensor 2 circuit low input)	ECM detects the following status continuously for 5 seconds or more: A voltage signal transmitted from the intake air temperature sensor 2 is 0.085 V or less.	Harness or connectors (Intake air temperature sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is
P0098	IAT SENSOR 2 B1 (Intake air temperature sensor 2 circuit high input)	ECM detects the following status continuously for 5 seconds or more: A voltage signal transmitted from the intake air temperature sensor 2 is 4.84 V or more.	open or shorted.) (Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Crankshaft position sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) (Intake air temperature sensor 2 Turbocharger boost sensor Fuel rail pressure sensor Battery current sensor G sensor Crankshaft position sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TEST CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-198, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274582

1.CHECK INTAKE AIR TEMPERATURE SENSOR 2 POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF.

P0097, P0098 IAT SENSOR 2

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Disconnect turbocharger boost sensor harness connector.
- Turn ignition switch ON.
- Check the voltage between turbocharger boost sensor harness connector terminals.

Tu	14.16		
Connector	+	_	Voltage (Approx.)
Connector	Terr	, , ,	
F75	1	3	5 V

Is the inspection result normal?

>> GO TO 2. YES

NO >> GO TO 4.

2.CHECK INTAKE AIR TEMPERATURE SENSOR 2 SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between turbocharger boost sensor harness connector and ECM harness connector.

	+		_	
Turbocharge	r boost sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
F75	4	F26	88	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK INTAKE AIR TEMPERATURE SENSOR 2

Check intake air temperature sensor 2. Refer to EC-200, "Component Inspection".

Is the inspection result normal?

>> Check intermittent incident. Refer to GI-43, "Intermittent Incident". YES

NO >> Replace turbocharger boost sensor (with intake air temperature sensor 2). Refer to EM-27, "Exploded View".

f 4.CHECK INTAKE AIR TEMPERATURE SENSOR 2 POWER SUPPLY CIRCUIT-II

Check the voltage between turbocharger boost sensor harness connector terminal and ground.

+ Turbocharger boost sensor		1	Voltage (Approx.)
Connector	Terminal		(, , , , , , , , , , , , , , , , , , ,
F75	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 7.

${f 5.}$ CHECK INTAKE AIR TEMPERATURE SENSOR 2 GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between turbocharger boost sensor harness connector and ECM harness connector.

EC-199 Revision: 2014 February

EC

Α

D

Е

F

N

Р

2013 JUKE

	+	-		
Turbocharge	r boost sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F75	3	F25	44	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK ECM GROUND CIRCUIT

Check the continuity between ECM harness connector and ground.

ECM		Ground	Continuity	
Connector	Terminal	Ground	Continuity	
F25	1			
F25	2		Existed	
	123	Ground		
E18	124			
	127			

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

7.CHECK SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connectors and each sensor harness connectors
- 3. Check harness connector for short to power and short to ground, between the following terminals.

EC	CM	Sensor		
Connector	Terminal	Name	Connector	Terminal
		FRP sensor	F5	1
F25	39	EOP sensor	F43	3
	Turbocharger boost sensor	F75	1	
00	Battery current sensor	F52	1	
68 F26		G sensor	B32	3
F20	72	CMP sensor	F109	1
12		EVT control position sensor	F110	1
E18	118	APP sensor 2	E101	5

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

Component Inspection

1. CHECK INTAKE AIR TEMPERATURE SENSOR 2

- Turn ignition switch OFF.
- 2. Disconnect turbocharger boost sensor harness connector.
- Check resistance between turbocharger boost sensor terminals as follows.

INFOID:0000000008274583

P0097, P0098 IAT SENSOR 2

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Turbocharge	r boost sensor				
+	_	Condition	Resistance ($k\Omega$)		
Term	ninals				
3	4	Temperature [°C (°F)]	25 (77)	1.80 – 2.20	

EC

Α

Is the inspection result normal?

NO

YES >> INSPECTION END

C

>> Replace turbocharger boost sensor (with intake air temperature sensor 2). Refer to <u>EM-27.</u> "<u>Exploded View"</u>.

D

F

Е

G

Н

Κ

M

L

Ν

0

P0101 MAF SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0101 is displayed with other DTC, first perform the trouble diagnosis for other DTC.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0101	MAF SEN/CIRCUIT-B1 [Mass air flow (MAF) sensor circuit range/performance]	 A high voltage from the sensor is sent to ECM under light load driving condition. A low voltage from the sensor is sent to ECM under heavy load driving condition. 	 Harness or connectors (MAF sensor circuit is open or shorted.) Intake air leaks MAF sensor EVAP control system pressure sensor Intake air temperature sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to normal operating temperature.
- 2. Drive the vehicle for at least 5 seconds under the following conditions:

CAUTION:

Always drive vehicle at safe speed.

Selector lever	Suitable position
Vehicle speed	40 km/h (25 MPH) or more

NOTE:

- The gear must be fixed while driving the vehicle.
- Keep the accelerator pedal as steady as possible during cruising.
- 3. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-202, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274585

1. CHECK INTAKE SYSTEM

Check the following for connection.

- Air duct
- Vacuum hoses
- Intake air passage between air duct and intake manifold

Is the inspection result normal?

YES >> GO TO 2.

NO >> Reconnect the parts.

2.CHECK MASS AIR FLOW (MAF) SENSOR POWER SUPPLY

P0101 MAF SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Turn ignition switch OFF.
- 2. Disconnect MAF sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between MAF sensor harness connector and ground.

	+		
MAF sensor		_	Voltage
Connector	Terminal		
F4	5	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.check mass air flow (maf) sensor power supply circuit

- Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- Check the continuity between MAF sensor harness connector and IPDM E/R harness connector.

	+		_	
MAF	sensor	IPDM E/R		Continuity
Connector	Terminal	Connector Terminal		
F4	5	E14	35	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

4. CHECK MAF SENSOR GROUND CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between MAF sensor harness connector and ECM harness connector.

	+		_	
MAF	sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
F4	4	F25	9	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

>> Repair or replace error-detected parts. NO

${f 5}$.CHECK MAF SENSOR INPUT SIGNAL CIRCUIT

1. Check the continuity between MAF sensor harness connector and ECM harness connector.

	+		_	
MAF	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F4	3	F25	13	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 6.

>> Repair or replace error-detected parts NO

EC-203 Revision: 2014 February 2013 JUKE

EC

Α

Е

K

Ν

< DTC/CIRCUIT DIAGNOSIS >

6. CHECK INTAKE AIR TEMPERATURE SENSOR 1

Check the intake air temperature sensor 1. Refer to EC-215, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace MAF sensor (with intake air temperature sensor 1). Refer to EM-25, "Exploded View".

7. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Check the EVAP control system pressure sensor. Refer to EC-349, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-26, "2WD : Exploded View"</u>.

8.CHECK MAF SENSOR

Check the MAF sensor. Refer to EC-204, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace MAF sensor. Refer to EM-25, "Exploded View".

Component Inspection

INFOID:0000000008274586

1. CHECK MASS AIR FLOW SENSOR-I

(P)With CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode of "ENGINE".
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
MAS AT SE-BT	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V
Idle to about 4,000 rpm		0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector and ground.

	ECM			
Connector	+	_	Condition	Voltage
Connector	Terminal			
			Ignition switch ON (Engine stopped.)	Approx. 0.4 V
F25	13	9	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
125	13		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V
		Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*	

*: Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK FOR THE CAUSE OF UNEVEN AIR FLOW THROUGH MASS AIR FLOW SENSOR

- Turn ignition switch OFF.
- Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.
- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Intake valve deposits
- Improper specification of intake air system parts

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK MASS AIR FLOW SENSOR-II

(P)With CONSULT

- 1. Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- Connect CONSULT and select "DATA MONITOR" mode of "ENGINE".
- 4. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
MA2 A/F 2E-B1	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V
	Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

- Repair or replace malfunctioning part.
- Start engine and warm it up to normal operating temperature.
- Check the voltage between ECM harness connector and ground.

ECM				
Connector	+	_	Condition	Voltage
Connector	Terminal			
	13 9	Ignition switch ON (Engine stopped.)	Approx. 0.4 V	
F25		0	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
F25		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V	
			Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4.CHECK MASS AIR FLOW SENSOR-III

With CONSULT

EC-205 Revision: 2014 February 2013 JUKE

EC

Α

D

Е

Н

Ν

< DTC/CIRCUIT DIAGNOSIS >

- Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode of "ENGINE".
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
MAS A/F SE-B1	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V
	Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Without CONSULT

- Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector and ground.

ECM				
Connector	+	_	Condition	Voltage
Connector	Terminal			
	13 9	Ignition switch ON (Engine stopped.)	Approx. 0.4 V	
F25		0	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
F23		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V	
			Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Clean or replace mass air flow sensor. Refer to EM-25, "Exploded View".

P0102, P0103 MAF SENSOR

DTC Logic INFOID:0000000008274587

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0102	MAF SEN/CIRCUIT-B1 (Mass air flow sensor circuit low input)	An excessively low voltage from the mass air flow sensor is sent to ECM.	Harness or connectors (Mass air flow sensor circuit is open or shorted.) Intake air leaks Mass air flow sensor
P0103	MAF SEN/CIRCUIT-B1 (Mass air flow sensor circuit high input)	An excessively high voltage from the mass air flow sensor is sent to ECM.	Harness or connectors (Mass air flow sensor circuit is open or shorted.) Mass air flow sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

Which DTC is detected?

P0102 >> GO TO 2.

P0103 >> GO TO 3.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0102

- Start engine and wait at least 5 seconds.
- Check DTC.

Is DTC detected?

>> Proceed to EC-207, "Diagnosis Procedure".

>> INSPECTION END NO

3.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0103-I

- Turn ignition switch ON and wait at least 5 seconds.
- Check DTC.

Is DTC detected?

YES >> Proceed to EC-207, "Diagnosis Procedure".

NO >> GO TO 4.

f 4.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0103-II

- Start engine and wait at least 5 seconds.
- Check DTC.

Is DTC detected?

>> Proceed to EC-207, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1.INSPECTION START Confirm the detected DTC.

Which DTC is detected?

P0102 >> GO TO 2.

P0103 >> GO TO 3.

EC-207 Revision: 2014 February 2013 JUKE

EC

Α

D

Е

F

Н

K

M

Ν

INFOID:0000000008274588

< DTC/CIRCUIT DIAGNOSIS >

2.CHECK INTAKE SYSTEM

Check the following for connection.

- Air duct
- Vacuum hoses
- · Intake air passage between air duct to intake manifold

Is the inspection result normal?

YES >> GO TO 3.

NO >> Reconnect the parts. Refer to EM-25, "Exploded View".

3.CHECK MAF SENSOR POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect mass air flow (MAF) sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between MAF sensor harness connector and ground.

	+			
MAF	sensor	_	Voltage	
Connector	Terminal			
F4	5	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 5. NO >> GO TO 4.

4. CHECK MAF SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between MAF sensor harness connector and IPDM E/R harness connector.

	+		_	
MAF sensor		IPDM E/R		Continuity
Connector	Terminal	Connector Terminal		
F4	5	E14	35	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 5}.$ CHECK MAF SENSOR GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between MAF sensor harness connector and ECM harness connector.

+				
MAF sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		
F4	4	F25	9	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK MAF SENSOR INPUT SIGNAL CIRCUIT

1. Check the continuity between MAF sensor harness connector and ECM harness connector.

INFOID:0000000008274589

Α

EC

D

Е

+				
MAF sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		
F4	3	F25	13	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK MAF SENSOR

Check the MAF sensor. Refer to EC-204, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace mass air flow sensor. Refer to EM-25, "Exploded View".

Component Inspection

1. CHECK MASS AIR FLOW SENSOR-I

(P)With CONSULT

- 1. Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode of "ENGINE".
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
MAS A/F SE-B1	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V
	Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.

4. Check the voltage between ECM harness connector and ground.

ECM				
Connector	+	_	Condition	Voltage
Connector	Terminal			
	42	Ignition switch ON (Engine stopped.)	Approx. 0.4 V	
F25		13 9	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
125	13		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V
			Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

Revision: 2014 February EC-209 2013 JUKE

M

0

< DTC/CIRCUIT DIAGNOSIS >

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK FOR THE CAUSE OF UNEVEN AIR FLOW THROUGH MASS AIR FLOW SENSOR

- Turn ignition switch OFF.
- 2. Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.
- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Intake valve deposits
- Improper specification of intake air system parts

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK MASS AIR FLOW SENSOR-II

(P)With CONSULT

- 1. Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Connect CONSULT and select "DATA MONITOR" mode of "ENGINE".
- 4. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
MAS AVE SE-DI	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V
	Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

- 1. Repair or replace malfunctioning part.
- Start engine and warm it up to normal operating temperature.
- 3. Check the voltage between ECM harness connector and ground.

	ECM			
Connector	+	_	Condition	Voltage
Connector	Terminal			
		Ignition switch ON (Engine stopped.)	Approx. 0.4 V	
F25	42	13 9	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
F25	13		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V
			Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4.CHECK MASS AIR FLOW SENSOR-III

(P)With CONSULT

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.

P0102, P0103 MAF SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode of "ENGINE".
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
-	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
WAS AIT SE-BI	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.5 - 2.0 V
	Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

- Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector and ground.

	ECM			
Connector	Connector + - Terminal		Condition	Voltage
Connector				
			Ignition switch ON (Engine stopped.)	Approx. 0.4 V
F25	13	Idle (Engine is warmed-up to normal operating temperature.) 2,500 rpm (Engine is warmed-up to normal operating temperature.)	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2 V
123	13		1.5 - 2.0 V	
			Idle to about 4,000 rpm	0.9 - 1.2 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Clean or replace mass air flow sensor. Refer to EM-25, "Exploded View".

EC

Α

C

D

Е

F

Н

K

L

M

Ν

0

P0111 IAT SENSOR 1

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0111	IAT SENSOR 1 B1 [Intake air temperature (IAT) sensor 1 circuit range/performance]	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor 1, IAT sensor 2, ECT sensor, FTT sensor, and EOT sensor) shows that the voltage signal of the IAT sensor 1 is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the IAT sensor 1 circuit) IAT sensor 1

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 3.

NO >> GO TO 2.

2. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-213, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the IAT sensor 1 circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-213, "Diagnosis Procedure".

3. PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 60 minutes.
- 2. Move the vehicle to a cool place.

NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

3. Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

4. Start engine and let it idle for 5 minutes or more.

CAUTION:

Never turn ignition switch OFF during idling.

P0111 IAT SENSOR 1 [MR16DDT] < DTC/CIRCUIT DIAGNOSIS > Check 1st trip DTC. Α Is 1st trip DTC detected? >> Proceed to EC-213, "Diagnosis Procedure". YES NO >> INSPECTION END EC Component Function Check INFOID:0000000008274591 1.CHECK INTAKE AIR TEMPERATURE (IAT) SENSOR 1 Turn ignition switch OFF. 2. Disconnect mass air flow sensor harness connector. Check resistance between mass air flow sensor terminals as follows. D Mass air flow sensor Condition Resistance ($k\Omega$) Е **Terminal** 1 2 Temperature [°C (°F)] 25 (77) 1.800 - 2.200F Is the inspection result normal? YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident". >> Proceed to EC-213, "Diagnosis Procedure". NO Diagnosis Procedure INFOID:0000000008274592 1. CHECK INTAKE AIR TEMPERATURE (IAT) SENSOR 1 Check intake air temperature sensor 1. Refer to EC-213, "Component Inspection". Is the inspection result normal? YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident". NO >> Replace mass air flow sensor (with intake air temperature sensor 1). Refer to EM-25, "Exploded View". Component Inspection INFOID:0000000008274593 ${f 1}$.CHECK INTAKE AIR TEMPERATURE SENSOR 1 Turn ignition switch OFF. Disconnect mass air flow sensor harness connector. Check resistance between mass air flow sensor terminals as per the following. Mass air flow sensor Condition Resistance ($k\Omega$) **Terminals** 2 Temperature [°C (°F)] 25 (77) 1.800 - 2.200 N Is the inspection result normal?

YES >> INSPECTION END

NO

>> Replace mass air flow sensor (with intake air temperature sensor 1). Refer to EM-25, "Exploded View".

EC-213 Revision: 2014 February 2013 JUKE

P0112, P0113 IAT SENSOR 1

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause	
P0112	IAT SEN/CIRCUIT- B1 (Intake air temperature sensor 1 circuit low input)	An excessively low voltage from the intake air temperature sensor 1 is sent to ECM.	Harness or connectors (Intake air temperature sensor 1 circuit is)	
P0113	IAT SEN/CIRCUIT- B1 (Intake air temperature sensor 1 circuit high input)	An excessively high voltage from the intake air temperature sensor 1 is sent to ECM.	open or shorted.) • Intake air temperature sensor 1	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-214, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274595

1. CHECK INTAKE AIR TEMPERATURE SENSOR 1 POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor (with intake air temperature sensor 1) harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between mass air flow sensor harness connector and ground.

	+		Valtana
MAF	sensor		Voltage (Approx.)
Connector Terminal			, , ,
F4	2	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK INTAKE AIR TEMPERATURE SENSOR 1 POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between mass air flow sensor harness connector and ECM harness connector.

+			_	
MAF	MAF sensor		ECM	
Connector	Terminal	Connector	Terminal	
F4	2	F25	17	Existed
			_	

4. Also check harness for short to ground.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 3.}$ CHECK INTAKE AIR TEMPERATURE SENSOR 1 GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between mass air flow sensor harness connector and ECM harness connector.

+			_	
MAF	MAF sensor		ECM	
Connector	Terminal	Connector	Terminal	
F4	1	F25	9	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

f 4 .CHECK INTAKE AIR TEMPERATURE SENSOR 1

Check the intake air temperature sensor 1. Refer to EC-215, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace mass air flow sensor (with intake air temperature sensor 1). Refer to EM-25, "Exploded View".

Component Inspection

1. CHECK INTAKE AIR TEMPERATURE SENSOR 1

- Turn ignition switch OFF.
- Disconnect mass air flow sensor harness connector.
- Check resistance between mass air flow sensor terminals as per the following.

Mass air flow sensor				
+	_	Condition		Resistance (k Ω)
Tern	Terminals			
1	2	Temperature [°C (°F)]	25 (77)	1.800 - 2.200

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor 1). Refer to EM-25, "Exploded View".

EC

Α

D

Е

INFOID:0000000008274596

Ν

P0116 ECT SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0116	ECT SEN/CIRC [Engine coolant temperature (ECT) sensor circuit range/per- formance]	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor 1, IAT sensor 2, ECT sensor, FTT sensor, and EOT sensor) shows that the voltage signal of the ECT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the ECT sensor circuit) ECT sensor

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 3.

NO >> GO TO 2.

2. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-217, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the ECT sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-217, "Diagnosis Procedure".

3.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 60 minutes.
- Move the vehicle to a cool place.

NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

3. Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

4. Start engine and let it idle for 5 minutes or more.

CAUTION:

Never turn ignition switch OFF during idling.

P0116 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Α

EC

D

Е

Н

M

Ν

Р

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-217, "Diagnosis Procedure".

NO >> INSPECTION END


Component Function Check

INFOID:0000000008274598

1. CHECK ENGINE COOLANT TEMPERATURE (ECT) SENSOR

- 1. Turn ignition switch OFF.
- Disconnect ECT sensor harness connector.
- Remove ECT sensor. Refer to <u>CO-24, "Exploded View"</u>.
- 4. Check resistance between ECT sensor terminals by heating with hot water as shown in the figure.

ECT s	sensor			
+	_	Condition		Resistance (k Ω)
Terr	ninal			
			20 (68)	2.37 – 2.63
1	2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
	(,)1	(- /1	90 (194)	0.236 - 0.260

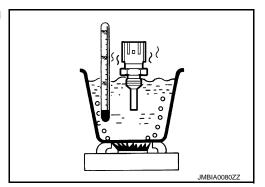

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43. "Intermittent Incident".

NO >> Proceed to <u>EC-217</u>, "<u>Diagnosis Procedure</u>".

Diagnosis Procedure

INFOID:0000000008274599

1. CHECK ENGINE COOLANT TEMPERATURE (ECT) SENSOR

Check ECT sensor. Refer to EC-217, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace ECT sensor. Refer to CO-24, "Exploded View".


Component Inspection

INFOID:0000000008274600

1. CHECK ENGINE COOLANT TEMPERATURE (ECT) SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect ECT sensor harness connector.
- 3. Remove ECT sensor.
- 4. Check resistance between ECT sensor terminals by heating with hot water as shown in the figure.

ECT sensor				Danistana	
+	ı	Condition		n Resistance $(k\Omega)$	
Terr	ninal			,	
			20 (68)	2.37 - 2.63	
1	2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00	
			90 (194)	0.236 - 0.260	

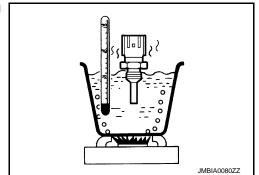

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor. Refer to EM-96, "Exploded View".

P0117, P0118 ECT SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible Cause
P0117	ECT SEN/CIRC (Engine coolant temperature sensor circuit low input)	An excessively low voltage from the engine coolant temperature sensor is sent to ECM.	Harness or connectors (Engine coolant temperature sensor cir-
P0118	ECT SEN/CIRC (Engine coolant tempera- ture sensor circuit high in- put)	An excessively high voltage from the engine coolant temperature sensor is sent to ECM.	cuit is open or shorted.) • Engine coolant temperature sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check DTC.

Is DTC detected?

YES >> Proceed to EC-218, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:00000000008274602

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR POWER SUPPLY

- 1. Turn ignition switch OFF.
- Disconnect engine coolant temperature (ECT) sensor harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between ECT sensor harness connector and ground.

	+		Voltago	
ECT :	sensor		Voltage (Approx.)	
Connector	Terminal		, , ,	
F28	1	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK ENGINE COOLANT TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between ECT sensor harness connector and ECM harness connector.

	+		_	
ECT :	sensor	E	СМ	Continuity
Connector	Terminal	Connector	Terminal	
F28	1	F25	14	Existed

Also check harness for short to ground.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 3.}$ CHECK ENGINE COOLANT TEMPERATURE SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between ECT sensor harness connector and ECM harness connector.

	+		_	
ECT sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F28	2	F25	10	Existed

Also check harness for short to ground to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Check the engine coolant temperature sensor. Refer to EC-217, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".


NO >> Replace engine coolant temperature sensor. Refer to EM-96, "Exploded View".

Component Inspection

${\bf 1.} {\sf CHECK\ ENGINE\ COOLANT\ TEMPERATURE\ (ECT)\ SENSOR}$

- Turn ignition switch OFF.
- 2. Disconnect ECT sensor harness connector.
- Remove ECT sensor.
- Check resistance between ECT sensor terminals by heating with hot water as shown in the figure.

ECT :	sensor	Condition		5
+	_			Resistance (kΩ)
Terr	ninal			, ,
			20 (68)	2.37 - 2.63
1	2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
			90 (194)	0.236 - 0.260

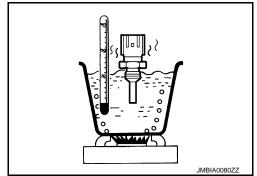

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor. Refer to EM-96, "Exploded View".

EC-219 Revision: 2014 February 2013 JUKE

EC

Α

D

Е

INFOID:0000000008274603

Ν

P011C IAT SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P011C	CAT/IAT CRRLTN B1 (Charge air temperature/Intake air temperature correlation)	 ECM detects a state that the temperature difference between intake air temperature sensor 1 and 2 remains 20°C (36°F) or less continuously for 5 seconds or more. ECM detects a state that the difference between the temperature of intake air temperature sensor 2 and its estimated temperature calculated by ECM from intake air temperature 1 and turbocharger boost sensor remains 106°C (191°F) or more continuously for 5 seconds or more. 	 Harness or connectors (High or low resistance in the intake air temperature sensor 1 circuit) (High or low resistance in the intake air temperature sensor 2 circuit) Intake air temperature sensor 1 Intake air temperature sensor 2

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TEST CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-220, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274605

1.CHECK INTAKE AIR TEMPERATURE SENSOR 2

Check intake air temperature sensor 2. Refer to <u>EC-221, "Component Inspection (Intake Air Temperature Sensor 2)"</u>.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace turbocharger boost sensor (with intake air temperature sensor 2). Refer to EM-30, "Exploded View".

2.CHECK INTAKE AIR TEMPERATURE SENSOR 1

Check intake air temperature sensor 1. Refer to <u>EC-221</u>, "Component Inspection (Intake Air Temperature Sensor 1)".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace mass air flow sensor (with intake air temperature sensor 1). Refer to EM-25, "Exploded View".

P011C IAT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Component Inspection (Intake Air Temperature Sensor 1)

INFOID:0000000008274606

1. CHECK INTAKE AIR TEMPERATURE SENSOR 1

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector.
- 3. Check resistance between mass air flow sensor terminals as follows.

	С

Α

EC

D

Е

Н

Mass air flo	ow sensor 1	Condition		
+	_			Resistance ($k\Omega$)
Terr	minal			
1	2	Temperature [°C (°F)]	25 (77)	1.80 – 2.20

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor 1). Refer to EM-25, "Exploded View".

Component Inspection (Intake Air Temperature Sensor 2)

INFOID:0000000008274607

1. CHECK INTAKE AIR TEMPERATURE SENSOR 2

- Turn ignition switch OFF.
- 2. Disconnect turbocharger boost sensor harness connector.
- 3. Check resistance between turbocharger boost sensor terminals as follows.

Turbocharge	r boost sensor			
+	_	Condition		Resistance ($k\Omega$)
Terr	minal			
3	4	Temperature [°C (°F)]	25 (77)	1.80 – 2.20

Is the inspection result normal?

YES >> INSPECTION END

NO

>> Replace turbocharger boost sensor (with intake air temperature sensor 2). Refer to <u>EM-30</u>, <u>"Exploded View"</u>.

K

L

Ν

Р

Revision: 2014 February

P0122, P0123 TP SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0122 or P0123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to <u>EC-392</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0122	TP SEN 2/CIRC-B1 (Throttle position sensor 2 circuit low input)	An excessively low voltage from the TP sensor 2 is sent to ECM.	Harness or connectors (TP sensor 2 circuit is open or shorted.)
P0123	TP SEN 2/CIRC-B1 (Throttle position sensor 2 circuit high input)	An excessively high voltage from the TP sensor 2 is sent to ECM.	Electric throttle control actuator (TP sensor 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2.perform dtc confirmation procedure

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Proceed to EC-222, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274609

1. CHECK THROTTLE POSITION SENSOR 2 POWER SUPPLY

- 1. Turn ignition switch OFF.
- Disconnect electric throttle control actuator harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between electric throttle control actuator harness connector and ground.

	+		Maltana
Electric throttle control actuator		_	Voltage (Approx.)
Connector	Terminal		(11 /
F29	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2.CHECK THROTTLE POSITION SENSOR 2 POWER SUPPLY CIRCUIT

P0122, P0123 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness con-

	+		_	
	e control actu- tor	E	СМ	Continuity
Connector	Terminal	Connector	Terminal	
F29	1	F26	62	Existed

Also check harness for short to power.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.CHECK THROTTLE POSITION SENSOR 2 GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness con-

	+		_	
	e control actu- tor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F29	4	F26	74	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

f 4.CHECK THROTTLE POSITION SENSOR 2 INPUT SIGNAL CIRCUIT

Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

	+		_	
	le control actu- tor	E	СМ	Continuity
Connector	Terminal	Connector	Terminal	
F29	3	F26	76	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

${f 5.}$ CHECK THROTTLE POSITION SENSOR

Check the throttle position sensor. Refer to EC-223, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

>> Replace electric throttle control actuator. Refer to EM-27, "Exploded View". NO

Component Inspection

 ${f 1}$.CHECK THROTTLE POSITION SENSOR

EC-223

Α

EC

Е

N

Р

INFOID:0000000008274610

Revision: 2014 February

P0122, P0123 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Perform "Throttle Valve Closed Position Learning". Refer to EC-132, "Work Procedure".
- 4. Turn ignition switch ON.
- 5. Set selector lever to D (CVT) or 1st (M/T) position.
- 6. Check the voltage between ECM harness connector terminals as per the following conditions.

ECM						
Connector	+	_	Condition Voltage		Condition Voltage	
Connector	Terr	minal				
	75			Fully released	More than 0.36V	
F26	73	74	74 Accelerato pedal	Accelerator	Fully depressed	Less than 4.75V
F20	76			pedal	Fully released	Less than 4.75V
	70		Fully depressed	More than 0.36V		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

P0125 ECT SENSOR

DTC Logic INFOID:0000000008274611

DTC DETECTION LOGIC

NOTE:

- If DTC P0125 is displayed with P0116, first perform the trouble diagnosis for DTC P0116. Refer to EC-216, "DTC Logic".
- If DTC P0125 is displayed with P0117 or P0118, first perform the trouble diagnosis for DTC P0117 or P0118. Refer to EC-218, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0125	ECT SENSOR (Insufficient engine coolant temperature for closed loop fuel control)	 Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine. Engine coolant temperature is insufficient for closed loop fuel control. 	Harness or connectors (High resistance in the circuit) Engine coolant temperature sensor Thermostat

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.CHECK ENGINE COOLANT TEMPERATURE SENSOR FUNCTION

(P)With CONSULT

- 1. Turn ignition switch ON.
- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Check that "COOLAN TEMP/S" is above 10°C (50°F).

@With GST

Follow the procedure "With CONSULT" above.

Is it above 5°C (41°F)?

YES >> INSPECTION END

NO >> GO TO 3.

$oldsymbol{3}.$ PERFORM DTC CONFIRMATION PROCEDURE

With CONSULT

- 1. Start engine and run it for 65 minutes at idle speed.
- Check 1st tip DTC.

If "COOLAN TEMP/S" indication increases to more than 10°C (50°F) within 65 minutes, stop engine because the test result will be OK.

CAUTION:

Be careful not to overheat engine.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-226, "Diagnosis Procedure".

NO >> INSPECTION END

Α

EC

D

Е

F

Н

K

M

Ν

Р

EC-225 Revision: 2014 February

2013 JUKE

Diagnosis Procedure

INFOID:0000000008274612

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Check the engine coolant temperature sensor. Refer to EC-226, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

2. CHECK THERMOSTAT OPERATION

When the engine is cold [lower than 70°C (158°F)] condition, grasp lower radiator hose and confirm the engine coolant does not flow.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace thermostat. Refer to CO-22. "Removal and Installation".


Component Inspection

INFOID:0000000008274613

1. CHECK ENGINE COOLANT TEMPERATURE (ECT) SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect ECT sensor harness connector.
- 3. Remove ECT sensor.
- 4. Check resistance between ECT sensor terminals by heating with hot water as shown in the figure.

ECT :	sensor			Desire
+	-	Condition	Resistance $(k\Omega)$	
Terr	minal			, ,
			20 (68)	2.37 - 2.63
1	2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
			90 (194)	0.236 - 0.260

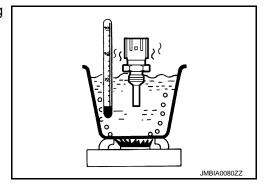

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor. Refer to EM-96, "Exploded View".

P0127 IAT SENSOR

DTC Logic

DTC DETECTION LOGIC

EC

D

Е

Н

L

N

Α

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0127	IAT SENSOR-B1 (Intake air temperature too high)	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.	Harness or connectors (Intake air temperature sensor 1 circuit is open or shorted) Intake air temperature sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- Wait until engine coolant temperature is less than 96°C (205°F)
- Turn ignition switch ON.
- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Check the engine coolant temperature.
- If the engine coolant temperature is not less than 96°C (205°F), turn ignition switch OFF and cool down engine.

NOTE:

Perform the following steps before engine coolant temperature is above 96°C (205°F).

- 2. Turn ignition switch ON.
- 3. Select "DATA MONITOR" mode of "ENGINE" using CONSULT
- 4. Start engine.
- 5. Hold vehicle speed at more than 70 km/h (43 MPH) for 100 consecutive seconds.

CAUTION:

Always drive vehicle at a safe speed.

6. Check 1st trip DTC.

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-227, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274615

1. CHECK INTAKE AIR TEMPERATURE SENSOR 1

Check the intake air temperature sensor 1. Refer to <u>EC-228, "Component Inspection"</u>.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

Revision: 2014 February

P0127 IAT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

NO >> Replace mass air flow sensor (with intake air temperature sensor 1). Refer to EM-25, "Exploded View".

Component Inspection

INFOID:0000000008274616

1. CHECK INTAKE AIR TEMPERATURE SENSOR 1

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector.
- 3. Check resistance between mass air flow sensor terminals as per the following.

•	Mass air f	low sensor			
	+	-	Condition		Resistance (k Ω)
•	Tern	ninals			
•	1	2	Temperature [°C (°F)]	25 (77)	1.800 - 2.200

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor 1). Refer to EM-25, "Exploded View.

P0128 THERMOSTAT FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0128 THERMOSTAT FUNCTION

DTC Logic INFOID:0000000008274617

DTC DETECTION LOGIC

NOTE:

If DTC P0128 is displayed with DTC P0300, P0301, P0302, P0303 or P0304, first perform the trouble diagnosis for P0300, P0301, P0302, P0303, P0304. Refer to EC-305, "DTC Logic".

Engine coolant temperature has not risen enough to open the thermostat even though the engine has run long

This is due to a leak in the seal or the thermostat being stuck open.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0128	THERMSTAT FNCTN [Coolant thermostat (coolant temperature below thermostat regulating temperature)]	The engine coolant temperature does not reach to specified temperature even though the engine has run long enough.	Thermostat Leakage from sealing portion of thermostat Engine coolant temperature sensor

DTC CONFIRMATION PROCEDURE

NOTE:

Never refuel before and during the following procedure.

1.PRECONDITIONING-I

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.PRECONDITIONING-II

(P)With CONSULT

- Turn ignition switch ON.
- Check the following conditions:

Ambient temperature	-10°C (14°F) or more
A/C switch	OFF
Blower fan switch	OFF

- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Check the following conditions:

COOLAN TEMP/S	-10°C - 52°C (14 - 126°F)

Is the condition satisfied?

YES >> GO TO 3.

NO >> 1. Satisfy the condition.

2. GO TO 3.

3.perform dtc confirmation procedure-i

(P)With CONSULT

- 1. Start engine.
- Drive the vehicle until the following condition is satisfied.

Revision: 2014 February

Always drive vehicle at safe speed.

STEP 1

EC-229

2013 JUKE

EC

Α

D

Е

F

N

Р

Drive the vehicle under the conditions instructed below until the difference between "COOLAN TEMP/S" and "FUEL T/TMP SE" becomes at least 23°C (41°F).

COOLAN TEMP/S	65°C (149°F) or less	
FUEL T/TMP SE	Less than the value calculated by subtracting 23°C (41°F) from "COOLAN TEMP/S".*	
*: Example		
COOLAN TEMP/S	FUEL T/TMP SE	
70°C (158°F)	47°C (117°F) or less	
65°C (149°F)	42°C (108°F) or less	
60°C (140°F)	37°C (99°F) or less	

- STEP 2

Drive the vehicle at 50 km/h (32 MPH) or more with the difference between "COOLAN TEMP/S" and "FUEL T/TMP SE" maintained at 23°C (41°F) or more.

NOTE:

Keep the accelerator pedal as steady as possible during cruising.

STEP 3

Drive the vehicle at 50 km/h (32 MPH) or more until "COOLAN TEMP/S" increases by 6°C (11°F).

NOTE:

Keep the accelerator pedal as steady as possible during cruising.

Is the condition satisfied?

YES >> GO TO 4. NO >> GO TO 1.

4.PERFORM DTC CONFIRMATION PROCEDURE-II

(P)With CONSULT

1. Drive the vehicle until the following condition is satisfied.

CAUTION:

Always drive vehicle at safe speed.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-230, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274618

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Check the engine coolant temperature sensor. Refer to EC-230, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

2.CHECK THERMOSTAT

Check the thermostat. Refer to CO-23, "Inspection".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace thermostat. Refer to CO-22, "Removal and Installation".

Component Inspection

INFOID:0000000008274619

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR


P0128 THERMOSTAT FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- 3. Remove engine coolant temperature sensor.
- 4. Check resistance between engine coolant temperature sensor terminals by heating with hot water as shown in the figure.

Ū	oolant tem- e sensor	0		5
+	_	Condition		Resistance (kΩ)
Terr	minal			
		T	20 (68)	2.37 - 2.63
1	2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
		,,	90 (194)	0.236 - 0.260

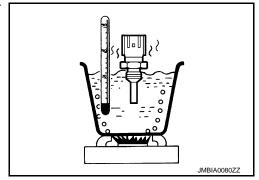

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

EC

Α

С

D

Е

F

Н

ı

K

L

M

Ν

0

Р

P0130 A/F SENSOR 1

DTC Logic

DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal fluctuates according to fuel feedback control.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition		Possible Cause
P0130	A/F SENSOR1 (B1) [Air fuel ratio (A/F) sensor 1	A)	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly in the range other than approx. 2.2 V.	Harness or connectors (A/F sensor 1 circuit is open or shorted.)
	circuit]	B)	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 2.2 V.	A/F sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Let it idle for 2 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-233, "Diagnosis Procedure".

NO-1 >> With CONSULT: GO TO 3.

NO-2 >> Without CONSULT: GO TO 7.

3.CHECK AIR FUEL RATIO (A/F) SENSOR 1 FUNCTION

- 1. Select "A/F SEN1 (B1)" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Check "A/F SEN1 (B1)" indication.

Does the indication fluctuates around 2.2 V?

YES >> GO TO 4.

NO >> Proceed to <u>EC-233</u>, "<u>Diagnosis Procedure</u>".

f 4. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-I

- Select "A/F SEN1 (B1) P1276" of "A/F SEN1" in "DTC WORK SUPPORT" mode of "ENGINE" using CON-SULT.
- 2. Touch "START".
- When the following conditions are met, "TESTING" will be displayed on the CONSULT screen.

ENG SPEED	1,150 - 3,200 rpm
VHCL SPEED SE	More than 64 km/h (40 mph)
B/FUEL SCHDL	1.0 - 8.0 msec
Selector lever	D position (CVT) 5th position (M/T)

P0130 A/F SENSOR 1

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS > If "TESTING" is not displayed after 20 seconds, retry from step 2. CAUTION: Α Always drive vehicle at a safe speed. Is "TESTING" displayed on CONSULT screen? YES >> GO TO 5. EC NO >> Check A/F sensor 1 function again. GO TO 3. 5.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-II Release accelerator pedal fully. NOTE: Never apply brake during releasing the accelerator pedal. D Which does "TESTING" change to? COMPLETED>>GO TO 6. OUT OF CONDITION>>Retry DTC CONFIRMATION PROCEDURE. GO TO 4. Е $oldsymbol{6}$.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-III Touch "SELF-DIAG RESULT" Which is displayed on CONSULT screen? F YES >> INSPECTION END NO >> Proceed to EC-233, "Diagnosis Procedure". 7 .PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B Perform Component Function Check. Refer to EC-233, "Component Function Check". NOTE: Use component function check to check the overall function of the A/F sensor 1 circuit. During this check, a 1st trip DTC might not be confirmed. Is the inspection result normal? YES >> INSPECTION END >> Proceed to EC-233, "Diagnosis Procedure". NO Component Function Check INFOID:0000000008274621 1. PERFORM COMPONENT FUNCTION CHECK With GST K 1. Start engine and warm it up to normal operating temperature. 2. Drive the vehicle at a speed of 80 km/h (50 MPH) for a few minutes in the suitable gear position. 3. Shift the selector lever to the D position (CVT) or 5th position (M/T), then release the accelerator pedal fully until the vehicle speed decreases to 50 km/h (31 MPH). **CAUTION:** Always drive vehicle at a safe speed. NOTE: M Never apply brake during releasing the accelerator pedal. 4. Repeat steps 2 to 3 for five times. 5. Stop the vehicle and turn ignition switch OFF. N 6. Wait at least 10 seconds and restart engine. Repeat steps 2 to 3 for five times. 7. 8. Stop the vehicle. Check 1st trip DTC. Is 1st trip DTC detected? YES >> Proceed to EC-233, "Diagnosis Procedure". NO >> INSPECTION END Diagnosis Procedure INFOID:0000000008274622 1.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY 1. Turn ignition switch OFF.

Revision: 2014 February EC-233

Disconnect A/F sensor 1 harness connector.

Turn ignition switch ON.

2.

< DTC/CIRCUIT DIAGNOSIS >

4. Check the voltage between A/F sensor 1 harness connector and ground.

	+		
A/F sensor 1		_	Voltage
Connector	Terminal		
F70	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and IPDM E/R harness connector.

+		-		
A/F se	ensor 1	IPDN	/I E/R	Continuity
Connector	Terminal	Connector	Terminal	
F70	4	E14	36	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check a/f sensor 1 input signal circuit

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

		+		_	
A/F sensor 1		ECM		Continuity	
	Connector	Terminal	Connector	Terminal	
	F70	1	F25	21	Existed
	170	2	125	25	LAISTEU

 Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

	+		
A/F se	ensor 1	_	Continuity
Connector	Terminal		
F70	1	Ground	Not existed
170	2	Glound	Not existed

	+		
E	СМ	_	Continuity
Connector	Terminal		
F25	21	Ground	Not existed
123	25	Gloulia	Not existed

5. Also check harness for short to power.

Is the inspection result normal?

P0130 A/F SENSOR 1	
< DTC/CIRCUIT DIAGNOSIS > [MR16DDT]	
YES >> GO TO 4. NO >> Repair or replace error-detected parts.	А
4.CHECK INTERMITTENT INCIDENT	Α
Perform GI-43, "Intermittent Incident".	FC
Is the inspection result normal?	EC
YES >> GO TO 5. NO >> Repair or replace error-detected parts.	
5.REPLACE AIR FUEL RATIO (A/F) SENSOR 1	С
Replace air fuel ratio (A/F) sensor 1. Refer to EM-41, "Exploded View".	
• Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard	D
surface such as a concrete floor; use a new one. • Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).	Е
>> INSPECTION END	F
	G
	Н
	J
	K
	L
	M
	Ν
	0

Revision: 2014 February EC-235 2013 JUKE

Ρ

P0131 A/F SENSOR 1

DTC Logic

DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal is not inordinately low.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible Cause
P0131	A/F SENSOR1 (B1) [Air fuel ratio (A/F) sensor 1 circuit low voltage]	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 0 V.	 Harness or connectors (A/F sensor 1 circuit is open or shorted.) A/F sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V at idle.

>> GO TO 2.

2. CHECK A/F SENSOR FUNCTION

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Select "A/F SEN1 (B1)" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Check "A/F SEN1 (B1)" indication.

With GST

Follow the procedure "With CONSULT" above.

Is the indication constantly approx. 0 V?

YES >> Proceed to EC-237, "Diagnosis Procedure".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Turn ignition switch OFF, wait at least 10 seconds and then restart engine.
- Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine. CAUTION:

Always drive vehicle at a safe speed.

3. Maintain the following conditions for about 20 consecutive seconds.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 40 km/h (25 mph)
B/FUEL SCHDL	1.5 - 9.0 msec
Selector lever	Suitable position

NOTE:

- Keep the accelerator pedal as steady as possible during the cruising.
- If this procedure is not completed within 1 minute after restarting engine at step 1, return to step 1.
- 4. Check 1st trip DTC.

With GST

P0131 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-237, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

EC INFOID:0000000008274624

Α

D

Е

Н

Ν

1. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect A/F sensor 1 harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between A/F sensor 1 harness connector and ground.

	+		
A/F sensor 1		_	Voltage
Connector	Terminal		
F70	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and IPDM E/R harness connector.

	+		_	
A/F se	ensor 1	IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F70	4	E14	36	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check a/f sensor 1 input signal circuit

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

	+	_		
A/F se	ensor 1	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F70	1	F25	21	Existed
170	2	1 23	25	LAISIEU

 Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

EC-237

+ A/F sensor 1		_	Continuity	
Connector	Terminal			
F70	1 2	Ground	Not existed	
	+			
E	CM	_	Continuity	
Connector	Terminal			
F25	21	Ground	Not existed	
1 23	25	Sibulia	NOT CAISTED	

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK INTERMITTENT INCIDENT

Perform GI-43, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-41, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

P0132 A/F SENSOR 1

DTC Logic INFOID:0000000008274625

DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal is not inordinately high.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible Cause
P0132	A/F SENSOR1 (B1) [Air fuel ratio (A/F) sensor 1 circuit high voltage]	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 5 V.	Harness or connectors (A/F sensor 1 circuit is open or shorted.) A/F sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V at idle.

>> GO TO 2.

2.CHECK A/F SENSOR FUNCTION

(P)With CONSULT

- Start engine and warm it up to normal operating temperature.
- Select "A/F SEN1 (B1)" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Check "A/F SEN1 (B1)" indication.

Follow the procedure "With CONSULT" above.

Is the indication constantly approx. 5 V?

YES >> Proceed to EC-240, "Diagnosis Procedure".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- Turn ignition switch OFF, wait at least 10 seconds and then restart engine.
- Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine. **CAUTION:**

Always drive vehicle at a safe speed.

3. Maintain the following conditions for about 20 consecutive seconds.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 40 km/h (25 mph)
B/FUEL SCHDL	1.5 - 9.0 msec
Selector lever	Suitable position

NOTE:

- Keep the accelerator pedal as steady as possible during the cruising.
- If this procedure is not completed within 1 minute after restarting engine at step 1, return to step
- Check 1st trip DTC.

EC-239 2013 JUKE Revision: 2014 February

EC

Α

D

Е

Н

Ν

Р

P0132 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Follow the procedure "With CONSULT" above.

Is 1st trip DTC is detected?

YES >> Proceed to EC-240, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274626

1. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect A/F sensor 1 harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between A/F sensor 1 harness connector and ground.

-	+			
_	A/F sensor 1		_	Voltage
	Connector	Terminal		
	F70	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and IPDM E/R harness connector.

+		-		
A/F se	ensor 1	IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F70	4	E14	36	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check a/f sensor 1 input signal circuit

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

+		-			
Ī	A/F se	ensor 1	ECM		Continuity
Ī	Connector	Terminal	Connector	Terminal	
	F70	1	F25	21	Existed
	170	2	125	25	LXISIEG

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

Α

EC

D

Е

F

Н

K

L

Ν

0

Р

< DTC/CIRCUIT DIAGNOSIS >				[MR16DDT]
	+			
A/F	sensor 1	_	Continuity	
Connector	Terminal			
F70	1	Ground	Not existed	
170	2	Giodila	Not existed	
	+			
I	ECM	Continuity	Continuity	
Connector	Terminal			
F25	21	Ground	Not existed	
125	25	Giodila	Not existed	
5. Also chec	k harness for sh	ort to power.		
•	<u>on result normal</u>	<u>?</u>		
	O TO 4.			
	epair or replace		oarts.	
4.CHECK IN	TERMITTENT II	NCIDENT		
Perform GI-43	<u> Intermittent In</u>	<u>cident"</u> .		
Is the inspecti	<u>on result normal</u>	<u>?</u>		
	O TO 5.			
NO >> R	epair or replace	error-detected p	parts.	

Replace air fuel ratio (A/F) sensor 1. Refer to EM-41, "Exploded View". **CAUTION:**

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

5.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

P0133 A/F SENSOR 1

DTC Logic

DTC DETECTION LOGIC

To judge the malfunction of A/F sensor 1, this diagnosis measures response time of the A/F signal computed by ECM from the A/F sensor 1 signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and the A/F sensor 1 temperature index. Judgment is based on whether the compensated time (the A/F signal cycling time index) is inordinately long or not.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible Cause
P0133	A/F SENSOR1 (B1) [Air fuel ratio (A/F) sensor 1 circuit slow response]	The response of the A/F signal computed by ECM from A/F sensor 1 signal takes more than the specified time.	Harness or connectors (A/F sensor 1 circuit is open or shorted.) A/F sensor 1 A/F sensor 1 heater Fuel pressure Fuel injector Intake air leaks Exhaust gas leaks PCV Mass air flow sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 5.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Restart engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1minute under no load.
- 4. Let engine idle for 1 minute.
- Select "ENGINE" using CONSULT.
- 6. Select "A/F SEN1(B1) P1278/P1279" (for DTC P0133) of "A/F SEN1" in "DTC WORK SUPPORT" mode.
- Touch "START".

Is "COMPLETED" displayed on CONSULT screen?

YES >> GO TO 3 NO >> GO TO 4.

3.PERFORM DTC CONFIRMATION PROCEDURE-II

Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT screen?

OK >> INSPECTION END

NG >> Proceed to <u>EC-243</u>, "<u>Diagnosis Procedure</u>".

4. PERFORM DTC CONFIRMATION PROCEDURE-II


1. After perform the following procedure, "TESTING" will be displayed on the CONSULT screen.

P0133 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >	[וועמזאטן]
 Increase the engine speed up to between 4,000 and 5,000 rpm and maintain that speed up to between 4,000 and 5,000 rpm and 5,000 r	ction Check".
screen. 3. Make sure that "TESTING" changes to "COMPLETED". If "TESTING" changed to "OUT OF CONDITION", refer to EC-233, "Component I	E
4. Touch "SELF-DIAG RESULT".	
Which is displayed on CONSULT screen?	
OK >> INSPECTION END NG >> Proceed to <u>EC-243, "Diagnosis Procedure"</u> .	
5. CHECK AIR-FUEL RATIO SELF-LEARNING VALUE	
 With GST Start engine and warm it up to normal operating temperature. Select Service \$01 with GST. Calculate the total value of "Short term fuel trim" and "Long term fuel trim" indications 	. E
Is the total percentage within ±15%?	F
YES >> GO TO 7. NO >> GO TO 6.	Γ
6. DETECT MALFUNCTIONING PART	
Check the following. Intake air leaks Exhaust gas leaks Incorrect fuel pressure Lack of fuel Fuel injector Incorrect PCV hose connection PCV valve	ŀ
Mass air flow sensor	
>> Repair or replace malfunctioning part.	
7. PERFORM DTC CONFIRMATION PROCEDURE	ŀ
 Turn ignition switch OFF and wait at least 10 seconds. Restart engine and keep the engine speed between 3,500 and 4,000 rpm for at lea load. Let engine idle for 1 minute. Increase the engine speed up to between 4,000 and 5,000 rpm and maintain that speed. Fully release accelerator pedal and then let engine idle for about 1 minute. Check 1st trip DTC. 	st 1minute under no
Is 1st trip DTC detected?	
YES >> Proceed to <u>EC-243, "Diagnosis Procedure"</u> . NO >> INSPECTION END	1
Diagnosis Procedure	INFOID:000000008274628
1.RETIGHTEN A/F SENSOR 1	
Loosen and retighten the A/F sensor 1. Refer to EM-41, "Exploded View".	
>> CO TO 2	I
>> GO TO 2. 2.CHECK EXHAUST GAS LEAK	
1. Start engine and run it at idle.	

Revision: 2014 February EC-243 2013 JUKE

Listen for an exhaust gas leak before three way catalyst 1.

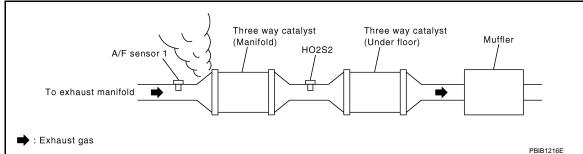

Is exhaust gas leak detected?

YES >> Repair or replace.

NO >> GO TO 3.

3.CHECK FOR INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 4.

4.CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- 1. Clear the mixture ratio self-learning value. Refer to EC-136, "Work Procedure".
- Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171 or P0172. Refer to <u>EC-266, "DTC Logic"</u> or <u>EC-270, "DTC Logic"</u>.

NO >> GO TO 5.

5. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect A/F sensor 1 harness connector.
- 3. Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

	+		
A/F sensor 1		_	Voltage
Connector	Terminal		
F70	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6.CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- Check the continuity between A/F sensor 1 harness connector and IPDM E/R harness connector.

+				
A/F ser	nsor 1	IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F70	4	E14	36	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

7.check a/f sensor 1 input signal circuit

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

+		-			
A/F ser	nsor 1	EC	CM	Continuity	
Connector	Terminal	Connector	Terminal		
F70	1	F25	21	Existed	

25

Check the continuity between A/F sensor 1 harness connector and ground or ECM harness connector and ground.

+				
A/F ser	nsor 1	_	Continuity	
Connector	Terminal			
F70	1	Ground	Not existed	
170	2	Glound	Not existed	

	+			
EC	CM	_	Continuity	
Connector	Terminal			
F25	21	Ground	Not existed	
123	25	Glound	inoi existed	

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 8.

>> Repair or replace error-detected parts. NO

$oldsymbol{\delta}.$ CHECK AIR FUEL RATIO (A/F) SENSOR 1 HEATER

Check the air fuel ratio (A/F) sensor 1 heater. Refer to EC-173, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 12.

9.CHECK MASS AIR FLOW SENSOR

Check the mass air flow sensor. Refer to EC-204, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace mass air flow sensor. Refer to EM-25, "Exploded View".

10. CHECK PCV VALVE

Check the PCV valve. Refer to EC-541, "Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace PCV valve. Refer to EM-57, "Exploded View".

11. CHECK INTERMITTENT INCIDENT

Perform GI-43, "Intermittent Incident".

Is the inspection result normal?

EC-245 Revision: 2014 February 2013 JUKE

EC

Α

D

F

Е

M

Ν

Р

P0133 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

YES >> GO TO 12.

NO >> Repair or replace error-detected parts.

12.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1. Refer to <u>EM-41, "Exploded View"</u>. **CAUTION:**

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner (commercial service tool) and approved anti-seize lubricant (commercial service tool).


>> INSPECTION END

P0137 H02S2

DTC Logic INFOID:0000000008274629

DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the maximum voltage of the sensor is sufficiently high during the various driving condition such as fuelcut.

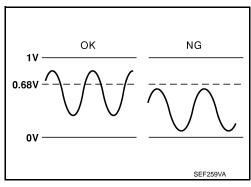

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0137	HO2S2 (B1) (Heated oxygen sensor 2 circuit low voltage)	The maximum voltage from the heated oxygen sensor 2 is not reached to the specified voltage.	Harness or connectors (Heated oxygen sensor 2 circuit is open or shorted) Heated oxygen sensor 2 Fuel pressure Fuel injector Intake air leaks

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 5.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds. 1.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

>> GO TO 3.

3.perform dtc confirmation procedure

(P)With CONSULT

- Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F). If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).
- 7. Open engine hood.
- Select "HO2S2 (B1) P1147" of "HO2S2" in "DTC WORK SUPPORT" mode of "ENGINE" using CONSULT.

EC-247 Revision: 2014 February 2013 JUKE

EC

Α

D

Е

F

Н

K

M

N

Р

< DTC/CIRCUIT DIAGNOSIS >

9. Follow the instruction of CONSULT.

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

10. Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT screen?

OK >> INSPECTION END

NG >> Proceed to EC-249, "Diagnosis Procedure".

CAN NOT BE DIAGNOSED>>GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

- 1. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- Perform DTC CONFIRMATION PROCEDURE again.

>> GO TO 3.

5. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-248, "Component Function Check".

NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-249, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008274630

1.PERFORM COMPONENT FUNCTION CHECK-I

Without CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground as per the following condition.

	ECM				
Connector	+	_	Condition	Voltage	
Connector	Terr	minal			
F25	29 33		Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector and ground as per the following condition.

	ECM				
Connector	+	_	Condition	Voltage	
Connector	Terr	minal			
F25	29 33		Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

INFOID:0000000008274631

EC

Е

Н

M

N

3. PERFORM COMPONENT FUNCTION CHECK-III

Check the voltage between ECM harness connector and ground as per the following condition.

	ECM				
Connector	+	-	Condition Voltage		
Connector	Terr	minal			
F25	29	33	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-249, "Diagnosis Procedure".

Diagnosis Procedure

1. CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to <u>EC-136, "Work Procedure"</u>.
- 2. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171. Refer to <u>EC-266, "DTC Logic"</u>.

NO >> GO TO 2.

2.CHECK HO2S2 GROUND CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between HO2S2 harness connector and ECM harness connector.

+		-		
НО	2S2	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F69	1	F25	33	Existed

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK HO2S2 INPUT SIGNAL CIRCUIT

1. Check the continuity between HO2S2 harness connector and ECM harness connector.

	+		_	
НО	2S2	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F69	4	F25	29	Existed

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

НО	+ 2S2	_	Continuity	
Connector	Terminal			
F69	4	Ground	Not existed	

E	+ CM	_	Continuity	
Connector	Terminal			
F25	29	Ground	Not existed	

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK HEATED OXYGEN SENSOR 2

Check the heated oxygen sensor 2. Refer to EC-250, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 5.

${f 5.}$ REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2.

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

Component Inspection

INFOID:0000000008274632

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?


YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEATED OXYGEN SENSOR 2

(P)With CONSULT

- Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Select "FUEL INJECTION" in "ACTIVE TEST" mode of "ENGINE" using CONSULT, and select "HO2S2 (B1)" as the monitor item with CONSULT.
- Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to ± 25%.

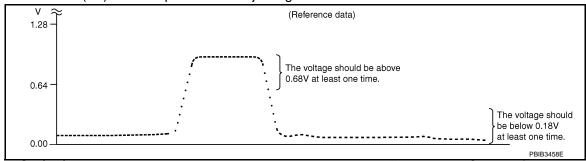

"HO2S2 (B1)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

P0137 H02S2

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3.check heated oxygen sensor 2-1

EC

D

Е

F

K

M

Ν

Р

Α

⋈Without CONSULT

- Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector	+	-	Condition	Voltage
Connector	Terminal			
F25	29	33	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector	+	_	Condition	Voltage
	Terminal			
F25	29	33	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5. CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector	+	-	Condition	Voltage
Connector	Terr	ninal		
F25	29	33	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

6. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to <u>EX-5</u>, "<u>Exploded View</u>". **CAUTION**:

P0137 H02S2

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

P0138 H02S2


DTC Logic

DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time.


MALFUNCTION A

To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the voltage is unusually high during the various driving condition such as fuel-cut.

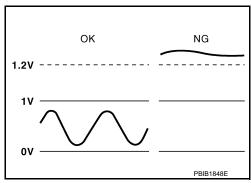

MALFUNCTION B

To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the minimum voltage of sensor is sufficiently low during the various driving condition such as fuel-cut.

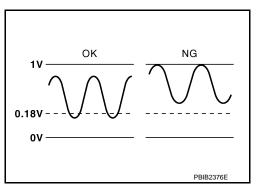

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition		Possible cause
HO2S2 (B1) P0138 (Heated oxygen sensor 2 circuit high voltage)	A)	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2	
	B)	The minimum voltage from the sensor is not reached to the specified voltage.	Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2 Fuel pressure Fuel injector	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

С

EC

Α

D

Е

F

G

Н

K

M

Ν

Р

2.perform dtc confirmation procedure for malfunction a

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 2 minutes.
- 5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to <u>EC-255</u>, "<u>Diagnosis Procedure</u>".

NO-1 >> With CONSULT: GO TO 3.

NO-2 >> Without CONSULT: GO TO 5.

3.perform dtc confirmation procedure for malfunction b

NOTE:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

- Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Make sure that "COOLAN TEMP/S" indication is more than 70°C (158°F).

If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).

- 7. Open engine hood.
- 8. Select "HO2S2 (B1) P1146" of "HO2S2" in "DTC WORK SUPPORT" mode of "ENGINE" using CONSULT.
- 9. Follow the instruction of CONSULT.

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

10. Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT

OK >> INSPECTION END

NG >> Proceed to EC-255, "Diagnosis Procedure".

CAN NOT BE DIAGNOSED>>GO TO 4.

f 4. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B AGAIN

- 1. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- Perform DTC confirmation procedure again.

>> GO TO 3.

5.PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B

Perform component function check. Refer to EC-255, "Diagnosis Procedure".

NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-255, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008274634

1.PERFORM COMPONENT FUNCTION CHECK-I

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector	+	_	Condition	Voltage
	Terminal			
F25	29 33		Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure.

EC

D

Е

Н

Α

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector and ground as per the following condition.

ECM					
Connector	+	_	Condition	Voltage	
Connector	Terminal				
F25	29 33		Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3.perform component function check-iii

Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector	+ - Terminal		Condition	Voltage
Connector				
F25	29	33	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-255, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274635

1.INSPECTION START

Confirm the detected malfunction (A or B). Refer to EC-253, "DTC Logic".

Which malfunction is detected?

A >> GO TO 2.

B >> GO TO 7.

2.CHECK HO2S2 CONNECTOR FOR WATER

- Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 harness connector.
- Check connectors for water.

Р

M

Ν

Water should not exist.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK HO2S2 GROUND CIRCUIT

- 1. Disconnect ECM harness connector.
- 2. Check the continuity between HO2S2 harness connector and ECM harness connector.

+		-		
НО	2S2	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F69	1	F25	33	Existed

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK HO2S2 INPUT SIGNAL CIRCUIT

1. Check the continuity between HO2S2 harness connector and ECM harness connector.

	+		_	
НО	2S2	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F69	4	F25	29	Existed

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

	+		
НО	2S2	_	Continuity
Connector	Terminal		
F69	4	Ground	Not existed

	+		
E	СМ	_	Continuity
Connector	Terminal		
F25	29	Ground	Not existed

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5. CHECK HEATED OXYGEN SENSOR 2

Check the heated oxygen sensor 2. Refer to EC-258, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 6.

6.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

7.CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to EC-136, "Work Procedure".
- 2. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0172 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0172. Refer to EC-253, "DTC Logic".

NO >> GO TO 8.

8.CHECK HO2S2 GROUND CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 harness connector.
- Disconnect ECM harness connector.
- Check the continuity between HO2S2 harness connector and ECM harness connector.

+		_		
НО	2S2	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F69	1	F25	33	Existed

5. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace error-detected parts.

9. CHECK HO2S2 INPUT SIGNAL CIRCUIT

Check the continuity between HO2S2 harness connector and ECM harness connector.

+		Í		
НО	2S2	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F69	4	F25	29	Existed

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

	+		
HC	2\$2	_	Continuity
Connector	Terminal		
F69	4	Ground	Not existed

-	+		
EC	CM	_	Continuity
Connector	Connector Terminal		
F25	29	Ground	Not existed

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

10.check heated oxygen sensor 2

Check the heated oxygen sensor 2. Refer to EC-258, "Component Inspection".

Is the inspection result normal?

EC-257 Revision: 2014 February 2013 JUKE

EC

Α

Е

K

N

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 11.

11. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

Component Inspection

INFOID:0000000008274636

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?


YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEATED OXYGEN SENSOR $\scriptscriptstyle 2$

(I) With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- Select "FUEL INJECTION" in "ACTIVE TEST" mode of "ENGINE" using CONSULT, and select "HO2S2 (B1)" as the monitor item with CONSULT.
- 7. Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to \pm 25%.

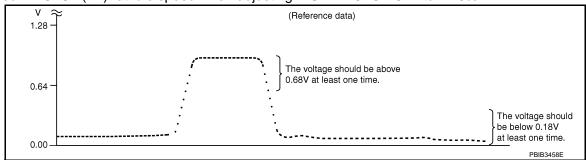

"HO2S2 (B1)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3.CHECK HEATED OXYGEN SENSOR 2-I

- Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector	+	_	Condition	Voltage
Connector	Terminal			
F25	29	33	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector	+	-	Condition	Voltage
Connector	Terminal			
F25	29	33	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5. CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector and ground as per the following condition.

	ECM			
Connector	+	-	Condition	Voltage
Connector	Terminal			
F25	29	33	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

6.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

 Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

 Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

EC

Α

D

Е

F

Р


Revision: 2014 February

P0139 HO2S2

DTC Logic

DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst 1 causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the switching response of the sensor's voltage is faster than specified during various driving conditions such as fuel cut.

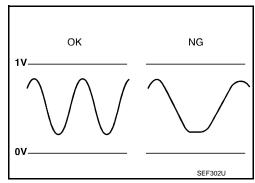

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0139	HO2S2 (B1) (Heated oxygen sensor 2 circuit slow response)	The switching time between rich and lean of a heated oxygen sensor 2 signal delays more than the specified time computed by ECM.	Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2 Fuel system EVAP system Intake air system

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 7.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Start engine and warm it up to the normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Turn ignition switch OFF and wait at least 10 seconds.
- 6. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 8. Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
- Drive the vehicle in a proper at 60 km/h (38MPH) and maintain the speed. CAUTION:

Always drive vehicle at a safe speed.

< DTC/CIRCUIT DIAGNOSIS > 10. Release the accelerator pedal fully at least 5 seconds. **CAUTION:** Α • Enable engine brake. Always drive carefully. Never apply brake when releasing the accelerator pedal. EC 11. Repeat step 9 and 10 at least 8 times. 12. Check the following item of "DATA MONITOR". Data monitor item Status HO2 S2 DIAG1 (B1) **CMPLT** HO2 S2 DIAG2 (B1) D Is "CMPLT" displayed on CONSULT screen? YES >> GO TO 6. NO-1: "CMPLT" is not displayed on DIAG 1>>Perform DTC confirmation procedure again. Е NO-2: "CMPLT" is not displayed on DIAG 2>>GO TO 4. 4.PERFORM DTC WORK SUPPORT 1. Open engine hood. Select "HO2S2 (B1) P0139" in "DTC WORK SUPPORT" mode of "ENGINE" using CONSULT. 2. Start engine and follow the instruction of CONSULT display. It will take at most 10 minutes until "COMPLETED" is displayed. Is "COMPLETED" displayed on CONSULT screen? Н YES >> GO TO 6. NO >> GO TO 5. 5. PERFORM DTC CONFIRMATION PROCEDURE AGAIN Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle). Perform DTC confirmation procedure again. >> GO TO 3. **6.**PERFORM SELF-DIAGNOSIS (P)With CONSULT Perform ECM self-diagnosis. Is DTC "P0139" detected? >> Proceed to EC-262, "Diagnosis Procedure". NO >> INSPECTION END / .PERFORM COMPONENT FUNCTION CHECK M Perform component function check. Refer to EC-261, "Component Function Check". NOTE: Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed. Is the inspection result normal? YES >> INSPECTION END >> Proceed to EC-262, "Diagnosis Procedure". NO

Component Function Check

INFOID:0000000008274638

1.PERFORM COMPONENT FUNCTION CHECK-I

- Start engine and warm it up to normal operating temperature. 1.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Check the voltage between ECM harness connector and ground as per the following condition.

EC-261 2013 JUKE Revision: 2014 February

ECM				
Connector	+	_	Condition	Voltage
Connector	Terminal			
F25	29 33		Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector	+	-	Condition	Voltage
Connector	Terminal			
F25	29 33		Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3.PERFORM COMPONENT FUNCTION CHECK-III

Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector +		-	Condition	Voltage
Connector	Terminal			
F25	29	33	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-249, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274639

1. CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- 1. Clear the mixture ratio self-learning value. Refer to EC-136, "Work Procedure".
- Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171 or P0172. Refer to <u>EC-266, "DTC Logic"</u> or <u>EC-270, "DTC Logic"</u>.

NO >> GO TO 2.

2.CHECK HO2S2 GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect heated oxygen sensor 2 harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between HO2S2 harness connector and ECM harness connector.

Α

EC

D

Е

Ν

+		-		
HO2S2		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F69	1	F25	33	Existed

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK HO2S2 INPUT SIGNAL CIRCUIT

1. Check the continuity between HO2S2 harness connector and ECM harness connector.

+		-		
НО	HO2S2		СМ	Continuity
Connector	Terminal	Connector	Terminal	
F69	4	F25	29	Existed

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

	+		
НО	2S2	_	Continuity
Connector	Terminal		
F69	4	Ground	Not existed

	+		
E	CM	_	Continuity
Connector	Terminal		
F25	29	Ground	Not existed

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK HEATED OXYGEN SENSOR 2

Check the heated oxygen sensor 2. Refer to EC-264, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 5.

5. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

Component Inspection

INFOID:0000000008274640

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?


YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEATED OXYGEN SENSOR 2

(P)With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Select "FUEL INJECTION" in "ACTIVE TEST" mode of "ENGINE" using CONSULT, and select "HO2S2 (B1)" as the monitor item with CONSULT.
- 7. Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to \pm 25%.

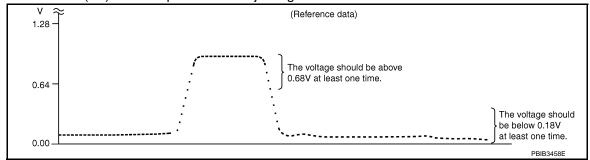

"HO2S2 (B1)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3.CHECK HEATED OXYGEN SENSOR 2-I

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground as per the following condition.

ECM				
Connector	+	-	Condition	Voltage
Connector	Terminal			
F25	29	33	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector and ground as per the following condition.

Α

EC

D

Е

F

Н

ECM					
Connector	+	-	Condition	Voltage	
Connector	Terr	minal			
F25	29	33	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5. CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector and ground as per the following condition.

ECM					
Connector	+	_	Condition	Voltage	
Connector	Terminal				
F25	29	33	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

6.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

L

K

Ν

M

 \cup

Р

P0171 FUEL INJECTION SYSTEM FUNCTION

DTC Logic

DTC DETECTION LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the A/F sensors 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input signal to ECM	ECM function	Actuator
A/F sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injector

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0171	FUEL SYS-LEAN-B1 (Fuel injection system too lean)	 Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.) 	 Intake air leaks A/F sensor 1 Fuel injector Exhaust gas leaks Incorrect fuel pressure Lack of fuel Mass air flow sensor Incorrect PCV hose connection

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.perform dtc confirmation procedure-i

- 1. Clear the mixture ratio self-learning value. Refer to EC-136, "Work Procedure".
- 2. Start engine.

Is it difficult to start engine?

YES >> GO TO 3.

NO >> GO TO 4.

3. RESTART ENGINE

If it is difficult to start engine, the fuel injection system has a malfunction, too.

Crank engine while depressing accelerator pedal.

NOTE:

When depressing accelerator pedal three-fourths (3/4) or more, the control system does not start the engine. Do not depress accelerator pedal too much.

Does engine start?

YES >> Proceed to EC-267, "Diagnosis Procedure".

NO >> Check exhaust and intake air leak visually.

4. PERFORM DTC CONFIRMATION PROCEDURE-II

- 1. Start engine and let it idle for at least 5 minutes.
- 2. Check 1st trip DTC.

P0171 FUEL INJECTION SYSTEM FUNCTION

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS >

Is 1st trip DTC detected?

YES >> Proceed to EC-267, "Diagnosis Procedure".

NO >> GO TO 5.

5. PERFORM DTC CONFIRMATION PROCEDURE-III

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Start engine.
- Maintain the following conditions for at least 10 consecutive minutes. Hold the accelerator pedal as steady as possible.

VHCL SPEED SE 50 - 120 km/h (31 - 75 MPH)

CAUTION:

Always drive vehicle at a safe speed.

4. Check 1st trip DTC.

Is 1st trip DTC detected?

YFS >> Proceed to EC-267, "Diagnosis Procedure".


>> INSPECTION END NO

Diagnosis Procedure

1. CHECK EXHAUST GAS LEAK

Start engine and run it at idle.

Listen for an exhaust gas leak before three way catalyst (manifold).

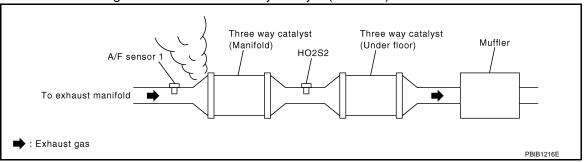

Is exhaust gas leak detected?

>> Repair or replace error-detected parts. YES

NO >> GO TO 2.

2.CHECK FOR INTAKE AIR LEAK

- Listen for an intake air leak after the mass air flow sensor.
- Check PCV hose connection.

Intake air leak detected?

YES >> Repair or replace error-detected parts.

NO >> GO TO 3.

3.check a/f sensor 1 input signal circuit

- Turn ignition switch OFF.
- Disconnect corresponding A/F sensor 1 harness connector. 2.
- Disconnect ECM harness connector.
- Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

+		_		
A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F70	1	F25	21	Existed
170	2	125	25	LAISIEU

EC

Α

D

Е

Н

L

Ν

Р

INFOID:0000000008274642

P0171 FUEL INJECTION SYSTEM FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1 – Continuity Connector Terminal — Ground Not existed		+		
F70 Ground Not existed	A/F se	ensor 1	_	Continuity
	Connector	Connector Terminal		
	F70	1	Ground	Not existed
	170	2	Glound	Not existed

	+		
E	СМ	_	Continuity
Connector	Terminal		
F25	21	Ground	Not existed
125	25	Giouna	NOT EXISTED

6. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK FUEL PRESSURE

Check fuel pressure. Refer to EC-137, "Work Procedure".

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging. Refer to EM-51, "Exploded View".

Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly". Refer to <u>FL-5, "2WD : Exploded View"</u> (2WD) or <u>FL-9, "AWD : Exploded View"</u> (AWD).

NO >> Repair or replace error-detected parts.

6.CHECK MASS AIR FLOW SENSOR

(P)With CONSULT

- 1. Install all removed parts.
- Check "MASS AIR FLOW" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. For specification, refer to EC-543, "Mass Air Flow Sensor".

@With GST

- 1. Install all removed parts.
- Check mass air flow sensor signal in Service \$01 with GST.
- For specification, refer to <u>EC-543, "Mass Air Flow Sensor"</u>.

Is the measurement value within the specification?

YES >> GO TO 7.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or grounds. Refer to <u>EC-207</u>, "<u>DTC Logic</u>".

7. CHECK FUNCTION OF FUEL INJECTOR

With CONSULT

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 3. Make sure that each circuit produces a momentary engine speed drop.

1. Let engine idle.

P0171 FUEL INJECTION SYSTEM FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]


Listen to each fuel injector operating sound.

Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Perform trouble diagnosis for "FUEL INJECTOR", refer to EC-493, "Component Function Check".

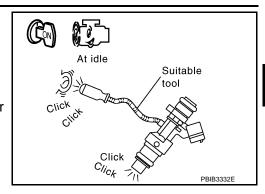


8. CHECK FUEL INJECTOR

- Turn ignition switch OFF.
- 2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- Disconnect all fuel injector harness connectors.
- 4. Remove fuel tube assembly. Refer to <u>EM-51</u>, "<u>Removal and Installation</u>". Keep fuel hose and all fuel injectors connected to fuel tube.
- 5. Disconnect all ignition coil harness connectors.
- 6. Prepare pans or saucers under each fuel injector.
- 7. Crank engine for about 3 seconds.

Fuel should be sprayed evenly for each fuel injector.

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to <u>GI-43, "Intermittent Incident"</u>.
- NO >> Replace fuel injectors from which fuel does not spray out. Always replace O-ring with new ones. Refer to EM-51, "Removal and Installation".

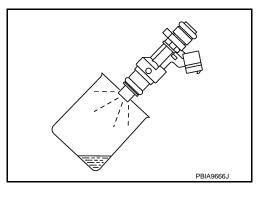

EC

Α

D

Е

F

G

Н

.]

K

L

M

Ν

0

Р

P0172 FUEL INJECTION SYSTEM FUNCTION

DTC Logic

DTC DETECTION LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the A/F sensors 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input signal to ECM	ECM function	Actuator
A/F sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injector

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0172	FUEL SYS-RICH-B1 (Fuel injection system too rich)	Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)	A/F sensor 1 Fuel injector Exhaust gas leaks Incorrect fuel pressure Mass air flow sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE-I

- 1. Clear the mixture ratio self-learning value. Refer to EC-136, "Work Procedure".
- 2. Start engine.

Is it difficult to start engine?

YES >> GO TO 3.

NO >> GO TO 4.

3.restart engine

If it is difficult to start engine, the fuel injection system has a malfunction, too.

Crank engine while depressing accelerator pedal.

NOTE:

When depressing accelerator pedal three-fourths (3/4) or more, the control system does not start the engine. Do not depress accelerator pedal too much.

Does engine start?

YES >> Proceed to EC-271, "Diagnosis Procedure".

NO >> Check exhaust and intake air leak visually.

4. PERFORM DTC CONFIRMATION PROCEDURE-II

- Start engine and let it idle for at least 5 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-271, "Diagnosis Procedure".

NO >> GO TO 5.

P0172 FUEL INJECTION SYSTEM FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

5. PERFORM DTC CONFIRMATION PROCEDURE-III

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine.
- 3. Maintain the following conditions for at least 10 consecutive minutes. Hold the accelerator pedal as steady as possible.

EC

D

Е

F

Н

K

Α

VHCL SPEED SE 50 - 120 km/h (31 - 75 MPH)

CAUTION:

Always drive vehicle at a safe speed.

4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-271, "Diagnosis Procedure".


NO >> INSPECTION END

Diagnosis Procedure

INFOID:00000000008274644

1. CHECK EXHAUST GAS LEAK

- Start engine and run it at idle.
- Listen for an exhaust gas leak before three way catalyst (manifold).

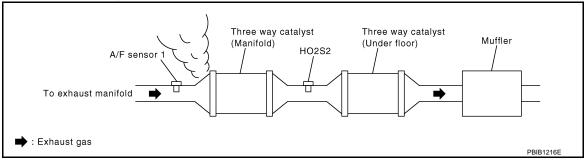

Is exhaust gas leak detected?

YES >> Repair or replace error-detected parts.

NO >> GO TO 2.

2. CHECK FOR INTAKE AIR LEAK

- 1. Listen for an intake air leak after the mass air flow sensor.
- 2. Check PCV hose connection.

Intake air leak detected?

YES >> Repair or replace error-detected parts.

NO >> GO TO 3.

${f 3.}$ CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect corresponding A/F sensor 1 harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

+			_	
A/F se	ensor 1	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F70	1	F25	21	Existed
170	2	1 23	25	LAISIEU

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

Ν

M

C

Р

2013 JUKE

	+		
A/F se	ensor 1	_	Continuity
Connector	Terminal		
F70	1	Ground	Not existed
170	2	Glound	Not existed

	+		
E	CM	_	Continuity
Connector	Terminal		
F25	21	Ground	Not existed
123	25	Giodila	INOL EXISTED

6. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK FUEL PRESSURE

Check fuel pressure. Refer to EC-137, "Work Procedure".

Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging. Refer to EM-51, "Exploded View".

Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly". Refer to <u>FL-5, "2WD : Exploded View"</u> (2WD) or <u>FL-9, "AWD : Exploded View"</u> (AWD).

NO >> Repair or replace error-detected parts.

6.CHECK MASS AIR FLOW SENSOR

(P)With CONSULT

- 1. Install all removed parts.
- 2. Check "MASS AIR FLOW" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. For specification, refer to EC-543, "Mass Air Flow Sensor".

With GST

- 1. Install all removed parts.
- 2. Check mass air flow sensor signal in Service \$01 with GST.
- 3. For specification, refer to EC-543, "Mass Air Flow Sensor".

Is the measurement value within the specification?

YES >> GO TO 7.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or grounds. Refer to <u>EC-207</u>, "<u>DTC Logic</u>".

7.CHECK FUNCTION OF FUEL INJECTOR

(P)With CONSULT

- 1. Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- Make sure that each circuit produces a momentary engine speed drop.

♥Without CONSULT

1. Let engine idle.

P0172 FUEL INJECTION SYSTEM FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]


Listen to each fuel injector operating sound.

Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Perform trouble diagnosis for "FUEL INJECTOR", refer to EC-493, "Component Function Check".

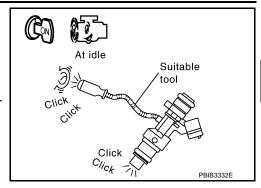


8. CHECK FUEL INJECTOR

- 1. Turn ignition switch OFF.
- 2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- Disconnect all fuel injector harness connectors.
- 4. Remove fuel tube assembly. Refer to <u>EM-51</u>, "<u>Removal and Installation</u>". Keep fuel hose and all fuel injectors connected to fuel tube.
- 5. Disconnect all ignition coil harness connectors.
- 6. Prepare pans or saucers under each fuel injector.
- 7. Crank engine for about 3 seconds.

Fuel should be sprayed evenly for each fuel injector.

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to <u>GI-43, "Intermittent Incident"</u>.
- NO >> Replace fuel injectors from which fuel does not spray out. Always replace O-ring with new ones. Refer to EM-51, "Removal and Installation".

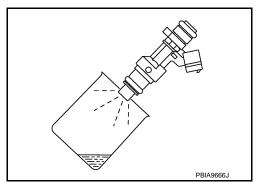

EC

Α

Е

D

F

G

Н

K

M

L

Ν

0

Р

P0181 FTT SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		DTC detecting condition	Possible cause
		A)	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signals from ECT sensor and intake air temperature sensor 1.	Harness or connectors (FTT sensor circuit is open or shorted) FTT sensor Combination meter
P0181	FTT SENSOR [Fuel tank temperature (FTT) sensor circuit range/perfor- mance]	B)	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor 1, IAT sensor 2, ECT sensor, EOT sensor, and FTT sensor) shows that the voltage signal of the FTT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the FTT sensor circuit) FTT sensor

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 7.

NO >> GO TO 2.

2.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 3.

3.perform dtc confirmation procedure for malfunction a-i

- 1. Turn ignition switch ON and wait at least 10 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-276, "Diagnosis Procedure".

NO >> GO TO 4.

4.CHECK ENGINE COOLANT TEMPERATURE

(P)With CONSULT

- Select "COOLAN TEMP/S" in "DATA MONITOR" of "ENGINE" using CONSULT.
- 2. Check "COOLAN TEMP/S" value.

With GST

Follow the procedure "With CONSULT" above.

"COOLAN TEMP/S" less than 60°C (140°F)?

YES >> INSPECTION END

NO >> GO TO 5.

5. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A-II

(P)With CONSULT

1. Cool engine down until "COOLAN TEMP/S" is less than 60°C (140°F).

Revision: 2014 February EC-274 2013 JUKE


P0181 FTT SENSOR

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS > Wait at least 10 seconds. Check 1st trip DTC. Α Follow the procedure "With CONSULT" above. Is 1st trip DTC detected? EC YES >> Proceed to EC-276, "Diagnosis Procedure". NO >> GO TO 6. $oldsymbol{6}$ PERFORM COMPONENT FUNCTION CHECK (FOR MALFUNCTION B) Perform component function check. Refer to EC-275, "Component Function Check". D Use the component function check to check the overall function of the FTT sensor circuit. During this check, a 1st trip DTC might not be confirmed. Is the inspection result normal? Е YES >> INSPECTION END NO >> Proceed to EC-276, "Diagnosis Procedure". / .PRECONDITIONING If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds. **TESTING CONDITION:** Before performing the following procedure, do not add fuel. Before performing the following procedure, check that fuel level is between 1/4 and 4/4. Before performing the following procedure, confirm that battery voltage is 11 V or more at idle. >> GO TO 8. 8 PERFORM DTC CONFIRMATION PROCEDURE B Start engine and let it idle for 60 minutes. 2. Move the vehicle to a cool place. NOTE: Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F). 3. Turn ignition switch OFF and soak the vehicle for 12 hours. **CAUTION:** Never turn ignition switch ON during soaking. NOTE: The vehicle must be cooled with the food open. Start engine and let it idle for 5 minutes or more. **CAUTION:** Never turn ignition switch OFF during idling. Check 1st trip DTC. Is 1st trip DTC detected? N YFS >> Proceed to EC-276, "Diagnosis Procedure". >> INSPECTION END NO Component Function Check INFOID:0000000008274646 1. CHECK FUEL TANK TEMPERATURE (FTT) SENSOR Turn ignition switch OFF. Disconnect fuel level sensor unit and fuel pump harness connector. 2. Remove fuel level sensor unit. Refer to FL-5, "2WD: Exploded View"(2WD), FL-9, "AWD: Exploded View"(AWD).

< DTC/CIRCUIT DIAGNOSIS >

4. Check resistance between fuel level sensor unit and fuel pump terminals by heating with hot water as shown in the figure.

Fuel level sensor unit and fuel pump		Open distant		5
+	-	Condition Resistance (Resistance (kΩ)
Terr	minal			
4	5	Temperature [°C	20 (68)	2.3 – 2.7
4	3	(°F)]	50 (122)	0.79 - 0.90

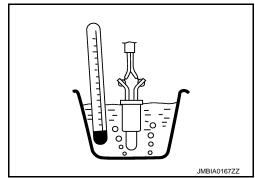

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Proceed to EC-276, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274647

1.INSPECTION START

Confirm the detected malfunction (A or B). Refer to EC-274, "DTC Logic".

Which malfunction is detected?

A >> GO TO 2.

B >> GO TO 6.

2.CHECK DTC WITH COMBINATION METER

Check DTC with combination meter. Refer to MWI-20, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Proceed to MWI-43, "Component Function Check".

3.check fuel tank temperature (ftt) sensor power

- 1. Turn ignition switch OFF.
- 2. Disconnect fuel level sensor unit and fuel pump harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between fuel level sensor unit and fuel pump harness connector and ground.

	+		
Fuel level sensor	unit and fuel pump	_	Voltage (Approx.)
Connector	Terminal		(44.5)
B46	4	Ground	5 V

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4.CHECK FUEL TANK TEMPERATURE (FTT) SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between fuel level sensor unit and fuel pump harness connector and ECM harness connector.

+		-		
Fuel level sensor unit and fuel pump		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B46	4	F26	84	Existed

4. Also check harness for short to ground and to power.

P0181 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

5. CHECK FTT SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect combination meter harness connector.
- 3. Check the continuity between fuel level sensor unit and fuel pump harness connector and combination meter harness connector.

+			-	
Fuel level sensor unit and fuel pump		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
B46	5	M34	24	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK FUEL TANK TEMPERATURE (FTT) SENSOR

Check the FTT sensor. Refer to EC-277, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace fuel level sensor unit and fuel pump. Refer to <u>FL-5, "2WD : Exploded View"</u>(2WD), <u>FL-9, "AWD : Exploded View"</u>(AWD).


Component Inspection

INFOID:0000000008274648

1. CHECK FUEL TANK TEMPERATURE (FTT) SENSOR

- Turn ignition switch OFF.
- 2. Disconnect fuel level sensor unit and fuel pump harness connector.
- 3. Remove fuel level sensor unit. Refer to FL-5, "2WD : Exploded View" (2WD), FL-9, "AWD : Exploded View" (AWD).
- 4. Check resistance between fuel level sensor unit and fuel pump terminals by heating with hot water as shown in the figure.

Fuel level sensor unit and fuel pump		Condition		D (1.0)
+	-	Condition		Resistance (kΩ)
Terr	minal			
4	5	Temperature	20 (68)	2.3 – 2.7
	3	[°C (°F)]	50 (122)	0.79 - 0.90

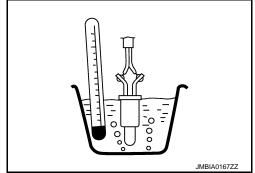

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace fuel level sensor unit and fuel pump. Refer to FL-5, "2WD: Exploded View".

EC

Α

D

Е

F

G

Н

74648

L

M

Ν

 \circ

Р

P0182, P0183 FTT SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0182	FTT SEN/CIRCUIT (Fuel tank temperature sensor circuit low input)	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The FTT sensor circuit is open or shorted.)
P0183	FTT SEN/CIRCUIT (Fuel tank temperature sensor circuit high input)	An excessively high voltage from the sensor is sent to ECM.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-278, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274650

1. CHECK DTC WITH COMBINATION METER

Refer to MWI-20, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to MWI-43, "Component Function Check".

2.CHECK FUEL TANK TEMPERATURE (FTT) SENSOR POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect fuel level sensor unit and fuel pump harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between fuel level sensor unit and fuel pump harness connector and ground.

	+		
	or unit and fuel mp	_	Voltage (Approx.)
Connector	Terminal		
B46	4	Ground	5 V

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

P0182, P0183 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

${f 3.}$ CHECK FUEL TANK TEMPERATURE (FTT) SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between fuel level sensor unit and fuel pump harness connector and ECM harness

EC

Α

+		_		
Fuel level sensor unit and fuel pump		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B46	4	F26	84	Existed

Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 4.}$ CHECK FUEL TANK TEMPERATURE (FTT) SENSOR GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect combination meter harness connector.
- Check the continuity between fuel level sensor unit and fuel pump harness connector and combination meter harness connector.

+		-	-	
Fuel level sensor unit and fuel pump		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
B46	5	M34	24	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO

>> Repair or replace error-detected parts. NO

5.CHECK FUEL TANK TEMPERATURE (FTT) SENSOR

Check the FTT sensor. Refer to EC-279, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

>> Replace "fuel level sensor unit and fuel pump". Refer to FL-5, "2WD: Exploded View" (2WD), FL-9, "AWD: Exploded View" (AWD).

Component Inspection

1. CHECK FUEL TANK TEMPERATURE (FTT) SENSOR

- Turn ignition switch OFF.
- Disconnect fuel level sensor unit and fuel pump harness connector.
- Remove fuel level sensor unit. Refer to FL-5, "2WD: Exploded View" (2WD), FL-9, "AWD: Exploded View"(AWD).

D

Е

F

Н

INFOID:0000000008274651

2013 JUKE

Р

Ν


P0182, P0183 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

4. Check resistance between fuel level sensor unit and fuel pump terminals by heating with hot water as shown in the figure.

Fuel level sensor unit and fuel pump		O a malistia a m		
+	-	Condition Resistance (ks		Resistance (kΩ)
Terr	ninal			
4	5	Temperature	20 (68)	2.3 – 2.7
4	3	[°C (°F)]	50 (122)	0.79 - 0.90

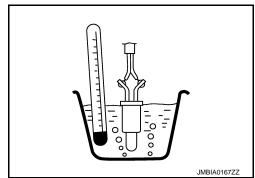

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace fuel level sensor unit and fuel pump. Refer to FL-5, "2WD : Exploded View".

Α

EC

P0190, P0192, P0193 FRP SENSOR

Trouble diagnosis name

(Trouble diagnosis content) FUEL PRES SEN/CIRCUIT

(Fuel rail pressure sensor

(Fuel rail pressure sensor

FRP SEN/CIRC

circuit low input)

FRP SEN/CIRC

circuit high input)

(Fuel rail pressure sensor

circuit low input and high in-

DTC Logic INFOID:0000000008274652

DTC DETECTION LOGIC

DTC No.

P0190

P0192

P0193

DTC detecting condition	Possible cause
Signal voltage from the fuel rail pressure sensor remains at more than 4.84 V / less than 0.2 V for 5 seconds or more.	Harness or connectors (Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open or short-
Signal voltage from the fuel rail pressure sensor remains at less than 0.37 V for 5 seconds or more.	ed.) (G sensor circuit is open or shorted.) (Camshaft position sensor circuit is open or shorted.)
Signal voltage from the fuel rail pressure sensor remains at more than 4.06 V for 5 seconds or more.	(Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) • Fuel rail pressure sensor • Battery current sensor • G sensor • Camshaft position sensor • Exhaust valve timing control position sensor

 Accelerator pedal position sensor 2 Turbocharger boost sensor · Engine oil pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start the engine ON and wait at least 60 seconds.
- Check DTC or 1st trip DTC.

Is DTC or 1st trip DTC detected?

YFS >> Proceed to EC-281, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

Turning the ignition switch ON with FRP sensor harness connector disconnected causes ECM to detect DTC P0190. Be sure to erase the DTC when the diagnosis procedure.

1. CHECK FUEL RAIL PRESSURE (FRP) SENSOR POWER SUPPLY-I

1. Turn ignition switch OFF.

Revision: 2014 February

Disconnect FRP sensor connector.

EC-281 2013 JUKE

Ν

INFOID:0000000008274653

< DTC/CIRCUIT DIAGNOSIS >

Turn ignition switch ON.

4. Check the voltage between FRP sensor harness connector terminals.

	FRP sensor	V 16	
Connector	+	_	Voltage (Approx.)
Connector	terminal		(11 - /
F5	1	3	5 V

Inspection result normal?

YES >> GO TO 6.

NO >> GO TO 2.

2. CHECK FRP SENSOR POWER SUPPLY-II

Check the voltage between FRP sensor harness connector and the ground.

	+		Villa
FRP sensor		_	Voltage (Approx.)
Connector	Terminal		(11 - 7
F5	1	Ground	5 V

Is inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.check sensor power supply circuit

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check harness connector for short to power and short to ground, between the following terminals.

EC	CM	Sensor		
Connector	Terminal	Name	Connector	Terminal
		FRP sensor	F5	1
F25	39	EOP sensor	F43	3
		Turbocharger boost sensor	F75	1
	68 72	Battery current sensor	F52	1
F26		G sensor	B32	3
F20		CMP sensor	F109	1
		EVT control position sensor	F110	1
E18	118	APP sensor 2	E101	5

Is inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

4. CHECK FRP SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between FRP sensor harness connector and ECM harness connector.

+		_		
FRP	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F5	3	F25	44	Existed

4. Also check harness for short to power.

P0190, P0192, P0193 FRP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Α

EC

D

Е

Is inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5. CHECK ECM GROUND CIRCUIT

Check the continuity between ECM harness connector and the ground.

E	ECM		Continuity
Connector	Terminal	Ground	Continuity
F25	1		
1 23	2		
	123	Ground	Existed
E18	124		
	127		

Is inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

6. CHECK FRP SENSOR SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between FRP sensor harness connector and ECM harness connector.

+		-		
FRP	sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
F5	2	F25	18	Existed

4. Also check harness for short to ground and to power.

Is inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts.

7. CHECK FRP SENSOR

Check the FRP sensor. Refer to EC-283, "Component Inspection".

Is inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

Component Inspection

1. CHECK FRP SENSOR

(P)WITH CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connector disconnected.
- 3. Start the engine.
- 4. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 5. Check that the "FUEL PRES SEN V" indication.

Monitor Item Condition		Values/Status
FUEL PRES SEN V	Engine speed: Idle	1,140 – 1,460 mV
	Engine speed: Revving engine from idle to 4,000 rpm quickly	1,300 – 2,900 mV

WITHOUT CONSULT

Revision: 2014 February

INFOID:0000000008274654

Ν

P0190, P0192, P0193 FRP SENSOR

[MR16DDT]

< DTC/CIRCUIT DIAGNOSIS >

- Turn ignition switch OFF.
- 2. Reconnect harness connector disconnected.
- 3. Start the engine.
- 4. Check FRP sensor signal voltage.

ECM				
		_	Condition	Value (Approx.)
		ninal		(* 199. 57)
E25	10	44	[Engine is running]Warm-up conditionIdle speed	1.14– 1.46 V
F25 18 44 -		44	[Engine is running]Warm-up conditionRevving engine from idle to 4,000 rpm quickly	1.3 – 2.9 V

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace FRP sensor. Refer to EM-51, "Exploded View".

P0191 FRP SENSOR

DTC Logic INFOID:0000000008274655

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis name)	DTC detecting condition	Possible cause
P0191	FRP SENSOR A (Fuel rail pressure sensor)	Fuel rail pressure remains at more than 14.5 MPa (147.9 kg/cm ² , 21025 psi) for 0.2 seconds or more during ignition ON.	Harness or connectors (Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Camshaft position sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) Fuel rail pressure sensor Battery current sensor G sensor Camshaft position sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2 Turbocharger boost sensor Engine oil pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

Start the engine and warm it up to the normal operating temperature.

NOTE:

Warm up the engine until "COOLAN TEMP/S" on "DATA MONITOR" of CONSULT reaches at least 70°C (158°F).

2. Turn the ignition switch OFF and cool the engine until the engine coolant temperature reaches 35°C (95°F) or less.

CAUTION:

- The difference between air temperature and engine coolant temperature must be 5°C (9°F) or
- Do not turn ignition switch ON.
- 3. Turn ignition switch ON and wait at least 60 seconds.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

>> Proceed to EC-286, "Diagnosis Procedure".

EC-285 Revision: 2014 February 2013 JUKE

EC

Α

Ν

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274656

NOTE:

Turning the ignition switch ON with FRP sensor harness connector disconnected causes ECM to detect DTC P0190. Be sure to erase the DTC when the diagnosis procedure.

1. CHECK FUEL RAIL PRESSURE (FRP) SENSOR POWER SUPPLY-I

- 1. Turn ignition switch OFF.
- 2. Disconnect FRP sensor connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between FRP sensor harness connector terminals.

	V 16		
Connector	+	_	Voltage (Approx.)
Connector	tern	ninal	,
F5	1	3	5 V

Inspection result normal?

YES >> GO TO 6.

NO >> GO TO 2.

2.CHECK FRP SENSOR POWER SUPPLY-II

Check the voltage between FRP sensor harness connector and the ground.

	+		Voltago	
FRP sensor		_	Voltage (Approx.)	
Connector	Terminal		(11 -)	
F5	1	Ground	5 V	

Is inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.check sensor power supply circuit

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check harness connector for short to power and short to ground, between the following terminals.

EC	CM	Sensor		
Connector	Terminal	Name	Connector	Terminal
		FRP sensor	F5	1
F25	39	EOP sensor	F43	3
		Turbocharger boost sensor	F75	1
	68 72	Battery current sensor	F52	1
F26		G sensor	B32	3
F20		CMP sensor	F109	1
		EVT control position sensor	F110	1
E18	118	APP sensor 2	E101	5

Is inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

4. CHECK FRP SENSOR GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between FRP sensor harness connector and ECM harness connector.

+		_		
FRP sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F5	3	F25	44	Existed

4. Also check harness for short to power.

Is inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

CHECK ECM GROUND CIRCUIT

Check the continuity between ECM harness connector and the ground.

ECM		Ground	Continuity	
Connector	Terminal	Giodila	Continuity	
F25	1		Existed	
F25	2			
	123	Ground		
E18	124			
	127			

Is inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

6. CHECK FRP SENSOR SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between FRP sensor harness connector and ECM harness connector.

+		-		
FRP sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F5	2	F25	18	Existed

4. Also check harness for short to ground and to power.

Is inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts.

7. CHECK FRP SENSOR

Check the FRP sensor. Refer to EC-283, "Component Inspection".

Is inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

Component Inspection

1.CHECK FRP SENSOR

(P)WITH CONSULT

1. Turn ignition switch OFF.

Revision: 2014 February EC-287 2013 JUKE

EC

Α

D

Е

J

K

L

//

Ν

0

Р

INFOID:0000000008274657

P0191 FRP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- 2. Reconnect harness connector disconnected.
- 3. Start the engine.
- 4. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 5. Check that the "FUEL PRES SEN V" indication.

Monitor Item	Condition	Values/Status
	Engine speed: Idle	1,140 – 1,460 mV
FUEL PRES SEN V	Engine speed: Revving engine from idle to 4,000 rpm quickly	1,300 – 2,900 mV

NWITHOUT CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connector disconnected.
- 3. Start the engine.
- 4. Check FRP sensor signal voltage.

ECM				
Connector	+	-	Condition	Value (Approx.)
Connector	Terminal			(
F25	18 44	4.4	[Engine is running]Warm-up conditionIdle speed	1.14– 1.46 V
		[Engine is running]Warm-up conditionRevving engine from idle to 4,000 rpm quickly	1.3 – 2.9 V	

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace FRP sensor. Refer to EM-51, "Exploded View".

P0196 EOT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0196 EOT SENSOR

DTC Logic INFOID:0000000008274658

DTC DETECTION LOGIC

NOTE:

If DTC P0196 is displayed with DTC P0197 or P0198, first perform the trouble diagnosis for DTC P0197 or P0198. Refer to EC-293, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition		Possible cause
		A)	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signals from EOT sensor and intake air temperature sensor 1.	Harness or connectors (EOT sensor circuit is open or shorted) EOT sensor
P0196	EOT SENSOR [Engine oil temperature (EOT) sensor circuit range/performance]	B)	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor1, IAT sensor2, ECT sensor, FTT sensor, and EOT sensor) shows that the signal voltage of the EOT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the EOT sensor circuit) EOT sensor

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 6.

NO >> GO TO 2.

2.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 3.

3.perform dtc confirmation procedure for malfunction a-i

- Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and let it idle for 5 minutes and 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-291, "Diagnosis Procedure".

NO >> GO TO 4.

f 4.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A-II

(P)With CONSULT

- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Check that "COOLAN TEMP/S" indicates above 80°C (176°F). If it is above 80°C (176°F), go to the following steps.

EC

Α

Е

F

D

Н

M

Ν

Р

< DTC/CIRCUIT DIAGNOSIS >

If it is below 80°C (176°F), warm engine up until "COOLAN TEMP/S" indicates more than 80°C (176°F). Then perform the following steps.

- 3. Turn ignition switch OFF and soak the vehicle in a cool place.
- 4. Turn ignition switch ON.

NOTE:

Do not turn ignition switch OFF until step 8.

- 5. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Check the following.

COOLAN TEMP/S	Below 40°C (104°F)
INT/A TEMP SE	Below 40°C (104°F)
Difference between "COOLAN TEMP/S" and "INT/A TEMP SE"	Within 6°C (11°F)

If they are within the specified range, perform the following steps.

If they are out of the specified range, soak the vehicle to meet the above conditions. Then perform the following steps.

NOTE:

- Do not turn ignition switch OFF.
- If it is supposed to need a long period of time, do not deplete the battery.
- 7. Start engine and let it idle for 5 minutes.
- 8. Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-291, "Diagnosis Procedure".

NO >> GO TO 5.

$oldsymbol{5}$ PERFORM COMPONENT FUNCTION CHECK (FOR MALFUNCTION B)

Perform component function check. Refer to EC-291, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the EOT sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to <u>EC-291</u>, "<u>Diagnosis Procedure</u>".

6.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 7.

7.PERFORM DTC CONFIRMATION PROCEDURE B

- Start engine and let it idle for 60 minutes.
- 2. Move the vehicle to a cool place.

NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

Α

EC

D

Start engine and let it idle for 5 minutes or more.

CAUTION:

Never turn ignition switch OFF during idling.

5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-291, "Diagnosis Procedure".

NO >> INSPECTION END


Component Function Check

INFOID:0000000008274659

1. CHECK ENGINE OIL TEMPERATURE (EOT) SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect EOT sensor harness connector.
- 3. Remove EOT sensor. Refer to EM-110, "Exploded View".
- 4. Check resistance between EOT sensor terminals by heating with hot water as shown in the figure.

EOT sensor				
+	-	Condition		Resistance ($k\Omega$)
Terminal				
		T	20 (68)	2.37 – 2.63
1	2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
		/1	90 (194)	0.236 - 0.260

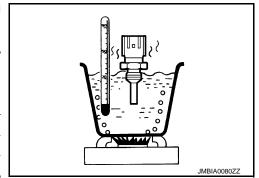

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Proceed to EC-291, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274660

1. CHECK ENGINE OIL TEMPERATURE (EOT) SENSOR

Check EOT sensor. Refer to EC-291, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace EOT sensor. Refer to EM-110, "Exploded View".

Component Inspection

INFOID:0000000008274661

K

Ν


Р

1. CHECK ENGINE OIL TEMPERATURE SENSOR

Turn ignition switch OFF.

- 2. Disconnect engine oil temperature sensor harness connector.
- 3. Remove engine oil temperature sensor.
- 4. Check resistance between engine oil temperature sensor terminals by heating with hot water as shown in the figure.

Engine oil temperature sensor		Condition		D : (1.0)
+	_	Condition		Resistance (kΩ)
Terminal				
		T	20 (68)	2.37 - 2.63
1	2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
		. ,,,	90 (194)	0.236 - 0.260

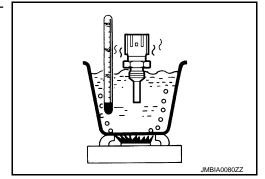

Is the inspection result normal?

YES >> INSPECTION END

P0196 EOT SENSOR



[MR16DDT]

NO >> Replace engine oil temperature sensor. Refer to EM-110, "Exploded View".

P0197, P0198 EOT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0197, P0198 EOT SENSOR

DTC Logic

DTC DETECTION LOGIC

D

Н

Ν

Р

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC Detecting Condition	Possible Cause	
P0197	EOT SEN/CIRC (Engine oil temperature sensor circuit low input)	An excessively low voltage from the engine oil temperature sensor is sent to ECM.	Harness or connectors (EOT sensor circuit is open or shorted.)	
P0198	EOT SEN/CIRC (Engine oil temperature sensor circuit high input)	An excessively high voltage from the engine oil temperature sensor is sent to ECM.	Engine oil temperature sensor	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-293, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274663

1. CHECK ENGINE OIL TEMPERATURE SENSOR POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect engine oil temperature (EOT) sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between EOT sensor harness connector and ground.

	+		Voltage (Approx.)	
EOT :	sensor	_		
Connector Terminal			, , ,	
F43	3	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK ENGINE OIL TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between EOT sensor harness connector and ECM harness connector.

+		_		
EOT sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F43	3	F25	39	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check eot sensor ground circuit

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between EOT sensor harness connector and ECM harness connector.

+			_	
EOT sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	,
F43	1	F25	44	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK ENGINE OIL TEMPERATURE SENSOR

Check the engine oil temperature sensor. Refer to EC-291, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace engine oil temperature sensor. Refer to EM-110. "Exploded View".


Component Inspection

INFOID:0000000008274664

1. CHECK ENGINE OIL TEMPERATURE SENSOR

- Turn ignition switch OFF.
- Disconnect engine oil temperature sensor harness connector.
- 3. Remove engine oil temperature sensor.
- 4. Check resistance between engine oil temperature sensor terminals by heating with hot water as shown in the figure.

Engine oil temperature sensor		Condition		5	
+	_	Condition		Resistance (kΩ)	
Terminal					
			20 (68)	2.37 - 2.63	
1	2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00	
		1 - ()1	90 (194)	0.236 - 0.260	

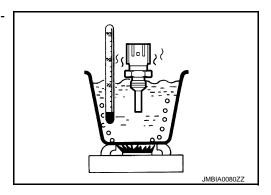

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine oil temperature sensor. Refer to EM-110, "Exploded View".

P0201, P0202, P0203, P0204 FUEL INJECTOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0201, P0202, P0203, P0204 FUEL INJECTOR

DTC Logic

DTC DETECTION LOGIC

EC

Α

D

Е

F

Н

K

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0201	INJECTOR CIRC-CYL1 (No.1 fuel injector circuit)	ECM detects No. 1 injector circuit is open or shorted.	
P0202	INJECTOR CIRC-CYL2 (No. 2 fuel injector circuit)	ECM detects No. 2 injector circuit is open or shorted.	The fuel injector circuit is open or shorted Fuel injector
P0203	INJECTOR CIRC-CYL3 (No. 3 fuel injector circuit)	ECM detects No. 3 injector circuit is open or shorted.	• ECM
P0204	INJECTOR CIRC-CYL4 (No. 4 fuel injector circuit)	ECM detects No. 4 injector circuit is open or shorted.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, conform that battery voltage is 11 V or more at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Start the engine and let it idle at least 30 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-295, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274666

1. PERFORM TROUBLE DIAGNOSIS FOR INJECTOR

Perform trouble diagnosis for injector. Refer to EC-493, "Component Function Check".

Is inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

Ν

M

Ρ

P0222, P0223 TP SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0222 or P0223 is displayed with DTC P0643 ,first perform the trouble diagnosis for DTC P0643. Refer to <u>EC-316, "DTC Logic"</u>.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0222	TP SEN 1/CIRC-B1 (Throttle position sensor 1 circuit low input)	An excessively low voltage from the TP sensor 1 is sent to ECM.	Harness or connectors (TP sensor 1 circuit is open or shorted.)
P0223	TP SEN 1/CIRC-B1 (Throttle position sensor 1 circuit high input)	An excessively high voltage from the TP sensor 1 is sent to ECM.	Electric throttle control actuator (TP sensor 1)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2.perform dtc confirmation procedure

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Proceed to EC-296, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274668

1. CHECK THROTTLE POSITION SENSOR 1 POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect electric throttle control actuator harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between electric throttle control actuator harness connector and ground.

	+		V. 1.
Electric throttle	Electric throttle control actuator		Voltage (Approx.)
Connector	Connector Terminal		(11 /
F29	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2.CHECK THROTTLE POSITION SENSOR 1 POWER SUPPLY CIRCUIT

P0222, P0223 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Turn ignition switch OFF.

- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness con-

	+ -			
	e control actu- tor	ECM		Continuity
Connector	Terminal	Connector Terminal		
F29	1	F26 62		Existed

4. Also check harness for short to ground.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.CHECK THROTTLE POSITION SENSOR 1 GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness con-

+		-		
	e control actu- tor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F29	4	F26	74	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

f 4.CHECK THROTTLE POSITION SENSOR 1 INPUT SIGNAL CIRCUIT

Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

+		-		
	le control actu- tor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F29	2	F26	75	Existed

Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 5.}$ CHECK THROTTLE POSITION SENSOR

Check the throttle position sensor. Refer to EC-298, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

>> Replace electric throttle control actuator. Refer to EM-27, "Exploded View". NO

EC

Α

[MR16DDT]

Е

Н

K

L

N

P0222, P0223 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Component Inspection

INFOID:0000000008274669

1. CHECK THROTTLE POSITION SENSOR

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Perform "Throttle Valve Closed Position Learning". Refer to EC-132, "Work Procedure".
- 4. Turn ignition switch ON.
- 5. Set selector lever to D (CVT) or 1st (M/T) position.
- 6. Check the voltage between ECM harness connector terminals as per the following conditions.

	ECM		Condition Voltag				
Connector	+	_			Condition Voltage		Voltage
Connector	Terr	ninal					
	75	75		Fully released	More than 0.36V		
F26	73	74	Accelerator	Fully depressed	Less than 4.75V		
F20		pedal	Fully released	Less than 4.75V			
	70		76 Fully depress		Fully depressed	More than 0.36V	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

P0234 TC SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0234 TC SYSTEM

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0234 is displayed with DTC P0237 or P0238, first perform the trouble diagnosis for DTC P0237 or P0238. Refer to <u>EC-302</u>, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0234	TC SYSTEM-B1 (Turbocharger overboost condition)	Turbocharger boost is higher than the target value.	 Turbocharger boost sensor Turbocharger boost control solenoid valve Exhaust manifold and turbocharger assembly Disconnection, looseness or improper connection of boost control actuator hose

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-299, "Component Function Check".

NOTE:

Use component function check to check the overall function of the turbocharger system circuit. During this check, DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-300, "Diagnosis Procedure".

Component Function Check

1. CHECK BOOST CONTROL ACTUATOR HOSE

Check disconnection, looseness or improper connection of hose between turbocharger boost control solenoid valve and boost control actuator.


Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to EC-300, "Diagnosis Procedure".

2.PERFORM COMPONENT FUNCTION CHECK

- 1. Turn ignition switch OFF.
- Disconnect turbocharger boost control solenoid valve harness connector.
- 3. Disconnect of hose between turbocharger boost control solenoid valve and compressor outlet pipe.
- 4. Install pressure pump to turbocharger boost control solenoid valve.
- Check that the rod of the boost control actuator activates when supplying pressure and battery voltage to the turbocharger boost control solenoid valve as per the following conditions.

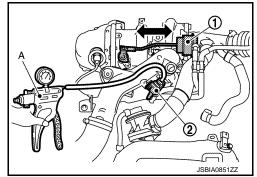

EC

Α

D

Е

F

Н

INFOID:000000000827467

K

M

Ν

0

Р

Turbocharger boost control solenoid valve	Operation	
Condition	- Operation	
Supply pressure [73 kPa (730 mbar, 548 mmHg, 21.56 inHg)] with battery voltage to terminals 1 and 2	Boost control actuator rod operates	
Supply pressure [73 kPa (730 mbar, 548 mmHg, 21.56 inHg)] without battery voltage to terminals 1 and 2	Boost control actuator rod not operates	

CAUTION:

Do not supply pressure over 83 kPa (830 mbar, 623 mmHg, 24.51 inHg)

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-300, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274672

CHECK BOOST CONTROL ACTUATOR HOSE

Check disconnection, looseness or improper connection of hose between turbocharger boost control solenoid valve and boost control actuator.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2.check turbocharger boost control solenoid valve power supply

- 1. Turn ignition switch OFF.
- Disconnect turbocharger boost control solenoid valve harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between turbocharger boost control solenoid valve harness connector and ground.

+			
Turbocharger boost control sole- noid valve		_	Voltage
Connector Terminal			
F54	F54 2		Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.check turbocharger boost control solenoid valve power supply circuit

- Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- Check the continuity between turbocharger boost control solenoid valve harness connector and IPDM E/R harness connector.

+		_		
•	r boost control id valve	IPDM E/R		Continuity
Connector	Terminal	Connector Terminal		
F54	2	E14	36	Existed

Also check harness for short to ground and short.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

4.CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT

P0234 TC SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between turbocharger boost control solenoid valve harness connector and ECM harness connector.

+		-		
•	r boost control id valve	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F54	1	F26	73	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

${f 5.}$ CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE

Check the turbocharger boost control solenoid valve. Refer to EC-179, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace turbocharger boost control solenoid valve. Refer to EM-37, "Exploded View".

6. CHECK BOOST CONTROL ACTUATOR

Check the boost control actuator. Refer to EM-38, "Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace exhaust manifold and turbocharger assembly. Refer to EM-37, "Exploded View".

7 . CHECK TURBOCHARGER BOOST SENSOR

Check the turbocharger boost sensor. Refer to EC-304, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace turbocharger boost sensor. Refer to EM-30, "Exploded View". EC

Α

D

Е

Н

K

M

L

Ν

Р

P0237, P0238 TC BOOST SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0237	TC BOOST SEN/CIRC-B1 (Turbocharger boost sensor circuit low input)	An excessively low voltage from the turbocharger boost sensor is sent to ECM.	Harness or connectors (Turbocharger boost sensor circuit is open or shorted.)
P0238	TC BOOST SEN/CIRC-B1 (Turbocharger boost sensor circuit high input)	An excessively high voltage from the turbocharger boost sensor is sent to ECM.	(Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Camshaft position sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) Turbocharger boost sensor Fuel rail pressure sensor Battery current sensor G sensor Camshaft position sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-302, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274674

1. CHECK TURBOCHARGER BOOST SENSOR POWER SUPPLY

- Disconnect turbocharger boost sensor harness connector.
- Turn ignition switch ON.
- 3. Check the voltage between turbocharger boost sensor harness connector and ground.

P0237, P0238 TC BOOST SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

	+		
Turbocharger boost sensor		_	Voltage (Approx.)
Connector Terminal			(11 /
F75	1	Ground	5 V

EC

Α

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

D

Е

F

K

L

Ν

Р

2.CHECK SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check harness connector for short to power and short to ground, between the following terminals.

ECM		Sensor			
Connector	Terminal	Name	Connector	Terminal	
		FRP sensor	F5	1	
F25	39	EOP sensor	F43	3	
		Turbocharger boost sensor	F75	1	
	00	Battery current sensor	F52	1	
F26	68	G sensor	B32	3	
F20	70	CMP sensor	F109	1	
	72	EVT control position sensor	F110	1	
E18	118	APP sensor 2	E101	5	

Is inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 3.}$ CHECK TURBOCHARGER BOOST SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between turbocharger boost sensor harness connector and ECM harness connector.

+		_		
Turbocharger boost sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F75	3	F25	44	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

f 4.CHECK TURBOCHARGER BOOST SENSOR INPUT SIGNAL CIRCUIT

1. Check the continuity between turbocharger boost sensor harness connector and ECM harness connector.

+		_		
Turbocharger boost sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F75	2	F25	41	Existed

Also check harness for short to ground and to power.

P0237, P0238 TC BOOST SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5. CHECK TURBOCHARGER BOOST SENSOR

Check the turbocharger boost sensor. Refer to EC-304, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace turbocharger boost sensor. Refer to EM-37, "Exploded View".

Component Inspection

INFOID:0000000008274675


[MR16DDT]

1. CHECK TURBOCHARGER BOOST SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove turbocharger boost sensor with its harness connector.
- Install pressure pump (A) to turbocharger boost sensor (1).

When insert a pressure pump hose to the sensor, be careful to the damage of the sensor housing.

- 4. Turn ignition switch ON.
- 5. Check the voltage between ECM harness connector terminals as per the following conditions.

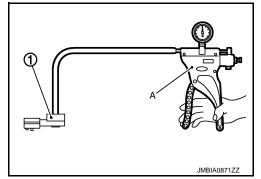

NOTE:

- · Always calibrate the pressure pump gauge when using it.
- Inspection should be done at room temperature [10 30°C (50 86°F)].

ECM			O I I I I I I I I I I I I I I I I I I I		
Connector	+	_	Condition [Pressure (Relative to atmospheric pressure)]	Voltage (Approx.)	
Connector	Terminal		, , , , , , , , , , , , , , , , , , , ,	, , ,	
F25	F25 41 44		0 kPa (0 mbar, 0 mmHg, 0 inHg)	2.03 V	
1 23	71	44	40 kPa (400 mbar, 300 mmHg, 11.81 inHg)	2.67 V	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace turbocharger boost sensor. Refer to EM-37, "Exploded View".

P0300, P0301, P0302, P0303, P0304 MISFIRE

DTC Logic INFOID:0000000008274676

DTC DETECTION LOGIC

When a misfire occurs, engine speed will fluctuate. If the engine speed fluctuates enough to cause the crankshaft position (CKP) sensor (POS) signal to vary, ECM can determine that a misfire is occurring.

Sensor	Input signal to ECM	ECM function
Crankshaft position sensor (POS)	Engine speed	On board diagnosis of misfire

The misfire detection logic consists of the following two conditions.

1. One Trip Detection Logic (Three Way Catalyst Damage)

On the 1st trip, when a misfire condition occurs that can damage the three way catalyst (TWC) due to overheating, the MIL will blink.

When a misfire condition occurs, the ECM monitors the CKP sensor signal every 200 engine revolutions for a change.

When the misfire condition decreases to a level that will not damage the TWC, the MIL will turn off. If another misfire condition occurs that can damage the TWC on a second trip, the MIL will blink. When the misfire condition decreases to a level that will not damage the TWC, the MIL will remain on. If another misfire condition occurs that can damage the TWC, the MIL will begin to blink again.

Two Trip Detection Logic (Exhaust quality deterioration)

For misfire conditions that will not damage the TWC (but will affect vehicle emissions), the MIL will only light when the misfire is detected on a second trip. During this condition, the ECM monitors the CKP sensor signal every 1,000 engine revolutions.

A misfire malfunction can be detected on any one cylinder or on multiple cylinders.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0300	MULTI CYL MISFIRE (Multiple cylinder misfire detected)	Multiple cylinder misfire.	Improper spark plug Insufficient compression
P0301	CYL 1 MISFIRE (No.1 cylinder misfire detected)	No. 1 cylinder misfires.	Incorrect fuel pressure Fuel Injector circuit is open or shorted
P0302	CYL 2 MISFIRE (No. 2 cylinder misfire detected)	No. 2 cylinder misfires.	Fuel injector Intake air leak Ignition signal circuit is open or shorted
P0303	CYL 3 MISFIRE (No. 3 cylinder misfire detected)	No. 3 cylinder misfires.	Lack of fuel Signal plate A/F sensor 1 Incorrect PCV hose connection
P0304	CYL 4 MISFIRE (No. 4 cylinder misfire detected)	No. 4 cylinder misfires.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Restart engine and let it idle for about 15 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

>> Proceed to EC-306, "Diagnosis Procedure".

EC-305 Revision: 2014 February 2013 JUKE

EC

Α

D

Е

F

Н

NO >> GO TO 3.

3.perform dtc confirmation procedure-ii

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and drive the vehicle as per the similar conditions to (1st trip) Freeze Frame Data for a certain time. Refer to the table below.

Hold the accelerator pedal as steady as possible.

The similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following conditions should be satisfied at the same time.

CAUTION:

Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws when driving.

Engine speed	Engine speed in the freeze frame data \pm 400 rpm
Vehicle speed	Vehicle speed in the freeze frame data ± 10 km/h (6 MPH)
Engine coolant temperature (T)	When the freeze frame data shows lower than 70°C (158°F), T should be lower than 70°C (158°F).
condition	When the freeze frame data shows higher than or equal to 70°C (158°F), T should be higher than or equal to 70°C (158°F).

The time to driving varies according to the engine speed in the freeze frame data.

Engine speed	Time
Around 1,000 rpm	Approximately 10 minutes
Around 2,000 rpm	Approximately 5 minutes
More than 3,000 rpm	Approximately 3.5 minutes

3. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-306, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274677

1. CHECK FOR INTAKE AIR LEAK AND PCV HOSE

- 1. Start engine and run it at idle speed.
- 2. Listen for the sound of the intake air leak.
- 3. Check PCV hose connection.

Is intake air leak detected?

YES >> Discover air leak location and repair.

NO >> GO TO 2.

2. CHECK FOR EXHAUST SYSTEM CLOGGING

Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 3.

YES-2 >> Without CONSULT: GO TO 4.

NO >> Repair or replace it.

3. PERFORM POWER BALANCE TEST

(P)With CONSULT

- Start engine.
- 2. Perform "POWER BALANCE" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 3. Make sure that each circuit produces a momentary engine speed drop.

Is the inspection result normal?

YES >> GO TO 9. NO >> GO TO 4.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

4. CHECK FUNCTION OF FUEL INJECTOR

- 1. Start engine and let engine idle.
- Listen to each fuel injector operating sound.


Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 5.

NO

>> Perform trouble diagnosis for FUEL INJECTOR. Refer to EC-493, "Diagnosis Procedure".

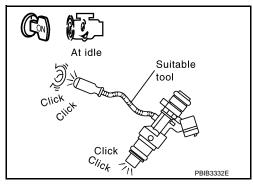

$\mathbf{5}.$ CHECK FUNCTION OF IGNITION COIL-I

CAUTION:

Do the following procedure in the place where ventilation is good without the combustible.

- Turn ignition switch OFF.
- 2. Remove fuel pump fuse in IPDM E/R to release fuel pressure.

NOTE:

Do not use CONSULT to release fuel pressure, or fuel pressure applies again during the following procedure.

- Start engine. 3.
- 4. After engine stalls, crank it two or three times to release all fuel pressure.
- Turn ignition switch OFF.
- 6. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- 7. Remove ignition coil and spark plug of the cylinder to be checked.
- 8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 9. Connect spark plug and harness connector to ignition coil.
- 10. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 -0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 11. Crank engine for about 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

13 - 17 mm (0.52-0.66 in) Grounded metal portion

(Cylinder head, cylinder block, etc.)

Spark should be generated.

CAUTION:

- Do not approach to the spark plug and the ignition coil within 50 cm (19.7 in). Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken.

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 6.

$oldsymbol{6}$.CHECK FUNCTION OF IGNITION COIL-II

- Turn ignition switch OFF.
- Disconnect spark plug and connect a known-good spark plug. 2.
- Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

Is the inspection result normal?

Revision: 2014 February

EC-307 2013 JUKE EC

D

Е

Н

.IMBIA0066GB

M

Ν

P0300, P0301, P0302, P0303, P0304 MISFIRE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

YES >> GO TO 7.

NO >> Check ignition coil, power transistor and their circuits. Refer to <u>EC-506, "Diagnosis Procedure"</u>.


7.CHECK SPARK PLUG

Check the initial spark plug for fouling, etc.

Is the inspection result normal?

YES >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-23, "Inspection".

NO >> Repair or clean spark plug. Then GO TO 8.

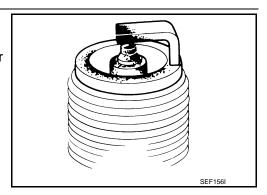

8. CHECK FUNCTION OF IGNITION COIL-III

- 1. Reconnect the initial spark plugs.
- Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace spark plug(s) with standard type one(s). For spark plug type. Refer to <u>EM-22</u>, "Removal and Installation".

9. CHECK COMPRESSION PRESSURE

Check compression pressure. Refer to EM-15, "Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

10. CHECK FUEL PRESSURE

- Install all removed parts.
- Release fuel pressure to zero.
- Install fuel pressure gauge and check fuel pressure. Refer to EC-137, "Work Procedure".

At idling: Approximately 500 kPa (5.1 kg/cm², 73 psi)

Is the inspection result normal?

YES >> GO TO 12. NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly". Refer to FL-5, "2WD : Exploded View".

NO >> Repair or replace.

12. CHECK IGNITION TIMING

Check the following items.

For procedure, refer to EC-125, "Work Procedure".

For specification, refer to EC-543, "Ignition Timing".

Is the inspection result normal?

YES >> GO TO 13.

NO >> Follow the EC-125, "Work Procedure".

P0300, P0301, P0302, P0303, P0304 MISFIRE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

13. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect A/F sensor 1 harness connector.
- Disconnect ECM harness connector.
- 4. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

+		_		
A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F70	1	F25	21	Existed

Check the continuity between A/F sensor 1 harness connector or ECM harness connector and ground.

	+		
A/F se	A/F sensor 1		Continuity
Connector	Terminal		
F70	1	Ground	Not existed

+				
ECM		_	Continuity	
Connector	Terminal			
F25	21	Ground	Not existed	

6. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

14.CHECK A/F SENSOR 1 HEATER

Check the A/F sensor 1 heater. Refer to EC-173, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace A/F sensor 1. Refer to EM-41, "Exploded View".

15. CHECK MASS AIR FLOW SENSOR

(P)With CONSULT

Check "MASS AIRFLOW" in "DATA MONITOR" mode of "ENGINE" using CONSULT.

1.0 - 4.0 g/s : at idling 2.0 - 10.0 g/s : at 2,500 rpm

With GST

Check mass air flow sensor signal in Service \$01 with GST.

1.0 - 4.0 g/s : at idling 2.0 - 10.0 q/s : at 2,500 rpm

Is the measurement value within the specification?

YES >> GO TO 16.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or ground. Refer to EC-207, "DTC Logic".

16. CHECK SYMPTOM TABLE

Check items on the rough idle symptom in EC-528, "Symptom Table".

Is the inspection result normal?

EC-309 Revision: 2014 February

EC

D

Е

F

K

L

N

2013 JUKE

P0300, P0301, P0302, P0303, P0304 MISFIRE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

YES >> GO TO 17.

NO >> Repair or replace error-detected parts.

17. ERASE THE 1ST TRIP DTC

Some tests may cause a 1st trip DTC to be set.

Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to EC-62, "Diagnosis Description".

>> GO TO 18.

18. CHECK INTERMITTENT INCIDENT

Refer to GI-43, "Intermittent Incident".

>> INSPECTION END

Α

EC

D

Е

F

Н

K

N

Р

INFOID:0000000008274679

P0327, P0328 KS

DTC Logic INFOID:0000000008274678

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detected condition	Possible cause
P0327	KNOCK SEN/CIRC-B1 (Knock sensor circuit low input)	An excessively low voltage from the knock sensor is sent to ECM.	Harness or connectors (Knock sensor circuit is open or short-
P0328	KNOCK SEN/CIRC-B1 (Knock sensor circuit high input)	An excessively high voltage from the knock sensor is sent to ECM.	ed.) • Knock sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and run it for at least 5 seconds at idle speed.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-311, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

CHECK KNOCK SENSOR GROUND CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect knock sensor harness connector.
- Disconnect ECM harness connector.
- Check the continuity between knock sensor harness connector and ECM harness connector.

+				
Knock	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F12	2	F25	35	Existed

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2.CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT

Check the continuity between knock sensor harness connector and ECM harness connector.

+		-		
Knock	sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
F12	1	F25	36	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK KNOCK SENSOR

Check the knock sensor. Refer to EC-312, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace knock sensor. Refer to EM-110, "Exploded View".

Component Inspection

1. CHECK KNOCK SENSOR

- Turn ignition switch OFF.
- 2. Disconnect knock sensor harness connector.
- 3. Check resistance between knock sensor terminals as per the following.

NOTE:

It is necessary to use an ohmmeter which can measure more than 10 M Ω .

Knock sensor		
+	-	Resistance
Terminals		
1 2		Approx. 532 - 588 kΩ [at 20°C (68°F)]

CAUTION:

Do not use any knock sensors that have been dropped or physically damaged. Use only new ones.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace knock sensor. Refer to EM-110, "Exploded View".

P0335 CKP SENSOR (POS)

DTC Logic INFOID:0000000008274681

DTC DETECTION LOGIC

NOTE:

If DTC P0340 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-392, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0335	CKP SEN/CIRCUIT [Crankshaft position sensor (POS) circuit]	 The crankshaft position sensor (POS) signal is not detected by the ECM during the first few seconds of engine cranking. The proper pulse signal from the crankshaft position sensor (POS) is not sent to ECM while the engine is running. The crankshaft position sensor (POS) signal is not in the normal pattern during engine running. 	Harness or connectors [Crankshaft position sensor (POS) circuit is open or shorted.] Crankshaft position sensor (POS) Signal plate

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V with ignition switch ON.

>> GO TO 2.

2.perform dtc confirmation procedure

- Start engine and let it idle for at least 5 seconds. If engine does not start, crank engine for at least 2 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-313, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK CRANKSHAFT POSITION (CKP) SENSOR (POS) POWER SUPPLY

- Disconnect crankshaft position (CKP) sensor (POS) harness connector. 1.
- Turn ignition switch ON.
- Check the voltage between CKP sensor (POS) harness connector and ground.

	+		Voltago	
CKP sensor (POS)		_	Voltage (Approx.)	
Connector	Terminal		,	
F107	3	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

EC-313 Revision: 2014 February 2013 JUKE

EC

Α

D

Е

Н

K

INFOID:0000000008274682

Р

F

Ν

2.CHECK CKP SENSOR (POS) POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

+		_		
CKP sen	sor (POS)	ECM		Continuity
Connector	Terminal	Connector Terminal		
F107	3	F26	58	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.CHECK CKP SENSOR (POS) GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

+		-		
CKP sen	sor (POS)	ECM		Continuity
Connector	Terminal	Connector Terminal		
F107	2	F26	60	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK CKP SENSOR (POS) INPUT SIGNAL CIRCUIT

1. Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

+		_		
CKP sen	sor (POS)	ECM		Continuity
Connector	Terminal	Connector Terminal		
F107	1	F26	64	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5. CHECK CRANKSHAFT POSITION SENSOR (POS)

Check the crankshaft position sensor (POS). Refer to EC-315, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace crankshaft position sensor (POS). Refer to EM-110, "Exploded View".

6.CHECK GEAR TOOTH


Remove crankshaft position sensor (POS). Refer to <u>EM-110, "Exploded View"</u>.

P0335 CKP SENSOR (POS)

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Look into the mounting hole (A) of the crankshaft position sensor (POS) to check that there is no missing gear tooth in the signal plate (1).

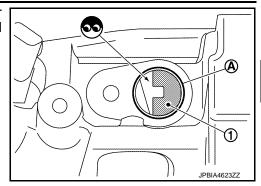

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace the signal plate. Refer to EM-110, "Exploded View".

Component Inspection

INFOID:0000000008274683


1. CHECK CRANKSHAFT POSITION SENSOR (POS)-I

- 1. Turn ignition switch OFF.
- 2. Loosen the fixing bolt of the sensor.
- 3. Disconnect crankshaft position sensor (POS) harness connector.
- 4. Remove the sensor.
- 5. Visually check the sensor for chipping.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace crankshaft position sensor (POS). Refer to EM-110, "Exploded View".

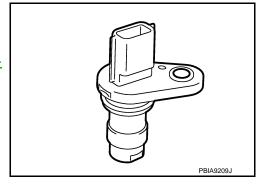

2.CHECK CRANKSHAFT POSITION SENSOR (POS)-II

Check the resistance between crankshaft position sensor (POS) terminals as per the following.

Crankshaft posit	ion sensor (POS)	
+ -		Resistance [at 25°C (77°F)]
Terminal (Polarity)		
1	2	
I	3	Except 0 or $\infty \Omega$
2	3	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace crankshaft position sensor (POS). Refer to EM-110, "Exploded View".

С

EC

Α

Е

F

D

008274683

Н

1

J

K

M

Ν

0

Р

P0340 CMP SENSOR (PHASE)

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0340	CMP SEN/CIRC-B1 [Camshaft position sensor (PHASE) circuit]	 The cylinder No. signal is not sent to ECM for the first few seconds during engine cranking. The cylinder No. signal is not sent to ECM during engine running. The cylinder No. signal is not in the normal pattern during engine running. 	Harness or connectors (Camshaft position sensor circuit is open or shorted) (Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) Camshaft position sensor Camshaft (Intake) Starter motor Starting system circuit Dead (Weak) battery Fuel rail pressure sensor Battery current sensor G sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2 Turbocharger boost sensor Engine oil pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V with ignition switch ON.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

- Start engine and let it idle for at least 5 seconds.
 If engine does not start, crank engine for at least 2 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-317, "Diagnosis Procedure".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE-I

P0340 CMP SENSOR (PHASE)

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

INFOID:0000000008274685

Maintaining engine speed at more than 800 rpm for at least 5 seconds.

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-317, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK STARTING SYSTEM

Turn ignition switch to START position.

Does the engine turn over? Does the starter motor operate?

YES >> GO TO 2.

NO >> Check starting system (Refer to STR-14, "Work Flow (With GR8-1200 NI)" or STR-17, "Work Flow (Without GR8-1200 NI)". For the details of the GR8-1200 NI, refer to STR-4, "Special Service Tools".).

2.CHECK CAMSHAFT POSITION (CMP) SENSOR (PHASE) POWER SUPPLY

Turn ignition switch OFF.

- 2. Disconnect camshaft position (CMP) sensor (PHASE) harness connector.
- Turn ignition switch ON.
- Check the voltage between CMP sensor (PHASE) harness connector and ground.

-	+		Valta va	
CMP sensor (PHASE)		_	Voltage (Approx.)	
Connector	Terminal		(11 /	
F109	1	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

3.check sensor power supply circuit

- Turn ignition switch OFF.
- Disconnect ECM harness connector. 2.
- Check harness connector for short to power and short to ground, between the following terminals.

ECM		Sensor			
Connector	Terminal	Name	Connector	Terminal	
		FRP sensor	F5	1	
F25	39	EOP sensor	F43	3	
		Turbocharger boost sensor	F75	1	
	68 72	Battery current sensor	F52	1	
F26		G sensor	B32	3	
1 20		CMP sensor	F109	1	
		EVT control position sensor	F110	1	
E18	118	APP sensor 2	E101	5	

Is inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

4. CHECK CMP SENSOR (PHASE) GROUND CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between CMP sensor (PHASE) harness connector and ECM harness connector.

D

Е

F

Н

K

EC

Α

N Р

+		_		
CMP sensor (PHASE)		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F109	2	F26	59	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5.check cmp sensor (phase) input signal circuit

- 1. Disconnect ECM harness connector.
- 2. Check the continuity between CMP sensor (PHASE) harness connector and ECM harness connector.

+		_		
CMP sensor (PHASE)		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F109	3	F26	63	Existed

3. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6. CHECK CAMSHAFT POSITION SENSOR (PHASE)

Check the camshaft position sensor (PHASE). Refer to EC-318, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace camshaft position sensor (PHASE). Refer to EM-85, "Removal and Installation".

7. CHECK CAMSHAFT (INT)


Check the following.

- Accumulation of debris to the signal plate of camshaft rear end
- Chipping signal plate of camshaft rear end

Is the inspection result normal?

YES >> Check intermittent incident. Refer to <u>GI-43, "Intermittent Incident"</u>.

NO >> Remove debris and clean the signal plate of camshaft rear end or replace camshaft. Refer to EM-85, "Removal and Installation".

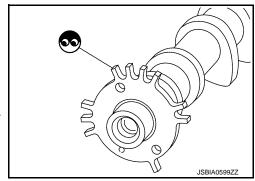

INFOID:0000000008274686

Component Inspection

1. CHECK CAMSHAFT POSITION SENSOR (PHASE)-I

- 1. Turn ignition switch OFF.
- Loosen the fixing bolt of the sensor.
- 3. Disconnect camshaft position sensor (PHASE) harness connector.
- 4. Remove the sensor.

P0340 CMP SENSOR (PHASE)

< DTC/CIRCUIT DIAGNOSIS >


[MR16DDT]

5. Visually check the sensor for chipping.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace camshaft position sensor (PHASE).

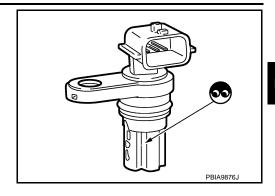

$2. \hbox{CHECK CAMSHAFT POSITION SENSOR (PHASE)-II}$

Check the resistance camshaft position sensor (PHASE) terminals as per the following.

Camshaft positio	n sensor (PHASE)		
+	_	Resistance [Ω at 25°C (77°F)]	
Terminals	s (Polarity)		
1	2		
	3	Except 0 or ∞	
2	3		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace camshaft position sensor (PHASE). Refer to EM-85, "Removal and Installation".

Α

EC

С

D

Е

F

Н

Κ

L

M

Ν

0

Р

2013 JUKE

P0420 THREE WAY CATALYST FUNCTION


DTC Logic

DTC DETECTION LOGIC

The ECM monitors the switching frequency ratio of air fuel ratio (A/F) sensor 1 and heated oxygen sensor 2.

A three way catalyst (manifold) with high oxygen storage capacity will indicate a low switching frequency of heated oxygen sensor 2. As oxygen storage capacity decreases, the heated oxygen sensor 2 switching frequency will increase.

When the frequency ratio of air fuel ratio (A/F) sensor 1 and heated oxygen sensor 2 approaches a specified limit value, the three way catalyst (manifold) malfunction is diagnosed.

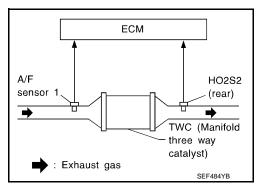

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0420	TW CATALYST SYS-B1 (Catalyst system efficiency below threshold)	Three way catalyst (manifold) does not operate properly. Three way catalyst (manifold) does not have enough oxygen storage capacity.	 Three way catalyst (manifold) Exhaust tube Intake air leaks Fuel injector Fuel injector leaks Spark plug Improper ignition timing

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

Will CONSULT be used?

YES >> GO TO 2. NO >> GO TO 6.

2.perform dtc confirmation procedure-i

(P)With CONSULT

TESTING CONDITION:

Do not hold engine speed for more than the specified minutes below.

- 1. Start engine and warm it up to the normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 6. Let engine idle for 1 minute.
- 7. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 8. Check that "COOLAN TEMP/S" indicates more than 70°C (158°F).

 If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches to 70°C (158°F).
- Open engine hood.

Revision: 2014 February

- Select "DTC & SRT CONFIRMATION" then "SRT WORK SUPPORT" mode of "ENGINE" using CON-SULT.
- 11. Rev engine up to 2,000 to 3,000 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely.

P0420 THREE WAY CATALYST FUNCTION [MR16DDT] < DTC/CIRCUIT DIAGNOSIS > 12. Check the indication of "CATALYST". Α Which is displayed on CONSULT screen? CMPLT>> GO TO 5. INCMP >> GO TO 3. EC 3.PERFORM DTC CONFIRMATION PROCEDURE-II Wait 5 seconds at idle. Rev engine up to 2,000 to 3,000 rpm and maintain it until "INCMP" of "CATALYST" changes to "CMPLT" (It will take approximately 5 minutes). Does the indication change to "CMPLT"? YES >> GO TO 5. D NO >> GO TO 4. f 4.PERFORM DTC CONFIRMATION PROCEDURE AGAIN Е Stop engine and cool it down to less than 70°C (158°F). Perform DTC confirmation procedure again. F >> GO TO 2. 5. PERFORM DTC CONFIRMATION PROCEDURE-III Check 1st trip DTC. Is 1st trip DTC detected? YES >> Proceed to EC-322, "Diagnosis Procedure". NO >> INSPECTION END Н $oldsymbol{6}$.PERFORM COMPONENT FUNCTION CHECK Perform component function check. Refer to EC-321, "Component Function Check". NOTE: Use component function check to check the overall function of the three way catalyst (manifold). During this check, a 1st trip DTC might not be confirmed. Is the inspection result normal? YES >> INSPECTION END >> Proceed to EC-322, "Diagnosis Procedure". NO Component Function Check INFOID:0000000008274688 1. PERFORM COMPONENT FUNCTION CHECK **WWithout CONSULT** Start engine and warm it up to the normal operating temperature. Turn ignition switch OFF and wait at least 10 seconds. 2. M Restart engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load. Let engine idle for 1 minute. N Open engine hood. 6. Check the voltage between ECM harness connector terminals as per the following condition.

ECM					
Connector	+	_	Condition	Voltage (V)	
Connector	Ter	minal			
F25	29	33	Keeping engine speed at 2500 rpm constant under no load	The voltage fluctuation cycle takes more than 5 seconds. • 1 cycle: 0.6 - 1.0 → 0 - 0.3 → 0.6 - 1.0	'

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-322, "Diagnosis Procedure".

P0420 THREE WAY CATALYST FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Diagnosis Procedure

INFOID:0000000008274689

1. CHECK EXHAUST SYSTEM

Visually check exhaust tubes and muffler for dent.


Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2. CHECK EXHAUST GAS LEAK

- 1. Start engine and run it at idle.
- 2. Listen for an exhaust gas leak before the three way catalyst (manifold).

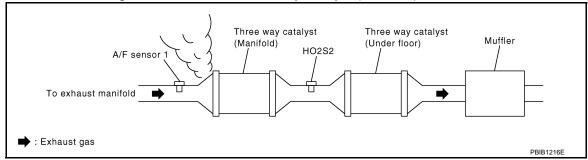

Is exhaust gas leak detected?

YES >> Repair or replace error-detected parts.

NO >> GO TO 3.

3. CHECK INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace error-detected parts.

NO >> GO TO 4.

4. CHECK IGNITION TIMING AND IDLE SPEED

Check the following items. Refer to EC-125, "Work Procedure".

For specification, refer to EC-543, "Ignition Timing"

For specification, refer to EC-543, "Idle Speed".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Follow the <u>EC-125</u>, "Work Procedure".

5. CHECK FUEL INJECTOR

Check the fuel injector. Refer to EC-493, "Component Function Check".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Perform <u>EC-493</u>, "<u>Diagnosis Procedure</u>".

6.CHECK FUNCTION OF IGNITION COIL-I

CAUTION:

Do the following procedure in the place where ventilation is good without the combustible.

- 1. Turn ignition switch OFF.
- 2. Remove fuel pump fuse in IPDM E/R to release fuel pressure.

NOTE:

Do not use CONSULT to release fuel pressure, or fuel pressure applies again during the following procedure.

- 3. Start engine.
- 4. After engine stalls, crank it two or three times to release all fuel pressure.
- 5. Turn ignition switch OFF.
- 6. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- Remove ignition coil and spark plug of the cylinder to be checked.


P0420 THREE WAY CATALYST FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.

- 9. Connect spark plug and harness connector to ignition coil.
- 10. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- Crank engine for about 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

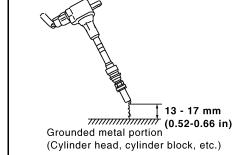

Spark should be generated.

CAUTION:

 Do not approach to the spark plug and the ignition coil within 50 cm (19.7 in). Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.

• It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken. NOTE:

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 7.

7.CHECK FUNCTION OF IGNITION COIL-II

1. Turn ignition switch OFF.

- 2. Disconnect spark plug and connect a known-good spark plug.
- Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

Is the inspection result normal?

YES >> GO TO 8.

NO

NO >> Check ignition coil, power transistor and their circuits. Refer to EC-506, "Diagnosis Procedure".


8. CHECK SPARK PLUG

Check the initial spark plug for fouling, etc. Refer to <a>EM-23, "Inspection".

Is the inspection result normal?

YES >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-23, "Inspection".

>> Repair or clean spark plug. Refer to EM-57, "Exploded View". Then GO TO 9

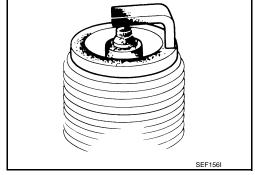

9. CHECK FUNCTION OF IGNITION COIL-III

- Reconnect the initial spark plugs.
- Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to <u>EM-22</u>, "Removal and Installation".

EC

Α

С

D

F

Н

J

K

M

Ν

 \cap

Р

2013 JUKE

P0420 THREE WAY CATALYST FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

10. CHECK FUEL INJECTOR

- 1. Turn ignition switch OFF.
- 2. Remove fuel injector assembly.

Refer to EM-51, "Exploded View".

- Keep fuel hose and all fuel injectors connected to fuel tube.
- 3. Disconnect all ignition coil harness connectors.
- 4. Reconnect all fuel injector harness connectors disconnected.
- 5. Turn ignition switch ON.

Does fuel drip from fuel injector?

YES >> GO TO 11.

NO >> Replace the fuel injector(s) from which fuel is dripping. Refer to EM-51, "Exploded View".

11. CHECK INTERMITTENT INCIDENT

Refer to GI-43, "Intermittent Incident".

Is the trouble fixed?

YES >> INSPECTION END

NO >> Replace three way catalyst assembly. Refer to EM-32, "2WD : Exploded View" (2WD), EM-34, "AWD : Exploded View" (AWD).

[MR16DDT]

P0441 EVAP CONTROL SYSTEM

DTC Logic INFOID:0000000008274690


DTC DETECTION LOGIC

NOTE:

If DTC P0441 is displayed with other DTC such as P2122, P2123, P2127, P2128 or P2138, first perform trouble diagnosis for other DTC.

In this evaporative emission (EVAP) control system, purge flow occurs during non-closed throttle conditions. Purge volume is related to air intake volume. Under normal purge conditions (non-closed throttle), the EVAP canister purge volume control solenoid valve is open to admit purge flow. Purge flow exposes the EVAP control system pressure sensor to intake manifold vacuum.

Under normal conditions (non-closed throttle), sensor output voltage indicates if pressure drop and purge flow are adequate. If not, a malfunction is determined.

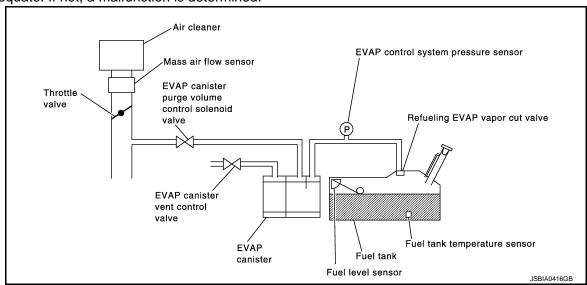

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0441	EVAP PURG FLOW/MON (EVAP control system incor- rect purge flow)	EVAP control system does not operate properly, EVAP control system has a leak between intake manifold and EVAP control system pressure sensor.	EVAP canister purge volume control sole- noid valve stuck closed EVAP control system pressure sensor and the circuit Loose, disconnected or improper connection of rubber tube Blocked rubber tube Cracked EVAP canister EVAP canister purge volume control sole- noid valve circuit Accelerator pedal position sensor Blocked purge port EVAP canister vent control valve

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

Will CONSULT be used?

YES >> GO TO 2.

>> GO TO 5. NO

EC-325 Revision: 2014 February 2013 JUKE

Е

D

Α

EC

F

Н

Ν

P0441 EVAP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

2.perform dtc confirmation procedure-i

MITH CONSULT

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

- Start the engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start the engine and let it idle for at least 70 seconds.
- Select "PURG FLOW P0441" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode of "ENGINE" using CONSULT.
- 7. Touch "START".

Is "COMPLETED" displayed on CONSULT screen?

YES >> GO TO 4. NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE-II

When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 35 seconds.)

Selector lever	Suitable position
VHCL SPEED SE	32 - 120 km/h (20 - 75 MPH)
ENG SPEED	500 - 3,300 rpm
B/FUEL SCHDL	1.0 - 6.5 msec
COOLAN TEMP/S	More than 0°C (32°F)

CAUTION:

Always drive vehicle at a safe speed.

NOTE

If "TESTING" does not change for a long time, retry from step 2.

Is "COMPLETED" displayed on CONSULT screen?

YES >> GO TO 4.

NO >> Perform DTC CONFIRMATION PROCEDURE again. GO TO 2.

4. PERFORM DTC CONFIRMATION PROCEDURE-III

Touch "SELF-DIAG RESULTS".

Which is displayed on CONSULT screen?

OK >> INSPECTION END

NG >> Proceed to EC-327, "Diagnosis Procedure".

${f 5.}$ PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-326, "Component Function Check".

NOTE:

Use component function check to check the overall monitoring function of the EVAP control system purge flow monitoring. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to <u>EC-327</u>, "<u>Diagnosis Procedure</u>".

Component Function Check

INFOID:000000000827469

1. PERFORM COMPONENT FUNCTION CHECK

- 1. Lift up drive wheels.
- 2. Start the engine (VDC switch OFF) and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

P0441 EVAP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

4. Start the engine and wait at least 70 seconds.

Set voltmeter probes to ECM harness connector terminals as per the following.

ECM					
Connector	+	_			
Connector	Terr	ninal			
F25	15	12			

6. Check EVAP control system pressure sensor value at idle speed and note it.

7. Establish and maintain the following conditions for at least 1 minute.

Air conditioner switch	ON
Headlamp switch	ON
Rear window defogger switch	ON
Engine speed	Approx. 3,000 rpm
Gear position	Any position other than P, N or R

8. Verify that EVAP control system pressure sensor value stays 0.1 V less than the value at idle speed (measured at step 6) for at least 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-327, "Diagnosis Procedure".

Diagnosis Procedure

1. CHECK EVAP CANISTER

- 1. Turn ignition switch OFF.
- 2. Check EVAP canister for cracks.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 2.

YES-2 >> Without CONSULT: GO TO 3.

NO >> Replace EVAP canister. Refer to <u>FL-26, "2WD : Removal and Installation"</u>(2WD), <u>FL-29, "AWD : Removal and Installation"</u>(AWD).

2. CHECK PURGE FLOW

(II) WITH CONSULT

- 1. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port.
- Start the engine and let it idle.
- 3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- Touch "Qd" and "Qu" on CONSULT screen to adjust "PURG VOL CONT/V" opening and check vacuum existence.

PURG VOL CONT/V	Vacuum
100%	Existed
0%	Not existed

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 4.

3. CHECK PURGE FLOW

®WITHOUT CONSULT

- 1. Start the engine and warm it up to normal operating temperature.
- 2. Stop the engine.

EC

Α

С

D

Е

INFOID:0000000008274692

J

Κ

M

Ν

0

Р

[MR16DDT]

- Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. For the location of EVAP service port, refer to <u>EC-55, "EVAPORATIVE EMISSION SYSTEM: System Description".
 </u>
- 4. Start the engine and let it idle.

Never depress accelerator pedal even slightly.

5. Check vacuum gauge indication before 60 seconds pass after starting engine.

Vacuum should not exist.

6. Rev the engine up to 2,000 rpm after 100 seconds pass after starting engine.

Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 4.

4. CHECK EVAP PURGE LINE

- 1. Turn ignition switch OFF.
- 2. Check EVAP purge line for improper connection or disconnection. Refer to EC-538, "Inspection".


Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair EVAP purge line.

5. CHECK EVAP PURGE HOSE AND PURGE PORT

- Disconnect purge hoses connected to EVAP service port (A) and EVAP canister purge volume control solenoid valve (B).
- 2. Blow air into each hose and EVAP purge port (**C**).

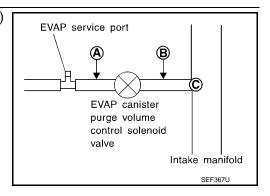


3. Check that air flows freely.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 6. YES-2 >> Without CONSULT: GO TO 7.

NO >> Repair or clean hoses and/or purge port.

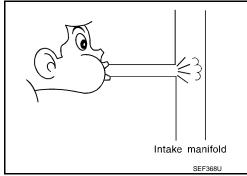

6. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(P)WITH CONSULT

- 1. Start the engine.
- 2. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT. Check that engine speed varies according to the valve opening.

Does engine speed vary according to the valve opening?

YES >> GO TO 8. NO >> GO TO 7.

P0441 EVAP CONTROL SYSTEM [MR16DDT] < DTC/CIRCUIT DIAGNOSIS > 7.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE Α Check the EVAP canister purge volume control solenoid valve. Refer to EC-333, "Component Inspection". Is the inspection result normal? YES >> GO TO 8. EC >> Replace EVAP canister purge volume control solenoid valve. Refer to FL-26, "2WD: Exploded NO 8.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR Disconnect EVAP control system pressure sensor harness connector. 2. Check that water is not inside connectors. D Is the inspection result normal? YES >> GO TO 9. >> Replace EVAP control system pressure sensor. Refer to FL-26, "2WD : Exploded View" (2WD). NO Е FL-29, "AWD: Exploded View"(AWD). 9. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION Refer to EC-350, "DTC Logic" for DTC P0452, EC-353, "DTC Logic" for DTC P0453. F Is the inspection result normal? YES >> GO TO 10. NO >> Replace EVAP control system pressure sensor. Refer to FL-26, "2WD: Exploded View" (2WD), FL-29, "AWD: Exploded View"(AWD). 10.CHECK RUBBER TUBE FOR CLOGGING Disconnect rubber tube connected to EVAP canister vent control valve. 2. Check the rubber tube for clogging. Is the inspection result normal? YES >> GO TO 11. NO >> Clean the rubber tube using an air blower. 11. CHECK EVAP CANISTER VENT CONTROL VALVE Check the EVAP canister vent control valve. Refer to EC-340, "Component Inspection". Is the inspection result normal? YES >> GO TO 12. K >> Replace EVAP canister vent control valve, Refer to FL-26, "2WD : Exploded View" (2WD), FL-29, NO "AWD: Exploded View"(AWD). 12. CHECK EVAP PURGE LINE L Inspect EVAP purge line (pipe and rubber tube). Check for evidence of leaks. Refer to EC-539, "Inspection". M Is the inspection result normal? YES >> GO TO 13. NO >> Repair or replace malfunctioning part. N 13. CLEAN EVAP PURGE LINE Clean EVAP purge line (pipe and rubber tube) using air blower.

14. CHECK INTERMITTENT INCIDENT

Perform GI-43, "Intermittent Incident".

>> GO TO 14.

>> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition		Possible cause	
P0443	PURG VOLUME CONT/ V (EVAP canister purge volume control solenoid valve)	Α	The canister purge flow is detected during the vehicle is stopped while the engine is running, even when EVAP canister purge volume control solenoid valve is completely closed.	 EVAP control system pressure sensor EVAP canister purge volume control solenoid valve (The valve is stuck open.) EVAP canister vent control valve 	
		В	The canister purge flow is detected during the specified driving conditions, even when EVAP canister purge volume control solenoid valve is completely closed.	EVAP canister Hoses (Hoses are connected incorrectly or clogged.)	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Perform DTC CONFIRMATION PROCEDURE when the fuel is between 1/4 and 3/4 full, and vehicle is placed on flat level surface.
- Always perform test at a temperature of 5 to 60°C (41 to 140°F).
- Cool the vehicle so that engine coolant temperature becomes same level as ambient temperature.

Do you have CONSULT

YES >> GO TO 2. NO >> GO TO 4.

2.perform dtc confirmation procedure a

(P)With CONSULT

- Turn ignition switch ON.
- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Check that the following condition are met. FUEL T/TMP SE: 0 35°C (32 95°F)
- 4. Start the engine and wait at least 60 seconds.
- 5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-331, "Diagnosis Procedure".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE B

(P)With CONSULT

- 1. Start the engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- Select "PURG VOL CN/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode of "ENGINE" using CONSULT.
- 5. Touch "START".
- 6. Start the engine and let it idle until "TESTING" on CONSULT changes to "COMPLETED". (It will take approximately 10 seconds.)

If "TESTING" is not displayed after 5 minutes, retry from step 2.

P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE [MR16DDT] < DTC/CIRCUIT DIAGNOSIS > Touch "SELF-DIAG RESULT". Α Which is displayed on CONSULT? OK >> INSPECTION END NG >> Proceed to EC-331, "Diagnosis Procedure". EC 4. PERFORM DTC CONFIRMATION PROCEDURE A Turn ignition switch ON. Check the voltage between ECM harness connector and ground. D **ECM** Voltage **Terminal** Connector Е F25 15 Ground 3.1 - 4.0 V Start the engine and wait at least 60 seconds. Check 1st trip DTC. F Is 1st trip DTC detected? YES >> Proceed to EC-331, "Diagnosis Procedure". NO >> GO TO 5. $oldsymbol{5}$.PERFORM DTC CONFIRMATION PROCEDURE Start the engine and warm it up to normal operating temperature. Turn ignition switch OFF and wait at least 10 seconds. Start the engine and let it idle for at least 20 seconds. Check 1st trip DTC. Is 1st trip DTC detected? YES >> Proceed to EC-331, "Diagnosis Procedure". >> INSPECTION END NO Diagnosis Procedure INFOID:0000000008274694 ${f 1}$.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY K 1. Turn ignition switch OFF. Disconnect EVAP canister purge volume control solenoid valve harness connector. Turn ignition switch ON. Check the voltage between EVAP canister purge volume control solenoid valve harness connector and ground. M + EVAP canister purge volume Voltage control solenoid valve N Connector **Terminal** F106 2 Ground Battery voltage Is the inspection result normal? YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R harness connector.
- Check the continuity between EVAP canister purge volume control solenoid valve harness connector and IPDM E/R harness connector.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

+		-		
	er purge volume lenoid valve	IPDM E/R		Continuity
Connector Terminal		Connector	Terminal	
F106	2	E14	35	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check evap canister purge volume control solenoid valve ground circuit

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between EVAP canister purge volume control solenoid valve harness connector and ECM harness connector.

+					
•		r purge volume lenoid valve	ECM		Continuity
Connector Terminal		Connector	Terminal		
	F106	1	F26	95	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

- 1. Disconnect EVAP control system pressure sensor harness connector.
- Check connectors for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), <u>FL-29, "AWD : Exploded View"</u>(AWD).

5. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Check the EVAP control system pressure sensor. Refer to EC-333, "Component Inspection".

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 6.

YES-2 >> Without CONSULT: GO TO 7.

NO >> Replace EVAP control system pressure sensor. Refrt to <u>FL-26</u>, "2WD : Exploded View" (2WD), <u>FL-29</u>, "AWD : Exploded View" (AWD).

6. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(I) With CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Start the engine.
- 4. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT. Check that engine speed varies according to the valve opening.

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 7.

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS >

7.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Check the EVAP canister purge volume control solenoid valve. Refer to EC-333, "Component Inspection". Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace EVAP canister purge volume control solenoid valve. Refer to EM-27, "Exploded View".

8.CHECK RUBBER TUBE FOR CLOGGING

- Disconnect rubber tube connected to EVAP canister vent control valve.
- Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Clean the rubber tube using an air blower.

9. CHECK EVAP CANISTER VENT CONTROL VALVE

Check the EVAP canister vent control valve. Refer to EC-340, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

>> Replace EVAP canister vent control valve. Refer to FL-26, "2WD: Exploded View" (2WD), FL-29, NO "AWD: Exploded View" (AWD).

10.check if evap canister is saturated with water


Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 11.

NO >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

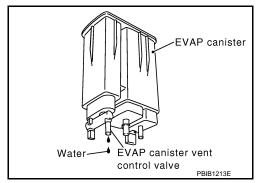

11. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 12.

12. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister. Refer to FL-26. "2WD : Exploded View" (2WD), FL-29. "AWD: Exploded View" (AWD).

Component Inspection

${f 1}$.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

With CONSULT

- Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.

EC

Α

D

F

Н

M

N


INFOID:0000000008274695

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Start the engine.
- Select "PURG VOL CONT/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- Touch "Qd" and "Qu" on CONSULT screen to adjust "PURG VOL C/V" opening and check air passage continuity of EVAP canister purge volume control solenoid valve as per the following conditions.

Condition (PURG VOL C/V value)	Air passage continuity between (A) and (B)
100%	Existed
0%	Not existed

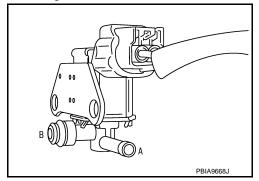

♥Without CONSULT

- 1. Turn ignition switch OFF.
- 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Check air passage continuity of EVAP canister purge volume control solenoid valve as per the following conditions.

Condition	Air passage continuity between (A) and (B)	
12 V direct current supply between terminals 1 and 2	Existed	
No supply	Not existed	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister purge volume control solenoid valve. Refer to EM-27, "Exploded View".

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

DTC Logic INFOID:0000000008274696 EC

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0444	PURG VOLUME CONT/V (EVAP canister purge volume control solenoid valve circuit open)	An excessively low voltage signal is sent to ECM through the EVAP canister purge volume control solenoid valve.	Harness or connectors (EVAP canister purge volume control solenoid valve circuit is open or shorted.) EVAP canister purge volume control solenoid valve
P0445	PURG VOLUME CONT/V (EVAP canister purge volume control solenoid valve circuit shorted)	An excessively high voltage signal is sent to ECM through the valve	Harness or connectors (The solenoid valve circuit is shorted.) EVAP canister purge volume control solenoid valve

DTC CONFIRMATION PROCEDURE

1.CONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for at least 13 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-335, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274697

1.check evap canister purge volume control solenoid valve power supply

- Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between EVAP canister purge volume control solenoid valve harness connector and ground.

-	+		
	purge volume enoid valve	_	Voltage
Connector	Terminal		
F106 2		Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

EC-335 Revision: 2014 February 2013 JUKE

Α

D

Е

F

Н

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

2.check evap canister purge volume control solenoid valve power supply circuit

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- Check the continuity between EVAP canister purge volume control solenoid valve harness connector and IPDM E/R harness connector.

+		-	_	
EVAP canister purge volume control solenoid valve		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F106	2	E14	35	Existed

Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 3.}$ CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between EVAP canister purge volume control solenoid valve harness connector and ECM harness connector.

+			_	
EVAP canister purge volume control solenoid valve		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F106	1	F26	95	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 4.

YES-2 >> Without CONSULT: GO TO 5.

NO >> Repair or replace error-detected parts.

4. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

(P)With CONSULT

- 1. Reconnect all harness connectors disconnected.
- Start the engine.
- 3. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 4. Check that engine speed varies according to the valve opening.

Does engine speed vary according to the valve opening?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 5.

${f 5.}$ CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Check the EVAP canister purge volume control solenoid valve. Refer to <u>EC-333, "Component Inspection"</u>. <u>Is the inspection result normal?</u>

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace EVAP canister purge volume control solenoid valve. Refer to <u>EM-27</u>, "<u>Exploded View</u>".

Component Inspection

INFOID:0000000008274698

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(P)With CONSULT


1. Turn ignition switch OFF.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Reconnect all harness connectors disconnected.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Start the engine.
- 5. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- Touch "Qd" and "Qu" on CONSULT screen to adjust "PURG VOL C/V" opening and check air passage continuity of EVAP canister purge volume control solenoid valve as per the following conditions.

Condition (PURG VOL C/V value)	Air passage continuity between (A) and (B)
100%	Existed
0%	Not existed

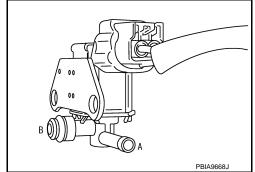

Without CONSULT

- Turn ignition switch OFF.
- 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Check air passage continuity of EVAP canister purge volume control solenoid valve as per the following conditions.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals 1 and 2	Existed
No supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister purge volume control solenoid valve. Refer to EM-27, "Exploded View".

EC

Α

С

D

Е

F

Н

J

K

L

M

Ν

O

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0447 EVAP CANISTER VENT CONTROL VALVE

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0447	VENT CONTROL VALVE (EVAP canister vent control valve circuit open)	An improper voltage signal is sent to ECM through EVAP canister vent control valve.	Harness or connectors (EVAP canister vent control valve circuit is open or shorted.) EVAP canister vent control valve

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 8 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-338, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274700

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK EVAP CANISTER VENT CONTROL VALVE CIRCUIT

(I) With CONSULT

- 1. Turn ignition switch OFF and then turn ON.
- 2. Select "VENT CONTROL/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 3. Touch "ON/OFF" on CONSULT screen.
- Check for operating sound of the valve.

Clicking sound should be heard.

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 3.

3. CHECK EVAP CANISTER VENT CONTROL VALVE POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect EVAP canister vent control valve harness connector.
- 3. Turn ignition switch ON.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Check the voltage between EVAP canister vent control valve harness connector and ground.

+			
EVAP canister vent control valve		_	Voltage
Connector	Connector Terminal		
B21	1	Ground	Battery voltage

EC

Α

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

f 4.CHECK EVAP CANISTER VENT CONTROL VALVE POWER SUPPLY CIRCUIT

D

- Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- Check the continuity between EVAP canister vent control valve harness connector and IPDM E/R harness connector.

+			_	
EVAP canister vent control valve		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
B21	1	E14	36	Existed

Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 5.}$ CHECK EVAP CANISTER VENT CONTROL VALVE OUTPUT SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector. 2.
- Check the continuity between EVAP canister vent control valve harness connector and ECM harness connector.

	+	,	_	
	er vent control Ilve	E	СМ	Continuity
Connector	Terminal	Connector	Terminal	
B21	2	F26	69	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK RUBBER TUBE FOR CLOGGING

- Disconnect rubber tube connected to EVAP canister vent control valve.
- Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Clean the rubber tube using an air blower.

7.CHECK EVAP CANISTER VENT CONTROL VALVE

Check the EVAP canister vent control valve. Refer to EC-340, "Component Inspection".

Is the inspection result normal?

>> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

EC-339 Revision: 2014 February 2013 JUKE

F

Е

K

N

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

NO >> Replace EVAP canister vent control valve. Refer to FL-26, "2WD : Exploded View"

Component Inspection

INFOID:0000000008274701


1. CHECK EVAP CANISTER VENT CONTROL VALVE-I

- 1. Turn ignition switch OFF.
- 2. Remove EVAP canister vent control valve from EVAP canister.
- Check portion (A) of EVAP canister vent control valve for being rusted.

Is it rusted?

YES >> Replace EVAP canister vent control valve. Refer to <u>FL-26, "2WD : Exploded View"(2WD), FL-29, "AWD : Exploded View"(AWD).</u>

NO >> GO TO 2.

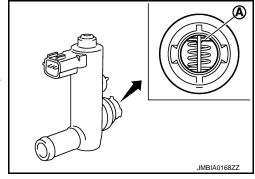

2. CHECK EVAP CANISTER VENT CONTROL VALVE-II

(P)With CONSULT

- 1. Reconnect harness connectors disconnected.
- 2. Turn ignition switch ON.
- Perform "VENT CONTROL/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- Check air passage continuity and operation delay time.
 Make sure new O-ring is installed properly.

Condition (VENT CONT/V)	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed



Without CONSULT

Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace EVAP canister vent control valve. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), <u>FL-29, "AWD : Exploded View"</u>(AWD).

3.check evap canister vent control valve-iii

(II) With CONSULT

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.

(A)


JMBIA0169ZZ

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

3. Check air passage continuity and operation delay time. Make sure new O-ring is installed properly.

Condition (VENT CONT/V)	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

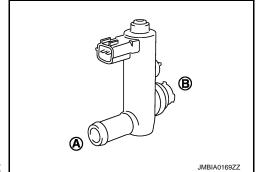

Operation takes less than 1 second.

®Without CONSULT

1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.

2. Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister vent control valve. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), <u>FL-29, "AWD : Exploded View"</u>(AWD).

Α

EC

С

D

Е

F

Н

1

J

Κ

L

 \mathbb{N}

Ν

0

[MR16DDT]

P0448 EVAP CANISTER VENT CONTROL VALVE

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0448	VENT CONTROL VALVE (EVAP canister vent control valve close)	EVAP canister vent control valve remains closed under specified driving conditions.	EVAP canister vent control valve EVAP control system pressure sensor and the circuit Blocked rubber tube to EVAP canister vent control valve EVAP canister is saturated with water

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.


2. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- Turn ignition switch ON and wait at least 5 seconds.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON and select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 4. Start engine and let it idle for at least 1 minute.
- Repeat next procedures three times.
- Increase the engine speed up to 3,000 to 3,500 rpm and keep it for 2 minutes and 50 seconds to 3 minutes.

Never exceed 3 minutes.

- Fully released accelerator pedal and keep engine idle for about 5 seconds.
- 6. Repeat next procedure 20 times.
- Quickly increase the engine speed up to 4,000 to 4,500 rpm or more and keep it for 25 to 30 seconds.
- Fully released accelerator pedal and keep engine idle for at least 35 seconds.

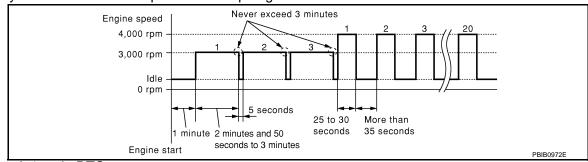

7. Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-343, "Diagnosis Procedure".

NO >> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Diagnosis Procedure

INFOID:00000000008274703

1. CHECK RUBBER TUBE

- Turn ignition switch OFF.
- 2. Disconnect rubber tube connected to EVAP canister vent control valve.
- Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Clean rubber tube using an air blower.

2 .CHECK EVAP CANISTER VENT CONTROL VALVE

Check the EVAP canister vent control valve. Refer to EC-344, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 3.


>> Replace EVAP canister vent control valve. Refer to FL-26, "2WD: Exploded View" (2WD), FL-29, NO "AWD: Exploded View" (AWD).

3.check if evap canister is saturated with water

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Check if water will drain from the EVAP canister.

Does water drain from EVAP canister?

YES >> GO TO 4. NO >> GO TO 6.

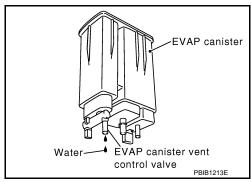

4. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

${f 5.}$ DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister. Refer to FL-26, "2WD: Exploded View" (2WD), FL-29, "AWD: Exploded View" (AWD).

6.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

- Disconnect EVAP control system pressure sensor harness connector.
- Check connectors for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 7.

Revision: 2014 February

NO >> Replace EVAP control system pressure sensor. Refer to FL-26, "2WD: Exploded View" (2WD), FL-29, "AWD: Exploded View"(AWD).

EC-343

Α

EC

Е

F

Н

M

N

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

7.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Check the EVAP control system pressure sensor. Refer to EC-349, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

>> Replace EVAP control system pressure sensor. Refer to <u>FL-26, "2WD : Exploded View"(2WD), FL-29, "AWD : Exploded View"</u>(AWD).

Component Inspection

INFOID:0000000008274704

1. CHECK EVAP CANISTER VENT CONTROL VALVE-I


- 1. Turn ignition switch OFF.
- Remove EVAP canister vent control valve from EVAP canister.
- Check portion (A) of EVAP canister vent control valve for being rusted.

Is it rusted?

NO

YES >> Replace EVAP canister vent control valve. Refer to <u>FL-26. "2WD : Exploded View"(2WD), FL-29. "AWD : Exploded View"(AWD).</u>

NO >> GO TO 2.

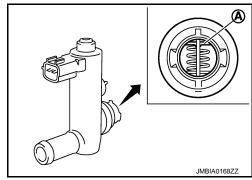

2.CHECK EVAP CANISTER VENT CONTROL VALVE-II

(I) With CONSULT

- 1. Reconnect harness connectors disconnected.
- 2. Turn ignition switch ON.
- Perform "VENT CONTROL/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 4. Check air passage continuity and operation delay time.

Make sure new O-ring is installed properly.

Condition (VENT CONT/V)	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

Operation takes less than 1 second.

Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> GO TO 3.

>> Replace EVAP canister vent control valve. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), <u>FL-29, "AWD : Exploded View"</u>(AWD).

3.CHECK EVAP CANISTER VENT CONTROL VALVE-III

(P)With CONSULT

NO

1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.

3. Check air passage continuity and operation delay time.

Make sure new O-ring is installed properly.

Condition (VENT CONT/V)	Air passage continuity between (A) and (B)	
ON	Not existed	
OFF	Existed	



1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.

Check air passage continuity and operation delay time under the following conditions.Make sure new O-ring is installed properly.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister vent control valve. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), <u>FL-29, "AWD : Exploded View"</u>(AWD).

A JMBIA0169ZZ

Α

EC

С

D

F

Е

G

Н

. J

K

L

N

0

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0451 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-392, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		Possible cause
P0451	EVAP SYS PRES SEN (EVAP control system pressure sensor perfor- mance)	ECM detects a sloshing signal from the EVAP control system pressure sensor	Harness or connectors (EVAP control system pressure sensor circuit is shorted.) EVAP control system pressure sensor

DTC CONFIRMATION PROCEDURE

NOTE:

Never remove fuel filler cap during DTC confirmation procedure.

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- (E)With CONSULT>>GO TO 2.
- Without CONSULT>>GO TO 5.

2.PERFORM DTC CONFIRMATION PROCEDURE-1

(P)With CONSULT

1. Start engine and let it idle for least 40 seconds.

NOTE:

Do not depress accelerator pedal even slightly.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-347, "Diagnosis Procedure".

NO >> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-2

(P)With CONSULT

- Select "EVAP DIAG READY" in "DATA MONITOR" mode of "ENGINE".
- 2. Let it idle until "OFF" of "EVAP DIAG READY" changes to "ON".

NOTE:

It will take at most 2 hours until "OFF" of "EVAP DIAG READY" changes to "ON".

3. Turn ignition switch OFF and wait at least 90 minutes.

NOTE:

Never turn ignition switch ON during 90 minutes.

- Turn ignition switch ON.
- 5. Select "EVAP LEAK DIAG" in "DATA MONITOR" mode of "ENGINE".
- 6. Check that "EVAP LEAK DIAG" indication.

Which is displayed on CONSULT?

CMPLT>> GO TO 4.

YET >> 1. Perform DTC CONFIRMATION PROCEDURE again.

GO TO 1.

CONTROL OF	SIS >		[MR16DDT]
4.PERFORM DTC CONFI	RMATION PROCI	EDURE-3	_
With CONSULT			
Check 1st trip DTC. s 1st trip DTC detected?			
YES >> Proceed to EC-	347. "Diagnosis F	Procedure".	
NO >> INSPECTION E			
$ar{D}.PERFORMDTCCONFI$	RMATION PROCI	EDURE-4	
With GST			
 Start engine and let it id NOTE: 	le for least 40 sed	conds.	
Do not depress accele	erator pedal ever	n slightly.	
2. Check 1st trip DTC.			
s 1st trip DTC detected?	0.47 Diamasia F)	
YES >> Proceed to EC- NO >> GO TO 6.	347, "Diagnosis F	<u>rocedure"</u> .	
.PERFORM DTC CONFI	RMATION PROCI	EDURE-5	
劉With GST			
1. Let it idle for at least 2 h	ours.		
2. Turn ignition switch OFI	and wait at leas	t 90 minutes.	
NOTE: Never turn ignition sw	itch ON durina 9	00 minutes.	
Turn ignition switch ON			
L. Check 1st trip DTC.			
s 1st trip DTC detected?	247 "Diognosis F)rooduro"	
YES >> Proceed to <u>EC-</u> NO >> INSPECTION E		rocedure.	
Diagnosis Procedure			NITO/IS 00000000074770
4			INFOID:000000008274706
1.CHECK EVAP CONTRO	L SYSTEM PRES	SSURE SENSO	OR CONNECTOR FOR WATER
I. Turn ignition switch OF			
 Disconnect EVAP contr Check sensor harness 			ss connector.
. Ondok dondor hamodo (ormootor for water	J	
Water should not e	xist.		
s the inspection result norm	nal?		
YES >> GO TO 2.		-1	
NO >> Repair or replace			AD DOMED CLIDDLY
2.CHECK EVAP CONTRO		SSURE SENSO	,
 Turn ignition switch ON Check the voltage betw 		l evetem pressi	ire sensor harness connector and ground.
Official the voltage betw	CCIT E VI II COINTO	i System presse	ne sensor namess connector and ground.
+			-
EVAP control system pressure se	en-	Voltage	
sor		(Approx.)	
Connector Terminal			_
B22 3	Ground	5 V	_
	-10		
s the inspection result norm	<u>iai?</u>		
s the inspection result norm YES >> GO TO 4. NO >> GO TO 3.	<u>iai?</u>		

Revision: 2014 February EC-347 2013 JUKE

[MR16DDT]

< DTC/CIRCUIT DIAGNOSIS >

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

	+	_		
EVAP control system pres- sure sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		
B22	3	F25	23	Existed

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts

f 4.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

	+	_		
EVAP control system pres- sure sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		
B22	1	F25	12	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR SIGNAL CIRCUIT

Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

	+			
EVAP control system pres- sure sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		
B22	2	F25	15	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Check the EVAP control system pressure sensor. Refer to EC-349, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-26, "2WD : Exploded View"(2WD), FL-29, "AWD : Exploded View"(AWD).</u>

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Component Inspection

INFOID:0000000008274707

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. **Always replace O-ring with a new one.**
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

ECM			Condition	
Connector	+ - Terminal		Condition [Applied vacuum kPa (kg/cm ² , psi)]	Voltage
Connector			[Applied Vacadiii Ki a (kg/oiii , poi/j	
F25 15 12		12	Not applied	0.5 - 4.6 V
1 25	15 1.	12		2.1 to 2.5 V lower than above value

CAUTION:

- · Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-26, "2WD : Exploded View"(2WD)</u>, <u>FL-29, "AWD : Exploded View"(AWD)</u>.

EC

D

Е

F

Α

K

L

M

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0451 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-392, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0452	EVAP SYS PRES SEN (EVAP control system pressure sensor low in- put)	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (EVAP control system pressure sensor circuit is shorted.) EVAP control system pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 5. Make sure that "FUEL T/TMP SE" indication is more than 0°C (32°F).
- Start engine and wait at least 20 seconds.
- 7. Check 1st trip DTC.

With GST

- 1. Start engine and warm it up to normal operating temperature.
- Set voltmeter probes to ECM harness connector terminals as per the following.

Connector	+	_	Voltage
Connector	Terminal		
F25	15	12	Less than 4.2 V

- 3. Make sure that the voltage is less than 4.2 V.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and wait at least 20 seconds.
- 6. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-351, "Diagnosis Procedure".

NO >> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Diagnosis Procedure

INFOID:0000000008274709

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR FOR WATER

- 1. Turn ignition switch OFF.
- 2. Disconnect EVAP control system pressure sensor harness connector.
- 3. Check sensor harness connector for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness connector.

D

2.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY

- 1. Turn ignition switch ON.
- 2. Check the voltage between EVAP control system pressure sensor harness connector and ground.

	+		
	tem pressure sen- or	_	Voltage (Approx.)
Connector	Terminal		
B22	3	Ground	5 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

+			_	
	l system pres- sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
B22	3	F25	23	Existed

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts

f 4.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR GROUND CIRCUIT

Turn ignition switch OFF.

Revision: 2014 February

- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

+		-		
	l system pres- sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
B22	1	F25	12	Existed

Also check harness for short to power.

EC-351

EC

Α

Е

Н

.

K

M

Ν

0

Р

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

${f 5.}$ CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR SIGNAL CIRCUIT

1. Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

+		-		
	l system pres- sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
B22	2	F25	15	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Check the EVAP control system pressure sensor. Refer to EC-349. "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-26</u>, "2WD : Exploded View" (2WD), <u>FL-29</u>, "AWD : Exploded View" (AWD).

Component Inspection

INFOID:0000000008274710

[MR16DDT]

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. Always replace O-ring with a new one.
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

Connector + - Terminal			Condition		
		-	[Applied vacuum kPa (kg/cm ² , psi)]	Voltage	
		minal	[rippined raedam in a (itgreim ; per/]		
F25	15	12	Not applied	0.5 - 4.6 V	
1 25	F25 15 12		-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value	

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), FL-29, "AWD : Exploded View"(AWD).

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

DTC Logic INFOID:0000000008274711

DTC DETECTION LOGIC

NOTE:

If DTC P0451 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-392, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0453	EVAP SYS PRES SEN (EVAP control system pressure sensor high in- put)	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors (EVAP control system pressure sensor circuit is shorted.) EVAP control system pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 5. Make sure that "FUEL T/TMP SE" indication is more than 0°C (32°F).
- Start engine and wait at least 20 seconds.
- 7. Check 1st trip DTC.

- Start engine and warm it up to normal operating temperature.
- Set voltmeter probes to ECM harness connector terminals as per the following.

Connector	+	_	Voltage
Connector	Terminal		
F25	15	12	Less than 4.2 V

- 3. Make sure that the voltage is less than 4.2 V.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and wait at least 20 seconds.
- 6. Check 1st trip DTC.

Is 1st trip DTC detected?

Revision: 2014 February

>> Proceed to EC-354, "Diagnosis Procedure". YES

NO >> INSPECTION END

EC-353

EC

Α

D

F

Е

Н

K

N

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Diagnosis Procedure

INFOID:0000000008274712

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR FOR WATER

- 1. Turn ignition switch OFF.
- 2. Disconnect EVAP control system pressure sensor harness connector.
- 3. Check sensor harness connector for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness connector.

2.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY

- 1. Turn ignition switch ON.
- 2. Check the voltage between EVAP control system pressure sensor harness connector and ground.

	+		
EVAP control system pressure sensor		_	Voltage (Approx.)
Connector Terminal			
B22 3		Ground	5 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

+		_		
	l system pres- sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
B22	3	F25	23	Existed

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts

4. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

+		-		
	system pres- sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
B22	1	F25 12		Existed

Also check harness for short to power.

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

${f 5.}$ CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR SIGNAL CIRCUIT

Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

+			_	
	l system pres- sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
B22	2	F25	15	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK RUBBER TUBE

- Disconnect rubber tube connected to EVAP canister vent control valve.
- Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Clean the rubber tube using an air blower, repair or replace rubber tube.

.CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-340, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

>> Replace EVAP canister vent control valve. Refer to FL-26, "2WD: Exploded View" (2WD), FL-29, NO "AWD: Exploded View" (AWD).

8.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-356, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace EVAP control system pressure sensor. Refer to FL-26, "2WD: Exploded View" (2WD), FL-29, "AWD: Exploded View" (AWD).

9.CHECK IF EVAP CANISTER IS SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- 2. Check if water will drain from the EVAP canister.

Does water drain from EVAP canister?

YES >> GO TO 10.

>> Check intermittent incident. Refer to GI-43, "Intermittent NO Incident".

EVAP canister ÈVAP canister vent Watercontrol valve PBIB1213E

10. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

EC-355 Revision: 2014 February 2013 JUKE

EC

Α

[MR16DDT]

Е

M

N

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection
 - >> Repair hose or replace EVAP canister. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), <u>FL-29, "AWD : Exploded View"</u>(AWD).

Component Inspection

INFOID:0000000008274713

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. Always replace O-ring with a new one.
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

ECM			Condition	
Connector	+	_	Condition [Applied vacuum kPa (kg/cm², psi)]	Voltage
Connector	Terr	minal	[rippined vacuum kir a (kg/cim , poi)]	
F25	15	12	Not applied	0.5 - 4.6 V
1 25	13	12	-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value

CAUTION:

- · Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), <u>FL-29, "AWD : Exploded View"</u>(AWD).

[MR16DDT]

Α

EC

D

Е

F

Н


P0456 EVAP CONTROL SYSTEM

DTC Logic

DTC DETECTION LOGIC

This diagnosis detects leaks in the EVAP line between fuel tank and EVAP canister purge volume control solenoid valve, using the negative pressure caused by decrease of fuel temperature in the fuel tank after turning ignition switch OFF.

If ECM judges there are no leaks, the diagnosis will be OK.

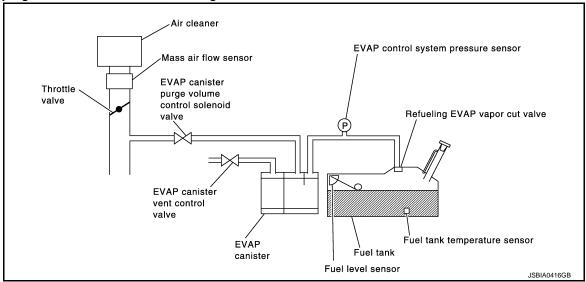

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0456	EVAP VERY SML LEAK (Evaporative emission control system leak)	EVAP system has a leak. EVAP system does not operate properly.	 Incorrect fuel tank vacuum relief valve Incorrect fuel filler cap used Fuel filler cap remains open or does not close. Foreign matter caught in fuel filler cap. Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. Foreign matter caught in EVAP canister vent control valve. EVAP canister or fuel tank leaks EVAP purge line (pipe and rubber tube) leaks EVAP purge line rubber tube bent Loose or disconnected rubber tube EVAP canister vent control valve and the circuit EVAP canister purge volume control solenoid valve and the circuit Fuel tank temperature sensor O-ring of EVAP canister vent control valve is missing or damaged EVAP canister is saturated with water EVAP control system pressure sensor Refueling EVAP vapor cut valve ORVR system leaks Fuel level sensor and the circuit Foreign matter caught in EVAP canister purge volume control solenoid valve

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may illuminate.
- If the fuel filler cap is not tightened properly, the MIL may illuminate.
- Use only a genuine NISSAN rubber tube as a replacement.

DTC CONFIRMATION PROCEDURE

P0456 EVAP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 4.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

(A) WITH CONSULT

- Turn ignition switch ON and select "EVAP DIAG READY" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Start engine and wait at idle until "OFF" of "EVAP DIAG READY" changes to "ON".

NOTE:

It will take at most 2 hours until "OFF" of "EVAP DIAG READY" changes to "ON".

3. Turn ignition switch OFF and wait at least 90 minutes.

NOTE:

Never turn ignition switch ON during 90 minutes.

- Turn ignition switch ON and select "EVAP LEAK DIAG" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 5. Check that "EVAP LEAK DIAG" indication.

Which is displayed on CONSULT?

CMPLT>> GO TO 3.

YET >> Perform DTC CONFIRMATION PROCEDURE again. GO TO 1.

3. PERFORM DTC CONFIRMATION PROCEDURE-II

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-358, "Diagnosis Procedure".

NO >> INSPECTION END.

4. PERFORM DTC CONFIRMATION PROCEDURE

WITH GST

- 1. Start the engine and wait engine idle for at least 2 hours.
- 2. Turn ignition switch OFF and wait at least 90 minutes.

NOTE:

Never turn ignition switch ON during 90 minutes.

- Turn ignition switch ON.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-358, "Diagnosis Procedure".

NO >> INSPECTION END.

Diagnosis Procedure

INFOID:0000000008274715

1. CHECK FUEL FILLER CAP DESIGN

1. Turn ignition switch OFF.

P0456 EVAP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


[MR16DDT]

Check for genuine NISSAN fuel filler cap design.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace with genuine NISSAN fuel filler cap.

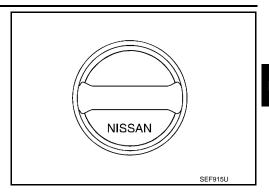

2. CHECK FUEL FILLER CAP INSTALLATION

Check that the cap is tightened properly by rotating the cap clockwise.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. Then retighten until reteaching sound is heard.

3. CHECK FUEL FILLER CAP FUNCTION

Check for air releasing sound while opening the fuel filler cap.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK FUEL TANK VACUUM RELIEF VALVE

Refer to EC-362, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace fuel filler cap with a genuine one.

5.CHECK FOR EVAP LEAK

Refer to EC-539, "Inspection".

Is there any leak in EVAP line?

YES >> Repair or replace.

NO >> GO TO 6.

6. CHECK EVAP CANISTER VENT CONTROL VALVE

Check the following.

EVAP canister vent control valve is installed properly.

Refer to FL-26, "2WD: Exploded View".

EVAP canister vent control valve.

Refer to EC-340, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace EVAP canister vent control valve and O-ring. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), <u>FL-29, "AWD : Exploded View"</u>(AWD).

7.CHECK IF EVAP CANISTER SATURATED WITH WATER

EC

Α

C

D

Е

F

Н

.

K

M

N

P0456 EVAP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


[MR16DDT]

- 1. Remove EVAP canister (1) with EVAP canister vent control valve (2) and EVAP control system pressure sensor attached.
- 2. Check if water will drain from the EVAP canister.

Does water drain from EVAP canister?

YES >> GO TO 8.

NO-1 >> With CONSULT: GO TO 10. NO-2 >> Without CONSULT: GO TO 11.

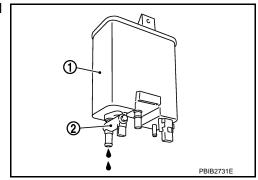

8. CHECK EVAP CANISTER

Weigh the EVAP canister assembly with the EVAP canister vent control valve and EVAP control system pressure sensor attached. Refer to <u>FL-26</u>, "2WD: Exploded View"(2WD), <u>FL-29</u>, "AWD: Exploded View"(AWD). The weight should be less than 2.1 kg (4.6 lb).

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 10.

YES-2 >> Without CONSULT: GO TO 11.

NO >> GO TO 9.

9. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection
 - >> Repair hose or replace EVAP canister. Refer to <u>FL-26, "2WD : Exploded View"</u>(2WD), <u>FL-29, "AWD : Exploded View"</u>(AWD).

10.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

(II) With CONSULT

- 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
- 2. Start the engine and let it idle.
- 3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 4. Touch "Qu" on CONSULT screen to increase "PURG VOL CONT/V" opening to 100%.
- Check vacuum hose for vacuum.

Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

11.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

- 1. Start the engine and warm it up to normal operating temperature.
- 2. Stop the engine.
- 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
- Start the engine and let it idle for at least 80 seconds.
- 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.

Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

12. CHECK VACUUM HOSE

Check vacuum hoses for clogging or disconnection. Refer to FL-26, "2WD: Exploded View".

P0456 EVAP CONTROL SYSTEM

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS > Is the inspection result normal? Α YES >> GO TO 13. NO >> Repair or reconnect the hose. 13. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE EC Check the EVAP canister purge volume control solenoid valve. Refer to EC-336, "Component Inspection" Is the inspection result normal? YES >> GO TO 14. NO >> Replace EVAP canister purge volume control solenoid valve. Refer to FL-26, "2WD: Exploded View". 14.CHECK FUEL TANK TEMPERATURE SENSOR D Check the fuel tank temperature sensor. Refer to EC-277, "Component Inspection". Is the inspection result normal? Е YES >> GO TO 15. >> Replace fuel level sensor unit. Refer to FL-5, "2WD: Exploded View" (2WD), FL-9, "AWD: NO Exploded View" (AWD). 15. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR Check the EVAP control system pressure sensor. Refer to FL-26, "2WD: Exploded View". Is the inspection result normal? >> GO TO 16. YES >> Replace EVAP control system pressure sensor. Refer to FL-26, "2WD: Exploded View" (2WD), NO FL-29, "AWD: Exploded View" (AWD). Н 16. CHECK EVAP PURGE LINE Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to FL-25, "2WD: Hydraulic Layout" (2WD), FL-27, "AWD: Hydraulic Layout" (AWD). Is the inspection result normal? YES >> GO TO 17. NO >> Repair or reconnect the hose. 17.CLEAN EVAP PURGE LINE Clean EVAP purge line (pipe and rubber tube) using air blower. >> GO TO 18. 18 CHECK EVAP/ORVR LINE Check EVAP/ORVR line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to FL-25, "2WD: Hydraulic Layout" (2WD), FL-27, "AWD: Hydraulic Layout" (AWD). Is the inspection result normal? YES >> GO TO 19. NO >> Repair or replace hoses and tubes. N 19. CHECK RECIRCULATION LINE Check recirculation line between fuel filler tube and fuel tank for clogging, kink, cracks, looseness and improper connection. Is the inspection result normal? YES >> GO TO 20. NO >> Repair or replace hose, tube or fuel filler tube. Refer to FL-26, "2WD: Exploded View" (2WD), FL-"AWD : Exploded View" (AWD). 20.CHECK REFUELING EVAP VAPOR CUT VALVE Check the refueling EVAP vapor cut valve. Refer to FL-27, "2WD: Inspection" (2WD), FL-30, "AWD: Inspection"(AWD).

Revision: 2014 February EC-361 2013 JUKE

Is the inspection result normal?

>> GO TO 21.

YES

P0456 EVAP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

NO >> Replace refueling EVAP vapor cut valve with fuel tank. Refer to <u>FL-26, "2WD : Exploded View"(2WD), FL-29, "AWD : Exploded View"(AWD).</u>

21. CHECK FUEL LEVEL SENSOR

Check the fuel level sensor. Refer to MWI-45, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

>> Replace fuel level sensor unit. Refer to <u>FL-5, "2WD : Exploded View"(2WD)</u>, <u>FL-9, "AWD : Exploded View"(AWD)</u>.


Component Inspection

NO

INFOID:0000000008274716

1. CHECK FUEL FILLER CAP

- 1. Turn ignition switch OFF.
- 2. Remove fuel filler cap.
- 3. Wipe clean valve housing.

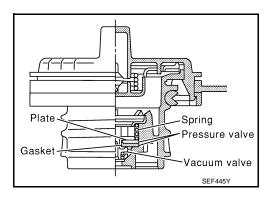

- Install fuel filler cap adapter (commercial service tool) to fuel filler cap.
- 5. Check valve opening pressure and vacuum.

Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22

- 2.90 psi)

Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm²,


-0.87 to -0.48 psi)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.REPLACE FUEL FILLER CAP

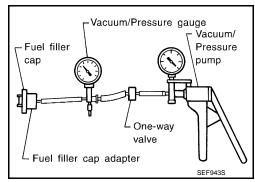

Replace fuel filler cap.

CAUTION:

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may illuminate.

>> INSPECTION END

P0460 FUEL LEVEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0460 FUEL LEVEL SENSOR

DTC Logic (INFOID:0000000008274717

DTC DETECTION LOGIC

NOTE:

- If DTC P0460 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0460 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-389, "DTC Logic".

When the vehicle is parked, naturally the fuel level in the fuel tank is stable. It means that output signal of the fuel level sensor does not change. If ECM senses sloshing signal from the sensor, fuel level sensor malfunction is detected.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0460	FUEL LEV SEN SLOSH (Fuel level sensor circuit noise)	Even though the vehicle is parked, a signal being varied is sent from the fuel level sensor to ECM.	 Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (The sensor circuit is open or shorted) Combination meter Fuel level sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait maximum of 2 consecutive minutes.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-363, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK COMBINATION METER FUNCTION

Refer to MWI-20, "CONSULT Function".

Is the inspection result normal?

YES >> CHECK INTERMITTENT INCIDENT. Refer to GI-43, "Intermittent Incident".

NO >> Refer to MWI-43, "Component Function Check".

EC

Α

D

Е

F

Н

J

K

L

M

INFOID:0000000008274718

Ν

Р

P0461 FUEL LEVEL SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P0461 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0461 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-389</u>, "DTC Logic".

Driving long distances naturally affect fuel gauge level.

This diagnosis detects the fuel gauge malfunction of the gauge not moving even after a long distance has been driven.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0461	FUEL LEVEL SENSOR (Fuel level sensor circuit range/performance)	The output signal of the fuel level sensor does not change within the specified range even though the vehicle has been driven a long distance.	Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (The sensor circuit is open or shorted) Combination meter Fuel level sensor

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-364, "Component Function Check".

Use component function check to check the overall function of the fuel level sensor function. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-365, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008274720

1.PRECONDITIONING

WARNING:

When performing following procedure, be sure to observe the handling of the fuel. Refer to <u>EC-11</u>, "General Precautions".

TESTING CONDITION:

Before starting component function check, preparation of draining fuel and refilling fuel is required.

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 3.

2 .PERFORM COMPONENT FUNCTION CHECK

(P)With CONSULT

NOTE:

Start from step 10, if it is possible to confirm that the fuel cannot be drained by 30 $\,\ell$ (7-7/8 US gal, 6-5/8 Imp gal) in advance.

- 1. Prepare a fuel container and a spare hose.
- Release fuel pressure from fuel line, refer to EC-137, "Work Procedure".
- 3. Remove the fuel feed hose on the fuel level sensor unit.
- 4. Connect a spare fuel hose where the fuel feed hose was removed.
- Turn ignition switch OFF and wait at least 10 seconds then turn ON.
- 6. Select "FUEL LEVEL SE" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 7. Check "FUEL LEVEL SE" output voltage and note it.

P0461 FUEL LEVEL SENSOR

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS > Select "FUEL PUMP RELAY" in "ACTIVE TEST" mode of "ENGINE" using CONSULT. Touch "ON" and drain fuel approximately 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) and stop it. Α 10. Check "FUEL LEVEL SE" output voltage and note it. 11. Fill fuel into the fuel tank for 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal). 12. Check "FUEL LEVEL SE" output voltage and note it. EC 13. Confirm whether the voltage changes more than 0.03 V during step 7 to 10 and 10 to 12. Is the inspection result normal? YES >> INSPECTION END NO >> Proceed to EC-365, "Diagnosis Procedure". 3.perform component function check D NOTE: Start from step 8, if it is possible to confirm that the fuel cannot be drained by 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) in advance. Е 1. Prepare a fuel container and a spare hose. 2. Release fuel pressure from fuel line. Refer to EC-137, "Work Procedure". 3. Remove the fuel feed hose on the fuel level sensor unit. F 4. Connect a spare fuel hose where the fuel feed hose was removed. 5. Turn ignition switch ON. Drain fuel by 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) from the fuel tank using proper equipment. 7. Confirm that the fuel gauge indication varies. 8. Fill fuel into the fuel tank for 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal). 9. Confirm that the fuel gauge indication varies. Is the inspection result normal? Н YES >> INSPECTION END NO >> Proceed to EC-365, "Diagnosis Procedure". Diagnosis Procedure INFOID:000000000827472 1. CHECK COMBINATION METER FUNCTION Refer to MWI-20, "CONSULT Function". Is the inspection result normal? YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident". K NO >> Refer to MWI-43, "Component Function Check" N Р

EC-365 Revision: 2014 February 2013 JUKE

P0462, P0463 FUEL LEVEL SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P0462 or P0463 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0462 or P0463 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-389, "DTC Logic".

This diagnosis indicates the former, to detect open or short circuit malfunction.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0462	FUEL LEVEL SEN/ CIRC (Fuel level sensor circuit low input)	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (CAN communication line is open or shorted) Harness or connectors
P0463	FUEL LEVEL SEN/ CIRC (Fuel level sensor circuit high input)	An excessively high voltage from the sensor is sent to ECM.	 (Fuel level sensor circuit is open or shorted) Combination meter Fuel level sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 11 V and 16 V at ignition switch ON.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-366, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274723

1.CHECK COMBINATION METER FUNCTION

Refer to MWI-20, "CONSULT Function".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Refer to MWI-43, "Component Function Check"

P0500 VSS

EXCEPT FOR M/T MODELS

EXCEPT FOR M/T MODELS: Description

INFOID:0000000008274724

ECM receives vehicle speed signals from two different paths via CAN communication line: One is from the ABS actuator and electric unit (control unit) via the combination unit and the other is from TCM.

EXCEPT FOR M/T MODELS : DTC Logic

INFOID:0000000008274725

DTC DETECTION LOGIC

NOTE:

D

Α

EC

Е

F

Н

K

N

Р

- If DTC P0500 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0500 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-389, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0500	VEH SPEED SEN/CIRC (Vehicle speed sensor)	At 20 km/h (13 MPH), ECM detects the following status continuously for 5 seconds or more: The difference between a vehicle speed calculated by a output speed sensor transmitted from TCM to ECM via CAN communication and the vehicle speed indicated on the combination meter exceeds 15km/h (10 MPH).	 Harness or connector (CAN communication line is open or shorted.) Combination meter ABS actuator and electric unit (control unit) Wheel sensor TCM Output speed sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 10 V or more at idle.

>> GO TO 2.

2.perform dtc confirmation procedure

- 1. Start engine.
- Shift the selector lever to D range and wait at least for 2 seconds.
- 3. Drive the vehicle at least 5 seconds at 20 km/h (13 MPH) or more.

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-367, "EXCEPT FOR M/T MODELS: Diagnosis Procedure"

NO >> INSPECTION END

EXCEPT FOR M/T MODELS : Diagnosis Procedure

INFOID:0000000008274726

1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-116, "DTC Index".

Revision: 2014 February EC-367 2013 JUKE

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble shooting relevant to DTC indicated.

2.CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Check DTC with ABS actuator and electric unit (control unit). Refer to BRC-49. "DTC Index".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Perform trouble shooting relevant to DTC indicated.

3. CHECK DTC WITH COMBINATION METER

Check DTC with combination meter. Refer to MWI-31, "DTC Index".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Perform trouble shooting relevant to DTC indicated.

4. CHECK OUTPUT SPEED SENSOR

Check output speed sensor. Refer to TM-153, "Diagnosis Procedure".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace or replace error-detected parts.

5. CHECK WHEEL SENSOR

Check wheel sensor. Refer to BRC-75, "Diagnosis Procedure".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace or replace error-detected parts.

M/T MODELS

M/T MODELS: Description

The vehicle speed signal is sent to the combination meter from the "ABS actuator and electric unit (control unit)" via the CAN communication line. The combination meter then sends a signal to the ECM via the CAN communication line.

M/T MODELS: DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P0500 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0500 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-389, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0500	VEH SPEED SEN/CIRC (Vehicle speed sensor)	The vehicle speed signal sent to ECM is almost 0 km/h (0 MPH) even when vehicle is being driven.	Harness or connectors (CAN communication line is open or shorted) Harness or connectors (Vehicle speed signal circuit is open or shorted) Wheel sensor Combination meter ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

[MR16DDT]

INFOID:0000000008274727

INFOID:0000000008274728

P0500 VSS

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

YES >> GO TO 2. NO >> GO TO 5.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

Turn ignition switch OFF and wait at least 10 seconds.

- Turn ignition switch ON. 2.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 3.

3.CHECK VEHICLE SPEED SIGNAL

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

(P)With CONSULT

- Start engine.
- Read "VHCL SPEED SE" in "DATA MONITOR" mode of "ENGINE" using CONSULT. The vehicle speed on CONSULT should exceed 10 km/h (6 mph) when rotating wheels with suitable gear position.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Proceed to EC-370, "M/T MODELS: Diagnosis Procedure".

4. PERFORM DTC CONFIRMATION PROCEDURE

- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Warm engine up to normal operating temperature.
- Maintain the following conditions for at least 50 consecutive seconds.

CAUTION:

Always drive vehicle at a safe speed.

ENG SPEED	1,800 - 6,000 rpm
COOLAN TEMP/S	More than 65°C (149°F)
B/FUEL SCHDL	6.25 - 31.8 msec
Selector lever	Except Neutral position
PW/ST SIGNAL	OFF

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-370, "M/T MODELS: Diagnosis Procedure".

NO >> INSPECTION END

${f 5.}$ PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-369, "M/T MODELS: Component Function Check". Use component function check to check the overall function of the vehicle speed signal circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-370, "M/T MODELS: Diagnosis Procedure".

M/T MODELS: Component Function Check

1. PERFORM COMPONENT FUNCTION CHECK

With GST

- 1. Lift up drive wheels.
- Start engine.
- Read vehicle speed signal in Service \$01 with GST.

Α

EC

D

M

Ν

INFOID:0000000008274729

2013 JUKE

Revision: 2014 February

P0500 VSS

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

The vehicle speed signal on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-370, "M/T MODELS : Diagnosis Procedure".

M/T MODELS: Diagnosis Procedure

INFOID:0000000008274730

1. CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Check DTC with ABS actuator and electric unit (control unit). Refer to BRC-49, "DTC Index".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble shooting relevant to DTC indicated.

2. CHECK DTC WITH COMBINATION METER

Check DTC with combination meter. Refer to MWI-31, "DTC Index".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Perform trouble shooting relevant to DTC indicated.

P0501, P2159 VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

INFOID:0000000008274732

P0501, P2159 VEHICLE SPEED SENSOR

Description INFOID:0000000008274731

ECM receives a rear wheel sensor signal from ABS actuator and electric unit (control unit) via CAN communication to switch combustion for the direct injection gasoline system. For the direct injection gasoline system, refer to EC-40, "DIRECT INJECTION GASOLINE SYSTEM: System Description".

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0501 or P2159 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX. Refer to EC-102, "DTC Index".

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0501	VEHICLE SPEED SEN A (Vehicle speed sensor A range/ performance)	ECM detects a rear LH wheel sensor mal- function signal transmitted from the ABS ac- tuator and electric unit (control unit) via CAN communication at least for 5 seconds in a row.	Harness or connectors (The CAN communication line is open or shorted) Rear LH wheel sensor ABS actuator and electric unit (control unit)
P2159	Vehicle speed sensor B (Vehicle speed sensor B range/ performance)	ECM detects a rear RH wheel sensor mal- function signal transmitted from the ABS ac- tuator and electric unit (control unit) via CAN communication at least for 5 seconds in a row.	Harness or connectors (The CAN communication line is open or shorted) Rear RH wheel sensor ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TEST CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 9 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for at least 5 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-371, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

 ${f 1}$.CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

(P)With CONSULT

Check DTC with ABS actuator and electric unit (control unit). Refer to BRC-38, "CONSULT Function".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Perform Diagnosis Procedure corresponding to DTC indicated.

EC

Α

D

Е

F

Н

K

M

Ν

INFOID:0000000008274733

P

Revision: 2014 February

P0506 ISC SYSTEM

Description INFOID:000000008274734

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM.

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration, and engine load (air conditioner, power steering and cooling fan operation, etc.).

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0506 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis (Trouble diagnosis con- tent)	DTC detecting condition	Possible cause
P0506	ISC SYSTEM (Idle speed control system RPM lower than expected)	The idle speed is less than the target idle speed by 100 rpm or more.	Electric throttle control actuator Intake air leak

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

If the target idle speed is out of the specified value, perform <u>EC-133, "Work Procedure"</u>, before conducting DTC Confirmation Procedure.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.
- Always perform the test at a temperature above –10°C (14°F).

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and run it for at least 1 minute at idle speed.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-372, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274736

1. CHECK INTAKE AIR LEAK

- Start engine and let it idle.
- Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Discover air leak location and repair.

Revision: 2014 February EC-372 2013 JUKE

P0506 ISC SYSTEM

[MR16DDT]

NO >> Replace ECM. Refer to EC-542, "Removal and Installation".

Α

EC

С

D

Е

F

G

Н

1

J

Κ

L

 \mathbb{N}

Ν

0

Ρ

P0507 ISC SYSTEM

Description INFOID:000000008274737

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM.

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration, and engine load (air conditioner, power steering and cooling fan operation, etc.).

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0507 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0507	ISC SYSTEM (Idle speed control system RPM higher than expected)	The idle speed is more than the target idle speed by 200 rpm or more.	Electric throttle control actuatorIntake air leakPCV system

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

If the target idle speed is out of the specified value, perform <u>EC-133, "Work Procedure"</u>, before conducting DTC Confirmation Procedure.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.
- Always perform the test at a temperature above –10°C (14°F).

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and run it for at least 1 minute at idle speed.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-374, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274739

1. CHECK PCV HOSE CONNECTION

Confirm that PCV hose is connected correctly.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

P0507 ISC SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

2.CHECK INTAKE AIR LEAK

- 1. Start engine and let it idle.
- 2. Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

- YES >> Discover air leak location and repair.
- NO >> Replace ECM. Refer to EC-542, "Removal and Installation".

EC

Α

D

Е

F

G

Н

1

Κ

L

M

Ν

0

Р

P050A, P050E COLD START CONTROL

Description INFOID.000000008274740

ECM controls ignition timing and engine idle speed when engine is started with pre-warming up condition. This control promotes the activation of three way catalyst by heating the catalyst and reduces emissions.

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P050A, P050B or P050E is displayed with other DTC, first perform the trouble diagnosis for other DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P050A	Cold start idle air control system performance	ECM does not control engine idle speed properly when engine is started with pre-warming up condition.	Lack of intake air volume Fuel injection system
P050E	Cold start engine exhaust temperature too low	The temperature of the catalyst inlet does not rise to the proper temperature when the engine is started with pre-warming up condition.	• ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 4. Check the indication of "COOLAN TEMP/S".

Follow the procedure "With CONSULT" above.

Is the value of "COOLAN TEMP/S" between 4°C (39°F) and 36°C (97°F)?

YES >> GO TO 3.

NO-1 [If it is below 4°C (39°F)]>>Warm up the engine until the value of "COOLAN TEMP/S" reaches 4°C (39°F) or more. Retry from step 1.

NO-2 [If it is above 36°C (97°F)]>>Cool engine down to less than 36°C (97°F). Retry from step 1.

3.PERFORM DTC CONFIRMATION PROCEDURE-II

(P)With CONSULT

- 1. Set the select lever in N range.
- Start the engine and warm up in idle with the value of "COOLAN TEMP/S" between 5°C (41°F) and 40°C (104°F) for more than 15 seconds.
- 3. Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

P050A, P050E COLD START CONTROL

P050A, P050E COLD START CONTROL		
< DTC/CIRCUIT DIAGNOSIS >	[MR16DDT]	
YES >> Proceed to <u>EC-377, "Diagnosis Procedure"</u> . NO >> INSPECTION END		А
Diagnosis Procedure	INFOID:0000000008274742	
1. PERFORM IDLE AIR VOLUME LEARNING		EC
Perform <u>EC-133</u> , "Work Procedure".		
Is Idle Air Volume Learning carried out successfully?		С
YES >> GO TO 2. NO >> Follow the instruction of Idle Air Volume Learning.		
2.CHECK INTAKE SYSTEM		D
Check for the cause of intake air volume lacking. Refer to the following.		
Crushed intake air passageIntake air passage clogging		Е
Clogging of throttle body		_
Is the inspection result normal?		
YES >> GO TO 3. NO >> Repair or replace malfunctioning part		F
3.CHECK FUEL INJECTION SYSTEM FUNCTION		
Perform DTC Confirmation Procedure for DTC P0171. Refer to EC-266, "DTC Logic".		G
Is the inspection result normal?		
YES >> GO TO 4.		Н
NO >> Proceed to EC-267 , "Diagnosis Procedure" for DTC P0171. 4. PERFORM DTC CONFIRMATION PROCEDURE		
		ı
 Turn ignition switch ON. Erase DTC. 		1
 Perform DTC Confirmation Procedure. See <u>EC-376</u>, "DTC Logic". 		
Is the 1st trip DTC P050A or P050E displayed again?		J
YES >> Replace ECM. Refer to EC-542, "Removal and Installation",		
NO >> INSPECTION END		K
		L
		M
		IVI
		Ν
		0
		Р

P0520 EOP SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	Detecting condition	Possible cause
P0520	EOP SENSOR/SWITCH [Engine oil pressure (EOP) sensor circuit]	Signal voltage from the EOP sensor remains at more than 4.9 V / less than 0.26 V for 5 seconds or more.	Harness or connectors (EOP sensor circuit is open or shorted.) (Camshaft position sensor circuit is open or shorted) (Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) *Engine oil level abnormality* *EOP sensor* *Camshaft position sensor* *Fuel rail pressure sensor* *Battery current sensor* *G sensor* *Exhaust valve timing control position sensor* *Accelerator pedal position sensor 2* *Turbocharger boost sensor*

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-378, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274744

1. CHECK ENGINE OIL

- Turn ignition switch OFF.
- Check engine oil level and pressure. Refer to <u>LU-8, "Inspection"</u>.

Is inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

P0520 EOP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

$\overline{2}$.check eop sensor power supply-i

- 1. Disconnect EOP sensor connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between EOP sensor harness connector terminals.

EC

D

Е

F

Н

Α

EOP sensor			V 16	
Connector	+	-	Voltage (Approx.)	
Connector	tern	ninal	(11 -)	
F43	3	1	5 V	

Inspection result normal?

YES >> GO TO 7.

NO >> GO TO 3.

3.CHECK EOP SENSOR POWER SUPPLY-II

Check the voltage between EOP sensor harness connector and the ground.

	+		Valtaria	
EOP sensor		_	Voltage (Approx.)	
Connector	Terminal		, , ,	
F43	3	Ground	5 V	

Is inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check harness connector for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
F25 39		FRP sensor	F5	1
		EOP sensor	F43	3
		Turbocharger boost sensor	F75	1
	68	Battery current sensor	F52	1
F26	00	G sensor	B32	3
		CMP sensor	F109	1
	72	EVT control position sensor	F110	1
E18	118	APP sensor 2	E101	5

Is inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

CHECK EOP SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between EOP sensor harness connector and ECM harness connector.

K

M

 \circ

Ν

INFOID:0000000008274745

+		П		
EOP	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F43	1	F25	44	Existed

Also check harness for short to power.

Is inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK ECM GROUND CIRCUIT

Check the continuity between ECM harness connector and ground.

+ ECM		_	Continuity
Connector Terminal			
F25	1		Existed
123	2	Ground	
	123		
E18	124		
	127		

Is inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

7.CHECK EOP SENSOR SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between EOP sensor harness connector and ECM harness connector.

+		_		
EOP	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F43	2	F25	43	Existed

4. Also check harness for short to ground and to power.

Is inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace error-detected parts.

8.CHECK EOP SENSOR

Refer to EC-380, "Component Inspection".

Is inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

Component Inspection

1.CHECK EOP SENSOR

- Turn ignition switch OFF.
- Disconnect EOP sensor harness connector.
- 3. Check resistance between EOP sensor connector terminals.

P0520 EOP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

EOP sensor				
+	_	Condition	Resistance (k Ω)	
Terminal				
1	2	None	4 kΩ – 10 kΩ	
'	3		2 kΩ – 8 kΩ	
2	1		4 kΩ – 10 kΩ	
2	3		1 kΩ – 3 kΩ	
3	1		2 kΩ – 8 kΩ	
	2		1 kΩ – 3 kΩ	

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace EOP sensor. Refer to EM-110, "Exploded View".

EC

Α

С

D

Е

F

G

Н

1

J

K

L

M

Ν

0

Р

P0524 ENGINE OIL PRESSURE

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0524	ENGINE OIL PRESSURE (Engine oil pressure too low)	An EOP sensor signal voltage applied to ECM remains lower than the specified value continuously for 10 seconds or more when the engine speed is 1,000 rpm or more.	 Decrease in engine oil pressure Decrease in engine oil level Engine oil condition EOP sensor Engine body

DTC CONFIRMATION PROCEDURE

CAUTION:

If "EC-383, "Diagnosis Procedure" is unfinished, be sure to perform Step 3 and 4.

1.PRECONDITIONING-1

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TEST CONDITION:

Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 2.

2.PRECONDITIONING-2

Is "Diagnosis Procedure" of DTC P0524 finished?

YES >> GO TO 3.

NO >> GO TO 4.

3.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to normal operating temperature.
- 2. Maintain the following conditions for about 10 consecutive seconds.

Selector lever	P or N position
Engine coolant temperature	70°C (158°F) or more
Engine speed	1,000 rpm or more

NOTE:

With engine speed set around 4,000 rpm, the phenomenon can be reproduced more easily.

3. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-383, "Diagnosis Procedure".

NO >> INSPECTION END

4. CHECK ENGINE OIL LEVEL

Check engine oil pressure. Refer to LU-8, "Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Proceed to <u>EC-383</u>, "<u>Diagnosis Procedure</u>".

5. CHECK ENGINE OIL PRESSURE

(P)With CONSULT

P0524 ENGINE OIL PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch ON.

Select "DATA MONITOR" mode of "ENGINE" using CONSULT.

Start the engine and check that "EOP SENSOR" changes, according to engine speeds.

Monitor item	Condition		Value (Approx.)
EOP SENSOR	 Engine oil temperature: 80°C (176°F) Selector lever: P or N position Air conditioner switch: OFF No load 	Engine speed: Idle	1,450 mV or more
EOP SENSOR		Engine speed: 2,000 rpm	2,850 mV or more

Check engine oil level. Refer to <u>LU-8</u>, "Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Proceed to <u>EC-383</u>, "<u>Diagnosis Procedure</u>".

Diagnosis Procedure

1. CHECK ENGINE OIL LEVEL

- Turn ignition switch OFF.
- Check engine oil level. Refer to <u>LU-8, "Inspection"</u>.

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2.CHECK ENGINE OIL PRESSURE

(P)With CONSULT

- Turn ignition switch ON.
- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Start the engine and check that "EOP SENSOR" changes, according to engine speeds.

Monitor item	Condition	Value (Approx.)	
EOP SENSOR	 Engine oil temperature: 80°C (176°F) Selector lever: P or N position 	Engine speed: Idle	1,450 mV or more
EOP SENSOR	Air conditioner switch: OFF No load	Engine speed: 2,000 rpm	2,850 mV or more

Check engine oil pressure. Refer to LU-8, "Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check oil pump. Refer to <u>LU-17</u>, "Inspection".

3.CHECK EOP SENSOR

Check EOP sensor. Refer to EC-384, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

4. CHECK ENGINE OIL LEAKAGE

Check engine oil leakage. Refer to LU-7, "Engine Lubrication System".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

[MR16DDT]

INFOID:0000000008274747

Α

EC

D

Е

Н

Ν

EC-383

$5. \mathsf{CHECK}$ CAUSE OF ENGINE OIL CONSUMPTION

Check the following item.

Step	Inspection item	Equipment	Standard	Reference
1	PCV valve	EC-541, "Inspection"		
2	Turbocharger	EM-38, "Inspection"		
3	Exhaust front tube	Visual	No blockingNo abnormal sounds	_
4	Oil pump	Visual	No blockingNo abnormal sounds	_
4	Oil pump	LU-17, "Inspection"		
5	Piston Piston pin Piston ring	Piston to piston pin oil clearancePiston ring side clearancePiston ring end gap		EM-129, "Description"
6	Cylinder block	 Cylinder block top surface distortion Piston to cylinder bore clearance 		EM-119, "Inspection"

>> Repair or replace error-detected parts.

Component Inspection

INFOID:0000000008274748

1. CHECK EOP SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect EOP sensor harness connector.
- 3. Check resistance between EOP sensor connector terminals.

EOP :	sensor			
+	_	Condition	Resistance (kΩ)	
Terr	ninal			
1	2	None	4 kΩ – 10 kΩ	
1	3		2 kΩ – 8 kΩ	
2	1		4 kΩ – 10 kΩ	
2	3		1 kΩ – 3 kΩ	
3	1		2 kΩ – 8 kΩ	
ა 	2		1 kΩ – 3 kΩ	

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace EOP sensor. Refer to EM-110, "Exploded View".

P0603 ECM POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0603 ECM POWER SUPPLY

DTC Logic INFOID:0000000008274749

DTC DETECTION LOGIC

iuse		С

 DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0603	ECM BACK UP/CIRCUIT (ECM power supply circuit)	ECM back up RAM system does not function properly.	Harness or connectors [ECM power supply (back up) circuit is open or shorted.] ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON wait at least 10 seconds.
- Turn ignition switch OFF and wait at least 5 minutes.
- 3. Turn ignition switch ON, wait at least 10 seconds.
- 4. Repeat step 2 and 3 for five times.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-385, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK ECM POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the voltage between ECM harness connector terminals.

	ECM		
Connector	+	-	Voltage
	Terr	minal	
E18	106	127	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform the trouble diagnosis for power supply circuit.

2. CHECK INTERMITTENT INCIDENT

Perform GI-43, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 3.

>> Repair or replace error-detected parts. NO

3.perform dtc confirmation procedure

EC-385

Α

FC

Е

D

F

INFOID:0000000008274750

N

Р

P0603 ECM POWER SUPPLY

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS >

- Turn ignition switch ON.
- 2. Erase DTC.
- 3. Perform DTC confirmation procedure. Refer to EC-385, "DTC Logic".

Is the 1st trip DTC P0603 displayed again?

YES >> Replace ECM. Refer to EC-542, "Removal and Installation".

NO >> INSPECTION END

P0605 ECM

DTC Logic INFOID:0000000008274751

DTC DETECTION LOGIC

ι.
v

D

Е

Н

Α

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		DTC detecting condition	Possible cause	
Pooos ECM	A)	ECM calculation function is malfunctioning.			
	B)	ECM EEP-ROM system is malfunctioning.	ECM		
P0605	(Engine control module)	C)	ECM self shut-off function is malfunctioning.	ECIVI	
		D)	ECM temperature sensor is malfunctioning.		

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a

- Turn ignition switch ON.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-387, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform dtc confirmation procedure for malfunction b

- Turn ignition switch ON and wait at least 1 second.
- 2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-387, "Diagnosis Procedure".

NO >> GO TO 4.

f 4.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION C

- Turn ignition switch ON and wait at least 1 second.
- Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- Repeat step 2 for 32 times.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-387, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. INSPECTION START

- Turn ignition switch ON.
- Erase DTC. 2.
- Perform DTC confirmation procedure. Refer to <u>EC-387</u>, "<u>DTC Logic</u>".

Is the 1st trip DTC P0605 displayed again?

EC-387

Revision: 2014 February 2013 JUKE

M

N

INFOID:00000000008274752

YES >> Replace ECM. Refer to EC-542, "Removal and Installation".

NO >> INSPECTION END

P0607 ECM

[MR16DDT] < DTC/CIRCUIT DIAGNOSIS >

P0607 ECM

DTC Logic INFOID:0000000008274753

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0607	ECM (CAN communication bus)	When detecting error during the initial diagnosis of CAN controller of ECM.	ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Check DTC.

Is DTC detected?

YES >> Proceed to EC-389, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1.INSPECTION START

- Turn ignition switch ON.
- Erase DTC.
- Perform DTC confirmation procedure. Refer to EC-389, "DTC Logic".
- 4. Check DTC.

Is the DTC P0607 displayed again?

>> Replace ECM. Refer to EC-542, "Removal and Installation". YES

NO >> INSPECTION END EC

D

Е

F

Α

Н

INFOID:0000000008274754

K

L

M

Ν

Р

P0611 ECM PROTECTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P0611 ECM PROTECTION

Description INFOID:0000000008274755

This DTC is detected when the ECM protective function is activated due to an extreme temperature increase in ECM, resulting from severe conditions such as heavy load driving.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0611	FIC MODULE (ECM protection)	ECM overheat protection control is activated.	ECM overheated

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

This DTC is displayed as protection function history. If no malfunction is detected after the diagnosis, the customer must be informed of the activation of the protection function.

>> Proceed to EC-390, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274757

1. INSPECTION START

- 1. Perform DTC confirmation procedure. Refer to EC-387, "DTC Logic".
- 2. Check 1st trip DTC.

Is DTC P0605 detected?

YES >> Proceed to EC-387, "Diagnosis Procedure".

NO >> Explain the customer about the activation of the protection function.

P062B ECM

Description NFOID:000000008274758

This DTC is detected when the ECM-integrated injector driver unit has a malfunction. For injector driver unit, refer to EC-22. "ECM".

INFOID:0000000008274759

Α

EC

D

Е

F

Н

K

Ν

Р

INFOID:0000000008274760

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P062B	ECM (Internal control module fuel injector control performance)	Injector driver unit is malfunctioning.	Harness and connectors (Injector circuit is open or shorted) Battery power supply ECM (injector driver unit)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Start the engine and keep the engine speed at idle for 30 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-391, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK FUEL INJECTOR

Check fuel injector. Refer to EC-493, "Component Function Check".

Is inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- Erase DTC.
- Perform DTC confirmation procedure again. Refer to <u>EC-391, "DTC Logic"</u>.
- Check 1st trip DTC.

Is the DTC P062B displayed again?

YES >> Replace ECM. Refer to EC-542, "Removal and Installation".

NO >> INSPECTION END

P0643 SENSOR POWER SUPPLY

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0643	SENSOR POWER/ CIRC (Sensor power supply circuit short)	ECM detects a voltage of power source for sensor is excessively low or high.	Harness or connectors (Refrigerant pressure sensor circuit is open or shorted.) (Crankshaft position sensor circuit is open or shorted) (Accelerator pedal position sensor 1 circuit is open or shorted.) (Throttle position sensor circuit is open or shorted.) (EVAP control pressure sensor circuit is open or shorted.) Refrigerant pressure sensor Crankshaft position sensor Accelerator pedal position sensor 1 Throttle position sensor EVAP control pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Proceed to EC-392, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:00000000008274762

2013 JUKE

1. CHECK SENSOR POWER SUPPLY

- 1. Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector and ground.

P0643 SENSOR POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

	+ CM	_	Voltage (Approx.)	
Connector	Terminal			
F25	23		5 V	
F00	58	Ground		
F26	62	Giouria	5 V	
E18	101			

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 2.

2.CHECK SENSOR POWER SUPPLY ROUTING CIRCUIT FOR SHORT

Turn ignition switch OFF.

2. Check harness for short to power and to ground, between the following terminals.

ECM		Sensor			
Connector	Terminal	Name	Connector	Terminal	
F25 23	Refrigerant pressure sensor	E49	3		
	23	EVAP control system pressure sensor	B22	3	
F26	58	CKP sensor	F107	3	
F20	62	TP sensor	F29	1	
E18	101	APP sensor	E101	4	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3. CHECK COMPONENTS

Check the following.

 Refrigerant pressure sensor Refer to <u>EC-520</u>, "<u>Diagnosis Procedure</u>".

EVAP control system pressure sensor

Refer to EC-349, "Component Inspection".

• Crankshaft position sensor

Refer to EC-315. "Component Inspection".

Throttle position sensor

Refer to EC-223, "Component Inspection".

Accelerator pedal position sensor

Refer to EC-475, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43. "Intermittent Incident".

NO >> Replace malfunctioning component.

EC

Α

D

Е

F

Н

J

K

IVI

Ν

Р

P0850 PNP SWITCH

Description INFOID.000000008274763

For CVT models, transmission range switch is turn ON when the selector lever is P or N.

For M/T models, park/neutral position (PNP) range switch is ON when the selector lever is Neutral position. ECM detects the position because the continuity of the line (the ON) exists.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0850	P-N POS SW/CIRCUIT (Park/neutral position switch)	 For CVT models, the signal of transmission range switch is not changed in the process of engine starting and driving. For M/T models, the signal of the park/neutral position (PNP) switch is not changed in the process of engine starting and driving. 	Harness or connectors [The transmission range switch circuit is open or shorted.(CVT models)] [The park/neutral position (PNP) switch circuit is open or shorted.(M/T models)] Transmission range switch (CVT models) Park/neutral position (PNP) switch (M/T models)

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 5.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 3.

3.CHECK PNP SIGNAL FUNCTION

(P)With CONSULT

- 1. Turn ignition switch ON.
- Select "P/N POSI SW" in "DATA MONITOR" mode of "ENGINE" using CONSULT. Then check the "P/N POSI SW" signal as per the following conditions.

Selector lever position	Known-good signal	
N or P position (CVT) Neutral position (M/T)	ON	
Except above position	OFF	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Proceed to EC-395, "Diagnosis Procedure".

4. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Start engine and warm it up to normal operating temperature.

Maintain the following conditions for at least 60 consecutive seconds.

CAUTION:

Always drive vehicle at a safe speed.

ENG SPEED	1,400 - 6,375 rpm (CVT) 1,675 - 6,375 rpm (M/T)
COOLAN TEMP/S	More than 65°C (149°F)
B/FUEL SCHDL	1.6 - 31.8 msec
VHCL SPEED SE	More than 64 km/h (40 mph)
Selector lever	Suitable position

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-395, "Diagnosis Procedure".

NO >> INSPECTION END

${f 5}$.PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-395, "Component Function Check".

NOTE:

Use component function check the overall function of the transmission range switch circuit (CVT models) or the park/neutral position (PNP) switch circuit (M/T models). During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

>> INSPECTION END YES

NO >> Proceed to EC-395, "Diagnosis Procedure".

Component Function Check

1. PERFORM COMPONENT FUNCTION CHECK

1. Turn ignition switch ON.

Check the voltage between ECM harness connector and ground as per the following conditions.

	ECM				\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
Connector	+	_	Condition		Voltage (Approx.)
Connector	Terminal				(
E18	103 127	Selector lever	P or N (CVT) Neutral (M/T)	0 V	
			Except above	Battery voltage	

Is the inspection result normal?

YES >> INSPECTION END

>> Proceed to EC-395, "Diagnosis Procedure". NO

Diagnosis Procedure

1. INSPECTION START

Check which type of transmission the vehicle is equipped with.

Which type of transmission?

CVT >> GO TO 2.

M/T >> GO TO 6.

2.CHECK TRANSMISSION RANGE SWITCH POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect transmission range switch harness connector.
- Turn ignition switch ON. 3.
- Check the voltage between transmission range switch harness connector and ground.

EC

Α

Е

Н

INFOID:0000000008274765

Ν

Р

	+		
Transmission	range switch	_	Voltage
Connector	Terminal		
F27	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

${f 3.}$ CHECK TRANSMISSION RANGE SWITCH POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- Check the continuity between transmission range switch harness connector and IPDM E/R harness connector.

+		-		
Transmission range switch		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F27	1	E15	58	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

4.CHECK TRANSMISSION RANGE SWITCH SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between transmission range switch harness connector and ECM harness connector.

+		_		
Transmission range switch		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F27	2	E18	103	Existed

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5. CHECK TRANSMISSION RANGE SWITCH

Check the transmission range switch. Refer to <u>TM-146</u>, "Component Inspection (<u>Transmission Range Switch</u>)".

<u>Is the inspection result normal?</u>

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace transmission range switch. Refer to TM-224, "Removal and Installation".

$oldsymbol{6}.$ CHECK PARK/NEUTRAL POSITION (PNP) SWITCH POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect PNP switch harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between PNP switch harness connector and ground.

P0850 PNP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

+			
PNP switch		_	Voltage
Connector	Terminal		
F49	2	Ground	Battery voltage

EC

Α

Is the inspection result normal?

YES >> GO TO 7.

NO >> Perform the trouble diagnosis for power supply circuit.

7.CHECK PNP SWITCH INPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between PNP switch harness connector and ECM harness connector.

	+		_			
PNP	switch	ECM		vitch ECM		Continuity
Connector	Terminal	Connector	Terminal			
F49	3	E18	103	Existed		

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace error-detected parts.

8.CHECK PNP SWITCH

Check the PNP switch. Refer to TM-15, "PARK/NEUTRAL POSITION (PNP) SWITCH: Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace PNP switch. Refer to TM-19, "Removal and Installation".

Е

D

F

Н

K

J

L

M

Ν

P1078 EVT CONTROL POSITION SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1078	EXH TIM SEN/CIRC-B1 (Exhaust valve timing control position sensor circuit)	An excessively high or low voltage from the sensor is sent to ECM.	Harness or connectors (Exhaust valve timing control position sensor circuit is open or shorted) (Camshaft position sensor circuit is open or shorted.) (Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) Accumulation of debris to the signal pick-up portion of the camshaft Exhaust valve timing control position sensor Crankshaft position sensor Camshaft position sensor Fuel rail pressure sensor Battery current sensor G sensor Accelerator pedal position sensor 2 Turbocharger boost sensor Engine oil pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 10 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-398, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274768

1. CHECK EXHAUST VALVE TIMING (EVT) CONTROL POSITION SENSOR POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect exhaust valve timing (EVT) control position sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between EVT control position sensor harness connector and ground.

P1078 EVT CONTROL POSITION SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

_				
	+			No. Italian
	EVT sensor		_	Voltage (Approx.)
	Connector	Terminal		, , ,
	F110	1	Ground	5 V

EC

Α

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

D

Е

F

Н

K

L

2.CHECK SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check harness connector for short to power and short to ground, between the following terminals.

EC	CM	Sensor		
Connector	Terminal	Name	Connector	Terminal
		FRP sensor	F5	1
F25	39	EOP sensor	F43	3
	Turbocharger boost sensor	F75	1	
	68	Battery current sensor	F52	1
F26	00	G sensor	B32	3
72	CMP sensor	F109	1	
	12	EVT control position sensor	F110	1
E18	118	APP sensor 2	E101	5

Is inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3. CHECK EVT CONTROL POSITION SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVT control position sensor harness connector and ECM harness connector.

	+		_	
EVT control p	osition sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F110	2	F26	59	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK EVT CONTROL POSITION SENSOR INPUT SIGNAL CIRCUIT

- 1. Disconnect ECM harness connector.
- Check the continuity between EVT control position sensor harness connector and ECM harness connector.

Р

Ν

EC-399

+		_		
EVT control p	osition sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F110	3	F26	67	Existed

3. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5.CHECK EVT CONTROL POSITION SENSOR

Check the EVT control position sensor. Refer to EC-400, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace EVT control position sensor. Refer to EM-85, "Removal and Installation".

6.CHECK CAMSHAFT (EXT)

Check the following.


- Accumulation of debris to the signal plate of camshaft rear end
- · Chipping signal plate of camshaft rear end

Is the inspection result normal?

YES >> Check intermittent incident. Refer to <u>GI-43, "Intermittent Incident".</u>

NO

>> Remove debris and clean the signal plate of camshaft rear end or replace camshaft. Refer to EM-85, "Removal and Installation".

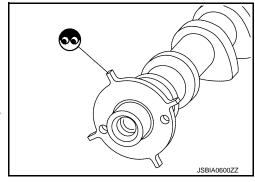

Component Inspection

INFOID:0000000008274769


1. EXHAUST VALVE TIMING (EVT) CONTROL POSITION SENSOR-I

- 1. Turn ignition switch OFF.
- 2. Disconnect EVT control position sensor harness connector.
- 3. Loosen the fixing bolt of the sensor.
- 4. Remove the sensor.
- 5. Visually check the sensor for chipping.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace EVT control position sensor. Refer to <u>EM-72</u>, "Exploded View".

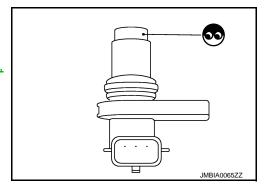

2.EVT CONTROL POSITION SENSOR-II

Check resistance EVT control position sensor terminals as shown below.

P1078 EVT CONTROL POSITION SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

EVT control position sensor		
+ -		Resistance
Terr	minal	
1	2	
,	3	Except 0 or ∞ Ω [at 25°C (77°F)]
2	3	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVT control position sensor. Refer to EM-72, "Exploded View".

Α

EC

_

D

Е

F

G

Н

J

K

L

M

Ν

0

P1148 CLOSED LOOP CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P1148 CLOSED LOOP CONTROL

DTC Logic

DTC DETECTION LOGIC

NOTE:

DTC P1148 is displayed with DTC for A/F sensor 1.

When the DTC is detected, perform the trouble diagnosis of DTC corresponding to A/F sensor 1.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1148	CLOSED LOOP-B1 (Closed loop control function)	The closed loop control function does not operate even when vehicle is being driven in the specified condition.	 Harness or connectors (A/F sensor 1 circuit is open or shorted.) A/F sensor 1 A/F sensor 1 heater

Diagnosis Procedure

INFOID:0000000008274771

DTC P1148 is displayed with DTC for A/F sensor 1.

When the DTC is detected, perform the trouble diagnosis of DTC corresponding to A/F sensor 1. Refer to <u>EC-102</u>, "<u>DTC Index</u>".

P1197 OUT OF GAS

Description INFOID:0000000008274772

This diagnosis result is detected when the fuel level of the fuel tank is extremely low and the engine does not run normally.

INFOID:0000000008274773

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1197	FUEL RUN OUT (Out of gas)	 Fuel rail pressure remains at 1.1 MPa (11 bar, 11.2 kg/cm², 159.5 psi) or less for 5 seconds or more with the fuel level too low. Fuel rail pressure remains 2.7 MPa (27 bar, 27.5 kg/cm², 392 psi) lower than a target fuel pressure for 5 seconds or more with the fuel level too low. 	Out of gas Harness or connectors (Low pressure fuel pump circuit is open or shorted.) Low pressure fuel pump Fuel pressure regulator Low pressure fuel system Harness or connectors (High pressure fuel pump circuit is shorted.) High pressure fuel pump High pressure fuel system Fuel rail pressure sensor Disconnection of the fuel hose

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

Start the engine.

Does the engine start?

YES >> GO TO 3.

NO >> Proceed to EC-403, "Diagnosis Procedure".

3.PERFORM DTC CONFIRMATION PROCEDURE-II

Warm up the engine to the normal operating temperature.

NOTE:

For best results, warm up the engine until "COOLAN TEMP/S" on "DATA MONITOR" mode of "ENGINE" using CONSULT reaches at least 70°C (158°F).

- 2. Keep the engine speed at 3,500 rpm for 5 seconds and let it idle at least 60 seconds.
- Check the 1st trip DTC.

NOTE:

If the fuel tank has sufficient fuel, this diagnosis result may not be detected.

Is 1st trip DTC detected?

YES >> Proceed to EC-403, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

 ${f 1}$. REFUEL THE VEHICLE

INFOID:0000000008274774

Revision: 2014 February

EC-403

2013 JUKE

EC

Α

D

Е

Н

K

M

Ν

P1197 OUT OF GAS

[MR16DDT]

< DTC/CIRCUIT DIAGNOSIS >

Refuel 10 liter (10 US qt, 8 imp qt).

CAUTION:

Never refuel more than 10 liter.

2. Start the engine and keep the engine speed at 3,000 rpm for 30 seconds.

NOTE:

For best results, warm up the engine until "COOLAN TEMP/S" on "DATA MONITOR" mode of "ENGINE" using CONSULT reaches at least 70°C (158°F).

- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Turn ignition switch OFF and wait at least 10 seconds.
- 6. Turn ignition switch ON.
- 7. Erase the DTC.
- 8. Start the engine and let it idle at least 60 seconds.
- 9. Perform DTC confirmation procedure again. Refer to EC-403, "DTC Logic".

Is 1st trip DTC detected?

YES >> GO TO 2.

NO >> INSPECTION END

2.CHECK LOW PRESSURE FUEL PUMP

Refer to EC-498, "Component Function Check".

Is inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK HIGH PRESSURE FUEL PUMP

Refer to EC-501, "Component Function Check".

Is inspection result normal?

YES >> Check the fuel hose for disconnection and looseness.

NO >> Repair or replace error-detected parts.

P1212 TCS COMMUNICATION LINE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P1212 TCS COMMUNICATION LINE

Description INFOID:0000000008274775

This CAN communication line is used to control the smooth engine operation during the TCS operation. Pulse signals are exchanged between ECM and "ABS actuator and electric unit (control unit)".

Be sure to erase the malfunction information such as DTC not only for "ABS actuator and electric unit (control unit)" but also for ECM after TCS related repair.

DTC Logic INFOID:0000000008274776

DTC DETECTION LOGIC

NOTE:

- If DTC P1212 is displayed with DTC U1001, first perform the trouble diagnosis for DTC U1001. Refer to EC-164, "DTC Logic".
- If DTC P1212 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-389, "DTC Logic".

Freeze frame data is not stored in the ECM for this self-diagnosis.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		Possible cause
P1212	TCS/CIRC (TCS communication line)	ECM can not receive the information from "ABS actuator and electric unit (control unit)" continuously.	Harness or connectors (CAN communication line is open or shorted.) ABS actuator and electric unit (control unit) Dead (Weak) battery

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON. 2.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

>> GO TO 2.

2 Perform DTC Confirmation Procedure

- Start engine and let it idle for at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-405, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

Perform the trouble diagnosis for TCS. Refer to BRC-52, "Work Flow".

NOTE:

If DTC P1212 is displayed with DTC UXXXX and/or P0607, perform the following trouble diagnosis.

- Trouble diagnosis for DTC UXXXX Refer to EC-102. "DTC Index".
- Trouble diagnosis for DTC P0607 Refer to <u>EC-389</u>, "DTC Logic".

EC

Α

D

F

Н

N

INFOID:0000000008274777

Р

2013 JUKE

P1217 ENGINE OVER TEMPERATURE

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1217 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1217 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-389</u>, "<u>DTC Logic"</u>.

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise.

When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1217	ENG OVER TEMP [Engine over tempera- ture (Overheat)]	 Cooling fan does not operate properly (Overheat). Cooling fan system does not operate properly (Overheat). Engine coolant was not added to the system using the proper filling method. Engine coolant is not within the specified range. 	Harness or connectors (Cooling fan circuit is open or shorted.) IPDM E/R Cooling fan control module Cooling fan motor Radiator hose Radiator Radiator cap Reservoir tank Water pump Thermostat Water control valve

CAUTION:

When a malfunction is indicated, be sure to replace the coolant. Refer to <u>CO-8</u>, "<u>Draining</u>". Also, replace the engine oil. Refer to <u>CO-9</u>, "<u>Refilling</u>".

- 1. Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Be sure to use coolant with the proper mixture ratio. Refer to MA-11, "Anti-Freeze Coolant Mixture Ratio".
- 2. After refilling coolant, run engine to ensure that no water-flow noise is emitted.

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-406, "Component Function Check".

NOTE:

Use component function check to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to <u>EC-407</u>, "<u>Diagnosis Procedure</u>".

Component Function Check

INFOID:0000000008274779

1.PERFORM COMPONENT FUNCTION CHECK-I

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

P1217 ENGINE OVER TEMPERATURE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]


Check the coolant level in the reservoir tank and radiator.

Allow engine to cool before checking coolant level.

Is the coolant level in the reservoir tank and/or radiator below the proper range?

YES >> Proceed to EC-407, "Diagnosis Procedure".

NO >> GO TO 2.

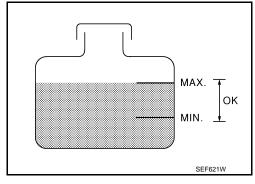

2.PERFORM COMPONENT FUNCTION CHECK-II

Confirm whether customer filled the coolant or not.

Did customer fill the coolant?

YES >> Proceed to EC-407, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform component function check-iii

(P)With CONSULT

- 1. Turn ignition switch ON.
- Perform "FAN DUTY CONTROL" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 3. Check that cooling fan speed varies according to the percentage.

®Without CONSULT

- Activate IPDM E/R auto active test and check cooling fan motors operation. Refer to PCS-12, "Diagnosis Description".
- 2. Check that cooling fan operates.

Is the inspection result normal?

YES >> INSPECTION END

>> Proceed to EC-407, "Diagnosis Procedure". NO

Diagnosis Procedure

INFOID:0000000008274780

1. CHECK COOLING FAN OPERATION

(P)With CONSULT

- Turn ignition switch ON.
- Perform "FAN DUTY CONTROL" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- Check that cooling fan speed varies according to the percentage.

- Activate IPDM E/R auto active test and check cooling fan motors operation. Refer to PCS-12, "Diagnosis Description".
- Check that cooling fan operates.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to EC-512, "Diagnosis Procedure".

2 .CHECK COOLING SYSTEM FOR LEAK-I

Check cooling system for leak. Refer to CO-8, "Inspection".

Is leakage detected?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK COOLING SYSTEM FOR LEAK-II

Check the following for leak.

- Hose (Refer to CO-8, "Inspection".)
- Radiator (Refer to CO-12, "RADIATOR: Inspection".)
- Water pump (Refer to CO-20, "Inspection".)

D

Α

EC

Е

F

M

N

2013 JUKE

P1217 ENGINE OVER TEMPERATURE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

>> Repair or replace malfunctioning part.

4. CHECK RADIATOR CAP

Check radiator cap. Refer to CO-12, "RADIATOR CAP: Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace radiator cap. Refer to CO-14, "Exploded View".

5. CHECK THERMOSTAT

Check thermostat. Refer to CO-23, "Inspection".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace thermostat. Refer to CO-22, "Removal and Installation".

6.CHECK WATER CONTROL VALVE

Check water control valve. Refer to CO-25, "Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace water control valve. Refer to CO-24, "Exploded View".

7.check engine coolant temperature sensor

Refer to EC-217, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

8. OVERHEATING CAUSE ANALYSIS

If the cause cannot be isolated, check the CO-6, "Troubleshooting Chart".

>> INSPECTION END

P1225 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P1225 TP SENSOR

DTC Logic

DTC DETECTION LOGIC

	-	

Α

D

Е

F

Н

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		Possible cause	ı
P1225	CTP LEARNING-B1 [Closed throttle position learning performance]	Closed throttle position learning value is excessively low.	Electric throttle control actuator (TP sensor 1 and 2)	•

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-409, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274782

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- 1. Turn ignition switch OFF.
- Remove the intake air duct. Refer to EM-25, "Exploded View".
- Check if foreign matter is caught between the throttle valve and the housing.

Is the inspection result normal?

YES >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

NO >> Remove the foreign matter and clean the electric throttle control actuator inside, then perform throttle valve closed position learning. Refer to EC-132, "Work Procedure".

M

P1226 TP SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		Possible cause
P1226	CTP LEARNING-B1 (Closed throttle position learning performance)	Closed throttle position learning is not performed successfully, repeatedly.	Electric throttle control actuator (TP sensor 1 and 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Turn ignition switch OFF, wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Repeat steps 2 and 3 for 32 times.
- 5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-410, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

NFOID:0000000000827478

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- Turn ignition switch OFF.
- 2. Remove the intake air duct. Refer to EM-25, "Exploded View".
- 3. Check if foreign matter is caught between the throttle valve and the housing.

Is the inspection result normal?

YES >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

NO >> Remove the foreign matter and clean the electric throttle control actuator inside, then perform throttle valve closed position learning. Refer to EC-132, "Work Procedure".

P1423, P1424 COLD START CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P1423, P1424 COLD START CONTROL

Description INFOID:0000000008274785

ECM controls fuel injection timing and fuel injection quantity when engine is started with the engine cold. This control promotes the activation of three way catalyst by heating the catalyst and reduces emissions.

INFOID:0000000008274786

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P1423 or P1424 is displayed with other DTC, first perform the trouble diagnosis for other DTC.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1423	COLD START CONTROL (Cold start emission reduction strategy monitoring)	ECM does not control fuel injection timing properly when engine is started with the engine cold.	ECM
P1424	COLD START CONTROL (Cold start emission reduction strategy monitoring)	ECM does not control fuel injection quantity properly when engine is started with the engine cold.	LOW

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

(P)WITH CONSULT

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Check that "COOLAN TEMP/S".
- If it is between 5°C (41°F) and 40°C (104°F) go to the following steps.
- If it is below 5°C (41°F) warm engine up to more than 5°C (41°F) and retry from step 1.
- If it is above 40°C (104°F) cool engine down to less than 40°C (104°F) and retry from step 1.
- Start engine and let it idle for 5 minutes.
- Check 1st trip DTC.

@WITH GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-411, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1.INSPECTION START

- Turn ignition switch ON.
- 2. Erase DTC.
- Perform DTC confirmation procedure. Refer to <u>EC-411</u>, "DTC Logic". 3.
- Check 1st trip DTC.

EC

Α

Е

F

N

INFOID:0000000008274787

Revision: 2014 February

P1423, P1424 COLD START CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Is the 1st trip DTC P1423 or P1424 displayed again?

YES >> Replace ECM. Refer to EC-542, "Removal and Installation".

NO >> INSPECTION END

P1451 PRESSURE SENSOR

DTC Logic INFOID:0000000008274788

DTC DETECTION LOGIC

NOTE:

If DTC P1451 is displayed with DTC P0452 or P0453, first perform the trouble diagnosis for DTC P0452 or P0453. Refer to EC-350, "DTC Logic" or EC-353, "DTC Logic".

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1451	TC/SC PRES-EVAP PRES (EVAP control system pressure sensor/turbocharger boost sensor correlation)	ECM detects a state that the pressure difference remains –13.0 kPa (–98 mmHg, –3.83 inHg) or less/13.5 kPa (102 mmHg, 3.99 inHg) or more for continuously for 5 seconds or more under the condition that the pressure of the EVAP control system pressure sensor and that of the turbocharger boost sensor are equal.	EVAP control system pressure sensor Turbocharger boost sensor Clogging, crushing, or damage in hose or piping

DTC CONFIRMATION PROCEDURE

NOTE:

Never refuel before and during the following procedure.

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.perform dtc confirmation procedure

- Start engine and warm it up to normal operating temperature
- Turn ignition switch OFF and wait at least 10 seconds. 2.
- Start the engine. Wait at least for 15 seconds after the start of idle running.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-413, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK HOSE AND PIPING

- Turn ignition switch OFF.
- Check the following.
- Blockage, crush, or damage in the hose and the piping of EVAP purge line between fuel tank and intake
- Blockage, crush, or damage in the hose and the piping of intake air passage between inlet air duct and intake manifold.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts

2.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Check EVAP control system pressure sensor. Refer to EC-414, "Component Inspection (EVAP Control System Pressure Sensor)".

Is the inspection result normal?

EC-413 Revision: 2014 February 2013 JUKE

EC

Α

D

Е

M

INFOID:0000000008274789

P1451 PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

YES >> GO TO 3.

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-26, "2WD : Exploded View"</u>.

3.CHECK TURBOCHARGER BOOST SENSOR

Check turbocharger boost sensor. Refer to <u>EC-414, "Component Inspection (Turbocharger Boost Sensor)"</u>. Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace turbocharger boost sensor (with intake temperature sensor 2). Refer to <u>EM-30</u>, "Exploded View".

Component Inspection (EVAP Control System Pressure Sensor)

INFOID:0000000008274790

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. Always replace O-ring with a new one.
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

ECM + -			Condition	Voltage	
		-	Condition [Applied vacuum kPa (kg/cm ² , psi)]		
Connector	Terminal		[ripplied vacadin in a (ng/cin , pol/)]		
F25	15	12	Not applied	0.5 - 4.6 V	
1 23	F25 15 12		-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value	

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor. Refer to FL-26, "2WD : Exploded View".

Component Inspection (Turbocharger Boost Sensor)


INFOID:0000000008274791

1. CHECK TURBOCHARGER BOOST SENSOR

- Turn ignition switch OFF.
- 2. Remove turbocharger boost sensor with its harness connector.
- 3. Install pressure pump (A) to turbocharger boost sensor (1).

When insert a pressure pump hose to the sensor, be careful to the damage of the sensor housing.

- 4. Turn ignition switch ON.
- 5. Check the voltage between ECM harness connector terminals as per the following conditions.

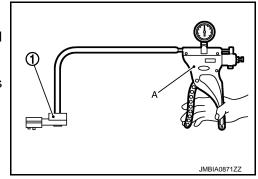

NOTE:

- Always calibrate the pressure pump gauge when using it.
- Inspection should be done at room temperature [10 30°C (50 86°F)].

P1451 PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

ECM			O Title ID and (D Intinated)		
Connector	+ -		Condition [Pressure (Relative to atmospheric pressure)]	Voltage (Approx.)	
Connector	Tern	ninal	, , , , , , , , , , , , , , , , , , , ,	(* .pp . 0 /)	
F25	41	44	0 kPa (0 mbar, 0 mmHg, 0 inHg)	2.03 V	
125	41	44	40 kPa (400 mbar, 300 mmHg, 11.81 inHg)	2.67 V	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace turbocharger boost sensor. Refer to EM-37, "Exploded View".

ן וששטו

EC

Α

С

D

Е

F

G

Н

K

L

M

Ν

0

P1550 BATTERY CURRENT SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1550	BAT CURRENT SENSOR (Battery current sensor circuit range/performance)	The output voltage of the battery current sensor remains within the specified range while engine is running.	Harness or connectors (Battery current sensor circuit is open or shorted.) (Camshaft position sensor circuit is open or shorted) (Fuel rail pressure sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) (Battery current sensor Camshaft position sensor Camshaft (Intake) Starter motor Starting system circuit Dead (Weak) battery Fuel rail pressure sensor G sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2 Turbocharger boost sensor Engine oil pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 10 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-416, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274793

1. CHECK BATTERY CURRENT SENSOR POWER SUPPLY

P1550 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Turn ignition switch OFF.

- 2. Disconnect battery current sensor harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between battery current sensor harness connector and ground.

	+		Villa	
Battery current sensor		-	Voltage (Approx.)	
Connector Terminal			, , ,	
F52 1		Ground	5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check harness connector for short to power and short to ground, between the following terminals.

E	CM	Sensor			
Connector	Terminal	Name	Connector	Terminal	
		FRP sensor	F5	1	
F25	39	EOP sensor	F43	3	
		Turbocharger boost sensor	F75	1	
	68	Battery current sensor	F52	1	
F26	00	G sensor	B32	3	
72	CMP sensor	F109	1		
12		EVT control position sensor	F110	1	
E18	118	APP sensor 2 E101		5	

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check battery current sensor ground circuit

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

+			_	
Battery cui	rent sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
F52	3	F26	87	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT

Check the continuity between battery current sensor harness connector and ECM harness connector.

Α

[MR16DDT]

EC

D

Е

F

Н

K

M

Ν

+		-		
Battery cui	rent sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
F52	4	F26	80	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts

CHECK BATTERY CURRENT SENSOR

Check the battery current sensor. Refer to EC-418, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".


NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

Component Inspection

INFOID:0000000008274794

1. CHECK BATTERY CURRENT SENSOR

- 1. Turn ignition switch OFF.
- Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable between battery negative terminal and body ground.
- 5. Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector and ground.

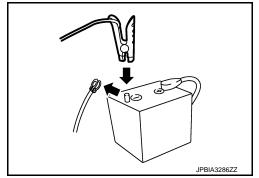

	ECM			
Connector	+	-	Voltage (Approx.)	
Connector	Terminal		(11 -)	
F26	80	87	2.5 V	

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-88. "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

P1551, P1552 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P1551, P1552 BATTERY CURRENT SENSOR

DTC Logic

DTC DETECTION LOGIC

EC

M

Р

Α

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1551	BAT CURRENT SENSOR (Battery current sensor circuit low input)	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (Battery current sensor circuit is open or shorted.)
P1552	BAT CURRENT SENSOR (Battery current sensor circuit high input)	An excessively high voltage from the sensor is sent to ECM.	(Camshaft position sensor circuit is open or shorted) (Fuel rail pressure sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) Battery current sensor Camshaft position sensor Camshaft (Intake) Starter motor Starting system circuit Dead (Weak) battery Fuel rail pressure sensor G sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2 Turbocharger boost sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V with ignition switch ON

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 10 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-420, "Diagnosis Procedure".

NO >> INSPECTION END

P1551, P1552 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Diagnosis Procedure

INFOID:0000000008274796

1. CHECK BATTERY CURRENT SENSOR POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect battery current sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between battery current sensor harness connector and ground.

	+		V. Ita
Battery cur	Battery current sensor		Voltage (Approx.)
Connector	Connector Terminal		, , ,
F52	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check harness connector for short to power and short to ground, between the following terminals.

EC	CM	Sensor			
Connector	Terminal	Name	Connector	Terminal	
		FRP sensor	F5	1	
F25	39	EOP sensor	F43	3	
		Turbocharger boost sensor	F75	1	
		Battery current sensor	F52	1	
F26 ————————————————————————————————————	00	G sensor	B32	3	
	72	CMP sensor	F109	1	
	12	EVT control position sensor	F110	1	
E18	118	APP sensor 2	E101	5	

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check battery current sensor ground circuit

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

+		-		
Battery cur	rent sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F52	3	F26	87	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

P1551, P1552 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

INFOID:0000000008274797

+		_				
Battery cur	rent sensor	ECM		ensor ECM		Continuity
Connector	Terminal	Connector Terminal				
F52	4	F26	80	Existed		

EC

D

Е

Α

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts

5.CHECK BATTERY CURRENT SENSOR

Check the battery current sensor. Refer to EC-418, "Component Inspection".

Is the inspection result normal?


YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

Component Inspection

1. CHECK BATTERY CURRENT SENSOR

- 1. Turn ignition switch OFF.
- Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable between battery negative terminal and body ground.
- Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector and ground.

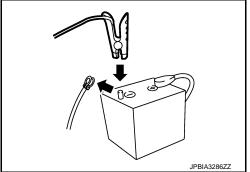

	ECM		V 16		
Connector	+	-	Voltage (Approx.)		
Connector	Ter	rminal	(- /		
F26	80	87	2.5 V		

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-88. "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

Р

Ν

EC-421 Revision: 2014 February 2013 JUKE

P1553 BATTERY CURRENT SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1553	BAT CURRENT SENSOR (Battery current sensor performance)	The signal voltage transmitted from the sensor to ECM is higher than the amount of the maximum power generation.	Harness or connectors (Battery current sensor circuit is open or shorted.) (Camshaft position sensor circuit is open or shorted) (Fuel rail pressure sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) (Battery current sensor Camshaft position sensor Camshaft (Intake) Starter motor Starting system circuit Dead (Weak) battery Fuel rail pressure sensor G sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2 Turbocharger boost sensor Engine oil pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 10 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-422, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274799

1. CHECK BATTERY CURRENT SENSOR POWER SUPPLY

P1553 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- 1. Turn ignition switch OFF.
- Disconnect battery current sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between battery current sensor harness connector and ground.

	+		V. 1.
Battery current sensor		-	Voltage (Approx.)
Connector	Terminal		, , ,
F52	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check harness connector for short to power and short to ground, between the following terminals.

ECM		Sensor			
Connector	Terminal	Name	Connector	Terminal	
		FRP sensor	F5	1	
F25	39	EOP sensor	F43	3	
		Turbocharger boost sensor	F75	1	
68		Battery current sensor	F52	1	
F26		G sensor	B32	3	
	72	CMP sensor	F109	1	
	12	EVT control position sensor	F110	1	
E18	118	APP sensor 2	E101	5	

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

	+		_	
Battery cui	rent sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F52	3	F26	87	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

$oldsymbol{4}.$ CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

EC

Α

D

Е

F

0

Н

1

K

_

M

Ν

0

Р

2013 JUKE

	+ -			
Battery cur	Battery current sensor		ECM	
Connector	Terminal	Connector Terminal		
F52	4	F26	80	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts

5. CHECK BATTERY CURRENT SENSOR

Check the battery current sensor. Refer to EC-418, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".


NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

Component Inspection

INFOID:0000000008274800

1. CHECK BATTERY CURRENT SENSOR

- 1. Turn ignition switch OFF.
- Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable between battery negative terminal and body ground.
- 5. Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector and ground.

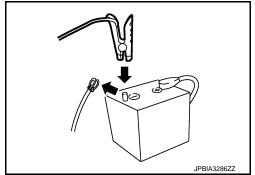

	ECM			
Connector	+	-	Voltage (Approx.)	
Connector	Tei	minal	(11 -)	
F26	80	87	2.5 V	

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-88. "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

Α

EC

M

Ν

P1554 BATTERY CURRENT SENSOR

DTC Logic INFOID:0000000008274801

DTC DETECTION LOGIC

Possible cause	С
Harness or connectors	
(Battery current sensor circuit is open	
or shorted.)	
(Camehaft position sensor circuit is	\cup

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause	С
P1554	BAT CURRENT SENSOR (Battery current sensor performance)	The output voltage of the battery current sensor is lower than the specified value while the battery voltage is high enough.	Harness or connectors (Battery current sensor circuit is open or shorted.) (Camshaft position sensor circuit is open or shorted) (Fuel rail pressure sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) Battery current sensor Camshaft position sensor Camshaft (Intake) Starter motor Starting system circuit Dead (Weak) battery Fuel rail pressure sensor G sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2 Turbocharger boost sensor Engine oil pressure sensor	D E F G H

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-425, "Component Function Check".

NOTE:

Use component function check to check the overall function of the battery current sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-426, "Diagnosis Procedure".

Component Function Check

1.PRECONDITIONING

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 12.8 V at idle.
- Before performing the following procedure, confirm that all load switches and A/C switch are turned OFF.

>> GO TO 2.

2.PERFORM COMPONENT FUNCTION CHECK

With CONSULT

EC-425 Revision: 2014 February

2013 JUKE

INFOID:0000000008274802

P1554 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Start engine and let it idle.
- Select "BAT CUR SEN" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Check "BAT CUR SEN" indication for 10 seconds.

"BAT CUR SEN" should be above 2,300 mV at least once.

Without CONSULT

- Start engine and let it idle.
- 2. Check the voltage between ECM harness connector and ground.

ECM			
Connector	+	-	Voltage
Connector	Tern	ninal	
F26	80	87	Above 2.3 V at least once

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to <u>EC-426</u>, "<u>Diagnosis Procedure</u>".

Diagnosis Procedure

INFOID:0000000008274803

1. CHECK BATTERY CURRENT SENSOR POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect battery current sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between battery current sensor harness connector and ground.

	+		V. K	
Battery cur	rent sensor	-	Voltage (Approx.)	
Connector Terminal			(11)	
F52	1	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check harness connector for short to power and short to ground, between the following terminals.

ECM		Sensor			
Connector	Terminal	Name	Connector	Terminal	
		FRP sensor	F5	1	
F25	39	EOP sensor	F43	3	
		Turbocharger boost sensor	F75	1	
68 F26	Battery current sensor	F52	1		
	G sensor	B32	3		
F20	72	CMP sensor	F109	1	
	12	EVT control position sensor	F110	1	
E18	118	APP sensor 2	E101	5	

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check battery current sensor ground circuit

P1554 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

+		-		
Battery cui	rent sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F52	3	F26	87	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

	+		_	
Battery cui	rent sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F52	4	F26	80	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts

5. CHECK BATTERY CURRENT SENSOR

Check the battery current sensor. Refer to EC-418. "Component Inspection".

Is the inspection result normal?


YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

Component Inspection

1. CHECK BATTERY CURRENT SENSOR

- Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- Disconnect battery negative cable.
- Install jumper cable between battery negative terminal and body ground.
- 5. Turn ignition switch ON.
- Check the voltage between ECM harness connector and ground.

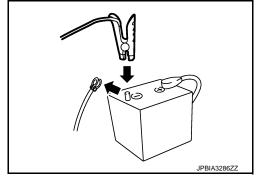

EC

Α

D

Е

ı

INFOID:0000000008274804

IV

Ν

0

P1554 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

ECM			V 1	
Connector	+	-	Voltage (Approx.)	
Connector	Ter	minal	(11 /	
F26	80	87	2.5 V	

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-88, "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

P1556, P1557 BATTERY TEMPERATURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Α

EC

D

Н

N

Р

P1556, P1557 BATTERY TEMPERATURE SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1556	BAT TMP SEN/CIRC (Battery temperature sensor circuit low input)	Signal voltage from Battery temperature sensor remains 0.16V or less for 5 seconds or more.	Harness or connectors [Battery current sensor (Battery temperature sensor) circuit is shorted.] Battery current sensor (Battery temperature sensor)
P1557	BAT TMP SEN/CIRC (Battery temperature sensor circuit high input)	Signal voltage from Battery temperature sensor remains 4.84V or more for 5 seconds or more.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 10 V or more at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start the engine and let it idle at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-429, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK BATTERY TEMPERATURE SENSOR POWER SUPPLY

- 1. Turn ignition switch OFF.
- Disconnect battery current sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between battery current sensor harness connector and ground.

	+		Voltage (Approx.)	
Battery cur	rent sensor	_		
Connector	Terminal		(11 - 7	
F52	2	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK BATTERY TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

INFOID:0000000008274806

P1556, P1557 BATTERY TEMPERATURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

+		_		
Battery curr	ent sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F52	2	F26	79	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 3.}$ CHECK BATTERY TEMPERATURE SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

+		_		
Battery current sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F52	3	F26	87	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK BATTERY TEMPERATURE SENSOR

Check the battery temperature sensor. Refer to EC-430, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

Component Inspection

INFOID:0000000008274807

1. CHECK BATTERY TEMPERATURE SENSOR

- Turn ignition switch OFF.
- 2. Disconnect battery current sensor.
- 3. Check the resistance between battery current sensor connector terminals.

Battery current sensor			
+ -		Resistance	
Terminal			
2 3		Continuity with the resistance value 100 Ω or more	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly. Refer to PG-97, "Exploded View".

P1564 ASCD STEERING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P1564 ASCD STEERING SWITCH

DTC Logic INFOID:0000000008274808

DTC DETECTION LOGIC

NOTE:

If DTC P1564 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-387, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1564	ASCD SW (ASCD steering switch)	 An excessively high voltage signal from the ASCD steering switch is sent to ECM. ECM detects that input signal from the ASCD steering switch is out of the specified range. ECM detects that the ASCD steering switch is stuck ON. 	Harness or connectors (ASCD steering switch circuit is open or shorted.) ASCD steering switch ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.perform dtc confirmation procedure

- 1. Turn ignition switch ON.
- Wait at least 10 seconds. 2.
- Press MAIN switch for at least 10 seconds, then release it and wait at least 10 seconds.
- Press CANCEL switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 5. Press ACCEL/RES switch for at least 10 seconds, then release it and wait at least 10 seconds.
- Press COAST/SET switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 7. Check DTC.

Is DTC detected?

YES >> Proceed to EC-431, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK ASCD STEERING SWITCH CIRCUIT

- (P) With CONSULT
- Turn ignition switch ON.
- 2. Select "CANCEL SW", "RESUME/ACC SW" and "SET SW" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Check each item indication as per the following conditions.

Monitor item	Condition		Indication
MAIN SW	MAIN switch	Pressed	ON
	WAIN SWILCH	Released	OFF
CANCEL SW	CANCEL switch	Pressed	ON
		Released	OFF

EC-431 Revision: 2014 February 2013 JUKE

EC

Α

D

C

F

Е

Н

K

M

INFOID:0000000008274809

< DTC/CIRCUIT DIAGNOSIS >

Monitor item	Condition		Indication
RESUME/ACC SW	ACCEL/RES switch	Pressed	ON
	ACCEL/RES SWIIGH	Released	OFF
SET SW	COAST/SET switch	Pressed	ON
	OOAGI/GET SWILCH	Released	OFF

₩ Without CONSULT

- 1. Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector terminals.

ECM				V. Itaa	
Connector	+	-	Condition	Voltage (Approx.)	
Connector	Terminal				
E18	110	111	MAIN switch: Pressed	0 V	
			CANCEL switch: Pressed	1 V	
			COAST/SET switch: Pressed	2 V	
			ACCEL/RES switch: Pressed	3 V	
			All ASCD steering switches: Released	4 V	

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 2.

2.check ascd steering switch ground circuit

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Disconnect combination switch (spiral cable) harness connector.
- 4. Check the continuity between combination switch (spiral cable) and ECM harness connector.

+			_	
Combination switch (Spiral cable)		ECM		Continuity
Connector	Terminal	Connector Terminal		
M33	32	E18	111	Existed

5. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.check ascd steering switch input signal circuit

1. Check the continuity between ECM harness connector and combination switch.

,	+		-		
•	Combination switch (Spiral cable)		ECM		Continuity
٠	Connector	Terminal	Connector	Terminal	
	M33	25	E18	110	Existed

Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

P1564 ASCD STEERING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

4. CHECK ASCD STEERING SWITCH

Refer to EC-433, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace ASCD steering switch. Refer to <u>ST-8</u>, "Exploded View".

Component Inspection

INFOID:0000000008274810

1. CHECK ASCD STEERING SWITCH

- 1. Disconnect combination switch (spiral cable) harness connector.
- Check the resistance between combination switch harness connector terminals as per the following conditions.

Combination switch (Spiral cable)			0 111	Resistance	
Connector	Connector + -		Condition	(Approx.)	
Terminals		ninals			
	13 16		MAIN switch: Pressed	0 Ω	
			CANCEL switch: Pressed	250 Ω	
M302		COAST/SET switch: Pressed	660 Ω		
			ACCEL/RES switch: Pressed	1,480 Ω	
			All ASCD steering switches: Released	4,000 Ω	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD steering switch. Refer to <u>ST-8</u>, "<u>Exploded View</u>".

Е

D

Α

EC

F

Н

Κ

L

M

Ν

0

P1572 ASCD BRAKE SWITCH

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1572 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to <u>EC-387</u>, "<u>DTC Logic"</u>.
- This self-diagnosis has the one trip detection logic. When malfunction A is detected, DTC is not stored in ECM memory. And in that case, 1st trip DTC and 1st trip freeze frame data are displayed. 1st trip DTC is erased when ignition switch OFF. And even when malfunction A is detected in two consecutive trips, DTC is not stored in ECM memory.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		DTC detecting condition	Possible cause
	ASCD BRAKE SW	A)	When the vehicle speed is above 30 km/h (19 MPH), ON signals from the stop lamp switch and the brake pedal position switch are sent to the ECM at the same time.	Harness or connectors (Stop lamp switch circuit is shorted.) (Brake pedal position switch circuit is shorted.) Stop lamp switch
P1572	(ASCD brake switch)	В)	Brake pedal position switch signal is not sent to ECM for extremely long time while the vehicle is driving.	 Brake pedal position switch Incorrect stop lamp switch installation Incorrect brake pedal position switch installation ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

NOTE:

Procedure for malfunction B is not described here. It takes extremely long time to complete procedure for malfunction B. By performing procedure for malfunction A, the incident that causes malfunction B can be detected.

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a

- 1. Start engine.
- 2. Press MAIN switch and make sure that CRUISE indicator is displayed in combination meter.
- 3. Drive the vehicle for at least 5 consecutive seconds as per the following conditions.

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Vehicle speed	More than 30 km/h (19 mph)
Selector lever	Suitable position

4. Check DTC.

Is DTC detected?

YES >> Proceed to <u>EC-439</u>, "<u>Diagnosis Procedure</u>".

NO >> GO TO 3.

P1572 ASCD BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

3.perform dtc confirmation procedure for malfunction b

Drive the vehicle for at least 5 consecutive seconds as per the following conditions.

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Vehicle speed	More than 30 km/h (19 mph)
Selector lever	Suitable position
Driving location	Depress the brake pedal for more than five seconds so as not to come off from the above-mentioned vehicle speed.

Check DTC.

Is DTC detected?

YES >> Proceed to EC-439, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK OVERALL FUNCTION-I

(P)With CONSULT

- Turn ignition switch ON.
- Select "BRAKE SW1" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Check "BRAKE SW1" indication as per the following conditions.

Monitor item	C	Indication	
BRAKE SW1	Brako podal	Slightly depressed	OFF
	Brake pedal	Fully released	ON

- 1. Turn ignition switch ON.
- Check the voltage between ECM harness connector terminals as per the following.

ECM			Condition		Valtana	
Connector + -		Voltage (Approx.)				
Connector	Terminal				,	
E18	116 127 Brake pedal		Brake pedal	Slightly depressed	0 V	
E10 110		127	brake pedar	Fully released	Battery voltage	

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK OVERALL FUNCTION-II

(P)With CONSULT

Select "BRAKE SW2" and check indication as per the following conditions.

Monitor item	C	Indication	
BRAKE SW2	Brake pedal	Slightly depressed	ON
	Brake pedar	Fully released	OFF

Check the voltage between ECM harness connector terminals as per the following conditions.

EC-435 Revision: 2014 February 2013 JUKE

EC

Α

C

D

Е

F

INFOID:0000000008274812

Н

Ν

ECM					V. K	
Connector	+	_	Condition		Voltage (Approx.)	
Connector	Term	ninal			(11 -)	
E18	115	127	Brake pedal	Slightly depressed	Battery voltage	
LIO	113	121	Zi Brake pedar	Fully released	0 V	

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 6.

3.CHECK BRAKE PEDAL POSITION SWITCH POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect brake pedal position switch harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between brake pedal position switch harness connector and ground.

+	-		
Brake pedal p	osition switch	_	Voltage
Connector	Terminal		
E112	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> Perform the trouble diagnosis for power supply circuit.

4. CHECK BRAKE PEDAL POSITION SWITCH INPUT SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between brake pedal position switch harness connector and ECM harness connector

+		-	_	
Brake pedal po	osition switch	ECM		Continuity
Connector	Terminal	Connector Terminal		
E112	2	E18	116	Existed

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5.CHECK BRAKE PEDAL POSITION SWITCH

Check the brake pedal position switch. Refer to <u>EC-523</u>, "Component Inspection (Brake Pedal Position Switch)"

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace brake pedal position switch. Refer to <u>BR-18</u>, "Exploded View".

6.CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check the voltage between stop lamp switch harness connector and ground.

-	-			
Stop lam	p switch	_	Voltage	
Connector	Terminal			
E102 ^{*1} E118 ^{*2}	1	Ground	Battery voltage	

*1: CVT models

Is the inspection result normal?

YES >> GO TO 7.

NO >> Perform the trouble diagnosis for power supply circuit.

7.CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT

- Disconnect ECM harness connector.
- Check the continuity between stop lamp switch harness connector and ECM harness connector.

+			-		
Stop lamp switch			ECM		Continuity
C	Connector	Terminal	Connector	Terminal	
	E102 ^{*1} E118 ^{*2}	2	E18	115	Existed

*1: CVT models

3. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace error-detected parts.

8.CHECK STOP LAMP SWITCH

Check the stop lamp switch. Refer to EC-438, "Component Inspection (Stop Lamp Switch)".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43. "Intermittent Incident".

NO >> Replace stop lamp switch. Refer to BR-18, "Exploded View".

Component Inspection (Brake Pedal Position Switch)

1. CHECK BRAKE PEDAL POSITION SWITCH-I

- Turn ignition switch OFF.
- Disconnect brake pedal position harness connector.
- Check the continuity between brake pedal position switch terminals as per the following conditions.

Brake pedal position switch					
+	_	Condition		Continuity	
Tern	ninals				
			Fully released	Existed	
1	2	Brake pedal	Slightly de- pressed	Not existed	

Is the inspection result normal?

>> INSPECTION END YES

NO >> GO TO 2.

2.check brake pedal position switch-ii

EC-437 Revision: 2014 February 2013 JUKE

EC

Α

D

F

INFOID:0000000008274813

Ν

^{*2:} M/T models

^{*2:} M/T models

P1572 ASCD BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- 1. Adjust brake pedal position switch installation. Refer to BR-7, "Inspection and Adjustment".
- 2. Check the continuity between brake pedal position switch terminals as per the following conditions.

Brake pedal p	Brake pedal position switch			
+	_	Condition		Continuity
Tern	ninals			
			Fully released	Existed
1	2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace brake pedal position switch. Refer to <u>BR-18</u>, "Exploded View".

Component Inspection (Stop Lamp Switch)

INFOID:0000000008274814

1. CHECK STOP LAMP SWITCH-I

- 1. Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check the continuity between stop lamp switch terminals as per the following conditions.

Stop lan	np switch			
+	_	Condition		Continuity
Tern	ninals			
			Fully released	Not existed
1	2	Brake pedal	Slightly de- pressed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK STOP LAMP SWITCH-II

- 1. Adjust stop lamp switch installation. Refer to BR-7, "Inspection and Adjustment".
- 2. Check the continuity between stop lamp switch terminals as per the following conditions.

Stop lan	np switch			
+	_	Condition		Continuity
Tern	ninals			
			Fully released	Not existed
1	2	Brake pedal	Slightly de- pressed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to <u>BR-18</u>, "Exploded View".

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P1574 ASCD VEHICLE SPEED SENSOR

Description INFOID:0000000008274815

The ECM receives two vehicle speed sensor signals via CAN communication line. One is sent from combination meter, and the other is from TCM (Transmission control module). The ECM uses these signals for ASCD control. Refer to EC-57, "AUTOMATIC SPEED CONTROL DEVICE (ASCD): System Description" for ASCD functions.

INFOID:0000000008274816

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1574 is displayed with DTC U1001, first perform the trouble diagnosis for DTC U1001. Refer to EC-164, "DTC Logic".
- If DTC P1574 is displayed with DTC P0500, first perform the trouble diagnosis for DTC P0500. Refer to EC-367, "EXCEPT FOR M/T MODELS: DTC Logic"
- If DTC P1574 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-387, "DTC Logic"
- If DTC P1574 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-389, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1574	ASCD VHL SPD SEN (ASCD vehicle speed sensor)	ECM detects a difference between two vehicle speed signals is out of the specified range.	 Harness or connectors (CAN communication line is open or shorted.) ABS actuator and electric unit (control unit) TCM ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine.
- Drive the vehicle at more than 40 km/h (25 MPH).

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Check DTC.

Is DTC detected?

YES >> Proceed to EC-439, "Diagnosis Procedure".

>> INSPECTION END

Diagnosis Procedure

Revision: 2014 February

1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-103, "CONSULT Function".

EC-439

EC

Α

D

F

K

M

N

Р

INFOID:00000000008274817

P1574 ASCD VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Is DTC detected?

NO >> GO TO 2.

YES >> Perform trouble shooting relevant to DTC indicated.

 $2.\mathsf{CHECK}$ DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Check DTC with ABS actuator and electric unit (control unit). Refer to <u>BRC-38</u>, "CONSULT Function". <u>Is DTC detected?</u>

NO >> INSPECTION END

YES >> Perform trouble shooting relevant to DTC indicated.

P158A ECM

DTC Logic INFOID:0000000008274818

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause*
P158A (C	G SENSOR G sensor calibration is incom- plete)	ECM detects a state that calibration of the G sensor is incomplete.	G sensor calibration is incomplete

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- 2. Check DTC.

Is DTC detected?

YES >> Proceed to EC-441, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. PERFORM CALIBRATION OF G SENSOR

Perform calibration of G sensor. Refer to EC-135, "Work Procedure".

>> INSPECTION END

Α

EC

D

F

Е

Н

INFOID:0000000008274819

K

Ν

P159A, P159C, P159D G SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P159A	G SENSOR (G sensor circuit)	When ECM detects the following status: A voltage signal transmitted from the G sensor is less than 0.5 V or more than 5.02 V continuously for 5 seconds or more.	Harness or connectors (G sensor circuit is open or shorted.) (Intake air temperature sensor 2 circuit is open or shorted.)
P159C	G SENSOR (G sensor circuit low input)	When ECM detects the following status: A voltage signal transmitted from the G sensor is less than 0.5 V continuously for 5 seconds or more.	(Turbocharger boost sensor circuit is open or shorted.) (Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open
P159D	G SENSOR (G sensor circuit high input)	When ECM detects the following status: A voltage signal transmitted from the G sensor is more than 4.5 V continuously for 5 seconds or more.	or shorted.) (Crankshaft position sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) G sensor Intake air temperature sensor 2 Turbocharger boost sensor Fuel rail pressure sensor Battery current sensor Crankshaft position sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TEST CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-442, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274821

1. CHECK G SENSOR POWER SUPPLY CIRCUIT-I

1. Turn ignition switch OFF.

P159A, P159C, P159D G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- 2. Disconnect G sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between G sensor harness connector terminals.

	V 16				
Connector	+	_	Voltage (Approx.)		
Connector	Terminal				
B32	3	2	5 V		

Is the inspection result normal?

YES >> GO TO 2. NO >> GO TO 4.

2. CHECK G SENSOR SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between G sensor harness connector and ECM harness connector.

	+		_	
G se	ensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
B32	1	F26	83	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK G SENSOR

Check G sensor. Refer to EC-444, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> 1. Replace G sensor.

2. Perform calibration of G sensor. Refer to EC-135, "Work Procedure".

4. CHECK G SENSOR POWER SUPPLY CIRCUIT-II

Check the voltage between G sensor harness connector terminal and ground.

+			
G sensor		_	Voltage (Approx.)
Connector	Connector Terminal		() 1 - 7
B32	3	Ground	5 V

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 7.

CHECK G SENSOR GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between G sensor harness connector and ECM harness connector.

EC

Α

D

Е

F

. .

11

1

J

K

L

M

Ν

0

+ -		_		
G se	ensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
B32	3	F26	87	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK ECM GROUND CIRCUIT

Check the continuity between ECM harness connector and ground.

ECM		Ground	Continuity	
Connector	Terminal	Giodila	Continuity	
F25	1			
F25	2			
	123	Ground	Existed	
E18	124			
	127			

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

7.CHECK SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connectors and each sensor harness connectors
- 3. Check harness connector for short to power and short to ground, between the following terminals.

ECM		Sensor			
Connector	Terminal	Name	Connector	Terminal	
		FRP sensor	F5	1	
F25	39	EOP sensor	F43	3	
	Turbocharger boost sensor	F75	1		
00	68	Battery current sensor	F52	1	
F26	00	G sensor	B32	3	
72	72	CMP sensor	F109	1	
	12	EVT control position sensor	F110	1	
E18	118	APP sensor 2	E101	5	

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

Component Inspection

1. CHECK G SENSOR

(II) With CONSULT

- Remove G sensor.
- 2. Reconnect all harness connectors disconnected.
- 3. Place the G sensor on a flat table.
- Turn ignition switch ON.

INFOID:0000000008274822

P159A, P159C, P159D G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Α

EC


D

Е

F

- Select "G SENSOR" in "DATA MONITOR" mode of "ENGINE" using CONSULT to check indications according to the following conditions:
 - : Direction of gravitational force

Monitor item	Condition	Value (V)
	Parallel with the table (0G) (B)	2.18 – 2.82
G SENSOR	Vertical to the table (–1G) (A) ↓	0.85 − 1.49* ↓
O OLINOON	Parallel with the table (0G) (B) ↓	2.18 – 2.82* ↓
	Vertical to the table (1G) (C)	3.51 – 4.15*

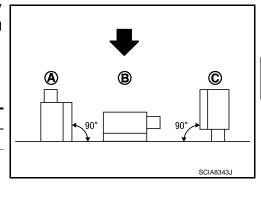


*: Check that voltage rises as the G sensor measurement condition changes in the order of (A), (B), and (C).

Without CONSULT

- 1. Remove G sensor.
- 2. Reconnect all harness connectors disconnected.
- 3. Place the G sensor on a flat table.
- 4. Turn ignition switch ON.
- Check the voltage between ECM harness connector terminal and ground.
 - : Direction of gravitational force

+ ECM		_	Condition	Voltage (V)
Connector	Terminal			
			Parallel with the table (0G) (B)	2.18 – 2.82
F26	83	Ground	Vertical to the table (-1G) (A) ↓ Parallel with the table (0G) (B) ↓ Vertical to the table (1G) (C)	0.85 - 1.49* ↓ 2.18 - 2.82* ↓ 3.51 - 4.15*

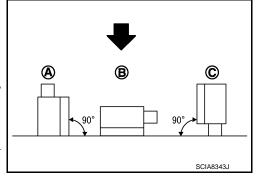

*: Check that voltage rises as the G sensor measurement condition changes in the order of (A), (B), and (C).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace G sensor.

Ν

M

K

P159B G SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P159B	G SENSOR (G sensor circuit range/perfor- mance)	Every time when the vehicle is stopped, ECM detects the following status 13 times in a row: A voltage signal transmitted from the G sensor is less than 2.275V or more than 2.725 V continuously for 5 seconds or more.	Harness or connectors (G sensor circuit is open or shorted.) (Intake air temperature sensor 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open or shorted.) (Crankshaft position sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Accelerator pedal position sensor 2 circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) G sensor Intake air temperature sensor 2 Turbocharger boost sensor Fuel rail pressure sensor Battery current sensor Crankshaft position sensor Exhaust valve timing control position sensor Accelerator pedal position sensor 2 Engine oil pressure sensor G sensor fitting condition

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TEST CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine.
- 2. Drive the vehicle for at least 5 seconds at 35 km/h (22 MPH) or more.
- 3. Stop the vehicle and let it idle for at least 5 seconds.

NOTE:

- Depress the brake pedal to bring the vehicle to a full stop.
- Never depress the accelerator pedal while the vehicle is stopped.
- 4. Repeat Step 2 and Step 3 thirteen times.
- 5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-447, "Diagnosis Procedure".

P159B G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274824

1. PERFORM CALIBRATION OF G SENSOR

Α

EC

D

Е

F

Н

L

N

Р

Perform calibration of G sensor. Refer to EC-135, "Work Procedure".

>> GO TO 2.

GO TO Z.

2.perform dtc confirmation procedure

Perform DTC Confirmation Procedure. Refer to <a>EC-446, "DTC Logic".

Is 1st trip DTC detected?

YES >> GO TO 3.

NO >> INSPECTION END

${f 3.}$ CHECK G SENSOR FITTING CONDITION

Check G sensor fitting condition.

Is the inspection result normal?

YES >> GO TO 4.

NO >> 1. Adjust parts fitting condition.

2. Perform calibration of G sensor. Refer to <a>EC-135, "Work Procedure".

4. CHECK G SENSOR POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- 2. Disconnect G sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between G sensor harness connector terminals.

	\		
Connector	+	_	Voltage (Approx.)
Connector	Terr	minal	, , ,
B32	3	2	5 V

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 7.

CHECK G SENSOR SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between G sensor harness connector and ECM harness connector.

G sensor		E(Continuity	
Connector	Terminal	Connector Terminal		Continuity
B32	1	F26	83	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK G SENSOR

Revision: 2014 February

Check G sensor. Refer to EC-449, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> 1. Replace G sensor.

< DTC/CIRCUIT DIAGNOSIS >

2. Perform calibration of G sensor. Refer to EC-135, "Work Procedure".

7. CHECK G SENSOR POWER SUPPLY CIRCUIT-II

Check the voltage between G sensor harness connector terminal and ground.

-	+		Valtaria		
G se	ensor	_	Voltage (Approx.)		
Connector Terminal			(11 -)		
B32	3	Ground	5 V		

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 10.

8. CHECK G SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between G sensor harness connector and ECM harness connector.

G sensor		E	Continuity	
Connector	Terminal	Connector Terminal		Continuity
B32	2	F26	87	Existed

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace error-detected parts.

9. CHECK ECM GROUND CIRCUIT

Check the continuity between ECM harness connector and ground.

E	CM	Ground	Continuity	
Connector	Connector Terminal		Continuity	
F25	1			
1 25	2			
	123	Ground	Existed	
E18	124			
	127			

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

10. CHECK SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connectors and each sensor harness connectors
- 3. Check harness connector for short to power and short to ground, between the following terminals.

EC	CM	Sensor		
Connector	Terminal	Name	Connector	Terminal
		FRP sensor	F5	1
F25	39	EOP sensor	F43	3
		Turbocharger boost sensor	F75	1

P159B G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

E	CM	Sensor		
Connector	Terminal	Name	Connector	Terminal
68 F26 72	60	Battery current sensor	F52	1
	00	G sensor	B32	3
		CMP sensor	F109	1
	EVT control position sensor	F110	1	
E18	118	APP sensor 2	E101	5

EC

Α

D

Е

F

Н

Is the inspection result normal?

- YES >> Perform the trouble diagnosis for power supply circuit.
- NO >> Repair or replace error-detected parts.

Component Inspection


INFOID:0000000008274825

1.CHECK G SENSOR

(P)With CONSULT

- Remove G sensor.
- 2. Reconnect all harness connectors disconnected.
- Place the G sensor on a flat table.
- 4. Turn ignition switch ON.
- 5. Select "G SENSOR" in "DATA MONITOR" mode of "ENGINE" using CONSULT to check indications according to the following conditions:
 - : Direction of gravitational force

Monitor item	Condition	Value (V)
	Parallel with the table (0G) (B)	2.18 – 2.82
G SENSOR	Vertical to the table (-1G) (A) ↓	0.85 − 1.49* ↓
COLINGOIN	Parallel with the table (0G) (B)	2.18 – 2.82* ↓
	Vertical to the table (1G) (C)	3.51 – 4.15*

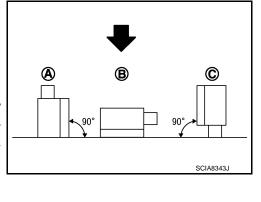


^{*:} Check that voltage rises as the G sensor measurement condition changes in the order of (A), (B), and (C).

Remove G sensor.

Revision: 2014 February

- Reconnect all harness connectors disconnected.
- Place the G sensor on a flat table.
- Turn ignition switch ON.
- Check the voltage between ECM harness connector terminal and ground.
 - : Direction of gravitational force

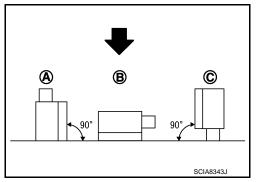

EC-449 2013 JUKE

M

K

L

Ν

+ ECM		_	Condition	Voltage (V)
Connector	Terminal			
			Parallel with the table (0G) (B)	2.18 – 2.82
F26	83	Ground	Vertical to the table (-1G) (A) ↓ Parallel with the table (0G) (B) ↓ Vertical to the table (1G) (C)	0.85 - 1.49* ↓ 2.18 - 2.82* ↓ 3.51 - 4.15*

^{*:} Check that voltage rises as the G sensor measurement condition changes in the order of (A), (B), and (C).

Is the inspection result normal?

YES >> INSPECTION END NO >> Replace G sensor.

P1650 STARTER MOTOR RELAY 2

Description INFOID:000000008274826

ECM controls ON/OFF state of the starter relay, according to the engine and vehicle condition. Models with no Intelligent Key System transmit a control signal directly to IPDM E/R. On the other hand, models with the Intelligent Key System transmit a control signal to IPDM E/R by way of BCM via CAN communication.

Under normal conditions, ECM controls and maintains the starter relay in OFF state during engine running or "D" position.

When detecting a decrease in engine speed due to rapid deceleration or heavy load condition, ECM controls and reactivates the starter relay.

IPDM E/R detects a control state of starter relay and starter control relay and transmits a feedback signal to ECM via CAN communication.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1650 is displayed with DTC U1001, perform the trouble diagnosis for DTC U1001. Refer to <u>EC-164</u>, <u>"DTC Logic"</u>.
- If DTC P1650 is displayed with DTC P0607, perform the trouble diagnosis for DTC P0607. Refer to <u>EC-389</u>.
 <u>"DTC Logic"</u>.
- If DTC P1650 is displayed with B209F or B20A0 of IPDM E/R, perform the trouble diagnosis for B209F or B20A0. Refer to <u>SEC-91. "DTC Logic"</u> or <u>SEC-93. "DTC Logic"</u>.
- If DTC P1650 is displayed with B26F9 or B26FA of BCM, perform the trouble diagnosis for B209F or B20A0.
 Refer to <u>SEC-85</u>, "DTC Logic" or <u>SEC-87</u>, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		DTC detecting condition	Possible cause
		Α	Starter relay is stuck ON.	Harness and connectors (Between IPDM E/R harness connector and ECM harness connector is shorted to ground.) (Between IPDM E/R harness connector and BCM harness connector is shorted to ground.) IPDM E/R
P1650	STR MTR RELAY 2 (Starter relay circuit)	В	Starter relay power supply circuit is excessively high voltage.	Harness and connectors (Between IPDM E/R harness connector and ECM harness is open or shorted to power.) (Between IPDM E/R harness connector and BCM harness is open or shorted to power.) (Between IPDM E/R harness connector and battery is open.) IPDM E/R
		С	Starter relay circuit is excessively low voltage	Harness and connectors (Starter relay circuit is open or shorted.) IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A AND C

1. Turn ignition switch OFF and wait at least 10 seconds.

Revision: 2014 February EC-451 2013 JUKE

EC

Α

. .

Е

5

Н

VI

N

0

Р

-

P1650 STARTER MOTOR RELAY 2

< DTC/CIRCUIT DIAGNOSIS >

- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to <u>EC-452</u>, "<u>Diagnosis Procedure</u>".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B

(I) With CONSULT

CAUTION:

Always drive at a safe speed.

- 1. Start the engine.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 4. Start the engine and warm it up to normal operating temperature.
- 5. Turn ignition switch OFF.
- 6. Lift up drive wheels.
- 7. Turn ignition switch ON.
- 8. Select "POWER BALANCE" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 9. Restart the engine and let it idle at least 10 seconds.
- 10. Shift the selector lever to D position while depressing fully the brake pedal.
- 11. Select 1 4 cylinders in "POWER BALANCE" and cut the fuel of all cylinders.
- 12. Check 1st trip DTC.

CAUTION:

Always drive at a safe speed.

- 1. Start the engine.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Start the engine and warm it up to normal operating temperature.
- 5. Turn ignition switch OFF.
- 6. Lift up drive wheels.
- 7. Restart the engine and let it idle at least 10 seconds.
- Shift the selector lever to D position while depressing fully the brake pedal.
- 9. Remove vacuum hoses from intake manifold.
- 10. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-452, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274828

[MR16DDT]

1. CHECK STARTER RELAY POWER SUPPLY CIRCUIT

Check the starter motor relay power supply circuit. Refer to <u>PCS-34, "Diagnosis Procedure"</u> (With Intelligent Key system) or <u>PCS-61, "Diagnosis Procedure"</u> (Without Intelligent Key system).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2.CHECK STARTER RELAY CONTROL SIGNAL CIRCUIT

With Intelligent Key system

- Turn ignition switch OFF.
- Disconnect IPDM E/R harness connector.
- Disconnect BCM harness connector.
- Check the continuity between IPDM E/R harness connector and BCM harness connector.

Revision: 2014 February EC-452

2013 JUKE

P1650 STARTER MOTOR RELAY 2

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

	+			
IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E13	30	M70	97	Existed

EC

Α

5. Also check harness for short to ground to power.

Without Intelligent Key system

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- 3. Disconnect ECM harness connector.
- Check the continuity between IPDM E/R harness connector and ECM harness connector.

+		-		
IPDM E/R		ECM		Continuity
Connector	Terminal	Connector	Terminal	
E13	30	F26	66	Existed

5. Also check harness for short to ground to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3. CHECK INTERMITTENT INCIDENT

Perform GI-43, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to PCS-35, "Removal and Installation".

NO >> Repair or replace error-detected parts.

Е

D

F

Н

K

Ν

P1651 STARTER MOTOR RELAY

Description INFOID:000000008274829

ECM controls ON/OFF state of the starter relay, according to the engine and vehicle condition. Models with no Intelligent Key System transmit a control signal directly to IPDM E/R. On the other hand, models with the Intelligent Key System transmit a control signal to IPDM E/R by way of BCM via CAN communication.

Under normal conditions, ECM controls and maintains the starter relay in OFF state during engine running or "D" position.

When detecting a decrease in engine speed due to rapid deceleration or heavy load condition, ECM controls and reactivates the starter relay.

IPDM E/R detects a control state of starter relay and starter control relay and transmits a feedback signal to ECM via CAN communication.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1650 is displayed with DTC U1001, perform the trouble diagnosis for DTC U1001. Refer to <u>EC-164</u>, <u>"DTC Logic"</u>.
- If DTC P1650 is displayed with DTC P0607, perform the trouble diagnosis for DTC P0607. Refer to <u>EC-389</u>, "DTC Logic".
- If DTC P1650 is displayed with B209F or B20A0 of IPDM E/R, perform the trouble diagnosis for B209F or B20A0. Refer to <u>SEC-91</u>, "<u>DTC Logic"</u> or <u>SEC-93</u>, "<u>DTC Logic"</u>.
- If DTC P1650 is displayed with B26F9 or B26FA of BCM, perform the trouble diagnosis for B209F or B20A0. Refer to SEC-85, "DTC Logic" or SEC-87, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition		
P1651	STR MTR RELAY (Starter control relay circuit)	A correlated error is detected for 2 seconds or more between a control signal transmitted from ECM and a feedback signal transmitted from IPDM E/R via CAN communication line.	Harness or connectors (Between ECM harness connector and IPDM E/R harness connector is shorted to power.) (Between ECM harness connector and BCM harness connector is shorted to power.) IPDM E/R BCM	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Start the engine and let it idle at least 30 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-455, "Diagnosis Procedure".

NO >> INSPECTION END

P1651 STARTER MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Diagnosis Procedure

INFOID:0000000008274831

1.INSPECTION START

Check the starter motor operation.

<u>Is the starter motor operated?</u>

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK DTC WITH IPDM E/R

Check DTC with IPDM E/R. Refer to PCS-14, "CONSULT Function (IPDM E/R)".

Is the inspection result normal?

YES-1 >> With Intelligent Key system: GO TO 3.

YES-2 >> Without Intelligent Key system: GO TO 6.

NO >> Perform trouble diagnosis for DTC indicated.

3.CHECK DTC WITH BCM

Check DTC with BCM. Refer to BCS-30, "BCM: CONSULT Function (BCM - BCM)".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Perform trouble diagnosis for DTC indicated.

4. CHECK CRANKING REQUEST SIGNAL CIRCUIT-I

Turn ignition switch OFF.

- Disconnect ECM harness connector. 2.
- Disconnect IPDM E/R harness connector.
- Check the continuity between ECM harness connector and IPDM E/R harness connector.

	+			
ECM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F26	92	E13	23	Existed

5. Also check harness for short to ground to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5.CHECK CRANKING REQUEST SIGNAL CIRCUIT-II

- Disconnect BCM harness connector.
- Check the continuity between ECM harness connector and BCM harness connector.

	+			
ECM		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F26	92	M69	64	Existed

3. Also check harness for short to ground to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts.

6.CHECK CRANKING REQUEST SIGNAL CIRCUIT-III

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- Check the continuity between ECM harness connector and IPDM E/R harness connector.

EC

Α

D

Е

F

Н

N

EC-455

P1651 STARTER MOTOR RELAY

[MR16DDT]

+				
ECM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F26	92	E13	23	Existed

5. Also check harness for short to ground to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts.

7. CHECK INTERMITTENT INCIDENT

Perform GI-43, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to PCS-35, "Removal and Installation".

NO >> Repair or replace error-detected parts.

P1652 STARTER MOTOR SYSTEM COMM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P1652 STARTER MOTOR SYSTEM COMM

Description INFOID:0000000008274832

ECM controls ON/OFF state of the starter relay, according to the engine and vehicle condition. Models with no Intelligent Key System transmit a control signal directly to IPDM E/R. On the other hand, models with the Intelligent Key System transmit a control signal to IPDM E/R by way of BCM via CAN communication.

Under normal conditions, ECM controls and maintains the starter relay in OFF state during engine running or "D" position.

When detecting a decrease in engine speed due to rapid deceleration or heavy load condition, ECM controls and reactivates the starter relay.

IPDM E/R detects a control state of starter relay and starter control relay and transmits a feedback signal to ECM via CAN communication.

DTC Logic INFOID:0000000008274833

DTC DETECTION LOGIC

NOTE:

- If DTC P1650 is displayed with DTC U1001, perform the trouble diagnosis for DTC U1001. Refer to EC-164.
- If DTC P1650 is displayed with DTC P0607, perform the trouble diagnosis for DTC P0607. Refer to <u>EC-389.</u> "DTC Logic".
- If DTC P1650 is displayed with B209F or B20A0 of IPDM E/R, perform the trouble diagnosis for B209F or B20A0. Refer to SEC-91, "DTC Logic" or SEC-93, "DTC Logic".
- If DTC P1650 is displayed with B26F9 or B26FA of BCM, perform the trouble diagnosis for B209F or B20A0. Refer to SEC-85, "DTC Logic" or SEC-87, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1652	STR MTR SYS COMM (Starter motor communication line)	ECM detects malfunction in starter motor drive circuit of the IPDM E/R.	IPDM E/R

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Start the engine and wait at least 5 minutes.
- 3. Repeat step 1 and 2 for 20 times.
- Check DTC.

Is DTC detected?

YES >> Proceed to EC-457, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1.INSPECTION START

- Erase DTC.
- 2. Perform DTC confirmation procedure. Refer to <a>EC-457, "DTC Logic".
- Check DTC.

EC

Α

Е

Н

L

M

N

INFOID:0000000008274834

P1652 STARTER MOTOR SYSTEM COMM

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Is the P1652 displayed again?

YES >> GO TO 2.

NO >> INSPECTION END

2.CHECK INTERMITTENT INCIDENT

Perform GI-43, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to PCS-35, "Removal and Installation".

NG >> Repair or replace error-detected parts.

P1805 BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P1805 BRAKE SWITCH

DTC Logic

DTC DETECTION LOGIC

_	\sim
_	ι.

D

Е

F

Α

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P1805	BRAKE SW/CIRCUIT (Brake switch)	A stop lamp switch signal is not sent to ECM for extremely long time while the vehicle is driving.	Harness or connectors (Stop lamp switch circuit is open or shorted.) Stop lamp switch

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Fully depress the brake pedal for at least 5 seconds.
- Erase the DTC.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-459, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274836

1. CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect stop lamp switch harness connector.
- 3. Check the voltage between stop lamp switch harness connector and ground.

Stop lam	p switch	_	Voltage	
Connector	Terminal			
E102 ^{*1} E118 ^{*2}	1	Ground	Battery voltage	

^{*1:} CVT models

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform the trouble diagnosis for power supply circuit.

2.CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT

Disconnect ECM harness connector.

2. Check the continuity between stop lamp switch harness connector and ECM harness connector.

+	+		_	
Stop lamp	Stop lamp switch		ECM	
Connector	Terminal	Connector	Terminal	
E102 ^{*1} E118 ^{*2}	2	E18	115	Existed

^{*1:} CVT models

Р

Ν

^{*2:} M/T models

^{*2:} M/T models

^{3.} Also check harness for short to ground and to power.

P1805 BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3. CHECK STOP LAMP SWITCH

Check the stop lamp switch. Refer to EC-460, "Component Inspection (Stop Lamp Switch)".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace stop lamp switch. Refer to <u>BR-18</u>, "Exploded View".

Component Inspection (Stop Lamp Switch)

INFOID:0000000008274837

[MR16DDT]

1. CHECK STOP LAMP SWITCH-I

- 1. Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check the continuity between stop lamp switch terminals as per the following conditions.

Stop lan	np switch	Condition		
+	_			Continuity
Tern	ninals			
			Fully released	Not existed
1	2	Brake pedal	Slightly de- pressed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK STOP LAMP SWITCH-II

- 1. Adjust stop lamp switch installation. Refer to BR-7, "Inspection and Adjustment".
- 2. Check the continuity between stop lamp switch terminals as per the following conditions.

Stop lan	np switch	Condition		
+	_			Continuity
Term	ninals			
			Fully released	Not existed
1	2	Brake pedal	Slightly de- pressed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to <u>BR-18</u>, "Exploded View".

P2096, P2097 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P2096, P2097 A/F SENSOR 1

DTC Logic

DTC DETECTION LOGIC

EC

D

Е

Α

DTC No.	CONSULT screen terms (Trouble diagnosis content)	DTC detecting condition	Possible Cause	
P2096	POST CAT FUEL TRIM SYS B1 (Post catalyst fuel trim system too lean bank 1)	The output voltage computed by ECM from the A/F sensor 1 signal is shifts to the lean side for a specified period.	A/F sensor 1 A/F sensor 1 heater Heated oxygen sensor 2	
P2097	POST CAT FUEL TRIM SYS B1 (Post catalyst fuel trim system too rich bank 1)	The A/F signal computed by ECM from the A/F sensor 1 signal is shifts to the rich side for a specified period.	Fuel pressureFuel injectorIntake air leaksExhaust gas leaks	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Clear the mixture ratio self-learning value. Refer to EC-136, "Work Procedure".
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for 1 minute under no load.
- Let engine idle for 1 minute.
- 5. Keep engine speed between 2,500 and 3,000 rpm for 20 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-461, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274869

M

N

Р

1. CHECK HARNESS CONNECTOR

- 1. Turn ignition switch OFF.
- 2. Disconnect A/F sensor 1 harness connector.
- Check harness connector for water.

Water should not exit.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness connector.

2.RETIGHTEN A/F SENSOR 1 AND HEATED OXYGEN SENSOR 2

Loosen and retighten the A/F sensor 1 and heated oxygen sensor 2. Refer to <u>EM-41, "Exploded View"</u>, <u>EX-5.</u> "Exploded View".

>> GO TO 3.

Revision: 2014 February

< DTC/CIRCUIT DIAGNOSIS >

$\overline{3}$.check for exhaust gas leak

- 1. Start engine and run it at idle.
- 2. Listen for an exhaust gas leak before the three way catalyst 2.

Is exhaust gas leak detected?

YES >> Repair or replace malfunctioning parts.

NO >> GO TO 4.

4.CHECK FOR INTAKE AIR LEAK

- 1. Reconnect A/F sensor 1 harness connector.
- 2. Start engine and run it at idle.
- 3. Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace malfunctioning parts.

NO >> GO TO 5.

5.CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- 1. Clear the mixture ratio self-learning value. Refer to EC-136, "Work Procedure".
- Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171 or P0172. Refer to <u>EC-266, "DTC Logic"</u> or <u>EC-270, "DTC Logic"</u>.

NO >> GO TO 6.

6. CHECK A/F SENSOR 1 POWER SUPPLY

- 1. Turn ignition switch OFF.
- Disconnect A/F sensor 1 harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between A/F sensor 1 harness connector and ground.

+ A/F sensor 1 -			
		-	Voltage
Connector	Terminal		
F70	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

7.CHECK A/F SENSOR 1 POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and IPDM E/R harness connector.

+		_		
A/F ser	nsor 1	IPDM E/R		Continuity
Connector	Terminal	Connector Terminal		
F70	4	E14	36	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

8. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.

Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

+		-		
A/F ser	nsor 1	ECM		Continuity
Connector	Terminal	Connector Terminal		
F70	1	F25	21	Existed
170	2	123	25	LAISIEU

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

	+		
A/F sensor 1		-	Continuity
Connector	Terminal		
F70	1	Ground	Not existed
1 70	2	Glound	NOT EXISTED

	+		
ECM		-	Continuity
Connector	Terminal		
F25	21	Ground	Not existed
125	25	Giodila	Not existed

5. Also check harness for short to power.

Is the inspection result normal?

>> GO TO 9. YES

NO >> Repair or replace error-detected parts.

9.check a/f sensor 1 heater

Check the A/F sensor 1 heater. Refer to EC-173, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 12.

10.CHECK HEATED OXYGEN SENSOR 2

Check heated oxygen sensor 2. Refer to EC-250, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

11. CHECK INTERMITTENT INCIDENT

Perform GI-43, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace error-detected parts.

12.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-41, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved Anti-seize Lubricant (commercial service tool).

EC

Α

D

Е

K

Ν

P2096, P2097 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Do you have CONSULT?

YES >> GO TO 13.

NO >> GO TO 14.

13.confirm a/f adjustment data

(P)With CONSULT

- 1. Turn ignition switch ON.
- Select "A/F ADJ-B1" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Make sure that "0.000" is displayed on CONSULT screen.

Is "0.000" displayed?

YES >> INSPECTION END

NO >> GO TO 14.

14.clear the mixture ratio self-learning value

Clear the mixture ratio self-learning value. Refer to EC-136, "Work Procedure".

Do you have CONSULT?

YES >> GO TO 15.

NO >> INSPECTION END

15. CONFIRM A/F ADJUSTMENT DATA

(P)With CONSULT

- 1. Turn ignition switch ON.
- 2. Select "A/F ADJ-B1" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Make sure that "0.000" is displayed on CONSULT screen.

>> INSPECTION END

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

DTC Logic

DTC DETECTION LOGIC

EC

D

Е

F

Н

K

Ν

Α

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P2100	ETC MOT PWR-B1 (Throttle control motor relay circuit open)	ECM detects a voltage of power source for throttle control motor is excessively low.	Harness or connectors (Throttle control motor relay circuit is open) Throttle control motor relay
P2103	ETC MOT PWR (Throttle control motor relay circuit short)	ECM detect the throttle control motor relay is stuck ON.	Harness or connectors (Throttle control motor relay circuit is shorted) Throttle control motor relay

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V.

Witch DTC is detected?

P2100 >> GO TO 2.

P2103 >> GO TO 3.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P2100

- 1. Turn ignition switch ON and wait at least 2 seconds.
- Start engine and let it idle for 5 seconds.
- Check DTC.

Is DTC detected?

YES >> Proceed to EC-465, "Diagnosis Procedure".

NO >> INSPECTION END

3.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P2103

- 1. Turn ignition switch ON and wait at least 1 second.
- Check DTC.

Is DTC detected?

YES >> Proceed to EC-465, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274839

1. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Check the voltage between ECM harness connector and ground.

	+	-	_	
EC		CM		Voltage
Connector	Terminal	Connector	Terminal	
F26	77	E18	127	Battery voltage

Revision: 2014 February EC-465 2013 JUKE

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2.CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT

- Disconnect ECM harness connector.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between ECM harness connector and IPDM E/R harness connector.

	+		_	
E	CM	IPDM E/R		Continuity
Connector	Terminal	Connector Terminal		
F26	77	E15	60	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL

Check the voltage between ECM harness connector and ground as per the following conditions.

ECM				V/ //
Connector	+	-	Condition	Voltage (Approx.)
	Terminal			(1 - /
E18 122 127		Ignition switch: OFF	0 V	
E10	122 121		Ignition switch: ON	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> GO TO 4.

4. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between ECM harness connector and IPDM E/R harness connector.

	+			
ECM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E18	122	E15	55	Existed

5. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

P2101 ELECTRIC THROTTLE CONTROL FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

P2101 ELECTRIC THROTTLE CONTROL FUNCTION

DTC Logic INFOID:0000000008274840

DTC DETECTION LOGIC

NOTE:

- If DTC P2101 is displayed with DTC P2100, first perform the trouble diagnosis for DTC P2100. Refer to EC-465, "DTC Logic".
- If DTC P2101 is displayed with DTC P2119, first perform the trouble diagnosis for DTC P2119. Refer to EC-472, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		Possible cause
P2101	ETC FNCTN/CIRC-B1 (Electric throttle control performance)	Electric throttle control function does not operate properly.	Harness or connectors (Throttle control motor circuit is open or shorted) Electric throttle control actuator

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V when engine is running.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON and wait at least 2 seconds.
- Start engine and let it idle for 5 seconds.
- Check DTC.

Is DTC detected?

YES >> Proceed to EC-467, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274841

1. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL

Check the voltage between ECM harness connector terminals as per the following conditions.

ECM				Valtara	
Connector	+	_	Condition	Voltage (Approx.)	
Connector	Terminal			, , , , , , , , , , , , , , , , , , ,	
E18	122	127	Ignition switch: OFF	0 V	
L10	122 121	Ignition switch: ON	Battery voltage		

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 2.

2.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT

Turn ignition switch OFF.

EC

Α

D

Е

F

Н

K

N

P2101 ELECTRIC THROTTLE CONTROL FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Disconnect ECM harness connector.
- Disconnect IPDM E/R harness connector.
- 4. Check the continuity between ECM harness connector and IPDM E/R harness connector.

	+			
ECM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E18	122	E15	55	Existed

5. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT

1. Check the continuity between ECM harness connector and IPDM E/R harness connector.

	+			
ECM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F26	77	E15	60	Existed

2. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

4. CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect electric throttle control actuator harness connector.
- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

	+	_		
	e control actu- tor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F29	5	F26	51	Not existed
			52	Existed
	6		51	Existed
			52	Not existed

5. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- Remove the intake air duct. Refer to <u>EM-25</u>, "<u>Exploded View</u>".
- 2. Check if foreign matter is caught between the throttle valve and the housing.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Remove the foreign matter and clean the electric throttle control actuator inside, then perform throttle valve closed position learning. Refer to <u>EC-132</u>, "Work <u>Procedure"</u>.

P2101 ELECTRIC THROTTLE CONTROL FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

6. CHECK THROTTLE CONTROL MOTOR

Check the throttle control motor. Refer to EC-469, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43. "Intermittent Incident".

NO >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

Component Inspection

INFOID:0000000008274842

1. CHECK THROTTLE CONTROL MOTOR

- Turn ignition switch OFF.
- 2. Disconnect electric throttle control actuator harness connector.
- 3. Check the resistance between electric throttle control actuator terminals as per the following.

Electric throttle control actuator		
+ -		Resistance (Approx.)
Tern	ninals	()
5 6		1 - 15 Ω [at 25°C (77°F)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

Α

EC

D

Е

F

Н

.1

Κ

L

 \mathbb{N}

Ν

0

Р

P2118 THROTTLE CONTROL MOTOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P2118	ETC MOT-B1 (Throttle control motor circuit short)	ECM detects short in both circuits between ECM and throttle control motor.	Harness or connectors (Throttle control motor circuit is shorted.) Electric throttle control actuator (Throttle control motor)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 2 seconds.
- 2. Start engine and let it idle for 5 seconds.
- Check DTC.

Is DTC detected?

YES >> Proceed to EC-470, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274844

1. CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect electric throttle control actuator harness connector.
- 3. Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

+		_			
Electric throttle control actuator		ECM		Continuity	
Connector	Terminal	Connector Terminal			
	5	5 F26	51	Not existed	
F29			52	Existed	
F29			51	Existed	
	O		52	Not existed	

5. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

P2118 THROTTLE CONTROL MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

2.check throttle control motor

Check the throttle control motor. Refer to EC-471, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

Component Inspection

INFOID:0000000008274845

1. CHECK THROTTLE CONTROL MOTOR

- 1. Turn ignition switch OFF.
- 2. Disconnect electric throttle control actuator harness connector.
- 3. Check the resistance between electric throttle control actuator terminals as per the following.

Electric throttle	control actuator	
+ -		Resistance (Approx.)
Terminals		(+ + +)
5 6		1 - 15 Ω [at 25°C (77°F)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

Α

EC

D

Е

F

Н

.1

Κ

L

 \mathbb{N}

Ν

0

Р

P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		DTC detecting condition	Possible cause
P2119 ETC ACTR-B1 (Electric throttle control actuator)	Α	Electric throttle control actuator does not function properly due to the return spring malfunction.		
	В	Throttle valve opening angle in fail-safe mode is not in specified range.	Electric throttle control actuator	
		С	ECM detect the throttle valve is stuck open.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a and b

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Set selector lever to D (CVT) or 1st (M/T) position and wait at least 3 seconds.
- 3. Set selector lever to P (CVT) or Neutral (M/T) position.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Turn ignition switch ON and wait at least 1 second.
- 6. Set selector lever to D (CVT) or 1st (M/T) position and wait at least 3 seconds.
- 7. Set selector lever to P (CVT) or Neutral (M/T) position.
- Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- 9. Check DTC.

Is DTC detected?

YES >> Proceed to EC-472, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform dtc confirmation procedure for malfunction c

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Set selector lever to D (CVT) or 1st (M/T) position and wait at least 3 seconds.
- 3. Set selector lever to P (CVT) or Neutral (M/T) position.
- 4. Start engine and let it idle for 3 seconds.
- 5. Check DTC.

Is DTC detected?

YES >> Proceed to EC-472, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274847

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- 1. Remove the intake air duct. Refer to EM-25, "Exploded View".
- 2. Check if foreign matter is caught between the throttle valve and the housing.

Is the inspection result normal?

YES >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

NO >> Remove the foreign matter and clean the electric throttle control actuator inside, then perform throttle valve closed position learning. Refer to <u>EC-132</u>, "Work <u>Procedure"</u>.

EC

Α

С

D

Е

F

G

Н

.

J

K

L

M

Ν

0

Р

P2122, P2123 APP SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE

If DTC P2122 or P2123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to <u>EC-392</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P2122	APP SEN 1/CIRC (Accelerator pedal position sensor 1 circuit low input)	An excessively low voltage from the APP sensor 1 is sent to ECM.	Harness or connectors (APP sensor 1 circuit is open or shorted.)
P2123	APP SEN 1/CIRC (Accelerator pedal position sensor 1 circuit high input)	An excessively high voltage from the APP sensor 1 is sent to ECM.	Accelerator pedal position sensor (APP sensor 1)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Proceed to EC-474, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274849

1. CHECK APP SENSOR 1 POWER SUPPLY

- 1. Turn ignition switch OFF.
- Disconnect accelerator pedal position (APP) sensor harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between APP sensor harness connector and ground.

+			Valtaria
APP sensor		_	Voltage (Approx.)
Connector	Connector Terminal		, , ,
E101	4	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

P2122, P2123 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between APP sensor harness connector and ECM harness connector.

+			_	
APP	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
E101	4	E18	101	Existed

Also check harness for short to ground.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.CHECK APP SENSOR 1 GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between APP sensor harness connector and ECM harness connector.

+			_	
APP	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
E101	2	E18	105	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

f 4.CHECK APP SENSOR INPUT SIGNAL CIRCUIT

Check the continuity between APP sensor harness connector and ECM harness connector.

+			-	
APP :	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	
E101	3	E18	102	Existed

Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5.CHECK APP SENSOR

Check the APP sensor. Refer to EC-475, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

>> Replace accelerator pedal assembly. Refer to EM-27, "Exploded View". NO

Component Inspection

1. CHECK ACCELERATOR PEDAL POSITION SENSOR

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Turn ignition switch ON.

Revision: 2014 February

Check the voltage between ECM harness connector terminals as per the following condition.

D

Α

EC

Е

Ν

INFOID:0000000008274850

2013 JUKE

ECM					
Connector	+	_	Cond	lition	Voltage
Connector	Terr	minal			
	102 105	105	- Accelerator pedal	Fully released	0.6 - 0.9 V
E18				Fully depressed	3.9 - 4.7 V
E18		Accelerator pedar	Fully released	0.3 - 0.6 V	
	119 120			Fully depressed	1.95 - 2.4 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace accelerator pedal assembly. Refer to EM-27, "Exploded View".

P2127, P2128 APP SENSOR

DTC Logic

DTC DETECTION LOGIC

EC

Н

K

M

Р

Α

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause	(
P2127	APP SEN 2/CIRC (Accelerator pedal position sensor 2 circuit low input)	An excessively low voltage from the APP sensor 2 is sent to ECM.	Harness or connectors (APP sensor 2 circuit is open or shorted.) [Crankshaft position sensor (POS) circuit	[
P2128	APP SEN 2/CIRC (Accelerator pedal position sensor 2 circuit high input)	An excessively high voltage from the APP sensor 2 is sent to ECM.	is shorted.] (Refrigerant pressure sensor circuit is shorted.) (EVAP control system pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) • Accelerator pedal position sensor (APP sensor 2) • Crankshaft position sensor (POS) • Refrigerant pressure sensor • EVAP control system pressure sensor • Battery current sensor	F

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- Check DTC.

Is DTC detected?

YES >> Proceed to EC-477, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274852

1. CHECK APP SENSOR 2 POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect accelerator pedal position (APP) sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between APP sensor harness connector and ground.

sensor	_	Voltage (Approx.)	
Terminal		(, , , , , , , , , , , , , , , , , , ,	
5	Ground	5 V	
	Terminal	Terminal	

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2. CHECK SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check harness connector for short to power and short to ground, between the following terminals.

E	СМ	Sensor		
Connector	Terminal	Name	Connector	Terminal
		FRP sensor	F5	1
F25	39	EOP sensor	F43	3
		Turbocharger boost sensor	F75	1
	68	Battery current sensor	F52	1
F26	00	G sensor	B32	3
F20	72	CMP sensor	F109	1
	12	EVT control position sensor	F110	1
E18	118	APP sensor 2	E101	5

Is inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check app sensor 2 ground circuit

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector.

+				
APP	sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		
E101	1	E18	120	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK APP SENSOR 2 INPUT SIGNAL CIRCUIT

1. Check the continuity between APP sensor harness connector and ECM harness connector.

	+ -			
APP	APP sensor		СМ	Continuity
Connector	Terminal	Connector Terminal		
E101	6	E18	119	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts

5. CHECK APP SENSOR

Check the APP sensor. Refer to EC-479, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

2013 JUKE

P2127, P2128 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

>> Replace accelerator pedal assembly. Refer to EM-27, "Exploded View". NO

Component Inspection

INFOID:0000000008274853

1.CHECK ACCELERATOR PEDAL POSITION SENSOR

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- Turn ignition switch ON.
- 4. Check the voltage between ECM harness connector terminals as per the following condition.

	ECM		Condition		
Connector	+	_			Condition Voltage
Connector	Terr	minal			
	102	105		Fully released	0.6 - 0.9 V
E18	102	103	Accelerator pedal	Fully depressed	3.9 - 4.7 V
LIO	119	120	Accelerator pedar	Fully released	0.3 - 0.6 V
	119	120		Fully depressed	1.95 - 2.4 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace accelerator pedal assembly. Refer to EM-27, "Exploded View". EC

Α

C

 D

F

Е

Н

K

L

M

Ν

0

Р

P2135 TP SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P2135 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-392, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)		Possible cause
P2135	TP SENSOR-B1 (Throttle position sensor circuit range/perfor- mance)	Rationally incorrect voltage is sent to ECM compared with the signals from TP sensor 1 and TP sensor 2.	Harness or connector (TP sensor 1 or 2 circuit is open or shorted.) Electric throttle control actuator (TP sensor 1 or 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Proceed to EC-480, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008274855

1. CHECK THROTTLE POSITION SENSOR POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect electric throttle control actuator harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between electric throttle control actuator harness connector and ground.

	+		
Electric throttle	control actuator	_	Voltage (Approx.)
Connector	Connector Terminal		())
F29	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2.CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ground.

+		_		
	lectric throttle control actu- ator		СМ	Continuity
Connector	Terminal	Connector Terminal		
F29	1	F26	62	Existed

Also check harness for short to ground.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

${f 3.}$ CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector. 2.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

	+		_	
	e control actu- tor	ECM		Continuity
Connector	Terminal	Connector Terminal		
F29	4	F26	74	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

>> Repair or replace error-detected parts. NO

f 4.CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT

Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

	+	_		
Electric throttle control actuator		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F29	2	F26	75	Existed
1 29	3	1 20	76	LAISIEU

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 5.}$ CHECK THROTTLE POSITION SENSOR

Check the throttle position sensor. Refer to EC-481, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

Component Inspection

${f 1}$.CHECK THROTTLE POSITION SENSOR

1. Turn ignition switch OFF.

Revision: 2014 February

Reconnect all harness connectors disconnected.

EC-481 2013 JUKE

Α

EC

D

Е

F

K

N

Р

INFOID:0000000008274856

P2135 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

- Perform "Throttle Valve Closed Position Learning". Refer to <u>EC-132, "Work Procedure".</u>
- 4. Turn ignition switch ON.
- 5. Set selector lever to D (CVT) or 1st (M/T) position.
- 6. Check the voltage between ECM harness connector terminals as per the following conditions.

	ECM		Condition Voltage		
Connector	+	_			Voltage
Connector	Terr	minal			
	75			Fully released	More than 0.36V
F26	73	74	Accelerator	Fully depressed	Less than 4.75V
F20	76	74	pedal	Fully released	Less than 4.75V
	70			Fully depressed	More than 0.36V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace electric throttle control actuator. Refer to EM-27, "Exploded View".

P2138 APP SENSOR

DTC Logic INFOID:0000000008274857

DTC DETECTION LOGIC

NOTE:

If DTC P2138 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-392, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P2138	APP SENSOR (Accelerator pedal position sensor circuit range/ performance)	Rationally incorrect voltage is sent to ECM compared with the signals from APP sensor 1 and APP sensor 2.	Harness or connector (APP sensor 1 or 2 circuit is open or shorted.) (Turbocharger boost sensor circuit is open or shorted.) (Fuel rail pressure sensor circuit is open or shorted.) (Battery current sensor circuit is open or shorted.) (G sensor circuit is open or shorted.) (Camshaft position sensor circuit is open or shorted.) (Exhaust valve timing control position sensor circuit is open or shorted.) (Engine oil pressure sensor circuit is open or shorted.) *Accelerator pedal position sensor (APP sensor 1 or 2) *Turbocharger boost sensor *Fuel rail pressure sensor *Battery current sensor *G sensor *Camshaft position sensor *Exhaust valve timing control position sensor *Exhaust valve timing control position sensor *Engine oil pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2.perform dtc confirmation procedure

- Start engine and let it idle for 1 second.
- Check DTC.

Is DTC detected?

YES >> Proceed to EC-484, "Diagnosis Procedure".

NO >> INSPECTION END EC

Α

M

Ν

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Diagnosis Procedure

INFOID:0000000008274858

1. CHECK APP SENSOR 1 POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect accelerator pedal position (APP) sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between APP sensor harness connector and ground.

	+		Villa
APP sensor Connector Terminal		_	Voltage (Approx.)
			, , ,
E101	4	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector.

+			-			
APP	sensor	ECM		ECM		Continuity
Connector	Terminal	Connector	Terminal			
E101	4	E18	101	Existed		

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3. CHECK APP SENSOR 2 POWER SUPPLY

Check the voltage between APP sensor harness connector and ground.

	+		Maltana	
APP sensor		_	Voltage (Approx.)	
Connector	Terminal		, , ,	
E101	5	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check harness connector for short to power and short to ground, between the following terminals.

EC	CM	Sensor		
Connector	Terminal	Name	Connector	Terminal
		FRP sensor	F5	1
F25	39	EOP sensor	F43	3
		Turbocharger boost sensor	F75	1

P2138 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

E	CM	Sensor		
Connector	Terminal	Name	Connector	Terminal
	68	Battery current sensor	F52	1
F26	00	G sensor	B32	3
F20	72	CMP sensor	F109	1
12		EVT control position sensor	F110	1
E18	118	APP sensor 2	E101	5

EC

Α

Is inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

5. CHECK APP SENSOR GROUND CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between APP sensor harness connector and ECM harness connector.

+		-			
APP :	sensor	ECM		Continuity	
Connector	Terminal	Connector Terminal			
E101	1	E18	120	Existed	
	2	L10	105	LAISIEU	

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

O.CHECK APP SENSOR INPUT SIGNAL CIRCUIT

Check the continuity between APP sensor harness connector and ECM harness connector.

	+		_	
APP sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		
E101	3	E18	102	Existed
LIUI	6	L10	119	LAISIEU

Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts

1.CHECK APP SENSOR

Check the APP sensor. Refer to EC-479, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

>> Replace accelerator pedal assembly. Refer to EM-27, "Exploded View". NO

Component Inspection

1. CHECK ACCELERATOR PEDAL POSITION SENSOR

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Turn ignition switch ON.
- Check the voltage between ECM harness connector terminals as per the following condition.

D

Ν

INFOID:0000000008274859

	ECM				
Connector	+	_	Condition		Voltage
Connector	Terr	minal			
	102	105		Fully released	0.6 - 0.9 V
E18	102	103	Accelerator pedal	Fully depressed	3.9 - 4.7 V
119		10 100	Accelerator pedar	Fully released	0.3 - 0.6 V
	119 120			Fully depressed	1.95 - 2.4 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace accelerator pedal assembly. Refer to EM-27, "Exploded View".

P2162 VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

INFOID:0000000008274861

P2162 VEHICLE SPEED SENSOR

Description INFOID:0000000008274860

ECM receives a rear wheel sensor signal from ABS actuator and electric unit (control unit) via CAN communication to switch combustion for the direct injection gasoline system. For the direct injection gasoline system, refer to EC-40, "DIRECT INJECTION GASOLINE SYSTEM: System Description".

DTC Logic

DTC DETECTION LOGIC

NOTE:

 If DTC P2162 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX. Refer to EC-102, "DTC Index".

 If DTC P2162 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-389, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P2162	VEHICLE SPEED SEN A/B (Vehicle speed sensor A/B correlation)	ECM detects a rear LH wheel sensor signal or a rear RH wheel sensor signal transmitted from the ABS actuator and electric unit (control unit) via CAN communication at least for 15 seconds in a row when the vehicle is in stopped condition.	Harness or connectors (The CAN communication line is open or shorted) Rear LH wheel sensor Rear RH wheel sensor ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TEST CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 9 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

Start engine and let it idle for at least 30 seconds.

NOTE:

Never depress the accelerator pedal during idle running.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-487, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

(P)With CONSULT

Check DTC with ABS actuator and electric unit (control unit). Refer to BRC-38, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform diagnosis procedure corresponding to DTC indicated.

2.CHECK REAR WHEEL SENSOR-I

EC

Α

D

Е

F

Н

N

INFOID:0000000008274862

2013 JUKE

P2162 VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

(P)With CONSULT

- 1. Stop the vehicle.
- 2. Set the parking brake.
- 3. Use CONSULT to select "RR RH SENSOR" and "RR RH SENSOR" in "DATA MONITOR" mode of "ABS"
- 4. Check indications of "RR RH SENSOR" and "RR RH SENSOR".

NOTE:

Never cause the vehicle to vibrate.

Is 0 km/h (0 MPH) indicated for both "RR RH SENSOR" and "RR RH SENSOR"?

YES >> GO TO 3.

NO >> Perform trouble diagnosis of the rear wheel sensor if 0 km/h (0 MPH) is not displayed. Refer to BRC-75, "Diagnosis Procedure".

3. CHECK REAR WHEEL SENSOR-II

(P)With CONSULT

1. Drive the vehicle at 20 km/h (13 MPH).

CAUTION:

Always drive vehicle at a safe speed.

2. Check indications of "RR RH SENSOR" and "RR RH SENSOR".

Is the difference between the indicated values of "RR RH SENSOR" and "RR RH SENSOR" within \pm 1 km/h (1 MPH)?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Perform trouble diagnosis of the rear wheel sensor. Refer to BRC-75, "Diagnosis Procedure"

P2263 TC SYSTEM

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P2263 is displayed with DTC P0237 or P0238, first perform the trouble diagnosis for DTC P0237 or P0238. Refer to EC-302, "DTC Logic".

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P2263	TC SYSTEM-B1 (Turbocharger boost system performance)	In spite of the boosting area, the boost does not increase.	Intake air leaks Exhaust gas leaks Turbocharger boost sensor Turbocharger boost control solenoid valve Recirculation valve Exhaust manifold and turbocharger assembly Boost control actuator

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-489, "Component Function Check".

NOTE:

Use component function check to check the overall function of the turbocharger system circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-490, "Diagnosis Procedure".

Component Function Check

1.PERFORM COMPONENT FUNCTION CHECK-I

Check the following:

- Disconnection of air duct or hose between electric throttle control actuator and compressor wheel.
- Exhaust gas leaks of exhaust manifold
- Open stuck of recirculation valve
- Stuck of turbocharger

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to EC-490, "Diagnosis Procedure".

2.perform component function check-ii

- Turn ignition switch OFF.
- Disconnect turbocharger boost control solenoid valve harness connector.
- 3. Disconnect of hose between turbocharger boost control solenoid valve and compressor outlet pipe.
- 4. Install pressure pump to turbocharger boost control solenoid valve.

EC

Α

D

Е

G

F

Н

INFOID:0000000008274864

K

M


Р

INFOID:0000000008274865

< DTC/CIRCUIT DIAGNOSIS >

- Check that the rod of the boost control actuator (1) activates when supplying pressure and battery voltage to the turbocharger boost control solenoid valve (2) as per the following conditions.
 - A. Pressure pump

Turbocharger boost control solenoid valve	Operation	
Condition	- Орегацоп	
Supply pressure [73 kPa (548 mmHg, 21.56 inHg)] with battery voltage to terminals 1 and 2	Boost control actuator rod operates	
Supply pressure [73 kPa (548 mmHg, 21.56 inHg)] with battery voltage to terminals 1 and 2	Boost control actuator rod not operates	

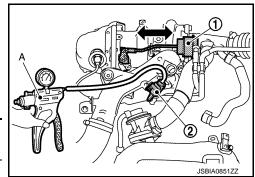

CAUTION:

Do not supply pressure over 83 kPa (623 mmHg, 24.51 inHg).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-490, "Diagnosis Procedure".

Diagnosis Procedure

1. CHECK FOR EXHAUST GAS LEAK

- 1. Start the engine and run it at idle.
- 2. Listen for an exhaust gas leak of exhaust manifold.

Is exhaust gas leak detected?

YES >> Repair or replace malfunction parts.

NO >> GO TO 2.

2. CHECK FOR INTAKE AIR LEAK

Listen for an intake air leak between electric throttle control actuator and compressor wheel.

Is intake air leak detected?

YES >> Repair or replace malfunction parts.

NO >> GO TO 3.

3.CHECK RECIRCULATION VALVE

- 1. Turn ignition switch OFF.
- Check recirculation valve. Refer to EM-38, "Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace recirculation valve. Refer to EM-30, "Exploded View".

4.CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE POWER SUPPLY

- 1. Disconnect turbocharger boost control solenoid valve harness connector.
- Turn ignition switch ON.
- 3. Check the voltage between turbocharger boost control solenoid valve harness connector and ground.

	+		
_	Turbocharger boost control solenoid valve		Voltage
Connector Terminal			
F54	F54 2		Battery voltage

Is the inspection result normal?

>> GO TO 5.

YES >> GO TO 6.

NO

5.check turbocharger boost control solenoid valve power supply circuit

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- Check the continuity between turbocharger boost control solenoid valve harness connector and IPDM E/R harness connector.

EC

Α

+		-		
•	ooost control sod valve	IPDI	M E/R	Continuity
Connector	Terminal	Connector Terminal		
F54	2	E14	36	Existed

Also check harness for short to ground.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply. YES

NO >> Repair or replace error-detected parts.

6.CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between turbocharger boost control solenoid valve harness connector and ECM harness connector.

+		_		
_	ooost control sod valve	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F54	1	F26	73	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts.

7.CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE

Check the turbocharger boost control solenoid valve. Refer to EC-492, "Component Inspection (Turbocharger Boost Control Solenoid Valve)".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace turbocharger boost control solenoid valve. Refer to EM-37, "Exploded View".

8.CHECK BOOST CONTROL ACTUATOR

Check the boost control actuator. Refer to EM-38, "Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace exhaust manifold and turbocharger assembly. Refer to EM-37, "Exploded View".

9. CHECK TURBOCHARGER BOOST SENSOR

Check the turbocharger boost sensor. Refer to EC-492, "Component Inspection (Turbocharger Boost Sensor)".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace turbocharger boost sensor. Refer to EM-30, "Exploded View".

10.CHECK EXHAUST MANIFOLD AND TURBOCHARGER ASSEMBLY

Check the exhaust manifold and turbocharger assembly. Refer to EM-42, "Inspection".

D

Е

F

Н

K

M

N

Is the inspection result normal?

YES >> CHECK INTERMITTENT INCIDENT. Refer to GI-43, "Intermittent Incident".

NO >> Replace exhaust manifold and turbocharger assembly. Refer to EM-37, "Exploded View".


Component Inspection (Turbocharger Boost Control Solenoid Valve)

INFOID:0000000008274866

1. CHECK TURBOCHARGER BOOST CONTROL SOLENOID VALVE

- 1. Turn ignition switch OFF
- 2. Disconnect turbocharger boost control solenoid valve harness connector.
- 3. Disconnect hoses connected to turbocharger boost control solenoid valve.
- Check air passage continuity of turbocharger boost control solenoid valve as per the following conditions.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12 V direct current supply between terminals 1 and 2	Existed	Not existed
No supply	Not existed	Existed

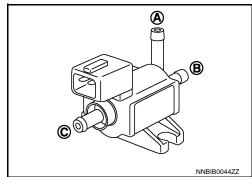

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace turbocharger boost control solenoid valve. Refer to <u>EM-37</u>, "<u>Exploded View</u>".

Component Inspection (Turbocharger Boost Sensor)


INFOID:0000000008274867

1. CHECK TURBOCHARGER BOOST SENSOR

- Turn ignition switch OFF.
- 2. Remove turbocharger boost sensor with its harness connector.
- Install pressure pump (A) to turbocharger boost sensor (1).
 CAUTION:

When insert a pressure pump hose to the sensor, be careful to the damage of the sensor housing.

- 4. Turn ignition switch ON.
- 5. Check the voltage between ECM harness connector terminals as per the following conditions.

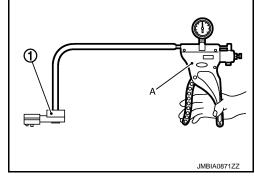

NOTE:

- Always calibrate the pressure pump gauge when using it.
- Inspection should be done at room temperature [10 30°C (50 86°F)].

ECM			O a l'ilia i Dana a (Dalai) a ta at	M. II.	
Connector	+	_	Condition [Pressure (Relative to atmospheric pressure)]	Voltage (Approx.)	
Connector	Terminal		7	,	
F25 41 44		44	0 kPa (0 mbar, 0 mmHg, 0 inHg)	2.03 V	
1 23	41	44	40 kPa (400 mbar, 300 mmHg, 11.81 inHg)	2.67 V	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace turbocharger boost sensor. Refer to EM-37, "Exploded View".

FUEL INJECTOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

FUEL INJECTOR

Component Function Check

INFOID:0000000008274870

Α

EC

Е

Н

K

Ν

INFOID:0000000000827487

1.INSPECTION START

Turn ignition switch to START.

Is any cylinder ignited?

YES >> GO TO 2.

NO >> Proceed to <u>EC-493</u>, "<u>Diagnosis Procedure</u>".

2.CHECK FUEL INJECTOR FUNCTION

(P)With CONSULT

- 1. Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- Check that each circuit produces a momentary engine speed drop.


- 1. Let engine idle.
- 2. Listen to each fuel injector operating sound.

Clicking noise should be heard.

Is the inspection result normal?

YES >> INSPECTION END

>> Proceed to EC-493, "Diagnosis Procedure". NO

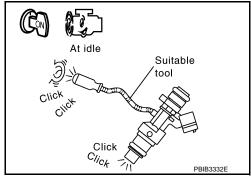

Diagnosis Procedure

1. CHECK FUEL INJECTOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect fuel injector harness connector.
- Turn ignition switch ON.
- Check the voltage between fuel injector harness connector and ground.

+				
Fuel injector			_	Voltage
Cylinder	Connector	Terminal		
1	F65	1		
2	F66	1	Ground	Pottory voltage
3	F67	1	Giouna	Battery voltage
4	F68	1		

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 2.

2.CHECK FUEL INJECTOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector. 2.
- Check the continuity between fuel injector harness connector and ECM harness connector.

Р

Revision: 2014 February

+			-		
Fuel injector			ECM		Continuity
Cylinder	Connector	Terminal	Connector	Terminal	
1	F65	1		3	
2	F66	1	F25	4	Existed
3	F67	1	F25	4	Existed
4	F68	1		3	

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK FUEL INJECTOR DRIVER POWER SUPPLY

- 1. Reconnect ECM harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between ECM harness connector and ground.

	+		
E	СМ	_	Voltage
Connector	Terminal		
F26	49	Ground	Battery voltage
120	53	Giodila	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident"

NO >> GO TO 4.

4. CHECK FUEL INJECTOR DRIVER POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect fuel injector relay harness connector.
- 4. Check the continuity between ECM harness connector and fuel injector relay harness connector.

+		_		
E	СМ	Fuel injector relay		Continuity
Connector	Terminal	Connector Terminal		
F26	49	E57	5	Existed
1 20	53	LJI	7	LXISIEU

5. Also check harness for short to ground.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts

5. CHECK FUEL INJECTOR RELAY POWER SUPPLY (CONTACT SIDE)

Check the voltage between fuel injector relay harness connector and ground.

	+		
Fuel injector relay		_	Voltage
Connector	Terminal		
E57	3	Ground	Battery voltage
	6	Ground	Battery voltage

FUEL INJECTOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Is the inspection result normal?

YES >> GO TO 6.

NO >> Perform the trouble diagnosis for power supply circuit.

6.check fuel injector relay power supply (excitation coil side)

- Reconnect all harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Check the voltage between fuel injector relay harness connector and ground.

+			
Fuel injector relay		_	Voltage
Connector	Terminal		
E57	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7

7.CHECK FUEL INJECTOR RELAY POWER SUPPLY CIRCUIT (EXCITATION COIL SIDE)

- 1. Turn ignition switch OFF.
- 2. Disconnect fuel injector relay harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between IPDM E/R harness connector and fuel injector harness connector.

+		1		
IPDI	IPDM E/R		Fuel injector relay	
Connector	Terminal	Connector	Terminal	
E14	35	E57	1	Existed

5. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

8.CHECK FUEL INJECTOR RELAY GROUND CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect fuel injector relay harness connector.
- 3. Check the continuity between fuel injector relay harness connector and ground.

+			
Fuel injector relay		_	Continuity
Connector	Terminal		
E57	2	Ground	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace error-detected parts.

9. CHECK FUEL INJECTOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between fuel injector harness connector and ECM harness connector.

EC-495

Н

Α

EC

D

Е

F

K

1 \

L

M

Ν

. .

0

F

+				-	
	Fuel injector ECM		CM	Continuity	
Cylinder	Connector	Terminal	Connector	Terminal	
1	F65	2		5	
2	F66	2	F25	6	Existed
3	F67	2	123	7	LXISIEU
4	F68	2		8	

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace error-detected parts.

10. CHECK FUEL INJECTOR RELAY

Check the fuel injector relay. Refer to EC-496, "Component Inspection (Fuel Injector Relay)".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident"

NO >> Replace fuel injector relay. Refer to PG-8, "Standardized Relay".

11. CHECK FUEL INJECTOR

Check the fuel injector. Refer to EC-496, "Component Inspection (Fuel Injector)".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident"

NO >> Replace malfunctioning fuel injector. Refer to EM-51, "Exploded View".

Component Inspection (Fuel Injector)

INFOID:0000000008274872

1. CHECK FUEL INJECTOR

- 1. Turn ignition switch OFF.
- 2. Disconnect fuel injector harness connector.
- Check resistance between fuel injector terminals as per the following.

Fuel injector		
+	_	Resistance
Terminals		
1	2	1.44 - 1.73 Ω [at 10 - 60°C (50 - 140°F)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace malfunctioning fuel injector. EM-51, "Exploded View"

Component Inspection (Fuel Injector Relay)

INFOID:0000000008274873

1. CHECK FUEL INJECTOR RELAY

- 1. Turn ignition switch OFF.
- 2. Remove fuel injector relay.


FUEL INJECTOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

3. Check the continuity between fuel heater relay terminals as per the following conditions.

Fuel inje	ctor relay		
+	_	Conditions	Continuity
Terr	minal		
3	5	12 V direct current supply between terminals 1 and 2	Existed
		No current supply	Not existed
6	7	12 V direct current supply between terminals 1 and 2	Existed
		No current supply	Not existed

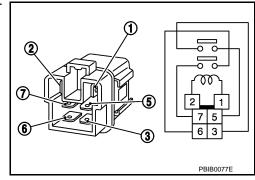

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace fuel injector relay.

Α

EC

С

D

Е

F

G

Н

ı

J

K

L

M

Ν

0

Ρ

LOW PRESSURE FUEL PUMP

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

LOW PRESSURE FUEL PUMP

Component Function Check

INFOID:0000000008274874

1. CHECK FUEL PUMP FUNCTION

- 1. Turn ignition switch ON.
- 2. Pinch fuel feed hose with two fingers.

NOTE:

Fuel pressure pulsation should be felt on the fuel feed hose for 1 second after ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-498, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274875

1. CHECK FUEL PUMP RELAY POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between ECM harness connector terminals.

Connector	+	_	Voltage
Connector	Terr	minal	
E18	117	127	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK FUEL PUMP RELAY POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between ECM harness connector and IPDM E/R harness connector.

+		_		
ECM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E18	117	E13	31	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.CHECK LOW FUEL PUMP POWER SUPPLY

- Turn ignition switch OFF.
- 2. Reconnect ECM harness connector.
- 3. Disconnect fuel level sensor unit and fuel pump harness connector.
- Turn ignition switch ON.
- 5. Check the voltage between fuel level sensor unit and fuel pump harness connector and ground.

+				
Fuel level sensor unit and fuel pump		_	Voltage	
Connector	Terminal			
B46	1	Ground	Battery voltage should for exist 1 second after ignition switch is turn ON.	

Is the inspection result normal?

YES >> GO TO 5. NO >> GO TO 4.

4.CHECK LOW FUEL PUMP POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R harness connector.
- Check the continuity between fuel level sensor unit and fuel pump harness connector and IPDM E/R har-

+			_	
	nsor unit and pump	IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
B46	1	E15	54	Existed

Also check harness for short to ground.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

5.CHECK LOW FUEL PUMP GROUND CIRCUIT

- Turn ignition switch OFF.
- Check the continuity between fuel level sensor unit and fuel pump harness connector and ground.

	+		
Fuel level sensor unit and fuel pump		_	Continuity
Connector Terminal			
B46	3	Ground	Existed

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK LOW FUEL PUMP

Check the low fuel pump. Refer to EC-499, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace fuel level sensor unit and fuel pump. Refer to FL-5, "2WD : Exploded View".

Component Inspection

1. CHECK FUEL PRESSURE REGULATOR

- Turn ignition switch OFF.
- Check low fuel pressure. Refer to EC-137, "Work Procedure".

Is inspection result normal?

EC-499 Revision: 2014 February 2013 JUKE

EC

Α

Е

Ν

Р

INFOID:0000000008274876

LOW PRESSURE FUEL PUMP

[MR16DDT]

< DTC/CIRCUIT DIAGNOSIS >

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK LOW PRESSURE FUEL PUMP

- 1. Turn ignition switch OFF.
- 2. Disconnect fuel level sensor unit.
- 3. Check resistance between fuel level sensor unit terminals as follows.

Fuel level sensor unit			
+	_	Condition	Resistance
Tern	ninals		
2	4	Temperature: 25°C (77°F)	0.2 - 5.0 Ω

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace fuel level sensor unit. Refer to FL-5, "2WD : Exploded View".

HIGH PRESSURE FUEL PUMP

Component Function Check

INFOID:0000000008274877

Α

EC

D

Е

F

.

1. CHECK HIGH PRESSURE FUEL PUMP FUNCTION

With CONSULT

- Start engine.
- 2. Check "FUEL PRES SEN V" in "DATA MONITOR" mode of "ENGINE" using CONSULT.

DATA MONTOR	mode of	EINGIINE	using CONSULT.	,

Monitor Item	Condition	Values/Status
	Engine speed: Idle	1,140 – 1,460 mV
FUEL PRES SEN V	Engine speed: Revving engine from idle to 4,000 rpm quickly	1,300 – 2,900 mV

Without CONSULT

- 1. Start engine.
- 2. Check the voltage between ECM harness connector terminals as per the following conditions.

	ECM			<u> </u>
Connector	+	_	Condition	Voltage
Connector	Terr	minal		
F26	55	50	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	BATTERY VOLTAGE (11 - 14 V) ★ 20mSec/div 5V/div JPBIA4722ZZ
5		30	[Engine is running]Warm-up conditionEngine speed: 2,000 rpm	BATTERY VOLTAGE (11 - 14 V) ★ 20mSec/div 5V/div JPBIA4723ZZ

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-501, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274878

Ν

0

Ρ

1. CHECK HIGH PRESSURE FUEL PUMP POWER SUPPLY

- 1. Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector and ground.

+				
ECM		_	Voltage	
Connector	Terminal			
F26	54	Ground	Battery voltage	

Is inspection result normal?

HIGH PRESSURE FUEL PUMP

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

YES >> GO TO 8. NO >> GO TO 2.

2.CHECK HIGH PRESSURE FUEL PUMP POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect fuel injector relay harness connector.
- Check the continuity between ECM harness connector and high pressure fuel pump relay harness connector.

+		-		
E	СМ	High pressure fuel pump re- lay		Continuity
Connector	Terminal	Connector Terminal		
F26	54	E58	3	Existed

5. Also check harness for short to ground.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts

3.CHECK HIGH PRESSURE FUEL PUMP RELAY POWER SUPPLY (CONTACT SIDE)

Check the voltage between high pressure fuel pump relay harness connector and ground.

+			
High pressure fuel pump relay		_	Voltage
Connector Terminal			
E58	5	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> Perform the trouble diagnosis for power supply circuit.

4. CHECK HIGH PRESSURE FUEL PUMP RELAY POWER SUPPLY (EXCITATION COIL SIDE)

- 1. Reconnect all harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Check the voltage between high pressure fuel pump relay harness connector and ground.

_				
	+			
	High pressure fuel pump relay		_	Voltage
	Connector Terminal			
	E58	2	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5

${f 5.}$ CHECK HIGH PRESSURE FUEL PUMP RELAY POWER SUPPLY CIRCUIT (EXCITATION COIL SIDE)

- 1. Turn ignition switch OFF.
- 2. Disconnect high pressure fuel pump relay harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. check the continuity between ipdm e/r harness connector and high pressure fuel pump harness connector.

< DTC/CIRCUIT DIAGNOSIS >

+		_		
IPDN	M E/R	High pressure fuel pump re- lay		Continuity
Connector	Terminal	Connector Terminal		
E14	35	E58	2	Existed

5. Also check harness for short to ground.

Is the inspection result normal?

>> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

6.CHECK HIGH PRESSURE FUEL PUMP RELAY GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect high pressure fuel pump relay harness connector. 2.
- Check the continuity between high pressure fuel pump relay harness connector and ground.

+			
High pressure fuel pump relay		_	Continuity
Connector Terminal			
E58	1	Ground	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts.

7.CHECK HIGH PRESSURE FUEL PUMP RELAY

Check the high pressure fuel pump relay. Refer to EC-505, "Component Inspection (High Pressure Fuel Pump Relay)".

Is inspection result normal?

YES >> GO TO 8.

NO >> Replace high pressure fuel pump relay. Refer to PG-8, "Standardized Relay".

8.CHECK HIGH PRESSURE FUEL PUMP CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector and high pressure fuel pump harness connector.
- Check the continuity between ECM harness connector and high pressure fuel pump harness connector.

+				
E	CM	High pressure fuel pump		Continuity
Connector	Terminal	Connector	Terminal	
F26	55	F53	1	Existed
1 20	56	1 33	2	LXISIEU

4. Also check harness for short to ground and to power.

Is inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace error-detected parts.

$\mathbf{9}.$ CHECK HIGH PRESSURE FUEL PUMP

Check the high pressure fuel pump. Refer to EC-504, "Component Inspection (High Pressure Fuel Pump)". Is inspection result normal?

YES >> GO TO 10.

>> Replace high pressure fuel pump. Refer to EM-46, "Exploded View". NO

EC-503

EC

Α

Е

F

K

N

Р

2013 JUKE

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

10.check high pressure fuel pump installation condition

- 1. Turn ignition switch OFF.
- 2. Check that the high pressure fuel pump is installed with no backlash and looseness.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace error-detected parts.

11. CHECK CAMSHAFT

- Remove camshaft. Refer to <u>EM-84, "Exploded View"</u>.
- 2. Check camshaft. Refer to EM-88, "Inspection".

Is inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace camshaft. Refer to EM-84, "Exploded View".

Component Inspection (High Pressure Fuel Pump)

INFOID:0000000008274879

1. CHECK HIGH PRESSURE FUEL PUMP-I

- 1. Turn ignition switch OFF.
- 2. Disconnect high pressure fuel pump harness connector.
- Check the resistance between high pressure fuel pump terminals as follows.

High pressure fuel pump					
+	-	Condition Resistanc			
Terminal					
1	2	Temperature °C (°F)	20 – 30 (68 - 86)	0.46 - 0.51 Ω	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace high pressure fuel pump. Refer to EM-46, "Exploded View".

2.CHECK HIGH PRESSURE FUEL PUMP-II

(I) With CONSULT

- 1. Reconnect high pressure fuel pump harness connector.
- Start the engine.
- Check "FUEL PRES SEN" in "DATA MONITOR" of "ENGINE" using CONSULT.

Data monitor item	Condition	Voltage (Approx.)
FUEL PRES SEN V	Engine speed: idle	1,140 – 1,460 mV
- OLL I KEO OLIV	Engine speed: Revving engine from idle to 4,000 rpm quickly	1,300 – 2,900 mV

- 1. Start the engine.
- 2. Check fuel rail pressure sensor signal voltage.

Fuel rail pr	+ essure sensor	_	Condition	Value (Approx.)
Connector	Terminal		Condition	
			Engine speed: idle	1.14 – 1.46 V
F5	2	Ground	Engine speed: Revving engine from idle to 4,000 rpm quickly	1.3 – 2.9 V

Is the inspection result normal?

YES >> INSPECTION END

HIGH PRESSURE FUEL PUMP

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

NO >> Replace high pressure fuel pump. Refer to EM-46, "Exploded View".


Component Inspection (High Pressure Fuel Pump Relay)

INFOID:0000000008274880

1. CHECK HIGH PRESSURE FUEL PUMP RELAY

- 1. Turn ignition switch OFF.
- 2. Remove high pressure fuel pump relay.
- 3. Check the continuity between high pressure fuel pump relay terminals as per the following conditions.

0 1	ssure fuel o relay	Q I''.	Continuity	
+	_	Conditions		
Terr	minal			
3	5	12 V direct current supply between terminals 1 and 2	Existed	
		No current supply	Not existed	

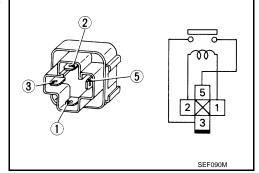

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace high pressure fuel pump relay.

EC

Α

D

Е

Н

1

K

L

M

Ν

0

Р

IGNITION SIGNAL

Component Function Check

INFOID:0000000008274881

1. INSPECTION START

Turn ignition switch OFF, and restart engine.

Does the engine start?

YES >> GO TO 2.

NO >> Proceed to <u>EC-506</u>, "<u>Diagnosis Procedure</u>".

2.ignition signal function

(E)With CONSULT

- 1. Perform "POWER BALANCE" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 2. Check that each circuit produces a momentary engine speed drop.

⋈Without CONSULT

- 1. Let engine idle.
- 2. Check the voltage signal between ECM harness connector and ground with an oscilloscope.

ECM				
+ -		Voltage signal		
Connector	Terminal	Connector	Terminal	
	82			
	86			100mSec/div
F00	90	E40	407	
F26		E18	127	=
	94			
				2V/div JPBIA4733ZZ

NOTE:

The pulse cycle changes depending on rpm at idle.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-506, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274882

1. CHECK CONDENSER POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect condenser harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between condenser harness connector and ground.

	+		
Cond	lenser	_	Voltage
Connector	Terminal		
F13	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK CONDENSER POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between IPDM E/R harness connector and condenser harness connector.

IGNITION SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

+				
IPDM E/R		Condenser		Continuity
Connector	Terminal	Connector	Terminal	
E15	61	F13	1	Existed

EC

D

Е

F

Ν

Р

Α

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.check condenser ground circuit

1. Turn ignition switch OFF.

2. Check the continuity between Condenser harness connector and ground.

	+		
Conc	lenser	_	Continuity
Connector	Terminal		
F13	2	Ground	Existed

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK CONDENSER

Check the condenser. refer to EC-509, "Component Inspection (Condenser)".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace condenser.

5. CHECK IGNITION COIL POWER SUPPLY

- 1. Reconnect all harness connectors disconnected.
- 2. Disconnect ignition coil harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between ignition coil harness connector and ground.

	+			
Ignition coil			_	Voltage
Cylinder	Connector	Terminal		
1	F33	3		
2	F34	3	Ground	Battery voltage
3	F35	3	Giodila	Battery voltage
4	F36	3		

Is the inspection result normal?

YES >> GO TO 6.

NO >> Perform the trouble diagnosis for power supply circuit.

6. CHECK IGNITION COIL GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Check the continuity between ignition coil harness connector and ground.

Revision: 2014 February

	+			
	Ignition coil			Continuity
Cylinder	Connector	Terminal		
1	F33	2		
2	F34	2	Ground	Existed
3	F35	2	Giouna	Existed
4	F36	2		

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts.

7.CHECK IGNITION COIL OUTPUT SIGNAL CIRCUIT

- 1. Disconnect ECM harness connector.
- 2. Check the continuity between ECM harness connector and ignition coil harness connector.

+			-	-	
	Ignition coil		ECM		Continuity
Cylinder	Connector	Terminal	Connector	Terminal	
1	F33	1		82	
2	F34	1	F26	86	Existed
3	F35	1	120	90	LAISIEU
4	F36	1		94	

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace error-detected parts.

8.CHECK IGNITION COIL WITH POWER TRANSISTOR

Check the ignition coil with power transistor. Refer to <u>EC-508</u>, "Component Inspection (Ignition Coil with <u>Power Transistor</u>)".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace malfunctioning ignition coil with power transistor. Refer to EM-57, "Exploded View".

Component Inspection (Ignition Coil with Power Transistor)

INFOID:0000000008274883

1.check ignition coil with power transistor-i

- 1. Turn ignition switch OFF.
- 2. Disconnect ignition coil harness connector.
- 3. Check resistance between ignition coil terminals as per the following.

Ignition coil with	power transistor		
+ -		Resistance [Ω at 25°C (77°F)]	
Terr	minal		
1	2	Except 0 or ∞	
'	3	Except 0	
2	3	Ελύθρι 0	

Is the inspection result normal?

YES >> GO TO 2.

Α

EC

D

Е

F

K

M

N

Р

NO >> Replace malfunctioning ignition coil with power transistor. Refer to EM-57, "Exploded View".

2.CHECK IGNITION COIL WITH POWER TRANSISTOR-II

CAUTION:

Do the following procedure in the place where ventilation is good without the combustible.

- Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- Remove fuel pump fuse in IPDM E/R to release fuel pressure.


NOTE:

Do not use CONSULT to release fuel pressure, or fuel pressure applies again during the following procedure.

- Start engine.
- After engine stalls, crank it two or three times to release all fuel pressure.
- 6. Turn ignition switch OFF.
- 7. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils. Refer to EM-57, "Exploded View".
- 8. Remove ignition coil and spark plug of the cylinder to be checked. Refer to .0EM-57, "Exploded View"
- 9. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 10. Connect spark plug and harness connector to ignition coil.
- 11. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 -0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 12. Crank engine for about three seconds, and check whether spark is generated between the spark plug and the grounded metal portion.



• During the operation, always stay 0.5 cm (19.7 in) away from the spark plug and the ignition coil. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.

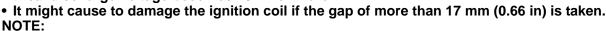

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace malfunctioning ignition coil with power transistor. Refer to EM-57, "Exploded View".

Component Inspection (Condenser)

INFOID:00000000008274884

1. CHECK CONDENSER

- Turn ignition switch OFF.
- 2. Disconnect condenser harness connector.
- Check resistance between condenser terminals as per the following.

Cond	lenser	
+ -		Resistance
Terr	minal	
1	2	Above 1 MΩ [at 25°C (77°F)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace Condenser.

13 - 17 mm (0.52-0.66 in) Grounded metal portion (Cylinder head, cylinder block, etc.)

EC-509

ELECTRICAL LOAD SIGNAL

Description

The electrical load signal (Headlamp switch signal, rear window defogger switch signal, etc.) is transferred via the CAN communication line.

Component Function Check

INFOID:0000000008274886

1. CHECK REAR WINDOW DEFOGGER SWITCH FUNCTION

(P)With CONSULT

- 1. Turn ignition switch ON.
- 2. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Select "LOAD SIGNAL" and check indication as per the following conditions.

Monitor item	Condition	Indication	
LOAD SIGNAL Rear window defogger switch		ON	ON
		OFF	OFF

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to EC-510, "Diagnosis Procedure".

2.check lighting switch function

(P)With CONSULT-III

Check "LOAD SIGNAL" indication as per the following conditions.

Monitor item	Con	Indication	
LOAD SIGNAL	Lighting switch	ON at 2nd position	ON
		OFF	OFF

Is the inspection result normal?

YES >> GO TO 3.

NO >> Proceed to EC-510, "Diagnosis Procedure".

${f 3.}$ CHECK HEATER FAN CONTROL SWITCH FUNCTION

(P)With CONSULT

Select "HEATER FAN SW" and check indication as per the following conditions.

Monitor item	Condition	Indication	
HEATER FAN	Heater fan control switch	ON	ON
SW		OFF	OFF

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to <u>EC-510</u>, "<u>Diagnosis Procedure</u>".

Diagnosis Procedure

INFOID:0000000008274887

1. INSPECTION START

Confirm the malfunctioning circuit (rear window defogger, headlamp or heater fan). Refer to <u>EC-510, "Component Function Check"</u>.

Which circuit is related to the incident?

Rear window defogger>>GO TO 2.

Headlamp>>GO TO 3.

Heater fan>>GO TO 4.

ELECTRICAL LOAD SIGNAL	
< DTC/CIRCUIT DIAGNOSIS > [MR16DDT	<u>]</u>
2.CHECK REAR WINDOW DEFOGGER SYSTEM	А
Check the rear window defogger system. Refer to <u>DEF-22</u> , "Work Flow".	_ /\
>> INSPECTION END	EC
3.CHECK HEADLAMP SYSTEM	
Check the headlamp system. Refer to EXL-39, "Work Flow".	
>> INSPECTION END	
4.CHECK HEATER FAN CONTROL SYSTEM	D
Check the heater fan control system. Refer to HAC-37, "Work Flow".	_
INCOPECTION END	Е
>> INSPECTION END	
	F
	G
	Н
	J
	K
	L
	M
	Ν
	0
	_
	Р

Revision: 2014 February EC-511 2013 JUKE

COOLING FAN

Component Function Check

INFOID:0000000008274888

1. CHECK COOLING FAN FUNCTION

(II) With CONSULT

- Turn ignition switch ON.
- 2. Perform "FAN DUTY CONTROL" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 3. Check that cooling fan speed varies according to the percentage.

- 1. Activate IPDM E/R auto active test and check cooling fan motors operation. Refer to PCS-12, "Diagnosis Description".
- 2. Check that cooling fan operates.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-512, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274889

1. CHECK COOLING FAN CONTROL MODULE POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect cooling fan control nodule harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between cooling fan control nodule harness connector and ground.

	+		
Cooling fan c	ontrol module	_	Voltage
Connector	Terminal		
E203	3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 2.

2.CHECK COOLING FAN CONTROL MODULE POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect cooling fan relay harness connector.
- Check the continuity between cooling fan control nodule harness connector and cooling fan relay harness connector.

	+ -		_	
Cooling fan o	ontrol module	Cooling fan relay		Continuity
Connector	Terminal	Connector	Terminal	
E203	3	E204	3	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3. CHECK COOLING FAN RELAY POWER SUPPLY CIRCUIT

- 1. Disconnect IPDM E/R harness connector.
- 2. Check the continuity between cooling fan relay harness connector and IPDM E/R harness connector.

Α

EC

D

Е

F

N

Р

-					
	+				
	Cooling	fan relay	IPDM E/R		Continuity
_	Connector	Terminal	Connector	Terminal	
_	E204	1	E17	67	Existed

3. Also check harness for short to ground.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK COOLING FAN RELAY

Check cooling fan relay. Refer to EC-514, "Component Inspection (Cooling Fan Relay)".

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Replace cooling fan relay. Refer to PG-8, "Standardized Relay".

5.CHECK COOLING FAN CONTROL MODULE GROUND CIRCUIT

Turn ignition switch OFF.

2. Check the continuity between cooling fan control nodule harness connector and ground.

	+		
Cooling fan control module		_	Continuity
Connector	Terminal		
E203	1	Ground	Existed

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK COOLING FAN CONTROL SIGNAL CIRCUIT

Disconnect IPDM E/R harness connector.

2. Check the continuity between cooling fan control nodule harness connector and IPDM E/R harness connector.

+		_		
Cooling fan o	control module	IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E203	2	E17	72	Existed

3. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace error-detected parts.

7.CHECK COOLING FAN CONTROL MODULE OUTPUT SIGNAL CIRCUIT

- 1. Reconnect all harness connectors disconnected.
- Disconnect cooling fan control module harness connector.
- Turn ignition switch ON.

Revision: 2014 February

4. Check the voltage between cooling fan control module terminals and ground.

EC-513 2013 JUKE

•	+		
Cooling fan o	ontrol module	_	Voltage
Connector	Terminal		
E301	4	Ground	Battery voltage
E302	6	Giodila	Dattery voltage

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace error-detected parts.

8.CHECK COOLING FAN MOTORS -1 AND -2

Check the cooling fan motor. Refer to EC-514, "Component Inspection (Cooling Fan Motor)".

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace cooling motor. Refer to CO-18, "Exploded View".

Component Inspection (Cooling Fan Motor)

INFOID:0000000008274890

1. CHECK COOLING FAN MOTOR

- 1. Turn ignition switch OFF.
- 2. Disconnect cooling fan control module harness connector.
- Supply cooling fan control module harness connector terminals with battery voltage as per the following, and check operation.

Cooling fan control module				
Motor	Connector	Terminal		Operation
WIOTOI	Connector	(+)	(-)	
1	E301	4	5	Cooling fan aparatas
2	E302	6	7	Cooling fan operates.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace malfunctioning cooling fan motor. Refer to CO-18, "Exploded View".


Component Inspection (Cooling Fan Relay)

INFOID:0000000008274891

1. CHECK COOLING FAN RELAY

- 1. Turn ignition switch OFF.
- Remove cooling fan relay.
- 3. Check the continuity between cooling fan relay terminals under the following conditions.

Cooling	fan relay		
+	_	Conditions	Continuity
Terr	ninal		
3	5	12 V direct current supply between terminals 1 and 2	Existed
		No current supply	Not existed

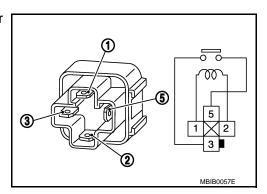

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace cooling fan relay.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

ON BOARD REFUELING VAPOR RECOVERY (ORVR)

Component Function Check

INFOID:0000000008274892

1. CHECK ORVR FUNCTION

NFUID:00000000008274892

Α

EC

Check whether the following symptoms are present.

- Fuel odor from EVAP canister is strong.
- Cannot refuel/Fuel odor from the fuel filler opening is strong while refueling.

Is any symptom present?

YES >> Proceed to <u>EC-515</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

D

INFOID:0000000008274893

Diagnosis Procedure

1. INSPECTION START

Check whether the following symptoms are present.

A: Fuel odor from EVAP canister is strong.

B: Cannot refuel/Fuel odor from the fuel filler opening is strong while refueling.

Which symptom is present?

A >> GO TO 2.

B >> GO TO 8.

G

Е

F

2. CHECK EVAP CANISTER

- 1. Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 4.

J

K

M

N


3. CHECK IF EVAP CANISTER IS SATURATED WITH WATER

Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 4. NO >> GO TO 7.

S >> GO TO 4.

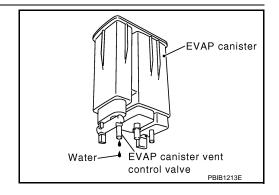

4. REPLACE EVAP CANISTER

Replace EVAP canister with a new one.

2013 JUKE

>> GO TO 5.

5. CHECK DRAIN FILTER

Refer to EC-519, "Component Inspection (Drain filter)".

Is the inspection result normal?

OK >> GO TO 6.

NO >> Replace drain filter.

O. DETECT MALFUNCTIONING PART

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

7. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-517, "Component Inspection (Refueling EVAP vapor cut valve)".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

8. CHECK EVAP CANISTER

- 1. Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?


YES >> GO TO 9. NO >> GO TO 10.

9. CHECK IF EVAP CANISTER IS SATURATED WITH WATER

Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 10. NO >> GO TO 13.

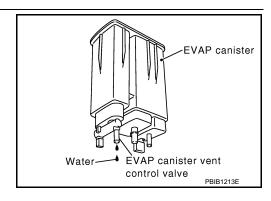

10. REPLACE EVAP CANISTER

Replace EVAP canister with a new one.

>> GO TO 11.

11. CHECK DRAIN FILTER

Refer to EC-519, "Component Inspection (Drain filter)".

Is the inspection result normal?

OK >> GO TO 12.

NO >> Replace drain filter.

12. DETECT MALFUNCTIONING PART

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

13. CHECK VENT HOSES AND VENT TUBES

Check hoses and tubes between EVAP canister and refueling control valve for clogging, kink, looseness and improper connection.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair or replace hoses and tubes.

14. CHECK RECIRCULATION LINE

< DTC/CIRCUIT DIAGNOSIS >

Check recirculation line for clogging, dents and cracks.

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace fuel filler tube.

15. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-517, "Component Inspection (Refueling EVAP vapor cut valve)".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

16. CHECK FUEL FILLER TUBE

Check fuel filler tube and hose connected to the fuel tank for clogging, dents and cracks.

Is the inspection result normal?

>> GO TO 17. YES

NO >> Replace fuel filler tube.

17.CHECK ONE-WAY FUEL VALVE-I

Check one-way valve for clogging.

Is the inspection result normal?

YES >> GO TO 18.

NO >> Repair or replace one-way fuel valve with fuel tank.

18. CHECK ONE-WAY FUEL VALVE-II


- Make sure that fuel is drained from the tank.
- 2. Remove fuel filler tube and hose.
- Check one-way fuel valve for operation as per the following. When a stick is inserted, the valve should open, when removing stick it should close.

Do not drop any material into the tank.

Is the inspection result normal?

YES >> INSPECTION END

> >> Replace fuel filler tube or replace one-way fuel valve with fuel tank.

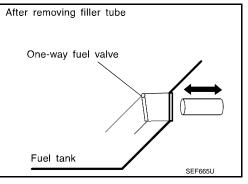

INFOID:0000000008274894

M

N

Р

Component Inspection (Refueling EVAP vapor cut valve)

1.INSPECTION START

NO

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK REFUELING EVAP VAPOR CUT VALVE

With CONSULT

- 1. Remove fuel tank. Refer to FL-17, "2WD: Removal and Installation".
- 2. Drain fuel from the tank as per the following:
- Remove fuel feed hose located on the fuel gauge retainer.
- Connect a spare fuel hose, one side to fuel gauge retainer where the hose was removed and the other side to a fuel container.
- Drain fuel using "FUEL PUMP RELAY" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 3. Check refueling EVAP vapor cut valve for being stuck to close as per the following. Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
- Check refueling EVAP vapor cut valve for being stuck to open as per the following.

[MR16DDT]

Α

EC

D


Е

< DTC/CIRCUIT DIAGNOSIS >

- Connect vacuum pump to hose end.
- Remove fuel gauge retainer with fuel gauge unit.

Always replace O-ring with new one.

- Put fuel tank upside down.
- Apply vacuum pressure to hose end [-13.3 kPa (-0.136 kg/cm³, -1.93 psi)] with fuel gauge retainer remaining open and check that the pressure is applicable.

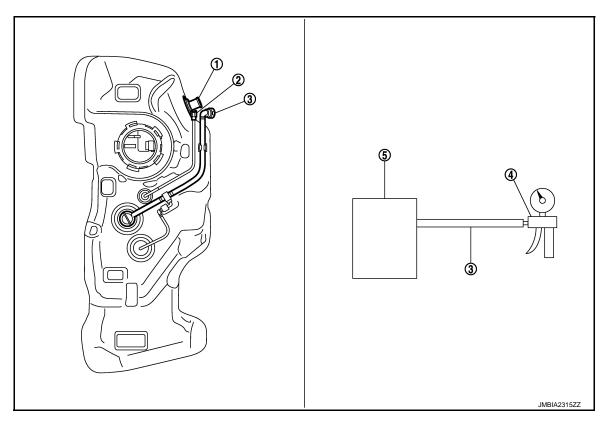

Filler tube

- 2. Recirculation line
- 3. EVAP/ORVR line

[MR16DDT]

- 4. Vacuum/pressure handy pump
- 5. Fuel tank

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank. Refer to FL-26, "2WD : Exploded View".

3.CHECK REFUELING EVAP VAPOR CUT VALVE


- 1. Remove fuel tank. Refer to FL-17, "2WD: Exploded View".
- 2. Drain fuel from the tank as per the following:
- Remove fuel gauge retainer.
- Drain fuel from the tank using a handy pump into a fuel container.
- Check refueling EVAP vapor cut valve for being stuck to close as per the following.
 Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
- 4. Check refueling EVAP vapor cut valve for being stuck to open as per the following.
- Connect vacuum pump to hose end.
- Remove fuel gauge retainer with fuel gauge unit.

Always replace O-ring with new one.

- Put fuel tank upside down.
- Apply vacuum pressure to hose end [-13.3 kPa (-0.136 kg/cm³, -1.93 psi)] with fuel gauge retainer remaining open and check that the pressure is applicable.

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

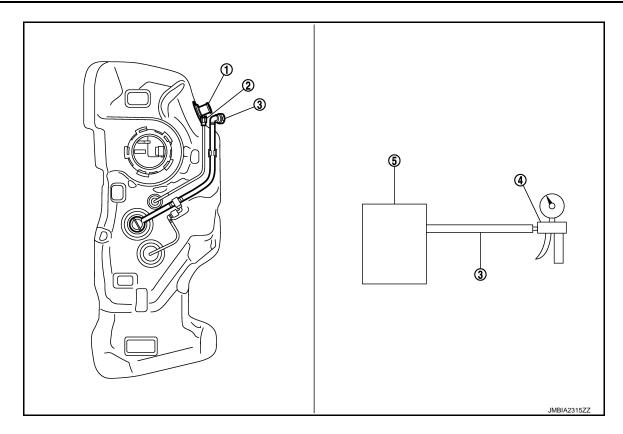

Filler tube

- Recirculation line
- 5. Fuel tank

EVAP/ORVR line

Is the inspection result normal?

Vacuum/pressure handy pump

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank .Refer to FL-26, "2WD : Exploded View".

Component Inspection (Drain filter)

INFOID:0000000008274895


1. CHECK DRAIN FILTER

- Check visually for insect nests in the drain filter air inlet.
- 2. Check visually for cracks or flaws in the appearance.
- 3. Check visually for cracks or flaws in the hose.
- 4. Blow air into port A and check that it flows freely out of port B.
- 5. Block port B.
- 6. Blow air into port A and check that there is no leakage.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace drain filter.

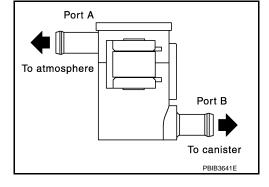

Α

EC

C

D

Е

F

G

Н

- 1

M

Ν

REFRIGERANT PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

REFRIGERANT PRESSURE SENSOR

Component Function Check

INFOID:0000000008274896

1. CHECK REFRIGERANT PRESSURE SENSOR OVERALL FUNCTION

- 1. Start engine and warm it up to normal operating temperature.
- Turn A/C switch and blower fan switch ON.
- Check the voltage between ECM harness connector and ground.

Connector	+	_	Voltage
Connector	Teri	minal	
F25	19	12	1.0 - 4.0V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-520, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274897

1. CHECK REFRIGERANT PRESSURE SENSOR POWER SUPPLY

- 1. Turn ignition OFF.
- 2. Disconnect refrigerant pressure sensor harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between refrigerant pressure sensor harness connector and ground.

+			V 16
Refrigerant pressure sensor		_	Voltage (Approx.)
Connector	Terminal		(11 /
E49	3	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.check refrigerant pressure sensor power supply circuit

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between refrigerant pressure sensor harness connector and ECM harness connector.

+		_		
Refrigerant pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
E49	3	F25	23	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3. CHECK REFRIGERANT PRESSURE SENSOR GROUND

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between refrigerant pressure sensor harness connector and ECM harness connector.

REFRIGERANT PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

-	<u> </u>		_		А
Refrigerant pro	essure sensor	EC	CM	Continuity	
Connector	Terminal	Connector	Terminal		EC
E49	1	F25	12	Existed	
Is the inspec	tion result n GO TO 4.	for short to pormal? place error-d		ts.	С
4.CHECK F	REFRIGERA	NT PRESSU	JRE SENSO	OR INPUT SIGNAL CIRCUIT	D
	ne continuity	between E	CM harness	connector and refrigerant pressure sensor harness connec-	
tor.					E

+				
Refrigerant pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
E49	2	F25	19	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5. CHECK INTERMITTENT INCIDENT.

Perform GI-43, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace refrigerant pressure sensor. Refer to <u>HAC-90, "Exploded View"</u>.

NO >> Repair or replace error-detected parts.

1

Н

F

K

M

L

Ν

0

Ρ

BRAKE PEDAL POSITION SWITCH

Component Function Check

INFOID:0000000008274898

1. CHECK BRAKE PEDAL POSITION SWITCH FUNCTION

(E)With CONSULT

- 1. Turn ignition switch ON.
- 2. Select "BRAKE SW1" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Check "BRAKE SW1" indication as per the following conditions.

Monitor item	Condition		Indication
BRAKE SW1	Brako podal	Slightly depressed	OFF
	Brake pedal	Fully released	ON

- Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector terminals as per the following.

ECM					Mallana	
Connector	+	_	Condition		Voltage (Approx.)	
Connector	Term	ninal			,	
E18	116	127	Brake pedal	Slightly depressed	0 V	
L10	110 127	brake pedar	Fully released	Battery voltage		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-522, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274899

2013 JUKE

1. CHECK BRAKE PEDAL POSITION SWITCH POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect brake pedal position switch harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between brake pedal position switch harness connector and ground.

+	-		
Brake pedal p	osition switch	_	Voltage
Connector	Terminal		
E112	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform the trouble diagnosis for power supply circuit.

2.CHECK BRAKE PEDAL POSITION SWITCH INPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between brake pedal position switch harness connector and ECM harness connector.

+		-		
Brake pedal position switch		ECM		Continuity
Connector	Terminal	Connector	Terminal	
E112	2	E18	116	Existed

BRAKE PEDAL POSITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK BRAKE PEDAL POSITION SWITCH

EC

D

Е

F

Н

K

Α

Check the brake pedal position switch. Refer to <u>EC-523</u>, "Component Inspection (Brake Pedal Position <u>Switch</u>)"

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-43, "Intermittent Incident".

NO >> Replace brake pedal position switch. Refer to <u>BR-18</u>, "Exploded View".

Component Inspection (Brake Pedal Position Switch)

INFOID:0000000008274900

1. CHECK BRAKE PEDAL POSITION SWITCH-I

1. Turn ignition switch OFF.

- 2. Disconnect brake pedal position harness connector.
- 3. Check the continuity between brake pedal position switch terminals as per the following conditions.

Brake pedal position switch				
+	_	Condition		Continuity
Tern	ninals			
			Fully released	Existed
1	2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK BRAKE PEDAL POSITION SWITCH-II

- Adjust brake pedal position switch installation. Refer to <u>BR-7, "Inspection and Adjustment"</u>.
- 2. Check the continuity between brake pedal position switch terminals as per the following conditions.

Brake pedal p	Brake pedal position switch			
+	_	Condition		Continuity
Tern	ninals			
			Fully released	Existed
1	2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace brake pedal position switch. Refer to <u>BR-18</u>, "Exploded View".

Ν

Р

CLUTCH PEDAL POSITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

CLUTCH PEDAL POSITION SWITCH

Component Function Check

INFOID:0000000008274901

1. CHECK FOR CLUTCH PEDAL POSITION SWITCH FUNCTION

- Turn ignition switch ON.
- Check the voltage between ECM harness connector and ground.

ECM						
Connector	+	_	Condition		Voltage (Approx.)	
Connector	Teri	minal			,	
E18	108	127	Clutch pedal	Slightly depressed	Battery voltage	
E10 100 127	121	Ciulcii peuai	Fully released	0V		

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Proceed to EC-524, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274902

2013 JUKE

1. CHECK CLUTCH PEDAL POSITION INPUT SIGNAL

- 1. Turn ignition switch OFF.
- 2. Disconnect clutch pedal position switch harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between clutch pedal position switch harness connector and ground.

+			
Clutch pedal	Clutch pedal position switch		Voltage
Connector	Terminal		
E113	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.check clutch pedal position switch input signal circuit

- Turn ignition switch OFF.
- Disconnect ECM harness connectors.
- 3. Check the continuity between clutch pedal position switch harness connector and ECM harness connector.

+		-		
Clutch pedal position switch		ECM		Continuity
Connector	Terminal	Connector	Terminal	
E113	1	E18	108	Existed

4. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3. Check clutch pedal position switch ground circuit

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connectors.
- Check the continuity between clutch pedal position switch harness connector and ground

CLUTCH PEDAL POSITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

	+						
Clutch pedal	position switch	_	Continuity				
Connector	Terminal						Ε
E113	2	Ground	Existed				
. Also check	harness for sh	ort to power.					
-	<u>n result normal</u>	<u>?</u>					
	TO 4.	orror datacted pe	arto				
4	•	error-detected pa POSITION SWIT					
			EC-525, "Comp	onent Inspec	<u>tion"</u> .		
•	n result normal	_	o GI-43, "Intermit	tont Indident			
			ch. Refer to <u>CL-11</u>				
Component	Inspection	•				INFOID:0000000008274903	
	•						
I .CHECK CLU	JTCH PEDAL F	POSITION SWITE	CH-I				
	n switch OFF.						
		osition switch ha	rness connector. position switch te	erminals as ne	er the following	, conditions	
o. Oneck the	continuity between	een claten pedar	position switch te	as pe	er the following	Cortaitions.	
Clutch pedal	position switch				•		
+	_	Con	dition	Continuity			
Terr	ninal						
1	2	Clutch nodel	Fully released	Existed	-		
1	2	Clutch pedal	Slightly depressed	Not existed	-		

inspection	

YES >> INSPECTION END

NO >> GO TO 2.

2.check clutch pedal position switch-ii

- Adjust clutch pedal position switch installation. Refer to CL-12, "Inspection and Adjustment".
- Check the continuity between clutch pedal position switch terminals as per the following conditions.

Clutch pedal	position switch			
+	_	Con	dition	Continuity
Terr	minal			
1	2	Clutch pedal	Fully released	Existed
	2	Ciulon pedal	Slightly depressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace clutch pedal position switch. Refer to CL-11, "Exploded View".

EC-525 Revision: 2014 February 2013 JUKE

M

K

Ν

Р

0

INFORMATION DISPLAY (ASCD)

< DTC/CIRCUIT DIAGNOSIS >

[MR16DDT]

INFORMATION DISPLAY (ASCD)

Component Function Check

INFOID:0000000008274904

1. CHECK INFORMATION DISPLAY

- Start engine.
- Press ASCD MAIN switch on ASCD steering switch.
- 3. Drive the vehicle at more than 40 km/h (25 MPH).

CAUTION:

Always drive vehicle at a safe speed.

- 4. Press SET/– switch.
- 5. Check that the reading of the speedometer shows the same value as the set speed indicated in the information display while driving the vehicle on a flat road.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-526, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008274905

1.CHECK DTC

Check that DTC UXXXX, P0500 or P1574 is not displayed.

Is the inspection result normal?

YES >> GO TO 2.

NO-1 >> Perform trouble diagnosis for DTC UXXXX.

NO-2 >> Perform trouble diagnosis for DTC P0500. Refer to <u>EC-367</u>, "EXCEPT FOR M/T MODELS : <u>DTC Logic</u>".

NO-3 >> Perform trouble diagnosis for DTC P1574. Refer to <u>EC-439</u>, "DTC Logic".

2.CHECK DTC WITH COMBINATION METER

Refer to MWI-20, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Perform trouble diagnosis for DTC indicated.

3.CHECK INTERMITTENT INCIDENT

Perform GI-43, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace combination meter. Refer to MWI-53, "Removal and Installation".

NO >> Repair or replace error-detected parts.

MALFUNCTION INDICATOR LAMP

MALFUNCTION INDICATOR LAMP		
< DTC/CIRCUIT DIAGNOSIS > MALFUNCTION INDICATOR LAMP	[MR16DDT]	
		Α
Component Function Check	INFOID:0000000008274906	
1.CHECK MIL FUNCTION		EC
 Turn ignition switch ON. Check that MIL lights up. 	'	
Is the inspection result normal?		С
YES >> INSPECTION END NO >> Proceed to <u>EC-527</u> , " <u>Diagnosis Procedure</u> ".		
Diagnosis Procedure	INFOID:000000008274907	D
1.CHECK DTC		Е
Check that DTC UXXXX is not displayed.		_
Is the inspection result normal? YES >> GO TO 2.		F
NO >> Perform trouble diagnosis for DTC UXXXX.		Г
2.CHECK DTC WITH METER		0
Refer to MWI-20, "CONSULT Function".		G
Is the inspection result normal? YES >> GO TO 3.		
NO >> Perform trouble diagnosis for DTC indicated.		Н
3.CHECK INTERMITTENT INCIDENT		
Refer to GI-43, "Intermittent Incident". Is the inspection result normal?		l
YES >> Replace combination meter. Refer to MWI-53, "Removal and Installation".		
NO >> Repair or replace error-detected parts.		J
		K
		L
		M
		Ν
		0
		Р

SYMPTOM DIAGNOSIS

ENGINE CONTROL SYSTEM

Symptom Table

SYSTEM — BASIC ENGINE CONTROL SYSTEM

		SYMPTOM													
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
	y symptom code	AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	НА	FC 400
Fuel	Low pressure fuel pump circuit	1	3	2	3	2	4	2	2	4		3		2	EC-498,
	Fuel pressure regulator system Fuel injector circuit	3	1	2	3	2	4	2	2	4		2			EC-493
	Evaporative emission system	3	3	4	4	4	4	4	4	4		4			EC-493 EC-538
	FRP sensor circuit	1	1	2	2	2	4	2	2	4		2			EC-336 EC-281
	High pressure fuel pump circuit	'	'	4		3									EC-501
Air	Positive crankcase ventilation sys-														
7 (11	tem	3	3	4	4	4	4	4	4	4		4	1		EC-541
	Incorrect idle speed adjustment						1	1	1	1		1			EC-133
	Electric throttle control actuator	1	1	2	3	3	2	2	2	2		2		2	EC-467, EC-472
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1			EC-537
	Ignition circuit	1	1	2	2	2		2	2			2			EC-506
Main po	wer supply and ground circuit	2	2	3	3	3		3	3		2	3			EC-158
Mass air	r flow sensor circuit	1			2										EC-207
Engine o	coolant temperature sensor circuit	•					3			3					EC-218
Air fuel r	ratio (A/F) sensor 1 circuit		1	2	3	2		2	2			2			EC-232, EC-236, EC-239, EC-242
Throttle	position sensor circuit						2			2					EC-222, EC-296, EC-409, EC-410
Accelera	ator pedal position sensor circuit			3	2	1									EC-474, EC-477, EC-483

ENGINE CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[MR16DDT]

						S'	/MPT	ОМ							۸
					z					IGH					Α
	CP. HA)		FC		ACCELERATION					URE H	Z		3E)		EC
	RT (EXCP.		AT SPOT	NO!	ACCELI				쁘	IPERAT	JMPTIC	IPTION	CHARG		
	RESTAF		ING/FL	TONAT	POOR /	쁘	TING	_	TO ID	ER TEN	FUEL CONSUMPTION	OIL CONSUMPTION	INDER	Reference page	С
	HARD/NO START/RESTART	ENGINE STALL	HESITATION/SURGING/FLAT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL	EXCESSIVE OIL CO	BATTERY DEAD (UNDER CHARGE)		D E
Warranty symptom code	Ź AA	面 AB	当 AC	S AD	∆ AE	± AF	AG	□ AH	න AJ	б AK	۵ AL	а АМ	M HA		
warranty symptom code	7.7	AD	٨٥	AD	AL	Л	٨٥	AH	٨٥	AIX	AL	Aivi	ПА	EC-247,	F
Heated oxygen sensor 2 circuit			6		6		6	6			5			EC-253, EC-260	_
Knock sensor circuit			2								3			EC-311	G
Engine oil temperature sensor circuit			4		2						3			EC-293	
Engine oil pressure sensor circuit			4		4	3	3	3			3			EC-378	Н
Crankshaft position sensor (POS) circuit	2	2												EC-313	=
Camshaft position sensor (PHASE) circuit	3	2												EC-316	-
Turbocharger boost sensor circuit			3		3									EC-302	
Vehicle speed signal circuit		2	3		3						3			EC-367, EC-371, EC-487	J
ECM	2	2	3	3	3	3	3	3	3	3	3			EC-385, EC-387, EC-389, EC-390, EC-391	K
Intake valve timing control solenoid valve circuit		3	2		1	3	2	2	3		3			EC-165, EC-180	L
Exhaust valve timing control solenoid valve circuit		3	2		1	3	2	2	3		3			EC-168, EC-183	-
Exhaust valve timing control position sensor circuit	5	5	5	5	5		5	5			5			EC-398	M
Turbocharger boost control solenoid valve circuit			3		3									EC-178	N
PNP signal circuit			3		3		3	3			3			EC-394	_
Refrigerant pressure sensor circuit		2				3			3		4			EC-520	0
Cooling fan control module circuit	5	5	5	5	5		5	5	5	4	5			EC-512	0
Battery current sensor circuit						4	5	5					3	EC-416, EC-419, EC-422, EC-425	Р
Starter relay circuit	3													EC-451	
Starter control relay circuit	3													EC-454	.
Electrical load signal circuit	L	L		L	L	L	3					L		EC-510	_

		SYMPTOM												
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty symptom code	AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	HA	
Air conditioner circuit	2	2	3	3	3	3	3	3	3		3		2	<u>HAC-37</u>
ABS actuator and electric unit (control unit)			4											BRC-52

^{1 - 6:} The numbers refer to the order of inspection. (continued on next page)

SYSTEM — ENGINE MECHANICAL & OTHER

							S	YMPT	ОМ						
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty	symptom code	A A	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА	
Fuel	Fuel tank	5													FL-21, FL-23
	Fuel piping			5	5	5		5	5			5			<u>EM-51</u>
	Vapor lock		5												_
	Valve deposit														_
	Poor fuel (Heavy weight gasoline, Low octane)	5		5	5	5		5	5			5			_

							S`	YMPT	OM							
											I					A
		(EXCP. HA)		SPOT		LERATION					ATURE HIG	NOI	z	(GE)		EC
				ING/FLAT SI	FONATION	POWER/POOR ACCELERATION	щ	JING		TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference	С
		IO START/RESTART	STALL	HESITATION/SURGING/FLAT	SPARK KNOCK/DETONATION	OF POWER/F	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	EATS/WATE	SIVE FUEL (SIVE OIL CO	(Y DEAD (U	page	D
		HARD/NO	ENGINE STALL	HESITA.	SPARK	LACK 0	HIGHID	ROUGH	IDLING	SLOW/N	OVERH	EXCES	EXCES	BATTER		Е
Warranty s	symptom code	A A	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА		F
Air	Air duct														EM-25	
	Air cleaner														<u>EM-25</u>	
	Air leakage from air duct (Mass air flow sensor — electric throttle control actuator)		5	5		5		5	5			5				G
	Electric throttle control actuator	5			5		5			5					<u>EM-27</u>	Н
	Air leakage from intake manifold/ Collector/Gasket															
Cranking	Battery	1	1	1		1		1	1					1	PG-96	ı
	Generator circuit	'	'												CHG-7	
	Starter circuit	3										1			STR-8, STR-9	J
	Signal plate	6													<u>EM-111</u>	
	PNP signal	4													TM-19, TM-224	K
Engine	Cylinder head	5	5	5	5	5		5	5			5			<u>EM-97</u>	
	Cylinder head gasket										4		3			L
	Cylinder block															
	Piston												4			M
	Piston ring	6	6	6	6	6		6	6			6			EM-111	
	Connecting rod															
	Bearing															Ν
	Crankshaft															
Valve mecha-	Timing chain														EM-73	0
nism	Camshaft														EM-85	
	Intake valve timing control	5	5	5	5	5		5	5			5			EM-73	
	Exhaust valve timing control													-	EM-73	Р
	Intake valve												3		<u>EM-85</u>	
	Exhaust valve															

							S'	YMPT	ОМ						
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty s	symptom code	A A	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА	
Exhaust	Exhaust manifold/Tube/Muffler/ Gasket														<u>EM-41</u> , <u>EX-8</u>
	Three way catalyst	5	5	5	5	5		5	5			5			EM-32, EM-34, EX-8
Lubrica- tion	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery/Oil cooler	5	5	5	5	5		5	5			5			EM-45, EM-109, LU-13, LU-
	Oil level (Low)/Filthy oil														<u>LU-8</u>
Cooling	Radiator/Hose/Radiator filler cap														<u>CO-14</u>
	Thermostat									5					<u>CO-22</u>
	Water pump														<u>CO-20</u>
	Water gallery	5	5	5	5	5		5	5		4	5			<u>CO-24</u>
	Cooling fan														<u>CO-18</u>
	Coolant level (Low)/Contaminated coolant									5					<u>CO-8</u>
NVIS (Niss NATS)	san Vehicle Immobilizer System -	1	1												<u>SEC-15</u> , <u>SEC-122</u>

^{1 - 6:} The numbers refer to the order of inspection.

ASCD TEMPORARY RELEASE CANNOT BE PERFORMED BY THE CLUTCH **PEDAL**

[MR16DDT] < SYMPTOM DIAGNOSIS >

ASCD TEMPORARY RELEASE CANNOT BE PERFORMED BY THE

CLUTCH PEDAL	А
Diagnosis Procedure	EC
1. CHECK DTC WITH ECM	
Check that DTC is not displayed. Is the inspection result normal? YES >> GO TO 2.	С
NO >> Perform trouble diagnosis relevant to DTC indicated. 2.CHECK CLUTCH PEDAL POSITION SWITCH	D
Refer to EC-524, "Component Function Check". Is the inspection result normal? YES >> GO TO 3.	Е
NO >> Repair or replace malfunctioning part. 3.CHECK INTERMITTENT INCIDENT	F
Refer to GI-43, "Intermittent Incident".	
>> INSPECTION END	G
	Н
	I
	J
	K
	L
	M
	Ν
	0
	Р

EC-533 Revision: 2014 February 2013 JUKE

Α

INFORMATION DISPLAY IS MALFUNCTIONING

< SYMPTOM DIAGNOSIS >

[MR16DDT]

INFORMATION DISPLAY IS MALFUNCTIONING

Diagnosis Procedure

INFOID:0000000008274910

1. CHECK DTC WITH ECM

Check that DTC is not displayed.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble diagnosis relevant to DTC indicated.

2. CHECK INFORMATION DISPLAY (ASCD)

Refer to EC-526, "Component Function Check".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning part.

3. CHECK INTERMITTENT INCIDENT

Refer to GI-43, "Intermittent Incident".

>> INSPECTION END

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS > [MR16DDT]

NORMAL OPERATING CONDITION

Description INFOID:000000008274911

FUEL CUT CONTROL (AT NO LOAD AND HIGH ENGINE SPEED)

If the engine speed is above 2,500 rpm under no load (for example, the selector lever position is neutral and engine speed is over 2,500 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.

Fuel cut will be operated until the engine speed reaches 2,000 rpm, then fuel cut will be cancelled. **NOTE:**

This function is different from deceleration control listed under direct injection gasoline system, <u>EC-40.</u> "<u>DIRECT INJECTION GASOLINE SYSTEM: System Description"</u>.

EC

Α

С

D

Е

F

Н

J

K

M

L

Ν

0

Р

PERIODIC MAINTENANCE

IDLE SPEED

Inspection INFOID:000000008274912

1. CHECK IDLE SPEED

With CONSULT

Check idle speed in "DATA MONITOR" mode of "ENGINE" using CONSULT.

Check idle speed with Service \$01 of GST.

>> INSPECTION END

IGNITION TIMING


< PERIODIC MAINTENANCE > [MR16DDT]

IGNITION TIMING

Inspection INFOID:0000000008274913

1. CHECK IGNITION TIMING

- 1. Attach timing light to the ignition coil No.1 harness.
- 2. Check ignition timing.
 - 1 : Timing indicator
 - >> INSPECTION END

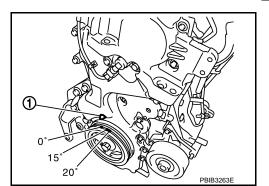

D

C

Α

EC

Е

F

G

Н

1

K

L

M

Ν

0

Р

EVAPORATIVE EMISSION SYSTEM


Inspection INFOID:000000008274914

EVAP CANISTER

1. CHECK EVAP CANISTER

- 1. Block port (B).
- 2. Blow air into port (A) and check that it flows freely out of port (C).
- 3. Release blocked port (B).
- 4. Apply vacuum pressure to port (B) and check that vacuum pressure exists at the ports (A) and (C).
- 5. Block port (A) and (B).
- 6. Apply pressure to port (C) and check that there is no leakage.



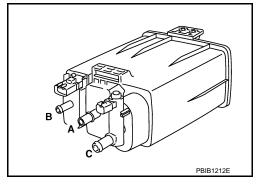

EVAP LEAK CHECK

Inspection INFOID:0000000008274915


CAUTION:

- Do not use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in EVAP system. NOTE:
- Do not start engine.
- Improper installation of EVAP service port adapter [commercial service tool: (J-41413-OBD)] to the EVAP service port may cause a leak.


1.EVAP LEAK CHECK

(P)With CONSULT

1. Install EVAP service port adapter [commercial service tool: (J-41413-OBD)] and pressure pump to EVAP service port.

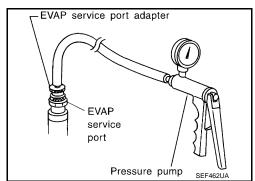


- 2. Turn ignition switch ON.
- 3. Select the "EVAP SYSTEM CLOSE" in "WORK SUPPORT" mode of "ENGINE" using CONSULT.
- 4. Touch "START". A bar graph (Pressure indicating display) will appear on the screen.
- Apply positive pressure to the EVAP system until the pressure indicator reaches the middle of the bar graph.
- Remove EVAP service port adapter [commercial service tool: (J-41413-OBD)] and hose with pressure pump.
- Locate the leak using a leak detector [commercial service tool: (J-41416)]. Refer to <u>EC-55</u>, "EVAPORATIVE EMISSION SYSTEM: System Description".

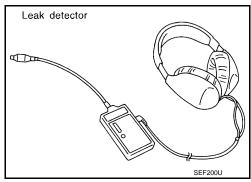

®Without CONSULT

1. Install EVAP service port adapter [commercial service tool: (J-41413-OBD)] and pressure pump to EVAP service port.

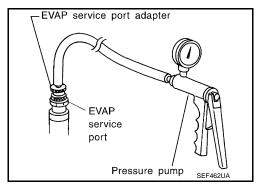

EC

Α

D

Е

F

Κ

L

 \mathbb{N}

Ν


0

Ρ

< PERIODIC MAINTENANCE >

- Apply battery voltage between the terminals of EVAP canister vent control valve to make a closed EVAP system.
- 3. To locate the leak, deliver positive pressure to the EVAP system until pressure gauge points reach 1.38 to 2.76 kPa (0.014 to 0.028 kg/cm², 0.2 to 0.4 psi).
- 4. Remove EVAP service port adapter [commercial service tool: (J-41413-OBD)] and hose with pressure pump.
- 5. Locate the leak using a leak detector [commercial service tool: (J-41416)]. Refer to <u>EC-55</u>, "<u>EVAPORATIVE EMISSION SYSTEM</u>: System Description".

>> INSPECTION END

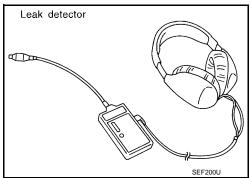

POSITIVE CRANKCASE VENTILATION

< PERIODIC MAINTENANCE >

[MR16DDT]

POSITIVE CRANKCASE VENTILATION

Inspection INFOID:000000008274916


1. CHECK PCV VALVE

With engine running at idle, remove PCV valve from rocker cover. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over valve inlet.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace PCV valve. Refer to EM-57, "Exploded View".

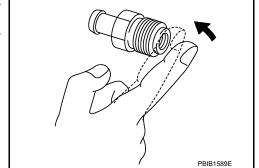

EC

Α

С

D

Е

F

G

Н

K

L

M

Ν

0

Р

REMOVAL AND INSTALLATION

ECM

Removal and Installation

INFOID:0000000008274917

CAUTION:

Must be perform additional service when replacing ECM. Refer to EC-129, "Work Procedure".

REMOVAL

- 1. Remove fusible link bracket. Keep a service area.
- 2. Disconnect ECM harness connectors. Refer to PG-5, "Harness Connector".
- 3. Remove ECM mounting nuts, and then remove ECM.

INSTALLATION

Install in the reverse order of removal.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[MR16DDT]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Idle Speed INFOID:0000000008274918

EC

Α

D

Е

Н

Transmission	Condition	Specification
CVT	No load* (in P or N position)	650 ± 50 rpm
M/T	No load* (in Neutral position)	600 ± 50 rpm

*: Under the following conditions

· A/C switch: OFF

· Electric load: OFF (Lights, heater fan & rear window defogger)

· Steering wheel: Kept in straight-ahead position

Ignition Timing

INFOID:0000000008274919

Transmission	Condition	Specification
CVT	No load* (in P or N position)	6 ± 2° BTDC
M/T	No load* (in Neutral position)	8 ± 2° BTDC

^{*:} Under the following conditions

· A/C switch: OFF

• Electric load: OFF (Lights, heater fan & rear window defogger)

· Steering wheel: Kept in straight-ahead position

Calculated Load Value

INFOID:0000000008274920

Condition	Specification (Using CONSULT or GST)
At idle	5 – 35 %
At 2,500 rpm	5 – 35 %

Mass Air Flow Sensor

INFOID:0000000008274921

Supply voltage	Battery voltage (11 – 14 V)
Output voltage at idle	0.9 – 1.2V*
Mass air flow (Using CONSULT or GST)	1.0 – 4.0 g/s at idle* 2.0 – 10.0 g/s at 2,500 rpm*

^{*:} Engine is warmed up to normal operating temperature and running under no load.

Ν

M

Р