

A  
B  
C  
D  
E

# SECTION **BRC**

## BRAKE CONTROL SYSTEM

### CONTENTS

		<b>BRC</b>
<b>WITH VDC</b>		
<b>PRECAUTION</b> .....	<b>TCS FUNCTION</b> .....	
4	31	
	TCS FUNCTION : System Description .....	
	32	
<b>PRECAUTIONS</b> .....	<b>ABS FUNCTION</b> .....	
4	33	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	ABS FUNCTION : System Description .....	
4	33	
Precaution for Procedure without Cowl Top Cover.....		
4	<b>EBD FUNCTION</b> .....	
Precautions for Removing Battery Terminal .....	35	
4	EBD FUNCTION : System Description .....	
Precaution for Brake System .....	35	
5	<b>BRAKE LIMITED SLIP DIFFERENTIAL (BLSD) FUNCTION</b> .....	
Precaution for Brake Control system .....	36	
6	BRAKE LIMITED SLIP DIFFERENTIAL (BLSD) FUNCTION : System Description .....	
Precaution for Harness Repair .....	36	
7	<b>DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]</b> .....	
<b>PREPARATION</b> .....	39	
8	CONSULT Function .....	
<b>PREPARATION</b> .....	39	
8	<b>ECU DIAGNOSIS INFORMATION</b> .....	
Special Service Tool .....	44	
8	<b>ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)</b> .....	
Commercial Service Tool .....	44	
8	Reference Value .....	
<b>SYSTEM DESCRIPTION</b> .....	44	
9	Fail-safe .....	
<b>COMPONENT PARTS</b> .....	46	
9	DTC Inspection Priority Chart .....	
Component Parts Location .....	49	
9	DTC Index .....	
Component Description .....	50	
11	<b>WIRING DIAGRAM</b> .....	
Wheel Sensor and Sensor Rotor .....	52	
11	<b>BRAKE CONTROL SYSTEM</b> .....	
ABS Actuator and Electric Unit (Control Unit) .....	52	
12	Wiring Diagram .....	
Stop Lamp Switch .....	52	
13	<b>BASIC INSPECTION</b> .....	
Brake Pedal Position Switch .....	59	
13	<b>DIAGNOSIS AND REPAIR WORK FLOW</b> .....	
Steering Angle Sensor .....	59	
13	Work Flow .....	
Yaw Rate/Side/Decel G Sensor .....	59	
13	Diagnostic Work Sheet .....	
VDC OFF Switch .....	60	
13	<b>ADDITIONAL SERVICE WHEN REPLACING ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)</b> .....	
Brake Fluid Level Switch .....	62	
13	Description .....	
Parking Brake Switch .....	62	
13		
<b>SYSTEM</b> .....		
14		
System Description .....		
14		
Fail-safe .....		
25		
<b>VDC FUNCTION</b> .....		
28		
VDC FUNCTION : System Description .....		
28		

<b>ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION</b> .....	63	Diagnosis Procedure .....	106
Description .....	63	<b>C1143 STEERING ANGLE SENSOR</b> .....	108
Work Procedure .....	63	DTC Logic .....	108
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	65	Diagnosis Procedure .....	108
<b>C1101, C1102, C1103, C1104 WHEEL SENSOR</b> .....	65	<b>C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT</b> .....	111
DTC Logic .....	65	DTC Logic .....	111
Diagnosis Procedure .....	66	Diagnosis Procedure .....	111
<b>C1105, C1106, C1107, C1108 WHEEL SENSOR</b> .....	70	<b>C1155 BRAKE FLUID LEVEL SWITCH</b> .....	113
DTC Logic .....	70	DTC Logic .....	113
Diagnosis Procedure .....	71	Diagnosis Procedure .....	113
<b>C1109 POWER AND GROUND SYSTEM</b> .....	77	Component Inspection .....	116
DTC Logic .....	77	<b>C1164, C1165 CV SYSTEM</b> .....	117
Diagnosis Procedure .....	77	DTC Logic .....	117
<b>C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)</b> .....	79	Diagnosis Procedure .....	117
DTC Logic .....	79	<b>C1166, C1167 SV SYSTEM</b> .....	119
Diagnosis Procedure .....	79	DTC Logic .....	119
<b>C1111 ABS MOTOR, MOTOR RELAY SYSTEM</b> .....	81	Diagnosis Procedure .....	119
DTC Logic .....	81	<b>C1176 STOP LAMP SW2</b> .....	121
Diagnosis Procedure .....	81	DTC Logic .....	121
<b>C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR</b> .....	84	Diagnosis Procedure .....	122
DTC Logic .....	84	Component Inspection .....	125
Diagnosis Procedure .....	85	<b>U1000 CAN COMM CIRCUIT</b> .....	126
<b>C1115 WHEEL SENSOR</b> .....	88	Description .....	126
DTC Logic .....	88	DTC Logic .....	126
Diagnosis Procedure .....	88	Diagnosis Procedure .....	126
<b>C1116 STOP LAMP SWITCH</b> .....	95	<b>U1010 CONTROL UNIT (CAN)</b> .....	127
DTC Logic .....	95	Description .....	127
Diagnosis Procedure .....	96	DTC Logic .....	127
Component Inspection .....	99	Diagnosis Procedure .....	127
<b>C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM</b> .....	100	<b>POWER SUPPLY AND GROUND CIRCUIT</b> ...	129
DTC Logic .....	100	Diagnosis Procedure .....	129
Diagnosis Procedure .....	100	<b>PARKING BRAKE SWITCH</b> .....	132
<b>C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM</b> .....	102	Component Function Check .....	132
DTC Logic .....	102	Diagnosis Procedure .....	132
Diagnosis Procedure .....	102	Component Inspection .....	132
<b>C1130 ENGINE SIGNAL</b> .....	104	<b>VDC OFF SWITCH</b> .....	134
DTC Logic .....	104	Component Function Check .....	134
Diagnosis Procedure .....	104	Diagnosis Procedure .....	134
<b>C1140 ACTUATOR RELAY SYSTEM</b> .....	106	Component Inspection .....	135
DTC Logic .....	106	<b>ABS WARNING LAMP</b> .....	136
		Component Function Check .....	136
		Diagnosis Procedure .....	136
		<b>BRAKE WARNING LAMP</b> .....	137
		Component Function Check .....	137
		Diagnosis Procedure .....	137
		<b>VDC WARNING LAMP</b> .....	138
		Component Function Check .....	138

Diagnosis Procedure .....	138	<b>WHEEL SENSOR .....</b>	<b>147</b>	
<b>VDC OFF INDICATOR LAMP .....</b>	<b>139</b>	<b>FRONT WHEEL SENSOR .....</b>	<b>147</b>	A
Component Function Check .....	139	FRONT WHEEL SENSOR : Exploded View .....	147	
Diagnosis Procedure .....	139	FRONT WHEEL SENSOR : Removal and Instal-		B
		lation .....	147	
<b>SYMPTOM DIAGNOSIS .....</b>	<b>140</b>	<b>REAR WHEEL SENSOR .....</b>	<b>148</b>	C
<b>EXCESSIVE OPERATION FREQUENCY .....</b>	<b>140</b>	REAR WHEEL SENSOR : Exploded View .....	148	
Description .....	140	REAR WHEEL SENSOR : Removal and Installa-		
Diagnosis Procedure .....	140	tion .....	150	
<b>UNEXPECTED BRAKE PEDAL REACTION ..</b>	<b>141</b>	<b>SENSOR ROTOR .....</b>	<b>152</b>	D
Description .....	141	<b>FRONT SENSOR ROTOR .....</b>	<b>152</b>	
Diagnosis Procedure .....	141	FRONT SENSOR ROTOR : Removal and Instal-		E
<b>THE BRAKING DISTANCE IS LONG .....</b>	<b>142</b>	lation .....	152	
Description .....	142	<b>REAR SENSOR ROTOR .....</b>	<b>152</b>	
Diagnosis Procedure .....	142	REAR SENSOR ROTOR : Removal and Installa-		
<b>DOES NOT OPERATE .....</b>	<b>143</b>	tion .....	152	BRC
Description .....	143	<b>ABS ACTUATOR AND ELECTRIC UNIT</b>		
Diagnosis Procedure .....	143	<b>(CONTROL UNIT) .....</b>	<b>153</b>	G
<b>BRAKE PEDAL VIBRATION OR OPERA-</b>		Exploded View .....	153	
<b>TION SOUND OCCURS .....</b>	<b>144</b>	Removal and Installation .....	153	H
Description .....	144	<b>YAW RATE/SIDE/DECEL G SENSOR .....</b>	<b>155</b>	
Diagnosis Procedure .....	144	Exploded View .....	155	
<b>VEHICLE JERKS DURING .....</b>	<b>145</b>	Removal and Installation .....	155	I
Description .....	145	<b>STEERING ANGLE SENSOR .....</b>	<b>156</b>	
Diagnosis Procedure .....	145	Removal and Installation .....	156	J
<b>NORMAL OPERATING CONDITION .....</b>	<b>146</b>	<b>VDC OFF SWITCH .....</b>	<b>157</b>	
Description .....	146	Removal and Installation .....	157	K
<b>REMOVAL AND INSTALLATION .....</b>	<b>147</b>			L
				M
				N
				O
				P

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012199644

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery or batteries, and wait at least 3 minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000012199645

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

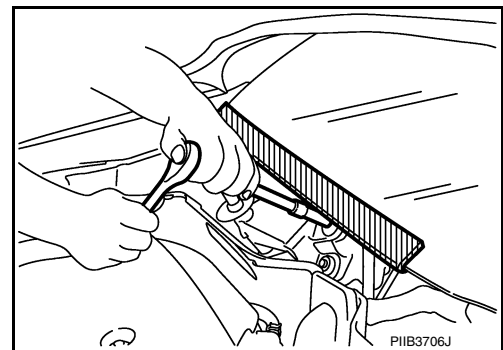

#### Precautions for Removing Battery Terminal

INFOID:000000012996816

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.


# PRECAUTIONS

[WITH VDC]

## < PRECAUTION >

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		
YD25DDTi	: 2 minutes		

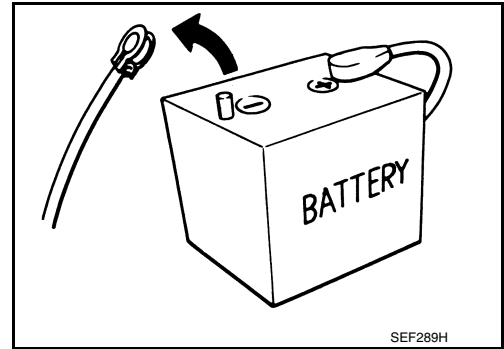

A  
B  
C  
D

### NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

### NOTE:

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
  - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
  - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

### NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

### NOTE:

The removal of 12V battery may cause a DTC detection error.


## Precaution for Brake System

INFOID:0000000012199647

### WARNING:

Since dust covering the front and rear brakes has an affect on human body, the dust must be removed with a dust collector. Never splatter the dust with an air blow gun.

- Brake fluid use refer to [MA-11, "Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Always confirm the specified tightening torque when installing the brake pipes.
- After pressing the brake pedal more deeply or harder than normal driving, such as air bleeding, check the each item of brake pedal. Adjust brake pedal if it is outside the standard value.
- Never use mineral oils such as gasoline or light oil to clean. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with a crow-foot (A) and torque wrench (B).
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) harness connector or the battery negative terminal before performing the work.
- Check that no brake fluid leakage is present after replacing the parts.

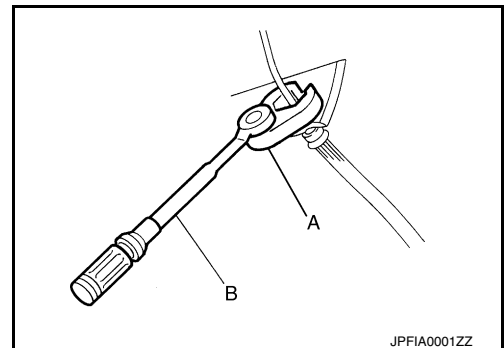

BRC

G

H

I

J

K

L

M

N

O

P

## Precaution for Brake Control system

INFOID:000000012199648

- Always perform a pre-driving check to drive the vehicle.
- Always check speed and safety while driving the vehicle.
- To operate CONSULT while driving, more than one person is required to be in the vehicle to avoid interference to driving and ensure safety.
- Slight vibrations are felt on the brake pedal and the operation noises occur, when VDC function, TCS function, ABS function EBD function or brake limited slip differential (BLSD) function operates. This is not a malfunction because it is caused by VDC function, TCS function, ABS function EBD function or brake limited slip differential (BLSD) function that is normally operated.
- When starting engine or when starting vehicle just after starting engine, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is normal condition.
- Brake stopping distance may become longer than models without ABS function depending on the road conditions, when ABS function is operated on slippery road like rough road, gravel road or snowy road.
- When a malfunction is indicated, always collect information from the customer about conditions of occurrence, estimate cause and perform operation. Check brake booster operation, brake fluid level and brake fluid leakage, as well as electrical system.
- The optimum performance is achieved by control for VDC function, TCS function, ABS function EBD function and brake limited slip differential (BLSD) function when all of brakes, suspensions and tires installed on the vehicle are the specified size and parts. Brake performance and controllability may be negatively affected when other parts than the specified are installed.
- Brake stopping distance may become longer and steering stability may be negatively affected, when tires in different size and combination or other parts than the specified are used.
- When a radio (including wiring), antenna and antenna lead line are located near ABS actuator and electric unit (control unit), a malfunction or improper operation may occur for the control of VDC function, TCS function, ABS function EBD function and brake limited slip differential (BLSD) function.
- When the following items are replaced by other parts than genuine parts or modified, ABS warning lamp, brake warning lamp and VDC warning lamp may turn ON, and the control may not operate normally for VDC function, TCS function, ABS function EBD function and brake limited slip differential (BLSD) function.
  - Suspension component parts (shock absorber, spring, bushing and others)
  - Tire and wheel (other than the specified size)
  - Brake component parts (brake pad, disc rotor, brake caliper and others)
  - Engine component parts (ECM, muffler and others)
  - Body reinforcement component parts (rollover bar, tower bar and others)
- When suspension, tire and brake component parts are excessively worn or deteriorated and the vehicle is driven, ABS warning lamp, brake warning lamp and VDC warning lamp may turn ON, and the control may not operate normally for VDC function, TCS function, ABS function EBD function and brake limited slip differential (BLSD) function.
- ABS warning lamp, brake warning lamp and VDC warning lamp may turn ON, when only front wheel or rear wheel is rotated using a free roller. This is not a malfunction, because it is caused by wheel speed difference between wheel that is rotated and wheel that is not rotated. In this case, perform self-diagnosis, check self-diagnosis results, and erase memory.
- When power supply voltage is not normal, ABS warning lamp, brake warning lamp and VDC warning lamp turn ON. ABS actuator and electric unit (control unit) stops control for VDC function, TCS function, ABS function EBD function and brake limited slip differential (BLSD) function. Ordinary brake operates. After power supply returns to normal, ABS warning lamp, brake warning lamp and VDC warning lamp turn OFF. The control becomes operative for VDC function, TCS function, ABS function EBD function and brake limited slip differential (BLSD) function.
- Brake pedal vibrates and operation sound occurs during sudden acceleration and cornering, when VDC function, TCS function or brake limited slip differential (BLSD) function is operated. This is not a malfunction because it is caused by VDC function, TCS function or brake limited slip differential (BLSD) function that is operated normally.
- VDC warning lamp may turn ON and VDC function, TCS function and brake limited slip differential (BLSD) function may not normally operate, when driving on a special road the is extremely slanted (bank in a circuit course). This is not a malfunction if the status returns to normal for VDC function, TCS function and brake limited slip differential (BLSD) function after the engine is started again. In this case, perform self-diagnosis, check self-diagnosis results, and erase memory.
- A malfunction in yaw rate/side/decel G sensor system may be detected when the vehicle sharply turns during a spin turn, acceleration turn or drift driving while VDC function, TCS function and brake limited slip differential (BLSD) function are OFF (VDC OFF switch is pressed and VDC OFF indicator lamp is in ON status). This is not a malfunction if the status returns to normal for VDC function, TCS function and brake

# PRECAUTIONS

[WITH VDC]


## < PRECAUTION >

limited slip differential (BLSD) function after the engine is started again. In this case, perform self-diagnosis, check self-diagnosis results, and erase memory.


### Precaution for Harness Repair

INFOID:000000012199649

- Solder the repair part, and wrap it with tape. [Twisted wire fray must be 110 mm (4.33 in) or less.]

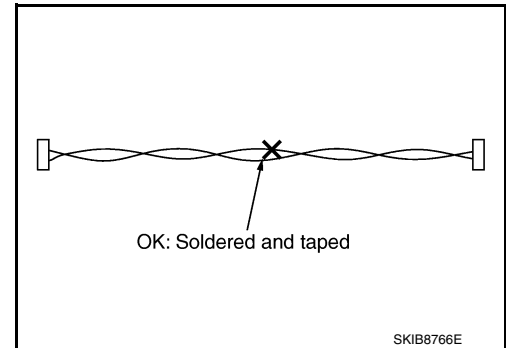

- Never bypass the repair point with wire. (If it is bypassed, the turnout point cannot be separated and the twisted wire characteristics are lost.)

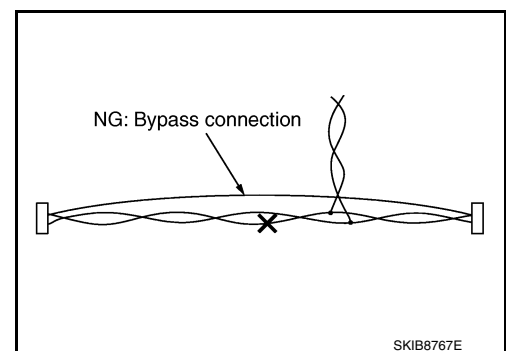

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# PREPARATION

< PREPARATION >

[WITH VDC]


## PREPARATION

### PREPARATION

#### Special Service Tool


INFOID:00000001340093

The actual shapes of the tools may differ from those illustrated here.

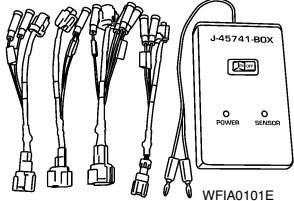Tool number (TechMate No.) Tool name	Description
KV991J0080 (J-45741-A) ABS active wheel sensor tester	 <p>Checking operation of wheel sensors</p>

#### Commercial Service Tool

INFOID:000000012199650

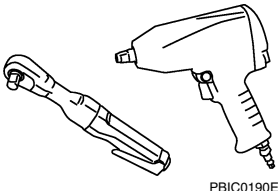Tool name	Description
Power tool	 <p>Loosening bolts and nuts</p>



# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[WITH VDC]


## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### Component Parts Location

2WD

INFOID:000000012199651

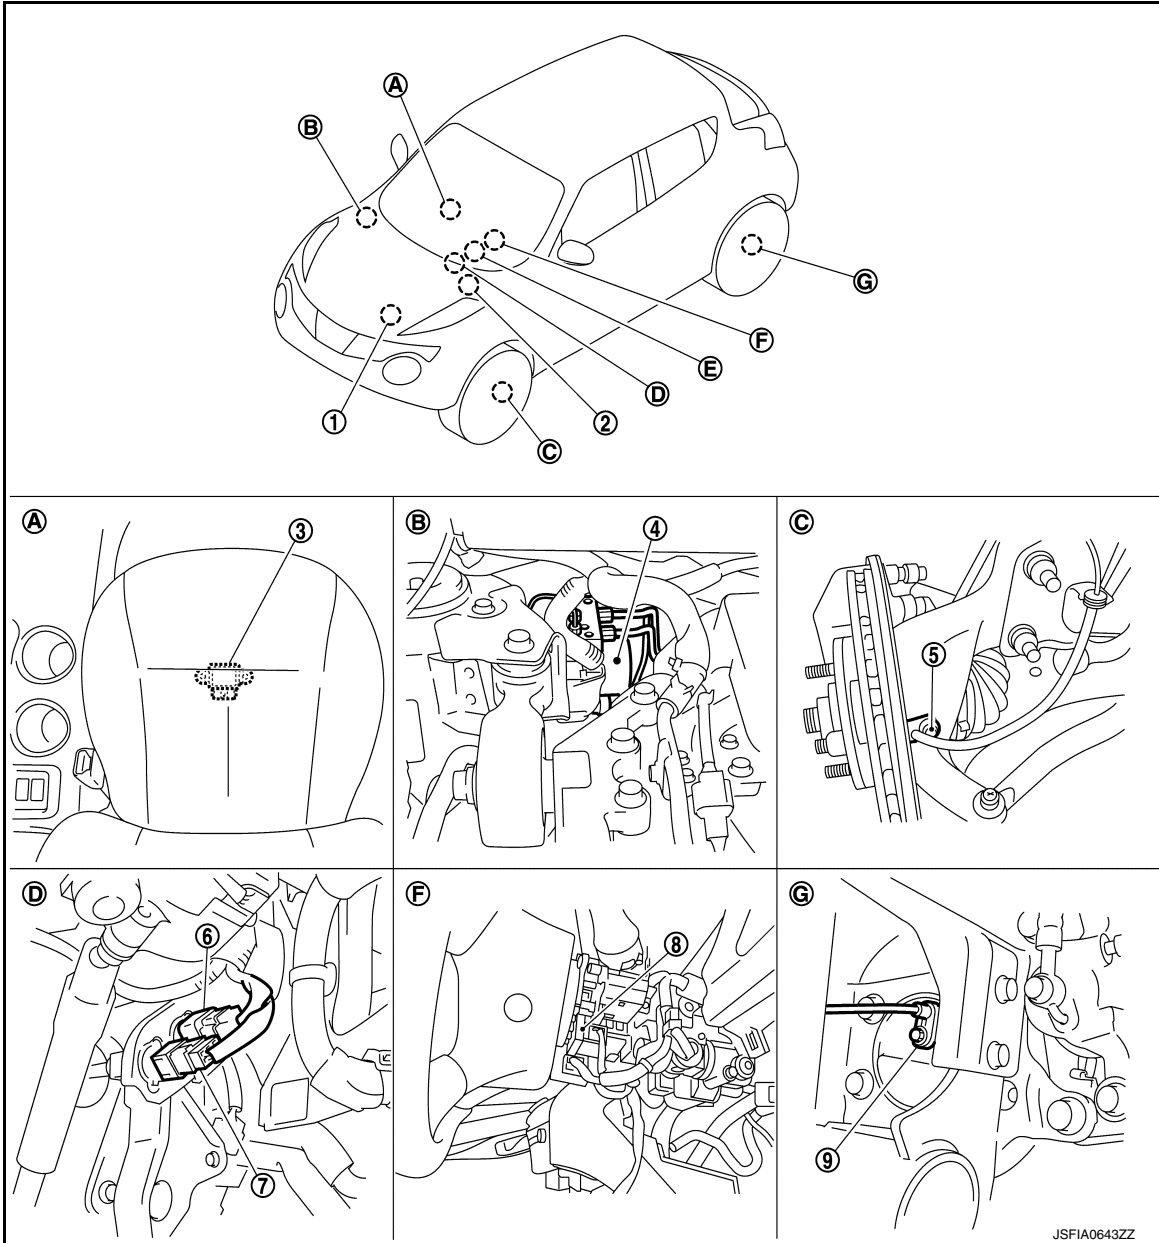

- |  |   |                                 |
|--|---|---------------------------------|
| 1. ECM<br>Refer to <a href="#">EC-27. "ENGINE CONTROL SYSTEM : Component Parts Location"</a> . | 2. TCM*<br>Refer to <a href="#">TM-156. "CVT CONTROL SYSTEM : Component Parts Location"</a> . | 3. Yaw rate/side/decel G sensor |
| 4. ABS actuator and electric unit (control unit)   | 5. Front wheel sensor   | 6. Stop lamp switch             |
| 7. Brake pedal position switch   | 8. Steering angle sensor  | 9. Rear wheel sensor            |
| A. Under floor carpet (front seat right side)  | B. Inside engine room   | C. Steering knuckle             |

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# COMPONENT PARTS


[WITH VDC]

< SYSTEM DESCRIPTION >

- D. Brake pedal
- E. ABS warning lamp, brake warning lamp, VDC warning lamp, VDC OFF indicator lamp (in combination meter)
- F. Back of spiral cable assembly
- G. Rear wheel hub and bearing assembly

\*: Models with CVT

AWD

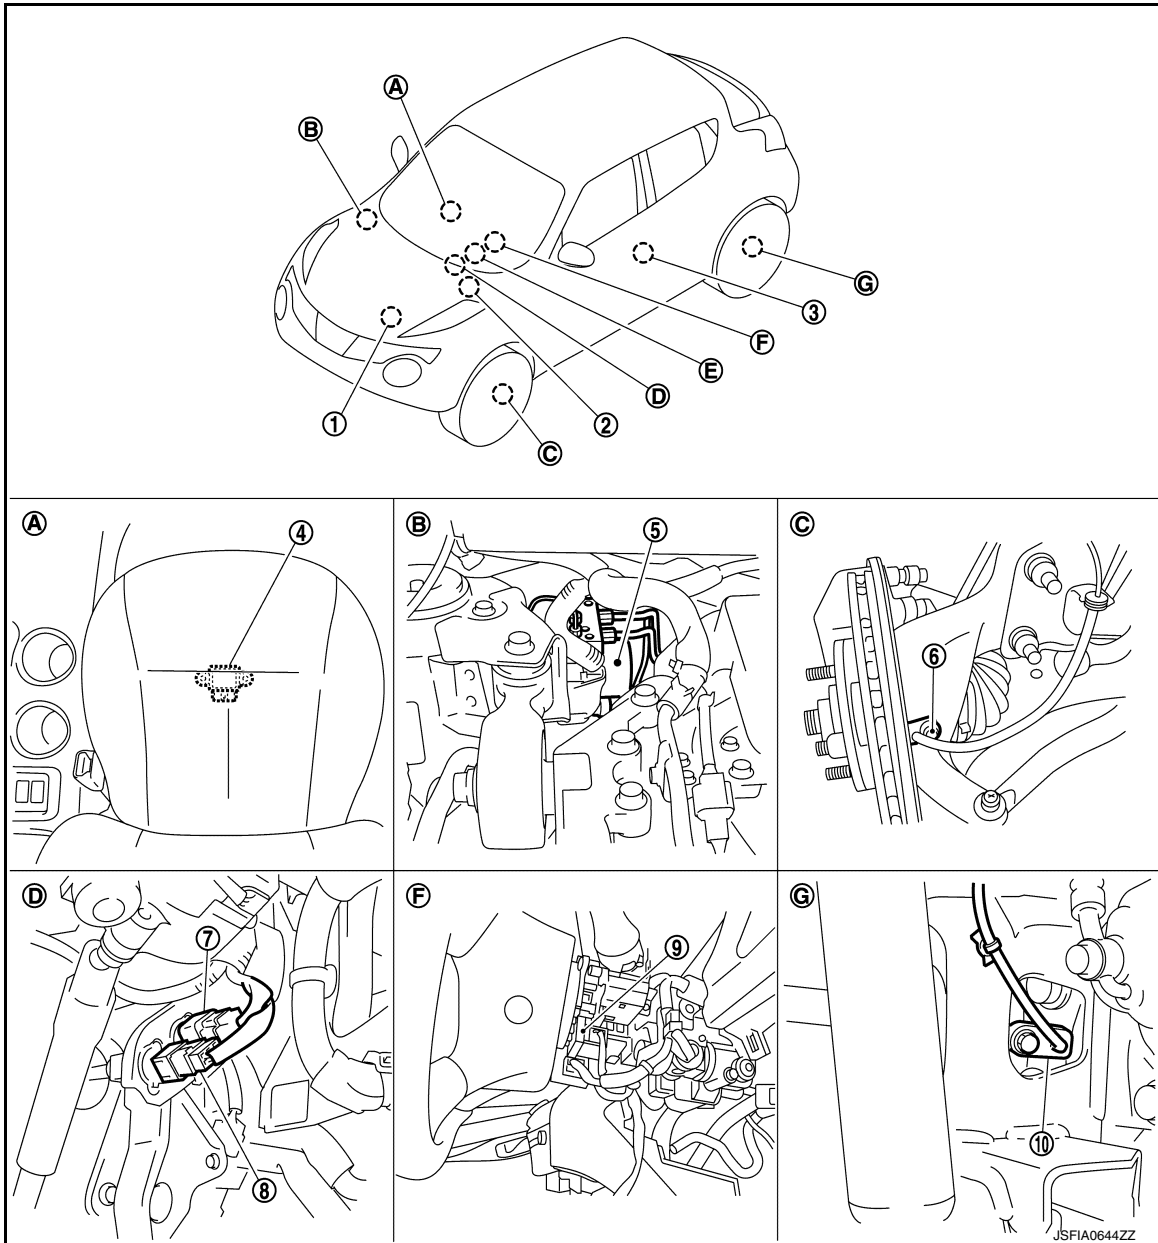

- 1. ECM  
Refer to [EC-27, "ENGINE CONTROL SYSTEM : Component Parts Location"](#).
- 2. TCM  
Refer to [TM-156, "CVT CONTROL SYSTEM : Component Parts Location"](#).
- 3. AWD control module  
Refer to [DLN-10, "Component Parts Location"](#).
- 4. Yaw rate/side/decel G sensor
- 5. ABS actuator and electric unit (control unit)
- 6. Front wheel sensor
- 7. Stop lamp switch
- 8. Brake pedal position switch
- 9. Steering angle sensor
- 10. Rear wheel sensor

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[WITH VDC]

- |   |  |                                  |
|---|--|----------------------------------|
| A. Under floor carpet (front seat right side) | B. Inside engine room  | C. Steering knuckle              |
| D. Brake pedal                                | E. ABS warning lamp, brake warning lamp, VDC warning lamp, VDC OFF indicator lamp (in combination meter) | F. Back of spiral cable assembly |
| G. Rear axle housing                          |  |                                  |

## Component Description

INFOID:000000012199652

Component	Reference/Function
ABS actuator and electric unit (control unit)	<a href="#">BRC-12. "ABS Actuator and Electric Unit (Control Unit)"</a>
Wheel sensor	<a href="#">BRC-11. "Wheel Sensor and Sensor Rotor"</a>
Stop lamp switch	<a href="#">BRC-13. "Stop Lamp Switch"</a>
Brake pedal position switch	<a href="#">BRC-13. "Brake Pedal Position Switch"</a>
Steering angle sensor	<a href="#">BRC-13. "Steering Angle Sensor"</a>
Yaw rate/side/decel G sensor	<a href="#">BRC-13. "Yaw Rate/Side/Decel G Sensor"</a>
VDC OFF switch	<a href="#">BRC-13. "VDC OFF Switch"</a>
Brake fluid level switch	<a href="#">BRC-13. "Brake Fluid Level Switch"</a>
Parking brake switch	<a href="#">BRC-13. "Parking Brake Switch"</a>
VDC warning lamp	<a href="#">BRC-14. "System Description"</a>
ABS warning lamp	
Brake warning lamp	
VDC OFF indicator lamp	
ECM	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Accelerator pedal position signal</li> <li>• Engine speed signal</li> </ul> Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Target throttle position signal</li> </ul>
TCM <sup>*1</sup>	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• N range signal</li> <li>• P range signal</li> <li>• R range signal</li> <li>• Current gear position signal</li> </ul>
AWD control module <sup>*2</sup>	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Current AWD mode signal</li> </ul>

\*1: Models with CVT

\*2: AWD models

## Wheel Sensor and Sensor Rotor

INFOID:000000012199653

### NOTE:


- Wheel sensor of front wheel is installed on steering knuckle.
- Sensor rotor of front wheel is integrated in wheel hub and bearing assembly.
- Wheel sensor of rear wheel is installed on wheel hub and bearing assembly. (2WD)
- Wheel sensor of rear wheel is installed on axle housing. (AWD)
- Sensor rotor of rear wheel is integrated in wheel hub and bearing assembly. (2WD)
- Sensor rotor of rear wheel is integrated on drive shaft. (AWD)
- Never measure resistance and voltage value using a tester because sensor is active sensor.

# COMPONENT PARTS

[WITH VDC]

## < SYSTEM DESCRIPTION >

- Downsize and weight reduction is aimed. IC for detection portion and magnet for sensor rotor are adopted.
- Power supply is supplied to detection portion so that magnetic field line is read. Magnetic field that is detected is converted to current signal.
- When sensor rotor rotates, magnetic field changes. Magnetic field change is converted to current signals (rectangular wave) and is transmitted to ABS actuator and electric unit (control unit). Change of magnetic field is proportional to wheel speed.

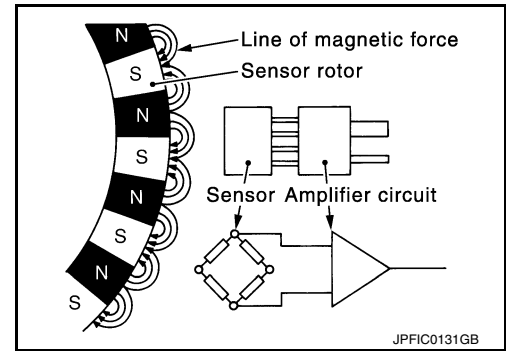

INFOID:000000012199654

## ABS Actuator and Electric Unit (Control Unit)

Electric unit (control unit) is integrated with actuator and comprehensively controls VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function.

### ELECTRIC UNIT (CONTROL UNIT)

- Brake fluid pressure, engine and transaxle are controlled according to signals from each sensor.
- If malfunction is detected, the system enters fail-safe mode.

### ACTUATOR

The following components are integrated with ABS actuator.

#### Pump

Returns the brake fluid reserved in reservoir to master cylinder by reducing pressure.

#### Motor

Activates the pump according to signals from ABS actuator and electric unit (control unit).

#### Motor Relay

Operates the motor ON/OFF according to signals from ABS actuator and electric unit (control unit).

#### Actuator Relay (Main Relay)

Operates each valve ON/OFF according to signals from ABS actuator and electric unit (control unit).

#### ABS IN Valve

Switches the fluid pressure line to increase or hold according to signals from control unit.

#### NOTE:

Valve is a solenoid valve.

#### ABS OUT Valve

Switches the fluid pressure line to increase, hold or decrease according to signals from control unit.

#### NOTE:

Valve is a solenoid valve.

#### Cut Valve 1, Cut Valve 2

Shuts off the ordinary brake line from master cylinder, when VDC function, TCS function and brake limited slip differential (BLSD) function are activated.

#### Suction Valve 1, Suction Valve 2

Supplies the brake fluid from master cylinder to the pump, when VDC function, TCS function and brake limited slip differential (BLSD) function are activated.

#### Inlet Valve

Brake fluid sucked from the reservoir by the pump does not backflow.

#### NOTE:

Valve is a check valve.

#### Outlet Valve

Brake fluid discharged from the pump does not backflow.

#### NOTE:

Valve is a check valve.

#### Return Check Valve

Returns the brake fluid from brake caliper to master cylinder by bypassing orifice of each valve when brake is released.

# COMPONENT PARTS

[WITH VDC]

< SYSTEM DESCRIPTION >

## Reservoir

Temporarily reserves the brake fluid drained from brake caliper, so that pressure efficiently decreases when decreasing pressure of brake caliper.

A

## Stop Lamp Switch

INFOID:000000012199655

B

Detects the operation status of brake pedal and transmits converted electric signal to ABS actuator and electric unit (control unit).

## Brake Pedal Position Switch

INFOID:000000012199656

C

Detects the operation status of brake pedal and transmits converted electric signal to ABS actuator and electric unit (control unit).

D

## Steering Angle Sensor

INFOID:000000012199657

Detects the following information and transmits steering angle signal to ABS actuator and electric unit (control unit) via CAN communication.

- Steering wheel rotation amount
- Steering wheel rotation angular velocity
- Steering wheel rotation direction

E

BRC

## Yaw Rate/Side/Decel G Sensor

INFOID:000000012199658

Calculates the following information that affects the vehicle, and transmits a signal to ABS actuator and electric unit (control unit) via communication lines.

- Vehicle rotation angular velocity (yaw rate signal)
- Vehicle lateral acceleration (side G signal) and longitudinal acceleration (decel G signal)

G

H

## VDC OFF Switch

INFOID:000000012199659

- This is an integrated switch with switches for other functions.
- Non-operational status or standby status of the following functions can be selected using VDC OFF switch. VDC OFF indicator lamp indicates the operation status of function. (ON: Non-operational status, OFF: Standby status)

I

J

- VDC function

### NOTE:

- Brake limited slip differential (BLSD) function control operates.
- TCS function
- VDC OFF indicator lamp turns OFF (standby status) when the engine is started again after it is stopped once while VDC OFF indicator lamp is ON (non-operational status).

K

L

## Brake Fluid Level Switch

INFOID:000000012199660

Detects the brake fluid level in reservoir tank and transmits converted electric signal from combination meter to ABS actuator and electric unit (control unit) via CAN communication, when brake fluid level is the specified level or less.

M

## Parking Brake Switch

INFOID:000000012199661

N

Detects the operation status of parking brake switch and transmits converted electric signal from combination meter to ABS actuator and electric unit (control unit).

O

P

SYSTEM

System Description


INFOID:000000012199662

- The system switches fluid pressure of each brake caliper to increase, to hold or to decrease according to signals from control unit in ABS actuator and electric unit (control unit). This control system is applied to VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function.
- Fail-safe function is available for each function and is activated by each function when system malfunction occurs.

SYSTEM DIAGRAM

NOTE:

- TCM is CVT models only.
- AWD control module is AWD models only.

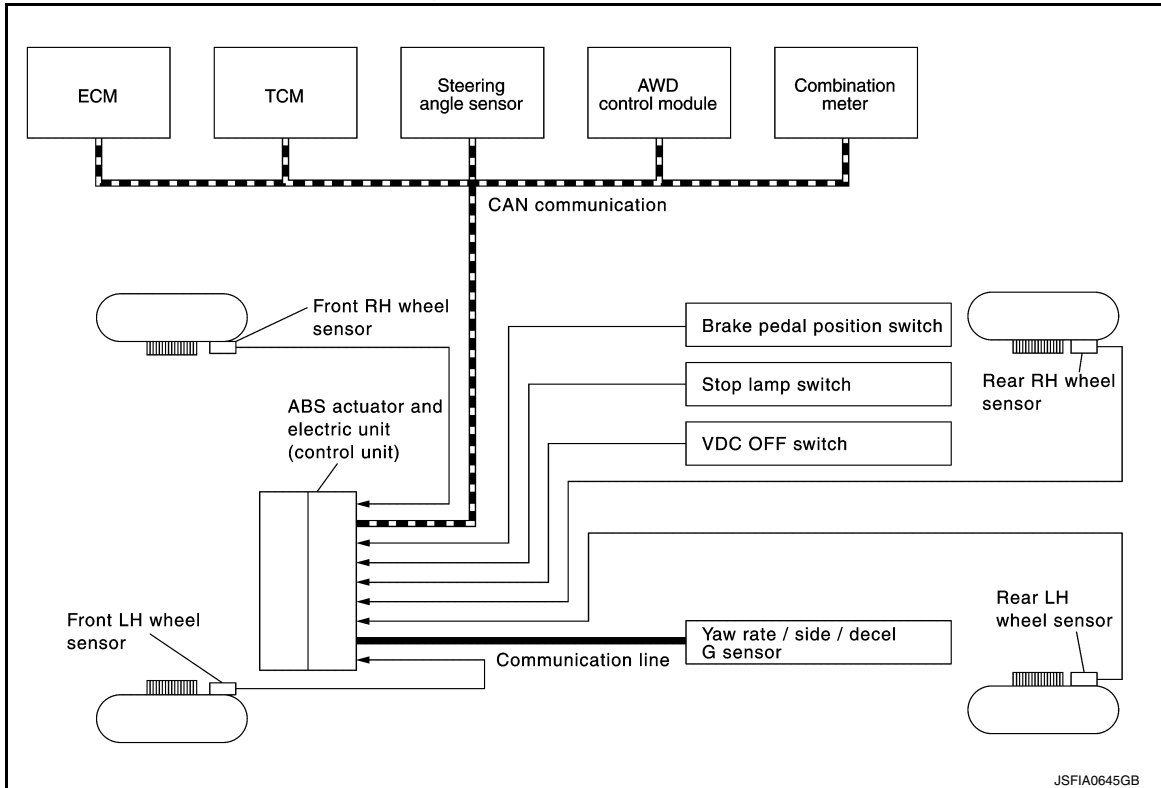

INPUT SIGNAL AND OUTPUT SIGNAL

Major signal transmission between each unit via communication lines is shown in the following table.

# SYSTEM

**[WITH VDC]**

**< SYSTEM DESCRIPTION >**

VDC function, TCS function, ABS function, EBD function, Brake limited slip differential (BLSD) function

Component	Signal description
Steering angle sensor	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Steering angle sensor signal</li> </ul>
Yaw rate/side/decel G sensor	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via communication line*1 <ul style="list-style-type: none"> <li>• Yaw rate signal</li> <li>• Side G sensor signal</li> <li>• Decel G sensor signal</li> </ul>
ECM	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Accelerator pedal position signal</li> <li>• Engine speed signal</li> </ul> Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Target throttle position signal</li> </ul>
TCM*2	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• N range signal</li> <li>• P range signal</li> <li>• R range signal</li> <li>• Current gear position signal</li> </ul>
AWD control module*3	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Current AWD mode signal</li> </ul>
Combination meter	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Brake fluid level switch signal</li> </ul> Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• ABS warning lamp signal</li> <li>• Brake warning lamp signal</li> <li>• VDC warning lamp signal</li> <li>• VDC OFF indicator lamp signal</li> </ul>

\*1: Communication line between yaw rate/side/decel G sensor and ABS actuator and electric unit (control unit)

\*2: Models with CVT

\*3: AWD models

## VALVE OPERATION [VDC FUNCTION, TCS FUNCTION AND BRAKE LIMITED SLIP DIFFERENTIAL (BLSD) FUNCTION]

The control unit built in the ABS actuator and electric unit (control unit) controls fluid pressure of the brake calipers, respectively, by operating each valve.


When VDC Function, TSC Function and Brake Limited Slip Differential (BLSD) Function is in Operation (During Pres-

# SYSTEM

< SYSTEM DESCRIPTION >

[WITH VDC]

sure Increases)

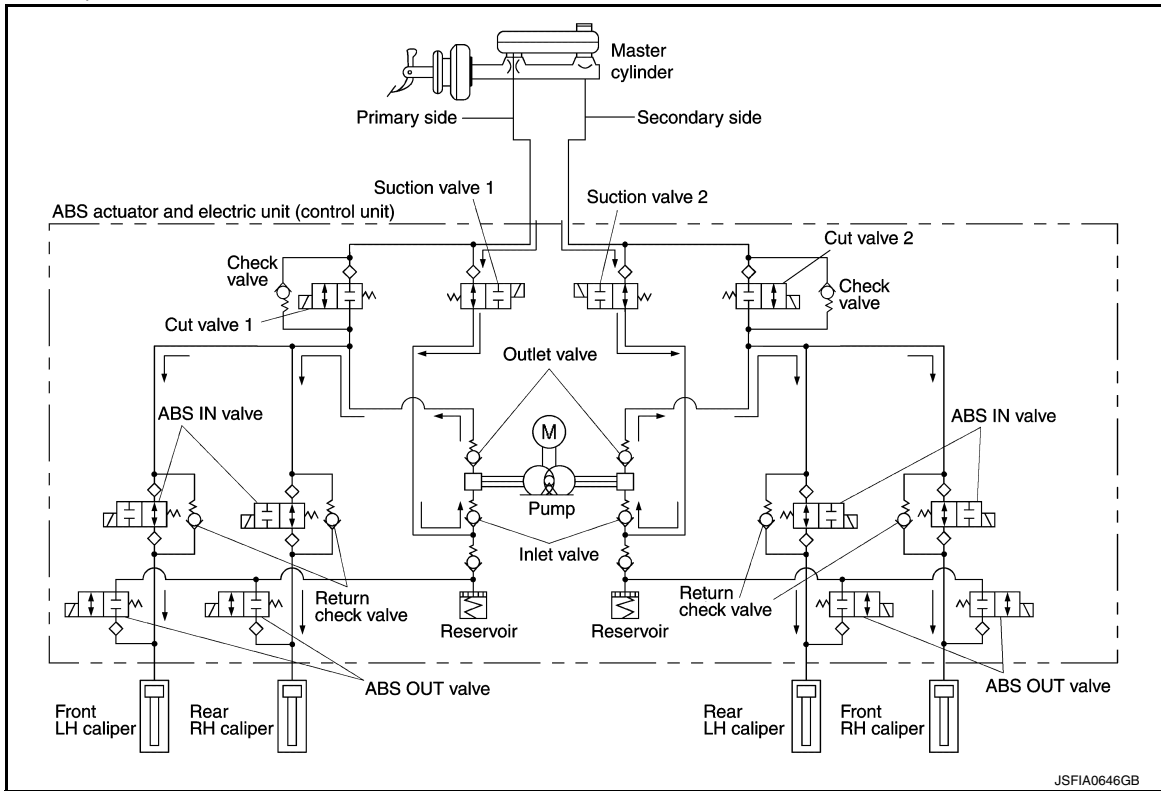

Name	Not activated	During pressure increases
Cut valve 1	Power supply is not supplied (open)	Power supply is supplied (close)
Cut valve 2	Power supply is not supplied (open)	Power supply is supplied (close)
Suction valve 1	Power supply is not supplied (close)	Power supply is supplied (open)
Suction valve 2	Power supply is not supplied (close)	Power supply is supplied (open)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper (fluid pressure)	—	Pressure increases

During pressure front RH brake caliper increases

- Brake fluid is conveyed to the pump from the master cylinder through suction valve 2 and is pressurized by the pump operation. The pressurized brake fluid is supplied to the front RH brake caliper through the ABS IN valve. For the left caliper, brake fluid pressure is maintained because the pressurization is unnecessary. The pressurization for the left caliper is controlled separately from the right caliper.

During pressure front LH brake caliper increases

- Brake fluid is conveyed to the pump from the master cylinder through suction valve 1 and is pressurized by the pump operation. The pressurized brake fluid is supplied to the front LH brake caliper through the ABS IN valve. For the right caliper, brake fluid pressure is maintained because the pressurization is unnecessary. The pressurization for the right caliper is controlled separately from the left caliper.

During pressure rear RH brake caliper increases

- Brake fluid is conveyed to the pump from the master cylinder through suction valve 1 and is pressurized by the pump operation. The pressurized brake fluid is supplied to the rear RH brake caliper through the ABS IN valve. For the left caliper, brake fluid pressure is maintained because the pressurization is unnecessary. The pressurization for the left caliper is controlled separately from the right caliper.

During pressure rear LH brake caliper increases

- Brake fluid is conveyed to the pump from the master cylinder through suction valve 2 and is pressurized by the pump operation. The pressurized brake fluid is supplied to the rear LH brake caliper through the ABS IN




# SYSTEM

[WITH VDC]

## < SYSTEM DESCRIPTION >

valve. For the right caliper, brake fluid pressure is maintained because the pressurization is unnecessary. The pressurization for the right caliper is controlled separately from the left caliper.

When VDC Function, TSC Function and Brake Limited Slip Differential (BLSD) Function is Starts Operating (During Pressure Holds)

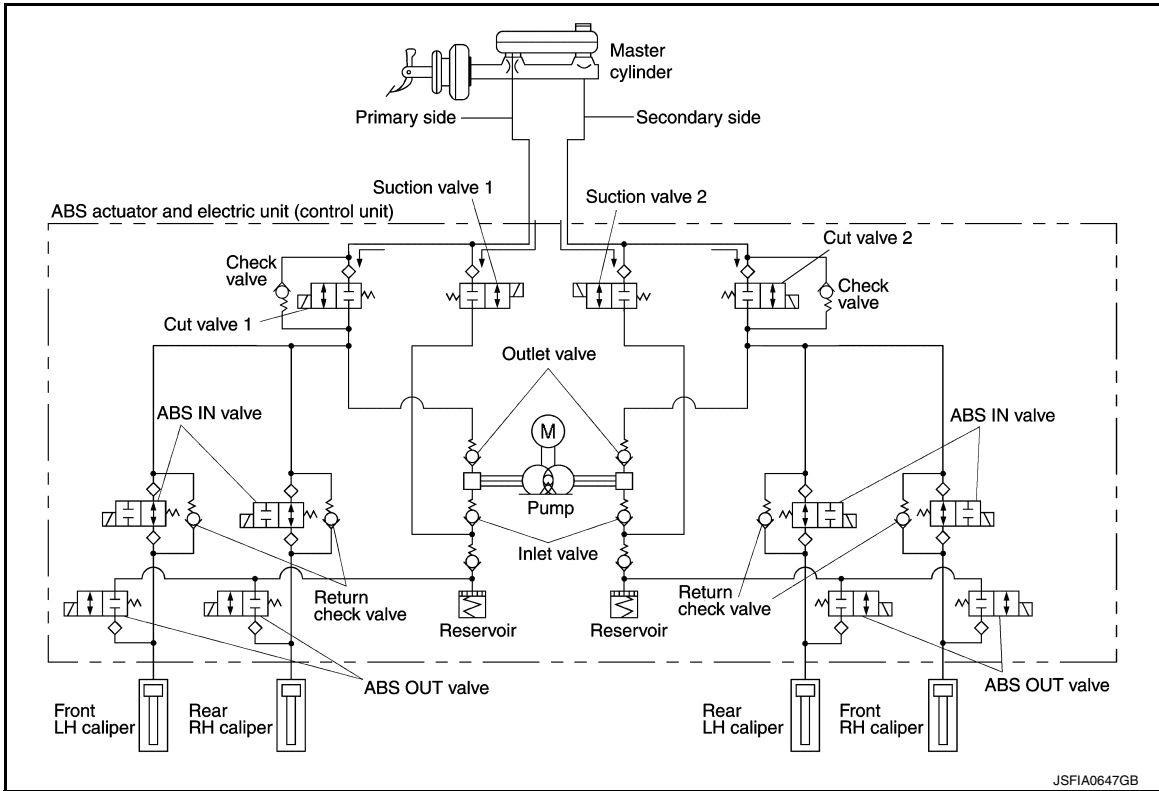

Name	Not activated	During pressure holds
Cut valve 1	Power supply is not supplied (open)	Power supply is supplied (close)
Cut valve 2	Power supply is not supplied (open)	Power supply is supplied (close)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper (fluid pressure)	—	Pressure holds

During pressure front RH brake caliper holds

- Since the cut valve 2 and the suction valve 2 are closed, the front RH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the front RH brake caliper. The pressurization for the left caliper is controlled separately from the right caliper.

During pressure front LH brake caliper holds

- Since the cut valve 1 and the suction valve 1 are closed, the front LH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the front LH brake caliper. The pressurization for the right caliper is controlled separately from the left caliper.

During pressure rear RH brake caliper holds

- Since the cut valve 1 and the suction valve 1 are closed, the rear RH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the rear RH brake caliper. The pressurization for the left caliper is controlled separately from the right caliper.

During pressure rear LH brake caliper holds


# SYSTEM

[WITH VDC]

## < SYSTEM DESCRIPTION >

- Since the cut valve 2 and the suction valve 2 are closed, the rear LH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the rear LH brake caliper. The pressurization for the right caliper is controlled separately from the left caliper.

When VDC Function, TSC Function and Brake Limited Slip Differential (BLSD) Function is in Operation (During Pressure Decreases)

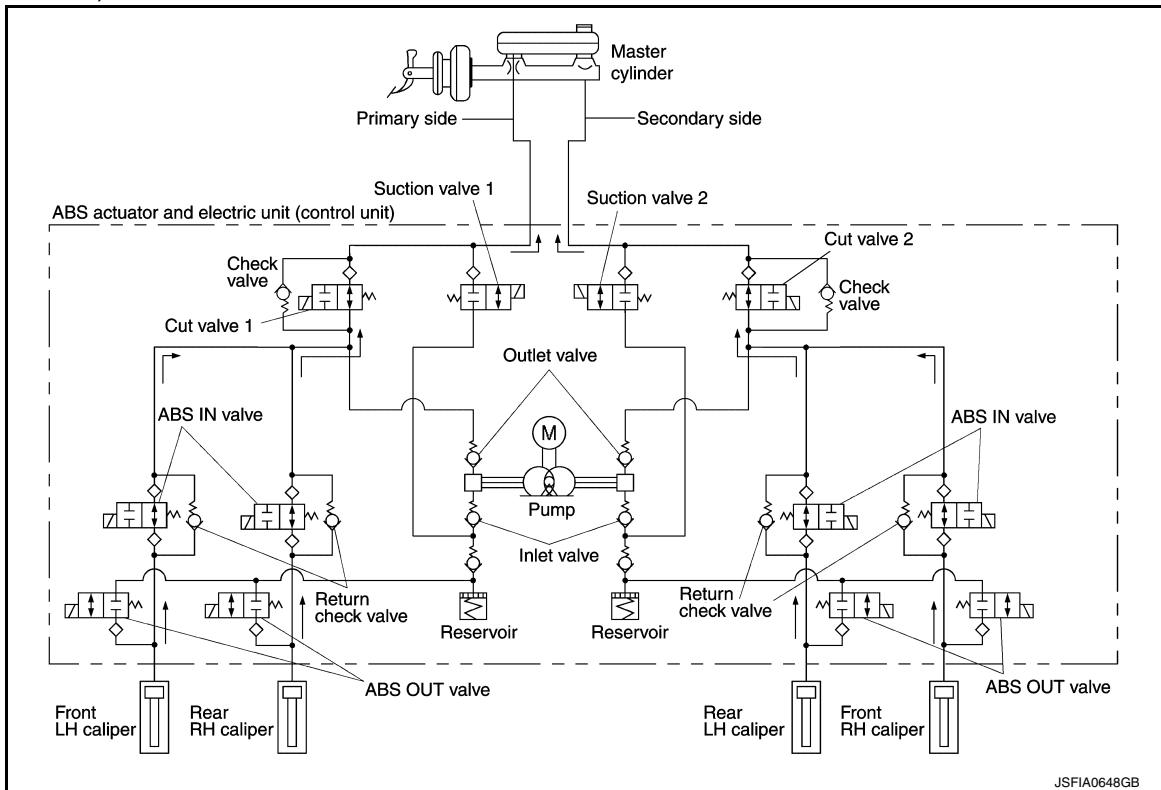

Name	Not activated	During pressure decreases
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper (fluid pressure)	—	Pressure decreases

During pressure front RH brake caliper decreases

- Since the suction valve 2 and the ABS OUT valve close and the cut valve 2 and the ABS IN valve open, the fluid pressure applied on the front RH brake caliper is reduced by supplying the fluid pressure to the master cylinder via the ABS IN valve and the cut valve 2. The pressurization for the right caliper is controlled separately from the left caliper.

During pressure front LH brake caliper decreases

- Since the suction valve 1 and the ABS OUT valve close and the cut valve 1 and the ABS IN valve open, the fluid pressure applied on the front LH brake caliper is reduced by supplying the fluid pressure to the master cylinder via the ABS IN valve and the cut valve 2. The pressurization for the left caliper is controlled separately from the right caliper.

During pressure rear RH brake caliper decreases

- Since the suction valve 1 and the ABS OUT valve close and the cut valve 1 and the ABS IN valve open, the fluid pressure applied on the rear RH brake caliper is reduced by supplying the fluid pressure to the master cylinder via the ABS IN valve and the cut valve 2. The pressurization for the right caliper is controlled separately from the left caliper.

# SYSTEM

[WITH VDC]

## < SYSTEM DESCRIPTION >

During pressure rear LH brake caliper decreases

- Since the suction valve 2 and the ABS OUT valve close and the cut valve 2 and the ABS IN valve open, the fluid pressure applied on the rear LH brake caliper is reduced by supplying the fluid pressure to the master cylinder via the ABS IN valve and the cut valve 2. The pressurization for the left caliper is controlled separately from the right caliper.


### Component Parts and Function

Component	Function
Pump	Returns the brake fluid reserved in reservoir to master cylinder by reducing pressure.
Motor	Activates the pump according to signals from ABS actuator and electric unit (control unit).
Cut valve 1 Cut valve 2	Shuts off the ordinary brake line from master cylinder.
Suction valve 1 Suction valve 2	Supplies the brake fluid from master cylinder to the pump.
ABS IN valve	Switches the fluid pressure line to increase or hold according to signals from control unit.
ABS OUT valve	Switches the fluid pressure line to increase, hold or decrease according to signals from control unit.
Inlet valve	Brake fluid sucked from the reservoir by the pump does not backflow.
Outlet valve	Brake fluid discharged from the pump does not backflow.
Return check valve	Returns the brake fluid from brake caliper and wheel cylinder to master cylinder by bypassing orifice of each valve when brake is released.
Reservoir	Temporarily reserves the brake fluid drained from brake caliper, so that pressure efficiently decreases when decreasing pressure of brake caliper and wheel cylinder.

### VALVE OPERATION (ABS FUNCTION AND EBD FUNCTION)

The control unit built in the ABS actuator and electric unit (control unit) controls fluid pressure of the brake calipers, respectively, by operating each valve.

When Brake Pedal is Applied or ABS Function is in Operation (During Pressure Increases)

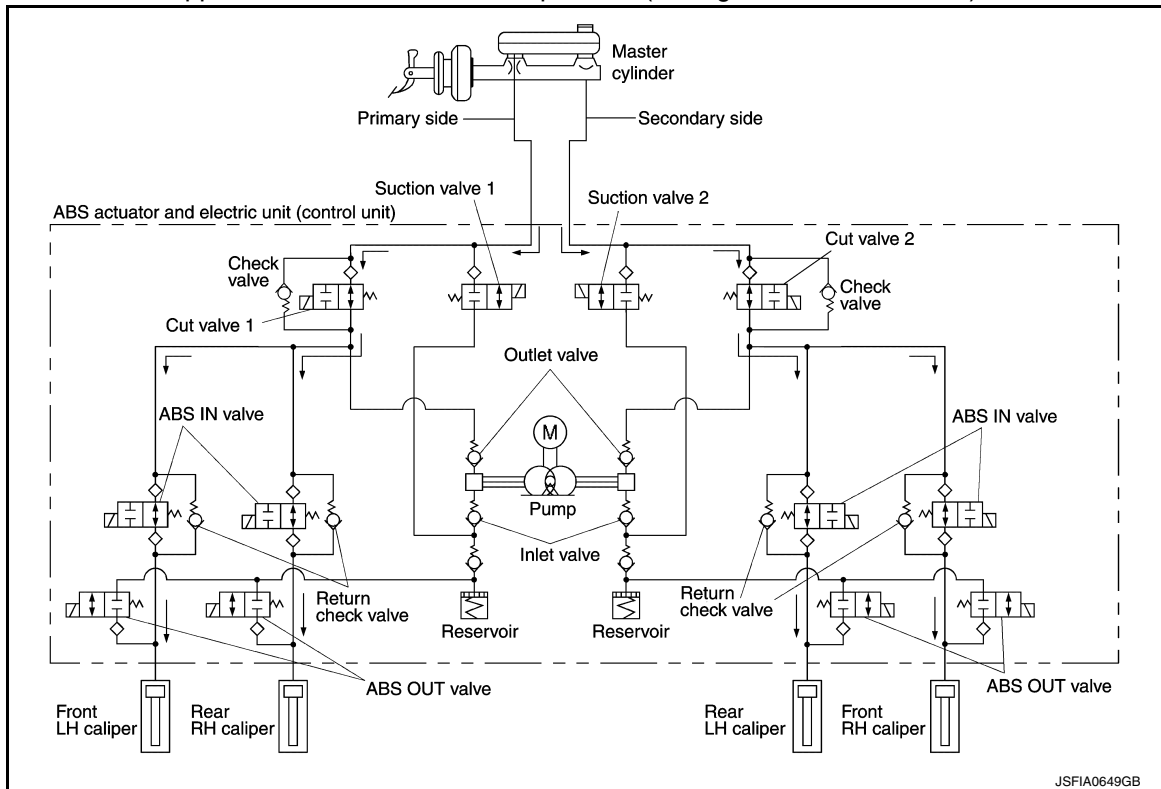

Name	Not activated	During pressure increases
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)

# SYSTEM

## < SYSTEM DESCRIPTION >

**[WITH VDC]**

Name	Not activated	During pressure increases
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper (fluid pressure)	—	Pressure increases

During pressure front RH brake caliper increases

- When the cut valve 2 and the ABS IN valve opens, brake fluid is supplied to the front RH brake caliper from the master cylinder through the ABS IN valve. Brake fluid does not flow into the reservoir because the ABS OUT valve is closed.

During pressure front LH brake caliper increases

- When the cut valve 1 and the ABS IN valve opens, brake fluid is supplied to the front LH brake caliper from the master cylinder through the ABS IN valve. Brake fluid does not flow into the reservoir because the ABS OUT valve is closed.


During pressure rear RH brake caliper increases

- When the cut valve 1 and the ABS IN valve opens, brake fluid is supplied to the rear RH brake caliper from the master cylinder through the ABS IN valve. Brake fluid does not flow into the reservoir because the ABS OUT valve is closed.

During pressure rear LH brake caliper increases

- When the cut valve 2 and the ABS IN valve opens, brake fluid is supplied to the rear LH brake caliper from the master cylinder through the ABS IN valve. Brake fluid does not flow into the reservoir because the ABS OUT valve is closed.

When ABS Function is Starts Operating (During Pressure Holds)

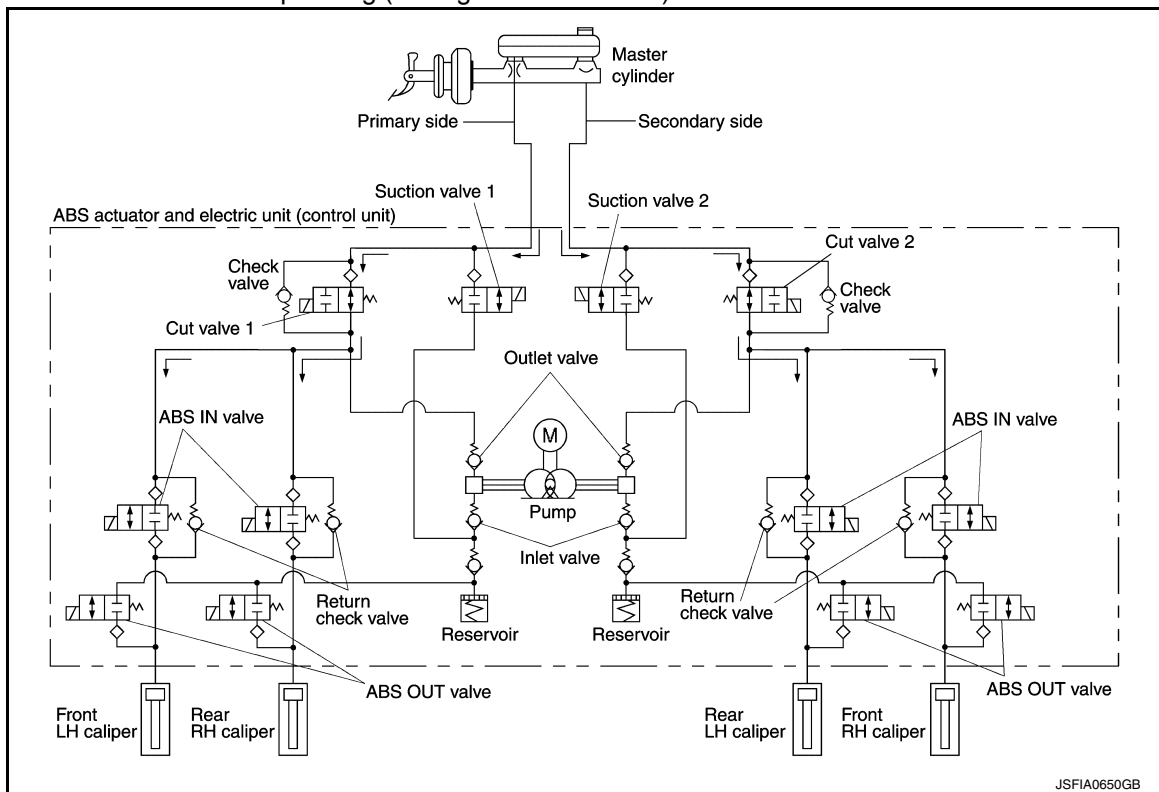

Name	Not activated	During pressure holds
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)

# SYSTEM

## < SYSTEM DESCRIPTION >

**[WITH VDC]**

Name	Not activated	During pressure holds
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is supplied (close)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper (fluid pressure)	—	Pressure holds

During pressure front RH brake caliper holds

- Since the ABS IN valve and the ABS OUT valve are closed, the front RH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the front RH brake caliper.

During pressure front LH brake caliper holds

- Since the ABS IN valve and the ABS OUT valve are closed, the front LH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the front LH brake caliper.


During pressure rear RH brake caliper holds

- Since the ABS IN valve and the ABS OUT valve are closed, the rear RH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the rear RH brake caliper.

During pressure rear LH brake caliper holds

- Since the ABS IN valve and the ABS OUT valve are closed, the rear LH brake caliper, master cylinder, and reservoir are blocked. This maintains fluid pressure applied on the rear LH brake caliper.

When ABS Function is in Operation (During Pressure Decreases)

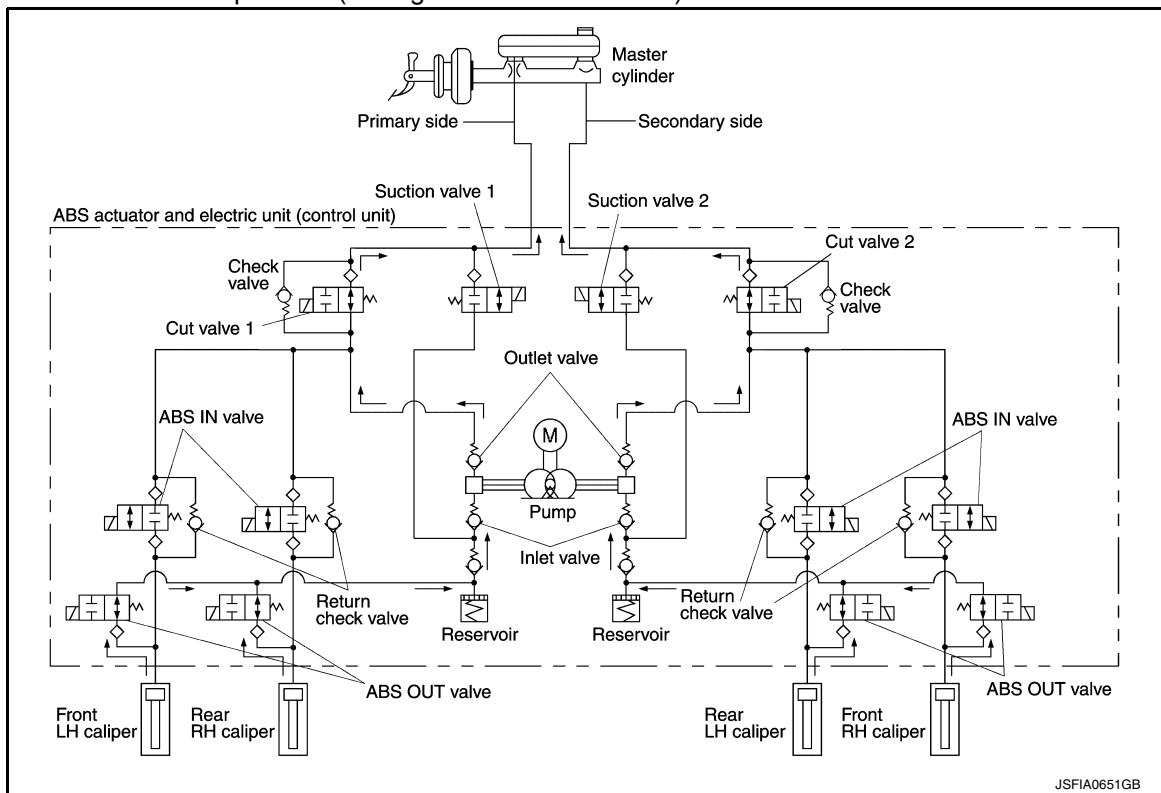

Name	Not activated	During pressure decreases
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is supplied (close)
ABS OUT valve	Power supply is not supplied (close)	Power supply is supplied (open)
Each brake caliper (fluid pressure)	—	Pressure decreases

# SYSTEM

## < SYSTEM DESCRIPTION >

[WITH VDC]

During pressure front RH brake caliper decreases

- Since the ABS IN valve is closed and the ABS OUT valve is opened, fluid pressure applied on the front RH brake caliper is supplied to the reservoir through the ABS OUT valve. This fluid pressure decreases when sent to the master cylinder by the pump.

During pressure front LH brake caliper decreases

- Since the ABS IN valve is closed and the ABS OUT valve is opened, fluid pressure applied on the front LH brake caliper is supplied to the reservoir through the ABS OUT valve. This fluid pressure decreases when sent to the master cylinder by the pump.


During pressure rear RH brake caliper decreases

- Since the ABS IN valve is closed and the ABS OUT valve is opened, fluid pressure applied on the rear RH brake caliper is supplied to the reservoir through the ABS OUT valve. This fluid pressure decreases when sent to the master cylinder by the pump.

During pressure rear LH brake caliper decreases

- Since the ABS IN valve is closed and the ABS OUT valve is opened, fluid pressure applied on the rear LH brake caliper is supplied to the reservoir through the ABS OUT valve. This fluid pressure decreases when sent to the master cylinder by the pump.

When ABS Function is in Operation (During Pressure Increases)

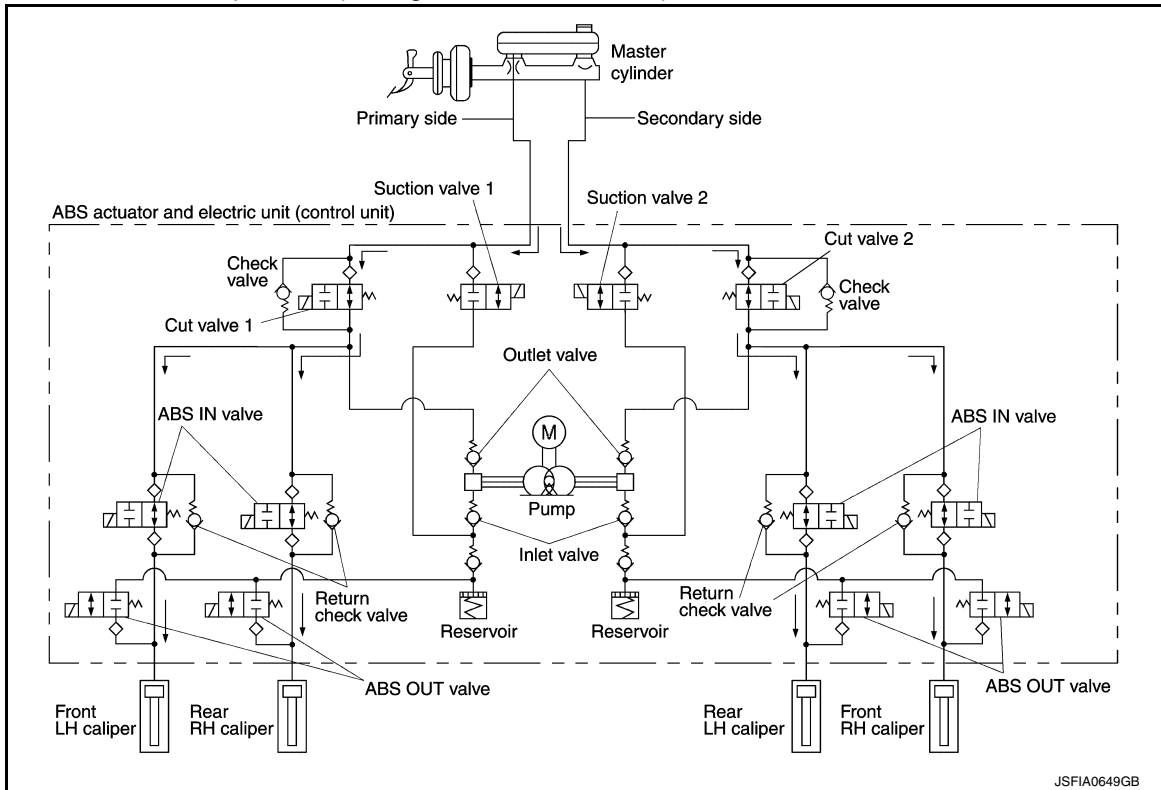

Name	Not activated	During pressure increases
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper (fluid pressure)	—	Pressure increases

During pressure front RH brake caliper increases

# SYSTEM

[WITH VDC]

## < SYSTEM DESCRIPTION >

- Brake fluid is supplied to the front RH brake caliper from the master cylinder through the cut valve 2 and the ABS IN valve. Since the suction valve 2 and the ABS OUT valve is closed, the fluid does not flow into the reservoir. The amount of brake fluid supplied to the front RH brake caliper from the master cylinder is controlled according to time that the ABS IN valve is not energized (time that the ABS IN valve is open).

During pressure front LH brake caliper increases

- Brake fluid is supplied to the front LH brake caliper from the master cylinder through the cut valve 1 and the ABS IN valve. Since the suction valve 1 and the ABS OUT valve is closed, the fluid does not flow into the reservoir. The amount of brake fluid supplied to the front LH brake caliper from the master cylinder is controlled according to time that the ABS IN valve is not energized (time that the ABS IN valve is open).


During pressure rear RH brake caliper increases

- Brake fluid is supplied to the rear RH brake caliper from the master cylinder through the cut valve 1 and the ABS IN valve. Since the suction valve 1 and the ABS OUT valve is closed, the fluid does not flow into the reservoir. The amount of brake fluid supplied to the rear RH brake caliper from the master cylinder is controlled according to time that the ABS IN valve is not energized (time that the ABS IN valve is open).

During pressure rear LH brake caliper increases

- Brake fluid is supplied to the rear LH brake caliper from the master cylinder through the cut valve 2 and the ABS IN valve. Since the suction valve 2 and the ABS OUT valve is closed, the fluid does not flow into the reservoir. The amount of brake fluid supplied to the rear LH brake caliper from the master cylinder is controlled according to time that the ABS IN valve is not energized (time that the ABS IN valve is open).

When Brake Release

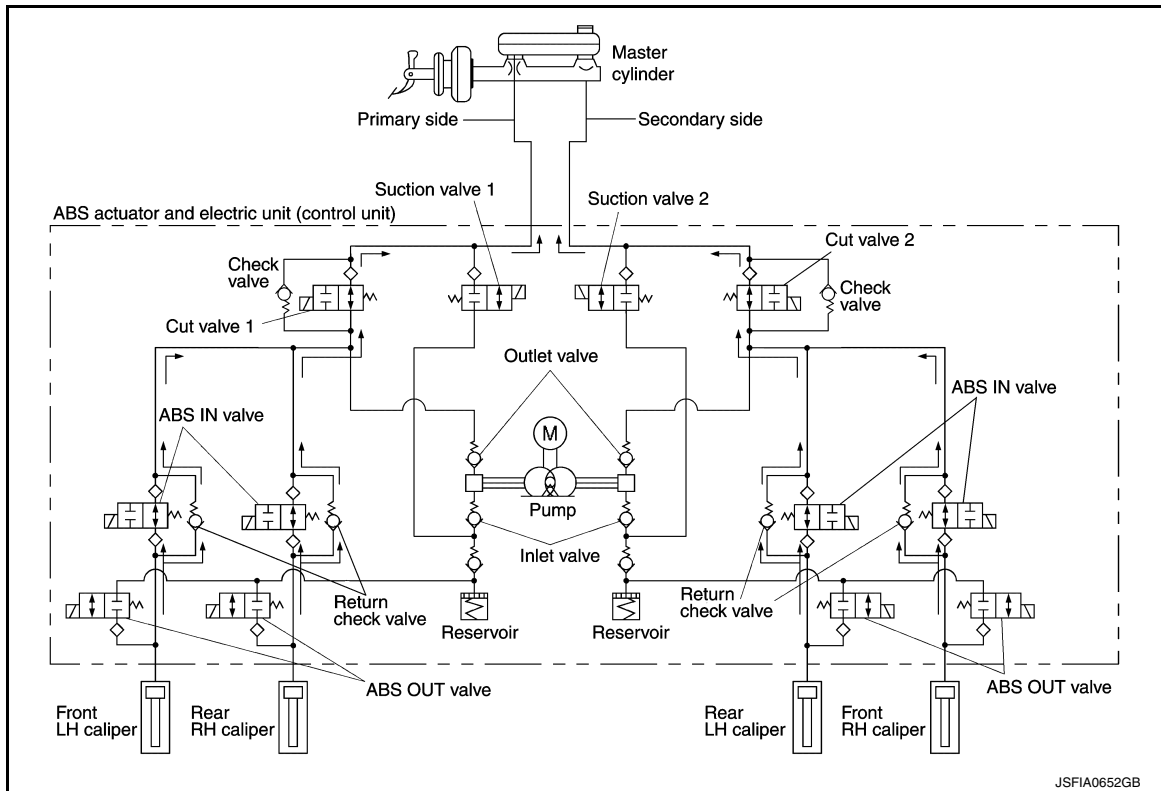

Name	Not activated	During brake release
Cut valve 1	Power supply is not supplied (open)	Power supply is not supplied (open)
Cut valve 2	Power supply is not supplied (open)	Power supply is not supplied (open)
Suction valve 1	Power supply is not supplied (close)	Power supply is not supplied (close)
Suction valve 2	Power supply is not supplied (close)	Power supply is not supplied (close)
ABS IN valve	Power supply is not supplied (open)	Power supply is not supplied (open)
ABS OUT valve	Power supply is not supplied (close)	Power supply is not supplied (close)
Each brake caliper (fluid pressure)	—	Pressure decreases

# SYSTEM

## < SYSTEM DESCRIPTION >

[WITH VDC]

During front RH brake caliper release

- Brake fluid is supplied to the front RH brake caliper through the return check valve of the ABS IN valve and the cut valve 2, and returns to the master cylinder.

During front LH brake caliper release

- Brake fluid is supplied to the front LH brake caliper through the return check valve of the ABS IN valve and the cut valve 1, and returns to the master cylinder.

During rear RH brake caliper release

- Brake fluid is supplied to the rear RH brake caliper through the return check valve of the ABS IN valve and the cut valve 1, and returns to the master cylinder.

During rear LH brake caliper release

- Brake fluid is supplied to the rear LH brake caliper through the return check valve of the ABS IN valve and the cut valve 2, and returns to the master cylinder.

### Component Parts and Function

Component	Function
Pump	Returns the brake fluid reserved in reservoir to master cylinder by reducing pressure.
Motor	Activates the pump according to signals from ABS actuator and electric unit (control unit).
Cut valve 1 Cut valve 2	Shuts off the ordinary brake line from master cylinder.
Suction valve 1 Suction valve 2	Supplies the brake fluid from master cylinder to the pump.
ABS IN valve	Switches the fluid pressure line to increase or hold according to signals from control unit.
ABS OUT valve	Switches the fluid pressure line to increase, hold or decrease according to signals from control unit.
Inlet valve	Brake fluid sucked from the reservoir by the pump does not backflow.
Outlet valve	Brake fluid discharged from the pump does not backflow.
Return check valve	Returns the brake fluid from brake caliper and wheel cylinder to master cylinder by bypassing orifice of each valve when brake is released.
Reservoir	Temporarily reserves the brake fluid drained from brake caliper, so that pressure efficiently decreases when decreasing pressure of brake caliper and wheel cylinder.

### CONDITION FOR TURN ON THE WARNING LAMP

Turns ON when ignition switch turns ON and turns OFF when the system is normal, for bulb check purposes.

Condition (status)	ABS warning lamp	Brake warning lamp	VDC warning lamp
Ignition switch OFF	OFF	OFF	OFF
For approx. 1 second after the ignition switch is turned ON	ON	ON	ON
Approx. 1 second after ignition switch is turned ON (when the system is in normal operation)	OFF	OFF	OFF
After engine starts	OFF	OFF	OFF
When parking brake operates (parking brake switch ON)	OFF	ON	OFF
When brake fluid is less than the specified level (brake fluid level switch ON)	OFF	ON	OFF
VDC function is malfunctioning	OFF	OFF	ON
TCS function is malfunctioning	OFF	OFF	ON
ABS function is malfunctioning	ON	OFF	ON
EBD function is malfunctioning	ON	ON	ON
Brake limited slip differential (BLSD) function is malfunctioning	OFF	OFF	ON
VDC function is operating	OFF	OFF	Blinking
TCS function is operating	OFF	OFF	Blinking

### CONDITION FOR TURN ON THE INDICATOR LAMP



# SYSTEM

[WITH VDC]

## < SYSTEM DESCRIPTION >

- Turns ON when VDC function and TCS function are switched to non-operational status (OFF) by VDC OFF switch.
- Turns ON when ignition switch turns ON and turns OFF when the system is normal, for bulb check purposes.

Condition (status)	VDC OFF indicator lamp
Ignition switch OFF	OFF
For approx. 1 second after the ignition switch is turned ON	ON
Approx. 1 second after ignition switch is turned ON (when the system is in normal operation)	OFF
When VDC OFF switch is ON (VDC function and TCS function are OFF)	ON

## Fail-safe

INFOID:000000012199663

VDC FUNCTION, TCS FUNCTION AND BRAKE LIMITED SLIP DIFFERENTIAL (BLSD) FUNCTION  
VDC warning lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC function, TCS function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function and brake limited slip differential (BLSD) function. However, ABS function and EBD function are operated normally.

## ABS FUNCTION

ABS warning lamp and VDC warning lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC function, TCS function, ABS function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function, ABS function and brake limited slip differential (BLSD) function. However, EBD function is operated normally.

### NOTE:

ABS self-diagnosis sound may be heard the same as in the normal condition, because self-diagnosis is performed when ignition switch turns ON and when vehicle initially starts.

## EBD FUNCTION

ABS warning lamp, brake warning lamp and VDC warning lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SYSTEM

< SYSTEM DESCRIPTION >

[WITH VDC]

DTC	Malfunction detected condition	Fail-safe condition	
C1101	When an open circuit is detected in rear RH wheel sensor circuit.	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function (only when both 2 rear wheels are malfunctioning)</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>	
C1102	When an open circuit is detected in rear LH wheel sensor circuit.		
C1103	When an open circuit is detected in front RH wheel sensor circuit.		
C1104	When an open circuit is detected in front LH wheel sensor circuit.		
C1105	<ul style="list-style-type: none"> <li>• When a short circuit is detected in rear RH wheel sensor circuit.</li> <li>• When power supply voltage of rear RH wheel sensor is in following state.</li> <li>- Rear RH wheel sensor power supply voltage: <math>7.5\text{ V} \geq</math> Rear RH wheel sensor power supply voltage</li> <li>- Rear RH wheel sensor power supply voltage: <math>16\text{ V} \leq</math> Rear RH wheel sensor power supply voltage</li> <li>• When distance between rear RH wheel sensor and rear RH wheel sensor rotor is large.</li> <li>• When installation of rear RH wheel sensor or rear RH wheel sensor rotor is not normal.</li> </ul>		
C1106	<ul style="list-style-type: none"> <li>• When a short circuit is detected in rear LH wheel sensor circuit.</li> <li>• When power supply voltage of rear LH wheel sensor is in following state.</li> <li>- Rear LH wheel sensor power supply voltage: <math>7.5\text{ V} \geq</math> Rear LH wheel sensor power supply voltage</li> <li>- Rear LH wheel sensor power supply voltage: <math>16\text{ V} \leq</math> Rear LH wheel sensor power supply voltage</li> <li>• When distance between rear LH wheel sensor and rear LH wheel sensor rotor is large.</li> <li>• When installation of rear LH wheel sensor or rear LH wheel sensor rotor is not normal.</li> </ul>		
C1107	<ul style="list-style-type: none"> <li>• When a short circuit is detected in front RH wheel sensor circuit.</li> <li>• When power supply voltage of front RH wheel sensor is in following state.</li> <li>- Front RH wheel sensor power supply voltage: <math>7.5\text{ V} \geq</math> Front RH wheel sensor power supply voltage</li> <li>- Front RH wheel sensor power supply voltage: <math>16\text{ V} \leq</math> Front RH wheel sensor power supply voltage</li> <li>• When distance between front RH wheel sensor and front RH wheel sensor rotor is large.</li> <li>• When installation of front RH wheel sensor or front RH wheel sensor rotor is not normal.</li> </ul>		
C1108	<ul style="list-style-type: none"> <li>• When a short circuit is detected in front LH wheel sensor circuit.</li> <li>• When power supply voltage of front LH wheel sensor is in following state.</li> <li>- Front LH wheel sensor power supply voltage: <math>7.5\text{ V} \geq</math> Front LH wheel sensor power supply voltage</li> <li>- Front LH wheel sensor power supply voltage: <math>16\text{ V} \leq</math> Front LH wheel sensor power supply voltage</li> <li>• When distance between front LH wheel sensor and front LH wheel sensor rotor is large.</li> <li>• When installation of front LH wheel sensor or front LH wheel sensor rotor is not normal.</li> </ul>		
C1109	<p>When ignition power supply voltage is in following state.</p> <ul style="list-style-type: none"> <li>• Ignition power supply voltage: <math>10\text{ V} \geq</math> Ignition power supply voltage.</li> <li>• Ignition power supply voltage: <math>16\text{ V} \leq</math> Ignition power supply voltage.</li> </ul>		<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1110	When there is an internal malfunction in the ABS actuator and electric unit (control unit).		
C1111	When a malfunction is detected in motor or motor relay.		<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>

# SYSTEM

< SYSTEM DESCRIPTION >

[WITH VDC]

DTC	Malfunction detected condition	Fail-safe condition	
C1113	When a malfunction is detected in decel G signal, or signal line of yaw rate/side/decel G sensor is open or shorted.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function (AWD)</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>	A
C1115	When difference in wheel speed between any wheel and others is detected the vehicle is driven, because of installation of other tires than specified.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>	B C D E
C1116	When stop lamp switch signal is not input when brake pedal operates.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>	<b>BRC</b>
C1120	When a malfunction is detected in front LH ABS IN valve.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>	G
C1121	When a malfunction is detected in front LH ABS OUT valve.		H
C1122	When a malfunction is detected in front RH ABS IN valve.		I
C1123	When a malfunction is detected in front RH ABS OUT valve.		J
C1124	When a malfunction is detected in rear LH ABS IN valve.		K
C1125	When a malfunction is detected in rear LH ABS OUT valve.		L
C1126	When a malfunction is detected in rear RH ABS IN valve.		M
C1127	When a malfunction is detected in rear RH ABS OUT valve.	N	
C1130	When a malfunction is detected in ECM system.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>	O
C1140	When a malfunction is detected in actuator relay.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>	P
C1143	When a malfunction is detected in steering angle sensor.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function (AWD)</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>	P
C1144	When neutral position adjustment of steering angle sensor is not complete.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>	P

# SYSTEM

< SYSTEM DESCRIPTION >

[WITH VDC]

DTC	Malfunction detected condition	Fail-safe condition
C1145	When a malfunction is detected in yaw rate signal, or signal line of yaw rate/side/decel G sensor is open or shorted.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function (AWD)</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1146	When a malfunction is detected in side G signal, or signal line of yaw rate/side/decel G sensor is open or shorted.	
C1155	When brake fluid level low signal is detected.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1164	When a malfunction is detected in cut valve 1.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1165	When a malfunction is detected in cut valve 2.	
C1166	When a malfunction is detected in suction valve 1.	
C1167	When a malfunction is detected in suction valve 2.	
C1170	When the information in ABS actuator and electric unit (control unit) is not the same.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1176	When brake pedal position switch signal is not input when brake pedal operates.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
U1000	When CAN communication signal is not continuously transmitted or received for 2 seconds or more.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
U1010	When detecting error during the initial diagnosis of CAN controller of ABS actuator and electric unit (control unit).	

## VDC FUNCTION

### VDC FUNCTION : System Description

INFOID:000000012199664


- Side slip or tail slip may occur while driving on a slippery road or intending an urgent evasive driving. VDC function detects side slip status using each sensor when side slip or tail slip is about to occur and improves vehicle stability by brake control and engine output control during driving.
- In addition to ABS function, EBD function and TCS function, target side slip amount is calculated according to steering operation amount from steering angle sensor. By comparing this information with vehicle side slip amount that is calculated from information from yaw rate/side/decel G sensor and wheel sensor, vehicle driv-

# SYSTEM

## < SYSTEM DESCRIPTION >

[WITH VDC]

ing conditions (conditions of understeer or oversteer) are judged and vehicle stability is improved by brake force control on all 4 wheels and engine output control.

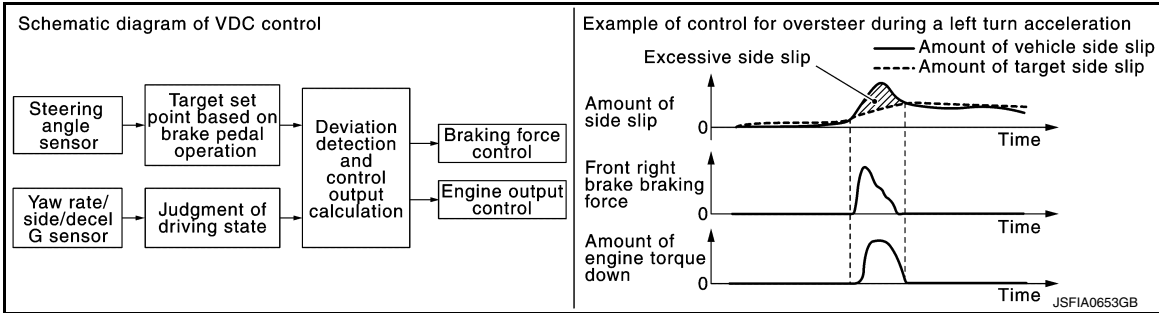

- VDC function can be switched to non-operational status (OFF) by operating VDC OFF switch. In this case, VDC OFF indicator lamp turns ON.
- Control unit portion automatically improves driving stability by performing brake force control as well as engine output control, by transmitting drive signal to actuator portion according to difference between target side slip amount and vehicle side slip amount
- VDC warning lamp blinks while VDC function is in operation and indicates to the driver that the function is in operation.
- CONSULT can be used to diagnose the system diagnosis.
- Fail-safe function is adopted. When a malfunction occurs in VDC function, the control is suspended for VDC function, TCS function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function and brake limited slip differential (BLSD) function. However, ABS function and EBD function are operated normally. Refer to [BRC-25, "Fail-safe"](#).

BRC


**NOTE:**

VDC has the characteristic as described here, This is not the device that helps reckless driving.

## SYSTEM DIAGRAM

**NOTE:**

- TCM is CVT models only.
- AWD control module is AWD models only.

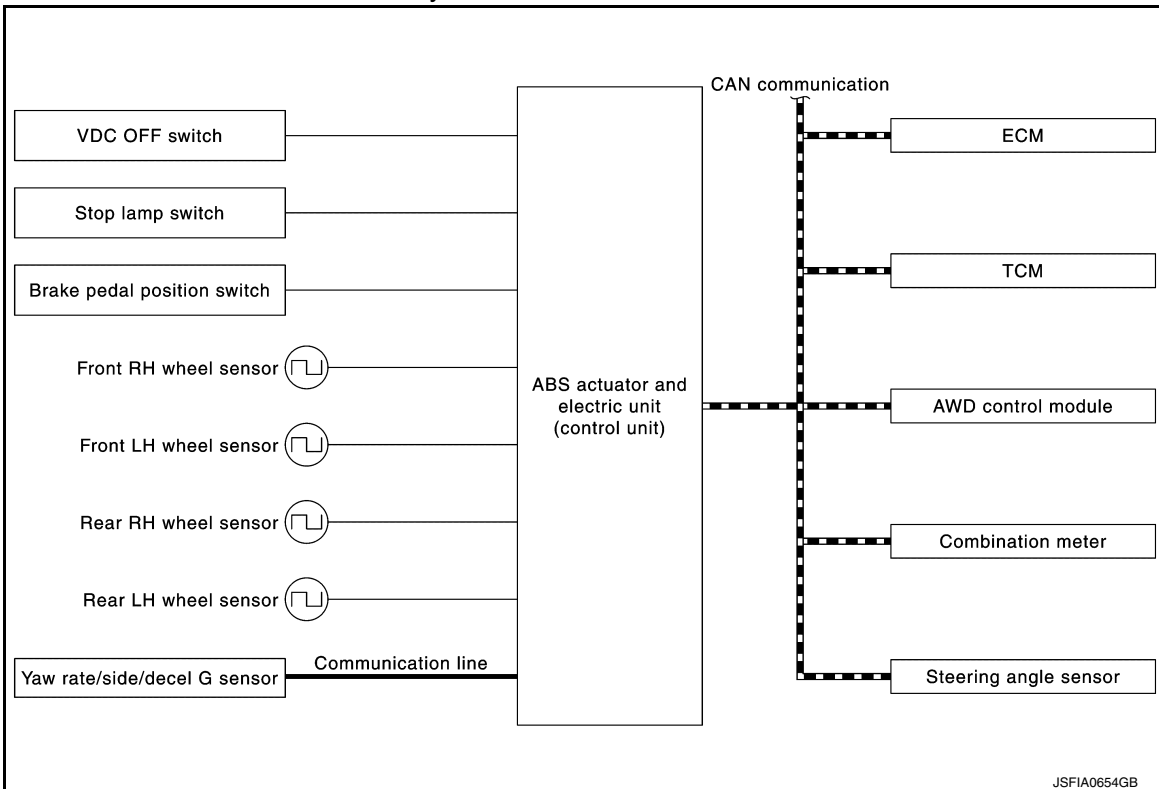

## INPUT SIGNAL AND OUTPUT SIGNAL

Major signal transmission between each unit via communication lines is shown in the following table.

# SYSTEM

< SYSTEM DESCRIPTION >

[WITH VDC]

Component	Signal description
Yaw rate/side/decel G sensor	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via communication line*1. <ul style="list-style-type: none"> <li>• Yaw rate signal</li> <li>• Side G sensor signal</li> <li>• Decel G sensor signal</li> </ul>
ECM	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Acceleration pedal position signal</li> <li>• Engine speed signal</li> </ul> Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Target throttle position signal</li> </ul>
TCM*2	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• N range signal</li> <li>• P range signal</li> <li>• R range signal</li> <li>• Current gear position signal</li> </ul>
AWD control module*3	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Current AWD mode signal</li> </ul>
Steering angle sensor	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Steering angle sensor signal</li> </ul>
Combination meter	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Brake fluid level switch signal</li> </ul> Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• VDC warning lamp signal</li> <li>• VDC OFF indicator lamp signal</li> </ul>

\*1: Communication line between yaw rate/side/decel G sensor and ABS actuator and electric unit (control unit)


\*2: Models with CVT

\*3: AWD models

## OPERATION CHARACTERISTICS

### VDC Function That Prevents Oversteer Tendency

- During a cornering, brake force (brake fluid pressure) is applied on front wheel and rear wheel on the outer side of turn. Moment directing towards the outer side of turn is generated. Oversteer is prevented.

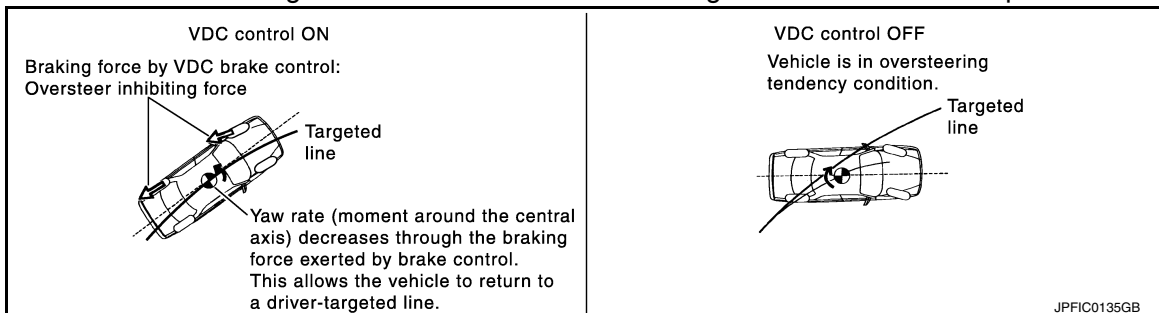


# SYSTEM

## < SYSTEM DESCRIPTION >


[WITH VDC]

- Changing driving lane on a slippery road, when oversteer tendency is judged large, engine output is controlled as well as brake force (brake fluid pressure) of 4 wheels. Oversteer tendency decreases.

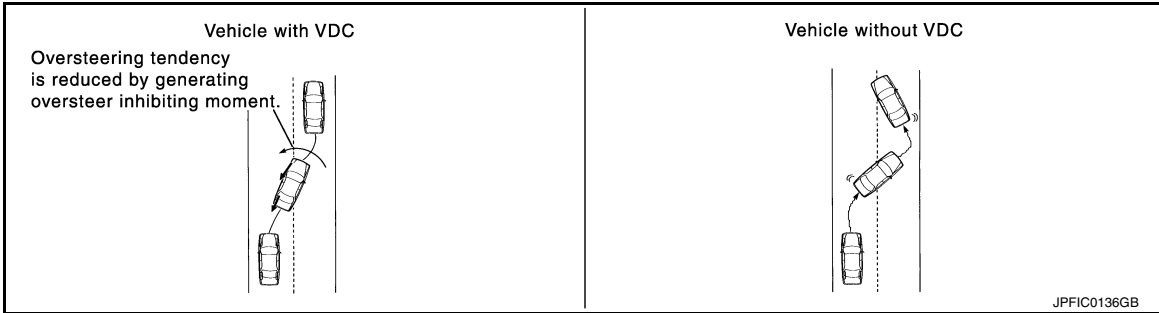


### VDC Function That Prevents Understeer Tendency

- During a cornering, brake force (brake fluid pressure) is applied on front wheel and rear wheel on the inner side of turn. Moment directing towards the inner side of turn is generated. Understeer is prevented.

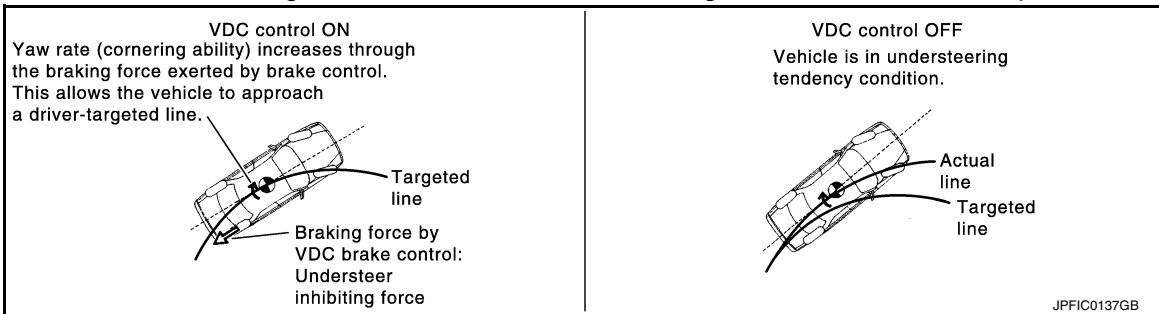

- Applying braking during a cornering on a slippery road, when understeer tendency is judged large, engine output is controlled as well as brake force (brake fluid pressure) of four wheels. Understeer tendency decreases.

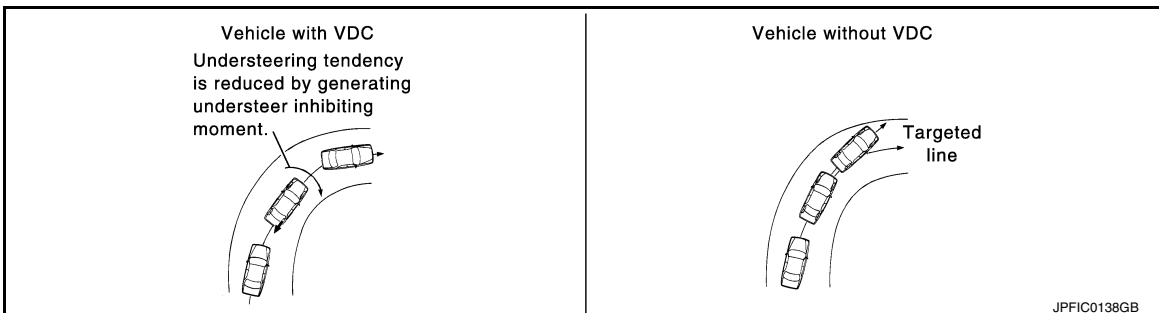

### TCS FUNCTION


A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

TCS FUNCTION : System Description

INFOID:000000012199665


- Wheel spin status of drive wheel is detected by wheel sensor of 4 wheels. Engine output and transmission shift status is controlled so that slip rate of drive wheels is in appropriate level. When wheel spin occurs on drive wheel, ABS actuator and electric unit (control unit) perform brake force control of LH and RH drive wheels (apply brake force by increasing brake fluid pressure of drive wheel) and decrease engine torque by engine torque control. Wheel spin amount decreases. Engine torque is controlled to appropriate level.
- TCS function can be switched to non-operational status (OFF) by operating VDC OFF switch. In this case, VDC OFF indicator lamp turns ON.
- VDC warning lamp blinks while TCS function is in operation and indicates to the driver that the function is in operation.
- CONSULT can be used to diagnose the system diagnosis.
- Fail-safe function is adopted. When a malfunction occurs in TCS function, the control is suspended for VDC function, TCS function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function and brake limited slip differential (BLSD) function. However, ABS function and EBD function are operated normally. Refer to [BRC-25, "Fail-safe"](#).

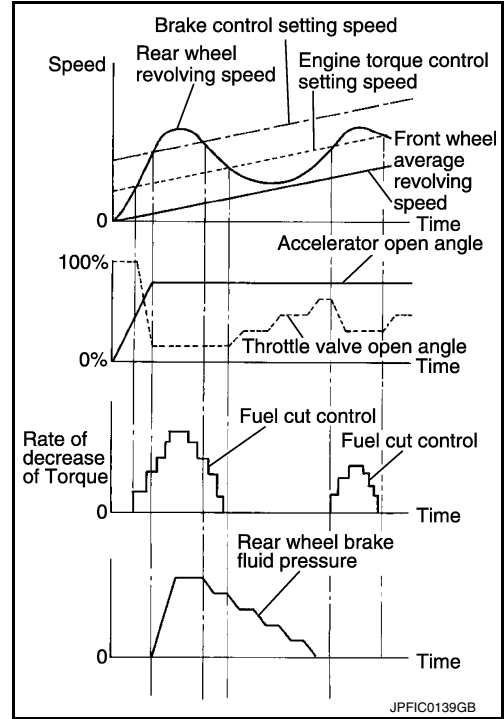

SYSTEM DIAGRAM

NOTE:

- TCM is CVT models only.
- AWD control module is AWD models only.

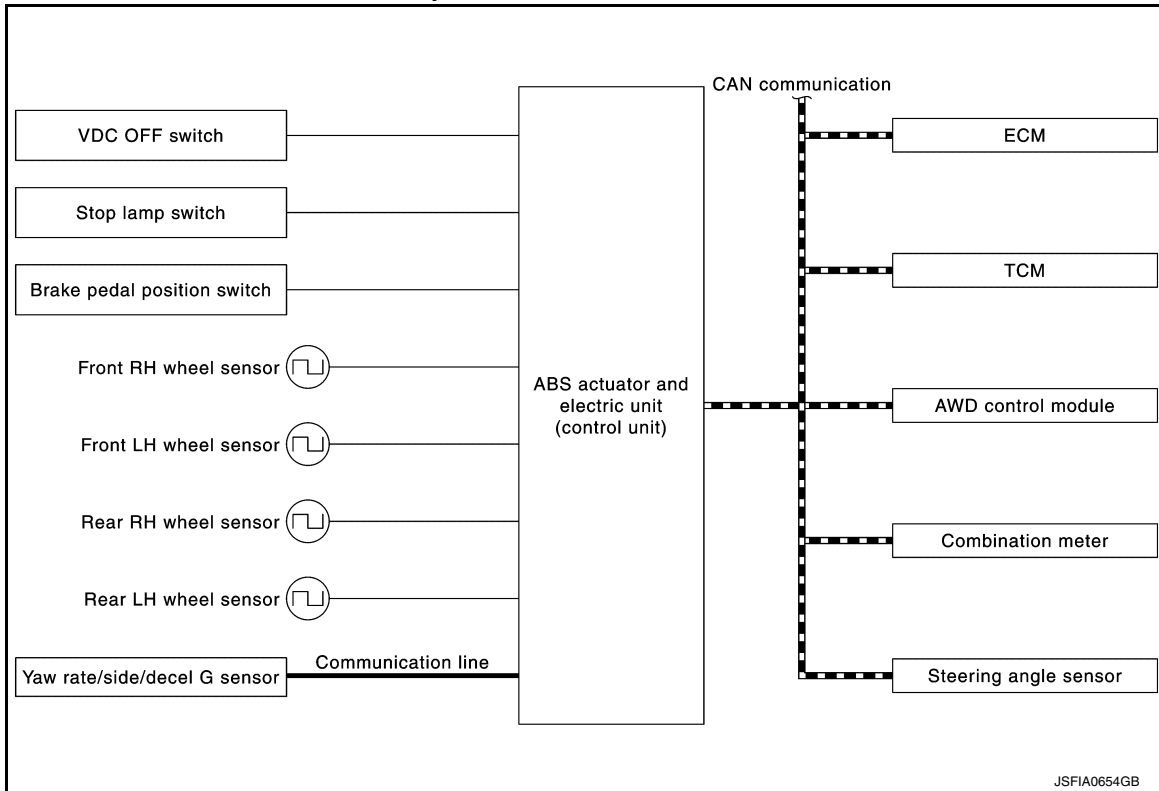

INPUT SIGNAL AND OUTPUT SIGNAL

Major signal transmission between each unit via communication lines is shown in the following table.



# SYSTEM

< SYSTEM DESCRIPTION >

[WITH VDC]

Component	Signal description
Yaw rate/side/decel G sensor	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via communication line*1. <ul style="list-style-type: none"> <li>• Yaw rate signal</li> <li>• Side G sensor signal</li> <li>• Decel G sensor signal</li> </ul>
ECM	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Accelerator pedal position signal</li> <li>• Engine speed signal</li> </ul> Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Target throttle position signal</li> </ul>
TCM*2	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• N range signal</li> <li>• P range signal</li> <li>• R range signal</li> <li>• Current gear position signal</li> </ul>
AWD control module*3	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Current AWD mode signal</li> </ul>
Steering angle sensor	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Steering angle sensor signal</li> </ul>
Combination meter	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Brake fluid level switch signal</li> </ul> Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• VDC warning lamp signal</li> <li>• VDC OFF indicator lamp signal</li> </ul>

\*1: Communication line between yaw rate/side/decel G sensor and ABS actuator and electric unit (control unit)

\*2: Models with CVT

\*3: AWD models

## ABS FUNCTION

### ABS FUNCTION : System Description

INFOID:000000012199666

- By preventing wheel lock through brake force (brake fluid pressure) control that is electronically controlled by detecting wheel speed during braking, stability during emergency braking is improved so that obstacles can be easily bypassed by steering operation.
- During braking, control units calculates wheel speed and pseudo-vehicle speed, and transmits pressure increase, hold or decrease signals to actuator portion according to wheel slip status.

# SYSTEM


[WITH VDC]

## < SYSTEM DESCRIPTION >


- The following effects are obtained by preventing wheel lock during braking.
- Vehicle tail slip is prevented during braking when driving straight.
- Understeer and oversteer tendencies are moderated during braking driving on a corner.
- Obstacles may be easily bypassed by steering operation during braking.
- CONSULT can be used to diagnose the system diagnosis.
- Fail-safe function is adopted. When a malfunction occurs in ABS function, the control is suspended for VDC function, TCS function, ABS function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function, ABS function and brake limited slip differential (BLSD) function. However, EBD function is operated normally. Refer to [BRC-25, "Fail-safe"](#).

### NOTE:

- ABS has the characteristic as described here, but it is not the device that helps reckless driving.
- To stop vehicle efficiently, ABS does not operate and ordinary brake operates at low speed [approx. 10 km/h (6.2 MPH) or less, but differs subject to road conditions).
- Self-diagnosis is performed immediately after when engine starts and when vehicle initially is driven [by vehicle speed approx. 15 km/h (9.3 MPH)]. Motor sounds are generated during self-diagnosis. In addition, brake pedal may be felt heavy when depressing brake pedal lightly. These symptoms are not malfunctions.

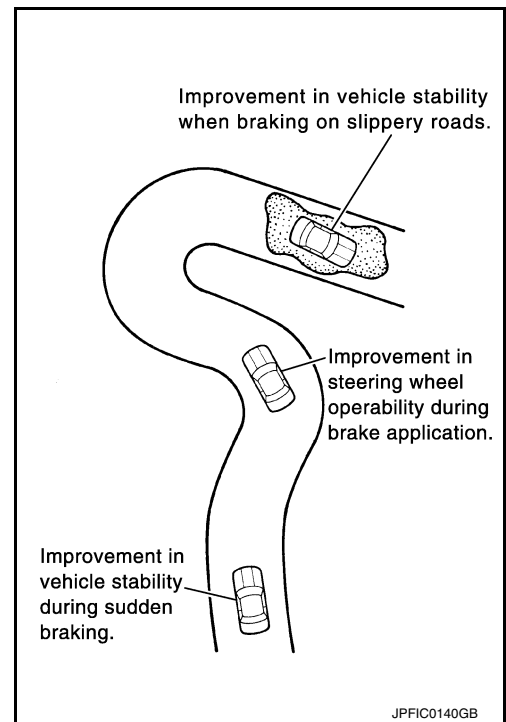

## SYSTEM DIAGRAM

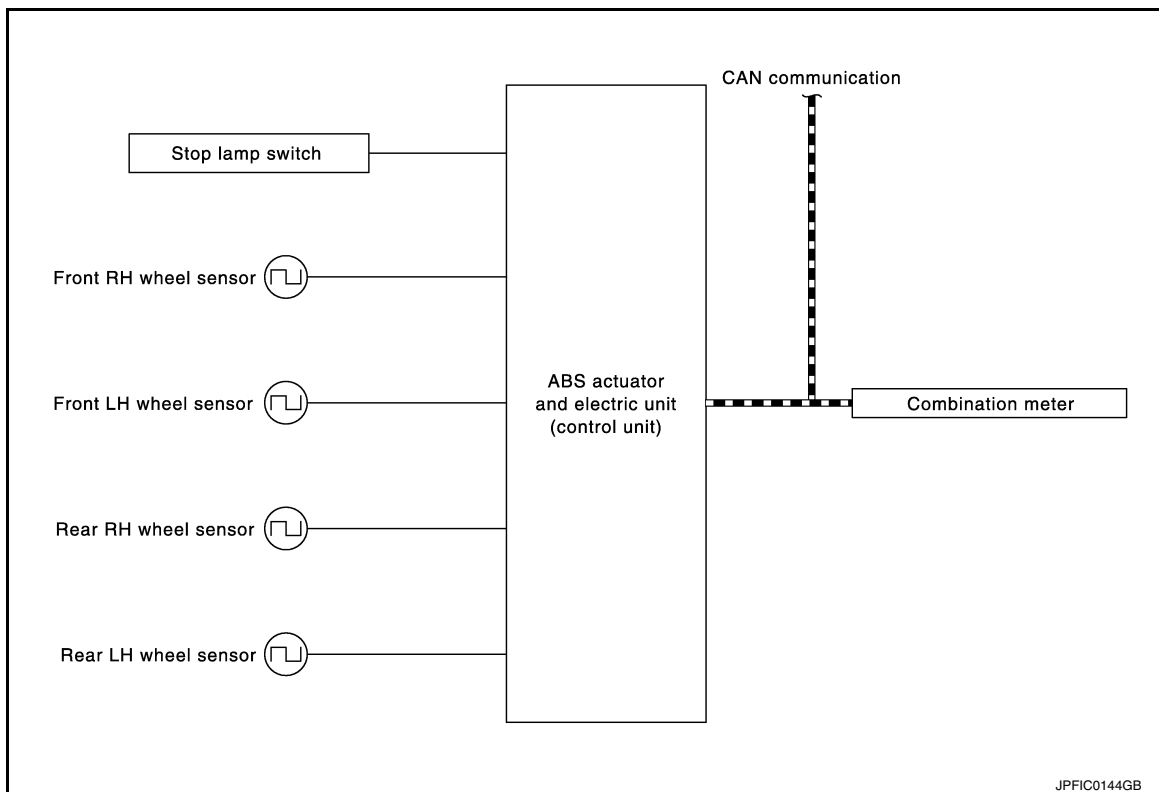

## INPUT SIGNAL AND OUTPUT SIGNAL

Major signal transmission between each unit via communication lines is shown in the following table.


Component	Signal description
Combination meter	Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• VDC warning lamp signal</li> <li>• ABS warning lamp signal</li> </ul>

EBD FUNCTION


EBD FUNCTION : System Description

INFOID:000000012199667


- By preventing rear wheel slip increase through rear wheel brake force (brake fluid pressure) control that is electronically controlled when slight skip on front and rear wheels are detected during braking, stability during braking is improved.
- EBD function is expanded and developed from conventional ABS function and corrects rear wheel brake force to appropriate level by electronic control according to load weight (number of passengers).

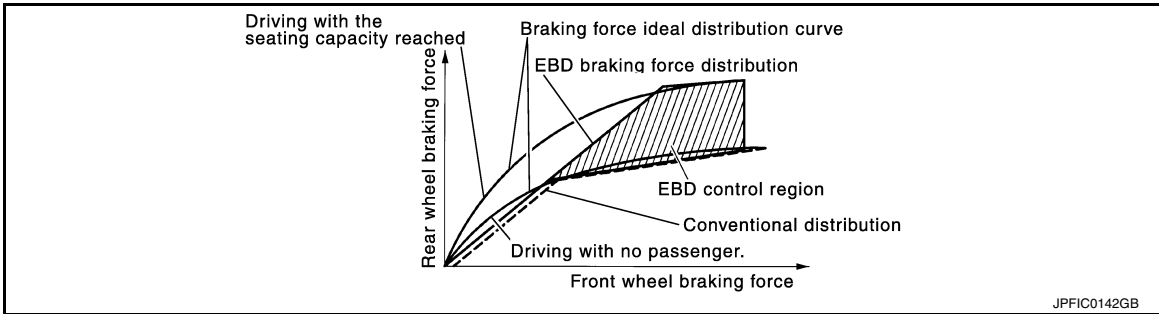

- During braking, control unit portion compares slight slip on front and rear wheels by wheel speed sensor signal, transmits drive signal to actuator portion when rear wheel slip exceeds front wheel slip for the specified value or more, and controls rear wheel brake force (brake fluid pressure) so that increase of rear wheel slip is prevented and slips on front wheel and rear wheel are nearly equalized. ABS control is applied when slip on each wheel increases and wheel speed is the threshold value of ABS control or less.
- CONSULT can be used to diagnose the system diagnosis.
- Fail-safe function is adopted. When a malfunction occurs in EBD function, the control is suspended for VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function. Refer to [BRC-25, "Fail-safe"](#).

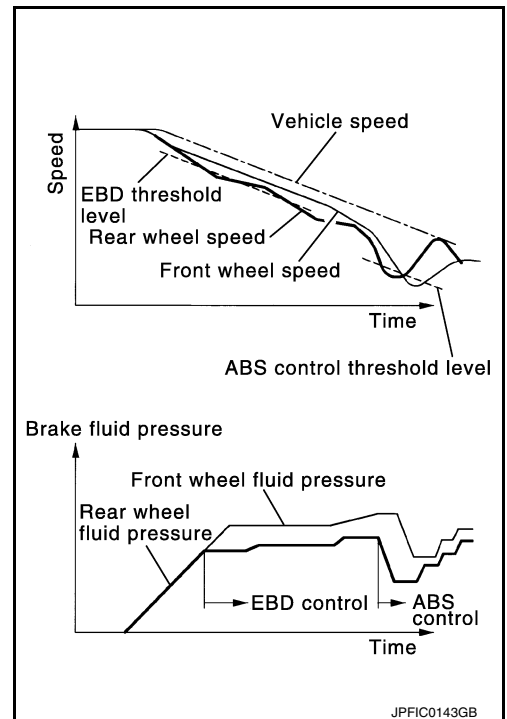

## SYSTEM DIAGRAM

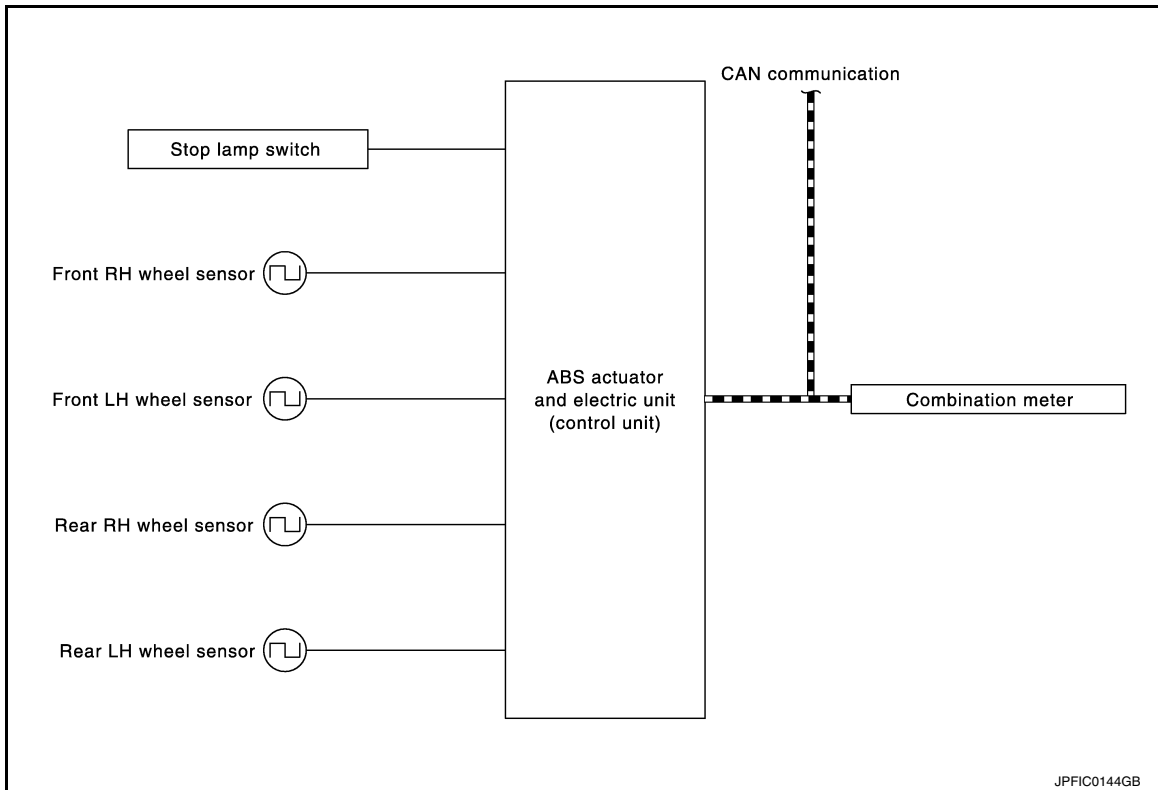

### INPUT SIGNAL AND OUTPUT SIGNAL

Major signal transmission between each unit via communication lines is shown in the following table.

Component	Signal description
Combination meter	Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• VDC warning lamp signal</li> <li>• ABS warning lamp signal</li> <li>• Brake warning lamp signal</li> </ul>

## BRAKE LIMITED SLIP DIFFERENTIAL (BLSD) FUNCTION

### BRAKE LIMITED SLIP DIFFERENTIAL (BLSD) FUNCTION : System Description

INFOID:000000012199668

- LH and RH driving wheel spin is always monitored. If necessary, appropriate brake force is independently applied to LH or RH driving wheel so that one-sided wheel spin is avoided and traction is maintained. Mainly starting ability is improved.
- Brake limited slip differential (BLSD) function operates while VDC function is in non-operational status (OFF) by VDC OFF switch.
- VDC warning lamp blinking while brake limited slip differential (BLSD) function is in operation and indicates to the driver that the function is in operation.
- Slight vibrations are felt on the brake pedal and the operation noises occur, when brake limited slip differential (BLSD) function operates. This is not a malfunction because it is caused by brake limited slip differential (BLSD) function that is normally operated.
- Fail-safe function is adopted. When a malfunction occurs in brake limited slip differential (BLSD) function, the control is suspended for VDC function, TCS function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function and brake limited slip differential (BLSD) function. However, ABS function and EBD function are operated normally. Refer to [BRC-25, "Fail-safe"](#).

### SYSTEM DIAGRAM

#### NOTE:


- TCM is CVT models only.

# SYSTEM

[WITH VDC]

## < SYSTEM DESCRIPTION >

- AWD control module is AWD models only.

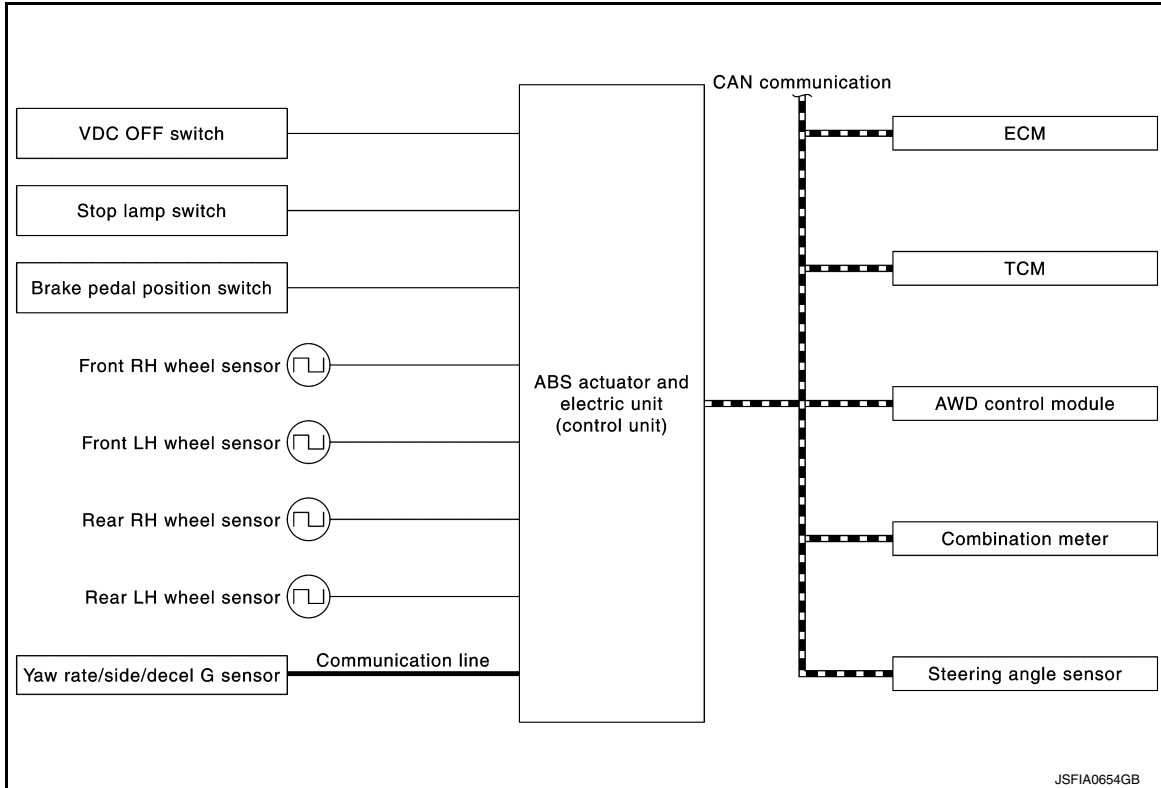

## INPUT SIGNAL AND OUTPUT SIGNAL

Major signal transmission between each unit via communication lines is shown in the following table.

Component	Signal description
Yaw rate/side/decel G sensor	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via communication line* <sup>1</sup> . <ul style="list-style-type: none"> <li>• Yaw rate signal</li> <li>• Side G sensor signal</li> <li>• Decel G sensor signal</li> </ul>
ECM	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Accelerator pedal position signal</li> <li>• Engine speed signal</li> </ul> Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Target throttle position signal</li> </ul>
TCM* <sup>2</sup>	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• N range signal</li> <li>• P range signal</li> <li>• R range signal</li> <li>• Current gear position signal</li> </ul>
AWD control module* <sup>3</sup>	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"> <li>• Current AWD mode signal</li> </ul>

# SYSTEM

[WITH VDC]

## < SYSTEM DESCRIPTION >

Component	Signal description
Steering angle sensor	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"><li>• Steering angle sensor signal</li></ul>
Combination meter	Mainly transmits the following signals to ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"><li>• Brake fluid level switch signal</li></ul> Mainly receives the following signals from ABS actuator and electric unit (control unit) via CAN communication. <ul style="list-style-type: none"><li>• VDC warning lamp signal</li></ul>

\*1: Communication line between yaw rate/side/decal G sensor and ABS actuator and electric unit (control unit)

\*2: Models with CVT

\*3: AWD models

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[WITH VDC]

## DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

### CONSULT Function

INFOID:000000012199669

### APPLICATION ITEMS

CONSULT can display each diagnostic item using the diagnostic test modes as follows.

Mode	Function description
ECU identification	Parts number of ABS actuator and electric unit (control unit) can be read.
Self Diagnostic Result	Self-diagnostic results and freeze frame data can be read and erased quickly.*1
DATA MONITOR	Input/Output data in the ABS actuator and electric unit (control unit) can be read.
ACTIVE TEST	Diagnostic Test Mode in which CONSULT drives some actuators apart from the ABS actuator and electric unit (control unit) and also shifts some parameters in a specified range.
Function Test*2	This mode can show results of self-diagnosis of ECU with either "OK" or "NG". For engine, more practical tests regarding sensors/switches and/or actuators are available.
Work support	Components can be quickly and accurately adjusted.

\*1: The following diagnosis information is erased by erasing.

- DTC
- Freeze frame data (FFD)

\*2: Although "Function Test" is selectable, do not use its.

### ECU IDENTIFICATION

ABS actuator and electric unit (control unit) part number can be read.

### SELF DIAGNOSTIC RESULT

Refer to [BRC-50, "DTC Index"](#).

When "CRNT" is displayed on self-diagnosis result

- The system is presently malfunctioning.

When "PAST" is displayed on self-diagnosis result

- System malfunction in the past is detected, but the system is presently normal.

Freeze frame data (FFD)

When DTC is detected, a vehicle state shown below is recorded and displayed on CONSULT.

Item name	Display item
IGN counter (0 – 39)	<p>The number of times that ignition switch is turned ON after the DTC is detected is displayed.</p> <ul style="list-style-type: none"> <li>• When "0" is displayed: It indicates that the system is presently malfunctioning.</li> <li>• When except "0" is displayed: It indicates that system malfunction in the past is detected, but the system is presently normal.</li> </ul> <p><b>NOTE:</b> Each time when ignition switch is turned OFF to ON, numerical number increases in 1 → 2 → 3...38 → 39. When the operation number of times exceeds 39, the number do not increase and "39" is displayed until self-diagnosis is erased.</p>

### DATA MONITOR

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

×: Applicable

Item (Unit)	Monitor item selection		Note
	ECU INPUT SIGNALS	MAIN SIGNALS	
FR LH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by front LH wheel sensor is displayed.
FR RH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by front RH wheel sensor is displayed.

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[WITH VDC]

Item (Unit)	Monitor item selection		Note
	ECU INPUT SIGNALS	MAIN SIGNALS	
RR LH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by rear LH wheel sensor is displayed.
RR RH SENSOR [km/h (MPH)]	×	×	Wheel speed calculated by rear RH wheel sensor is displayed.
DECEL G-SEN (G)	×	×	Decel G detected by decel G sensor is displayed.
FR RH IN SOL (On/Off)		×	Operation status of front RH wheel ABS IN valve is displayed.
FR RH OUT SOL (On/Off)		×	Operation status of front RH wheel ABS OUT valve is displayed.
FR LH IN SOL (On/Off)		×	Operation status of front LH wheel ABS IN valve is displayed.
FR LH OUT SOL (On/Off)		×	Operation status of front LH wheel ABS OUT valve is displayed.
RR RH IN SOL (On/Off)		×	Operation status of rear RH wheel ABS IN valve is displayed.
RR RH OUT SOL (On/Off)		×	Operation status of rear RH wheel ABS OUT valve is displayed.
RR LH IN SOL (On/Off)		×	Operation status of rear LH wheel ABS IN valve is displayed.
RR LH OUT SOL (On/Off)		×	Operation status of rear LH wheel ABS OUT valve is displayed.
EBD WARN LAMP (On/Off)			Brake warning lamp ON/OFF status is displayed. *
STOP LAMP SW (On/Off)	×	×	Stop lamp switch signal input status is displayed.
MOTOR RELAY (On/Off)		×	ABS motor and motor relay status is displayed.
ACTUATOR RLY (On/Off)		×	ABS actuator relay status is displayed.
ABS WARN LAMP (On/Off)		×	ABS warning lamp ON/OFF status is displayed. *
OFF LAMP (On/Off)		×	VDC OFF indicator lamp ON/OFF status is displayed. *
OFF SW (On/Off)	×	×	VDC OFF switch signal input status is displayed.
SLIP/VDC LAMP (On/Off)		×	VDC warning lamp ON/OFF status is displayed. *
BATTERY VOLT (V)	×	×	Voltage supplied to ABS actuator and electric unit (control unit) is displayed.
GEAR	×	×	Current gear position judged from current gear position signal is displayed.
ENGINE SPEED [tr/min (rpm)]	×	×	Engine speed status is displayed.
YAW RATE SEN (d/s)	×	×	Yaw rate detected by yaw rate sensor is displayed.
R POSI SIG (On/Off)			R range signal input status judged from R range signal is displayed.
4WD MODE MON (2WD/AUTO)	×	×	AWD control status is displayed.
N POSI SIG (On/Off)			N range signal input status judged from N range signal is displayed.



# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[WITH VDC]

Item (Unit)	Monitor item selection		Note
	ECU INPUT SIGNALS	MAIN SIGNALS	
P POSI SIG (On/Off)			P range signal input status judged from P range signal is displayed.
CV1 (On/Off)			Cut valve 1 operation status is displayed.
CV2 (On/Off)			Cut valve 2 operation status is displayed.
SV1 (On/Off)			Suction valve 1 operation status is displayed.
SV2 (On/Off)			Suction valve 2 operation status is displayed.
STOP LAMP SW2 (On/Off)			Brake pedal position switch signal input status is displayed.
ACCEL POS SIG (%)	×		Displays the Accelerator pedal position
SIDE G-SENSOR (m/s <sup>2</sup> )	×		Side G detected by side G sensor is displayed.
STR ANGLE SIG (deg)	×		Steering angle detected by steering angle sensor is displayed.
EBD SIGNAL (On/Off)			EBD operation status is displayed.
ABS SIGNAL (On/Off)			ABS operation status is displayed.
TCS SIGNAL (On/Off)			TCS operation status is displayed.
VDC SIGNAL (On/Off)			VDC operation status is displayed.
EBD FAIL SIG (On/Off)			EBD fail-safe signal status is displayed.
ABS FAIL SIG (On/Off)			ABS fail-safe signal status is displayed.
TCS FAIL SIG (On/Off)			TCS fail-safe signal status is displayed.
VDC FAIL SIG (On/Off)			VDC fail-safe signal status is displayed.
CRANKING SIG (On/Off)			Cranking status is displayed.
FLUID LEV SW (On/Off)	×		Brake fluid level signal input status via CAN communication is displayed.

\*: Refer to [BRC-14, "System Description"](#) for ON/OFF conditions of each warning lamp.

## ACTIVE TEST

The active test is used to determine and identify details of a malfunction, based on self-diagnosis test result and data obtained in the DATA MONITOR. In response to instructions from CONSULT, instead of those from ABS actuator and electric unit (control unit) on the vehicle, a drive signal is sent to the actuator to check its operation.

### CAUTION:

- Never perform ACTIVE TEST while driving the vehicle.
- Always bleed air from brake system before ACTIVE TEST.
- Never perform ACTIVE TEST when system is malfunctioning.

### NOTE:

- "TEST IS STOPPED" is displayed approx. 10 seconds after operation start.
- When performing active test again after "TEST IS STOPPED" is displayed, select "BACK".
- ABS warning lamp and brake warning lamp may turn ON during active test. This is not a malfunction.

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[WITH VDC]

ABS IN Valve and ABS OUT Valve

When "Up", "Keep" or "Down" is selected on display screen, the following items are displayed when system is normal.

Test item	Display item	Display		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*

\*: Immediately after being selected, status is "On". Status changes to "Off" after approx. 2 seconds.

ABS IN Valve (ACT) and ABS OUT Valve (ACT)

When "Up", "ACT KEEP" or "ACT UP" is selected on display screen, the following items are displayed when system is normal.

Test item	Display item	Display		
		Up	ACT KEEP	ACT UP
FR RH ABS SOLE-NOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	CV1	Off	Off	Off
	CV2	Off	On	On
	SV1	Off	Off	Off
	SV2	Off	Off	On*
FR LH ABS SOLE-NOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	CV2	Off	Off	Off
	SV1	Off	Off	On*
	SV2	Off	Off	Off
RR RH ABS SOLE-NOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	CV2	Off	Off	Off
	SV1	Off	Off	On*
	SV2	Off	Off	Off
RR LH ABS SOLE-NOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	CV1	Off	Off	Off
	CV2	Off	On	On
	SV1	Off	Off	Off
	SV2	Off	Off	On*

\*: Immediately after being selected, status is "On". Status changes to "Off" after approx. 2 seconds.

ABS Motor

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[WITH VDC]

When "On" or "Off" is selected on display screen, the following items are displayed when system is normal.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY	On	On

A

B

C

D

E

**BRC**

G

H

I

J

K

L

M

N

O

P

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[WITH VDC]

## ECU DIAGNOSIS INFORMATION

### ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

#### Reference Value

INFOID:000000012199670

#### CONSULT DATA MONITOR STANDARD VALUE

##### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition	Reference values in normal operation
FR LH SENSOR	Vehicle stopped	0.00 km/h (MPH)
	When driving straight ahead*1	Nearly matches the speedometer display (within $\pm 10\%$ )
FR RH SENSOR	Vehicle stopped	0.00 km/h (MPH)
	When driving straight ahead*1	Nearly matches the speedometer display (within $\pm 10\%$ )
RR LH SENSOR	Vehicle stopped	0.00 km/h (MPH)
	When driving straight ahead*1	Nearly matches the speedometer display (within $\pm 10\%$ )
RR RH SENSOR	Vehicle stopped	0.00 km/h (MPH)
	When driving straight ahead*1	Nearly matches the speedometer display (within $\pm 10\%$ )
DECEL G-SEN	When stopped	-0.11 – 0.11 G
	During acceleration	Negative value
	During deceleration	Positive value
FR RH IN SOL*2	Active	On
	Not activated	Off
FR RH OUT SOL*2	Active	On
	Not activated	Off
FR LH IN SOL*2	Active	On
	Not activated	Off
FR LH OUT SOL*2	Active	On
	Not activated	Off
RR RH IN SOL*2	Active	On
	Not activated	Off
RR RH OUT SOL*2	Active	On
	Not activated	Off
RR LH IN SOL*2	Active	On
	Not activated	Off
RR LH OUT SOL*2	Active	On
	Not activated	Off
EBD WARN LAMP	When brake warning lamp is ON*3	On
	When brake warning lamp is OFF*3	Off
STOP LAMP SW	Brake pedal depressed	On
	Brake pedal not depressed	Off
MOTOR RELAY	Active	On
	Not activated	Off

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[WITH VDC]

Monitor item	Condition	Reference values in normal operation
ACTUATOR RLY	Active	On
	Not activated (in fail-safe mode)	Off
ABS WARN LAMP	When ABS warning lamp is ON <sup>*3</sup>	On
	When brake warning lamp is OFF <sup>*3</sup>	Off
OFF LAMP	When VDC OFF indicator lamp is ON <sup>*3</sup>	On
	When VDC OFF indicator lamp is OFF <sup>*3</sup>	Off
OFF SW	VDC OFF switch ON	On
	VDC OFF switch OFF	Off
SLIP/VDC LAMP	When VDC warning lamp is ON <sup>*3</sup>	On
	When VDC warning lamp is OFF <sup>*3</sup>	Off
BATTERY VOLT	Ignition switch ON	10 – 16 V
GEAR	Driving	1 – 8 Depending on shift status
ENGINE SPEED	Engine stopped	0 rpm
	Engine running	Almost same reading as tachometer
YAW RATE SEN	Vehicle stopped	Approx. 0 d/s
	Turning right	Negative value
	Turning left	Positive value
R POSI SIG	When selector lever is in the R position	On
	When selector lever is in the other position than R	Off
4WD MODE MON	Always	Depending on AWD control status
N POSI SIG	When selector lever is in the N position	On
	When selector lever is in the other position than N	Off
P POSI SIG	When selector lever is in the P position	On
	When selector lever is in the other position than P	Off
CV1 <sup>*2</sup>	Active	On
	Not activated	Off
CV2 <sup>*2</sup>	Active	On
	Not activated	Off
SV1 <sup>*2</sup>	Active	On
	Not activated	Off
SV2 <sup>*2</sup>	Active	On
	Not activated	Off
STOP LAMP SW2	Brake pedal depressed	On
	Brake pedal not depressed	Off
ACCEL POS SIG	Never depress accelerator pedal (with ignition switch ON)	0%
	Depress accelerator pedal (with ignition switch ON)	0 – 100%
SIDE G-SENSOR	Vehicle stopped	Approx. 0 m/s <sup>2</sup>
	Turning right	Negative value
	Turning left	Positive value
STR ANGLE SIG	When driving straight	0±2.5°
	When steering wheel is steered to RH by 90°	Approx. +90°
	When steering wheel is steered to LH by 90°	Approx. -90°

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[WITH VDC]

Monitor item	Condition	Reference values in normal operation
EBD SIGNAL	EBD is activated	On
	EBD is not activated	Off
ABS SIGNAL	ABS is activated	On
	ABS is not activated	Off
TCS SIGNAL	TCS is activated	On
	TCS is not activated	Off
VDC SIGNAL	VDC is activated	On
	VDC is not activated	Off
EBD FAIL SIG	In EBD fail-safe	On
	EBD is normal	Off
ABS FAIL SIG	In ABS fail-safe	On
	ABS is normal	Off
TCS FAIL SIG	In TCS fail-safe	On
	TCS is normal	Off
VDC FAIL SIG	In VDC fail-safe	On
	VDC is normal	Off
CRANKING SIG	At cranking	On
	Other than at cranking	Off
FLUID LEV SW	When brake fluid level switch is ON (brake fluid level is less than the specified level)	On
	When brake fluid level switch is OFF	Off

\*1: Confirm tire pressure is standard value.

\*2: Refer to "valve operation" in [BRC-14, "System Description"](#) for valve operation of each valve.

\*3: Refer to [BRC-14, "System Description"](#) for ON/OFF conditions of each warning lamp and indicator lamp.

## Fail-safe

INFOID:000000012199671

VDC FUNCTION, TCS FUNCTION AND BRAKE LIMITED SLIP DIFFERENTIAL (BLSD) FUNCTION  
VDC warning lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC function, TCS function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function and brake limited slip differential (BLSD) function. However, ABS function and EBD function are operated normally.

## ABS FUNCTION

ABS warning lamp and VDC warning lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC function, TCS function, ABS function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function, ABS function and brake limited slip differential (BLSD) function. However, EBD function is operated normally.

### NOTE:

ABS self-diagnosis sound may be heard the same as in the normal condition, because self-diagnosis is performed when ignition switch turns ON and when vehicle initially starts.

## EBD FUNCTION

ABS warning lamp, brake warning lamp and VDC warning lamp in combination meter turn ON when a malfunction occurs in system [ABS actuator and electric unit (control unit)]. The control is suspended for VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function. The vehicle status becomes the same as models without VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function.

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[WITH VDC]

DTC	Malfunction detected condition	Fail-safe condition	A
C1101	When an open circuit is detected in rear RH wheel sensor circuit.	The following functions are suspended. • VDC function • TCS function • ABS function • EBD function (only when both 2 rear wheels are malfunctioning) • Brake limited slip differential (BLSD) function	A
C1102	When an open circuit is detected in rear LH wheel sensor circuit.		B
C1103	When an open circuit is detected in front RH wheel sensor circuit.		C
C1104	When an open circuit is detected in front LH wheel sensor circuit.		D
C1105	<ul style="list-style-type: none"> <li>• When a short circuit is detected in rear RH wheel sensor circuit.</li> <li>• When power supply voltage of rear RH wheel sensor is in following state.                             <ul style="list-style-type: none"> <li>- Rear RH wheel sensor power supply voltage: <math>7.5\text{ V} \geq</math> Rear RH wheel sensor power supply voltage</li> <li>- Rear RH wheel sensor power supply voltage: <math>16\text{ V} \leq</math> Rear RH wheel sensor power supply voltage</li> </ul> </li> <li>• When distance between rear RH wheel sensor and rear RH wheel sensor rotor is large.</li> <li>• When installation of rear RH wheel sensor or rear RH wheel sensor rotor is not normal.</li> </ul>		E
C1106	<ul style="list-style-type: none"> <li>• When a short circuit is detected in rear LH wheel sensor circuit.</li> <li>• When power supply voltage of rear LH wheel sensor is in following state.                             <ul style="list-style-type: none"> <li>- Rear LH wheel sensor power supply voltage: <math>7.5\text{ V} \geq</math> Rear LH wheel sensor power supply voltage</li> <li>- Rear LH wheel sensor power supply voltage: <math>16\text{ V} \leq</math> Rear LH wheel sensor power supply voltage</li> </ul> </li> <li>• When distance between rear LH wheel sensor and rear LH wheel sensor rotor is large.</li> <li>• When installation of rear LH wheel sensor or rear LH wheel sensor rotor is not normal.</li> </ul>		G
C1107	<ul style="list-style-type: none"> <li>• When a short circuit is detected in front RH wheel sensor circuit.</li> <li>• When power supply voltage of front RH wheel sensor is in following state.                             <ul style="list-style-type: none"> <li>- Front RH wheel sensor power supply voltage: <math>7.5\text{ V} \geq</math> Front RH wheel sensor power supply voltage</li> <li>- Front RH wheel sensor power supply voltage: <math>16\text{ V} \leq</math> Front RH wheel sensor power supply voltage</li> </ul> </li> <li>• When distance between front RH wheel sensor and front RH wheel sensor rotor is large.</li> <li>• When installation of front RH wheel sensor or front RH wheel sensor rotor is not normal.</li> </ul>		H
C1108	<ul style="list-style-type: none"> <li>• When a short circuit is detected in front LH wheel sensor circuit.</li> <li>• When power supply voltage of front LH wheel sensor is in following state.                             <ul style="list-style-type: none"> <li>- Front LH wheel sensor power supply voltage: <math>7.5\text{ V} \geq</math> Front LH wheel sensor power supply voltage</li> <li>- Front LH wheel sensor power supply voltage: <math>16\text{ V} \leq</math> Front LH wheel sensor power supply voltage</li> </ul> </li> <li>• When distance between front LH wheel sensor and front LH wheel sensor rotor is large.</li> <li>• When installation of front LH wheel sensor or front LH wheel sensor rotor is not normal.</li> </ul>		I
C1109	When ignition power supply voltage is in following state. <ul style="list-style-type: none"> <li>• Ignition power supply voltage: <math>10\text{ V} \geq</math> Ignition power supply voltage.</li> <li>• Ignition power supply voltage: <math>16\text{ V} \leq</math> Ignition power supply voltage.</li> </ul>		J
C1110	When there is an internal malfunction in the ABS actuator and electric unit (control unit).		K
C1111	When a malfunction is detected in motor or motor relay.		L

BRC

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[WITH VDC]

DTC	Malfunction detected condition	Fail-safe condition
C1113	When a malfunction is detected in decel G signal, or signal line of yaw rate/side/decel G sensor is open or shorted.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function (AWD)</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1115	When difference in wheel speed between any wheel and others is detected the vehicle is driven, because of installation of other tires than specified.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1116	When stop lamp switch signal is not input when brake pedal operates.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1120	When a malfunction is detected in front LH ABS IN valve.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1121	When a malfunction is detected in front LH ABS OUT valve.	
C1122	When a malfunction is detected in front RH ABS IN valve.	
C1123	When a malfunction is detected in front RH ABS OUT valve.	
C1124	When a malfunction is detected in rear LH ABS IN valve.	
C1125	When a malfunction is detected in rear LH ABS OUT valve.	
C1126	When a malfunction is detected in rear RH ABS IN valve.	
C1127	When a malfunction is detected in rear RH ABS OUT valve.	
C1130	When a malfunction is detected in ECM system.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1140	When a malfunction is detected in actuator relay.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1143	When a malfunction is detected in steering angle sensor.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function (AWD)</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1144	When neutral position adjustment of steering angle sensor is not complete.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>



# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[WITH VDC]

DTC	Malfunction detected condition	Fail-safe condition
C1145	When a malfunction is detected in yaw rate signal, or signal line of yaw rate/side/decel G sensor is open or shorted.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function (AWD)</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1146	When a malfunction is detected in side G signal, or signal line of yaw rate/side/decel G sensor is open or shorted.	
C1155	When brake fluid level low signal is detected.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1164	When a malfunction is detected in cut valve 1.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1165	When a malfunction is detected in cut valve 2.	
C1166	When a malfunction is detected in suction valve 1.	
C1167	When a malfunction is detected in suction valve 2.	
C1170	When the information in ABS actuator and electric unit (control unit) is not the same.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1176	When brake pedal position switch signal is not input when brake pedal operates.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
U1000	When CAN communication signal is not continuously transmitted or received for 2 seconds or more.	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
U1010	When detecting error during the initial diagnosis of CAN controller of ABS actuator and electric unit (control unit).	

A

B

C

D

E

BRC

G

H

I

J

K

L

## DTC Inspection Priority Chart

INFOID:000000012199672

When multiple DTCs are displayed simultaneously, check one by one depending on the following priority list.

Priority	Detected item (DTC)
1	<ul style="list-style-type: none"> <li>• U1000 CAN COMM CIRCUIT</li> <li>• U1010 CONTROL UNIT (CAN)</li> </ul>
2	<ul style="list-style-type: none"> <li>• C1110 CONTROLLER FAILURE</li> <li>• C1170 VARIANT CODING</li> </ul>
3	<ul style="list-style-type: none"> <li>• C1130 ENGINE SIGNAL 1</li> <li>• C1144 ST ANG SEN SIGNAL</li> </ul>
4	<ul style="list-style-type: none"> <li>• C1109 BATTERY VOLTAGE [ABNORMAL]</li> <li>• C1111 PUMP MOTOR</li> <li>• C1140 ACTUATOR RLY</li> </ul>

N

O

P

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[WITH VDC]

Priority	Detected item (DTC)
5	<ul style="list-style-type: none"> <li>• C1101 RR RH SENSOR-1</li> <li>• C1102 RR LH SENSOR-1</li> <li>• C1103 FR RH SENSOR-1</li> <li>• C1104 FR LH SENSOR-1</li> <li>• C1105 RR RH SENSOR-2</li> <li>• C1106 RR LH SENSOR-2</li> <li>• C1107 FR RH SENSOR-2</li> <li>• C1108 FR LH SENSOR-2</li> <li>• C1113 G-SENSOR</li> <li>• C1115 ABS SENSOR [ABNORMAL SIGNAL]</li> <li>• C1116 STOP LAMP SW</li> <li>• C1120 FR LH IN ABS SOL</li> <li>• C1121 FR LH OUT ABS SOL</li> <li>• C1122 FR RH IN ABS SOL</li> <li>• C1123 FR RH OUT ABS SOL</li> <li>• C1124 RR LH IN ABS SOL</li> <li>• C1125 RR LH OUT ABS SOL</li> <li>• C1126 RR RH IN ABS SOL</li> <li>• C1127 RR RH OUT ABS SOL</li> <li>• C1143 ST ANG SEN CIRCUIT</li> <li>• C1145 YAW RATE SENSOR</li> <li>• C1146 SIDE G SEN CIRCUIT</li> <li>• C1164 CV 1</li> <li>• C1165 CV 2</li> <li>• C1166 SV 1</li> <li>• C1167 SV 2</li> <li>• C1176 STOP LAMP SW2</li> </ul>
6	<ul style="list-style-type: none"> <li>• C1155 BR FLUID LEVEL LOW</li> </ul>

## DTC Index

INFOID:0000000012199673

DTC	Display Item	Refer to
C1101	RR RH SENSOR-1	<a href="#">BRC-65, "DTC Logic"</a>
C1102	RR LH SENSOR-1	
C1103	FR RH SENSOR-1	
C1104	FR LH SENSOR-1	
C1105	RR RH SENSOR-2	<a href="#">BRC-70, "DTC Logic"</a>
C1106	RR LH SENSOR-2	
C1107	FR RH SENSOR-2	
C1108	FR LH SENSOR-2	
C1109	BATTERY VOLTAGE [ABNORMAL]	<a href="#">BRC-77, "DTC Logic"</a>
C1110	CONTROLLER FAILURE	<a href="#">BRC-79, "DTC Logic"</a>
C1111	PUMP MOTOR	<a href="#">BRC-81, "DTC Logic"</a>
C1113	G-SENSOR	<a href="#">BRC-84, "DTC Logic"</a>
C1115	ABS SENSOR [ABNORMAL SIGNAL]	<a href="#">BRC-88, "DTC Logic"</a>
C1116	STOP LAMP SW	<a href="#">BRC-95, "DTC Logic"</a>
C1120	FR LH IN ABS SOL	<a href="#">BRC-100, "DTC Logic"</a>
C1121	FR LH OUT ABS SOL	<a href="#">BRC-102, "DTC Logic"</a>
C1122	FR RH IN ABS SOL	<a href="#">BRC-100, "DTC Logic"</a>
C1123	FR RH OUT ABS SOL	<a href="#">BRC-102, "DTC Logic"</a>
C1124	RR LH IN ABS SOL	<a href="#">BRC-100, "DTC Logic"</a>
C1125	RR LH OUT ABS SOL	<a href="#">BRC-102, "DTC Logic"</a>
C1126	RR RH IN ABS SOL	<a href="#">BRC-100, "DTC Logic"</a>

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[WITH VDC]

DTC	Display Item	Refer to	
C1127	RR RH OUT ABS SOL	<a href="#">BRC-102, "DTC Logic"</a>	A
C1130	ENGINE SIGNAL 1	<a href="#">BRC-104, "DTC Logic"</a>	
C1140	ACTUATOR RLY	<a href="#">BRC-106, "DTC Logic"</a>	B
C1143	ST ANG SEN CIRCUIT	<a href="#">BRC-108, "DTC Logic"</a>	
C1144	ST ANG SEN SIGNAL	<a href="#">BRC-111, "DTC Logic"</a>	
C1145	YAW RATE SENSOR	<a href="#">BRC-84, "DTC Logic"</a>	C
C1146	SIDE G SEN CIRCUIT		
C1155	BR FLUID LEVEL LOW	<a href="#">BRC-113, "DTC Logic"</a>	D
C1164	CV 1	<a href="#">BRC-117, "DTC Logic"</a>	
C1165	CV 2		
C1166	SV 1	<a href="#">BRC-119, "DTC Logic"</a>	E
C1167	SV 2		
C1170	VARIANT CODING	<a href="#">BRC-79, "DTC Logic"</a>	<b>BRC</b>
C1176	STOP LAMP SW2	<a href="#">BRC-121, "DTC Logic"</a>	
U1000	CAN COMM CIRCUIT	<a href="#">BRC-126, "DTC Logic"</a>	
U1010	CONTROL UNIT (CAN)	<a href="#">BRC-127, "DTC Logic"</a>	G

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# BRAKE CONTROL SYSTEM

[WITH VDC]


< WIRING DIAGRAM >

## WIRING DIAGRAM

### BRAKE CONTROL SYSTEM

#### Wiring Diagram

INFOID:000000012199674

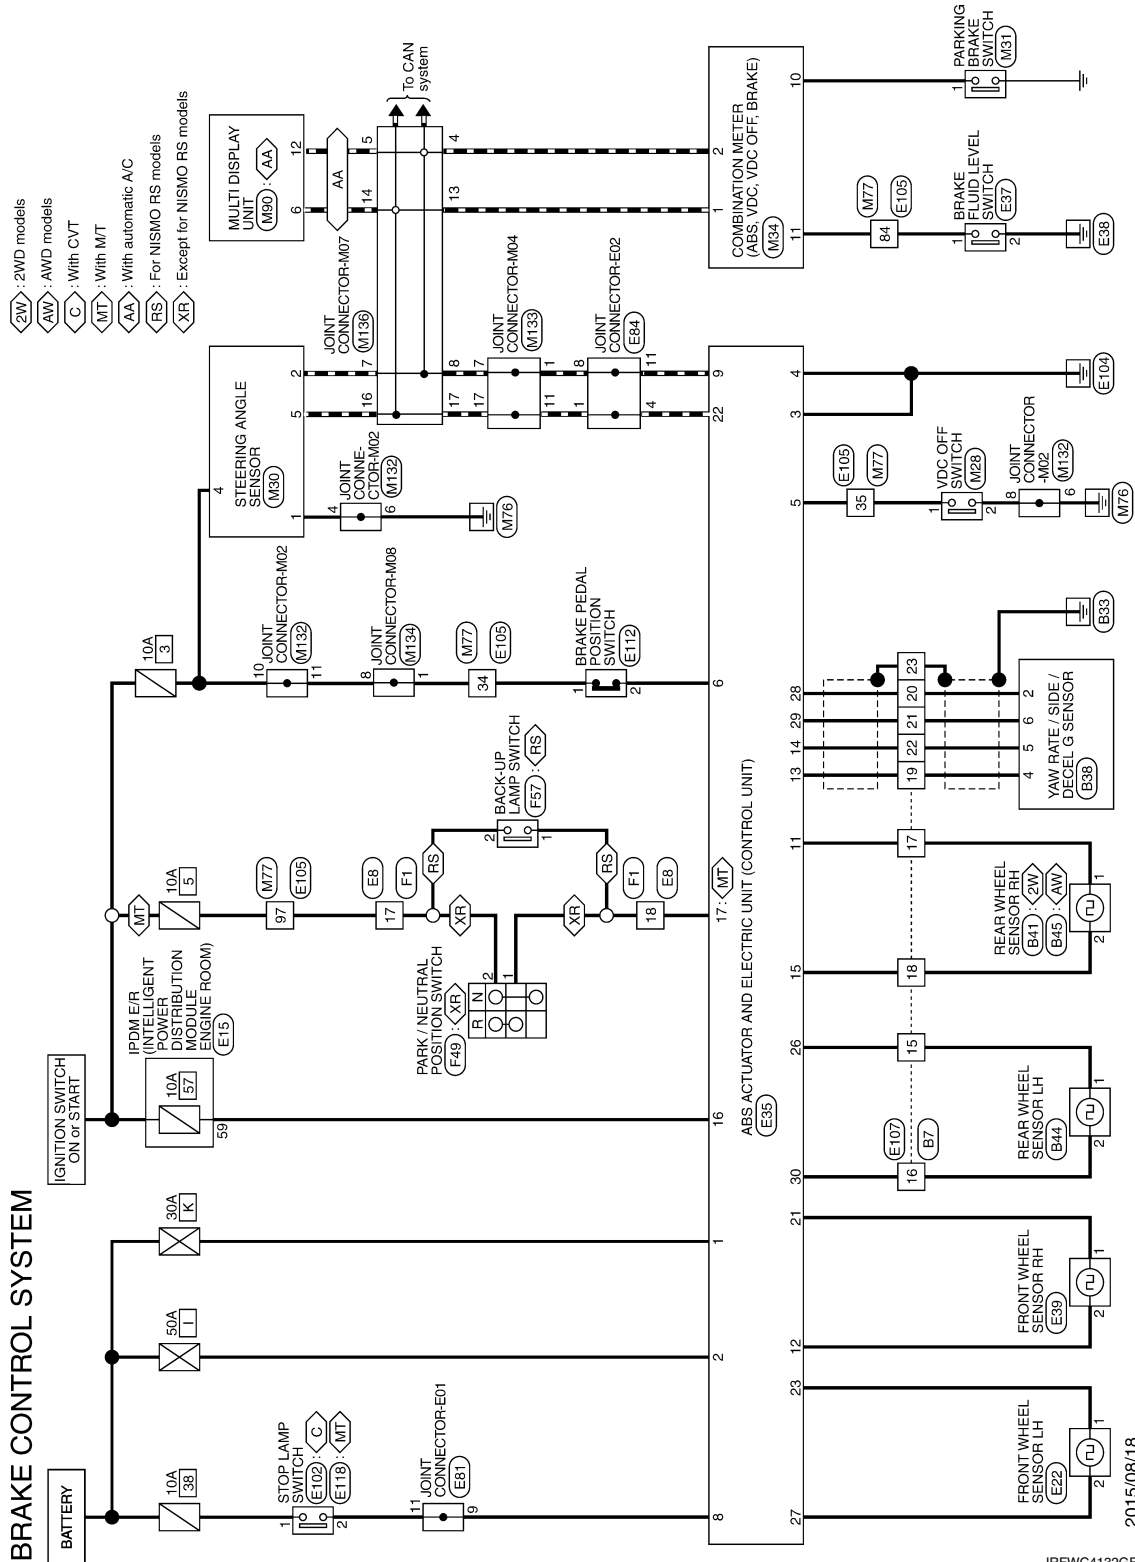


# BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[WITH VDC]

## BRAKE CONTROL SYSTEM

Connector No.	B17
Connector Name	WIRE TO WIRE
Connector Type	TR24FN-WH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
3	V	-
5	G	-
6	LG	-
7	R	-
8	P	-
9	L	-
10	G	-
11	LG	-
12	Y	-
13	P	-
14	L	-
15	BR	-
16	B	-
17	B	-
18	B	-
20	G	-
21	W	-
22	R	-
23	SHIELD	-

Connector No.	B18
Connector Name	YAW RATE / SIDE / DECEL SENSOR
Connector Type	SC20F#B



Terminal No.	Color Of Wire	Signal Name [Specification]
2	G	-
4	B	-
5	R	-
6	W	-

Connector No.	B41
Connector Name	REAR WHEEL SENSOR RH
Connector Type	RH02MGY

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	P	-



Connector No.	B44
Connector Name	REAR WHEEL SENSOR LH
Connector Type	RH02MB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	BR	-


Connector No.	B45
Connector Name	REAR WHEEL SENSOR RH
Connector Type	RH02MB

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	P	-



Connector No.	B8
Connector Name	WIRE TO WIRE
Connector Type	SA3-20MR-PS10-SZ2



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	L	-
3	O	-
4	LG	- [Except for NS/MO RS]
4	V	- [Except for NS/MO RS]
5	O	-
7	BR	-
10	R	-
11	G	- [Except for NS/MO RS]
11	O	- [Except for NS/MO RS]
12	G	-
13	B	- [Except for NS/MO RS]
13	Y	- [Except for NS/MO RS]
14	L	- [Except for NS/MO RS]
14	LG	- [Except for NS/MO RS]
15	B	-
16	B	-
17	BR	-
18	W	-
19	LG	-
20	L/W	-
21	G	-
22	G	- [Except for NS/MO RS]
22	Y	- [Except for NS/MO RS]
23	B	- [Except for NS/MO RS]
23	SHIELD	- [Except for NS/MO RS]
24	P	-
25	R	-
26	B	-
27	B	-
28	LG	-
29	SR	-
30	G	- [Except for NS/MO RS]
30	P	- [Except for NS/MO RS]
31	G	-

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# BRAKE CONTROL SYSTEM


< WIRING DIAGRAM >

[WITH VDC]

## BRAKE CONTROL SYSTEM

32	Y	-
33	BR	-
34	BR	- [Except for NISW/O RS]
35	W	- [Except for NISW/O RS]
36	L	- [Without Intelligent Key]
37	LG	- [With Intelligent Key]
38	SB	-
39	B	-
40	P	-
41	V	-
42	L	-
43	BR	- [For NISW/O RS]
44	W	- [Except for NISW/O RS]
45	BR	- [Except for NISW/O RS]
46	Y	-
47	SB	-
48	LG	- [With Intelligent Key]
48	Y	- [Without Intelligent Key]

Connector No.	E15
Connector Name	FPPL (FP INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	NS3.6PW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
48	BR	-
49	Y	-
50	G	-
51	L	-
52	P	-
54	P	-
55	G	-
56	SB	-
57	O	-
58	LG	-
59	V	-
60	SB	-
61	LG	-
62	BE	-

Connector No.	E22
Connector Name	FRONT WHEEL SENSOR LH
Connector Type	PH02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	BR	-

Connector No.	E35
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	PH23FB-NJ4-UH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (MTR)
2	L	BAT (SOL)
3	B	GND (SOL)
4	B	GND (MTR)
5	R	VDC OFF SW
6	G	ASCD CANCEL SW
8	P	STOP JAMP SW
9	P	CAN-L
11	BR	DP RR
12	W	DS FR
13	G	VCC
14	R	SERIAL+
15	Y	DS RR
16	V	IGN
17	W	REVERSE SIGNAL
21	Y	DP FR
22	L	CAN-H
23	LG	DP FL

35	G	RR LH SENS VB
36	BR	GR
37	W	SRBAL-
38	W	SRBAL-
39	BE	RR LH SENS SIG



Connector No.	E37
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Type	VV02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-

Connector No.	E39
Connector Name	FRONT WHEEL SENSOR RH
Connector Type	PH02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	W	-

Connector No.	E81
Connector Name	JOINT CONNECTOR-E81
Connector Type	A12FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	BR	-
3	BR	-
4	BR	-
6	BR	-
8	R	-
9	R	-
10	R	-
11	R	-
12	R	-

Connector No.	E84
Connector Name	JOINT CONNECTOR-E82
Connector Type	A12FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	L	-
3	L	-
4	L	-
5	L	-
6	L	-
7	P	-
8	P	-
9	P	-
10	P	-

# BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[WITH VDC]

## BRAKE CONTROL SYSTEM


11	P	-
12	P	-

Connector No.	E103
Connector Name	STOP LAMP SWITCH
Connector Type	MD2FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	BE	-
4	P	-


Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	T180DW-C516-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
4	Y	-
6	P	-
10	R	-
11	W	-
12	B	-
13	R	-
14	SHIELD	-
34	BE	-
35	R	-
36	B	-
37	P	-

Terminal No.	Color Of Wire	Signal Name [Specification]
52	R	-
53	BR	-
54	Y	-
55	BE	-
56	G	-
58	Y	-
62	Y	-
63	V	-
64	LG	-
65	L	-
66	R	-
67	W	-
68	SB	-
70	BR	-
71	LG	-
72	V	-
73	L	-
76	R	-
78	B	-
79	W	-
80	L	-
83	Y	-
84	LG	-
85	P	-
86	BE	-
90	SHIELD	-
91	G	-
92	R	-
95	BR	-
96	P	-
98	GR	-
99	Y	-
100	O	-

Connector No.	E107
Connector Name	WIRE TO WIRE
Connector Type	T1724MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	Y	-
3	V	-
5	G	-
6	L	- [Except for NS/MO RS]
7	O	- [For NS/MO RS]
8	R	-
9	R	-
10	G	-
11	L	-
12	Y	-
13	P	-
14	L	-
15	G	-
17	BR	-
18	Y	-
19	G	-
20	B	-
21	W	-
22	R	-
23	SHIELD	-

Connector No.	E112
Connector Name	BRAKE PEDAL POSITION SWITCH
Connector Type	MD2FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BE	-
2	G	-

Connector No.	E118
Connector Name	STOP LAMP SWITCH
Connector Type	MD2FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
2	W	-
2	R	-

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[WITH VDC]

## BRAKE CONTROL SYSTEM

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	SA43EF8RS10-5/2Z



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	L	-
3	W	-
3	Y	-
4	BG	-
4	GR	-
5	LG	-
7	G	-
10	R	-
10	Y	-
11	G	-
11	Y	-
12	G	-
13	B	-
13	RS	-
14	Y	-
14	V	-
15	BR	-
16	P	-
17	SB	-
18	G	-
19	G	-
20	BR	-
21	G	-
22	BR	-
22	Y	-
23	B	-
24	R	-
25	R	-
26	B	-
27	B	-
28	R	-
29	W	-
30	GR	-
30	R	-
31	BG	-

32	LG	-
32	BR	-
33	P	-
34	P	-
37	G	-
37	GR	-
38	R	-
39	GR	-
40	P	-
41	V	-
42	L	-
42	W	-
43	L	-
43	W	-
44	BR	-
44	G	-
45	BR	-
46	R	-
47	Y	-
48	GR	-
48	Y	-

Connector No.	F49
Connector Name	PARK / NEUTRAL POSITION SWITCH
Connector Type	FEA3DF6-1C



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	SB	-
3	BR	-

Connector No.	F57
Connector Name	BACK-UP LAMP SWITCH
Connector Type	RK02FB




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	SB	-

Connector No.	M28
Connector Name	VDC OFF SWITCH
Connector Type	TH08FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	B	-
3	V	-
4	GR	-

Connector No.	M30
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
1	GND	-
2	P	-
4	LG	-
5	L	-
5	CAN-H	-

Connector No.	M31
Connector Name	PARKING BRAKE SWITCH
Connector Type	PO1FE-A



Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-

JRFWC4136GB




# BRAKE CONTROL SYSTEM

< WIRING DIAGRAM >

[WITH VDC]

## BRAKE CONTROL SYSTEM

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH402FW-NH




Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH802FW-CS16-TM4



86	LG	-
89	SHIELD	-
92	BR	-
95	BR	-
96	L	-
97	GF	-
98	G	-
99	R	-
100	LG	-


Connector No.	M132
Connector Name	JOINT CONNECTOR-M02
Connector Type	NH202FL-EC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	P	CAN-L
4	Y	VEHICLE SPEED SIGNAL (8-PULSE)
5	G	PADDLE SHIFTER UP SWITCH SIGNAL
6	BR	FUEL LEVEL SENSOR SIGNAL
7	R	AIR BAG SIGNAL
8	P	-
9	W	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	SB	PARKING BRAKE SWITCH SIGNAL
11	G	BRAKE FLUID LEVEL SWITCH SIGNAL
13	GR	ILLUMINATION CONTROL SIGNAL
14	R	MANUAL MODE SHIFT UP SIGNAL
15	L	ACC POWER SUPPLY
16	W	MANUAL MODE SHIFT DOWN SIGNAL
17	G	WASH/WIPER LEVEL SWITCH SIGNAL
18	R	SECURITY SIGNAL
19	GR	AMBIENT SENSOR SIGNAL
20	R	AMBIENT SENSOR GROUND
21	B	GROUND
22	B	GROUND
23	B	GROUND
24	L	FUEL LEVEL SENSOR GROUND
25	B	VDC GROUND
26	V	PADDLE SHIFTER DOWN SWITCH SIGNAL
27	LG	BATTERY POWER SUPPLY
28	GR	IGNITION SIGNAL
29	V	PASSENGER SEAT BELT WARNING SIGNAL
31	P	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
36	Y	MANUAL MODE SIGNAL
37	G	NON-MANUAL MODE SIGNAL
38	P	ALTERNATOR SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
4	V	-
6	P	-
10	R	-
11	R	-
12	LG	-
13	V	-
14	SHIELD	-
34	LG	-
35	SB	-
36	B	-
37	P	-
52	R	-
53	L	-
54	SB	-
55	LG	-
56	LG	-
59	Y	-
62	Y	-
63	W	-
64	G	-
65	GR	-
66	Y	-
67	V	-
68	R	-
70	V	-
71	R	-
72	GR	-
73	G	-
76	W	-
78	LG	-
79	V	-
80	LG	-
83	P	-
84	G	-
85	BR	-


Connector No.	M90
Connector Name	MULTI DISPLAY UNIT
Connector Type	TH122FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	B	-
3	B	-
4	B	-
5	B	-
6	B	-
7	B	-
8	B	-
9	B	-
10	LG	-
11	LG	-
13	LG	-
18	LG	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	V	ILLUMINATION CONTROL SIGNAL
5	GR	ILLUMINATION CONTROL SIGNAL
9	L	CAN-H
10	G	IGN. SW SIGNAL
11	B	GROUND
12	P	CAN-L

Connector No.	M133
Connector Name	JOINT CONNECTOR-M04
Connector Type	NH202FL-EC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	P	-
3	P	-
5	P	-
7	P	-
11	L	-
12	L	-

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# BRAKE CONTROL SYSTEM


< WIRING DIAGRAM >

[WITH VDC]

BRAKE CONTROL SYSTEM	
13	L
14	L
15	L
16	W
19	W

Connector No.	M134
Connector Name	JOINT CONNECTOR-M08
Connector Type	NIJ20FL-DC

9	8	7	5	3	2	1
20	19	18	17	15	14	13
12	10					

Terminal No.	Color Of Wire	Signal Name (Specification)
1	LG	-
2	LG	-
3	LG	-
5	LG	-
7	LG	-
8	LG	-
9	LG	-
10	Y	-
12	Y	-
14	Y	-
15	Y	-
17	LG	-
18	R	-
19	R	-
20	R	-

JRFWC4138GB

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

#### Work Flow

INFOID:000000012199675

#### DETAILED FLOW

#### 1. INTERVIEW FROM THE CUSTOMER

Clarify customer complaints before inspection. First of all, perform an interview utilizing [BRC-60, "Diagnostic Work Sheet"](#) and reproduce the symptom as well as fully understand it. Ask customer about his/her complaints carefully. Check symptoms by driving vehicle with customer, if necessary.

**CAUTION:**

**Customers are not professional. Never guess easily like "maybe the customer means that..." or "maybe the customer mentions this symptom".**

>> GO TO 2.

#### 2. CHECK SYMPTOM

Reproduce the symptom that is indicated by the customer, based on the information from the customer obtained by interview. Also check that the symptom is not caused by fail-safe mode. Refer to [BRC-46, "Fail-safe"](#).

**CAUTION:**

**When the symptom is caused by normal operation, fully inspect each portion and obtain the understanding of customer that the symptom is not caused by a malfunction.**

>> GO TO 3.

#### 3. PERFORM SELF-DIAGNOSIS

 With CONSULT

Perform self-diagnosis for "ABS".

Is DTC detected?

- YES >> Record or print self-diagnosis results and freeze frame data (FFD). GO TO 4.
- NO >> GO TO 6.

#### 4. RECHECK THE SYMPTOM

 With CONSULT

1. Erase self-diagnostic results for "ABS".
2. Perform DTC confirmation procedures for the error-detected system.

**NOTE:**

If some DTCs are detected at the same time, determine the order for performing the diagnosis based on [BRC-49, "DTC Inspection Priority Chart"](#) [ABS actuator and electric unit (control unit)].

Is any DTC detected?

- YES >> GO TO 5.
- NO >> Check harness and connectors based on the information obtained by interview. Refer to [GI-45, "Intermittent Incident"](#).

#### 5. REPAIR OR REPLACE ERROR-DETECTED PART

- Repair or replace error-detected parts.
- Reconnect part or connector after repairing or replacing.
- When DTC is detected, erase self-diagnostic result for "ABS".

>> GO TO 7.

#### 6. IDENTIFY ERROR-DETECTED SYSTEM BY SYMPTOM DIAGNOSIS

Estimate error-detected system based on symptom diagnosis and perform inspection.

Can the error-detected system be identified?

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# DIAGNOSIS AND REPAIR WORK FLOW

[WITH VDC]

< BASIC INSPECTION >

YES >> GO TO 7.

NO >> Check harness and connectors based on the information obtained by interview. Refer to [GI-45](#), "Intermittent Incident".

## 7. FINAL CHECK

④ With CONSULT

1. Check the reference value for "ABS".
2. Recheck the symptom and check that the symptom is not reproduced on the same conditions.

Is the symptom reproduced?

YES >> GO TO 3.

NO >> INSPECTION END





## Diagnostic Work Sheet

INFOID:000000012199676

### Description

- In general, customers have their own criteria for a problem. Therefore, it is important to understand the symptom and status well enough by asking the customer about his/her concerns carefully. To systemize all the information for the diagnosis, prepare the interview sheet referring to the interview points.
- In some cases, multiple conditions that appear simultaneously may cause a DTC to be detected.

### INTERVIEW SHEET SAMPLE

Interview sheet					
Customer name	MR/MS	Registration number		Initial year registration	
		Vehicle type		VIN	
Storage date		Engine/traction Motor		Mileage	km (Mile)
Symptom	<input type="checkbox"/> Does not operate ( ) function <input type="checkbox"/> Warning lamp turns ON.				
	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <b>ABS</b>  <input type="checkbox"/> </div> <div style="text-align: center;">                       or                 </div> <div style="text-align: center;"> <b>BRAKE</b>  <input type="checkbox"/> </div> <div style="text-align: center;">                       or                 </div> <div style="text-align: center;">   <input type="checkbox"/> </div> <div style="text-align: center;">   <input type="checkbox"/> OFF                 </div> </div>				
	<input type="checkbox"/> Other ( )				
	<input type="checkbox"/> Noise (Location: ) <input type="checkbox"/> Vibration (Location: )				
	<input type="checkbox"/> Other ( )				
First occurrence	<input type="checkbox"/> Recently <input type="checkbox"/> Other ( )				
Frequency of occurrence	<input type="checkbox"/> Always <input type="checkbox"/> Under a certain conditions of <input type="checkbox"/> Sometimes ( time(s)/day)				
Climate conditions	<input type="checkbox"/> Irrelevant				
	Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Cloud <input type="checkbox"/> Rain <input type="checkbox"/> Snow <input type="checkbox"/> Others ( )			
	Temperature	<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temperature [Approx. °C (°F)]			
	Relative humidity	<input type="checkbox"/> High <input type="checkbox"/> Moderate <input type="checkbox"/> Low			
Road conditions	<input type="checkbox"/> Ordinary road <input type="checkbox"/> Highway <input type="checkbox"/> Mountainous road (uphill or downhill) <input type="checkbox"/> Rough road				
Operating condition, etc.	<input type="checkbox"/> Irrelevant <input type="checkbox"/> When engine/traction motor starts <input type="checkbox"/> During idling <input type="checkbox"/> During driving <input type="checkbox"/> During acceleration <input type="checkbox"/> At constant speed driving <input type="checkbox"/> During deceleration <input type="checkbox"/> Immediately before stop [Vehicle speed: Approx. km/h (MPH)] <input type="checkbox"/> During cornering (right curve or left curve) <input type="checkbox"/> When steering wheel is steered (to right or to left)				



# ADDITIONAL SERVICE WHEN REPLACING ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< BASIC INSPECTION >

[WITH VDC]

## ADDITIONAL SERVICE WHEN REPLACING ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

### Description

INFOID:000000012199677

When replaced the ABS actuator and electric unit (control unit), Perform steering angle sensor neutral position. Refer to [BRC-63](#). "Description".

# ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

< BASIC INSPECTION >

[WITH VDC]

## ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

### Description

INFOID:0000000012199678

Always adjust the neutral position of steering angle sensor before driving when the following operation is performed. Refer to [BRC-63, "Work Procedure"](#).

×: Required —: Not required

Procedure	Adjust the neutral position of steering angle sensor
Removing/ installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	×
Removing/installing steering angle sensor	×
Replacing steering angle sensor	×
Removing/installing steering components	×
Replacing steering components	×
Removing/installing suspension components	×
Replacing suspension components	×
Removing/installing tire	—
Replacing tire	—
Tire rotation	—
Adjusting wheel alignment.	×

### Work Procedure

INFOID:0000000012199679

#### ADJUST THE NEUTRAL POSITION OF STEERING ANGLE SENSOR

##### **CAUTION:**

**Always use CONSULT when adjusting the neutral position of steering angle sensor. (It cannot be adjusted other than with CONSULT.)**

#### 1.CHECK THE VEHICLE STATUS


Stop vehicle with front wheels in the straight-ahead position.

Does the vehicle stay in the straight-ahead position?

YES >> GO TO 2.

NO >> Steer the steering wheel to the straight-ahead position. Stop the vehicle.

#### 2.ADJUST NEUTRAL POSITION OF STEERING ANGLE SENSOR

 With CONSULT

1. Turn the ignition switch ON.

##### **CAUTION:**

**Never start engine.**

2. Select "ABS", "WORK SUPPORT" and "ST ANGLE SENSOR ADJUSTMENT" in this order.

3. Select "START".

##### **CAUTION:**

**Never touch steering wheel while adjusting steering angle sensor.**

4. After approx. 10 seconds, select "END".


5. Turn ignition switch OFF, and then turn it ON again.

##### **CAUTION:**

**Be sure to perform the operation above.**

>> GO TO 3.

#### 3.CHECK DATA MONITOR

 With CONSULT

1. The vehicle is either pointing straight ahead, or the vehicle needs to be moved. Stop when it is pointing straight ahead.

## ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

< BASIC INSPECTION >

[WITH VDC]

2. Select "ABS", "DATA MONITOR", "ECU INPUT SIGNALS" and "STR ANGLE SIG" in the order. Check that the signal is within the specified value.

**STR ANGLE SIG :  $0 \pm 2.5^\circ$**

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 1.

### 4. ERASE SELF-DIAGNOSIS MEMORY

---

Ⓟ With CONSULT

Erase self-diagnosis result of "ABS".

Are the memories erased?

- YES >> INSPECTION END
- NO >> Check the items indicated by the self-diagnosis.



# C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## DTC/CIRCUIT DIAGNOSIS

### C1101, C1102, C1103, C1104 WHEEL SENSOR

#### DTC Logic

INFOID:0000000012199680

#### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1101	RR RH SENSOR-1 (Rear RH wheel sensor-1)	When an open circuit is detected in rear RH wheel sensor circuit.
C1102	RR LH SENSOR-1 (Rear LH wheel sensor-1)	When an open circuit is detected in rear LH wheel sensor circuit.
C1103	FR RH SENSOR-1 (Front RH wheel sensor-1)	When an open circuit is detected in front RH wheel sensor circuit.
C1104	FR LH SENSOR-1 (Front LH wheel sensor-1)	When an open circuit is detected in front LH wheel sensor circuit.

#### POSSIBLE CAUSE

##### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Wheel sensor</li><li>• ABS actuator and electric unit (control unit)</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li><li>• Vehicle was not driven after previous repair</li></ul>

#### DTC CONFIRMATION PROCEDURE

##### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

##### 2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Start the engine.
2. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
3. Stop the vehicle.
4. Turn the ignition switch OFF.

##### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

##### NOTE:

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES-1 >> "C1101", "C1102", "C1103" or "C1104" is displayed by "CRNT": Proceed to [BRC-66, "Diagnosis Procedure"](#).

# C1101, C1102, C1103, C1104 WHEEL SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

YES-2 >> "C1101", "C1102", "C1103" and "C1104" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45. "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

## Diagnosis Procedure

INFOID:000000012199681

### CAUTION:

Never check between wheel sensor harness connector terminals.

### 1. CHECK WHEEL SENSOR

1. Turn the ignition switch OFF.
2. Check the wheel sensor for damage.

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

### 2. REPLACE WHEEL SENSOR (1)

Ⓜ With CONSULT

1. Replace the wheel sensor.
  - Front: Refer to [BRC-147. "FRONT WHEEL SENSOR : Removal and Installation"](#).
  - Rear: Refer to [BRC-150. "REAR WHEEL SENSOR : Removal and Installation"](#).
2. Erase self-diagnosis result for "ABS".
3. Turn the ignition switch OFF → ON → OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

4. Start the engine.
5. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

#### NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

6. Stop the vehicle.
7. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

8. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

9. Perform self-diagnosis for "ABS".

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> GO TO 3.

NO >> INSPECTION END

### 3. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the wheel sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 4.

### 4. PERFORM SELF-DIAGNOSIS (1)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.
4. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

#### NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

# C1101, C1102, C1103, C1104 WHEEL SENSOR

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

5. Stop the vehicle.
6. Turn the ignition switch OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
7. Start the engine.  
**NOTE:**  
Wait at least 10 seconds after start the engine.
8. Perform self-diagnosis for "ABS".

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

- YES >> GO TO 5.  
NO >> INSPECTION END

## 5.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129](#), "Diagnosis Procedure".

Is the inspection result normal?

- YES >> GO TO 6.  
NO >> Repair / replace harness, connector, fuse, or fusible link.

## 6.CHECK TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and then check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
3. Disconnect wheel sensor harness connector and check each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 8.  
NO >> Repair / replace harness, connector, or terminal, and GO TO 7.

## 7.PERFORM SELF-DIAGNOSIS (2)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
5. Start the engine.
6. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.  
**NOTE:**  
Vehicle must be driven after repair or replacement to erase the previous DTCs.
7. Stop the vehicle.
8. Turn the ignition switch OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
9. Start the engine.  
**NOTE:**  
Wait at least 10 seconds after start the engine.
10. Perform self-diagnosis for "ABS".

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

- YES >> GO TO 8.  
NO >> INSPECTION END

## 8.CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect wheel sensor harness connector.

# C1101, C1102, C1103, C1104 WHEEL SENSOR

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Check the continuity while turning steering wheel left and right, or while moving center harness in wheel housing.)
  - Measurement connector and terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E35	23	E22	(Front LH wheel)	1
	21	E39	(Front RH wheel)	
	26	B44	(Rear LH wheel)	
	11	B41 <sup>*1</sup> B45 <sup>*2</sup>	(Rear RH wheel)	
Existed				

\*1: 2WD

\*2: AWD

- Measurement connector and terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E35	27	E22	(Front LH wheel)	2
	12	E39	(Front RH wheel)	
	30	B44	(Rear LH wheel)	
	15	B41 <sup>*1</sup> B45 <sup>*2</sup>	(Rear RH wheel)	
Existed				

\*1: 2WD

\*2: AWD

### Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair / replace harness or connector, and GO TO 9.

## 9.PERFORM SELF-DIAGNOSIS (3)

### With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.
 

**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
5. Start the engine.
6. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
 

**NOTE:**  
Vehicle must be driven after repair or replacement to erase the previous DTCs.
7. Stop the vehicle.
8. Turn the ignition switch OFF.
 

**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
9. Start the engine.
 

**NOTE:**  
Wait at least 10 seconds after start the engine.
10. Perform self-diagnosis for "ABS".

### Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> GO TO 10.

NO >> INSPECTION END

## 10.CHECK WHEEL SENSOR OUTPUT SIGNAL

# C1101, C1102, C1103, C1104 WHEEL SENSOR

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

1. Disconnect ABS actuator and electric unit (control unit) harness connector.
2. Disconnect wheel sensor harness connector.
3. Connect ABS active wheel sensor tester (SST: J-45741-A) to wheel sensor using appropriate adapter.
4. Turn the ABS active wheel sensor tester power switch ON.

**NOTE:**

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

5. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash ON and OFF to indicate an output signal.

**NOTE:**

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

### Does the ABS active wheel sensor tester detect a signal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> GO TO 11.

## 11. REPLACE WHEEL SENSOR

### Ⓜ With CONSULT

1. Replace the wheel sensor.
  - Front: Refer to [BRC-147, "FRONT WHEEL SENSOR : Removal and Installation"](#).
  - Rear: Refer to [BRC-150, "REAR WHEEL SENSOR : Removal and Installation"](#).

2. Connect ABS actuator and electric unit (control unit) harness connector.

3. Erase self-diagnosis result for "ABS".

4. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.

6. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

7. Stop the vehicle.

8. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

9. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

10. Perform self-diagnosis for "ABS".

### Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> INSPECTION END

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## C1105, C1106, C1107, C1108 WHEEL SENSOR

### DTC Logic

INFOID:000000012199682

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1105	RR RH SENSOR-2 (Rear RH wheel sensor-2)	<ul style="list-style-type: none"> <li>When power supply voltage of rear RH wheel sensor is low.</li> <li>When distance between rear RH wheel sensor and rear RH wheel sensor rotor is large.</li> <li>When installation of rear RH wheel sensor or rear RH wheel sensor rotor is not normal.</li> <li>When there is contamination on or damage to the rear RH wheel sensor or rear RH sensor rotor.</li> </ul>
C1106	RR LH SENSOR-2 (Rear LH wheel sensor-2)	<ul style="list-style-type: none"> <li>When power supply voltage of rear LH wheel sensor is low.</li> <li>When distance between rear LH wheel sensor and rear LH wheel sensor rotor is large.</li> <li>When installation of rear LH wheel sensor or rear LH wheel sensor rotor is not normal.</li> <li>When there is contamination on or damage to the rear LH wheel sensor or rear LH sensor rotor.</li> </ul>
C1107	FR RH SENSOR-2 (Front RH wheel sensor-2)	<ul style="list-style-type: none"> <li>When power supply voltage of front RH wheel sensor is low.</li> <li>When distance between front RH wheel sensor and front RH wheel sensor rotor is large.</li> <li>When installation of front RH wheel sensor or front RH wheel sensor rotor is not normal.</li> <li>When there is contamination on or damage to the front RH wheel sensor or front RH sensor rotor.</li> </ul>
C1108	FR LH SENSOR-2 (Front LH wheel sensor-2)	<ul style="list-style-type: none"> <li>When power supply voltage of front LH wheel sensor is low.</li> <li>When distance between front LH wheel sensor and front LH wheel sensor rotor is large.</li> <li>When installation of front LH wheel sensor or front LH wheel sensor rotor is not normal.</li> <li>When there is contamination on or damage to the front LH wheel sensor or front LH sensor rotor.</li> </ul>

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> <li>Harness or connector</li> <li>Wheel sensor</li> <li>Sensor rotor</li> <li>Tire size</li> <li>ABS actuator and electric unit (control unit) power supply system</li> <li>Fuse</li> <li>Fusible link</li> <li>Battery</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector</li> <li>Wheel sensor</li> <li>Sensor rotor</li> <li>ABS actuator and electric unit (control unit)</li> <li>Tire size</li> <li>ABS actuator and electric unit (control unit) power supply system</li> <li>Fuse</li> <li>Fusible link</li> <li>Battery</li> <li>Vehicle was not driven after previous repair</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### Ⓜ With CONSULT

- Start the engine.
- Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
- Stop the vehicle.
- Turn the ignition switch OFF.

# C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES-1 >> "C1105", "C1106", "C1107" or "C1108" is displayed by "CRNT": Proceed to [BRC-71, "Diagnosis Procedure"](#).

YES-2 >> "C1105", "C1106", "C1107" and "C1108" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

## Diagnosis Procedure

INFOID:000000012199683

**CAUTION:**

**Never check between wheel sensor harness connector terminals.**

### 1. CHECK WHEEL HUB ASSEMBLY

Check that there is no excessive looseness in wheel hub assembly.

- Front
  - For NISMO RS models: Refer to [FAX-9, "Inspection"](#).
  - Except for NISMO RS models: Refer to [FAX-64, "Inspection"](#).
- Rear
  - 2WD models: [RAX-6, "Inspection"](#).
  - AWD models: [RAX-14, "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the wheel hub assembly, and GO TO 2.

- Front
  - For NSMO RS models: Refer to [FAX-11, "Removal and Installation"](#).
  - Except for NISMO RS models: Refer to [FAX-66, "Removal and Installation"](#).
- Rear
  - 2WD models: Refer to [RAX-7, "Removal and Installation"](#).
  - AWD models: Refer to [RAX-16, "Removal and Installation"](#).

### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness, connector, fuse, or fusible link.

### 3. CHECK TIRE


1. Turn the ignition switch OFF.
2. Check the tire air pressure, wear and size. Refer to [WT-47, "Tire Air Pressure"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Adjust air pressure or replace tire, and GO TO 4.

### 4. CHECK DATA MONITOR (1)

 With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

# C1105, C1106, C1107, C1108 WHEEL SENSOR

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

4. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

**NOTE:**

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 5.

NO >> GO TO 6.

## 5.PERFORM SELF-DIAGNOSIS (1)

Ⓜ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 6.

NO >> INSPECTION END

## 6.CHECK WHEEL SENSOR AND SENSOR ROTOR

1. Turn the ignition switch OFF.
2. Disconnect wheel sensor harness connector.
3. Remove dust and foreign matter adhered to the wheel sensor and sensor rotor with a vacuum dust collector through the wheel sensor mounting hole.

**CAUTION:**

**Install wheel sensor with no backlash and float, and tighten the mounting bolt to the specified torque.**

- Front: Refer to [BRC-147, "FRONT WHEEL SENSOR : Exploded View"](#).
- Rear: Refer to [BRC-148, "REAR WHEEL SENSOR : Exploded View"](#).

>> GO TO 7.

## 7.CHECK WHEEL SENSOR

Check the wheel sensor for damage.

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 9.

## 8.CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Disconnect ABS actuator and electric unit (control unit) harness connector.
2. Connect ABS active wheel sensor tester (SST: J-45741-A) to wheel sensor using appropriate adapter.
3. Turn the ABS active wheel sensor tester power switch ON.

**NOTE:**

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

4. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash ON and OFF to indicate an output signal.

**NOTE:**

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?



# C1105, C1106, C1107, C1108 WHEEL SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 12.
- NO >> GO TO 9.

## 9. REPLACE WHEEL SENSOR (1)

Ⓜ With CONSULT

1. Replace the wheel sensor.
  - Front: Refer to [BRC-147, "FRONT WHEEL SENSOR : Removal and Installation"](#).
  - Rear: Refer to [BRC-150, "REAR WHEEL SENSOR : Removal and Installation"](#).
2. Connect ABS actuator and electric unit (control unit) harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

**NOTE:**

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

- YES >> GO TO 10.
- NO >> GO TO 20.

## 10. PERFORM SELF-DIAGNOSIS (2)

Ⓜ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
3. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

- YES >> GO TO 11.
- NO >> INSPECTION END

## 11. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the wheel sensor harness connector for disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 14.
- NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 12.

## 12. CHECK DATA MONITOR (2)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

**NOTE:**

## C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 13.

NO >> GO TO 14.

### 13.PERFORM SELF-DIAGNOSIS (3)

ⓅWith CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 14.

NO >> INSPECTION END

### 14.CHECK TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and then check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
3. Disconnect wheel sensor harness connector and check each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair / replace harness, connector, or terminal, and GO TO 15.

### 15.CHECK DATA MONITOR (3)

ⓅWith CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

**NOTE:**

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 16.

NO >> GO TO 17.

### 16.PERFORM SELF-DIAGNOSIS (4)

ⓅWith CONSULT

1. Stop the vehicle.

# C1105, C1106, C1107, C1108 WHEEL SENSOR

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

- Turn the ignition switch OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
- Start the engine.  
**NOTE:**  
Wait at least 10 seconds after start the engine.
- Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

- YES >> GO TO 17.  
NO >> INSPECTION END

## 17. CHECK WHEEL SENSOR HARNESS

- Turn the ignition switch OFF.
- Disconnect ABS actuator and electric unit (control unit) harness connector.
- Disconnect wheel sensor harness connector.
- Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E35	23, 27	Ground	Not existed
	21, 12		
	26, 30		
	11, 15		

Is the inspection result normal?

- YES >> GO TO 18.  
NO >> Repair / replace harness or connector, and GO TO 18.

## 18. CHECK DATA MONITOR (4)

Ⓜ With CONSULT

- Connect ABS actuator and electric unit (control unit) harness connector.
- Connect wheel sensor harness connector.
- Erase self-diagnosis result for "ABS".
- Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
- Start the engine.
- Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".  
**NOTE:**  
Set the "DATA MONITOR" recording speed to "10 msec".
- Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.  
**NOTE:**  
Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

- YES >> GO TO 19.  
NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

## 19. PERFORM SELF-DIAGNOSIS (5)

Ⓜ With CONSULT

- Stop the vehicle.
- Turn the ignition switch OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.

## C1105, C1106, C1107, C1108 WHEEL SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

3. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> INSPECTION END

### 20. REPLACE SENSOR ROTOR

Ⓟ With CONSULT

1. Replace the sensor rotor.

- Front: Refer to [BRC-147, "FRONT WHEEL SENSOR : Removal and Installation"](#).

- Rear: Refer to [BRC-150, "REAR WHEEL SENSOR : Removal and Installation"](#).

2. Erase self-diagnosis result for "ABS".

3. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

4. Start the engine.

5. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

6. Stop the vehicle.

7. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

8. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

9. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> INSPECTION END

# C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## C1109 POWER AND GROUND SYSTEM

### DTC Logic

INFOID:000000012199684

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1109	BATTERY VOLTAGE [ABNORMAL] (Battery voltage [abnormal])	When ignition power supply voltage is in following state. <ul style="list-style-type: none"><li>Ignition power supply voltage: <math>10\text{ V} \geq</math> ignition power supply voltage.</li><li>Ignition power supply voltage: <math>16\text{ V} \leq</math> ignition power supply voltage.</li></ul>

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>Harness or connector</li><li>ABS actuator and electric unit (control unit) power supply system</li><li>Fuse</li><li>Fusible link</li><li>Battery</li><li>Charge system</li></ul>	<ul style="list-style-type: none"><li>Harness or connector</li><li>ABS actuator and electric unit (control unit)</li><li>IPDM E/R</li><li>ABS actuator and electric unit (control unit) power supply system</li><li>Fuse</li><li>Fusible link</li><li>Battery</li><li>Charge system</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1109" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-77, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199685

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.

2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

# C1109 POWER AND GROUND SYSTEM

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## 2. PERFORM SELF-DIAGNOSIS

④ With CONSULT

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1109" detected?

YES >> GO TO 3.

NO >> INSPECTION END

## 3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, fuse, or fusible link.

## 4. CHECK TERMINAL

1. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check the IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> Repair / replace harness, connector, or terminal.

# C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

### DTC Logic

INFOID:000000012199686

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1110	CONTROLLER FAILURE (Controller failure)	When there is an internal malfunction in the ABS actuator and electric unit (control unit).

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• The vehicle travels near high-voltage electrical power lines.</li><li>• Motor built-in the ABS actuator and electric unit (control unit) operates temporarily without a break.</li><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>	<ul style="list-style-type: none"><li>• ABS actuator and electric unit (control unit)</li><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1110" detected?

YES-1 >> "C1110" is displayed by "CRNT": Proceed to [BRC-79, "Diagnosis Procedure"](#).

YES-2 >> "C1110" is displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199687

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace harness, connector, fuse, or fusible link.

# C1110, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## 2. PERFORM SELF-DIAGNOSIS

④ With CONSULT

Perform self-diagnosis for "ABS".

**NOTE:**

Replace the ABS actuator and electric unit (control unit) even if other DTCs are displayed along with "C1110" in self-diagnosis for "ABS".

Is DTC "C1110" detected?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153. "Removal and Installation"](#).
- NO >> INSPECTION END (Although motor built-in the ABS actuator and electric unit (control unit) operates temporarily without a break, this is not a malfunction. Erase the memory of self-diagnosis results.)



# C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## C1111 ABS MOTOR, MOTOR RELAY SYSTEM

### DTC Logic

INFOID:000000012199688

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1111	PUMP MOTOR (Pump motor and motor relay)	<ul style="list-style-type: none"> <li>When a malfunction is detected in motor or motor relay.</li> </ul>

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> <li>Harness or connector</li> <li>ABS actuator and electric unit (control unit) power supply system</li> <li>Fuse</li> <li>Fusible link</li> <li>Battery</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector</li> <li>ABS actuator and electric unit (control unit)</li> <li>ABS actuator and electric unit (control unit) power supply system</li> <li>Fuse</li> <li>Fusible link</li> <li>Battery</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

Ⓜ With CONSULT

- Turn the ignition switch OFF → ON, and wait 30 seconds.
- Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
- Stop the vehicle.
- Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

- Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

- Perform self-diagnosis for "ABS".

Is DTC "C1111" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-81, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199689

#### 1. CHECK CONNECTOR

- Turn the ignition switch OFF.
- Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

# C1111 ABS MOTOR, MOTOR RELAY SYSTEM

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## 2. PERFORM SELF-DIAGNOSIS

Ⓟ With CONSULT

1. Turn the ignition switch OFF → ON, and wait 30 seconds.
2. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.  
**NOTE:**  
Vehicle must be driven after repair or replacement to erase the previous DTCs.
3. Stop the vehicle.
4. Turn the ignition switch OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
5. Start the engine.  
**NOTE:**  
Wait at least 10 seconds after start the engine.
6. Perform self-diagnosis for "ABS".

Is DTC "C1111" detected?

- YES >> GO TO 3.  
NO >> INSPECTION END

## 3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair / replace harness, connector, or fuse, and GO TO 4.

## 4. ERASE SELF-DIAGNOSIS RESULT (1)

Ⓟ With CONSULT

1. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.  
**NOTE:**  
Vehicle must be driven after repair or replacement to erase the previous DTCs.
2. Stop the vehicle.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.

>> INSPECTION END

## 5. CHECK TERMINAL

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).  
NO >> Repair / replace harness or connector, and GO TO 6.

## 6. ERASE SELF-DIAGNOSIS RESULT (2)

Ⓟ With CONSULT

1. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.  
**NOTE:**  
Vehicle must be driven after repair or replacement to erase the previous DTCs.
2. Stop the vehicle.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.

# C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

>> INSPECTION END

A

B

C

D

E

**BRC**

G

H

I

J

K

L

M

N

O

P

# C1113, C1145, C1146 YAW RATE/SIDE/DECCEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## C1113, C1145, C1146 YAW RATE/SIDE/DECCEL G SENSOR

### DTC Logic

INFOID:000000012199690

### DTC DETECTION LOGIC

DTC	Display item (Trouble diagnosis content)	Malfunction detected condition
C1113	G-SENSOR (Decel G sensor circuit)	When a malfunction is detected in decel G signal.
C1145	YAW RATE SENSOR (Yaw rate sensor circuit)	<ul style="list-style-type: none"> <li>• When a malfunction is detected in yaw rate signal.</li> <li>• When a signal line of yaw rate/side/deccl G sensor is open or shorted.</li> <li>• When power supply voltage of yaw rate/side/deccl G sensor is in following state.                             <ul style="list-style-type: none"> <li>- Yaw rate/side/deccl G sensor power supply voltage: <math>4.8\text{ V} \geq</math> yaw rate/side/deccl G sensor power supply voltage</li> <li>- Yaw rate/side/deccl G sensor power supply voltage: <math>5.2\text{ V} \leq</math> yaw rate/side/deccl G sensor power supply voltage</li> </ul> </li> </ul>
C1146	SIDE G-SEN CIRCUIT (Side G sensor circuit)	When a malfunction is detected in side G signal.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

DTC	PAST DTC	CRNT DTC
C1113	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit) power supply system</li> <li>• Fuse</li> <li>• Fusible link</li> <li>• Battery</li> <li>• Change in vehicle posture (e.g. different tire sizes on front and rear, overload)</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• Yaw rate/side/deccl G sensor</li> <li>• ABS actuator and electric unit (control unit)</li> <li>• ABS actuator and electric unit (control unit) power supply system</li> <li>• Fuse</li> <li>• Fusible link</li> <li>• Battery</li> <li>• Change in vehicle posture (e.g. different tire sizes on front and rear, overload)</li> </ul>
C1145	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit) power supply system</li> <li>• Fuse</li> <li>• Fusible link</li> <li>• Battery</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• Yaw rate/side/deccl G sensor</li> <li>• ABS actuator and electric unit (control unit)</li> <li>• ABS actuator and electric unit (control unit) power supply system</li> <li>• Fuse</li> <li>• Fusible link</li> <li>• Battery</li> </ul>
C1146		


### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

# C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

3. Perform self-diagnosis for "ABS".

Is DTC "C1113", "C1145" or "C1146" detected?

YES-1 >> "C1113", "C1145", or "C1146" is displayed by "CRNT": Proceed to [BRC-85. "Diagnosis Procedure"](#).

YES-2 >> "C1113", "C1145", and "C1146" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45. "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

## Diagnosis Procedure

INFOID:000000012199691

### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace harness, connector, fuse, or fusible link.

### 2. CHECK CONNECTOR

1. Turn the ignition switch OFF.

2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

3. Check the yaw rate/side/decel G sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 3.

### 3. PERFORM SELF-DIAGNOSIS

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1113", "C1145" or "C1146" detected?

YES >> GO TO 4.

NO >> INSPECTION END

### 4. CHECK YAW RATE/SIDE/DECEL G SENSOR POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.

2. Disconnect ABS actuator and electric unit (control unit) harness connector.

3. Disconnect yaw rate/side/decel G sensor harness connector.

4. Check the continuity between yaw rate/side/decel G sensor harness connector and ABS actuator and electric unit (control unit) harness connector.

Yaw rate/side/decel G sensor		ABS actuator and electric unit (control unit)		Continuity
Connector	Terminal	Connector	Terminal	
B38	4	E35	13	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness or connector.

### 5. CHECK YAW RATE/SIDE/DECEL G SENSOR GROUND CIRCUIT

Check the continuity between yaw rate/side/decel G sensor harness connector and ABS actuator and electric unit (control unit) harness connector.

# C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

Yaw rate/side/decel G sensor		ABS actuator and electric unit (control unit)		Continuity
Connector	Terminal	Connector	Terminal	
B38	2	E35	28	Existed

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair / replace harness or connector.

## 6. CHECK YAW RATE/SIDE/DECEL G SENSOR SIGNAL CIRCUIT

Check the continuity between yaw rate/side/decel G sensor harness connector and ABS actuator and electric unit (control unit) harness connector.

Yaw rate/side/decel G sensor		ABS actuator and electric unit (control unit)		Continuity
Connector	Terminal	Connector	Terminal	
B38	5	E35	14	Existed
	6		29	

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Repair / replace harness or connector.

## 7. CHECK YAW RATE/SIDE/DECEL G SENSOR CIRCUIT

Check the continuity between each terminal of yaw rate/side/decel G sensor harness connector.

Yaw rate/side/decel G sensor		Continuity
Connector	Terminal	
B38	2 – 4	Not existed
	2 – 5	
	2 – 6	
	4 – 5	
	4 – 6	
	5 – 6	

Is the inspection result normal?

- YES >> GO TO 8.
- NO >> Repair / replace harness or connector.

## 8. CHECK YAW RATE/SIDE/DECEL G SENSOR (1)

Ⓜ With CONSULT

1. Connect yaw rate/side/decel G sensor harness connector.
2. Connect ABS actuator and electric unit (control unit) harness connector.
3. Turn the ignition switch ON.

**NOTE:**


Never start the engine.

4. Select “ABS”, “DATA MONITOR” and “DECEL G-SEN” in order.
5. Move yaw rate/side/decel G sensor as shown in the figure to check the output before and after moving the sensor.

Condition	DATA MONITOR
Horizontal	Approx. 0 G
Vertical	Approx. +1 G

Is the inspection result normal?

- YES >> GO TO 9.

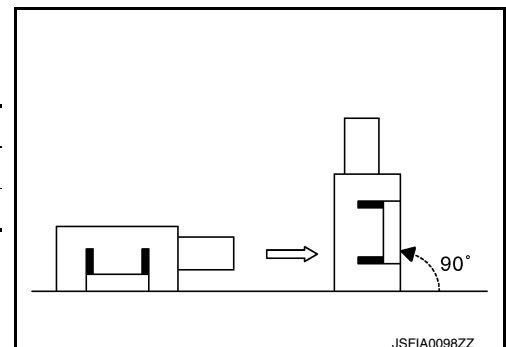

JSFIA0098ZZ

# C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

NO >> Replace the yaw rate/side/decel G sensor. Refer to [BRC-155, "Removal and Installation"](#).

## 9. CHECK YAW RATE/SIDE/DECEL G SENSOR (2)

1. Turn the ignition switch OFF.
2. Connect following terminals using a test harness installed between yaw rate/side/decel G sensor and harness connector.

Yaw rate/side/decel G sensor	Harness connector	
	Connector	Terminal
2	B38	2
4		4
5		5
6		6

3. Turn the ignition switch ON.

**NOTE:**

Never start the engine.

4. Check the voltage between yaw rate/side/decel G sensor harness connector terminals.

**CAUTION:**

**Never short out the terminals while measuring voltages.**

+		-		Voltage
Yaw rate/side/decel G sensor				
connector	Terminal			
B38	5	2		2.5 – 4.5 V
	6	2		0.5 – 2.5 V

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).
- NO >> Replace the yaw rate/side/decel G sensor. Refer to [BRC-155, "Removal and Installation"](#).

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# C1115 WHEEL SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## C1115 WHEEL SENSOR

### DTC Logic

INFOID:000000012199692

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1115	ABS SENSOR [ABNORMAL SIGNAL] (Wheel sensor [abnormal signal])	When difference in wheel speed between any wheel and others is detected the vehicle is driven, because of installation of other tires than specified.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Wheel sensor</li><li>• Sensor rotor</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Wheel sensor</li><li>• Sensor rotor</li><li>• ABS actuator and electric unit (control unit)</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li><li>• Tire size</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### Ⓟ With CONSULT

1. Start the engine.
2. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
3. Stop the vehicle.
4. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

#### Is DTC "C1115" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-88, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199693

#### CAUTION:

Never check between wheel sensor harness connector terminals.



# C1115 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## 1. CHECK TIRE

Check the tire air pressure, wear and size. Refer to [WT-47, "Tire Air Pressure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Adjust air pressure or replace tire and GO TO 2.

## 2. CHECK DATA MONITOR (1)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".

2. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

4. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

**NOTE:**

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors. is the difference within 5%, respectively?

YES >> GO TO 3.

NO >> GO TO 4.

## 3. PERFORM SELF-DIAGNOSIS (1)

Ⓜ With CONSULT

1. Stop the vehicle.

2. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

YES >> GO TO 4.

NO >> INSPECTION END

## 4. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness, connector, fuse, or fusible link.

## 5. CHECK WHEEL SENSOR AND SENSOR ROTOR

1. Turn the ignition switch OFF.

2. Disconnect wheel sensor harness connector.

3. Remove dust and foreign matter adhered to the wheel sensor and sensor rotor with a vacuum dust collector through the wheel sensor mounting hole.

**CAUTION:**

Install wheel sensor with no backlash and float, and tighten the mounting bolt to the specified torque.

• Front: Refer to [BRC-147, "FRONT WHEEL SENSOR : Exploded View"](#).

• Rear: Refer to [BRC-148, "REAR WHEEL SENSOR : Exploded View"](#).

>> GO TO 6.

## 6. CHECK WHEEL SENSOR

Check the wheel sensor for damage.

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 8.

## 7. CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Disconnect ABS actuator and electric unit (control unit) harness connector.
2. Connect ABS active wheel sensor tester (SST: J-45741-A) to wheel sensor using appropriate adapter.
3. Turn the ABS active wheel sensor tester power switch ON.

**NOTE:**

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

4. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash ON and OFF to indicate an output signal.

**NOTE:**

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

YES >> GO TO 11.

NO >> GO TO 8.

## 8. REPLACE WHEEL SENSOR (1)

Ⓜ With CONSULT

1. Replace the wheel sensor.
  - Front: Refer to [BRC-147, "FRONT WHEEL SENSOR : Removal and Installation"](#).
  - Rear: Refer to [BRC-150, "REAR WHEEL SENSOR : Removal and Installation"](#).
2. Connect ABS actuator and electric unit (control unit) harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

**NOTE:**

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 9.

NO >> GO TO 19.

## 9. PERFORM SELF-DIAGNOSIS (2)

Ⓜ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.
  - NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
3. Start the engine.
  - NOTE:**  
Wait at least 10 seconds after start the engine.
4. Perform self-diagnosis for "ABS".

# C1115 WHEEL SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

Is DTC "C1115" detected?

- YES >> GO TO 10.
- NO >> INSPECTION END

## 10. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the wheel sensor harness connector for disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 12.
- NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 11.

## 11. CHECK DATA MONITOR (2)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

**NOTE:**

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%. respectively?

- YES >> GO TO 12.
- NO >> GO TO 13.

## 12. PERFORM SELF-DIAGNOSIS (3)

Ⓜ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
3. Start the engine.  
**NOTE:**  
Wait at least 10 seconds after start the engine.
4. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

- YES >> GO TO 13.
- NO >> INSPECTION END

## 13. CHECK TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and then check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
3. Disconnect wheel sensor harness connector and check each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 16.
- NO >> Repair / replace harness, connector, or terminal, and GO TO 14.

## 14. CHECK DATA MONITOR (3)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

# C1115 WHEEL SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
 Wait at least 10 seconds after turning ignition switch OFF or ON.
5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".  
**NOTE:**  
 Set the "DATA MONITOR" recording speed to "10 msec".
7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.  
**NOTE:**  
 Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

- YES >> GO TO 15.  
 NO >> GO TO 16.

## 15. PERFORM SELF-DIAGNOSIS (4)

Ⓟ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.  
**NOTE:**  
 Wait at least 10 seconds after turning ignition switch OFF.
3. Start the engine.  
**NOTE:**  
 Wait at least 10 seconds after start the engine.
4. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

- YES >> GO TO 16.  
 NO >> INSPECTION END

## 16. CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect wheel sensor harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Check continuity while turning steering wheel left and right, or while moving center harness in wheel housing.)  
 - Measurement connector and terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E35	23	E22	(Front LH wheel)	1  Existed
	21	E39	(Front RH wheel)	
	26	B44	(Rear LH wheel)	
	11	B41*1 B45*2	(Rear RH wheel)	

\*1: 2WD

\*2: AWD

- Measurement connector and terminal for signal circuit

# C1115 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E35	27	E22	(Front LH wheel)	Existed
	12	E39	(Front RH wheel)	
	30	B44	(Rear LH wheel)	
	15	B41 <sup>*1</sup> B45 <sup>*2</sup>	(Rear RH wheel)	

A  
B  
C  
D  
E

\*1: 2WD

\*2: AWD

- Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E35	23, 27	Ground	Not existed
	21, 12		
	26, 30		
	11, 15		

**BRC**

G

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair / replace harness or connector, and GO TO 17.

## 17. CHECK DATA MONITOR (4)

④ With CONSULT

- Connect ABS actuator and electric unit (control unit) harness connector.
- Connect wheel sensor harness connector.
- Erase self-diagnosis result for "ABS".
- Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

- Start the engine.
- Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

**NOTE:**

Set the "DATA MONITOR" recording speed to "10 msec".

- Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5% respectively?

YES >> GO TO 18.

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

## 18. PERFORM SELF-DIAGNOSIS (5)

④ With CONSULT

- Stop the vehicle.
- Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

- Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

P

## C1115 WHEEL SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

4. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153. "Removal and Installation"](#).

NO >> INSPECTION END

### 19. REPLACE SENSOR ROTOR

Ⓟ With CONSULT

1. Replace the sensor rotor.

- Front: Refer to [BRC-152. "FRONT SENSOR ROTOR : Removal and Installation"](#)

- Rear: Refer to [BRC-152. "REAR SENSOR ROTOR : Removal and Installation"](#).

2. Erase self-diagnosis result for "ABS".

3. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

4. Start the engine.

5. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

**NOTE:**

Vehicle must be driven after repair or replacement to erase the previous DTCs.

6. Stop the vehicle.

7. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

8. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

9. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153. "Removal and Installation"](#).

NO >> INSPECTION END

**CAUTION:**

**Never check between wheel sensor harness connector terminals.**

# C1116 STOP LAMP SWITCH

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## C1116 STOP LAMP SWITCH

### DTC Logic

INFOID:000000012199694

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1116	STOP LAMP SW (Stop lamp switch)	When stop lamp switch signal is not input when brake pedal operates.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Stop lamp switch signal circuit</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Stop lamp switch</li><li>• ABS actuator and electric unit (control unit)</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

④ With CONSULT

1. Turn the ignition switch OFF, and wait 10 seconds or more.
2. Start the engine.

#### NOTE:

Stop the vehicle.

3. Wait 1 minute or more.

#### NOTE:

Never depress brake pedal.

4. Depress brake pedal by 100 mm (3.94 in) or more, and maintain at that position for a minimum of 1 minute or more.

5. Release brake pedal, and wait 1 minute or more.

6. Repeat step 4 to 5 ten or more times.

7. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

8. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

9. Perform self-diagnosis for "ABS".

#### Is DTC "C1116" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-96, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

# C1116 STOP LAMP SWITCH

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

INFOID:000000012199695

## Diagnosis Procedure

### NOTE:

DTC "C1116" may be detected when the brake pedal and the accelerator pedal are simultaneously depressed for 1 minute or more while driving the vehicle. This is not a malfunction.

### 1. INTERVIEW FROM THE CUSTOMER

Check if the brake pedal and the accelerator pedal are simultaneously depressed for 1 minute or more while driving the vehicle.

Is there such a history?

- YES >> GO TO 2.
- NO >> GO TO 3.

### 2. PERFORM SELF-DIAGNOSIS

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
3. Start the engine.  
**NOTE:**  
Stop the vehicle.
4. Depress the brake pedal several times.
5. Turn the ignition switch OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
6. Start the engine.  
**NOTE:**  
Wait at least 10 seconds after start the engine.
7. Perform self-diagnosis for "ABS".

Is DTC "C1116" detected?

- YES >> GO TO 3.
- NO >> INSPECTION END

### 3. STOP LAMP FOR ILLUMINATION

Depress brake pedal and check that stop lamp turns ON.

Does stop lamp turn ON?

- YES >> GO TO 5.
- NO >> Check the stop lamp system circuit. GO TO 4.

### 4. CHECK DATA MONITOR (1)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
3. Start the engine.  
**NOTE:**  
Stop the vehicle.
4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44. "Reference Value"](#).

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> GO TO 5.

### 5. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the stop lamp switch harness connector for disconnection or looseness.



# C1116 STOP LAMP SWITCH

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 6.  
NO >> Repair / replace harness or connector, and GO TO 6.

## 6. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 7.  
NO >> Repair / replace harness, connector, fuse, or fusible link.

## 7. CHECK STOP LAMP SWITCH CLEARANCE

1. Turn the ignition switch OFF.
2. Check the stop lamp switch clearance. Refer to [BR-9. "Inspection and Adjustment"](#).

Is the inspection result normal?

- YES >> GO TO 9.  
NO >> Adjust stop lamp switch clearance. Refer to [BR-9. "Inspection and Adjustment"](#). GO TO 8.

## 8. CHECK DATA MONITOR (2)

Ⓟ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
3. Start the engine.  
**NOTE:**  
Stop the vehicle.
4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44. "Reference Value"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> GO TO 9.

## 9. CHECK STOP LAMP SWITCH

Check the stop lamp switch. Refer to [BRC-99. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 10.  
NO >> Replace the stop lamp switch. Refer to [BR-20. "Removal and Installation"](#). GO TO 10.

## 10. CHECK DATA MONITOR (3)

Ⓟ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
3. Start the engine.  
**NOTE:**  
Start the vehicle.
4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44. "Reference Value"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> GO TO 11.

## 11. CHECK CONNECTOR AND TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.

# C1116 STOP LAMP SWITCH

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

3. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
4. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
5. Disconnect stop lamp switch harness connector.
6. Check the stop lamp switch harness connector for disconnection or looseness.
7. Check the stop lamp switch pin terminals for damage or loose connection with harness connector.

### Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair / replace harness, connector, or terminal, and GO TO 12.

## 12.CHECK DATA MONITOR (4)

### ⓂWith CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect stop lamp switch harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.

#### NOTE:

Stop the vehicle.

6. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44, "Reference Value"](#).

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 13.

## 13.CHECK STOP LAMP SWITCH CIRCUIT (1)

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Condition	Voltage
ABS actuator and electric unit (control unit)				
Connector	Terminal			
E35	8	Ground	Brake pedal depressed	10 – 16 V
			Brake pedal not depressed	Approx. 0 V

### Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> Repair / replace harness or connector, and GO TO 14.

## 14.CHECK STOP LAMP SWITCH CIRCUIT (2)

1. Turn the ignition switch OFF.
2. Disconnect stop lamp switch harness connector.
3. Check the continuity between ABS actuator and electric unit (control unit) harness connector and stop lamp switch harness connector.

ABS actuator and electric unit (control unit)		Stop lamp switch		Continuity
Connector	Terminal	Connector	Terminal	
E35	8	E102 <sup>*1</sup> E118 <sup>*2</sup>	2	Existed

\*1: Models with CVT

\*2: Models with M/T

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

# C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E35	8	Ground	Not existed

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> Repair / replace harness or connector, and GO TO 15.

## 15.CHECK DATA MONITOR (5)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect stop lamp switch harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.

**NOTE:**

Stop the vehicle.

6. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44, "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

## Component Inspection

INFOID:000000012199696

### 1.CHECK STOP LAMP SWITCH

1. Turn the ignition switch OFF.
2. Disconnect stop lamp switch harness connector.
3. Check the continuity between stop lamp switch connector terminals.

Stop lamp switch	Condition	Continuity
Terminal		
1 – 2	When stop lamp switch is released (When brake pedal is depressed)	Existed
	When stop lamp switch is pressed (When brake pedal is released)	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the stop lamp switch. Refer to [BR-20, "Removal and Installation"](#).

# C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM

### DTC Logic

INFOID:000000012199697

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1120	FR LH IN ABS SOL (Front LH ABS IN solenoid valve)	When a malfunction is detected in front LH ABS IN valve.
C1122	FR RH IN ABS SOL (Front RH ABS IN solenoid valve)	When a malfunction is detected in front RH ABS IN valve.
C1124	RR LH IN ABS SOL (Rear LH ABS IN solenoid valve)	When a malfunction is detected in rear LH ABS IN valve.
C1126	RR RH IN ABS SOL (Rear RH ABS IN solenoid valve)	When a malfunction is detected in rear RH ABS IN valve.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit)</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### Ⓔ With CONSULT

1. Turn the ignition switch OFF.

##### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

##### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1120", "C1122", "C1124" or "C1126" detected?

YES-1 >> "C1120", "C1122", "C1124" or "C1126" is displayed by "CRNT": Proceed to [BRC-100, "Diagnosis Procedure"](#).

YES-2 >> "C1120", "C1122", "C1124" or "C1126" is displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199698

#### 1. CHECK CONNECTOR

# C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

## 2.PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1120", "C1122", "C1124" or "C1126" detected?

YES >> GO TO 3.

NO >> INSPECTION END

## 3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, fuse, or fusible link.

## 4.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> Repair / replace harness, connector, or terminal.

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM

### DTC Logic

INFOID:000000012199699

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1121	FR LH OUT ABS SOL (Front LH ABS OUT solenoid valve)	When a malfunction is detected in front LH ABS OUT valve.
C1123	FR RH OUT ABS SOL (Front RH ABS OUT solenoid valve)	When a malfunction is detected in front RH ABS OUT valve.
C1125	RR LH OUT ABS SOL (Rear LH ABS OUT solenoid valve)	When a malfunction is detected in rear LH ABS OUT valve.
C1127	RR RH OUT ABS SOL (Rear RH ABS OUT solenoid valve)	When a malfunction is detected in rear RH ABS OUT valve.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit)</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### Ⓟ With CONSULT

1. Turn the ignition switch OFF.

##### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

##### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1121", "C1123", "C1125" or "C1127" detected?

YES-1 >> "C1121", "C1123", "C1125" or "C1127" is displayed by "CRNT": Proceed to [BRC-102, "Diagnosis Procedure"](#).

YES-2 >> "C1121", "C1123", "C1125" and "C1127" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199700

#### 1. CHECK CONNECTOR

# C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

## 2.PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1121", "C1123", "C1125" or "C1127" detected?

YES >> GO TO 3.

NO >> INSPECTION END

## 3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, fuse, or fusible link.

## 4.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> Repair / replace harness, connector, or terminal.

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# C1130 ENGINE SIGNAL

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## C1130 ENGINE SIGNAL

### DTC Logic

INFOID:000000012199701

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1130	ENGINE SIGNAL 1 (Engine system signal)	When a malfunction is detected in ECM system.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li><li>• CAN communication line</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ECM</li><li>• ABS actuator and electric unit (control unit)</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li><li>• CAN communication line</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1130" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-104, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199702

#### 1. CHECK ENGINE SYSTEM

Ⓜ With CONSULT

Perform self-diagnosis for "ENGINE".

• MR for NISMO RS models: Refer to [EC-84, "CONSULT Function"](#).

• MR except for NISMO RS models: Refer to [EC-667, "CONSULT Function"](#).

Is DTC detected?

YES >> Check the DTC.



# C1130 ENGINE SIGNAL

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

- MR for NISMO RS models: Refer to [EC-115, "DTC Index"](#).
- MR except for NISMO RS models: Refer to [EC-706, "DTC Index"](#).

NO >> GO TO 2.

## 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness, connector, fuse, or fusible link.

## 3. CHECK CONNECTOR AND TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect ABS actuator and electric unit (control unit) harness connector.
4. Check the connector for disconnection or looseness.
5. Check the pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, or terminal, securely lock the connector, and GO TO 4.

## 4. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Ⓟ With CONSULT

1. Connect ECM harness connector.
2. Connect ABS actuator and electric unit (control unit) harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1130" or "U1000" detected?

YES ("C1130") >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

YES ("U1000") >> Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

NO >> INSPECTION END

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# C1140 ACTUATOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## C1140 ACTUATOR RELAY SYSTEM

### DTC Logic

INFOID:000000012199703

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1140	ACTUATOR RLY (Actuator relay)	When a malfunction is detected in actuator relay.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit)</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

Ⓟ With CONSULT

1. Turn the ignition switch OFF.

##### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

##### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1140" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-106, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199704

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.

2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

#### 2. PERFORM SELF-DIAGNOSIS

Ⓟ With CONSULT

# C1140 ACTUATOR RELAY SYSTEM

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1140" detected?

YES >> GO TO 3.

NO >> INSPECTION END

### **3.**CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, fuse, or fusible link.

### **4.**CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153. "Removal and Installation"](#).

NO >> Repair / replace harness, connector, or terminal.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# C1143 STEERING ANGLE SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## C1143 STEERING ANGLE SENSOR

### DTC Logic

INFOID:000000012199705

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1143	ST ANG SEN CIRCUIT (Steering angle sensor circuit)	When a malfunction is detected in steering angle sensor.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li><li>• CAN communication line</li><li>• Incomplete neutral position adjustment of steering angle sensor</li><li>• Improper installation of steering angle sensor</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Steering angle sensor</li><li>• ABS actuator and electric unit (control unit)</li><li>• CAN communication line</li><li>• Wheel alignment</li><li>• Incomplete neutral position adjustment of steering angle sensor</li><li>• ABS actuator and electric unit (control unit) power supply system</li><li>• Fuse</li><li>• Fusible link</li><li>• Battery</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1143" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-108, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199706

#### 1. ADJUST THE NEUTRAL POSITION OF STEERING ANGLE SENSOR

Ⓜ With CONSULT

Perform neutral position adjustment of steering angle sensor. Refer to [BRC-63, "Description"](#).

>> GO TO 2.

# C1143 STEERING ANGLE SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## 2. PERFORM SELF-DIAGNOSIS (1)

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1143" detected?

YES-1 >> "CRNT" is displayed: GO TO 3.

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO >> INSPECTION END

## 3. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the steering angle sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 4.

## 4. PERFORM SELF-DIAGNOSIS (2)

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1143" detected?

YES >> GO TO 5.

NO >> INSPECTION END

## 5. CHECK STEERING ANGLE SENSOR POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect steering angle sensor harness connector.
3. Check the voltage between steering angle sensor harness connector and ground.

+		-	Voltage
Steering angle sensor			
Connector	Terminal		
M30	4	Ground	Approx. 0 V

4. Turn the ignition switch ON.

**NOTE:**

Start the engine.

5. Check the voltage between steering angle sensor harness connector and ground.

+		-	Voltage
Steering angle sensor			
Connector	Terminal		
M30	4	Ground	10 – 16 V

Is the inspection result normal?

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# C1143 STEERING ANGLE SENSOR

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 7.  
NO >> GO TO 6.

## 6. CHECK STEERING ANGLE SENSOR POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 10 A fuse (#3).
3. Check the continuity and short circuit between steering angle sensor harness connector terminal (4) and 10 A fuse (#3).

Is the inspection result normal?

- YES >> Perform trouble diagnosis for ignition power supply.  
NO >> Repair / replace harness, connector, or fuse.

## 7. CHECK STEERING ANGLE SENSOR GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check the continuity between steering angle sensor harness connector and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M30	1	Ground	Existed

Is the inspection result normal?

- YES >> GO TO 8.  
NO >> Repair / replace harness or connector.

## 8. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 9.  
NO >> Repair / replace harness, connector, fuse, or fusible link.

## 9. CHECK TERMINAL

Check the steering angle sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 10.  
NO >> Repair / replace harness, connector, or terminal.

## 10. CHECK CAN COMMUNICATION LINE

1. Connect steering angle sensor harness connector.
2. Check the CAN communication line. Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

Is the inspection result normal?

- YES >> GO TO 11.  
NO >> Repair / replace harness or connector. Refer to [LAN-7, "Precautions for Harness Repair"](#).

## 11. CHECK DATA MONITOR

Ⓜ With CONSULT

1. "ABS", "DATA MONITOR" and "STR ANGLE SIG" according to this order.
2. Check that the indication changes with the steering angle when the steering wheel is turned left/right from the neutral position. Refer to [BRC-44, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).  
NO >> Replace the steering angle sensor. Refer to [BRC-153, "Removal and Installation"](#).

# C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

### DTC Logic

INFOID:000000012199707

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1144	ST ANG SEN SIGNAL (Steering angle sensor not complete)	When neutral position adjustment of steering angle sensor is not complete.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
Incomplete neutral position adjustment of steering angle sensor	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• Steering angle sensor</li> <li>• ABS actuator and electric unit (control unit)</li> <li>• Incomplete neutral position adjustment of steering angle sensor</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

④ With CONSULT

1. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1144" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-111, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199708

#### 1. ADJUST THE NEUTRAL POSITION OF STEERING ANGLE SENSOR

Perform neutral position adjustment of steering angle sensor. Refer to [BRC-63, "Description"](#).

>> GO TO 2.

#### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

④ With CONSULT

1. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

# C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

---

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1144" detected?

YES >> GO TO 3.

NO >> INSPECTION END

## 3.CHECK STEERING ANGLE SENSOR SYSTEM

---

1. Turn the ignition switch OFF.

2. Check the steering angle sensor system. Refer to [BRC-108. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, or terminal.

## 4.CHECK DATA MONITOR

---

④With CONSULT

1. "ABS", "DATA MONITOR" and "STR ANGLE SIG" according to this order.

2. Check that the indication changes with the steering angle when the steering wheel is turned left/right from the neutral position. Refer to [BRC-44. "Reference Value"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153. "Removal and Installation"](#).

NO >> Replace the steering angle sensor. Refer to [BRC-156. "Removal and Installation"](#).



# C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## C1155 BRAKE FLUID LEVEL SWITCH

### DTC Logic

INFOID:000000012199709

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1155	BR FLUID LEVEL LOW (Brake fluid level low)	<ul style="list-style-type: none"> <li>When brake fluid level low signal is detected.</li> <li>When an open circuit is detected in brake fluid level switch circuit.</li> </ul>

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> <li>Harness or connector</li> <li>Brake fluid level is low</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector</li> <li>ABS actuator and electric unit (control unit)</li> <li>Brake fluid level switch</li> <li>Combination meter</li> <li>Brake fluid level is low</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

④ With CONSULT

1. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1155" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-113, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199710

#### 1. CHECK BRAKE FLUID LEVEL

1. Turn the ignition switch OFF.

2. Check the brake fluid level. Refer to [BR-12, "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Refill brake fluid. Refer to [BR-12, "Refilling"](#). GO TO 2.

#### 2. PERFORM SELF-DIAGNOSIS (1)

④ With CONSULT

1. Erase self-diagnosis result for "ABS".

# C1155 BRAKE FLUID LEVEL SWITCH

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

2. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

### Is DTC "C1155" detected?

YES >> GO TO 3.

NO >> INSPECTION END

## 3. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the brake fluid level switch harness connector for disconnection or looseness.
3. Check the combination meter harness connector for disconnection or looseness.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness or connector, and GO TO 4.

## 4. PERFORM SELF-DIAGNOSIS (2)

### Ⓟ With CONSULT

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

### Is DTC "C1155" detected?

YES >> GO TO 5.

NO >> INSPECTION END

## 5. CHECK BRAKE FLUID LEVEL SWITCH

Check the brake fluids level switch. Refer to [BRC-116, "Component Inspection"](#).

### Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the reservoir tank. Refer to [BR-40, "Disassembly and Assembly"](#). GO TO 6.

## 6. PERFORM SELF-DIAGNOSIS (3)

### Ⓟ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

### Is DTC "C1155" detected?

YES >> GO TO 7.

NO >> INSPECTION END

## 7. CHECK CONNECTOR AND TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector.
3. Check the brake fluid level switch harness connector for disconnection or looseness.
4. Check the brake fluid level switch pin terminals for damage or loose connection with harness connector.
5. Disconnect combination meter harness connector.

# C1155 BRAKE FLUID LEVEL SWITCH

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

6. Check the combination meter harness connector for disconnection or looseness.
7. Check the combination meter pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair / replace harness, connector, or terminal, and GO TO 8.

## 8.PERFORM SELF-DIAGNOSIS (4)

ⓂWith CONSULT

1. Connect brake fluid level switch harness connector.
2. Connect combination meter harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF or ON.
5. Start the engine.  
**NOTE:**  
Wait at least 10 seconds after start the engine.
6. Perform self-diagnosis for "ABS".

Is DTC "C1155" detected?

YES >> GO TO 9.

NO >> INSPECTION END

## 9.CHECK BRAKE FLUID LEVEL SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector.
3. Disconnect combination meter harness connector.
4. Check the continuity between brake fluid level switch harness connector and combination meter harness connector.

Brake fluid level switch		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
E37	1	M34	11	Existed

5. Check the continuity between brake fluid level switch harness connector and ground.

Brake fluid level switch		—	Continuity
Connector	Terminal		
E37	1	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair / replace harness or connector, and GO TO 10.

## 10.CHECK BRAKE FLUID LEVEL SWITCH GROUND CIRCUIT

Check the continuity between brake fluid level switch harness connector and ground.

Brake fluid level switch		—	Continuity
Connector	Terminal		
E37	2	Ground	Existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair / replace harness or connector, and GO TO 11.

## 11.CHECK COMBINATION METER

1. Connect brake fluid level switch harness connector.
2. Connect combination meter harness connector.
3. Check the combination meter. Refer to [MWI-21, "On Board Diagnosis Function"](#).

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# C1155 BRAKE FLUID LEVEL SWITCH

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).  
NO >> Repair or replace combination meter. Refer to [MWI-64, "Removal and Installation"](#).

## Component Inspection

INFOID:000000012199711

### 1. CHECK BRAKE FLUID LEVEL SWITCH

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector.
3. Check the continuity between brake fluid level switch connector terminals.

Brake fluid level switch Terminal	Condition	Continuity
1 – 2	When brake fluid level in reservoir tank is within the specified level.	Not existed
	When brake fluid level in reservoir tank is less than the specified level.	Existed

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace the reservoir tank. Refer to [BR-40, "Disassembly and Assembly"](#).

C1164, C1165 CV SYSTEM

DTC Logic

INFOID:000000012199712

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1164	CV 1 (Cut valve 1)	When a malfunction is detected in cut valve 1.
C1165	CV 2 (Cut valve 2)	When a malfunction is detected in cut valve 2.

POSSIBLE CAUSE

**NOTE:**

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit) power supply system</li> <li>• Fuse</li> <li>• Fusible link</li> <li>• Battery</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit)</li> <li>• ABS actuator and electric unit (control unit) power supply system</li> <li>• Fuse</li> <li>• Fusible link</li> <li>• Battery</li> </ul>

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1164" or "C1165" detected?

YES-1 >> "C1164" or "C1165" is displayed by "CRNT": Proceed to [BRC-117, "Diagnosis Procedure"](#).

YES-2 >> "C1164" and "C1165" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012199713

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 3.

## C1164, C1165 CV SYSTEM

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

### 2.PERFORM SELF-DIAGNOSIS

 With CONSULT

Perform self-diagnosis for "ABS" again.

Is DTC "C1164" or "C1165" detected?

YES >> GO TO 3.

NO >> INSPECTION END

### 3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, fuse, or fusible link.

### 4.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> Repair / replace harness, connector, or terminal.

C1166, C1167 SV SYSTEM

DTC Logic

INFOID:000000012199714

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1166	SV 1 (Suction valve 1)	When a malfunction is detected in suction valve 1.
C1167	SV 2 (Suction valve 2)	When a malfunction is detected in suction valve 2.

POSSIBLE CAUSE

**NOTE:**

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit) power supply system</li> <li>• Fuse</li> <li>• Fusible link</li> <li>• Battery</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit)</li> <li>• ABS actuator and electric unit (control unit) power supply system</li> <li>• Fuse</li> <li>• Fusible link</li> <li>• Battery</li> </ul>

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1166" or "C1167" detected?

YES-1 >> "C1166" or "C1167" is displayed by "CRNT": Proceed to [BRC-119, "Diagnosis Procedure"](#).

YES-2 >> "C1166" and "C1167" is displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012199715

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 3.

## C1166, C1167 SV SYSTEM

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

### 2.PERFORM SELF-DIAGNOSIS

Ⓜ With CONSULT

Perform self-diagnosis for "ABS" again.

Is DTC "C1166" or "C1167" detected?

YES >> GO TO 3.

NO >> INSPECTION END

### 3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, fuse, or fusible link.

### 4.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> Repair / replace harness, connector, or terminal.



# C1176 STOP LAMP SW2

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## C1176 STOP LAMP SW2

### DTC Logic

INFOID:000000012199716

### DTC DETECTION LOGIC

DTC	Display item (Trouble diagnosis content)	Malfunction detected condition
C1176	STOP LAMP SW 2 (Stop lamp switch 2)	When brake pedal position switch signal is not input when brake pedal operates.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• Brake pedal position switch system</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• Brake pedal position switch</li> <li>• ABS actuator and electric unit (control unit)</li> <li>• ABS actuator and electric unit (control unit) power supply system</li> <li>• Fuse</li> <li>• Fusible link</li> <li>• Battery</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF, and wait 10 seconds or more.
2. Start the engine.  
**NOTE:**  
Stop the vehicle.
3. Wait 1 minute or more.  
**NOTE:**  
Never depress brake pedal.
4. Depress brake pedal by 100 mm (3.94 in) or more, and maintain at that position for a minimum of 1 minute or more.
5. Release brake pedal, and wait 1 minute or more.
6. Repeat step 4 to 5 ten or more times.
7. Turn the ignition switch OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
8. Start the engine.  
**NOTE:**  
Wait at least 10 seconds after start the engine.
9. Perform self-diagnosis for "ABS".

#### Is DTC "C1176" detected?

- YES-1 >> "CRNT" is displayed: Proceed to [BRC-122, "Diagnosis Procedure"](#).
- YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: INSPECTION END

## Diagnosis Procedure

### NOTE:

DTC "C1176" may be detected when the brake pedal and the accelerator pedal are simultaneously depressed for 1 minute or more while driving the vehicle. This is not a malfunction.

### 1. INTERVIEW FROM THE CUSTOMER

Check if the brake pedal and the accelerator pedal are simultaneously depressed for 1 minute or more while driving the vehicle.

Is there such a history?

YES >> GO TO 2.

NO >> GO TO 3.

### 2. PERFORM SELF-DIAGNOSIS (1)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

**NOTE:**

Stop the vehicle.

4. Depress the brake pedal several times.
5. Turn the ignition switch OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF.

6. Start the engine.

**NOTE:**

Wait at least 10 seconds after start the engine.

7. Perform self-diagnosis for "ABS".

Is DTC "C1176" detected?

YES >> GO TO 3.

NO >> INSPECTION END

### 3. CHECK DATA MONITOR (1)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

**NOTE:**

Stop the vehicle.

4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW2" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44, "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

### 4. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the brake pedal position switch harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 5.

### 5. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

# C1176 STOP LAMP SW2

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair / replace harness, connector, fuse, or fusible link.

## 6. CHECK BRAKE PEDAL POSITION SWITCH CLEARANCE

1. Turn the ignition switch OFF.

2. Check the brake pedal position switch clearance. Refer to [BR-9. "Inspection and Adjustment"](#).

Is the inspection result normal?

YES >> GO TO 8.

NO >> Adjust brake pedal position switch clearance. Refer to [BR-9. "Inspection and Adjustment"](#). GO TO 7.

## 7. CHECK DATA MONITOR (2)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".

2. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

**NOTE:**

Stop the vehicle.

4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW2" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44. "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 8.

## 8. CHECK BRAKE PEDAL POSITION SWITCH

Check the brake pedal position switch. Refer to [BRC-125. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace the brake pedal position switch. Refer to [BR-20. "Removal and Installation"](#). GO TO 9.

## 9. CHECK DATA MONITOR (3)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".

2. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

**NOTE:**

Stop the vehicle.

4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW2" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44. "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 10.

## 10. CHECK CONNECTOR AND TERMINAL

1. Turn the ignition switch OFF.

2. Disconnect ABS actuator and electric unit (control unit) harness connector.

3. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

4. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

5. Disconnect brake pedal position switch harness connector.

6. Check the brake pedal position switch harness connector for disconnection or looseness.

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# C1176 STOP LAMP SW2

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

7. Check the brake pedal position switch pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 11.

## 11. CHECK DATA MONITOR (4)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect brake pedal position switch harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.

**NOTE:**

Stop the vehicle.

6. Select "ABS", "DATA MONITOR" and "STOP LAMP SW2" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44. "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153. "Removal and Installation"](#).

## 12. CHECK BRAKE PEDAL POSITION SWITCH CIRCUIT (1)

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Condition	Voltage
ABS actuator and electric unit (control unit)				
Connector	Terminal			
E35	6	Ground	Brake pedal depressed	Approx. 0 V
			Brake pedal not depressed	Approx. 0 V

4. Turn the ignition switch ON.

**NOTE:**

Never start the engine.

5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Condition	Voltage
ABS actuator and electric unit (control unit)				
Connector	Terminal			
E35	6	Ground	Brake pedal depressed	Approx. 0 V
			Brake pedal not depressed	10– 16 V

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153. "Removal and Installation"](#).

NO >> Repair / replace harness or connector, and GO TO 13.

## 13. CHECK BRAKE PEDAL POSITION SWITCH CIRCUIT (2)

1. Turn the ignition switch OFF.
2. Disconnect brake pedal position switch harness connector.
3. Check the continuity between ABS actuator and electric unit (control unit) harness connector and brake pedal position switch harness connector.

# C1176 STOP LAMP SW2

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

ABS actuator and electric unit (control unit)		Brake pedal position switch		Continuity
Connector	Terminal	Connector	Terminal	
E35	6	E112	2	Existed

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E35	6	Ground	Not existed

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> Repair / replace harness or connector, and GO TO 14.

## 14. CHECK DATA MONITOR (4)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect brake pedal position switch harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

**NOTE:**

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.

**NOTE:**

Stop the vehicle.

6. Select "ABS", "DATA MONITOR" and "STOP LAMP SW2" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-44, "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

## Component Inspection

INFOID:0000000012199718

### 1. CHECK BRAKE PEDAL POSITION SWITCH

1. Turn the ignition switch OFF.
2. Disconnect brake pedal position switch harness connector.
3. Check the continuity between brake pedal position switch connector terminals.

Brake pedal position switch		Condition	Continuity
Terminal			
1 - 2		When brake pedal position switch is released. (When brake pedal is slightly depressed.)	Not existed
		When brake pedal position switch is pressed. (When brake pedal is fully released.)	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the brake pedal position switch. Refer to [BR-20, "Removal and Installation"](#).

# U1000 CAN COMM CIRCUIT

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## U1000 CAN COMM CIRCUIT

### Description

INFOID:000000012199719

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:000000012199720

### DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1000	CAN COMM CIRCUIT (CAN communication circuit)	When CAN communication signal is not continuously transmitted or received for 2 seconds or more.

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"><li>• Harness or connector</li><li>• CAN communication line</li></ul>	CAN communication system malfunction

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

Ⓟ With CONSULT

1. Turn the ignition switch OFF.

#### NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

#### NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "U1000" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-126, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

### Diagnosis Procedure

INFOID:000000012199721

Proceed to [LAN-17, "Trouble Diagnosis Flow Chart"](#).

# U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## U1010 CONTROL UNIT (CAN)

### Description

INFOID:000000012199722

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:000000012199723

### DTC DETECTION LOGIC

DTC	Display item (Trouble diagnosis content)	Malfunction detected condition
U1010	CONTROL UNIT (CAN) (Control unit [CAN communication])	When detecting error during the initial diagnosis of CAN controller of ABS actuator and electric unit (control unit).

A  
B  
C  
D  
E  
BRC

### POSSIBLE CAUSE

#### NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> <li>CAN communication line</li> <li>Harness or connector</li> </ul>	ABS actuator and electric unit (control unit)

G  
H  
I

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

Ⓜ With CONSULT

- Turn the ignition switch OFF.  
**NOTE:**  
Wait at least 10 seconds after turning ignition switch OFF.
- Start the engine.  
**NOTE:**  
Wait at least 10 seconds after start the engine.
- Perform self-diagnosis for "ABS".

Is DTC "U1010" detected?

- YES-1 >> "CRNT" is displayed: Proceed to [BRC-127, "Diagnosis Procedure"](#).
- YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: INSPECTION END

J  
K  
L  
M  
N  
O  
P

### Diagnosis Procedure

INFOID:000000012199724

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Check the ABS actuator and electric unit (control unit) harness connector for disconnection and deformation.

Is the inspection result normal?

## U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

- 
- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-153. "Removal and Installation"](#).
- NO >> Repair / replace harness, connector, or terminal.



# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000012199725

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY (1)

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Voltage
ABS actuator and electric unit (control unit)			
Connector	Terminal		
E35	16	Ground	Approx. 0 V

4. Turn the ignition switch ON  
**NOTE:**  
Start the engine.
5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Voltage
ABS actuator and electric unit (control unit)			
Connector	Terminal		
E35	16	Ground	10 – 16 V

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 10A fuse (#57).
3. Disconnect IPDM E/R harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and IPDM E/R harness connector.

ABS actuator and electric unit (control unit)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E35	16	E15	59	Existed

5. Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E35	16	Ground	No existed

Is the inspection result normal?

- YES >> Perform trouble diagnosis for ignition power supply. Refer to [PG-43. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- NO >> Repair / replace harness, connector, or fuse.

#### 3. CHECK MOTOR AND MOTOR RELAY POWER SUPPLY

1. Turn the ignition switch OFF.
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

+		-	Voltage
ABS actuator and electric unit (control unit)			
Connector	Terminal		
E35	1	Ground	10 – 16 V

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> GO TO 4.

## 4. CHECK MOTOR AND MOTOR RELAY POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 30A fusible link (K).
3. Check the continuity and short circuit between ABS actuator and electric unit (control unit) harness connector terminal (1) and 30A fusible link (K).

Is the inspection result normal?

- YES >> Perform trouble diagnosis for battery power supply. Refer to [PG-12. "Wiring Diagram - BATTERY POWER SUPPLY -"](#).
- NO >> Repair / replace harness, connector, or fusible link.

## 5. CHECK ACTUATOR RELAY, ABS IN VALVE, ABS OUT VALVE POWER SUPPLY

1. Turn the ignition switch OFF.
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Voltage
ABS actuator and electric unit (control unit)			
Connector	Terminal		
E35	2	Ground	10 – 16 V

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> GO TO 6.

## 6. CHECK ACTUATOR RELAY, ABS IN VALVE, ABS OUT VALVE POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 50A fusible link (I).
3. Check the continuity and short circuit between ABS actuator and electric unit (control unit) harness connector terminal (2) and 50A fusible link (I).

Is the inspection result normal?

- YES >> Perform trouble diagnosis for battery power supply. Refer to [PG-12. "Wiring Diagram - BATTERY POWER SUPPLY -"](#).
- NO >> Repair / replace harness, connector, or fusible link.

## 7. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E35	3	Ground	Existed
	4		

Is the inspection result normal?

- YES >> GO TO 8.
- NO >> Repair / replace harness, connector, or terminal.

## 8. CHECK TERMINAL

## POWER SUPPLY AND GROUND CIRCUIT

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

1. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector. A
2. Check the IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#). B

NO >> Repair / replace harness, connector, or terminal. C

C

D

E

**BRC**

G

H

I

J

K

L

M

N

O

P

# PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## PARKING BRAKE SWITCH

### Component Function Check

INFOID:000000012199726

#### 1.CHECK PARKING BRAKE SWITCH OPERATION

Operate the parking brake lever. Then check that the brake warning lamp in the combination meter turns ON/OFF correctly.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to [BRC-132. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000012199727

#### 1.CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect parking brake switch harness connector.
3. Disconnect combination meter harness connector.
4. Check the continuity between parking brake switch harness connector and combination meter harness connector.

Parking brake switch		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
M31	1	M34	10	Existed

5. Check the continuity between parking brake switch harness connector and ground.

Parking brake switch		—	Continuity
Connector	Terminal		
M31	1	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace harness, connector, or terminal.

#### 2.CHECK PARKING BRAKE SWITCH

Check the parking brake switch. Refer to [BRC-132. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the parking brake switch. Refer to [PB-7. "Removal and Installation"](#).

#### 3.CHECK COMBINATION METER

Check the combination meter. Refer to [MWI-22. "CONSULT Function"](#).

Is the inspection result normal?

YES >> Check the each pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

NO >> Repair or replace combination meter. Refer to [MWI-64. "Removal and Installation"](#).

### Component Inspection

INFOID:000000012199728

#### 1.CHECK PARKING BRAKE SWITCH

1. Turn the ignition switch OFF.
2. Disconnect parking brake switch harness connector.
3. Check the continuity between parking brake switch connector terminal and ground.

# PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

Parking brake switch	—	Condition	Continuity
Terminal		When the parking brake switch is operated.	Existed
1	Ground	When the parking brake switch is not operated.	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the parking brake switch. Refer to [PB-7. "Removal and Installation"](#).

A

B

C

D

E

**BRC**

G

H

I

J

K

L

M

N

O

P

# VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## VDC OFF SWITCH

### Component Function Check

INFOID:000000012199729

#### 1. CHECK VDC OFF SWITCH OPERATION

Check that VDC OFF indicator lamp in combination meter turns ON/OFF when VDC OFF switch is operated.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-134, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000012199730

#### 1. CHECK VDC OFF SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect VDC OFF switch harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and VDC OFF switch harness connector.

ABS actuator and electric unit (control unit)		VDC OFF switch		Continuity
Connector	Terminal	Connector	Terminal	
E35	5	M28	1	Existed

5. Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E35	5	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace harness, connector, or terminal.

#### 2. CHECK VDC OFF SWITCH GROUND CIRCUIT

Check the continuity between VDC OFF switch harness connector and ground.

VDC OFF switch		—	Continuity
Connector	Terminal		
M28	2	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness, connector, or terminal.

#### 3. CHECK VDC OFF SWITCH

Check the VDC OFF switch. Refer to [BRC-135, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the VDC OFF switch. Refer to [BRC-157, "Removal and Installation"](#).

#### 4. CHECK VDC OFF SWITCH SIGNAL

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect VDC OFF switch harness connector.

# VDC OFF SWITCH

[WITH VDC]

## < DTC/CIRCUIT DIAGNOSIS >

3. Select "ABS", "DATA MONITOR" and "OFF SW" according to this order. Check the VDC OFF switch signal.

Condition	DATA MONITOR
When VDC OFF switch is pressed and VDC OFF indicator lamp in combination meter is in ON status	On
When VDC OFF switch is pressed and VDC OFF indicator lamp in combination meter is in OFF status	Off

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> GO TO 5.

## 5.CHECK TERMINAL

- Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
- Check the VDC OFF switch pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).  
NO >> Repair / replace harness, connector, or terminal.

## Component Inspection

INFOID:000000012199731

## 1.CHECK VDC OFF SWITCH

1. Turn the ignition switch OFF.
2. Disconnect triple switch harness connector.
3. Check the continuity between VDC OFF switch connector terminals.

VDC OFF switch Terminal	Condition	Continuity
1 – 2	When VDC OFF switch is pressed	Existed
	When VDC OFF switch is not pressed	Not existed

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace the VDC OFF switch. Refer to [BRC-157, "Removal and Installation"](#).

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

## ABS WARNING LAMP

### Component Function Check

INFOID:000000012199732

#### 1. CHECK ABS WARNING LAMP FUNCTION

Check that ABS warning lamp in combination meter turns ON for approx. 1 second after ignition switch is turned ON.

**CAUTION:**

**Never start engine.**

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Proceed to [BRC-136, "Diagnosis Procedure"](#).

#### Diagnosis Procedure

INFOID:000000012199733

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Perform the trouble diagnosis for ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair / replace harness, connector, fuse, or fusible link.

#### 2. PERFORM SELF-DIAGNOSIS


 With CONSULT

Perform self-diagnosis for "ABS".

Is any DTC detected?

- YES >> Check the DTC. Refer to [BRC-50, "DTC Index"](#).
- NO >> GO TO 3.

#### 3. CHECK ABS WARNING LAMP SIGNAL

 With CONSULT

1. Select "ABS", "DATA MONITOR" and "ABS WARN LAMP" according to this order.
2. Turn the ignition switch OFF.
3. Check that data monitor displays "On" for approx. 1 second after ignition switch is turned ON and then changes to "Off".

**CAUTION:**

**Never start engine.**

Is the inspection result normal?

- YES >> Check the combination meter. Refer to [MWI-22, "CONSULT Function"](#).
- NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).



# BRAKE WARNING LAMP

[WITH VDC]

< DTC/CIRCUIT DIAGNOSIS >

## BRAKE WARNING LAMP

### Component Function Check

INFOID:000000012199734

#### 1. CHECK BRAKE WARNING LAMP FUNCTION (1)

Check that brake warning lamp in combination meter turns ON for approx. 1 second after ignition switch is turned ON.

**CAUTION:**

**Never start engine.**

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to [BRC-137, "Diagnosis Procedure"](#).

#### 2. CHECK BRAKE WARNING LAMP FUNCTION (2)

Check that brake warning lamp in combination meter turns ON/OFF when parking brake is operated.

**NOTE:**

Brake warning lamp turns ON when parking brake is operated (when parking brake switch is ON).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the parking brake switch system. Refer to [BRC-132, "Diagnosis Procedure"](#).

#### 3. CHECK BRAKE WARNING LAMP FUNCTION (3)

Check that brake warning lamp in combination meter turns ON/OFF when brake fluid level switch is operated while brake fluid level in reservoir tank is with the specified level.

**NOTE:**

Brake warning lamp turns ON when brake fluid is less than the specified level (when brake fluid level switch is ON).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check the brake fluid level switch system. Refer to [BRC-113, "Diagnosis Procedure"](#).

## Diagnosis Procedure

INFOID:000000012199735

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT


Perform the trouble diagnosis for ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace harness, connector, fuse, or fusible link.

#### 2. PERFORM SELF-DIAGNOSIS

 With CONSULT

Perform self-diagnosis for "ABS".

Is any DTC detected?

YES >> Check the DTC. Refer to [BRC-50, "DTC Index"](#).

NO >> GO TO 3.

#### 3. CHECK COMBINATION METER

Check the combination meter. Refer to [MWI-22, "CONSULT Function"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

NO >> Repair or replace combination meter. Refer to [MWI-64, "Removal and Installation"](#).

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

## VDC WARNING LAMP

## Component Function Check

INFOID:000000012199736

**1.**CHECK VDC WARNING LAMP FUNCTION

Check that VDC warning lamp in combination meter turns ON for approx. 1 second after ignition switch is turned ON.

**CAUTION:**

**Never start engine.**

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-138, "Diagnosis Procedure"](#).

## Diagnosis Procedure

INFOID:000000012199737

**1.**CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Perform the trouble diagnosis for ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace harness, connector, fuse, or fusible link.

**2.**PERFORM SELF-DIAGNOSIS

 With CONSULT


Perform self-diagnosis for "ABS".

Is any DTC detected?

YES >> Check the DTC. Refer to [BRC-50, "DTC Index"](#).

NO >> GO TO 3.

**3.**CHECK VDC WARNING LAMP SIGNAL

 With CONSULT

1. Select "ABS", "DATA MONITOR" and "SLIP/VDC LAMP" according to this order.

2. Turn the ignition switch OFF.

3. Check that data monitor displays "On" for approx. 1 second after ignition switch is turned ON, and then changes to "Off".

**CAUTION:**

**Never start engine.**

Is the inspection result normal?

YES >> Check the combination meter. Refer to [MWI-22, "CONSULT Function"](#).

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

# VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH VDC]

## VDC OFF INDICATOR LAMP

### Component Function Check

INFOID:0000000012199738

#### 1. CHECK VDC OFF INDICATOR LAMP FUNCTION (1)

Check that VDC OFF indicator lamp in combination meter turns ON for approx. 1 second after ignition switch is turned ON.

**CAUTION:**

**Never start engine.**

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-139, "Diagnosis Procedure"](#).

#### 2. CHECK VDC OFF INDICATOR LAMP FUNCTION (2)

Check that VDC OFF indicator lamp in combination meter turns ON/OFF when VDC OFF switch is operated.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check the VDC OFF switch system. Refer to [BRC-134, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000012199739

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Perform the trouble diagnosis for ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-129, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace harness, connector, fuse, or fusible link.

#### 2. CHECK VDC OFF INDICATOR LAMP SIGNAL (1)

Ⓜ With CONSULT

1. Select "ABS", "DATA MONITOR" and "OFF LAMP" according to this order.

2. Turn the ignition switch OFF.

3. Check that data monitor displays "On" for approx. 1 second after ignition switch is turned ON, and then changes to "Off".

**CAUTION:**

**Never start engine.**

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

#### 3. CHECK VDC OFF INDICATOR LAMP SIGNAL (2)

Ⓜ With CONSULT

1. Select "ABS", "DATA MONITOR" and "OFF LAMP" according to this order.

2. Check that data monitor displays "On" or "Off" each time when VDC OFF switch is operated.

Is the inspection result normal?

YES >> Check the combination meter. Refer to [MWI-22, "CONSULT Function"](#).

NO >> Check the VDC OFF switch system. Refer to [BRC-157, "Removal and Installation"](#).

# SYMPTOM DIAGNOSIS

## EXCESSIVE OPERATION FREQUENCY

### Description

INFOID:000000012199740

VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function operates in excessive operation frequency.

### Diagnosis Procedure

INFOID:000000012199741

#### 1. CHECK BRAKING FORCE

Check the brake force using a brake tester.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check the brake system.

#### 2. CHECK FRONT AND REAR AXLE

Check that there is no excessive looseness in front and rear axle.

- Front axle
  - NISMO RS: Refer to [FAX-9, "Inspection"](#).
  - Except for NISMO RS: Refer to [FAX-64, "Inspection"](#).
- Rear axle
  - 2WD: Refer to [RAX-6, "Inspection"](#).
  - AWD: Refer to [RAX-14, "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace error-detecting of front or rear axle part.

#### 3. CHECK WHEEL SENSOR

Check the wheel sensor.

- Check the installation and damage of wheel sensor.
- Check the connection of wheel sensor harness connector.
- Check the terminal of wheel sensor harness connector.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace wheel sensor.

- Front wheel sensor: Refer to [BRC-147, "FRONT WHEEL SENSOR : Removal and Installation"](#).
- Rear wheel sensor: Refer to [BRC-150, "REAR WHEEL SENSOR : Removal and Installation"](#).

#### 4. CHECK SENSOR ROTOR

Check that there is no looseness, damage or foreign material on sensor rotor.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair installation or replace sensor rotor.

- Front sensor rotor: Refer to [BRC-152, "FRONT SENSOR ROTOR : Removal and Installation"](#).
- Rear sensor rotor: Refer to [BRC-152, "REAR SENSOR ROTOR : Removal and Installation"](#).

#### 5. CHECK WARNING LAMP TURNS OFF

Check that ABS warning lamp, brake warning lamp and VDC warning lamp turn OFF approx. 1 second after key switch is turned ON and stay in OFF status during driving.

**CAUTION:**

**Brake warning lamp turns ON when parking brake is operated (parking brake switch is ON) or brake fluid is less than the specified level (brake fluid level switch is ON).**

Is the inspection result normal?

YES >> Normal

NO >> Perform self-diagnosis for "ABS" with CONSULT.

# UNEXPECTED BRAKE PEDAL REACTION

[WITH VDC]

< SYMPTOM DIAGNOSIS >

## UNEXPECTED BRAKE PEDAL REACTION

### Description

INFOID:000000012199742

A malfunction of brake pedal feel (height or others) is detected when brake pedal is depressed.

### Diagnosis Procedure

INFOID:000000012199743

#### 1.CHECK FRONT AND REAR AXLE

Check that there is no excessive looseness in front and rear axle.

- Front axle
  - NISMO RS: Refer to [FAX-9, "Inspection"](#).
  - Except for NISMO RS: Refer to [FAX-64, "Inspection"](#).
- Rear axle
  - 2WD: Refer to [RAX-6, "Inspection"](#).
  - AWD: Refer to [RAX-14, "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace error-detecting of front or rear axle part.

#### 2.CHECK DISC ROTOR

Check the disc rotor runout.

- Front: Refer to [BR-16, "DISC ROTOR : Inspection and Adjustment"](#).
- Rear: Refer to [BR-18, "DISC ROTOR : Inspection and Adjustment"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Refinish disc rotor.

- Front: Refer to [BR-16, "DISC ROTOR : Inspection and Adjustment"](#).
- Rear: Refer to [BR-18, "DISC ROTOR : Inspection and Adjustment"](#).

#### 3.CHECK BRAKE FLUID LEAKAGE

Check the fluid leakage.

- Front: Refer to [BR-27, "FRONT : Inspection"](#).
- Rear: Refer to [BR-37, "REAR : Inspection"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace fluid leakage part.

#### 4.CHECK BRAKE PEDAL

Check the each item of brake pedal. Refer to [BR-9, "Inspection and Adjustment"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Adjust each item of brake pedal. Refer to [BR-9, "Inspection and Adjustment"](#).

#### 5.CHECK BRAKING FORCE

Check the brake force using a brake tester.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Check the each components of brake system.

#### 6.CHECK BRAKE PERFORMANCE

Disconnect ABS actuator and electric unit (control unit) harness connector so that ABS does not operate. Check that brake force is normal in this condition. Connect harness connectors after checking.

Is the inspection result normal?

YES >> Normal

NO >> Check the each components of brake system.

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

# THE BRAKING DISTANCE IS LONG

[WITH VDC]

< SYMPTOM DIAGNOSIS >

---

## THE BRAKING DISTANCE IS LONG

### Description

INFOID:000000012199744

Brake stopping distance is long when ABS function is operated.

### Diagnosis Procedure

INFOID:000000012199745

#### **CAUTION:**

**Brake stopping distance on slippery road like rough road, gravel road or snowy road may become longer when ABS is operated than when ABS is not operated.**

#### **1.CHECK BRAKING FORCE**

---

Check the brake force using a brake tester.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check the each components of brake system.

#### **2.CHECK BRAKE PERFORMANCE**

---

Disconnect ABS actuator and electric unit (control unit) harness connector so that ABS does not operate. Check the brake stopping distance in this condition. Connect harness connectors after checking.

Is the inspection result normal?

YES >> Normal

NO >> Check the each components of brake system.

# DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[WITH VDC]

## DOES NOT OPERATE

### Description

INFOID:000000012199746

VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function does not operate.

### Diagnosis Procedure

INFOID:000000012199747

#### **CAUTION:**

- VDC function, TCS function, ABS function, EBD function and brake limited slip differential (BLSD) function never operate when the vehicle speed is 10 km/h (6.2 MPH) or less.
- VDC function and TCS function never operate when VDC OFF switch is operated (when VDC OFF indicator lamp turns ON).

#### 1. CHECK WARNING LAMP

Check that ABS warning lamp, brake warning lamp and VDC warning lamp turn ON and turn OFF approx. 1 second after key switch is turned ON. Check that ABS warning lamp, brake warning lamp and VDC warning lamp and stay in OFF status during driving.

#### **CAUTION:**

**Brake warning lamp turns ON when parking brake is operated (parking brake switch is ON) or brake fluid is less than the specified level (brake fluid level switch is ON).**

Is the inspection result normal?

- YES >> Normal  
NO >> Perform self-diagnosis for "ABS" with CONSULT.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# BRAKE PEDAL VIBRATION OR OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[WITH VDC]

## BRAKE PEDAL VIBRATION OR OPERATION SOUND OCCURS

### Description

INFOID:000000012199748

- Brake pedal vibrates and motor sound from ABS actuator and electric unit (control unit) occurs, when the engine starts.
- Brake pedal vibrates during braking.

#### **CAUTION:**

Vibration may be felt during brake pedal is lightly depressed (just placing a foot on it) in the following conditions. This is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [Approx. 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approx. 10 km/h (6.2 MPH) or higher]

### Diagnosis Procedure

INFOID:000000012199749

#### 1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do vibrations occur?

YES >> GO TO 2.

NO >> Check the brake pedal. Refer to [BR-21, "Inspection and Adjustment"](#).

#### 2. SYMPTOM CHECK 2

Check that motor noise from ABS actuator and electric unit (control unit) occurs when the engine starts.

Does the operation sound occur?

YES >> GO TO 3.

NO >> Perform self-diagnosis for "ABS" with CONSULT.

#### 3. SYMPTOM CHECK 3

Check the symptoms when electrical component (headlamps, etc.) switches are operated.

Does the symptom occur?

YES >> Check that radio (including wiring), antenna and antenna lead-in wires are not located near ABS actuator and electric unit (control unit). Move them if they are located near ABS actuator and electric unit (control unit).

NO >> Normal



# VEHICLE JERKS DURING

[WITH VDC]

< SYMPTOM DIAGNOSIS >

## VEHICLE JERKS DURING

### Description

INFOID:000000012199750

The vehicle jerks when VDC function, TCS function, ABS function, EBD function or brake limited slip differential (BLSD) function operates.

### Diagnosis Procedure

INFOID:000000012199751

#### 1. CHECK SYMPTOM

Check that the vehicle jerks when VDC function, TCS function, ABS function, EBD function or brake limited slip differential (BLSD) function operates.

Is the inspection result normal?

- YES >> Normal
- NO >> GO TO 2.

#### 2. PERFORM SELF-DIAGNOSIS

 With CONSULT

Perform self-diagnosis for "ABS".

Is any DTC detected?

- YES >> Check the DTC. Refer to [BRC-50, "DTC Index"](#).
- NO >> GO TO 3.

#### 3. CHECK CONNECTOR

 With CONSULT

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the connector terminal for deformation, disconnection and looseness.
4. Connect harness connector and perform self-diagnosis for "ABS" again.

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Poor connection of connector terminal. Repair or replace connector terminal.

#### 4. CHECK ECM AND TCM SELF-DIAGNOSIS RESULTS

 With CONSULT

Perform self-diagnosis for "ENGINE" and "TRANSMISSION" (for CVT models).

Is any DTC detected?

- YES >> Check the DTC.
- NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-153, "Removal and Installation"](#).

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[WITH VDC]

### NORMAL OPERATING CONDITION

#### Description

INFOID:000000012199752

Symptom	Result
Brake pedal slightly vibrates and operation sound (motor sound and sound from suspension) occurs when VDC function, TCS function, ABS function, EBD function or brake limited differential (BLSD) function operates.	This is not a malfunction, The symptom occurs VDC function, TCS function, ABS function, EBD function and brake limited differential (BLSD) function that are normally operated.
Brake stopping distance may become longer than models without ABS function depending on the road conditions, when ABS function is operated on slippery road like rough road, gravel road or snowy road.	
Brake pedal vibrates and operation sound occurs during sudden acceleration and cornering, when VDC function, TCS function or brake limited slip differential (BLSD) function is operated.	
Brake pedal vibrates and motor sound from the engine room occurs, when the engine starts or the vehicle starts just after starting the engine.	This is not a malfunction, because it is caused by operation check of ABS actuator and electric unit (control unit).
Acceleration may be felt insufficient depending on the road conditions.	This is not a malfunction, because it is caused by TCS function that puts the highest priority to obtain the optimum traction (stability).
TCS function may operate momentarily, while driving on a road where friction coefficient varies, or when downshifting, or fully depressing accelerator pedal.	
ABS warning lamp and VDC OFF indicator lamp may turn ON, when the vehicle is on a rotating turntable or is given a strong shaking or large vibrations on a ship while the engine is running.	In this case, restart the engine on a normal road. If the normal condition is restored, there is no malfunction. In that case, erase "ABS" self-diagnosis result memory with CONSULT.
VDC warning lamp may turn ON and VDC function, TCS function and brake limited slip differential (BLSD) function may not normally operate, when driving on a special road the is extremely slanted (bank in a circuit course).	
A malfunction in yaw rate/side/decel G sensor system may be detected when the vehicle sharply turns during a spin turn, acceleration turn or drift driving while VDC function, TCS function and brake limited slip differential (BLSD) function are OFF (VDC OFF switch is pressed and VDC OFF indicator lamp is in ON status).	
The vehicle speed does not increase, when the accelerator pedal is depressed while the vehicle is on a 2-wheel chassis dynamometer for speedometer check.	This is not a malfunction. (When checking the vehicle on a chassis dynamometer, operate VDC OFF switch so that TCS function is OFF.)

# WHEEL SENSOR

< REMOVAL AND INSTALLATION >

[WITH VDC]


## REMOVAL AND INSTALLATION

### WHEEL SENSOR

### FRONT WHEEL SENSOR

### FRONT WHEEL SENSOR : Exploded View

INFOID:000000012199753

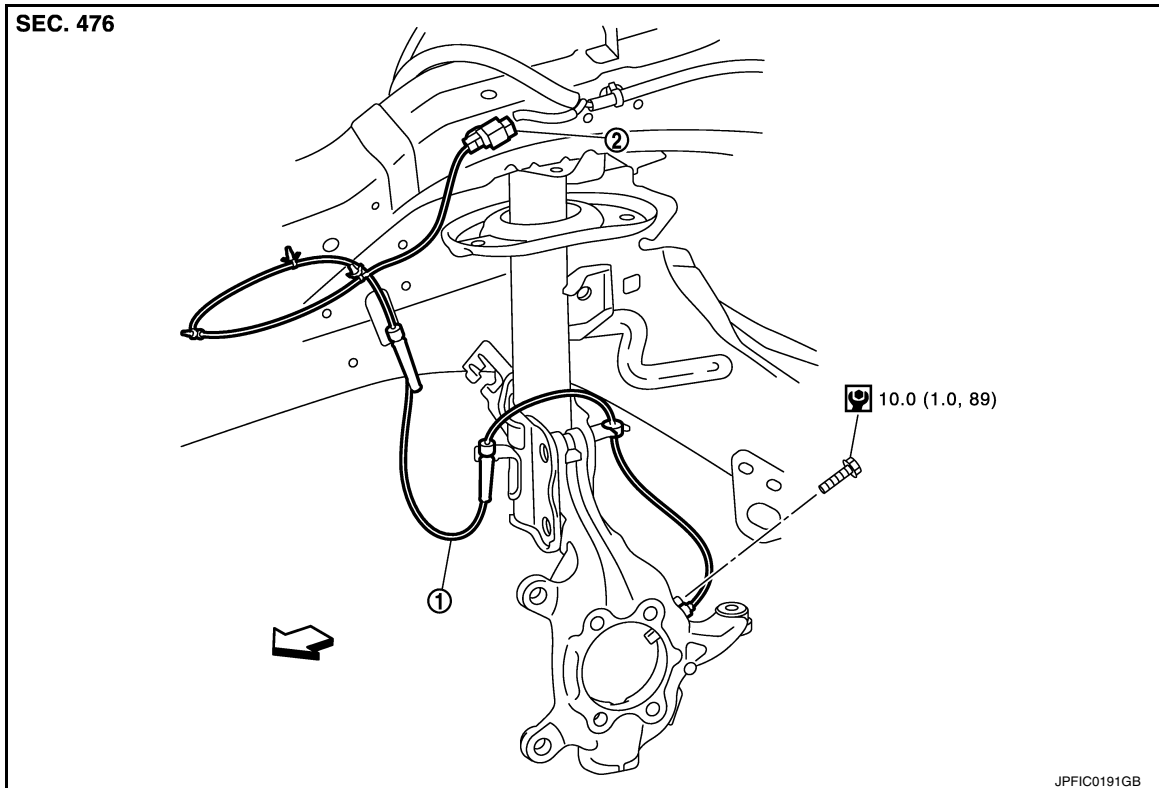

1. Front LH wheel sensor

2. Front LH wheel sensor harness connector

←: Vehicle front

: N·m (kg-m, in-lb)

#### NOTE:

Front RH wheel sensor is symmetrically opposite of LH.

### FRONT WHEEL SENSOR : Removal and Installation

INFOID:000000012199754

#### REMOVAL

1. Remove tires.
2. Remove the fender protector (front). Refer to [EXT-31, "Removal and Installation"](#).
3. Remove front wheel sensor from steering knuckle.

#### CAUTION:

**Never rotate and never pull front wheel sensor as much as possible, when pulling out.**

4. Remove front wheel sensor harness from the vehicle.

#### CAUTION:

**Never twist or pull front wheel sensor harness, when removing.**

#### INSTALLATION


Note the following, and install in the reverse order of the removal.

# WHEEL SENSOR

< REMOVAL AND INSTALLATION >

[WITH VDC]

- Check that there is no foreign material like iron powder or damage on inner surface of front wheel sensor mounting hole of steering knuckle and sensor rotor. Install after cleaning when there are foreign material like iron powder, or replace when there is a malfunction.
- Never twist front wheel sensor harness when installing front wheel sensor. Check that grommet (2) is fully inserted to bracket (1). Check that front wheel sensor harness is not twisted after installation.

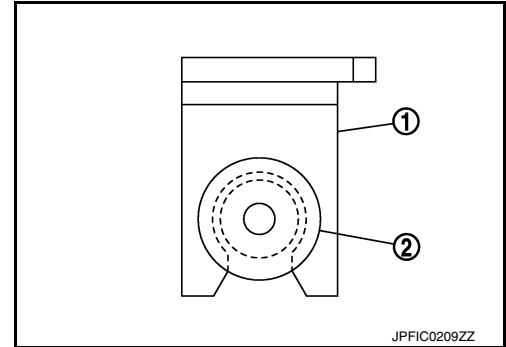


## REAR WHEEL SENSOR

### REAR WHEEL SENSOR : Exploded View

INFOID:000000012199755

2WD

Left side

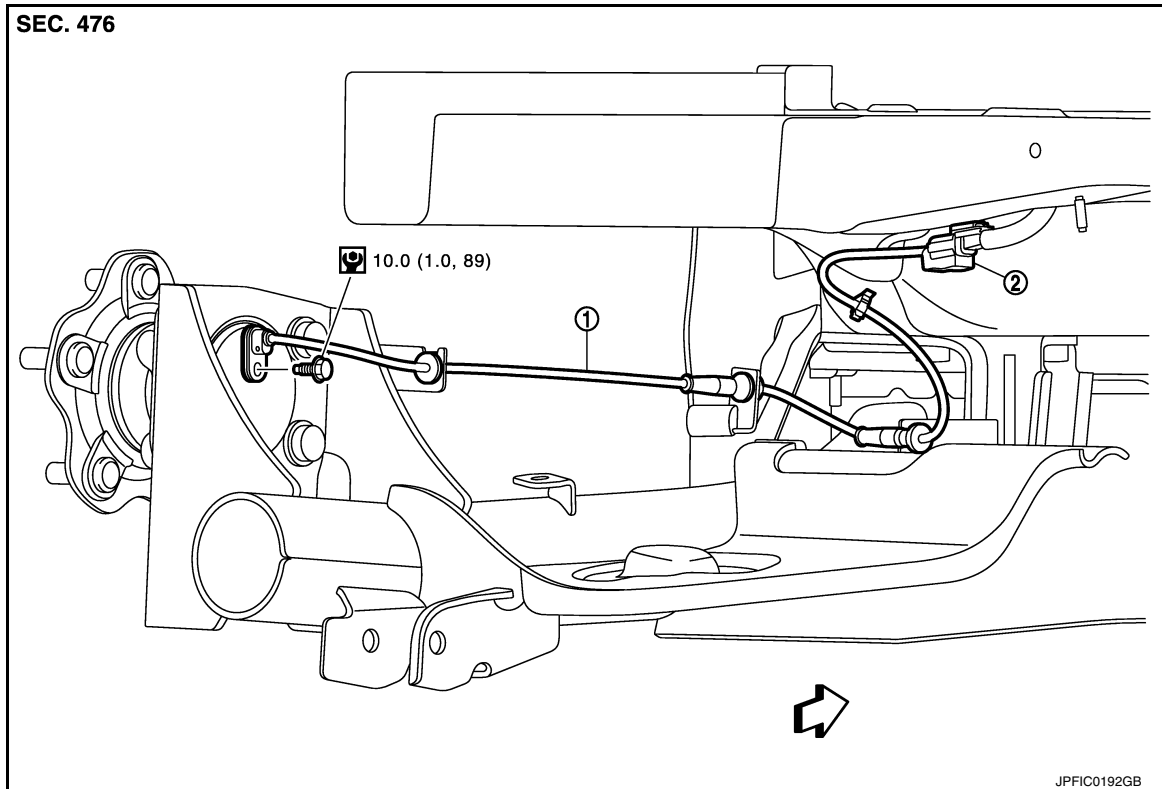

1. Rear LH wheel sensor

2. Rear LH wheel sensor harness connector

⇐: Vehicle front


🔧: N·m (kg-m, in-lb)

# WHEEL SENSOR

< REMOVAL AND INSTALLATION >

[WITH VDC]


Right side

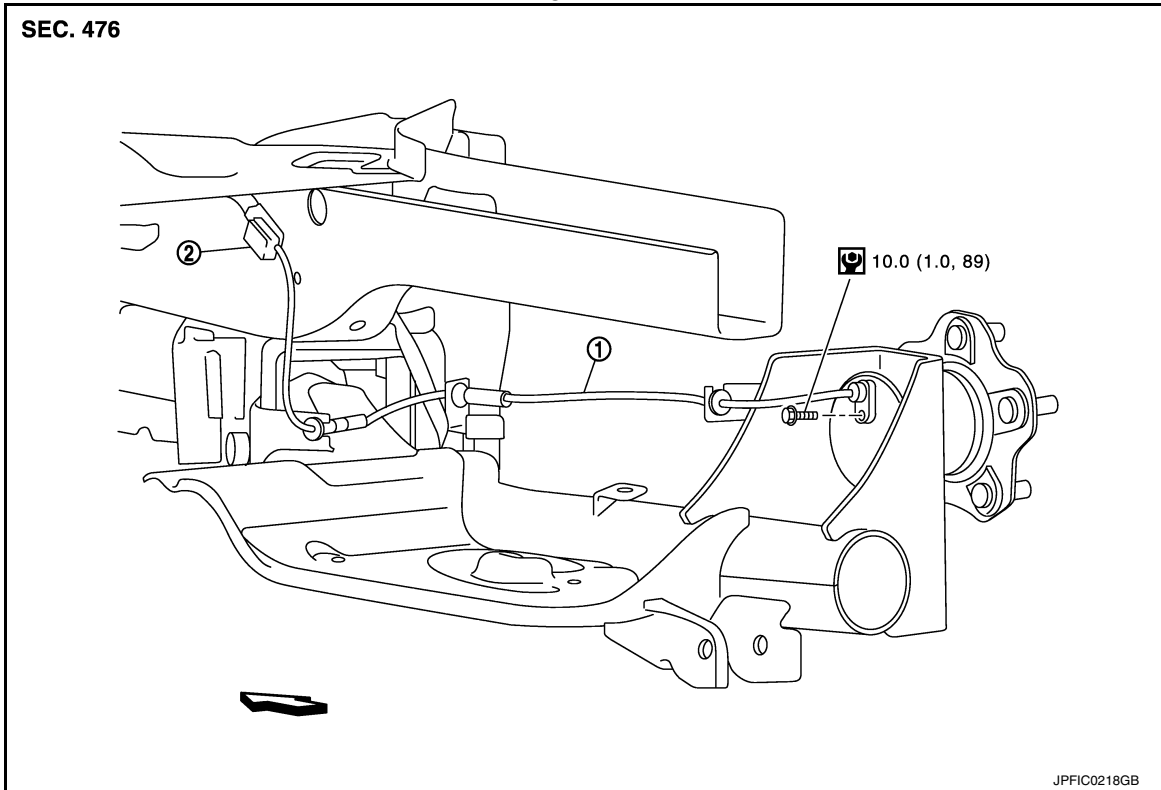

1. Rear RH wheel sensor

2. Rear RH wheel sensor harness connector

←: Vehicle front

: N·m (kg-m, in-lb)

AWD

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N


O

P

# WHEEL SENSOR

< REMOVAL AND INSTALLATION >

[WITH VDC]

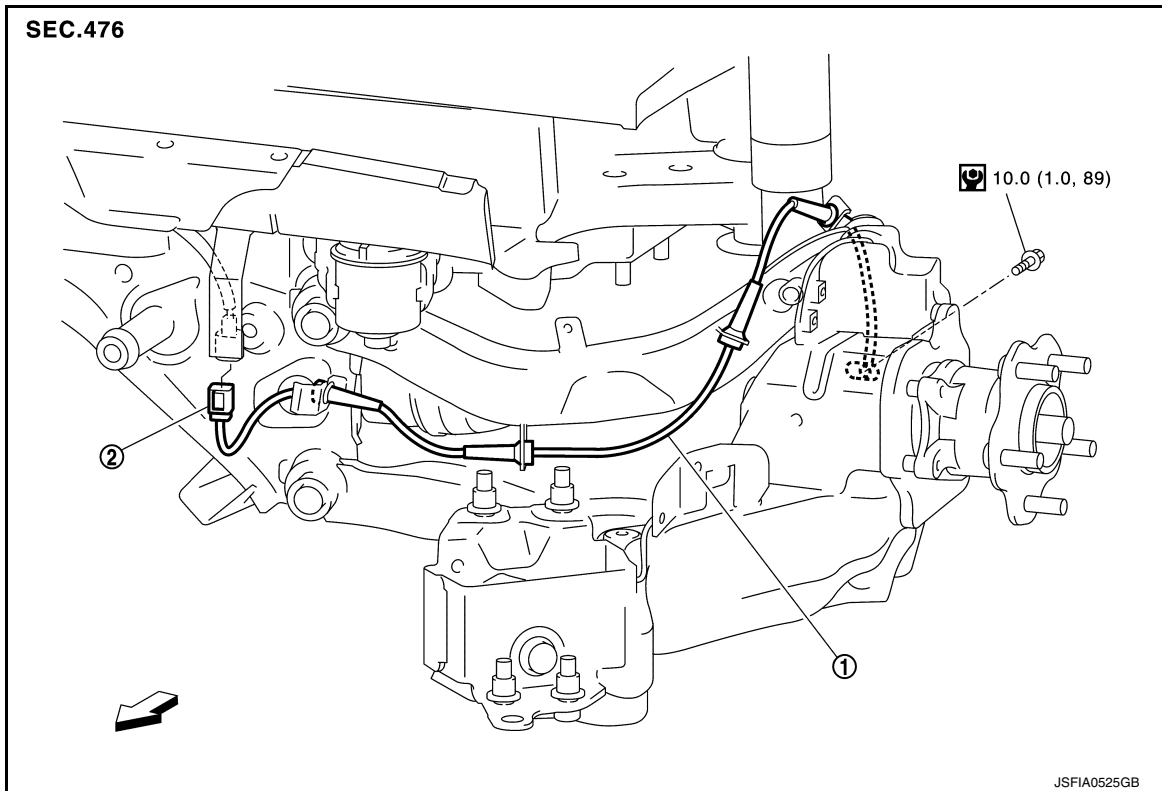

1. Rear LH wheel sensor
2. Rear LH wheel sensor harness connector

←: Vehicle front

: N·m (kg·m, in·lb)

## NOTE:

Rear RH wheel sensor is symmetrically opposite of LH.

## REAR WHEEL SENSOR : Removal and Installation

INFOID:000000012199756

### REMOVAL

1. Remove rear wheel sensor from wheel hub and bearing assembly (2WD).  
**CAUTION:**  
**Never rotate or pull rear wheel sensor as much as possible, when pulling out.**
2. Remove rear wheel sensor from axle housing (AWD).  
**CAUTION:**  
**Never rotate or pull rear wheel sensor as much as possible, when pulling out.**
3. Remove rear wheel sensor harness from the vehicle.  
**CAUTION:**  
**Never twist and never pull rear wheel sensor harness, when removing.**

### INSTALLATION

Note the following, and install in the reverse order of the removal.


- Check that there is no foreign material like iron powder or damage on inner surface of rear wheel sensor mounting hole of wheel hub and bearing assembly and sensor rotor. Install after cleaning when there are foreign material like iron powder, or replace when there is a malfunction.

# WHEEL SENSOR

## < REMOVAL AND INSTALLATION >

[WITH VDC]


- Never twist rear wheel sensor harness when installing rear wheel sensor. Check that grommet (2) is fully inserted to bracket (1). Check that rear wheel sensor harness is not twisted after installation.

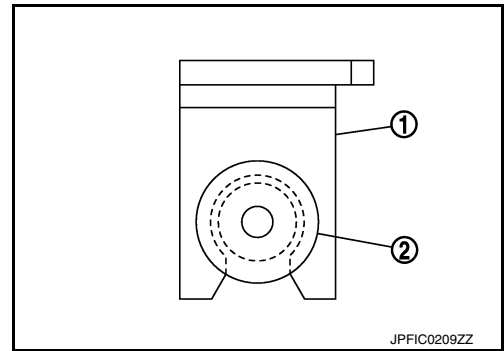

A  
B  
C  
D

**CAUTION:**

Check that the identification line (A) of the rear wheel sensor is faced upward.

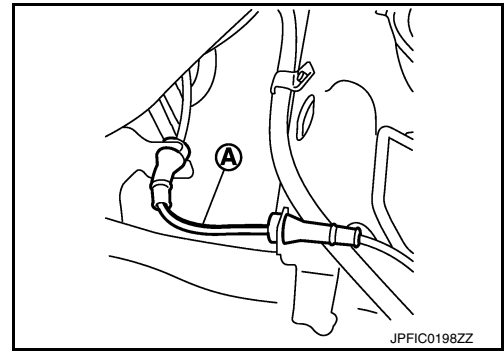

E

**BRC**

G

H

I

J

K

L

M

N

O

P

# SENSOR ROTOR

< REMOVAL AND INSTALLATION >

[WITH VDC]

## SENSOR ROTOR

### FRONT SENSOR ROTOR

#### FRONT SENSOR ROTOR : Removal and Installation

INFOID:000000012199757

##### REMOVAL

Replace wheel hub as an assembly when replacing because sensor rotor cannot be disassembled.

- Except NISMO RS: Refer to [FAX-66, "Removal and Installation"](#).
- NISMO RS: Refer to [FAX-11, "Removal and Installation"](#).

##### INSTALLATION

Replace wheel hub as an assembly when replacing because sensor rotor cannot be disassembled.

- Except NISMO RS: Refer to [FAX-66, "Removal and Installation"](#).
- NISMO RS: Refer to [FAX-11, "Removal and Installation"](#).

### REAR SENSOR ROTOR

#### REAR SENSOR ROTOR : Removal and Installation

INFOID:000000012199758

##### REMOVAL

###### 2WD

Replace wheel hub as an assembly when replacing because sensor rotor cannot be disassembled. Refer to [RAX-7, "Removal and Installation"](#).

###### AWD

1. Remove drive shaft. Refer to [RAX-19, "Removal and Installation"](#).
2. Remove sensor rotor from drive shaft. Refer to [RAX-20, "WHEEL SIDE : Disassembly and Assembly"](#).

##### INSTALLATION

Note the following, and install in the reverse order of the removal.

- Never reuse sensor rotor. (AWD)



# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< REMOVAL AND INSTALLATION >

[WITH VDC]

## ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Exploded View

INFOID:000000012199759

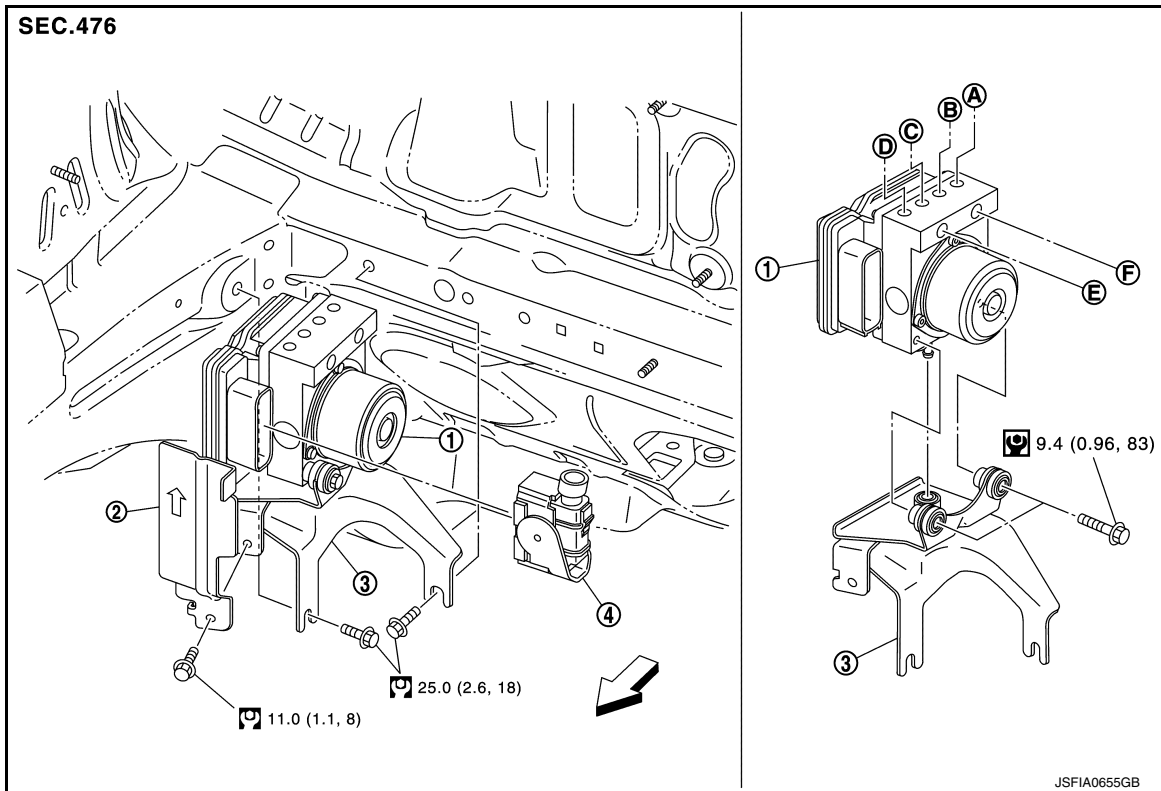

- |  |                                      |                                    |
|--|--------------------------------------|------------------------------------|
| 1. ABS actuator and electric unit (control unit)                   | 2. Bracket A                         | 3. Bracket B                       |
| 4. ABS actuator and electric unit (control unit) harness connector |                                      |                                    |
| A. To front LH caliper   | B. To rear RH caliper                | C. To rear LH caliper              |
| D. To front RH caliper   | E. To master cylinder secondary side | F. To master cylinder primary side |

←: Vehicle front

: N·m (kg-m, ft-lb)

: N·m (kg-m, in-lb)

## Removal and Installation

INFOID:000000012199760

### REMOVAL


1. Disconnect battery cable from negative terminal.
2. Drain brake fluid. Refer to [BR-12. "Draining"](#).
3. Remove bracket A.

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

[WITH VDC]

## < REMOVAL AND INSTALLATION >

4. Disconnect ABS actuator and electric unit (control unit) harness connector (1), follow the procedure described below.
  - a. Push the pawl (A).
  - b. Move the lever (B) in the direction (C) until locked.
  - c. Disconnect ABS actuator and electric unit (control unit) harness connector.
5. Loosen flare nut of brake tube using a flare nut wrench, and then remove brake tube from ABS actuator and electric unit (control unit). Refer to [BR-23, "FRONT : Exploded View"](#).
6. Remove ABS actuator and electric unit (control unit) and bracket B.

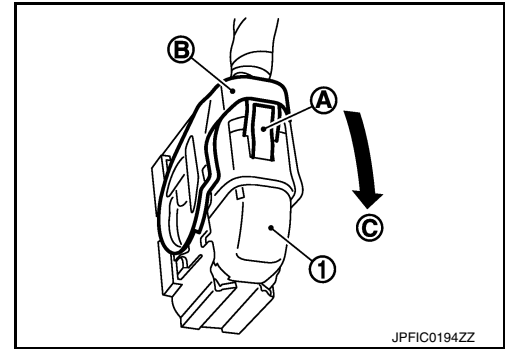

### CAUTION:


- Never remove and never install ABS actuator and electric unit (control unit) by holding harness connector.
- Be careful not to drop ABS actuator and electric unit (control unit) and apply excessive impact to it.

7. Remove bracket B and bushing from ABS actuator and electric unit (control unit).

## INSTALLATION

Note the following, and install in the reverse order of removal.

- When replacing with a new ABS actuator and electric unit (control unit), never remove the protector of the brake tube mounting hole until right before the brake tube is installed.
- When installing brake tube, tighten to the specified torque using a crowfoot and torque wrench so that flare nut and brake tube are not damaged. Refer to [BR-23, "FRONT : Exploded View"](#).
- Never remove and install ABS actuator and electric unit (control unit) by holding actuator harness.
- Bleed air from brake piping after installation. Refer to [BR-13, "Bleeding Brake System"](#).
- Never apply excessive impact to actuator, such as by dropping it.
- After installing the ABS actuator and electric unit (control unit) harness connector (1), move the lever (A) in the direction (B) to secure the locking.
- Perform steering angle sensor neutral position adjustment when ABS actuator and electric unit (control unit) is replaced. Refer to [BRC-63, "Work Procedure"](#).

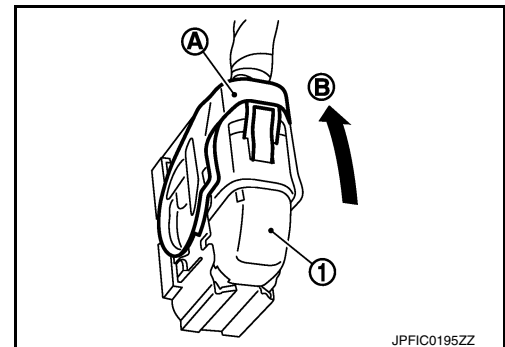

# YAW RATE/SIDE/DECEL G SENSOR


< REMOVAL AND INSTALLATION >

[WITH VDC]

## YAW RATE/SIDE/DECEL G SENSOR

Exploded View

INFOID:000000012199761

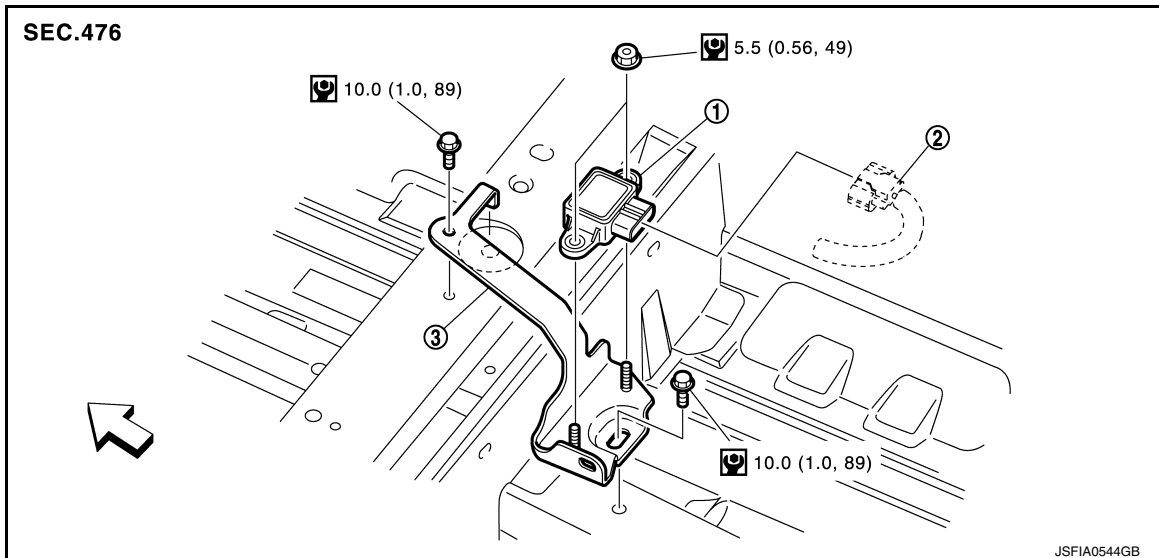

1. Yaw rate/side/decel G sensor
2. Yaw rate/side/decel G sensor harness connector
3. Bracket

↔: Vehicle front

🔧: N·m (kg-m, in-lb)

## Removal and Installation

INFOID:000000012199762

### REMOVAL

#### CAUTION:

**Never drop or strike yaw rate/side/decel G sensor, because it has little endurance to impact. Never use a pneumatic tool.**

1. Remove front seat (right side). Refer to [SE-21, "Removal and Installation"](#).
2. Remove floor carpet. Refer to [INT-24, "Removal and Installation"](#).
3. Disconnect yaw rate/side/decel G sensor harness connector.
4. Remove yaw rate/side/decel G sensor.

### INSTALLATION

Note the following, and install in the reverse order of removal.

- Never drop or strike yaw rate/transverse/decel G sensor, because it has little endurance to impact. Never use a power tool.

# STEERING ANGLE SENSOR

< REMOVAL AND INSTALLATION >

[WITH VDC]

---

## STEERING ANGLE SENSOR

### Removal and Installation

INFOID:000000012199763

#### REMOVAL

1. Remove spiral cable assembly. Refer to [SR-15, "Removal and Installation"](#).
2. Remove steering angle sensor.

#### INSTALLATION

Note the following, and install in the reverse order of removal.

- Perform steering angle sensor neutral position adjustment when steering angle sensor is removed and installed, or replaced. Refer to [BRC-63, "Work Procedure"](#).

# VDC OFF SWITCH

< REMOVAL AND INSTALLATION >

[WITH VDC]

## VDC OFF SWITCH

### Removal and Installation

INFOID:000000012199764

#### REMOVAL

1. Remove lower instrument panel. Refer to [IP-13. "Removal and Installation"](#).
2. Remove VDC OFF switch.

#### INSTALLATION

Installation is the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

# VDC OFF SWITCH

< REMOVAL AND INSTALLATION >

[WITH VDC]

---