

A  
B  
C

# SECTION INL

## INTERIOR LIGHTING SYSTEM

### CONTENTS

<b>PRECAUTION</b> .....	3	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....	12	F
<b>PRECAUTIONS</b> .....	3	<b>INT LAMP</b> .....	12	G
Precaution for Technicians Using Medical Electric.....	3	INT LAMP : CONSULT Function (BCM - INT LAMP) .....	13	
Point to Be Checked Before Starting Maintenance Work .....	3	<b>BATTERY SAVER</b> .....	13	H
Precaution for Removing 12V Battery .....	3	BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER) .....	13	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	4	<b>ECU DIAGNOSIS INFORMATION</b> .....	15	I
<b>PREPARATION</b> .....	5	<b>BCM</b> .....	15	J
<b>PREPARATION</b> .....	5	List of ECU Reference .....	15	
Special Service Tool .....	5	<b>WIRING DIAGRAM</b> .....	16	
<b>SYSTEM DESCRIPTION</b> .....	6	<b>INTERIOR ROOM LAMP CONTROL SYSTEM</b> .....	16	K
<b>COMPONENT PARTS</b> .....	6	Wiring Diagram .....	16	
Component Parts Location .....	6	<b>ILLUMINATION</b> .....	37	INL
<b>SYSTEM</b> .....	7	Wiring Diagram .....	37	
<b>INTERIOR ROOM LAMP CONTROL SYSTEM</b> .....	7	<b>BASIC INSPECTION</b> .....	62	M
INTERIOR ROOM LAMP CONTROL SYSTEM : System Description .....	7	<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	62	N
<b>INTERIOR ROOM LAMP BATTERY SAVER SYSTEM</b> .....	8	Work Flow .....	62	
INTERIOR ROOM LAMP BATTERY SAVER SYSTEM : System Description .....	9	<b>DTC/CIRCUIT DIAGNOSIS</b> .....	65	O
<b>ILLUMINATION CONTROL SYSTEM</b> .....	9	<b>INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT</b> .....	65	P
ILLUMINATION CONTROL SYSTEM : System Description .....	10	Description .....	65	
<b>AUTO LIGHT ADJUSTMENT SYSTEM</b> .....	10	Component Function Check .....	65	
AUTO LIGHT ADJUSTMENT SYSTEM : System Description .....	11	Diagnosis Procedure .....	65	
<b>DIAGNOSIS SYSTEM (BCM)</b> .....	12	<b>INTERIOR ROOM LAMP CONTROL CIRCUIT</b> .....	67	
<b>COMMON ITEM</b> .....	12	Description .....	67	
		Component Function Check .....	67	
		Diagnosis Procedure .....	67	

<b>LUGGAGE ROOM LAMP CIRCUIT</b> .....	<b>69</b>	Exploded View .....	74
Description .....	69	Removal and Installation .....	74
Diagnosis Procedure .....	69	Replacement .....	75
<b>POWER SWITCH ILLUMINATION CIRCUIT</b> ...	<b>70</b>	<b>LUGGAGE ROOM LAMP</b> .....	<b>77</b>
Description .....	70	Exploded View .....	77
Component Function Check .....	70	Removal and Installation .....	77
Diagnosis Procedure .....	70	Replacement .....	78
<b>SYMPTOM DIAGNOSIS</b> .....	<b>72</b>	<b>CHARGE PORT LIGHT</b> .....	<b>79</b>
<b>INTERIOR LIGHTING SYSTEM SYMPTOMS</b> ...	<b>72</b>	Exploded View .....	79
Symptom Table .....	72	Removal and Installation .....	79
<b>REMOVAL AND INSTALLATION</b> .....	<b>73</b>	Replacement .....	80
<b>MAP LAMP</b> .....	<b>73</b>	<b>SERVICE DATA AND SPECIFICATIONS</b>	
Removal and Installation .....	73	<b>(SDS)</b> .....	<b>81</b>
Replacement .....	73	<b>SERVICE DATA AND SPECIFICATIONS</b>	
<b>ROOM LAMP</b> .....	<b>74</b>	<b>(SDS)</b> .....	<b>81</b>
		Bulb Specifications .....	81

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Technicians Using Medical Electric

INFOID:000000008743848

##### OPERATION PROHIBITION

###### **WARNING:**

- Parts with strong magnet is used in this vehicle.
- Technicians using a medical electric device such as pacemaker must never perform operation on the vehicle, as magnetic field can affect the device function by approaching to such parts.

##### NORMAL CHARGE PRECAUTION

###### **WARNING:**

- If a technician uses a medical electric device such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, the possible effects on the devices must be checked with the device manufacturer before starting the charge operation.
- As radiated electromagnetic wave generated by on board charger at normal charge operation may effect medical electric devices, a technician using a medical electric device such as implantable cardiac pacemaker or an implantable cardioverter defibrillator must not enter the vehicle compartment (including luggage room) during normal charge operation.

##### PRECAUTION AT TELEMATICS SYSTEM OPERATION

###### **WARNING:**

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of TCU might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), when using the service, etc.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of TCU might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before TCU use.

##### PRECAUTION AT INTELLIGENT KEY SYSTEM OPERATION

###### **WARNING:**

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of intelligent key might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), at door operation, at each request switch operation, or at engine starting.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of intelligent key might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before intelligent key use.

#### Point to Be Checked Before Starting Maintenance Work

INFOID:000000008743849

The high voltage system may starts automatically. It is required to check that the timer air conditioner and timer charge (during EVSE connection) are not set before starting maintenance work.

###### **NOTE:**

If the timer air conditioner or timer charge (during EVSE connection) is set, the high voltage system starts automatically even when the power switch is in OFF state.

#### Precaution for Removing 12V Battery

INFOID:000000008743850

1. Check that EVSE is not connected.

###### **NOTE:**

If EVSE is connected, the air conditioning system may be automatically activated by the timer A/C function.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

INL

# PRECAUTIONS

## < PRECAUTION >

2. Turn the power switch OFF → ON → OFF. Get out of the vehicle. Close all doors (including back door).
3. Check that the charge status indicator lamp does not blink and wait for 5 minutes or more.

**NOTE:**

If the battery is removed within 5 minutes after the power switch is turned OFF, plural DTCs may be detected.

4. Remove 12V battery within 1 hour after turning the power switch OFF → ON → OFF.

**NOTE:**

- The 12V battery automatic charge control may start automatically even when the power switch is in OFF state.
- Once the power switch is turned ON → OFF, the 12V battery automatic charge control does not start for approximately 1 hour.

**CAUTION:**

- **After all doors (including back door) are closed, if a door (including back door) is opened before battery terminals are disconnected, start over from Step 1.**
- **After turning the power switch OFF, if "Remote A/C" is activated by user operation, stop the air conditioner and start over from Step 1.**

## Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009328016

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

## PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- **When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.**
- **When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.**

# PREPARATION

< PREPARATION >

## PREPARATION


### PREPARATION

#### Special Service Tool

INFOID:000000009345428

The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.) Tool name	Description
— (J-46534) Trim Tool Set	Removing trim components

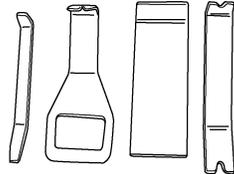

AWJIA0483ZZ

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# COMPONENT PARTS


< SYSTEM DESCRIPTION >

## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### Component Parts Location

INFOID:000000008743853

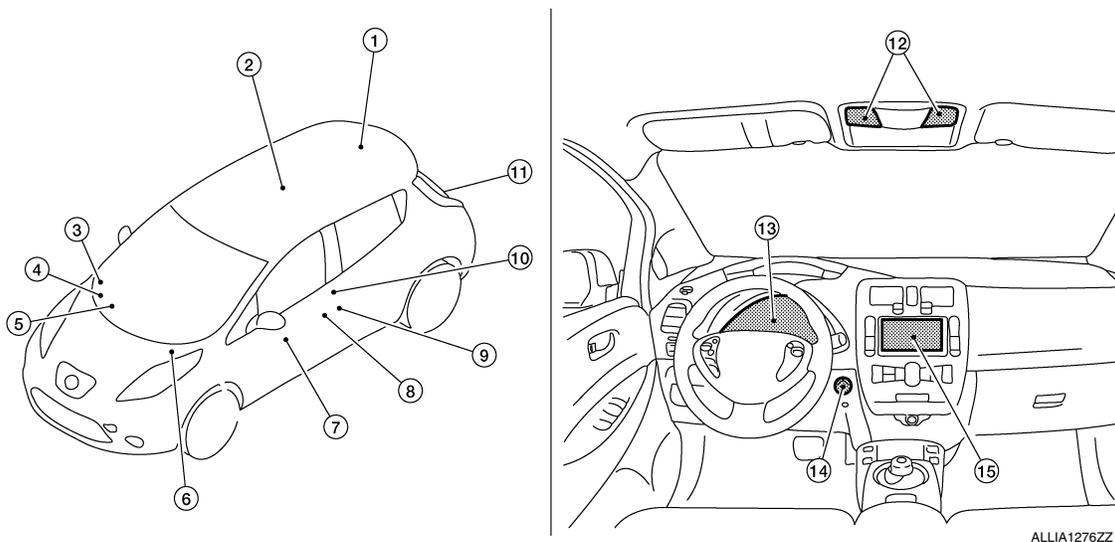

ALLIA1276ZZ

No.	Part	Description
1.	Luggage room lamp	Refer to <a href="#">INL-81, "Bulb Specifications"</a> .
2.	Room lamp	Refer to <a href="#">INL-81, "Bulb Specifications"</a> .
3.	Remote keyless entry receiver	Refer to <a href="#">DLK-18, "Remote Keyless Entry Receiver"</a> .
4.	Optical sensor	Refer to <a href="#">EXL-11, "Optical Sensor"</a> .
5.	BCM	<ul style="list-style-type: none"> <li>Activates the interior room lamp timer depending on the vehicle condition to turn the interior room lamps ON/OFF.</li> <li>Operates the interior room lamp battery saver depending on the vehicle condition to cut the interior room lamp power supply.</li> <li>Detects each switch condition by the combination switch reading function.</li> <li>Judges the illumination lamp ON/OFF status depending on the vehicle condition. And then it transmits position light request signal to IPDM E/R and combination meter (with CAN communication).</li> </ul> Refer to <a href="#">BCS-5, "BODY CONTROL SYSTEM : Component Parts Location"</a> for detailed installation location.
6.	IPDM E/R	Controls the integrated relay according to the request signal from BCM (via CAN communication). Refer to <a href="#">PCS-6, "Component Parts Location"</a> for detailed installation location.
7.	Door lock and unlock switch	Refer to <a href="#">DLK-19, "Door Lock and Unlock Switch"</a> .
8.	Front door request switch (driver side)	Refer to <a href="#">DLK-19, "Front Door Request Switch (Driver Side)"</a> .
9.	Front door lock assembly (driver side) (door key cylinder switch)	Refer to <a href="#">DLK-18, "Front Door Lock Assembly (Driver Side)"</a> .
10.	Door switch	Refer to <a href="#">DLK-20, "Door Switch"</a> .
11.	Back door lock assembly (back door switch)	Refer to <a href="#">DLK-19, "Back Door Lock Assembly"</a> .
12.	Map lamp	Refer to <a href="#">INL-81, "Bulb Specifications"</a> .
13.	Combination meter	Receives the dimmer signal from BCM (via CAN communication) Refer to <a href="#">MWI-107, "Exploded View"</a> for detailed installation location.
14.	Power switch	Refer to <a href="#">PCS-34, "Power Switch"</a> .
15.	AV control unit	Receives the dimmer signal from BCM. Refer to <a href="#">AV-93, "Component Parts Location"</a> for detailed installation location.

# SYSTEM

< SYSTEM DESCRIPTION >


## SYSTEM

### INTERIOR ROOM LAMP CONTROL SYSTEM

### INTERIOR ROOM LAMP CONTROL SYSTEM : System Description

INFOID:000000008743854

#### SYSTEM DIAGRAM

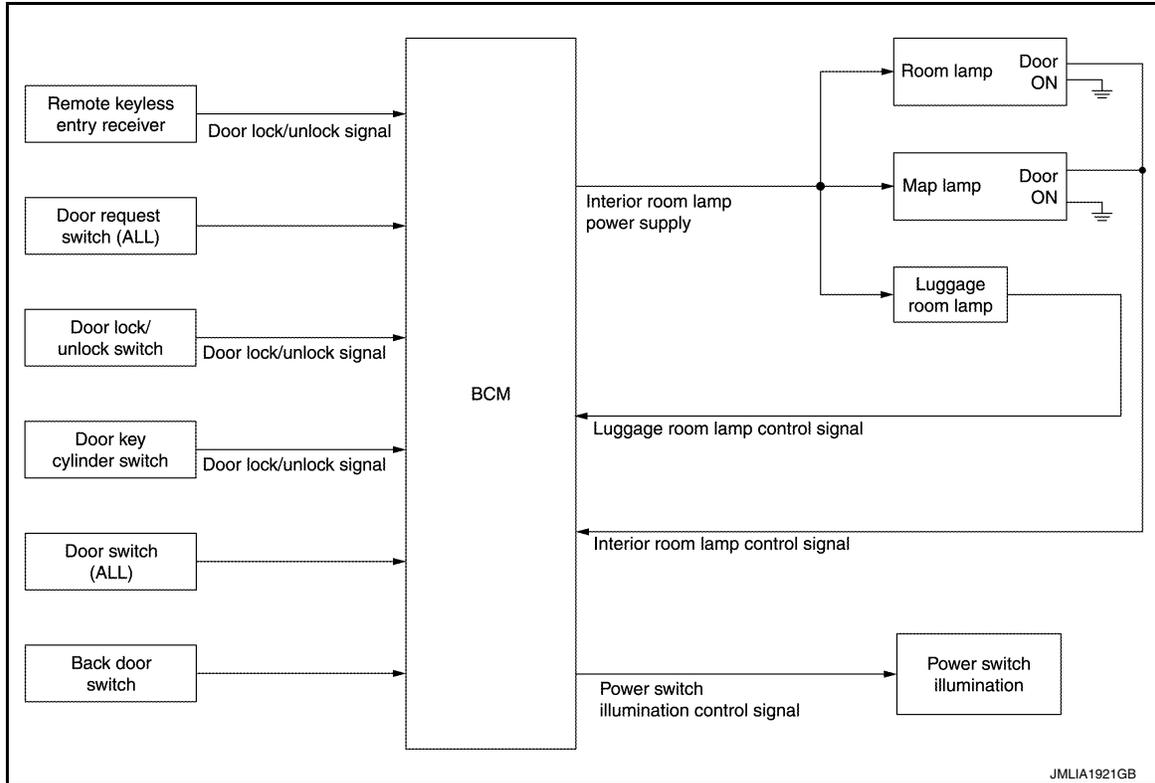


#### OUTLINE

- Interior room lamps\* are controlled by interior room lamp timer control function of BCM.
- \*: Map lamp and room lamp (when map lamp switch and room lamp switch are in DOOR position).
- Luggage room lamp is controlled by luggage room lamp control function of BCM.
- Power switch illumination is controlled by the power switch illumination control function of BCM.

#### INTERIOR ROOM LAMP TIMER CONTROL

##### Interior Room Lamp Timer Basic Operation

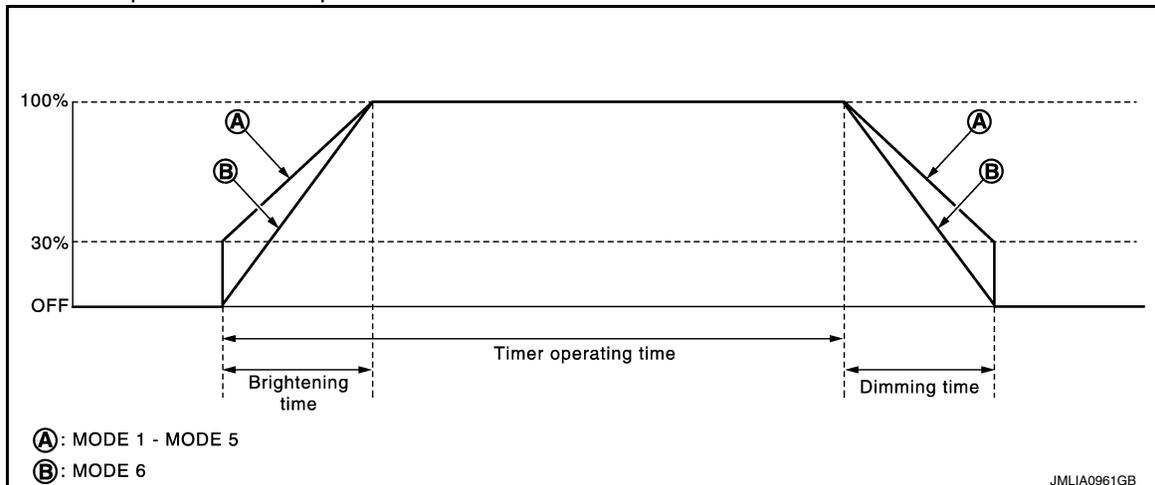

#### NOTE:

- A: Sets the interior room lamp gradual brightening and dimming time.  
 B: Gradually dims from 100% to 0% and gradually brightens 0% to 100% in 1 second.

# SYSTEM

## < SYSTEM DESCRIPTION >

- The interior room lamp turns ON and OFF (gradual brightening and dimming) by the interior room lamp timer.
- BCM judges the vehicle condition with the following items. It activates the interior room timer.
  - Power switch status
  - Door switch signal (except back door)
  - Door lock/unlock signal (Remote keyless entry receiver, each door request switch, door lock/unlock switch, door key cylinder switch)

### NOTE:

Each function of interior room lamp timer can be set by CONSULT. Refer to [INL-13, "INT LAMP : CONSULT Function \(BCM - INT LAMP\)"](#).

### Interior Room Lamp ON Operation

- BCM always turns the interior room lamp ON when any door opens except back door.
- BCM activates the interior room lamp timer in any of the following conditions to turn the interior room lamp ON for a period of time.
  - Status of all doors except back door changes from open to close
  - Power switch is turned ON → OFF
  - Door unlock signal is detected when all doors close except back door with power switch OFF

### NOTE:

The timer restarts if new condition is input during the timer operating time.

### Interior Room Lamp OFF Operation

BCM stops the timer in any of the following conditions to turn the interior room lamp OFF.

- The timer operating time is expired
- Power switch is turned OFF → ACC/ON
- Door lock signal is detected with all doors close except back door.

## LUGGAGE ROOM LAMP CONTROL

BCM turns luggage room lamp ON when the following condition is detected.

- Back door switch is ON

BCM turns luggage room lamp OFF when the following condition is detected.

- Back door switch is OFF

## POWER SWITCH ILLUMINATION CONTROL

### Power Switch Illumination Basic Operation

BCM provides the power supply to turn the power switch illumination ON.

### Power Switch Illumination ON Operation

BCM turns the power switch illumination ON in the following conditions.

- Power switch ON
- Any of the following conditions with power switch OFF/ACC
  - Traction motor start permission is entered
  - Driver side door is LOCK → UNLOCK
  - Driver side door is open

### Power Switch Illumination OFF Operation

BCM turns the power switch illumination OFF in any of the following conditions.

- The push-button power switch illumination ON conditions are not satisfied.
- Any of the following conditions with power switch OFF.
  - The power switch illumination ON conditions do not change (15 seconds after the power switch OFF)
  - Driver side door is UNLOCK → LOCK

## INTERIOR ROOM LAMP BATTERY SAVER SYSTEM


# SYSTEM

< SYSTEM DESCRIPTION >

## INTERIOR ROOM LAMP BATTERY SAVER SYSTEM : System Description

INFOID:000000008743856

### SYSTEM DIAGRAM

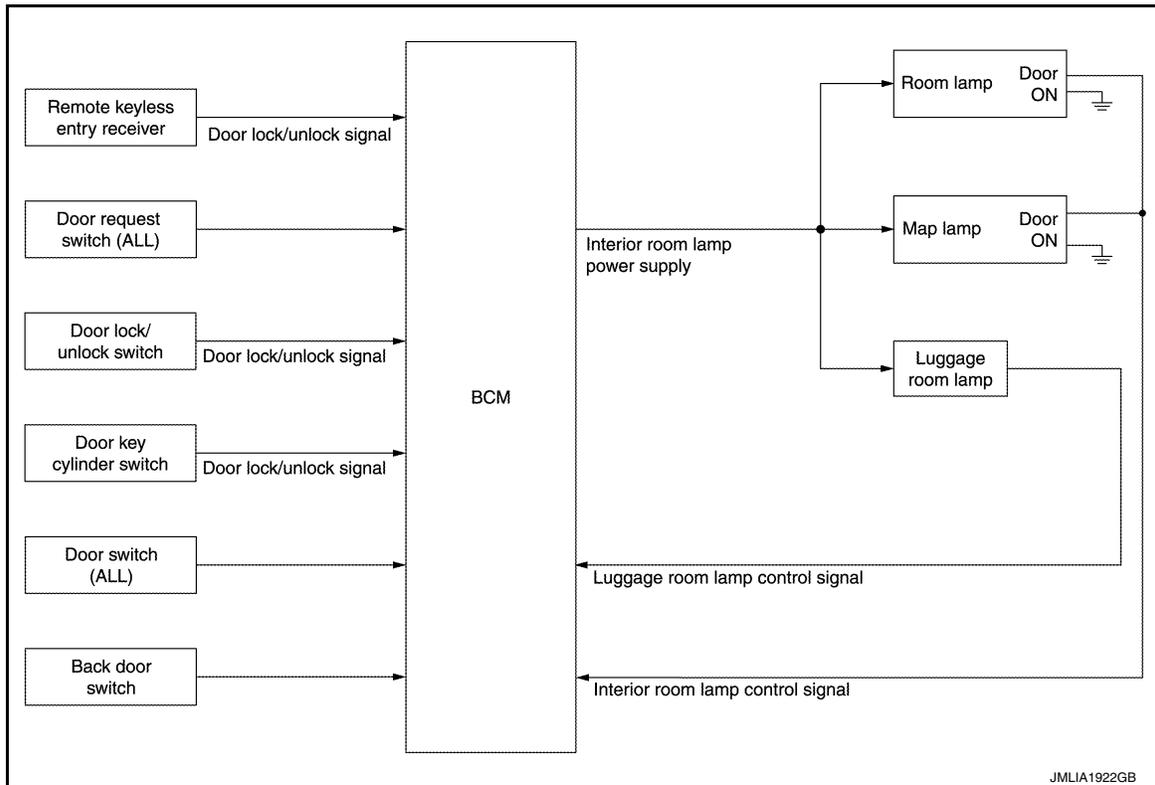

### OUTLINE

- Interior room lamp battery saver is controlled by BCM.
- BCM turns applicable lamps OFF depending on the vehicle condition. This function prevents the 12V battery from over-discharging if the driver neglects turning OFF the lamps.

#### Applicable lamps

- Map lamp
- Room lamp
- Luggage room lamp

### INTERIOR ROOM LAMP BATTERY SAVER FUNCTION

- When the power switch is turned to other position than ON, BCM operates the timer for a period of time to cut the interior room lamp power supply.
- BCM restarts the timer when any of the following signals changes while operating the timer.
  - Power switch status
  - Door switch signal (ALL)
  - Door lock/unlock signal (remote keyless entry receiver, each door request switch, door lock and unlock switch, door key cylinder switch)
- BCM provides the interior room lamp power supply continuously when the power switch position is ON.

#### NOTE:

Each function of interior room lamp battery saver can be set by CONSULT. Refer to [INL-13, "BATTERY SAVER : CONSULT Function \(BCM - BATTERY SAVER\)"](#).

### ILLUMINATION CONTROL SYSTEM


# SYSTEM

< SYSTEM DESCRIPTION >

## ILLUMINATION CONTROL SYSTEM : System Description

INFOID:000000008743858

### SYSTEM DIAGRAM

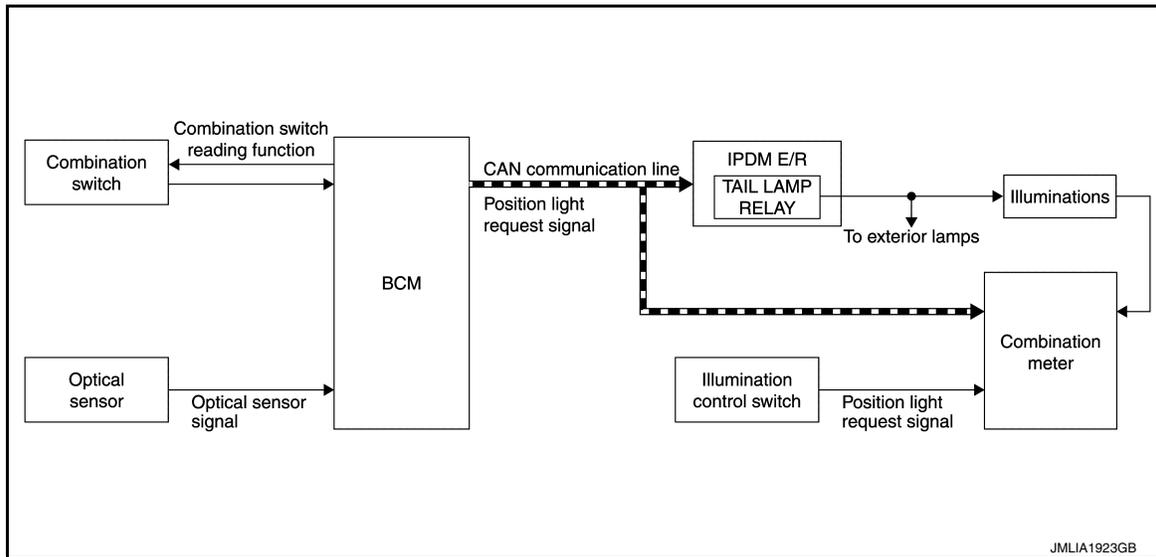

### OUTLINE

Each illumination lamp is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function

Control by IPDM E/R

- Relay control function

Control by combination meter

- Meter illumination control function (Refer to [MWI-8. "METER SYSTEM : System Description"](#).)

### ILLUMINATION CONTROL

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits position light request signal to IPDM E/R and combination meter according to tail lamp ON condition.

Tail lamp ON condition

- Lighting switch 1ST
- Lighting switch 2ND
- Lighting switch AUTO, and the auto light function ON judgment
- Lighting switch AUTO, with the front fog lamp switch ON and the power switch ON
- IPDM E/R turns the integrated tail lamp relay ON according to position light request signal. It provides the power supply to each illumination lamp.
- Combination meter enters in the nighttime mode according to position light request signal. Under the nighttime mode the combination meter controls the illuminance by controlling the each illumination lamp (ground side).

### AUTO LIGHT ADJUSTMENT SYSTEM


# SYSTEM

< SYSTEM DESCRIPTION >

## AUTO LIGHT ADJUSTMENT SYSTEM : System Description

INFOID:000000008743860

### SYSTEM DIAGRAM

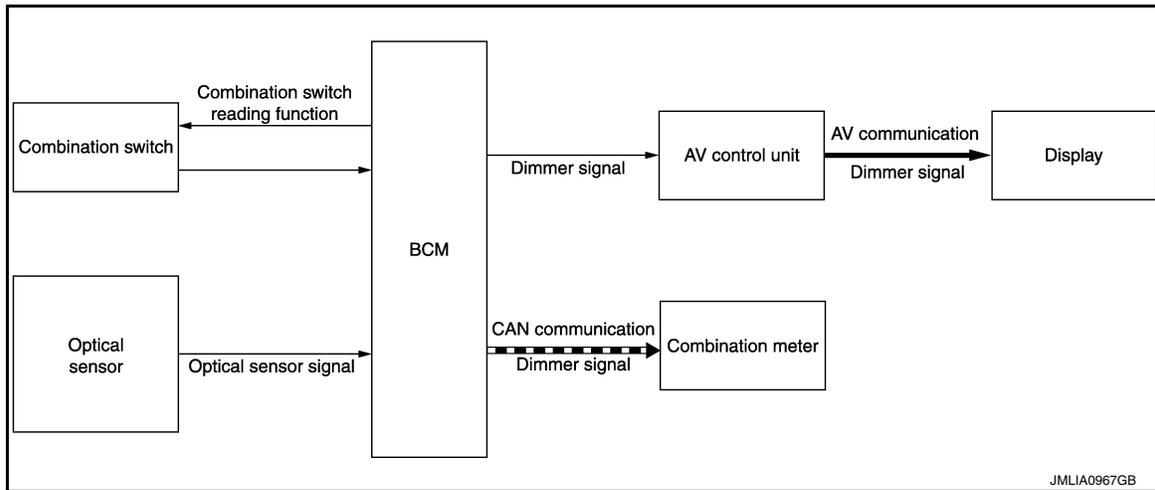

### OUTLINE

Auto light adjustment system is controlled by each function of BCM, combination meter and AV control unit

Control by BCM

- Auto light system
- Auto light adjustment system

### AUTO LIGHT ADJUSTMENT SYSTEM

Description

- BCM supplies voltage to the optical sensor when the power switch is turned ON or ACC.
- Optical sensor converts outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.
- BCM judges dimming/brightening of combination meter and display according to brightness outside the vehicle, when power switch is ON.
- BCM transmits dimmer signal to combination meter via CAN communication, according to auto light adjustment conditions. Dimmer signal is also transmitted to AV control unit.

#### NOTE:

As to dimming/brightening timing, the sensitivity depends on settings. The settings can be changed with CONSULT. Refer to [BCS-17, "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009336811

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> <li>The vehicle specification can be read and saved.</li> <li>The vehicle specification can be written when replacing BCM.</li> </ul>
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

### SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×	×		
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×			
Trunk open	TRUNK			×				
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				
Signal buffer system	SIGNAL BUFFER			×				
TPMS	AIR PRESSURE MONITOR		×	×	×	×		

### INT LAMP

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## INT LAMP : CONSULT Function (BCM - INT LAMP)

INFOID:00000009336812

### DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH -SW [On/Off]	Indicates condition of power switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of trunk switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

### ACTIVE TEST

Test Item	Description
INT LAMP	This test is able to check interior room lamp operation [On/Off].

### WORK SUPPORT

Support Item	Setting	Description
R LAMP TIMER LOGIC SET	MODE2	Interior room lamp timer activates from driver door switch only.
	MODE1*	Interior room lamp timer activates from any door switch.
SET I/L D-UNLCK INTCON	On*	Interior room lamp timer function ON.
	Off	Interior room lamp timer function OFF.
ROOM LAMP TIMER SET	MODE4	30 sec.
	MODE3*	15 sec.
	MODE2	7.5 sec.

\*: Initial setting

## BATTERY SAVER

### BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:00000009336813

### DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition power switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.

## DIAGNOSIS SYSTEM (BCM)

### < SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of trunk switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

### ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check battery saver operation [Off/On].

### WORK SUPPORT

Support item	Setting	Description
ROOM LAMP TIMER SET	MODE3	15 min.
	MODE2	60 min.
	MODE1*	30 min.
BATTERY SAVER SET	On*	Exterior lamp battery saver function ON.
	Off	Exterior lamp battery saver function OFF.

\*:Initial setting

# BCM

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

BCM

List of ECU Reference

INFOID:000000008743865

ECU	Reference
BCM	<a href="#">BCS-28. "Reference Value"</a>
	<a href="#">BCS-46. "Fail-safe"</a>
	<a href="#">BCS-47. "DTC Inspection Priority Chart"</a>
	<a href="#">BCS-48. "DTC Index"</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# INTERIOR ROOM LAMP CONTROL SYSTEM


< WIRING DIAGRAM >

## WIRING DIAGRAM

### INTERIOR ROOM LAMP CONTROL SYSTEM

Wiring Diagram


INFOID:000000008743866

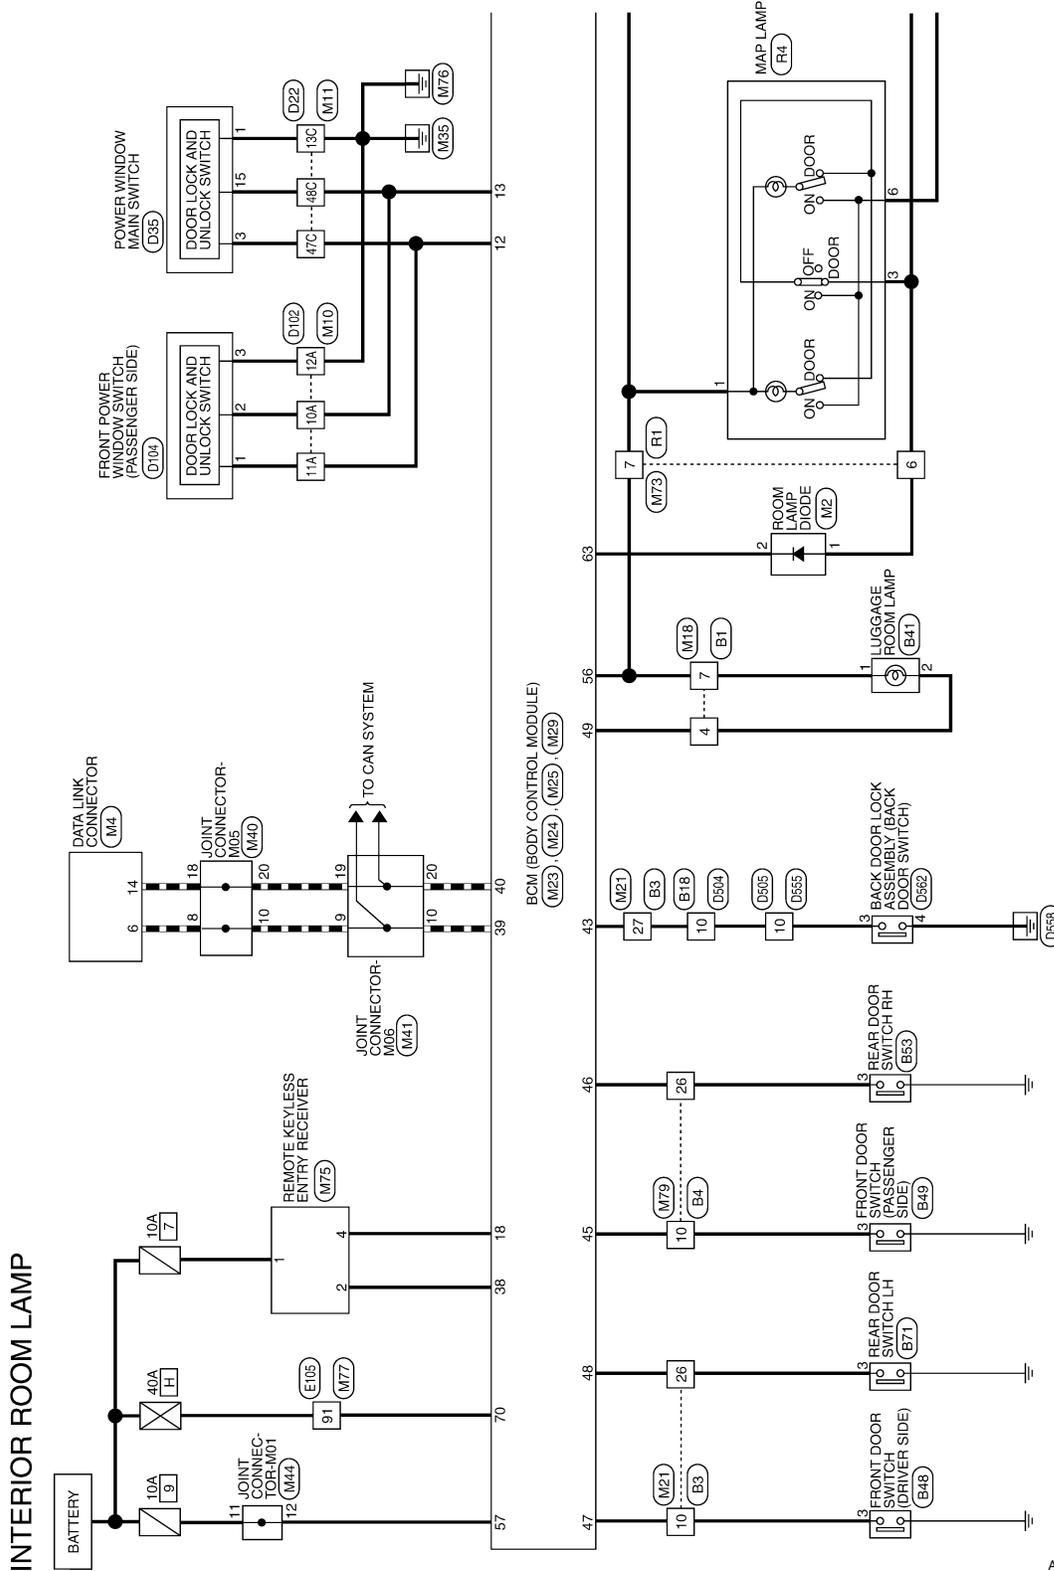

AALWA0712GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

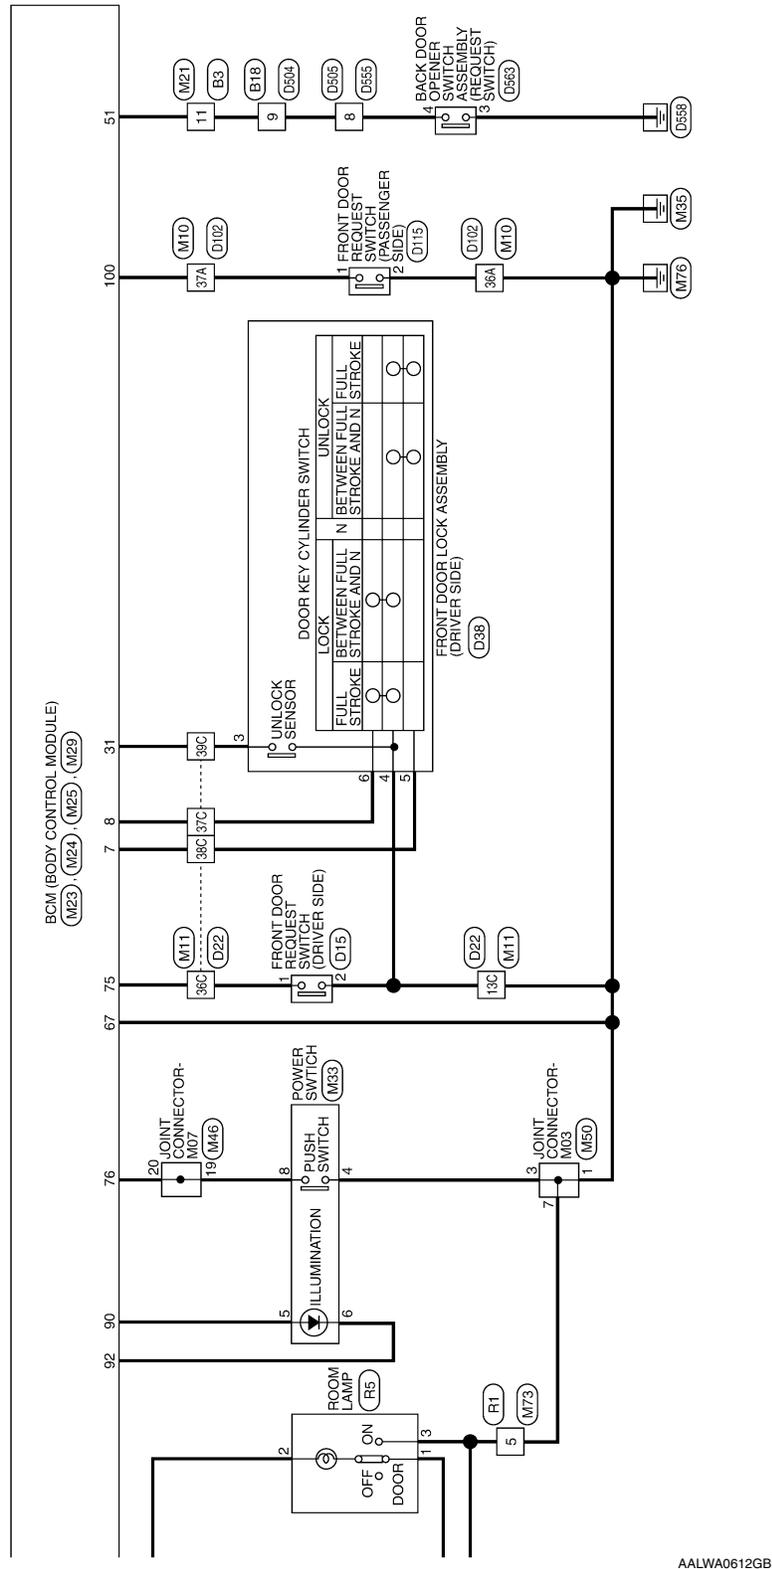

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

AALWA0612GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


## INTERIOR ROOM LAMP - CONNECTORS

Connector No.	M2
Connector Name	ROOM LAMP DIODE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	GR	-
2	BR	-


Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	LG	-
4	B	-
5	B	-

Terminal No.	Color of Wire	Signal Name
6	L	-
7	GR	-
8	G	-
9	-	-
10	-	-
11	SB	-
12	G	-
13	L	-
14	P	-
15	-	-
16	Y	-

Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	WHITE

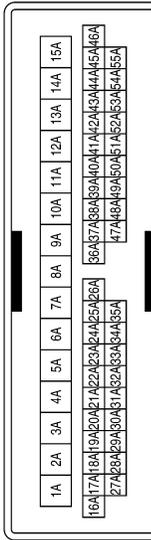

Terminal No.	Color of Wire	Signal Name
1A	L	-(WITH BOSE)
1A	R	-(WITHOUT BOSE)
2A	P	-(WITH BOSE)
2A	G	-(WITHOUT BOSE)

Terminal No.	Color of Wire	Signal Name
3A	SHIELD	-
4A	LG	-
5A	V	-
10A	BR	-
11A	Y	-
12A	B	-
13A	W	-
14A	SB	-
15A	L	-
24A	Y	-
25A	BR	-
26A	SHIELD	-
36A	B	-
37A	P	-
38A	Y	-
39A	LG	-

Terminal No.	Color of Wire	Signal Name
43A	V	-
44A	L	-
45A	LG	-
46A	BR	-
47A	W	-
48A	B	-
49A	R	-
50A	SHIELD	-

AALIA1727GB


# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
32C	-	-
33C	-	-
34C	-	-
35C	-	-
36C	LG	-
37C	R	-
38C	GR	-
39C	W	-
40C	P	-
41C	V	-
42C	V	-
43C	B	-
44C	L	-
45C	BR	-
46C	L	-
47C	Y	-
48C	BR	-
49C	B	-
50C	W	-
51C	R	-
52C	SHIELD	-
53C	-	-
54C	R	-
55C	LG	-

Terminal No.	Color of Wire	Signal Name
9C	LG	-
10C	Y	-
11C	W	-
12C	SB	-
13C	B	-
14C	L	-
15C	R	-
16C	-	-
17C	-	-
18C	-	-
19C	-	-
20C	-	-
21C	-	-
22C	-	-
23C	-	-
24C	G	-
25C	R	-
26C	SHIELD	-
27C	-	-
28C	-	-
29C	-	-
30C	-	-
31C	-	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Color	WHITE

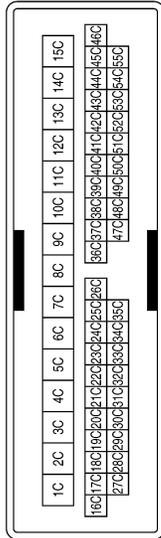

Terminal No.	Color of Wire	Signal Name
1C	R	- (WITH BOSE)
1C	P	- (WITHOUT BOSE)
2C	G	- (WITH BOSE)
2C	L	- (WITHOUT BOSE)
3C	SHIELD	-
4C	G	-
5C	V	-
6C	-	-
7C	BR	-
8C	SB	-

Terminal No.	Color of Wire	Signal Name
10	R	-
11	LG	-
12	P	-
13	W	-
14	Y	-
15	LG	-
16	L	-

Terminal No.	Color of Wire	Signal Name
2	-	-
3	GR	-
4	L	-
5	G	-
6	V	-
7	P	-
8	P	-
9	B	-

Connector No.	M18
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G	-

AALIA1728GB

A B C D E F G H I J K L M N O P



# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Connector No.	M21
Connector Name	WIRE TO WIRE
Connector Color	WHITE

	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-

Connector No.	M23
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110

Terminal No.	Color of Wire	Signal Name
71	-	-
72	-	-
73	V	PUSH SW SIGNAL OUTPUT
74	-	-
75	LG	REQUEST SW (DR)
76	SB	ENGINE START SW
77	-	-
78	P	DOOR ANTENNA (DR) +
79	V	DOOR ANTENNA (DR) -

Terminal No.	Color of Wire	Signal Name
7	B	-
8	SHIELD	-
9	R	-
10	SB	-
11	P	-
12	V	-
13	GR	-
14	P	-
15	L	-
16	G	-
17	-	-
18	-	-
19	-	-

Terminal No.	Color of Wire	Signal Name
80	LG	DOOR ANTENNA (AS) +
81	Y	DOOR ANTENNA (AS) -
82	W	BACK DOOR ANTENNA +
83	B	BACK DOOR ANTENNA -
84	BR	ROOM ANTENNA 1 +
85	Y	ROOM ANTENNA 1 -
86	G	ROOM ANTENNA 2 +
87	R	ROOM ANTENNA 2 -
88	G	ROOM ANTENNA 3 +
89	R	ROOM ANTENNA 3 -
90	W	HIGH SIDE ENGINE START SW ILLUMINATION LED
91	V	POWER POSITION LED (LOCK POSITION LED)
92	B	LOW SIDE ENGINE START SW ILLUMINATION LED OUTPUT
93	GR	SMART KEYLESS BUZZER OUTPUT

Terminal No.	Color of Wire	Signal Name
20	-	-
21	-	-
22	-	-
23	-	-
24	W	-
25	B	-
26	W	-
27	Y	-
28	-	-
29	W	-
30	L	-
31	L	-
32	P	-

Terminal No.	Color of Wire	Signal Name
94	-	SMART KEYLESS BUZZER OUTPUT
95	-	-
96	BR	ACC RELAY OUTPUT
97	LG	STARTER RELAY OUTPUT
98	L	IGN RELAY OUTPUT1 (USM)
99	GR	IGN RELAY OUTPUT2 (ELEC)
100	P	REQUEST SW (AS)
101	-	-
102	BG	SHIFT N, P
103	-	-
104	-	-
105	W	BRAKE SW2
106	-	-
107	-	-
108	-	-
109	-	-
110	-	-

AALIA1729GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
36	P	COMBINATION SW OUTPUT 1
37	V	SHIFT P POSITION, PARKING POSITION SW
38	SB	INTELLIGENT TUNER
39	L	CAN-H
40	P	CAN-L

Terminal No.	Color of Wire	Signal Name
15	W	REAR DEFOGGER SW
16	R	MR OUTPUT
17	Y	AUTO LIGHT SENSOR POWER SUPPLY OUTPUT
18	L	KEYLESS TUNER, AUTO LIGHT SENSOR GND
19	-	-
20	-	-
21	P	IMMOBILIZER ONE WAY COMMUNICATION (CLOCK)
22	-	-
23	R	SECURITY INDICATOR OUTPUT
24	SB	DONGLE LINK
25	LG	IMMOBILIZER TWO WAY COMMUNICATION
26	-	-
27	-	-
28	-	-
29	G	HAZARD SW
30	V	TRUNK/BACK DOOR OPENER SW
31	W	DOOR LOCK STATUS SW (DR)
32	GR	COMBINATION SW OUTPUT 5
33	Y	COMBINATION SW OUTPUT 4
34	W	COMBINATION SW OUTPUT 3
35	BG	COMBINATION SW OUTPUT 2

Connector No.	M24
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
1	-	-
2	L	COMBINATION SW INPUT 5
3	GR	COMBINATION SW INPUT 4
4	BR	COMBINATION SW INPUT 3
5	G	COMBINATION SW INPUT 2
6	V	COMBINATION SW INPUT 1
7	GR	KEY CYLINDER UNLOCK SW
8	R	KEY CYLINDER LOCK SW
9	BR	BRAKE SW1
10	-	-
11	-	-
12	Y	CENTRAL DOOR LOCK SW
13	BR	CENTRAL DOOR UNLOCK SW
14	G	AUTO LIGHT SENSOR INPUT

AALIA1730GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# INTERIOR ROOM LAMP CONTROL SYSTEM


< WIRING DIAGRAM >

Connector No.	M33
Connector Name	POWER SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	G	-
4	B	-
5	W	-
6	B	-
7	V	-
8	SB	-

Connector No.	M29
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
41	-	-
42	-	-
43	Y	DOOR SW (BACK)
44	LG	REAR WIPER AUTO STOP SW
45	BR	DOOR SW (AS)
46	R	DOOR SW (RR)
47	SB	DOOR SW (DR)
48	W	DOOR SW (RL)
49	L	LUGGAGE LAMP OUTPUT
50	-	-
51	P	REQUEST SW (TRUNK/BACK DOOR)
52	-	-
53	GR	TRUNK/BACK DOOR OPEN OUTPUT
54	P	REAR WIPER MOTOR OUTPUT
55	G	DOOR UNLOCK OUTPUT (RR, RL)

Connector No.	M25
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
56	P	BATTERY SAVER OUTPUT
57	P	BATTERY (FUSE)
58	-	-
59	LG	DOOR UNLOCK OUTPUT (AS)
60	V	FLASHER OUTPUT (LEFT)
61	R	FLASHER OUTPUT (RIGHT)
62	-	-
63	BR	ROOM LAMP OUTPUT
64	-	-
65	V	DOOR LOCK OUTPUT
66	G	DOOR UNLOCK COMMON (DR)
67	B	GND
68	L	POWER WINDOW POWER SUPPLY (RAP)
69	R	POWER WINDOW POWER SUPPLY (BATTERY)
70	Y	BATTERY (F/L)

AALIA1731GB

# INTERIOR ROOM LAMP CONTROL SYSTEM


< WIRING DIAGRAM >

Connector No.	M44
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	P	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	-	-
8	B	-
9	B	-
10	B	-
11	P	-
12	P	-
13	W	-
14	W	-
15	LG	-
16	R	-
17	R	-
18	W	-
19	W	-
20	W	-

Connector No.	M41
Connector Name	JOINT CONNECTOR-M06
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	SB	-
3	SB	-
4	SB	-
5	L	-
6	L	-
7	L	-
8	L	-
9	L	-
10	L	-
11	LG	-
12	LG	-
13	LG	-
14	LG	-
15	P	-
16	P	-
17	P	-
18	P	-
19	P	-
20	P	-

Connector No.	M40
Connector Name	JOINT CONNECTOR-M05
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	BR	-
4	GR	-
5	L	-
6	L	-
7	L	-
8	L	-
9	L	-
10	L	-
11	LG	-
12	LG	-
13	L	-
14	R	-
15	P	-
16	P	-
17	P	-
18	P	-
19	P	-
20	P	-


AALIA1732GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# INTERIOR ROOM LAMP CONTROL SYSTEM


< WIRING DIAGRAM >

Connector No.	M73
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-
3	SHIELD	-
4	-	-
5	B	-
6	BR	-
7	P	-
8	Y	-
9	R	-
10	B	-
11	W	-
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-

Connector No.	M50
Connector Name	JOINT CONNECTOR-CM03
Connector Color	PINK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	B	-
3	B	-
4	B	-
5	B	-
6	B	-
7	B	-
8	B	-
9	B	-
10	B	-
11	G	-
12	G	-
13	G	-
14	G	-
15	G	-
16	L	-
17	L	-
18	L	-
19	L	-
20	L	-

Connector No.	M46
Connector Name	JOINT CONNECTOR-CM07
Connector Color	ORANGE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	W	-
4	G	-
5	G	-
6	G	-
7	BR	-
8	GR	-
9	BR	-
10	BR	-
11	P	-
12	P	-
13	P	-
14	R	-
15	R	-
16	R	-
17	-	-
18	SB	-
19	SB	-
20	SB	-

AALIA1733GB


# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

---

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

Connector No.	M75
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G	-
2	SB	-
3	-	-
4	L	-

**INL**

AALIA1734GB


# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
60	Y	-
61	GR	-
62	W	-
63	BR	-
64	SHIELD	-
65	W	-
66	LG	-
67	R	-
68	G	-
69	BG	-
70	GR	-
71	R	-
72	R	-
73	B	-
74	W	-
76	L	-
80	W	-
81	LG	-
83	GR	-
84	L	-
85	Y	-
86	SB	-
88	R	-
89	G	-
90	SHIELD	-
91	Y	-
92	BR	-
93	W	-
94	P	-
95	L	-
96	P	-
97	G	-
98	V	-
99	LG	-
100	R	-

Terminal No.	Color of Wire	Signal Name
22	B	-
23	BG	-
24	B	-
26	G	-
27	B	-
28	B	-
25	W	-
29	R	-
31	R	-
32	W	-
33	GR	-
34	BR	-
35	BR	-
36	W	-
37	L	-
38	LG	-
39	SB	-
40	V	-
41	P	-
42	SB	-
43	G	-
44	LG	-
45	Y	-
46	R	-
47	W	-
48	L	-
49	G	-
50	L	-
51	SB	-
52	L	-
54	B	-
55	R	-
56	V	-
57	Y	-
58	L	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Color	WHITE

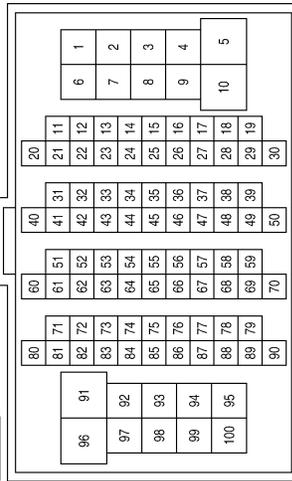

Terminal No.	Color of Wire	Signal Name
1	R	-
2	L	-
3	V	-
4	LG	-
6	P	-
7	GR	-
9	G	-
10	L	-
11	L	-
12	Y	-
13	V	-
14	R	-
15	G	-
16	W	-
17	R	-
18	G	-
19	W	-
20	GR	-
21	P	-

AALIA1735GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
21	V	-
22	SB	-
23	W	-
24	B	-
25	W	-
26	R	-
27	-	-
28	-	-
29	W	-
30	R	-
31	G	-
32	-	-

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Color	WHITE



16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

Terminal No.	Color of Wire	Signal Name
1	L	-
2	P	-
3	SHIELD	-
4	G	-
5	R	-
6	SHIELD	-
7	L	-
8	GR	-
9	R	-
10	BR	-
11	L	-
12	BR	-
13	B	-
14	-	-
15	R	-
16	G	-
17	R	-
18	G	-
19	SHIELD	-
20	BR	-

AALIA1867GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

57	Y	-
58	L	-
60	LG	-
61	GR	-
62	W	-
63	SB	-
64	SHIELD	-
65	W	-
66	G	-
67	V	-
68	R	-
69	B	-
70	BR	-
71	LG	-
72	R	-
73	B	-
74	O	-
76	L	-
77	Y	-
80	P	-
81	SB	-
83	GR	-
84	L	-
85	O	-
86	BR	-
88	B	-
89	W	-
90	SHIELD	-
91	Y	-
92	BR	-
93	O	-
94	R	-
95	V	-
96	P	-
97	G	-
98	W	-
99	O	-
100	SB	-

19	W/L	-
20	BR	-
21	R	-
22	B	-
23	LG	-
24	B	-
25	W	-
26	W	-
27	B	-
28	O/L	-
29	W	-
31	R	-
32	W	-
33	G	-
34	BR	-
35	V	-
36	O	-
37	L	-
38	SB	-
39	P	-
40	V	-
41	O	-
42	Y	-
43	BR	-
44	W	-
45	G	-
46	P	-
47	LG	-
47	R	-
48	B	-
49	L	-
50	G	-
51	W	-
52	O	-
54	B	-
55	R	-
56	Y	-

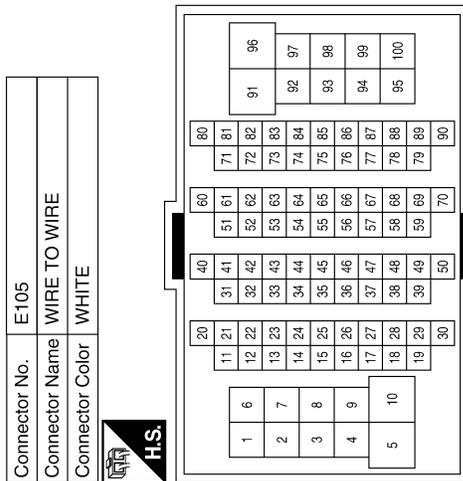

Terminal No.	Color of Wire	Signal Name
1	R	-
2	L	-
3	BW	-(WITHOUT FRONT FOG LAMPS)
3	R	-(WITH LED HEADLAMPS)
4	LG	-(WITH LED HEADLAMPS)
4	B/W	-(WITHOUT FRONT FOG LAMPS)
6	B/R	-
7	W	-
9	G	-
10	R	-
11	L	-
12	Y	-
13	W	-
14	R	-
15	G	-
16	G	-
17	R	-
18	O	-

AALIA1868GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
19	-	-
20	-	-
21	-	-
22	-	-
23	-	-
24	R	-
25	W	-
26	LG	-
27	Y	-
28	-	-
29	R	-
30	GR	-
31	L	-
32	P	-

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	B	-
8	SHIELD	-
9	B	-
10	SB	-
11	P	-
12	BR	-
13	GR	-
14	P	-
15	L	-
16	G	-
17	-	-
18	-	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name
1	G	-
2	-	-
3	GR	-
4	L	-
5	G	-
6	R	-
7	BR	-
8	SB	-
9	GR	-
10	W	-
11	LG	-
12	P	-
13	V	-
14	Y	-
15	W	-
16	L	-

AALIA1869GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P


# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
28	-	-
29	W	-
30	V	-
31	LG	-
32	SHIELD	-

Terminal No.	Color of Wire	Signal Name
11	GR	-
12	BR	-
13	B	-
14	-	-
15	R	-
16	G	-
17	R	-
18	G	-
19	SHIELD	-
20	LG	-
21	V	-
22	GR	-
23	G	-
24	B	-
25	W	-
26	R	-
27	-	-

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	P	-
3	SHIELD	-
4	R	-
5	L	-
6	SHIELD	-
7	P	-
8	SB	-
9	R	-
10	BR	-

Terminal No.	Color of Wire	Signal Name
19	-	-
20	GR	-

Terminal No.	Color of Wire	Signal Name
6	BR	-
7	-	-
8	-	-
9	P	-
10	Y	-
11	B	-
12	W	-
13	R	-
14	L	-
15	LG	-
16	-	-
17	SHIELD	-
18	B	-

Connector No.	B18
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	P	-
5	P	-

AALIA1870GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Connector No.	B41
Connector Name	LUGGAGE ROOM LAMP
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	BR	-
2	L	-

Connector No.	B48
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	SB	-
4	-	-

Connector No.	B49
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	BR	-
4	-	-

Connector No.	B53
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	R	-
4	-	-

Connector No.	B71
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	LG	-
4	-	-


AALIA1871GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


Connector No.	R4
Connector Name	MAP LAMP
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	-	-
3	R	-
4	-	-
5	-	-
6	R	-
7	G	-
8	V	-

Terminal No.	Color of Wire	Signal Name
6	R	-
7	Y	-
8	-	-
9	V	-
10	G	-
11	B/R	-
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-
3	GR	-
4	-	-
5	B	-

Connector No.	D15
Connector Name	FRONT DOOR REQUEST SWITCH (DRIVER SIDE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-

Connector No.	R5
Connector Name	ROOM LAMP
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R	-
2	Y	-
3	B	-

AALIA1872GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


Connector No.	D25
Connector Name	POWER WINDOW MAIN SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	GND
2	SB	MOTOR DN AS
3	Y	LOCK SW
4	W	ENCODER SIG2
5	Y	ENCODER SIG1
6	Y	MOTOR DN RR
7	LG	MOTOR UP RR
8	BR	MOTOR DN RL
9	P	MOTOR UP RL
10	V	IGN
11	-	-
12	R	ENCODER GND
13	-	-
14	G	ENCODER +
15	BR	UNLOCK SW
16	W	MOTOR UP AS

Terminal No.	Color of Wire	Signal Name
22C	-	-
23C	-	-
24C	G	-
25C	R	-
26C	SHIELD	-
27C	-	-
28C	-	-
29C	-	-
30C	-	-
31C	-	-
32C	-	-
33C	-	-
34C	-	-
35C	-	-
36C	LG	-
37C	R	-
38C	L	-
39C	G	-
40C	P	-
41C	-	-
42C	P	-
43C	GR	-
44C	L	-
45C	BR	-
46C	L	-
47C	Y	-
48C	BR	-
49C	B	-
50C	W	-
51C	R	-
52C	SHIELD	-
53C	-	-
54C	V	-
55C	LG	-

Connector No.	D22
Connector Name	WIRE TO WIRE
Connector Color	WHITE

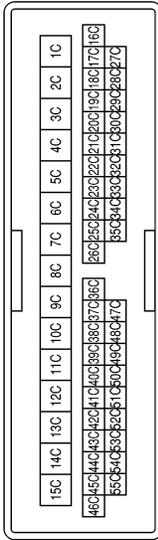

Terminal No.	Color of Wire	Signal Name
1C	R	-(WITH BOSE)
1C	L	-(WITHOUT BOSE)
2C	G	-(WITH BOSE)
2C	V	-(WITHOUT BOSE)
3C	SHIELD	-
4C	SB	-
5C	V	-
6C	-	-
7C	P	-
8C	BR	-
9C	LG	-
10C	Y	-
11C	W	-
12C	SB	-
13C	B	-
14C	V	-
15C	R	-
16C	-	-
17C	-	-
18C	-	-
19C	-	-
20C	-	-
21C	-	-

AALIA1873GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


INL

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


Terminal No.	Color of Wire	Signal Name
21A	-	-
22A	-	-
23A	-	-
24A	Y	-
25A	BR	-
26A	SHIELD	-
27A	-	-
28A	-	-
29A	-	-
30A	-	-
31A	-	-
32A	-	-
33A	-	-
34A	-	-
35A	-	-
36A	B	-
37A	P	-
38A	Y	-
39A	LG	-
40A	-	-
41A	-	-
42A	-	-
43A	V	-
44A	V	-
45A	W	-
46A	BG	-
47A	W	-
48A	B	-
49A	R	-
50A	SHIELD	-
51A	-	-
52A	-	-
53A	-	-
54A	-	-
55A	-	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

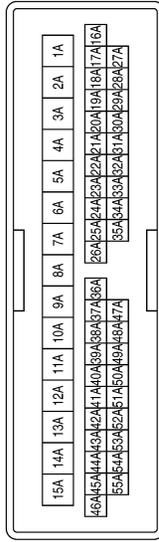

Terminal No.	Color of Wire	Signal Name
1A	L	-- (WITH BOSE)
1A	BR	-- (WITHOUT BOSE)
2A	P	-- (WITH BOSE)
2A	R	-- (WITHOUT BOSE)
3A	SHIELD	-
4A	Y	-
5A	V	-
6A	-	-
7A	-	-
8A	-	-
9A	-	-
10A	BR	-
11A	Y	-
12A	B	-
13A	W	-
14A	SB	-
15A	R	-
16A	-	-
17A	-	-
18A	-	-
19A	-	-
20A	-	-

Connector No.	D38
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	V	-
2	SB	-
3	G	-
4	B	-
5	L	-
6	R	-

AALIA1874GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


Connector No.	D115
Connector Name	FRONT DOOR REQUEST SWITCH (PASSENGER SIDE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	P	-
2	B	-


Terminal No.	Color of Wire	Signal Name
6	Y	-
7	R	-
8	R	-
9	-	-
10	-	-
11	SB	-
12	W	-

Connector No.	D104
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	BR	-
3	B	-
4	-	-
5	-	-


Connector No.	D505
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	R	-
3	P	-
4	W	-
5	R	-
6	SHIELD	-
7	Y	-
8	P	-
9	L	-
10	SB	-
11	LG	-
12	GR	-

Terminal No.	Color of Wire	Signal Name
7	-	-
8	-	-
9	P	-
10	SB	-
11	B	-
12	W	-
13	R	-
14	L	-
15	LG	-
16	-	-
17	SHIELD	-
18	Y	-
19	-	-
20	GR	-

Connector No.	D504
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	P	-
5	W	-
6	R	-

AALIA1875GB


A B C D E F G H I J K L M N O P

INL

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


Connector No.	D562
Connector Name	BACK DOOR LOCK ASSEMBLY
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	GB	-
2	B	-
3	SB	-
4	B	-


Terminal No.	Color of Wire	Signal Name
3	P	-
4	W	-
5	R	-
6	SHIELD	-
7	Y	- (WITHOUT AROUND VIEW MONITOR)
7	R	- (WITH AROUND VIEW MONITOR)
8	P	-
9	L	-
10	SB	-
11	LG	-
12	GR	-

Connector No.	D555
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	- (WITHOUT AROUND VIEW MONITOR)
1	B	- (WITH AROUND VIEW MONITOR)
2	R	- (WITHOUT AROUND VIEW MONITOR)
2	W	- (WITH AROUND VIEW MONITOR)

Connector No.	D563
Connector Name	BACK DOOR OPENER SWITCH ASSEMBLY
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-
3	B	-
4	P	-

AALIA1876GB


# ILLUMINATION

< WIRING DIAGRAM >

## ILLUMINATION

### Wiring Diagram

INFOID:000000008743867

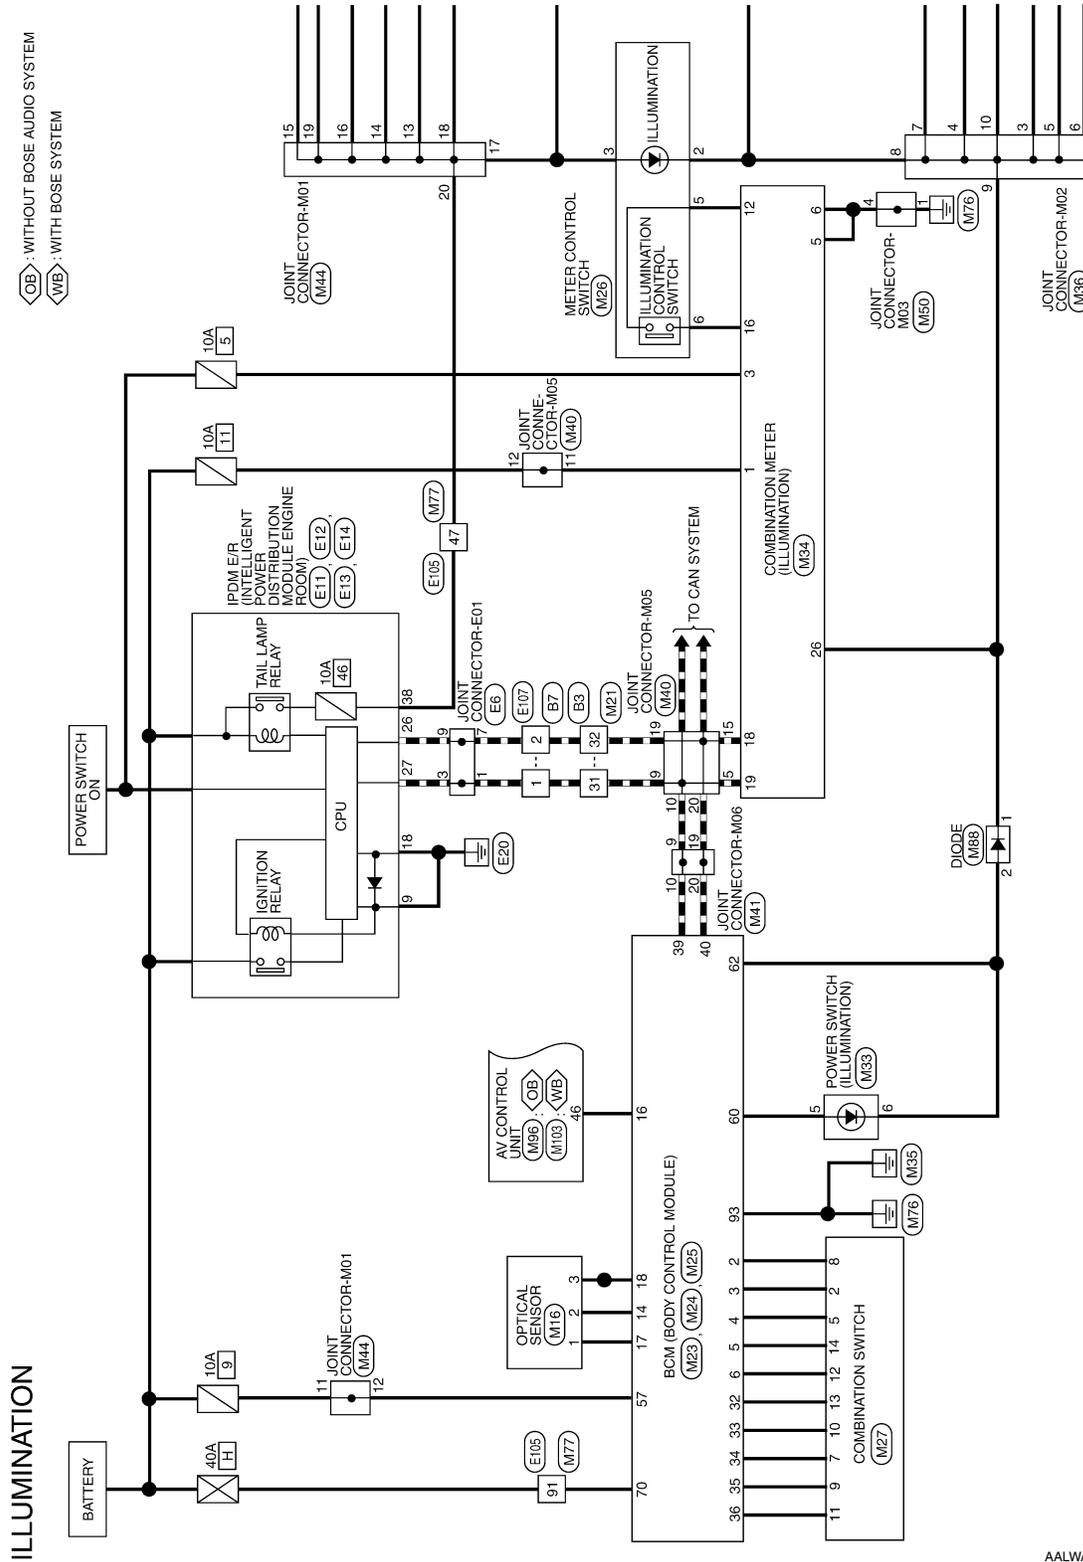


AALWA0667GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ILLUMINATION


< WIRING DIAGRAM >

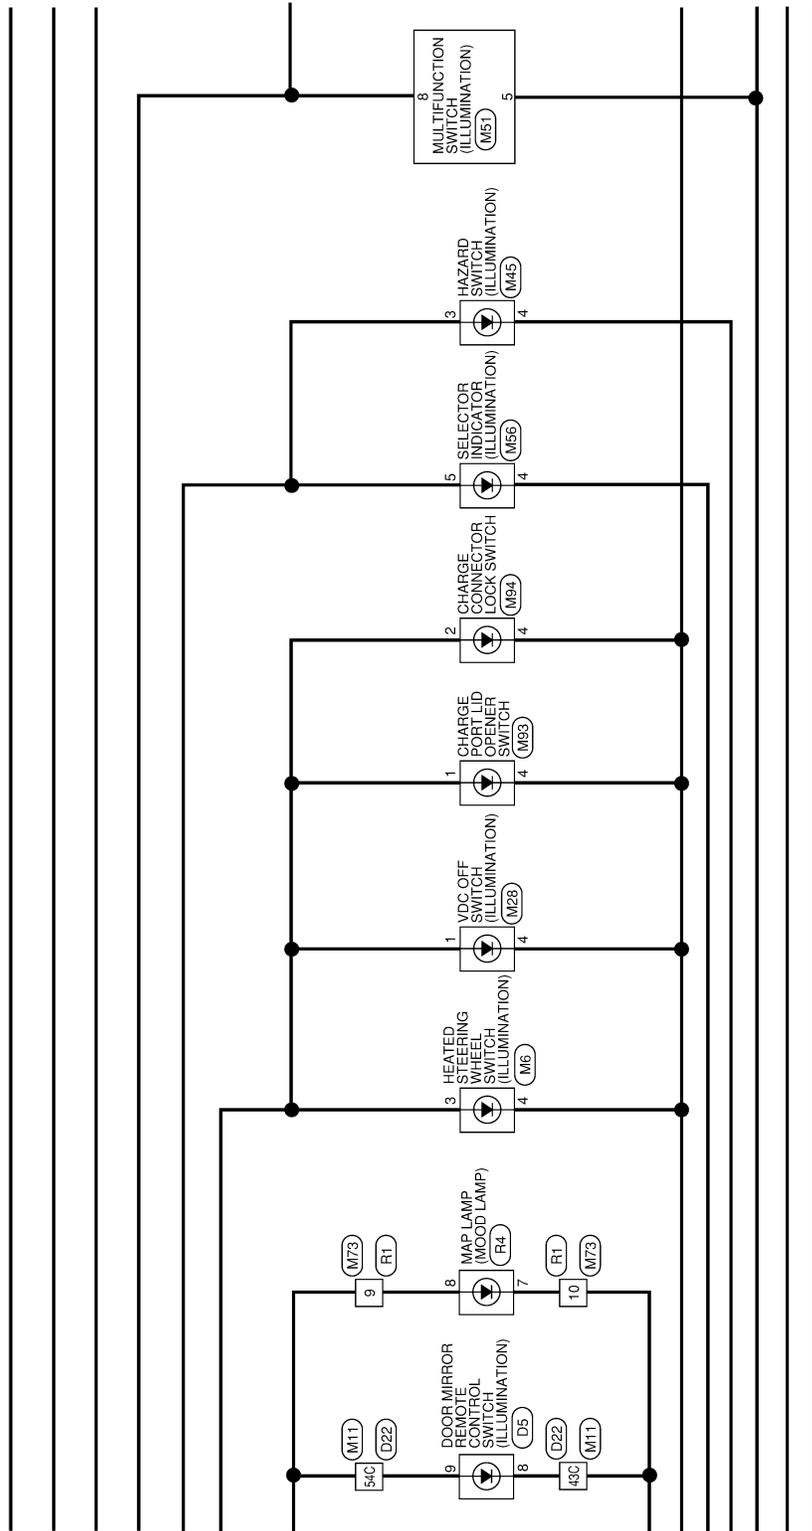

AALWA0609GB

# ILLUMINATION

< WIRING DIAGRAM >

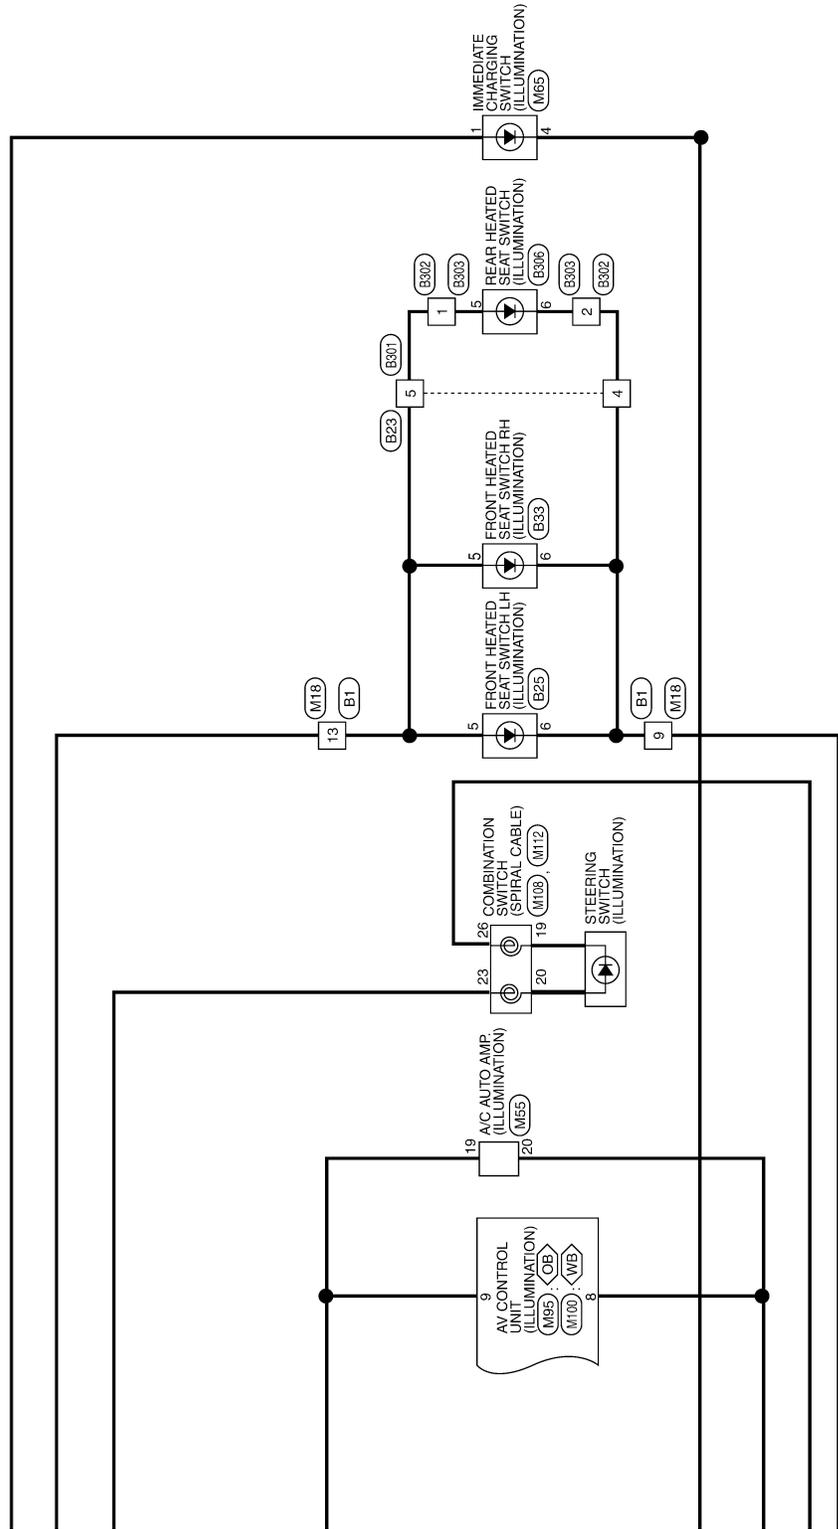

AALWA0610GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# ILLUMINATION

< WIRING DIAGRAM >

## ILLUMINATION - CONNECTORS


Connector No.	M6
Connector Name	HEATED STEERING WHEEL SWITCH
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	R	-
2	B	-
3	R	-
4	B	-
5	BR	-

Terminal No.	Color of Wire	Signal Name
6	B	-
7	-	-
8	-	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Color	WHITE

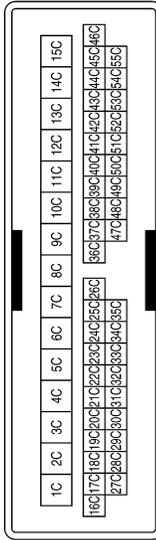

Terminal No.	Color of Wire	Signal Name
9C	LG	-
10C	Y	-
11C	W	-
12C	SB	-
13C	B	-
14C	L	-
15C	R	-
16C	-	-
17C	-	-
18C	-	-
19C	-	-
20C	-	-
21C	-	-
22C	-	-
23C	-	-
24C	G	-
25C	R	-
26C	SHIELD	-
27C	-	-
28C	-	-
29C	-	-
30C	-	-
31C	-	-

Terminal No.	Color of Wire	Signal Name
32C	-	-
33C	-	-
34C	-	-
35C	-	-
36C	LG	-
37C	R	-
38C	GR	-
39C	W	-
40C	P	-
41C	V	-
42C	V	-
43C	B	-
44C	L	-
45C	BR	-
46C	L	-
47C	Y	-
48C	BR	-
49C	B	-
50C	W	-
51C	R	-
52C	SHIELD	-
53C	-	-
54C	R	-
55C	LG	-

Terminal No.	Color of Wire	Signal Name
1C	R	- (WITH BOSE)
1C	P	- (WITHOUT BOSE)
2C	G	- (WITH BOSE)
2C	L	- (WITHOUT BOSE)
3C	SHIELD	-
4C	G	-
5C	V	-
6C	-	-
7C	BR	-
8C	SB	-

AALIA1716GB

# ILLUMINATION


< WIRING DIAGRAM >

Connector No.	M16
Connector Name	OPTICAL SENSOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	G	-
3	V	-


Connector No.	M18
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G	-
2	-	-
3	GR	-
4	L	-
5	G	-

Terminal No.	Color of Wire	Signal Name
6	V	-
7	P	-
8	P	-
9	B	-
10	R	-
11	LG	-
12	P	-
13	W	-
14	Y	-
15	LG	-
16	L	-

Connector No.	M21
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	B	-
8	SHIELD	-
9	R	-

Terminal No.	Color of Wire	Signal Name
10	SB	-
11	P	-
12	V	-
13	GR	-
14	P	-
15	L	-
16	G	-
17	-	-
18	-	-
19	-	-
20	-	-
21	-	-
22	-	-
23	-	-
24	W	-

Terminal No.	Color of Wire	Signal Name
25	B	-
26	W	-
27	Y	-
28	-	-
29	W	-
30	L	-
31	L	-
32	P	-

AALIA1717GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# ILLUMINATION

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
90	W	HIGHSIDE ENGINE START SW ILLUMINATION LED
91	V	POWER POSITION LED (LOCK POSITION LED)
92	B	LOW SIDE ENGINE START SW ILLUMINATION LED OUTPUT
93	GR	SMART KEYLESS BUZZER OUTPUT
94	-	SMART KEYLESS BUZZER OUTPUT
95	-	-
96	BR	ACC RELAY OUTPUT
97	LG	STARTER RELAY OUTPUT
98	L	IGN RELAY OUTPUT1 (USM)
99	GR	IGN RELAY OUTPUT2 (ELEC)
100	P	REQUEST SW (AS)
101	-	-
102	BG	SHIFT N, P
103	-	-
104	-	-
105	W	BRAKE SW2
106	-	-
107	-	-
108	-	-
109	-	-
110	-	-

Connector No.	M23
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110

Terminal No.	Color of Wire	Signal Name
71	-	-
72	-	-
73	V	PUSH SW SIGNAL OUTPUT
74	-	-
75	LG	REQUEST SW (DR)
76	SB	ENGINE START SW
77	-	-
78	P	DOOR ANTENNA (DR) +
79	V	DOOR ANTENNA (DR) -
80	LG	DOOR ANTENNA (AS) +
81	Y	DOOR ANTENNA (AS) -
82	W	BACK DOOR ANTENNA +
83	B	BACK DOOR ANTENNA -
84	BR	ROOM ANTENNA 1 +
85	Y	ROOM ANTENNA 1 -
86	G	ROOM ANTENNA 2 +
87	R	ROOM ANTENNA 2 -
88	G	ROOM ANTENNA 3 +
89	R	ROOM ANTENNA 3 -

AALIA1718GB

# ILLUMINATION

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
36	P	COMBINATION SW OUTPUT 1
37	V	SHIFT P POSITION, PARKING POSITION SW
38	SB	INTELLIGENT TUNER
39	L	CAN-H
40	P	CAN-L

Terminal No.	Color of Wire	Signal Name
15	W	REAR DEFOGGER SW
16	R	MR OUTPUT
17	Y	AUTO LIGHT SENSOR POWER SUPPLY OUTPUT
18	L	KEYLESS TUNER, AUTO LIGHT SENSOR GND
19	-	-
20	-	-
21	P	IMMOBILIZER ONE WAY COMMUNICATION (CLOCK)
22	-	-
23	R	SECURITY INDICATOR OUTPUT
24	SB	DONGLE LINK
25	LG	IMMOBILIZER TWO WAY COMMUNICATION
26	-	-
27	-	-
28	-	-
29	G	HAZARD SW
30	V	TRUNK/BACK DOOR OPENER SW
31	W	DOOR LOCK STATUS SW (DR)
32	GR	COMBINATION SW OUTPUT 5
33	Y	COMBINATION SW OUTPUT 4
34	W	COMBINATION SW OUTPUT 3
35	BG	COMBINATION SW OUTPUT 2

Connector No.	M24
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
1	-	-
2	L	COMBINATION SW INPUT 5
3	GR	COMBINATION SW INPUT 4
4	BR	COMBINATION SW INPUT 3
5	G	COMBINATION SW INPUT 2
6	V	COMBINATION SW INPUT 1
7	GR	KEY CYLINDER UNLOCK SW
8	R	KEY CYLINDER LOCK SW
9	BR	BRAKE SW1
10	-	-
11	-	-
12	Y	CENTRAL DOOR LOCK SW
13	BR	CENTRAL DOOR UNLOCK SW
14	G	AUTO LIGHT SENSOR INPUT

AALIA1719GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P



# ILLUMINATION


< WIRING DIAGRAM >

Connector No.	M25
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
56	P	BATTERY SAVER OUTPUT
57	P	BATTERY (FUSE)
58	-	-
59	LG	DOOR UNLOCK OUTPUT (AS)
60	V	FLASHER OUTPUT (LEFT)
61	R	FLASHER OUTPUT (RIGHT)
62	-	-
63	BR	ROOM LAMP OUTPUT
64	-	-
65	V	DOOR LOCK OUTPUT
66	G	DOOR UNLOCK COMMON (DR)
67	B	GND
68	L	POWER WINDOW POWER SUPPLY (RAP)
69	R	POWER WINDOW POWER SUPPLY (BATTERY)
70	Y	BATTERY (F/L)

Connector No.	M26
Connector Name	METER CONTROL SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-
3	R	-
4	-	-
5	V	-
6	P	-
7	-	-
8	-	-
9	-	-
10	-	-
11	BR	-
12	Y	-

Connector No.	M27
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	LG	-
2	GR	-
3	R	-
4	SB	-
5	BR	-
6	B	-
7	W	-
8	L	-
9	BG	-
10	Y	-
11	P	-
12	V	-
13	GR	-
14	G	-
15	-	-
16	-	-

AALIA1720GB

# ILLUMINATION


< WIRING DIAGRAM >

Connector No.	M33
Connector Name	POWER SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	G	-
4	B	-
5	W	-
6	B	-
7	V	-
8	SB	-


Connector No.	M28
Connector Name	VDC OFF SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W	-
2	-	-
3	-	-
4	B	-
5	-	-
6	R	-
7	-	-
8	B	-

Terminal No.	Color of Wire	Signal Name
10	-	-
11	-	-
12	V	-
13	G	-
14	Y	-
15	BR	-
16	P	-
17	G	-
18	P	-
19	L	-
20	LG	-
21	-	-
22	GR	-
23	-	-
24	BG	-
25	SB	-
26	B	-
27	R	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	Y	-
3	GR	-
4	BG	-
5	B	-
6	B	-
7	-	-
8	Y	-
9	BR	-

Terminal No.	Color of Wire	Signal Name
28	R	-
29	-	-
30	GR	-
31	-	-
32	W	-
33	G	-
34	L	-
35	-	-
36	-	-
37	-	-
38	V	-
39	LG	-
40	W	-

AALIA1721GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ILLUMINATION


< WIRING DIAGRAM >

Connector No.	M41
Connector Name	JOINT CONNECTOR-M06
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	SB	-
3	SB	-
4	SB	-
5	L	-
6	L	-
7	L	-
8	L	-
9	L	-
10	L	-
11	LG	-
12	LG	-
13	LG	-
14	LG	-
15	P	-
16	P	-
17	P	-
18	P	-
19	P	-
20	P	-

Connector No.	M40
Connector Name	JOINT CONNECTOR-M05
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	BR	-
4	GR	-
5	L	-
6	L	-
7	L	-
8	L	-
9	L	-
10	L	-
11	LG	-
12	LG	-
13	L	-
14	R	-
15	P	-
16	P	-
17	P	-
18	P	-
19	P	-
20	P	-

Connector No.	M36
Connector Name	JOINT CONNECTOR-M02
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	SB	-
3	B	-
4	B	-
5	B	-
6	B	-
7	B	-
8	B	-
9	B	-
10	B	-
11	BR	-
12	L	-
13	B	-
14	R	-
15	R	-
16	R	-
17	R	-
18	R	-
19	R	-
20	R	-

AALIA1722GB

# ILLUMINATION


< WIRING DIAGRAM >

Connector No.	M44
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	P	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	-	-
8	B	-


Connector No.	M50
Connector Name	JOINT CONNECTOR-M03
Connector Color	PINK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	B	-
3	B	-
4	B	-
5	B	-
6	B	-
7	B	-

Terminal No.	Color of Wire	Signal Name
9	B	-
10	B	-
11	P	-
12	P	-
13	W	-
14	W	-
15	LG	-
16	R	-
17	R	-
18	W	-
19	W	-
20	W	-

Connector No.	M45
Connector Name	HAZARD SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	G	-
3	W	-
4	B	-

Terminal No.	Color of Wire	Signal Name
8	B	-
9	B	-
10	B	-
11	G	-
12	G	-
13	G	-
14	G	-
15	G	-
16	L	-
17	L	-
18	L	-
19	L	-
20	L	-

Connector No.	M51
Connector Name	MULTIFUNCTION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	LG	-
3	-	-
4	L	-
5	B	-
6	SB	-
7	-	-
8	W	-

AALIA1723GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ILLUMINATION

< WIRING DIAGRAM >

Connector No.	M55
Connector Name	A/C AUTO AMP.
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
1	V	REC
2	R	MODE4
3	P	MODE3
4	BG	MODE2
5	V	MODE1
6	BR	MIX4
7	GR	MIX3



1	2	3	4
5	6	7	8

Connector No.	M56
Connector Name	SELECTOR INDICATOR
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
8	LG	MIX2
9	L	MIX1
10	B	GND
11	-	-
12	GR	BLR PWM
13	-	-
14	L	COMP TX
15	W	REAR DEF
16	LG	STRG HEATER SW
17	W	TA1
18	W	COMP RX
19	W	ILL+
20	B	ILL-
21	G	FRESH
22	V	STEER RLY
23	SB	HEATER SEAT RLY

Terminal No.	Color of Wire	Signal Name
24	-	-
25	-	-
26	-	-
27	W	5V OUT
28	L	CAN-H
29	G	CAN-L
30	R	S GND
31	G	BAT
32	Y	IGN 1
33	LG	INC S
34	G	INT S
35	P	SUN S
36	GR	AMB S
37	Y	TA 2
38	SB	INT F/B
39	-	-
40	SB	LIN

Connector No.	M65
Connector Name	IMMEDIATE CHARGING SWITCH
Connector Color	GRAY



4	3	2	1
8	7	6	5

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	-	-
3	-	-
4	B	-
5	-	-
6	SB	-
7	-	-
8	B	-

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	R	-
3	B	-
4	B	-
5	W	-
6	-	-
7	L	-
8	P	-


AALIA1724GB

# ILLUMINATION

< WIRING DIAGRAM >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

Connector No.	M73
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-
3	SHIELD	-
4	-	-
5	B	-
6	BR	-
7	P	-
8	Y	-
9	R	-
10	B	-
11	W	-
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-

AALIA1725GB


# ILLUMINATION

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
60	Y	-
61	GR	-
62	W	-
63	BR	-
64	SHIELD	-
65	W	-
66	LG	-
67	R	-
68	G	-
69	BG	-
70	GR	-
71	R	-
72	R	-
73	B	-
74	W	-
76	L	-
80	W	-
81	LG	-
83	GR	-
84	L	-
85	Y	-
86	SB	-
88	R	-
89	G	-
90	SHIELD	-
91	Y	-
92	BR	-
93	W	-
94	P	-
95	L	-
96	P	-
97	G	-
98	V	-
99	LG	-
100	R	-

Terminal No.	Color of Wire	Signal Name
22	B	-
23	BG	-
24	B	-
26	G	-
27	B	-
28	B	-
25	W	-
29	R	-
31	R	-
32	W	-
33	GR	-
34	BR	-
35	BR	-
36	W	-
37	L	-
38	LG	-
39	SB	-
40	V	-
41	P	-
42	SB	-
43	G	-
44	LG	-
45	Y	-
46	R	-
47	W	-
48	L	-
49	G	-
50	L	-
51	SB	-
52	L	-
54	B	-
55	R	-
56	V	-
57	Y	-
58	L	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Color	WHITE

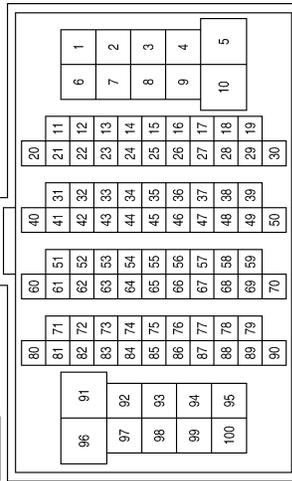

Terminal No.	Color of Wire	Signal Name
1	R	-
2	L	-
3	V	-
4	LG	-
6	P	-
7	GR	-
9	G	-
10	L	-
11	L	-
12	Y	-
13	V	-
14	R	-
15	G	-
16	W	-
17	R	-
18	G	-
19	W	-
20	GR	-
21	P	-

AALIA1726GB

# ILLUMINATION


< WIRING DIAGRAM >

Connector No.	M88
Connector Name	DIODE-3
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	-
2	B	-

Connector No.	M93
Connector Name	CHARGE PORT LID OPENER SWITCH
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
1	P	-
2	-	-
3	-	-
4	B	-
5	-	-
6	GR	-
7	-	-
8	B	-

Connector No.	M94
Connector Name	CHARGE CONNECTOR LOCK SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	V	-
2	G	-
3	-	-
4	GR	-
5	P	-
6	BR	-
7	-	-
8	L	-
9	W	-
10	Y	-

Connector No.	M95
Connector Name	AV CONTROL UNIT (WITH NAVIGATION SYSTEM WITHOUT BOSE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	-	-
2	L	FR LH PRE+
3	P	FR LH PRE-

Terminal No.	Color of Wire	Signal Name
4	V	RR LH PRE+
5	LG	RR LH PRE-
6	R	STRG SW A
7	BR	ACC
8	B	ILL CONT
9	W	ILL
10	-	-
11	G	FR RH PRE+
12	R	FR RH PRE-
13	LG	RR RH PRE+
14	P	RR RH PRE-

Terminal No.	Color of Wire	Signal Name
15	B	STRG SW GND
16	W	STRG SW B
17	-	-
18	-	-
19	BR	BAT
20	-	-

AALIA1855GB

A B C D E F G H I J K **INL** M N O P

# ILLUMINATION

< WIRING DIAGRAM >

Connector No.	M96
Connector Name	AV CONTROL UNIT (WITH NAVIGATION SYSTEM WITHOUT BOSE)
Connector Color	WHITE



21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60

Terminal No.	Color of Wire	Signal Name
21	LG	M CAN L TRM
22	LG	M CAN L
23	P	V CAN L
24	-	-
25	Y	PKB SIG
26	V	IGN

Terminal No.	Color of Wire	Signal Name
27	-	-
28	-	-
29	-	-
30	-	-
31	-	-
32	-	-
33	-	-
34	P	MIC VCC
35	R	AUX AUDIO LH
36	B	AUX AUDIO-
37	-	-
38	-	-
39	R	CAMERA V+
40	R	R CAMERA COMP
41	SB	M CAN H TRM
42	SB	M CAN H
43	L	V CAN H

Terminal No.	Color of Wire	Signal Name
44	GR	SPEED
45	G	REVERSE SIG
46	R	MR OUTPUT
47	-	-
48	-	-
49	-	-
50	-	-
51	-	-
52	-	-
53	L	MIC SIG
54	SHIELD	MIC GND
55	W	AUX AUDIO RH
56	SHIELD	AUX SHIELD
57	-	-
58	B	RV CAM SIG
59	W	CAMERA GND
60	SHIELD	R CAMERA SHIELD

Connector No.	M100
Connector Name	AV CONTROL UNIT (WITH NAVIGATION SYSTEM WITH BOSE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	
10	11	12	13	14	15	16	17	18	20

Terminal No.	Color of Wire	Signal Name
1	L	AMP_ON
2	Y	FR_LH_PRE/SP+

Terminal No.	Color of Wire	Signal Name
3	BR	FR_LH_PRE/SP-
4	P	RR_LH_PRE/SP+
5	L	RR_LH_PRE/SP-
6	R	STRG_SW_A
7	BR	ACC
8	B	ILL_CONT
9	W	ILL
10	-	-
11	G	FR_RH_PRE/SP+

Terminal No.	Color of Wire	Signal Name
12	R	FR_RH_PRE/SP-
13	BR	RR_RH_PRE/SP+
14	Y	RR_RH_PRE/SP-
15	B	STRG_SW_GND
16	W	STRG_SW_B
17	-	-
18	-	-
19	BR	+B
20	-	-

AALIA1856GB

# ILLUMINATION

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
44	GR	SPEED_8P
45	G	REVERSE_SIG
46	R	MR_OUTPUT
47	-	-
48	-	-
49	-	-
50	-	-
51	-	-
52	-	-
53	L	MIC_SIG
54	SHIELD	
55	W	AUX_AUDIO_RH
56	SHIELD	
57	-	-
58	B	RV_CAM_SIG
59	-	-
60	SHIELD	

Terminal No.	Color of Wire	Signal Name
28	-	-
29	-	-
30	-	-
31	-	-
32	-	-
33	-	-
34	P	MIC_VCC
35	R	AUX_AUDIO_LH
36	B	AUX_AUDIO
37	-	-
38	-	-
39	-	-
40	B	R_CAMERA_COMP
41	SB	M-CAN2_H
42	SB	M-CAN1_H
43	L	V-CAN_H

Connector No.	M103
Connector Name	AV CONTROL UNIT (WITH NAVIGATION SYSTEM WITH BOSE)
Connector Color	WHITE



21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60

Terminal No.	Color of Wire	Signal Name
21	LG	M-CAN2-L
22	LG	M-CAN1_L
23	P	V-CAN_L
24	-	-
25	Y	PKB_SIG
26	V	IGN
27	L	AFFORBABLE_SIG

Connector No.	M112
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Color	GRAY



20	19	18	17	16	15	14	13
----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name
13	R	-
14	W	-
15	L	-
16	B	-
17	BR	-
18	B	-
19	Y	-
20	Y	-

Connector No.	M108
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Color	YELLOW



23	26	34
28	29	30

Terminal No.	Color of Wire	Signal Name
23	R	-
26	B	-
28	Y	-
29	Y	-
30	Y	-
34	G	-

AALIA1857GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ILLUMINATION

< WIRING DIAGRAM >

Connector No.	E6
Connector Name	JOINT CONNECTOR-E01
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	L	-
4	L	-
5	-	-
6	L	-
7	P	-
8	P	-
9	P	-
10	P	-
11	-	-
12	P	-

Connector No.	E11
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
9	B	GND (POWER)
10	-	-
11	-	-
12	-	-
13	-	-
14	R	RR DEF

Connector No.	E12
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
15	-	-
16	-	-
17	-	-
18	B/W	GND (SIGNAL)
19	W	FR FOG/L RH
20	V	FR FOG/L LH
21	-	-
22	-	-

Connector No.	E13
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
23	-	-
24	-	-

Terminal No.	Color of Wire	Signal Name
25	R	AUTO STOP SW
26	P	CAN-CL
27	L	CAN-CH
28	G	DTRL RLY
29	-	-
30	-	-
31	-	-
32	SB	HOOD SW
33	-	-
34	W	HORN RLY CONT

AALIA1858GB

# ILLUMINATION

< WIRING DIAGRAM >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

Connector No.	E14
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

38	36	37	36	35
46	45	44	43	42
				41
				40



Terminal No.	Color of Wire	Signal Name
35	R	VCM VB
36	-	-
37	-	-
38	LG	TAIL 1 (WITHOUT SOLAR CELL)
38	R	TAIL 1 (WITH SOLAR CELL)
39	L	FR WIPER HI
40	-	-
41	SB	VCM RLY CONT
42	BR	VCM BAT
43	O	CLEARANCE/LH
44	B	TAIL 2
45	Y	FR WIPER LO
46	-	-

INL


AALIA1859GB

# ILLUMINATION

< WIRING DIAGRAM >

57	Y	-
58	L	-
60	LG	-
61	GR	-
62	W	-
63	SB	-
64	SHIELD	-
65	W	-
66	G	-
67	V	-
68	R	-
69	B	-
70	BR	-
71	LG	-
72	R	-
73	B	-
74	O	-
76	L	-
77	Y	-
80	P	-
81	SB	-
83	GR	-
84	L	-
85	O	-
86	BR	-
88	B	-
89	W	-
90	SHIELD	-
91	Y	-
92	BR	-
93	O	-
94	R	-
95	V	-
96	P	-
97	G	-
98	W	-
99	O	-
100	SB	-

19	W/L	-
20	BR	-
21	R	-
22	B	-
23	LG	-
24	B	-
25	W	-
26	W	-
27	B	-
28	O/L	-
29	W	-
31	R	-
32	W	-
33	G	-
34	BR	-
35	V	-
36	O	-
37	L	-
38	SB	-
39	P	-
40	V	-
41	O	-
42	Y	-
43	BR	-
44	W	-
45	G	-
46	P	-
47	LG	-
47	R	-
48	B	-
49	L	-
50	G	-
51	W	-
52	O	-
54	B	-
55	R	-
56	Y	-

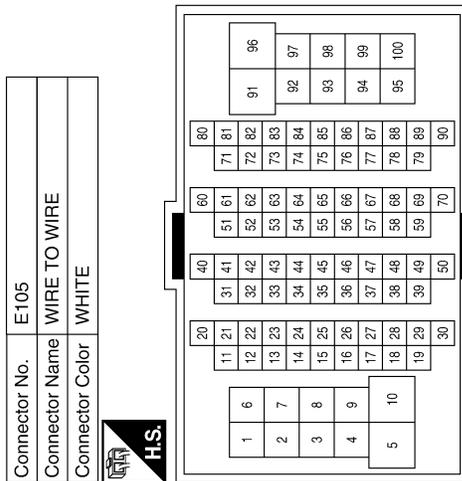

Terminal No.	Color of Wire	Signal Name
1	R	-
2	L	-
3	BW	-(WITHOUT FRONT FOG LAMPS)
3	R	-(WITH LED HEADLAMPS)
4	LG	-(WITH LED HEADLAMPS)
4	B/W	-(WITHOUT FRONT FOG LAMPS)
6	B/R	-
7	W	-
9	G	-
10	R	-
11	L	-
12	Y	-
13	W	-
14	R	-
15	G	-
16	G	-
17	R	-
18	O	-

AALIA1860GB

# ILLUMINATION

< WIRING DIAGRAM >

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					



Terminal No.	Color of Wire	Signal Name
1	G	-
2	-	-
3	GR	-
4	L	-
5	G	-
6	R	-
7	BR	-
8	SB	-
9	GR	-
10	W	-
11	LG	-
12	P	-
13	V	-
14	Y	-
15	W	-
16	L	-

Connector No.	E107
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24



Terminal No.	Color of Wire	Signal Name
1	W	-
2	Y	-
3	SB	-
4	R	-
5	-	-
6	GR	-
7	-	-
8	P	-
9	BR	-
10	W	-
11	R	-
12	B	-
13	G	-
14	B	-
15	LG	-
16	BR	-
17	G	-
18	B	-
19	Y	-
20	R	-
21	O	-
22	W	-
23	SHIELD	-
24	-	-

AALIA1861GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ILLUMINATION

< WIRING DIAGRAM >

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	-	-

Terminal No.	Color of Wire	Signal Name
5	-	-
6	-	-
7	B	-
8	SHIELD	-
9	B	-
10	SB	-
11	P	-
12	BR	-
13	GR	-
14	P	-
15	L	-
16	G	-
17	-	-
18	-	-

Terminal No.	Color of Wire	Signal Name
19	-	-
20	-	-
21	-	-
22	-	-
23	-	-
24	R	-
25	W	-
26	LG	-
27	Y	-
28	-	-
29	R	-
30	GR	-
31	L	-
32	P	-

Connector No.	B7
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	P	-
3	Y	-
4	-	-
5	-	-
6	SB	-
7	-	-

Terminal No.	Color of Wire	Signal Name
8	P	-
9	V	-
10	Y	-
11	L	-
12	G	-
13	G	-
14	B	-
15	LG	-
16	BR	-
17	G	-
18	B	-
19	Y	-
20	R	-
21	Y	-

Terminal No.	Color of Wire	Signal Name
22	W	-
23	SHIELD	-
24	-	-

AALIA1862GB

# ILLUMINATION

< WIRING DIAGRAM >

Connector No.	B33
Connector Name	FRONT HEATED SEAT SWITCH RH
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	G	-
2	BR	-
3	LG	-
4	B	-
5	Y	-
6	GR	-

Connector No.	B25
Connector Name	FRONT HEATED SEAT SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	Y	-
3	B	-
4	G	-
5	L	-
6	R	-

Connector No.	B23
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-
3	R	-
4	B	-
5	G	-
6	SB	-
7	GR	-
8	BR	-

Connector No.	B302
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	P	-
2	V	-
3	B	-
4	O	-
5	BR	-
6	Y	-

Connector No.	B301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R	-
2	B	-
3	Y	-
4	V	-
5	P	-
6	BR	-
7	O	-
8	W	-

AALIA1863GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ILLUMINATION


< WIRING DIAGRAM >

Connector No.	B303
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	W	-
3	B	-
4	G	-
5	R	-
6	L	-

Connector No.	B306
Connector Name	REAR HEATED SEAT SWITCH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	W	-
2	Y	-
3	B	-
4	G	-
5	R	-
6	L	-


Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	L	-
3	GR	-
4	-	-
5	B	-

Terminal No.	Color of Wire	Signal Name
6	R	-
7	Y	-
8	-	-
9	V	-
10	G	-
11	B/R	-
12	-	-
13	-	-
14	-	-
15	-	-
16	-	-

Connector No.	R4
Connector Name	MAP LAMP
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	-	-
3	R	-
4	-	-
5	-	-
6	R	-
7	G	-
8	V	-

AALIA1864GB

# ILLUMINATION


< WIRING DIAGRAM >

Connector No.	D5
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	L	-
8	GR	-
9	V	-
10	BG	-
11	-	-
12	BR	-
13	LG	-
14	Y	-
15	L	-
16	W	-

Connector No.	D22
Connector Name	WIRE TO WIRE
Connector Color	WHITE

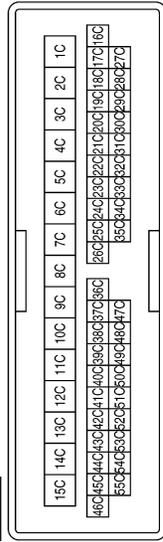

Terminal No.	Color of Wire	Signal Name
1C	R	- (WITH BOSE)
1C	L	- (WITHOUT BOSE)
2C	G	- (WITH BOSE)
2C	V	- (WITHOUT BOSE)
3C	SHIELD	-
4C	SB	-
5C	V	-
6C	-	-
7C	P	-
8C	BR	-
9C	LG	-
10C	Y	-
11C	W	-
12C	SB	-
13C	B	-
14C	V	-
15C	R	-
16C	-	-
17C	-	-
18C	-	-
19C	-	-
20C	-	-
21C	-	-

Terminal No.	Color of Wire	Signal Name
22C	-	-
23C	-	-
24C	G	-
25C	R	-
26C	SHIELD	-
27C	-	-
28C	-	-
29C	-	-
30C	-	-
31C	-	-
32C	-	-
33C	-	-
34C	-	-
35C	-	-
36C	LG	-
37C	R	-
38C	L	-
39C	G	-
40C	P	-
41C	-	-
42C	P	-
43C	GR	-
44C	L	-
45C	BR	-
46C	L	-
47C	Y	-
48C	BR	-
49C	B	-
50C	W	-
51C	R	-
52C	SHIELD	-
53C	-	-
54C	V	-
55C	LG	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000008743868

OVERALL SEQUENCE

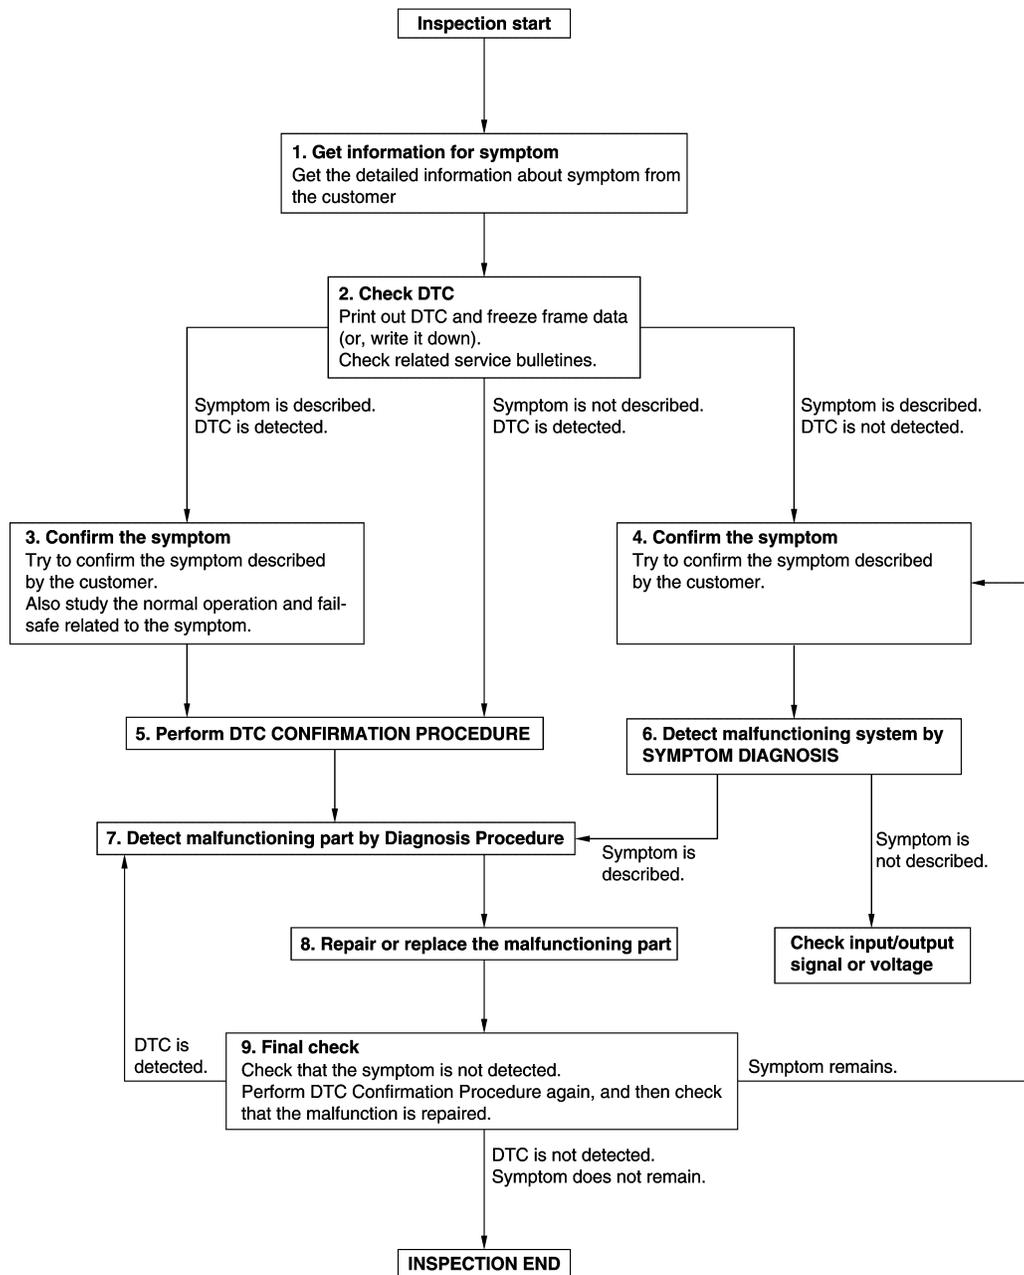

JMKIA8652GB

DETAILED FLOW

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

---

### 1. GET INFORMATION FOR SYMPTOM

---

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

### 2. CHECK DTC

---

1. Check DTC.
2. Perform the following procedure if DTC is detected.
  - Record DTC and freeze frame data (Print them out using CONSULT.)
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

#### Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

### 3. CONFIRM THE SYMPTOM

---

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

### 4. CONFIRM THE SYMPTOM

---

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

### 5. PERFORM DTC CONFIRMATION PROCEDURE

---

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to [BCS-47. "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

#### **NOTE:**

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

#### Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-53. "Intermittent Incident"](#).

### 6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

---

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

#### Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

### 7. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

---

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

## DIAGNOSIS AND REPAIR WORKFLOW

### < BASIC INSPECTION >

---

Inspect according to Diagnostic Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-53. "Intermittent Incident"](#).

### 8. REPAIR OR REPLACE THE MALFUNCTIONING PART

---

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

### 9. FINAL CHECK

---

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

# INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

#### Description

INFOID:000000008743869

Provides the interior room lamp power supply. Also cuts the power supply when the interior room lamp battery saver is activating.

#### Component Function Check

INFOID:000000008743870

#### 1. CHECK INTERIOR ROOM LAMP POWER SUPPLY FUNCTION

##### CONSULT ACTIVE TEST

1. Turn power switch ON.
2. Turn each interior room lamp ON.
  - Map lamp
  - Room lamp
  - Luggage room lamp
3. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
4. With operating the test items, check that each interior room lamp turns ON/OFF.

**Off** : Interior room lamp OFF

**On** : Interior room lamp ON

Does each interior room lamp turn ON/OFF?

- YES >> Interior room lamp power supply circuit is normal.  
NO >> Refer to [INL-65, "Diagnosis Procedure"](#).

#### Diagnosis Procedure

INFOID:000000008743871

#### 1. CHECK INTERIOR ROOM LAMP POWER SUPPLY OUTPUT

##### CONSULT ACTIVE TEST

1. Turn power switch OFF.
2. Disconnect the following connectors.
  - Map lamp
  - Room lamp
  - Luggage room lamp
3. Turn power switch ON.
4. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
5. With operating the test item, check voltage between BCM harness connector and ground.

BCM		(-)	Test item	Voltage (Approx.)	
(+)					
Connector	Terminal				
M23	56	Ground	BATTERY SAVER	Off	0 V
				On	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 3.

#### 2. CHECK INTERIOR ROOM LAMP POWER SUPPLY OPEN CIRCUIT

1. Turn power switch OFF.
2. Disconnect the BCM connector.
3. Check continuity between BCM harness connector and each interior room lamp harness connector.

# INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

BCM		Each interior room lamp			Continuity
Connector	Terminal	Connector		Terminal	
M23	56	Map lamp	R4	6	Yes
		Room lamp	R5	2	
		Luggage room lamp	B41	1	

Is the inspection result normal?

YES >> Check for internal short circuit of each interior room lamp.

NO >> Repair or replace harnesses.

### 3. CHECK INTERIOR ROOM LAMP POWER SUPPLY SHORT CIRCUIT

1. Turn power switch OFF.
2. Disconnect the BCM connector.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M23	56		No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-86, "Removal and Installation"](#).

NO >> Repair or replace harnesses.

# INTERIOR ROOM LAMP CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## INTERIOR ROOM LAMP CONTROL CIRCUIT

### Description

INFOID:000000008743872

Controls each interior room lamp (ground side) by PWM signal.

#### NOTE:

PWM signal control period is approximately 250 Hz (in the gradual brightening/dimming).

### Component Function Check

INFOID:000000008743873

#### CAUTION:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Map lamp bulb
- Room lamp bulb

### 1. CHECK INTERIOR ROOM LAMP CONTROL FUNCTION

#### CONSULT ACTIVE TEST

1. Switch the map lamp switch and room lamp switch to DOOR.
2. Turn power switch ON.
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. With operating the test items, check that each interior room lamp turns ON/OFF (gradual brightening/dimming).

**On** : Interior room lamp gradual brightening

**Off** : Interior room lamp gradual dimming

Does the interior room lamp turns ON/OFF (gradual brightening/dimming)?

YES >> Interior room lamp control circuit is normal.

NO >> Refer to [INL-67. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000008743874

### 1. CHECK INTERIOR ROOM LAMP CONTROL OUTPUT

#### CONSULT ACTIVE TEST

1. Turn power switch OFF.
2. Remove all the bulbs of map lamp and room lamp.
3. Turn power switch ON.
4. Select "INT LAMP" of BCM (INT LAMP) active test item.
5. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item		Continuity
Connector	Terminal		INT LAMP	On	
M23	63			On	Yes
				Off	No

Is the inspection result normal?

YES >> GO TO 2.

Fixed ON>>GO TO 3.

Fixed OFF>>Replace BCM. Refer to [BCS-86. "Removal and Installation"](#).

### 2. CHECK INTERIOR ROOM LAMP CONTROL OPEN CIRCUIT

1. Turn power switch OFF.
2. Disconnect BCM connector, map lamp and room lamp connectors.
3. Check continuity between BCM harness connector and map lamp harness connector.

BCM		Map lamp		Continuity
Connector	Terminal	Connector	Terminal	
M23	63	R4	5	Yes

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

## INTERIOR ROOM LAMP CONTROL CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between BCM harness connector and room lamp harness connector.

BCM		Room lamp		Continuity
Connector	Terminal	Connector	Terminal	
M23	63	R5	1	No

#### Is the inspection result normal?

YES >> Replace map lamp or room lamp.

NO >> Repair or replace harnesses.

### 3. CHECK INTERIOR ROOM LAMP CONTROL SHORT CIRCUIT

1. Turn power switch OFF.
2. Disconnect BCM connector, map lamp connector and room lamp connector.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M23	63		No

#### Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-86, "Removal and Installation"](#).

NO >> Repair or replace harnesses.

# LUGGAGE ROOM LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## LUGGAGE ROOM LAMP CIRCUIT

### Description

INFOID:000000008743875

Controls the luggage room lamp (ground side) to turn the luggage room lamp ON and OFF.

### Diagnosis Procedure

INFOID:000000008743876

#### CAUTION:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Luggage room lamp bulb

#### 1. CHECK LUGGAGE ROOM LAMP OUTPUT

1. Turn power switch OFF.
2. Remove the luggage room lamp bulb.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Condition		Continuity
Connector	Terminal				
M23	49		Back door	Open	Yes
				Closed	No

Is the inspection result normal?

YES >> GO TO 2.

Fixed ON>>GO TO 3.

Fixed OFF>>Replace BCM. Refer to [BCS-86, "Removal and Installation"](#).

#### 2. CHECK LUGGAGE ROOM LAMP OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and luggage room lamp harness connector.

BCM		Luggage room lamp		Continuity
Connector	Terminal	Connector	Terminal	
M23	49	B41	2	Yes

Is the inspection result normal?

YES >> Replace luggage room lamp.

NO >> Repair or replace harnesses.

#### 3. CHECK LUGGAGE ROOM LAMP SHORT CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M23	49		No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-86, "Removal and Installation"](#).

NO >> Repair or replace harnesses.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# POWER SWITCH ILLUMINATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## POWER SWITCH ILLUMINATION CIRCUIT

### Description

INFOID:000000008743877

Provides the power supply and the ground to control the power switch illumination.

### Component Function Check

INFOID:000000008743878

### 1. CHECK POWER SWITCH ILLUMINATION OPERATION

#### CONSULT ACTIVE TEST

1. Turn the power switch ON.
2. Select "ENGINE SW ILLUMI" of BCM (INTELLIGENT KEY) active test item.
3. With operating the test items, check that the power switch illumination turns ON/OFF.

**On** : Power switch illumination ON

**Off** : Power switch illumination OFF

#### Does the power switch illumination turn ON/OFF?

YES >> Power switch illumination circuit is normal.

NO >> Refer to [INL-70, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000008743879

### 1. CHECK POWER SWITCH ILLUMINATION POWER SUPPLY OUTPUT

1. Turn power switch OFF.
2. Disconnect power switch connector.
3. Check voltage between power switch harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)	
Connector	Terminal				
M33	5	Ground	Power switch illumination	ON	Battery voltage
			OFF	0 V	

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 2.

### 2. CHECK POWER SWITCH ILLUMINATION POWER SUPPLY OPEN CIRCUIT

1. Turn the power switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and the power switch harness connector.

BCM		Power switch		Continuity
Connector	Terminal	Connector	Terminal	
M25	60	M33	5	Yes

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harnesses.

### 3. CHECK POWER SWITCH ILLUMINATION POWER SUPPLY SHORT CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M25	60		No

# POWER SWITCH ILLUMINATION CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

### Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-86, "Removal and Installation"](#).

NO >> Repair or replace harnesses.

### 4. CHECK POWER SWITCH ILLUMINATION GROUND CIRCUIT

1. Turn the power switch OFF.
2. Check continuity between power switch harness connector and ground.

Power switch		Ground	Continuity
Connector	Terminal		Yes
M33	6		

### Is the inspection result normal?

YES >> Replace power switch.

NO >> Repair or replace harnesses.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

INL

# INTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### INTERIOR LIGHTING SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000008743880

**CAUTION:**

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom	Possible cause	Inspection item
All the following lamps do not turn ON. <ul style="list-style-type: none"> <li>Map lamp</li> <li>Room lamp</li> <li>Luggage room lamp</li> </ul>	<ul style="list-style-type: none"> <li>Harness between BCM and each interior room lamp</li> <li>BCM</li> </ul>	Interior room lamp power supply circuit Refer to <a href="#">INL-65</a> .
<ul style="list-style-type: none"> <li>Interior room lamp does not turn ON even though the door is open. (It turns ON when turning the interior room lamp ON.)</li> <li>Interior room lamp does not turn OFF even though the door is closed.</li> </ul>	<ul style="list-style-type: none"> <li>Harness between BCM and each door switch</li> <li>Harness between BCM and each interior room lamp</li> <li>BCM</li> </ul>	Door switch circuit Refer to <a href="#">DLK-117</a> .  Interior room lamp control circuit Refer to <a href="#">INL-67</a> .
Interior room lamp timer does not activate. (It turns ON/ OFF when the door opens/closes.)	—	Check the interior room lamp setting. Refer to <a href="#">INL-9</a> , " <a href="#">INTERIOR ROOM LAMP BATTERY SAVER SYSTEM : System Description</a> ".
<ul style="list-style-type: none"> <li>Luggage room lamp does not turn ON even though the back door is open.</li> <li>Luggage room lamp does not turn OFF even though the back door is closed.</li> </ul>	<ul style="list-style-type: none"> <li>Harness between BCM and back door switch</li> <li>Harness between BCM and luggage room lamp</li> <li>BCM</li> </ul>	Back door switch circuit Refer to <a href="#">DLK-117</a> .  Luggage room lamp circuit Refer to <a href="#">INL-69</a> .
Power switch illumination does not illuminate.	<ul style="list-style-type: none"> <li>Harness between BCM and power switch</li> <li>BCM</li> </ul>	Power switch illumination circuit Refer to <a href="#">INL-70</a> .
Interior room lamp battery saver does not activate.	BCM	Replace BCM. Refer to <a href="#">BCS-86</a> .

# MAP LAMP

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### MAP LAMP

#### Removal and Installation

INFOID:000000008743882

#### **CAUTION:**

- Disconnect the 12V battery negative terminal or remove power circuit fuse while performing the operation to prevent electric leakage. Refer to [INL-3, "Precaution for Removing 12V Battery"](#).
- Do not attempt to separate the map lamp assembly from the headlining prior to removing headlining, or damage to the components may occur.

#### REMOVAL

1. Remove the headlining. Refer to [INT-37, "Removal and Installation"](#).
2. Remove the two bracket screws, then remove the map lamp assembly bracket from the map lamp assembly and position aside.
3. Disconnect the harness connectors from the map lamp assembly.
4. Release the back plate pawls using a suitable tool and remove the map lamp assembly.

#### **CAUTION:**

**When removing, support the map lamp assembly by hand so it does not fall out and get damaged during removal.**

5. Remove the map lamp back plate from the headlining.

#### INSTALLATION

Installation is in the reverse order of removal.

#### Replacement

INFOID:000000008743883

#### MAP LAMP BULB

The map lamp LED bulbs are replaced as part of the map lamp.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL


# ROOM LAMP

< REMOVAL AND INSTALLATION >

## ROOM LAMP

Exploded View

INFOID:000000008743886

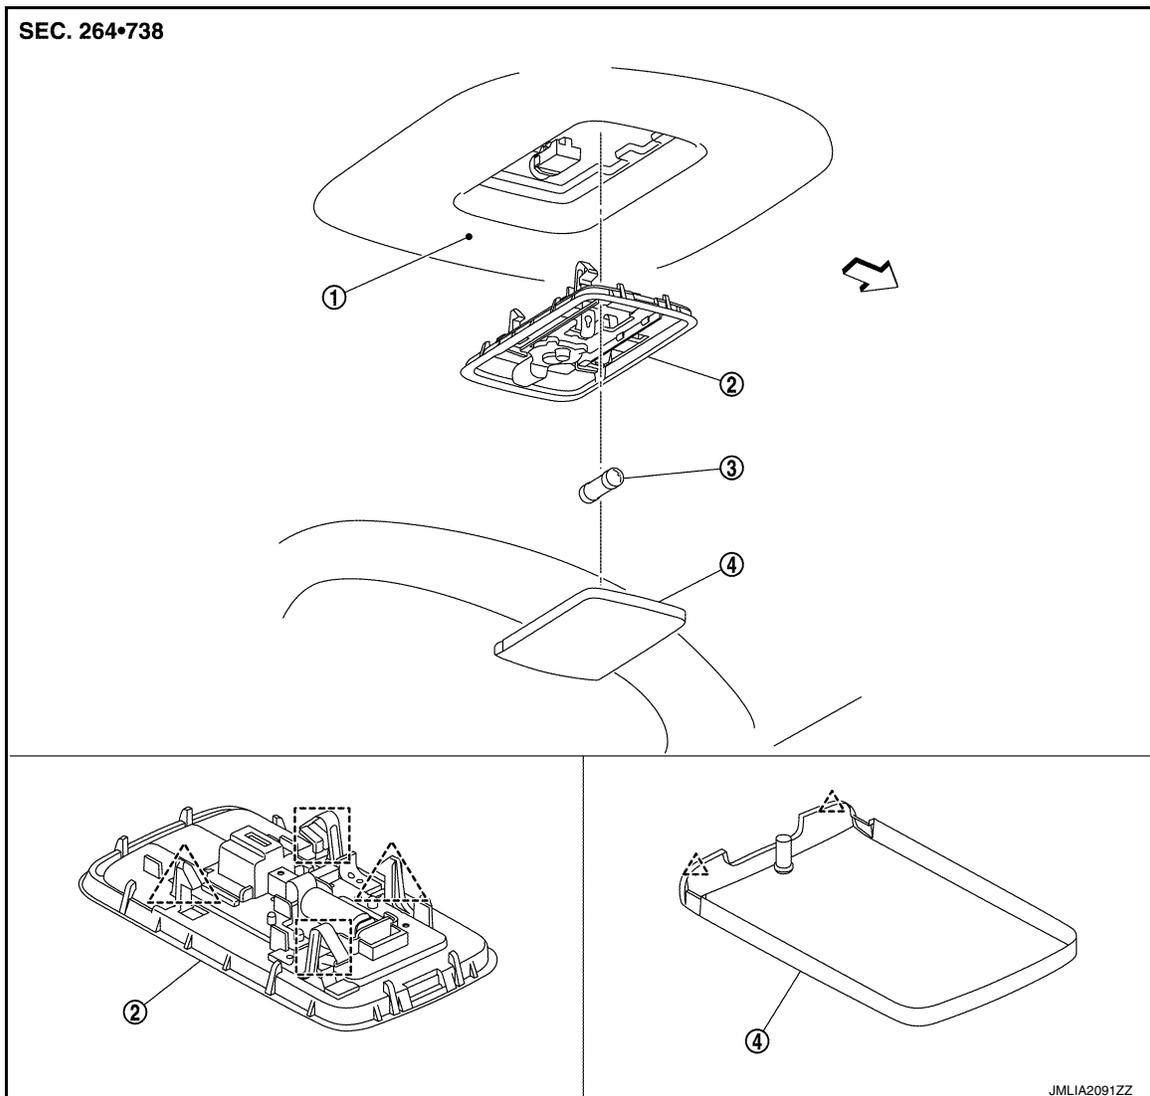

1. Headlining

2. Room lamp assembly

3. Bulb

4. Lens

 : Pawl

 : Metal clip

 : Vehicle front

## Removal and Installation

INFOID:000000008743887

### CAUTION:


- Disconnect the 12V battery negative terminal or remove power circuit fuse while performing the operation to prevent electric leakage. Refer to [INL-3, "Precaution for Removing 12V Battery"](#).
- Never touch the glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to the bulb.
- Never touch the glass surface of the bulb with bare hands because the surface is very hot just after the lamp is turned OFF to prevent a burns.

### REMOVAL

# ROOM LAMP


## < REMOVAL AND INSTALLATION >

1. Apply protective tape (A) on the parts to protect it from damage.

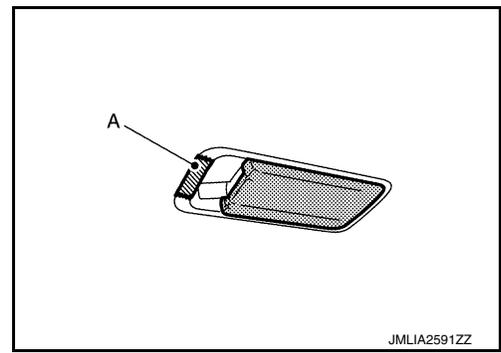

2. Disengage lens fixing pawls with a remover tool (A), and then remove lens.

 : Pawl

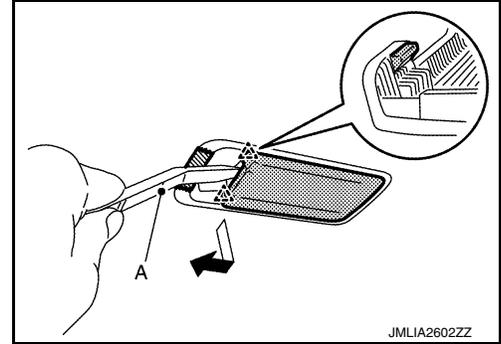


3. Using a remover tool (A), press the metal clip (B), and then disengage.
4. Pull downward and then disengage the room lamp mounting pawls.

### CAUTION:

Be careful not to disengage the pawls forcibly. Doing so may cause damage to the headliner by pawls that are fully engaged to the headliner.

 : Pawl  
 : Metal clip

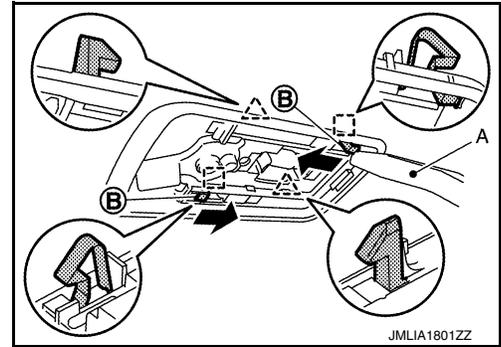

5. Disconnect the harness connector, and then remove room lamp assembly.

## INSTALLATION

Install in the reverse order of removal.

## Replacement

INFOID:000000008743888

### CAUTION:

- Disconnect the 12V battery negative terminal or remove power circuit fuse while performing the operation to prevent electric leakage. Refer to [INL-3, "Precaution for Removing 12V Battery"](#).
- Never touch the glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to the bulb.
- Never touch the glass surface of the bulb with bare hands because the surface is very hot just after the lamp is turned OFF to prevent a burns.
- Leaving the bulb removed from housing for a long period of time can deteriorate performance of the lens and reflector (causing dirty or clouding). Always prepare a new bulb and have it on hand when replacing the bulb.

## ROOM LAMP BULB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ROOM LAMP


## < REMOVAL AND INSTALLATION >

1. Apply protective tape (A) on the parts to protect it from damage.

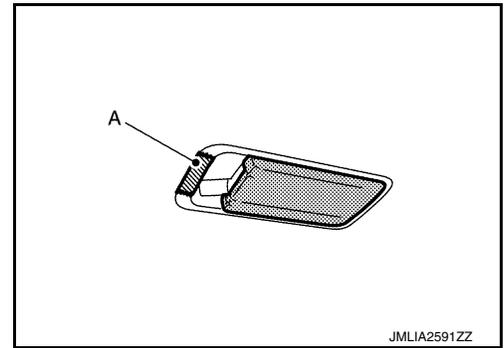

2. Disengage lens fixing pawls with a remover tool (A), and then remove lens.

 : Pawl

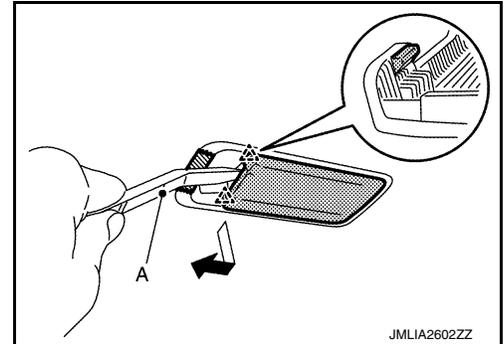

3. Remove the bulb.




# LUGGAGE ROOM LAMP

## < REMOVAL AND INSTALLATION >

2. Disengage luggage room lamp fixing pawl with a remover tool (A).

 : Pawl

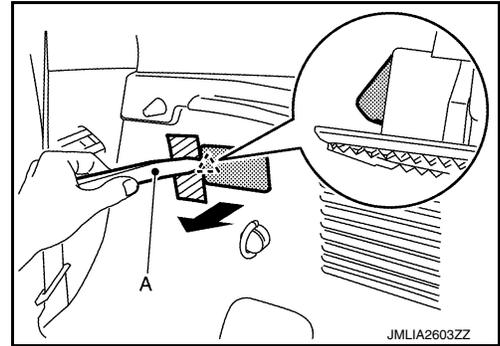

3. Disconnect harness connector, and then remove luggage room lamp.

## INSTALLATION

Install in the reverse order of removal.

## Replacement

INFOID:000000008743891


### CAUTION:

- Disconnect the 12V battery negative terminal or remove power circuit fuse while performing the operation to prevent electric leakage. Refer to [INL-3, "Precaution for Removing 12V Battery"](#).
- Never touch the glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to the bulb.
- Never touch the glass surface of the bulb with bare hands because the surface is very hot just after the lamp is turned OFF to prevent a burns.
- Leaving the bulb removed from housing for a long period of time can deteriorate performance of the lens and reflector (causing dirty or clouding). Always prepare a new bulb and have it on hand when replacing the bulb.

## LUGGAGE ROOM LAMP BULB

1. Remove luggage room lamp assembly. Refer to [INL-77, "Removal and Installation"](#).
2. Disengage shade fixing pawls using a remover tool (A), and then remove shade.

 : Pawl

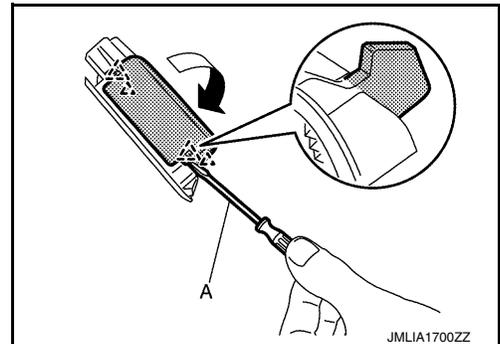

3. Remove the bulb.


# CHARGE PORT LIGHT

< REMOVAL AND INSTALLATION >

## CHARGE PORT LIGHT

Exploded View

INFOID:000000009355117

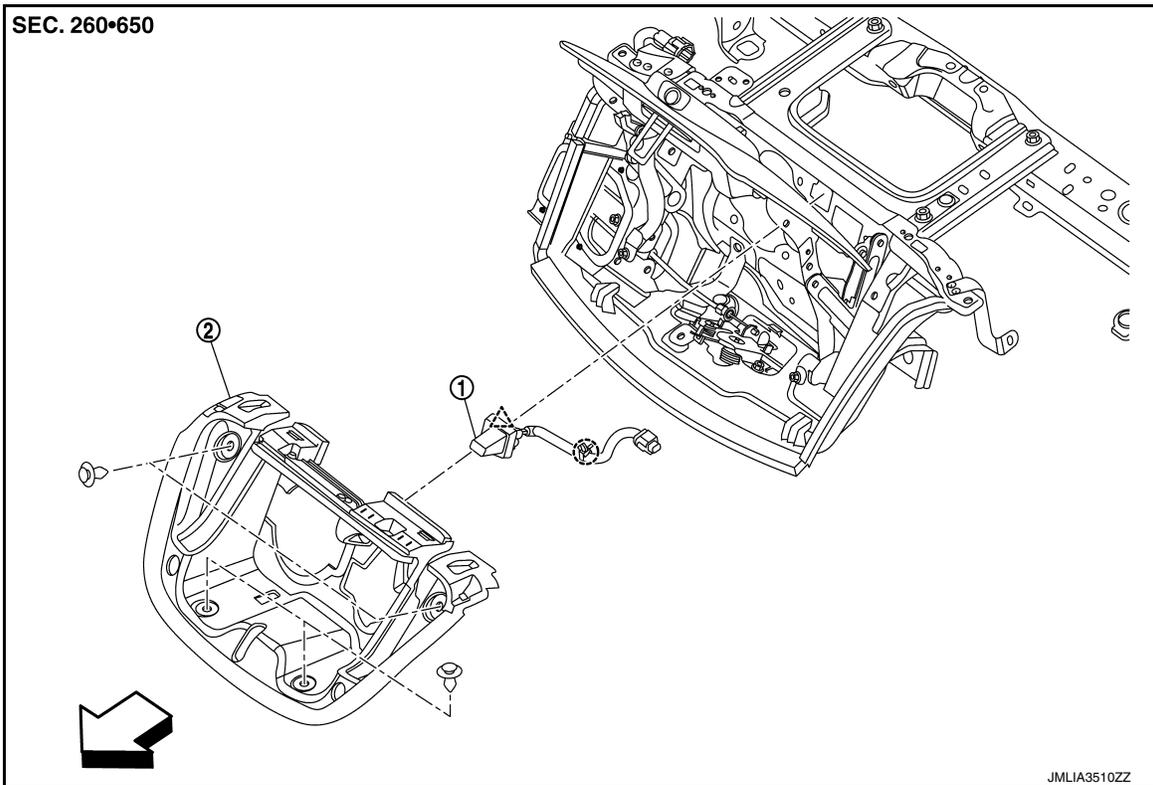

1. Charge port light

2. Charge port cover

○● Clip

△ Pawl

← Front

### Removal and Installation


INFOID:000000009355116

#### CAUTION:

Disconnect the battery negative terminal or remove power circuit fuse when performing the operation for preventing electric leakage. Refer to [INL-3, "Precaution for Removing 12V Battery"](#).

#### REMOVAL


1. Remove radiator upper grille. Refer to [DLK-180, "RADIATOR UPPER GRILLE : Removal and Installation"](#).
2. Remove charge port cover clips (A).

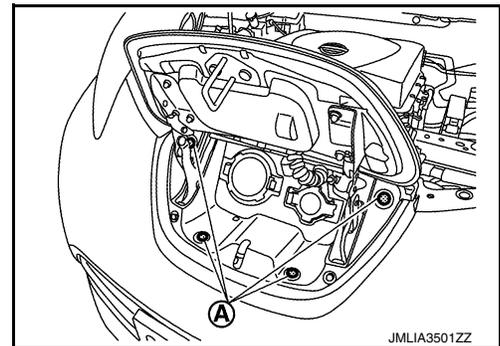


# CHARGE PORT LIGHT

## < REMOVAL AND INSTALLATION >


3. Disconnect the harness connector (A) and harness fixing clip (B).

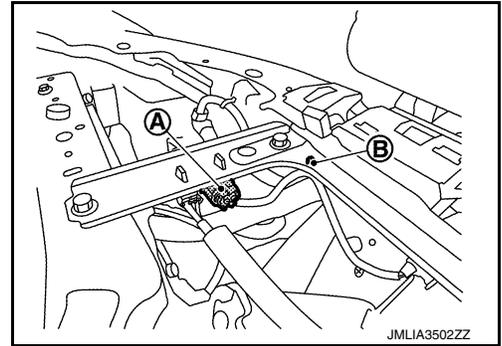

4. Disengage charge port light assembly fixing portion (A), and then push charge port light assembly, as shown (←).

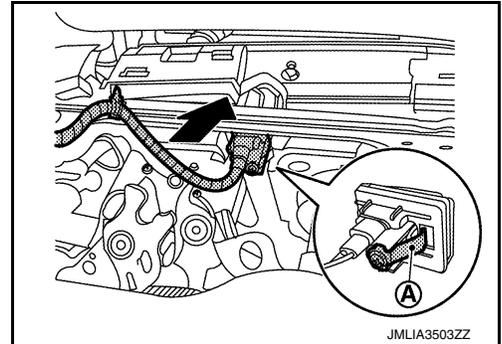

5. Pull charge port cover (1) toward vehicle front and remove charge port light assembly (2) from between charge port cover and charge port bracket.

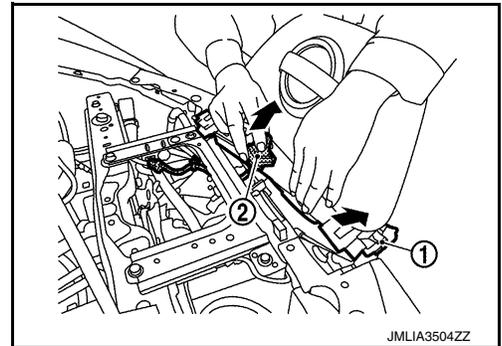

## INSTALLATION

Installation is in the reverse order of removal.

## Replacement

INFOID:000000009355118

### **CAUTION:**

Replacement of a single part is not possible due to the adoption of LED. For replacement, replace charge port light assembly as a set.

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

### Bulb Specifications

INFOID:000000008743892

Item	Type	Wattage (W)
Map lamp	LED	—
Glove box lamp	—	1.4
Room lamp	—	8
Luggage room lamp	—	5

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P