

# QUICK REFERENCE CHART : M30 1990

## ENGINE TUNE-UP DATA

Engine model		VG30E	
Firing order		1-2-3-4-5-6	
Idle speed	rpm	A/T (in "N" position)	800±50
Ignition timing (B.T.D.C. at idle speed)		15°±2°	
CO% at idle		Idle mixture screw is preset and sealed at factory.	
Drive belt deflection (Cold)	mm (in)	Used belt deflection	
		Limit	Deflection after adjustment
Alternator		12 (0.47)	7.5 - 8.5 (0.295 - 0.335)
Air conditioner compressor		14 (0.55)	9 - 10 (0.35 - 0.39)
Power steering oil pump		20 (0.79)	14 - 16 (0.55 - 0.63)
Applied pressed force	N (kg, lb)	98 (10, 22)	
Radiator cap relief pressure	kPa (kg/cm <sup>2</sup> , psi)	78 - 98 (0.8 - 1.0, 11 - 14)	
Cooling system leakage testing pressure		98 (1.0, 14)	
Compression pressure	Standard	1,196 (12.2, 173)/300	
	Minimum	883 (9.0, 128)/300	
Spark plug	Type (Standard)	PFR6B-11	
	Gap mm (in)	1.0 - 1.1 (0.039 - 0.043)	

## REAR WHEEL ALIGNMENT (Unladen)

Camber	degree	-1°5' to 20'
	mm (in)	0.2 - 4.2 (0.008 - 0.165)
Total toe-out	degree	1' - 22'

## BRAKE

Unit: mm (in)

Front brake	
Pad wear limit	2.0 (0.079)
Rotor repair limit	20.0 (0.787)
Rear brake	
Pad wear limit	2.0 (0.079)
Rotor repair limit	9.0 (0.354)
Pedal free height	199 - 209 (7.83 - 8.23)
Pedal depressed height*1	110 (4.33) or more
Parking brake	
Number of notches*2	8 - 9

\*1 Under force of 490 N (50 kg, 110 lb) with engine running

\*2 At pulling force: 196 N (20 kg, 44 lb)

## FRONT WHEEL ALIGNMENT (Unladen\*)

Camber	degree	-35' to 55'
Caster	degree	3°55' - 5°25'
Kingpin inclination	degree	11°55' - 13°25'
Total toe-in	mm (in)	-1 to 1 (-0.04 to 0.04)
	degree	-5' to 5'
Wheel turning angle (Full turn)	degree	
	Inside	40°30' - 44°30'
Outside		33°30'

\* Fuel, radiator coolant and engine oil full.

Spare tire, jack, hand tools and mats in designated positions.

## REFILL CAPACITIES

Unit	Liter	US measure
Fuel tank	65	17-1/8 gal
Coolant (With reservoir tank)	9.15	9-5/8 qt
Engine	With oil filter	4.4
	Without oil filter	4.0
Transmission	A/T	8.3
Final drive		1.3
Power steering system		0.9
Air conditioning system	Compressor oil	0.20
	Refrigerant	0.9 - 1.0 kg





I N F I N I T I

M30

MODEL F31 SERIES

## QUICK REFERENCE INDEX

GENERAL INFORMATION _____	GI
MAINTENANCE _____	MA
ENGINE MECHANICAL _____	EM
ENGINE LUBRICATION & COOLING SYSTEMS —	LC
ENGINE FUEL & EMISSION CONTROL SYSTEM —	EF & EC
ENGINE CONTROL, FUEL & EXHAUST SYSTEMS -	FE
AUTOMATIC TRANSMISSION _____	AT
PROPELLER SHAFT & DIFFERENTIAL CARRIER —	PD
FRONT AXLE & FRONT SUSPENSION _____	FA
REAR AXLE & REAR SUSPENSION _____	RA
BRAKE SYSTEM _____	BR
STEERING SYSTEM _____	ST
BODY _____	BF
HEATER & AIR CONDITIONER _____	HA
ELECTRICAL SYSTEM _____	EL



I N F I N I T I

© 1989 NISSAN MOTOR CO., LTD. Printed in U.S.A.

Not to be reproduced in whole or in part without the prior written permission of Nissan Motor Company Ltd., Tokyo, Japan.

# FOREWORD

---

This manual contains maintenance and repair procedures for the 1990 INFINITI M30.

In order to assure your safety and the efficient functioning of the vehicle, this manual should be read thoroughly. It is especially important that the PRECAUTIONS in the GI section be completely understood before starting any repair task.

All information in this manual is based on the latest product information at the time of publication. The right is reserved to make changes in specifications and methods at any time without notice.

---

## IMPORTANT SAFETY NOTICE

The proper performance of service is essential for both the safety of the technician and the efficient functioning of the vehicle.

The service methods in this Service Manual are described in such a manner that the service may be performed safely and accurately.

Service varies with the procedures used, the skills of the technician and the tools and parts available. Accordingly, anyone using service procedures, tools or parts which are not specifically recommended by INFINITI must first completely satisfy himself that neither his safety nor the vehicle's safety will be jeopardized by the service method selected.



I N F I N I T I <sup>®</sup>



NISSAN MOTOR CO., LTD.

Overseas Service Department

Tokyo, Japan

# GENERAL INFORMATION

GI

## SECTION **GI**

### CONTENTS

PRECAUTIONS .....	GI- 2
HOW TO USE THIS MANUAL .....	GI- 5
HOW TO READ WIRING DIAGRAMS .....	GI- 7
HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES .....	GI-11
CONSULT CHECKING SYSTEM .....	GI-15
IDENTIFICATION INFORMATION .....	GI-17
LIFTING POINTS AND TOW TRUCK TOWING .....	GI-21
TIGHTENING TORQUE OF STANDARD BOLTS .....	GI-24

## PRECAUTIONS

Observe the following precautions to ensure safe and proper servicing. These precautions are not described in each individual section.




### Precautions for Supplemental Restraint System “AIR BAG”

This model has a Supplemental Restraint System “Air Bag”, to help reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag (located in the center of the steering wheel), five sensors, a control unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the BF section of this Service Manual.


#### WARNING:

- To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation. Do not use electrical test equipment on these circuits.

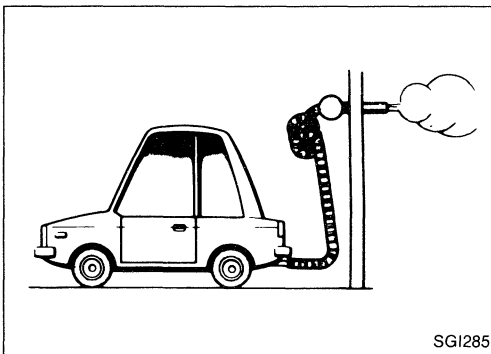



### General Precautions

1. Do not operate the engine for an extended period of time without proper exhaust ventilation. Keep the work area well ventilated and free of any inflammable materials. Special care should be taken when handling any inflammable or poisonous materials, such as gasoline, refrigerant gas, etc. When working in a pit or other enclosed area, be sure to properly ventilate the area before working with hazardous materials. Do not smoke while working on the vehicle.
2. Before jacking up the vehicle, apply wheel chocks or other tire blocks to the wheels to prevent the vehicle from moving. After jacking up the vehicle, support the vehicle weight with safety stands at the points designated for proper lifting and towing before working on the vehicle. These operations should be done on a level surface.
3. When removing a heavy component such as the engine or transaxle/transmission, be careful not to lose your balance and drop them. Also, do not allow them to strike adjacent parts, especially the brake tubes and master cylinder.

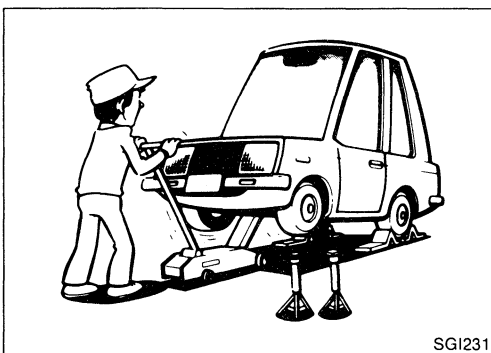


## PRECAUTIONS

### General Precautions (Cont'd)

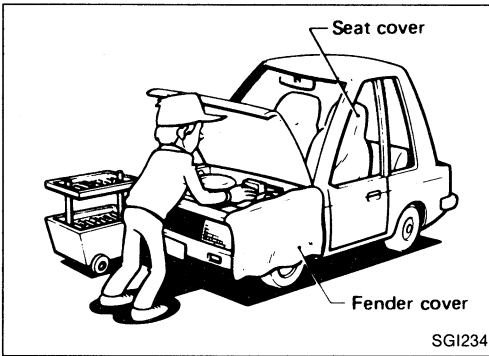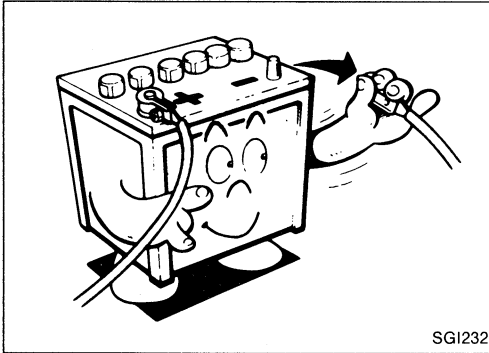


4. Before starting repairs which do not require battery power, always turn off the ignition switch, then disconnect the ground cable from the battery to prevent accidental short circuit.
5. To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe and muffler. Do not remove the radiator cap when the engine is hot.
6. Before servicing the vehicle, protect fenders, upholstery and carpeting with appropriate covers. Take caution that keys, buckles or buttons on your person do not scratch the paint.
7. Clean all disassembled parts in the designated liquid or solvent prior to inspection or assembly.
8. Replace oil seals, gaskets, packings, O-rings, locking washers, cotter pins, self-locking nuts, etc. with new ones.
9. Replace inner and outer races of tapered roller bearings and needle bearings as a set.
10. Arrange the disassembled parts in accordance with their assembled locations and sequence.
11. Do not touch the terminals of electrical components which use microcomputers (such as electronic control units). Static electricity may damage internal electronic components.
12. After disconnecting vacuum or air hoses, attach a tag to indicate the proper connection.
13. Use only the lubricants specified in MA section.
14. Use approved bonding agent, sealants or their equivalents when required.
15. Use tools and recommended special tools where specified for safe and efficient service repairs.
16. When repairing the fuel, oil, water, vacuum or exhaust systems, check all affected lines for leaks.
17. Dispose of drained oil or the solvent used for cleaning parts in an appropriate manner.

## PRECAUTIONS

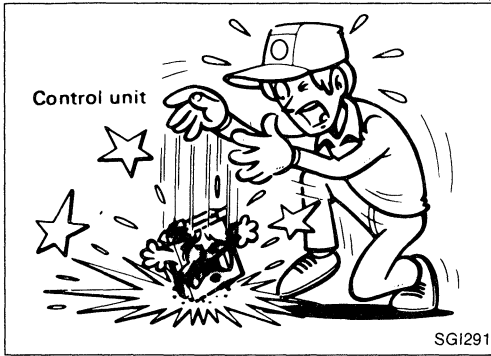

### Precautions for E.F.I. or E.C.C.S. Engine

1. Before connecting or disconnecting E.F.I. or E.C.C.S. harness connector to or from any E.F.I. or E.C.C.S. control unit, be sure to turn the ignition switch to the "OFF" position and disconnect the negative battery terminal. Otherwise, there may be damage to control unit.
2. Before disconnecting pressurized fuel line from fuel pump to injectors, be sure to release fuel pressure to eliminate danger.
3. Be careful not to jar components such as control unit and air flow meter.

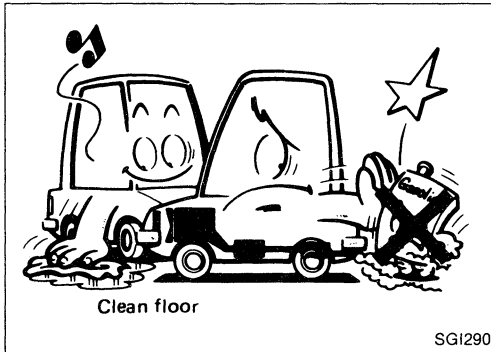

### Precautions for Catalyst

If a large amount of unburned fuel flows into the converter, the converter temperature will be excessively high. To prevent this, follow the procedure below:

1. Use unleaded gasoline only. Leaded gasoline will seriously damage the catalytic converter.
2. When checking for ignition spark or measuring engine compression, make tests quickly and only when necessary.
3. Do not run engine when the fuel tank level is low, otherwise the engine may misfire causing damage to the converter.
4. Do not place the vehicle on inflammable material. Keep inflammable material off the exhaust pipe.


### Precautions for Fuel

Use unleaded gasoline with an octane rating of at least 87 AKI (Anti-Knock Index) number (research octane number 91). For improved vehicle performance, the use of unleaded gasoline with an octane rating of at least 91 AKI number (RON 96) is recommended.



## HOW TO USE THIS MANUAL

1. **A QUICK REFERENCE INDEX**, a black tab (e.g. **BR**) is provided on the first page. You can quickly find the first page of each section by mating it to the section's black tab.
2. **THE CONTENTS** are listed on the first page of each section.
3. **THE TITLE** is indicated on the upper portion of each page and shows the part or system.
4. **THE PAGE NUMBER** of each section consists of two letters which designate the particular section and a number (e.g. "BR-5").
5. **THE LARGE ILLUSTRATIONS** are exploded views (See below.) and contain tightening torques, lubrication points and other information necessary to perform repairs. The illustrations should be used in reference to service matters only. When ordering parts, refer to the appropriate **PARTS CATALOG**.

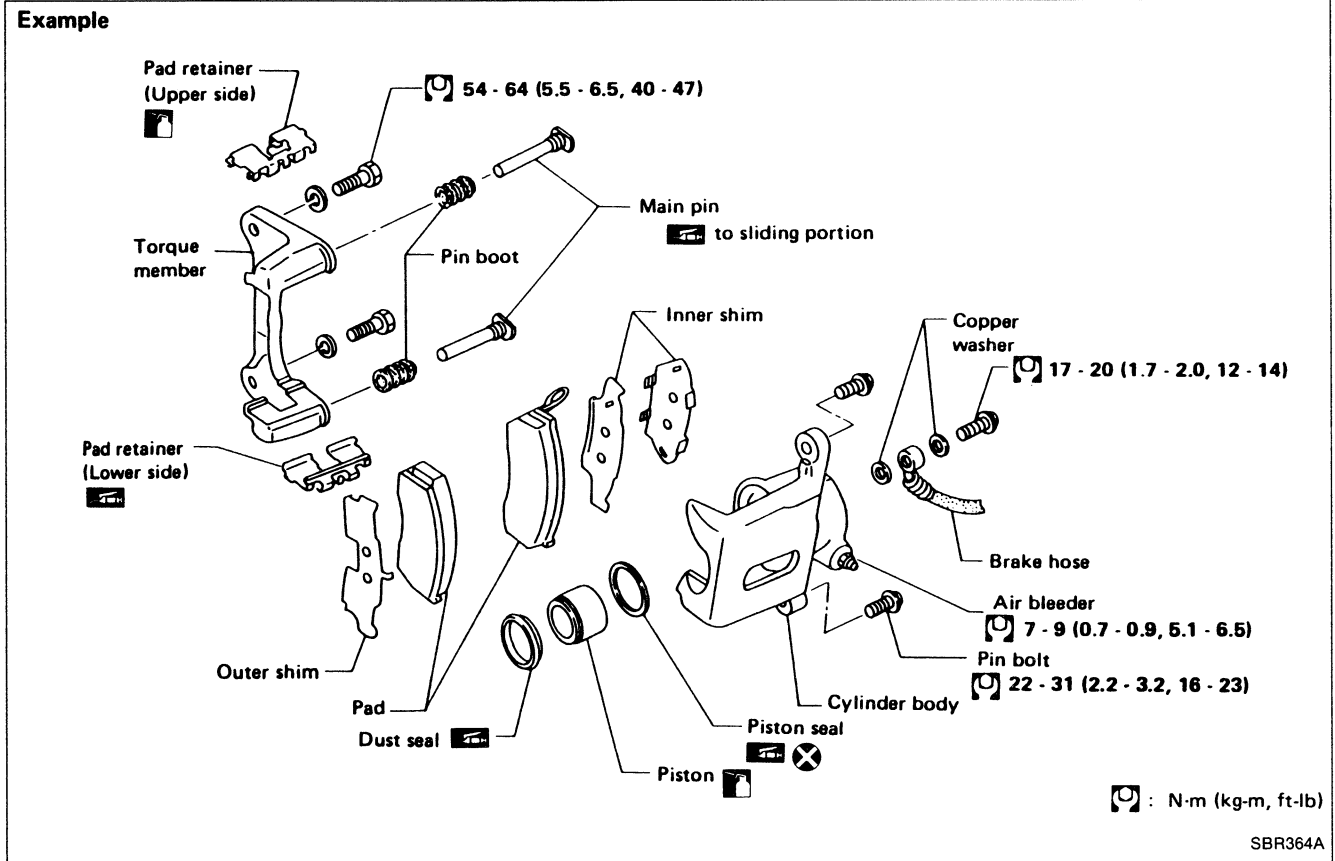

6. **THE SMALL ILLUSTRATIONS** show the important steps such as inspection, use of special tools, knacks of work and hidden or tricky steps which are not shown in the previous large illustrations. Assembly, inspection and adjustment procedures for complicated units such as the automatic transaxle or transmission, etc. are presented in a step-by-step format where necessary.
7. The following **SYMBOLS AND ABBREVIATIONS** are used:

- : Tightening torque
- : Should be lubricated with grease. Unless otherwise indicated, use recommended multi-purpose grease.
- : Should be lubricated with oil.
- : Sealing point
- : Checking point
- : Always replace after every disassembly.
- : Apply petroleum jelly.
- : Apply A.T.F.
- ★ : Select with proper thickness.
- ☆ : Adjustment is required.

- S.D.S. : Service Data and Specifications
- L.H. : Left-Hand
- A/T : Automatic Transaxle/Transmission
- Tool : Special Service Tools
- A.T.F. : Automatic Transmission Fluid
- D<sub>1</sub> : Drive range 1st gear
- D<sub>2</sub> : Drive range 2nd gear
- D<sub>3</sub> : Drive range 3rd gear
- D<sub>4</sub> : Drive range 4th gear
- O.D. : Overdrive

## HOW TO USE THIS MANUAL

---

8. The **UNITS** given in this manual are primarily expressed as SI UNITS (International System of Unit), and alternately expressed in the metric system and in the yard/pound system.

“**Example**”

**Tightening torque:**


**59 - 78 N·m (6.0 - 8.0 kg-m, 43 - 58 ft-lb)**

9. **TROUBLE DIAGNOSES** are included in sections dealing with complicated components.
10. **SERVICE DATA AND SPECIFICATIONS** are contained at the end of each section for quick reference of data.
11. The captions **WARNING** and **CAUTION** warn you of steps that must be followed to prevent personal injury and/or damage to some part of the vehicle.
- **WARNING** indicates the possibility of personal injury if instructions are not followed.
  - **CAUTION** indicates the possibility of component damage if instructions are not followed.
  - **BOLD TYPED STATEMENTS** except **WARNING** and **CAUTION** give you helpful information.

# HOW TO READ WIRING DIAGRAMS


## WIRING DIAGRAM

Symbols used in WIRING DIAGRAM are shown below:

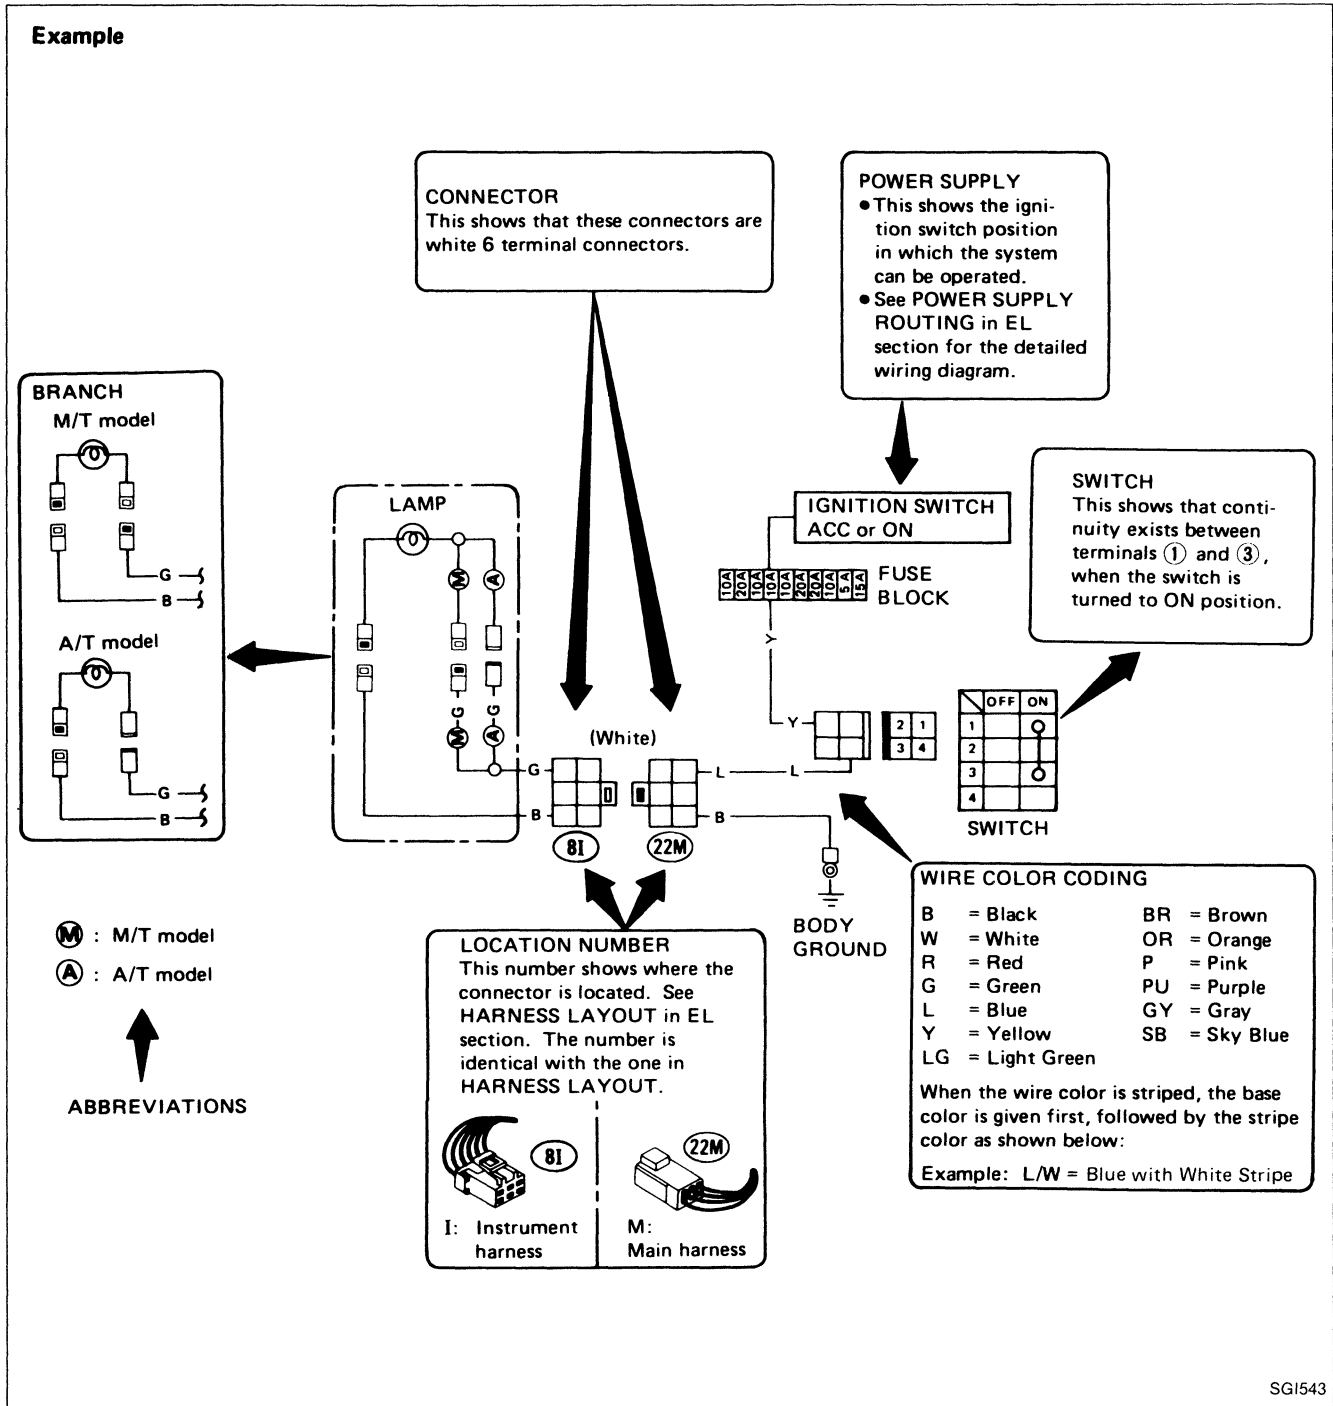

SG1543


# HOW TO READ WIRING DIAGRAMS

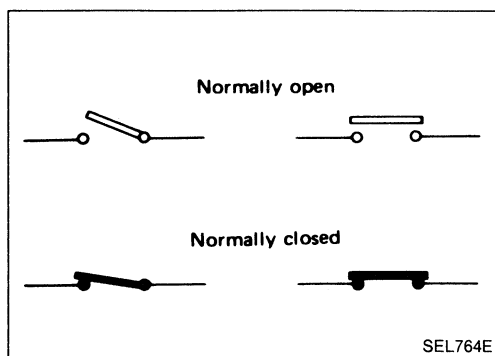

## SWITCH POSITIONS


Wiring diagram switches are shown with the vehicle in the following condition.

- Ignition switch "OFF".
- Doors, hood and trunk lid/back door closed.
- Pedals are not depressed and parking brake is released.

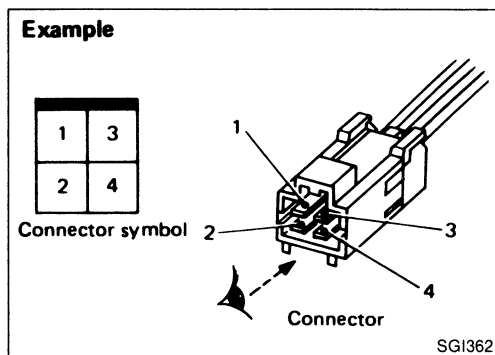

## CONNECTOR SYMBOLS

- All connector symbols in wiring diagrams are shown from the terminal side.

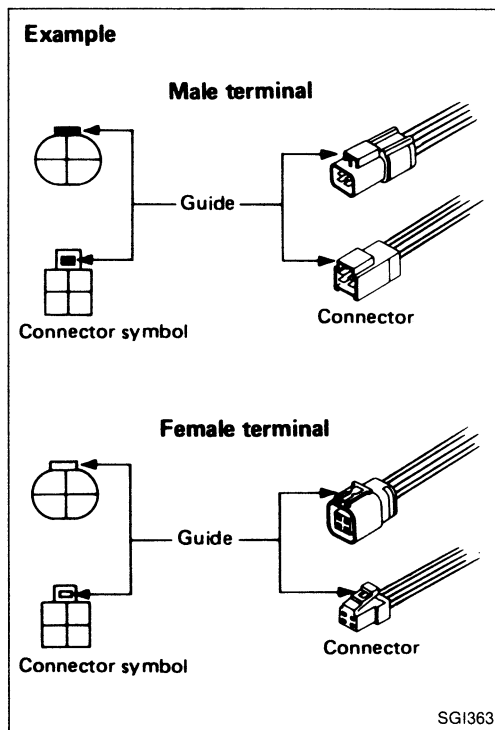


- Male and female terminals  
Connector guides for male terminals are shown in black and female terminals in white in wiring diagrams.

# HOW TO READ WIRING DIAGRAMS

## MULTIPLE SWITCH

The continuity of the multiple switch is identified in the switch chart in wiring diagrams.

### Example

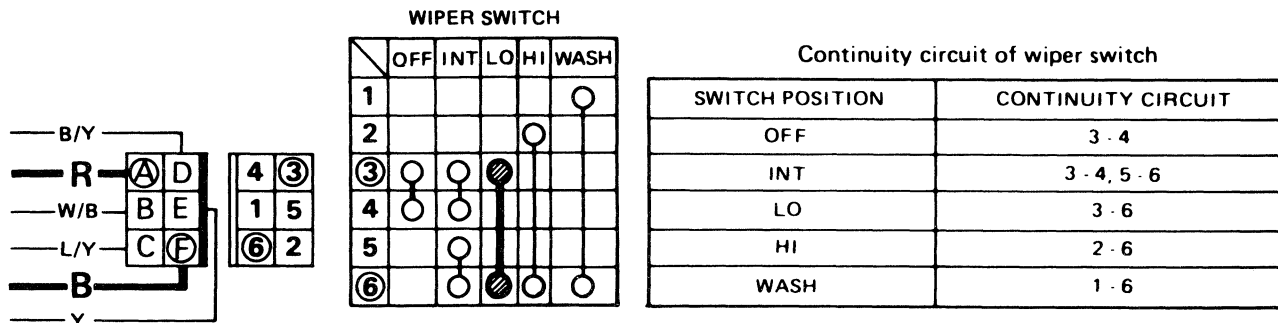

Example: Wiper switch in LO position

Continuity circuit: Red wire - (A) terminal - (3) terminal - Wiper switch (● - ●: LO) - (6) terminal - (F) terminal - Black wire



SGI365

# HOW TO READ WIRING DIAGRAMS

## SUPER MULTIPLE JUNCTION (S.M.J.)

- The "S.M.J." indicated in wiring diagrams is shown in a simplified form. The terminal arrangement should therefore be referred to in the foldout at the end of the Service Manual.
- The foldout should be spread to read the entire wiring diagram.


### Example

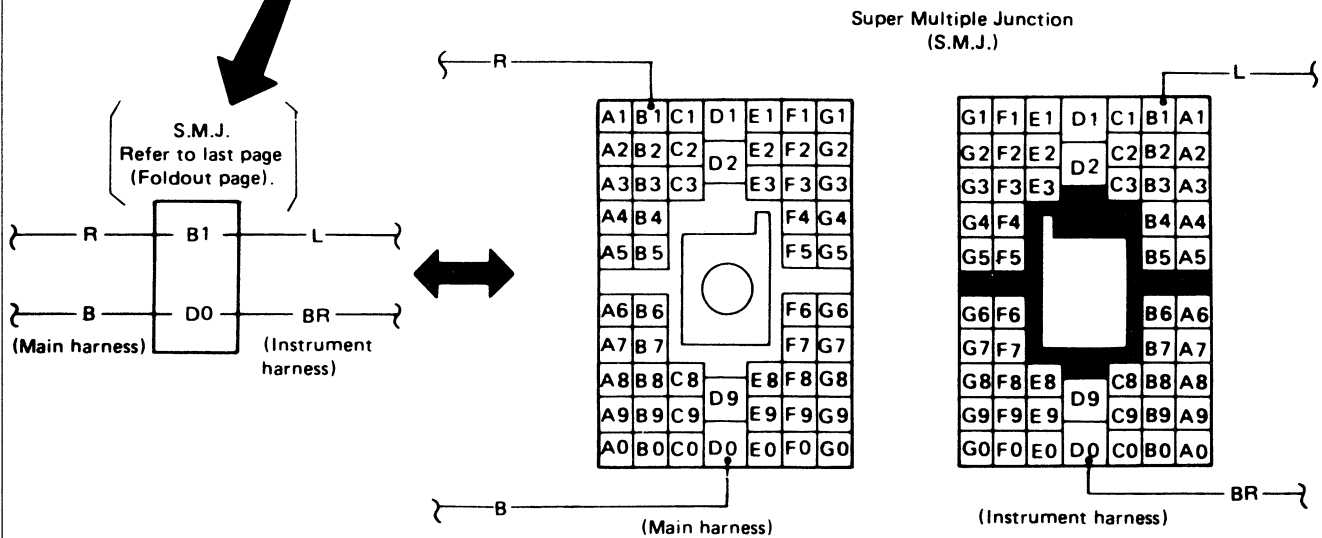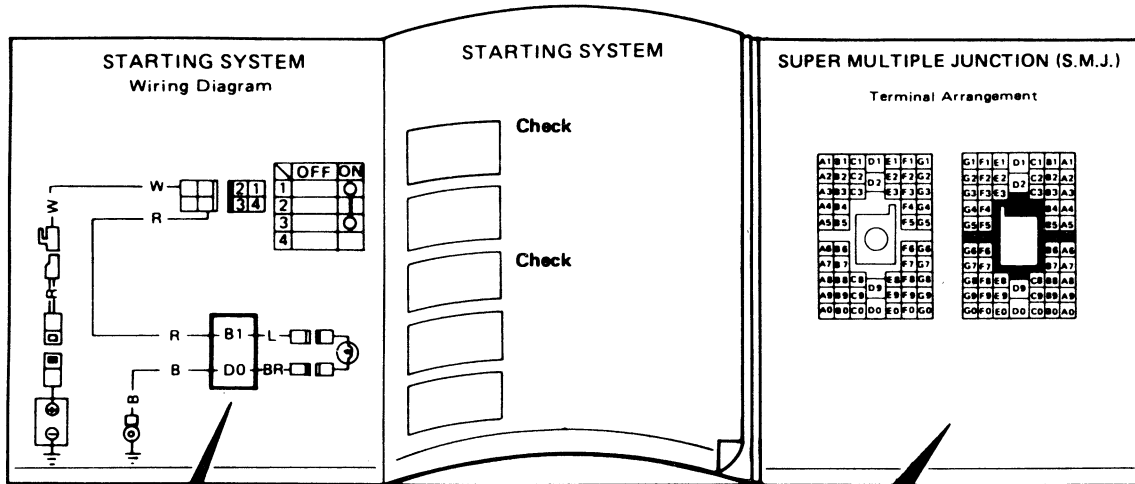

SEL653F

# HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES

## Example

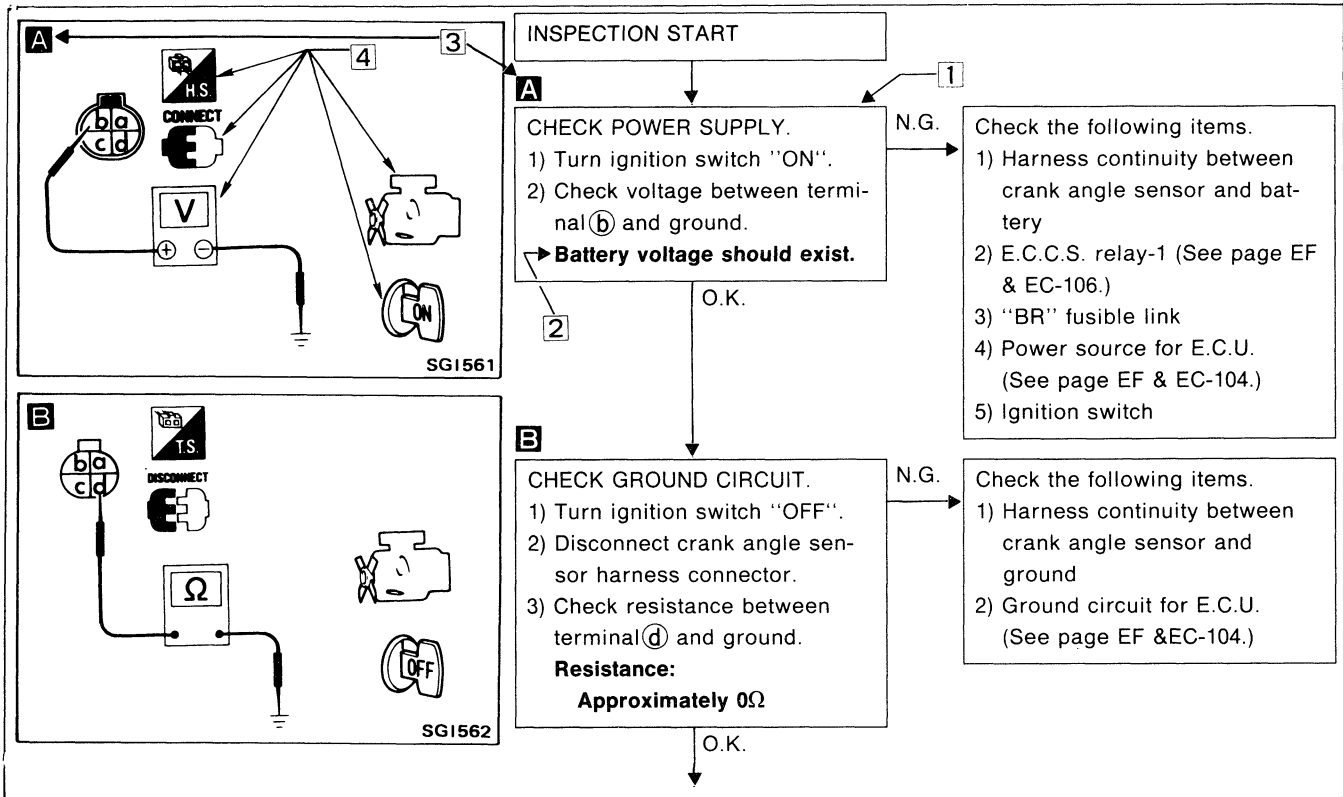

## NOTICE

The flow chart indicates work procedures required to diagnose problems effectively. Observe the following instructions before diagnosing.


- 1) Use the flow chart after locating probable causes of a problem following the "Preliminary Check" or the "Symptom Chart".
- 2) After repairs, re-check that the problem has been completely eliminated.
- 3) Refer to Component Parts Location and Harness Layout for the Systems described in each section for identification/location of components and harness connectors.
- 4) Refer to the Circuit Diagram for Quick Pinpoint Check. If you must perform circuit continuity between harness connectors more detail, such as in case of sub-harness is used, refer to Wiring Diagram and Harness Layout in EL section for identification of harness connectors.
- 5) When checking circuit continuity, ignition switch should be "OFF".
- 6) Before checking voltage at connectors, check battery voltage.
- 7) After accomplishing the Diagnostic Procedures and Electrical Components Inspection, make sure that all harness connectors are reconnected as it was.

# HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES

## HOW TO FOLLOW THIS FLOW CHART

### 1 Work and diagnostic procedure

Start to diagnose a problem using procedures indicated in enclosed blocks, as shown in the following example.

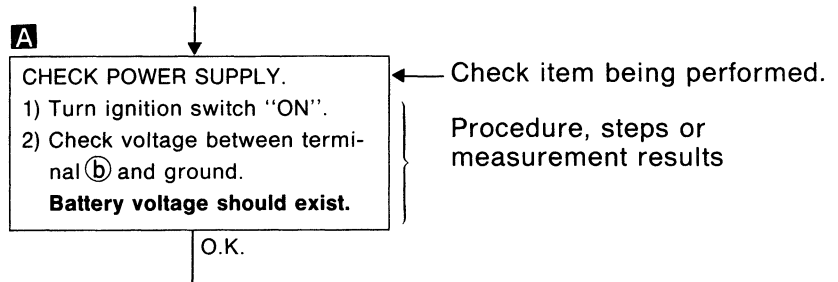

### 2 Measurement results

Required results are indicated in bold type in the corresponding block, as shown below:

These have the following meanings:

**Battery voltage** → 11 - 14V or approximately 12V

**Voltage: Approximately 0V** → Less than 1V

### 3 Cross reference of work symbols in the text and illustrations


Illustrations are provided as visual aids for work procedures. For example, symbol **A** indicated in the left upper portion of each illustration corresponds with the symbol in the flow chart for easy identification. More precisely, the procedure under the "CHECK POWER SUPPLY" outlined previously is indicated by an illustration **A**.

### 4 Symbols used in illustrations

Symbols included in illustrations refer to measurements or procedures. Before diagnosing a problem, familiarize yourself with each symbol.



# HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES

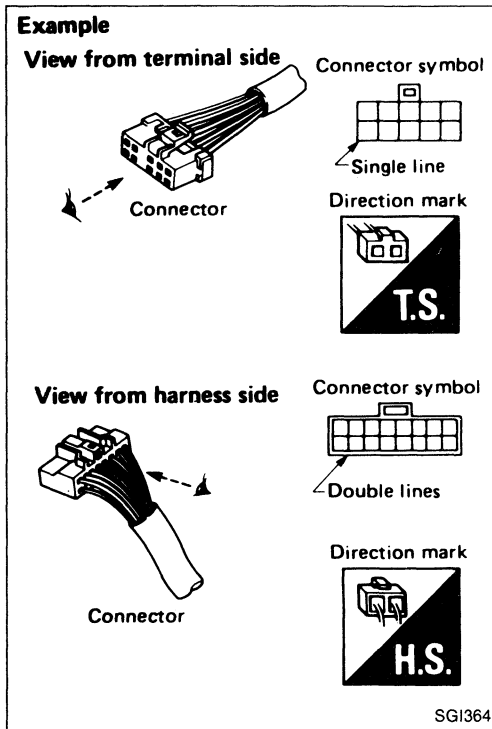

## Direction mark

A direction mark is shown to clarify the side of connector (terminal side or harness side). Direction marks are mainly used in the illustrations indicating terminal inspection.



: View from terminal side ... T.S.

- All connector symbols shown from the terminal side are enclosed by a single line.


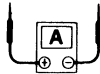









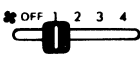

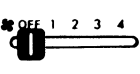








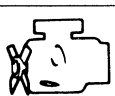













: View from harness side ... H.S.

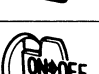- All connector symbols shown from the harness side are enclosed by a double line.


# HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES

## Key to symbols signifying measurements or procedures

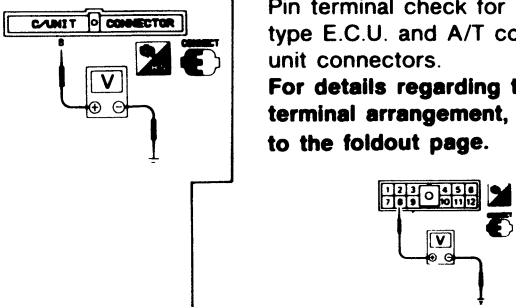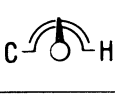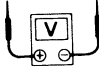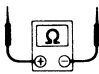Symbol	Symbol explanation	Symbol	Symbol explanation
	Check after disconnecting the connector to be measured.		Current should be measured with an ammeter.
	Check after connecting the connector to be measured.		Procedure with CONSULT
	Insert key into ignition switch.		Procedure without CONSULT
	Remove key from ignition switch.		A/C switch is "OFF".
	Turn ignition switch to "OFF" position.		A/C switch is "ON".
	Turn ignition switch to "ON" position.		Fan switch is "ON". (At any position except for "OFF" position)
	Turn ignition switch to "START" position.		Fan switch is "OFF".
	Turn ignition switch from "OFF" to "ACC" position.		Apply battery voltage directly to components.
	Turn ignition switch from "ACC" to "OFF" position.		Drive vehicle.
	Turn ignition switch from "OFF" to "ON" position.		Disconnect battery negative cable.
	Turn ignition switch from "ON" to "OFF" position.		Depress brake pedal.
	Do not start engine, or check with engine stopped.		Release brake pedal.
	Start engine, or check with engine running.		Depress accelerator pedal.
	Apply parking brake.		Release accelerator pedal.
	Release parking brake.	 <p>Pin terminal check for S.M.J. type E.C.U. and A/T control unit connectors.  <b>For details regarding the terminal arrangement, refer to the foldout page.</b></p>	
	Check after engine is warmed up sufficiently.		
	Voltage should be measured with a voltmeter.		
	Circuit resistance should be measured with an ohmmeter.		
	Circuit resistance should be measured with an ohmmeter.		

# CONSULT CHECKING SYSTEM

## Outside View

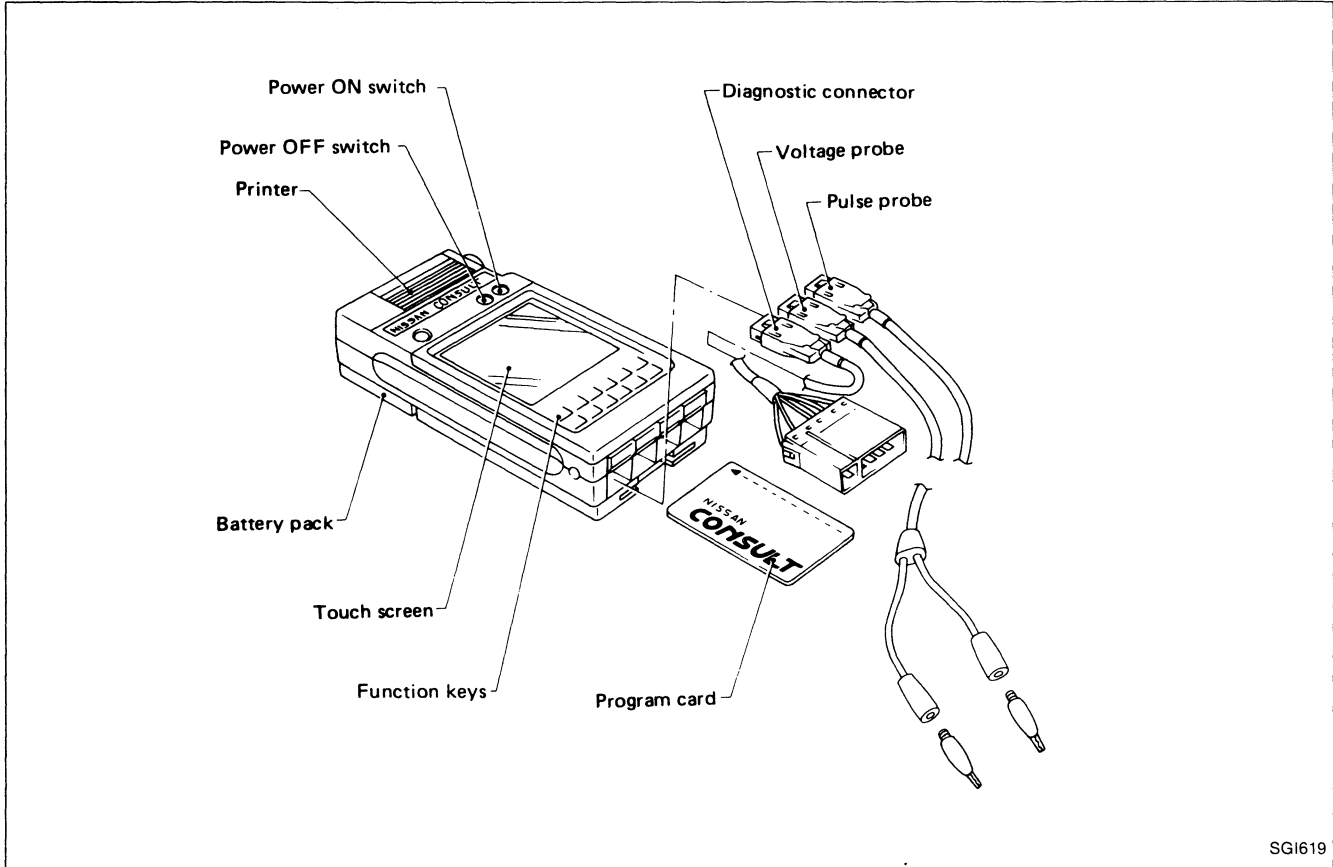

## System Application

System	E.C.C.S.	A/T	Air bag
Diagnostic mode			
Work support	×	—	—
Self-diagnostic results	×	×	×
Data monitor	×	×	—
Active test	×	—	—
E.C.U. part number	×	×	—

×: Applicable

# CONSULT CHECKING SYSTEM

## Function

Diagnostic mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT.
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the control unit can be read.
Active test	Mode in which CONSULT drives some actuators apart from the control units and also shifts some parameters in a specified range.
E.C.U. part number	E.C.U. part number can be read.

## Checking Equipment

Tool name	Description
<b>NISSAN CONSULT kit</b> ① CONSULT unit and accessories ② Program card ③ Operation manuals ④ Binder ⑤ Carrying case ⑥ Thermal paper (Rolls)	


When ordering the above equipment, contact your INFINITI distributor.

# IDENTIFICATION INFORMATION

## Model Variation


Body	Destination	Grade	Model	Engine	Transmission	Differential carrier
Coupe	Non-California	Base	HL-GAEU	VG30E	RE4R01A	R200
		STD	HL-GAEUW			
	California	Base	HL-GAEV			
		STD	HL-GAEVW			

**Prefix and suffix designations:**

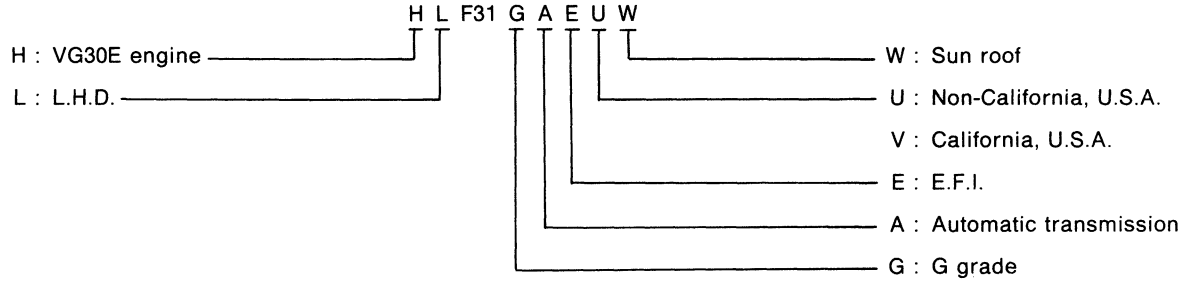


# IDENTIFICATION INFORMATION

## Identification Number

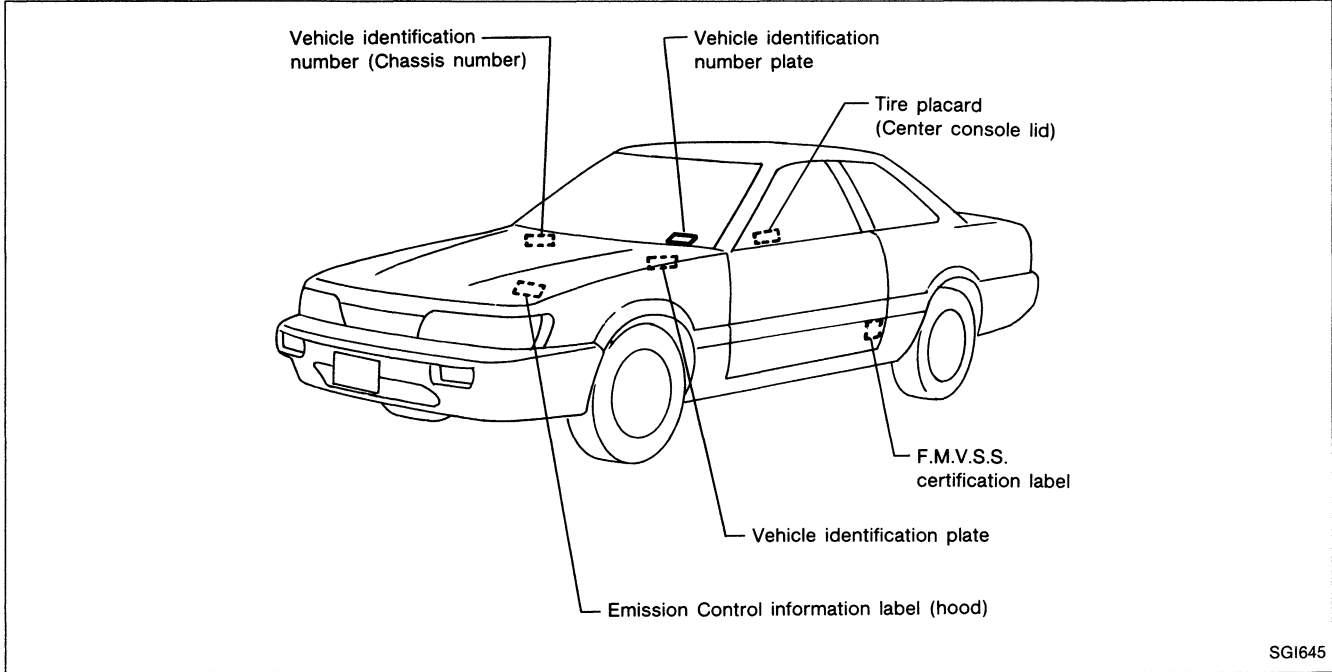


## VEHICLE IDENTIFICATION NUMBER ARRANGEMENT

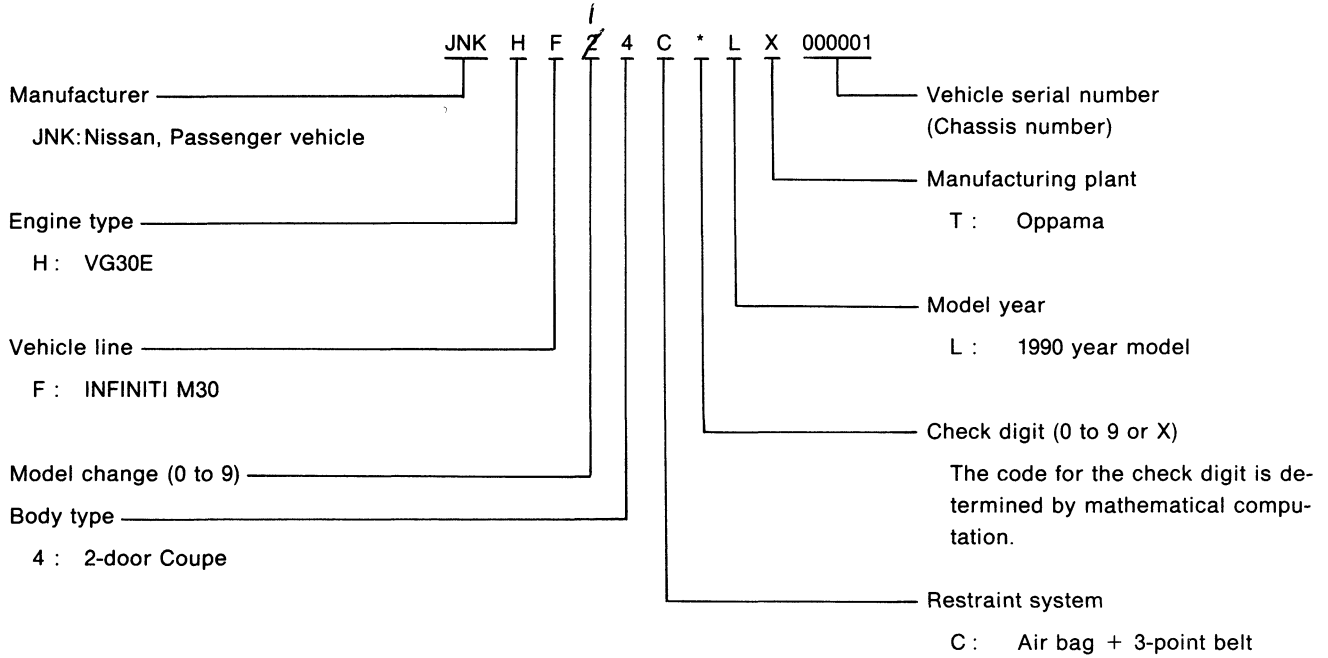

# IDENTIFICATION INFORMATION

## Identification Number (Cont'd)


### IDENTIFICATION PLATE

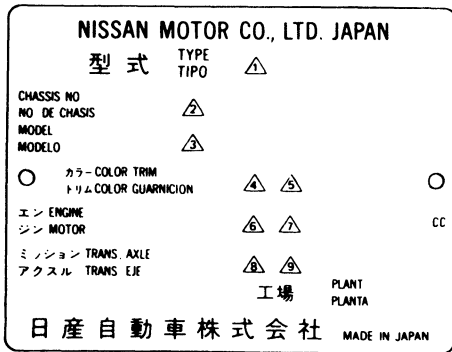


- 1 Type
- 2 Vehicle identification number (Chassis number)
- 3 Model
- 4 Body color code
- 5 Trim color code
- 6 Engine model
- 7 Engine displacement
- 8 Transmission model
- 9 Axle model

SGI315

### ENGINE SERIAL NUMBER

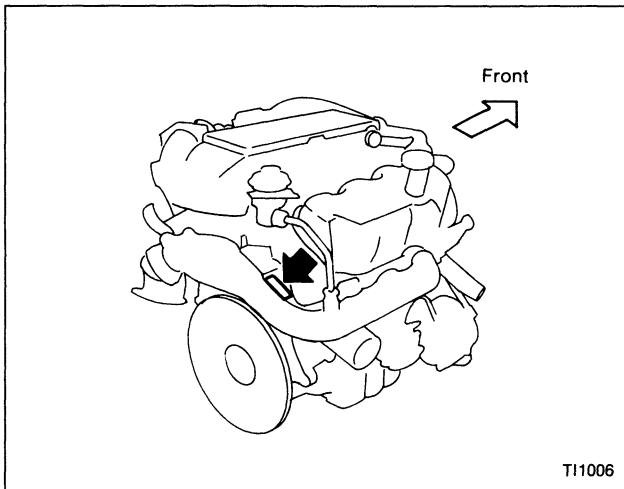

### AUTOMATIC TRANSMISSION NUMBER

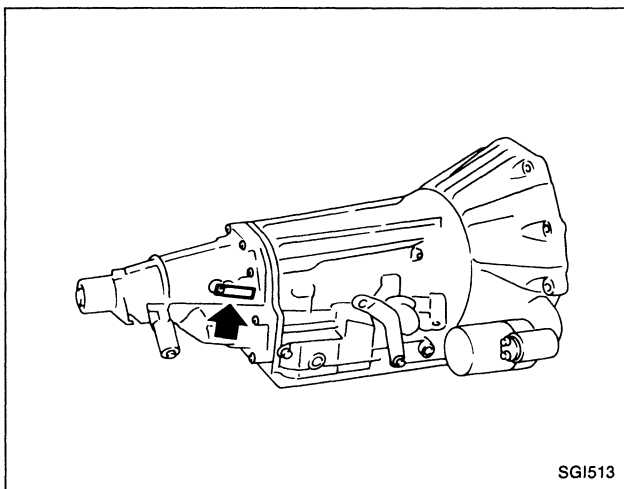

# IDENTIFICATION INFORMATION

## Dimensions

Unit: mm (in)

Item		Model	Coupe
		Overall length	4,796 (188.8)
Overall width	1,689 (66.5)		
Overall height	1,379 (54.3)		
Wheel base	2,616 (103.0)		
Tread	Front	1,435 (56.5)	
	Rear	1,435 (56.5)	

## Wheels and Tires

Road wheel	Aluminum	6-1/2 JJ x 15
	Offset	mm (in) 25 (0.98)
Tire size	Conventional	P215/60R15
	Spare	T135/70D15




## Garage Jack and Safety Stand

### WARNING:

- Never get under the vehicle while it is supported only by the jack. Always use safety stands to support the frame when you have to get under the vehicle.
- Place wheel chocks at the front wheels when the rear wheels are raised and place wheel chocks at the rear wheels when the front wheels are raised.

### CAUTION:

Place a wooden or rubber block between safety stand and vehicle body when the supporting body is flat.

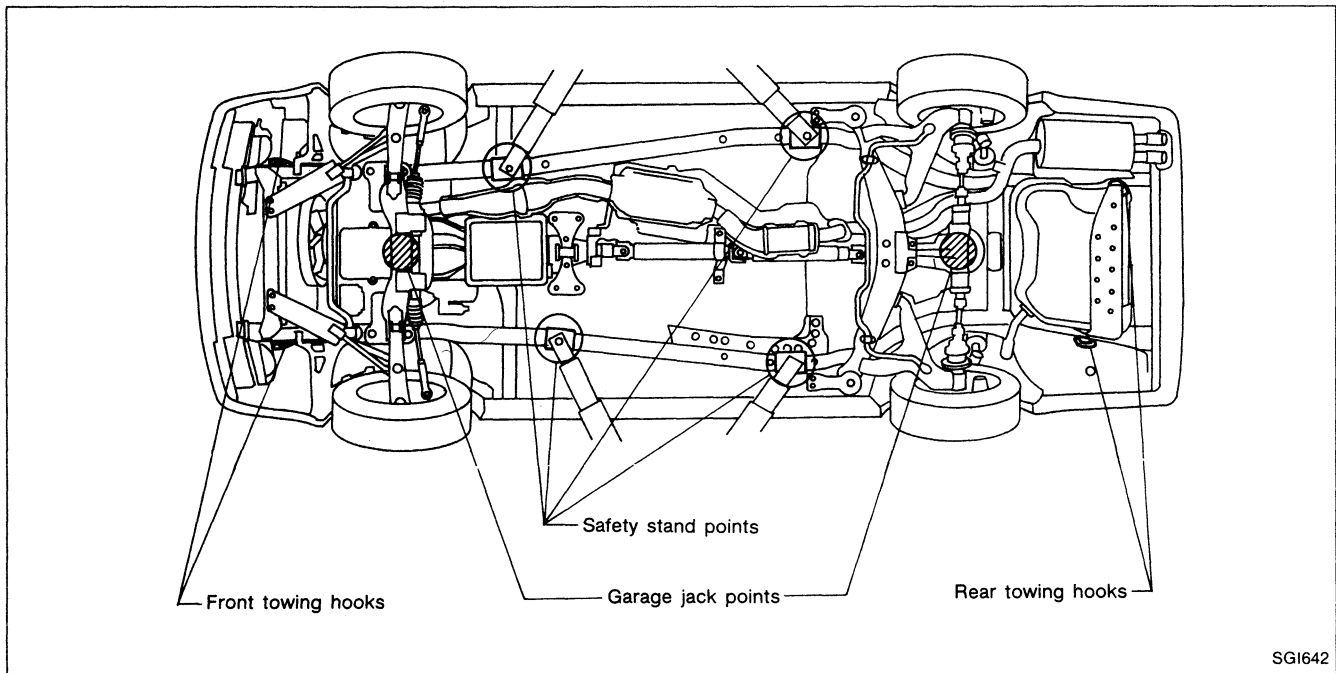


# LIFTING POINTS AND TOW TRUCK TOWING

## 2-pole Lift

### WARNING:

When lifting the vehicle, open the lift arms as wide as possible and ensure that the front and rear of the vehicle are well balanced.


When setting the lift arm, do not allow the arm to contact the brake tubes and fuel lines.

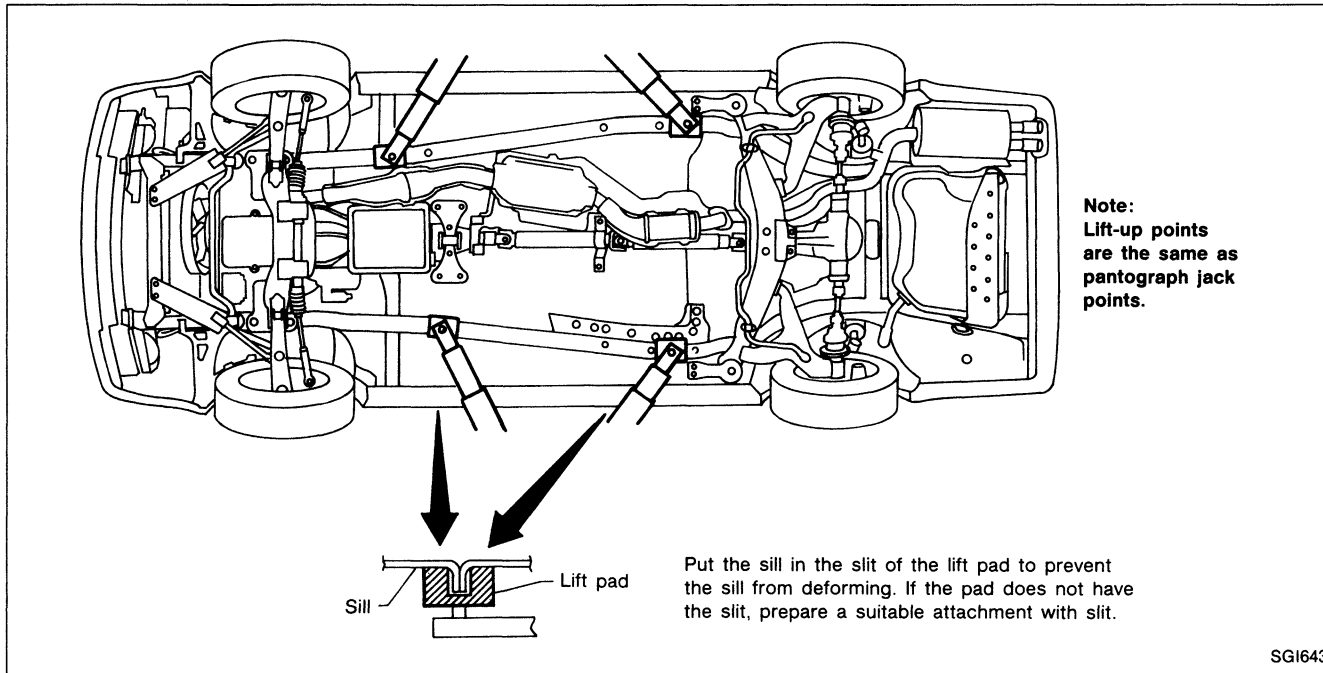

## Tow Truck Towing

### CAUTION:

- All applicable state or Provincial (in Canada) laws and local laws regarding the towing operation must be obeyed.
- It is necessary to use proper towing equipment to avoid possible damage to the vehicle during towing operation. Towing is in accordance with Towing Procedure Manual at dealer.
- When towing with the rear wheels on the ground, release the parking brake and move the gearshift lever to neutral ("N" position).
- Never tow the vehicle from the rear (i.e., backward) with four wheels on the ground as this may cause serious and expensive damage to the transmission.

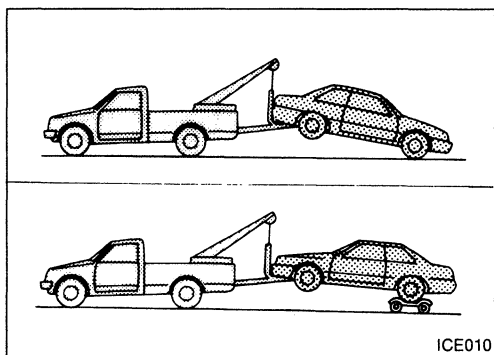

INFINITI recommends that vehicle be towed with the driving (rear) wheels off the ground as illustrated.

## LIFTING POINTS AND TOW TRUCK TOWING

### Tow Truck Towing (Cont'd)

#### TOWING AN AUTOMATIC TRANSMISSION MODEL WITH FOUR WHEELS ON GROUND OR TOWING WITH FRONT WHEELS RAISED (With rear wheels on ground)

Observe the following restricted towing speeds and distances.

**Speed:**

**Below 50 km/h (30 MPH)**


**Distance:**

**Less than 65 km (40 miles)**

If the speed or distance must necessarily be greater, remove the propeller shaft beforehand to prevent damage to the transmission.

#### TOWING POINT

- **Never tow the vehicle using only the towing hooks. Use proper towing equipment when towing. Otherwise, the vehicle body will be damaged.**
- **Always pull the cable straight out from the vehicle. Never pull on the hook at a sideways angle.**

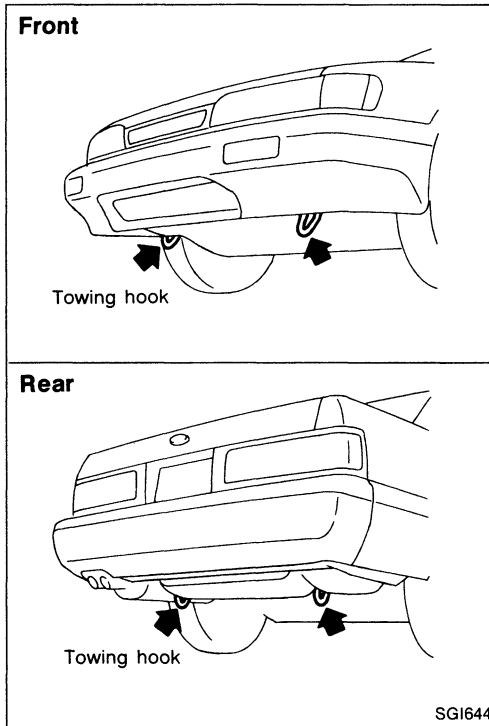


# TIGHTENING TORQUE OF STANDARD BOLTS

Grade	Bolt size	Bolt diameter* mm	Pitch mm	Tightening torque (Without lubricant)					
				Hexagon head bolt			Hexagon flange bolt		
				N·m	kg·m	ft·lb	N·m	kg·m	ft·lb
4T	M6	6.0	1.0	5.1	0.52	3.8	6.1	0.62	4.5
	M8	8.0	1.25	13	1.3	9	15	1.5	11
			1.0	13	1.3	9	16	1.6	12
	M10	10.0	1.5	25	2.5	18	29	3.0	22
			1.25	25	2.6	19	30	3.1	22
	M12	12.0	1.75	42	4.3	31	51	5.2	38
1.25			46	4.7	34	56	5.7	41	
M14	14.0	1.5	74	7.5	54	88	9.0	65	
7T	M6	6.0	1.0	8.4	0.86	6.2	10	1.0	7
	M8	8.0	1.25	21	2.1	15	25	2.5	18
			1.0	22	2.2	16	26	2.7	20
	M10	10.0	1.5	41	4.2	30	48	4.9	35
			1.25	43	4.4	32	51	5.2	38
	M12	12.0	1.75	71	7.2	52	84	8.6	62
1.25			77	7.9	57	92	9.4	68	
M14	14.0	1.5	127	13.0	94	147	15.0	108	
9T	M6	6.0	1.0	12	1.2	9	15	1.5	11
	M8	8.0	1.25	29	3.0	22	35	3.6	26
			1.0	31	3.2	23	37	3.8	27
	M10	10.0	1.5	59	6.0	43	70	7.1	51
			1.25	62	6.3	46	74	7.5	54
	M12	12.0	1.75	98	10.0	72	118	12.0	87
1.25			108	11.0	80	137	14.0	101	
M14	14.0	1.5	177	18.0	130	206	21.0	152	

1. Special parts are excluded.
2. This standard is applicable to bolts having the following marks embossed on the bolt head.

Grade	Mark
4T .....	4
7T .....	7
9T .....	9

\* : Nominal diameter

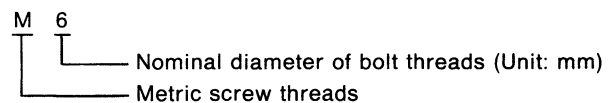

# MAINTENANCE

## SECTION **MA**

**MA**

### CONTENTS

PRECAUTIONS.....	MA- 2
PERIODIC MAINTENANCE .....	MA- 3
GENERAL MAINTENANCE .....	MA- 6
RECOMMENDED FLUIDS AND LUBRICANTS .....	MA- 8
ENGINE MAINTENANCE.....	MA-10
CHASSIS AND BODY MAINTENANCE.....	MA-17
SERVICE DATA AND SPECIFICATIONS (S.D.S.).....	MA-22

### **Supplemental Restraint System “AIR BAG”**

The Infiniti M30 has a Supplemental Restraint System “Air Bag”, to help reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag (located in the center of the steering wheel), five sensors, a control unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the BF section of this Service Manual.

**WARNING:**

- a. **To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized INFINITI dealer.**
- b. **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.**
- c. **All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation and related components are located in the steering column, center console, dash, upper radiator core support and front fenders. Do not use electrical test equipment on these circuits.**

## **PERIODIC MAINTENANCE**

---

Two different maintenance schedules are provided, and should be used, depending upon the conditions in which the vehicle is mainly operated. **After 60,000 miles (96,000 km) or 48 months, continue the periodic maintenance at the same mileage/time intervals.**

### **SCHEDULE 1**

Follow Periodic Maintenance Schedule 1 if your driving habits frequently includes one or more of the following driving conditions:

- Repeated short trips of less than 5 miles (8 km).
- Repeated short trips of less than 10 miles (16 km) with outside temperatures remaining below freezing.
- Operating in hot weather in stop-and-go “rush hour” traffic.
- Extensive idling and/or low speed driving for long distances, such as police, taxi or door-to-door delivery use.
- Driving in dusty conditions.
- Driving on rough, muddy, or salt spread roads.
- Towing a trailer, using a camper or a car-top carrier.

### **SCHEDULE 2**

Follow Periodic Maintenance Schedule 2 if none of the driving conditions shown in Schedule 1 apply to your driving habits.





# PERIODIC MAINTENANCE

## Schedule 2

[ ]: Perform service at the mileage intervals only

Abbreviations: R = Replace I = Inspect | = Correct or replace as necessary.

### MAINTENANCE OPERATION

Perform at number of miles, kilometers or months, whichever comes first.

	Miles x 1,000		Miles x 1,000		Miles x 1,000		Miles x 1,000		Miles x 1,000		Miles x 1,000		Reference page
	(km x 1,000)	Months	7.5	15	22.5	30	37.5	45	52.5	60	(96)	48	
			(12)	(24)	(36)	(48)	(60)	(72)	(84)	(96)			
			6	12	18	24	30	36	42	48			

### EMISSION CONTROL SYSTEM MAINTENANCE

Service "A" Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	MA-14
Service "C" Engine oil filter (Use Nissan PREMIUM type or equivalent)	R		R		R		R		R				MA-14
Service "E" Air cleaner filter					[R]						[R]		MA-14
Service "F" Vapor lines					I*								MA-16
Fuel lines					I*								MA-13
Engine coolant					R*								MA-11
Fuel filter													MA-13
Service "G" Drive belts													MA-10
Service "H" Spark plugs (PLATINUM-TIPPED Type) Timing belt													MA-15 EM-13

See NOTE (2)\*

See NOTE (1)

### CHASSIS AND BODY MAINTENANCE

Service "D" Brake lines & cables					I								MA-18
Brake pads & discs					I								MA-19
Automatic transmission oil & differential gear oil					I								MA-17, 18
Exhaust system					I								MA-20
Service "F" Steering gear linkage axle & suspension parts													MA-20, FA-5, RA-5
Air bag system													BF-53

See NOTE (4)

**NOTE:** (1) After 60,000 miles (96,000 km) or 48 months, inspect every 15,000 miles (24,000 km) or 12 months.  
 (2) If vehicle is operated under extremely adverse weather conditions or in areas where ambient temperatures are either extremely low or extremely high, the filters might become clogged. In such an event, replace them immediately.  
 (3) Maintenance items and intervals with "\*" are recommended by INFINITI for reliable vehicle operation. The owner need not perform such maintenance in order to maintain the emission warranty or manufacturer recall liability. Other maintenance items and intervals are required.  
 (4) Inspect the air bag system 10 years after the date of manufacture as noted on the certification label located on the driver's door.

## GENERAL MAINTENANCE

General maintenance includes those items which should be checked during the normal day-to-day operation of the vehicle. They are essential if the vehicle is to continue operating properly. The owners can perform the checks and inspections themselves or they can have their INFINITI dealers do them for a nominal charge.

Item	Reference page
<b>OUTSIDE THE VEHICLE</b>	
The maintenance items listed here should be performed from time to time, unless otherwise specified.	
<b>Tires</b> Check the pressure with a gauge periodically when at a service station, including the spare, and adjust to the specified pressure if necessary. Check carefully for damage, cuts or excessive wear.	—
<b>Wheel nuts</b> When checking the tires, make sure no nuts are missing, and check for any loose nuts. Tighten if necessary.	—
<b>Tire rotation</b> Tires should be rotated every 12,000 km (7,500 miles).	MA-20
<b>Wheel alignment and balance</b> If the vehicle should pull to either side while driving on a straight and level road, or if you detect uneven or abnormal tire wear, there may be a need for wheel alignment. If the steering wheel or seat vibrates at normal highway speeds, wheel balancing may be needed.	MA-19 FA-8
<b>Windshield wiper blades</b> Check for cracks or wear if they do not wipe properly.	—
<b>Doors and engine hood</b> Check that all doors and the engine hood operate smoothly as well as the trunk lid. Also ensure, that all latches lock securely. Lubricate hinges and latches if necessary. Make sure that the secondary latch keeps the hood from opening when the primary latch is released. When driving in areas using road salt or other corrosive materials, check lubrication frequently.	MA-21
<b>INSIDE THE VEHICLE</b>	
The maintenance items listed here should be checked on a regular basis, such as when performing periodic maintenance, cleaning the vehicle, etc.	
<b>Lights</b> Make sure that the headlights, stop lights, tail lights, turn signal lights, and other lights are all operating properly and installed securely. Also check headlight aim.	—
<b>Warning lights and buzzers/chimes</b> Make sure that all warning lights and buzzers/chimes are operating properly.	—
<b>Windshield wiper and washer</b> Check that the wipers and washer operate properly and that the wipers do not streak.	—
<b>Windshield defroster</b> Check that the air comes out of the defroster outlets properly and in sufficient quantity when operating the heater or air conditioner.	—
<b>Steering wheel</b> Check that it has the specified free play. Be sure to check for changes in the steering condition, such as excessive free play, hard steering or strange noises. <b>Free play: Less than 35 mm (1.38 in)</b>	—
<b>Seats</b> Check seat position controls such as seat adjuster, seatback recliner, etc. to ensure they operate smoothly and that all latches lock securely in every position. Check that the head restraints move up and down smoothly and that the locks (if so equipped) hold securely in all latched positions. Check that the latches lock securely for folding-down rear seatbacks.	—
<b>Seat belts</b> Check that all parts of the seat belt system (e.g. buckles, anchors, adjusters and retractors) operate properly and smoothly, and are installed securely. Check the belt webbing for cuts, fraying, wear or damage.	MA-21
<b>Brakes</b> Check that the brake does not pull the vehicle to one side when applied.	—
<b>Brake pedal</b> Check the pedal for smooth operation and make sure it has the proper distance under it when depressed fully. Check the brake booster function.	BR-9

## GENERAL MAINTENANCE

Item	Reference page
<b>Parking brake</b> Check that the lever has the proper travel and confirm that your vehicle is held securely on a fairly steep hill with only the parking brake applied.	BR-29
<b>Automatic transmission "Park" mechanism</b> Check that the lock release button on the selector lever operates properly and smoothly. On a fairly steep hill check that your vehicle is held securely with the selector lever in the "P" position without applying any brakes.	—
<b>UNDER THE HOOD AND VEHICLE</b>	
The maintenance items listed here should be checked periodically (e.g. each time you check the engine oil or refuel).	
<b>Windshield washer fluid</b> Check that there is adequate fluid in the tank.	—
<b>Engine coolant level</b> Check the coolant level when the engine is cold.	MA-12
<b>Radiator and hoses</b> Check the front of the radiator and clean off any dirt, insects, leaves, etc., that may have accumulated. Make sure the hoses have no cracks, deformation, rot or loose connections.	—
<b>Brake fluid level</b> Make sure that the brake fluid level is between the "MAX" and "MIN" lines on the reservoir.	MA-18
<b>Battery</b> Check the fluid level in each cell. It should be between the "MAX" and "MIN" lines.	—
<b>Engine drive belts</b> Make sure that no belts is frayed, worn, cracked or oily.	MA-10
<b>Engine oil level</b> Check the level on the dipstick after parking the vehicle on a level spot and turning off the engine.	MA-14
<b>Power steering fluid level and lines</b> Check the level when the fluid is cold and the engine is turned off. Check the lines for proper attachment, leaks, cracks etc.	MA-20
<b>Automatic transmission fluid level</b> Check the level on the dipstick after putting the selector lever in "P" with the engine idling.	MA-17
<b>Exhaust system</b> Make sure there are no loose supports, cracks or holes. If the sound of the exhaust seems unusual or there is a small of exhaust fumes, immediately locate the trouble and correct it.	MA-20
<b>Underbody</b> The underbody is frequently exposed to corrosive substances such as those used on icy roads or to control dust. It is very important to remove these substances, otherwise rust will form on the floor pan, frame, fuel lines and around the exhaust system. At the end of winter, the underbody should be thoroughly flushed with plain water, being careful to clean those areas where mud and dirt can easily accumulate.	—
<b>Fluid leaks</b> Check under the vehicle for fuel, oil water or other fluid leaks after the vehicle has been parked for a while. Water dripping from the air conditioner after use is normal. If you should notice any leaks or gasoline fumes are evident, check for the cause and correct it immediately.	—

# RECOMMENDED FLUIDS AND LUBRICANTS

## Fluids and Lubricants

	Capacity (Approximate)			Recommended fluids and lubricants
	US measure	Imp measure	Liter	
Engine oil (Refill)				
With oil filter	4-5/8 qt	3-7/8 qt	4.4	Energy Conserving Oils of API SG*2, *3
Without oil filter	4-1/4 qt	3-1/2 qt	4.0	
Cooling system (With reservoir)	9-5/8 qt	8 qt	9.15	Anti-freeze coolant (Ethylene glycol base)
Differential gear oil	2-3/4 pt	2-1/4 pt	1.3	API GL-5*2
Automatic transmission fluid	8-3/4 qt	7-1/4 qt	8.3	Genuine Nissan ATF*1 or equivalent Type DEXRON™
Power steering fluid	1 qt	3/4 qt	0.9	Type DEXRON™
Brake fluid	—	—	—	Genuine Nissan Brake Fluid*1 or equivalent DOT 3 (US FMVSS No. 116)
Multi-purpose grease	—	—	—	NLGI No. 2 (Lithium soap base)

\*1: Available in mainland U.S.A. through your INFINITI dealer.


\*2: For further details, see "Recommended SAE viscosity number".

\*3: Energy conserving oils

These oils can be identified by such labels as EC-I, EC-II, energy conserving, energy saving, improved fuel economy, etc.


# RECOMMENDED FLUIDS AND LUBRICANTS

## SAE Viscosity Number

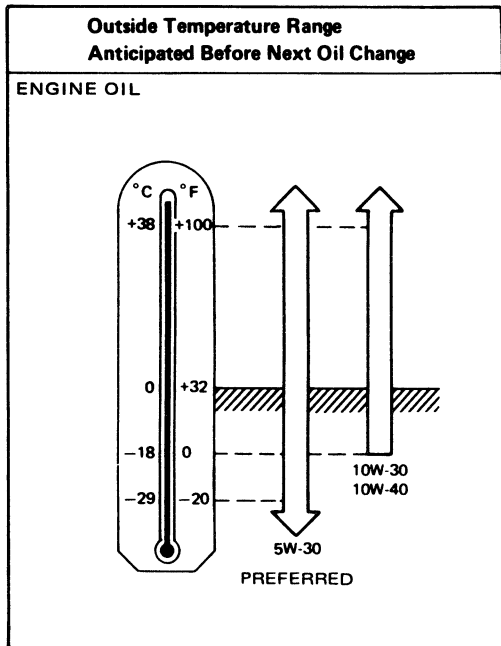

T10008

**5W-30 is preferable for all ambient temperature .  
20W-40 and 20W-50 are usable if the ambient  
temperature is above 10°C (50°F) for all seasons.**

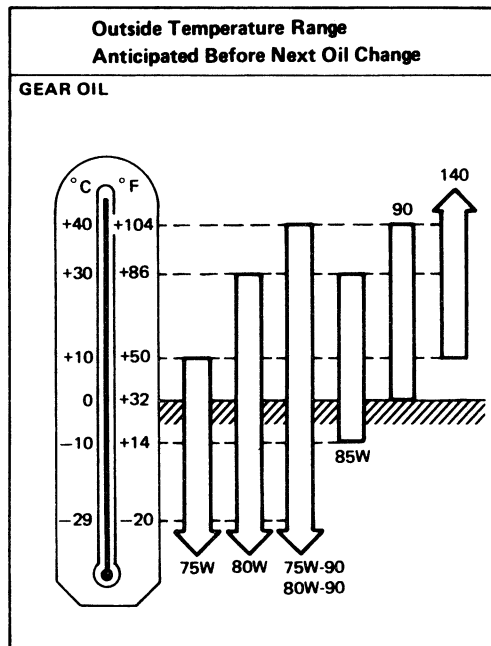


T10003

**75W-90 for transmission and 80W-90 for differential  
gear are preferable if the ambient tempera-  
ture is below 40°C (104°F).**

# ENGINE MAINTENANCE

## Checking Drive Belts

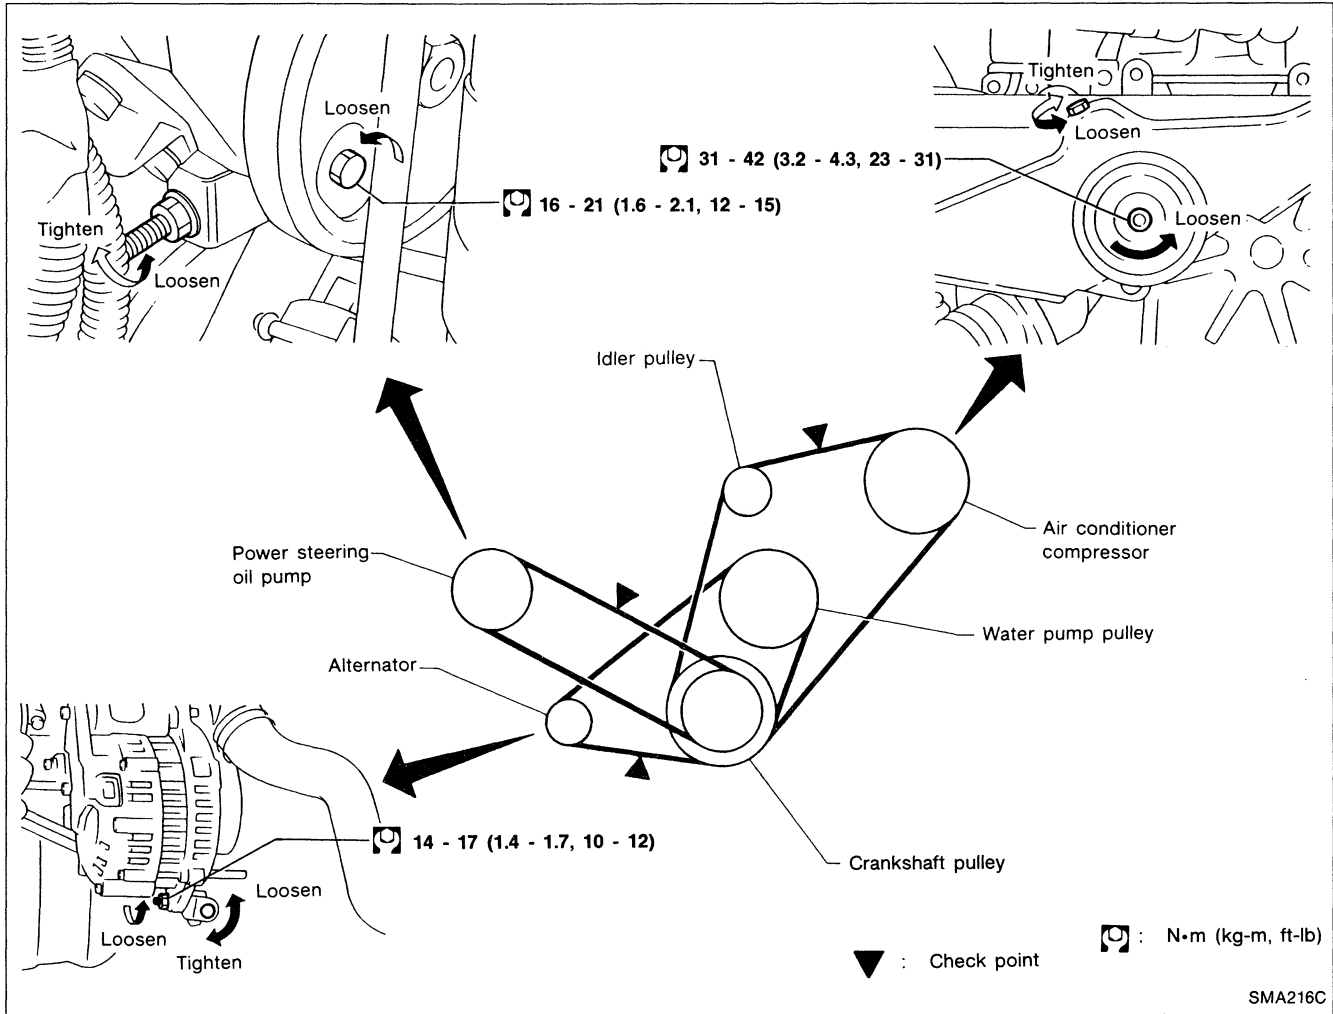

1. Inspect for cracks, fraying, wear or oil adhesion. If necessary, replace with a new one.
2. Inspect drive belt deflection by pushing on the belt midway between pulleys.

**Adjust if belt deflection exceed the limit.**

**Belt deflection:**

Unit: mm (in)

	Used belt deflection		Deflection of new belt
	Limit	Deflection after adjustment	
Alternator	12 (0.47)	7.5 - 8.5 (0.295 - 0.335)	6.5 - 7.5 (0.256 - 0.295)
Air conditioner compressor	14 (0.55)	9 - 10 (0.35 - 0.39)	8 - 9 (0.31 - 0.35)
Power steering oil pump	20 (0.79)	14 - 16 (0.55 - 0.63)	12 - 14 (0.47 - 0.55)
Applied pushing force	98 N (10 kg, 22 lb)		


**Inspect drive belt deflection when engine is cold.**

## Changing Engine Coolant

### WARNING:


To avoid being scalded, never change the coolant when the engine is hot.

Auto air conditioner models:

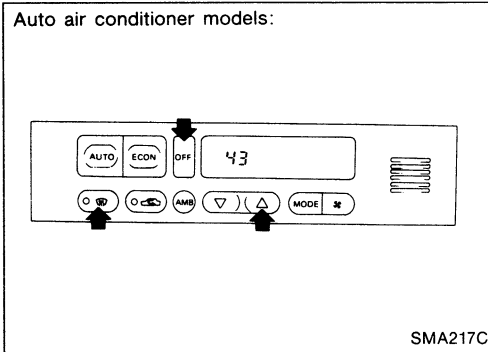


SMA217C

1. Manual air conditioner models:  
Move heater "TEMP" control lever all the way to the "HOT" position.
1. Auto air conditioner models:  
Perform self-diagnosis step 4 of Automatic Air Conditioner system, referring to the following notes. (Refer to HA section.)
  - 1) Turn ignition switch from "OFF" to "ON".
  - 2) In 10 seconds after starting engine (ignition switch is turned "ON"), press **OFF** switch for at least 5 seconds.
  - 3) Press **(HOT)** switch 3 times.
  - 4) Press **(DEF)** switch 2 times.
  - 5) Confirm indication of the A/C display shown at left.
  - 6) Wait 10 seconds before turning ignition switch off.

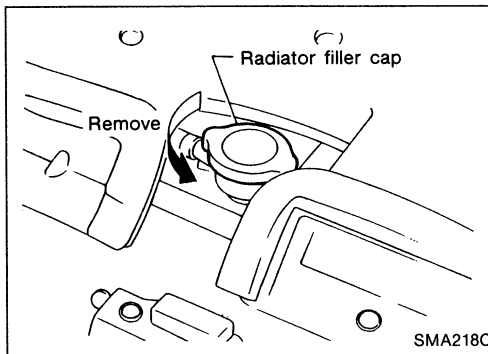

SMA218C






2. Open drain cock at the bottom of radiator, and remove radiator cap.

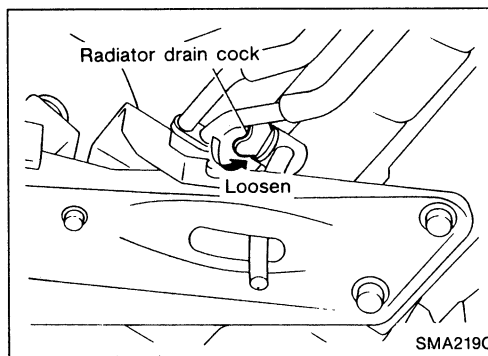

SMA219C

## ENGINE MAINTENANCE

### Changing Engine Coolant (Cont'd)

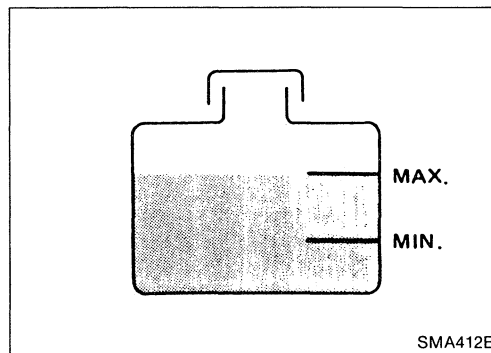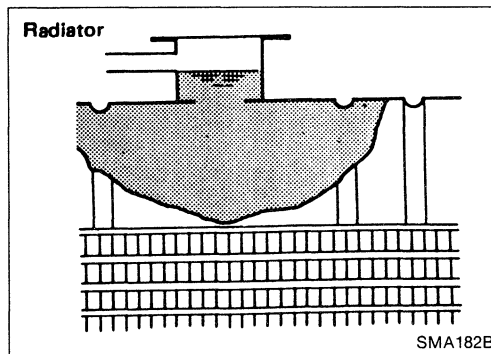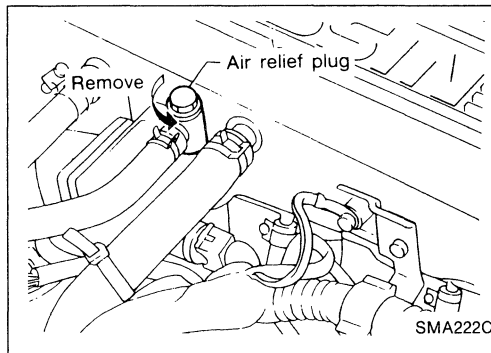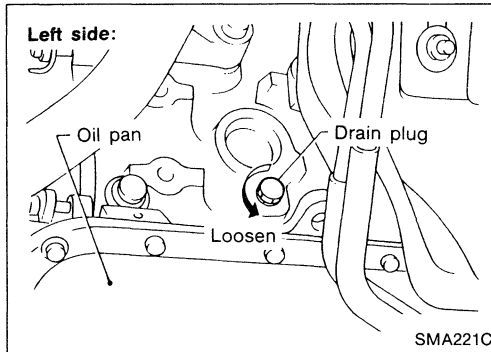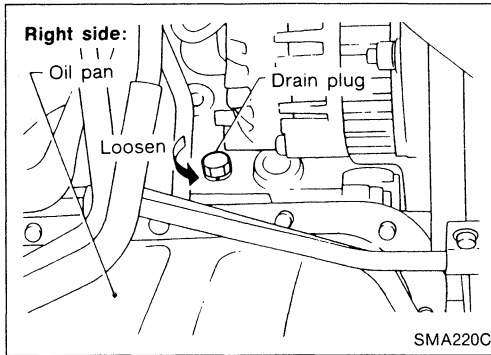

3. Remove drain plugs on both sides of cylinder block.
4. Close drain cock and tighten drain plugs securely.

- **Apply sealant to the drain plug thread.**

: 34 - 44 N·m

(3.5 - 4.5 kg-m, 25 - 33 ft-lb)

5. Open air relief plug.
6. Fill radiator with water and close air relief plug.
7. Start engine and warm it up sufficiently.
8. Stop engine and wait until it cools down.
9. Repeat step 3 through step 8 until clear water begins to drain from radiator.
10. Drain water.

11. Open air relief plug again.
12. Fill radiator with coolant up to specified level.  
Follow instructions attached to anti-freeze container for mixing ratio of anti-freeze to water.

**Coolant capacity (Without reservoir tank):**

8.35 ℓ (8-7/8 US qt, 7-3/8 Imp qt)

**Reservoir tank:**


0.8 ℓ (7/8 US qt, 3/4 Imp qt)

**Pour coolant through coolant filler neck slowly to allow air in system to escape.**

13. Remove reservoir tank, drain coolant, then clean reservoir tank.
14. Fill reservoir tank with coolant up to "MAX" level.
15. Close air relief plug again.
16. Run engine and warm it up.
17. Stop engine and cool it down, then add coolant as necessary.




## ENGINE MAINTENANCE

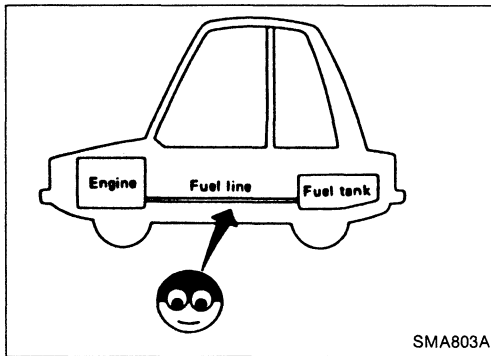

### Checking Fuel Lines

Inspect fuel lines and tank for improper attachment and for leaks, cracks, damage, loose connections, chafing and deterioration.

If necessary, repair or replace malfunctioning parts.

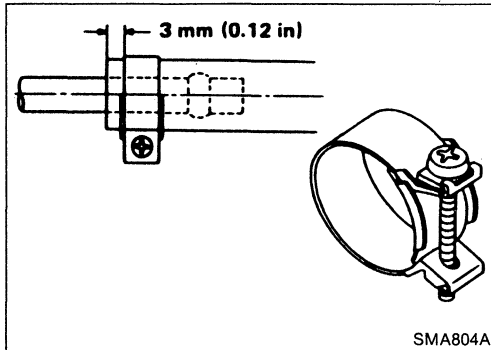

### CAUTION:

Tighten high-pressure rubber hose clamp so that clamp end is 3 mm (0.12 in) from hose end.


Tightening torque specifications are the same for all rubber hose clamps.

Ensure that screw does not contact adjacent parts.


### Changing Fuel Filter

#### WARNING:

Before removing fuel filter, release fuel pressure from fuel line to eliminate danger.

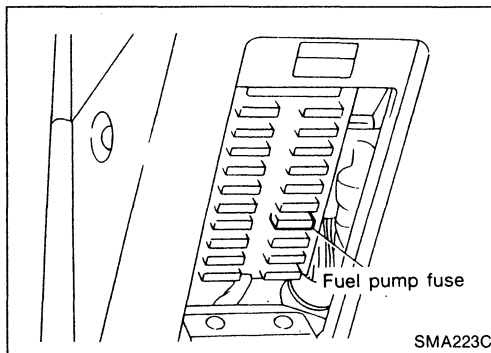


1. Remove fuse for fuel pump.
2. Start engine.
3. After engine stalls, crank engine two or three times to make sure that fuel pressure is released.
4. Turn ignition switch off and install fuse for fuel pump.

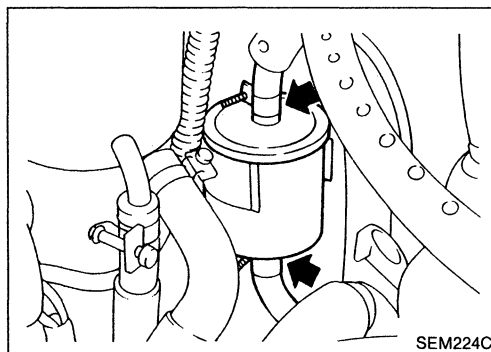


5. Loosen fuel hose clamps.
  6. Replace fuel filter.
- Be careful not to spill fuel over engine compartment. Place a shop towel to absorb fuel.
  - Use a high-pressure type fuel filter. Do not use a synthetic resinous fuel filter.
  - When tightening fuel hose clamps, refer to "Checking Fuel Lines".
  - Erase memory (Code No. 22) from control unit. (Refer to EF & EC section.)

# ENGINE MAINTENANCE

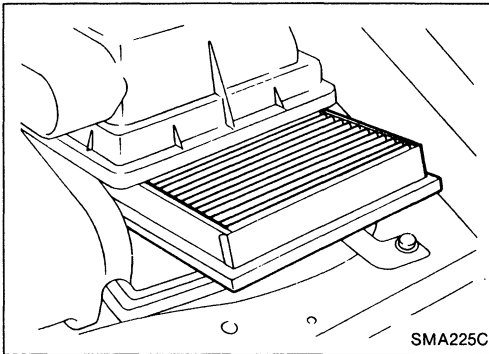

## Changing Air Cleaner Filter

The viscous paper type filter does not need cleaning between renewals.

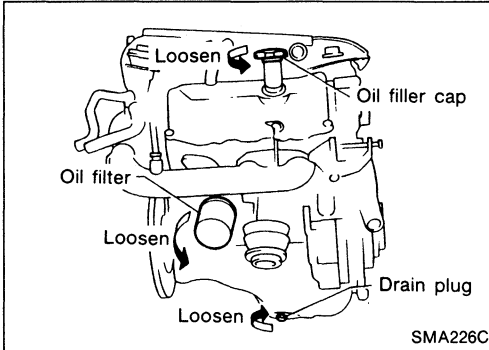

## Changing Engine Oil

### WARNING:

Be careful not to burn yourself, as the engine oil is hot.

1. Warm up engine, and check for oil leakage from engine components.
2. Remove drain plug and oil filler cap.
3. Drain oil and refill with new engine oil.

### Oil capacity (Refill):

#### With oil filter

4.4 ℓ (4-5/8 US qt, 3-7/8 Imp qt)

#### Without oil filter

4.0 ℓ (4-1/4 US qt, 3-1/2 Imp qt)

### CAUTION:


- Be sure to clean drain plug and install with new washer.

#### Oil pan drain plug:


☞: 29 - 39 N·m

(3.0 - 4.0 kg-m, 22 - 29 ft-lb)

- Use recommended engine oil.

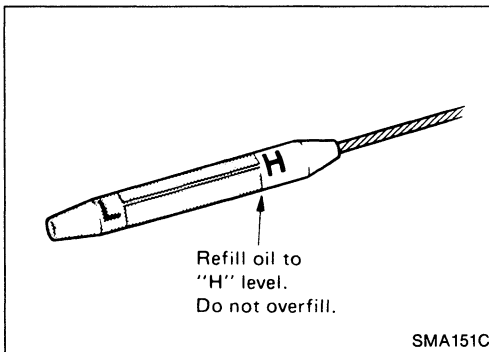

4. Check oil level.
5. Start engine and check area around drain plug and oil filter for oil leakage.
6. Run engine for a few minutes, then turn it off. After several minutes, check oil level.

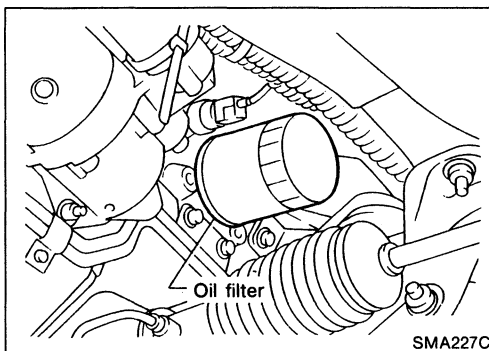

## Changing Oil Filter


1. Remove oil filter with a suitable tool.

### WARNING:


Be careful not to burn yourself, as the engine and engine oil are hot.

## ENGINE MAINTENANCE

### Changing Oil Filter (Cont'd)

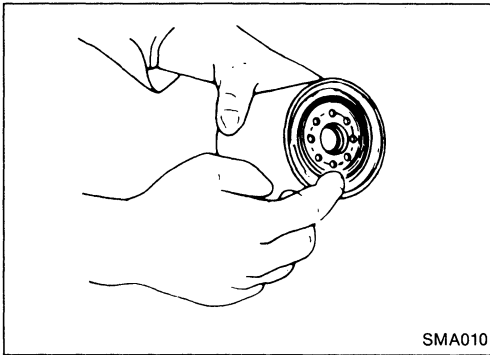


2. Before installing a new oil filter, clean the oil filter mounting surface on cylinder block, and coat the oil filter rubber seal with a little engine oil.

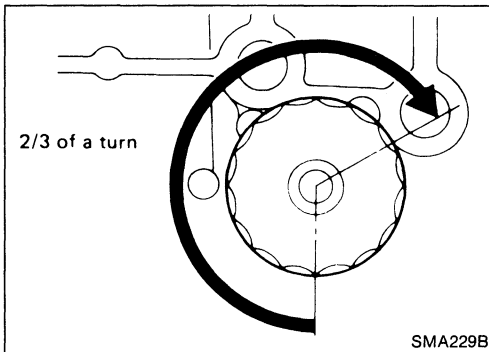


3. Screw in the oil filter until a slight resistance is felt, then tighten additionally more than 2/3 turn.
4. Add engine oil.

**Refer to Changing Engine Oil.**

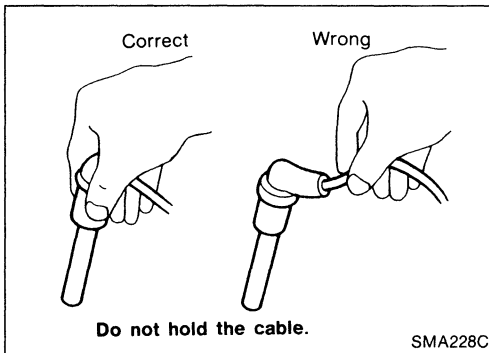

### Changing Spark Plugs


1. Disconnect ignition wires from spark plugs at boot. Do not pull on the wire.

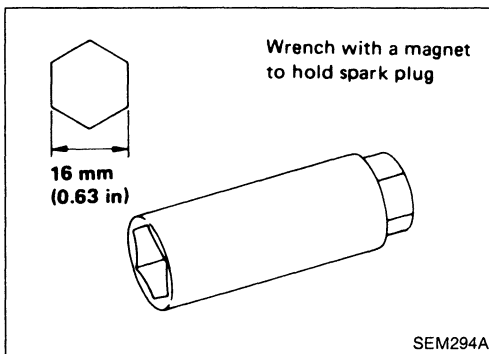

2. Remove spark plugs with suitable spark plug wrench.

#### Spark plug (Platinum-tipped type):

Standard type	PFR6B-11
Hot type	PFR5B-11
Cold type	PFR7B-11

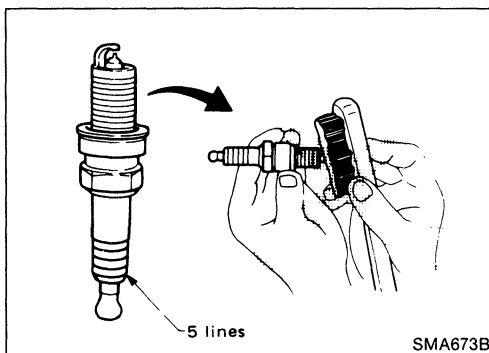

- Checking and adjusting plug gap are not required between renewals.
- Do not use a wire brush for cleaning.
- If plug tip is covered with carbon, spark plug cleaner may be used.

#### Cleaner air pressure:

Less than 588 kPa (6 kg/cm<sup>2</sup>, 85 psi)

#### Cleaning time:


Less than 20 seconds

## ENGINE MAINTENANCE


### Changing Spark Plugs (Cont'd)

3. Install spark plugs. Reconnect ignition wires according to Nos. indicated on them.

**Spark plug:**

: 20 - 29 N·m


(2.0 - 3.0 kg-m, 14 - 22 ft-lb)

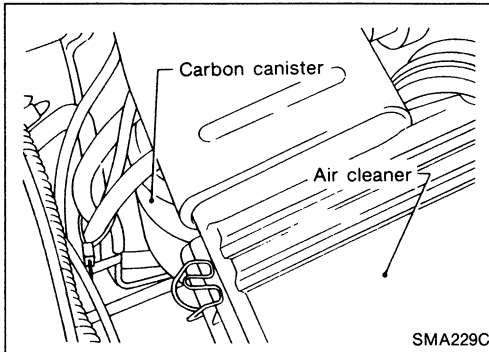


### Checking Vapor Lines

1. Visually inspect vapor lines for improper attachment and for cracks, damage, loose connections, chafing and deterioration.
2. Inspect vacuum relief valve of fuel tank filler cap for clogging, sticking, etc.

**Refer to “EVAPORATIVE EMISSION CONTROL SYSTEM” in EF & EC section.**

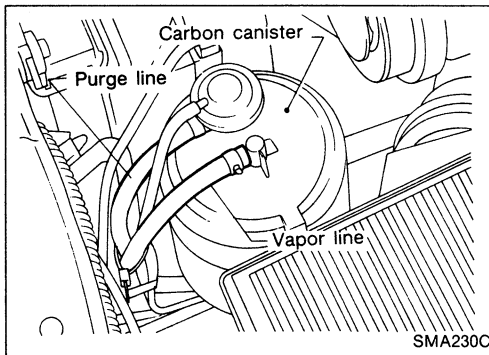


## CHASSIS AND BODY MAINTENANCE

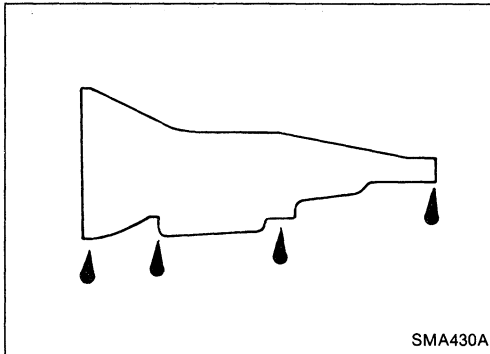

### Checking A/T Fluid

1. Check for fluid leakage.

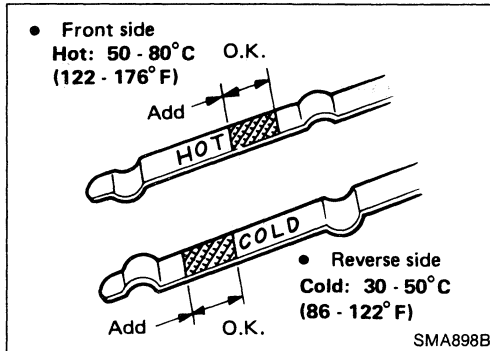


2. If leakage is found, check fluid level.  
Fluid level should be checked using "HOT" range on dipstick at fluid temperatures of 50 to 80°C (122 to 176°F) after vehicle has been driven approximately 5 minutes in urban areas after engine is warmed up. But it can be checked at fluid temperatures of 30 to 50°C (86 to 122°F) using "COLD" range on dipstick for reference after engine is warmed up and before driving. However, fluid level must be rechecked using "HOT" range.
- 1) Park vehicle on level surface and set parking brake.
- 2) Start engine and then move selector lever through each gear range, ending in "P".
- 3) Check fluid level with engine idling.
- 4) Remove dipstick and wipe it clean with lint-free paper.
- 5) Reinsert dipstick into charging pipe as far as it will go.
- 6) Remove dipstick and note reading. If level is at low side of either range, add fluid to the charging pipe.

**Do not overfill.**




3. Check fluid condition.  
Check fluid for contamination. If fluid is very dark or smells burned, or contains frictional material (clutches, band, etc.), check operation of A/T.  
Refer to section AT for checking operation of A/T.

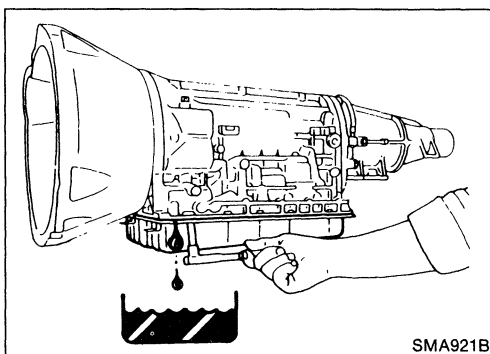

### Changing A/T Fluid


1. Drain fluid by removing oil pan.
2. Replace gasket with new one.
3. Refill with fluid and then check fluid level.

**Oil capacity (With torque converter):**  
8.3 ℓ (8-3/4 US qt, 7-1/4 Imp qt)

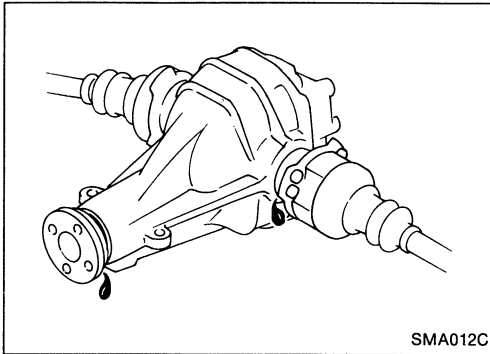

## Checking Differential Gear Oil


1. Check differential carrier for oil leakage.

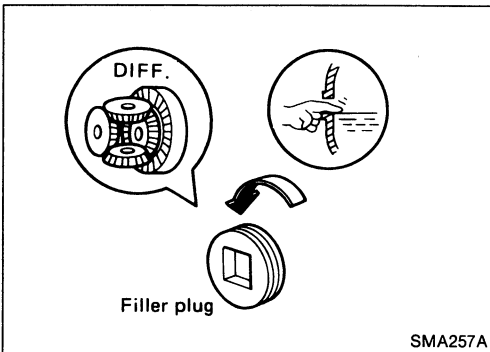

2. If leakage is found, check oil level.

### Filler plug:

: 59 - 98 N·m (6 - 10 kg-m, 43 - 72 ft-lb)

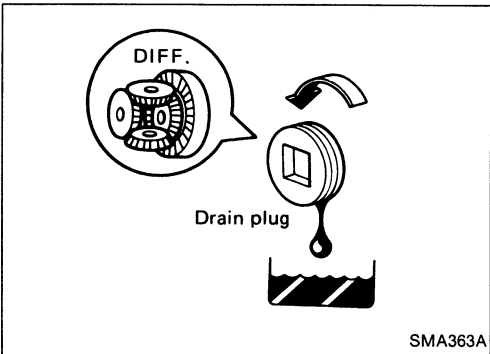

## Changing Differential Gear Oil


1. Drain oil and refill with new gear oil.
2. Check oil level.

### Oil capacity:

1.3 ℓ (2-3/4 US pt, 2-1/4 Imp pt)


### Drain plug:

: 39 - 59 N·m (4 - 6 kg-m, 29 - 43 ft-lb)

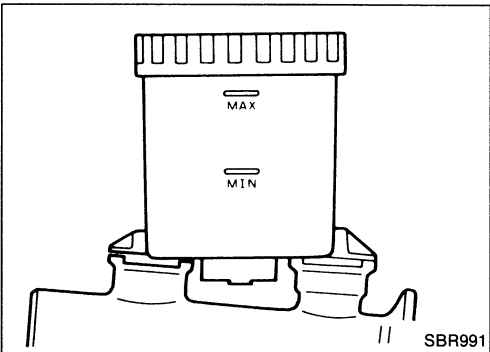

## Checking Brake Fluid Level and Leaks


- If fluid level is extremely low, check brake system for leaks.

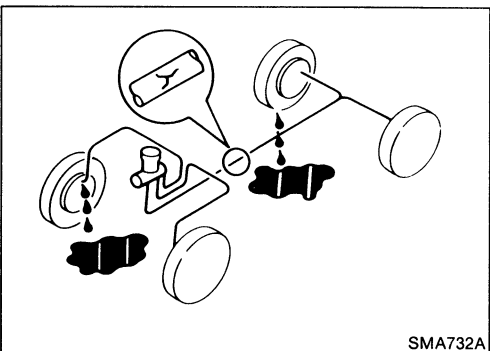

## Checking Brake Lines and Cables

- Check brake fluid lines and parking brake cables for improper attachment and for leaks, chafing, abrasions, deterioration, etc.

# CHASSIS AND BODY MAINTENANCE

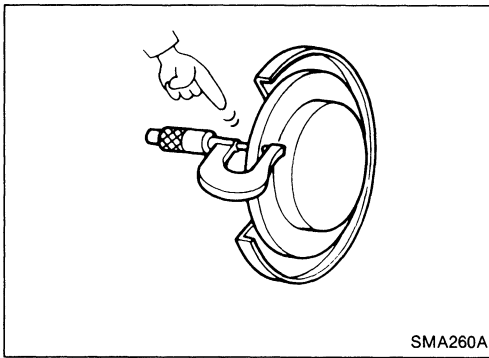

## Checking Disc Brake


- Check condition of disc brake components.

### ROTOR

- Check condition and thickness.


Unit: mm (in)

	Front	Rear
Standard thickness	22.0 (0.866)	10.0 (0.394)
Minimum thickness	20.0 (0.787)	9.0 (0.354)

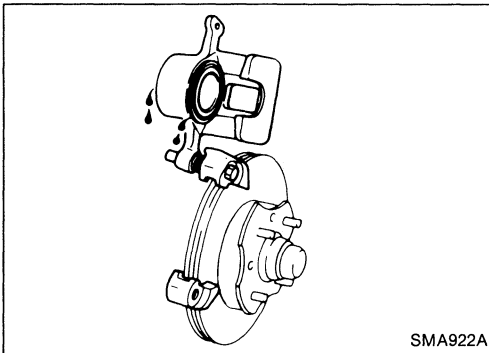

### CALIPER

- Check operation and for leakage.

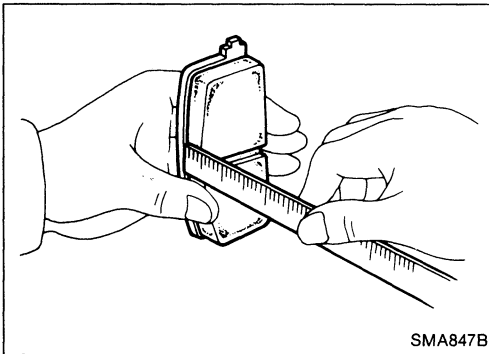

### PAD

- Check for wear or damage.


Unit: mm (in)

	Front	Rear
Standard thickness	11.0 (0.433)	10.0 (0.394)
Minimum thickness	2.0 (0.079)	

## Balancing Wheels


- Adjust wheel balance using road wheel center.  
**Wheel balance (Maximum allowable unbalance at rim flange):**  
**Refer to S.D.S.**  
**Tire balancing weight: Refer to S.D.S.**

# CHASSIS AND BODY MAINTENANCE

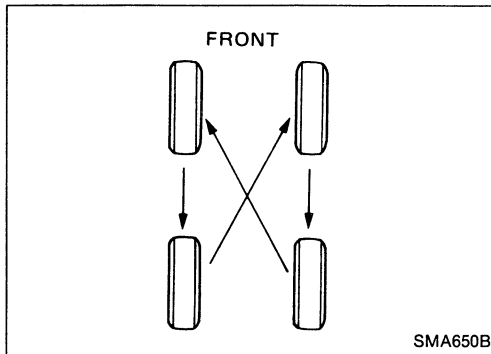

## Tire Rotation

- Do not include the T-type spare tire when rotating the tires.
- Wheel nuts:  
☐: 103 - 123 N·m (10.5 - 12.5 kg·m, 76 - 90 ft·lb)

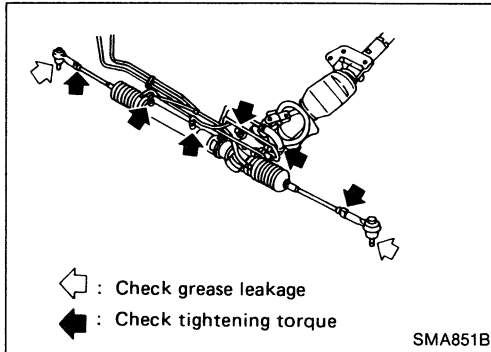


## Checking Steering Gear and Linkage

### STEERING GEAR

- Check gear housing and boots for looseness, damage or grease leakage.
- Check connection with steering column for looseness.

### STEERING LINKAGE

- Check ball joint, dust cover and other component parts for looseness, wear, damage or grease leakage.

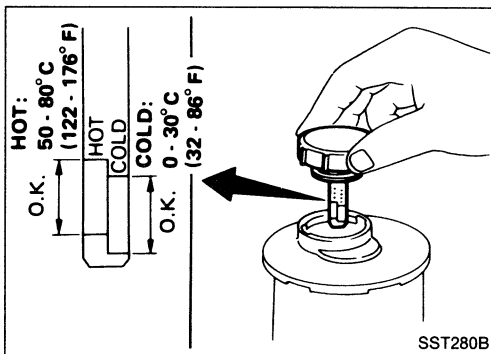


## Checking Fluid Level

Check fluid level.


Fluid level should be checked using "HOT" range on dipstick at fluid temperatures of 50 to 80°C (122 to 176°F) or using "COLD" range on dipstick at fluid temperatures of 0 to 30°C (32 to 86°F).

### CAUTION:

- Do not overfill.
- Recommended fluid is Automatic Transmission Fluid "DEXRON™" type.

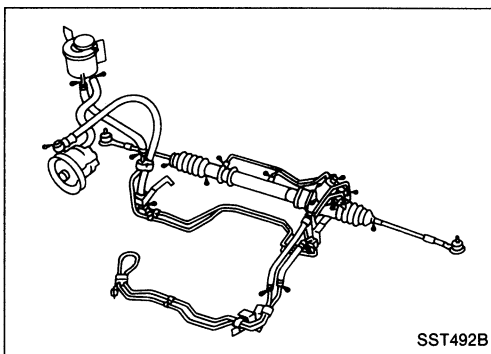

- Check lines for improper attachment, leaks, cracks, damage, loose connections, chafing and deterioration.

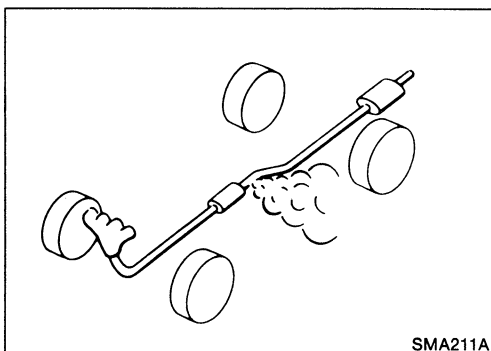


## Checking Exhaust System

- Check exhaust pipes, muffler and mounting for improper attachment and for leaks, cracks, damage, loose connections, chafing and deterioration.



# CHASSIS AND BODY MAINTENANCE

## Lubricating Locks, Hinges and Hood Latches

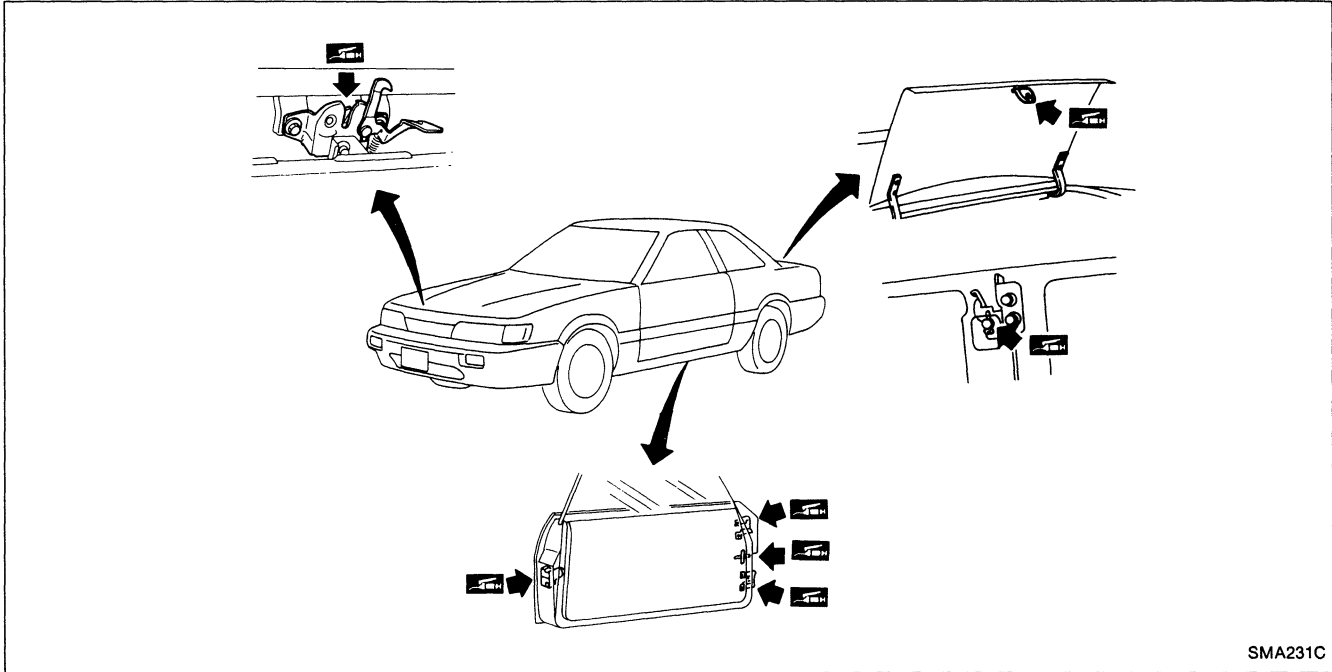


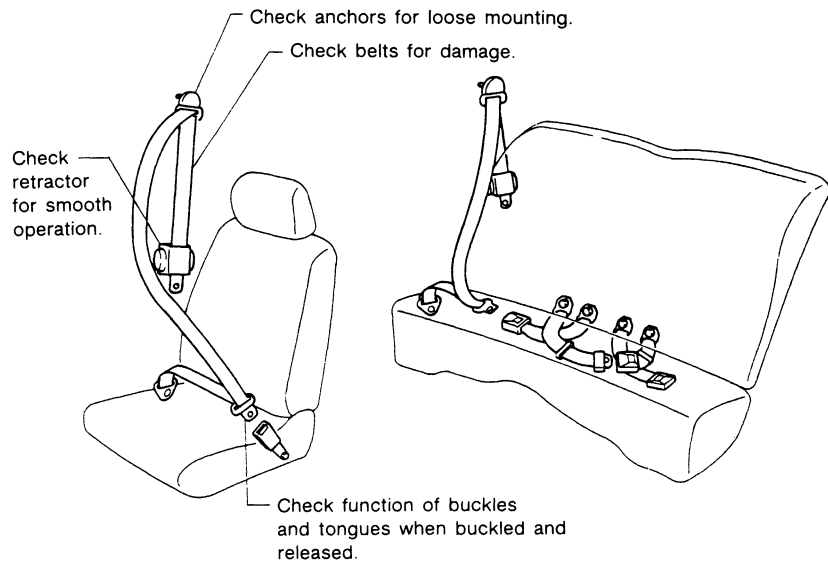
SMA231C

## Checking Seat Belts, Buckles, Retractors, Anchors and Adjusters

### CAUTION:

1. All seat belt assemblies, including retractors and attaching hardware such as guide rail set, etc., should be inspected after any collision. Nissan recommends that all seat belt assemblies in use during a collision be replaced unless the collision was minor and the belts show no damage and continue to operate properly. Seat belt assemblies not in use during a collision should also be inspected and replaced if either damage or improper operation is noted.
2. If the condition of any component of seat belt assembly is questionable, do not have it repaired, but replaced as seat belt assembly.
3. If webbing is cut, frayed, or damaged, replace belt assembly.
4. Do not spill drinks, oil, etc. on inner lap belt buckle. Never oil tongue and buckle.
5. Use a genuine seat belt assembly.

 **Anchor bolt**  
43 - 55 N·m  
(4.4 - 5.6 kg-m, 32 - 41 ft-lb)



SMA232C

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Engine Maintenance

### INSPECTION AND ADJUSTMENT

#### Drive belt deflection

Unit: mm (in)

	Used belt deflection		Deflection of new belt
	Limit	Deflection after adjustment	
Alternator	12 (0.47)	7.5 - 8.5 (0.295 - 0.335)	6.5 - 7.5 (0.256 - 0.295)
Air conditioner compressor	14 (0.55)	9 - 10 (0.35 - 0.39)	8 - 9 (0.31 - 0.35)
Power steering oil pump	20 (0.79)	14 - 16 (0.55 - 0.63)	12 - 14 (0.47 - 0.55)
Applied pushing force	98 N (10 kg, 22 lb)		

#### Oil capacity (Refill)

Unit: ℓ (US qt, Imp qt)

With oil filter	4.4 (4-5/8, 3-7/8)
Without oil filter	4.0 (4-1/4, 3-1/2)

#### Coolant capacity

Unit: ℓ (US qt, Imp qt)

Without reservoir tank	8.35 (8-7/8, 7-3/8)
Reservoir tank	0.8 (7/8, 3/4)

#### Spark plug

Standard type	PFR6B-11
Hot type	PFR5B-11
Cold type	PFR7B-11

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Chassis and Body Maintenance

### INSPECTION AND ADJUSTMENT

#### Front axle and front suspension (Unladen)\*

Camber	degree	—35' to 55'
Caster	degree	3°55' - 5°25'
Kingpin inclination	degree	11°55' - 13°25'
Toe-in	mm (in)	—1 to 1 (—0.04 to 0.04)
(Total toe-in)	degree	—5' to 5'
Front wheel turning angle		
Full turn		
Inside/outside	degree	40°30' - 44°30'/33°30'

\*: Fuel, radiator coolant and engine oil full.  
Spare tire, jack, hand tools and mats in designated positions.

#### Rear axle and rear suspension (Unladen)\*

Camber	degree	—1°5' to 20'
Toe-out	mm (in)	0.2 - 4.2 (0.008 - 0.165)
(Total toe-out)	degree	1' - 22'

\*: Fuel, radiator coolant and engine oil full.  
Spare tire, jack, hand tools and mats in designated positions.

#### Wheel bearing

	Front	Rear
Wheel bearing axle endplay limit mm (in)	0 (0)	0.05 (0.0020)
Wheel bearing lock nut		
Tightening torque N·m (kg-m, ft-lb)	34 - 39 (3.5 - 4.0, 25 - 29)	127 - 177 (13 - 18, 94 - 130)
Return angle degree	90°	—

### Brake

Unit: mm (in)

Disc brake	
Pad	
Standard thickness	
Front	11.0 (0.433)
Rear	10.0 (0.394)
Minimum thickness	
Front	2.0 (0.079)
Rear	2.0 (0.079)
Rotor	
Standard thickness	
Front	22.0 (0.866)
Rear	10.0 (0.394)
Minimum thickness	
Front	20.0 (0.787)
Rear	9.0 (0.354)
Pedal	
Free height	199 - 209 (7.83 - 8.23)
Free play	1 - 3 (0.04 - 0.12)
Depressed height [under force of 490 N (50 kg, 110 lb) with engine running]	110 (4.33) or more
Parking brake	
Number of notches [at pulling force 196 N (20 kg, 44 lb)]	8 - 9

#### Wheel balance

Wheel balance (Maximum allowable unbalance at rim flange)	g (oz)	10 (0.35)
Tire balance weight	g (oz)	5 - 60 (0.18 - 2.12) Spacing 5 (0.18)

## SERVICE DATA AND SPECIFICATIONS (S.D.S.)

### Chassis and Body Maintenance (Cont'd)

#### TIGHTENING TORQUE

Unit	N·m	kg·m	ft·lb
<b>Final drive</b>			
Drain plug	39 - 59	4 - 6	29 - 43
Filler plug	39 - 59	4 - 6	29 - 43
<b>Front axle and front suspension</b>			
Tie-rod lock nut	78 - 98	8.0 - 10.0	58 - 72
<b>Rear axle and rear suspension</b>			
Toe adjusting pin	98 - 118	10 - 12	72 - 87
<b>Brake system</b>			
Air bleed valve	7 - 9	0.7 - 0.9	5.1 - 6.5
Brake lamp switch lock nut	12 - 15	1.2 - 1.5	9 - 11
Brake booster input rod lock nut	16 - 22	1.6 - 2.2	12 - 16
<b>Wheel and tire</b>			
Wheel nut	103 - 123	10.5 - 12.5	76 - 90

# ENGINE MECHANICAL

## SECTION **EM**

**EM**

### CONTENTS

PRECAUTIONS.....	EM- 2
PREPARATION.....	EM- 3
OUTER COMPONENT PARTS .....	EM- 6
COMPRESSION PRESSURE.....	EM- 8
OIL PAN .....	EM- 9
TIMING BELT .....	EM-13
OIL SEAL REPLACEMENT .....	EM-20
CYLINDER HEAD .....	EM-22
ENGINE REMOVAL.....	EM-39
CYLINDER BLOCK.....	EM-42
SERVICE DATA AND SPECIFICATIONS (S.D.S.).....	EM-54


## PRECAUTIONS

### Supplemental Restraint System “AIR BAG”

The Infiniti M30 has a Supplemental Restraint System “Air Bag”, to help reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag (located in the center of the steering wheel), five sensors, a control unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the BF section of this Service Manual.

#### WARNING:

- a. To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized INFINITI dealer.
- b. Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- c. All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation and related components are located in the steering column, center console, dash, upper radiator core support and front fenders. Do not use electrical test equipment on these circuits.



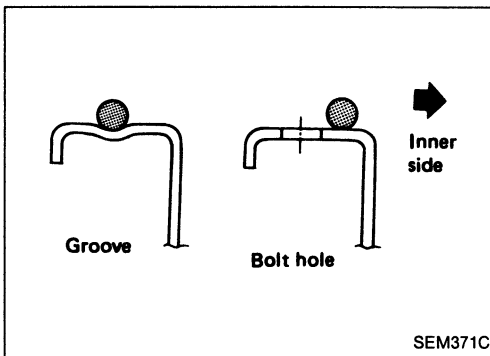





### Liquid Gasket Application Procedure






- a. Before applying liquid gasket, use a scraper to remove all traces of old liquid gasket from mating surface.
- b. Apply a continuous bead of liquid gasket to mating surfaces. (Use Genuine Liquid Gasket or equivalent.)
  - Be sure liquid gasket is 3.5 to 4.5 mm (0.138 to 0.177 in) wide (for oil pan).
  - Be sure liquid gasket is 2.0 to 3.0 mm (0.079 to 0.118 in) wide (in areas except oil pan).
- c. Apply liquid gasket to inner surface around hole perimeter area.  
(Assembly should be done within 5 minutes after coating.)
- d. Wait at least 30 minutes before refilling engine oil and engine coolant.

# PREPARATION
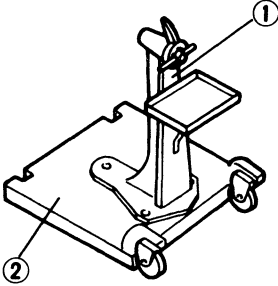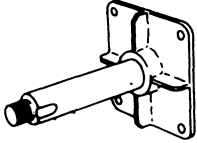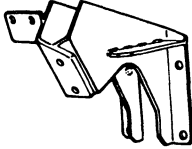
## SPECIAL SERVICE TOOLS

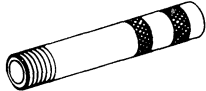Tool number (Kent-Moore No.) Tool name	Description	
ST0501S000 ( — ) Engine stand assembly ①ST05011000 ( — ) Engine stand ②ST05012000 ( — ) Base	Disassembling and assembling	
KV10106500 ( — ) Engine stand shaft		
KV10110001 ( — ) Engine sub- attachment		
ST10120000 (J24239-01) Cylinder head bolt wrench	Loosening and tightening cylinder head bolt	
KV10110600 (J33986) Valve spring compressor	Disassembling and assembling valve components	
KV10107501 ( — ) Valve oil seal drift	Installing valve oil seal	

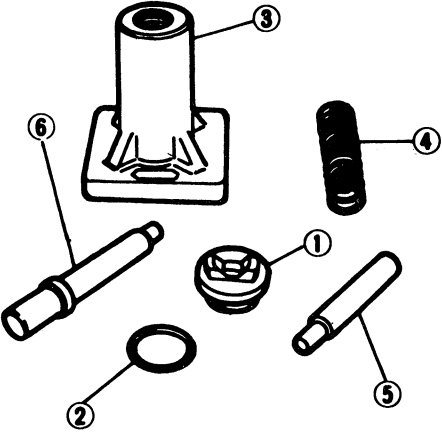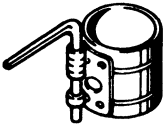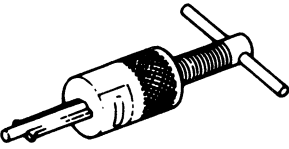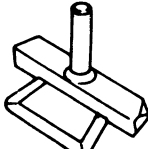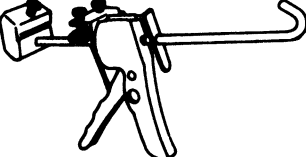



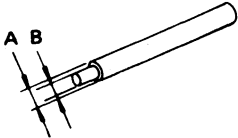
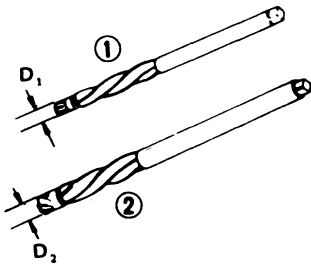
## PREPARATION

Tool number (Kent-Moore No.) Tool name	Description
KV10110300 ( — ) Piston pin press stand assembly ①KV10110310 ( — ) Cap ②KV10110330 ( — ) Spacer ③ST13030020 ( — ) Press stand ④ST13030030 ( — ) Spring ⑤KV10110340 ( — ) Drift ⑥KV10110320 ( — ) Center shaft	Disassembling and assembling piston with connecting rod 
EM03470000 (J8037) Piston ring compressor	Installing piston assembly into cylinder bore 
ST16610001 (J23907) Pilot bushing puller	Removing crankshaft pilot bushing 
KV10111100 ( — ) Seal cutter	Removing oil pan 
WS39930000 ( — ) Tube presser	Pressing the tube of liquid gasket 




# PREPARATION
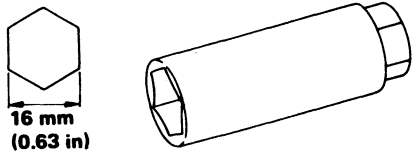
## COMMERCIAL SERVICE TOOLS

Tool name	Description
Spark plug wrench	Removing and installing spark plug 
Pulley holder	Holding camshaft pulley while tightening or loosening camshaft bolt 
Valve seat cutter set	Finishing valve seat dimensions 
Piston ring expander	Removing and installing piston ring 
Valve guide drift	Removing and installing valve guide <p style="margin-left: 40px;"> <b>Intake &amp; Exhaust:</b>  <b>A = 10.5 mm (0.413 in) dia.</b>  <b>B = 6.6 mm (0.260 in) dia.</b> </p> 
Valve guide reamer	Reaming valve guide ① or hole for oversize valve guide ② <p style="margin-left: 40px;"> <b>Intake:</b>  <b>D<sub>1</sub> = 7.0 mm (0.276 in) dia.</b>  <b>D<sub>2</sub> = 11.2 mm (0.441 in) dia.</b>  <b>Exhaust:</b>  <b>D<sub>1</sub> = 8.0 mm (0.315 in) dia.</b>  <b>D<sub>2</sub> = 12.2 mm (0.480 in) dia.</b> </p> 


# OUTER COMPONENT PARTS

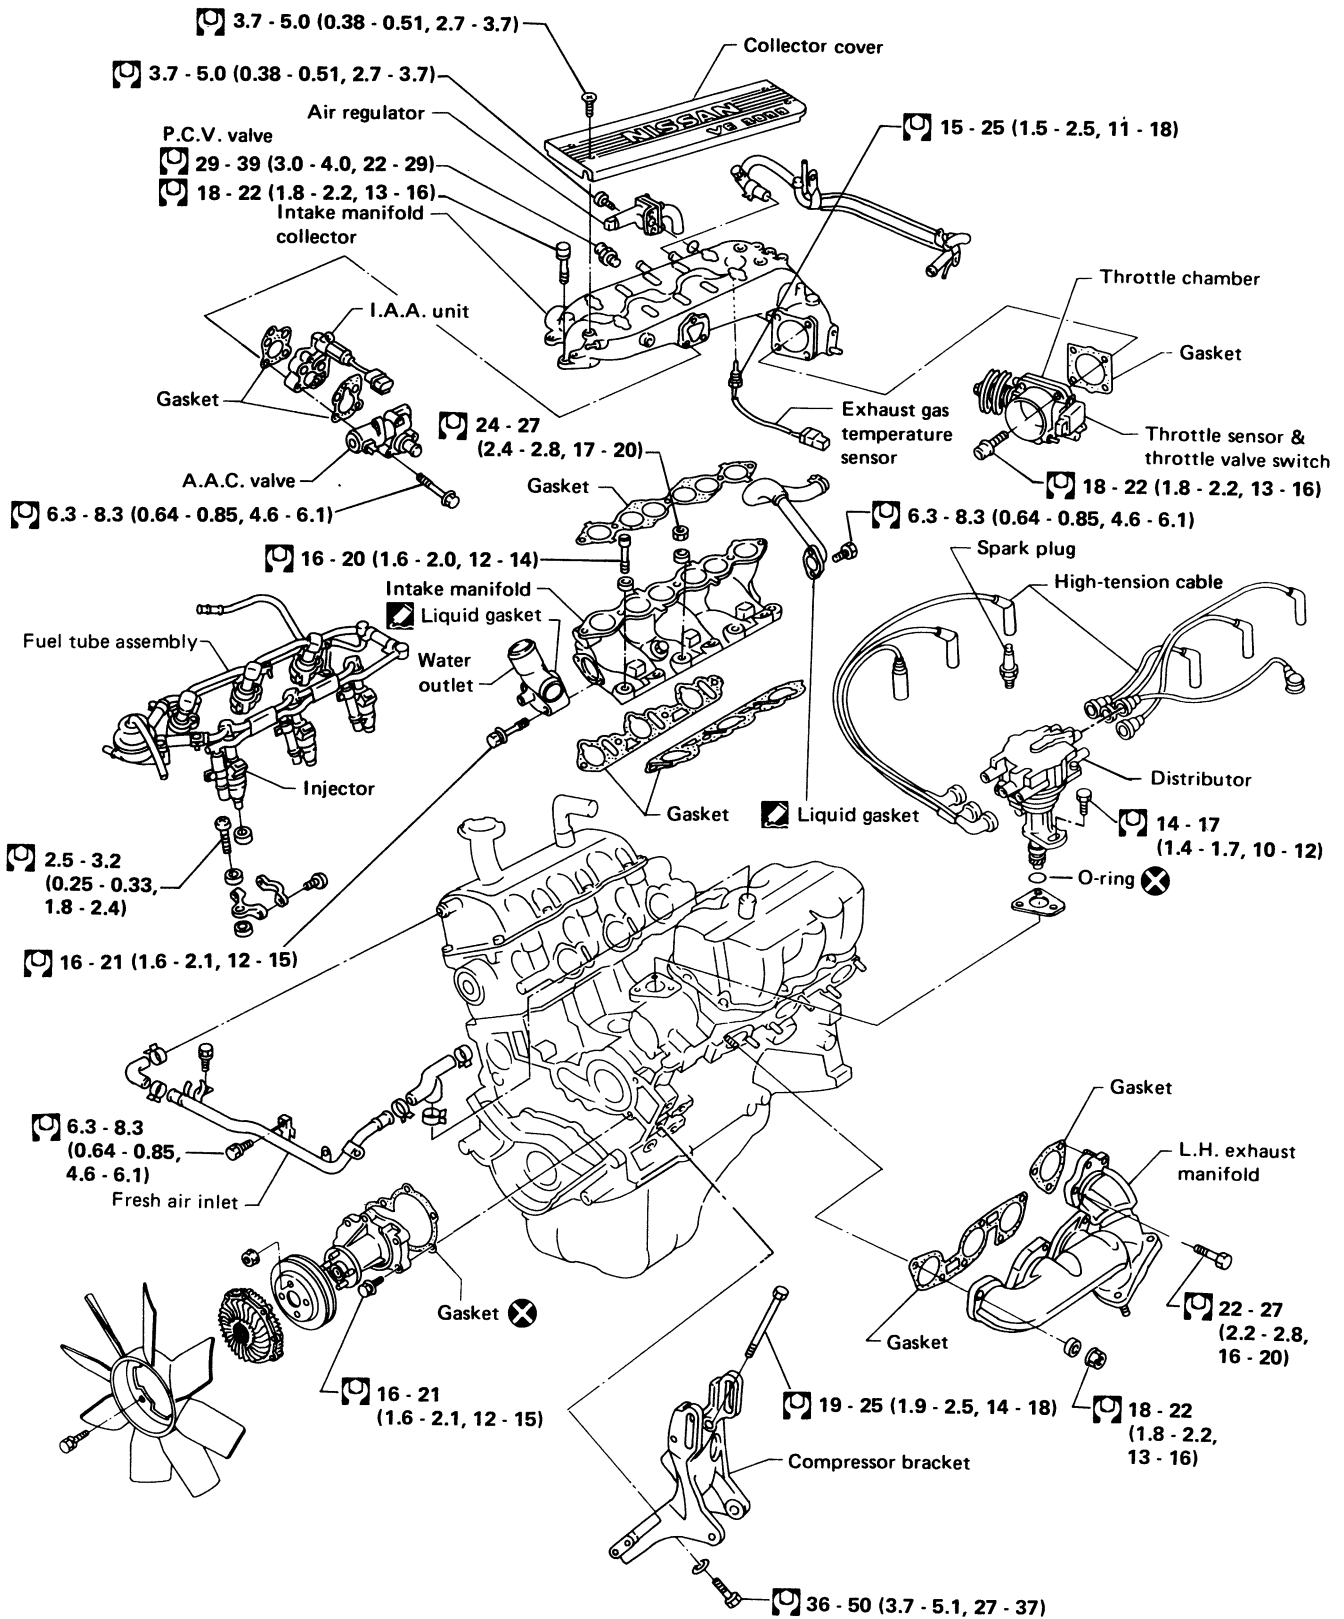

Ⓜ : N·m (kg·m, ft·lb)

SEM853C

# OUTER COMPONENT PARTS


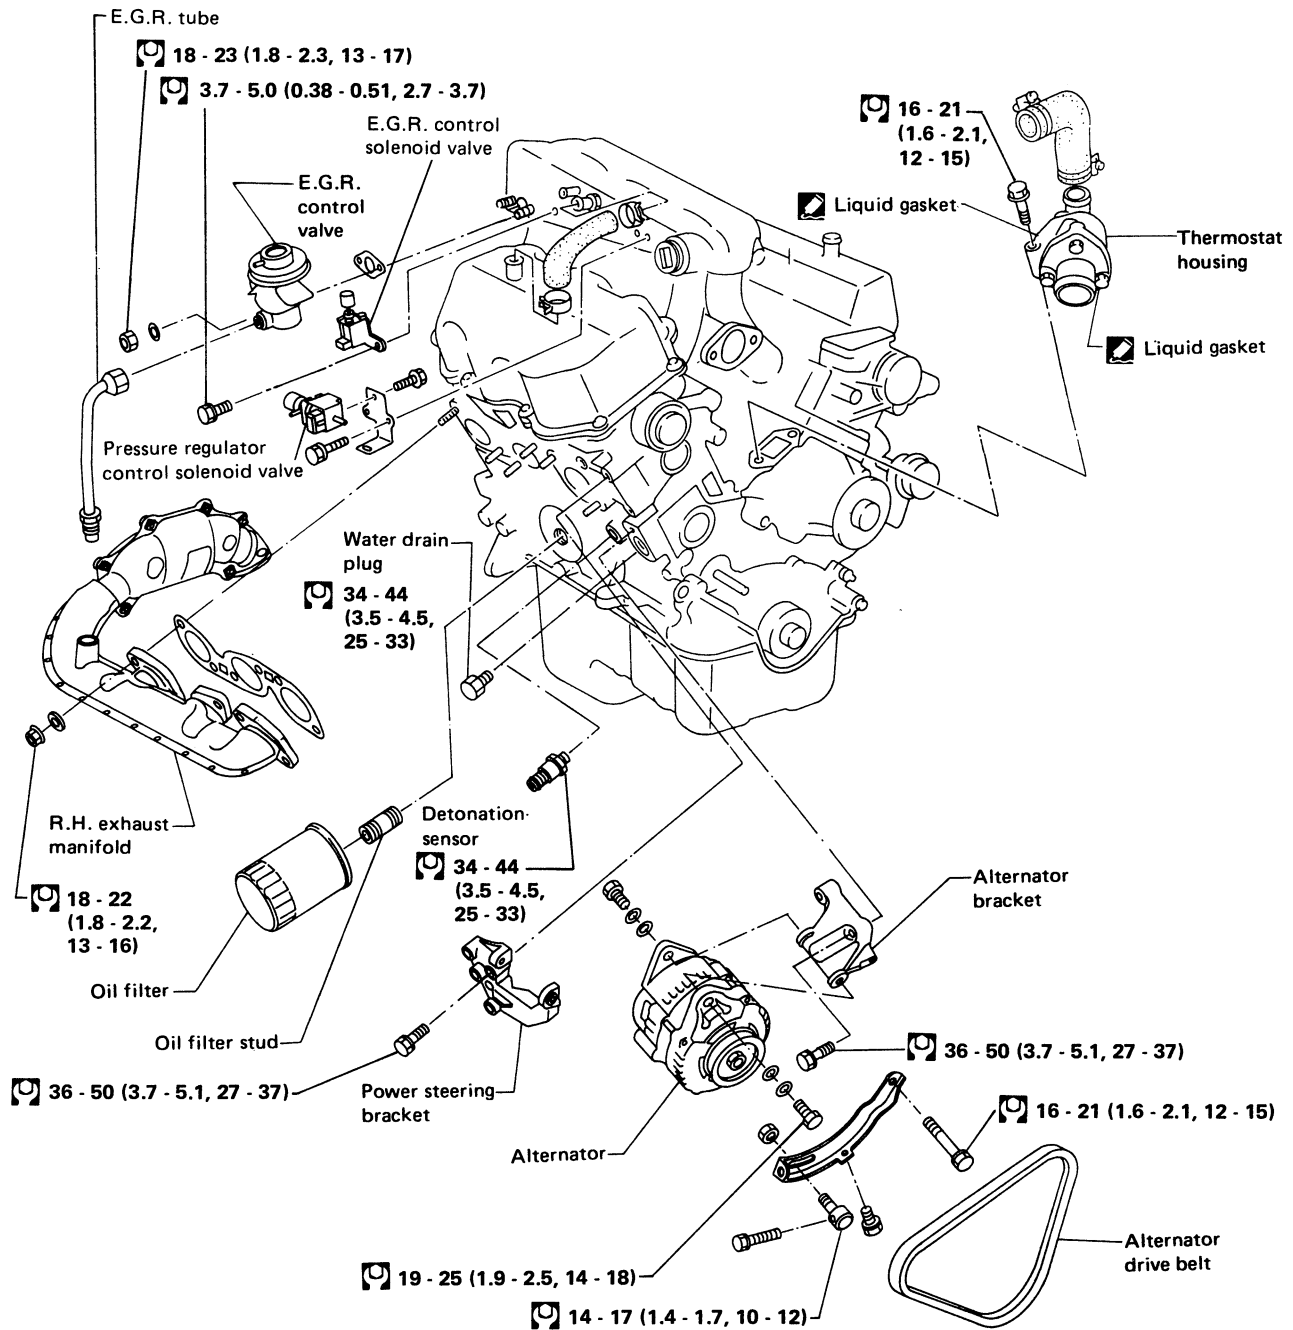


: N·m (kg·m, ft·lb)

# COMPRESSION PRESSURE

## Measurement of Compression Pressure

1. Warm up engine.
2. Turn ignition switch off.
3. Release fuel pressure.  
Refer to "Releasing Fuel Pressure" in section EF & EC.
4. Remove all spark plugs.
5. Disconnect distributor center cable.

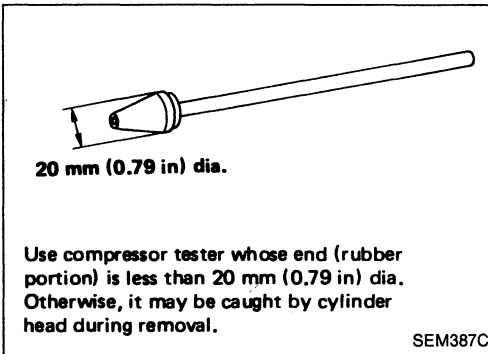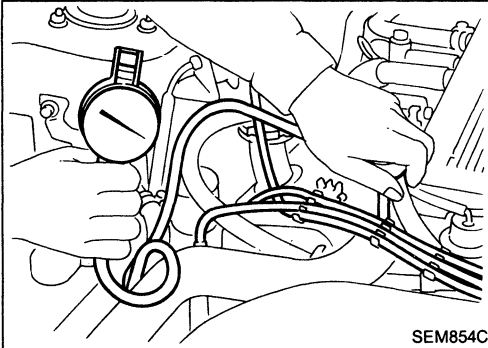

6. Attach a compression tester to No. 1 cylinder.
  7. Depress accelerator pedal fully to keep throttle valve wide open.
  8. Crank engine and record highest gauge indication.
  9. Repeat the measurement on each cylinder as shown above.
- **Always use a fully-charged battery to obtain specified engine revolution.**

**Compression pressure: kPa (kg/cm<sup>2</sup>, psi)/300 rpm**

**Standard**

**1,196 (12.2, 173)**

**Minimum**

**883 (9.0, 128)**

**Difference limit between cylinders**


**98 (1.0, 14)**

10. If cylinder compression in one or more cylinders is low, pour a small amount of engine oil into cylinders through spark plug holes and retest compression.
- **If adding oil helps compression, piston rings may be worn or damaged. If so, replace piston rings after checking piston.**
  - **If pressure stays low, a valve may be sticking or seating improperly. Inspect and repair valve and valve seat. (Refer to S.D.S.) If valve or valve seat is damaged excessively, replace them.**
  - **If compression in any two adjacent cylinders is low and if adding oil does not help compression, there is leakage past the gasket surface. If so, replace cylinder head gasket.**


# OIL PAN

## Removal


1. Remove engine lower cover.
2. Drain engine oil.
3. Remove engine oil level gauge.

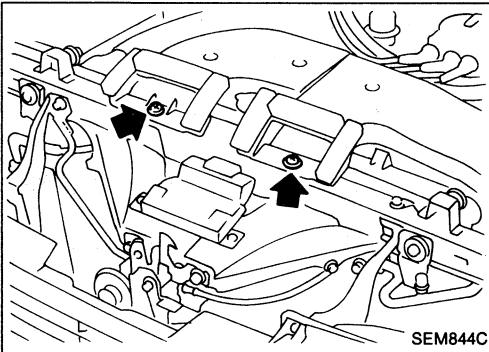


4. Remove air duct.

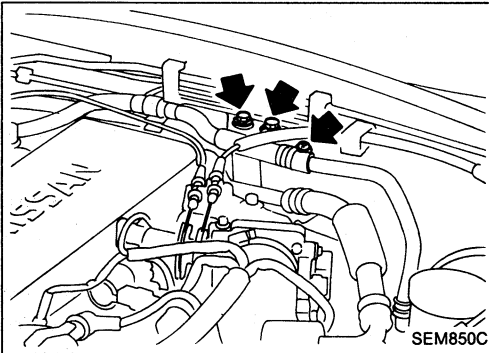

5. Remove air conditioner hose fixing bolt and brake booster vacuum hose fixing bolt.

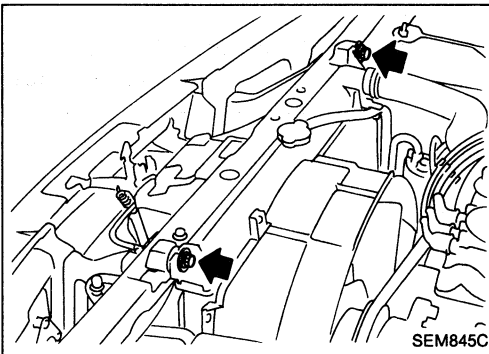


6. Remove radiator fitting bolts.
7. Remove A/T oil cooler tube fitting bolts.

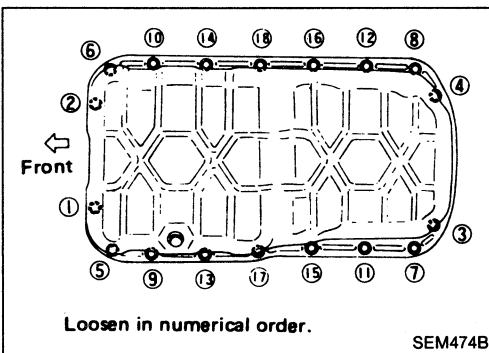

8. Remove oil pan bolts.

## OIL PAN


### Removal (Cont'd)

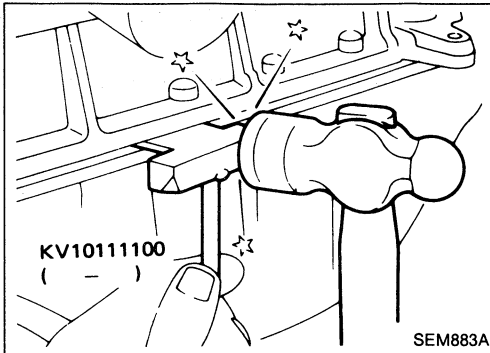


9. Remove oil pan.

(1) Insert Tool between cylinder block and oil pan.


- Do not drive seal cutter into oil pump or rear oil seal retainer portion, or aluminum mating surfaces will be damaged.
- Do not insert screwdriver, or oil pan flange will be deformed.

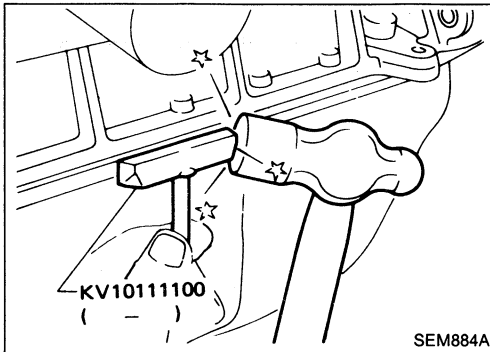


(2) Slide Tool by tapping its side with a hammer, and remove oil pan.

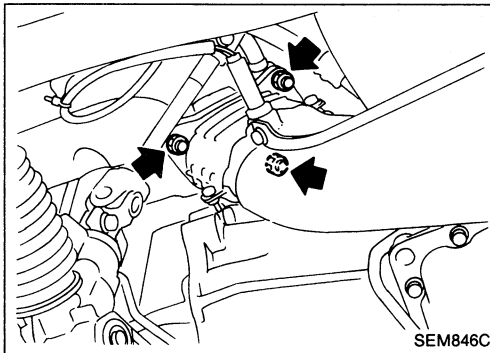

10. Loosen exhaust front tube fitting bolts.

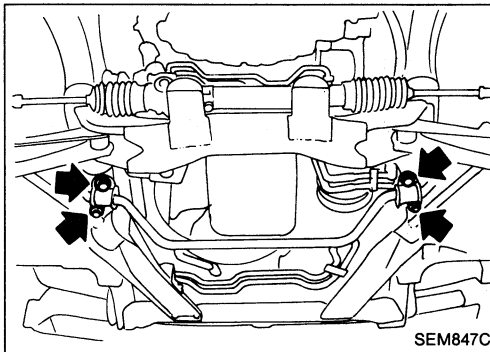

11. Remove front stabilizer fixing brackets.

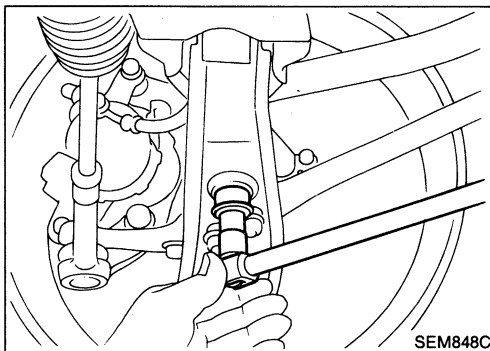


12. Remove right side front stabilizer fixing bolt.


13. Loosen left side front stabilizer fixing bolt.

## OIL PAN


### Removal (Cont'd)

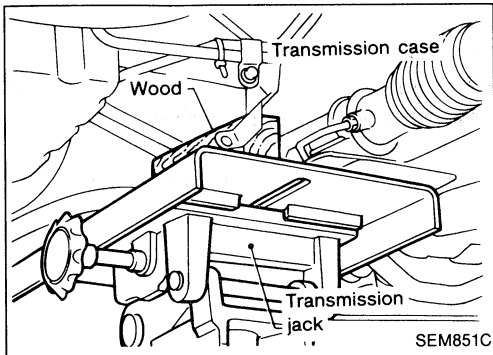


14. Set a suitable transmission jack under the transmission case.
  - Place a suitable piece of wood between transmission jack and transmission case.

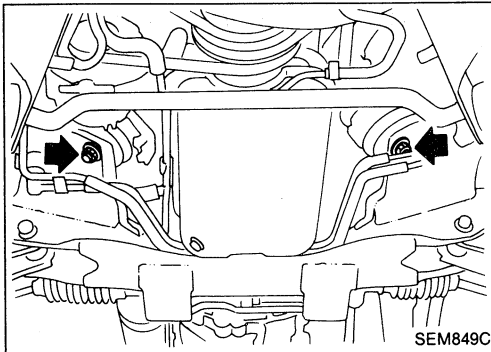

15. Remove engine mounting bolts.
16. Slowly raise transmission jack until oil pan can be removed.

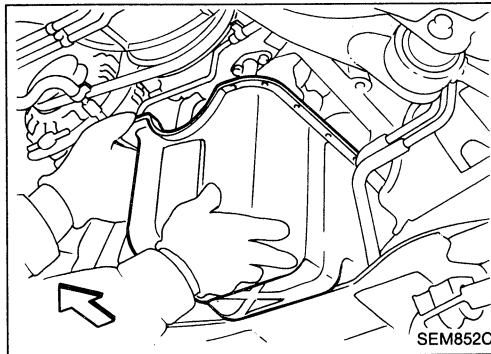


17. Remove oil pan from vehicle.

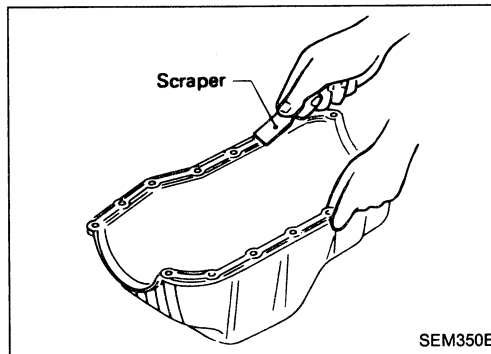

### Installation




1. Before installing oil pan, remove all traces of liquid gasket from mating surface using a scraper.
  - Also remove traces of liquid gasket from mating surface of cylinder block.

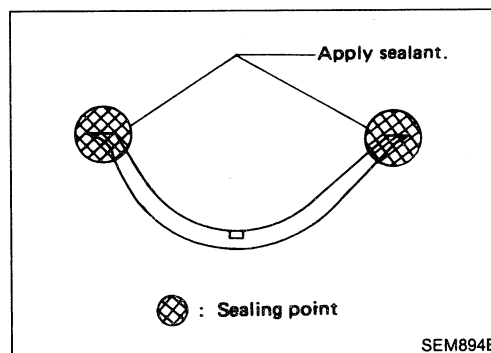

2. Apply sealant to oil pump gasket and rear oil seal retainer gasket.

# OIL PAN

## Installation (Cont'd)

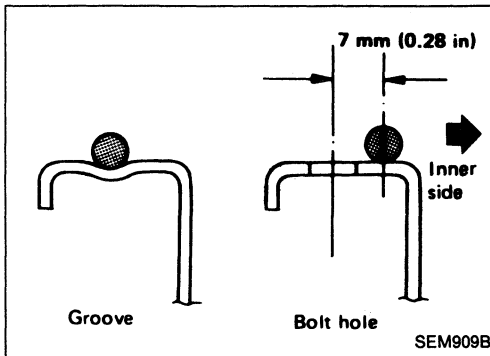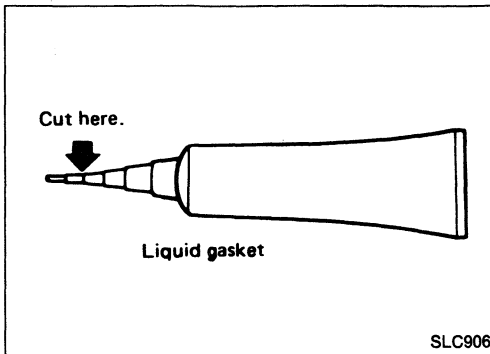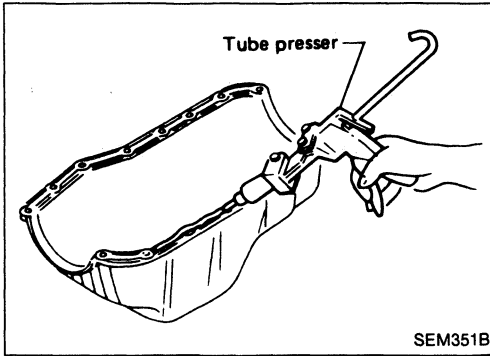

3. Apply a continuous bead of liquid gasket to mating surface of oil pan.

- Use Genuine Liquid Gasket or equivalent.

- Be sure liquid gasket is 3.5 to 4.5 mm (0.138 to 0.177 in) wide.

4. Apply liquid gasket to inner sealing surface as shown in figure.

- Attaching should be done within 5 minutes after coating.

5. Install oil pan.

- Install bolts/nuts in their reverse order of removal.
- Wait at least 30 minutes before refilling engine oil.








# TIMING BELT

## Removal

1. Remove engine undercover and air duct.
2. Drain engine coolant from radiator.

**Be careful not to spill coolant on drive belts.**

3. Remove radiator. (Refer to LC section.)
4. Remove engine cooling fan.
5. Remove the following belts.
  - Power steering pump drive belt
  - Compressor drive belt
  - Alternator drive belt
6. Remove water pump pulley.
7. Remove all spark plugs.
8. Remove distributor protector.
9. Remove compressor drive belt idler bracket.
10. Remove fresh-air inlet tube for rocker cover.
11. Remove water inlet hose for thermostat housing.
12. Remove crankshaft pulley bolt.
13. Remove crankshaft pulley with a suitable puller.
14. Remove front upper and lower belt covers.

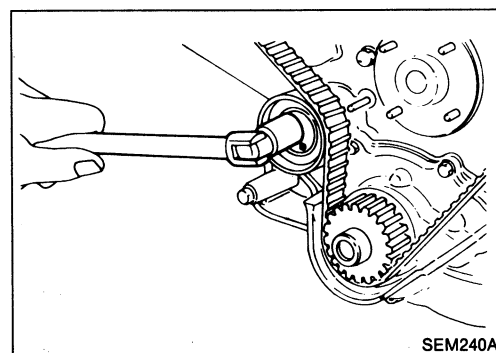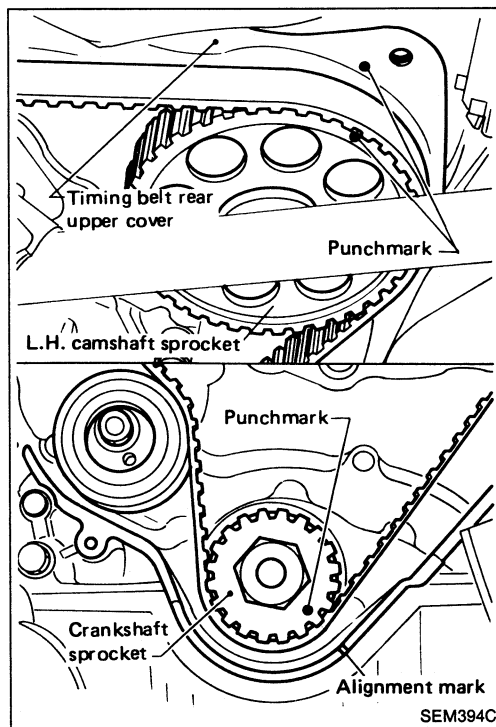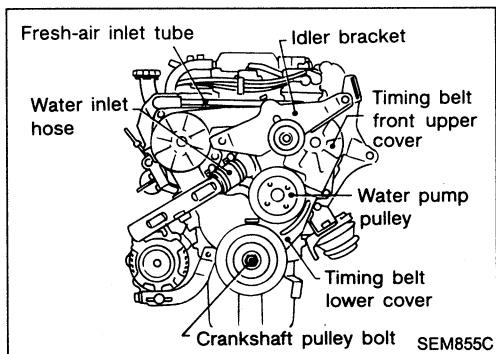

15. Set No. 1 piston at T.D.C. on its compression stroke by rotating crankshaft.






- Align punchmark on L.H. camshaft sprocket with punchmark on timing belt upper rear cover.
- Align punchmark on crankshaft sprocket with notch on oil pump housing.
- Temporarily install crank pulley bolt on crankshaft so that crankshaft can be rotated.

16. Loosen timing belt tensioner nut, turn tensioner, then remove timing belt.

# TIMING BELT

## Inspection

Visually check the condition of timing belt.  
Replace if any abnormality is found.

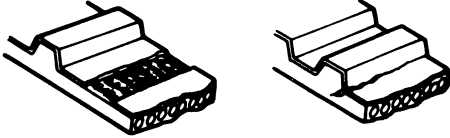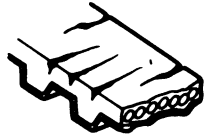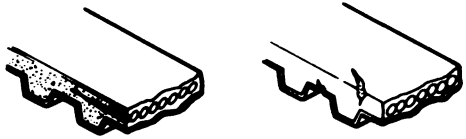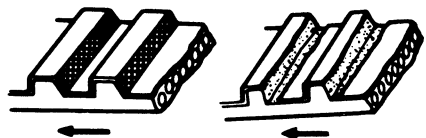
Item to check	Problem	Cause
Tooth is broken/tooth root is cracked.	 <p style="text-align: right;">SEM394A</p>	<ul style="list-style-type: none"> <li>● Camshaft jamming</li> <li>● Distributor jamming</li> <li>● Damaged camshaft/crankshaft oil seal</li> </ul>
Back surface is cracked/worn.	 <p style="text-align: right;">SEM395A</p>	<ul style="list-style-type: none"> <li>● Tensioner jamming</li> <li>● Overheated engine</li> <li>● Interference with belt cover</li> </ul>
Side surface is worn.	 <ul style="list-style-type: none"> <li>● Belt corners are worn and round.</li> <li>● Wicks are frayed and coming out.</li> </ul> <p style="text-align: right;">SEM396A</p>	<ul style="list-style-type: none"> <li>● Improper installation of belt</li> <li>● Malfunctioning crankshaft pulley plate/timing belt plate</li> </ul>
Teeth are worn.	 <p style="text-align: center;">Rotating direction</p> <ul style="list-style-type: none"> <li>● Canvas on tooth face is worn down.</li> <li>● Canvas on tooth is fluffy, rubber layer is worn down and faded white, or weft is worn down and invisible.</li> </ul> <p style="text-align: right;">SEM397A</p>	<ul style="list-style-type: none"> <li>● Poor belt cover sealing</li> <li>● Coolant leakage at water pump</li> <li>● Camshaft not functioning properly</li> <li>● Distributor not functioning properly</li> <li>● Excessive belt tension</li> </ul>
Oil/Coolant or water is stuck to belt.		<ul style="list-style-type: none"> <li>● Poor oil sealing of each oil seal</li> <li>● Coolant leakage at water pump</li> <li>● Poor belt cover sealing</li> </ul>

## TIMING BELT

### Inspection (Cont'd)


#### BELT TENSIONER AND TENSIONER SPRING

1. Check belt tensioner for smooth turning.
2. Check condition of tensioner spring.

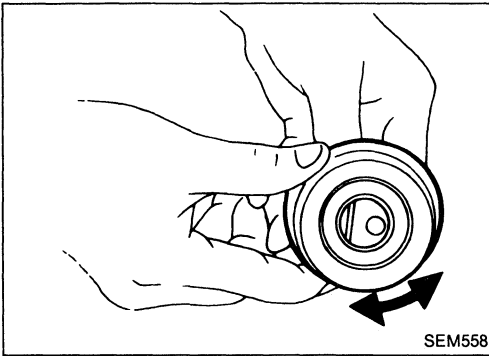


### Installation

1. Confirm that No. 1 piston is set at T.D.C. on its compression stroke.

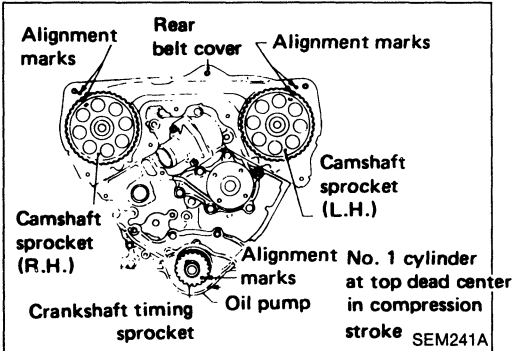


2. Install tensioner and tensioner spring.

**If stud is once removed, apply locking sealant to threads before installing.**

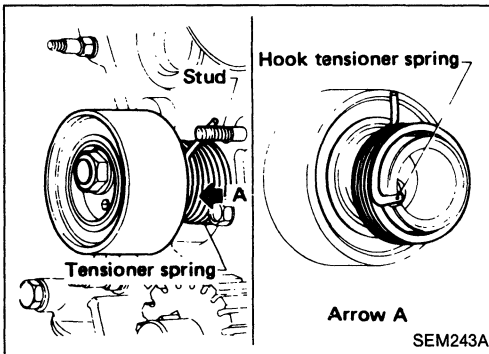


3. Turn tensioner fully clockwise with hexagon wrench, and temporarily tighten lock nut.

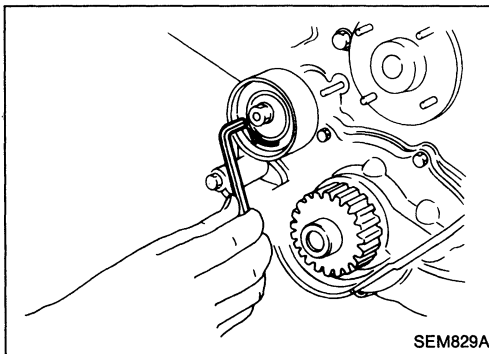

## TIMING BELT

### Installation (Cont'd)

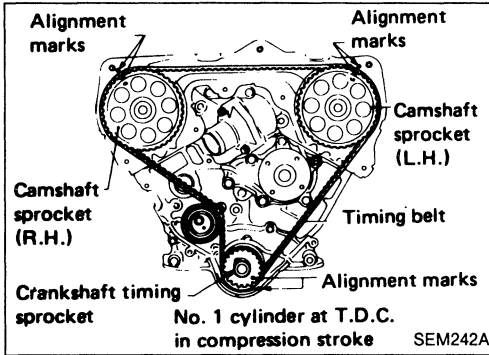


4. Set timing belt.

- (1) Align white lines on timing belt with punchmarks on camshaft sprockets and crankshaft sprocket.
- (2) Point arrow on timing belt toward front belt cover.


Number of teeth (reference):

Number of timing belt teeth		133
Number of teeth between timing marks	Between L.H. and R.H. camshaft sprockets	40
	Between L.H. camshaft sprocket and crankshaft timing sprocket	43

5. Loosen tensioner lock nut, keeping tensioner steady with hexagon wrench.

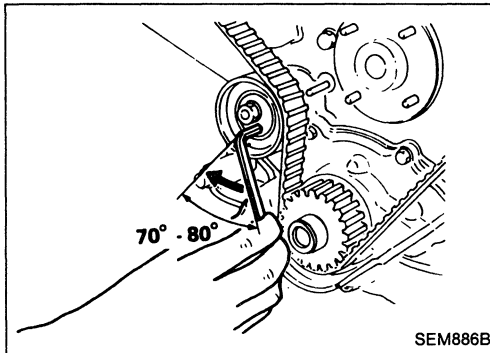


6. Turn tensioner 70 to 80 degrees clockwise with hexagon wrench, and temporarily tighten lock nut.
7. Turn crankshaft clockwise at least 2 times, then slowly set No. 1 piston at T.D.C. on its compression stroke.

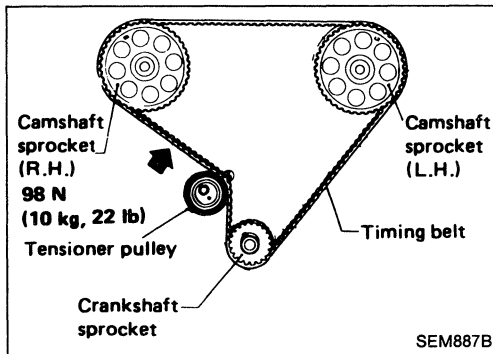


8. Push middle of timing belt between R.H. camshaft sprocket and tensioner pulley with force of 98 N (10 kg, 22 lb).
9. Loosen tensioner lock nut, keeping tensioner steady with hexagon wrench.

## TIMING BELT

### Installation (Cont'd)

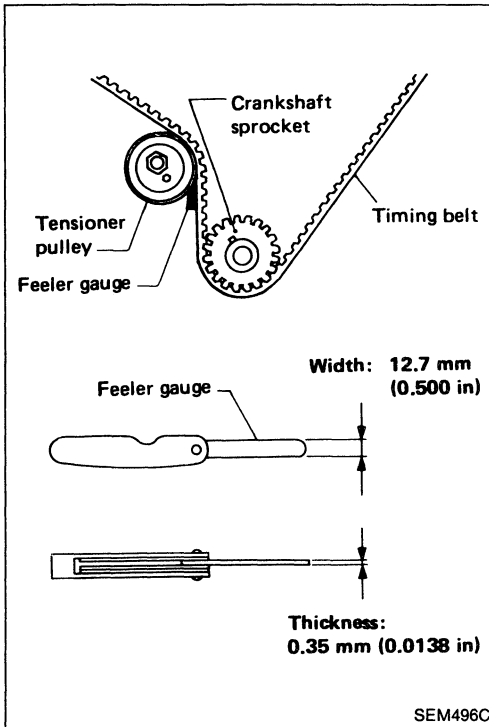

10. Set feeler gauge as shown in figure which is 0.35 mm (0.0138 in) thick and 12.7 mm (0.500 in) wide.

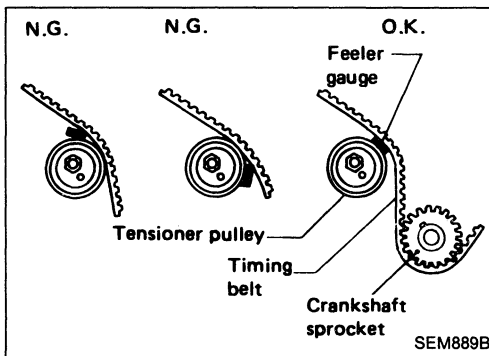


11. Turn crankshaft clockwise, and set feeler gauge as shown in figure.
  - Timing belt will move about 2.5 teeth.
12. Tighten tensioner lock nut, keeping tensioner steady with hexagon wrench.

# TIMING BELT


## Installation (Cont'd)

13. Turn crankshaft clockwise or counterclockwise, and remove feeler gauge.
14. Turn crankshaft clockwise at least 2 times, then slowly set No. 1 piston at T.D.C. on its compression stroke.
15. Install lower and upper belt covers.

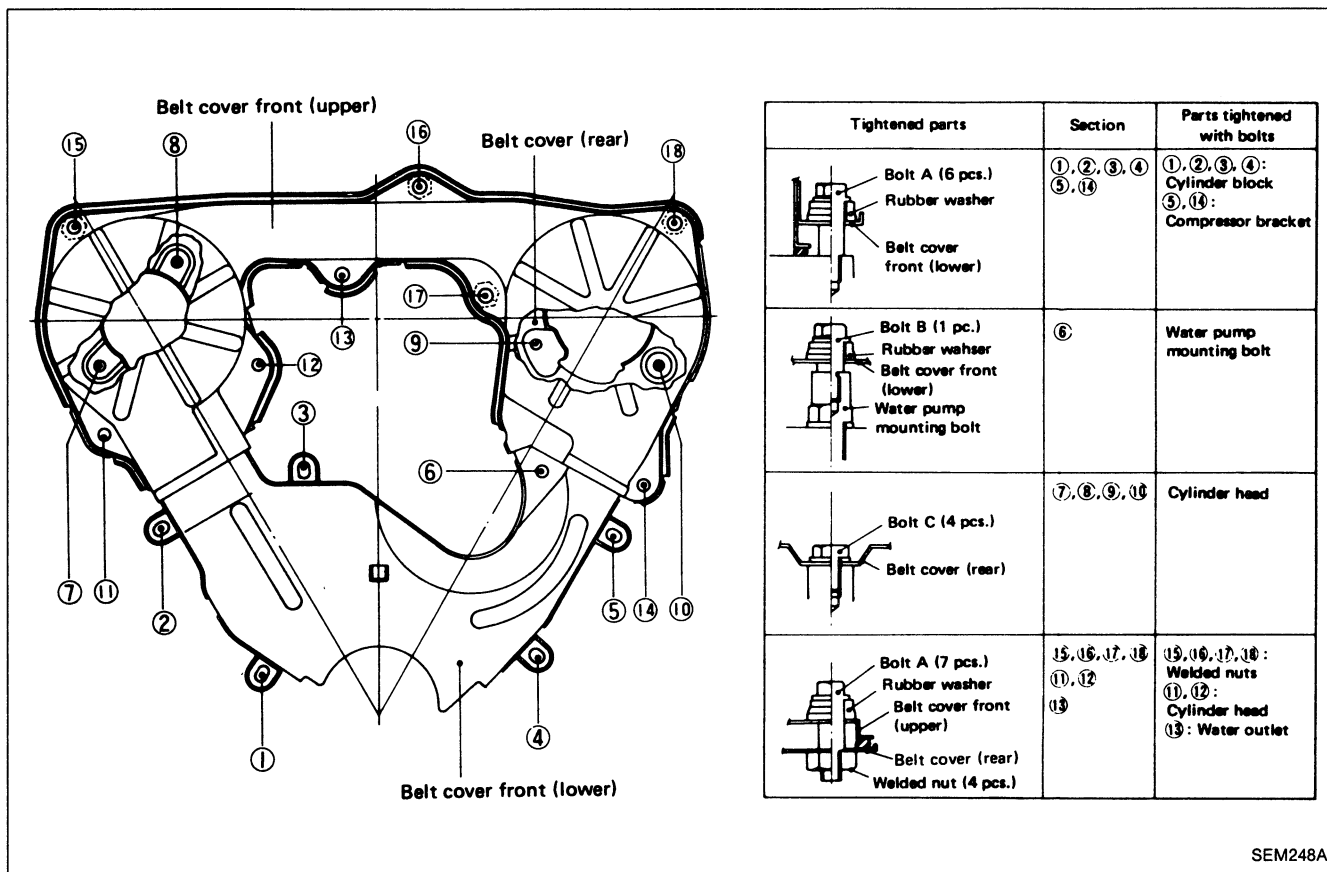


SEM248A

# OIL SEAL REPLACEMENT

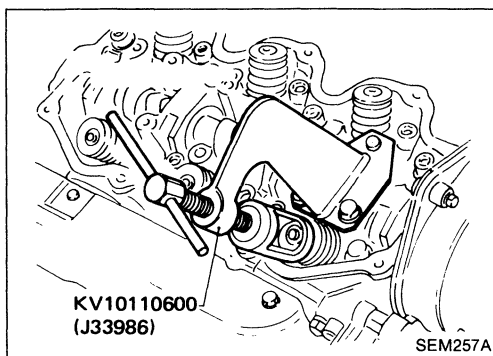


## VALVE OIL SEAL


1. Remove rocker cover.
2. Remove rocker shaft assembly and valve lifters with valve lifter guide.
3. Remove valve springs and valve oil seal.
  - Piston concerned should be set at T.D.C. to prevent valve from falling.
  - When removing intake side valve oil seal, use Tool or suitable tool.

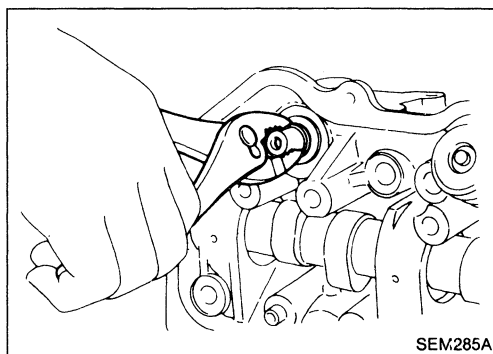


- When removing exhaust side valve oil seal, pull it out with suitable tool.

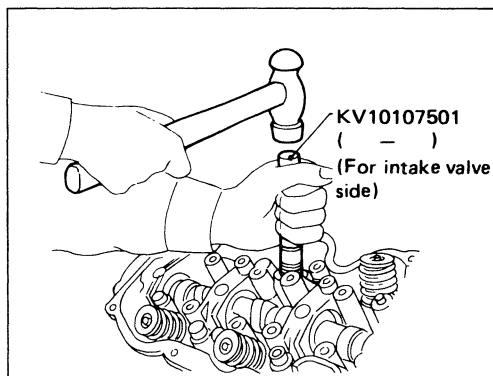

4. Apply engine oil to new valve oil seal and install it.
  - Before installing valve oil seal, install inner valve spring seat.
  - When installing intake side valve oil seal, use Tool.
  - When installing exhaust side valve oil seal, set it by hand.

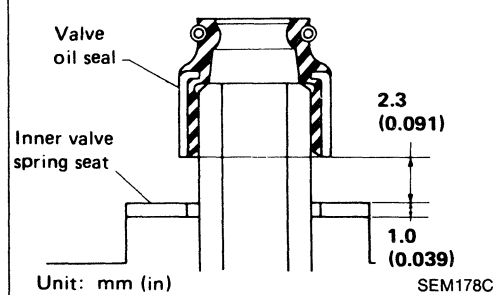


## OIL SEAL INSTALLING DIRECTION

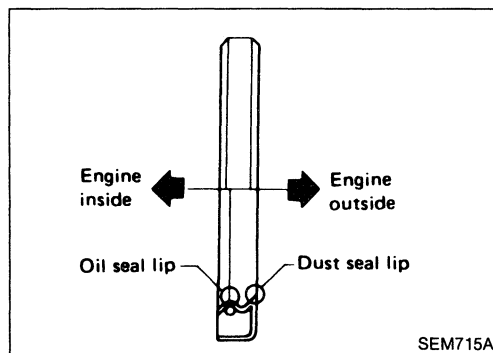



# OIL SEAL REPLACEMENT

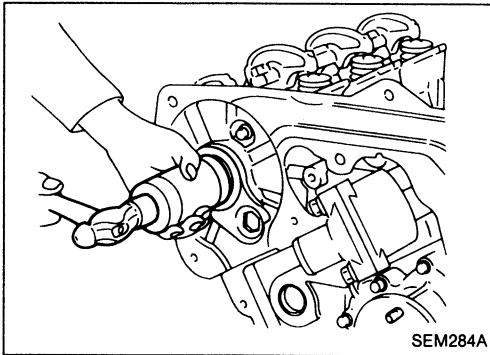


## CAMSHAFT OIL SEAL

1. Remove timing belt.
2. Remove camshaft sprocket.
3. Remove camshaft.
4. Remove camshaft oil seal.


**Be careful not to scratch camshaft.**

5. Apply engine oil to new camshaft oil seal.

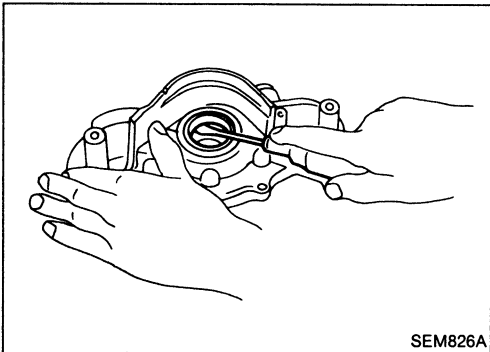


## FRONT OIL SEAL

1. Remove timing belt and crankshaft sprocket.
2. Remove oil pump assembly.
3. Remove front oil seal from oil pump body.

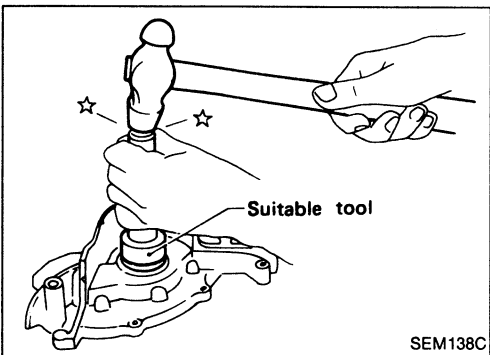


4. Apply engine oil to new oil seal and install it using suitable tool.

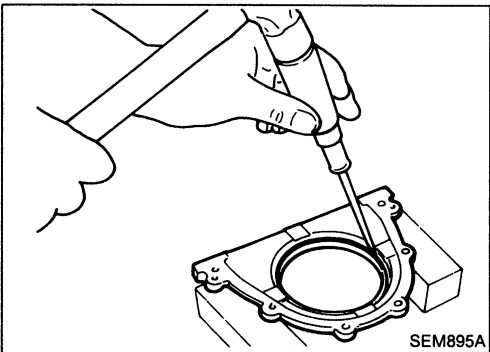


## REAR OIL SEAL

1. Remove flywheel or drive plate.
2. Remove rear oil seal retainer.
3. Remove rear oil seal from retainer.

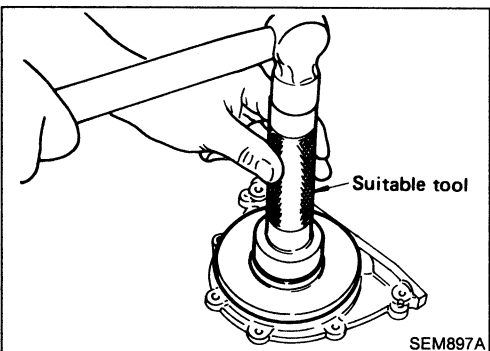

4. Apply engine oil to new oil seal and install it using suitable tool.
5. Install rear oil seal retainer with a new gasket to cylinder block.

# CYLINDER HEAD

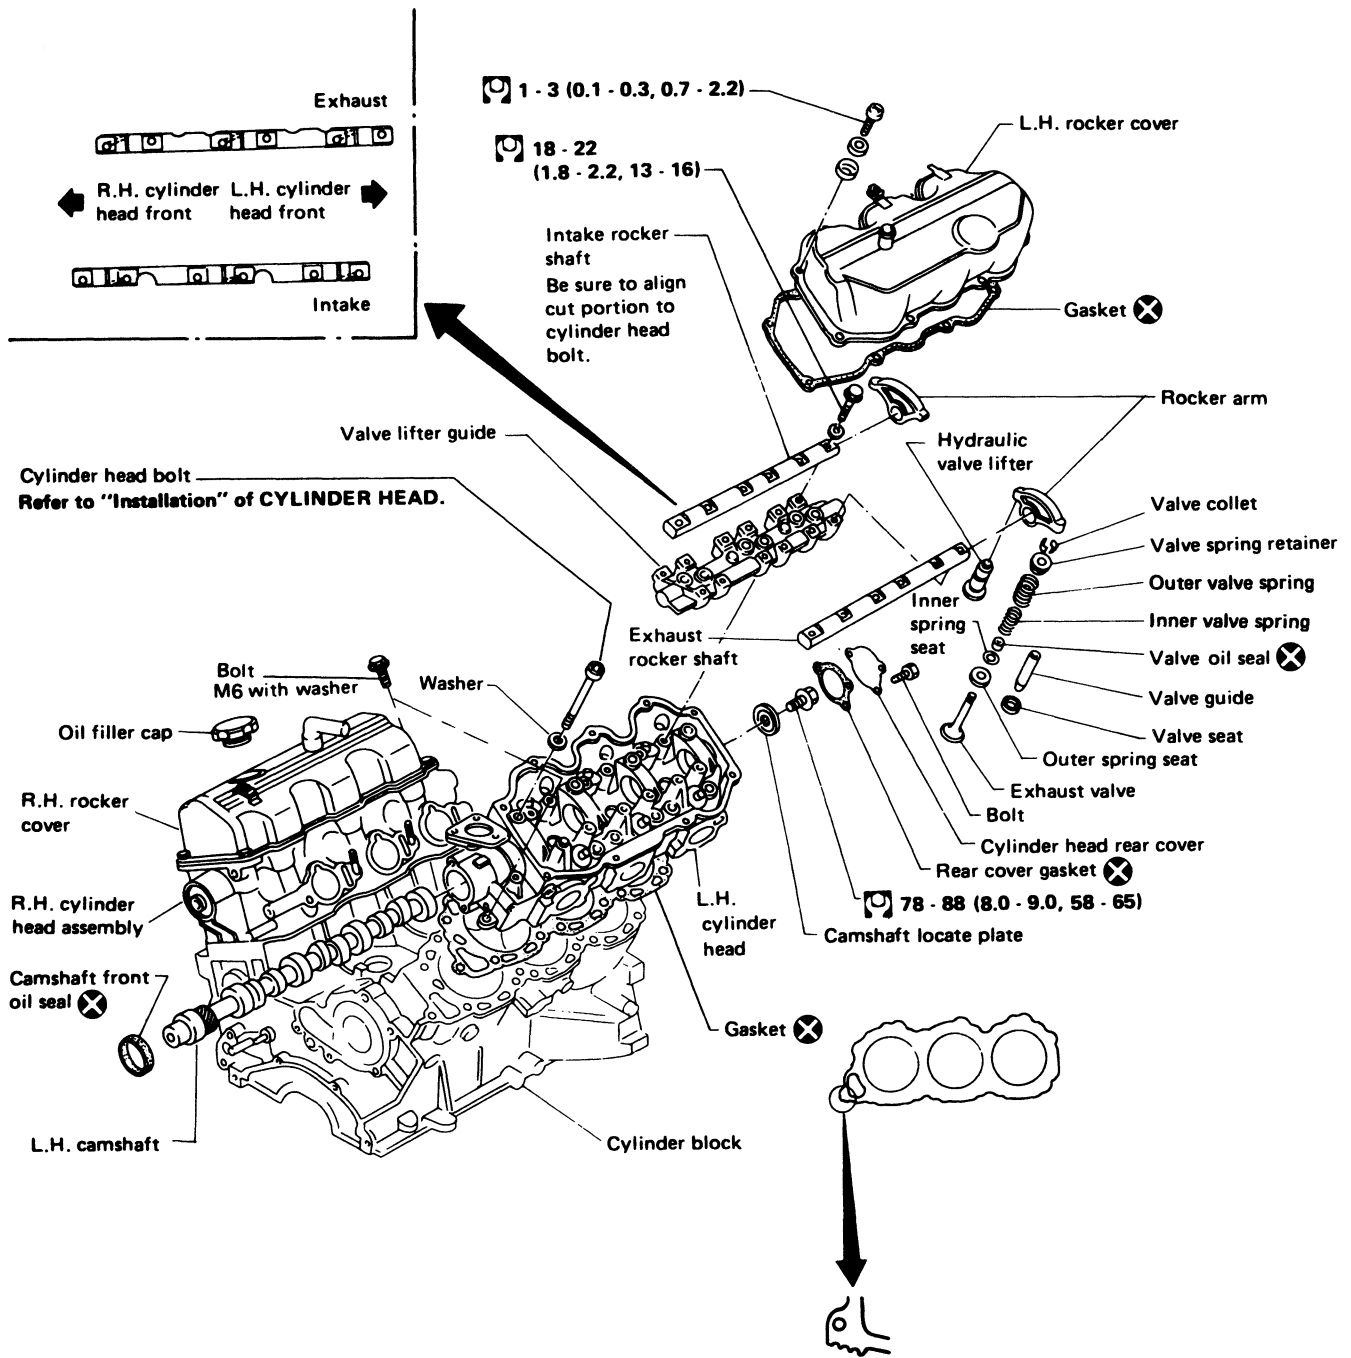


: N·m (kg·m, ft·lb)

## CYLINDER HEAD

### CAUTION:


- When installing sliding parts such as rocker arms, camshaft and oil seal, be sure to apply new engine oil on their sliding surfaces.
- When tightening cylinder head bolts and rocker shaft bolts, apply new engine oil to thread portions and seat surfaces of bolts.

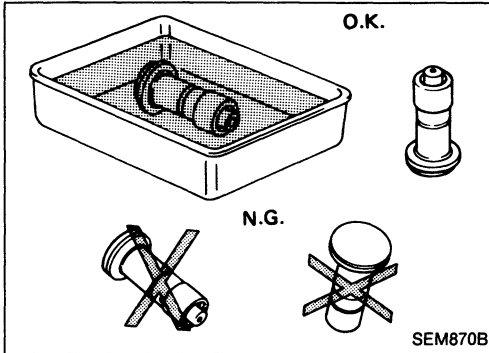


- If hydraulic valve lifter is kept on its side, there is a risk of air entering it. After removal, always set hydraulic valve lifter straight up, or when laying it on its side, have it soak in new engine oil.
- Do not disassemble hydraulic valve lifter.
- Attach tags to valve lifters so as not to mix them up.

### Removal

1. Release fuel pressure.  
Refer to "Releasing Fuel Pressure" in section EF & EC.
2. Remove timing belt.  
Refer to "TIMING BELT — Removal".

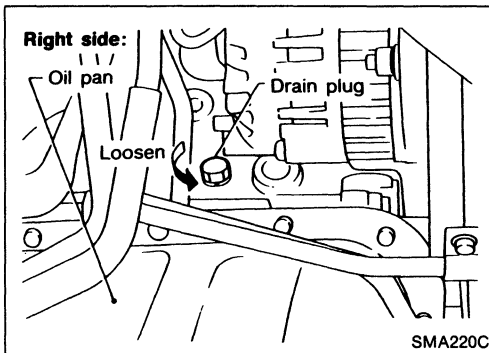


3. Drain coolant by removing drain plugs from both sides of cylinder block.

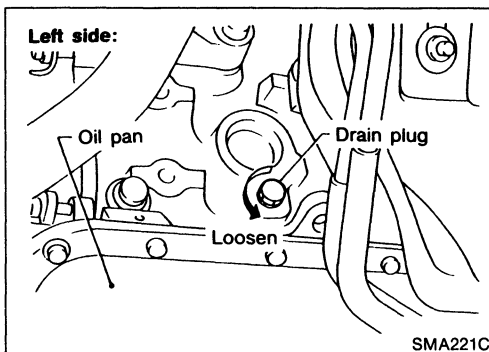

## CYLINDER HEAD


### Removal (Cont'd)

4. Separate A.S.C.D. and accelerator control wire from intake manifold collector.

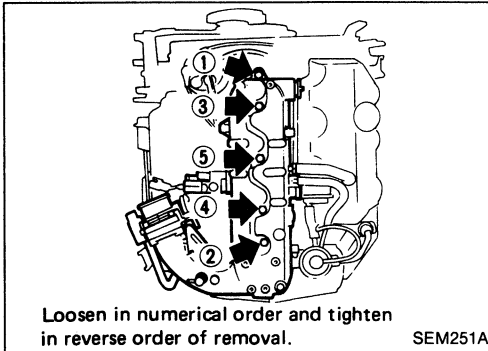

5. Remove intake manifold collector from engine. The following parts should be disconnected or removed.

- (1) Harness connectors for
  - A.A.C. valve
  - F.I.C.D. solenoid valve
  - Throttle valve switch
  - Throttle sensor
  - Pressure regulator control solenoid valve
  - Air regulator
  - E.G.R. control solenoid valve
  - Exhaust gas temperature sensor
  - Earth harness
- (2) P.C.V. hoses
- (3) Vacuum hoses for
  - Master brake cylinder
  - E.G.R. control solenoid valve
  - Fuel pressure regulator
  - Carbon canister
- (4) Air hoses from
  - Air duct
  - A.A.C. valve
  - Air regulator
- (5) Water hoses for
  - Throttle chamber
  - Air relief plug
- (6) Carbon canister purge hose
- (7) E.G.R. tube

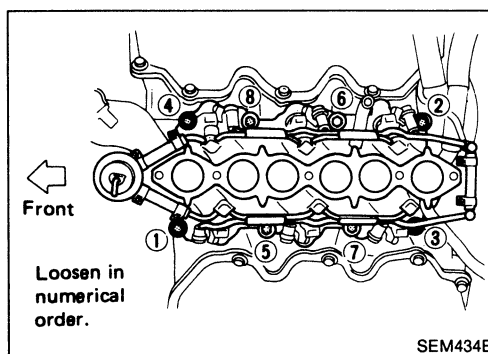


6. Remove intake manifold with fuel tube assembly. The following parts should be disconnected or removed.

- Vacuum hose for fuel pressure regulator
- Fuel feed and return hoses
- All injectors harness connectors
- Fuel temperature sensor harness connector

## CYLINDER HEAD

### Removal (Cont'd)


7. Remove both camshaft sprockets.

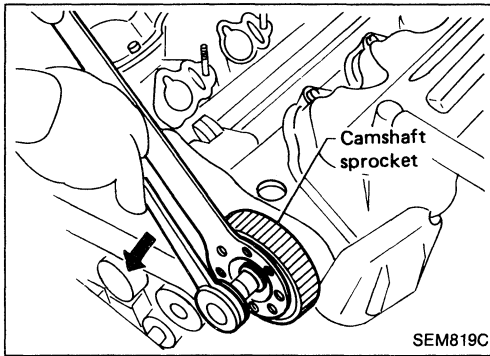


8. Remove rear timing belt cover.

9. Remove distributor and ignition wires.


**After pulling out distributor from cylinder head, do not rotate distributor rotor.**

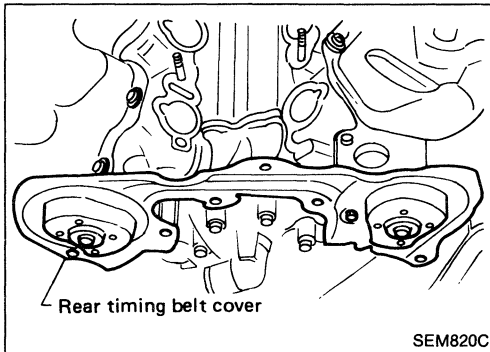

10. Remove R.H. exhaust manifold from L.H. exhaust manifold.

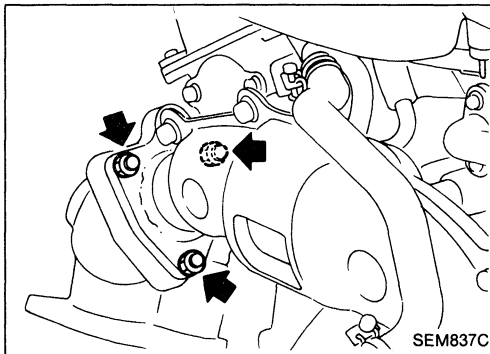


11. Remove front exhaust tube from exhaust manifold.

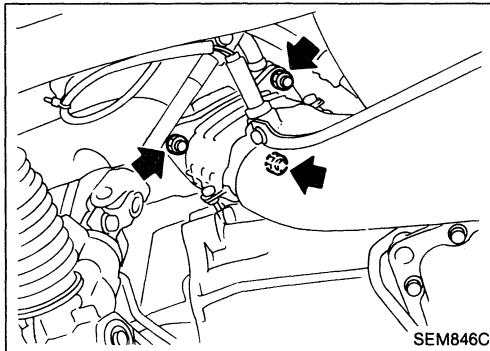


12. Remove compressor from bracket.

13. Remove compressor bracket.

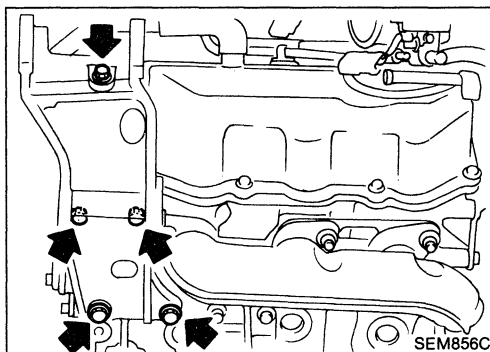


## CYLINDER HEAD

### Removal (Cont'd)

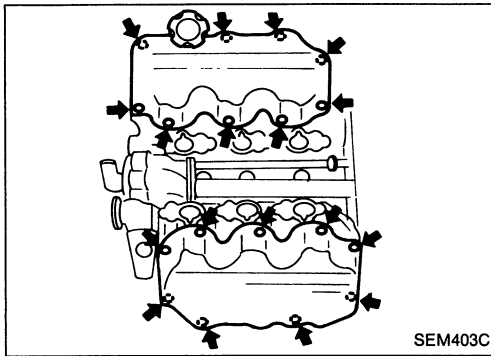


14. Remove both rocker covers.

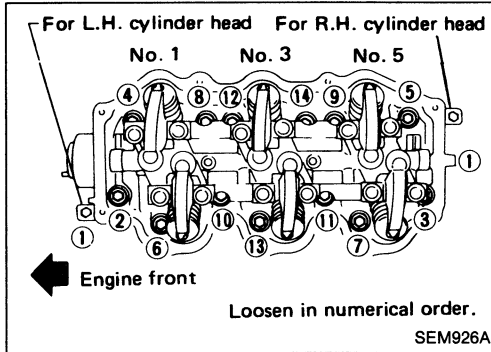



15. Remove cylinder head with exhaust manifold.

- Head warpage or cracking could result from removing in incorrect order.
- Cylinder head bolts should be loosened in two or three steps.

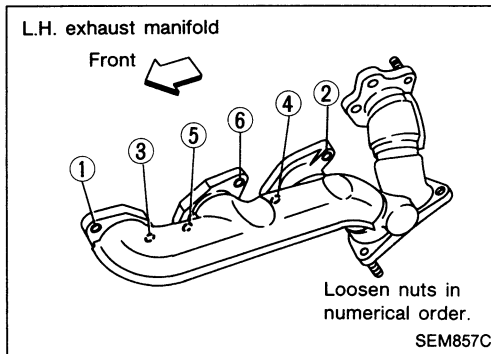

### Disassembly

1. Remove exhaust manifolds from cylinder head.

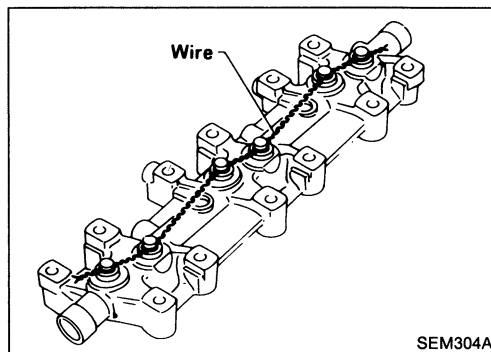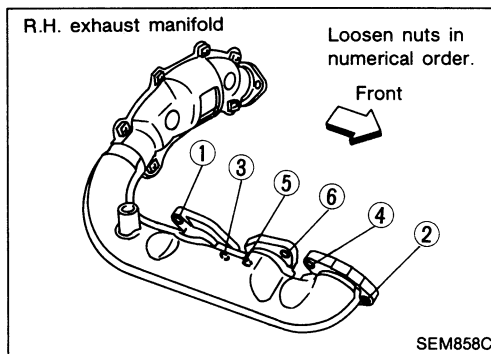

2. Remove rocker shafts with rocker arms.


**Bolts should be loosened in two or three steps.**

3. Remove hydraulic valve lifters and lifter guide.


- Hold hydraulic valve lifters with wire so that they will not drop from lifter guide.

## CYLINDER HEAD


### Disassembly (Cont'd)

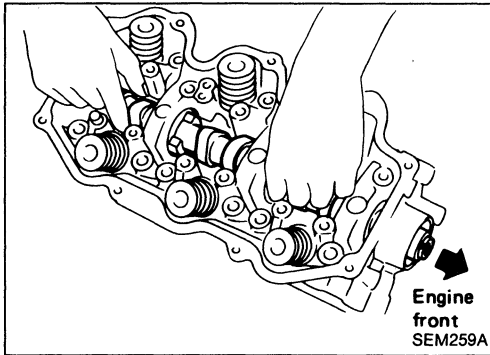

4. Remove oil seal and camshaft.
  - Before removing camshaft, measure camshaft end play.

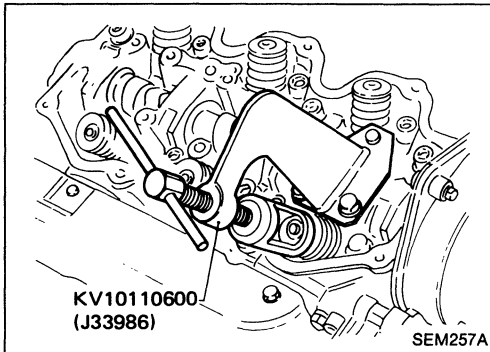

5. Remove valve components with Tool.
6. Remove valve oil seals with Tool or suitable tool.

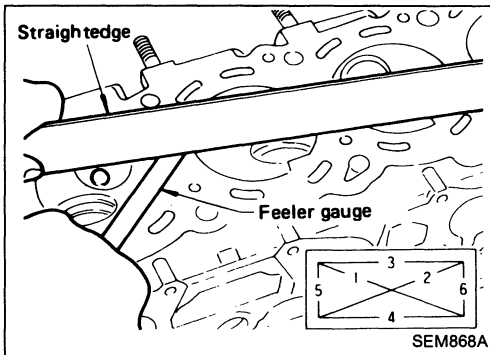

### Inspection

#### CYLINDER HEAD DISTORTION

Head surface flatness:

Less than 0.1 mm (0.004 in)

If beyond the specified limit, replace it or resurface it.

**Resurfacing limit:**

The resurfacing limit of cylinder head is determined by the cylinder block resurfacing in an engine.

Amount of cylinder head resurfacing is "A".

Amount of cylinder block resurfacing is "B".

The maximum limit is as follows:

$A + B = 0.2 \text{ mm (0.008 in)}$


After resurfacing cylinder head, check that camshaft rotates freely by hand. If resistance is felt, cylinder head must be replaced.

**Nominal cylinder head height:**

106.8 - 107.2 mm (4.205 - 4.220 in)

#### CAMSHAFT VISUAL CHECK

Check camshaft for scratches, seizure and wear.

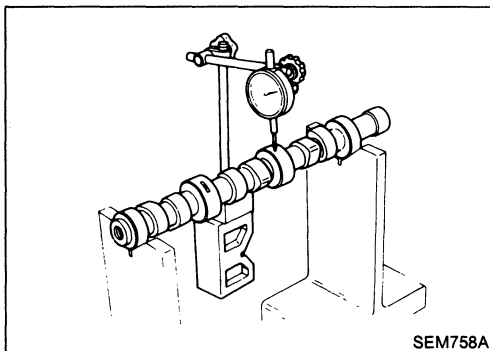

#### CAMSHAFT RUNOUT

1. Measure camshaft runout at the center journal.


Runout (Total indicator reading):  
Limit 0.1 mm (0.004 in)
2. If it exceeds the limit, replace camshaft.

## CYLINDER HEAD


### Inspection (Cont'd)

#### CAMSHAFT CAM HEIGHT


1. Measure camshaft cam height.  
**Standard cam height:**  
39.537 - 39.727 mm (1.5566 - 1.5641 in)  
**Cam wear limit:**  
0.15 mm (0.0059 in)
2. If wear is beyond the limit, replace camshaft.

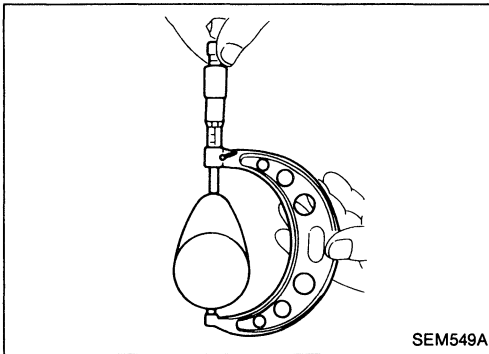


#### CAMSHAFT JOURNAL CLEARANCE

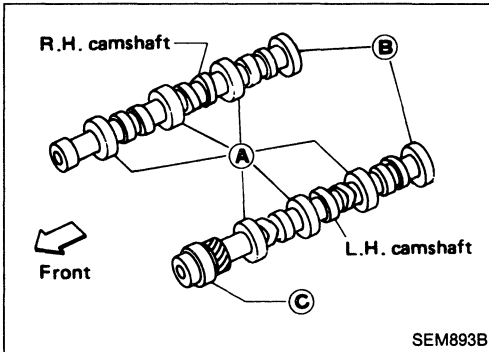

1. Measure inner diameter of camshaft bearing.  
**Standard inner diameter:**  
**A** 47.000 - 47.025 mm (1.8504 - 1.8514 in)  
**B** 42.500 - 42.525 mm (1.6732 - 1.6742 in)  
**C** 48.000 - 48.025 mm (1.8898 - 1.8907 in)

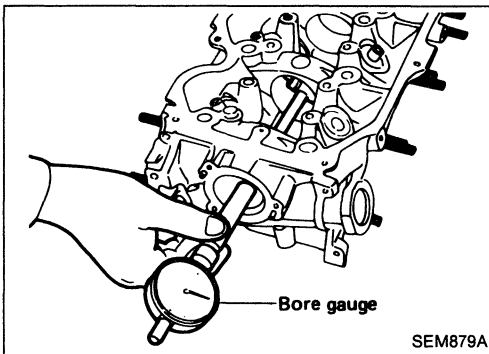


2. Measure outer diameter of camshaft journal.  
**Standard outer diameter:**  
**A** 46.920 - 46.940 mm (1.8472 - 1.8480 in)  
**B** 42.420 - 42.440 mm (1.6701 - 1.6709 in)  
**C** 47.920 - 47.940 mm (1.8866 - 1.8874 in)
3. If clearance exceeds the limit, replace camshaft and/or cylinder head.  
**Camshaft journal clearance limit:**  
0.15 mm (0.0059 in)

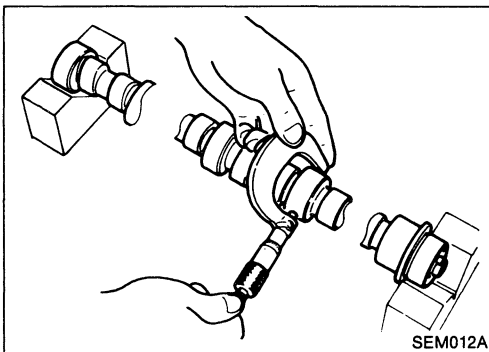

#### CAMSHAFT END PLAY


1. Install camshaft and locate plate in cylinder head.
2. Measure camshaft end play.  
**Camshaft end play:**  
Standard 0.03 - 0.06 mm (0.0012 - 0.0024 in)

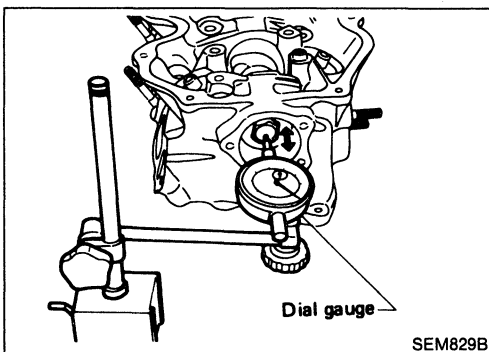



## CYLINDER HEAD


### Inspection (Cont'd)

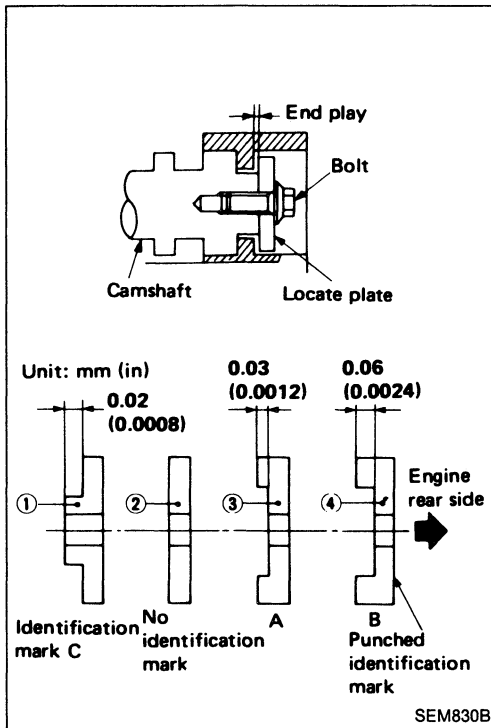

- If it is out of the specified range, select thickness of camshaft locate plate to obtain standard specified end play.


Example:

When camshaft end play is 0.08 mm (0.0031 in) with camshaft locate plate ②, replace camshaft locate plate ② with camshaft locate plate ③ to set the end play at 0.05 mm (0.0020 in).

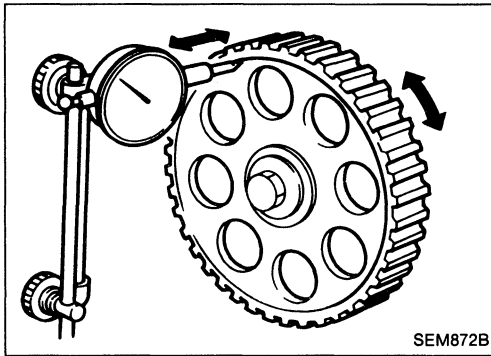

### CAMSHAFT SPROCKET RUNOUT

- Install sprocket on camshaft.
- Measure camshaft sprocket runout.  
**Runout (Total indicator reading):**  
**Limit 0.1 mm (0.004 in)**
- If it exceeds the limit, replace camshaft sprocket.

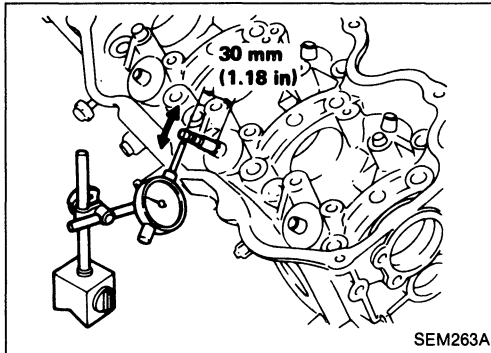


### VALVE GUIDE CLEARANCE

- Measure valve deflection in a right-angled direction with camshaft. (Valve and valve guide mostly wear in this direction.)  
**Valve deflection limit (Dial gauge reading):**  
**0.20 mm (0.0079 in)**

## CYLINDER HEAD

### Inspection (Cont'd)

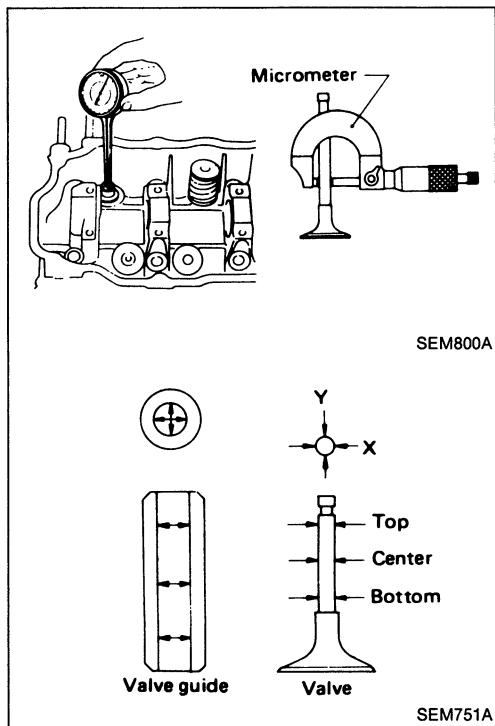

2. If it exceeds the limit, check valve to valve guide clearance.
  - a. Measure valve stem diameter and valve guide inner diameter.
  - b. Check that clearance is within specification.

#### Valve to valve guide clearance:

##### Intake

0.020 - 0.053 mm (0.0008 - 0.0021 in)

##### Exhaust


0.030 - 0.053 mm (0.0012 - 0.0021 in)

##### Limit


0.10 mm (0.0039 in)

- c. If it exceeds the limit, replace valve or valve guide.


### VALVE GUIDE REPLACEMENT

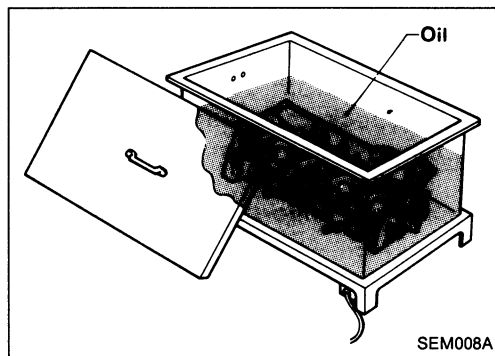

1. To remove valve guide, heat cylinder head to 150 to 160°C (302 to 320°F).

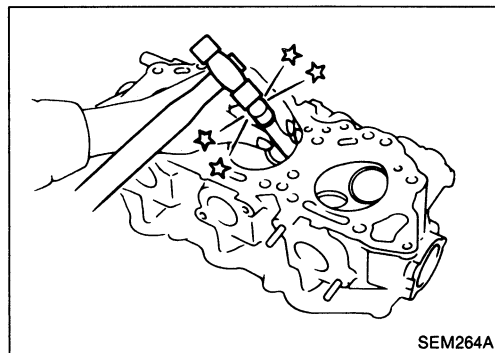

2. Drive out valve guide with a press [under a 20 kN (2 t, 2.2 US ton, 2.0 Imp ton) pressure] or hammer and suitable tool.

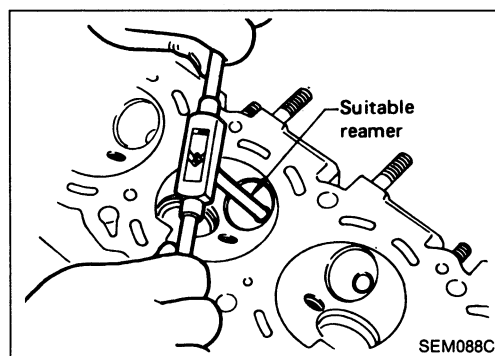

3. Ream cylinder head valve guide hole.

#### Valve guide hole diameter

##### (for service parts):

##### Intake


11.175 - 11.196 mm (0.4400 - 0.4408 in)

##### Exhaust

12.175 - 12.196 mm (0.4793 - 0.4802 in)

## CYLINDER HEAD


### Inspection (Cont'd)

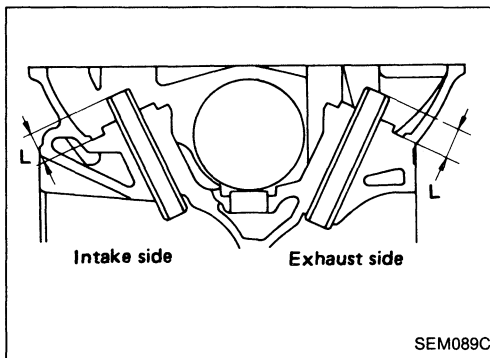

- Heat cylinder head to 150 to 160°C (302 to 320°F) and press service valve guide onto cylinder head.

**Projection "L":**

**13.2 - 13.4 mm (0.520 - 0.528 in)**

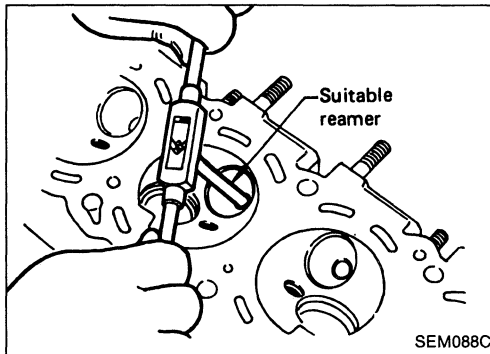

- Ream valve guide.


**Finished size:**

**Intake**

**7.000 - 7.018 mm (0.2756 - 0.2763 in)**

**Exhaust**


**8.000 - 8.018 mm (0.3150 - 0.3157 in)**

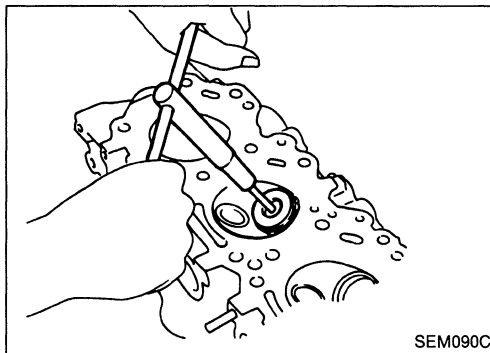

### VALVE SEATS

Check valve seats for any evidence of pitting at valve contact surface, and reseat or replace if it has worn out excessively.

- **Before repairing valve seats, check valve and valve guide for wear. If they have worn, replace them. Then correct valve seat.**
- **Cut with both hands to maintain a uniform cutting surface.**

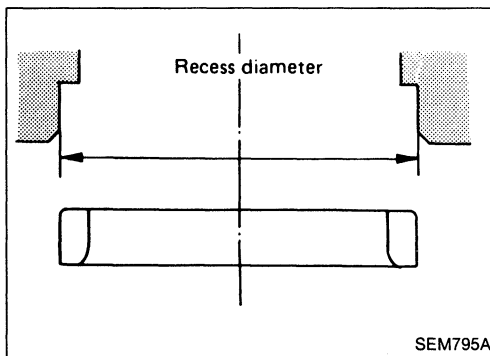

### REPLACING VALVE SEAT FOR SERVICE PARTS

- Bore out old seat until it collapses. The machine depth stop should be set so that boring cannot continue beyond the bottom face of the seat recess in cylinder head.
- Ream cylinder head recess.

**Reaming bore for service valve seat**

**Override [0.5 mm (0.020 in)]:**

**Intake**

**44.500 - 44.516 mm (1.7520 - 1.7526 in)**


**Exhaust**

**37.500 - 37.516 mm (1.4764 - 1.4770 in)**


Reaming should be done in circles concentric to the valve guide center so that valve seat will have the correct fit.

# CYLINDER HEAD

## Inspection (Cont'd)

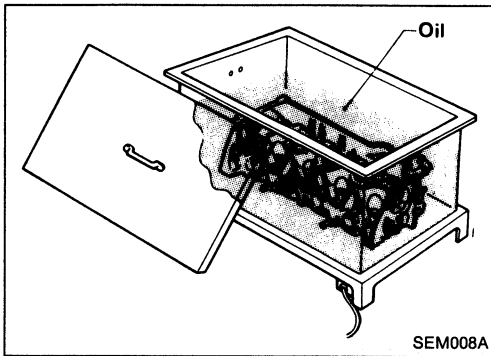


3. Heat cylinder head to 150 to 160°C (302 to 320°F).
4. Press fit valve seat until it seats on the bottom.

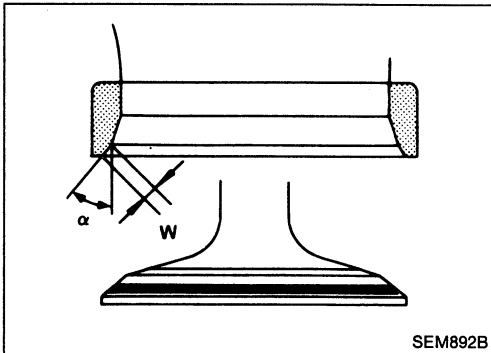

5. Cut or grind valve seat using suitable tool at the specified dimensions as shown in S.D.S.
6. After cutting, lap valve seat with abrasive compound.
7. Check valve seating condition.


		Intake	Exhaust
Seat face angle "α"	degree	45	45
Contacting width "W"	mm (in)	1.75 (0.0689)	1.7 (0.067)

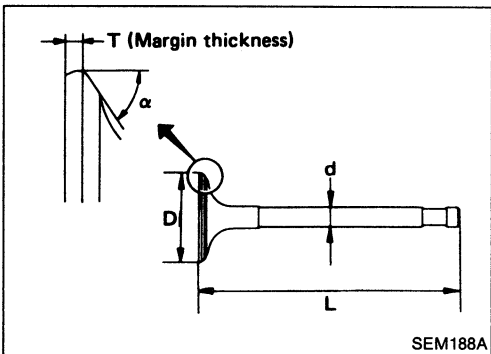

## VALVE DIMENSIONS

Check dimensions in each valve. For dimensions, refer to S.D.S. When valve head has been worn down to 0.5 mm (0.020 in) in margin thickness, replace valve.

**Grinding allowance for valve stem tip is 0.2 mm (0.008 in) or less.**

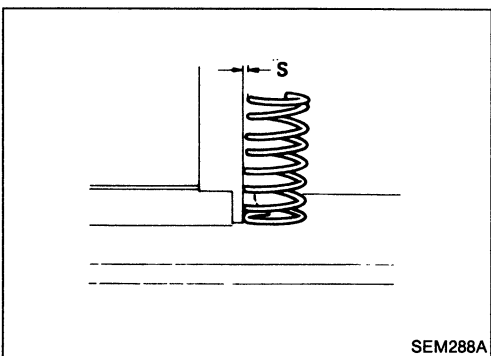

## VALVE SPRING

### Squareness

1. Measure "S" dimension.

#### Out-of-square:

##### Outer

**Less than 2.2 mm (0.087 in)**

##### Inner

**Less than 1.9 mm (0.075 in)**

2. If it exceeds the limit, replace spring.

## CYLINDER HEAD

### Inspection (Cont'd)

#### Pressure

Check valve spring pressure.

**Pressure: N (kg, lb) at height mm (in)**

##### Standard

###### Outer

250.1 (25.5, 56.2) at 40.0 (1.575)

###### Inner

255.0 (26.0, 57.3) at 25.0 (0.984)

##### Limit



###### Outer

More than 228.5 (23.3, 51.4) at 25.0 (0.984)

###### Inner

More than 225.6 (23.0, 50.7) at 25.0 (0.984)

If it exceeds the limit, replace spring.

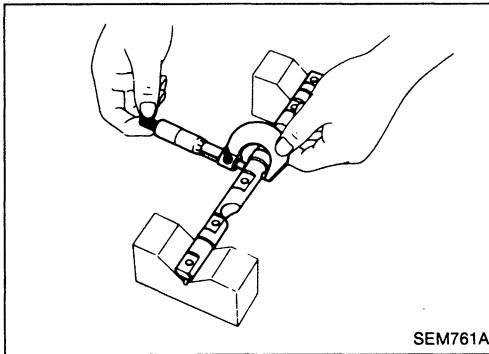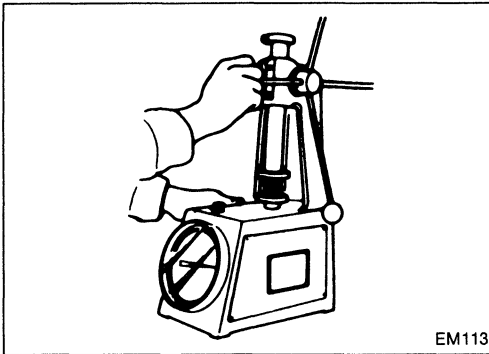


### ROCKER SHAFT AND ROCKER ARM

1. Check rocker shafts for scratches, seizure and wear.
2. Check outer diameter of rocker shaft.

#### Diameter:

17.979 - 18.000 mm (0.7078 - 0.7087 in)

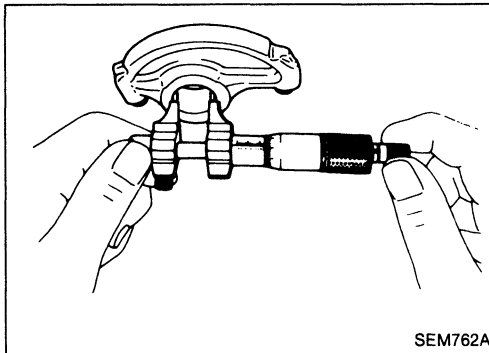

3. Check inner diameter of rocker arm.


#### Diameter:

18.007 - 18.028 mm (0.7089 - 0.7098 in)

#### Rocker arm to shaft clearance:

0.007 - 0.049 mm (0.0003 - 0.0019 in)

- Keep rocker arm with hydraulic valve lifter standing to prevent air from entering hydraulic valve lifter when checking.

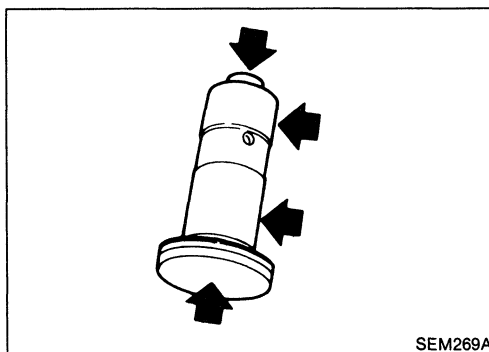


### HYDRAULIC VALVE LIFTER

1. Check contact and sliding surfaces for wear or scratches.

## CYLINDER HEAD


### Inspection (Cont'd)

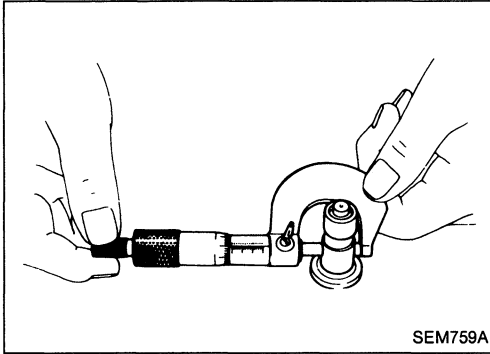

2. Check diameter of valve lifter.

**Outer diameter:**

**15.947 - 15.957 mm (0.6278 - 0.6282 in)**

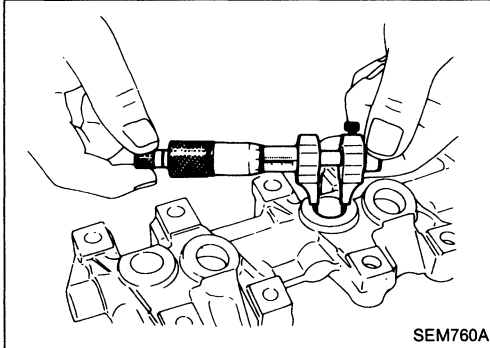


3. Check valve lifter guide inner diameter.

**Inner diameter:**

**16.000 - 16.013 mm (0.6299 - 0.6304 in)**

**Standard clearance between valve lifter and lifter guide:**


**0.043 - 0.066 mm (0.0017 - 0.0026 in)**

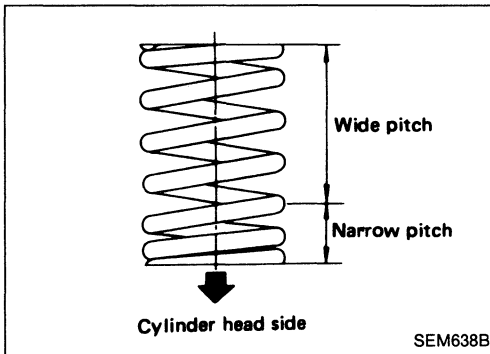

### Assembly


1. Install valve component parts.

- **Always use new valve oil seal. Refer to OIL SEAL REPLACEMENT.**
- **Before installing valve oil seal, install inner valve spring seat.**
- **Install outer valve spring (uneven pitch type) with its narrow pitch side toward cylinder head side.**
- **After installing valve component parts, use plastic hammer to lightly tap valve stem tip to assure a proper fit.**

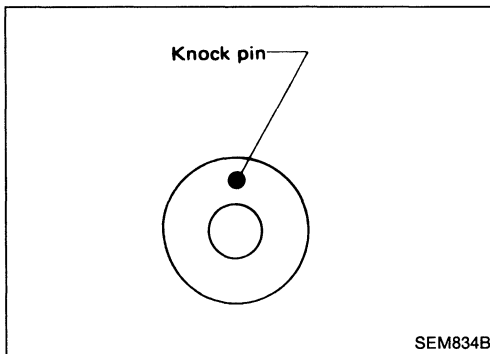

2. Install camshafts, locate plates and cylinder head rear covers.

- **Set knock pin of camshaft at the top.**

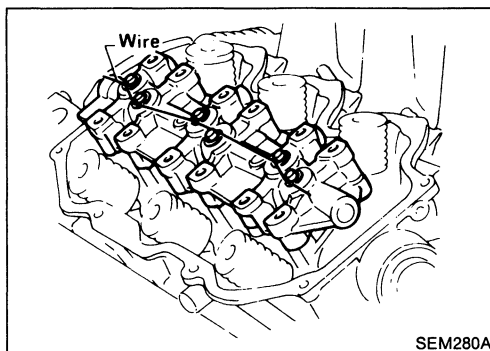


3. Install valve lifters into valve lifter guide.


- **Assemble valve lifters to their original position and hold all valve lifters with wire to prevent lifters from falling off.**
- **After installing them, remove the wire.**

## CYLINDER HEAD

### Assembly (Cont'd)

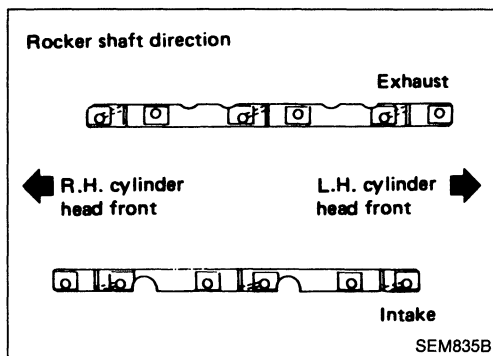


4. Install rocker shafts with rocker arms.
  - **Tighten bolts gradually in two or three stages.**
  - **Before tightening, be sure to set camshaft the lobe at the position where lobe is not lifted.**
- a. Set No. 1 piston at T.D.C. on its compression stroke and tighten rocker shaft bolts for No. 2, No. 4 and No. 6 cylinders.
- b. Set No. 4 piston at T.D.C. on its compression stroke and tighten rocker shaft bolts for No. 1, No. 3 and No. 5 cylinders.
5. Install exhaust manifold to cylinder head in reverse order of removal.

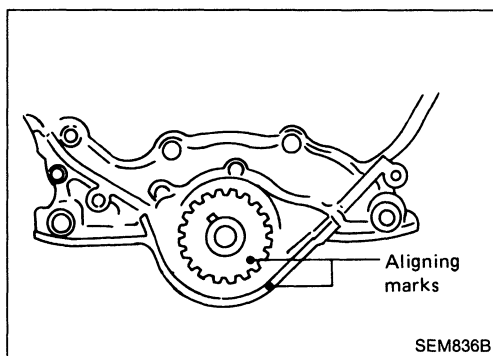


### Installation

1. Set No. 1 piston at T.D.C. on its compression stroke as follows:
  - a. Align crankshaft sprocket aligning mark with mark on oil pump body.
  - b. Confirm that knock pin on camshaft is set at the top.




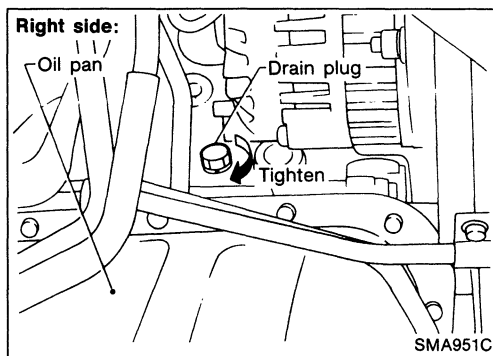


2. Install both drain plugs.
  - Apply sealant to drain plug threads.
3. Install exhaust manifolds to cylinder head in reverse order of removal.

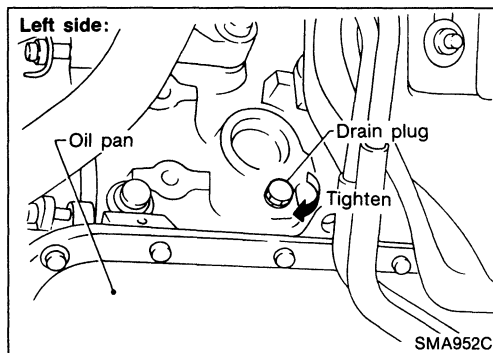

## CYLINDER HEAD

### Installation (Cont'd)

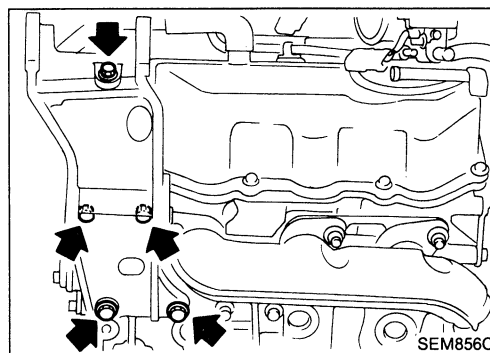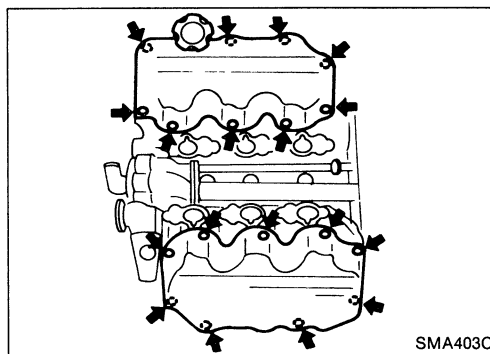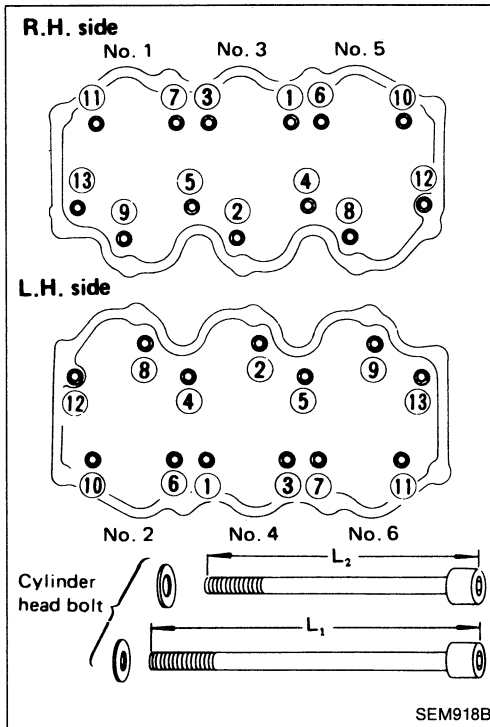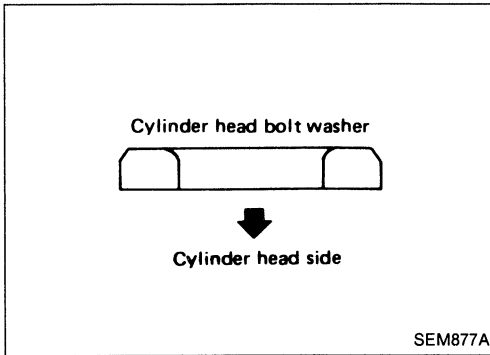

4. Install cylinder head with new gasket.
  - Be sure to install washers between bolts and cylinder head.
  - Do not rotate crankshaft and camshaft separately, or valves will hit piston heads.

5. Tighten cylinder head bolts in numerical order using ST10120000 (J24239-01).

- **Tightening procedure:**

- (1) Tighten all bolts to 29 N·m (3.0 kg·m, 22 ft·lb).
- (2) Tighten all bolts to 59 N·m (6.0 kg·m, 43 ft·lb).
- (3) Loosen all bolts completely.
- (4) Tighten all bolts to 29 N·m (3.0 kg·m, 22 ft·lb).
- (5) Turn all bolts 60 to 65 degrees clockwise.

If an angle wrench is not available, tighten all bolts to 54 to 64 N·m (5.5 to 6.5 kg·m, 40 to 47 ft·lb).

- Bolts for ④, ⑤, ⑫ and ⑬ are longer than the others.
  - L<sub>1</sub>: 127 mm (5.00 in) for ④, ⑤, ⑫ and ⑬
  - L<sub>2</sub>: 106 mm (4.17 in) for others


6. Install both rocker covers.

7. Install compressor bracket and compressor.




# CYLINDER HEAD


## Installation (Cont'd)

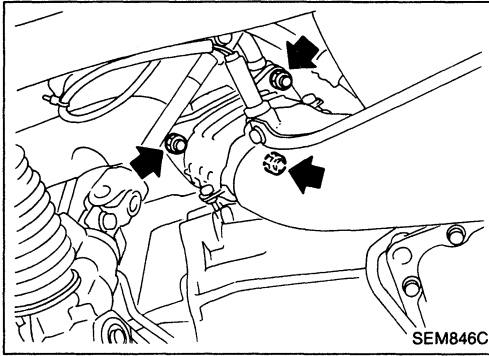

8. Install front exhaust tube to exhaust manifold.

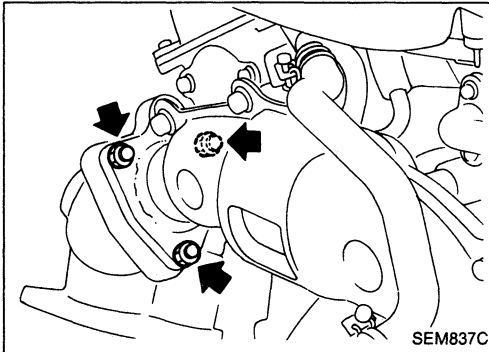

9. Install R.H. exhaust manifold to L.H. exhaust manifold.

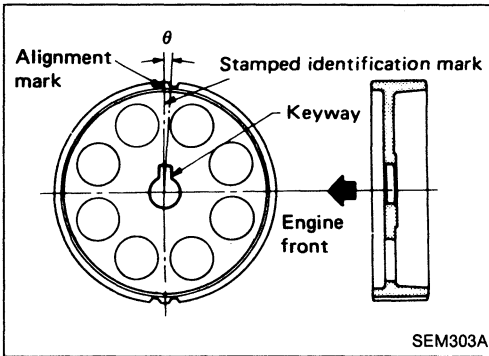


10. Install rear belt cover and camshaft sprocket.

- **R.H. camshaft sprocket and L.H. camshaft sprocket are different parts. Be sure to install them in the correct location.**

	Identification mark	$\theta$
R.H. camshaft sprocket	R3	0°53'
L.H. camshaft sprocket	L3	-3°27'

11. Install timing belt and adjust belt tension.

**Refer to "TIMING BELT — Installation".**

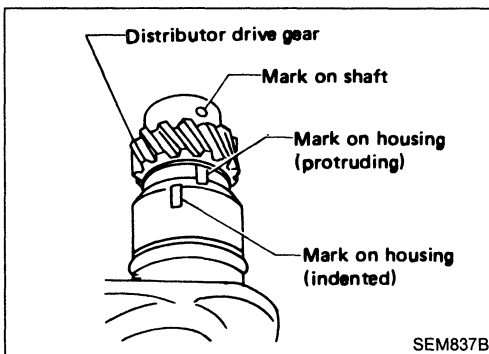


12. Install distributor.


- (1) Align mark on shaft with protruding mark on housing.

## CYLINDER HEAD

### Installation (Cont'd)

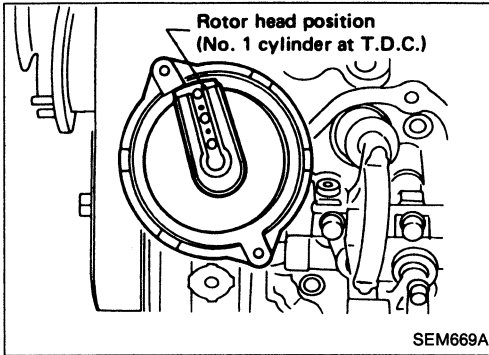


- (2) After installing, confirm that distributor rotor head is set as shown in figure.

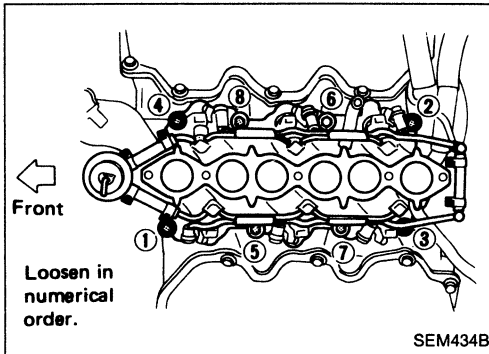


13. Install intake manifold with fuel tube assembly. Install all parts which were removed in step 6 under "CYLINDER HEAD — Removal". (See page EM-24.)

14. Install intake manifold collector. Install all parts which were removed in step 5 under "CYLINDER HEAD — Removal". (See page EM-24.)
15. Install A.S.C.D. and accelerator control wire.

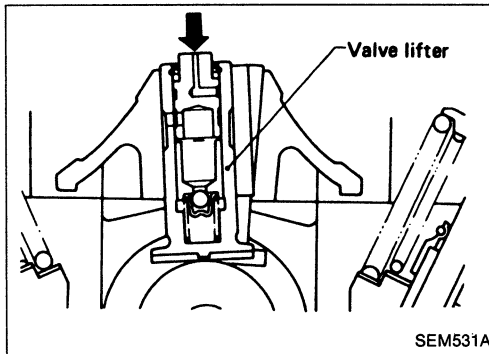

16. Check hydraulic valve lifter.
  - a. Push plunger forcefully with your finger.
    - **Be sure to check it with rocker arm in its free position (not on the lobe).**
  - b. If valve lifter moves more than 1 mm (0.04 in), air may be inside it.
  - c. Bleed air off by running engine at 1,000 rpm under no load for about 10 minutes.
  - d. If hydraulic valve lifters are still noisy, replace them and bleed air off again in the same manner as in step 16 (c).

# ENGINE REMOVAL

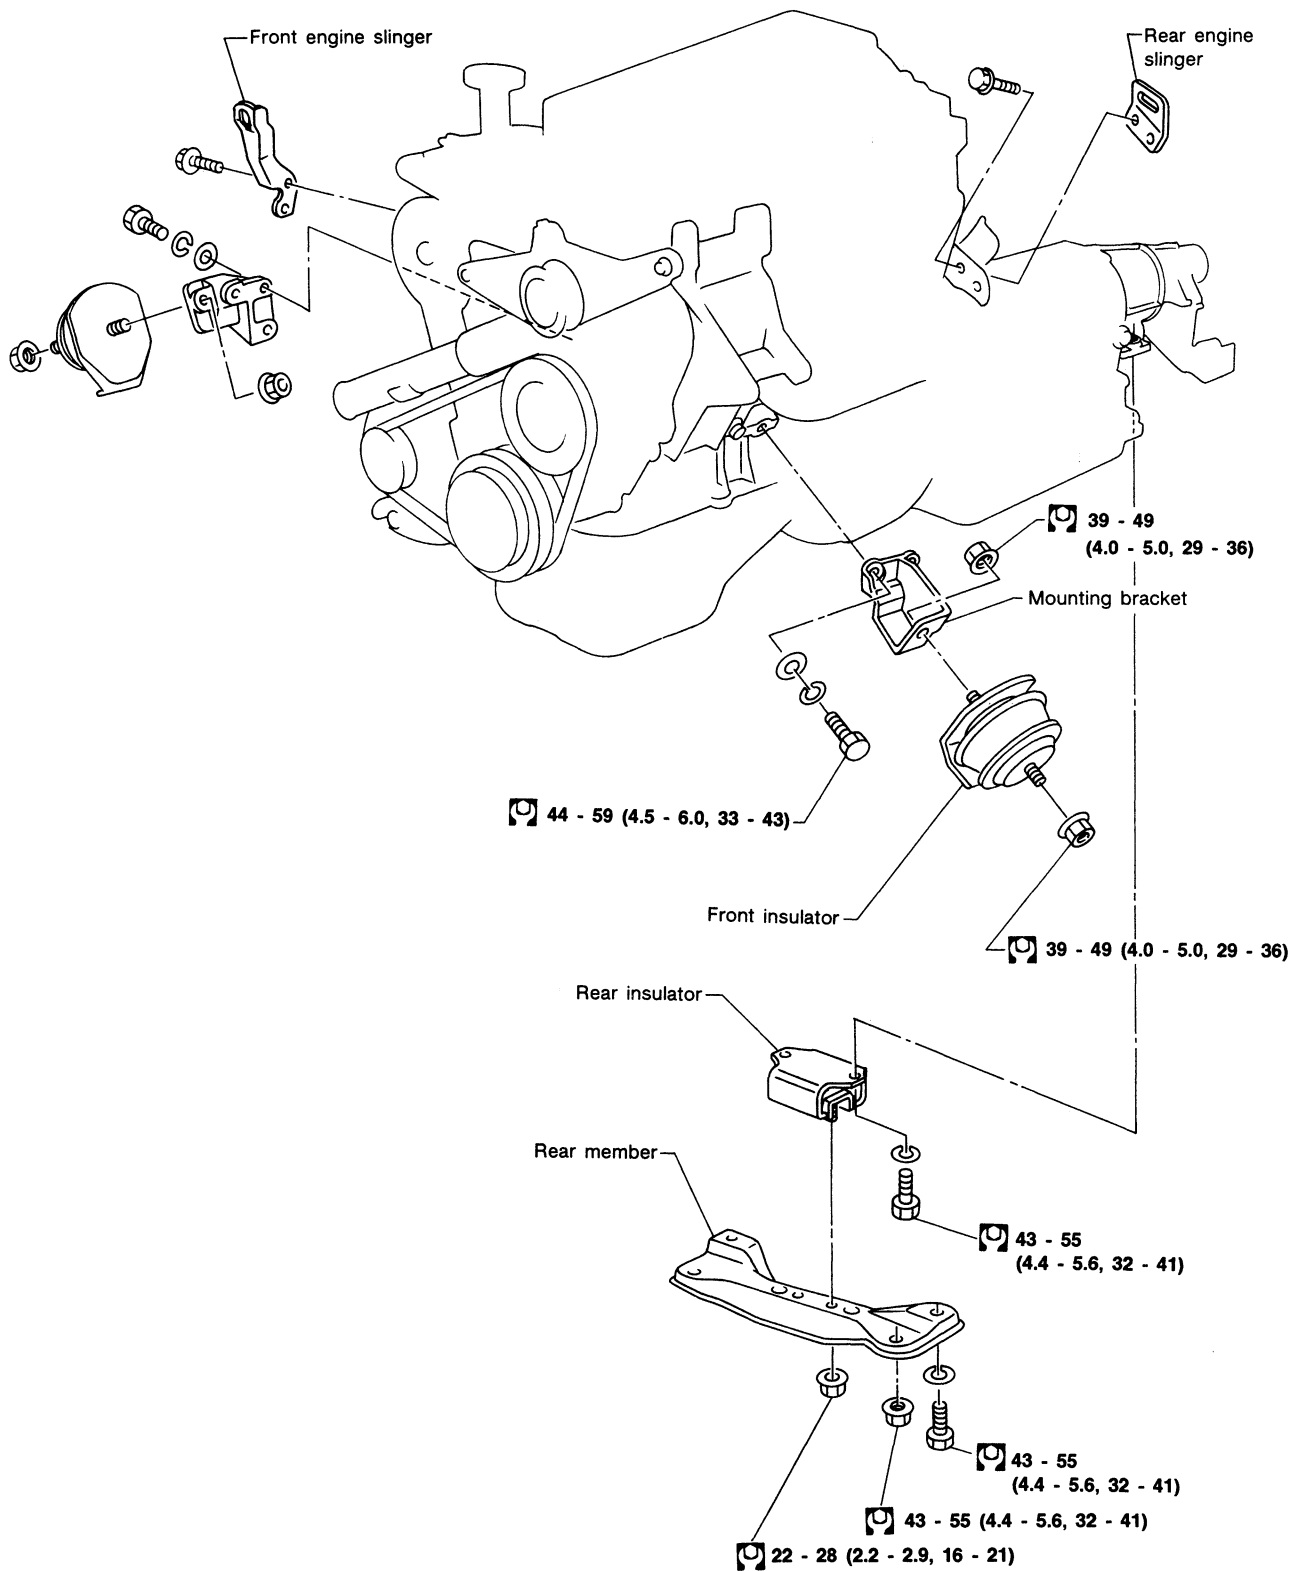

T : N·m (kg-m, ft-lb)

SEM859C


## ENGINE REMOVAL

### WARNING:

- a. Situate vehicle on a flat and solid surface.
- b. Place chocks at front and back of rear wheels.
- c. Do not remove engine until exhaust system has completely cooled off. Otherwise, you may burn yourself and/or fire may break out in fuel line.
- d. For safety during subsequent steps, the tension of wires should be slackened against the engine.
- e. Before disconnecting fuel hose, release fuel pressure from fuel line.  
Refer to "Releasing Fuel Pressure" in section EF & EC.
- f. Before removing front axle from transmission, place safety stands under designated front supporting points. Refer to GI section for lifting points and towing.
- g. Be sure to hoist engine and transmission in a safe manner.
- h. For engines not equipped with engine slingers, attach proper slingers and bolts described in PARTS CATALOG.

### CAUTION:

- When lifting engine, be careful not to strike adjacent parts, especially accelerator wire casing, brake lines, and brake master cylinder.
- In hoisting the engine, always use engine slingers in a safe manner.

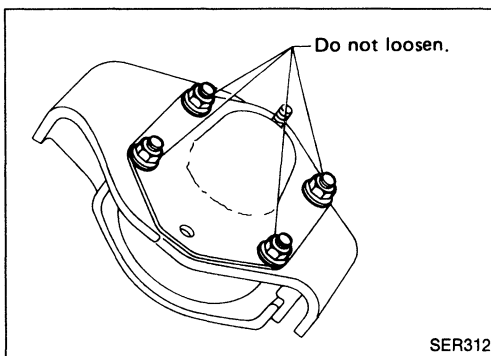

- Do not loosen front engine mounting insulator cover securing nuts.  
When cover is removed, damper oil flows out and mounting insulator will not function.  
For tightening torque, refer to sections AT.  
Sealant should be applied between engine and transmission.


## **ENGINE REMOVAL**

---

### **Removal**

1. Remove engine undercover and hood.
2. Drain engine coolant.
3. Remove vacuum hoses, fuel tubes, wires, harnesses and connectors.
4. Remove radiator with shroud and cooling fan.
5. Remove drive belts.
6. Remove power steering oil pump and air conditioner compressor.
7. Remove front exhaust tube.
8. Install engine slingers.
9. Hoist engine with engine slingers and remove engine mounting bolts from both sides.
10. Remove engine from vehicle.

# CYLINDER BLOCK

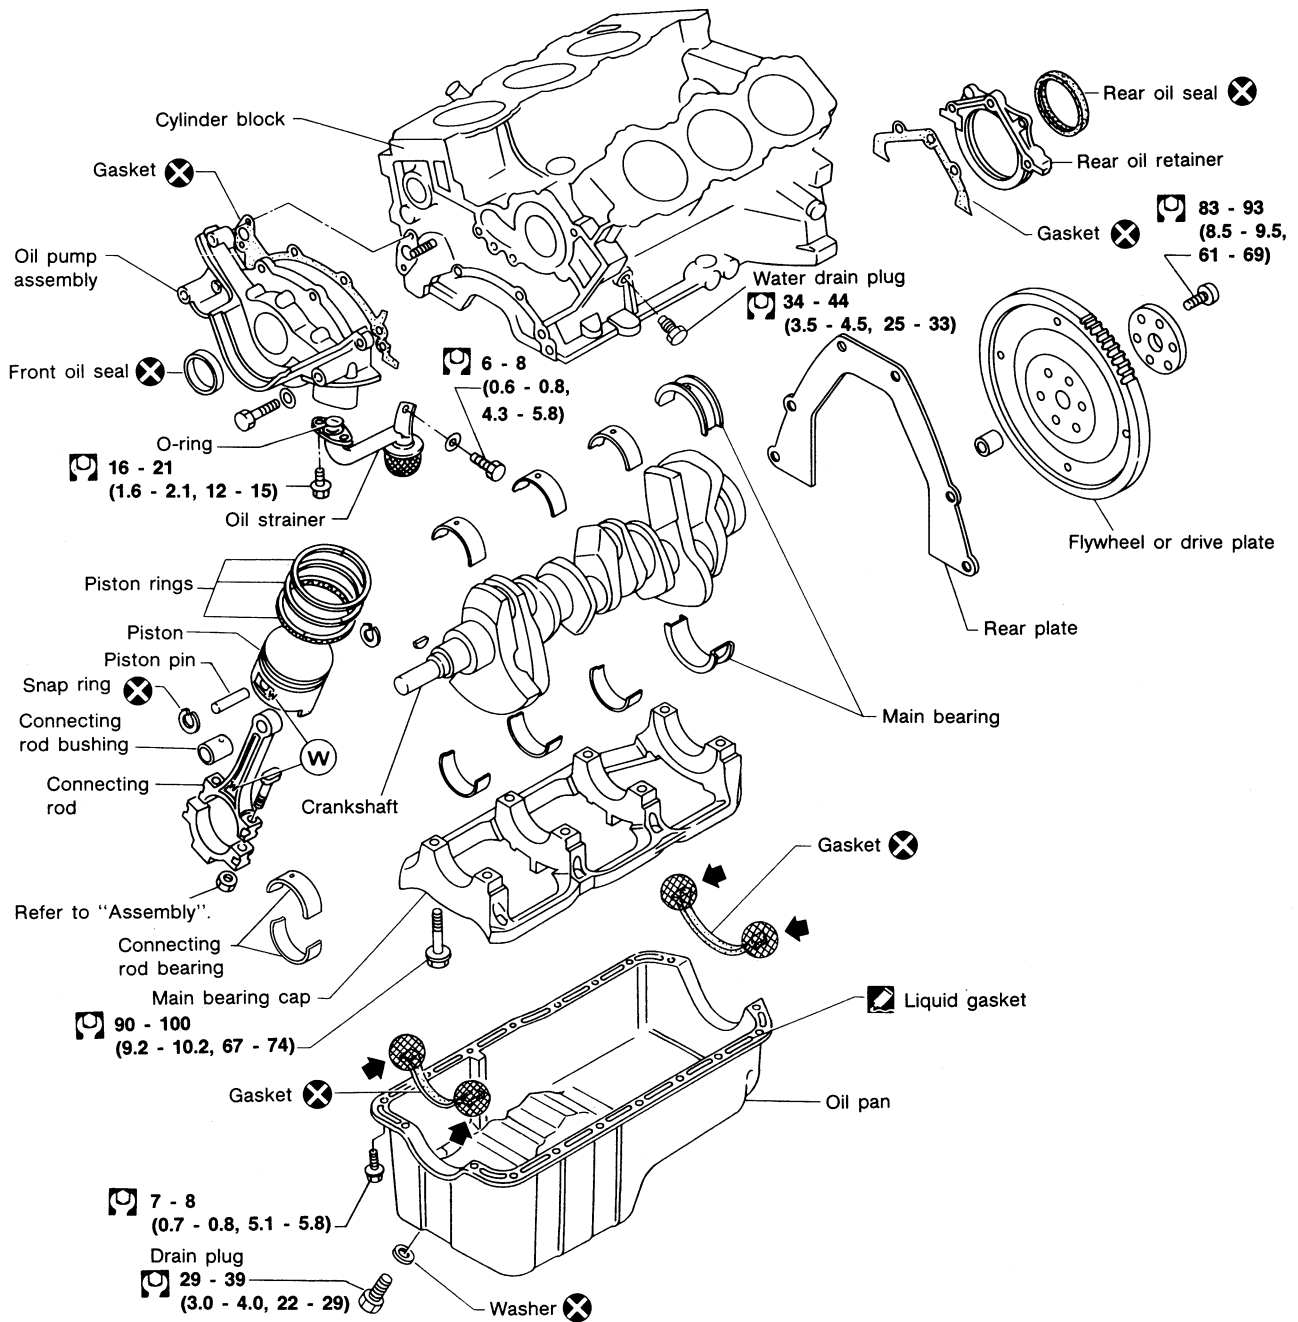


◀ : Apply sealant.

☞ : N•m (kg-m, ft-lb)

# CYLINDER BLOCK

## CAUTION:


- When installing sliding parts such as bearings and pistons, be sure to apply engine oil on the sliding surfaces.
- Place removed parts such as bearings and bearing caps in their proper order and direction.
- When tightening connecting rod bolts and main bearing cap bolts, apply engine oil to thread portion of bolts and seating surface of nuts.

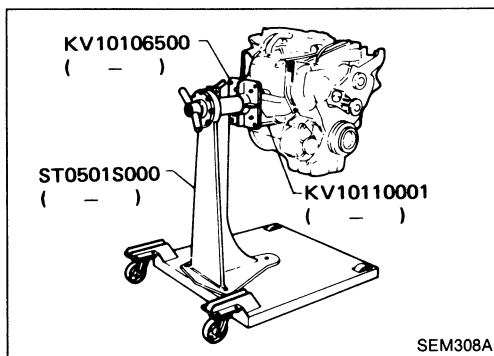


## Disassembly

### PISTON AND CRANKSHAFT

1. Place engine on a work stand.
  2. Drain coolant and oil.
  3. Remove oil pan and oil pump.
  4. Remove timing belt.
  5. Remove water pump.
  6. Remove cylinder head.
  7. Remove pistons with connecting rods.
- When disassembling piston and connecting rod, remove snap ring first, then heat piston to 60 to 70°C (140 to 158°F) or use piston pin press stand at room temperature.

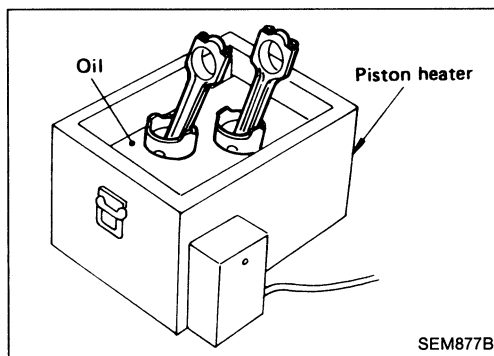


8. Remove bearing cap and crankshaft.
- Before removing bearing cap, measure crankshaft end play.
  - Bolts should be loosened in two or three steps.

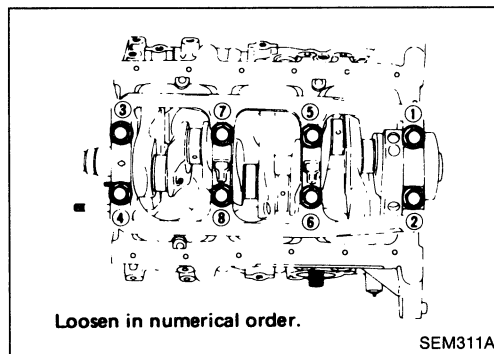

## Inspection


### PISTON AND PISTON PIN CLEARANCE

1. Measure inner diameter of piston pin hole "dp".  
**Standard diameter "dp":**  
20.969 - 20.981 mm (0.8255 - 0.8260 in)

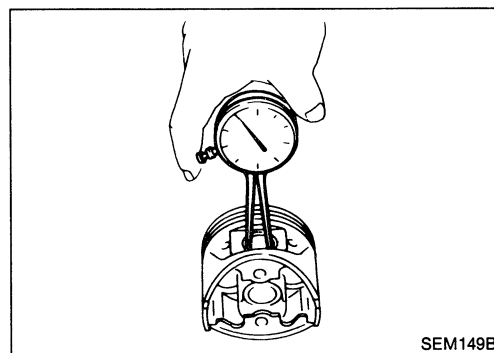


## CYLINDER BLOCK

### Inspection (Cont'd)

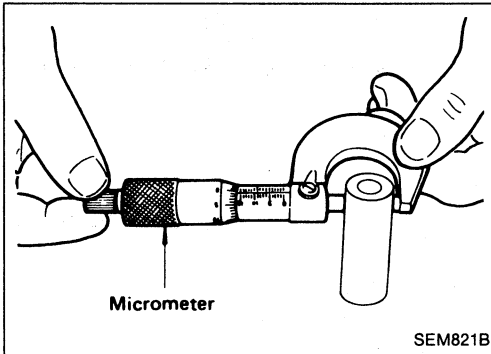

2. Measure outer diameter of piston pin "Dp".  
**Standard diameter "Dp":**  
20.971 - 20.983 mm (0.8256 - 0.8261 in)
  3. Calculate piston pin clearance.  
**dp - Dp = -0.008 to 0.004 mm (-0.0003 to 0.0002 in)**
- If it exceeds the above value, replace piston assembly with pin.

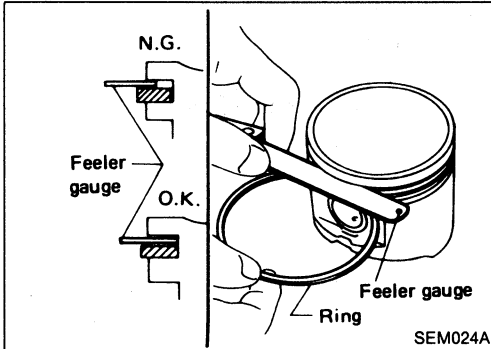

### PISTON RING SIDE CLEARANCE

Side clearance:

Top ring

0.040 - 0.073 mm (0.0016 - 0.0029 in)


2nd ring

0.030 - 0.063 mm (0.0012 - 0.0025 in)

Max. limit of side clearance:

0.1 mm (0.004 in)

If out of specification, replace piston and/or piston ring assembly.

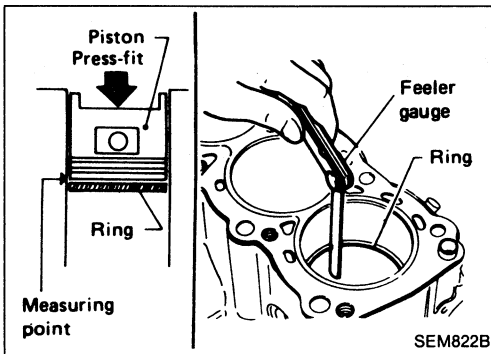

### PISTON RING END GAP

End gap:

Top ring

0.21 - 0.44 mm (0.0083 - 0.0173 in)

2nd ring

0.18 - 0.44 mm (0.0071 - 0.0173 in)

Oil ring


0.20 - 0.76 mm (0.0079 - 0.0299 in)

Max. limit of ring gap:

1.0 mm (0.039 in)

If out of specification, replace piston ring. If gap still exceeds the limit even with a new ring, rebore cylinder and use oversized piston and piston rings.

Refer to S.D.S.

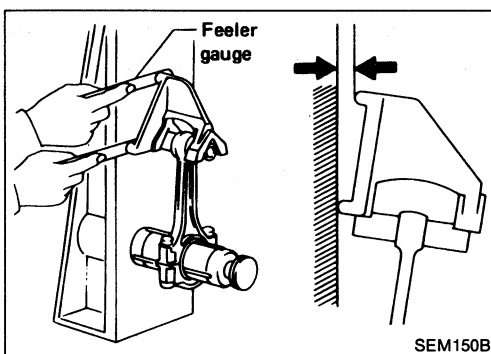

### CONNECTING ROD BEND AND TORSION

Bend:

Limit 0.15 mm (0.0059 in)  
per 100 mm (3.94 in) length

Torsion:

Limit 0.30 mm (0.0118 in)  
per 100 mm (3.94 in) length

If it exceeds the limit, replace connecting rod assembly.



# CYLINDER BLOCK

## Inspection (Cont'd)

### CYLINDER BLOCK DISTORTION AND WEAR

1. Clean upper face of cylinder block and measure the distortion.

**Limit:**

**0.10 mm (0.0039 in)**

2. If out of specification, resurface it.

The resurfacing limit is determined by cylinder head resurfacing in engine.

**Amount of cylinder head resurfacing is "A".**

**Amount of cylinder block resurfacing is "B".**

**The maximum limit is as follows:**


**$A + B = 0.2 \text{ mm (0.008 in)}$**

**Nominal cylinder block height**

**from crankshaft center:**

**227.60 - 227.70 mm (8.9606 - 8.9645 in)**

3. If necessary, replace cylinder block.

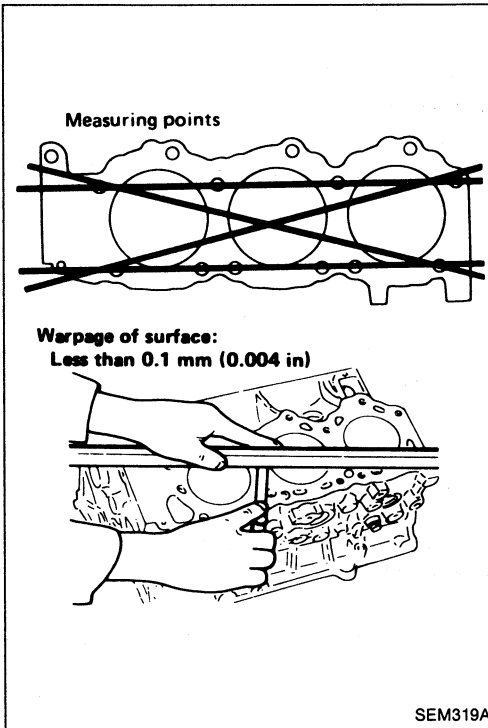

### PISTON-TO-BORE CLEARANCE

1. Using a bore gauge, measure cylinder bore for wear, out-of-round and taper.

**Standard inner diameter:**

**87.000 - 87.030 mm (3.4252 - 3.4264 in)**

**Wear limit:**

**0.20 mm (0.0079 in)**

**Out-of-round (X - Y) limit:**



**0.015 mm (0.0006 in)**

**Taper (A - B) limit:**

**0.015 mm (0.0006 in)**

If it exceeds the limit, rebore all cylinders. Replace cylinder block if necessary.


2. Check for scratches and seizure. If seizure is found, hone it.

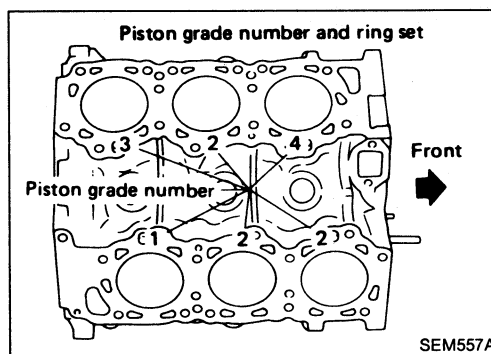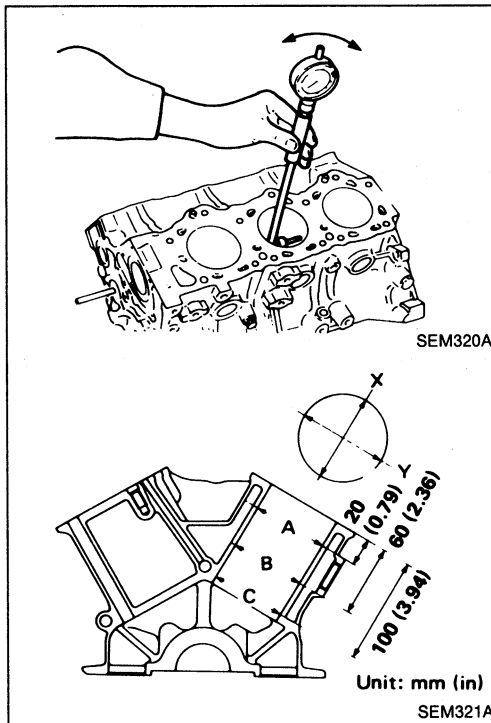

- If both cylinder block and piston are replaced with new ones, select piston of the same grade number punched on cylinder block upper surface.

## CYLINDER BLOCK

### Inspection (Cont'd)

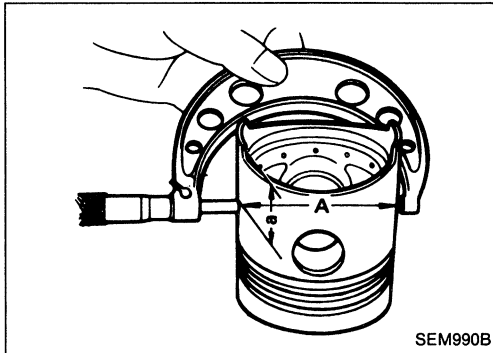

3. Measure piston skirt diameter.  
**Piston diameter "A":**  
Refer to S.D.S.  
**Measuring point "a" (Distance from the bottom):**  
18 mm (0.71 in)
4. Check that piston-to-bore clearance is within specification.  
**Piston-to-bore clearance "B":**  
0.015 - 0.035 mm (0.0006 - 0.0014 in)

5. Determine piston oversize according to amount of cylinder wear.

**Oversize pistons are available for service. Refer to S.D.S.**

6. Cylinder bore size is determined by adding piston-to-bore clearance to piston diameter "A".

**Rebored size calculation:**

$$D = A + B - C$$

where,


**D: Bored diameter**

**A: Piston diameter as measured**

**B: Piston-to-bore clearance**

**C: Honing allowance 0.02 mm (0.0008 in)**

7. Install main bearing caps, and tighten to the specified torque to prevent distortion of cylinder bores in final assembly.
8. Cut cylinder bores.
  - **When any cylinder needs boring, all other cylinders must also be bored.**
  - **Do not cut too much out of cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so in diameter at a time.**
9. Hone cylinders to obtain specified piston-to-bore clearance.
10. Measure finished cylinder bore for out-of-round and taper.
  - **Measurement should be done after cylinder bore cools down.**

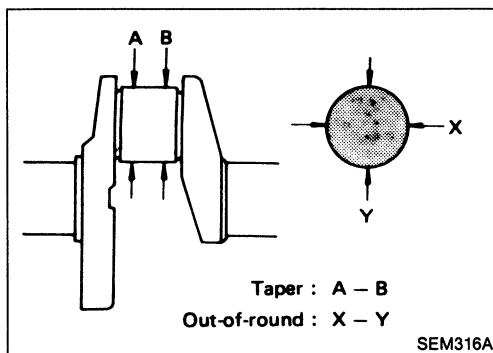

### CRANKSHAFT

1. Check crankshaft main and pin journals for score, wear or cracks.
2. With a micrometer, measure journals for taper and out-of-round.

**Out-of-round (X - Y):**

Less than 0.005 mm (0.0002 in)

**Taper (A - B):**



Less than 0.005 mm (0.0002 in)

# CYLINDER BLOCK

## Inspection (Cont'd)

3. Measure crankshaft runout.

**Runout (Total indicator reading):**  
**Less than 0.10 mm (0.0039 in)**

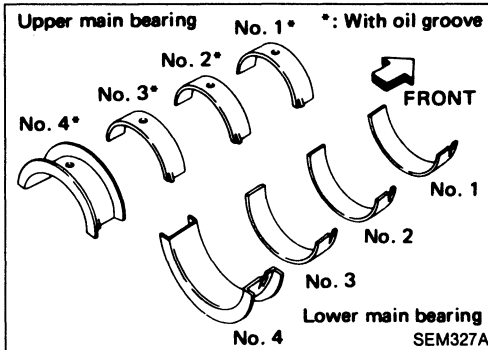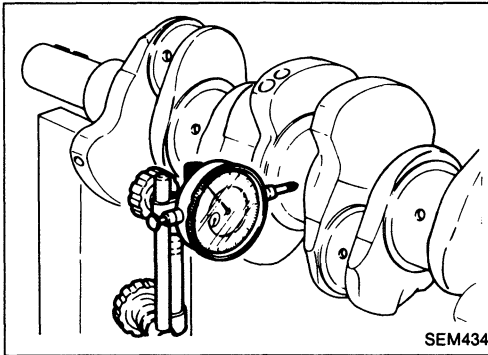


## BEARING CLEARANCE

- Either of the following two methods may be used, however, method A gives more reliable results and is preferable.

### Method A (Using bore gauge & micrometer)

#### Main bearing

1. Set main bearings in their proper positions on cylinder block and main bearing cap.
2. Install main bearing cap to cylinder block.
3. Measure inner diameter "A" of each main bearing.

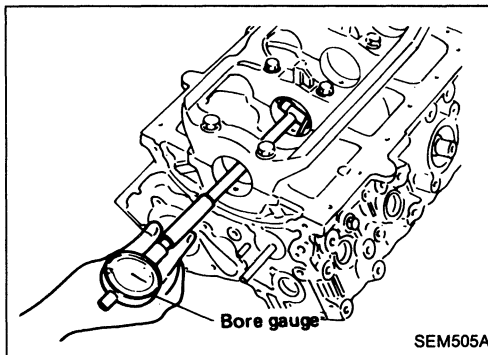

4. Measure outer diameter "Dm" of each crankshaft main journal.
5. Calculate main bearing clearance.

**Main bearing clearance (A - Dm):**


**Standard**

**0.028 - 0.055 mm (0.0011 - 0.0022 in)**

**Limit**


**0.090 mm (0.0035 in)**

6. If it exceeds the limit, replace bearing.
7. If clearance cannot be adjusted within the standard of any bearing, grind crankshaft journal and use undersized bearing.

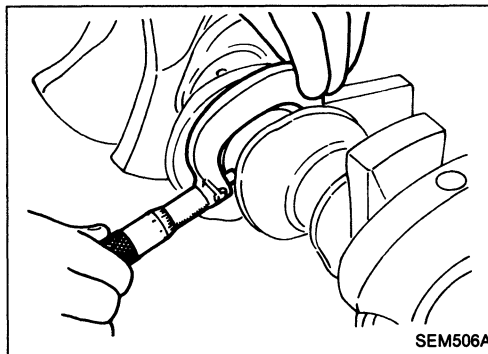


# CYLINDER BLOCK


## Inspection (Cont'd)

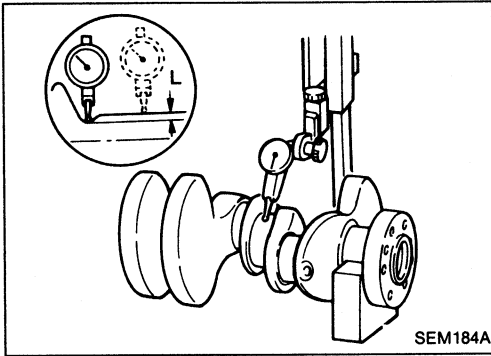

- a. When grinding crankshaft journal, confirm that "L" dimension in fillet roll is more than the specified limit.  
"L": 0.1 mm (0.004 in)
- b. Refer to S.D.S. for grinding crankshaft and available service parts.

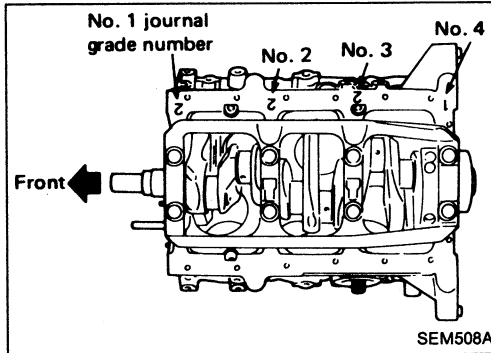

8. If crankshaft is reused, measure main bearing clearances and select thickness of main bearings.  
If crankshaft is replaced with a new one, it is necessary to select thickness of main bearings as follows:
  - a. Grade number of each cylinder block main journal is punched on the respective cylinder block.

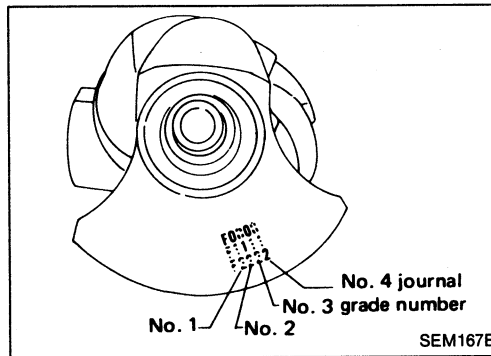

- b. Grade number of each crankshaft main journal is punched on the respective crankshaft.

- c. Select main bearing with suitable thickness according to the following table.

### Main bearing grade number:

Crankshaft journal grade number \ Main journal grade number	0	1	2
	0	0	1
1	1	2	3
2	2	3	4

For example:

Main journal grade number: 1

Crankshaft journal grade number: 2

Main bearing grade number = 1 + 2  
= 3

## CYLINDER BLOCK



### Inspection (Cont'd)

#### Connecting rod bearing (Big end)

1. Install connecting rod bearing to connecting rod and cap.
2. Install connecting rod cap to connecting rod.

#### Tighten bolts to the specified torque.

3. Measure inner diameter "C" of each bearing.

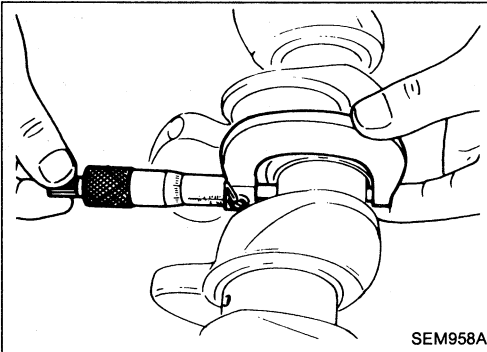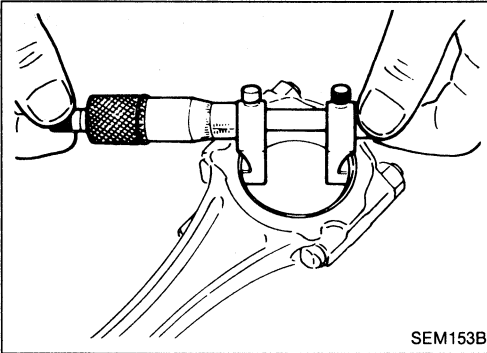

4. Measure outer diameter "Dp" of each crankshaft pin journal.

5. Calculate connecting rod bearing clearance.

#### Connecting rod bearing clearance (C - Dp):

##### Standard


0.014 - 0.054 mm (0.0006 - 0.0021 in)

##### Limit

0.090 mm (0.0035 in)

6. If it exceeds the limit, replace bearing.
7. If clearance cannot be adjusted within the standard of any bearing, grind crankshaft journal and use undersized bearing.


Refer to step 7 of "BEARING CLEARANCE — Main bearing".

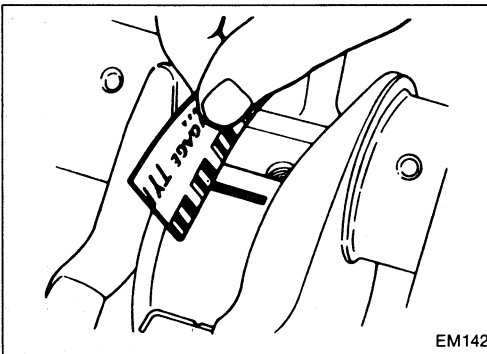

#### Method B (Using plastigauge)

#### CAUTION:

- Do not turn crankshaft or connecting rod while plastigauge is being inserted.
- When bearing clearance exceeds the specified limit, ensure that the proper bearing has been installed. Then if excessive bearing clearance exists, use a thicker main bearing or undersized bearing so that the specified bearing clearance is obtained.

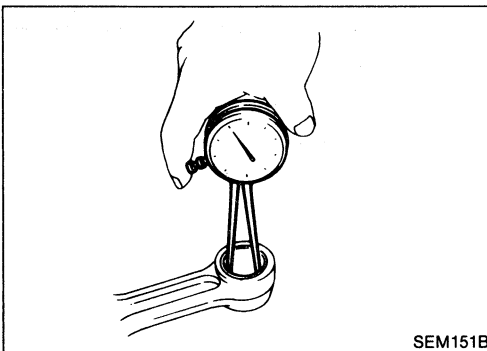


#### CONNECTING ROD BUSHING CLEARANCE (Small end)

1. Measure inner diameter "C" of bushing.

# CYLINDER BLOCK

## Inspection (Cont'd)

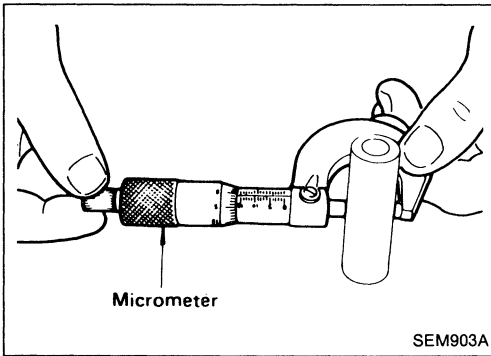

2. Measure outer diameter "Dp" of piston pin.
3. Calculate connecting rod bushing clearance.

$$\text{Connecting rod bushing clearance} = C - D_p$$


**Standard:**

**0.005 - 0.017 mm (0.0002 - 0.0007 in)**

**Limit:**

**0.023 mm (0.0009 in)**

If it exceeds the limit, replace connecting rod assembly or connecting rod bushing and/or piston set with pin.

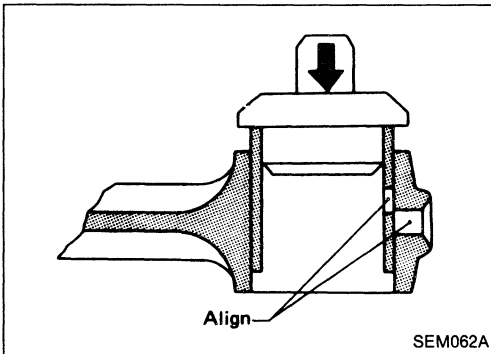

## REPLACEMENT OF CONNECTING ROD BUSHING (Small end)


1. Drive in small end bushing until it is flush with end surface of rod.

**Be sure to align the oil holes.**

2. After driving in small end bushing, ream the bushing so that clearance between connecting rod bushing and piston pin is the specified value.

**Clearance between connecting rod bushing and piston pin:**

**0.005 - 0.017 mm (0.0002 - 0.0007 in)**

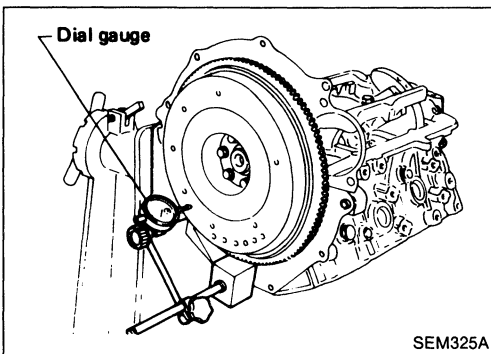

## FLYWHEEL/DRIVE PLATE RUNOUT


**Runout (Total indicator reading):**

**Flywheel (M/T model)**

**Less than 0.15 mm (0.0059 in)**

**Drive plate (A/T model)**

**Less than 0.15 mm (0.0059 in)**

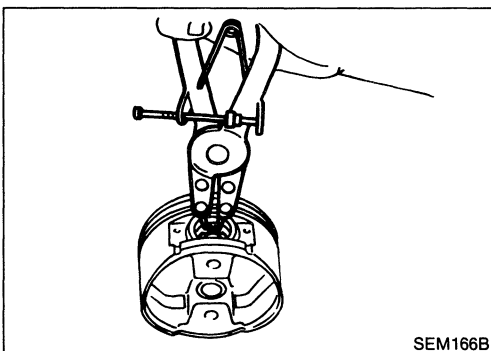


## Assembly

### PISTON


1. Install new snap ring on one side of piston pin hole.

## CYLINDER BLOCK


### Assembly (Cont'd)

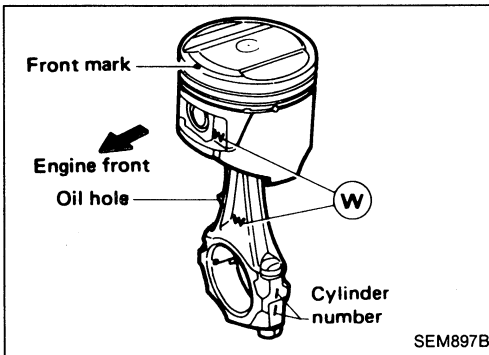

- Heat piston to 60 to 70°C (140 to 158°F) and assemble piston, piston pin, connecting rod and new snap ring.
  - Align the direction of piston and connecting rod.
  - Numbers stamped on connecting rod and cap correspond to each cylinder.
  - After assembly, make sure connecting rod swings smoothly.

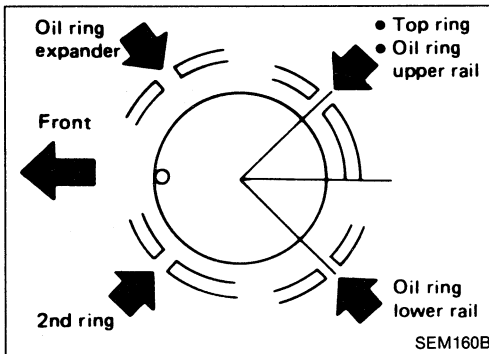


- Set piston rings as shown.

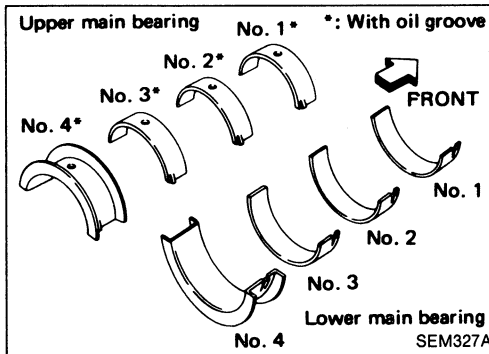


### CRANKSHAFT

- Set main bearings in their proper positions on cylinder block and main bearing cap.
  - Confirm that correct main bearings are used. Refer to "Inspection" in this section.

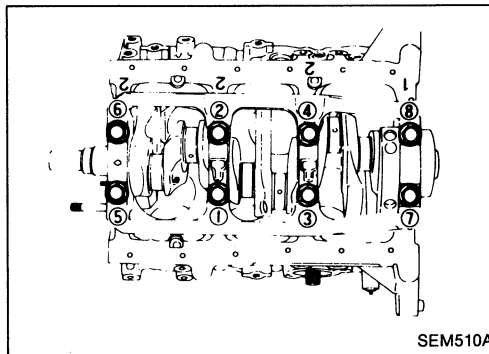

- Install crankshaft and main bearing caps and tighten bolts to the specified torque.
  - Prior to tightening bearing cap bolts, place bearing cap in its proper position by shifting crankshaft in the axial direction.
  - Tighten bearing cap bolts gradually in two or three stages. Start with center bearing and move outward sequentially.
  - After securing bearing cap bolts, make sure crankshaft turns smoothly by hand.

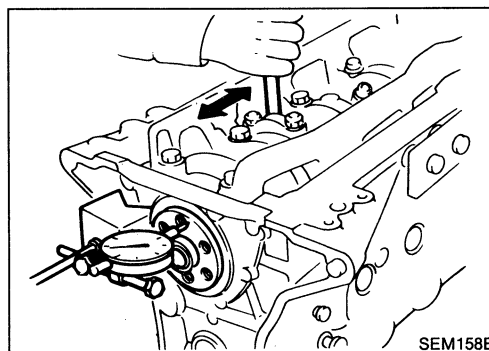

- Measure crankshaft end play.
 

**Crankshaft end play:**






**Standard**  
0.050 - 0.170 mm (0.0020 - 0.0067 in)

**Limit**  
0.30 mm (0.0118 in)

If beyond the limit, replace bearing with a new one.

## CYLINDER BLOCK

### Assembly (Cont'd)

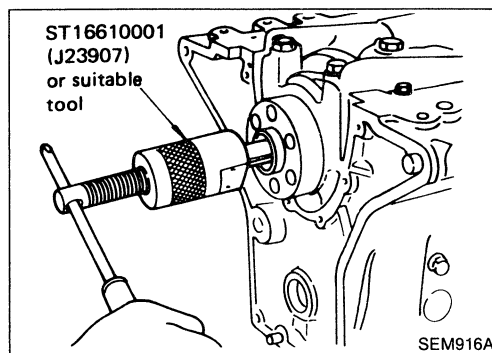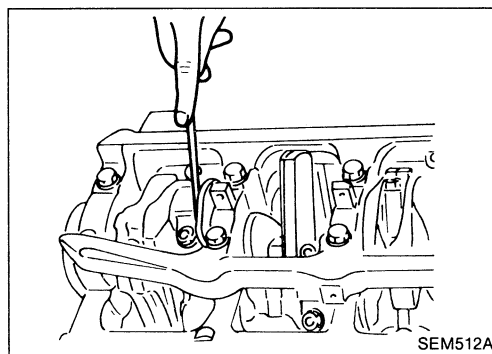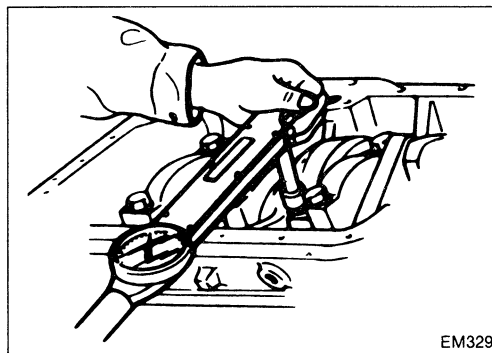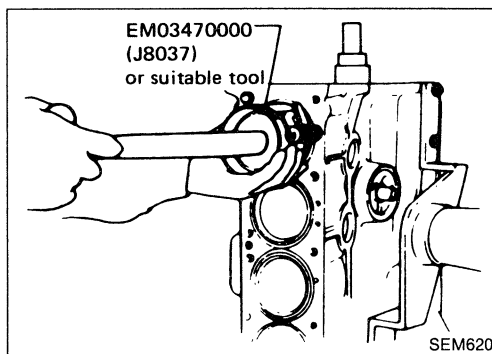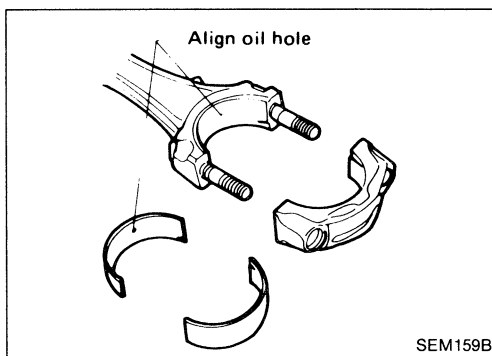

4. Install connecting rod bearings in connecting rods and connecting rod caps.

- **Confirm that correct bearings are used.**

Refer to "Inspection".

- Install bearings so that oil hole in connecting rod aligns with oil hole of bearing.

5. Install pistons with connecting rods.

a. Install them into corresponding cylinders with Tool.

- **Be careful not to scratch cylinder wall by connecting rod.**
- **Arrange so that front mark on piston head faces toward front of engine.**

b. Install connecting rod bearing caps. Tighten connecting rod bearing cap nuts to the specified torque.

☑: **Connecting rod bearing nut**

(1) **Tighten to 14 to 16 N·m  
(1.4 to 1.6 kg-m, 10 to 12 ft-lb).**

(2) **Turn nuts 60 to 65 degrees clockwise.**

**If an angle wrench is not available, tighten nuts to 38 to 44 N·m (3.9 to 4.5 kg-m, 28 to 33 ft-lb).**

6. Measure connecting rod side clearance.

**Connecting rod side clearance:**

**Standard**

**0.20 - 0.35 mm (0.0079 - 0.0138 in)**

**Limit**

**0.40 mm (0.0157 in)**

If beyond the limit, replace connecting rod and/or crankshaft.

### REPLACING PILOT CONVERTER


1. Remove pilot converter.



# CYLINDER BLOCK

## Assembly (Cont'd)

2. Install pilot converter.

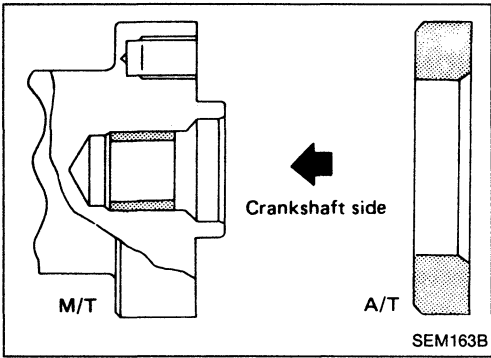

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## General Specifications


Cylinder arrangement	V-6	
Displacement	cm <sup>3</sup> (cu in)	2,960 (180.62)
Bore and stroke	mm (in)	87 × 83 (3.43 × 3.27)
Valve arrangement	O.H.C.	
Firing order	1-2-3-4-5-6	
Number of piston rings		
Compression	2	
Oil	1	
Number of main bearings	4	
Compression ratio	9.0	

## COMPRESSION PRESSURE

Unit: kPa (kg/cm<sup>2</sup>, psi)/300 rpm

Compression pressure		
Standard	1,196 (12.2, 173)	
Minimum	883 (9.0, 128)	
Differential limit between cylinders	98 (1.0, 14)	

Cylinder number

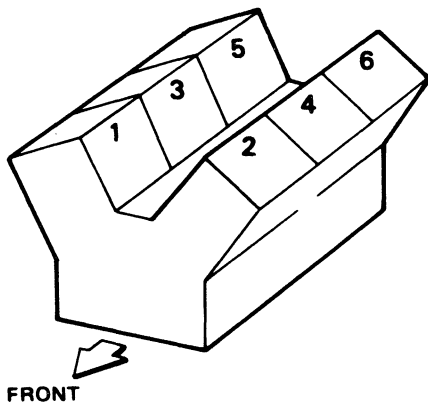

SEM713A


# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Inspection and Adjustment VALVE


### CYLINDER HEAD

Unit: mm (in)

	Standard	Limit
Head surface distortion	Less than 0.03 (0.0012)	0.1 (0.004)

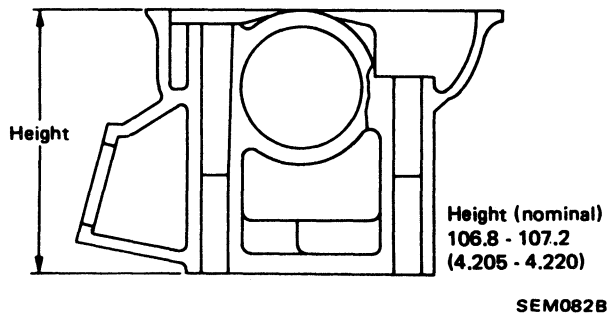

Unit: mm (in)

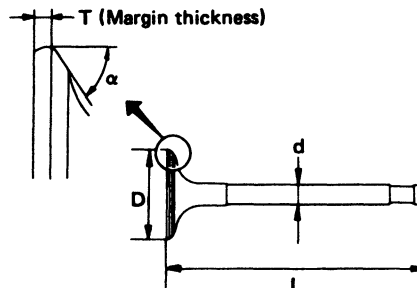

#### Valve head diameter "D"

Intake	42.0 - 42.2 (1.654 - 1.661)
Exhaust	35.0 - 35.2 (1.378 - 1.386)

#### Valve length "L"

Intake	125.3 - 125.9 (4.933 - 4.957)
Exhaust	124.2 - 124.8 (4.890 - 4.913)

#### Valve stem diameter "d"

Intake	6.965 - 6.980 (0.2742 - 0.2748)
Exhaust	7.965 - 7.970 (0.3136 - 0.3138)

#### Valve seat angle " $\alpha$ "

Intake	45°15' - 45°45'
Exhaust	

#### Valve margin "T"

Intake	1.15 - 1.45 (0.0453 - 0.0571)
Exhaust	1.35 - 1.65 (0.0531 - 0.0650)

#### Valve margin "T" limit

More than 0.5 (0.020)

#### Valve stem end surface grinding limit

Less than 0.2 (0.008)

#### Valve clearance

Intake	0 (0)
Exhaust	0 (0)

### Valve spring

Free height	mm (in)	Outer	51.2 (2.016)
		Inner	44.1 (1.736)
Pressure N (kg, lb) at height mm (in)		Outer	523.7 (53.4, 117.7) at 30.0 (1.181)
		Inner	255.0 (26.0, 57.3) at 25.0 (0.984)
Out-of-square	mm (in)	Outer	2.2 (0.087)
		Inner	1.9 (0.075)

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Inspection and Adjustment (Cont'd)

### Hydraulic valve lifter

Unit: mm (in)

Lifter outside diameter	15.947 - 15.957 (0.6278 - 0.6282)
Lifter guide inside diameter	16.000 - 16.013 (0.6299 - 0.6304)
Clearance between lifter and lifter guide	0.043 - 0.066 (0.0017 - 0.0026)

### Valve guide

Unit: mm (in)

Valve guide		Standard	Service
Outer diameter	Intake	11.023 - 11.034 (0.4340 - 0.4344)	11.223 - 11.234 (0.4418 - 0.4423)
	Exhaust	12.023 - 12.034 (0.4733 - 0.4738)	12.223 - 12.234 (0.4812 - 0.4817)
Inner diameter (Finished size)	Intake	7.000 - 7.018 (0.2756 - 0.2763)	
	Exhaust	8.000 - 8.018 (0.3150 - 0.3157)	
Cylinder head valve guide hole diameter	Intake	10.975 - 10.996 (0.4321 - 0.4329)	11.175 - 11.196 (0.4400 - 0.4408)
	Exhaust	11.975 - 11.996 (0.4715 - 0.4723)	12.175 - 12.196 (0.4793 - 0.4802)
Interference fit of valve guide	Intake	0.027 - 0.059 (0.0011 - 0.0023)	
	Exhaust		
Stem to guide clearance	Intake	0.020 - 0.053 (0.0008 - 0.0021)	0.10 (0.0039)
	Exhaust	0.030 - 0.053 (0.0012 - 0.0021)	
Valve deflection limit			0.20 (0.0079)


### Rocker shaft and rocker arm

Unit: mm (in)

Rocker shaft	
Outer diameter	17.979 - 18.000 (0.7078 - 0.7087)
Rocker arm	
Inner diameter	18.007 - 18.028 (0.7089 - 0.7098)
Clearance between rocker arm and rocker shaft	0.007 - 0.049 (0.0003 - 0.0019)


### Intake valve seat

Standard

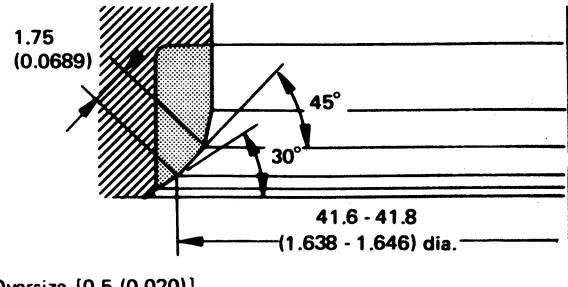

Oversize [0.5 (0.020)]

R0.3 - 0.5  
(0.012 - 0.020)

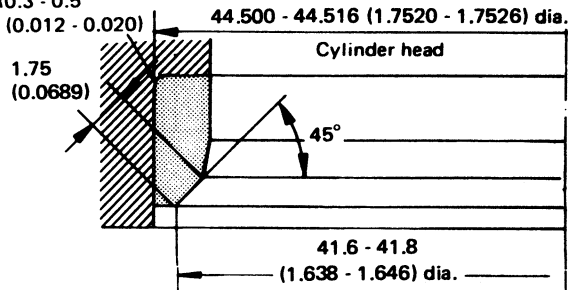


Unit: mm (in)

SEM755A


### Exhaust valve seat

Standard

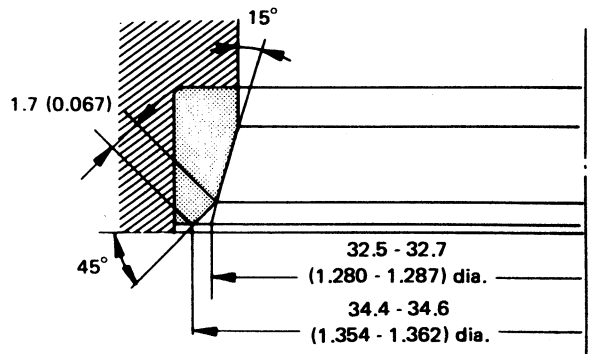

Oversize [0.5 (0.020)]

R0.3 - 0.5  
(0.012 - 0.020)

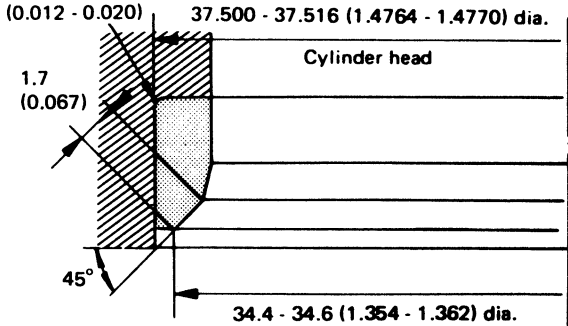

Unit: mm (in)


SEM756A

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Inspection and Adjustment (Cont'd)


### CAMSHAFT AND CAMSHAFT BEARING

Unit: mm (in)

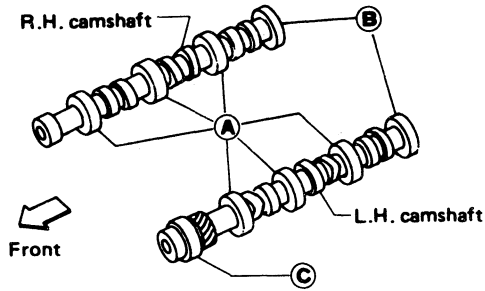

SEM893B

	Standard	Max. tolerance
Camshaft journal to bearing clearance	0.060 - 0.105 (0.0024 - 0.0041)	—
Inner diameter of camshaft bearing	A : 47.000 - 47.025 (1.8504 - 1.8514)	—
	B : 42.500 - 42.525 (1.6732 - 1.6742)	—
	C : 48.000 - 48.025 (1.8898 - 1.8907)	—
Outer diameter of camshaft journal	A : 46.920 - 46.940 (1.8472 - 1.8480)	—
	B : 42.420 - 42.440 (1.6701 - 1.6709)	—
	C : 47.920 - 47.940 (1.8866 - 1.8874)	—
Camshaft runout [T.I.R.*]	Less than 0.04 (0.0016)	0.1 (0.004)
Camshaft end play	0.03 - 0.06 (0.0012 - 0.0024)	—

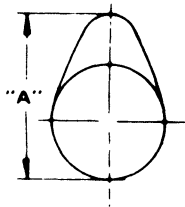


EM671

#### Cam height "A"

Intake	39.537 - 39.727 (1.5566 - 1.5641)
Exhaust	
Wear limit of cam height	0.15 (0.0059)

\*Total indicator reading

Valve timing

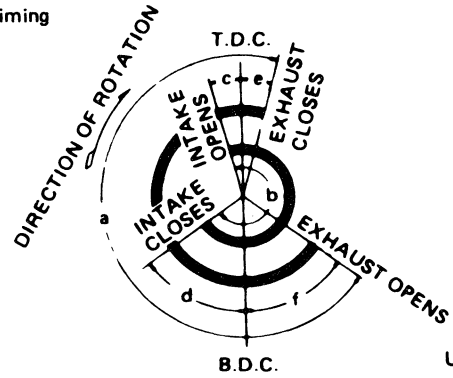

EM120

Unit: degree


a	b	c	d	e	f
248	248	10	58	10	58

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Inspection and Adjustment (Cont'd)

### CYLINDER BLOCK

Unit: mm (in)

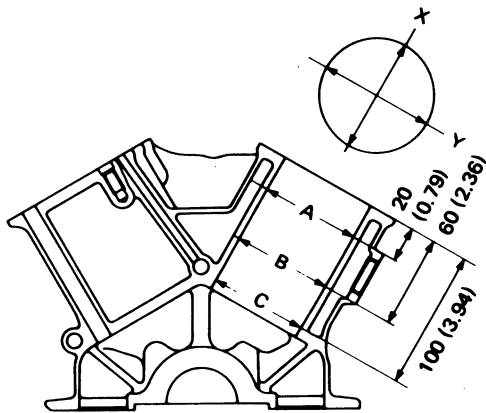

SEM321A

#### Surface flatness

Standard	Less than 0.03 (0.0012)
Limit	0.10 (0.0039)

#### Cylinder bore

##### Inner diameter

##### Standard

Grade No. 1	87.000 - 87.010 (3.4252 - 3.4256)
Grade No. 2	87.010 - 87.020 (3.4256 - 3.4260)
Grade No. 3	87.020 - 87.030 (3.4260 - 3.4264)

Wear limit	0.20 (0.0079)
------------	---------------

Out-or-round (X - Y)	Less than 0.015 (0.0006)
----------------------	--------------------------

Taper (A - B - C)	Less than 0.015 (0.0006)
-------------------	--------------------------

#### Main journal inner diameter

Grade No. 0	66.645 - 66.654 (2.6238 - 2.6242)
Grade No. 1	66.654 - 66.663 (2.6242 - 2.6245)
Grade No. 2	66.663 - 66.672 (2.6245 - 2.6249)


#### Difference in inner diameter between cylinders

Standard	Less than 0.05 (0.0020)
----------	-------------------------

### PISTON, PISTON RING AND PISTON PIN

#### Available piston

Unit: mm (in)

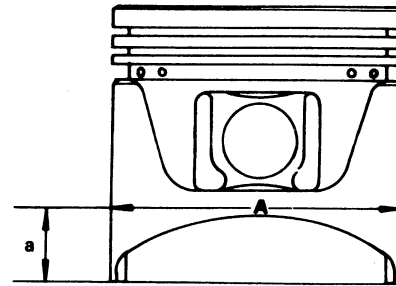

SEM891B

#### Piston skirt diameter "A"

##### Standard

Grade No. 1	86.965 - 86.975 (3.4238 - 3.4242)
Grade No. 2	86.975 - 86.985 (3.4242 - 3.4246)
Grade No. 3	86.985 - 86.995 (3.4246 - 3.4250)
0.25 (0.0098) over-size (Service)	87.215 - 87.265 (3.4337 - 3.4356)
0.50 (0.0197) over-size (Service)	87.465 - 87.515 (3.4435 - 3.4455)

"a" dimension	18 (0.71)
---------------	-----------

Piston pin hole diameter	20.969 - 20.981 (0.8255 - 0.8260)
--------------------------	-----------------------------------

Piston clearance to cylinder block	0.025 - 0.045 (0.0010 - 0.0018)
------------------------------------	---------------------------------

#### Piston ring

Unit: mm (in)

	Standard	Limit
Side clearance		
Top	0.040 - 0.073 (0.0016 - 0.0029)	0.1 (0.004)
2nd	0.030 - 0.063 (0.0012 - 0.0025)	
Ring gap		1.0 (0.039)
Top	0.21 - 0.44 (0.0083 - 0.0173)	
2nd	0.18 - 0.44 (0.0071 - 0.0173)	
Oil (rail ring)	0.20 - 0.76 (0.0079 - 0.0299)	

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Inspection and Adjustment (Cont'd)

### Piston pin

Unit: mm (in)

Piston pin outer diameter	20.971 - 20.983 (0.8256 - 0.8261)
Interference fit of piston pin to piston	-0.008 to 0.004 (-0.0003 to 0.0002)
Piston pin to connecting rod bushing clearance	0.005 - 0.017 (0.0002 - 0.0007)

Values measured at ambient temperature of 20°C (68°F)

### CONNECTING ROD

Unit: mm (in)


Center distance	154.1 - 154.2 (6.067 - 6.071)
Bend, torsion [per 100 (3.94)]	
Limit	Bend: 0.15 (0.0059) Torsion: 0.30 (0.0118)
Piston pin bushing inner diameter*	20.982 - 20.994 (0.8261 - 0.8265)
Connecting rod big end inner diameter	53.000 - 53.013 (2.0866 - 2.0871)
Side clearance	
Standard	0.20 - 0.35 (0.0079 - 0.0138)
Limit	0.40 (0.0157)

\*After installing in connecting rod

### CRANKSHAFT


Unit: mm (in)

Main journal dia. "Dm"	
Grade No. 0	62.967 - 62.975 (2.4790 - 2.4793)
Grade No. 1	62.959 - 62.967 (2.4787 - 2.4790)
Grade No. 2	62.951 - 62.959 (2.4784 - 2.4787)
Pin journal dia. "Dp"	49.955 - 49.974 (1.9667 - 1.9675)
Center distance "r"	41.5 (1.634)
Out-of-round (X - Y)	
Standard	Less than 0.005 (0.0002)
Taper (A - B)	
Standard	Less than 0.005 (0.0002)
Runout [T.I.R.]	
Standard	Less than 0.10 (0.0039)
Free end play	
Standard	0.050 - 0.170 (0.0020 - 0.0067)
Limit	0.30 (0.0118)

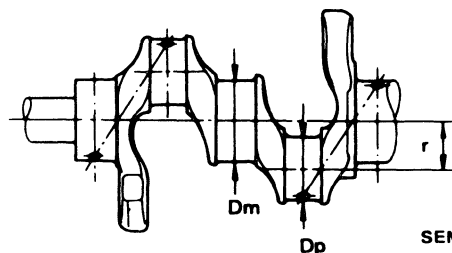

SEM645

Out-of-round X - Y  
Taper A - B

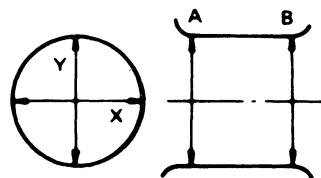


EM715

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Inspection and Adjustment (Cont'd)

### AVAILABLE MAIN BEARING

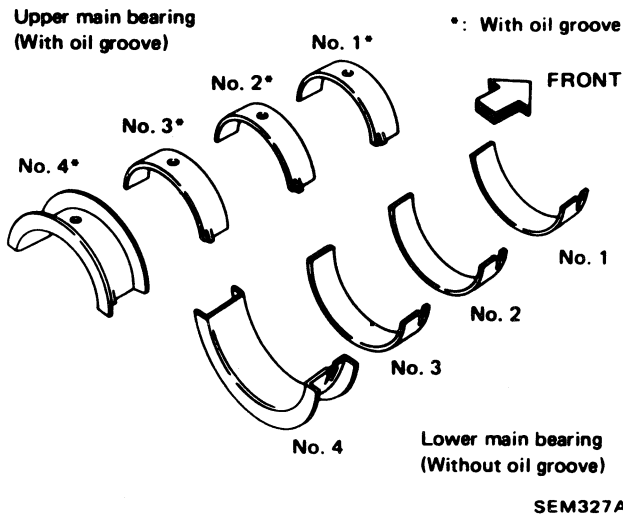

### No. 1 main bearing

Grade number	Thickness "T" mm (in)	Width "W" mm (in)	Identification color
0	1.817 - 1.821 (0.0715 - 0.0717)		Black
1	1.821 - 1.825 (0.0717 - 0.0719)		Brown
2	1.825 - 1.829 (0.0719 - 0.0720)	22.4 - 22.6 (0.882 - 0.890)	Green
3	1.829 - 1.833 (0.0720 - 0.0722)		Yellow
4	1.833 - 1.837 (0.0722 - 0.0723)		Blue

### No. 2 and 3 main bearing

Grade number	Thickness "T" mm (in)	Width "W" mm (in)	Identification color
0	1.817 - 1.821 (0.0715 - 0.0717)		Black
1	1.821 - 1.825 (0.0717 - 0.0719)		Brown
2	1.825 - 1.829 (0.0719 - 0.0720)	18.9 - 19.1 (0.744 - 0.752)	Green
3	1.829 - 1.833 (0.0720 - 0.0722)		Yellow
4	1.833 - 1.837 (0.0722 - 0.0723)		Blue

### No. 4 main bearing

Grade number	Thickness "T" mm (in)	Identification color
0	1.817 - 1.821 (0.0715 - 0.0717)	Black
1	1.821 - 1.825 (0.0717 - 0.0719)	Brown
2	1.825 - 1.829 (0.0719 - 0.0720)	Green
3	1.829 - 1.833 (0.0720 - 0.0722)	Yellow
4	1.833 - 1.837 (0.0722 - 0.0723)	Blue

### Main bearing 0.25 mm (0.0098 in) undersize

Unit: mm (in)

Thickness "T" 1.948 - 1.956 (0.0767 - 0.0770)

### AVAILABLE CONNECTING ROD BEARING

#### Connecting rod bearing undersize

Unit: mm (in)

	Thickness	Crank pin journal diameter "Dp"
Standard	1.502 - 1.506 (0.0591 - 0.0593)	49.955 - 49.974 (1.9667 - 1.9675)
Undersize		
0.08 (0.0031)	1.542 - 1.546 (0.0607 - 0.0609)	
0.12 (0.0047)	1.562 - 1.566 (0.0615 - 0.0617)	Grind so that bearing clearance is the specified value.
0.25 (0.0098)	1.627 - 1.631 (0.0641 - 0.0642)	

### MISCELLANEOUS COMPONENTS

Unit: mm (in)

#### Flywheel

Runout [T.I.R.] Less than 0.15 (0.0059)



# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

---

## Inspection and Adjustment (Cont'd)

### Bearing clearance

Unit: mm (in)

---

#### Main bearing clearance

Standard 0.028 - 0.055 (0.0011 - 0.0022)

Limit 0.090 (0.0035)

---

#### Connecting rod bearing clearance

Standard 0.014 - 0.054 (0.0006 - 0.0021)

Limit 0.090 (0.0035)

---



# ENGINE LUBRICATION & COOLING SYSTEMS

## SECTION **LC**

**LC**

### CONTENTS

PRECAUTIONS .....	LC- 2
PREPARATION .....	LC- 3
ENGINE LUBRICATION SYSTEM .....	LC- 4
ENGINE COOLING SYSTEM .....	LC- 8
RADIATOR FAN MOTOR ELECTRICAL CIRCUIT .....	LC-14
SERVICE DATA AND SPECIFICATIONS (S.D.S.) .....	LC-18


## PRECAUTIONS

### Supplemental Restraint System "AIR BAG"

The Infiniti M30 has a Supplemental Restraint System "Air Bag", to help reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag (located in the center of the steering wheel), five sensors, a control unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the BF section of this Service Manual.

#### WARNING:

- a. To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized INFINITI dealer.
- b. Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- c. All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation and related components are located in the steering column, center console, dash, upper radiator core support and front fenders. Do not use electrical test equipment on these circuits.

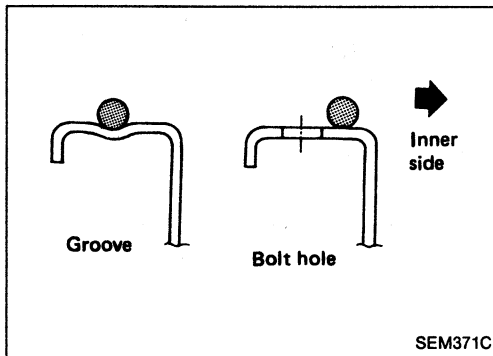
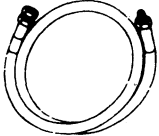
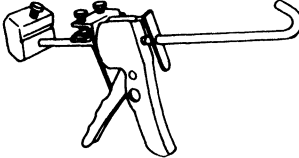
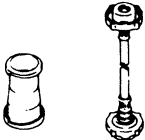


### Liquid Gasket Application Procedure

- a. Before applying liquid gasket, use a scraper to remove all traces of old liquid gasket from mating surface.
- b. Apply a continuous bead of liquid gasket to mating surfaces. (Use Genuine Liquid Gasket or equivalent.)
  - Be sure liquid gasket is 3.5 to 4.5 mm (0.138 to 0.177 in) wide (for oil pan).
  - Be sure liquid gasket is 2.0 to 3.0 mm (0.079 to 0.118 in) wide (in areas except oil pan).
- c. Apply liquid gasket to inner sealing surface around hole perimeter area. (Assembly should be done within 5 minutes after coating.)
- d. Wait at least 30 minutes before refilling engine oil and engine coolant.


# PREPARATION

## SPECIAL SERVICE TOOLS

Tool number (Kent-Moore No.) Tool name	Description
ST25051001 (J25695-1) Oil pressure gauge	 A circular oil pressure gauge with a needle and a threaded fitting on the left side.
ST25052000 (J25695-2) Hose	Adapting oil pressure gauge to cylinder block  A circular hose with two fittings on opposite sides.
EG17650301 ( — ) Radiator cap tester adapter	Pressing the tube of liquid gasket  A mechanical tool with a handle and a long, curved tube.
WS39930000 ( — ) Tube presser	Adapting radiator cap tester to radiator neck  Two small mechanical components: a cylindrical tube and a tool with a handle and a circular head.

# ENGINE LUBRICATION SYSTEM


## Lubrication Circuit

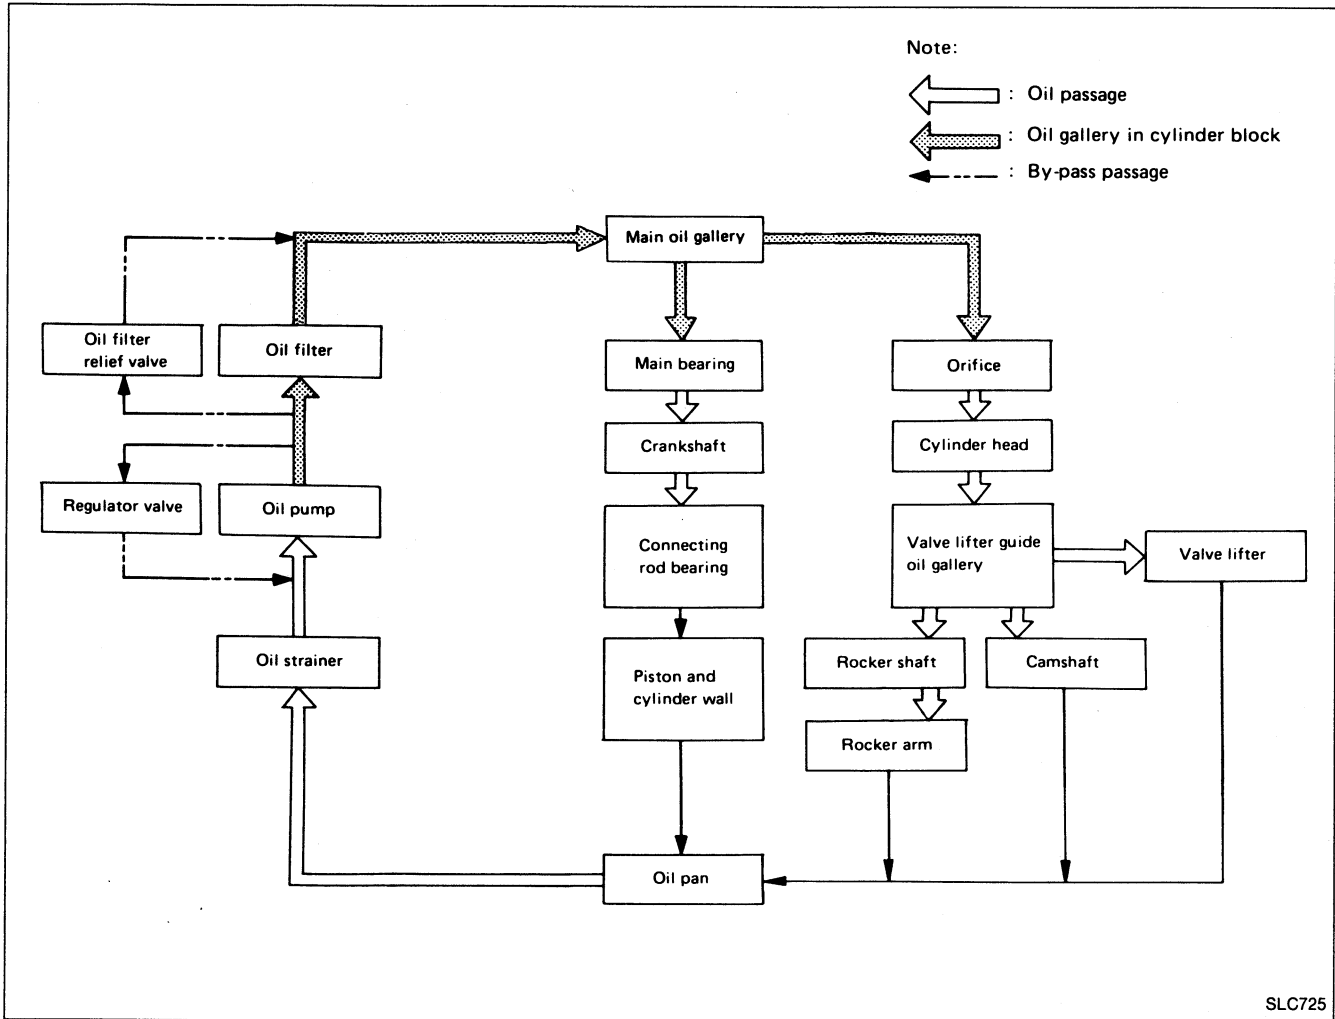

## Oil Pressure Check

### WARNING:


- Be careful not to burn yourself, as the engine and oil may be hot.
- Oil pressure check should be done in "Neutral" gear position.

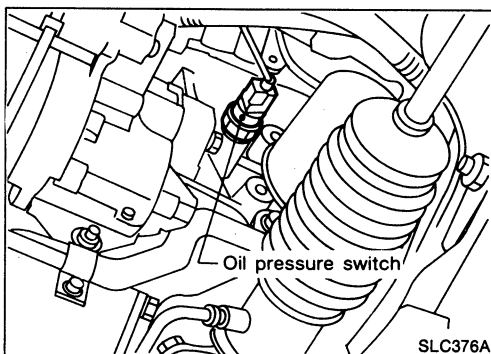

1. Check oil level.
2. Remove oil pressure switch.

# ENGINE LUBRICATION SYSTEM

## Oil Pressure Check (Cont'd)

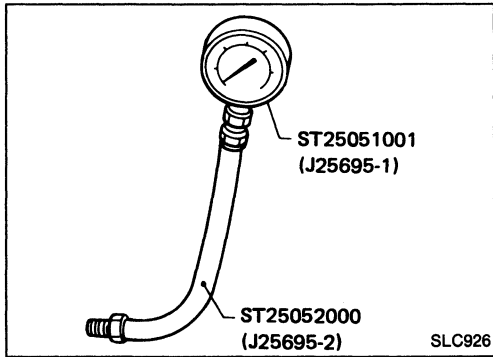


3. Install pressure gauge.
4. Start engine and warm it up to normal operating temperature.
5. Check oil pressure with engine running under no-load.

Engine rpm	Approximate discharge pressure kPa (kg/cm <sup>2</sup> , psi)
Idle speed	More than 59 (0.6, 9)
3,200	363 - 451 (3.7 - 4.6, 53 - 65)

**If difference is extreme, check oil passage and oil pump for oil leaks.**

6. Install oil pressure switch with sealant.

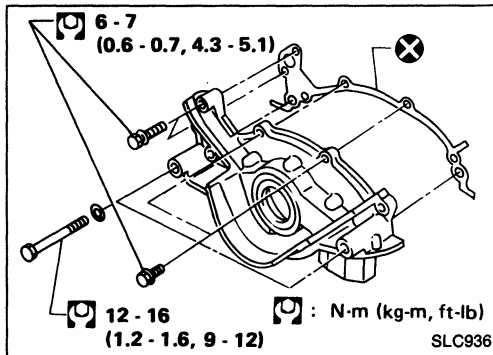


## Oil Pump

### REMOVAL

1. Drain oil.
2. Remove oil pan.
3. Remove oil pump assembly.

# ENGINE LUBRICATION SYSTEM

## Oil Pump (Cont'd) DISASSEMBLY AND ASSEMBLY

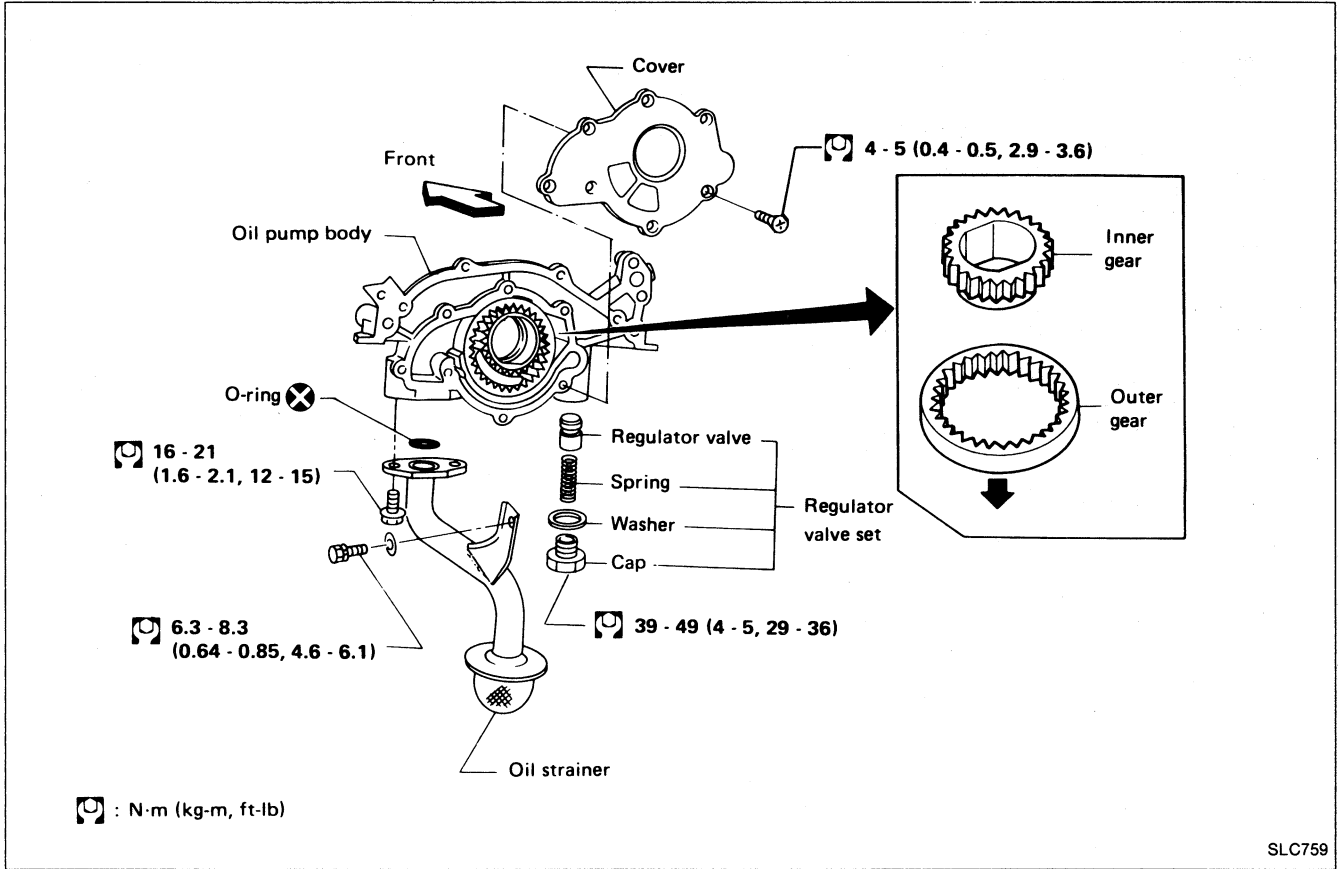

- Always replace with new oil seal and gasket.
- When installing oil pump, apply engine oil to inner and outer gears.
- Be sure that O-ring is properly installed.

### INSPECTION



Using a feeler gauge, check the following clearances:

#### Standard clearance:

Unit: mm (in)

Body to outer gear clearance ①	0.11 - 0.20 (0.0043 - 0.0079)
Inner gear to crescent clearance ②	0.12 - 0.23 (0.0047 - 0.0091)
Outer gear to crescent clearance ③	0.21 - 0.32 (0.0083 - 0.0126)
Housing to inner gear clearance ④	0.05 - 0.09 (0.0020 - 0.0035)
Housing to outer gear clearance ⑤	0.05 - 0.11 (0.0020 - 0.0043)

If any clearance exceeds the limit, replace gear set or entire oil pump assembly.

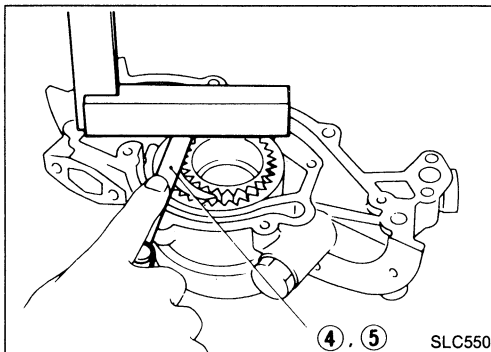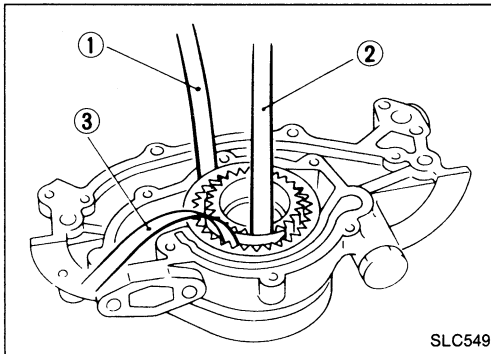





# ENGINE LUBRICATION SYSTEM

## Oil Pump (Cont'd)

### REGULATOR VALVE INSPECTION

1. Visually inspect components for wear and damage.
2. Check oil pressure regulator valve sliding surface and valve spring.
3. Coat regulator valve with engine oil and check to make sure that it falls smoothly into the valve hole by its own weight.

**If damaged, replace regulator valve set or oil pump assembly.**

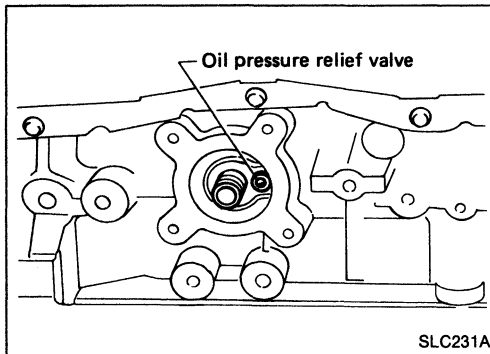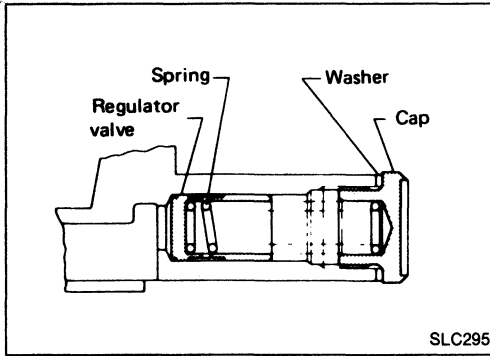


### OIL PRESSURE RELIEF VALVE INSPECTION

Inspect oil pressure relief valve for movement, cracks and breaks by pushing the ball. If replacement is necessary, remove valve by prying it out with a suitable tool.

Install a new valve by tapping it.

# ENGINE COOLING SYSTEM

## Cooling Circuit

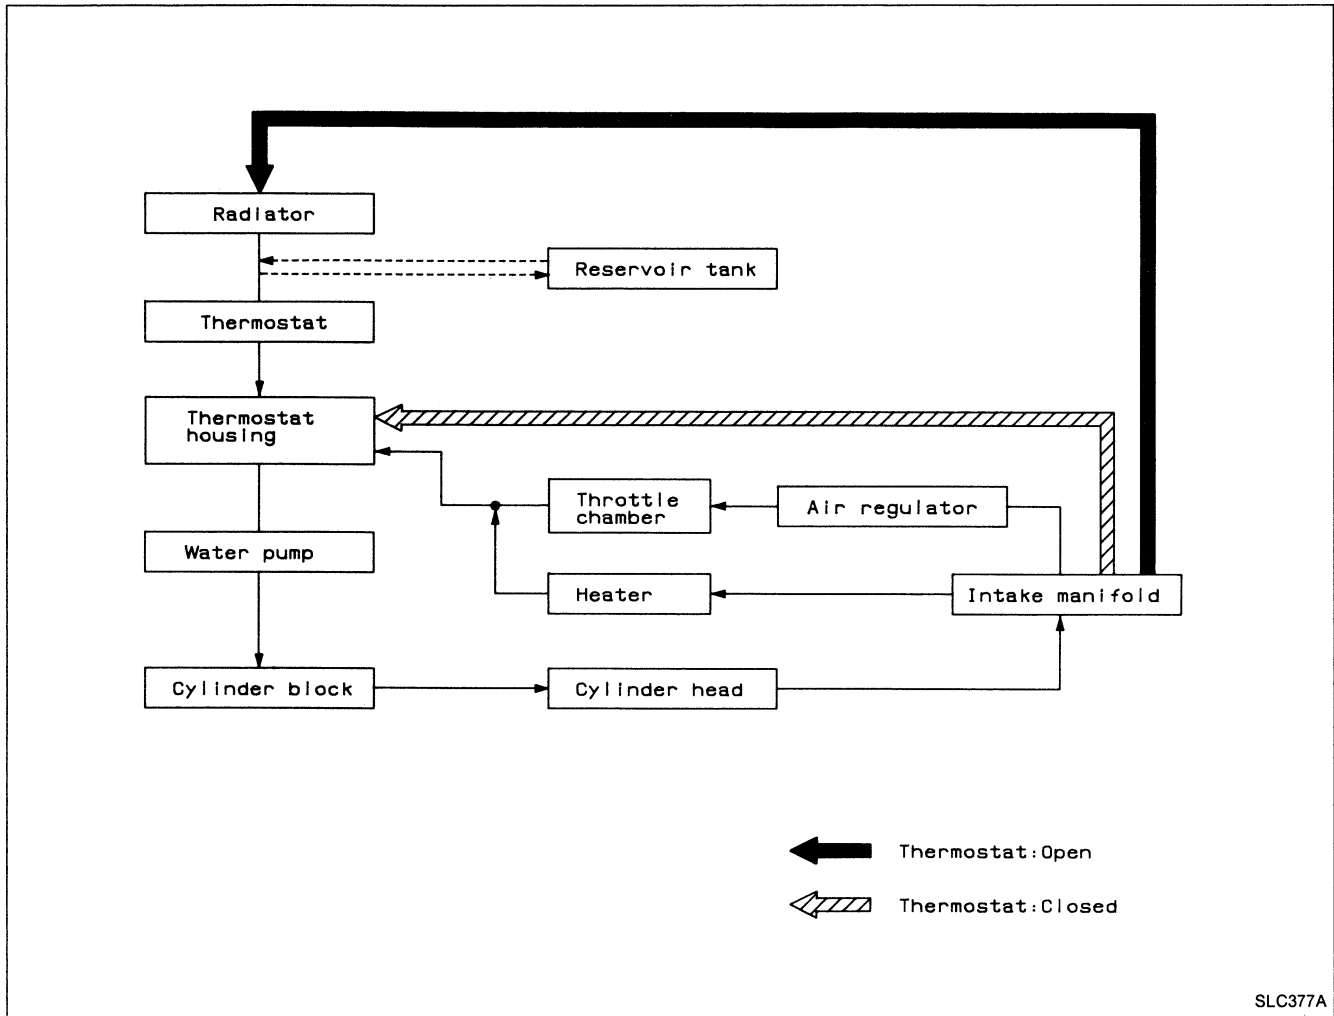

## System Check

### WARNING:

Never remove the radiator cap when the engine is hot; serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around the cap and carefully remove it by turning it a quarter turn to allow built-up pressure to escape. Continue turning the cap until it can be removed.

## CHECKING COOLING SYSTEM HOSES

Check hoses for improper attachment, leaks, cracks, damage, loose connections, chafing and deterioration.

# ENGINE COOLING SYSTEM

## System Check (Cont'd)


### CHECKING COOLING SYSTEM FOR LEAKS

To check for leakage, apply pressure to the cooling system with a tester.

Testing pressure:  
98 kPa (1.0 kg/cm<sup>2</sup>, 14 psi)

#### CAUTION:


Higher than the specified pressure may cause radiator damage.

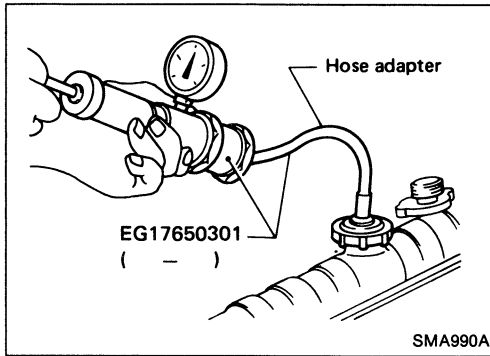

### CHECKING RADIATOR CAP

To check radiator cap, apply pressure to cap with a tester.



Radiator cap relief pressure:  
78 - 98 kPa (0.8 - 1.0 kg/cm<sup>2</sup>, 11 - 14 psi)

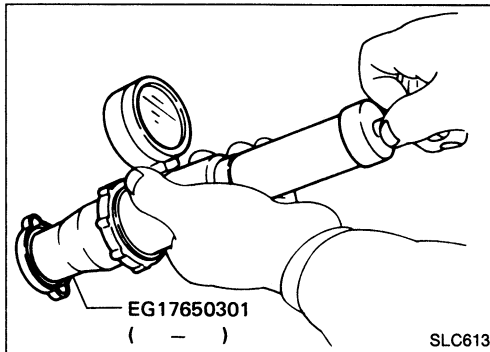

## Water Pump


### REMOVAL AND INSTALLATION

Drain coolant from drain cocks on both sides of cylinder block and radiator.

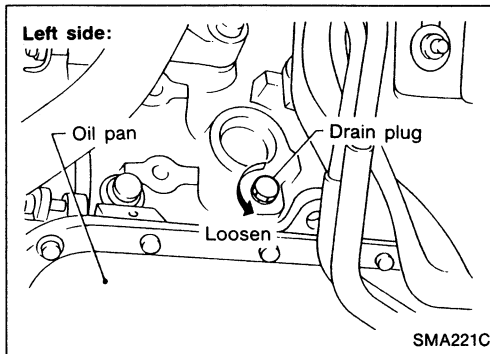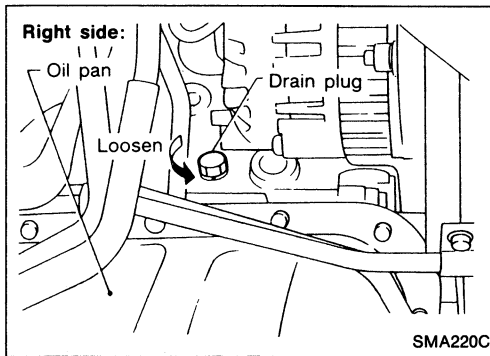


# ENGINE COOLING SYSTEM

## Water Pump (Cont'd)

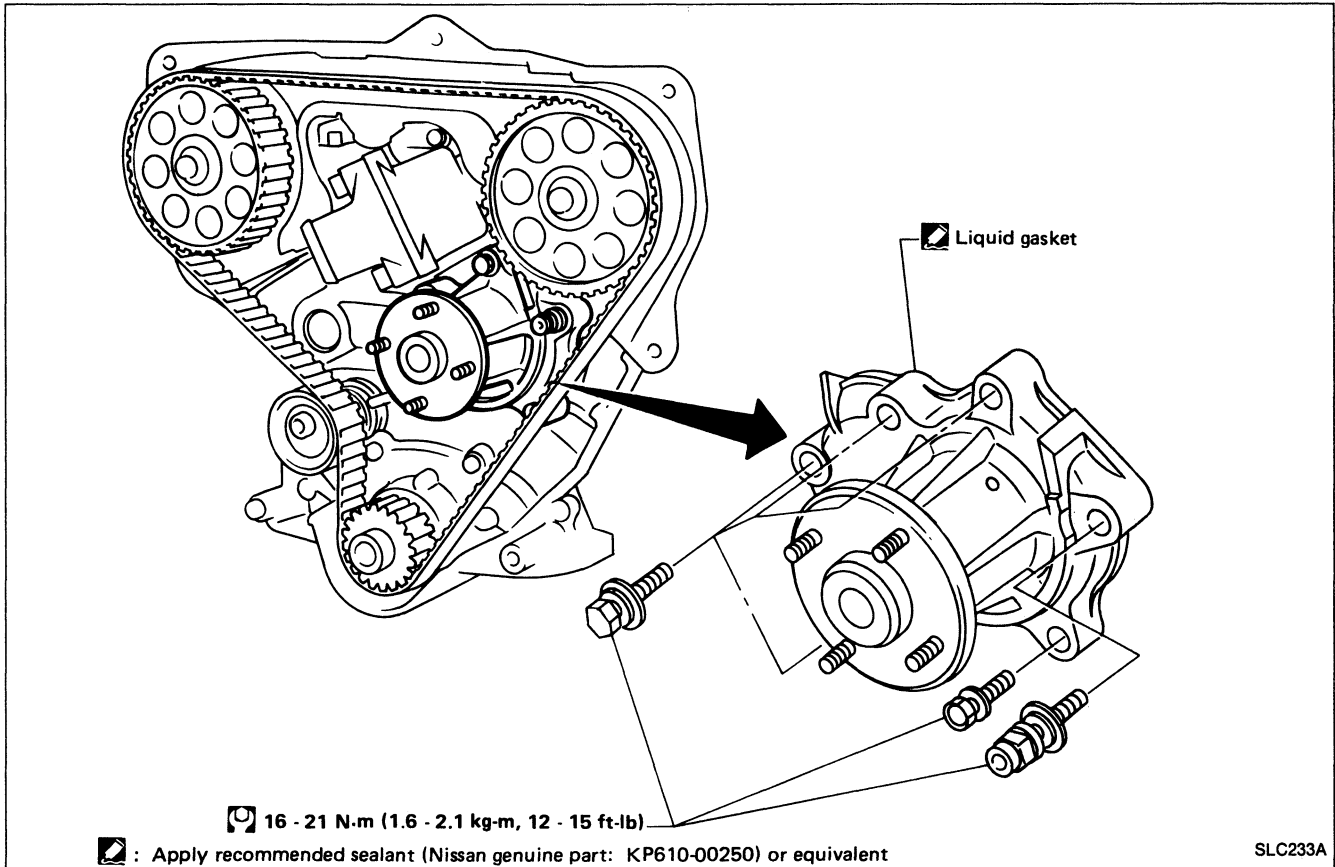

### CAUTION:

- When removing water pump assembly, be careful not to get coolant on timing belt.
- Water pump cannot be disassembled and should be replaced as a unit.
- To avoid deforming timing cover, make sure there is adequate clearance between it and the hose clamp.
- After installing water pump, connect hose and clamp securely, then check for leaks using radiator cap tester.

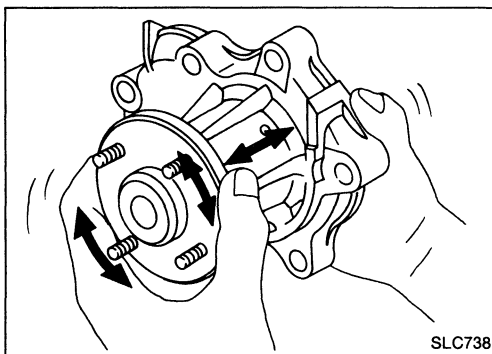

### INSPECTION



1. Check for badly rusted or corroded body assembly and vanes.
2. Check for rough operation due to excessive end play.

# ENGINE COOLING SYSTEM

## Thermostat

### INSPECTION

1. Check valve seating condition at ordinary temperatures. It should seat tightly.

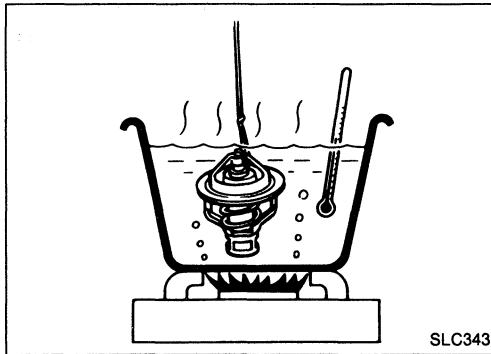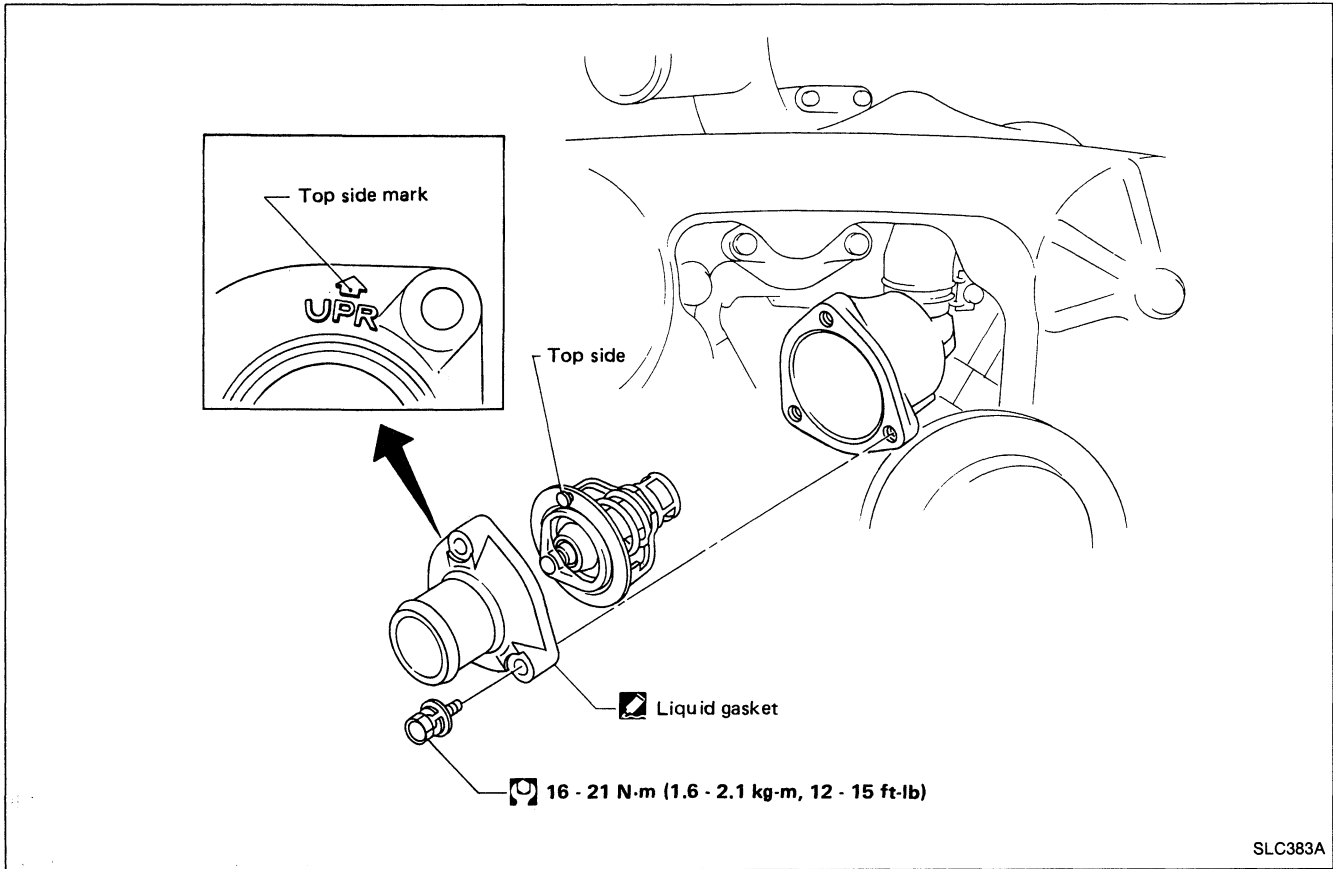

2. Check valve opening temperature and maximum valve lift.

		Standard
Valve opening temperature	°C (°F)	76.5 (170)
Maximum valve lift	mm/°C (in/°F)	10/90 (0.39/194)


3. Then check if valve is closed at 5°C (9°F) below valve opening temperature.
  - After installation, run engine for a few minutes, and check for leaks.
  - Be careful not to spill coolant over engine compartment. Use a rag to absorb coolant.


# ENGINE COOLING SYSTEM

## Radiator


### REMOVAL AND INSTALLATION

1. Remove under cover.
2. Drain coolant from radiator drain cock.
3. Disconnect radiator upper and lower hoses.
4. Remove A/T oil cooler hoses.
5. Remove radiator lower shroud.
6. Remove air duct.
7. Disconnect reservoir tank hose.
8. Remove radiator.
9. After repairing or replacing radiator, install any part removed in reverse order of removal.

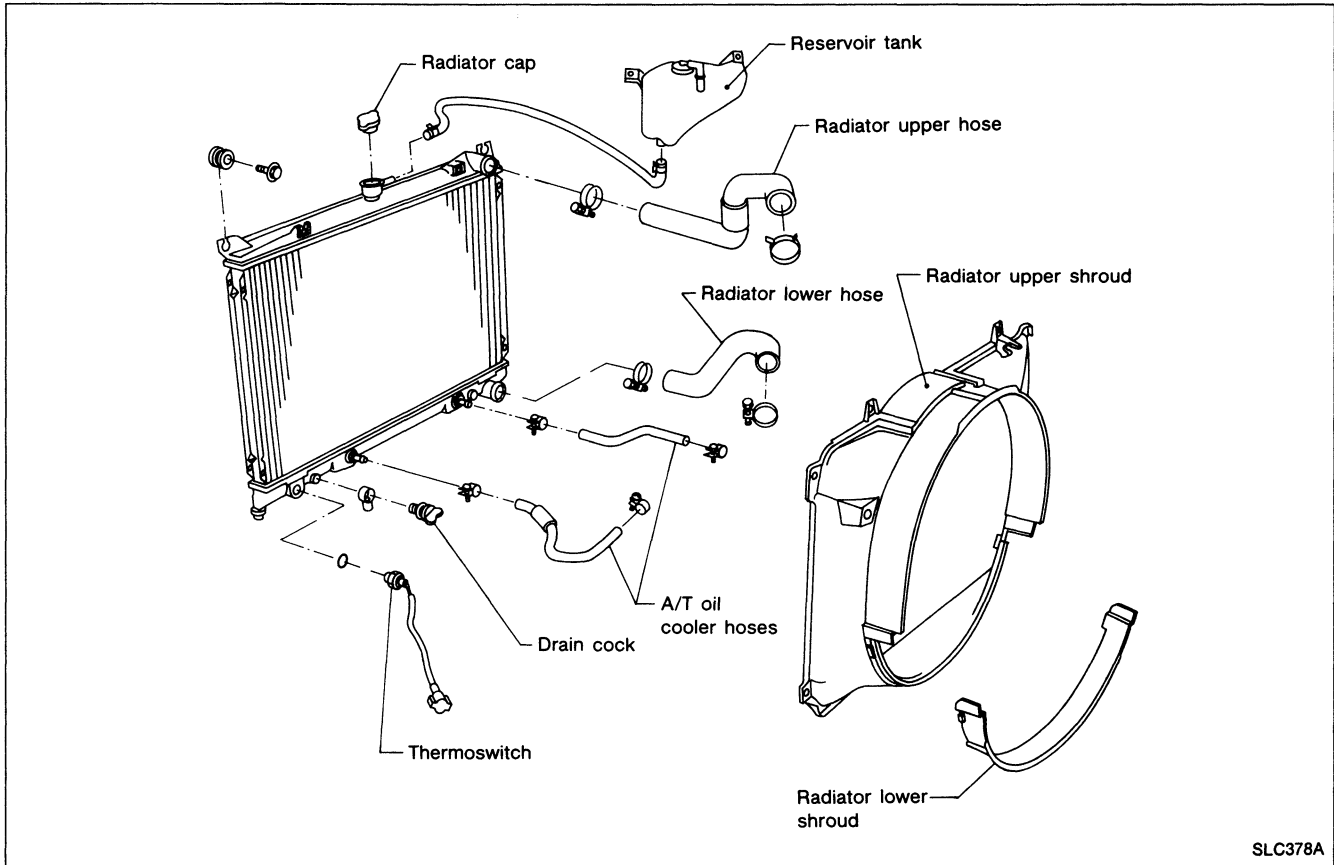

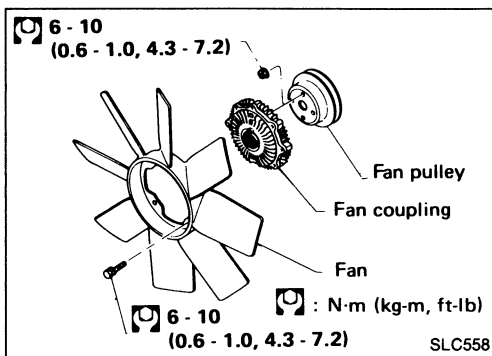

## Cooling Fan

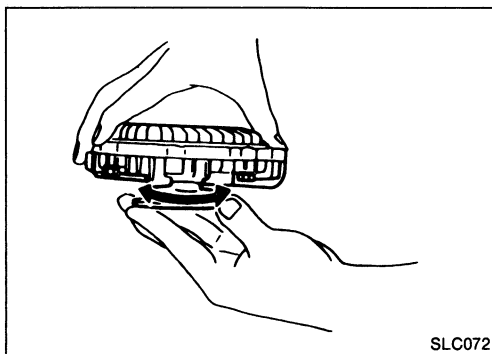


### INSPECTION

Check fan coupling for oil leakage or bent bimetal.

# RADIATOR FAN MOTOR ELECTRICAL CIRCUIT

## Circuit Diagram



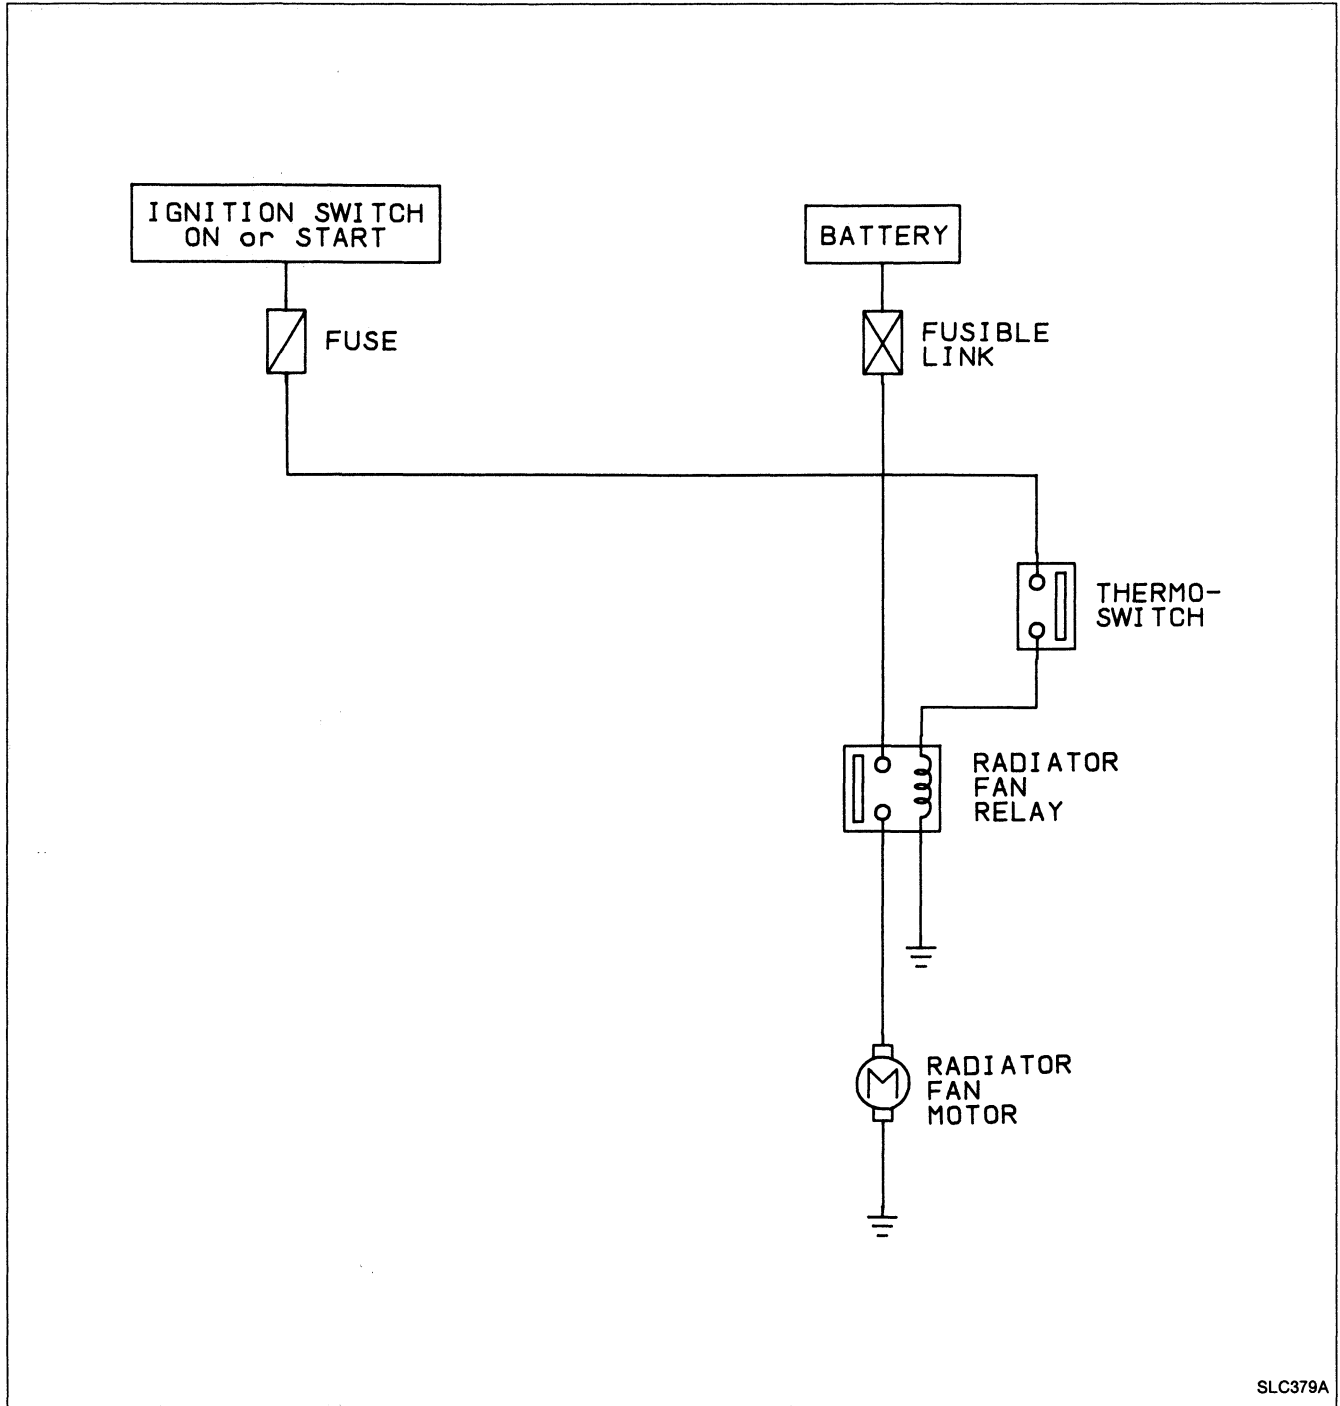


SLC379A








# RADIATOR FAN MOTOR ELECTRICAL CIRCUIT

## Wiring Diagram

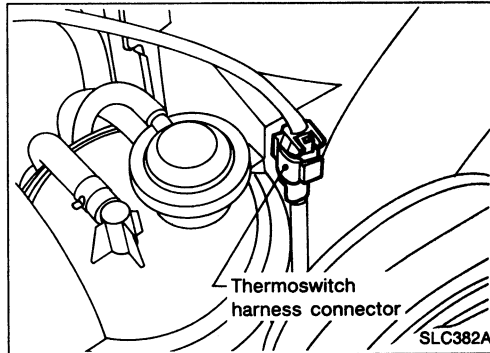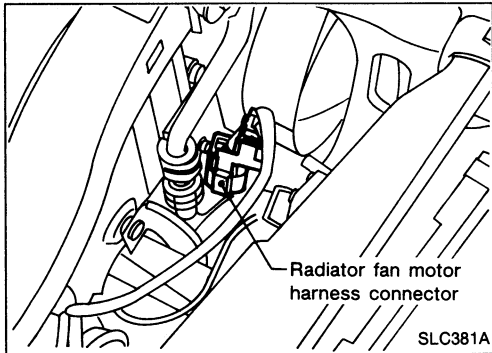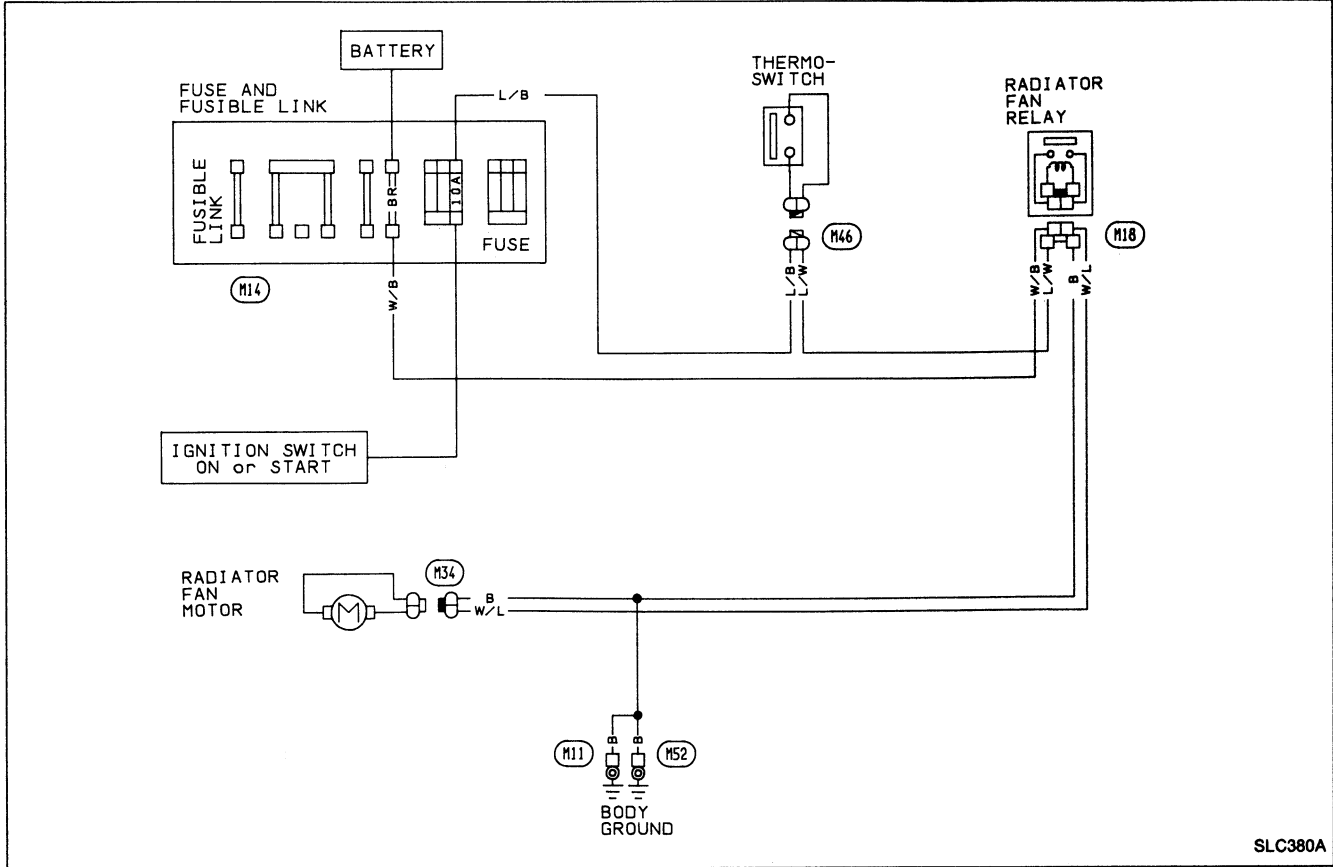

# RADIATOR FAN MOTOR ELECTRICAL CIRCUIT

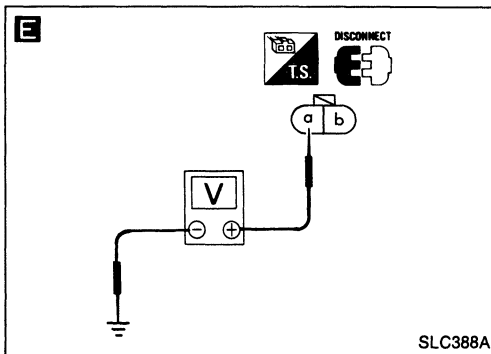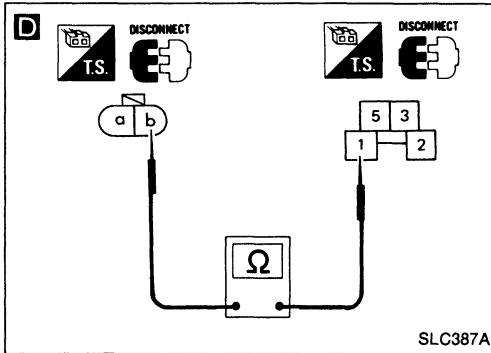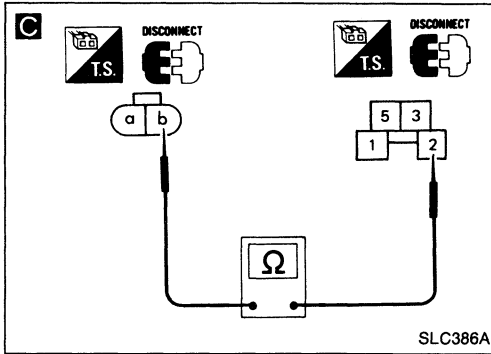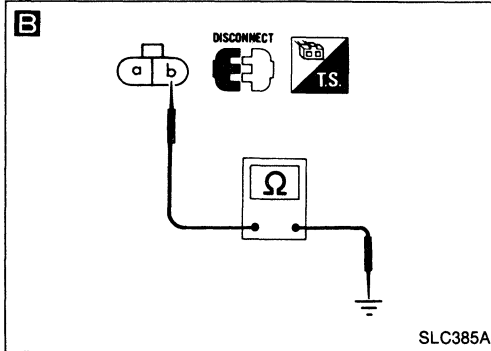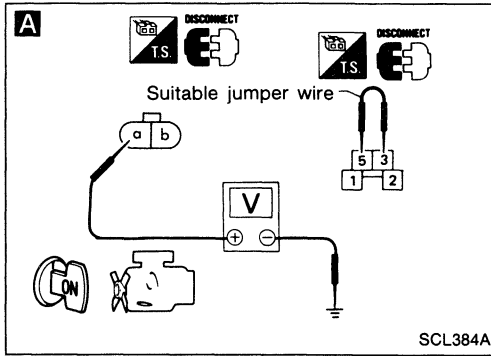

## Diagnostic Procedure

INSPECTION START

**A**

**CHECK POWER SUPPLY.**

- 1) Disconnect radiator fan relay.
- 2) Connect jumper wire between terminals ③ and ⑤.
- 3) Disconnect radiator fan motor harness connector.
- 4) Turn ignition switch "ON".
- 5) Check voltage between terminal ① and ground.

**Voltage: Battery voltage**

N.G. → Check the following.

- "BR" fusible link
- Harness continuity between "BR" fusible link and radiator fan motor.

If N.G., repair harness or connectors.

**B**

**CHECK GROUND CIRCUIT.**

- 1) Turn ignition switch "OFF".
- 2) Disconnect jumper wire.
- 3) Check harness continuity between terminal ① and ground.

**Continuity should exist .**

N.G. → Repair harness or connectors.

**C**

**CHECK HARNESS CONTINUITY.**

- 1) Check harness continuity between terminals ① and ②.
- 2) Disconnect thermoswitch harness connector.
- 3) Check harness continuity between terminals ① and ②.
- 4) Check "10A" fuse.
- 5) Turn ignition switch "ON".
- 6) Check voltage between terminal ① and ground.


**Continuity should exist .**

**Voltage: Battery voltage**

N.G. → Repair harness or connectors.

**CHECK COMPONENTS**  
(Radiator fan motor, radiator fan relay and thermoswitch).  
Refer to "Electrical Components Inspection".  
(See page LC-18.)

# RADIATOR FAN MOTOR ELECTRICAL CIRCUIT

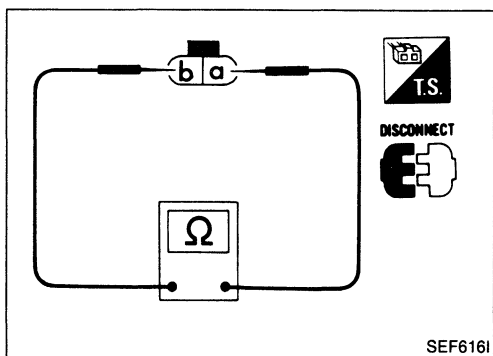


## Electrical Components Inspection

### RADIATOR FAN MOTOR

1. Disconnect radiator fan motor harness connector.
2. Check continuity between terminals Ⓐ and Ⓑ.

**Continuity should exist.**

**If N.G., replace radiator fan motor.**

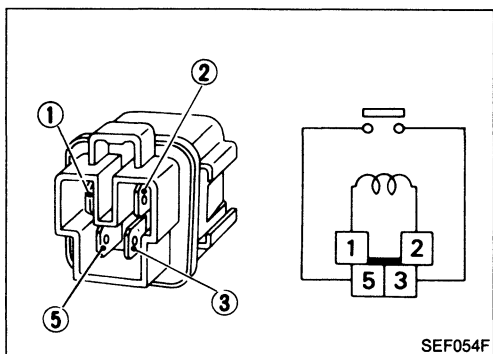


### RADIATOR FAN RELAY

Check continuity between terminals Ⓒ and Ⓔ.

Conditions	Continuity
12V direct current supply between terminals ① and ②	Yes
No current supply	No

**If N.G., replace relay.**

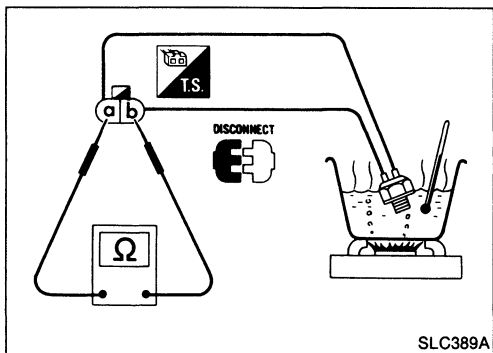

### THERMOSWITCH

1. Remove thermoswitch.
2. Check thermoswitch for proper operation.

**Operating temperature:**

**OFF → ON 90°C (194°F)**

**If N.G., replace thermoswitch.**


# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Engine Lubrication System

### Oil pressure check

Engine rpm	Approximate discharge pressure kPa (kg/cm <sup>2</sup> , psi)
Idle speed	More than 59 (0.6, 9)
3,200	363 - 451 (3.7 - 4.6, 53 - 65)

### Oil pump

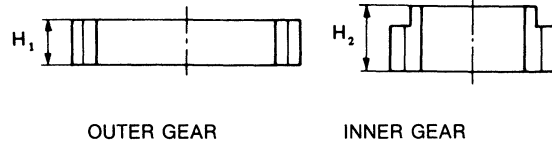

SLC573

Unit: mm (in)

Height	H <sub>1</sub>	H <sub>2</sub>
	12.5 (0.492)	18.5 (0.728)

Unit: mm (in)

Body to outer gear clearance ①	0.11 - 0.20 (0.0043 - 0.0079)
Inner gear to crescent clearance ②	0.12 - 0.23 (0.0047 - 0.0091)
Outer gear to crescent clearance ③	0.21 - 0.32 (0.0083 - 0.0126)
Housing to inner gear side clearance ④	0.05 - 0.09 (0.0020 - 0.0035)
Housing to outer gear side clearance ⑤	0.05 - 0.11 (0.0020 - 0.0043)

## Engine Cooling System

### Thermostat

	Standard
Valve opening temperature °C (°F)	76.5 (170)
Maximum valve lift mm/°C (in/°F)	10/90 (0.39/194)

### Thermoswitch

Operating temperature (OFF → ON)	°C (°F)	90 (194)
----------------------------------	---------	----------

# ENGINE FUEL & EMISSION CONTROL SYSTEM

## SECTION **EF & EC**

EF & EC

### CONTENTS

PRECAUTIONS .....	EF & EC- 2
PREPARATION.....	EF & EC- 4
ENGINE AND EMISSION CONTROL OVERALL SYSTEM .....	EF & EC- 5
ENGINE AND EMISSION CONTROL PARTS DESCRIPTION.....	EF & EC- 10
ENGINE AND EMISSION CONTROL SYSTEM DESCRIPTION .....	EF & EC- 16
IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION .....	EF & EC- 27
TROUBLE DIAGNOSES .....	EF & EC- 33
FUEL INJECTION CONTROL SYSTEM INSPECTION .....	EF & EC-178
EVAPORATIVE EMISSION CONTROL SYSTEM .....	EF & EC-181
CRANKCASE EMISSION CONTROL SYSTEM.....	EF & EC-183
SERVICE DATA AND SPECIFICATIONS (S.D.S.) .....	EF & EC-184

**When you read wiring diagrams:**

- Read G1 section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

**When you perform trouble diagnoses, read G1 section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES".**

## PRECAUTIONS

---

### **Supplemental Restraint System “AIR BAG”**

The Infiniti M30 has a Supplemental Restraint System “Air Bag”, to help reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag (located in the center of the steering wheel), five sensors, a control unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the BF section of this Service Manual.

#### **WARNING:**

- a. **To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized INFINITI dealer.**
- b. **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.**
- c. **All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation and related components are located in the steering column, center console, dash, upper radiator core support and front fenders. Do not use electrical test equipment on these circuits.**

# PRECAUTIONS

## Engine Fuel & Emission Control System

### INJECTOR

- Do not disconnect injector harness connectors with engine running.
- Do not apply battery power directly to injectors.

### E.C.U.



- Do not disassemble E.C.C.S. control unit (E.C.U.).
- Do not turn diagnosis mode selector forcibly.
- If a battery terminal is disconnected, the memory will return to the ROM value. The E.C.C.S. will now start to self-control at its initial value. Engine operation can vary slightly when the terminal is disconnected. However, this is not an indication of a problem. Do not replace parts because of a slight variation.

### WIRELESS EQUIPMENT

- When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on its installation location.
  - 1) Keep the antenna as far as possible away from the electronic control units.
  - 2) Keep the antenna feeder line more than 20 cm (7.9 in) away from the harness of electronic controls. Do not let them run parallel for a long distance.
  - 3) Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
  - 4) Be sure to ground the radio to vehicle body.


### BATTERY

- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.

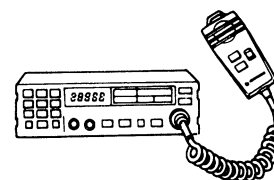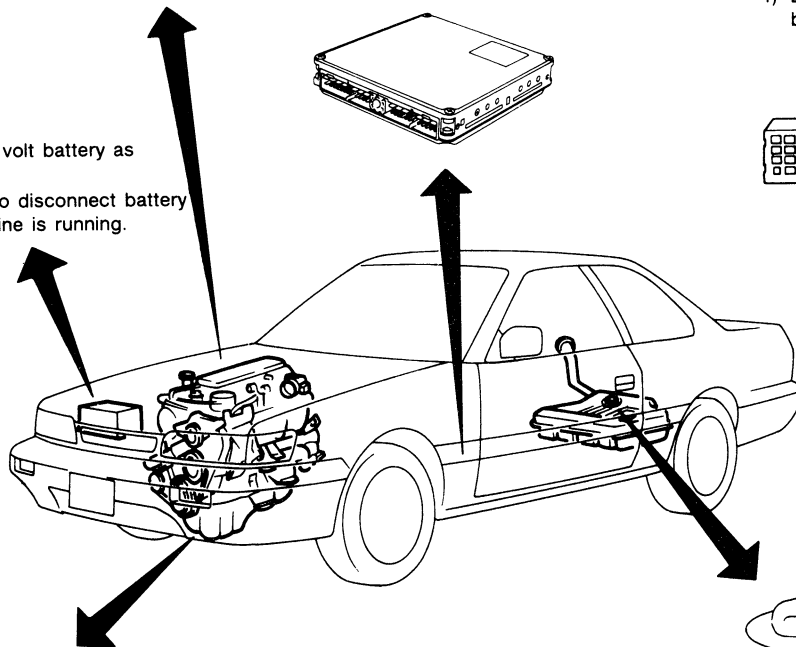


### E.C.C.S. PARTS HANDLING

- Handle air flow meter carefully to avoid damage.
- Do not disassemble air flow meter.
- Do not clean air flow meter with any type of detergent.
- Do not disassemble auxiliary air control valve.
- Even a slight leak in the air intake system can cause serious problems.
- Do not shock or jar the crank angle sensor.



### WHEN STARTING

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

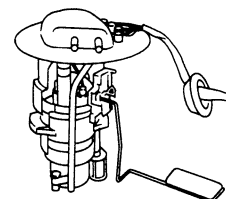

### FUEL PUMP


- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.

### E.C.C.S. HARNESS HANDLING

- Securely connect E.C.C.S. harness connectors. A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep E.C.C.S. harness at least 10 cm (3.9 in) away from adjacent harnesses, to prevent an E.C.C.S. system malfunction due to receiving external noise, degraded operation of ICs, etc.
- Keep E.C.C.S. parts and harnesses dry.
- Before removing parts, turn off ignition switch and then disconnect battery ground cable.

# PREPARATION



## SPECIAL SERVICE TOOL

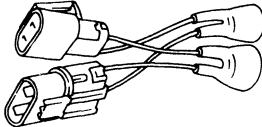Tool number (Kent-Moore No.) Tool name	Description
EG11160000 ( — ) Adapter harness	 <p data-bbox="1036 310 1295 338">Measuring engine speed</p>




# ENGINE AND EMISSION CONTROL OVERALL SYSTEM

## E.C.C.S. Component Parts Location

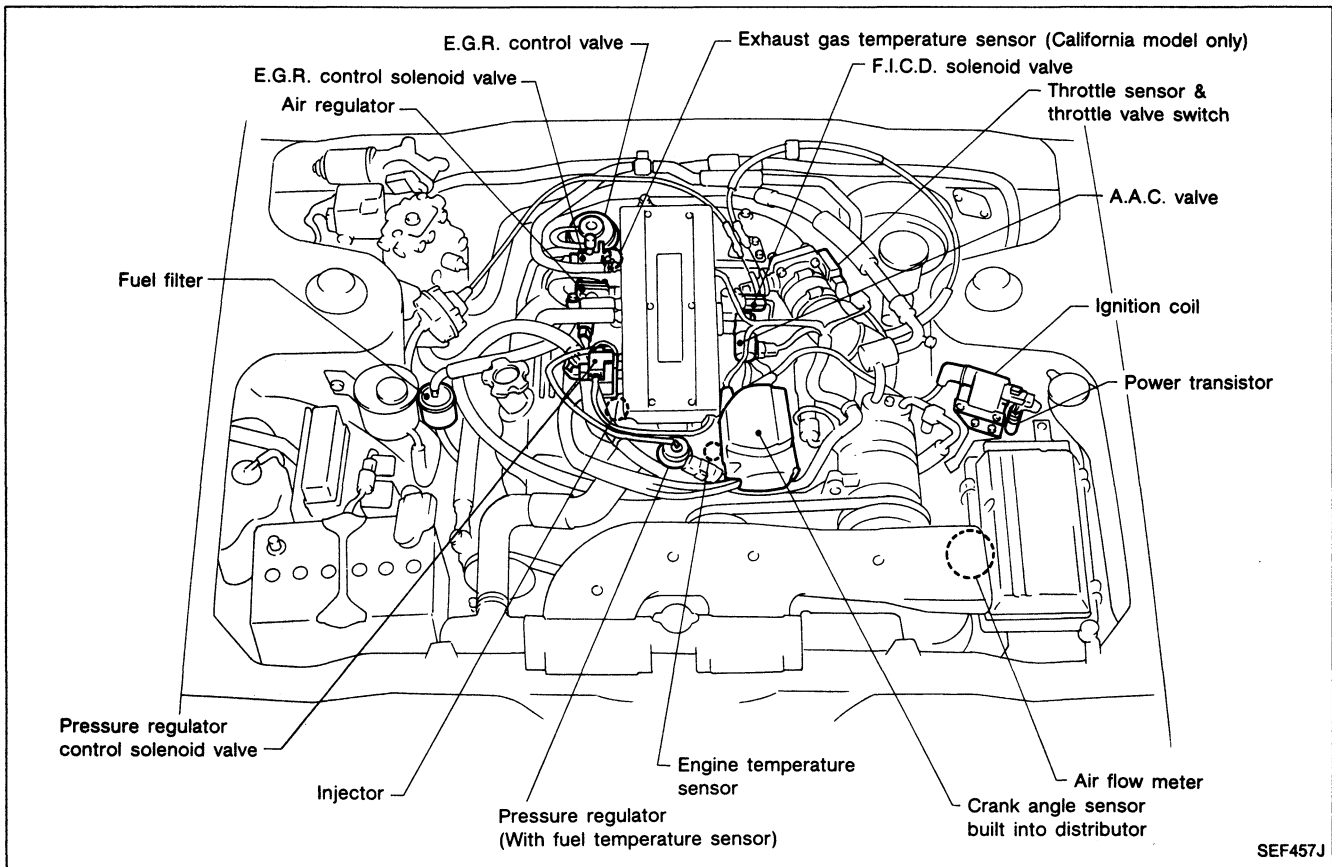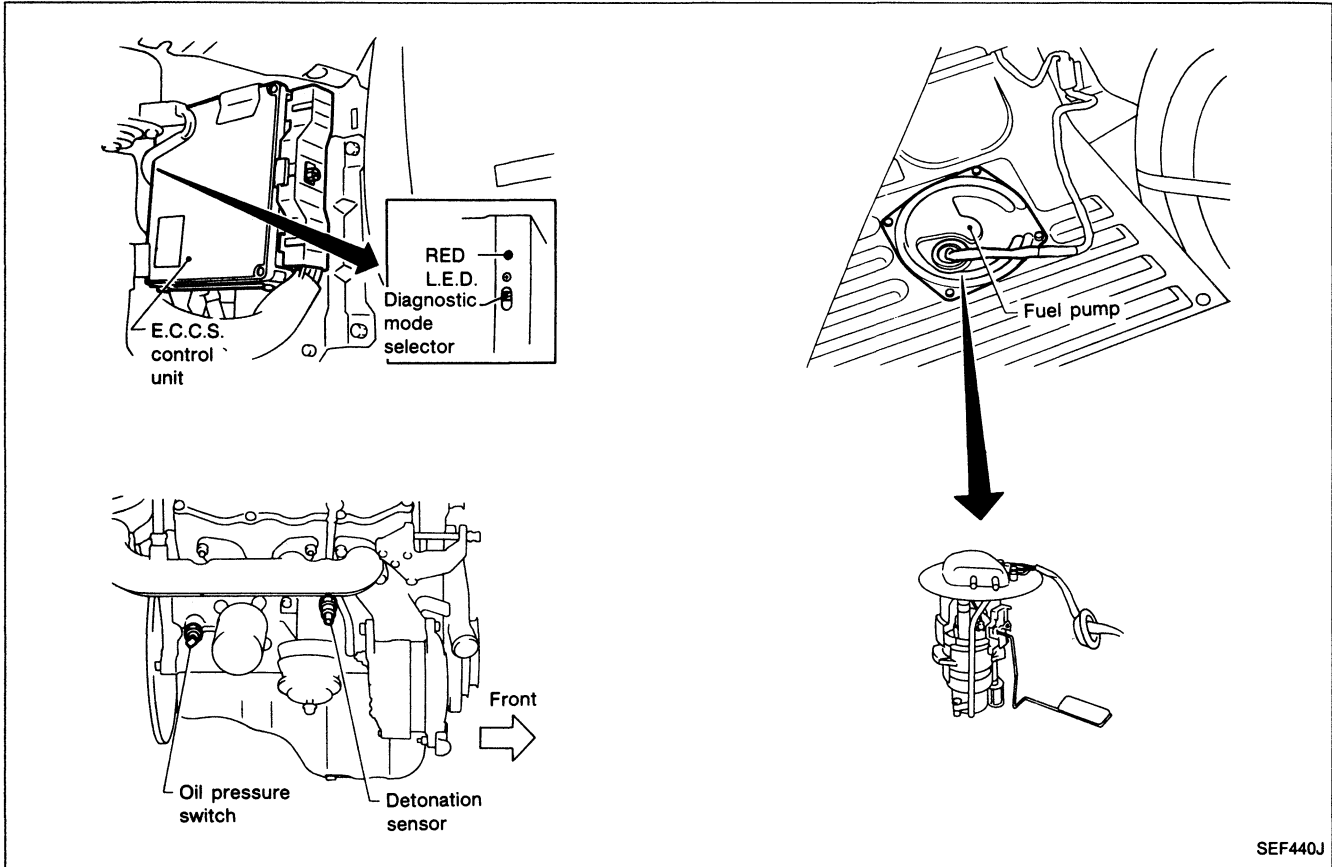


# ENGINE AND EMISSION CONTROL OVERALL SYSTEM

## System Diagram

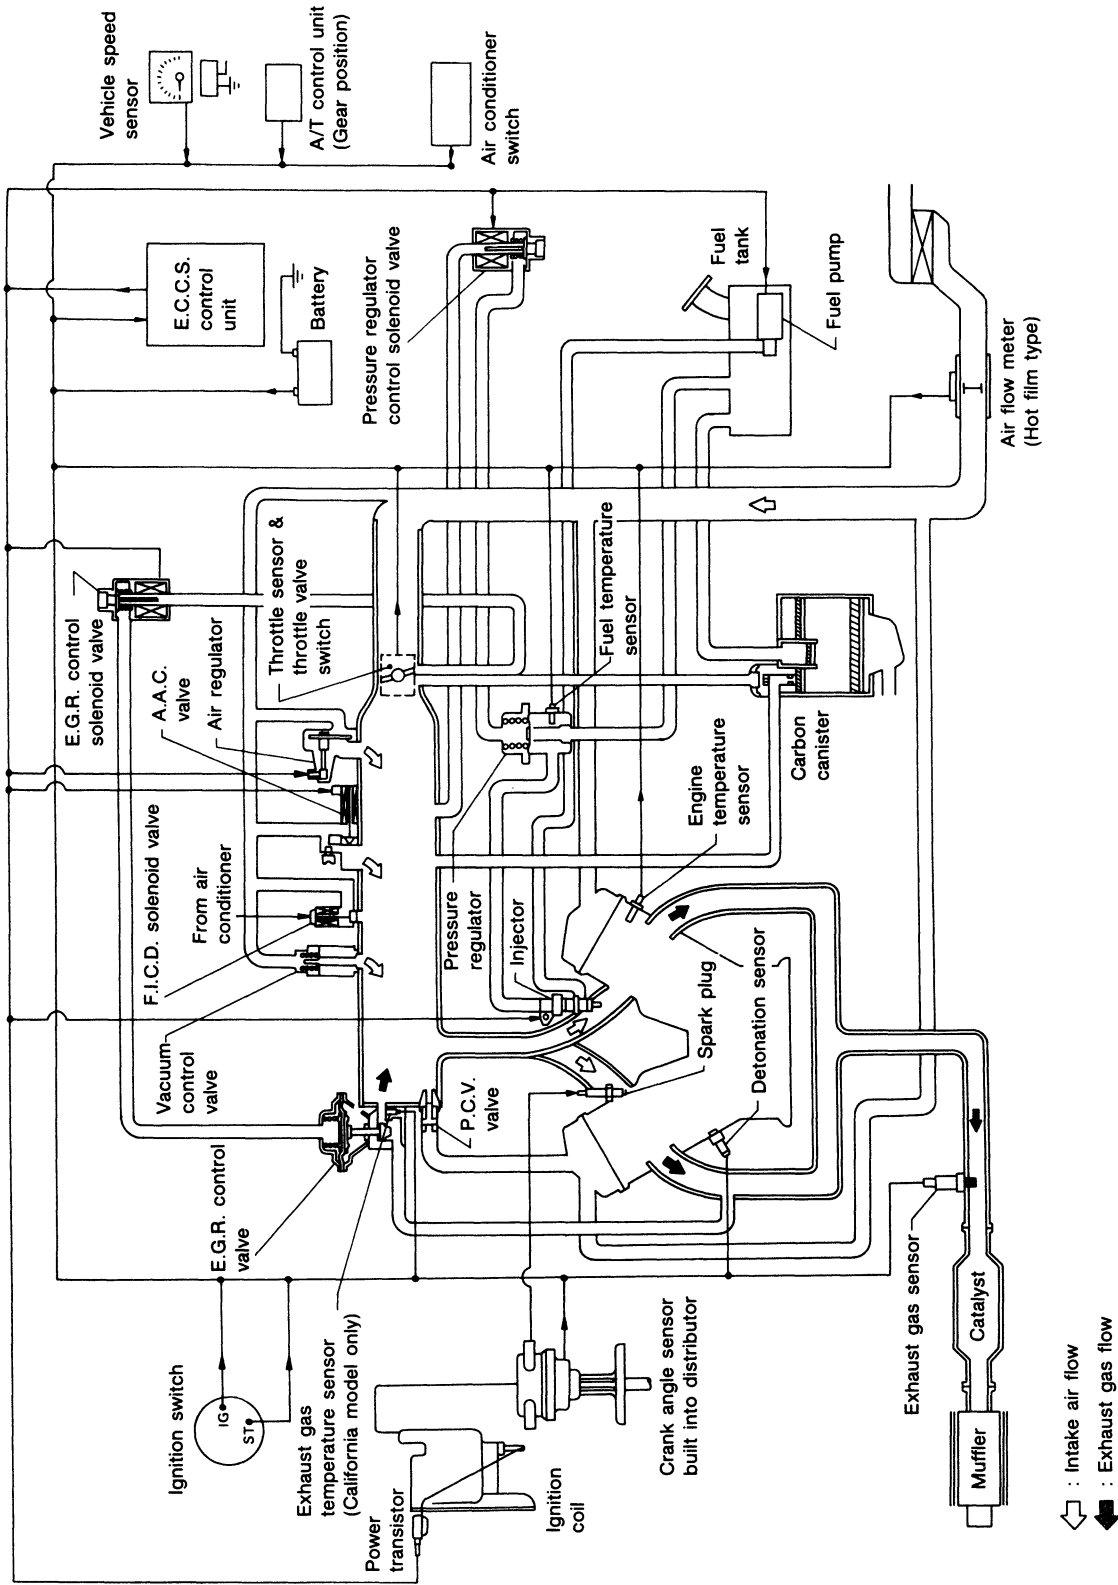


# ENGINE AND EMISSION CONTROL OVERALL SYSTEM

## System Chart

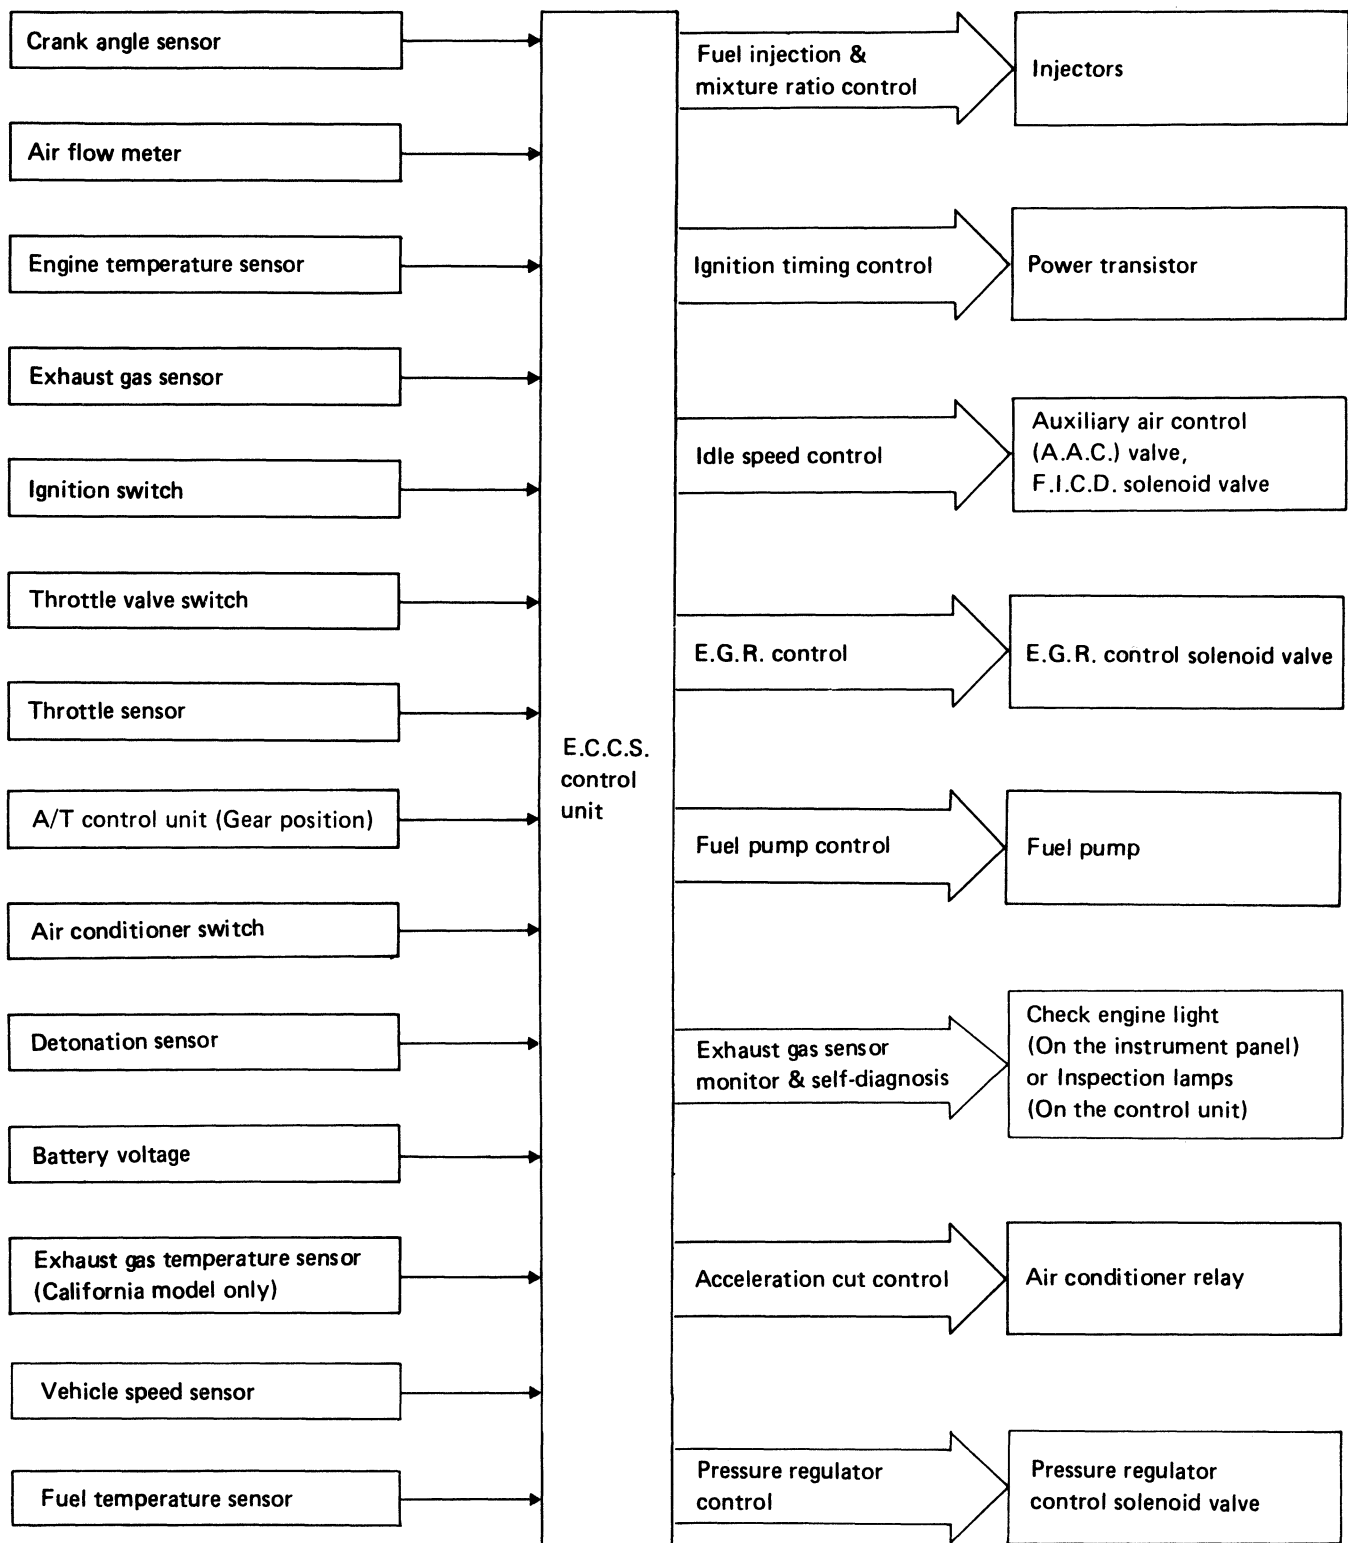



# ENGINE AND EMISSION CONTROL OVERALL SYSTEM

## Vacuum Hose Drawing

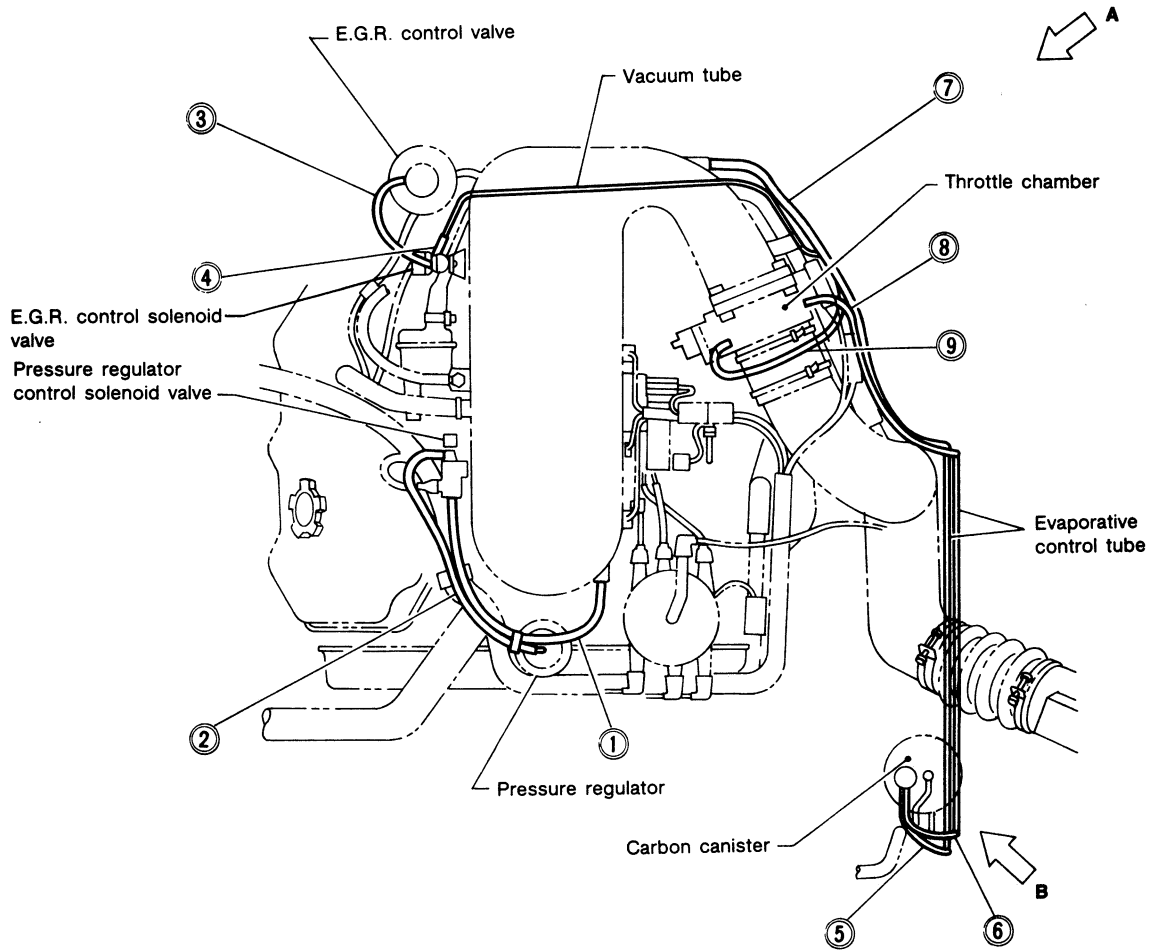

View A

View B

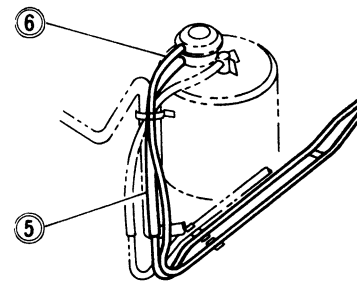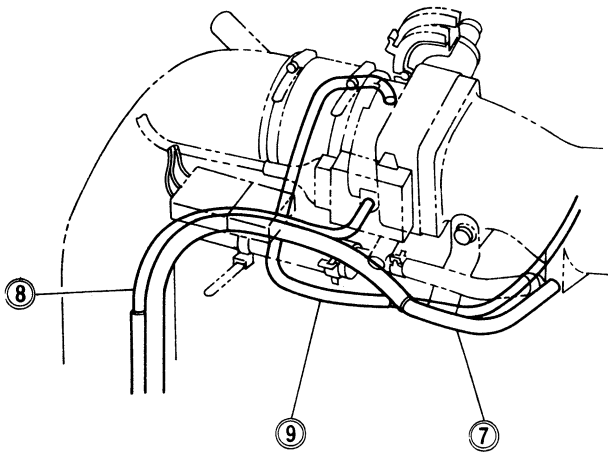


- ① Pressure regulator control solenoid valve to intake manifold collector
- ② Pressure regulator control solenoid valve to pressure regulator
- ③ E.G.R. control valve to E.G.R. control solenoid valve
- ④ E.G.R. control solenoid valve to vacuum tube
- ⑤ Canister (purge port) to evaporative control tube


- ⑥ Canister (vacuum port) to evaporative control tube
- ⑦ Intake manifold collector to evaporative control tube
- ⑧ Throttle chamber to evaporative control tube
- ⑨ Throttle chamber to vacuum tube

# ENGINE AND EMISSION CONTROL OVERALL SYSTEM

## Circuit Diagram

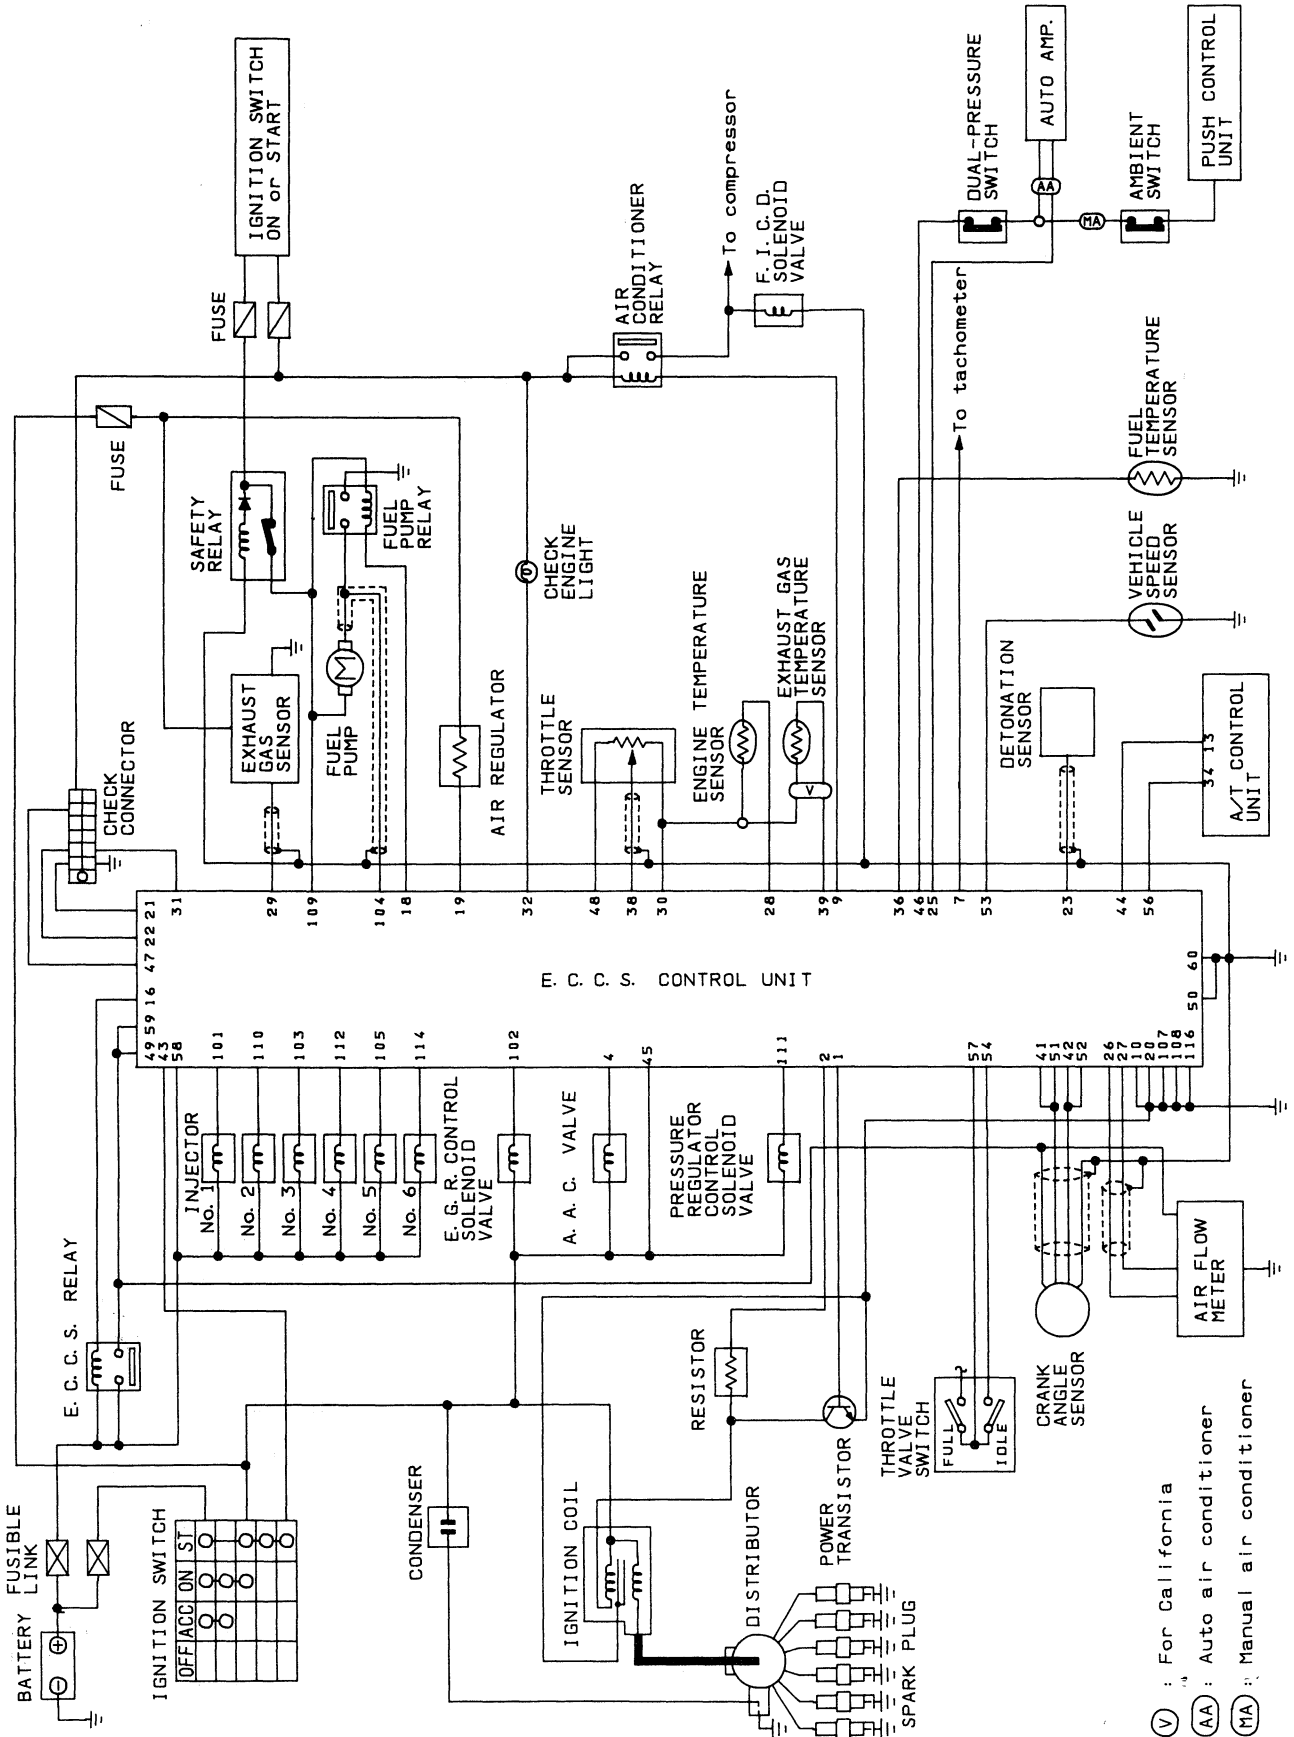


# ENGINE AND EMISSION CONTROL PARTS DESCRIPTION

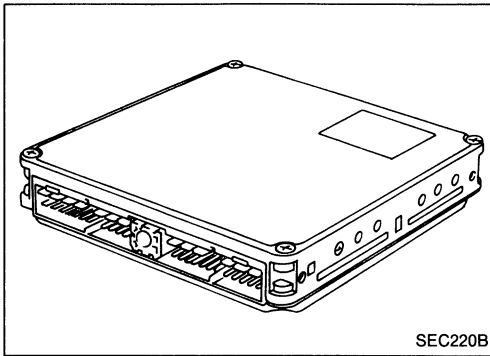

## E.C.C.S. Control Unit (E.C.U.)


The E.C.U. consists of a microcomputer, inspection lamps, a diagnostic mode selector, and connectors for signal input and output and for power supply. The unit controls the engine.

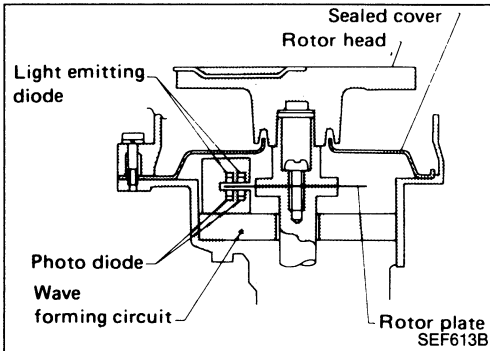


## Crank Angle Sensor

The crank angle sensor is a basic component of the entire E.C.C.S. It monitors engine speed and piston position, and sends signals to the E.C.U. to control fuel injection, ignition timing and other functions.

The crank angle sensor has a rotor plate and a wave-forming circuit. The rotor plate has 360 slits for 1° signal and 6 slits for 120° signal. Light Emitting Diodes (L.E.D.) and photo diodes are built in the wave-forming circuit.

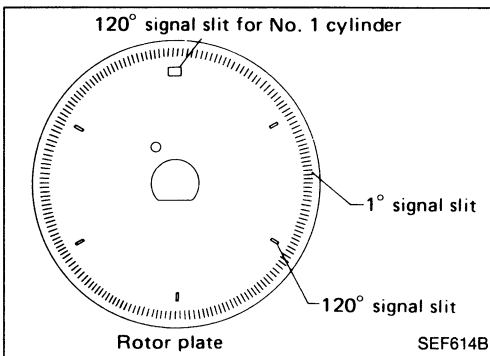

When the rotor plate passes between the L.E.D. and the photo diode, the slits in the rotor plate continually cut the light being transmitted to the photo diode from the L.E.D. This generates rough-shaped pulses which are converted into on-off pulses by the wave-forming circuit, which are sent to the E.C.U.

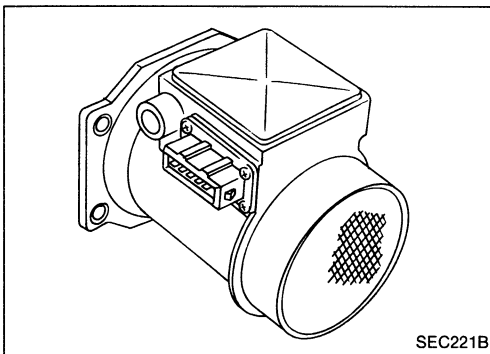


## Air Flow Meter

The air flow meter measures the intake air flow rate by taking a part of the entire flow. Measurements are made in such a manner that the E.C.U. receives electrical output signals varied by the amount of heat emitting from the hot film placed in the stream of the intake air.

When intake air flows into the intake manifold through a route around the hot film, the heat generated from the hot film is taken away by the air. The amount of heat depends on the air flow. On the other hand, the temperature of the hot film is automatically controlled to a certain number of degrees.

Therefore, it is necessary to supply the hot film with more electric current in order to maintain the temperature of the hot film. The E.C.U. knows the air flow by means of the electric change.


# ENGINE AND EMISSION CONTROL PARTS DESCRIPTION

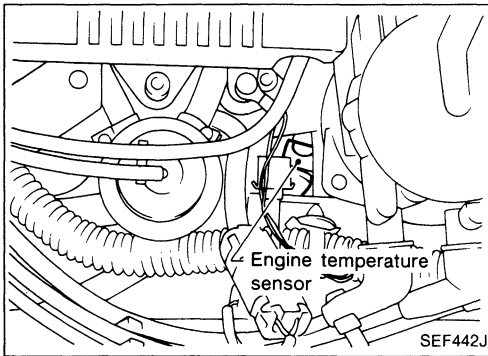

## Engine Temperature Sensor

The engine temperature sensor, located on the top of water inlet housing, detects engine coolant temperature and transmits a signal to the E.C.U.



The temperature sensing unit employs a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

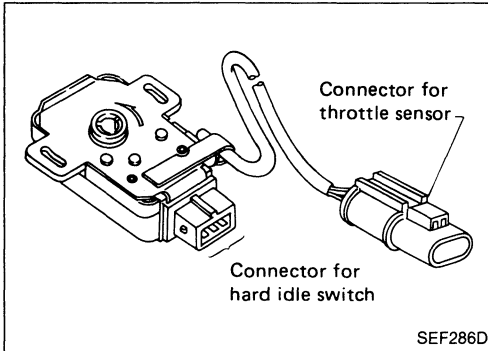

## Throttle Sensor & Soft/Hard Idle Switch

The throttle sensor responds to the accelerator pedal movement. This sensor is a kind of potentiometer which transforms the throttle valve position into output voltage, and emits the voltage signal to the E.C.U. In addition, the sensor detects the opening and closing speed of the throttle valve and feeds the voltage signal to the E.C.U.


Idle position of the throttle valve is determined by the E.C.U. receiving the signal from the throttle sensor. This system is called "soft idle switch". This one controls engine operation such as fuel cut. On the other hand, "hard idle switch", which is built in the throttle sensor unit, is used not for engine control but for self-diagnosis.

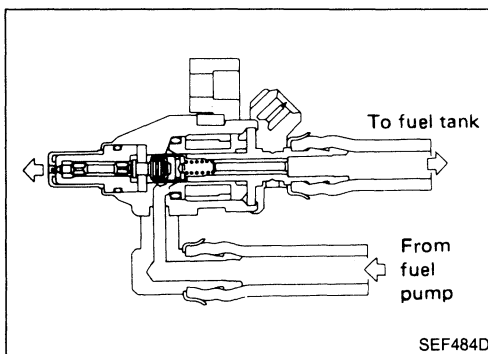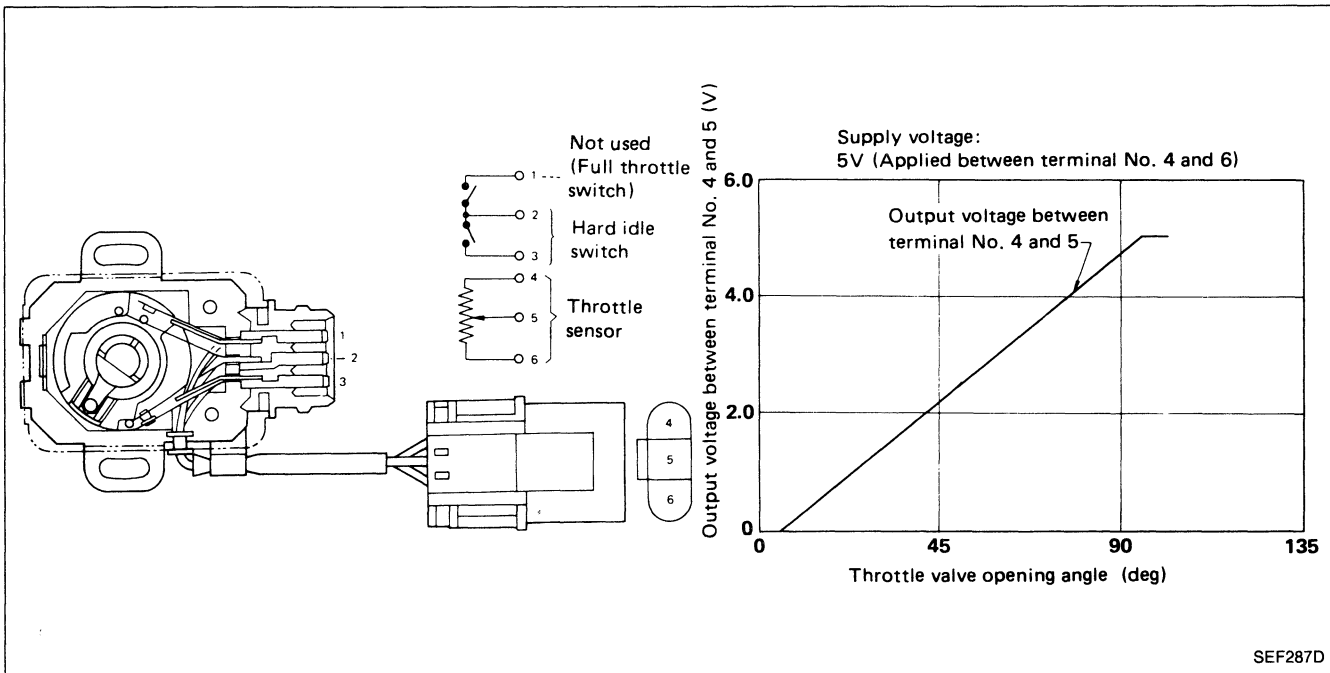

## Fuel Injector

The fuel injector is a small, elaborate solenoid valve. As the E.C.U. sends injection signals to the injector, the coil in the injector pulls the needle valve back and fuel is released into the intake manifold through the nozzle. The injected fuel is controlled by the E.C.U. in terms of injection pulse duration.

# ENGINE AND EMISSION CONTROL PARTS DESCRIPTION

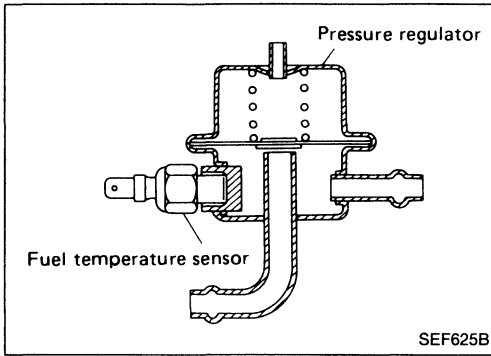


## Pressure Regulator

The pressure regulator maintains the fuel pressure at 299.1 kPa (3.05 kg/cm<sup>2</sup>, 43.4 psi). Since the injected fuel amount depends on injection pulse duration, it is necessary to maintain the pressure at the above value.

## Fuel Temperature Sensor


The fuel temperature sensor is built into the pressure regulator, and senses fuel temperature. When the fuel temperature is higher than the specified level, the E.C.U. enriches fuel injected.

**Do not remove fuel temperature sensor from pressure regulator. Always replace as an assembly.**

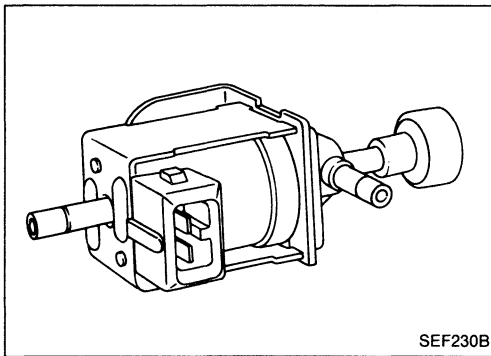

## Pressure Regulator Control Solenoid Valve

The solenoid valve responds to the ON/OFF signal from the E.C.U. When it is off, a vacuum signal from the intake manifold is fed into the pressure regulator. When the control unit sends an ON signal, the coil pulls the plunger downward and cuts the vacuum signal.

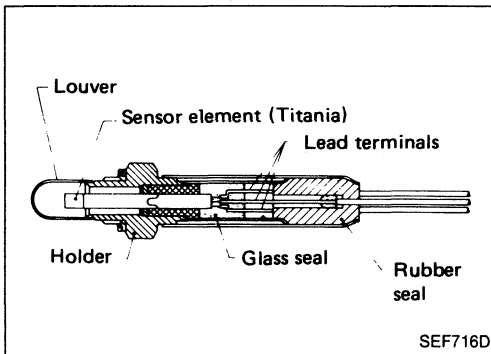


## Exhaust Gas Sensor

The exhaust gas sensor, located in the exhaust tube, monitors the oxygen level in the exhaust gas.


This sensor is made of ceramic titania, the electric resistance of which drastically changes at the ideal air-fuel ratio.

The E.C.U. supplies the sensor with approximately 1V and then measures the output voltage depending on its resistance. In order to activate the sensor element, it is equipped with a heater.

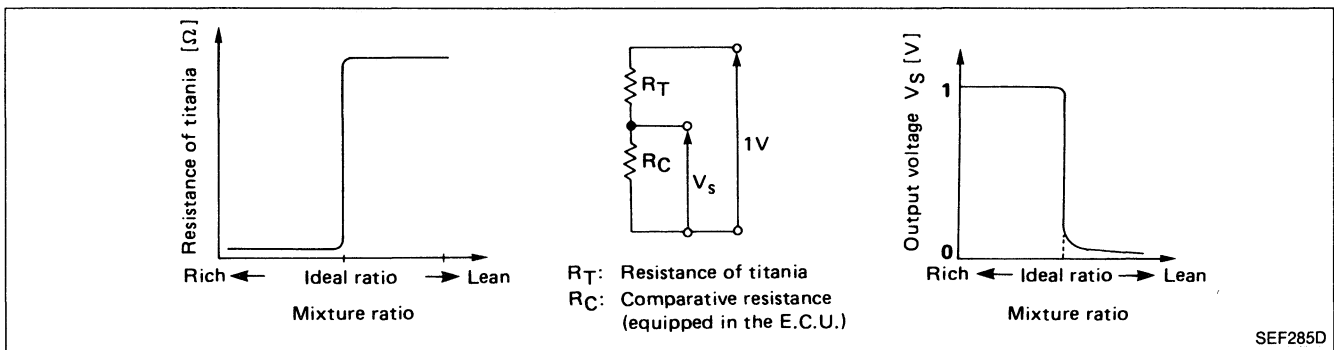




# ENGINE AND EMISSION CONTROL PARTS DESCRIPTION

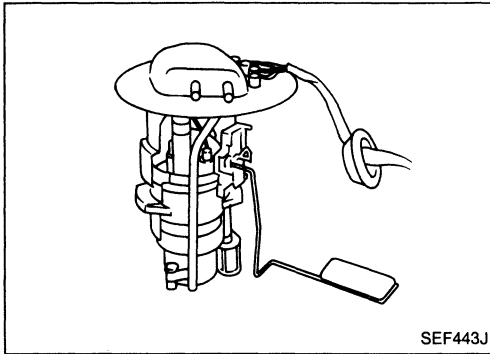


## Fuel Pump

The fuel pump with a fuel damper is an in-tank type, that is the pump and damper are located in the fuel tank.

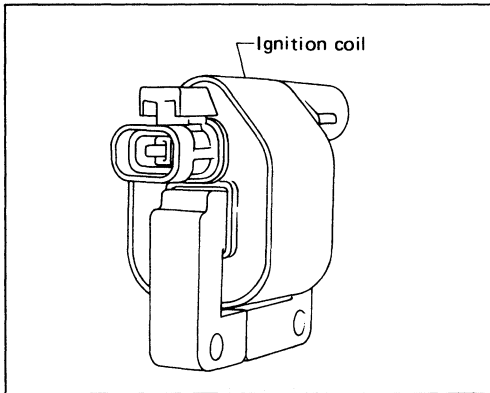

## Power Transistor & Ignition Coil



The ignition signal from the E.C.U. is amplified by the power transistor, which turns the ignition coil primary circuit on and off, inducing the proper high voltage in the secondary circuit. The ignition coil is a small, molded type.

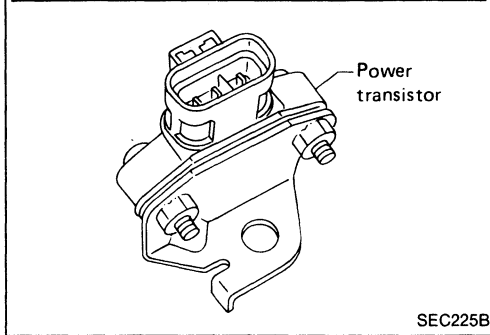

## Air Regulator

The air regulator provides an air by-pass when the engine is cold for a fast idle during warm-up.


A bimetal, heater and rotary shutter are built into the air regulator. When the bimetal temperature is low, the air by-pass port opens. As the engine starts and electric current flows through a heater, the bimetal begins to turn the shutter to close the by-pass port. The air passage remains closed until the engine stops and the bimetal temperature drops.

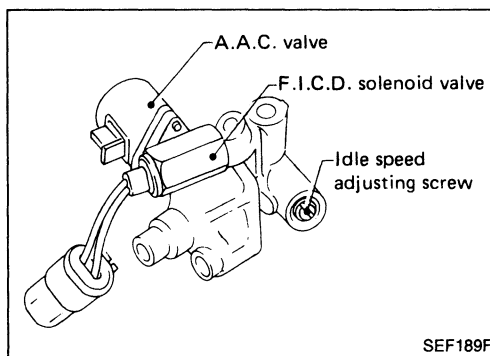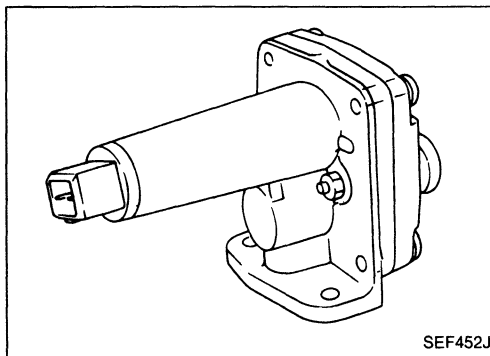

## Idle Air Adjusting (I.A.A.) Unit


The I.A.A. unit is made up of the A.A.C. valve, F.I.C.D. solenoid valve and idle adjusting screw. It receives the signal from the E.C.U. and controls the idle speed at the preset value.

# ENGINE AND EMISSION CONTROL PARTS DESCRIPTION

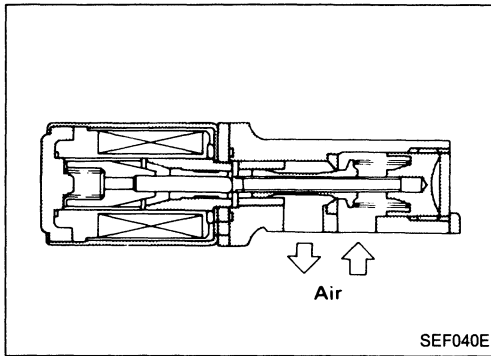


## Auxiliary Air Control (A.A.C.) Valve

The E.C.U. actuates the A.A.C. valve by an ON/OFF pulse. The longer that ON duty is left on, the larger the amount of air that will flow through the A.A.C. valve.

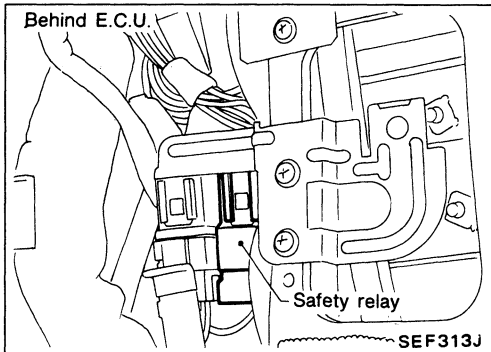

## Safety Relay


The safety relay prevents electrical damage to the E.C.U. and injectors when battery terminals are connected in reverse. The safety relay is built into the fuel pump control circuit.

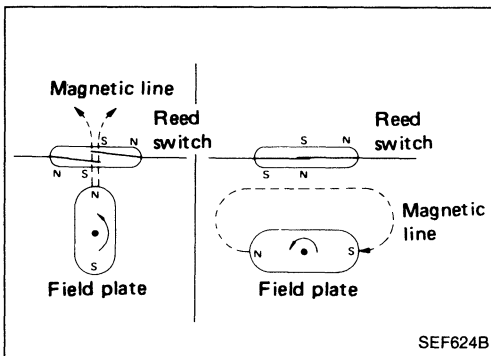

## Vehicle Speed Sensor

The vehicle speed sensor provides a vehicle speed signal to the E.C.U.


The speed sensor consists of a reed switch, which is installed in the speedometer unit and transforms vehicle speed into a pulse signal.

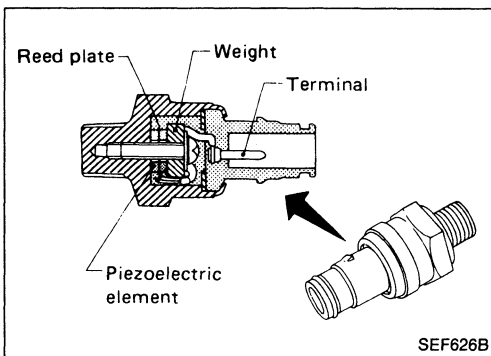

## Detonation Sensor


The detonation sensor is attached to the cylinder block and senses engine knocking conditions.

A knocking vibration from the cylinder block is applied as pressure to the piezoelectric element. This vibrational pressure is then converted into a voltage signal which is delivered as output.

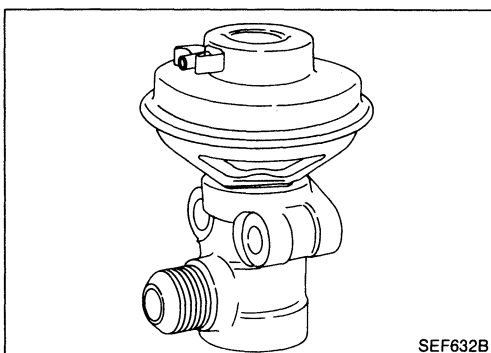


## E.G.R. Control Valve

The E.G.R. control valve controls the quantity of exhaust gas to be led to the intake manifold through vertical movement of the taper valve connected to the diaphragm, to which vacuum is applied in response to the opening of the throttle valve.

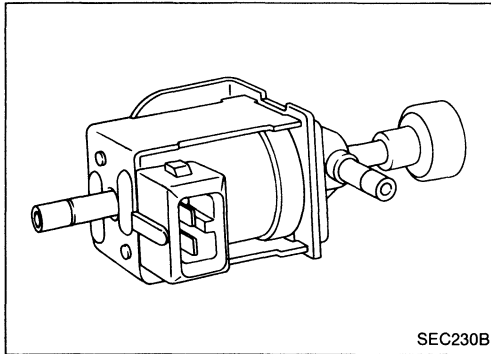


## E.G.R. Control Solenoid Valve

The E.G.R. system is controlled only by the E.C.U. At both low- and high-speed revolutions of engine, the solenoid valve turns on and accordingly the E.G.R. valve cuts the exhaust gas leading to the intake manifold.

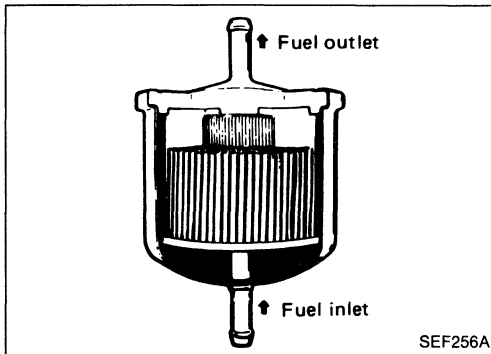


## Fuel Filter

The specially designed fuel filter has a metal case in order to withstand high fuel pressure.

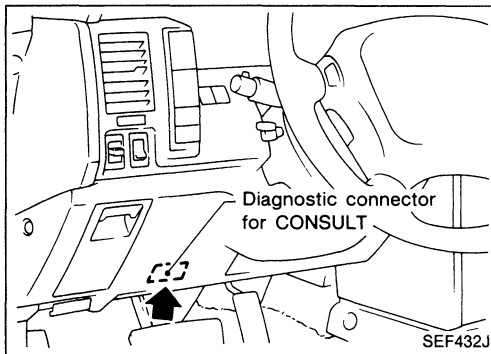


## Diagnostic Connector for CONSULT

The diagnostic connector for CONSULT is located in the instrument lower panel, to the rear of the hood release handle.

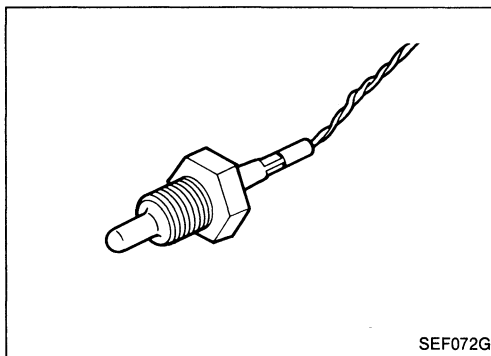

## Exhaust Gas Temperature Sensor

The exhaust gas temperature sensor monitors in exhaust gas temperature and transmits a signal to the E.C.U. The temperature sensing unit employs a thermistor which is sensitive to the change in temperature. Electric resistance of the thermistor decreases in response to the temperature rise.

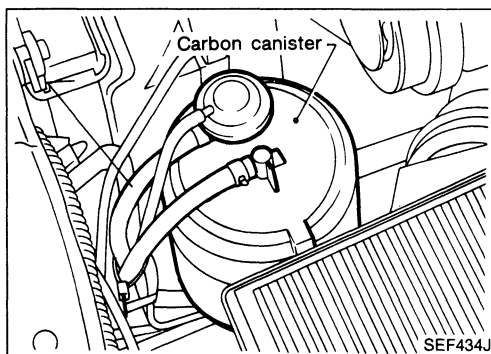


## Carbon Canister

The carbon canister is filled with active charcoal to absorb evaporative gases produced in the fuel tank. These absorbed gases are then delivered to the intake manifold by manifold vacuum for combustion purposes.

## Fuel Injection Control

### INPUT/OUTPUT SIGNAL LINE

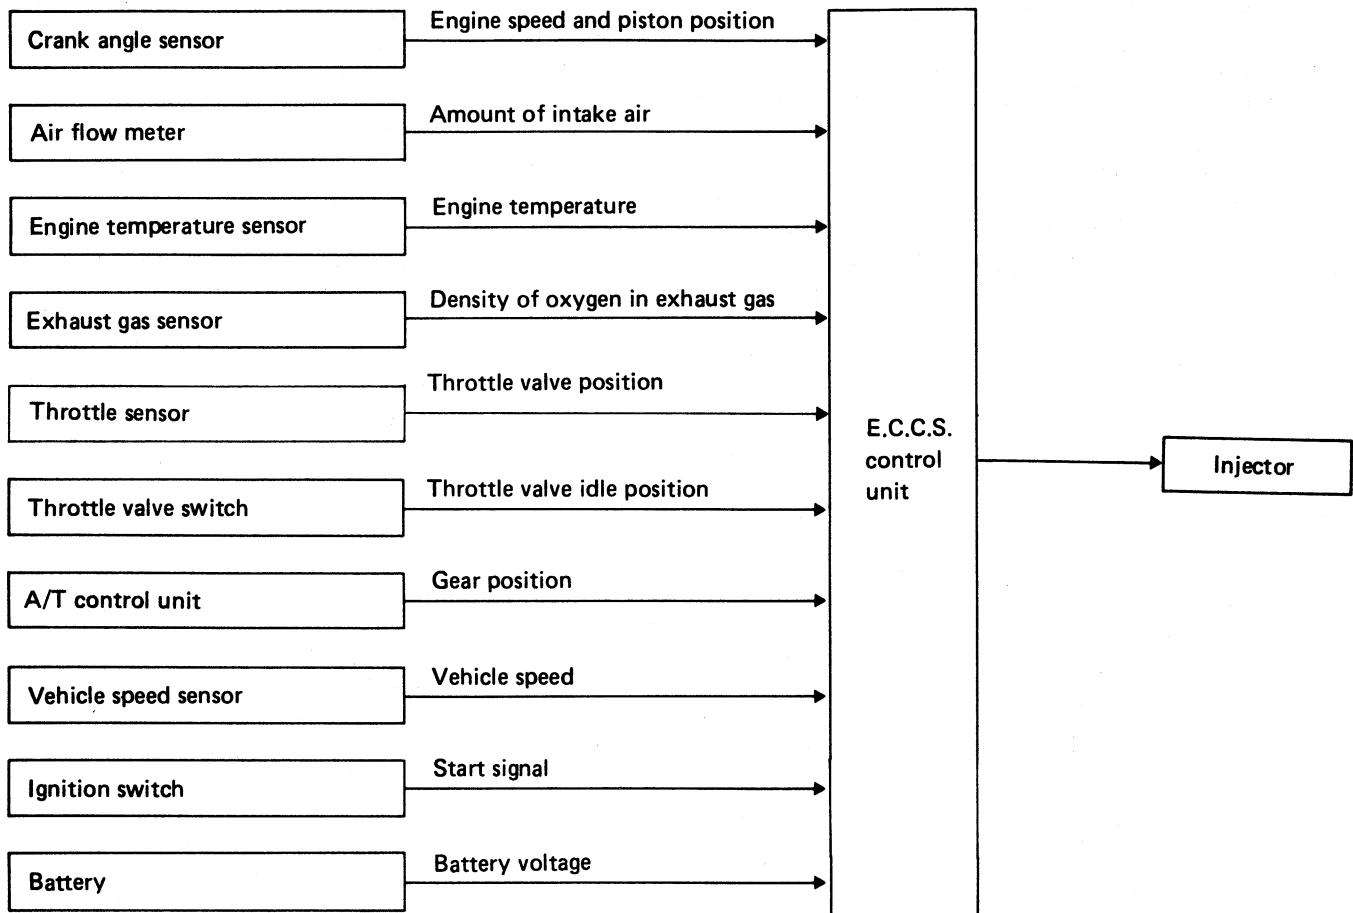

### BASIC FUEL INJECTION CONTROL

The amount of fuel injected from the fuel injector, or the length of time the valve remains open, is determined by the E.C.U. The basic amount of fuel injected is a program value mapped in the E.C.U. ROM memory. In other words, the program value is preset by engine operating conditions determined by input signals (for engine rpm and air intake) from both the crank angle sensor and the air flow meter.

### VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

In addition, the amount of fuel injection is compensated for to improve engine performance under various operating conditions as listed below.

< Fuel increase >

- 1) During warm-up
- 2) When starting the engine
- 3) During acceleration
- 4) Hot-engine operation


< Fuel decrease >

- 1) During deceleration

# ENGINE AND EMISSION CONTROL SYSTEM DESCRIPTION

## Fuel Injection Control (Cont'd)

### MIXTURE RATIO FEEDBACK CONTROL

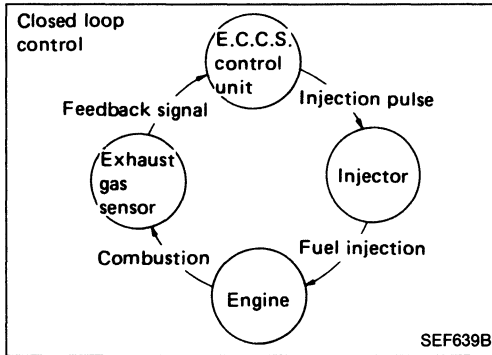

Mixture ratio feedback system is designed to precisely control the mixture ratio to the stoichiometric point so that the three-way catalyst can reduce CO, HC and NO<sub>x</sub> emissions. This system uses an exhaust gas sensor in the exhaust manifold to check the air-fuel ratio. The control unit adjusts the injection pulse width according to the sensor voltage so the mixture ratio will be within the range of the stoichiometric air-fuel ratio.

This stage refers to the closed-loop control condition. The open-loop control condition refers to that under which the E.C.U. detects any of the following conditions and feedback control stops in order to maintain stabilized fuel combustion.

- 1) Deceleration
- 2) High-load, high-speed operation
- 3) Engine idling
- 4) Malfunction of exhaust gas sensor or its circuit
- 5) Insufficient activation of exhaust gas sensor at low engine temperature
- 6) Engine starting

### MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from the exhaust gas sensor. This feedback signal is then sent to the E.C.U. to control the amount of fuel injection to provide a basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally designed. This is due to manufacturing errors (e.g., air flow meter hot film) and changes during operation (injector clogging, etc.) of E.C.C.S. parts which directly affect the mixture ratio.

Accordingly, a difference between the basic and theoretical mixture ratios is quantitatively monitored in this system. It is then computed in terms of "fuel injection duration" to automatically compensate for the difference between the two ratios.


# ENGINE AND EMISSION CONTROL SYSTEM DESCRIPTION

## Fuel Injection Control (Cont'd)

### FUEL INJECTION TIMING

Two types of fuel injection systems are used — simultaneous injection and sequential injection. In the former, fuel is injected into all six cylinders simultaneously twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the E.C.U. to the six injectors two times for each engine cycle.

In the sequential injection system, fuel is injected into each cylinder during each engine cycle according to the firing order. When engine is starting, fuel is injected into all six cylinders simultaneously twice a cycle.

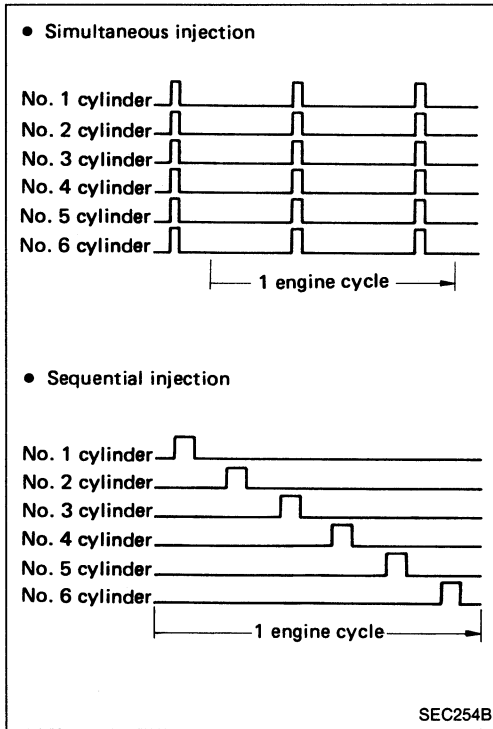


### FUEL SHUT-OFF

Fuel to each cylinder is cut off during deceleration or high-speed operation.

# ENGINE AND EMISSION CONTROL SYSTEM DESCRIPTION

## Ignition Timing Control

### INPUT/OUTPUT SIGNAL LINE

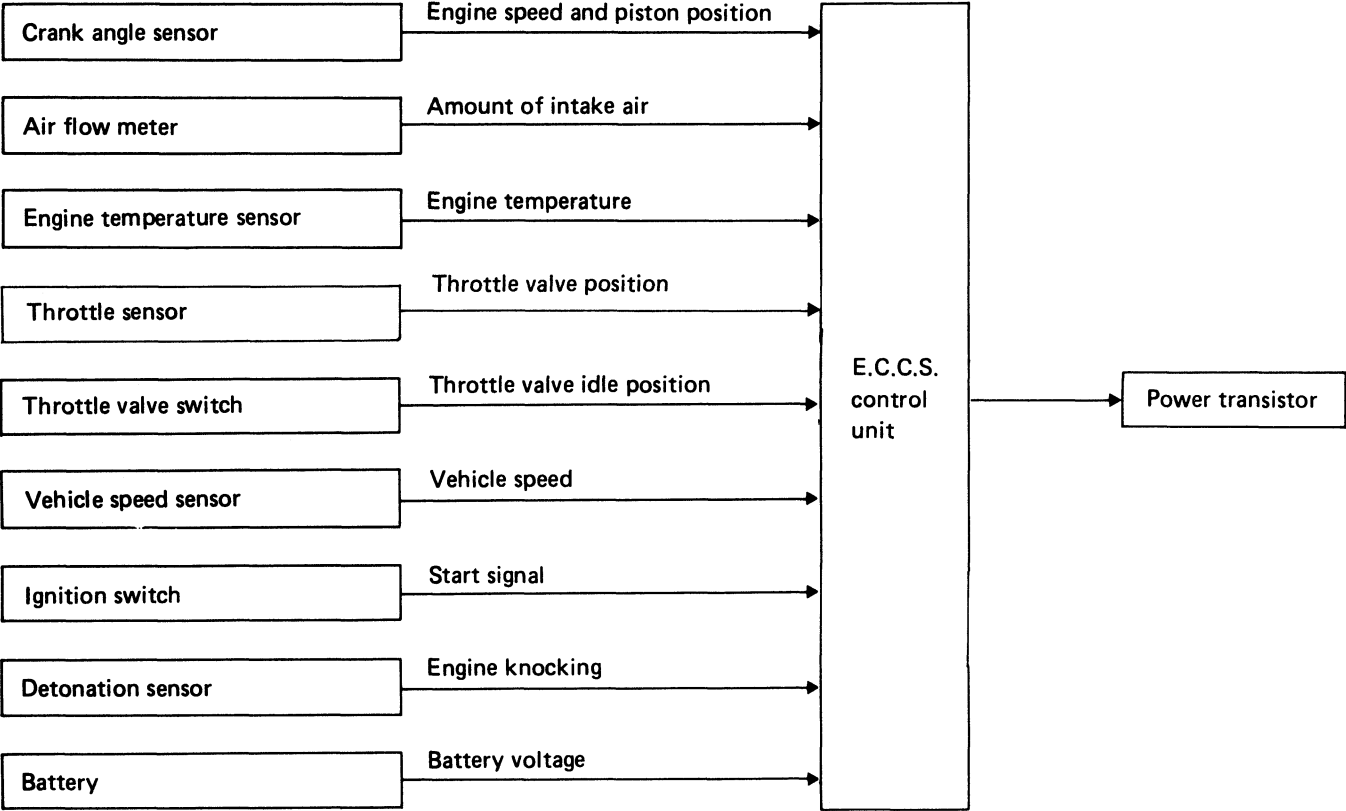

# ENGINE AND EMISSION CONTROL SYSTEM DESCRIPTION

## Ignition Timing Control (Cont'd)

### SYSTEM DESCRIPTION

The ignition timing is controlled by the E.C.U. in order to maintain the best air-fuel ratio in response to every running condition of the engine. The ignition timing data is stored in the ROM located in the E.C.U., in the form of the map shown below.

The E.C.U. detects information such as the injection pulse width and crank angle sensor signal which varies every moment. Then responding to


this information, ignition signals are transmitted to the power transistor.

e.g. N: 1,800 rpm, Tp: 1.50 msec  
A °B.T.D.C.

In addition to this,

- 1) At starting
- 2) During warm-up
- 3) At idle
- 4) At low battery voltage

the ignition timing is revised by the E.C.U. according to the other data stored in the ROM.

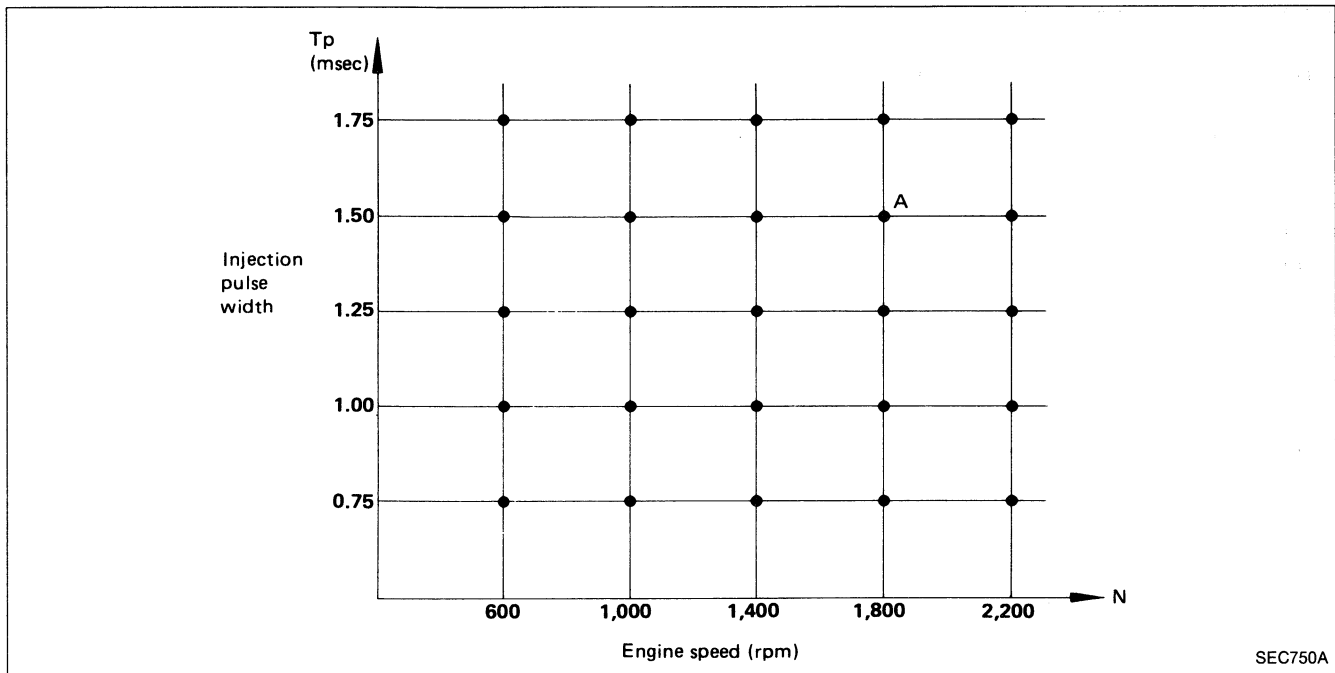

SEC750A


The retard system by detonation sensor is designed only for emergencies. The basic ignition timing is pre-programmed within the anti-knocking zone, even if recommended fuel is used under dry conditions. Consequently, the retard system does not operate under normal driving conditions.

However, if engine knocking occurs, the detonation sensor monitors the condition and the signal is transmitted to the E.C.C.S. control unit. After receiving it, the control unit retards the ignition timing to avoid the knocking condition.



## Idle Speed Control

### INPUT/OUTPUT SIGNAL LINE

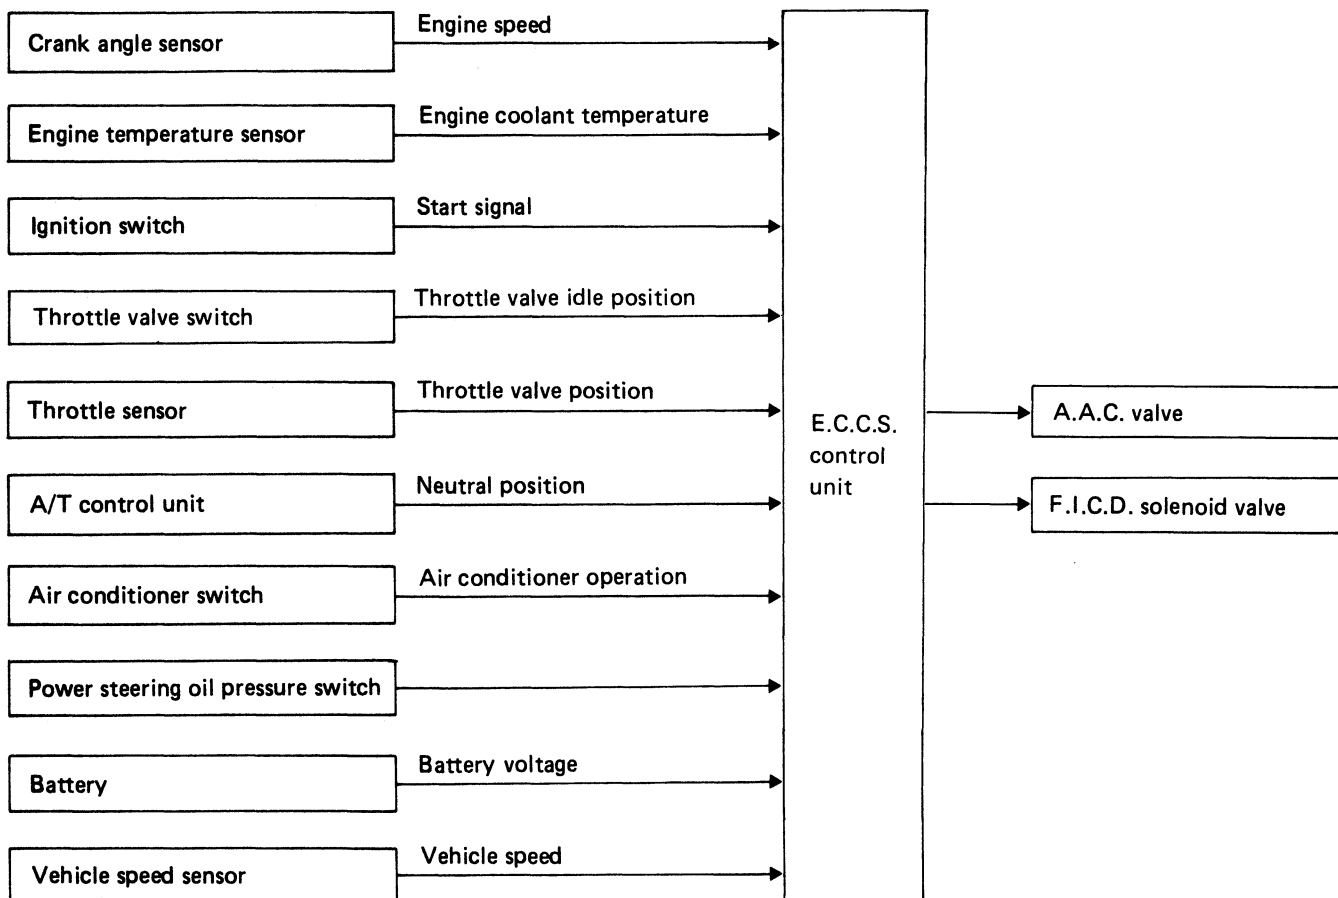


### SYSTEM DESCRIPTION

This system automatically controls engine idle speed to a specified level. Idle speed is controlled through fine adjustment of the amount of air which by-passes the throttle valve via A.A.C. valve. The A.A.C. valve changes the opening of the air by-pass passage to control the amount of auxiliary air. The opening of the valve is varied to allow for optimum control of the engine idling speed. The crank angle sensor detects the actual engine speed and sends a signal to the E.C.U. The E.C.U. then controls the ON/OFF time of the A.A.C. valve so that engine speed coincides with the target value memorized in ROM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ROM is determined by taking into consideration various engine conditions, such as warming up and during deceleration, fuel consumption, and engine load (air conditioner, electrical load).

# ENGINE AND EMISSION CONTROL SYSTEM DESCRIPTION


## Fuel Pump Control

### INPUT/OUTPUT SIGNAL LINE

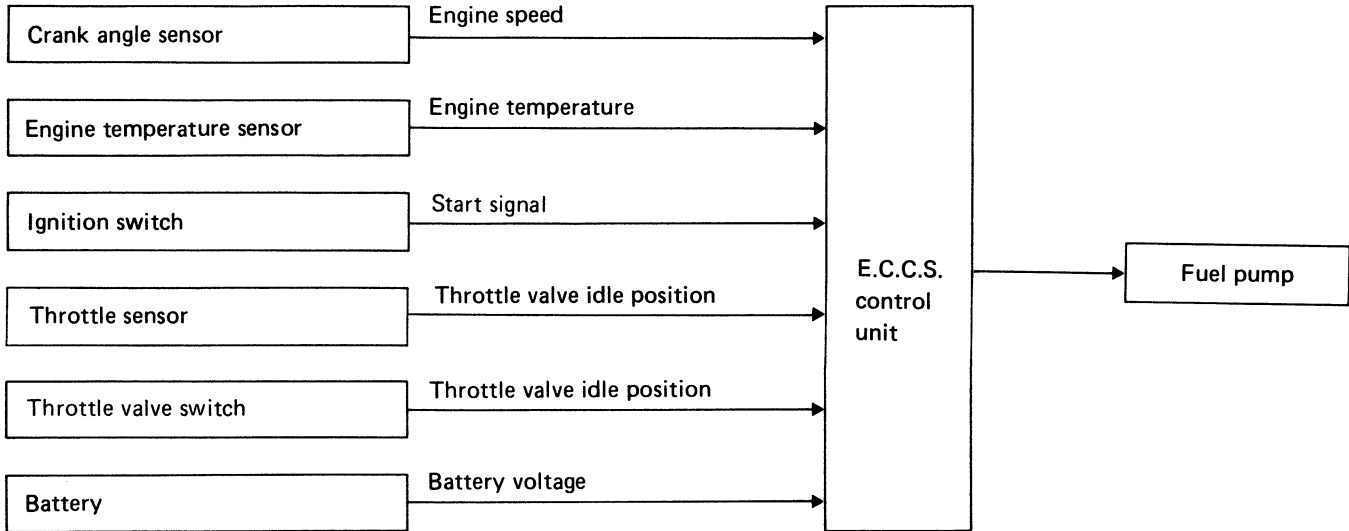

### SYSTEM DESCRIPTION

When the fuel pump terminal voltage drops, pump speed, current consumption and fuel discharge decrease. This terminal voltage therefore is finely controlled corresponding to engine operating conditions in order to reduce power consumption and compartment noise level. The control unit receives various signals from sensors and switches and determines operating conditions of the engine. It then transmits a 20 Hz pulse signal to turn ON/OFF the grounding circuit of the fuel pump. The voltage is controlled by changing the mean voltage applied to the pump terminal by varying this on/off time ratio. That is, the longer the on-time in a cycle, the higher the mean voltage becomes, and vice versa. If the on-time reaches 100%, battery voltage is applied directly to the pump. The pump is driven directly by this battery voltage for several seconds after turning on the ignition switch when the engine is cold, when starting, and when the engine is hot.

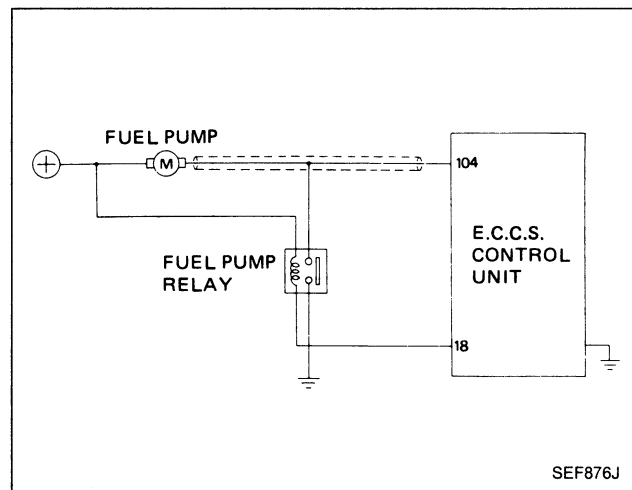

### Fuel pump ON-OFF control

1) Fuel pump ON-OFF control (terminal ⑩④)

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 5 seconds
Engine running and cranking	Operates
When engine is stopped	Stops in 1 second
Except as shown above	Stops

# ENGINE AND EMISSION CONTROL SYSTEM DESCRIPTION

## Fuel Pump Control (Cont'd)

2) Fuel pump relay ON-OFF control (terminal ⑱ )


Condition	Fuel pump relay operation	Fuel pump operation
Ignition switch is turned to ON	ON for 5 seconds	Operates for 5 seconds
When engine is starting [Engine temp.: above 100°C (212°F)]	ON	Operates
After started [Engine temp.: above 100°C (212°F)]	ON for 30 seconds	Operates
When engine stalls and except as shown above	OFF	Stops

## Fuel pump voltage control

Conditions	Voltage
5 seconds after ignition switch is turned to ON	0.1 - 0.5V
Engine cranking	
30 seconds after engine start [above 50°C (122°F)]	
Engine temp. above 100°C (212°F) [Except idle position]	
Engine temp. below 10°C (50°F)	9 - 14V
Except above	

## E.G.R. (Exhaust Gas Recirculation) Control

### INPUT/OUTPUT SIGNAL LINE

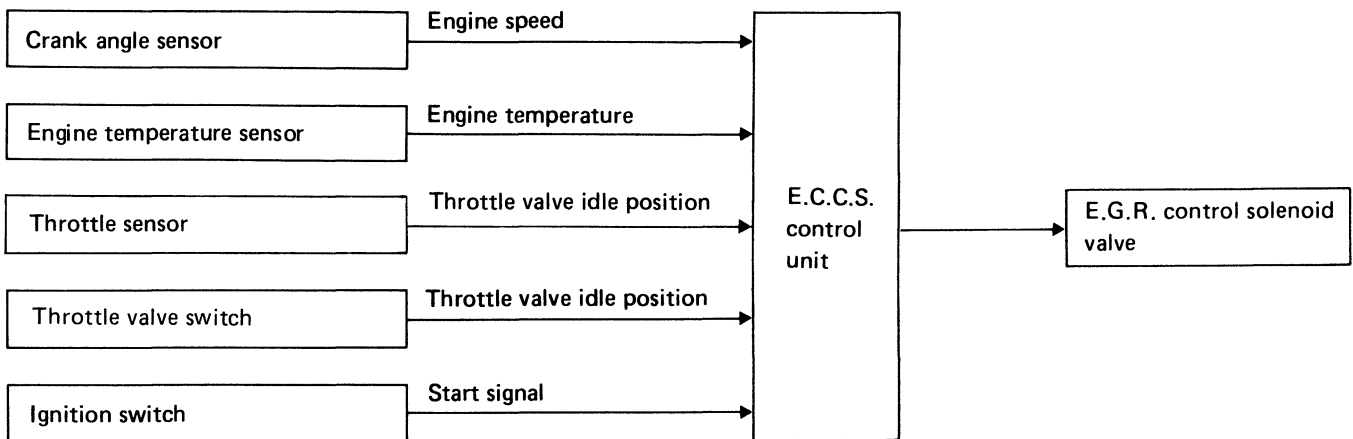

### SYSTEM DESCRIPTION


In addition, a system is provided which precisely cuts and controls port vacuum applied to the E.G.R. valve to suit engine operating conditions. This cut-and-control operation is accomplished through the E.C.U. When the E.C.U. detects any of the following conditions, current flows through the solenoid valve in the E.G.R. control vacuum line.

This causes the port vacuum to be discharged into the atmosphere so that the E.G.R. control valve remains closed.

- 1) Low engine temperature
- 2) Engine starting
- 3) High-speed engine operation
- 4) Engine idling
- 5) Excessively high engine temperature


## Fuel Pressure Regulator Control

### INPUT/OUTPUT SIGNAL LINE

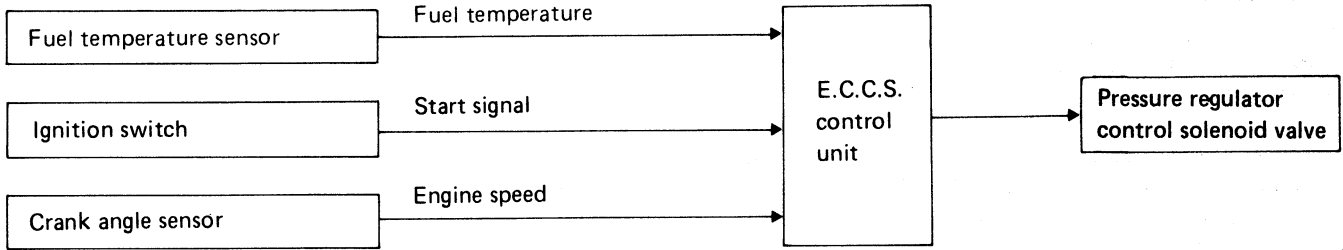


### SYSTEM DESCRIPTION

The fuel "pressure-up" control system briefly increases fuel pressure for improved starting performance of a hot engine. Under normal operating conditions, manifold vacuum is applied to the fuel pressure regulator. When starting the engine, however, the E.C.U. allows current to flow through the ON/OFF solenoid valve in the control vacuum line, opening this line to the atmosphere. As a result, atmospheric pressure is applied, restricting the fuel return line so as to increase fuel pressure.

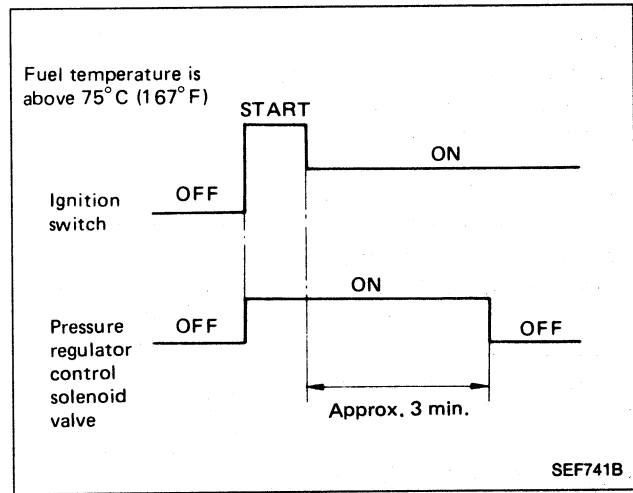

## Acceleration Cut Control

### INPUT/OUTPUT SIGNAL LINE

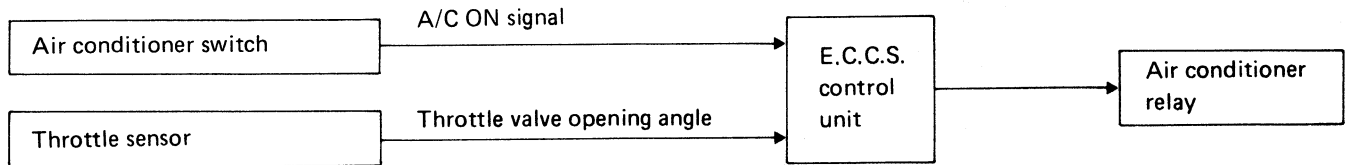


### SYSTEM DESCRIPTION

When the accelerator pedal is fully depressed, the air conditioner is turned off for a few seconds. This system improves acceleration when the air conditioner is used.

## Fail-safe System

### C.P.U. MALFUNCTION OF E.C.U. AND CRANK ANGLE SENSOR MALFUNCTION

#### Input/output signal line

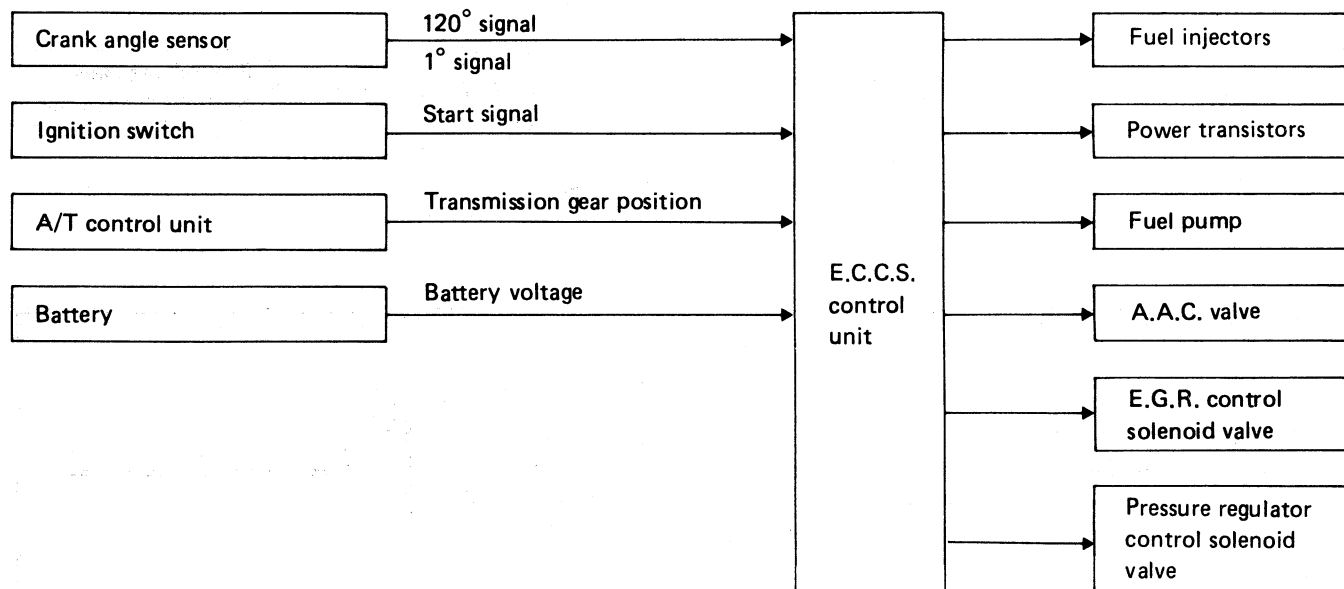

#### OUTLINE

The fail-safe system makes engine starting possible if there is something malfunctioning in the E.C.U.'s C.P.U. circuit, or if there is a disconnection or short/open circuit in the crank angle sensor circuit. In former models, engine starting was difficult under the conditions mentioned above. But with the provisions provided in this back-up system, it is possible to start the engine.

#### Fail-safe system activating condition when crank angle sensor is malfunctioning

The fail-safe mode operation starts immediately after all of the following conditions have been satisfied for several seconds.

- (1) No pulse of 120° signal (reference signal) detected for several seconds, or 1° signal (position signal) is equivalent to 0 rpm.
- (2) Ignition switch in START
- (3) Battery voltage is greater than 10 volts with ignition switch ON.
- (4) The neutral switch is ON, or the inhibitor switch is in the "P" or "N" position.
- (5) When ignition switch is in START, battery voltage is at least 1 volt lower than when ignition switch is ON.

#### Fail-safe system activating condition when E.C.U. is malfunctioning

The computing function of the E.C.U. was judged to be malfunctioning.

When the fail-safe system activates, i.e. if the E.C.U. detects a malfunction condition in the C.P.U. of E.C.U. or crank angle sensor circuit, the CHECK ENGINE LIGHT on the instrument panel lights to warn the driver.

#### Engine control, with fail-safe system, operates when E.C.U. or crank angle sensor is malfunctioning

When the fail-safe system is operating, fuel injection, ignition timing, fuel pump operation, engine idle speed, E.G.R. operation and pressure regulator operation are controlled under certain limitations.

#### Cancellation of fail-safe system when E.C.U. or crank angle sensor is malfunctioning

Activation of the fail-safe system is canceled each time the ignition switch is turned OFF. The system is reactivated if all of the above-mentioned activating conditions are satisfied after turning the ignition switch from OFF to ON.

# ENGINE AND EMISSION CONTROL SYSTEM DESCRIPTION

## Fail-safe System (Cont'd)

### AIR FLOW METER MALFUNCTION

If the air flow meter output voltage is above or below the specified value, the E.C.U. senses an air flow meter malfunction. In case of a malfunction, the throttle sensor substitutes for the air flow meter.

Though air flow meter is malfunctioning, it is possible to drive the vehicle and start the engine. But engine speed will not rise more than 2,000 rpm in order to inform the driver of fail-safe system operation while driving.

#### Operation

Engine condition	Starter switch	Fail-safe system	Fail-safe functioning
Stopped	ANY	Does not operate	—
Cranking	ON	Operates	Engine will be started by a pre-determined injection pulse on E.C.U.
Running	OFF		Engine speed will not rise above 2,000 rpm

### ENGINE TEMPERATURE SENSOR MALFUNCTION

When engine temperature sensor output voltage is below or above the specified value, water temperature is fixed at the preset value as follows:

#### Operation

Condition	Engine temperature decided
Just as ignition switch is turned ON or Start	20°C (68°F)
More than 6 minutes after ignition ON or Start	80°C (176°F)
Except as shown above	20 - 80°C (68 - 176°F) (Depends on the time)

### THROTTLE SENSOR MALFUNCTION

When throttle sensor output voltage is below or above the specified value, throttle sensor output is fixed at the preset value.

### DETONATION SENSOR MALFUNCTION

When the output signal of the detonation sensor is abnormal, the E.C.U. judges it to be malfunctioning. When detonation sensor is malfunctioning, ignition timing will retard according to operating conditions.

# IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION

## PREPARATION

1. Make sure that the following parts are in good order.
  - Battery
  - Ignition system
  - Engine oil and coolant levels
  - Fuses
  - E.C.U. harness connector
  - Vacuum hoses
  - Air intake system (Oil filler cap, oil level gauge, etc.)
  - Fuel pressure
  - Engine compression
  - E.G.R. control valve operation
  - Throttle valve
2. On air conditioner equipped models, checks should be carried out while the air conditioner is "OFF".
3. When checking idle rpm, ignition timing and


mixture ratio, checks should be carried out while shift lever is in "N" position.

4. When measuring "CO" percentage, insert probe more than 40 cm (15.7 in) into tail pipe.
5. Turn off headlamps, heater blower, rear defogger.
6. Keep front wheels pointed straight ahead.
7. Make the check after the radiator fan has stopped.


### WARNING:

- a. When selector lever is shifted to "D" position, apply parking brake and block both front and rear wheels with chocks.
- b. Depress brake pedal while racing the engine to prevent forward surge of vehicle.
- c. After the adjustment has been made, shift the lever to the "N" or "P" position and remove wheel chocks.

### Overall inspection sequence

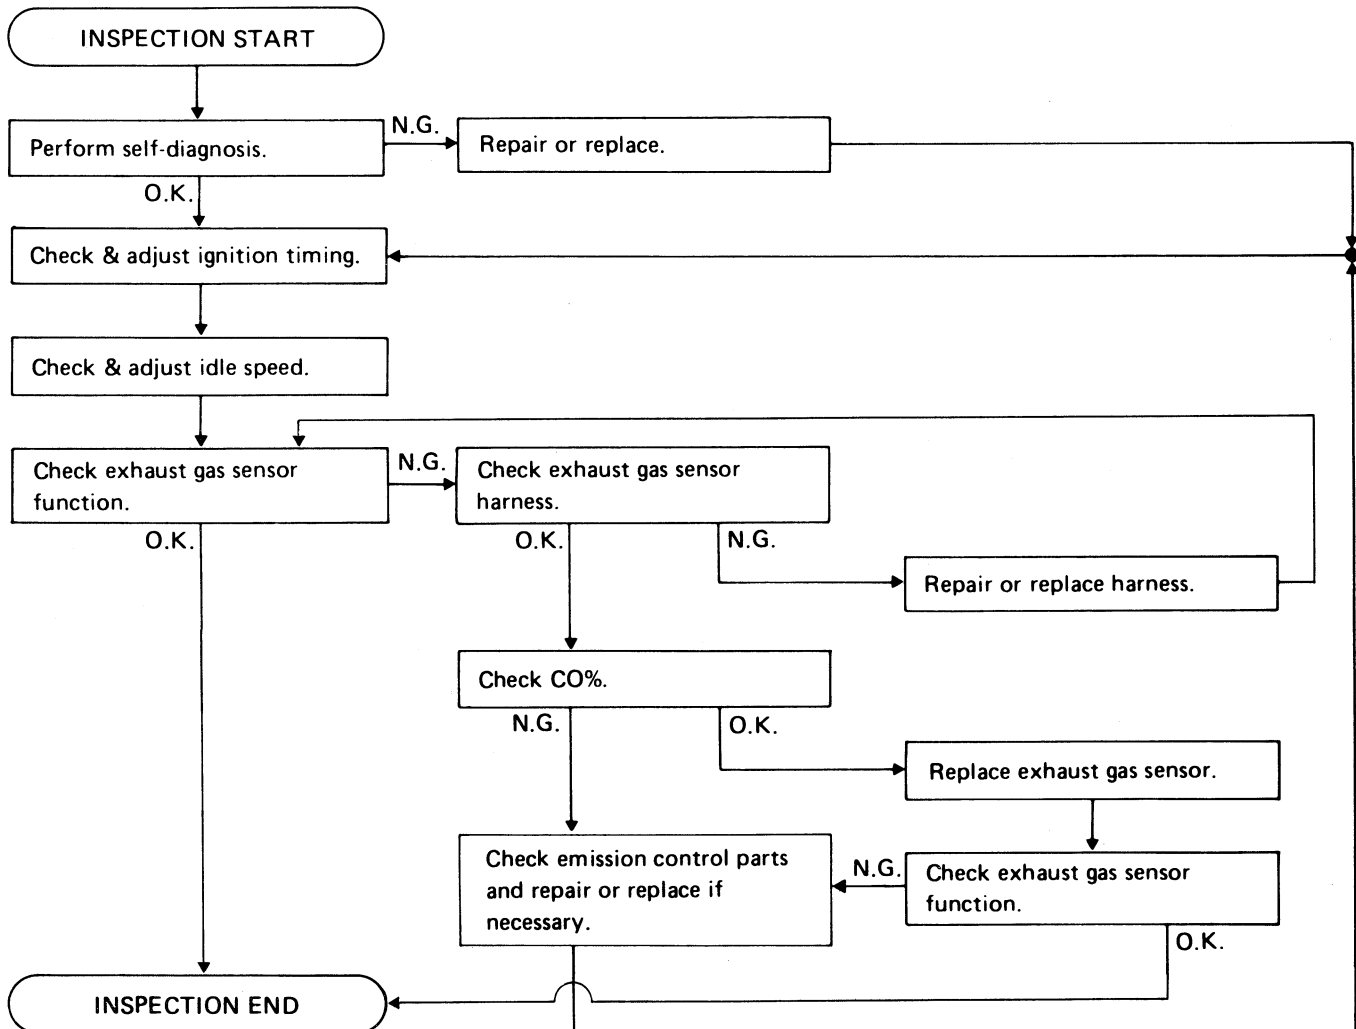


# IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION

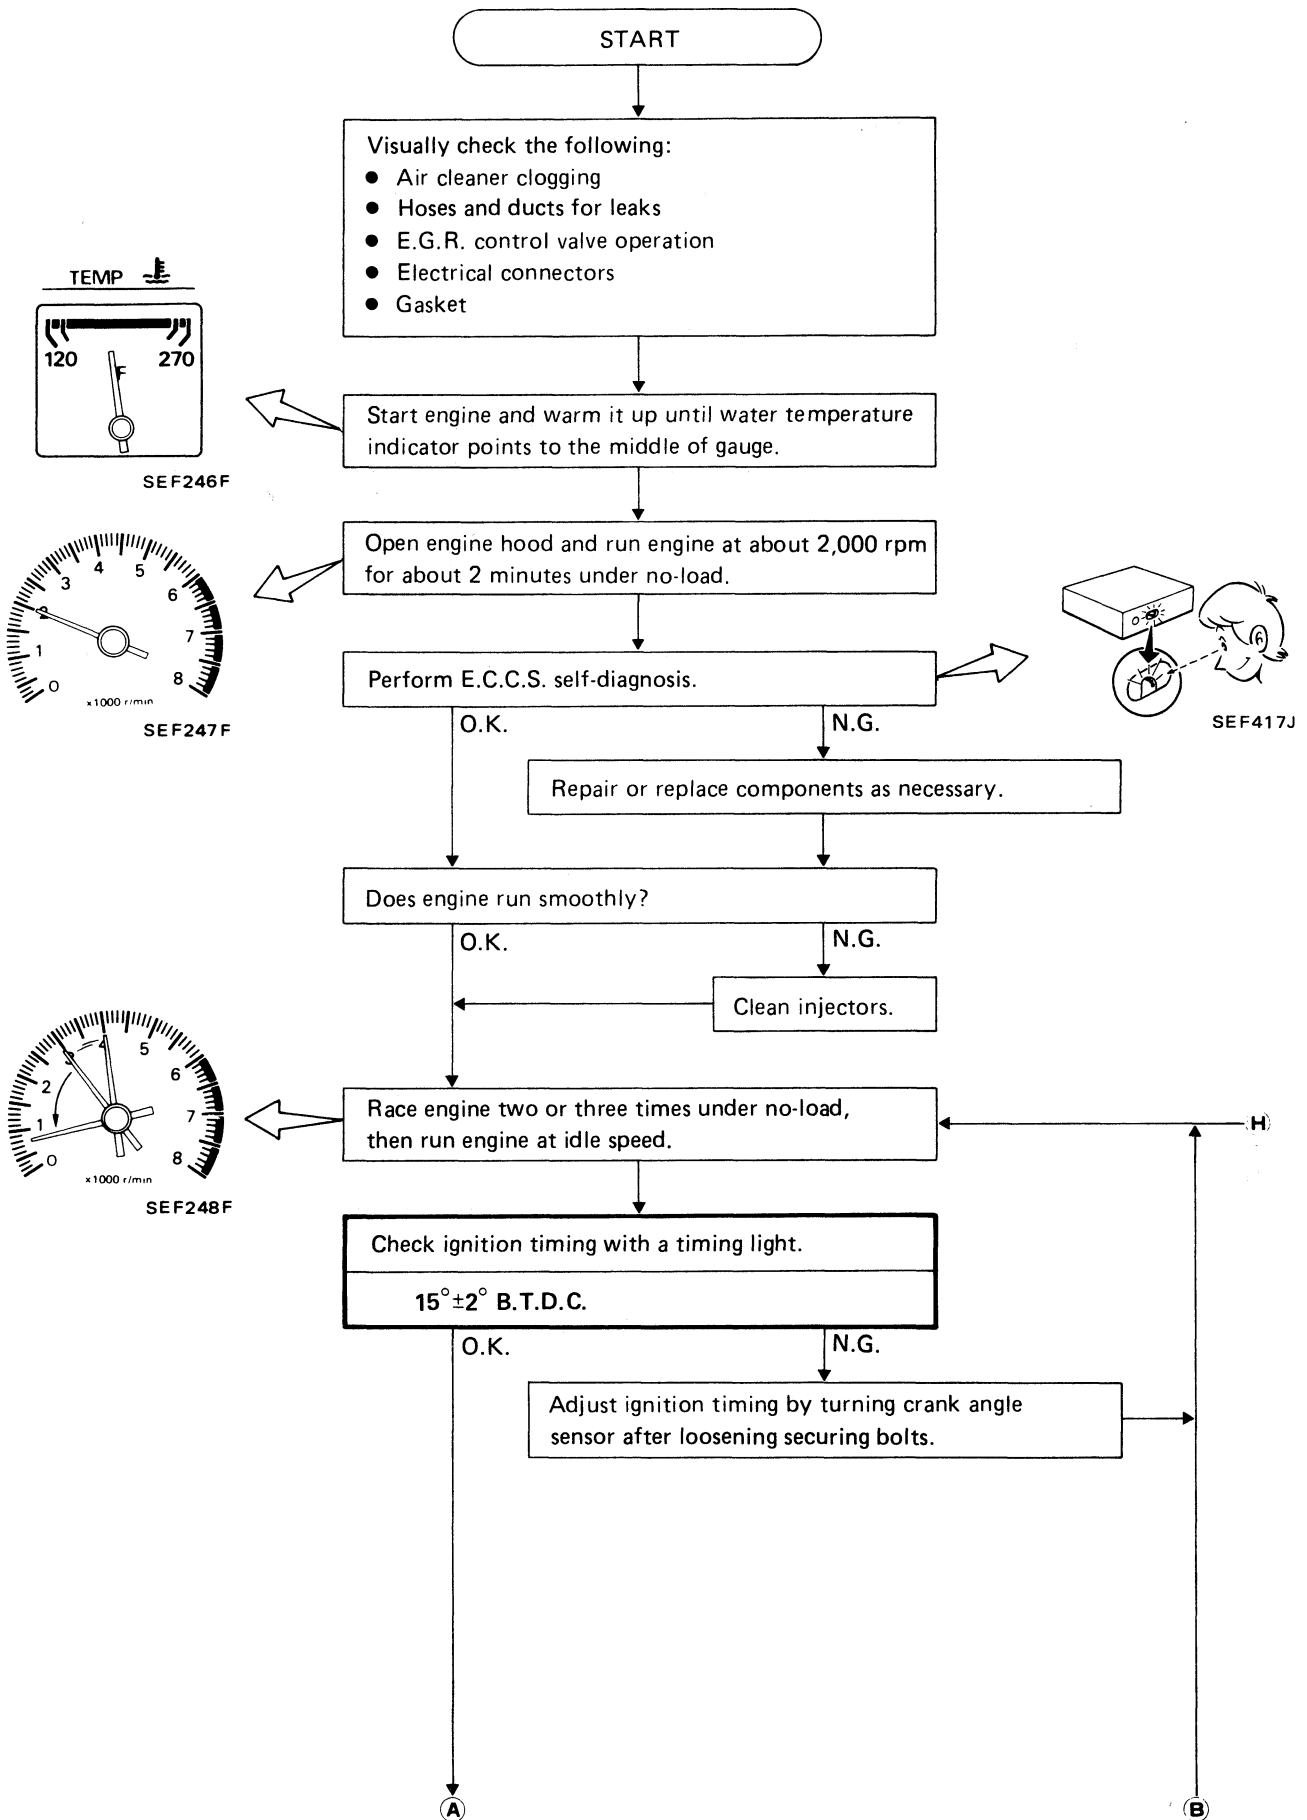






# IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION

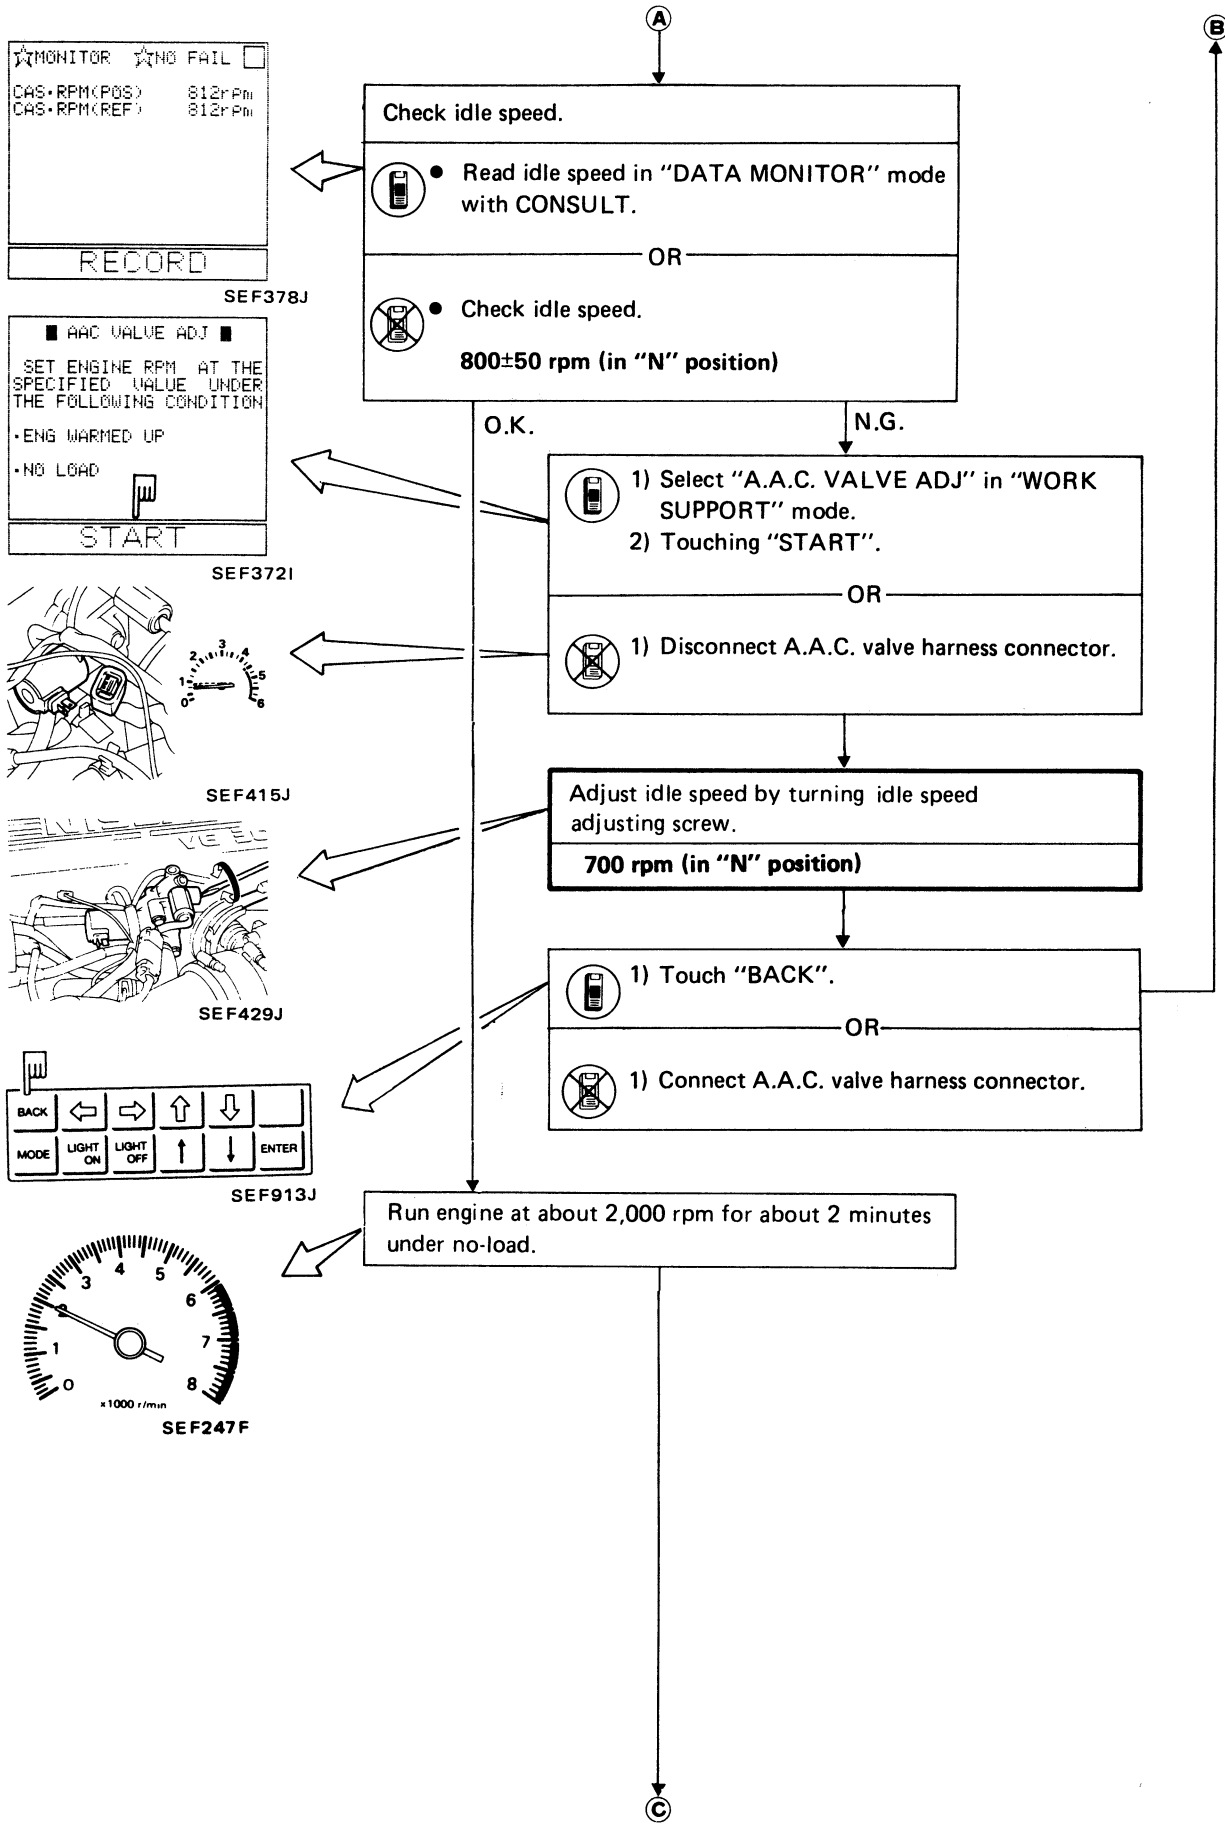

# IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION



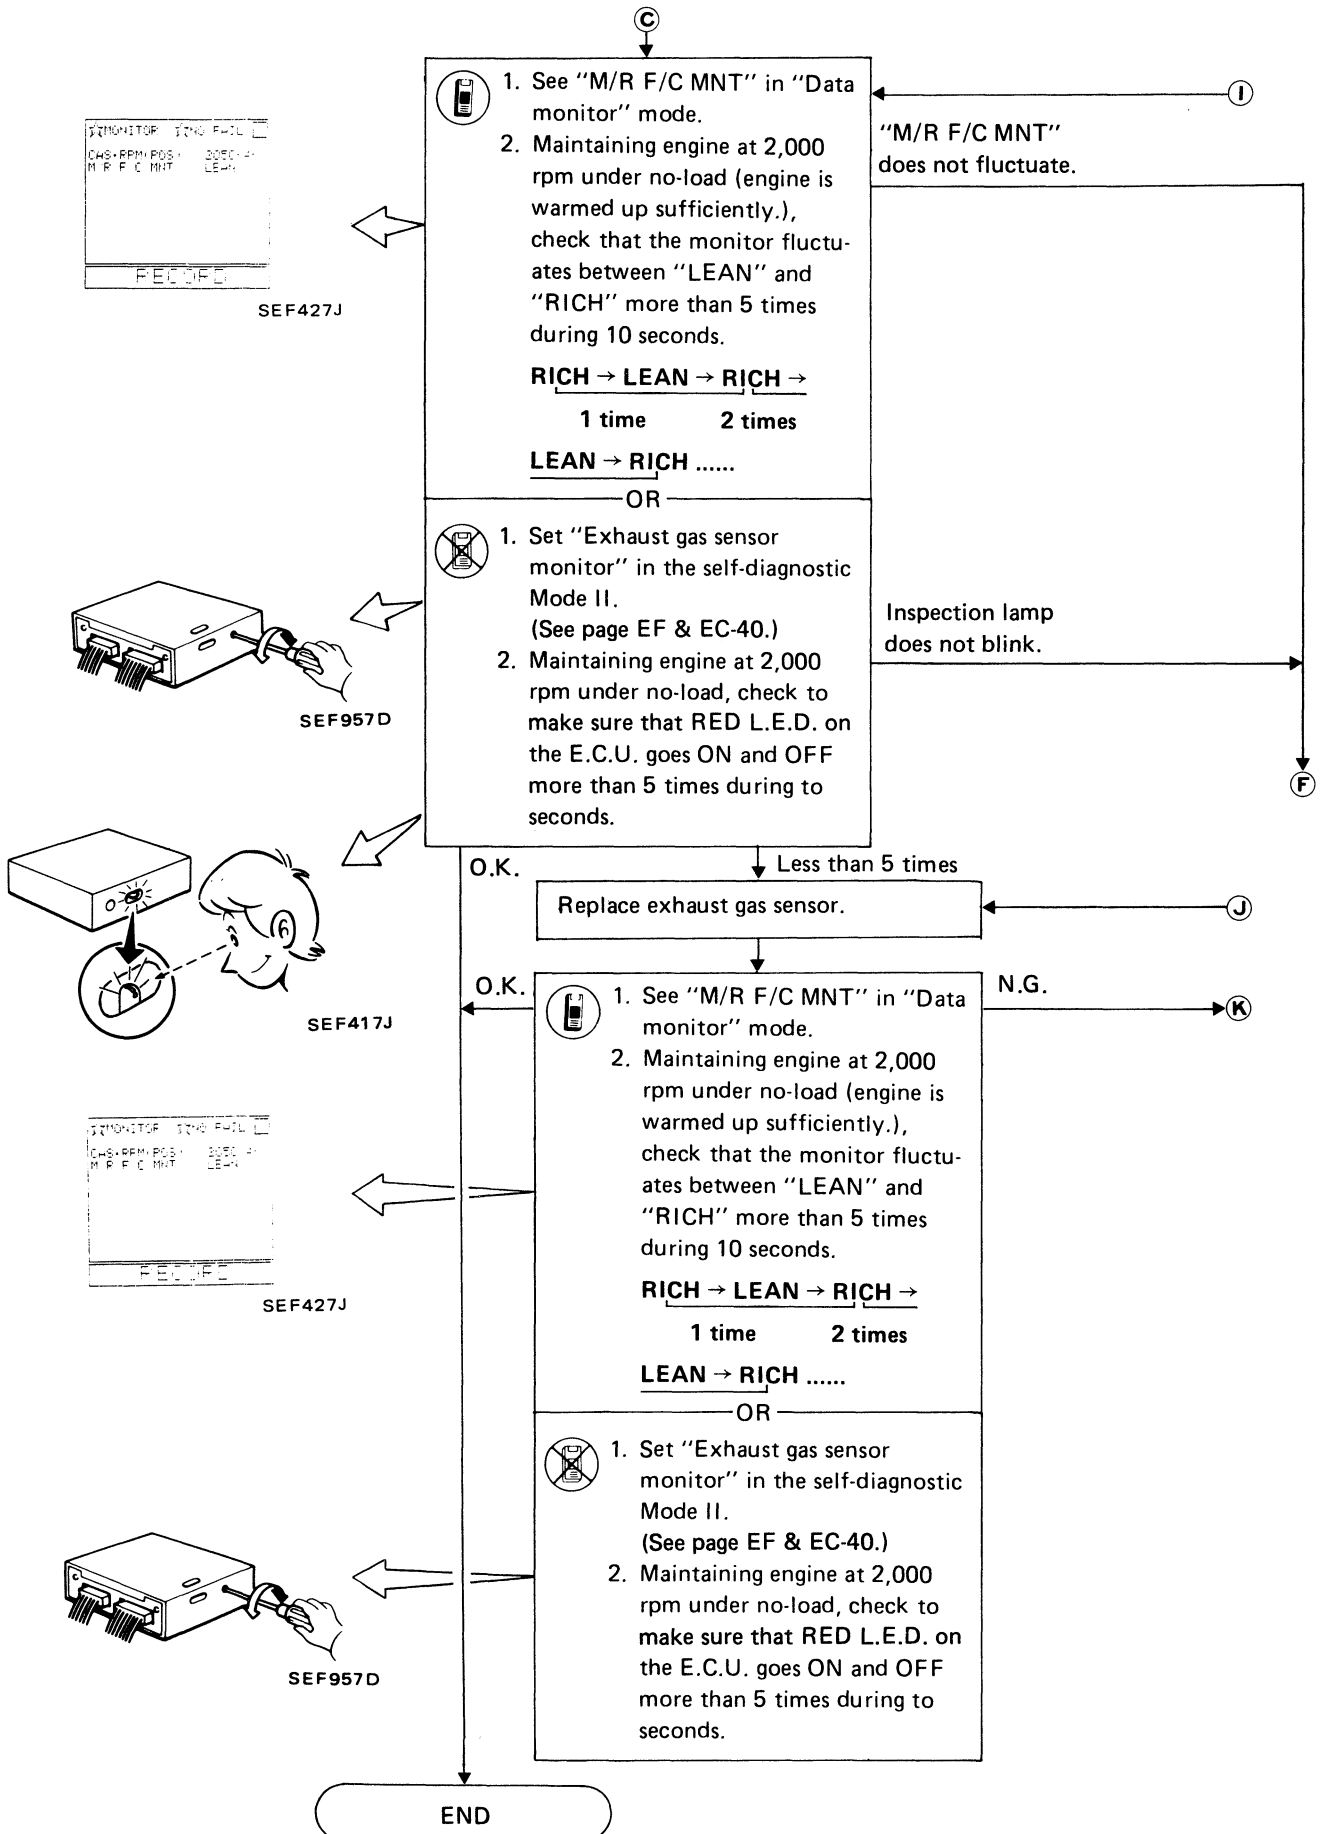


# IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION

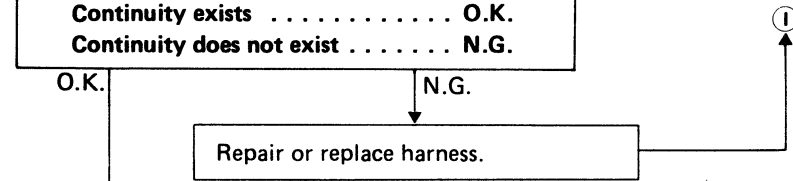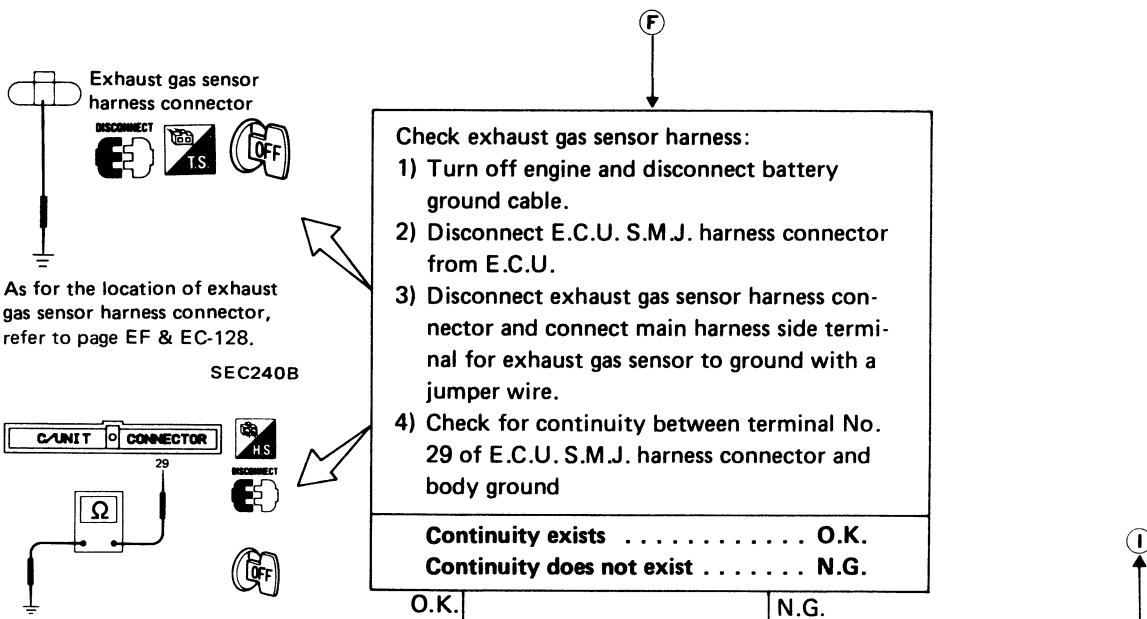


Connect 76-pin connector to control unit.

Connect battery ground cable.

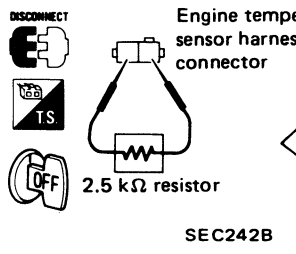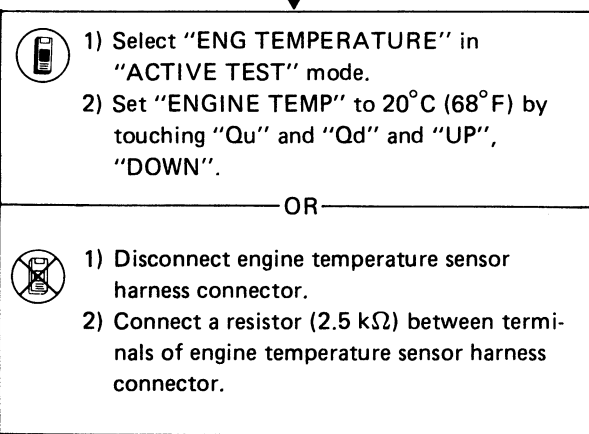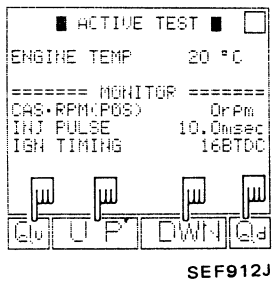


Disconnect jumper wire connected to exhaust gas sensor harness connector (main harness side).

Start engine and warm it up until water temperature indicator points to middle of gauge.

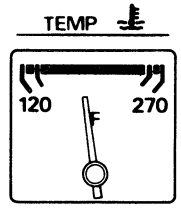

G

# IDLE SPEED/IGNITION TIMING/IDLE MIXTURE RATIO INSPECTION

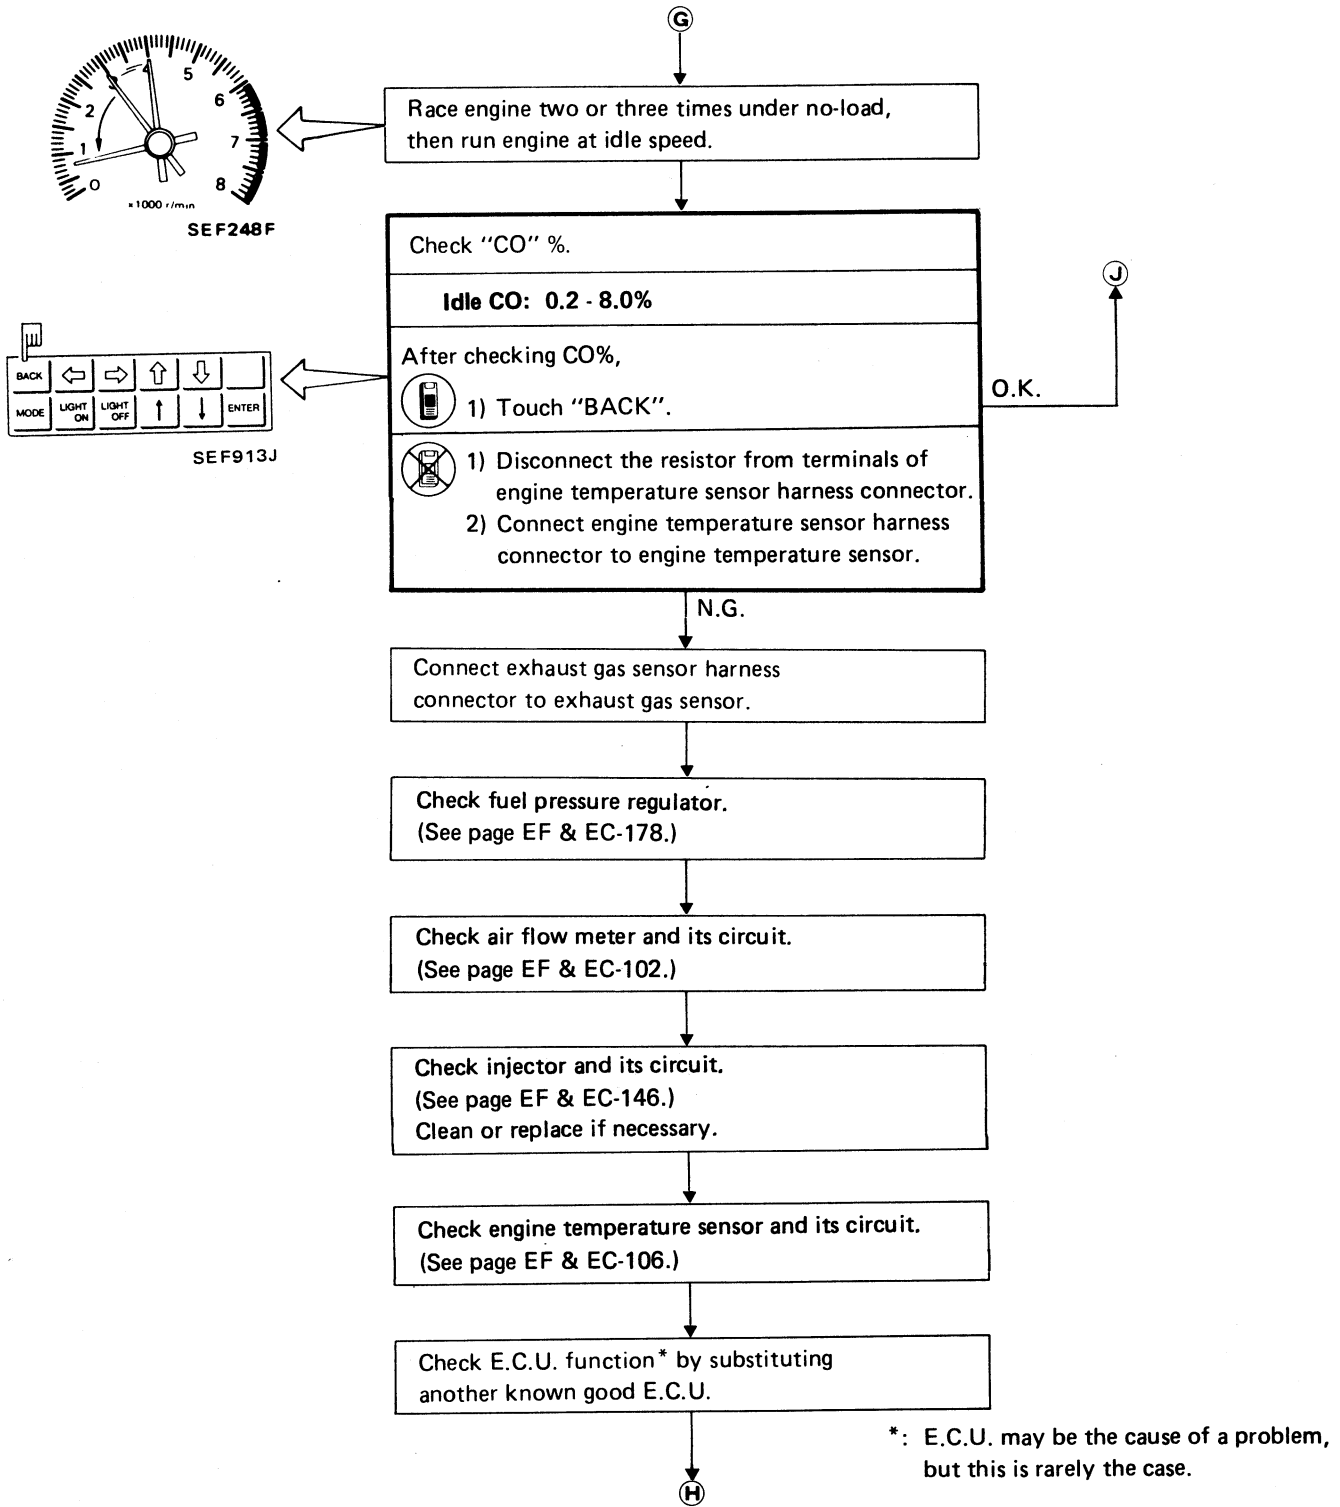

# TROUBLE DIAGNOSES




## Contents

How to Perform Trouble Diagnoses for Quick and Accurate Repair .....	EF & EC- 35
Self-diagnosis .....	EF & EC- 39
Self-diagnosis — Mode I .....	EF & EC- 41
Self-diagnosis — Mode II (Self-diagnostic results) .....	EF & EC- 42
Self-diagnosis — Mode II (Exhaust gas sensor monitor) .....	EF & EC- 45
Consult .....	EF & EC- 46
Diagnostic Procedure .....	EF & EC- 53
Basic Inspection .....	EF & EC- 55
Diagnostic Procedure 1 — High Idling after Warm-up .....	EF & EC- 58
Diagnostic Procedure 2 — Hunting .....	EF & EC- 59
Diagnostic Procedure 3 — Unstable Idle .....	EF & EC- 61
Diagnostic Procedure 4 — Hard to Start or Impossible to Start when the Engine is Cold .....	EF & EC- 64
Diagnostic Procedure 5 — Hard to Start or Impossible to Start when the Engine is Hot .....	EF & EC- 66
Diagnostic Procedure 6 — Hard to Start or Impossible to Start under Normal Conditions .....	EF & EC- 68
Diagnostic Procedure 7 — Hesitation when the Engine is Hot .....	EF & EC- 70
Diagnostic Procedure 8 — Hesitation when the Engine is Cold .....	EF & EC- 71
Diagnostic Procedure 9 — Hesitation under Normal Conditions .....	EF & EC- 72
Diagnostic Procedure 10 — Engine Stalls when turning .....	EF & EC- 73
Diagnostic Procedure 11 — Engine Stalls when the Engine is Hot .....	EF & EC- 75
Diagnostic Procedure 12 — Engine Stalls when the Engine is Cold .....	EF & EC- 77
Diagnostic Procedure 13 — Engine Stalls when Stepping on the Accelerator Momentarily .....	EF & EC- 79
Diagnostic Procedure 14 — Engine Stalls after Decelerating .....	EF & EC- 81
Diagnostic Procedure 15 — Engine Stalls when Accelerating or when Driving at Constant Speed .....	EF & EC- 85
Diagnostic Procedure 16 — Engine Stalls when the Electrical Load is Heavy .....	EF & EC- 87
Diagnostic Procedure 17 — Lack of Power and Stumble .....	EF & EC- 89
Diagnostic Procedure 18 — Detonation .....	EF & EC- 90
Diagnostic Procedure 19 — Surge .....	EF & EC- 92
Diagnostic Procedure 20 — Backfire through the Intake .....	EF & EC- 93
Diagnostic Procedure 21 — Backfire through the Exhaust .....	EF & EC- 93
Diagnostic Procedure 22 MAIN POWER SUPPLY AND GROUND CIRCUIT .....	EF & EC- 94
Diagnostic Procedure 23 CRANK ANGLE SENSOR .....	EF & EC- 98
Diagnostic Procedure 24 AIR FLOW METER .....	EF & EC-102
Diagnostic Procedure 25 ENGINE TEMPERATURE SENSOR .....	EF & EC-106
Diagnostic Procedure 26 VEHICLE SPEED SENSOR .....	EF & EC-110
Diagnostic Procedure 27 IGNITION SIGNAL .....	EF & EC-112
Diagnostic Procedure 28 FUEL PUMP CONTROL .....	EF & EC-116
Diagnostic Procedure 29 E.C.C.S. CONTROL UNIT .....	EF & EC-120
Diagnostic Procedure 30 E.G.R. FUNCTION & E.G.R. CONTROL .....	EF & EC-122
Diagnostic Procedure 31 EXHAUST GAS SENSOR .....	EF & EC-128
Diagnostic Procedure 32 DETONATION SENSOR .....	EF & EC-132

# TROUBLE DIAGNOSES

## Contents (Cont'd)

<b>Diagnostic Procedure 33</b>	
EXHAUST GAS TEMPERATURE SENSOR .....	EF & EC-134
<b>Diagnostic Procedure 34</b>	
FUEL TEMPERATURE SENSOR .....	EF & EC-138
<b>Diagnostic Procedure 35</b>	
THROTTLE SENSOR .....	EF & EC-140
<b>Diagnostic Procedure 36</b>	
INJECTOR LEAK .....	EF & EC-144
<b>Diagnostic Procedure 37</b>	
INJECTOR CIRCUIT .....	EF & EC-146
<b>Diagnostic Procedure 38</b>	
THROTTLE VALVE SWITCH .....	EF & EC-150
<b>Diagnostic Procedure 39</b>	
START SIGNAL .....	EF & EC-152
<b>Diagnostic Procedure 40</b>	
P.R.V.R. CONTROL .....	EF & EC-154
<b>Diagnostic Procedure 41</b>	
AIR REGULATOR .....	EF & EC-158
<b>Diagnostic Procedure 42</b>	
A.A.C. VALVE .....	EF & EC-160
<b>Diagnostic Procedure 43</b>	
A/T CONTROL UNIT (NEUTRAL SIGNAL) CIRCUIT .....	EF & EC-162
<b>Diagnostic Procedure 44</b>	
FAIL-SAFE SYSTEM FOR CRANK ANGLE SENSOR AND C.P.U. OF E.C.U. ....	EF & EC-164
<b>Electrical Components Inspection</b> .....	EF & EC-166

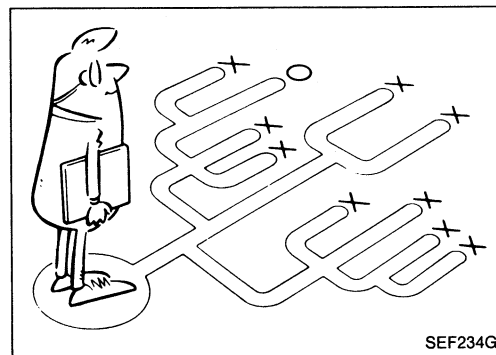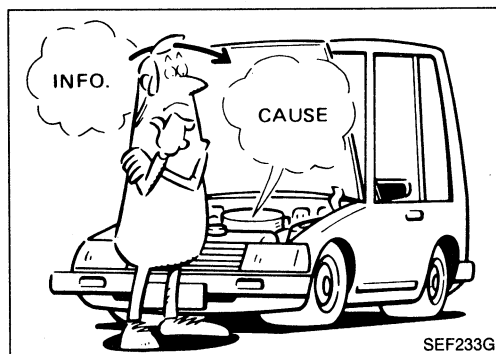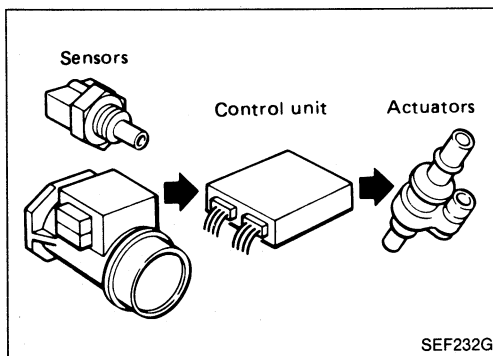

## How to Perform Trouble Diagnoses for Quick and Accurate Repair

### INTRODUCTION

The engine has an electronic control unit to control major systems such as fuel control, ignition control, idle speed control, etc. The control unit accepts input signals from sensors and instantly drives actuators. It is essential that both kinds of signals are proper and stable. At the same time, it is important that there are no conventional problems such as vacuum leaks, fouled spark plugs, or other problems with the engine.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the problems, so a road test with a circuit tester connected to a suspected circuit should be performed.

Before undertaking actual checks, take just a few minutes to talk with a customer who approaches with a driveability complaint. The customer is a very good supplier of information on such problems, especially intermittent ones. Through interaction with the customer, find out what symptoms are present and under what conditions they occur.

Start your diagnosis by looking for "conventional" problems first. This is one of the best ways to troubleshoot driveability problems on an electronically controlled engine vehicle.

# TROUBLE DIAGNOSES

## How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd) WORK FLOW

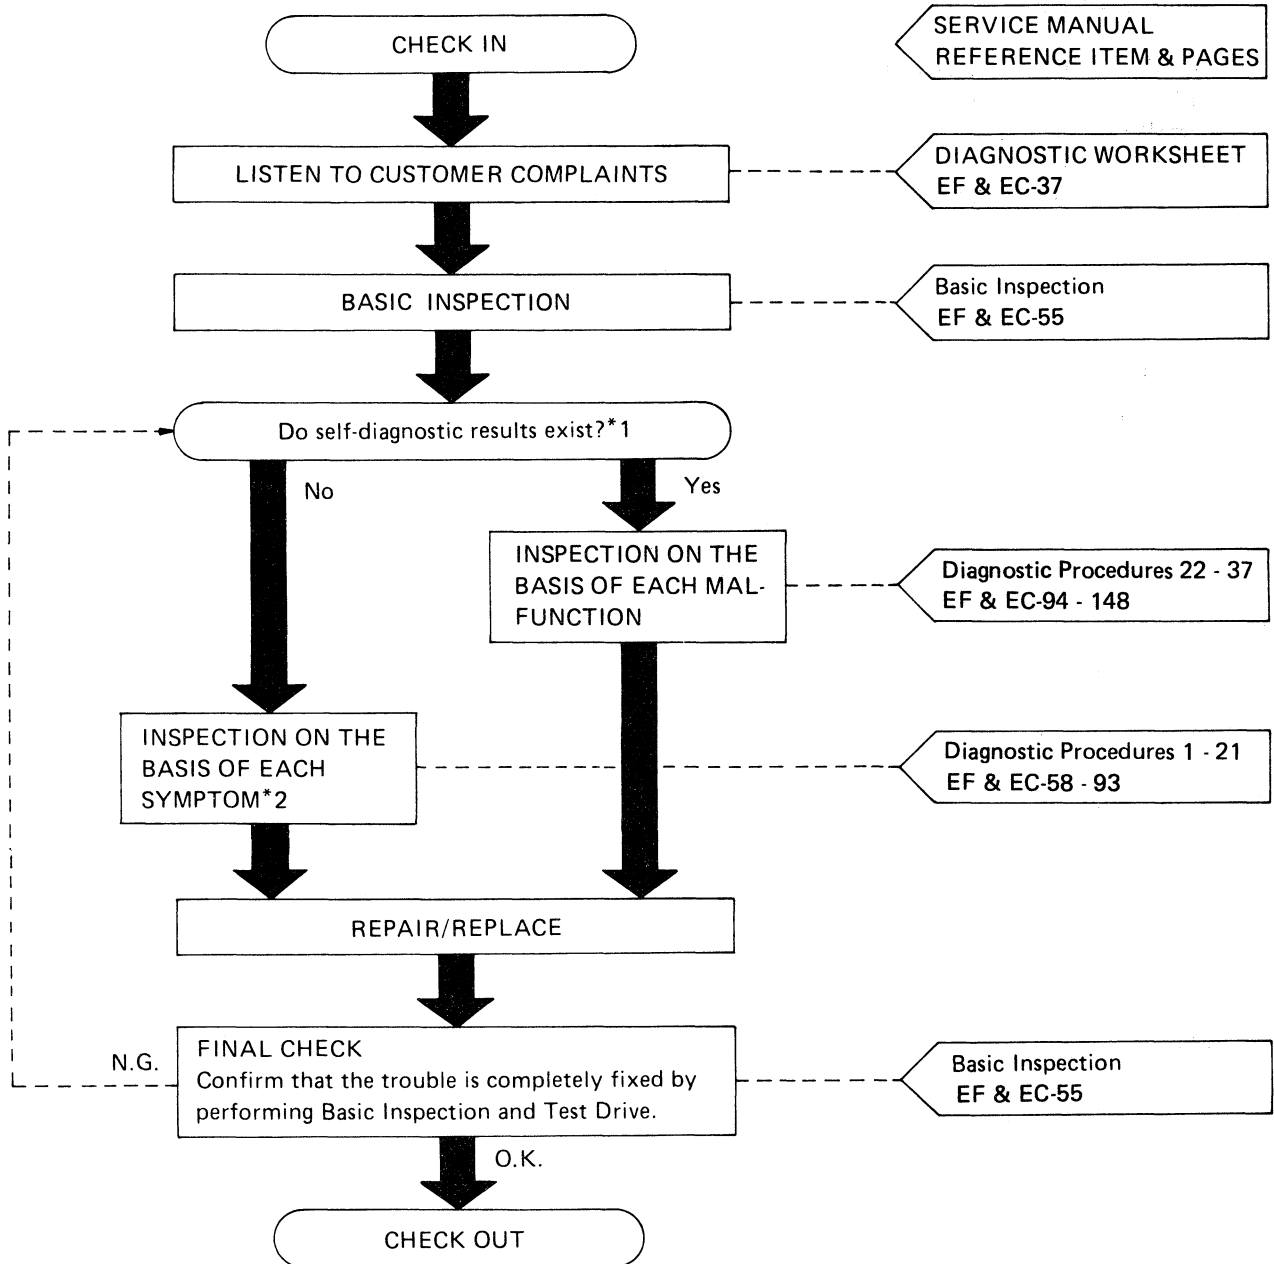


\*1: If the self-diagnosis cannot be performed, check main power supply and ground circuit. (See Diagnostic Procedure 22.)  
\*2: If the trouble is not duplicated, see INTERMITTENT PROBLEM SIMULATION (EF & EC-38).





## TROUBLE DIAGNOSES

### How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

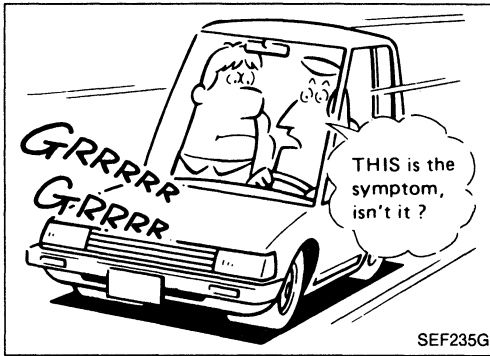


#### INTERMITTENT PROBLEM SIMULATION

In order to duplicate an intermittent problem, it is effective to create similar conditions for component parts, under which the problem might occur.

Perform the activity listed under Service procedure and note the result.

	Variable factor	Influential part	Target condition	Service procedure
1	Mixture ratio	Pressure regulator	Made lean	Remove vacuum hose and apply vacuum.
			Made rich	Remove vacuum hose and apply pressure.
2	Ignition timing	Crank angle sensor	Advanced	Rotate distributor counterclockwise.
			Retarded	Rotate distributor clockwise.
3	Mixture ratio feedback control	Exhaust gas sensor	Suspended	Disconnect exhaust gas sensor harness connector.
		Control unit	Operation check	Perform self-diagnosis (Mode II) at 2,000 rpm.
4	Idle speed	A.A.C. valve	Raised	Turn idle adjusting screw counterclockwise.
			Lowered	Turn idle adjusting screw clockwise.
5	Electrical connection (Electric continuity)	Harness connectors and wires	Poor electrical connection or improper wiring	Tap or wiggle. Race engine rapidly. See if the torque reaction of the engine unit causes electric breaks.
6	Temperature	Control unit	Cooled	Cool with an icing spray or similar device.
			Warmed	Heat with a hair drier. <b>[WARNING: Do not overheat the unit.]</b>
7	Moisture	Electric parts	Damp	Wet. <b>[WARNING: Do not directly pour water on components. Use a mist sprayer.]</b>
8	Electric loads	Load switches	Loaded	Turn on headlamps, air conditioner, rear defogger, etc.
9	Idle switch condition	Control unit	ON-OFF switching	Rotate throttle sensor body.
10	Ignition spark	Timing light	Spark power check	Try to flash timing light for each cylinder using ignition coil adapter (S.S.T.).


# TROUBLE DIAGNOSES

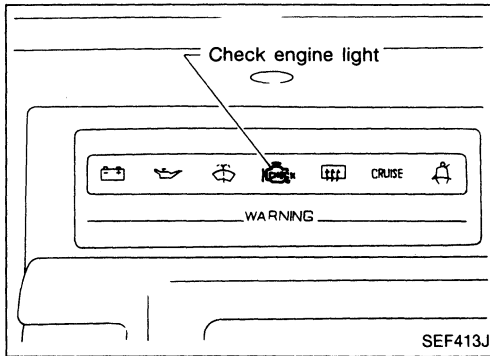

## Self-diagnosis

### CHECK ENGINE LIGHT

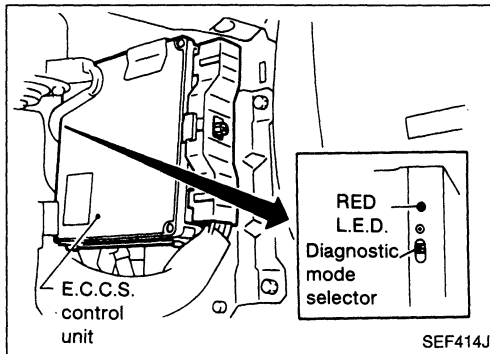


A check engine light has been adopted on all models. This light blinks simultaneously with the RED L.E.D. on the E.C.U.



### E.C.U. L.E.D.


The E.C.U. has only one RED L.E.D.

## SELF-DIAGNOSTIC FUNCTION

Condition		Mode	Mode I	Mode II
Ignition switch in "ON" position	Engine stopped 		BULB CHECK	SELF-DIAGNOSTIC RESULTS
	Engine running 		MALFUNCTION WARNING	EXHAUST GAS SENSOR MONITOR

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd) HOW TO SWITCH MODES

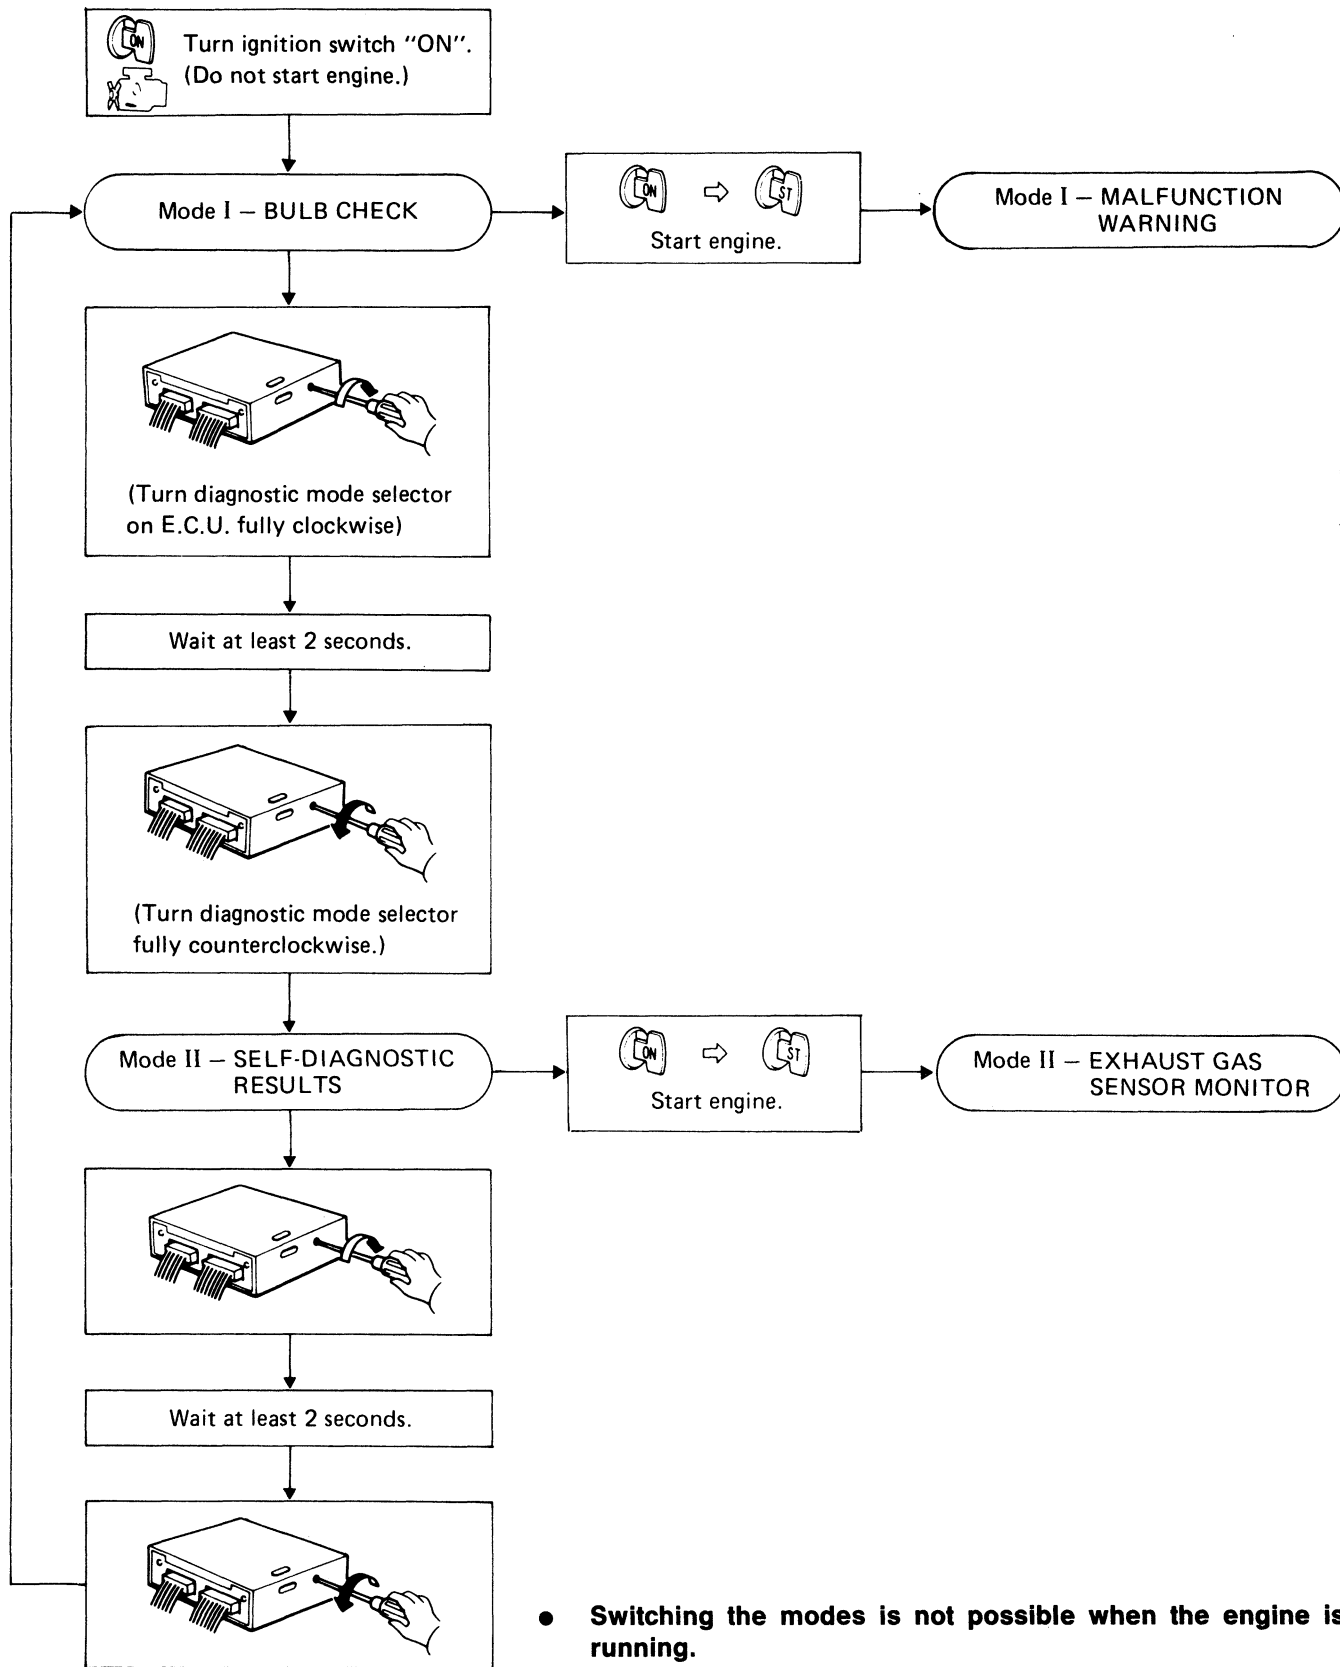

- Switching the modes is not possible when the engine is running.
- When the ignition switch is turned off during diagnosis in each mode, and then turned back on again after power to the E.C.U. has dropped off completely, the diagnosis will automatically return to Mode I.

# TROUBLE DIAGNOSES

## Self-diagnosis — Mode I

### MODE I — BULB CHECK

In this mode, the RED L.E.D. in the E.C.U. and the CHECK ENGINE LIGHT in the instrument panel stay "ON".  
If either remain "OFF", check the bulb in the CHECK ENGINE LIGHT or the RED L.E.D.

### MODE I — MALFUNCTION WARNING

#### FOR CALIFORNIA MODEL

CHECK ENGINE LIGHT and RED L.E.D.	Condition
ON	When the following malfunctions (check engine light item) are detected or the E.C.U.'s C.P.U. or crank angle sensor is malfunctioning.
OFF	O.K.

Code No.	Malfunction
12	Air flow meter circuit
13	Engine temperature sensor circuit
14	Vehicle speed sensor circuit
31	E.C.U. (E.C.C.S. control unit)
32	E.G.R. function
33	Exhaust gas sensor circuit
35	Exhaust gas temperature sensor circuit
43	Throttle sensor circuit
45	Injector leak
51	Injector circuit

- **These Code Numbers are clarified in Mode II — SELF-DIAGNOSTIC RESULTS.**
- **The RED L.E.D. and the CHECK ENGINE LIGHT will turn off when normal condition is detected. At this time, the Mode II — SELF-DIAGNOSTIC RESULTS memory must be cleared as the contents remain stored.**

#### FOR NON-CALIFORNIA MODEL


CHECK ENGINE LIGHT and RED L.E.D.	Condition
ON	When the E.C.U.'s C.P.U. or crank angle sensor is malfunctioning.
OFF	O.K.

# TROUBLE DIAGNOSES

## Self-diagnosis — Mode II (Self-diagnostic results)

### DESCRIPTION



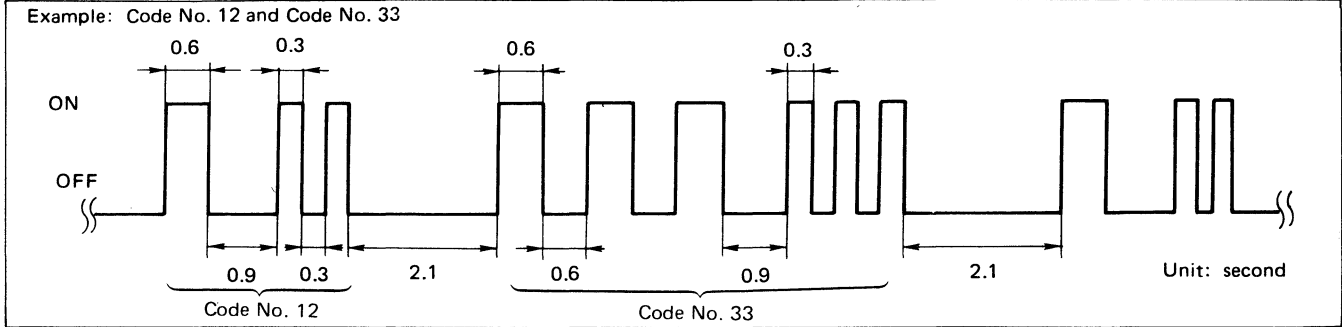


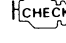



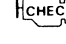
In this mode, a malfunction code is indicated by the number of flashes from the RED L.E.D. or the CHECK ENGINE LIGHT as shown below:



Long (0.6 second) blinking indicates the number of ten digits and short (0.3 second) blinking indicates the number of single digits.


For example, the red L.E.D. flashes once for 0.6 seconds and then it flashes twice for 0.3 seconds. This indicates the number "12" and refers to a malfunction in the air flow meter. In this way, all the problems are classified by their code numbers.

### Display code table

Code No.	Detected items	California model	Non-California model
11*	Crank angle sensor circuit	X	X
12 	Air flow meter circuit	X	X
13 	Engine temperature sensor circuit	X	X
14 	Vehicle speed sensor circuit	X	X
21*	Ignition signal circuit	X	X
22	Fuel pump circuit	X	X
31 	E.C.U.	X	X
32 	E.G.R. function	X	—
33 	Exhaust gas sensor circuit	X	X
34	Detonation sensor circuit	X	X
35 	Exhaust gas temperature sensor circuit	X	—
42	Fuel temperature sensor circuit	X	X
43 	Throttle sensor circuit	X	X
45 	Injector leak	X	—
51 	Injector circuit	X	—
55	No malfunction in the above circuits	X	X

X: Available

—: Not available

 : Check engine light item

\*: Check items causing a malfunction of crank angle sensor circuit first, if both code No. 11 and 21 are displayed at the same time.

## TROUBLE DIAGNOSES

### Self-diagnosis — Mode II (Self-diagnostic results) (Cont'd)

Code No.	Detected items	Malfunction is detected when ...	Check item (remedy)
*11	Crank angle sensor circuit	<ul style="list-style-type: none"> <li>● Either 1° or 120° signal is not entered for the first few seconds during engine cranking.</li> <li>● Either 1° or 120° signal is not input often enough while the engine speed is higher than the specified rpm.</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector (If harness and connector are normal, replace crank angle sensor.)</li> </ul>
12	Air flow meter circuit	<ul style="list-style-type: none"> <li>● The air flow meter circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector (If harness and connector are normal, replace air flow meter.)</li> </ul>
13	Engine temperature sensor circuit	<ul style="list-style-type: none"> <li>● The engine temperature sensor circuit is open or shorted. (An abnormally high or low output voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Engine temperature sensor</li> </ul>
14	Vehicle speed sensor circuit	<ul style="list-style-type: none"> <li>● The vehicle speed sensor circuit is open or shorted.</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Vehicle speed sensor (reed switch)</li> </ul>
*21	Ignition signal circuit	<ul style="list-style-type: none"> <li>● The ignition signal in the primary circuit is not entered during engine cranking or running.</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Power transistor unit</li> </ul>
22	Fuel pump	<ul style="list-style-type: none"> <li>● Abnormally high or low current supply to the fuel pump persists.</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Fuel pump</li> <li>● Fuel pump relay</li> </ul>
31	E.C.U.	<ul style="list-style-type: none"> <li>● E.C.U. calculation function is malfunctioning.</li> </ul>	(Replace E.C.C.S. control unit.)
32	E.G.R. function	<ul style="list-style-type: none"> <li>● E.G.R. control valve does not operate. (E.G.R. control valve spring does not lift.)</li> </ul>	<ul style="list-style-type: none"> <li>● E.G.R. control valve</li> <li>● E.G.R. control solenoid valve</li> </ul>
33	Exhaust gas sensor circuit	<ul style="list-style-type: none"> <li>● The exhaust gas sensor circuit is open or shorted. (An abnormally high or low output voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Exhaust gas sensor</li> <li>● Fuel pressure</li> <li>● Injectors</li> <li>● Intake air leaks</li> </ul>
53	Exhaust gas sensor circuit (Right side)		
34	Detonation sensor circuit	<ul style="list-style-type: none"> <li>● The detonation circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Detonation sensor</li> </ul>
35	Exhaust gas temperature sensor circuit	<ul style="list-style-type: none"> <li>● The exhaust gas temperature sensor circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Exhaust gas temperature sensor</li> </ul>
42	Fuel temperature sensor circuit	<ul style="list-style-type: none"> <li>● The fuel temperature sensor circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Fuel temperature sensor</li> </ul>
43	Throttle sensor circuit	<ul style="list-style-type: none"> <li>● The throttle sensor circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Throttle sensor</li> </ul>
45	Injector leak	<ul style="list-style-type: none"> <li>● Fuel leaks from injector.</li> </ul>	<ul style="list-style-type: none"> <li>● Injector</li> </ul>
51	Injector circuit	<ul style="list-style-type: none"> <li>● The injector circuit is open.</li> </ul>	<ul style="list-style-type: none"> <li>● Injector</li> </ul>


\*: Check items causing a malfunction of crank angle sensor circuit first, if both code No. 11 and 21 come out at the same time.

## TROUBLE DIAGNOSES

### Self-diagnosis — Mode II (Self-diagnostic results) (Cont'd)

#### RETENTION OF DIAGNOSTIC RESULTS

The diagnostic results will remain in E.C.U. memory until the starter is operated fifty times after a diagnostic item has been judged to be malfunctioning. The diagnostic result will then be canceled automatically. If a diagnostic item which has been judged to be malfunctioning and stored in memory is again judged to be malfunctioning before the starter is operated fifty times, the second result will replace the previous one. It will be stored in E.C.U. memory until the starter is operated fifty times more.

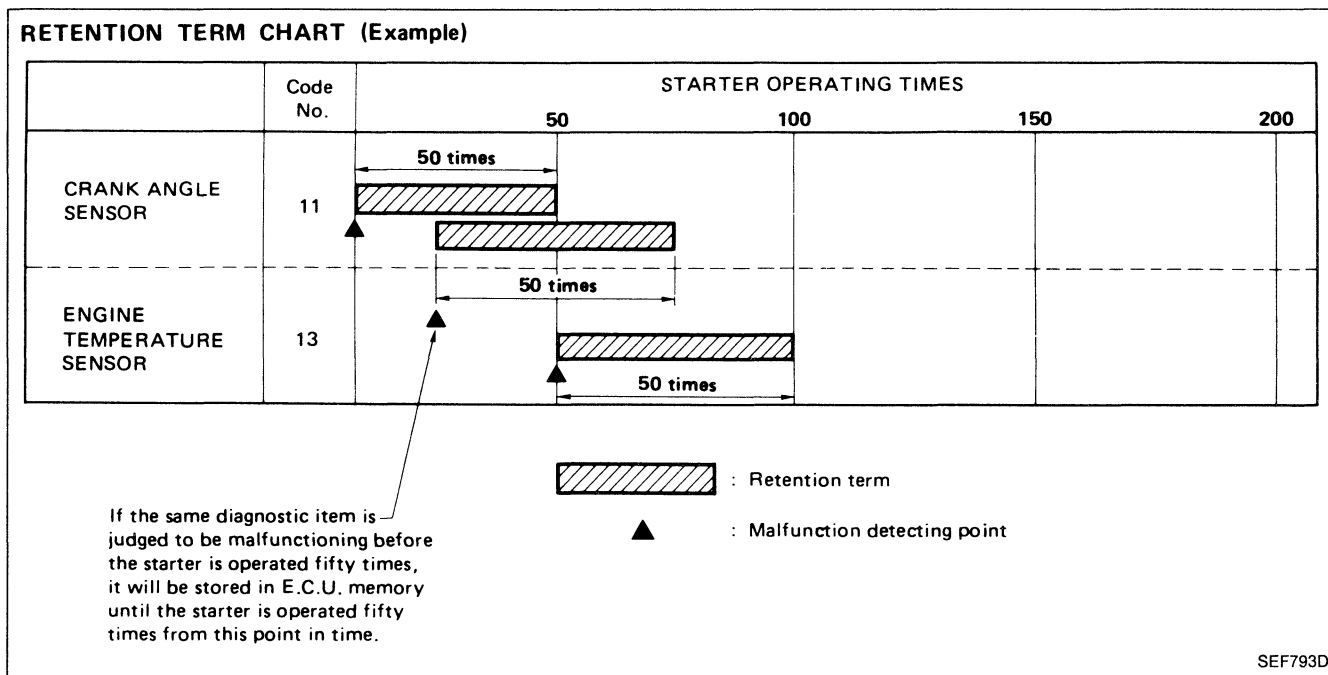

#### HOW TO ERASE SELF-DIAGNOSTIC RESULTS

The malfunction code is erased from the backup memory on the E.C.U. when the diagnostic mode is changed from Mode II to Mode I. (Refer to "HOW TO SWITCH MODES".)

- **When the battery terminal is disconnected, the malfunction code will be lost from the backup memory within 24 hours.**
- **Before starting self-diagnosis, do not erase the stored memory before beginning self-diagnosis.**



## TROUBLE DIAGNOSES

### Self-diagnosis — Mode II (Exhaust gas sensor monitor)

#### DESCRIPTION

In this mode, the CHECK ENGINE LIGHT and RED L.E.D. display the condition of the fuel mixture (lean or rich) which is monitored by the exhaust gas sensor.


CHECK ENGINE LIGHT and RED L.E.D.	Fuel mixture condition in the exhaust gas	Air fuel ratio feedback control condition
ON	Lean	Closed loop control
OFF	Rich	
*Remains ON or OFF	Any condition	Open loop control

\*: Maintains conditions just before switching to open loop.

#### HOW TO CHECK EXHAUST GAS SENSOR

1. Set Mode II. (Refer to "HOW TO SWITCH MODES".)
2. Start engine and warm it up until engine coolant temperature indicator points to the middle of the gauge.
3. Run engine at about 2,000 rpm for about 2 minutes under no-load conditions.
4. Make sure RED L.E.D. or CHECK ENGINE LIGHT goes ON and OFF more than 5 times every 10 seconds; measured at 2,000 rpm under no-load.


# TROUBLE DIAGNOSES

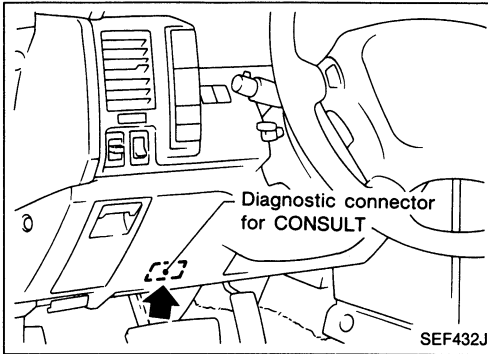


## Consult

### CONSULT INSPECTION PROCEDURE


1. Turn off ignition switch.
2. Connect "CONSULT" to diagnostic connector.  
(Diagnostic connector is located in lower side instrument panel.)

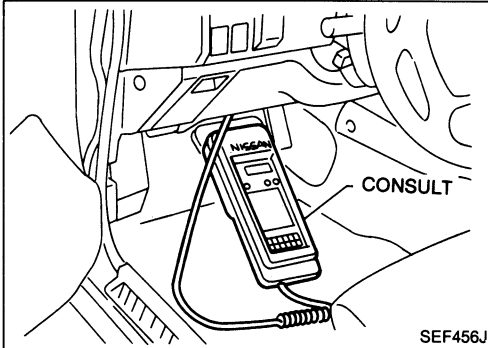

3. Turn on ignition switch.
4. Touch "START".

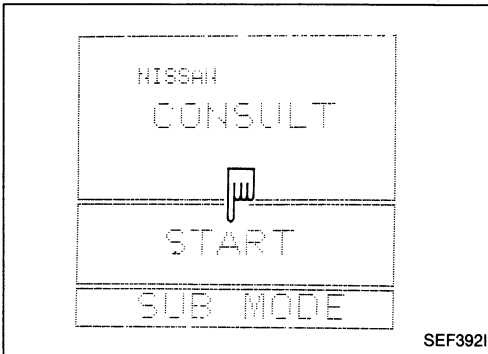


5. Touch "ENGINE".

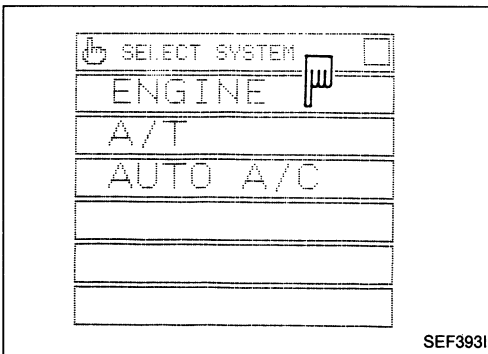

6. Perform each diagnostic mode according to the inspection sheet as follows:

**For further information, see the CONSULT Operation Manual.**

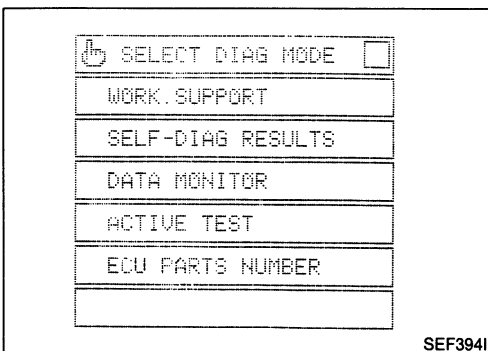

# TROUBLE DIAGNOSES

## Consult (Cont'd)

### E.C.C.S. COMPONENT PARTS APPLICATION

MODE	WORK SUPPORT	SELF- DIAGNOSTIC RE- SULTS	DATA MONITOR	ACTIVE TEST	
E.C.C.S. COMPONENT PARTS					
<b>INPUT</b>	Crank angle sensor		X	X	
	Air flow meter		X	X	
	Engine temperature sensor		X	X	X
	Exhaust gas sensors		X	X	
	Vehicle speed sensors		X	X	
	Throttle sensor	X	X	X	
	Fuel temperature sensor		X	X	
	Exhaust gas temperature sensor*		X	X	
	Detonation sensor		X		
	Ignition switch (start signal)			X	
	Air conditioner switch			X	
	Neutral switch			X	
	Battery			X	
	<b>OUT- PUT</b>	Injectors		X	X
Power transistor (ignition signal)			X	X (Ignition timing)	X
A.A.C. valve		X		X	X
Pressure regulator control solenoid valve				X	X
E.G.R. control solenoid valve				X	X
Air conditioner relay				X	
Fuel pump			X		

\*: The E.C.C.S. component part marked \* is applicable to vehicles for California only.

X: Applicable

### FUNCTION

Diagnostic mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT unit.
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the control unit can be read.
Active test	Mode in which CONSULT drives some actuators apart from the control units and also shifts some parameters in a specified range.
E.C.U. part numbers	E.C.U. part numbers can be read.

## TROUBLE DIAGNOSES

### Consult (Cont'd)

#### WORK SUPPORT MODE

WORK ITEM	CONDITION	USAGE
THROTTLE SENSOR ADJUSTMENT	CHECK THE THROTTLE SENSOR SIGNAL. ADJUST IT TO THE SPECIFIED VALUE BY ROTATING THE SENSOR BODY UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"><li>● IGN SW "ON"</li><li>● ENG NOT RUNNING</li><li>● ACC PEDAL NOT PRESSED</li></ul>	When adjusting throttle sensor initial position.
IGNITION TIMING ADJUSTMENT*	<ul style="list-style-type: none"><li>● IGNITION TIMING FEEDBACK CONTROL WILL BE HELD BY TOUCHING "START". AFTER DOING SO, ADJUST IGNITION TIMING WITH A TIMING LIGHT BY TURNING THE CRANK ANGLE SENSOR.</li></ul>	When adjusting initial ignition timing.
AAC VALVE ADJUSTMENT	SET ENGINE RPM AT THE SPECIFIED VALUE UNDER THE FOLLOWING CONDITIONS. <ul style="list-style-type: none"><li>● ENGINE WARMED UP</li><li>● NO-LOAD</li></ul>	When adjusting idle speed.

\*: The ignition timing feedback control is not adopted on model INFINITI M30, so it is not necessary to perform IGNITION TIMING ADJUSTMENT.

## TROUBLE DIAGNOSES

### Consult (Cont'd)

#### SELF-DIAGNOSTIC RESULTS MODE

DIAGNOSTIC ITEM	DIAGNOSTIC ITEM IS DETECTED WHEN ...	CHECK ITEM (REMEDY)
CRANK ANGLE SENSOR*	<ul style="list-style-type: none"> <li>● Either 1° or 120° signal is not entered for the first few seconds during engine cranking.</li> <li>● Either 1° or 120° signal is not input often enough while the engine speed is higher than the specified rpm.</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector (If harness and connector are normal, replace crank angle sensor.)</li> </ul>
AIR FLOW METER	<ul style="list-style-type: none"> <li>● The air flow meter circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector (If harness and connector are normal, replace air flow meter.)</li> </ul>
ENGINE TEMP SENSOR	<ul style="list-style-type: none"> <li>● The engine temperature sensor circuit is open or shorted. (An abnormally high or low output voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Engine temperature sensor</li> </ul>
CAR SPEED SENSOR	<ul style="list-style-type: none"> <li>● The vehicle speed sensor circuit is open or shorted.</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Vehicle speed sensor (reed switch)</li> </ul>
IGN SIGNAL-PRIMARY*	<ul style="list-style-type: none"> <li>● The ignition signal in primary circuit is not entered during engine cranking or running.</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Power transistor unit</li> </ul>
FUEL PUMP	<ul style="list-style-type: none"> <li>● Abnormally high or low current supply to the fuel pump persists.</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Fuel pump</li> <li>● Fuel pump relay</li> </ul>
CONTROL UNIT	<ul style="list-style-type: none"> <li>● E.C.U. calculation function is malfunctioning.</li> </ul>	(Replace E.C.C.S. control unit.)
EGR SYSTEM**	<ul style="list-style-type: none"> <li>● E.G.R. control valve does not operate. (E.G.R. control valve spring does not lift.)</li> </ul>	<ul style="list-style-type: none"> <li>● E.G.R. control valve</li> <li>● E.G.R. control solenoid valve</li> </ul>
EXH GAS SENSOR	<ul style="list-style-type: none"> <li>● The exhaust gas sensor circuit is open or shorted. (An abnormally high or low output voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Exhaust gas sensor</li> <li>● Fuel pressure</li> <li>● Injectors</li> <li>● Intake air leaks</li> </ul>
DETONATION SENSOR	<ul style="list-style-type: none"> <li>● The detonation circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Detonation sensor</li> </ul>
EXH GAS TEMP SENSOR**	<ul style="list-style-type: none"> <li>● The exhaust gas temperature sensor circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Exhaust gas temperature sensor</li> </ul>
FUEL TEMP SENSOR	<ul style="list-style-type: none"> <li>● The fuel temperature sensor circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Fuel temperature sensor</li> </ul>
THROTTLE SENSOR	<ul style="list-style-type: none"> <li>● The throttle sensor circuit is open or shorted. (An abnormally high or low voltage is entered.)</li> </ul>	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Throttle sensor</li> </ul>
INJECTOR LEAK**	<ul style="list-style-type: none"> <li>● Fuel leaks from injector.</li> </ul>	<ul style="list-style-type: none"> <li>● Injector</li> </ul>
INJECTOR OPEN**	<ul style="list-style-type: none"> <li>● The injector circuit is open.</li> </ul>	<ul style="list-style-type: none"> <li>● Injector</li> </ul>

\*: Check items causing a malfunction of crank angle sensor circuit first, if both "CRANK ANGLE SENSOR" and "IGN SIGNAL-PRIMARY" come out at the same time.

\*\* : The diagnostic item marked \*\* is applicable to vehicles for California only.

# TROUBLE DIAGNOSES

## Consult (Cont'd)

### DATA MONITOR MODE

MONITOR ITEM	CONDITION		SPECIFICATION	CHECK ITEM WHEN OUTSIDE SPEC.
CAS, RPM (POS)	<ul style="list-style-type: none"> <li>Tachometer: Connect</li> <li>Run engine and compare tachometer indication with the CONSULT value.</li> </ul>		Almost the same speed as the CONSULT value.	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Crank angle sensor</li> </ul>
CAS, RPM (REF)				
AIR FLOW MTR	<ul style="list-style-type: none"> <li>Engine: After warming up, idle the engine</li> <li>A/C switch "OFF"</li> <li>Shift lever "N"</li> </ul>	Idle	1.0 - 1.5V	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Air flow meter</li> </ul>
		2,000 rpm	1.4 - 1.9V	
ENG TEMP SEN	<ul style="list-style-type: none"> <li>Engine: After warming up</li> </ul>		More than 70°C (158°F)	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Engine temperature sensor</li> </ul>
EXH GAS SEN	<ul style="list-style-type: none"> <li>Engine: After warming up</li> </ul>	Maintaining engine speed at 2,000 rpm	0 ↔ Approx. 1.5V	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Exhaust gas sensor</li> <li>Intake air leaks</li> <li>Injectors</li> </ul>
M/R F/C MNT			LEAN ↔ RICH Changes more than 5 times during 10 seconds.	
CAR SPEED SEN	<ul style="list-style-type: none"> <li>Turn drive wheels and compare speedometer indication with the CONSULT value</li> </ul>		Almost the same speed as the CONSULT value	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Vehicle speed sensor</li> </ul>
BATTERY VOLT	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> </ul>		11 - 14V	<ul style="list-style-type: none"> <li>Battery</li> <li>E.C.U. power supply circuit</li> </ul>
THROTTLE SEN	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> </ul>	Throttle valve fully closed	0.4 - 0.5V	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Throttle sensor</li> <li>Throttle sensor adjustment</li> </ul>
		Throttle valve fully opened	Approx. 4.0V	
FUEL TEMP SEN	<ul style="list-style-type: none"> <li>Engine: After warming up</li> </ul>		20 - 60°C (68 - 140°F)	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Fuel temp. sensor</li> </ul>
EGR TEMP SEN*	<ul style="list-style-type: none"> <li>Engine: After warming up</li> </ul>		Less than 4.5V	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Exhaust gas temperature sensor</li> </ul>
START SIGNAL	<ul style="list-style-type: none"> <li>Ignition switch: ON → START</li> </ul>		OFF → ON	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Starter switch</li> </ul>
IDLE POSITION	<ul style="list-style-type: none"> <li>Ignition switch: ON (Engine stopped)</li> </ul>	Throttle valve: Idle position	ON	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Throttle sensor</li> <li>Throttle sensor adjustment</li> </ul>
		Throttle valve: Slightly open	OFF	
AIR COND SIG	<ul style="list-style-type: none"> <li>Engine: After warming up, idle the engine</li> </ul>	A/C switch "OFF"	OFF	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Air conditioner switch</li> </ul>
		A/C switch "ON"	ON	
NEUTRAL SW	<ul style="list-style-type: none"> <li>Ignition switch: ON</li> </ul>	Shift lever "P" or "N"	ON	<ul style="list-style-type: none"> <li>Harness and connector</li> <li>Neutral switch</li> </ul>
		Except above	OFF	

Remarks: The monitor item marked \* is applicable to vehicles for California only.  
Specifications are reference values.

## TROUBLE DIAGNOSES

### Consult (Cont'd)

MONITOR ITEM	CONDITION		SPECIFICATION	CHECK ITEM WHEN OUTSIDE SPEC.
INJ PULSE	<ul style="list-style-type: none"> <li>● Engine: After warming up</li> <li>● A/C switch "OFF"</li> <li>● Shift lever "N"</li> <li>● No-load</li> </ul>	Idle	3.1 - 3.8 msec.	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Injector</li> <li>● Air flow meter</li> <li>● Intake air system</li> </ul>
		2,000 rpm	2.9 - 3.6 msec.	
IGN TIMING	ditto	Idle	15° B.T.D.C.	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Crank angle sensor</li> </ul>
		2,000 rpm	More than 25° B.T.D.C.	
AAC VALVE	ditto	Idle	15 - 40%	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● A.A.C. valve</li> </ul>
		2,000 rpm	—	
AIR COND RLY	<ul style="list-style-type: none"> <li>● Air conditioner switch OFF → ON</li> </ul>		OFF → ON	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Air conditioner switch</li> <li>● Air conditioner relay</li> </ul>
PRVR CONT SOL VALVE	<ul style="list-style-type: none"> <li>● Fuel temperature is above 75°C (167°F)</li> </ul>	For 3 minutes after starting engine	ON	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Pressure regulator control solenoid valve</li> <li>● Fuel temperature sensor</li> </ul>
		3 minutes after starting engine	OFF	
EGR CONT S/V	<ul style="list-style-type: none"> <li>● Engine: After warming up</li> <li>● A/C switch "OFF"</li> <li>● Shift lever "N"</li> <li>● No-load</li> </ul>	Idle	ON	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● E.G.R. control solenoid valve</li> </ul>
		2,000 rpm	OFF	

Remarks: Specifications are reference values.

## TROUBLE DIAGNOSES






### Consult (Cont'd)

#### ACTIVE TEST MODE

TEST ITEM	CONDITION	JUDGEMENT	CHECK ITEM (REMEDY)
FUEL INJECTION TEST	<ul style="list-style-type: none"> <li>● Engine: Return to the original trouble condition</li> <li>● Change the amount of fuel injection with the CONSULT.</li> </ul>	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Fuel injectors</li> <li>● Exhaust gas sensor</li> </ul>
AAC/V OPENING TEST	<ul style="list-style-type: none"> <li>● Engine: After warming up, idle the engine.</li> <li>● Change the AAC valve opening percent with the CONSULT.</li> </ul>	Engine speed changes according to the opening percent.	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● AAC valve</li> </ul>
ENGINE TEMP TEST	<ul style="list-style-type: none"> <li>● Engine: Return to the original trouble condition</li> <li>● Change the engine coolant temperature with the CONSULT.</li> </ul>	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Engine temperature sensor</li> <li>● Fuel injectors</li> </ul>
IGN TIMING TEST	<ul style="list-style-type: none"> <li>● Engine: Return to the original trouble condition</li> <li>● Timing light: Set</li> <li>● Retard the ignition timing with the CONSULT.</li> </ul>	If trouble symptom disappears, see CHECK ITEM.	<ul style="list-style-type: none"> <li>● Adjust initial ignition timing</li> </ul>
POWER BALANCE TEST	<ul style="list-style-type: none"> <li>● Engine: After warming up, idle the engine.</li> <li>● A/C switch "OFF"</li> <li>● Shift lever "N"</li> <li>● Cut off each injector signal one at a time with the CONSULT.</li> </ul>	Engine runs rough or dies.	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Compression</li> <li>● Injectors</li> <li>● Power transistor</li> <li>● Spark plugs</li> <li>● Ignition coils</li> </ul>
EGR CONT SOL/V TEST	<ul style="list-style-type: none"> <li>● Ignition switch: ON</li> <li>● Turn solenoid valve "ON" and "OFF" with the CONSULT and listen to operating sound.</li> </ul>	Each solenoid valve makes an operating sound.	<ul style="list-style-type: none"> <li>● Harness and connector</li> <li>● Solenoid valve</li> </ul>
PRVR CONT SOL/V TEST			
SELF-LEARN CONT TEST	<ul style="list-style-type: none"> <li>● In this test, the coefficient of self-learning control mixture ratio returns to the original coefficient by touching "CLEAR" on the screen.</li> </ul>		



# TROUBLE DIAGNOSES

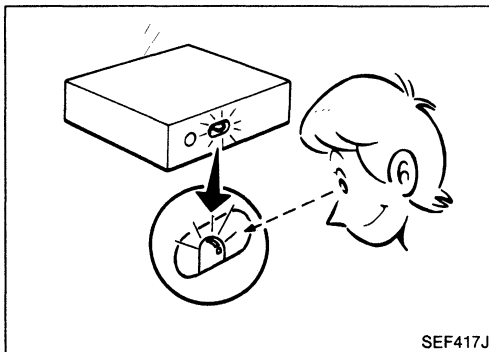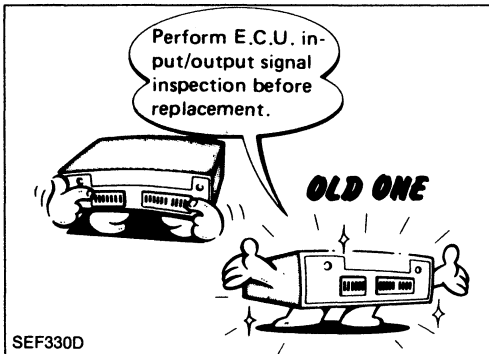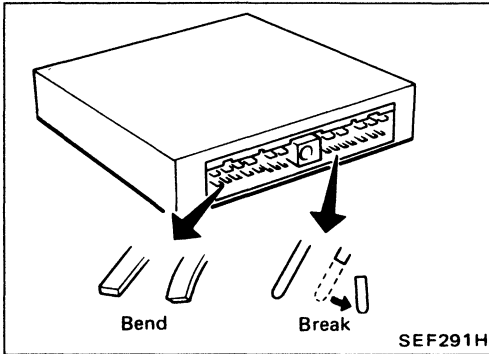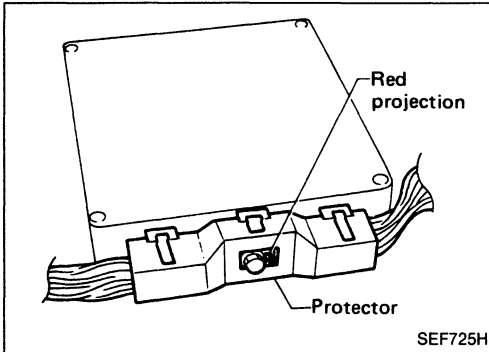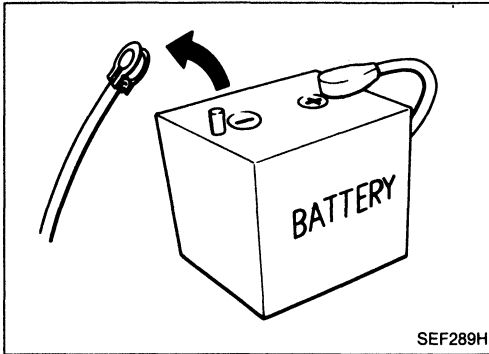


## Diagnostic Procedure

### CAUTION:

1. Before connecting or disconnecting the E.C.U. harness connector to or from any E.C.U., be sure to turn the ignition switch to the "OFF" position and disconnect the negative battery terminal in order not to damage E.C.U. as battery voltage is applied to E.C.U. even if ignition switch is turned off. Failure to do so may damage the E.C.U.
2. When connecting E.C.U. harness connector, tighten securing bolt until red projection is in line with connector face.
3. When connecting or disconnecting pin connectors into or from E.C.U., take care not to damage pin terminals (bend or break).
4. Make sure that there are not any bends or breaks on E.C.U. pin terminal, when connecting pin connectors.
5. Before replacing E.C.U., perform E.C.U. input/output signal inspection and make sure whether E.C.U. functions properly or not. (See page EF & EC-166.)
6. After performing this "Diagnostic Procedure", perform E.C.C.S. self-diagnosis and driving test.





## TROUBLE DIAGNOSES

### Diagnostic Procedure (Cont'd)

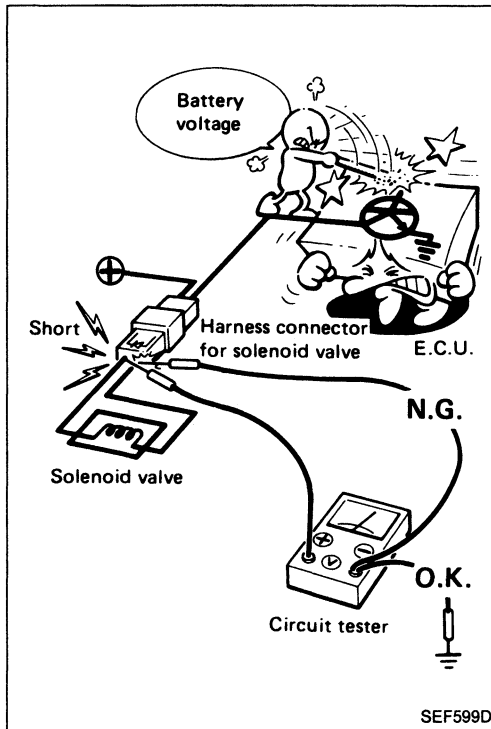

7. When measuring E.C.U. controlled components supply voltage with a circuit tester, separate one tester probe from the other.  
If the two tester probes accidentally make contact with each other during measurement, the circuit will be shorted, resulting in damage to the control unit power transistor.

# TROUBLE DIAGNOSES

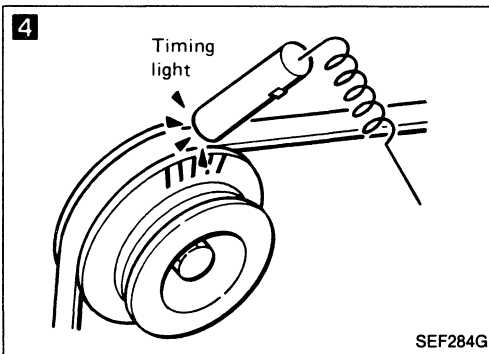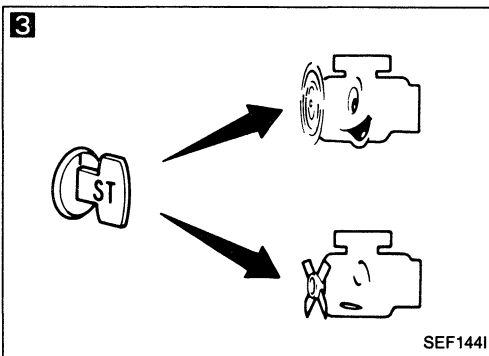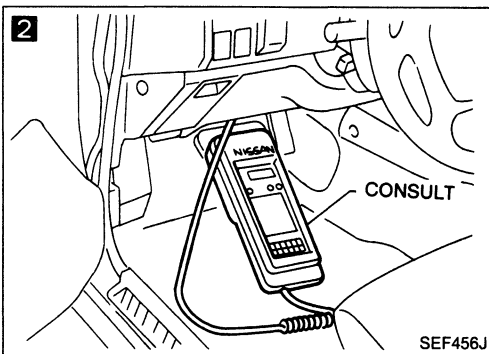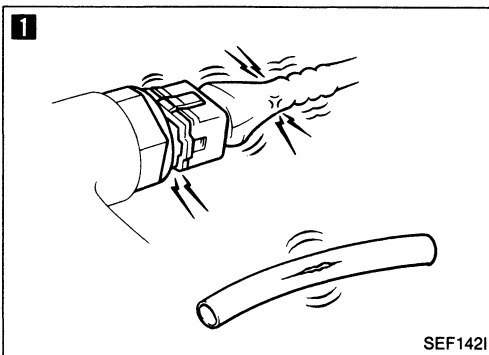

## Basic Inspection

1

### BEFORE STARTING

1. Check service records for any recent repairs that may indicate a related problem, or the current need for scheduled maintenance.
2. Open engine hood and check the following:
  - Harness connectors for proper connections
  - Vacuum hoses for splits, kinks, and proper connections
  - Wiring for proper connections, pinches, and cuts

2

### CONNECT CONSULT TO THE VEHICLE

Connect "CONSULT" to the diagnostic connector and select "ENGINE" from the menu. (Refer to page EF & EC-46.)

3

### DOES ENGINE START?

No

Go to 6.

Yes

4

### CHECK IGNITION TIMING.

Warm up engine sufficiently and check ignition timing at idle using timing light. (Refer to page EF & EC-27.)

#### Ignition timing:

$15^{\circ} \pm 2^{\circ}$  B.T.D.C.

N.G.





Adjust ignition timing by turning crank angle sensor.

O.K.

(Go to A on next page.)

# TROUBLE DIAGNOSES

## Basic Inspection (Cont'd)

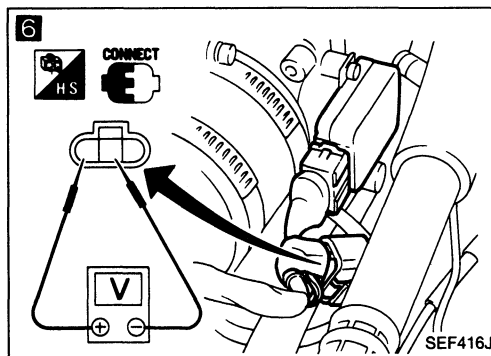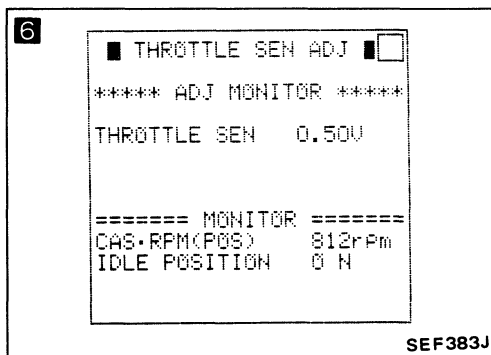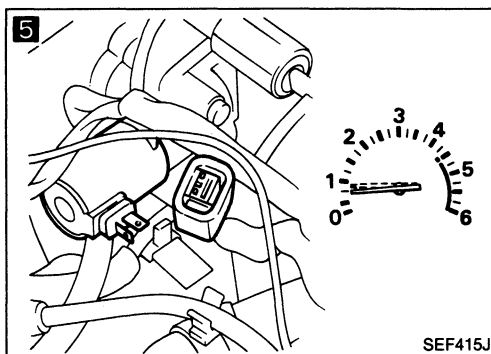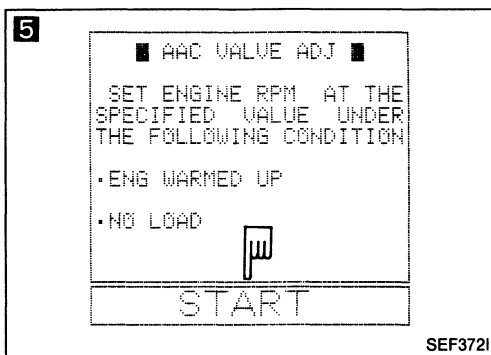

**5**

**CHECK IDLE ADJ. SCREW INITIAL SET RPM.**

**1.** Select "A.A.C. VALVE ADJ" in "WORK SUPPORT" mode.

**2.** When touching "START", does engine rpm fall to  $700 \pm 50$  rpm (in "N" position)?

OR

**When disconnecting A.A.C. valve harness connector, does engine rpm fall to  $700 \pm 50$  rpm (in "N" position)?**

No → Adjust engine rpm by turning idle adjusting screw.

Yes

**6**

**CHECK THROTTLE SENSOR IDLE POSITION.**

**1.** Perform "THROTTLE SEN. ADJ" in "WORK SUPPORT" mode.

**2.** Check that output voltage of throttle sensor is 0.4 to 0.5V. (Throttle valve fully closes.) and "IDLE POSITION" stays "ON".

OR

**Measure output voltage of throttle sensor using voltmeter, and check that it is 0.4 to 0.5V. (Throttle valve fully closed.)**





N.G. →

1. Adjust output voltage by rotating throttle sensor body.
2. Disconnect throttle sensor harness connector for a few seconds and then reconnect it.
3. Confirm that "IDLE POSITION" stays "ON".

O.K.  
↓  
(Go to **B** on next page)

# TROUBLE DIAGNOSES

## Basic Inspection (Cont'd)

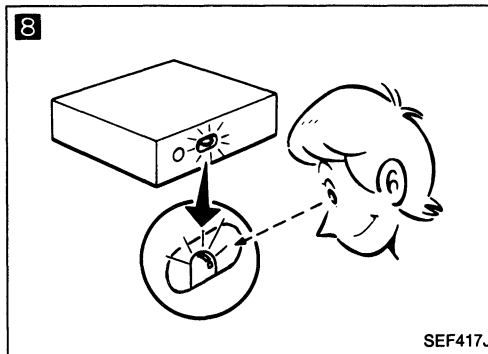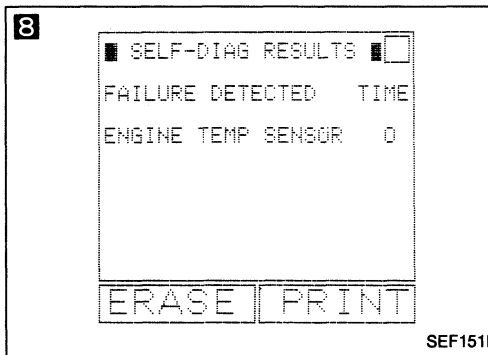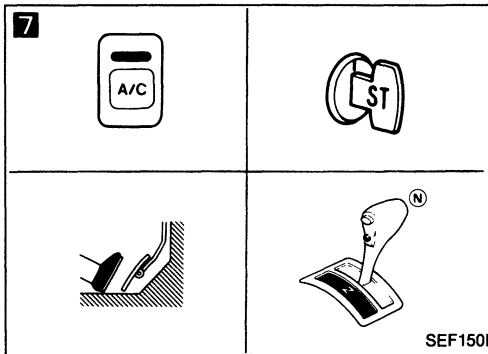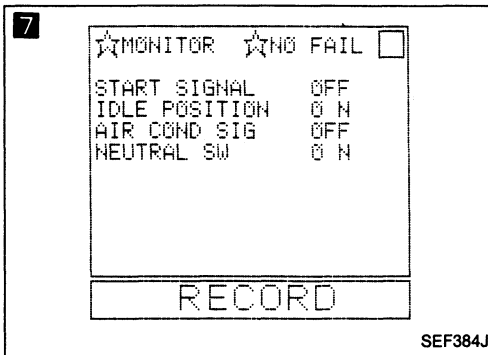

**7**

**CHECK SWITCH INPUT SIGNAL.**

Select the following switches in "DATA MONITOR" mode,

- Start signal,
- Idle position,
- Air conditioner signal,
- Neutral (Parking) switch,

and check the switches' ON-OFF operation.

N.G. → Repair or replace the malfunctioning switch or its circuit.

OR

Remove E.C.U. from right dash side panel and check the above switches' ON-OFF operation using voltmeter at each E.C.U. terminal.

Switch	Condition	Voltage (V)
Start signal	IGN ON → IGN START	0 → Battery voltage
Idle position	Idle position → depress the accelerator pedal (Ignition switch "ON")	8.0 - 9.0 → 0
A/C signal	A/C OFF → A/C ON (Engine running)	Battery voltage → 0.5 - 0.7
Neutral (Parking) switch	Shift lever is "N" or "P" position → Except "N" and "P"	0 → 8.0 - 9.0

O.K.

**8**

**READ SELF-DIAGNOSTIC RESULTS.**

- Perform "SELF-DIAG RESULTS" mode.
- Read out self-diagnostic results.
- Is a failure detected?

OR


- Set "Self-diagnostic results mode" in Mode II. (Refer to page EF & EC-40.)
- Count the number of RED L.E.D. flashes and read out the codes.
- Are the codes being output?

Yes → Go to the relevant inspection procedure.

No → INSPECTION END

# TROUBLE DIAGNOSES


## Diagnostic Procedure 1 — High Idling after Warm-up

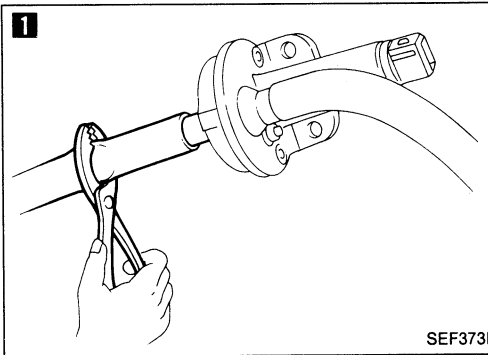

**1**  
**CHECK AIR REGULATOR.**  
When pinching the air regulator hose, does the engine speed drop?

Yes → Check air regulator and circuit.

No

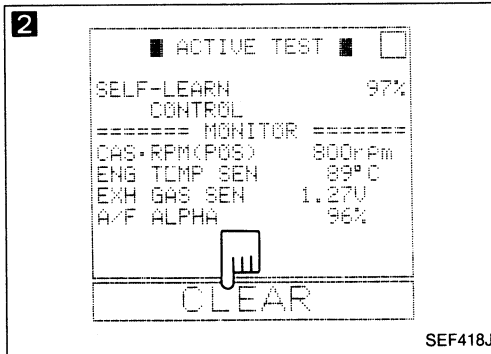

**2**  
**CHECK INTAKE AIR LEAK.**

1. Select "SELF-LEARNING CONT" in "ACTIVE TEST" mode.
2. Clear the self-learning control coefficient by touching "CLEAR".
3. Does the engine speed drop?


Yes → Discover air leak location and repair.



OR

1. Disconnect exhaust gas sensor harness connector.
2. After racing engine at 1,500 rpm under no load for about 30 seconds, does the engine speed drop?

No

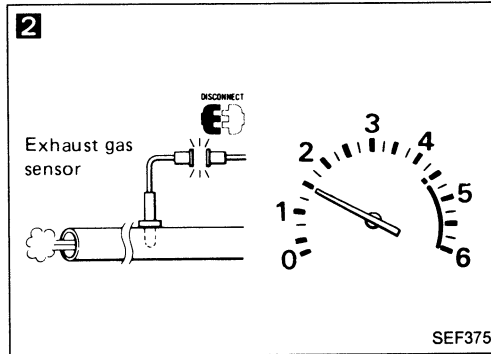


**3**  
**CHECK THROTTLE LINKAGE.**

1. Check that throttle linkage moves smoothly.
2. Confirm that throttle valve both fully opens and fully closes.

N.G. → Repair throttle linkage or sticking of throttle valve.






O.K.

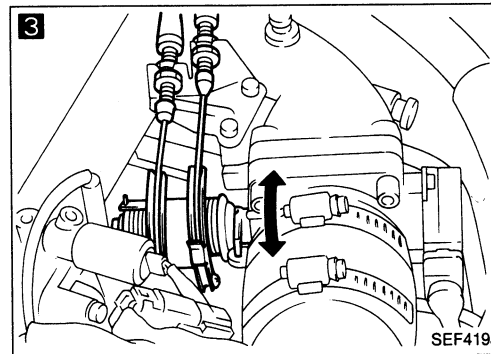

INSPECTION END


# TROUBLE DIAGNOSES

## Diagnostic Procedure 2 — Hunting

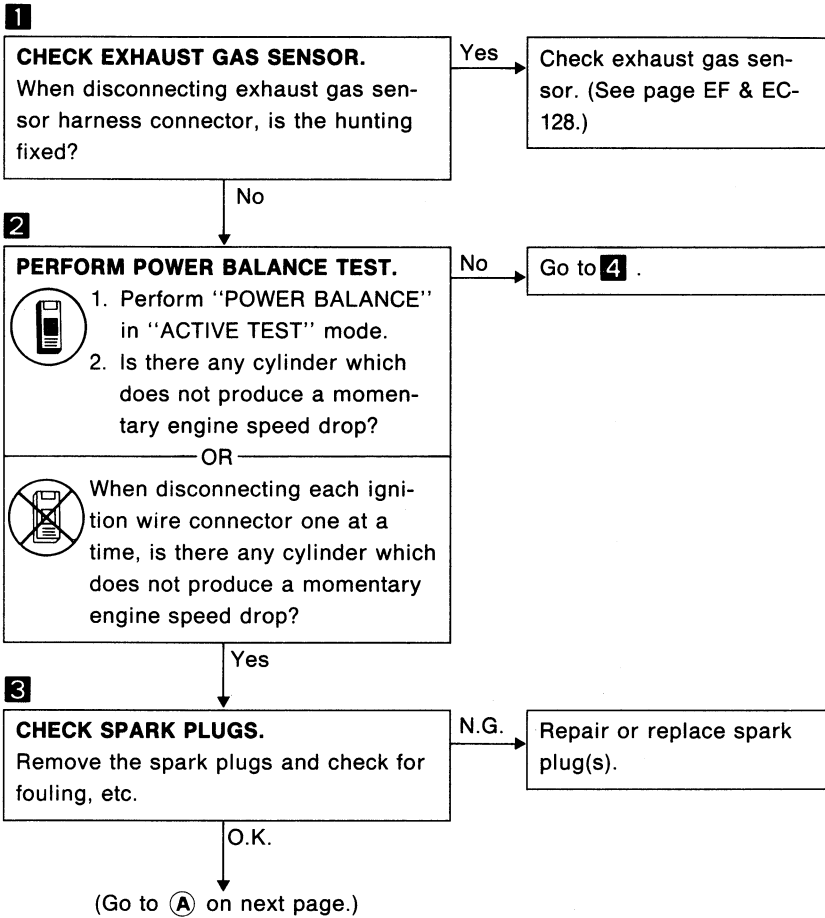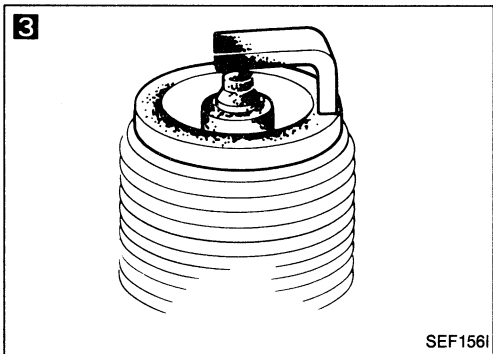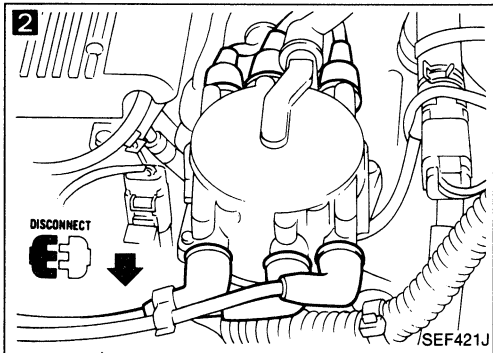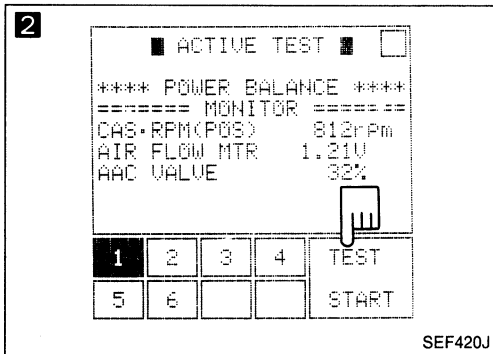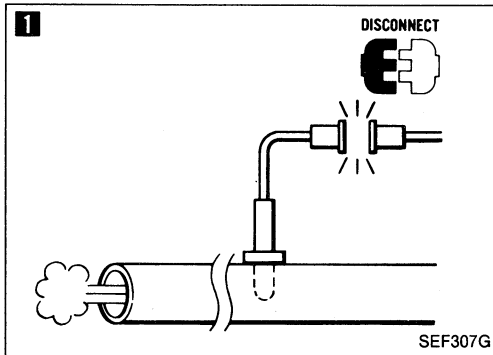

# TROUBLE DIAGNOSES

## Diagnostic Procedure 2 — Hunting (Cont'd)

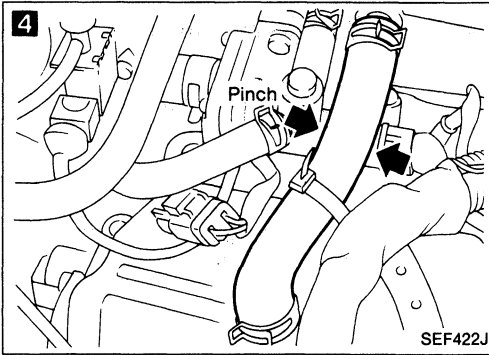

**4**

**CHECK FOR INTAKE AIR LEAK.**  
When pinching blow-by hose (lowering the blow-by air supply), does the engine speed rise?

Yes → Discover air leak location and repair.

No


**5**

**CHECK E.G.R. CONTROL VALVE.**  
Check E.G.R. control valve for sticking.

N.G. → Repair or replace.

O.K.







INSPECTION END

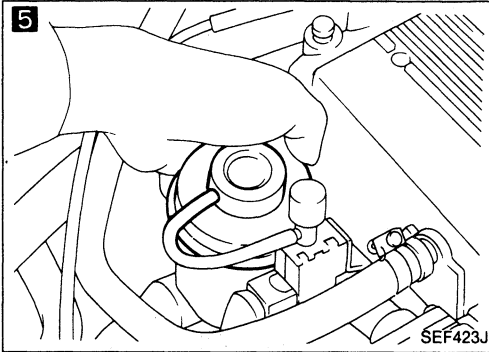




# TROUBLE DIAGNOSES

## Diagnostic Procedure 3 — Unstable Idle

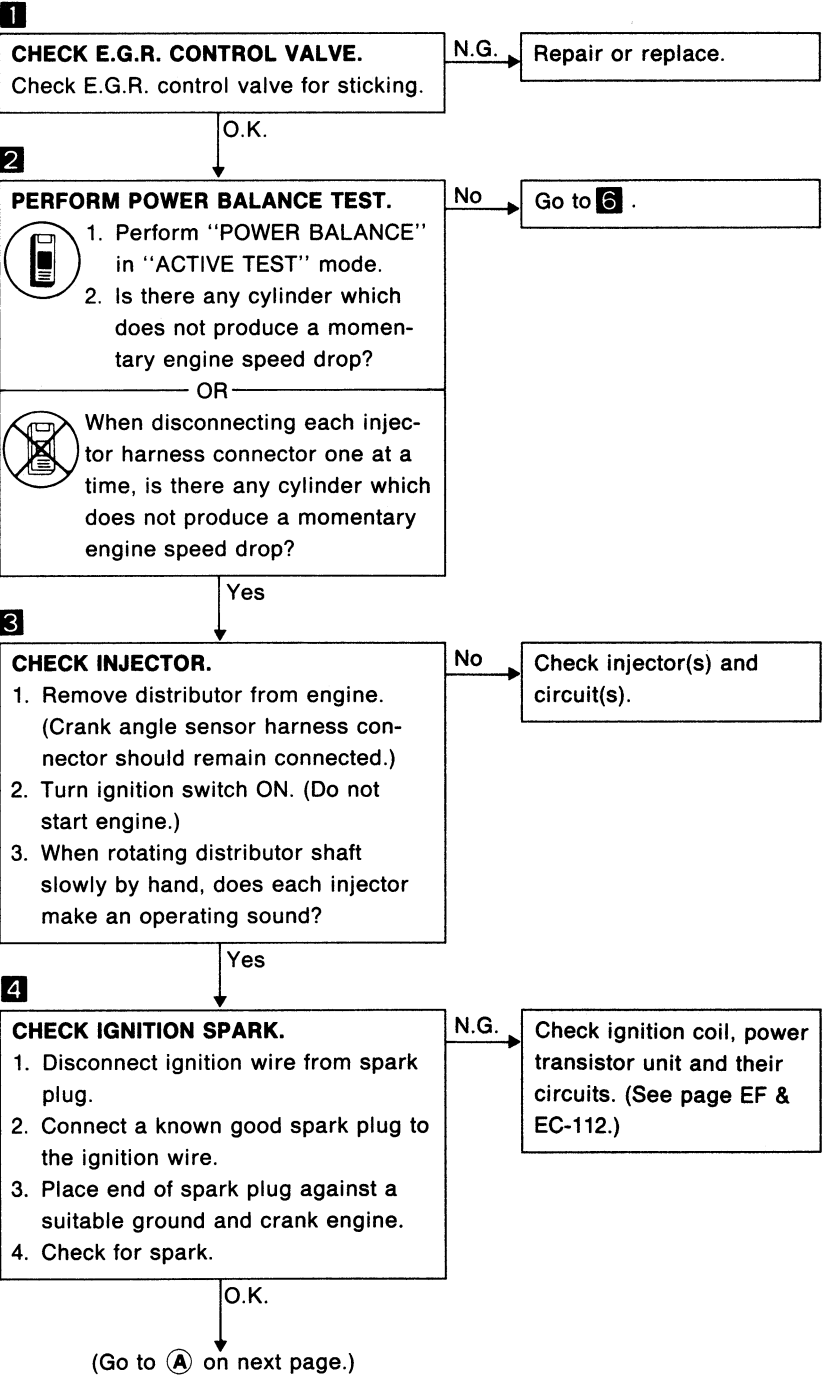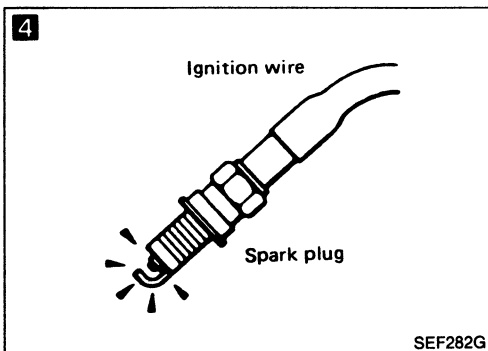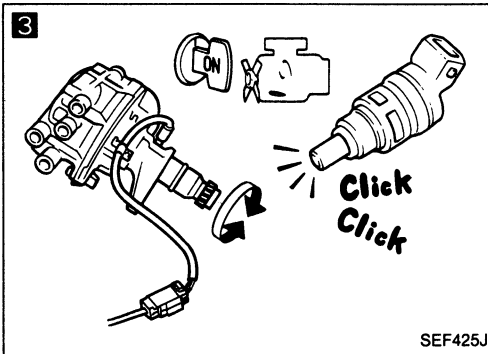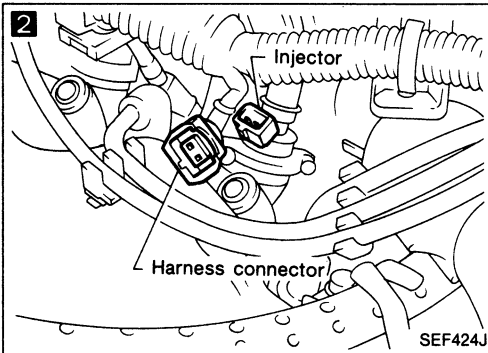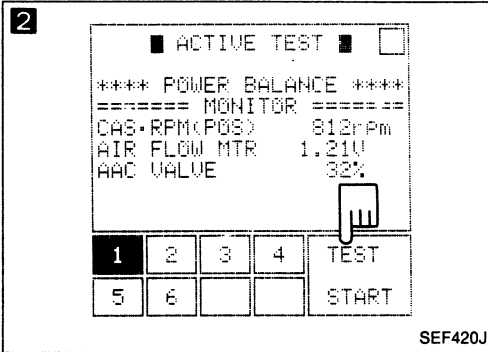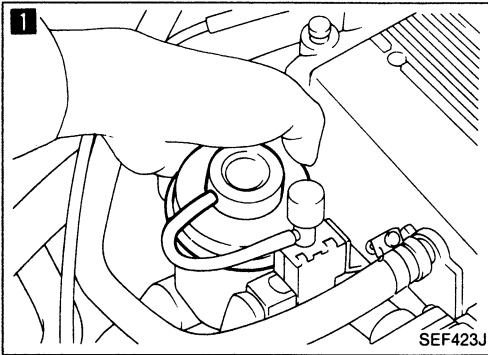

# TROUBLE DIAGNOSES

## Diagnostic Procedure 3 — Unstable Idle (Cont'd)

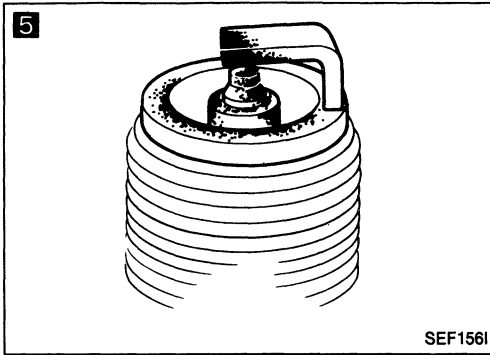


**5**

**CHECK SPARK PLUGS.**  
Remove the spark plugs and check for fouling, etc.

N.G. → Repair or replace spark plug(s).

O.K. ↓

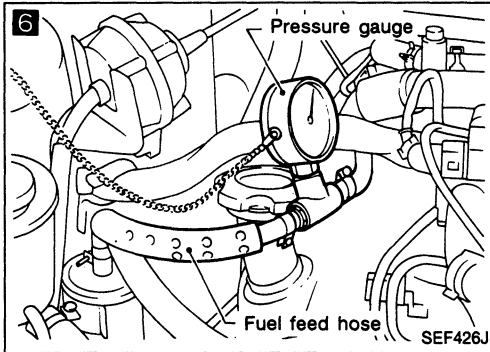

**6**

**CHECK FUEL PRESSURE.**  
1. Release fuel pressure to zero. (Refer to page EF & EC-183.)  
2. Install fuel pressure gauge and check fuel pressure.  
**At idle:**  
**Approx. 235 kPa (2.4 kg/cm<sup>2</sup>, 34 psi)**

N.G. → Check fuel pump and circuit.

O.K. ↓



**7**

**CHECK EXHAUST GAS SENSOR.**

1. See "M/R F/C MNT" in "Data monitor" mode.

2. Maintaining engine at 2,000 rpm under no-load (engine is warmed up sufficiently), check that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds.


**RICH → LEAN → RICH →**  
**1 time 2 times**

**LEAN → RICH.....**

OR

N.G. → Replace exhaust gas sensor.

OR

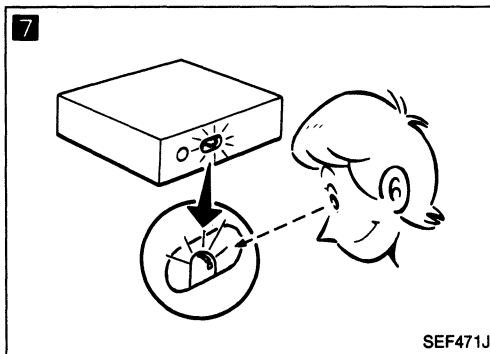

1. Set "Exhaust gas sensor monitor" in the self-diagnostic Mode II. (See page EF & EC-40.)


2. Maintaining engine at 2,000 rpm under no-load, check to make sure that RED L.E.D. on the E.C.U. goes ON and OFF more than 5 times during 10 seconds.

O.K. ↓

(Go to **B** on next page)

# TROUBLE DIAGNOSES

## Diagnostic Procedure 3 — Unstable Idle (Cont'd)

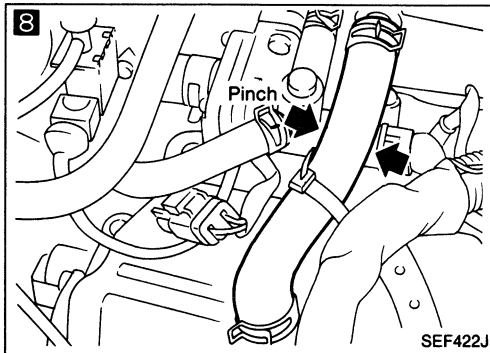

**8**

**CHECK FOR INTAKE AIR LEAK.**  
When pinching blow-by hose (lowering the blow-by air supply), does the engine speed rise?

Yes → Discover air leak location and repair.

No →

**9**


**CHECK IDLE ADJ. SCREW CLOGGING.**

1. Perform "AAC VALVE ADJ" in "WORK SUPPORT" mode.  
2. Can you set engine rpm at  $700 \pm 50$  rpm (in "N" position) by turning idle adjusting screw?

No → Check for IAS clogging or throttle valve clogging.

OR

1. Disconnect A.A.C. valve harness connector.  
2. Can you set engine rpm at  $700 \pm 50$  rpm (in "N" position) by turning idle adjusting screw?

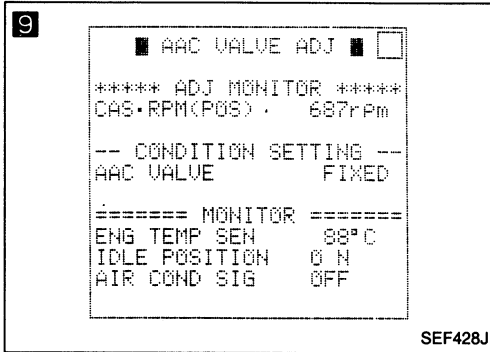

Yes →

**10**

**CHECK COMPRESSION PRESSURE.**


- Check compression pressure.

**Standard: kPa (kg/cm<sup>2</sup>, psi)/300 rpm**  
1,196 (12.2, 173)

**Minimum: kPa (kg/cm<sup>2</sup>, psi)/300 rpm**  
883 (9.0, 128)

**Difference between each cylinder:**  
kPa (kg/cm<sup>2</sup>, psi)/300 rpm  
98 (1.0, 14)

N.G. → Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

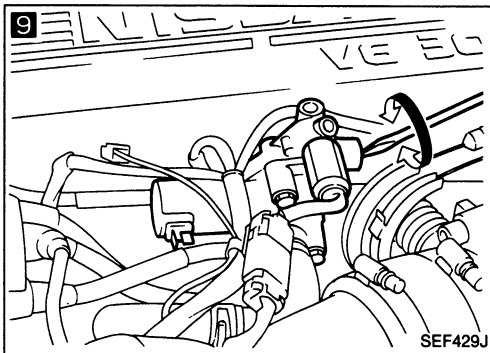

O.K. →

**11**

**CHECK E.C.U. HARNESS CONNECTOR.**  
Check the E.C.U. pin terminals for damage or poor connection of E.C.U. harness connector.


N.G. → Repair or replace.

O.K. →

**12**


**TRY A KNOWN GOOD E.C.U.**

INSPECTION END

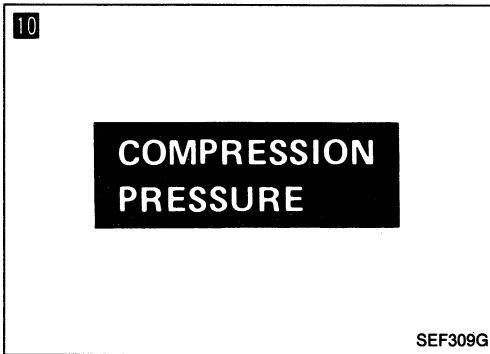

# TROUBLE DIAGNOSES


## Diagnostic Procedure 4 — Hard to Start or Impossible to Start when the Engine is Cold

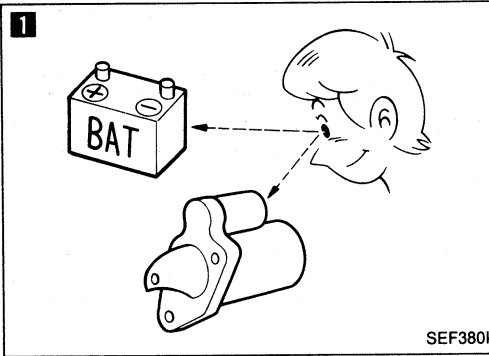

**1**  
**CHECK BATTERY AND STARTER.**  
Check battery and starter condition.  
(Refer to EL section.)

N.G. → Repair or replace.


O.K.

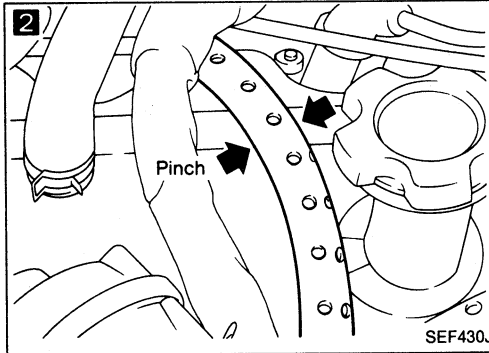

**2**  
**CHECK FUEL PRESSURE.**  
1. Pinch fuel feed hose with fingers.  
2. When cranking the engine, is there any pressure on the fuel feed hose?

No → Check fuel pump and circuit. (See page EF & EC-116.)


Yes

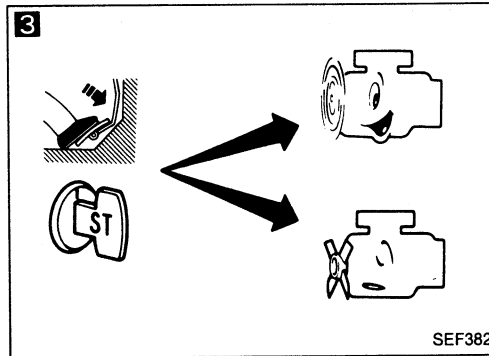

**3**  
**CHECK AIR REGULATOR AND A.A.C. VALVE.**  
When pressing accelerator pedal fully, can you start the engine.

Yes → Check A.A.C. valve, air regulator and circuits. (See pages EF & EC-158, 160.)

No

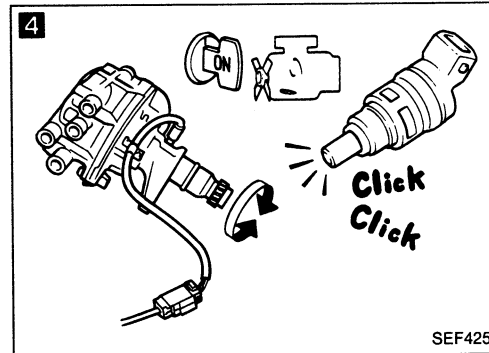

**4**  
**CHECK INJECTOR.**  
1. Remove distributor from engine. (Crank angle sensor harness connector should remain connected.)  
2. Turn ignition switch ON. (Do not start engine.)  
3. When rotating distributor shaft slowly by hand, does each injector make an operating sound?

No → Check injector(s) and circuit(s).


Yes

**5**  
**CHECK IGNITION SPARK.**  
1. Disconnect ignition wire from spark plug.  
2. Connect a known good spark plug to the ignition wire.  
3. Place end of spark plug against a suitable ground and crank engine.  
4. Check for spark.

N.G. → Check ignition coil, power transistor unit and their circuits. (See page EF & EC-112.)



O.K.

(Go to **A** on next page.)

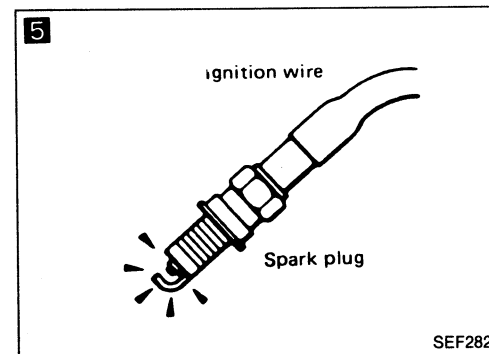


# TROUBLE DIAGNOSES

## Diagnostic Procedure 4 — Hard to Start or Impossible to Start when the Engine is Cold (Cont'd)

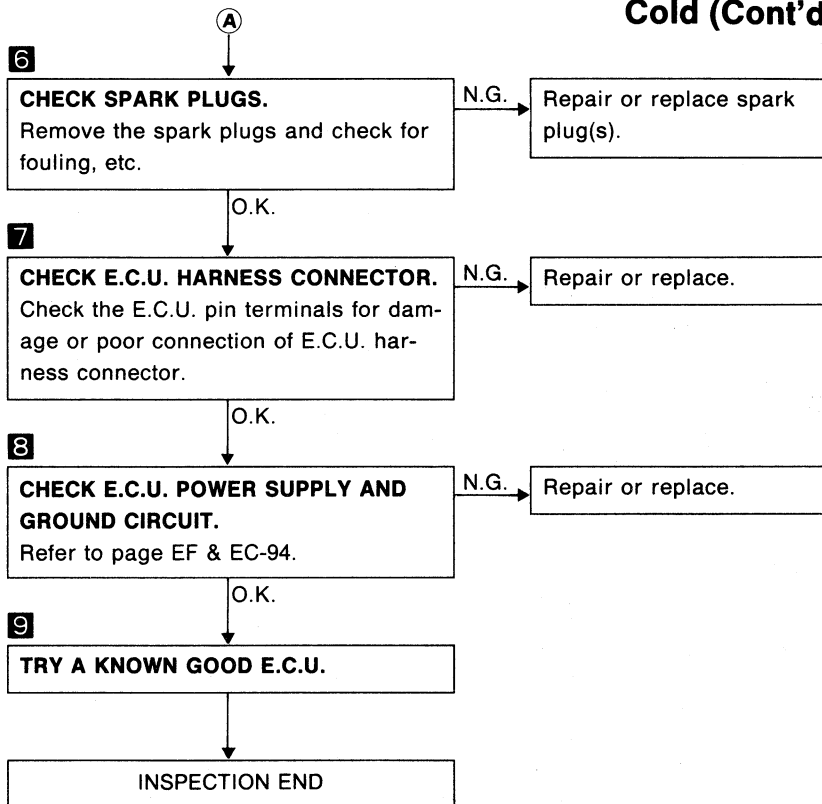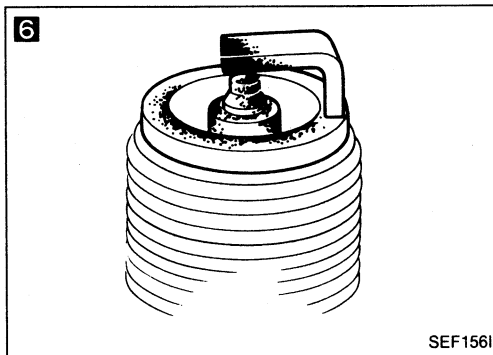

# TROUBLE DIAGNOSES


## Diagnostic Procedure 5 — Hard to Start or Impossible to Start when the Engine is Hot

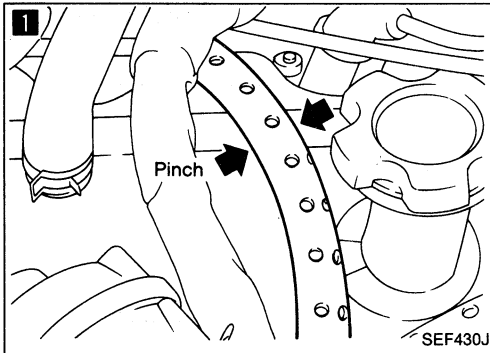

**1**  
**CHECK FUEL PRESSURE.**  
1. Pinch fuel feed hose with fingers.  
2. When cranking the engine, is there any pressure on the fuel feed hose?

No → Check fuel pump and circuit. (See page EF & EC-116.)

Yes →

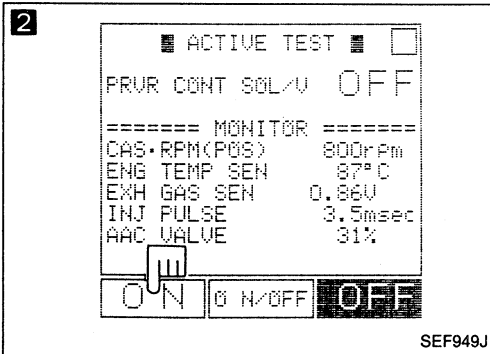


**2**  
**CHECK FUEL VAPOR.**  
1. Select "PRVR CONT SOL VALVE" in "ACTIVE TEST" mode.  
2. After touching "ON", can you start the engine?

Yes → Check fuel properties.

OR  
1. Disconnect fuel pressure regulator vacuum hose and plug hose.  
2. Can you start engine?


No →

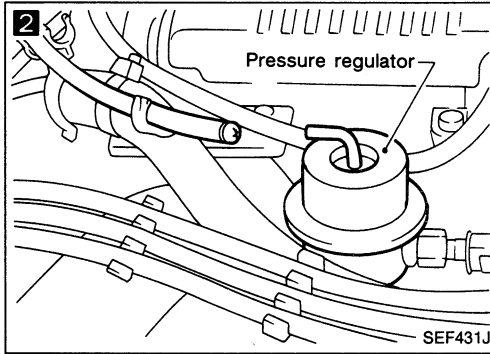

**3**  
**CHECK INJECTOR.**  
1. Remove distributor from engine. (Crank angle sensor harness connector should remain connected.)  
2. Turn ignition switch ON. (Do not start engine.)  
3. When rotating distributor shaft slowly by hand, does each injector make an operating sound?

No → Check injector(s) and circuit(s).

Yes →

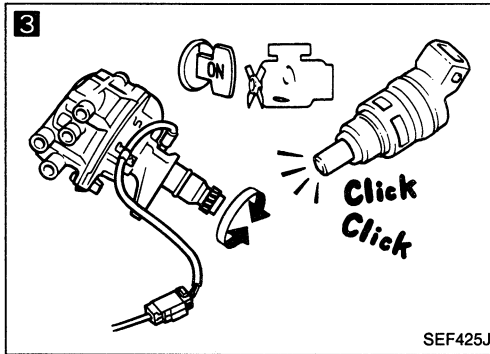


**4**  
**CHECK IGNITION SPARK.**  
1. Disconnect ignition wire from spark plug.  
2. Connect a known good spark plug to the ignition wire.  
3. Place end of spark plug against a suitable ground and crank engine.  
4. Check for spark.

N.G. → Check ignition coil, power transistor unit and circuits. (See page EF & EC-112.)


O.K. →

(Go to **A** on next page.)

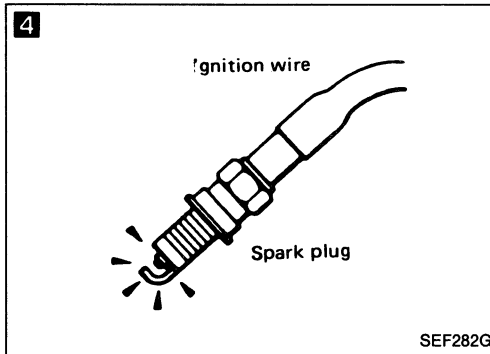


# TROUBLE DIAGNOSES

## Diagnostic Procedure 5 — Hard to Start or Impossible to Start when the Engine is Hot (Cont'd)

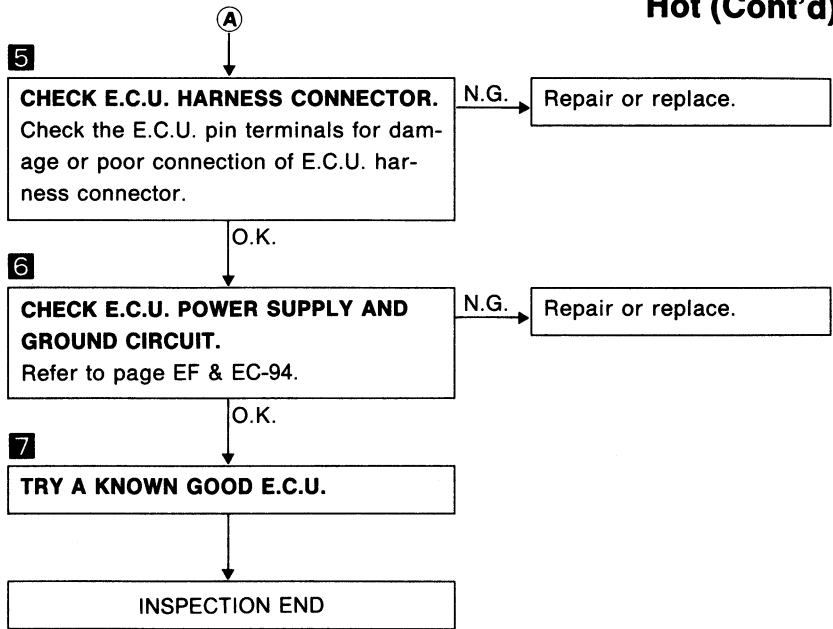


# TROUBLE DIAGNOSES


## Diagnostic Procedure 6 — Hard to Start or Impossible to Start under Normal Conditions

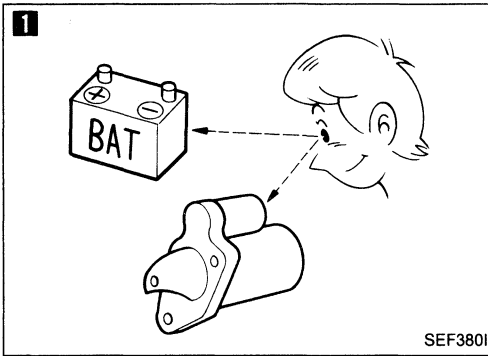


SEF380I

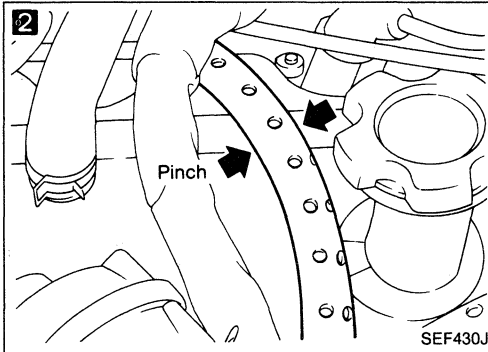


SEF430J

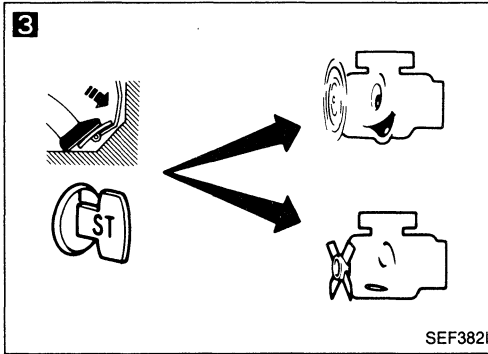


SEF382I

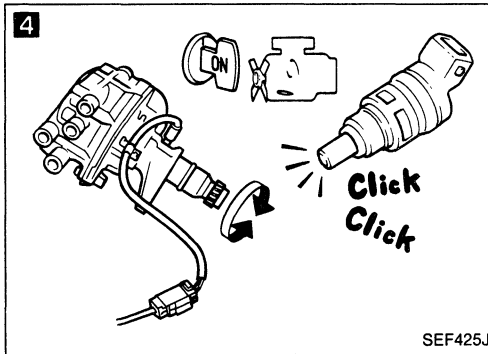

SEF425J

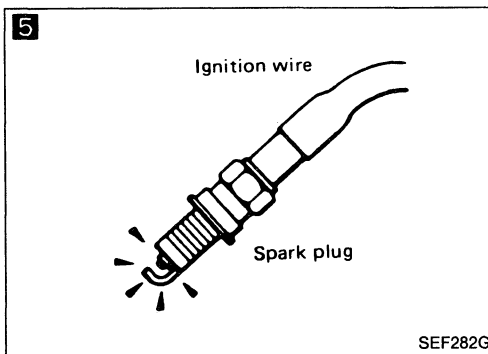




SEF282G

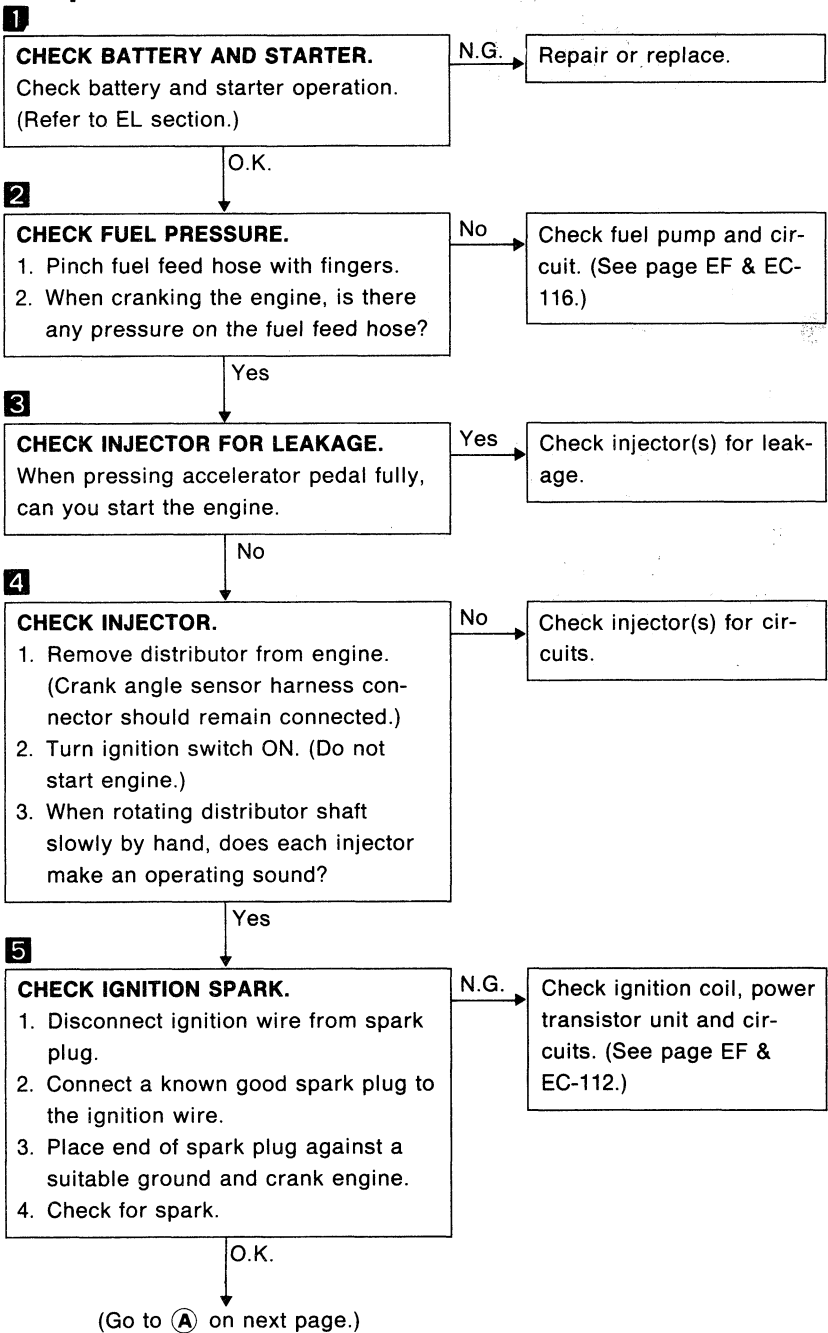







# TROUBLE DIAGNOSES

## Diagnostic Procedure 6 — Hard to Start or Impossible to Start under Normal Conditions (Cont'd)

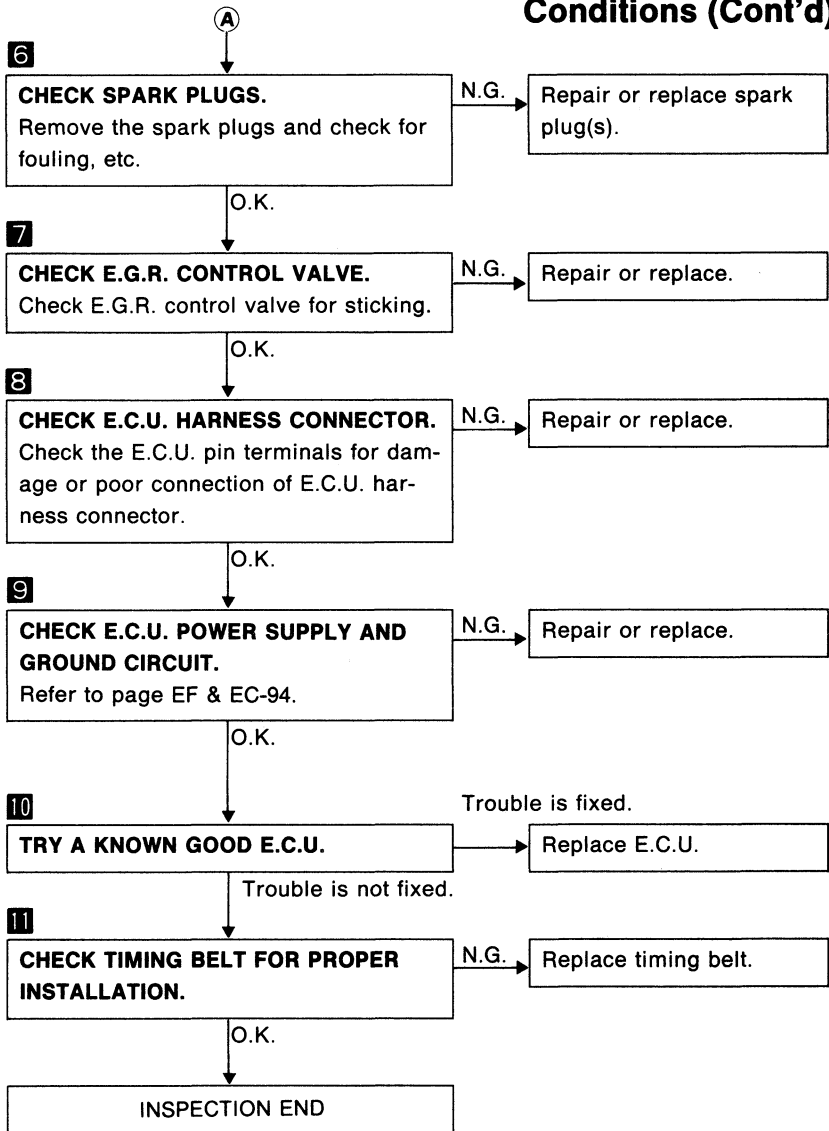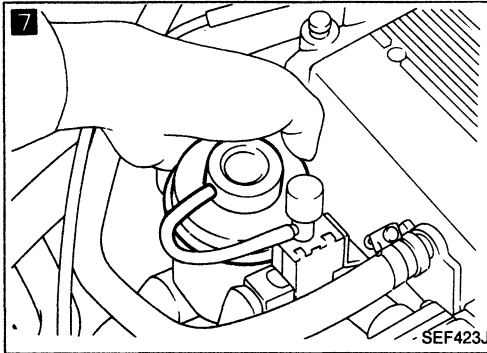
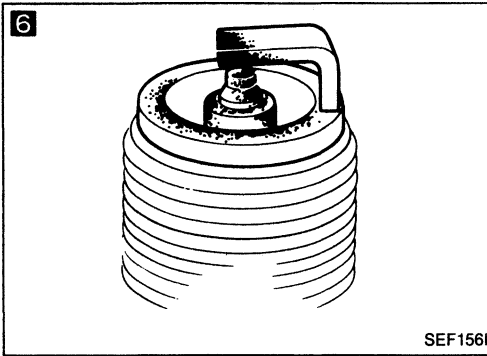


# TROUBLE DIAGNOSES


## Diagnostic Procedure 7 — Hesitation when the Engine is Hot

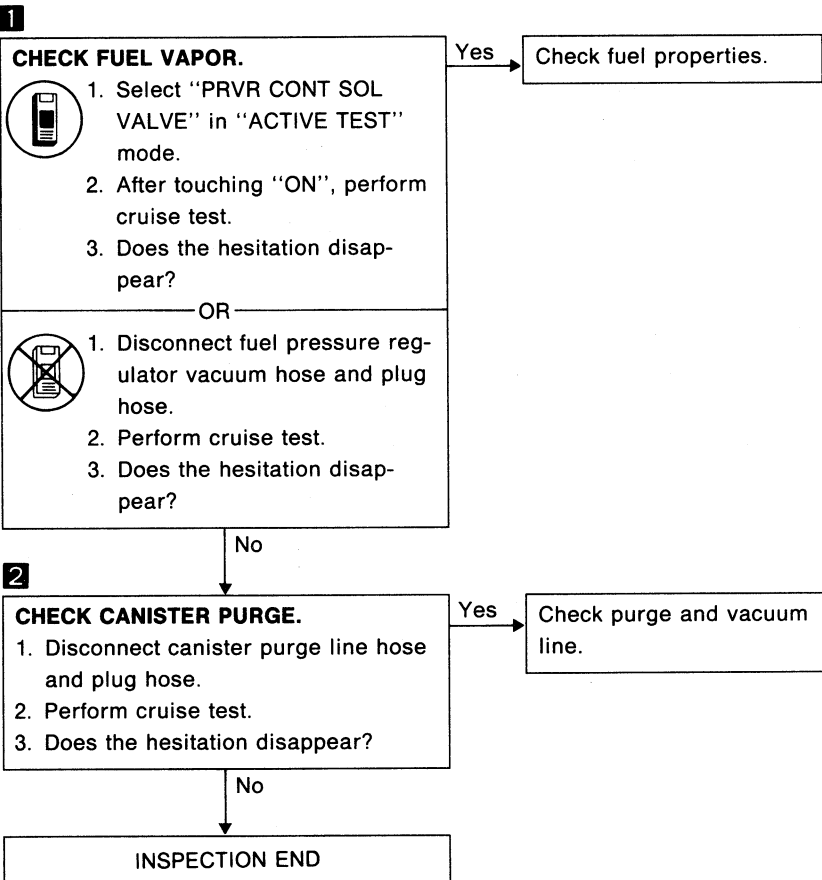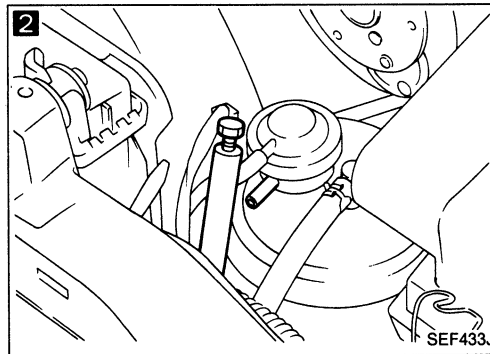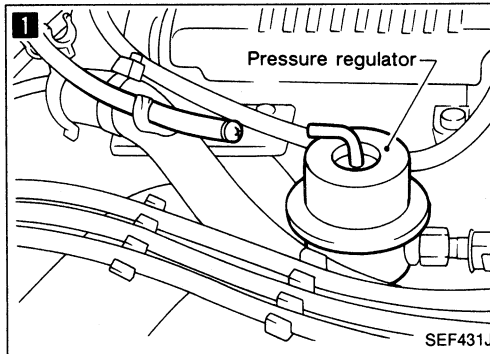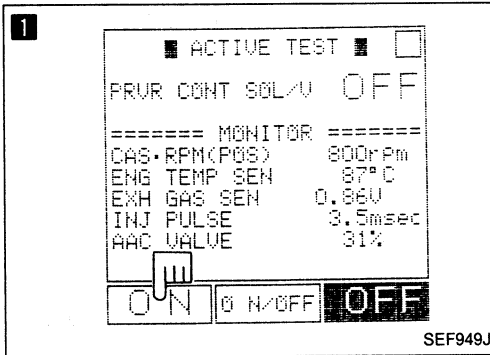

# TROUBLE DIAGNOSES





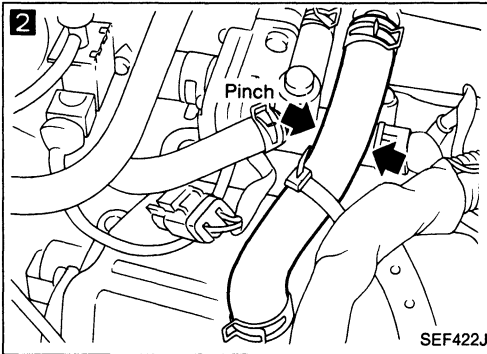
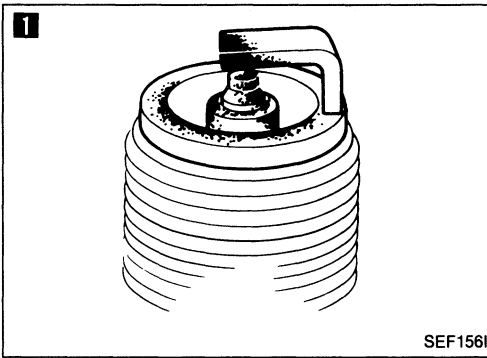


## Diagnostic Procedure 8 — Hesitation when the Engine is Cold

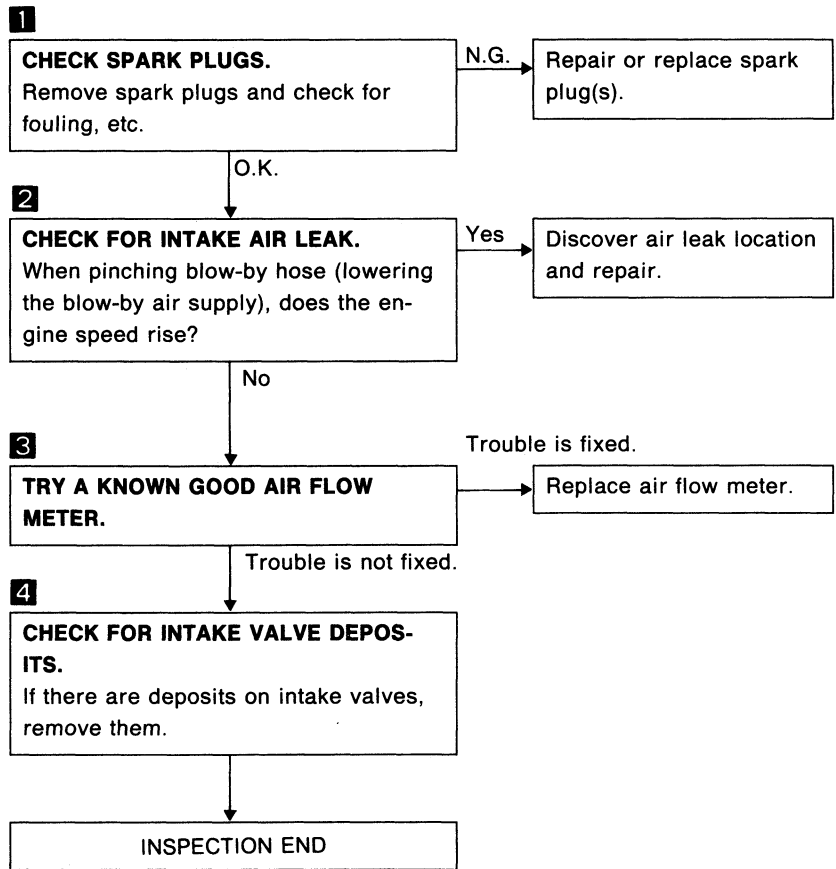


# TROUBLE DIAGNOSES

## Diagnostic Procedure 9 — Hesitation under Normal Conditions

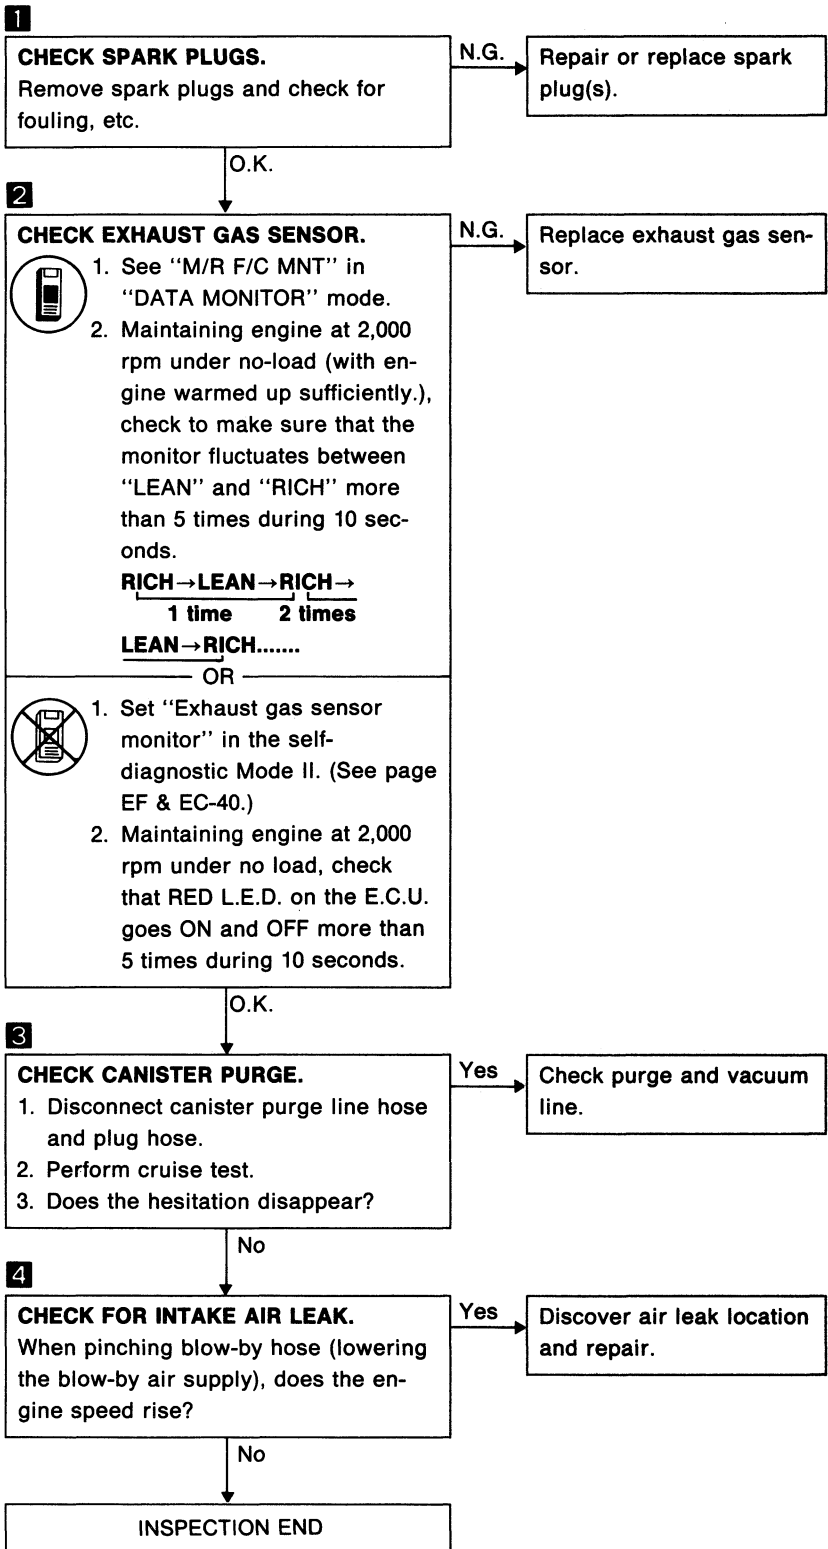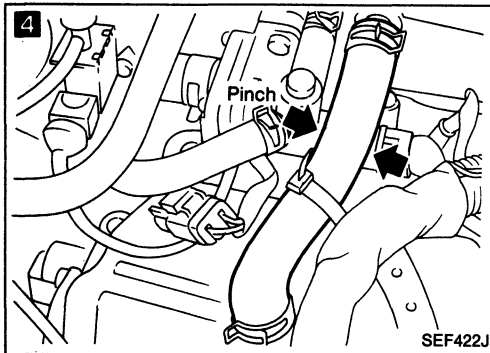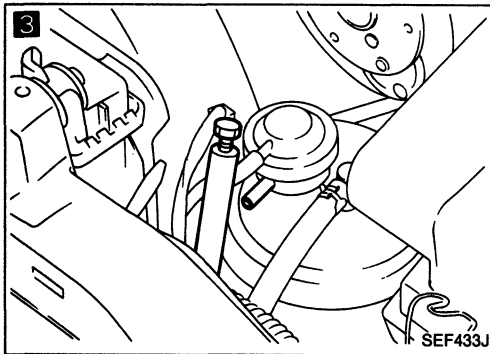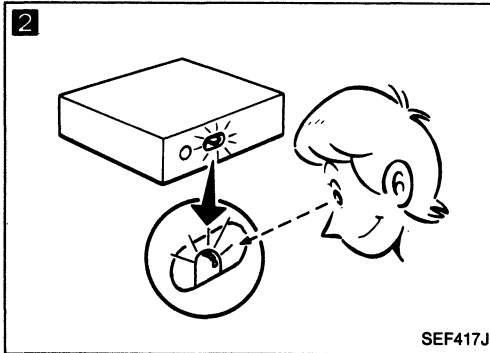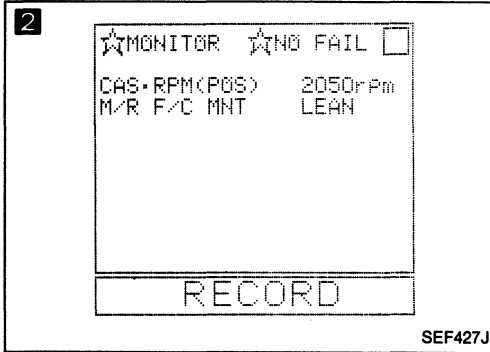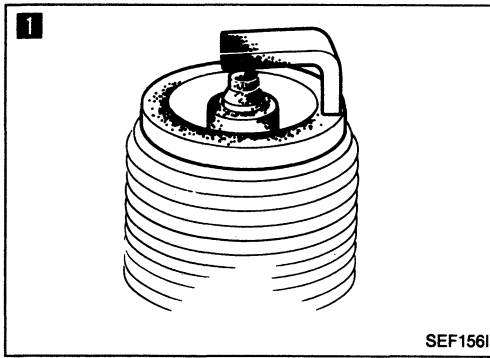

# TROUBLE DIAGNOSES


## Diagnostic Procedure 10 — Engine Stalls when Turning

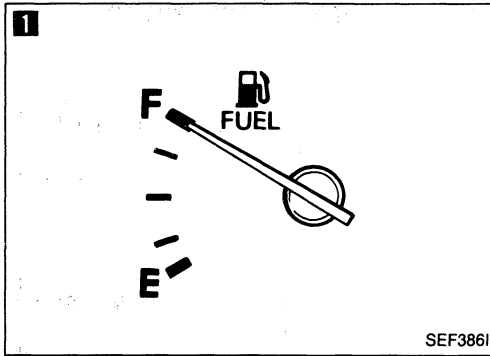

**1**  
**CHECK FUEL LEVEL.**  
Check to see that there is enough fuel in tank.

N.G. → Fill fuel tank with fuel.

O.K. ↓

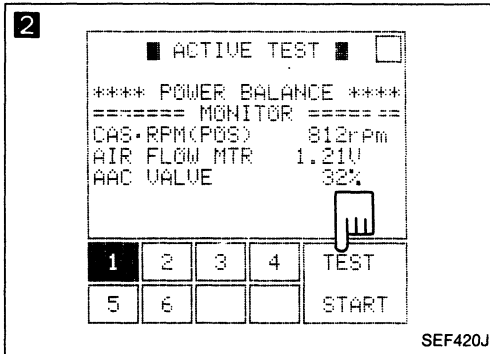


**2**  
**PERFORM POWER BALANCE TEST.**  
1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.  
2. Is there any cylinder which does not produce a momentary engine speed drop?

No → Go to **5**.

OR  
When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?


Yes ↓

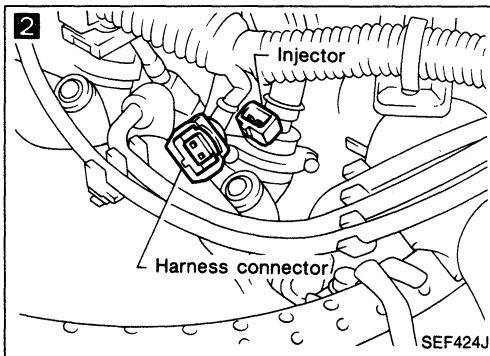

**3**  
**CHECK INJECTOR.**  
1. Remove distributor from engine. (Crank angle sensor harness connector should remain connected.)  
2. Turn ignition switch ON. (Do not start engine.)  
3. When rotating distributor shaft slowly by hand, does each injector make an operating sound?

No → Check injector(s) and circuit(s).

Yes ↓

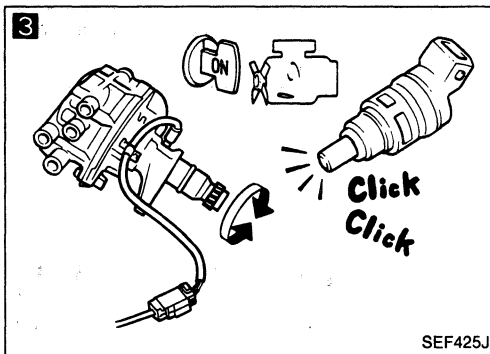


**4**  
**CHECK IGNITION SPARK.**  
1. Disconnect ignition wire from spark plug.  
2. Connect a known good spark plug to the ignition wire.  
3. Place end of spark plug against a suitable ground and crank engine.  
4. Check for spark.

N.G. → Check ignition coil, power transistor unit and circuits. (See page EF & EC-112.)



O.K. ↓

(Go to **A** on next page.)

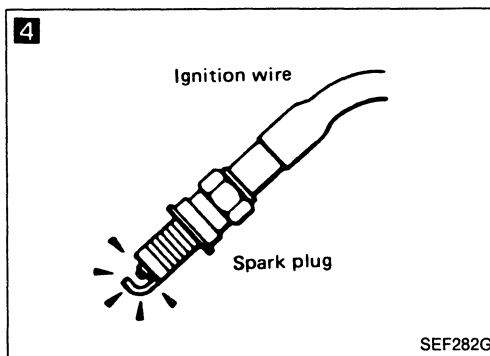


# TROUBLE DIAGNOSES

## Diagnostic Procedure 10 — Engine Stalls when Turning (Cont'd)

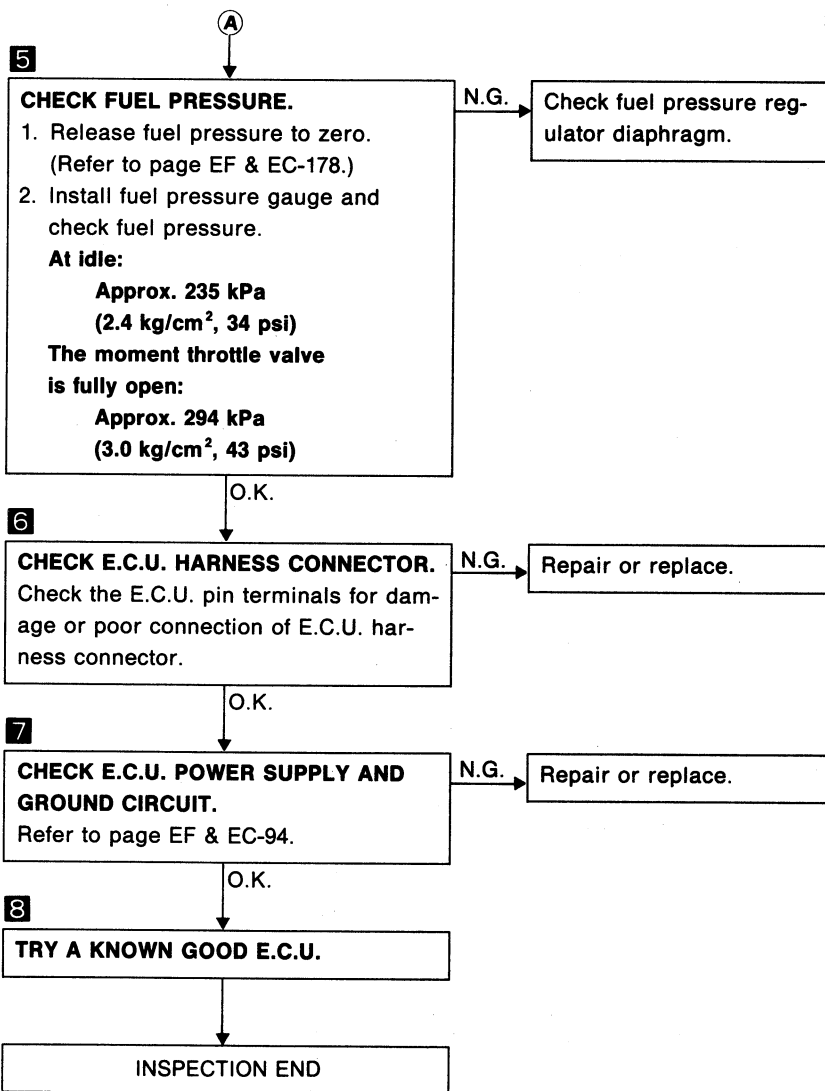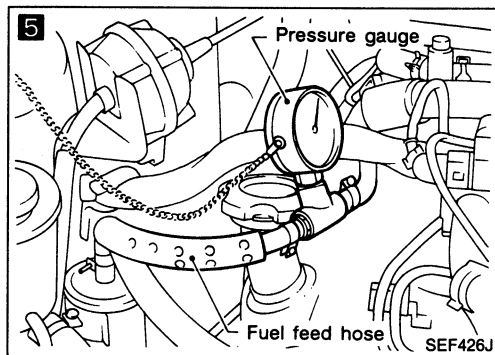


# TROUBLE DIAGNOSES

## Diagnostic Procedure 11 — Engine Stalls when the Engine is Hot

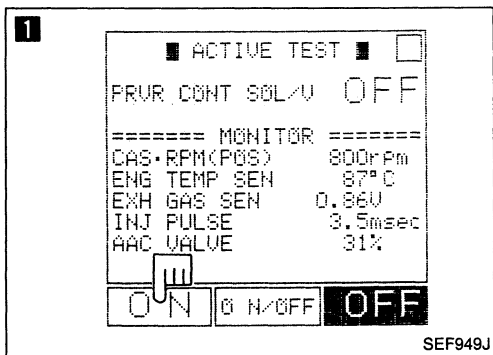


- 1 CHECK FUEL VAPOR.**
1. Select "PRVR CONT SOL VALVE" in "ACTIVE TEST" mode.
  2. After touching "ON", perform cruise test.
  3. Does the engine stall disappear?

Yes → Check fuel properties.

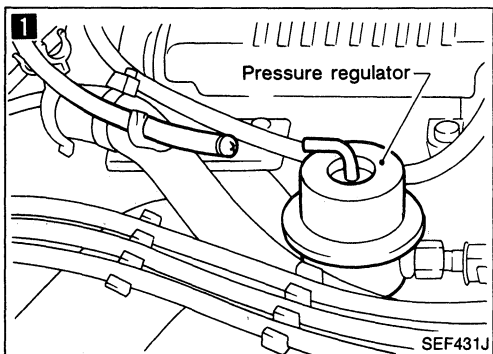

- OR
1. Disconnect fuel pressure regulator vacuum hose and plug hose.
  2. Perform cruise test.
  3. Does the engine stall disappear?


No

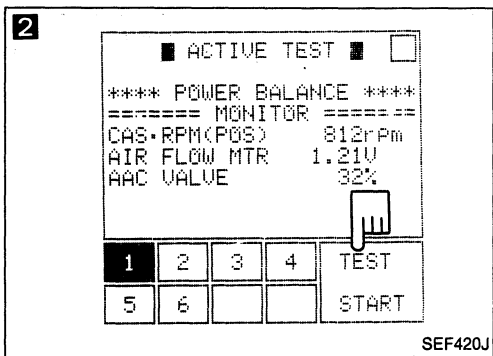

- 2 PERFORM POWER BALANCE TEST.**
1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.
  2. Is there any cylinder which does not produce a momentary engine speed drop?
- OR
1. When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?

No → Go to 5.

Yes

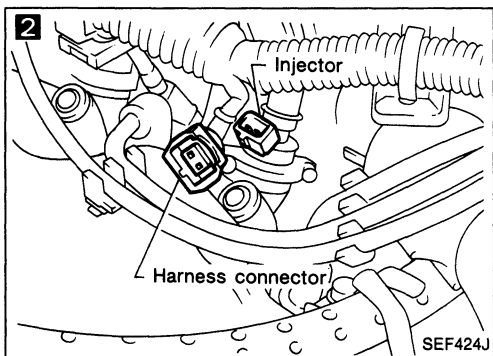


- 3 CHECK INJECTOR.**
1. Remove distributor from engine. (Crank angle sensor harness connector should remain connected.)
  2. Turn ignition switch ON. (Do not start engine.)
  3. When rotating distributor shaft slowly by hand, does each injector make an operating sound?

No → Check injector(s) and circuit(s).


Yes

(Go to A on next page.)

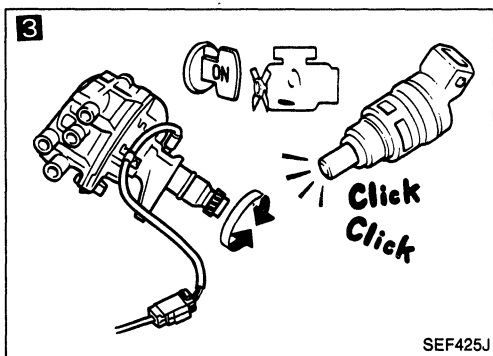

# TROUBLE DIAGNOSES

## Diagnostic Procedure 11 — Engine Stalls when the Engine is Hot (Cont'd)

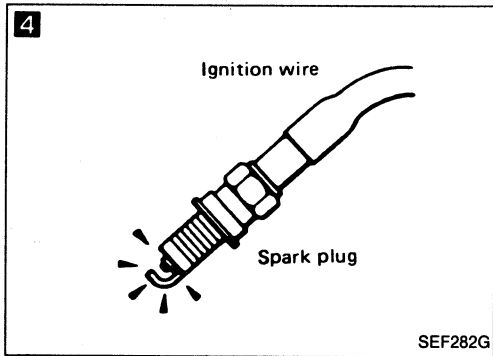


**4**

A

**CHECK IGNITION SPARK.**

1. Disconnect ignition wire from spark plug.
2. Connect a known good spark plug to the ignition wire.
3. Place end of spark plug against a suitable ground and crank engine.
4. Check for spark.

N.G. → Check ignition coil, power transistor unit and their circuits. (See page EF & EC-112.)

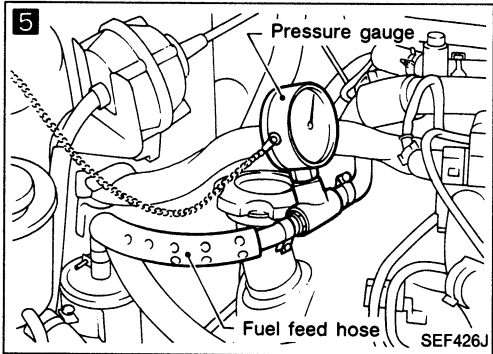

**5**

**CHECK FUEL PRESSURE.**

1. Release fuel pressure to zero. (Refer to page EF & EC-178.)
2. Install fuel pressure gauge and check fuel pressure.

**At idle:**

Approx. 235 kPa  
(2.4 kg/cm<sup>2</sup>, 34 psi)

**The moment throttle valve is fully open:**

Approx. 294 kPa  
(3.0 kg/cm<sup>2</sup>, 43 psi)

N.G. → Check fuel pressure regulator diaphragm.

**6**

**CHECK E.C.U. HARNESS CONNECTOR.**

Check the E.C.U. pin terminals for damage or poor connection of E.C.U. harness connector.

N.G. → Repair or replace.

**7**

**CHECK E.C.U. POWER SUPPLY AND GROUND CIRCUIT.**

Refer to page EF & EC-94.

N.G. → Repair or replace.

**8**

**TRY A KNOWN GOOD E.C.U.**

Trouble is fixed. → Replace E.C.U.

**9**

**CHECK TIMING BELT FOR PROPER INSTALLATION.**


N.G. → Replace timing belt and install new one.

INSPECTION END



# TROUBLE DIAGNOSES


## Diagnostic Procedure 12 — Engine Stalls when the Engine is Cold

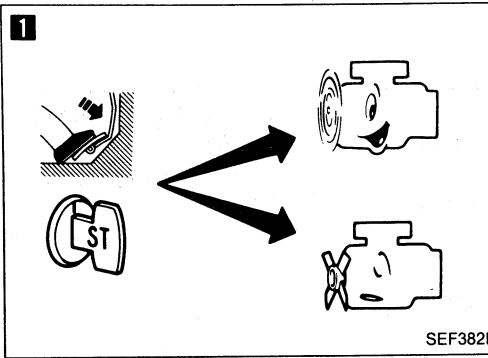

**1**  
**CHECK AIR REGULATOR AND A.A.C. VALVE.**  
When the engine is cold, can you start the engine when pressing accelerator pedal fully?

N.G. → Check A.A.C. valve, air regulator and circuits. (See pages EF & EC-158, 160.)

O.K. ↓

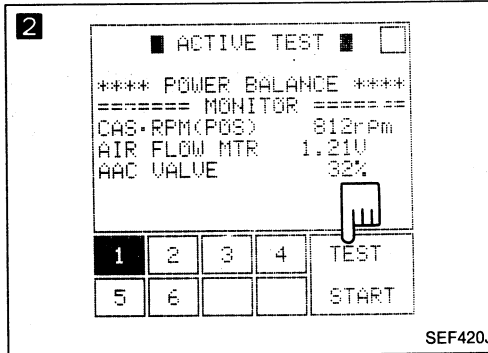


**2**  
**PERFORM POWER BALANCE TEST.**  
1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.  
2. Is there any cylinder which does not produce a momentary engine speed drop?

N.G. → Go to **6**.

OR

When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?


O.K. ↓

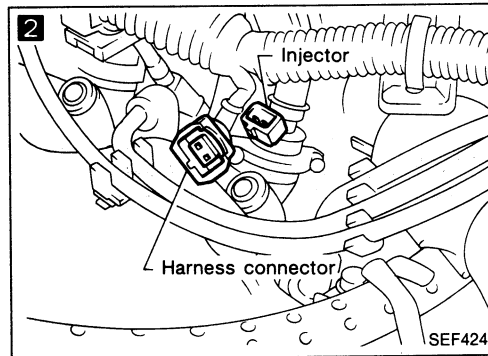

**3**  
**CHECK INJECTOR.**  
1. Remove distributor from engine. (Crank angle sensor harness connector should remain connected.)  
2. Turn ignition switch ON. (Do not start engine.)  
3. When rotating distributor shaft slowly by hand, does each injector make an operating sound?

N.G. → Check injector(s) and circuit(s).

O.K. ↓

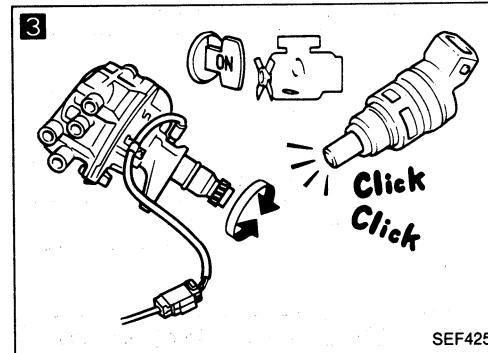


**4**  
**CHECK IGNITION SPARK.**  
1. Disconnect ignition wire from spark plug.  
2. Connect a known good spark plug to the ignition wire.  
3. Place end of spark plug against a suitable ground and crank engine.  
4. Check for spark.

N.G. → Check ignition coil, power transistor unit and circuits. (See page EF & EC-112.)




O.K. ↓

(Go to **A** on next page.)





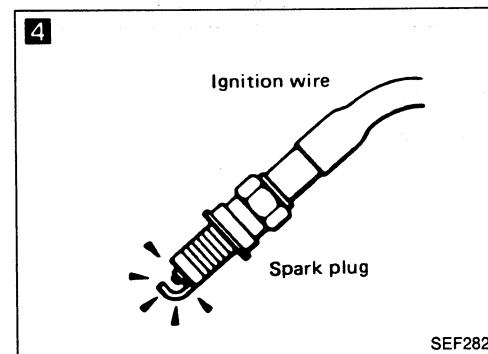


# TROUBLE DIAGNOSES

## Diagnostic Procedure 12 — Engine Stalls when the Engine is Cold (Cont'd)

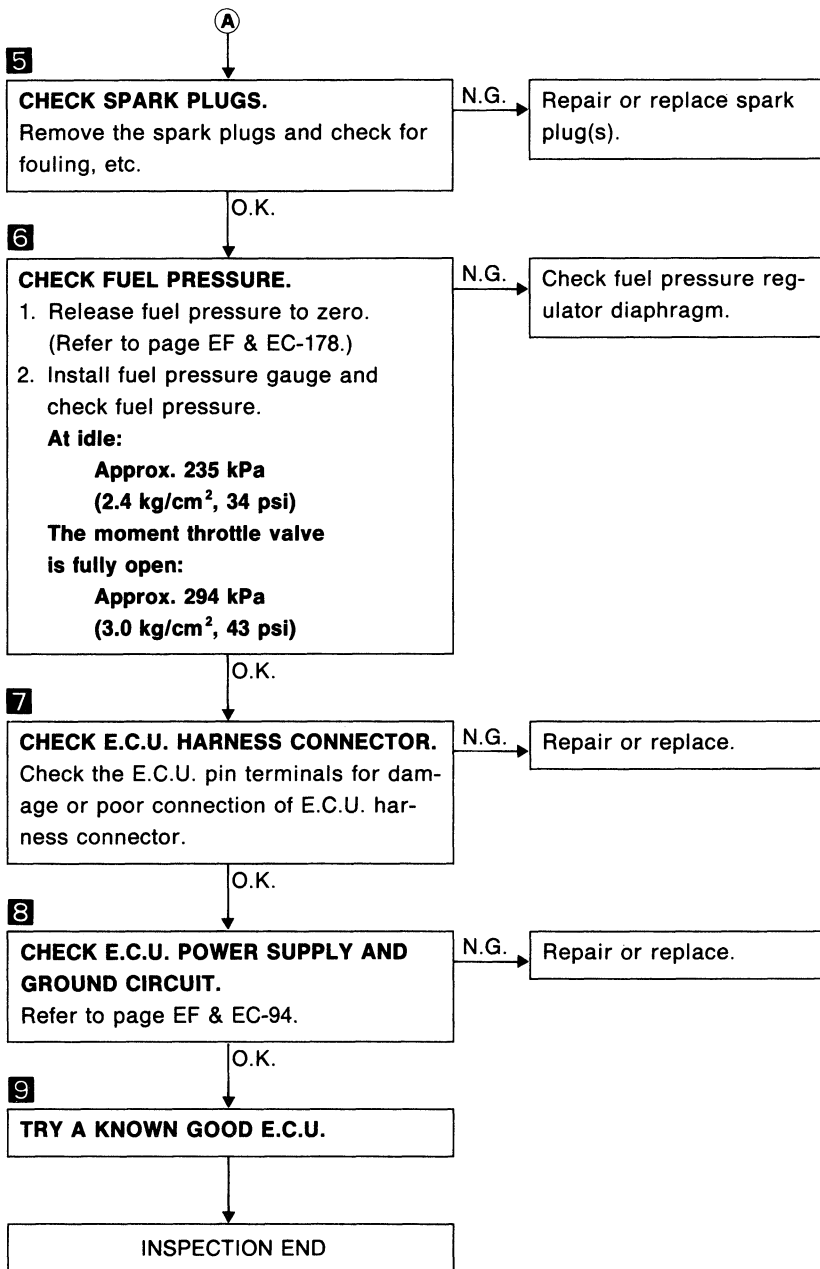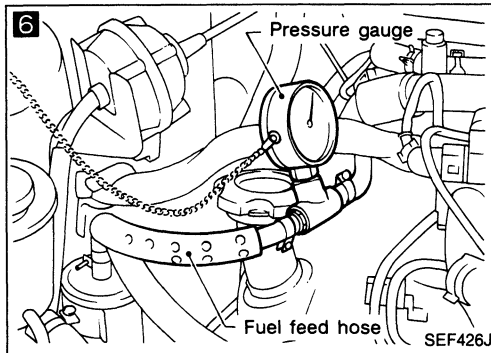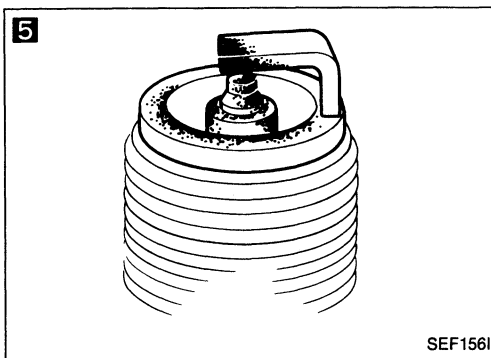

## Diagnostic Procedure 13 — Engine Stalls when Stepping on the Accelerator Momentarily

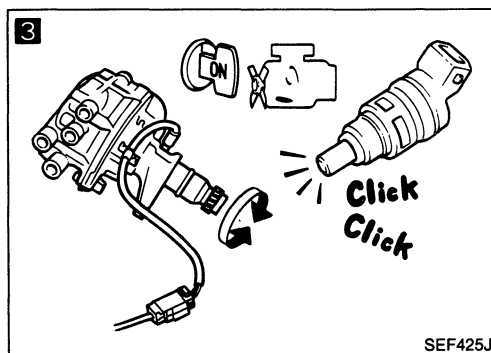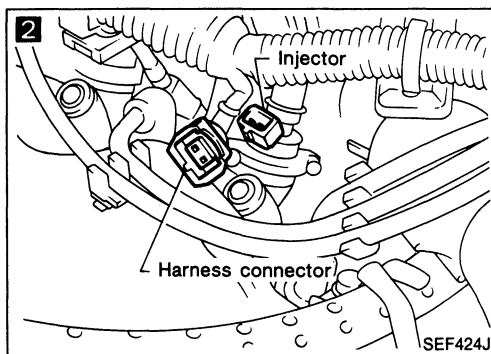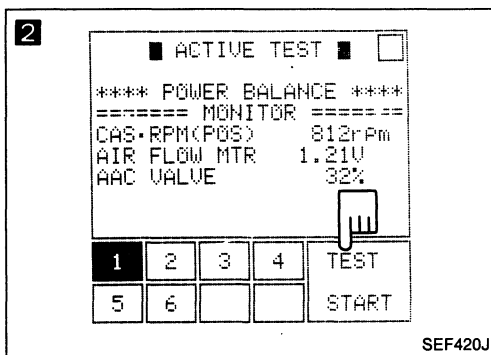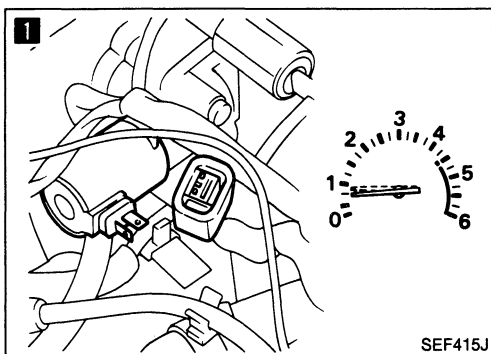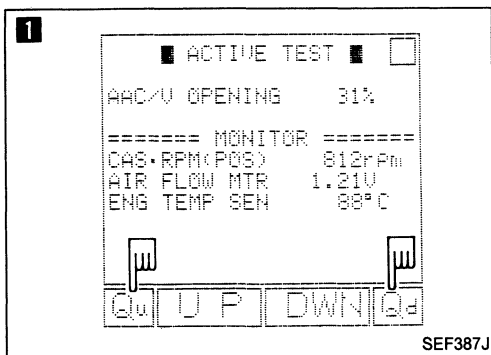

**1**

**CHECK A.A.C. VALVE.**

1. Select "A.A.C. VALVE OPENING" in "ACTIVE TEST" mode.
2. When touching "Qu" and "Qd", does the engine speed change according to the percent of A.A.C. valve opening?

No → Check A.A.C. valve and circuit. (See page EF & EC-160.)

OR

When disconnecting A.A.C. valve harness connector, does the engine speed drop?

Yes

**2**

**PERFORM POWER BALANCE TEST.**

1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.
2. Is there any cylinder which does not produce a momentary engine speed drop?

No → Go to **5**.

OR

When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?

Yes

**3**

**CHECK INJECTOR.**

1. Remove distributor from engine. (Crank angle sensor harness connector should remain connected.)
2. Turn ignition switch ON. (Do not start engine.)
3. When rotating distributor shaft slowly by hand, does each injector make an operating sound?


No → Check injector(s) and their circuit(s).

Yes

(Go to **A** on next page.)

# TROUBLE DIAGNOSES

## Diagnostic Procedure 13 — Engine Stalls when Stepping on the Accelerator Momentarily (Cont'd)

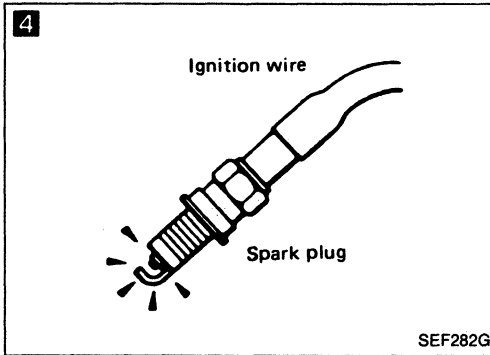


**4**

**CHECK IGNITION SPARK.**

1. Disconnect ignition wire from spark plug.
2. Connect a known good spark plug to the ignition wire.
3. Place end of spark plug against an earth point with engine cranking.
4. Check for spark.

N.G. → Check ignition coil, power transistor unit and their circuits. (See page EF & EC-112.)

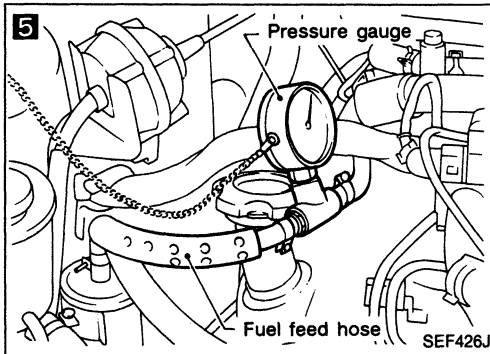

**5**

**CHECK FUEL PRESSURE.**

1. Release fuel pressure to zero. (Refer to page EF & EC-178.)
2. Install fuel pressure gauge and check fuel pressure.

**At idle:**  
**Approx. 235 kPa (2.4 kg/cm<sup>2</sup>, 34 psi)**

**The moment throttle valve is fully open:**  
**Approx. 294 kPa (3.0 kg/cm<sup>2</sup>, 43 psi)**

N.G. → Check fuel pressure regulator diaphragm.

**6**

**CHECK E.C.U. HARNESS CONNECTOR.**  
 Check the E.C.U. pin terminals for damage or poor connection of E.C.U. harness connector.

N.G. → Repair or replace.

**7**

**CHECK E.C.U. POWER SUPPLY AND GROUND CIRCUIT.**  
 Refer to page EF & EC-94.

N.G. → Repair or replace.





**8**

**TRY A KNOWN GOOD E.C.U.**

**INSPECTION END**


# TROUBLE DIAGNOSES

## Diagnostic Procedure 14 — Engine Stalls after Decelerating

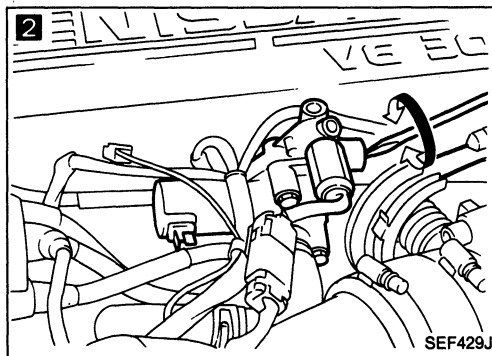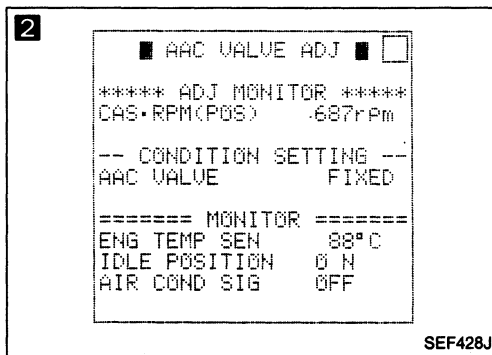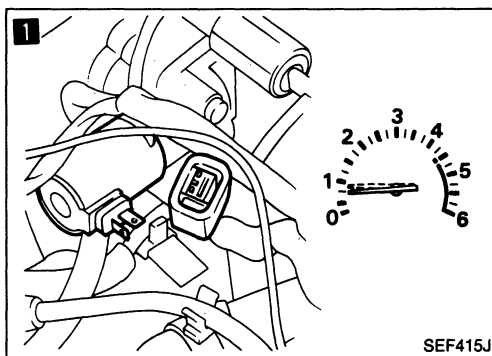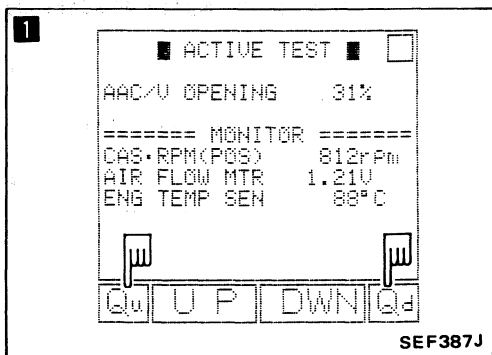

**1**


**CHECK A.A.C. VALVE.**

 1. Select "A.A.C. VALVE OPENING" in "ACTIVE TEST" mode.

2. When touching "Qu" and "Qd", does the engine speed change according to the percent of A.A.C. valve opening?

— OR —


No → Check A.A.C. valve and circuit. (See page EF & EC-160.)

 When disconnecting A.A.C. valve harness connector, does the engine speed drop?

Yes

**2**


**CHECK IDLE ADJ. SCREW CLOGGING.**

 1. Perform "A.A.C. VALVE ADJ" in "WORK SUPPORT" mode.

2. Can you set engine rpm at  $700 \pm 50$  rpm (in "N" position) by turning idle adjusting screw?

— OR —

No → Check for IAS clogging or throttle chamber clogging.

 1. Disconnect A.A.C. valve harness connector.






2. Can you set engine rpm at  $700 \pm 50$  rpm (in "N" position) by turning idle adjusting screw?

Yes

(Go to **A** on next page.)



# TROUBLE DIAGNOSES

## Diagnostic Procedure 14 — Engine Stalls after Decelerating (Cont'd)

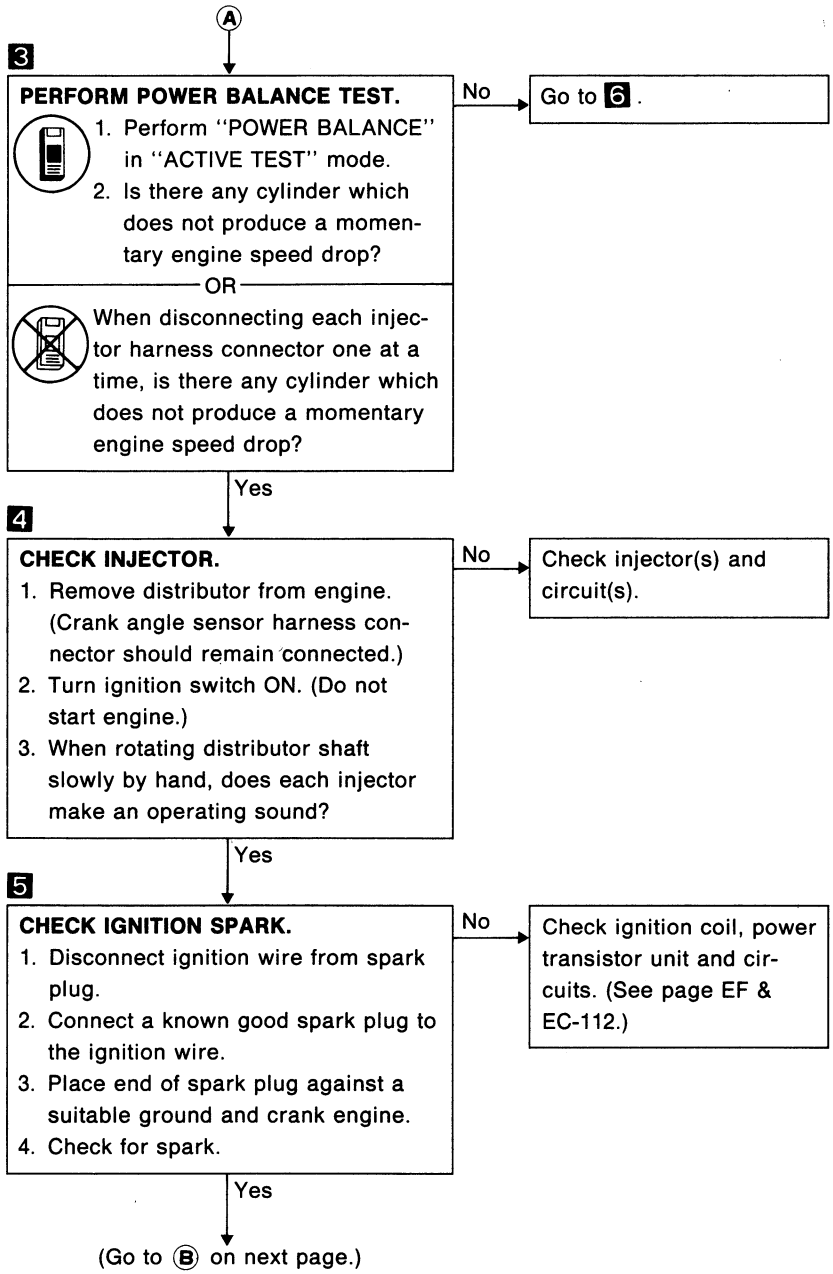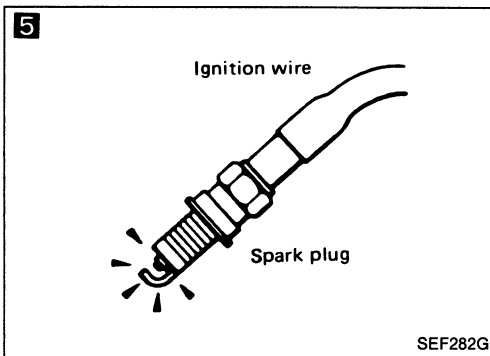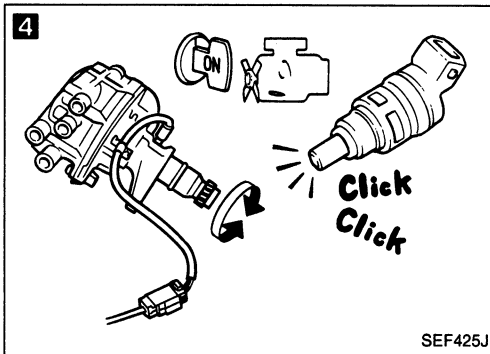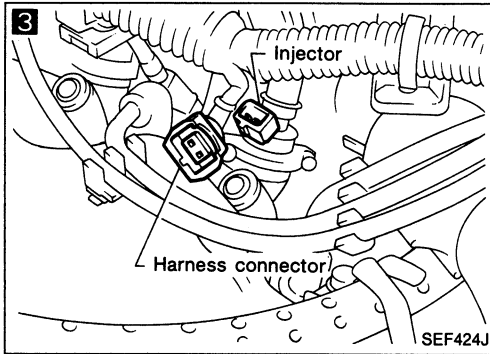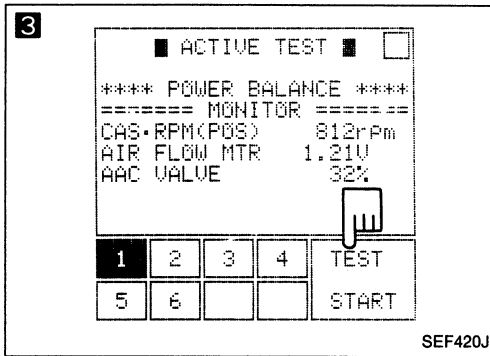

# TROUBLE DIAGNOSES

## Diagnostic Procedure 14 — Engine Stalls after Decelerating (Cont'd)

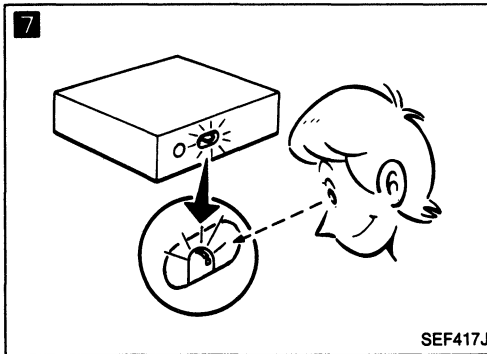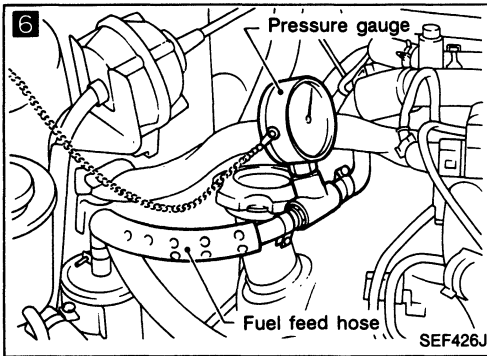

**6**

**CHECK FUEL PRESSURE.**

1. Release fuel pressure to zero. (Refer to page EF & EC-178.)
2. Install fuel pressure gauge and check fuel pressure.

**At idle:**  
**Approx. 235 kPa**  
**(2.4 kg/cm<sup>2</sup>, 34 psi)**

**The moment throttle valve is fully open:**  
**Approx. 294 kPa**  
**(3.0 kg/cm<sup>2</sup>, 43 psi)**

N.G. → Check fuel pressure regulator diaphragm.

O.K.

**7**

**CHECK EXHAUST GAS SENSOR.**


1. See "M/R F/C MNT" in "DATA MONITOR" mode.
2. Maintaining engine at 2,000 rpm under no-load (with engine warmed up sufficiently), check to make sure that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds.

**RICH → LEAN → RICH →**  
**1 time 2 times**

**LEAN → RICH.....**

OR

N.G. → Replace exhaust gas sensor.


 1. Set "Exhaust gas sensor monitor" in the self-diagnostic Mode II. (See page EF & EC-40.)

2. Maintaining engine at 2,000 rpm under no load, check that RED LED on the E.C.U. goes ON and OFF more than 5 times during 10 seconds.

O.K.  
 (Go to © on next page.)

## TROUBLE DIAGNOSES





### Diagnostic Procedure 14 — Engine Stalls after Decelerating (Cont'd)

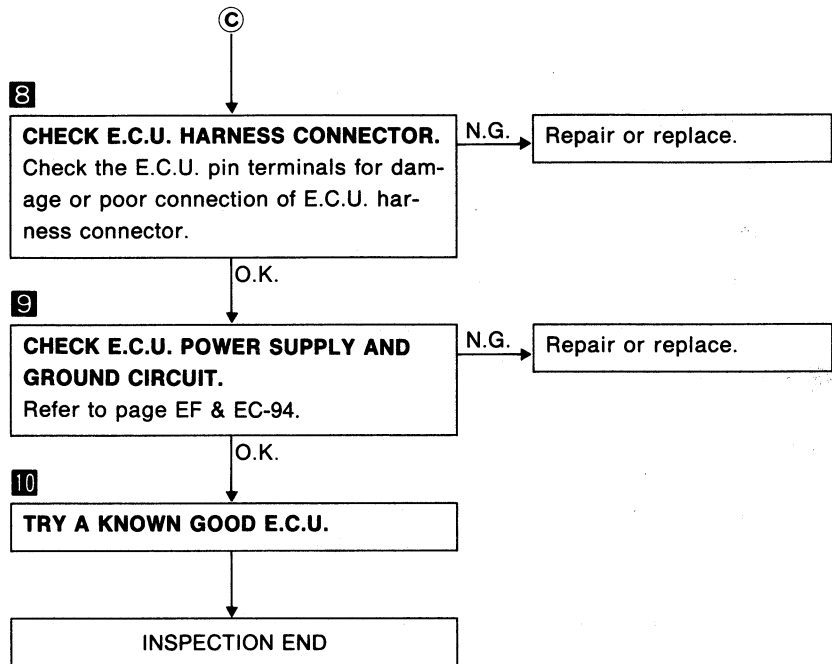



# TROUBLE DIAGNOSES

## Diagnostic Procedure 15 — Engine Stalls when Accelerating or when Driving at Constant Speed

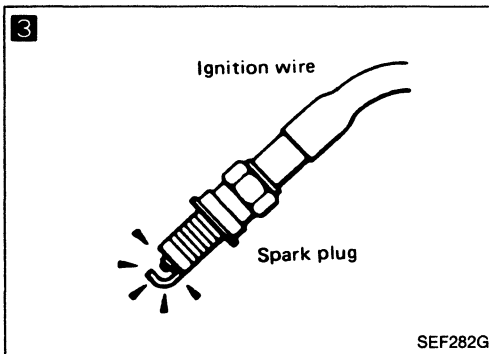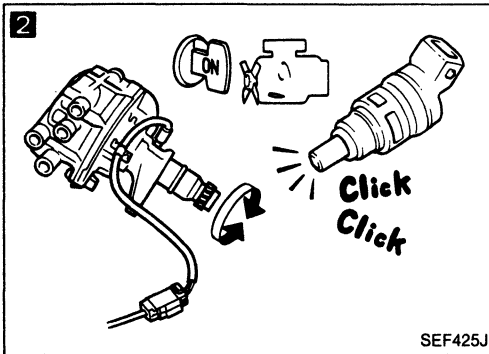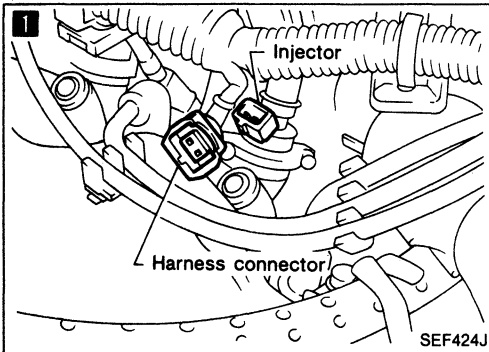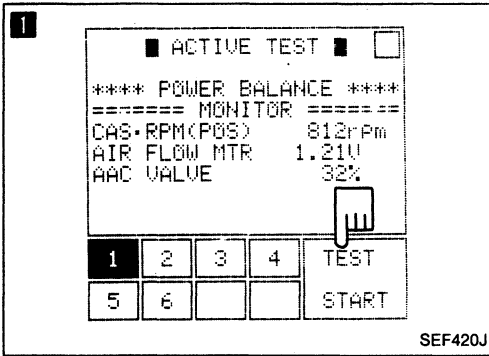

### 1 PERFORM POWER BALANCE TEST.



1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.
2. Is there any cylinder which does not produce a momentary engine speed drop?

No → Go to 4.

OR



- When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?

Yes

### 2 CHECK INJECTOR.

1. Remove distributor from engine. (Crank angle sensor harness connector should remain connected.)
2. Turn ignition switch ON. (Do not start engine.)
3. When rotating distributor shaft slowly by hand, does each injector make an operating sound?

No → Check injector(s) and circuit(s).

Yes

### 3 CHECK IGNITION SPARK.

1. Disconnect ignition wire from spark plug.
2. Connect a known good spark plug to the ignition wire.
3. Place end of spark plug against a suitable ground and crank engine.
4. Check for spark.




No → Check ignition coil, power transistor unit and circuits. (See page EF & EC-112.)

Yes

(Go to (A) on next page.)


# TROUBLE DIAGNOSES

## Diagnostic Procedure 15 — Engine Stalls when Accelerating or when Driving at Constant Speed (Cont'd)

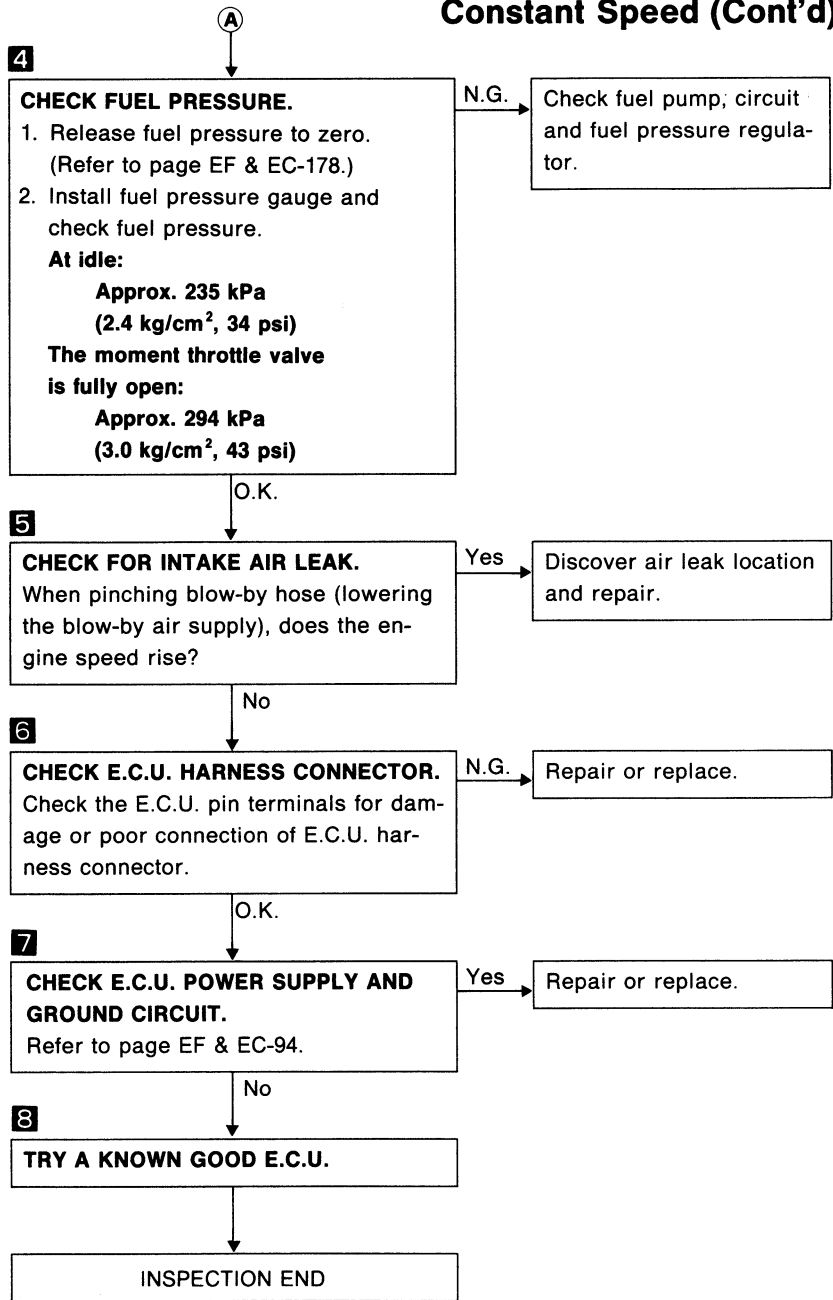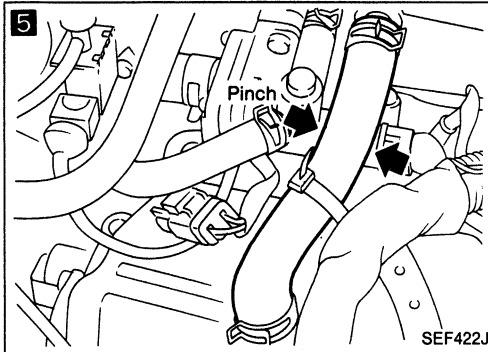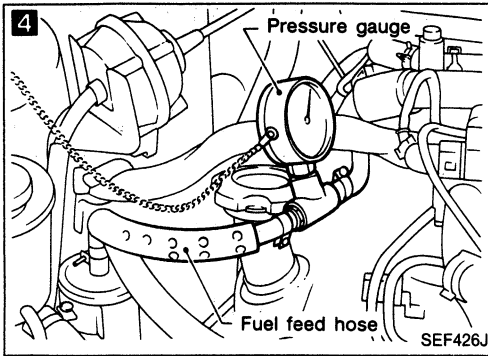

# TROUBLE DIAGNOSES


## Diagnostic Procedure 16 — Engine Stalls when the Electrical Load is Heavy

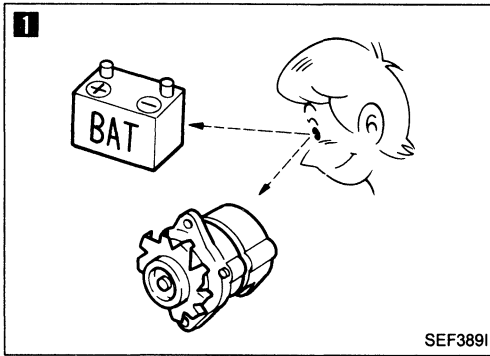

**1**  
**CHECK BATTERY AND ALTERNATOR.**  
Check battery and alternator condition.  
(Refer to EL section.)

N.G. → Repair or replace.


O.K. ↓

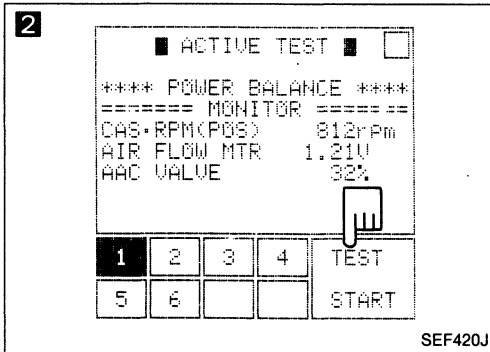


**2**  
**PERFORM POWER BALANCE TEST.**  
1. Perform "POWER BALANCE" in "ACTIVE TEST" mode.  
2. Is there any cylinder which does not produce a momentary engine speed drop?

No → Go to **5**.

OR

 When disconnecting each injector harness connector one at a time, is there any cylinder which does not produce a momentary engine speed drop?


Yes ↓

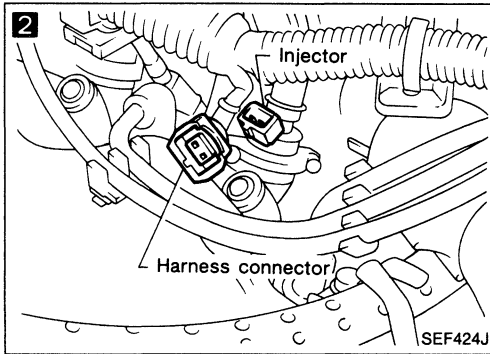

**3**  
**CHECK INJECTOR.**  
1. Remove distributor from engine.  
(Crank angle sensor harness connector should remain connected.)  
2. Turn ignition switch ON. (Do not start engine.)  
3. When rotating distributor shaft slowly by hand, does each injector make an operating sound?

No → Check injector(s) and circuit(s).

Yes ↓

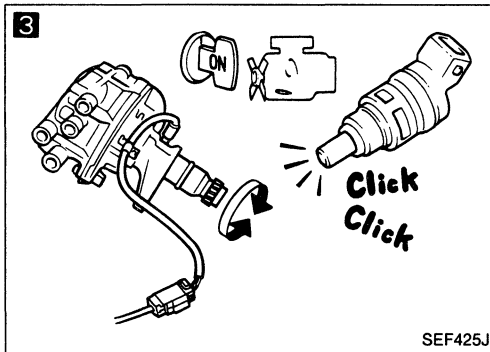


**4**  
**CHECK IGNITION SPARK.**  
1. Disconnect ignition wire from spark plug.  
2. Connect a known good spark plug to the ignition wire.  
3. Place end of spark plug against a suitable ground and crank engine.  
4. Check for spark.

N.G. → Check ignition coil, power transistor unit and circuits. (See page EF & EC-112.)



O.K. ↓

(Go to **A** on next page.)


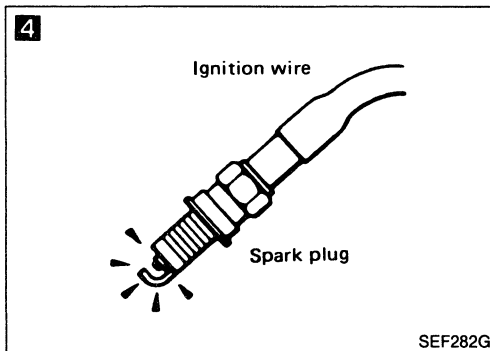


# TROUBLE DIAGNOSES

## Diagnostic Procedure 16 — Engine Stalls when the Electrical Load is Heavy (Cont'd)

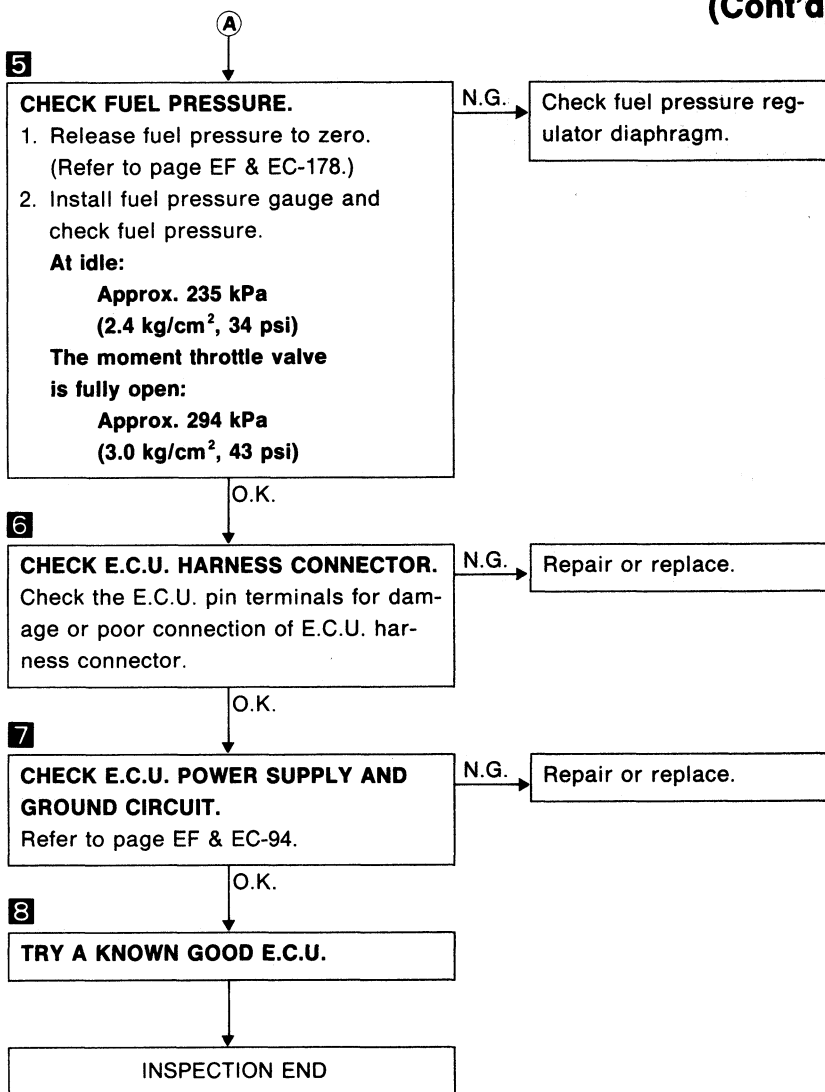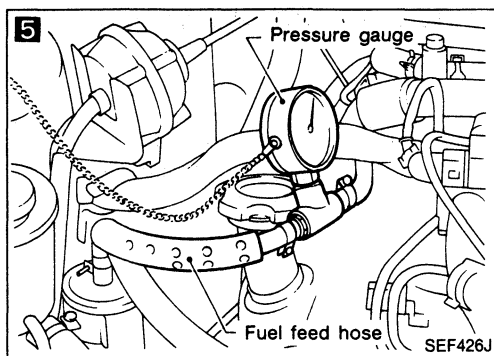

# TROUBLE DIAGNOSES

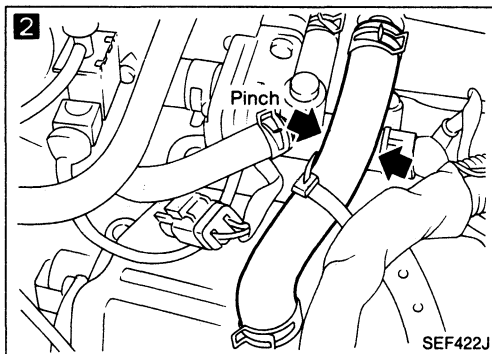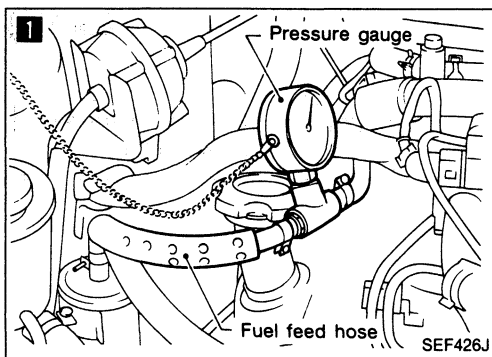

## Diagnostic Procedure 17 — Lack of Power and Stumble

**1**

### CHECK FUEL PRESSURE.

1. Release fuel pressure to zero. (Refer to page EF & EC-178.)
2. Install fuel pressure gauge and check fuel pressure.

**At idle:**

**Approx. 235 kPa  
(2.4 kg/cm<sup>2</sup>, 34 psi)**

**The moment throttle valve  
is fully open:**

**Approx. 294 kPa  
(3.0 kg/cm<sup>2</sup>, 43 psi)**

N.G.

Check fuel pressure regulator diaphragm.

O.K.

**2**

### CHECK FOR INTAKE AIR LEAK.

When pinching blow-by hose (lowering the blow-by air supply), does the engine speed rise?

Yes

Discover air leak location and repair.

No

### CHECK TIMING BELT FOR PROPER INSTALLATION.

N.G.





Replace timing belt.

O.K.

INSPECTION END

# TROUBLE DIAGNOSES

## Diagnostic Procedure 18 — Detonation

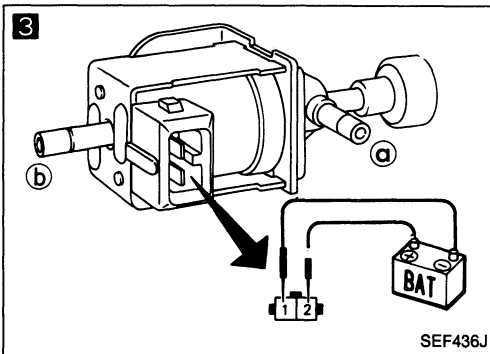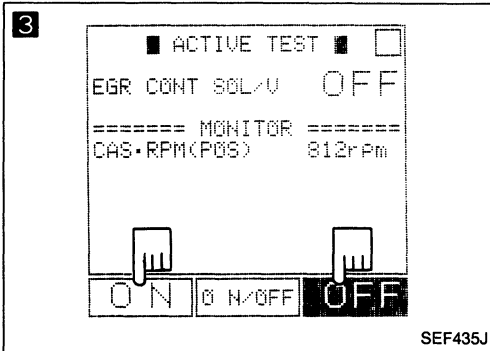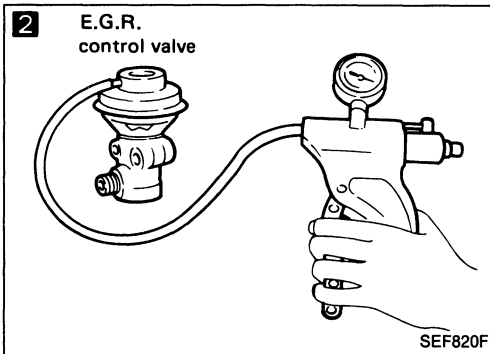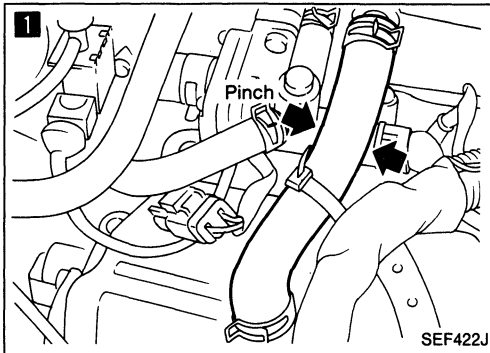


**1**  
**CHECK FOR INTAKE AIR LEAK.**  
When pinching blow-by hose (lowering the blow-by air supply), does the engine rpm rise?

Yes → Discover air leak location and repair.


No  
**2**  
**CHECK E.G.R. OPERATION.**  
1. Apply vacuum directly to the E.G.R. valve using a handy vacuum pump.  
2. Check to see that the engine runs rough or dies.

No → Check E.G.R. valve for sticking.

Yes  
**3**  
**CHECK E.G.R. CONTROL SOLENOID VALVE.**

 1. Select "E.G.R. CONT SOL VALVE" in "ACTIVE TEST" mode.  
2. Turn E.G.R. control solenoid valve ON and OFF.  
3. Check operating sound.

N.G. → Check solenoid valve and circuit.


OR  
 1. Disconnect E.G.R. control solenoid valve harness connector.  
2. Supply E.G.R. control solenoid valve terminals with battery current and check operating sound.

O.K.

(Go to **A** on next page.)




# TROUBLE DIAGNOSES

## Diagnostic Procedure 18 — Detonation (Cont'd)

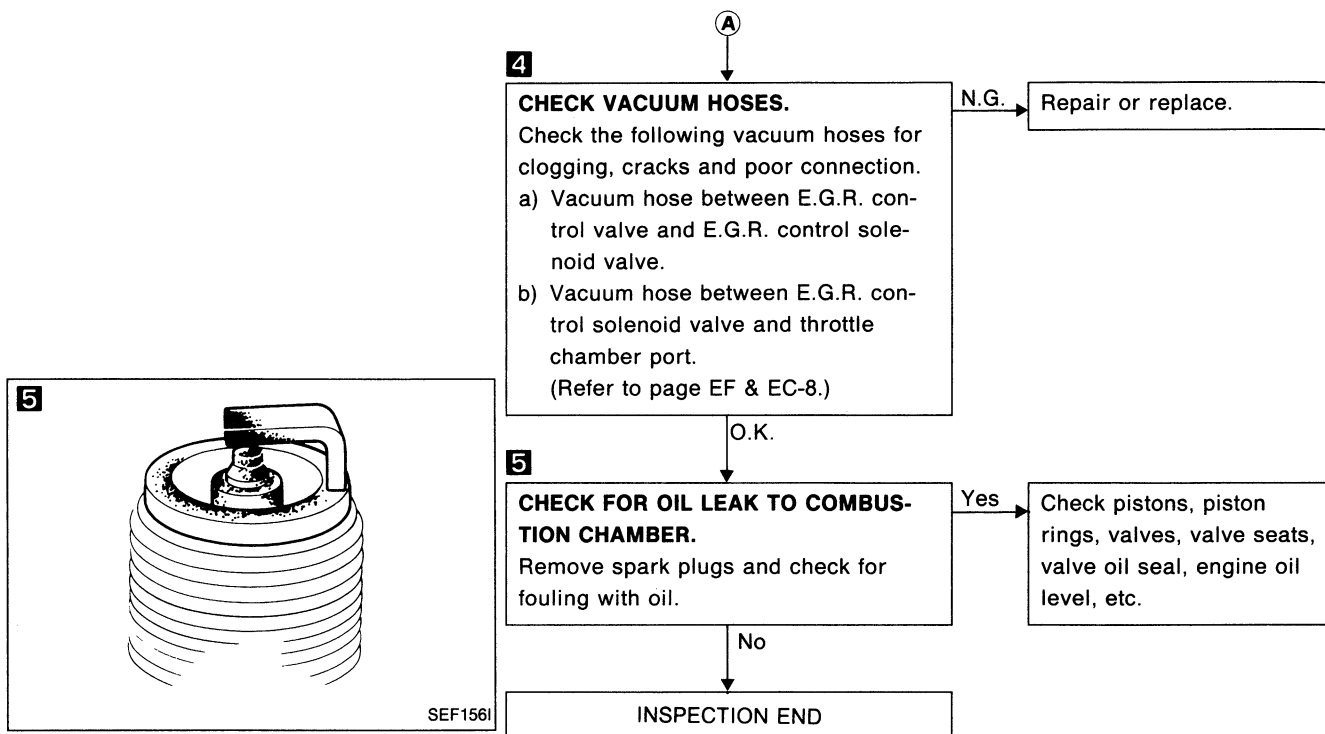

# TROUBLE DIAGNOSES

## Diagnostic Procedure 19 — Surge

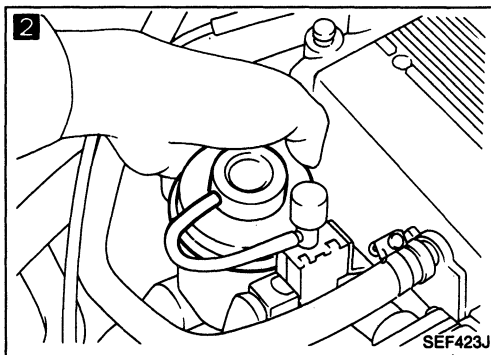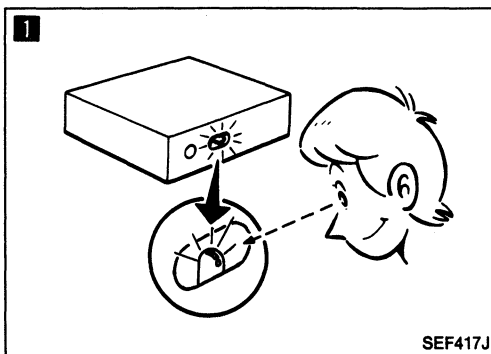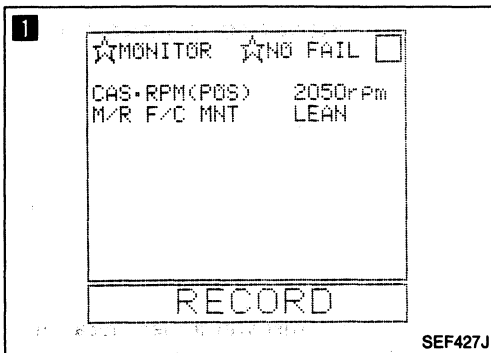

**1**

**CHECK EXHAUST GAS SENSOR.**

- See "M/R F/C MNT" in "DATA MONITOR" mode.
- Maintaining engine at 2,000 rpm under no-load (with engine warmed up sufficiently), check to make sure that the monitor fluctuates between "LEAN" and "RICH" more than 5 times during 10 seconds.

**RICH → LEAN → RICH →**  
                   1 time   2 times  
**LEAN → RICH.....**

OR

- Set "Exhaust gas sensor monitor" in the self-diagnostic Mode II. (See page EF & EC-40.)
- Maintaining engine at 2,000 rpm under no load, check that RED L.E.D. on the E.C.U. goes ON and OFF more than 5 times during 10 seconds.

N.G. → Replace exhaust gas sensor.

**2**

**CHECK E.G.R. CONTROL VALVE.**  
 Check E.G.R. control valve for sticking.

N.G. → Repair or replace.



**3**

**TRY A KNOWN GOOD E.C.U.**


INSPECTION END




# TROUBLE DIAGNOSES

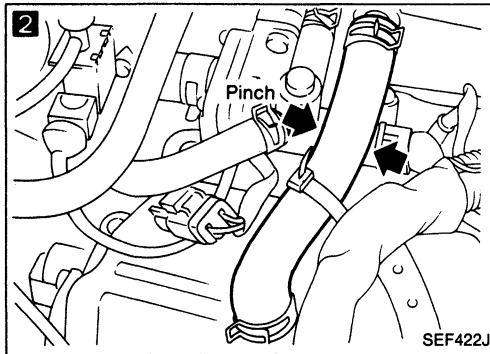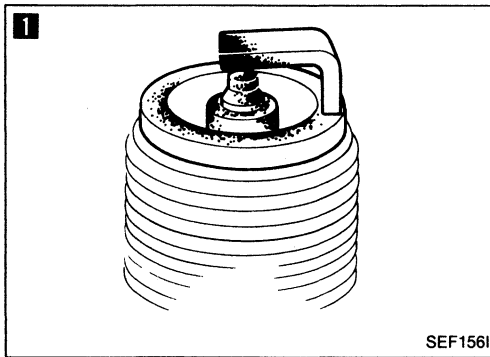

## Diagnostic Procedure 20 — Backfire through the Intake

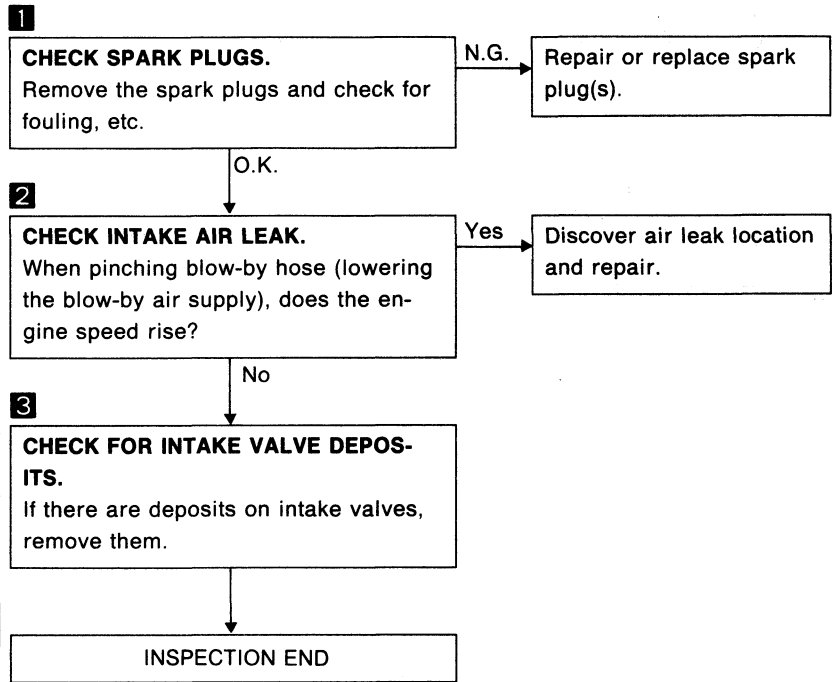


## Diagnostic Procedure 21 — Backfire through the Exhaust

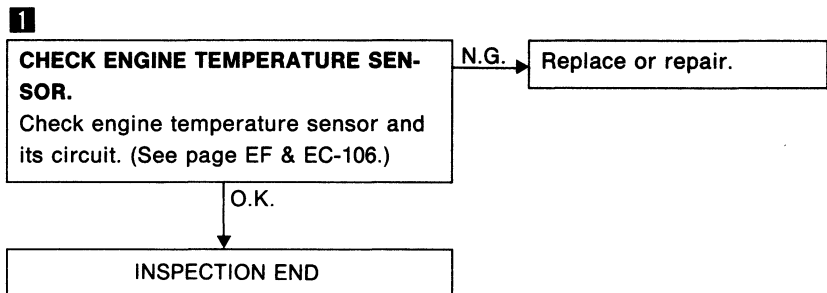



# TROUBLE DIAGNOSES

## Diagnostic Procedure 22

### MAIN POWER SUPPLY AND GROUND CIRCUIT (Not self-diagnostic item)






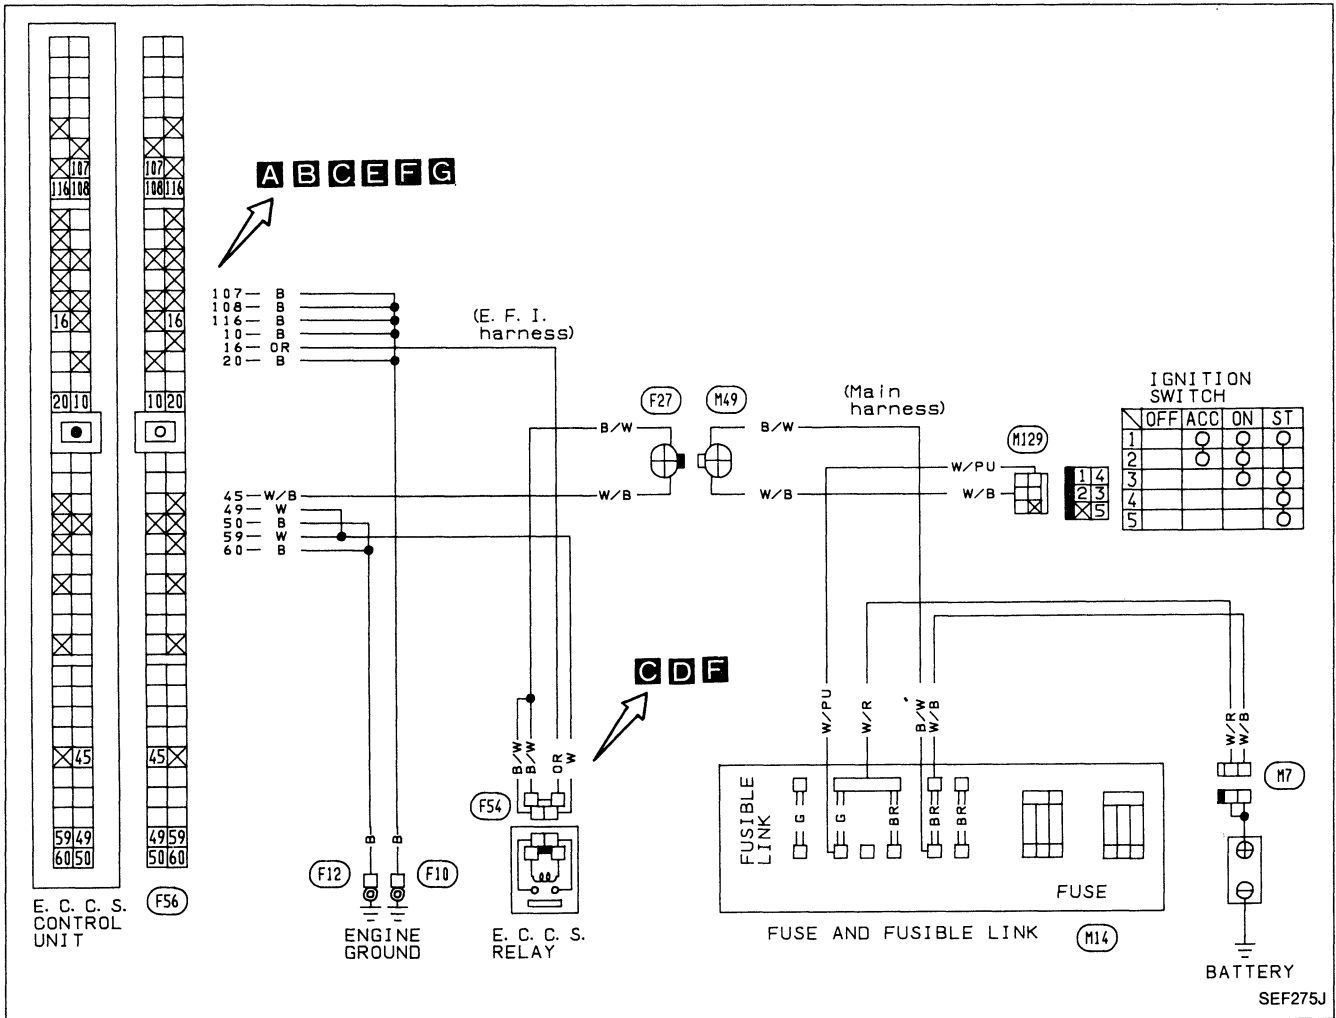


### Harness layout

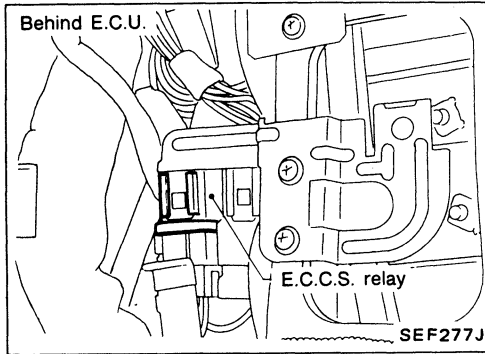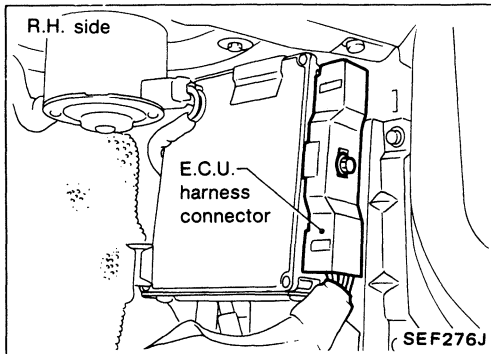


# TROUBLE DIAGNOSES

## Diagnostic Procedure 22 (Cont'd)

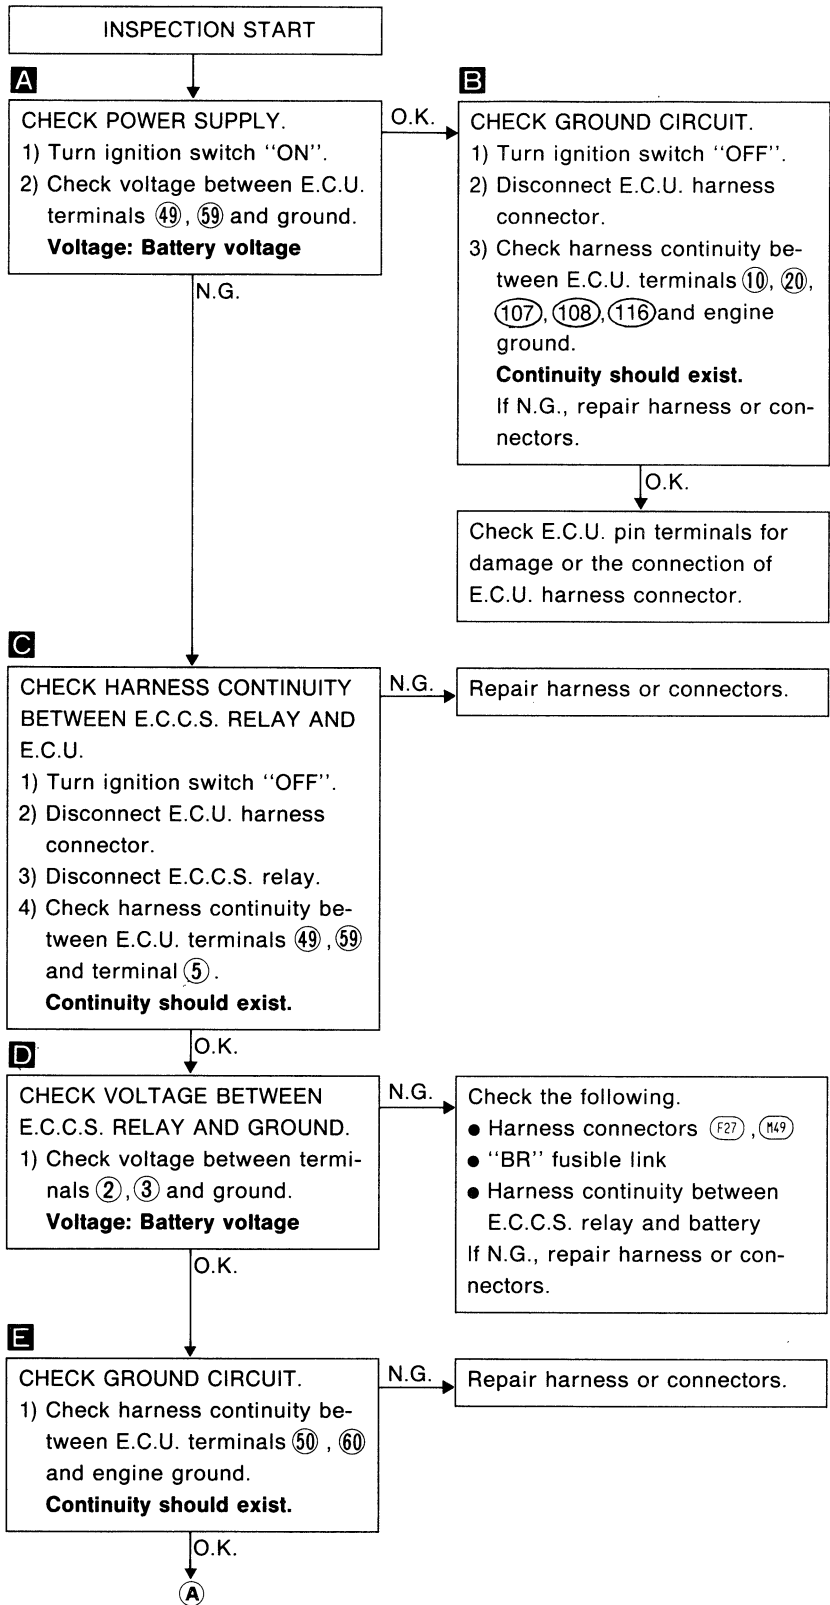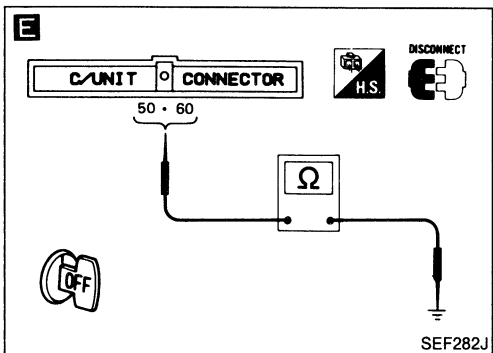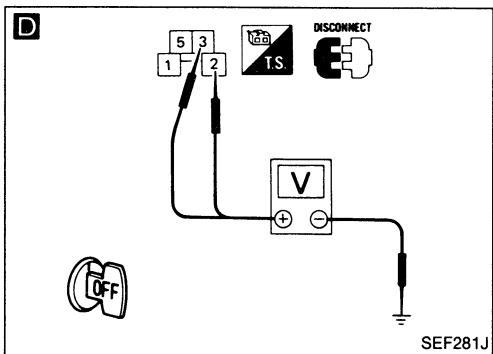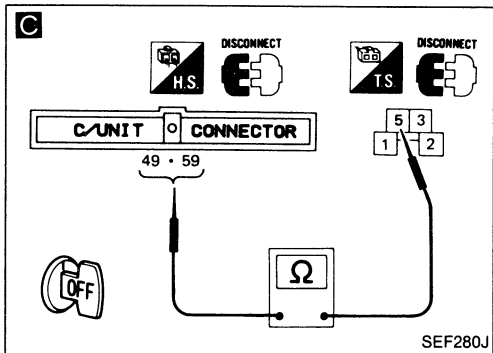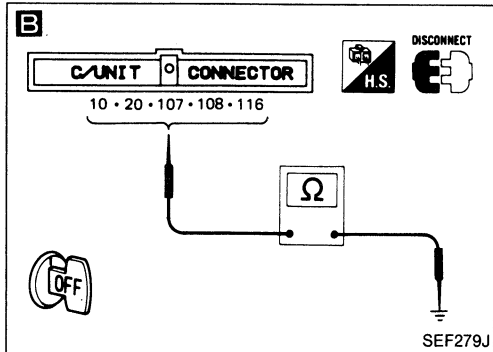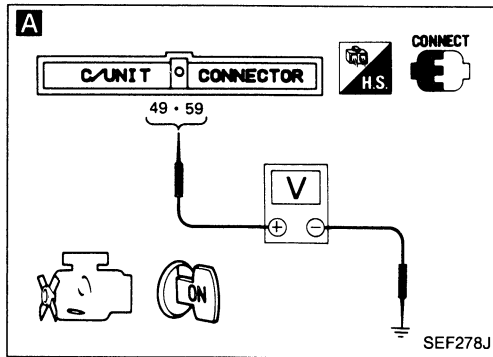

# TROUBLE DIAGNOSES


## Diagnostic Procedure 22 (Cont'd)

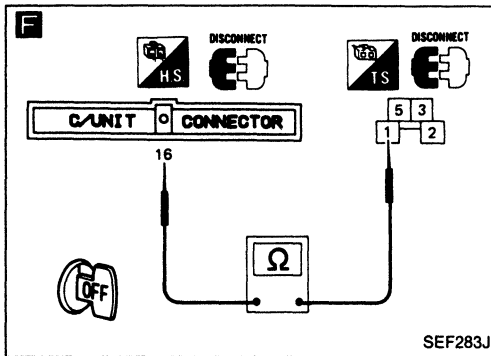

**F**

**CHECK OUTPUT SIGNAL CIRCUIT.**  
 1) Check harness continuity between E.C.U. terminal ⑯ and terminal ①.  
**Continuity should exist.**

N.G. → Repair harness or connectors.

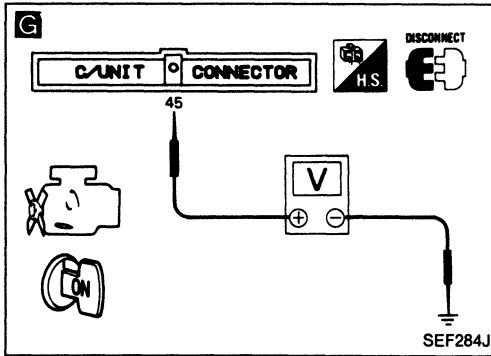

**G**

**CHECK INPUT SIGNAL CIRCUIT.**  
 1) Turn ignition switch "ON".  
 2) Check voltage between E.C.U. terminal ④⑤ and ground.  
**Voltage: Battery voltage**

N.G. → Check the following.

- Harness connectors (F27), (M49)
- Harness continuity between E.C.U. and ignition switch

If N.G., repair harness or connectors.

**CHECK COMPONENT (E.C.C.S. relay).**  
 Refer to "Electrical Components Inspection". (See page EF & EC-176.)

N.G. → Replace E.C.C.S. relay.

**Check E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.**

## TROUBLE DIAGNOSES


---

**NOTE**



# TROUBLE DIAGNOSES

## Diagnostic Procedure 23

### CRANK ANGLE SENSOR (Code No. 11)





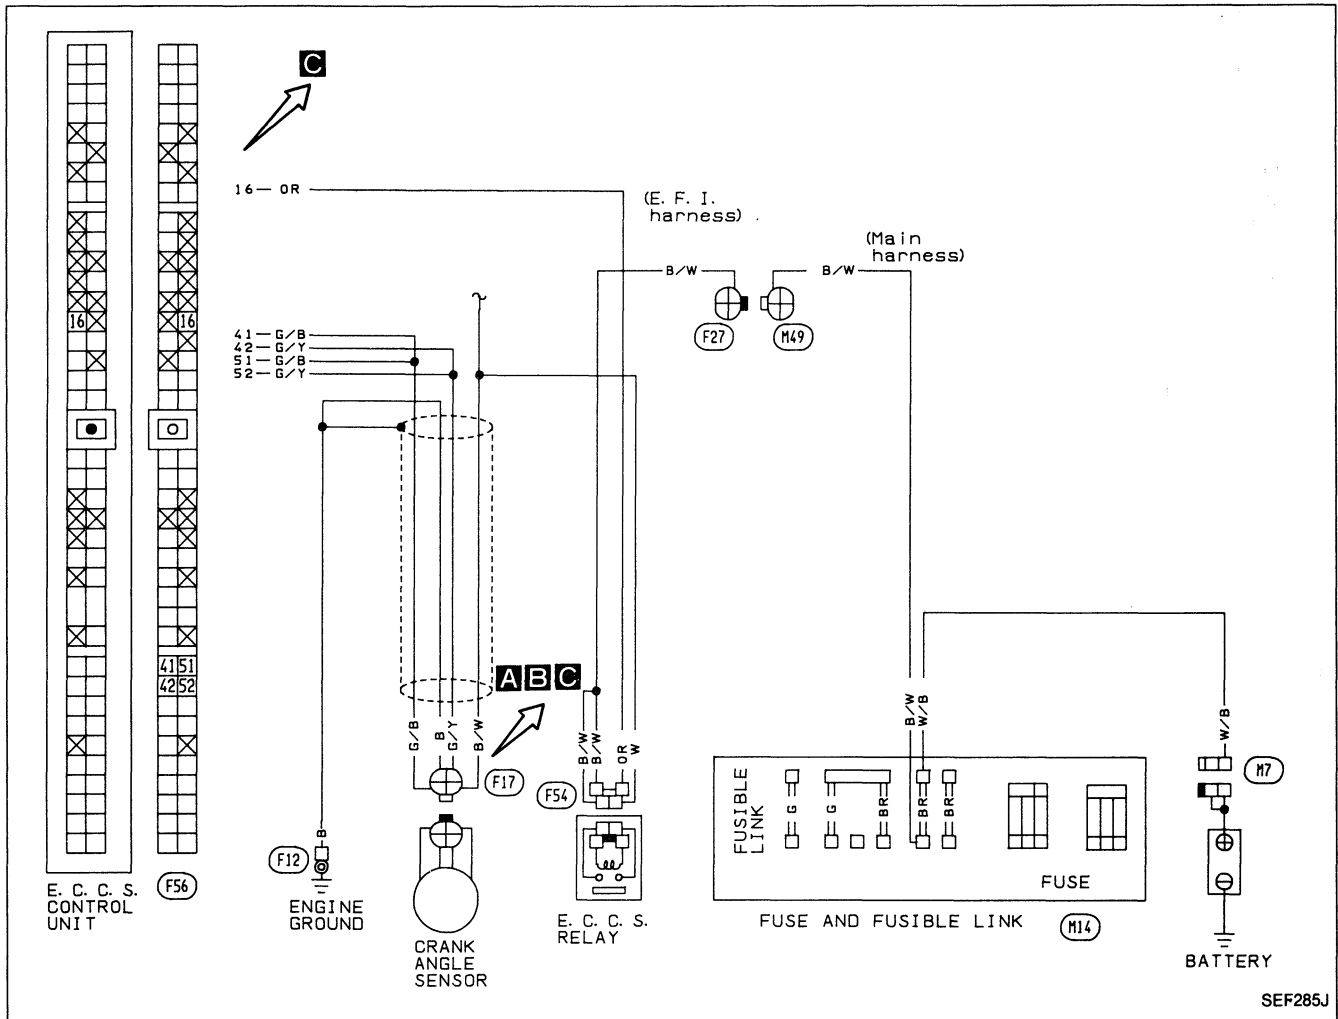


### Harness layout

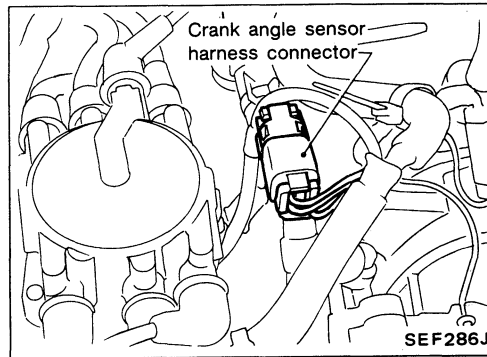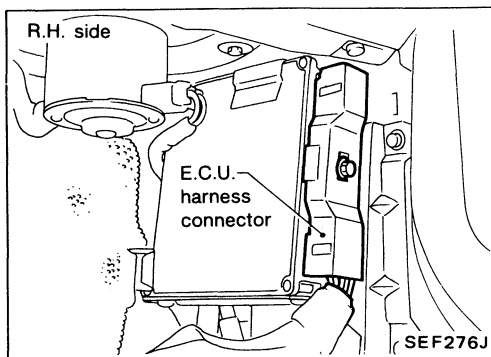

# TROUBLE DIAGNOSES


## Diagnostic Procedure 23 (Cont'd)

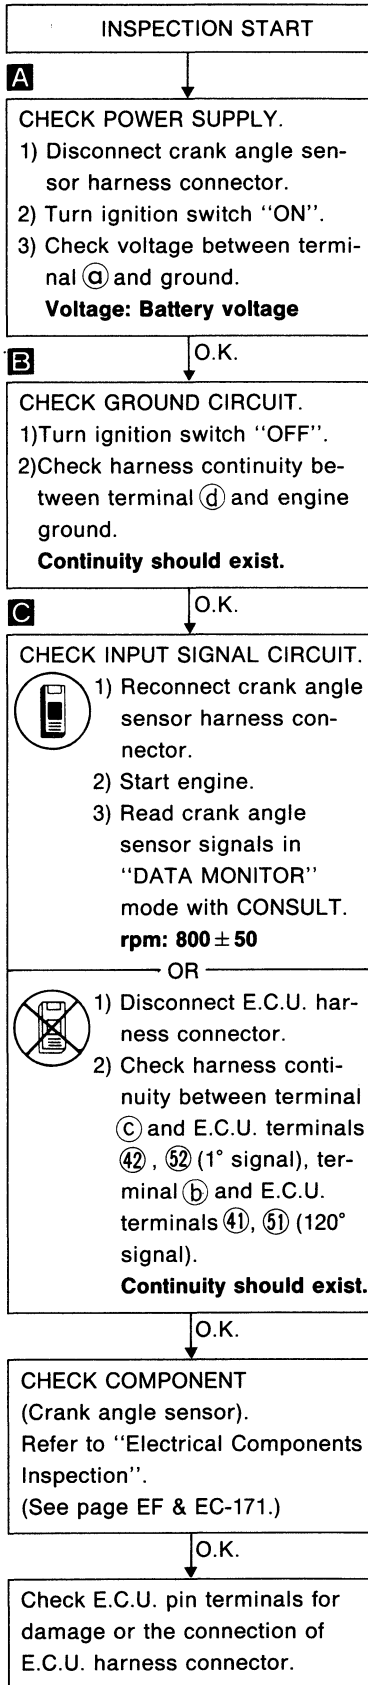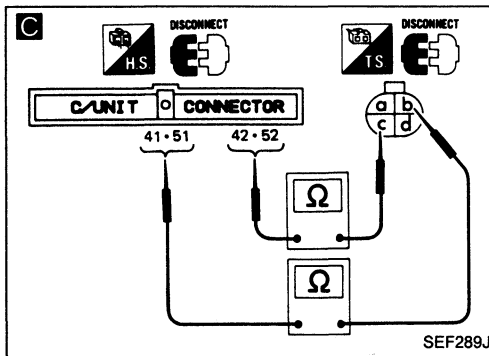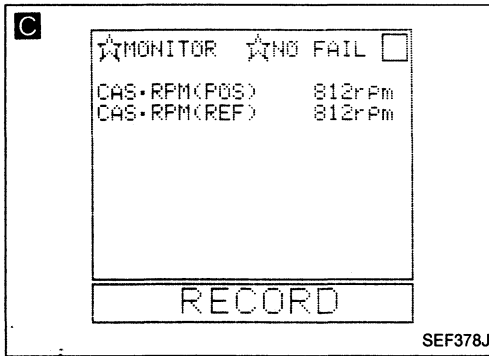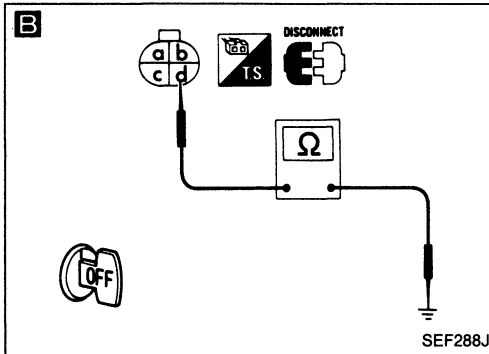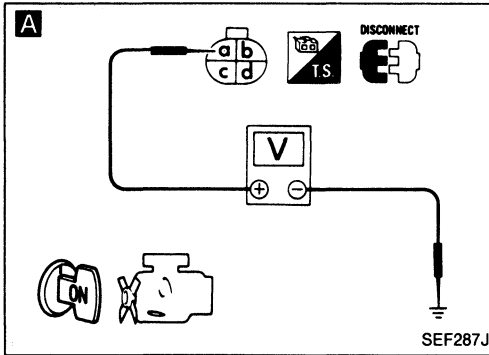

# TROUBLE DIAGNOSES

## Diagnostic Procedure 23 (Cont'd)

Perform FINAL CHECK by the following procedure after repair is completed.

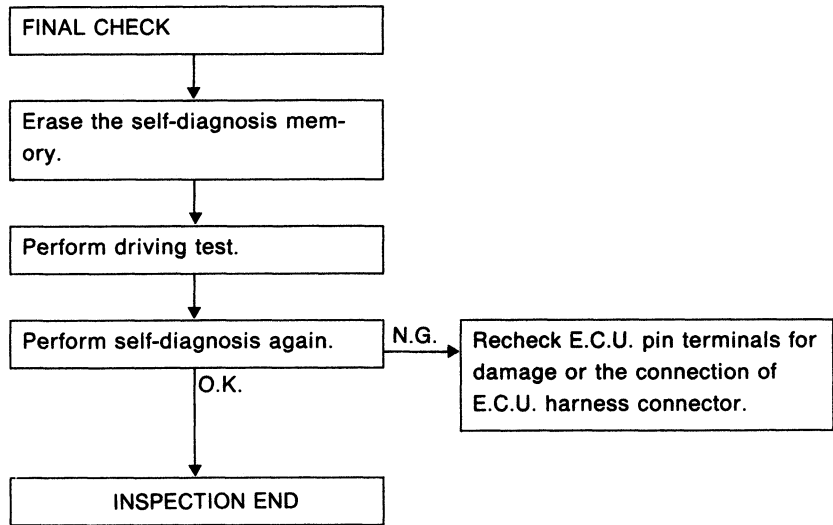



# TROUBLE DIAGNOSES


---

## NOTE



# TROUBLE DIAGNOSES

## Diagnostic Procedure 24

### AIR FLOW METER (Code No. 12) (CHECK ENGINE LIGHT ITEM)

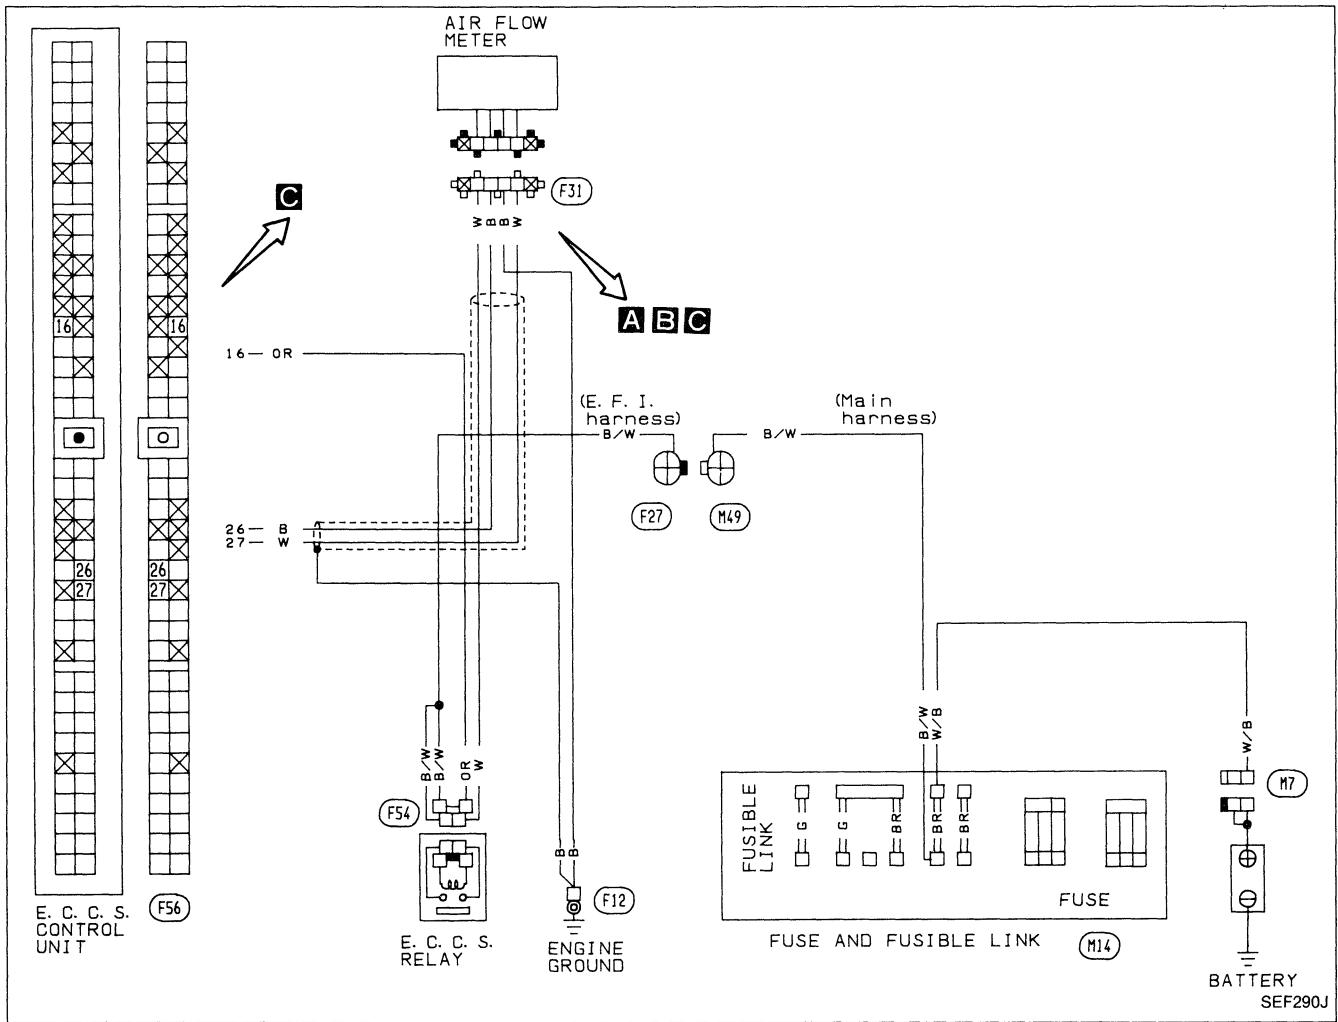


### Harness layout

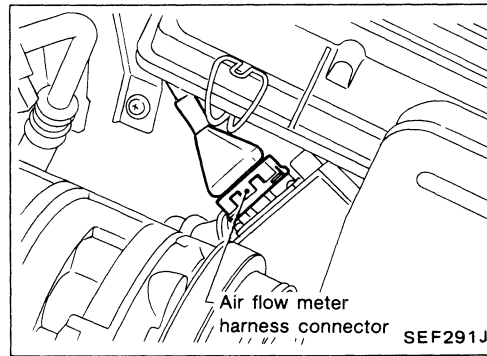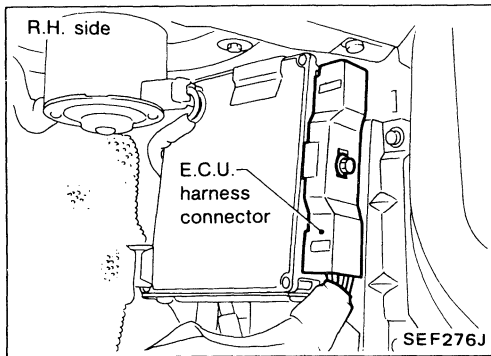

# TROUBLE DIAGNOSES

## Diagnostic Procedure 24 (Cont'd)

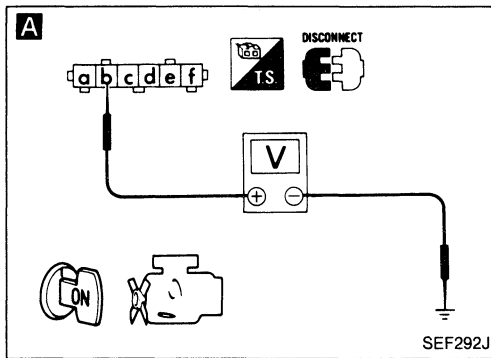

INSPECTION START

**A**

CHECK POWER SUPPLY.


- 1) Disconnect air flow meter harness connector.
- 2) Turn ignition switch "ON".
- 3) Check voltage between terminal (b) and ground.

**Voltage: Battery voltage**

N.G. → Check the following.

- Harness continuity between air flow meter and E.C.C.S. relay

If N.G., repair harness or connectors.

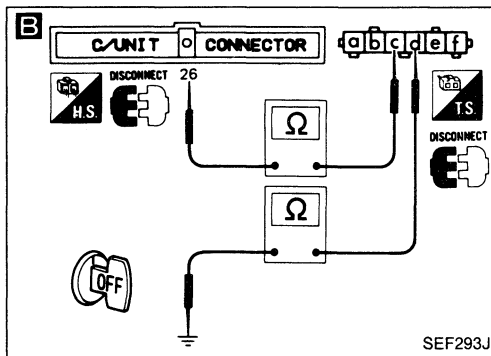


**B**

CHECK GROUND CIRCUIT.

- 1) Turn ignition switch "OFF".
- 2) Disconnect E.C.U. harness connector.
- 3) Check harness continuity between terminal (c) and E.C.U. terminal (26), terminal (d) and body ground.

**Continuity should exist.**

N.G. → Repair harness or connectors.

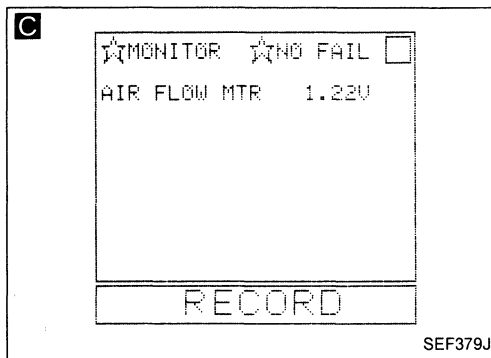


**C**

CHECK INPUT SIGNAL CIRCUIT.

- 1) Reconnect air flow meter harness connector and E.C.U. harness connector.
- 2) Start engine and warm it up sufficiently.
- 3) Read air flow meter signal in "DATA MONITOR" mode with CONSULT.

**Voltage: 1.0 - 1.5V**

N.G. → Repair harness or connectors.

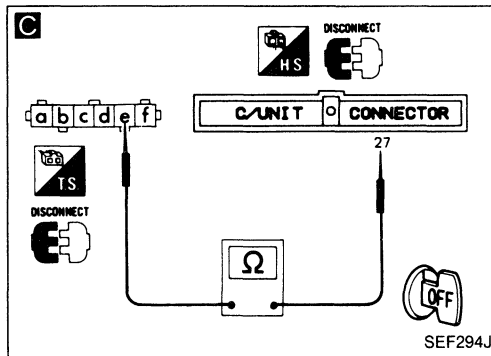

OR

- 1) Check harness continuity between terminal (e) and E.C.U. terminal (27).

**Continuity should exist.**

**CHECK COMPONENT**  
(Air flow meter).  
Refer to "Electrical Components Inspection".  
(See page EF & EC-171.)


N.G. → Replace air flow meter.

Check E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.

# TROUBLE DIAGNOSES

## Diagnostic Procedure 24 (Cont'd)

Perform FINAL CHECK by the following procedure after repair is completed.

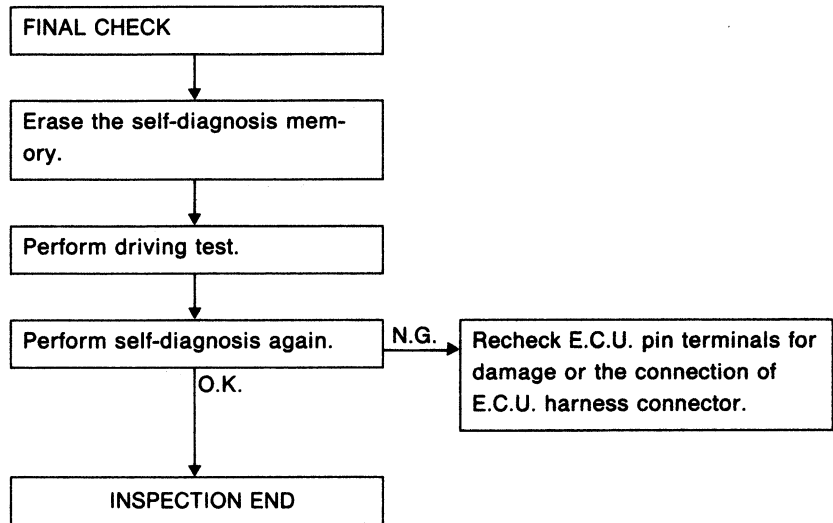

# **TROUBLE DIAGNOSES**


---

**NOTE**



# TROUBLE DIAGNOSES

## Diagnostic Procedure 25

### ENGINE TEMPERATURE SENSOR (Code No. 13) (CHECK ENGINE LIGHT ITEM)




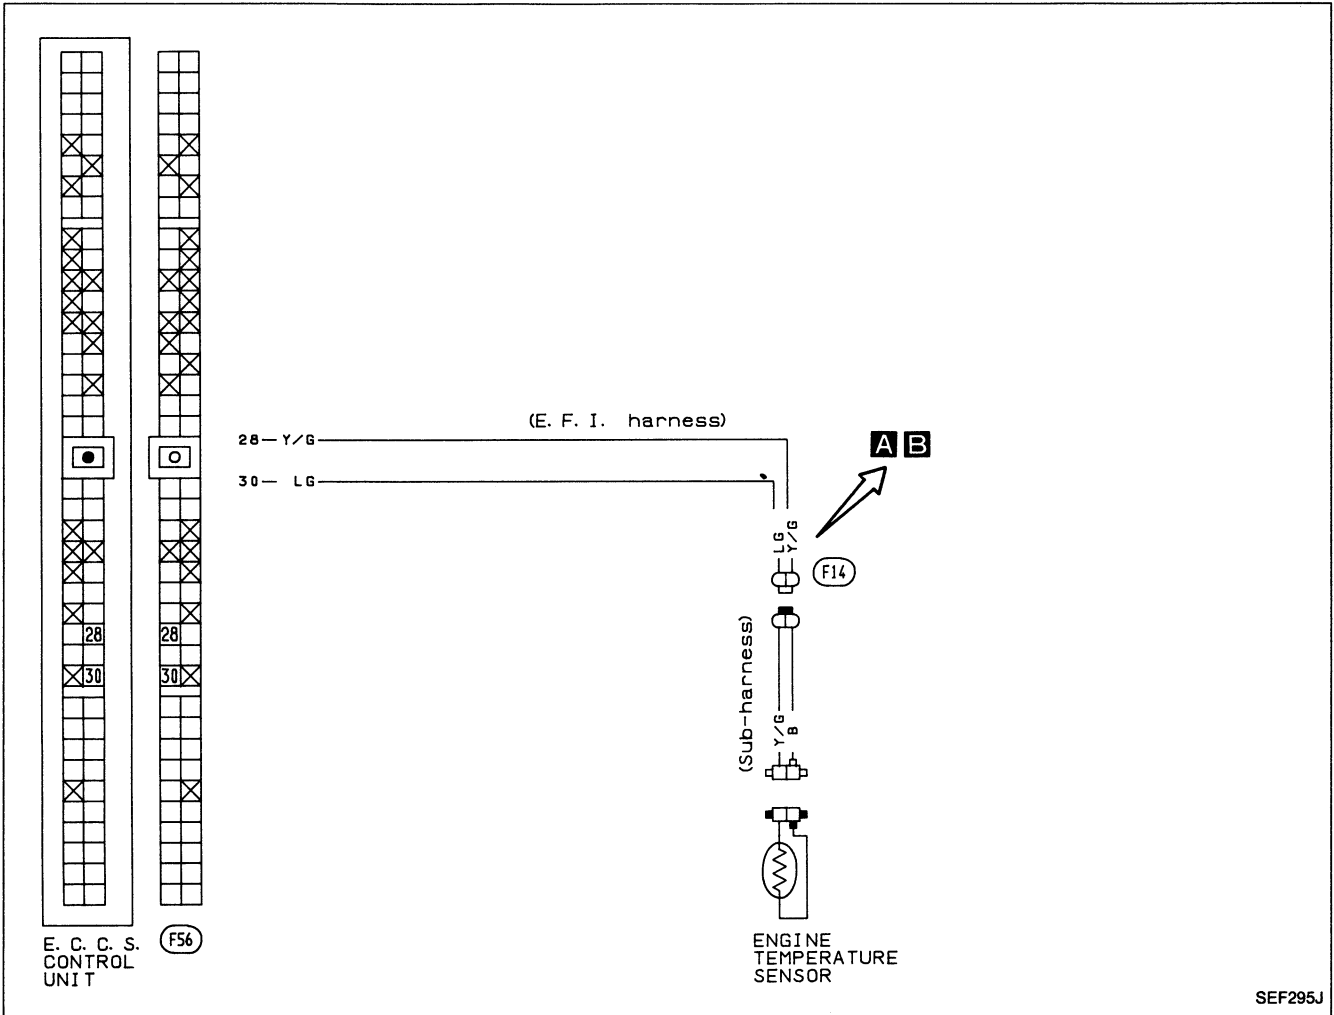


### Harness layout

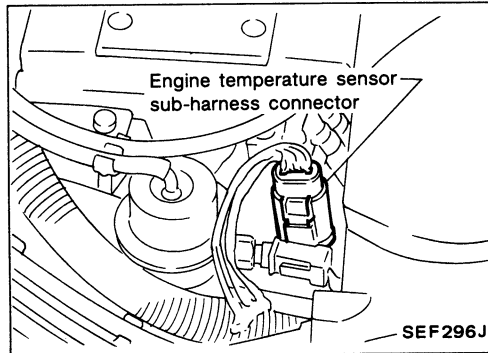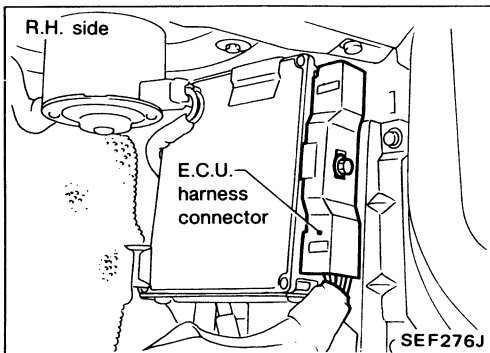

# TROUBLE DIAGNOSES


## Diagnostic Procedure 25 (Cont'd)

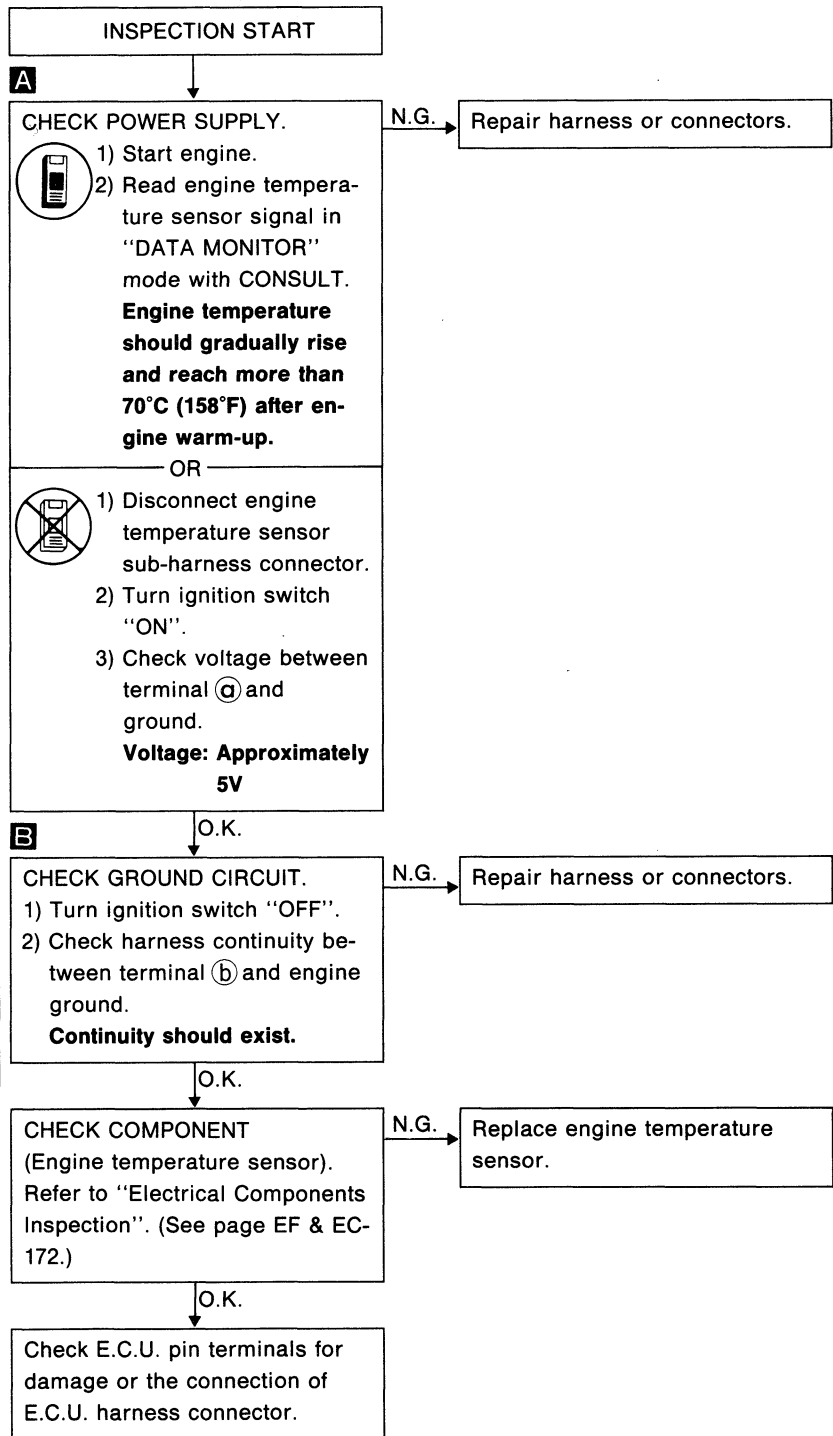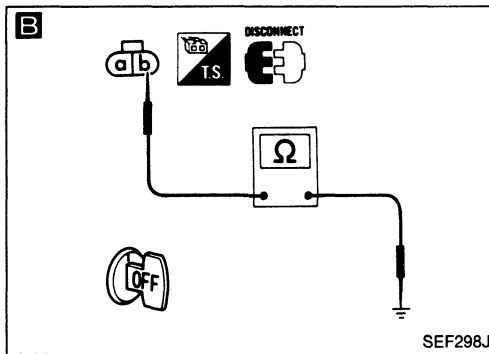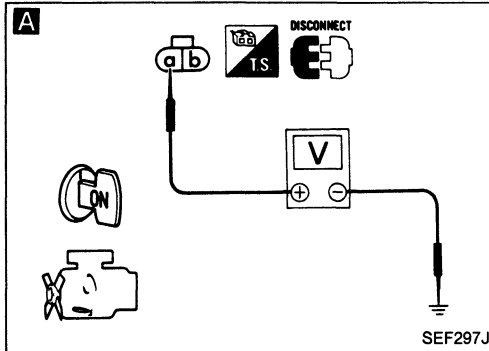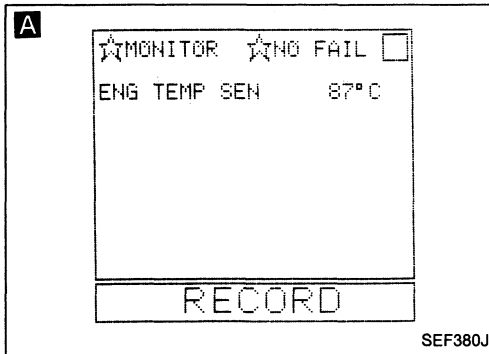

# TROUBLE DIAGNOSES

## Diagnostic Procedure 25 (Cont'd)

Perform FINAL CHECK by the following procedure after repair is completed.

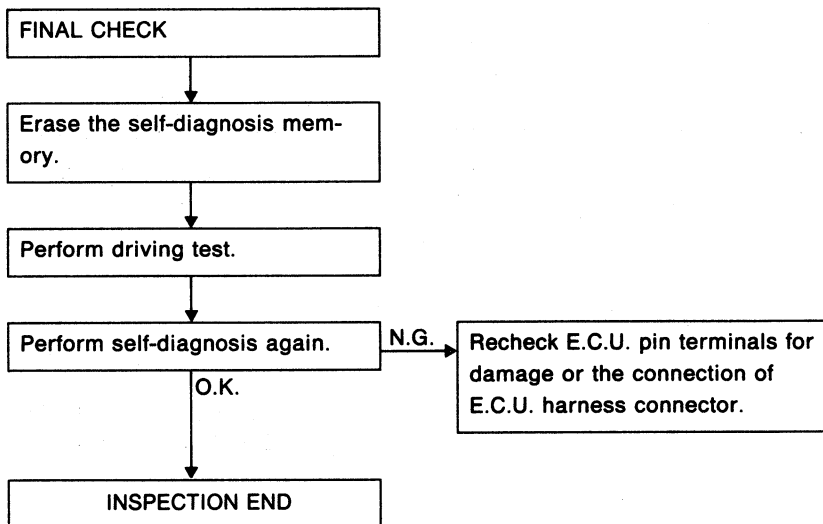



**TROUBLE DIAGNOSES**


---

**NOTE**

# TROUBLE DIAGNOSES


## Diagnostic Procedure 26

### VEHICLE SPEED SENSOR (Code No. 14) (CHECK ENGINE LIGHT ITEM)

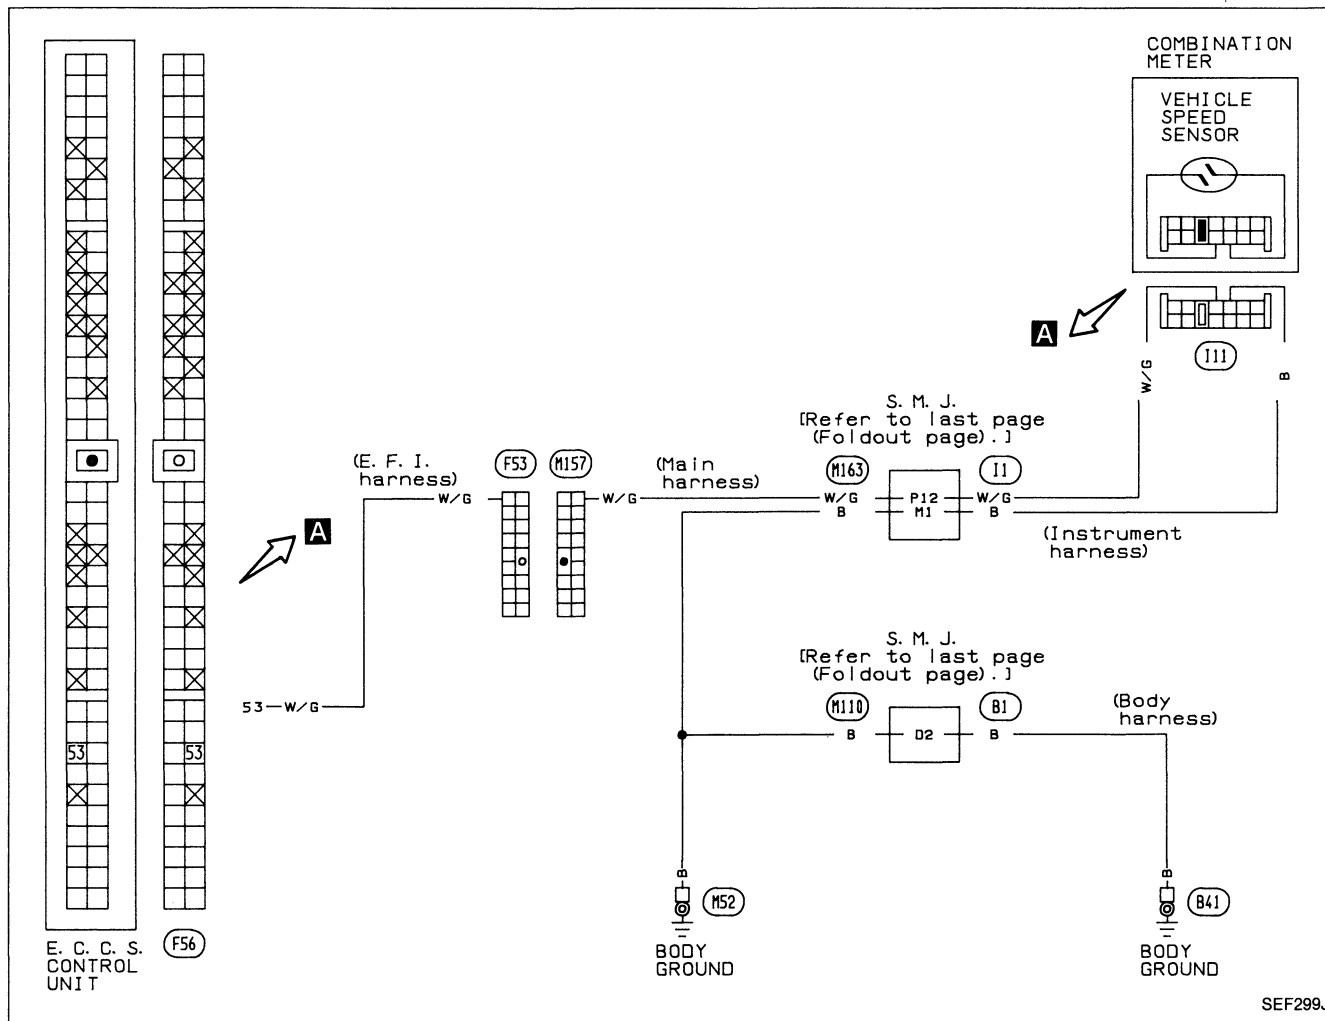





SEF299J

### Harness layout

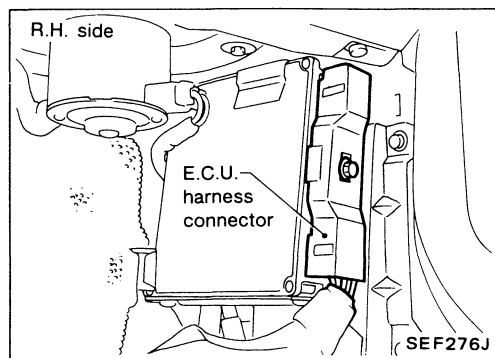


# TROUBLE DIAGNOSES


## Diagnostic Procedure 26 (Cont'd)

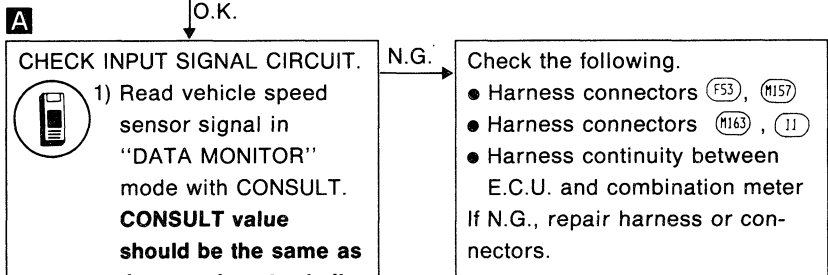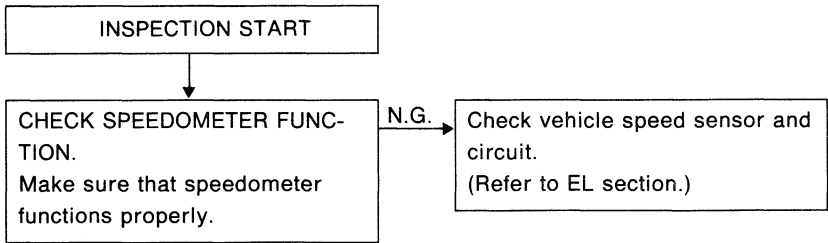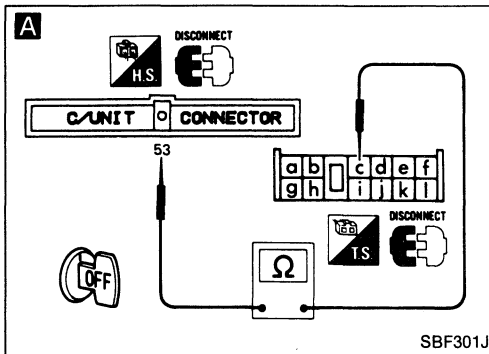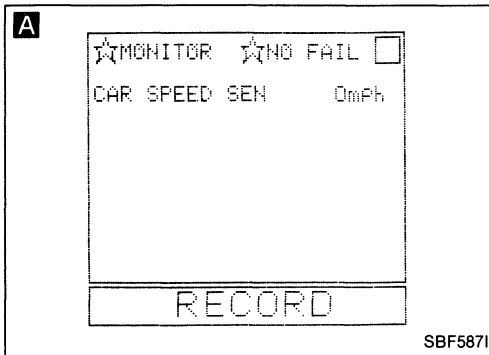

- CONSULT value should be the same as the speedometer indication.**
- OR
- 1) Turn ignition switch "OFF".
  - 2) Disconnect E.C.U. harness connector and combination meter harness connector.
  - 3) Check harness continuity between E.C.U. terminal (53) and terminal (C).  
**Continuity should exist.**

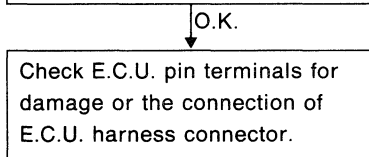


**Perform FINAL CHECK by the following procedure after repair is completed.**

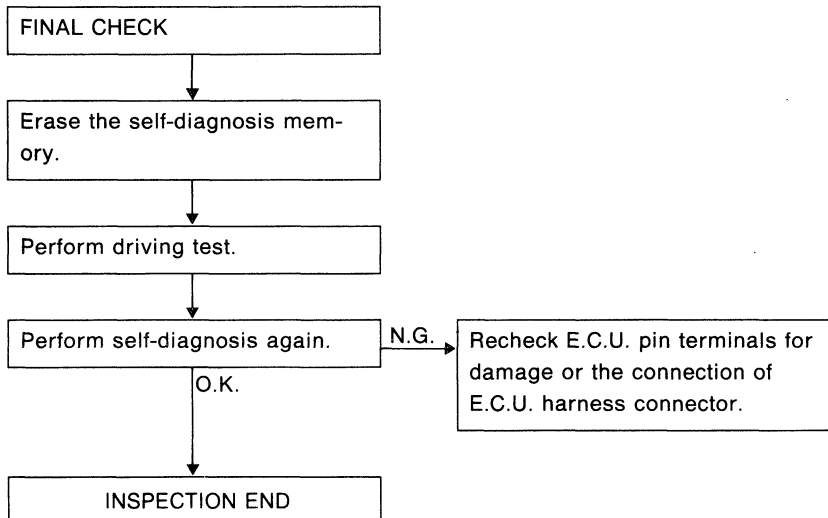

# TROUBLE DIAGNOSES




## Diagnostic Procedure 27

### IGNITION SIGNAL (Code No. 21)

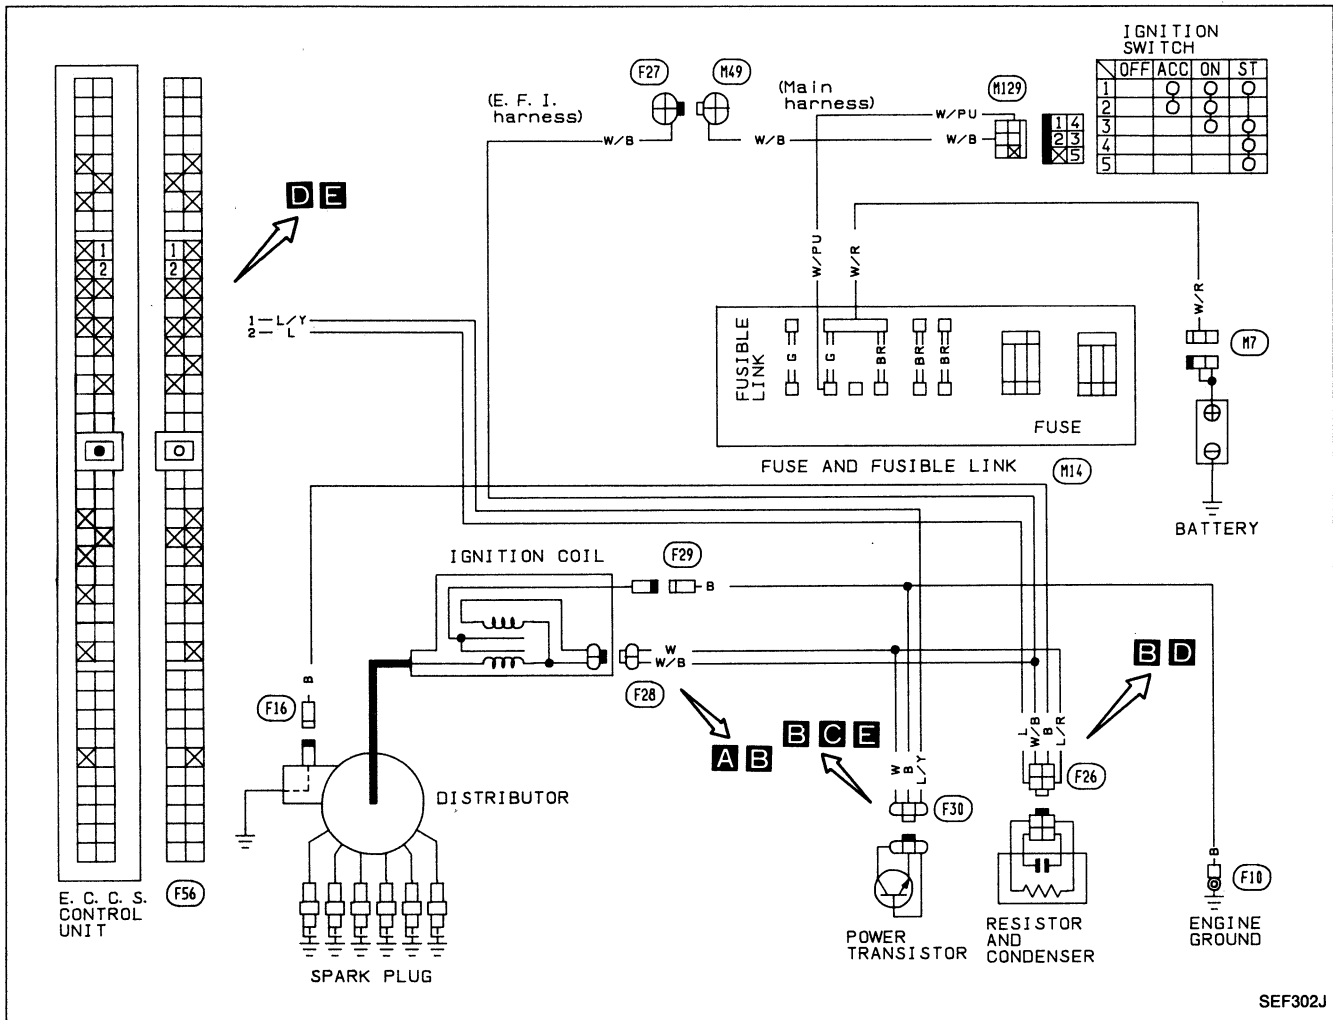


SEF302J

### Harness layout

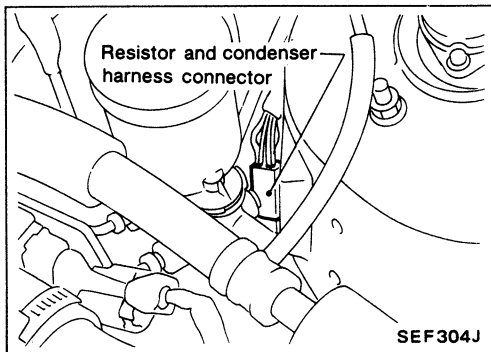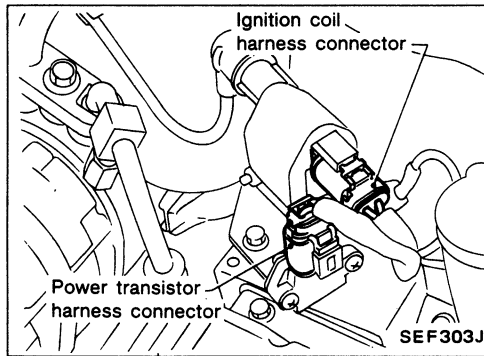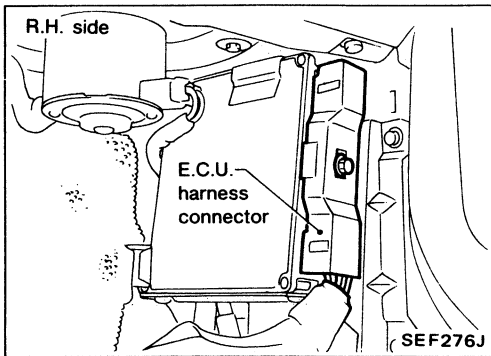

# TROUBLE DIAGNOSES

## Diagnostic Procedure 27 (Cont'd)

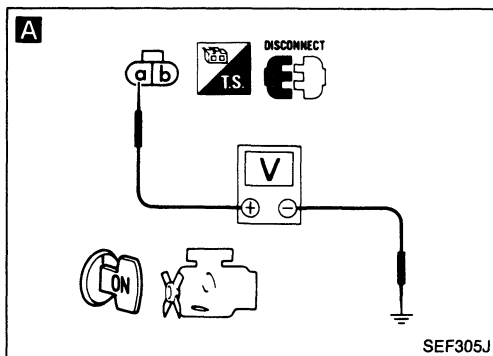

INSPECTION START

**A** CHECK POWER SUPPLY.


- 1) Disconnect ignition coil harness connector.
- 2) Turn ignition switch "ON".
- 3) Check voltage between terminal (a) and ground.

**Voltage: Battery voltage**

N.G. → Check the following.

- Harness connectors (F27), (M49)
- Harness continuity between ignition coil and ignition switch

If N.G., repair harness or connectors.

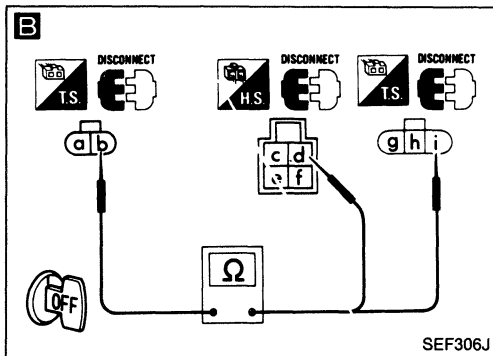


O.K. →

**B** CHECK GROUND CIRCUIT.

- 1) Turn ignition switch "OFF".
- 2) Disconnect resistor and condenser harness connector.
- 3) Disconnect power transistor harness connector.
- 4) Check harness continuity between terminal (b) and (d), (i).
- 5) Check harness continuity between terminal (h) and engine ground.

**Continuity should exist.**

N.G. → Repair harness or connectors.

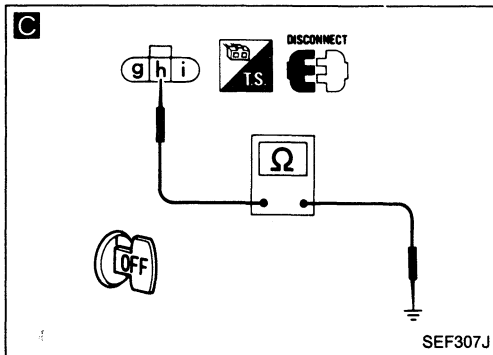


O.K. →

**D** CHECK INPUT SIGNAL CIRCUIT.

- 1) Disconnect E.C.U. harness connector.
- 2) Check harness continuity between terminal (c) and E.C.U. terminal (2).

**Continuity should exist.**

N.G. → Repair harness or connectors.

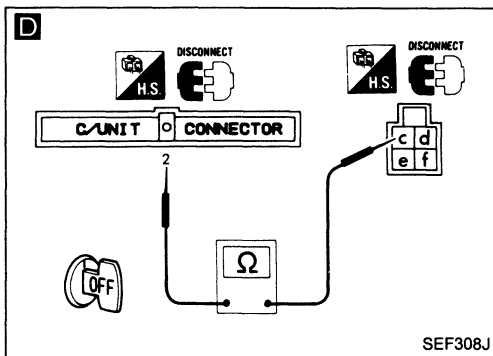


O.K. →

**E** CHECK OUTPUT SIGNAL CIRCUIT.

- 1) Check harness continuity between terminal (g) and E.C.U. terminal (1).

**Continuity should exist.**

N.G. → Repair harness or connectors.

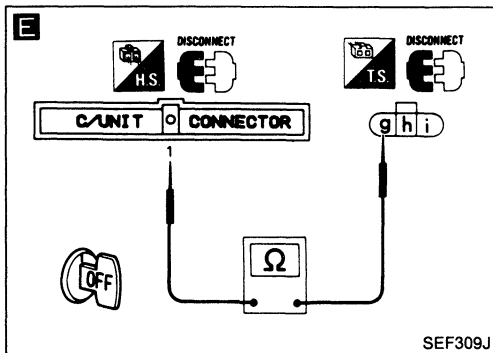

O.K. →

**CHECK COMPONENTS** (Ignition coil, resistor and condenser, power transistor). Refer to "Electrical Components Inspection". (See pages EF & EC-172, 177.)

N.G. → Replace malfunctioning component(s).


O.K. →

Check E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.

## TROUBLE DIAGNOSES

### Diagnostic Procedure 27 (Cont'd)

Perform FINAL CHECK by the following procedure after repair is completed.

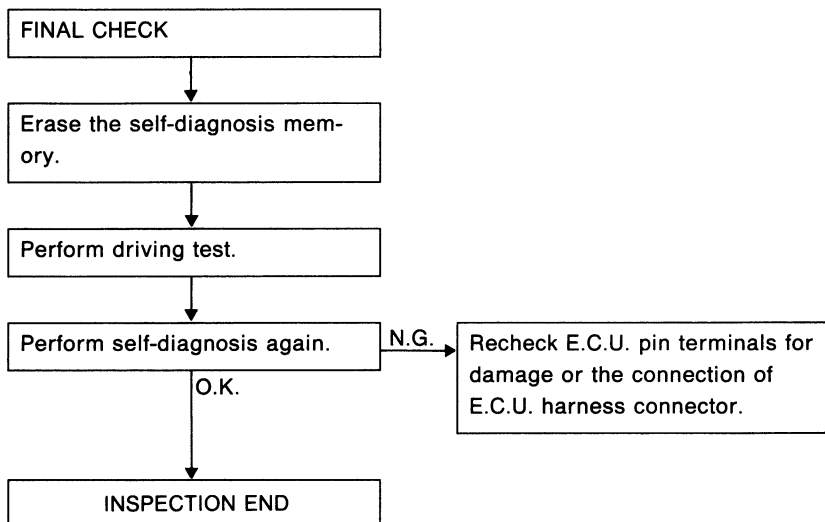

## **TROUBLE DIAGNOSES**

---




**NOTE**





# TROUBLE DIAGNOSES

## Diagnostic Procedure 28 (Cont'd)

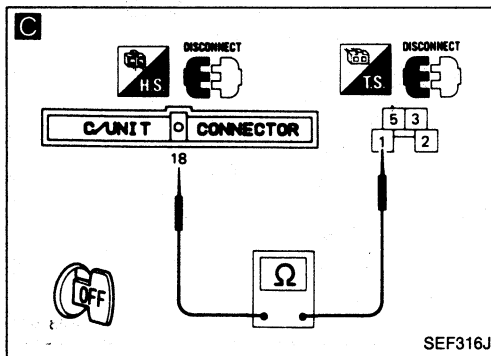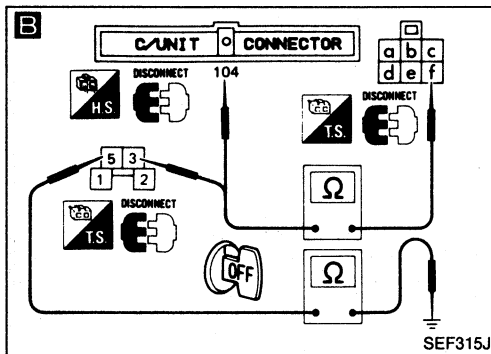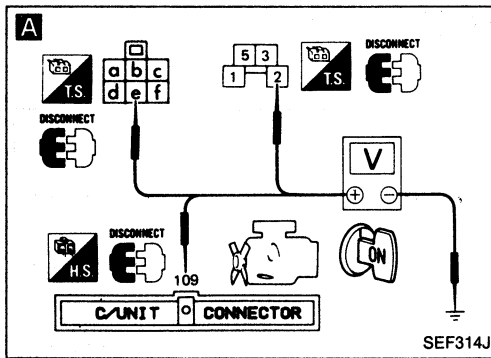

INSPECTION START

**A**  
**CHECK POWER SUPPLY.**  
 1) Disconnect E.C.U. harness connector, fuel pump harness connector and fuel pump relay.  
 2) Turn ignition switch "ON".  
 3) Check voltage between terminals ②, ②, E.C.U. terminal ⑩ and ground.  
**Voltage: Battery voltage**

N.G. → Check the following.  
 ● Harness connectors (M156), (F52)  
 ● Harness connectors (M110), (B1)  
 ● Harness continuity between safety relay and fuse  
 ● Harness continuity between safety relay and E.C.U., fuel pump, fuel pump relay  
 ● 10A fuse  
 If N.G., repair harness or connectors.

O.K. →

O.K. →  
**CHECK COMPONENT**  
 (Safety relay).  
 Refer to "Electrical Components Inspection".  
 (See page EF & EC-176.)  
 If N.G., replace safety relay.

**B**  
**CHECK GROUND CIRCUIT.**  
 1) Turn ignition switch "OFF".  
 2) Check harness continuity between terminal ① and E.C.U. terminal ⑩, terminal ① and ③, terminal ⑤ and body ground.  
**Continuity should exist.**

N.G. → Check the following.  
 ● Harness connectors (B1), (M110)  
 ● Harness connectors (M156), (F52)  
 ● Harness continuity between fuel pump and E.C.U., fuel pump and fuel pump relay, fuel pump relay and body ground  
 If N.G., repair harness or connectors.

O.K. →  
**C**  
**CHECK OUTPUT SIGNAL CIRCUIT.**  
 1) Check harness continuity between E.C.U. terminal ⑩ and terminal ①.  
**Continuity should exist.**

N.G. → Check the following.  
 ● Harness connectors (B1), (M110)  
 ● Harness connectors (M157), (F53)  
 ● Harness continuity between E.C.U. and fuel pump relay  
 If N.G., repair harness or connectors.

O.K. →  
**CHECK COMPONENT**  
 (Fuel pump relay).  
 Refer to "Electrical Components Inspection".  
 (See page EF & EC-176.)


N.G. → Replace fuel pump relay.

O.K. →  
 Check E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.

## TROUBLE DIAGNOSES

### Diagnostic Procedure 28 (Cont'd)

Perform FINAL CHECK by the following procedure after repair is completed.

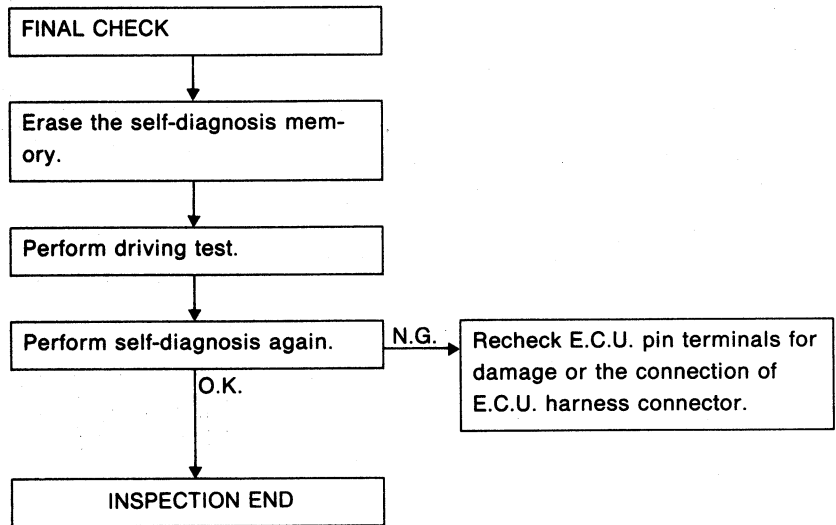


# TROUBLE DIAGNOSES


---

NOTE

# TROUBLE DIAGNOSES

## Diagnostic Procedure 29

E.C.C.S. CONTROL UNIT (Code No. 31)  (CHECK ENGINE LIGHT ITEM)

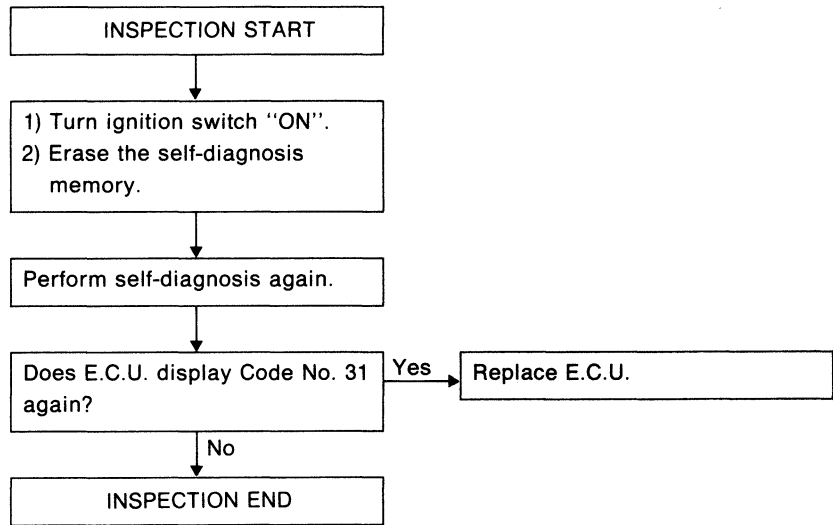

## TROUBLE DIAGNOSES

---


**NOTE**

# TROUBLE DIAGNOSES



## Diagnostic Procedure 30

E.G.R. FUNCTION (Code No. 32)  (CHECK ENGINE LIGHT ITEM): CALIFORNIA MODEL

E.G.R. CONTROL (Not self-diagnostic item): NON-CALIFORNIA MODEL

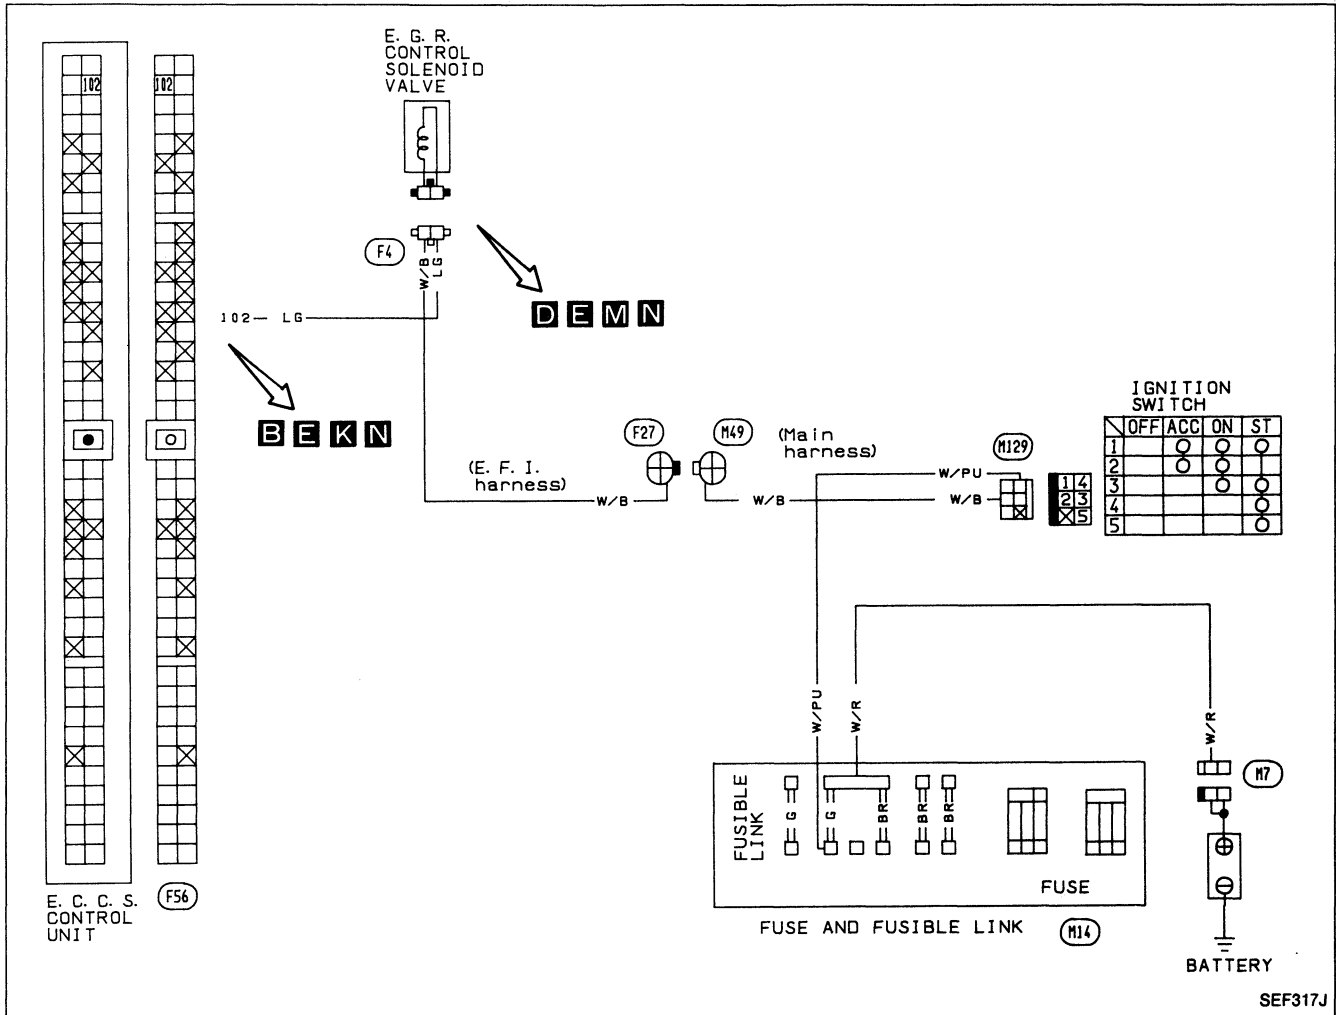


### Harness layout

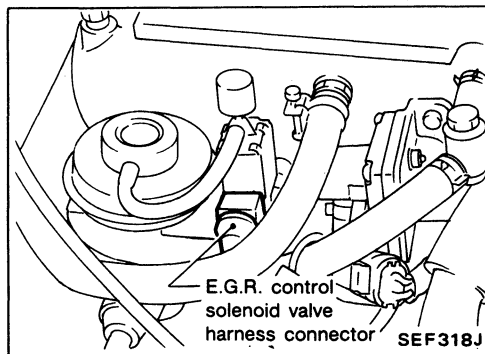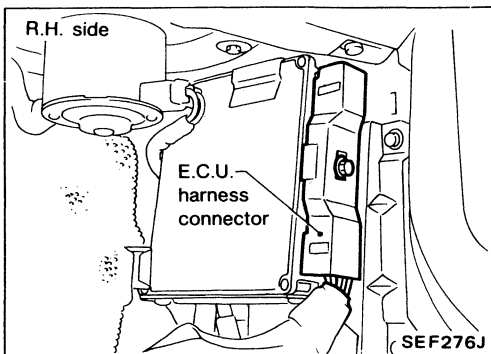

# TROUBLE DIAGNOSES

## Diagnostic Procedure 30 (Cont'd)

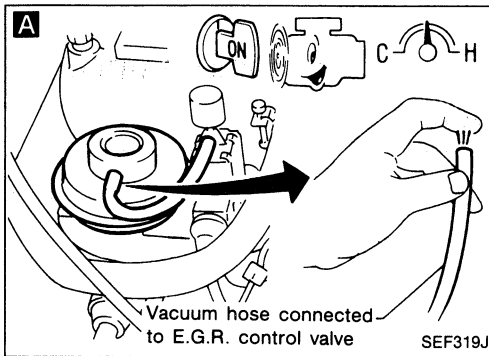

**California model**

INSPECTION START

**A**

CHECK VACUUM SOURCE TO E.G.R. CONTROL VALVE.


- 1) Start engine and warm it up sufficiently.
- 2) Perform self-diagnosis. Make sure that code No. 12 is not displayed. Make sure that both crank angle sensor and E.C.U.'s C.P.U. are not in "fail-safe" state.
- 3) Keep engine speed at 2,000 rpm.
- 4) Disconnect vacuum hose to E.G.R. control valve.
- 5) Make sure that vacuum exists.

**Vacuum should exist.**

O.K. → CHECK COMPONENTS (E.G.R. control valve and exhaust gas temperature sensor). Refer to "Electrical Components Inspection". (See page EF & EC-173.)

N.G. ↓

Replace malfunctioning component(s).

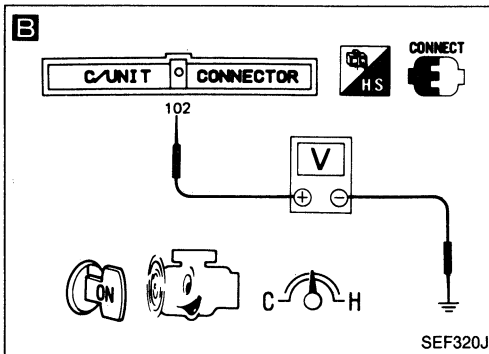

N.G. ↓

**B**

CHECK CONTROL FUNCTION.

- 1) Check voltage between E.C.U. terminal 102 and ground under the following conditions.

**Voltage:**


**At idle**  
0.7 - 0.8 V

**Engine speed is about**  
2,000 rpm

**Battery voltage**

O.K. → CHECK VACUUM HOSE.

- 1) Check vacuum hose for clogging, cracks and proper connection.

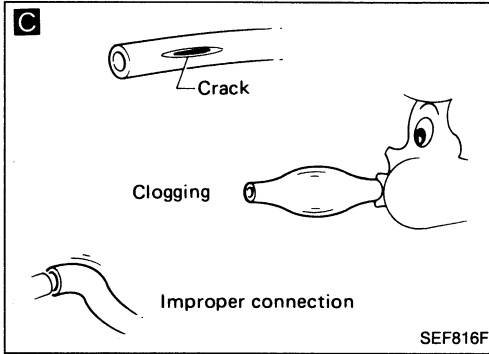

N.G. ↓

**D**

CHECK POWER SUPPLY.


- 1) Stop engine.
- 2) Disconnect E.G.R. control solenoid valve harness connector.
- 3) Turn ignition switch "ON".
- 4) Check voltage between terminal ⓐ and ground.

**Voltage: Battery voltage**

N.G. → Check the following.


- Harness connectors (F27), (H49)
- Harness continuity between E.G.R. control solenoid valve and ignition switch

If N.G., repair harness or connectors.

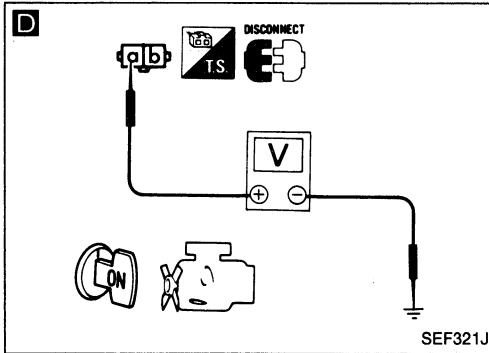



O.K. ↓

**A**

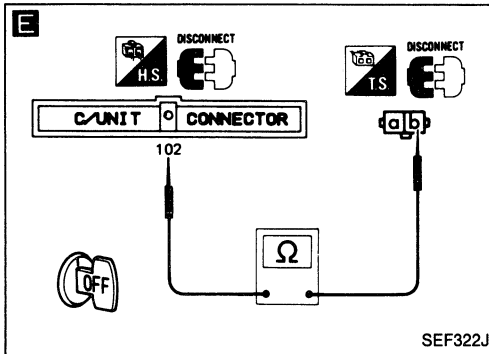

# TROUBLE DIAGNOSES

## Diagnostic Procedure 30 (Cont'd)

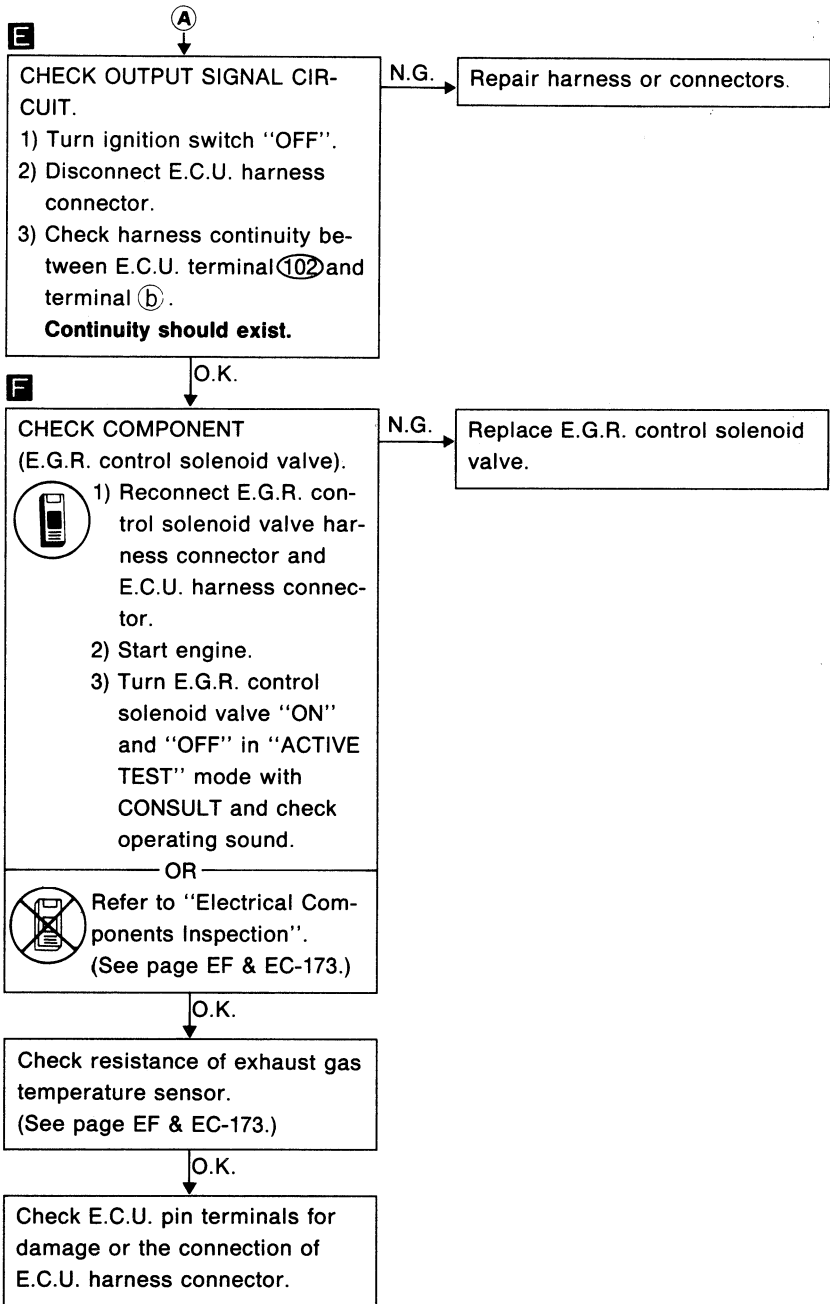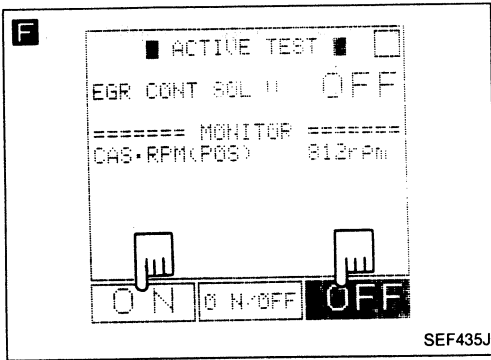



# TROUBLE DIAGNOSES

## Diagnostic Procedure 30 (Cont'd)


### **G** ROAD TEST

#### Test condition

Drive vehicle under the following conditions with a suitable shift position.

- (1) Engine speed:  
2,150±450 rpm
- (2) Intake manifold vacuum:  
-32.0±6.7 kPa  
(-240±50 mmHg, -9.45±1.97 inHg)

#### Driving mode

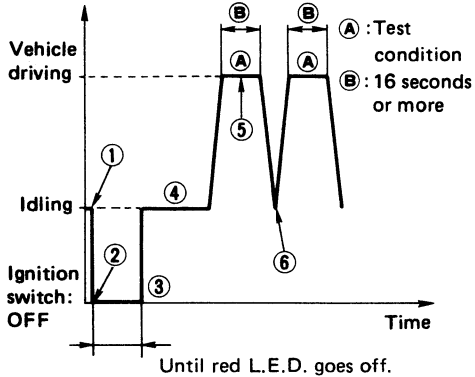

SEF302H

Perform FINAL CHECK by the following procedure after repair is completed.

FINAL CHECK

Erase the self-diagnosis memory.

**G** Perform driving test under the following conditions.  
1) Warm up engine sufficiently.  
2) Use test driving modes indicated in figure **G**.

**H** Make sure that check engine light does not come on during driving test.


Comes on

Recheck E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.

Does not come on

INSPECTION END

### **H**





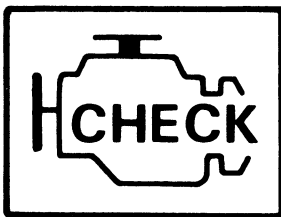


CHECK ENGINE LIGHT

SEF924F

# TROUBLE DIAGNOSES

## Diagnostic Procedure 30 (Cont'd)

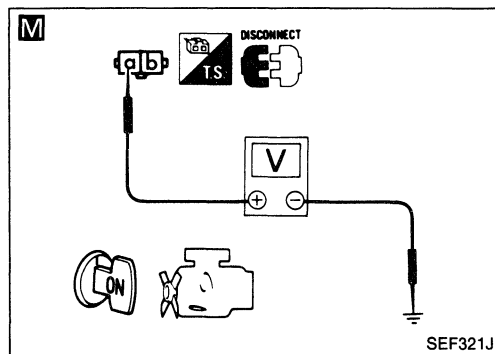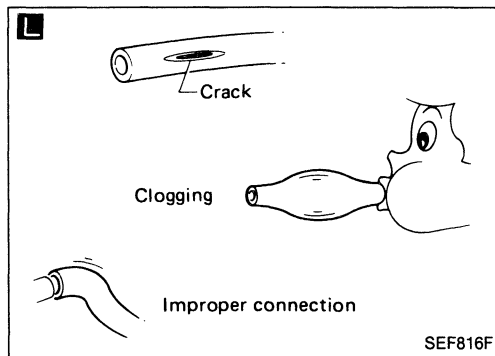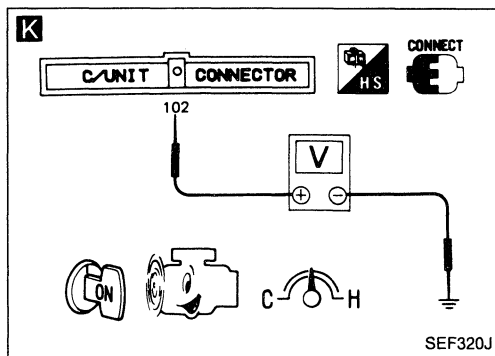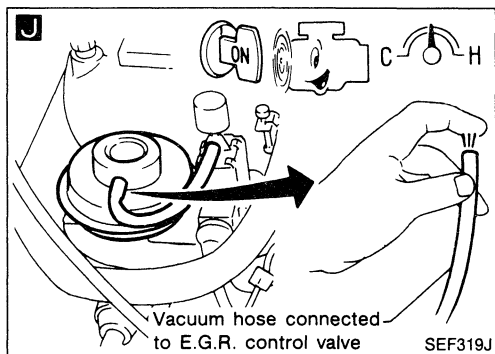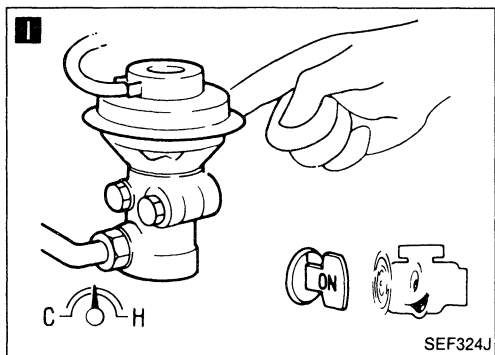

Non-California model

INSPECTION START

**I** CHECK OVERALL FUNCTION.  
 1) Start engine and warm it up sufficiently.  
 2) Perform self-diagnosis.  
 Make sure that code No. 12 is not displayed.  
 Make sure that both crank angle sensor and E.C.U.'s C.P.U. are not in "fail-safe" state.  
 3) Make sure that E.G.R. control valve spring is lifted up and down when racing engine.  
 (Use your finger.)

Is lifted up and down

INSPECTION END

Is not lifted up and down

**J** CHECK VACUUM SOURCE TO E.G.R. CONTROL VALVE.  
 1) Disconnect vacuum hose to E.G.R. control valve.  
 2) Make sure that vacuum exists under the following conditions.  
**At idle:**  
 Vacuum should exist.  
**Engine speed is about 2,000 rpm:**  
 Vacuum should not exist.

O.K.

**K** CHECK COMPONENT (E.G.R. control valve).  
 Refer to "Electrical Components Inspection".  
 (See page EF & EC-173.)

N.G.

Replace malfunctioning component(s).

N.G.

**K** CHECK CONTROL FUNCTION.  
 1) Check voltage between E.C.U. terminal (102) and ground under the following conditions.  
**Voltage:**  
**At idle**  
 0.7 - 0.8V  
**Engine speed is about 2,000 rpm**  
**Battery voltage**

O.K.


**L** CHECK VACUUM HOSE.  
 1) Check vacuum hose for clogging, cracks and proper connection.

N.G.

(A)

# TROUBLE DIAGNOSES

## Diagnostic Procedure 30 (Cont'd)

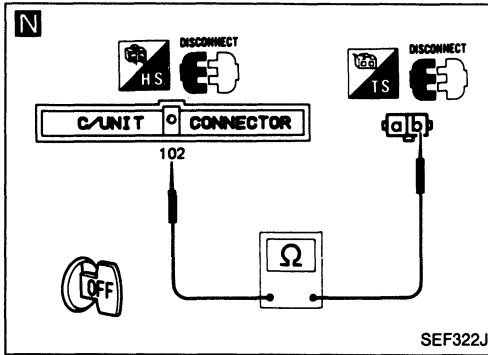

**M**

**CHECK POWER SUPPLY.**


- 1) Stop engine.
- 2) Disconnect E.G.R. control solenoid valve harness connector.
- 3) Turn ignition switch "ON".
- 4) Check voltage between terminal **a** and ground.

**Voltage: Battery voltage**

N.G. → Check the following.

- Harness connectors (F27, H49)
- Harness continuity between E.G.R. control solenoid valve and ignition switch

If N.G., repair harness or connectors.

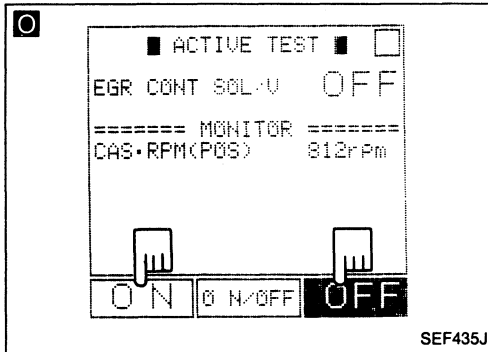

**N**

**CHECK OUTPUT SIGNAL CIRCUIT.**

- 1) Turn ignition switch "OFF".
- 2) Disconnect E.C.U. harness connector.
- 3) Check harness continuity between E.C.U. terminal **102** and terminal **b**.

**Continuity should exist.**


N.G. → Repair harness or connectors.

**O**

**CHECK COMPONENT (E.G.R. control solenoid valve).**

- 1) Reconnect E.G.R. control solenoid valve harness connector and E.C.U. harness connector.
- 2) Start engine.
- 3) Turn E.G.R. control solenoid valve "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT and check operating sound.

OR

 Refer to "Electrical Components Inspection". (See page EF & EC-173.)

N.G. → Replace E.G.R. control solenoid valve.


O.K. →

Check E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.



# TROUBLE DIAGNOSES

## Diagnostic Procedure 31

### EXHAUST GAS SENSOR (Code No. 33)




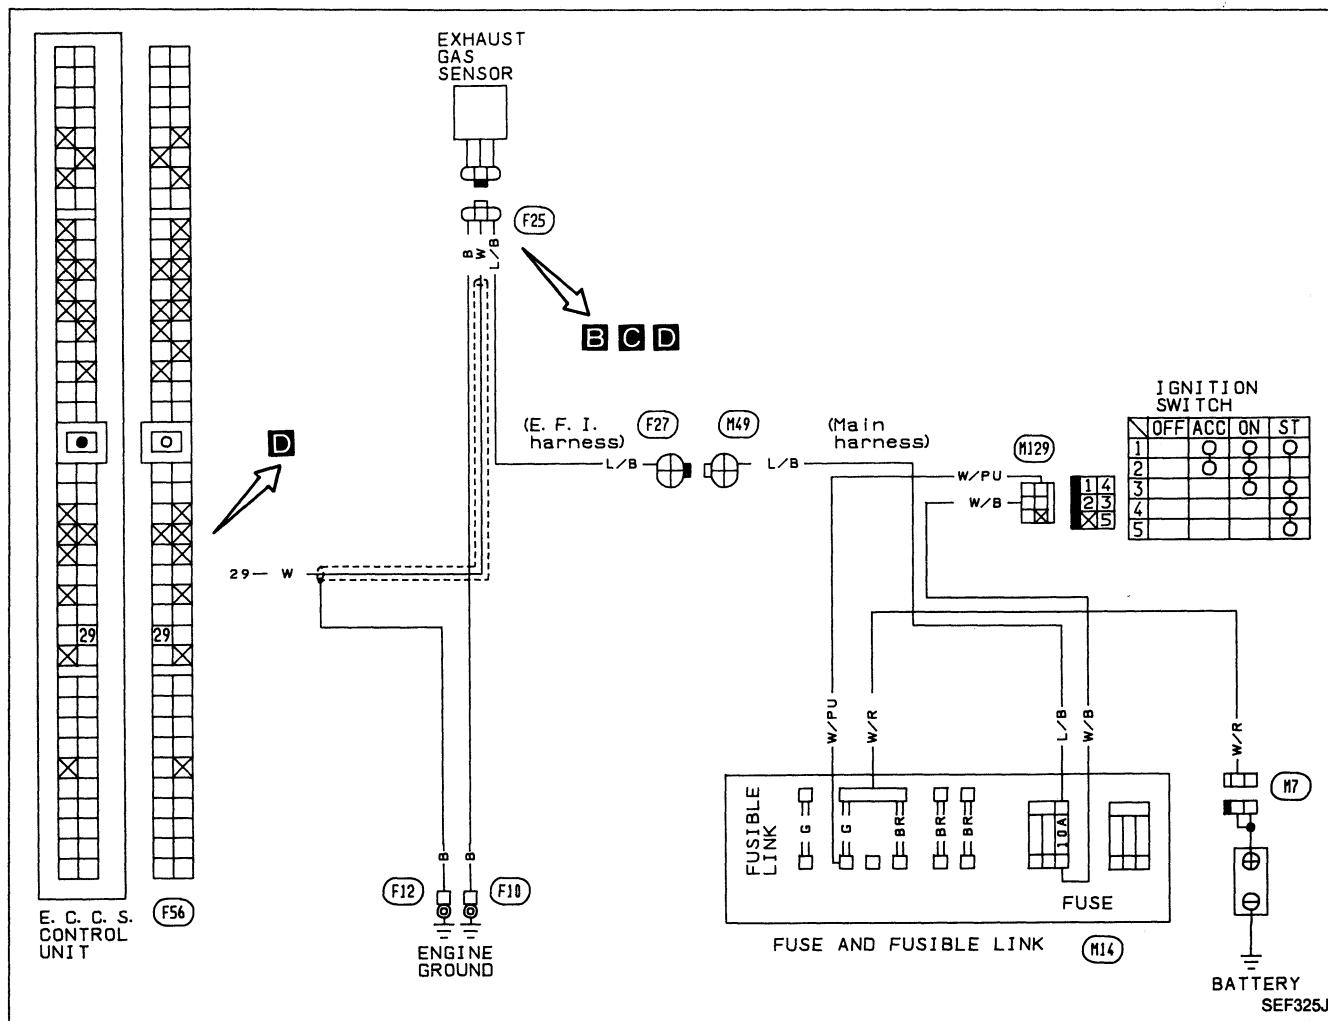


### Harness layout

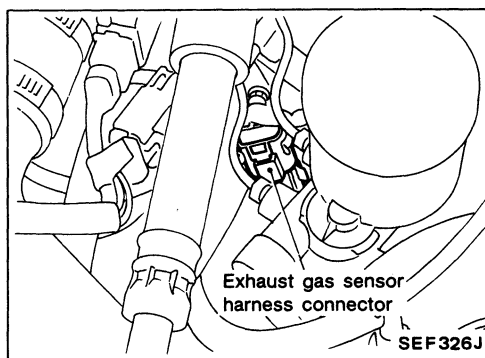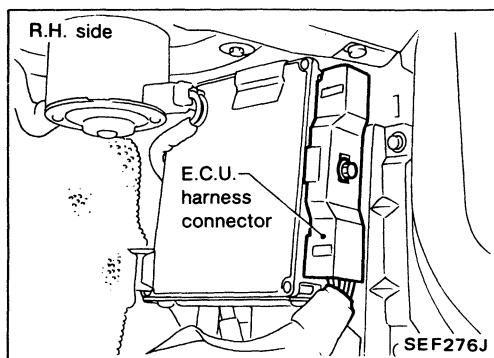

# TROUBLE DIAGNOSES

## Diagnostic Procedure 31 (Cont'd)

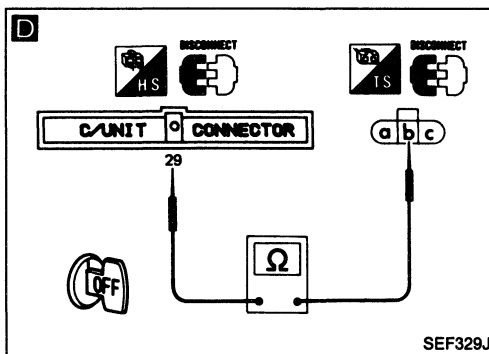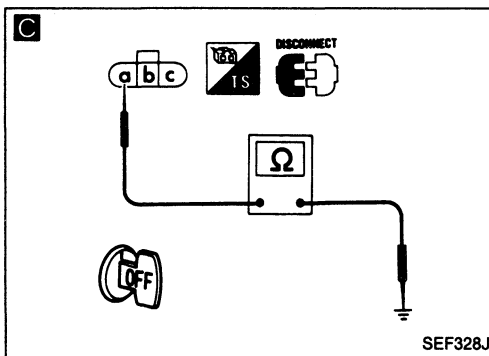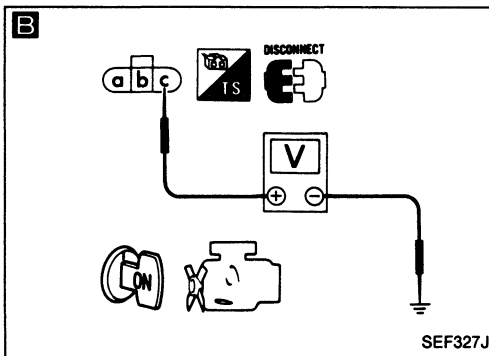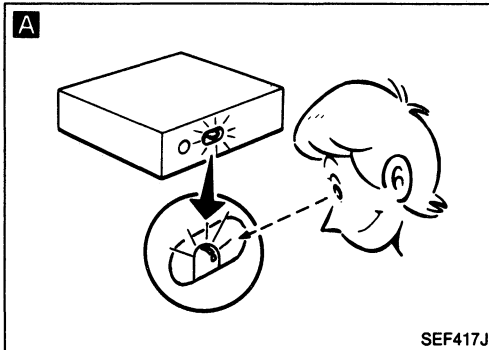

INSPECTION START

**A**

**CHECK EXHAUST GAS SENSOR CIRCUIT.**

1) Start engine and warm it up sufficiently.

2) Make sure that "M/R F/C MNT" in "DATA MONITOR" mode indicates "RICH" and "LEAN" periodically more than 5 times during 10 seconds at 2,000 rpm.

O.K. → INSPECTION END

OR

1) Start engine and warm it up sufficiently.

2) Run engine at about 2,000 rpm for about 2 minutes under no-load.

3) Set E.C.U. diagnosis mode to Mode II.

4) Keep engine speed at 2,000 rpm and make sure that inspection lamp on E.C.U. goes on and off more than 5 times during 10 seconds.

N.G. ↓

**B**

**CHECK POWER SUPPLY.**

1) Disconnect exhaust gas sensor harness connector.

2) Turn ignition switch "ON".

3) Check voltage between terminal Ⓒ and ground.

**Voltage: Battery voltage**

N.G. →

Check the following.

- Harness connectors (F27), (H49)
- 10A fuse
- Harness continuity between exhaust gas sensor and ignition switch

If N.G., repair harness or connectors.

O.K. ↓

**C**

**CHECK GROUND CIRCUIT.**

1) Turn ignition switch "OFF".

2) Check harness continuity between terminal Ⓒ and engine ground.

**Continuity should exist.**


N.G. → Repair harness or connectors.

O.K. ↓


**A**

# TROUBLE DIAGNOSES

## Diagnostic Procedure 31 (Cont'd)

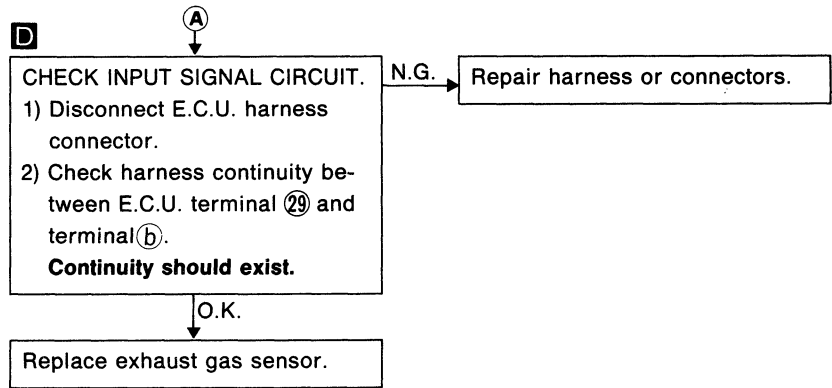

**Perform FINAL CHECK by the following procedure after repair is completed.**

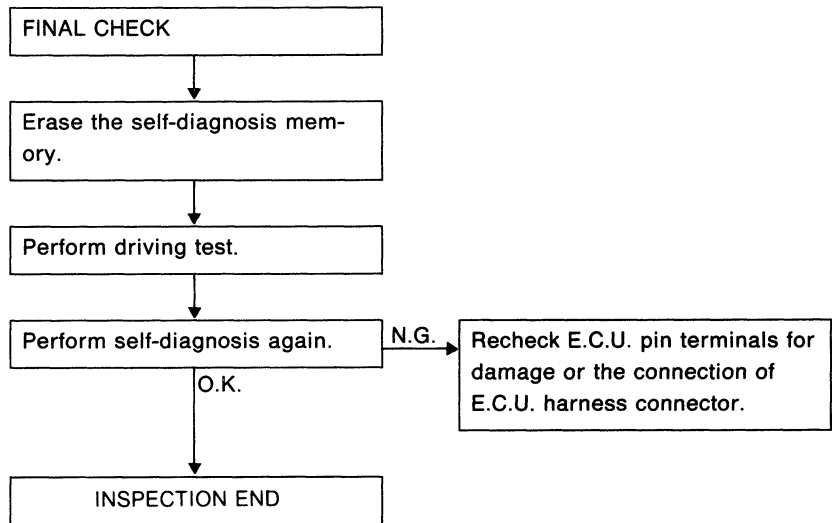

## **TROUBLE DIAGNOSES**


---

**NOTE**



# TROUBLE DIAGNOSES

## Diagnostic Procedure 32

### DETONATION SENSOR (Code No. 34)

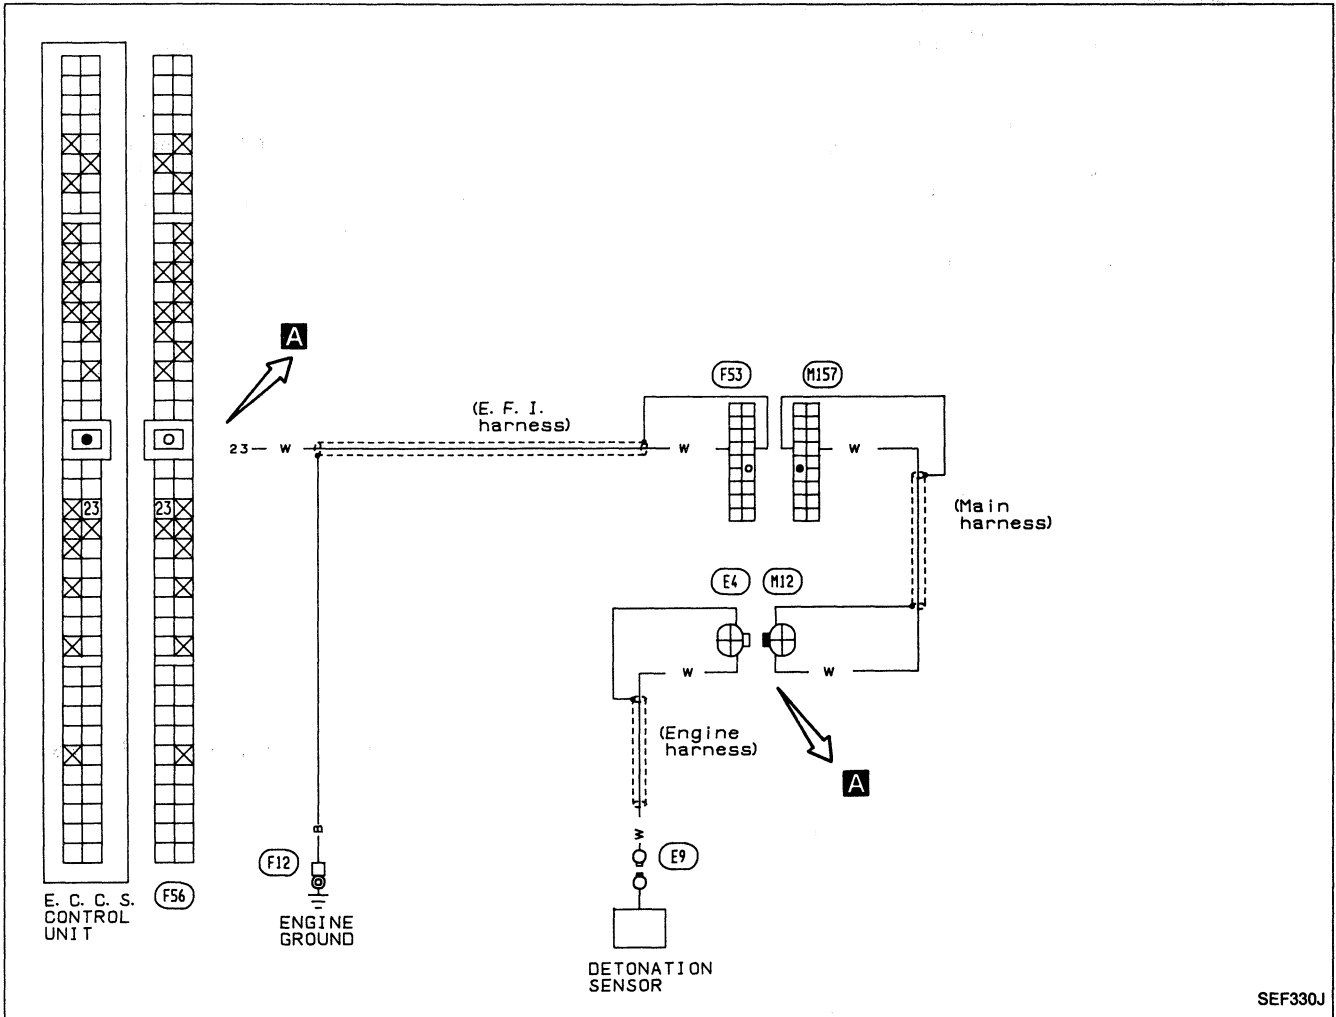



### Harness layout

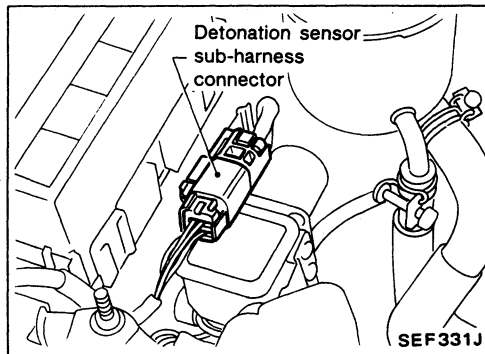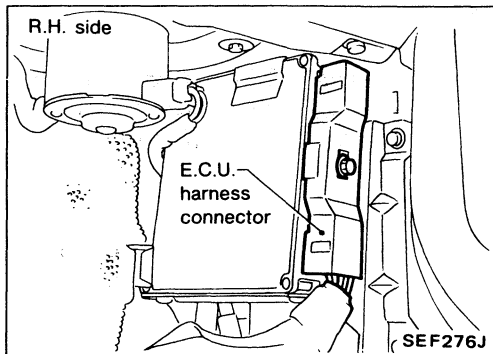



# TROUBLE DIAGNOSES


## Diagnostic Procedure 32 (Cont'd)

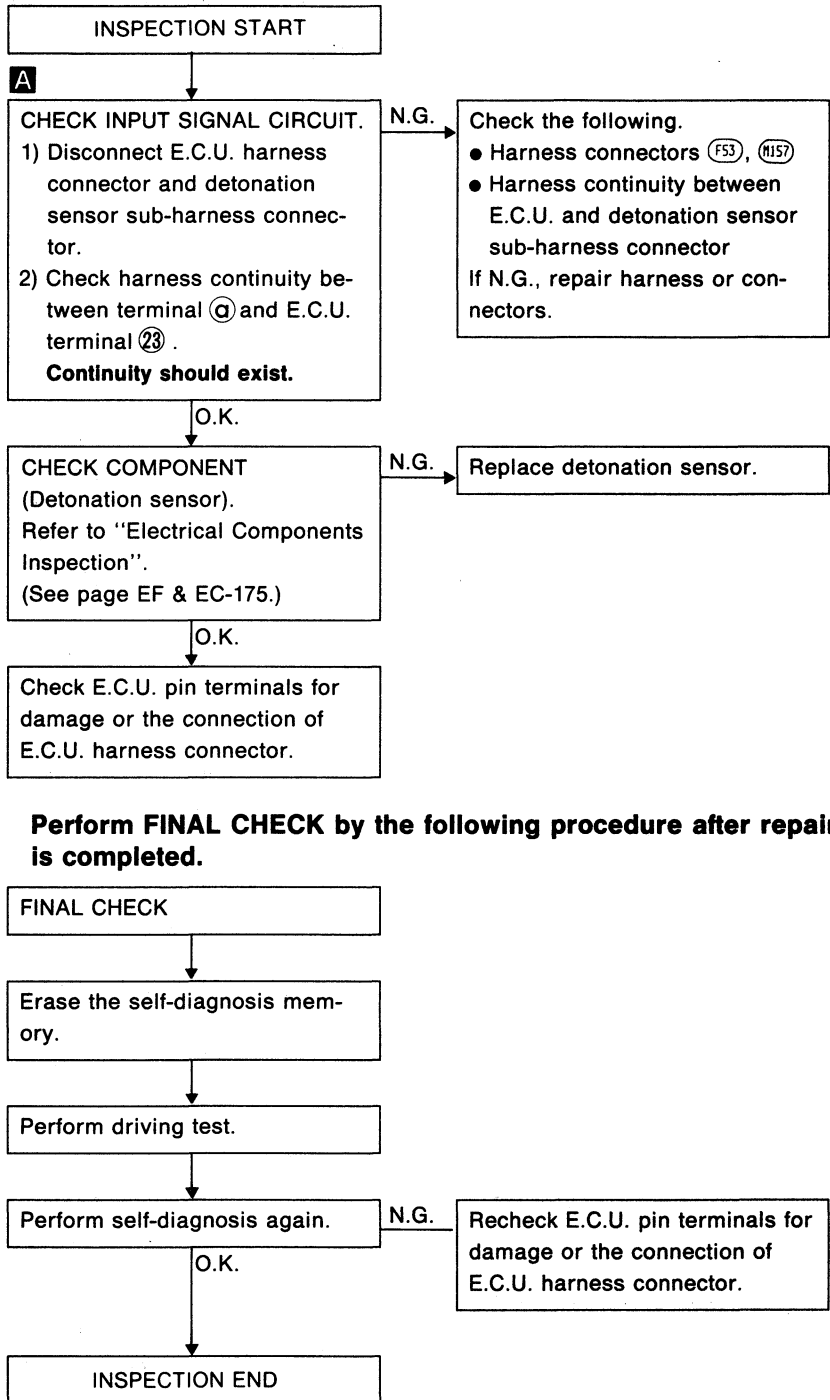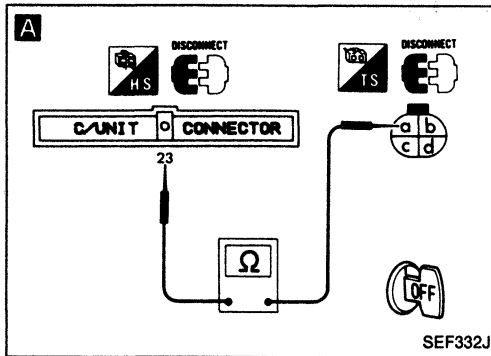



# TROUBLE DIAGNOSES

## Diagnostic Procedure 33

**EXHAUST GAS TEMPERATURE SENSOR (Code No. 35)  (CHECK ENGINE LIGHT ITEM); CALIFORNIA MODEL ONLY**




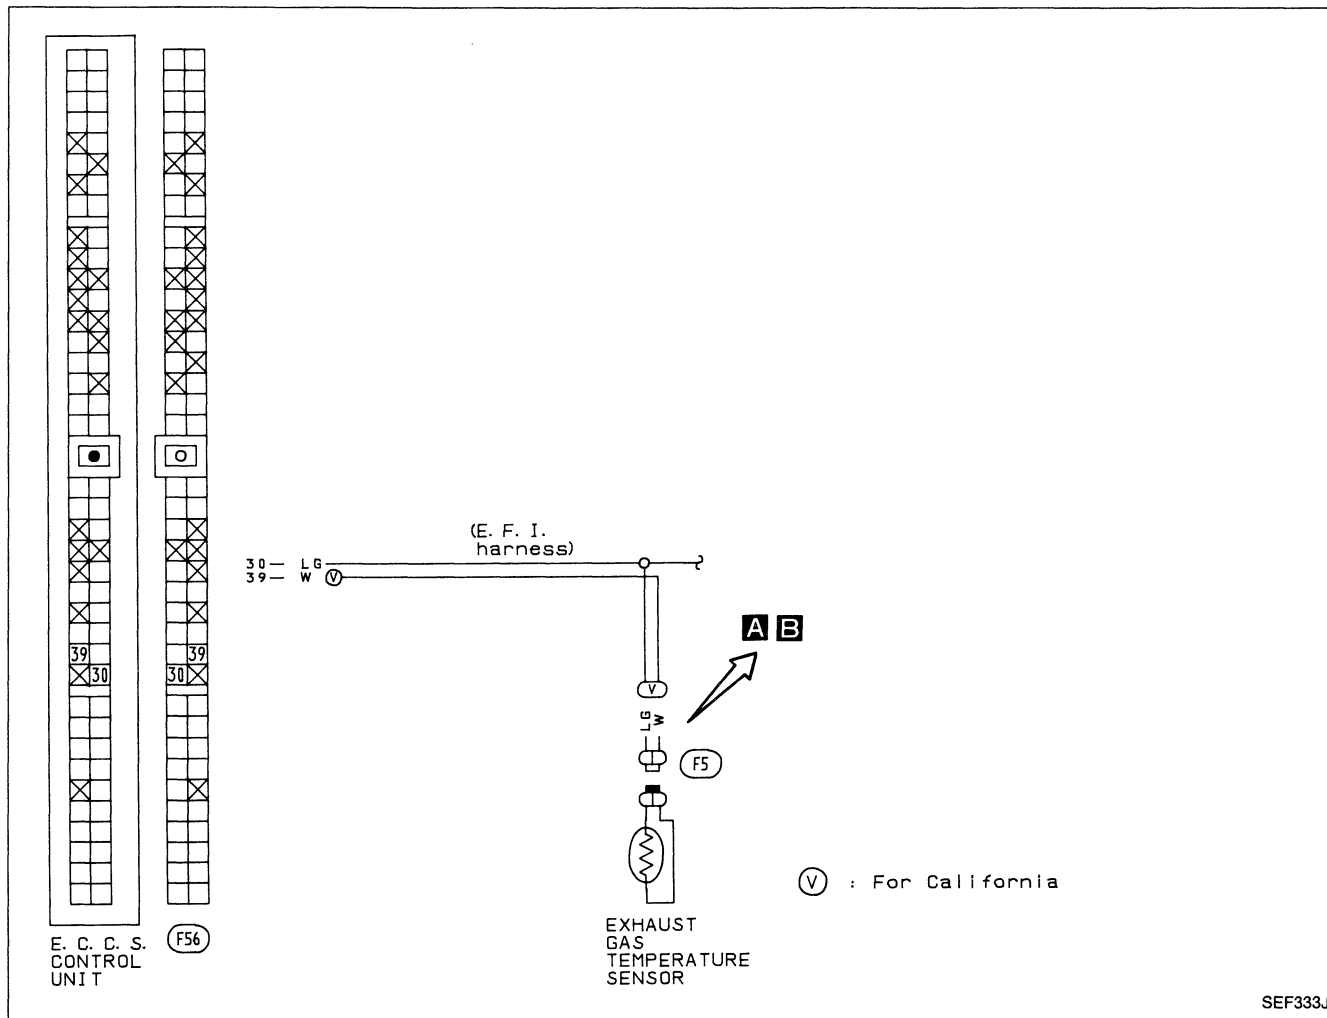


### Harness layout

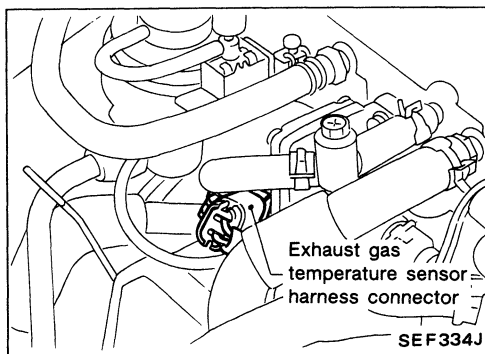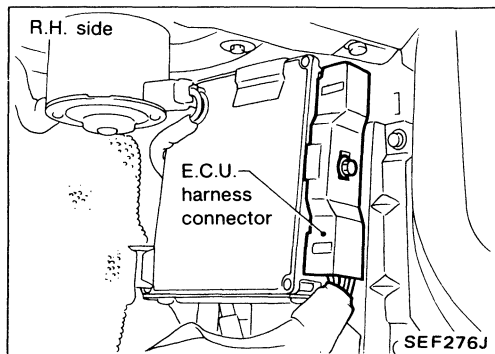

# TROUBLE DIAGNOSES


## Diagnostic Procedure 33 (Cont'd)

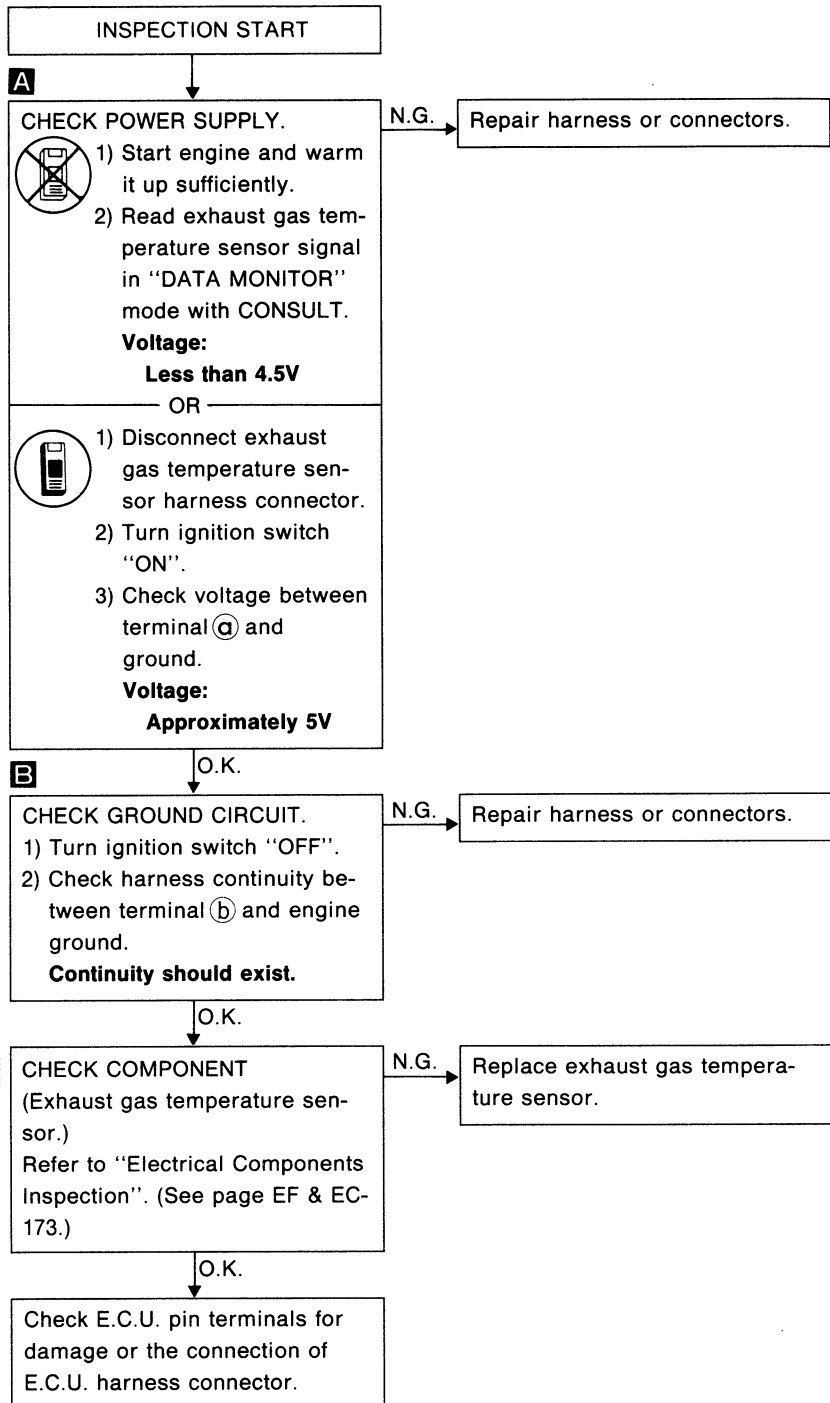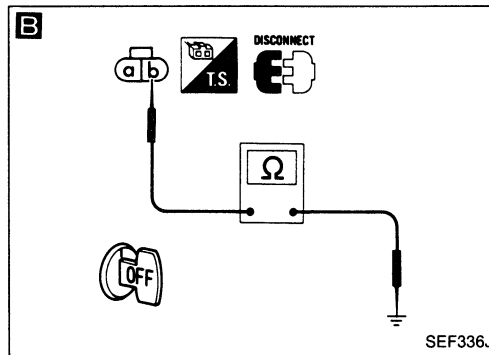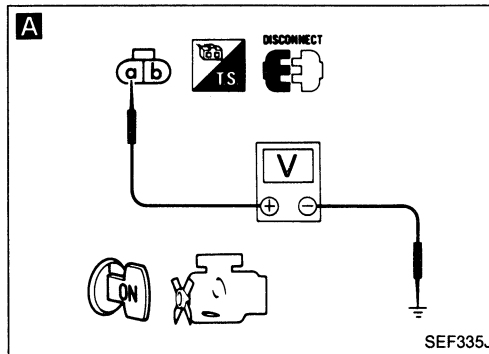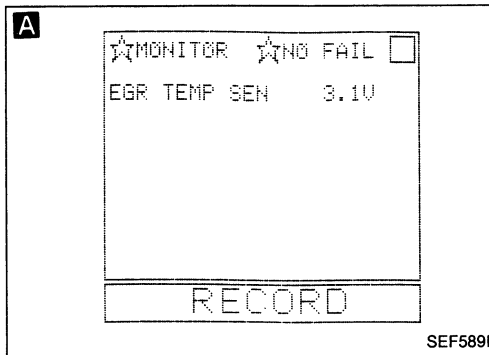

# TROUBLE DIAGNOSES

## Diagnostic Procedure 33 (Cont'd)

Perform FINAL CHECK by the following procedure after repair is completed.

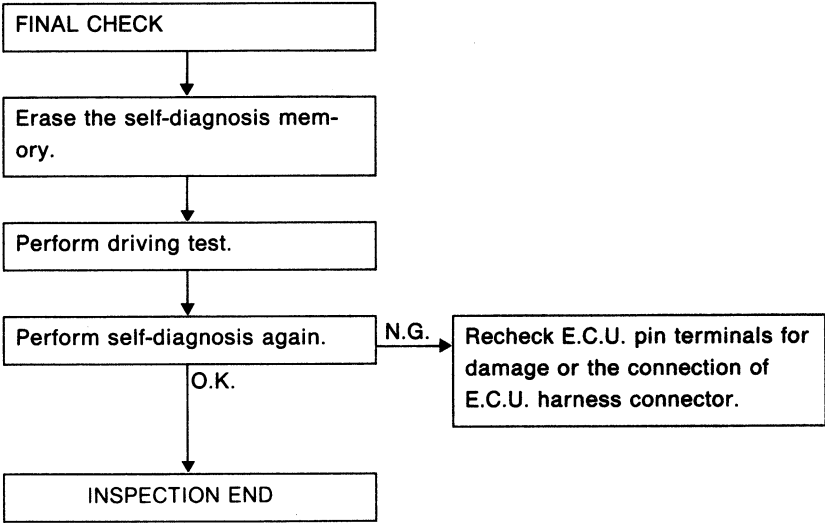

## TROUBLE DIAGNOSES


---

**NOTE**



# TROUBLE DIAGNOSES

## Diagnostic Procedure 34

### FUEL TEMPERATURE SENSOR (Code No. 42) (CHECK ENGINE LIGHT ITEM)



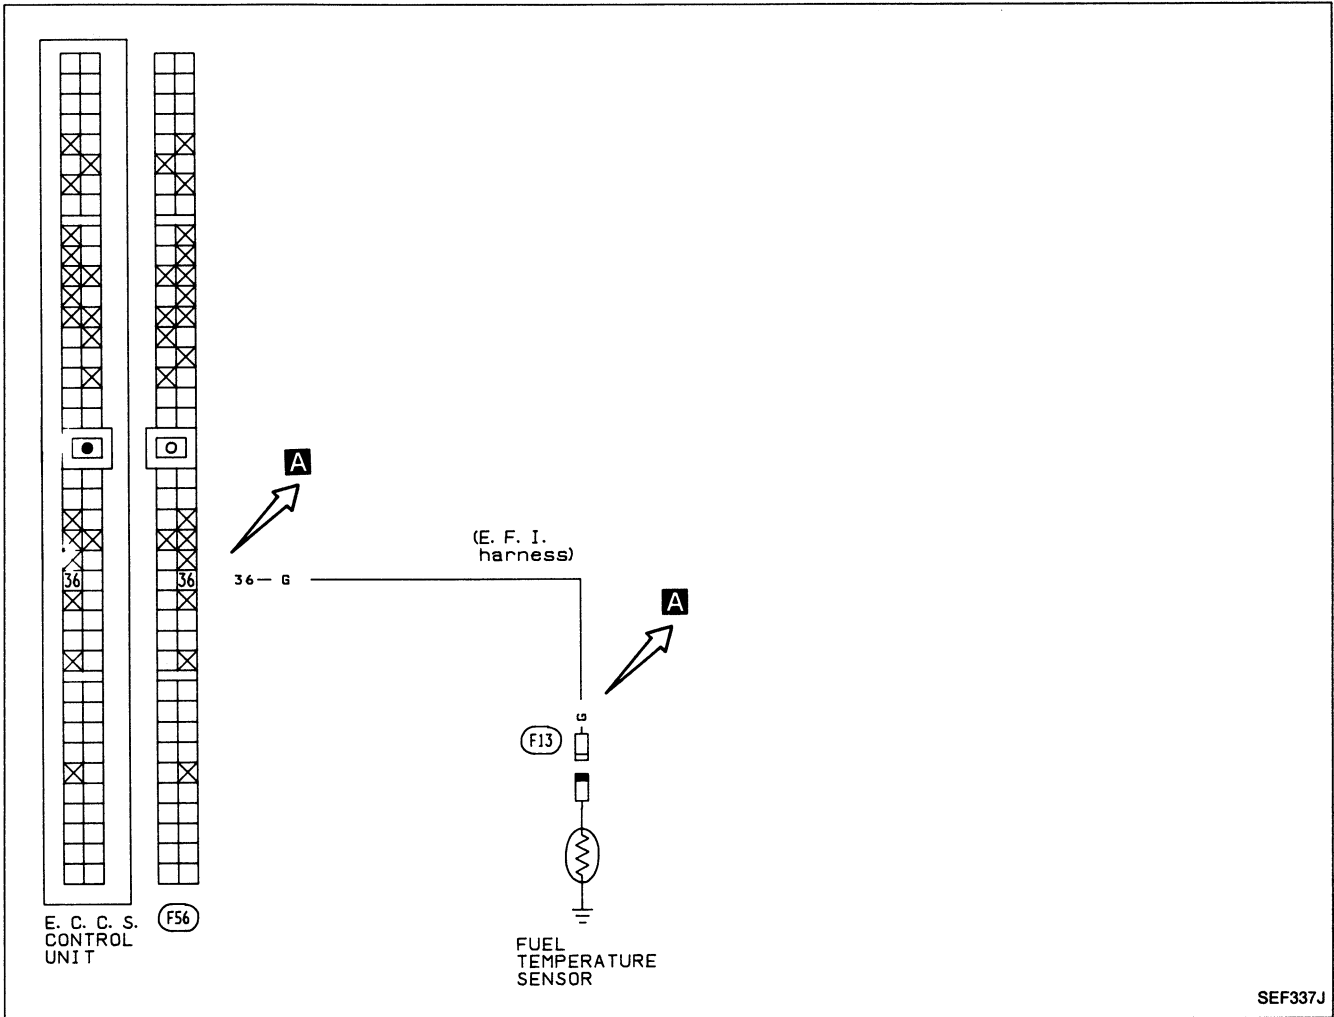


### Harness layout

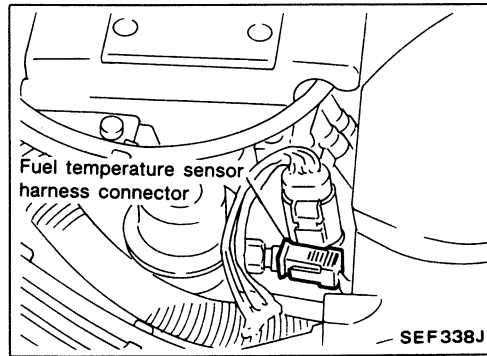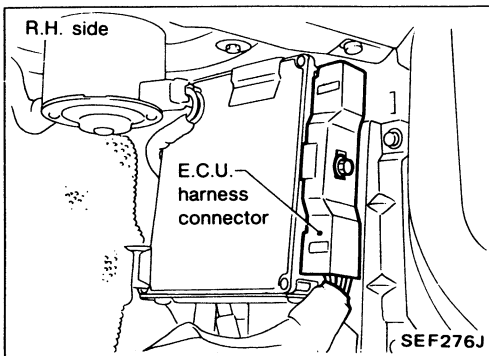

# TROUBLE DIAGNOSES

## Diagnostic Procedure 34 (Cont'd)

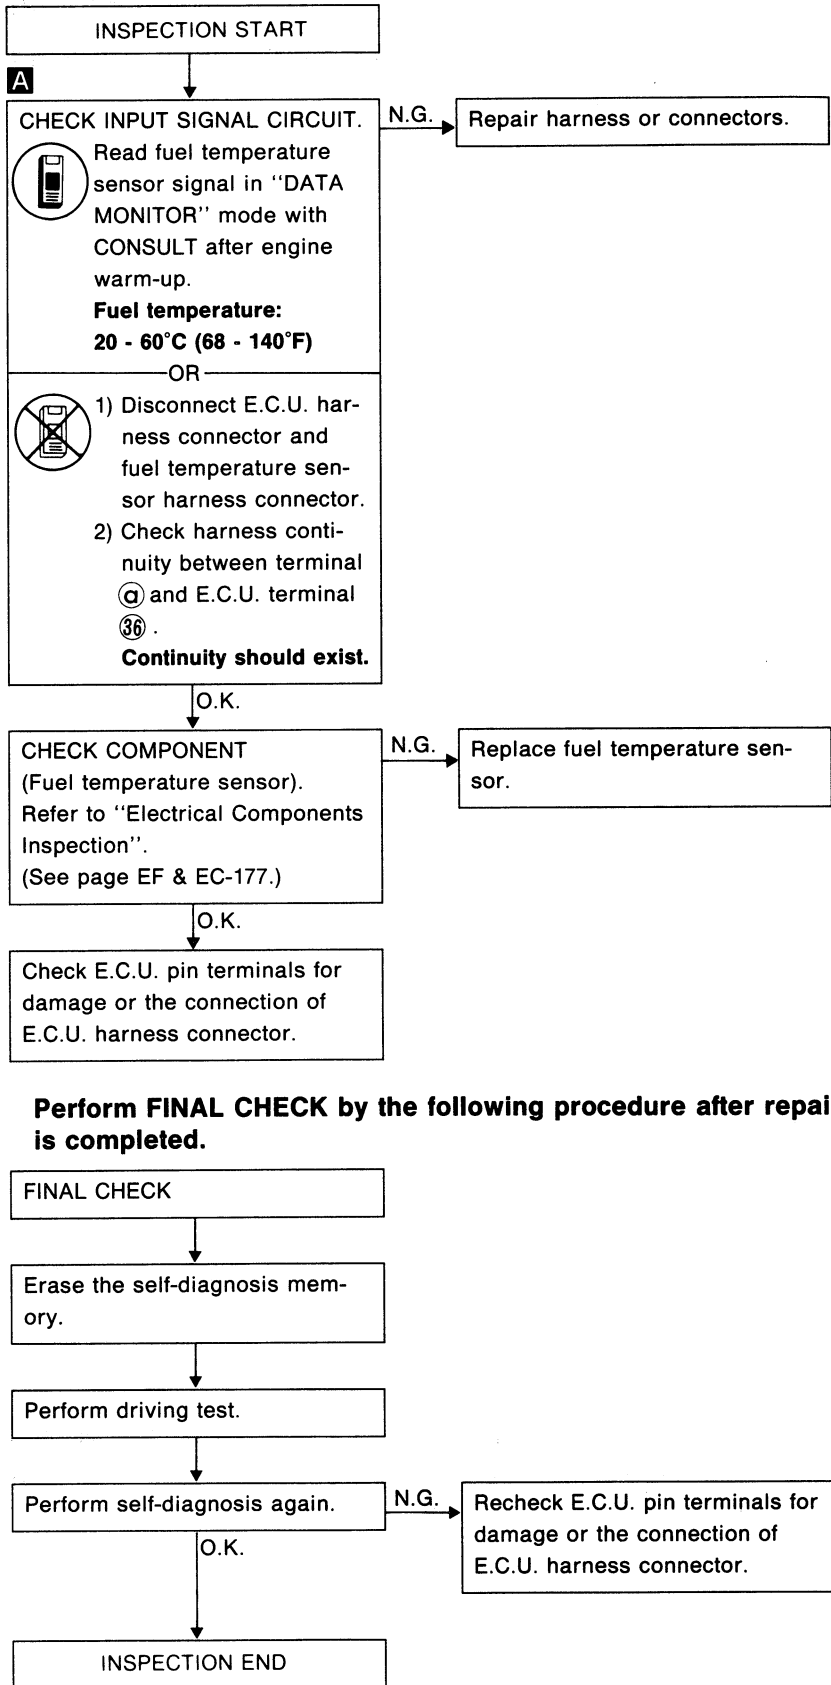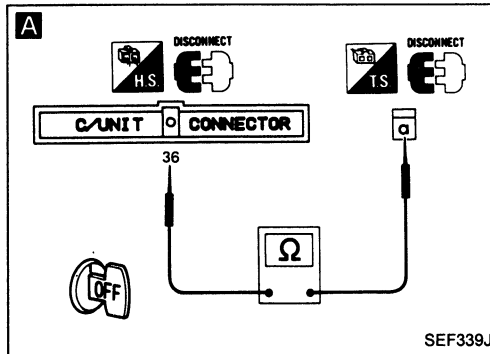
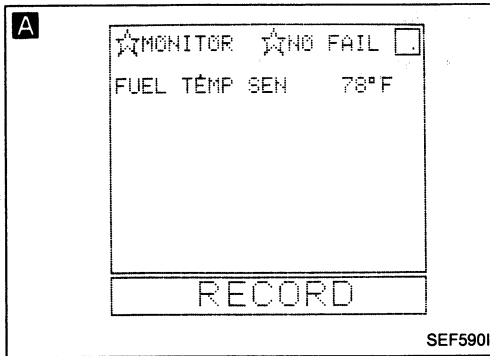








# TROUBLE DIAGNOSES



## Diagnostic Procedure 35 (Cont'd)

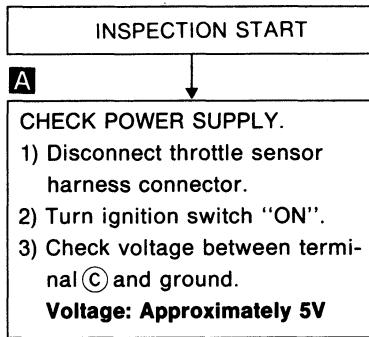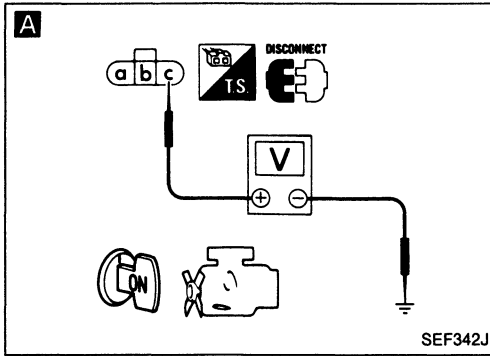



N.G. → Repair harness or connectors.

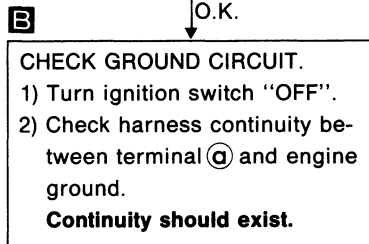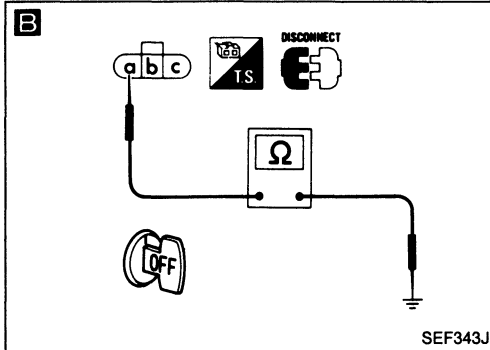



N.G. → Repair harness or connectors.

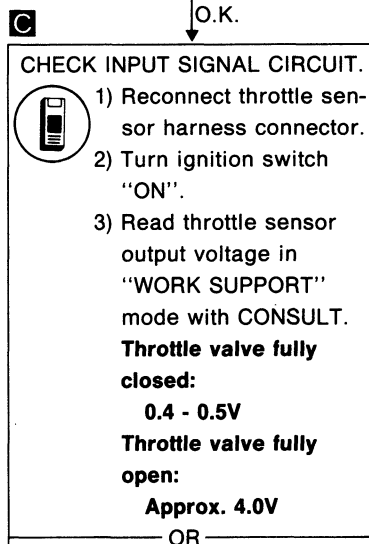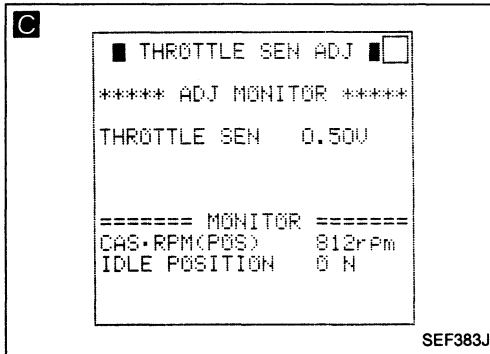

N.G. → Repair harness or connectors.

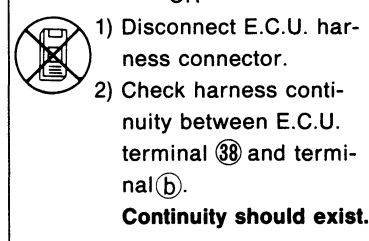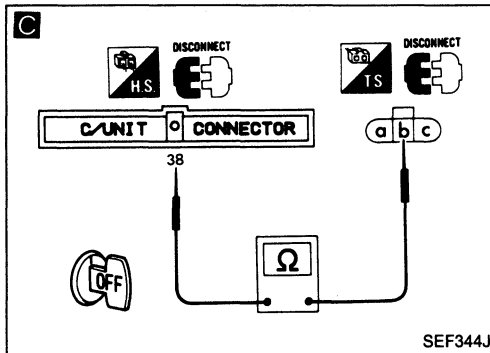

N.G. → Replace throttle sensor.

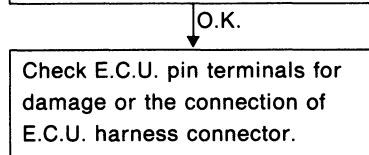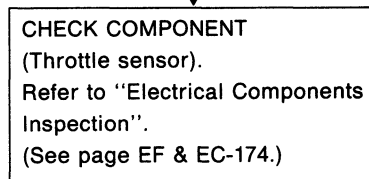


## TROUBLE DIAGNOSES

---

### Diagnostic Procedure 35 (Cont'd)



Perform FINAL CHECK by the following procedure after repair is completed.

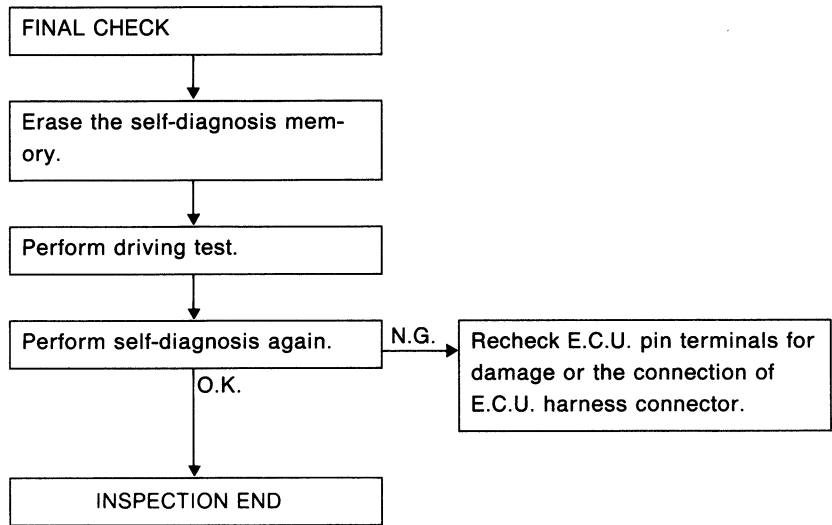

## **TROUBLE DIAGNOSES**

---

**NOTE**

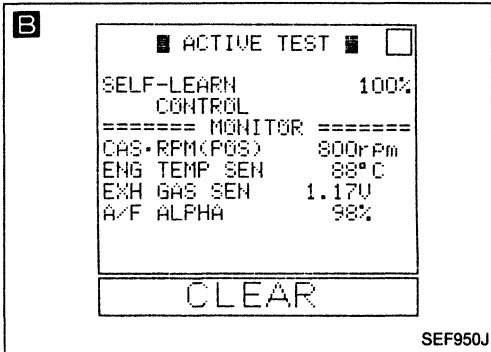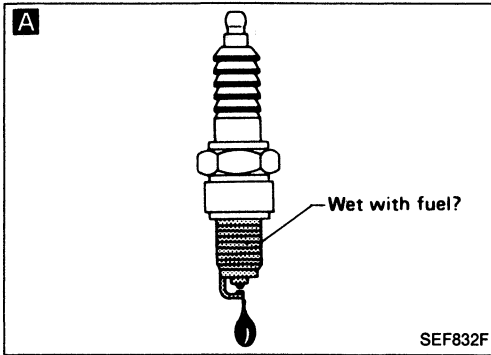

**C ROAD TEST**

**Test condition**  
 Drive vehicle under the following conditions with a suitable shift position.

- (1) Engine speed: 2,500±700 rpm
- (2) Intake manifold vacuum: -46.7±6.7 kPa (-350±50 mmHg, -13.78±1.97 inHg)

**Driving mode**


Ⓐ : 60 seconds or more  
 Ⓑ : 5 seconds or more  
 Ⓒ : 10 seconds or more

- ① Start engine and warm it up sufficiently.
- ② Keep engine at idle speed for at least 60 seconds.
- ③ Shift to a suitable gear position and drive in "Test condition" for at least 5 seconds.
- ④ Keep engine at idle speed for at least 10 seconds.
- ⑤ Repeat steps ② through ④ at least 10 times.

SEF889J


## Diagnostic Procedure 36

### INJECTOR LEAK (Code No. 45) (CHECK ENGINE LIGHT ITEM); CALIFORNIA MODEL ONLY

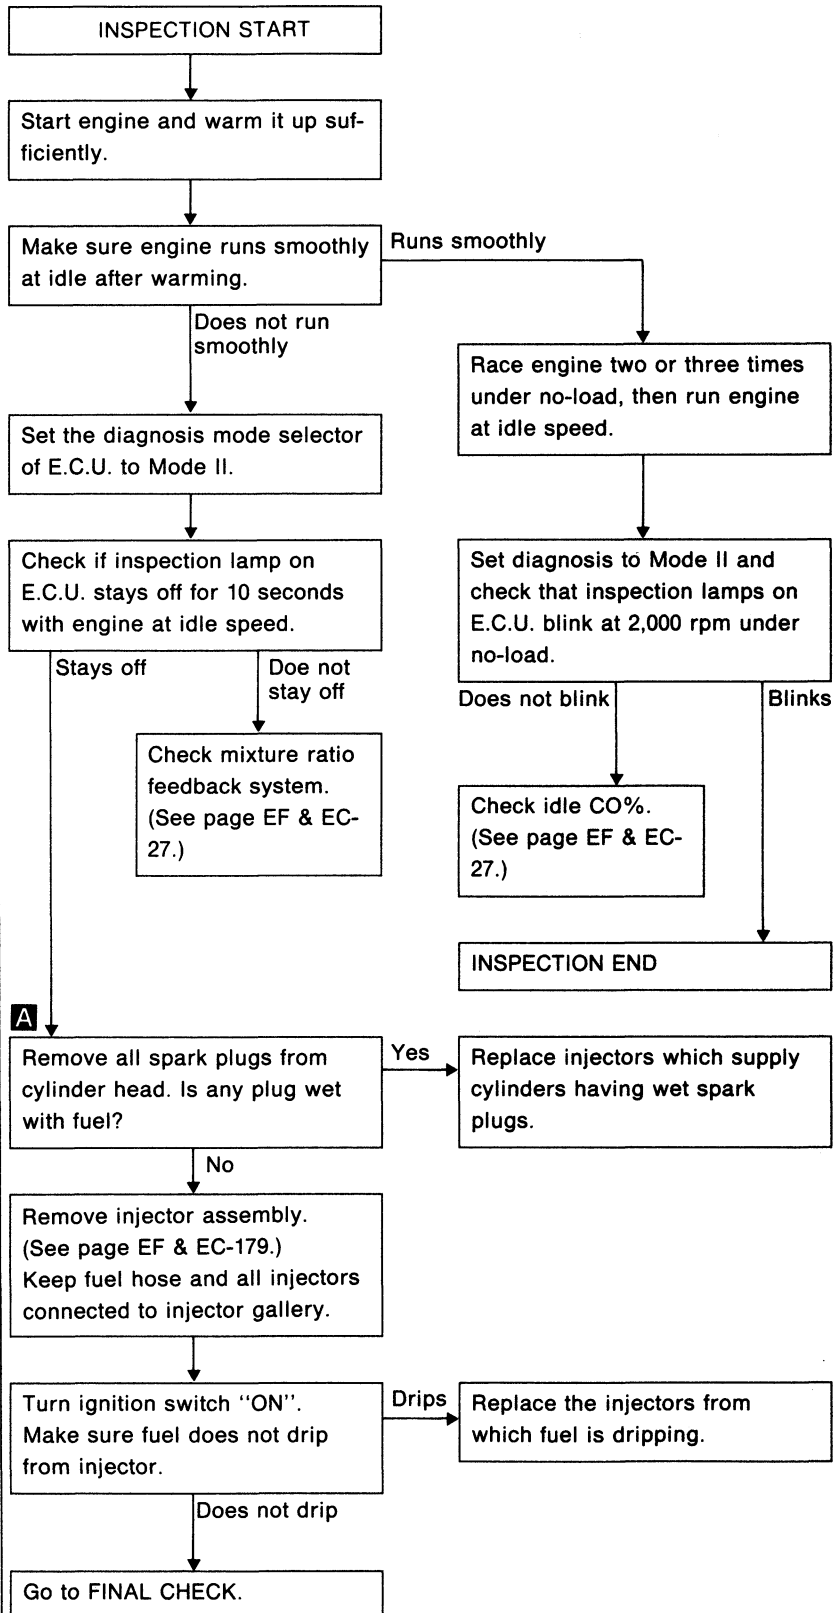


# TROUBLE DIAGNOSES

## Diagnostic Procedure 36 (Cont'd)

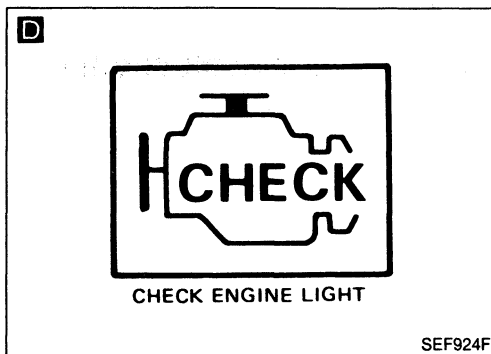


Perform FINAL CHECK by the following procedure after repair is completed.

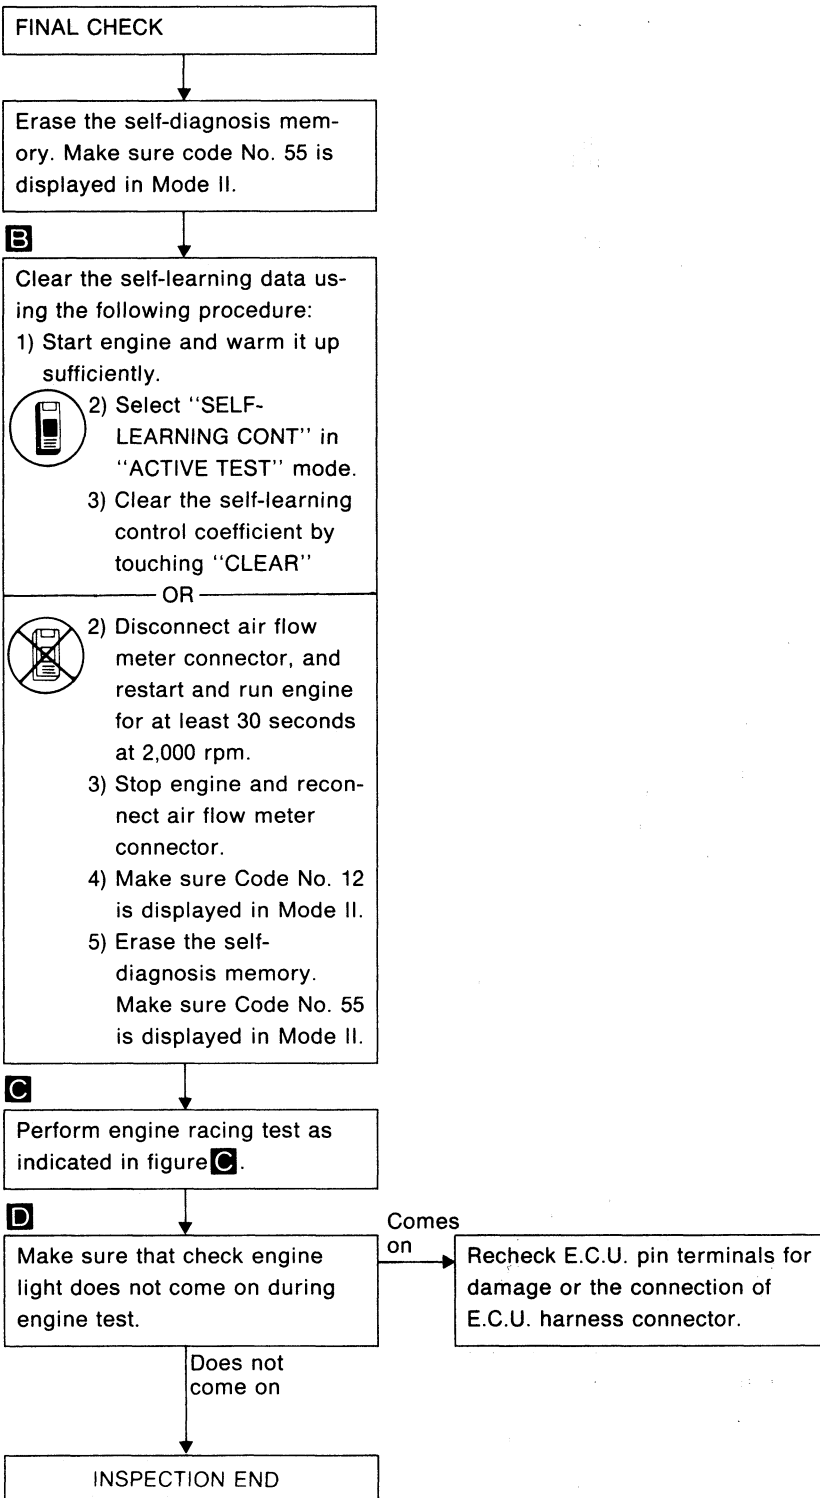



# TROUBLE DIAGNOSES

## Diagnostic Procedure 37

**INJECTOR (Code No. 51) <sup>H/CHECK</sup> (CHECK ENGINE LIGHT ITEM): CALIFORNIA MODEL**  
**INJECTOR (Not self-diagnostic item): NON-CALIFORNIA MODEL**


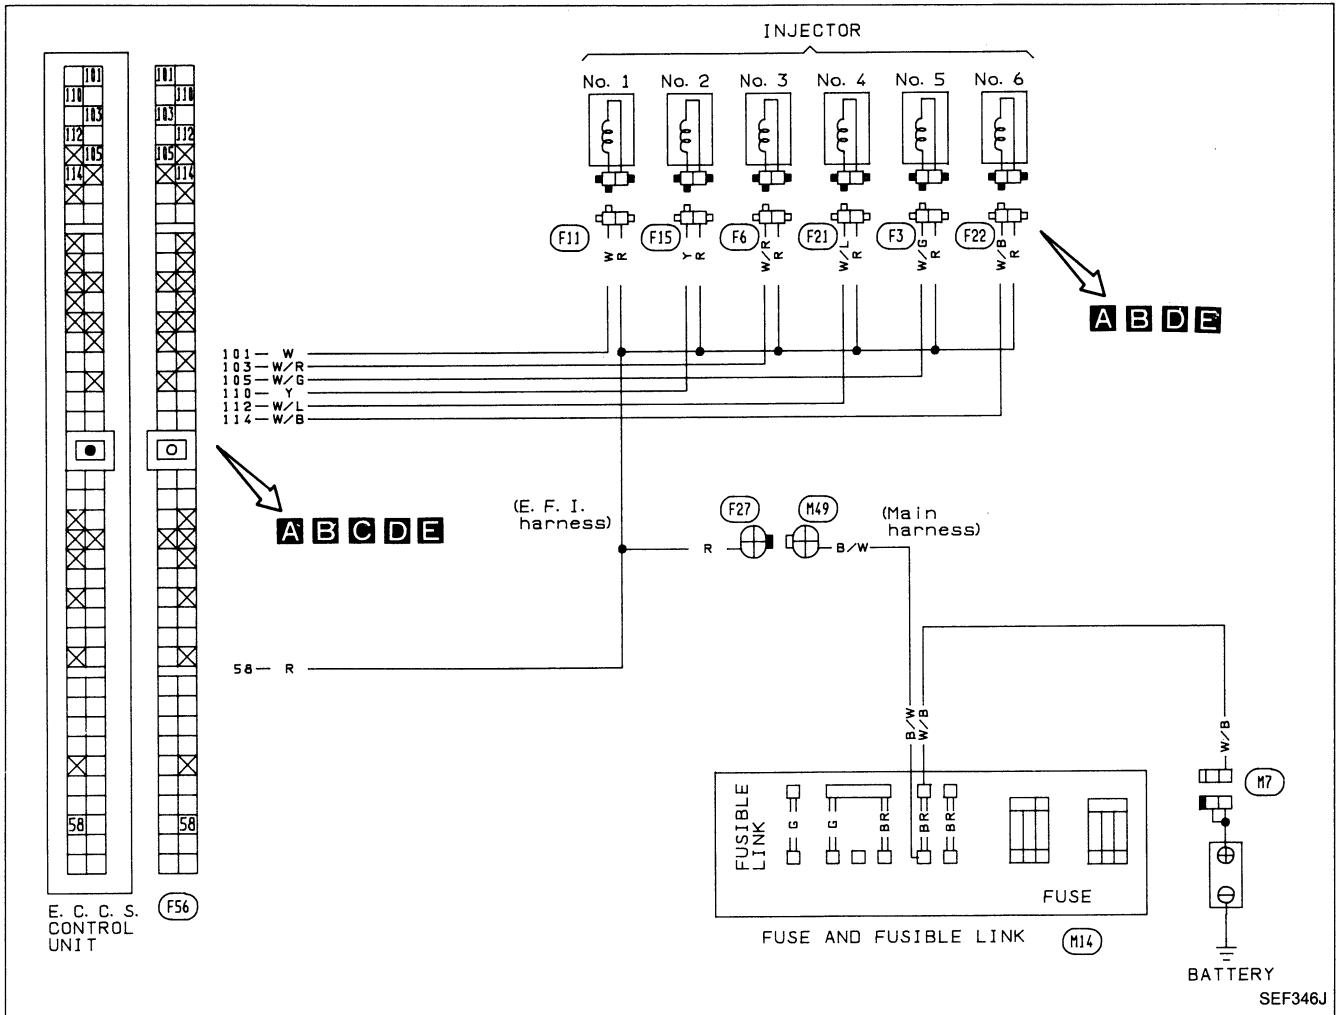


### Harness layout

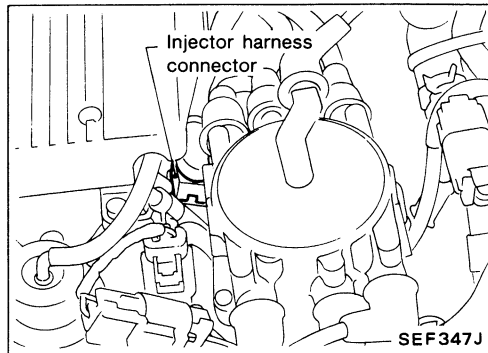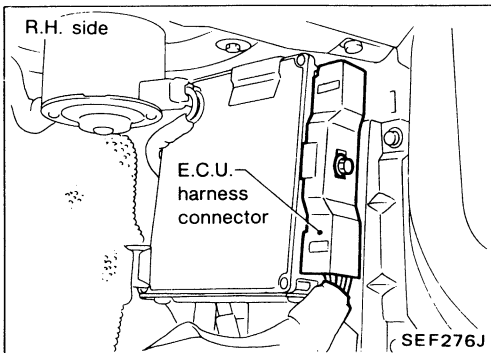

# TROUBLE DIAGNOSES

## Diagnostic Procedure 37 (Cont'd)

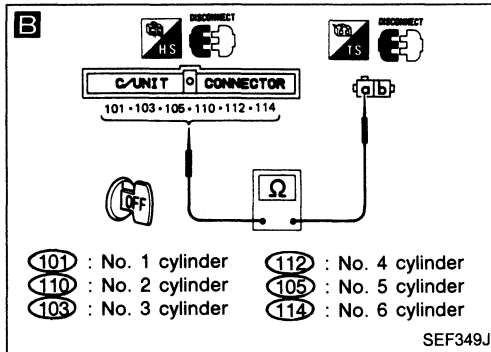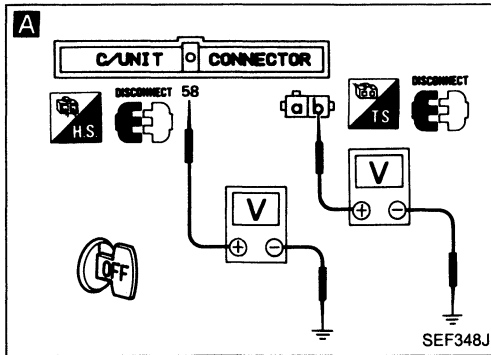

California model

INSPECTION START

**A**

**CHECK POWER SUPPLY.**

- 1) Disconnect injector harness connector and E.C.U. harness connector.
- 2) Check voltage between terminal (b) and ground, E.C.U. terminal (58) and ground.

**Voltage: Battery voltage**

N.G.

Check the following.

- Harness connectors (F27, M49)
- "BR" fusible link
- Harness continuity between battery and injector
- Harness continuity between battery and E.C.U.

If N.G., repair harness or connectors.

O.K.

**B**

**CHECK OUTPUT SIGNAL CIRCUIT.**

- 1) Check harness continuity between terminal (a) and E.C.U. terminals (101, 103, 105, 110, 112, 114).

**Continuity should exist.**

N.G.

Repair harness or connectors.

O.K.

**CHECK COMPONENT**

(Injector).  
Refer to "Electrical Components Inspection".  
(See page EF & EC-176.)

N.G.

Replace injector.

O.K.

Check E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.

**Perform FINAL CHECK by the following procedure after repair is completed.**

FINAL CHECK

Erase the self-diagnosis memory.

Perform driving test.

Perform self-diagnosis again.

N.G.


Recheck E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.

O.K.

INSPECTION END








# TROUBLE DIAGNOSES

## Diagnostic Procedure 37 (Cont'd)

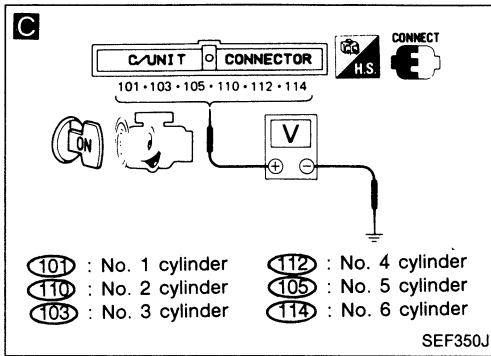

Non-California model

INSPECTION START

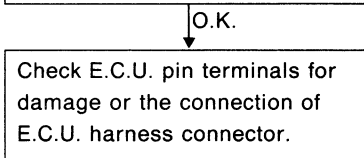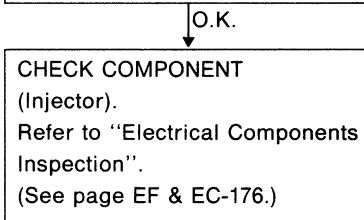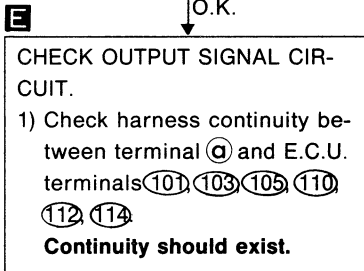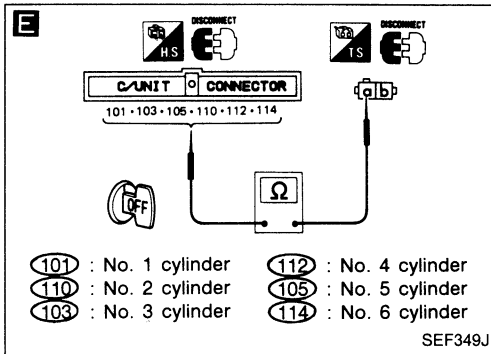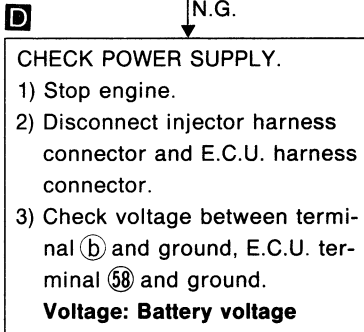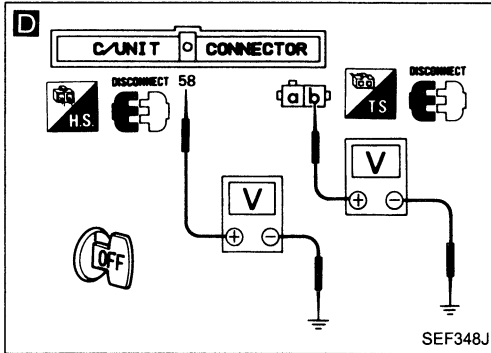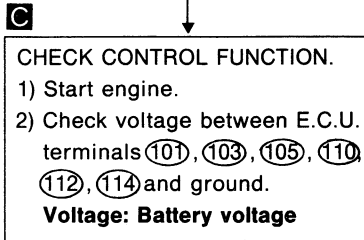



## **TROUBLE DIAGNOSES**


---

**NOTE**



# TROUBLE DIAGNOSES

## Diagnostic Procedure 38

### THROTTLE VALVE SWITCH (Not self-diagnostic item)




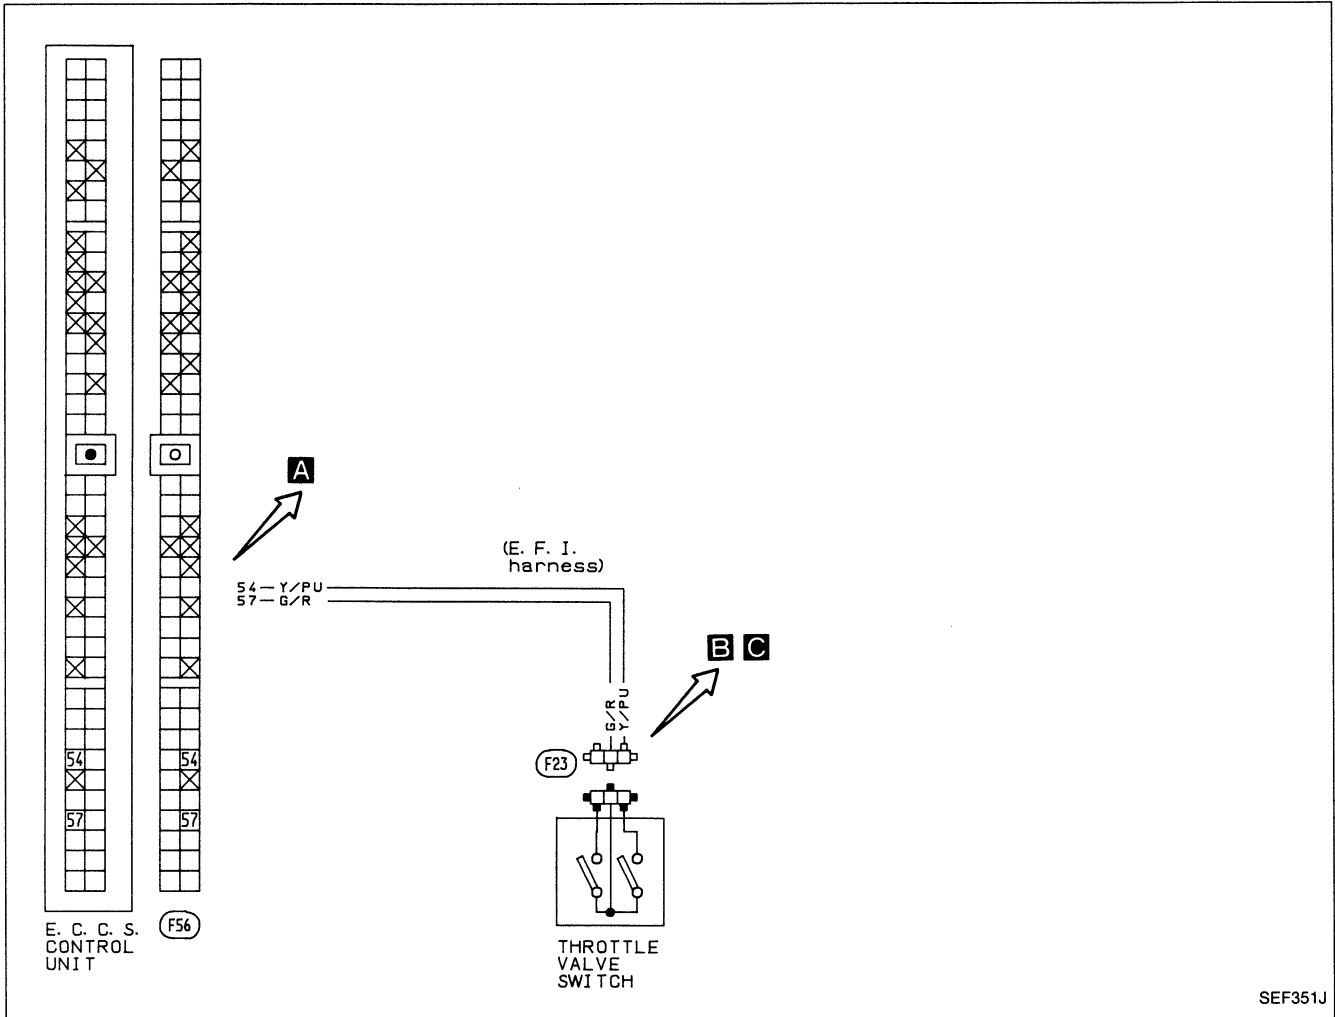


### Harness layout

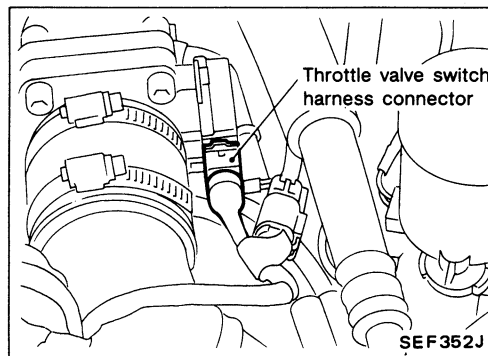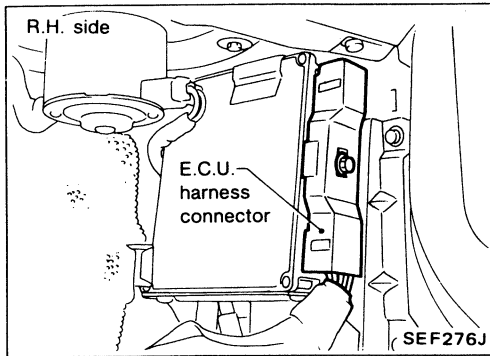

# TROUBLE DIAGNOSES


## Diagnostic Procedure 38 (Cont'd)

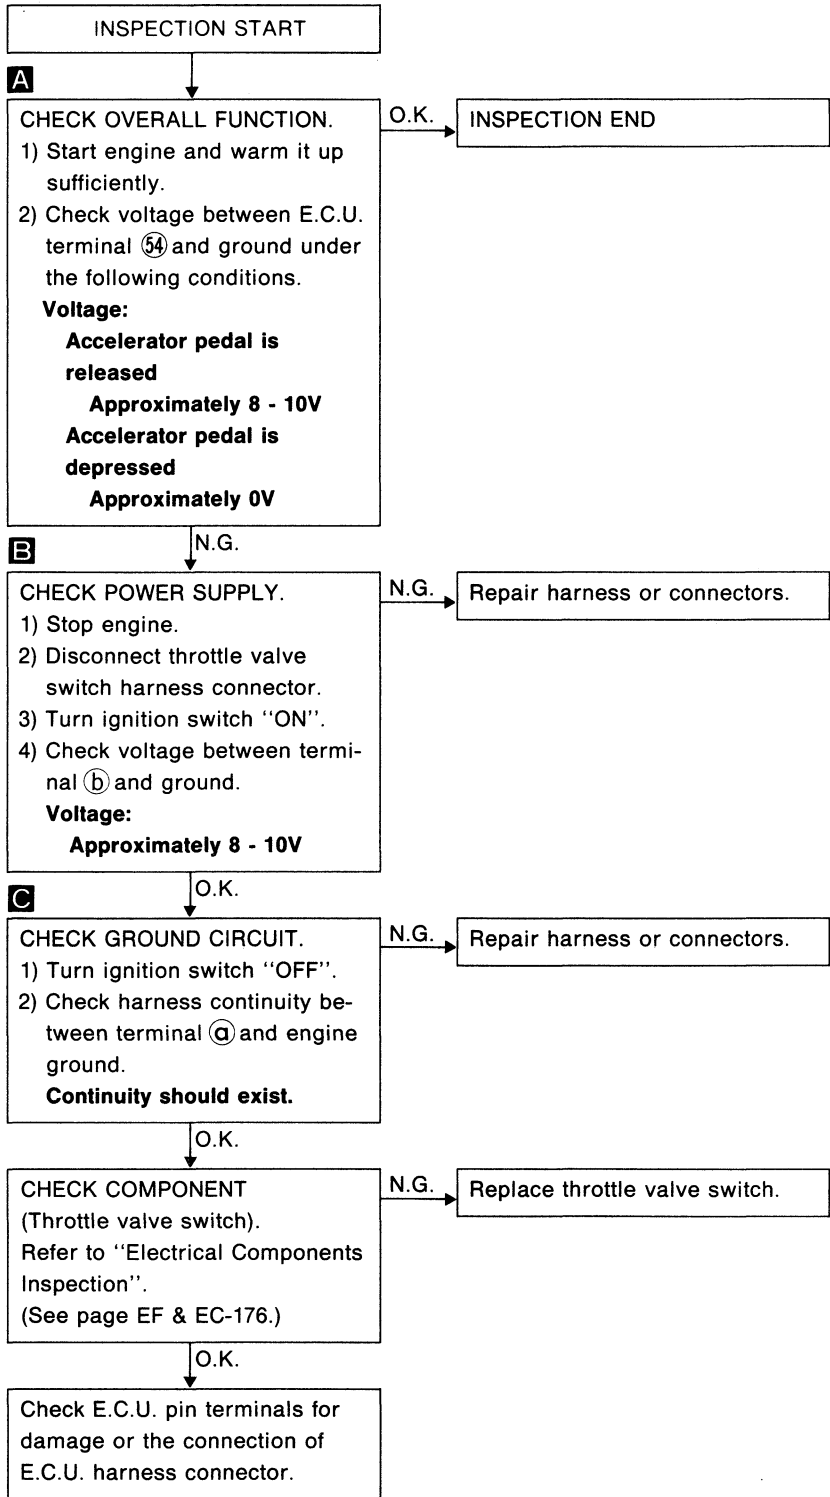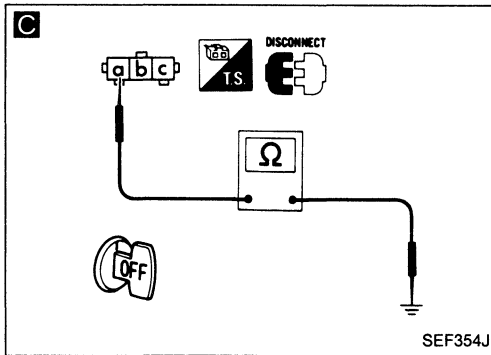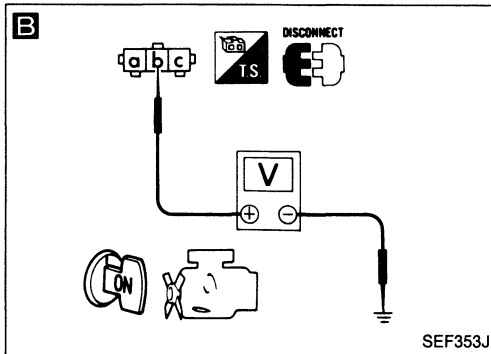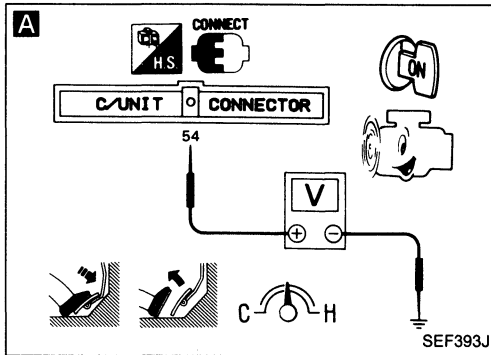


# TROUBLE DIAGNOSES

## Diagnostic Procedure 39

### START SIGNAL (Not self-diagnostic item)



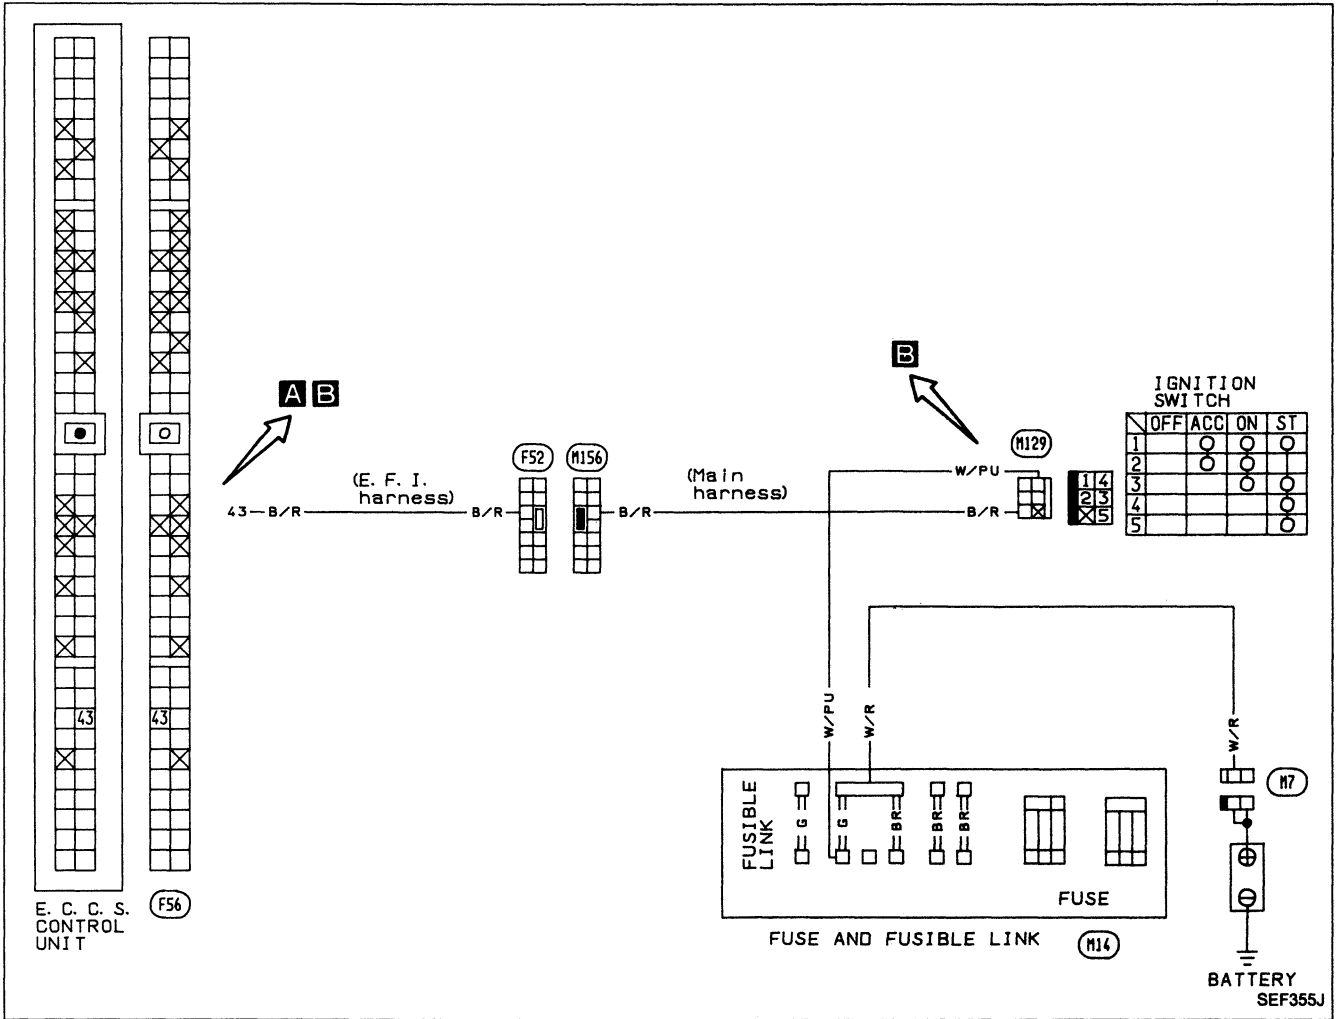


### Harness layout

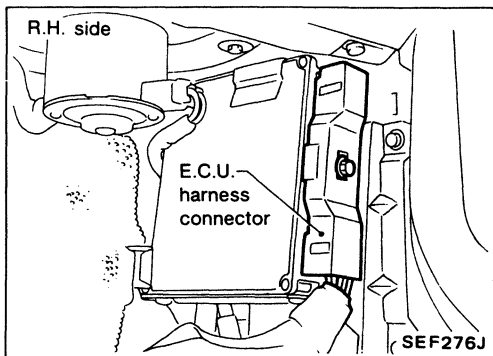

# TROUBLE DIAGNOSES

## Diagnostic Procedure 39 (Cont'd)

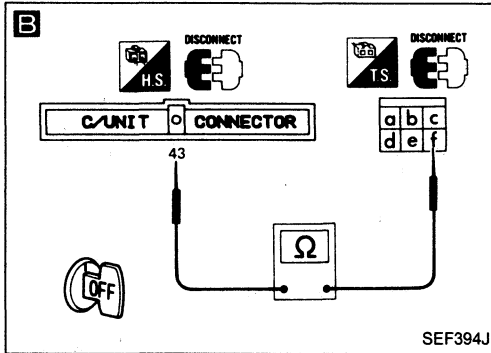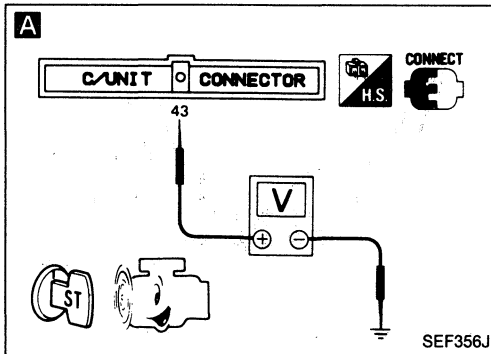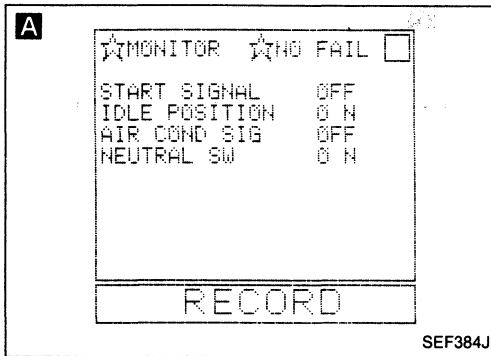

INSPECTION START

**A**

CHECK OVERALL FUNCTION.

- 1) Turn ignition switch "ON".
- 2) Check start signal in "DATA MONITOR" mode with CONSULT.

IGN "ON"	OFF
IGN "START"	ON

OR

1) Turn ignition switch to "START".

2) Check voltage between E.C.U. terminal ④ and ground.

**Voltage:**

**Ignition switch "START"**

**Battery voltage**

**Except above**

**Approximately 0V**

O.K.

INSPECTION END

**B**

CHECK INPUT SIGNAL CIRCUIT.

- 1) Turn ignition switch "OFF".
- 2) Disconnect E.C.U. harness connector and ignition switch harness connector.
- 3) Check harness continuity between E.C.U. terminal ④ and terminal ①.

**Continuity should exist.**

N.G.

Check the following.

- Harness connectors (F52, M156)
- Harness continuity between E.C.U. and ignition switch

If N.G., repair harness or connectors.


O.K.

Check E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.



# TROUBLE DIAGNOSES

## Diagnostic Procedure 40

### P.R.V.R. CONTROL (Not self-diagnostic item)





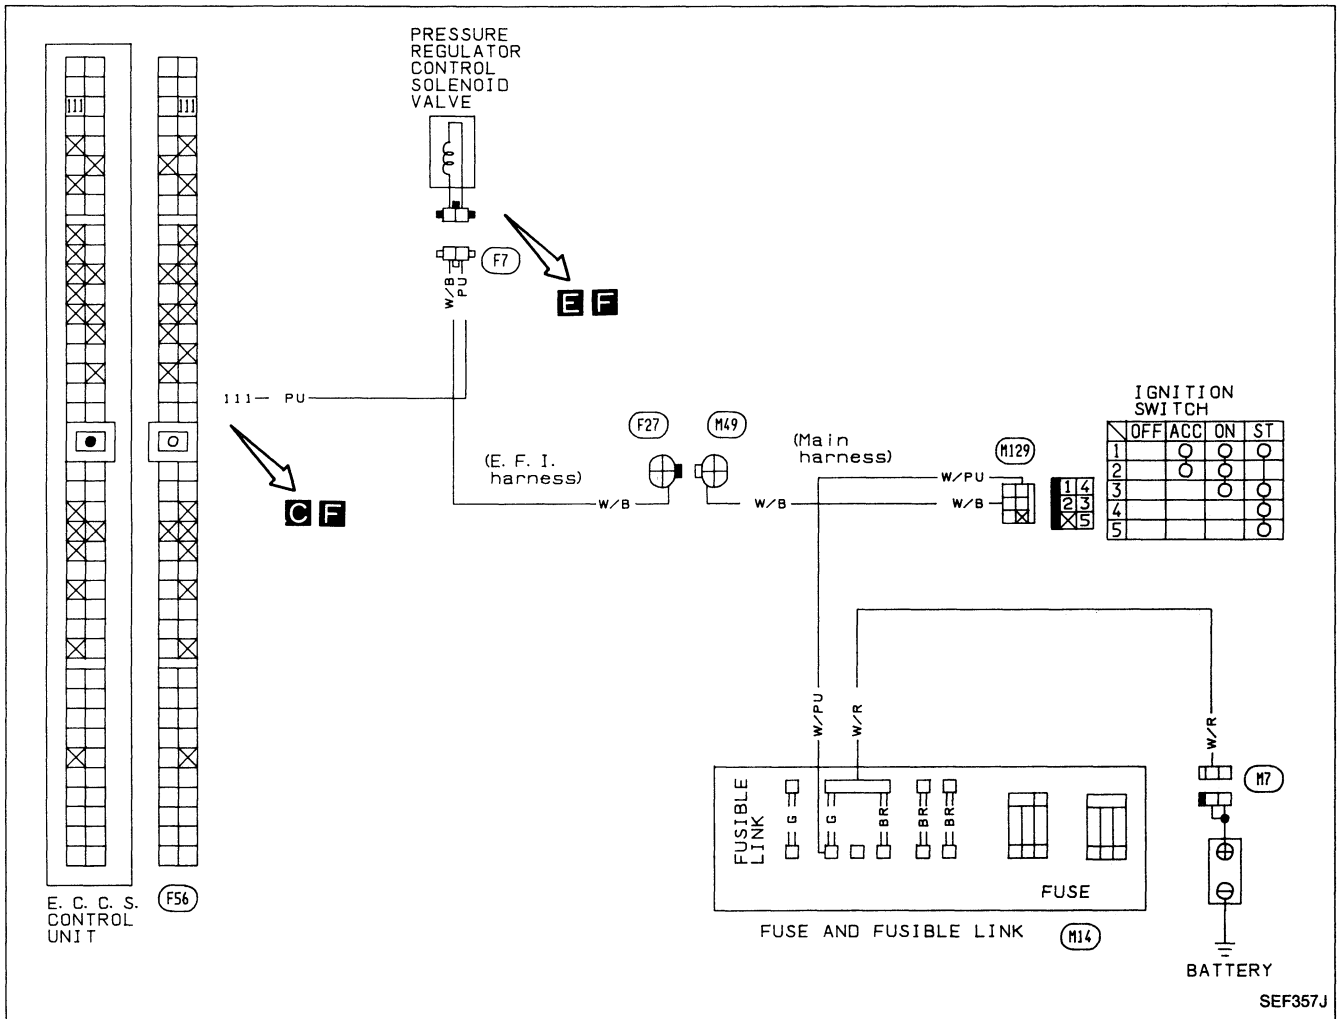


### Harness layout

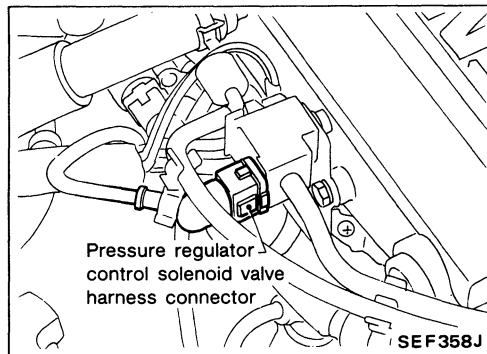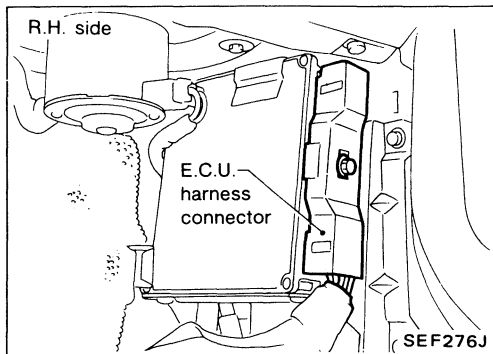

# TROUBLE DIAGNOSES

## Diagnostic Procedure 40 (Cont'd)

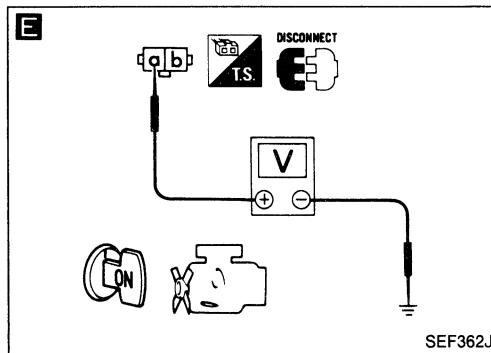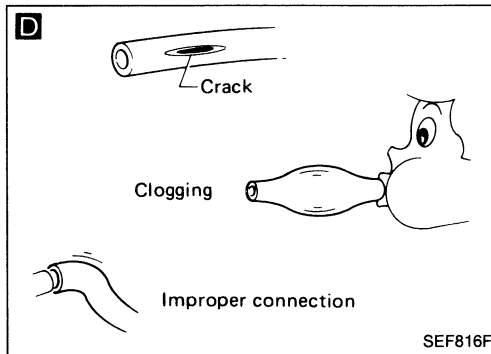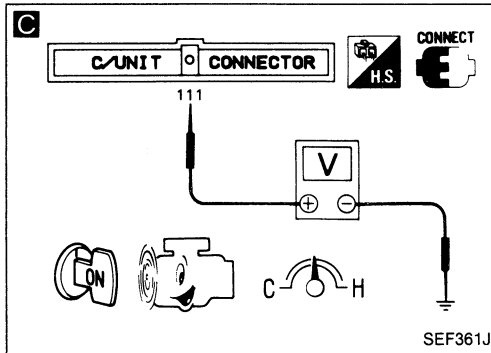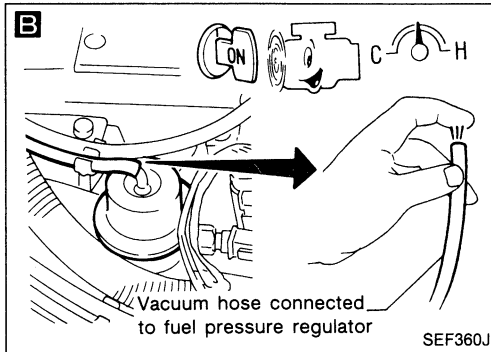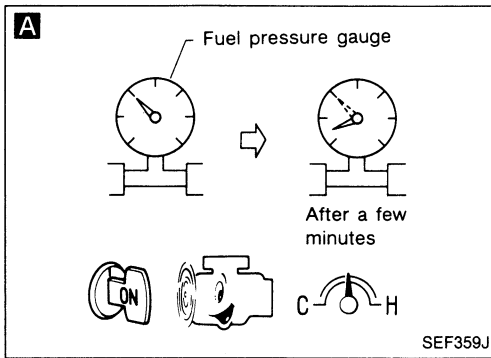

INSPECTION START

**A**

CHECK OVERALL FUNCTION.

- 1) Install fuel pressure gauge in fuel feed hose.  
(See page EF & EC-178.)
- 2) Start engine and warm it up sufficiently.
- 3) Perform self-diagnosis.  
Make sure that code No. 42 is not displayed.
- 4) Stop engine.
- 5) Disconnect fuel temperature sensor harness connector, and connect a resistor (0.1 kΩ) between fuel temperature sensor harness connector and ground. (\*: See NOTE.)
- 6) Restart engine and check fuel pressure.

**Fuel pressure:**  
**Approximately 294 kPa (3.0 kg/cm<sup>2</sup>, 43 psi)**

- 7) Make sure that fuel pressure decreases after a few minutes.

**Fuel pressure:**  
**Approximately 235 kPa (2.4 kg/cm<sup>2</sup>, 34 psi)**

O.K.

INSPECTION END

**B**

CHECK VACUUM SOURCE TO FUEL PRESSURE REGULATOR.

- 1) Stop engine.
- 2) Disconnect vacuum hose connected to fuel pressure regulator.
- 3) Restart engine.
- 4) Make sure that vacuum exists.

O.K.

CHECK COMPONENT  
(Fuel pressure regulator).  
Refer to "Fuel Pressure Check".  
(See page EF & EC-178.)

**C**

CHECK CONTROL FUNCTION.

- 1) Stop engine and reconnect vacuum hose to fuel pressure regulator.
- 2) Restart engine.
- 3) Check voltage between E.C.U. terminal (11) and ground.  
**Voltage: 0 - 1.0V**
- 4) After more than 3 minutes, recheck voltage between E.C.U. terminal (11) and ground.  
**Voltage: Battery voltage**

O.K.

**D**

CHECK VACUUM HOSE


- 1) Check vacuum hose for clogging, cracks and proper connection.

N.G.

A

# TROUBLE DIAGNOSES

## Diagnostic Procedure 40 (Cont'd)

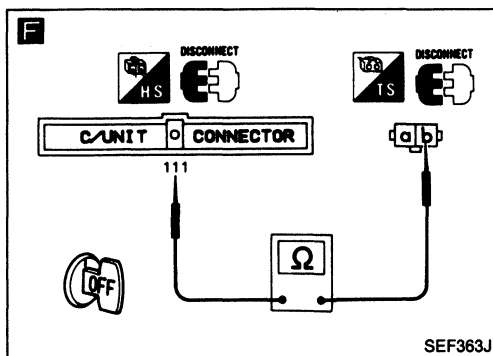

**E**

**CHECK POWER SUPPLY.**


- 1) Stop engine.
- 2) Disconnect pressure regulator control solenoid valve harness connector.
- 3) Turn ignition switch "ON".
- 4) Check voltage between terminal (a) and ground.

**Voltage: Battery voltage**

N.G. → Check the following.

- Harness connectors (F27), (H49)
- Harness continuity between pressure regulator control solenoid valve and ignition switch

If N.G., repair harness or connectors.

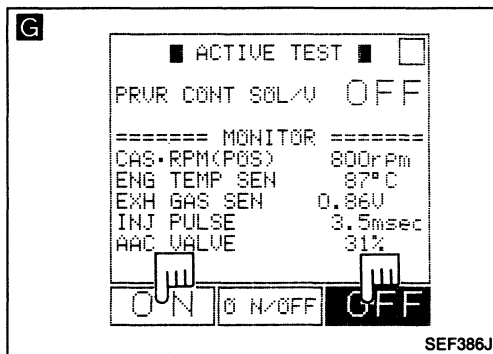

O.K. ↓

**F**

**CHECK OUTPUT SIGNAL CIRCUIT.**

- 1) Turn ignition switch "OFF".
- 2) Disconnect E.C.U. harness connector.
- 3) Check harness continuity between E.C.U. terminal (11) and terminal (b).

**Continuity should exist.**

N.G. → Repair harness or connectors.

O.K. ↓

**G**

**CHECK COMPONENT**  
(Pressure regulator control solenoid valve).

- 1) Reconnect pressure regulator control solenoid valve harness connector and E.C.U. harness connector.
- 2) Start engine.
- 3) Turn P.R.V.R. control solenoid valve "ON" and "OFF" in "ACTIVE TEST" mode with CONSULT and check operating sound.

— OR —

Refer to "Electrical Components Inspection".  
(See page EF & EC-173.)

N.G. → Replace pressure regulator control solenoid valve.

O.K. ↓

Check E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.




# TROUBLE DIAGNOSES

## Diagnostic Procedure 40 (Cont'd)

**\*NOTE**


- 1) Do not perform this test for a long time.
  - 2) Perform self-diagnosis after this test.
- If code No. 42 is displayed, erase it.

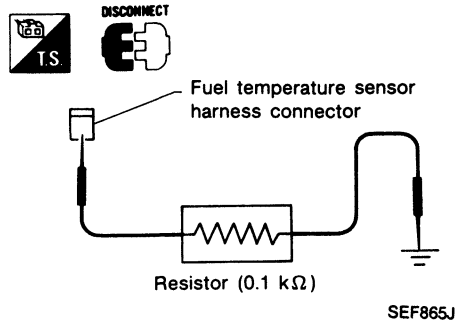



# TROUBLE DIAGNOSES

## Diagnostic Procedure 41

### AIR REGULATOR (Not self-diagnostic item)




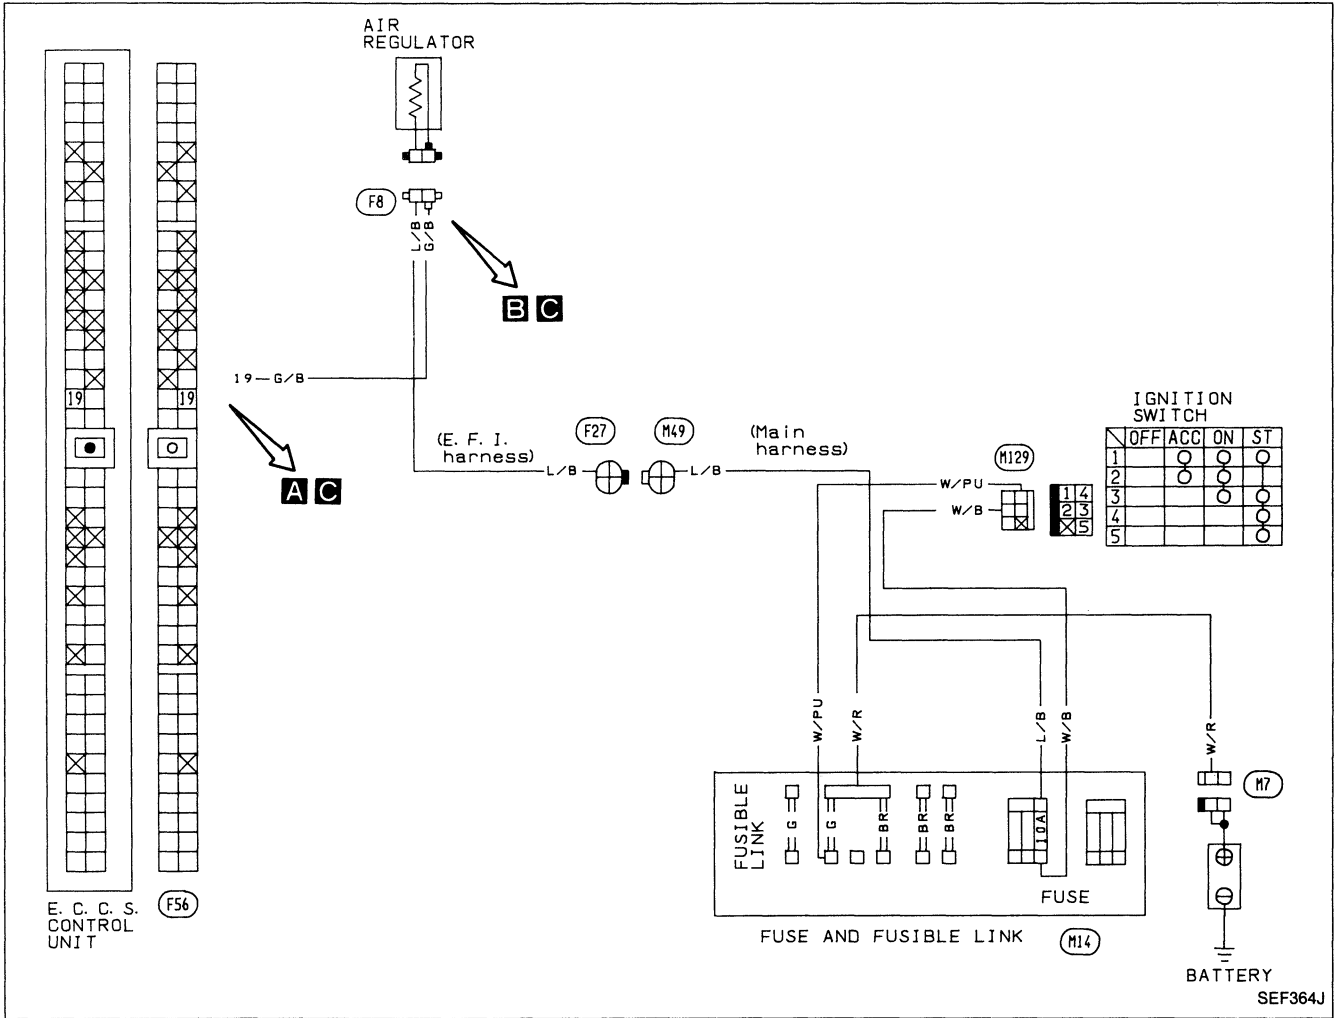


### Harness layout

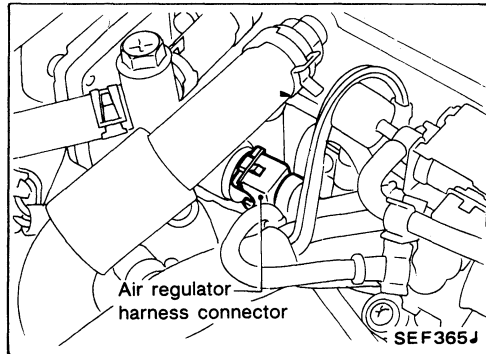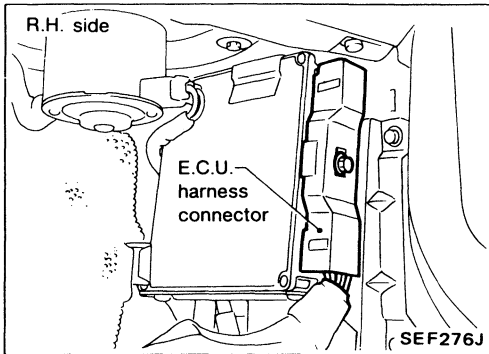

# TROUBLE DIAGNOSES


## Diagnostic Procedure 41 (Cont'd)

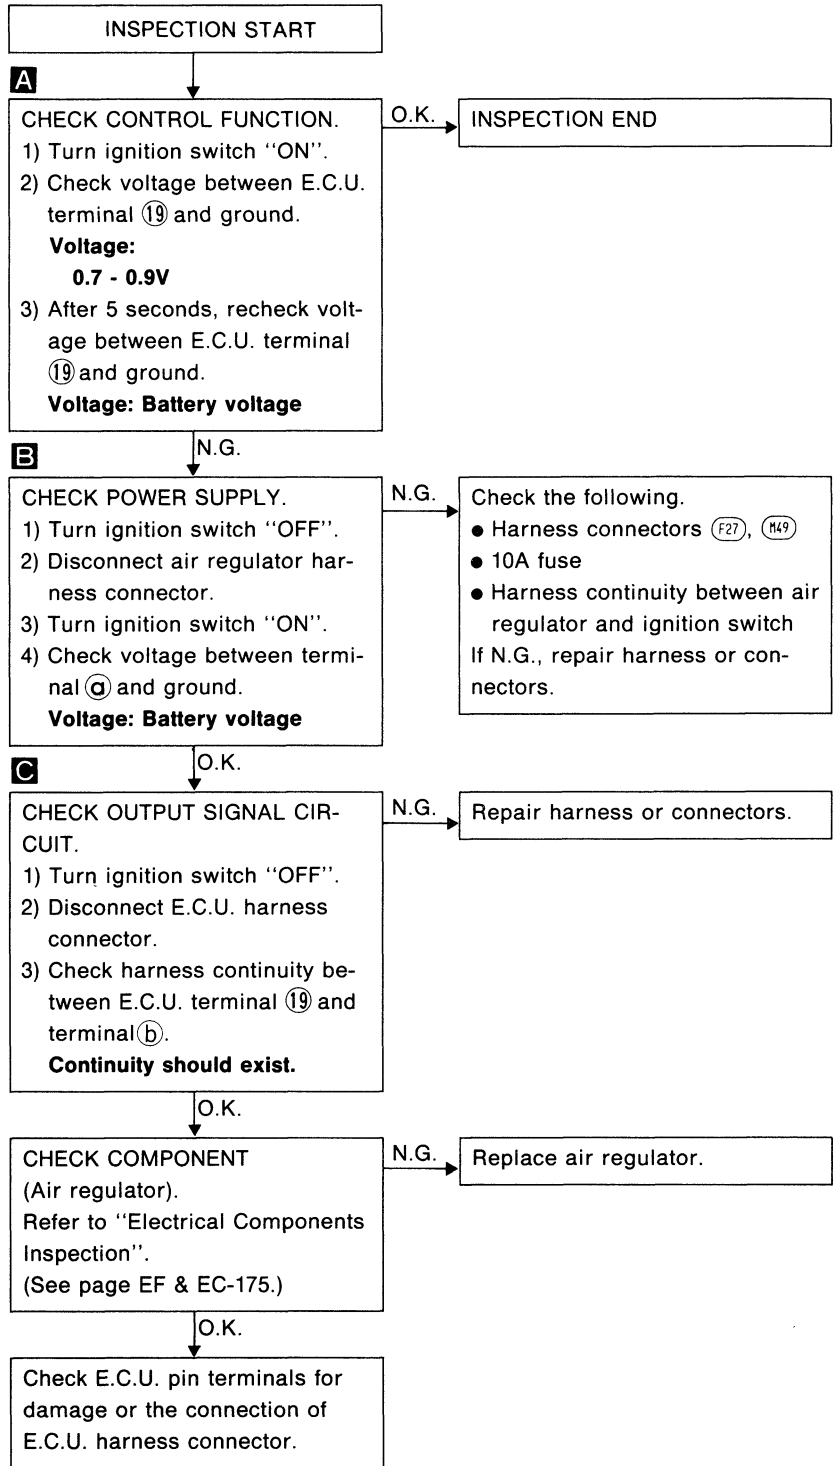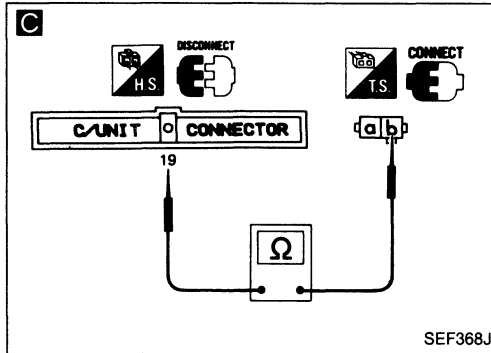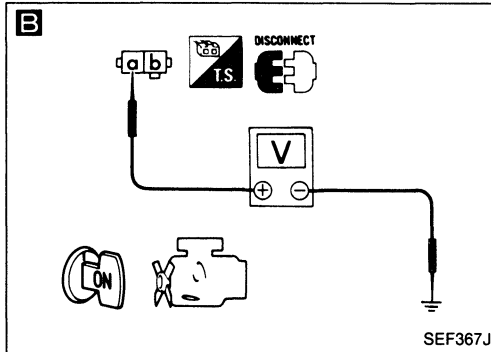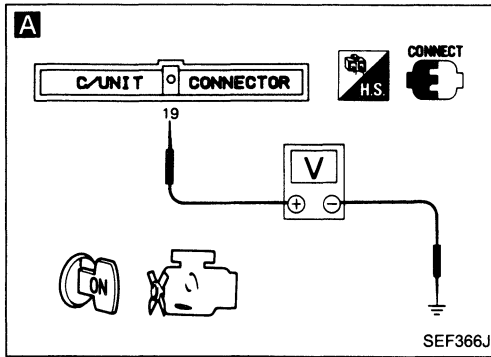



# TROUBLE DIAGNOSES

## Diagnostic Procedure 42

### A.A.C. VALVE (Not self-diagnostic item)





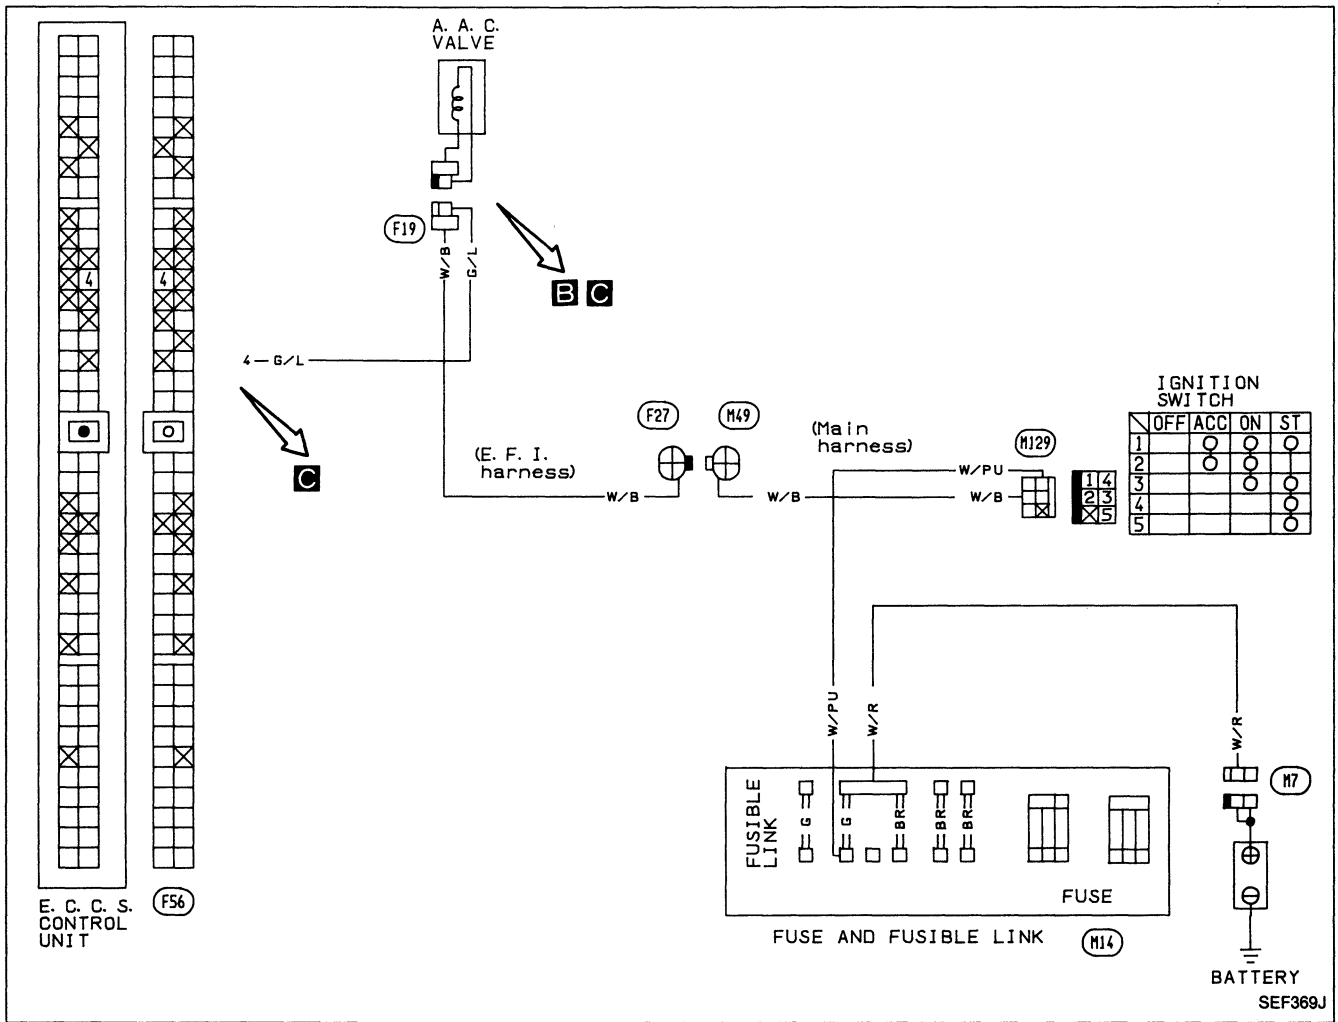


### Harness layout

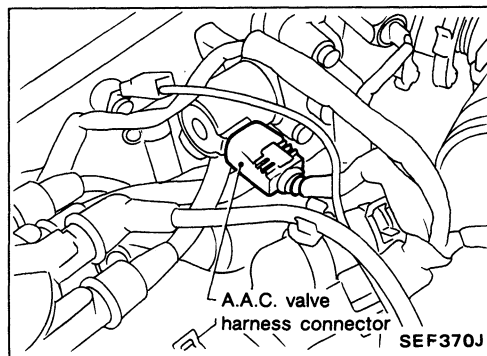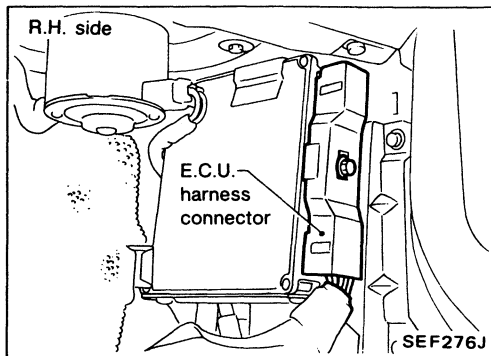

# TROUBLE DIAGNOSES


## Diagnostic Procedure 42 (Cont'd)

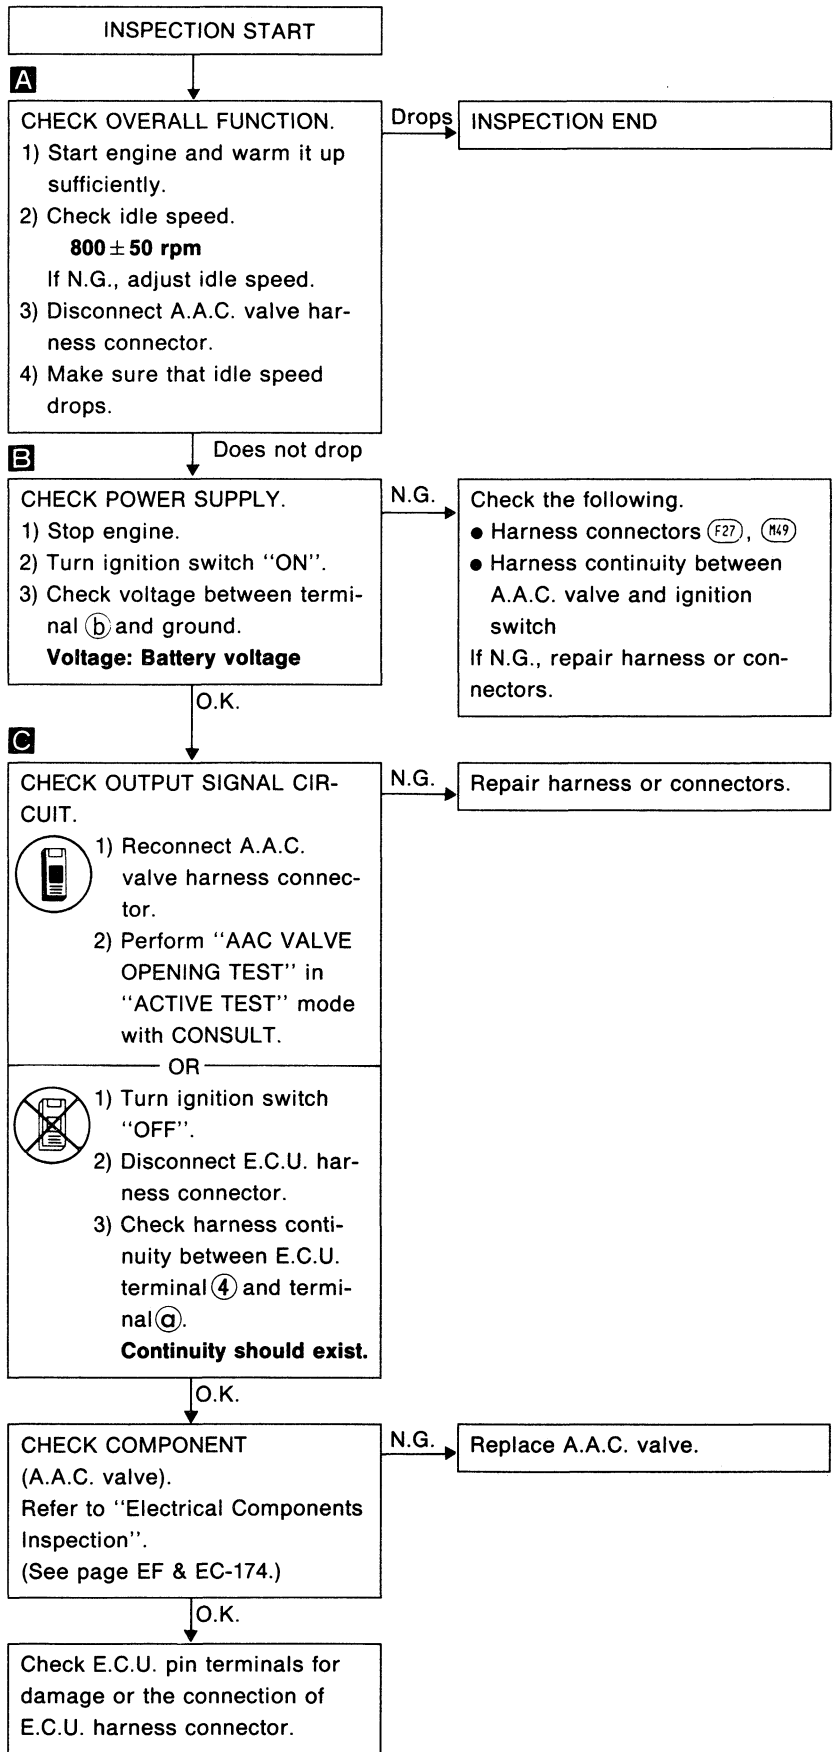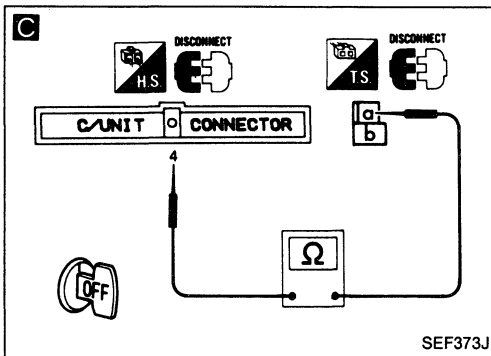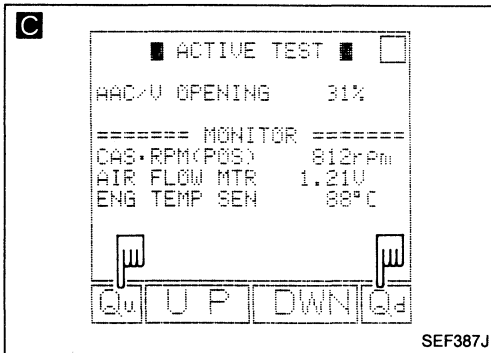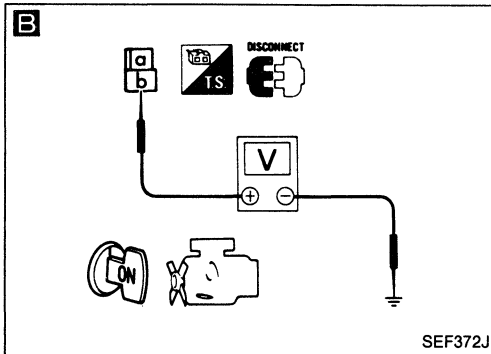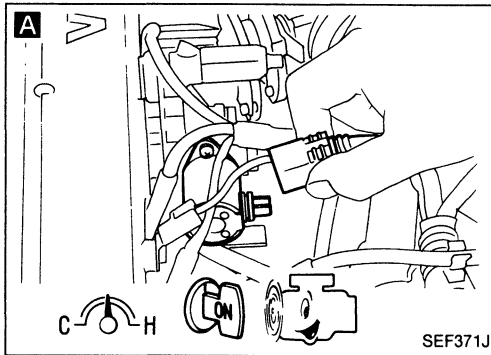



# TROUBLE DIAGNOSES

## Diagnostic Procedure 43

### A/T CONTROL UNIT (NEUTRAL SIGNAL) CIRCUIT (Not self-diagnostic item)



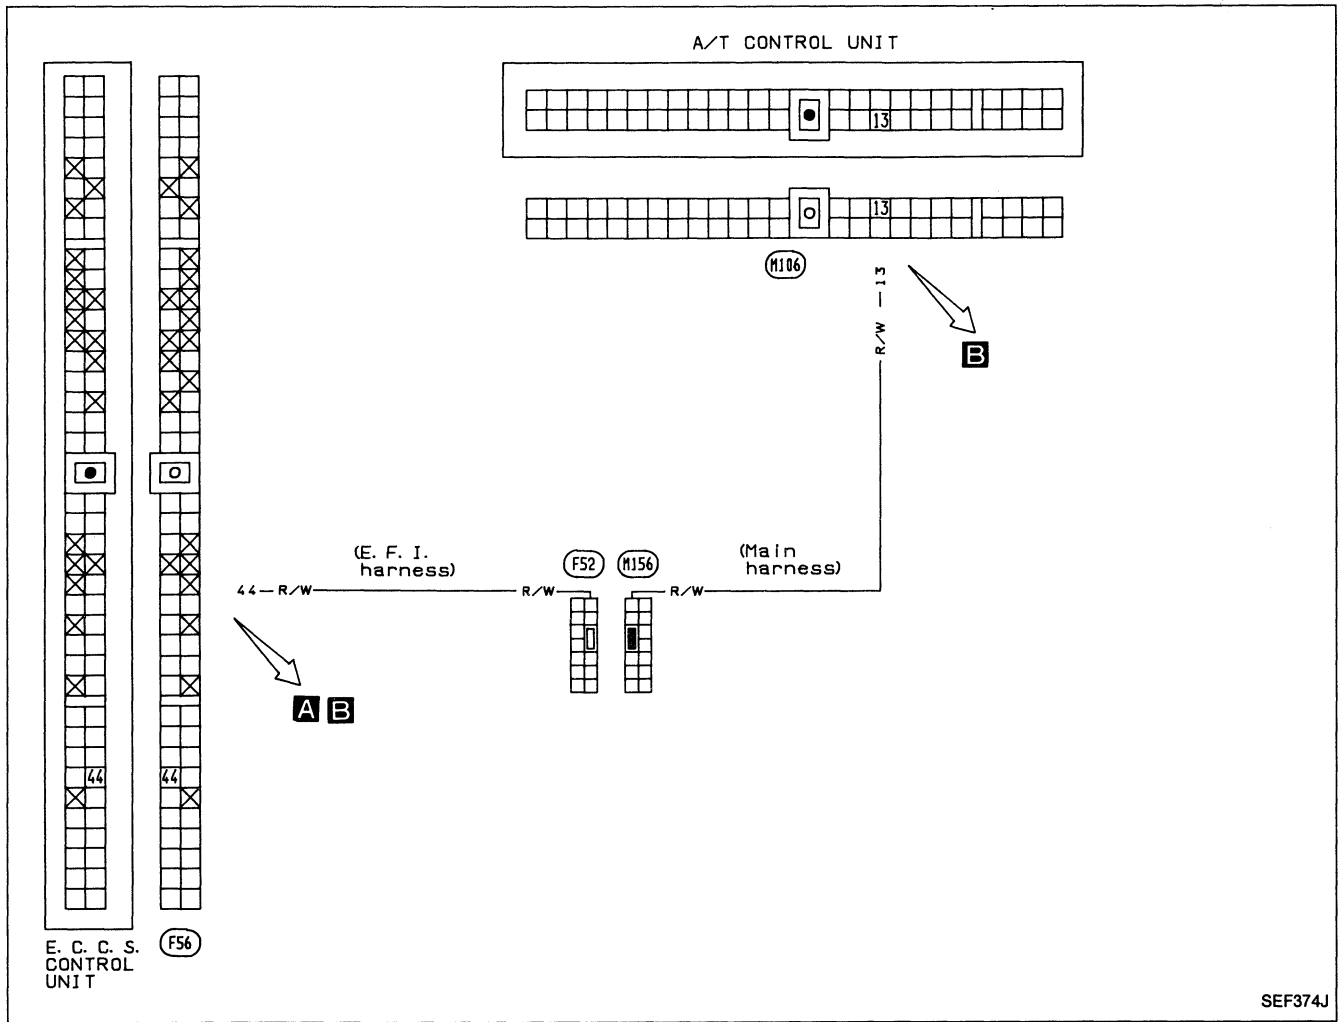


### Harness layout

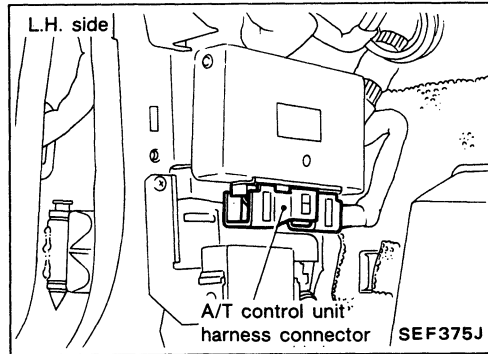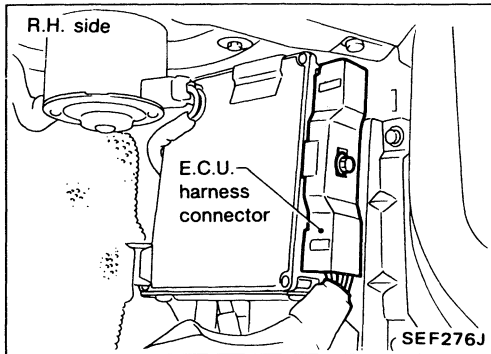

# TROUBLE DIAGNOSES

## Diagnostic Procedure 43 (Cont'd)

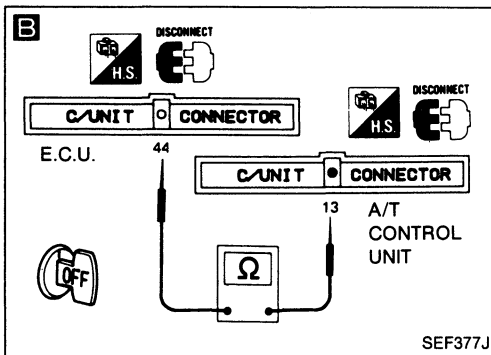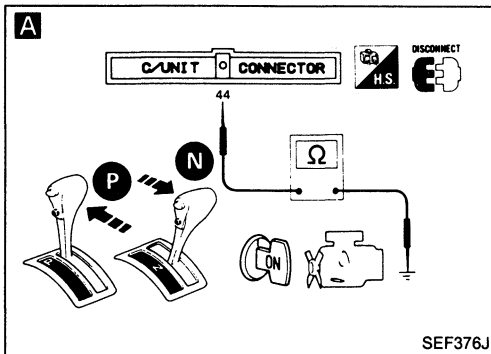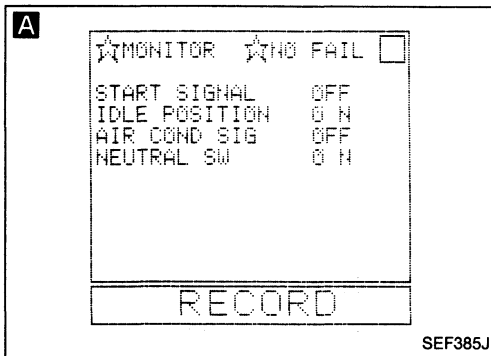

INSPECTION START

**A**

CHECK OVERALL FUNCTION.

1) Turn ignition switch "ON".

2) Check neutral switch signal in "DATA MONITOR" mode with CONSULT.

"N" or "P": ON  
Except above: OFF

OR

O.K.

INSPECTION END

1) Make sure that inhibitor switch circuit functions properly. (Refer to AT section.)

2) Disconnect E.C.U. harness connector.

3) Shift selector lever to "P" range.

4) Turn ignition switch "ON".

5) Check harness continuity between E.C.U. terminal ④④ and body ground.  
**Continuity should exist.**

6) Shift selector lever to "N" range.

7) Check harness continuity between E.C.U. terminal ④④ and body ground.  
**Continuity should exist.**

N.G.

**B**

CHECK INPUT SIGNAL CIRCUIT.

1) Turn ignition switch "OFF".

2) Disconnect A/T control unit harness connector.

3) Check harness continuity between E.C.U. terminal ④④ and terminal ⑬.

**Continuity should exist.**

N.G.

Check the following.

- Harness connectors (F52), (H156)
- Harness continuity between E.C.U. and A/T control unit

If N.G., repair harness or connectors.


O.K.

Check E.C.U. pin terminals for damage or the connection of E.C.U. harness connector.

# TROUBLE DIAGNOSES

## Diagnostic Procedure 44

### FAIL-SAFE SYSTEM FOR CRANK ANGLE SENSOR AND C.P.U. OF E.C.U.

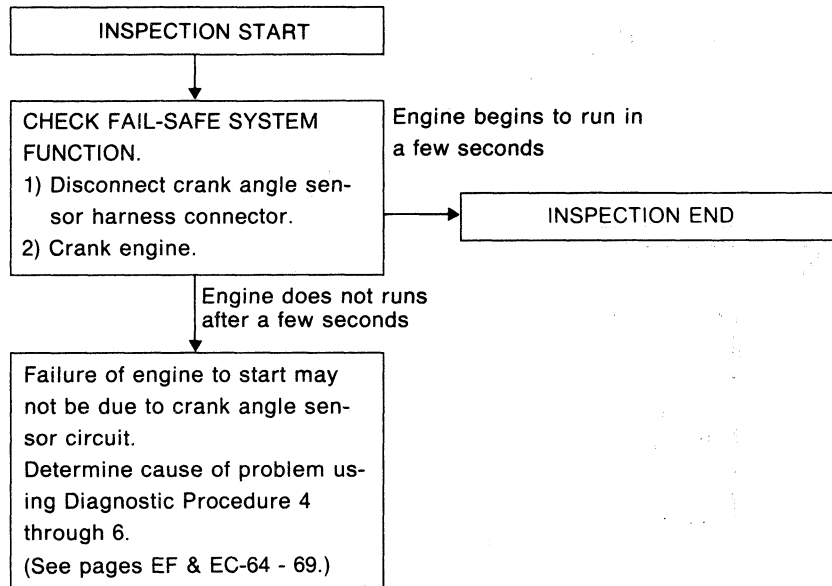






# TROUBLE DIAGNOSES




## Diagnostic Procedure 44 (Cont'd)

### TROUBLE DIAGNOSES FOR FAIL-SAFE SYSTEM

When fail-safe system activates, warning lamp (CHECK ENGINE LIGHT) in instrument panel blinks. When vehicle with such a problem is brought to dealer for checkup, conduct diagnostic procedures using the following chart as a guide.

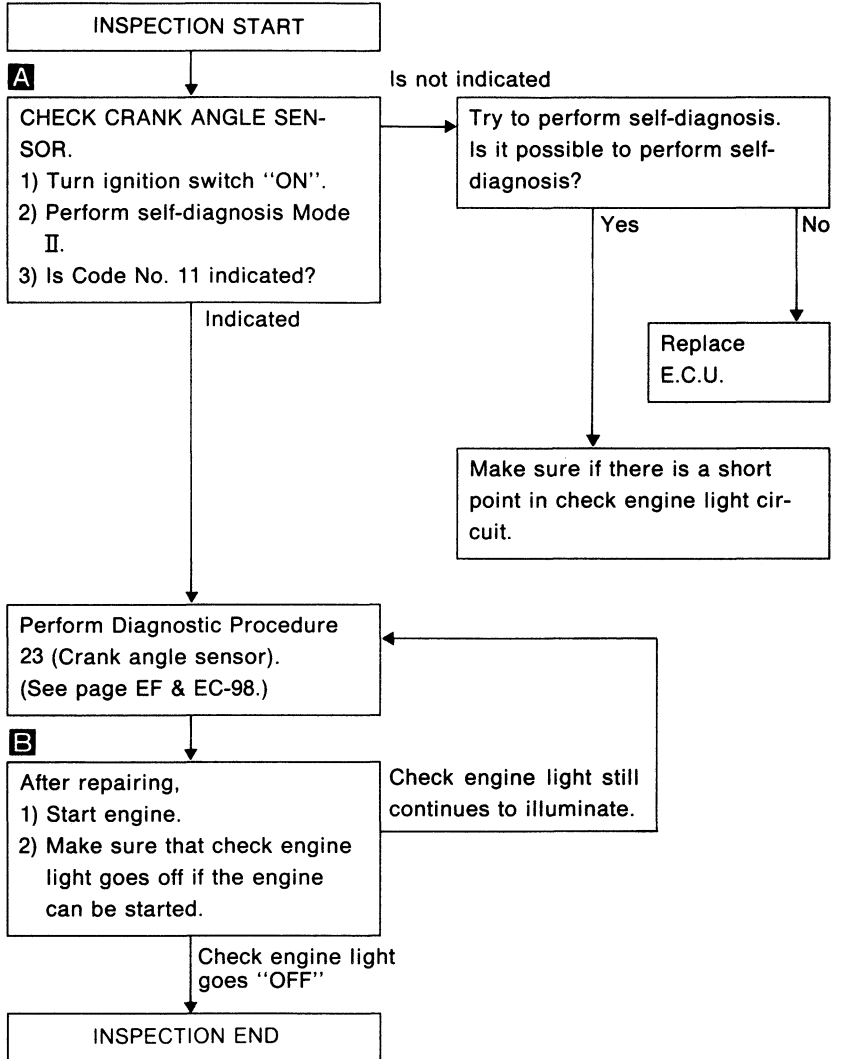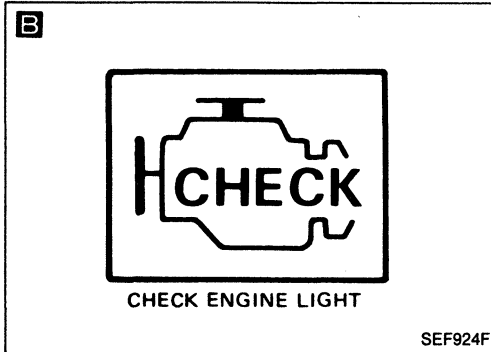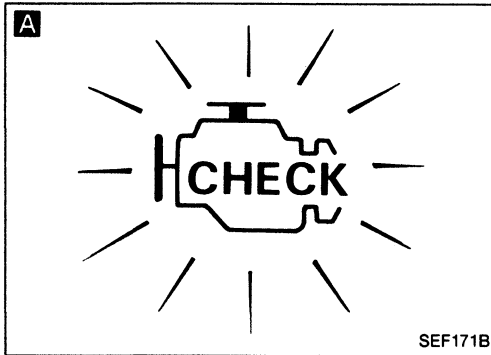

## TROUBLE DIAGNOSES

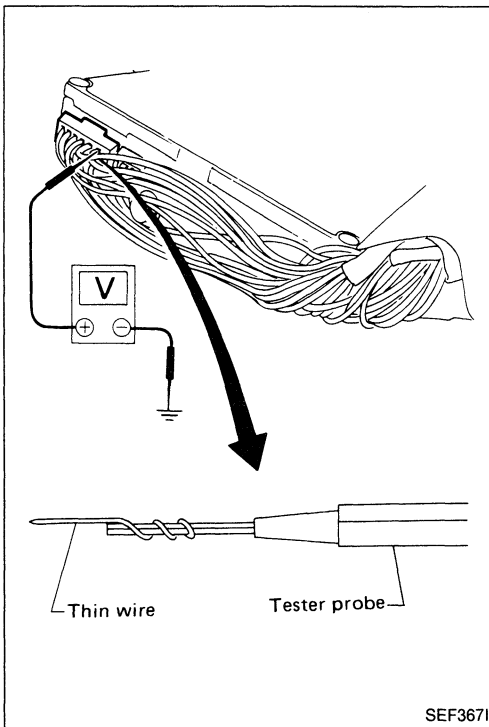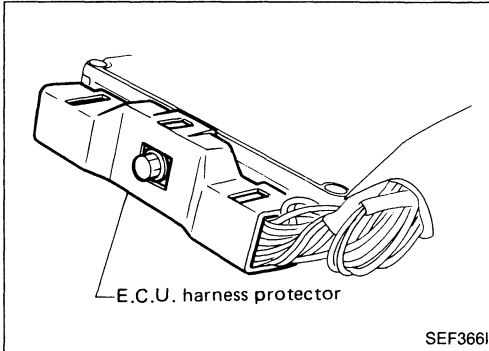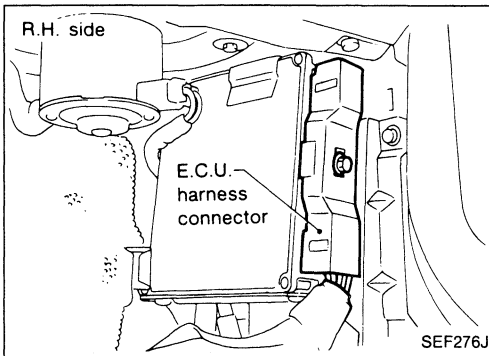

### Electrical Components Inspection

#### E.C.U. INPUT/OUTPUT SIGNAL INSPECTION

1. E.C.U. is located behind the right side dash panel. For this inspection, remove the right side dash panel.
2. Remove E.C.U. harness protector.
3. Perform all voltage measurements with the connectors connected. Extend tester probe as shown to perform tests easily.

# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

### E.C.U. Inspection table

\*Data are reference values.

TER-MINAL NO.	ITEM	CONDITION	*DATA
1	Ignition signal	Engine is running. └ Idle speed	0.4 - 0.6V
		Engine is running. └ Engine speed is 2,000 rpm	1.3 - 1.4V
2	Ignition check	Engine is running. └ Idle speed	BATTERY VOLTAGE (11 - 14V)
4	A.A.C. valve	Engine is running. └ Idle speed	9 - 12V
		Engine is running. └ Air conditioner is operating. └ Rear defogger is "ON". └ Head lamps are in high position.	5 - 9V
9	Air conditioner relay	Engine is running. └ Air conditioner switch "OFF"	BATTERY VOLTAGE (11 - 14V)
		Engine is running. └ Air conditioner switch "ON"	0.7 - 0.9V
16	E.C.U. power source (Self-shutoff)	Engine is running. └ Idle speed	0.8 - 1.0V
		Engine is not running. └ For a few seconds after turning ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
18	Fuel pump relay	Engine is running. └ Normal condition	BATTERY VOLTAGE (11 - 14V)
		Engine is running. └ Abnormal condition └ Fuel pump voltage control circuit (E.C.U. ) └ terminal No. (104) is inoperative.	0.7 - 0.8V

## TROUBLE DIAGNOSES

### Electrical Components Inspection (Cont'd)

\*Data are reference values.

TER-MINAL NO.	ITEM	CONDITION	*DATA
19	Air regulator	Ignition switch "ON" └ For 5 seconds after turning ignition switch "ON"	0.7 - 0.9V
		Engine is running. Ignition switch "ON" └ 5 seconds after turning ignition switch "ON"	BATTERY VOLTAGE (11 - 14V)
23	Detonation sensor	Engine is running. └ Idle speed	3.5 - 4.0V
27	Air flow meter	Engine is running. (Warm-up condition) └ Idle speed	1.0 - 1.5V
		Engine is running. (Warm-up condition) └ Engine speed is 2,000 rpm.	1.4 - 1.9V
28	Engine temperature sensor	Engine is running.	0 - 5.0V Output voltage varies with engine temperature.
29	Exhaust gas sensor	Engine is running. └ After warming up sufficiently and engine speed is 2,000 rpm.	0 ↔ approximately 1.5V
36	Fuel temperature sensor	Engine is running.	0 - 5.0V Output voltage varies with fuel temperature.
38	Throttle sensor	Ignition switch "ON"	0.4 - 4.0V Output voltage varies with throttle valve opening angle.
39	Exhaust gas temperature sensor	Engine is running. (Warm-up condition) └ Idle speed	Less than 4.5V
		Engine is running. (Warm-up condition) └ E.G.R. system is operating.	0 - 1.0V
41 51	Crank angle sensor (Reference signal)	Engine is running. └ <b>Do not run engine at high speed under no-load.</b>	0.3 - 0.5V Output voltage varies slightly with engine speed.
42 52	Crank angle sensor (Position signal)	Engine is running. └ <b>Do not run engine at high speed under no-load.</b>	2.5 - 2.7V Output voltage varies slightly with engine speed.
43	Start signal	Ignition switch "ON"	Approx. 0V
		Ignition switch "START"	BATTERY VOLTAGE (11 - 14V)

# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

\*Data are reference values.

TER-MINAL NO.	ITEM	CONDITION	*DATA
44	A/T control unit (Neutral position)	Ignition switch "ON" └ Gear position is "N" or "P"	Approx. 0V
		Ignition switch "ON" └ Except the above conditions	7.0 - 9.0V
45	Ignition switch	Ignition switch "ON" └ Engine stopped	BATTERY VOLTAGE (11 - 14V)
46	Air conditioner switch	Engine is running. └ Air conditioner switch "OFF"	7.0 - 9.0V
		Engine is running. └ Air conditioner switch "ON"	0.5 - 0.7V
48	Power source for sensors	Ignition switch "ON" └ Engine stopped	Approximately 5.0V
49 59	Power supply	Ignition switch "ON" └ Engine stopped	BATTERY VOLTAGE (11 - 14V)
54	Throttle valve switch (Idle position)	Ignition switch "ON" └ Accelerator pedal is fully released (Engine running).	8.0 - 10.0V
		Ignition switch "ON" └ Accelerator pedal is depressed (Engine running).	0V
57	Power source for idle switch	Ignition switch "ON" └ Engine stopped	8.0 - 10.0V
101 103 105 110 112 114	Injectors	Ignition switch "OFF"	BATTERY VOLTAGE (11 - 14V)
102	E.G.R. control solenoid valve	Engine is running. (Warm-up condition) └ Idle speed	0.7 - 0.8V
		Engine is running. (Warm-up condition) └ Engine speed is 2,000 rpm.	BATTERY VOLTAGE (11 - 14V)
		Engine is running. (Warm-up condition) └ Engine speed is above 3,100 rpm.	0.8 - 0.9V


# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

\*Data are reference values.

TER-MINAL NO.	ITEM	CONDITION	*DATA
104	Fuel pump voltage control	Ignition switch "ON" └ For 5 seconds after turning ignition switch "ON"	Approx. 0.1V
		Engine is running. (Warm-up condition) └ For 30 seconds after engine begins to run.	Approx. 0.5V
		Engine is running. └ Racing (up to 4,000 rpm)	2.0 - 4.5V
111	P.R.V.R. control solenoid valve	Stop and restart engine after warming it up. └ Fuel temperature is above 75°C (167°F)	0 - 1.0V (For 3 minutes after restarting engine)  BATTERY VOLTAGE (11 - 14V) (3 minutes after restarting engine)
		Stop and restart engine after warming it up. └ Fuel temperature is below 75°C (167°F)	BATTERY VOLTAGE(11 - 14V)

### E.C.U. HARNESS CONNECTOR TERMINAL LAYOUT




SEC250B

# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

### CRANK ANGLE SENSOR


1. Remove distributor from engine. (Crank angle sensor harness connector should remain connected.)
2. Turn ignition switch "ON".
3. Rotate distributor shaft slowly by hand and check voltage between terminals ③, ④ and ground.

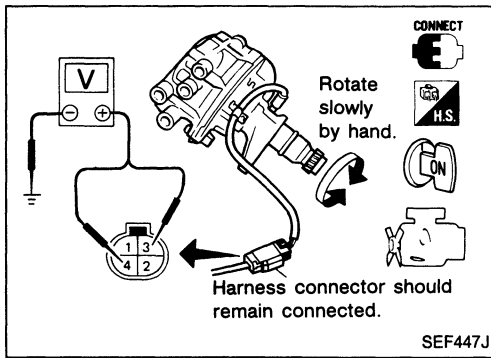

Terminal	Voltage
③ (120° signal)	Tester's pointer fluctuates between 5V and 0V.
④ (1° signal)	


If N.G., replace distributor assembly with crank angle sensor.

4. Visually check signal plate for damage or dust.

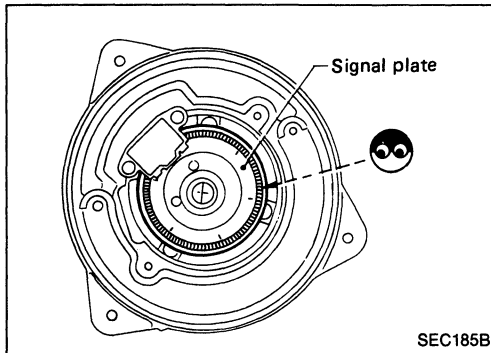


### AIR FLOW METER

1. Peel air flow meter harness connector rubber as shown in the figure if the harness connector is connected.
2. Turn ignition switch "ON".
3. Start engine and warm it up sufficiently.
4. Check voltage between terminal ⑥ and ground.

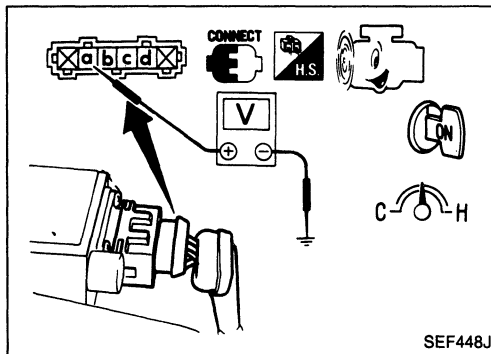

Conditions	Voltage V
Ignition switch "ON" (Engine stopped.)	Less than 0.5
Idle (Engine is warm-up sufficiently.)	Approximately 1.0 - 1.3

5. If N.G., remove air flow meter from air duct. Check hot wire for damage or dust.

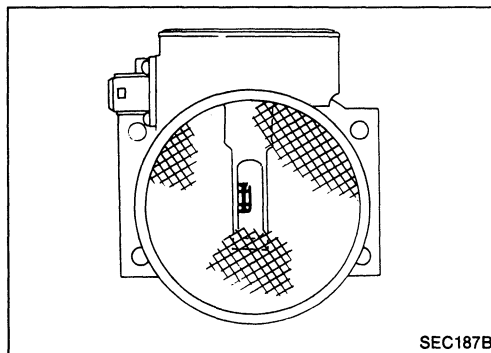


# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

### ENGINE TEMPERATURE SENSOR

1. Disconnect engine temperature sensor harness connector.
2. Check resistance as shown in the figure.

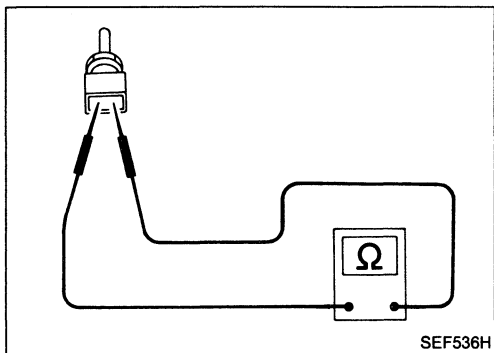


Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.0
80 (176)	0.30 - 0.33

If N.G., replace engine temperature sensor.

### IGNITION COIL

1. Disconnect ignition coil harness connector.
2. Check resistance as shown in the figure.

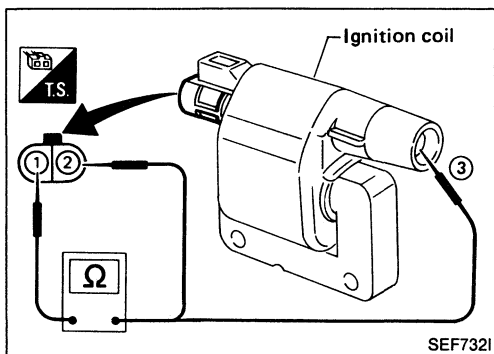


Terminal	Resistance
① - ②	Approximately 1.0Ω
① - ③	Approximately 10 kΩ

If N.G., replace ignition coil.

### POWER TRANSISTOR

1. Disconnect power transistor harness connector.
2. Check power transistor continuity between terminals as shown in the figure.

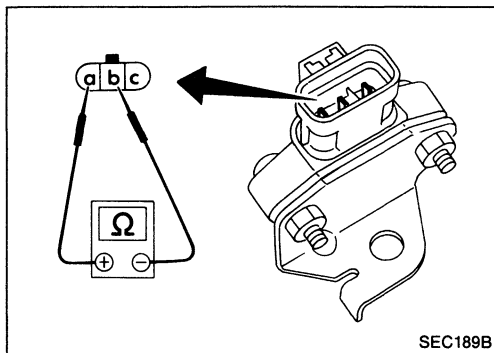

Terminal No.	Tester polarity	Continuity
a	⊕	Yes
b	⊖	
a	⊖	No
b	⊕	
a	⊕	Yes
c	⊖	
a	⊖	No
c	⊕	


If N.G., replace power transistor.

### FUEL PUMP

1. Disconnect fuel pump harness connector.
2. Check resistance between terminals ④ and ⑤.

**Resistance: Approximately 0.5Ω**

If N.G., replace fuel pump.

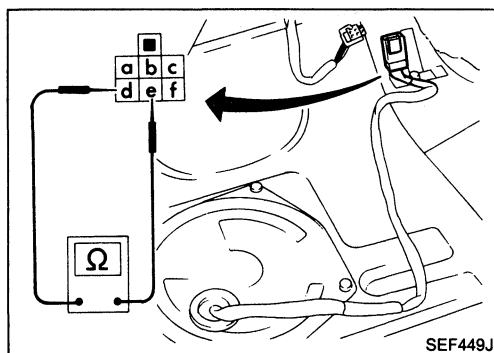




## TROUBLE DIAGNOSES

### Electrical Components Inspection (Cont'd)


#### E.G.R. CONTROL SOLENOID VALVE AND PRESSURE REGULATOR CONTROL SOLENOID VALVE

1. Disconnect E.G.R. control solenoid valve harness connector.
2. Check solenoid valve, following the table as shown below:

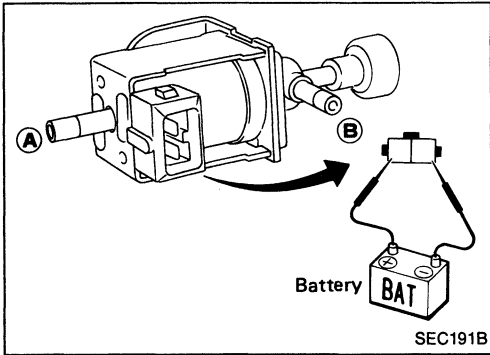

Conditions	Continuity between port (A) and (B)
Supply 12V direct current between terminals ① and ②	Yes
No current supply	No

If N.G., replace E.G.R. control solenoid valve.

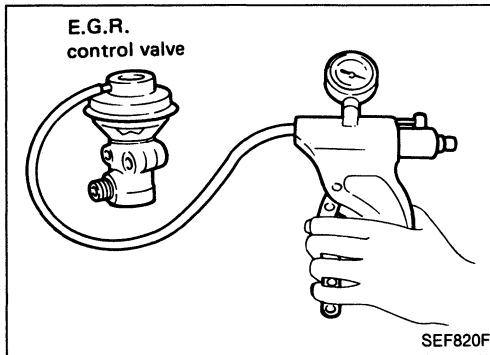

#### E.G.R. CONTROL VALVE


Apply vacuum to E.G.R. vacuum port with a hand vacuum pump.

**E.G.R. control valve spring should lift.**

If N.G., replace E.G.R. control valve.

#### EXHAUST GAS SENSOR

Refer to "Diagnostic Procedure 31".  
(See page EF & EC-128.)

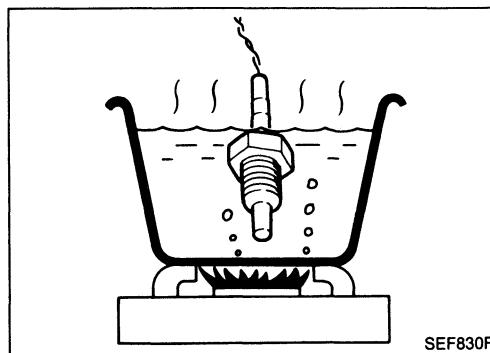

#### EXHAUST GAS TEMPERATURE SENSOR

Check resistance change and resistance value at 100°C (212°F).

- **Resistance should decrease in response to temperature increase.**

**Resistance: 100°C (212°F)**

**85.3 ± 8.53 kΩ**

If N.G., replace exhaust gas temperature sensor.

# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

### THROTTLE SENSOR



1. Disconnect throttle sensor harness connector.
2. Make sure that resistance between terminals (b) and (c) changes when opening throttle valve manually.

Accelerator pedal conditions	Resistance kΩ
Completely released	Approximately 1
Partially released	1 - 9
Completely depressed	Approximately 9

If N.G., replace throttle sensor.

### Adjustment


If throttle sensor is replaced or removed, it is necessary to install in proper position, by following the procedure as shown below:

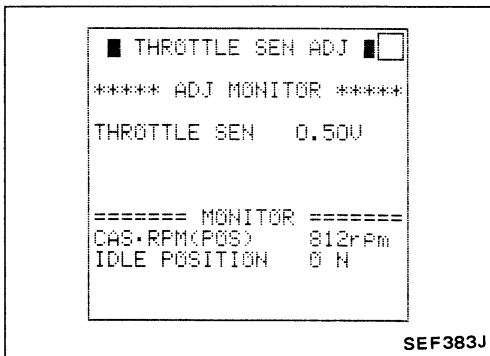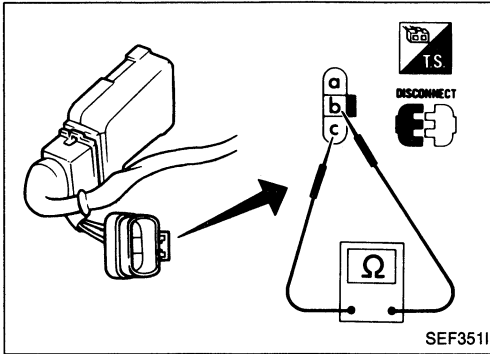


1. Install throttle sensor body in throttle chamber. Do not tighten bolts. Leave bolts loose.
2. Connect throttle sensor and idle switch harness connector.
3. Start engine and warm it up sufficiently.
4. Perform "THROTTLE SEN. ADJ." in "WORK SUPPORT" mode.



Measure output voltage of throttle sensor using voltmeter.

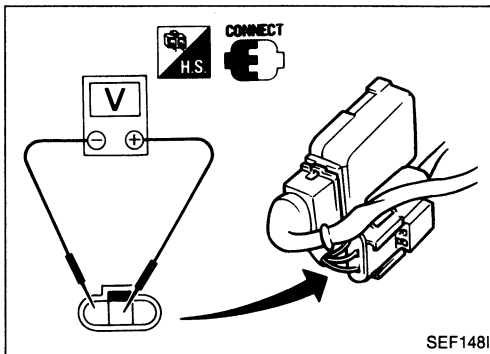

5. Adjust by rotating throttle sensor body so that output voltage is 0.4 to 0.5V.
6. Tighten mounting bolts.
7. Disconnect throttle sensor harness connector for a few seconds and then reconnect it.

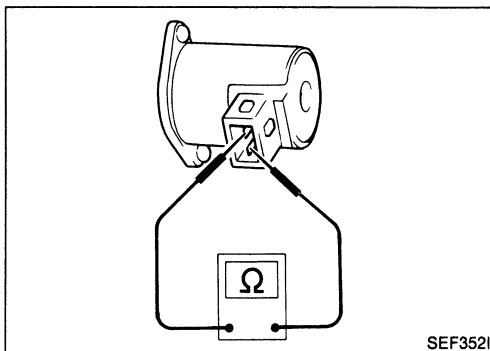

### A.A.C. VALVE


- Check A.A.C. valve resistance.

**Resistance:**


**Approximately 10Ω**

## TROUBLE DIAGNOSES

### Electrical Components Inspection (Cont'd)

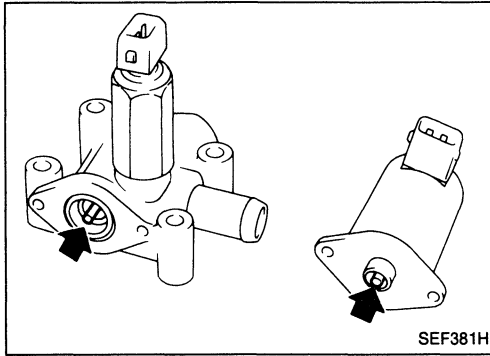


- Check plunger for seizing or sticking.
- Check for broken spring.

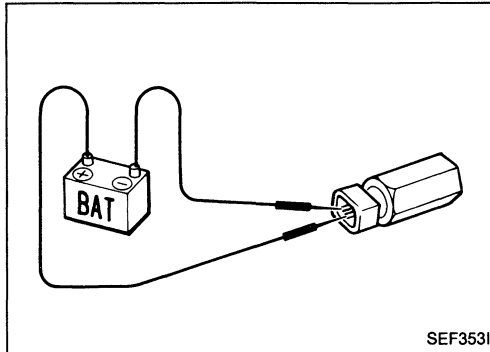


### F.I.C.D. SOLENOID VALVE

- Check for clicking sound when applying 12V direct current to terminals.

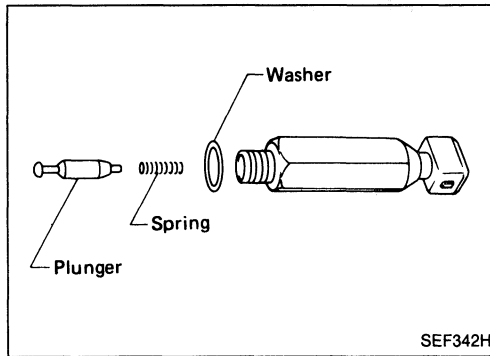


- Check plunger for seizing or sticking.
- Check for broken spring.

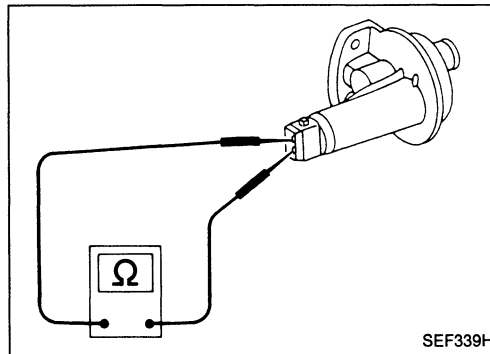

### AIR REGULATOR

- Check air regulator resistance.  
**Resistance:**  
**Approximately 70 - 80Ω**
- Check air regulator for clogging.

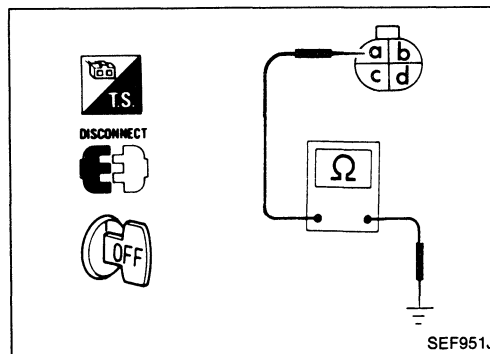

### DETONATION SENSOR


1. Disconnect detonation sensor sub-harness connector.
2. Check continuity between terminal Ⓐ and ground.

**Continuity should exist.**

# TROUBLE DIAGNOSES


## Electrical Components Inspection (Cont'd)

### INJECTOR

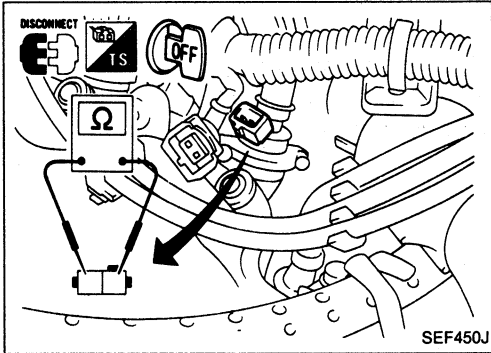

1. Disconnect injector harness connector.
2. Check resistance between terminals as shown in the figure.  
**Resistance: 10 - 14Ω**  
If N.G., replace injector.

### THROTTLE VALVE SWITCH

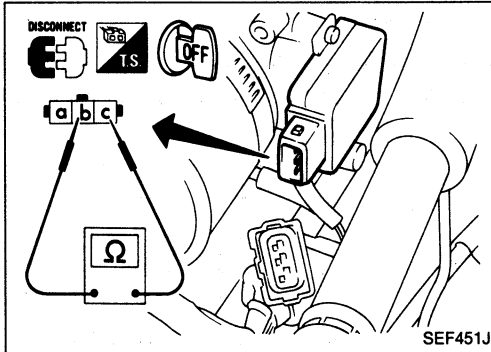


1. Disconnect idle switch harness connector.
2. Check continuity between terminals **b** and **c**.

Accelerator pedal condition	Continuity
Released	Yes
Depressed	No

If N.G., replace idle switch.

### E.C.C.S. RELAY AND FUEL PUMP RELAY

Check continuity between terminals **③** and **⑤**.

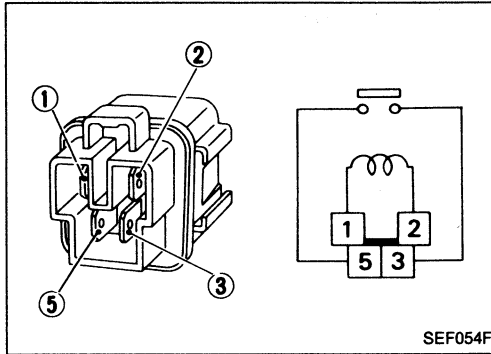


Conditions	Continuity
12V direct current supply between terminals <b>①</b> and <b>②</b>	Yes
No current supply	No

If N.G., replace relay.

### SAFETY RELAY

Check continuity between terminals **②** and **③**.

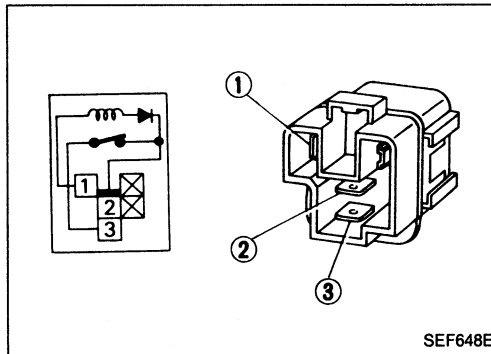

Conditions		Continuity between terminals <b>②</b> and <b>③</b>
12V direct current supply between terminals <b>①</b> and <b>②</b>		
<b>①</b>	<b>②</b>	Yes
-	+	
+	-	No

If N.G., replace relay.

## TROUBLE DIAGNOSES



### Electrical Components Inspection (Cont'd)

#### RESISTOR

1. Disconnect resistor harness connector.
2. Check resistance between terminal Ⓐ and Ⓑ.

**Resistance: Approximately 2.2Ω**

If N.G., replace resistor.

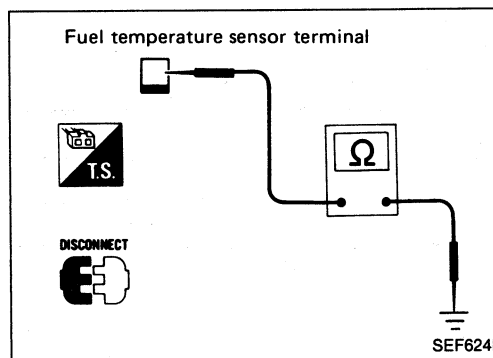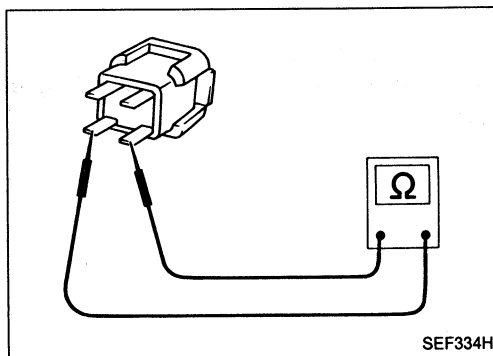


#### FUEL TEMPERATURE SENSOR

1. Disconnect fuel temperature sensor harness connector.
2. Check resistance between terminal and ground as shown in the figure.

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
80 (176)	0.30 - 0.33

If N.G., replace fuel inhibitor switch.

# FUEL INJECTION CONTROL SYSTEM INSPECTION

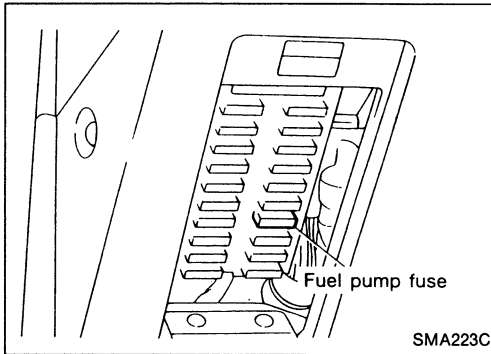

## Releasing Fuel Pressure


**Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.**

1. Remove fuse for fuel pump.
2. Start engine.
3. After engine stalls, crank it two or three times to release all fuel pressure.
4. Turn ignition switch off and reconnect fuel pump relay.

**Erase the memory (Code No. 22) of the self-diagnosis in the control unit.**

## Fuel Pressure Check

- a. When reconnecting fuel line, always use new clamps.
  - b. Make sure that clamp screw does not contact adjacent parts.
  - c. Use a torque driver to tighten clamps.
  - d. Use Pressure Gauge to check fuel pressure.
  - e. Do not perform fuel pressure check while fuel pressure regulator control system is operating; otherwise, fuel pressure gauge might indicate incorrect readings.
1. Release fuel pressure to zero.
  2. Disconnect fuel hose between fuel filter and fuel tube (engine side).
  3. Install pressure gauge between fuel filter and fuel tube.
  4. Start engine and check for fuel leakage.

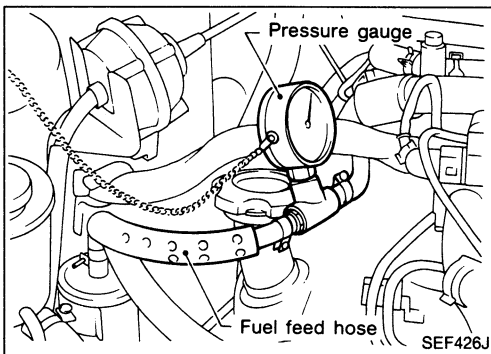

5. Read the indication of fuel pressure gauge.

### At idling:

**When fuel pressure regulator valve vacuum hose is connected.**

**Approximately 235 kPa  
(2.4 kg/cm<sup>2</sup>, 34 psi)**


**When fuel pressure regulator valve vacuum hose is disconnected.**

**Approximately 294 kPa  
(3.0 kg/cm<sup>2</sup>, 43 psi)**

6. Stop engine and disconnect fuel pressure regulator vacuum hose from intake manifold.
7. Plug intake manifold with a rubber cap.
8. Connect variable vacuum source to fuel pressure regulator.


# FUEL INJECTION CONTROL SYSTEM INSPECTION

## Fuel Pressure Check (Cont'd)

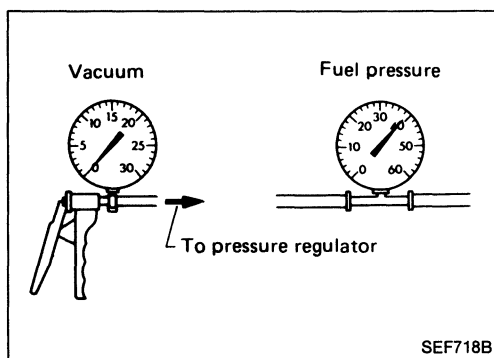

9. Start engine and read indication of fuel pressure gauge as vacuum is changed.


**Fuel pressure should decrease as vacuum increases. If results are unsatisfactory, replace fuel pressure regulator.**

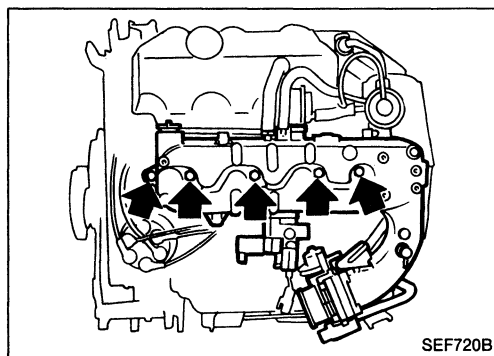

## Injector Removal

1. Release fuel pressure to zero.
  2. Separate A.S.C.D. and accelerator control wire from intake manifold collector.
  3. Remove intake manifold collector from engine.
- The following parts should be disconnected or removed.



- (1) Harness connectors for
  - A.A.C. valve
  - F.I.C.D. solenoid valve
  - Throttle valve switch
  - Throttle sensor
  - Pressure regulator control solenoid valve
  - Air regulator
  - E.G.R. control solenoid valve
  - Exhaust gas temperature sensor
  - Earth harness
- (2) P.C.V. hoses
- (3) Vacuum hoses for
  - Master brake cylinder
  - E.G.R. control solenoid valve
  - Fuel pressure regulator
  - Carbon canister
- (4) Air hoses from
  - Air duct
  - A.A.C. valve
  - Air regulator
- (5) Water hoses for
  - Throttle chamber
  - Air relief plug
- (6) Carbon canister purge hose
- (7) E.G.R. flare tube

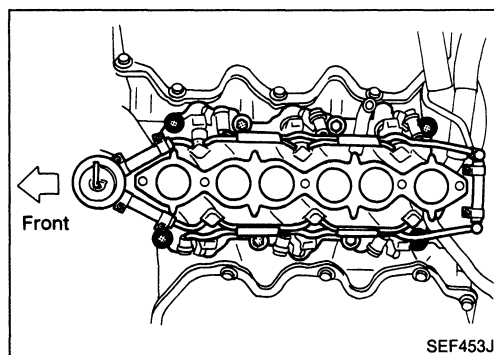

4. Remove injector fuel tube assembly.
- The following parts should be disconnected or removed.
- Vacuum hose for fuel pressure regulator
  - Fuel feed and return hose
  - All injectors harness connectors
  - Fuel temperature sensor harness connector

# FUEL INJECTION CONTROL SYSTEM INSPECTION

## Injector Removal (Cont'd)

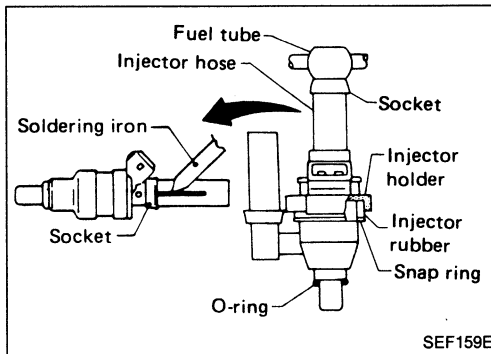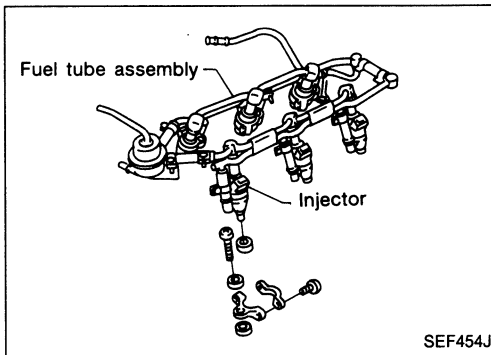

5. Remove any malfunctioning injector from injector fuel tube.

6. Remove fuel hose.

1) Heat sharp knife for 15 minutes. Cut into hose braided reinforcement from mark to socket end and fuel tube end.

**Do not allow sharp knife to cut all the way through the hose and touch injector tail piece.**

2) Then pull rubber hose out with hand.

**Never place injector in a vise when disconnecting rubber hose.**

7. Install fuel hose as follows:

1) Clean exterior of injector tail piece and fuel tube end.

2) Wet inside of new rubber hose with fuel.

3) Push end of rubber hose with hose sockets onto injector tail piece and fuel tube end by hand as far as they will go.

**Clamp is not necessary at the connections.**

8. Reinstall any part removed in reverse order of removal.


### CAUTION:

**After properly connecting fuel hose to injector and fuel tube, check connection for fuel leakage.**



# EVAPORATIVE EMISSION CONTROL SYSTEM

## Description

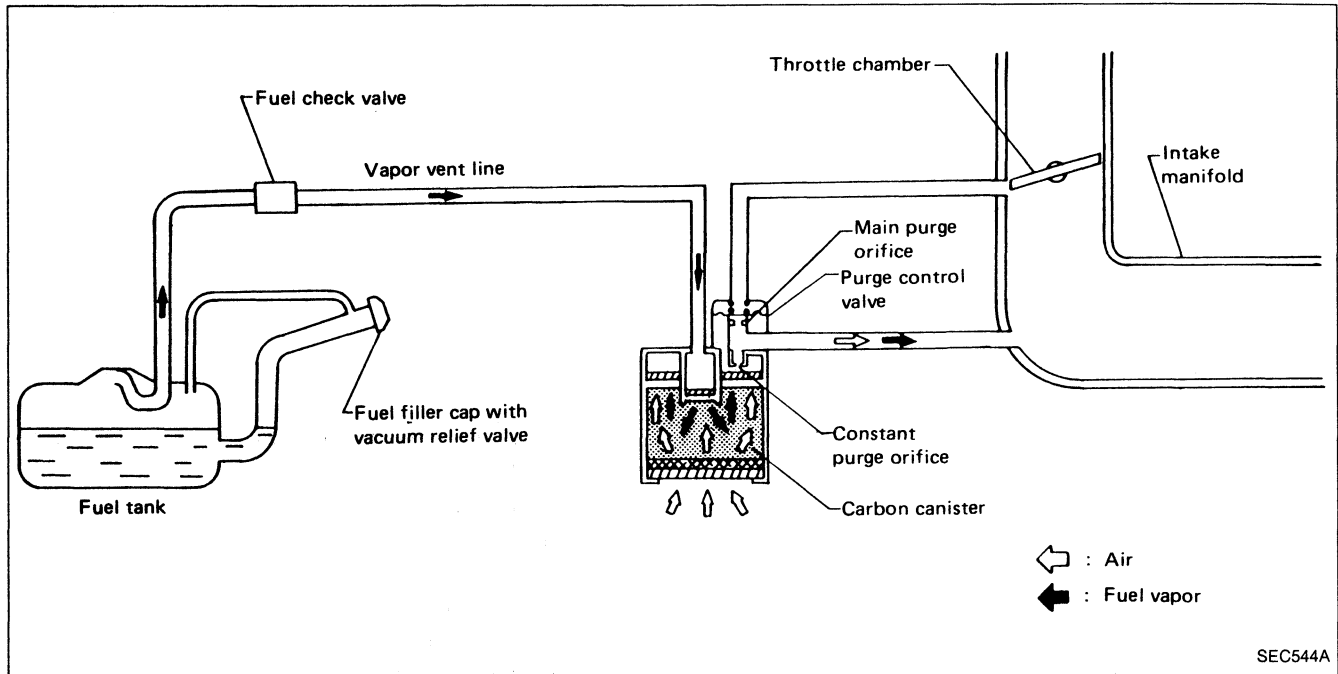


The evaporative emission control system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the carbon canister.

The fuel vapor from the sealed fuel tank is led into the canister which contains activated carbon and the vapor is stored there when the engine is not running.

The canister retains the fuel vapor until the canister is purged by the air drawn through the bottom of the canister to the intake manifold when the engine is running. When the engine runs at idle, the purge control valve is closed.

Only a small amount of stored vapor flows into the intake manifold through the constant purge orifice. As the engine speed increases, and the throttle vacuum rises higher, the purge control valve opens and the vapor is sucked into the intake manifold through both the main purge orifice and the constant purge orifice.

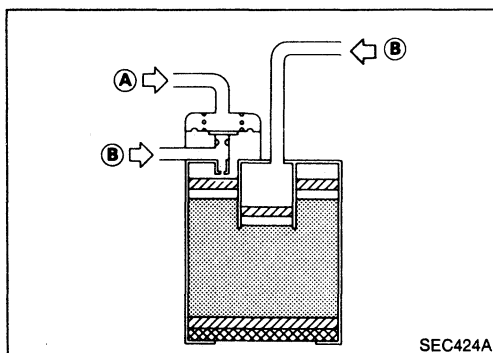

## Inspection

### CARBON CANISTER

Check carbon canister as follows:


- Ⓐ : Blow air and ensure that there is no leakage.
- Ⓑ : Blow air and ensure that there is leakage.

# EVAPORATIVE EMISSION CONTROL SYSTEM

## Inspection (Cont'd)


### FUEL TANK VACUUM RELIEF VALVE

1. Wipe clean valve housing.
2. Inhale air through the cap. A slight resistance accompanied by valve clicks indicates that valve is in good mechanical condition. Note also that, by further inhaling air, the resistance should disappear with valve clicks.
3. If valve is clogged or if no resistance is felt, replace cap as an assembly.

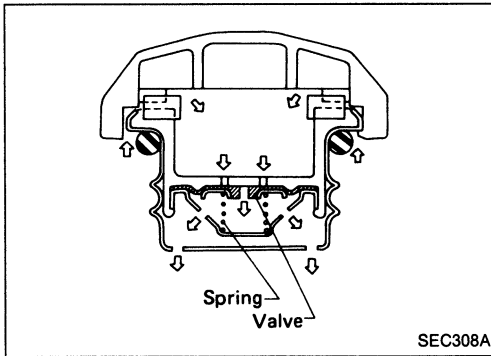


### FUEL CHECK VALVE

1. Blow air through connector on fuel tank side.  
A considerable resistance should be felt and a portion of air flow should be directed toward the canister.
2. Blow air through connector on canister side.  
Air flow should be smoothly directed toward fuel tank.
3. If fuel check valve is suspected of not properly functioning in steps 1 and 2 above, replace it.

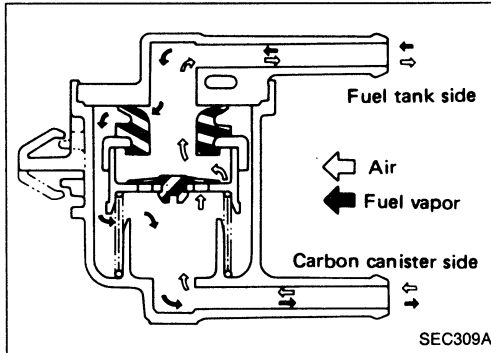

# CRANKCASE EMISSION CONTROL SYSTEM

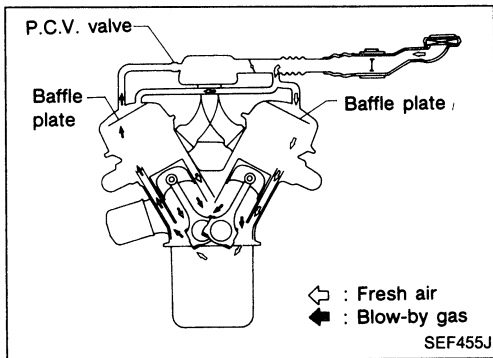

## Description

This system returns blow-by gas to both the intake manifold and air inlet tubes.

The positive crankcase ventilation (P.C.V.) valve is provided to conduct crankcase blow-by gas to the intake manifold.


During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the P.C.V. valve.

Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air.

The ventilating air is then drawn from the air inlet tubes, through the hose connecting air inlet tubes to rocker cover, into the crankcase.

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve, and its flow goes through the hose connection in the reverse direction.


On vehicles with an excessively high blow-by some of the flow will go through the hose connection to the air inlet tubes under all conditions.

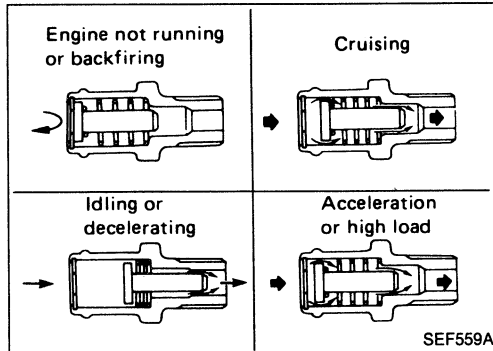

## Inspection


### P.C.V. (Positive Crankcase Ventilation)

With engine running at idle, remove ventilation hose from P.C.V. valve; if the valve is working properly, a hissing noise will be heard as air passes through it and a strong vacuum should be felt immediately when a finger is placed over valve inlet.

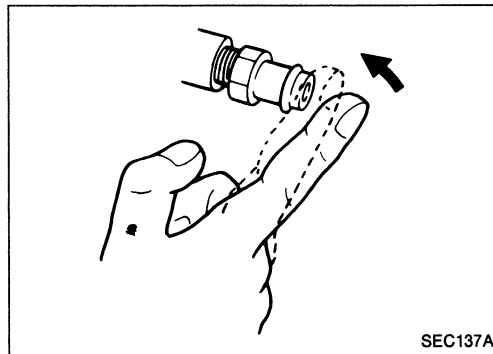

### VENTILATION HOSE

1. Check hoses and hose connections for leaks.
2. Disconnect all hoses and clean with compressed air. If any hose cannot be freed of obstructions, replace.

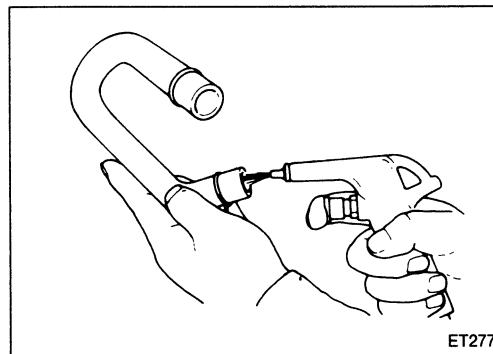

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## General Specifications

### PRESSURE REGULATOR

Regulated pressure kPa (kg/cm <sup>2</sup> , psi)	299.1 (3.05, 43.4)
--	--------------------

## Inspection and Adjustment

Idle speed*1	rpm	
No-load*2 (in "N" position)		800 ± 50
Air conditioner: ON (in "N" position)		800 ± 50
Ignition timing		15° ± 2° B.T.D.C.
Throttle sensor idle position	V	0.4 - 0.5

\*1: Feedback controlled and needs no adjustments

\*2: Under the following conditions:

- Air conditioner switch: OFF
- Electric load: OFF (Lights, heater, fan & rear defogger)

### IGNITION COIL

Primary voltage	V	12
Primary resistance [at 20°C (68°F)]	Ω	Approximately 1.0
Secondary resistance [at 20°C (68°F)]	kΩ	Approximately 10.0

### AIR FLOW METER

Supply voltage	V	Battery voltage (11 - 14)
Output voltage	V	Approximately 1.0 - 1.3*

\*: Engine is warmed up sufficiently and idling under no-load.

### ENGINE TEMPERATURE SENSOR AND FUEL TEMPERATURE SENSOR

Temperature °C (°F)	Resistance kΩ
20 (68)	2.1 - 2.9
50 (122)	0.68 - 1.00
80 (176)	0.30 - 0.33

### FUEL PUMP

Resistance	Ω	Approximately 0.5
------------	---	-------------------

### EXHAUST GAS TEMPERATURE SENSOR

Resistance [at 100°C (212°F)]	kΩ	85.3 ± 8.53
----------------------------------	----	-------------

### A.A.C. VALVE

Resistance	Ω	Approximately 10.0
------------	---	--------------------

### INJECTOR

Resistance	Ω	10 - 14
------------	---	---------


### RESISTOR

Resistance	kΩ	Approximately 2.2
------------	----	-------------------

### THROTTLE SENSOR

Accelerator pedal conditions	Resistance kΩ
Completely released	Approximately 1
Partially released	1 - 9
Completely depressed	Approximately 9

# ENGINE CONTROL, FUEL & EXHAUST SYSTEMS

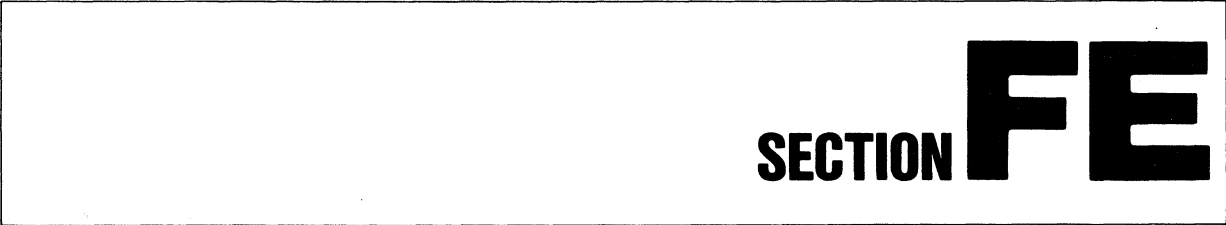


## CONTENTS

ENGINE CONTROL SYSTEM .....	FE-2
FUEL SYSTEM .....	FE-3
EXHAUST SYSTEM .....	FE-4



## Accelerator Control System

- When removing accelerator cable, make a mark to indicate lock nut's initial position.
- Check that throttle valve opens fully when accelerator pedal is fully depressed and that it returns to idle position when pedal is released.
- Adjust accelerator cable according to the following procedure.  
Tighten "adjusting nut" until "throttle drum" starts to move.  
From that position turn back "adjusting nut" 1.5 to 2 turns, and fasten it with a lock nut.
- Check accelerator control parts for improper contact with any adjacent parts.
- When connecting accelerator cable, be careful not to twist or scratch its inner wire.

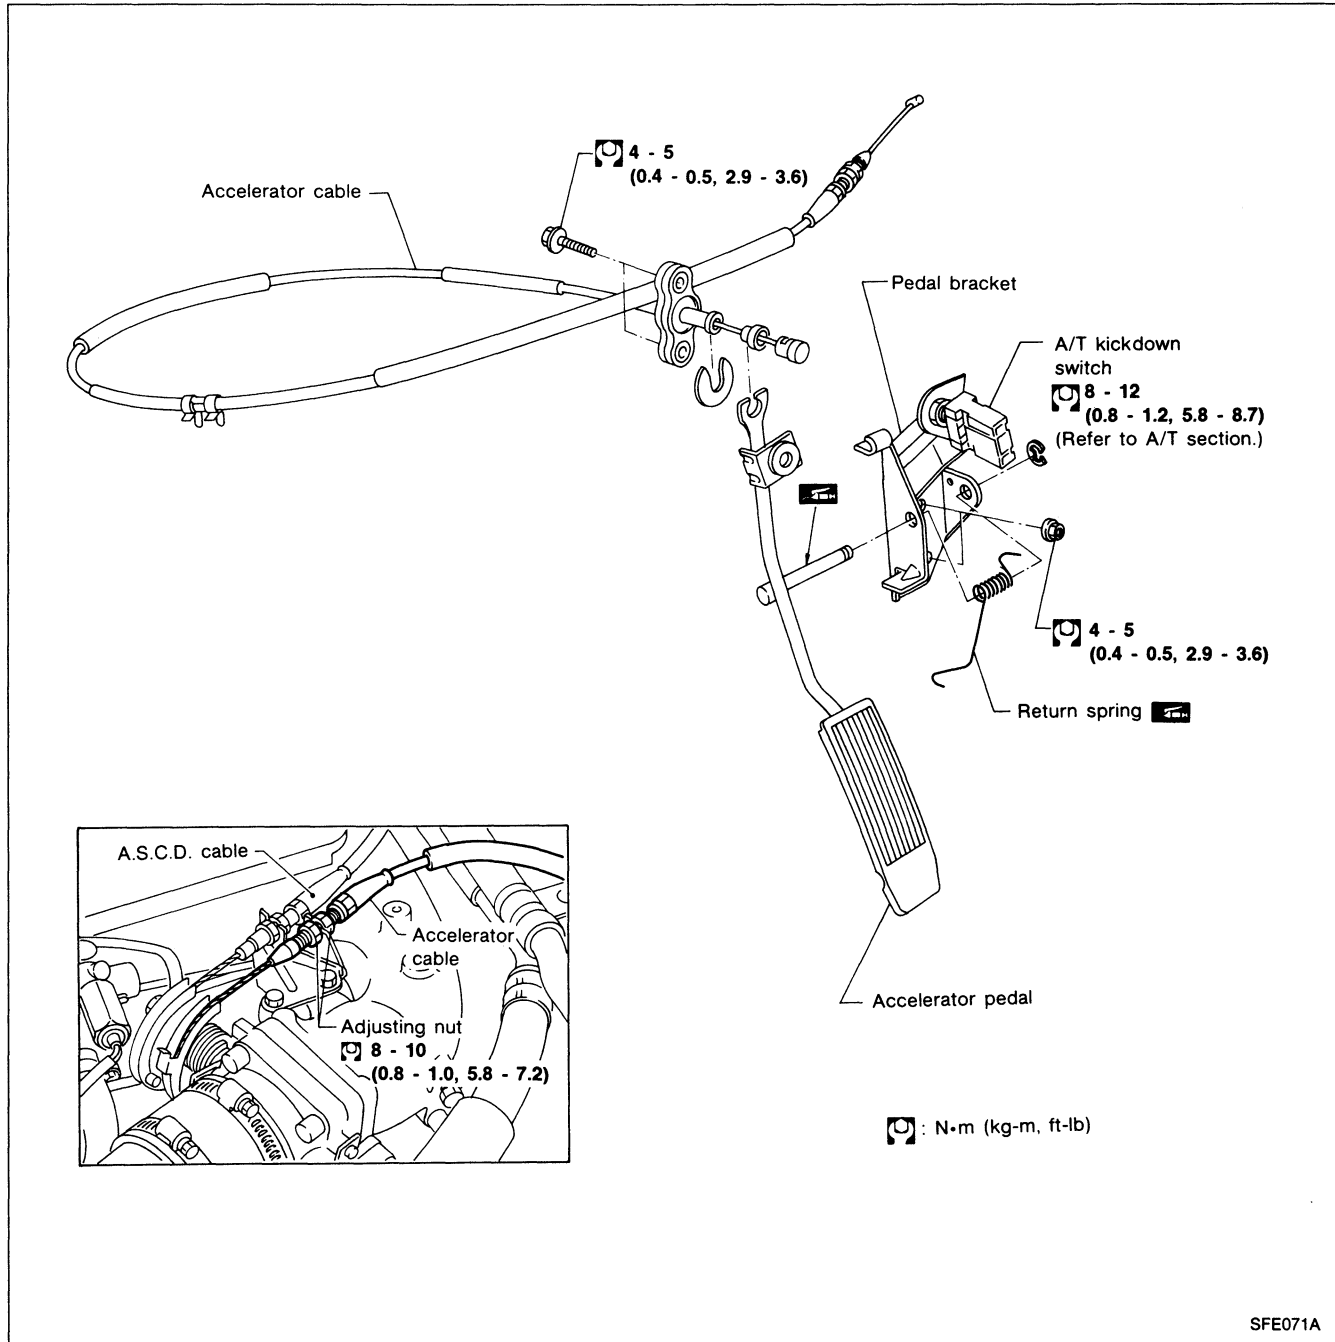

# FUEL SYSTEM


## WARNING:

When replacing fuel line parts, be sure to observe the following:

- Put a "CAUTION: INFLAMMABLE" sign in workshop.
- Be sure to furnish workshop with a CO<sub>2</sub> fire extinguisher.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from work area.
- Be sure to disconnect battery ground cable before conducting operations.
- Put drained fuel in an explosion-proof container and put lid on securely.

## CAUTION:

- Before disconnecting fuel hose, release fuel pressure from fuel line. Refer to "Changing Fuel Filter" in MA section.
- Do not disconnect any fuel line unless absolutely necessary.
- Plug hose and pipe openings to prevent entry of dust or dirt.
- Always replace O-ring and clamps with new ones.
- Do not kink or twist hose and tube when they are installed.
- Do not tighten hose clamps excessively.
- When installing fuel check valve, be careful of its designated direction. (Refer to section EF & EC.)
- After assembly, run engine and check for fuel leaks at connections.

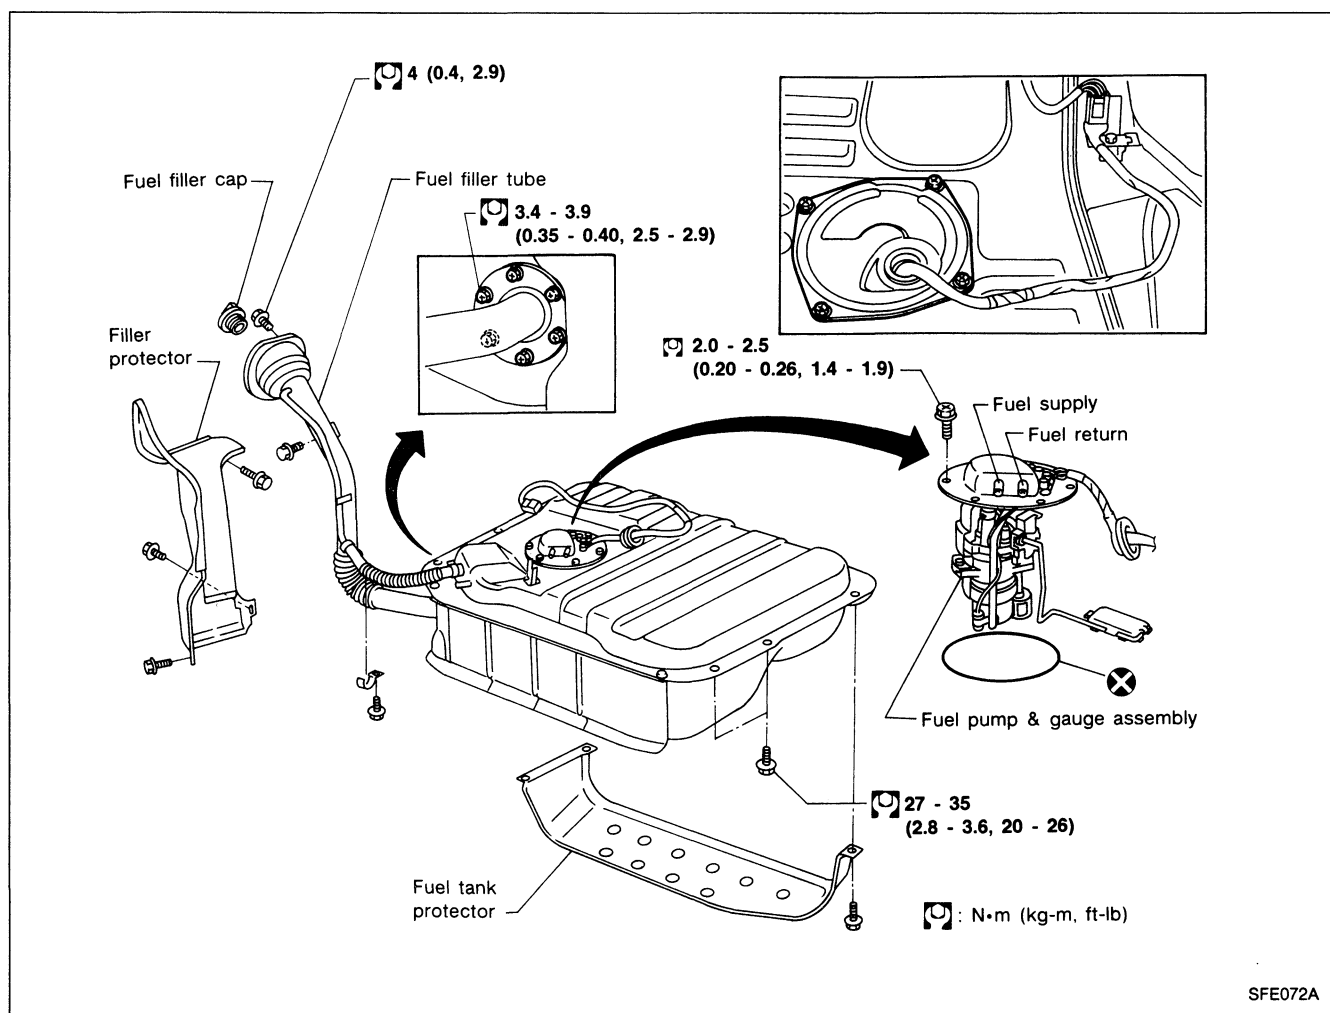





# AUTOMATIC TRANSMISSION

## SECTION **AT**

### CONTENTS

PREPARATION .....	AT- 2
PRECAUTIONS .....	AT- 4
A/T CONTROL DIAGRAM .....	AT- 5
ON-VEHICLE SERVICE .....	AT- 8
TROUBLE DIAGNOSES .....	AT- 12
REMOVAL AND INSTALLATION .....	AT-110
MAJOR OVERHAUL .....	AT-112
DISASSEMBLY .....	AT-116
REPAIR FOR COMPONENT PARTS .....	AT-127
ASSEMBLY .....	AT-172
SERVICE DATA AND SPECIFICATIONS (S.D.S.) .....	AT-191

**AT**







**When you read wiring diagrams:**

- Read GI section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.


**When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES".**

# PREPARATION

## SPECIAL SERVICE TOOLS

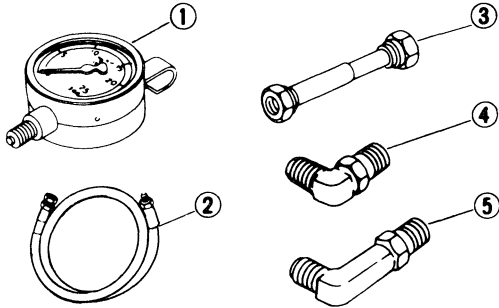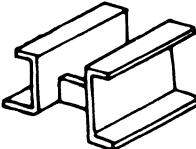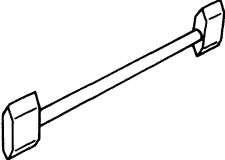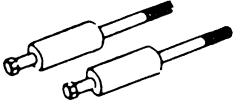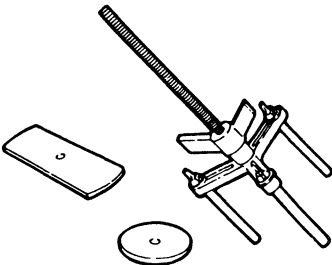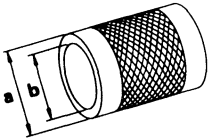Tool number (Kent-Moore No.) Tool name	Description
ST2505S001 (J25695-A) Oil pressure gauge set ① ST25051001 ( — ) Oil pressure gauge ② ST25052000 ( — ) Hose ③ ST25053000 ( — ) Joint pipe ④ ST25054000 ( — ) Adapter ⑤ ST25055000 ( — ) Adapter	<div style="display: flex; justify-content: space-between;"> <div data-bbox="1130 317 1390 342">Measuring line pressure</div>  </div>
ST07870000 (J37068) Transmission case stand	<div style="display: flex; justify-content: space-between;">  <div data-bbox="1130 894 1417 951">Disassembling and assembling A/T</div> </div>
KV31102100 (J37065) Torque converter one-way clutch tool	<div style="display: flex; justify-content: space-between;">  <div data-bbox="1130 1068 1422 1125">Checking one-way clutch in torque converter</div> </div>
ST25850000 (J25721-A) Sliding hammer	<div style="display: flex; justify-content: space-between;">  <div data-bbox="1130 1245 1446 1270">Removing oil pump assembly</div> </div>
KV31102400 (J34285 and J34285-87) Clutch spring compressor	<div style="display: flex; justify-content: space-between;">  <div data-bbox="1130 1419 1390 1476">Removing and installing clutch return springs</div> </div>
ST33200000 (J37067) Drift	<div style="display: flex; justify-content: space-between;">  <div data-bbox="813 1839 1068 1885">           a: 60 mm (2.36 in) dia.            b: 44.5 mm (1.752 in) dia.         </div> <div data-bbox="1130 1745 1455 1829">           Installing oil pump housing oil seal            Installing rear oil seal         </div> </div>

# PREPARATION

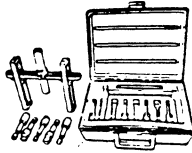Tool number (Kent-Moore No.) Tool name	Description
(J34291) Shim setting gauge set	 <p data-bbox="1118 275 1406 365">Selecting oil pump cover bearing race and oil pump thrust washer</p>

# PRECAUTIONS


---

## Service Notice

- Before proceeding with disassembly, thoroughly clean the outside of the transmission. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transmission.
- When disassembling parts, place them in order in a parts rack so that they can be put back into the unit in their proper positions.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transmission is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place removed parts in order on a parts rack so they can be put back in the valve body in the same positions and sequences. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along their bores in the valve body under their own weight.
- Before assembly, apply a coat of recommended A.T.F. to all parts. Petroleum jelly may be applied to O-rings and seals and used to hold small bearings and washers in place during reassembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- After overhaul, refill the transmission with new A.T.F.


# A/T CONTROL DIAGRAM

## Hydraulic Control Circuits

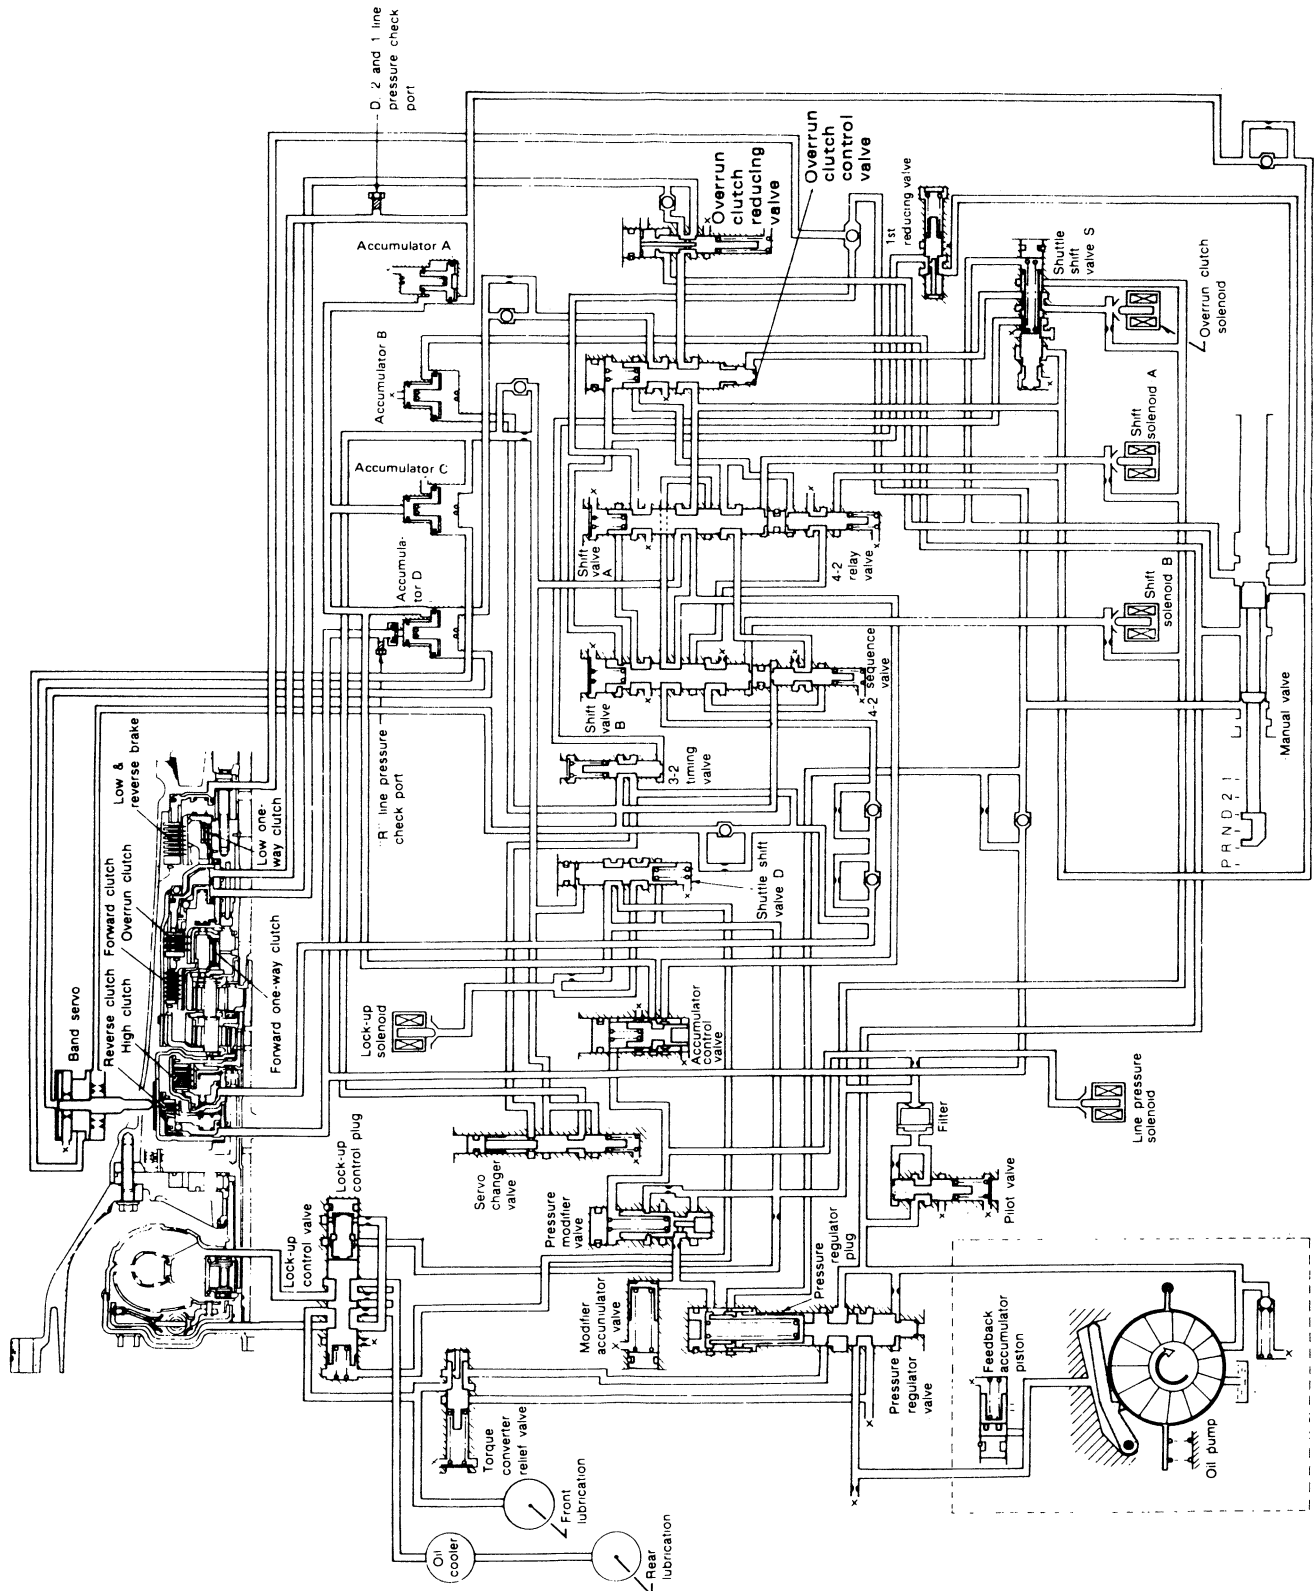

# A/T CONTROL DIAGRAM

## Electrical Control Chart

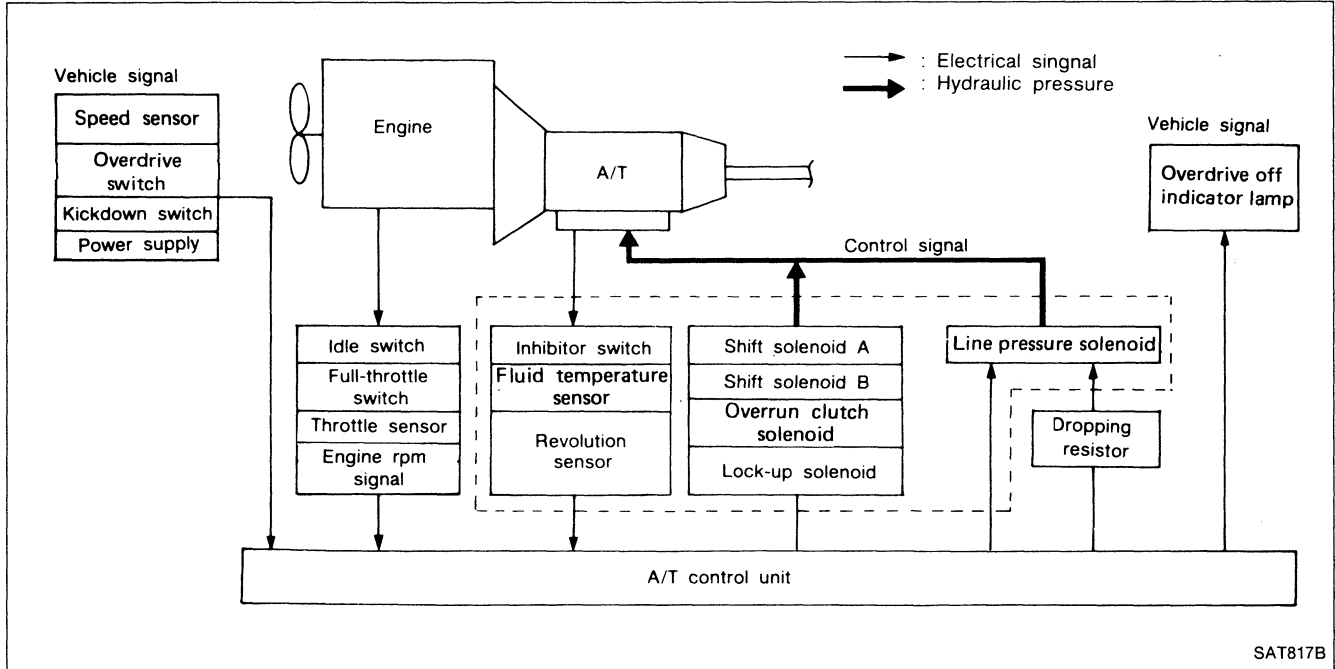

SAT817B

## Mechanical Operation

Shift position	Re-verse clutch	High clutch	For-ward clutch	Over-run clutch	Band servo			For-ward one-way clutch	Low one-way clutch	Low & reverse brake	Lock-up	Remarks
					2nd apply	3rd release	4th apply					
P												PARK
R	○									○		REVERSE
N												NEUTRAL
D *4	1st		○	⊗				●	●			Automatic shift 1 ↔ 2 ↔ 3 ↔ 4
	2nd		○	*1 ○	○			●				
	3rd		○	○	⊗	*2 ⊗	⊗	●				
	4th		○	⊗		*3 ⊗	⊗	○			○	
2	1st		○	⊗				●	●			Automatic shift 1 ↔ 2
	2nd		○	⊗	○			●				
1	1st		○	○				●		○		Locks (held stationary) in 1st speed 1 ← 2
	2nd		○	○	○			●				

\*1. Operates when overdrive switch is set in "OFF" position.

\*2. Oil pressure is applied to both 2nd "apply" side and 3rd "release" side of band servo piston. However, because oil pressure area on the "release" side is greater than that on the "apply" side, brake band does not contract.

\*3. Oil pressure is applied to 4th "apply" side in condition \*2 above, and brake band contracts.

\*4. A/T will not shift to 4th when overdrive switch is set in "OFF" position.

○ : Operates.

⊗ : Operates when throttle opening is less than 1/16. Engine brake activates.


● : Operates during "progressive" acceleration.


⊗ : Operates but does not affect power transmission.

⊗ : Operates when throttle opening is less than 1/16 but does not affect engine brake.

# A/T CONTROL DIAGRAM

## Cross-Sectional View

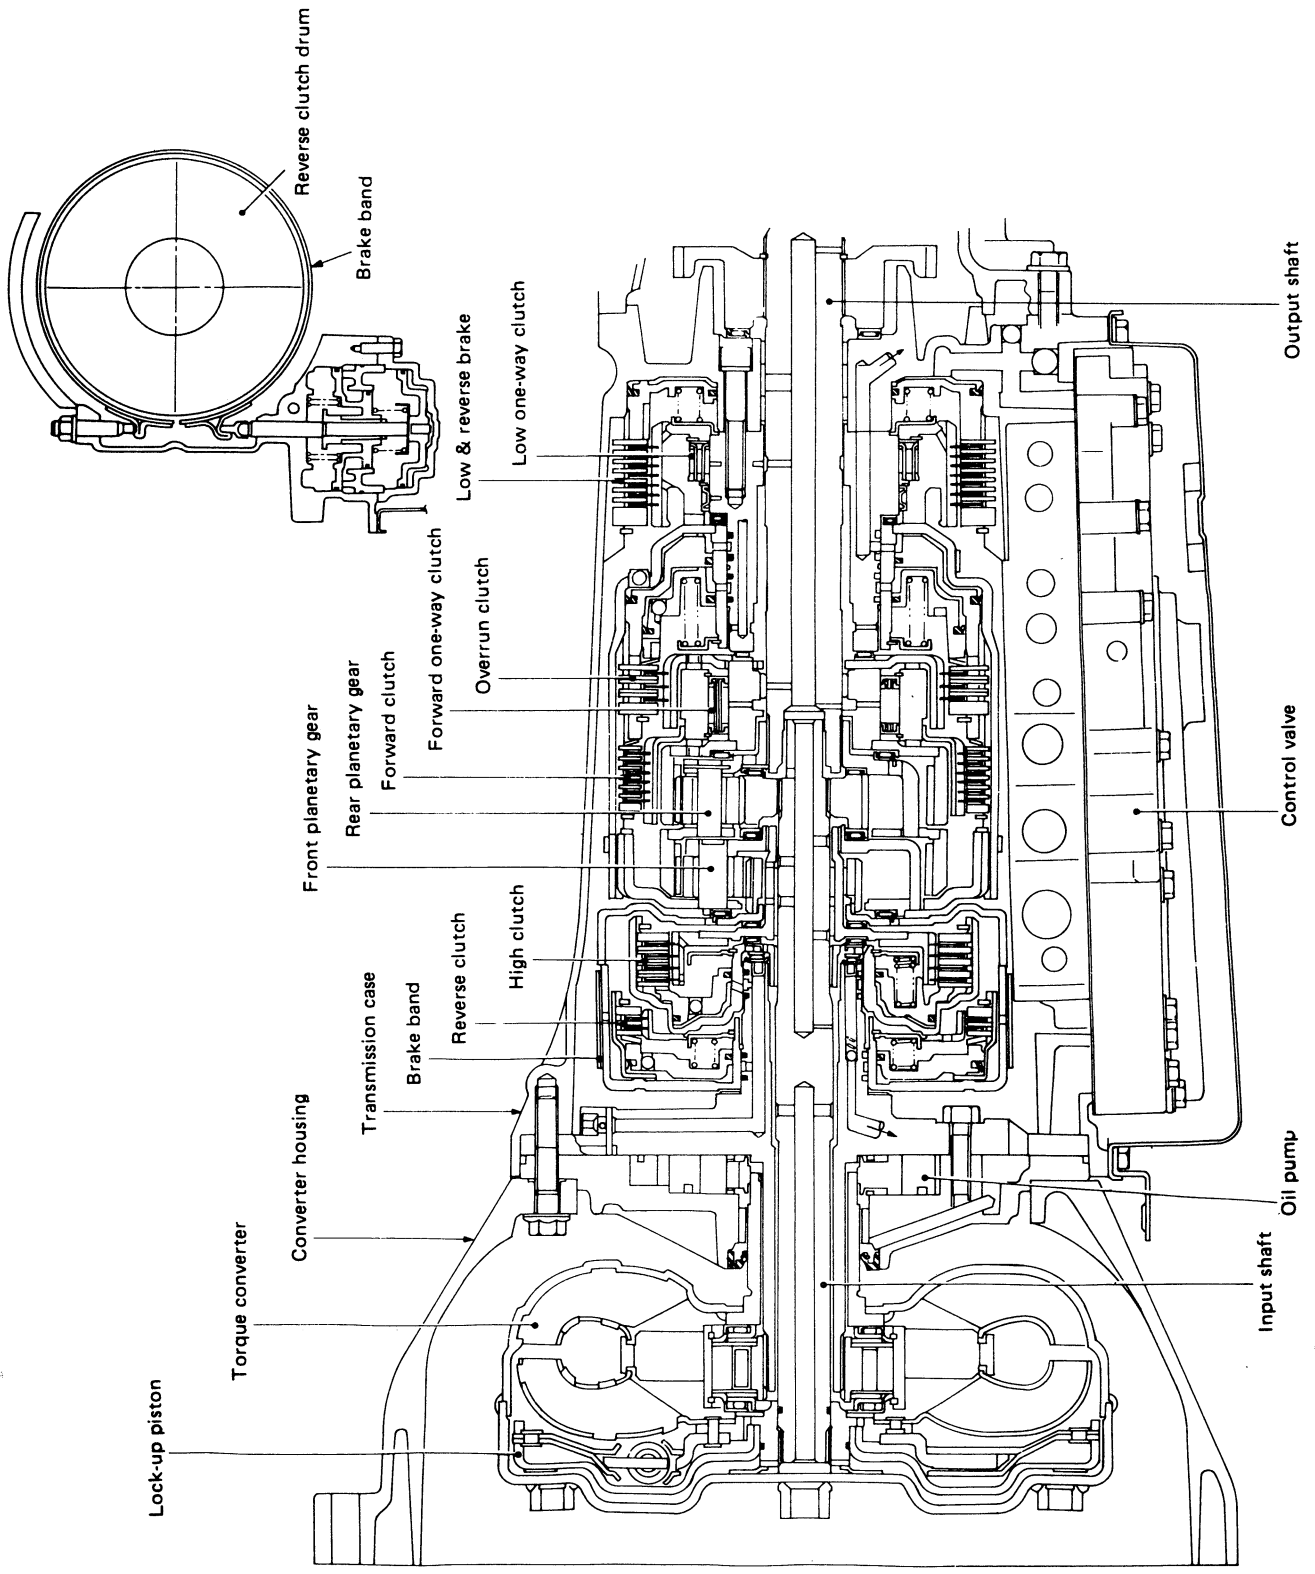

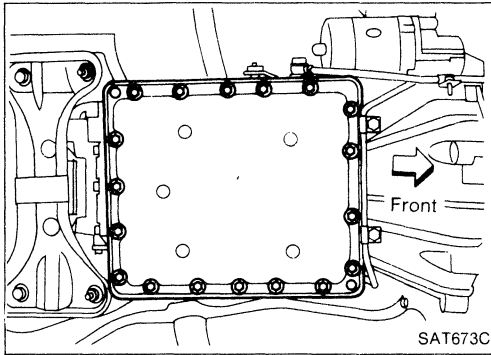


## Control Valve Assembly and Accumulators Inspection

1. Remove oil pan and gasket and drain A.T.F.



2. Remove oil strainer.

3. Remove control valve assembly by removing fixing bolts and disconnecting harness connector.

### Bolt length and location

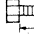Bolt symbol	ℓ mm (in)	 ℓ
Ⓐ	33 (1.30)	
Ⓑ	45 (1.77)	


4. Remove solenoids and valves from valve body if necessary.
5. Remove terminal cord assembly if necessary.

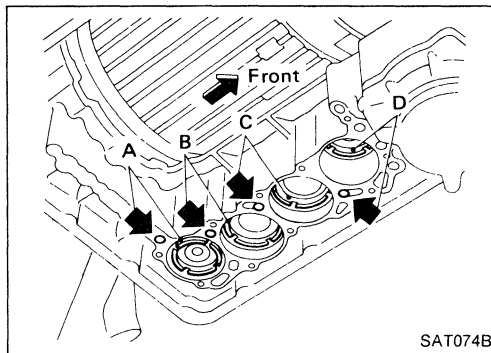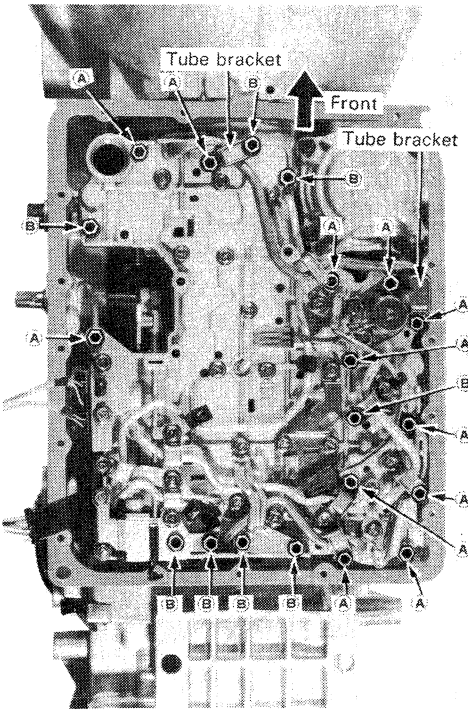

6. Remove accumulators A, B, C and D by applying compressed air if necessary.



- **Hold each piston with rag.**
- 7. Reinstall any part removed.
- **Always use new sealing parts.**



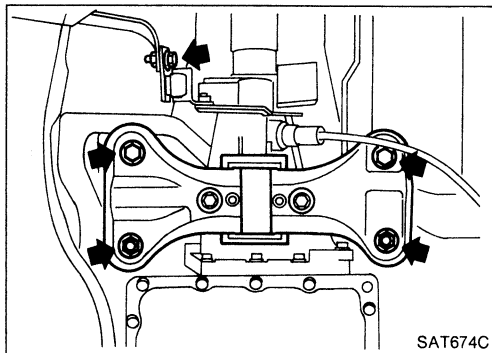



## Revolution Sensor Replacement

1. Remove propeller shaft from vehicle. — Refer to section PD.
  2. Remove rear engine mounting member from body panel while supporting A/T with jack.
  3. Lower A/T assembly as much as possible.
  4. Remove revolution sensor from A/T assembly.
  5. Reinstall any part removed.
- **Always use new sealing parts.**

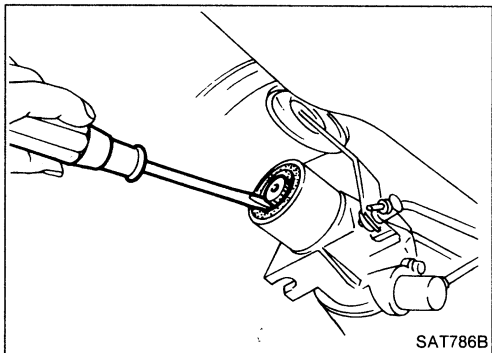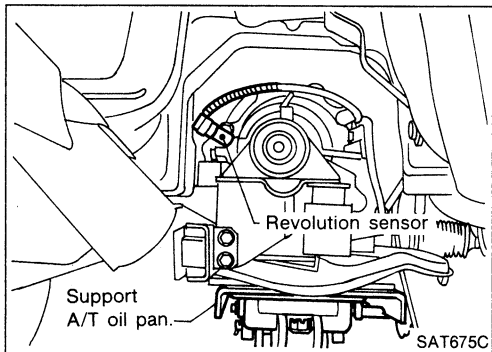

## Rear Oil Seal Replacement


1. Remove propeller shaft from vehicle. — Refer to section PD.
  2. Remove rear oil seal.
  3. Install rear oil seal.
  4. Reinstall any part removed.
- **Apply A.T.F. before installing.**

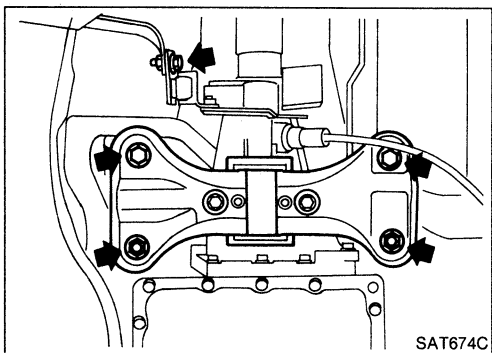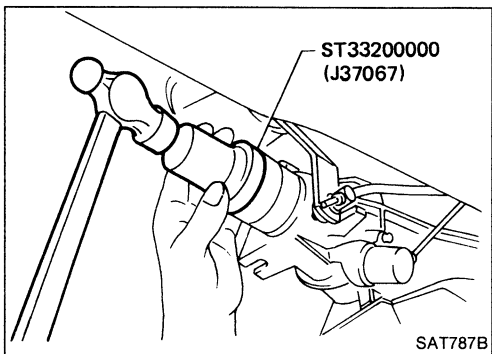


## Parking Components Inspection

1. Remove propeller shaft from vehicle. — Refer to section PD.
2. Remove rear engine mounting member from A/T assembly while supporting A/T with jack.

## Parking Components Inspection (Cont'd)

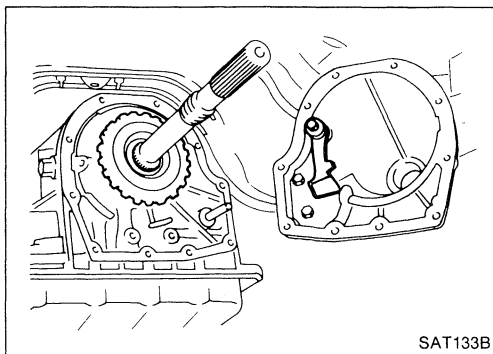


3. Remove rear extension from transmission case.
  4. Replace parking components if necessary.
  5. Reinstall any part removed.
- **Always use new sealing parts.**

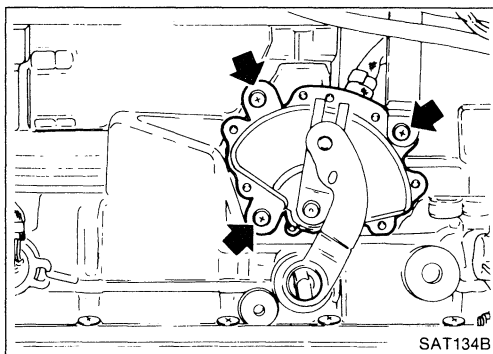


## Inhibitor Switch Adjustment

1. Remove manual control linkage from manual shaft of A/T assembly.
2. Set manual shaft of A/T assembly in "N" position.
3. Loosen inhibitor switch fixing bolts.

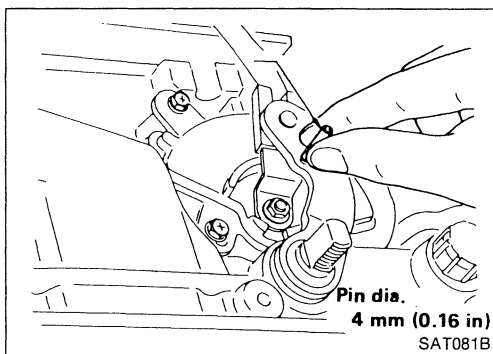


4. Insert pin into adjustment holes in both inhibitor switch and manual shaft of A/T assembly as near vertical as possible.
5. Reinstall any part removed.
6. Check continuity of inhibitor switch. — Refer to "Electrical Components Inspection".

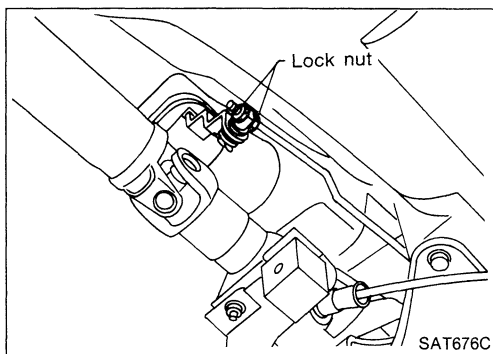

## Manual Control Linkage Adjustment

Move selector lever from "P" range to "1" range. You should be able to feel the detents in each range. If the detents cannot be felt or the pointer indicating the range is improperly aligned, the linkage needs adjustment.

1. Place selector lever in "P" range.
2. Loosen lock nuts.

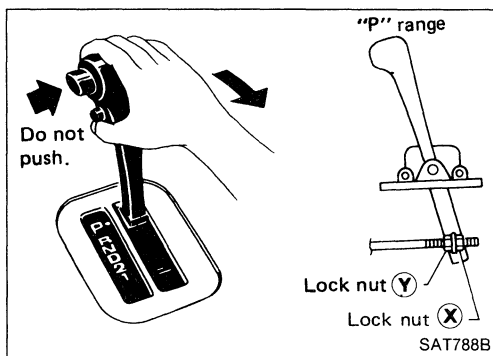


3. Tighten lock nut (X) until it touches trunnion pulling selector lever toward "R" range side without pushing button.
4. Back off lock nut (X) 1 turn and tighten lock nut (Y) to the specified torque.

### Lock nut:

: 11 - 15 N·m (1.1 - 1.5 kg-m, 8 - 11 ft-lb)

5. Move selector lever from "P" range to "1" range. Make sure that selector lever can move smoothly.

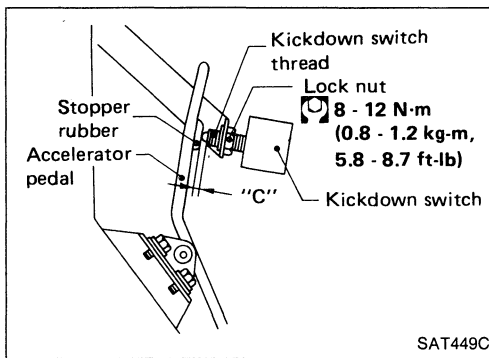

### Adjusting Kickdown Switch

1. Adjust accelerator cable — Refer to section FE.
2. Adjust clearance "C" between stopper rubber and end of kickdown switch thread while depressing accelerator pedal fully.

**Clearance "C": 0.3 - 1.0 mm (0.012 - 0.039 in)**

# TROUBLE DIAGNOSES

## Contents

<b>How to Perform Trouble Diagnoses for Quick and Accurate Repair</b> .....	AT-14
<b>Preliminary Check</b> .....	AT-15
<b>Diagnosis by CONSULT</b> .....	AT-33
<b>A/T Electrical Parts Location</b> .....	AT-36
<b>Circuit Diagram for Quick Pinpoint Check</b> .....	AT-39
<b>Wiring Diagram</b> .....	AT-40
<b>Self-diagnosis</b> .....	AT-42
SELF-DIAGNOSTIC PROCEDURE (With CONSULT) .....	AT-42
SELF-DIAGNOSTIC PROCEDURE (Without CONSULT) .....	AT-43
JUDGEMENT OF SELF-DIAGNOSIS CODE .....	AT-45
REVOLUTION SENSOR CIRCUIT CHECK .....	AT-49
SPEED SENSOR CIRCUIT CHECK .....	AT-50
THROTTLE SENSOR CIRCUIT CHECK .....	AT-51
SHIFT SOLENOID A CIRCUIT CHECK .....	AT-52
SHIFT SOLENOID B CIRCUIT CHECK .....	AT-53
OVERRUN CLUTCH SOLENOID CIRCUIT CHECK .....	AT-54
LOCK-UP SOLENOID CIRCUIT CHECK .....	AT-55
FLUID TEMPERATURE SENSOR CIRCUIT AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECKS .....	AT-56
ENGINE REVOLUTION SIGNAL CIRCUIT CHECK .....	AT-58
LINE PRESSURE SOLENOID CIRCUIT CHECK .....	AT-59
INHIBITOR, OVERDRIVE, KICKDOWN AND IDLE SWITCH CIRCUIT CHECKS .....	AT-60
<b>Diagnostic Procedure 1</b> (SYMPTOM: O.D. OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".) .....	AT-64
<b>Diagnostic Procedure 2</b> (SYMPTOM: Engine cannot be started with selector lever in "P" or "N" range or engine can be started with selector lever in "D", "2", "1" or "R" range.) .....	AT-65
<b>Diagnostic Procedure 3</b> (SYMPTOM: Vehicle moves when it is pushed forward or backward with selector lever in "P" range.) .....	AT-65
<b>Diagnostic Procedure 4</b> (SYMPTOM: Vehicle moves forward or backward when selecting "N" range.) .....	AT-66
<b>Diagnostic Procedure 5</b> (SYMPTOM: There is large shock when changing from "N" to "R" range.) .....	AT-67
<b>Diagnostic Procedure 6</b> (SYMPTOM: Vehicle does not creep backward when selecting "R" range.) .....	AT-68
<b>Diagnostic Procedure 7</b> (SYMPTOM: Vehicle does not creep forward when selecting "D", "2" or "1" range.) .....	AT-69
<b>Diagnostic Procedure 8</b> (SYMPTOM: Vehicle cannot be started from D <sub>1</sub> on Cruise test — Part 1.) .....	AT-70
<b>Diagnostic Procedure 9</b> (SYMPTOM: A/T does not shift from D <sub>1</sub> to D <sub>2</sub> at the specified speed. A/T does not shift from D <sub>4</sub> to D <sub>2</sub> when depressing accelerator pedal fully at the specified speed.) .....	AT-71
<b>Diagnostic Procedure 10</b> (SYMPTOM: A/T does not shift from D <sub>2</sub> to D <sub>3</sub> at the specified speed.) .....	AT-72
<b>Diagnostic Procedure 11</b> (SYMPTOM: A/T does not shift from D <sub>3</sub> to D <sub>4</sub> at the specified speed.) .....	AT-73

# TROUBLE DIAGNOSES


## Contents (Cont'd)

<b>Diagnostic Procedure 12</b>	
(SYMPTOM: A/T does not perform lock-up at the specified speed.) .....	AT-74
<b>Diagnostic Procedure 13</b>	
(SYMPTOM: A/T does not hold lock-up condition for more than 30 seconds.) .....	AT-75
<b>Diagnostic Procedure 14</b>	
(SYMPTOM: Lock-up is not released when accelerator pedal is released.) .....	AT-75
<b>Diagnostic Procedure 15</b>	
(SYMPTOM: Engine speed does not return to idle smoothly when A/T is shifted from D <sub>4</sub> to D <sub>3</sub> with accelerator pedal released. Vehicle does not decelerate by engine brake when changing overdrive switch to "OFF" position with accelerator pedal released. Vehicle does not decelerate by engine brake when changing selector lever from "D" to "2" range with accelerator pedal released.) .....	AT-76
<b>Diagnostic Procedure 16</b>	
(SYMPTOM: Vehicle does not start from D <sub>1</sub> on Cruise test — Part 2.) .....	AT-77
<b>Diagnostic Procedure 17</b>	
(SYMPTOM: A/T does not shift from D <sub>4</sub> on D <sub>3</sub> when changing overdrive switch to "OFF" position.) .....	AT-77
<b>Diagnostic Procedure 18</b>	
(SYMPTOM: A/T does not shift from D <sub>3</sub> on 2 <sub>2</sub> when changing selector lever from "D" to "2" range.) .....	AT-78
<b>Diagnostic Procedure 19</b>	
(SYMPTOM: A/T does not shift from 2 <sub>2</sub> to 1 <sub>1</sub> when changing selector lever from "2" to "1" range.) .....	AT-78
<b>Diagnostic Procedure 20</b>	
(SYMPTOM: Vehicle does not decelerate by engine brake when shifting from 2 <sub>2</sub> (1 <sub>2</sub> ) to 1 <sub>1</sub> .) .	AT-78
<b>Electrical Components Inspection</b> .....	AT-79
<b>Final Check</b> .....	AT-86
<b>Symptom Chart</b> .....	AT-91
<b>A/T Shift Lock System</b> .....	AT-94


# TROUBLE DIAGNOSES

## How to Perform Trouble Diagnoses for Quick and Accurate Repair

### WORK FLOW

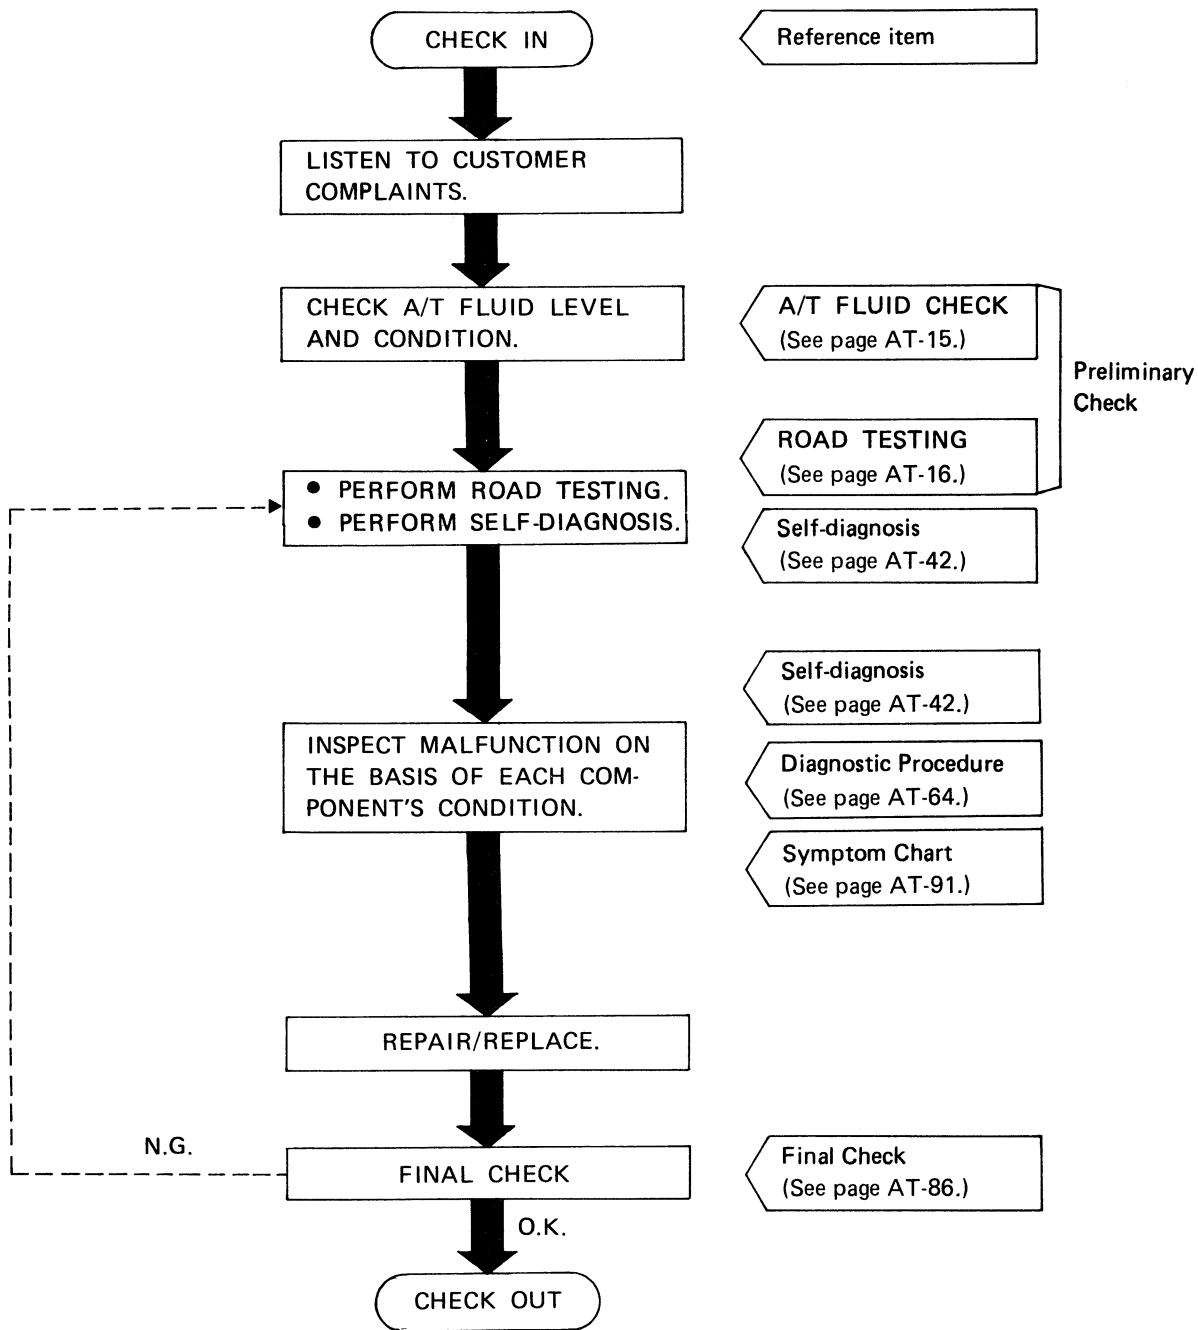

# TROUBLE DIAGNOSES

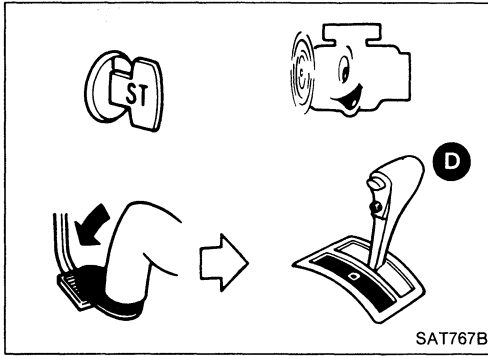


## Preliminary Check

### A/T FLUID CHECK

#### Fluid leakage check

1. Clean area suspected of leaking, — for example, mating surface of converter housing and transmission case.
2. Start engine, apply foot brake, place selector lever in "D" range and wait a few minutes.
3. Stop engine.
4. Check for fresh leakage.

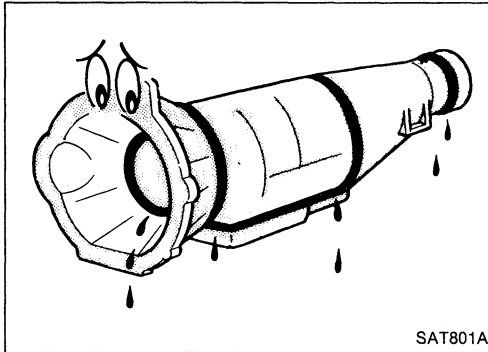

#### Fluid condition check

Fluid color	Suspected problem
Dark or black with burned odor	Wear of frictional material
Milky pink	Water contamination — Road water entering through filler tube or breather
Varnished fluid, light to dark brown and tacky	Oxidation — Over or under filling — Overheating

#### Fluid level check

Refer to section MA.

# TROUBLE DIAGNOSES

## ROAD TEST PROCEDURE

1. Check before engine is started.




2. Check at idle.



3. Cruise test.

SAT786A

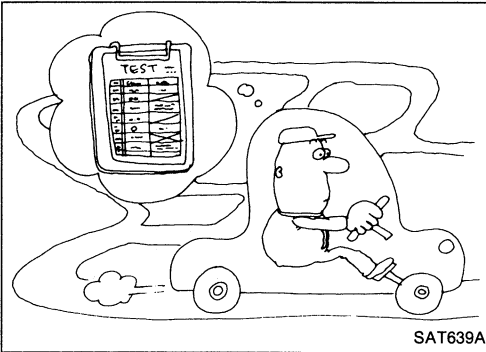

SAT639A

## Preliminary Check (Cont'd)

### ROAD TESTING

#### Description




- The purpose of this road test is to determine overall performance of automatic transmission and analyze causes of problems.
- The road test consists of the following three parts:
  1. Check before engine is started
  2. Check at idle
  3. Cruise test
- Before road test, familiarize yourself with all test procedures and items to check.
- Conduct tests on all items. Troubleshoot items which check out No Good after road test. Refer to "Self-diagnosis" and "Diagnostic Procedure".




# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)


### 1. Check before engine is started

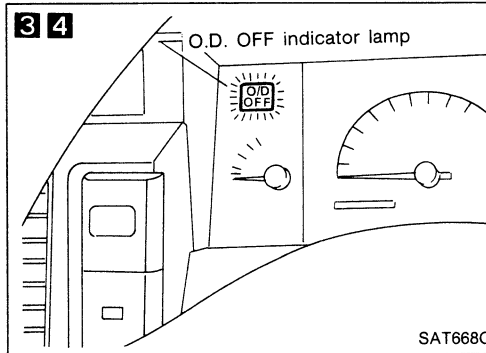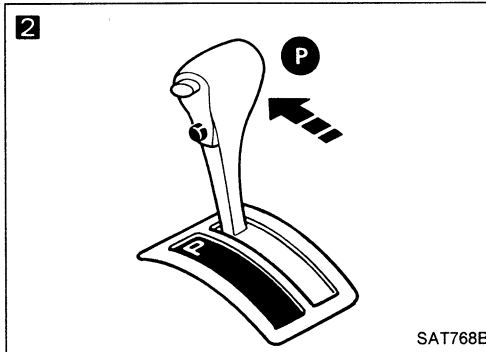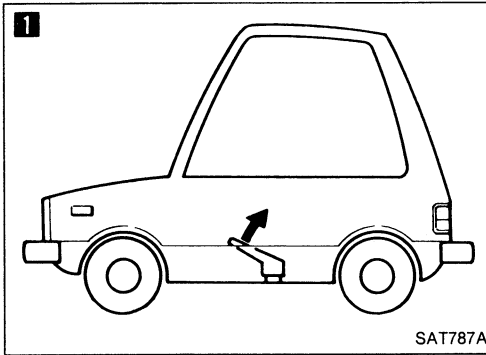

**1**  
Park vehicle on flat surface.



**2**  
Move selector lever to "P" range.




**3**  
Does O.D. OFF indicator lamp come on for about 2 seconds?

No → Go to Diagnostic Procedure 1.

**4**  
Does O.D. OFF indicator lamp flicker for about 8 seconds?

Yes → Perform self-diagnosis. — Refer to SELF-DIAGNOSIS PROCEDURE.

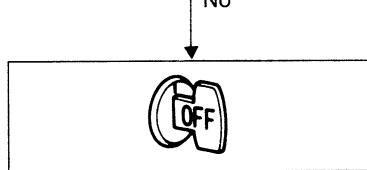





Perform self-diagnosis. — Refer to SELF-DIAGNOSIS PROCEDURE and note N.G. items.

Go to "ROAD TESTING — 2. Check at idle".

# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)

### 2. Check at idle

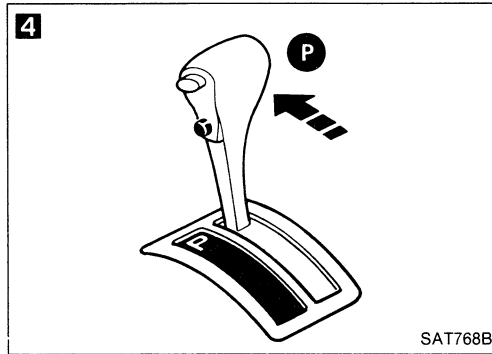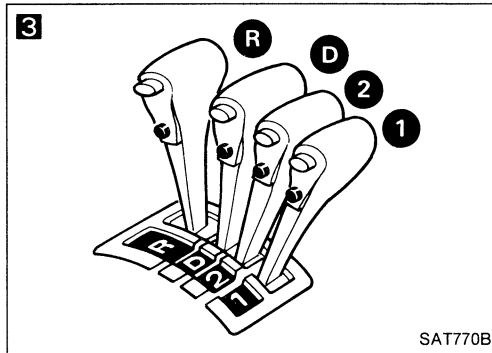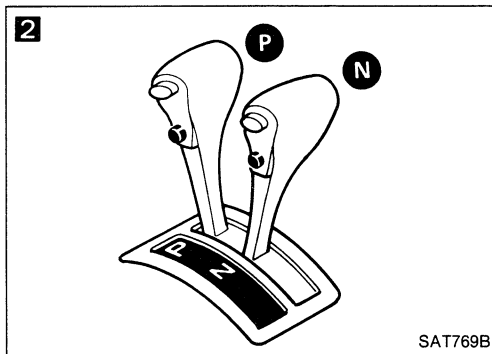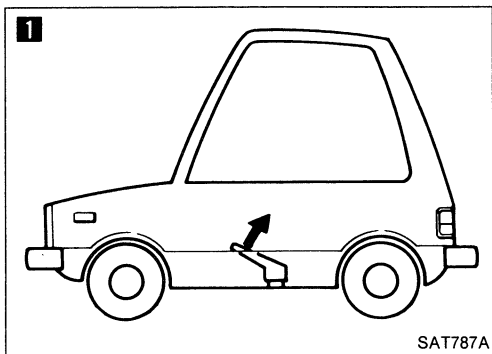

**1**  
Park vehicle on flat surface.




**2**  
Move selector lever to "P" or "N" range.




Is engine started?

No → Go to Diagnostic Procedure 2.

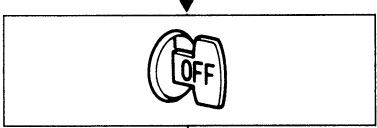


**3**  
Move selector lever to "D", "1", "2" or "R" range.




Is engine started?

Yes → Go to Diagnostic Procedure 2.

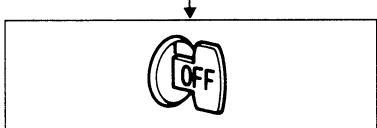


**4**  
Move selector lever to "P" range.



Ⓐ

# TROUBLE DIAGNOSES



## Preliminary Check (Cont'd)

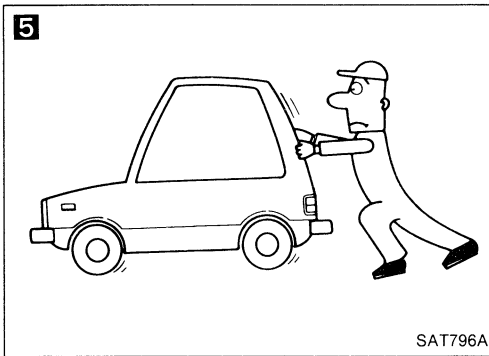



5  
 Push vehicle forward or backward.

Does vehicle move when it is pushed forward or backward?

Yes → Go to Diagnostic Procedure 3.

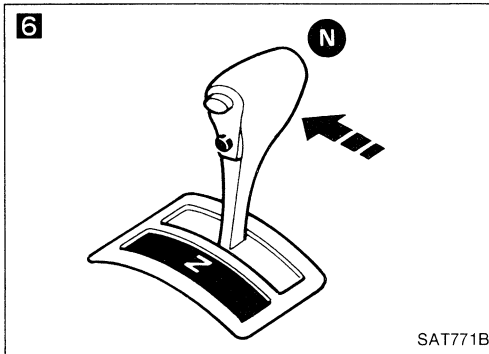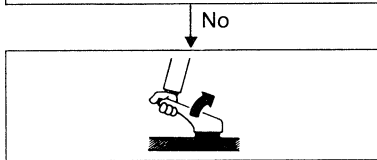

6  
 Move selector lever to "N" range.

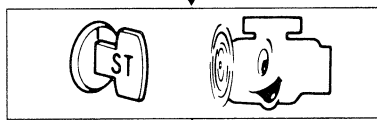


Does vehicle move forward or backward?

Yes → Go to Diagnostic Procedure 4.

No

7  
 Apply foot brake.

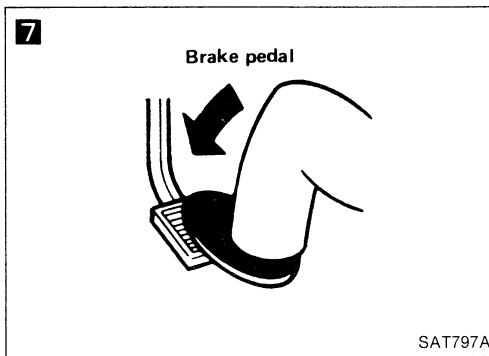


8  
 Move selector lever to "R" range.

Is there large shock when changing from "N" to "R" range?

Yes → Go to Diagnostic Procedure 5.

No

9  
 Release foot brake for several seconds.

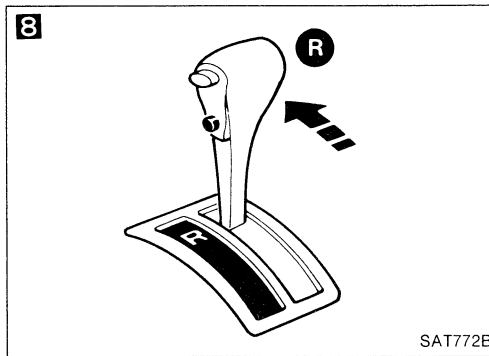


Does vehicle creep backward when foot brake is released?

No → Go to Diagnostic Procedure 6.



Yes

B

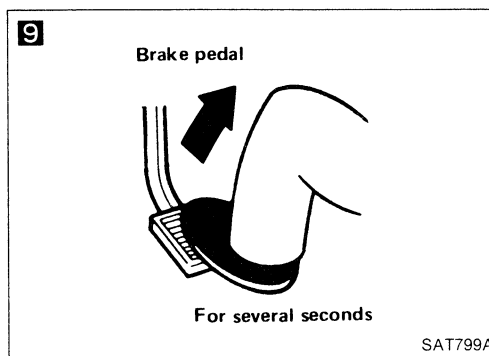

# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)

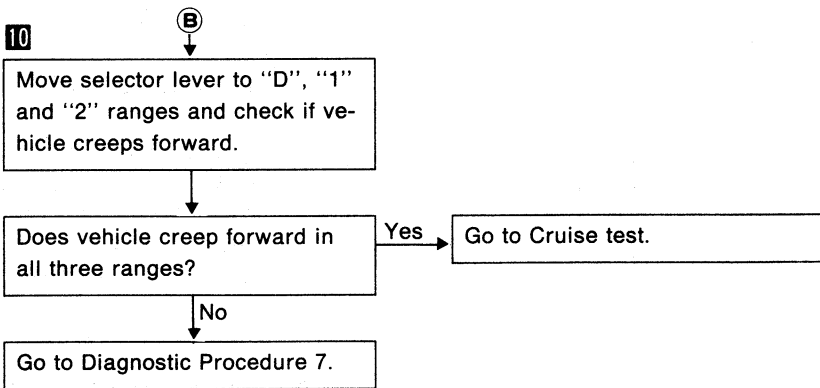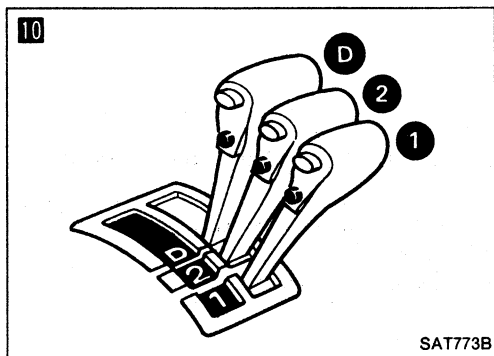

## TROUBLE DIAGNOSES


### Preliminary Check (Cont'd)

#### 3. Cruise test





#### With CONSULT

- Using CONSULT, conduct a cruise test and record the result.
- Print the result and ensure that shifts and lock-ups take place as per "Shift Schedule."
- Check all items listed in Parts 1 through 3.

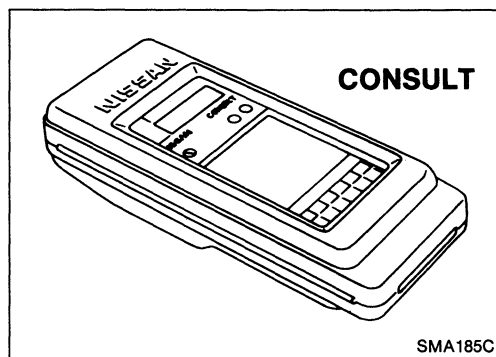


#### CONSULT setting procedure

1. Turn off ignition switch.
2. Connect "CONSULT" to diagnostic connector. (Diagnostic connector is located in left dash side panel.)

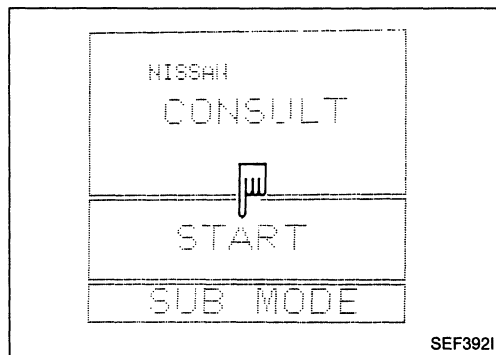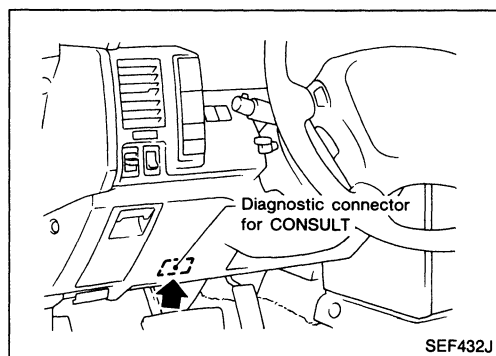

3. Turn on ignition switch.
4. Touch "START".

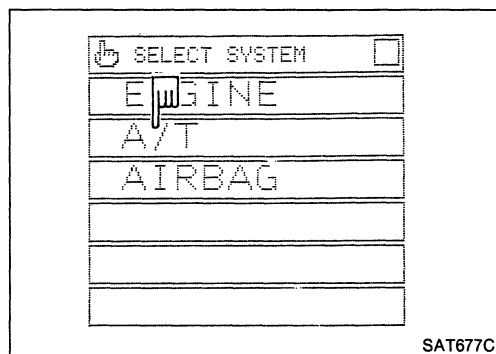


5. Touch "A/T".


# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)


6. Touch "DATA MONITOR".

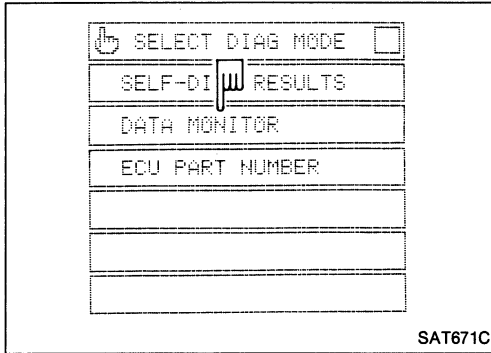

7. Touch "SETTING" to set recording condition.

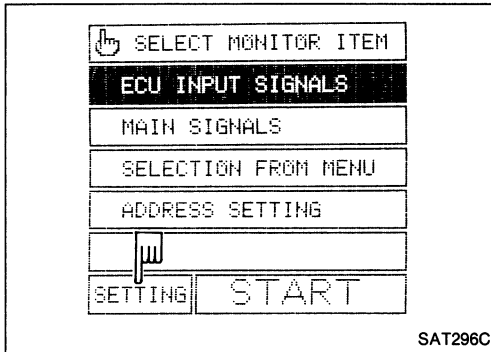


8. Touch "LONG TIME" and "ENTER" key.

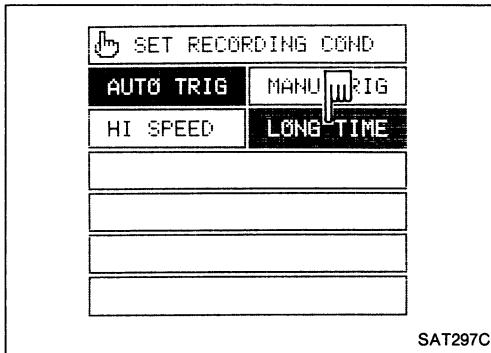


9. Go back to SELECT MONITOR ITEM and touch "MAIN SIGNALS".

10. Touch "START".

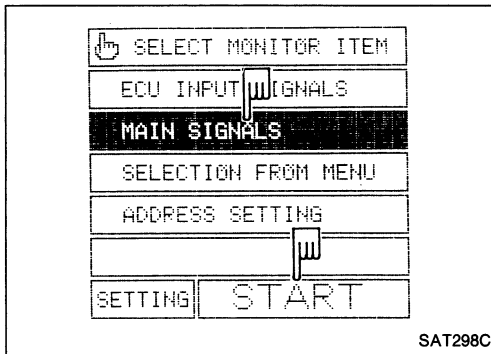


11. When performing cruise test, touch "RECORD".

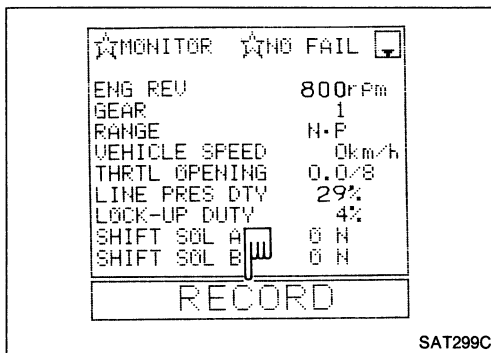

# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)


12. After finishing cruise test part 1, touch "STOP".

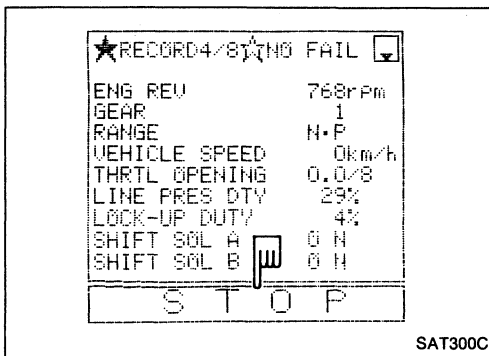


13. Touch "DISPLAY".



14. Touch "PRINT".

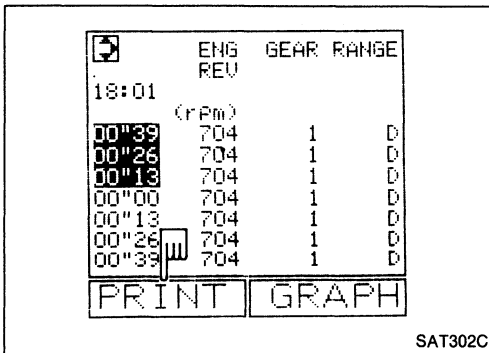


15. Touch "PRINT" again.

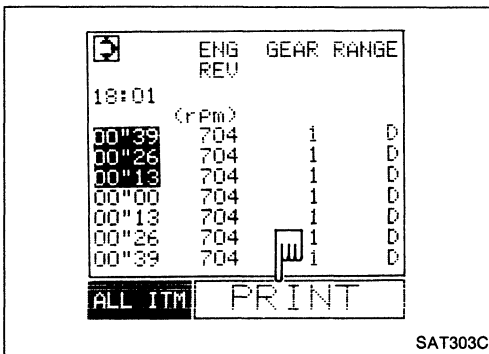

16. Check the monitor data printed out.

17. Continue cruise test part 2 and 3.

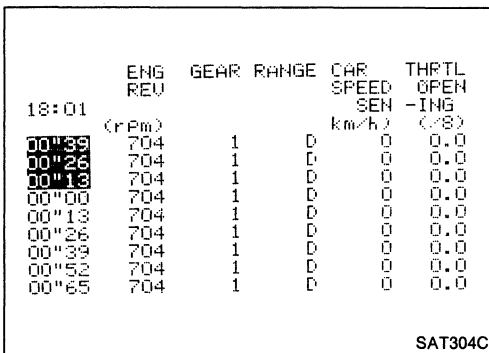


## TROUBLE DIAGNOSES

### Preliminary Check (Cont'd)



Without CONSULT

- Throttle position can be controlled by voltage across terminals ③④ and ③⑤ of A/T control unit.

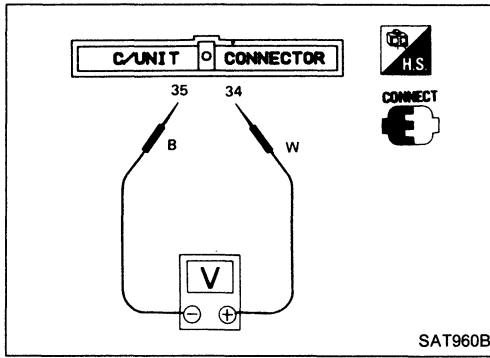





# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)

### Cruise test — Part 1

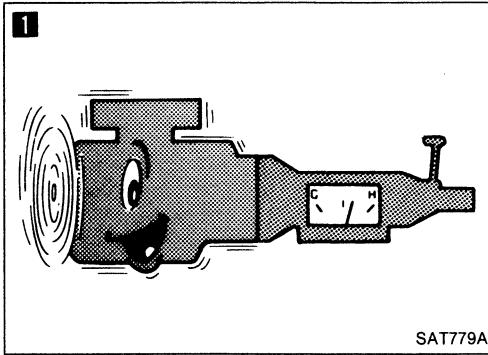


**1**  
Warm up engine until engine oil and A.T.F. reach operating temperature after vehicle has been driven approx. 10 minutes.  
**A.T.F. operating temperature:**  
50 - 80°C (122 - 176°F)

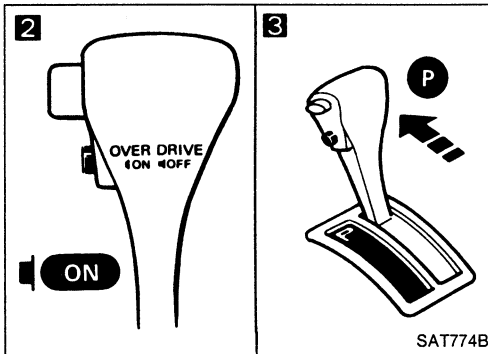

Park vehicle on flat surface.



**2**  
Set overdrive switch in "ON" position.

**3**  
Move selector lever to "P" range.



**4**  
Move selector lever to "D" range.

**5**  
Accelerate vehicle to half throttle.

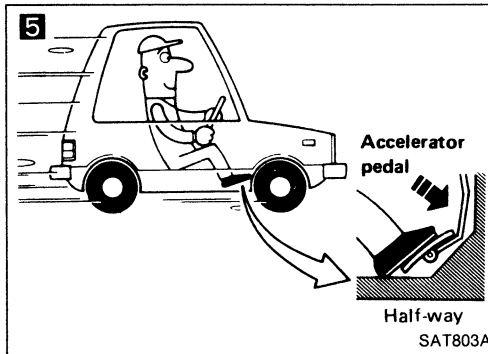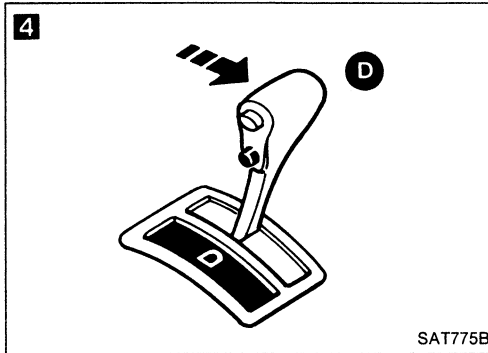



Does vehicle start from D<sub>1</sub>?  
**Read gear position.**

No → Go to Diagnostic Procedure 8.

Yes  
↓  
**A**

# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)

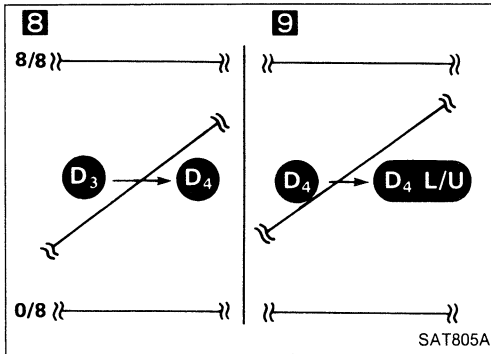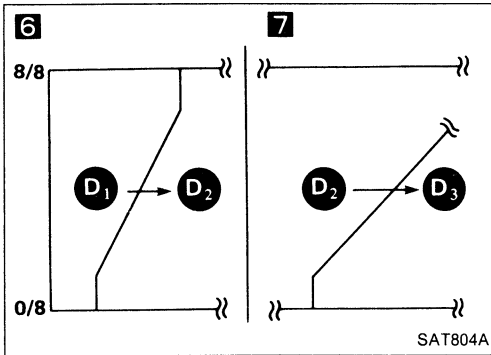

**6** **A**

Does A/T shift from D<sub>1</sub> to D<sub>2</sub> at the specified speed?

**Read gear position, throttle opening and vehicle speed.**

**Specified speed when shifting from D<sub>1</sub> to D<sub>2</sub>:**  
Refer to Shift schedule.

No → Go to Diagnostic Procedure 9.

Yes →

**7**

Does A/T shift from D<sub>2</sub> to D<sub>3</sub> at the specified speed?

**Read gear position, throttle opening and vehicle speed.**

**Specified speed when shifting from D<sub>2</sub> to D<sub>3</sub>:**  
Refer to Shift schedule.

No → Go to Diagnostic Procedure 10.

Yes →

**8**

Does A/T shift from D<sub>3</sub> to D<sub>4</sub> at the specified speed?

**Read gear position, throttle opening and vehicle speed.**

**Specified speed when shifting from D<sub>3</sub> to D<sub>4</sub>:**  
Refer to Shift schedule.

No → Go to Diagnostic Procedure 11.

Yes →

**9**

Does A/T perform lock-up at the specified speed?

**Read vehicle speed, throttle opening when lock-up duty becomes 94%.**

**Specified speed when lock-up occurs:**  
Refer to Shift schedule.

No → Go to Diagnostic Procedure 12.

Yes →

Does A/T hold lock-up condition for more than 30 seconds?






No → Go to Diagnostic Procedure 13.

Yes →


↓  
**B**

# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)

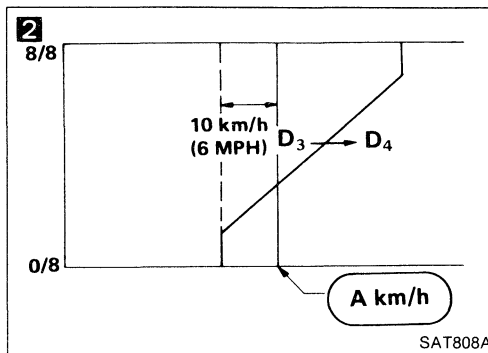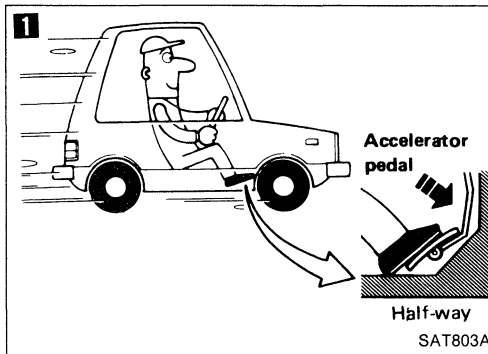
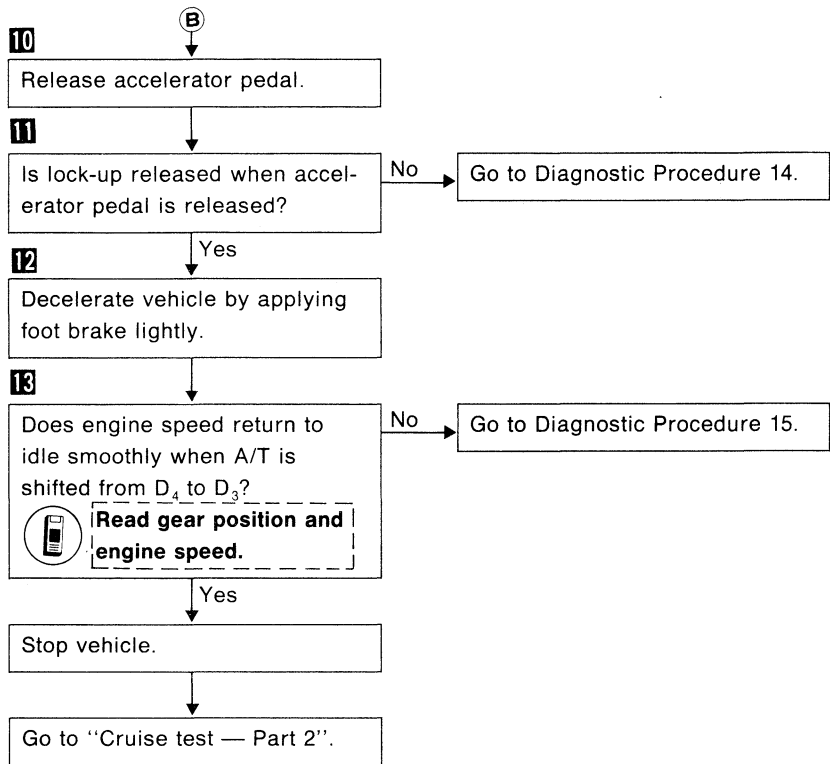
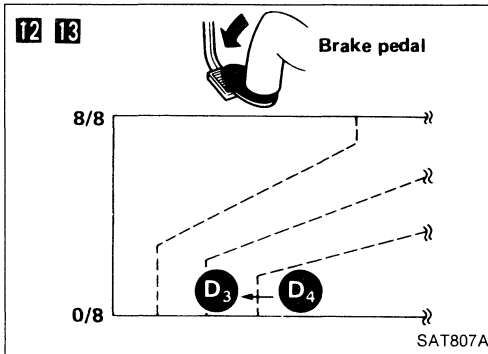
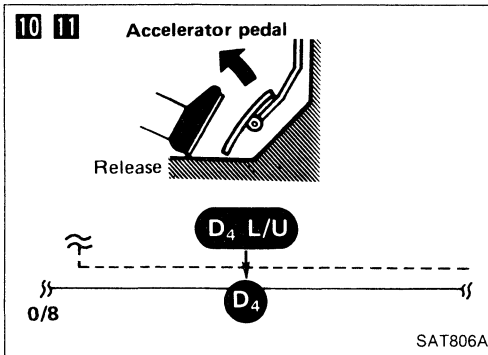


## Cruise test — Part 2

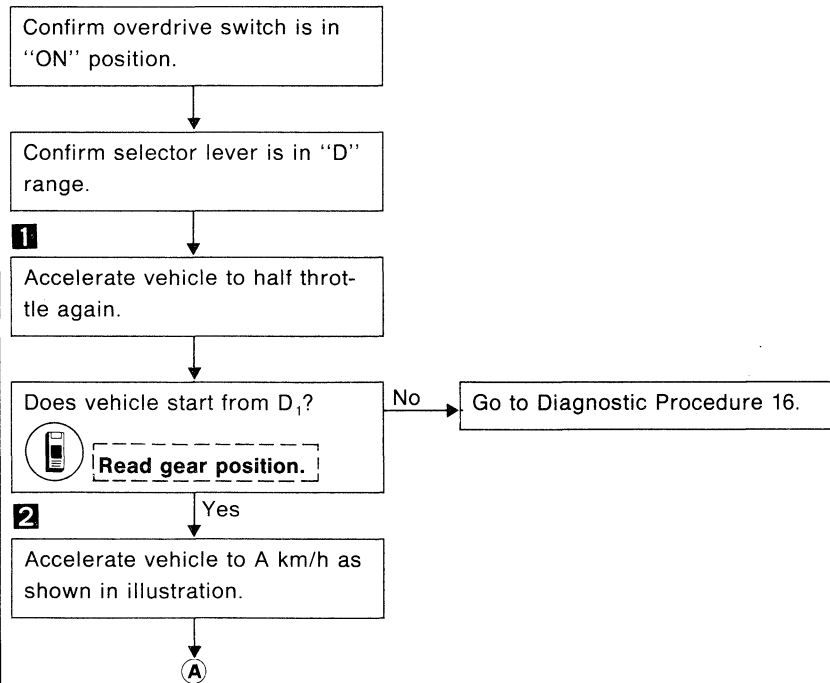

# TROUBLE DIAGNOSES





## Preliminary Check (Cont'd)

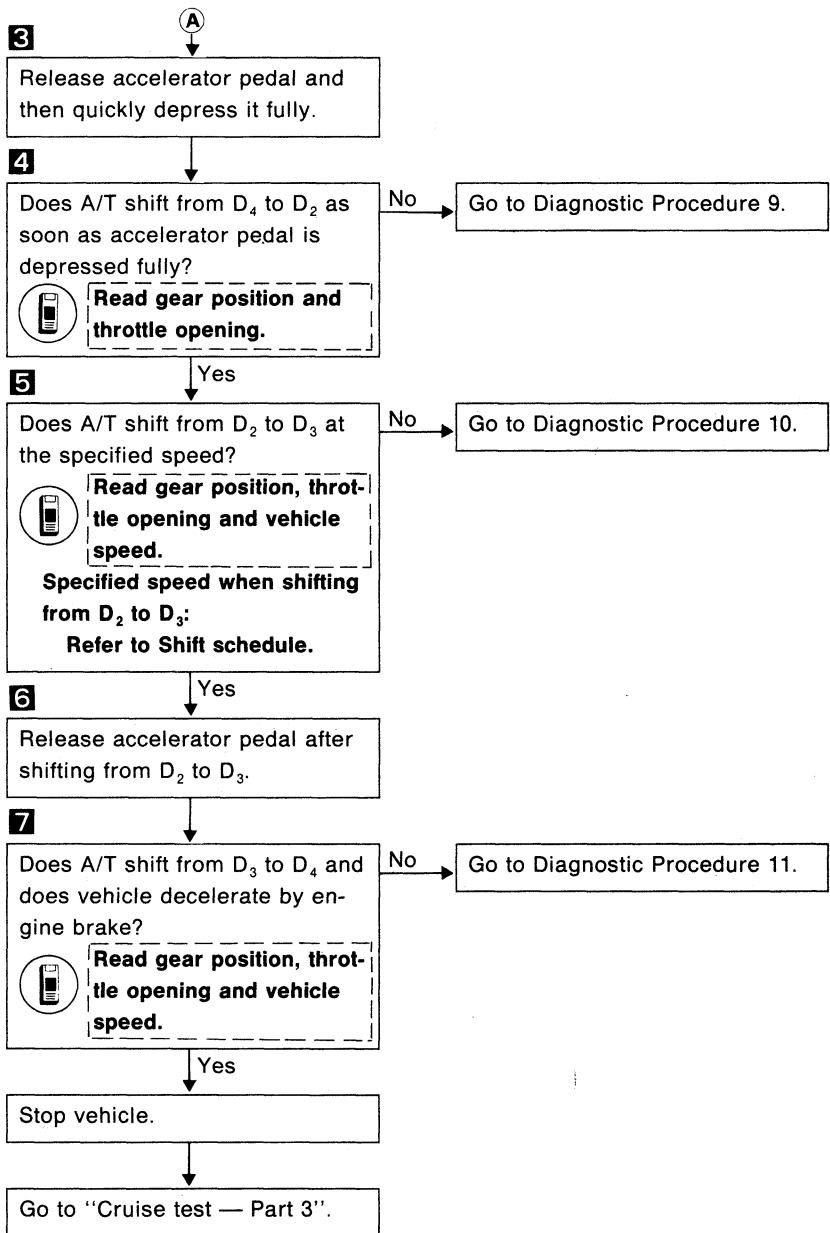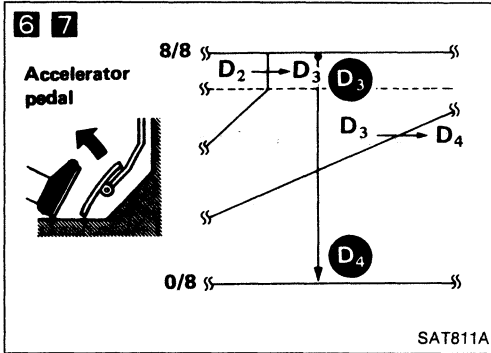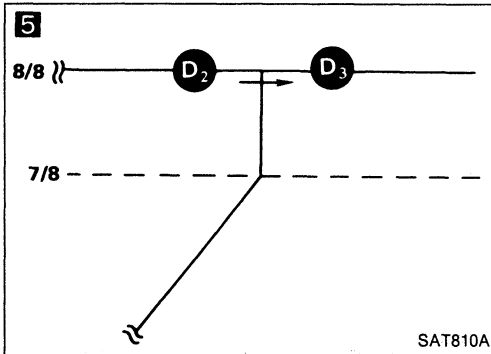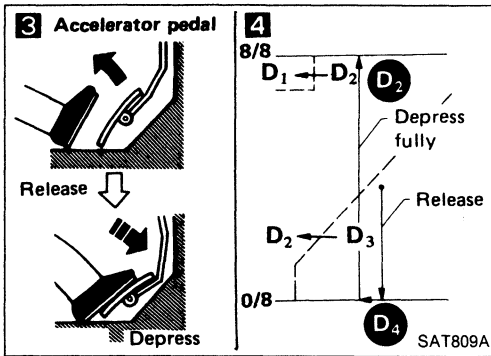

# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)

### Cruise test — Part 3

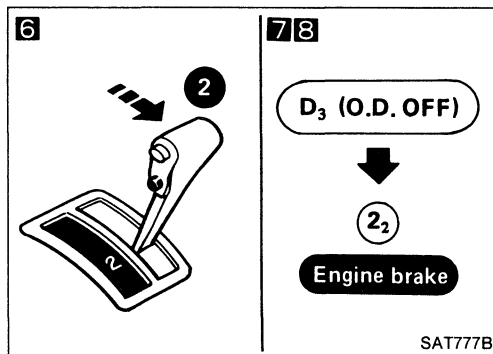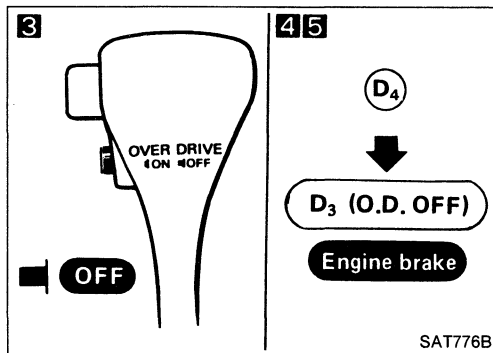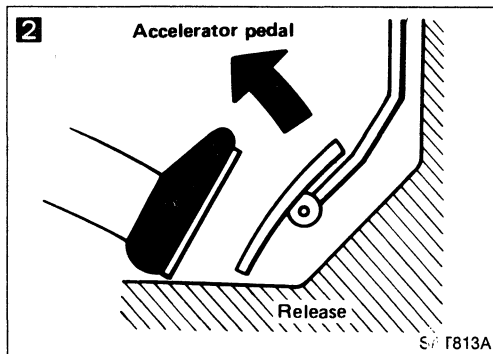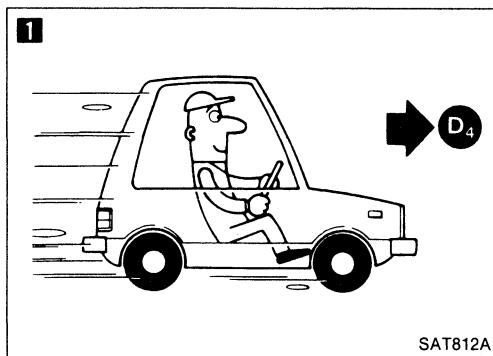

Confirm overdrive switch is in "ON" position.

Confirm selector lever is in "D" range.

**1** Accelerate vehicle, using half-throttle, to D<sub>4</sub>.

**2** Release accelerator pedal.

**3** Set overdrive switch in "OFF" position while driving in D<sub>4</sub> range.

**4** Does A/T shift from D<sub>4</sub> to D<sub>3</sub>?  
 No → Go to Diagnostic Procedure 17.

**4** Read gear position and vehicle speed.

**5** Does vehicle decelerate by engine brake?  
 No → Go to Diagnostic Procedure 15.

**6** Move selector lever from "D" to "2" range while driving in D<sub>3</sub>.

**7** Does A/T shift from D<sub>3</sub> to 2<sub>2</sub>?  
 No → Go to Diagnostic Procedure 18.

**7** Read gear position.



**8** Does vehicle decelerate by engine brake?  
 No → Go to Diagnostic Procedure 15.

Yes

↓  
 A

# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)

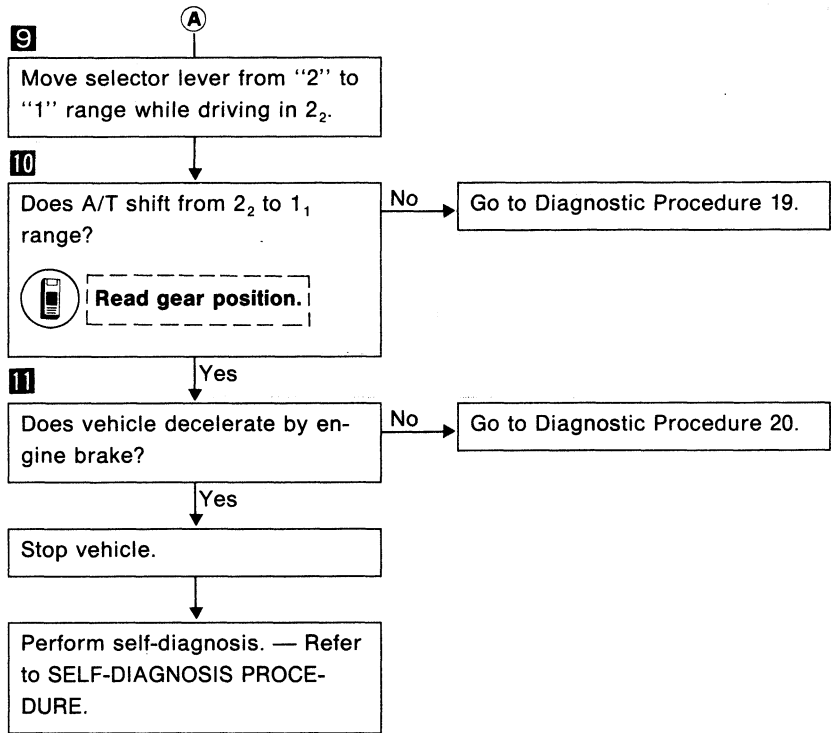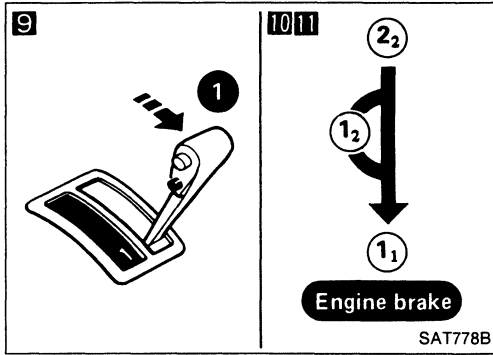

# TROUBLE DIAGNOSES

## Preliminary Check (Cont'd)

### Vehicle speed when shifting gears

Throttle position	Vehicle speed km/h (MPH)					
	D <sub>1</sub> → D <sub>2</sub>	D <sub>2</sub> → D <sub>3</sub>	D <sub>3</sub> → D <sub>4</sub>	D <sub>4</sub> → D <sub>3</sub>	D <sub>3</sub> → D <sub>2</sub>	D <sub>2</sub> → D <sub>1</sub>
Full throttle	58 - 61 (36 - 38)	103 - 111 (64 - 69)	160 - 170 (99 - 106)	154 - 164 (96 - 102)	98 - 106 (61 - 66)	48 - 52 (30 - 32)
Half throttle	42 - 46 (26 - 29)	81 - 87 (50 - 54)	112 - 122 (70 - 76)	73 - 81 (45 - 50)	45 - 51 (28 - 32)	10 - 14 (6 - 9)

### Vehicle speed when performing

Throttle position	O.D. switch [Shift range]	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
Full throttle	ON [D <sub>4</sub> ]	161 - 169 (100 - 105)	155 - 163 (96 - 101)
Half throttle	ON [D <sub>4</sub> ]	121 - 129 (75 - 80)	116 - 124 (72 - 77)





### Diagnosis by CONSULT

#### NOTICE

1. The CONSULT electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid).  
When a noticeable time difference occurs between shift timing which is manifested by shift shock and the CONSULT display, mechanical parts (except solenoids, sensors, etc.) are considered to be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
2. Shift schedule (which implies gear position) displayed on CONSULT and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
  - Actual shift schedule has more or less tolerance or allowance,
  - Shift schedule indicated in Service Manual refers to the point where shifts starts, and
  - Gear position displayed on CONSULT indicates the point where shifts are completed.
3. Shift solenoid "A" or "B" is displayed on CONSULT at the start of shifting while gear position is displayed upon completion of shifting (which is computed by A/T control unit).

# TROUBLE DIAGNOSES

## Diagnosis by CONSULT (Cont'd)

### DATA MONITOR APPLICATION

Item	Application
Vehicle speed sensor 1 (A/T)	X
Vehicle speed sensor 2 (meter)	X
Throttle sensor	X
Fluid temperature sensor	X
Battery voltage	X
Engine rpm	X
Selector lever switch (O.D. switch)	X
A.S.C.D. — cruise signal	X
A.S.C.D. — O.D. cut signal	X
Kickdown switch	X
Power shift switch	—
Idle switch	X
Full throttle switch	X
Shift solenoid A	X
Shift solenoid B	X
Overrun clutch solenoid	X
*Shift solenoid A (feedback)	X
*Shift solenoid B (feedback)	X
*Overrun clutch solenoid (feedback)	X
Hold mode switch	—
1 range switch	X
2 range switch	X
D range switch	X
N range switch	X
R range switch	X
Gear position	X
Range position	X
Vehicle speed	X
Throttle opening	X
Line-pressure solenoid	X
Lock-up solenoid	X

X: Applicable —: Not applicable

## TROUBLE DIAGNOSES

### Diagnosis by CONSULT (Cont'd)









#### DATA ANALYSIS

Item	Display	Condition
Lock-up duty	Approximately 4%	Lock-up "OFF"
	↓ Approximately 94%	↓ Lock-up "ON"
Line pressure duty	Approximately 29%	Low line-pressure (Small throttle opening)
	↓ Approximately 94%	↓ High line-pressure (Large throttle opening)
Throttle sensor	Approximately 0.5V	Fully-closed throttle
	Approximately 4V	Fully-open throttle
Fluid temperature sensor	Approximately 1.5V	Cold [20°C (68°F)]
	↓ Approximately 0.5V	↓ Hot [80°C (176°F)]

Gear position	1	2	3	4
Shift solenoid A	ON	OFF	OFF	ON
Shift solenoid B	ON	ON	OFF	OFF


# TROUBLE DIAGNOSES

## A/T Electrical Parts Location

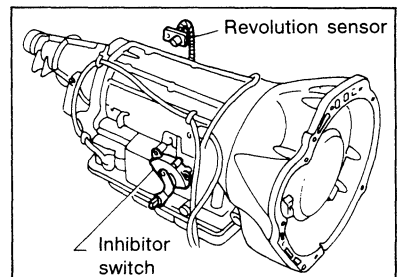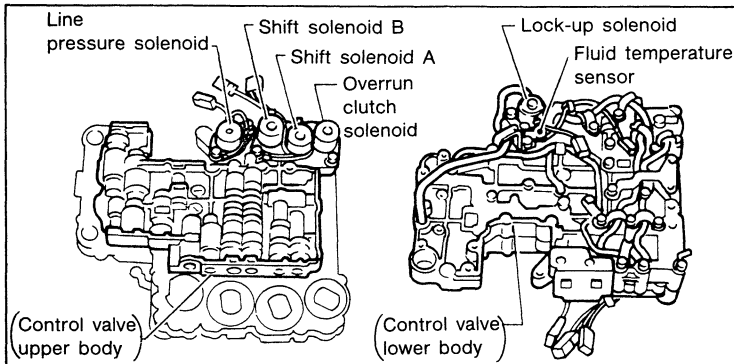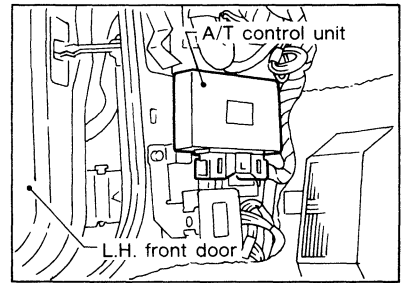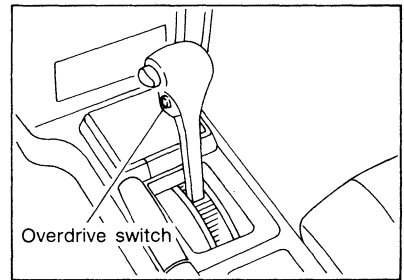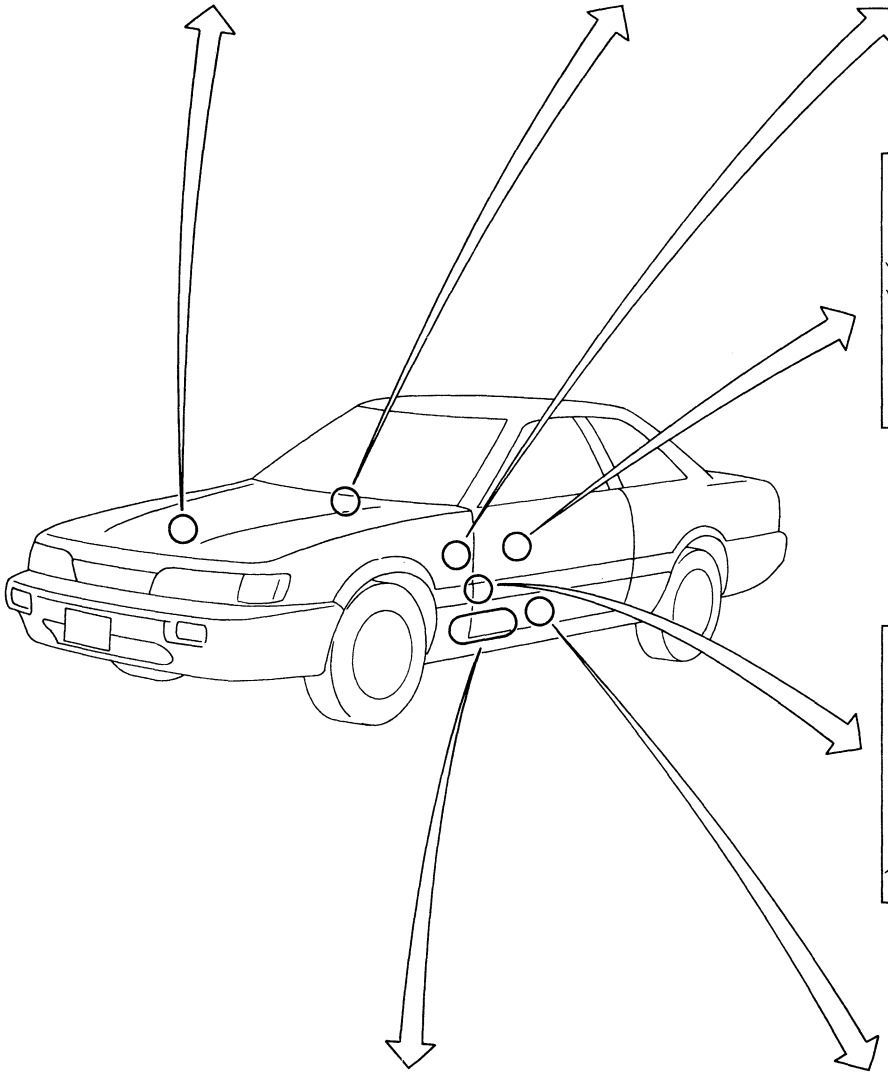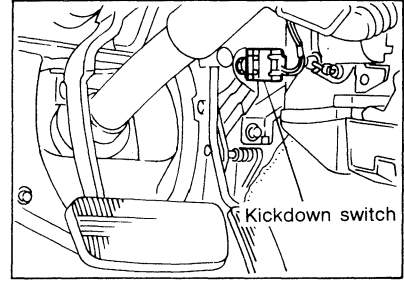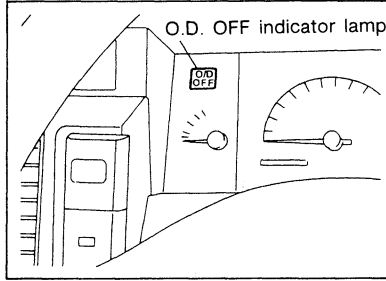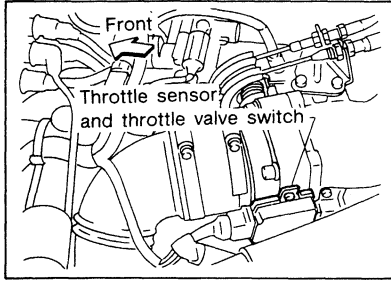

# TROUBLE DIAGNOSES

## A/T Electrical Parts Location (Cont'd)

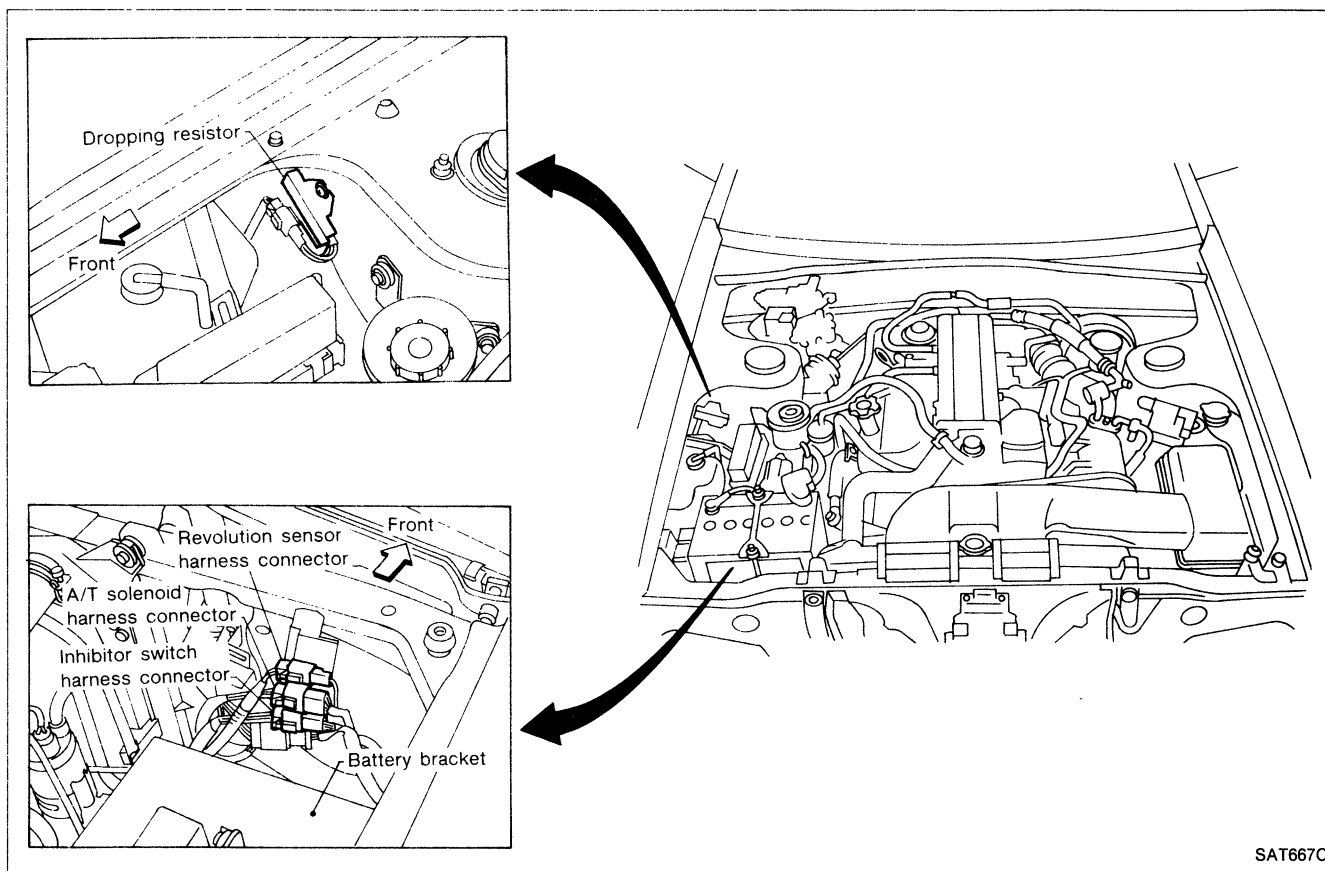


## TROUBLE DIAGNOSES

---

NOTE

# TROUBLE DIAGNOSES



## Circuit Diagram for Quick Pinpoint Check

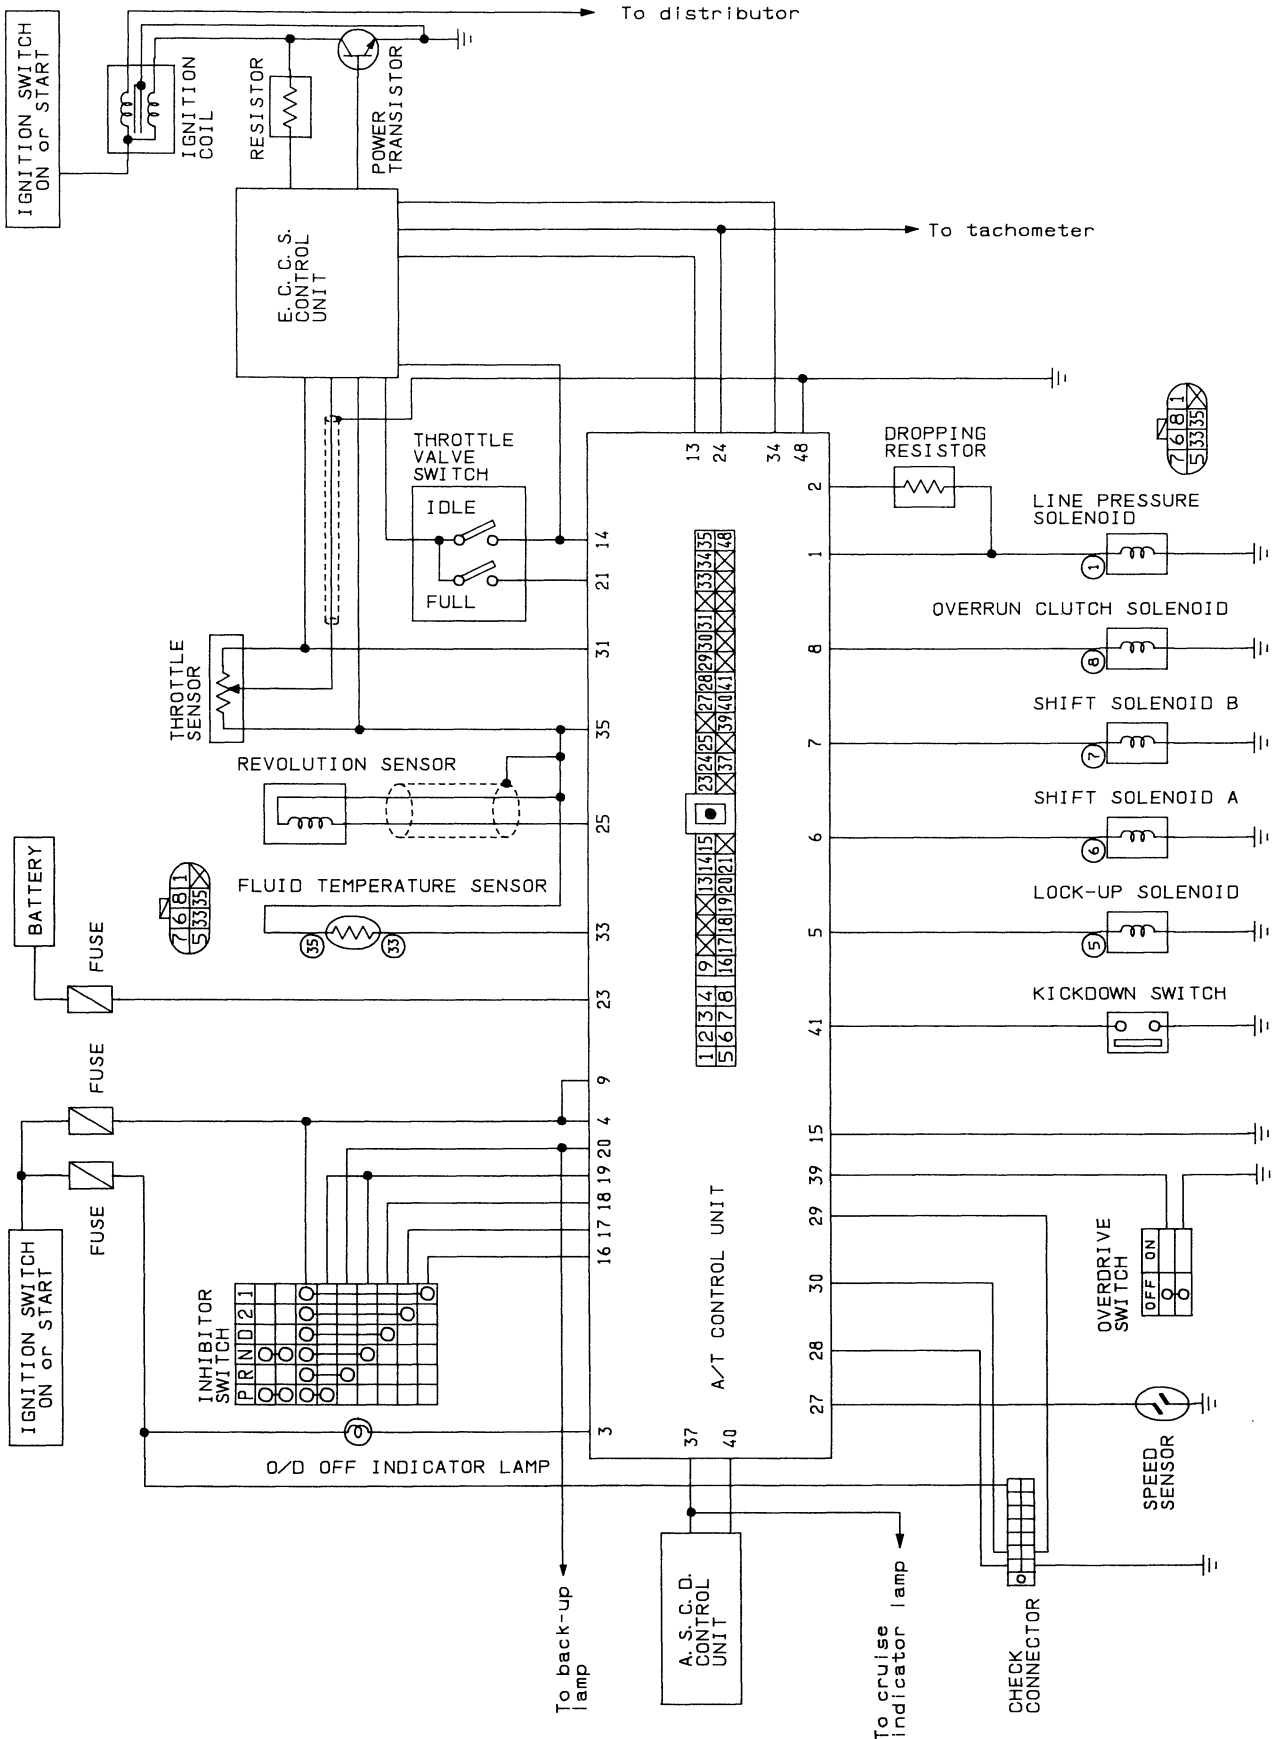

SAT517C

# TROUBLE DIAGNOSES


## Wiring Diagram

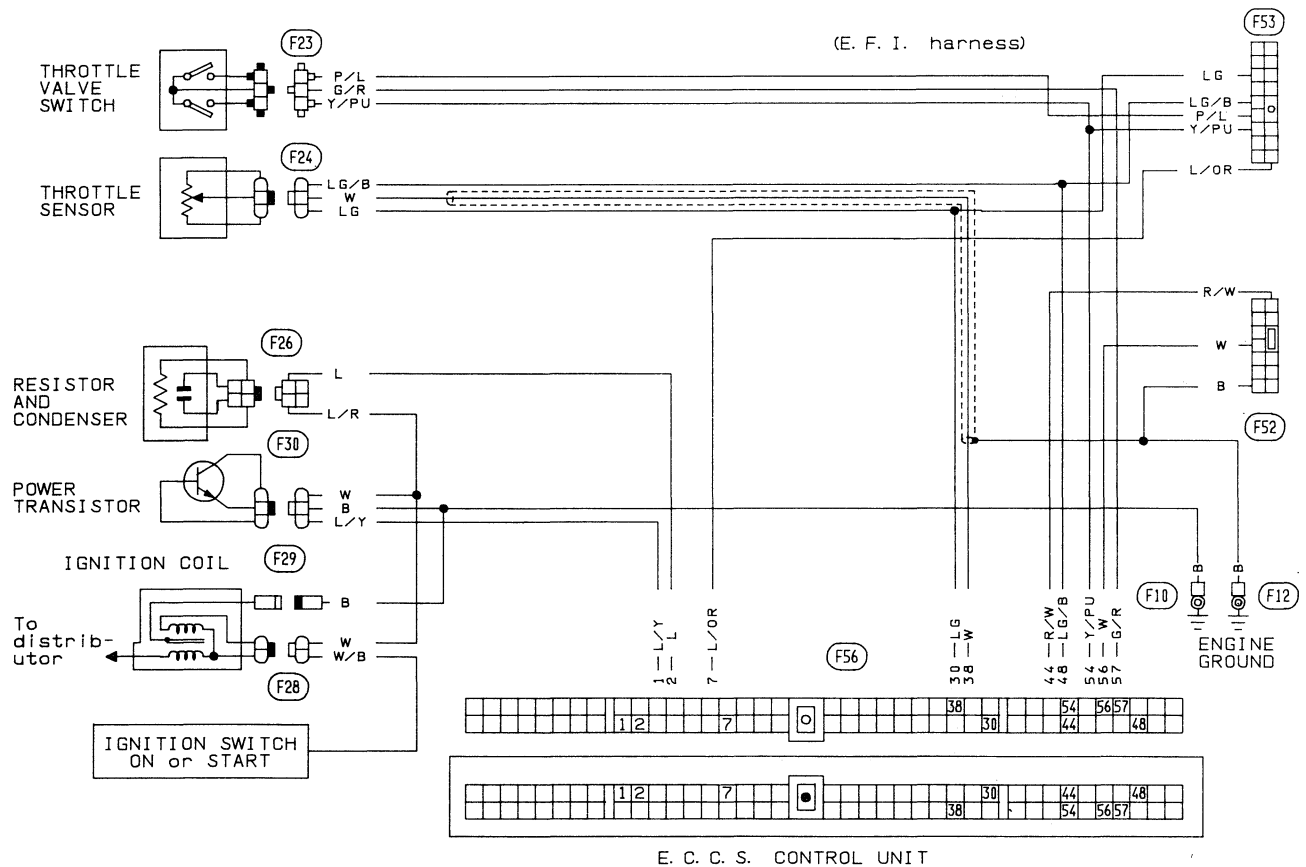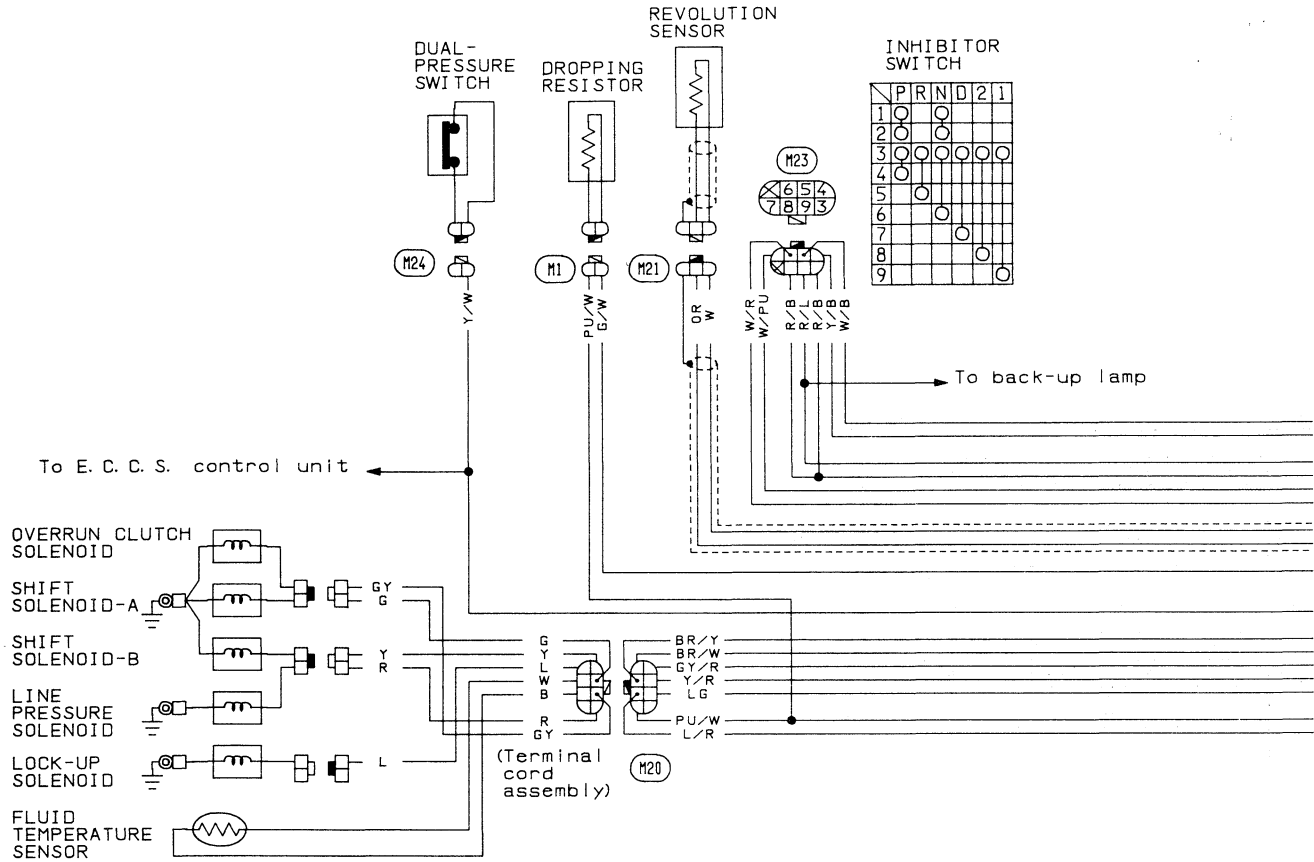






# TROUBLE DIAGNOSES

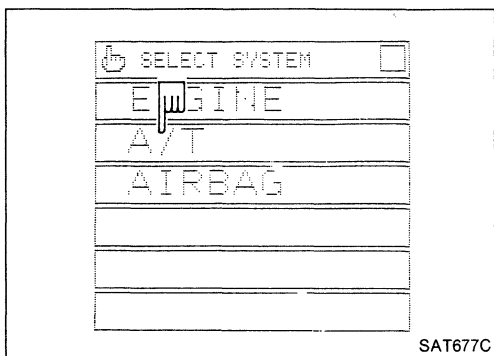

## Self-diagnosis

### SELF-DIAGNOSTIC PROCEDURE ( With CONSULT)




1. Turn on CONSULT.
2. Touch "A/T".
3. Touch "SELF-DIAGNOSIS".  
CONSULT performs REAL-TIME SELF-DIAGNOSIS.

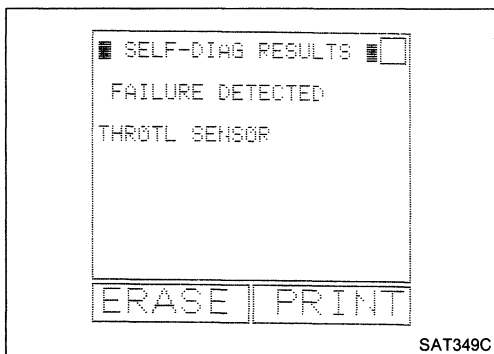

# TROUBLE DIAGNOSES


## Self-diagnosis (Cont'd)

### SELF-DIAGNOSTIC PROCEDURE (⌚ Without CONSULT)

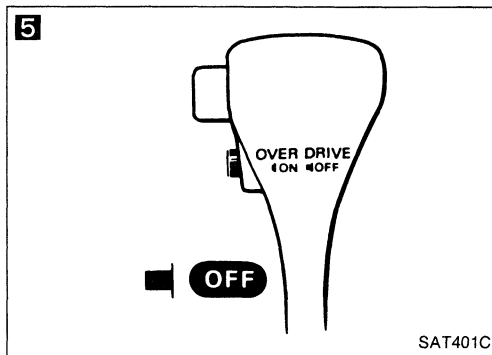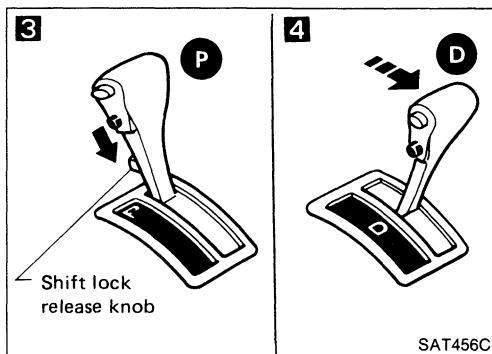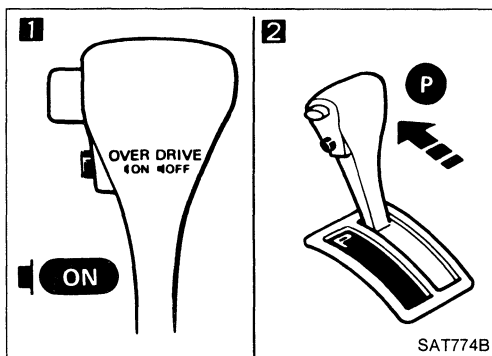


DIAGNOSIS START

Start engine and warm it up to normal engine operating temperature.




**1** Set overdrive switch in "ON" position.

**2** Move selector lever to "P" range.



Does O.D. OFF indicator lamp come on for about 2 seconds?


No → Go to Diagnostic Procedure 1.

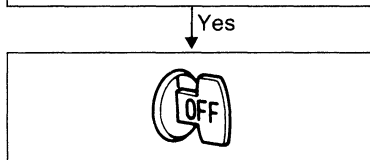

**3** Push shift lock release knob.

**4** Move selector lever to "D" range.





**5** Set overdrive switch in "OFF" position.

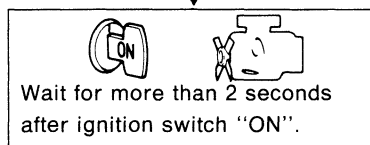

Ⓐ

# TROUBLE DIAGNOSES








## Self-diagnosis (Cont'd)

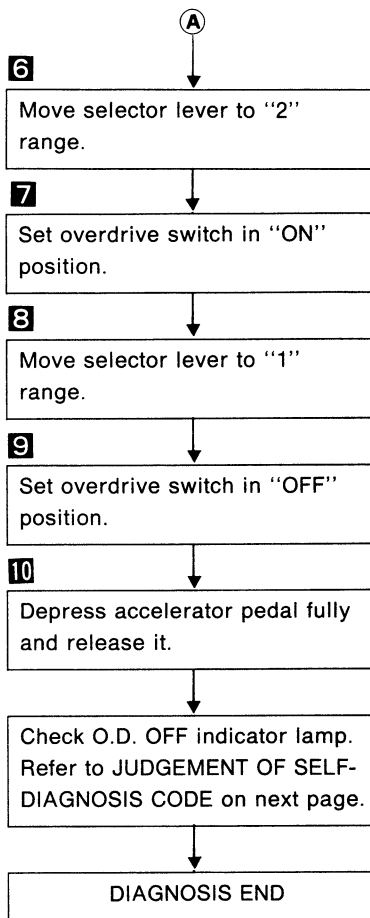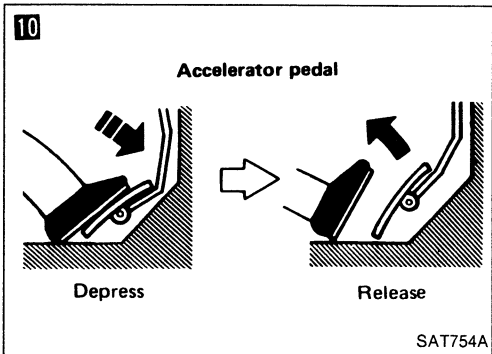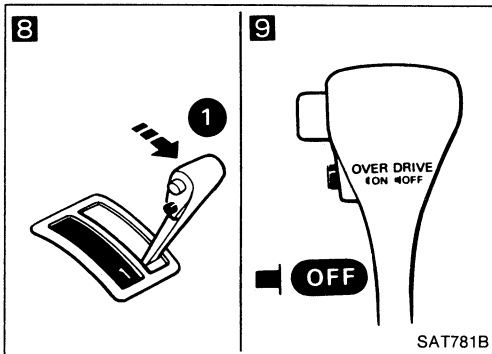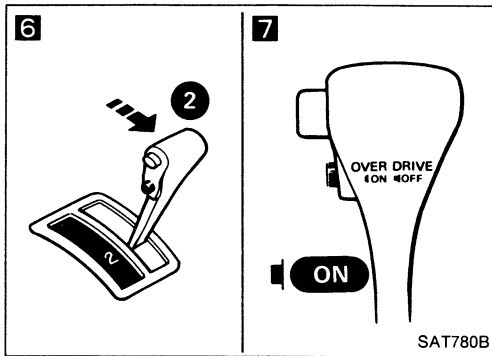

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)









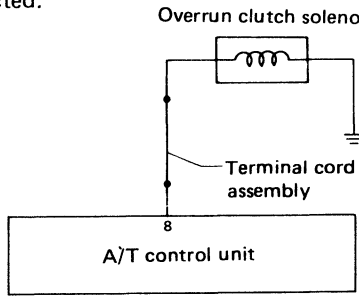
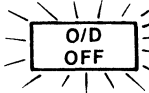
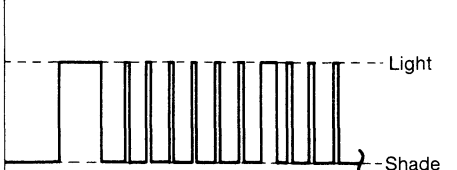
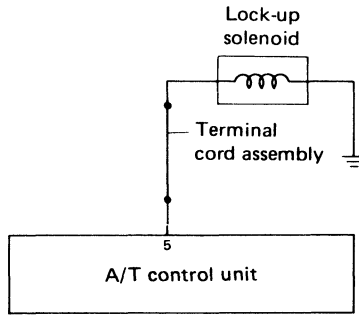
### JUDGEMENT OF SELF-DIAGNOSIS CODE
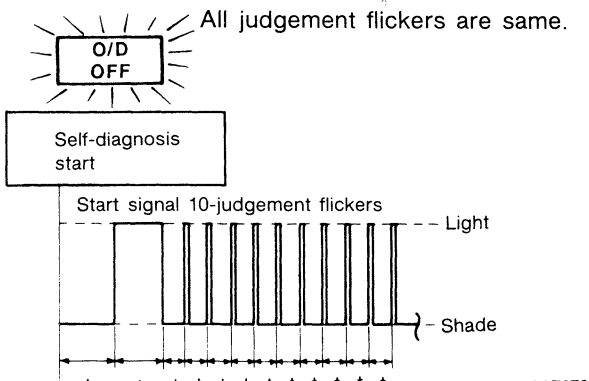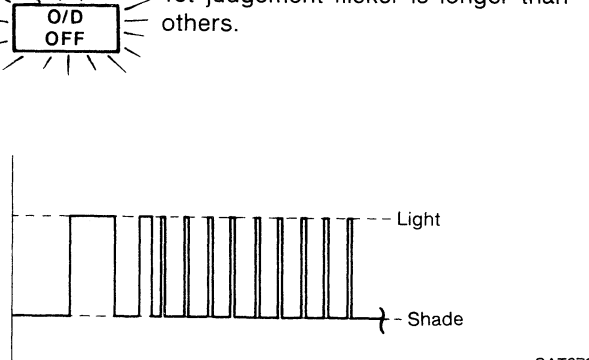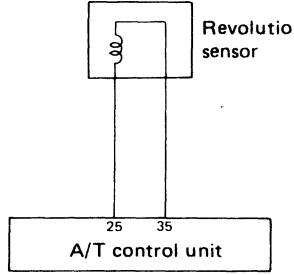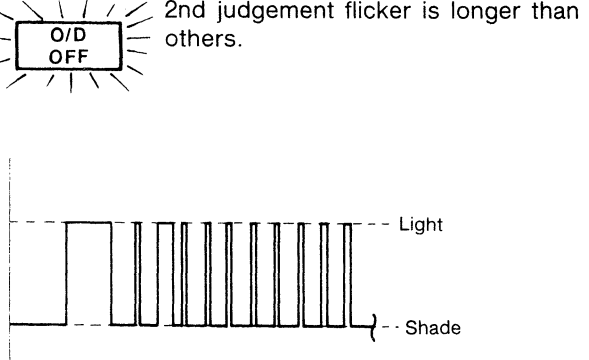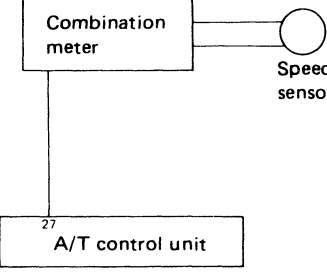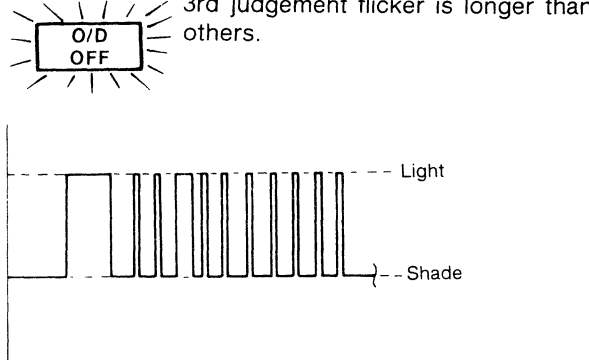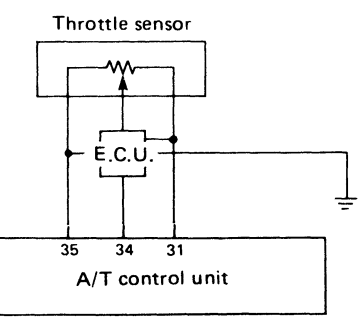
<p>O.D. OFF indicator lamp</p> <p>All judgement flickers are same.</p>  <p>Self-diagnosis start</p> <p>Start signal 10-judgement flickers</p> <p>Light</p> <p>Shade</p> <p>t<sub>1</sub> t<sub>2</sub> t<sub>3</sub> t<sub>3</sub> t<sub>3</sub> t<sub>3</sub> t<sub>3</sub> t<sub>3</sub> t<sub>3</sub> t<sub>3</sub> t<sub>3</sub></p> <p>SAT678C</p>	<p>Damaged circuit</p> <p>All circuits that can be confirmed by self-diagnosis are O.K.</p>
<p>O/D OFF indicator lamp</p> <p>1st judgement flicker is longer than others.</p>  <p>Light</p> <p>Shade</p> <p>SAT679C</p>	<p>Revolution sensor circuit is short-circuited or disconnected.</p>  <p>Revolution sensor</p> <p>25 35</p> <p>A/T control unit</p> <p>➡ Go to revolution sensor circuit check. SAT965B</p>
<p>O/D OFF indicator lamp</p> <p>2nd judgement flicker is longer than others.</p>  <p>Light</p> <p>Shade</p> <p>SAT680C</p>	<p>Speed sensor circuit is short-circuited or disconnected.</p>  <p>Combination meter</p> <p>Speed sensor</p> <p>27</p> <p>A/T control unit</p> <p>➡ Go to speed sensor circuit check. SAT966B</p>
<p>O/D OFF indicator lamp</p> <p>3rd judgement flicker is longer than others.</p>  <p>Light</p> <p>Shade</p> <p>SAT681C</p>	<p>Throttle sensor circuit is short-circuited or disconnected.</p>  <p>Throttle sensor</p> <p>E.C.U.</p> <p>35 34 31</p> <p>A/T control unit</p> <p>➡ Go to throttle sensor circuit check. SAT967B</p>

t<sub>1</sub> = 2.5 seconds    t<sub>2</sub> = 2.0 seconds    t<sub>3</sub> = 1.0 second












# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

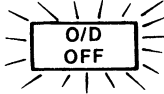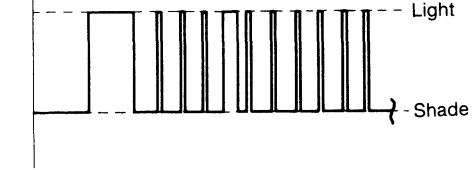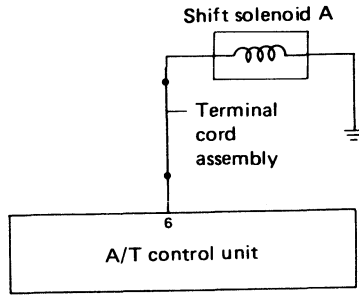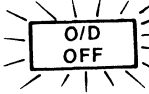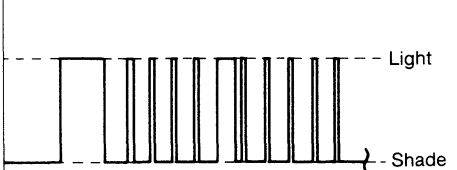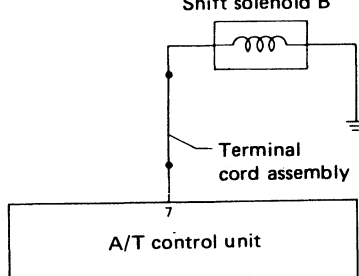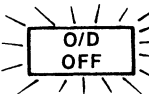O.D. OFF indicator lamp	Damaged circuit
<p style="text-align: center;">4th judgement flicker is longer than others.</p> <div style="text-align: center;">  </div> <p>Self-diagnosis start</p>  <p style="text-align: right;">Light Shade</p> <p style="text-align: right;">SAT682C</p>	<p>Shift solenoid A circuit is short-circuited or disconnected.</p>  <p style="text-align: center;">6 A/T control unit</p> <p>➡ <b>Go to shift solenoid A circuit check.</b> SAT968B</p>
<p style="text-align: center;">5th judgement flicker is longer than others.</p> <div style="text-align: center;">  </div>  <p style="text-align: right;">Light Shade</p> <p style="text-align: right;">SAT683C</p>	<p>Shift solenoid B circuit is short-circuited or disconnected.</p>  <p style="text-align: center;">7 A/T control unit</p> <p>➡ <b>Go to shift solenoid B circuit check.</b> SAT969B</p>
<p style="text-align: center;">6th judgement flicker is longer than others.</p> <div style="text-align: center;">  </div>  <p style="text-align: right;">Light Shade</p> <p style="text-align: right;">SAT684C</p>	<p>Overrun clutch solenoid circuit is short-circuited or disconnected.</p>  <p style="text-align: center;">8 A/T control unit</p> <p>➡ <b>Go to overrun clutch solenoid circuit check.</b> SAT970B</p>
<p style="text-align: center;">7th judgement flicker is longer than others.</p> <div style="text-align: center;">  </div>  <p style="text-align: right;">Light Shade</p> <p style="text-align: right;">SAT685C</p>	<p>Lock-up solenoid circuit is short-circuited or disconnected.</p>  <p style="text-align: center;">5 A/T control unit</p> <p>➡ <b>Go to lock-up solenoid circuit check.</b> SAT971B</p>

# TROUBLE DIAGNOSES


## Self-diagnosis (Cont'd)

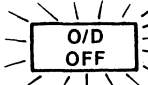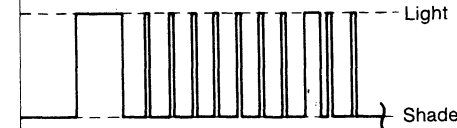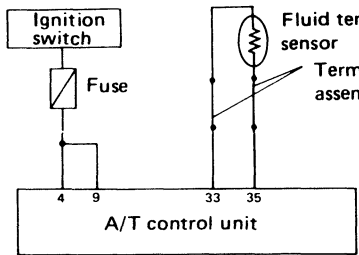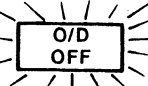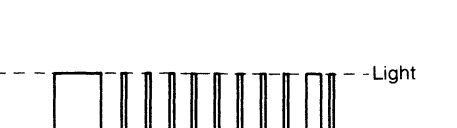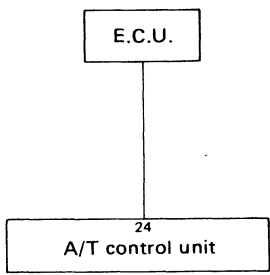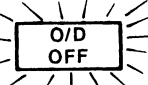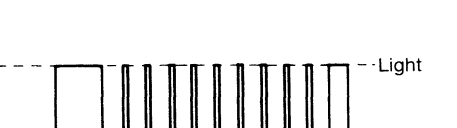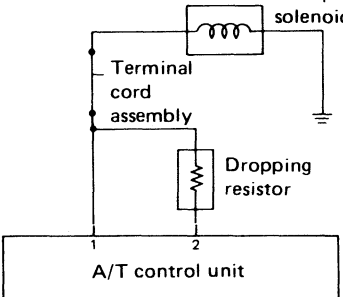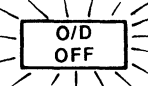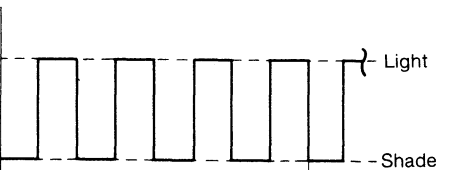O.D. OFF indicator lamp	Damaged circuit
<p>O/D OFF indicator lamp</p> <p>8th judgement flicker is longer than others.</p>  <p>Self-diagnosis start</p>  <p>SAT686C</p>	<p>Fluid temperature sensor is disconnected or A/T control unit power source circuit is damaged.</p>  <p>➡ Go to fluid temperature sensor and A/T control unit power source circuit check.</p> <p>SAT972B</p>
<p>O/D OFF indicator lamp</p> <p>9th judgement flicker is longer than others.</p>   <p>SAT687C</p>	<p>Engine revolution signal circuit is short-circuited or disconnected.</p>  <p>➡ Go to engine revolution signal circuit check.</p> <p>SAT973B</p>
<p>O/D OFF indicator lamp</p> <p>10th judgement flicker is longer than others.</p>   <p>SAT688C</p>	<p>Line pressure solenoid circuit is short-circuited or disconnected.</p>  <p>➡ Go to line pressure solenoid circuit check.</p> <p>SAT974B</p>
<p>O/D OFF indicator lamp</p> <p>Flickers as shown below.</p>   <p>SAT689C</p>	<p>Battery power is low.          Battery has been disconnected for a long time.          Battery is connected conversely.          (When reconnecting A/T control unit connectors. — This is not a problem.)</p>

$t_4 = 1.0 \text{ second}$

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

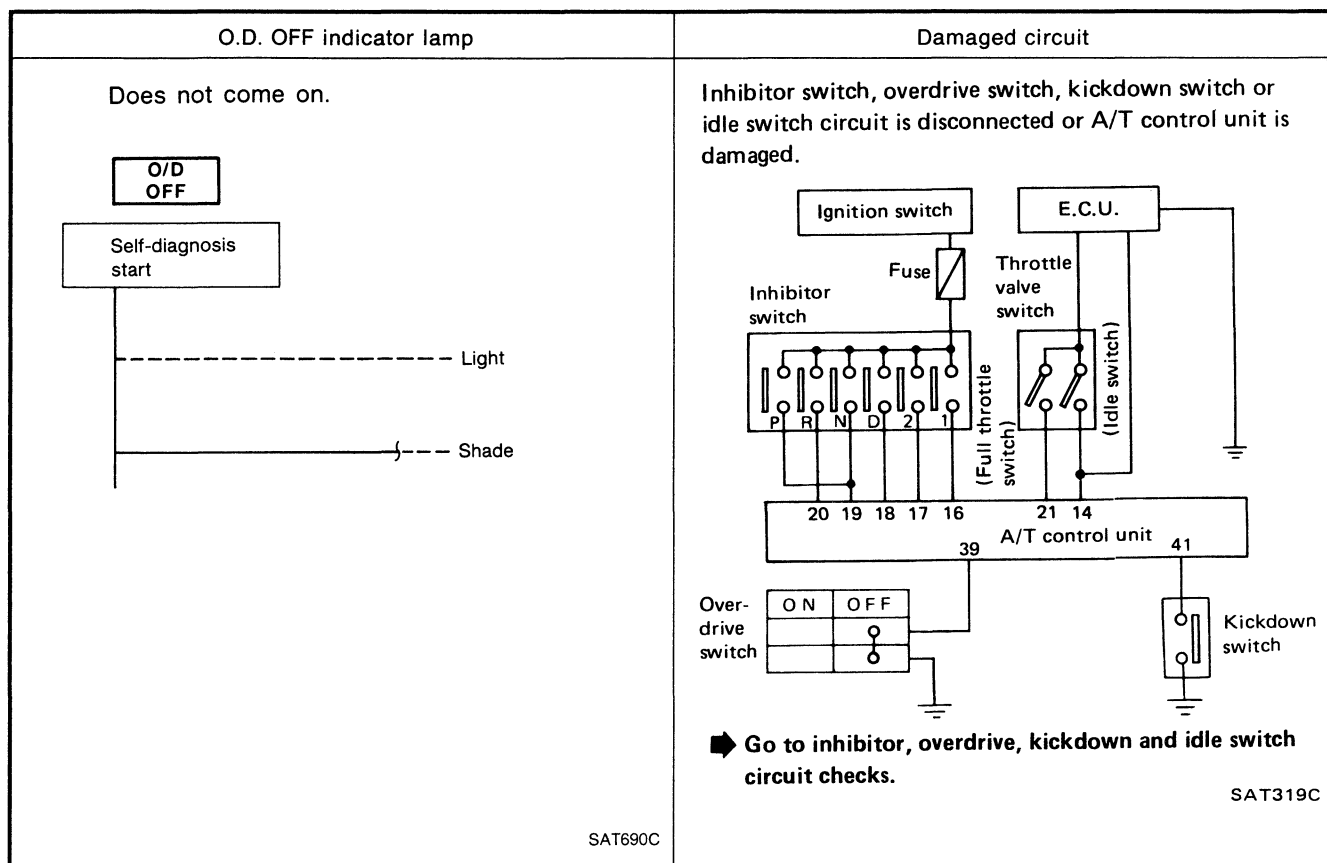




# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

### REVOLUTION SENSOR CIRCUIT CHECK

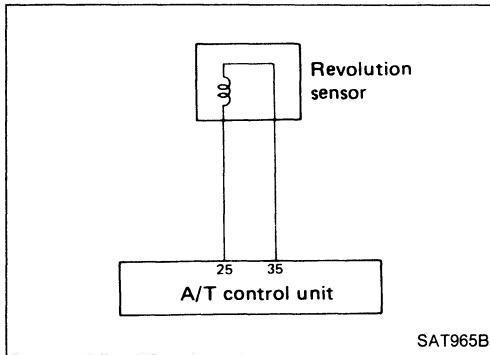

**CHECK REVOLUTION SENSOR.**  
— Refer to "Electrical Components Inspection".

N.G.

Repair or replace revolution sensor.

**A**

O.K.

**CHECK INPUT SIGNAL.**

N.G.

Check harness continuity between A/T control unit and revolution sensor.



2.



- Select "E.C.U. INPUT SIGNALS".
- Read out the value of "CAR SPEED SENSOR 1" while driving.
- Check the value changes according to driving speed.

OR



Check voltage between A/T control unit terminal ②5 and ground while driving.

(Measure with A.C. range.)

**Voltage:**


**At 0 km/h (0 MPH):**

0V

**At 30 km/h (19 MPH):**

1V or more

(Voltage rises gradually in response to vehicle speed.)

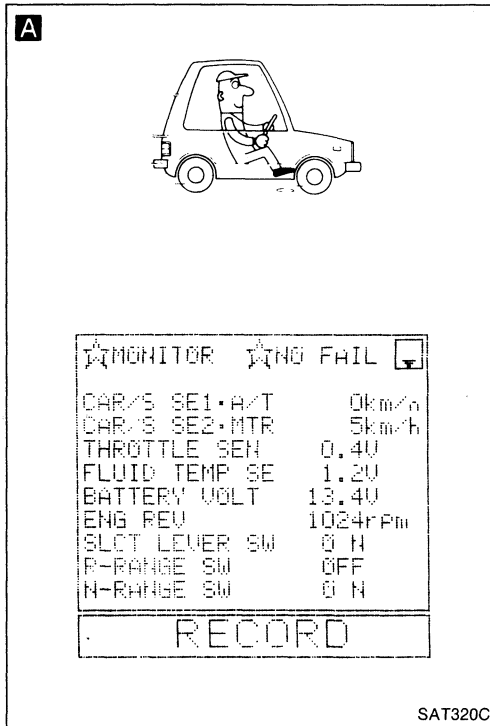

O.K.


Perform self-diagnosis again after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K.

**INSPECTION END**

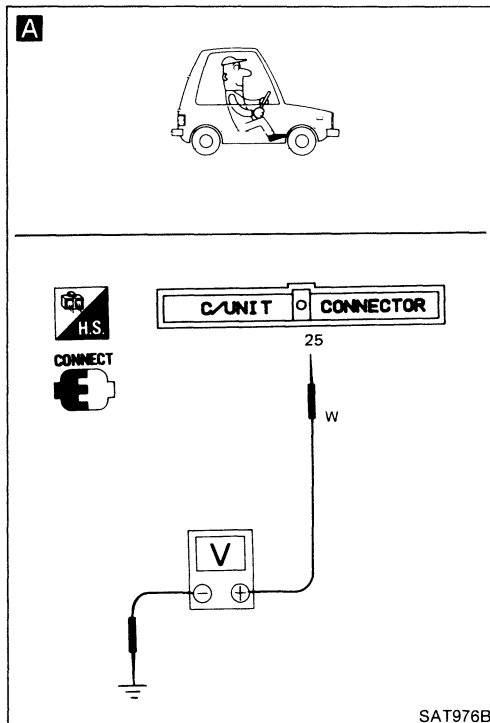


# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

### SPEED SENSOR CIRCUIT CHECK

**A**




```

MONITOR  *NO FAIL
CAR/S SE1-A/T      0km/h
CAR/S SE2-MTR      5km/h
THROTTLE SEN      0.4V
FLUID TEMP SE      1.2V
BATTERY VOLT      13.4V
ENG REV            1024rpm
SLCT LEVER SW      0 N
P-RANGE SW         OFF
N-RANGE SW         0 N
            
```


RECORD


SAT320C

**A**

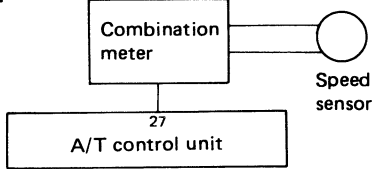

At 2 - 3 km/h  
(1 - 2 MPH)




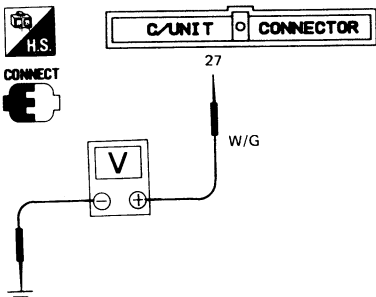



SAT977B

**A**

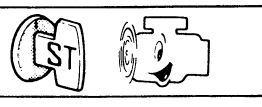**CHECK INPUT SIGNAL.**

1. 
2. 
  - Select "E.C.U. INPUT SIGNALS".
  - Read out the value of "CAR SPEED SENSOR 2" while driving.
  - Check the value changes according to driving speed.

— OR —

2. 
  - Check voltage between A/T control unit terminal 27 and ground while driving at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.

**Voltage: Varies from 0V to 5V**

N.G. →

Check the following items.

- Speed sensor and ground circuit for speed sensor — Refer to section EL.
- Harness continuity between A/T control unit and speed sensor

O.K. ↓

Perform self-diagnosis again after driving for a while.

O.K. ↓

**INSPECTION END**


N.G. →

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

### THROTTLE SENSOR CIRCUIT CHECK

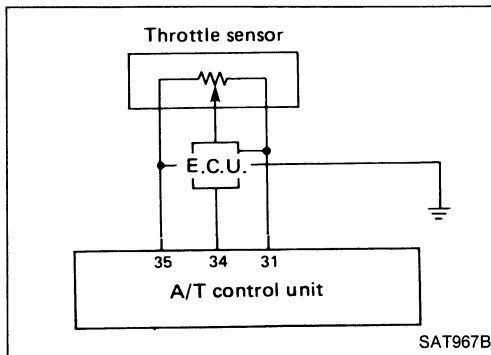

**A**


Depress slowly.

```

MONITOR  NO FAIL
CAR/S SE1·A/T      0km/h
CAR/S SE2·MTR     5km/h
THROTTLE SEN      0.4V
FLUID TEMP SE     1.2V
BATTERY VOLT      13.4V
ENG REV           1024rpm
SLCT LEVER SW     0 N
R-RANGE SW        OFF
N-RANGE SW        0 N
    
```

RECORD

SAT321C

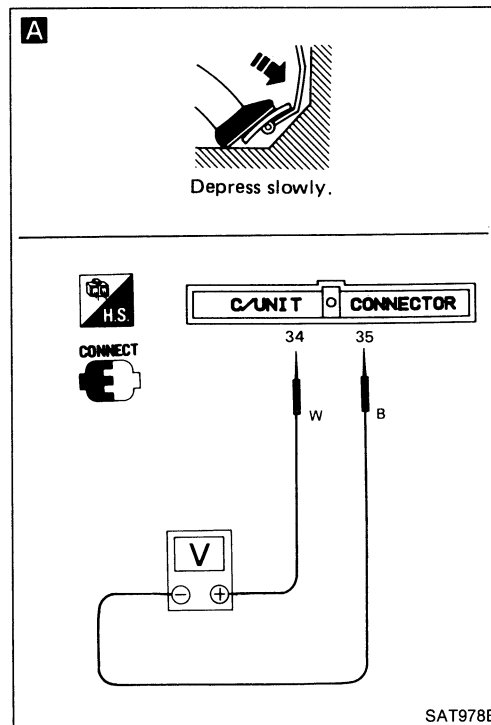

Perform self-diagnosis (Mode III) for engine control.

N.G. → Check throttle sensor circuit for engine control. — Refer to section EF & EC.

O.K.

**A**

#### CHECK INPUT SIGNAL.

1.

N.G. → Check harness continuity between E.C.U. and A/T control unit regarding throttle sensor circuit.

2.

- Select "E.C.U. INPUT SIGNALS".
- Read out the value of "THROTTLE SENSOR".

**Voltage:**  
**Fully-closed throttle:**  
**Approximately 0.5V**  
**Fully-open throttle:**  
**Approximately 4V**

OR

- Check voltage between A/T control unit terminals ③④ and ③⑤ while accelerator pedal is depressed slowly.

**Voltage:**  
**Fully-closed throttle:**  
**Approximately 0.5V**  
**Fully-open throttle:**  
**Approximately 4V**

(Voltage rises gradually in response to throttle valve opening.)

O.K.

Perform self-diagnosis again after driving for a while.

N.G. → 1. Perform A/T control unit input/output signal inspection.  
 2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.




O.K.

**INSPECTION END**

# TROUBLE DIAGNOSES


## Self-diagnosis (Cont'd)

### SHIFT SOLENOID A CIRCUIT CHECK

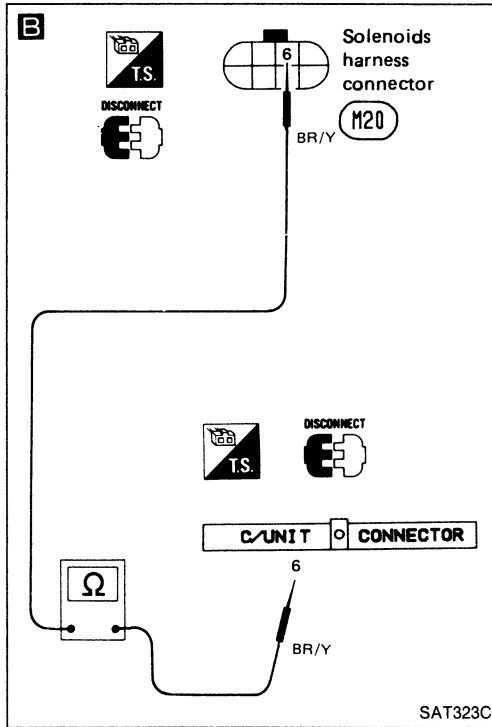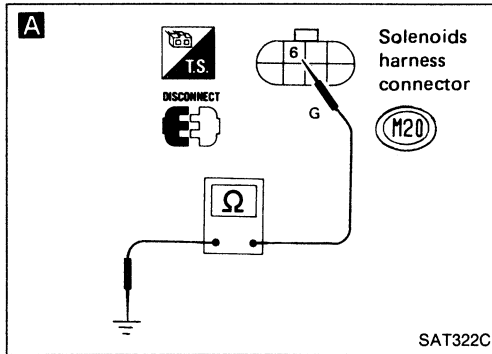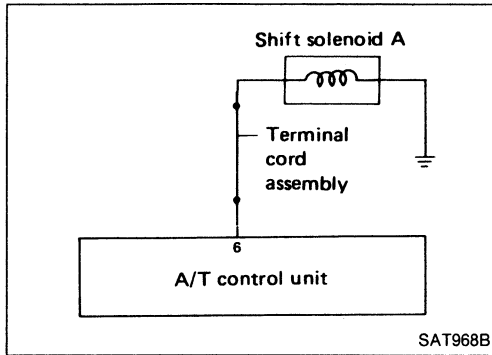

**A**

#### CHECK GROUND CIRCUIT.


1. 
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑥ and ground.  
**Resistance: 20 - 40Ω**

N.G.

1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
  - Shift solenoid A — Refer to "Electrical Components Inspection".
  - Harness continuity of terminal cord assembly

**B**

#### CHECK POWER SOURCE CIRCUIT.

1. 
2. Disconnect A/T control unit connector.
3. Check resistance between terminal ⑥ and A/T control unit terminal ⑥.  
**Resistance: Approximately 0Ω**
4. Reinstall any part removed.

N.G.

- Repair or replace harness between A/T control unit and terminal cord assembly.

O.K.

O.K.

Perform self-diagnosis after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.




O.K.

**INSPECTION END**

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

### SHIFT SOLENOID B CIRCUIT CHECK

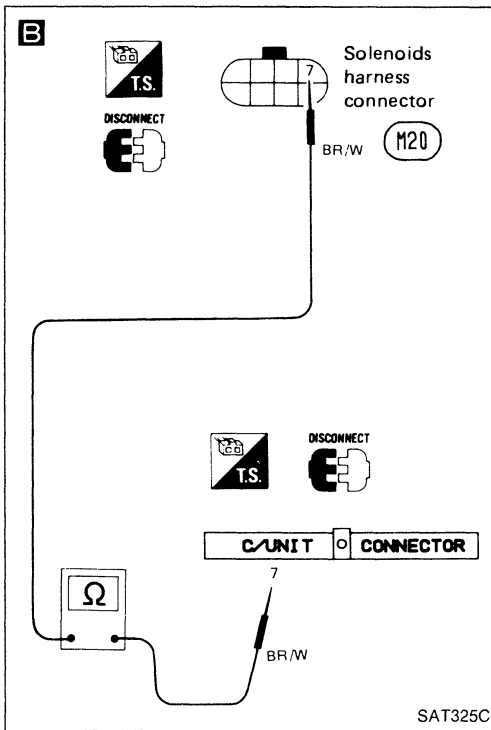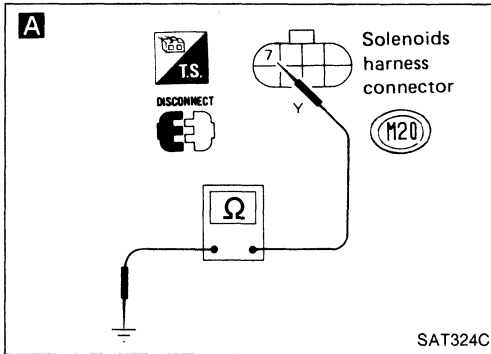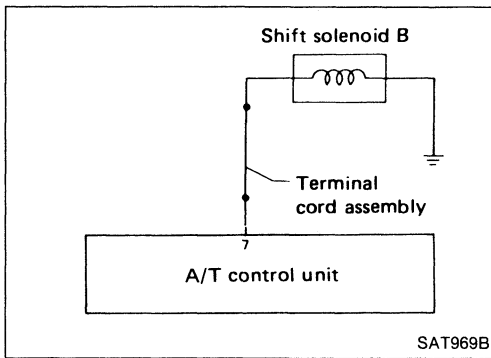

**A**

#### CHECK GROUND CIRCUIT.

1. Disconnect terminal cord assembly connector in engine compartment.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑦ and ground.  
**Resistance: 20 - 40Ω**

N.G.

1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
  - Shift solenoid B — Refer to "Electrical Components Inspection".
  - Harness continuity of terminal cord assembly

**B**

#### CHECK POWER SOURCE CIRCUIT.

1. Disconnect A/T control unit connector.
2. Disconnect A/T control unit connector.
3. Check resistance between terminal ⑦ and A/T control unit terminal ⑦.  
**Resistance: Approximately 0Ω**
4. Reinstall any part removed.

N.G.

1. Repair or replace harness between A/T control unit and terminal cord assembly.

O.K.

O.K.

Perform self-diagnosis after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.




O.K.

**INSPECTION END**

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

### OVERRUN CLUTCH SOLENOID CIRCUIT CHECK

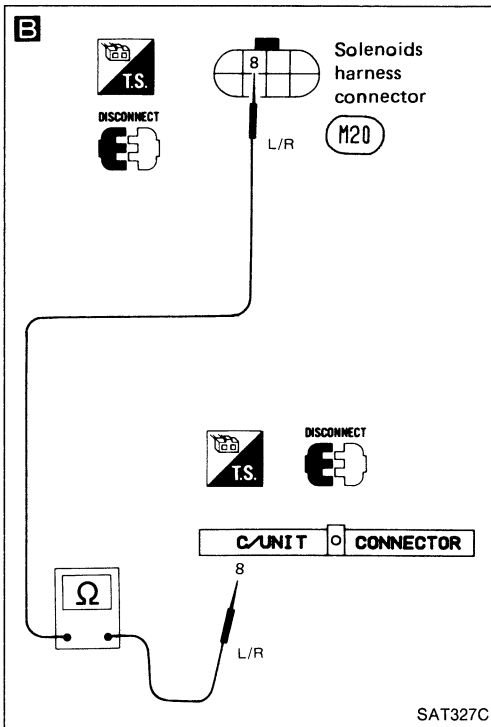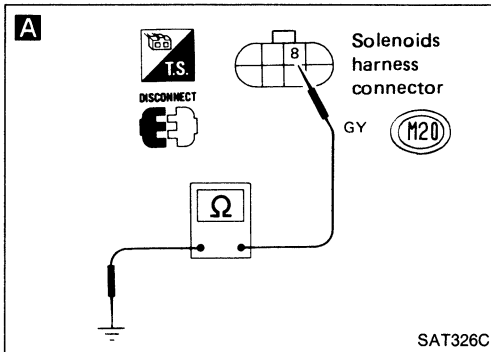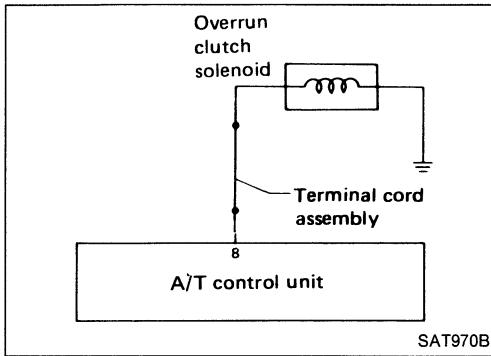

**A**

**CHECK GROUND CIRCUIT.**

- 1.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑧ and ground.  
**Resistance: 20 - 40Ω**

N.G.

1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
  - Overrun clutch solenoid. — Refer to "Electrical Components Inspection".
  - Harness continuity of terminal cord assembly

**B**

**CHECK POWER SOURCE CIRCUIT.**

- 1.
2. Disconnect A/T control unit connector.
3. Check resistance between terminal ⑧ and A/T control unit terminal ⑧.  
**Resistance: Approximately 0Ω**
4. Reinstall any part removed.

N.G.

1. Repair or replace harness between A/T control unit and terminal cord assembly.

O.K.

Perform self-diagnosis after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.




O.K.

**INSPECTION END**

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

### LOCK-UP SOLENOID CIRCUIT CHECK

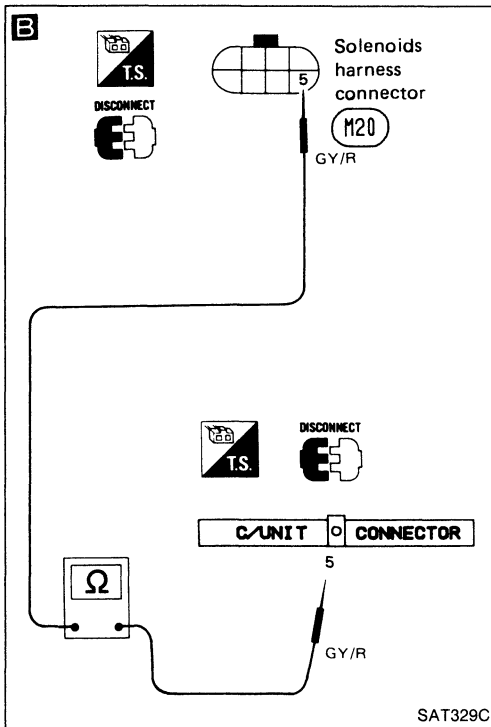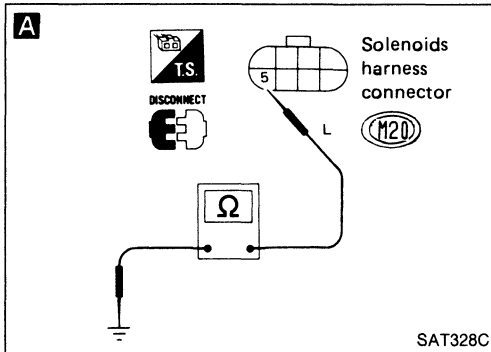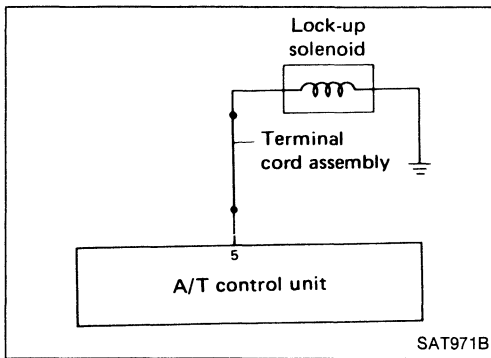

**A**

#### CHECK GROUND CIRCUIT.

- 1.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑤ and ground.  
**Resistance: 10 - 20Ω**

N.G.

1. Remove oil pan. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
  - Lock-up solenoid — Refer to "Electrical Components Inspection".
  - Harness continuity of terminal cord assembly

**B**

#### CHECK POWER SOURCE CIRCUIT.

- 1.
2. Disconnect A/T control unit connector.
3. Check resistance between terminal ⑤ and A/T control unit terminal ⑤  
**Resistance: Approximately 0Ω**
4. Reinstall any part removed.

N.G.

1. Repair or replace harness between A/T control unit and terminal cord assembly.

O.K.

O.K.

Perform self-diagnosis after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K.

**INSPECTION END**


# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)


### FLUID TEMPERATURE SENSOR CIRCUIT AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECKS

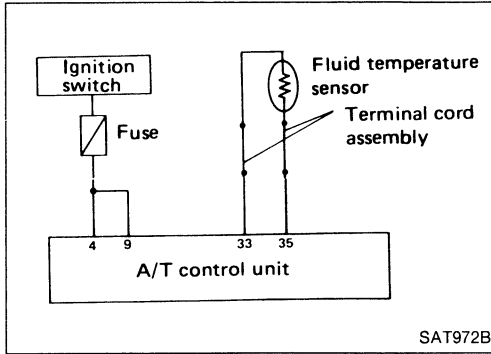

SAT972B

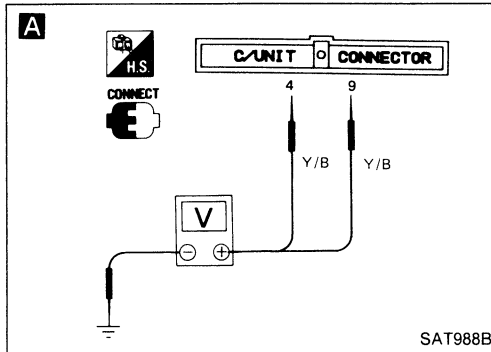

SAT988B

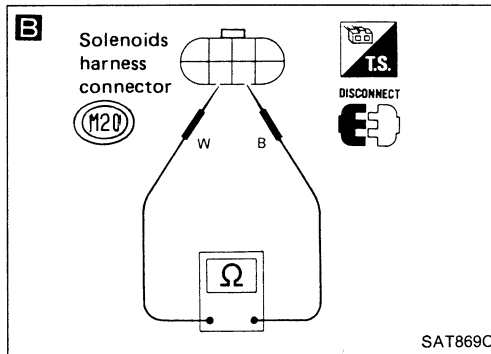


SAT869C

**A**

#### CHECK A/T CONTROL UNIT POWER SOURCE.

1.



2. Check voltage between A/T control unit terminals ④ and ⑨ and ground.

**Battery voltage should exist.**

N.G.

- Check the following items.
- Harness continuity between ignition switch and A/T control unit.
  - Ignition switch and fuse — Refer to section EL.

**B**

#### CHECK FLUID TEMPERATURE SENSOR WITH TERMINAL CORD ASSEMBLY.

1.



2. Disconnect terminal cord assembly connector in engine compartment.

3. Check resistance between terminals ③③ and ③⑤ when A/T is cold.

**Resistance:**

**Cold [20°C (68°F)]**

**Approximately 2.5 kΩ**

4. Reinstall any part removed.

N.G.

1. Remove control valve cover.
2. Check the following items.
- Fluid temperature sensor — Refer to "Electrical Components Inspection".
  - Harness continuity of terminal cord assembly

O.K.

O.K.


**A**



# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

**C**


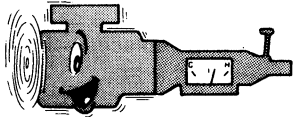


☆MONITOR	☆NO FAIL
CAR/S SE1·A/T	0km/h
CAR/S SE2·MTR	5km/h
THROTTLE SEN	0.4V
FLUID TEMP SE	1.2V
BATTERY VOLT	13.4V
ENG REV	1024rPm
SLOT LEVER SW	0 N
R-RANGE SW	OFF
N-RANGE SW	0 N

RECORD

SAT330C


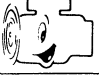
**C**

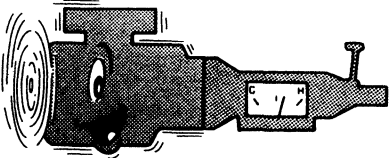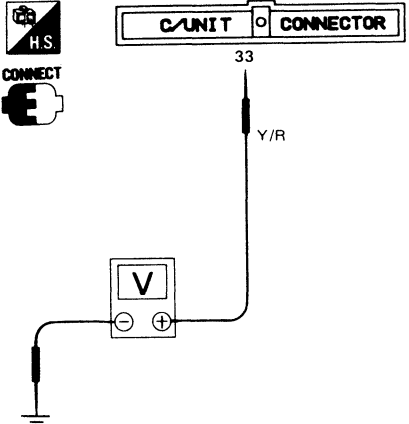



SAT990B


**C**

**CHECK INPUT SIGNAL OF FLUID TEMPERATURE SENSOR.**

1.  

2.  • Select "E.C.U. INPUT SIGNALS".  
• Read out the value of "FLUID TEMPERATURE SENSOR".  
**Voltage:**  
**Cold [20°C (68°F)] →**  
**Hot [80°C (176°F)]:**  
**Approximately**  
**1.5V → 0.5V**

OR

 • Check voltage between A/T control unit terminal ③ and ground while warming up A/T.  
**Voltage:**  
**Cold [20°C (68°F)] →**  
**Hot [80°C (176°F)]:**  
**Approximately**  
**1.5V → 0.5V**

O.K. → Perform self-diagnosis after driving for a while.

N.G. → Check harness continuity between A/T control unit and terminal cord assembly.


O.K. → INSPECTION END

N.G. → 1. Perform A/T control unit input/output signal inspection.  
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

### ENGINE REVOLUTION SIGNAL CIRCUIT CHECK

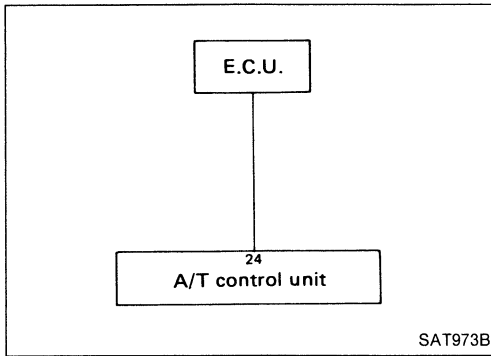


**A**

```

    ☆MONITOR ☆NO FAIL
    CAR/S SE1·A/T      0km/h
    CAR/S SE2·MTR      5km/h
    THROTTLE SEN       0.4V
    FLUID TEMP SE      1.2V
    BATTERY VOLT       13.4V
    ENG REV            1024rPm
    S/LCT LEVER SW     0 N
    R-RANGE SW         OFF
    N-RANGE SW         0 N
    
```

RECORD

SAT331C

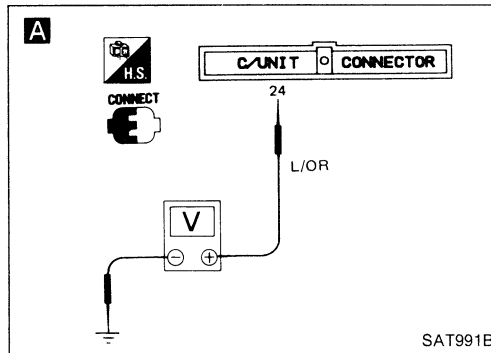

Check ignition circuit condition for engine.

N.G. → Repair or replace. — Refer to section EF & EC.

O.K. ↓

**A** CHECK INPUT SIGNAL.

1. ON

N.G. → Check harness continuity between A/T control unit and E.C.C.S. control unit.

2. ● Select "E.C.U. INPUT SIGNALS".  
● Read out the value of "ENGINE REVOLUTION".  
● Check engine revolution changes according to throttle opening.

OR ● Check voltage between A/T control unit terminal ② and ground.  
**Voltage: 0.9 - 4.5V**

O.K. ↓

Perform self-diagnosis again after driving for a while.

N.G. → 1. Perform A/T control unit input/output signal inspection.  
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.




O.K. ↓

**INSPECTION END**

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

### LINE PRESSURE SOLENOID CIRCUIT CHECK

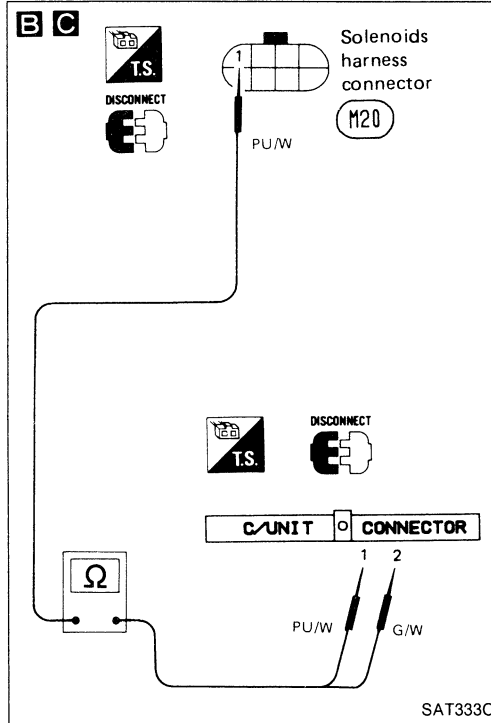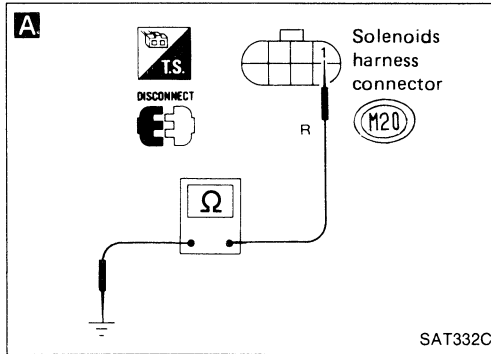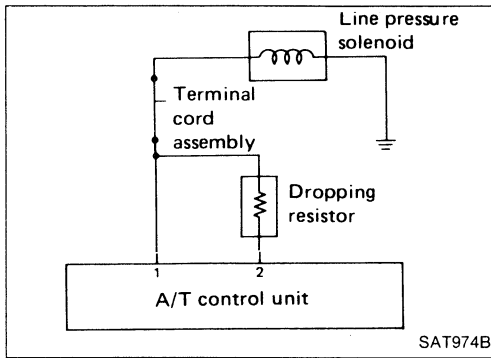

**A**

#### CHECK GROUND CIRCUIT.

- 1.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ① and ground.  
**Resistance: 2.5 - 5Ω**

N.G.

1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
  - Line pressure solenoid — Refer to "Electrical Components Inspection".
  - Harness continuity of terminal cord assembly

O.K.

**B**

#### CHECK POWER SOURCE CIRCUIT.

- 1.
2. Disconnect A/T control unit connector.
3. Check resistance between terminal ① and A/T control unit terminal ②.  
**Resistance: 11.2 - 12.8Ω**

N.G.

- Check the following items.
- Dropping resistor — Refer to "Electrical Components Inspection".
  - Harness continuity between A/T control unit ② and terminal cord assembly

O.K.

**C**

#### CHECK POWER SOURCE CIRCUIT.

- 1.
2. Check resistance between terminal ① and A/T control unit terminal ①.  
**Resistance: Approximately 0Ω**
4. Reinstall any part removed.

N.G.

- Repair or replace harness between A/T control unit ① and terminal cord assembly.

O.K.

Perform self-diagnosis after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.


O.K.

**INSPECTION END**

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

### INHIBITOR, OVERDRIVE, KICKDOWN AND IDLE SWITCH CIRCUIT CHECKS

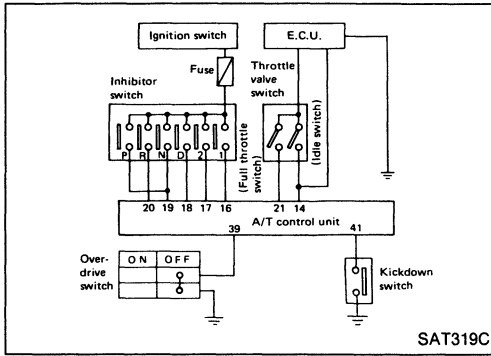

SAT319C


**A**

```

MONITOR  NO FAIL
CAR/S SE1·A/T      0km/h
CAR/S SE2·MTR     5km/h
THROTTLE SEN      0.4V
FLUID TEMP SE     1.2V
BATTERY VOLT      13.4V
ENG REV           1024rPm
SLCT LEVER SW     0 N
R-RANGE SW        OFF
N-RANGE SW        0 N
    
```

RECORD

SAT334C

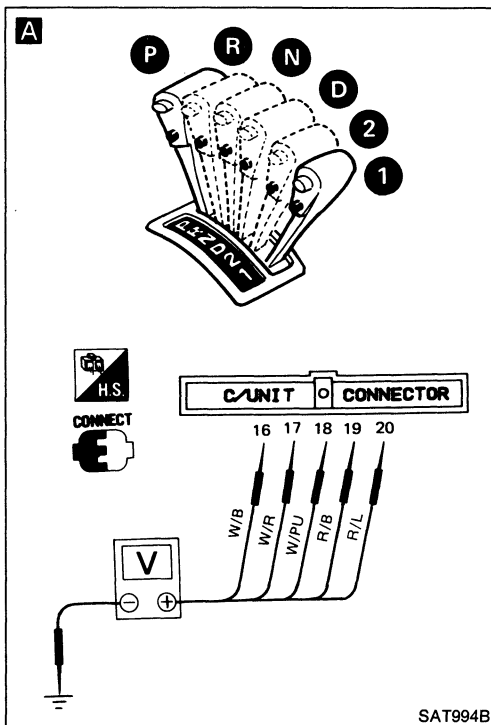

**A**

#### CHECK INHIBITOR SWITCH CIRCUIT.



- 2.
- Select "E.C.U. INPUT signals".
  - Read out "R, N, D, 1 and 2 range switches" moving selector lever to each range.
  - Check the selector lever position is indicated properly.

OR

- 
- Check voltage between A/T control unit terminals 16, 17, 18, 19, 20 and ground while moving selector lever through each range.

#### Voltage:

**B: Battery voltage**

**0: 0V**

Terminal No.	19	20	18	17	16
Lever position					
P, N	B	0	0	0	0
R	0	B	0	0	0
D	0	0	B	0	0
2	0	0	0	B	0
1	0	0	0	0	B

O.K.

**A**

N.G.


Check the following items.

- Inhibitor switch — Refer to "Electrical Components Inspection".
- Harness continuity between ignition switch and inhibitor switch
- Harness continuity between inhibitor switch and A/T control unit

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

**B**

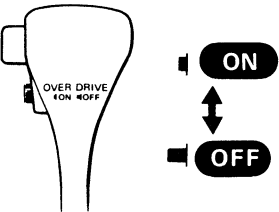

OVER DRIVE  
FOR OFF

ON

OFF


```

MONITOR  INFO FAIL
CAR/S SE1·A/T      0km/h
CAR/S SE2·MTR      5km/h
THROTTLE SEN       0.40
FLUID TEMP SE      1.20
BATTERY VOLT       13.40
ENG REV            1024rPm
SLCT LEVER SW      0 N
R-RANGE SW         OFF
N-RANGE SW         0 N
    
```

RECORD

SAT335C

**B**

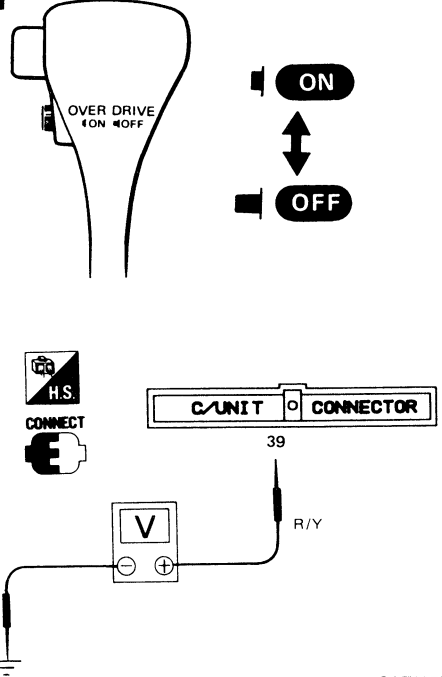

OVER DRIVE  
FOR OFF

ON

OFF

H.S.  
CONNECT

C/UNIT CONNECTOR

39


R/Y


V

SAT995B

**B**

**CHECK OVERDRIVE SWITCH CIRCUIT.**

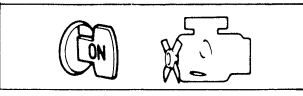
1. 

2.  • Select "E.C.U. INPUT SIGNALS".

• Read out "SELECTOR LEVER SWITCH (Overdrive switch)".

• Check the selector lever switch position is indicated properly. (Selector lever switch "ON" displayed on CONSULT means overdrive "OFF".)

— OR —

 • Check voltage between A/T control unit terminal ③⑨ and ground when overdrive switch is in "ON" position and in "OFF" position.

Switch position	Voltage
ON	Battery voltage
OFF	1V or less

N.G. →

Check the following items.

- Overdrive switch — Refer to "Electrical Components Inspection".
- Harness continuity between A/T control unit and overdrive switch
- Harness continuity of ground circuit for overdrive switch

O.K.


↓

**B**

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)


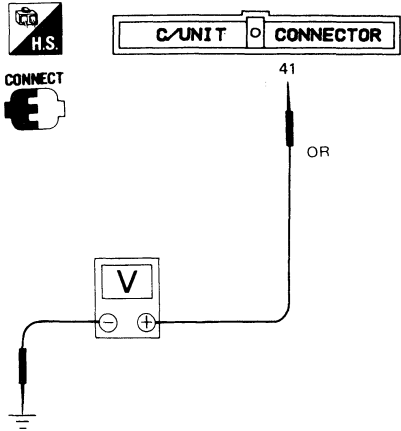
**C**



MONITOR	FAIL
0-RANGE SW	OFF
1-RANGE SW	OFF
2-RANGE SW	OFF
ASCO-CRUISE	OFF
ASCO-OD CUT	OFF
KICKDOWN SW	OFF
POWERSHIFT SW	OFF
IDLE SW	ON
FULL THRTL SW	OFF
RECORD	

SAT336C



**C**


SAT337C

**C**

**CHECK KICKDOWN SWITCH CIRCUIT.**

- 
- 
  - Select "E.C.U. INPUT SIGNALS".
  - Read out "KICKDOWN SWITCH" depressing accelerator pedal fully.
  - Check kickdown switch position is indicated properly.

OR


  - Check voltage between A/T control unit terminal ④ and ground while depressing accelerator pedal slowly. (after warming up engine)

**Voltage:**

**When releasing accelerator pedal:**  
3 - 8V

**When depressing accelerator pedal fully:**  
1V or less

N.G.

Check the following items.

- Kickdown switch
- Harness continuity between A/T control unit and kickdown switch
- Harness continuity of ground circuit for kickdown switch


O.K.

**C**

# TROUBLE DIAGNOSES

## Self-diagnosis (Cont'd)

**D**




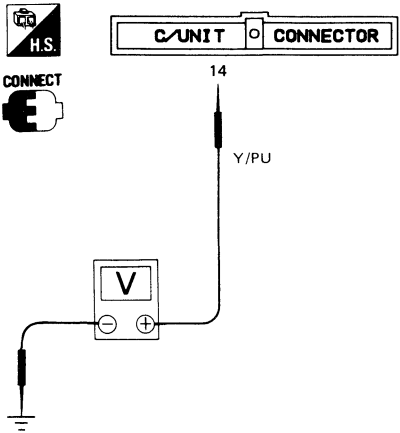
```

MONITOR  NO FAIL
D-RANGE SW      OFF
1-RANGE SW      OFF
2-RANGE SW      OFF
ASCD+CRUISE     OFF
ASCD+OD CUT     OFF
KICKDOWN SW     OFF
POWERSHIFT SW   OFF
IDLE SW         0 N
FULL THRTL SW   OFF
    
```

RECORD

SAT338C




**D**


SAT339C

**D**

**CHECK IDLE SWITCH CIRCUIT.**

- 

- 
  - Select "E.C.U. INPUT SIGNALS".
  - Read out "IDLE SWITCH" depressing and releasing accelerator pedal.
  - Check idle switch changes ON or OFF.

— OR —


  - Check voltage between A/T control unit terminal ⑭ and ground while depressing accelerator pedal slowly.

**Voltage:**

**When releasing accelerator pedal:**  
8 - 15V

**When depressing accelerator pedal fully:**  
1V or less

O.K. → Perform self-diagnosis again after driving for a while.

N.G. → Perform self-diagnosis (Mode IV) for engine control. Check idle switch circuit.

O.K. → Check harness continuity between A/T control unit and idle switch.

N.G. → Check idle switch circuit for engine control. — Refer to section EF & EC.




O.K. → INSPECTION END

N.G. → 1. Perform A/T control unit input/output signal inspection.  
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

# TROUBLE DIAGNOSES

## Diagnostic Procedure 1

**SYMPTOM:** O.D. OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".

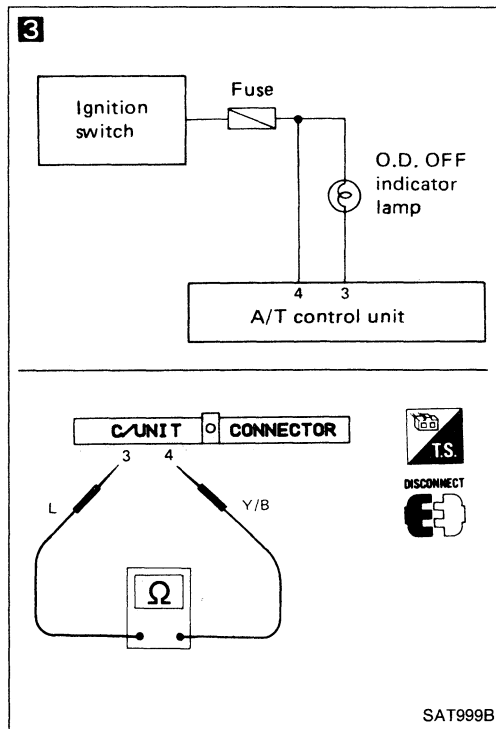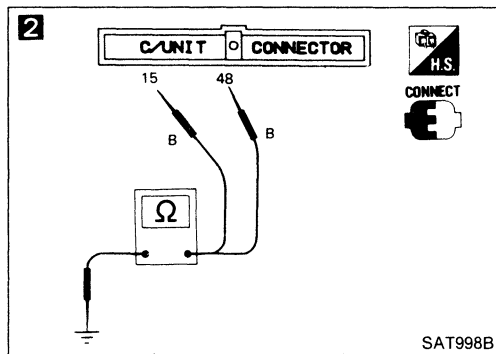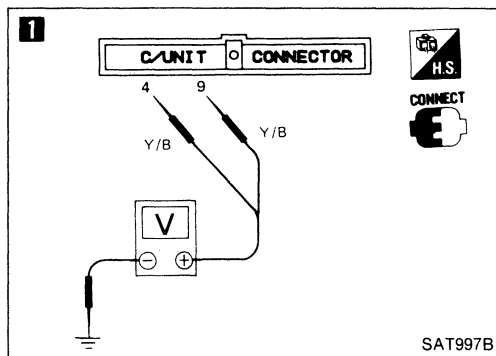

**1**

**CHECK A/T CONTROL UNIT POWER SOURCE.**

1. 2. Check voltage between A/T control unit terminals ④, ⑨ and ground.  
**Battery voltage should exist.**

N.G. → Check the following items.

- Harness continuity between ignition switch and A/T control unit.
- Ignition switch and fuse — Refer to section EL.

O.K. ↓

**2**

**CHECK A/T CONTROL UNIT GROUND CIRCUIT.**

1. 2. Disconnect A/T control unit connector.  
3. Check resistance between A/T control unit terminals ⑮, ④⑧ and ground.  
**Resistance: Approximately 0Ω**

N.G. → Check harness continuity between A/T control unit and ground.

O.K. ↓

**3**

**CHECK LAMP CIRCUIT.**

1. 2. Disconnect A/T control unit connector.  
3. Check resistance between A/T control unit terminals ③ and ④.  
**Resistance: 50 - 100Ω**  
4. Reinstall any part removed.

N.G. → Check the following items.

- O.D. OFF indicator lamp
- Harness continuity between ignition switch and O.D. OFF indicator lamp
- Harness continuity between O.D. OFF indicator lamp and A/T control unit

O.K. ↓

Check again.



N.G. → 1. Perform A/T control unit input/output signal inspection.  
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K. ↓

**INSPECTION END**





# TROUBLE DIAGNOSES

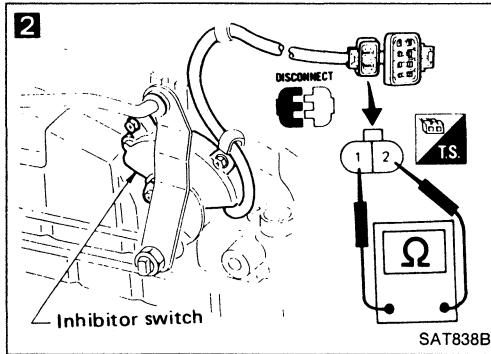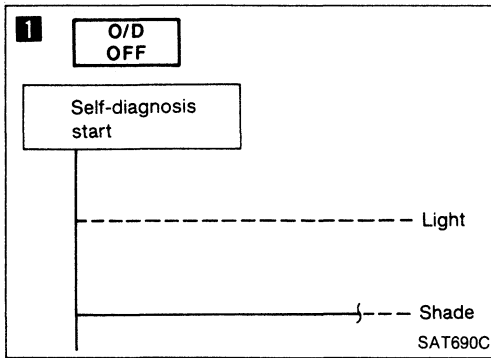


## Diagnostic Procedure 2

**SYMPTOM:** Engine cannot be started with selector lever in "P" or "N" range or engine can be started with selector lever in "D", "2", "1" or "R" range.

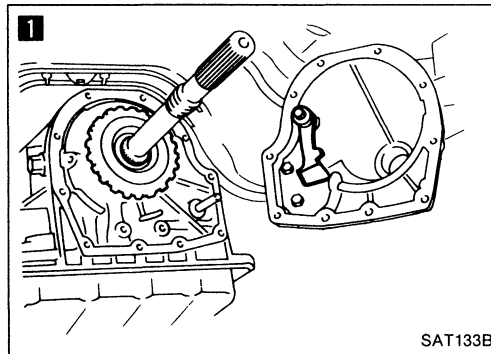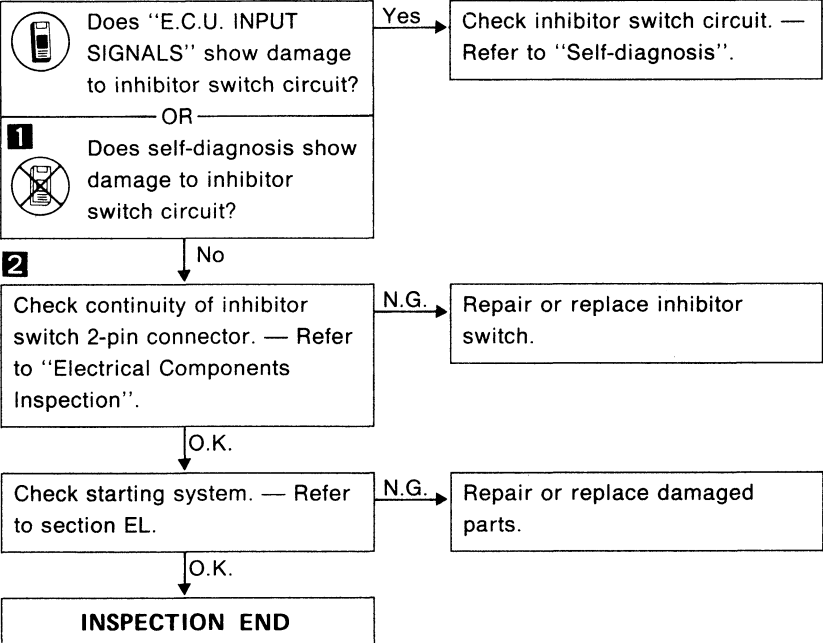

## Diagnostic Procedure 3





**SYMPTOM:** Vehicle moves when it is pushed forward or backward with selector lever in "P" range.

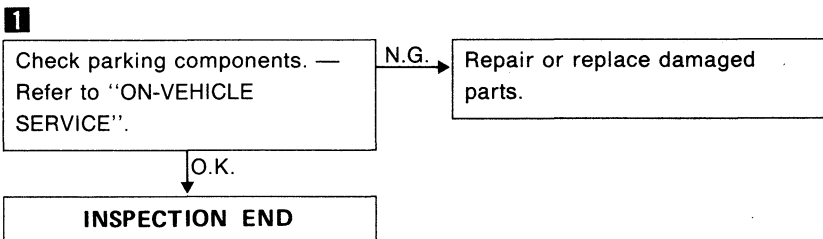

# TROUBLE DIAGNOSES

## Diagnostic Procedure 4






**SYMPTOM: Vehicle moves forward or backward when selecting "N" range.**

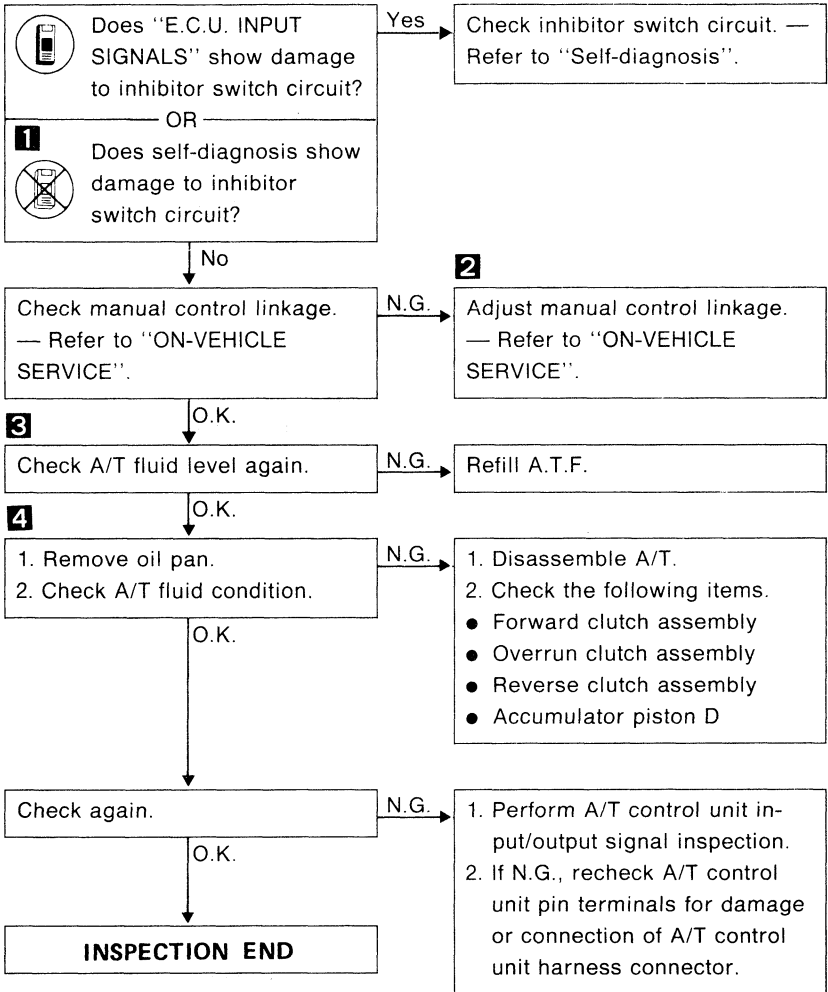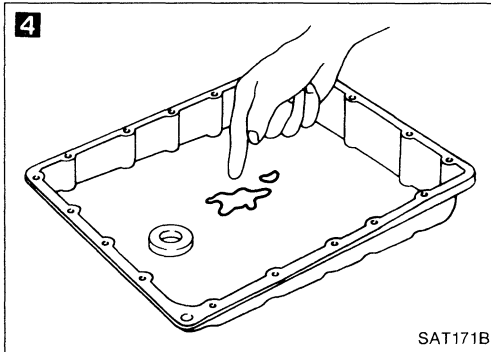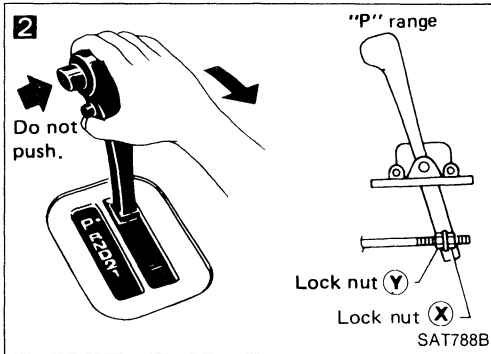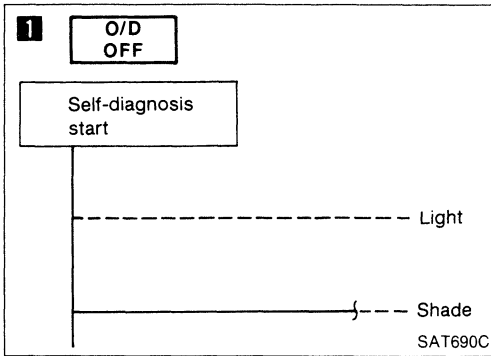

# TROUBLE DIAGNOSES

## Diagnostic Procedure 5






**SYMPTOM:** There is large shock when changing from "N" to "R" range.

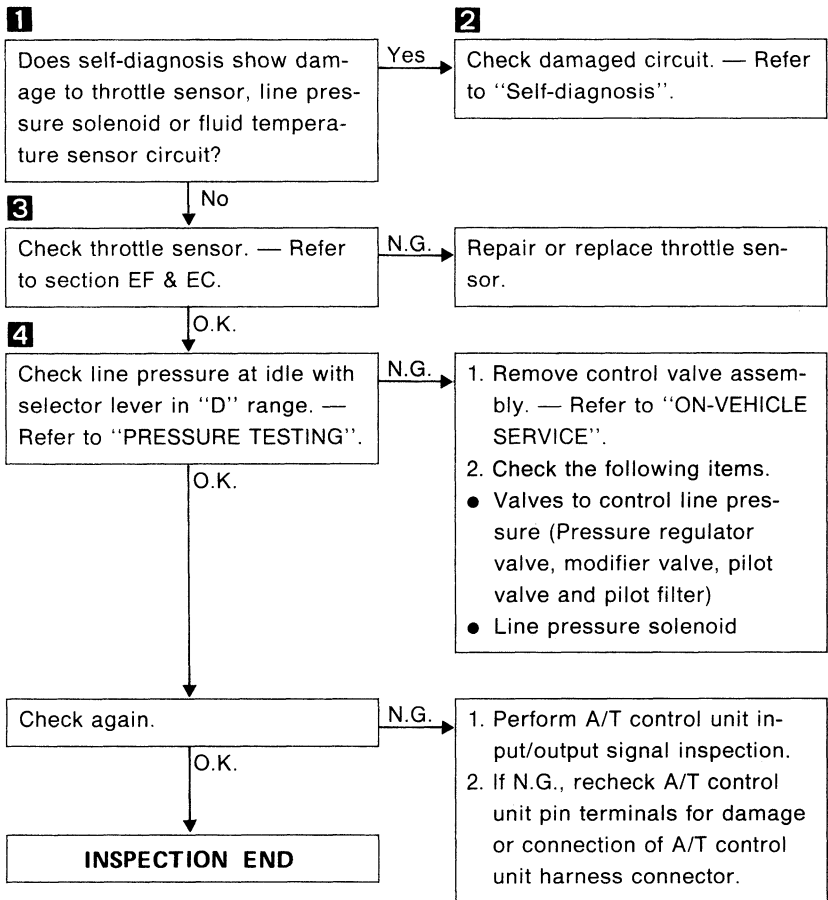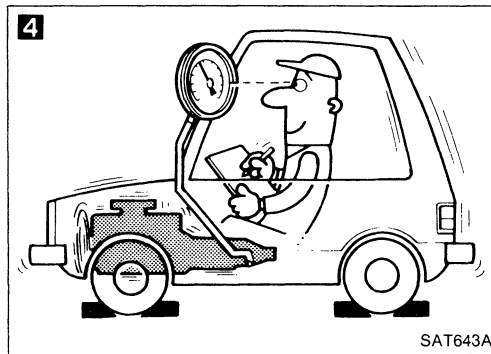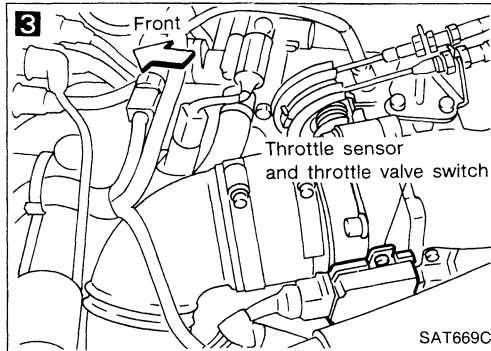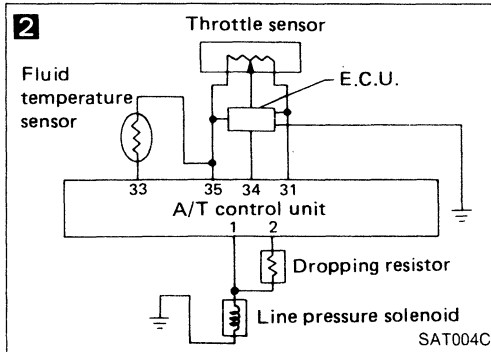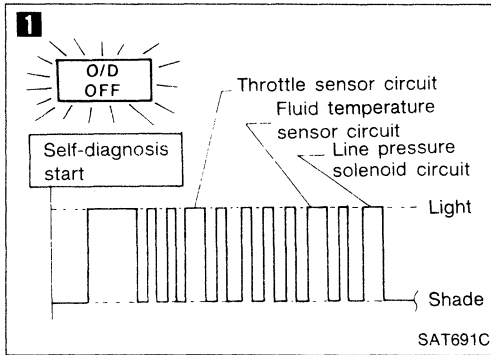

# TROUBLE DIAGNOSES


## Diagnostic Procedure 6

**SYMPTOM:** Vehicle does not creep backward when selecting "R" range.

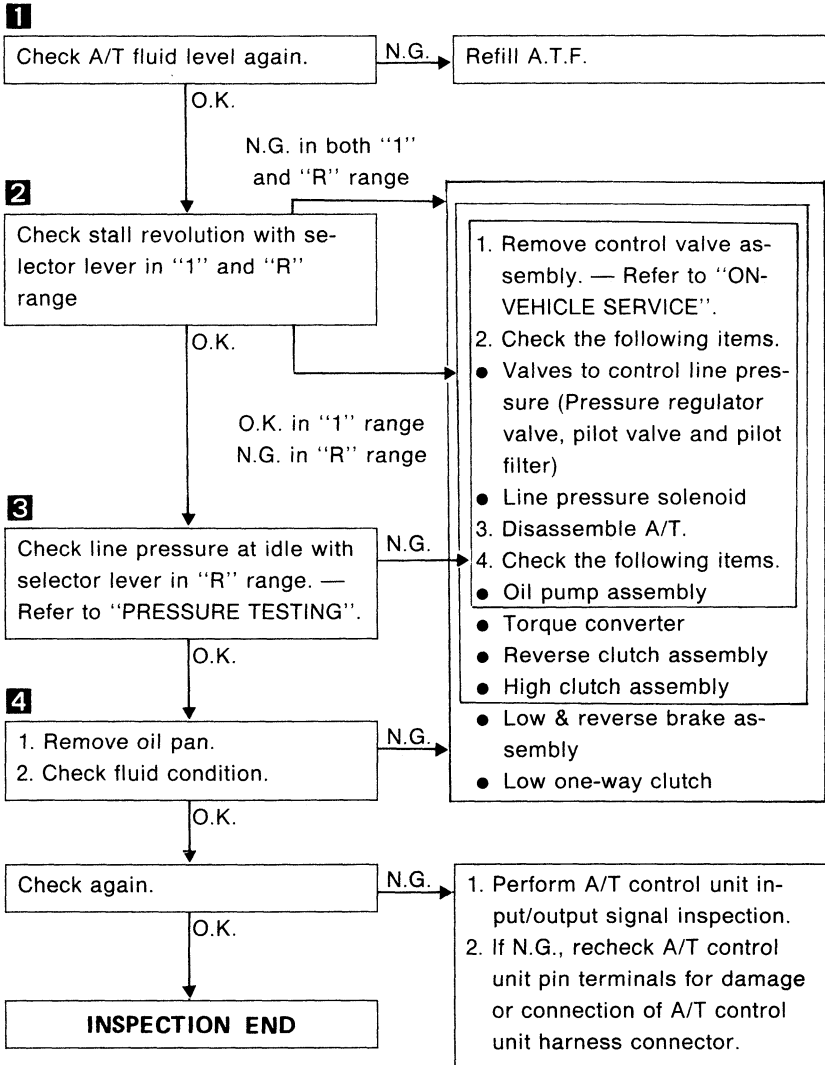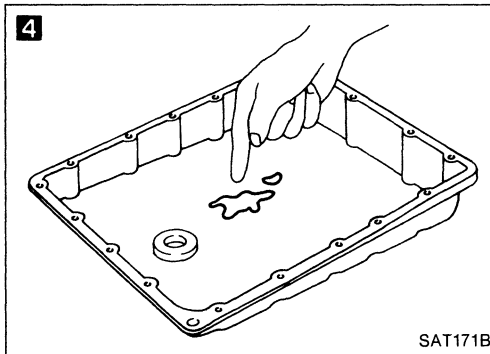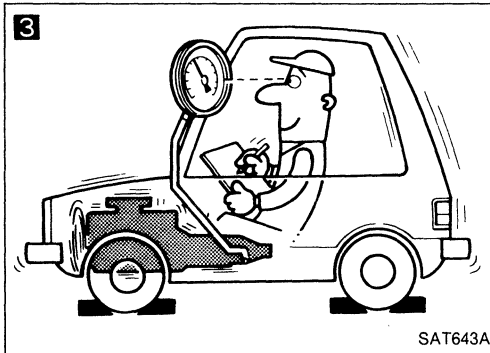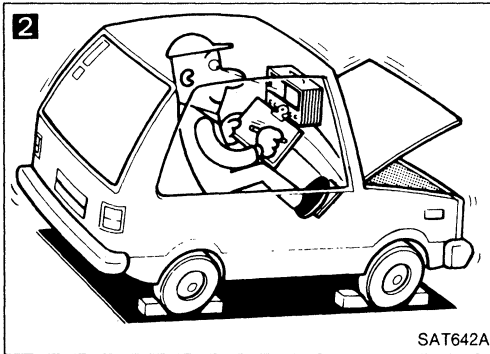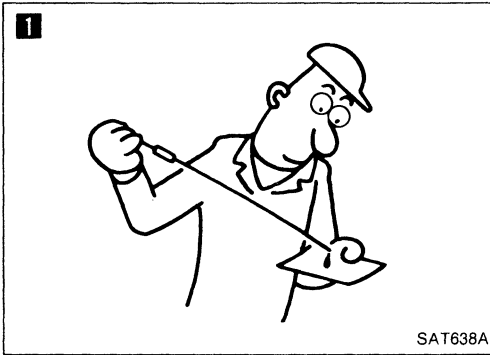

# TROUBLE DIAGNOSES

**1**

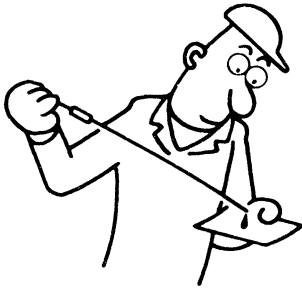

SAT638A

## Diagnostic Procedure 7

**SYMPTOM:** Vehicle does not creep forward when selecting "D", "2" or "1" range.

**1**

Check A/T fluid level again.

N.G.

Refill A.T.F.

O.K.

**2**

Check stall revolution with selector lever in "D" range. — Refer to "STALL TESTING".

N.G.

1. Remove control valve assembly. — Refer to "ON-VEHICLE SERVICE".
2. Check the following items.
  - Valves to control line pressure (Pressure regulator valve, modifier valve, pilot valve and pilot filter)
  - Line pressure solenoid
3. Disassemble A/T.
4. Check the following items.
  - Oil pump assembly
  - Forward clutch assembly
  - Forward one-way clutch
  - Low one-way clutch
  - Low & reverse brake assembly
  - Torque converter

O.K.

**3**

Check line pressure at idle with selector lever in "D" range. — Refer to "PRESSURE TESTING".

N.G.

O.K.

**4**

1. Remove oil pan.
2. Check A/T fluid condition.

N.G.

O.K.

Check again.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of A/T control unit harness connector.

O.K.


**INSPECTION END**

**2**




SAT642A

**3**

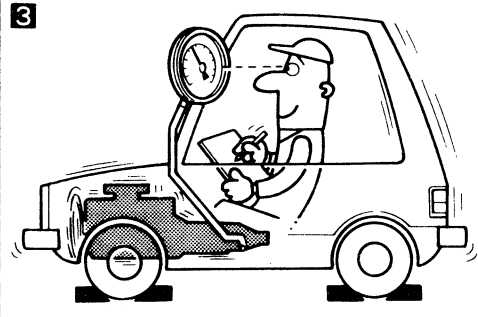

SAT643A

**4**





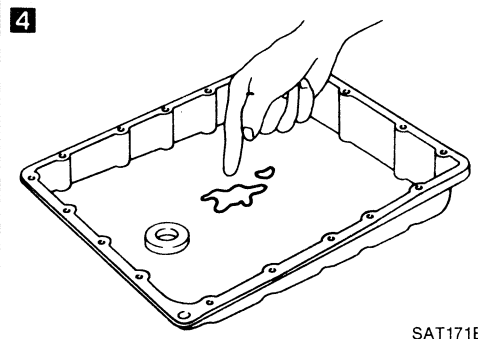


SAT171B






# TROUBLE DIAGNOSES

## Diagnostic Procedure 8

**SYMPTOM: Vehicle cannot be started from D<sub>1</sub> on Cruise test — Part 1.**

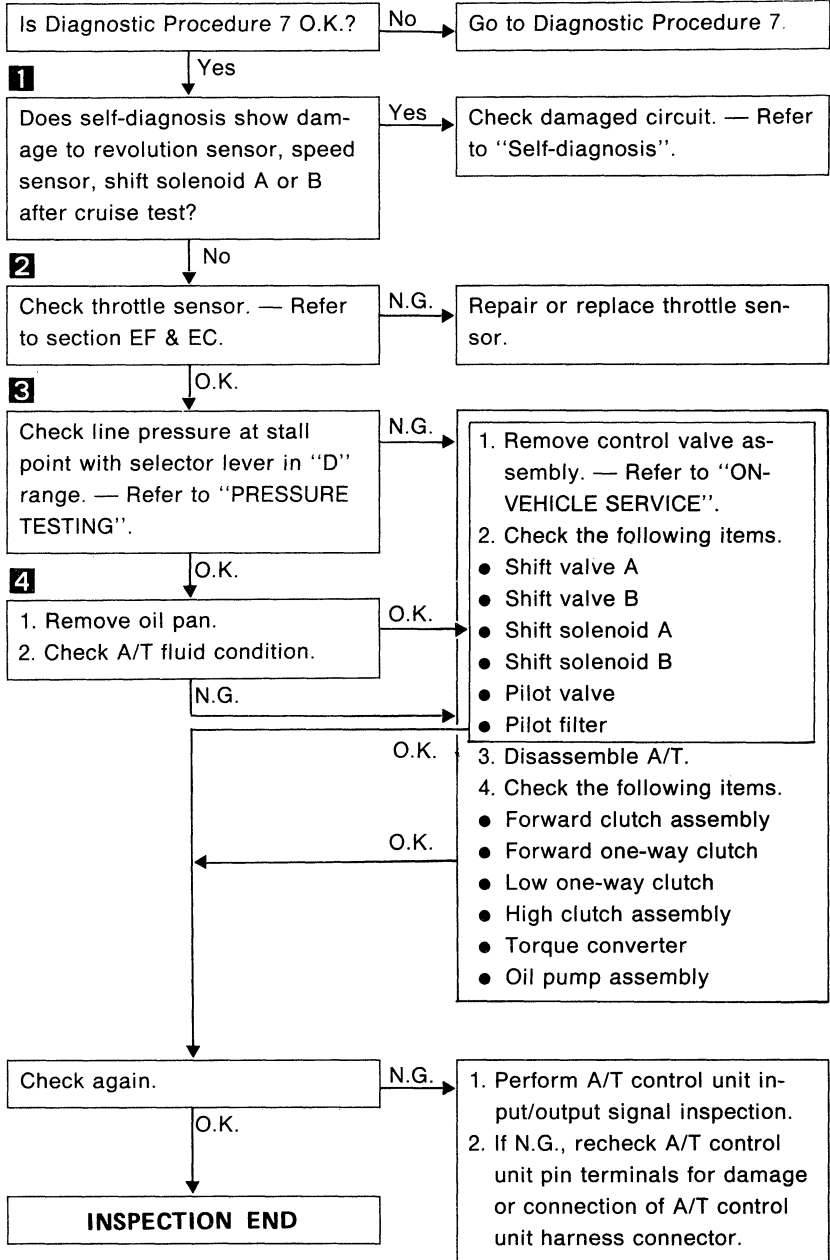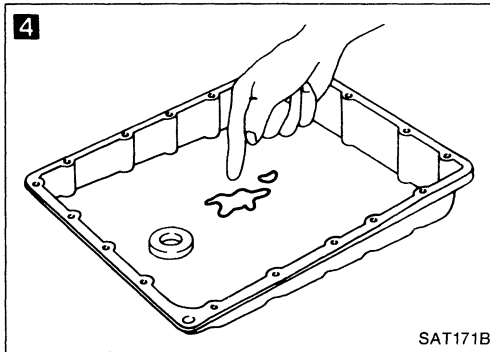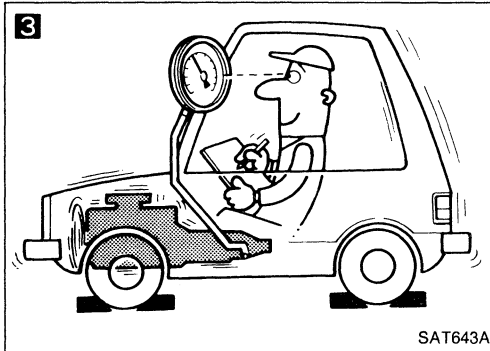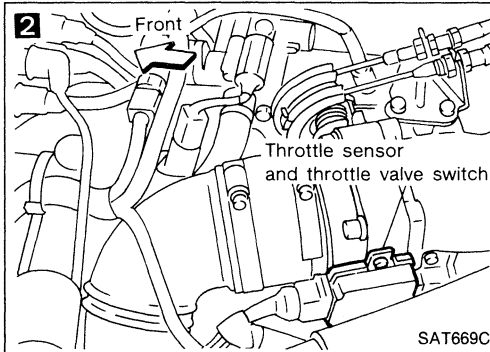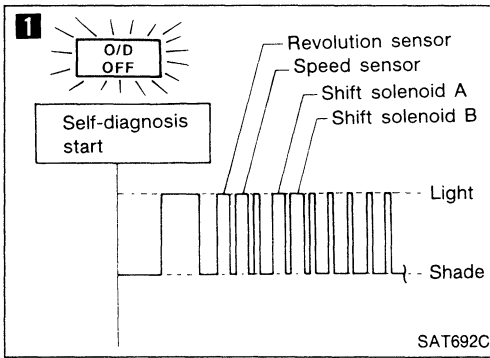


# TROUBLE DIAGNOSES

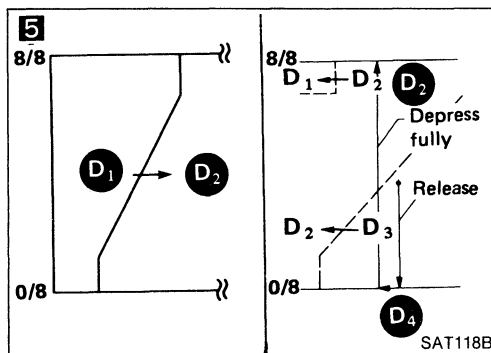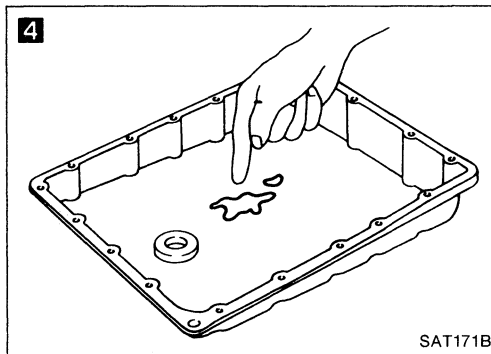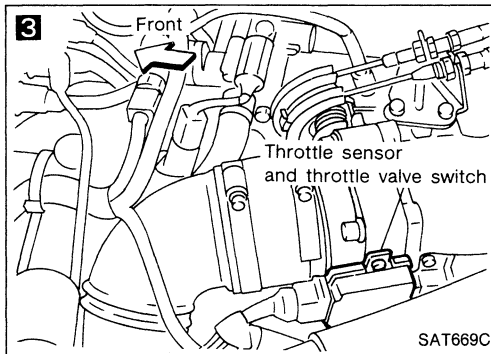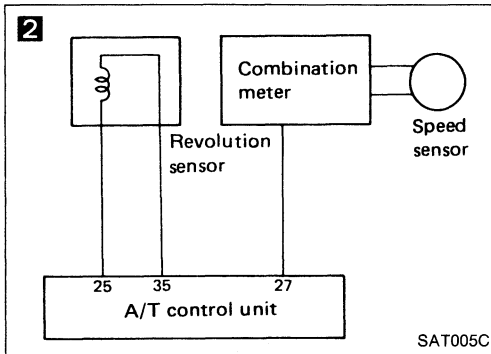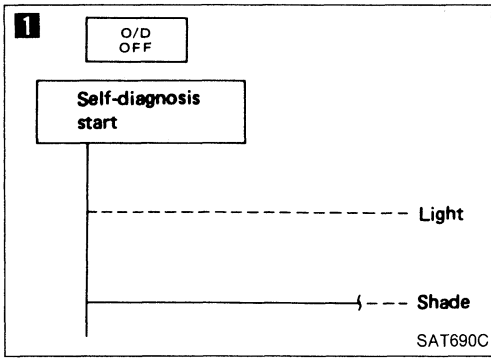

## Diagnostic Procedure 9






**SYMPTOM:** A/T does not shift from  $D_1$  to  $D_2$  at the specified speed.  
A/T does not shift from  $D_4$  to  $D_2$  when depressing accelerator pedal fully at the specified speed.

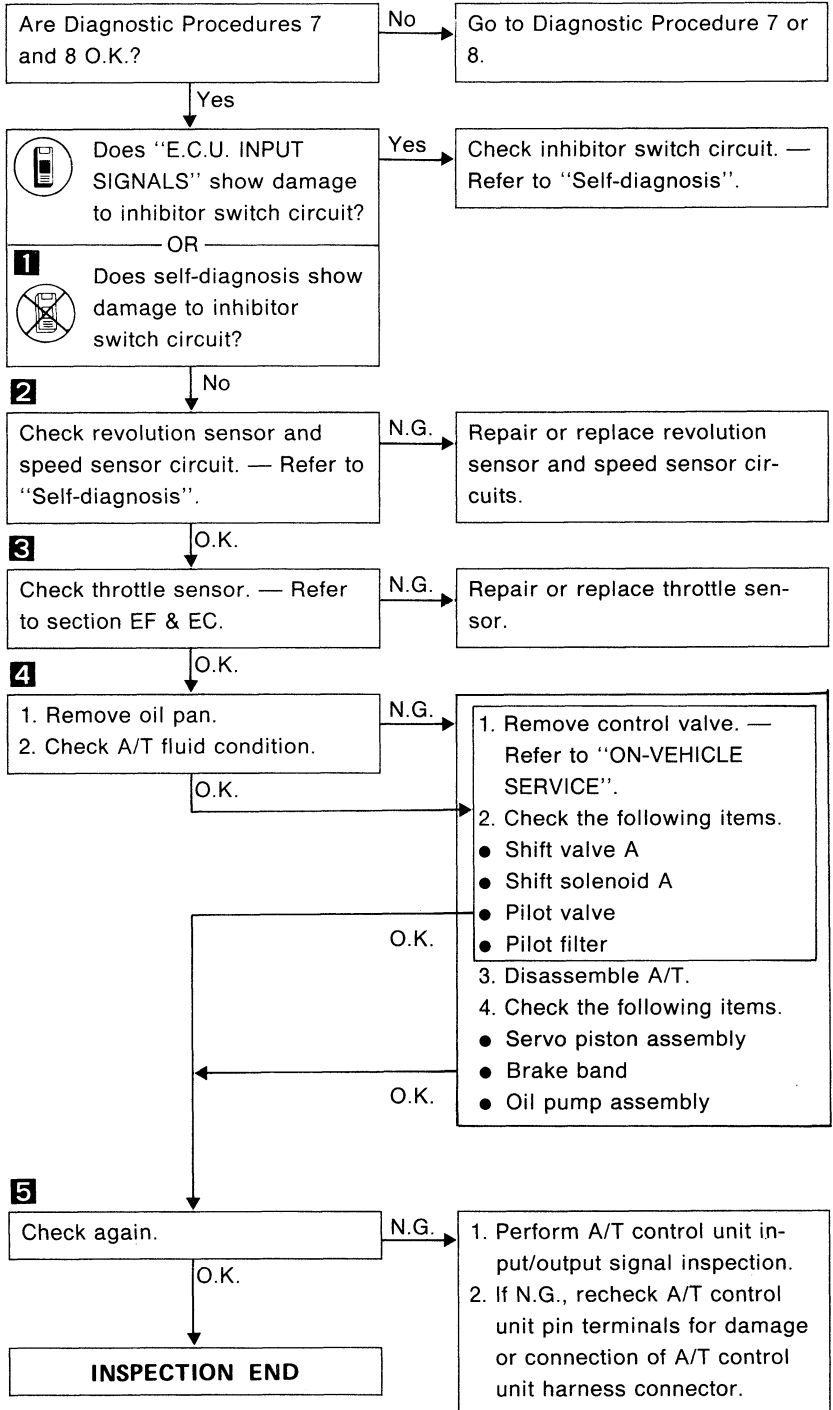

# TROUBLE DIAGNOSES

## Diagnostic Procedure 10

**SYMPTOM: A/T does not shift from D<sub>2</sub> to D<sub>3</sub> at the specified speed.**

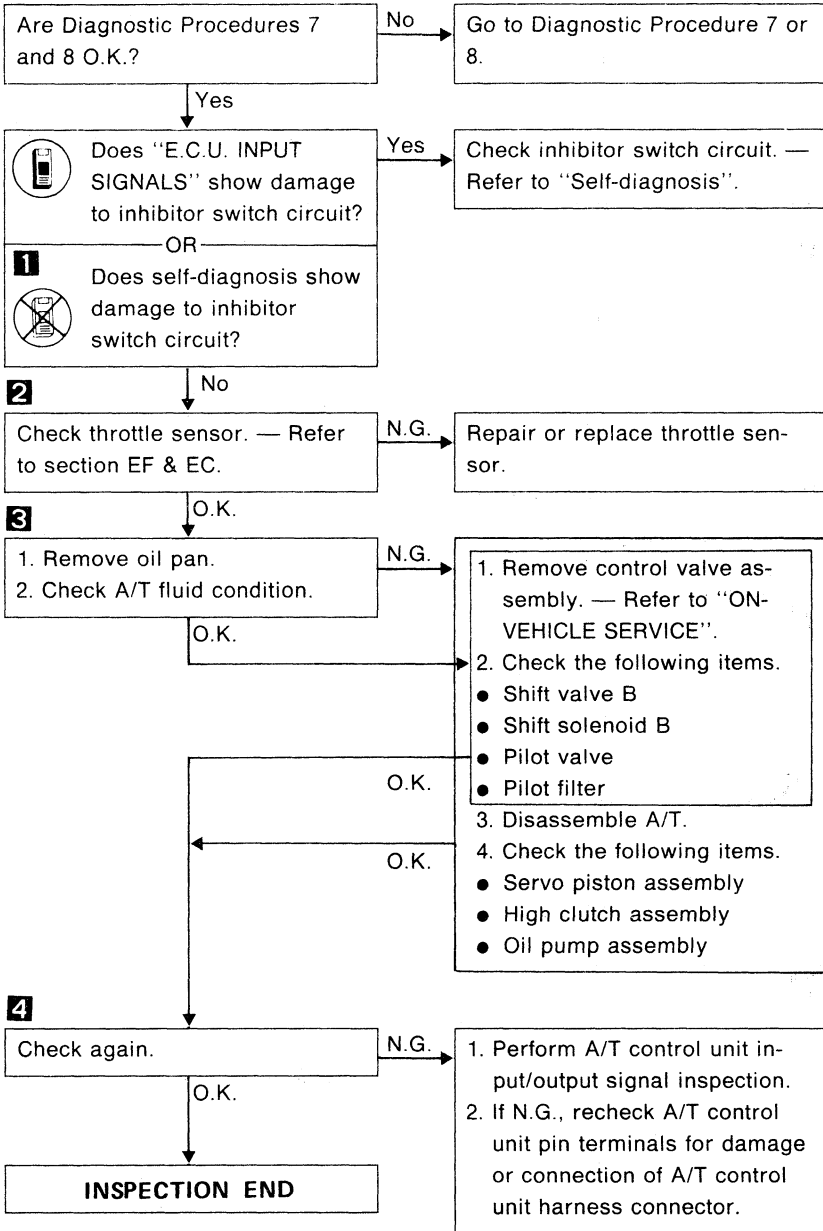
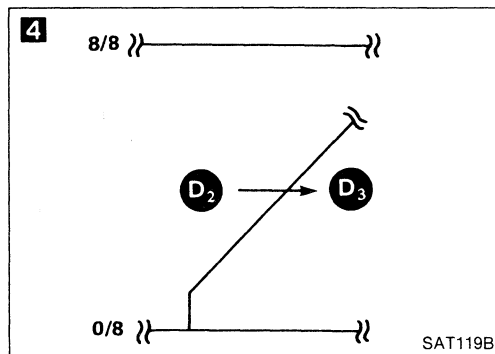
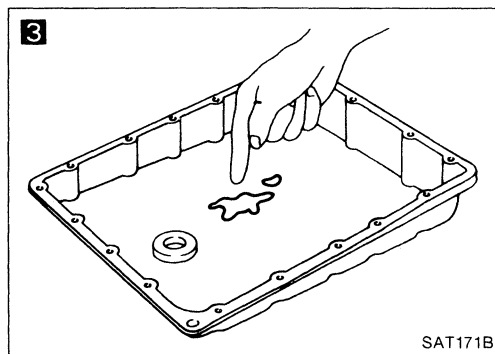
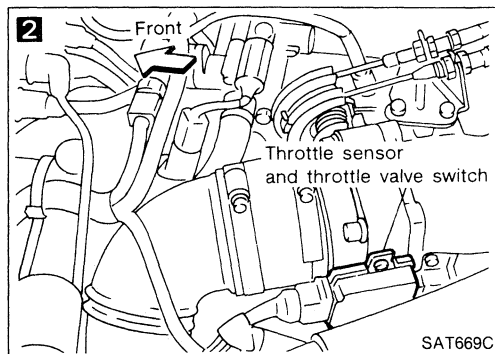
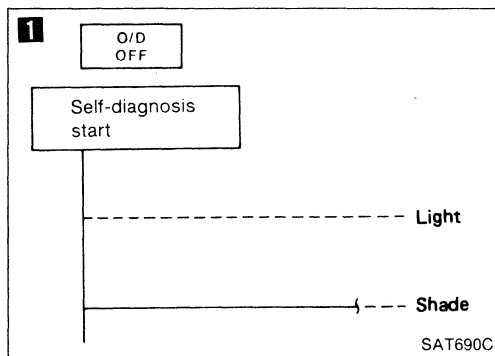




# TROUBLE DIAGNOSES

## Diagnostic Procedure 11





**SYMPTOM:** A/T does not shift from D<sub>3</sub> to D<sub>4</sub> at the specified speed.

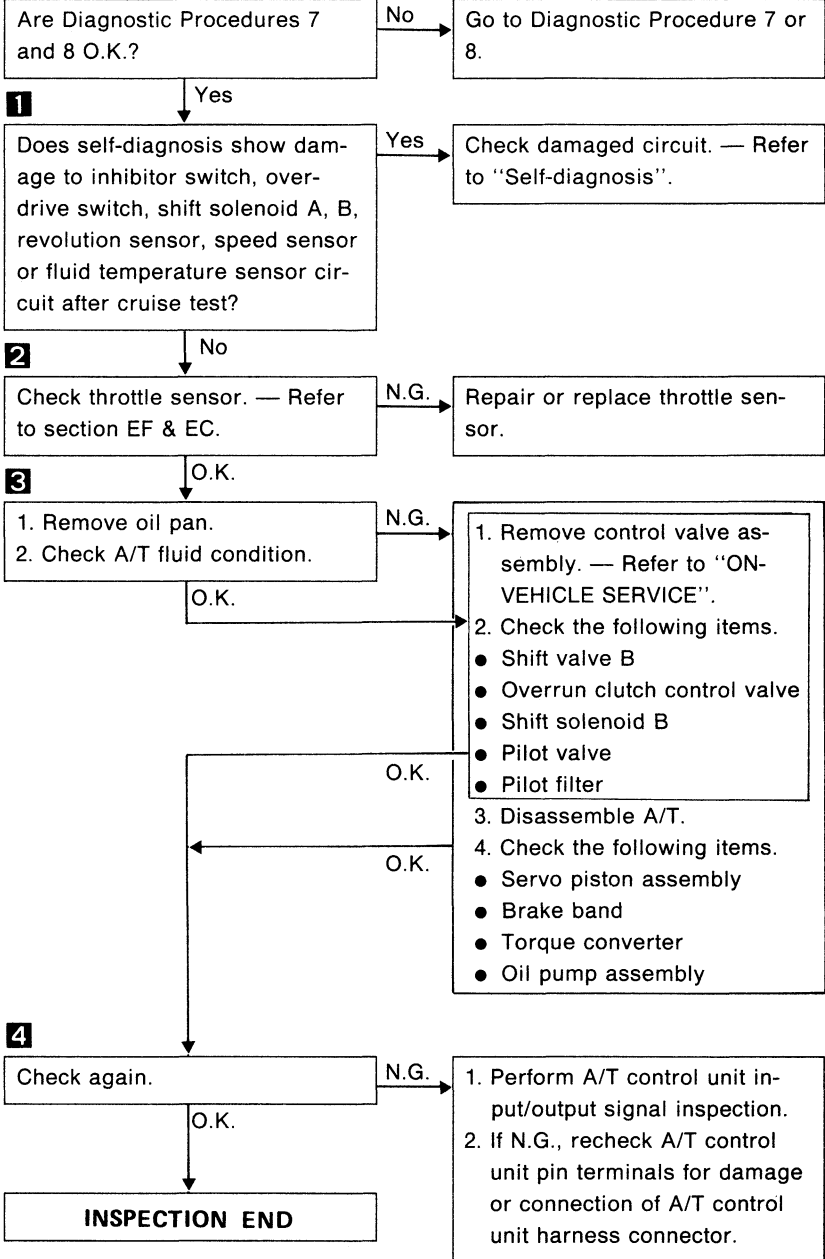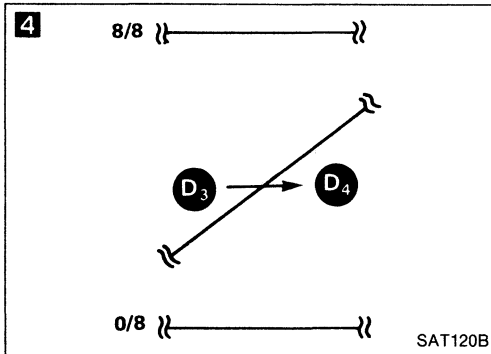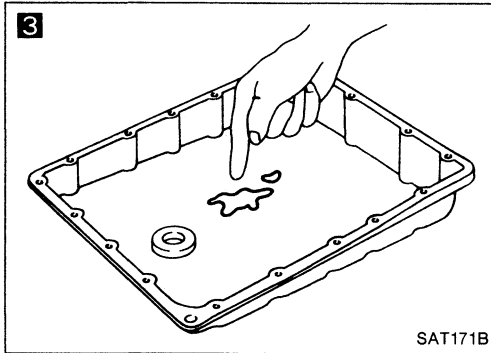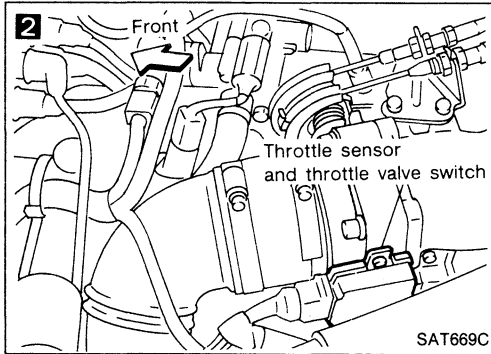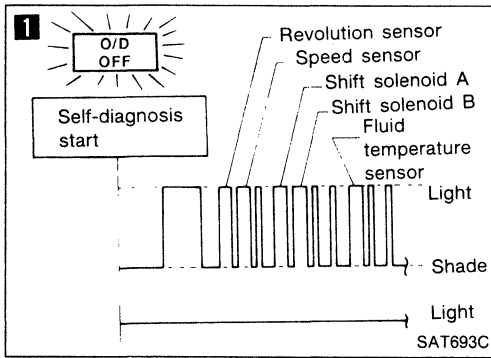



# TROUBLE DIAGNOSES

## Diagnostic Procedure 12

**SYMPTOM:** A/T does not perform lock-up at the specified speed.

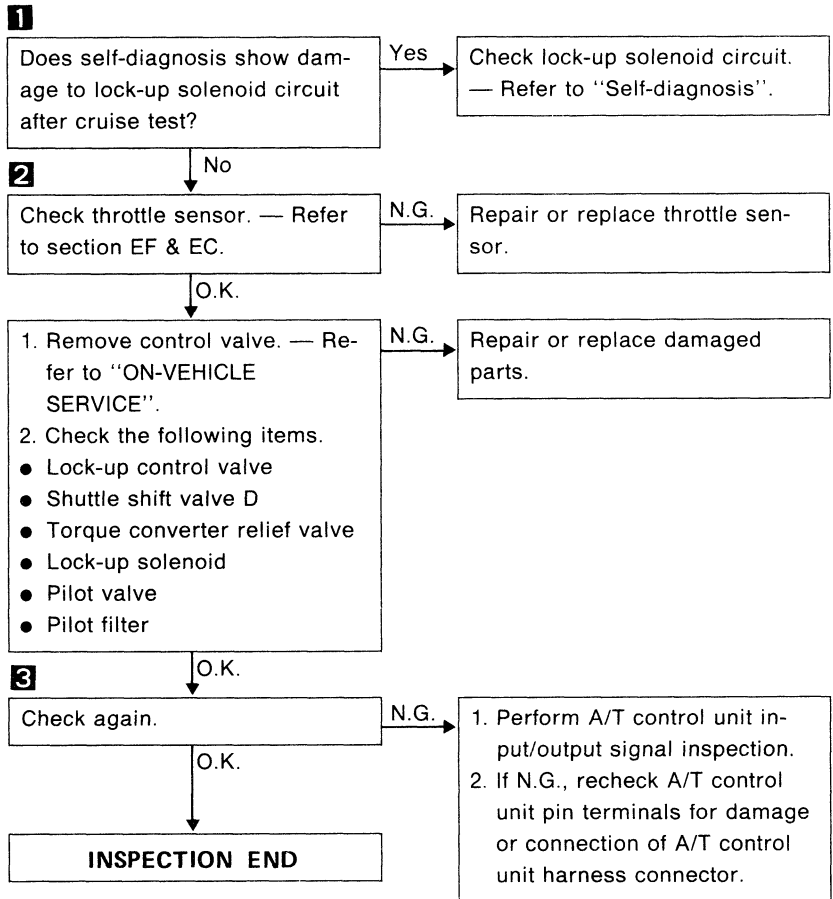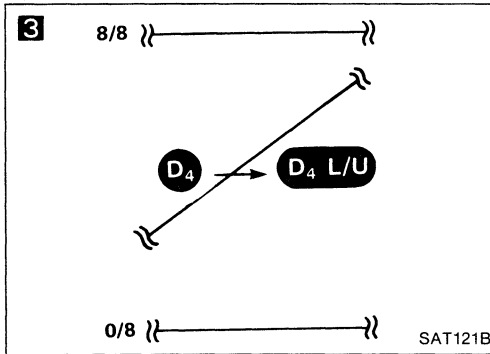
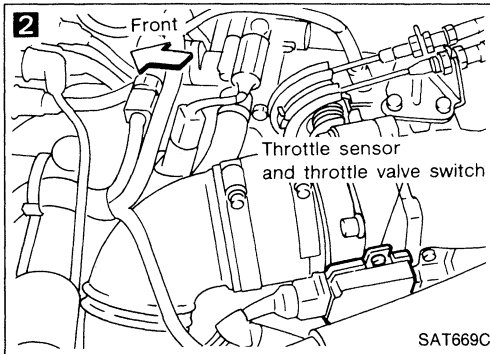
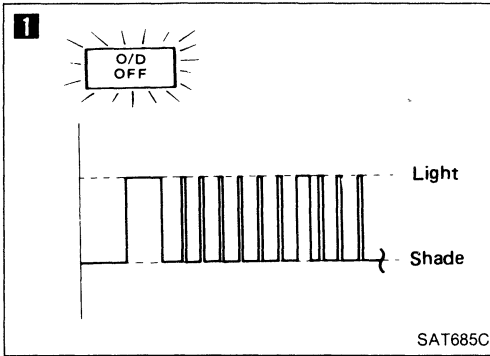


# TROUBLE DIAGNOSES

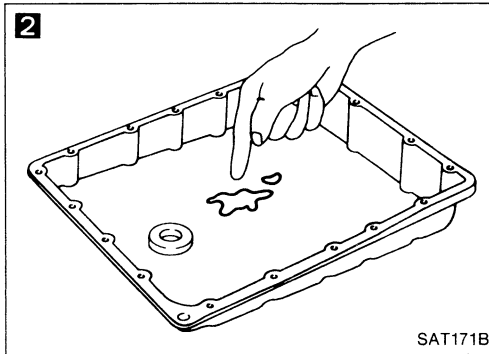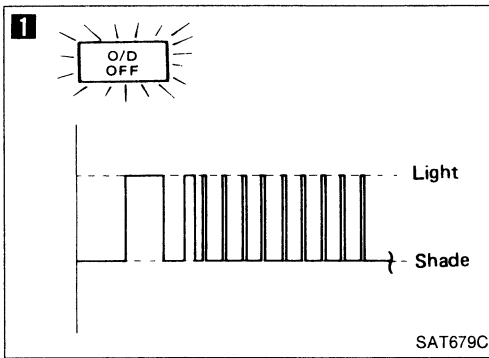


## Diagnostic Procedure 13

**SYMPTOM:** A/T does not hold lock-up condition for more than 30 seconds.

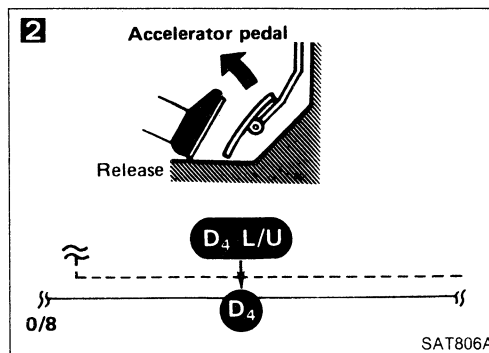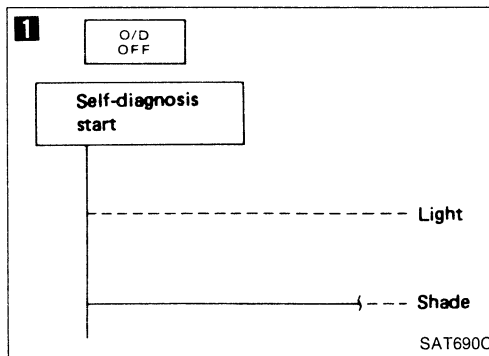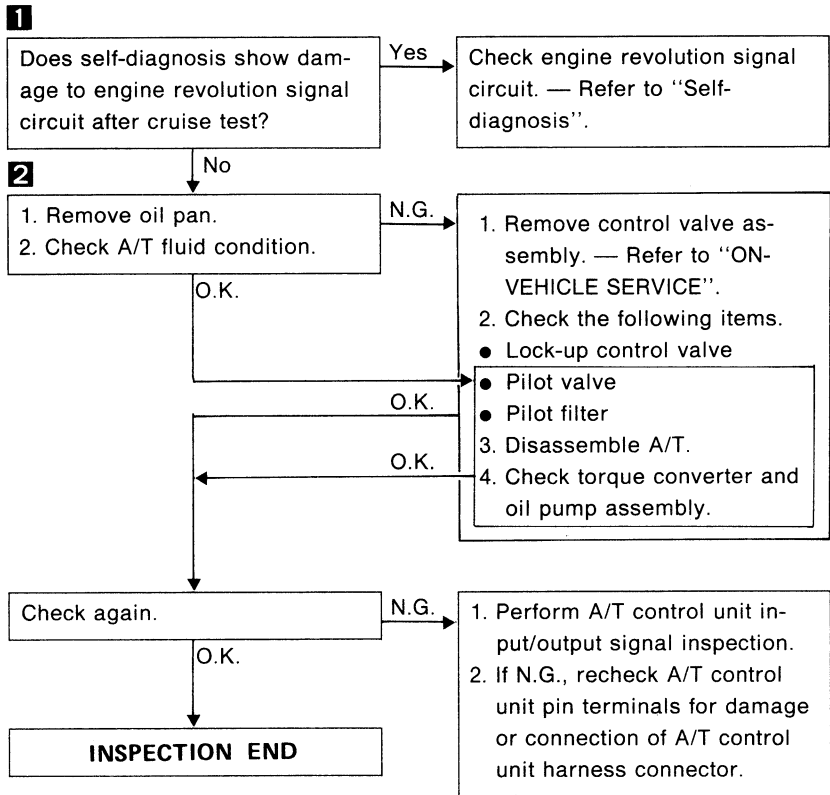






## Diagnostic Procedure 14

**SYMPTOM:** Lock-up is not released when accelerator pedal is released.

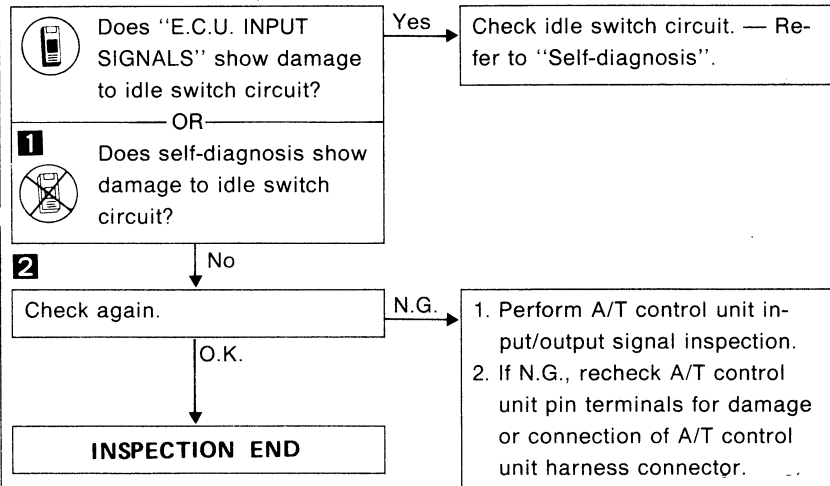


## Diagnostic Procedure 15

**SYMPTOM:** Engine speed does not return to idle smoothly when A/T is shifted from D<sub>4</sub> to D<sub>3</sub> with accelerator pedal released.  
 Vehicle does not decelerate by engine brake when changing overdrive switch to "OFF" position with accelerator pedal released.  
 Vehicle does not decelerate by engine brake when changing selector lever from "D" to "2" range with accelerator pedal released.

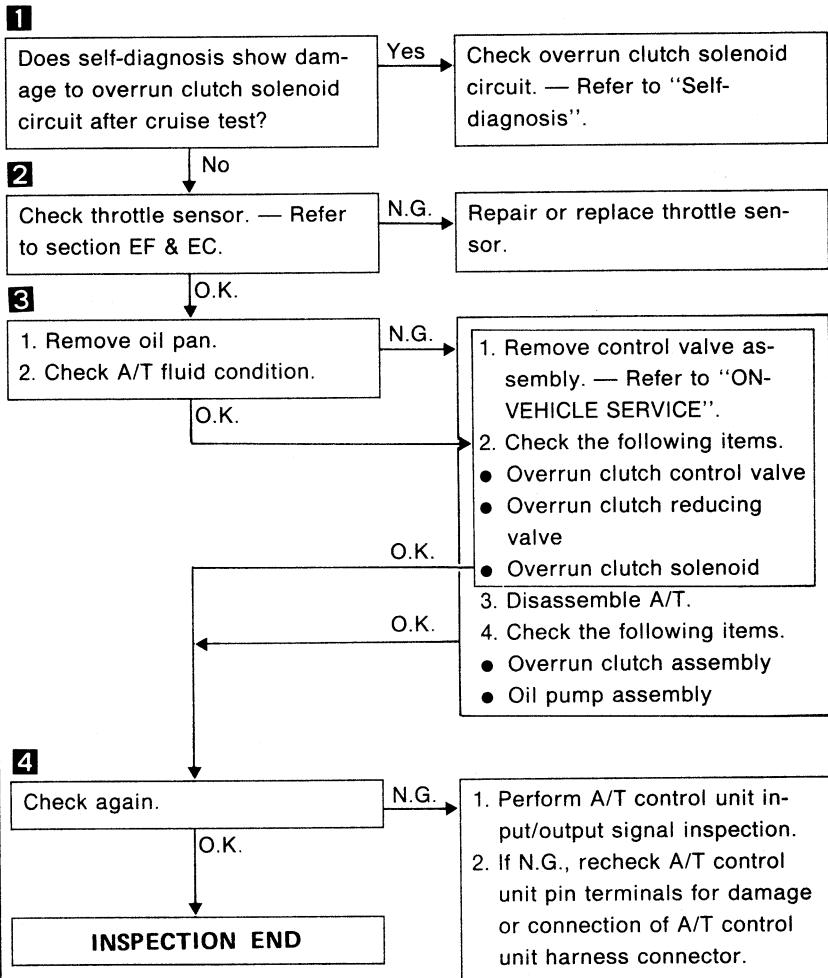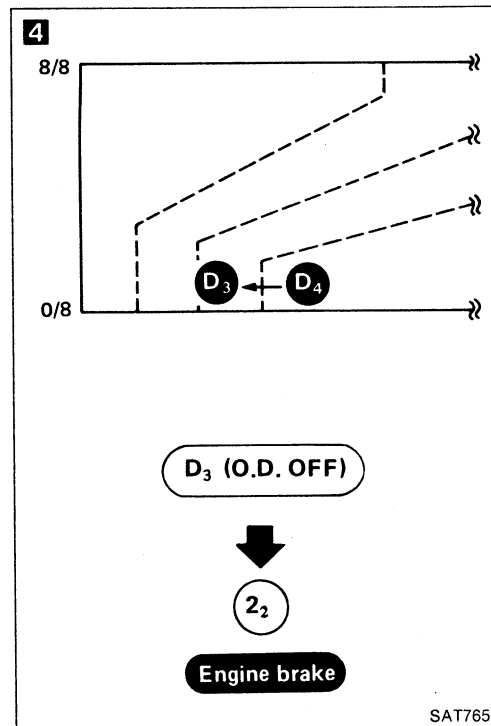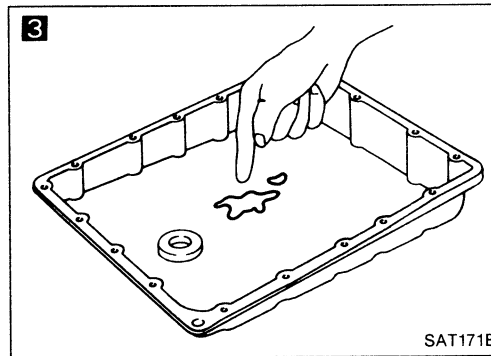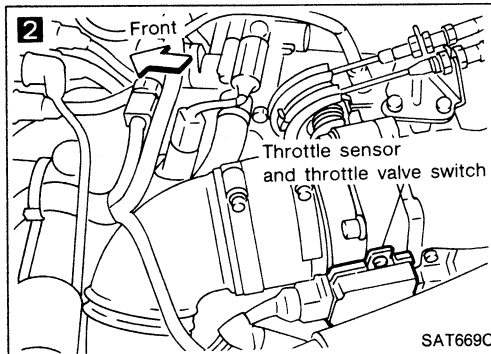
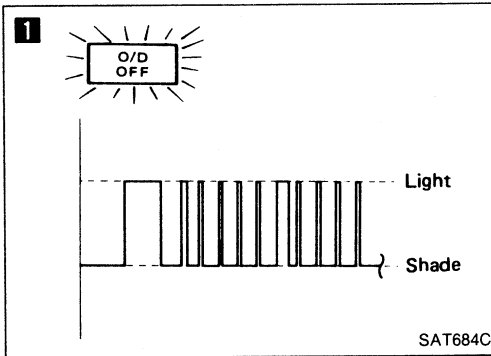


# TROUBLE DIAGNOSES

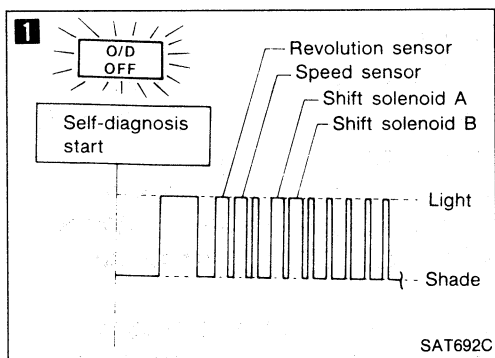


## Diagnostic Procedure 16

**SYMPTOM:** Vehicle does not start from D<sub>1</sub> on Cruise test — Part 2.

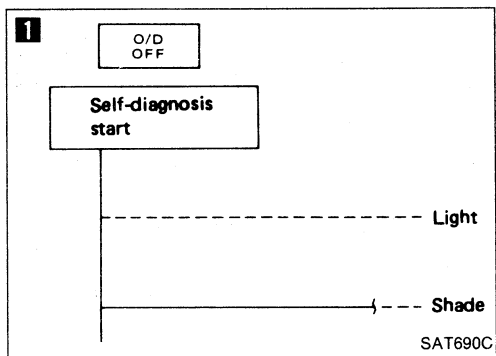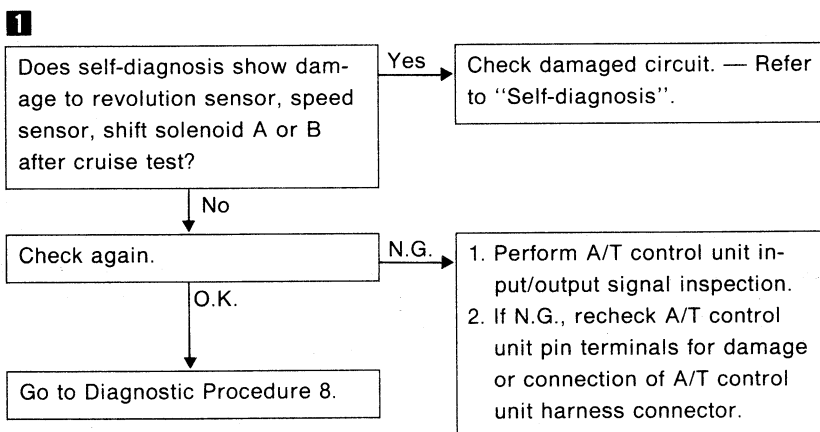


## Diagnostic Procedure 17

**SYMPTOM:** A/T does not shift from D<sub>4</sub> to D<sub>3</sub> when changing overdrive switch to "OFF" position.


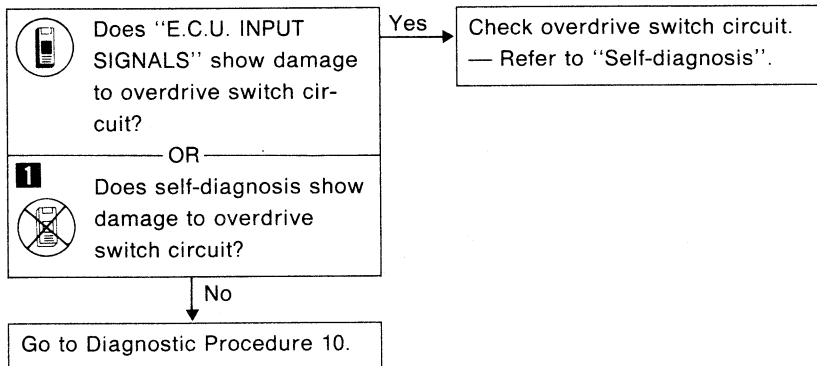


# TROUBLE DIAGNOSES

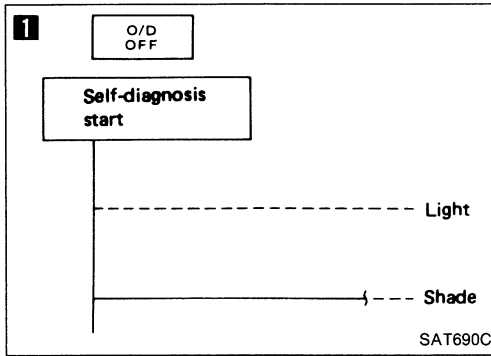



## Diagnostic Procedure 18

**SYMPTOM:** A/T does not shift from  $D_3$  to  $2_2$  when changing selector lever from "D" to "2" range.

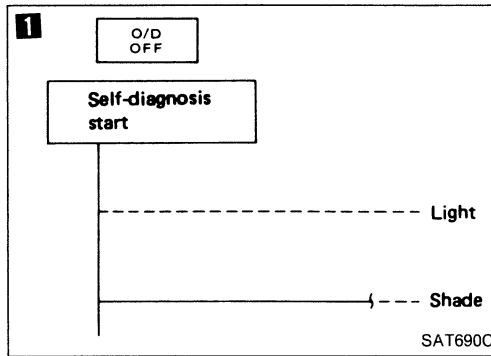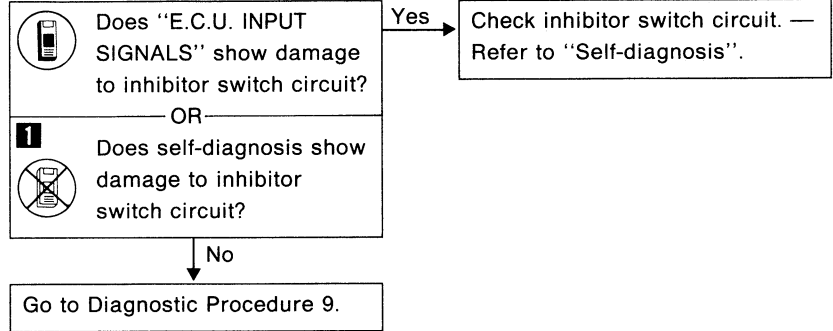


## Diagnostic Procedure 19

**SYMPTOM:** A/T does not shift from  $2_2$  to  $1_1$  when changing selector lever from "2" to "1" range.

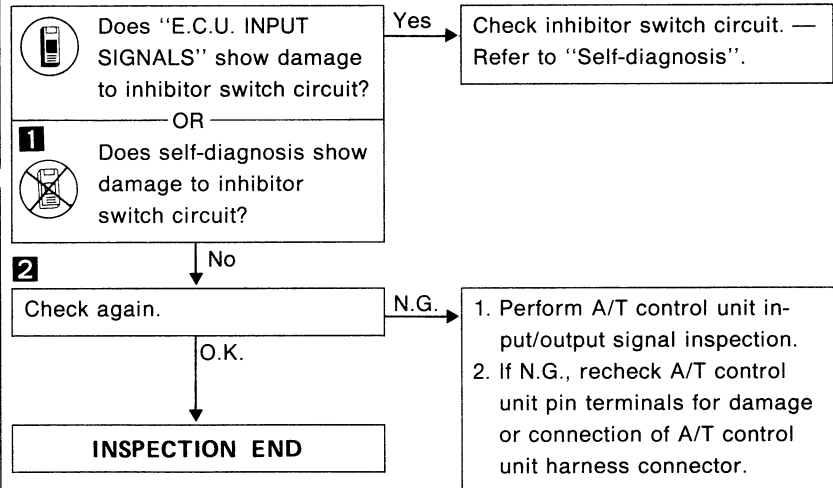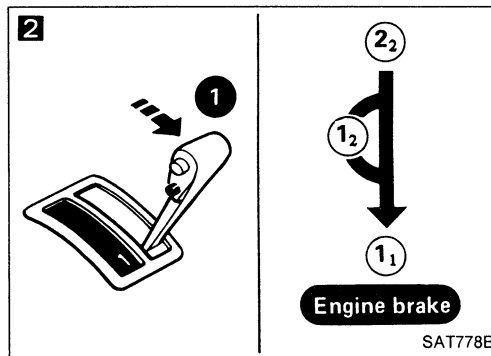


## Diagnostic Procedure 20

**SYMPTOM:** Vehicle does not decelerate by engine brake when shifting from  $2_2$  ( $1_2$ ) to  $1_1$ .

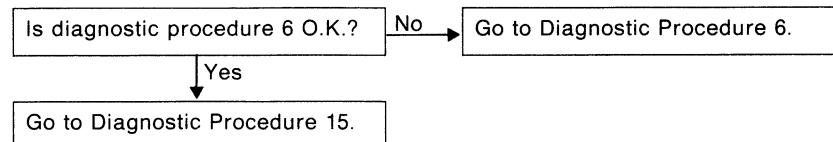

# TROUBLE DIAGNOSES

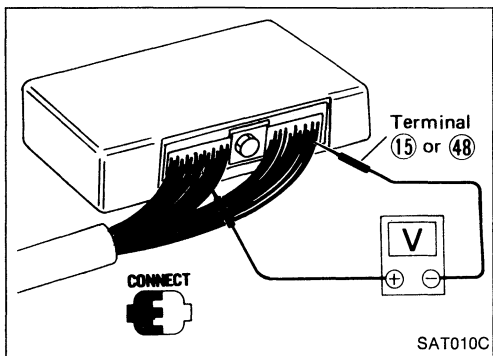

## Electrical Components Inspection

### INSPECTION OF A/T CONTROL UNIT

- Measure voltage between each terminal and terminal ⑮ or ④⑧ by following "A/T CONTROL UNIT INSPECTION TABLE".
- Pin connector terminal layout.

1	2	3	4	9	10	11	12	13	14	15	23	24	25	26	27	28	29	30	31	32	33	34	35
5	6	7	8	16	17	18	19	20	21	22	36	37	38	39	40	41	42	43	44	45	46	47	48






SAT011C

# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

**A/T CONTROL UNIT INSPECTION TABLE**  
(Data are reference values.)

Terminal No.	Item		Condition	Judgement standard
1	Line pressure solenoid	    	When accelerator pedal is released after warming up engine.	1.5 - 2.5V
			When accelerator pedal is depressed fully after warming up engine.	0.5V or less
2	Line pressure solenoid (with dropping resistor)		When accelerator pedal is released after warming up engine.	5 - 14V
			When accelerator pedal is depressed fully after warming up engine.	0.5V or less
3	A/T check lamp		When A/T check lamp is on.	1V or less
			When A/T check lamp is not on.	Battery voltage
4	Power source		When ignition switch is turned to "ON".	Battery voltage
			When ignition switch is turned to "OFF".	1V or less
5	Lock-up solenoid	When A/T is performing lock-up.	8 - 15V	
		When A/T is not performing lock-up.	1V or less	
6	Shift solenoid A	When shift solenoid A is operating. (When driving in "D <sub>1</sub> " or "D <sub>4</sub> ".)	Battery voltage	
		When shift solenoid A is not operating. (When driving in "D <sub>2</sub> " or "D <sub>3</sub> ".)	1V or less	
7	Shift solenoid B	When shift solenoid B is operating. (When driving in "D <sub>1</sub> " or "D <sub>2</sub> ".)	Battery voltage	
		When shift solenoid B is not operating. (When driving in "D <sub>3</sub> " or "D <sub>4</sub> ".)	1V or less	
8	Overrun clutch solenoid	When timing solenoid is operating. (When driving in "D <sub>1</sub> " or "D <sub>4</sub> ".)	Battery voltage	
		When timing solenoid is not operating. (When driving in "D <sub>2</sub> " or "D <sub>3</sub> ".)	1V or less	



## TROUBLE DIAGNOSES

### Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition	Judgement standard
9	Power source	Same as No. 4	
10*	—	—	—
11	—	—	—
12	—	—	—
13	—	—	—
14	Idle switch (in throttle valve switch)	When accelerator pedal is released after warming up engine.	8 - 15V
		When accelerator pedal is depressed after warming up engine.	1V or less
15	Ground	—	—
16	Inhibitor "1" range switch	When selector lever is set to "1" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
17	Inhibitor "2" range switch	When selector lever is set to "2" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
18	Inhibitor "D" range switch	When selector lever is set to "D" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
19	Inhibitor "N" or "P" range switch	When selector lever is set to "N" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
20	Inhibitor "R" range switch	When selector lever is set to "R" range.	Battery voltage
		When selector lever is set to other ranges.	1V or less
21	Full throttle switch	When accelerator pedal is depressed more than half-way after warming up engine.	8 - 15V
		When accelerator pedal is released after warming up engine.	1V or less
22	—	—	—











\*: This terminal is connected to terminal No. 36 of E.C.C.S. control unit.

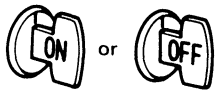When code No. 54 appears during engine self-diagnosis, check line between above terminals for proper continuity.




## TROUBLE DIAGNOSES


### Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition	Judgement standard	
23	Power source (Back-up)		When ignition switch is turned to "OFF".	Battery voltage
			When ignition switch is turned to "ON".	Battery voltage
24	Engine revolution signal		When engine is running at idle speed.	0.9V
			When engine is running at 3,000 rpm.	Approximately 3.7V
25	Revolution sensor (Measure in AC range)		When vehicle is cruising at 30 km/h (19 MPH).	1V or more Voltage rises gradually in response to vehicle speed.
			When vehicle is parked.	0V
26	—	—	—	
27	Speed sensor		When vehicle is moving at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.	Vary from 0 to 5V
28	—		—	—
29	—	—	—	
30	—	—	—	
31	Throttle sensor (Power source)		—	4.5 - 5.5V
32	—		—	—
33	Fluid temperature sensor		When A.T.F. temperature is 20°C (68°F).	Approximately 1.5V
			When A.T.F. temperature is 80°C (176°F).	Approximately 0.5V
34	Throttle sensor		When accelerator pedal is depressed slowly after warming up engine.	Fully-closed throttle: Approximately 0.5V
			Voltage rises gradually in response to throttle opening angle.	Fully-open throttle: Approximately 4V
35	Throttle sensor (Ground)	—	—	
36	—	—	—	
37	A.S.C.D. cruise signal		When A.S.C.D. cruise is being performed. ("CRUISE" light comes on.)	Battery voltage
			When A.S.C.D. cruise is not being performed. ("CRUISE" light does not come on.)	1V or less

# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition	Judgement standard
38	—	—	—
39	Overdrive switch	 When overdrive switch is set in "ON" position.	Battery voltage
		 When overdrive switch is set in "OFF" position.	1V or less
40	A.S.C.D. O.D. cut signal	 When "ACCEL" set switch on A.S.C.D. cruise is released.	5 - 8V
		When "ACCEL" set switch on A.S.C.D. cruise is applied.	1V or less
41	Kickdown switch	When accelerator pedal is released after warming up engine.	3 - 8V
		When accelerator pedal is depressed fully after warming up engine.	1V or less
42	—	—	—
43	—	—	—
44	—	—	—
45	—	—	—
46	—	—	—
47	—	—	—
48	Ground	—	—

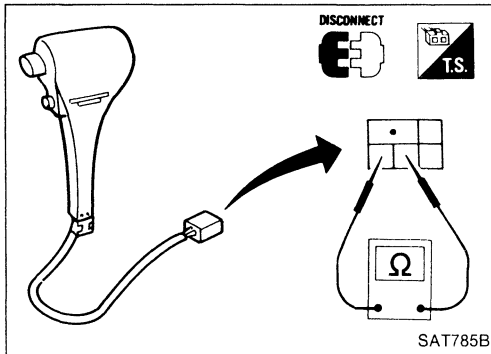

### OVERDRIVE SWITCH

- Check continuity between two terminals.

O.D. switch position	Continuity
ON	No
OFF	Yes




# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)


### INHIBITOR SWITCH

1. Check continuity between terminals ① and ② and between terminals ③ and ④, ⑤, ⑥, ⑦, ⑧, ⑨ while moving selector lever through each range.


Terminal No. / Lever position	①	②	③	④	⑤	⑥	⑦	⑧	⑨
P	○—○		○—○						
R			○—○	○—○					
N	○—○		○—○		○—○				
D			○—○				○—○		
2			○—○					○—○	
1			○—○						○—○

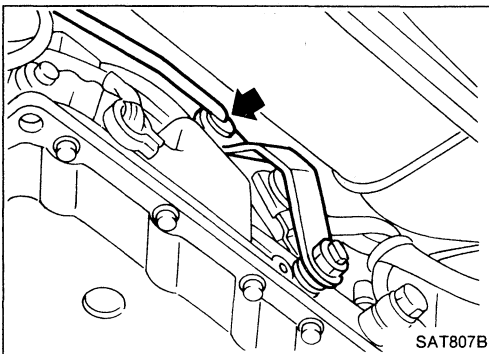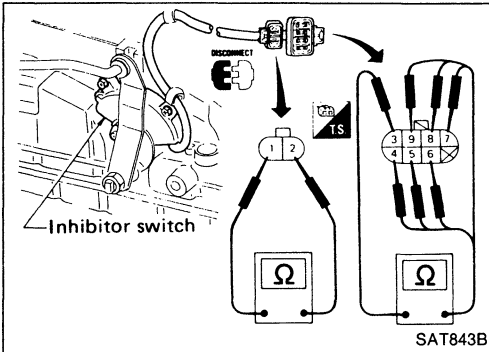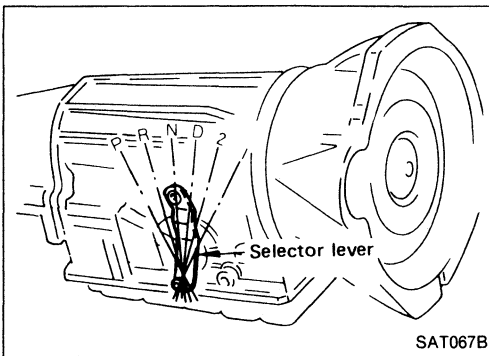

2. If N.G., check again with manual control linkage disconnected from manual shaft of A/T assembly. — Refer to step 1.
3. If O.K. on step 2, adjust manual control linkage. — Refer to "ON-VEHICLE SERVICE".

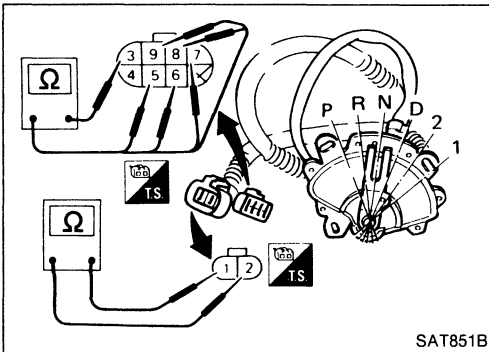

4. If N.G. on step 2, remove inhibitor switch from A/T and check continuity of inhibitor switch terminal. — Refer to step 1.
5. If O.K. on step 4, adjust inhibitor switch. — Refer to "ON-VEHICLE SERVICE".
6. If N.G. on step 4, replace inhibitor switch.

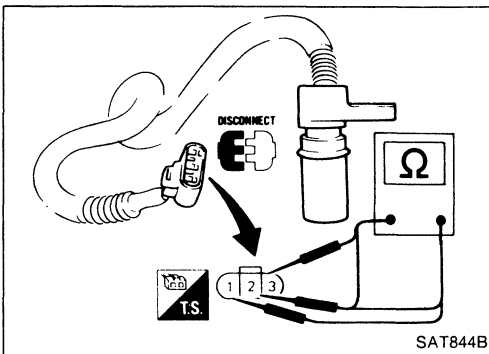

### REVOLUTION SENSOR

- For removal and installation, refer to "ON-VEHICLE SERVICE".
- Check resistance between terminals ①, ② and ③.


Terminal No.		Resistance
①	②	500 - 650Ω
②	③	No continuity
①	③	No continuity

# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

### FLUID TEMPERATURE SENSOR

- For removal and installation, refer to "ON-VEHICLE SERVICE".
- Check resistance between two terminals while changing temperature as shown at left.

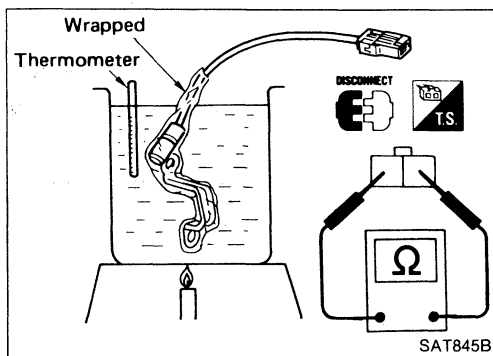


Temperature °C (°F)	Resistance
20 (68)	Approximately 2.5 kΩ
80 (176)	Approximately 0.3 kΩ

### LOCK-UP SOLENOID

- For removal and installation, refer to "ON-VEHICLE SERVICE".
- Check resistance between two terminals.


**Resistance:**

**Lock-up solenoid 10 - 20Ω**

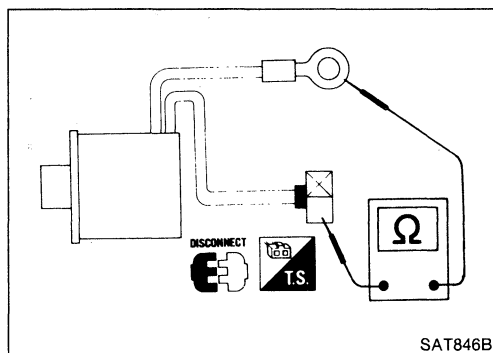

### 3-UNIT SOLENOID ASSEMBLY (Shift solenoids A, B and overrun clutch solenoid) AND LINE PRESSURE SOLENOID


- For removal and installation, refer to "ON-VEHICLE SERVICE".
- Check resistance between terminals of each solenoid.

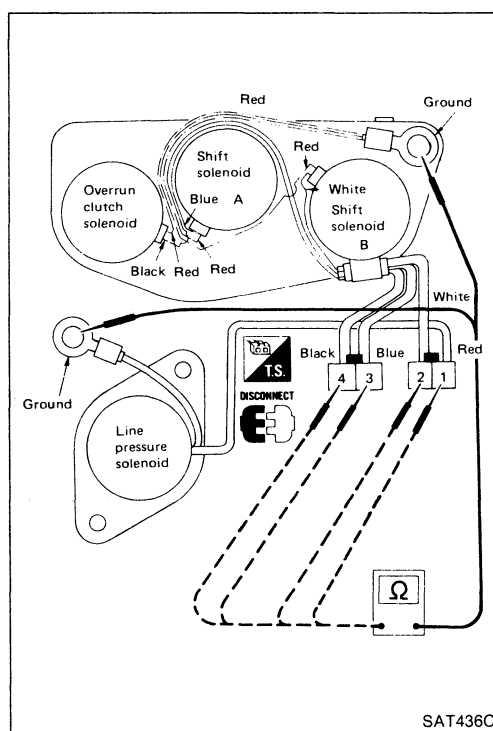


Solenoid	Terminal No.	Resistance
Shift solenoid A	③	20 - 40Ω
Shift solenoid B	②	
Overrun clutch solenoid	④	2.5 - 5Ω
Line pressure solenoid	①	

### DROPPING RESISTOR

- Check resistance between two terminals.
- Resistance: 11.2 - 12.8Ω**

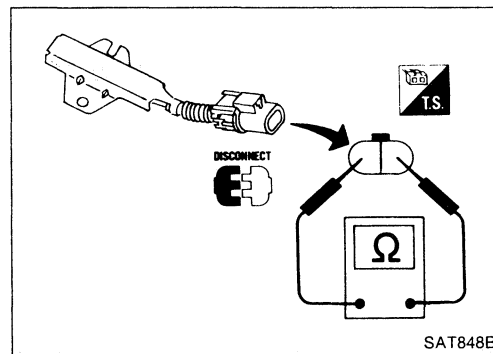

# TROUBLE DIAGNOSES

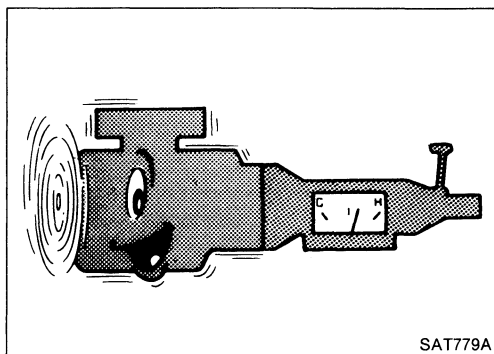


## Final Check

### STALL TESTING

#### Stall test procedure


1. Check A/T and engine fluid levels. If necessary, add.
2. Warm up engine until engine oil and A.T.F. reach operating temperature after vehicle has been driven approx. 10 minutes.

**A.T.F. operating temperature:  
50 - 80°C (122 - 176°F)**

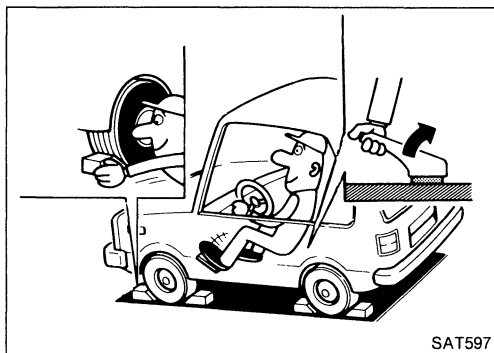


3. Set parking brake and block wheels.
4. Install a tachometer where it can be seen by driver during test.

- **It is good practice to put a mark on point of specified engine rpm on indicator.**

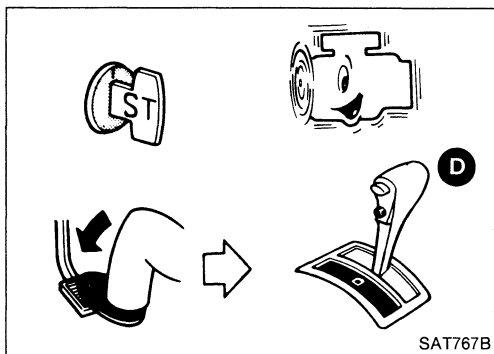


5. Start engine, apply foot brake, and place selector lever in "D" range.

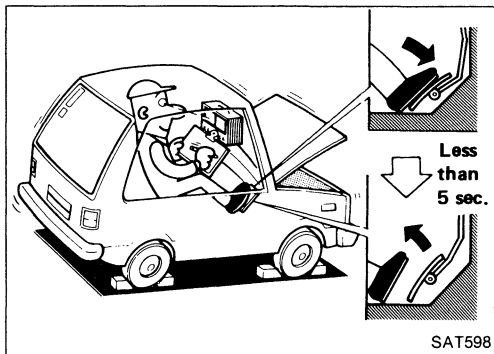

6. Accelerate to wide-open throttle gradually while applying foot brake.
7. Quickly note the engine stall revolution and immediately release throttle.

- **During test, never hold throttle wide-open for more than 5 seconds.**

**Stall revolution:  
2,200 - 2,400 rpm**

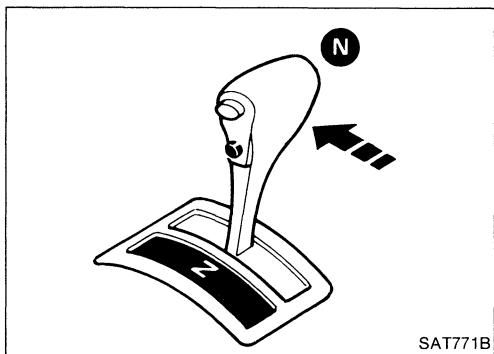

8. Shift selector lever to "N".

9. Cool off A.T.F.

- **Run engine at idle for at least one minute.**

10. Perform stall tests in the same manner as in steps 5 through 9 with selector lever in "2", "1" and "R", respectively.


# TROUBLE DIAGNOSES

## Final Check (Cont'd)

### Judgement of stall test

Selector lever position	Judgement		
D	L	O	H
2	L	O	H
1	L	O	O
R	L	H	H

- O : Stall revolution is normal.
- H : Stall revolution is higher than specified.
- L : Stall revolution is lower than specified.

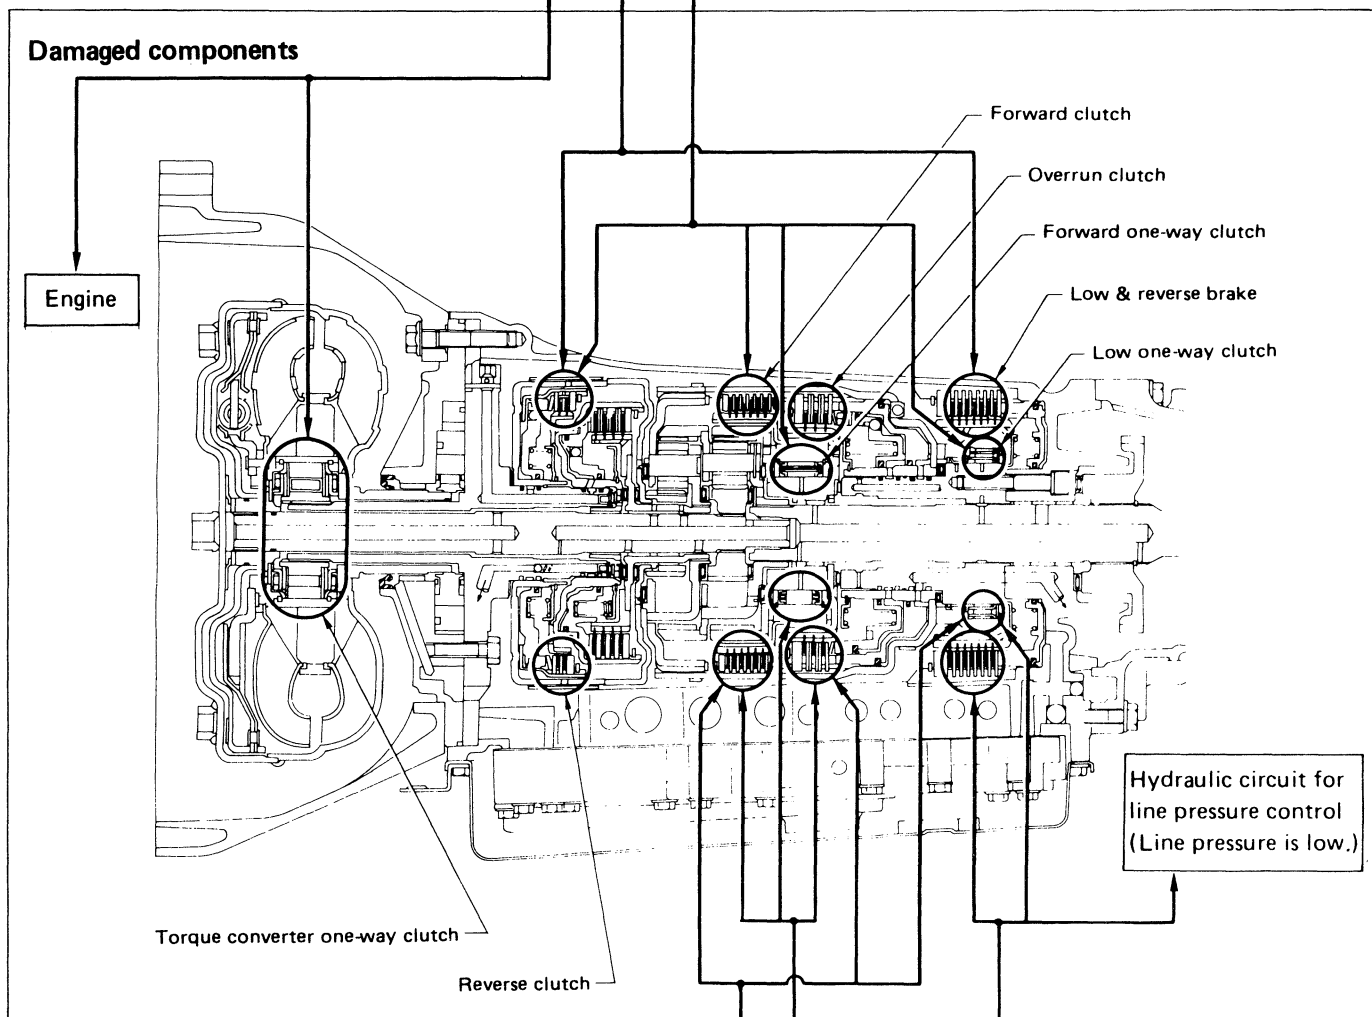



D	H	H	H	O
2	H	H	H	O
1	O	H	H	O
R	O	O	H	O
Selector lever position	Judgement			

# TROUBLE DIAGNOSES

## Final Check (Cont'd)

### PRESSURE TESTING


- Location of line pressure test port
- **Line pressure plugs are hexagon headed bolts.**
- **Always replace line pressure plugs as they are self-sealing bolts.**

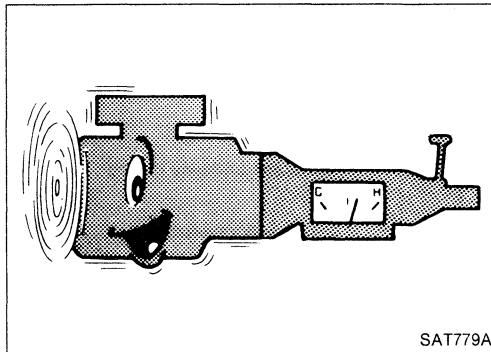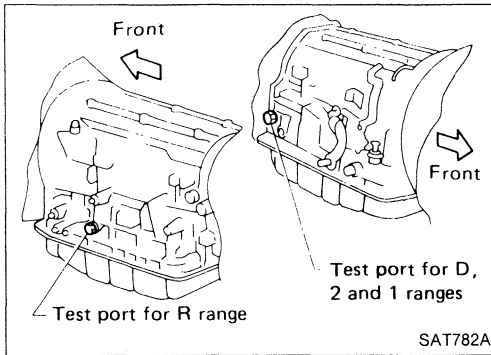


### Line pressure test procedure

1. Check A/T and engine fluid levels. If necessary, add.
2. Warm up engine until engine oil and A.T.F. reach operating temperature after vehicle has been driven approx. 10 minutes.


**A.T.F. operating temperature:**  
50 - 80°C (122 - 176°F)

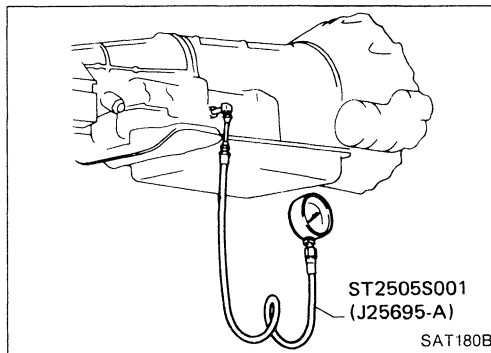

3. Install pressure gauge to line pressure port.  
— **D, 2 and 1 ranges** —

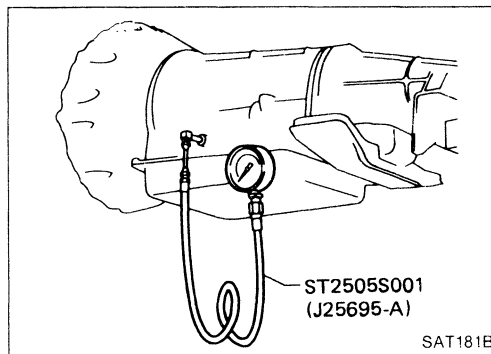


— **R range** —

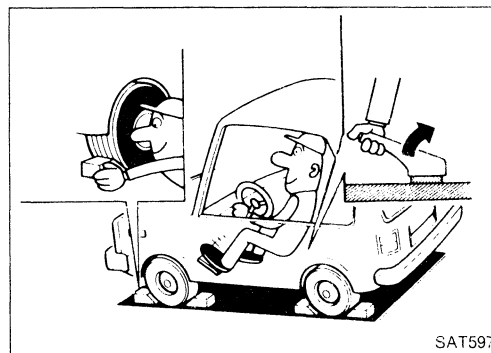

4. Set parking brake and block wheels.
  - **Continue to depress brake pedal fully while line pressure test at stall speed is performed.**



## TROUBLE DIAGNOSES

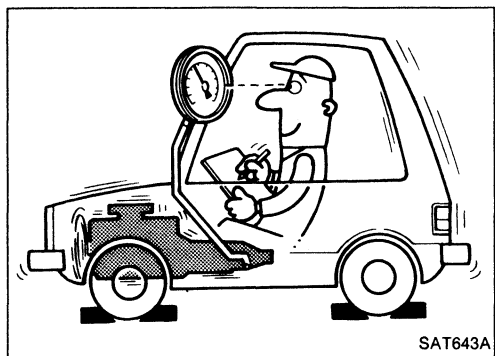

### Final Check (Cont'd)

5. Start engine and measure line pressure at idle and stall speed.
  - **When measuring line pressure at stall speed, follow the stall test procedure.**

### Line pressure:

Engine speed rpm	Line pressure kPa (kg/cm <sup>2</sup> , psi)	
	D, 2 and 1 ranges	R range
Idle	432 - 471 (4.4 - 4.8, 63 - 68)	667 - 706 (6.8 - 7.2, 97 - 102)
Stall	883 - 961 (9.0 - 9.8, 128 - 139)	1,393 - 1,471 (14.2 - 15.0, 202 - 213)

## TROUBLE DIAGNOSES

### Final Check (Cont'd)

#### JUDGEMENT OF LINE PRESSURE TEST

Judgement		Suspected parts
At idle	Line pressure is low in all ranges.	<ul style="list-style-type: none"> <li>● Oil pump wear</li> <li>● Control piston damage</li> <li>● Pressure regulator valve or plug sticking</li> <li>● Spring for pressure regulator valve damaged</li> <li>● Fluid pressure leakage between oil strainer and pressure regulator valve</li> </ul>
	Line pressure is low in particular range.	<ul style="list-style-type: none"> <li>● Fluid pressure leakage between manual valve and particular clutch.</li> <li>● For example; If line pressure is low in "R" and "1" ranges but is normal in "D" and "2" range, fluid leakage exists at or around low &amp; reverse brake circuit.</li> </ul>
	Line pressure is high.	<ul style="list-style-type: none"> <li>● Mal-adjustment of throttle sensor</li> <li>● Fluid temperature sensor damaged</li> <li>● Line pressure solenoid sticking</li> <li>● Short circuit of line pressure solenoid circuit</li> <li>● Pressure modifier valve sticking</li> <li>● Pressure regulator valve or plug sticking</li> </ul>
At stall speed	Line pressure is low.	<ul style="list-style-type: none"> <li>● Mal-adjustment of throttle sensor</li> <li>● Control piston damaged</li> <li>● Line pressure solenoid sticking</li> <li>● Short circuit of line pressure solenoid circuit</li> <li>● Pressure regulator valve or plug sticking</li> <li>● Pressure modifier valve sticking</li> <li>● Pilot valve sticking</li> </ul>

# TROUBLE DIAGNOSES

## Symptom Chart

		ON vehicle										OFF vehicle																								
		10, 15	84	84	88	85, 132	85	85	8, 85	8	8	116, 127	146, 150	152, 163	152, 160	156	170																			
Reference page (AT- )	Reference page (AT- ) Numbers are arranged in order of probability. Perform inspections starting with number one and working up. Circled numbers indicate that the transmission must be removed from the vehicle.	Fluid level	Control linkage	Inhibitor switch	Throttle sensor (Adjustment)	Revolution sensor and speed sensor	Engine revolution signal	Engine idling rpm	Line pressure	Control valve assembly	Shift solenoid A	Shift solenoid B	Line pressure solenoid	Lock-up solenoid	Overrun clutch solenoid	Fluid temperature sensor	Accumulator N-D	Accumulator 1-2	Accumulator 2-3	Accumulator 3-4 (N-R)	Ignition switch and starter	Torque converter	Oil pump	Reverse clutch	High clutch	Forward clutch	Forward one-way clutch	Overrun clutch	Low one-way clutch	Low & reverse brake	Brake band	Parking components				
65	Engine does not start in "N", "P" ranges.	. 2	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	1	.	.	.	.	.	.	.	.	.	.	.	.			
65	Engine starts in range other than "N" and "P".	. 1	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.			
—	Transmission noise in "P" and "N" ranges.	1	.	3	4	5	.	2	.	.	.	.	.	.	.	.	.	.	.	.	.	7	6	.	.	.	.	.	.	.	.	.	.			
65	Vehicle moves when changing into "P" range or parking gear does not disengage when shifted out of "P" range.	. 1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	2	.			
66	Vehicle runs in "N" range.	. 1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	3	.	2	.	5	.	.	.	.	.			
68	Vehicle will not run in "R" range (but runs in "D", "2" and "1" ranges). Clutch slips. Very poor acceleration.	. 1	.	.	.	.	2	4	.	3	.	.	.	.	.	.	.	.	.	.	.	.	.	5	6	7	.	8	.	9	.	.	.			
—	Vehicle braked when shifting into "R" range.	1	2	.	.	.	3	5	.	4	.	.	.	.	.	.	.	.	.	.	.	.	.	6	8	.	9	.	7	.	.	.	.			
—	Sharp shock in shifting from "N" to "D" range.	.	.	2	.	5	1	3	7	.	6	.	.	.	.	.	.	.	.	.	.	.	.	.	9	.	.	.	.	.	.	.	.	.		
—	Vehicle will not run in "D" and "2" ranges (but runs in "1" and "R" range).	. 1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	2	.	.	.	.	.	.		
69	Vehicle will not run in "D", "1", "2" ranges (but runs in "R" range). Clutch slips. Very poor acceleration.	1	.	.	.	.	2	4	.	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	6	7	8	9	.	10	.	.	.	.		
—	Clutches or brakes slip somewhat in starting.	1	2	.	3	.	4	6	.	5	.	.	.	.	.	.	.	.	.	.	.	.	13	12	10	.	9	.	.	.	11	.	.	.		
—	Excessive creep.	.	.	.	.	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
68, 69	No creep at all.	1	.	.	.	.	2	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	6	5	.	4	.	.	.	.	.	.	.	.		
—	Failure to change gear from "D <sub>1</sub> " to "D <sub>2</sub> "	. 2	1	.	5	.	.	4	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	6	.	.	
—	Failure to change gear from "D <sub>2</sub> " to "D <sub>3</sub> "	. 2	1	.	5	.	.	4	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	6	.	.	.	.	.	.	.	7	.	.	
—	Failure to change gear from "D <sub>3</sub> " to "D <sub>4</sub> "	. 2	1	.	4	.	.	.	3	.	.	.	.	.	5	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	6	.	.	
71, 72, 73	Too high a gear change point from "D <sub>1</sub> " to "D <sub>2</sub> ", from "D <sub>2</sub> " to "D <sub>3</sub> ", from "D <sub>3</sub> " to "D <sub>4</sub> ".	.	.	1	2	.	.	.	3	4	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
—	Gear change directly from "D <sub>1</sub> " to "D <sub>3</sub> " occurs.	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	2	.	.	.	.	.	.	.	.	.	.	.	.	.	3	.	.	.	
—	Engine stops when shifting lever into "R", "D", "2" and "1".	.	.	.	.	1	.	3	.	.	.	.	2	.	.	.	.	.	.	.	.	4	.	.	.	.	.	.	.	.	.	.	.	.	.	
—	Too sharp a shock in change from "D <sub>1</sub> " to "D <sub>2</sub> ".	.	.	1	.	.	2	4	.	.	.	.	.	.	5	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	6	.	.	.	
—	Too sharp a shock in change from "D <sub>2</sub> " to "D <sub>3</sub> ".	.	.	1	.	.	2	4	.	.	.	.	.	.	.	.	.	3	.	.	.	.	.	.	.	.	.	.	.	.	.	6	.	.	.	

# TROUBLE DIAGNOSES

## Symptom Chart (Cont'd)

	Reference page (AT- )	ON vehicle										OFF vehicle																				
		10, 15	84	84	88	85, 132	85	85	8, 85	8	8	116, 127	146, 150	152, 163	152, 160	156	170															
Reference page (AT- )	Numbers are arranged in order of probability. Perform inspections starting with number one and working up. Circled numbers indicate that the transmission must be removed from the vehicle.	Fluid level	Control linkage	Inhibitor switch	Throttle sensor (Adjustment)	Revolution sensor and speed sensor	Engine revolution signal	Engine idling rpm	Line pressure	Control valve assembly	Shift solenoid A	Shift solenoid B	Line pressure solenoid	Lock-up solenoid	Overrun clutch solenoid	Fluid temperature sensor	Accumulator N-D	Accumulator 1-2	Accumulator 2-3	Accumulator 3-4 (N-R)	Ignition switch and starter	Torque converter	Oil pump	Reverse clutch	High clutch	Forward clutch	Forward one-way clutch	Overrun clutch	Low one-way clutch	Low & reverse brake	Brake band	Parking components
—	Too sharp a shock in change from "D <sub>3</sub> " to "D <sub>4</sub> ".	.	.	1	.	.	2	4	.	.	.	.	.	.	.	.	.	.	3	.	.	.	.	.	.	6	.	5	.	.	.	
—	Almost no shock or clutches slipping in change from "D <sub>1</sub> " to "D <sub>2</sub> ".	1	.	2	.	.	3	5	.	.	.	.	.	.	.	.	4	.	.	.	.	.	.	.	.	.	.	.	6	.	.	
—	Almost no shock or slipping in change from "D <sub>2</sub> " to "D <sub>3</sub> ".	1	.	2	.	.	3	5	.	.	.	.	.	.	.	.	.	4	.	.	.	.	.	.	6	.	.	.	7	.	.	
—	Almost no shock or slipping in change from "D <sub>3</sub> " to "D <sub>4</sub> ".	1	.	2	.	.	3	5	.	.	.	.	.	.	.	.	.	.	4	.	.	.	.	6	.	.	.	.	7	.	.	
—	Vehicle braked by gear change from "D <sub>1</sub> " to "D <sub>2</sub> ".	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	2, 4	.	.	.	5	3	.	.	.	
—	Vehicle braked by gear change from "D <sub>2</sub> " to "D <sub>3</sub> ".	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	2	.	.	
—	Vehicle braked by gear change from "D <sub>3</sub> " to "D <sub>4</sub> ".	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	4	.	3	2	.	.	.	.	.	
—	Maximum speed not attained. Acceleration poor.	1	.	2	.	.	.	5	3	4	.	.	.	.	.	.	.	.	.	.	.	11, 10	6, 7	.	.	.	9	8	.	.	.	
—	Failure to change gear from "D <sub>4</sub> " to "D <sub>3</sub> ".	1	.	2	.	.	.	6	4	5	3	.	.	3	.	.	.	.	.	.	.	.	.	.	.	8	7	.	.	.		
—	Failure to change gear from "D <sub>3</sub> " to "D <sub>2</sub> " or from "D <sub>4</sub> " to "D <sub>2</sub> ".	1	.	2	.	.	.	5	3	4	.	.	.	.	.	.	.	.	.	.	.	.	.	6	.	.	.	.	7	.	.	
—	Failure to change gear from "D <sub>2</sub> " to "D <sub>1</sub> " or from "D <sub>3</sub> " to "D <sub>1</sub> ".	1	.	2	.	.	.	5	3	4	.	.	.	.	.	.	.	.	.	.	.	.	.	7	.	.	6	8	.	.	.	
—	Gear change shock felt during deceleration by releasing accelerator pedal.	.	.	1	.	.	2	4	.	.	.	.	.	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
—	Too high a change point from "D <sub>4</sub> " to "D <sub>3</sub> ", from "D <sub>3</sub> " to "D <sub>2</sub> ", from "D <sub>2</sub> " to "D <sub>1</sub> ".	.	.	1	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
—	Kickdown does not operate when depressing pedal in "D <sub>4</sub> " within kickdown vehicle speed.	.	.	1	2	.	.	3	4	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
—	Kickdown operates or engine overruns when depressing pedal in "D <sub>4</sub> " beyond kickdown vehicle speed limit.	.	.	2	1	.	.	3	4	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
—	Races extremely fast or slips in changing from "D <sub>4</sub> " to "D <sub>3</sub> " when depressing pedal.	1	.	2	.	.	3	5	.	4	.	.	.	.	.	.	.	.	.	.	.	.	.	6	7	.	.	.	.	.	.	
—	Races extremely fast or slips in changing from "D <sub>4</sub> " to "D <sub>2</sub> " when depressing pedal.	1	.	2	.	.	3	6	5	4	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	8	.	.	7	.	.	
—	Races extremely fast or slips in changing from "D <sub>3</sub> " to "D <sub>2</sub> " when depressing pedal.	1	.	2	.	.	3	5	.	4	.	.	.	8	.	0	.	.	.	.	.	.	.	.	9	7	.	.	6	.	.	
—	Races extremely fast or slips in changing from "D <sub>4</sub> " or "D <sub>3</sub> " to "D <sub>1</sub> " when depressing pedal.	1	.	2	.	.	3	5	.	4	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	6	7	8	.	.	.	
—	Vehicle will not run in any range.	1	2	.	.	.	3	.	.	4	.	.	.	.	.	.	.	.	.	.	.	.	9	5	6	.	.	.	8	7	10	
—	Transmission noise in "D", "2", "1" and "R" ranges.	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	2	.	.	.	.	.	.	.	.	

# TROUBLE DIAGNOSES






## Symptom Chart (Cont'd)

		ON vehicle										OFF vehicle																								
		10, 15	84	84	88	85, 132	85	85	8, 85	8	8	116, 127	146, 150	152, 163	152, 160	156	170																			
Reference page (AT- )	Reference page (AT- )  Numbers are arranged in order of probability. Perform inspections starting with number one and working up. Circled numbers indicate that the transmission must be removed from the vehicle.	Fluid level	Control linkage	Inhibitor switch	Throttle sensor (Adjustment)	Revolution sensor and speed sensor	Engine revolution signal	Engine idling rpm	Line pressure	Control valve assembly	Shift solenoid A	Shift solenoid B	Line pressure solenoid	Lock-up solenoid	Overrun clutch solenoid	Fluid temperature sensor	Accumulator N-D	Accumulator 1-2	Accumulator 2-3	Accumulator 3-4 (N-R)	Ignition switch and starter	Torque converter	Oil pump	Reverse clutch	High clutch	Forward clutch	Forward one-way clutch	Overrun clutch	Low one-way clutch	Low & reverse brake	Brake band	Parking components				
78	Failure to change from "D <sub>3</sub> " to "D <sub>2</sub> " when changing lever into "2" range.	. 7	1 2	. .	. .	. .	. .	. .	6 5	4	. .	. .	3	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .			
—	Gear change from "2 <sub>2</sub> " to "2 <sub>3</sub> " in "2" range.	. .	1	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .			
78	Engine brake does not operate in "1" range.	. 2	1 3 4	. .	. .	. .	. .	. .	6 5	. .	. .	. .	7	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .			
—	Gear change from "1 <sub>1</sub> " to "1 <sub>2</sub> " in "1" range.	. 2	1	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .		
—	Does not change from "1 <sub>2</sub> " to "1 <sub>1</sub> " in "1" range.	. .	1	. 2	. .	. .	. .	. .	4 3	. .	. .	. .	5	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	6	7	. .	. .	. .	. .			
—	Large shock changing from "1 <sub>2</sub> " to "1 <sub>1</sub> " in "1" range.	. .	. .	. .	. .	. .	. .	. .	1	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	2	. .	. .	. .	. .		
—	Transmission overheats.	1	. . 3	. .	2 4	6	. .	5	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	14 7	8 9	11	. .	12	. .	13 10	. .	. .	. .	. .	. .	. .		
—	A.T.F. shoots out during operation. White smoke emitted from exhaust pipe during operation.	1	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	2 3	5	. .	6	. .	7 4	. .	. .	. .	. .	. .		
—	Offensive smell at fluid charging pipe.	1	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	2 3	4 5	7	. .	8	. .	9 6	. .	. .	. .	. .	. .	. .	
—	Torque converter is not locked up.	. .	3 1 2 4	. .	6 8	. .	. .	7	. .	5	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	9	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .
—	Lock-up piston slip	1	. . 2	. .	3 6	. .	5 4	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	7	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .
74	Lock-up point is extremely high or low.	. .	. 1 2	. .	. .	4	. .	3	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .
—	A/T does not shift to "D <sub>4</sub> " when driving with overdrive switch "ON".	. .	2 1 3	. .	8 6 4	. .	. .	5 7	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	10	. .	9	. .	. .	. .	. .	. .	
—	Engine is stopped at "R", "D", "2" and "1" ranges.	1	. .	. .	. .	. .	. .	5 4 3	. .	2	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .	. .

# TROUBLE DIAGNOSES

## A/T Shift Lock System


### SHIFT LOCK SYSTEM ELECTRICAL PARTS LOCATION

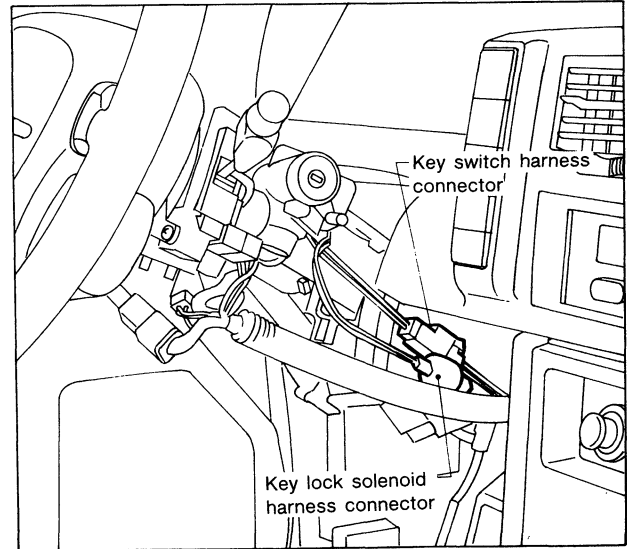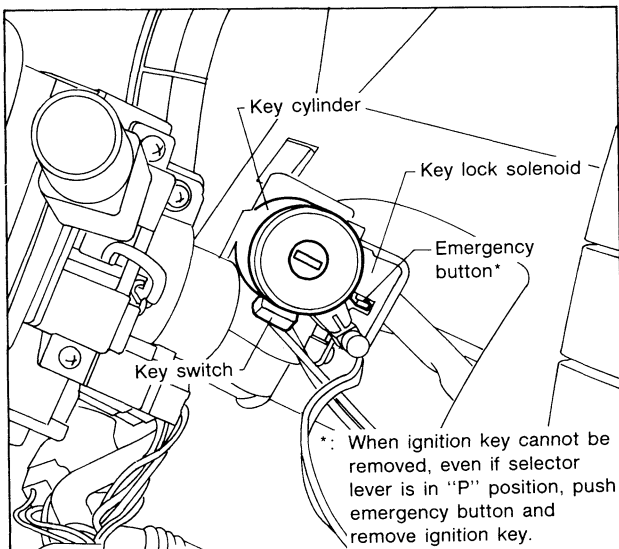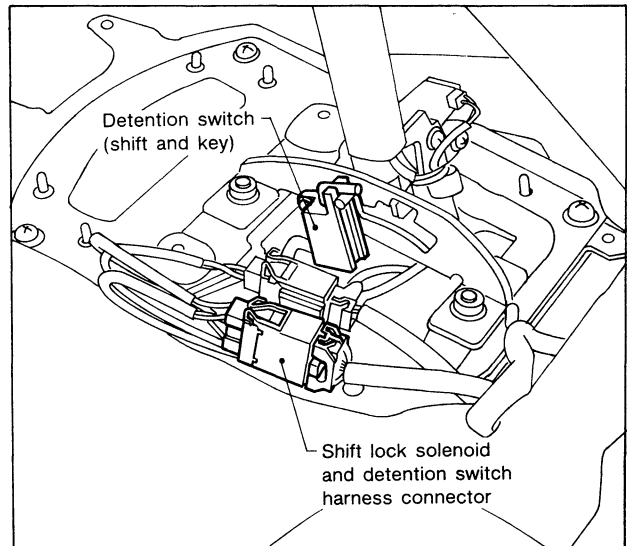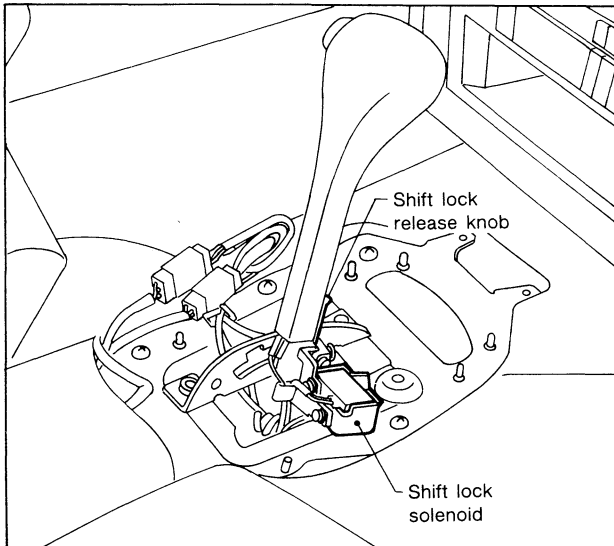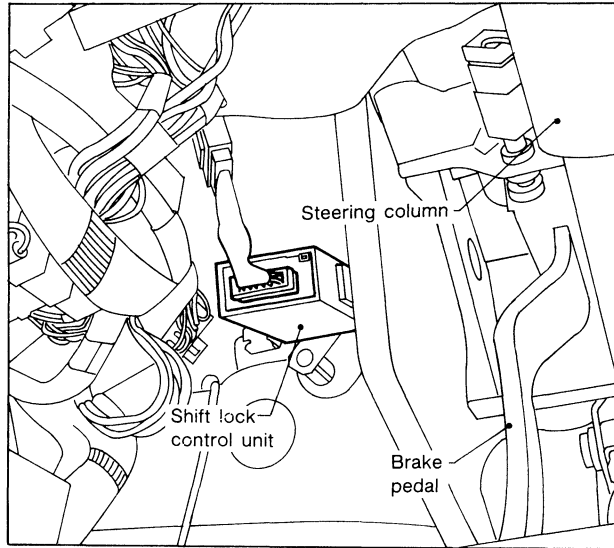

# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)


### CIRCUIT DIAGRAM FOR QUICK PINPOINT CHECK

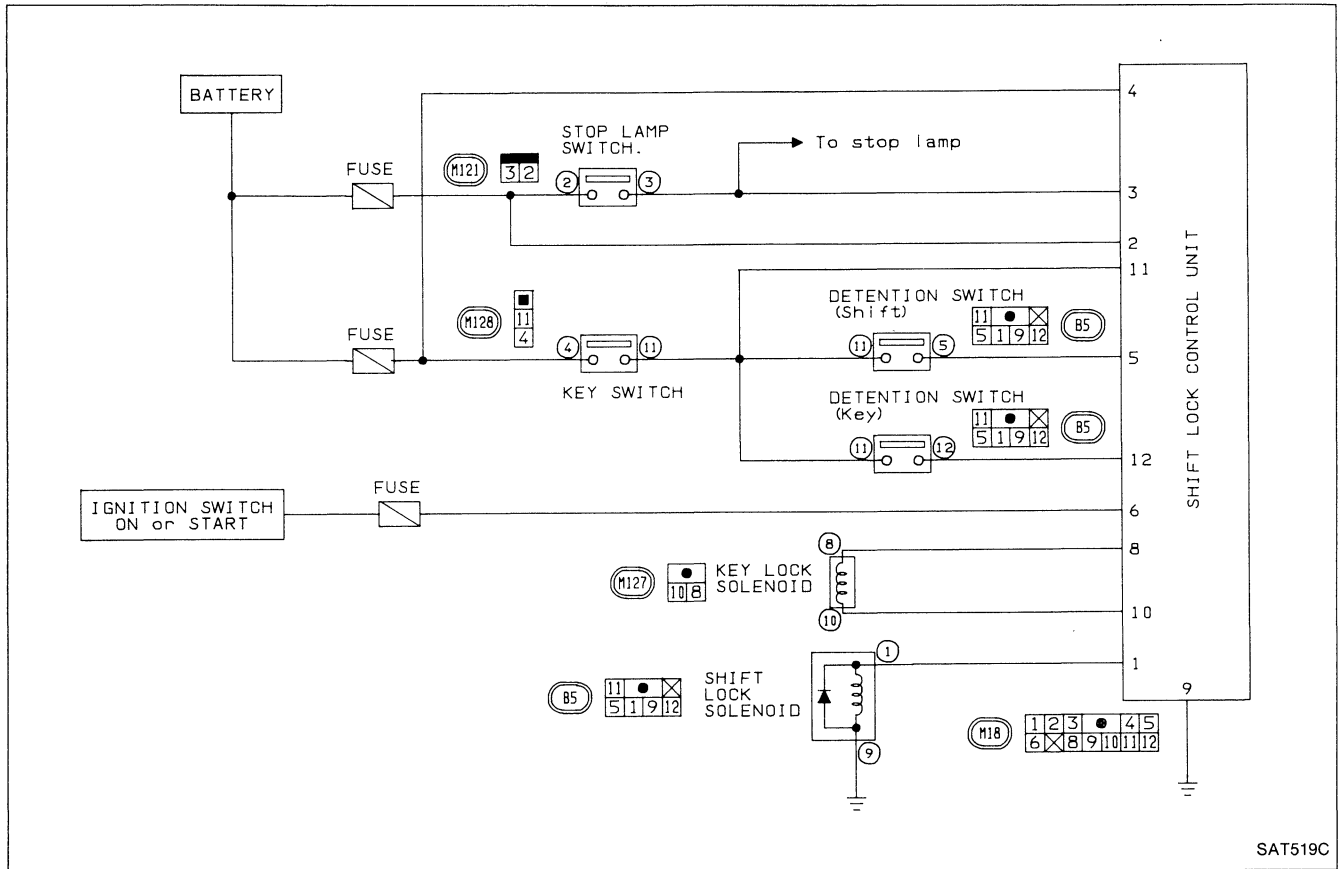

# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)

### WIRING DIAGRAM

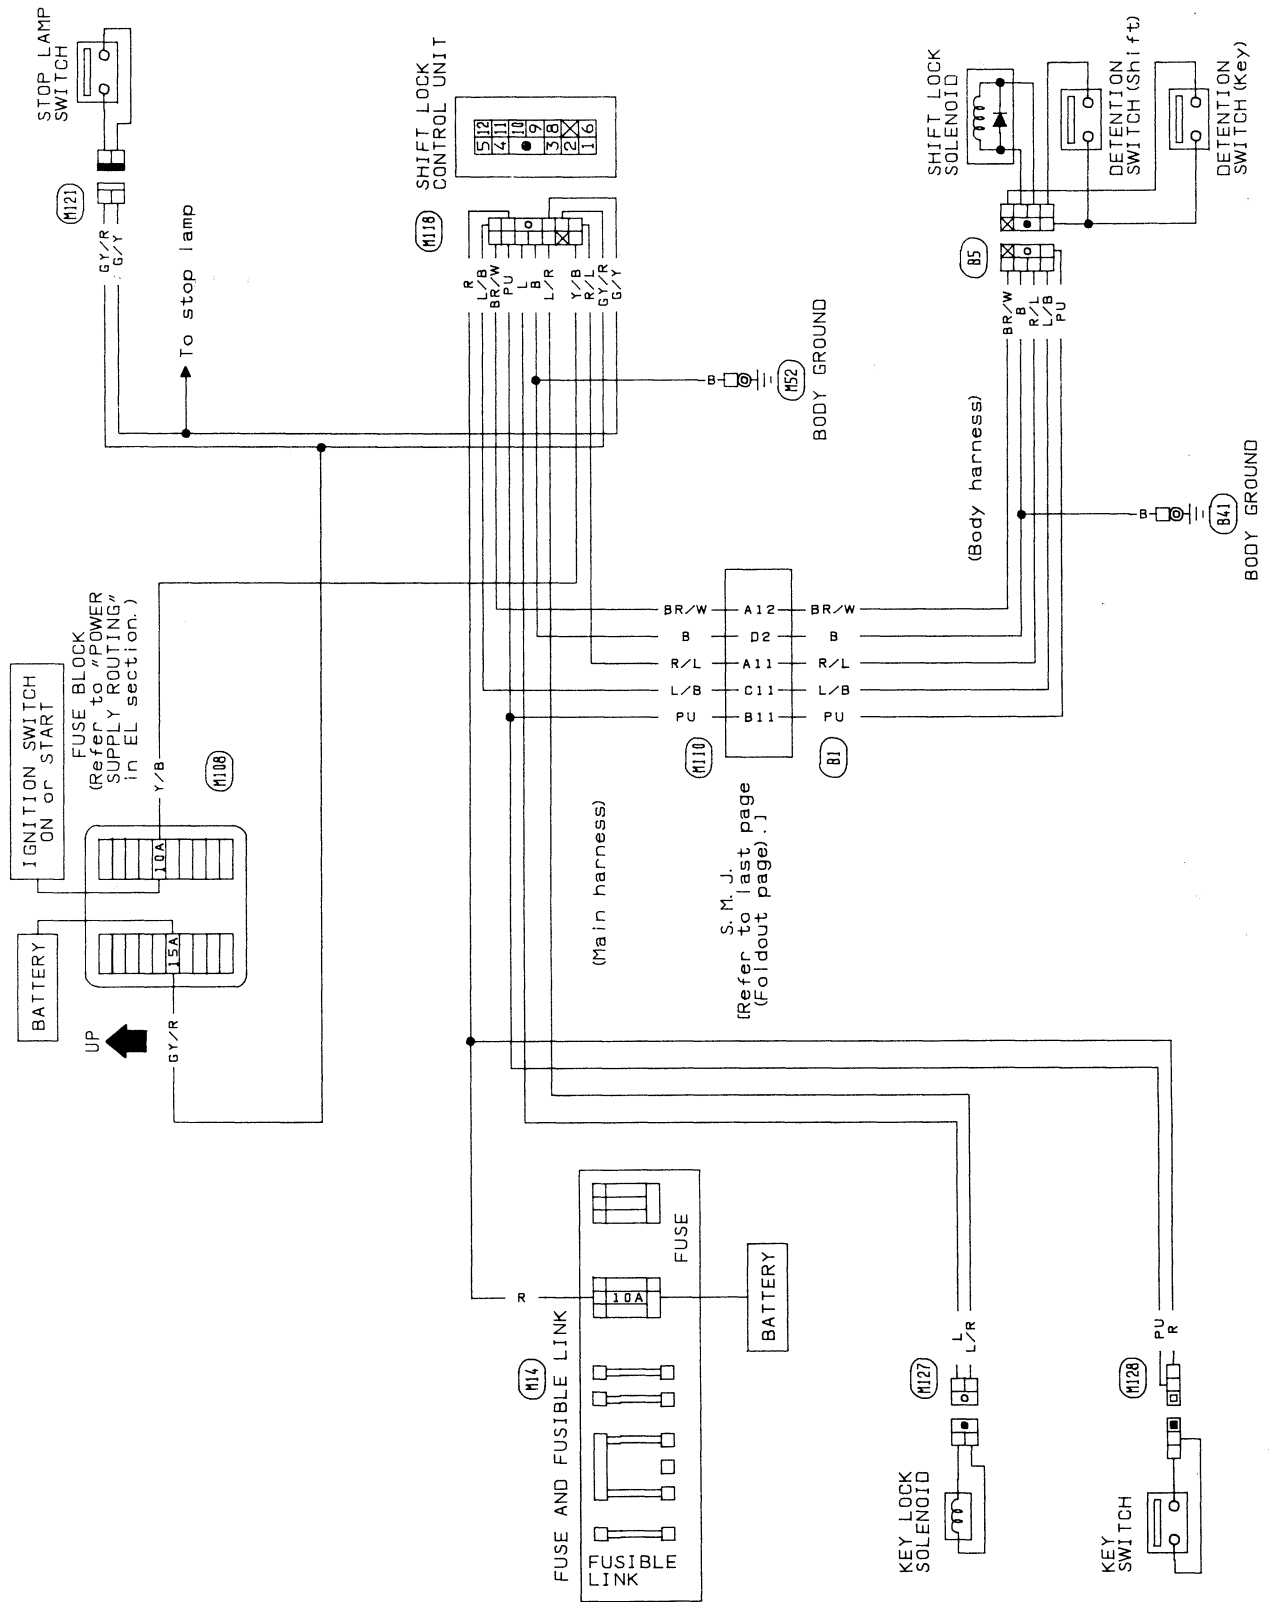






# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)

### DIAGNOSTIC PROCEDURE 1

#### SYMPTOM:


Selector lever cannot be moved from "P" range when applying brake pedal or can be moved when releasing brake pedal.  
Selector lever can be moved from "P" range when key is removed from key cylinder.

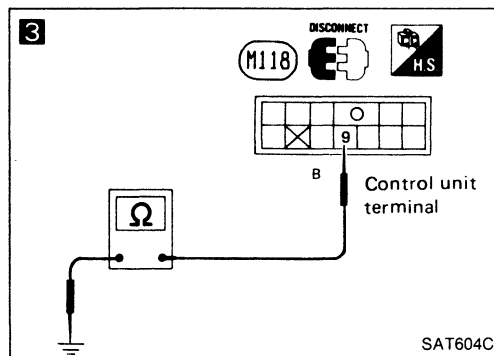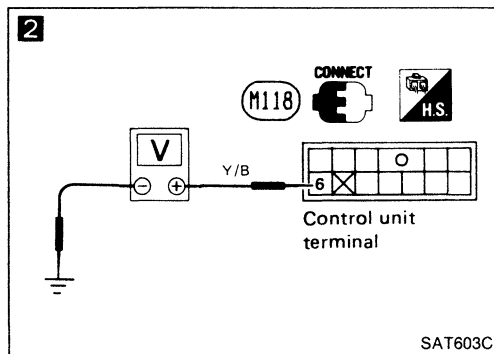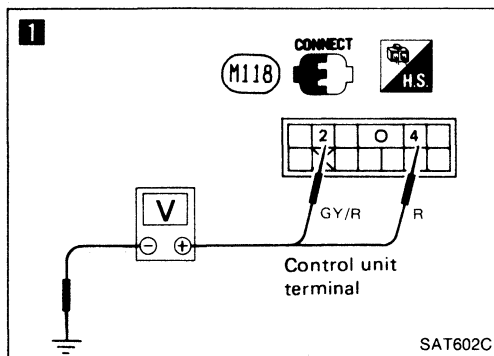

**1**

#### CHECK POWER SOURCE.

1.



N.G.

Check the following items:

1. Harness continuity between battery and control unit harness terminals ②, ④
2. Fuse

2. Check voltage between control unit harness terminals ②, ④ and ground.


**Battery voltage should exist.**

**2**

O.K.

#### CHECK IGNITION SIGNAL.

1.



N.G.


Check the following items:

1. Harness continuity between battery and control unit harness terminal ⑥
2. Fuse
3. Ignition switch

2. Check voltage between control unit harness terminal ⑥ and ground.

**0V**

3.



4. Check voltage between control unit harness terminal ⑥ and ground.


**Battery voltage should exist.**

**3**

O.K.

#### CHECK GROUND CIRCUIT FOR CONTROL UNIT.

1.



N.G.

Repair harness or connector.

2. Disconnect control unit harness connector.
3. Check continuity between control unit harness terminal ⑨ and ground.



**Continuity should exist.**

O.K.



**A**

# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)


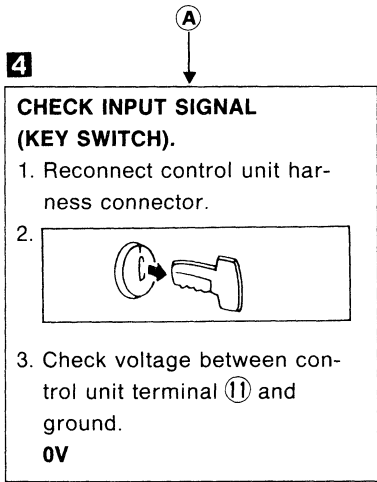
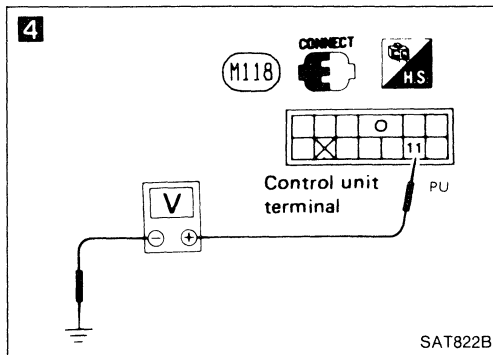


Check key switch.  
(Refer to "COMPONENT CHECK".)

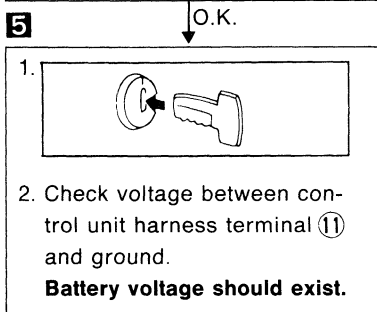
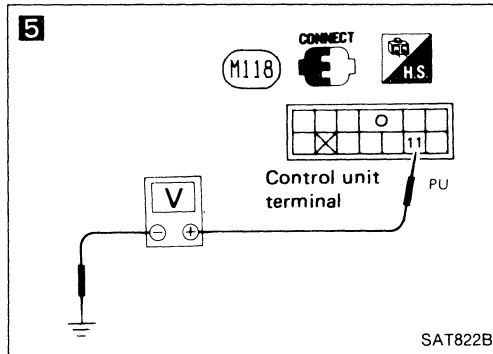


Check the following items:

1. Harness continuity between control unit harness terminal ① and key switch harness terminal ①.
2. Harness continuity between key switch harness terminal ④ and fuse
3. Key switch (Refer to "COMPONENT CHECK".)

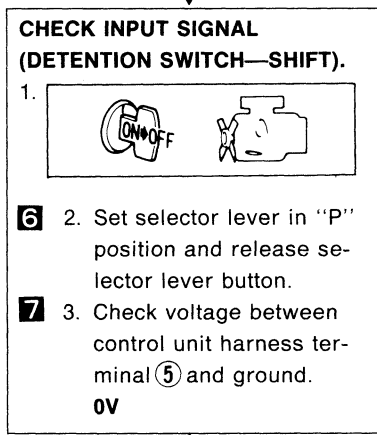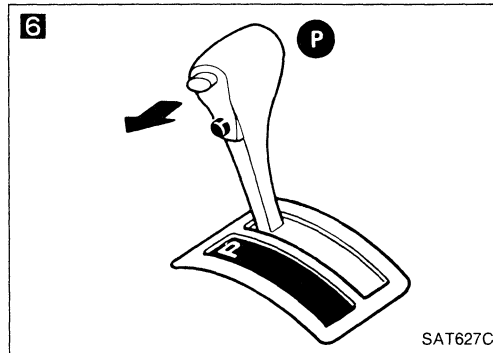


Check detention switch—shift.  
(Refer to "COMPONENT CHECK".)

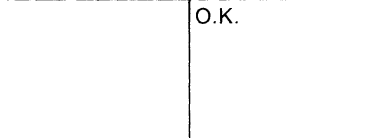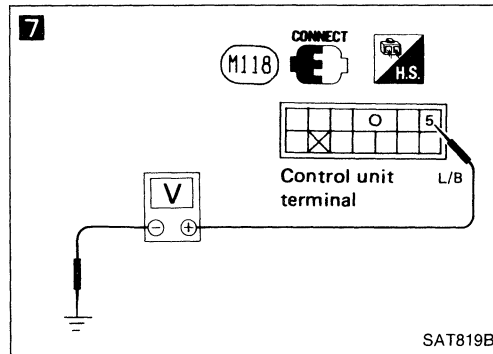

**B**

# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)

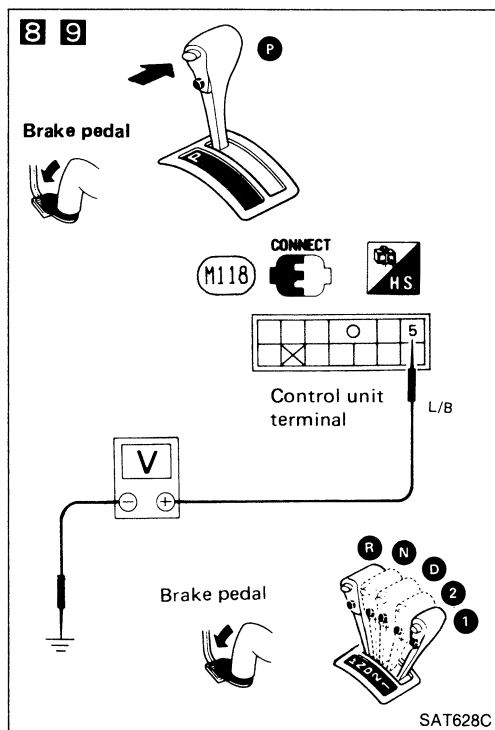

**8** **CHECK INPUT SIGNAL (DETENTION SWITCH—SHIFT).**

1.


**8** 2. Check voltage between control unit harness terminal ⑤ and ground with brake pedal depressed and selector lever pushed.  
**Battery voltage should exist.**

**9** 3. Check voltage between control unit harness terminal ⑤ and ground with selector lever set in any position except "P".  
**When selector lever cannot be moved from "P" position with brake pedal depressed, push shift lock release knob. Battery voltage should exist.**

N.G. →

Check the following items:

1. Harness continuity between control unit harness terminal ⑤ and detention switch harness terminal ⑤
2. Harness continuity between detention switch harness terminal ⑪ and key switch harness terminal ⑪
3. Detention switch—shift (Refer to "COMPONENT CHECK".)

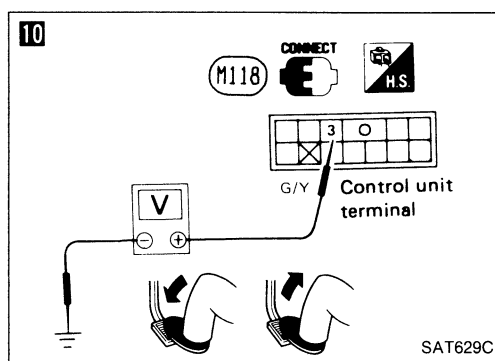

O.K. ↓

**10** **CHECK INPUT SIGNAL (STOP LAMP SWITCH).**

1.


● Check voltage between control unit harness terminal ③ and ground.

Brake pedal	Voltage
Depressed	Battery voltage
Released	0V

N.G. →

Check the following items:

1. Harness continuity between control unit harness terminal ③ and stop lamp switch harness terminal ③
2. Harness continuity between stop lamp switch harness terminal ② and fuse
3. Stop lamp switch (Refer to "COMPONENT CHECK".)

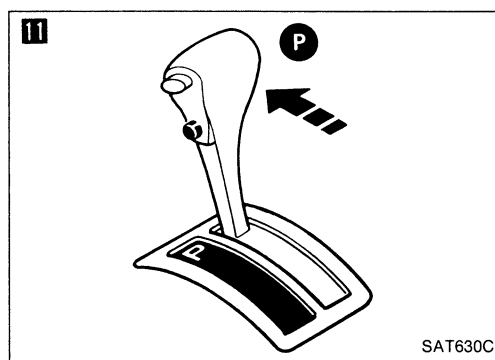




O.K. ↓

**11** Set selector lever in "P" position.

ⓐ

# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)

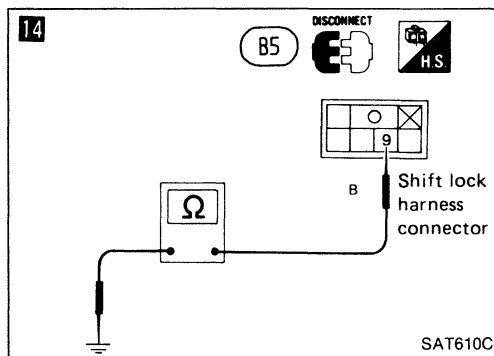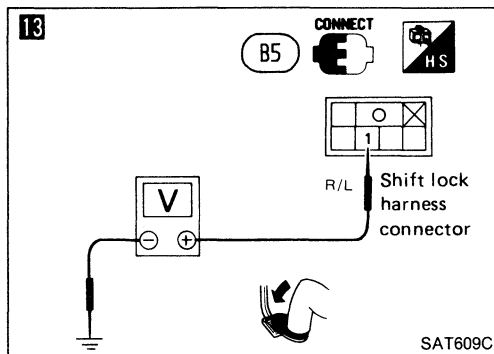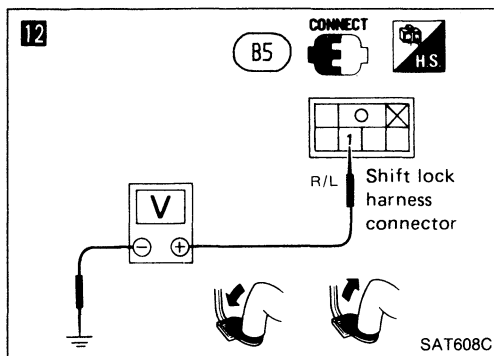

C

**CHECK OUTPUT SIGNAL (SHIFT LOCK SOLENOID).**

- 
2. Check voltage between shift lock harness connector terminal ① and body ground.

Brake pedal	Voltage
Depressed	Battery voltage
Released	0V
- 
4. Check voltage between shift lock harness connector terminal ① and ground with brake pedal depressed.  
0V

N.G. → Check harness continuity between control unit harness terminal ① and shift lock solenoid harness terminal ①.

O.K. ↓

**CHECK GROUND CIRCUIT FOR SHIFT LOCK SOLENOID.**

- Disconnect shift lock harness connector.
- Check continuity between shift lock harness terminal ⑨ and ground.  
**Continuity should exist.**

N.G. → Repair harness or connector.

O.K. ↓

Check shift lock solenoid. (Refer to "COMPONENT CHECK".)

N.G. → Replace A/T shift lock control device assembly.

O.K. ↓

Reconnect shift lock harness connector.



Recheck shift lock operation.

N.G. → 1. Perform control unit input/output signal inspection test.  
2. If N.G., recheck harness connector connection.

O.K. ↓

**INSPECTION END**




# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)

### DIAGNOSTIC PROCEDURE 2

#### SYMPTOM:

Ignition key cannot be removed when selector lever is set to "P" position or can be removed when selector lever is set to any position except "P".

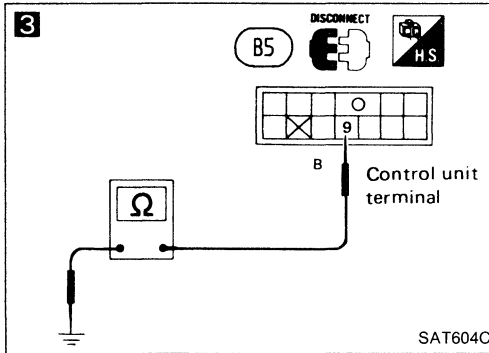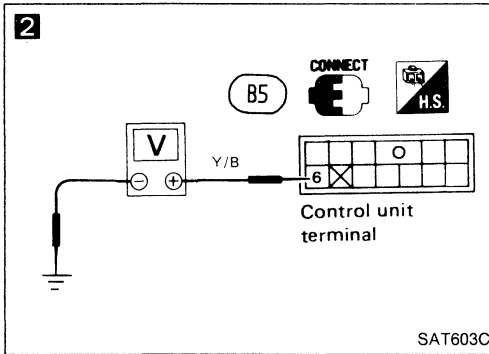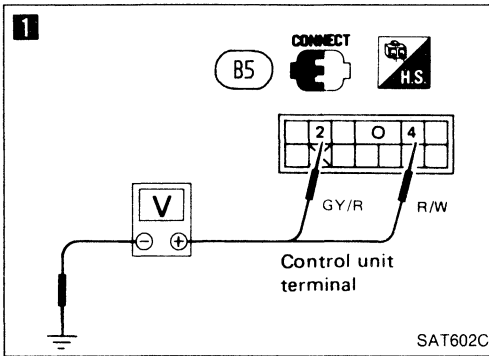

**1**

#### CHECK POWER SOURCE.

- 
- Check voltage between control unit harness terminals ②, ④ and ground.  
**Battery voltage should exist.**

N.G.

- Check the following items:
- Harness continuity between battery and control unit harness terminals ②, ④
  - Fuse

**2**

#### CHECK IGNITION SIGNAL.

- 
- Check voltage between control unit harness terminal ⑥ and ground.  
**0V**
- 
- Check voltage between control unit harness terminal ⑥ and ground.  
**Battery voltage should exist.**

N.G.

- Check the following items:
- Harness continuity between battery and control unit harness terminal ⑥
  - Fuse
  - Ignition switch

**3**

#### CHECK GROUND CIRCUIT FOR CONTROL UNIT.

- 
- Disconnect control unit harness connector.
- Check continuity between control unit harness terminal ⑨ and ground.  
**Continuity should exist.**

N.G.





Repair harness or connector.

O.K.

**A**

# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)

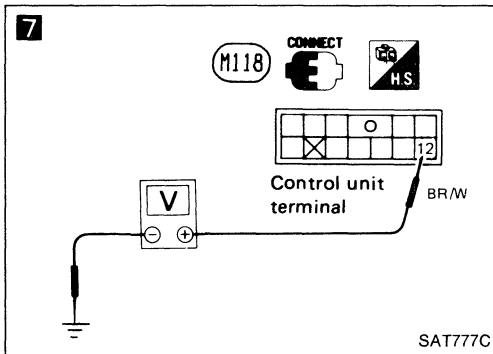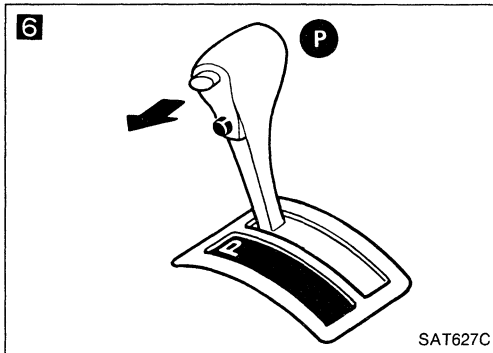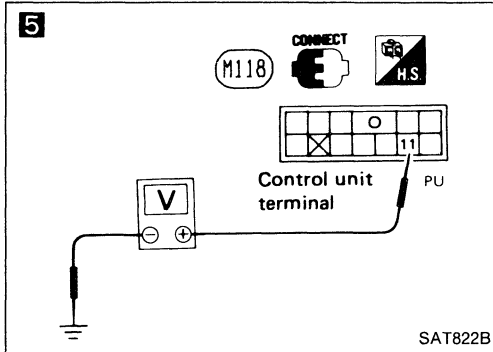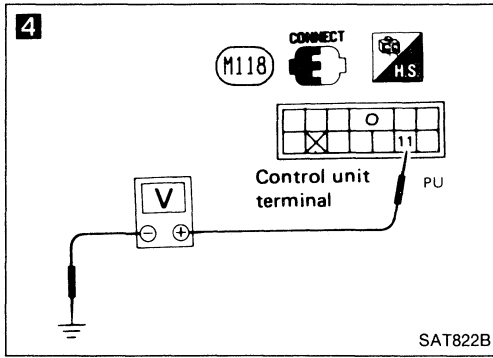

**4**

**CHECK INPUT SIGNAL (KEY SWITCH).**

1. Reconnect control unit harness connector.
- 2.

**When ignition key cannot be removed, even if selector lever is in "P" position, use emergency button.**

3. Check voltage between control unit terminal ① and ground.  
**0V**

N.G. → Check key switch. (Refer to "COMPONENT CHECK".)

**5**

- 1.
2. Check voltage between control unit harness terminal ① and ground.  
**Battery voltage should exist.**

N.G. → Check the following items:

1. Harness continuity between control unit harness terminal ① and key switch harness terminal ①.
2. Harness continuity between key switch harness terminal ④ and fuse
3. Key switch (Refer to "COMPONENT CHECK".)

**6**

**CHECK INPUT SIGNAL (DETENTION SWITCH—KEY).**


- 1.
2. Set selector lever in "P" position and release selector lever button.
3. Check voltage between control unit harness terminal ⑫ and ground.  
**0V**

N.G. → Check detention switch—key. (Refer to "COMPONENT CHECK".)


O.K. → **B**

# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)

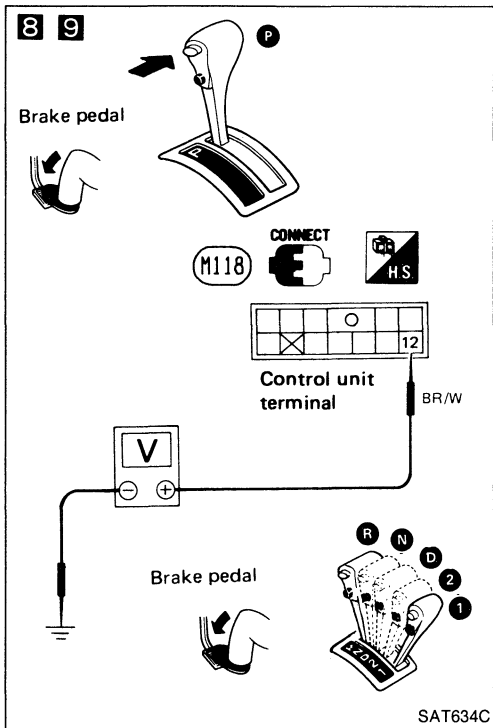

### CHECK INPUT SIGNAL (DETENTION SWITCH—KEY).




**8** 1. Check voltage between control unit harness terminal ⑫ and ground with brake pedal depressed and selector lever button pushed.  
**Battery voltage should exist.**

**9** 2. Check voltage between control unit harness terminal ⑫ and ground with selector lever set in any position except "P".  
**Battery voltage should exist.**

N.G.

Check the following items:

1. Harness continuity between control unit harness terminal ⑫ and detention switch harness terminal ⑪
2. Harness continuity between detention switch harness terminal ⑪ and key switch harness terminal ⑪
3. Detention switch—key (Refer to "COMPONENT CHECK".)

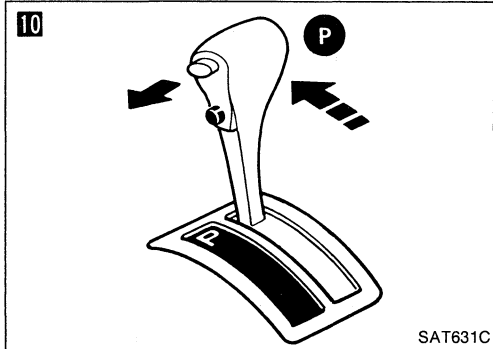

**10**


O.K.

Set selector lever in "P" position and release selector lever button.



**11**

### CHECK OUTPUT SIGNAL (KEY LOCK SIGNAL).



Check voltage between key lock solenoid harness terminal ⑧ and ground at the moment ignition key is turned from OFF to ON.  
**Battery voltage should exist for approximately 0.1 seconds.**

N.G.

Check harness continuity between shift lock solenoid harness terminal ⑧ and control unit harness terminal ⑧.

O.K.


N.G.

Repair harness or connector.

Replace control unit.





O.K.

**C**

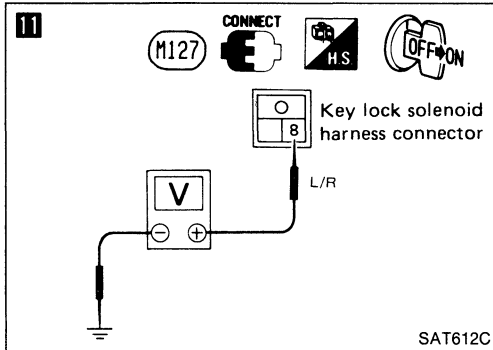

# TROUBLE DIAGNOSES


## A/T Shift Lock System (Cont'd)

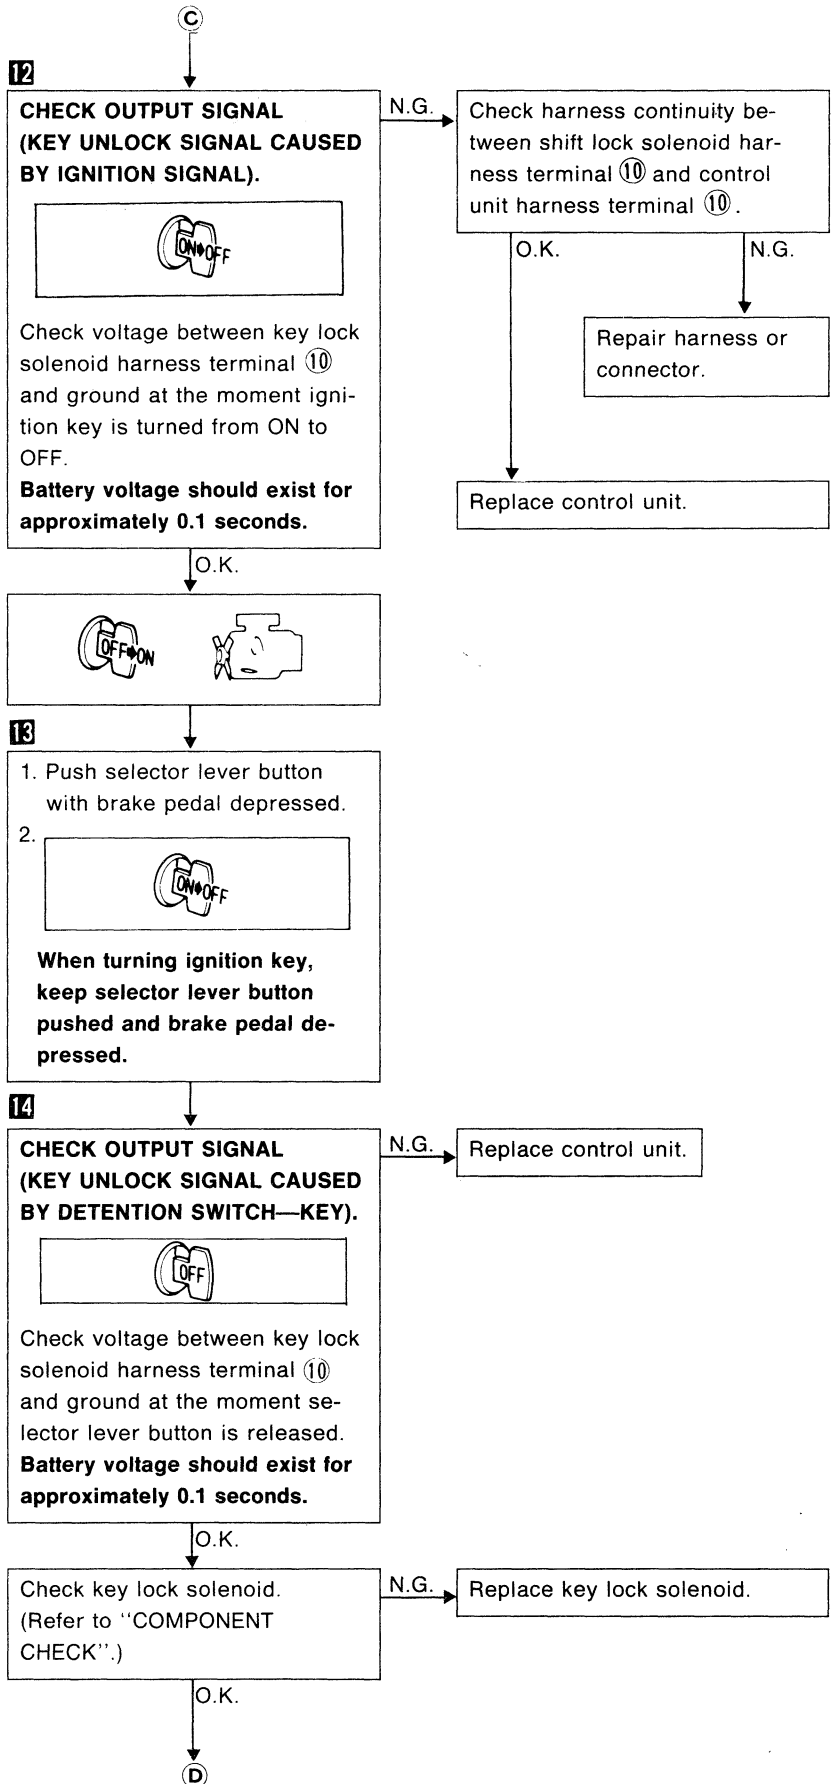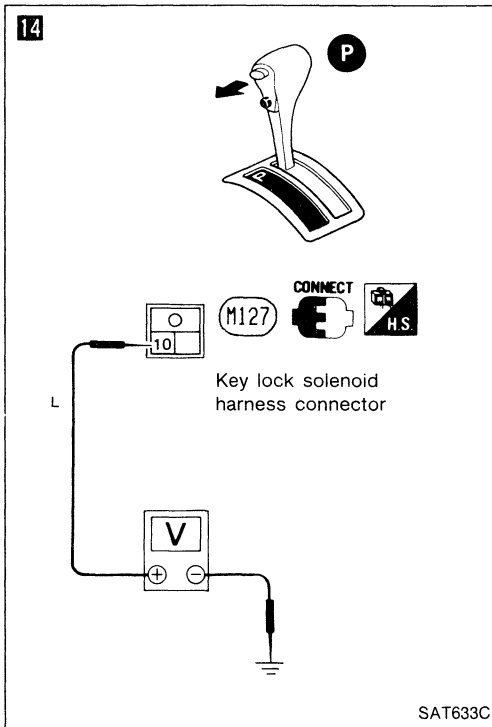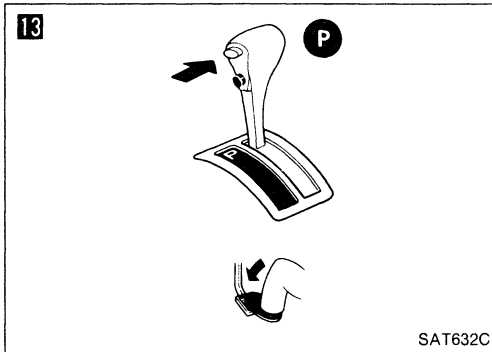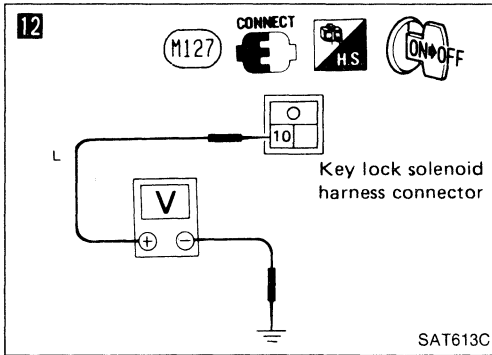



**TROUBLE DIAGNOSES**

**A/T Shift Lock System (Cont'd)**

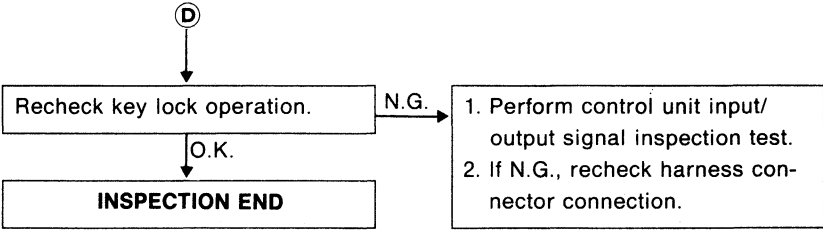


## TROUBLE DIAGNOSES

### A/T Shift Lock System (Cont'd)

#### SHIFT LOCK CONTROL UNIT INSPECTION



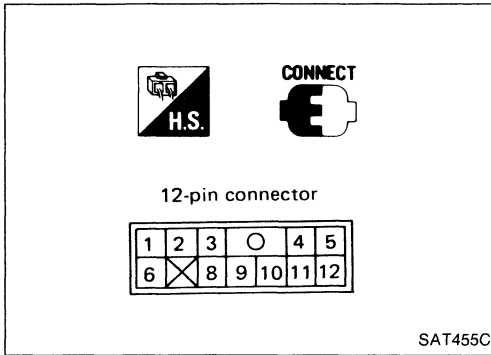

- Measure voltage between each terminal and terminal ⑨ by following "SHIFT LOCK CONTROL UNIT INSPECTION TABLE".
- Pin connector terminal layout.



# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)

### SHIFT LOCK CONTROL UNIT INSPECTION TABLE (Data are reference values.)

Terminal No.		Item	Condition	Judgement standard
⊕	⊖			
1		Shift lock signal	 When selector lever is set in "P" position and brake pedal is depressed	Battery voltage
			Except above	0V
2		Power source		Battery voltage
3	9	Stop lamp switch	When brake pedal is depressed	Battery voltage
			When brake pedal is released	0V
4		Power source		Battery voltage
5		Detention switch (Shift)	When key is inserted into key cylinder, selector lever is set in "P" position and selector lever button is released	0V
			Except above	Battery voltage
6		Ignition signal		Battery voltage
8	10	Key lock signal	When ignition switch is turned from LOCK, OFF or ACC to ON.	Battery voltage (Approximately 0.1 seconds)
			Except above	0V
9	—	Ground	—	—
10	8	Key unlock signal	When ignition switch is turned from ON to LOCK, OFF or ACC, selector lever is set in "P" position and selector lever button is released	Battery voltage (Approximately 0.1 seconds)
			Except above	0V
11		Key switch	When key is inserted into key cylinder	Battery voltage
			When key is removed from key cylinder	0V
12	9	Detention switch (Key)	When key is inserted into key cylinder, selector lever is set in "P" position and selector lever button is released	0V
			Except above	Battery voltage


# TROUBLE DIAGNOSES

## A/T Shift Lock System (Cont'd)

### COMPONENT CHECK


#### Shift lock solenoid

- Check operation by applying battery voltage to shift lock harness connector.

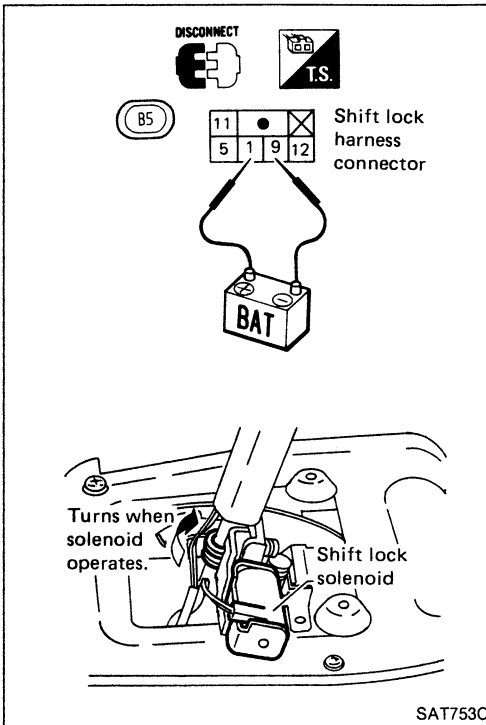

#### Detention switch—shift


- Check continuity between terminals ⑤ and ⑪ of shift lock harness connector.

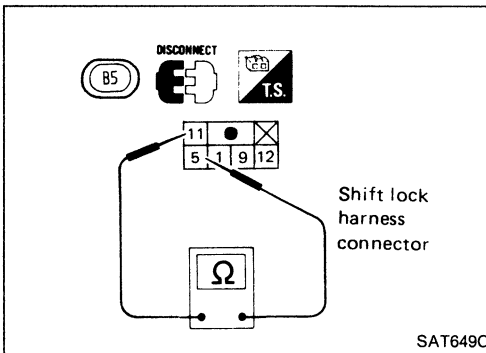

Condition	Continuity
When selector lever is set to "P" position and selector lever button is released	Yes
Except above	No

#### Detention switch—key

- Check continuity between terminals ⑪ and ⑫ of shift lock harness connector.

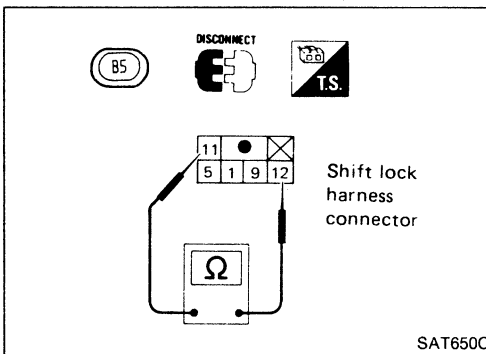


Condition	Continuity
When selector lever is set to "P" position and selector lever button is released	Yes
Except above	No

#### Key lock solenoid

- Check operation by applying battery voltage to key lock solenoid harness connector.

**Operating sound must be emitted.**

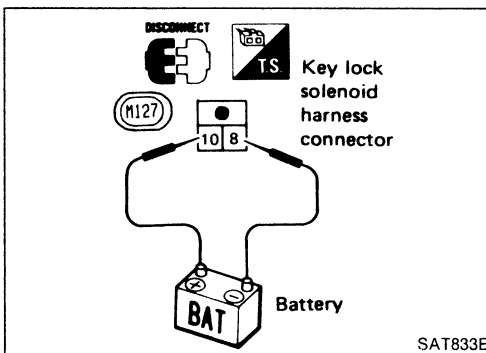


## TROUBLE DIAGNOSES

### A/T Shift Lock System (Cont'd)

#### Key switch

- Check continuity between terminals ④ and ⑪ of key switch harness connector.


Condition	Continuity
When key is inserted into key cylinder	Yes
When key is removed from key cylinder	No

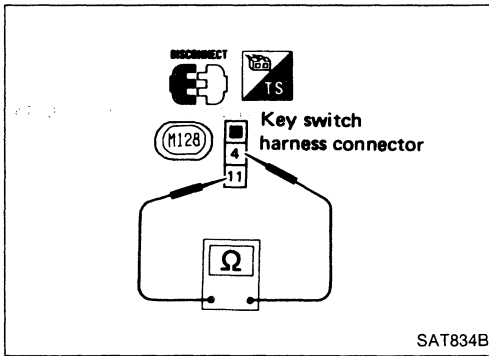





#### Stop lamp switch

- Check stop lamp switch after adjusting brake pedal — refer to section BR.
- Check continuity between terminals ③ and ② of stop lamp switch harness connector.

Condition	Continuity
When depressing brake pedal	Yes
When releasing brake pedal is released	No

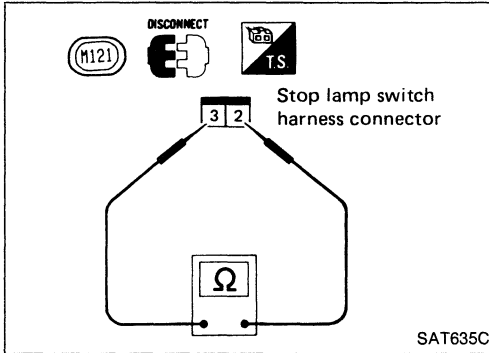

# REMOVAL AND INSTALLATION

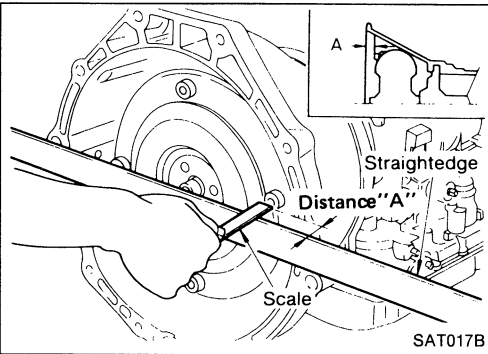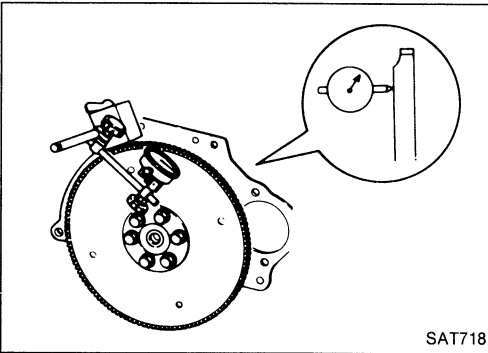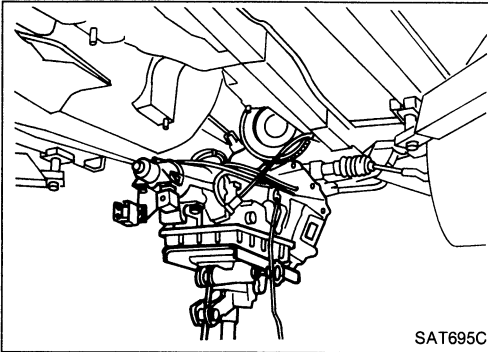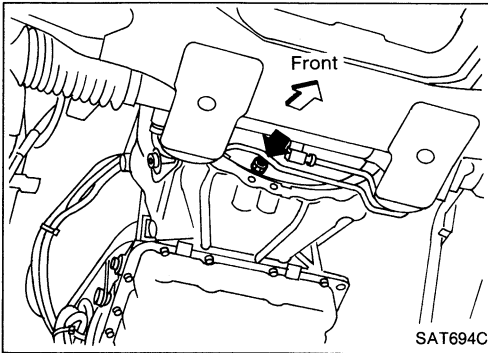

## Removal


- Remove exhaust tube.
- Remove fluid charging pipe from A/T assembly.
- Remove oil cooler pipe from A/T assembly.
- Remove control linkage from selector lever.
- Disconnect inhibitor switch and solenoid harness connectors.
- Remove speedometer cable from A/T assembly.
- Plug up openings such as the oil charging pipe hole, etc.
- Remove propeller shaft. — Refer to section PD.
- **Insert plug into rear oil seal after removing propeller shaft.**
- **Be careful not to damage spline, sleeve and rear oil seal, when removing propeller shaft.**
- Remove starter motor.
- Remove gusset securing engine to A/T assembly.
- Remove bolts securing torque converter to drive plate.
- **Remove the bolts by turning crankshaft.**
- Support engine by placing a jack under oil pan.
- **Do not place jack under oil pan drain plug.**
- Remove transmission from engine.
- **Support automatic transmission, while removing it.**

## Installation

- Drive plate runout  
**Maximum allowable runout:  
0.5 mm (0.020 in)**  
If this runout is out of allowance, replace drive plate with ring gear.
- When connecting torque converter to transmission, measure distance "A" to be certain that they are correctly assembled.  
**Distance "A":  
26 mm (1.02 in) or more**
- Install converter to drive plate.
- Reinstall any part removed.
- **After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transmission rotates freely without binding.**

## REMOVAL AND INSTALLATION


### Installation (Cont'd)

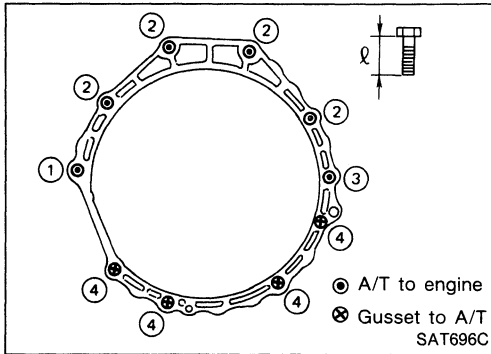

- Tighten bolts securing transmission.



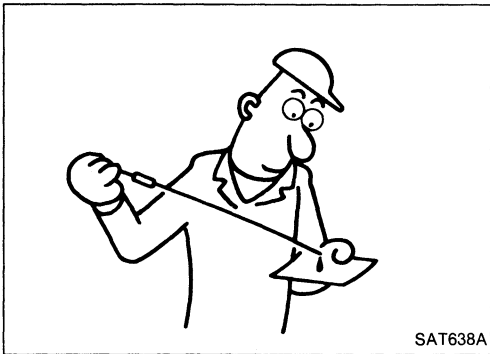

Bolt No.	Tightening torque N·m (kg-m, ft-lb)	Bolt length "l" mm (in)
1	39 - 49 (4.0 - 5.0, 29 - 36)	60 (2.36)
2	39 - 49 (4.0 - 5.0, 29 - 36)	50 (1.97)
3	39 - 49 (4.0 - 5.0, 29 - 36)	45 (1.77)
4	29 - 39 (3.0 - 4.0, 22 - 29)	25 (0.98)
Gusset to engine	29 - 39 (3.0 - 4.0, 22 - 29)	20 (0.98)


- Reinstall any part removed.



- Check fluid level in transmission.
- Move selector lever through all positions to be sure that transmission operates correctly.  
With parking brake applied, rotate engine at idling. Move selector lever through "N" to "D", to "2", to "1" and to "R". A slight shock should be felt by hand gripping selector each time transmission is shifted.
- Perform road test. — Refer to "ROAD TESTING".

# MAJOR OVERHAUL

-  : N-m (kg-m, ft-lb)
-  : Apply recommended sealant (Nissan genuine part: KP610-00250) or equivalent.
-  : Apply A.T.F.
-  : Apply petroleum jelly
- ★ : Select with proper thickness.
- ☆ : Adjustment is required.

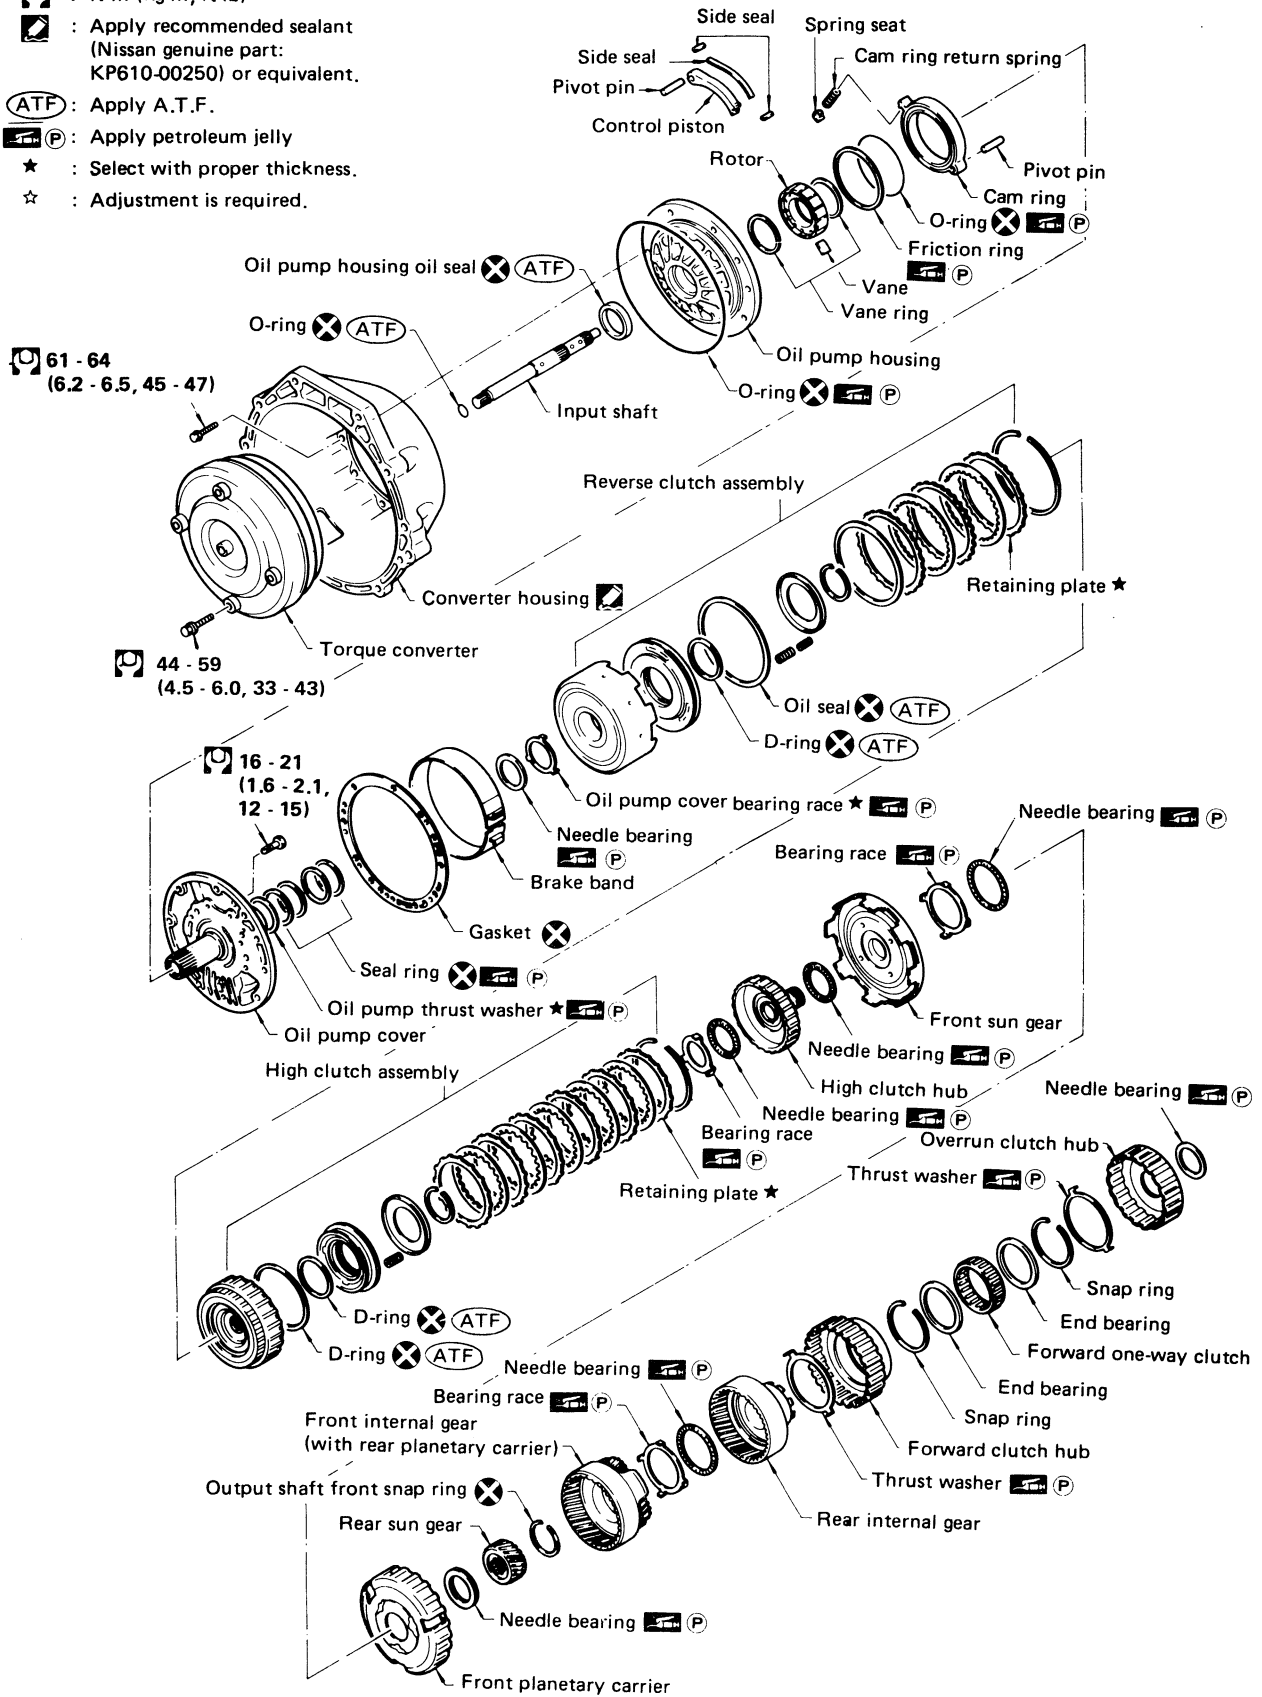






# MAJOR OVERHAUL

## Oil Channel

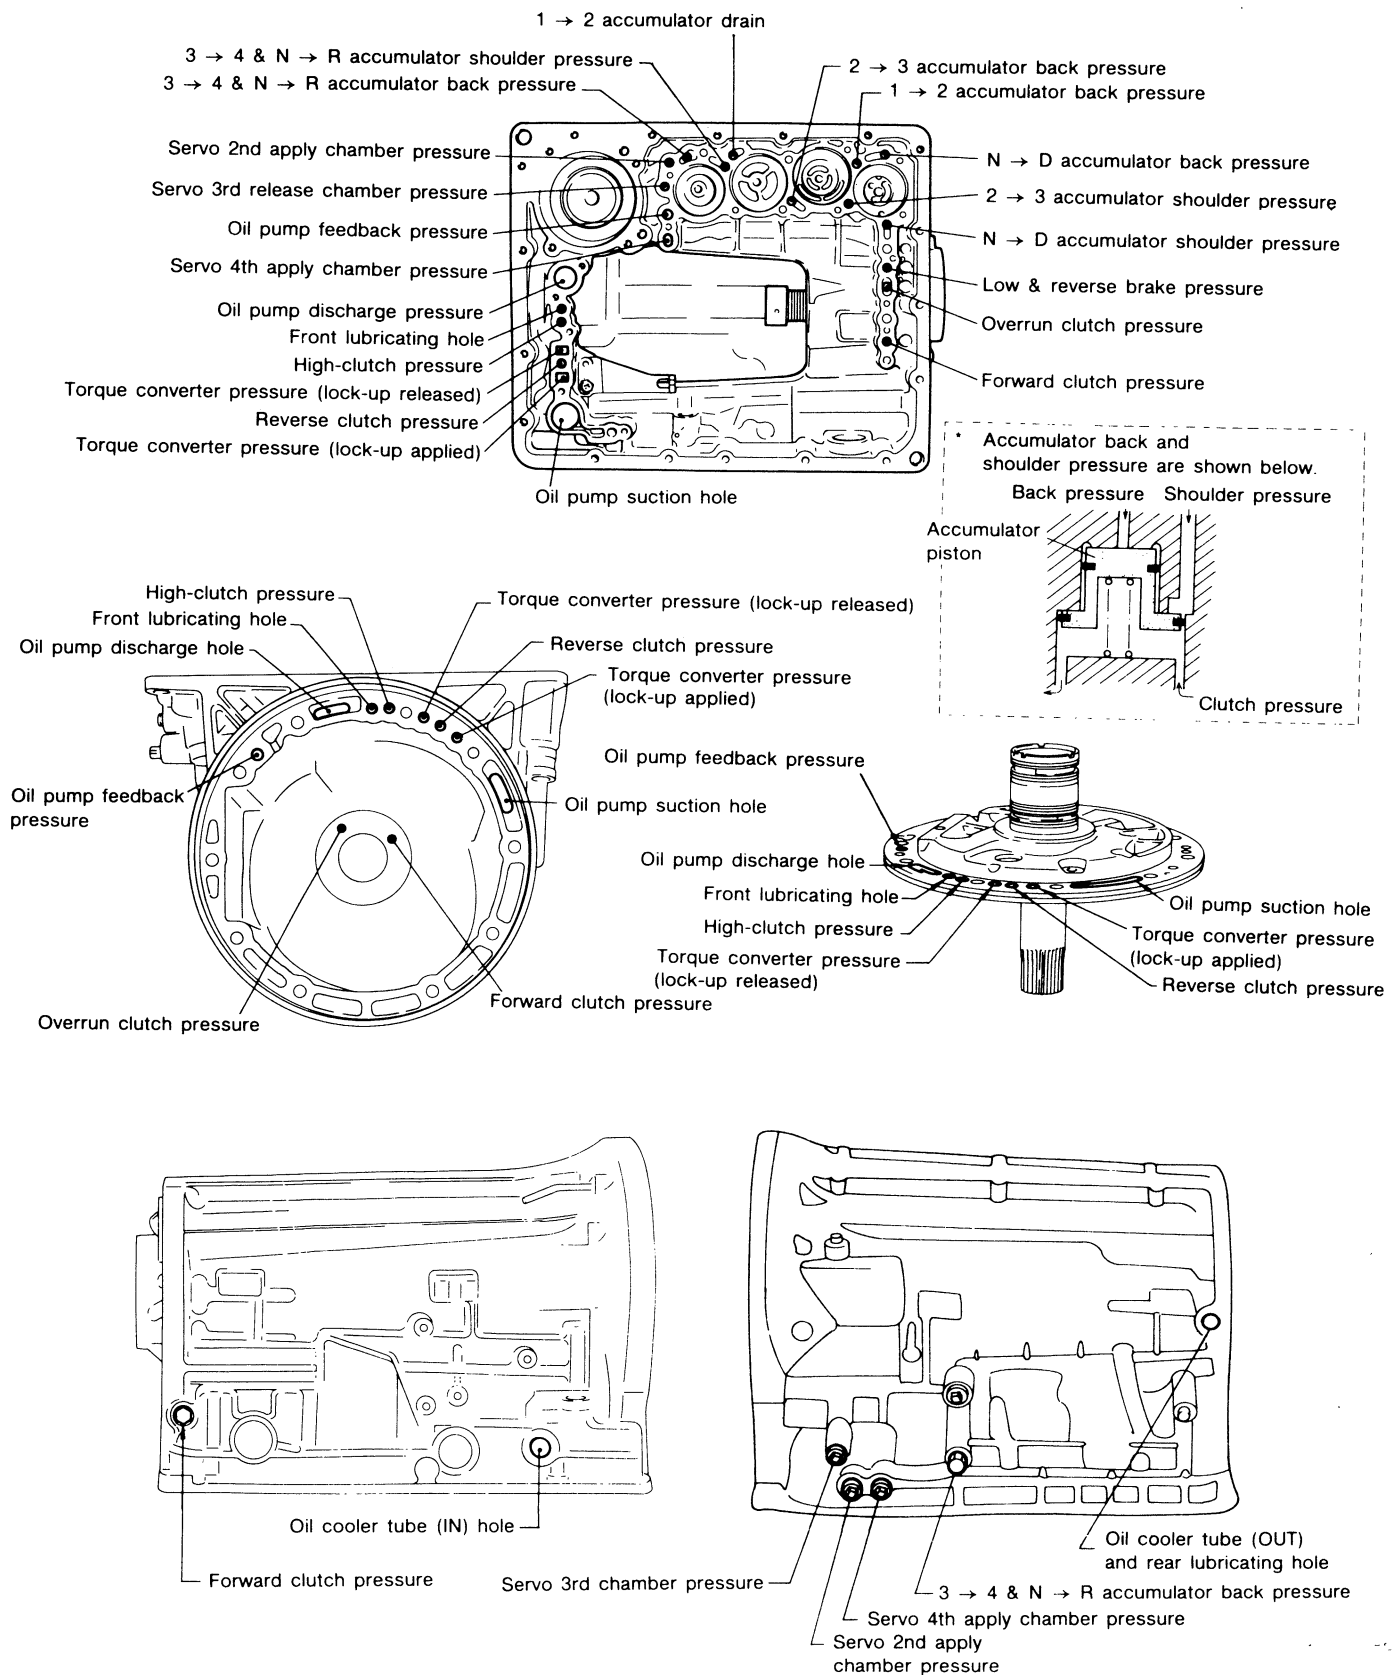

# MAJOR OVERHAUL


## Locations of Needle Bearings, Thrust Washers and Snap Rings

Outer diameter of snap rings

Item number	Outer diameter mm (in)
②	161.0 (6.34)
③	140.1 (5.52)
④	156.4 (6.16)
⑥	142.0 (5.59)
⑦	159.2 (6.27)

Thrust washers

Item number	Color
①	Black
⑤	White

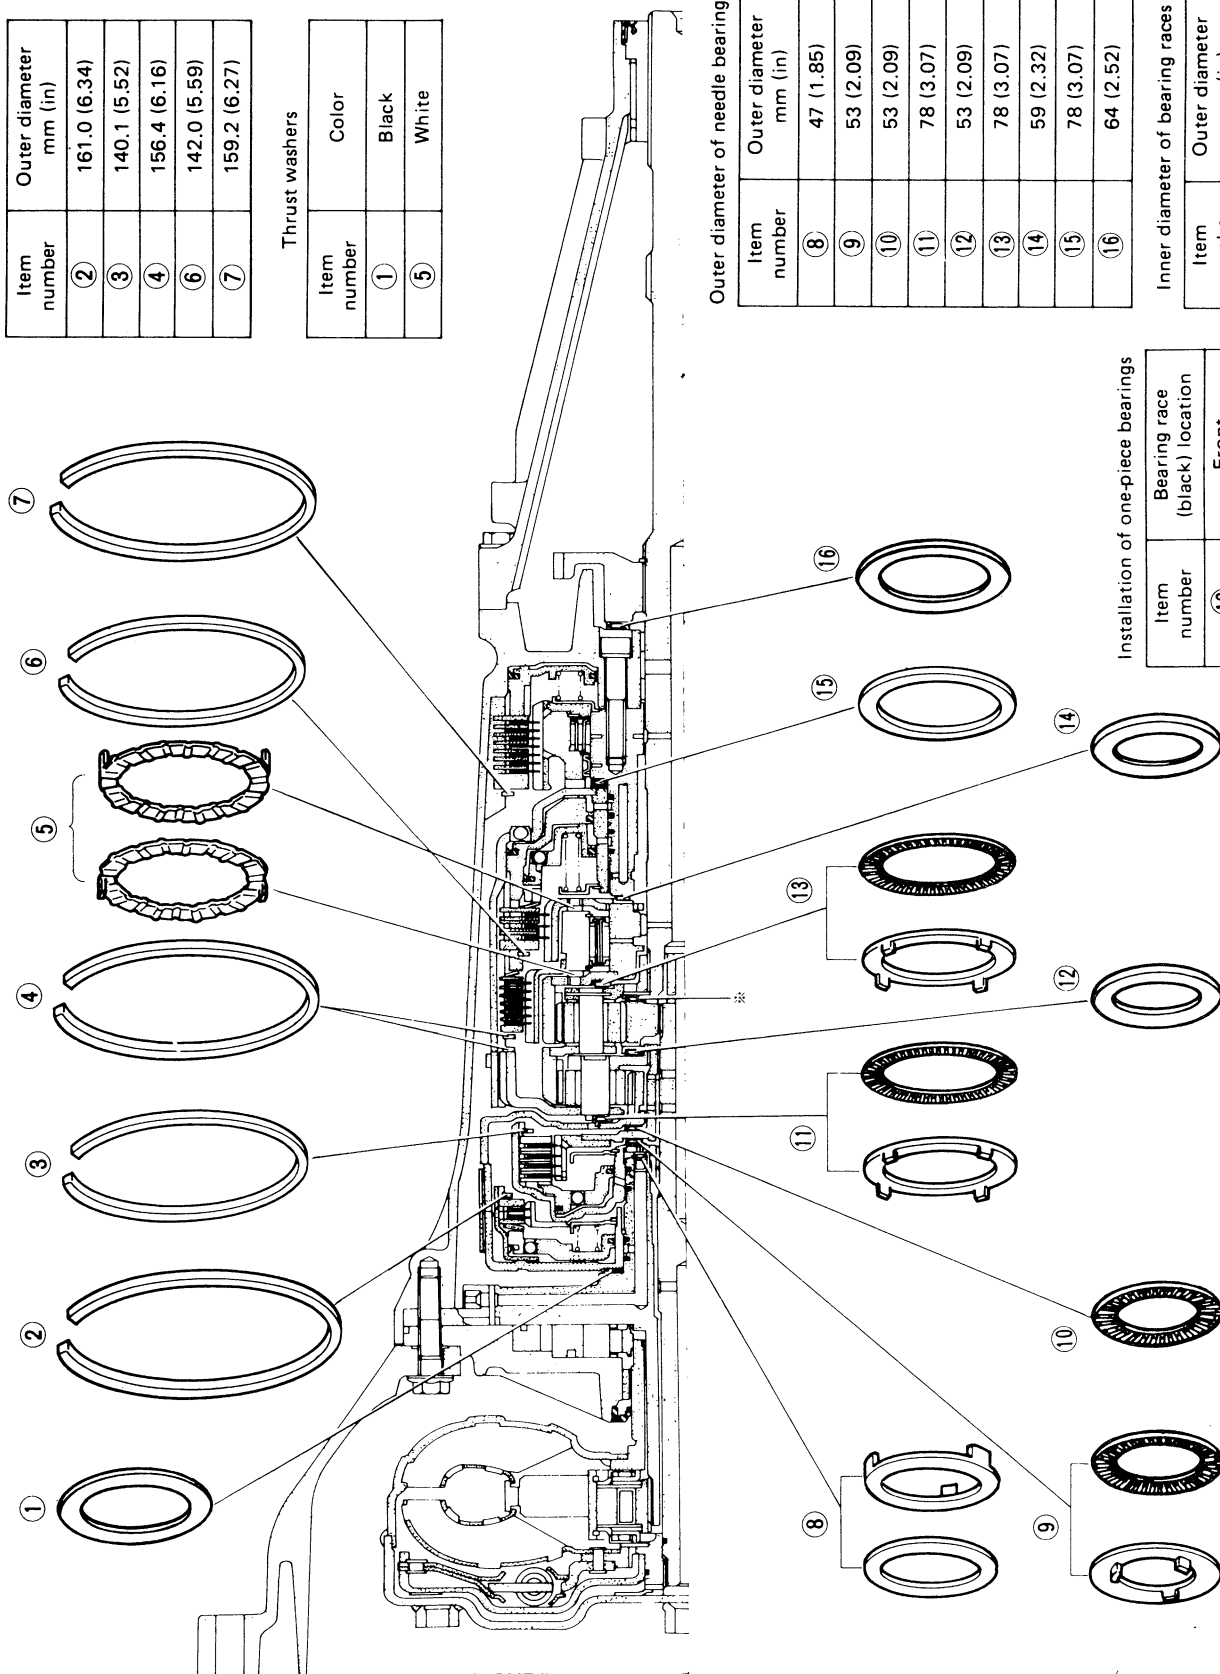

Outer diameter of needle bearings

Item number	Outer diameter mm (in)
⑧	47 (1.85)
⑨	53 (2.09)
⑩	53 (2.09)
⑪	78 (3.07)
⑫	53 (2.09)
⑬	78 (3.07)
⑭	59 (2.32)
⑮	78 (3.07)
⑯	64 (2.52)


Inner diameter of bearing races

Item number	Outer diameter mm (in)
⑪	58 (2.28)
⑬	58.8 (2.315)

Installation of one-piece bearings


Item number	Bearing race (black) location
⑫	Front
⑮	Rear side
⑯	Rear side

## DISASSEMBLY

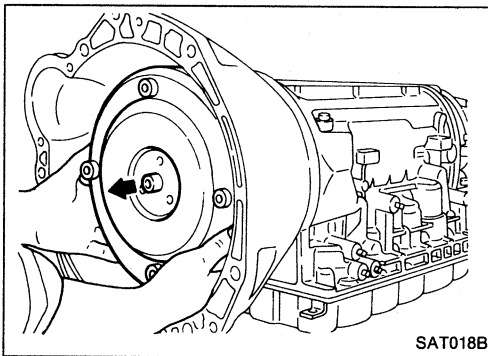


### Disassembly


1. Remove torque converter by holding it firmly and turning while pulling straight out.

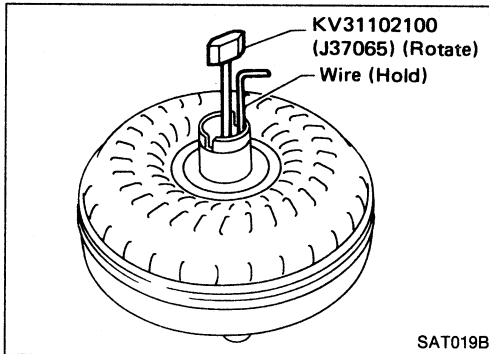


2. Check torque converter one-way clutch.
  - a. Insert Tool into spline of one-way clutch inner race.
  - b. Hook bearing support unitized with one-way clutch outer race with suitable wire.
  - c. Check that one-way clutch inner race rotates only clockwise with Tool while holding bearing support with wire.

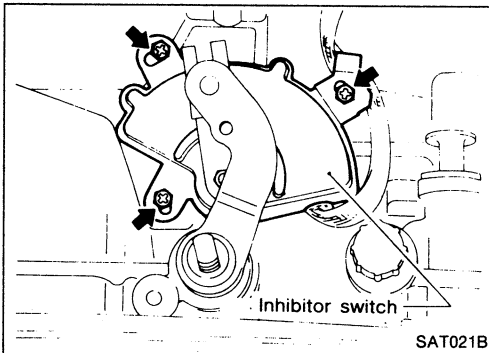

3. Remove inhibitor switch from transmission case.

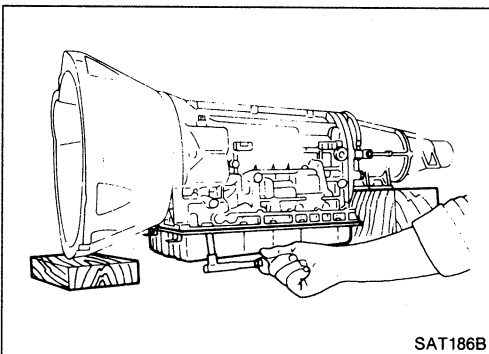


4. Remove oil pan.
  - a. Drain A.T.F. from rear extension.
  - b. Raise oil pan by placing wooden blocks under converter housing and rear extension.
  - c. Separate the oil pan and transmission case.
  - **Always place oil pan straight down so that foreign particles inside will not move.**

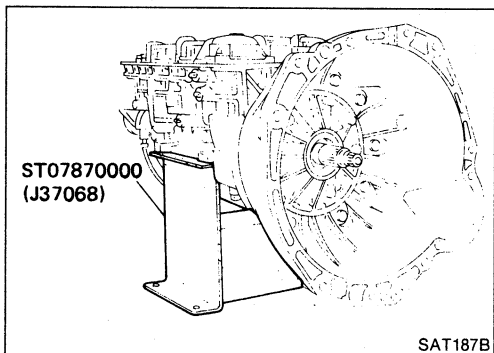

5. Place transmission into Tool with the control valve facing up.


## DISASSEMBLY

### Disassembly (Cont'd)

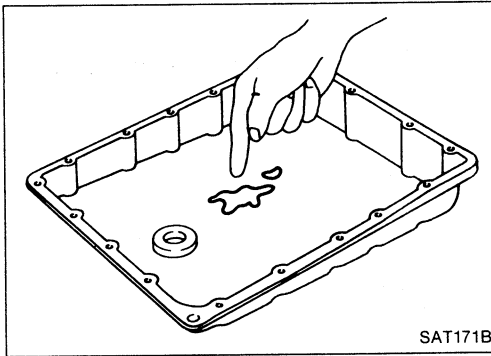


6. Check oil pan and oil strainer for accumulation of foreign particles.
  - If materials of clutch facing are found, clutch plates may be worn.
  - If metal filings are found, clutch plates, brake bands, etc. may be worn.
  - If aluminum filings are found, bushings or aluminum cast parts may be worn.


In above cases, replace torque converter and check unit for cause of particle accumulation.

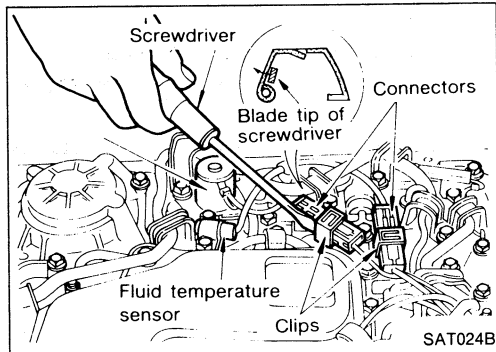


7. Remove lock-up solenoid and fluid temperature sensor connectors.
  - **Be careful not to damage connector.**

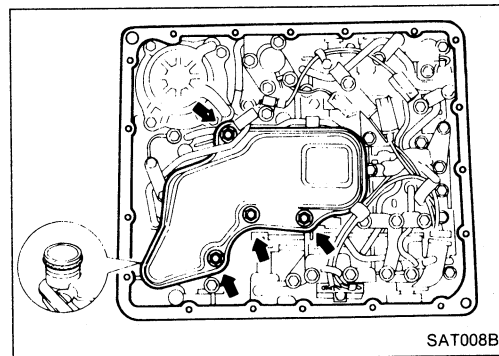

8. Remove oil strainer.
  - a. Remove oil strainer from control valve assembly. Then remove O-ring from oil strainer.

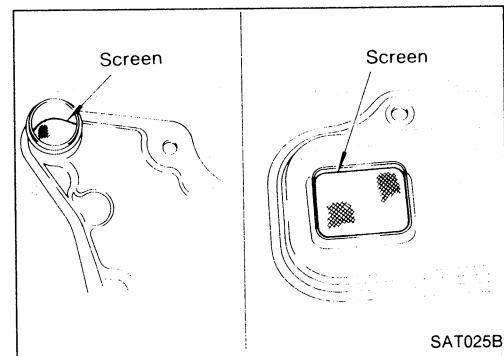

- b. Check oil strainer screen for damage.

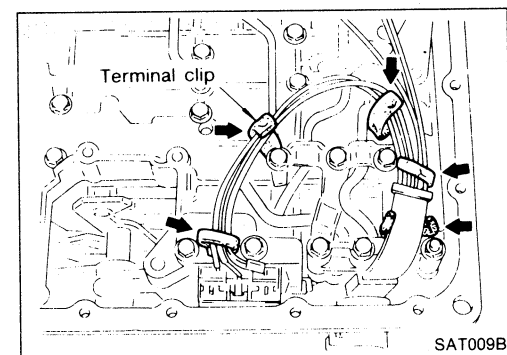



9. Remove control valve assembly.
  - a. Straighten terminal clips to free terminal cords then remove terminal clips.


## DISASSEMBLY

### Disassembly (Cont'd)


- b. Remove bolts **(A)** and **(B)**, and remove control valve assembly from transmission.

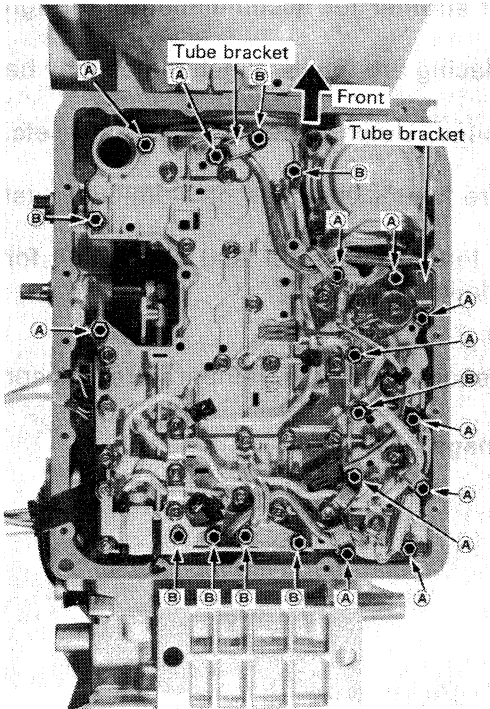

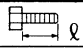
Bolt	ℓ mm (in)	
<b>(A)</b>	33 mm (1.30 in)	
<b>(B)</b>	45 mm (1.77 in)	

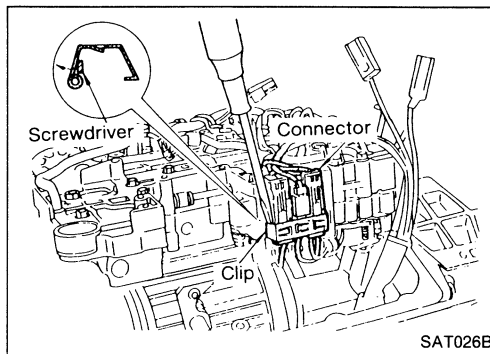

- c. Remove solenoid connector.
- Be careful not to damage connector.

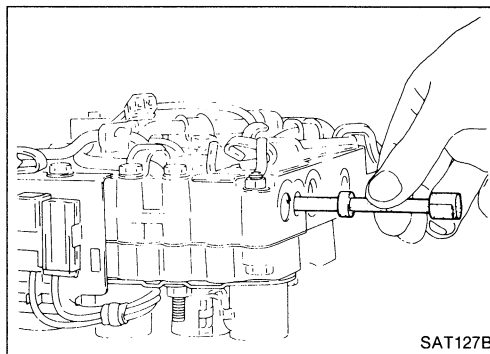

- d. Remove manual valve from control valve assembly.

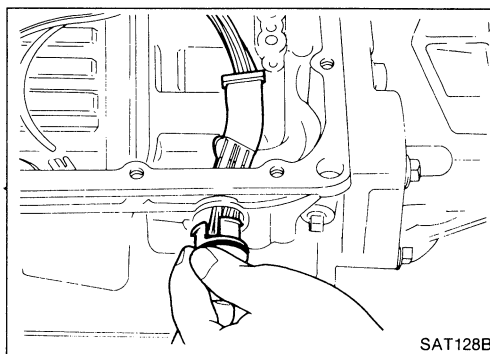


10. Remove terminal cord assembly from transmission case while pushing on stopper.
- Be careful not to damage cord.
  - Do not remove terminal cord assembly unless it is damaged.


# DISASSEMBLY

## Disassembly (Cont'd)

11. Remove converter housing from transmission case.

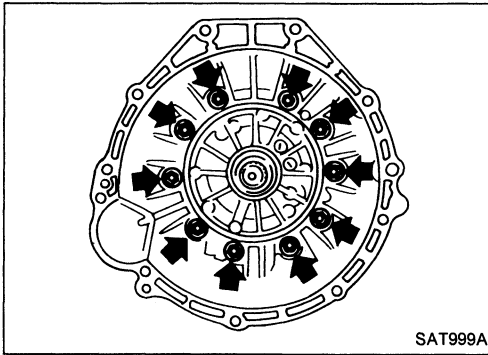


12. Remove O-ring from input shaft.

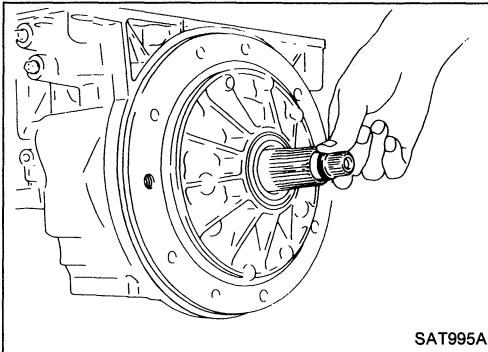

13. Remove oil pump assembly.


a. Attach Tool to oil pump assembly and extract it evenly from transmission case.

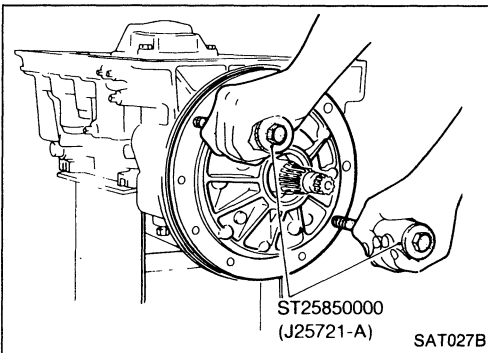


b. Remove O-ring from oil pump assembly.

c. Remove traces of sealant from oil pump housing.

● **Be careful not to scratch pump housing.**

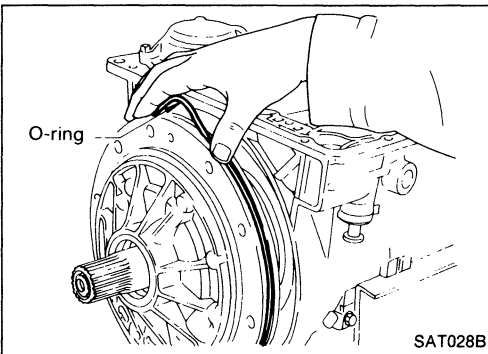


d. Remove needle bearing and thrust washer from oil pump assembly.

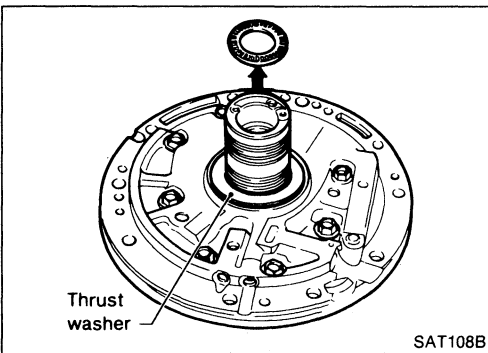

## DISASSEMBLY


### Disassembly (Cont'd)

14. Remove input shaft and oil pump gasket.

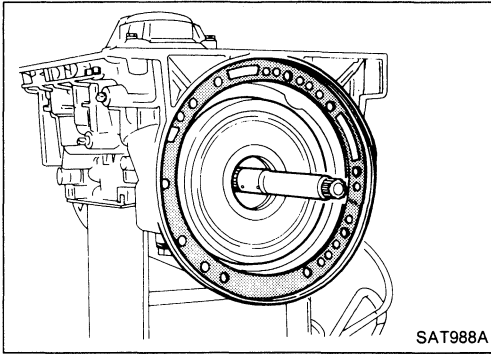


15. Remove brake band and band strut.


a. Loosen lock nut and remove band servo anchor end pin from transmission case.

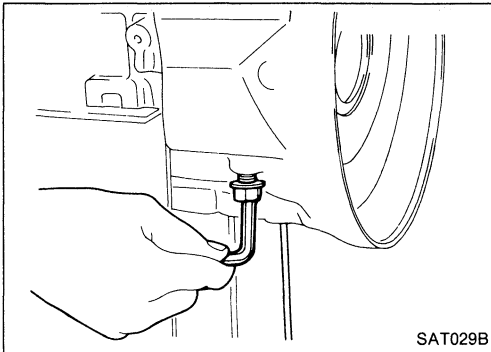

b. Remove brake band and band strut from transmission case.

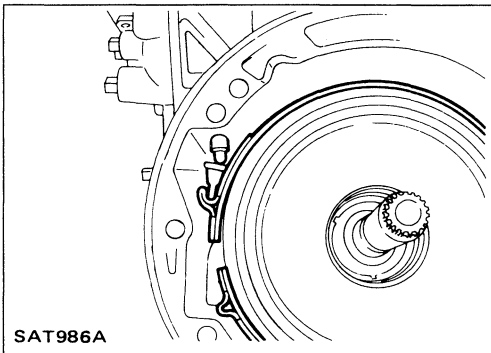


c. Hold brake band in a circular shape with clip.

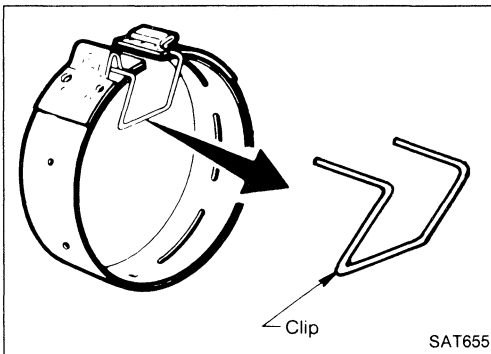

16. Remove front side clutch and gear components.


a. Remove clutch pack (reverse clutch, high clutch and front sun gear) from transmission case.

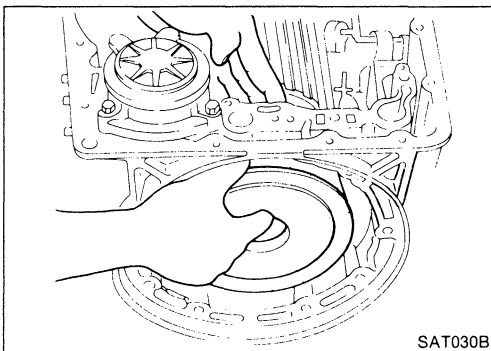




## DISASSEMBLY


### Disassembly (Cont'd)

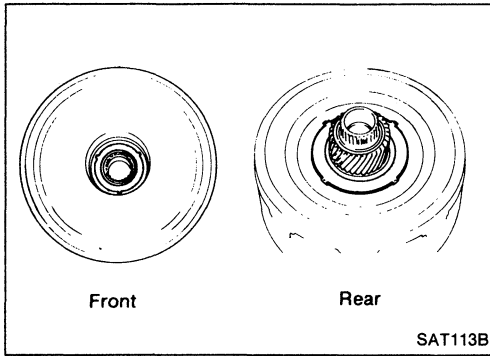


- b. Remove front bearing race from clutch pack.
- c. Remove rear bearing race from clutch pack.

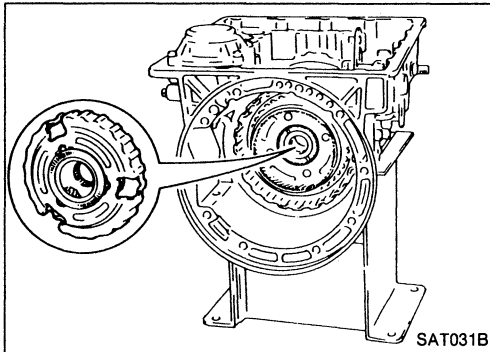


- d. Remove front planetary carrier from transmission case.

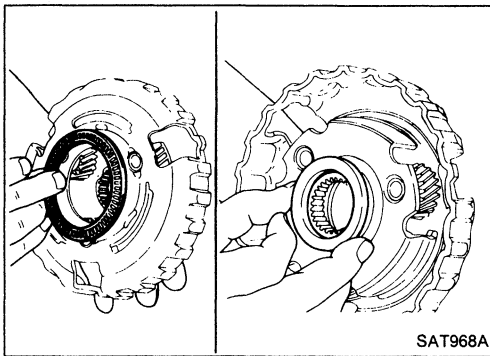

- e. Remove front needle bearing from front planetary carrier.
- f. Remove rear needle bearing from front planetary carrier.

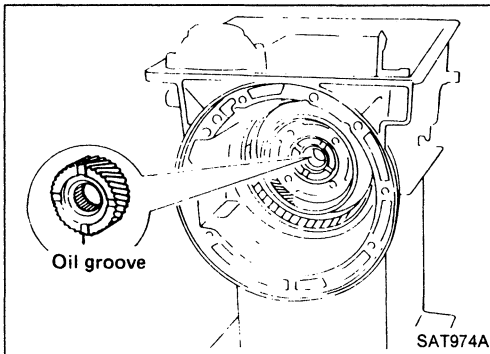


- g. Remove rear sun gear from transmission case.

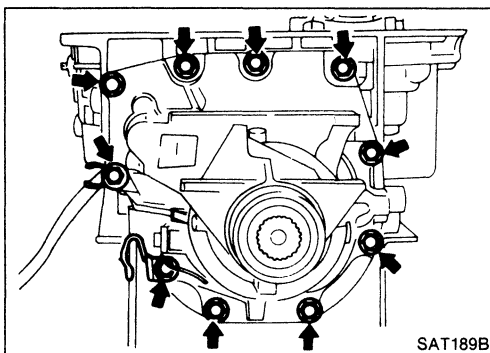


- 17. Remove rear extension.
  - a. Remove rear extension from transmission case.
  - b. Remove rear extension gasket from transmission case.

## DISASSEMBLY


### Disassembly (Cont'd)

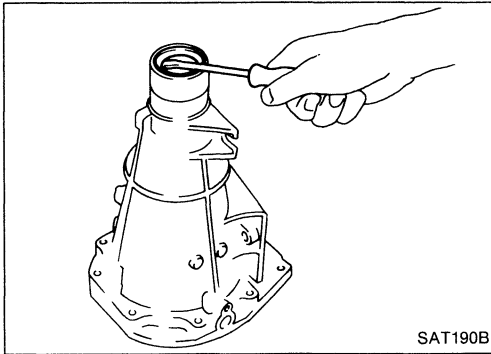


- c. Remove oil seal from rear extension.
- **Do not remove oil seal unless it is to be replaced.**

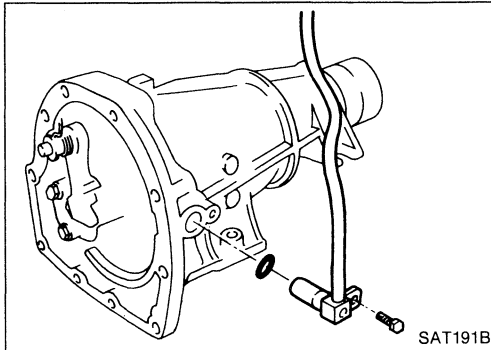


- d. Remove revolution sensor from rear extension.
- e. Remove O-ring from revolution sensor.

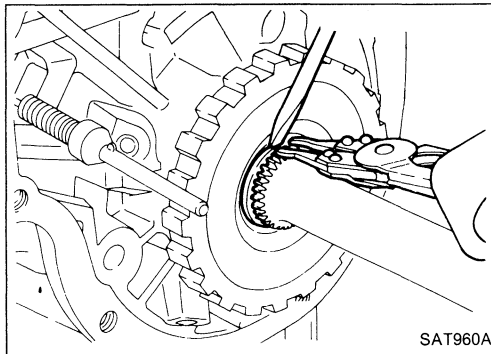

- 18. Remove output shaft and parking gear.
- a. Remove rear snap ring from output shaft.

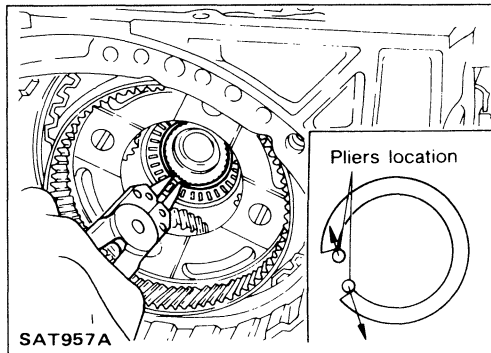

- b. Slowly push output shaft all the way forward.
- **Do not use excessive force.**
- c. Remove snap ring from output shaft.

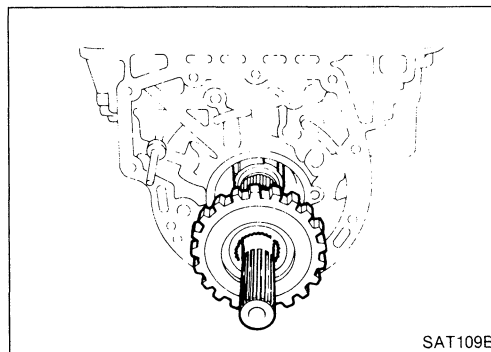


- d. Remove output shaft and parking gear as a unit from transmission case.
- e. Remove parking gear from output shaft.


## DISASSEMBLY

### Disassembly (Cont'd)


- f. Remove needle bearing from transmission case.

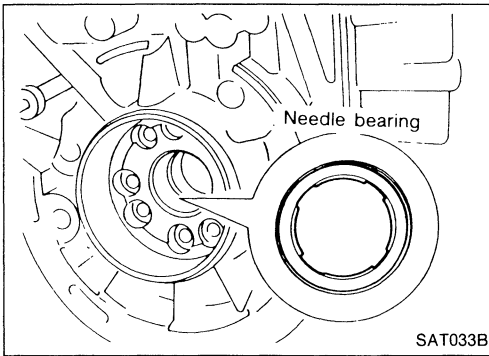


19. Remove rear side clutch and gear components.  
a. Remove front internal gear.

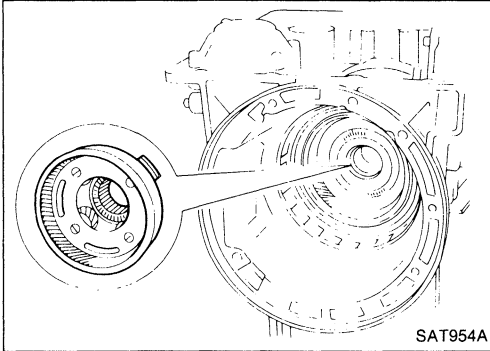


- b. Remove bearing race from front internal gear.

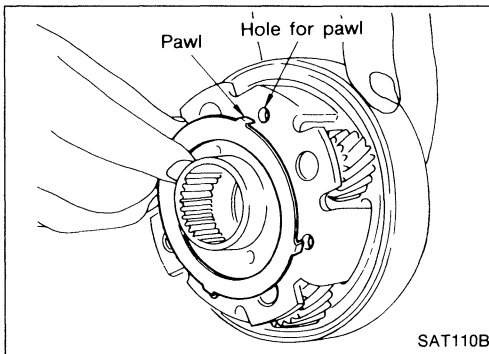

- c. Remove needle bearing from rear internal gear.

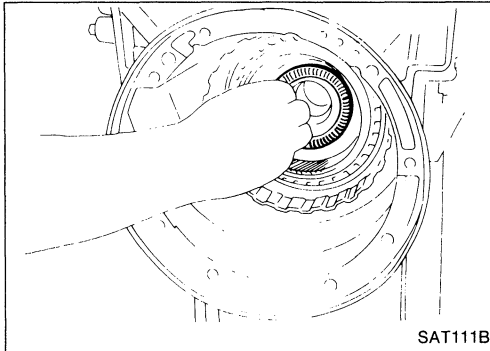


- d. Remove rear internal gear, forward clutch hub and overrun clutch hub as a set from transmission case.

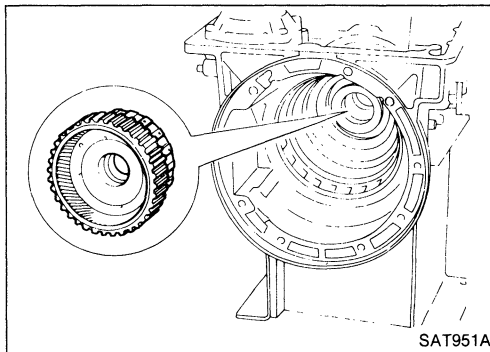


## DISASSEMBLY


### Disassembly (Cont'd)

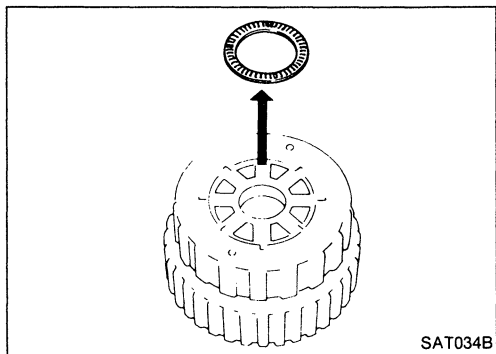


e. Remove needle bearing from overrun clutch hub.

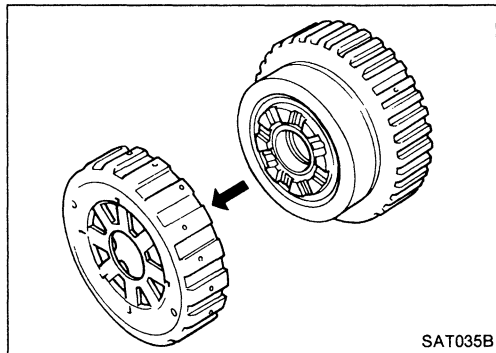


f. Remove overrun clutch hub from rear internal gear and forward clutch hub.

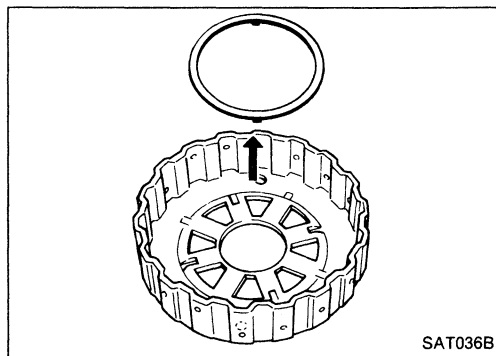

g. Remove thrust washer from overrun clutch hub.

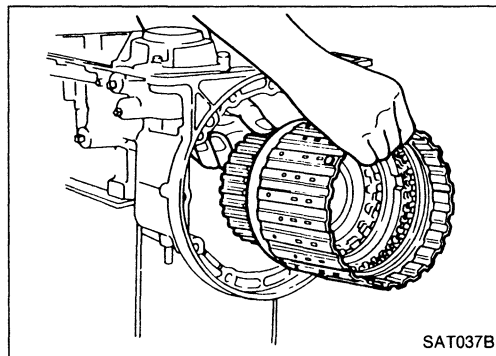


h. Remove forward clutch assembly from transmission case.

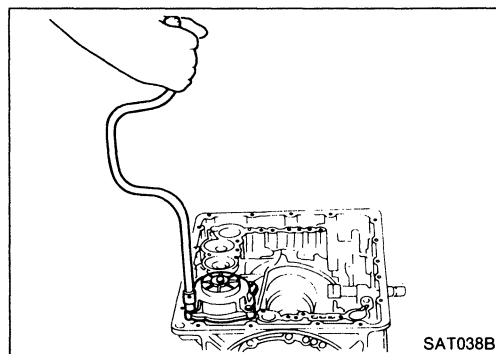


20. Remove band servo and accumulator components.  
a. Remove band servo retainer from transmission case.

## DISASSEMBLY

### Disassembly (Cont'd)

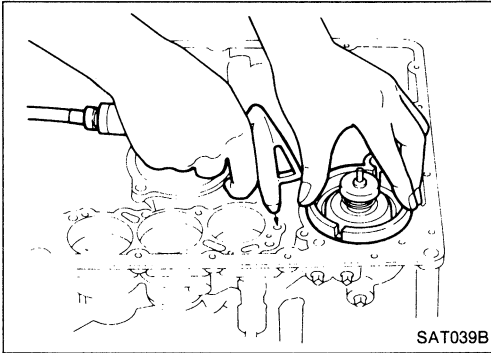


- b. Apply compressed air to oil hole until band servo piston comes out of transmission case.
- **Hold piston with a rag and gradually direct air to oil hole.**
- c. Remove return springs.

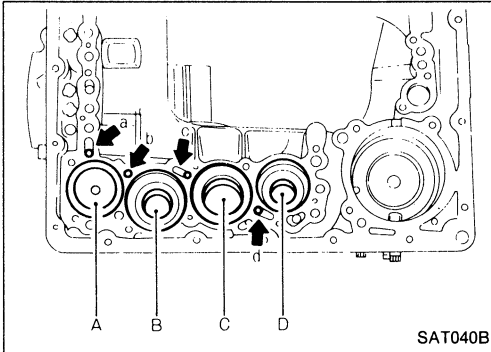


- d. Remove springs from accumulator pistons B, C and D.
- e. Apply compressed air to each oil hole until piston comes out.
- **Hold piston with a rag and gradually direct air to oil hole.**


Identification of accumulator pistons	A	B	C	D
Identification of oil holes	a	b	c	d

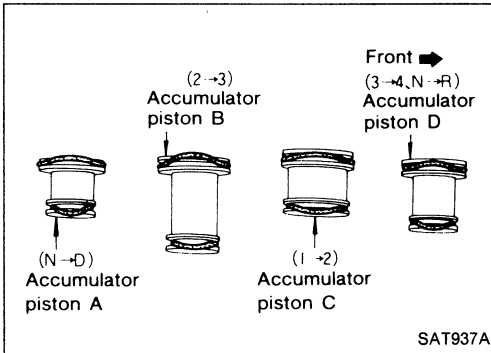

- f. Remove O-ring from each piston.

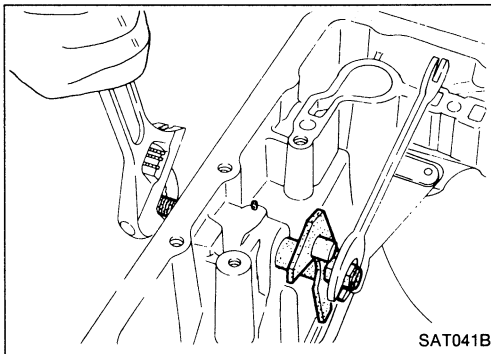


- 21. Remove manual shaft components, if necessary.
- a. Hold width across flats of manual shaft (outside the transmission case) and remove lock nut from shaft.

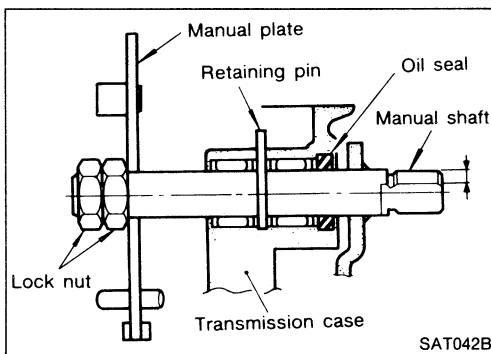


- b. Remove retaining pin from transmission case.

## DISASSEMBLY


### Disassembly (Cont'd)

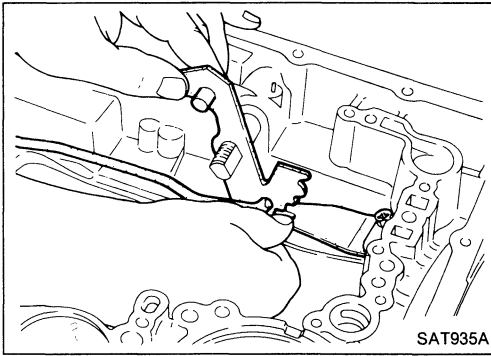


- c. While pushing detent spring down, remove manual plate and parking rod from transmission case.

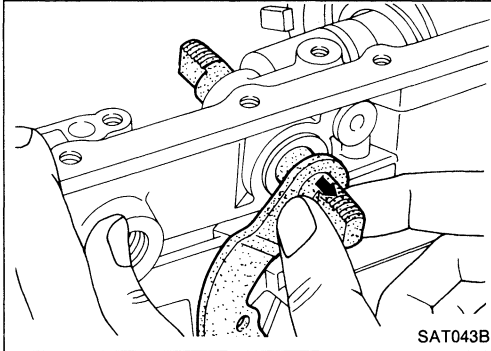

- d. Remove manual shaft from transmission case.

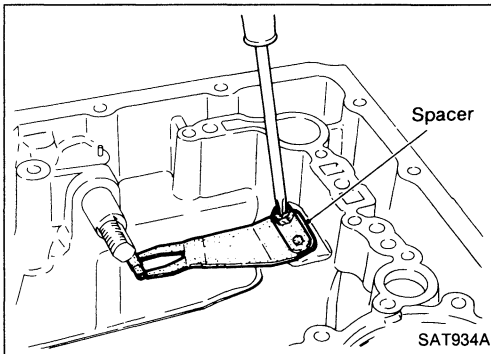



- e. Remove spacer and detent spring from transmission case.

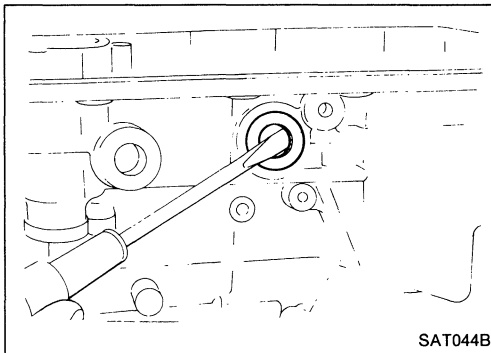

- f. Remove oil seal from transmission case.


# REPAIR FOR COMPONENT PARTS

## Oil Pump

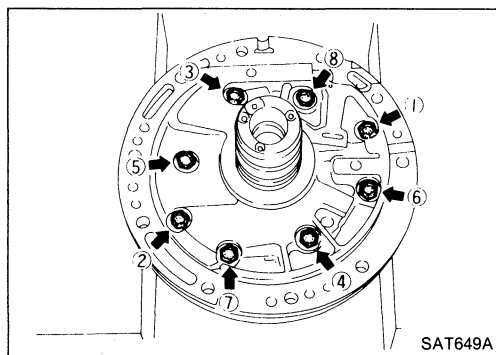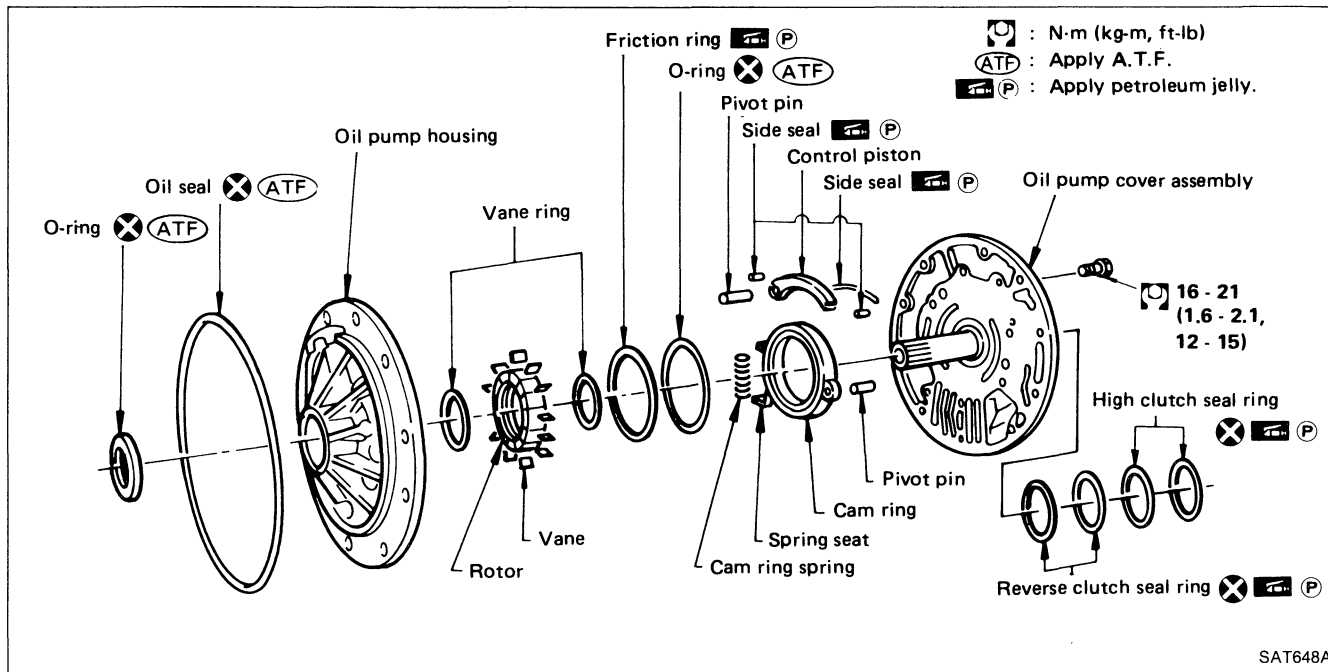


### DISASSEMBLY

1. Loosen bolts in numerical order and remove oil pump cover.

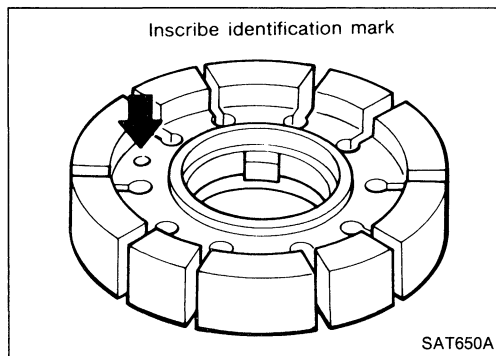

2. Remove rotor, vane rings and vanes.

- Inscribe a mark on back of rotor for identification of fore-aft direction when reassembling rotor. Then remove rotor.

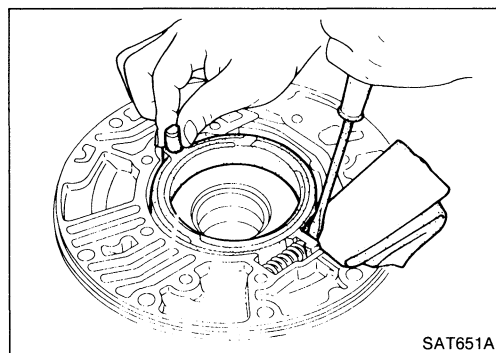


3. While pushing on cam ring remove pivot pin.


- Be careful not to scratch oil pump housing.

## REPAIR FOR COMPONENT PARTS


### Oil Pump (Cont'd)

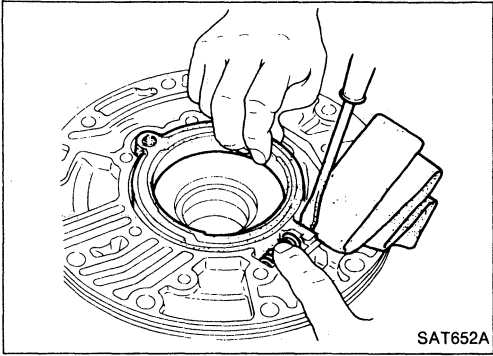


4. While holding cam ring and spring lift out cam ring spring.
  - Be careful not to damage oil pump housing.
  - Hold cam ring spring to prevent it from jumping.

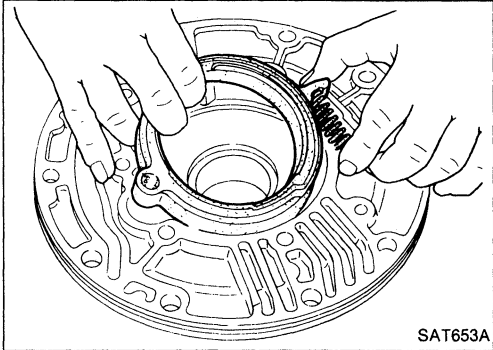


5. Remove cam ring and cam ring spring from oil pump housing.

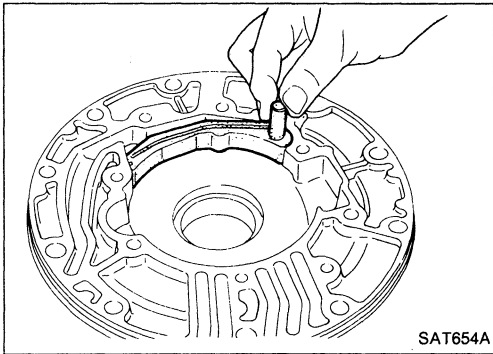

6. Remove pivot pin from control piston and remove control piston assembly.

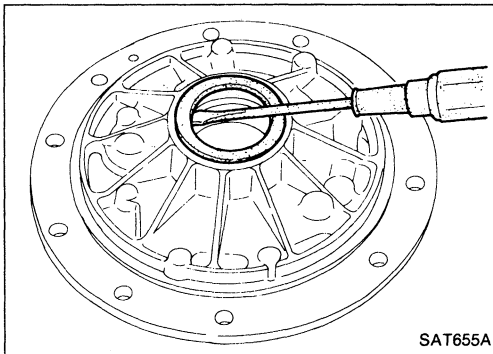

7. Remove oil seal from oil pump housing.
  - Be careful not to scratch oil pump housing.

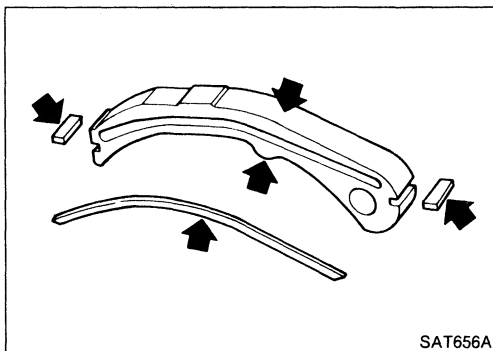


### INSPECTION

Oil pump cover, rotor, vanes, control piston, side seals, cam ring and friction ring

- Check for wear or damage.



## REPAIR FOR COMPONENT PARTS

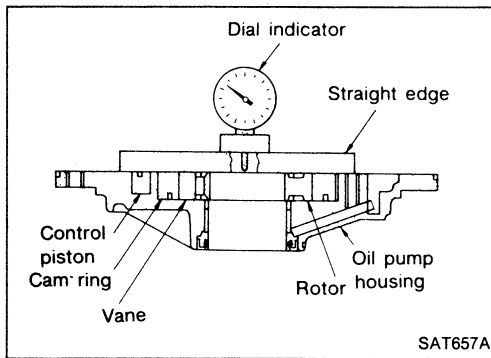

### Oil Pump (Cont'd)

#### Side clearances

- Measure side clearances between end of oil pump housing and cam ring, rotor, vanes and control piston in at least four places along their circumferences. Maximum measured values should be within specified ranges.

- **Before measuring side clearance, check that friction rings, O-ring, control piston side seals and cam ring spring are removed.**

**Standard clearance:**


#### Cam ring

0.01 - 0.024 mm (0.0004 - 0.0009 in)

#### Rotor, vanes, control piston

0.03 - 0.044 mm (0.0012 - 0.0017 in)

- If not within standard clearance, replace oil pump assembly except oil pump cover assembly.

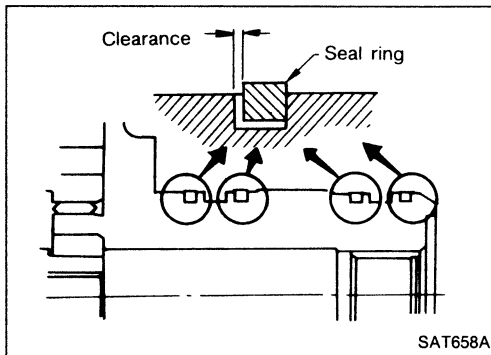

#### Seal ring clearance

- Measure clearance between seal ring and ring groove.


**Standard clearance:**

0.10 - 0.25 mm (0.0039 - 0.0098 in)

**Wear limit:**


0.25 mm (0.0098 in)

- If not within wear limit, replace oil pump cover assembly.

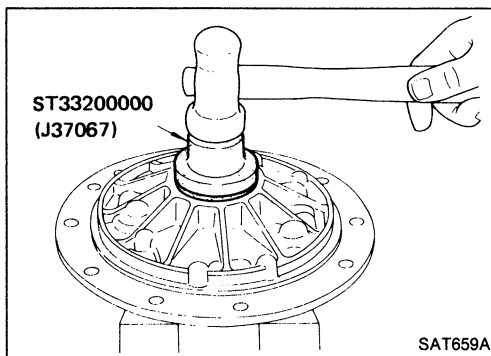

#### ASSEMBLY


1. Drive oil seal into oil pump housing.
  - **Apply A.T.F. to outer periphery and lip surface.**

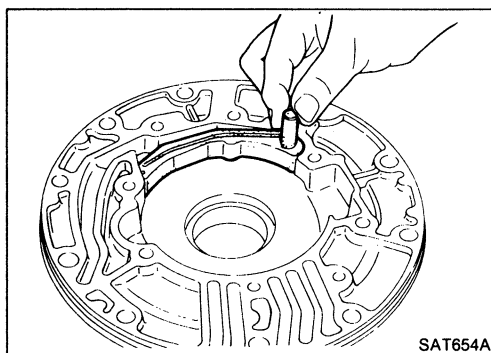


2. Install cam ring in oil pump housing by the following steps.
  - a. Install side seal on control piston.
    - **Pay attention to its direction — Black surface goes toward control piston.**
    - **Apply petroleum jelly to side seal.**
  - b. Install control piston on oil pump.

## REPAIR FOR COMPONENT PARTS


### Oil Pump (Cont'd)

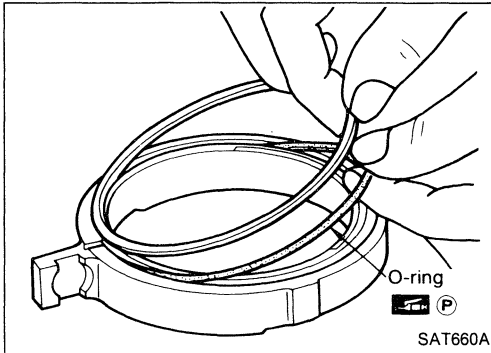


- c. Install O-ring and friction ring on cam ring.
- **Apply petroleum jelly to O-ring.**

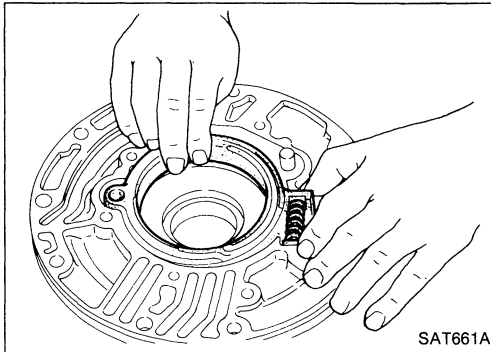


- d. Assemble cam ring, cam ring spring and spring seat. Install spring by pushing it against pump housing.

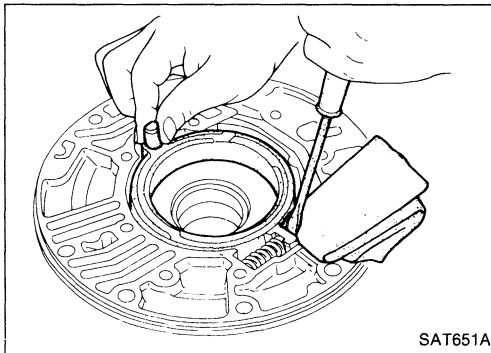

- e. While pushing on cam ring install pivot pin.

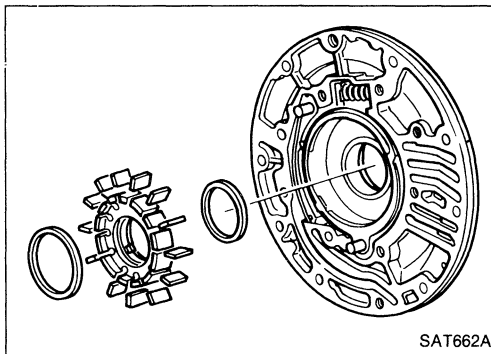


3. Install rotor, vanes and vane rings.
- **Pay attention to direction of rotor.**

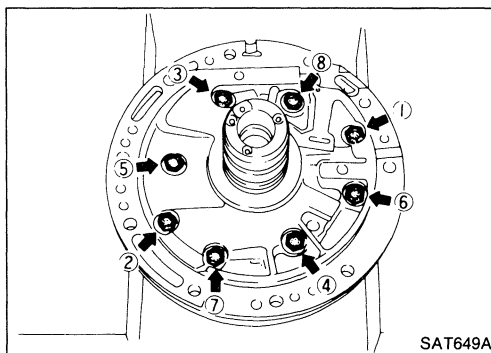

4. Install oil pump housing and oil pump cover.
- a. Wrap masking tape around splines of oil pump cover assembly to protect seal. Position oil pump cover assembly in oil pump housing assembly, then remove masking tape.
- b. Tighten bolts in a criss-cross pattern.

## REPAIR FOR COMPONENT PARTS


### Oil Pump (Cont'd)

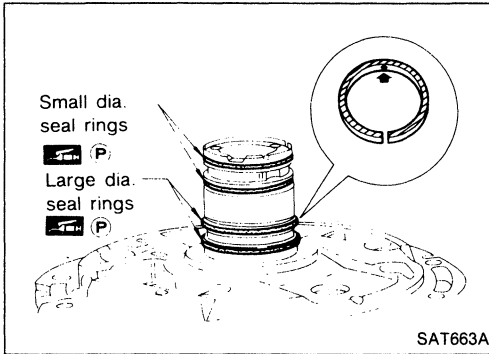

5. Install seal rings carefully after packing ring grooves with petroleum jelly. Press rings down into jelly to a close fit.
- Seal rings come in two different diameters. Check fit carefully in each groove.
    - Small dia. seal ring:
      - No mark
    - Large dia. seal ring:
      - Yellow mark in area shown by arrow
  - Do not spread gap of seal ring excessively while installing. It may deform ring.

# REPAIR FOR COMPONENT PARTS

## Control Valve Assembly

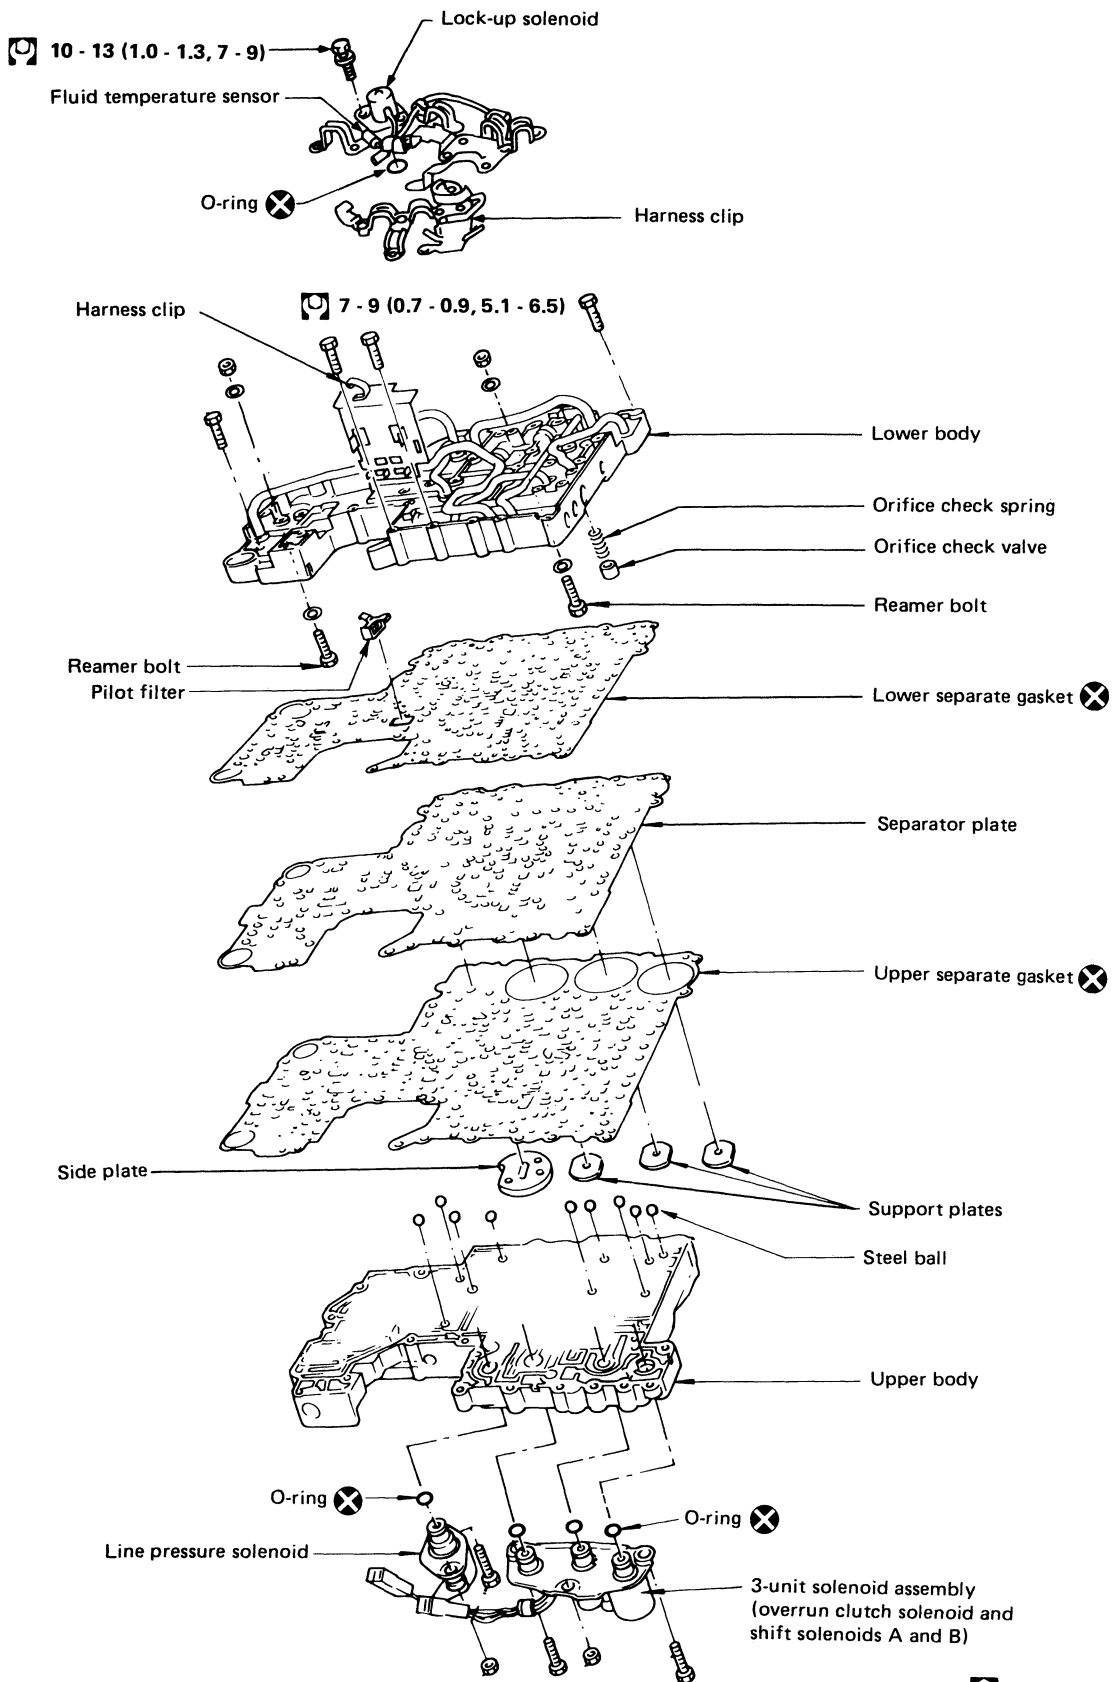


: N·m (kg·m, ft·lb)


## REPAIR FOR COMPONENT PARTS

### Control Valve Assembly (Cont'd)


#### DISASSEMBLY

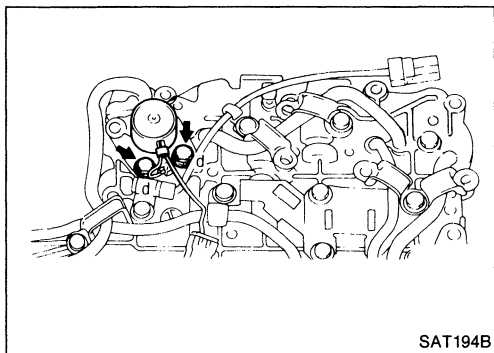


1. Remove solenoids.
  - a. Remove lock-up solenoid and side plate from lower body.
  - b. Remove O-ring from solenoid.

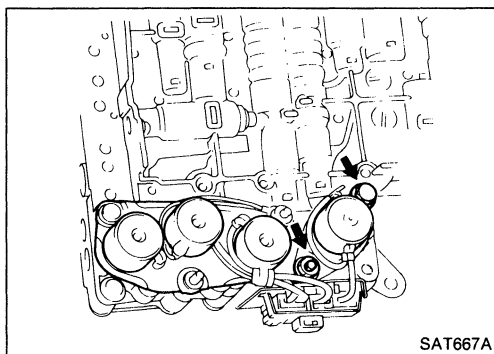


- c. Remove line pressure solenoid from upper body.
  - d. Remove O-ring from solenoid.

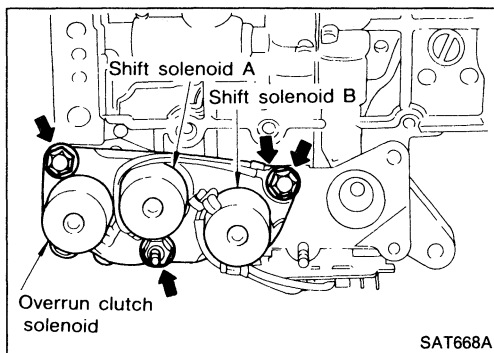

- e. Remove 3-unit solenoid assembly from upper body.
  - f. Remove O-rings from solenoids.

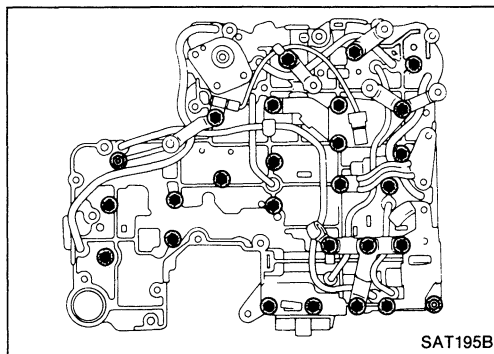

2. Disassemble upper and lower bodies.
  - a. Place upper body facedown, and remove bolts, reamer bolts and support plates.
  - b. Remove lower body, separator plate and separate gasket as a unit from upper body.
  - **Be careful not to drop pilot filter, orifice check valve, spring and steel balls.**





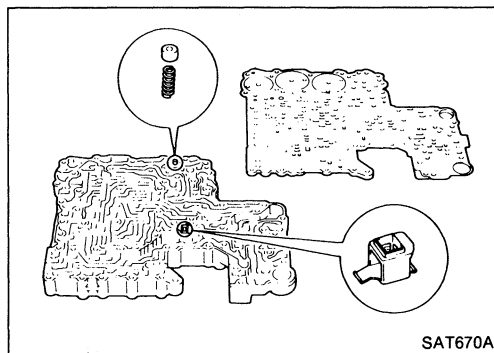


- c. Place lower body facedown, and remove separate gasket and separator plate.
  - d. Remove pilot filter, orifice check valve and orifice check spring.

## REPAIR FOR COMPONENT PARTS

### Control Valve Assembly (Cont'd)

- e. Check to see that steel balls are properly positioned in upper body and then remove them from upper body.

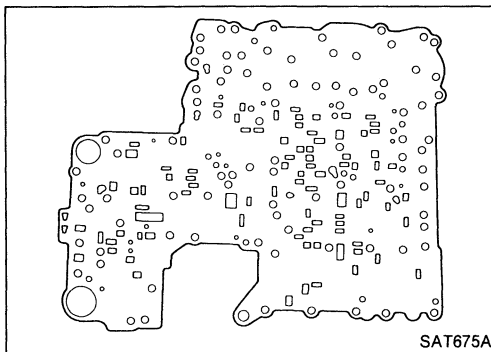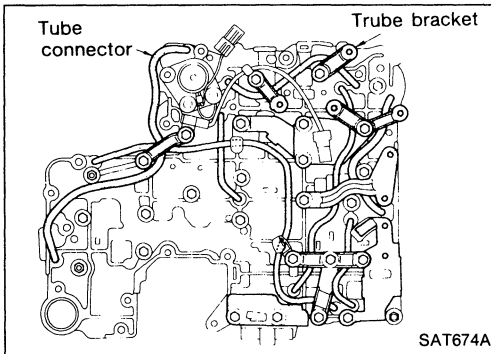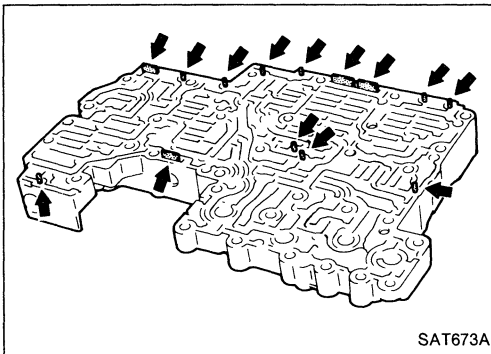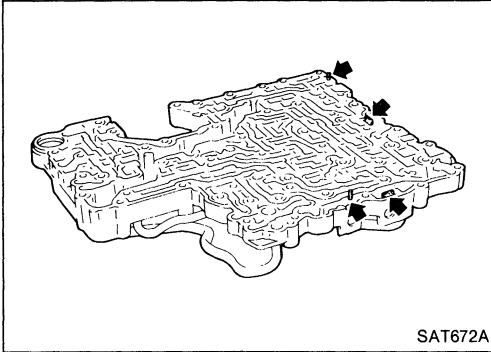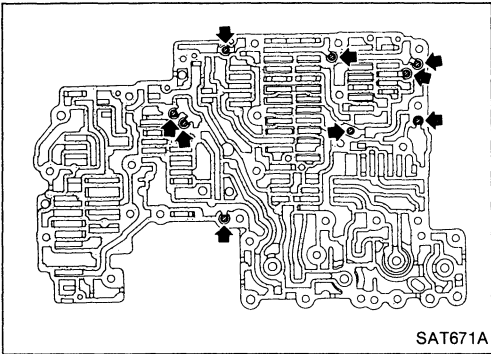

### INSPECTION

#### Lower and upper bodies

- Check to see that there are pins and retainer plates in lower body.

- Check to see that there are pins and retainer plates in upper body.
- **Be careful not to lose these parts.**

- Check to make sure that oil circuits are clean and free from damage.
- Check tube brackets and tube connectors for damage.

#### Separator plates


- Check to make sure that separator plate is free of damage and not deformed and oil holes are clean.

## REPAIR FOR COMPONENT PARTS

### Control Valve Assembly (Cont'd)


#### Pilot filter

- Check to make sure that filter is not clogged or damaged.

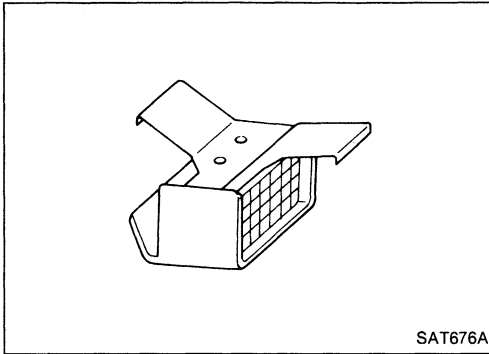


#### Lock-up solenoid

- Check that filter is not clogged or damaged.
- Measure resistance. — Refer to "Electrical Components Inspection".

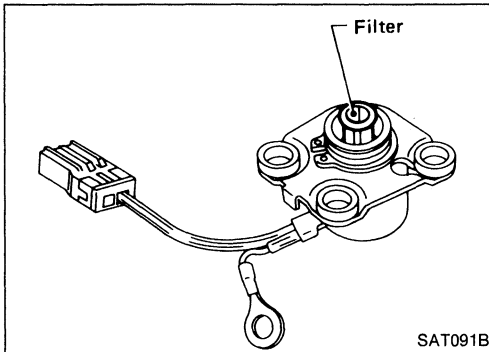


#### Line pressure solenoid

- Check that filter is not clogged or damaged.
- Measure resistance. — Refer to "Electrical Components Inspection".

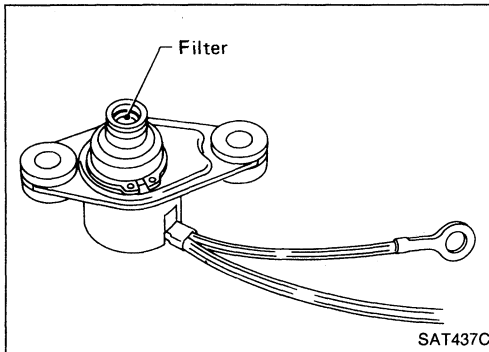


#### 3-unit solenoid assembly (Overrun clutch solenoid and shift solenoids A and B)

- Measure resistance of each solenoid. — Refer to "Electrical Components Inspection".

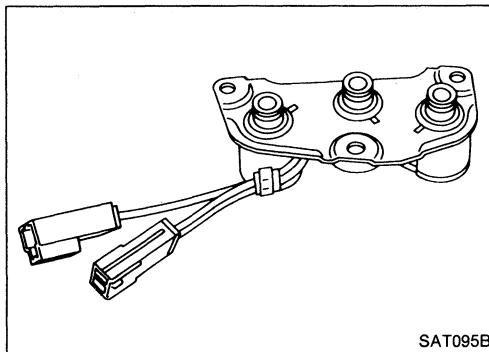

#### Fluid temperature sensor


- Measure resistance. — Refer to "Electrical Components Inspection".

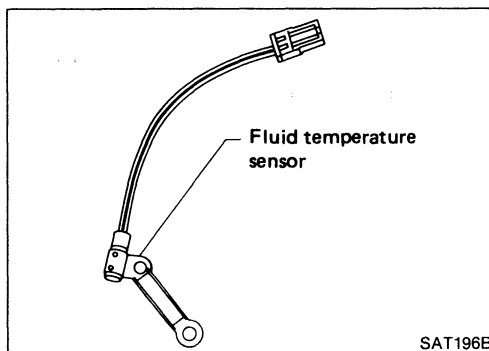


# REPAIR FOR COMPONENT PARTS

## Control Valve Assembly (Cont'd)


### ASSEMBLY

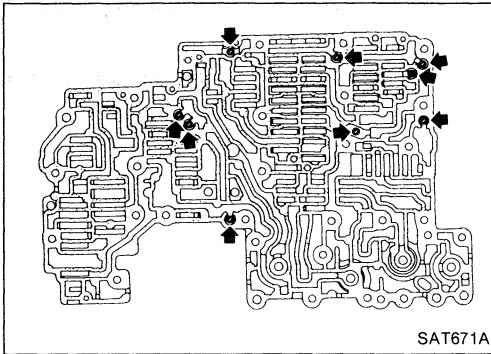


1. Install upper and lower bodies.
  - a. Place oil circuit of upper body face up. Install steel balls in their proper positions.

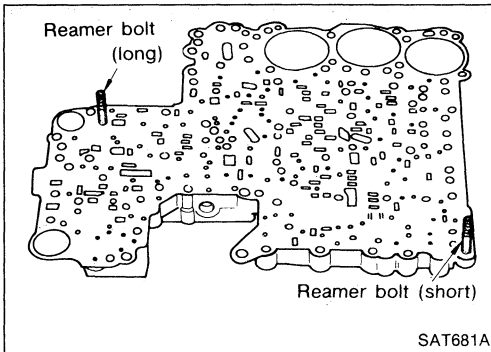

- b. Install reamer bolts from bottom of upper body and install separate gaskets.

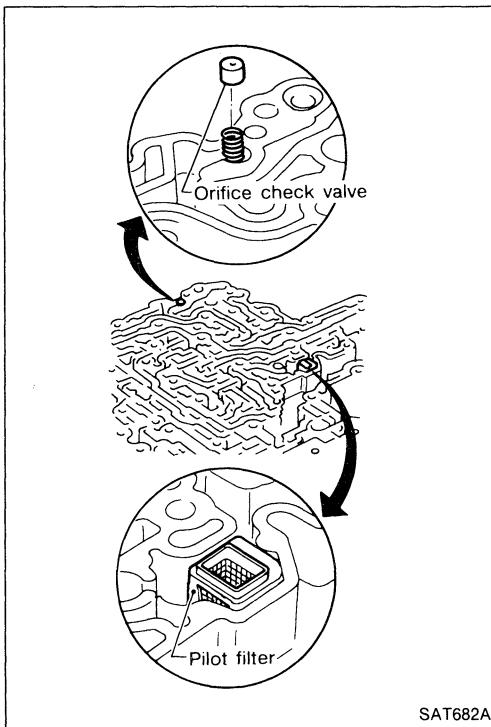

- c. Place oil circuit of lower body face up. Install orifice check spring, orifice check valve and pilot filter.

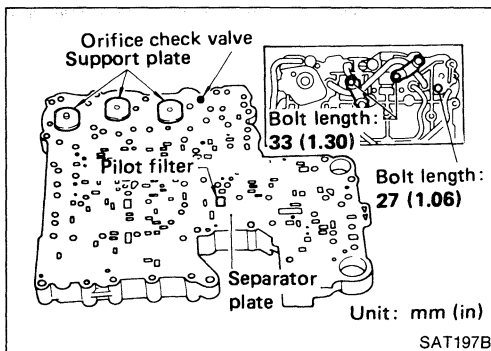


- d. Install lower separate gaskets and separator plates on lower body.
  - e. Install and temporarily tighten support plates, fluid temperature sensor and tube brackets.




# REPAIR FOR COMPONENT PARTS

## Control Valve Assembly (Cont'd)

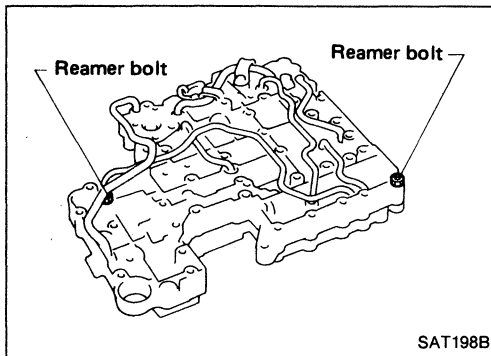


- f. Temporarily assemble lower and upper bodies, using reamer bolt as a guide.
- **Be careful not to dislocate or drop steel balls, orifice check spring, orifice check valve and pilot filter.**

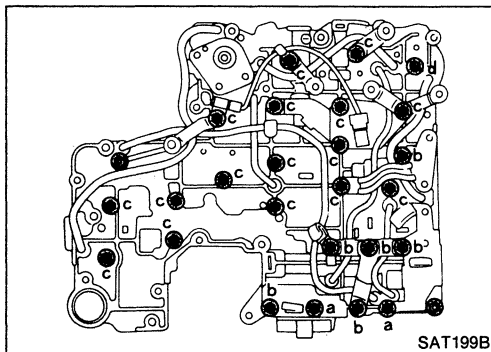


- g. Install and temporarily tighten bolts and tube brackets in their proper locations.

### Bolt length and location:


Item	Bolt symbol	a	b	c	d
Bolt length	mm (in)	70 (2.76)	50 (1.97)	33 (1.30)	27 (1.06)

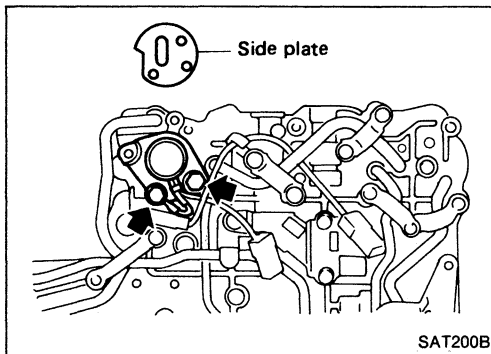

2. Install solenoids.
- a. Attach O-ring and install lock-up solenoid and side plates onto lower body.

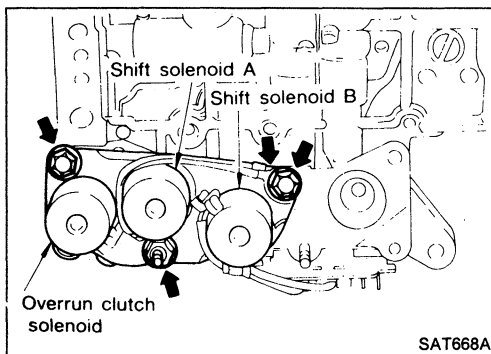


- b. Attach O-rings and install 3-unit solenoids assembly onto upper body.

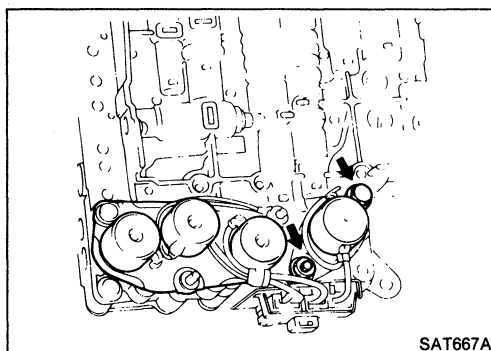

- c. Attach O-ring and install line pressure solenoid onto upper body.
3. Tighten all bolts.

# REPAIR FOR COMPONENT PARTS

## Control Valve Upper Body

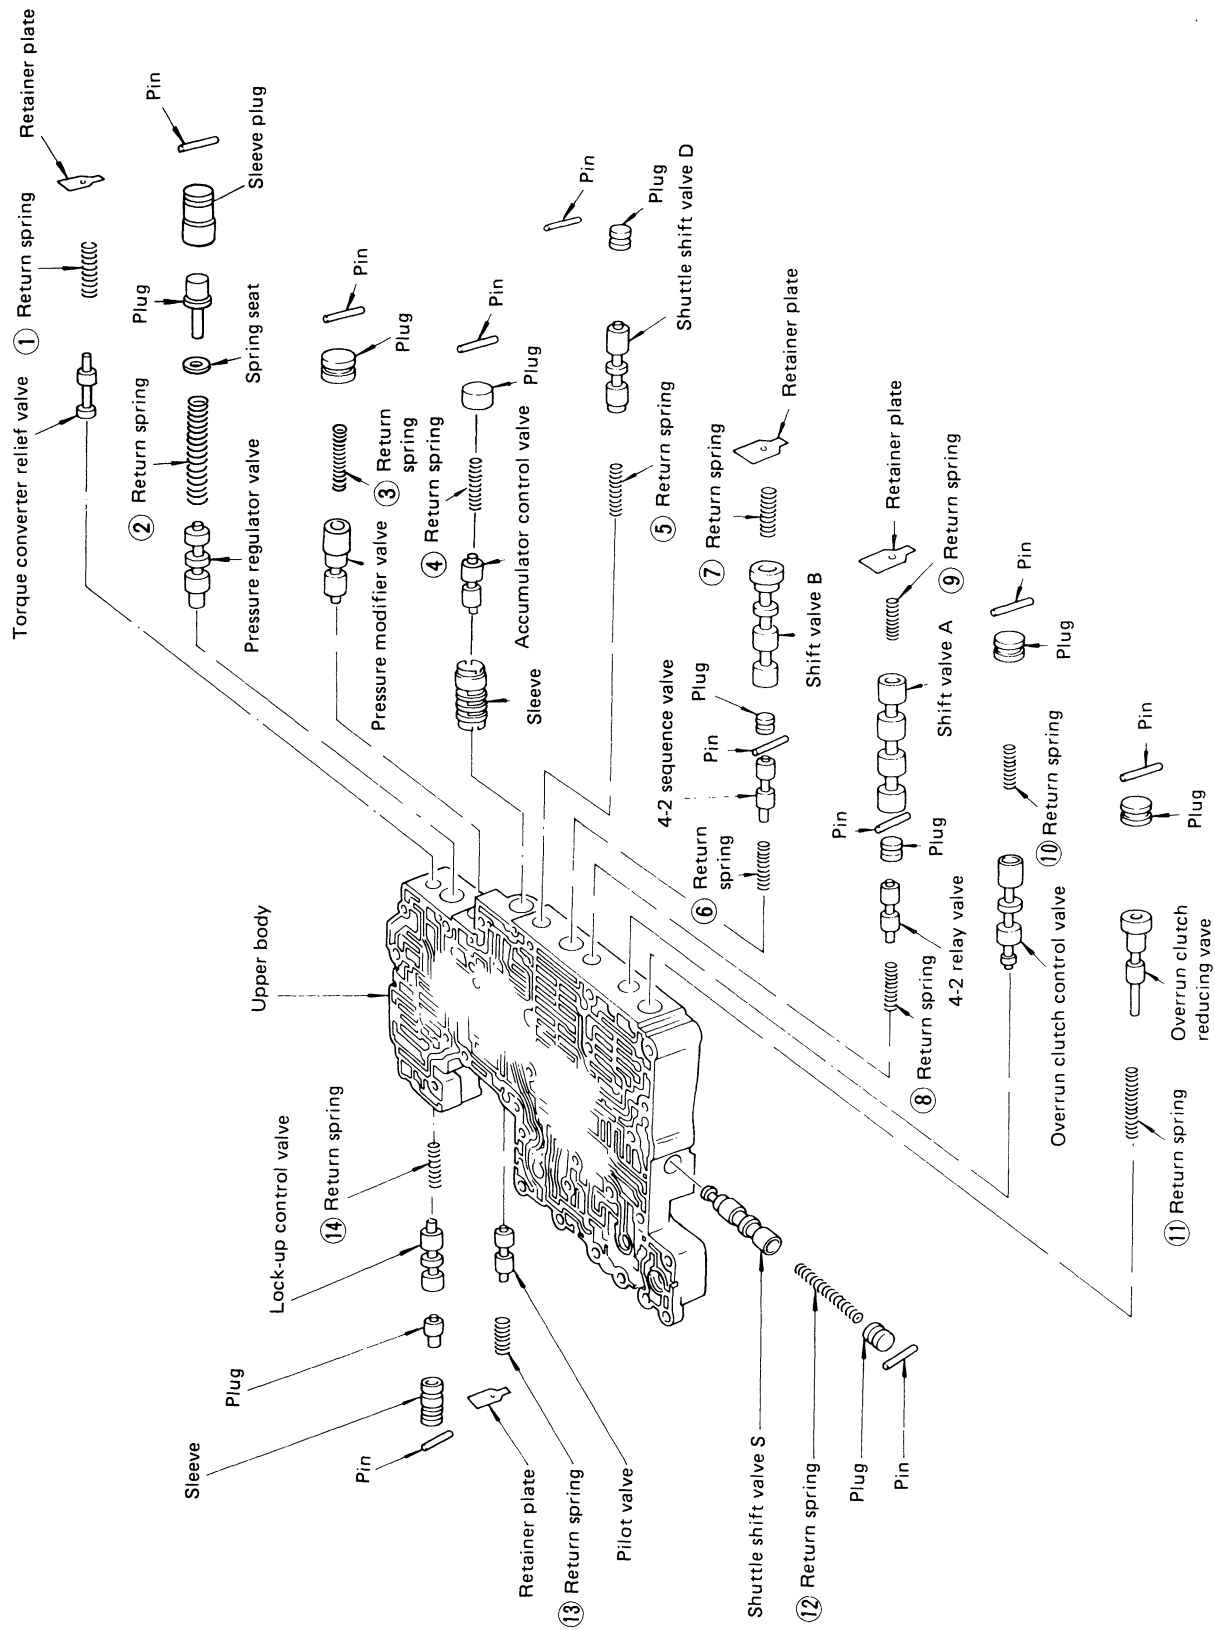


Numbers preceding valve springs correspond with those shown in Spring Chart on page A.T-141.

Apply A.T.F. to all components before their installation.


## REPAIR FOR COMPONENT PARTS

### Control Valve Upper Body (Cont'd)


#### DISASSEMBLY

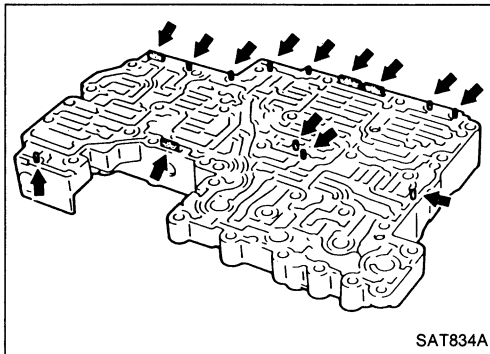


1. Remove valves at parallel pins.
  - Do not use a magnetic hand.

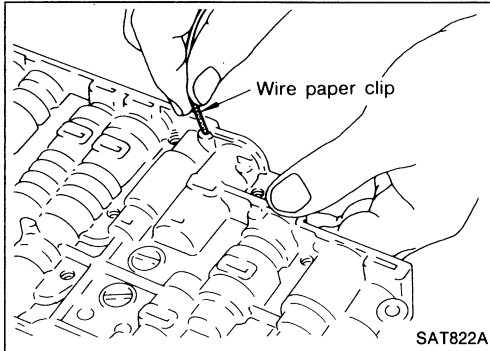


- a. Use a wire paper clip to push out parallel pins.

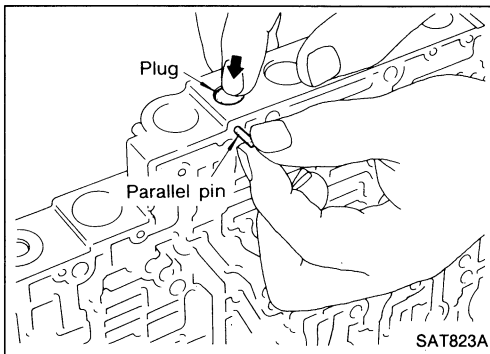

- b. Remove parallel pins while pressing their corresponding plugs and sleeves.
  - Remove plug slowly to prevent internal parts from jumping out.

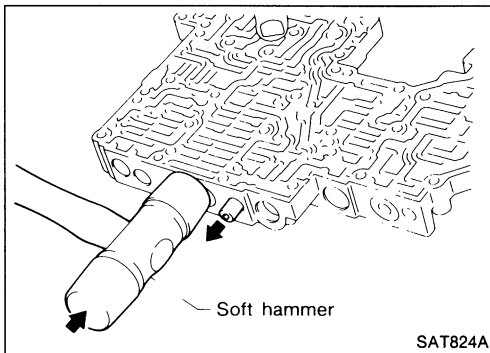


- c. Place mating surface of valve facedown, and remove internal parts.
  - If a valve is hard to remove, place valve body facedown and lightly tap it with a soft hammer.
  - Be careful not to drop or damage valves and sleeves.

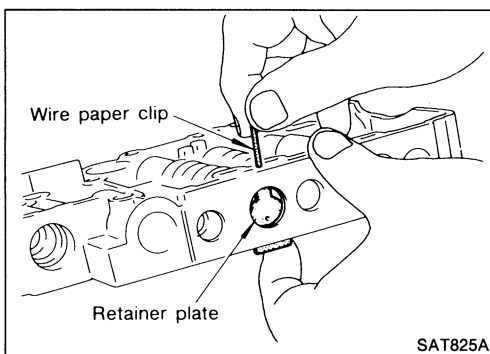


2. Remove valves at retainer plates.
  - a. Pry out retainer plate with wire paper clip.

## REPAIR FOR COMPONENT PARTS

### Control Valve Upper Body (Cont'd)

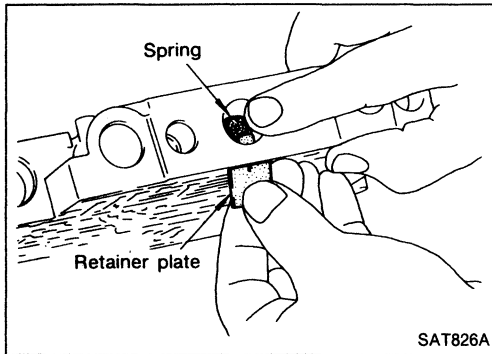


b. Remove retainer plates while holding spring.

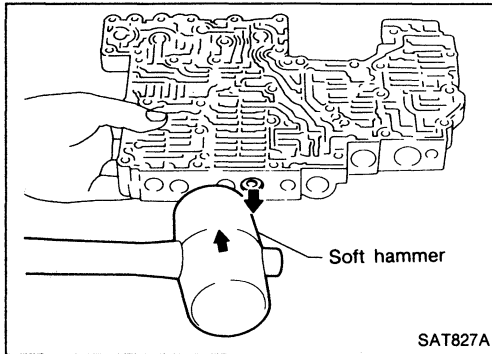

c. Place mating surface of valve facedown, and remove internal parts.

- If a valve is hard to remove, lightly tap valve body with a soft hammer.
- Be careful not to drop or damage valves, sleeves, etc.

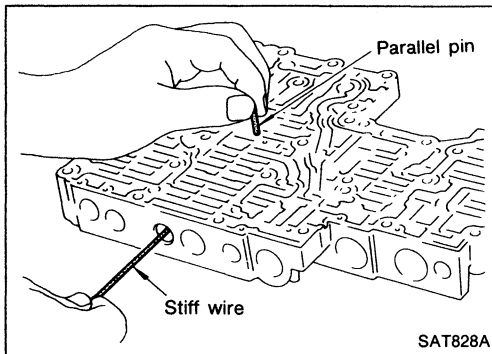

- 4-2 sequence valve and relay valve are located far back in upper body. If they are hard to remove, carefully push them out using stiff wire.
- Be careful not to scratch sliding surface of valve with wire.


## REPAIR FOR COMPONENT PARTS

### Control Valve Upper Body (Cont'd)

#### INSPECTION

##### Valve springs

- Measure free length and outer diameter of each valve spring. Also check for damage or deformation.
- Numbers of each valve spring listed in table below are the same as those in the figure on page AT-138.

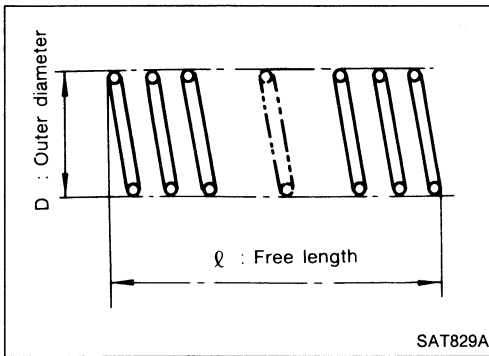

#### Inspection standard


Unit: mm (in)

Parts	Item	Part No.	ℓ	D
①	Torque converter relief valve spring	31742-41X23	38.0 (1.496)	9.0 (0.354)
②	Pressure regulator valve spring	31742-41X24	44.02 (1.7331)	14.0 (0.551)
③	Pressure modifier valve spring	31742-41X19	31.95 (1.2579)	6.8 (0.268)
④	Accumulator control valve spring	31742-41X60	17.0 (0.669)	10.5 (0.413)
⑤	Shuttle shift valve D spring	31762-41X00	26.5 (1.043)	6.0 (0.236)
⑥	4-2 sequence valve spring	31756-41X00	29.1 (1.146)	6.95 (0.2736)
⑦	Shift valve B spring	31762-41X01	25.0 (0.984)	7.0 (0.276)
⑧	4-2 relay valve spring	31756-41X00	29.1 (1.146)	6.95 (0.2736)
⑨	Shift valve A spring	31762-41X01	25.0 (0.984)	7.0 (0.276)
⑩	Overrun clutch control valve spring	31762-41X03	23.6 (0.929)	7.0 (0.276)
⑪	Overrun clutch reducing valve spring	31742-41x20	32.5 (1.280)	7.0 (0.276)
⑫	Shuttle shift valve S spring	31762-41X04	51.0 (2.008)	5.65 (0.2224)
⑬	Pilot valve spring	31742-41X13	25.7 (1.012)	9.1 (0.358)
⑭	Lock-up control valve spring	31742-41X22	18.5 (0.728)	13.0 (0.512)

- Replace valve springs if deformed or fatigued.

#### Control valves

- Check sliding surfaces of valves, sleeves and plugs.

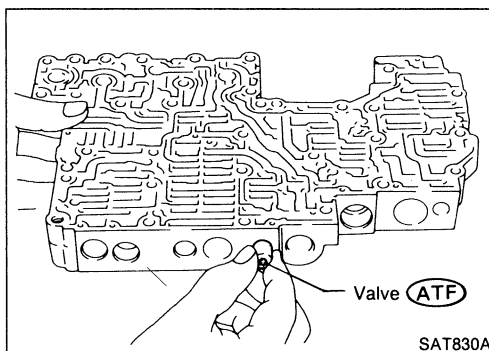


#### ASSEMBLY


1. Lubricate the control valve body and all valves with A.T.F. Install control valves by sliding them carefully into their bores.
- **Be careful not to scratch or damage valve body.**

## REPAIR FOR COMPONENT PARTS

### Control Valve Upper Body (Cont'd)

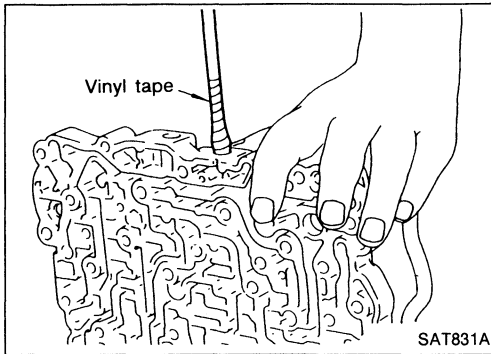


- Wrap a small screwdriver with vinyl tape and use it to insert the valves into proper position.

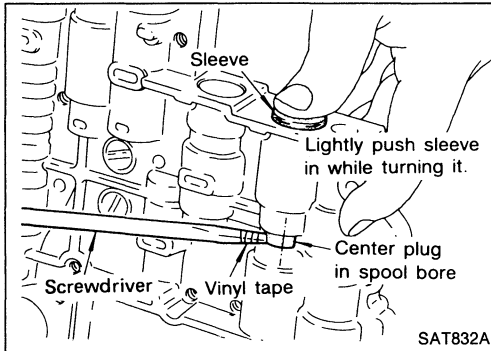


### Pressure regulator valve

- If pressure regulator plug is not centered properly, sleeve cannot be inserted into bore in upper body. If this happens, use vinyl tape wrapped screwdriver to center sleeve until it can be inserted.
- Turn sleeve slightly while installing.

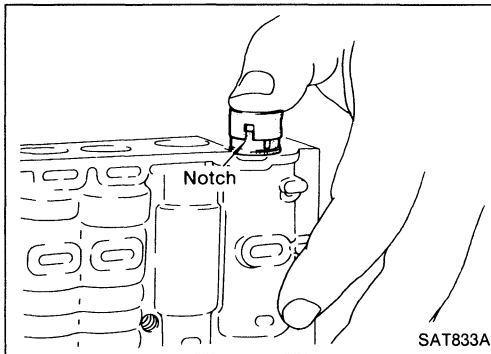


### Accumulator control plug

- Align protrusion of accumulator control sleeve with notch in plug.
- Align parallel pin groove in plug with parallel pin, and install accumulator control valve.

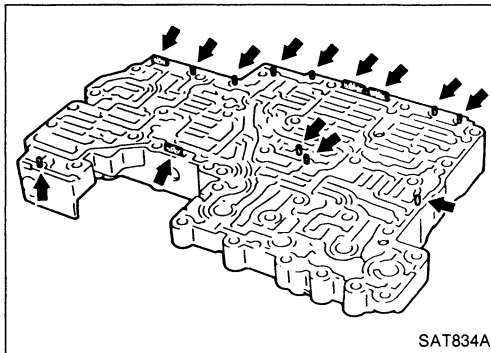

2. Install parallel pins and retainer plates.

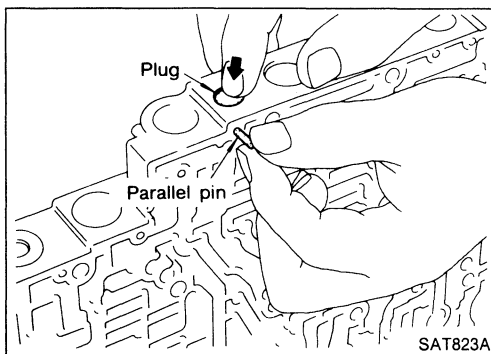



- While pushing plug, install parallel pin.

## REPAIR FOR COMPONENT PARTS

### Control Valve Upper Body (Cont'd)

#### 4-2 sequence valve and relay valve


- Push 4-2 sequence valve and relay valve with wire wrapped in vinyl tape to prevent scratching valve body. Install parallel pins.

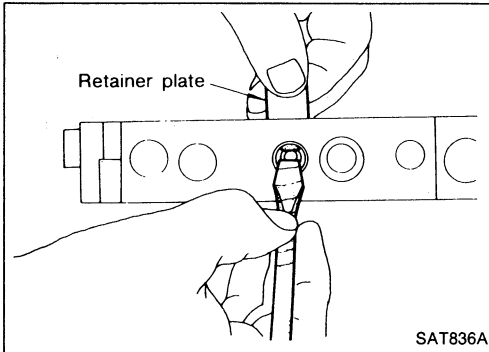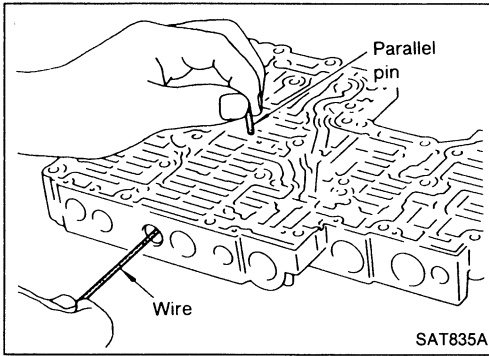

- Insert retainer plate while pushing spring.

# REPAIR FOR COMPONENT PARTS

## Control Valve Lower Body

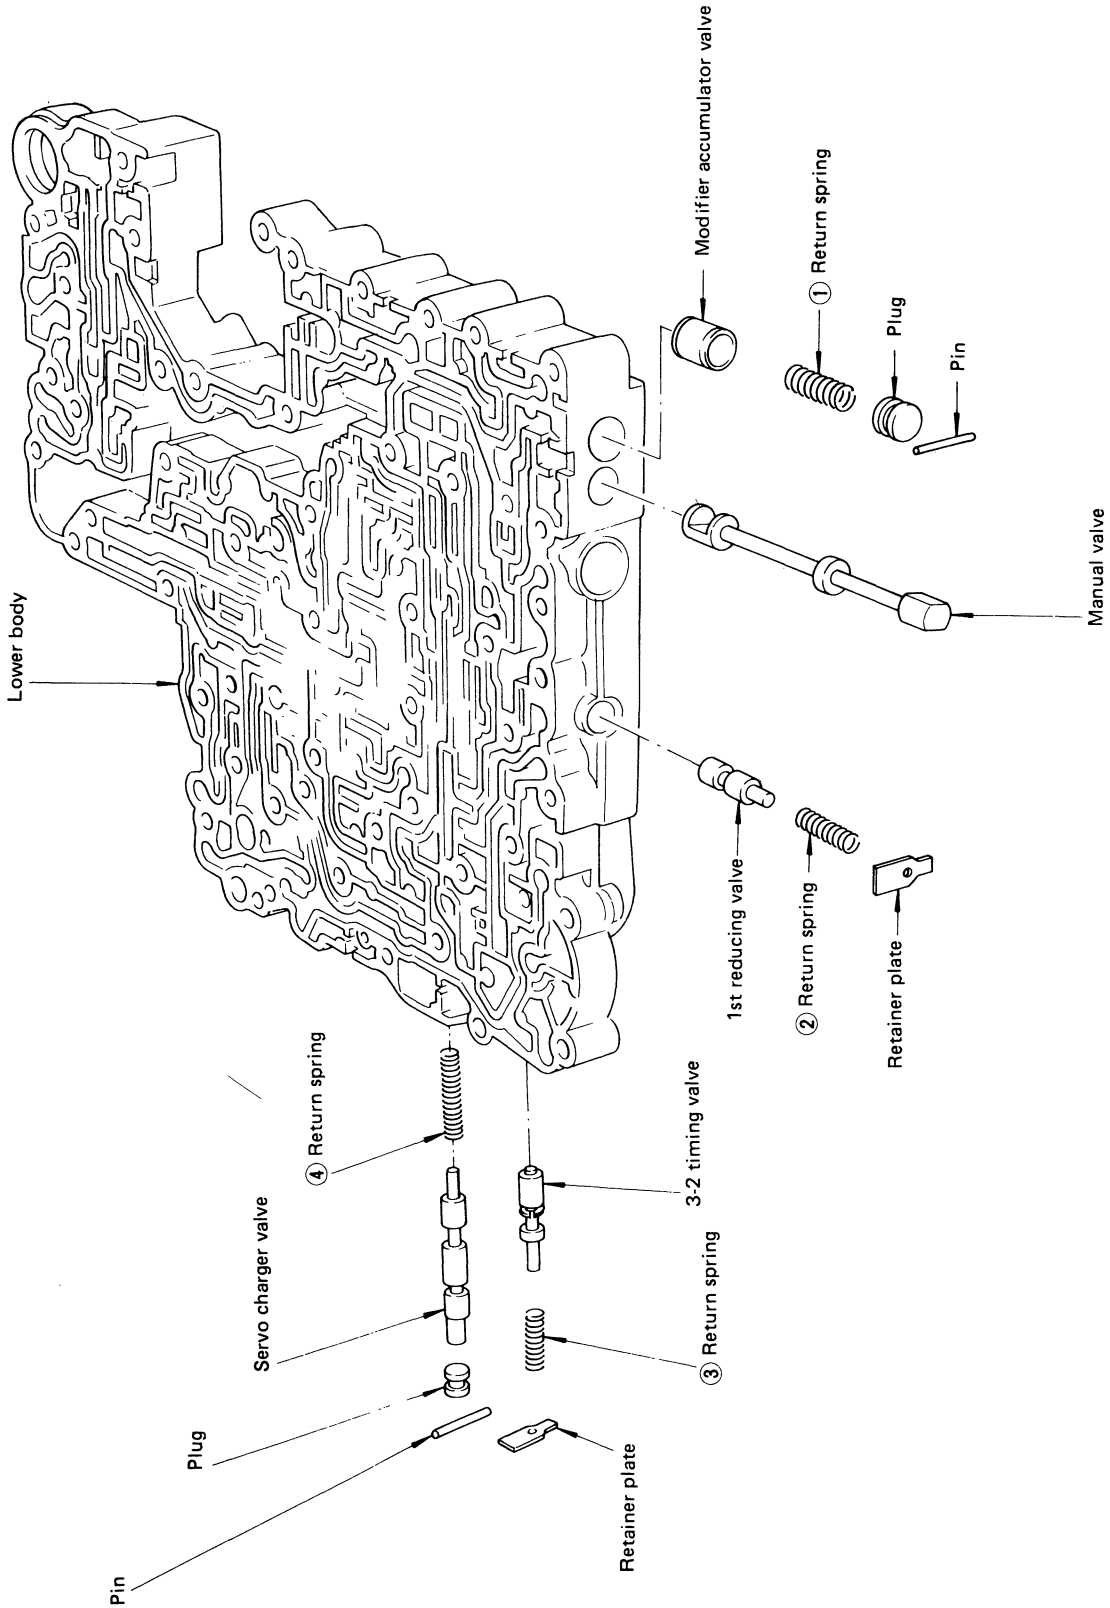

Numbers preceding valve springs correspond with those shown in Spring Chart on page A.T-145.

Apply A.T.F. to all components before their installation.




## REPAIR FOR COMPONENT PARTS

### Control Valve Lower Body (Cont'd)

#### DISASSEMBLY


1. Remove valves at parallel pins.
2. Remove valves at retainer plates.  
For removal procedures, refer to "DISASSEMBLY" of Control Valve Upper Body.

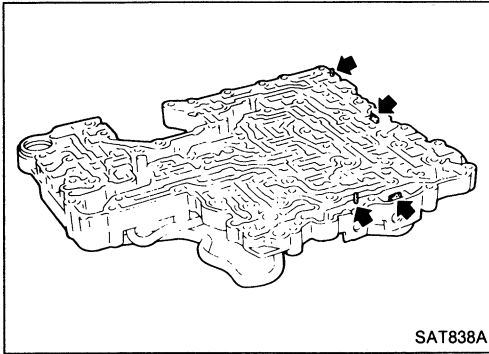

#### INSPECTION

##### Valve springs

- Check each valve spring for damage or deformation. Also measure free length and outer diameter.
- Numbers of each valve spring listed in table below are the same as those in the figure on page AT-144.

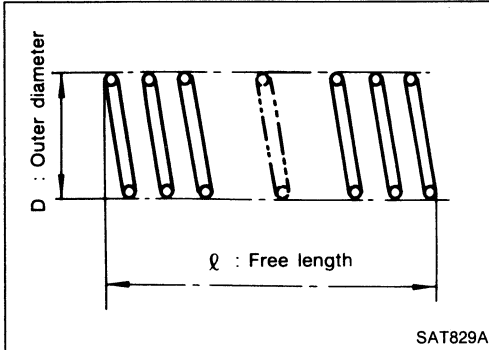

#### Inspection standard:

Unit: mm (in)

Parts	Item	Part No.	ℓ	D
①	Modifier accumulator valve spring	31742-41X15	30.5 (1.201)	9.8 (0.386)
②	1st reducing valve spring	31756-41X05	25.4 (1.000)	6.75 (0.2657)
③	3-2 timing valve spring	31742-41X08	20.55 (0.8091)	6.75 (0.2657)
④	Servo charger valve spring	31742-41X06	23.0 (0.906)	6.7 (0.264)


- Replace valve springs if deformed or fatigued.

#### Control valves

- Check sliding surfaces of control valves, sleeves and plugs for damage.


#### ASSEMBLY

- Install control valves.  
For installation procedures, refer to "ASSEMBLY" of Control Valve Upper Body.

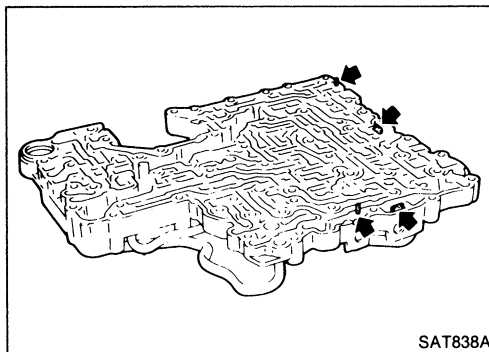


## Reverse Clutch

For the number of clutch sheets (drive plate and driven plate), refer to the below cross-section.

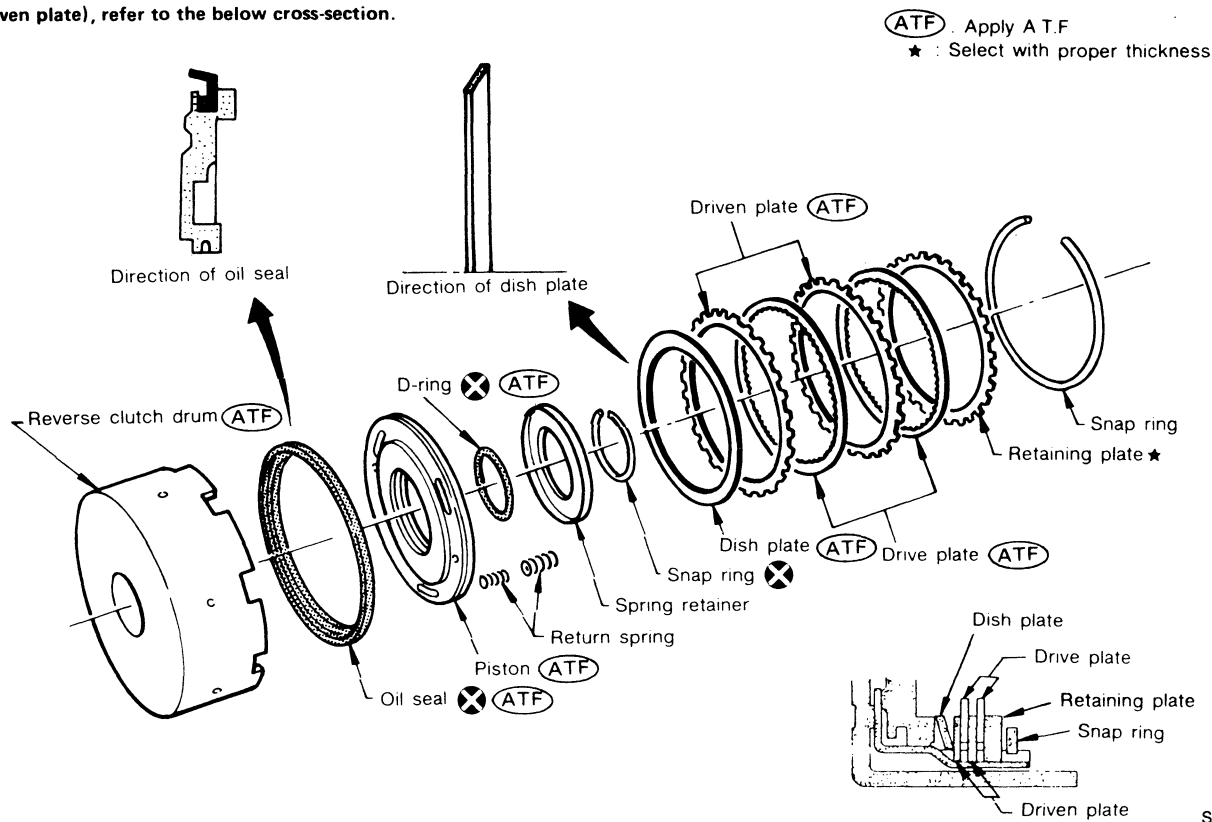


SAT839A

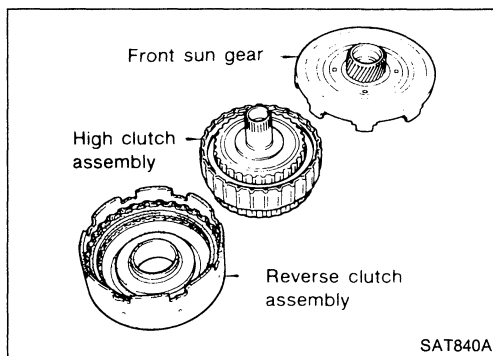

SAT840A

### DISASSEMBLY

1. Remove reverse clutch assembly from clutch pack.

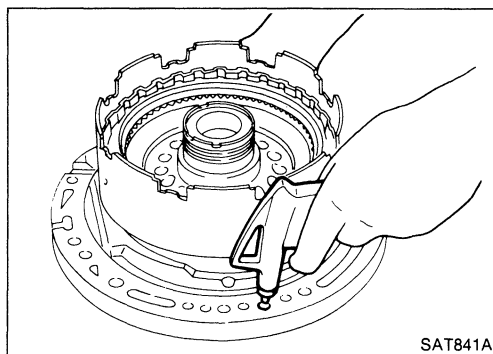


SAT841A

2. Check operation of reverse clutch.


- a. Install seal ring onto oil pump cover and install reverse clutch. Apply compressed air to oil hole.
- b. Check to see that retaining plate moves to snap ring.
- c. If retaining plate does not move to snap ring, D-ring or oil seal may be damaged or fluid may be leaking at piston check ball.

## REPAIR FOR COMPONENT PARTS

### Reverse Clutch (Cont'd)

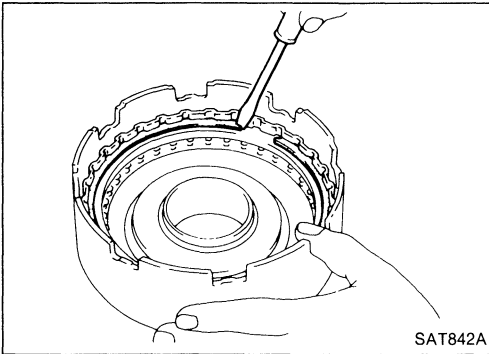


- Remove drive plates, driven plates, retaining plate, dish plate and snap ring.

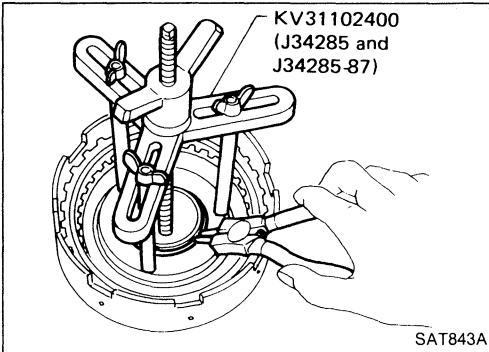

- Remove snap ring from clutch drum while compressing clutch springs.

- Do not expand snap ring excessively.
- Remove spring retainer and return spring.

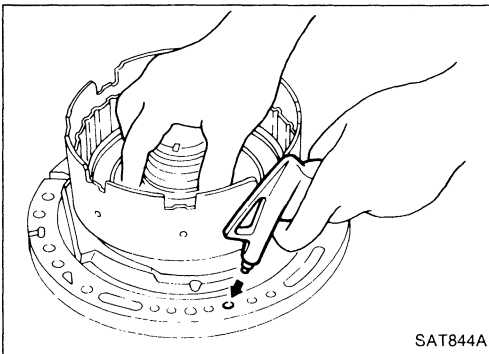

- Install seal ring onto oil pump cover and install reverse clutch drum. While holding piston, gradually apply compressed air to oil hole until piston is removed.

- Do not apply compressed air abruptly.
- Remove D-ring and oil seal from piston.

### INSPECTION

#### Reverse clutch snap ring and spring retainer

- Check for deformation, fatigue or damage.



#### Reverse clutch return springs

- Check for deformation or damage. Also measure free length and outside diameter.

#### Inspection standard:

Unit: mm (in)

Part No.	ℓ	D
30505-41X02	19.69 (0.7752)	11.6 (0.457)

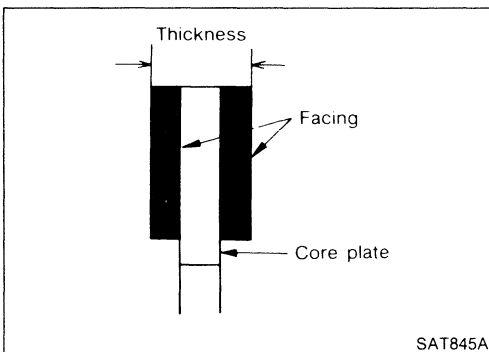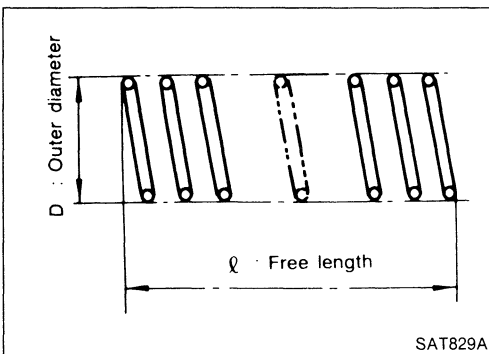

#### Reverse clutch drive plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.
  - Thickness of drive plate:**
  - Standard value: 2.0 mm (0.079 in)**
  - Wear limit: 1.8 mm (0.071 in)**
- If not within wear limit, replace.

#### Reverse clutch dish plate


- Check for deformation or damage.

# REPAIR FOR COMPONENT PARTS

## Reverse Clutch (Cont'd)


### Reverse clutch piston

- Shake piston to assure that balls are not seized.
- Apply compressed air to check ball oil hole opposite the return spring to assure that there is no air leakage.
- Also apply compressed air to oil hole on return spring side to assure that air leaks past ball.

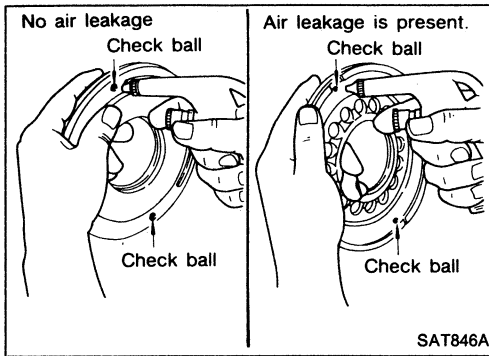


### ASSEMBLY


1. Install D-ring and oil seal on piston.
- Apply A.T.F. to both parts.

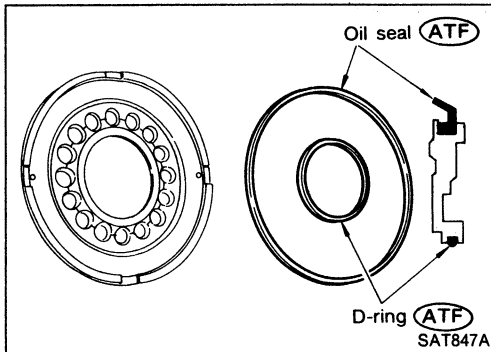


2. Install piston assembly by turning it slowly and evenly.
- Apply A.T.F. to inner surface of drum.

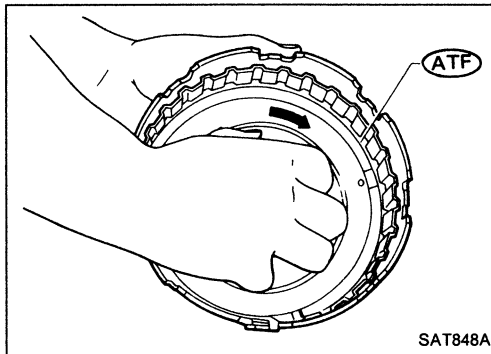

3. Install return springs and spring retainer.

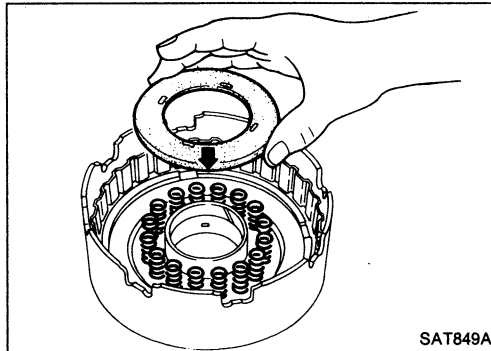



4. Install snap ring while compressing clutch springs.

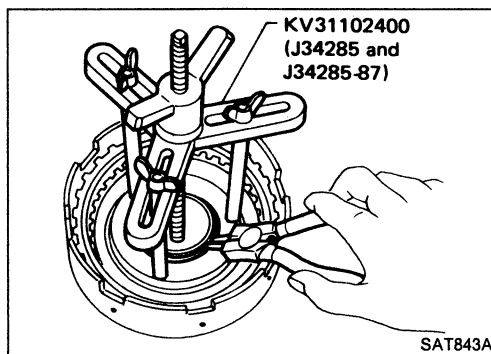


## REPAIR FOR COMPONENT PARTS

### Reverse Clutch (Cont'd)


- Do not align snap ring gap with spring retainer stopper.

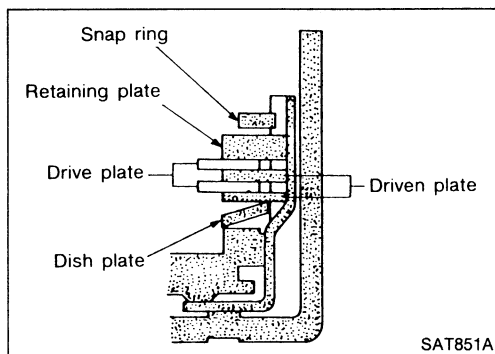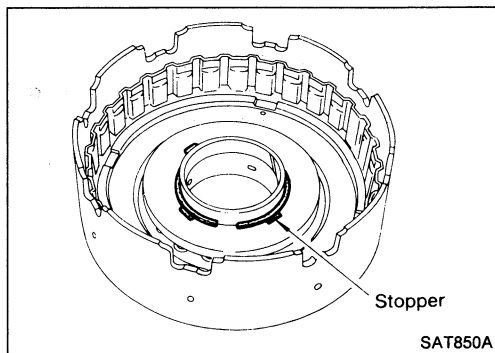

5. Install drive plates, driven plates, retaining plate and dish plate.

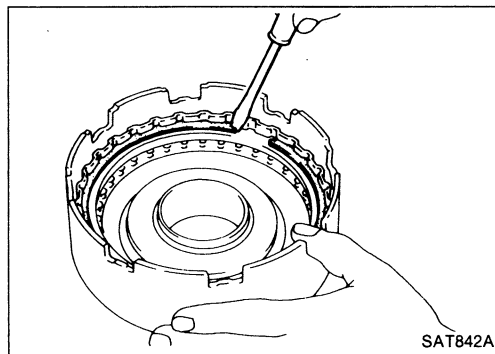

6. Install snap ring.

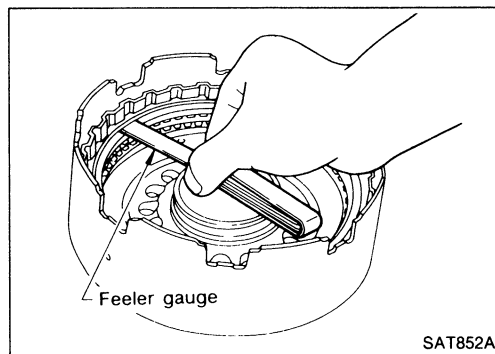

7. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.

**Specified clearance:**

**Standard**


0.5 - 0.8 mm (0.020 - 0.031 in)

**Allowable limit**

1.2 mm (0.047 in)

**Retaining plate:**

Refer to S.D.S.

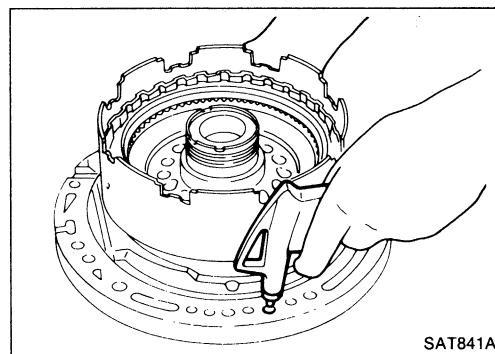


8. Check operation of reverse clutch. Refer to "DISASSEMBLY" of Reverse Clutch.

# REPAIR FOR COMPONENT PARTS


## High Clutch

For the number of clutch sheets (drive plate and driven plate), refer to the below cross-section.

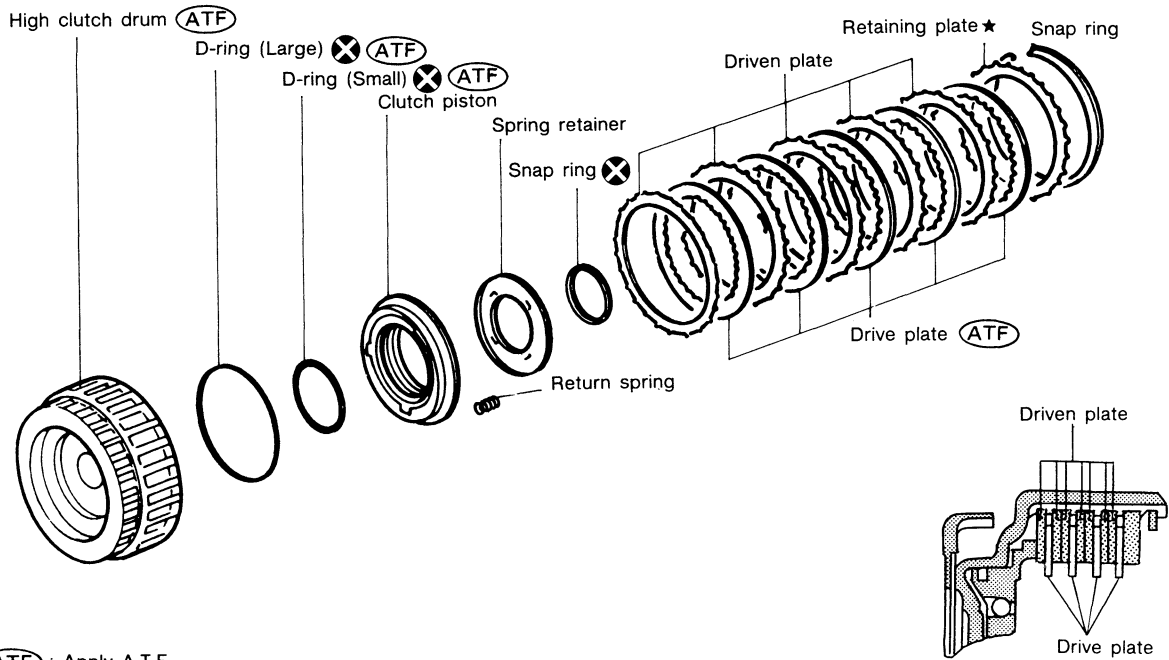

(ATF) : Apply A.T.F.  
 ★ : Select with proper thickness.


SAT857A

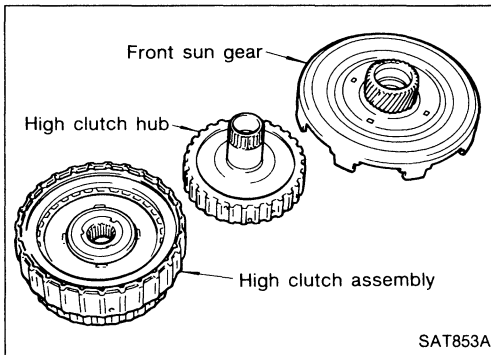

SAT853A

Service procedures for high clutch are essentially the same as those for reverse clutch, with the following exception:


- Check of high clutch operation

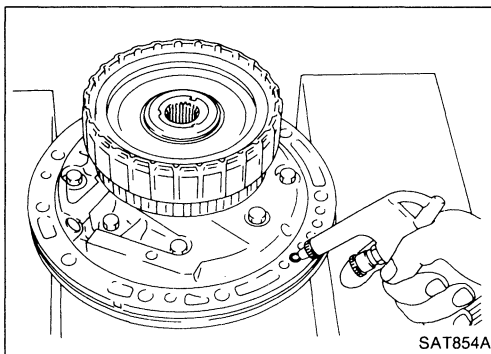


SAT854A

# REPAIR FOR COMPONENT PARTS

## High Clutch (Cont'd)

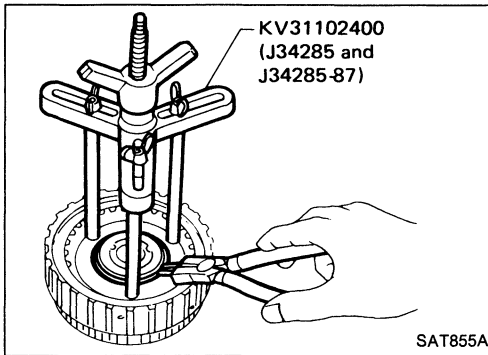

- Removal and installation of return spring

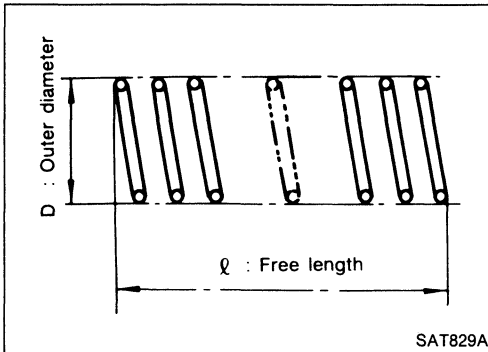


- Inspection of high clutch return springs

### Inspection standard:

Unit: mm (in)

Part No.	l	D
31505-21X03	22.06 (0.8685)	11.6 (0.457)

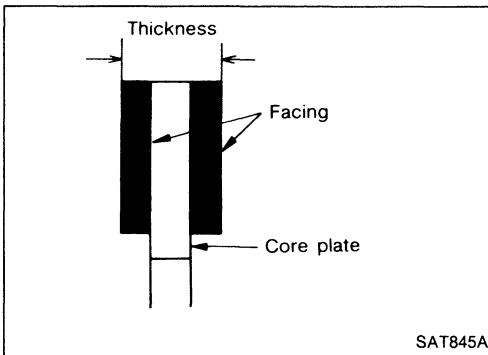

- Inspection of high clutch drive plate


### Thickness of drive plate:

#### Standard

1.6 mm (0.063 in)

#### Wear limit

1.4 mm (0.055 in)

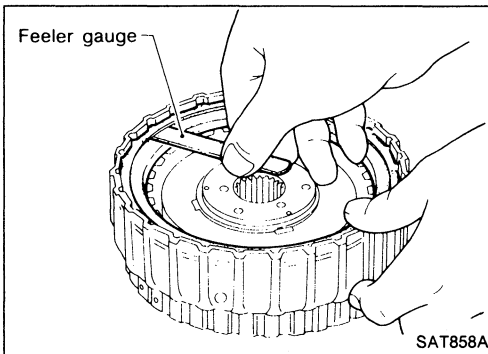

- Measurement of clearance between retaining plate and snap ring

### Specified clearance:

#### Standard

1.8 - 2.2 mm (0.071 - 0.087 in)

#### Allowable limit

3.0 mm (0.118 in)


### Retaining plate:

Refer to S.D.S.

# REPAIR FOR COMPONENT PARTS

## Forward and Overrun Clutches

For the number of clutch sheets (drive plate and driven plate), refer to the below cross-section.

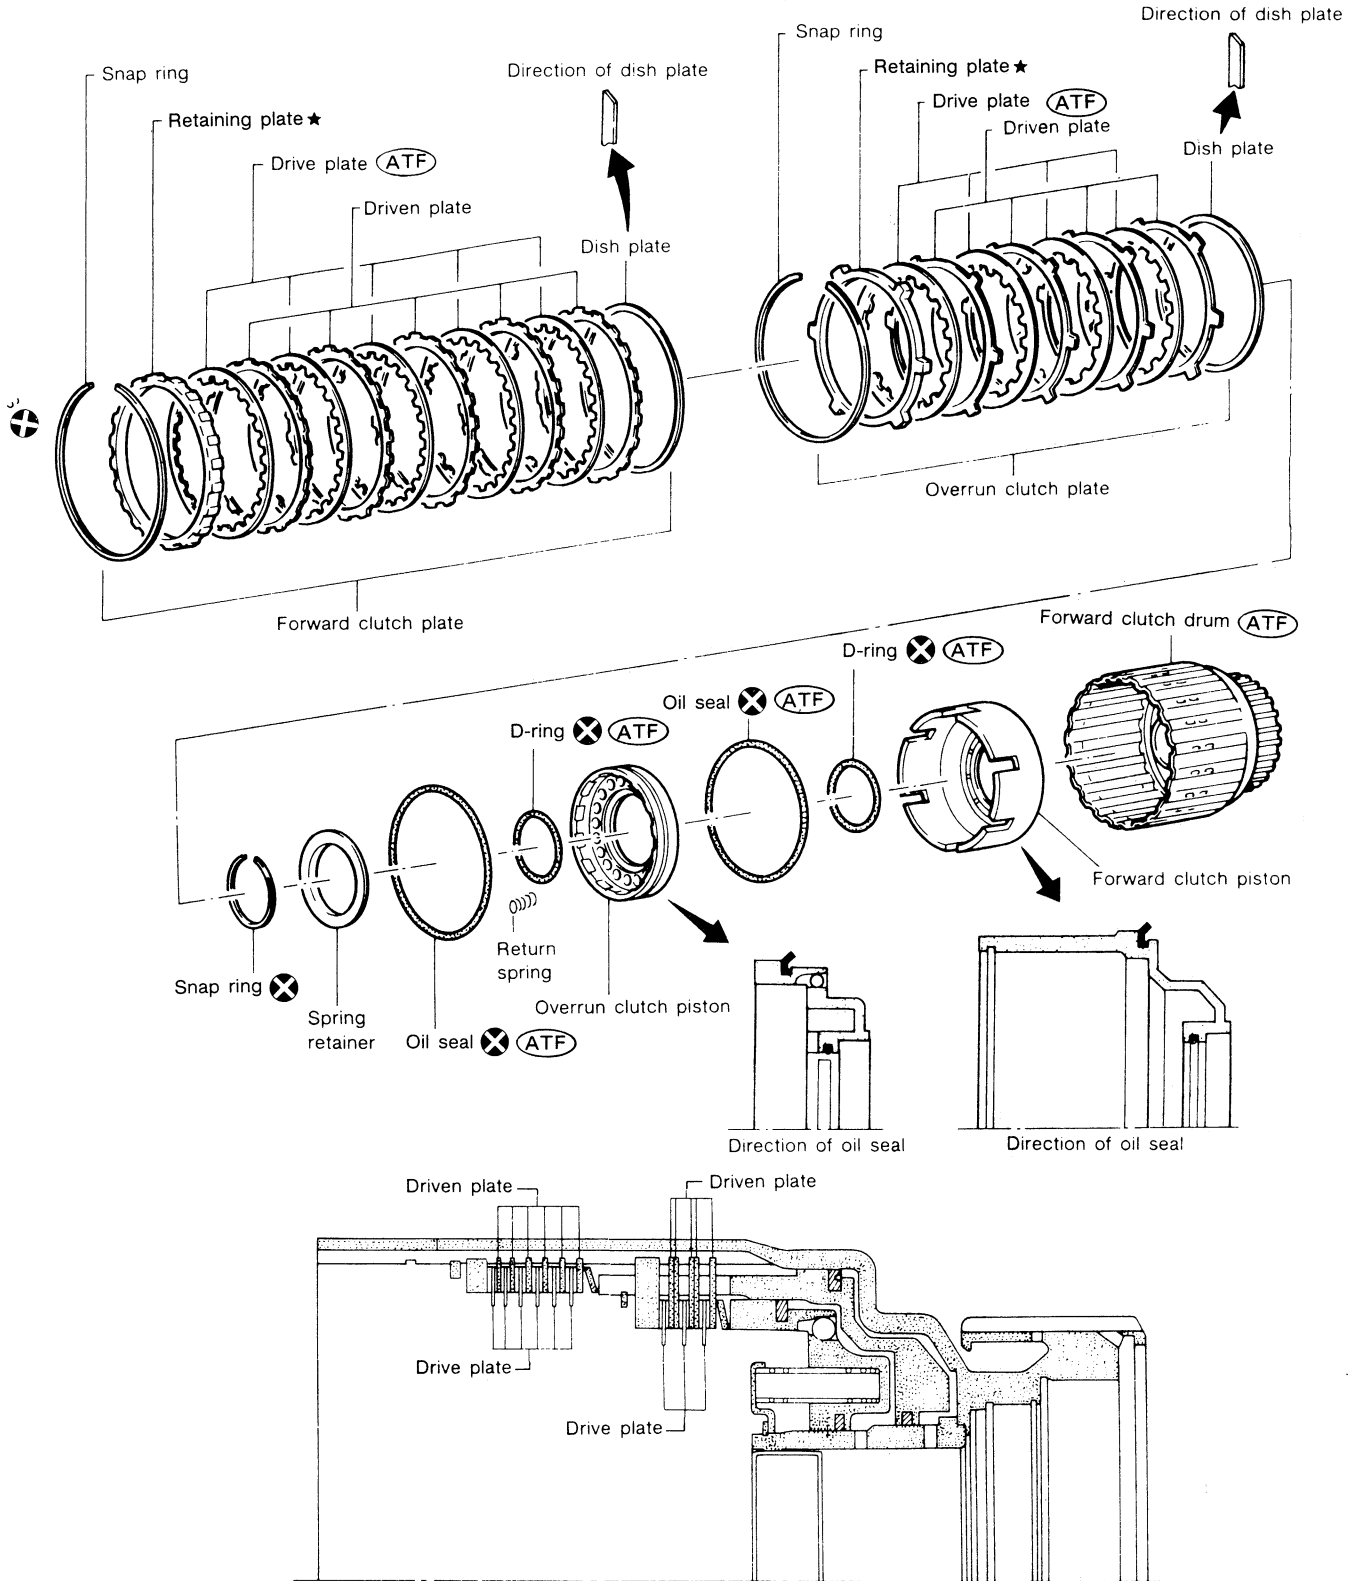

- (ATF) Apply ATF
- ★ Select with proper thickness





## REPAIR FOR COMPONENT PARTS


### Forward and Overrun Clutches (Cont'd)

Service procedures for forward and overrun clutches are essentially the same as those for reverse clutch, with the following exception:


- Check of forward clutch operation.

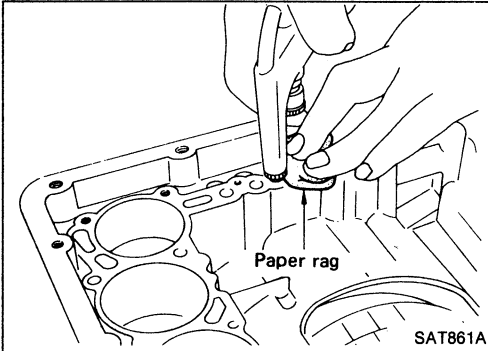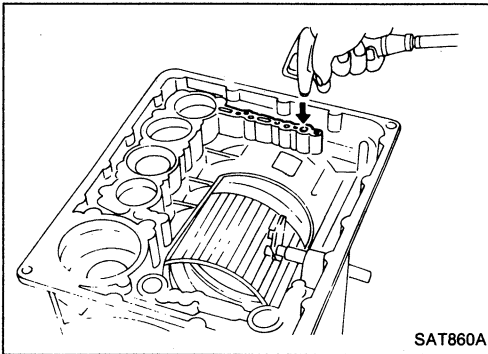


- Check of overrun clutch operation.

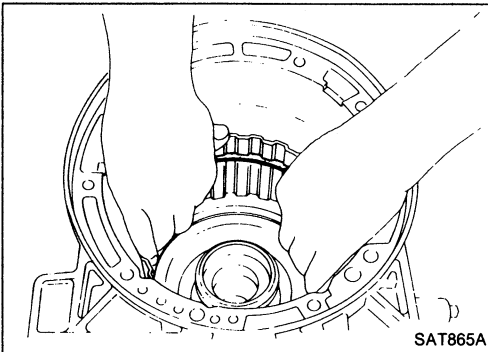

- Removal of forward clutch drum  
Remove forward clutch drum from transmission case by holding snap ring.

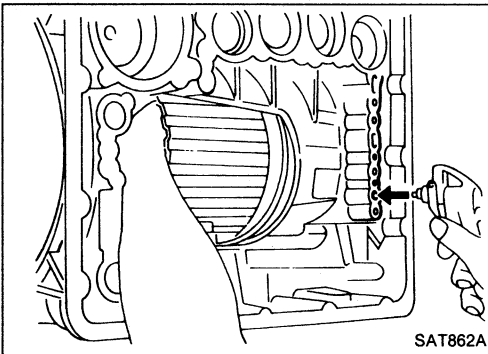


- Removal of forward clutch and overrun clutch pistons  
1. While holding overrun clutch piston, gradually apply compressed air to oil hole.

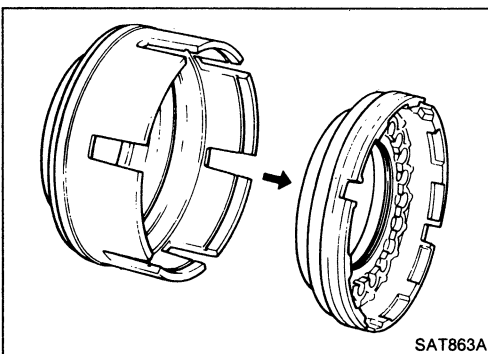


- 2. Remove overrun clutch from forward clutch.

## REPAIR FOR COMPONENT PARTS

### Forward and Overrun Clutches (Cont'd)

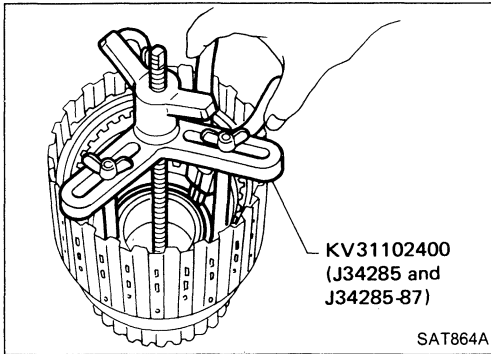

- Removal and installation of return springs

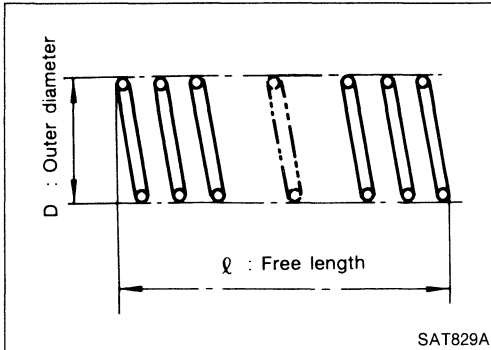


- Inspection of forward clutch and overrun clutch return springs

#### Inspection standard:

Unit: mm (in)

Part No.	ℓ	D
31505-41X01	35.77 (1.4083)	9.7 (0.382)

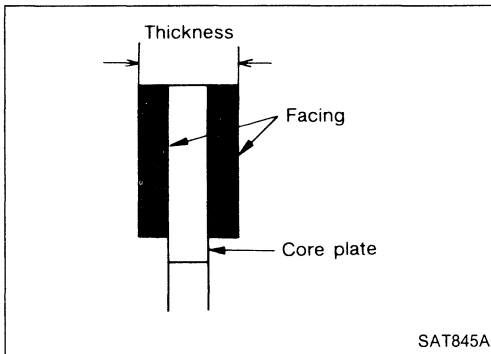

- Inspection of forward clutch drive plates


#### Thickness of drive plate:

**Standard**

**2.0 mm (0.079 in)**

**Wear limit**

**1.8 mm (0.071 in)**

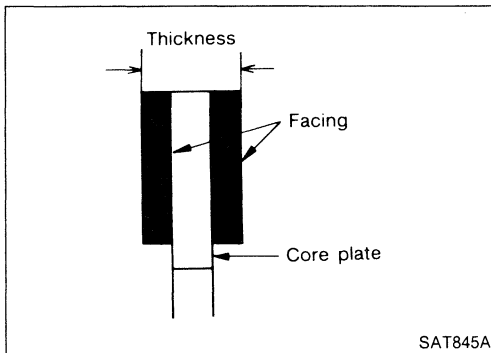

- Inspection of overrun clutch drive plates


#### Thickness of drive plate:

**Standard**

**2.0 mm (0.079 in)**

**Wear limit**


**1.8 mm (0.071 in)**

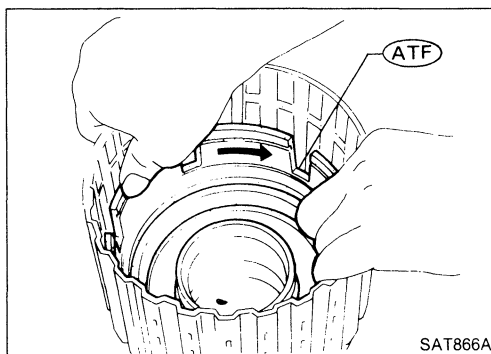


- Installation of forward clutch piston and overrun clutch piston
- 1. Install forward clutch piston by turning it slowly and evenly.
- **Apply A.T.F. to inner surface of clutch drum.**

## REPAIR FOR COMPONENT PARTS


### Forward and Overrun Clutches (Cont'd)

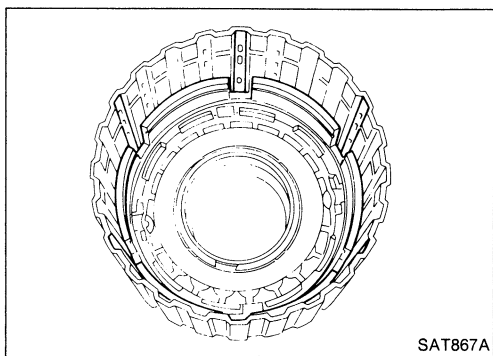

- Align notch in forward clutch piston with groove in forward clutch drum.

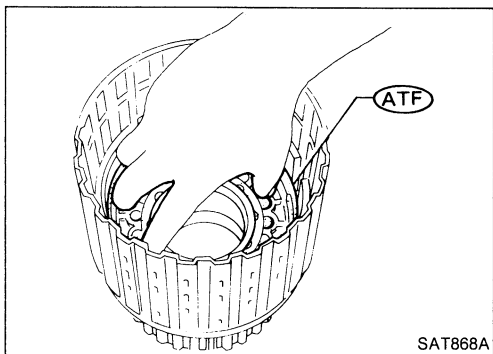

2. Install overrun clutch by turning it slowly and evenly.
- Apply A.T.F. to inner surface of forward clutch piston.

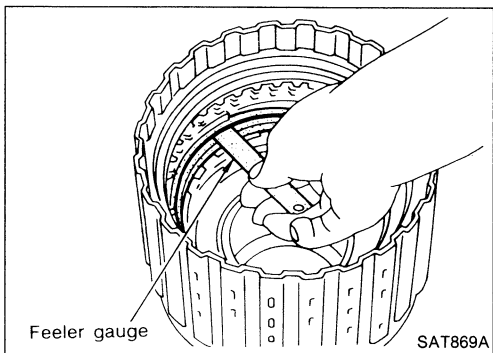

- Measurement of clearance between retaining plate and snap ring of overrun clutch

**Specified clearance:**

**Standard**


1.0 - 1.4 mm (0.039 - 0.055 in)

**Allowable limit**

2.4 mm (0.094 in)

**Retaining plate:**

Refer to S.D.S.

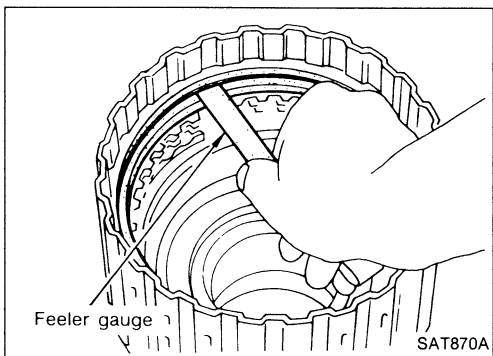

- Measurement of clearance between retaining plate and snap ring of forward clutch

**Specified clearance:**

**Standard**

0.45 - 0.85 mm (0.0177 - 0.0335 in)

**Allowable limit**



2.25 mm (0.0886 in)

**Retaining plate:**

Refer to S.D.S.


# REPAIR FOR COMPONENT PARTS

## Low & Reverse Brake

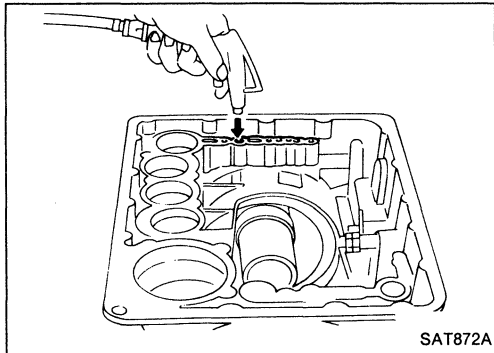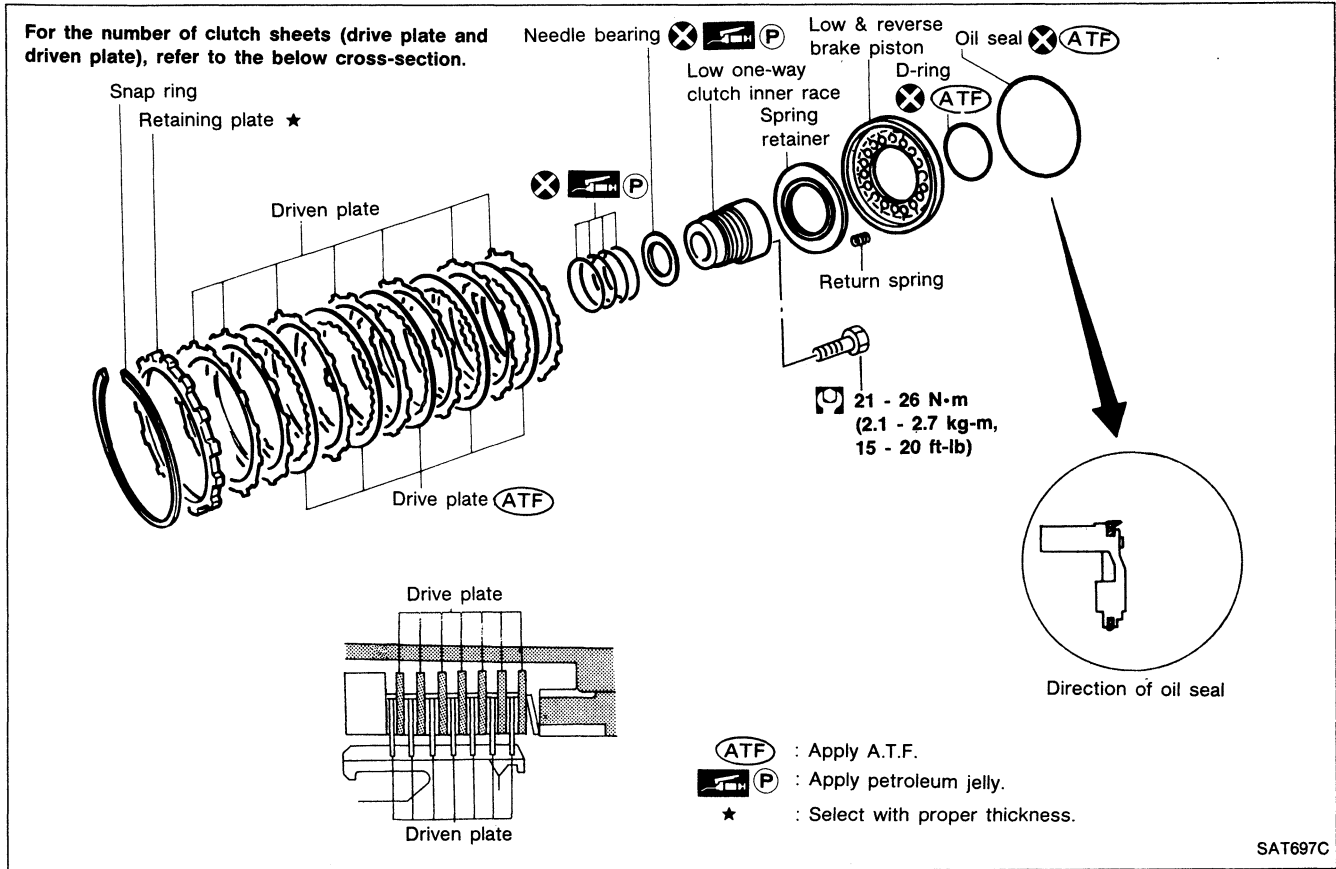


### DISASSEMBLY

1. Check operation of low and reverse brake.
  - a. Install seal ring onto oil pump cover and install reverse clutch. Apply compressed air to oil hole.
  - b. Check to see that retaining plate moves to snap ring.
  - c. If retaining plate does not move to snap ring, D-ring or oil seal may be damaged or fluid may be leaking at piston check ball.
2. Remove snap ring, low and reverse brake drive plates, driven plates and dish plate.

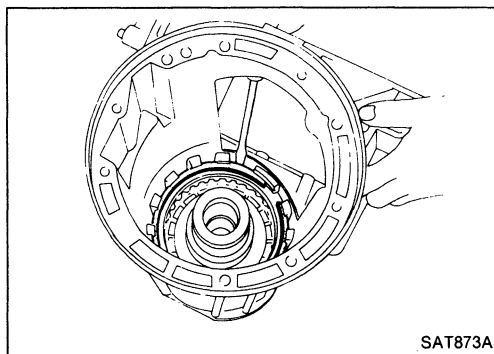


## REPAIR FOR COMPONENT PARTS


### Low & Reverse Brake (Cont'd)

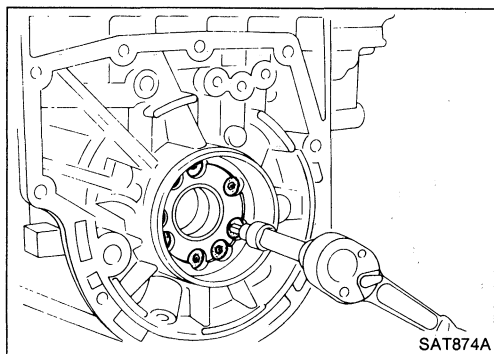

- Remove low one-way clutch inner race, spring retainer and return spring from transmission case.

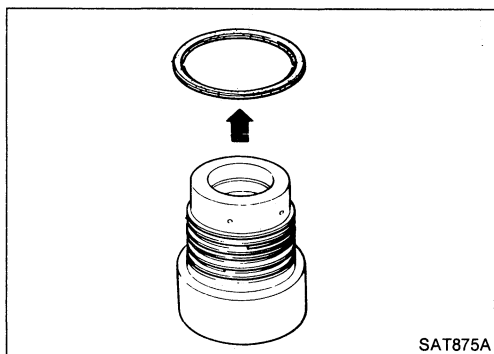

- Remove seal rings from low one-way clutch inner race.
- Remove needle bearing from low one-way clutch inner race.

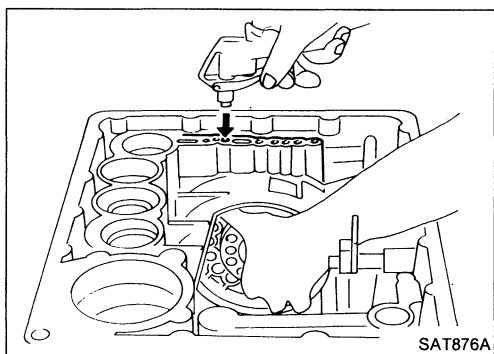

- Remove low and reverse brake piston using compressed air.
- Remove oil seal and D-ring from piston.

### INSPECTION

#### Low and reverse brake snap ring and spring retainer

- Check for deformation or damage.



#### Low and reverse brake return springs

- Check for deformation or damage. Also measure free length and outside diameter.

#### Inspection standard:

Unit: mm (in)

Part No.	ℓ	D
31521-21X00	23.7 (0.933)	11.6 (0.457)

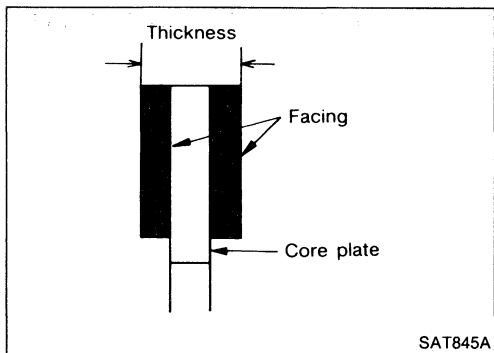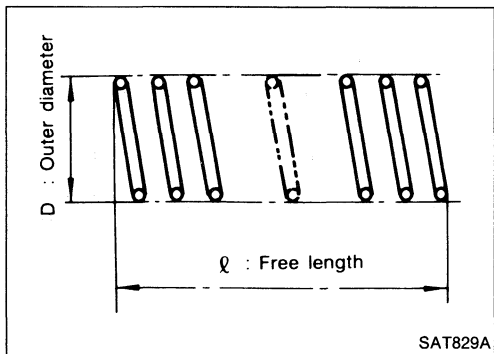

#### Low and reverse brake drive plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.

#### Thickness of drive plate:

**Standard value**  
2.0 mm (0.079 in)


**Wear limit**  
1.8 mm (0.071 in)

- If not within wear limit, replace.


## REPAIR FOR COMPONENT PARTS

### Low & Reverse Brake (Cont'd)

#### Low one-way clutch inner race

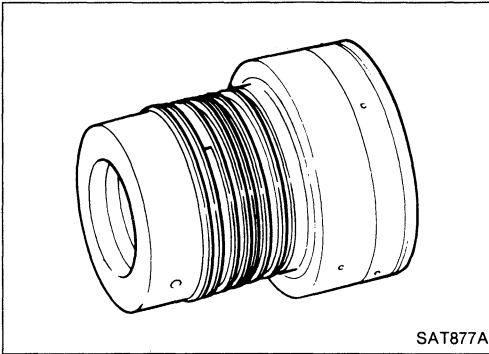


- Check frictional surface of inner race for wear or damage.

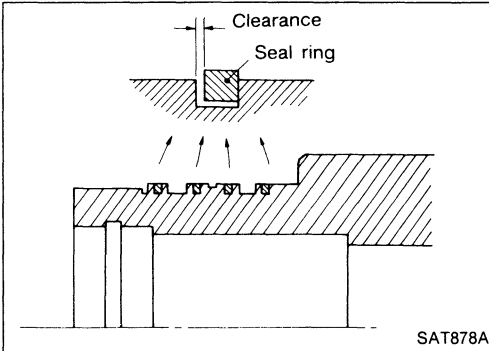


- Install a new seal rings onto low one-way clutch inner race.
- **Be careful not to expand seal ring gap excessively.**
- Measure seal ring-to-groove clearance.  
**Inspection standard:**  
**Standard value: 0.10 - 0.25 mm (0.0039 - 0.0098 in)**  
**Allowable limit: 0.25 mm (0.0098 in)**
- If not within allowable limit, replace low one-way clutch inner race.


#### ASSEMBLY

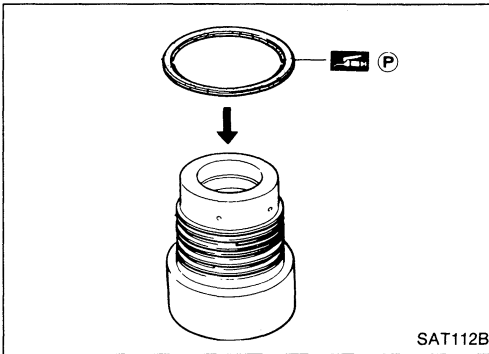

1. Install bearing onto one-way clutch inner race.
- **Pay attention to its direction — Black surface goes to rear side.**
  - **Apply petroleum jelly to needle bearing.**

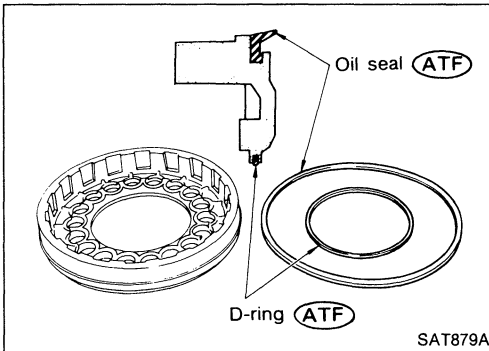


2. Install oil seal and D-ring onto piston.
- **Apply A.T.F. to oil seal and D-ring.**

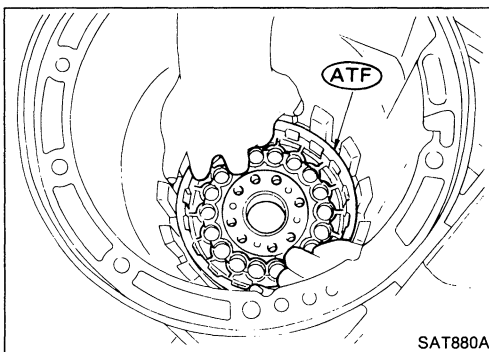


3. Install piston by rotating it slowly and evenly.
- **Apply A.T.F. to inner surface of transmission case.**

## REPAIR FOR COMPONENT PARTS


### Low & Reverse Brake (Cont'd)

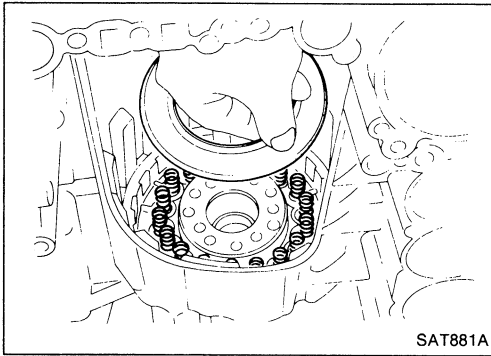


4. Install return springs, spring retainer and low one-way clutch inner race onto transmission case.

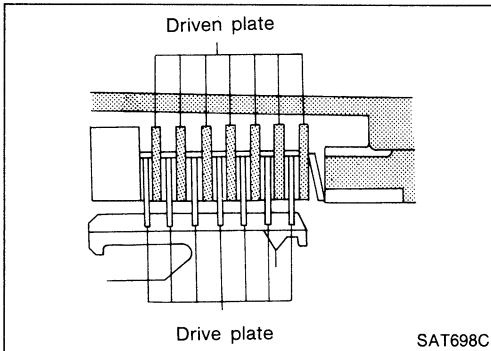

5. Install dish plate, low and reverse brake drive plates, driven plates and retaining plate.
6. Install snap ring on transmission case.

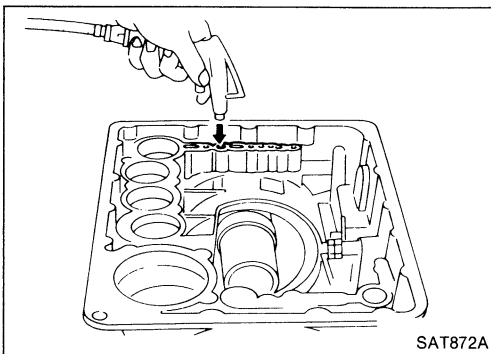

7. Check operation of low and reverse brake clutch piston. Refer to "DISASSEMBLY".

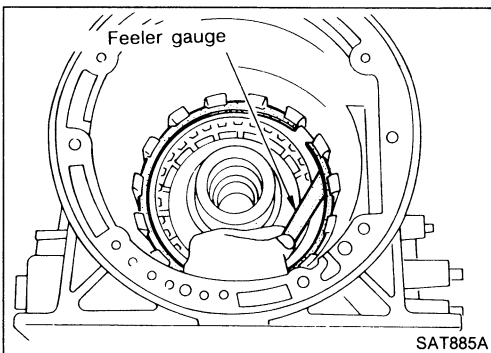

8. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.

**Specified clearance:**

**Standard**


0.7 - 1.1 mm (0.028 - 0.043 in)

**Allowable limit**

2.1 mm (0.083 in)


**Retaining plate:**

Refer to S.D.S.

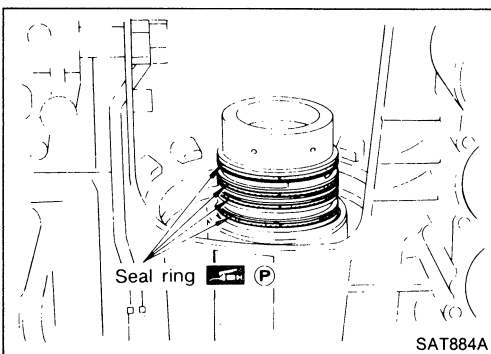


9. Install low one-way clutch inner race seal ring.
  - Apply petroleum jelly to seal ring.
  - Make sure seal rings are pressed firmly into place and held by petroleum jelly.

Forward Clutch Drum Assembly

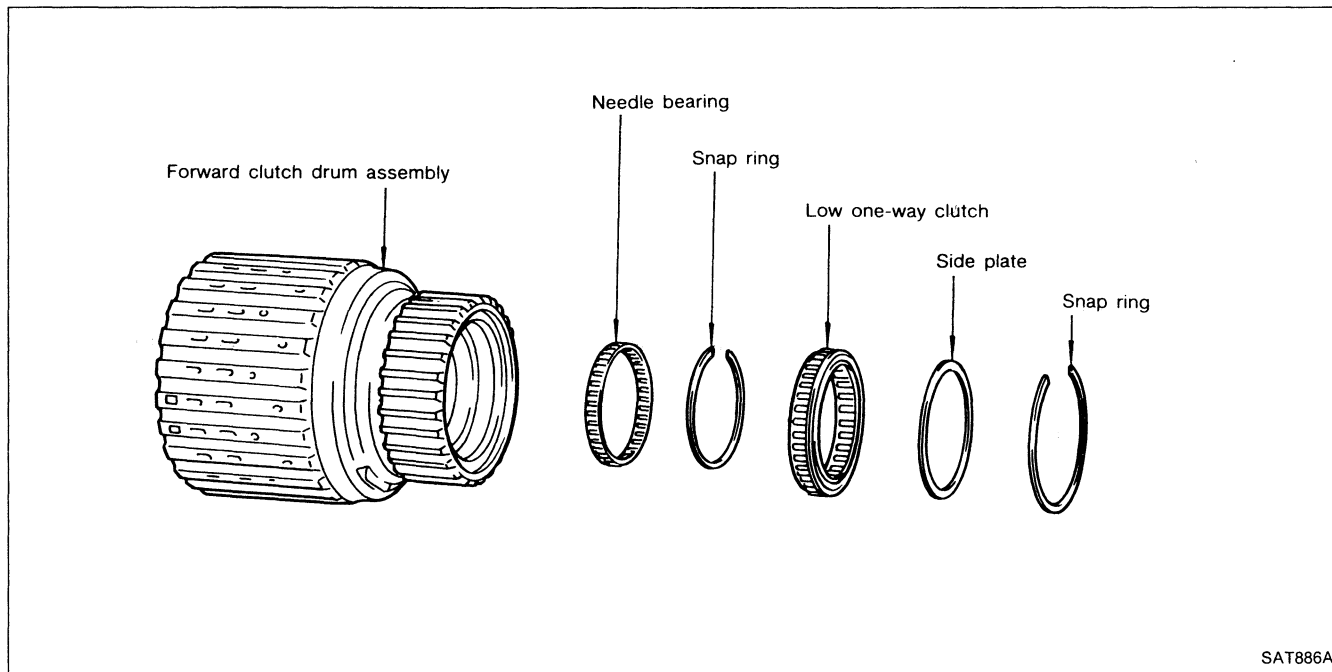


DISASSEMBLY


1. Remove snap ring from forward clutch drum.

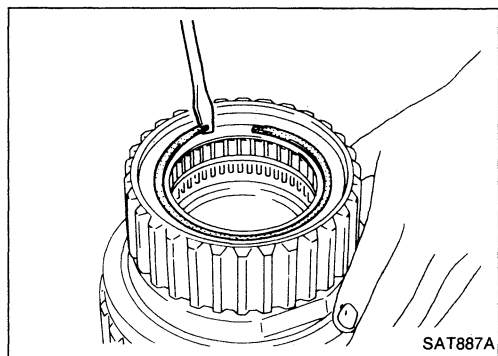

2. Remove side plate from forward clutch drum.

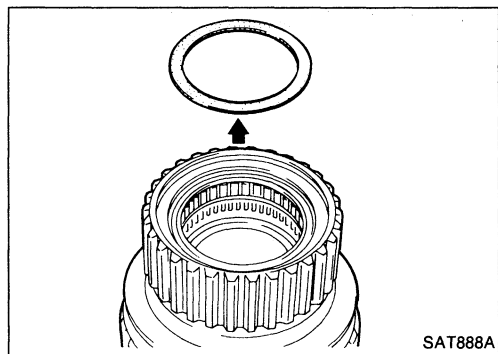


3. Remove low one-way clutch from forward clutch drum.

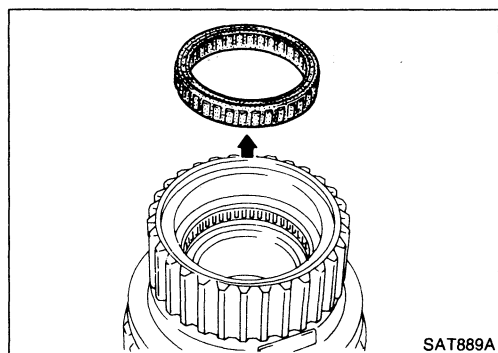




## REPAIR FOR COMPONENT PARTS


### Forward Clutch Drum Assembly (Cont'd)

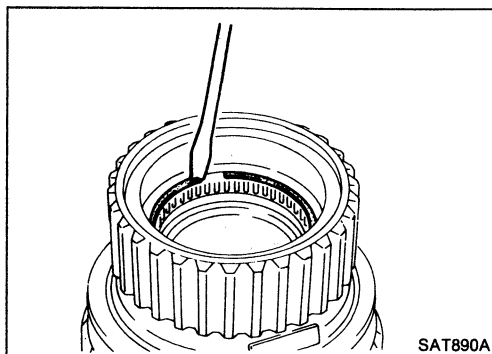

4. Remove snap ring from forward clutch drum.

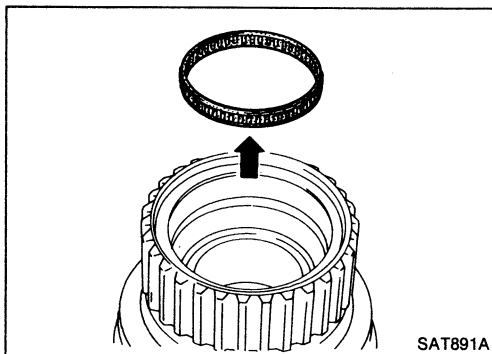


5. Remove needle bearing from forward clutch drum.

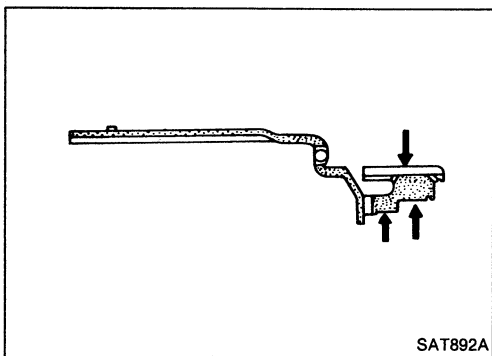

### INSPECTION


#### Forward clutch drum

- Check spline portion for wear or damage.
- Check frictional surfaces of low one-way clutch and needle bearing for wear or damage.

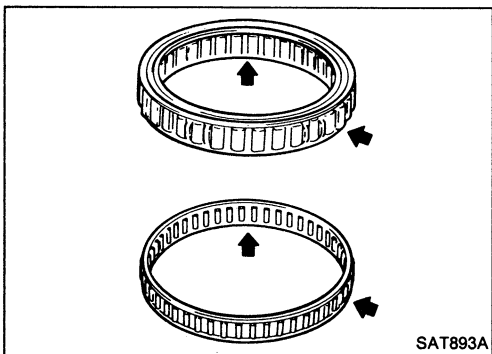

#### Needle bearing and low one-way clutch

- Check frictional surface for wear or damage.

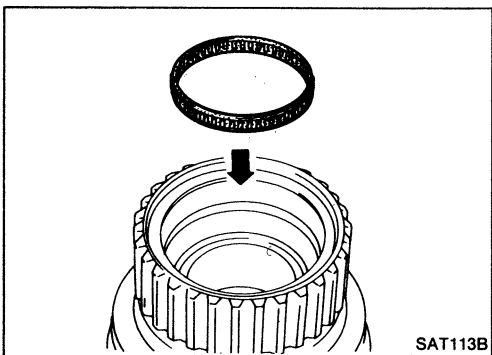


### ASSEMBLY


1. Install needle bearing in forward clutch drum.

## REPAIR FOR COMPONENT PARTS


### Forward Clutch Drum Assembly (Cont'd)

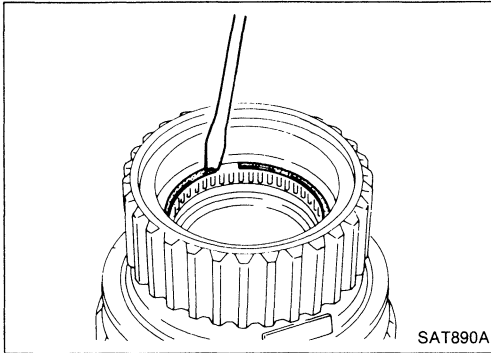


2. Install snap ring onto forward clutch drum.

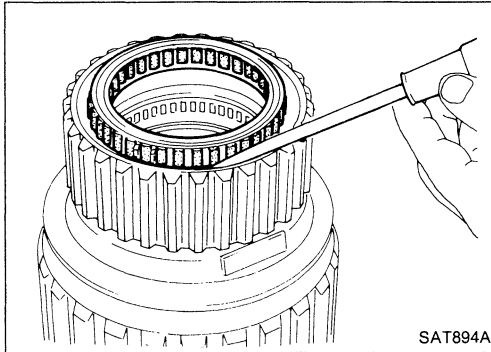

3. Install low one-way clutch onto forward clutch drum by pushing the roller in evenly.


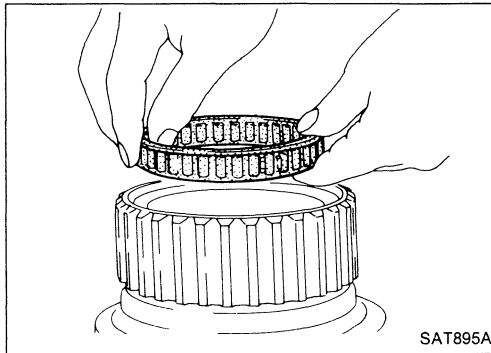


- Install low one-way clutch with flange facing rearward.

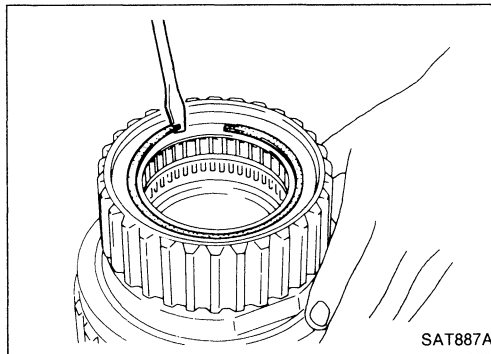


4. Install side plate onto forward clutch drum.
5. Install snap ring onto forward clutch drum.

## Rear Internal Gear and Forward Clutch Hub

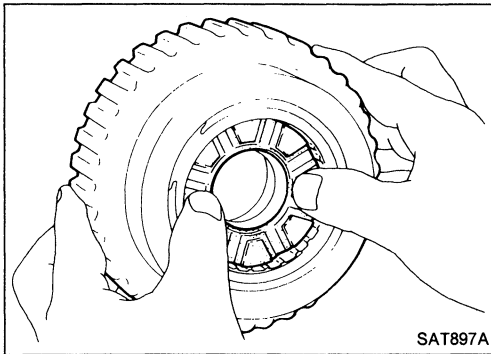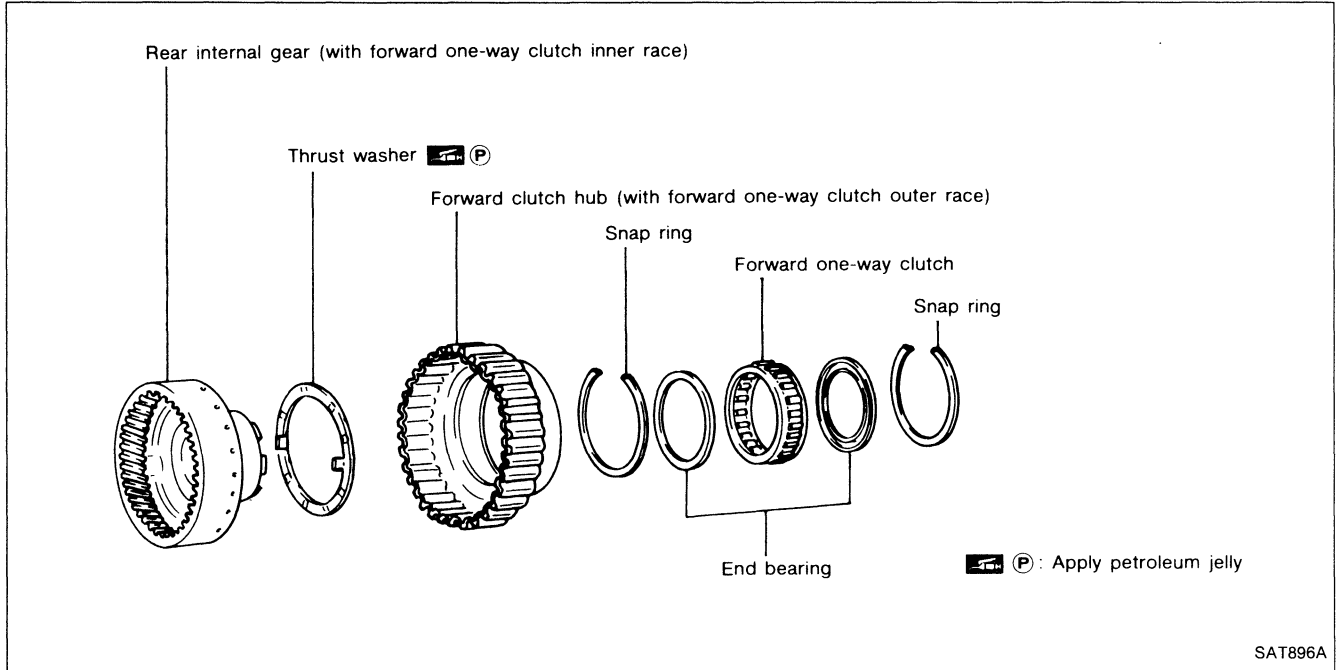


### DISASSEMBLY

1. Remove rear internal gear by pushing forward clutch hub forward.

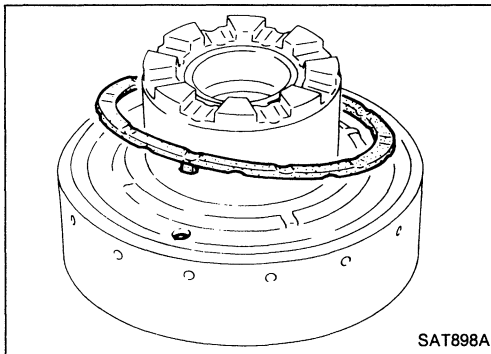


2. Remove thrust washer from rear internal gear.

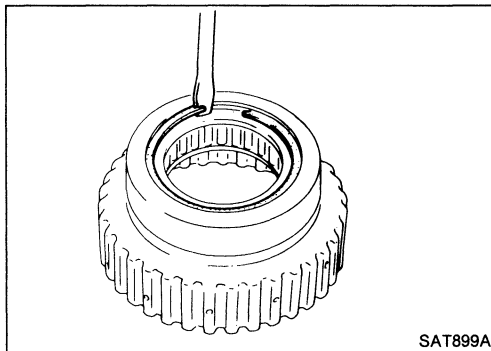


3. Remove snap ring from forward clutch hub.

## REPAIR FOR COMPONENT PARTS


### Rear Internal Gear and Forward Clutch Hub (Cont'd)

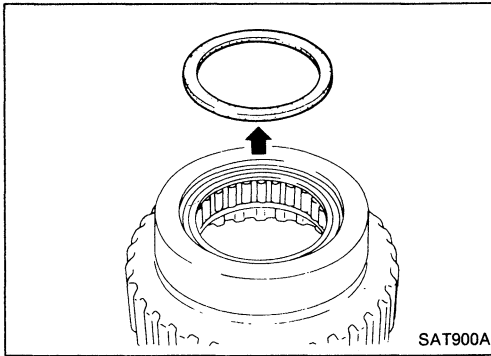


4. Remove end bearing.

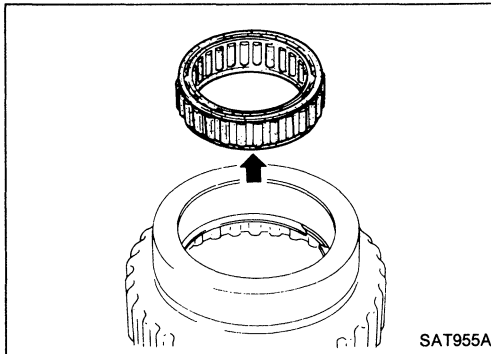

5. Remove forward one-way clutch and end bearing as a unit from forward clutch hub.

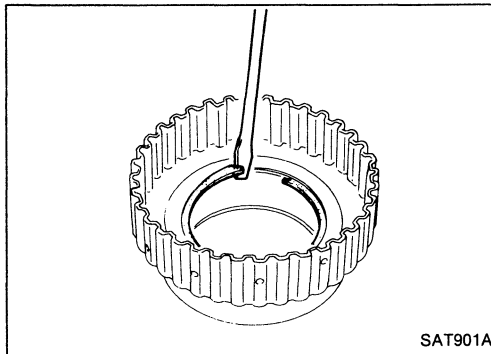


6. Remove snap ring from forward clutch hub.

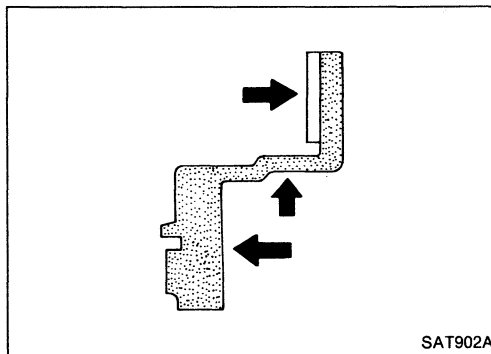

#### INSPECTION

##### Rear internal gear and forward clutch hub

- Check gear for excessive wear, chips or cracks.
- Check frictional surfaces of forward one-way clutch and thrust washer for wear or damage.
- Check spline for wear or damage.

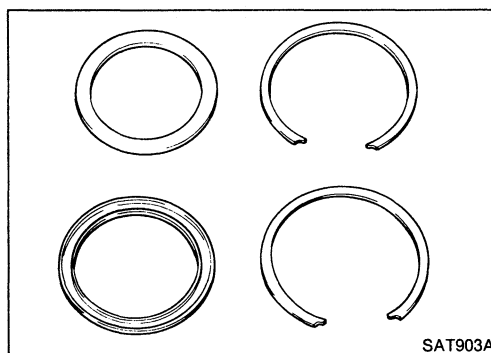

##### Snap ring and end bearing


- Check for deformation or damage.

## REPAIR FOR COMPONENT PARTS


### Rear Internal Gear and Forward Clutch Hub (Cont'd)

#### ASSEMBLY


1. Install snap ring onto forward clutch hub.
2. Install end bearing.

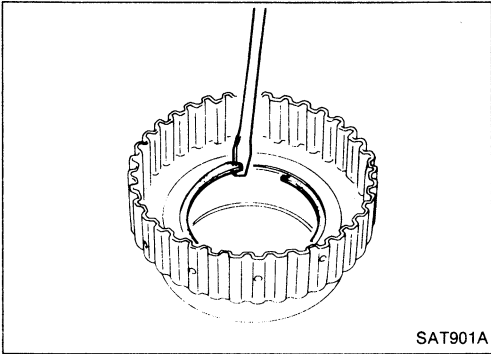


3. Install forward one-way clutch onto clutch hub.
  - **Install forward one-way clutch with flange facing rearward.**
4. Install end bearing.
5. Install snap ring onto forward clutch hub.

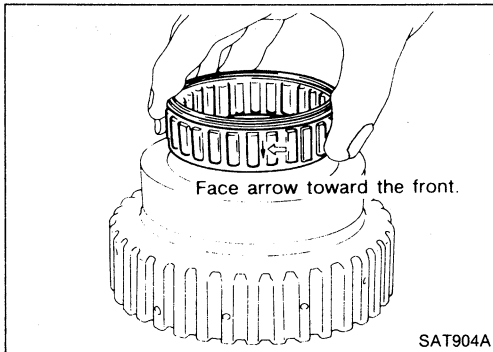


6. Install thrust washer onto rear internal gear.
  - **Apply petroleum jelly to thrust washer.**
  - **Securely insert pawls of thrust washer into holes in rear internal gear.**

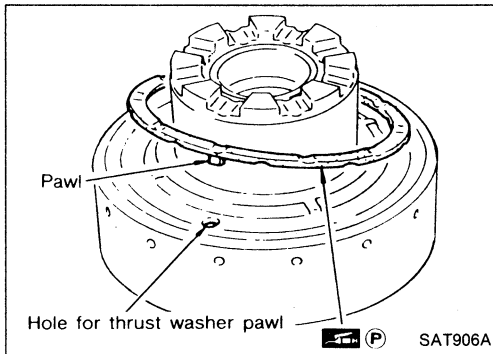



7. Position forward clutch hub in rear internal gear.

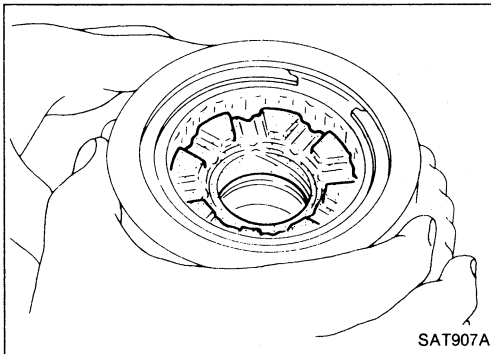

8. After installing, check to assure that forward clutch hub rotates clockwise.

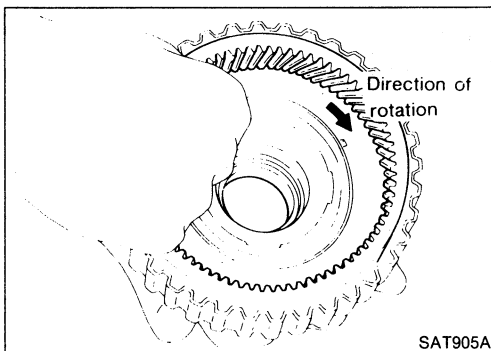


## Band Servo Piston Assembly

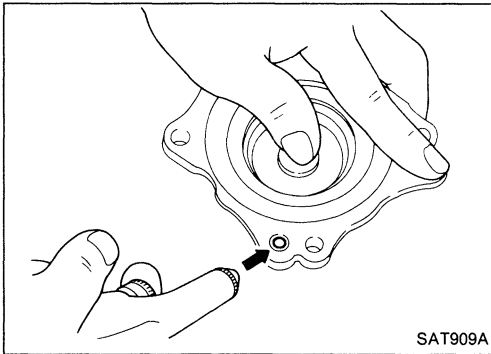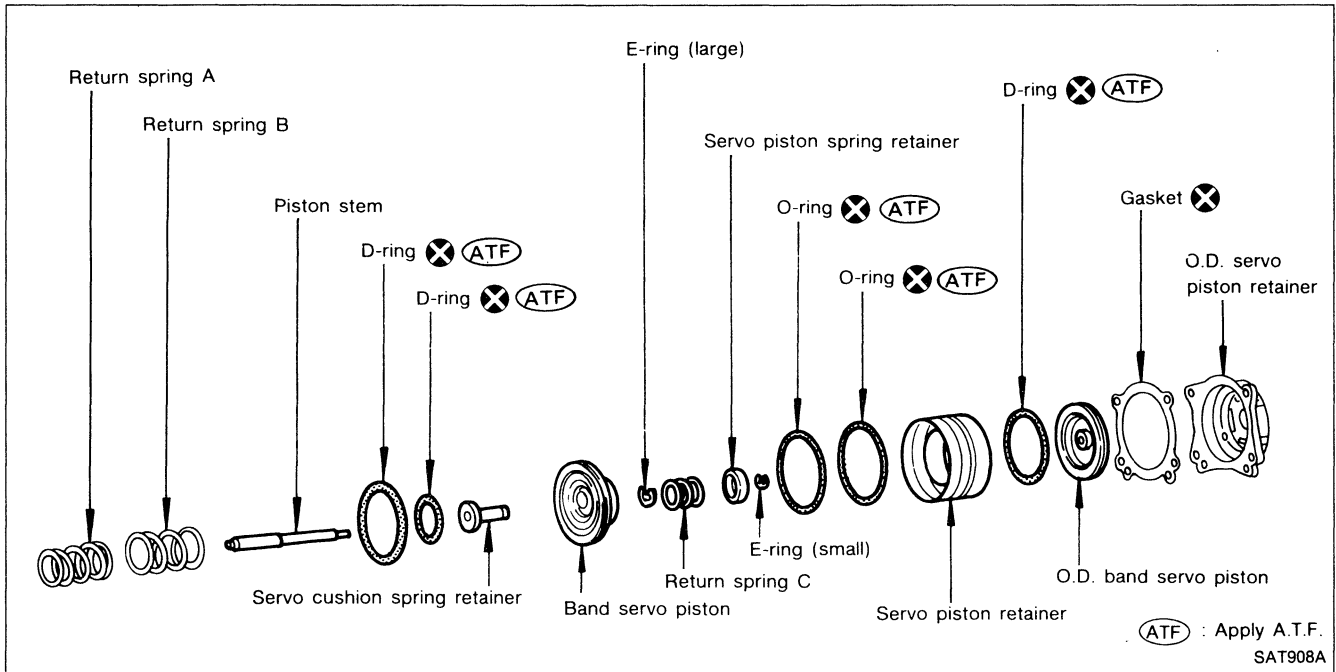


### DISASSEMBLY

1. Block one oil hole in O.D. servo piston retainer and the center hole in O.D. band servo piston.
2. Apply compressed air to the other oil hole in piston retainer to remove O.D. band servo piston from retainer.
3. Remove D-ring from O.D. band servo piston.

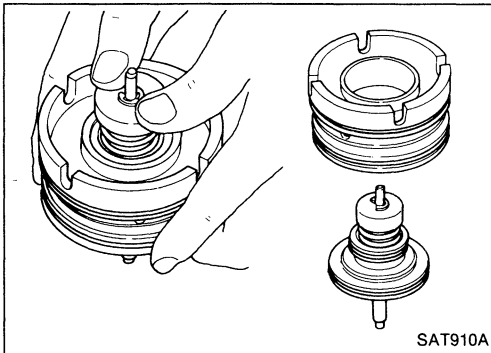


4. Remove band servo piston assembly from servo piston retainer by pushing it forward.

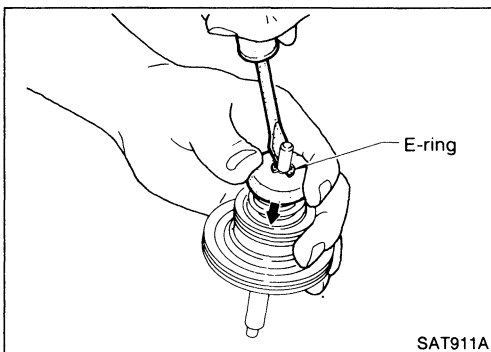


5. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, remove E-ring.

## REPAIR FOR COMPONENT PARTS


### Band Servo Piston Assembly (Cont'd)

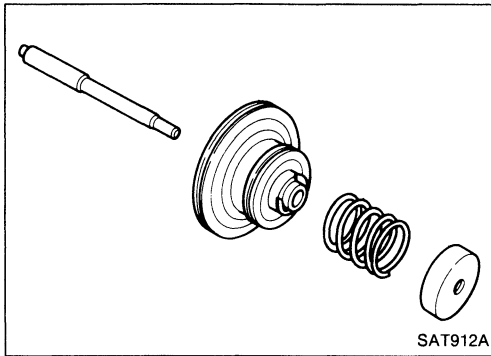


- Remove servo piston spring retainer, return spring C and piston stem from band servo piston.

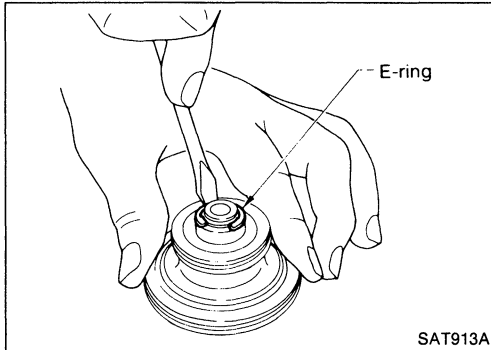

- Remove E-ring from band servo piston.

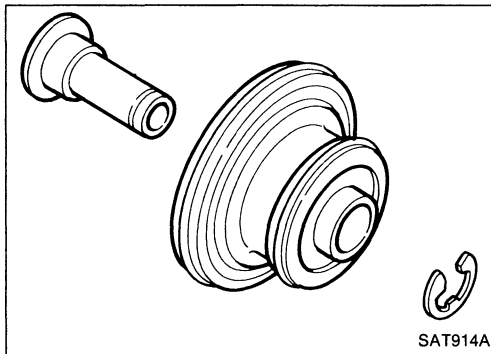

- Remove servo cushion spring retainer from band servo piston.
- Remove D-rings from band servo piston.
- Remove O-rings from servo piston retainer.

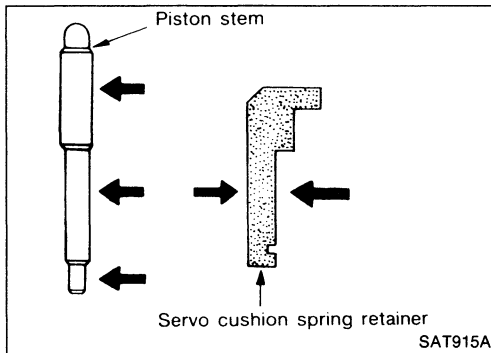

### INSPECTION

#### Pistons, retainers and piston stem

- Check frictional surfaces for abnormal wear or damage.


#### Return springs

- Check for deformation or damage. Measure free length and outer diameter.

#### Inspection standard:

Unit: mm (in)


Parts	Free length	Outer diameter
Spring A	45.6 (1.795)	34.3 (1.350)
Spring B	53.8 (2.118)	40.3 (1.587)
Spring C	29.0 (1.142)	27.6 (1.087)

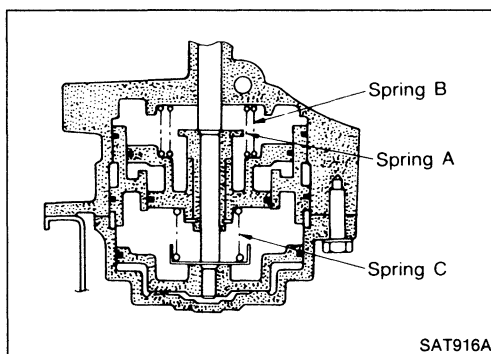


## REPAIR FOR COMPONENT PARTS

### Band Servo Piston Assembly (Cont'd)


#### ASSEMBLY

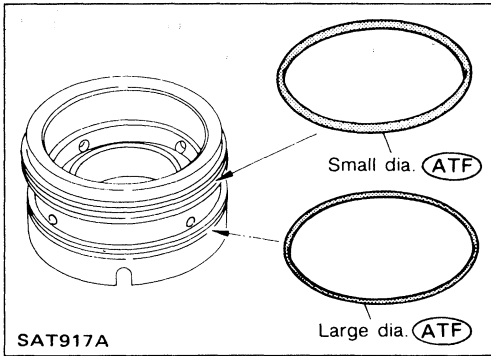


1. Install O-rings onto servo piston retainer.
  - Apply A.T.F. to O-rings.
  - Pay attention to position of each O-ring.

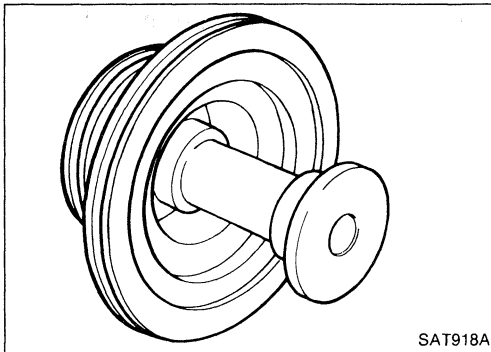


2. Install servo cushion spring retainer onto band servo piston.

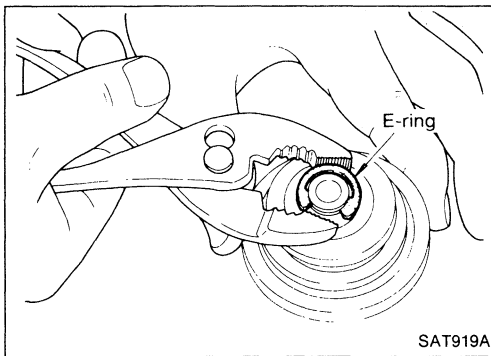

3. Install E-ring onto servo cushion spring retainer.

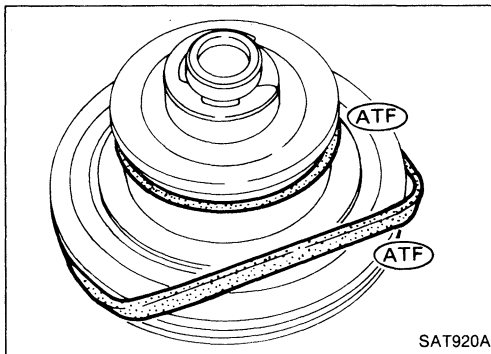

4. Install D-rings onto band servo piston.
  - Apply A.T.F. to D-rings.

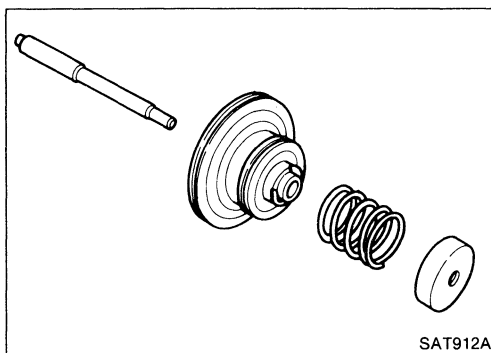


5. Install servo piston spring retainer, return spring C and piston stem onto band servo piston.




## REPAIR FOR COMPONENT PARTS


### Band Servo Piston Assembly (Cont'd)

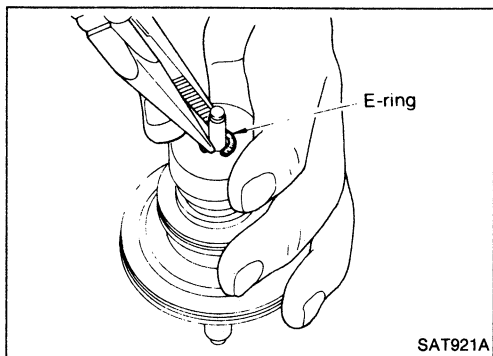


6. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, install E-ring.

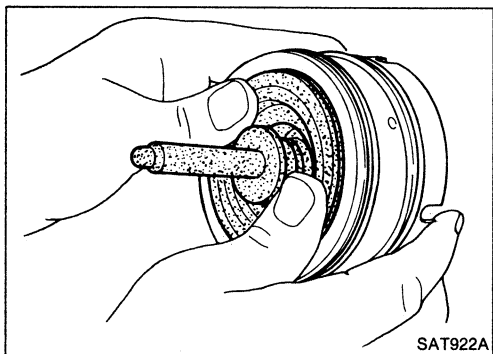

7. Install band servo piston assembly onto servo piston retainer by pushing it inward.


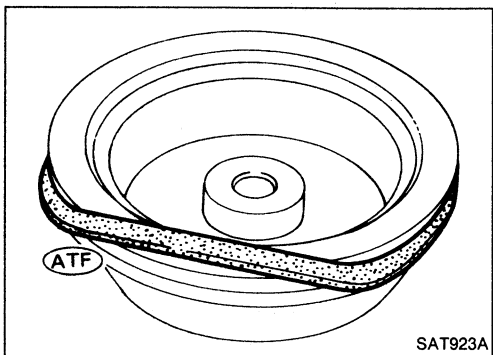


8. Install D-ring on O.D. band servo piston.
- **Apply A.T.F. to D-ring.**

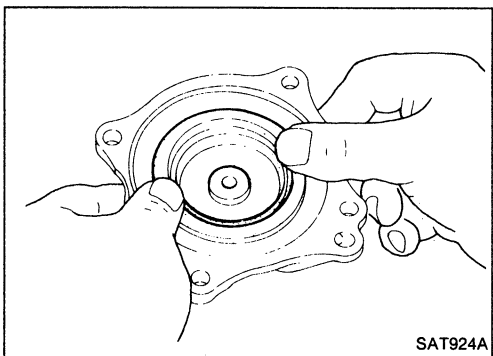


9. Install O.D. band servo piston onto servo piston retainer by pushing it inward.

## Parking Pawl Components

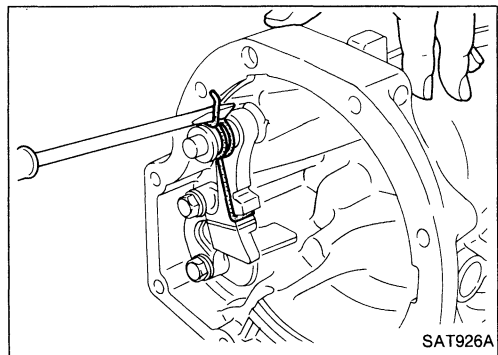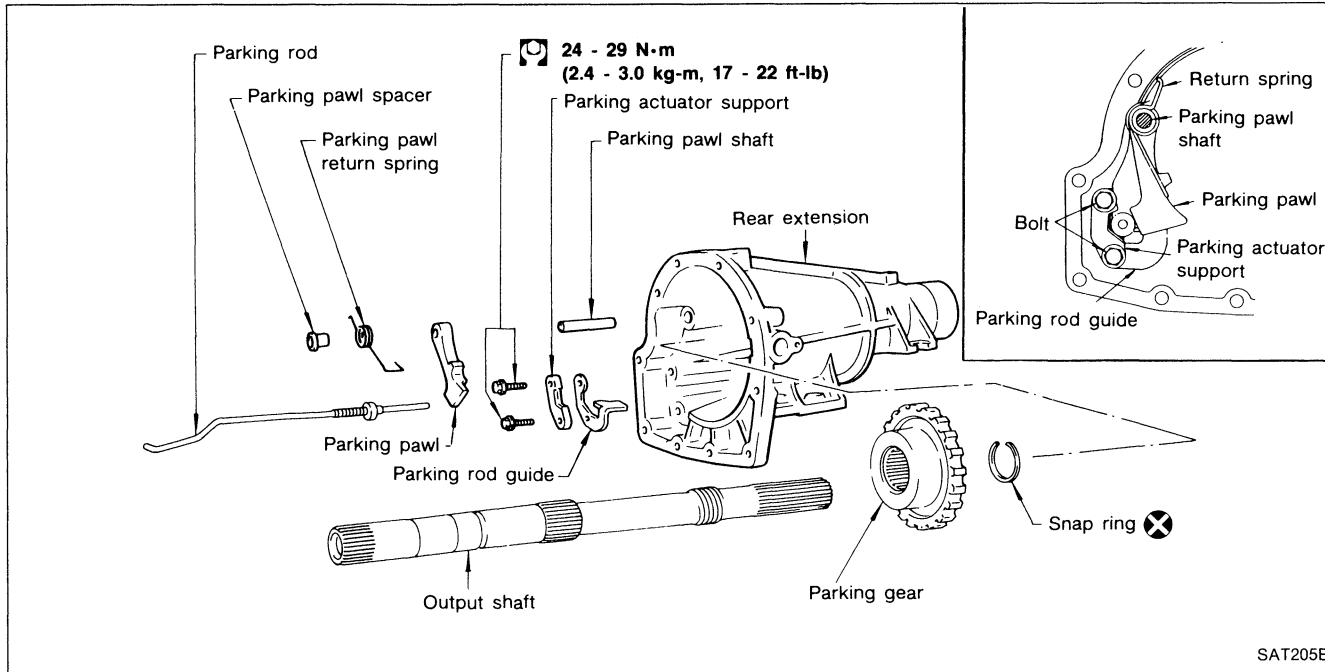


### DISASSEMBLY

1. Slide return spring to the front of rear extension flange.

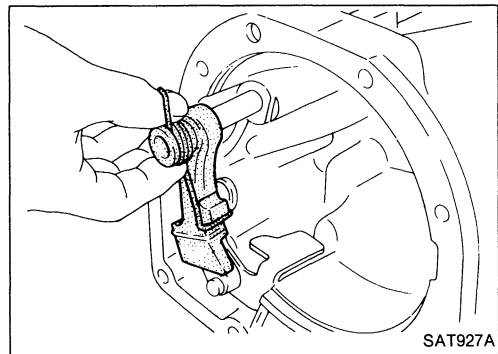

2. Remove return spring, pawl spacer and parking pawl from rear extension.
3. Remove parking pawl shaft from rear extension.

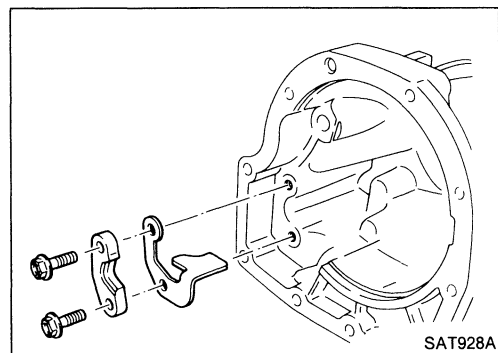

4. Remove parking actuator support and rod guide from rear extension.



## REPAIR FOR COMPONENT PARTS

### Parking Pawl Components (Cont'd)

#### INSPECTION


##### Parking pawl and parking actuator support

- Check contact surface of parking rod for wear.

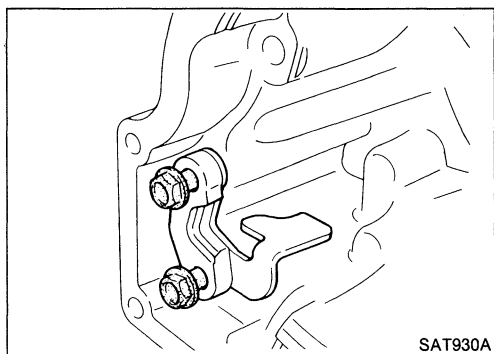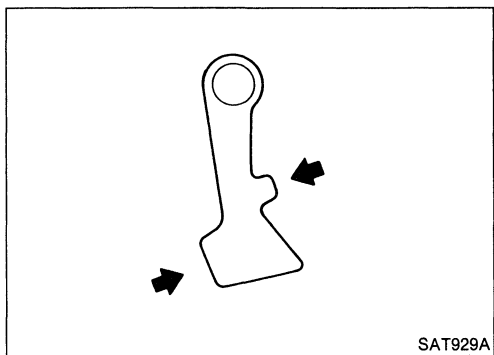


#### ASSEMBLY

1. Install rod guide and parking actuator support onto rear extension.
2. Insert parking pawl shaft into rear extension.

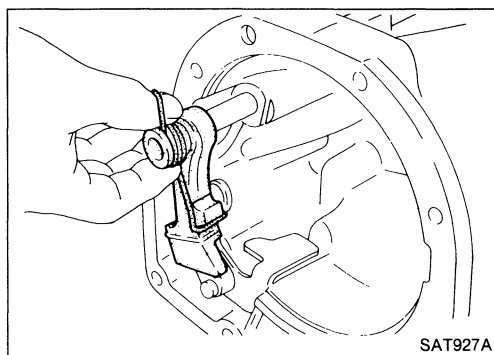


3. Install return spring, pawl spacer and parking pawl onto parking pawl shaft.

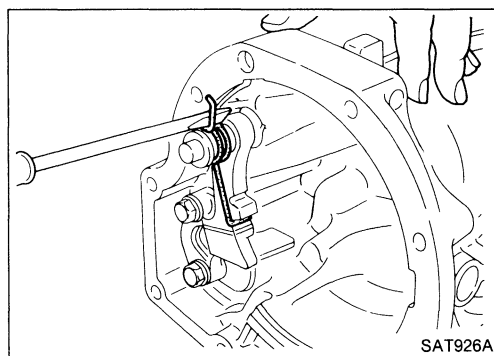


4. Bend return spring upward and install it onto rear extension.

## ASSEMBLY

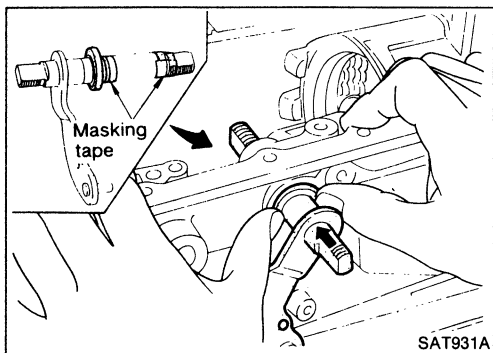


### Assembly


1. Install manual shaft components.
  - a. Install oil seal onto manual shaft.
    - Apply A.T.F. to oil seal.
    - Wrap threads of manual shaft with masking tape.
  - b. Insert manual shaft and oil seal as a unit into transmission case.
  - c. Remove masking tape.

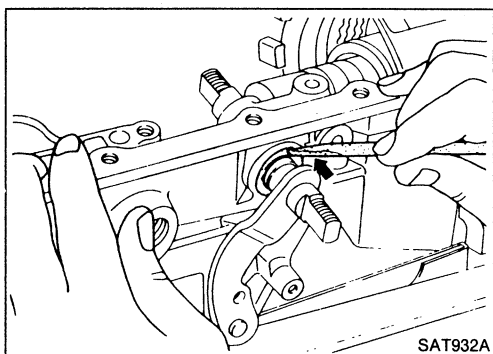


- d. Push oil seal evenly and install it onto transmission case.

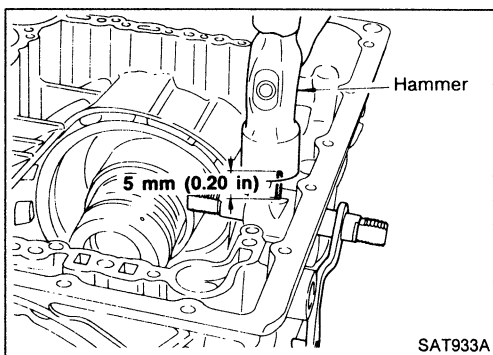

- e. Align groove in shaft with drive pin hole, then drive pin into position as shown in figure at left.

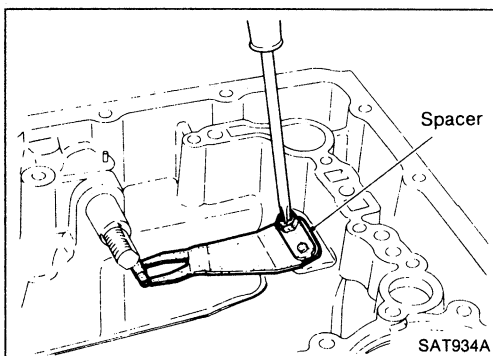

- f. Install detent spring and spacer.

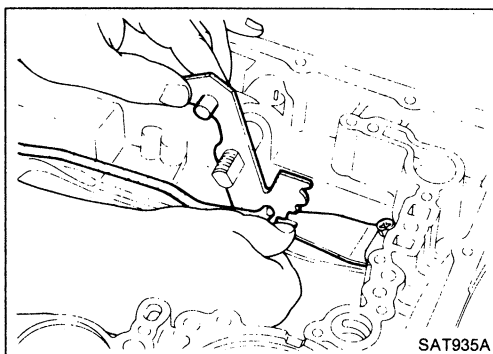


- g. While pushing detent spring down, install manual plate onto manual shaft.


# ASSEMBLY

## Assembly (Cont'd)

- h. Install lock nuts onto manual shaft.

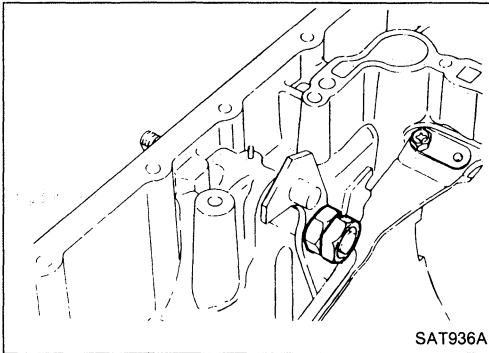

2. Install accumulator piston.  
 a. Install O-rings onto accumulator piston.  
 ● **Apply A.T.F. to O-rings.**

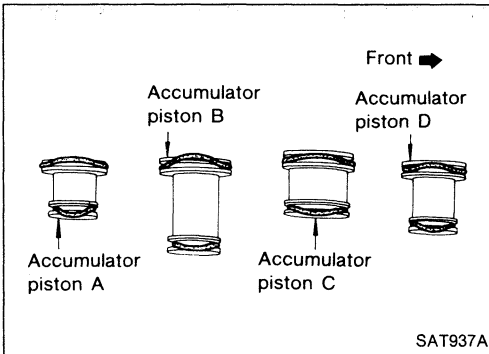


### Accumulator piston O-rings:

Unit: mm (in)

Accumulator	A	B	C	D
Small diameter end	29 (1.14)	32 (1.26)	45 (1.77)	29 (1.14)
Large diameter end	45 (1.77)	50 (1.97)	50 (1.97)	45 (1.77)

- b. Install return spring for accumulator A onto transmission case.

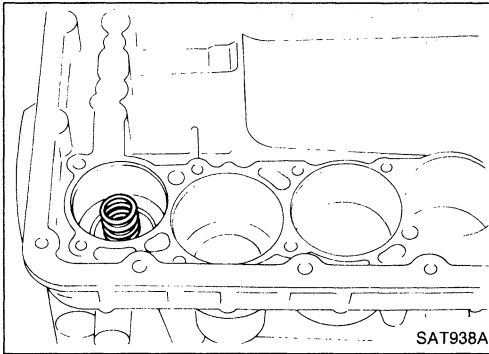


### Free length of return spring:


Unit: mm (in)

Accumulator	A
Free length	43 (1.69)

- c. Install accumulator pistons A, B, C and D.  
 ● **Apply A.T.F. to transmission case.**

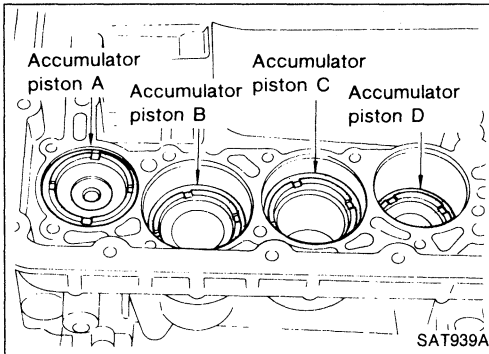


3. Install band servo piston.  
 a. Install return springs onto servo piston.

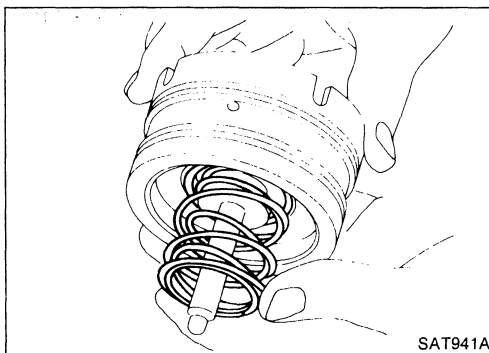


## ASSEMBLY


### Assembly (Cont'd)

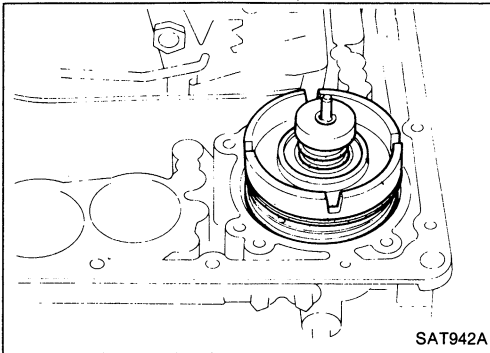


- b. Install band servo piston onto transmission case.
- Apply A.T.F. to O-ring of band servo piston and transmission case.
- c. Install gasket for band servo onto transmission case.

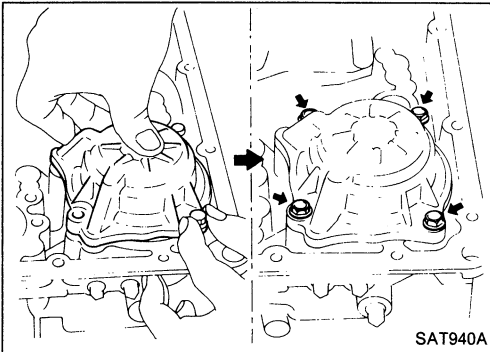


- d. Install band servo retainer onto transmission case.

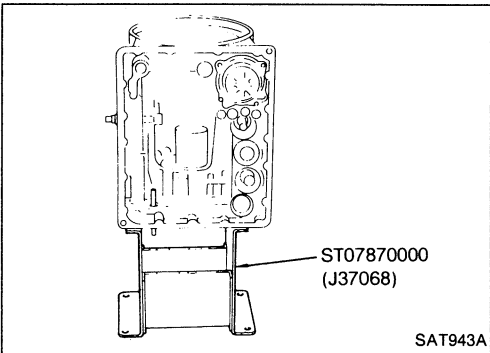

- 4. Install rear side clutch and gear components.
- a. Place transmission case in vertical position.

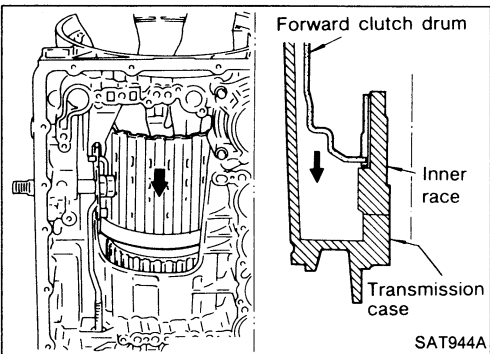


- b. Slightly lift forward clutch drum assembly and slowly rotate it clockwise until its hub passes fully over the clutch inner race inside transmission case.

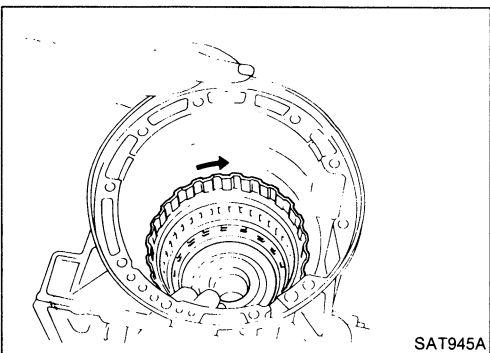


- c. Check to be sure that rotation direction of forward clutch assembly is correct.

## ASSEMBLY


### Assembly (Cont'd)

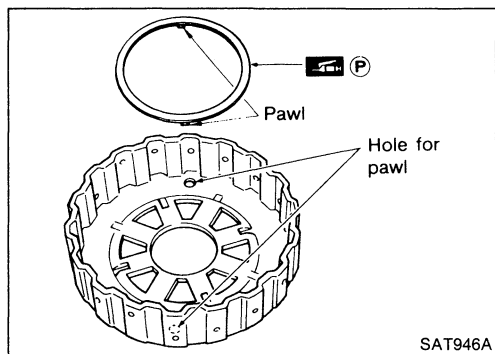


- d. Install thrust washer onto front of overrun clutch hub.
- **Apply petroleum jelly to the thrust washer.**
  - **Insert pawls of thrust washer securely into holes in overrun clutch hub.**

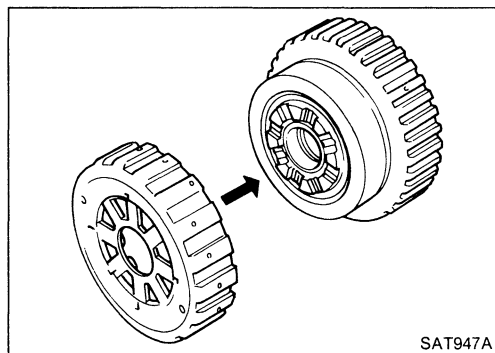


- e. Install overrun clutch hub onto rear internal gear assembly.

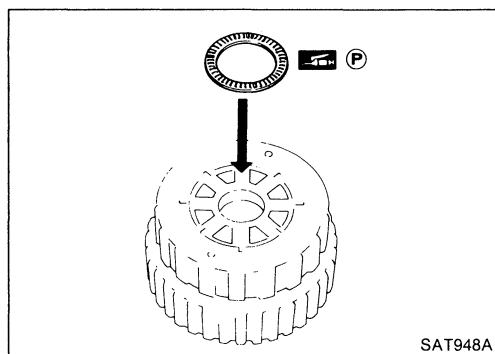

- f. Install needle bearing onto rear of overrun clutch hub.
- **Apply petroleum jelly to needle bearing.**

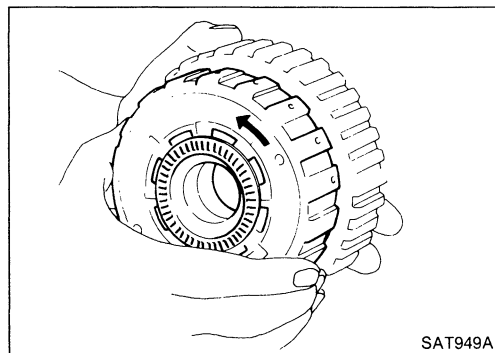


- g. Check that overrun clutch hub rotates as shown while holding forward clutch hub.

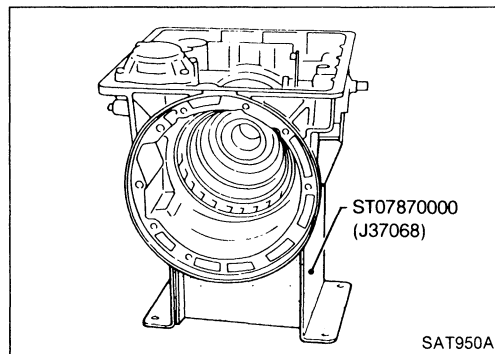


- h. Place transmission case into horizontal position.

## ASSEMBLY


### Assembly (Cont'd)

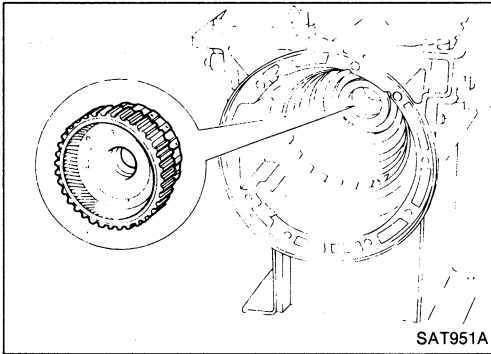


- i. Install rear internal gear, forward clutch hub and overrun clutch hub as a unit onto transmission case.

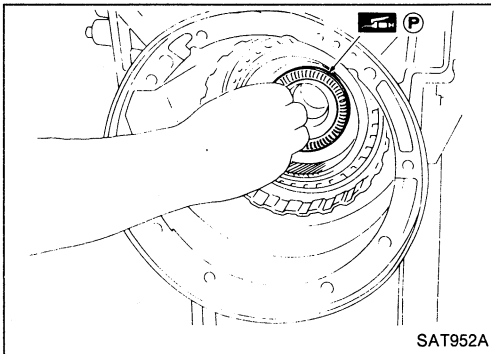

- j. Install needle bearing onto rear internal gear.  
● **Apply petroleum jelly to needle bearing.**

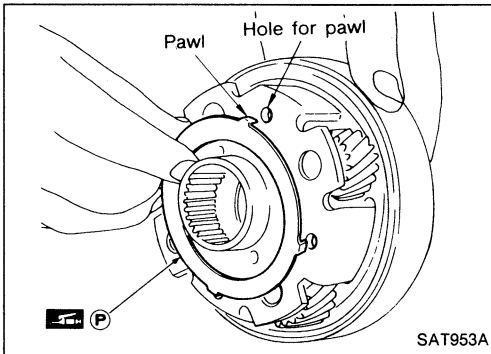

- k. Install bearing race onto rear of front internal gear.  
● **Apply petroleum jelly to bearing race.**  
● **Securely engage pawls of bearing race with holes in front internal gear.**

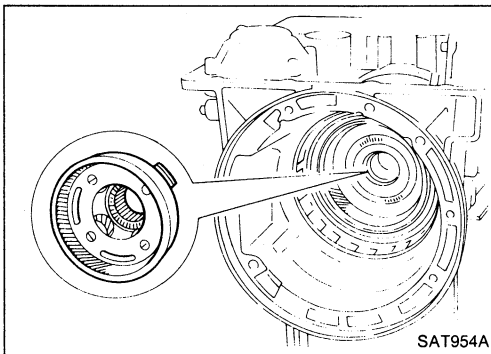

- l. Install front internal gear on transmission case.




# ASSEMBLY


## Adjustment

When any parts listed in the following table are replaced, total end play or reverse clutch end play must be adjusted.

Part name	Total end play	Reverse clutch end play
Transmission case	●	●
Low one-way clutch inner race	●	●
Overrun clutch hub	●	●
Rear internal gear	●	●
Rear planetary carrier	●	●
Rear sun gear	●	●
Front planetary carrier	●	●
Front sun gear	●	●
High clutch hub	●	●
High clutch drum	●	●
Oil pump cover	●	●
Reverse clutch drum	—	●

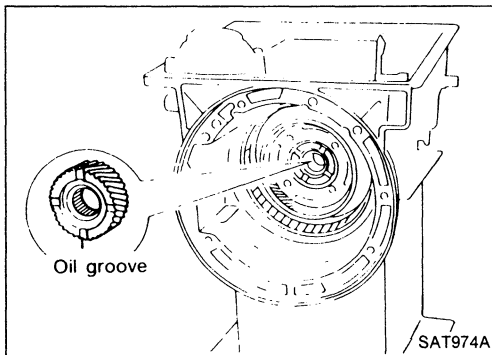


1. Install front side clutch and gear components.
  - a. Install rear sun gear on transmission case.
    - **Pay attention to its direction.**

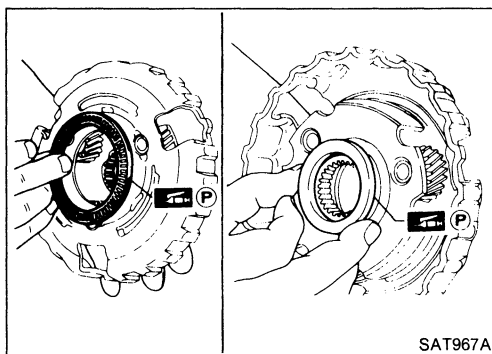


- b. Install needle bearing on front of front planetary carrier.
        - **Apply petroleum jelly to needle bearing.**
      - c. Install needle bearing on rear of front planetary carrier.
        - **Apply petroleum jelly to bearing.**
        - **Pay attention to its direction — Black side goes to front.**

## ASSEMBLY


### Adjustment (Cont'd)

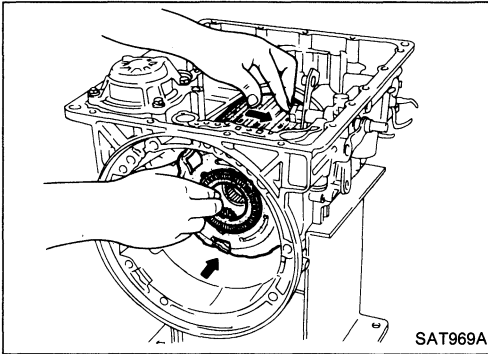


- d. While rotating forward clutch drum clockwise, install front planetary carrier on forward clutch drum.

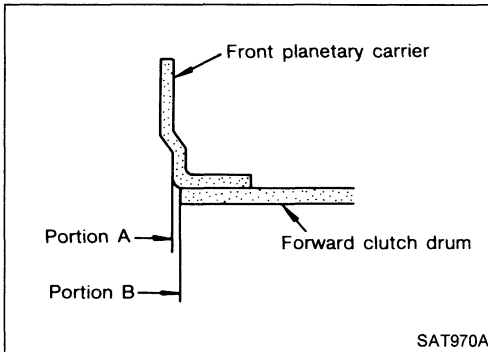


- Check that portion A of front planetary carrier protrudes approximately 2 mm (0.08 in) beyond portion B of forward clutch assembly.

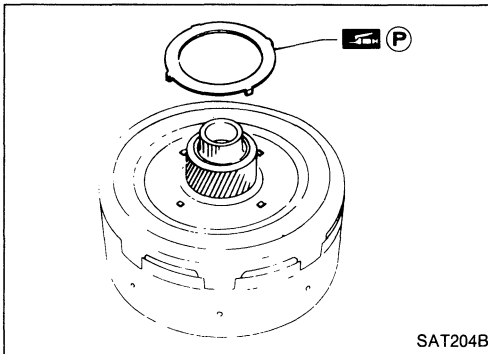

- e. Install bearing race on rear of clutch pack.
- Apply petroleum jelly to bearing races.
  - Securely engage pawls of bearing race with hole in clutch pack.

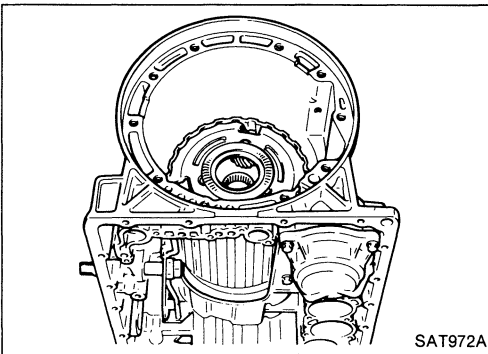


- f. Place transmission case in vertical position.

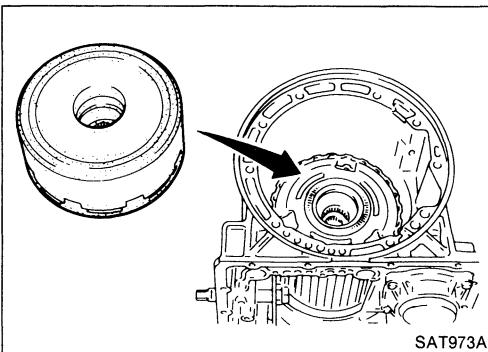

- g. Install clutch pack into transmission case.

# ASSEMBLY


## Adjustment (Cont'd)

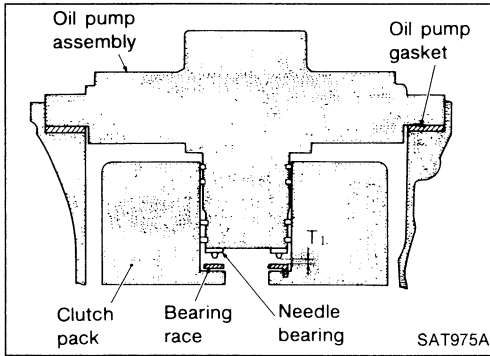


2. Adjust total end play.

**Total end play "T<sub>1</sub>":**


**0.25 - 0.55 mm (0.0098 - 0.0217 in)**

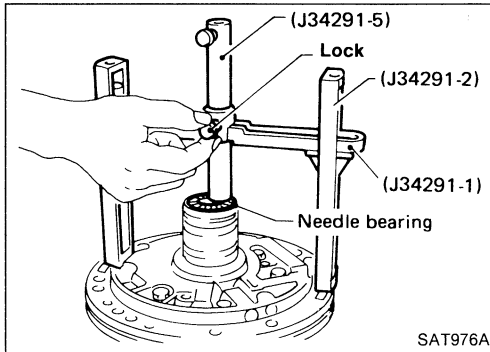


- a. With needle bearing installed, place J34291-1 (bridge), J34291-2 (legs) and the J34291-5 (gauging cylinder) onto oil pump. The long ends of legs should be placed firmly on machined surface of oil pump assembly and gauging cylinder should rest on top of the needle bearing. Lock gauging cylinder in place with set screw.

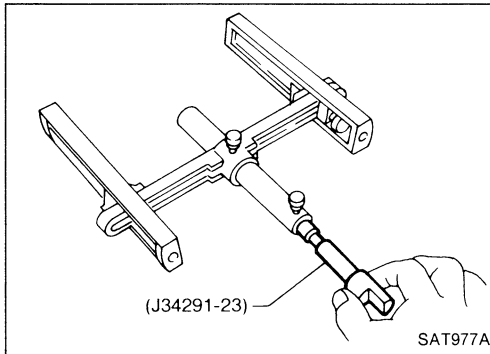

- b. Install J34291-23 (gauging plunger) into gauging cylinder.

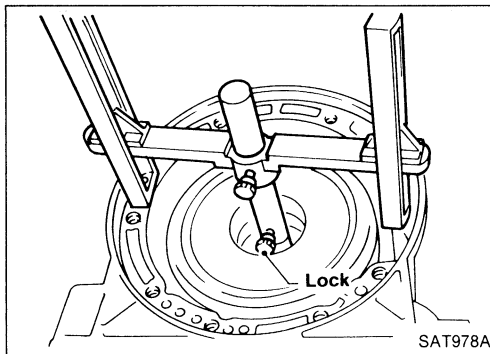

- c. With original bearing race installed inside reverse clutch drum, place shim selecting gauge with its legs on machined surface of transmission case (no gasket) and allow gauging plunger to rest on bearing race. Lock gauging plunger in place with set screw.

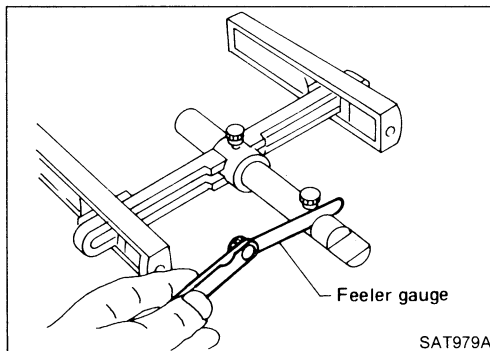

- d. Remove Tool and use feeler gauge to measure gap between gauging cylinder and gauging plunger. This measurement should give exact total end play.

**Total end play "T<sub>1</sub>":**

**0.25 - 0.55 mm (0.0098 - 0.0217 in)**


- If end play is out of specification, decrease or increase thickness of oil pump cover bearing race as necessary.

**Available oil pump cover bearing race:**


**Refer to S.D.S.**

# ASSEMBLY


## Adjustment (Cont'd)

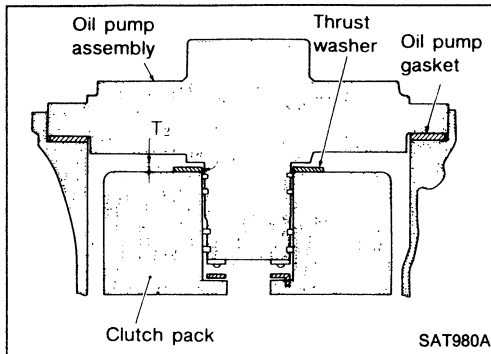


3. Adjust reverse clutch drum end play.  
**Reverse clutch drum end play "T<sub>2</sub>":**  
**0.55 - 0.90 mm (0.0217 - 0.0354 in)**

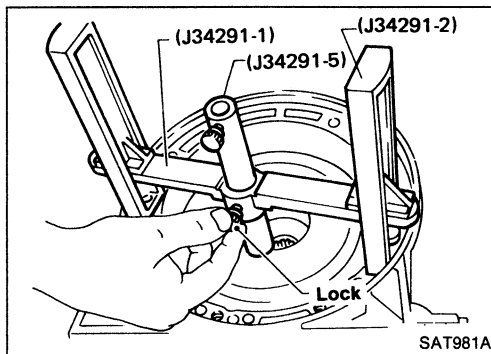


- a. Place J34291-1 (bridge), J34291-2 (legs) and J34291-5 (gauging cylinder) on machined surface of transmission case (no gasket) and allow gauging cylinder to rest on front thrust surface of reverse clutch drum. Lock cylinder in place with set screw.

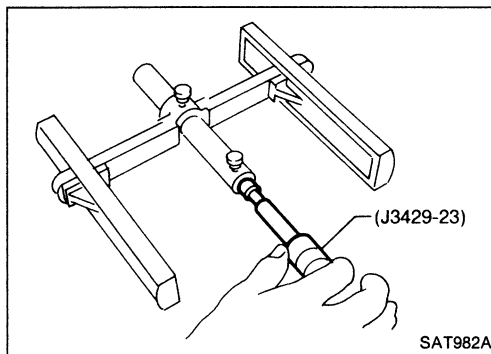

- b. Install J34291-23 (gauging plunger) into gauging cylinder.

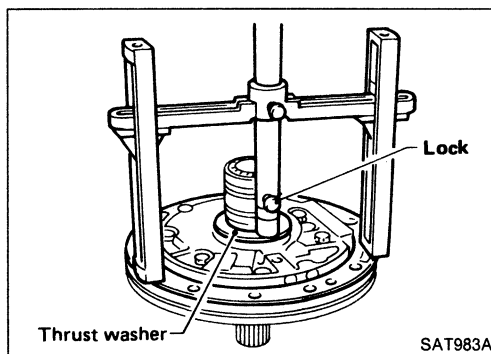

- c. With original thrust washer installed on oil pump, place shim setting gauge legs onto machined surface of oil pump assembly and allow gauging plunger to rest on thrust washer. Lock plunger in place with set screw.

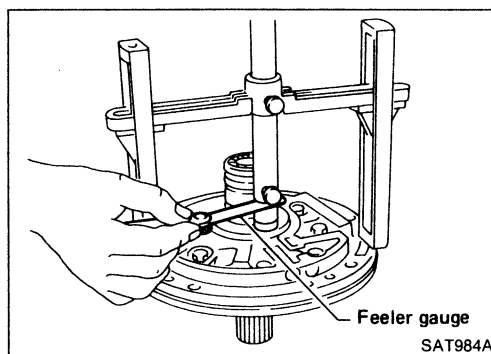


- d. Use feeler gauge to measure gap between gauging plunger and gauging cylinder. This measurement should give you exact reverse clutch drum end play.

**Reverse clutch drum end play "T<sub>2</sub>":**  
**0.55 - 0.90 mm (0.0217 - 0.0354 in)**

- If end play is out of specification, decrease or increase thickness of oil pump thrust washer as necessary.


**Available oil pump thrust washer:**  
**Refer to S.D.S.**

# ASSEMBLY

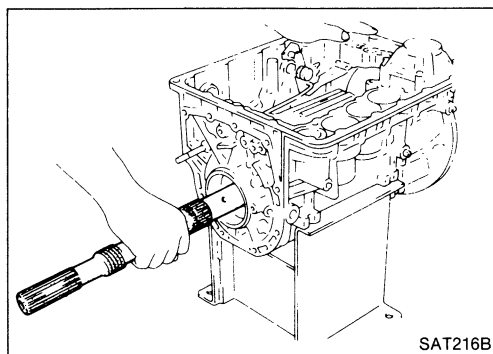


## Assembly


1. Install output shaft and parking gear.
  - a. Insert output shaft from rear of transmission case while slightly lifting front internal gear.
    - **Do not force output shaft against front of transmission case.**

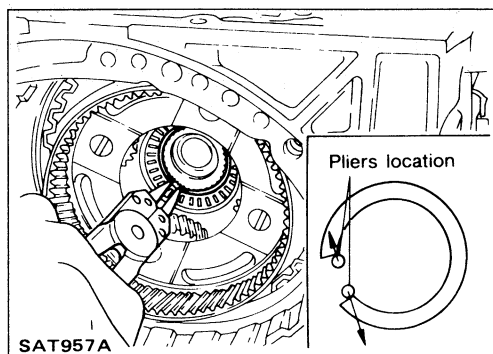


- b. Carefully push output shaft against front of transmission case. Install snap ring on front of output shaft.
      - **Check to be sure output shaft cannot be removed in rear direction.**

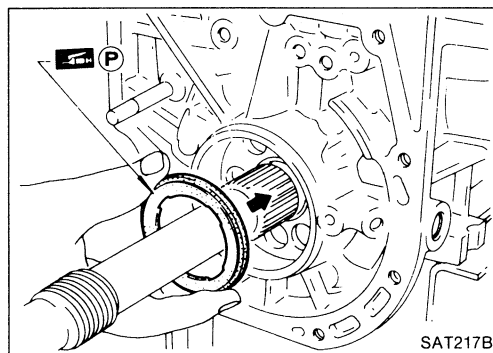

- c. Install needle bearing on transmission case.
        - **Pay attention to its direction — Black side goes to front.**
        - **Apply petroleum jelly to needle bearing.**

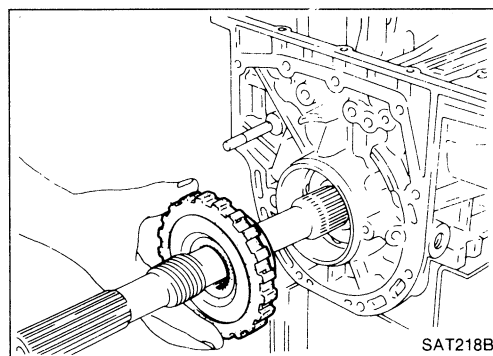


- d. Install parking gear on transmission case.

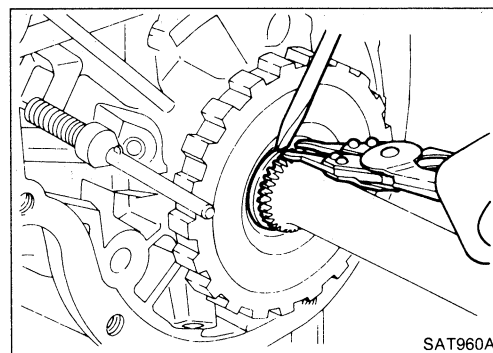


- e. Install snap ring on rear of output shaft.
          - **Check to be sure output shaft cannot be removed in forward direction.**

## ASSEMBLY


### Assembly (Cont'd)

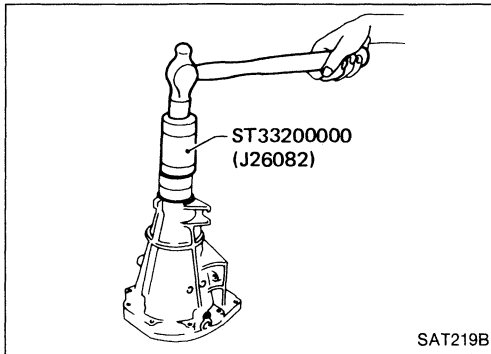


2. Install rear extension.
  - a. Install oil seal on rear extension.
    - **Apply A.T.F. to oil seal.**

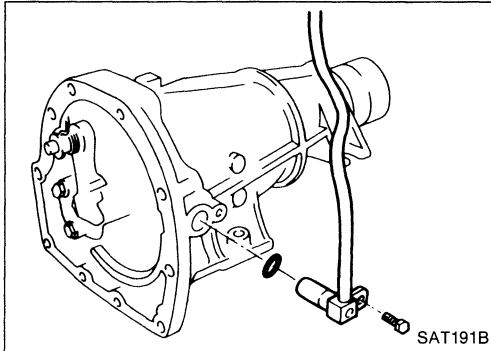


- b. Install O-ring on revolution sensor.
      - **Apply A.T.F. to O-ring.**
    - c. Install revolution sensor on rear extension.

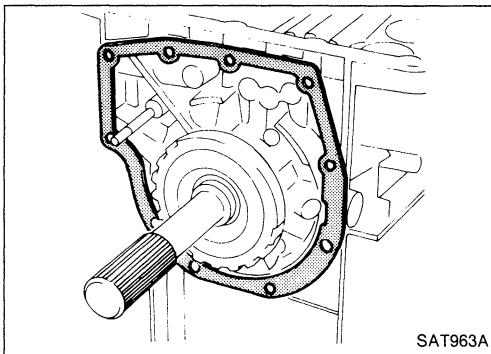

- d. Install rear extension gasket on transmission case.

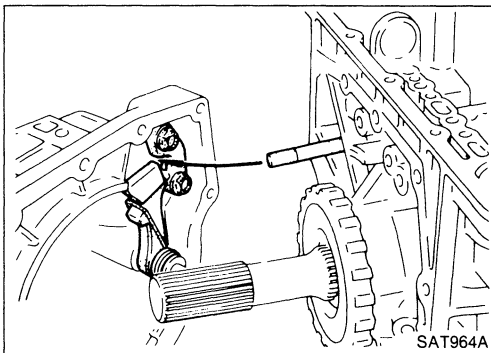






- e. Install parking rod on transmission case.

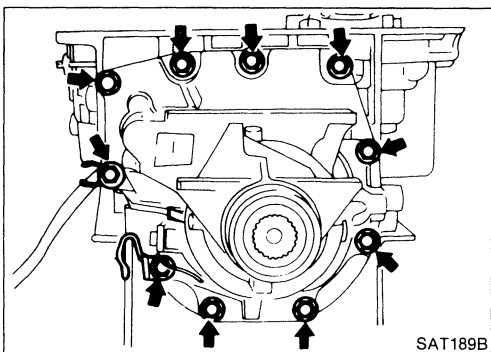

- f. Install rear extension on transmission case.

## ASSEMBLY

### Assembly (Cont'd)

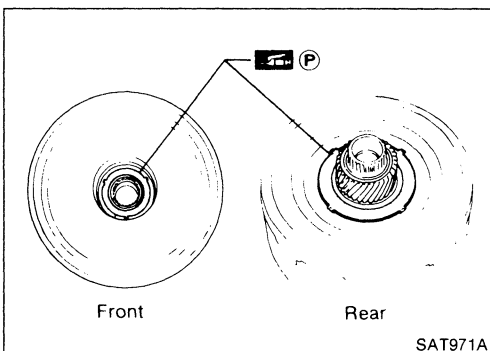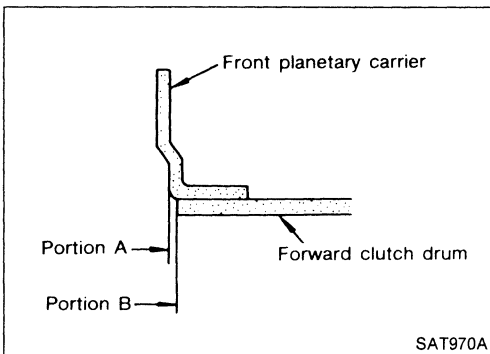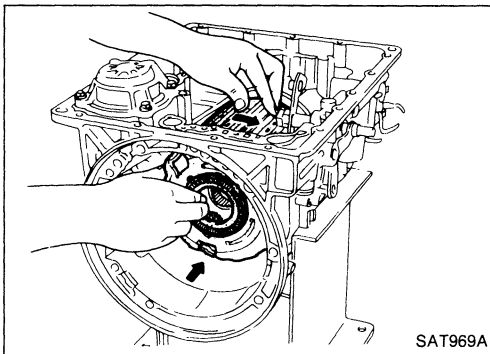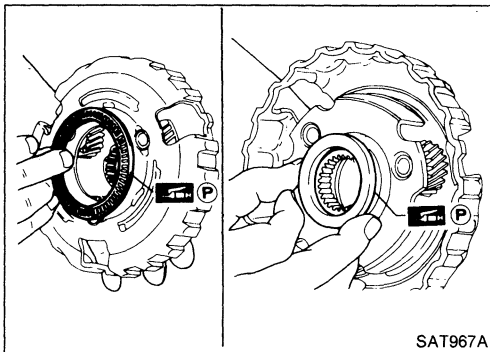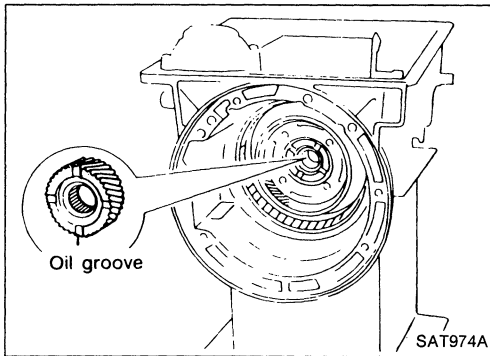

3. Install front side clutch and gear components.

a. Install rear sun gear on transmission case.

- **Pay attention to its direction.**

b. Make sure needle bearing is on front of front planetary carrier.

- **Apply petroleum jelly to needle bearing.**

c. Make sure needle bearing is on rear of front planetary carrier.

- **Apply petroleum jelly to bearing.**

- **Pay attention to its direction — Black side goes to front.**

d. While rotating forward clutch drum clockwise, install front planetary carrier on forward clutch drum.

- **Check that portion A of front planetary carrier protrudes approximately 2 mm (0.08 in) beyond portion B of forward clutch assembly.**

e. Make sure bearing races are on front and rear of clutch pack.



- **Apply petroleum jelly to bearing races.**

- **Securely engage pawls of bearing races with holes in clutch pack.**


## ASSEMBLY

### Assembly (Cont'd)


- f. Install clutch pack into transmission case.

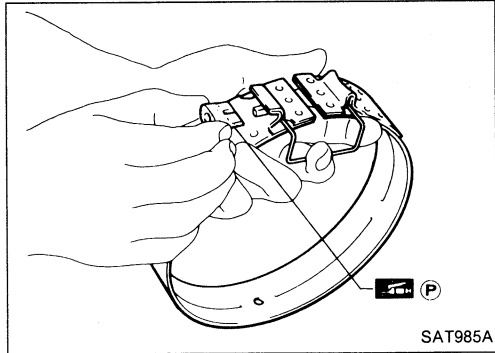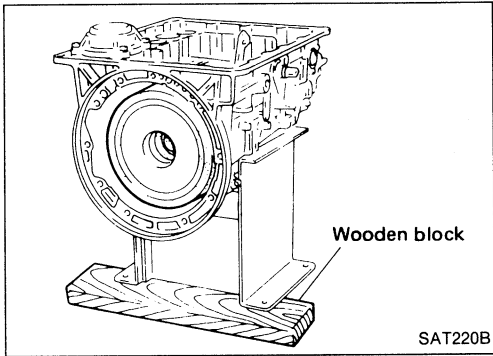


4. Install brake band and band strut.  
a. Install band strut on brake band.  
● **Apply petroleum jelly to band strut.**

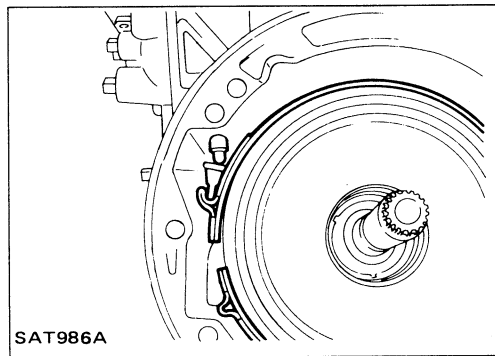

- b. Place brake band on periphery of reverse clutch drum, and insert band strut into end of band servo piston stem.

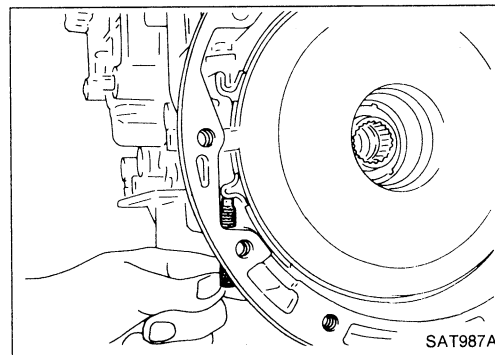

- c. Install anchor end bolt on transmission case. Then, tighten anchor end bolt just enough so that reverse clutch drum (clutch pack) will not tilt forward.





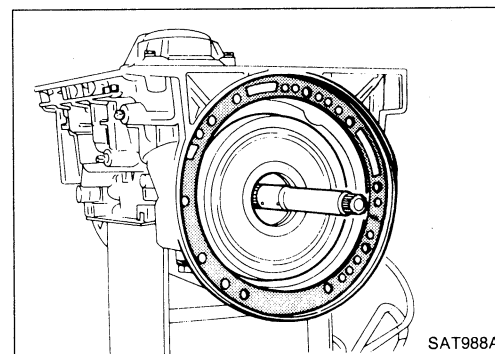


5. Install input shaft on transmission case.  
● **Pay attention to its direction — O-ring groove side is front.**  
6. Install gasket on transmission case.



## ASSEMBLY

### Assembly (Cont'd)

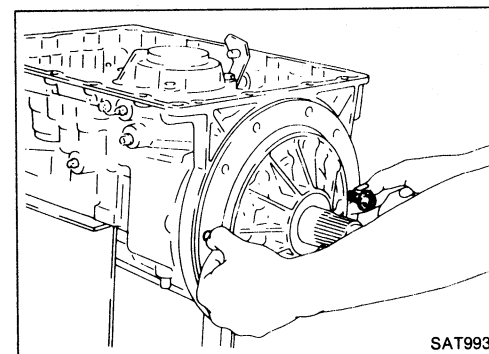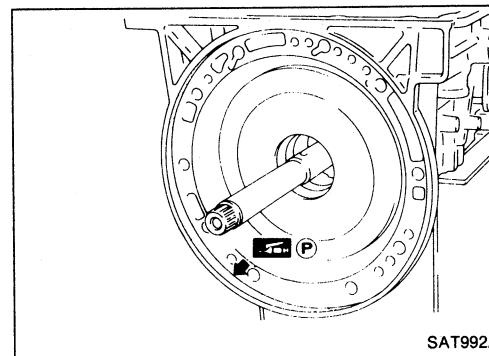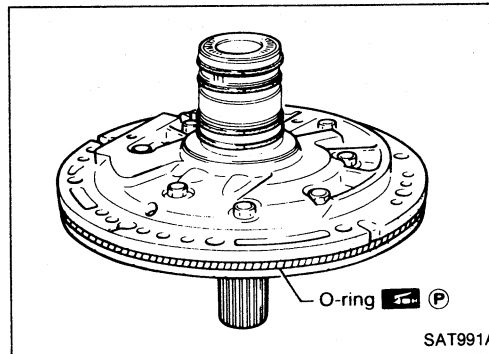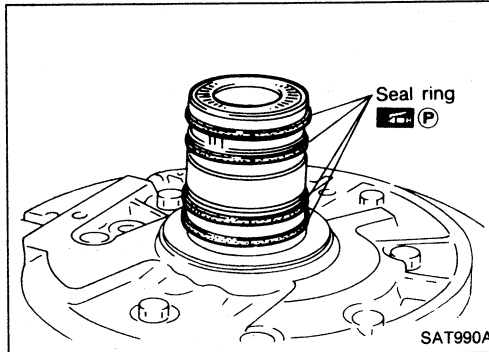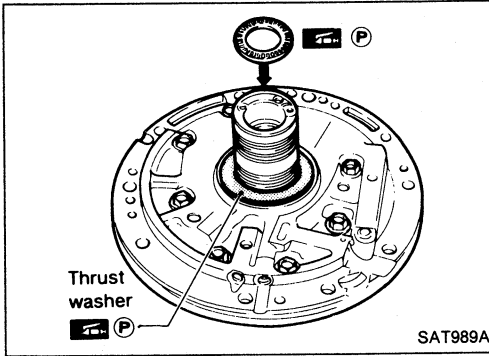

7. Install oil pump assembly.
  - a. Install needle bearing on oil pump assembly.
    - **Apply petroleum jelly to the needle bearing.**
  - b. Install selected thrust washer on oil pump assembly.
    - **Apply petroleum jelly to thrust washer.**

- c. Carefully install seal rings into grooves and press them into the petroleum jelly so that they are a tight fit.


- d. Install O-ring on oil pump assembly.
          - **Apply petroleum jelly to O-ring.**

- e. Apply petroleum jelly to mating surface of transmission case and oil pump assembly.


- f. Install oil pump assembly.
              - **Install two converter housing securing bolts in bolt holes in oil pump assembly as guides.**

# ASSEMBLY


## Assembly (Cont'd)

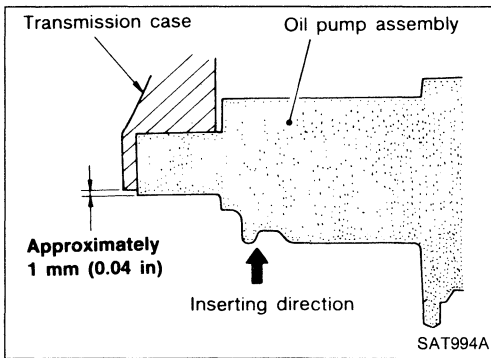


- Insert oil pump assembly to the specified position in transmission, as shown at left.

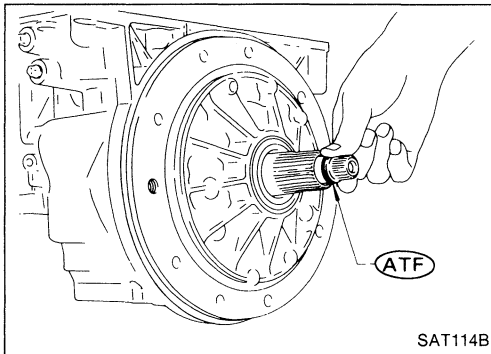


8. Install O-ring on input shaft.
- Apply A.T.F. to O-rings.

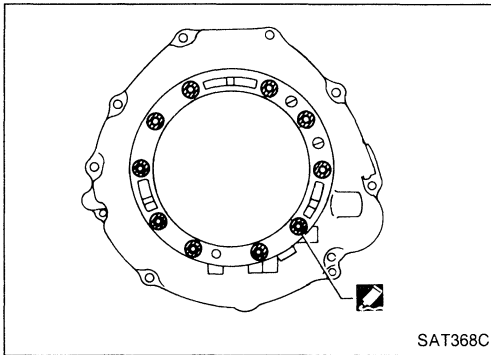

9. Install converter housing.
    - a. Apply recommended sealant (Nissan genuine part: KP610-00250 or equivalent) to outer periphery of bolt holes in converter housing.
- Do not apply too much sealant.

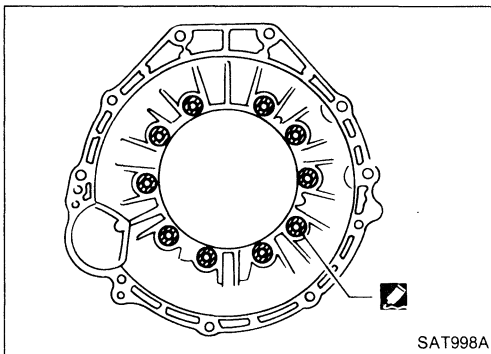


- b. Apply recommended sealant (Nissan genuine part: KP610-00250 or equivalent) to seating surfaces of bolts that secure front of converter housing.

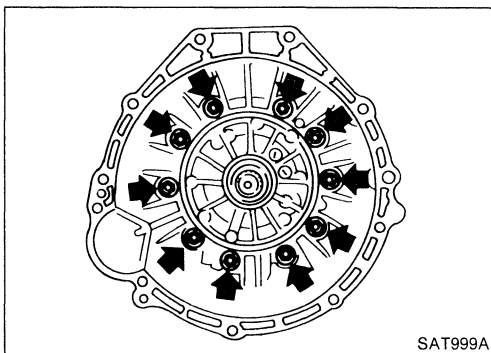

- c. Install converter housing on transmission case.


# ASSEMBLY

## Assembly (Cont'd)

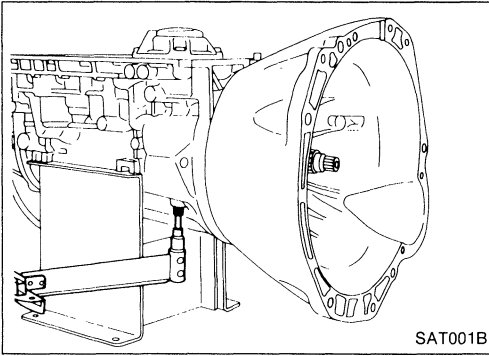


10. Adjust brake band.
  - a. Tighten anchor end bolt to specified torque.
 


**Anchor end bolt:**  
 $\Rightarrow$  4 - 6 N·m (0.4 - 0.6 kg-m, 2.9 - 4.3 ft-lb)
  - b. Back off anchor end bolt two and a half turns.

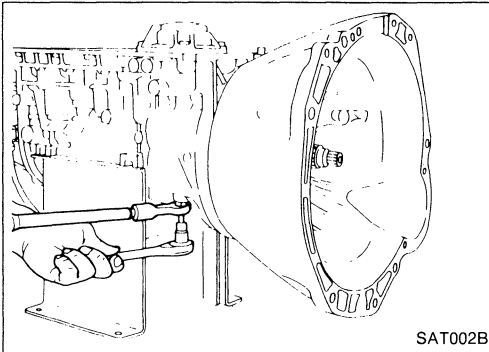

- c. While holding anchor end pin, tighten lock nut.

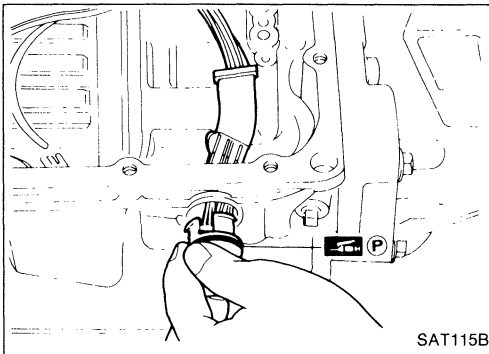

11. Install terminal cord assembly.
  - a. Install O-ring on terminal cord assembly.
    - **Apply petroleum jelly to O-ring.**
  - b. Compress terminal cord assembly stopper and install terminal cord assembly on transmission case.

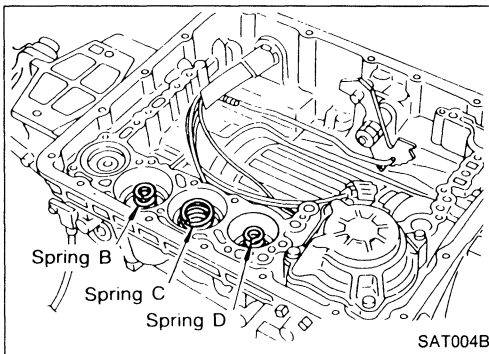


12. Install control valve assembly.
  - a. Install accumulator piston return springs B, C and D.

### Free length of return springs:

Unit: mm (in)


Item	Accumulator	B	C	D
Free length		66 (2.60)	45 (1.77)	58.4 (2.299)

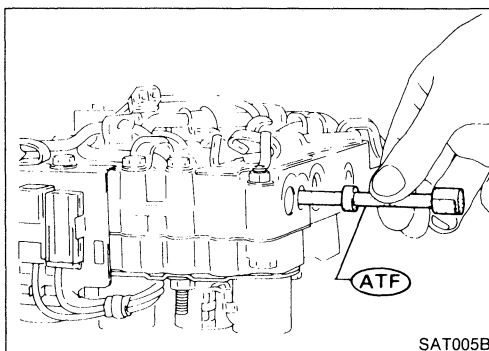


- b. Install manual valve on control valve.
    - **Apply A.T.F. to manual valve.**

# ASSEMBLY


## Assembly (Cont'd)

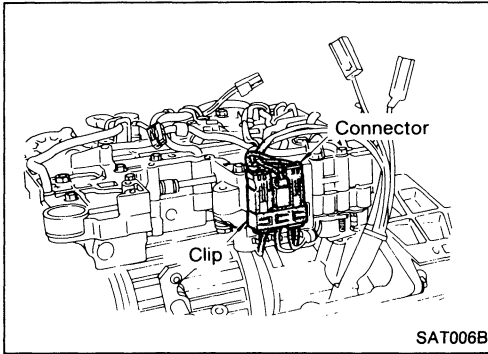


- c. Place control valve assembly on transmission case. Connect solenoid connector for upper body.
- d. Install connector clip.

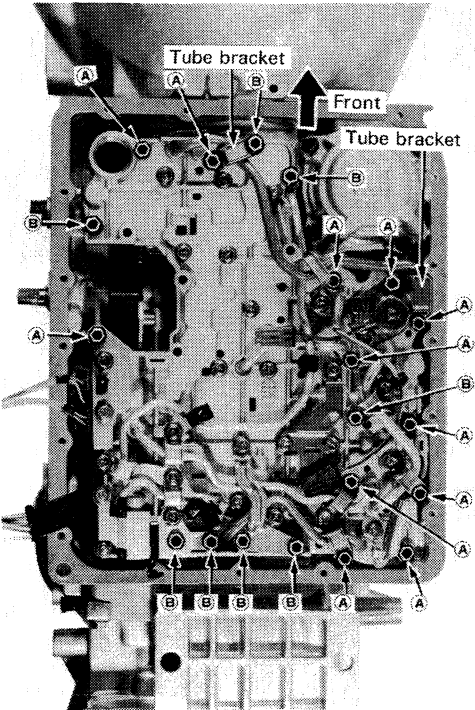


- e. Install control valve assembly on transmission case.
- f. Install connector tube brackets and tighten bolts (A) and (B).
- **Check that terminal assembly harness does not catch.**

Bolt	ℓ mm (in)	 ℓ
(A)	33 mm (1.30 in)	
(B)	45 mm (1.77 in)	

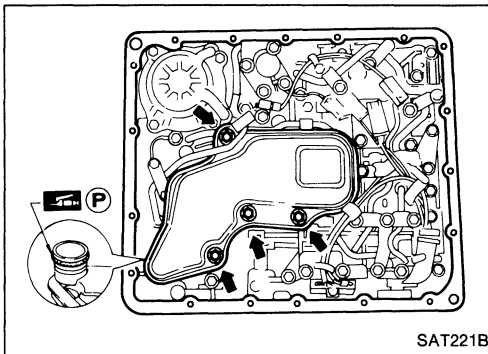

- g. Install O-ring on oil strainer.
- **Apply petroleum jelly to O-ring.**
- h. Install oil strainer on control valve.


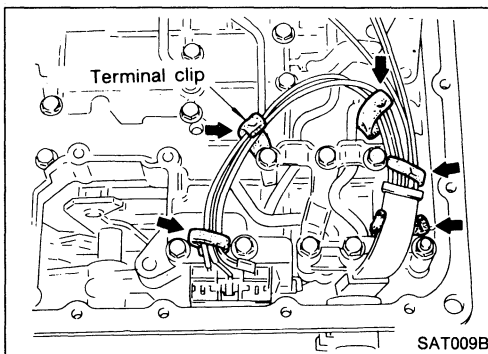


- i. Securely fasten terminal harness with clips.


# ASSEMBLY

## Assembly (Cont'd)


- j. Install lock-up solenoid and fluid temperature sensor connectors.

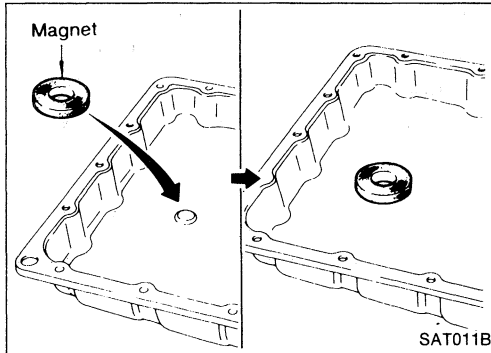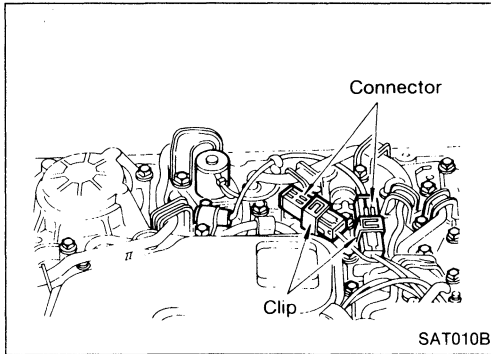


13. Install oil pan.  
a. Attach a magnet to oil pan.

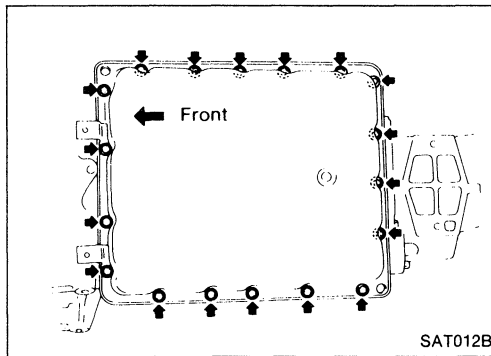

- b. Install oil pan gasket on transmission case.  
c. Install oil pan and bracket on transmission case.  
● **Tighten four bolts in a criss-cross pattern to prevent dislocation of gasket.**

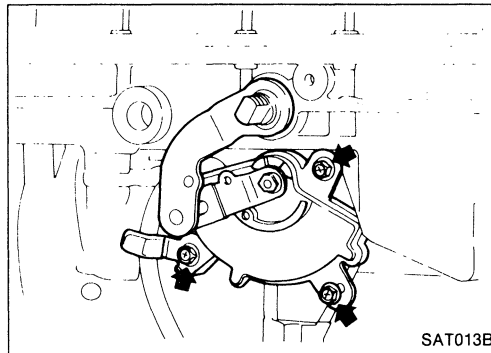


14. Install inhibitor switch.  
a. Check that manual shaft is in "1" range.  
b. Temporarily install inhibitor switch on manual shaft.  
c. Move manual shaft to "N".

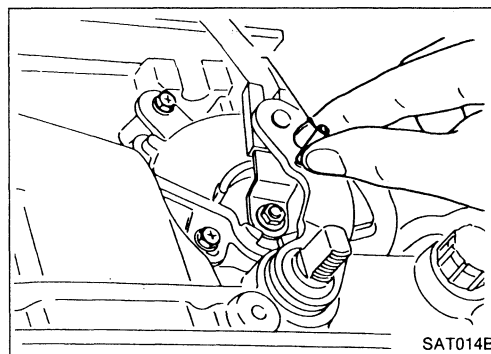

- d. Tighten bolts while inserting 4.0 mm (0.157 in) dia. pin vertically into locating holes in inhibitor switch and manual shaft.

## ASSEMBLY


### Assembly (Cont'd)

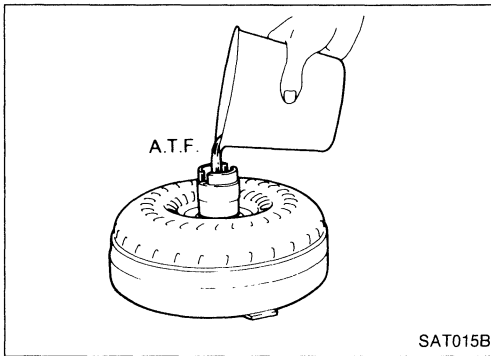


15. Install torque converter.

a. Pour A.T.F. into torque converter.

- **Approximately 2 liters (2-1/8 US qt, 1-3/4 Imp qt) of fluid are required for a new torque converter.**
- **When reusing old torque converter, add the same amount of fluid as was drained.**

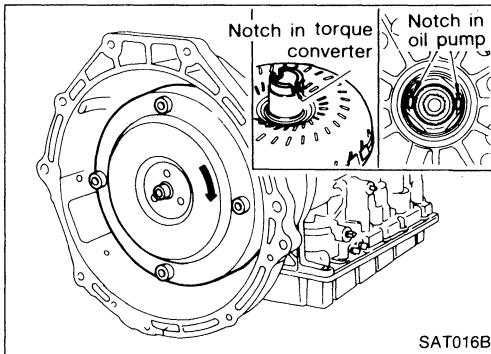

b. Install torque converter while aligning notches and oil pump.

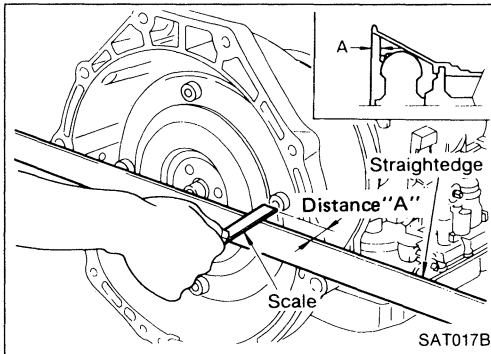

c. Measure distance A to check that torque converter is in proper position.

**Distance "A":**

**26 mm (1.02 in) or more**

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## General Specifications

Engine	VG30E	
Automatic transmission model	RE4R01A	
Transmission model code number	45 x 05	
Stall torque ratio	2.0 : 1	
Transmission gear ratio		
1st	2.785	
2nd	1.545	
Top	1.000	
O.D.	0.694	
Reverse	2.272	
Recommended oil	Automatic transmission fluid Type DEXRON™	
Oil capacity      ℓ (US qt, Imp qt)	8.3 (8-3/4, 7-1/4)	

## Specifications and Adjustment

### VEHICLE SPEED WHEN SHIFTING GEARS

Throttle position	Vehicle speed km/h (MPH)					
	D <sub>1</sub> → D <sub>2</sub>	D <sub>2</sub> → D <sub>3</sub>	D <sub>3</sub> → D <sub>4</sub>	D <sub>4</sub> → D <sub>3</sub>	D <sub>3</sub> → D <sub>2</sub>	D <sub>2</sub> → D <sub>1</sub>
Full throttle	58 - 61 (36 - 38)	103 - 111 (64 - 69)	160 - 170 (99 - 106)	154 - 164 (96 - 102)	98 - 106 (61 - 66)	48 - 52 (30 - 32)
Half throttle	42 - 46 (26 - 29)	81 - 87 (50 - 54)	112 - 122 (70 - 76)	73 - 81 (45 - 50)	45 - 51 (28 - 32)	10 - 14 (6 - 9)

### VEHICLE SPEED WHEN PERFORMING AND RELEASING LOCK-UP

Throttle position	O.D. switch [Shift range]	Vehicle speed km/h (MPH)	
		Lock-up "ON"	Lock-up "OFF"
Full throttle	ON [D <sub>4</sub> ]	161 - 169 (100 - 105)	155 - 163 (96 - 101)
Half throttle	ON [D <sub>4</sub> ]	121 - 129 (75 - 80)	116 - 124 (72 - 77)

### STALL REVOLUTION

Stall revolution rpm
2,200 - 2,400

### LINE PRESSURE

Engine speed rpm	Line pressure kPa (kg/cm <sup>2</sup> , psi)	
	D, 2 and 1 ranges	R range
Idle	432 - 471 (4.4 - 4.8, 63 - 68)	667 - 706 (6.8 - 7.2, 97 - 102)
Stall	883 - 961 (9.0 - 9.8, 128 - 139)	1,393 - 1,471 (14.2 - 15.0, 202 - 213)

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Specifications and Adjustment (Cont'd)

### RETURN SPRINGS

Unit: mm (in)

Parts		Item	Part No.	Free length	Outer diameter
Control valve	Upper body	Torque converter relief valve spring	31742-41X23	38.0 (1.496)	9.0 (0.354)
		Pressure regulator valve spring	31742-41X24	44.02 (1.7331)	8.9 (0.350)
		Pressure modifier valve spring	31742-41X19	31.95 (1.2579)	6.8 (0.268)
		Shuttle shift valve D spring	31762-41X00	26.5 (1.043)	6.0 (0.236)
		Accumulator control valve spring	31742-41X60	17.0 (0.669)	10.5 (0.413)
		4-2 sequence valve spring	31756-41X00	29.1 (1.146)	6.95 (0.2736)
		Shift valve B spring	31762-41X01	25.0 (0.984)	7.0 (0.276)
		4-2 relay valve spring	31756-41X00	29.1 (1.146)	6.95 (0.2736)
		Shift valve A spring	31762-41X01	25.0 (0.984)	7.0 (0.276)
		Overrun clutch control valve spring	31762-41X03	23.6 (0.929)	7.0 (0.276)
		Overrun clutch reducing valve spring	31742-41x20	32.5 (1.280)	7.0 (0.276)
		Shuttle shift valve S spring	31762-41X04	51.0 (2.008)	5.65 (0.2224)
		Pilot valve spring	31742-41X13	25.7 (1.012)	9.1 (0.358)
		Lock-up control valve spring	31742-41X22	18.5 (0.728)	13.0 (0.512)
	Lower body	Modifier accumulator valve spring	31742-41X15	30.5 (1.201)	9.8 (0.386)
		1st reducing valve spring	31756-41X05	25.4 (1.000)	6.75 (0.2657)
	3-2 timing valve spring	31742-41X08	20.55 (0.8091)	6.75 (0.2657)	
	Servo charger valve spring	31742-41X06	23.0 (0.906)	6.7 (0.264)	
Reverse clutch	16 pcs	30505-41X02	19.69 (0.7752)	11.6 (0.457)	
High clutch	16 pcs	31505-21X03	22.06 (0.8685)	11.6 (0.457)	
Forward clutch (Overrun clutch)	20 pcs	31505-41X01	35.77 (1.4083)	9.7 (0.315)	
Low & reverse brake	18 pcs	31521-21X00	23.7 (0.933)	11.6 (0.457)	
Band servo	Spring A	31605-41X05	45.6 (1.795)	34.3 (1.350)	
	Spring B	31605-41X00	53.8 (2.118)	40.3 (1.587)	
	Spring C	31605-41X01	29.0 (1.142)	27.6 (1.087)	
Accumulator	Accumulator A	31605-41X02	43.0 (1.693)		
	Accumulator B	31605-41X10	66.0 (2.598)		
	Accumulator C	31605-41X09	45.0 (1.772)		
	Accumulator D	31605-41X06	58.4(2.299)		



# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Specifications and Adjustment (Cont'd)

### ACCUMULATOR O-RING

Accumulator	Diameter mm (in)			
	A	B	C	D
Small diameter end	29 (1.14)	32 (1.26)	45 (1.77)	29 (1.14)
Large diameter end	45 (1.77)	50 (1.97)	50 (1.97)	45 (1.77)

### CLUTCHES AND BRAKES

Reverse clutch		
Number of drive plates	2	
Number of driven plates	2	
Thickness of drive plate mm (in)		
Standard	2.0 (0.079)	
Wear limit	1.8 (0.071)	
Clearance mm (in)		
Standard	0.5 - 0.8 (0.020 - 0.031)	
Allowable limit	1.2 (0.047)	
Thickness of retaining plate	Thickness mm (in)	Part number
	4.6 (0.181)	31537-21X00
	4.8 (0.189)	31537-21X01
	5.0 (0.197)	31537-21X02
	5.2 (0.205)	31537-21X03
	5.4 (0.213)	31537-21X04
	5.6 (0.220)	31567-41X13
	5.8 (0.228)	31567-41X14
High clutch		
Number of drive plates	4	
Number of driven plates	7	
Thickness of drive plate mm (in)		
Standard	1.6 (0.063)	
Wear limit	1.4 (0.055)	
Clearance mm (in)		
Standard	1.8 - 2.2 (0.071 - 0.087)	
Allowable limit	3.0 (0.118)	
Thickness of retaining plate	Thickness mm (in)	Part number
	3.0 (0.118)	31537-41X69
	3.2 (0.126)	31537-41X70
	3.4 (0.134)	31537-41X71
	3.6 (0.142)	31537-41X61
	3.8 (0.150)	31537-41X62
	4.0 (0.157)	31537-41X63
	4.2 (0.165)	31537-41X64
4.4 (0.173)	31537-41X65	

Forward clutch		
Number of drive plates	6	
Number of driven plates	6	
Thickness of drive plate mm (in)		
Standard	2.0 (0.079)	
Wear limit	1.8 (0.071)	
Clearance mm (in)		
Standard	0.45 - 0.85 (0.0177 - 0.0335)	
Allowable limit	2.25 (0.0886)	
Thickness of retaining plate	Thickness mm (in)	Part number
	4.0 (0.157)	31537-41X07
	4.2 (0.165)	31537-41X08
	4.4 (0.173)	31537-41X09
	4.6 (0.181)	31537-41X10
	4.8 (0.189)	31537-41X11
	5.0 (0.197)	31537-41X12
	5.2 (0.205)	31537-41X13
Overrun clutch		
Number of drive plates	3	
Number of driven plates	5	
Thickness of drive plate mm (in)		
Standard	2.0 (0.079)	
Wear limit	1.8 (0.071)	
Clearance mm (in)		
Standard	1.0 - 1.4 (0.039 - 0.055)	
Allowable limit	2.4 (0.094)	
Thickness of retaining plate	Thickness mm (in)	Part number
	4.0 (0.157)	31537-41X79
	4.2 (0.165)	31537-41X80
	4.4 (0.173)	31537-41X81
	4.6 (0.181)	31537-41X82
	4.8 (0.189)	31537-41X83
	5.0 (0.197)	31537-41X84
	5.2 (0.205)	31537-41X20

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Specifications and Adjustment (Cont'd)

<b>Low &amp; reverse brake</b>		
Number of drive plates	7	
Number of driven plates	7	
Thickness of drive plate mm (in)		
Standard	2.0 (0.079)	
Wear limit	1.8 (0.071)	
Clearance mm (in)		
Standard	0.7 - 1.1 (0.028 - 0.043)	
Allowable limit	2.1 (0.083)	
Thickness of retaining plate	Thickness mm (in)	Part number
	7.2 (0.283)	31667-41X13
	7.4 (0.291)	31667-41X14
	7.6 (0.299)	31667-41X07
	7.8 (0.307)	31667-41X08
	8.0 (0.315)	31667-41X00
8.2 (0.323)	31667-41X01	
<b>Brake band</b>		
Anchor end bolt tightening torque N-m (kg-m, ft-lb)	4 - 6 (0.4 - 0.6, 2.9 - 4.3)	
Number of returning revolutions for anchor end bolt	2.5	

### REVERSE CLUTCH DRUM END PLAY

Reverse clutch drum end play "T <sub>2</sub> "	0.55 - 0.90 mm (0.0217 - 0.0354 in)	
Thickness of oil pump thrust washer	Thickness mm (in)	Part number
	0.7 (0.028)	31528-21X00
	0.9 (0.035)	31528-21X01
	1.1 (0.043)	31528-21X02
	1.3 (0.051)	31528-21X03
	1.5 (0.059)	31528-21X04
	1.7 (0.067)	31528-21X05
1.9 (0.075)	31528-21X06	

### REMOVAL AND INSTALLATION

Manual control linkage	
Number of returning revolutions for lock nut	1
Lock nut tightening torque	11 - 15 N·m (1.1 - 1.5 kg-m, 8 - 11 ft-lb)
Distance between end of converter housing and torque converter	26.0 mm (1.024 in) or more
Drive plate runout limit	0.5 mm (0.020 in)

### OIL PUMP AND LOW ONE-WAY CLUTCH

Oil pump clearance mm (in)	
Cam ring — oil pump housing	
Standard	0.01 - 0.024 (0.0004 - 0.0009)
Rotor, vanes and control piston — oil pump housing	
Standard	0.03 - 0.044 (0.0012 - 0.0017)
Seal ring clearance mm (in)	
Standard	0.10 - 0.25 (0.0039 - 0.0098)
Allowable limit	0.25 (0.0098)

### TOTAL END PLAY

Total end play "T <sub>1</sub> "	0.25 - 0.55 mm (0.0098 - 0.0217 in)	
Thickness of oil pump cover bearing race	Thickness mm (in)	Part number
	0.8 (0.031)	31429-21X00
	1.0 (0.039)	31429-21X01
	1.2 (0.047)	31429-21X02
	1.4 (0.055)	31429-21X03
	1.6 (0.063)	31429-21X04
	1.8 (0.071)	31429-21X05
2.0 (0.079)	31429-21X06	

# PROPELLER SHAFT & DIFFERENTIAL CARRIER

## SECTION **PD**







### CONTENTS

PREPARATION .....	PD- 2
PROPELLER SHAFT .....	PD- 5
ON-VEHICLE SERVICE (Final drive) .....	PD- 9
REMOVAL AND INSTALLATION .....	PD-11
FINAL DRIVE .....	PD-12
DISASSEMBLY .....	PD-13
INSPECTION .....	PD-18
ADJUSTMENT .....	PD-19
ASSEMBLY .....	PD-26
SERVICE DATA AND SPECIFICATIONS (S.D.S.) .....	PD-31


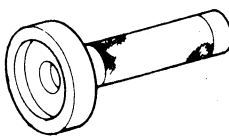
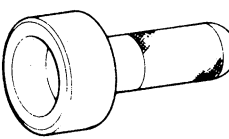
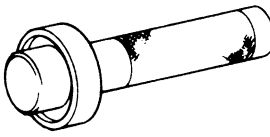
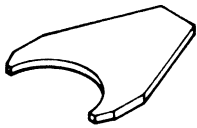
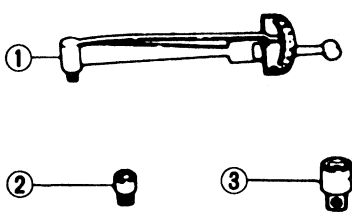

**PD**

# PREPARATION





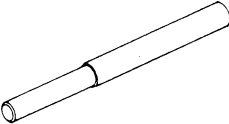
## SPECIAL SERVICE TOOLS

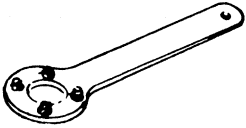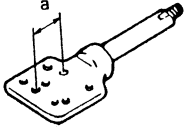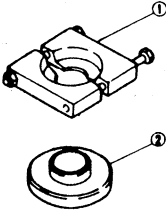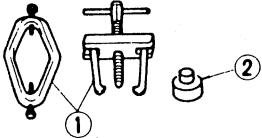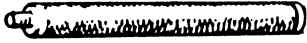Tool number (Kent-Moore No.) Tool name	Description
ST31520000 ( — ) Drive pinion flange wrench	 <p style="text-align: right;">Removing and installing propeller shaft lock nut, and drive pinion lock nut</p>
KV38100800 ( — ) Equivalent tool (J25604-01) Differential attachment	 <p style="text-align: right;">Mounting final drive (To use, make a new hole.)</p> <p style="text-align: center;">a: 152 mm (5.98 in)</p>
ST3090S000 ( — ) Drive pinion rear inner race puller set ① ST30031000 (J22912-01) Puller ② ST30901000 ( — ) Equivalent tool (J26010-01) Base	 <p style="text-align: right;">Removing and installing drive pinion rear cone</p>
ST3306S001 ( — ) Differential side bearing puller set ① ST33051001 ( — ) Equivalent tool (J22888) Body ② ST33061000 (J8107-2) Equivalent tool (J26010-01) Adapter	 <p style="text-align: right;">Removing and installing differential side bearing inner cone</p>
ST30611000 (J25742-1) Drift	 <p style="text-align: right;">Installing pinion rear bearing outer race</p>
ST30613000 (J25742-3) Drift	 <p style="text-align: right;">Installing pinion front bearing outer race</p>



# PREPARATION

Tool number (Kent-Moore No.) Tool name	Description
ST30621000 ( — ) Drift	<div style="text-align: right;">Installing pinion rear bearing outer race</div> <div style="text-align: center;">  </div>
KV38100200 (J26233) Gear carrier side oil seal drift	<div style="text-align: right;">Installing side oil seal</div> <div style="text-align: center;">  </div>
KV38100500 ( — ) Gear carrier front oil seal drift	<div style="text-align: right;">Installing front oil seal</div> <div style="text-align: center;">  </div>
KV38100300 (J25523) Differential side bearing inner cone	<div style="text-align: right;">Installing side bearing inner cone</div> <div style="text-align: center;">  </div>
KV38100600 (J25267) Side bearing spacer drift	<div style="text-align: right;">Installing side bearing spacer</div> <div style="text-align: center;">  </div>
ST3127S000 (See J25765-A) Preload gauge ① GG91030000 (J25765) Torque wrench ② HT62940000 ( — ) Socket adapter ③ HT62900000 ( — ) Socket adapter	<div style="text-align: right;">Measuring pinion bearing preload and total preload</div> <div style="text-align: center;">  </div>
HT72400000 ( — ) Slide hammer	<div style="text-align: right;">Removing differential case assembly</div> <div style="text-align: center;">  </div>

# PREPARATION

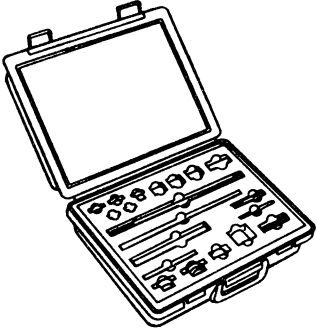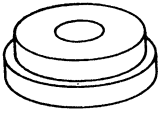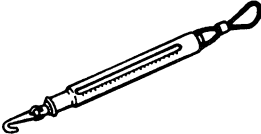Tool number (Kent-Moore No.) Tool name	Description
(J34309) Differential shim selector	<div style="display: flex; justify-content: space-between;"> <div data-bbox="613 304 927 632">  </div> <div data-bbox="1045 281 1463 338"> <p>Adjusting bearing preload and gear height</p> </div> </div>
(J25269-4) Side bearing discs (2 Req'd)	<div style="display: flex; justify-content: space-between;"> <div data-bbox="675 709 833 821">  </div> <div data-bbox="1045 678 1463 735"> <p>Selecting pinion height adjusting washer</p> </div> </div>
(J8129) Spring gauge	<div style="display: flex; justify-content: space-between;"> <div data-bbox="630 884 889 1016">  </div> <div data-bbox="1045 867 1398 894"> <p>Measuring carrier turning torque</p> </div> </div>
ST33290001 (J2581-A) Side bearing outer race puller	<div style="display: flex; justify-content: space-between;"> <div data-bbox="708 1066 789 1220">  </div> <div data-bbox="1045 1056 1463 1113"> <p>Removing and installing differential side bearing outer race</p> </div> </div>
KV38100401 ( — ) Pilot bearing drift	<div style="display: flex; justify-content: space-between;"> <div data-bbox="646 1272 873 1394">  </div> <div data-bbox="1045 1245 1463 1302"> <p>Removing pilot bearing, pilot bearing spacer and front bearing inner cone</p> </div> </div>

# PROPELLER SHAFT

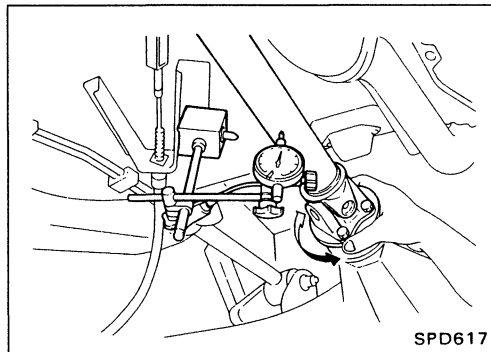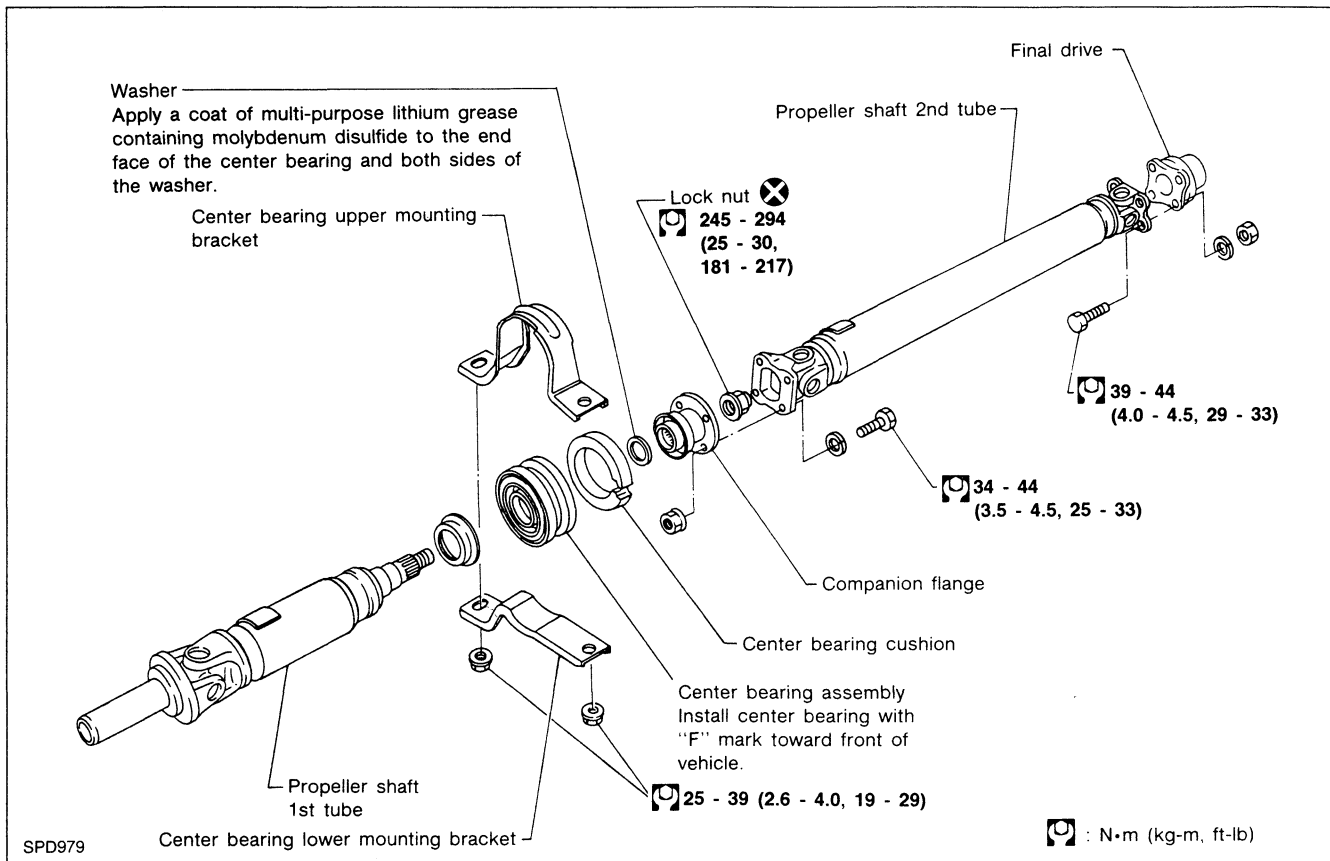

## On-vehicle Service

### PROPELLER SHAFT VIBRATION


If vibration is present at high speed, inspect propeller shaft runout first.

1. Raise rear wheels.
2. Measure propeller shaft runout at indicated points by rotating final drive companion flange with hands.


**Runout limit: 0.6 mm (0.024 in)**

#### Propeller shaft runout measuring points:

- Distance "A"  
162 mm (6.38 in)
- Distance "B"  
172 mm (6.77 in)
- Distance "C"  
192 mm (7.56 in)

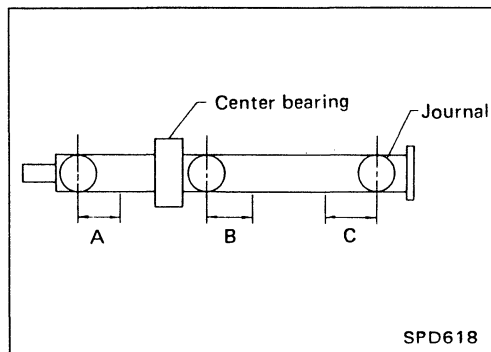

## PROPELLER SHAFT

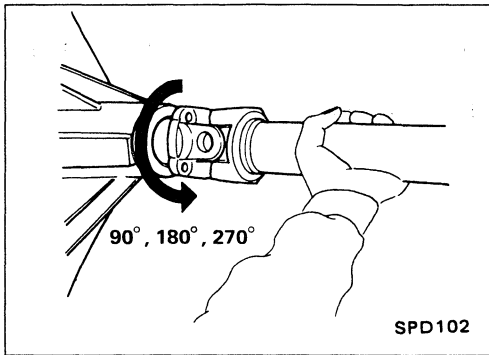


### On-vehicle Service (Cont'd)

3. If runout exceeds specifications, disconnect propeller shaft at final drive companion flange; then rotate companion flange 90, 180 or 270 degrees and reconnect propeller shaft.
4. Check runout again. If runout still exceeds specifications, replace propeller shaft assembly.
5. Perform road test.


### APPEARANCE CHECKING

- Inspect propeller shaft tube surface for dents or cracks. If damaged, replace propeller shaft assembly.
- If center bearing is noisy or damaged, replace center bearing.

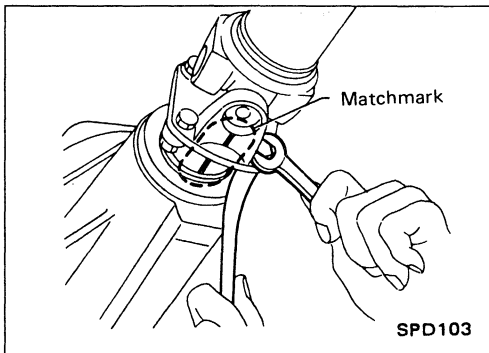


### Removal and Installation

- Put matchmarks on flanges and separate propeller shaft from final drive.

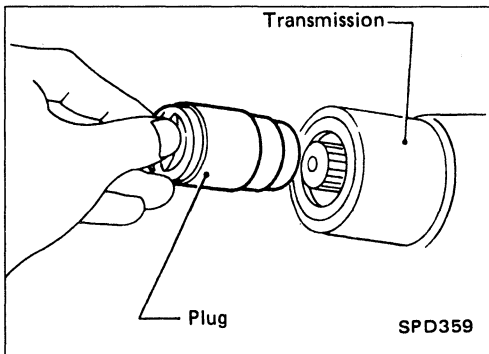

- Draw out propeller shaft from transmission and plug up rear end of transmission rear extension housing.

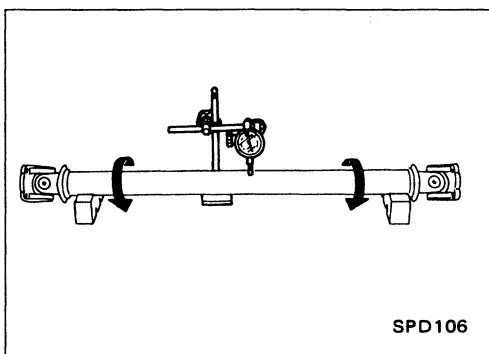

### Inspection

- Inspect propeller shaft runout. If runout exceeds specifications, replace propeller shaft assembly.  
**Runout limit: 0.6 mm (0.024 in)**




## PROPELLER SHAFT

### Inspection (Cont'd)

- Inspect journal axial play.  
If the play exceeds specifications, replace propeller shaft assembly.


**Journal axial play: 0 mm (0 in)**

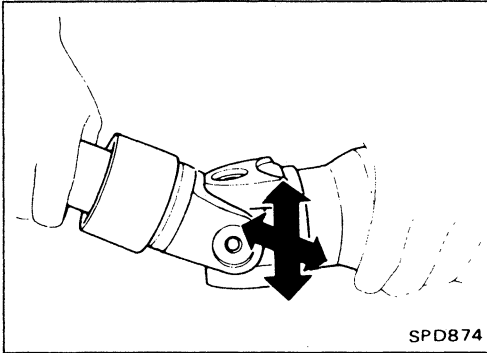


### Disassembly

#### CENTER BEARING


1. Put matchmarks on flanges, and separate 2nd tube from 1st tube.

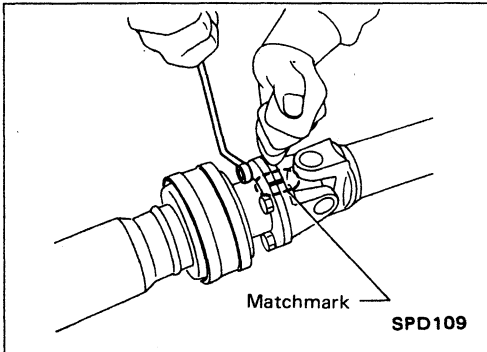


2. Put matchmarks on the flange and shaft.

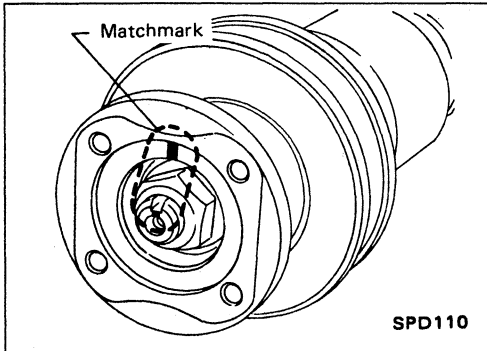

3. Remove lock nut with Tool.  
**Tool number: ST31520000 ( — )**

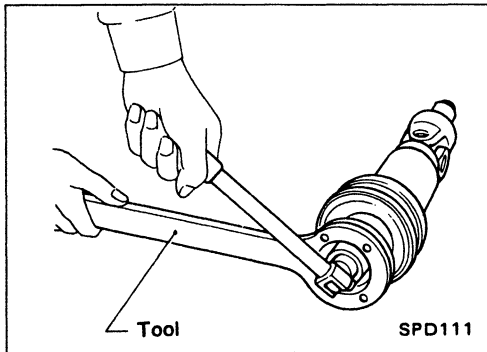




4. Remove companion flange with puller.

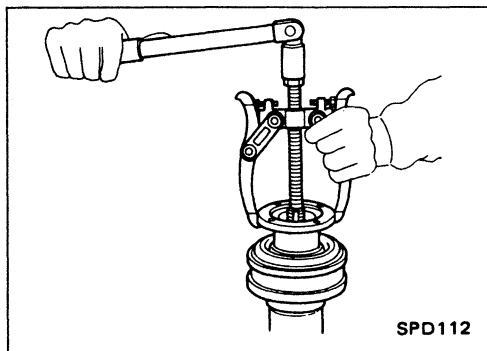

## PROPELLER SHAFT

### Disassembly (Cont'd)


5. Remove center bearing with Tool and press.  
Tool number: ST30031000 (J22912-01)

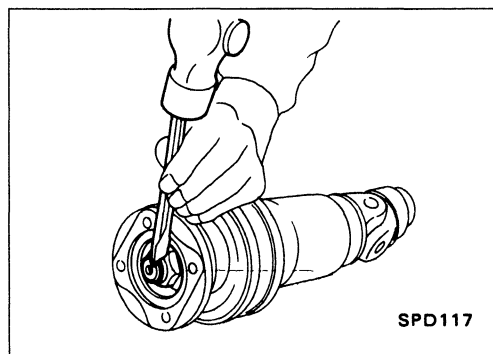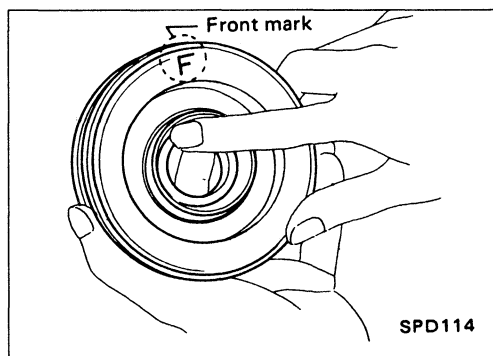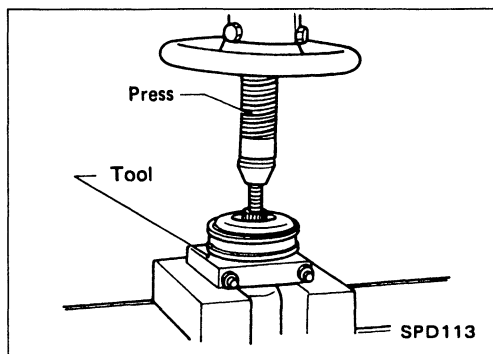

### Assembly


#### CENTER BEARING

- When installing center bearing, position the "F" mark on center bearing toward front of vehicle.
  - Apply a coat of multi-purpose lithium grease containing molybdenum disulfide to the end face of the center bearing and both sides of the washer.
- 
- Stake the nut. Always use new one.
  - Align matchmarks when assembling tubes.

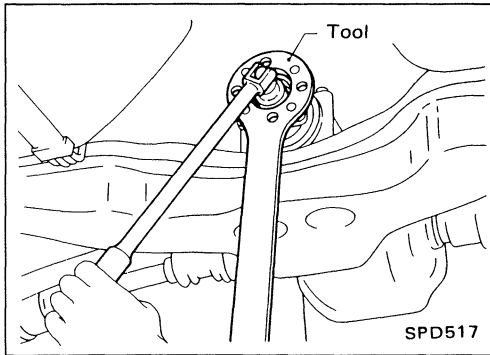


## Front Oil Seal Replacement


1. Remove propeller shaft.
2. Loosen drive pinion nut with Tool.  
**Tool number: ST31520000 ( — )**

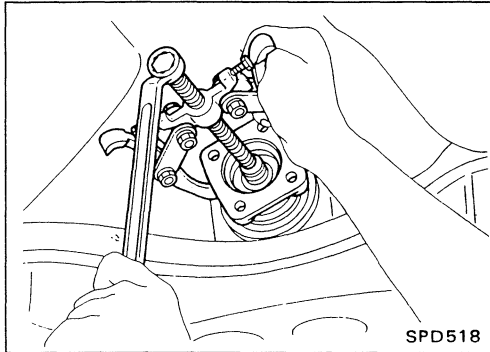


3. Remove companion flange.

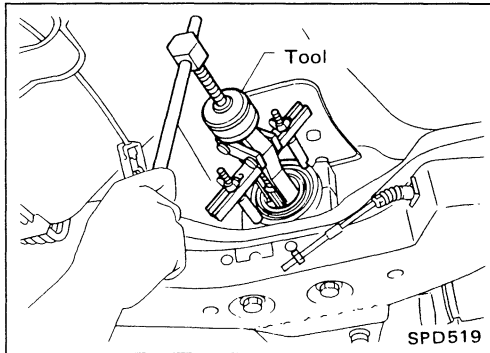

4. Remove front oil seal with Tool.  
**Tool number: ST33290001 (J25810-A)**

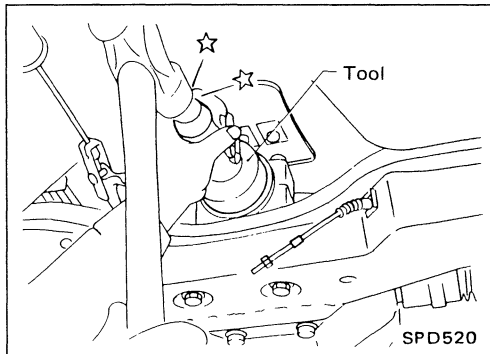

5. Apply multi-purpose grease to cavity at sealing lips of oil seal.  
Press front oil seal into carrier.  
**Tool number: KV38100500 ( — )**
6. Install companion flange and drive pinion nut.
7. Install propeller shaft.

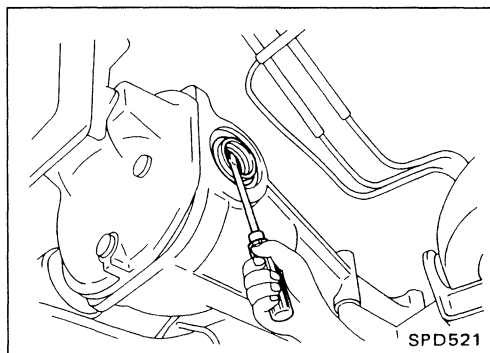


## Side Oil Seal Replacement


1. Remove drive shafts.  
Refer to RA section.
2. Remove oil seal.

## ON-VEHICLE SERVICE (Final drive)

### Side Oil Seal Replacement (Cont'd)

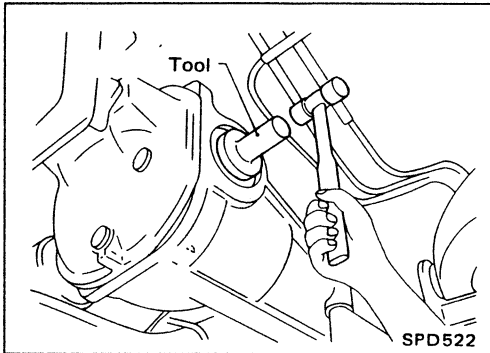

3. Apply multi-purpose grease to cavity at sealing lips of oil seal.  
Press-fit oil seal into carrier.  
**Tool number: KV38100200 (J26233)**
4. Install drive shafts.

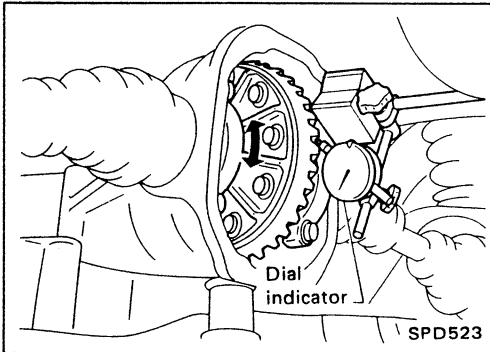


### Ring Gear to Drive Pinion Backlash

1. Support carrier with a jack.
2. Remove rear cover.
3. Check ring gear to drive pinion backlash with a dial indicator, at several points. If it is not within specifications, adjust it after removing final drive assembly.

**Ring gear to drive pinion backlash:**  
**0.10 - 0.15 mm (0.0039 - 0.0059 in)**

## REMOVAL AND INSTALLATION

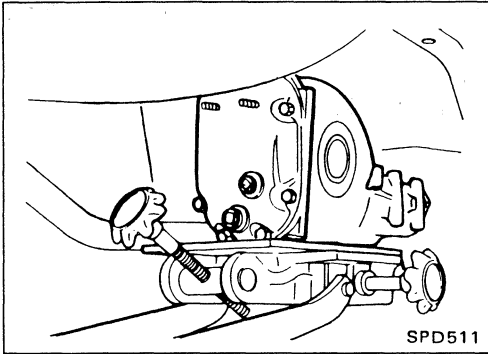

### Removal


- Remove propeller shaft.

**Plug up rear end of transmission rear extension housing.**

- Remove drive shafts.  
Refer to RA section.
- Pull off final drive backward together with jack.

### CAUTION:

- **Be careful not to damage spline, sleeve yoke and front oil seal, when removing propeller shaft.**
- **After final drive is removed, support suspension member on a stand to prevent its insulators being twisted or damaged.**

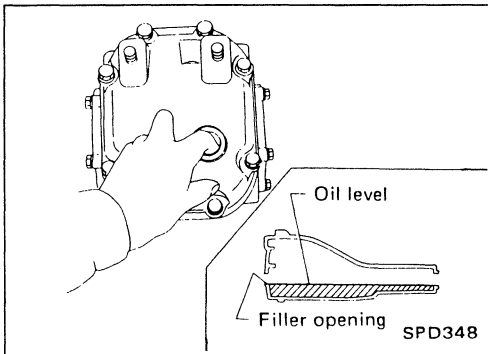


### Installation

- Fill final drive with recommended gear oil.

# FINAL DRIVE


R200

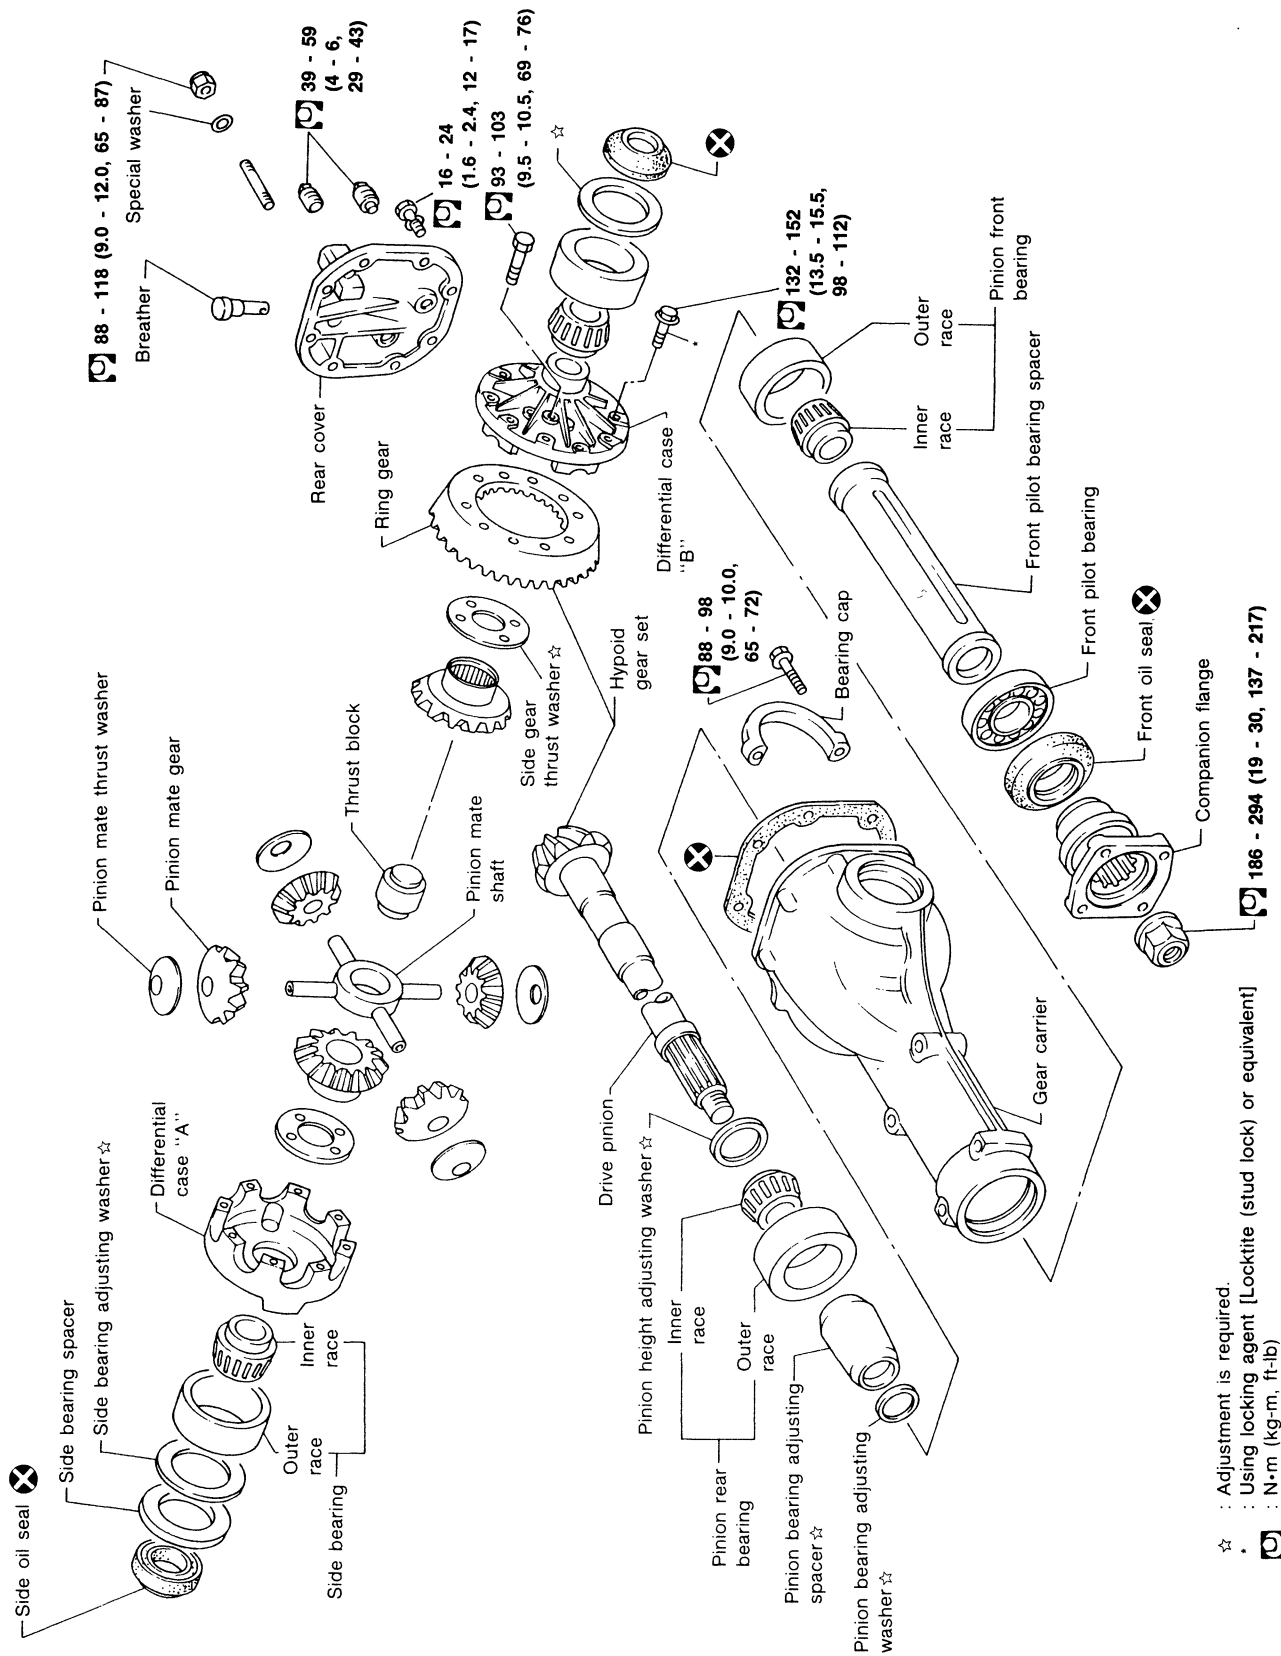

- ☆ : Adjustment is required.
- ⊠ : Using locking agent [Loctite (stud lock) or equivalent]
- ⊠ : N·m (kg·m, ft·lb)

SPD978

# DISASSEMBLY

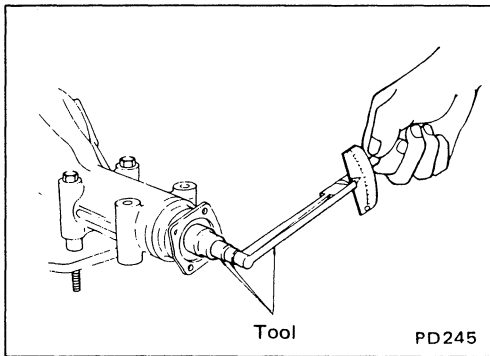

## Pre-inspection

Before disassembling final drive, perform the following inspection.

- Total preload
  - 1) Turn drive pinion in both directions several times to set bearing rollers.

- 2) Check total preload with Tool.

**Tool number: ST3127S000 (See J25765-A.)**

**Total preload:**


**1.4 - 1.7 N·m**

**(14 - 17 kg-cm, 12 - 15 in-lb)**

- Ring gear to drive pinion backlash  
Check ring gear to drive pinion backlash with a dial indicator at several points.

**Ring gear to drive pinion backlash:**

**0.10 - 0.15 mm (0.0039 - 0.0059 in)**

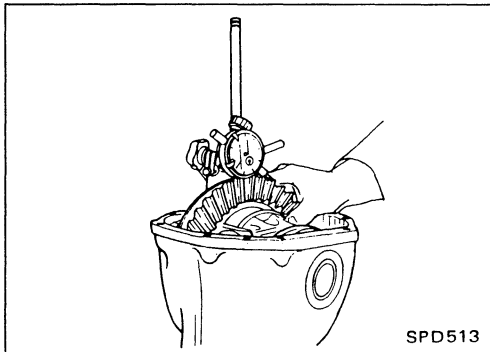


- Ring gear runout  
Check runout of ring gear with a dial indicator.

**Runout limit:**

**0.05 mm (0.0020 in)**


- Tooth contact  
Check tooth contact. (Refer to Adjustment.)

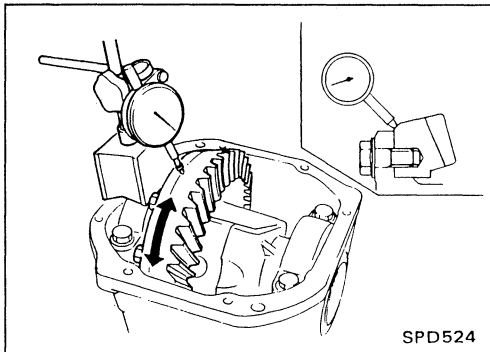

- Side gear to pinion mate gear backlash  
Measure clearance between side gear thrust washer and differential case with a feeler gauge.

**Clearance between side gear thrust washer and differential case:**


**0.1 - 0.2 mm (0.004 - 0.008 in)**

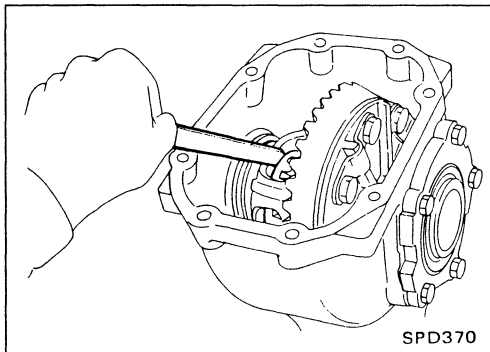

## Differential Carrier

1. Using three 45 mm (1.77 in) spacers, mount carrier on Tool.

**Tool number: KV38100800 (J25604-01)**

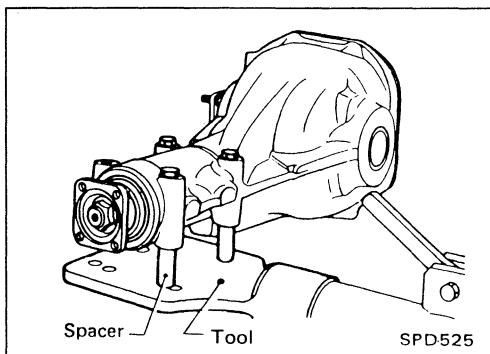


## DISASSEMBLY


### Differential Carrier (Cont'd)

2. Paint or punch matchmarks on one side of side bearing cap so it can be properly reinstalled.



**Bearing caps are line-bored during manufacture. Replace them in their proper positions.**

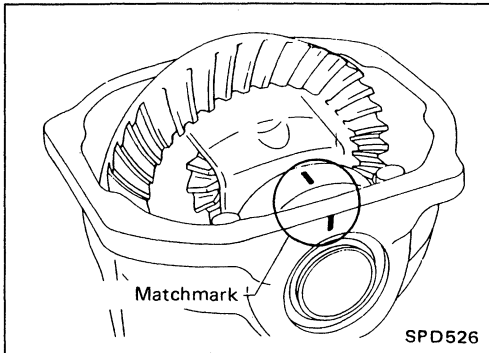

3. Remove side bearing caps.

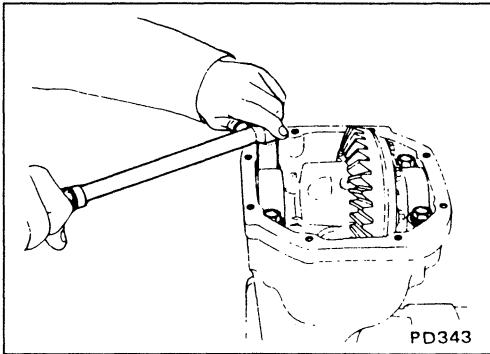

4. Lift differential case assembly out with Tool.  
**Tool number: HT72400000 ( — )**

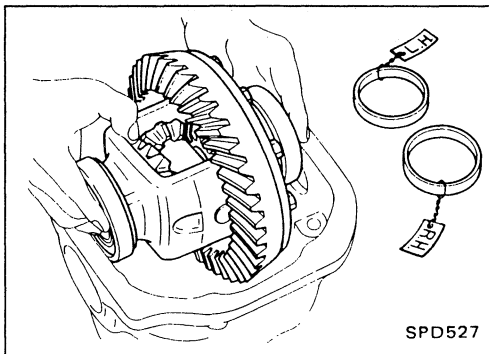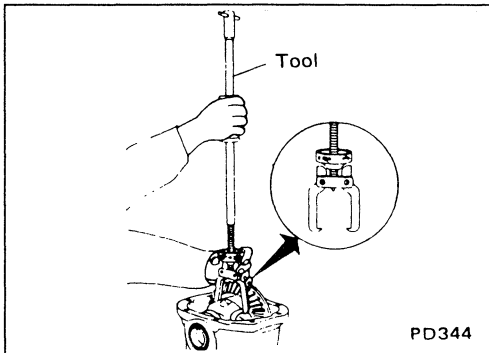

**Keep the side bearing outer races together with inner cone — don't mix them up.**






# DISASSEMBLY

## Differential Carrier (Cont'd)


5. Loosen drive pinion nut and pull off companion flange.

**Tool number: ST31520000 ( — )**

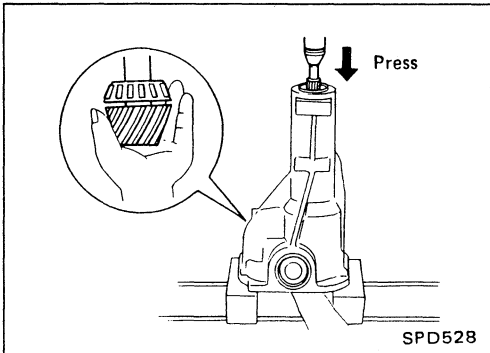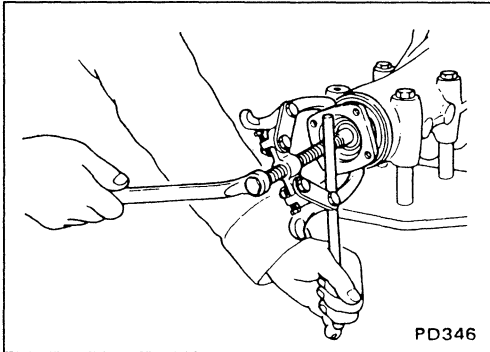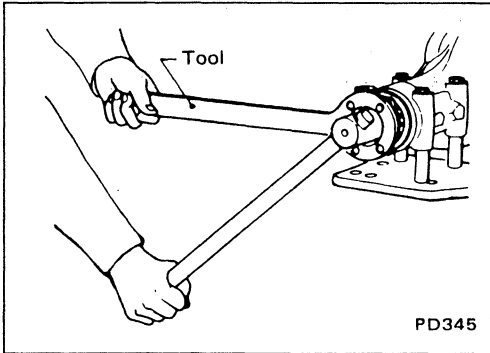

6. Take out drive pinion together with rear bearing inner race, bearing spacer and adjusting washer.

7. Remove oil seal.

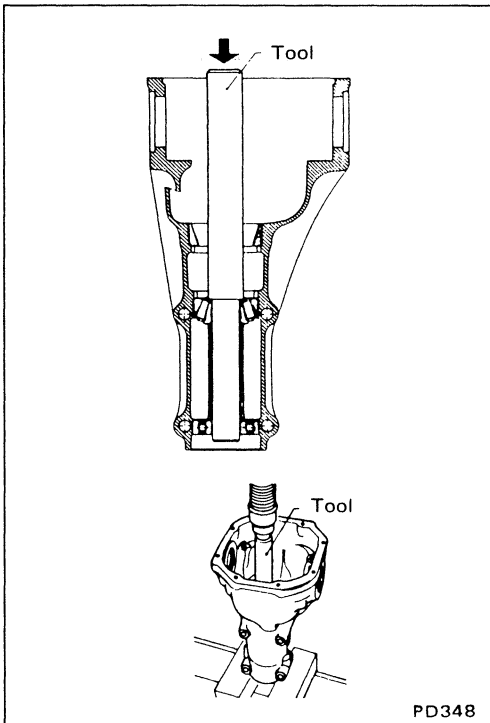


8. Remove pilot bearing together with pilot bearing spacer and front bearing inner cone with Tool.


**Tool number: KV38100401 ( — )**

## DISASSEMBLY

### Differential Carrier (Cont'd)

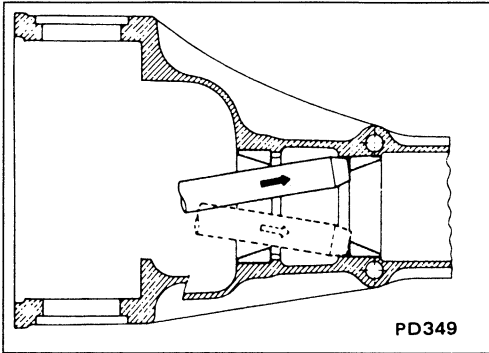

9. Remove side oil seal.
10. Remove pinion bearing outer races with a brass drift.

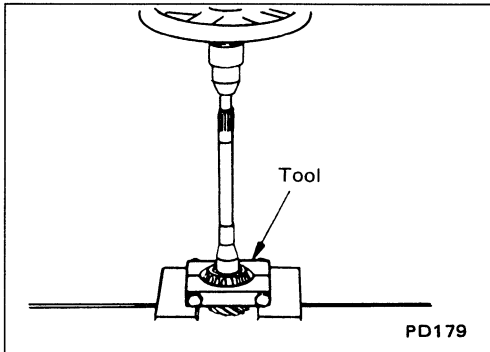

11. Remove pinion rear bearing inner race and pinion height adjusting washer.

Tool number: ST30031000 (J22912-01)



### Differential Case

1. Remove side bearing inner races.


To prevent damage to bearing, engage puller paws with grooves.

Tool number:

- Ⓐ ST33051001 ( — )  
Equivalent tool (J22888)
- Ⓑ ST33061000 (J8107-2)

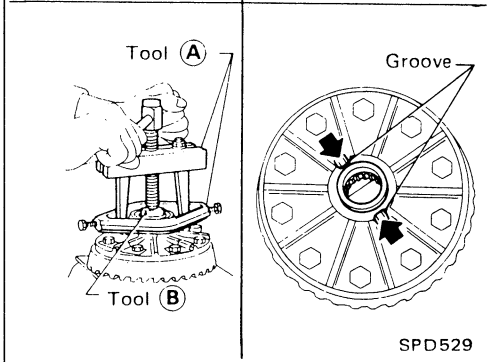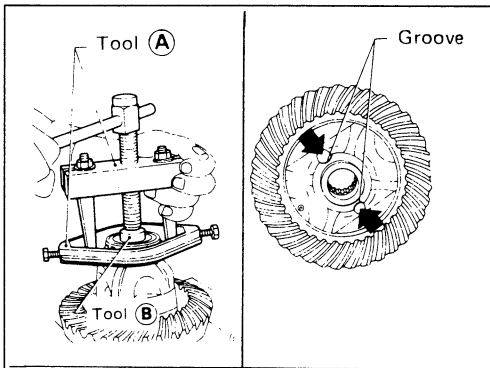


Do not mix the right and left hand parts.

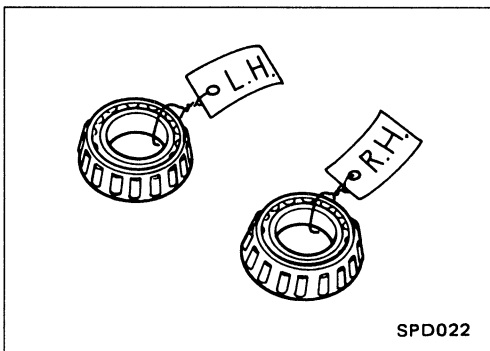


## DISASSEMBLY

### Differential Case (Cont'd)

2. Loosen ring gear bolts in a criss-cross fashion.
3. Tap ring gear off the gear case with a soft hammer.  
**Tap evenly all around to keep ring gear from binding.**

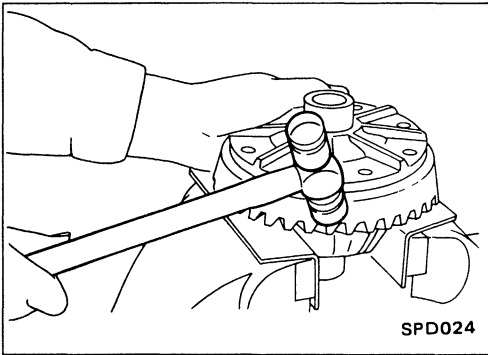


4. Punch off pinion mate shaft lock pin from ring gear side.  
**Lock pin is calked at pin hole mouth on differential case.**

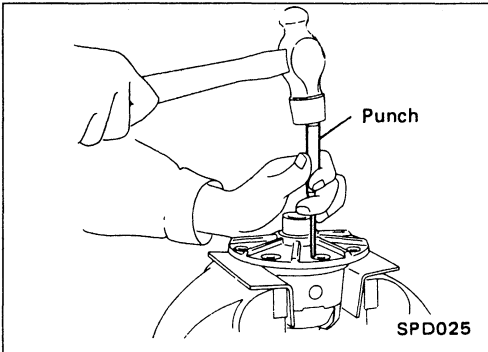

# INSPECTION


## Ring Gear and Drive Pinion

Check gear teeth for scoring, cracking or chipping. If any damaged part is evident, replace ring gear and drive pinion as a set (hypoid gear set).

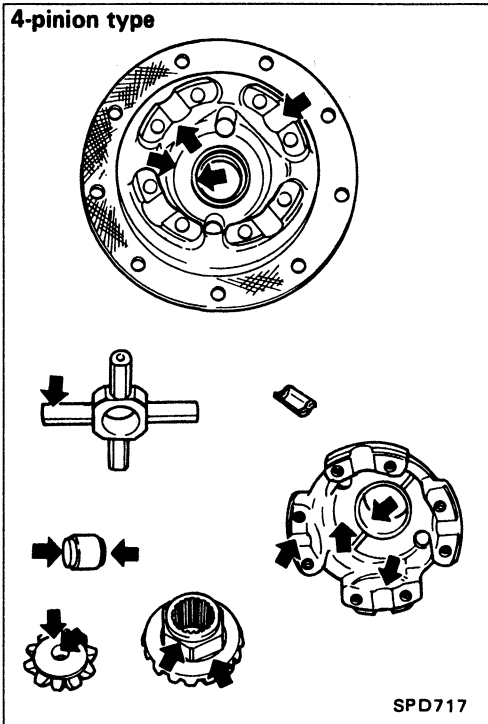

## Differential Case Assembly

Check mating surfaces of differential case, side gears, pinion mate gears, pinion mate shaft, thrust block and thrust washers.

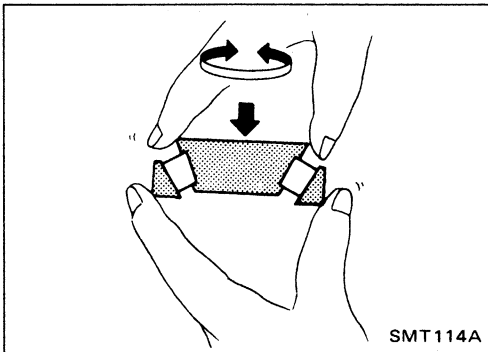

## Bearing

1. Thoroughly clean bearing and dry with compressed air.
2. Check bearings for wear, scratches, pitching or flaking. Check tapered roller bearing for smooth rotation. If damaged, replace outer race and inner cone as a set.


## ADJUSTMENT

For quiet and reliable final drive operation, the following five adjustments must be made correctly.


1. Side bearing preload
2. Pinion gear height
3. Pinion bearing preload
4. Ring gear to pinion backlash (Refer to ASSEMBLY.)
5. Ring and pinion gear tooth contact pattern

### Side Bearing Preload


**A selection of carrier side bearing preload shims is required for successful completion of this procedure.**

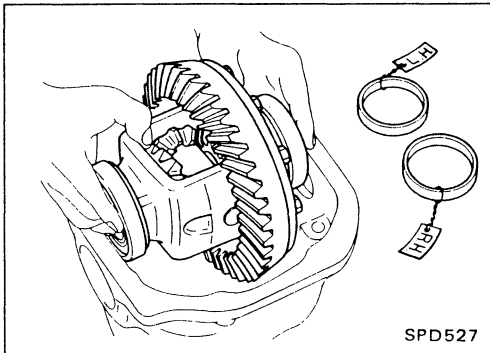

1. Make sure all parts are clean and that the bearings are well lubricated with light oil or Dexron™ type automatic transmission fluid.
2. Place the differential carrier, with side bearings and bearing races installed, into the final drive housing.

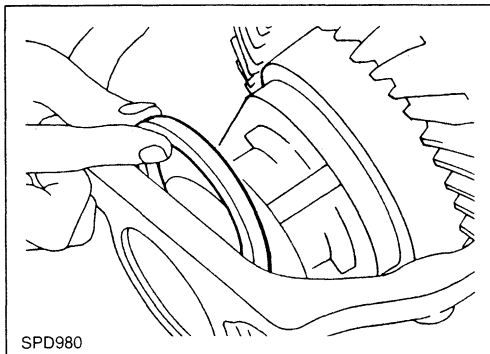


3. Put the side bearing spacer in place on the carrier end, opposite the ring gear.

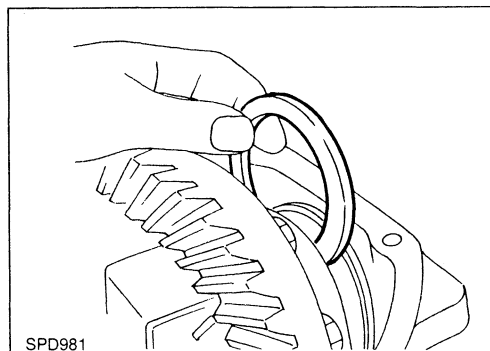

4. Using the J-25267 side bearing spacer drift, place both of the original carrier side bearing preload shims on the gear end of the carrier.

## ADJUSTMENT

### Side Bearing Preload (Cont'd)

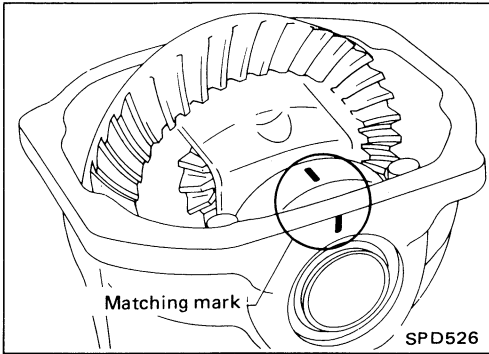


5. Install the side bearing caps in their correct locations and torque the bearing cap retaining bolts.

**Specification:**

**88 - 98 N·m**

**(9 - 10 kg-m, 65 - 72 ft-lb)**

6. Turn the carrier several times to seat the bearings.

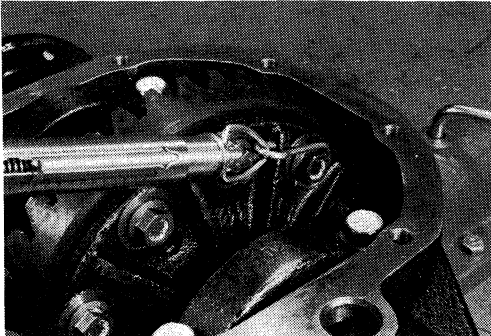


7. Measure the turning torque of the carrier at the ring gear retaining bolts with a spring gauge, J-8129.

**Specification:**

**34.3 - 39.2 N**


**(3.5 - 4 kg, 7.7 - 8.8 lb)**

**of pulling force at the ring gear bolt.**

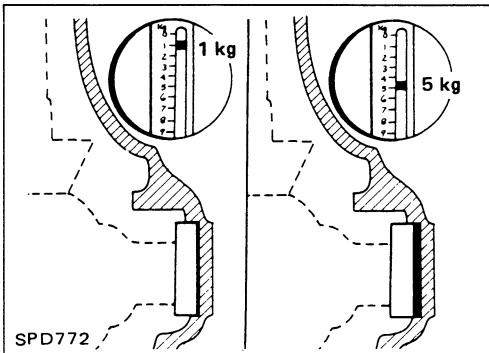


8. If the carrier turning torque is not within the specification range, increase or decrease the total thickness of the side bearing adjusting washers until the turning torque is correct. If the turning torque is less than the specified range, install washers of greater thickness; if the turning torque is greater than the specification, install thinner washers. See the S.D.S. section for washer dimensions and part numbers.

9. Record the total amount of washer thickness required for the correct carrier side bearing preload.

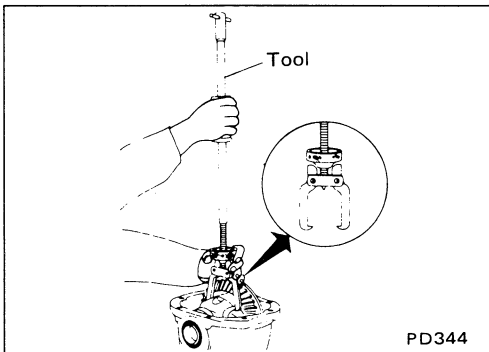

10. Remove the carrier from the final drive housing, saving the selected preload washers for later use during the assembly of the final drive unit.

**Tool number: HT72400000 ( — )**

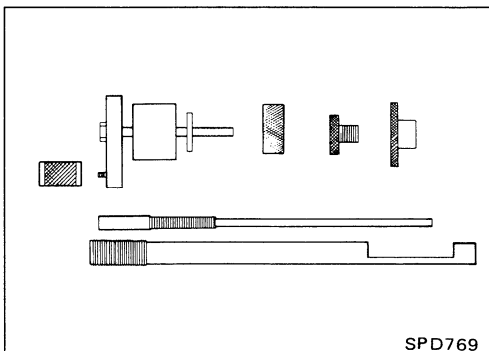


### Pinion Gear Height and Pinion Bearing Preload


1. Make sure all parts are clean and that the bearings are well lubricated.
2. Assemble the pinion gear bearings into the pinion preload shim selector Tool, J-34309.

## ADJUSTMENT


### Pinion Gear Height and Pinion Bearing Preload (Cont'd)

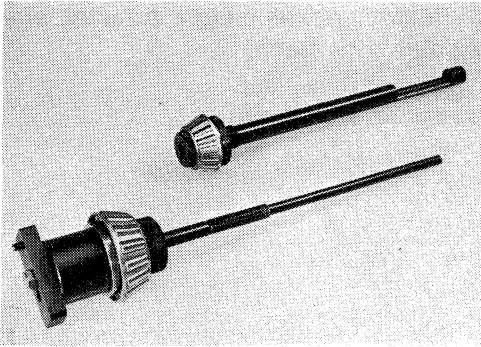


- **Front pinion bearing** — make sure the J-34309-3 front pinion bearing seat is secured tightly against the J-34309-2 gauge anvil. Then turn the front pinion bearing pilot, J-34309-5, to secure the bearing in its proper position.
- **Rear pinion bearing** — the rear pinion bearing pilot, J-34309-8, is used to center the rear pinion bearing only. The rear pinion bearing locking seat, J-34309-4, is used to lock the bearing to the assembly.

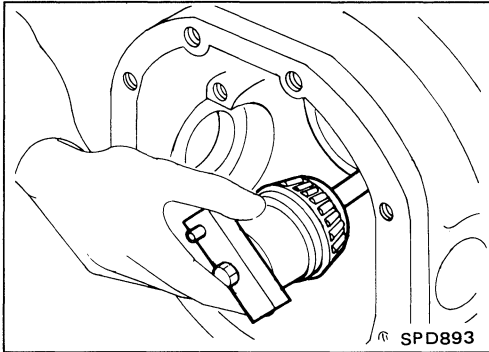

3. Place the pinion preload shim selector Tool, J-34309-1, gauge screw assembly with the pinion rear bearing inner cone installed into the final drive housing.

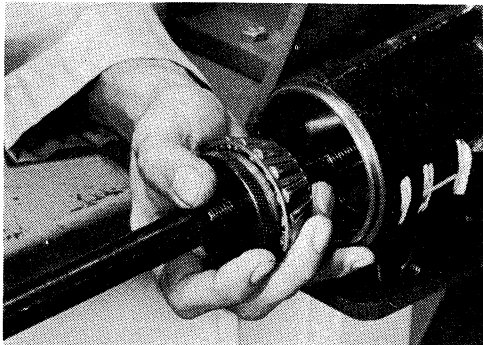

4. Assemble the front pinion bearing inner cone and the J-34309-2 gauge anvil together with the J-34309-1 gauge screw in the final drive housing. Make sure that the pinion height gauge plate, J-34309-16, will turn a full 360 degrees, and tighten the two sections together by hand.

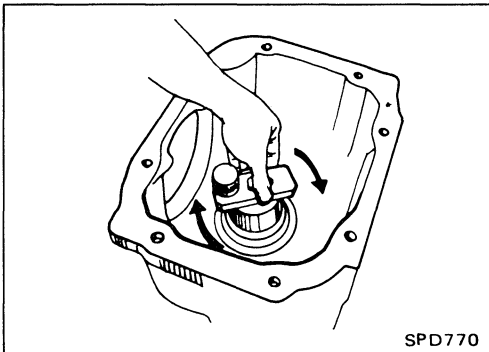

5. Turn the assembly several times to seat the bearings.



6. Measure the turning torque at the end of the J-34309-2 gauge anvil using torque wrench J-25765A.

#### Turning torque specification:

1.0 - 1.3 N·m

(10 - 13 kg-cm, 8.7 - 11.3 in-lb)


## ADJUSTMENT

### Pinion Gear Height and Pinion Bearing Preload (Cont'd)

- Place the J-34309-11 "R200A" pinion height adapter onto the gauge plate and tighten it by hand.



**CAUTION:**

**Make sure all machined surfaces are clean.**

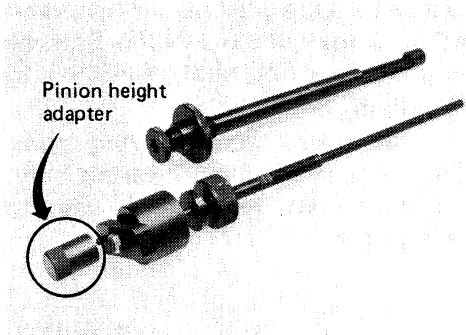

— PINION BEARING PRELOAD WASHER SELECTION —


- Place the solid pinion bearing spacer, small end first, over the J-34309-2 gauge anvil and seat the small end squarely against the tip of the J-34309-1 gauge screw in the tool recessed portion.

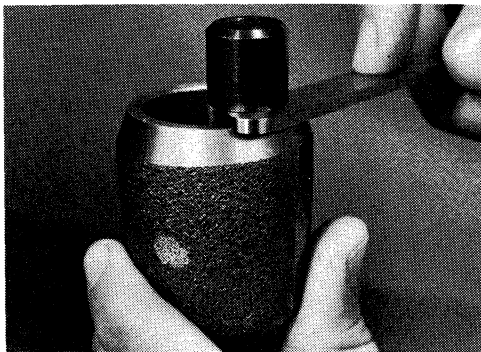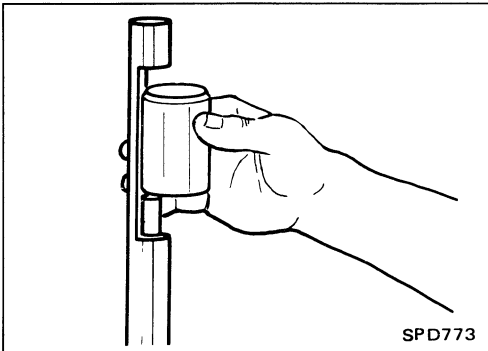

- Select the correct thickness of pinion bearing preload adjusting washer using a standard gauge of 3.5 mm (0.138 in) and your J-34309-101 feeler gauge. The exact measure you get with your gauges is the thickness of the adjusting washer required. Select the correct washer.

**Drive pinion bearing preload adjusting washer:**

**Refer to S.D.S.**

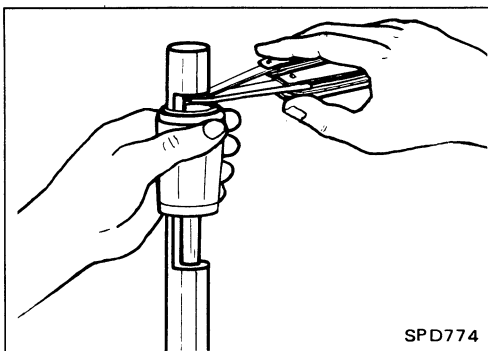


- Set your selected, correct pinion bearing preload adjusting washer aside for use when assembling the pinion gear and bearings into the final drive.



## ADJUSTMENT

### Pinion Gear Height and Pinion Bearing Preload (Cont'd)

#### — PINION HEIGHT ADJUSTING WASHER SELECTION —

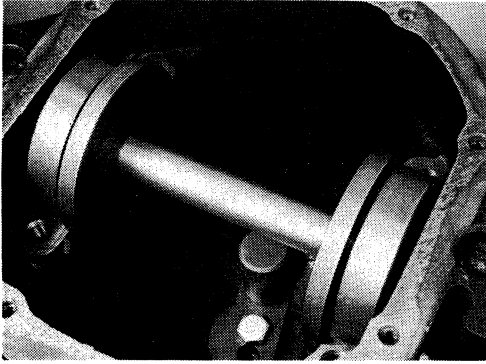


11. Now, position the side bearing discs, J-25269-4, and arbor firmly into the side bearing bores.

Install the side bearing caps and tighten the cap bolts.


#### Specification:

88 - 98 N·m


(9 - 10 kg-m, 65 - 72 ft-lb)

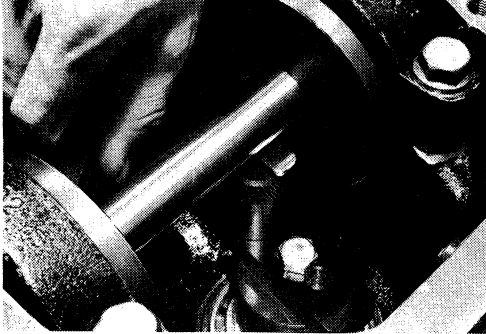

12. Select the correct standard pinion height adjusting washer thickness using a standard gauge of 3 mm (0.12 in) and your J-34309-101 feeler gauge. Measure the distance between the J-34309-10 pinion height adapter and the arbor.

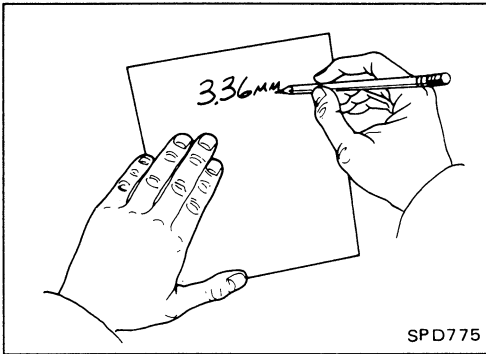

13. Write down your exact total measurement.

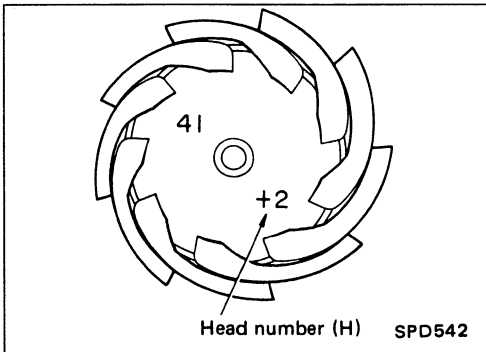

14. Correct the pinion height washer size by referring to the "pinion head number."

**There are two numbers painted on the pinion gear. The first one refers to the pinion and ring gear as a matched set and should be the same as the number on the ring gear. The second number is the "pinion head height number," and it refers to the ideal pinion height from standard for quietest operation. Use the following chart to determine the correct pinion height washer.**

## ADJUSTMENT


### Pinion Gear Height and Pinion Bearing Preload (Cont'd)

Pinion head height number	Add or remove from the standard pinion height washer thickness measurement
- 6	Add 0.06 mm (0.0024 in)
- 5	Add 0.05 mm (0.0020 in)
- 4	Add 0.04 mm (0.0016 in)
- 3	Add 0.03 mm (0.0012 in)
- 2	Add 0.02 mm (0.0008 in)
- 1	Add 0.01 mm (0.0004 in)
0	Use the selected washer thickness
+ 1	Subtract 0.01 mm (0.0004 in)
+ 2	Subtract 0.02 mm (0.0008 in)
+ 3	Subtract 0.03 mm (0.0012 in)
+ 4	Subtract 0.04 mm (0.0016 in)
+ 5	Subtract 0.05 mm (0.0020 in)
+ 6	Subtract 0.06 mm (0.0024 in)

15. Select the correct pinion height washer from the following chart.

#### Drive pinion height adjusting washer (R200):

Thickness mm (in)	Part No.
3.09 (0.1217)	38154-P6017
3.12 (0.1228)	38154-P6018
3.15 (0.1240)	38154-P6019
3.18 (0.1252)	38154-P6020
3.21 (0.1264)	38154-P6021
3.24 (0.1276)	38154-P6022
3.27 (0.1287)	38154-P6023
3.30 (0.1299)	38154-P6024
3.33 (0.1311)	38154-P6025
3.36 (0.1323)	38154-P6026
3.39 (0.1335)	38154-P6027
3.42 (0.1346)	38154-P6028
3.45 (0.1358)	38154-P6029
3.48 (0.1370)	38154-P6030
3.51 (0.1382)	38154-P6031
3.54 (0.1394)	38154-P6032
3.57 (0.1406)	38154-P6033
3.60 (0.1417)	38154-P6034
3.63 (0.1429)	38154-P6035
3.66 (0.1441)	38154-P6036

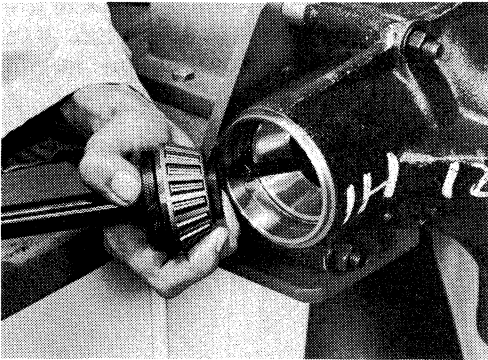


16. Remove the J-34309 pinion preload shim selector Tool from the final drive housing and disassemble to retrieve the pinion bearings.

# ADJUSTMENT


## Tooth Contact

Gear tooth contact pattern check is necessary to verify correct relationship between ring gear and drive pinion.

Hypoid gear sets which are not positioned properly may be noisy, or have short life, or both. Low noise and a long life can be assured with a pattern check.

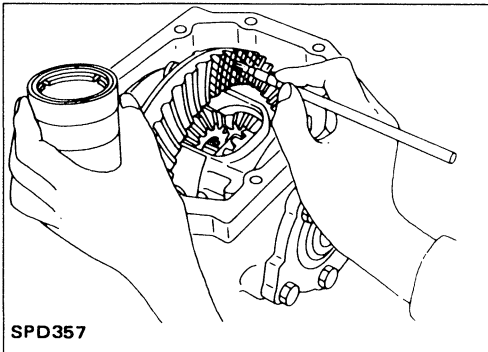


1. Thoroughly clean ring gear and drive pinion teeth.
2. Sparingly apply a mixture of powdered ferric oxide and oil or equivalent to 3 or 4 teeth of ring gear drive side.

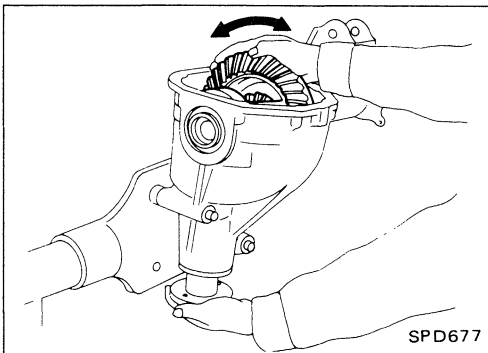

3. Hold companion flange steady and turn the ring gear in both directions.


Usually the pattern will be correct if you have calculated the shims correctly and the backlash is correct. However, in rare cases you may have to use trial-and-error processes until you get a good tooth contact pattern. The tooth pattern is the best indication of how well a differential has been set up.

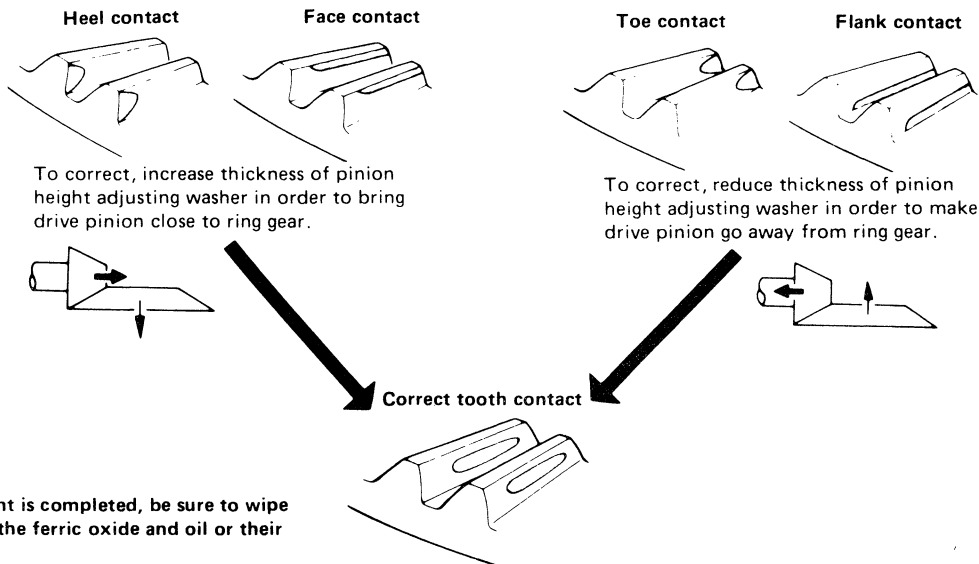

When adjustment is completed, be sure to wipe off completely the ferric oxide and oil or their equivalent.

SPD007

## Differential Case

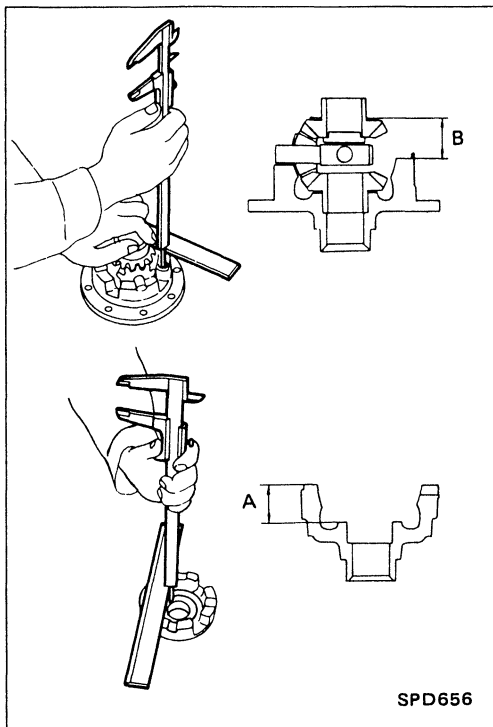

1. Measure clearance between side gear thrust washer and differential case.


**Clearance between side gear thrust washer and differential case (A — B):**

**0.10 - 0.20 mm (0.0039 - 0.0079 in)**


The clearance can be adjusted with side gear thrust washer.

(Refer to S.D.S.)

2. Apply gear oil to gear tooth surfaces and thrust surfaces and check to see they turn properly.

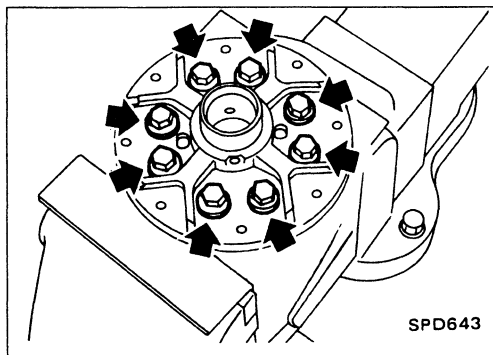


3. Install differential case L.H. and R.H.

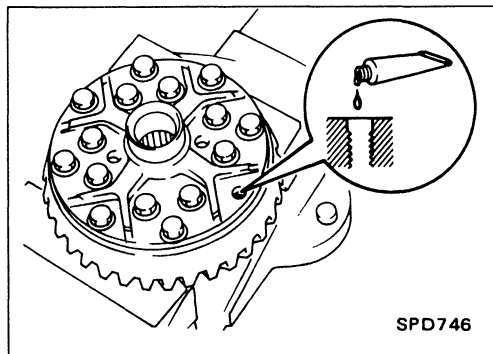

4. Place differential case on ring gear.
5. Apply locking agent [Loctite (stud lock) or equivalent] to ring gear bolts, and install them.

**Tighten bolts in a criss-cross fashion, lightly tapping bolt head with a hammer.**

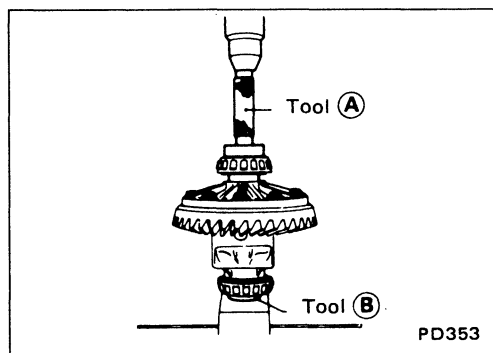

6. Press-fit side bearing inner cones on differential case with Tool.

**Tool number:**

- Ⓐ KV38100300 (J25523)
- Ⓑ ST33061000 (J8107-2)



# ASSEMBLY

## Differential Carrier

1. Press-fit front and rear bearing outer races with Tools.


**Tool number:**

- Ⓐ ST30611000 (J25742-1)
- Ⓑ ST30621000 ( — )
- Ⓒ ST30613000 (J25742-3)

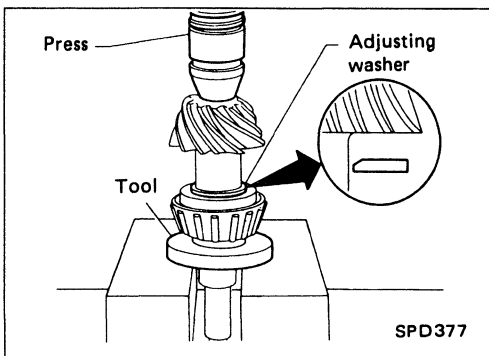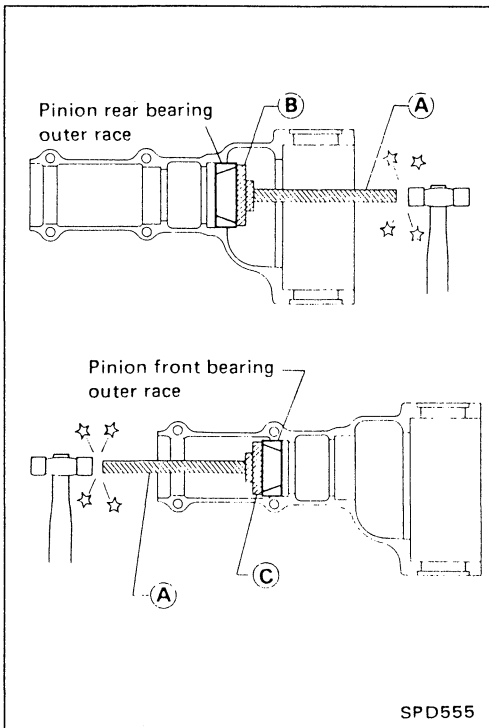

2. Select pinion height adjusting washer and pinion bearing adjusting washer spacer, referring to Adjustment.
3. Install pinion height adjusting washer in drive pinion, and press fit rear bearing inner race in it, with press and Tool.

**Tool number: ST30901000 ( — )**

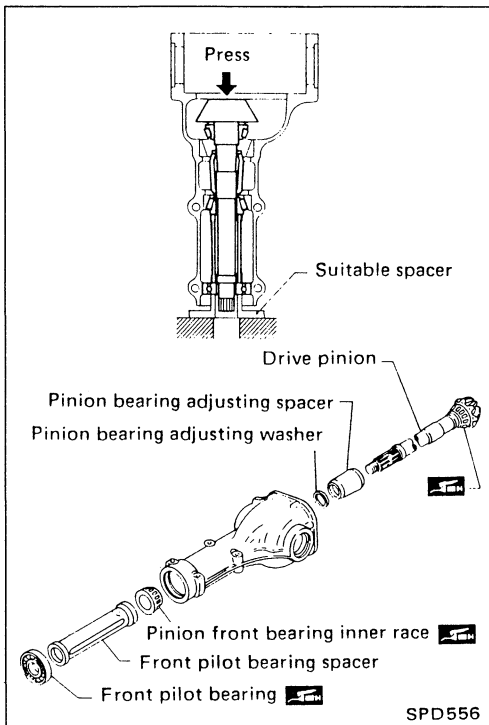


4. Set drive pinion assembly (as shown in figure to the left) in differential carrier and install drive pinion, with press and a suitable tool.

**Stop when drive pinion touches bearing.**


## ASSEMBLY

### Differential Carrier (Cont'd)

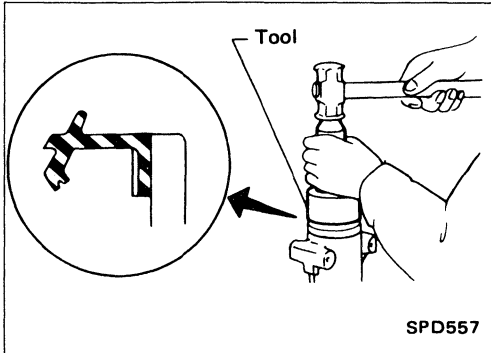

5. Apply multi-purpose grease to cavity at sealing lips of oil seal.  
Install front oil seal with Tool.


**Tool number: KV38100500 ( — )**

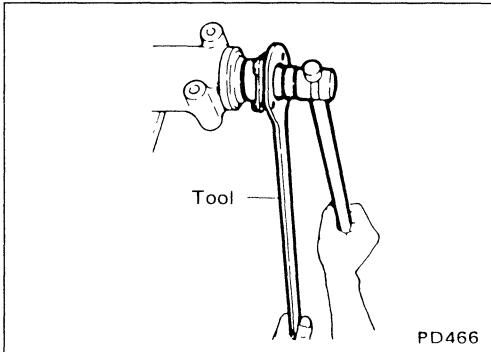

6. Install companion flange, and tighten pinion nut to specified torque.

**Ascertain that threaded portion of drive pinion and pinion nut are free from oil or grease.**

**Tool number: ST31520000 ( — )**

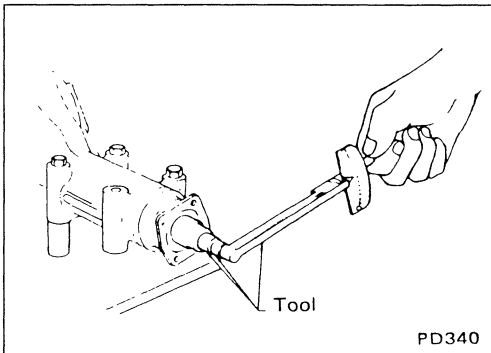


7. Turn drive pinion in both directions several times, and measure pinion bearing preload.

**Pinion bearing preload:**

**1.1 - 1.4 N·m**


**(11 - 14 kg-cm, 9.5 - 12.2 in-lb)**

**When pinion bearing preload is outside the specifications, replace pinion bearing adjusting washer and spacer with a different thickness.**

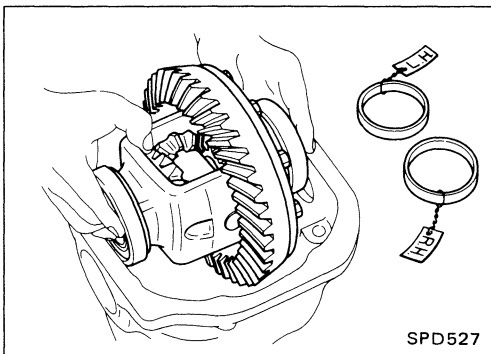

8. Select side bearing adjusting washer.  
Refer to Adjustment.


9. Install differential case assembly with side bearing outer races into gear carrier.

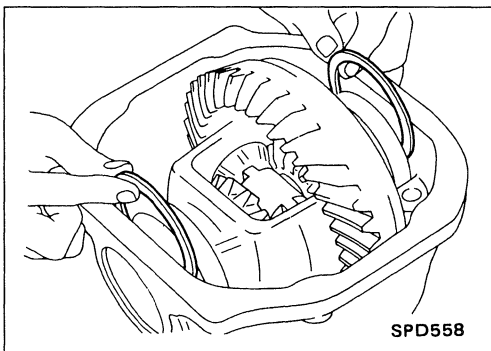


10. Insert left and right side bearing adjusting washers in place between side bearings and carrier.

## ASSEMBLY


### Differential Carrier (Cont'd)

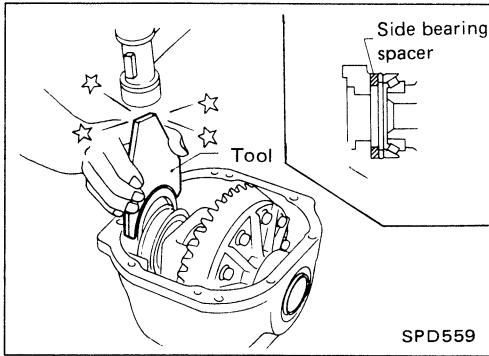


11. Drive in side bearing spacer with Tool.  
**Tool number: KV38100600 (J25267)**

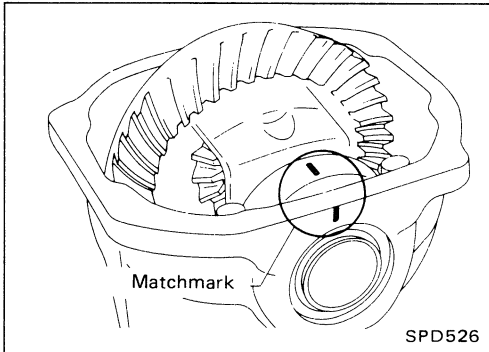

12. Align mark on bearing cap with that on gear carrier and install bearing cap on gear carrier.

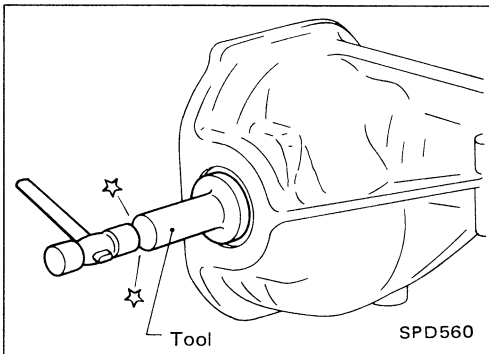

13. Apply multi-purpose grease to cavity at sealing lips of oil seal.  
Install side oil seal with Tool.  
**Tool number: KV38100200 (J26233)**

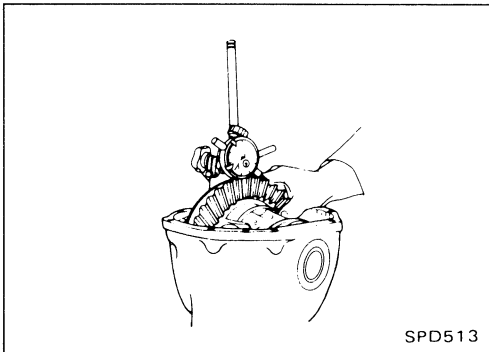

14. Measure ring gear to drive pinion backlash with a dial indicator.

#### **Ring gear to drive pinion backlash:**

**0.10 - 0.15 mm**


**(0.0039 - 0.0059 in)**

- If backlash is too small, decrease thickness of left shim and increase thickness of right shim by the same amount.  
If backlash is too great, reverse the above procedure.

**Never change the total amount of shims as it will change the bearing preload.**

## ASSEMBLY

### Differential Carrier (Cont'd)

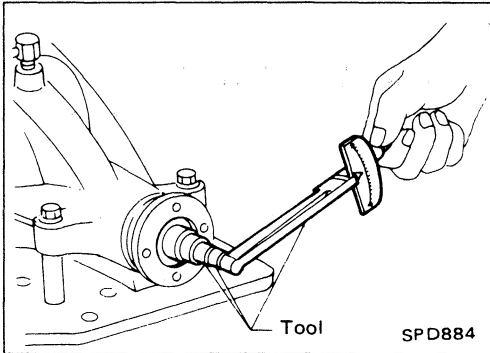

15. Check total preload with Tool.

**When checking preload, turn drive pinion in both directions several times to seat bearing rollers correctly.**


**Total preload:**

**Value more than 0.29 N·m (3.0 kg-cm, 2.6 in-lb) added on measured value of drive pinion preload**

- If preload is too great, add the same amount of shim to each side.
- If preload is too small, remove the same amount of shim to each side.

**Never add or remove a different number of shims for each side as it will change ring gear to drive pinion backlash.**

16. Recheck ring gear to drive pinion backlash because increase or decrease in thickness of shims will cause change of ring gear-to-pinion backlash.

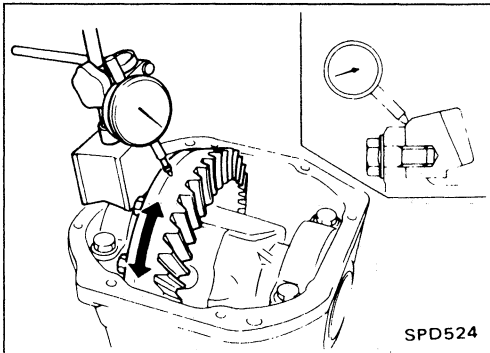

17. Check runout of ring gear with a dial indicator.

**Runout limit:**

**0.05 mm (0.0020 in)**

- If backlash varies excessively in different places, the variance may have resulted from foreign matter caught between the ring gear and the differential case.
- If the backlash varies greatly when the runout of the ring gear is within a specified range, the hypoid gear set or differential case should be replaced.

18. Check tooth contact.

Refer to Adjustment.

19. Install rear cover and gasket.



# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Propeller Shaft

### GENERAL SPECIFICATIONS

Unit: mm (in)

Propeller shaft model	3S71A-T
Number of joints	3
Coupling method with transmission	Sleeve type
Type of journal bearings	Shell type (Non-disassembly type)
Distance between yokes	71 (2.80)
Shaft length (Spider to spider)	
1st	545 (21.46)
2nd	560 (22.05), 575 (22.64)*
Shaft outer diameter	
1st	75 (2.95)
2nd	
Outer	75 (2.95)
Inner	63.5 (2.500)

\*: Without A.B.S.

### INSPECTION AND ADJUSTMENT

Unit: mm (in)

Propeller shaft model	3S71A-T
Propeller shaft runout limit	0.6 (0.024)
Measuring point	
A	162 (6.38)
B	172 (6.77)
C	192 (7.56)
Journal play	0 (0)

## Final Drive

### GENERAL SPECIFICATIONS

Final drive model	R200
Number of pinions	4
Ring gear pitch diameter mm (in)	205 (8.07)
Gear ratio	3.916
Number of gear teeth (Ring gear/drive pinion)	47/12
Oil capacity (Approx.) ℓ (US pt, Imp pt)	1.3 (2-3/4, 2-1/4)

### Available side gear thrust washers

Thickness mm (in)	Part number
0.75 - 0.80 (0.0295 - 0.0315)	38424-E3000
0.80 - 0.85 (0.0315 - 0.0335)	38424-E3001
0.85 - 0.90 (0.0335 - 0.0354)	38424-E3002
0.90 - 0.95 (0.0354 - 0.0374)	38424-E3003
0.95 - 1.00 (0.0374 - 0.0394)	38424-E3004
1.00 - 1.05 (0.0394 - 0.0413)	38424-E3005
1.05 - 1.10 (0.0413 - 0.0433)	38424-E3006
1.10 - 1.15 (0.0433 - 0.0453)	38424-E3007

### INSPECTION AND ADJUSTMENT (Model R200)

#### Ring gear runout

Ring gear runout limit mm (in)	0.05 (0.0020)
-----------------------------------	---------------

#### Side bearing adjustment

Backlash between side gear and mate gear (Clearance between side gear to differential case) mm (in)	0.1 - 0.2 (0.004 - 0.008)
--	------------------------------

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Final Drive (Cont'd)

### Drive pinion height adjustment

#### Available pinion height adjusting washers

Thickness mm (in)	Part number
3.09 (0.1217)	38154-P6017
3.12 (0.1228)	38154-P6018
3.15 (0.1240)	38154-P6019
3.18 (0.1252)	38154-P6020
3.21 (0.1264)	38154-P6021
3.24 (0.1276)	38154-P6022
3.27 (0.1287)	38154-P6023
3.30 (0.1299)	38154-P6024
3.33 (0.1311)	38154-P6025
3.36 (0.1323)	38154-P6026
3.39 (0.1335)	38154-P6027
3.42 (0.1346)	38154-P6028
3.45 (0.1358)	38154-P6029
3.48 (0.1370)	38154-P6030
3.51 (0.1382)	38154-P6031
3.54 (0.1394)	38154-P6032
3.57 (0.1406)	38154-P6033
3.60 (0.1417)	38154-P6034
3.63 (0.1429)	38154-P6035
3.66 (0.1441)	38154-P6036

### Drive pinion preload adjustment

Drive pinion preload	
N·m (kg-cm, in-lb)	1.1 - 1.4
With front oil seal	(11 - 14, 9.5 - 12.2)

#### Available drive pinion bearing preload adjusting washers

Thickness mm (in)	Part number
3.80 - 3.82 (0.1496 - 0.1504)	38125-61001
3.82 - 3.84 (0.1504 - 0.1512)	38126-61001
3.84 - 3.86 (0.1512 - 0.1520)	38127-61001
3.86 - 3.88 (0.1520 - 0.1528)	38128-61001
3.88 - 3.90 (0.1528 - 0.1535)	38129-61001
3.90 - 3.92 (0.1535 - 0.1543)	38130-61001
3.92 - 3.94 (0.1543 - 0.1551)	38131-61001
3.94 - 3.96 (0.1551 - 0.1559)	38132-61001
3.96 - 3.98 (0.1559 - 0.1567)	38133-61001
3.98 - 4.00 (0.1567 - 0.1575)	38134-61001
4.00 - 4.02 (0.1575 - 0.1583)	38135-61001
4.02 - 4.04 (0.1583 - 0.1591)	38136-61001
4.04 - 4.06 (0.1591 - 0.1598)	38137-61001
4.06 - 4.08 (0.1598 - 0.1606)	38138-61001
4.08 - 4.10 (0.1606 - 0.1614)	38139-61001

#### Available drive pinion bearing preload adjusting spacers

Length mm (in)	Part number
55.10 (2.1693)	38165-B4002
55.40 (2.1811)	38165-B4003
55.70 (2.1929)	38165-B4004
56.00 (2.2047)	38165-61001

### Total preload adjustment

Total preload	Value more than 0.29 N·m (3 kg-cm, 2.6 in-lb) added on measured value of drive pinion preload
Backlash of drive pinion and ring gear	0.10 - 0.15 (0.0039 - 0.0059)
mm (in)	

#### Available side bearing adjusting washers

Thickness mm (in)	Part number
2.00 (0.0787)	38453-N3100
2.05 (0.0807)	38453-N3101
2.10 (0.0827)	38453-N3102
2.15 (0.0846)	38453-N3103
2.20 (0.0866)	38453-N3104
2.25 (0.0886)	38453-N3105
2.30 (0.0906)	38453-N3106
2.35 (0.0925)	38453-N3107
2.40 (0.0945)	38453-N3108
2.45 (0.0965)	38453-N3109
2.50 (0.0984)	38453-N3110
2.55 (0.1004)	38453-N3111
2.60 (0.1024)	38453-N3112

# FRONT AXLE & FRONT SUSPENSION


## SECTION **FA**

### CONTENTS

PRECAUTIONS .....	FA- 2
PREPARATION .....	FA- 3
FRONT AXLE AND FRONT SUSPENSION .....	FA- 4
CHECKING AND ADJUSTMENT — On-vehicle .....	FA- 5
FRONT AXLE .....	FA-11
FRONT SUSPENSION .....	FA-14
FRONT SUSPENSION — Coil Spring and Strut Assembly .....	FA-15
FRONT SUSPENSION — Tension Rod and Stabilizer Bar .....	FA-20
FRONT SUSPENSION — Transverse Link Assembly .....	FA-21
SONAR SUSPENSION SYSTEM — Trouble Diagnoses .....	FA-22
SERVICE DATA AND SPECIFICATIONS (S.D.S.) .....	FA-46








## PRECAUTIONS

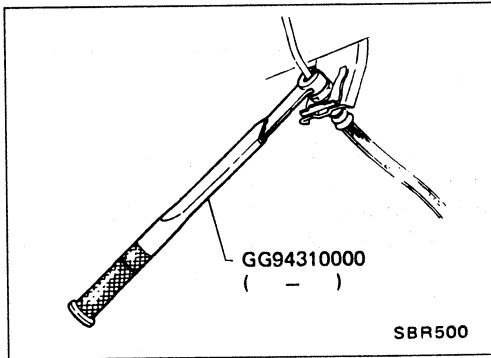



- When installing each rubber part, final tightening must be carried out under unladen condition\* with tires on ground.  
\*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.
- When removing each suspension part, check wheel alignment and adjust if necessary.
- Use Tool when removing or installing brake tubes.

# PREPARATION

## SPECIAL SERVICE TOOLS

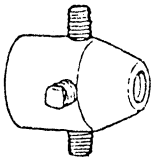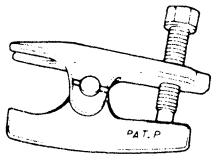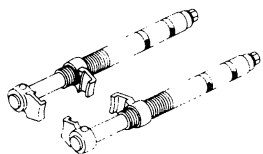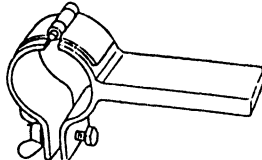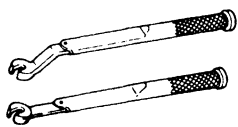Tool number (Kent-Moore No.) Tool name	Description
KV401021S0 ( — ) Bearing race drift	 <p style="text-align: right;">Installing wheel bearing outer race</p>
HT72520000 (J25730-A) Ball joint remover	 <p style="text-align: right;">Removing tie-rod outer end and lower ball joint</p>
HT71780000 ( — ) Spring compressor	 <p style="text-align: right;">Removing and installing coil spring</p>
ST35652000 ( — ) Strut attachment	 <p style="text-align: right;">Fixing strut assembly</p>
GG94310000 ( — ) Flare nut torque wrench	 <p style="text-align: right;">Removing and installing brake piping</p>


## COMMERCIAL SERVICE TOOLS

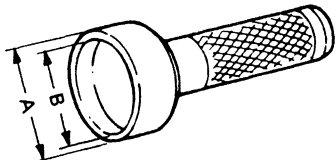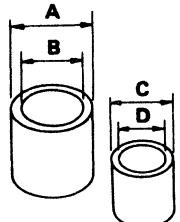
Tool name	Description
Front axle grease seal drift	 <p style="text-align: right;">Installing front axle grease seal</p> <p style="text-align: right;">A: 70 mm (2.76 in) dia. B: 60 mm (2.36 in) dia.</p>
Tension rod bushing drift	 <p style="text-align: right;">Removing and installing tension rod bushing</p> <p style="text-align: right;">A: 75 mm (2.95 in) dia. B: 66 mm (2.60 in) dia. C: 62 mm (2.44 in) dia. D: 25 - 55 mm (0.98 - 2.17 in) dia.</p>

# FRONT AXLE AND FRONT SUSPENSION

When installing each rubber part, final tightening must be carried out under unladen condition\* with tires on ground.

\* Fuel, radiator coolant and engine oil full.  
Spare tire, jack, hand tools and mats in designated positions.

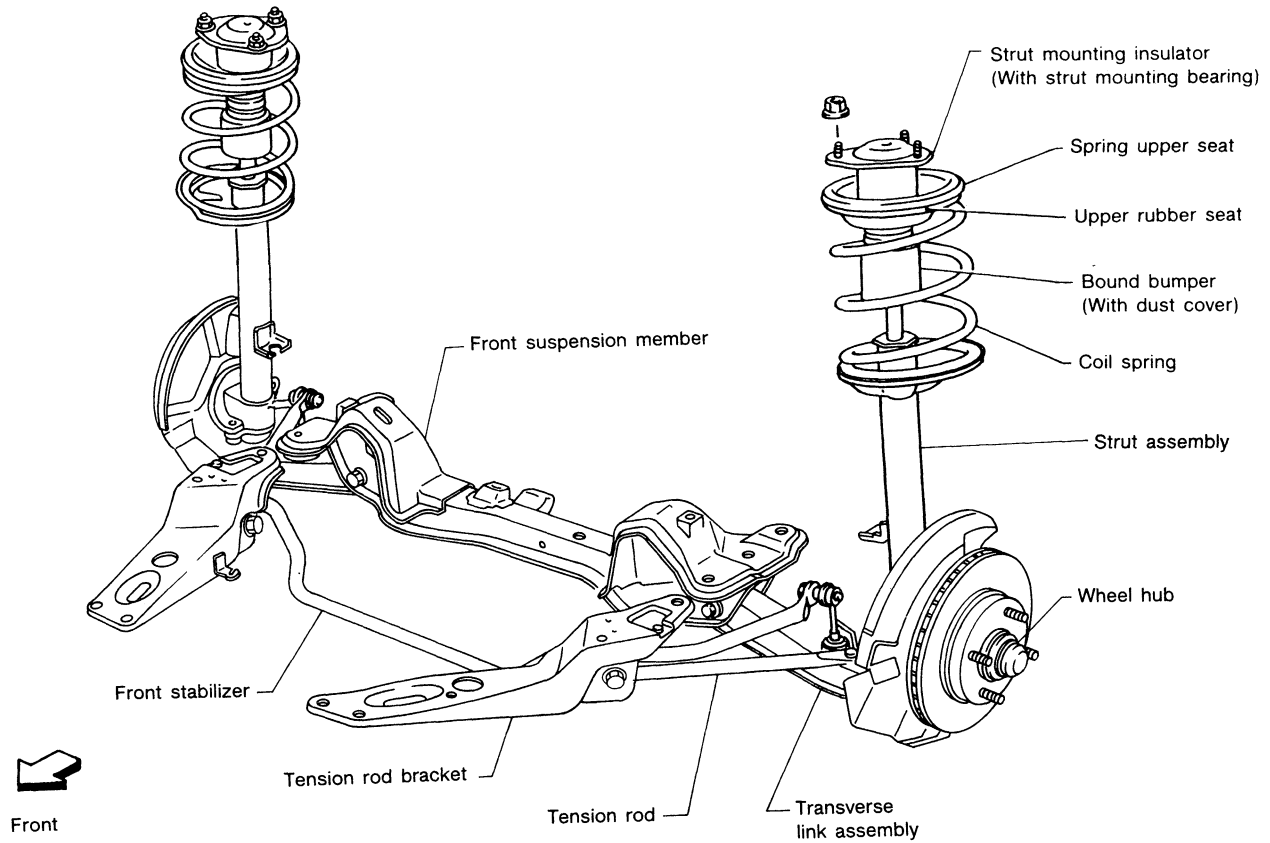


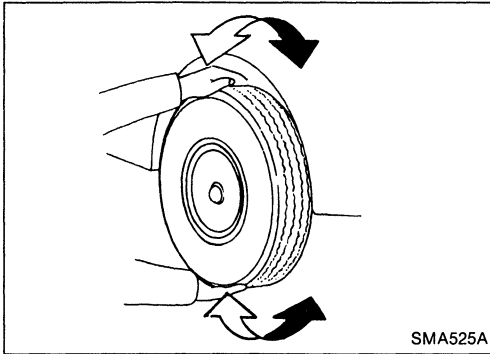

### Front Axle and Front Suspension Parts

Check front axle and front suspension parts for looseness, cracks, wear or other damage.



- Shake each front wheel to check for excessive play.

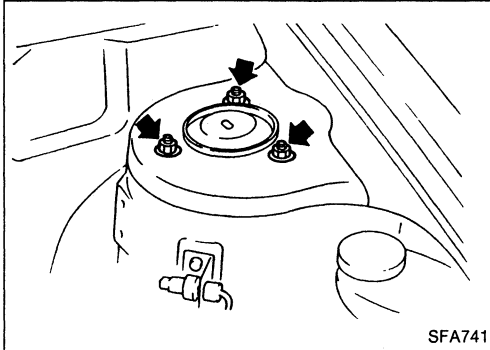

- Make sure that cotter pin is inserted.
- Retighten all nuts and bolts to the specified torque.

#### Tightening torque:

Refer to **FRONT SUSPENSION**.

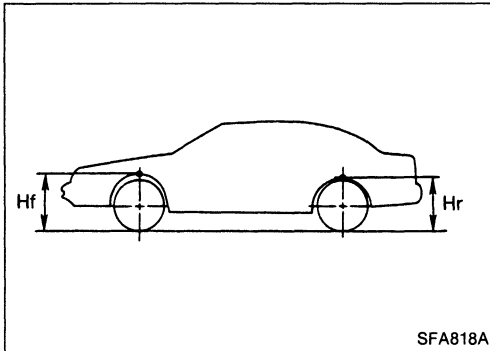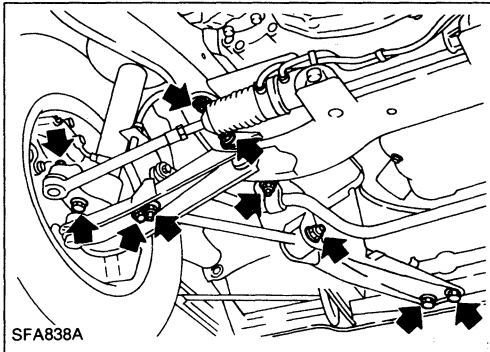

- Check spring height from the top of the wheelarch to the ground.

- (1) Vehicle must be unladen\*, parked on a level surface, and tires checked for proper inflation and wear (tread wear indicator must not be showing).

\*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

- (2) Bounce the vehicle up and down several times before measuring.

#### Wheelarch height:


**Front (Hf): 673 mm (26.50 in)**

**Rear (Hr): 664 mm (26.14 in)**


- (3) Spring height is not adjustable. If out of specification, check for worn springs or suspension parts.

## CHECKING AND ADJUSTMENT — On-vehicle


### Front Axle and Front Suspension Parts (Cont'd)

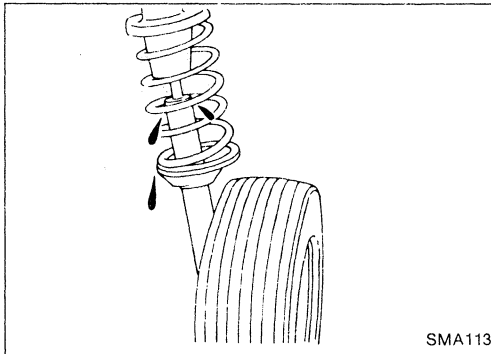

- Check strut (Shock absorber) for oil leakage or damage.

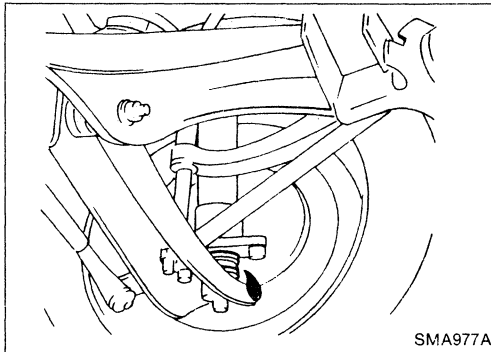

- Check suspension ball joint for grease leakage and ball joint dust cover for cracks or other damage.

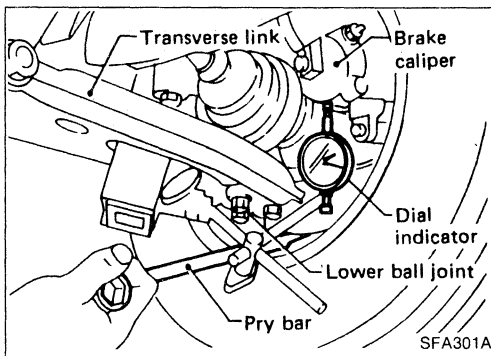


- Check suspension ball joint end play.
  - (1) Jack up front of vehicle and set the stands.
  - (2) Clamp dial indicator onto transverse link and place indicator tip on lower edge of brake caliper.
  - (3) Make sure front wheels are straight and brake pedal is depressed.
  - (4) Place a pry bar between transverse link and inner rim of road wheel.
  - (5) While raising and releasing pry bar, observe maximum dial indicator value.

#### Vertical end play:

**0.1 - 1.3 mm (0.004 - 0.051 in)**

- (6) If ball joint movement is beyond specifications, remove and recheck it.

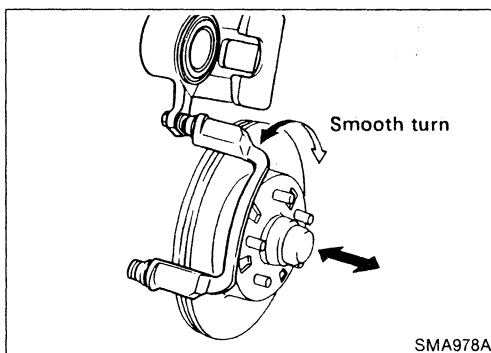

### Front Wheel Bearing

Check that wheel bearings operate smoothly, as well as axial end play and grease leakage.

**Axial end play limit: 0 mm (0 in)**




## Front Wheel Bearing (Cont'd)


### PRELOAD ADJUSTMENT

Be sure to adjust wheel bearing preload as described below after wheel bearing has been replaced or front axle has been reassembled.


1. Before adjustment, thoroughly clean all parts to prevent dirt entry.

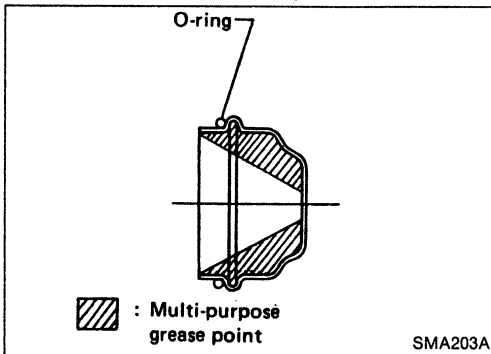


2. Apply recommended multi-purpose grease sparingly to the following parts.
  - Rubbing surface of spindle
  - Contact surface between lock washer and outer wheel bearing
  - Hub cap (as shown at the left)
  - Grease seal lip

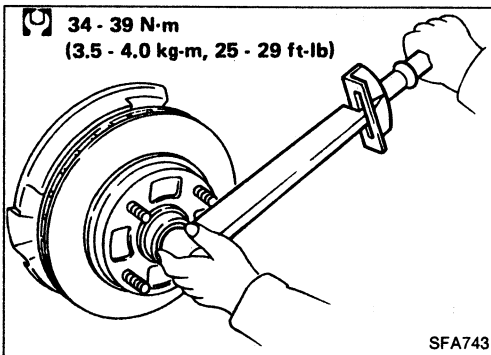

3. Tighten wheel bearing lock nut to the specified torque.
4. Turn wheel hub several times in both directions to seat wheel bearing correctly.
5. Again tighten wheel bearing nut to the specified torque.
6. Turn back wheel bearing lock nut at 90°.

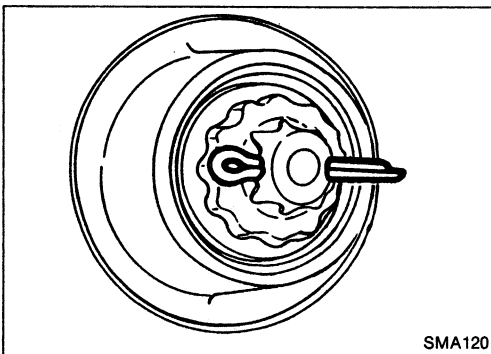


7. Fit adjusting cap and new cotter pin.  
**Do not turn nut back for cotter pin insertion.**  
Align cotter pin slot, by retightening nut within 15°.

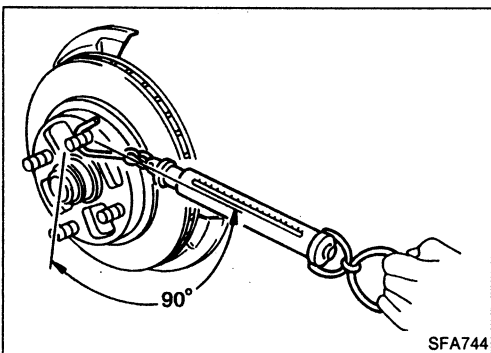

8. Measure wheel bearing preload and axial end play.  
**Axial end play limit: 0.05 mm (0.0020 in)**  
**Wheel bearing preload**  
**(As measured at wheel hub bolt):**  
**13.7 N (1.4 kg, 3.1 lb) or less**  
Repeat above procedures until correct bearing preload is obtained.

### Front Wheel Bearing (Cont'd)

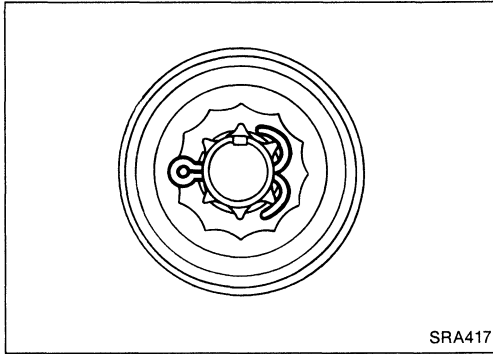


9. Spread cotter pin.
10. Install hub cap with new O-ring.

### Front Wheel Alignment

Before checking front wheel alignment, be sure to make a preliminary inspection (Unladen\*).

\*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

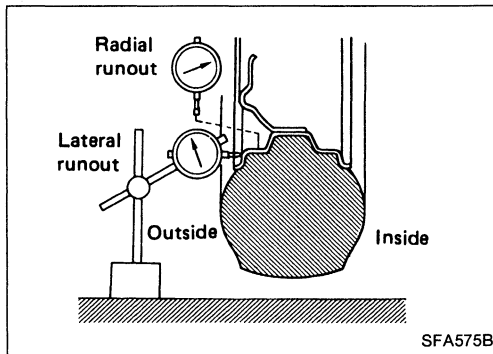


### PRELIMINARY INSPECTION

1. Check tires for wear and improper inflation.
2. Check wheel runout.

#### Wheel runout:

Refer to S.D.S.

3. Check front wheel bearings for looseness.
4. Check front suspension for looseness.
5. Check steering linkage for looseness.
6. Check that front shock absorbers work properly by using the standard bounce test.
7. Check vehicle posture (Unladen).

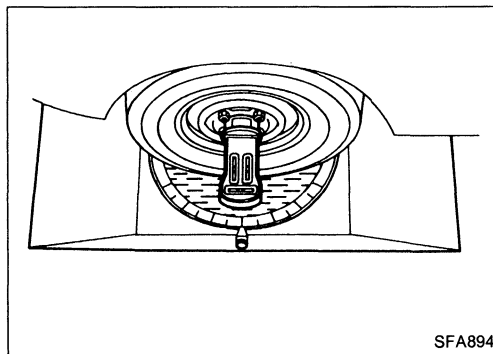

### CAMBER, CASTER AND KINGPIN INCLINATION

Camber, caster and kingpin inclination are preset at factory and cannot be adjusted.

1. Measure camber, caster and kingpin inclination of both right and left wheels with a suitable alignment gauge.

#### Camber:

-35' to 55'

#### Caster:

3°55' - 5°25'






#### Kingpin inclination:

11°55' - 13°25'

2. If camber, caster and kingpin inclination are not within specification, inspect and replace any damaged or worn front suspension parts.

## Front Wheel Alignment (Cont'd)

### TOE-IN

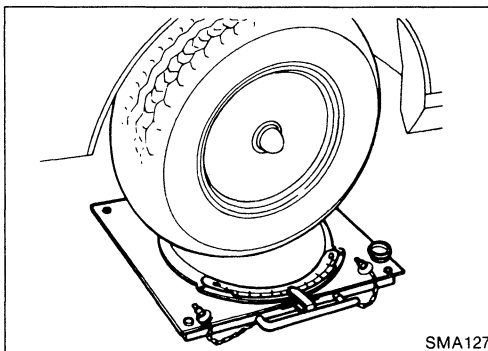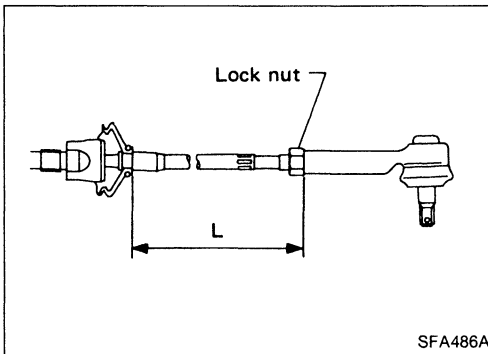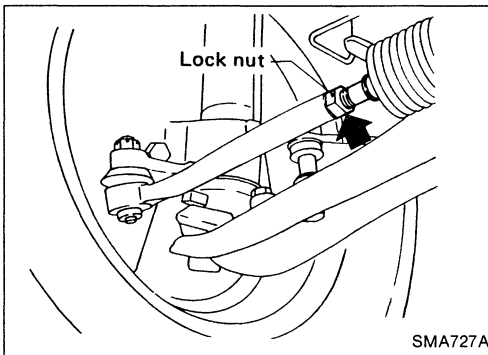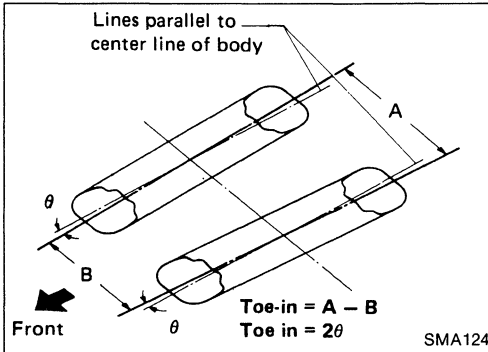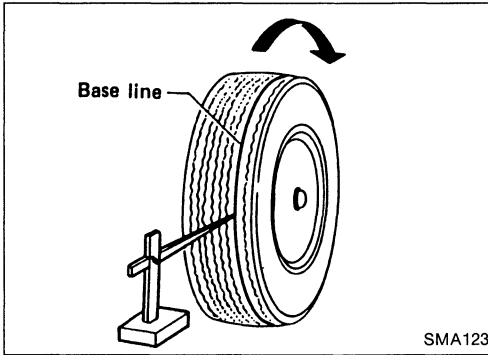

1. Draw a base line across the tread.
  - After lowering front of vehicle, move it up and down to eliminate friction, and set steering wheel in straight-ahead position.

2. Measure toe-in.
  - Measure distance "A" and "B" at the same height as hub center.

#### Total toe-in (Unladen):

A - B: -1 to 1 mm (-0.04 to 0.04 in)  
 $2\theta$ : -5' to 5'

3. Adjust toe-in by varying the length of steering tie-rods.
  - (1) Loosen lock nuts.
  - (2) Adjust toe-in by screwing tie-rods in and out.

#### Standard length "L":

Refer to section ST.

- (3) Tighten lock nuts to specified torque.

#### Lock nut tightening torque:

Refer to section ST.

### FRONT WHEEL TURNING ANGLE

1. Set wheels in straight-ahead position and then move vehicle forward until front wheels rest on turning radius gauge properly.


## Front Wheel Alignment (Cont'd)

2. Rotate steering wheel all the way right and left; measure turning angle.



### Wheel turning angle (Full turn):

Inside wheel:  $40^{\circ}30'$  -  $44^{\circ}30'$

Outside wheel:  $33^{\circ}30'$

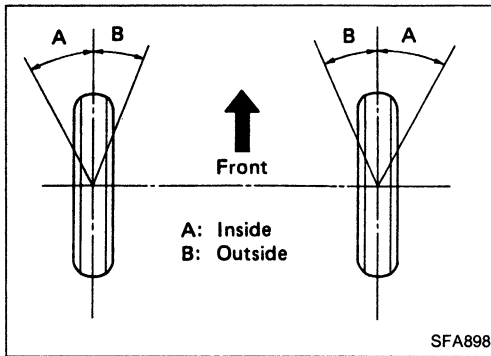


# FRONT AXLE

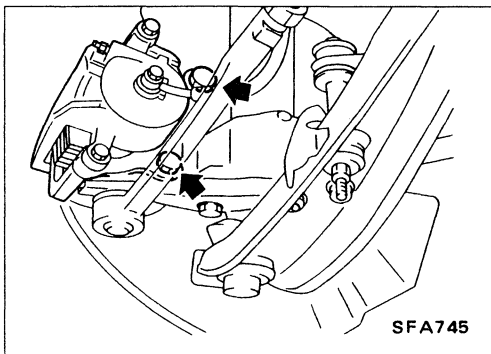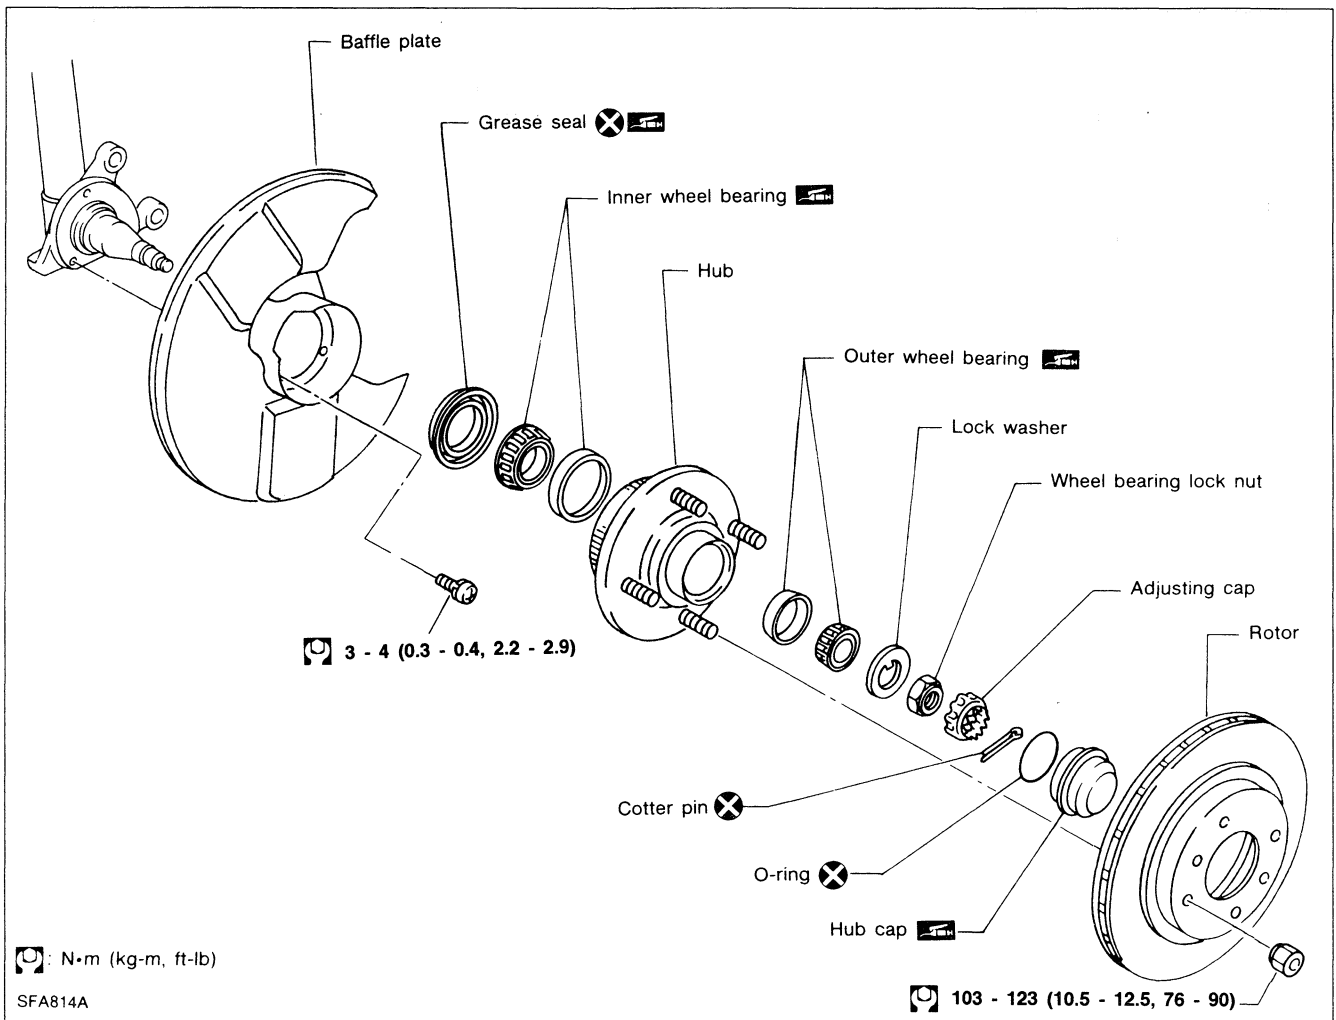

## Removal

- Remove brake caliper assembly and rotor. **Brake hose need not be disconnected from brake caliper. Be careful not to depress brake pedal, or piston will pop out. Do not pull or twist brake hose.**

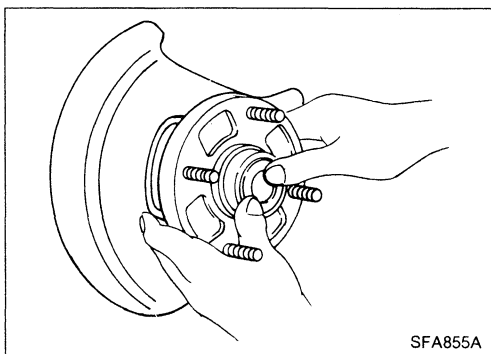


- Remove wheel hub and wheel bearing from spindle. **Be careful not to drop outer bearing.**

## FRONT AXLE

### Removal (Cont'd)

- If bearing or bearing race needs to be replaced, drive out outer race from hub with a brass drift and replace bearing and race as a set.

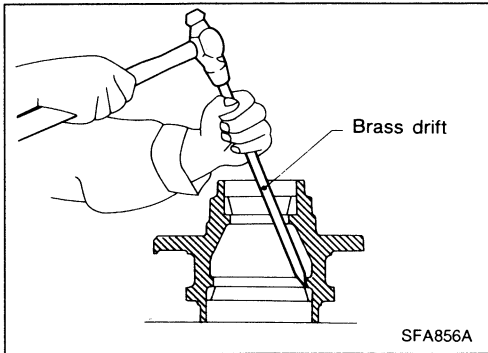

### Inspection

#### WHEEL BEARING


Check wheel bearing to see that it rolls freely and is free from noise, crack, pitting, or wear, and replace if damaged.

#### WHEEL HUB

Check wheel hub for crack by a magnetic exploration or dyeing test, and replace if cracked.


#### KNUCKLE SPINDLE

Check knuckle spindle for deformation, tapping mark, or cracks (by magnetic or dyeing test) and replace if damaged.

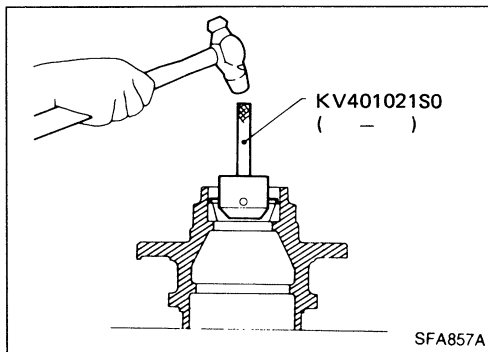

### Installation


- Install bearing outer race with Tool until it seats in hub.

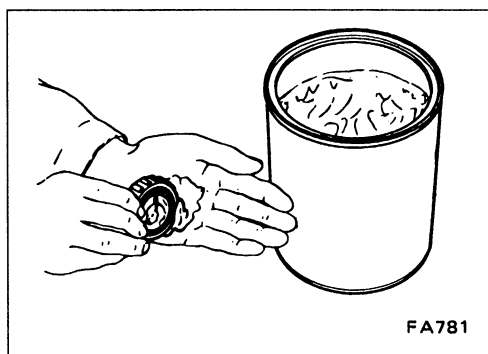


- Coat each bearing cone with recommended multi-purpose grease.

## FRONT AXLE

### Installation (Cont'd)

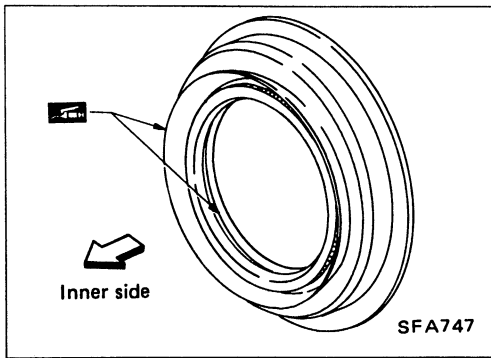


- Pack grease seal lip with recommended multi-purpose grease, then install it with suitable drift until it seats in hub.

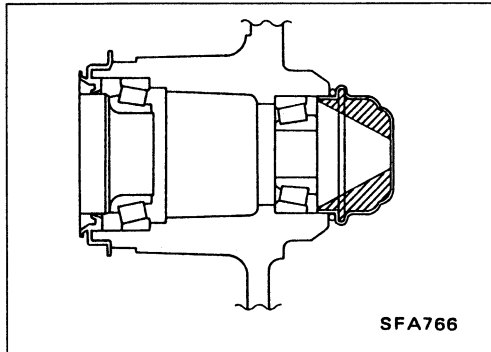

- Pack hub and hub cap with recommended multi-purpose grease up to shaded portions.

- For wheel bearing adjustment, refer to CHECKING AND ADJUSTMENT — On-vehicle.

# FRONT SUSPENSION

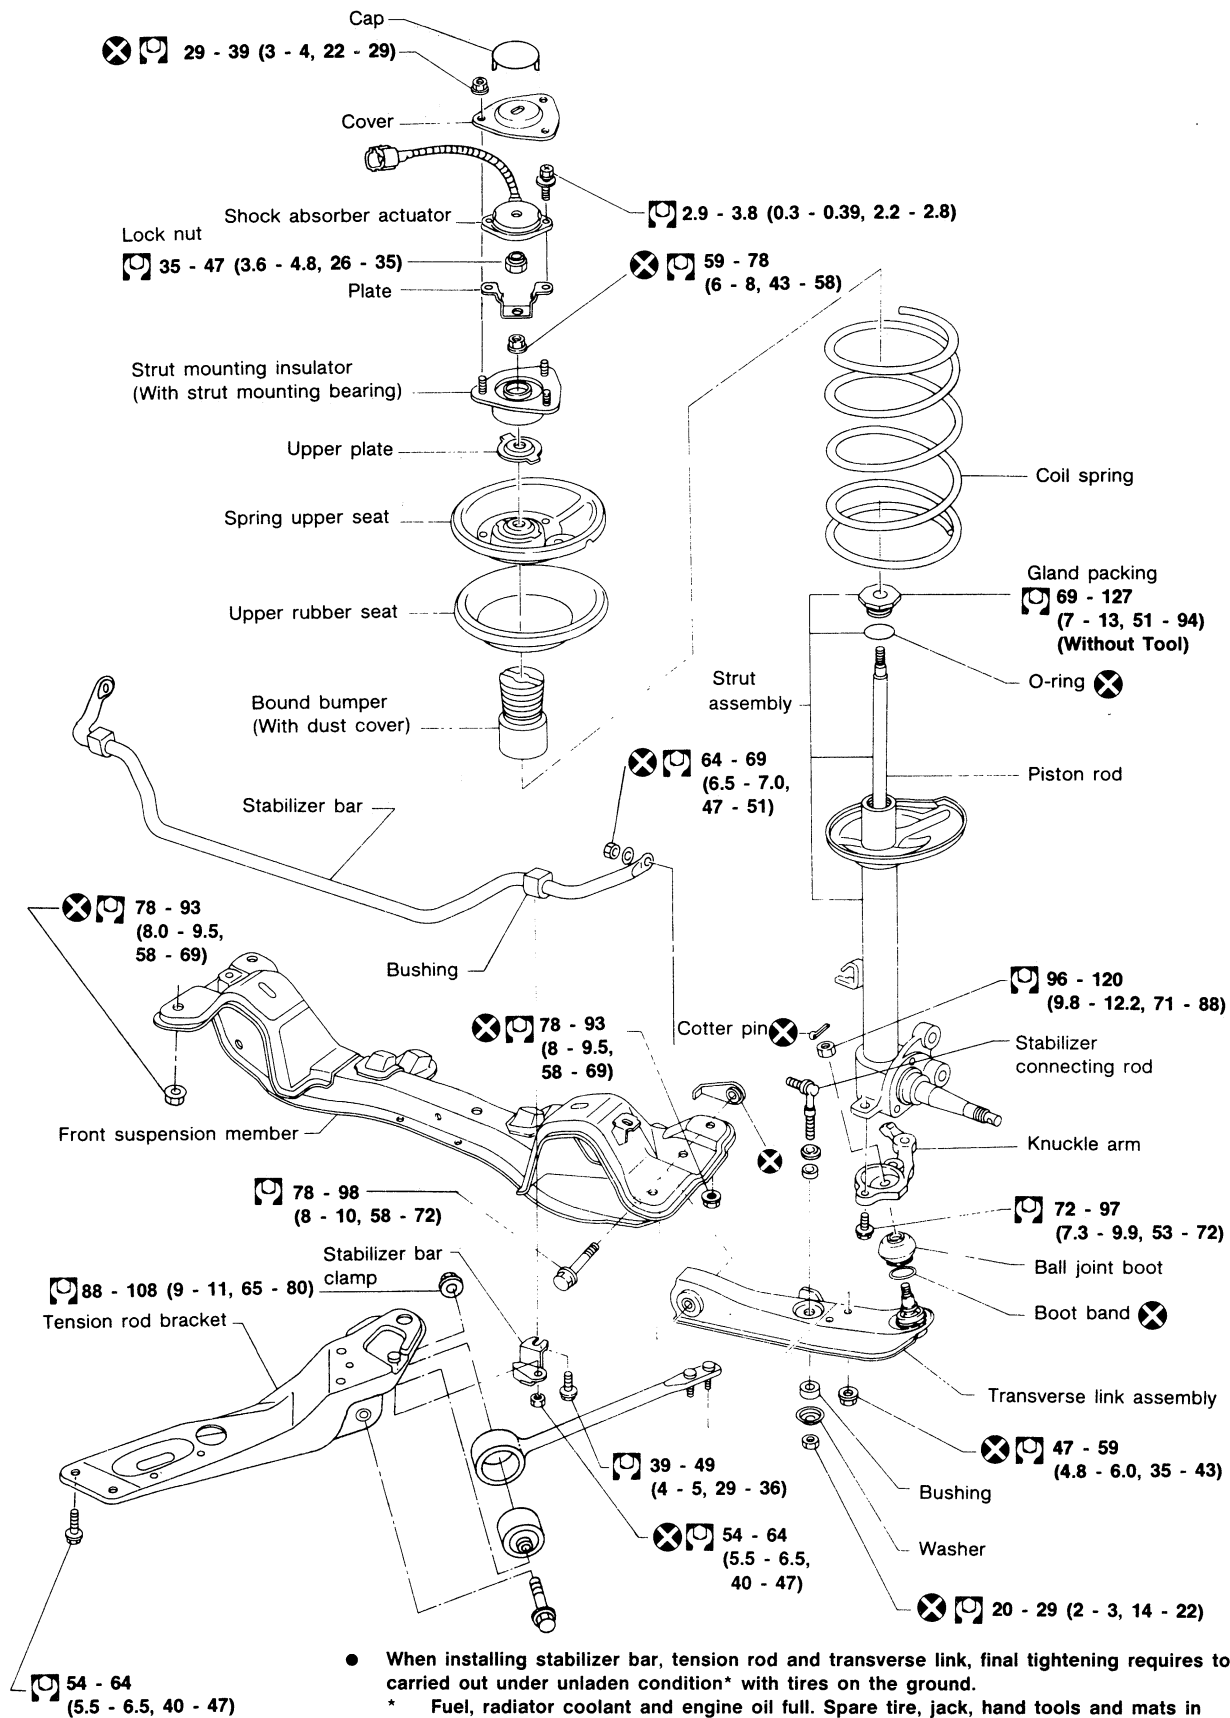

● When installing stabilizer bar, tension rod and transverse link, final tightening requires to be carried out under unladen condition\* with tires on the ground.


\* Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designed position.

: N·m (kg·m, ft·lb)

SFA813A




## FRONT SUSPENSION — Coil Spring and Strut Assembly

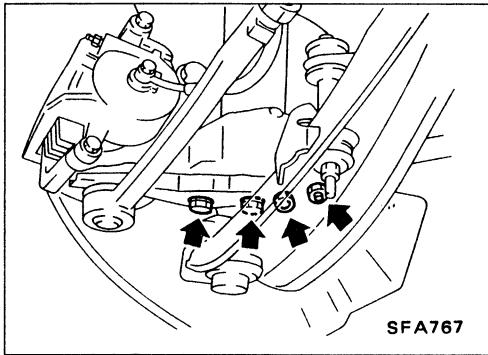


### Removal and Installation


- Remove tension rod nuts and knuckle arm fixing bolts.  
**Make sure brake hose is secure and not twisted.**

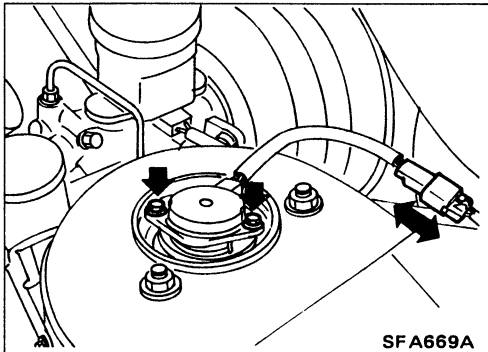

- Disconnect sub-harness connector and then remove shock absorber actuator fixing bolt.
- Remove strut assembly fixing nut (to hoodledge).  
**Do not remove piston rod lock nut on vehicle.**

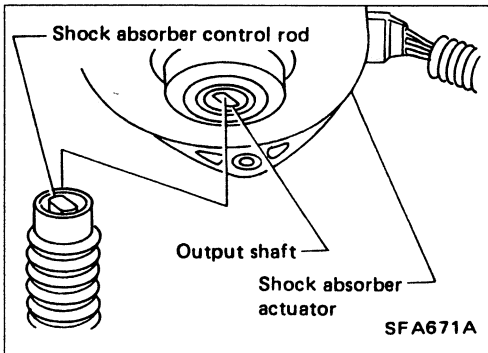

**Before installing actuator, ensure angle of shock absorber control rod is aligned with that of actuator output shaft. Otherwise, actuator may be damaged.**



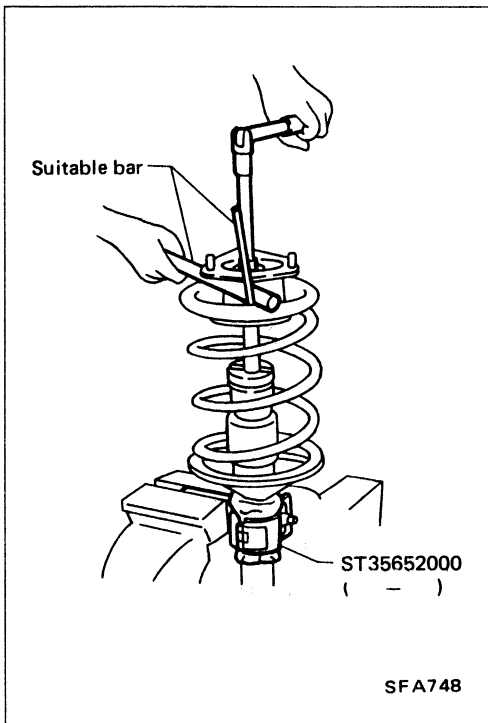


### Disassembly

1. Set strut assembly on vice with attachment, then loosen piston rod lock nut.  
**Do not remove piston rod lock nut.**

## FRONT SUSPENSION — Coil Spring and Strut Assembly

### Disassembly (Cont'd)

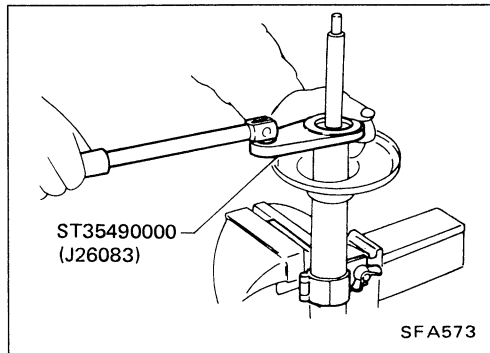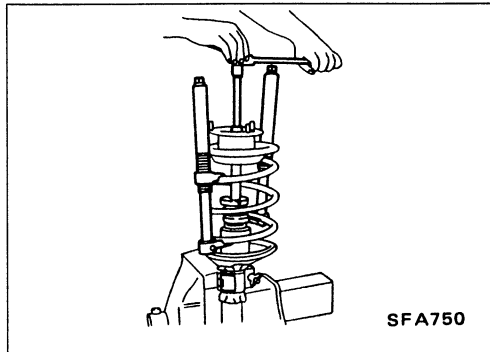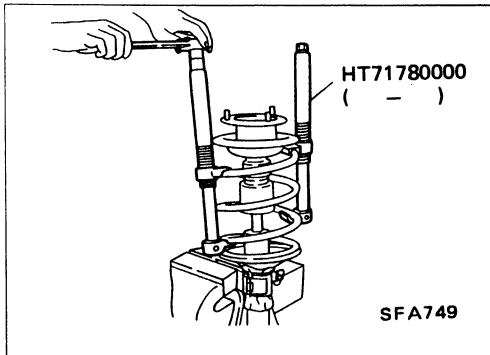

2. Compress spring with Tool so as to permit turning of strut mounting insulator by hand.
3. Remove piston rod lock nut. Then remove coil spring.
4. Remove gland packing with Tool.
  - **Avoid dirt and dust getting into gland packing portion.**
5. Retract piston rod by pushing it down until it bottoms. Then, slowly withdraw piston rod from cylinder together with piston guide.

### Inspection

Wash all parts, except for nonmetallic parts, clean with suitable solvent and dry with compressed air. Blow dirt and dust off of nonmetallic parts using compressed air.

### STRUT ASSEMBLY

- Oil oozing out around gland packing does not need strut replacement.  
If oil leakage is evident on spring seat, check piston rod gland packing and O-ring.  
If oil leakage occurs on welded portion of outer strut casing, replace strut assembly.
- If shock absorber itself is malfunctioning, replace as shock absorber kit.

### GLAND PACKING

Check gland packing for oil leakage. Replace gland packing if necessary.

## FRONT SUSPENSION — Coil Spring and Strut Assembly

### Inspection (Cont'd)

#### STRUT MOUNTING INSULATOR


Check cemented rubber-to-metal portion for melting or cracks. Check rubber parts for deterioration. Replace if necessary.

#### THRUST SEAT

Check for cracks, deformation or other damage. Replace if necessary.


#### COIL SPRING

Check for cracks, deformation or other damage. Replace if necessary.

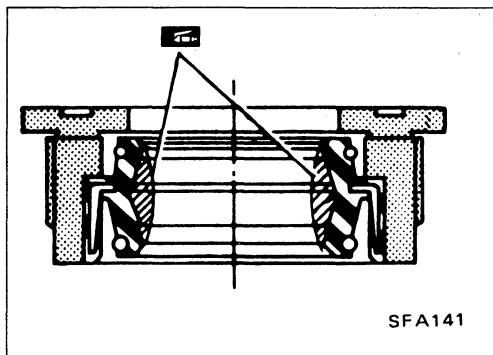

### Assembly

- Lubricate sealing lip of gland packing.

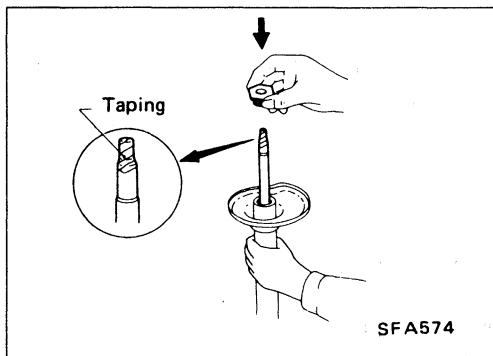


- Install gland packing.
- Cover piston rod with tape so as not to damage oil sealing lip.**


# FRONT SUSPENSION — Coil Spring and Strut Assembly

## Assembly (Cont'd)


- Tighten gland packing to the specified torque (refer to chart at left) with Tool.

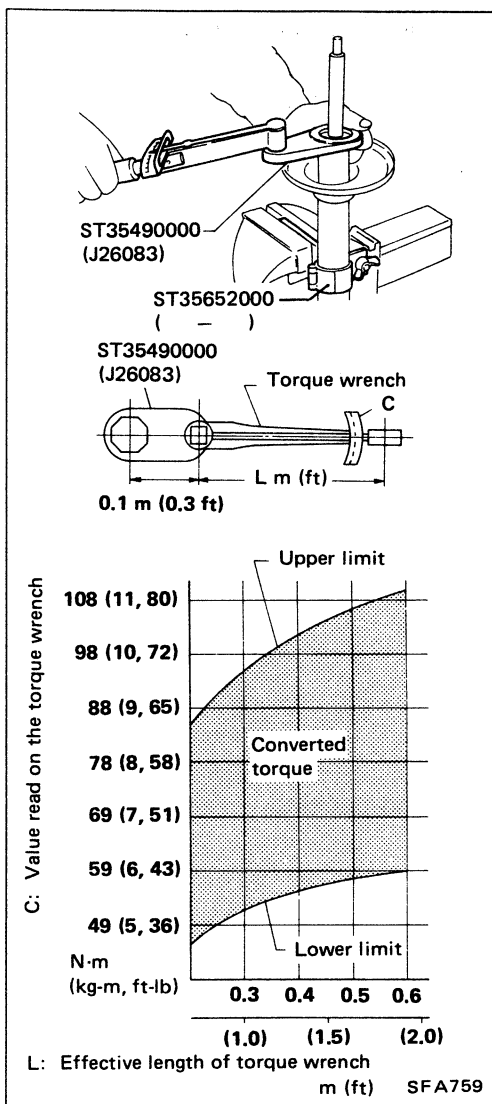

- When installing coil spring, be careful not to reverse top and bottom direction. (top end is flat.)

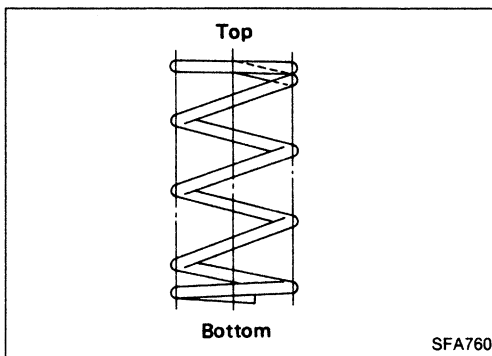


- Install upper spring seat with its cutout facing the outer side of vehicle.

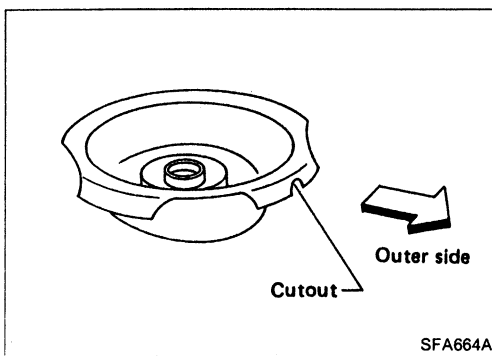


## FRONT SUSPENSION — Coil Spring and Strut Assembly

### Assembly (Cont'd)

After placing spring in position on lower spring seat, release spring compressor gradually.

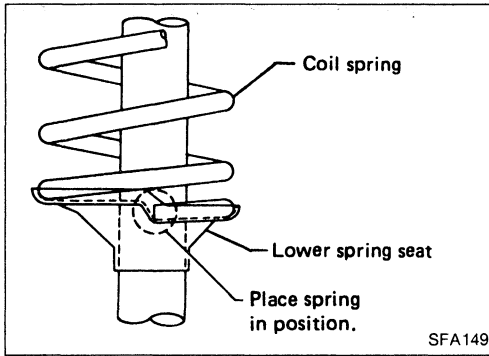


## FRONT SUSPENSION — Tension Rod and Stabilizer Bar

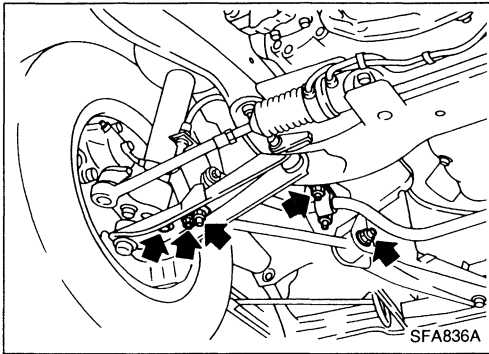


### Removal and Installation


- Remove tension rod and stabilizer bar.

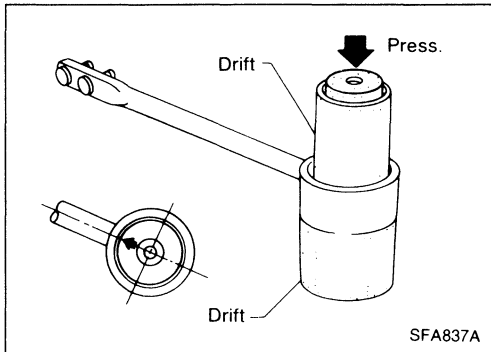


- When removing tension rod bushing, place one drift on lower side of bushing and the other on upper side, as shown at left, and press bushing out.
- Place arrow mark on bushing facing tension rod before installing bushing.

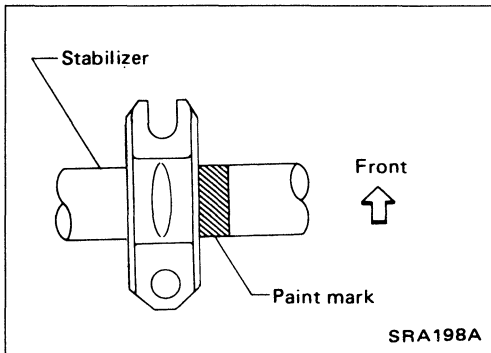

- When installing stabilizer, make sure that paint mark and clamp face in their correct directions.

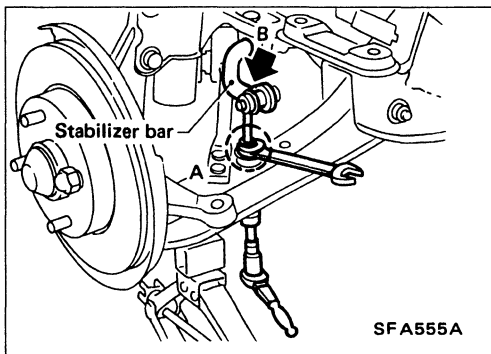


- When removing and installing stabilizer bar, fix portion A.

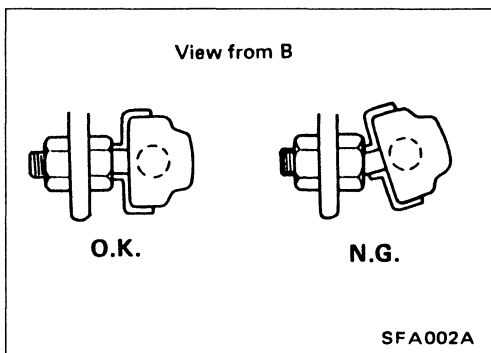


- Install stabilizer bar with ball joint socket properly placed.

## FRONT SUSPENSION — Transverse Link Assembly

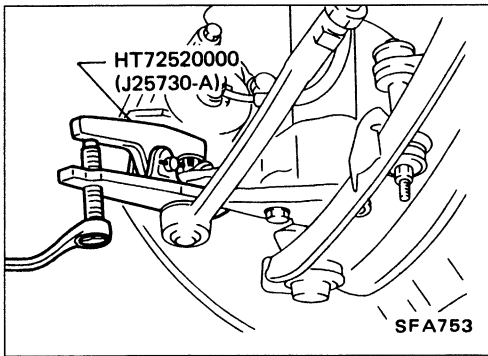


### Removal and Installation


- Separate knuckle arm from tie-rod.

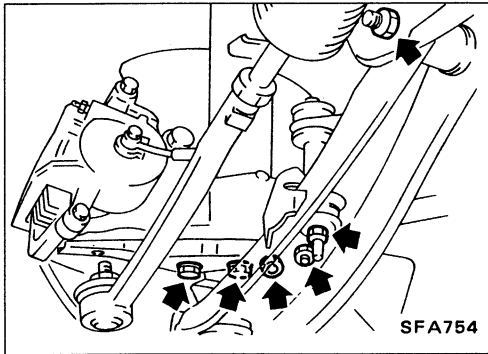

- Separate knuckle arm from strut. Remove stabilizer, tension rod and transverse link assembly.

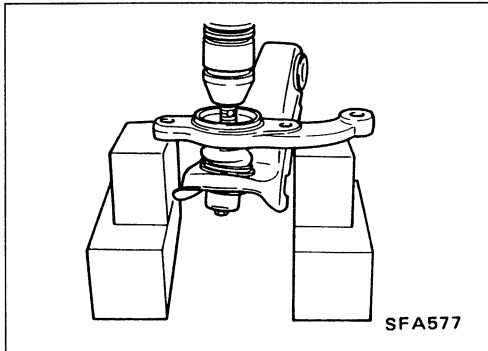

- Separate ball joint from knuckle arm with press.
- Install transverse link assembly to front suspension member, first temporarily tighten nuts.

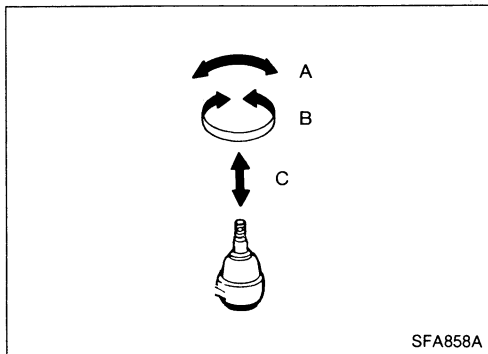

### Inspection

- Check transverse link for damage, cracks, deformation; replace transverse link assembly if necessary.
- Check rubber bushing for damage, cracks and deformation; replace transverse link assembly if necessary.
- Check ball joint for play. If ball stud is worn, play in axial direction is excessive or joint is hard to swing, replace lower ball joint.

Before checking, turn ball joint at least 10 revolutions so that ball joint is properly broken in.

#### Swinging force "A":

(measuring point: cotter pin hole of ball stud)

24.5 - 80.4 N (2.5 - 8.2 kg, 5.5 - 18.1 lb)

#### Turning torque "B":

1.5 - 4.9 N·m (15 - 50 kg-cm, 13 - 43 in-lb)

#### Vertical end play "C":

0.1 - 1.3 mm (0.004 - 0.051 in)

- Check dust cover for damage. Replace it and cover clamp if necessary.


## Contents

<b>How to Perform Trouble Diagnoses for Quick and Accurate Repair</b> .....	FA-23
<b>Symptom Chart</b> .....	FA-24
<b>Preliminary Check</b> .....	FA-25
<b>Component Parts and Harness Connector Location</b> .....	FA-26
<b>Circuit Diagram for Quick Pinpoint Check</b> .....	FA-27
<b>Wiring Diagram</b> .....	FA-28
<b>Self-diagnosis</b>	
<b>SELF-DIAGNOSIS PROCEDURES</b> .....	FA-29
<b>CANCELING THE SELF-DIAGNOSIS FUNCTION</b> .....	FA-30
<b>PRECAUTIONS DURING SELF-DIAGNOSIS</b> .....	FA-30
<b>Final Confirmation on Shock Absorber Actuator</b> .....	FA-31
<b>Diagnostic Procedure 1</b>	
(SYMPTOM: No indicator lamp comes on when ignition switch is turned "ON".) .....	FA-34
<b>Diagnostic Procedure 2</b>	
(SYMPTOM: System is not set in self-diagnosis mode.) .....	FA-35
<b>Diagnostic Procedure 3</b>	
(SYMPTOM: Vehicle speed sensor system malfunctions.) .....	FA-37
<b>Diagnostic Procedure 4</b>	
(SYMPTOM: Steering angle sensor system malfunctions.) .....	FA-38
<b>Diagnostic Procedure 5</b>	
(SYMPTOM: Brake signal system malfunctions.) .....	FA-40
<b>Diagnostic Procedure 6</b>	
(SYMPTOM: Front shock absorber actuator malfunctions.) .....	FA-41
<b>Diagnostic Procedure 7</b>	
(SYMPTOM: Rear shock absorber actuator malfunctions.) .....	FA-42
<b>Diagnostic Procedure 8</b>	
(SYMPTOM: Sonar road surface sensor system malfunctions.) .....	FA-43
<b>Control Unit Inspection Table</b> .....	FA-45



### How to Perform Trouble Diagnoses for Quick and Accurate Repair


#### WORK FLOW

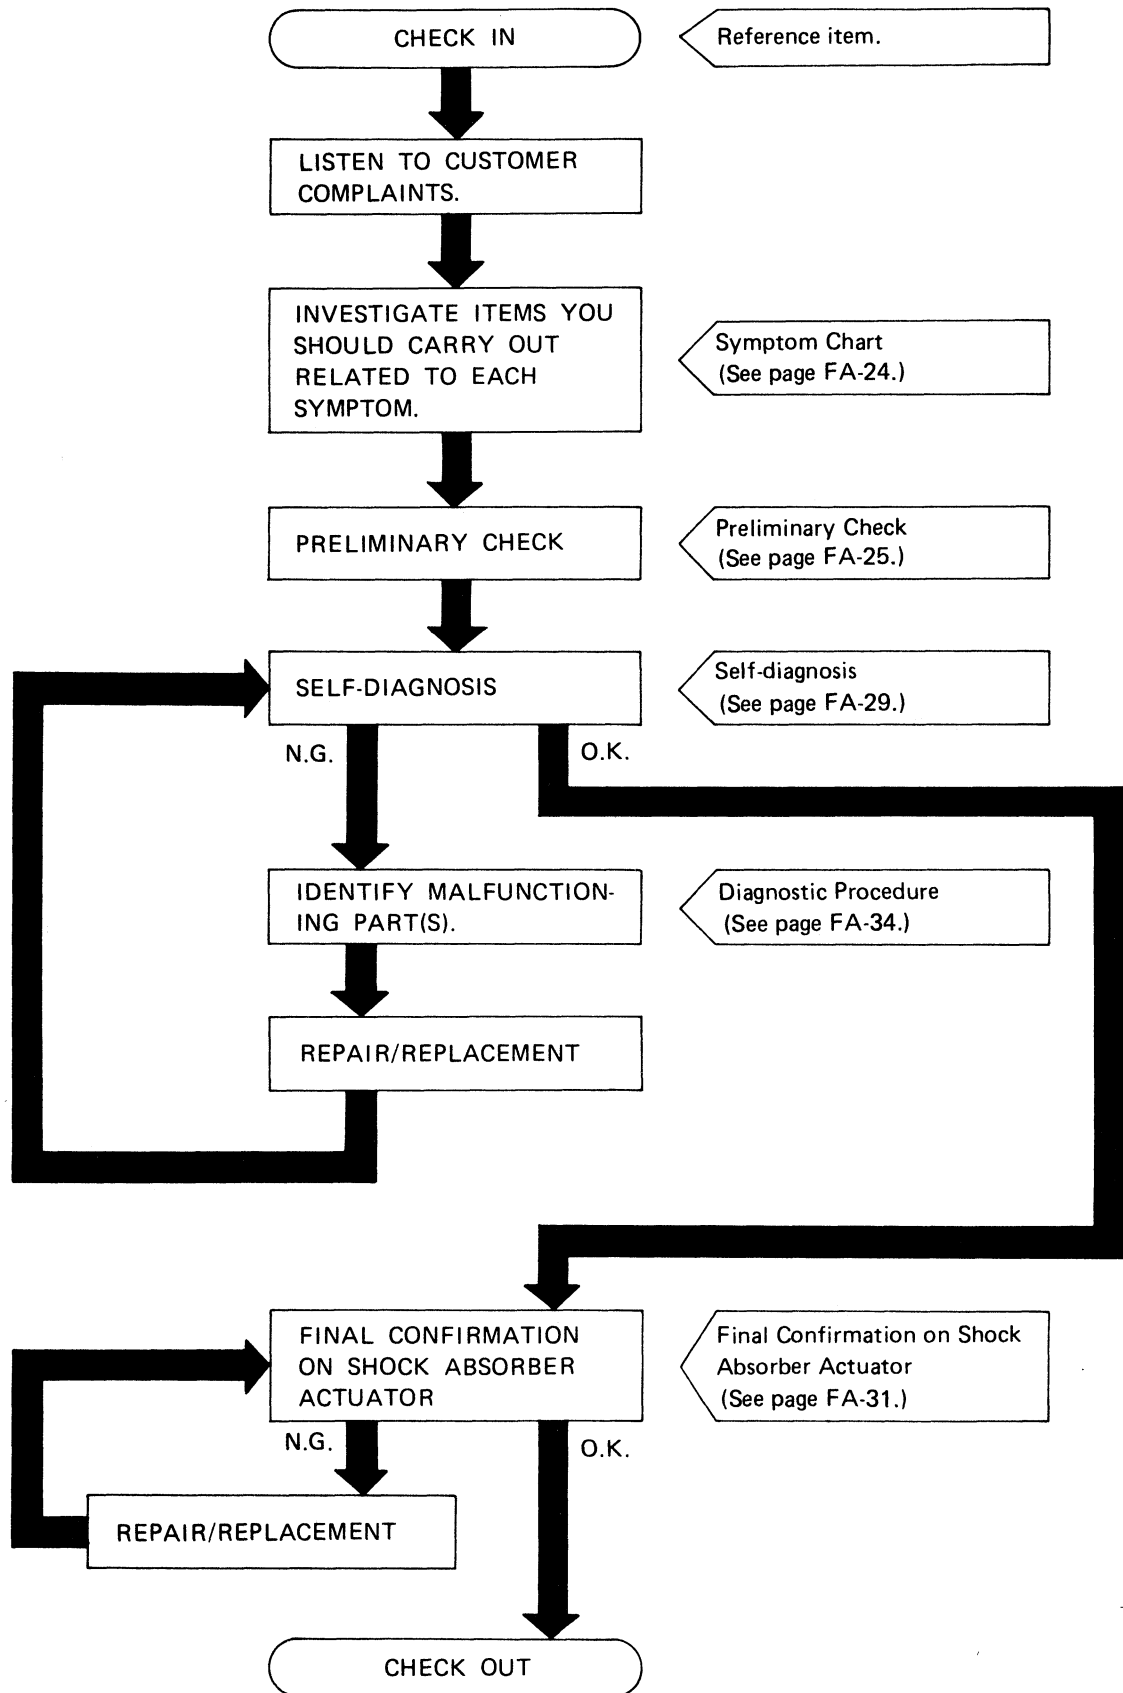

# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

## Symptom Chart

REFERENCE PAGE	FA-25	FA-34	FA-35	FA-37	FA-38	FA-40	FA-41	FA-42	FA-43	FA-31
SYMPTOM	Preliminary check	Select switch	Control unit	Vehicle speed sensor	Steering angle sensor	Stop lamp switch	Front shock absorber actuator	Rear shock absorber actuator	Sonar road surface sensor	Shock absorber
No indicator lamps come on.		<input type="radio"/>	<input type="radio"/>							
Self-diagnostic results	Self-diagnosis fails to start.	<input type="radio"/>	<input type="radio"/>							
	Vehicle speed signal is not entered.			<input type="radio"/>	<input type="radio"/>					
	Steering angle signal is not entered.			<input type="radio"/>		<input type="radio"/>				
	Brake signal is not entered.			<input type="radio"/>		<input type="radio"/>				
	Actuator drive circuit is shorted.			<input type="radio"/>			<input type="radio"/>	<input type="radio"/>		
	Sonar road surface sensor signal is not entered.			<input type="radio"/>					<input type="radio"/>	
Riding comfort is too "firm" or too "soft".	<input type="radio"/>		<input type="radio"/>				<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
Damping force of shock absorber (for a particular wheel only) cannot be changed.	<input type="radio"/>						<input type="radio"/>	<input type="radio"/>		<input type="radio"/>

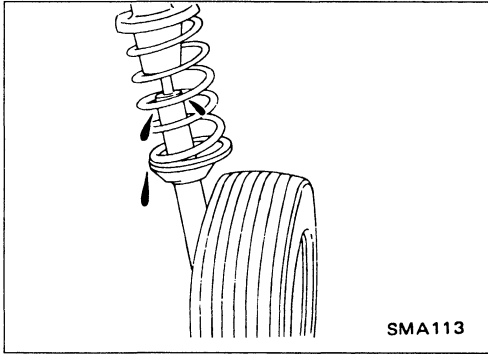


### Preliminary Check


- Check strut (shock absorber) for oil leakage or other damage.

# SONAR SUSPENSION SYSTEM — Trouble Diagnoses


## Component Parts and Harness Connector Location

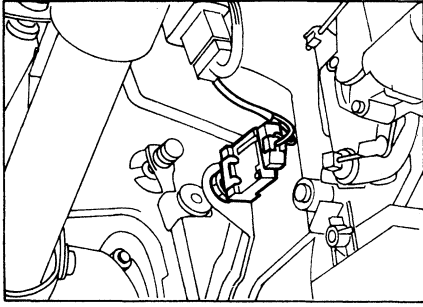


Stop lamp switch

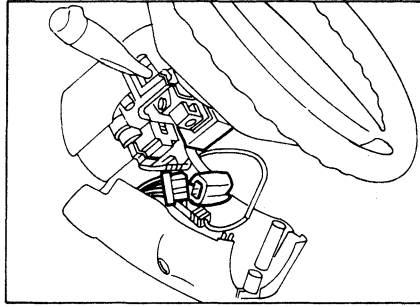


Steering angle sensor

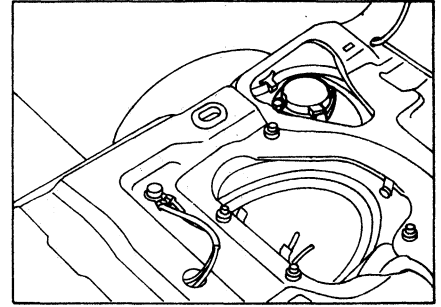


Rear shock absorber actuator

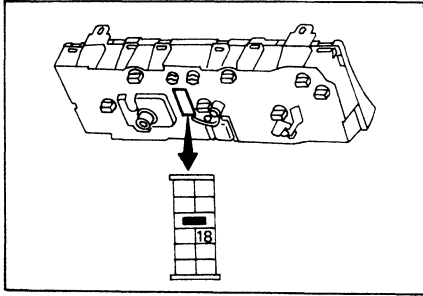


Vehicle speed sensor

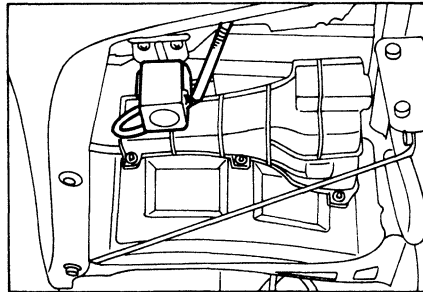


Sonar road surface sensor

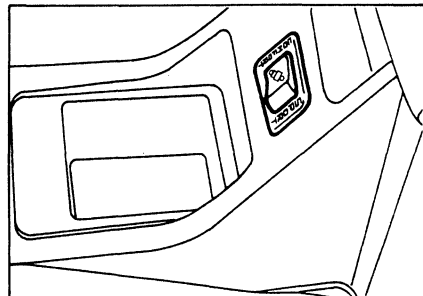


Select switch

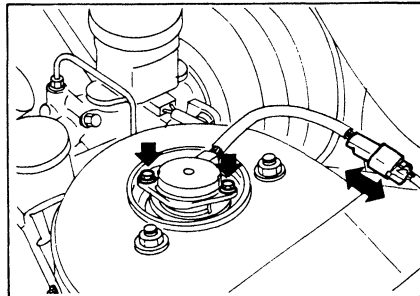

Front shock absorber actuator

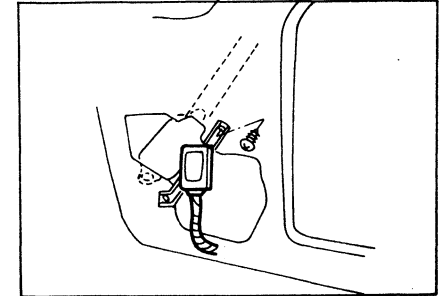


Control unit

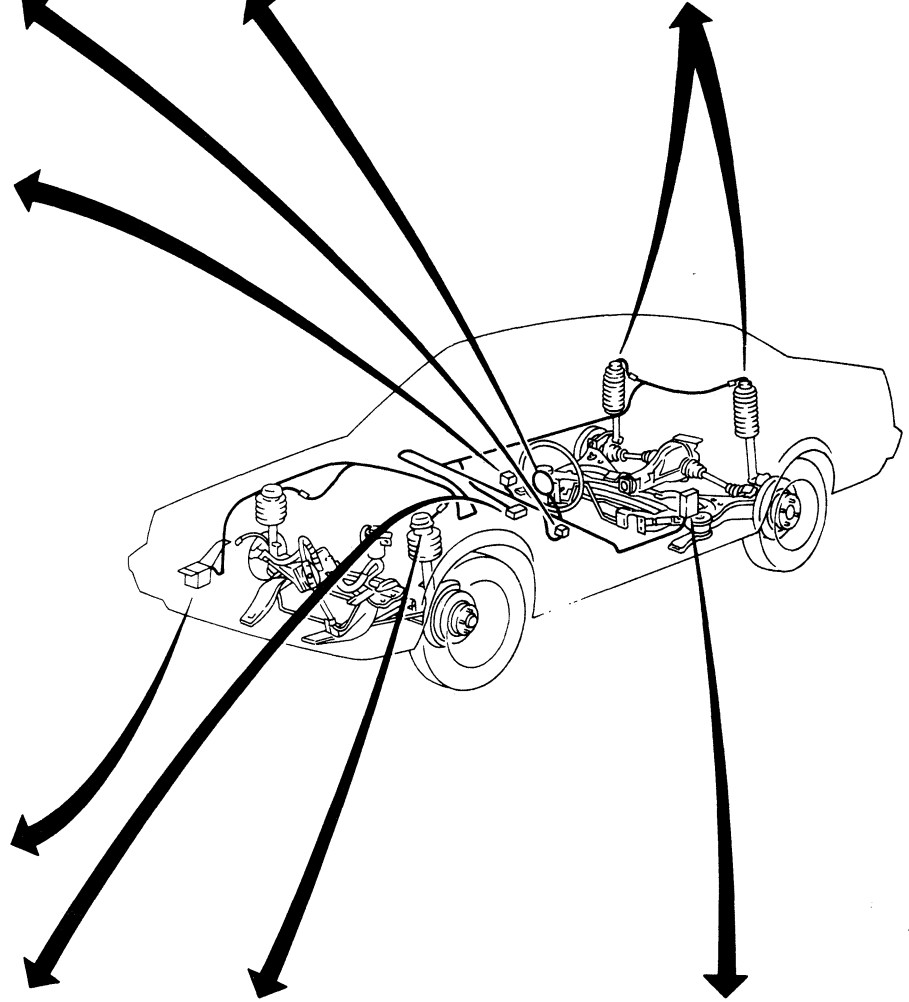

SFA839A


# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

## Circuit Diagram for Quick Pinpoint Check

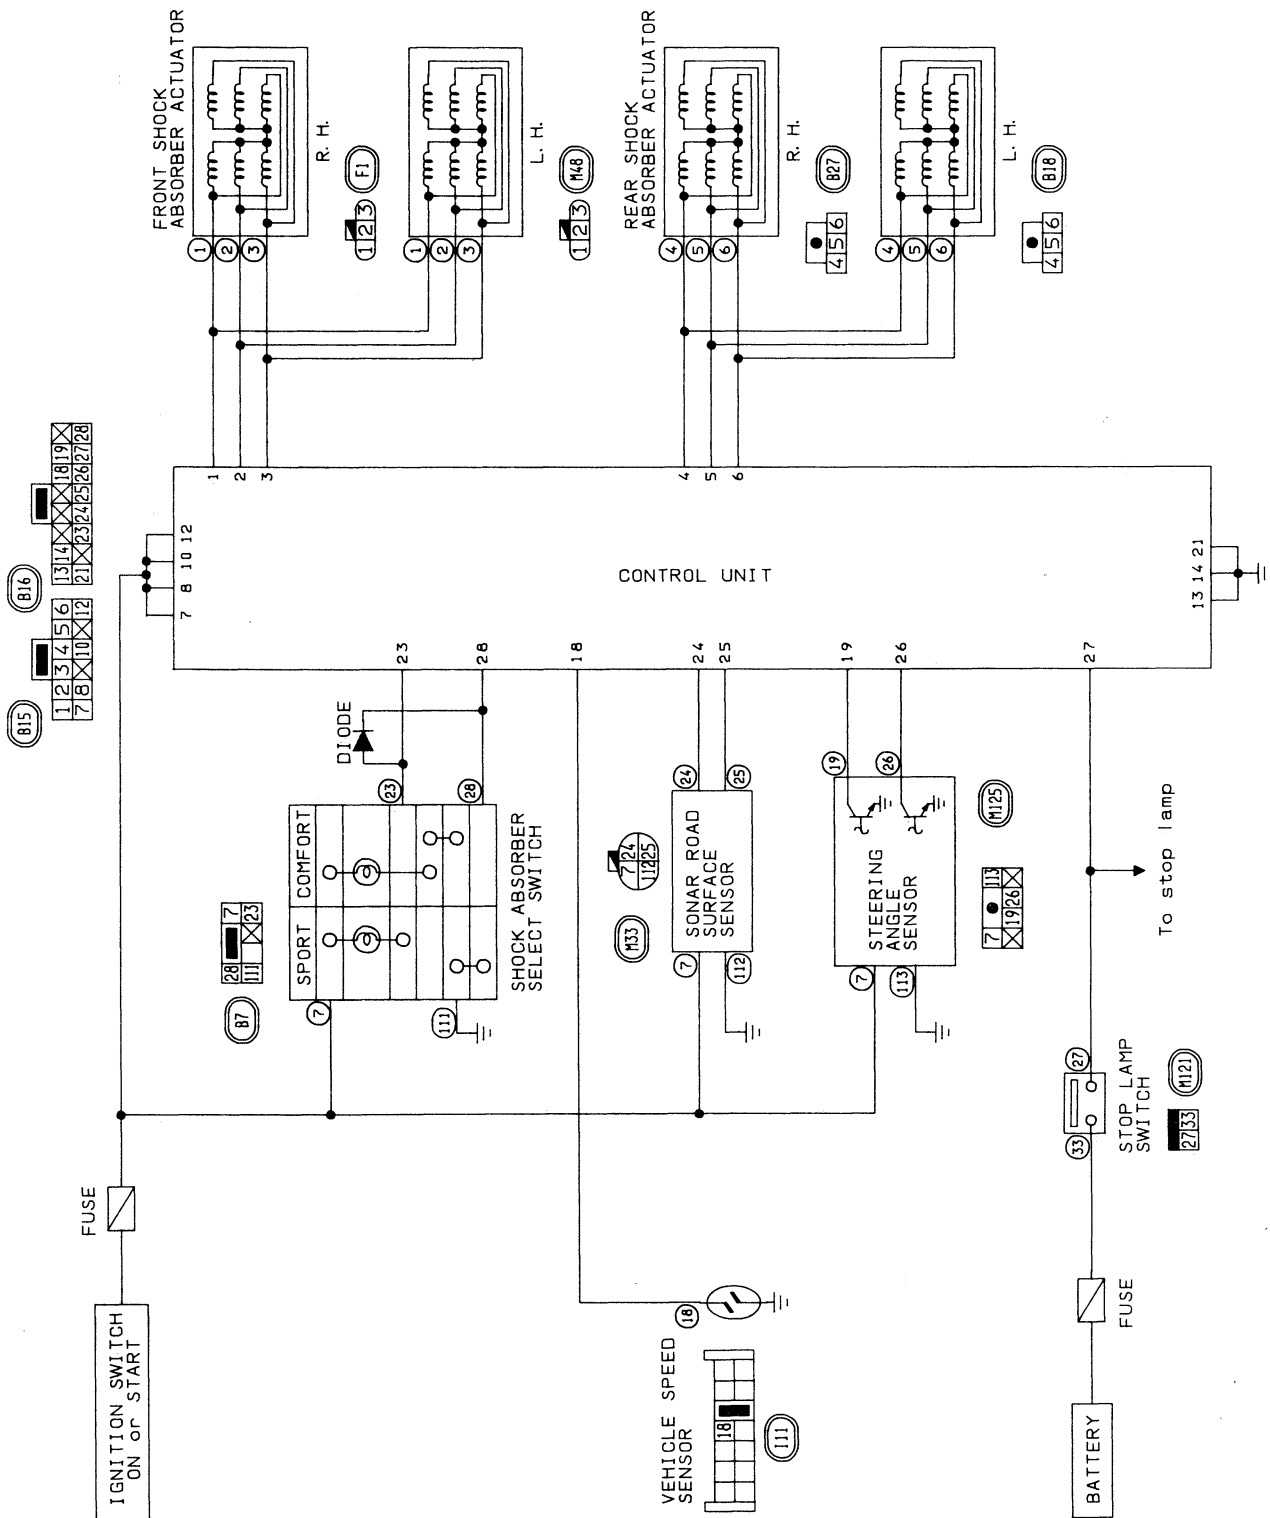


# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

## Wiring Diagram

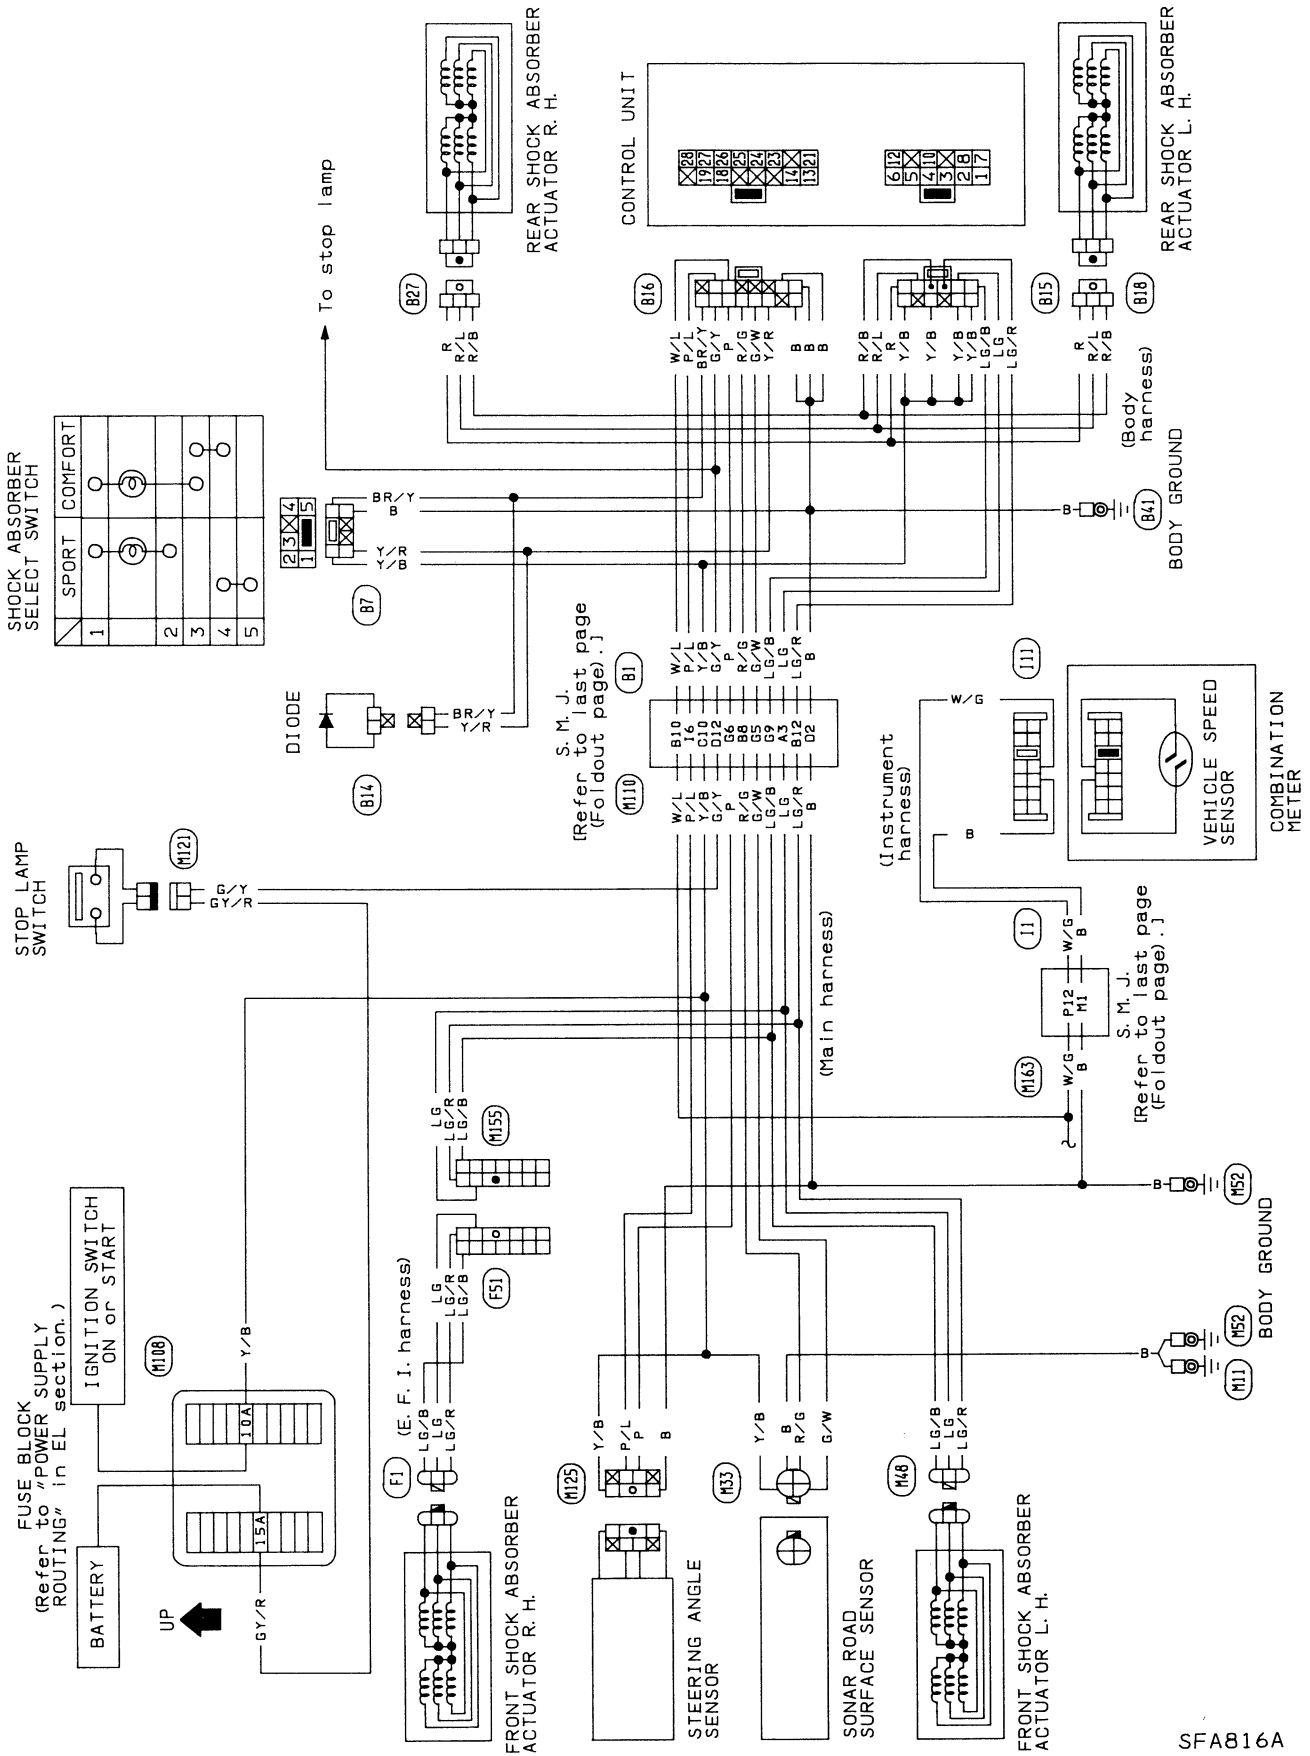


# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

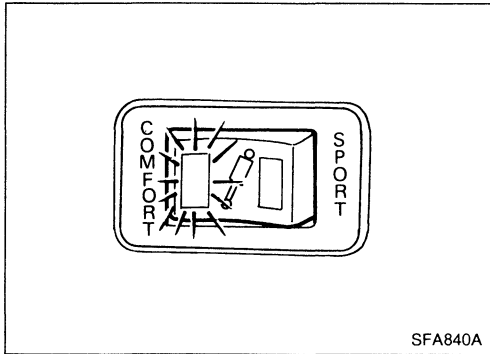

## Self-diagnosis


### SELF-DIAGNOSIS PROCEDURES

1. Input starting conditions for self-diagnosis.
  - (1) Turn ignition switch "OFF".
  - (2) Immediately start engine.
  - (3) Within 10 seconds after engine has started, push select switch alternately to "COMFORT" and "SPORT" five times or more, ending up on "COMFORT".
  - (4) Drive the vehicle forward at least 2 to 3 m (7 to 10 ft), turn steering wheel at 90° or more, stop the vehicle, depress brake pedal and release it.
2. The self-diagnosis mode will then appear in the "COMFORT" position.

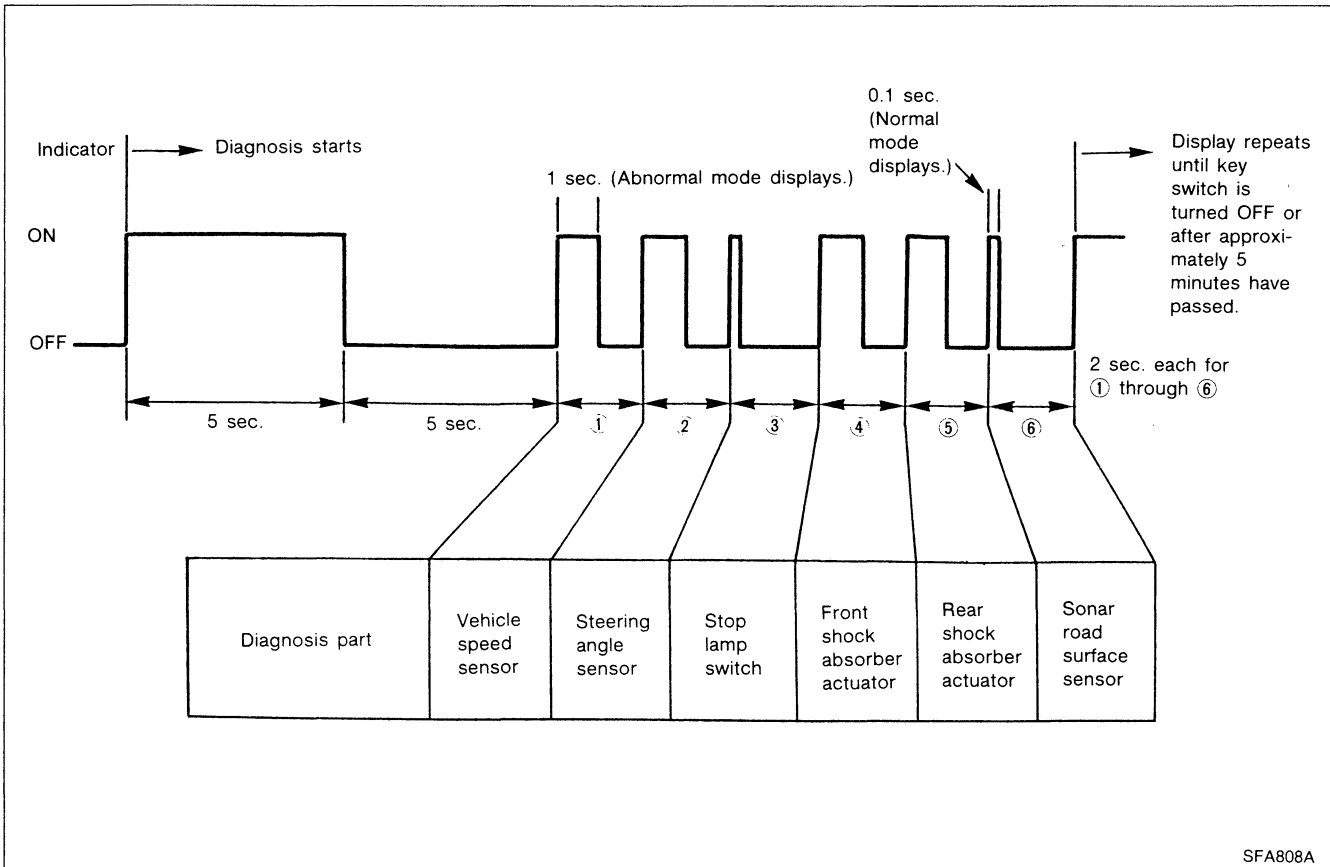

### ● When all systems are normal

When all systems are normal, the indicator displays normal mode (0.1 sec. ON).

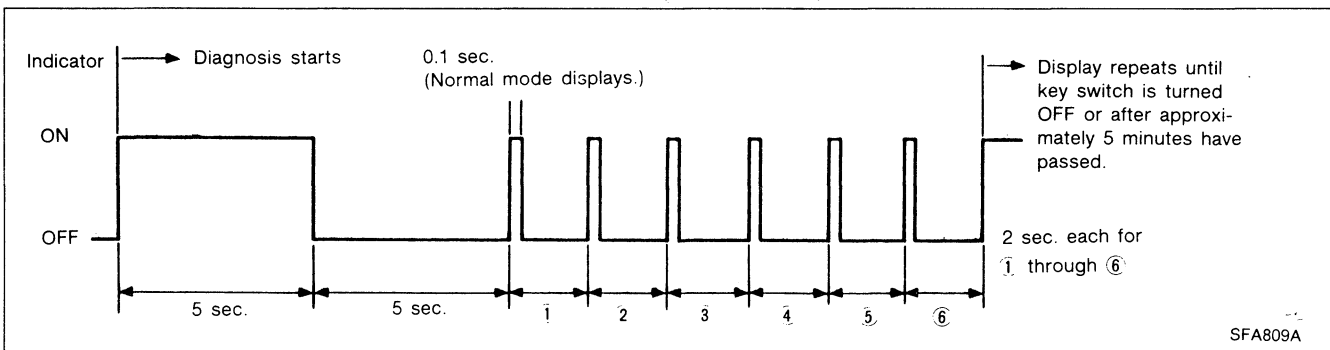


# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

## Self-diagnosis (Cont'd)

- When there is a system malfunction

Example: When ② steering angle sensor and ⑥ sonar road surface sensor experience malfunction.

The indicator displays abnormal mode (1 sec. ON).

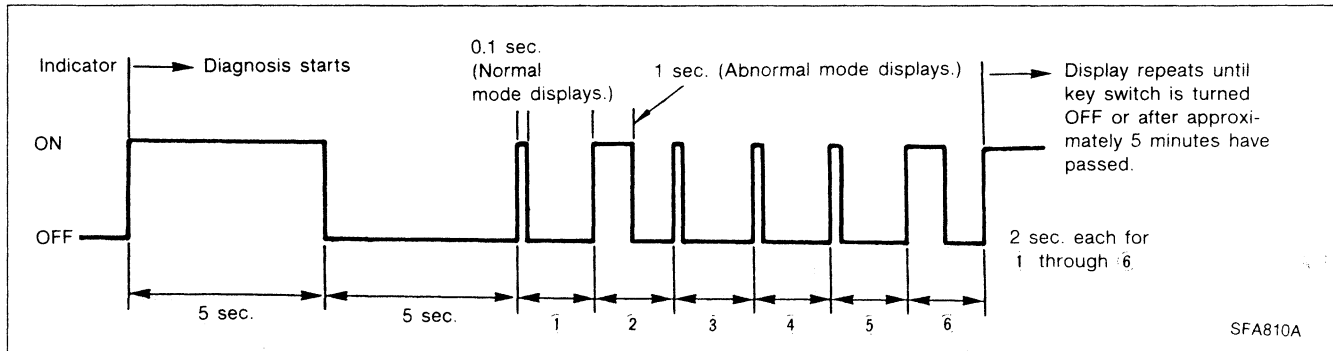

## CANCELING THE SELF-DIAGNOSIS FUNCTION

There are two methods of canceling the self-diagnosis function, as described below:

- The self-diagnosis system is canceled by turning ignition switch "OFF".
- After the self-diagnosing has been operated for approximately 5 minutes, the self-diagnosis system will be automatically canceled.


## PRECAUTIONS DURING SELF-DIAGNOSIS

- When the distance between sonar road surface sensor and road surface is greater than 500 mm (19.69 in) (such as over a workpit) or when it is less than 200 mm (7.87 in), the surface sensor will indicate a malfunction.**
- Place vehicle on a flat surface to provide proper self-diagnosing so that reflective surface of sonar road surface sensor is free from surface irregularities (i.e. holes, bumps, etc.).**
- Self-diagnosis indication on shock absorber actuators shows only abnormalities of the command signal from control unit to actuators. For diagnosing problems on electrical circuit between control unit and actuators as well as malfunctions of actuators themselves, final confirmation should be performed using procedures described in "Final Confirmation on Shock Absorber Actuator". (See page FA-31.)**






## Final Confirmation on Shock Absorber Actuator

Check shock absorbers in self-diagnosis mode after repairing malfunctioning items.

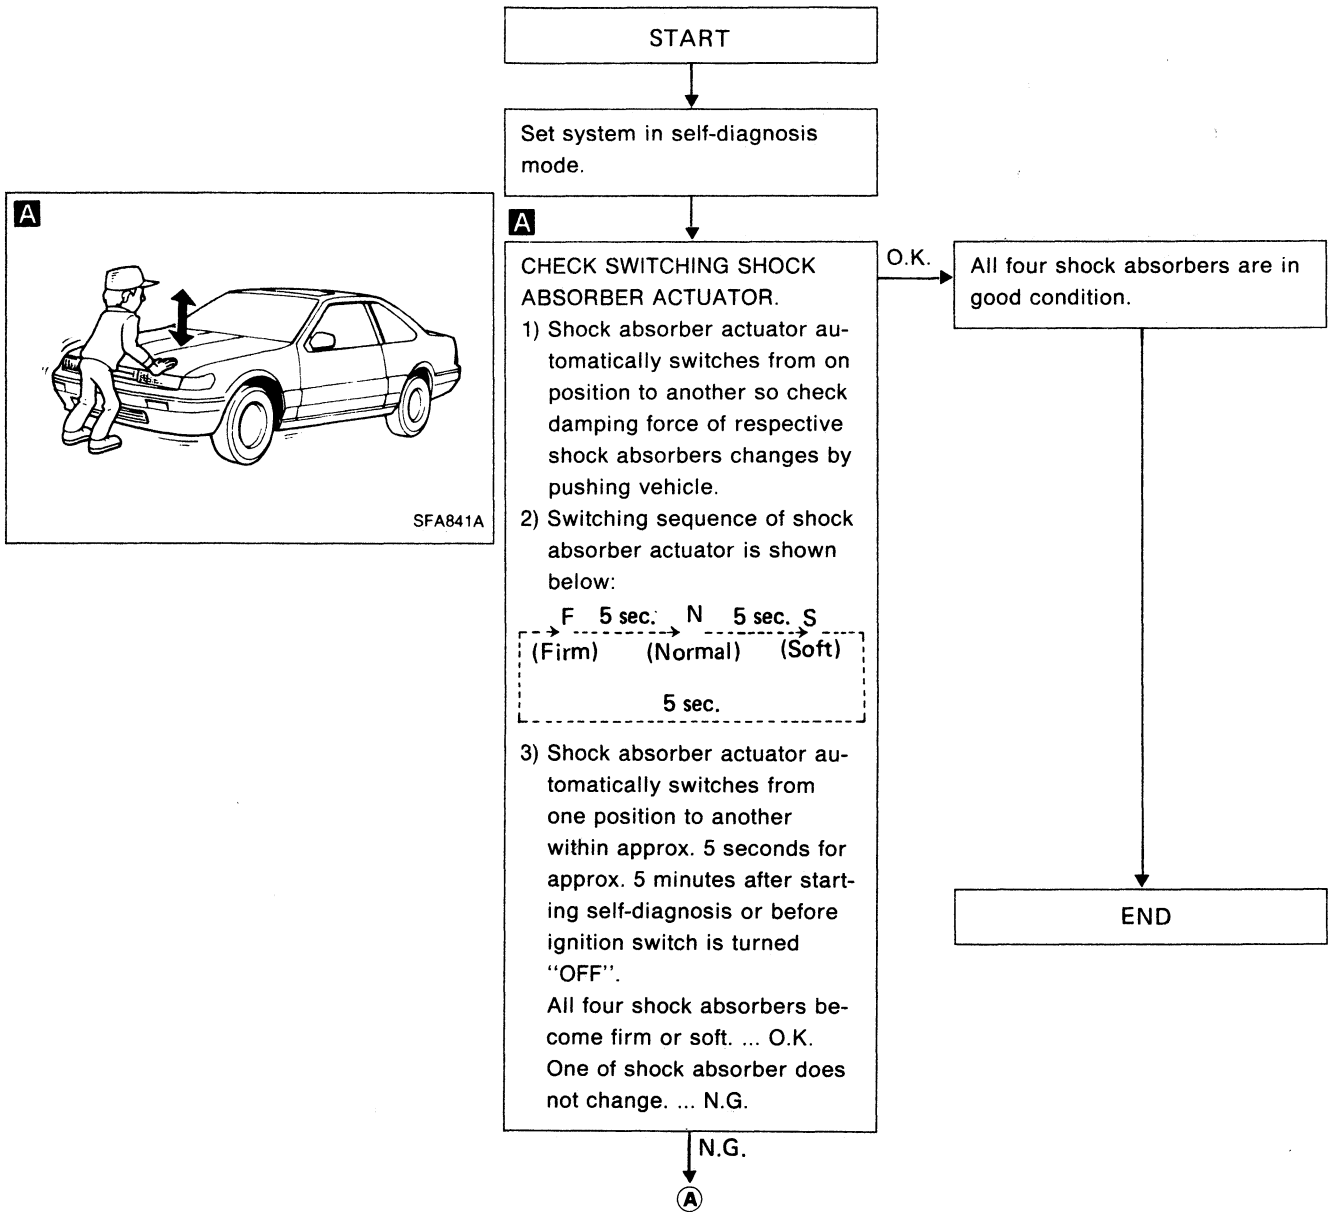


# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

## Final Confirmation on Shock Absorber Actuator (Cont'd)

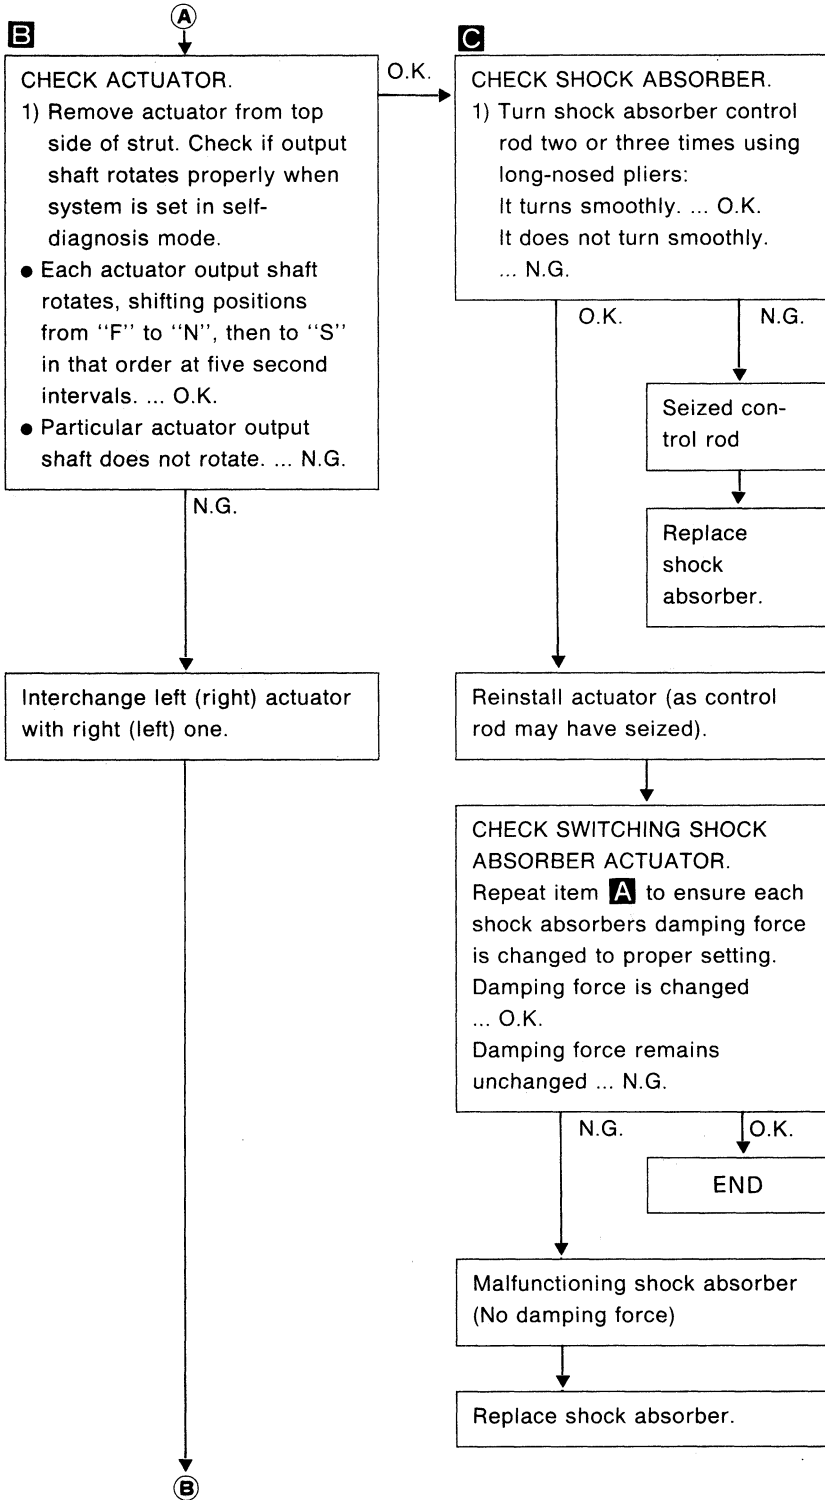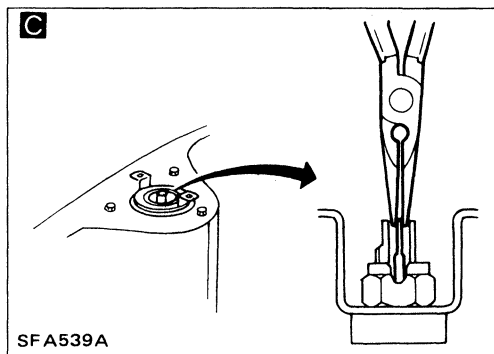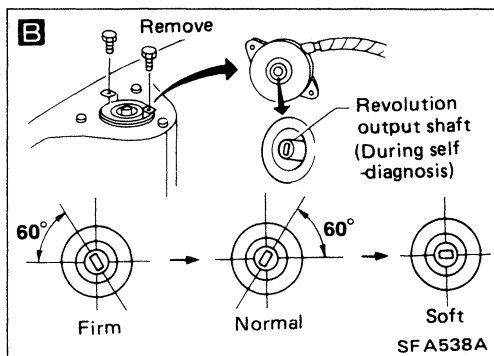


## SONAR SUSPENSION SYSTEM — Trouble Diagnoses

### Final Confirmation on Shock Absorber Actuator (Cont'd)

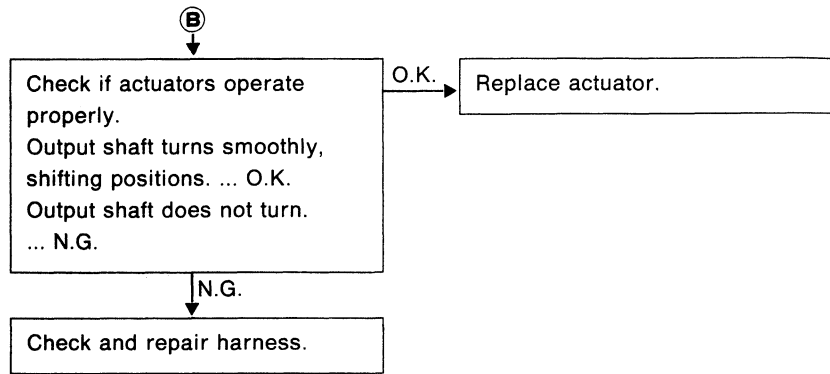

**Before installing actuator, ensure angle of shock absorber control rod is aligned with that of actuator output shaft. Otherwise, actuator may be damaged.**

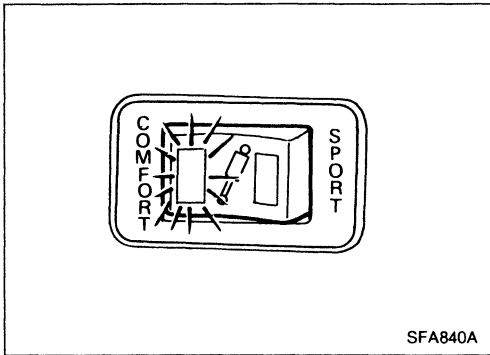



## Diagnostic Procedure 1





### SYMPTOM:

No indicator lamp comes on when ignition switch is turned "ON".

### Normal condition (with ignition switch "ON")

- Select switch indicator lamp:  
Either "COMFORT" or "SPORT" indicator corresponding to select switch position comes on.

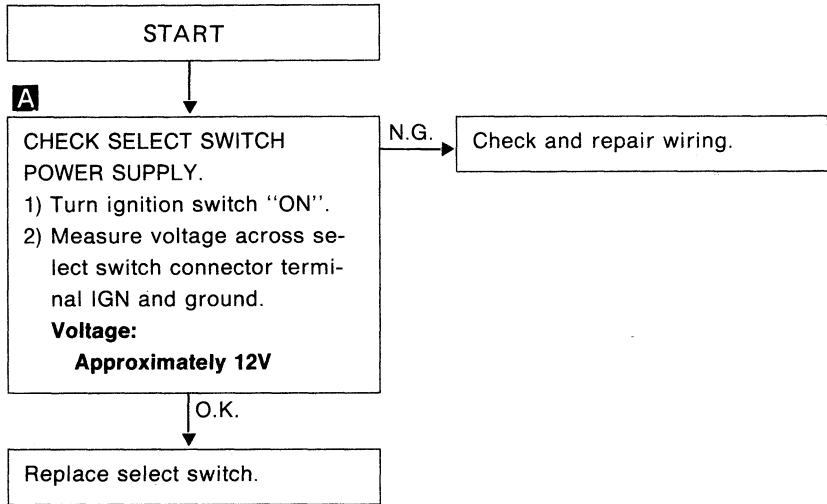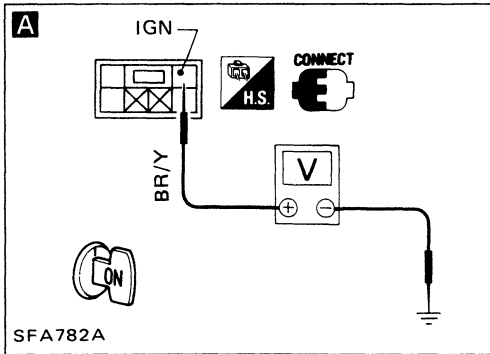


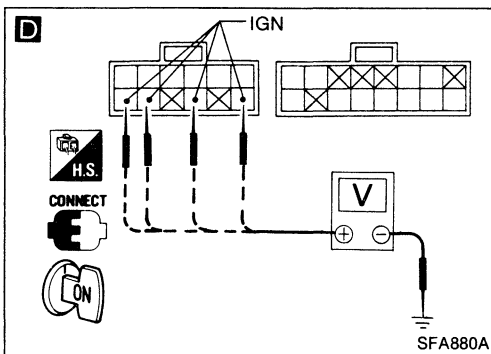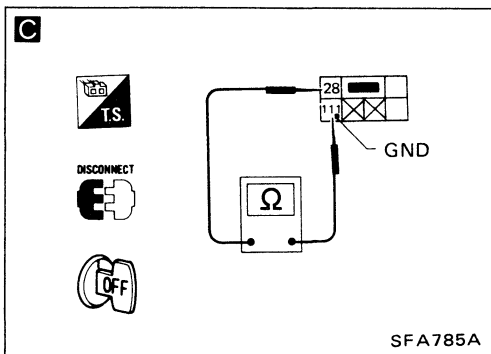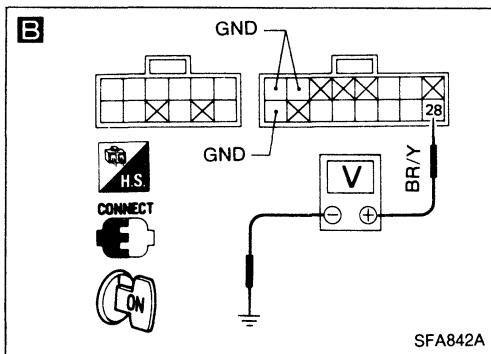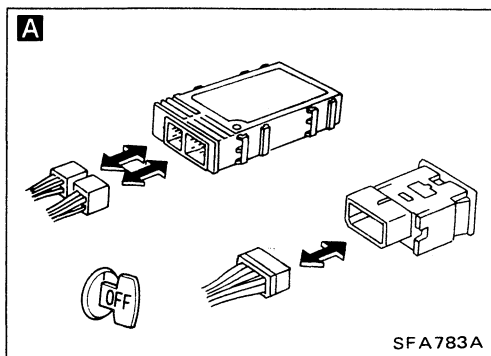

## Diagnostic Procedure 2


### SYMPTOM:




System is not set in self-diagnosis mode.

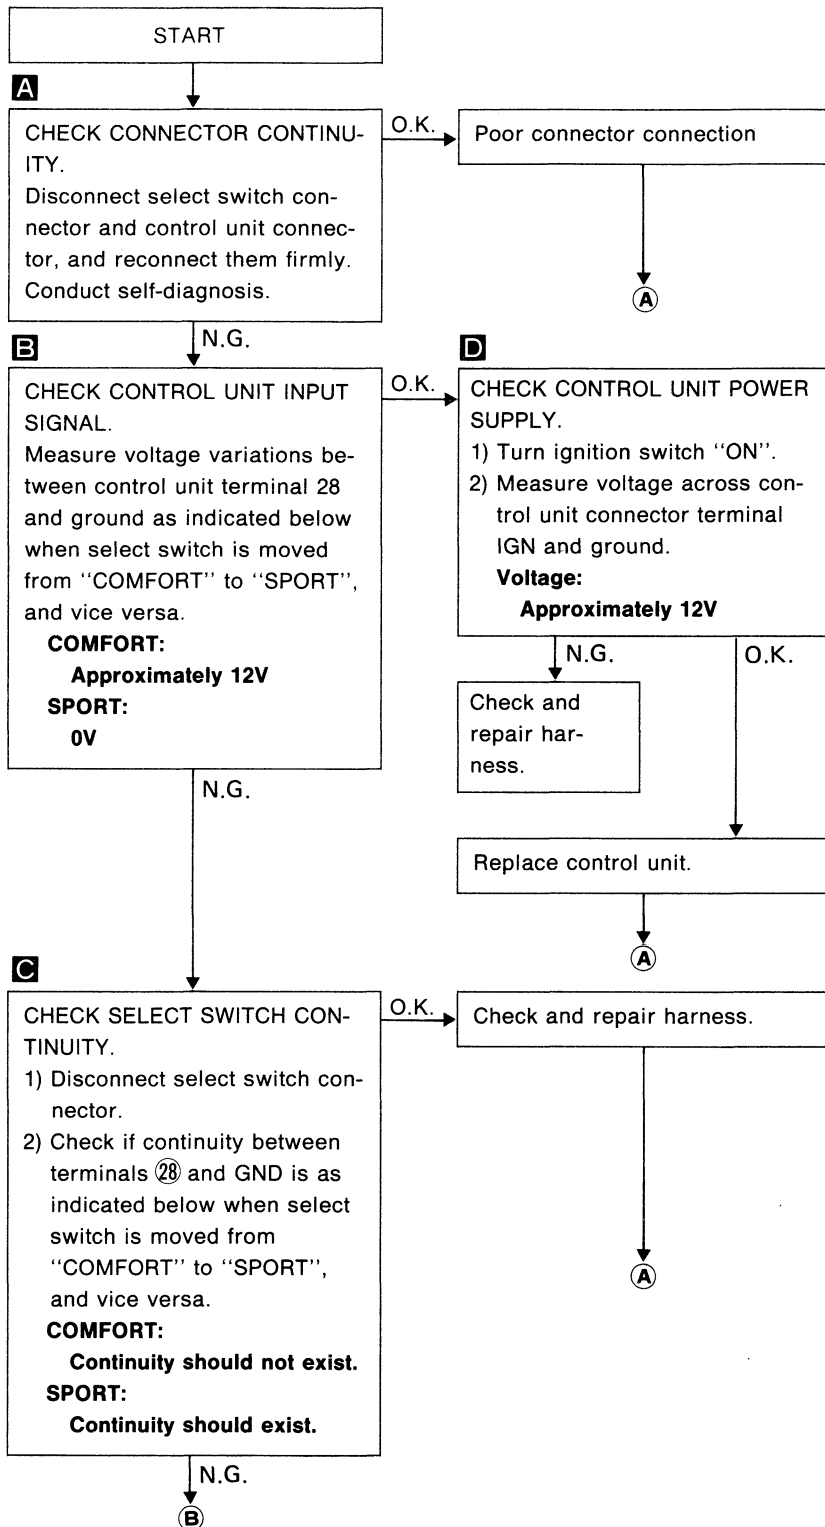

# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

## Diagnostic Procedure 2 (Cont'd)

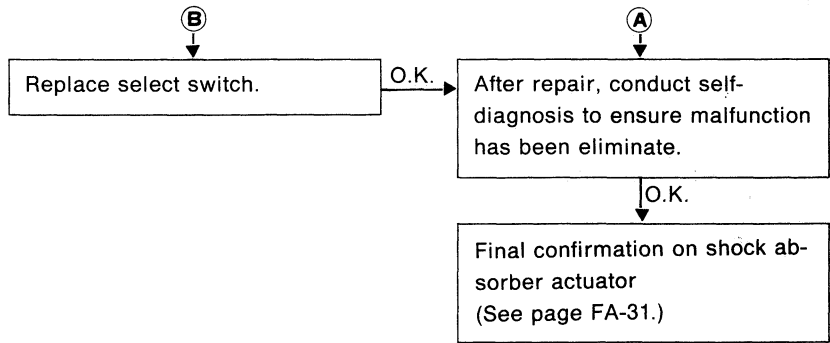


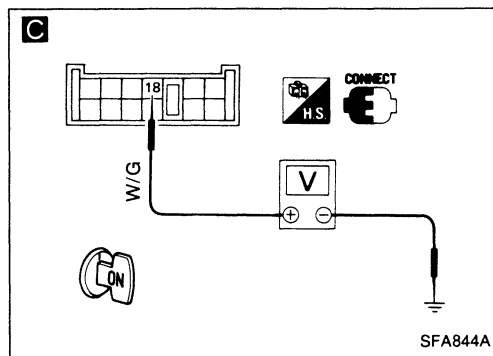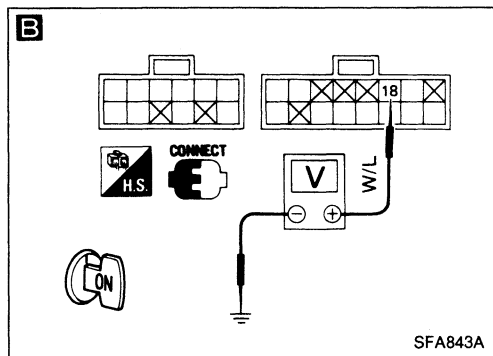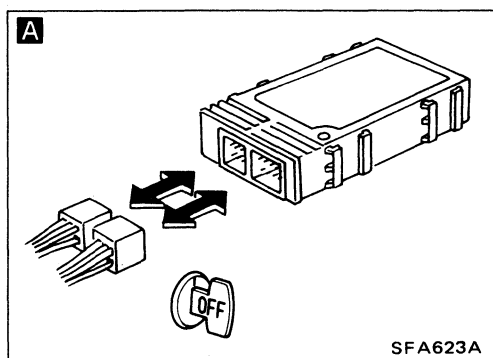

## Diagnostic Procedure 3

### SYMPTOM:






Vehicle speed sensor system malfunctions.

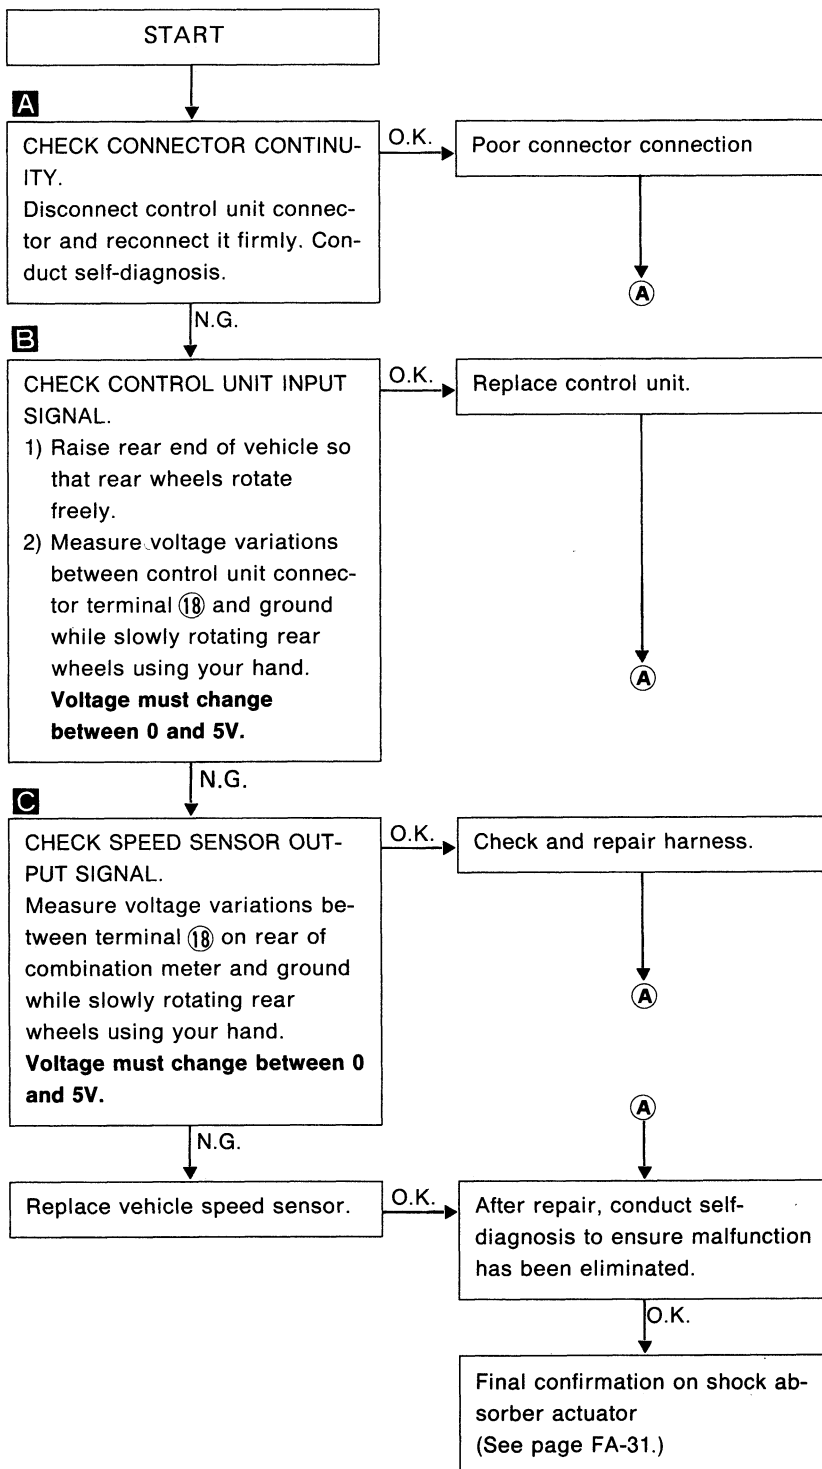

## Diagnostic Procedure 4

### SYMPTOM:




**Steering angle sensor system malfunctions.**

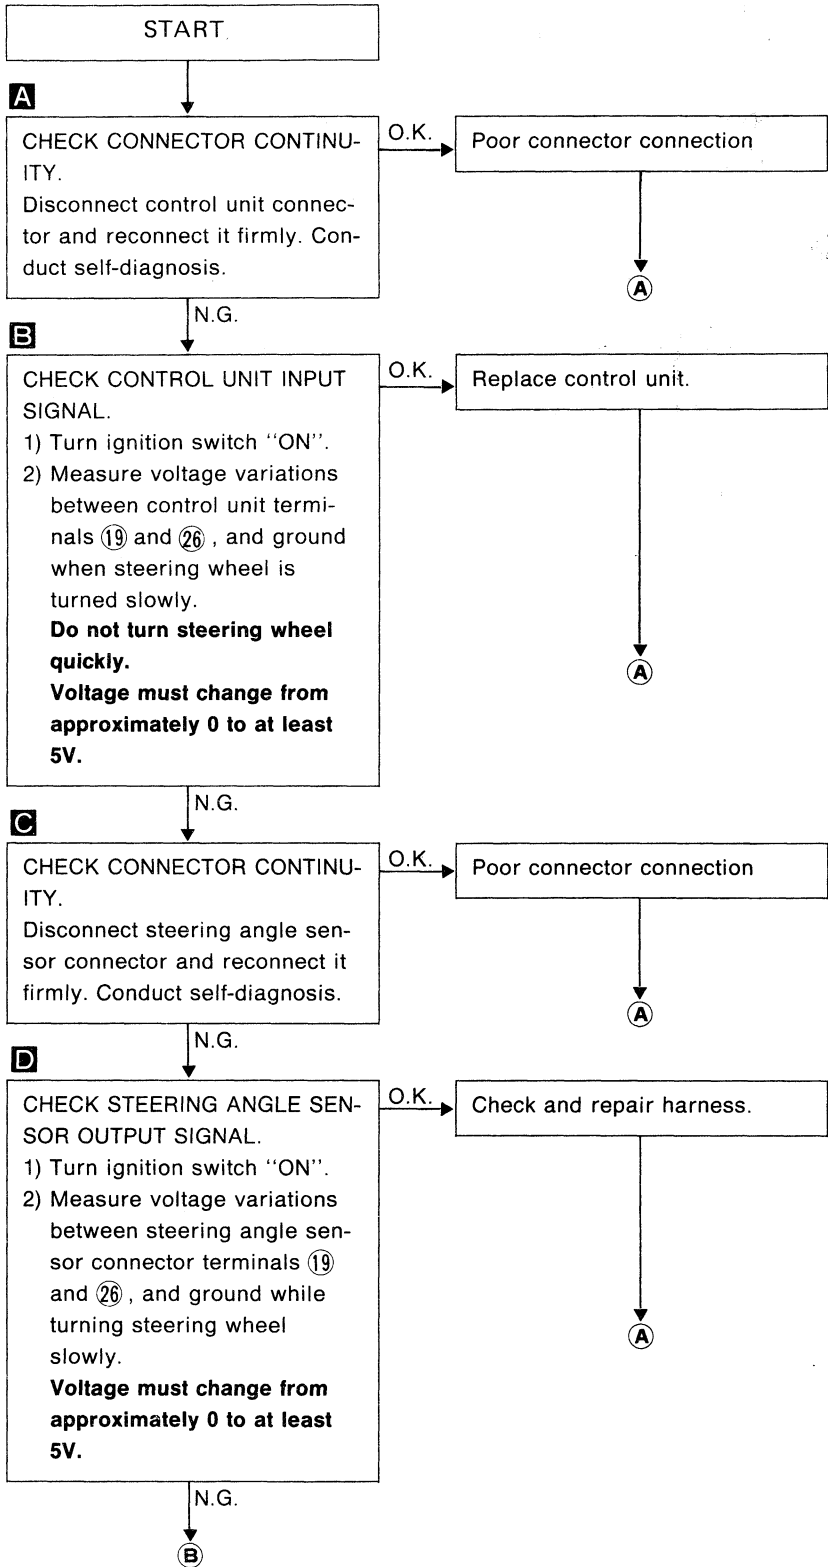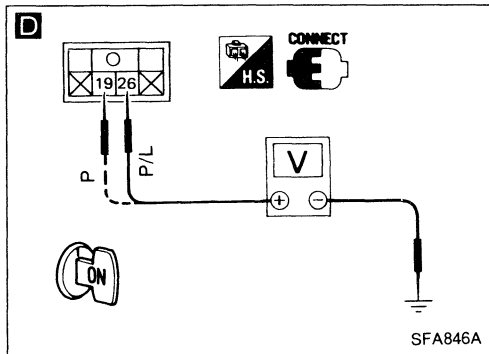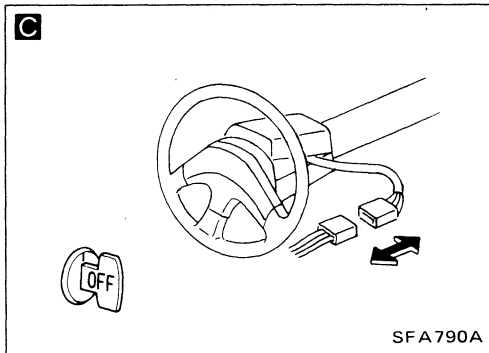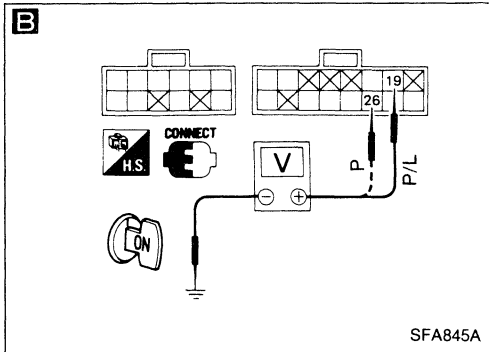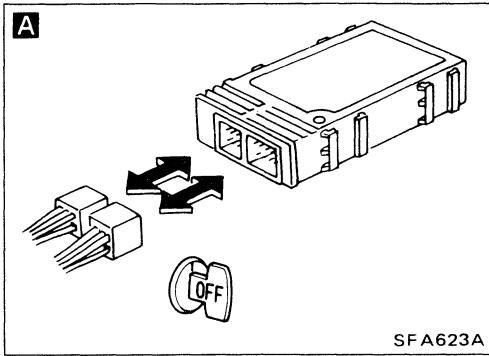







# SONAR SUSPENSION SYSTEM — Trouble Diagnoses


## Diagnostic Procedure 4 (Cont'd)

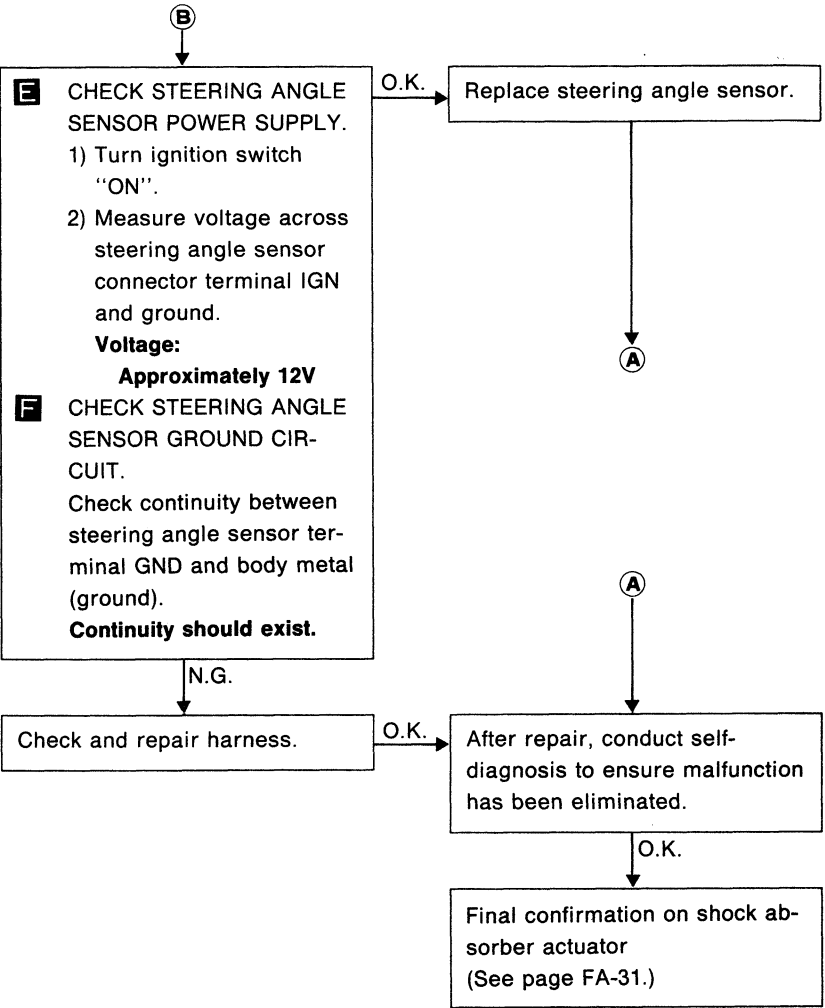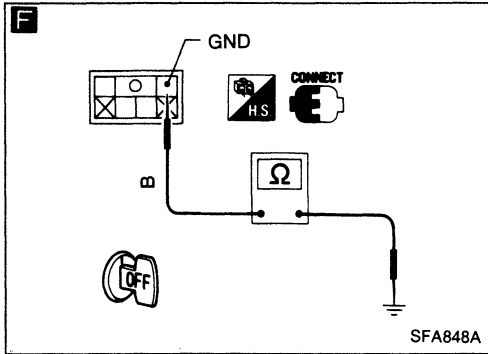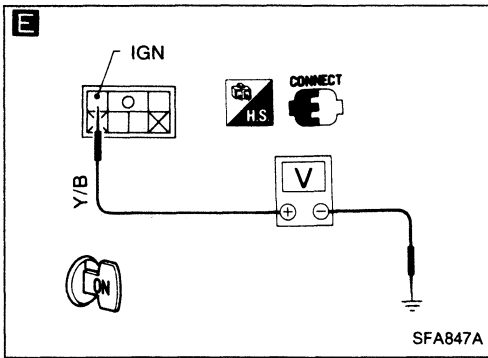

## Diagnostic Procedure 5

**SYMPTOM:**  
Brake signal system malfunctions.

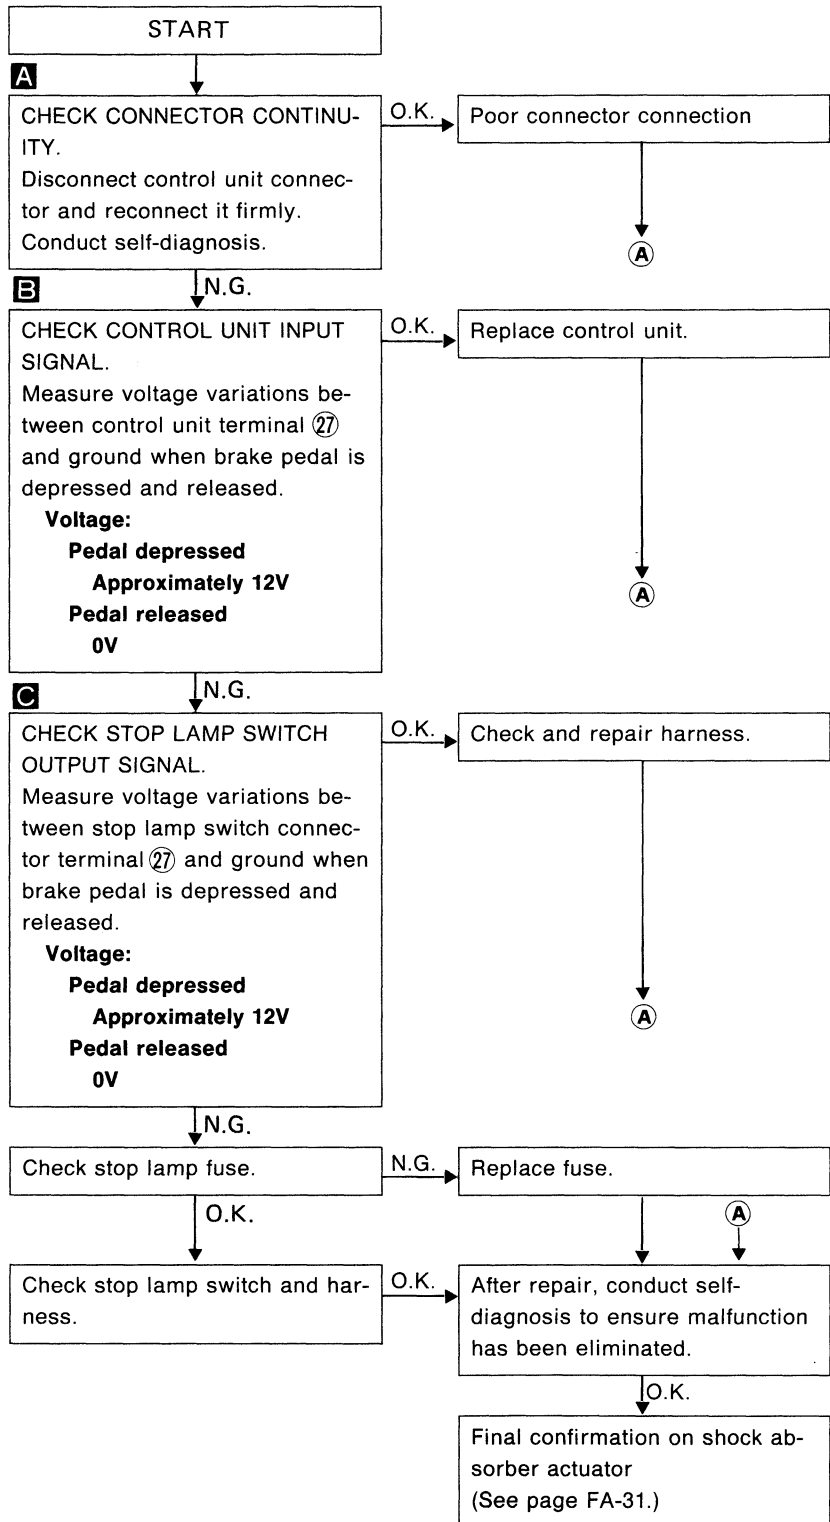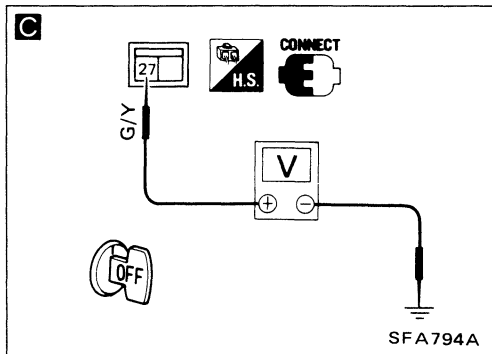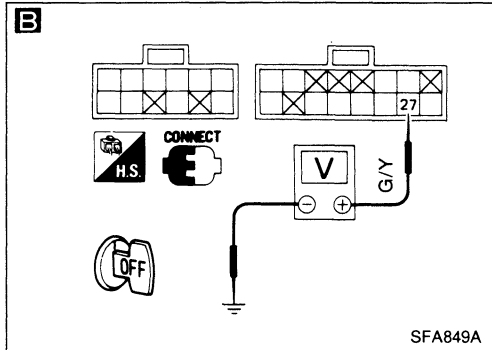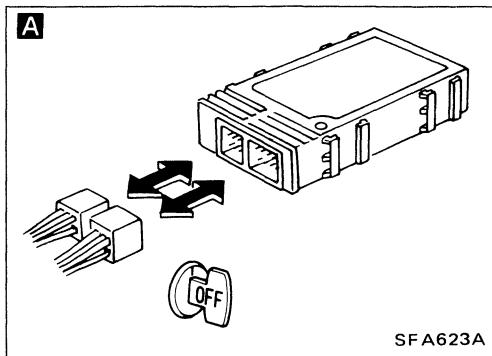


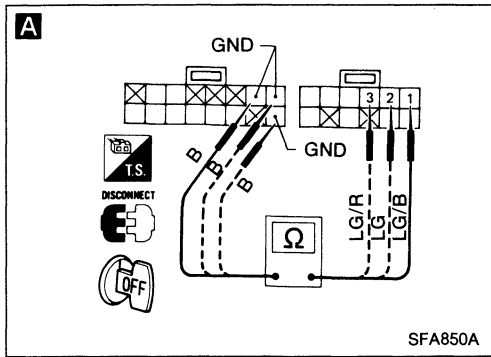


## Diagnostic Procedure 6

### SYMPTOM:

**Front shock absorber actuator malfunctions.**

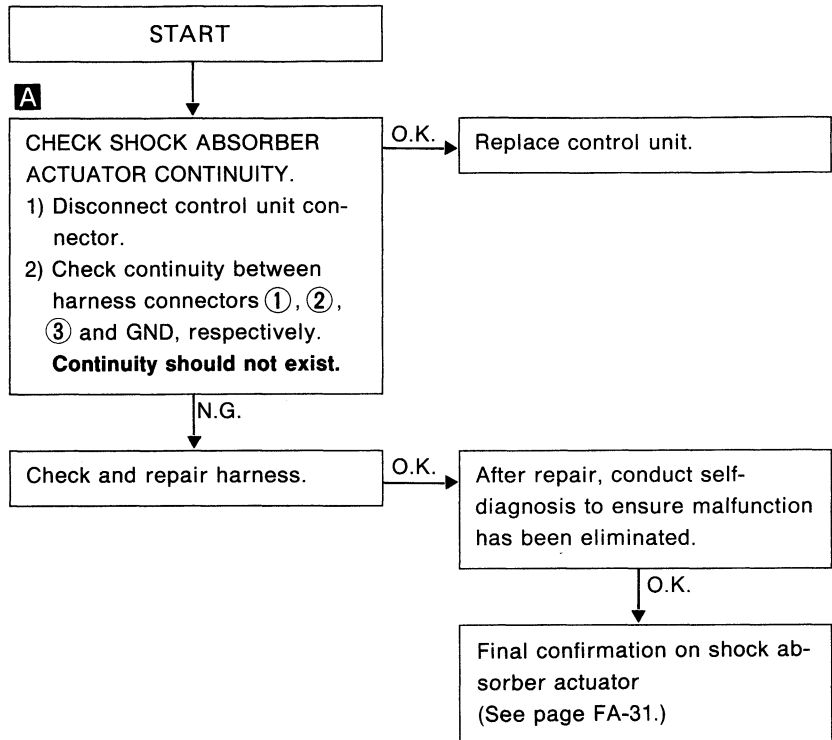


# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

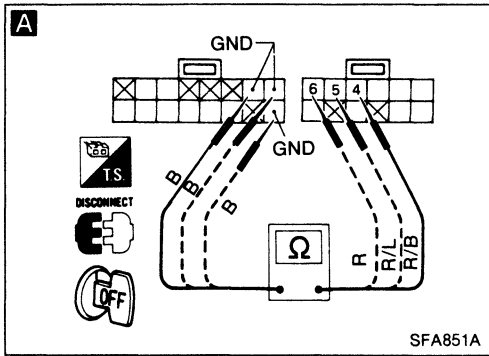

## Diagnostic Procedure 7

### SYMPTOM:

Rear shock absorber actuator malfunctions.

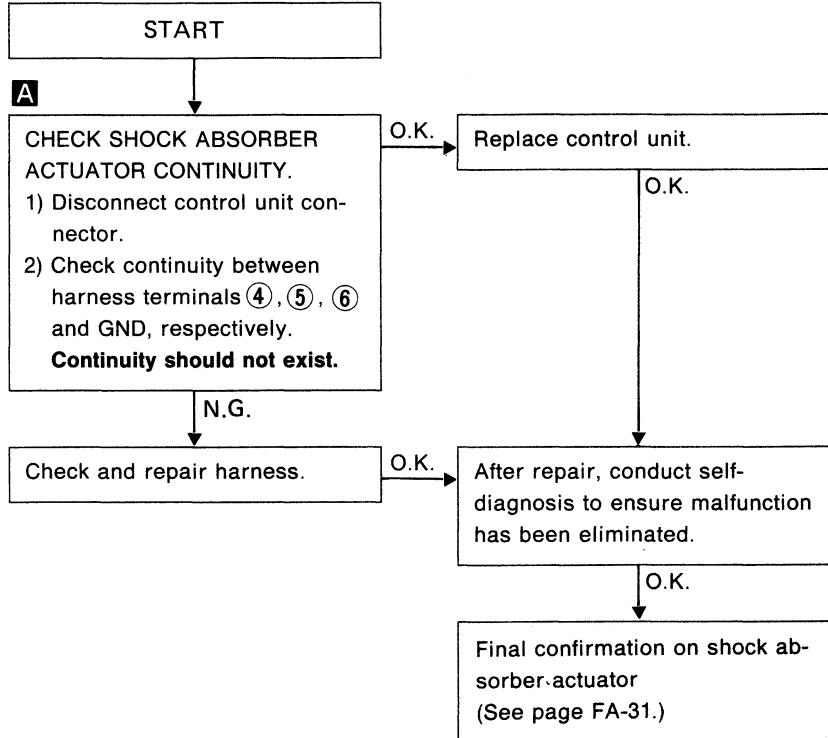


# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

## Diagnostic Procedure 8

### SYMPTOM:

Sonar road surface sensor system malfunctions.

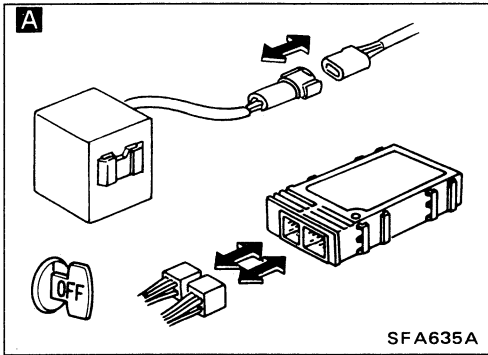

START

**A**

**CHECK CONNECTOR CONTINUITY.**  
Disconnect sonar road surface sensor connector and control unit connector, and reconnect them firmly.  
Conduct self-diagnosis.

- Ensure sonar's reflective surface is flat and even.
- Ensure distance between sonar road surface sensor and reflective surface is in the 200 to 500 mm (7.87 to 19.69 in) range.

O.K. → Poor connector connection

ⓐ

**B**


**CHECK SONAR ROAD SURFACE SENSOR POWER SUPPLY.**

- 1) Disconnect sonar road surface sensor connector.
- 2) Turn ignition switch "ON".
- 3) Measure voltage across sonar road surface sensor terminals IGN and GND.

**Voltage:**  
**Approximately 12V**

N.G. → Check and repair harness.

ⓐ

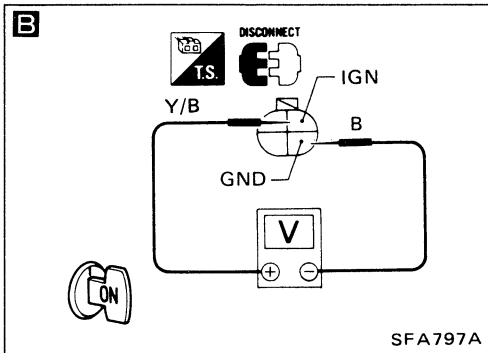

**C**


**CHECK HARNESS CONTINUITY BETWEEN CONTROL UNIT AND SONAR ROAD SURFACE SENSOR.**

- 1) Disconnect control unit and sonar road surface sensor connectors.
- 2) Check continuity between sonar road surface sensor connector terminals ②④ and ②⑤ and their corresponding terminals of control unit connector.

**Continuity should exist.**

N.G. → Check and repair harness.

ⓐ



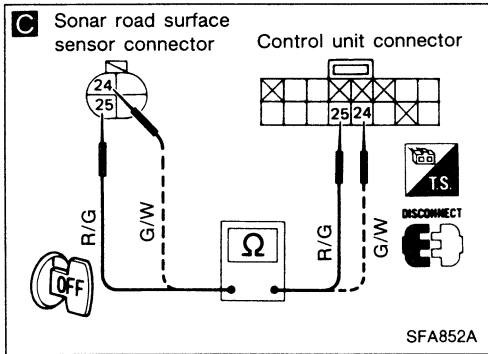


O.K. →

ⓑ

# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

## Diagnostic Procedure 8 (Cont'd)

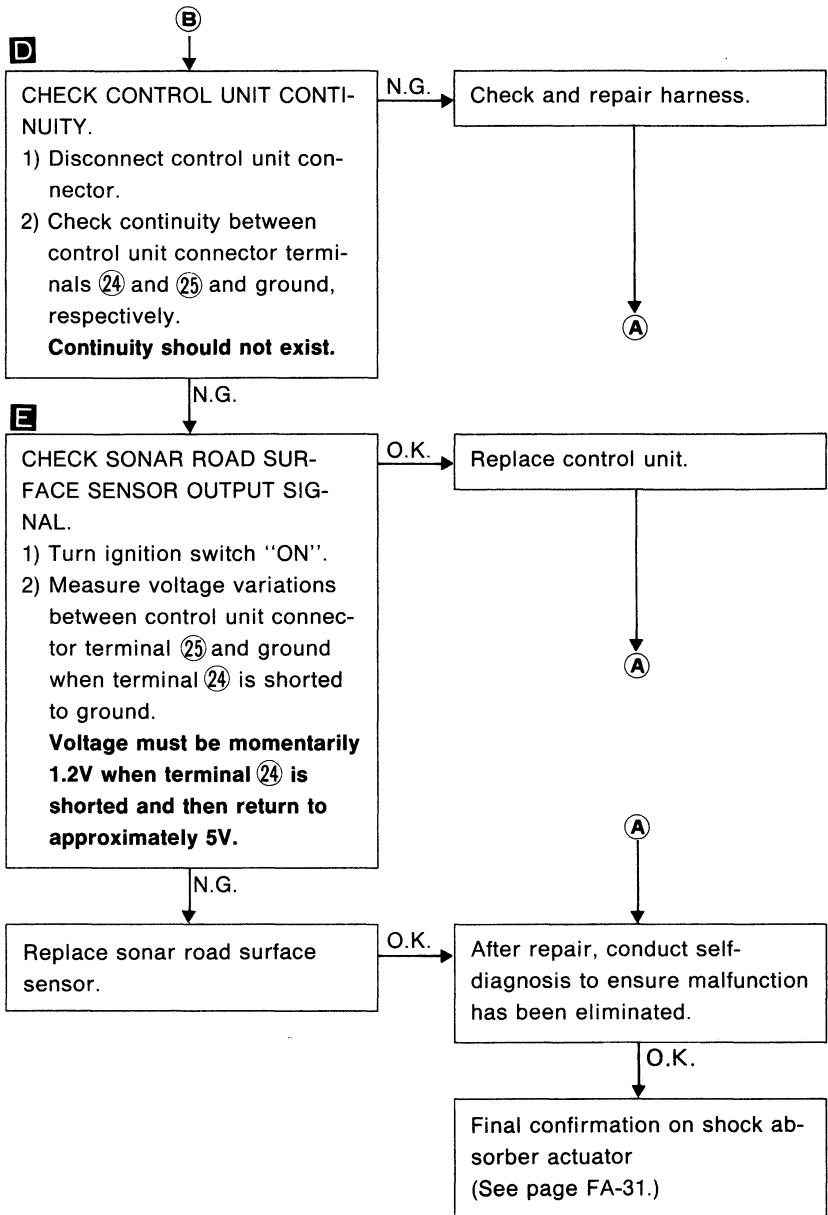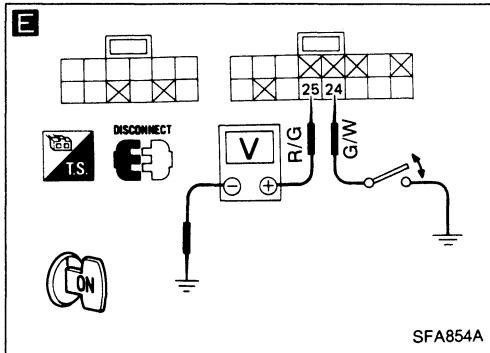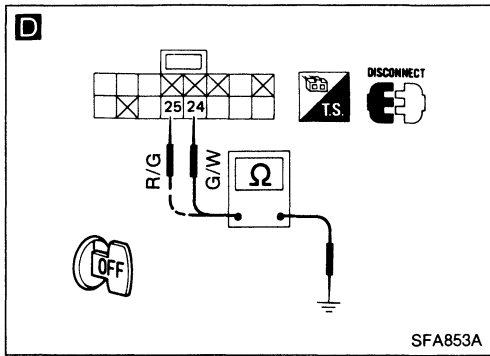


# SONAR SUSPENSION SYSTEM — Trouble Diagnoses

## Control Unit Inspection Table

The standard values (voltage) measured with an analog tester, in contact with the control unit terminal, are shown below:

Terminal No.	Application	Standard value
1	Front *S/A actuator command signal "S"	Approx. 12V Drops to 2V immediately on output of a command signal.
2	Front S/A actuator command signal "N"	
3	Front S/A actuator command signal "F"	
4	Rear S/A actuator command signal "S"	
5	Rear S/A actuator command signal "N"	
6	Rear S/A actuator command signal "F"	
7	Power	Approx. 12V
8	Power	
10	Power	
12	Power	
13	Ground	0V
14	Ground	
18	Vehicle speed sensor input	When rear wheels are slowly rotated by hand: Changes between 0V and approx. 5V.
19	Steering angle sensor input (1)	When steering wheel is being rotated: Changes between 0V and approx. 5V.
21	Ground	0V
23	Indicator lamp output	Illuminated: Approx. 0 - 1V Not illuminated: Approx. 11V
24	Sonar road surface oscillation order	Approx. 12V 1V on output of oscillation signal
25	Sonar road surface vehicle height input	Approx. 5V 1.2V on input of vehicle height signal
26	Steering angle sensor input (2)	When steering wheel is being rotated: Changes between 0V and approx. 5V.
27	Stop lamp switch input	Pressed: Approx. 12V Released: 0V
28	Select switch input	"COMFORT" position: 12V "SPORT" position: 0V

\*S/A: Shock Absorbers

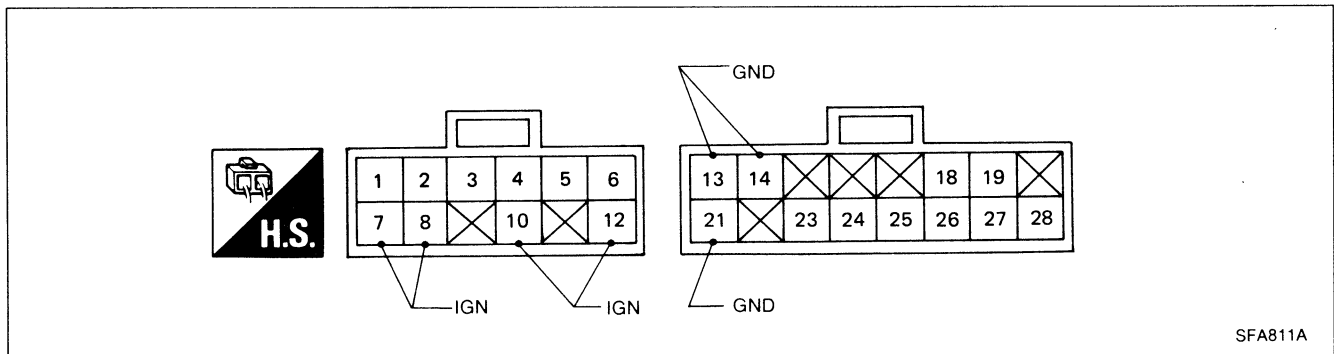

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## General Specifications

### COIL SPRING

Wire diameter	mm (in)	13.8 (0.543)
Coil diameter	mm (in)	160.8 (6.33)
Free length	mm (in)	360 (14.17)
Spring constant	N/mm (kg/mm, lb/in)	22.0 (2.24, 125.4)
Identification color		Orange x 2

### SHOCK ABSORBER (STRUT)

Piston rod diameter	mm (in)	22 (0.87)		
Damping force [at 0.3 m (1.0 ft)/sec.]		Soft	Normal	Firm
	N (kg, lb)	275 - 412 (28 - 42, 62 - 93)	794 - 1,069 (81 - 109, 179 - 240)	1,089 - 1,461 (111 - 149, 245 - 329)
Expansion				
Compression		157 - 275 (16 - 28, 35 - 62)	314 - 471 (32 - 48, 71 - 106)	392 - 588 (40 - 60, 88 - 132)


### FRONT STABILIZER BAR

Stabilizer diameter	mm (in)	27 (1.06)
Identification color		Blue

### TENSION ROD

Rod diameter	mm (in)	20 (0.79)
--------------	---------	-----------

### WHEELARCH HEIGHT (Unladen\*)

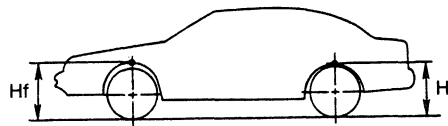

		SFA818A
Applied model		All
Front (Hf)	mm (in)	673 (26.50)
Rear (Hr)	mm (in)	664 (26.14)

\*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.



# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Inspection and Adjustment

### WHEEL ALIGNMENT (Unladen\*1)

Camber	degree	-35' to 55'
Caster	degree	3°55' - 5°25'
Kingpin inclination	degree	11°55' - 13°25'
Total toe-in	mm (in)	-1 to 1 (-0.04 to 0.04)
	degree	-5' to 5'
Front wheel turning angle*2	degree	
Inside		40°30' - 44°30'
Outside		33°30'

\*1: Fuel, radiator coolant and engine oil full.  
Spare tire, jack, hand tools and mats in designated positions.

\*2: On power steering models, wheel turning force (at circumference of steering wheel) of 98 to 147 N (10 to 15 kg, 22 to 33 lb) with engine at idle.

### WHEEL RUNOUT (Radial and lateral)

Wheel type	Aluminum wheel
Radial runout limit	0.3 (0.012)
mm (in)	
Lateral runout limit	0.3 (0.012)
mm (in)	

### WHEEL BEARING

Wheel bearing end play limit	0 (0)
mm (in)	
Wheel bearing lock nut	
Tightening torque	34 - 39
N·m (kg-m, ft-lb)	(3.5 - 4.0, 25 - 29)
Return angle	90°
degree	
Maximum wheel bearing preload measured at wheel hub bolt	13.7 (1.4, 3.1)
N (kg, lb)	

### LOWER BALL JOINT

Swinging force at cotter pin hole	24.5 - 80.4
N (kg, lb)	(2.5 - 8.2, 5.5 - 18.1)
Turning torque	1.5 - 4.9
N·m (kg-cm, in-lb)	(15 - 50, 13 - 43)
Vertical end play	0.1 - 1.3 (0.004 - 0.051)
mm (in)	



# REAR AXLE & REAR SUSPENSION


## SECTION **RA**

### CONTENTS

PRECAUTIONS AND PREPARATION .....	RA- 2
REAR AXLE AND REAR SUSPENSION .....	RA- 4
CHECK AND ADJUSTMENT — On-vehicle .....	RA- 5
REAR AXLE .....	RA- 8
REAR AXLE — Drive Shaft .....	RA-11
REAR SUSPENSION .....	RA-17
SERVICE DATA AND SPECIFICATIONS (S.D.S.) .....	RA-23



# PRECAUTIONS AND PREPARATION

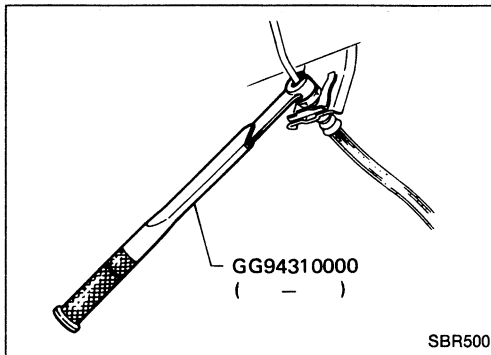

## Precautions

- When installing each rubber part, final tightening must be carried out under unladen condition\* with tires on ground.  
\*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.
- Use Tool when removing or installing brake tubes.
- When removing each suspension part, check wheel alignment and adjust if necessary.





## Preparation

### SPECIAL SERVICE TOOLS


Tool number (Kent-Moore No.) Tool name	Description
GG94310000 ( - ) Flare nut torque wrench	<p>Removing or installing each type of brake piping</p>
ST38280000 ( - ) Rear suspension arm bushing drift	<p>A: 42 mm (1.65 in) dia. B: 32 mm (1.26 in) dia.</p> <p>Removing or installing rear suspension bushing</p>
ST07640000 ( - ) Axle stand	<p>A: 114.3 mm (4.50 in) dia. B: 12 mm (0.47 in)</p> <p>Removing axle shaft</p>
ST36230000 (J25840-A) Sliding hammer	<p>Removing rear axle shaft</p>
ST37750000 (J25863-01) Rear axle shaft bearing drift	<p>A: 40 mm (1.57 in) dia. B: 31 mm (1.22 in) dia.</p> <p>Installing axle shaft bearing</p>


# PRECAUTIONS AND PREPARATION

## Preparation (Cont'd)

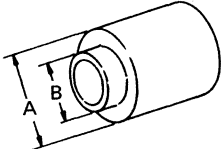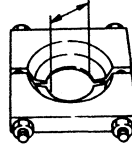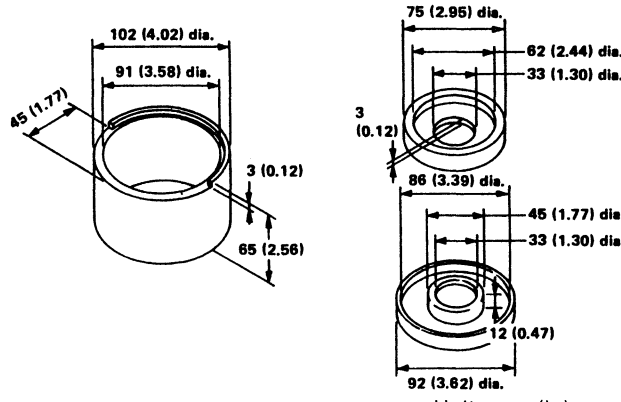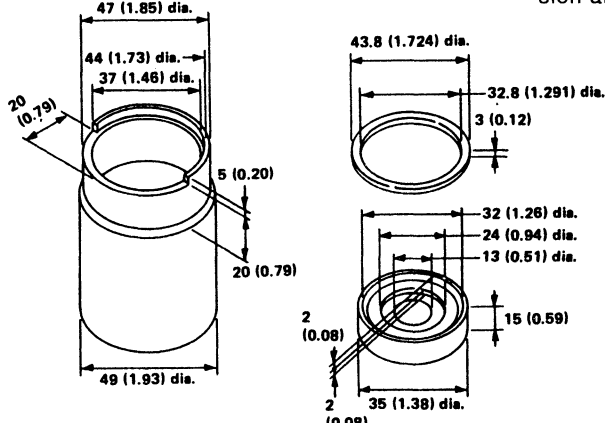Tool number (Kent-Moore No.) Tool name	Description	
ST37710000 ( — ) Rear axle grease seal drift	 <p style="text-align: center;">A: 60 mm (2.36 in) dia. B: 38 mm (1.50 in) dia.</p>	Installing grease seal
ST30021000 ( — ) Bearing replacer	 <p style="text-align: center;">68 mm (2.68 in) dia.</p>	Removing outer bearing in rear suspension arm
KV401052S0 ( — ) KV40105210 ( — ) KV40105220 ( — ) KV40105230 ( — ) Drift-suspension member insulator	 <p style="text-align: center;">Unit: mm (in)</p>	Removing or installing suspension member insulator
KV401051S0 ( — ) KV40105110-1 ( — ) KV40105110-2 ( — ) KV40105120 ( — ) Drift-rear suspension arm bushing	 <p style="text-align: center;">Unit: mm (in)</p>	Removing or installing rear suspension arm bushing

# REAR AXLE AND REAR SUSPENSION

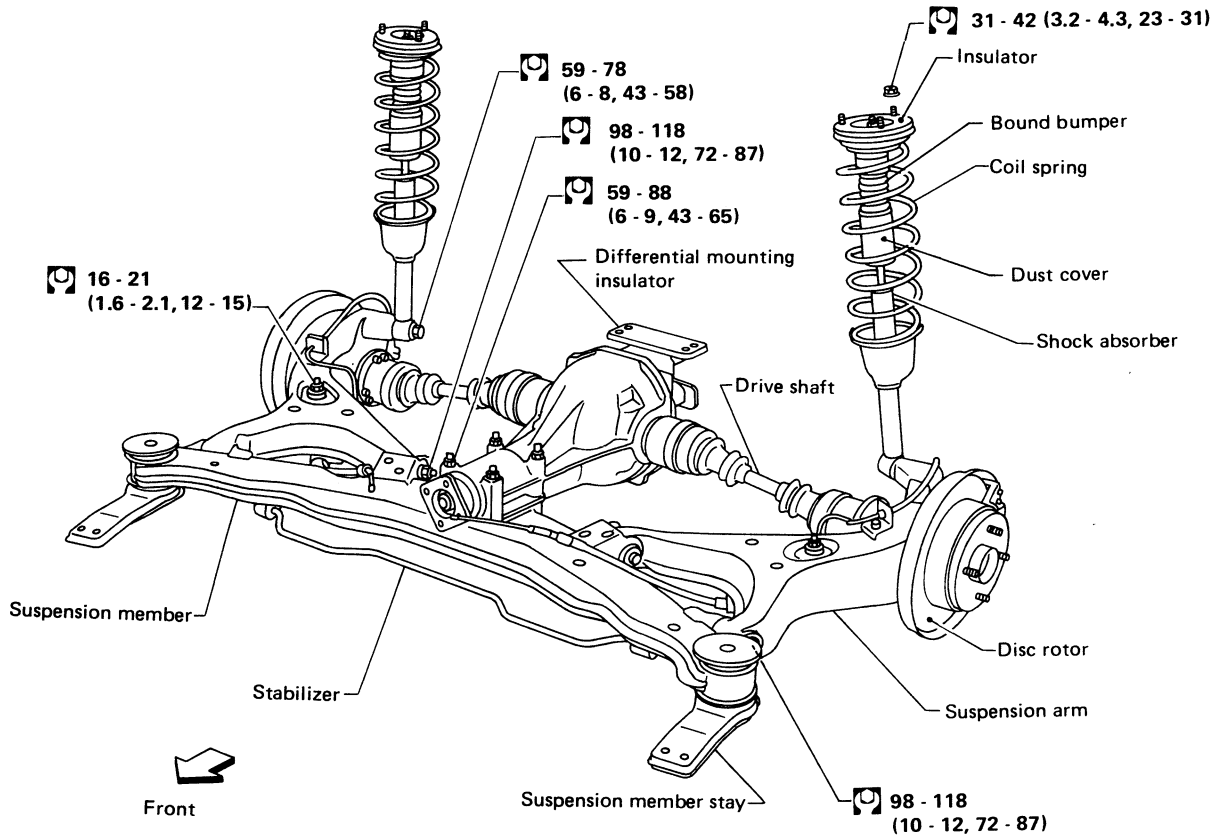


 : N·m (kg·m, ft·lb)

Final tightening for rubber parts requires to be carried out under unladen condition\* with tires on ground.

\* Fuel, radiator coolant and engine oil full.

Spare tire, jack, hand tools and mats in designated positions.

## CHECK AND ADJUSTMENT — On-vehicle

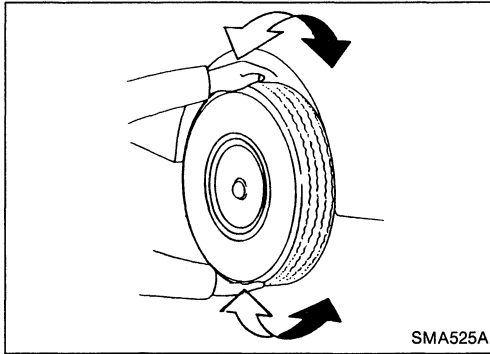

### Rear Axle and Rear Suspension Parts



Check axle and suspension parts for looseness, wear or damage.

- Shake each rear wheel to check for excessive play.


- Make sure that cotter pin is inserted.
- Retighten all nuts and bolts to the specified torque.

#### Tightening torque:

Refer to drawing in REAR SUSPENSION.

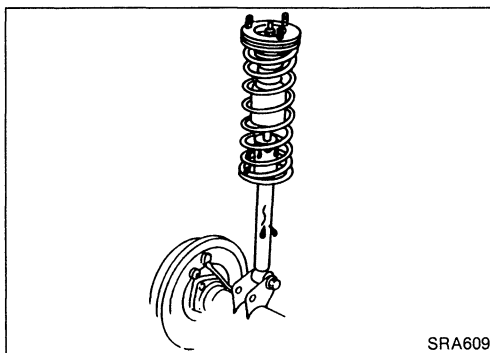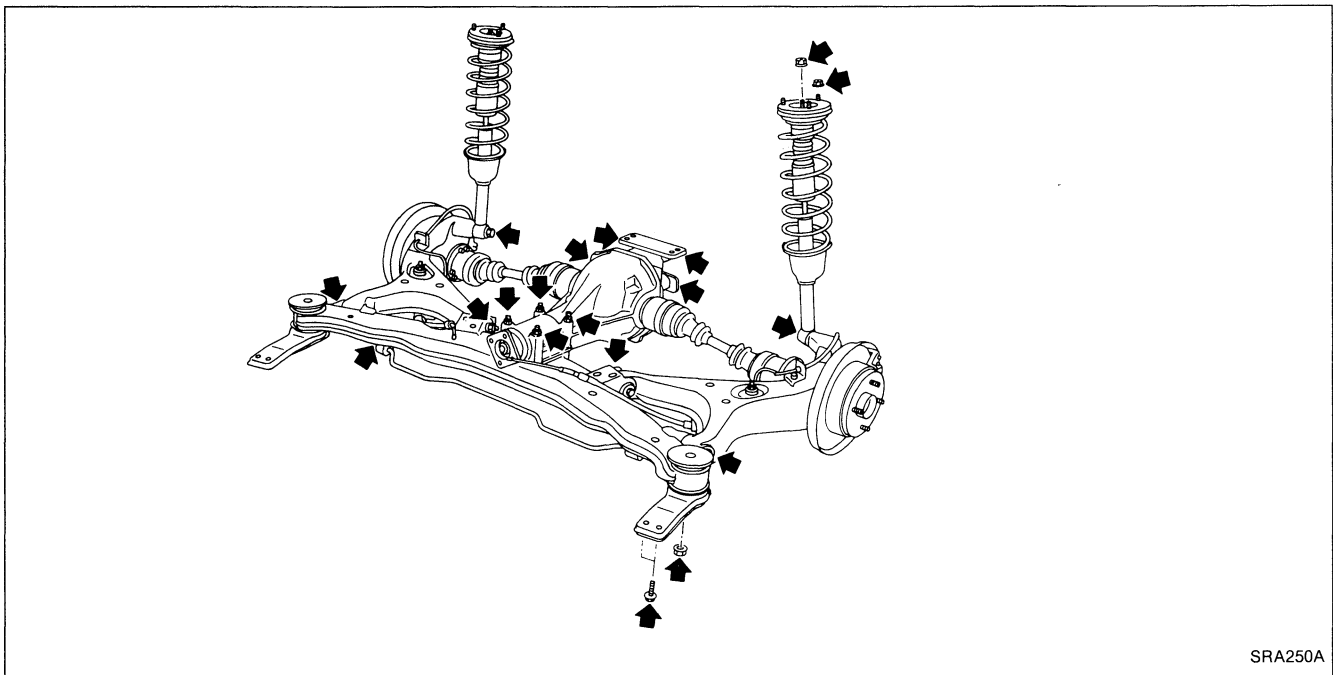


- Check shock absorber for oil leakage or other damage.
- Check wheelarch height — refer to CHECK AND ADJUSTMENT — On-vehicle in section FA.

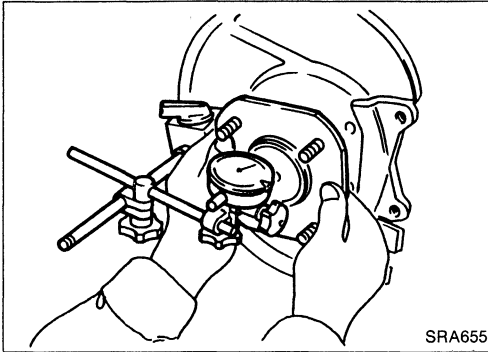

## Rear Wheel Bearing

- Check axial end play.  
**Axial end play limit:**  
0.05 mm (0.0020 in)
- Check that wheel bearings operate smoothly.
- Check tightening torque of wheel bearing lock nut.  
**Ⓜ: 127 - 177 N·m (13 - 18 kg·m, 94 - 130 ft·lb)**
- If there is any axial end play or wheel bearing does not turn smoothly, replace wheel bearing assembly. Refer to REAR AXLE.

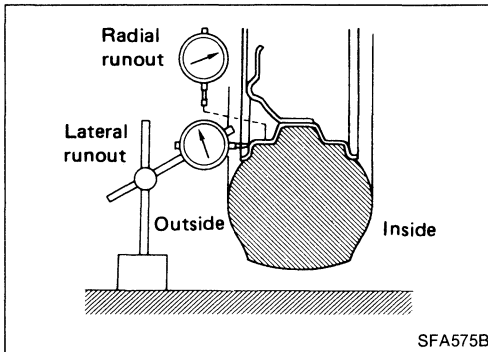

## Rear Wheel Alignment

### PRELIMINARY INSPECTION

Make following checks. Adjust, repair or replace if necessary.


- Check tires for wear and for improper inflation.
  - Check rear wheel bearings for looseness.
  - Check wheel runout.  
**Wheel runout: Refer to S.D.S. in section FA.**
  - Check that rear strut (shock absorber) works properly.
  - Check rear axle and rear suspension parts for looseness.
  - Check vehicle posture (Unladen\*).
- \*: Fuel, radiator and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

### CAMBER

**Camber is preset at factory and cannot be adjusted.**


**Camber:**  
-1°5' to 20'

- If the camber is not within specification, inspect and replace any damaged or worn rear suspension parts.

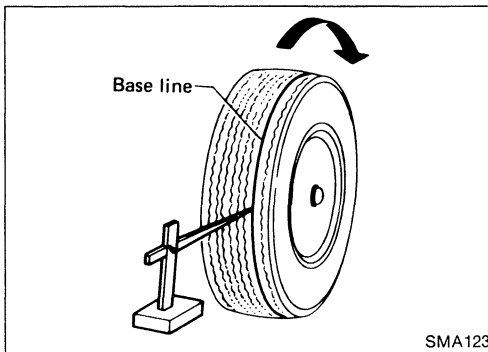

### TOE-OUT

1. Draw a base line across the tread.
- After lowering rear of vehicle, move it up and down to eliminate friction.

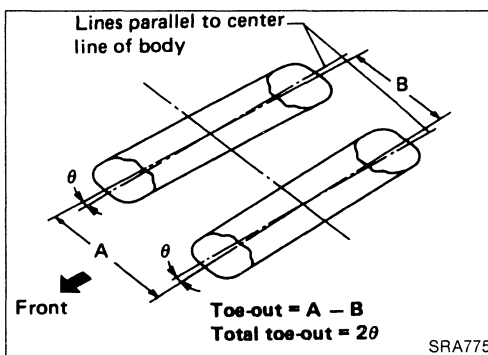


2. Measure toe-out.
- Measure distance "A" and "B" at the same height as hub center.

**Toe-out:**  
A — B      0.2 - 4.2 mm (0.008 - 0.165 in)  
2θ          1' - 22'





## CHECK AND ADJUSTMENT — On-vehicle

### Rear Wheel Alignment (Cont'd)

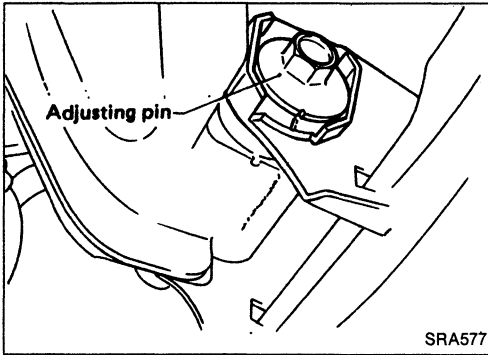


- If not within specification, turn the left and right adjusting pins equal amounts to adjust.

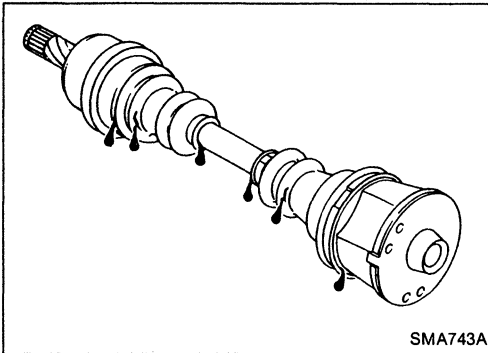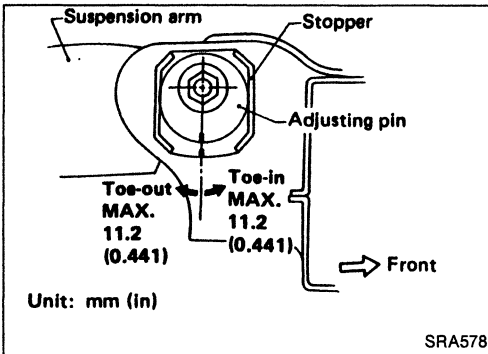

### Drive Shaft


Check for grease leakage or other damage.

# REAR AXLE

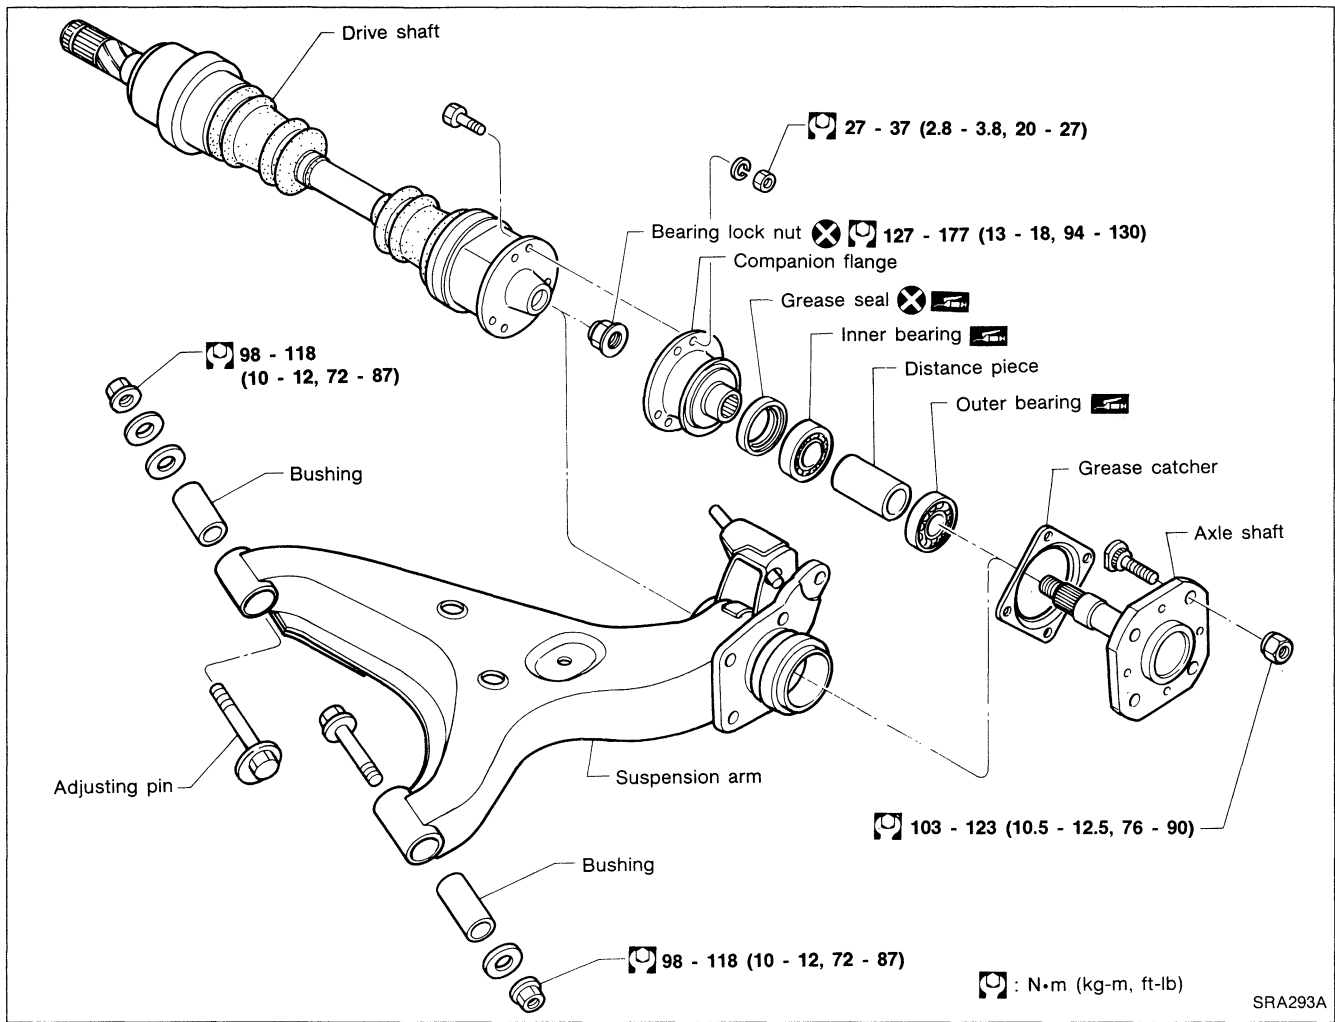

## Disassembly



- Disconnect drive shaft. Refer to Drive Shaft for removal and installation.
- Remove wheel bearing lock nut while operating parking brake or brake pedal depressed.
- Remove brake caliper and rotor. Refer to section BR.

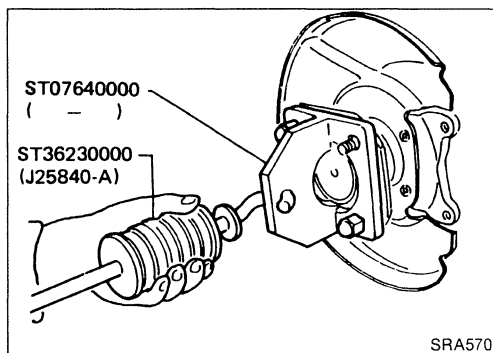

- Draw out rear axle shaft with Tool.

## REAR AXLE

### Disassembly (Cont'd)

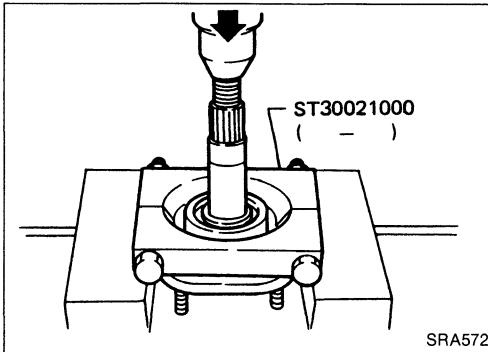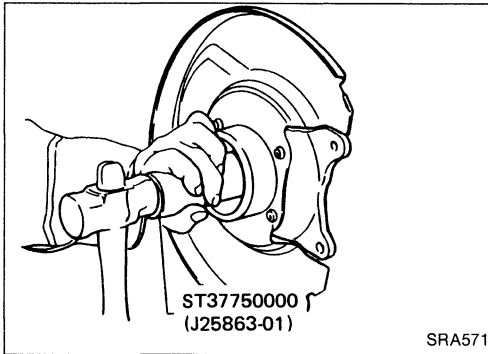



- Remove companion flange and distance piece.
- Remove grease seal and inner bearing with Tool.
- Remove outer bearing from axle shaft with Tool.

### Inspection

- Check wheel bearing for end play and rolling surface for flaking or wear. Replace if necessary.
- Check rear axle shaft for cracks, wear or deformation. Replace if necessary.
- Check companion flange for wear, deformation or other damage. Replace if necessary.
- Check distance piece for wear or other damage. Replace if necessary.
- Check grease seal for cracks, wear or deformation. Replace if necessary.

### Assembly

- When installing wheel bearing, make sure that the sealed side of bearing faces outside.
- When installing outer bearing to rear axle shaft, use Tool.

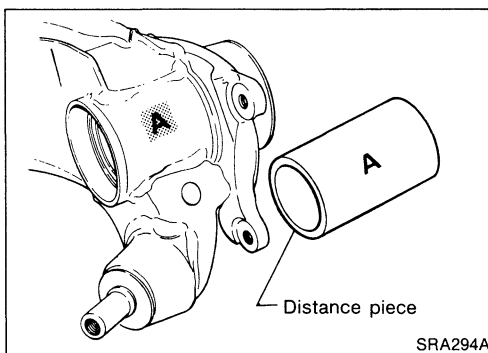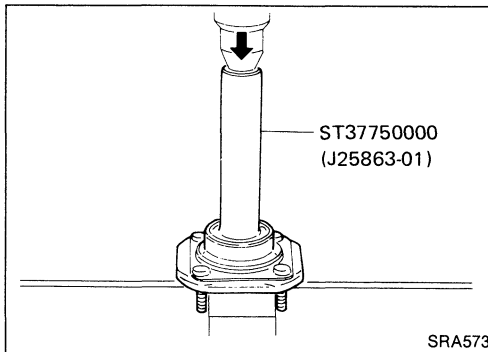

- Select a distance piece according to the chart below.


Bearing housing	Distance piece
A	A
B	B
C	C

**When a distance piece is reused, make sure that both ends are not collapsed or deformed.**


**When installing, make sure that larger side faces axle shaft flange.**

## REAR AXLE


### Assembly (Cont'd)

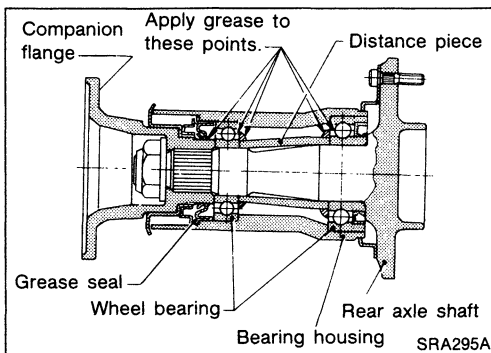

- Apply recommended multi-purpose grease to the portions indicated to the left.

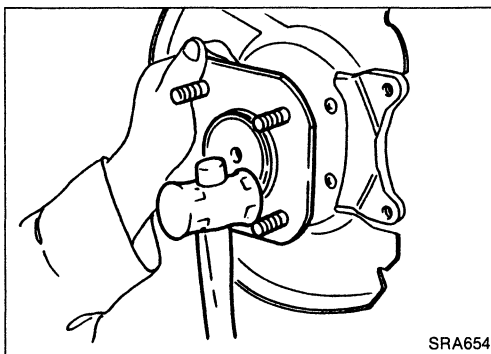


- Install rear axle shaft by slightly tapping with brass hammer.
- Tighten wheel bearing lock nut to the specified torque.  
☐: 127 - 177 N·m (13 - 18 kg-m, 94 - 130 ft-lb)
- Check that wheel bearing operates smoothly.
- Stake wheel bearing lock nut.

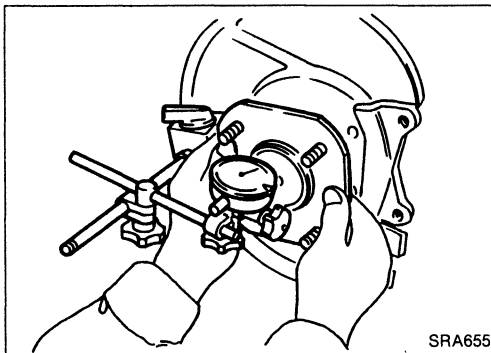


- Check wheel bearing axial end play.  
**Axial end play limit:**  
**0.05 mm (0.0020 in)**

# REAR AXLE — Drive Shaft

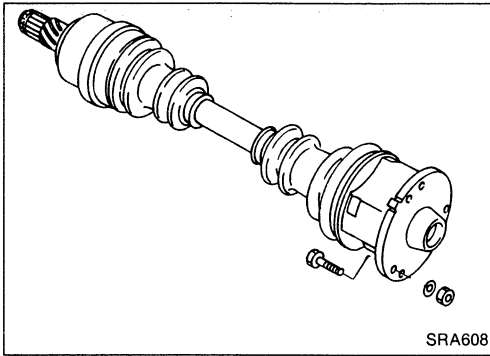

## Removal and Installation

Cover boots with waste cloth so as not to damage them when replacing.

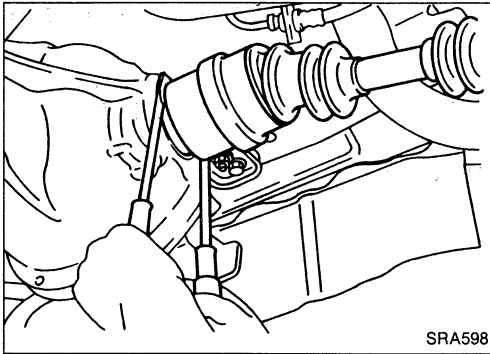


- Extract drive shaft from differential carrier by prying it with a suitable tool.


### CAUTION:

Be careful not to damage oil seal of differential carrier.

Make sure that circular clip is properly meshed with side gear and will not come out.

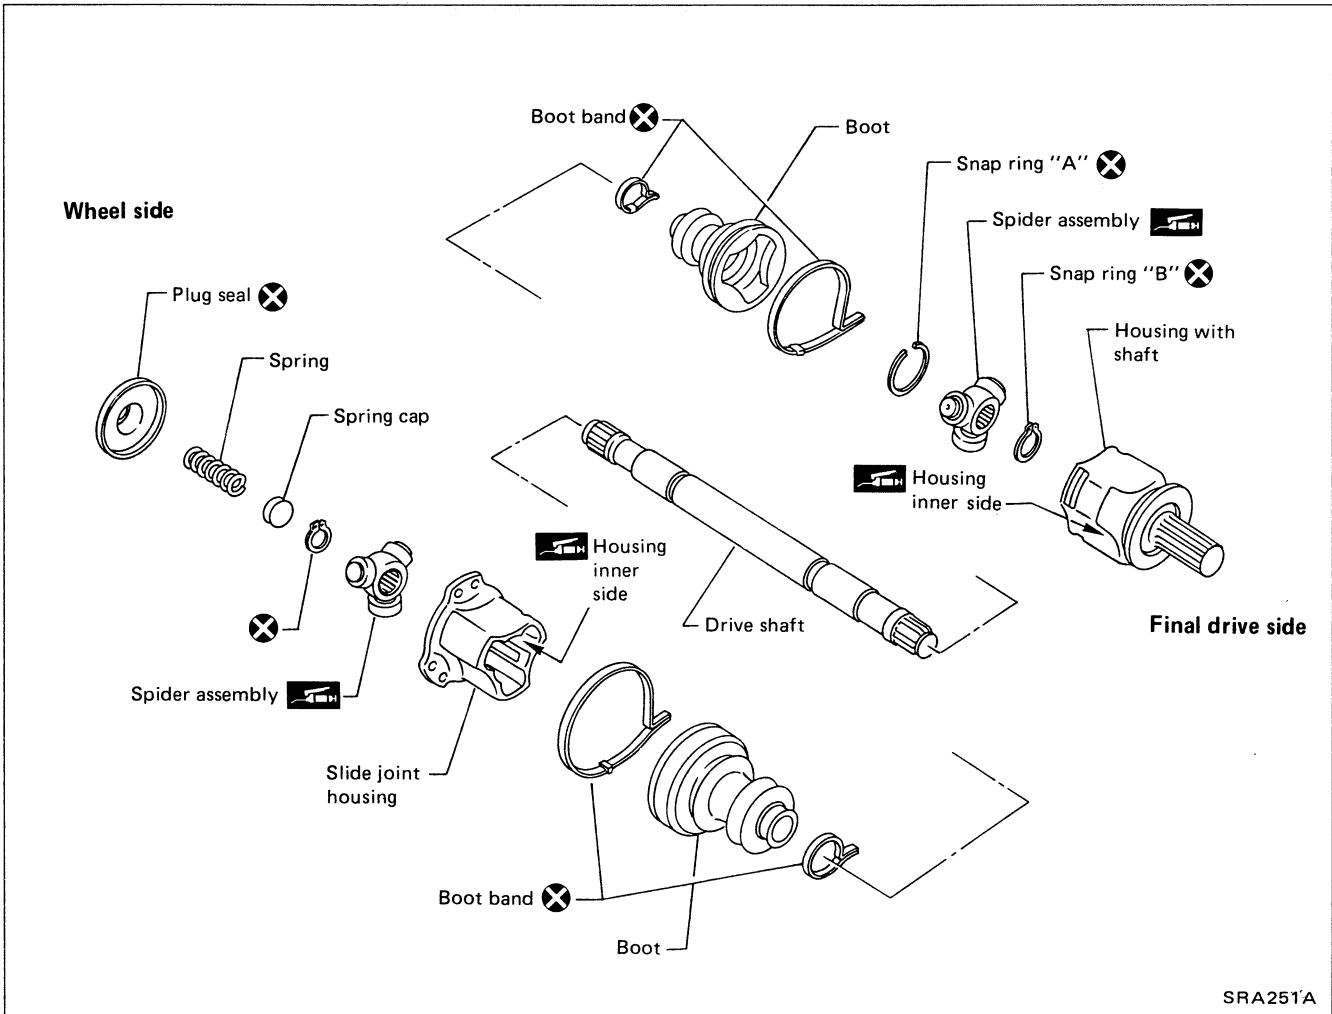


## REAR AXLE — Drive Shaft

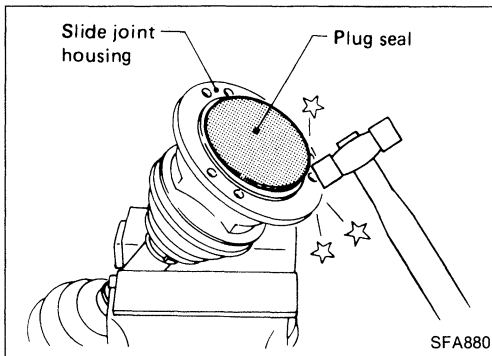


### Disassembly

#### WHEEL SIDE

1. Remove plug seal from slide joint housing by lightly tapping around slide joint housing.

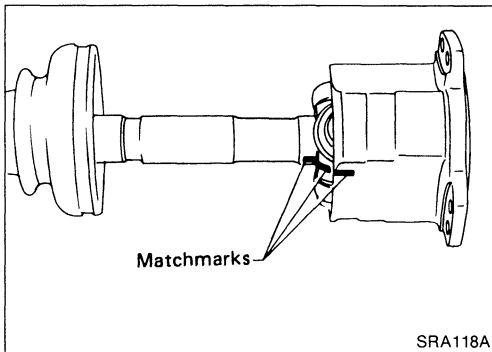

2. Remove boot bands.
3. Put matchmarks on slide joint housing and drive shaft before separating joint assembly.
4. Put matchmarks on spider assembly and drive shaft.

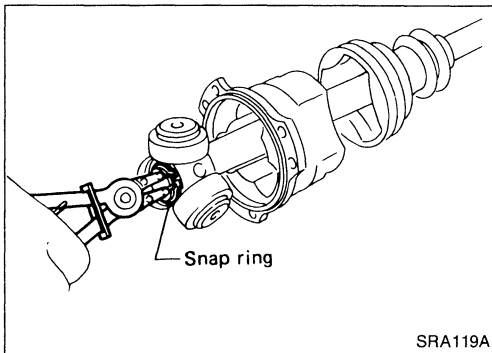


5. Pry off snap ring, then remove spider assembly.

#### CAUTION:

**Do not disassemble spider assembly.**


6. Draw out slide joint housing.
7. Draw out boot.

**Cover drive shaft serration with tape to prevent damage to the boot.**

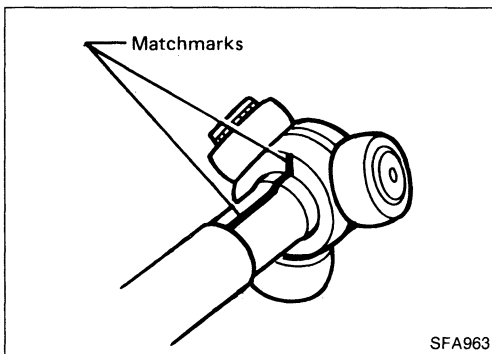

#### FINAL DRIVE SIDE


1. Remove boot bands.
2. Put matchmarks on housing together with shaft and drive shaft before separating joint assembly.
3. Put matchmarks on spider assembly and drive shaft.

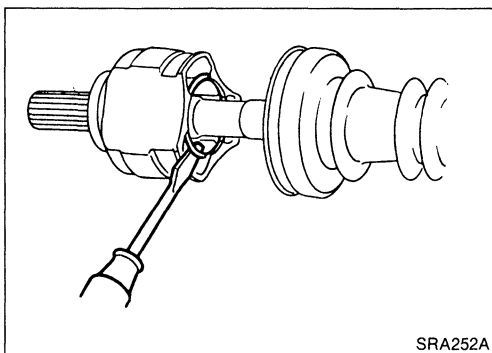

4. Pry off snap ring "A" with a screwdriver, and pull out slide joint housing.

## REAR AXLE — Drive Shaft

### Disassembly (Cont'd)

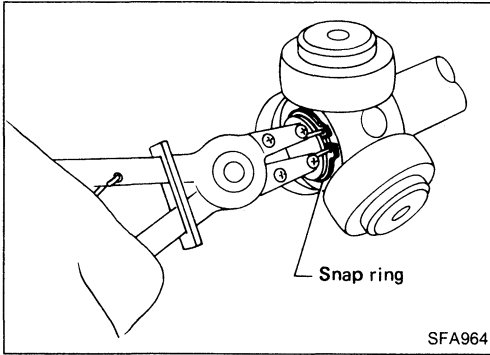

5. Pry off snap ring "B", then remove spider assembly.

#### CAUTION:

**Do not disassemble spider assembly.**

6. Draw out boot.

**Cover drive shaft serration with tape to prevent damage to the boot.**

### Inspection

Thoroughly clean all parts in cleaning solvent, and dry with compressed air. Check parts for deformation or other damage.

### DRIVE SHAFT


Replace drive shaft if it is twisted or cracked.

### BOOT

Check boot for fatigue, cracks, or wear. Replace boot with new boot bands.

### JOINT ASSEMBLY

- Check spider assembly for bearing, roller and washer damage. Replace spider assembly if necessary.
- Check housing for any damage. Replace housing set and spider assembly, if necessary.

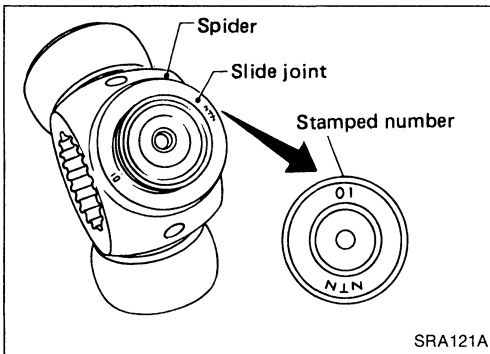


- When replacing only spider assembly, select a new spider assembly from among those listed in table below. Ensure the number stamped on sliding joint is the same as that stamped on new part.

**Housing alone cannot be replaced. It must be replaced together with spider assembly.**

Stamped number	Part No.
00	39720 10V10
01	39720 10V11
02	39720 10V12

## Assembly


- After drive shaft has been assembled, make sure it moves smoothly over its entire range without binding.
- Use Nissan Genuine Grease or equivalent after every overhaul.

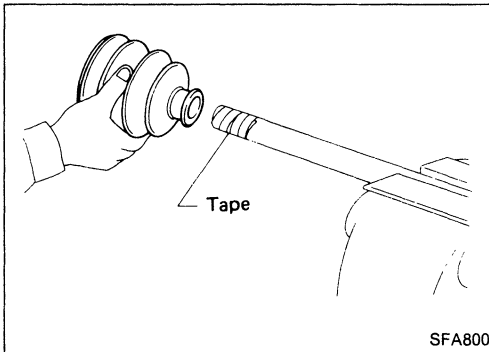

### WHEEL SIDE

1. Install new small boot band, boot and slide joint housing to drive shaft.


**Cover drive shaft serration with tape to prevent damage to boot during installation.**

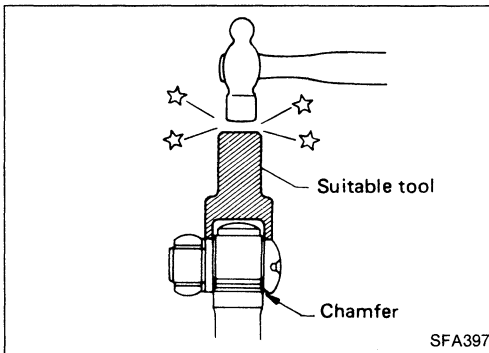

2. Install spider assembly securely, making sure marks are properly aligned.

- Press-fit with spider assembly serration chamfer facing shaft.

3. Install new snap ring.

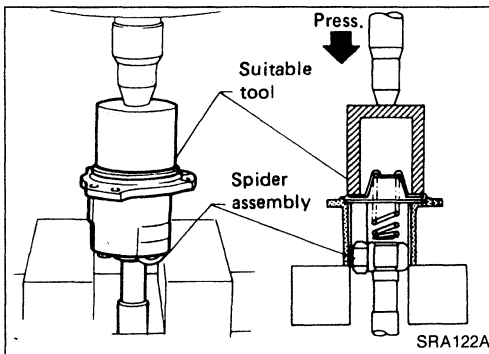


4. Install coil spring, spring cap and new plug seal to slide joint housing. Press plug seal.

**Apply sealant to mating surface of plug seal.**

### CAUTION:


- a. When pressing plug seal into place, hold it horizontal so that spring inside it does not tilt or fall down.
- b. Move shaft in axial direction to ensure that spring is installed properly. If shaft drags or if spring is not installed properly, remove plug seal and install a new one. Discard plug seal after removal.

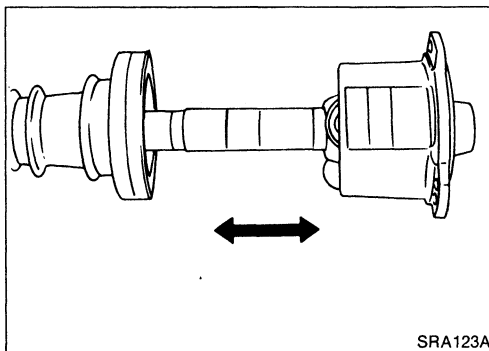



## REAR AXLE — Drive Shaft

### Assembly (Cont'd)

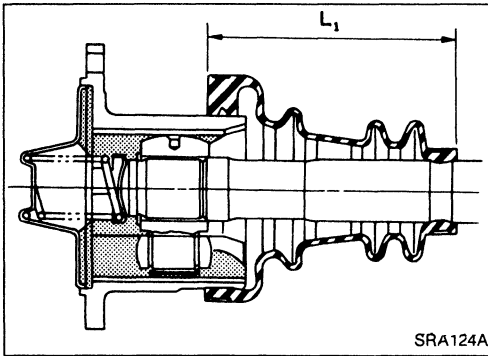

5. Pack drive shaft with specified amount of grease.

**Specified amount of grease:**


**185 - 195 g (6.52 - 6.88 oz)**

6. Set boot so that it does not swell and deform when its length is " $L_1$ ".


**Length " $L_1$ ":**

**110.5 - 112.5 mm (4.35 - 4.43 in)**

**Make sure that boot is properly installed on the drive shaft groove.**

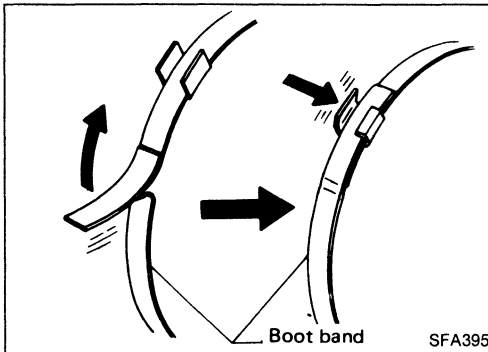


7. Lock new larger boot band securely with a suitable tool, then lock new smaller boot band.

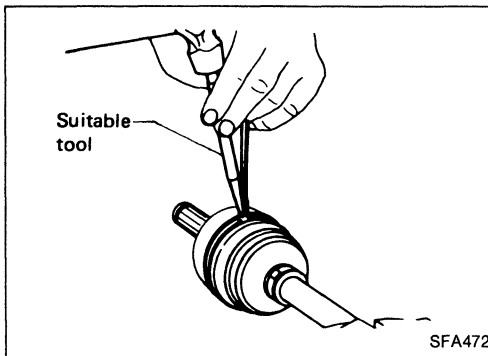

### FINAL DRIVE SIDE

1. Install new small boot band and boot on drive shaft.


**Cover drive shaft serration with tape to prevent damage to boot during installation.**

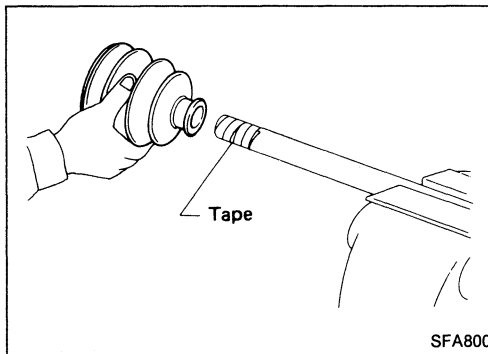

2. Install spider assembly securely, making sure marks are properly aligned.


- Press-fit with spider assembly serration chamfer facing shaft.

3. Install new snap ring.

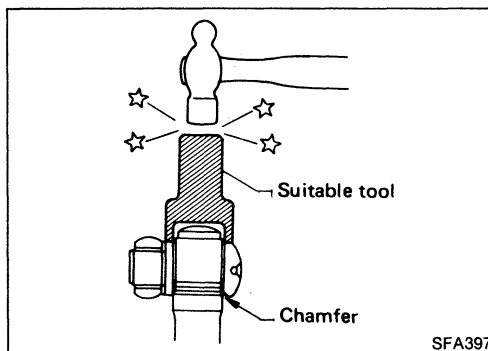

## REAR AXLE — Drive Shaft

### Assembly (Cont'd)

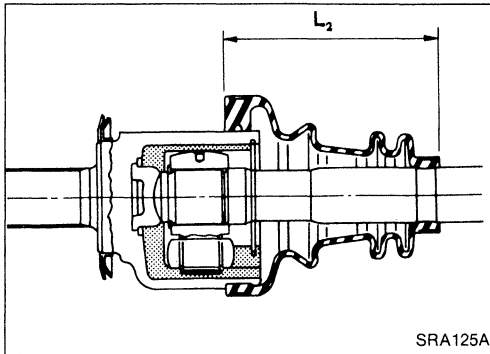

4. Pack drive shaft with specified amount of grease.

**Specified amount of grease:**


**155 - 165 g (5.47 - 5.82 oz)**

5. Install slide joint housing, then install new snap ring "A".
6. Set boot so that it does not swell and deform when its length is " $L_2$ ".

**Length " $L_2$ ":**

**110.5 - 112.5 mm (4.35 - 4.43 in)**

**Make sure that boot is properly installed on the drive shaft groove.**

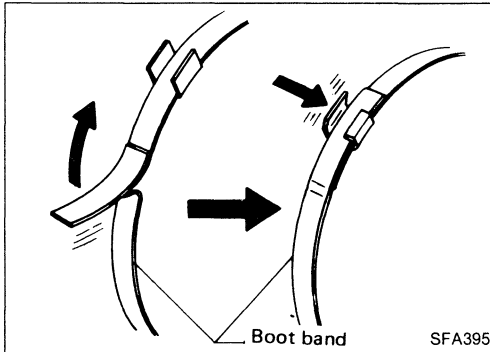


7. Lock new larger and smaller boot bands securely with a suitable tool.

# REAR SUSPENSION

When installing each rubber part, final tightening must be carried out under unladen condition\* with tires on ground.

\* Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.


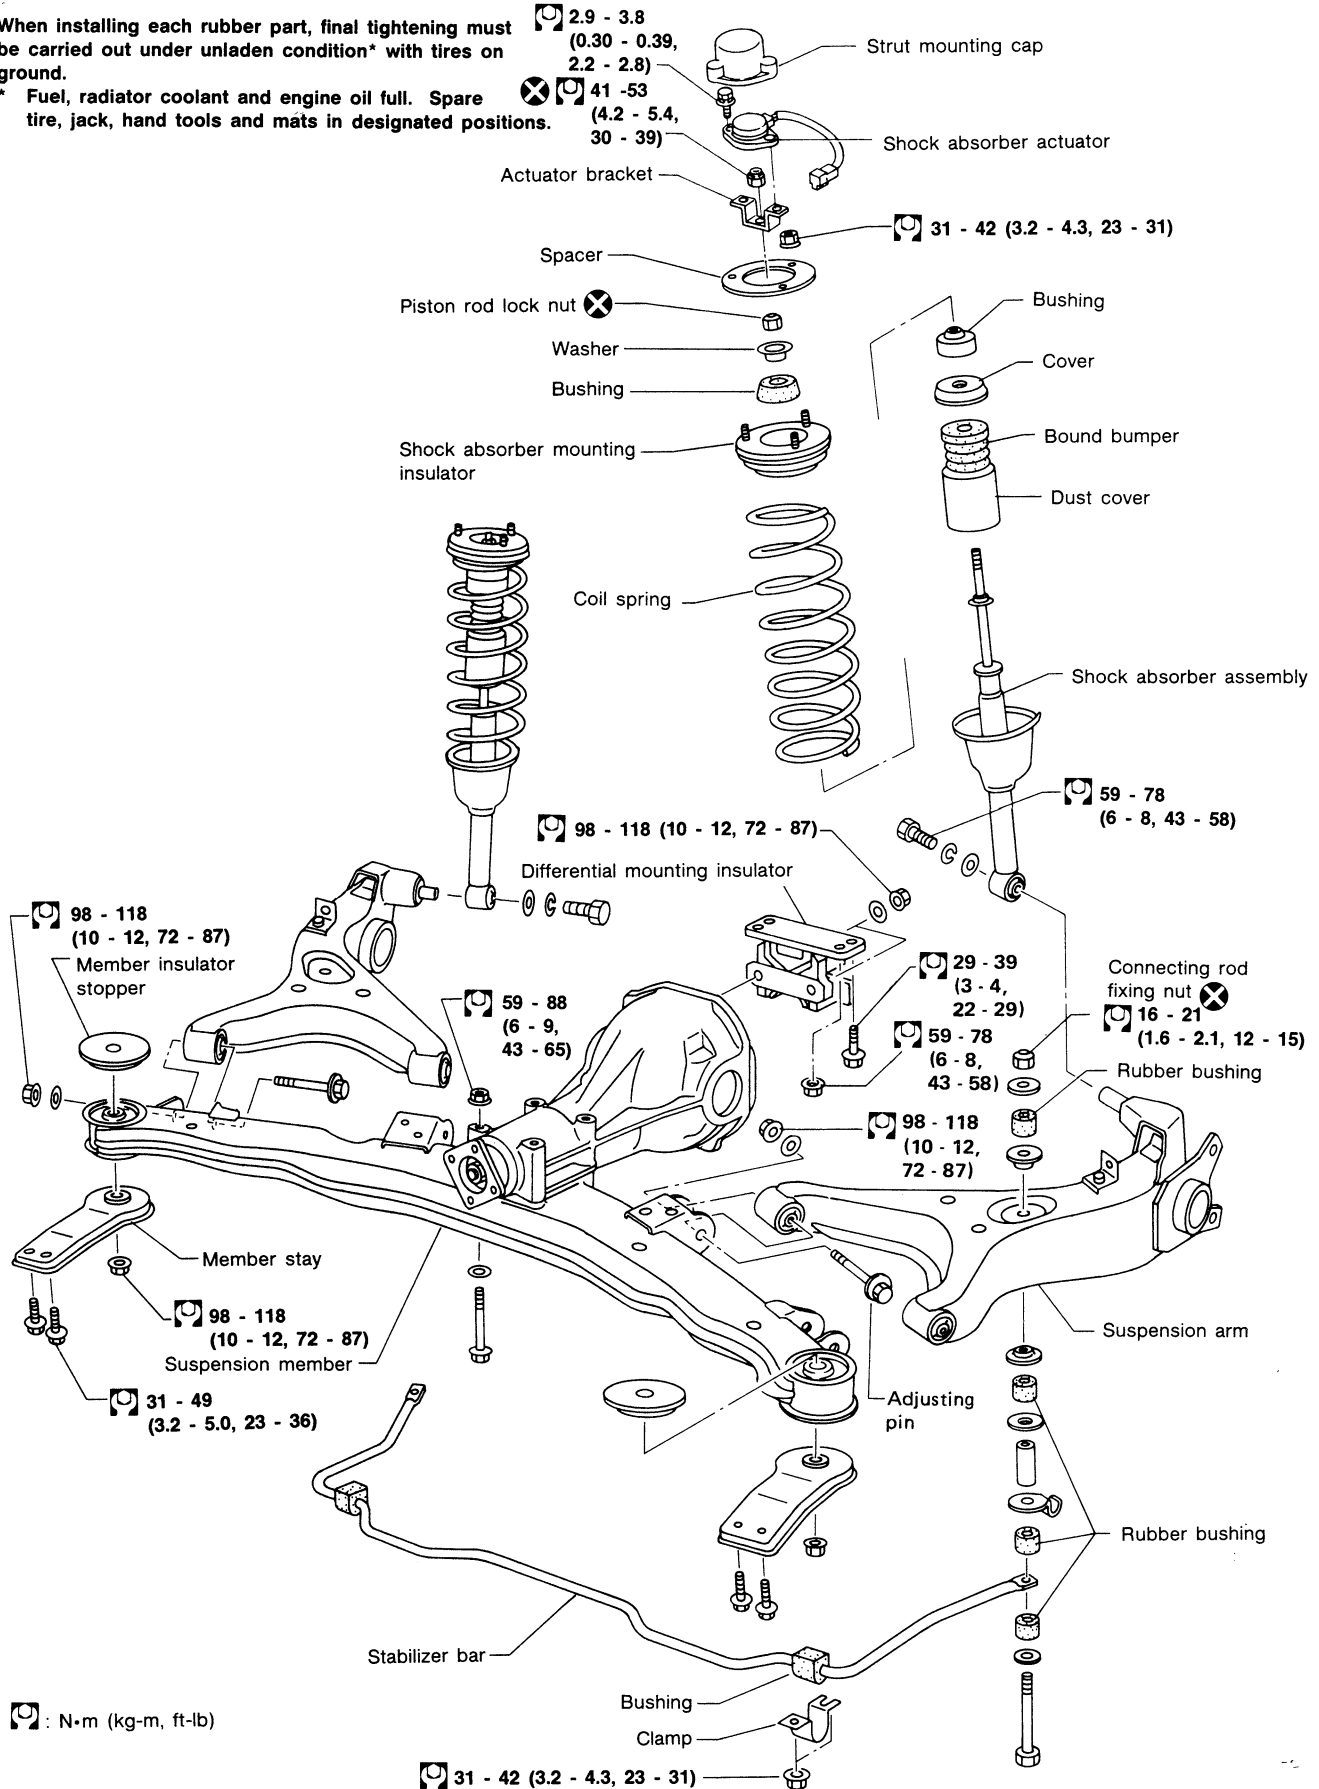


: N·m (kg-m, ft-lb)


31 - 42 (3.2 - 4.3, 23 - 31)

# REAR SUSPENSION


## Removal and Installation

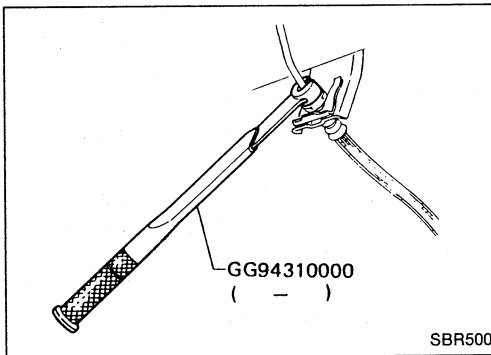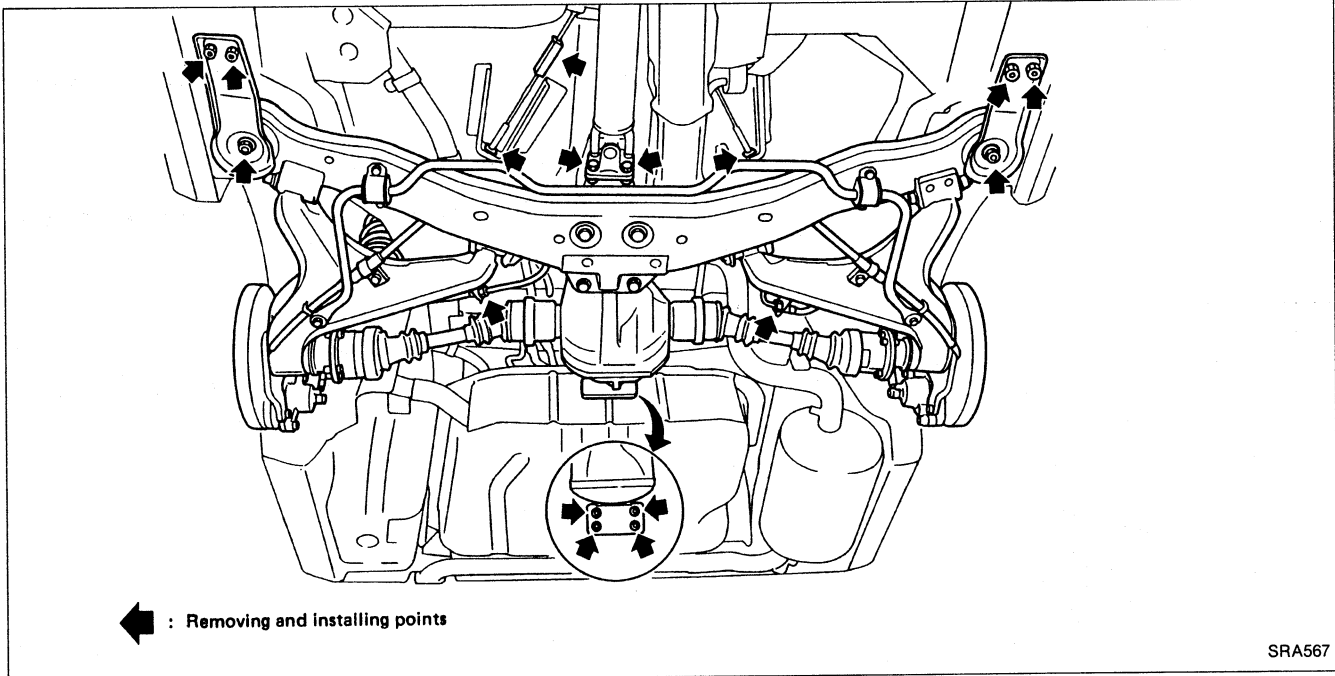

- Disconnect brake hydraulic line and parking brake cable.
- CAUTION:**  
Use Tool when removing or installing brake tubes.  
Final tightening for rubber parts requires to be carried out under unladen condition with tires on ground.
- Disconnect propeller shaft. Refer to section PD.

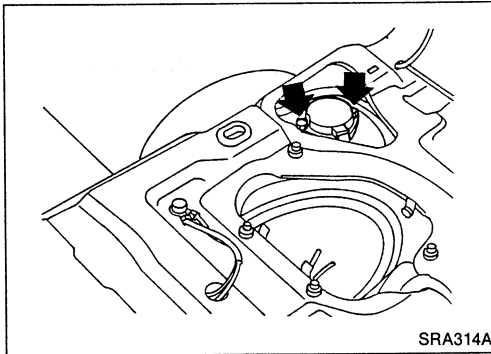


- Remove rear parcel shelf. Refer to section BF.
- Disconnect sub-harness connector.
- Remove strut mounting cap.
- Remove shock absorber actuator fixing bolts.
- Remove shock absorber upper end nuts.

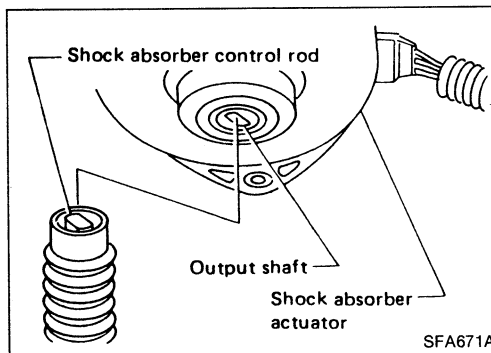

- Before installing actuator, ensure angle of shock absorber control rod is aligned with that of actuator output shaft. Otherwise, actuator may be damaged.

## REAR SUSPENSION

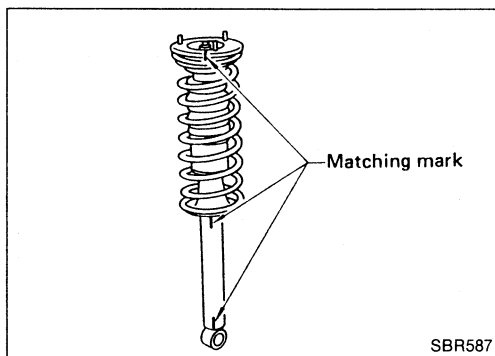


### Coil Spring and Shock Absorber

#### REMOVAL

- Refer to Removal and Installation in REAR SUSPENSION.

#### DISASSEMBLY AND ASSEMBLY


Make matching marks on insulator and shock absorber before disassembling.

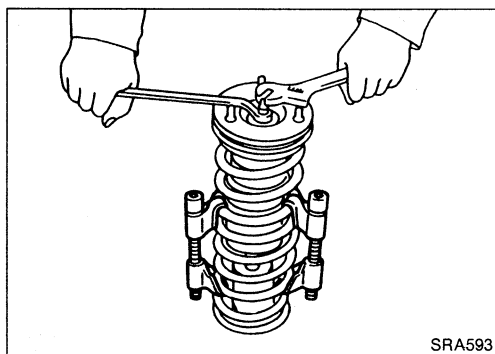

- Remove coil spring with a suitable tool.
- Tighten lock nut as far as it goes when assembling.

#### INSPECTION


- Check coil spring for yield, deformation or cracks.
- Check coil spring specifications. Refer to S.D.S.
- Check shock absorber for oil leakage, cracks or deformation.
- Check shock absorber specifications. Refer to S.D.S.
- Check shock absorber mounting insulator and other rubber parts for wear, cracks or deformation. Replace if necessary.
- Check sonar suspension system. Refer to SONAR SUSPENSION SYSTEM — Trouble Diagnoses in section FA.

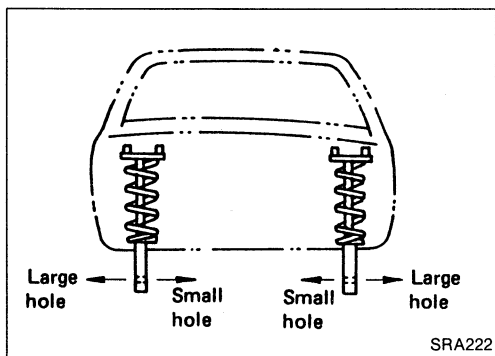

#### INSTALLATION


Install shock absorber so that the larger hole on the lower end faces out.

## REAR SUSPENSION

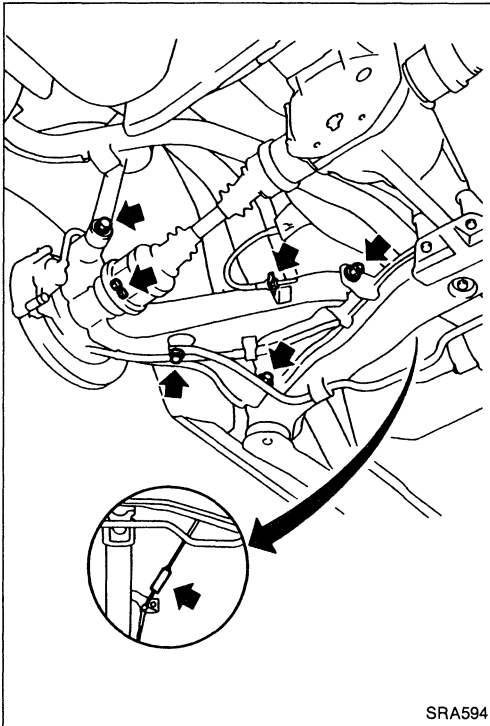

### Suspension Arm


- Remove axle shaft assembly. Refer to Disassembly in REAR AXLE.
- Remove stabilizer bar bolt.
- Disconnect parking cable.
- Disconnect shock absorber lower end.

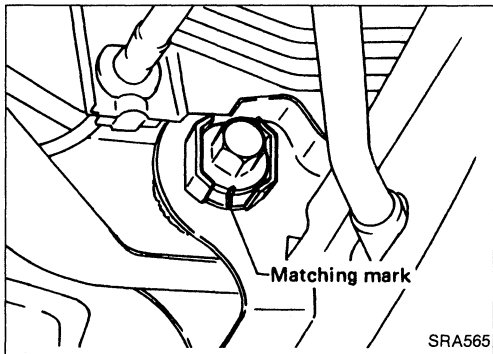

- Remove suspension arm pin.
- Before removing, put matching mark on suspension arm pin.**
- When installing, tighten suspension arm pin nut to specified torque after installing wheels and placing vehicle on ground under the unladen condition.
  - Adjust wheel alignment after installing suspension arm. Refer to Rear Wheel Alignment in CHECK AND ADJUSTMENT — On-vehicle.

### INSPECTION

- Check suspension arm for deformation or cracks. Replace if necessary.

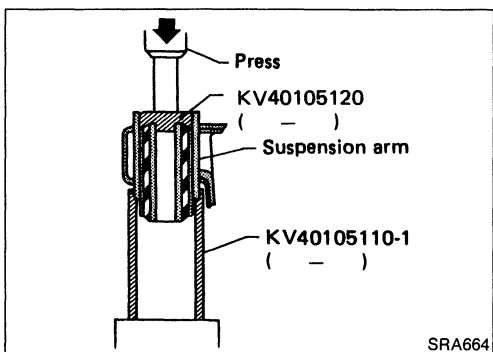

### Suspension Arm Bushing

#### REMOVAL


- Remove bushing with Tool.

## REAR SUSPENSION

### Suspension Arm Bushing (Cont'd)


#### INSPECTION

- Check rubber bushings for wear or other damage. Replace if necessary.

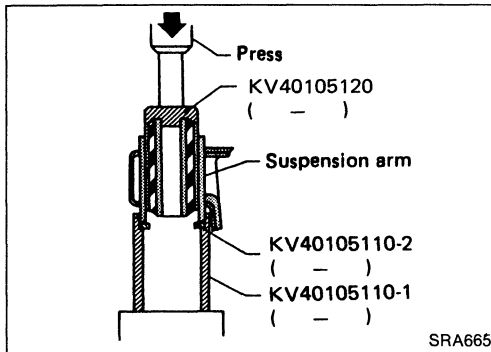

#### INSTALLATION

- Install bushing with Tool.
- Avoid misusing of inner bushing and outer bushing.**

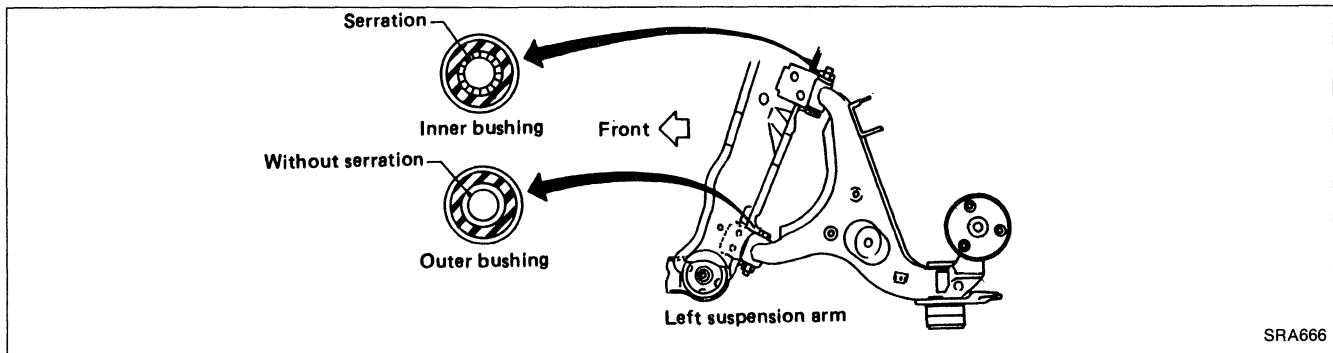


### Suspension Member

#### INSPECTION

- Check differential mounting insulator for deformation or cracks. Replace if necessary.
- Check suspension member for deformation or cracks. Replace if necessary.
- Check insulator on suspension member for deformation or cracks. Replace if necessary.


- a. If member insulator is deformed or cracked, replace using Tool.

**Insulator diameter:  
76.3 mm (3.004 in)**


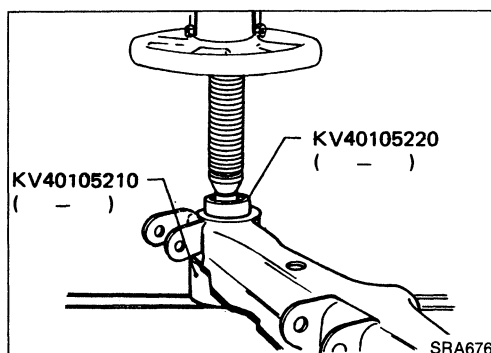


## REAR SUSPENSION

### Suspension Member (Cont'd)

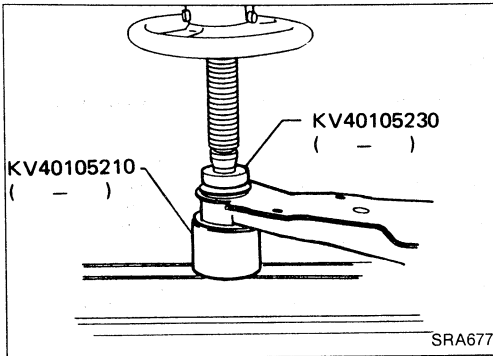

- b. Install member insulator from bottom of suspension member with Tool. Be sure to install in its proper place.

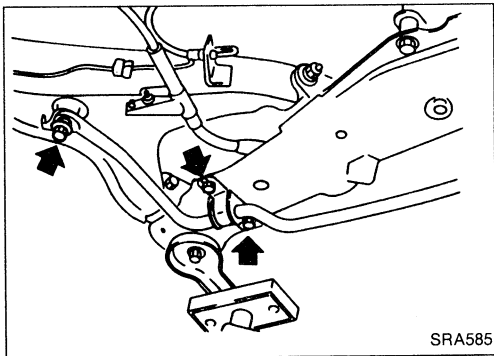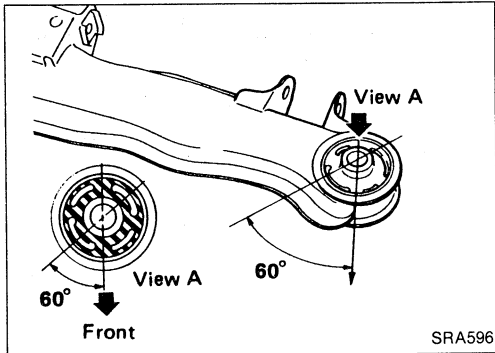


### Stabilizer Bar

#### REMOVAL

Remove connecting rod and clamp.

#### INSPECTION

- Check stabilizer bar for deformation or cracks. Replace if necessary.
- Check rubber bushings for deterioration or cracks. Replace if necessary.

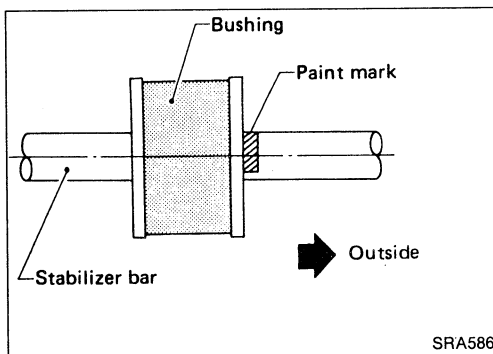

#### INSTALLATION

- Install bushing, aligning with paint mark.



# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## General Specifications

### COIL SPRING

	Model	All
Wire diameter	mm (in)	12 (0.47)
Coil diameter	mm (in)	110 (4.33)
Free length	mm (in)	367 (14.45)
Spring constant N/mm (kg/mm, lb/in)		23.3 (2.38, 133.3)
Identification color		Light blue

### SHOCK ABSORBER

	Model	All		
Piston rod diameter mm (in)		12.5 (0.492)		
Damping force [at 0.1 m (0.3 ft)/sec.] N (kg, lb)	Soft	Normal	Firm	
	275 - 412 (28 - 42, 62 - 93)	745 - 1,020 (76 - 104, 168 - 229)	951 - 1,304 (97 - 133, 214 - 293)	
Expansion				
Compression	186 - 304 (19 - 31, 42 - 68)	314 - 471 (32 - 48, 71 - 106)	412 - 608 (42 - 62, 93 - 137)	


### REAR STABILIZER BAR

Stabilizer diameter	mm (in)	22.2 (0.874)
---------------------	---------	--------------

### DRIVE SHAFT


Joint type		
Final drive side		TS82C
Wheel side		TS82F
Diameter	mm (in)	
Final drive side "D"		30 (1.18)
Grease		
Quality		Nissan genuine grease or equivalent
Specified amount	g (oz)	
Final drive side		155 - 165 (5.47 - 5.82)
Wheel side		185 - 195 (6.52 - 6.88)
Boot length	mm (in)	
Final drive side "L <sub>1</sub> "		110.5 - 112.5 (4.35 - 4.43)
Wheel side "L <sub>2</sub> "		

#### Final drive side

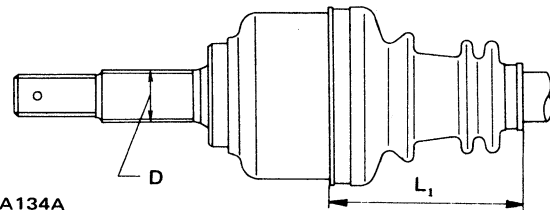

SRA134A

#### Wheel side

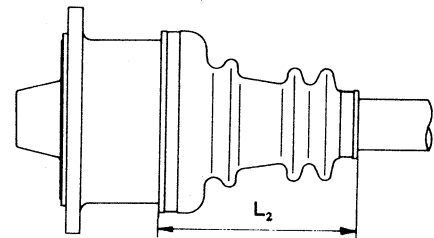

SRA133A

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Inspection and Adjustment

### WHEEL ALIGNMENT (Unladen\*)

Camber	degree	-1°5' to 20'
Total toe-out	mm (in)	0.2 - 4.2 (0.008 - 0.165)
	degree	1' - 22'

### WHEEL RUNOUT (Radial and lateral)

Wheel type		Aluminum wheel
Radial runout limit	mm (in)	0.3 (0.012)
Lateral runout limit	mm (in)	

\*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

### WHEEL BEARING

Axial end play limit	mm (in)	0.05 (0.0020)
Wheel bearing lock nut		
Tightening torque		127 - 177
N·m (kg-m, ft-lb)		(13 - 18, 94 - 130)

# BRAKE SYSTEM

## SECTION **BR**

### CONTENTS


PRECAUTIONS AND PREPARATION .....	BR- 2
CHECK AND ADJUSTMENT .....	BR- 3
AIR BLEEDING .....	BR- 4
BRAKE HYDRAULIC LINE .....	BR- 5
CONTROL VALVE .....	BR- 7
BRAKE PEDAL AND BRACKET .....	BR- 8
MASTER CYLINDER .....	BR-10
BRAKE BOOSTER .....	BR-13
VACUUM HOSE .....	BR-15
FRONT DISC BRAKE .....	BR-17
REAR DISC BRAKE .....	BR-21
REAR DISC BRAKE — Parking Drum Brake .....	BR-25
PARKING BRAKE CONTROL .....	BR-28
ANTI-LOCK BRAKING SYSTEM .....	BR-30
TROUBLE DIAGNOSES .....	BR-34
SERVICE DATA AND SPECIFICATIONS (S.D.S.) .....	BR-58

**BR**

# PRECAUTIONS AND PREPARATION

## Precautions

- Use brake fluid "DOT 3".
- Never reuse drained brake fluid.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
- To clean or wash all parts of master cylinder, disc brake caliper and wheel cylinder, use clean brake fluid.
- Never use mineral oils such as gasoline or kerosene. They will ruin rubber parts of hydraulic system.

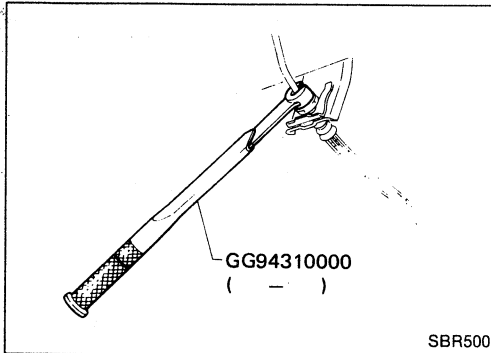





- Use Tool when removing and installing brake tube.

### WARNING:


- Clean brake pads and shoes with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.

## Preparation

### SPECIAL SERVICE TOOL

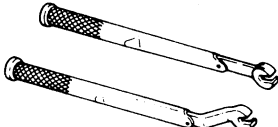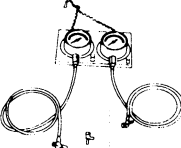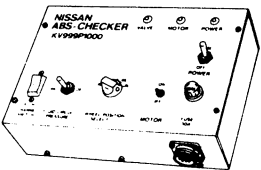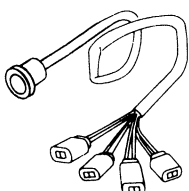Tool number (Kent-Moore No.) Tool name	Description
GG94310000 ( — ) Flare nut torque wrench	 <p>Removing and installing each brake piping</p>
KV991V0010 ( — ) Brake fluid pressure gauge	 <p>Measuring brake fluid pressure</p>
KV999P1000 ( — ) A.B.S. checker	 <p>Checking brake fluid pressure of A.B.S. actuator</p>
KV999P1010 ( — ) A.B.S. checker adapter harness	 <p>Checking brake fluid pressure of A.B.S. actuator</p>

## CHECK AND ADJUSTMENT

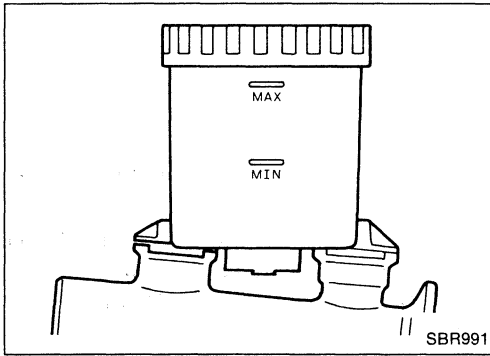

### Checking Brake Fluid Level


- Check fluid level in reservoir tank. It should be between Max. and Min. lines on reservoir tank.
- If fluid level is extremely low, check brake system for leaks.
- When brake warning lamp comes on even when parking brake lever is released, check brake system for leaks.

### Checking Brake Line

#### CAUTION:

If leakage occurs around joints, retighten or, if necessary, replace damaged parts.

1. Check brake lines (tubes and hoses) for cracks, deterioration or other damage. Replace any damaged parts.
2. Check for oil leakage by fully depressing brake pedal while engine is running.

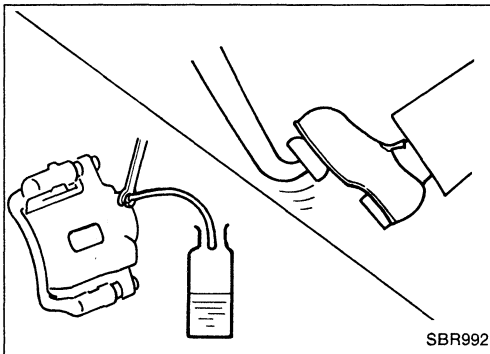

### Changing Brake Fluid

#### CAUTION:


- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

1. Connect a vinyl tube to each air bleeder valve.
2. Drain brake fluid from each air bleeder valve by depressing brake pedal.
3. Refill until new brake fluid comes out of each air bleeder valve.

Use same procedure as in bleeding hydraulic system to refill brake fluid.

Refer to "Bleeding Procedure" in "AIR BLEEDING".


# AIR BLEEDING

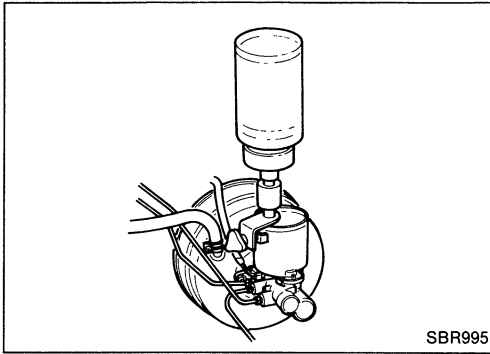

## Bleeding Procedure

### CAUTION:

- Carefully monitor brake fluid level at master cylinder during bleeding operation.
- Fill reservoir with new brake fluid "DOT 3". Make sure it is full at all times while bleeding air out of system.
- Place a container under master cylinder to avoid spillage of brake fluid.

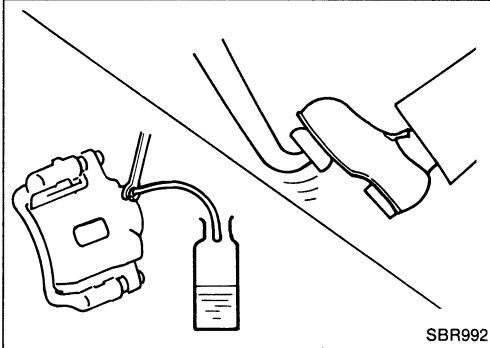

1. Connect a transparent vinyl tube to air bleeder valve.
2. Fully depress brake pedal several times.
3. With brake pedal depressed, open air bleeder valve to release air.
4. Close air bleeder valve.
5. Release brake pedal slowly.
6. Repeat steps 2. through 5. until clear brake fluid comes out of air bleeder valve.

- Bleed air in the following order.

### Without Anti-lock Braking System:


Left rear caliper  
↓  
Right rear caliper  
↓  
Left front caliper  
↓  
Right front caliper

### With Anti-lock Braking System:


Left rear caliper  
↓  
Right rear caliper  
↓  
Left front caliper  
↓  
Right front caliper  
↓  
Front side air bleeder on A.B.S. actuator  
↓  
Rear side air bleeder on A.B.S. actuator



# BRAKE HYDRAULIC LINE

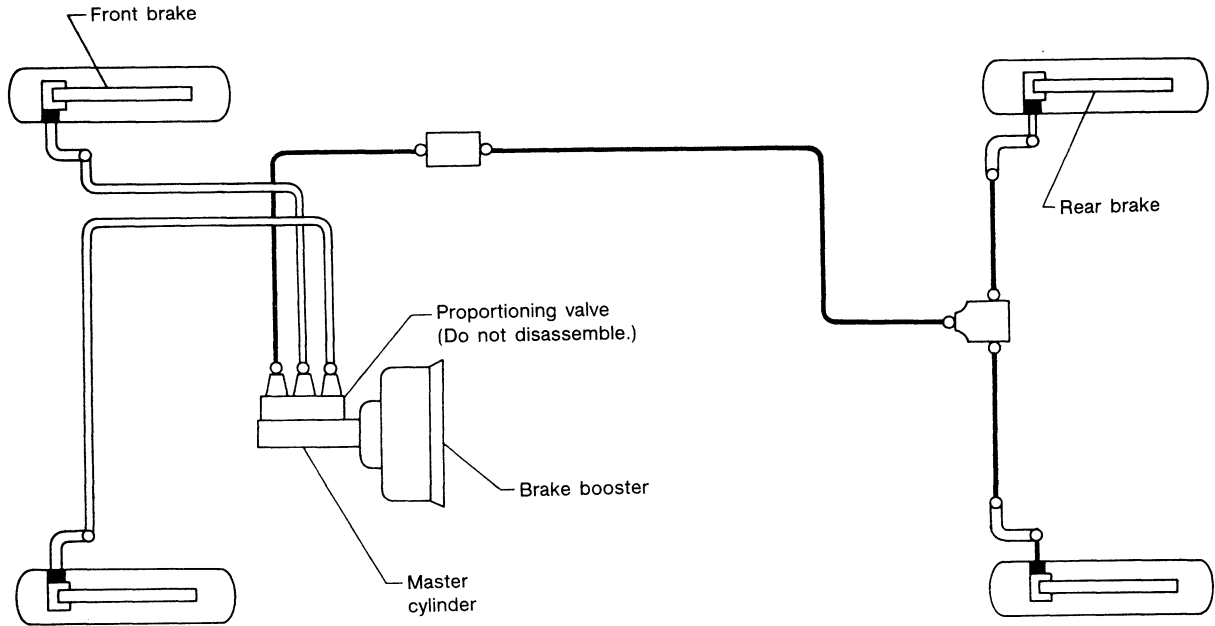


## Without Anti-lock Braking System (A.B.S.)

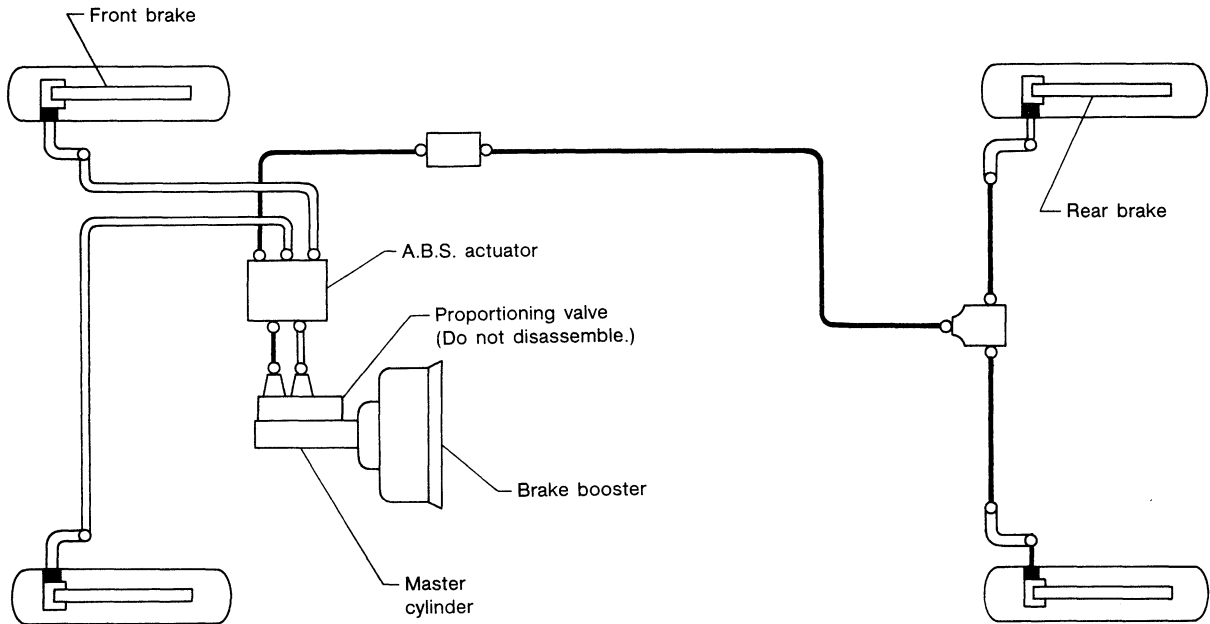



## With Anti-lock Braking System (A.B.S.)

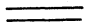

 : Primary line  
 : Secondary line

 : N·m (kg-m, ft-lb)  
 : Flare nut  
 15 - 18 (1.5 - 1.8, 11 - 13)  
 : Connecting bolt  
 17 - 20 (1.7 - 2.0, 12 - 14)

# BRAKE HYDRAULIC LINE

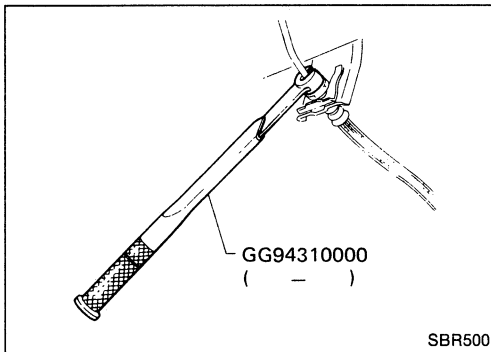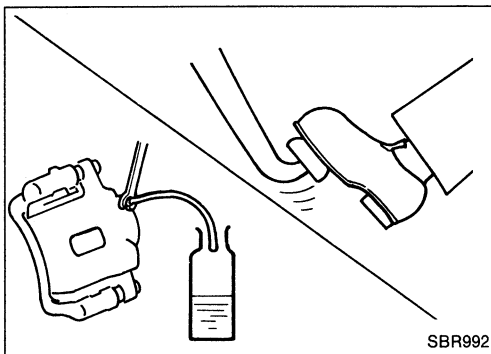

## Removal

### CAUTION:

Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

1. Connect a vinyl tube to air bleeder valve.
2. Drain brake fluid from each air bleeder valve by depressing brake pedal.
3. Remove flare nut securing brake tube to hose, then withdraw lock spring.
4. Cover openings to prevent entrance of dirt whenever disconnecting hydraulic line.
5. All hoses must be free from excessive bending, twisting and pulling.

## Inspection

Check brake lines (tubes and hoses) for cracks, deterioration or other damage. Replace any damaged parts.

## Installation

### CAUTION:

- Refill with new brake fluid "DOT 3".
  - Never reuse drained brake fluid.
1. Tighten all flare nuts and connecting bolts.

#### Specification:

##### Flare nut

15 - 18 N·m

(1.5 - 1.8 kg-m, 11 - 13 ft-lb)

##### Connecting bolt



17 - 20 N·m

(1.7 - 2.0 kg-m, 12 - 14 ft-lb)

2. Refill until new brake fluid comes out of each air bleeder valve.
3. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".



# CONTROL VALVE

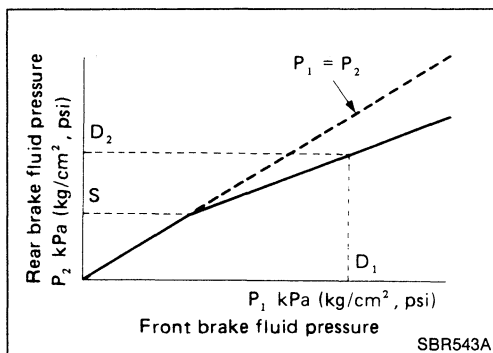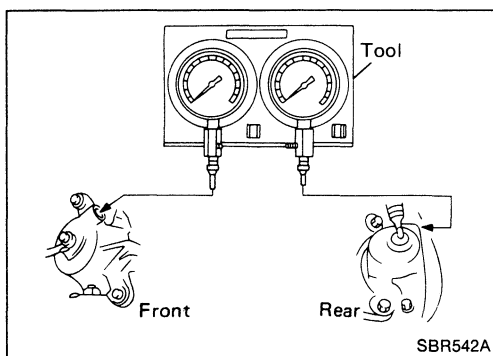

## Proportioning Valve

### INSPECTION

#### CAUTION:

- Carefully monitor brake fluid level at master cylinder.
- Use new brake fluid "DOT 3".
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on paint areas, wash it away with water immediately.

1. Connect Tool to air bleeders of front and rear brakes on either L.H. and R.H. side.

**Tool number: KV991V0010**

( — )

2. Bleed air from the Tool.
3. Check fluid pressure by depressing brake pedal.

**For models with A.B.S. disconnect harness connectors from A.B.S. actuator before checking.**



Unit: kPa (kg/cm<sup>2</sup>, psi)

Applied pressure (Front brake)	D <sub>1</sub>	6,375 (65, 924)
Output pressure (Rear brake)	D <sub>2</sub>	4,119 - 4,511 (42 - 46, 597 - 654)

4. Bleed air after disconnecting the Tool. Refer to "Bleeding Procedure" in "AIR BLEEDING".

# BRAKE PEDAL AND BRACKET

## Removal and Installation

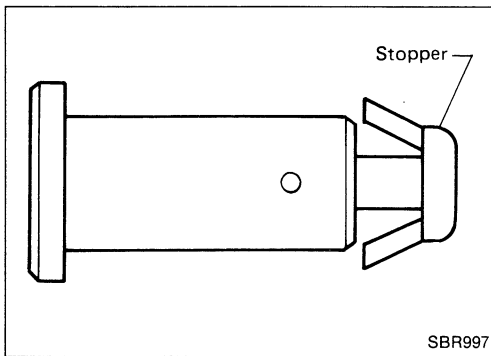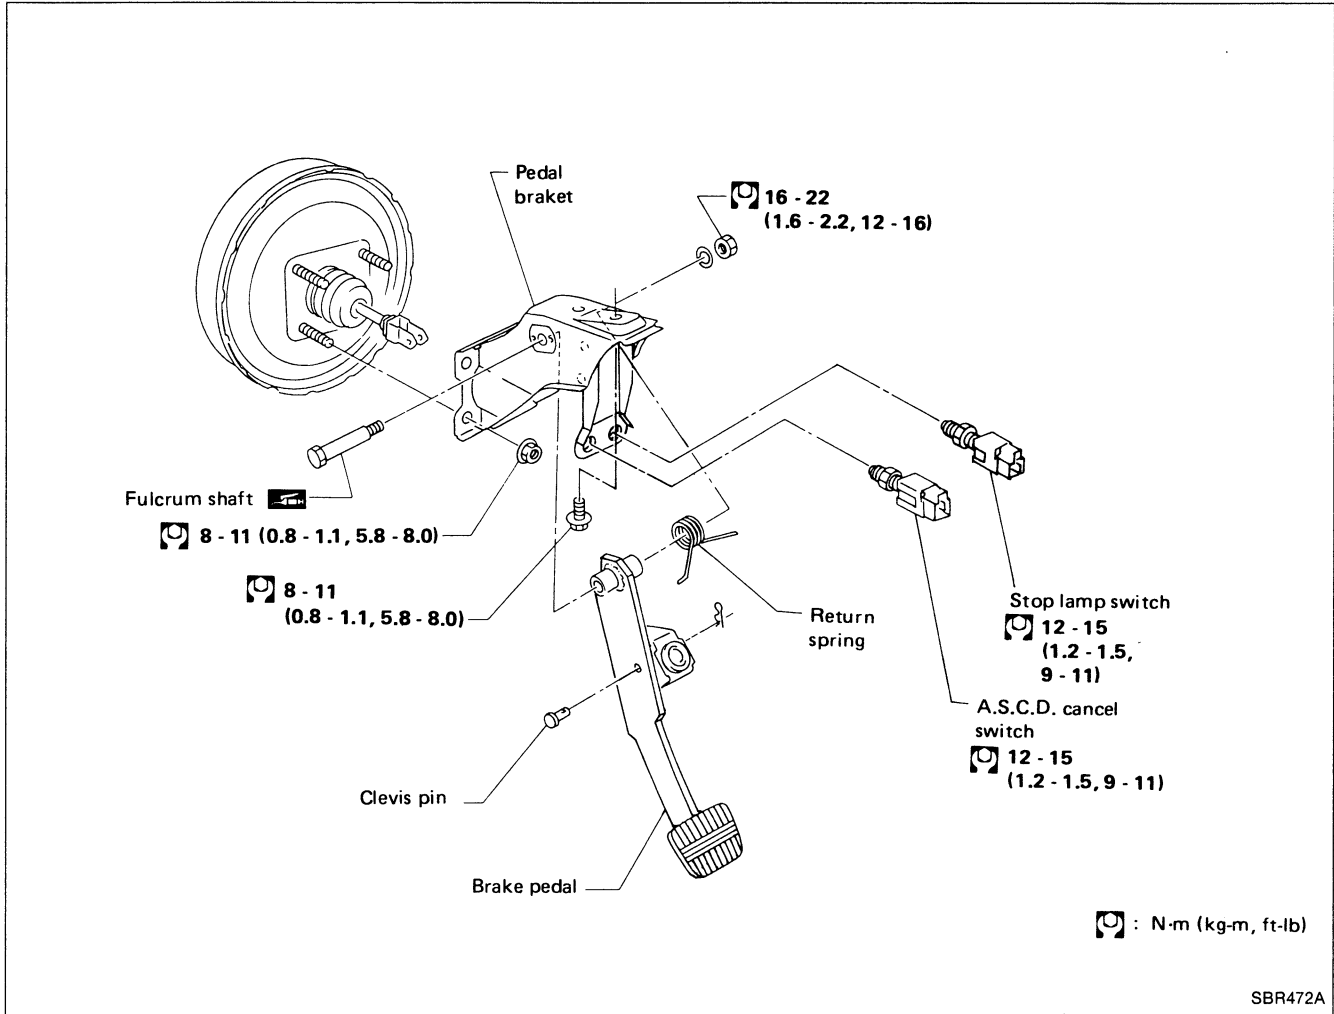


## Inspection

Check brake pedal for following items.

- Brake pedal bend
- Clevis pin deformation
- Crack of any welded portion
- Crack or deformation of clevis pin stopper


# BRAKE PEDAL AND BRACKET

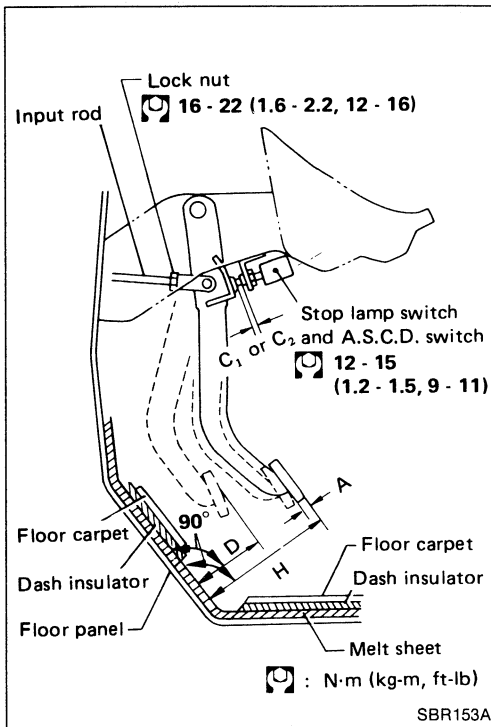

## Adjustment

Check brake pedal free height from dash reinforcement panel. Adjust if necessary.

- H: Free height**  
199 - 209 mm (7.83 - 8.23 in)
- D: Depressed height**  
110 mm (4.33 in) or less  
Under force of 490 N (50 kg, 110 lb)  
with engine running
- C<sub>1</sub>, C<sub>2</sub>: Clearance between pedal stopper and threaded end of stop lamp switch and A.S.C.D. switch**  
0.3 - 1.0 mm (0.012 - 0.039 in)
- A: Pedal free play**  
1 - 3 mm (0.04 - 0.12 in)

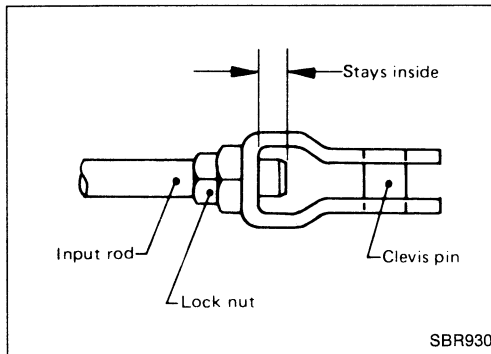

1. Loosen lock nut and adjust pedal free height by turning brake booster input rod. Then tighten lock nut.

**Make sure that tip of input rod stays inside.**

2. Loosen lock nut and adjust clearance "C<sub>1</sub>" and "C<sub>2</sub>" with stop lamp switch and A.S.C.D. switch respectively. Then tighten lock nuts.


3. Check pedal free play.

**Make sure that stop lamps go off when pedal is released.**

4. Check brake pedal's depressed height while engine is running.

If depressed height is below specified value, check brake system for leaks, accumulation of air or any damage to components (master cylinder, wheel cylinder, etc.); then make necessary repairs.

# MASTER CYLINDER

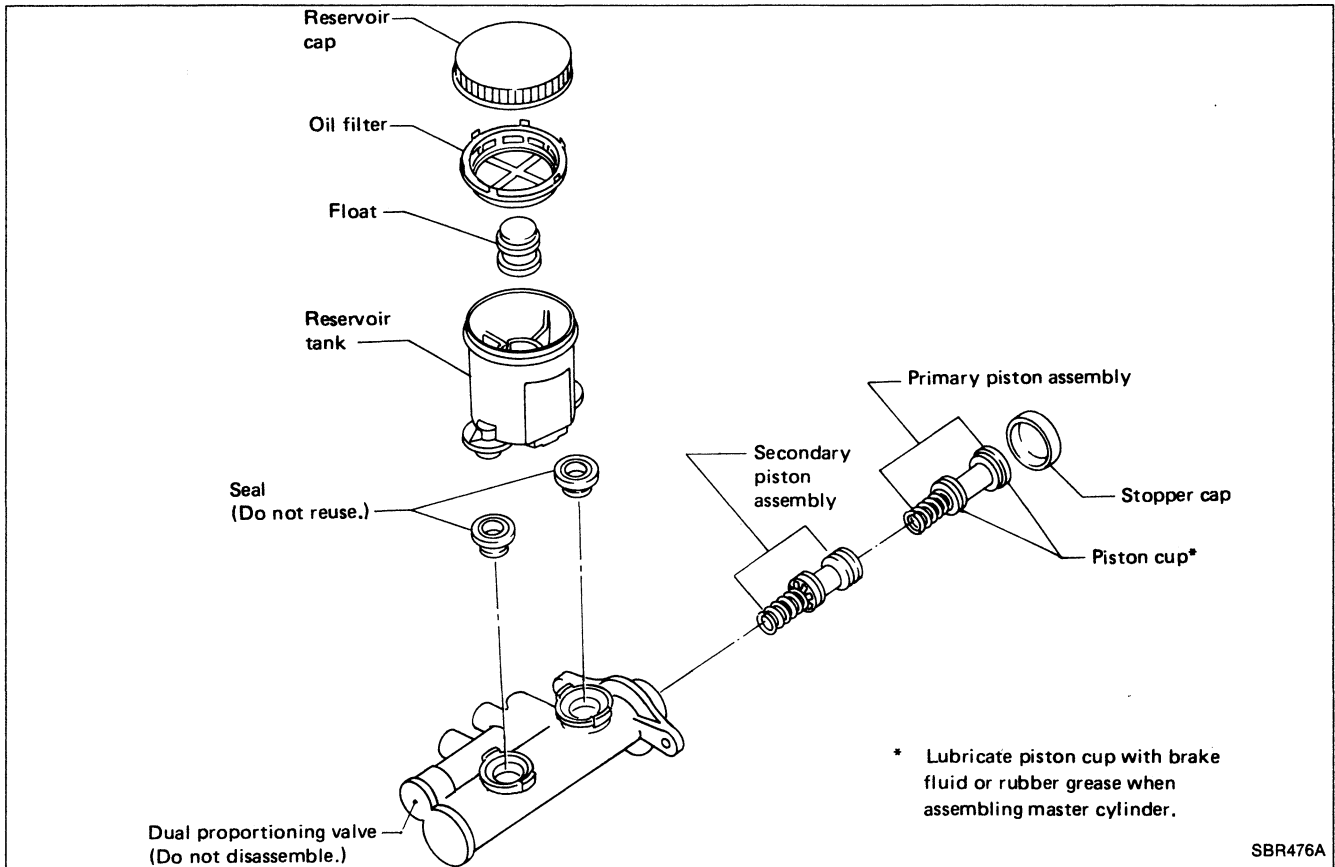


## Removal

### CAUTION:

Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.

1. Connect a vinyl tube to air bleeder valve.
2. Drain brake fluid from each air bleeder valve, depressing brake pedal to empty fluid from master cylinder.
3. Remove brake pipe flare nuts.
4. Remove master cylinder mounting nuts.

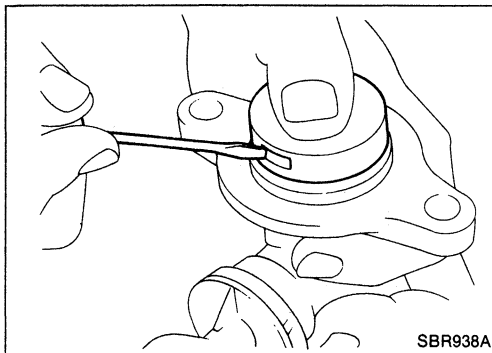


## Disassembly

1. Bend claws of stopper cap outward.

# MASTER CYLINDER

## Disassembly (Cont'd)

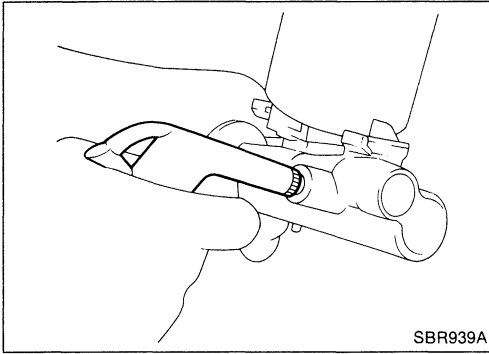

2. Remove piston assemblies.

**If it is difficult to remove secondary piston assembly, gradually apply compressed air through fluid outlet.**

3. Draw out reservoir tank.

## Inspection

Check for the following items.

**Replace any part if damaged.**

**Master cylinder:**

- Pin holes or scratches on inner wall.

**Piston:**

- Deformation of or scratches on piston cups.



**Stopper cap:**

- Damage or excessive deformation of claws.

## Assembly

1. Insert secondary piston assembly. Then insert primary piston assembly.

**Pay attention to direction of piston cups in figure at left. Also, insert pistons squarely to avoid scratches on cylinder bore.**

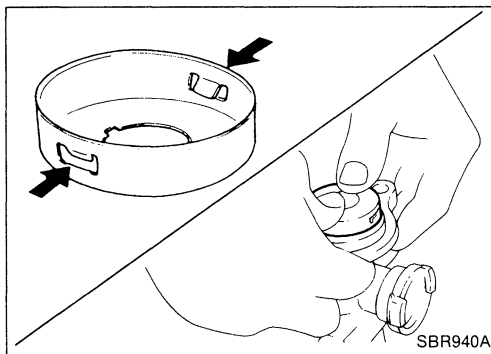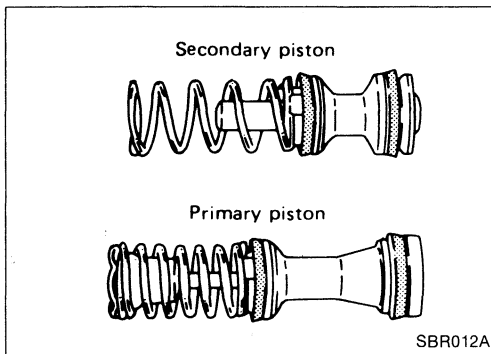

2. Bend claws inward.

3. Install stopper cap.

4. Install seals.

5. Push reservoir tank into master cylinder.

# MASTER CYLINDER


---

## Installation

### CAUTION:

- **Refill with new brake fluid "DOT 3".**
  - **Never reuse drained brake fluid.**
1. Place master cylinder onto brake booster and secure mounting nuts lightly.
  2. Fit flare nuts to master cylinder.
  3. Tighten mounting nuts.  
**Specification:**  
**8 - 11 N·m**  
**(0.8 - 1.1 kg-m, 5.8 - 8.0 ft-lb)**
  4. Tighten flare nuts.  
**Specification:**  
**15 - 18 N·m**  
**(1.5 - 1.8 kg-m, 11 - 13 ft-lb)**
  5. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".


# BRAKE BOOSTER

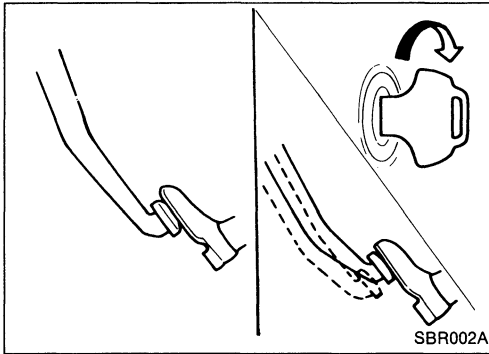

## On-vehicle Service

### OPERATING CHECK


- Depress brake pedal several times with engine off, and check that there is no change in pedal stroke.
- Depress brake pedal, then start engine. If pedal goes down slightly, operation is normal.

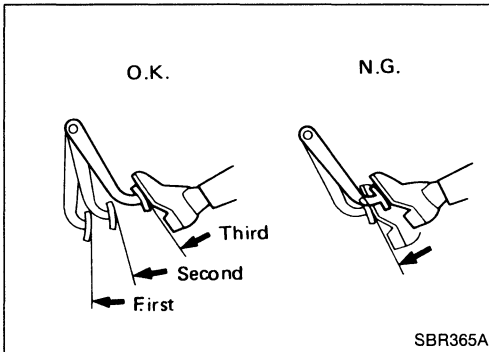

### AIRTIGHT CHECK

- Start engine, and stop it after one or two minutes. Depress brake pedal several times slowly. If pedal goes further down the first time and gradually rises after second or third time, booster is airtight.
- Depress brake pedal while engine is running, and stop engine with pedal depressed. If there is no change in pedal stroke after holding pedal down **30 seconds**, brake booster is airtight.

## Removal

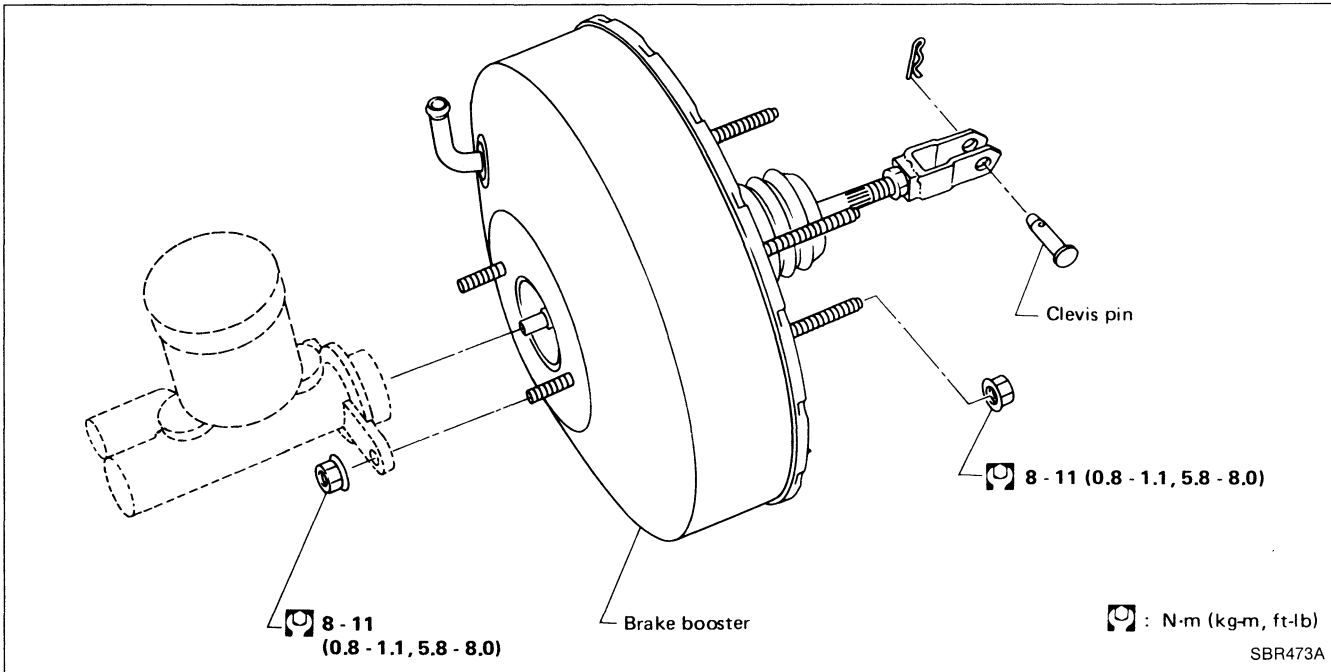


### CAUTION:

- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, wash it away with water immediately.
- Be careful not to deform or bend brake pipes, during removal of booster.

# BRAKE BOOSTER

## Removal (Cont'd)

1. Remove master cylinder. Refer to "Removal" in "MASTER CYLINDER".
2. Remove clevis pin (brake pedal to booster input rod).
3. Remove mounting nuts (brake pedal bracket to booster).
4. Draw out brake booster.

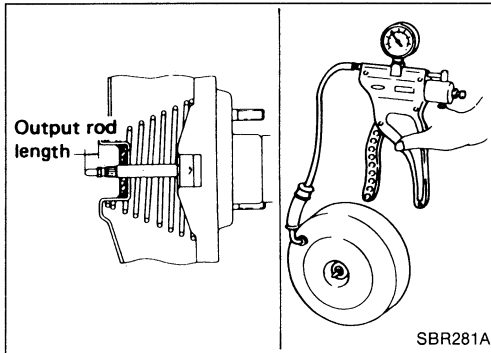

## Inspection

### OUTPUT ROD LENGTH CHECK

1. Supply brake booster with vacuum of -66.7 kPa (-500 mmHg, -19.69 inHg) using a handy vacuum pump.
2. Check output rod length.

#### Specified length:

**10.275 - 10.525 mm (0.4045 - 0.4144 in)**

## Installation

### CAUTION:

- Be careful not to deform or bend brake pipes, during installation of booster.
- Replace clevis pin if damaged.
- Refill with new brake fluid "DOT 3".
- Never reuse drained brake fluid.

1. Fit booster, then secure mounting nuts (brake pedal bracket to master cylinder) lightly.
2. Connect brake pedal and booster input rod with clevis pin.
3. Secure mounting nuts.

#### Specification:

**8 - 11 N·m**



**(0.8 - 1.1 kg-m, 5.8 - 8.0 ft-lb)**

4. Install master cylinder. Refer to "Installation" in "MASTER CYLINDER".
5. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".



# VACUUM HOSE


## Removal and Installation

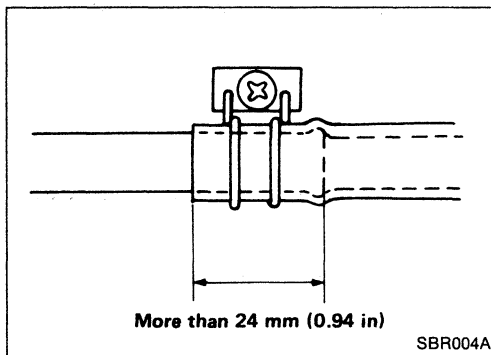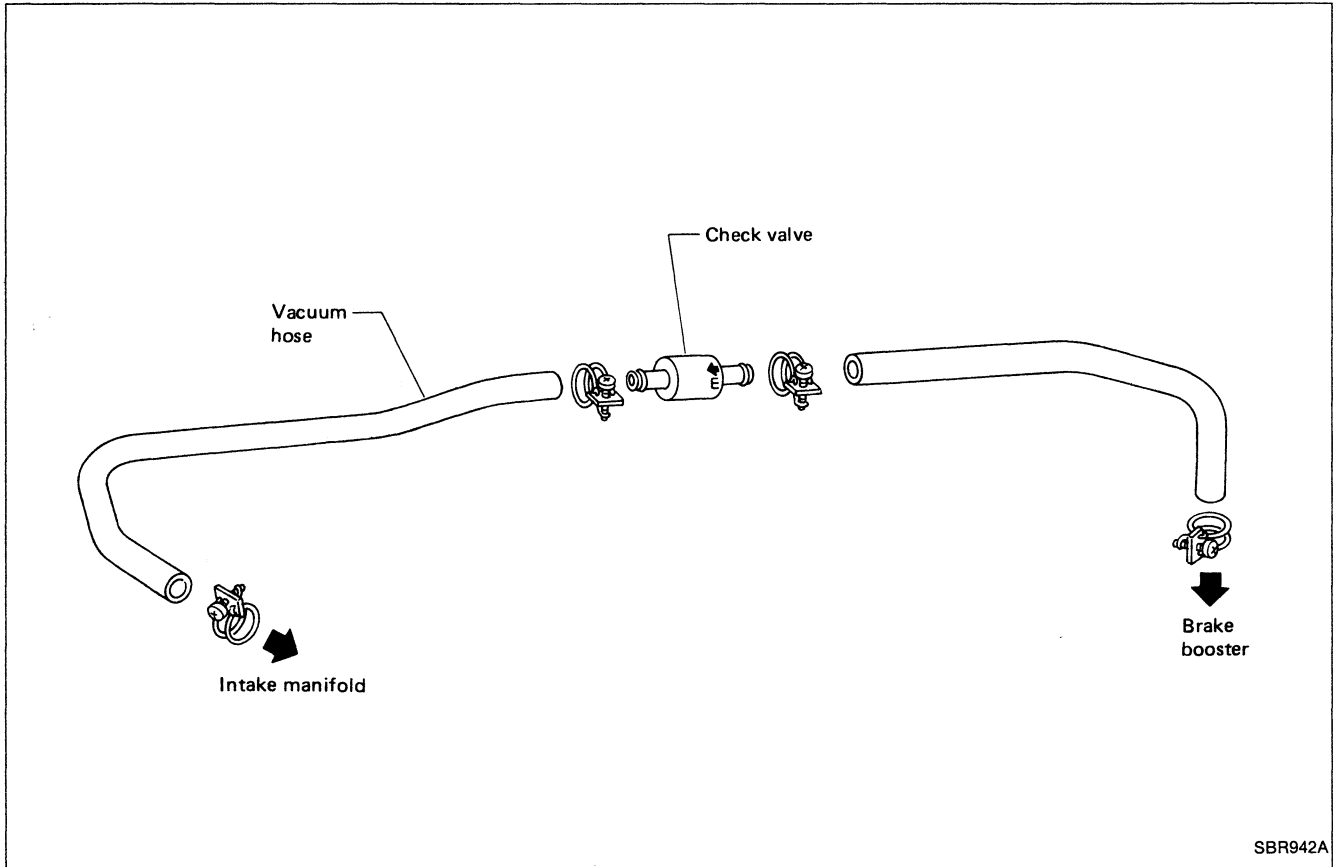

### CAUTION:


When installing vacuum hoses, pay attention to the following points.

- Do not apply any oil or lubricants to vacuum hose and check valve.
- Insert vacuum tube into vacuum hose more than 24 mm (0.94 in).

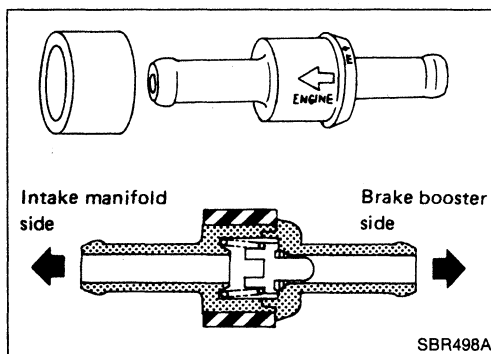

- Install check valve, paying attention to its direction.


# VACUUM HOSE

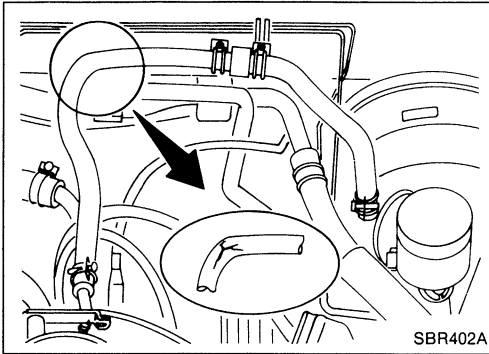

## Inspection

### HOSES AND CONNECTORS

Check vacuum lines, connections and check valve for airtightness, improper attachment chafing and deterioration.

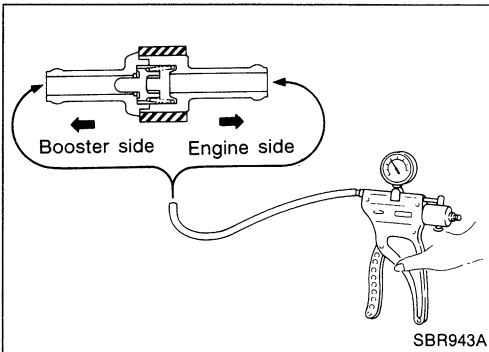

### CHECK VALVE

Check vacuum with a vacuum pump.

Connect to booster side	Vacuum should exist.
Connect to engine side	Vacuum should not exist.

# FRONT DISC BRAKE


## Pad Replacement

### WARNING:


Clean brake pads with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.

### CAUTION:

- When cylinder body is open, do not depress brake pedal because piston will pop out.
- Be careful not to damage piston boot or get oil on rotor. Always replace shims in replacing pads.
- If shims are rusted or show peeling of the rubber coat, replace them with new shims.
- It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly. In this case, suspend cylinder body with wire so as not to stretch brake hose.

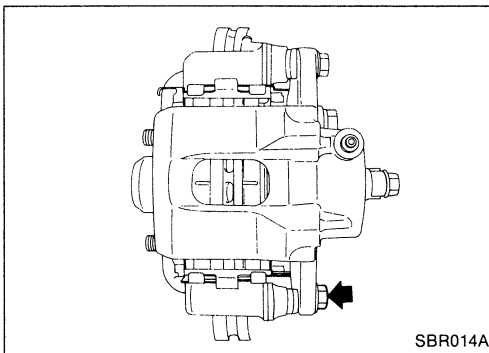

1. Remove master cylinder reservoir cap.
2. Remove pin bolt.

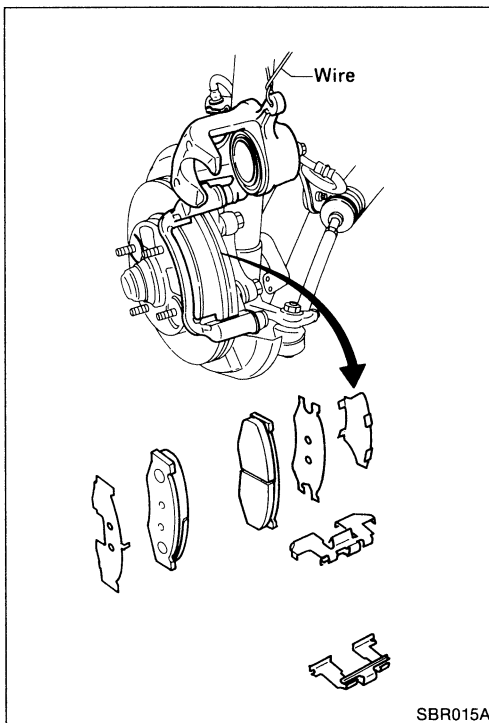


3. Open cylinder body upward. Then remove pad retainers, and inner and outer shims.

### Pad wear limit:

2.0 mm (0.079 in)

Carefully monitor brake fluid level because brake fluid will return to reservoir when pushing back piston.

# FRONT DISC BRAKE

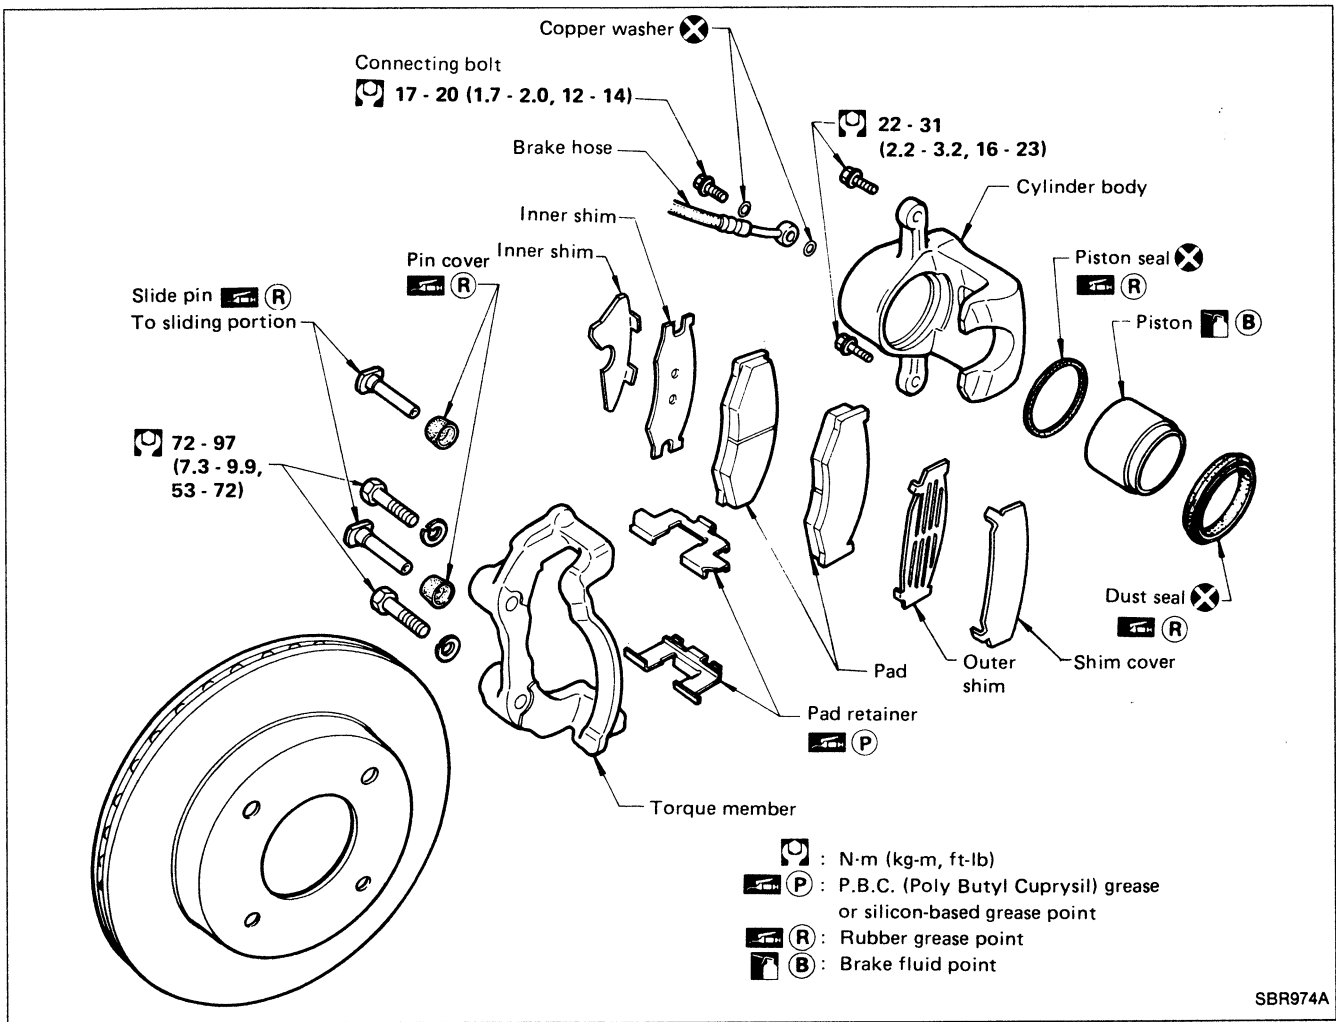


## Removal

### WARNING:

Clean brake pads with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.


### CAUTION:

Suspend caliper assembly with wire so as not to stretch brake hose.

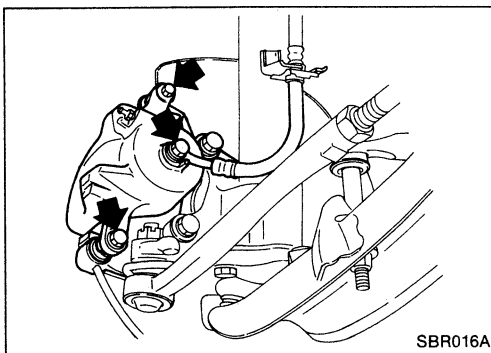

Remove torque member fixing bolts and connecting bolt. It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly.

# FRONT DISC BRAKE

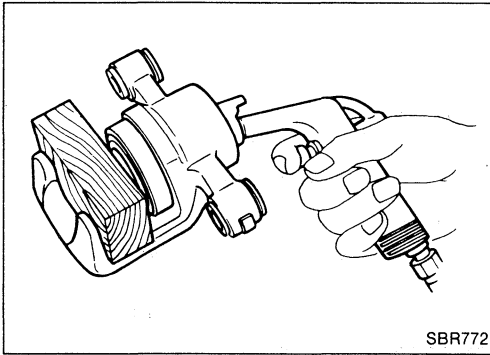

## Disassembly

### WARNING:

Do not place your fingers in front of piston.

### CAUTION:

Do not scratch or score cylinder wall.

1. Push out piston with dust seal with compressed air.
2. Remove piston seal with suitable tool.

## Inspection — Caliper

### CYLINDER BODY

- Check inside surface of cylinder for score, rust, wear, damage or presence of foreign materials. If any of the above conditions are observed, replace cylinder body.
- Minor damage from rust or foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary.

### CAUTION:

Use brake fluid to clean. Never use mineral oil.

### PISTON

Check piston for score, rust, wear, damage or presence of foreign materials. Replace if any of the above conditions are observed.

### CAUTION:

Piston sliding surface is plated. Do not polish with emery paper even if rust or foreign materials are stuck to sliding surface.


### SLIDE PIN, PIN BOLT, AND PIN COVER

Check for wear, cracks or other damage. Replace if any of the above conditions are observed.

## Inspection — Rotor

### RUBBING SURFACE

Check rotor for roughness, cracks or chips.

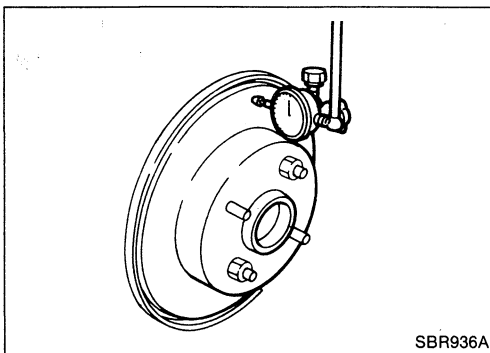

### RUNOUT

1. Secure rotor to wheel hub with two nuts (M12 x 1.25).
2. Check runout using a dial indicator.

Make sure that axial end play is within the specifications before measuring. Refer to section RA.

#### Rotor repair limit:

#### Maximum runout

(Total indicator reading at center of rotor pad contact surface)


0.07 mm (0.0028 in)

## FRONT DISC BRAKE


### Inspection — Rotor (Cont'd)

#### THICKNESS

Rotor repair limit:  
Minimum thickness  
20.0 mm (0.787 in)

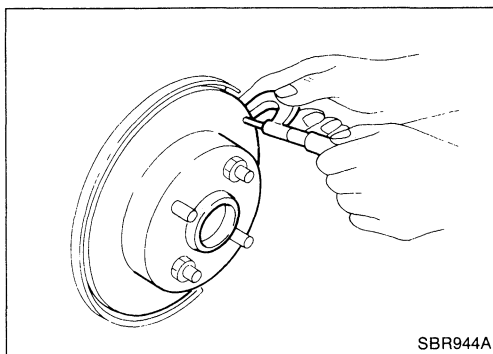

SBR944A

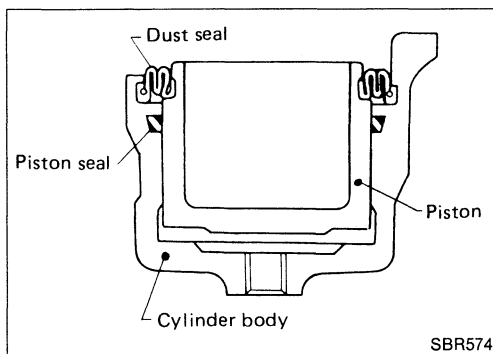


SBR574

### Assembly

#### CAUTION:

Pay attention to piston seal direction.

1. With dust seal fitted to piston, insert dust seal into groove on cylinder body and install piston.
2. Properly secure dust seal.

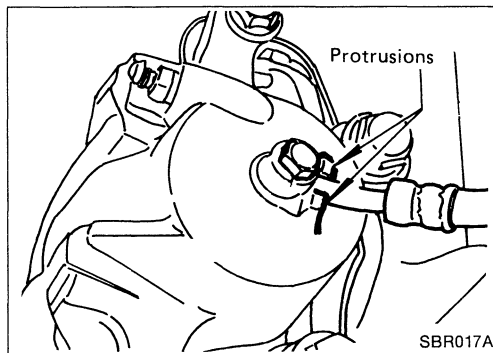

SBR017A

### Installation

#### CAUTION:

- Refill with new brake fluid "DOT 3".
  - Never reuse drained brake fluid.
1. Install brake hose to caliper securely.
  2. Install all parts and secure all bolts.
  3. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".

# REAR DISC BRAKE


## Pad Replacement

### WARNING:


Clean brake pads with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.

### CAUTION:

- When cylinder body is open, do not depress brake pedal because piston will pop out.
- Be careful not to damage piston boot or get oil on rotor. Always replace shims in replacing pads.
- If shims are rusted or show peeling of rubber coat, replace them with new shims.
- It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly. In this case, suspend cylinder body with wire so as not to stretch brake hose.

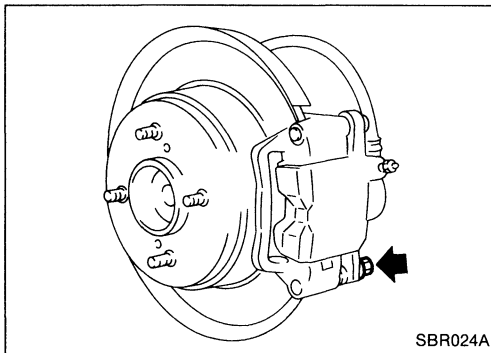

1. Remove master cylinder reservoir cap.
2. Remove pin bolt.

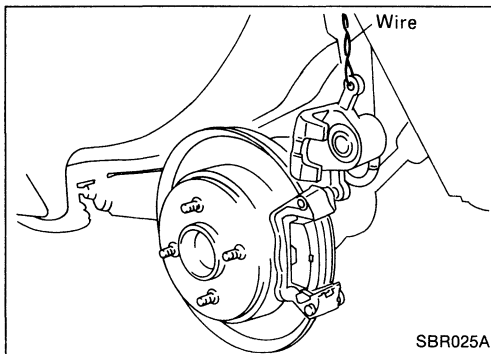


3. Open cylinder body upward. Then remove pad retainers, and inner and outer shims.

### Pad wear limit:

2.0 mm (0.079 in)

Carefully monitor brake fluid level because brake fluid will return to reservoir when pushing back piston.

# REAR DISC BRAKE

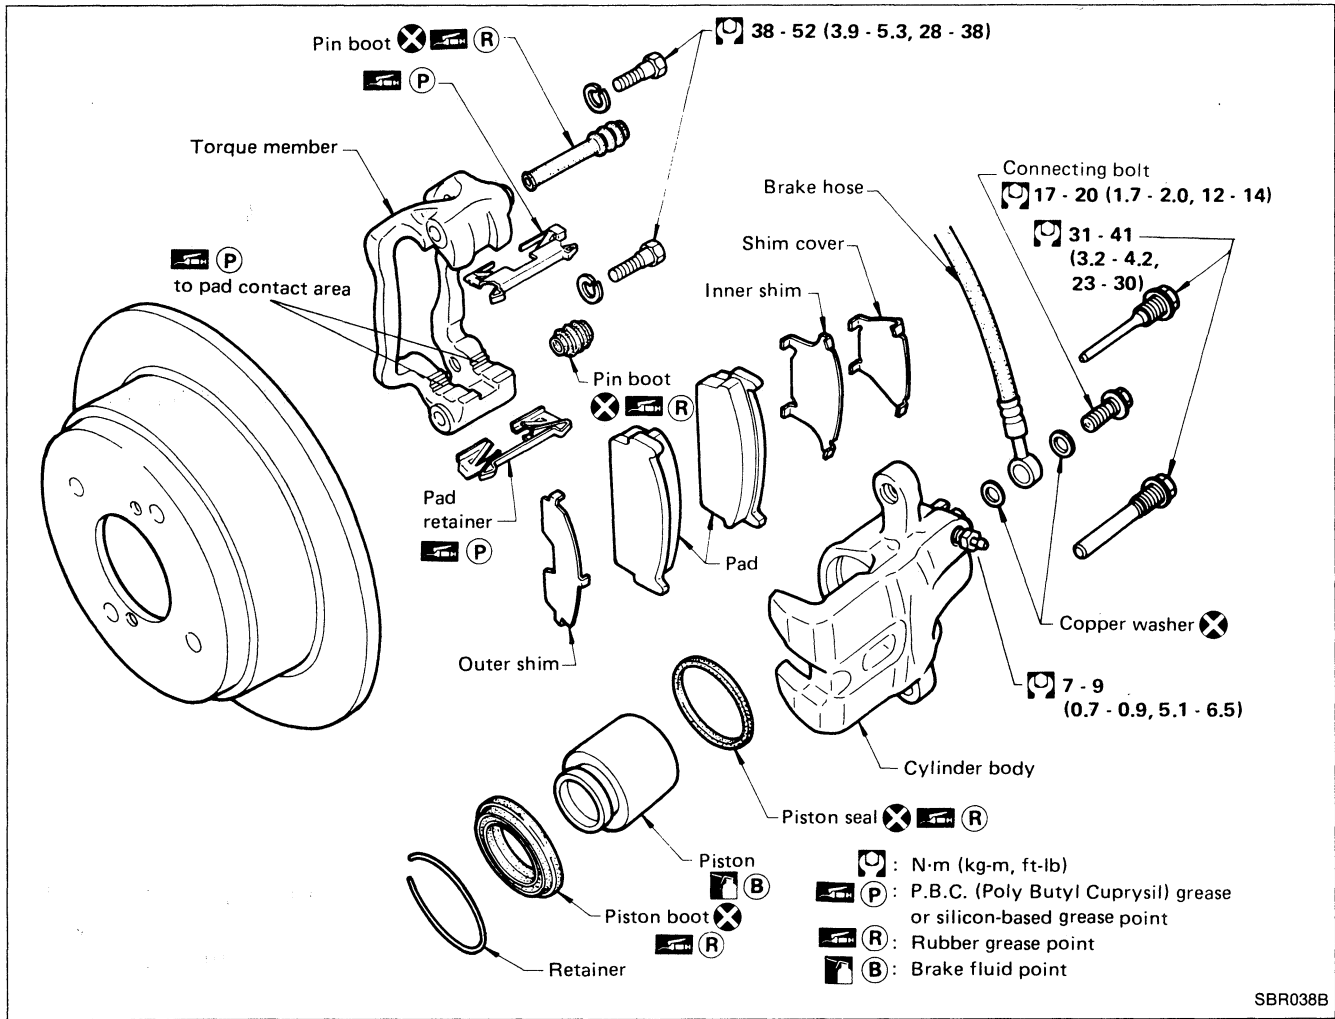


## Removal

### WARNING:

Clean brake pads with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.

### CAUTION:



Suspend caliper assembly with wire so as not to stretch brake hose.

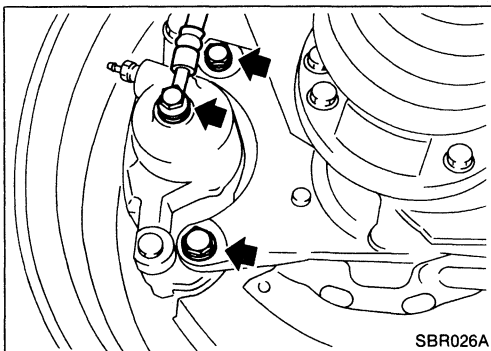

Remove torque member fixing bolts and connecting bolt. It is not necessary to remove connecting bolt except for disassembly or replacement of caliper assembly.



## REAR DISC BRAKE

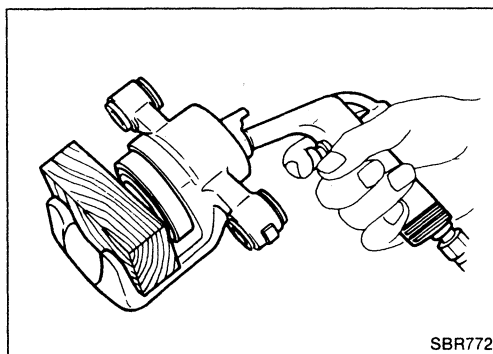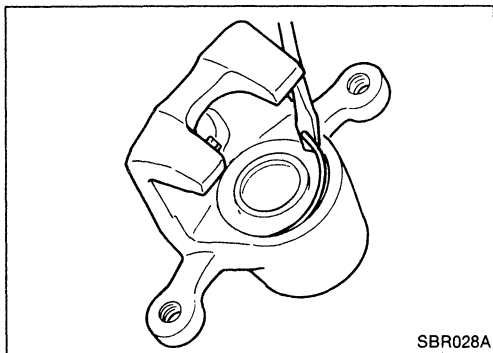

### Disassembly

#### WARNING:

Do not place your fingers in front of piston.

#### CAUTION:

Do not scratch or score cylinder wall.

1. Remove dust cover retainer with a screwdriver.
2. Push out piston with dust seal with compressed air.
3. Remove piston seal with suitable tool.

### Inspection — Caliper

#### CYLINDER BODY

- Check inside surface of cylinder for score, rust, wear, damage or presence of foreign materials. If any of the above conditions are observed, replace cylinder body.
- Minor damage from rust or foreign materials may be eliminated by polishing surface with a fine emery paper. Replace cylinder body if necessary.

#### CAUTION:

Use brake fluid to clean. Never use mineral oil.

#### PISTON

Check piston for score, rust, wear, damage or presence of foreign materials. Replace if any of the above conditions are observed.

#### CAUTION:

Piston sliding surface is plated. Do not polish with emery paper even if rust or foreign materials are stuck to sliding surface.

#### SLIDE PIN, PIN BOLT, AND PIN COVER

Check for wear, cracks or other damage. Replace if any of the above conditions are observed.


### Inspection — Rotor

#### RUBBING SURFACE

Check rotor for roughness, cracks or chips.

## REAR DISC BRAKE

### Inspection — Rotor (Cont'd)

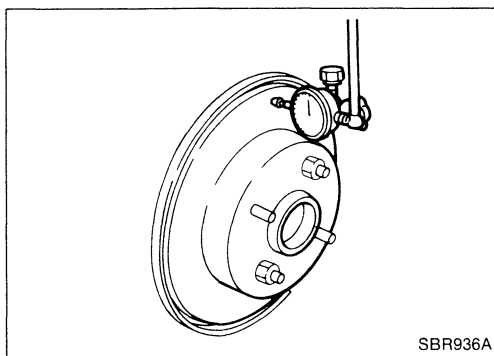

#### RUNOUT

1. Secure rotor to wheel hub with two nuts (M12 x 1.25).
2. Check runout using a dial indicator.


**Make sure that axial end play is within the specifications before measuring. Refer to section RA.**

**Rotor repair limit:**

**Maximum runout**

**(Total indicator reading at center of rotor pad contact surface)**

**0.07 mm (0.0028 in)**

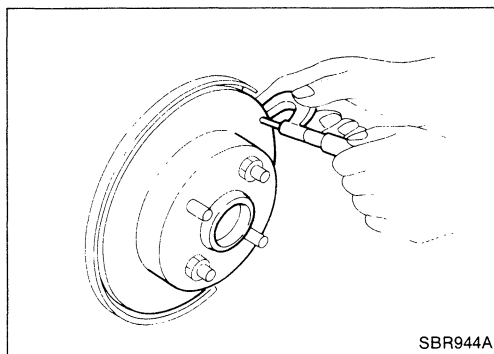


#### THICKNESS

**Rotor repair limit:**

**Minimum thickness**

**9.0 mm (0.354 in)**

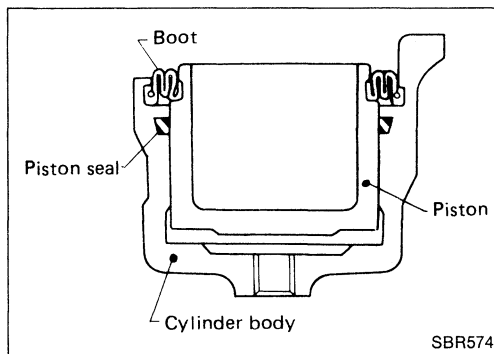


#### Assembly

##### CAUTION:

**Pay attention to piston seal direction.**

1. With dust seal fitted to piston, insert dust seal into groove on cylinder body and install piston.
2. Properly secure dust seal. Then install retainer.

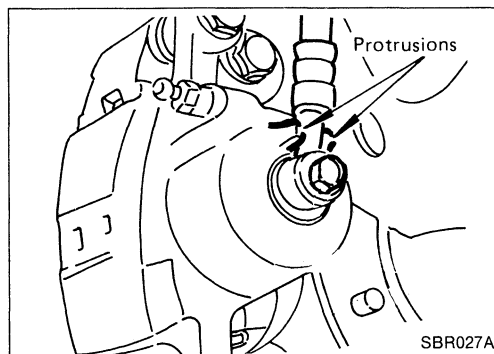


#### Installation

##### CAUTION:

- Refill with new brake fluid "DOT 3".
  - Never reuse drained brake fluid.
1. Install brake hose to caliper securely.
  2. Install all parts and secure all bolts.
  3. Bleed air. Refer to "Bleeding Procedure" in "AIR BLEEDING".

## REAR DISC BRAKE — Parking Drum Brake

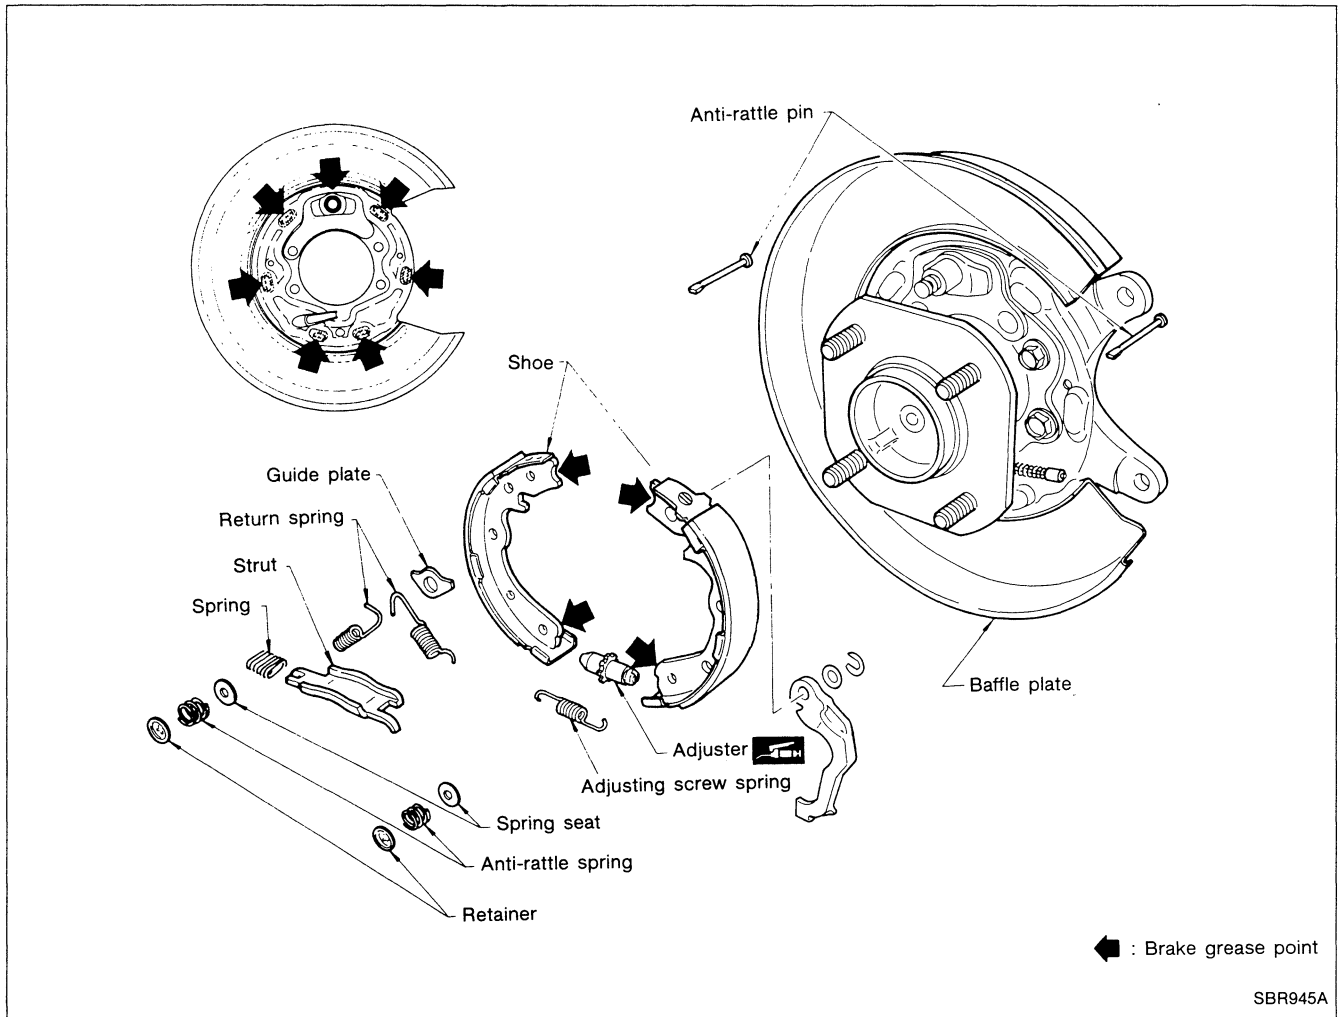


### Removal

#### WARNING:

Clean brake lining with a vacuum dust collector to minimize the hazard of airborne asbestos or other materials.

#### CAUTION:

Make sure parking brake lever is released completely.

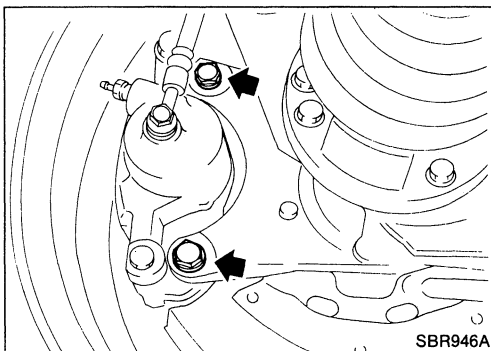


1. Remove torque member fixing bolts (Rear disc brake assembly mounting bolts).


**Suspend caliper assembly with wire so as not to stretch brake hose.**

## REAR DISC BRAKE — Parking Drum Brake


### Removal (Cont'd)

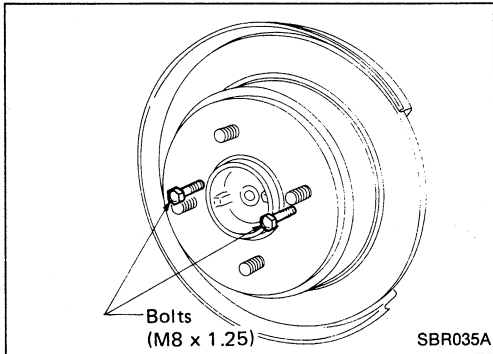


2. Remove disc rotor (With parking drum brake).  
**Tighten two bolts gradually if disc rotor is hard to remove.**

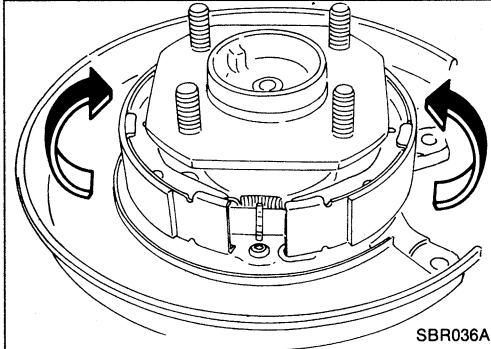

3. After removing retainer, remove spring by rotating shoes.  
**Be careful not to damage parking brake cable when separating it.**
4. Remove adjuster.
5. Remove strut.
6. Disconnect parking brake cable from toggle lever.

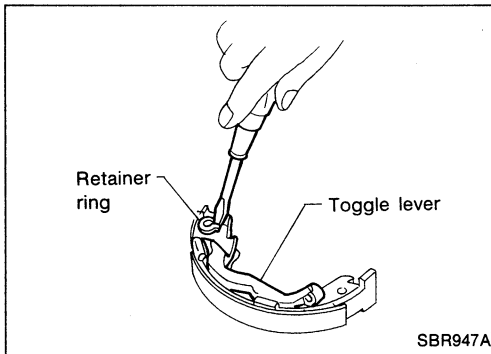


7. Remove retainer ring with a suitable tool. Then separate toggle lever and brake shoe.

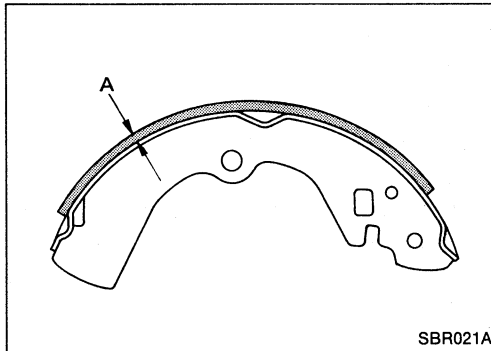

### Inspection

Check lining thickness.

**Lining wear limit (A):**  
**1.5 mm (0.059 in)**

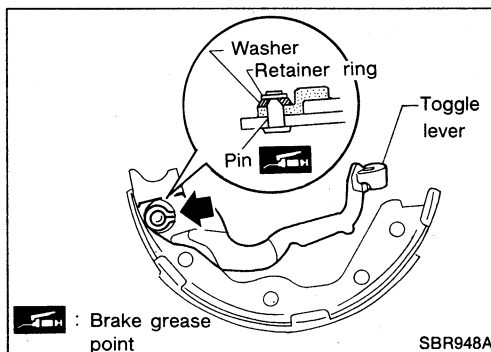


### Installation


1. Fit toggle lever to brake shoe with retainer ring.  
**Pay attention to retainer ring direction.**

## REAR DISC BRAKE — Parking Drum Brake


### Installation (Cont'd)

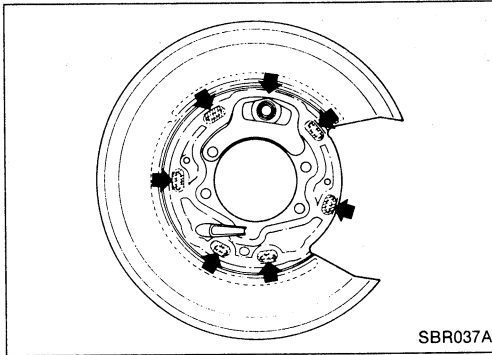


2. Apply brake grease to the contact areas shown at left.

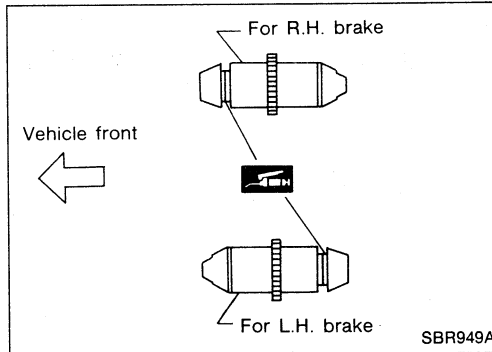

3. Shorten adjuster by rotating it.  
**Pay attention to direction of adjuster.**
4. Connect parking brake cable to toggle lever.
5. Install all parts.

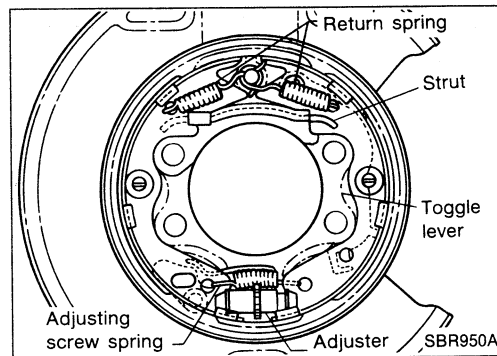

6. Check all parts are installed properly.  
**Pay attention to direction of adjuster.**

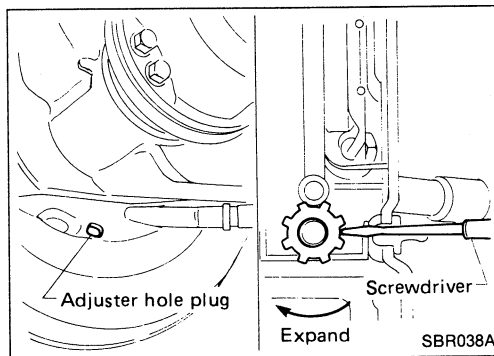



### Shoe Clearance Adjustment

1. Remove adjuster hole plug, and turn down adjuster wheel with a screwdriver until shoe touches brake drum.  
**Make sure that parking control lever is released completely.**
2. Return adjuster wheel 7 to 8 latches.
3. Install adjuster hole plug, and make sure that there is no drag between shoes and brake drum when rotating disc rotor.
4. Adjust parking brake cable. Refer to "Adjustment" in "PARKING BRAKE CONTROL".

### Breaking in Drum and Lining


1. Using either low or 2nd transmission speed, drive the unloaded vehicle on a safe, level and dry road.
2. Depress the release button of parking brake lever, then pull the lever with a force of 98 N (10 kg, 22 lb).
3. While holding the lever, continue to drive the vehicle forward 100 m (328 ft) at approximately 35 km/h (22 MPH).
4. While holding the lever, drive the vehicle in reverse 10 m (33 ft) at approximately 10 km/h (6 MPH).
5. Repeat steps 1 through 3 three times and then repeat only step 4 one more time.

# PARKING BRAKE CONTROL

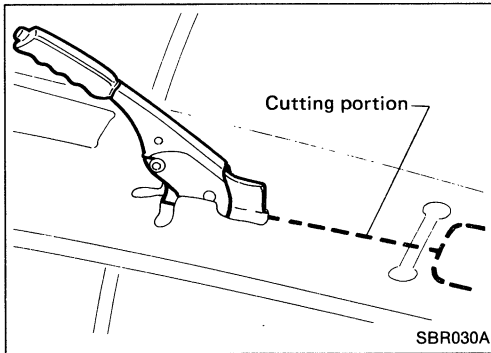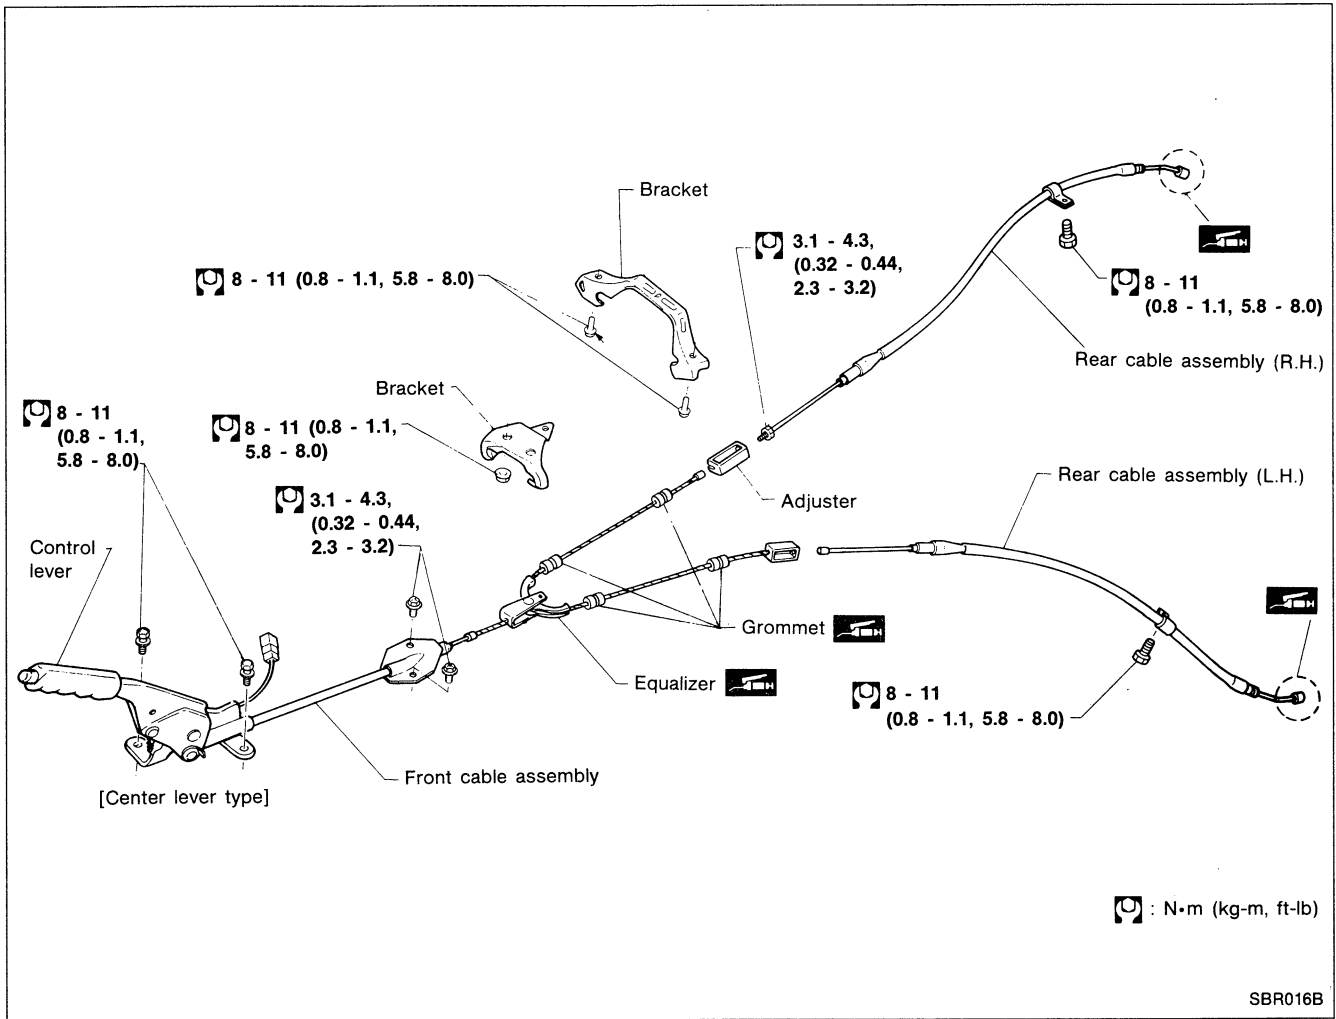

## Removal and Installation

- To replace parking brake cable, cut carpet at the area shown at left.

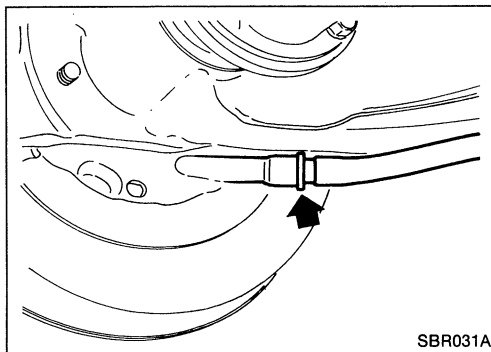

- Install rear cable by tapping the flanged section of cable cover with a hammer and punch.

**Be careful not to damage cable.**

**Make sure there is no free play after installation.**

# PARKING BRAKE CONTROL


## Inspection

1. Check control lever for wear or other damage. Replace if necessary.
2. Check wires for discontinuity or deterioration. Replace if necessary.
3. Check warning lamp and switch. Replace if necessary.
4. Check parts at each connecting portion and, if found deformed or damaged, replace.


## Adjustment

Adjust control lever stroke as follows:

**On models equipped with parking drum brake, perform shoe clearance adjustment before adjusting control lever stroke.**

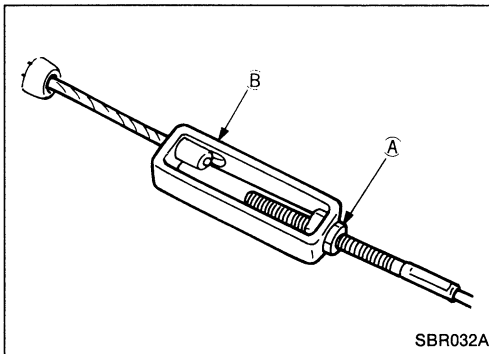

1. Loosen lock nut (A), rotate adjuster (B).
2. Tighten lock nut (A).

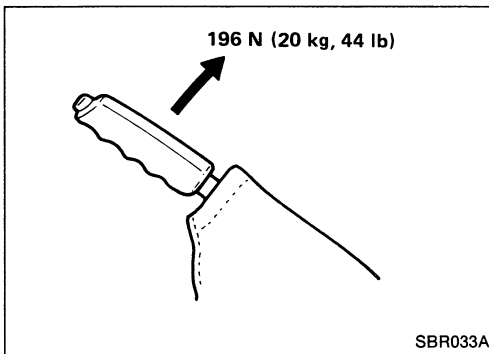

3. Pull control lever with specified amount of force. Check lever stroke.


**Number of notches: 8 - 9**

4. Bend parking brake warning lamp switchplate so that brake warning lamp goes on when ratchet at parking brake lever is pulled "A" notches and goes off when fully released.


**Number of notches "A": 2**

# ANTI-LOCK BRAKING SYSTEM

## System Components

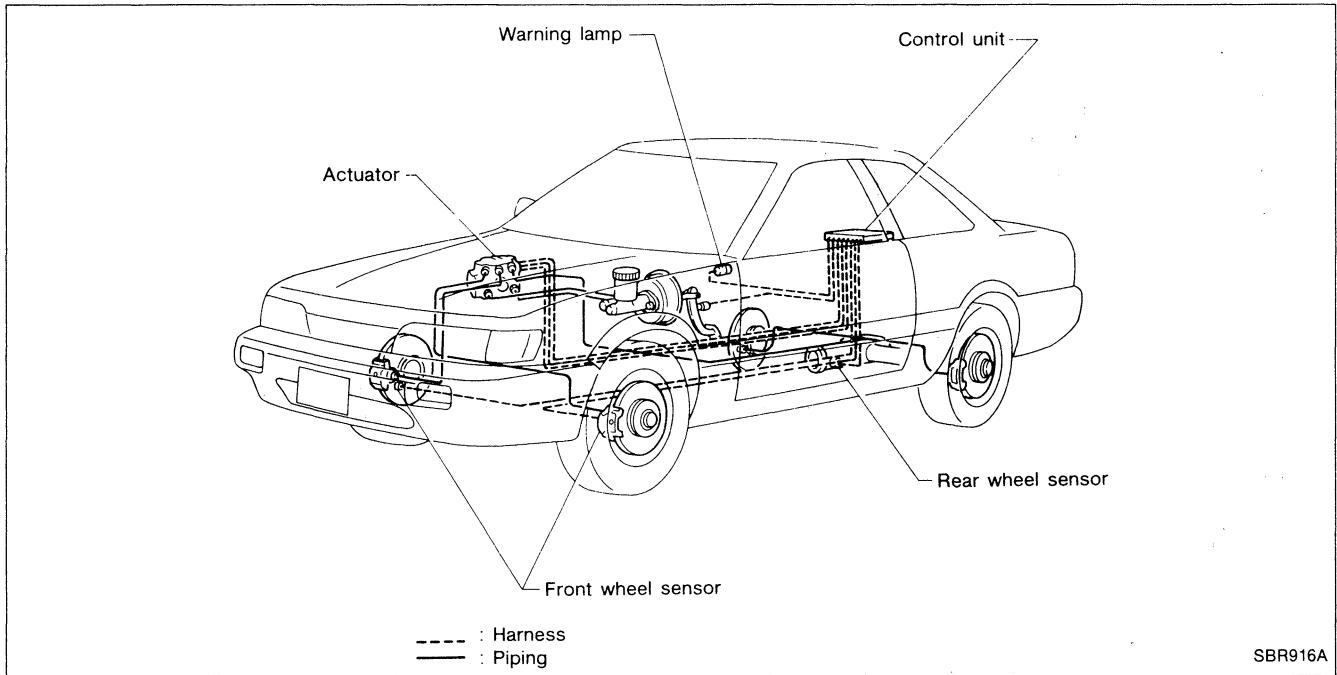


## Hydraulic Circuit

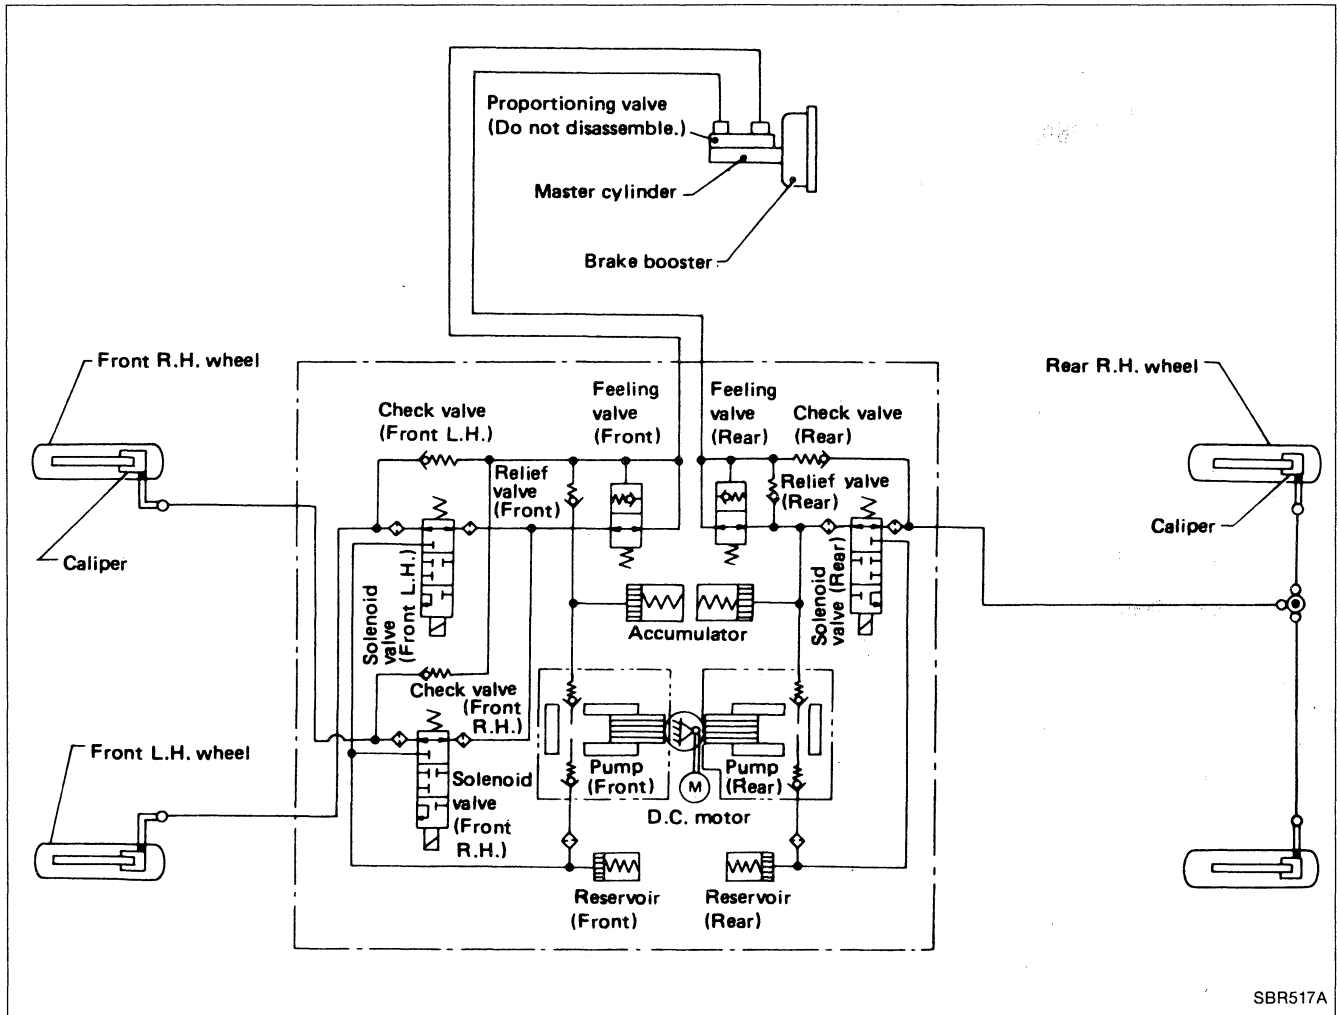



# ANTI-LOCK BRAKING SYSTEM

## Wiring Diagram

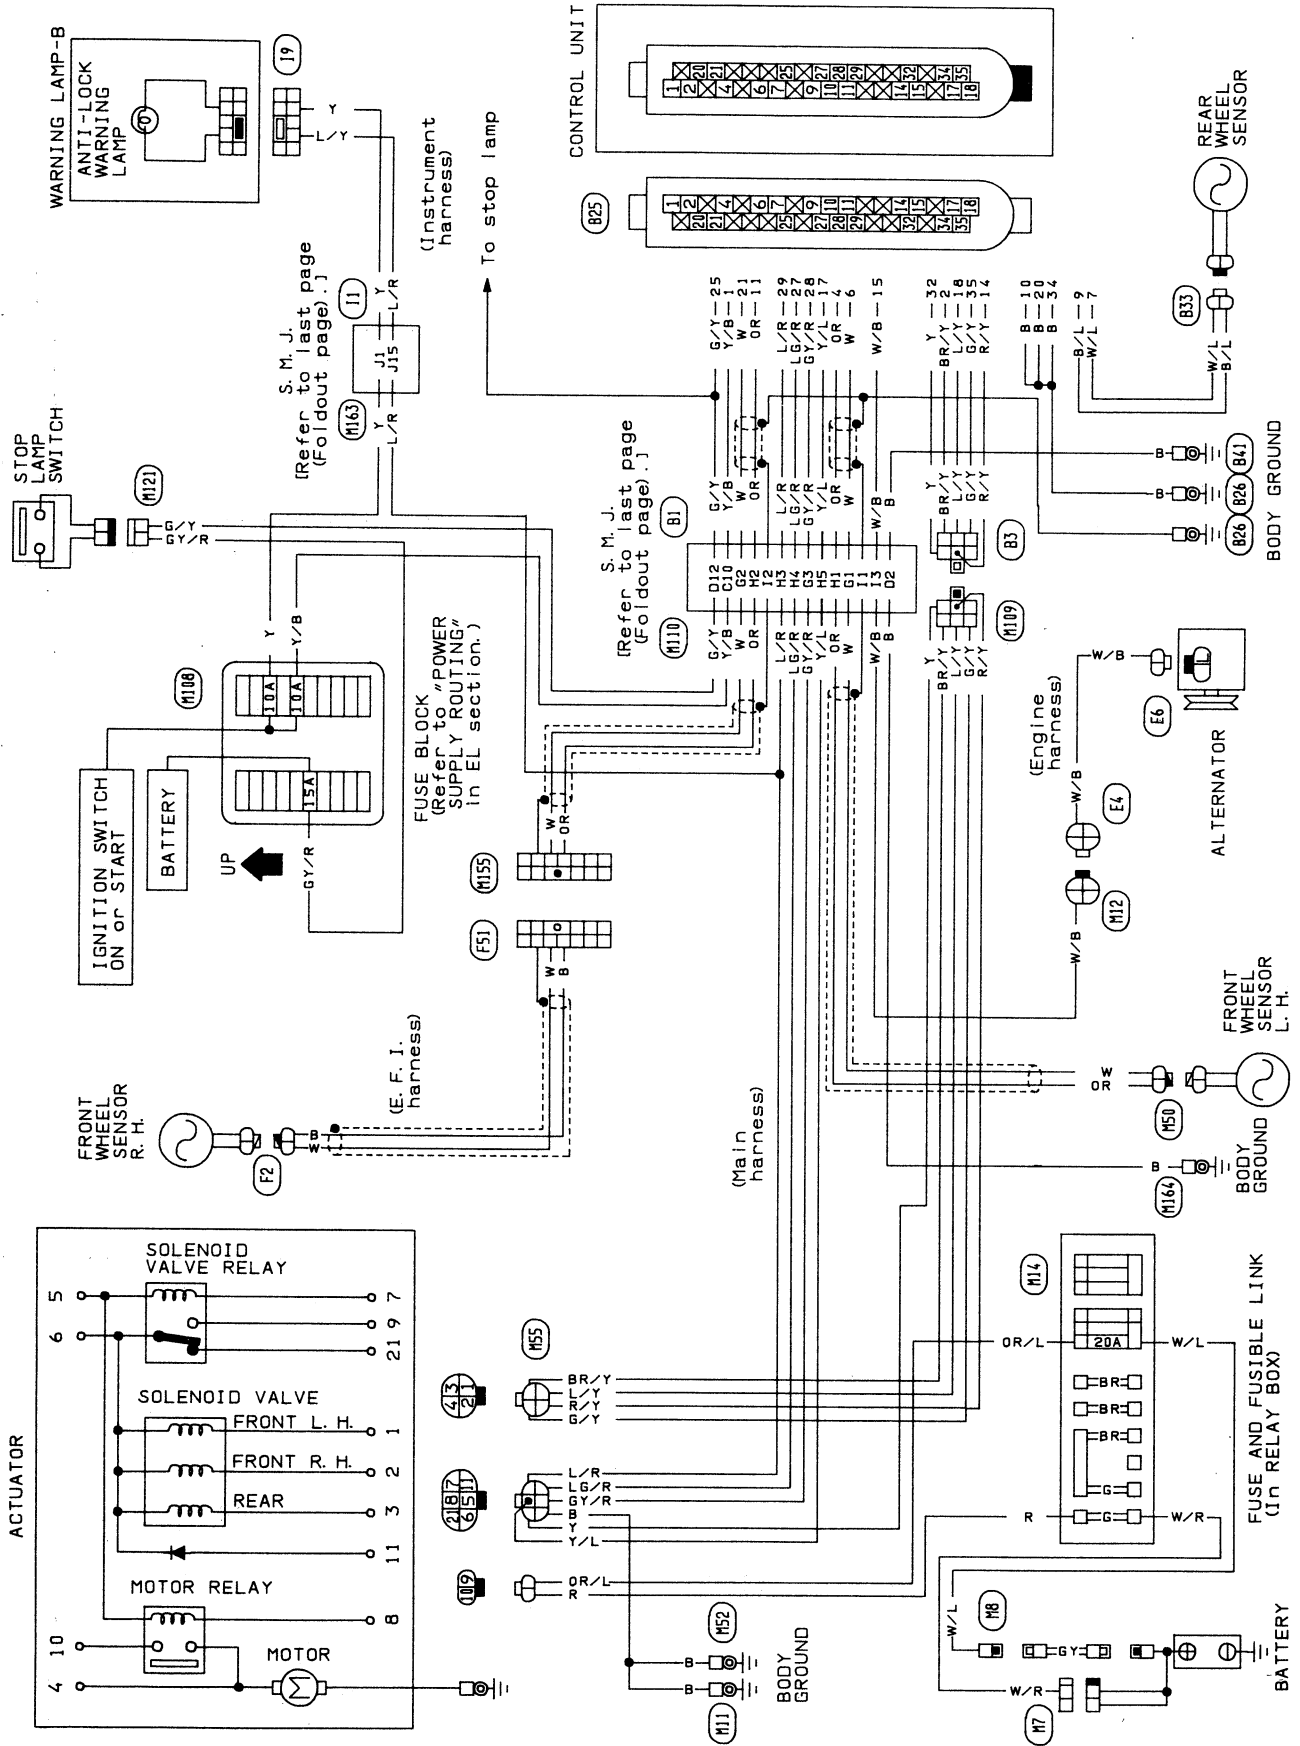


# ANTI-LOCK BRAKING SYSTEM

## Removal and Installation


### CAUTION:

Be careful not to damage sensor edge and sensor rotor teeth.

### FRONT WHEEL SENSOR

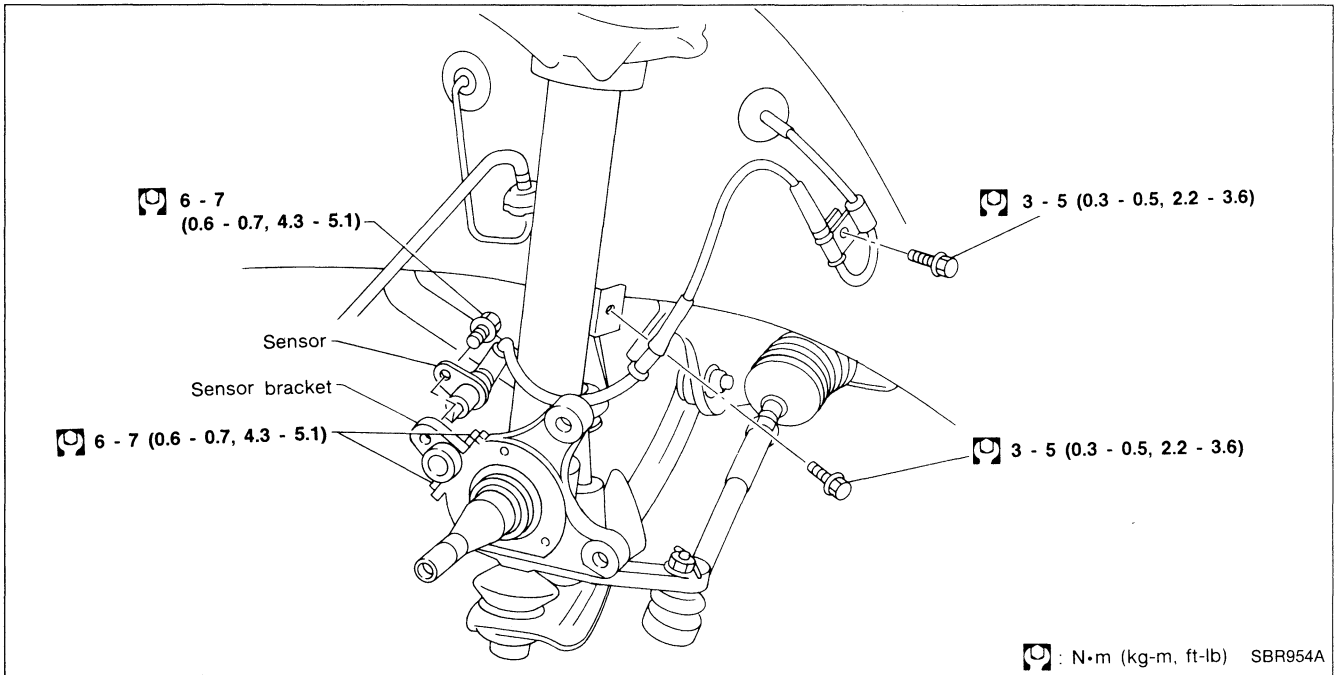


### REAR WHEEL SENSOR

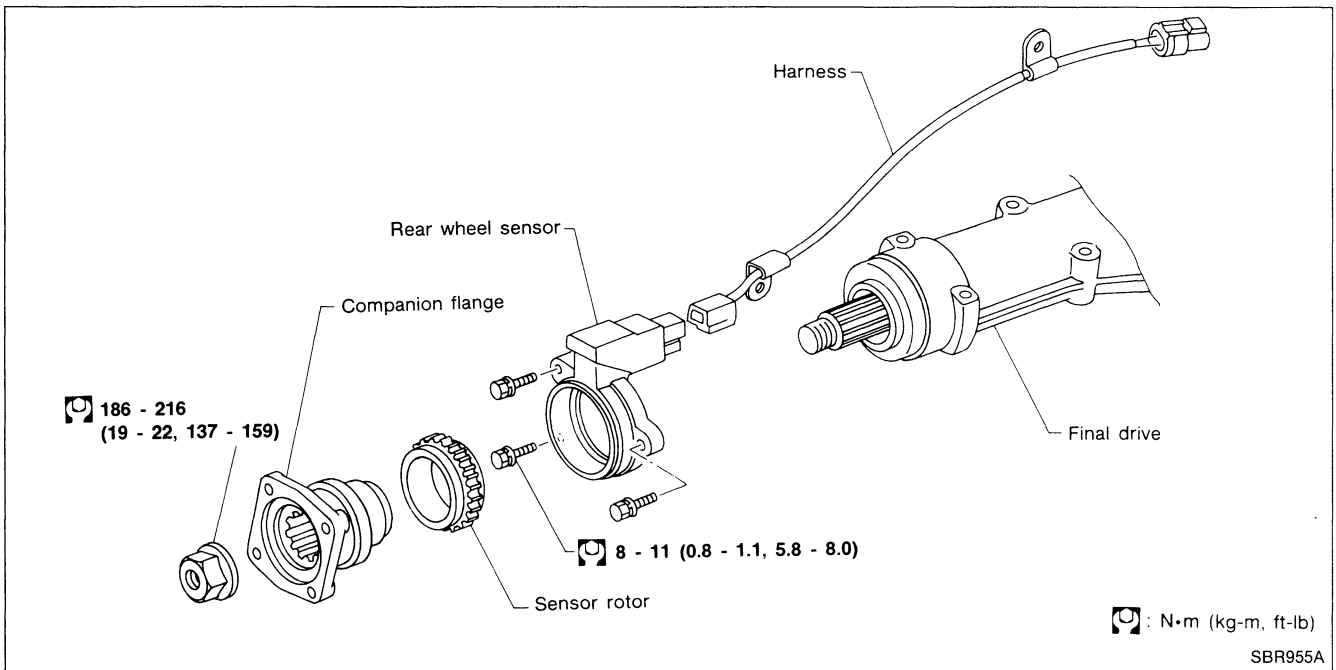

# ANTI-LOCK BRAKING SYSTEM

## Removal and Installation (Cont'd)


### CONTROL UNIT

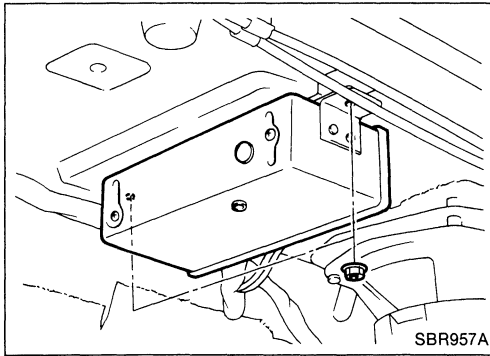

### Removal

#### ACTUATOR

1. Disconnect battery cable.
2. Drain brake fluid. Refer to "Changing Brake Fluid" in "CHECK AND ADJUSTMENT".
3. Disconnect connectors, brake pipes and remove fixing nuts.

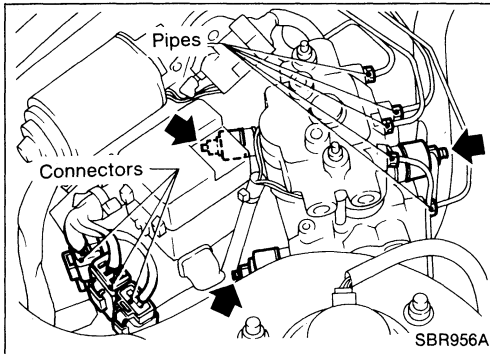

### Installation

#### CAUTION:

After installation, refill brake fluid. Then bleed air. Refer to "CHECK AND ADJUSTMENT" and "AIR BLEEDING" respectively.



1. Connect brake pipes temporarily.
2. Secure fixing nuts.
3. Torque brake pipes.
4. Connect connectors and battery cable.

# TROUBLE DIAGNOSES

---

## Contents

<b>How to Perform Trouble Diagnoses for Quick and Accurate Repair .....</b>	<b>BR-35</b>
<b>Symptom Chart .....</b>	<b>BR-38</b>
<b>Preliminary Check 1 .....</b>	<b>BR-39</b>
<b>Preliminary Check 2 .....</b>	<b>BR-40</b>
<b>Preliminary Check 3, 4 .....</b>	<b>BR-41</b>
<b>Self-diagnosis .....</b>	<b>BR-42</b>
<b>Component Parts and Connector Location .....</b>	<b>BR-43</b>
<b>Ground Circuit Check .....</b>	<b>BR-44</b>
<b>Circuit Diagram for Quick Pinpoint Check .....</b>	<b>BR-45</b>
<b>Diagnostic Procedure 1 .....</b>	<b>BR-46</b>
<b>Diagnostic Procedure 2 .....</b>	<b>BR-48</b>
<b>Diagnostic Procedure 3 .....</b>	<b>BR-48</b>
<b>Diagnostic Procedure 4 .....</b>	<b>BR-49</b>
<b>Diagnostic Procedure 5 .....</b>	<b>BR-49</b>
<b>Diagnostic Procedure 6 .....</b>	<b>BR-50</b>
<b>Diagnostic Procedure 7 .....</b>	<b>BR-51</b>
<b>Diagnostic Procedure 8 .....</b>	<b>BR-52</b>
<b>Diagnostic Procedure 9 .....</b>	<b>BR-53</b>
<b>Diagnostic Procedure 10 .....</b>	<b>BR-54</b>
<b>Diagnostic Procedure 11 .....</b>	<b>BR-55</b>
<b>Electrical Components Inspection .....</b>	<b>BR-56</b>

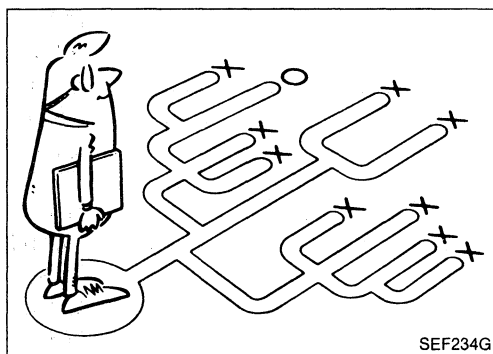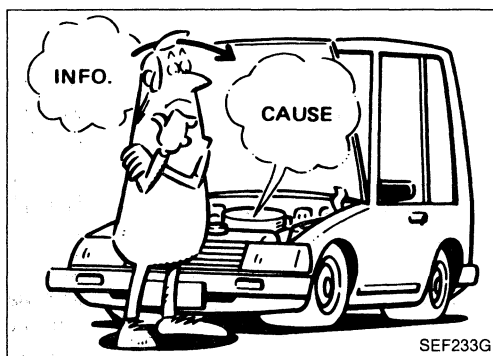

### How to Perform Trouble Diagnoses for Quick and Accurate Repair

#### INTRODUCTION

The A.B.S. system has an electronic control unit to control major functions. The control unit accepts input signals from sensors and instantly drives actuators. It is essential that both kinds of signals are proper and stable. At the same time, it is important that there are no conventional problems such as air leaks in the booster or lines, lack of brake fluid, or other problems with brake system.

It is much more difficult to diagnose a problem that occurs intermittently rather than continuously. Most intermittent problems are caused by poor electric connections or faulty wiring. In this case, careful checking of suspicious circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the problems, so a road test should be performed.

Before undertaking actual checks, take just a few minutes to talk with a customer who approaches with a A.B.S. complaint. The customer is a very good source of information on such problems; especially intermittent ones. Through the talks with the customer, find out what symptoms are present and under what conditions they occur.

Start your diagnosis by looking for "conventional" problems first. This is one of the best ways to troubleshoot brake problems on an A.B.S. controlled vehicle.

# TROUBLE DIAGNOSES

## How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd) WORK FLOW

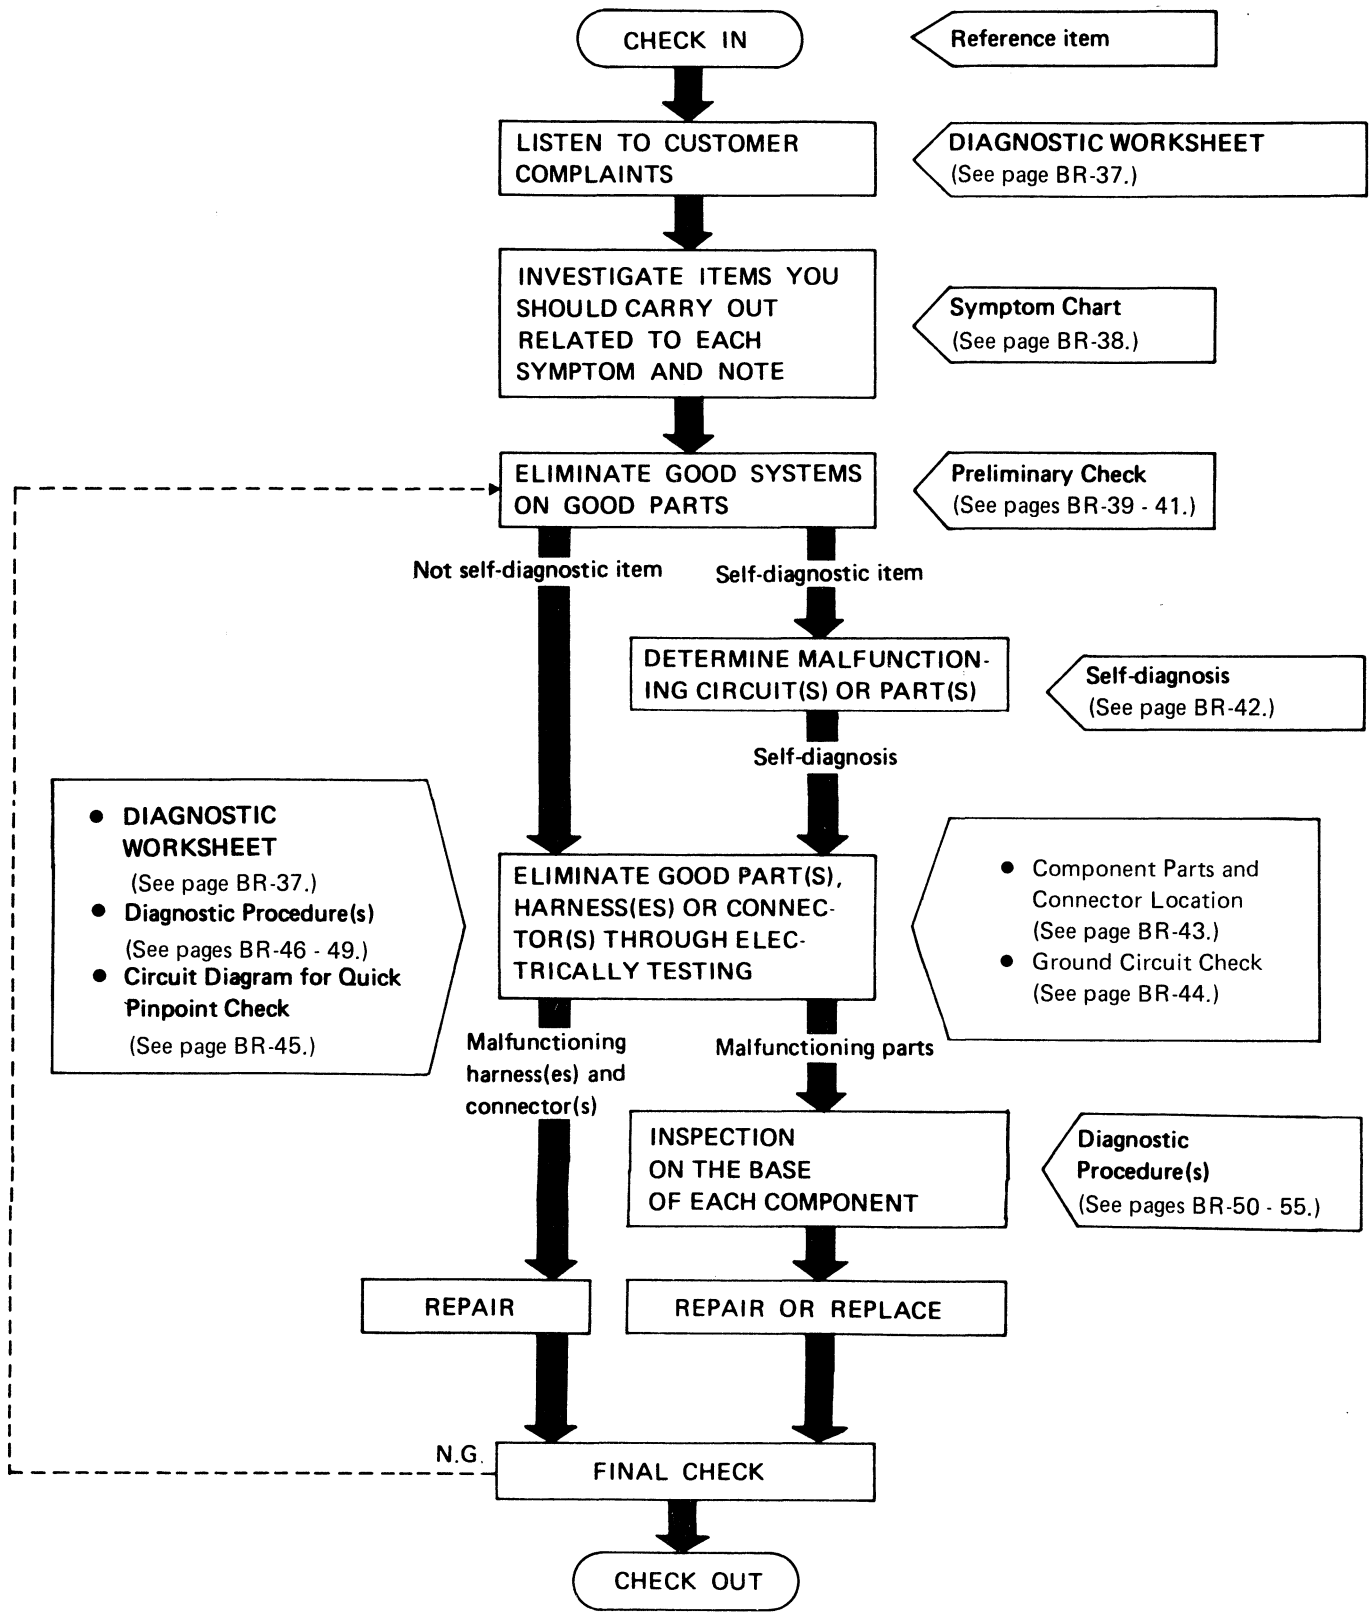



# TROUBLE DIAGNOSES


## Symptom Chart

PROCEDURE	REFERENCE PAGE	SYMPTOM						
Electrical Components Inspection	BR-56	Actuator inspection						○
	BR-44	Motor ground						○
Ground Circuit Check	BR-44	Control unit ground						○
	BR-55	Diagnostic Procedure 11	○	○	○	○	○	○
Diagnostic Procedure (Select inspection with L.E.D.) flashing No.	BR-54	Diagnostic Procedure 10	○	○	○	○	○	○
	BR-53	Diagnostic Procedure 9	○	○	○	○	○	○
	BR-52	Diagnostic Procedure 8	○	○	○	○	○	○
	BR-51	Diagnostic Procedure 7	○	○	○	○	○	○
	BR-50	Diagnostic Procedure 6	○	○	○	○	○	○
	BR-49	Diagnostic Procedure 5						○
Diagnostic Procedure	BR-49	Diagnostic Procedure 4					○	
	BR-48	Diagnostic Procedure 3				○		
	BR-48	Diagnostic Procedure 2			○			
	BR-46	Diagnostic Procedure 1	○					
	BR-41	Preliminary Check 4	○	○	○	○	○	○
Preliminary Check	BR-41	Preliminary Check 3	○	○				
	BR-40	Preliminary Check 2		○			○	
	BR-39	Preliminary Check 1			○	○		
		Pedal vibration & noise						
		Warning activates						
		Long stopping distance						
		Abnormal pedal action						
		A.B.S. doesn't work						
		A.B.S. works but warning activates						



# TROUBLE DIAGNOSES


## Preliminary Check 1

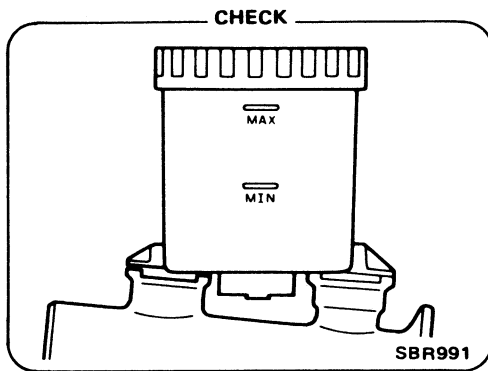

Check brake fluid level in reservoir tank.

N.G. → Fill up brake fluid.


O.K. →

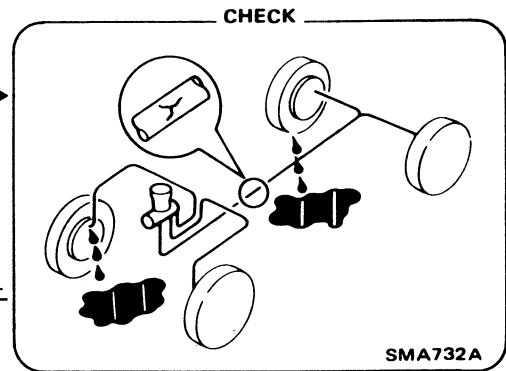

Repair brake system. ← N.G.

Check brake system.  
Refer to CHECK AND ADJUSTMENT.


O.K. ↓

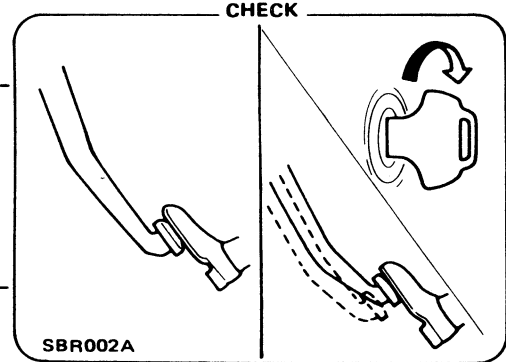

Repair or replace booster system. ← N.G.

O.K. →

Check brake booster operation and airtightness.  
Refer to "Inspection" of BRAKE BOOSTER.

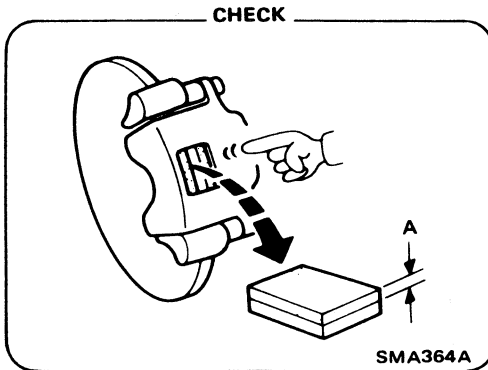


Check brake pads and rotor.  
Refer to "Inspection" of FRONT and REAR DISC BRAKE.

N.G. → Replace malfunctioning parts.

# TROUBLE DIAGNOSES

## Preliminary Check 2

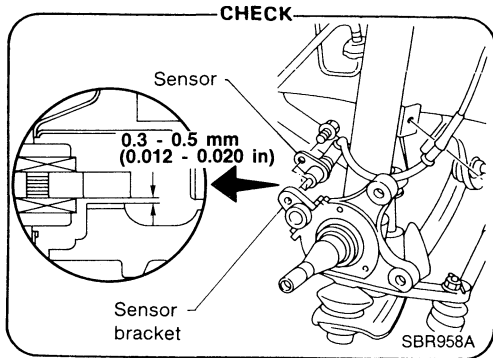


Check sensor clearance.

Clearance:

0.3 - 0.5 mm  
(0.012 - 0.020 in)

O.K.

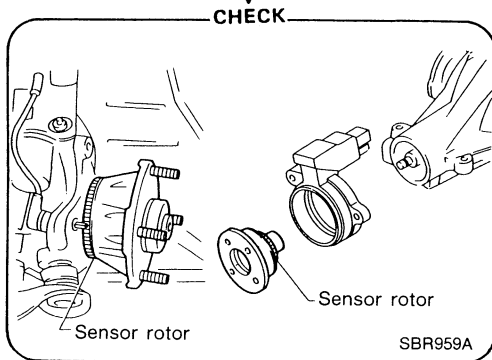

Check sensor rotor for teeth damage.

N.G.

When out of specification, align sensor by sliding sensor bracket.

Check sensor for the following items:

- Dust, foreign materials, etc., at fastening portion
- Improper installation
- Breakage

O.K.

N.G.


Repair or replace malfunctioning sensor.

N.G.

Replace sensor rotor with wheel hub or companion flange as a set.

# TROUBLE DIAGNOSES

## Preliminary Check 3 CHECK

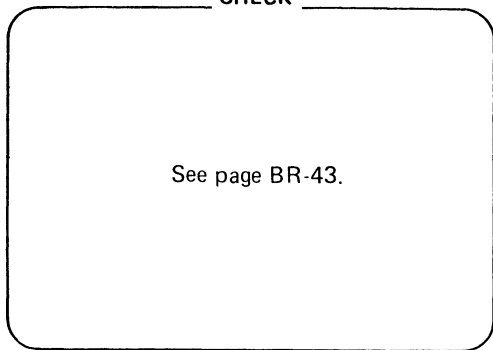


Measure each sensor resistance.  
0.8 - 1.2 kΩ

N.G. → Replace.

O.K. →

## Preliminary Check 3, 4

## Preliminary Check 4 CHECK

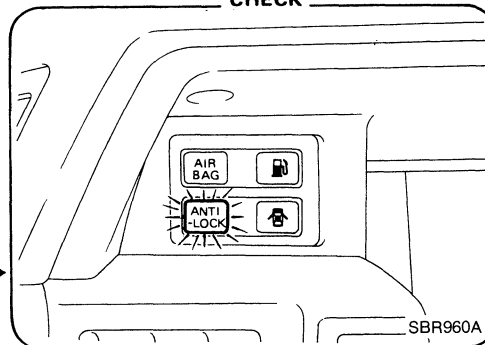


Check warning lamp activation.  
When ignition switch is turned on, warning lamp turns on.

O.K. →

N.G. ↓

Check fuse.  
Check bulb condition and remedy.


## CHECK

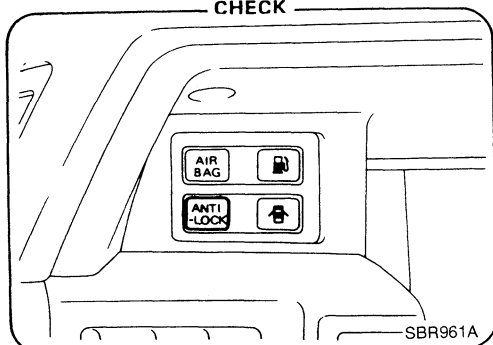

Check warning lamp for deactivation.  
When engine starts, warning lamp deactivates.


O.K. ↓

## DRIVE

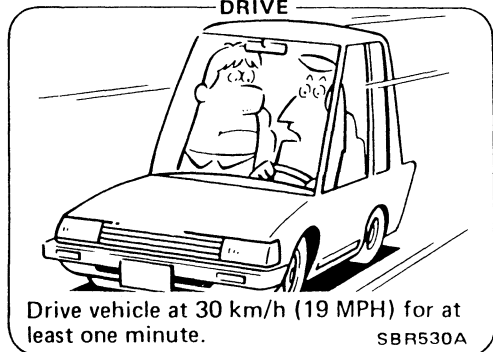


Drive vehicle at 30 km/h (19 MPH) for at least one minute.

## CHECK

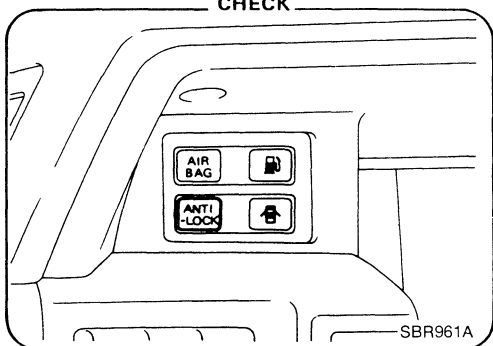

Ensure warning lamp remains off while driving.

N.G. →

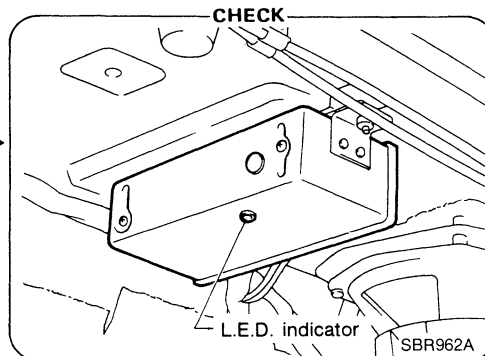

- Keep engine on and running.
- Count the number of L.E.D. flashes during 5 to 10 second "OFF" period.

Go to Self-diagnosis.  
(See page BR-42.)

N.G. →

O.K. →

If Preliminary Check 2 is not performed and there is abnormal A.B.S. operation, perform Preliminary Check 2.

# TROUBLE DIAGNOSES

## Self-diagnosis

### CHECKING THE NUMBER OF L.E.D. FLASHES

When a problem occurs in the A.B.S., the warning light on the instrument panel comes on. As shown in the Table, the control unit performs self-diagnosis.

To obtain satisfactory self-diagnosing results, the vehicle must be driven above 30 km/h (19 MPH) for at least one minute before the self-diagnosis is performed. After the vehicle is stopped, the number of L.E.D. flashes is counted while the engine is running.


The L.E.D. is located on the control unit, identifying a malfunctioning part or unit by the number of flashes. Both the warning light and the L.E.D. persistently activate, even after a malfunctioning part or unit has been repaired, unless the ignition switch is turned "OFF". After repairs, turn the ignition switch "OFF". Then start the engine and drive the vehicle over 30 km/h (19 MPH) for at least one minute to ensure that the malfunctioning part or unit has been repaired properly.

If more than two circuits malfunction at the same time, the L.E.D. will flash to indicate one of the malfunctioning circuits. After the circuit has been repaired, the L.E.D. will then flash to indicate that the other circuit is malfunctioning.

No. of L.E.D. flashes	Malfunctioning part or unit	Diagnostic Procedure
1	Left front actuator solenoid circuit	Diagnostic Procedure 6
2	Right front actuator solenoid circuit	
3 or 4	Rear actuator solenoid circuit	
5	Left front wheel sensor circuit	Diagnostic Procedure 7
6	Right front wheel sensor circuit	
7 or 8	Rear wheel sensor circuit	
9	Motor and motor relay	Diagnostic Procedure 8
10	Solenoid valve relay	Diagnostic Procedure 9
16 or continuous	Control unit	Diagnostic Procedure 10
Warning activates and L.E.D. "OFF"	Power supply or ground circuit for control unit	Diagnostic Procedure 11

#### Example









Improper operation of left front rotor sensor circuit

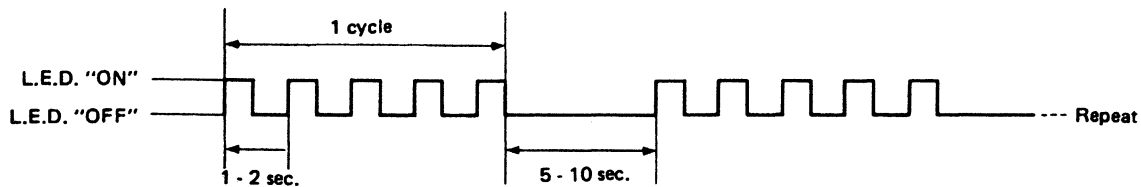


SBR531A

# TROUBLE DIAGNOSES

## Component Parts and Connector Location

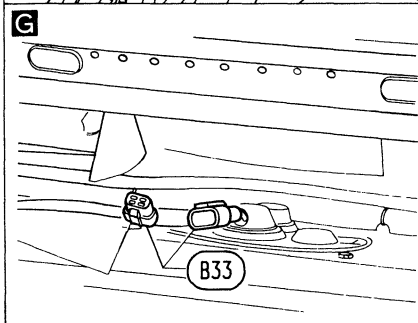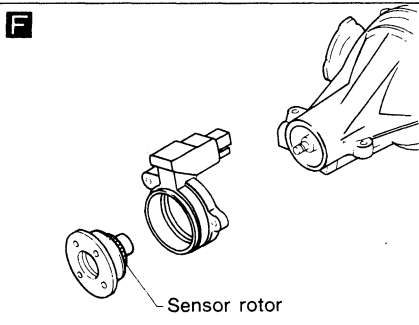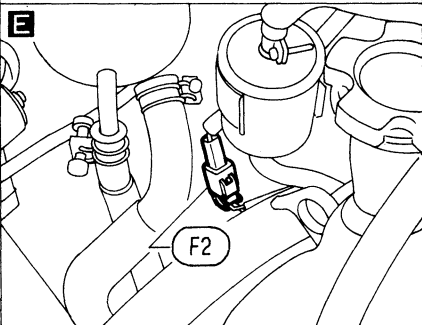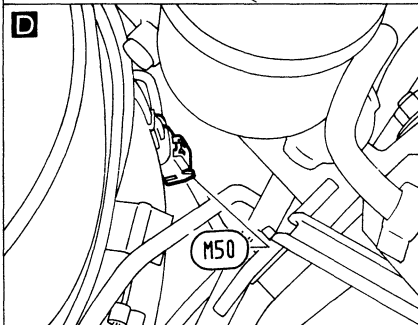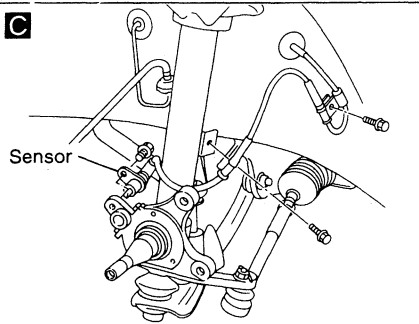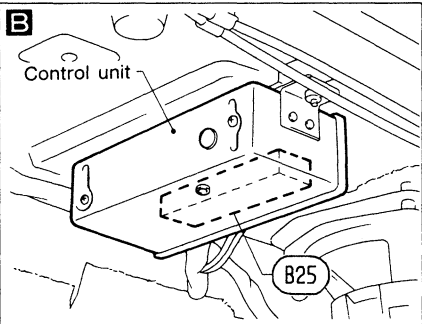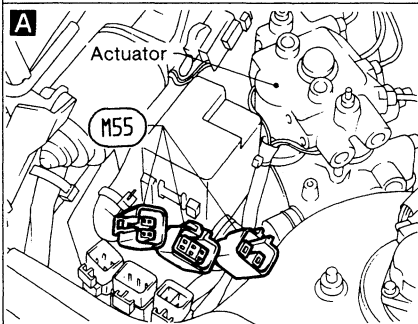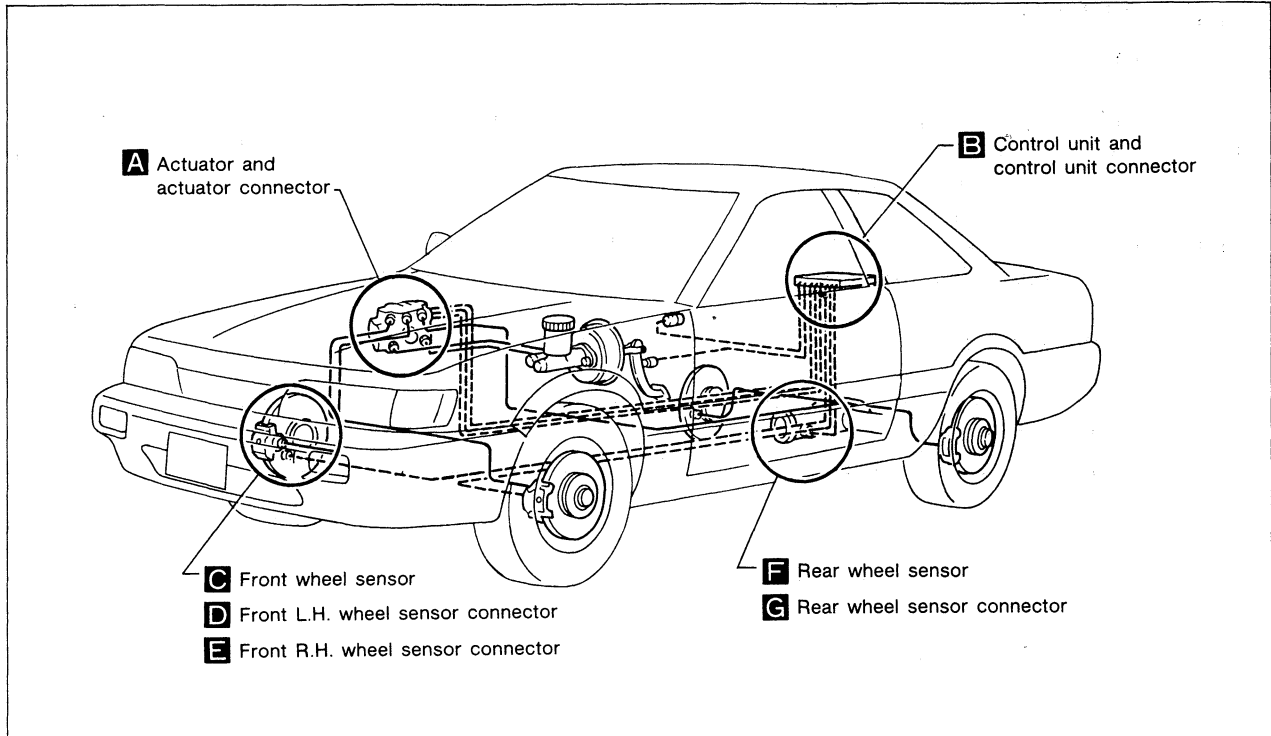


# TROUBLE DIAGNOSES

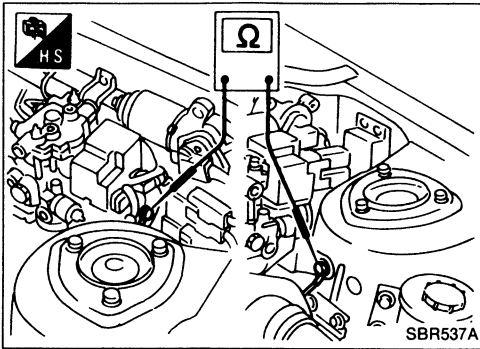

## Ground Circuit Check

### ACTUATOR MOTOR GROUND

- Check resistance between both terminals.  
**Resistance: 0Ω**

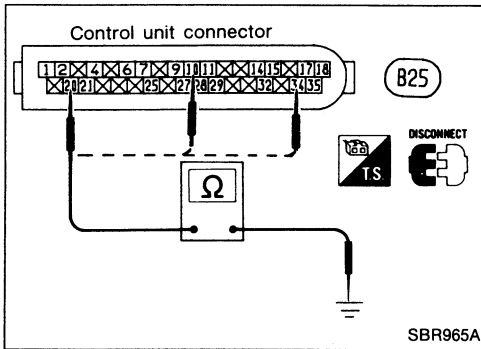


### CONTROL UNIT GROUND

- Check resistance between both terminals.  
**Resistance: 0Ω**

# TROUBLE DIAGNOSES

## Circuit Diagram for Quick Pinpoint Check

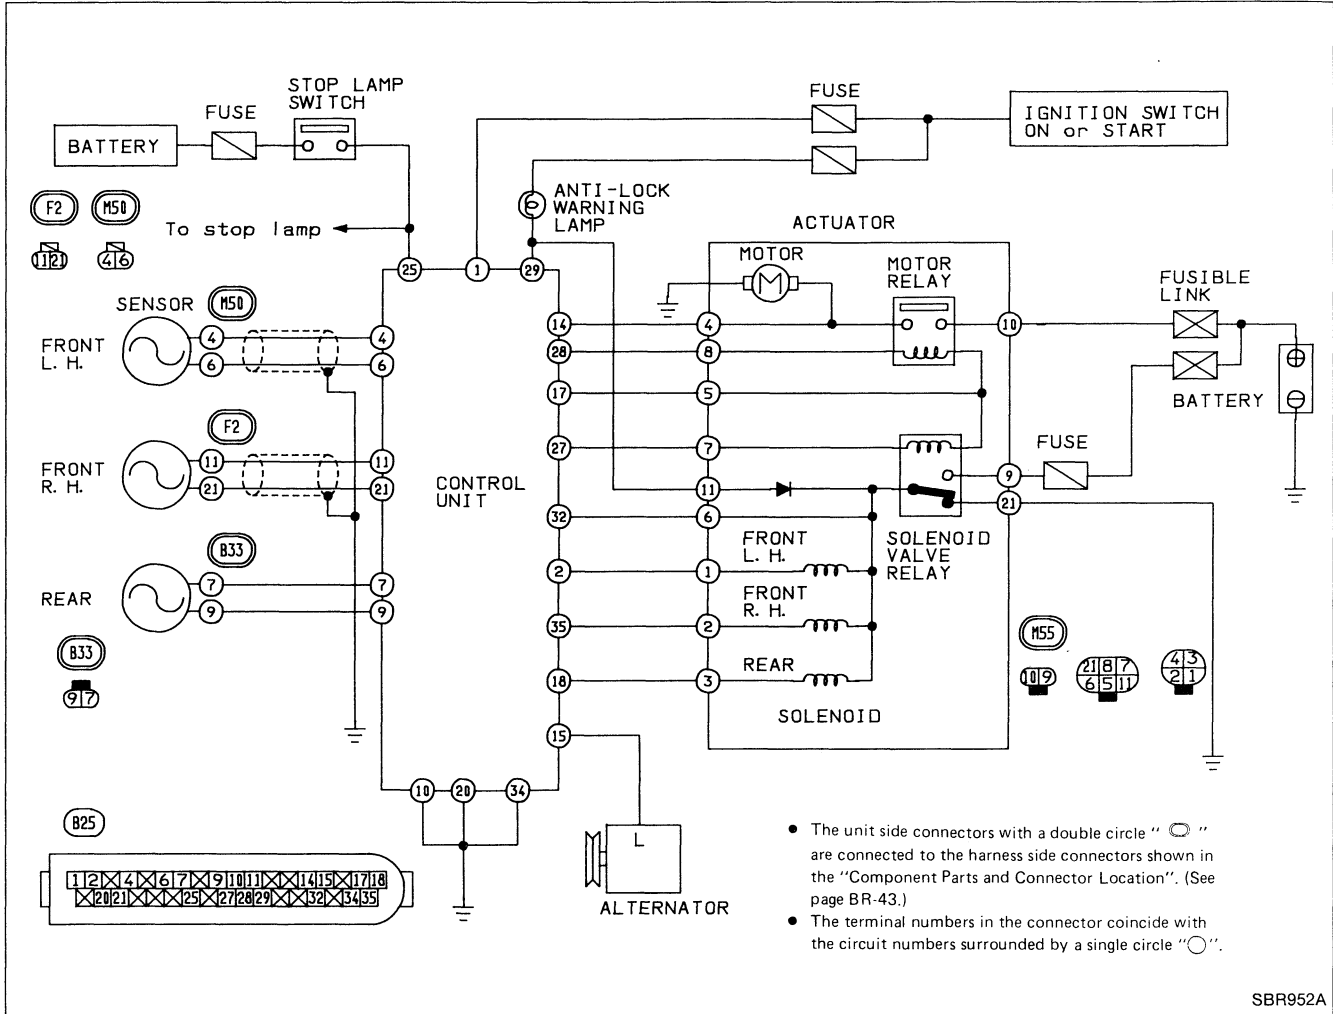


SBR952A

# TROUBLE DIAGNOSES

## Diagnostic Procedure 1

**SYMPTOM: Pedal vibration and noise**

Refer to worksheet result.

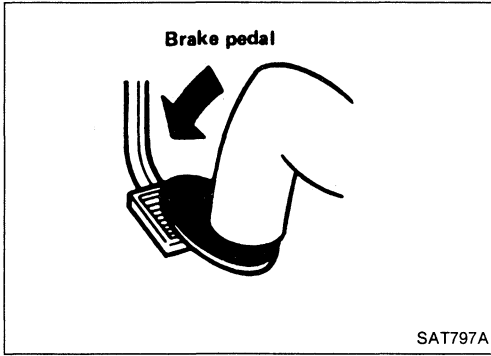


Check whether the symptom appears only when brake is applied suddenly. Yes

When brake is normally applied, A.B.S. works and produces pedal vibration or noise.

↓ No

Check whether the symptom appears only when engine is started. Yes

Refer to Preliminary Check 4 result.



↓ No


Check whether the symptom appears only when the vehicle speed is within 10 km/h (6 MPH) after starting engine. Yes

Check whether the symptom disappears within 5 seconds.

↓ No      ↓ Yes

Ⓐ

A.B.S. may sometimes operate when load is high and voltage is low due to insufficient alternator output.

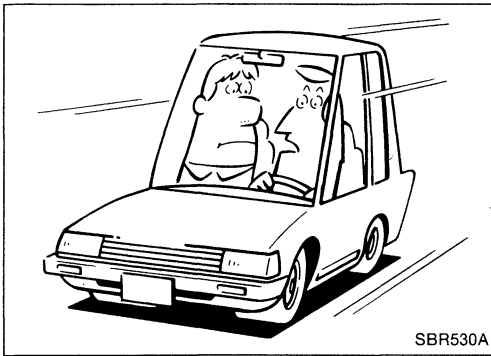

↓ No

Check whether the symptom appears while the vehicle is being driven. No

Ⓐ

↓ Yes

Check whether the symptom appears when brake is applied gradually. No

(Appears when brake is not applied.)


Check if there are any conditions, among those listed below, when symptom appears.

- Shifting
- Operating clutch
- Passing protrusion

↓ No      ↓ Yes

Ⓑ


Under these conditions individual wheel speed can change suddenly. This may sometimes cause the A.B.S. to operate.

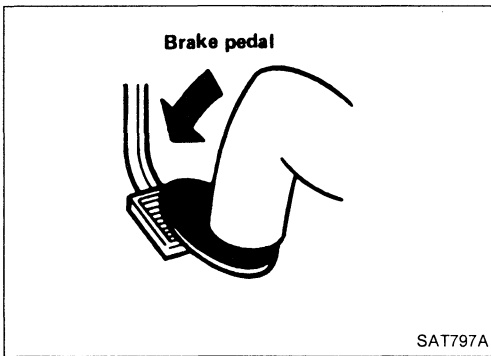




# TROUBLE DIAGNOSES

## Diagnostic Procedure 1 (Cont'd)

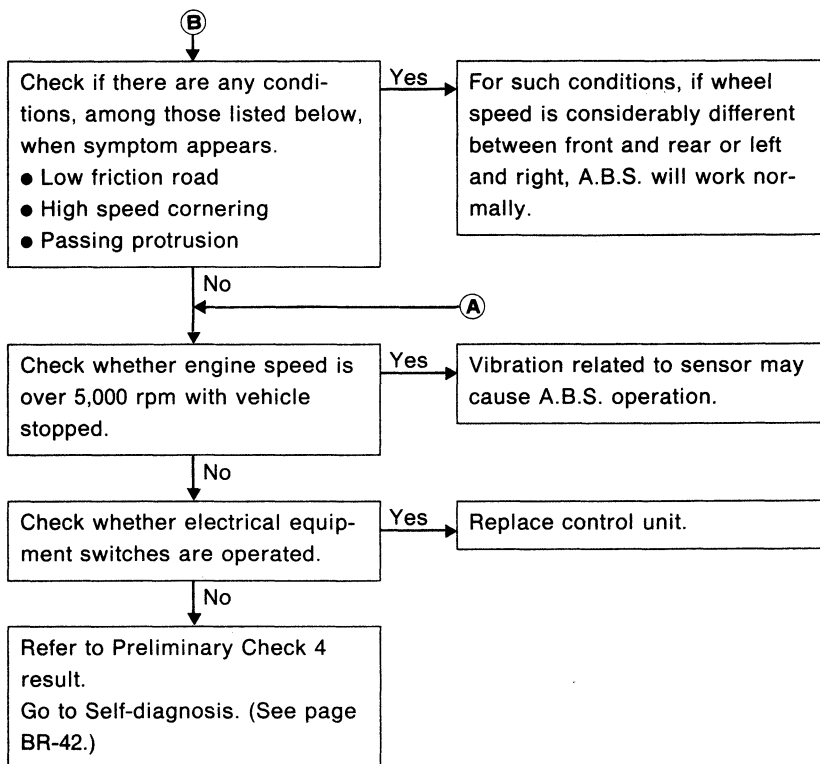

# TROUBLE DIAGNOSES


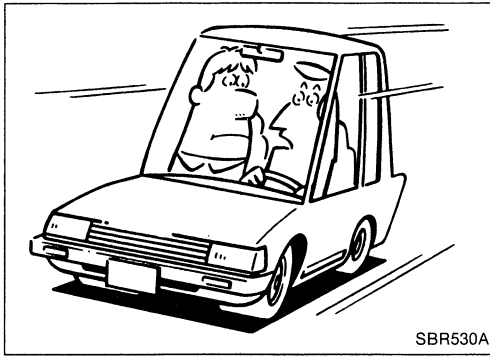


SBR530A

## Diagnostic Procedure 2

**SYMPTOM: Long stopping distance**

Refer to worksheet results.

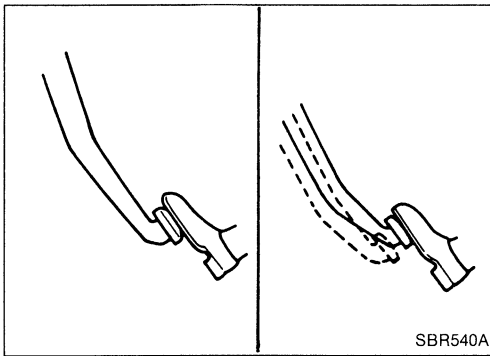
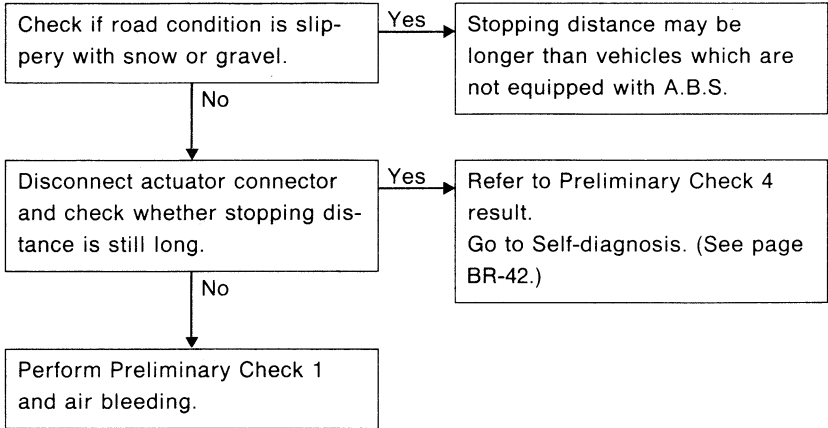


SBR540A

## Diagnostic Procedure 3

**SYMPTOM: Abnormal pedal action**

Refer to worksheet results.

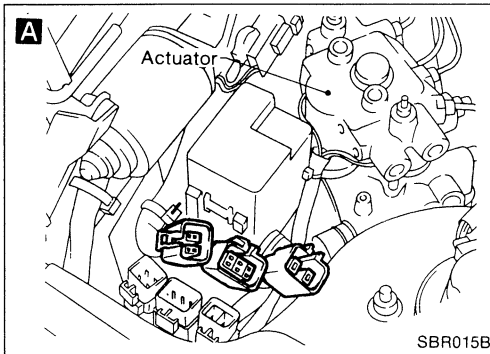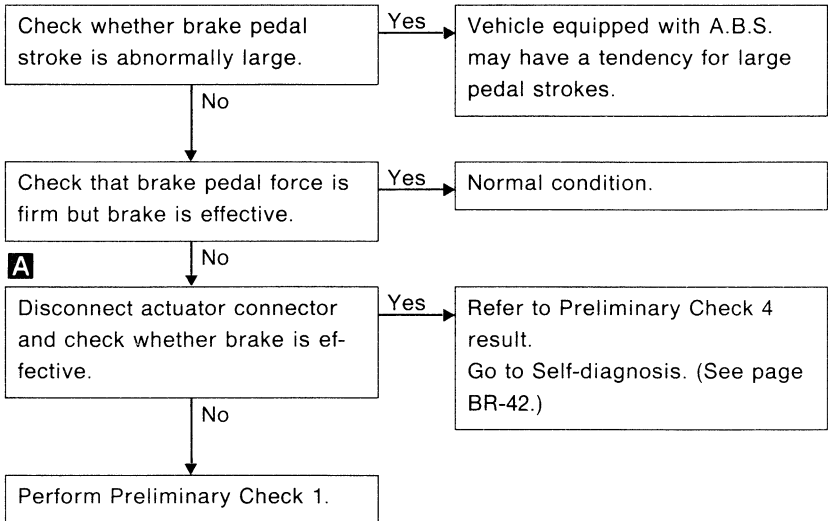


SBR015B

# TROUBLE DIAGNOSES

## Diagnostic Procedure 4


**SYMPTOM: A.B.S. doesn't work.**

**Refer to worksheet results.**


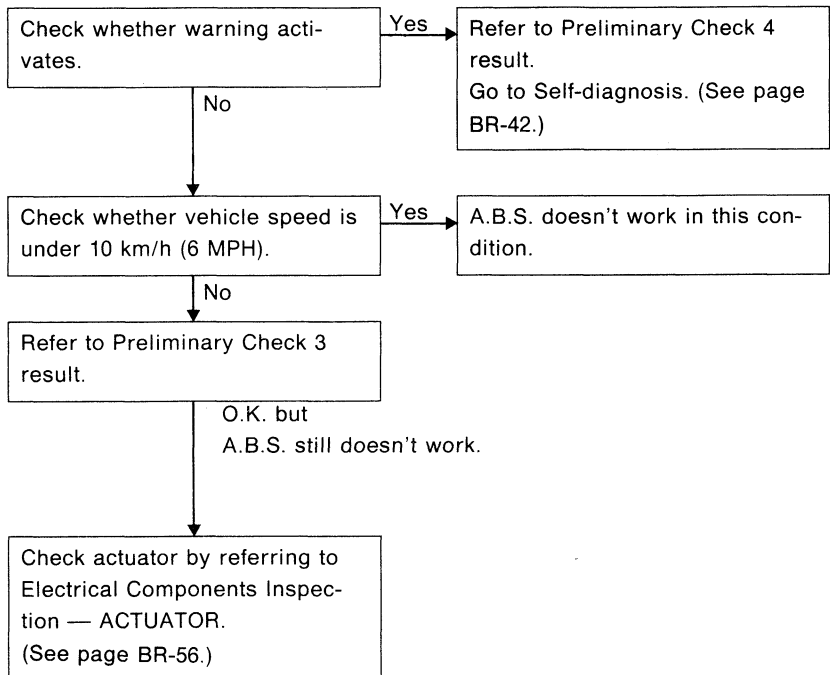


## Diagnostic Procedure 5

**SYMPTOM: A.B.S. works but warning activates.**

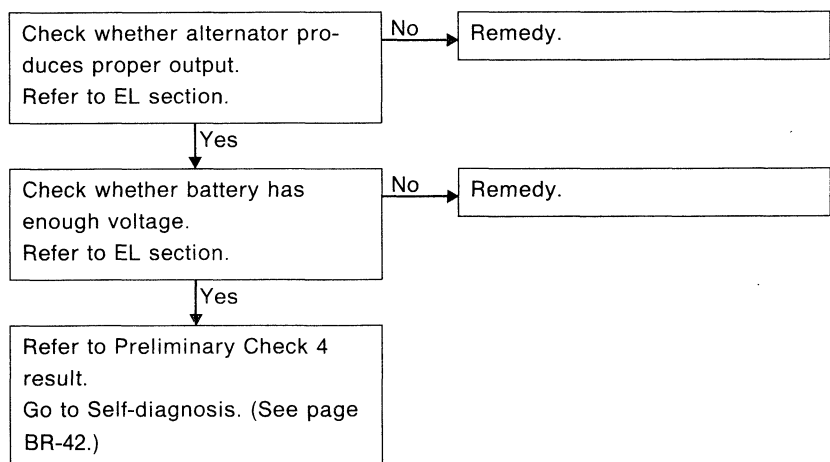


# TROUBLE DIAGNOSES

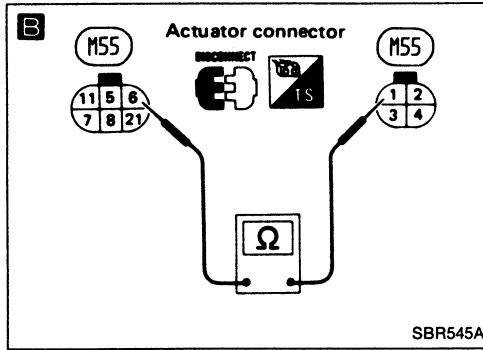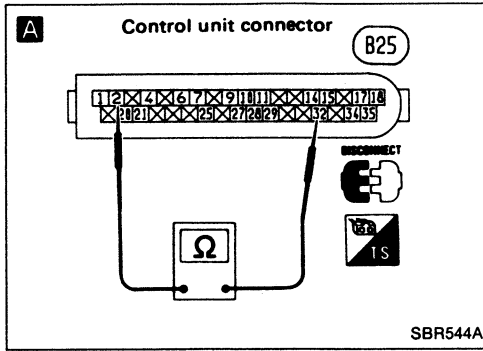


## Diagnostic Procedure 6

### ACTUATOR SOLENOID (L.E.D. flashing number 1 - 4)

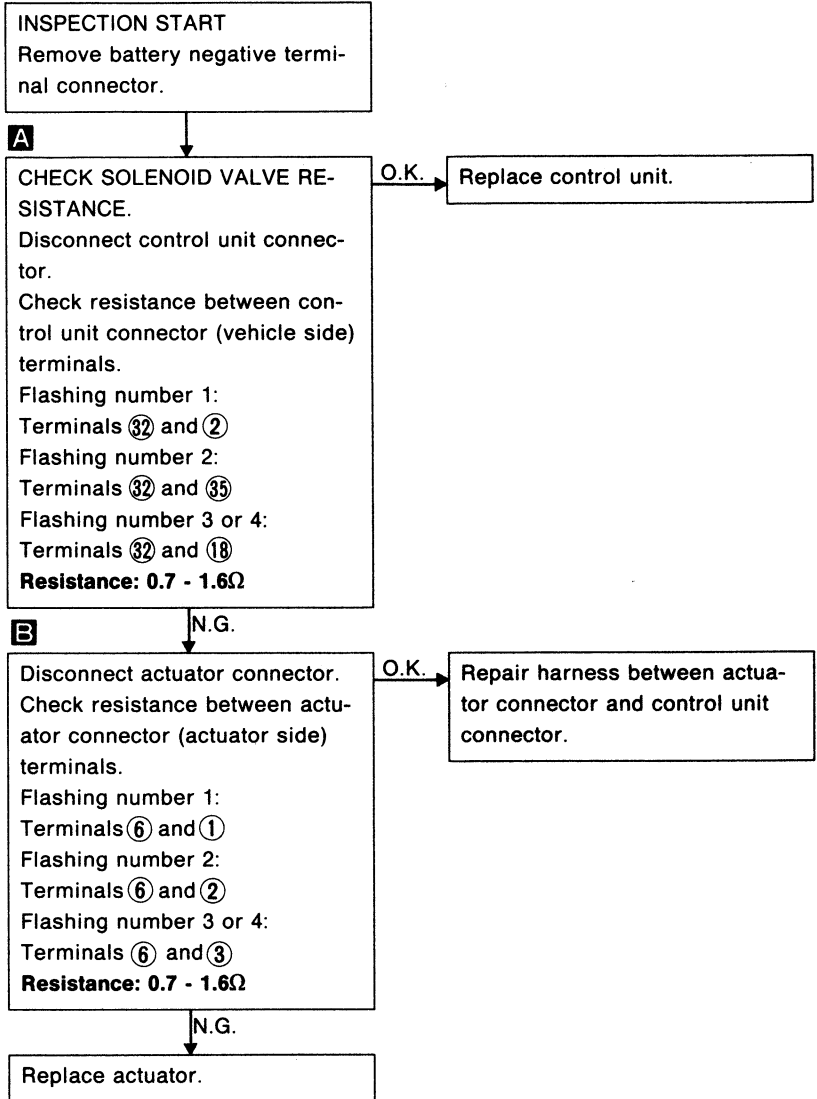


# TROUBLE DIAGNOSES

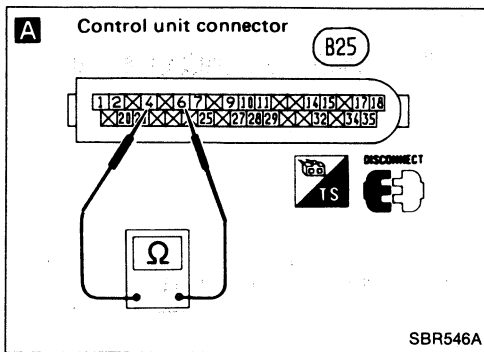

## Diagnostic Procedure 7






### WHEEL SPEED SENSOR (L.E.D. flashing number 5 - 8)

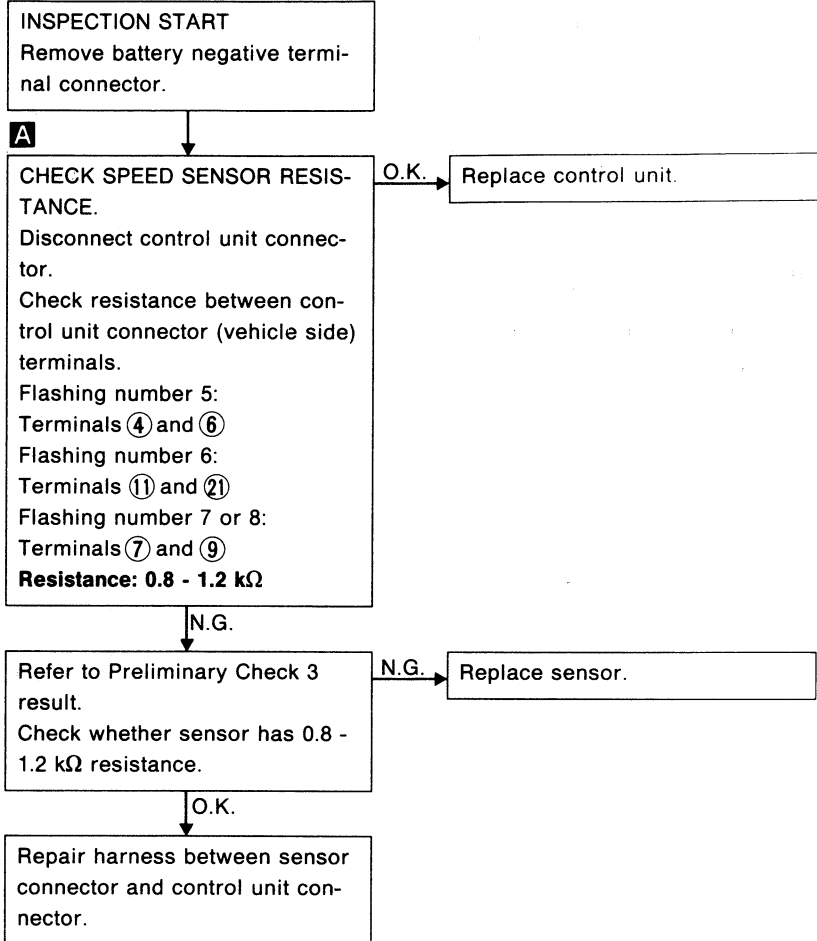

# TROUBLE DIAGNOSES

## Diagnostic Procedure 8

### ACTUATOR MOTOR RELAY (L.E.D. flashing number 9)

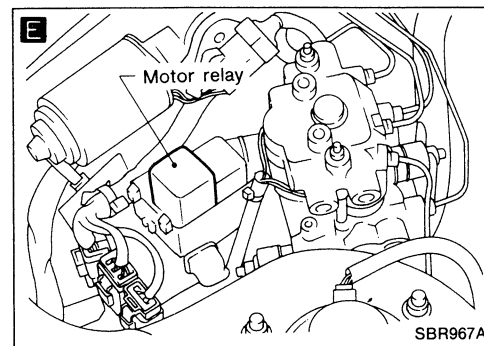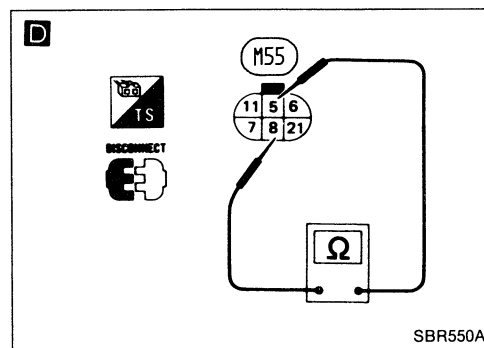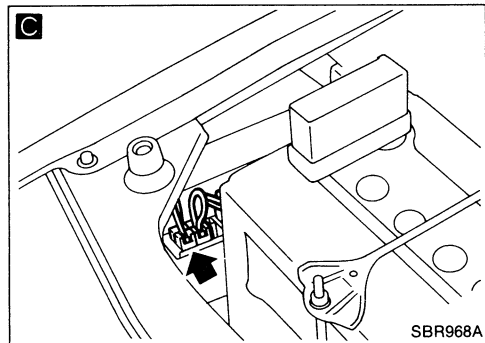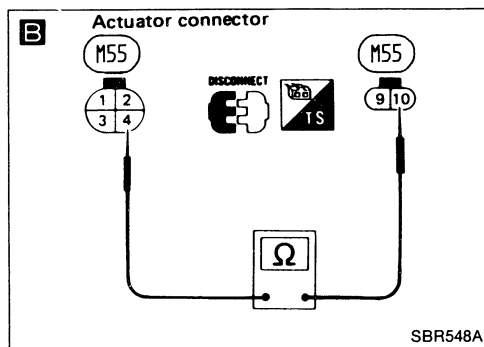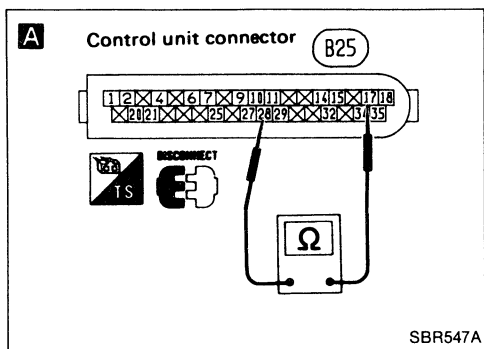

**INSPECTION START**  
Remove battery negative terminal connector.

**A** CHECK MOTOR RELAY SOLENOID RESISTANCE.  
Disconnect control unit connector.  
Check resistance between control unit connector (vehicle side) terminals 17 and 28.  
**Resistance: 45 - 55Ω**

**B** CHECK MOTOR RELAY DEACTIVATION.  
Disconnect actuator connector.  
Check continuity between actuator connector (actuator side) terminals 4 and 10.

**C** Check if motor's fusible link is blown.

**D** Disconnect actuator connector.  
Check resistance between actuator connector (actuator side) terminals 8 and 5.  
**Resistance: 45 - 55Ω**

**E** Replace motor relay.

Repair harness between actuator and control unit.

Replace motor relay.






Perform Electrical Components Inspection — ACTUATOR. (See page BR-56.)

Replace actuator.

Replace control unit.

## Diagnostic Procedure 9

### ACTUATOR SOLENOID VALVE RELAY (L.E.D. flashing number 10)

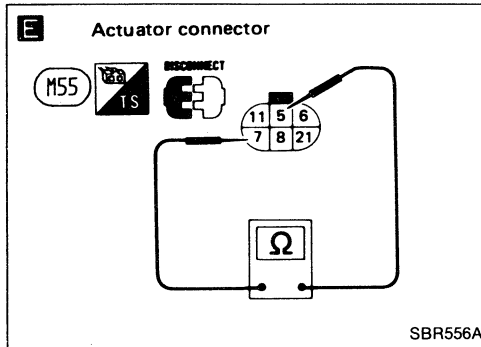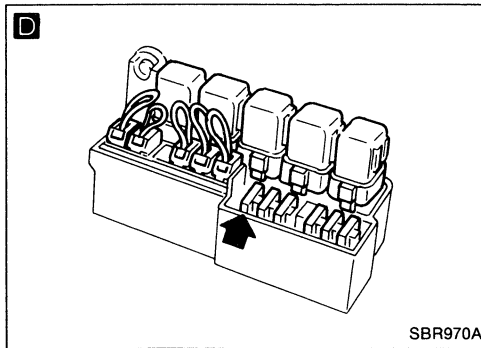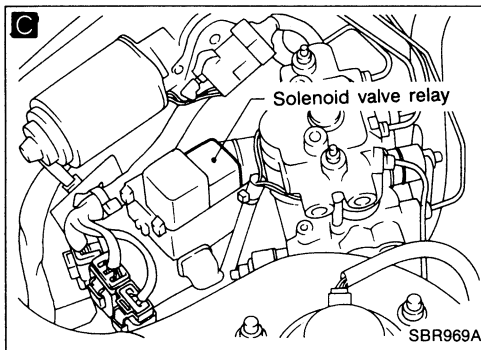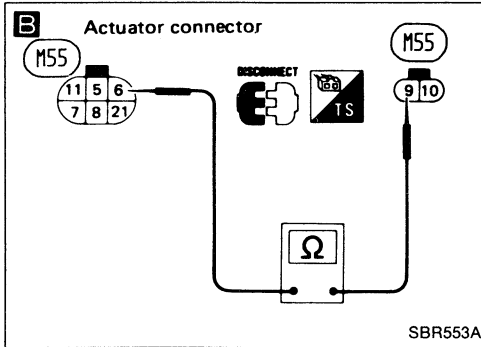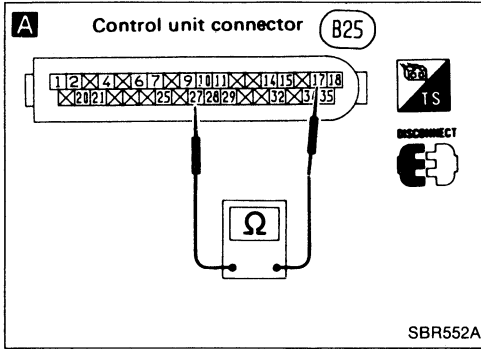

**INSPECTION START**  
Remove battery negative terminal connector.

**A** **CHECK SOLENOID VALVE RELAY RESISTANCE.**  
Disconnect control unit connector.  
Check resistance between control unit connector (vehicle side) terminals ⑦ and ⑮.  
**Resistance: 80 - 90Ω**

**E** Check resistance between actuator connector (actuator side) terminals ⑦ and ⑮.  
**Resistance: 80 - 90Ω**

O.K. **C** ↓ N.G. ↓  
Replace solenoid valve relay.

Repair harness between actuator and control unit.

**B** **CHECK SOLENOID VALVE RELAY MOVEMENT.**  
Disconnect actuator connector.  
Check continuity between actuator connector (actuator side) terminals ⑥ and ⑨.

Yes **C** → Replace solenoid valve relay.

No **D** Check if solenoid valve relay fuse is blown.

No → Perform Electrical Components Inspection — ACTUATOR. (See page BR-56.)

Yes → Replace fuse.

N.G. ↓ O.K. ↓  
Replace control unit.


Replace actuator.

# TROUBLE DIAGNOSES

---

## Diagnostic Procedure 10

### CONTROL UNIT (L.E.D. flashing number 16)




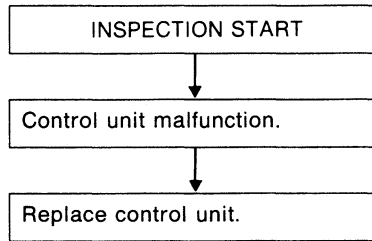




# TROUBLE DIAGNOSES

## Diagnostic Procedure 11






### CONTROL UNIT OR POWER SUPPLY AND GROUND CIRCUIT (Warning activates but L.E.D. comes off.)

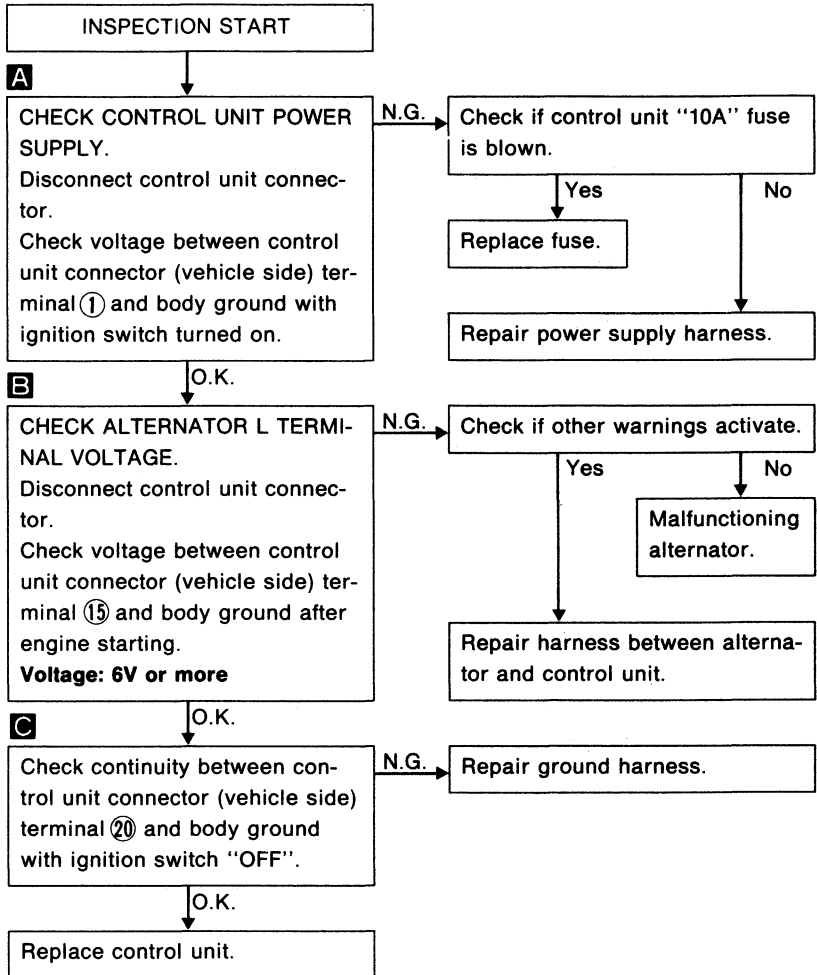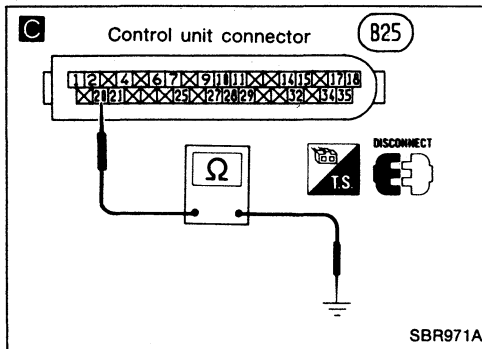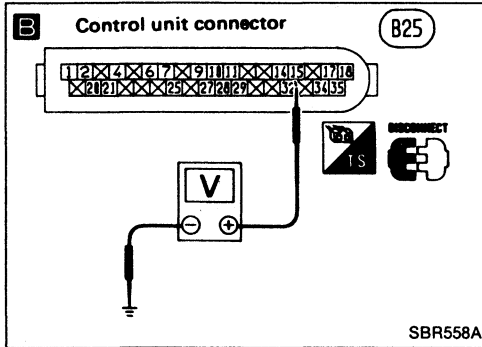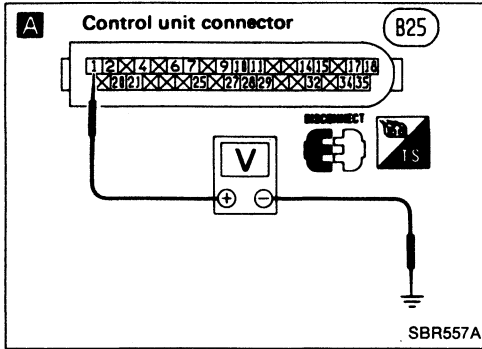

# TROUBLE DIAGNOSES


## Electrical Components Inspection

### ACTUATOR (Not self-diagnostic item)

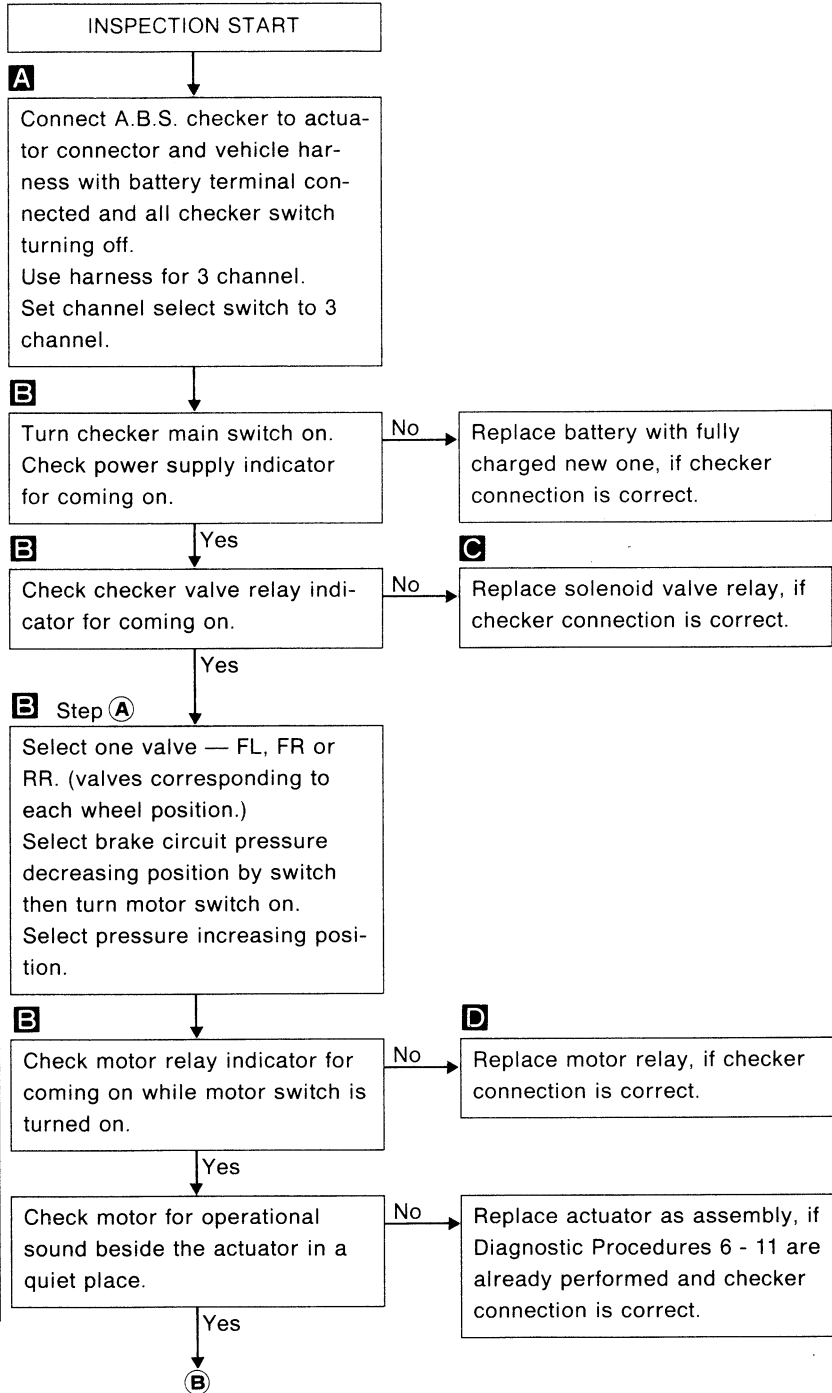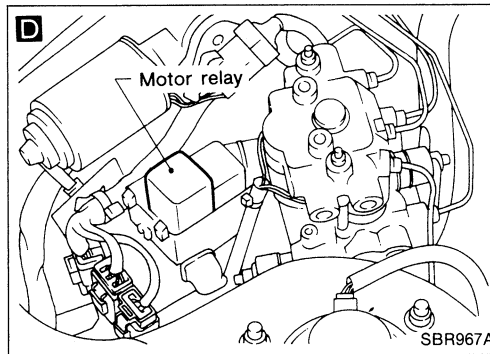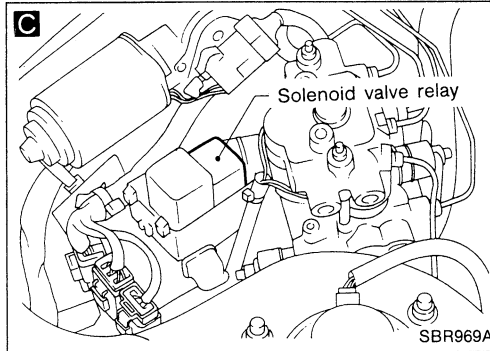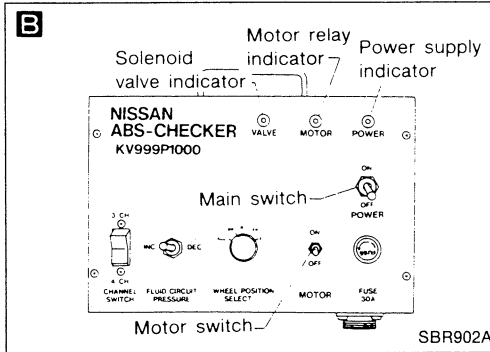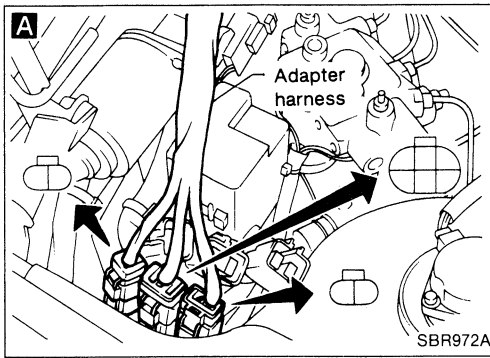

# TROUBLE DIAGNOSES

## Electrical Components Inspection (Cont'd)

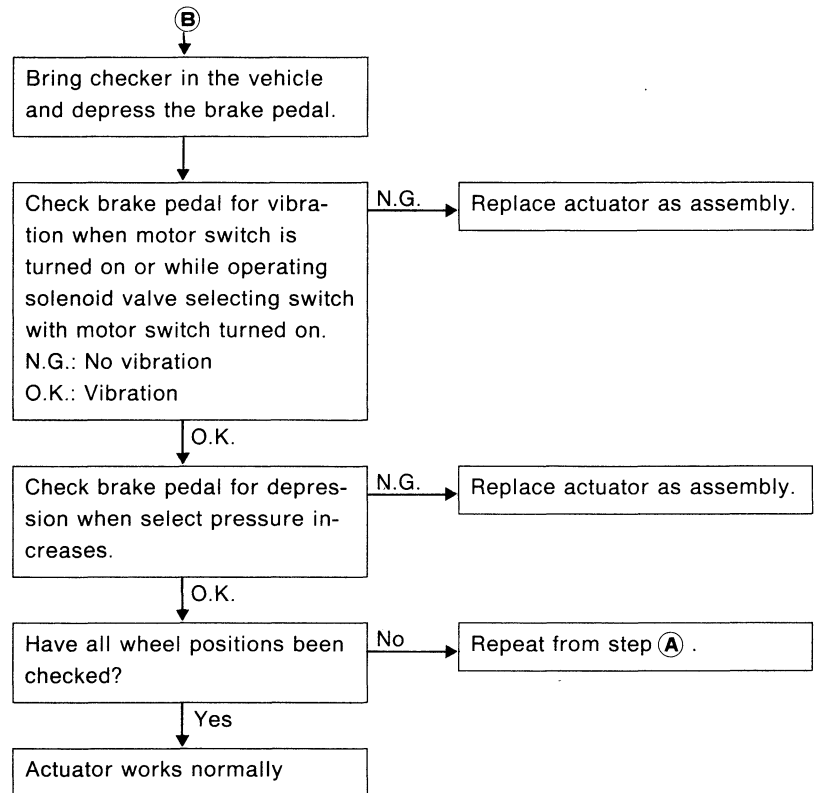

### CAUTION:

Do not set checker at pressure decrease position for more than 5 seconds at a time. Actuator solenoid valve may be damaged.

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## General Specifications

### BRAKE SYSTEM

Front brake	
Brake model	CL28VB
Cylinder bore diameter mm (in)	60.6 (2.386)
Pad length x width x thickness mm (in)	129 x 43 x 11 (5.08 x 1.69 x 0.43)
Rotor outer diameter x thickness mm (in)	274 x 22 (10.79 x 0.87)
Rear brake	
Brake model	AD14
Cylinder bore diameter mm (in)	42.8 (1.685)
Pad length x width x thickness mm (in)	93.8 x 33.4 x 10 (3.693 x 1.315 x 0.39)
Rotor outer diameter x thickness mm (in)	266 x 10 (10.47 x 0.39)

Parking brake	
Brake model	DS17HB
Lining length x width x thickness mm (in)	165.1 x 35 x 3.3 (6.50 x 1.38 x 0.130)
Drum inner diameter mm (in)	172 (6.77)
Master cylinder	
Cylinder bore diameter mm (in)	25.40 (1)
Control valve	
Valve model	Proportioning valve (within master cylinder)
Sprit point x reducing ratio kPa (kg/cm <sup>2</sup> , psi)	2,942 (30, 427) x 0.4
Brake booster	
Booster model	M195T
Diaphragm diameter mm (in)	Primary: 205 (8.07) Secondary: 180 (7.09)
Brake fluid	
Recommended brake fluid	DOT 3

## Inspection and Adjustment

### FRONT & REAR DISC BRAKE

Unit: mm (in)

Item	Brake model	
	CL28VB	AD14
Pad wear limit		
Minimum thickness	2.0 (0.079)	
Rotor repair limit		
Minimum thickness	20.0 (0.787)	9.0 (0.354)
Maximum runout	0.07 (0.0028)	

### BRAKE PEDAL

Unit: mm (in)

Free height	199 - 209 (7.83 - 8.23)
Depressed height [Under force of 490 N (50 kg, 110 lb) with engine running]	110 (4.33) or less
Clearance between pedal stopper and threaded end of switches	0.3 - 1.0 (0.012 - 0.039)
Pedal free play at pedal pad	1.0 - 3.0 (0.039 - 0.118)

### PARKING BRAKE


Unit: mm (in)

Item	Brake model	
	DS17HB	
Lining wear limit		
Minimum thickness	1.5 (0.059)	
Drum repair limit		
Inner diameter (Max.)	173.0 (6.81)	

### PARKING BRAKE LEVER

Item	Control type	
	Center lever	
Number of notches [Under force of 196 N (20 kg, 44 lb)]	8 - 9	
Number of notches when warning lamp comes on	2 or less	

# STEERING SYSTEM

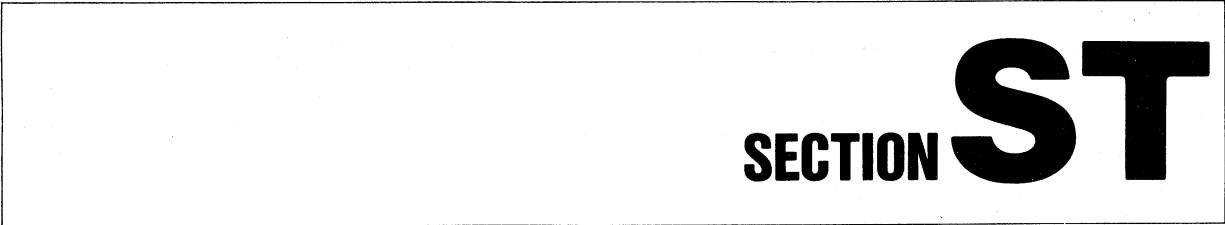

## CONTENTS

PRECAUTIONS .....	ST- 2
PREPARATION .....	ST- 3
ON-VEHICLE INSPECTION .....	ST- 5
STEERING WHEEL AND STEERING COLUMN .....	ST-10
POWER STEERING GEAR AND LINKAGE (Model PR26SC) .....	ST-13
POWER STEERING OIL PUMP .....	ST-25
SERVICE DATA AND SPECIFICATIONS (S.D.S.) .....	ST-28



## PRECAUTIONS

---

### Supplemental Restraint System “AIR BAG”

The Infiniti M30 has a Supplemental Restraint System “Air Bag”, to help reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag (located in the center of the steering wheel), five sensors, a control unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in section BF of this Service Manual.

#### WARNING:

- a. To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized INFINITI dealer.
- b. Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- c. All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation and related components are located in the steering column, center console, dash, upper radiator core support and front fenders. Do not use electrical test equipment on these circuits.


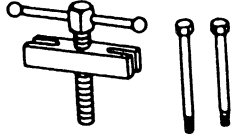
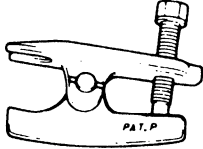
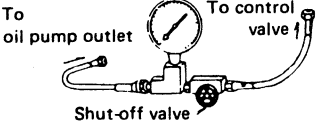
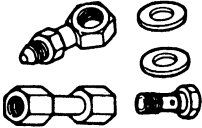
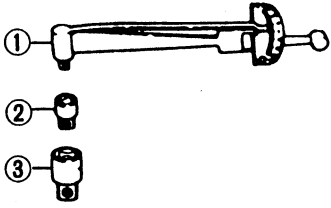
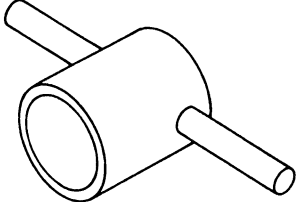
### Steering System

- Before disassembly, thoroughly clean the outside of the unit.
- Disassembly should be done in a clean work area. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- When disassembling parts, be sure to place them in order on a part rack so they can be reinstalled in their proper positions.
- Use nylon cloths or paper towels to clean the parts; common shop rags can leave lint that might interfere with their operation.
- Before inspection or reassembly, carefully clean all parts with a general purpose, non-flammable solvent.
- Before assembly, apply a coat of recommended A.T.F.\* to hydraulic parts. Vaseline may be applied to O-rings and seals. Do not use any grease.
- Replace all gaskets, seals and O-rings. Avoid damaging O-rings, seals and gaskets during installation. Perform functional tests whenever designated.

\*: Automatic transmission fluid




# PREPARATION

## SPECIAL SERVICE TOOLS

Tool number (Kent-Moore No.) Tool name	Description
KV48100700 (J26364) Torque adapter	 <p style="text-align: right;">Measuring pinion rotating torque</p>
ST27180001 (J25726-A) Steering wheel puller	 <p style="text-align: right;">Removing and installing steering wheel</p>
HT72520000 (J25730-A) Ball joint remover	 <p style="text-align: right;">Removing ball joint</p>
ST27091000 (J26357) Pressure gauge	 <p style="text-align: right;">Measuring oil pressure</p>
KV48102500 ( — ) Pressure gauge adapter	 <p style="text-align: right;">Measuring oil pressure</p>
ST3127S000 (See J25765-A) ① GG91030000 (J25765-A) Torque wrench ② HT62940000 ( — ) Socket adapter ③ HT62900000 ( — ) Socket adapter	 <p style="text-align: right;">Measuring turning torque</p>
KV48104400 ( — ) Rack seal ring reformer	 <p style="text-align: right;">Reforming teflon ring</p>


# PREPARATION

## COMMERCIAL SERVICE TOOLS

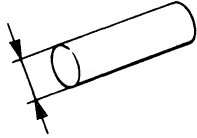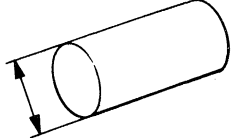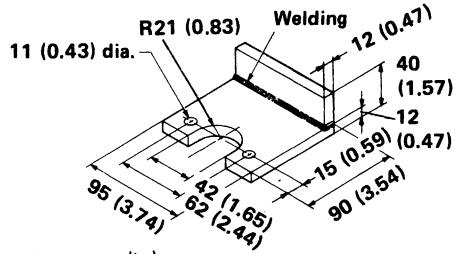Tool name	Description	
Rear oil seal drift	 28 mm (1.10 in) dia.	Installing rear oil seal
Pinion oil seal drift	 35 mm (1.38 in) dia.	Installing pinion oil seal
Oil pump attachment	 Unit: mm (in)                      SST481A	Disassembling and assembling oil pump



## ON-VEHICLE INSPECTION

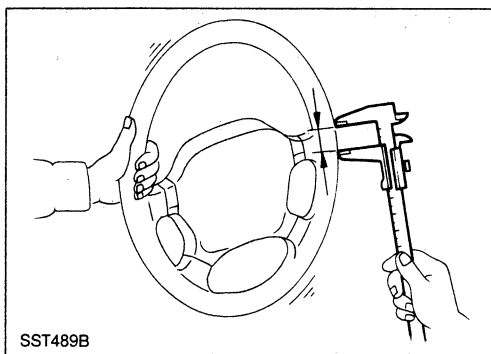


### Checking Steering Wheel Play

1. With wheels in a straight-ahead position, check steering wheel play.

**Steering wheel play:**

**35 mm (1.38 in) or less**

2. If it is not within specification, check steering gear assembly when front suspension and axle, steering gear assembly and steering column are mounted correctly.

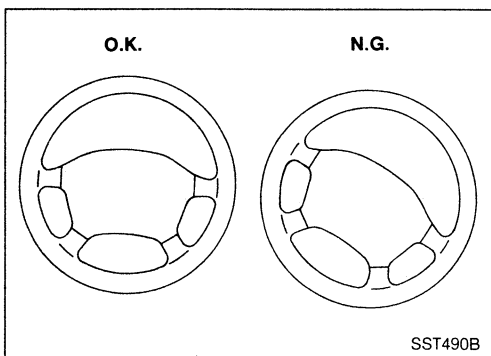

### Checking Neutral Position on Steering Wheel

#### Pre-checking

- Make sure that wheel alignment is correct.


**Wheel alignment:**

**Refer to section FA for S.D.S.**

- Verify that the steering gear is centered before removing the steering wheel.

#### Checking

1. Check that the steering wheel is in the neutral position when driving straight ahead.
2. If it is not in the neutral position, remove the steering wheel and reinstall it correctly.
3. If the neutral position is between two serrated teeth, loosen tie-rod lock nut and move tie-rod in the opposite direction by the same amount on both left and right sides to compensate for error in the neutral position.

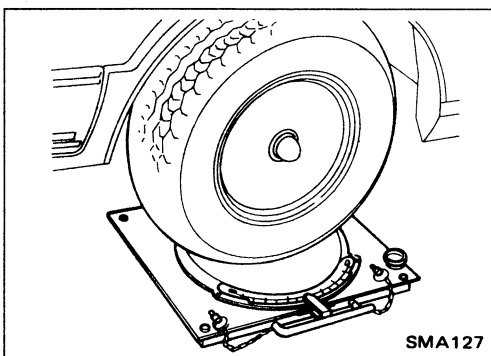


### Front Wheel Turning Angle

- Rotate steering wheel all the way right and left; measure turning angle.

**Turning angle of full turns:**

**Refer to section FA for S.D.S.**

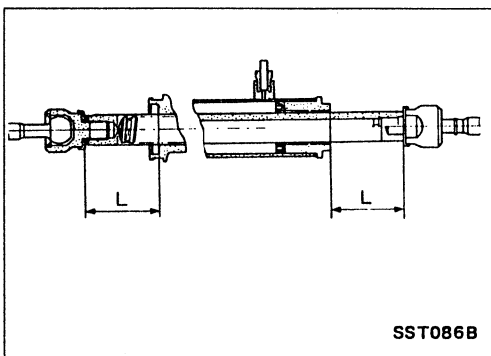


- If it is not within specification, check rack stroke.

**Rack stroke "L":**

**Refer to S.D.S.**

## ON-VEHICLE INSPECTION

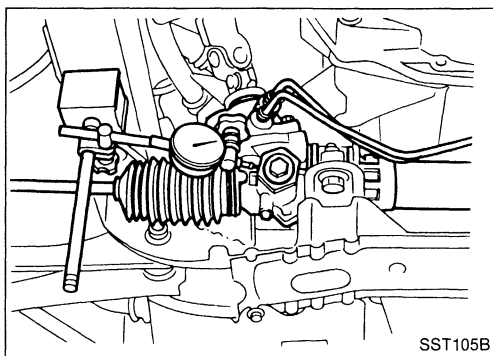

### Checking Gear Housing Movement


1. Check the movement of steering gear housing during stationary steering on a dry paved surface.
  - Apply a force of 49 N (5 kg, 11 lb) to steering wheel to check the gear housing movement.

Turn off ignition key while checking.

#### Movement of gear housing:

$\pm 2 \text{ mm } (\pm 0.08 \text{ in})$  or less

2. If movement exceeds the limit, replace mount insulator after confirming proper installation of gear housing clamps.

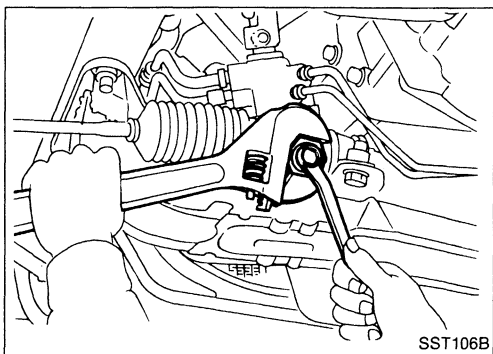


### Adjusting Rack Retainer

- Perform this driving test on a flat road.
1. Check whether vehicle moves in a straight line when steering wheel is released.
  2. Check whether steering wheel returns to neutral position when steering wheel is released from a slightly turned (approx. 20°) position.
- If any abnormality is found, correct it by resetting adjusting screw.

### Checking and Adjusting Drive Belts

Refer to section MA for Drive Belt Inspection.

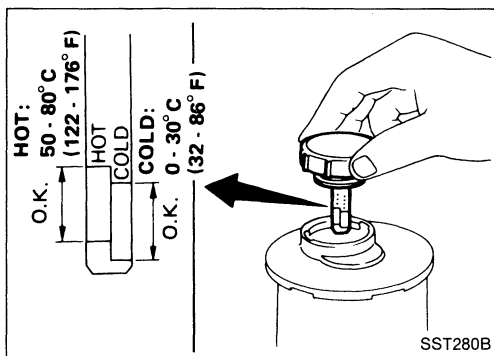

### Checking Fluid Level


Check fluid level.

Fluid level should be checked using "HOT" range on dipstick at fluid temperatures of 50 to 80°C (122 to 176°F) or using "COLD" range on dipstick at fluid temperatures of 0 to 30°C (32 to 86°F).

#### CAUTION:

- Do not overfill.
- Recommended fluid is Automatic Transmission Fluid "DEXRON™" type.

## ON-VEHICLE INSPECTION

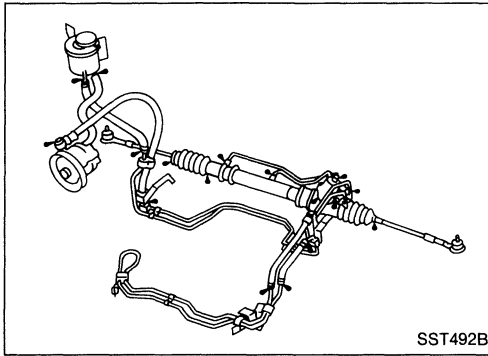

### Checking Fluid Leakage

Check the lines for improper attachment and for leaks, cracks, damage, loose connections, chafing or deterioration.

1. Run engine at idle speed or 1,000 rpm.

**Make sure temperature of fluid in oil tank rises to 60 to 80°C (140 to 176°F).**

2. Turn steering wheel right-to-left several times.
3. Hold steering wheel at each "lock" position for five seconds and carefully check for fluid leakage.

#### **CAUTION:**

**Do not hold the steering wheel in a locked position for more than 15 seconds.**

4. If fluid leakage at connectors is noticed, loosen flare nut and then retighten.


**Do not overtighten connector as this can damage O-ring, washer and connector.**

### Bleeding Hydraulic System

1. Raise front end of vehicle until wheels clear ground.
  2. Add fluid into oil tank to specified level. Meanwhile, quickly turn steering wheel fully to right and left and lightly touch steering stoppers.  
Repeat steering wheel operation until fluid level no longer decreases.
  3. Start engine.  
Repeat step 2 above.
- Incomplete air bleeding will cause the following to occur. When this happens, bleed air again.
    - a. Generation of air bubbles in reservoir tank
    - b. Generation of clicking noise in oil pump
    - c. Excessive buzzing in oil pump

While the vehicle is stationary or while turning the steering wheel slowly, fluid noise may occur in the valve or oil pump. This noise is inherent in this steering system, and it will not affect performance or durability of the system.

# ON-VEHICLE INSPECTION

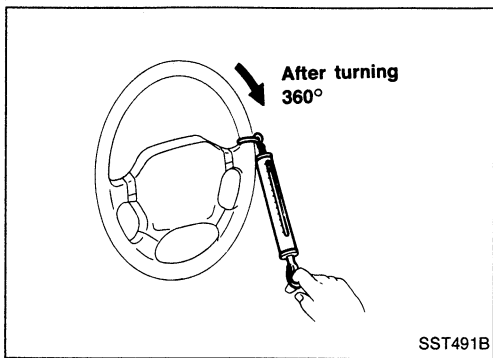

## Checking Steering Wheel Turning Force


1. Park vehicle on a level, dry surface and set parking brake.
2. Start engine.
3. Bring power steering fluid up to adequate operating temperature. [Make sure temperature of fluid is approximately 60 to 80°C (140 to 176°F).]

**Tires need to be inflated to normal pressure.**


4. Check steering wheel turning force when steering wheel has been turned 360° from neutral position.

**Steering wheel turning force:**

**29 N (3 kg, 7 lb) or less**

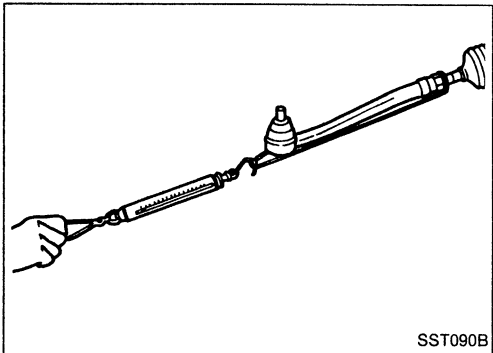

5. If steering wheel turning force is out of specifications, check rack sliding force to detect condition of steering gear assembly.
  - a. Disconnect steering column lower joint and knuckle arms from the gear.
  - b. Start and run engine at idle to make sure steering fluid has reached normal operating temperature.
  - c. While pulling tie-rod slowly in the  $\pm 11.5$  mm ( $\pm 0.453$  in) range from the neutral position, make sure rack sliding force is within specification.

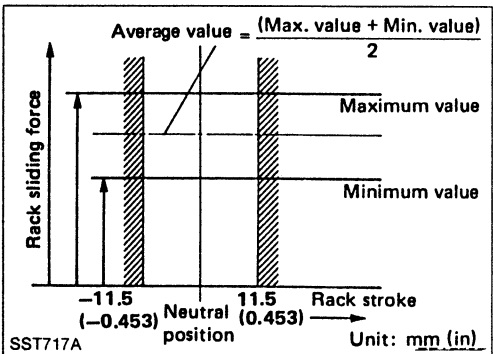

**Average rack sliding force:**


**235 - 284 N (24 - 29 kg, 53 - 64 lb)**

- d. Check sliding force outside above range.

**Maximum rack sliding force:**

**Not more than 39 N (4 kg, 9 lb) beyond above value**

6. If rack sliding force is not within specification, overhaul steering gear assembly.

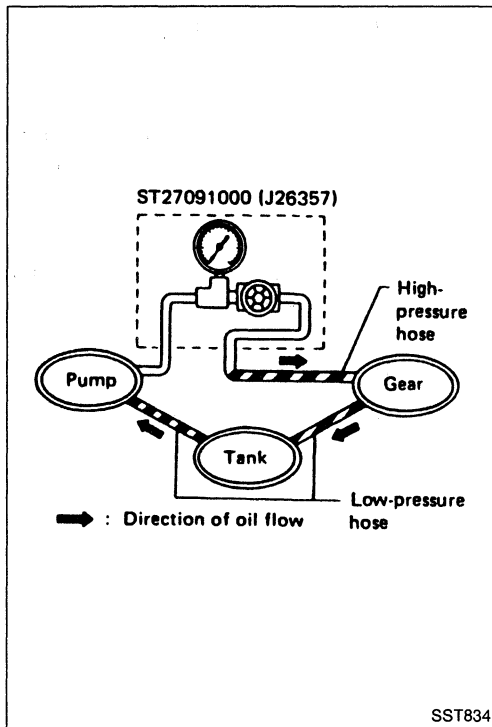

## Checking Hydraulic System

Before starting, check belt tension, driving pulley and tire pressure.

1. Set Tool. Open shut-off valve. Then bleed air. (See "Bleeding Hydraulic System".)
2. Run engine.

**Make sure temperature of fluid in tank rises to 60 to 80°C (140 to 176°F).**

### WARNING:

**Warm up engine with shut-off valve fully opened. If engine is started with shut-off valve closed, oil pressure in oil pump will increase to relief pressure, resulting in an abnormal rise in oil temperature.**

3. Check pressure with steering wheel fully turned to left and right positions with engine idling at 1,000 rpm.

### CAUTION:

**Do not hold the steering wheel in a locked position for more than 15 seconds.**

**Oil pump maximum standard pressure:**

**7,649 - 8,238 kPa (78 - 84 kg/cm<sup>2</sup>, 1,109 - 1,194 psi)**



4. If oil pressure is below the standard pressure, slowly close shut-off valve and check pressure.
  - When pressure reaches standard pressure, gear is damaged.
  - When pressure remains below standard pressure, pump is damaged.

### CAUTION:

**Do not close shut-off valve for more than 15 seconds.**

5. If oil pressure is higher than standard pressure, check oil pump flow control valve.
6. After checking hydraulic system, remove Tool and add fluid as necessary, then completely bleed air out of system.


# STEERING WHEEL AND STEERING COLUMN

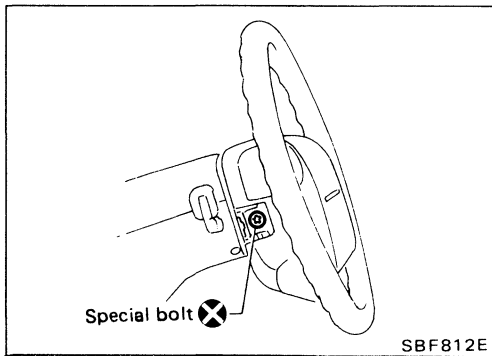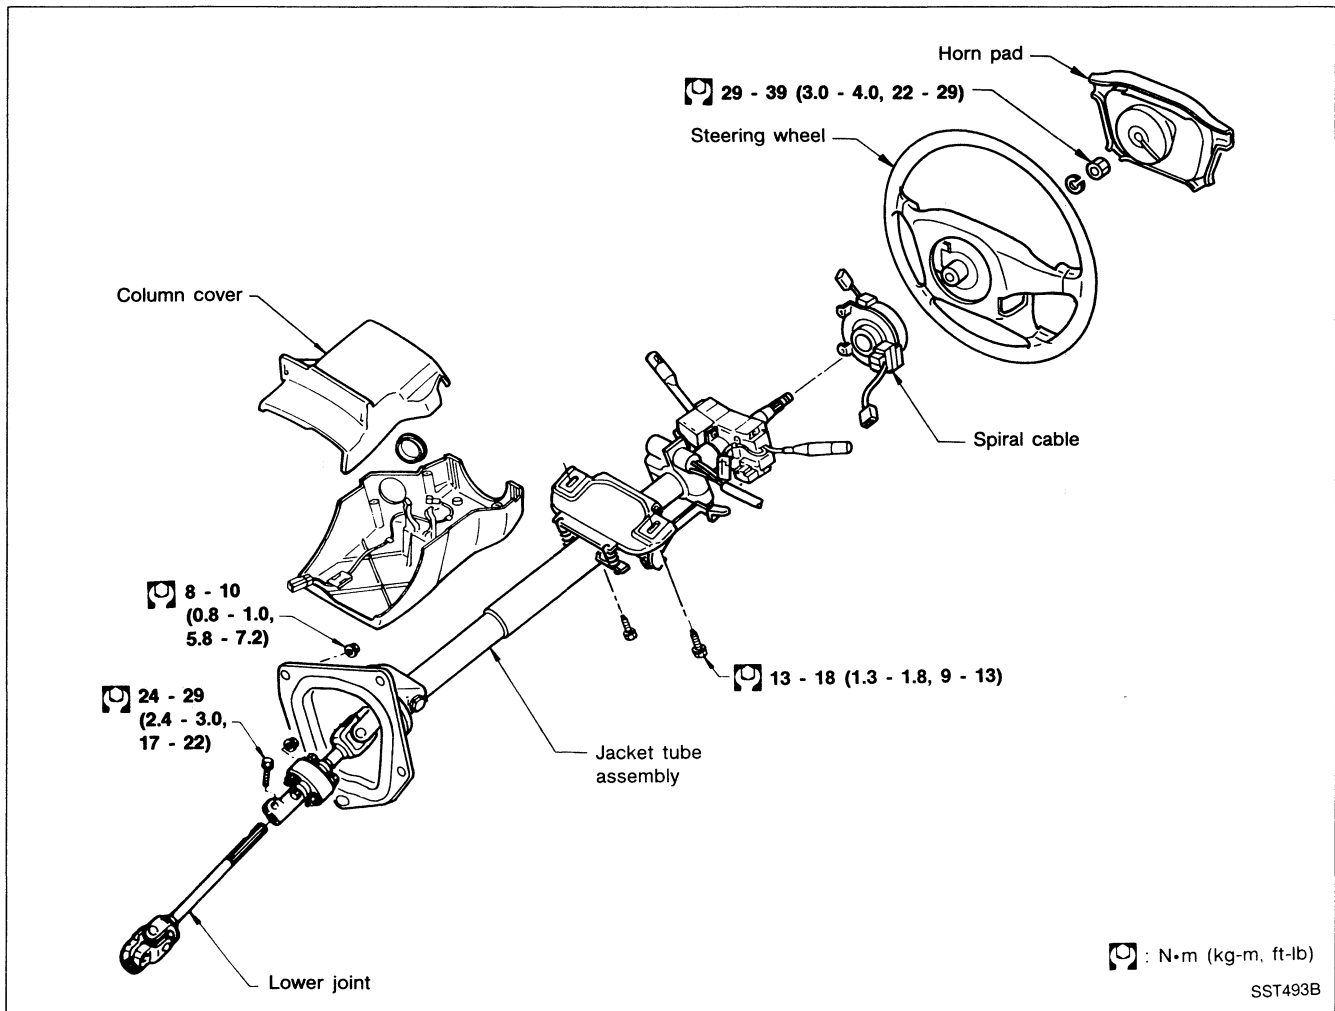

## Removal and Installation

### STEERING WHEEL

Refer to section BF for Air Bag Module and Spiral Cable Removal.

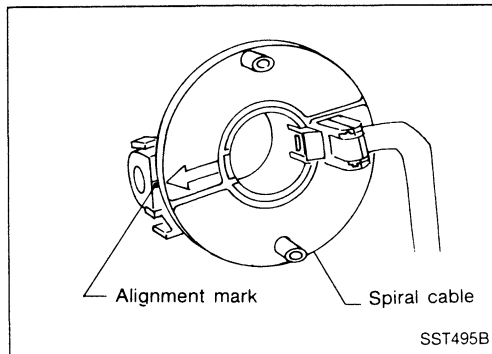


### STEERING COLUMN

#### CAUTION:

The rotation of the spiral cable (SRS "Airbag" component part) is limited. If the steering gear must be removed, set the front wheels in the straight-ahead direction. Do not rotate the steering column while the steering gear is removed.

# STEERING WHEEL AND STEERING COLUMN

## Removal and Installation (Cont'd)


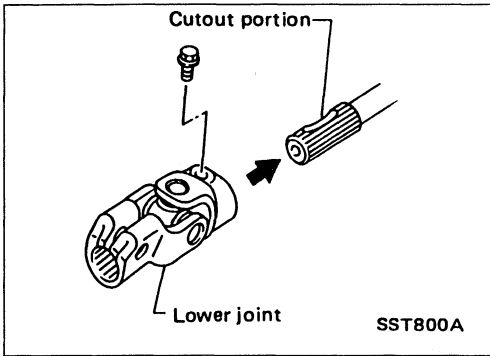


- When installing steering column, fingertighten all lower bracket and clamp retaining bolts; then tighten them securely. Do not apply undue stress to steering column.
- When attaching coupling joint, be sure tightening bolt faces cutout portion.

### CAUTION:

After installing steering column, turn steering wheel to make sure it moves smoothly and that the number of turns from the straight forward position to left and right locks are equal. Be sure that the steering wheel is in the neutral position when driving straight ahead.


## Disassembly and Assembly

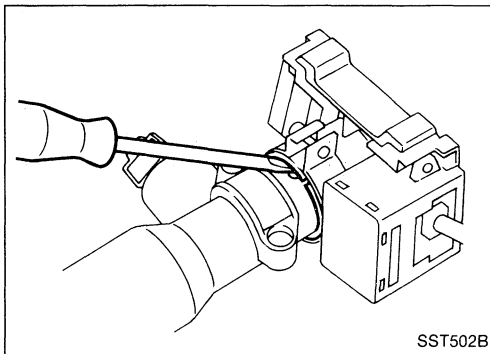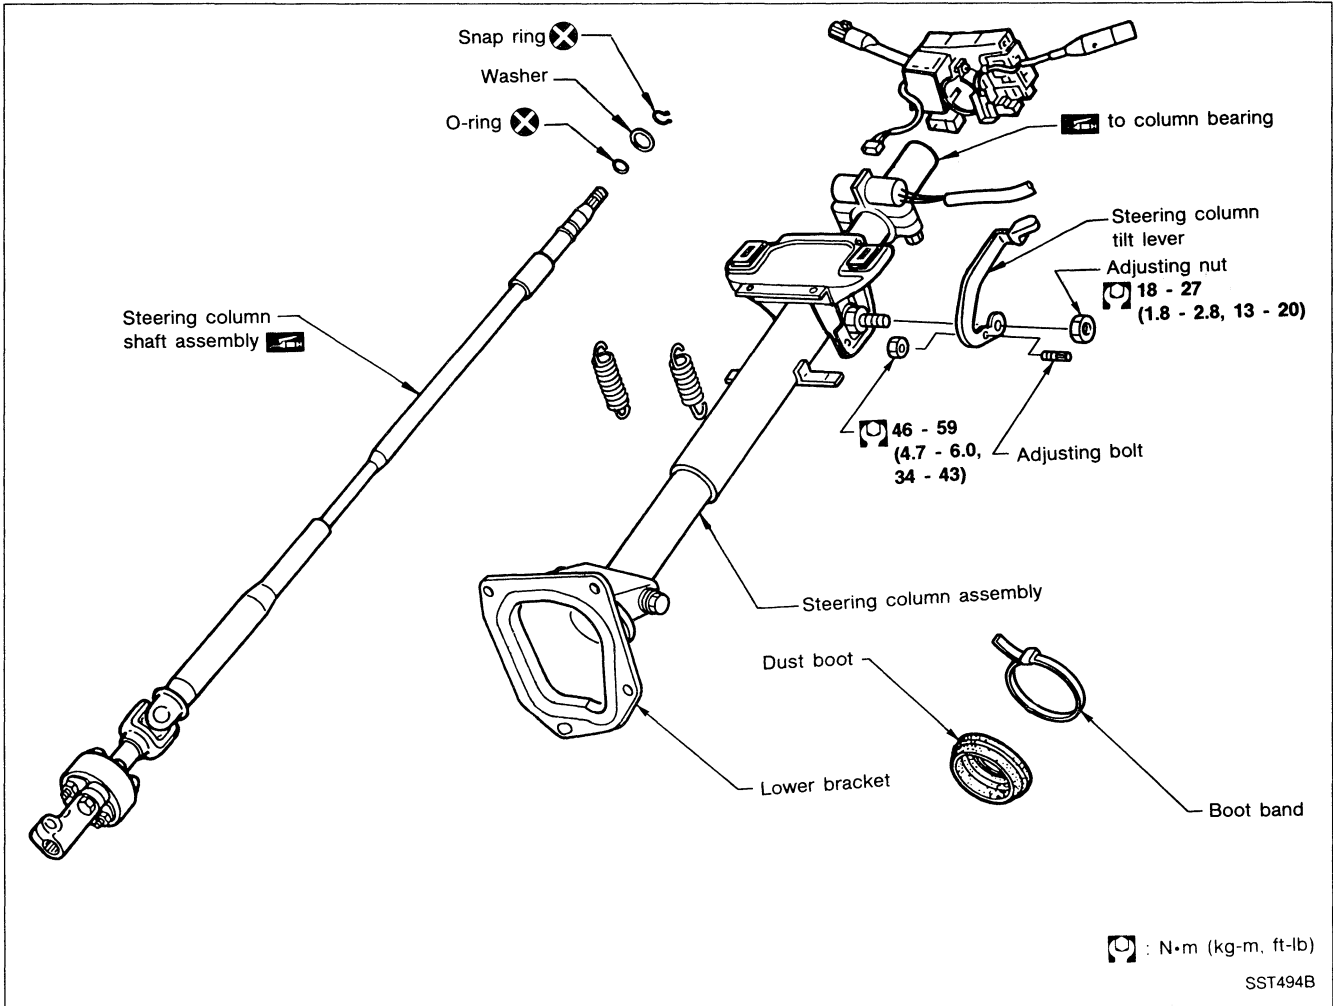


- When disassembling and assembling, unlock steering lock with key.
- To remove combination switch, insert a suitable tool between mating portions. Lift switch with bracket and pull it out.

## STEERING WHEEL AND STEERING COLUMN


### Disassembly and Assembly (Cont'd)

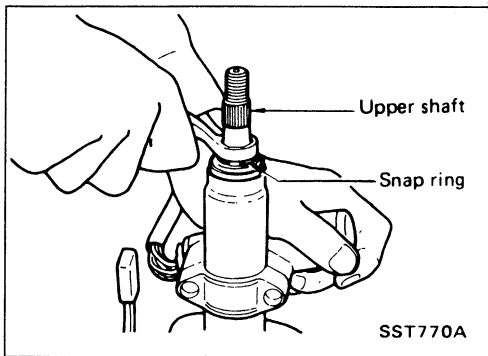

- Install snap ring on upper shaft with box wrench.

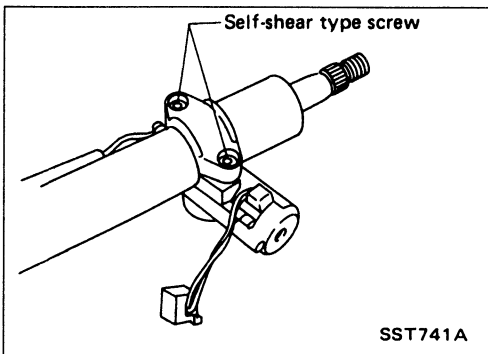


- Steering lock
  - a. Break self-shear type screws with a drill or other appropriate tool.
  - b. Install self-shear type screws and then cut off self-shear type screw heads.

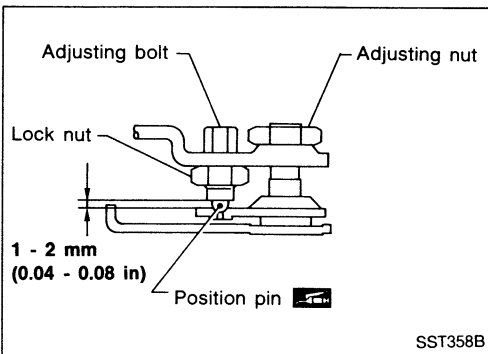

### Tilt mechanism

Adjust tilt lever as follows:

- (1) When tilt lever is in the lock position, tighten adjusting nut securely.
- (2) Turn tilt lever to the free position and check that steering column moves smoothly without binding.
- (3) Return tilt lever to the lock position. Make sure there is no movement of steering column when steering wheel is pushed up or down by force.
- (4) Check position pin to see it works smoothly.

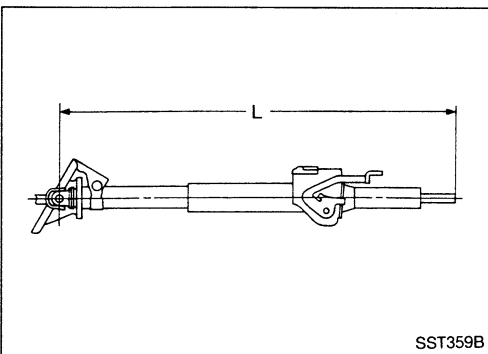

### Inspection

- When steering wheel can not be rotated smoothly, check the steering column for the following matters and replace damaged parts.
  - a. Check column bearings for damage or unevenness. Lubricate with recommended multi-purpose grease or replace steering column as an assembly, if necessary.
  - b. Check steering column shaft, lower shaft and jacket tube for deformation or breakage. Replace if necessary.
- When the vehicle is involved in a light collision, check steering column length "L<sub>1</sub>". If it is not within specifications, replace steering column as an assembly.



**Steering column length "L<sub>1</sub>":**

**745.2 - 746.8 mm (29.34 - 29.40 in)**



# POWER STEERING GEAR AND LINKAGE (Model PR26SC)


## Removal and Installation

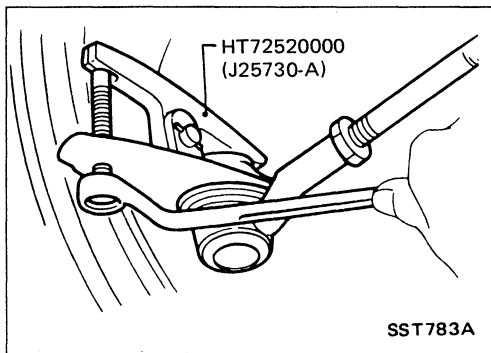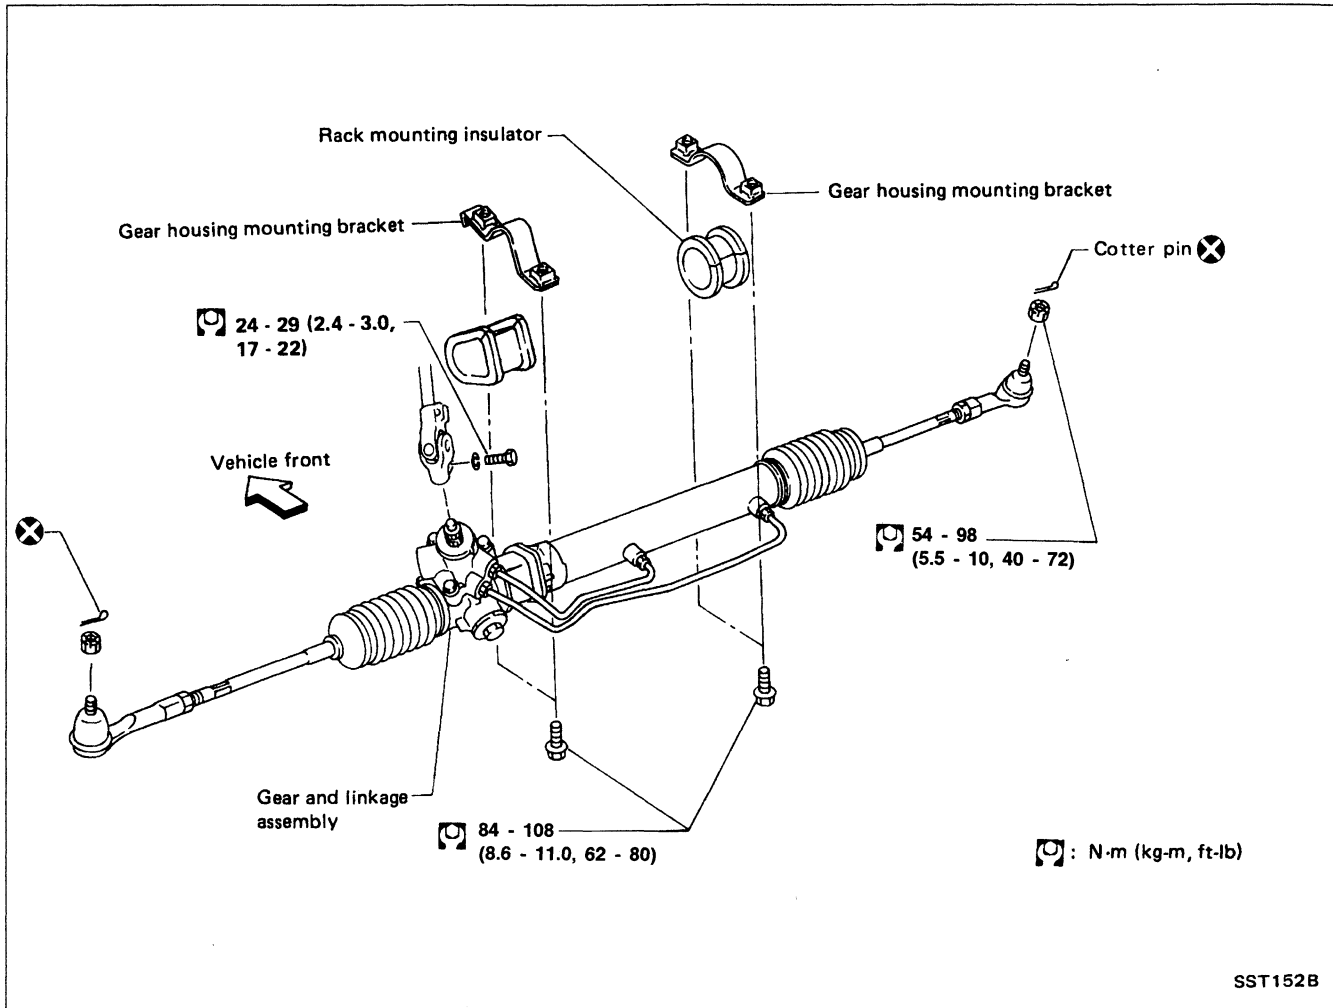

- Detach tie-rod outer sockets from knuckle arms with Tool.

## POWER STEERING GEAR AND LINKAGE (Model PR26SC)

### Removal and Installation (Cont'd)

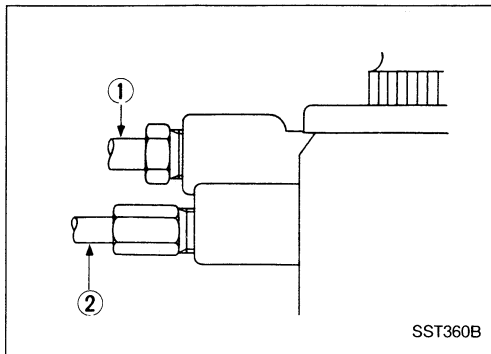

- Install pipe connector.
- Observe specified tightening torque when tightening high-pressure and low-pressure pipe connectors. Excessive tightening can damage threads or damaged connector O-ring.
- The O-ring in low-pressure pipe connector is larger than that in high-pressure connector. Take care to install the proper O-ring.


#### Connector tightening torque:

##### Low-pressure side "1"

27 - 39 N·m (2.8 - 4.0 kg-m, 20 - 29 ft-lb)

##### High-pressure side "2"


15 - 25 N·m (1.5 - 2.5 kg-m, 11 - 18 ft-lb)

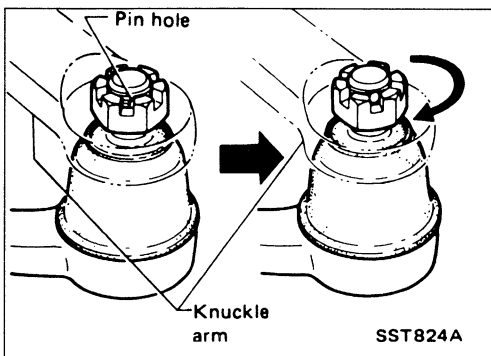


- Initially, tighten nut on tie-rod outer socket and knuckle arm to 29 to 39 N·m (3 to 4 kg-m, 22 to 29 ft-lb). Then tighten further to align nut groove with first pin hole so that cotter pin can be installed.

#### CAUTION:

**Tightening torque must not exceed 98 N·m (10 kg-m, 72 ft-lb).**

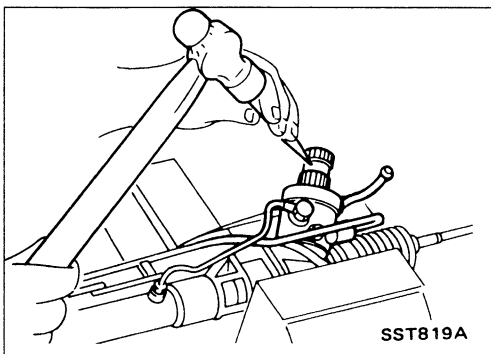

- Before removing lower joint from gear, set gear in neutral (wheels in straight-ahead position). After removing lower joint, put matching mark on pinion shaft and pinion housing to record neutral position of gear.
- To install, set left and right dust boots to equal deflection, and attach lower joint by aligning matching marks of pinion shaft and pinion housing.

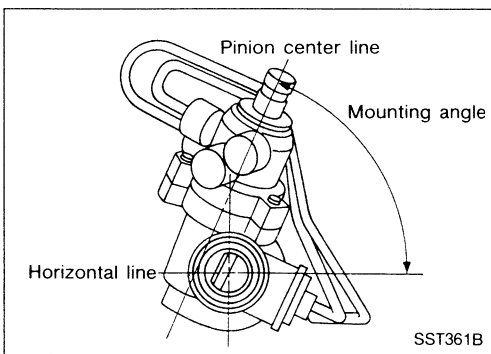


- Mount steering gear and linkage assembly with respect to the horizontal.


**Mounting angle: 67.3°**

# POWER STEERING GEAR AND LINKAGE (Model PR26SC)

## Disassembly and Assembly

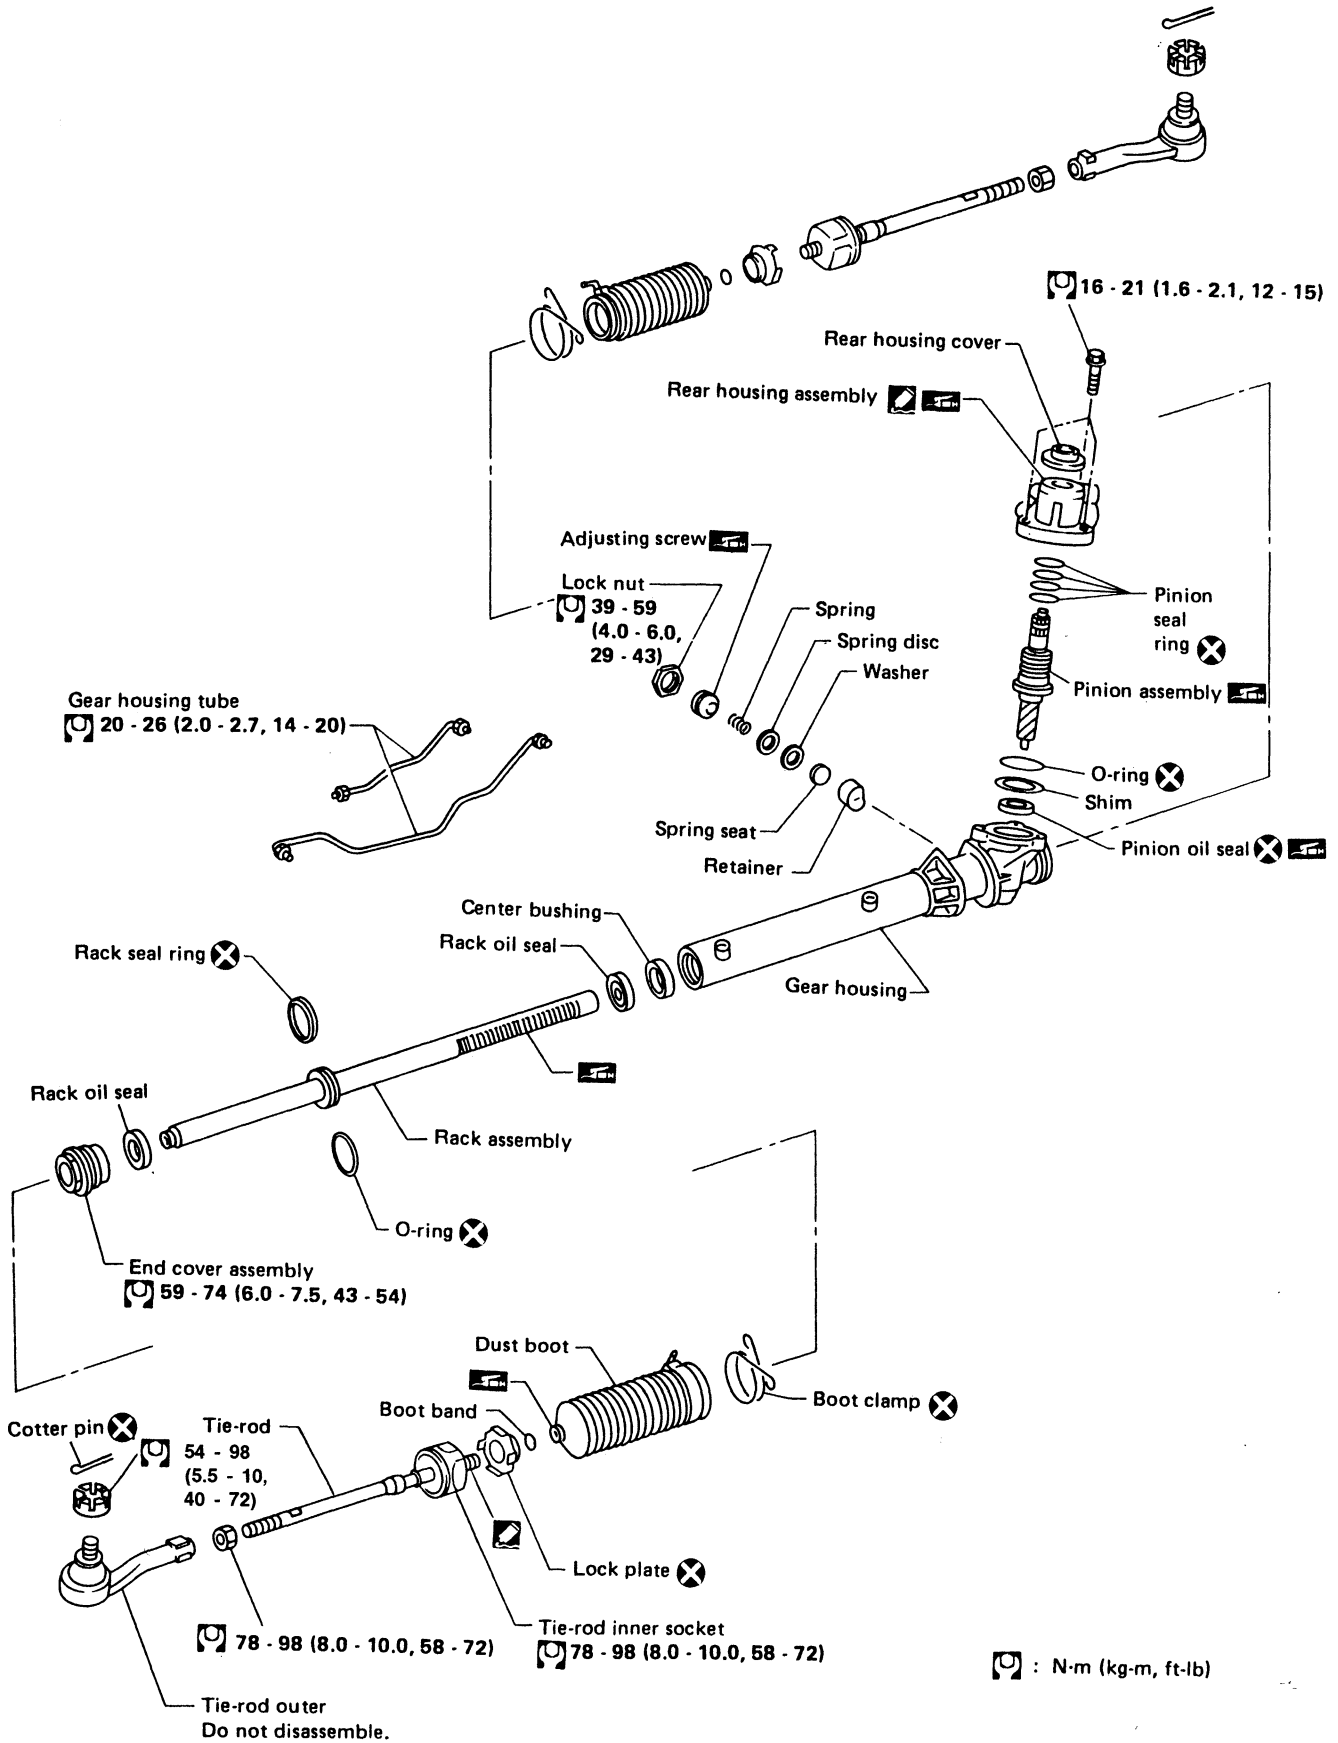


## POWER STEERING GEAR AND LINKAGE (Model PR26SC)

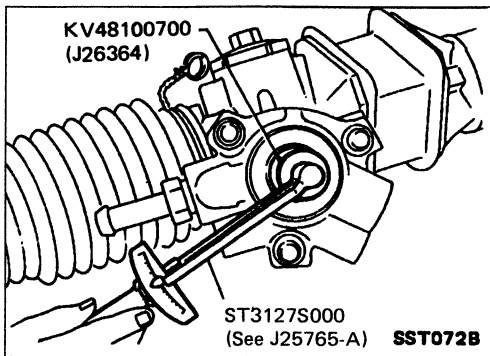


### Disassembly


1. Prior to disassembling, measure pinion rotating torque. Record the pinion rotating torque as a reference.
  - **Before measuring, disconnect gear housing tube and drain fluid.**
  - **Use soft jaws when holding steering gear housing. Handle gear housing carefully, as it is made of aluminum. Do not grip cylinder in a vise.**
2. Remove pinion gear.
  - **Be careful not to damage pinion gear when removing pinion seal ring.**

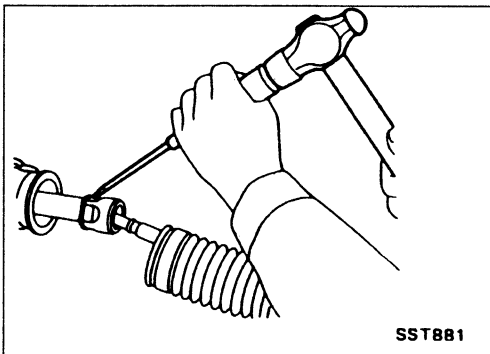

3. Remove tie-rod outer sockets and boots.
4. Loosen tie-rod inner socket by prying up staked portion, and remove socket.
5. Remove retainer.
6. Remove pinion assembly.

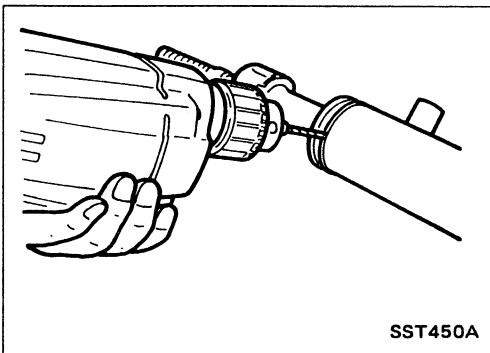


7. Drill staked portion of gear housing end with drill of 2 to 2.5 mm (0.079 to 0.098 in) diameter, until the staking is eliminated.

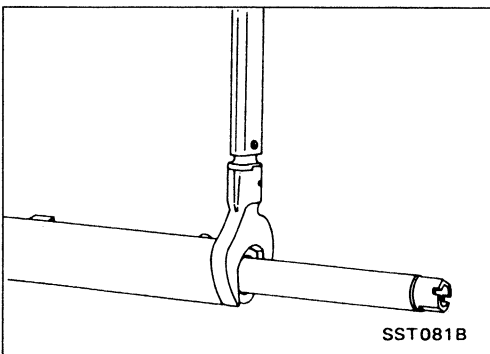

8. Remove end cover assembly with a suitable tool.
9. Draw out rack assembly.


## POWER STEERING GEAR AND LINKAGE (Model PR26SC)

### Disassembly (Cont'd)

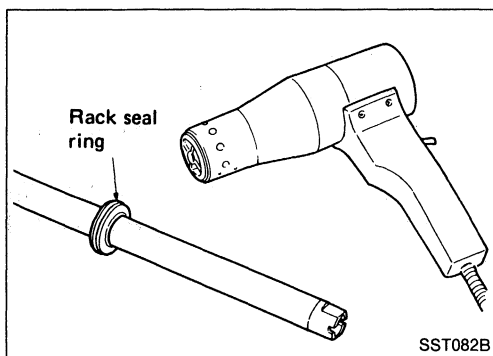

10. Remove rack seal ring.
  - Using a heat gun, heat rack seal to approximately 40°C (104°F).
  - Remove rack seal ring.

**Be careful not to damage rack.**

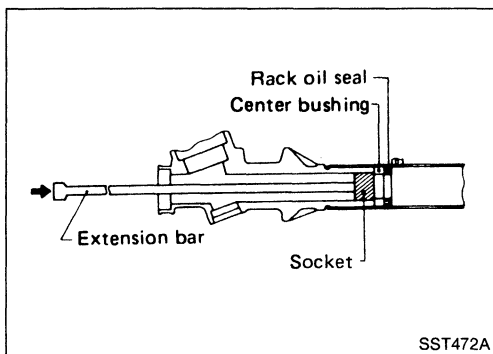

11. Remove center bushing and rack oil seal using tape wrapped socket and extension bar.

**Do not scratch inner surfaces of pinion housing.**

### Inspection

Thoroughly clean all parts in cleaning solvent or automatic transmission fluid "DEXRON™" type, and blow dry with compressed air, if available.

### BOOT


Check condition of boot. If cracked excessively, replace it.

### RACK

Thoroughly examine rack gear. If damaged, cracked or worn, replace it.

### PINION ASSEMBLY

- Thoroughly examine pinion gear. If pinion gear is damaged, cracked or worn, replace it.
- Inspect bearings to see that they roll freely and are free from cracked, pitted, or worn balls, rollers and races. Replace if necessary.

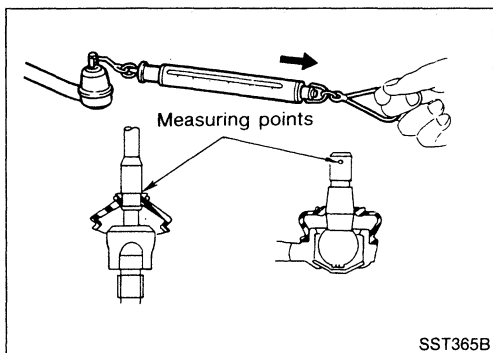


### TIE-ROD OUTER AND INNER SOCKET


- Check ball joint for swinging force.
  - Tie-rod outer ball joint:**  
Refer to S.D.S.
  - Tie-rod inner ball joint:**  
Refer to S.D.S.

# POWER STEERING GEAR AND LINKAGE (Model PR26SC)

## Inspection (Cont'd)

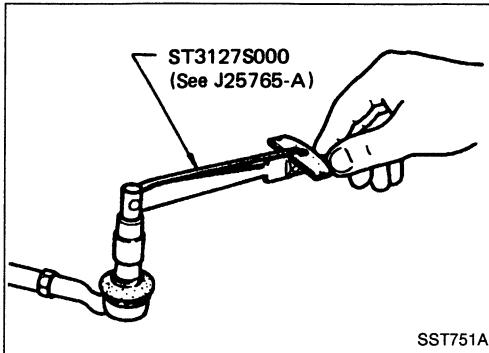


- Check ball joint for rotating torque.  
**Tie-rod outer ball joint:**  
**Refer to S.D.S.**

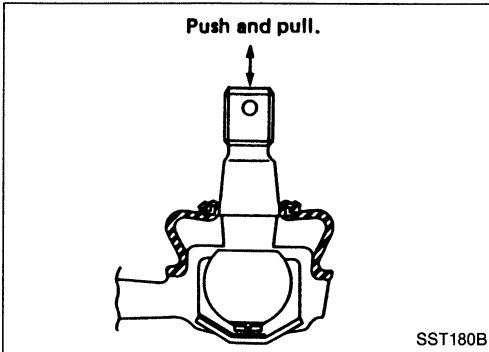

- Check ball joint for axial end play.  
**Tie-rod outer ball joint:**  
**Refer to S.D.S.**  
**Tie-rod inner ball joint:**  
**Refer to S.D.S.**
- Check condition of dust cover. If cracked excessively, replace it.


## GEAR HOUSING CYLINDER

Check gear housing cylinder for scratches or other damage. Replace if necessary.

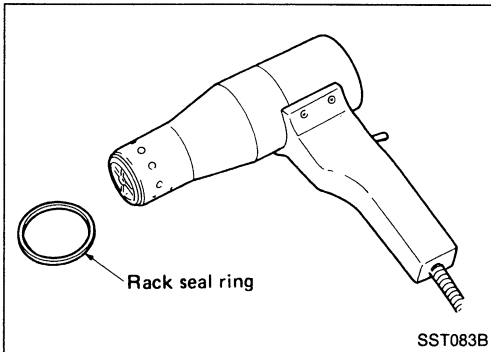

## Assembly

1. Using a heat gun, heat rack seal ring (made of Teflon) to approximately 40°C (104°F) and install it onto rack with your hand.

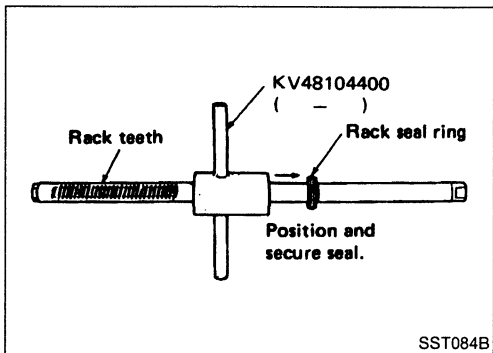


2. Using Tool, compress periphery of rack seal ring to position and secure it on rack.


**Always insert Tool from the rack gear side.**

## POWER STEERING GEAR AND LINKAGE (Model PR26SC)


### Assembly (Cont'd)

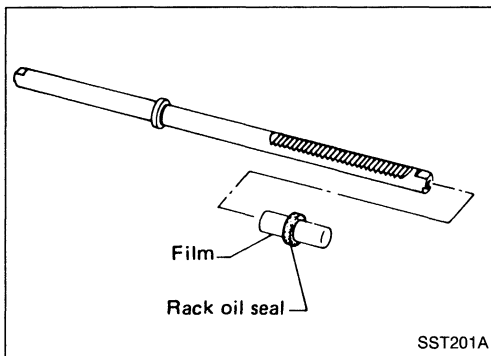


3. Insert rack oil seal.
  - Place plastic film into rack oil seal to prevent damage by rack teeth.
  - Always remove plastic film after rack oil seal is positioned properly.
  - Make sure lips of rack oil seal face each other.

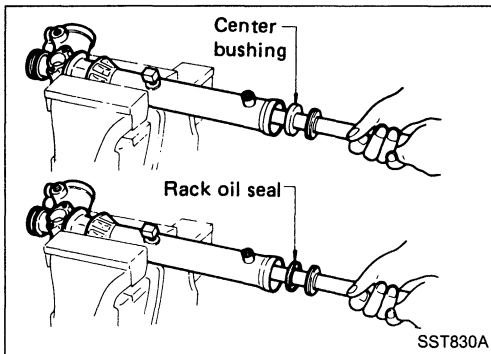


4. Install center bushing and rack oil seal with rack assembly.

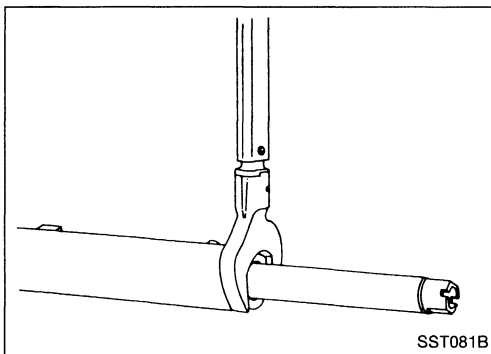

5. Tighten end cover assembly with a suitable tool.

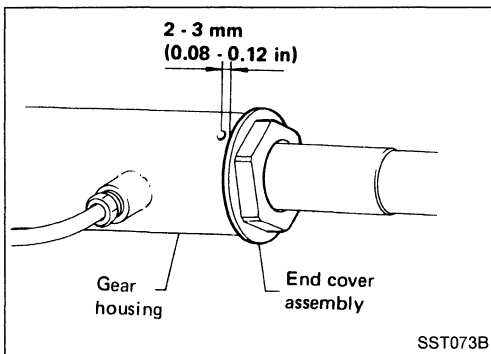


6. Fasten end cover assembly to gear housing by staking.

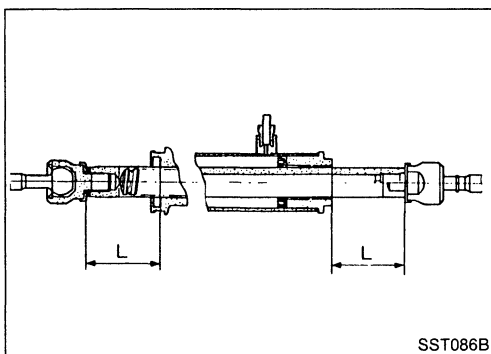

7. Set rack gear in the neutral position.  
**Rack stroke "L":**  
**Refer to S.D.S.**


## POWER STEERING GEAR AND LINKAGE (Model PR26SC)

### Assembly (Cont'd)

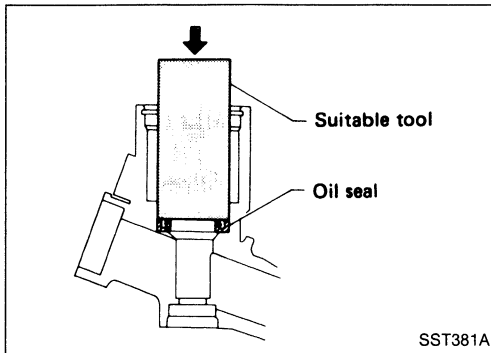


8. Coat seal lip of oil seal with multi-purpose grease and install it to pinion housing of gear housing with a suitable tool.


**Make sure lip of oil seal faces up when installed.**

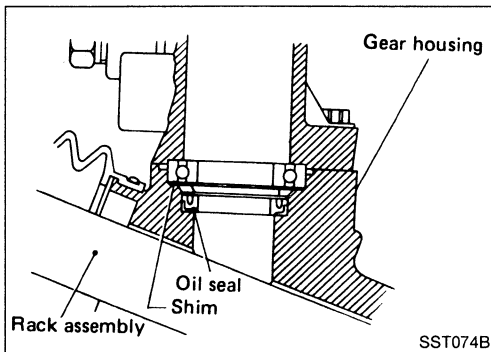


9. Install pinion bearing adjusting shim(s).
- Whenever pinion assembly, gear housing and rear housing are disassembled, replace shim(s) with new ones. Always use the same number of shim(s) when replacing.

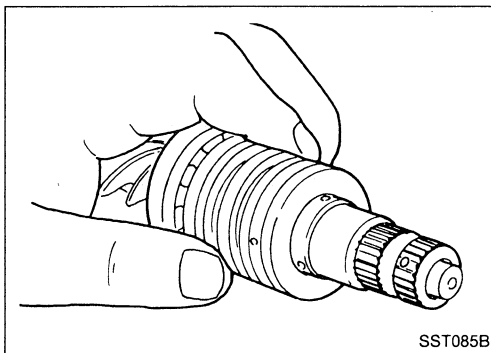

10. Install pinion seal ring on pinion gear assembly.
- Using a heat gun, heat pinion seal ring to approximately 40°C (104°F) before installing it onto pinion gear assembly.
  - Make sure pinion seal ring is properly settled in valve groove.

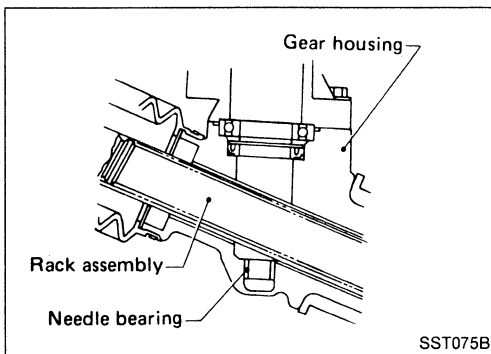

11. Apply a coat of multi-purpose grease to needle bearing roller and oil seal lip before installing pinion assembly in gear housing.

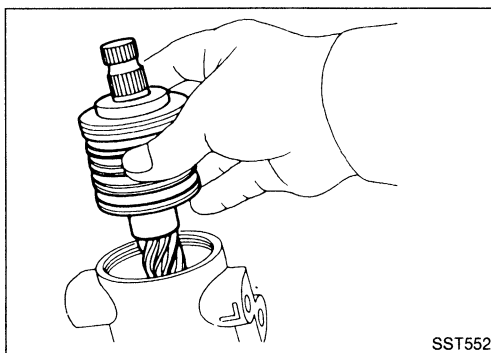


12. Install pinion assembly to pinion housing of gear housing.
- Be careful not to damage pinion oil seal.**




# POWER STEERING GEAR AND LINKAGE (Model PR26SC)

## Assembly (Cont'd)

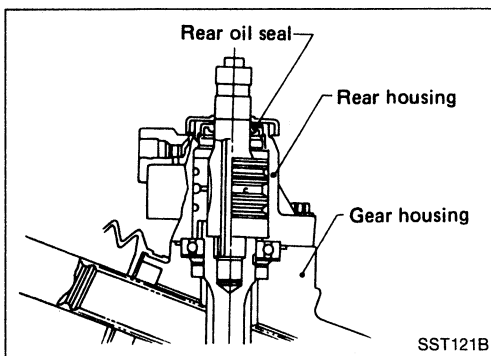


13. Apply a coat of multi-purpose grease to rear oil seal lip before installing rear housing.

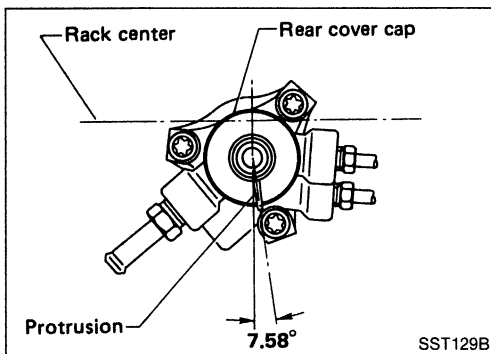


14. Install rear cover cap so that protrusion of rear housing cover is positioned as shown in figure at left when rack is centralized.

**Be careful not to damage worm ring and oil seal.**

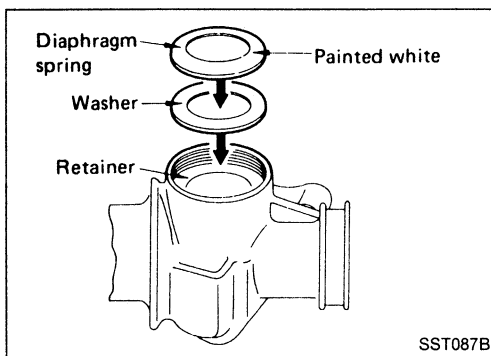


15. Install diaphragm spring at retainer.
- Always install retainer, spring washer and diaphragm spring in that order.
  - Make sure convex end (painted white) of diaphragm spring faces outward when installing.
16. Install retainer spring and adjusting screw temporarily.

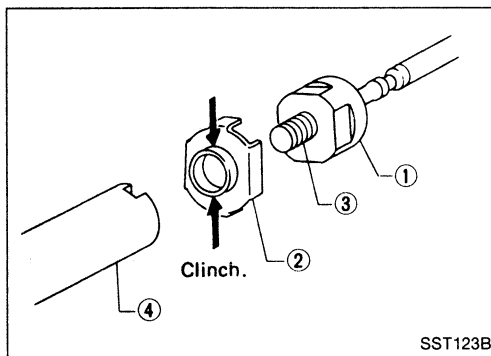

17. Install new lock plate.
- Attach lock plate ② to side rod inner socket ①.
  - Apply locking sealant to inner socket threads ③. Screw inner socket into rack ④ and tighten to specified torque.
  - Clinch two places of lock plate at rack's groove.

### CAUTION:

**To prevent scratching the boot, remove burrs from lock plate.**

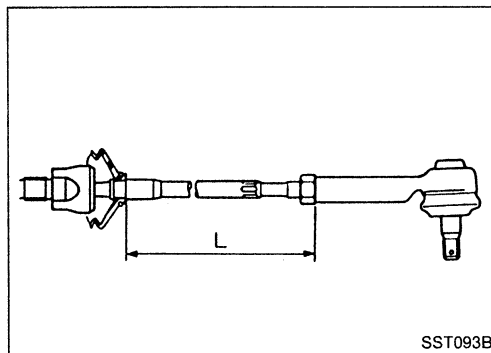


18. Tighten outer socket lock nut.


**Tie-rod length "L":  
Refer to S.D.S.**

# POWER STEERING GEAR AND LINKAGE (Model PR26SC)


## Assembly (Cont'd)

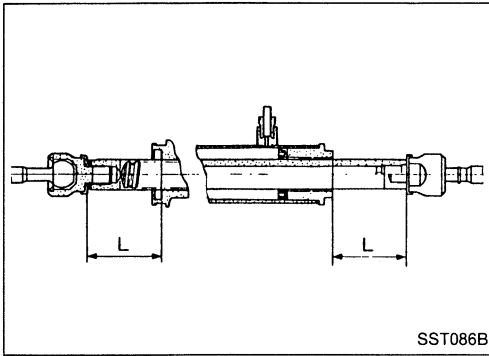


19. Measure rack stroke.  
**Rack stroke "L":**  
Refer to S.D.S.

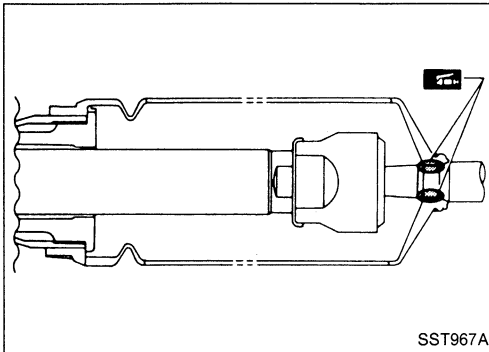


20. Before installing boot, coat the contact surfaces between boot and tie-rod with grease.

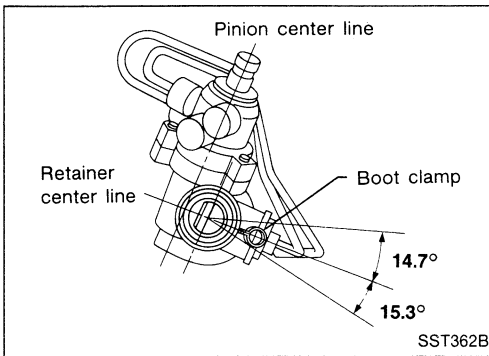

21. Install boot clamps.  
● Install boot clamps where they will not interfere with other parts.

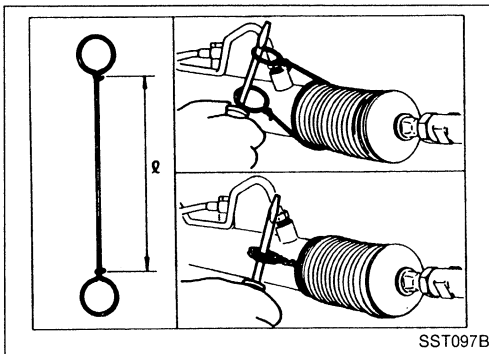


- To install, wrap boot clamp around boot groove twice. Tighten clamp by twisting rings at both ends 4 to 4-1/2 turns with screwdriver while pulling with a force of approx. 98 N (10 kg, 22 lb).

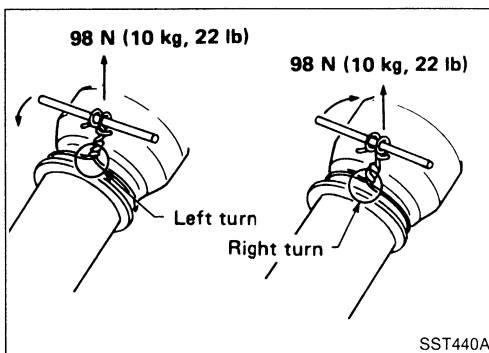


- Twist boot clamp in the direction shown in figure at left.

# POWER STEERING GEAR AND LINKAGE (Model PR26SC)

## Assembly (Cont'd)

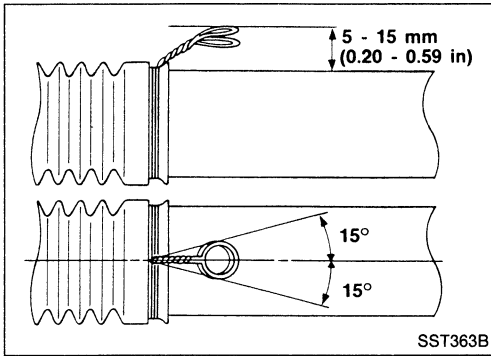



- After twisting boot clamp, bend twisted portion inward so it does not contact boot.

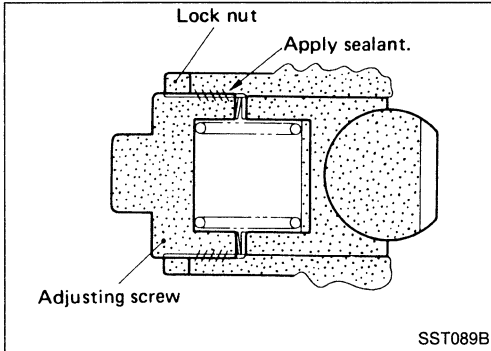

## Adjustment


Adjust pinion rotating torque as follows:

1. Set rack to the neutral position without fluid in the gear.
2. Coat the adjusting screw with locking sealant and screw it in.
3. Lightly tighten lock nut.
4. Tighten adjusting screw to a torque of 4.9 to 5.9 N·m (50 to 60 kg-cm, 43 to 52 in-lb).
5. Loosen adjusting screw, then retighten it to 0.2 N·m (2 kg-cm, 1.7 in-lb).
6. Move rack over its entire stroke several times.
7. Measure pinion rotating torque within the range of 180° from neutral position.  
Stop the gear at the point of maximum torque.
8. Loosen adjusting screw, then retighten it to 4.9 N·m (50 kg-cm, 43 in-lb).
9. Loosen adjusting screw by 70° to 110°.
10. Prevent adjusting screw from turning, and tighten lock nut to specified torque.

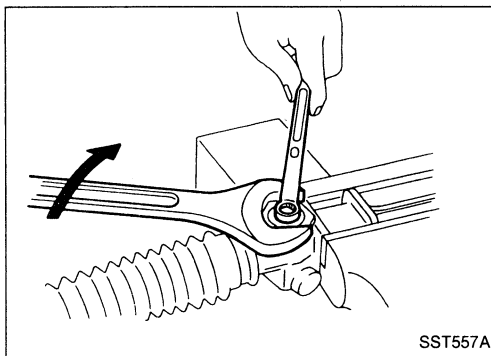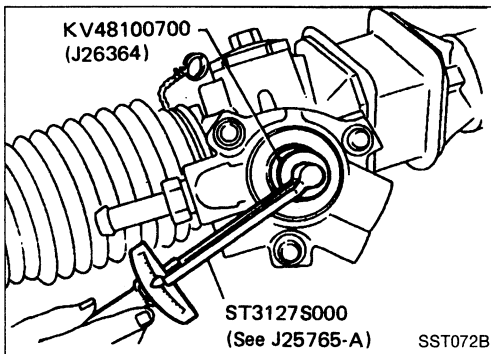


# POWER STEERING GEAR AND LINKAGE (Model PR26SC)

## Adjustment (Cont'd)

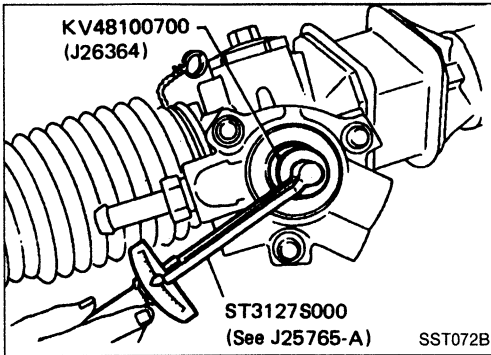

11. Measure pinion rotating torque.
  - Within  $\pm 100^\circ$  from the neutral position:**
    - Average rotating torque**  
0.8 - 1.3 N·m (8 - 13 kg·cm, 6.9 - 11.3 in·lb)
    - Maximum torque deviation**  
0.4 N·m (4 kg·cm, 3.5 in·lb)
  - Except for above measuring range:**
    - Maximum rotating torque**  
1.9 N·m (19 kg·cm, 16 in·lb)
    - Maximum force deviation**  
0.6 N·m (6 kg·cm, 5.2 in·lb)

- If pinion rotating torque is not within specifications, readjust it starting from procedure 4. If pinion rotating torque is still out of specifications after readjustment, replace steering gear assembly.

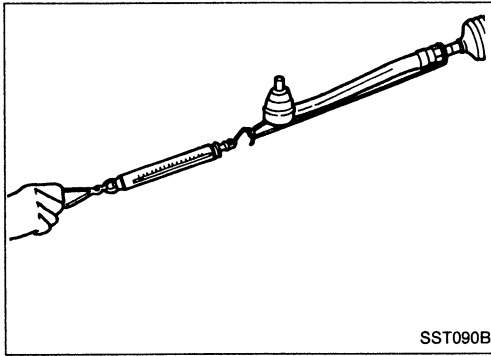

12. Check rack sliding force on vehicle as follows:
  - a. Install steering gear onto vehicle, but do not connect tie-rod to knuckle arm.
  - b. Connect all piping and fill with steering fluid.
  - c. Start engine and bleed air completely.
  - d. Disconnect steering column lower joint from the gear.
  - e. Keep engine at idle and make sure steering fluid has reached normal operating temperature.
  - f. While pulling tie-rod slowly in the  $\pm 11.5$  mm ( $\pm 0.453$  in) range from the neutral position, make sure rack sliding force is within specification.

### Average rack sliding force:


**235 - 284 N (24 - 29 kg, 53 - 64 lb)**

- g. Check sliding force outside above range.

### Maximum rack sliding force:



**Not more than 39 N (4 kg, 9 lb) beyond above value**

- If rack sliding force is not within specification, readjust by repeating adjustment procedure from the beginning.
- If rack sliding force is still out of specification after readjustment, gear assembly needs to be replaced.

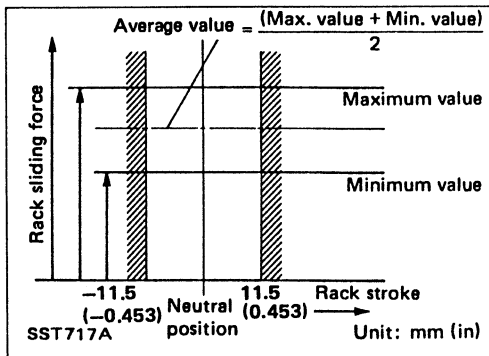

# POWER STEERING OIL PUMP

## Disassembly and Assembly

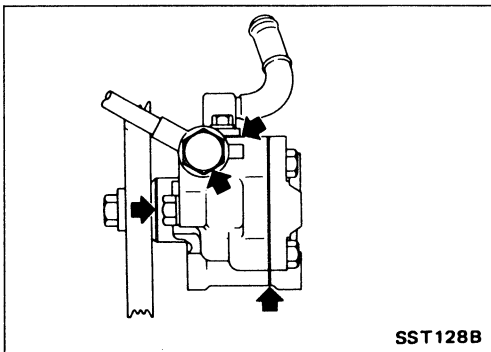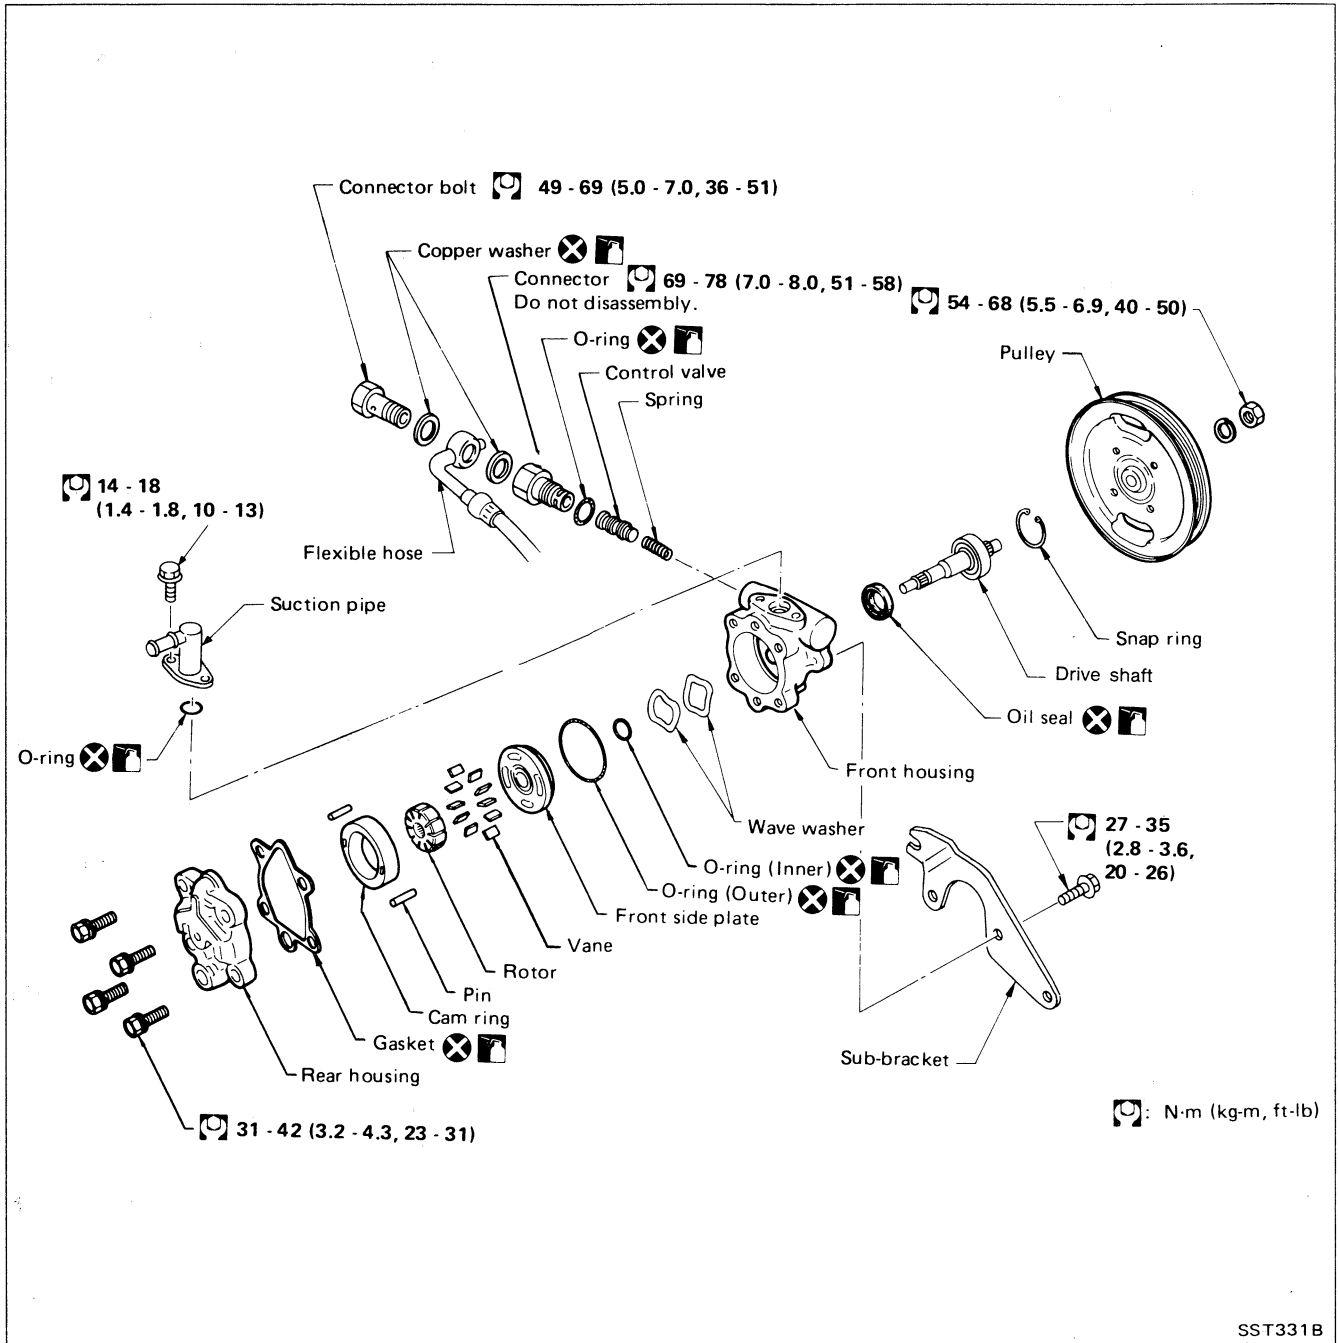

### Pre-disassembly Inspection

Disassemble the power steering oil pump only if the following items are found.


- Oil leak from any point shown in the figure.
- Deformed or damaged pulley.
- Poor performance.

# POWER STEERING OIL PUMP


## Disassembly

### CAUTION:


- Parts which can be disassembled are strictly limited. Never disassemble parts other than those specified.
- Disassemble in as clean a place as possible.
- Clean your hands before disassembly.
- Do not use rags; use nylon cloths or paper towels.
- Follow the procedures and cautions in the Service Manual.
- When disassembling and reassembling, do not let foreign matter enter or contact the parts.

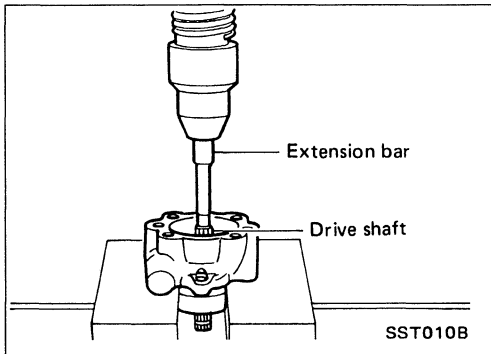

- Remove snap ring, then draw drive shaft out.  
**Be careful not to drop drive shaft.**

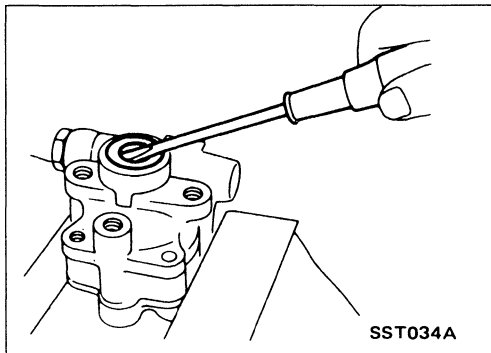

- Remove oil seal.  
**Be careful not to damage front housing.**

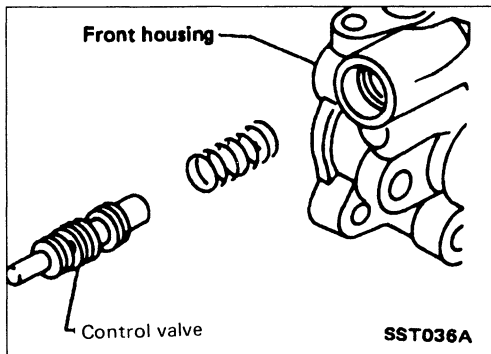


- Remove connector.  
**Be careful not to drop control valve.**

## Inspection

Inspect each component part for wear, deformation, scratches, and cracks. If damage is found, replace the part.


# POWER STEERING OIL PUMP

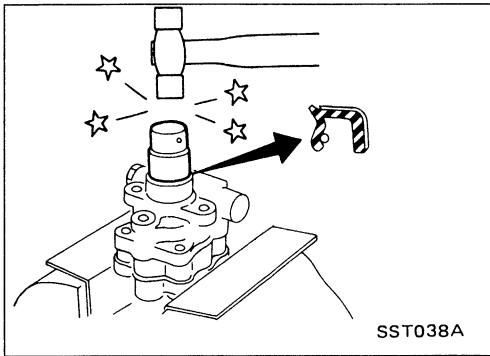


## Assembly

Assemble oil pump, noting the following instructions.


- Make sure O-rings and oil seal are properly installed.
- Always install new O-rings and oil seal.
- Be careful of oil seal direction.
- Cam ring, rotor and vanes must be replaced as a set if necessary.
- Coat each part with A.T.F. when assembling.

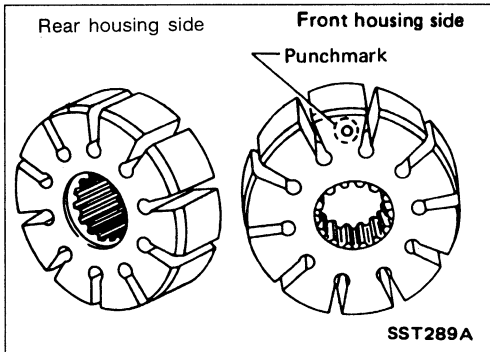

- Pay attention to the direction of rotor.

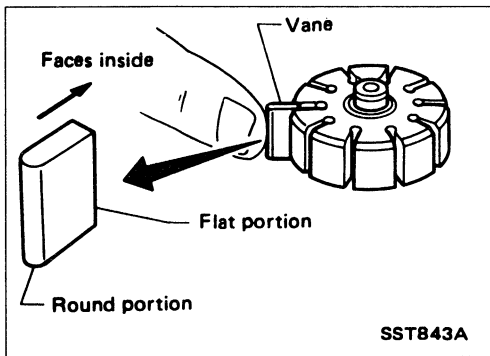

- When assembling vanes to rotor, rounded surfaces of vanes must face cam ring side.

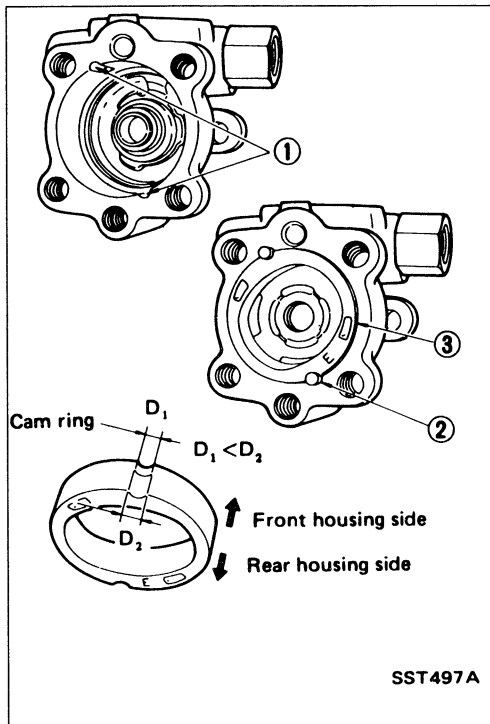

- Insert pin ② into pin groove ① of front housing and front side plate. Then install cam ring ③ as shown at left.

# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## General Specifications

Applied model	All
Steering model	Power steering
Steering gear type	PR26SC
Steering overall gear ratio	18.3
Turns of steering wheel (Lock to lock)	3.1
Steering column type	Collapsible, tilt


## Inspection and Adjustment

### GENERAL

Steering wheel axial play mm (in)	0 (0)
Steering wheel play mm (in)	35 (1.38) or less
Movement of gear housing mm (in)	$\pm 2$ ( $\pm 0.08$ ) or less

### STEERING COLUMN

Steering column length "L" mm (in)	745.2 - 746.8 (29.34 - 29.40)
---------------------------------------	-------------------------------

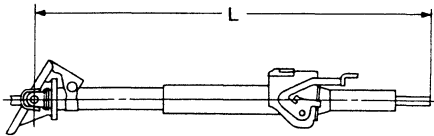


SST359B

### STEERING GEAR AND LINKAGE

Steering gear type	PR26SC
Side rod outer ball joint	
Swinging force at cotter pin hole N (kg, lb)	6.9 - 67.7 (0.7 - 6.9, 1.5 - 15.2)
Rotating torque N·m (kg-cm, in-lb)	0.3 - 2.9 (3 - 30, 2.6 - 26.0)
Axial end play mm (in)	0.5 (0.020) or less
Side rod inner ball joint	
Swinging force* N (kg, lb)	28.4 - 259.9 (2.9 - 26.5, 6.4 - 58.4)
Rotating torque N·m (kg-cm, in-lb)	1.0 - 8.8 (10 - 90, 8.7 - 78.1)
Axial end play mm (in)	0 (0)
Side rod standard length "L" mm (in)	143.5 (5.65)

\*: Measuring point

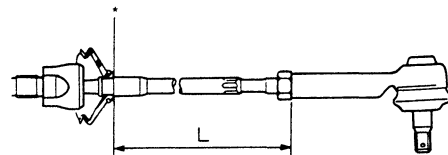

SST364B




# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## Inspection and Adjustment (Cont'd)

### STEERING GEAR AND LINKAGE (Cont'd)

Steering gear type	PR26SC
Rack stroke "L" mm (in)	71 (2.80)

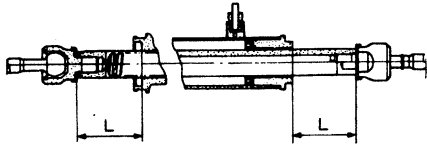

SST086B

Retainer adjustment	
Adjusting screw	
Initial tightening torque N·m (kg-cm, in-lb)	4.9 - 5.9 (50 - 60, 43 - 52)
Retightening torque after loosening	0.2 (2, 1.7)
Tightening torque after gear has settled	4.9 (50, 43)
Returning angle degree	70° - 110°
Pinion gear preload without gear oil N·m (kg-cm, in-lb)	
Within ± 100° from the neutral position	
Average rotating torque	0.78 - 1.27 (8.0 - 13.0, 6.9 - 11.3)
Maximum torque deviation	0.4 (4, 3.5)
Except above range	
Maximum rotating torque	1.9 (19, 16)
Maximum torque deviation	0.6 (6, 5.2)

### POWER STEERING

Rack sliding force N (kg, lb)	
Without gear oil	
Within ± 5.5 mm (± 0.217 in) from the neutral position	122.6 - 166.7 (12.5 - 17.0, 27.6 - 37.5)
Except above range	122.6 - 186.3 (12.5 - 19.0, 27.6 - 41.9)
Under normal operating oil pressure	
Within ± 11.5 mm (± 0.453 in) from the neutral position	235 - 284 (24 - 29, 53 - 64)
Except above range	Not more than 39 (4, 9) beyond above value
Steering wheel turning force when idle (Measured at one full turn from the neutral position) N (kg, lb)	29 (3, 7) or less
Normal operating temperature of power steering fluid °C (°F)	60 - 80 (140 - 176)
Fluid capacity (Approximate) ℓ (US qt, Imp qt)	0.9 (1, 3/4)
Oil pump maximum pressure kPa (kg/cm <sup>2</sup> , psi)	7,649 - 8,238 (78 - 84, 1,109 - 1,194)



**SECTION BF****CONTENTS**

<b>GENERAL SERVICING</b>	
(Including all clips & fasteners) .....	BF- 2
<b>BODY END</b> .....	BF- 6
<b>DOOR</b>	
(Including "Power Window" and "Power Door Lock") .....	BF-12
<b>INSTRUMENT PANEL</b> .....	BF-18
<b>INTERIOR AND EXTERIOR</b>	
(In EXTERIOR, including "Weatherstrips") .....	BF-20
<b>SEAT</b> .....	BF-29
<b>SUN ROOF</b> .....	BF-32
<b>WINDSHIELD AND WINDOWS</b> .....	BF-35
<b>MIRROR — Door Mirror</b> .....	BF-40
<b>BODY ALIGNMENT</b> .....	BF-42
<b>SUPPLEMENTAL RESTRAINT SYSTEM (SRS)</b> .....	BF-47
<b>TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)</b> .....	BF-61

**When you read wiring diagrams:**

- Read GI section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

**When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES".**

★ For seat belt, refer to MA section.

# GENERAL SERVICING

## Precautions


- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removal or installation. Be careful not to soil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.

## SUPPLEMENTAL RESTRAINT SYSTEM (SRS) "AIR BAG"

The Infiniti M30 has a Supplemental Restraint System "Air Bag", to help reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag (located in the center of the steering wheel), five sensors, a control unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the BF section of this Service Manual.

### WARNING:

- To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized INFINITI dealer.**
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.**
- All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation and related components are located in the steering column, center console, dash, upper radiator core support and front fenders. Do not use electrical test equipment on these circuits.**

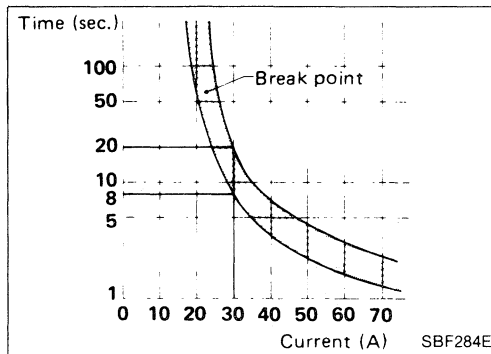

## Circuit Breaker Inspection

For example, when current is 30A, the circuit is broken within 8 to 20 seconds.













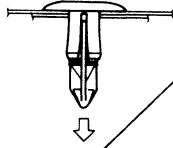
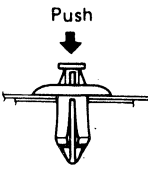
Circuit breakers are used in the following systems.

- Power window & power door lock
- Power seat
- Power sun roof

# GENERAL SERVICING







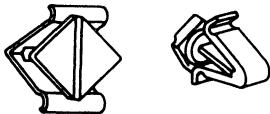

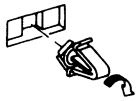
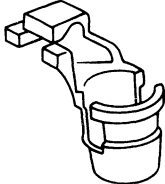
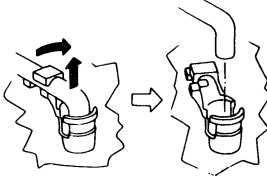



## Clip and Fastener

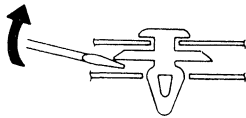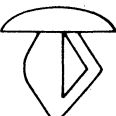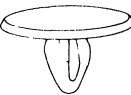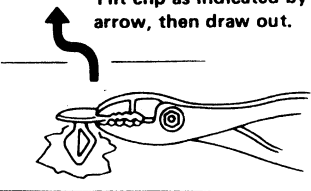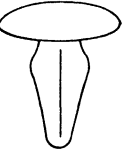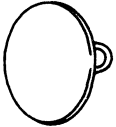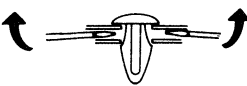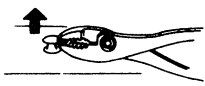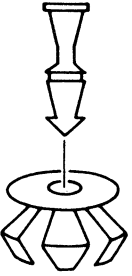- Clips and fasteners in BF section correspond to the following numbers and symbols.
- Replace any clips and/or fasteners which are damaged during removal or installation.

No.	Symbol	Shape	Removal & Installation
C101	 SBF092B	 SBF109B	<p><b>Removal:</b> Remove by bending up with a flat-bladed screwdriver.</p>  <p style="text-align: right;">SBF094B</p>
C105	 SBF141B	 SBF142B	<p><b>Removal:</b> Tilt clip as indicated by arrow, then draw out.</p>  <p style="text-align: right;">SBF143B</p>
C106	 SBF089B	 SBF090B	<p><b>Removal:</b> Remove with a flat-bladed screwdrivers or plier.</p>   <p style="text-align: right;">SBF091B</p>
C203	 SBF318C	 SBF319C	<p><b>Push center pin to catching position. (Do not remove center pin by hitting it.)</b></p>   <p style="text-align: right;"><b>Installation:</b> SBF 708E</p>

# GENERAL SERVICING
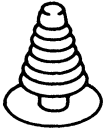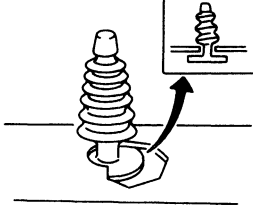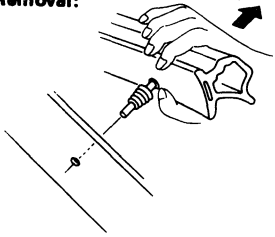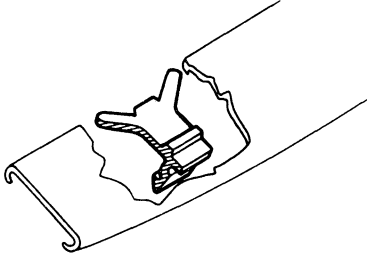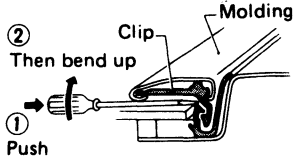
## Clip and Fastener (Cont'd)

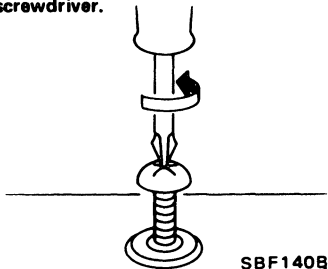No.	Symbol	Shape	Removal & Installation
C103	 SBF103B	 SBF104B	<p><b>Removal:</b></p>  SBF147B
CE106	 SBF653B		<p><b>Removal:</b></p>  SBF654B
CG101	 SBF144B	 SBF145B	<p><b>Removal:</b></p>  Rotate 45° to remove. <p><b>Installation:</b></p>  SBF085B
CR103		 SBF768B	<p><b>Removal:</b> Holder portion of clip must be spread out to remove rod.</p>  SBF770B
CS102	 SBF138B	 SBF139B	<p><b>Removal:</b> Screw out with a Phillips screwdriver.</p>  SBF140B

# GENERAL SERVICING


---

**NOTE**

## BODY END

### Body Front End

- Hood adjustment: Adjust at hinge portion.
- Hood lock adjustment: After adjusting, check hood lock control operation. Apply a coat of grease to hood locks engaging mechanism.
- Hood opener: Do not attempt to bend cable forcibly. Doing so increases effort required to unlock hood.

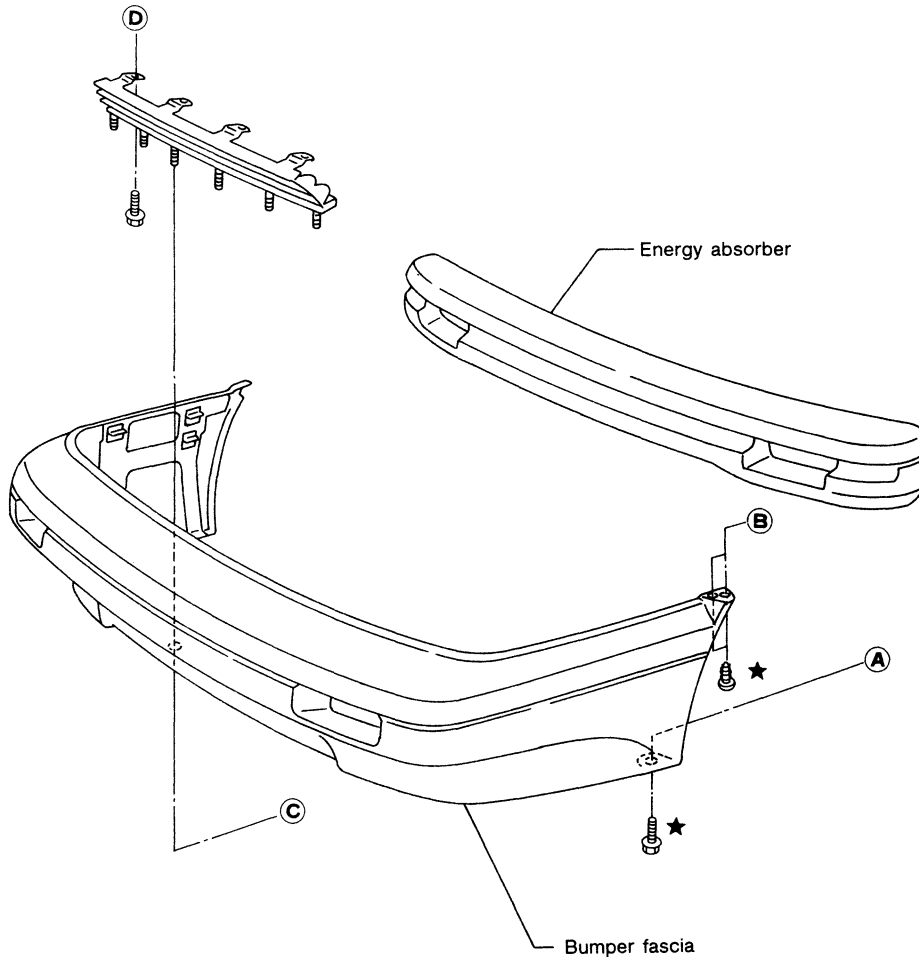

#### REMOVAL — Front bumper assembly

1. Remove bumper fascia securing bolts (A) and screws (B).
2. Remove bumper reinforcement stay bolts and loosen nuts.
3. Pull out bumper assembly.

#### INSTALLATION — Front bumper assembly

- Insert pins of bumper reinforcement stay into body holes.




# BODY END

## Body Front End (Cont'd)

### Hood lock adjustment

- Adjust hood so that hood primary lock meshes at a position 1 to 1.5 mm (0.039 to 0.059 in) lower than fender.
- After hood lock adjustment, adjust bumper rubber.
- When securing hood lock, ensure it does not tilt. Striker must be positioned at the center of hood primary lock.
- After adjustment, ensure that hood primary and secondary lock operate properly.

### Hood lock secondary latch hooking length

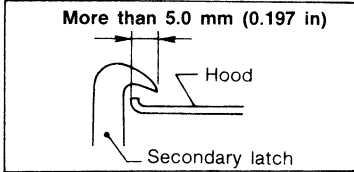

### Bumper rubber adjustment



- Adjust so that hood is aligned with fender. At that time deflection is approx 2 mm (0.08 in).
- [Bumper rubber free height is approx. 13 mm (0.51 in).]

### Front grille removal

- Set — screwdriver between grille and bumper while lifting up grille.

### Front grille installation


- Insert grille hitch into headlamp finisher.

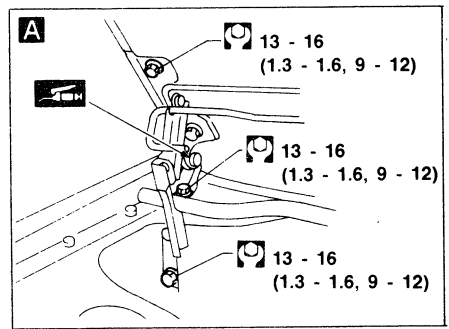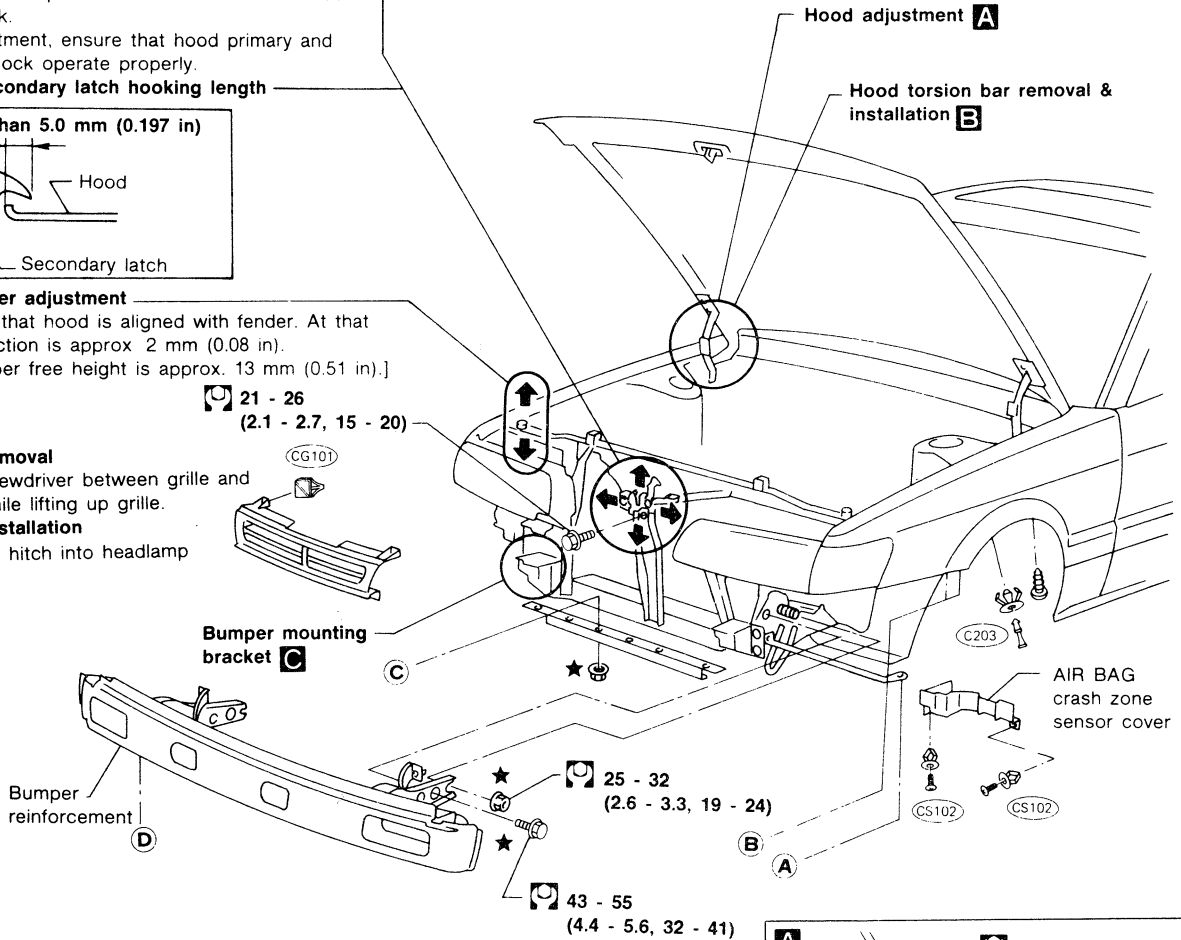

- ★ : Bumper assembly mounting bolts, nuts & screws
- Ⓜ : N·m (kg-m, ft-lb)

**B**


**WARNING:**  
When removing and installing torsion bar, be careful as it is under tension.

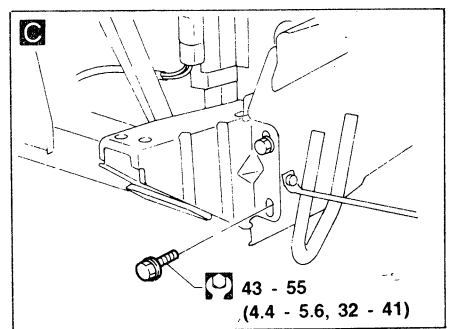

# BODY END


## Body Rear End and Opener

- Trunk lid adjustment: Adjust at hinge-trunk lid portion for proper trunk lid fit.
- Trunk lid lock system adjustment: Adjust striker so that it is in the center of the lock. After adjustment, check trunk lid lock operation.
- After installation, make sure that trunk lid and fuel filler lid open smoothly.

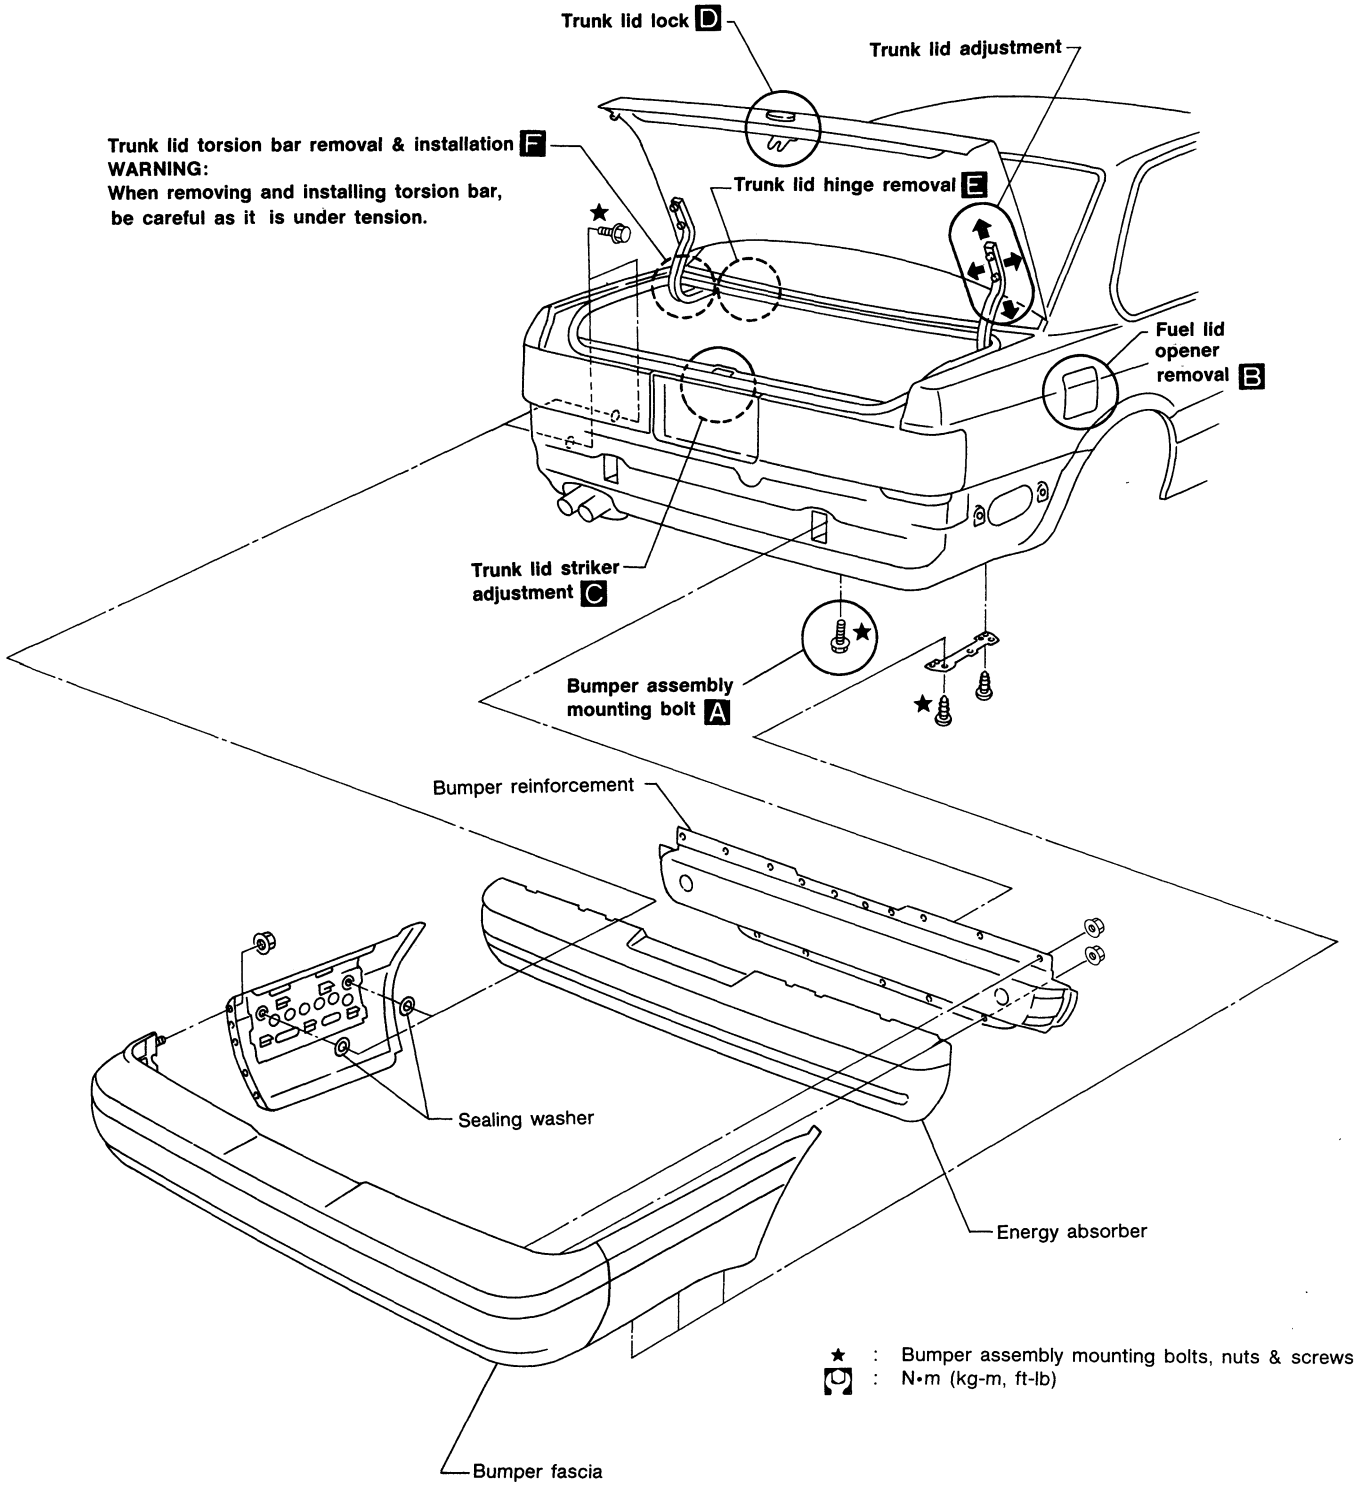

# BODY END

## Body Rear End and Opener (Cont'd)

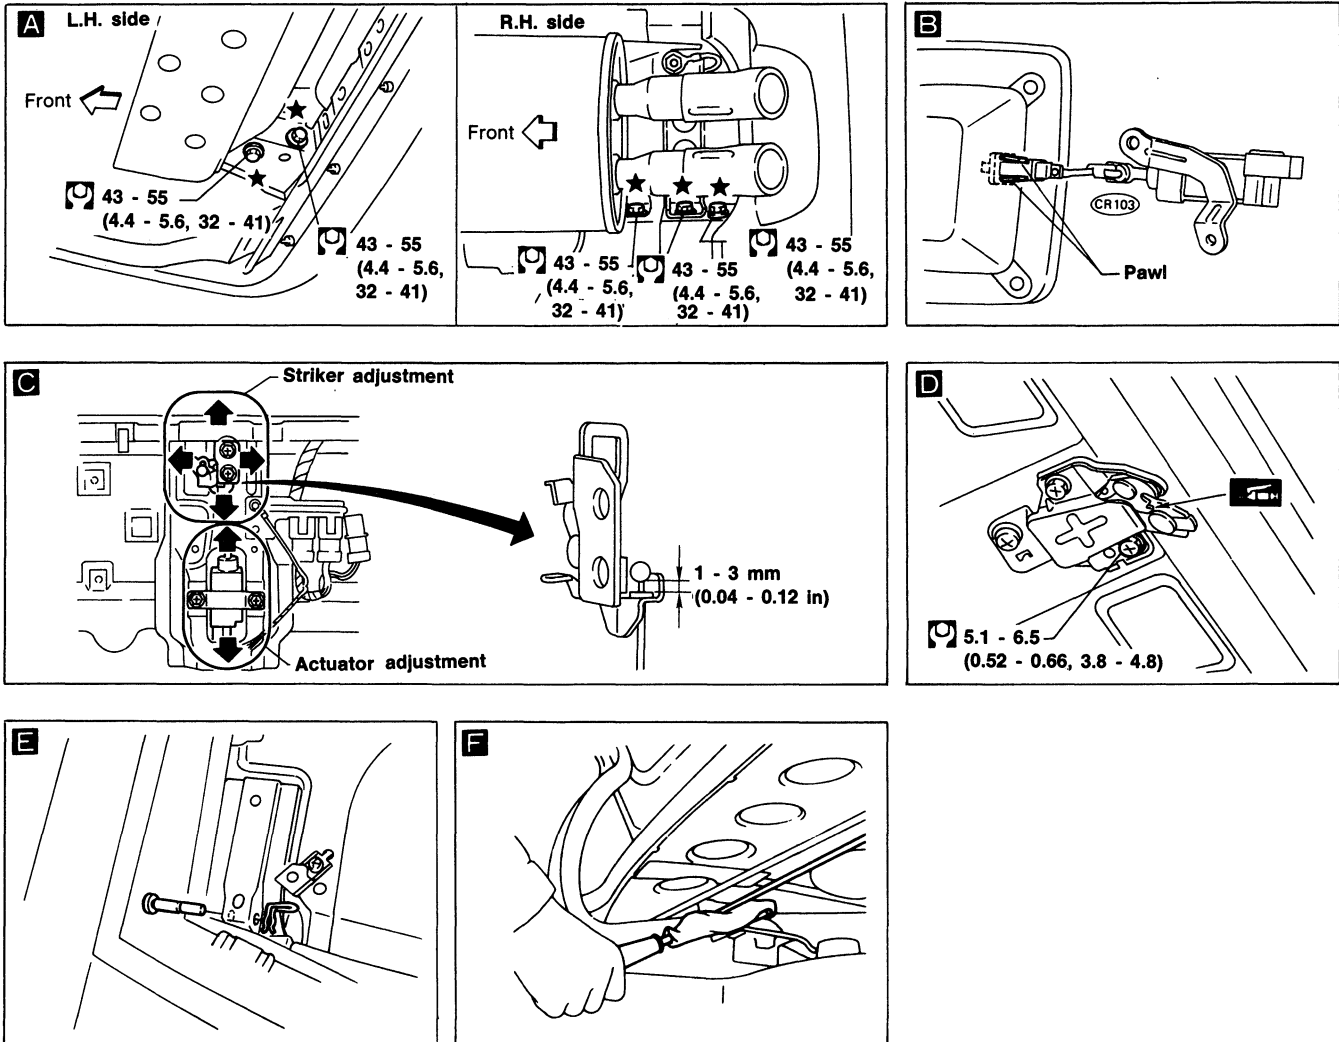

SBF121F


### REMOVAL — Rear bumper assembly

1. Remove bumper fascia securing bolts from luggage room and screws from the bottom.
2. Remove bumper assembly mounting bolts **A**.
3. Pull out bumper assembly.

# BODY END


## Body Rear End and Opener (Cont'd)

### TRUNK LID OPENER AND FUEL FILLER LID OPENER/WIRING DIAGRAM







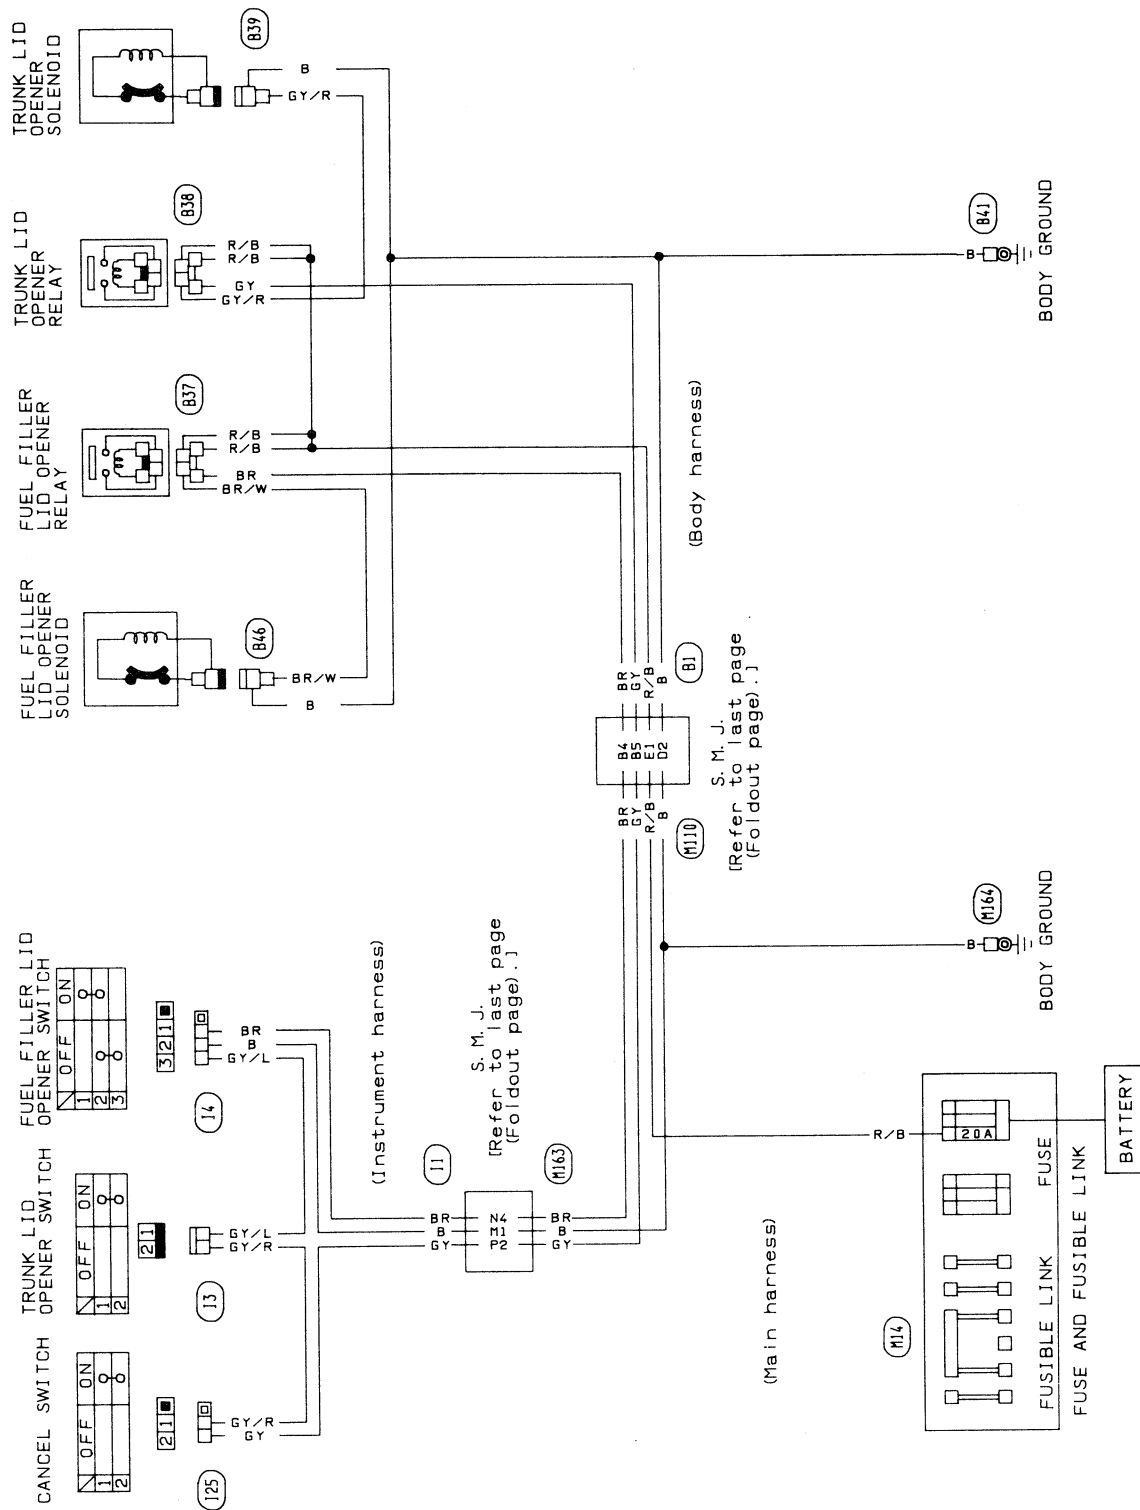


**NOTE**

# DOOR

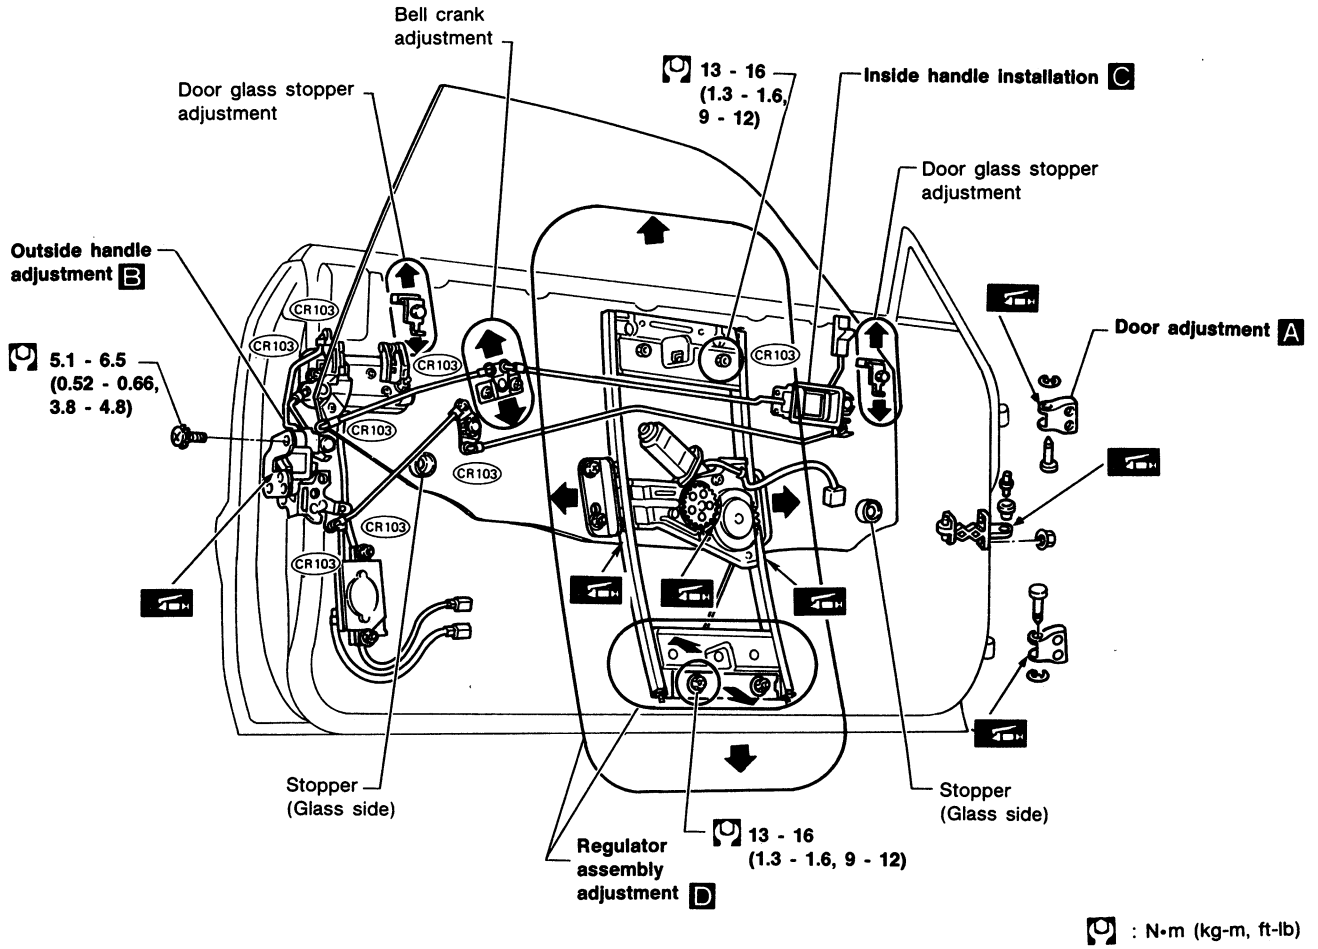


# DOOR

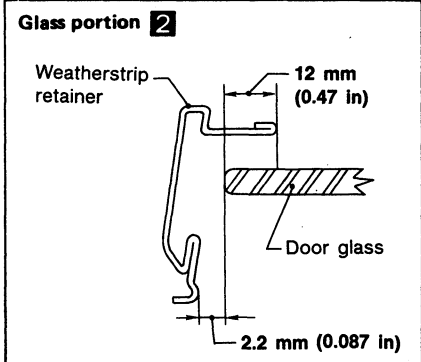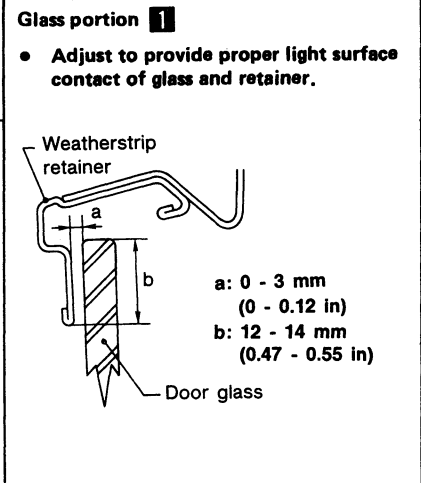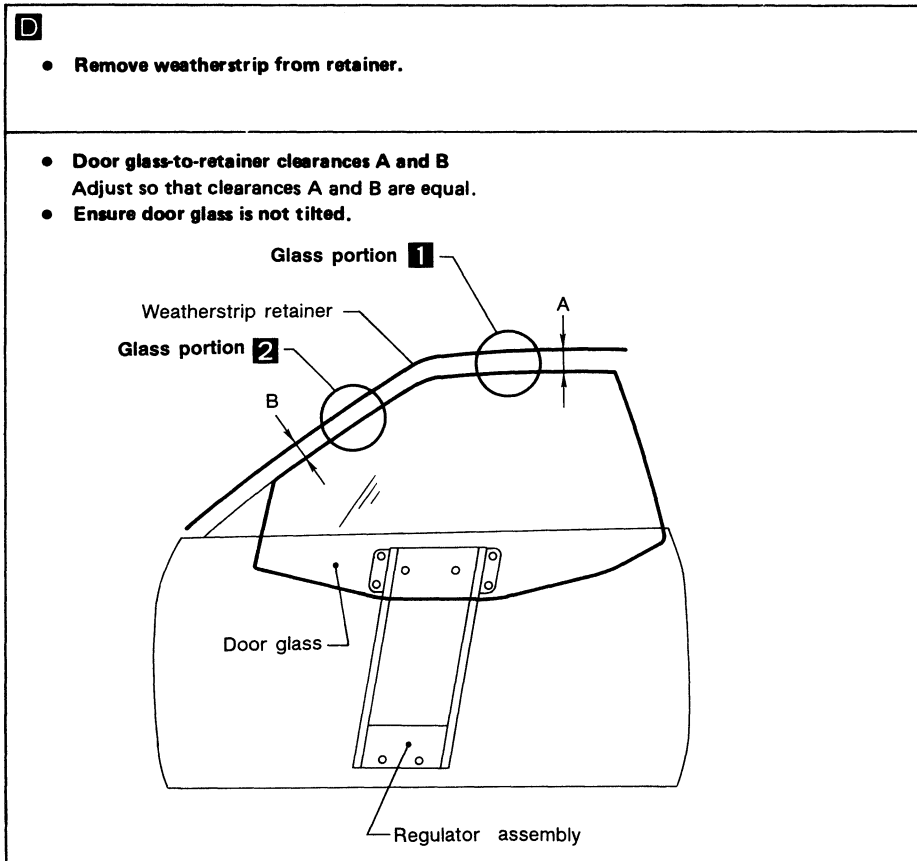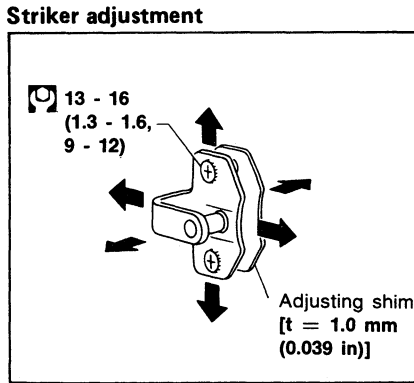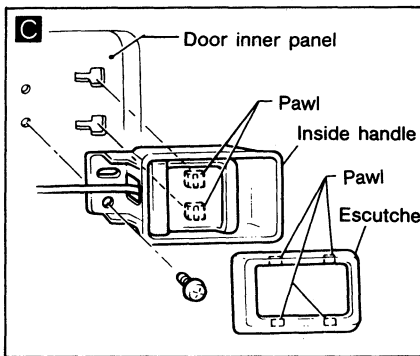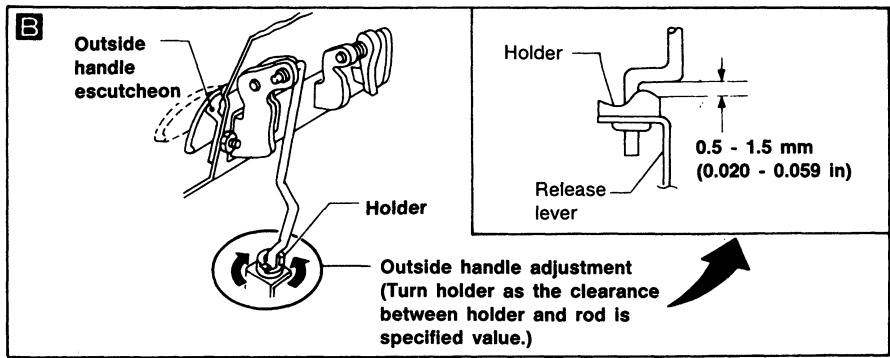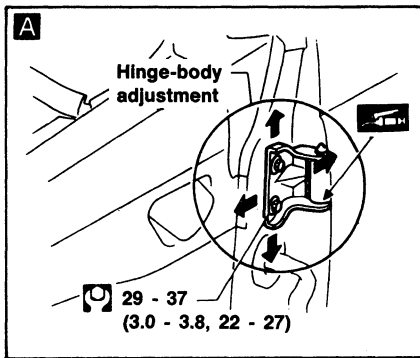

Power Window

WIRING DIAGRAM

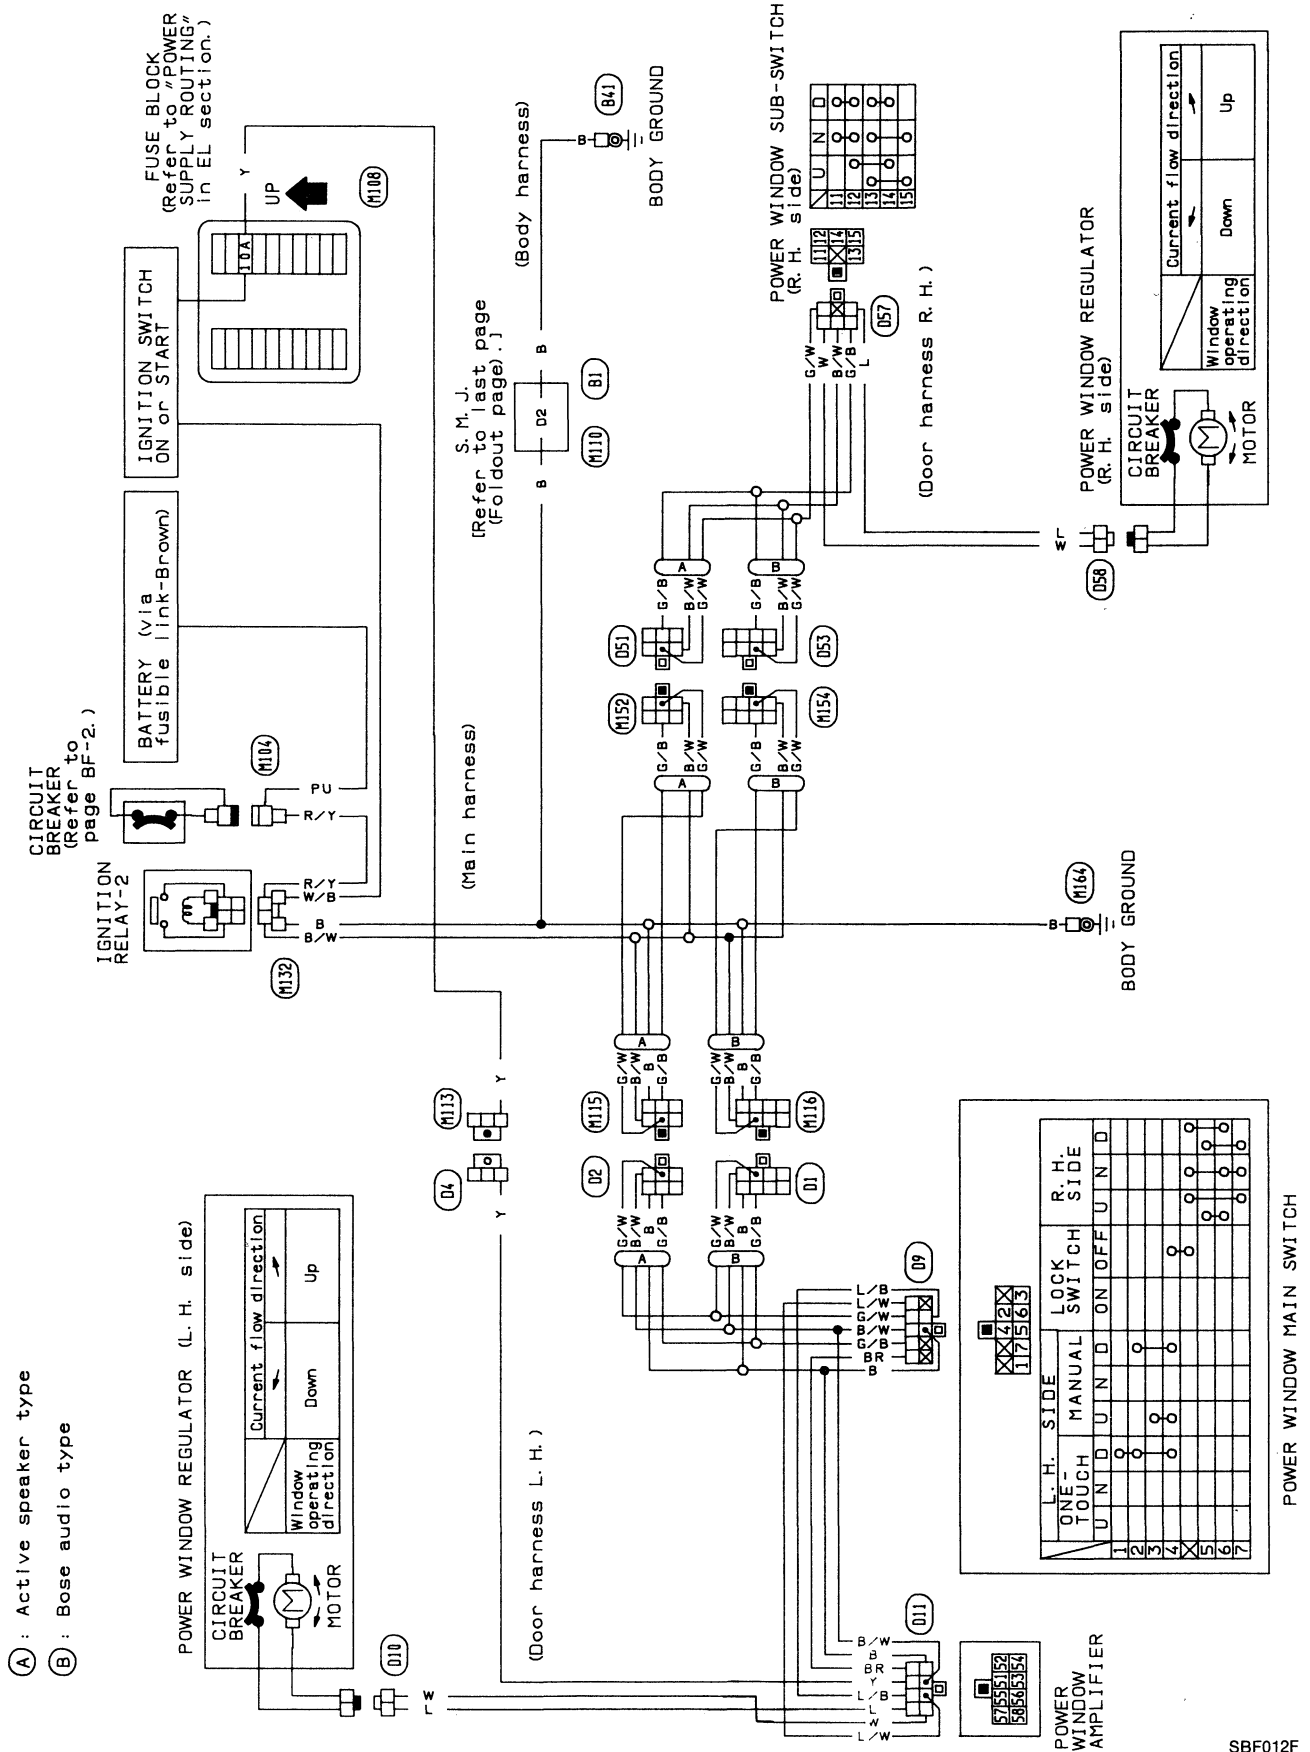


- (A) : Active speaker type
- (B) : Bose audio type



# DOOR

## Power Window (Cont'd)

### POWER WINDOW AMP. INSPECTION

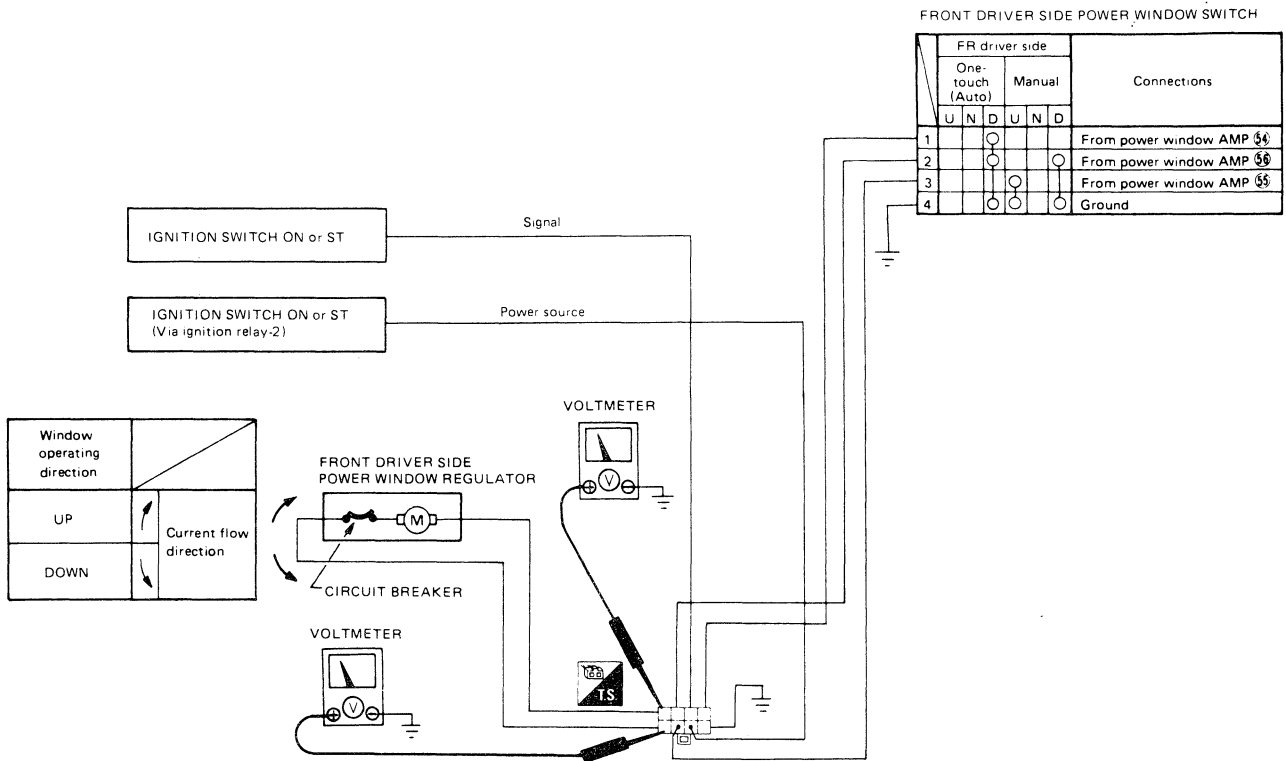

AMP. OPERATION

	Connections	Operations					
		Manual operation			One-touch (Auto) Operation		
		ON or ST	ON or ST	ON or ST	ON or ST	ON or ST	ON or ST
51	Power source (IGN)	12V	12V	12V	12V	12V	12V
52	Ground	Ground	Ground	Ground	Ground	Ground	Ground
53	From ignition SW (ON or ST)	ON or ST	ON or ST	ON or ST	ON or ST	ON or ST	ON or ST
54	To FR driver side power window SW (AUTO) ①	OFF	OFF	OFF	OFF	ON	OFF
55	To FR driver side power window SW (UP) ③	OFF	ON	OFF	OFF	OFF	OFF
56	To FR driver side power window SW (DOWN) ②	OFF	OFF	ON	OFF	ON	OFF
57	FR driver side regulator ("Up" power source)	Approx. 0V	Approx. over 9V	Approx. 0V	Approx. 0V	Approx. 0V	Approx. 0V
58	FR driver side regulator ("Down" power source)	Approx. 0V	Approx. 0V	Approx. over 9V	Approx. 0V	Approx. over 9V	Approx. over 9V

Regulator Operating Condition	Stop	Upward operation	Downward operation	Stop	Starting	
					Starting	Keeps operating until fully open, then stops automatically
						Downward operation


Carry out this operation check in this chart from left to right

POWER WINDOW AMP - Front driver side door (Behind door trim)

SBF029F

Power Door Lock

WIRING DIAGRAM

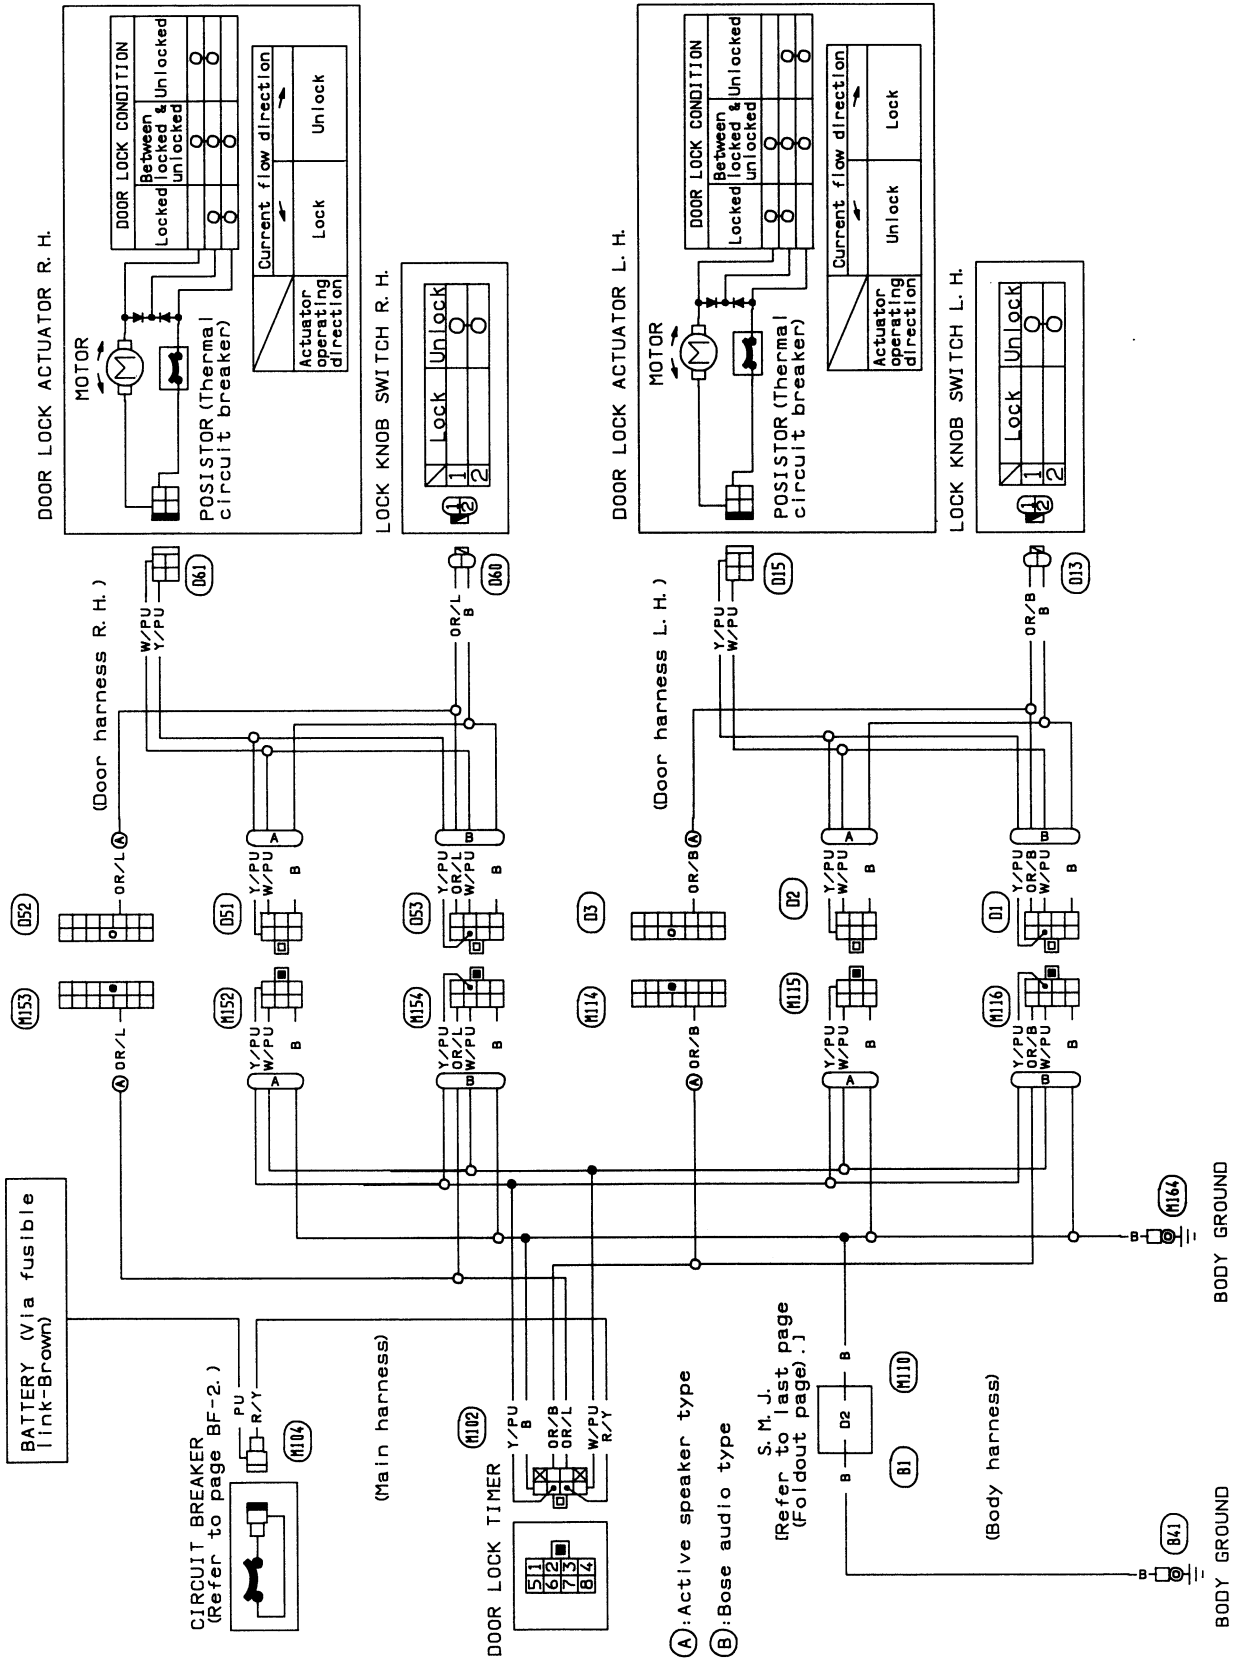

# DOOR

## Power Door Lock (Cont'd)

### DOOR LOCK TIMER INSPECTION



#### TESTING OPERATION

Input signal	SW-A operation	OFF	Turns ON	ON	Turns OFF	OFF	OFF	OFF	Turns ON	Turns OFF
	SW-B operation	OFF	OFF	OFF	OFF	Turns ON	ON	Turns OFF	After SW-A operation, immediately turns ON	Turns OFF
Output signal	Test lamp operation	OFF	ON (Approx. 1.0 sec.) → OFF	OFF	OFF	ON (Approx. 1.0 sec.) → OFF	OFF	OFF	ON → OFF → ON → OFF	OFF


- Carry out the complete inspection in this chart from left to right.
- Do not carry out any switch operations that are not described in the above chart so as to avoid breaking the door lock timer.

Lighting period of test lamp differs according to SW-B operation. Moreover, test lamp may come on once or it may not come on at all. If this occurs, do not judge it faulty solely from this step.

#### INSPECTION CIRCUIT (This test circuit must be wired by the technician.)

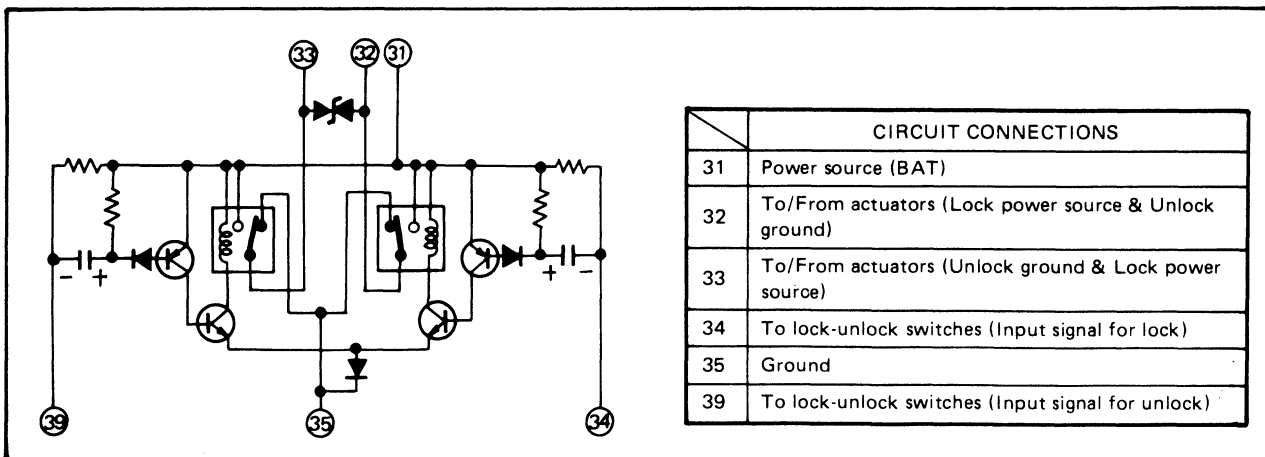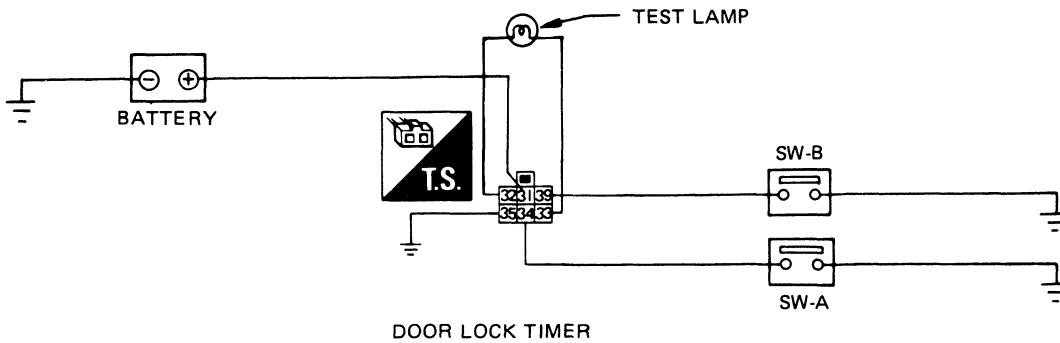








# INSTRUMENT PANEL

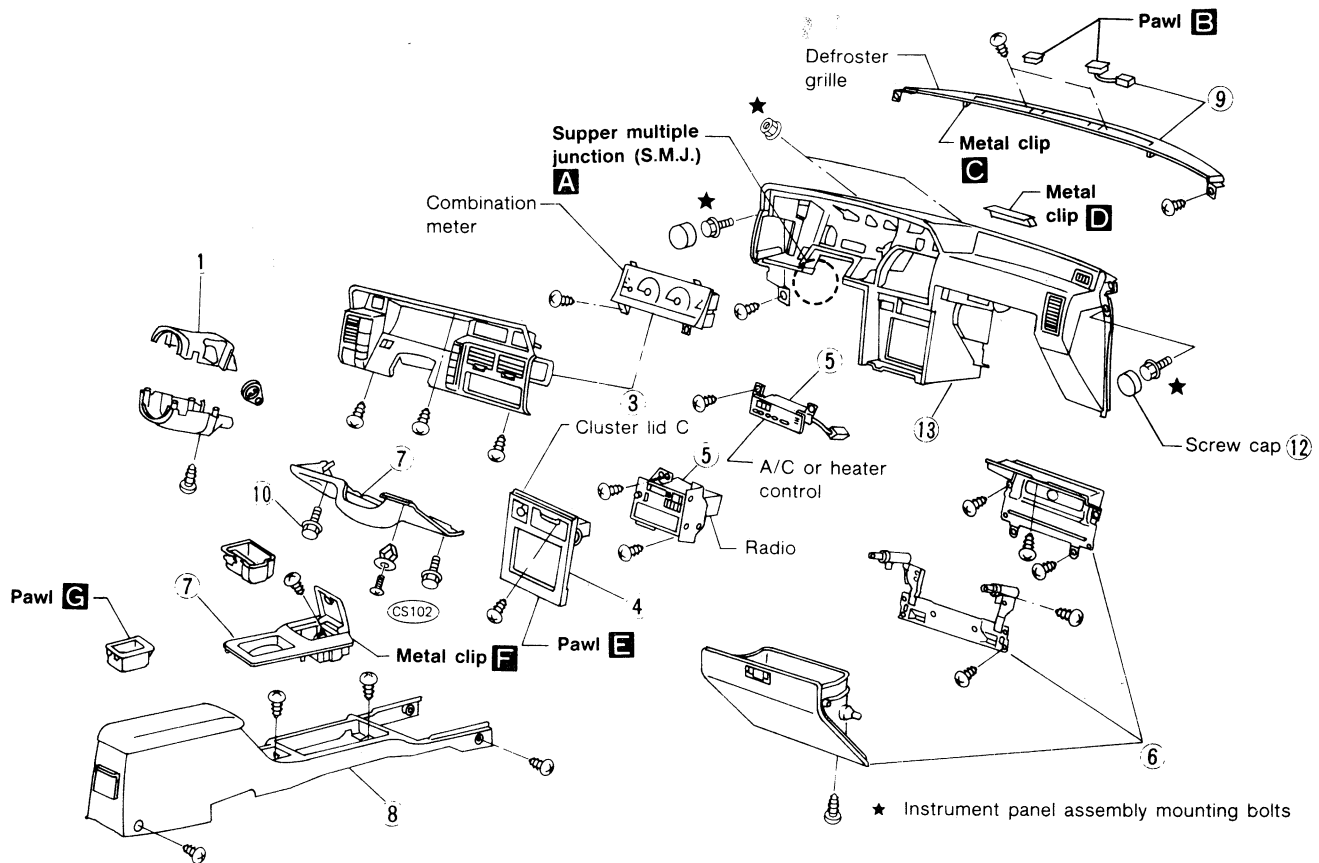

## REMOVAL — Instrument panel assembly

- 1 Remove steering column covers and steering column securing bolts.
- 2 Remove front pillar garnish and instrument lower finishers.
- 3 Remove cluster lid and combination meter.
- 4 Remove heater control finisher and cluster lid C.
- 5 Remove radio and A/C or heater control.
- 6 Remove glove box lower finisher and glove box (10 screws).
- 7 Remove instrument reinforcement (4 screws) and A/T shift lever cover.
- 8 Remove floor console box (6 screws).
- 9 Remove defroster grille and sensors.
- 10 Remove hood lock cable bracket (2 screws) and rear heater ducts.
- 11 Remove fuse block (2 screws) and disconnect S.M.J.
- 12 Remove combination switch and instrument securing screw caps.
- 13 Remove instrument panel assembly (4 bolts, 2 nuts and 2 screws).

# INSTRUMENT PANEL

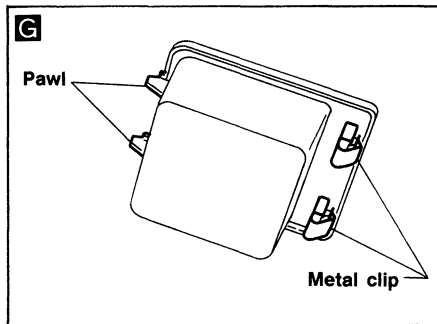
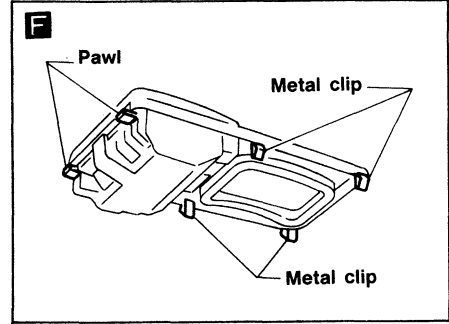
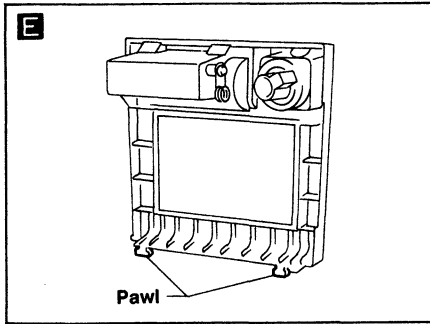
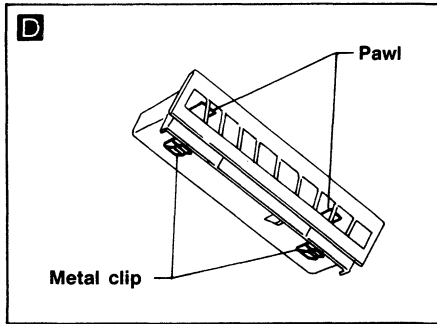
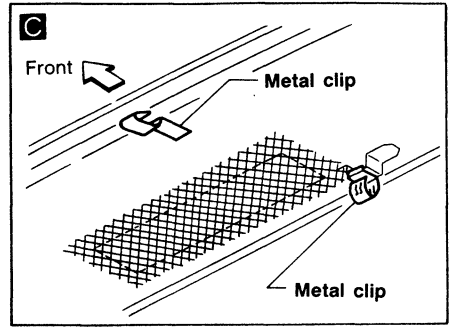
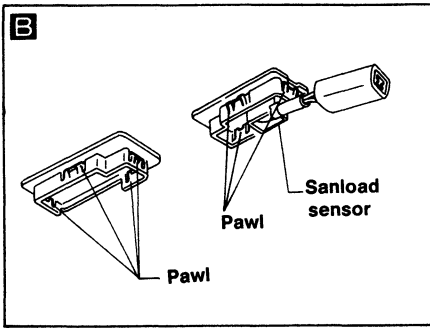
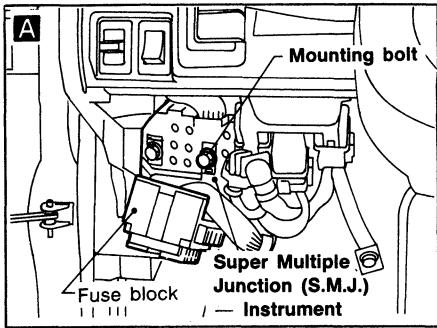


SBF123F

# INTERIOR AND EXTERIOR




## Interior

### SIDE AND FLOOR TRIM — Passenger room

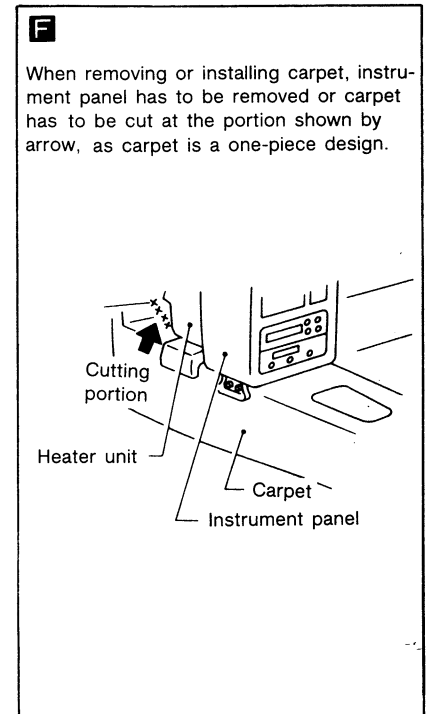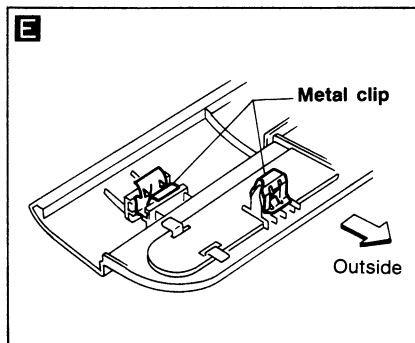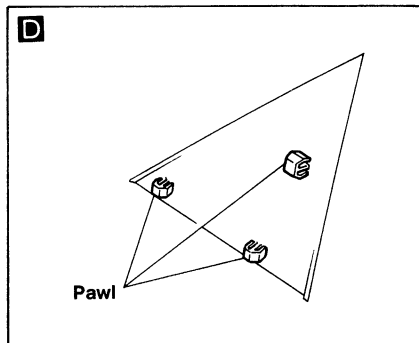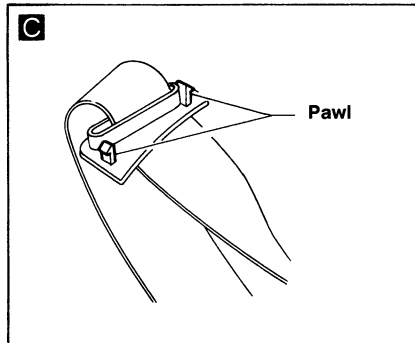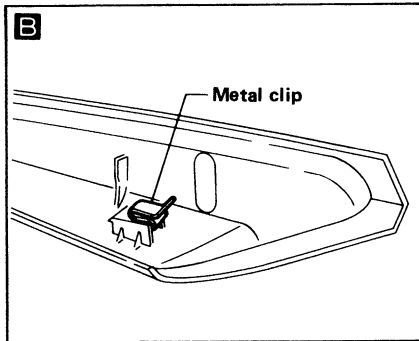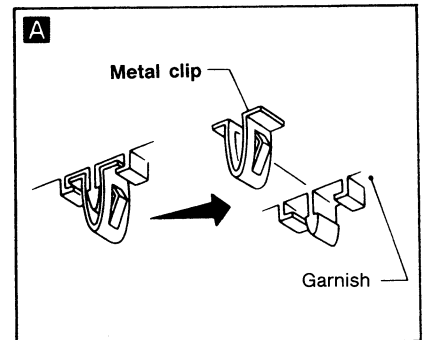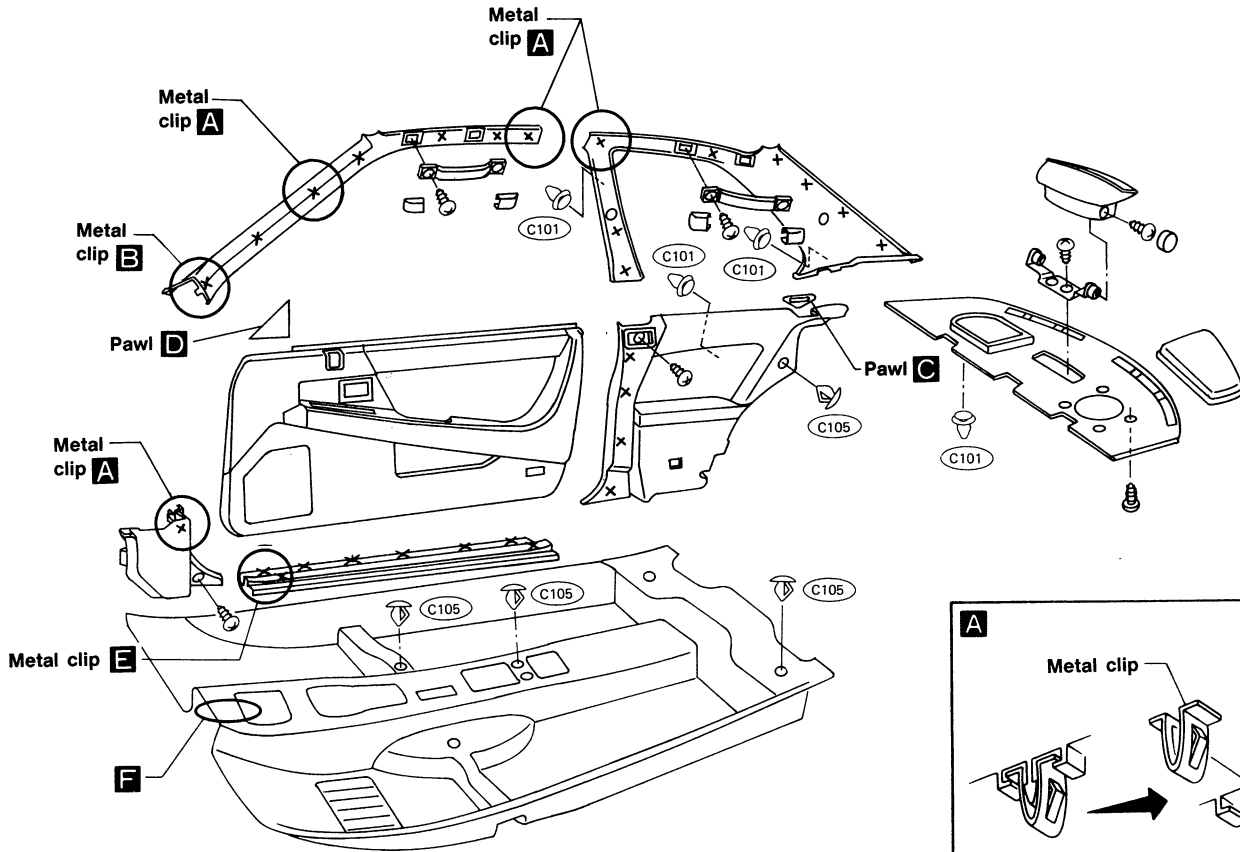

# INTERIOR AND EXTERIOR

## Interior (Cont'd)

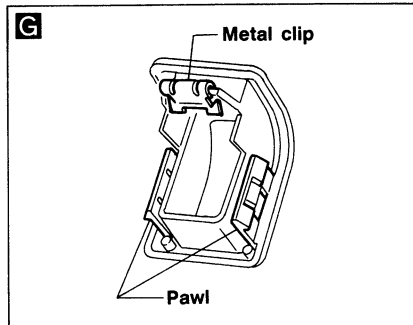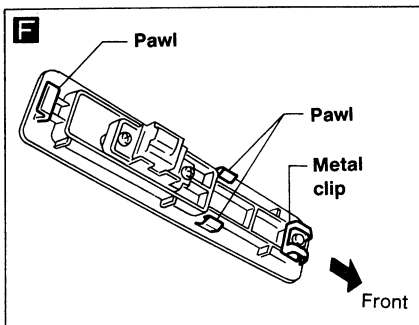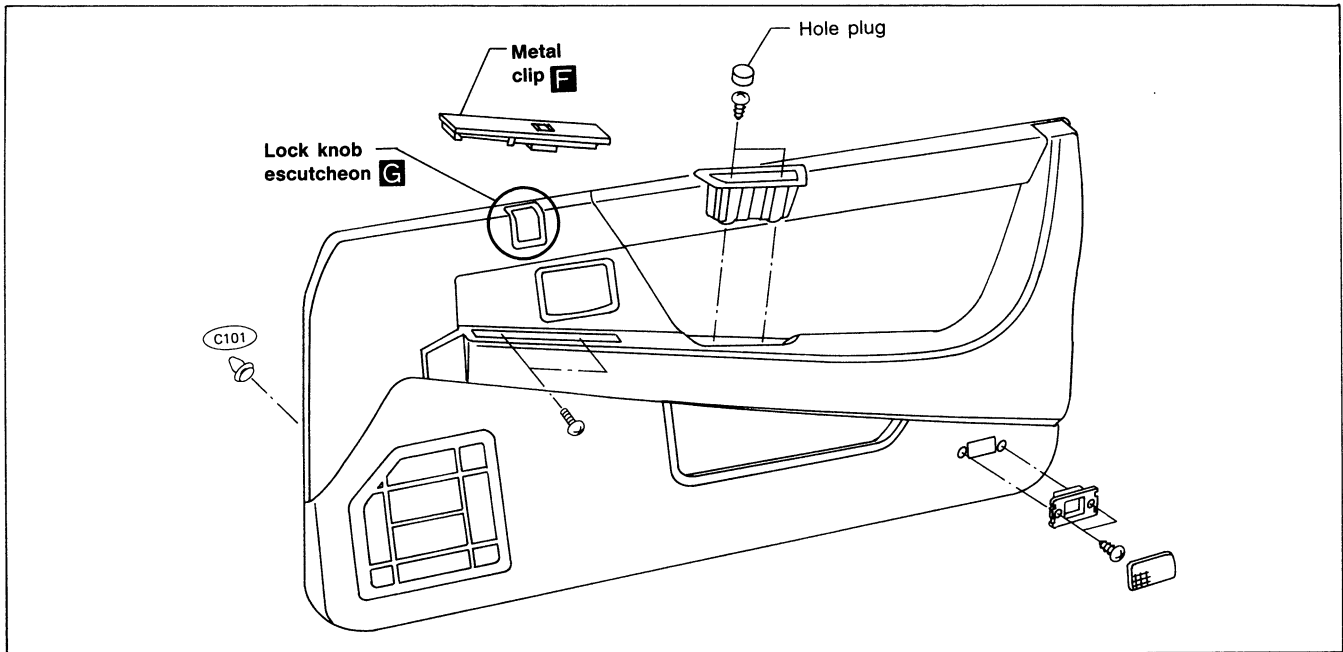

SBF124F

### REMOVAL — Door finisher assembly

1. Remove power window switch **F** and disconnect connectors.
2. Remove lock knob escutcheon and door step lamp.
3. Disconnect door step lamp connector and remove screws from power window switch hole.
4. Remove door finisher assembly

### REMOVAL — Front pillar garnish

1. Remove assist strap and body side welt.
2. Remove front pillar garnish.

### REMOVAL — Rear quarter garnish

1. Remove assist strap and rear seatback.
2. Removal screw at center pillar of side finisher and body side welt.
3. Remove rear quarter garnish while pulling outside side finisher.

### REMOVAL — Rear side finisher

1. Remove rear seat and screw at center pillar
2. Remove body side welt and rear side finisher.


### REMOVAL — Floor carpet

1. Remove front seats and rear seat cushion.
2. Remove floor console box and front seat belts.
3. Remove kick plate and rear side finisher.
4. Cut part of floor carpet and remove floor carpet.


# INTERIOR AND EXTERIOR

## Interior (Cont'd)

### LUGGAGE ROOM TRIM — Trunk space

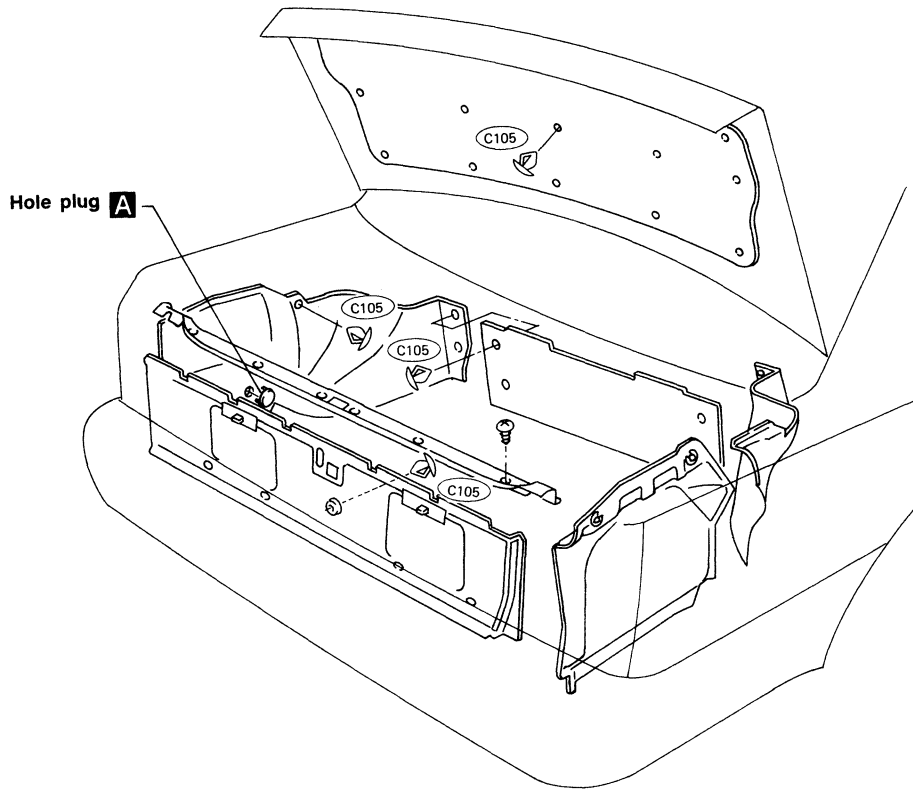

**A** Hole plug  
(For rear bumper  
removal &  
installation)

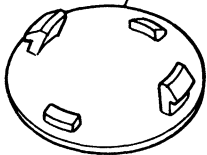


SBF125F



# INTERIOR AND EXTERIOR

## Interior (Cont'd)

### ROOF TRIM

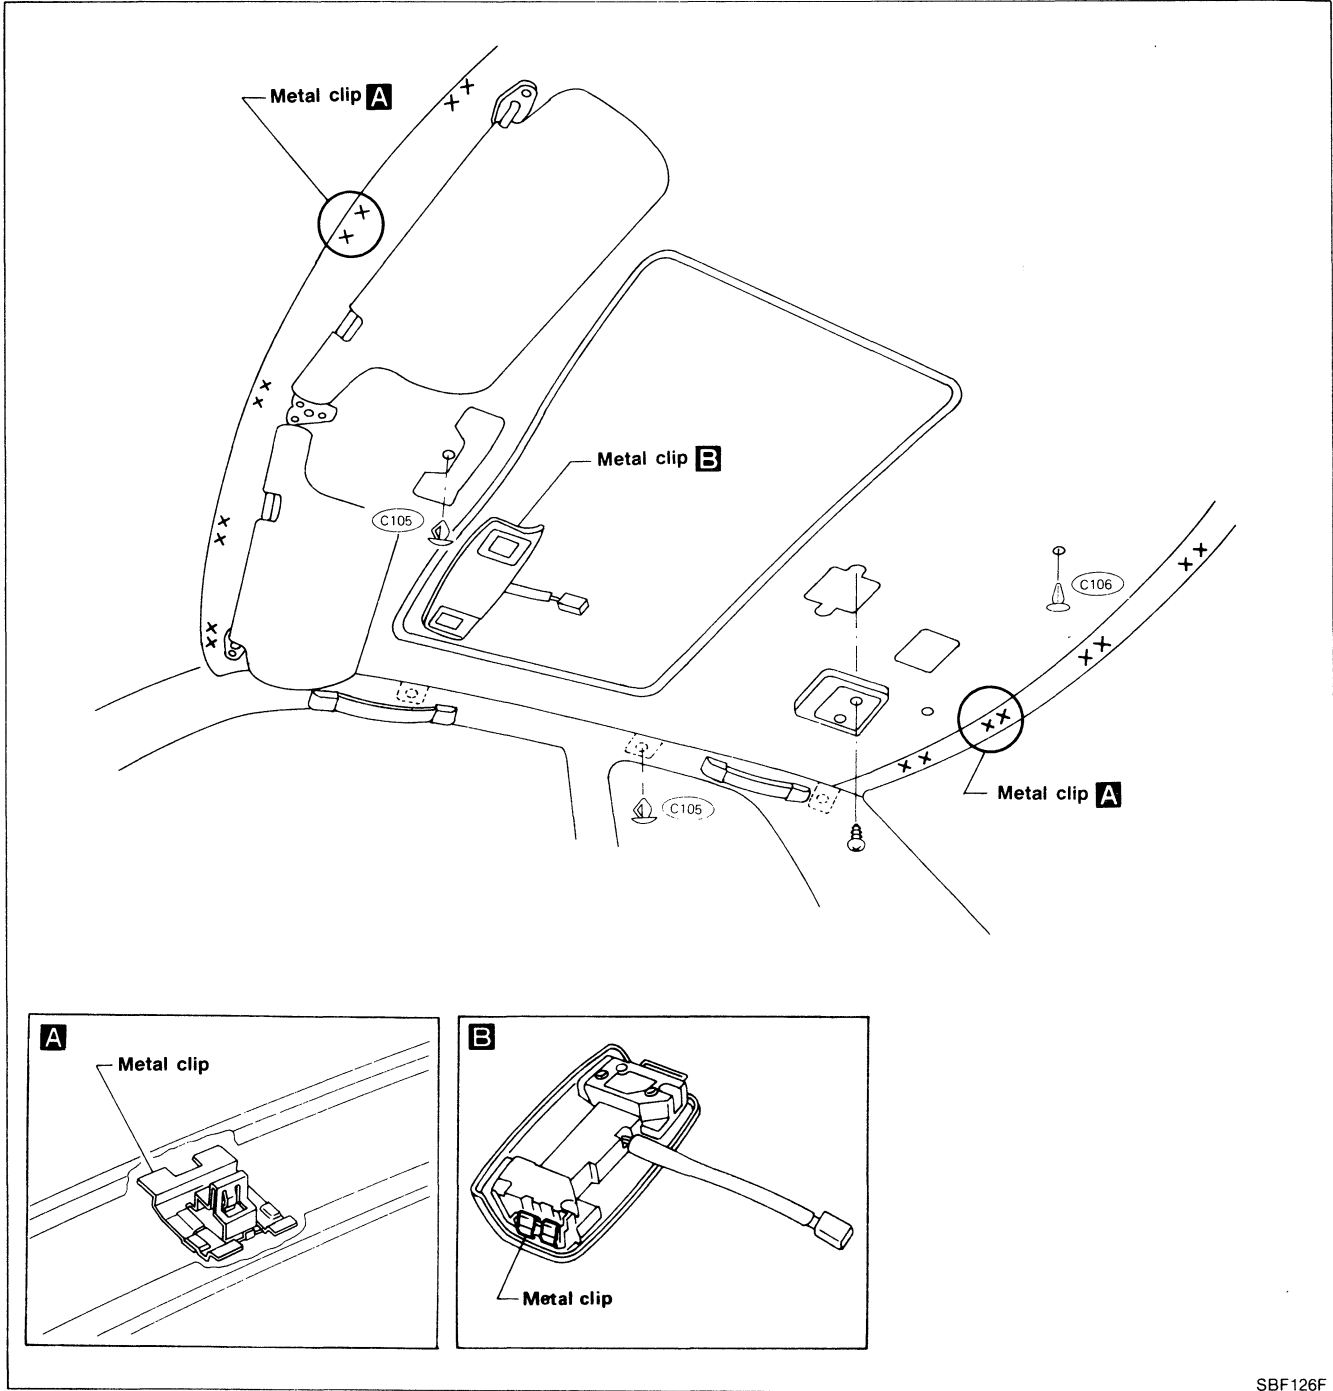


SBF126F

### REMOVAL — headlining cloth

1. Remove sunvisors, assist straps, room lamp and inside mirror.
2. Remove body side welts.
3. Remove front pillar garnishes, rear quarter garnishes and roof finishers.
4. Remove clips and headlining cloth.

# INTERIOR AND EXTERIOR

## Exterior

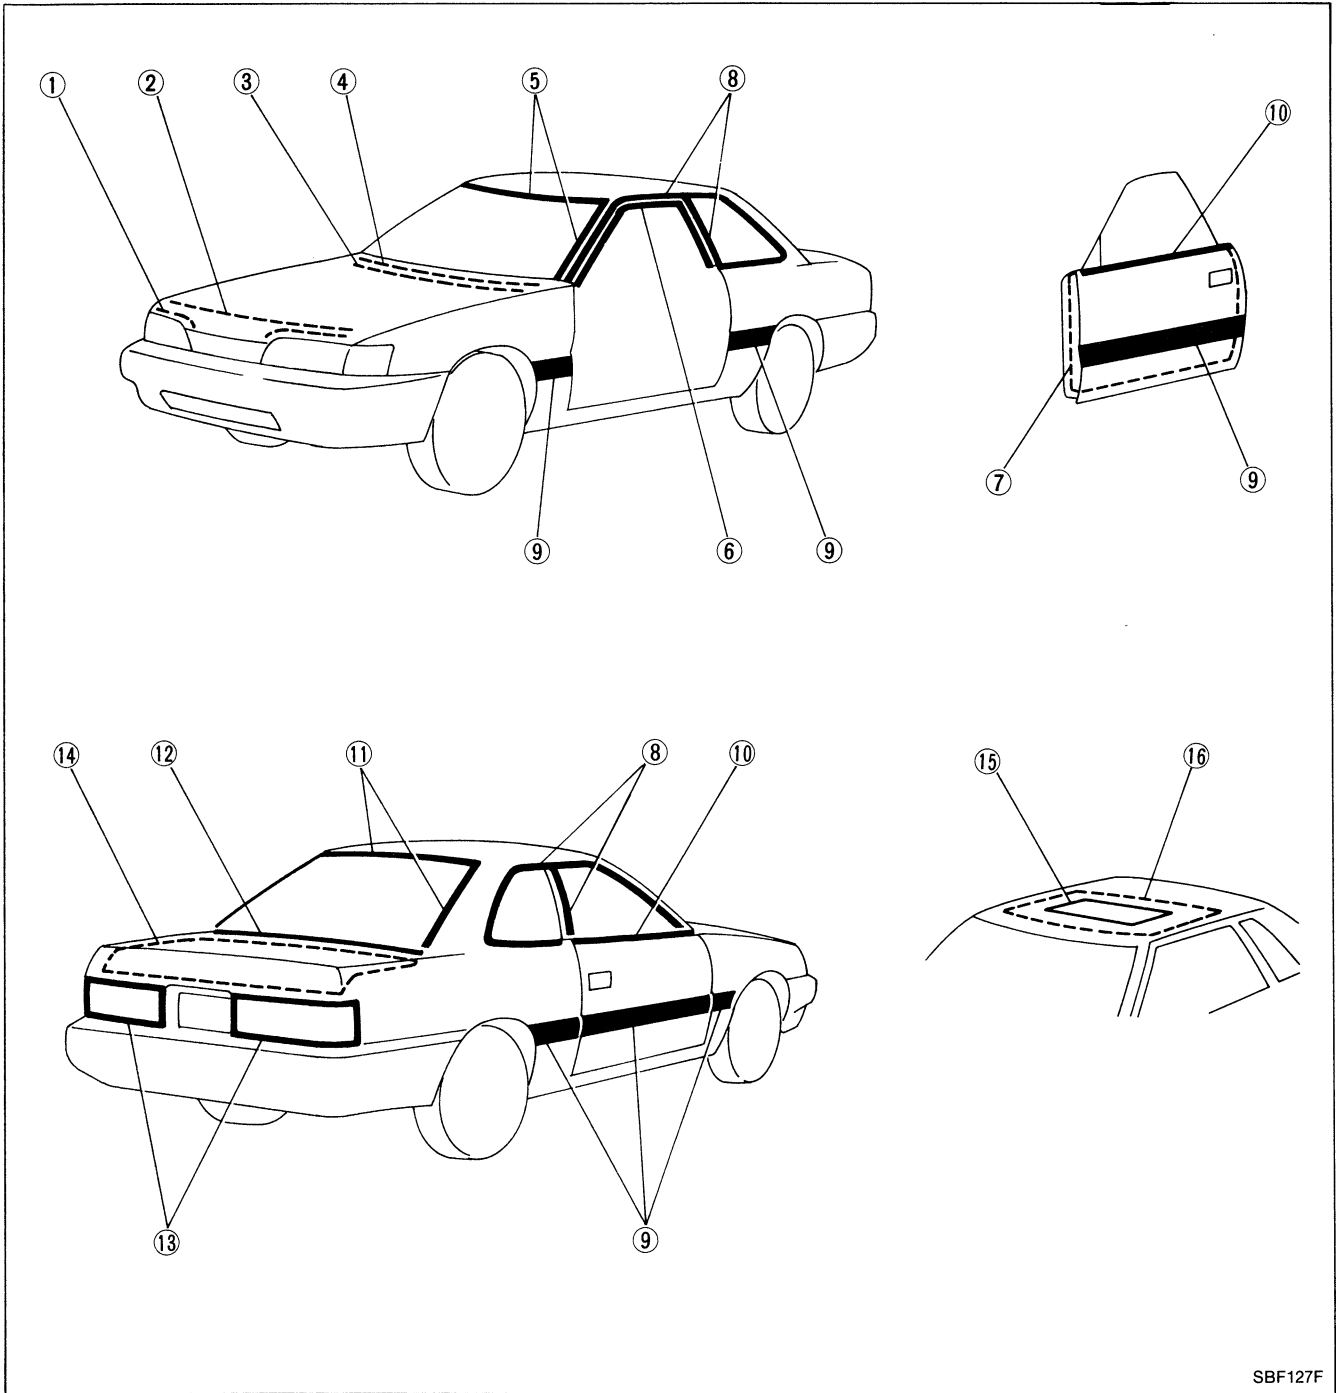


SBF127F


# INTERIOR AND EXTERIOR

## Exterior (Cont'd)


### ① ② Hood molding and hood front seal

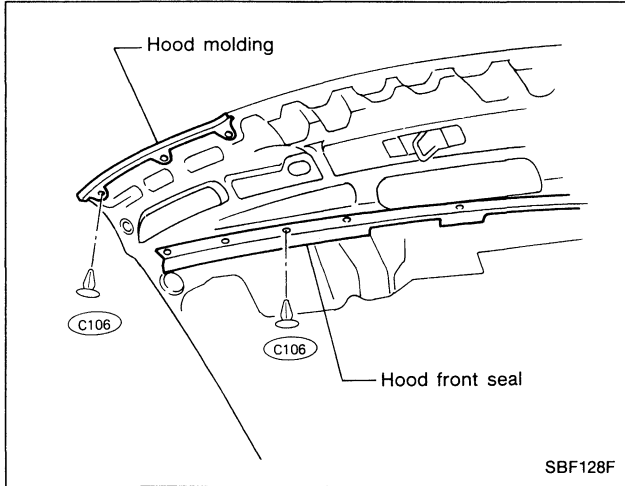


### ③ ④ Cowl top seal and cowl top grille

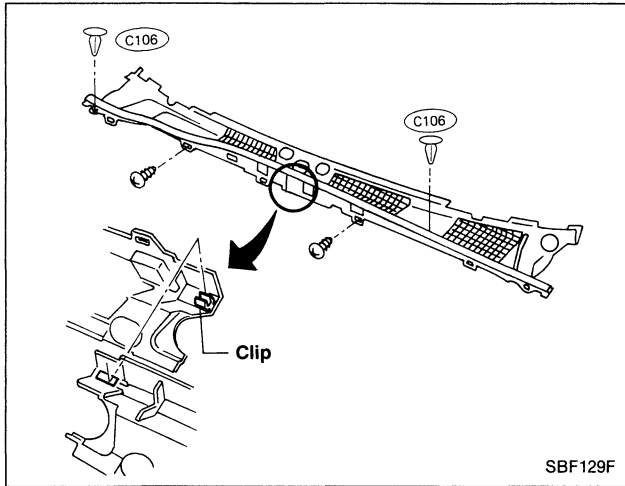


### ⑤ Windshield upper molding and side molding

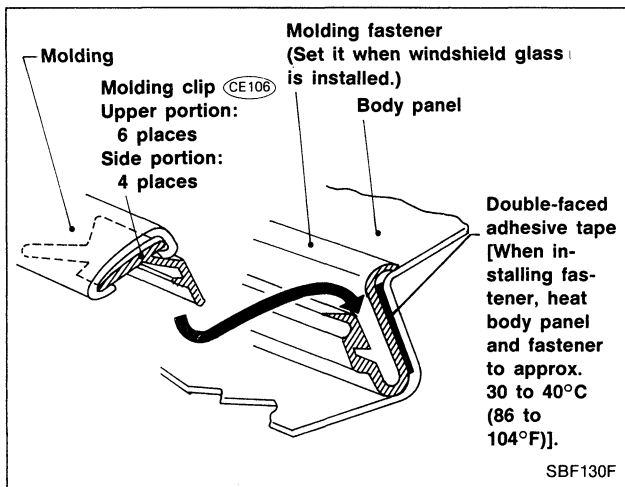

### ⑥ Body side weatherstrip

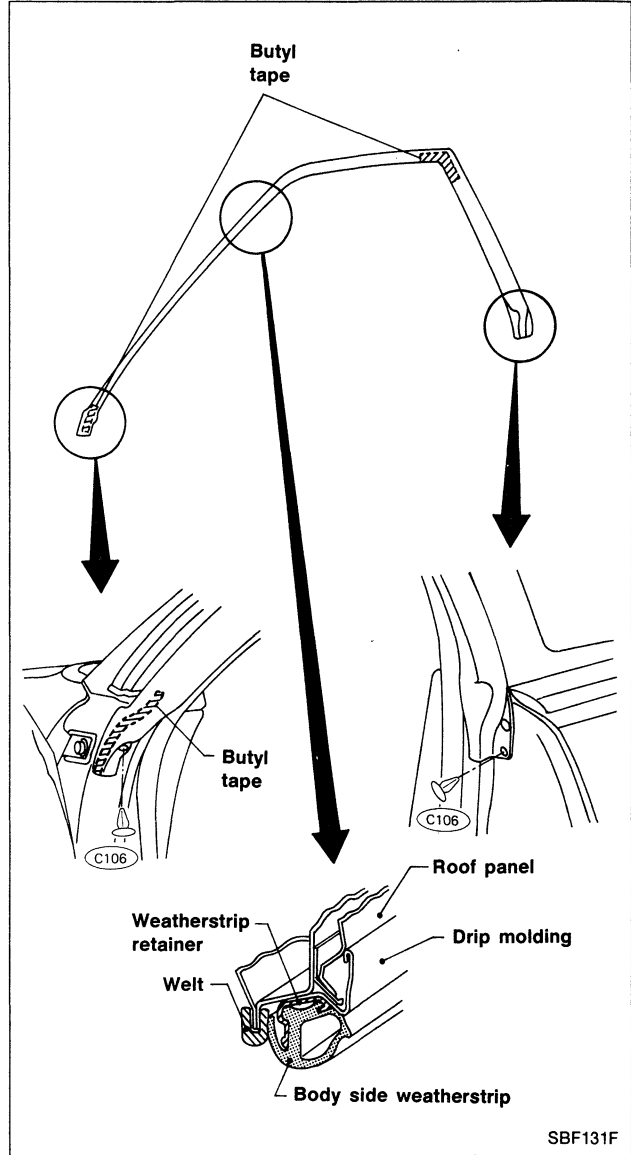






### ⑦ Door weatherstrip

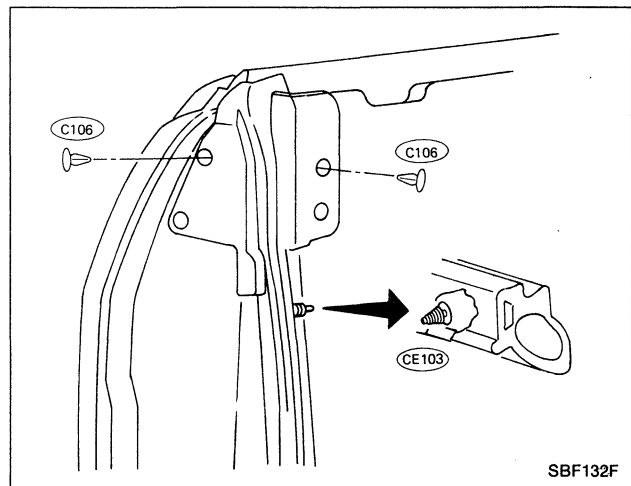

# INTERIOR AND EXTERIOR

## Exterior (Cont'd)


### ⑧ Drip molding

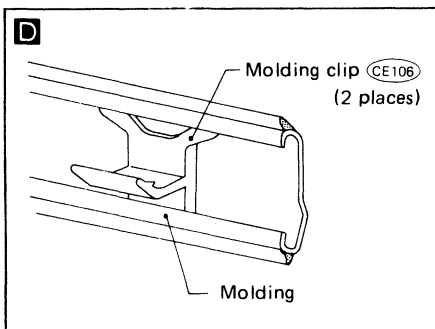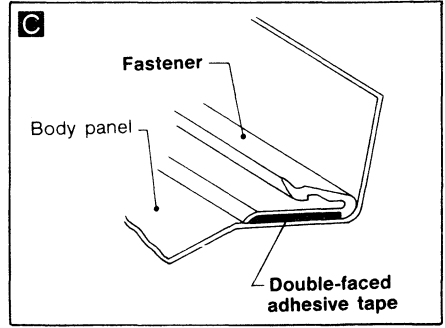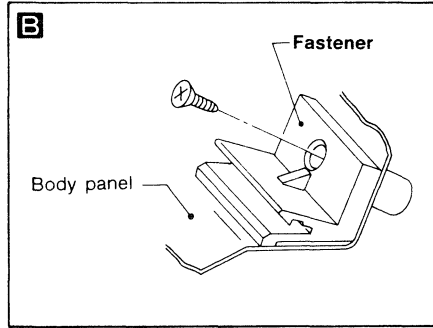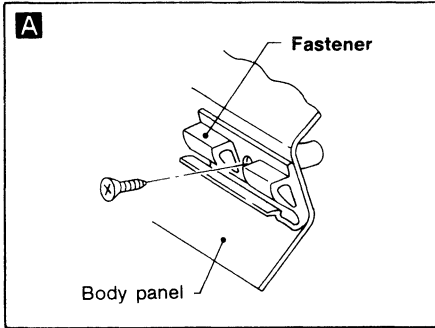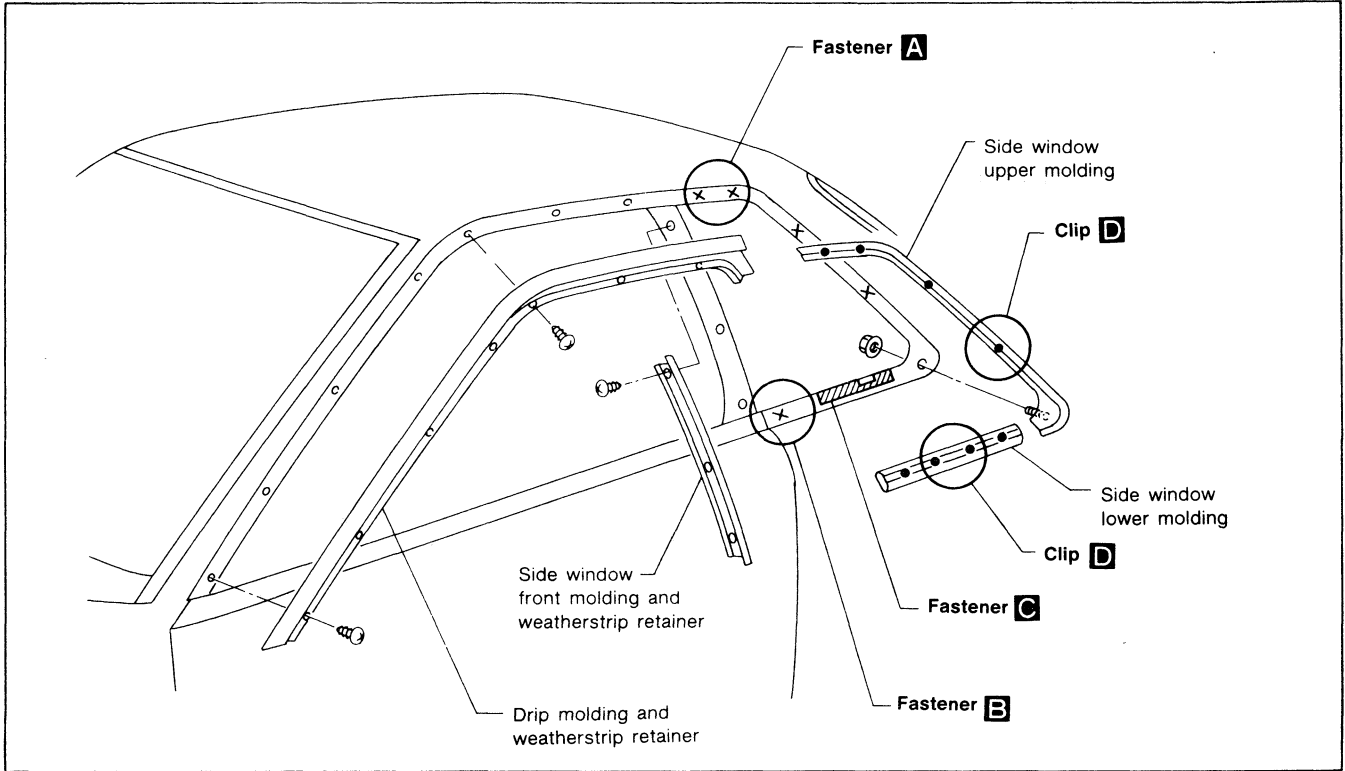

# INTERIOR AND EXTERIOR

## Exterior (Cont'd)


### ⑨ Side guard molding

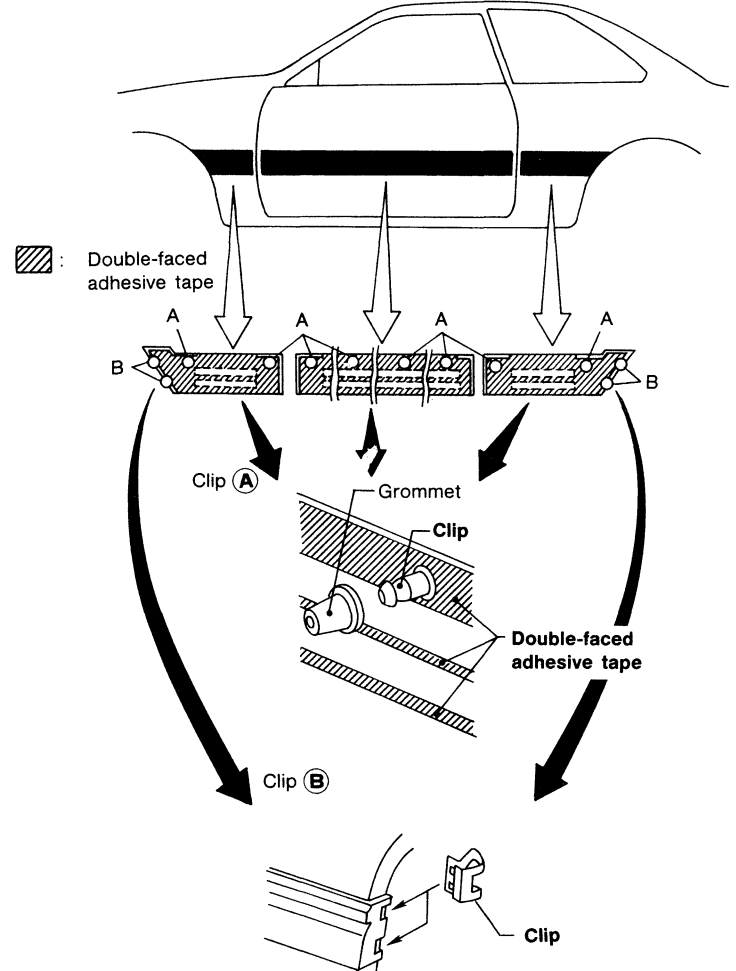

• Remove it only if it is necessary to do so.

• Removal:

1. Heat molding portion to 30 to 40°C (86 to 104°F) with a heat gun.

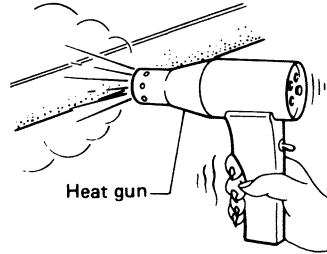


Heat gun

• Installation

1. Remove all traces of bonding agent from body panel. Then clean contact face of body.
2. Heat body panel and molding to 30 to 40°C (86 to 104°F) with a heat gun. Then install molding.

SBF134F

### ⑩ Door waist outside molding

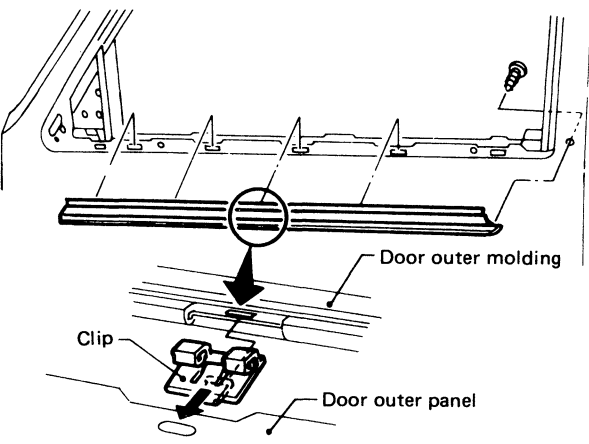

Door outer molding

Clip

Door outer panel

SBF003F

### ⑪ Rear window upper molding and side molding

Basically the same as windshield upper molding. Refer to "⑤ Windshield upper molding and side molding".


### ⑫ Rear window lower molding

Mounted with screws.

# INTERIOR AND EXTERIOR

## Exterior (Cont'd)


### 13 Rear combination lamp

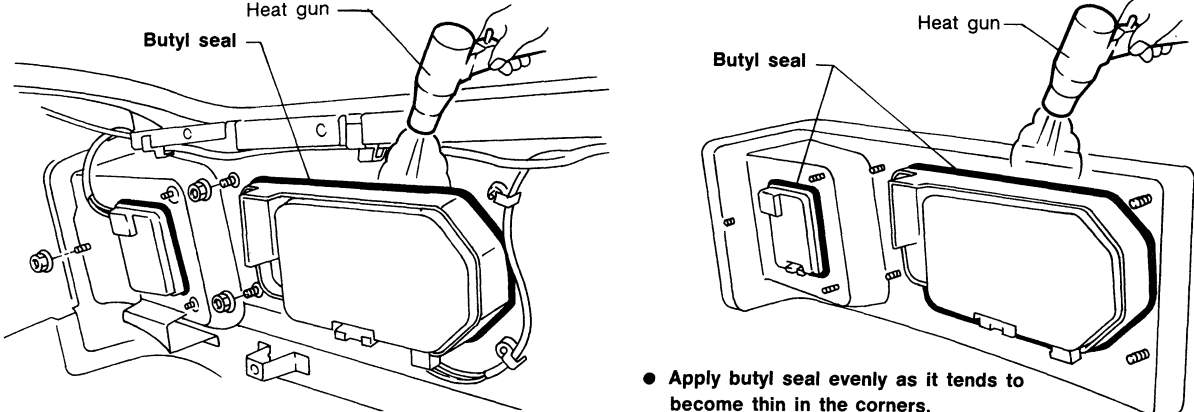

- Warm up lamp assembly area to a temperature a little below 60°C (140°F).
- Apply butyl seal evenly as it tends to become thin in the corners.
- Warm up lamp assembly area to a temperature a little below 60°C (140°F).

SBF135F


### 14 Trunk lid weatherstrip

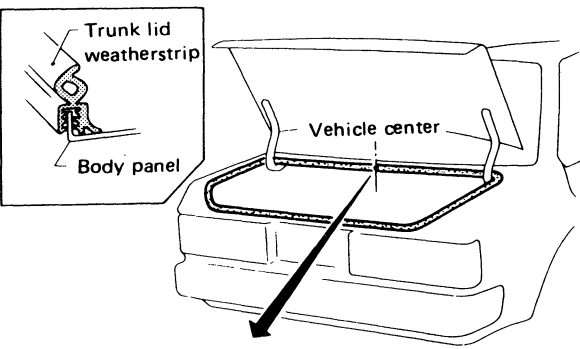

There is a marking at vehicle center.

SBF971C


### 16 Sun roof frame weatherstrip

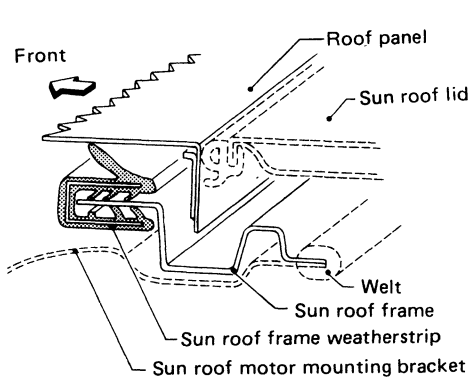

SBF443C

### 15 Sun roof lid weatherstrip

Sun roof lid weatherstrip is bonded to lid. Apply primer before bonding it.

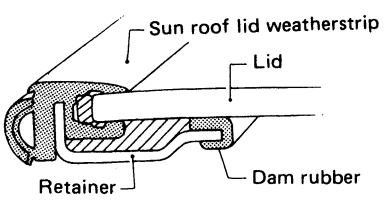



▨ : Sealant portion

SBF442C

# SEAT

- When removing or installing the seat trim, carefully handle it to keep dirt out and avoid damage.


## Front Seat

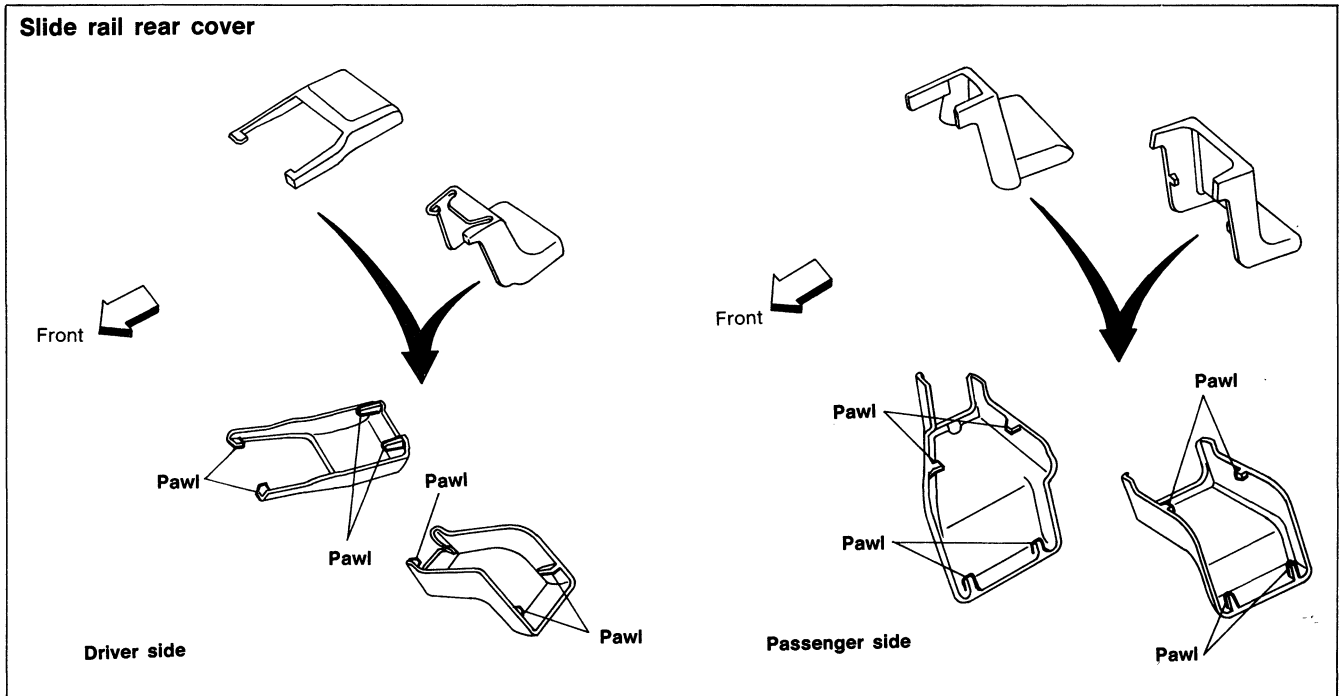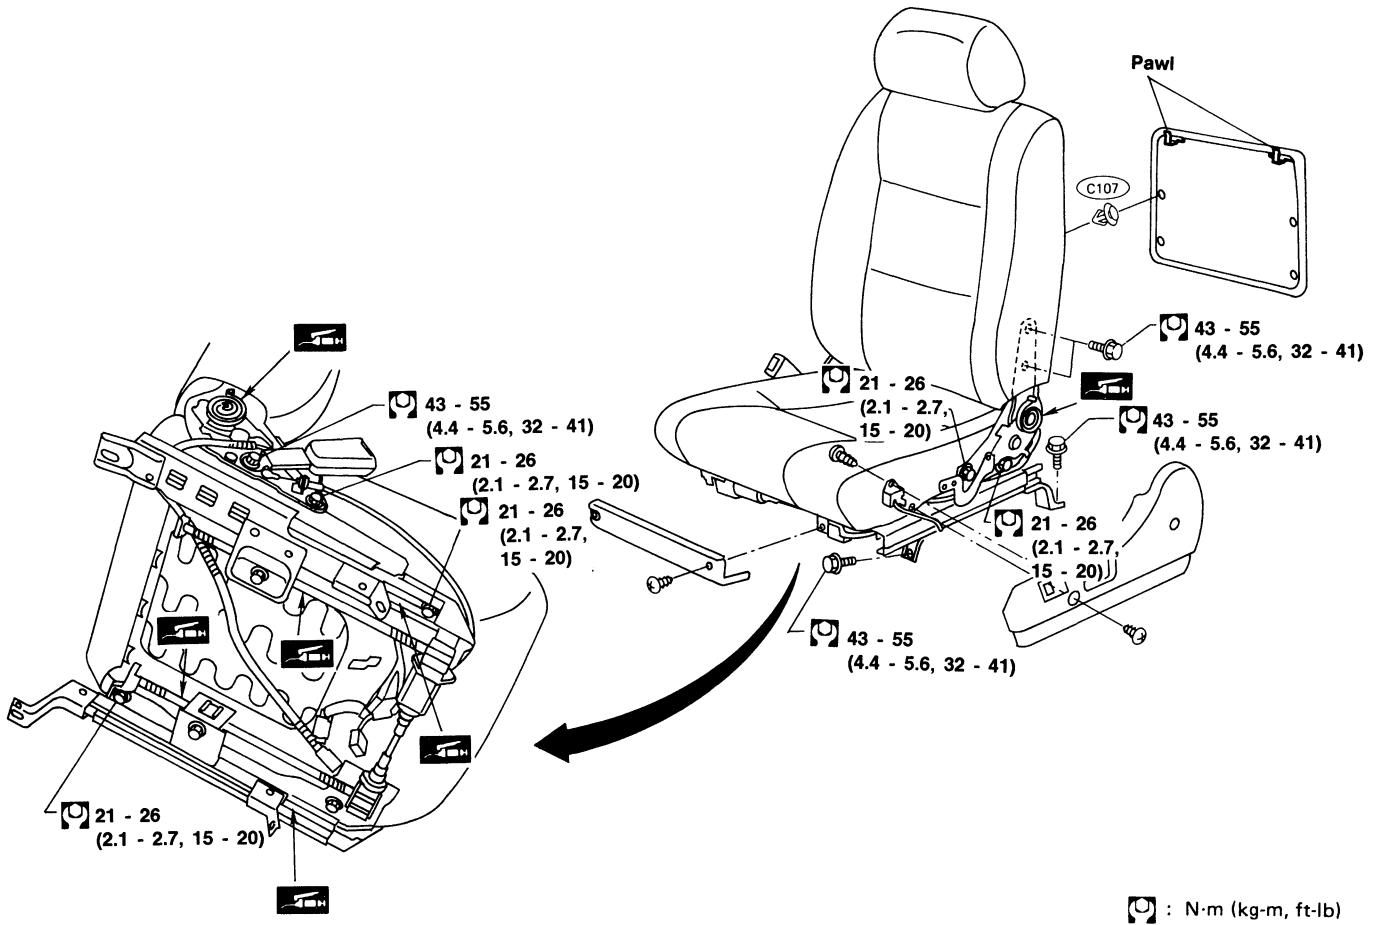

# SEAT

## Front Seat (Cont'd)


### POWER SEAT/WIRING DIAGRAM

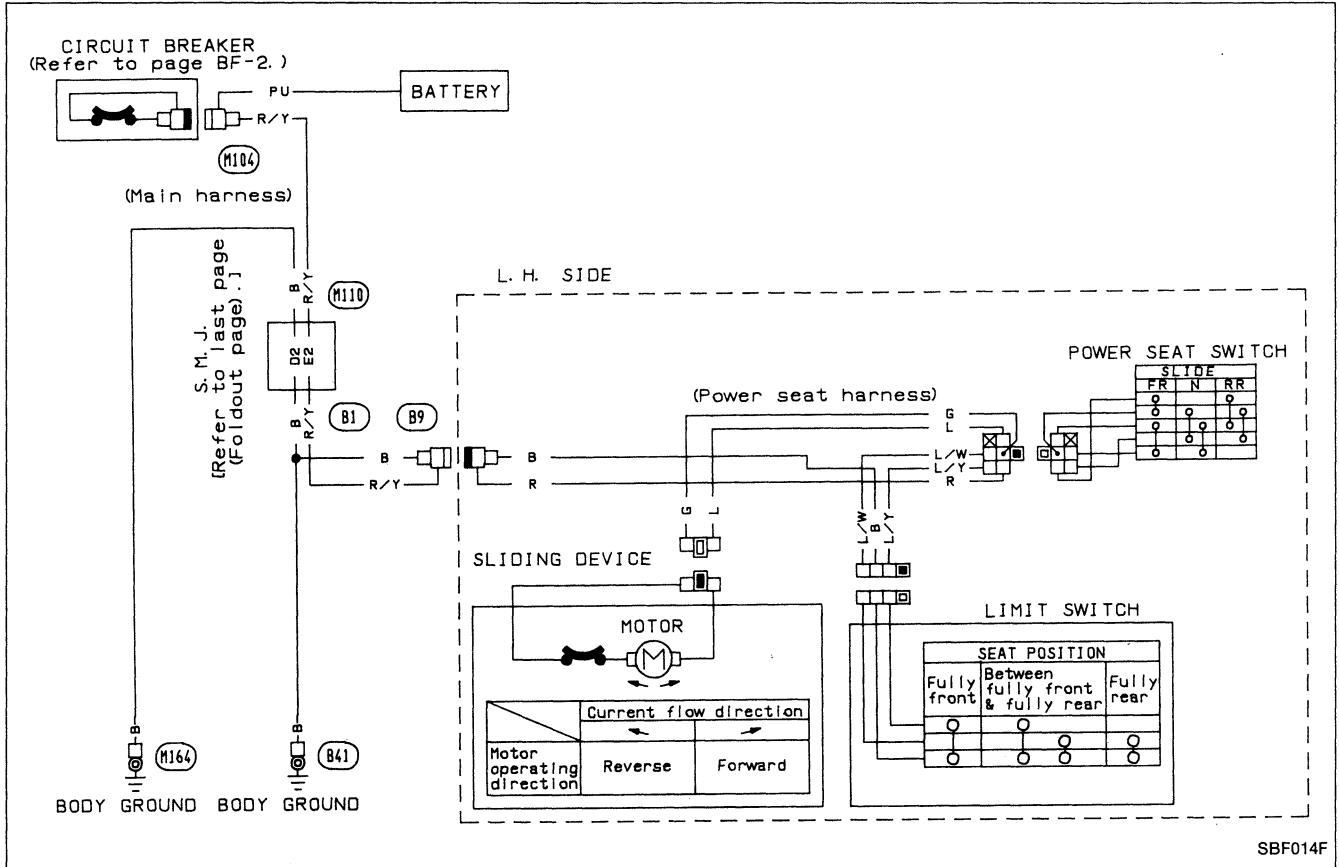



# SEAT


## Rear Seat

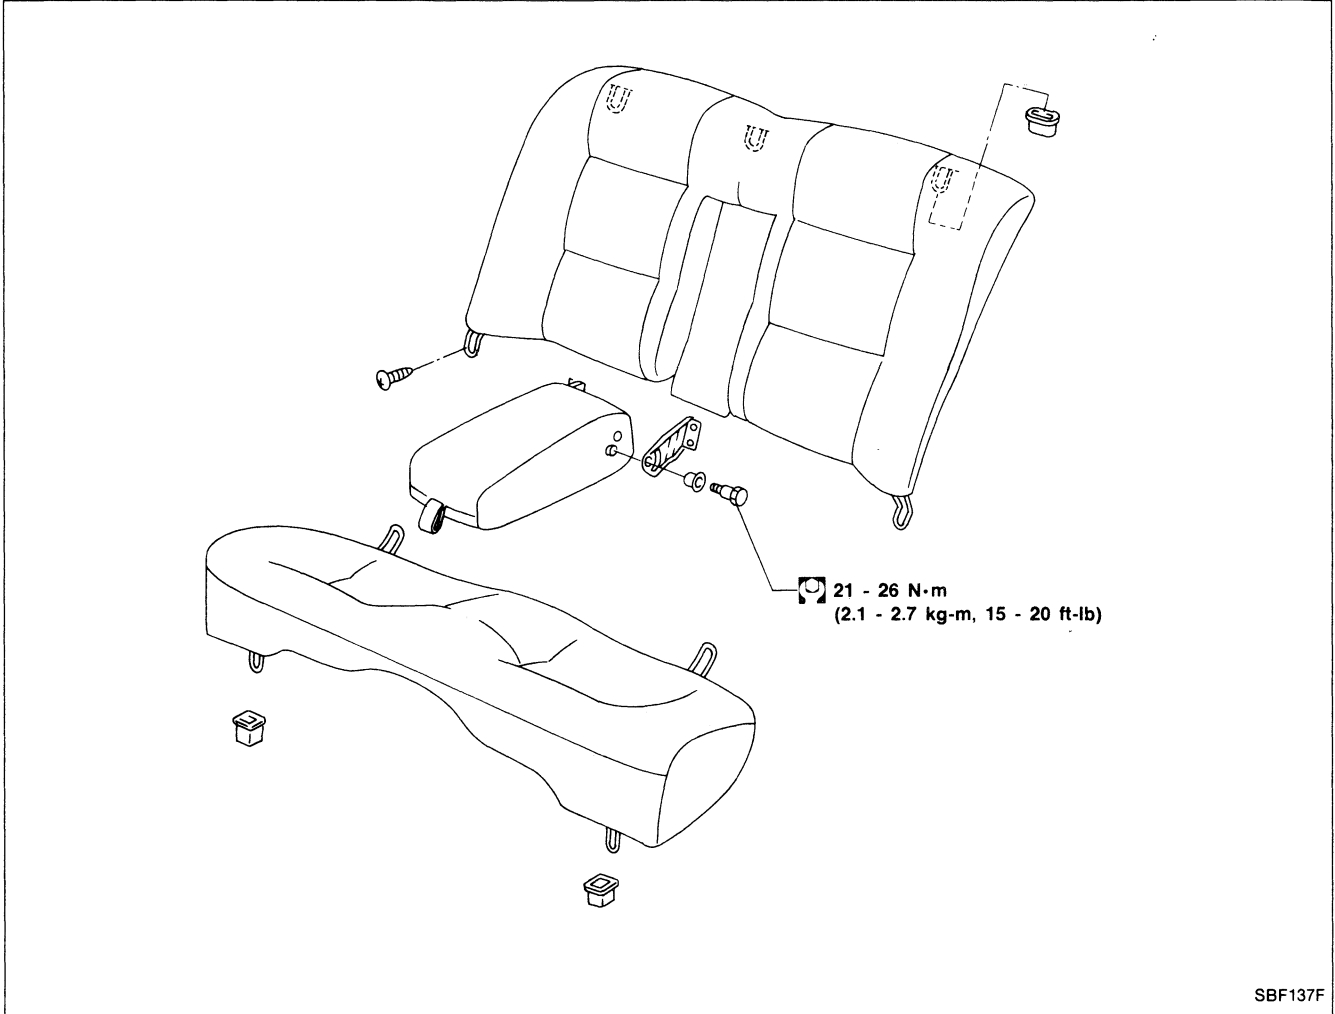

# SUN ROOF

## Electric Sun Roof

- After any adjustment, check sun roof operation and lid alignment.
- Handle finisher plate and glass lid with care so not to damage it.
- It is desirable for easy installation to mark each point before removal.

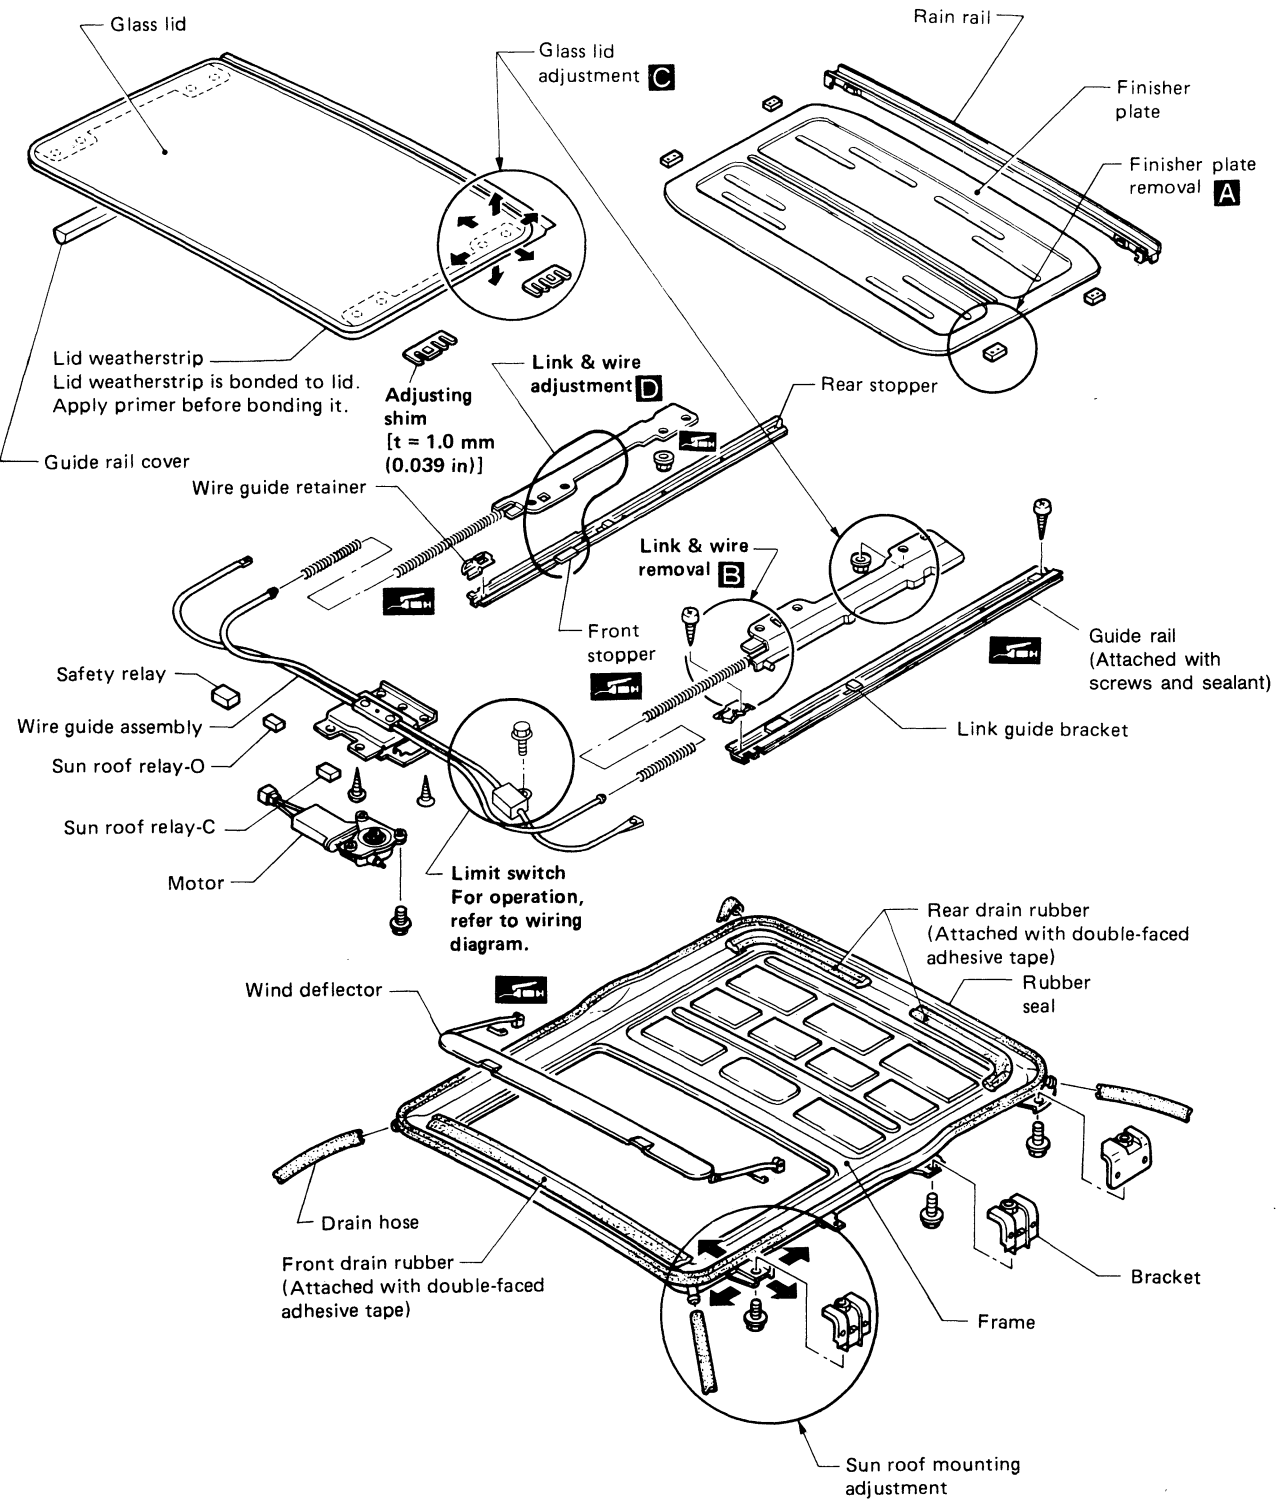


# SUN ROOF

## Electric Sun Roof (Cont'd)


### Finisher plate removal & installation

**A**

Remove guide rail cover and pull up pawl, then draw out finisher plate with sun roof lid open.

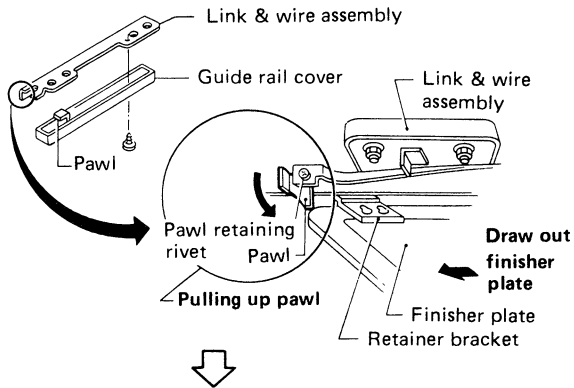


**Removal:**  
Raise pawl of retainer bracket, shift finisher plate and remove locate pins from retainer bracket. Then remove finisher plate.

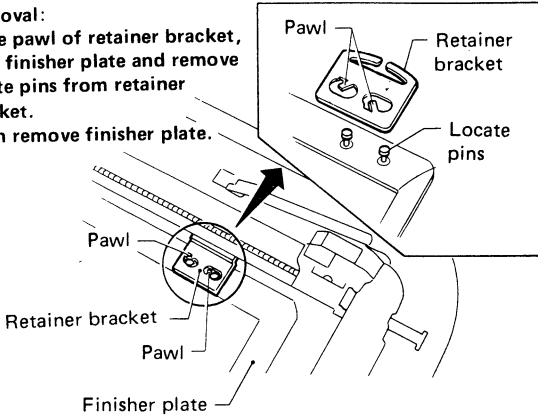

### Link & wire removal & installation


**B**

- When replacing wire, remove rail first and then link & wire assembly.
- Be sure to lubricate.

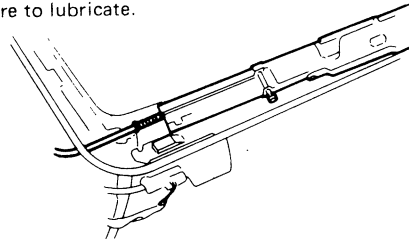

### Glass lid adjustment



**C**

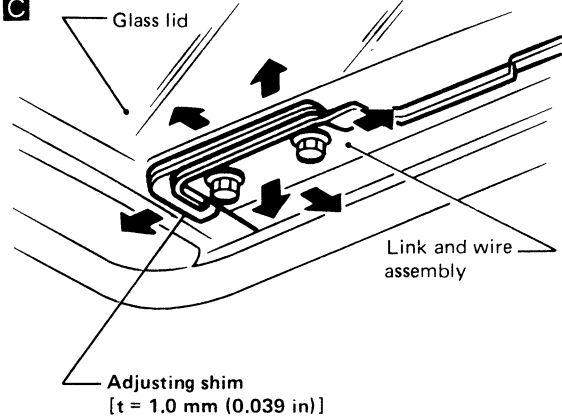

### Link & wire adjustment


**D**

Move link & wire assembly to closed lid position and after closing fully (as shown in figure below), install motor.

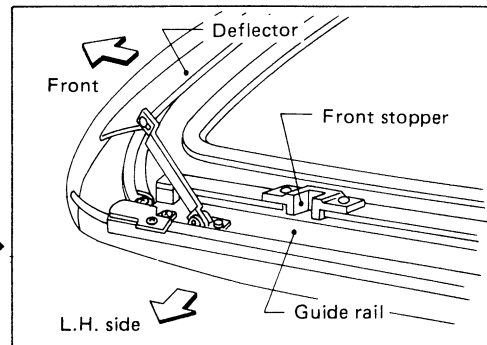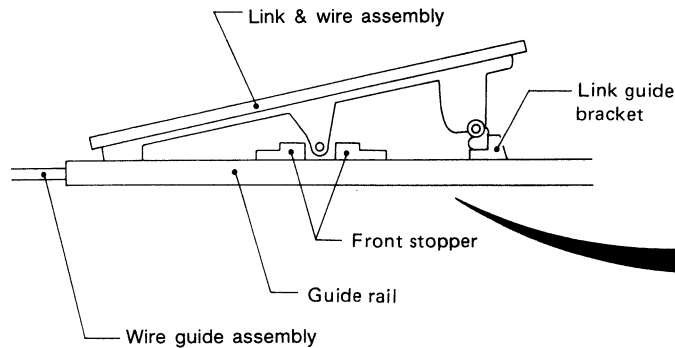

# SUN ROOF

## Wiring Diagram

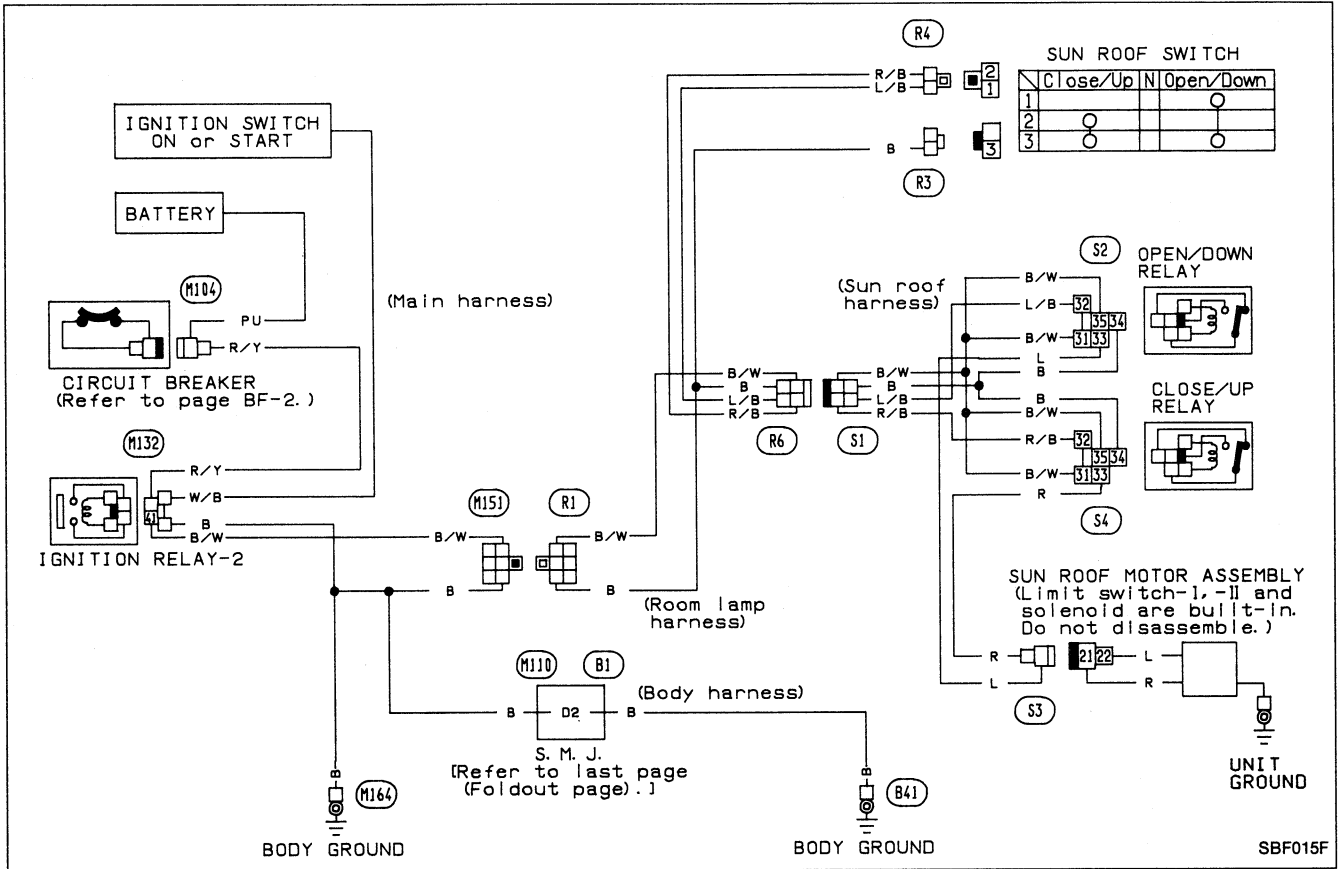


# WINDSHIELD AND WINDOWS

## Windshield and Rear Window

### REMOVAL

After removing moldings, remove glass.

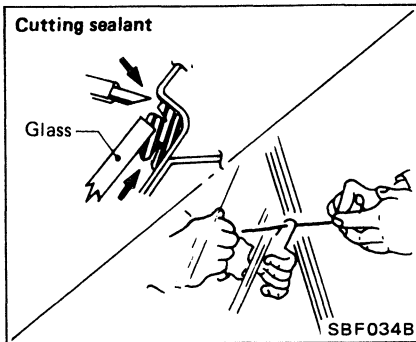

### CAUTION:




Be careful not to scratch glass when removing.

### INSTALLATION

- Use genuine Nissan Sealant kit or equivalent. Follow instructions furnished with it.
- After installation, the vehicle should remain stationary for about 24 hours.
- Do not use sealant which is more than 12 months past its production date.
- Do not leave cartridge unattended with its cap open.
- Keep Primers and sealant in a cool, dry place. Ideally, sealant should be stored in a refrigerator.
- Be sure to install moldings.

### WARNING:

Keep heat or open flames away as Primers are flammable.

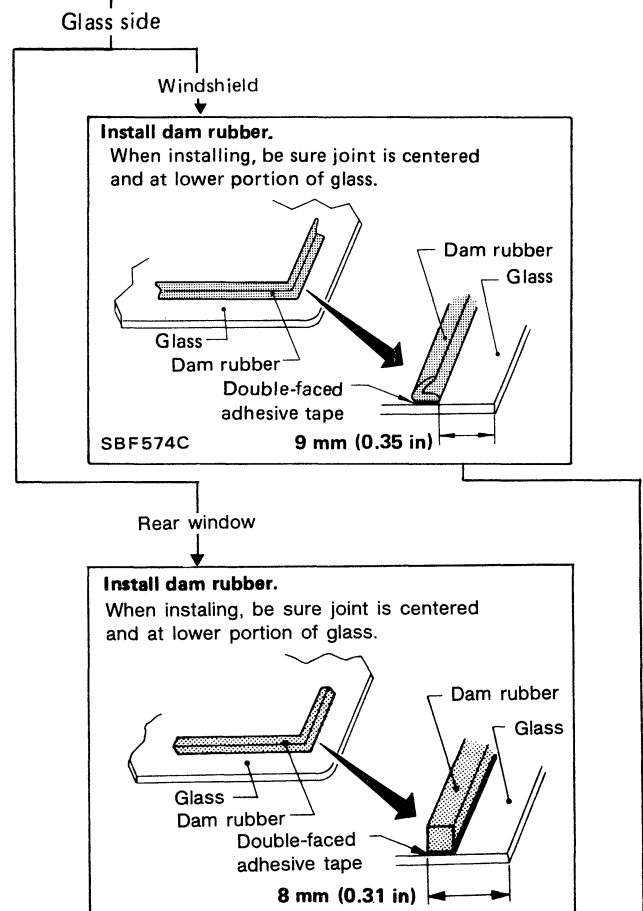
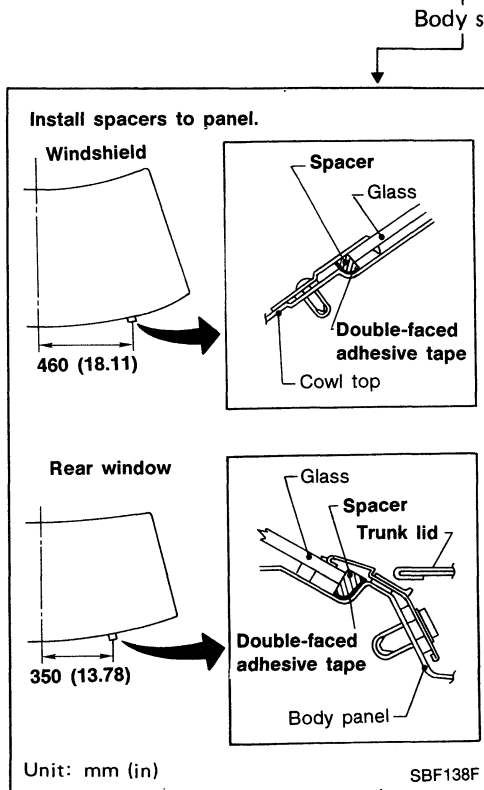
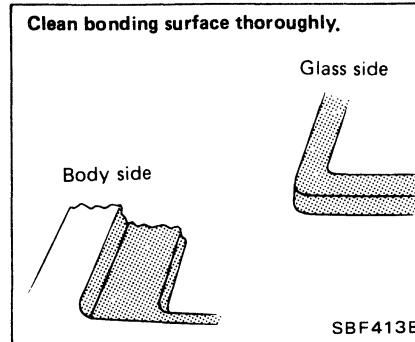


A


B

# WINDSHIELD AND WINDOWS

## Windshield and Rear Window (Cont'd)

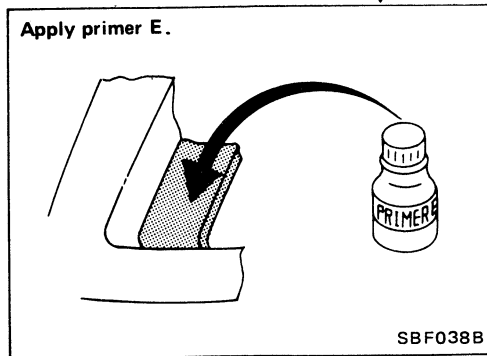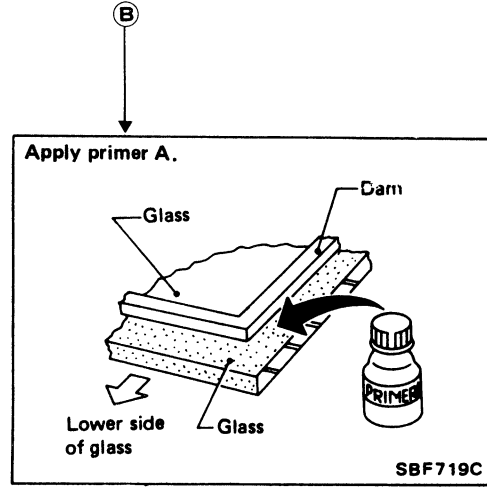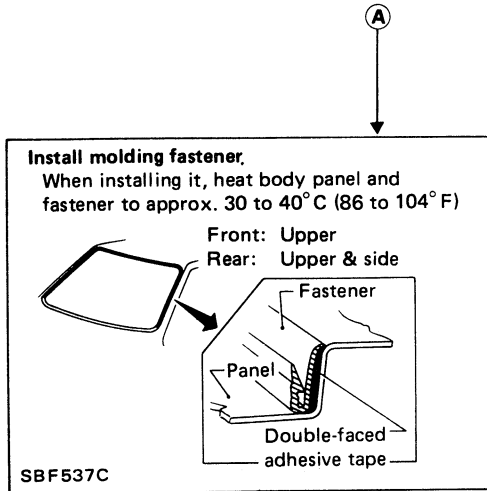

**CAUTION:**  
Allow primers to dry for 10 to 15 minutes before proceeding to the next step.

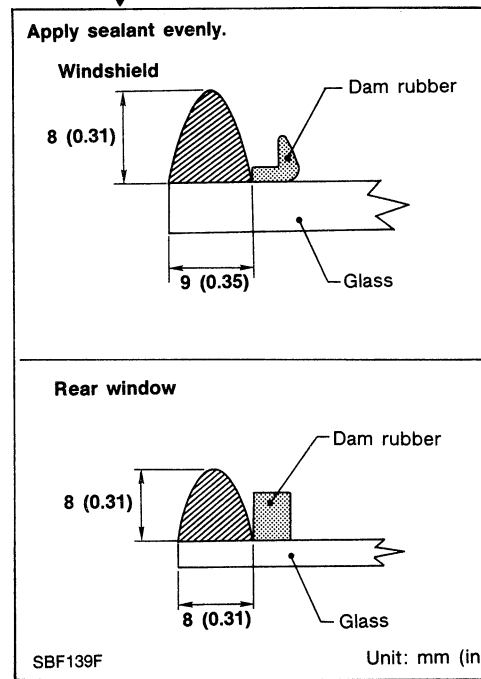

**CAUTION:**  
Allow primers to dry for 10 to 15 minutes before proceeding to the next step.


Set glass in position and press glass lightly and evenly.

**CAUTION:**  
Windshield glass should be installed within 15 minutes of applying sealant: sealant starts to harden 15 minutes after it is applied.

C

# WINDSHIELD AND WINDOWS

## Windshield and Rear Window (Cont'd)

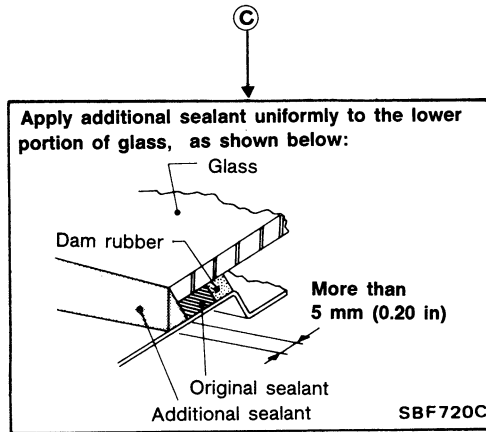

Check for water leakage.

**CAUTION:**  
For sealant drying period, refer to "Drying Time for Sealant".

Apply sealant to upper & side molding fixing portion.

Set upper and side moldings.

**CAUTION:**  
Molding must be installed securely so that it is in position and leaves no gap.


Install lower molding.

For details of moldings, refer to "Exterior".







# WINDSHIELD AND WINDOWS

## Side Window

- For mounting and removing moldings, refer to "Exterior". (See page BF-26.)

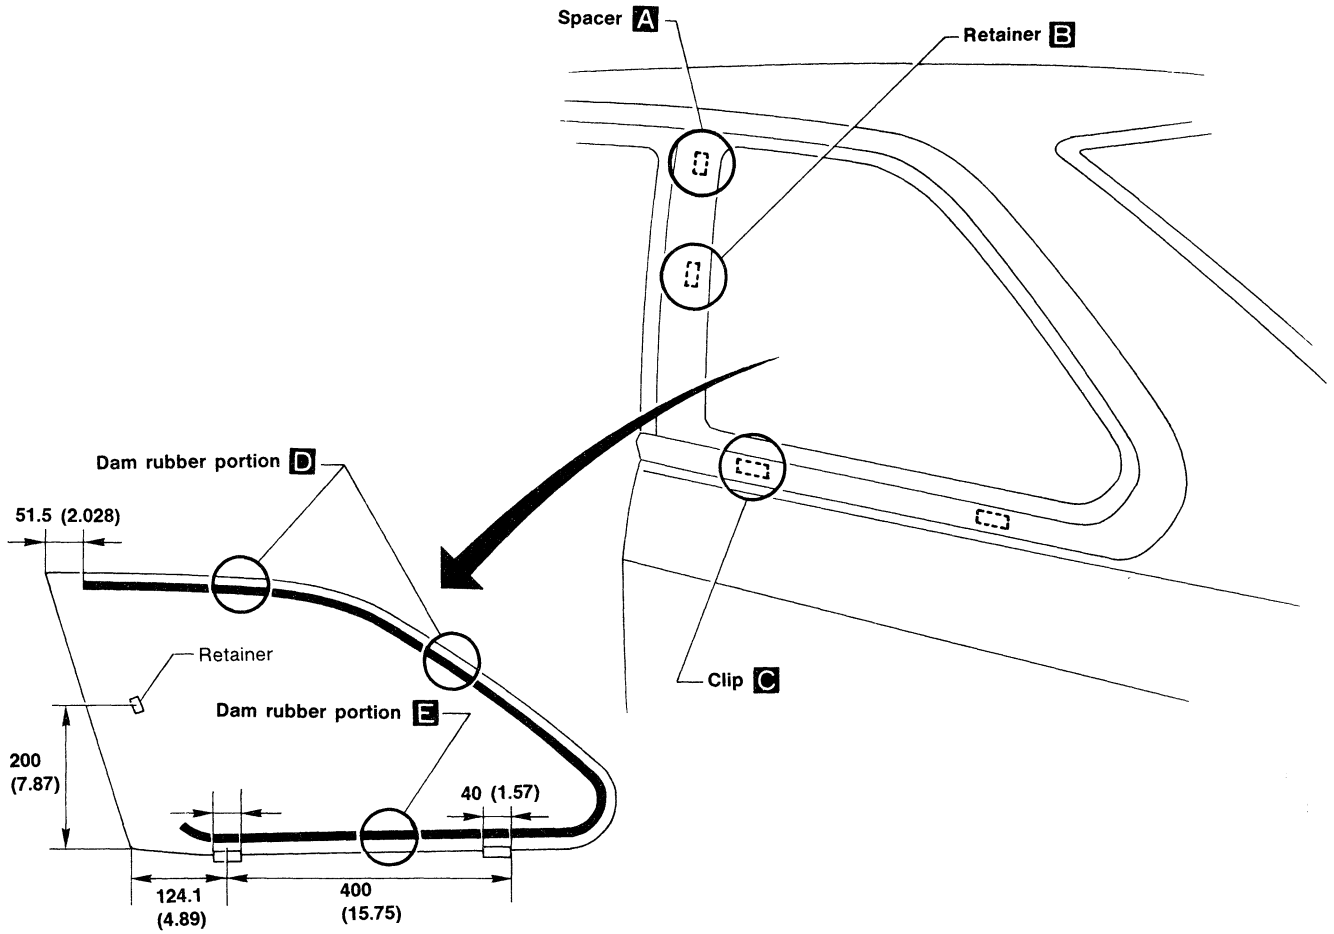

Unit: mm (in)

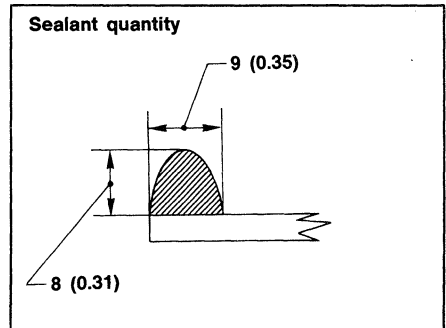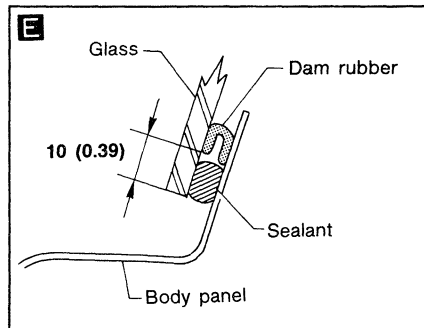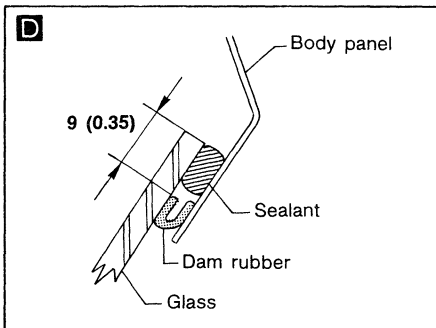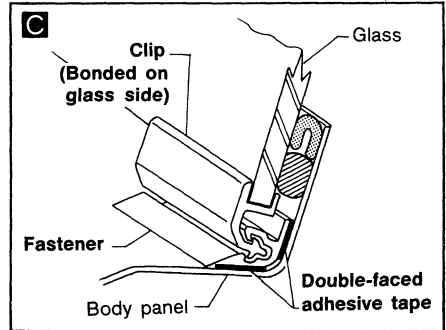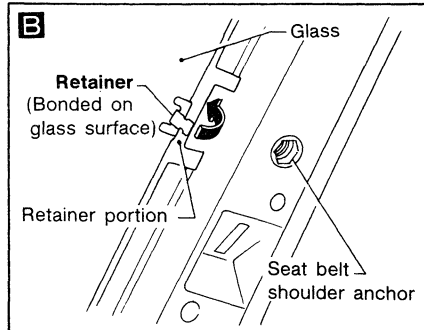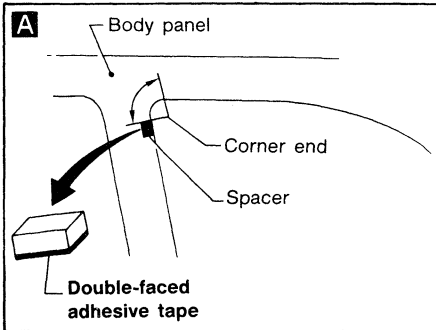



# WINDSHIELD AND WINDOWS

## Drying Time for Sealant

Reference: Time required for sealant to dry to desired hardness.

Unit: days

Temperature °C (°F)	Relative humidity %	Windshield, rear window and side window		
		90	50	25
40 (104)		1.0	1.5	3.0
25 (77)		1.5	2.0	4.0
5 (41)		2.5	6.5	10.5

### CAUTION:


Advise the user of the fact that vehicle should not be driven on rough roads or surfaces until sealant has properly vulcanized.

## Repairing Water Leaks for Windshield and Rear Window

Leaks can be repaired without removing and reinstalling glass.

**If water is leaking between caulking material and body or between glass and caulking material, determine the extent of the leak by applying water while pushing glass outward.**


To stop the leak, apply primer and then sealant to the leak point.

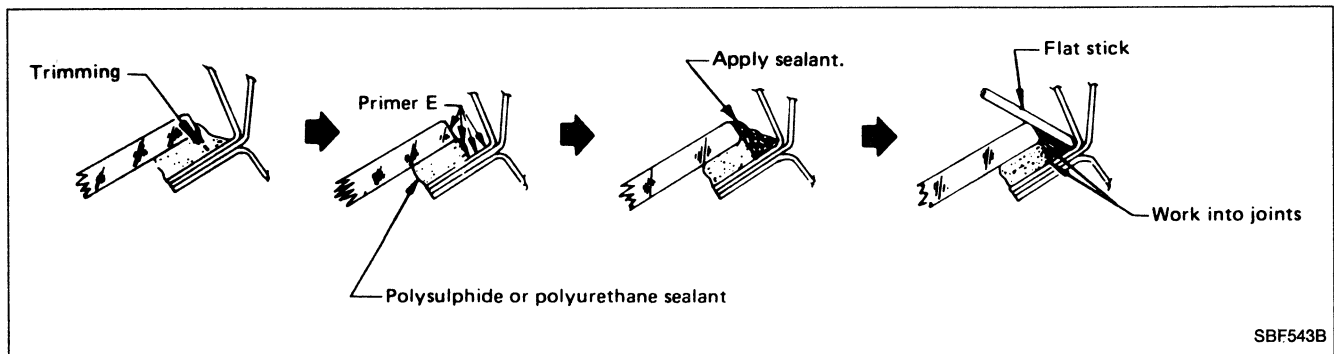


Afterwards, install molding securely.

# MIRROR

## Door Mirror

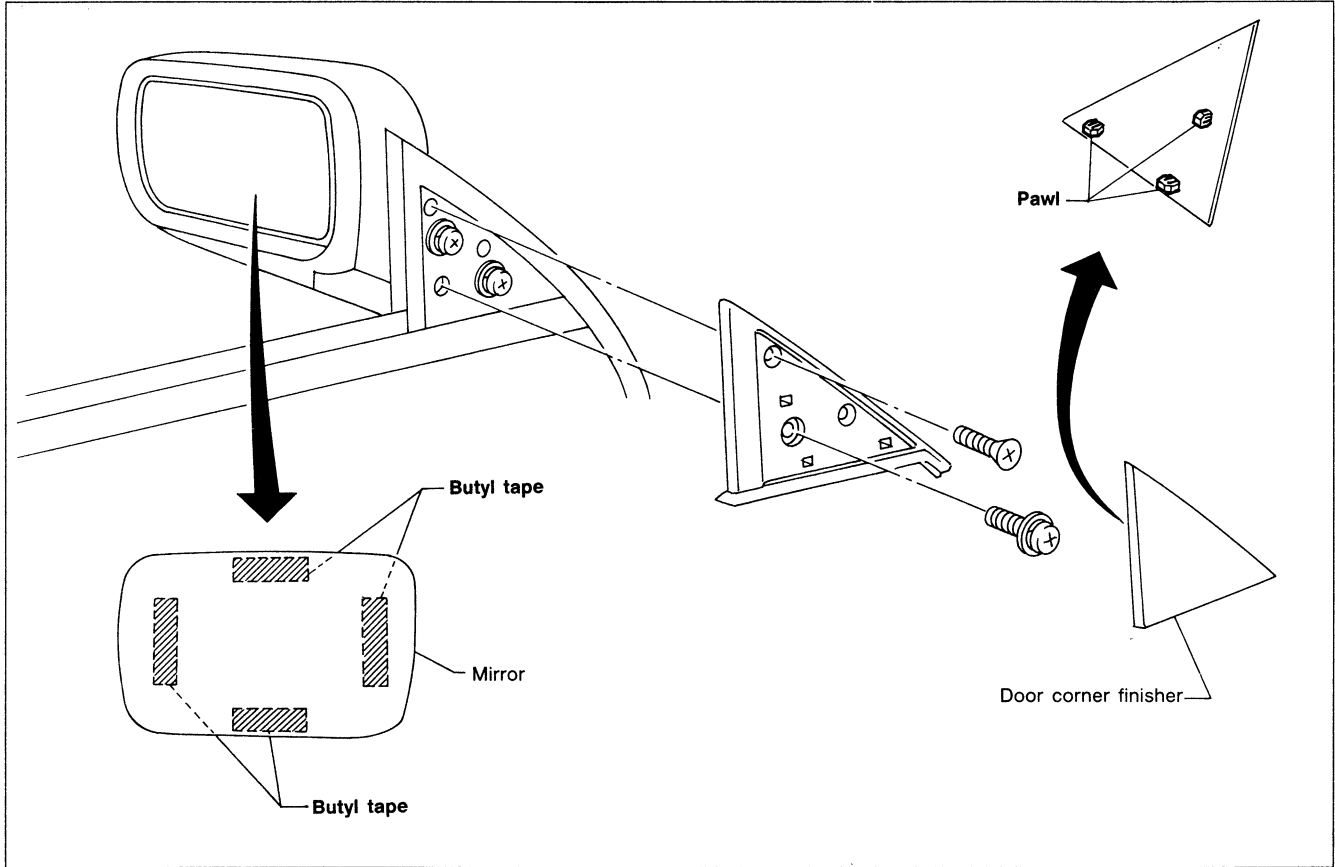

## MIRROR REMOVAL AND INSTALLATION

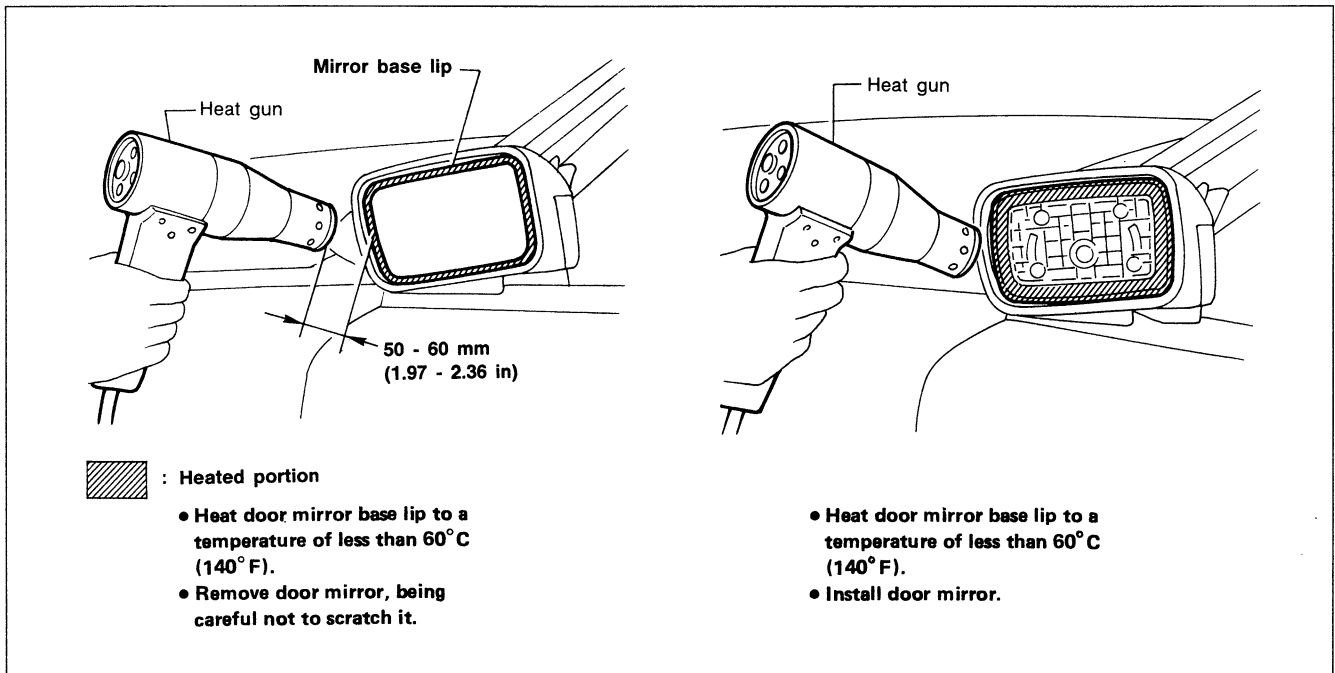


SBP141F

# MIRROR


## Door Mirror (Cont'd)

### WIRING DIAGRAM

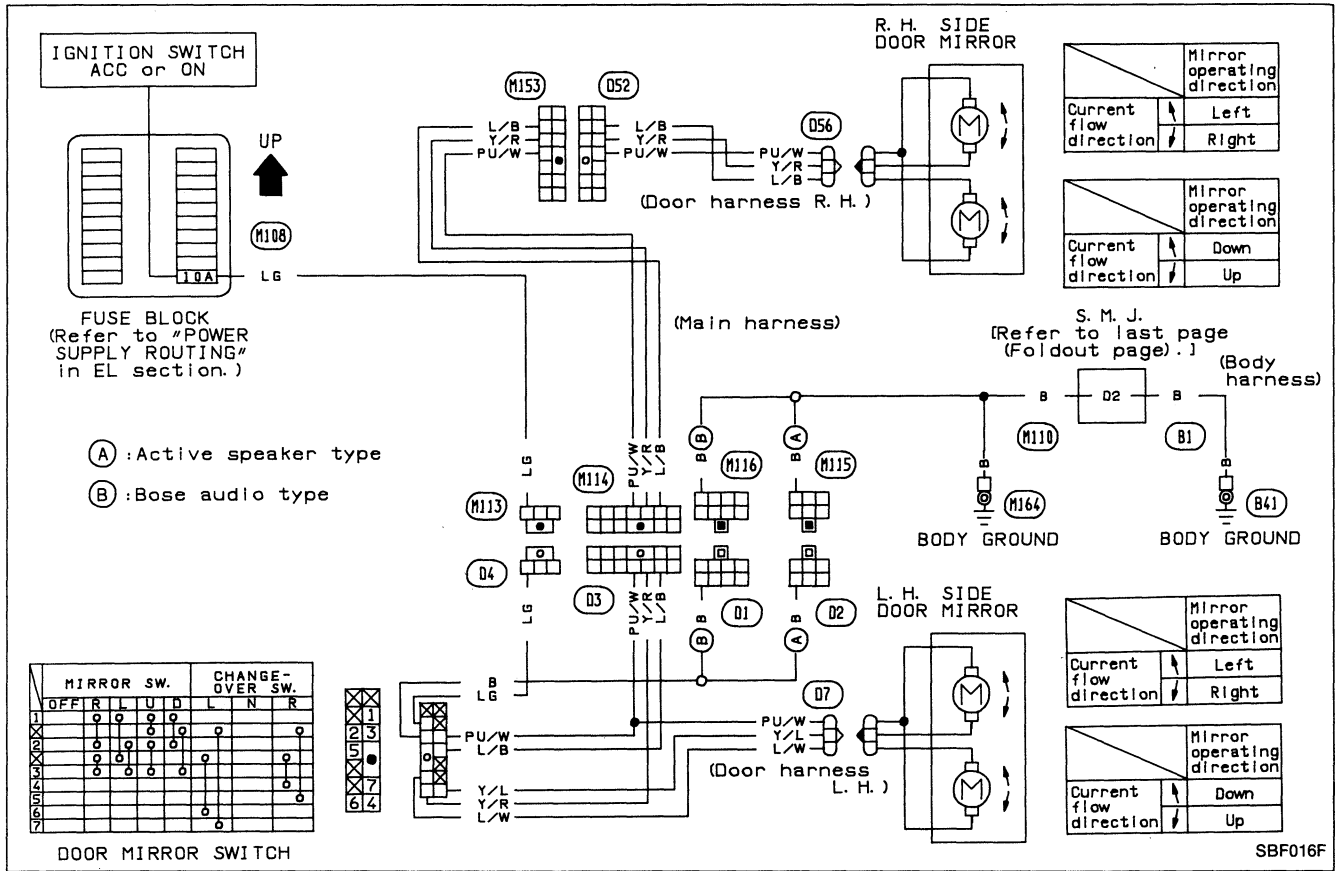


# BODY ALIGNMENT

- All dimensions indicated in figures are actual ones.
- When a tram tracking gauge is used, adjust both pointers to equal length and check the pointers and gauge itself to make sure there is no free play.
- When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
- Measurements should be taken at the center of the mounting holes.
- An asterisk (\*) following the value at the measuring point indicates that the measuring point on the other side is symmetrically the same value.
- The coordinates of the measurement points are the distances measured from the standard line of "X", "Y" and "Z".

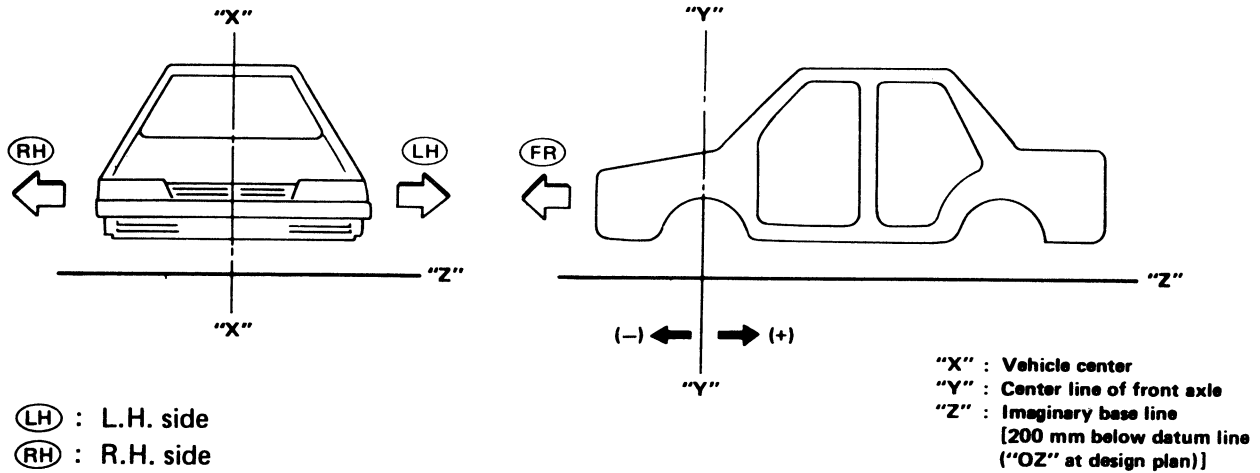

## Engine Compartment

### MEASUREMENT








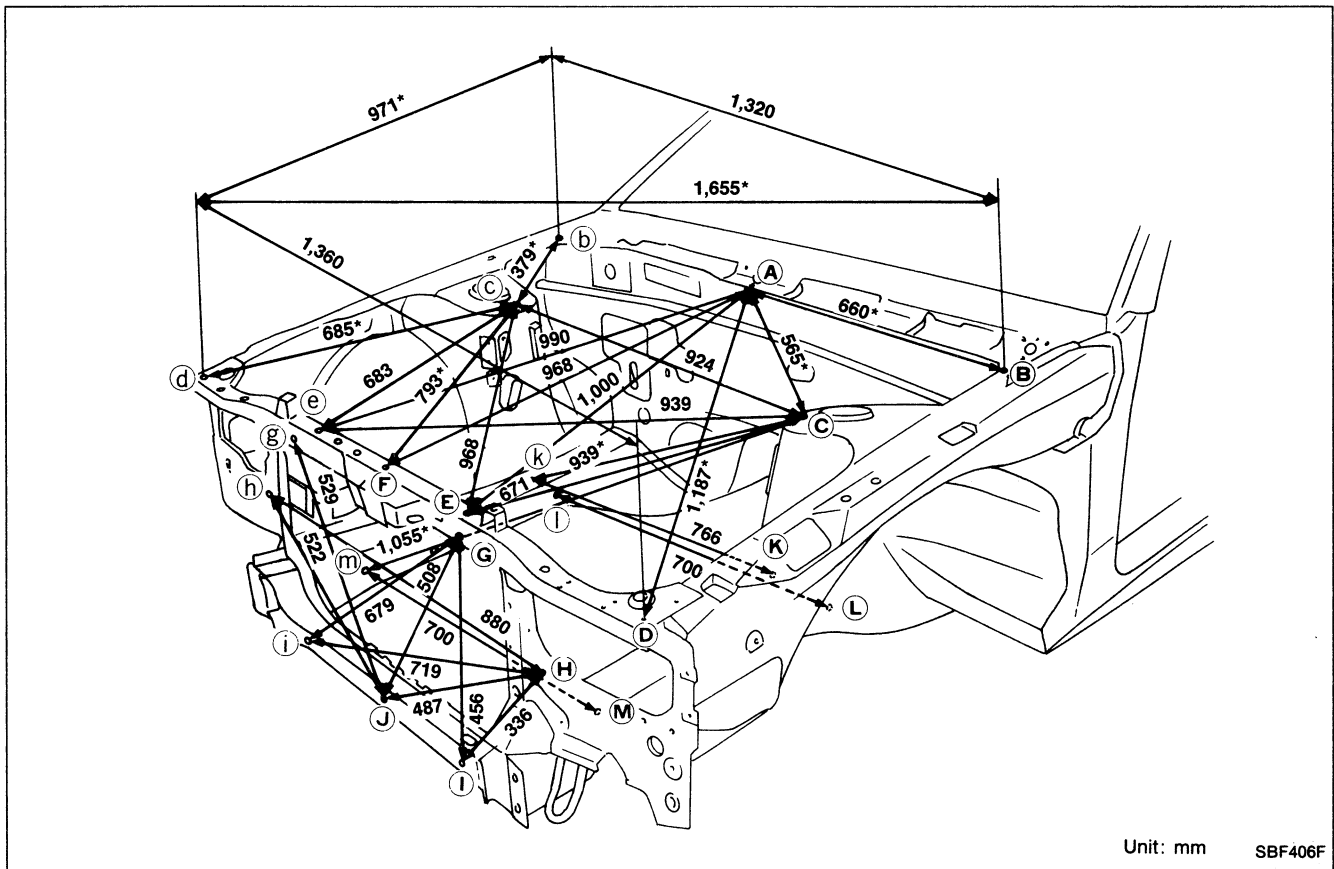


# BODY ALIGNMENT

## Engine Compartment (Cont'd)

Unit: mm

### MEASUREMENT POINTS

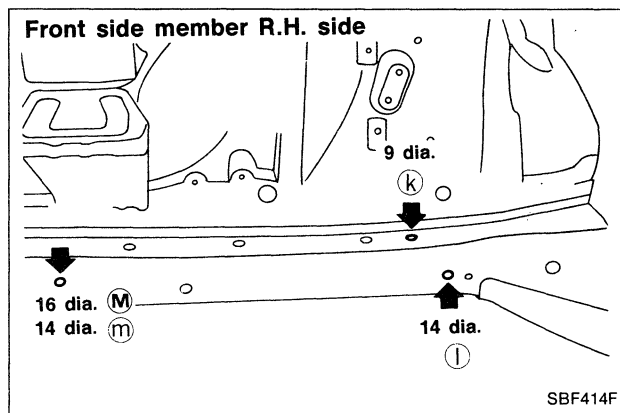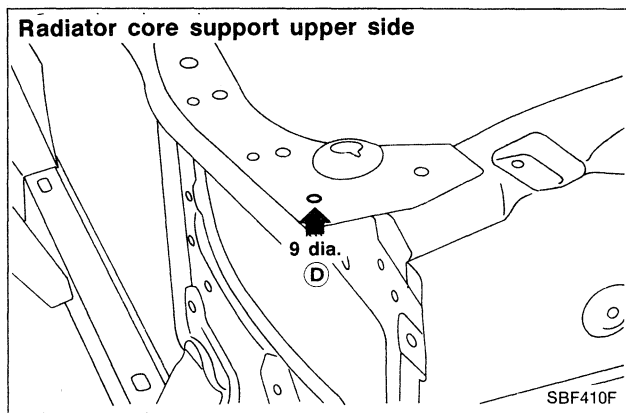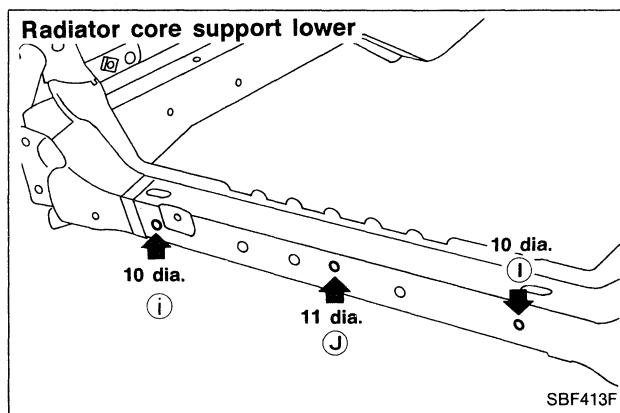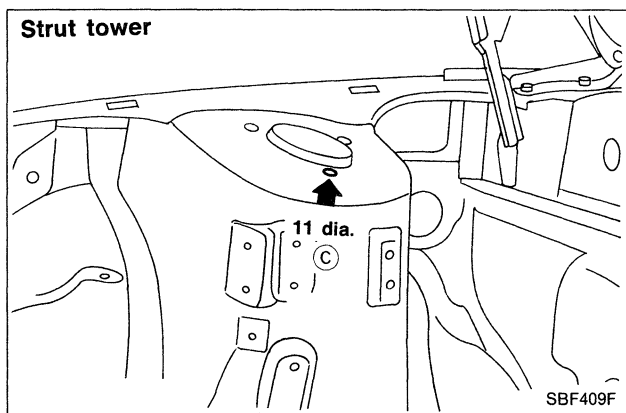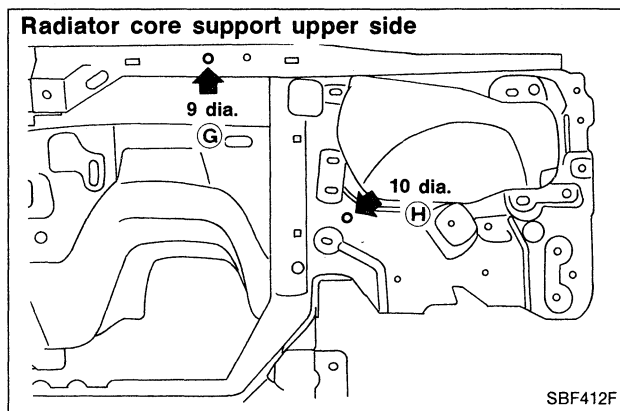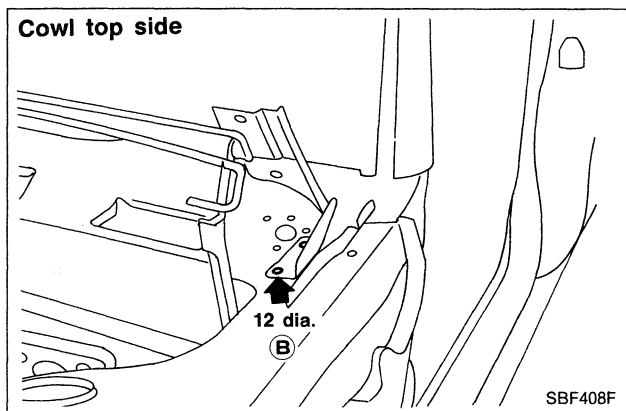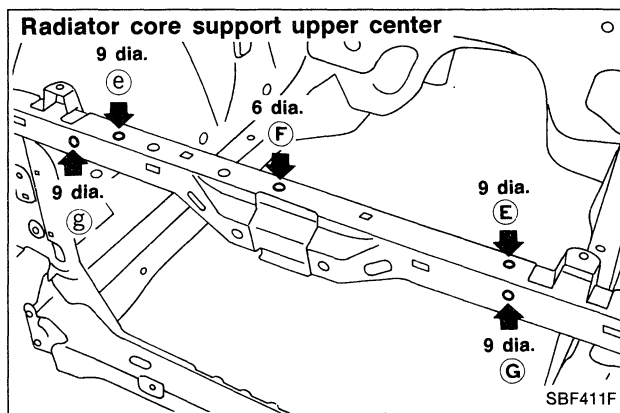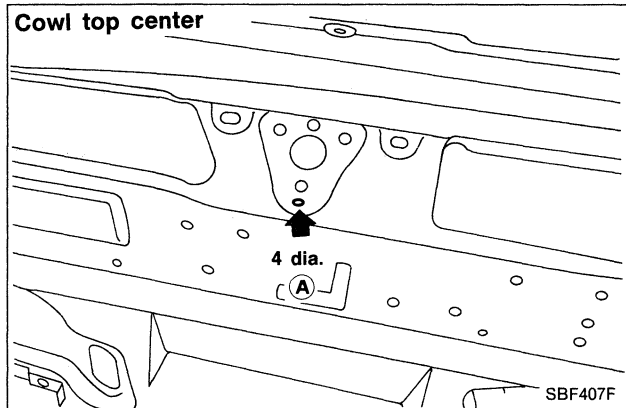


# BODY ALIGNMENT

## Underbody

### MEASUREMENT

Unit: mm

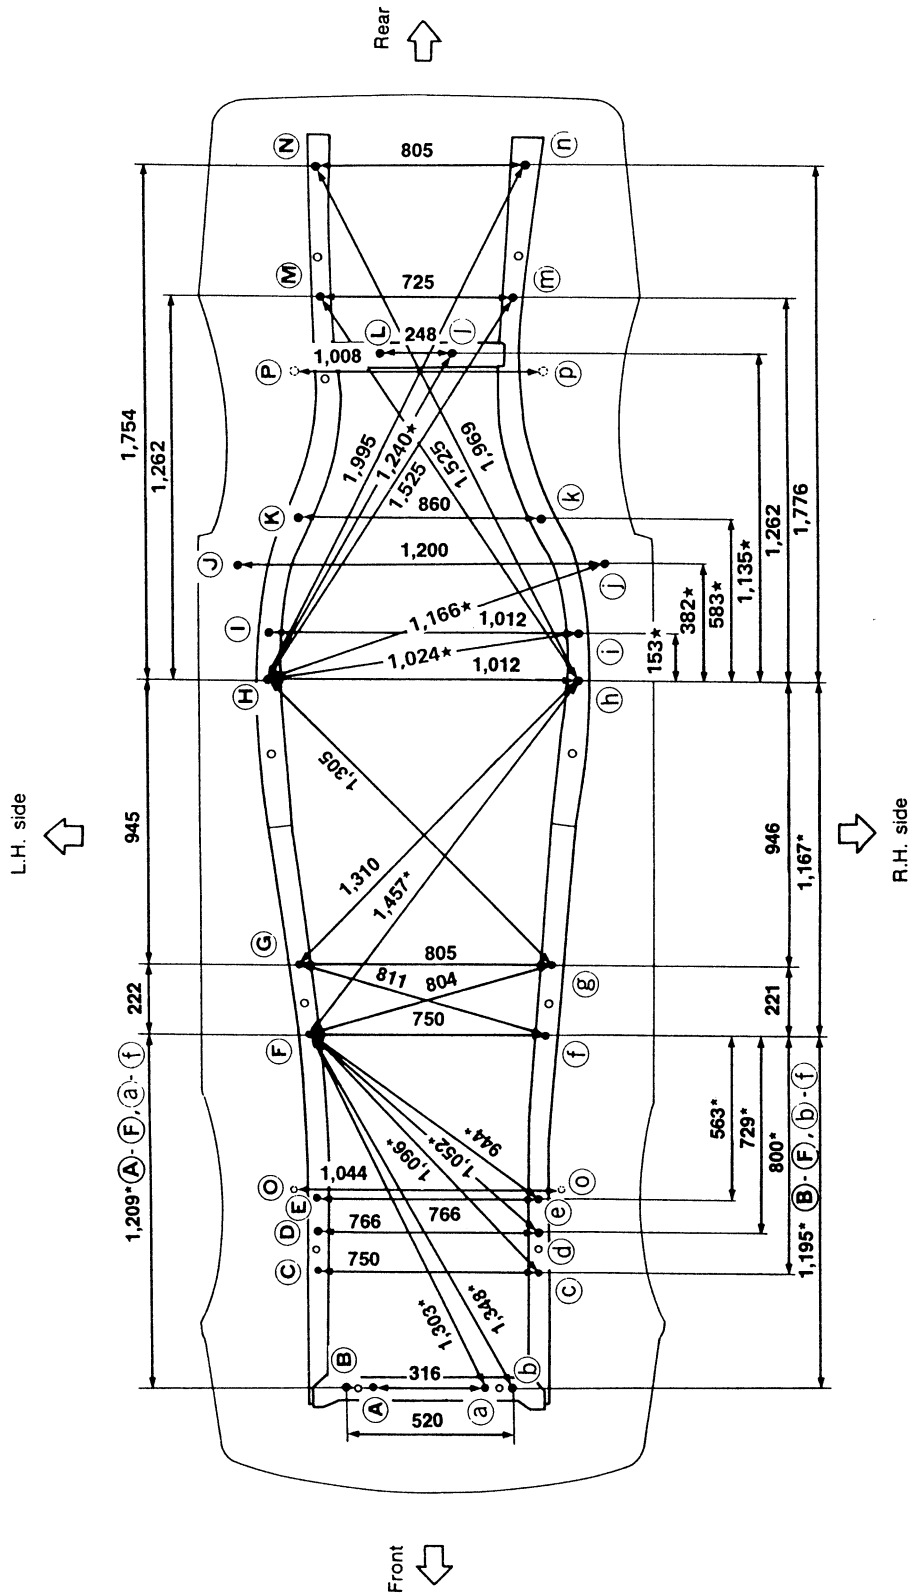


All dimensions indicated in these figures are actual ones. (There are no projected dimensions.)

# BODY ALIGNMENT

## Underbody (Cont'd)

### MEASUREMENT POINTS

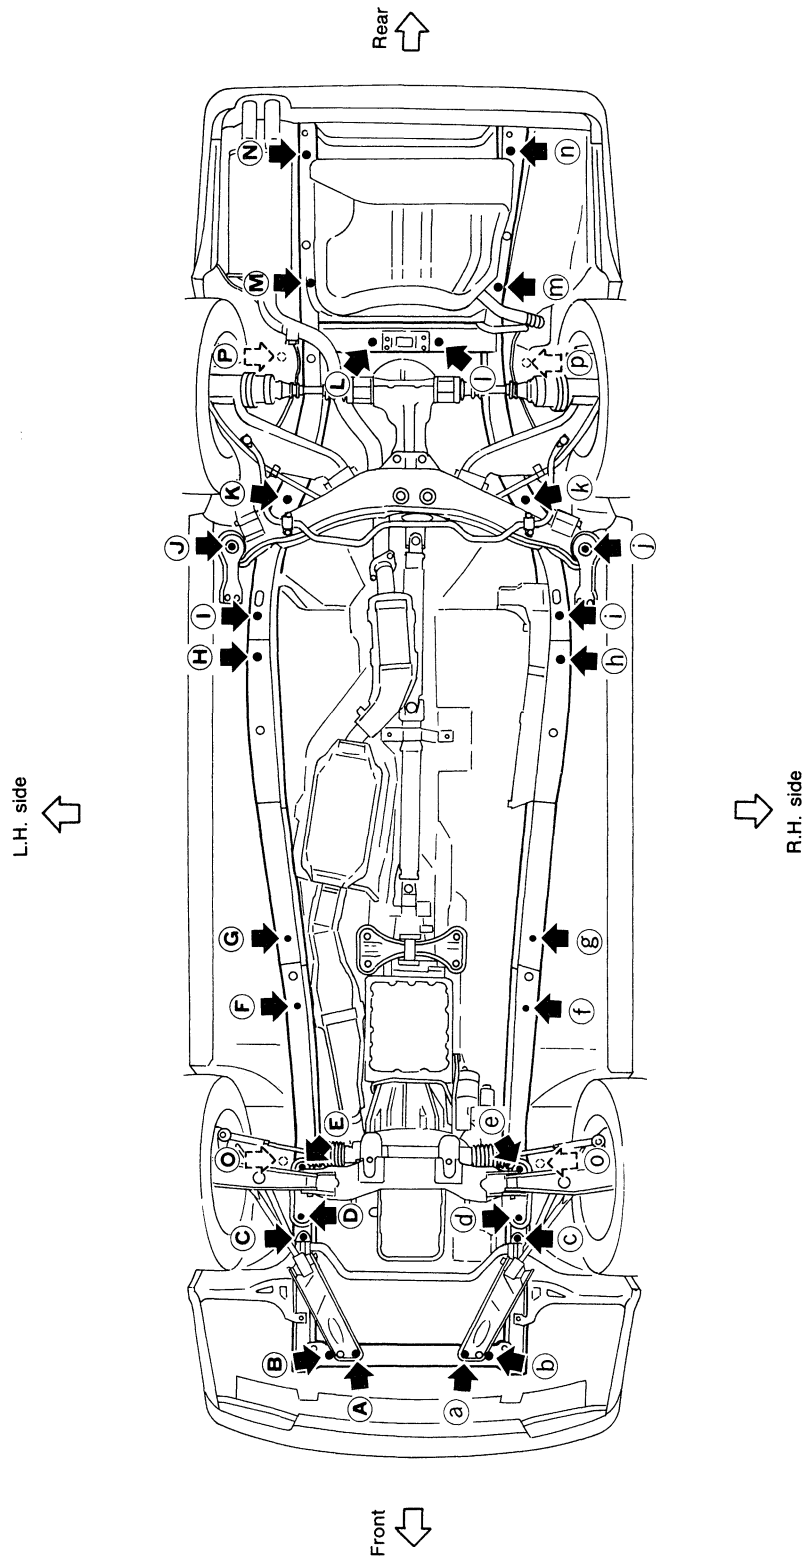

# BODY ALIGNMENT

## Underbody (Cont'd)


Unit: mm

### Radiator core lower support, front side member, front suspension mounting lower member and front side member center extension

L.H. side ←

Coordinates:

- |          |          |          |
|----------|----------|----------|
| (A), (a) | (G), LH  | (G), (g) |
| X: 158   | X: 406   | 12 dia.  |
| Y: -605  | Y: 800   | (F), (f) |
| Z: 244.5 | Z: 141.8 | 13 dia.  |
| (B), (b) | (g), RH  | (E), (e) |
| X: 260   | X: 398.6 | 13 dia.  |
| Y: -605  | Y: 800   | (D), (d) |
| Z: 244.5 | Z: 141.8 | 14 dia.  |
| (C), (c) |          | (C), (c) |
| X: 375   |          | 13 dia.  |
| Y: -206  |          | (B), (b) |
| Z: 290   |          | 12 dia.  |
| (D), (d) |          | (A), (a) |
| X: 383   |          | 15 dia.  |
| Y: -134  |          |          |
| Z: 290   |          |          |
| (E), (e) |          |          |
| X: 383   |          |          |
| Y: 37    |          |          |
| Z: 290   |          |          |
| (F), (f) |          |          |
| X: 375   |          |          |
| Y: 580   |          |          |
| Z: 141.8 |          |          |

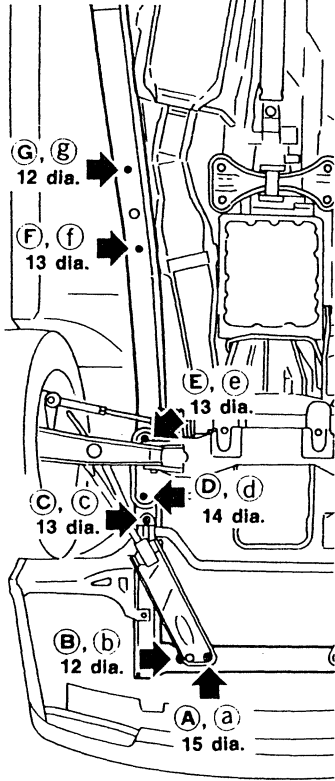

Front ↓


SBF415F

### Front side member rear extension, rear side member, rear side member extension and rear suspension mounting bolt top

↑ Rear

Coordinates:

- |          |          |          |
|----------|----------|----------|
| (H), (h) | (M) LH   | (N)      |
| X: 506   | X: 361.5 | 12 dia.  |
| Y: 1,740 | Y: 2,970 | (N)      |
| Z: 139   | Z: 383.6 | 14 dia.  |
| (I), (i) | (M) RH   | (M), (m) |
| X: 506   | X: 363   | 14 dia.  |
| Y: 1,893 | Y: 2,970 | (L), (l) |
| Z: 136.7 | Z: 383.6 | 16 dia.  |
| (J), (j) | (N) LH   | (K), (k) |
| X: 600   | X: 397   | 20 dia.  |
| Y: 2,110 | Y: 3,473 | (J), (j) |
| Z: 156.6 | Z: 383.6 | M12 bolt |
| (K), (k) | (N) RH   | (I), (i) |
| X: 430   | X: 408   | 20 dia.  |
| Y: 2,303 | Y: 3,496 | (H), (h) |
| Z: 272.1 | Z: 383.6 | 20 dia.  |
| (L), (l) |          |          |
| X: 124   |          |          |
| Y: 2,775 |          |          |
| Z: 404.8 |          |          |

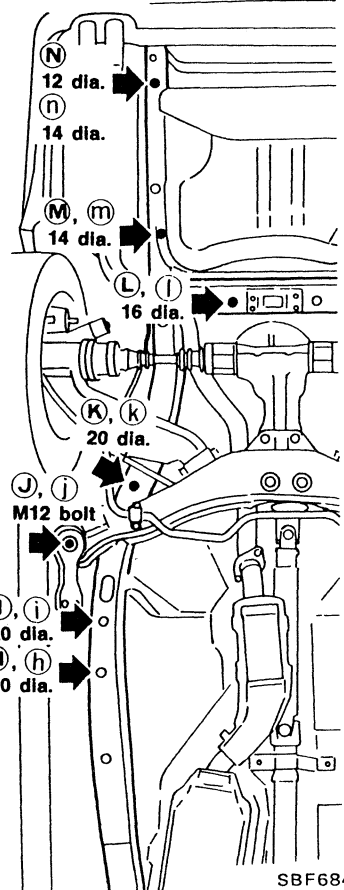


L.H. side ←

SBF684F

### Front and rear strut tower centers

Coordinates:

- |            |  |
|------------|--|
| (O), (o)   |  |
| X: 521.9   |  |
| Y: 48.8    |  |
| Z: 793.3   |  |
| (P), (p)   |  |
| X: 504.1   |  |
| Y: 2,679.3 |  |
| Z: 867.4   |  |

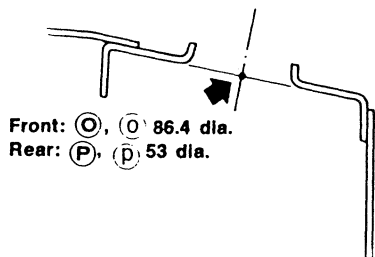

SBF685F





# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## Precautions for SRS “AIR BAG” Service


- Do not use a circuit tester to check SRS circuits.
- Before servicing the SRS, turn ignition switch “OFF”, disconnect battery ground cable and wait for at least 10 minutes. For approximately ten minutes after the cables are removed, it is still possible for the air bag to inflate. Therefore, do not work on any air bag system connectors or wires until at least ten minutes have passed.
- SRS sensors must always be installed with their arrow marks “←” facing the front of the vehicle for proper operation. Also check sensors for cracks, deformities or rust before installation and replace as required.
- The spiral cable must be aligned with the neutral position since its rotations are limited. Do not attempt to turn steering wheel or column after removal of steering gear.
- Handle air bag module carefully. Always place it with the pad side facing upward.
- After removing any SRS parts, discard old special bolts and replace with new ones. Conduct self-diagnosis to check entire SRS for proper function.
- If front of vehicle is damaged in a collision, always check the three crash zone sensors and the wiring harness.

## Preparation for SRS “AIR BAG” Service

### SPECIAL SERVICE TOOLS

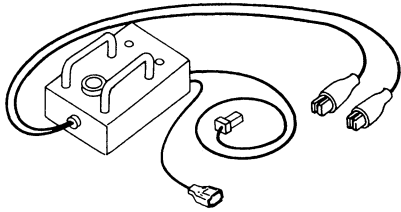Tool number (Kent-Moore No.) Tool name	Description	
(J38381) Deployment tool		Disposing of air bag module
(J38378) Spiral cable stopper		Avoiding unexpected spiral cable rotation.

### COMMERCIAL SERVICE TOOL

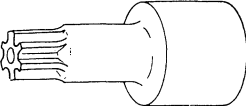
Tool name	Description	
Special torx bit		Use for special bolt (tamper resistant screw)

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## Description

The air bag deploys when any of the four sensors (right crash zone sensor, center crash zone sensor, left crash zone sensor or tunnel sensor) and the safing sensor simultaneously activate while the ignition switch is "ON".

Ignition	Crash zone sensor			Tunnel sensor	Safing sensor	Air bag signal
	Right	Center	Left			
ON	ON				ON	ON
ON		ON			ON	ON
ON			ON		ON	ON
ON				ON	ON	ON

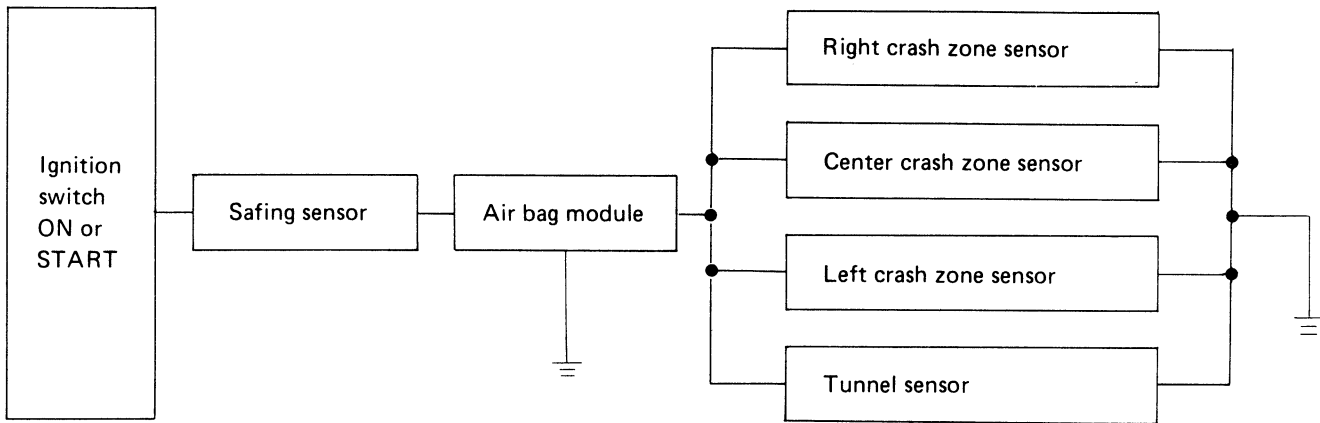


SBF215F

## Self-diagnosis

The control unit (diagnostic unit) diagnoses the SRS circuit. When the ignition key is in the "ON" or "START" position, the "AIR BAG" warning lamp will illuminate for about 7 seconds and then turn off. This means that the system is operational.

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)


## SRS Component Parts Location

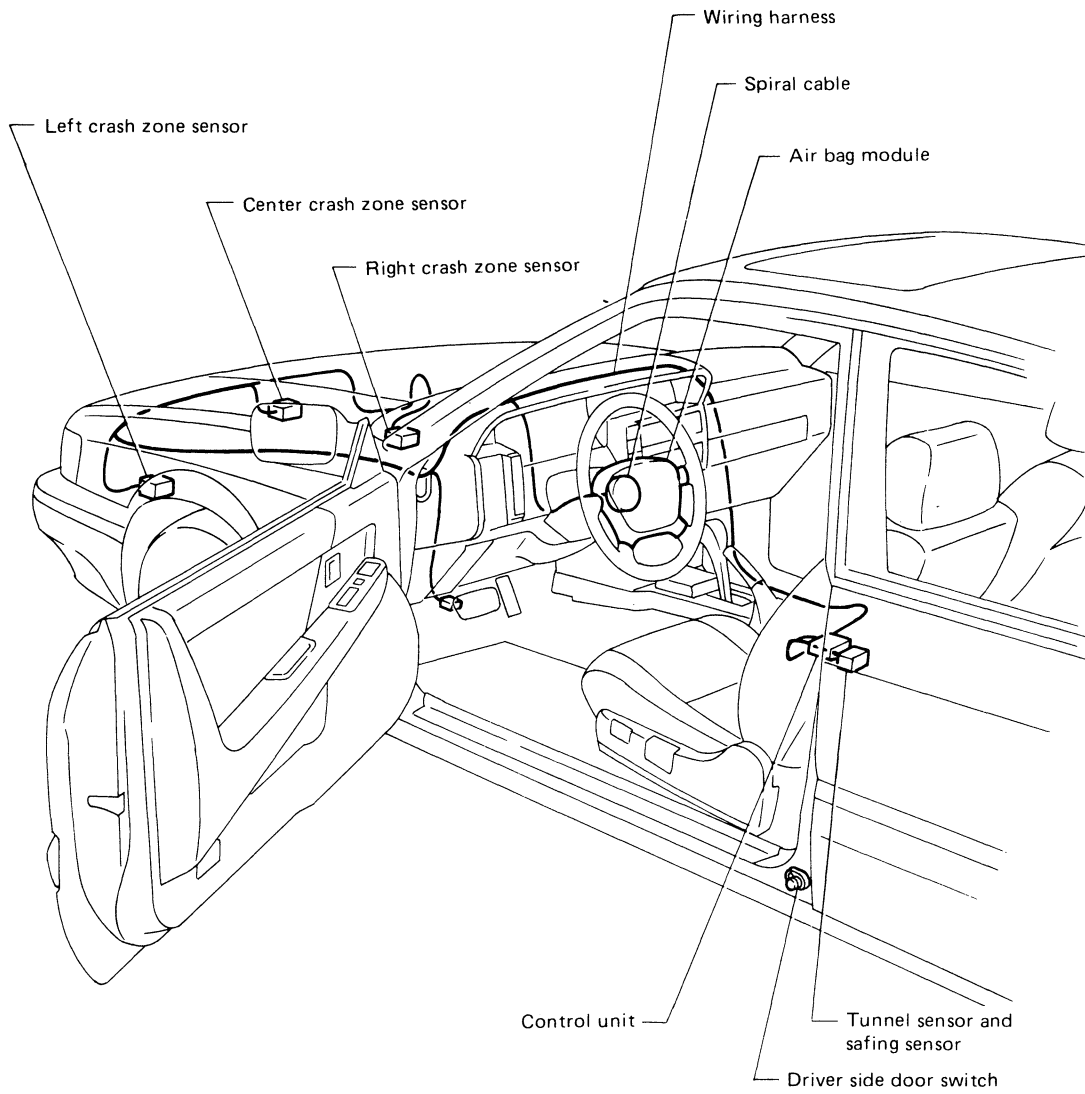

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## Caution Labels

The CAUTION LABELS are important when servicing air bags in the field. If they are dirty or damaged, replace them with new ones.

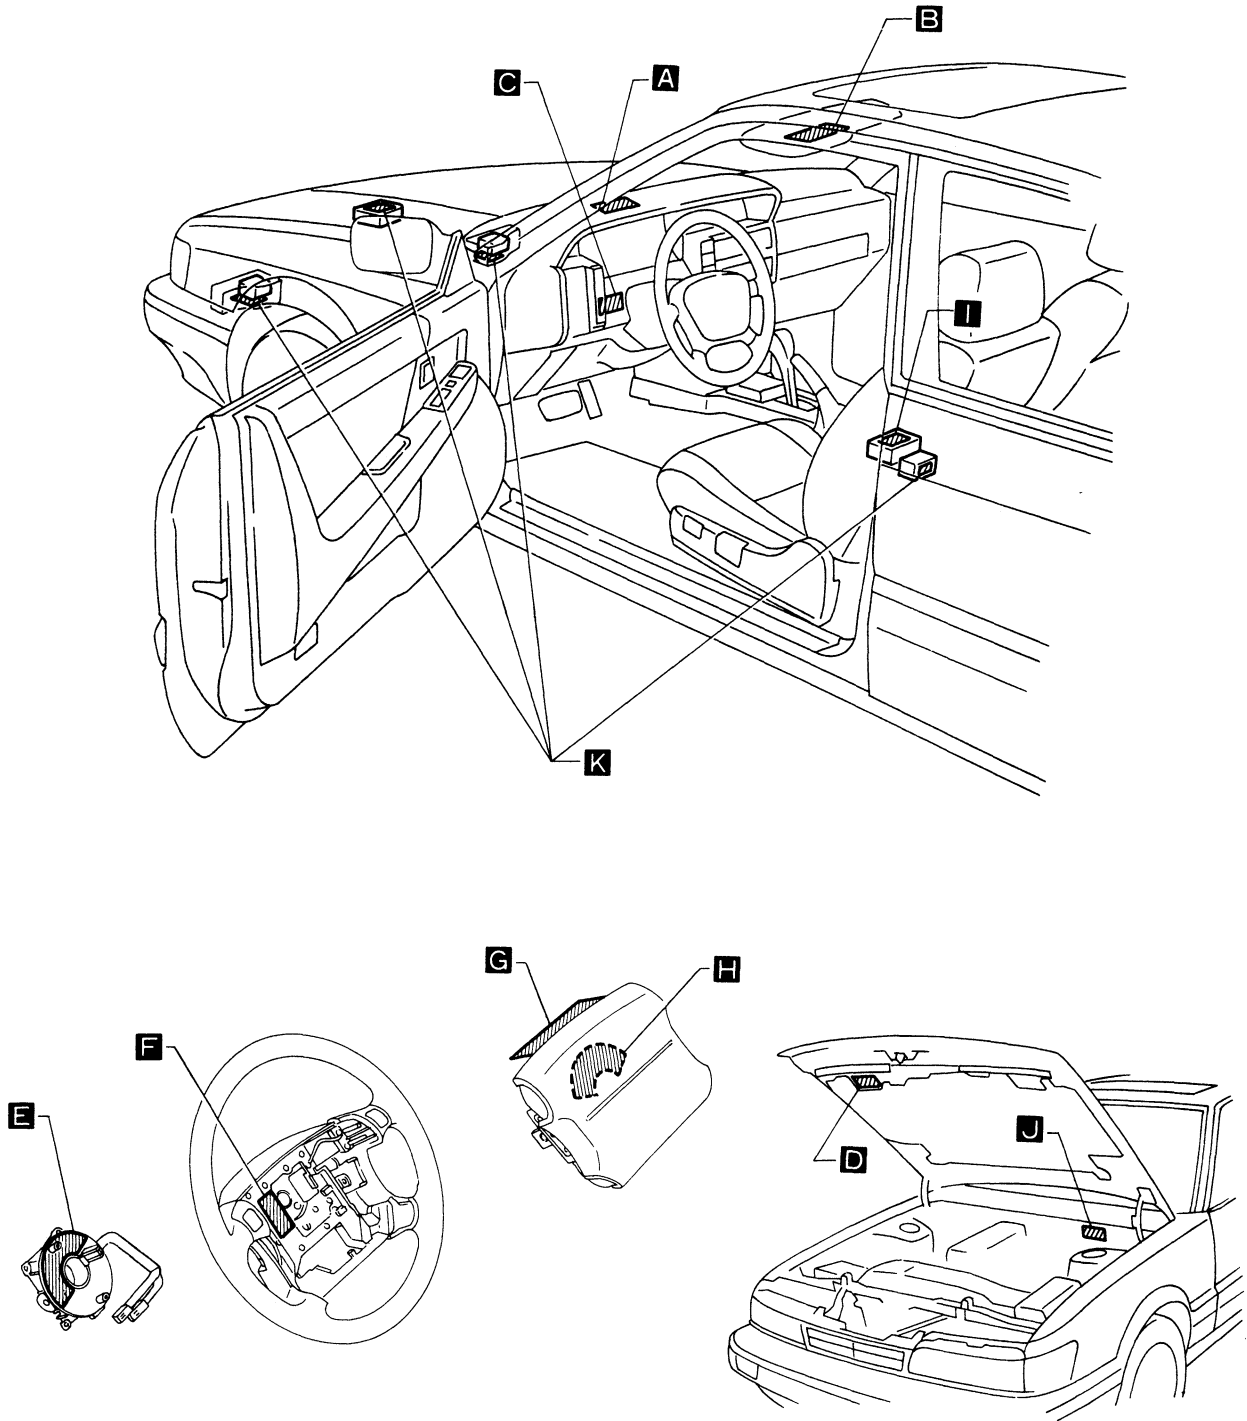

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## Caution Labels (Cont'd)

**A**

DRIVER-AIRBAG

**B**

INFORMATION

SRS AIRBAG

- THIS CAR IS EQUIPPED WITH A DRIVER AIR BAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (S.R.S.) TO REDUCE INJURY TO THE DRIVER IN A FRONTAL COLLISION.
- THE SYSTEM IS DESIGNED TO SUPPLEMENT THE ACCIDENT PROTECTION PROVIDED BY THE DRIVER'S SEAT BELT. BUT IT IS NOT A SUBSTITUTE FOR THE BELT SYSTEM.
- ALWAYS WEAR YOUR SEAT BELT WHEN THE CAR IS IN USE.
- THE SYSTEM MUST BE INSPECTED 10 YEARS AFTER DATE OF MANUFACTURE, AS NOTED ON THE CERTIFICATION LABEL LOCATED ON THE LEFT FRONT DOOR.
- THE "AIRBAG" LAMP WILL LIGHT MOMENTARILY WHEN THE IGNITION KEY IS TURNED TO THE "ON" OR "START" POSITION. THIS MEANS THE SYSTEM IS OPERATIONAL.
- HOWEVER, IF ANY OF THE FOLLOWING CONDITIONS OCCUR, THE SYSTEM MUST BE SERVICED:
  1. THE "AIR BAG" LAMP DOES NOT GO ON AS DESCRIBED ABOVE.
  2. THE "AIRBAG" LAMP FLASHES INTERMITTENTLY OR REMAINS ON.
  3. ANY PORTION OF THE FRONT END OF THE CAR IS DAMAGED.
  4. THE AIR BAG HAS DEPLOYED.
- SEE YOUR OWNER'S MANUAL FOR DETAILS ABOUT THE FUNCTIONING, SERVICE, AND DISPOSAL PROCEDURES FOR THE SYSTEM.

**C**

NOTICE

SRS AIRBAG

- THIS CAR IS EQUIPPED WITH A DRIVER AIR BAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (S.R.S.)
- IT IS DESIGNED TO SUPPLEMENT THE SEAT BELT.
- ALWAYS WEAR YOUR SEAT BELT.

**D**

WARNING

SRS AIRBAG

- THIS CAR IS EQUIPPED WITH A DRIVER AIR BAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (S.R.S.)
- ALL S.R.S. ELECTRICAL WIRING AND CONNECTORS ARE COLORED YELLOW.
- DO NOT USE ELECTRICAL TEST EQUIPMENT ON THESE CIRCUITS.
- TAMPERING WITH OR DISCONNECTING THE S.R.S. WIRING AND CONNECTORS COULD RESULT IN ACCIDENTAL DEPLOYMENT OF THE AIR BAG OR MAKE THE SYSTEM INOPERATIVE, WHICH MAY RESULT IN SERIOUS INJURY.

**E**

CAUTION

SRS AIRBAG

- BEFORE ASSEMBLY;
  - LINE UP THE FRONT WHEELS STRAIGHT AHEAD.
  - ALIGN THE ARROW WITH THE YELLOW MARK ON THE SIDE GEAR.
  - READ SERVICE MANUAL.
- NO SERVICEABLE PARTS INSIDE.
- DO NOT DISASSEMBLE OR TAMPER.

**F**

WARNING

SRS AIRBAG

- BEFORE MOUNTING STEERING WHEEL;
- MAKE SURE THAT THE FRONT WHEELS ARE IN STRAIGHT-AHEAD POSITION.
  - ALIGN THE ARROW WITH THE YELLOW MARK ON THE SIDE GEAR. (SPIRAL CABLE)
  - READ SERVICE MANUAL.

**G**

WARNING

SRS AIRBAG

- THIS AIRBAG MODULE CANNOT BE REPAIRED.
- USE DIAGNOSTIC INSTRUCTIONS TO DETERMINE IF THE UNIT IS OPERATIONAL.
- IF NOT OPERATIONAL, REPLACE AND DISPOSE OF THE ENTIRE UNIT AS DIRECTED IN THE INSTRUCTIONS.
- UNDER NO CIRCUMSTANCES SHOULD A DIAGNOSIS BE PERFORMED USING ELECTRICALLY POWERED TEST EQUIPMENT OR PROBING DEVICES.
- TAMPERING OR MISHANDLING CAN RESULT IN PERSONAL INJURY.
- STORE THE REMOVED AIRBAG MODULE WITH THE PAD SURFACE UP
- FOR SPECIAL HANDLING OR STORAGE REFER TO SERVICE MANUAL.

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## Caution Labels (Cont'd)

**H**

### DANGER POISON

- KEEP OUT OF THE REACH OF CHILDREN.
- CONTAINS SODIUM AZIDE AND POTASSIUM NITRATE.
- CONTENTS ARE POISONOUS AND EXTREMELY FLAMMABLE.
- CONTACT WITH ACID, WATER OR HEAVY METALS MAY PRODUCE HARMFUL AND IRRITATING GASES OR EXPLOSIVE COMPOUNDS.
- DO NOT DISMANTLE, INCINERATE, OR BRING INTO CONTACT WITH ELECTRICITY OR STORE AT TEMPERATURES EXCEEDING 200°F.
- FIRST AID: IF CONTENTS ARE SWALLOWED, INDUCE VOMITING;
  - FOR EYE CONTACT, FLUSH EYES WITH WATER FOR 15 MINUTES
  - IF GASES FROM ACID OR WATER CONTACT ARE INHALED, SEEK FRESH AIR
  - IN EVERY CASE, GET PROMPT MEDICAL ATTENTION
- FOR ADDITIONAL INFORMATION, SEE MATERIAL SAFETY DATA SHEET (MSDS) FOR THIS PRODUCT.

**I**

### CAUTION SRS AIRBAG

- NO SERVICEABLE PARTS INSIDE.
- DO NOT DISASSEMBLE OR TAMPER.
- DO NOT DROP; KEEP DRY.
- WHILE REMOVED, STORE IN A CLEAN AND DRY AREA.

**J**

### CAUTION SRS AIRBAG

- TO AVOID DAMAGING THE S.R.S. SPIRAL CABLE, WHICH COULD MAKE THE SYSTEM INOPERATIVE, REMOVE THE STEERING WHEEL BEFORE REMOVING THE STEERING LOWER JOINT.

**K**

### WARNING

### SRS AIRBAG


- DO NOT DISASSEMBLE OR TAMPER.
- DISMANTLING AND INSTALLATION SHOULD ONLY BE PERFORMED BY TRAINED PERSONNEL.

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)



## Maintenance Items

1. Check "AIR BAG" warning lamp  
When the ignition key is in the "ON" or "START" position, the "AIR BAG" warning lamp will illuminate for about 7 seconds and then turn off. This means that the system is operational.

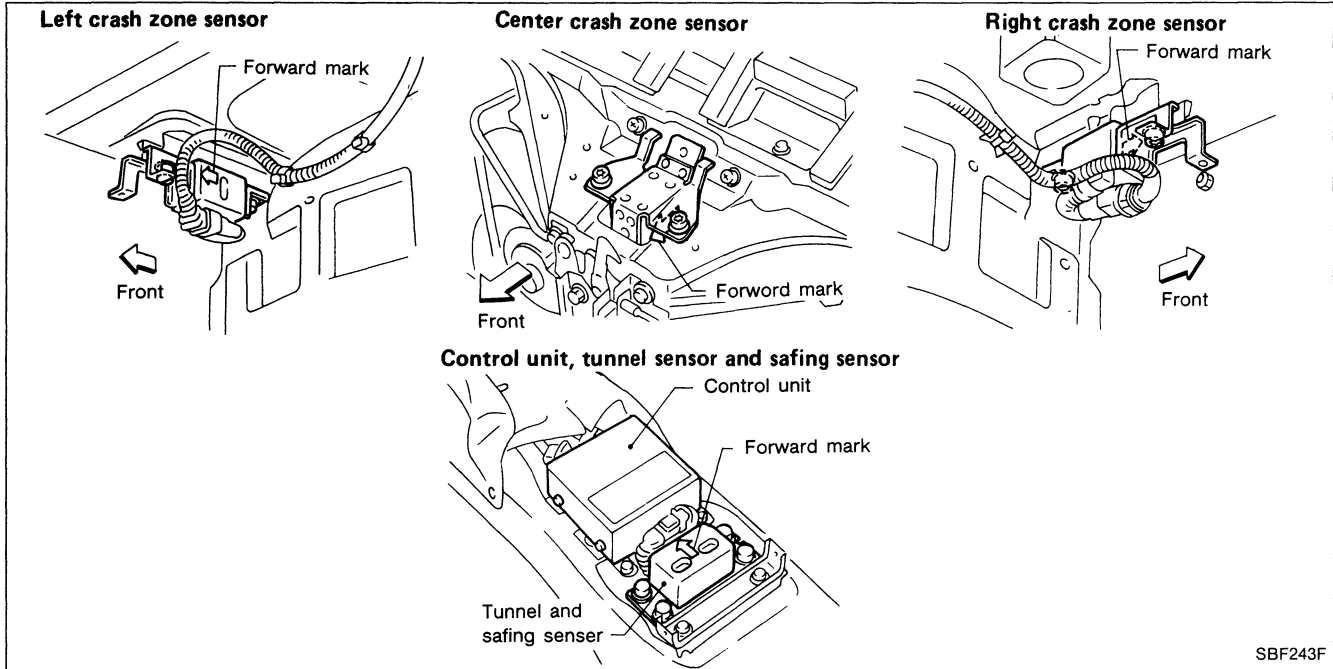

2. Visually check SRS components
  - (1) Sensors
    - Check sensors to ensure the arrow marks face the front of the vehicle.
    - Check body and sensor brackets for deformities or rust.
    - Check sensor case for dents, cracks, deformities or rust.
    - Check sensor harness for binds, connector for damage, and terminals for deformities.
  - (2) Control unit — Airbag
    - Check case and bracket for dents, cracks or deformities.
    - Check connectors for damage, and terminals for deformities.
  - (3) Main harness and instrument harness
    - Check connectors for poor connections.
    - Check harnesses for binds, connectors for damage, and terminals deformities.
  - (4) Spiral cable
    - Visually check lock (engagement) pins and combination switch for damage.
    - Check connectors, flat cable and protective tape for damage.
    - Check steering wheel for noise, binds or difficult operation.

## SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

---

### Maintenance Items (Cont'd)

(5) Steering wheel

- Check harness (built into steering wheel) and connectors for damage, and terminals for deformities.
- Install air bag module to check fit or alignment with steering wheel.
- Check steering wheel for excessive free play.

(6) Air bag module

- Remove air bag module from steering wheel. Check harness cover and connectors for damage, terminals for deformities, and harness for binds.
- Install air bag module to steering wheel to check fit or alignment with the wheel.

**CAUTION:**

**Replace previously used screws with new ones.**

### Removal and Installation — Control Unit and Sensors

**CAUTION:**


- **Before servicing SRS, turn the ignition switch off, disconnect battery ground cable and wait for at least 10 minutes.**
- **The special bolts are coated with bonding agent. Discard old ones after removal; replace with new ones.**
- Check all sensors for proper installation.
- Check all sensors to ensure they are free of deformities, dents, cracks or rust. If they show any visible signs of damage, replace them with new ones.
- Check sensor brackets to ensure they are free of deformities or rust.




# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

## Removal and Installation — Control Unit and Sensors (Cont'd)


Center crash zone sensor

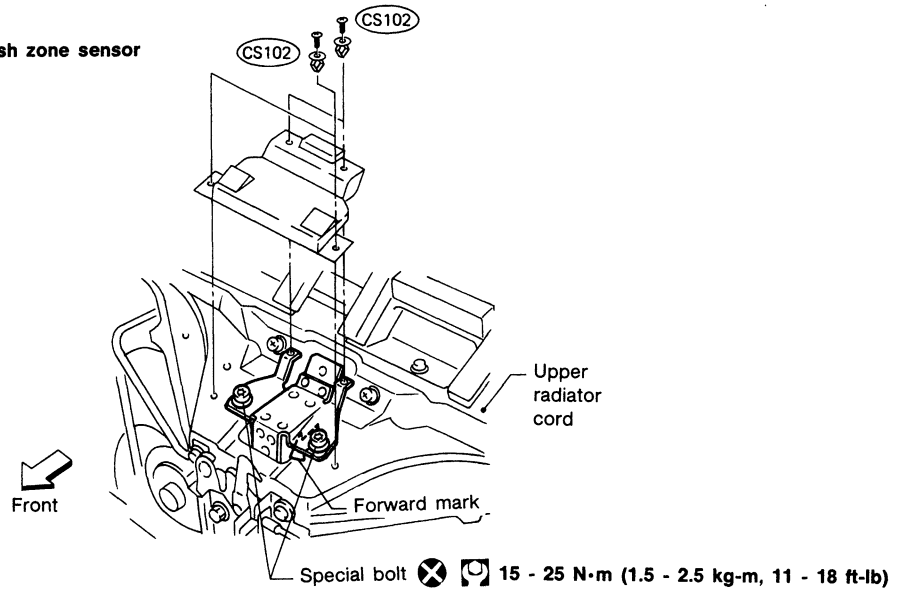


Left crash zone sensor

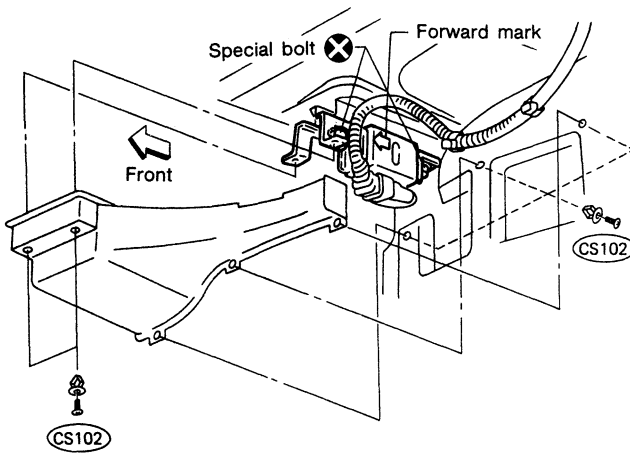

Right crash zone sensor


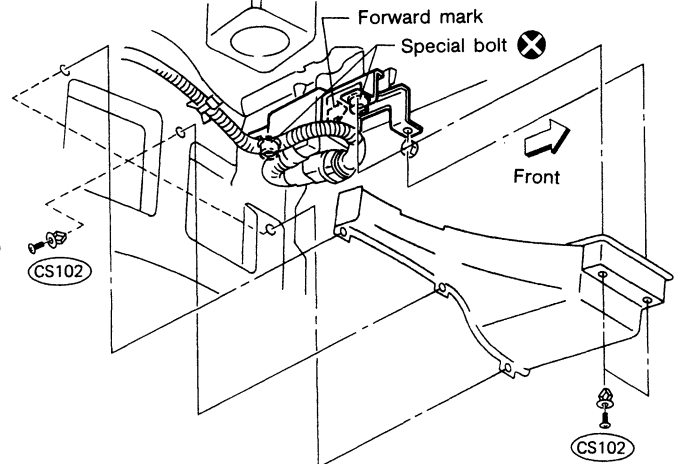


Control unit, tunnel sensor and safing sensor

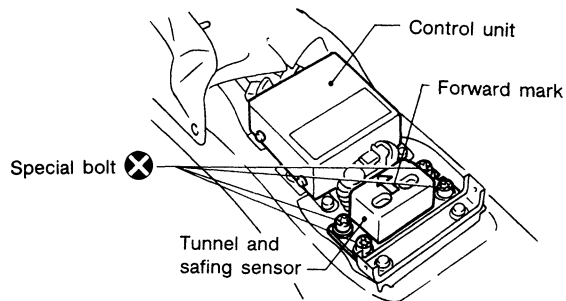

# SUPPLEMENTAL RESTRAINT SYSTEM (SRS)


## Removal — Air Bag Module and Spiral Cable

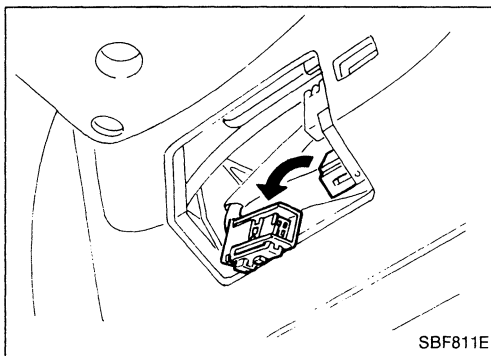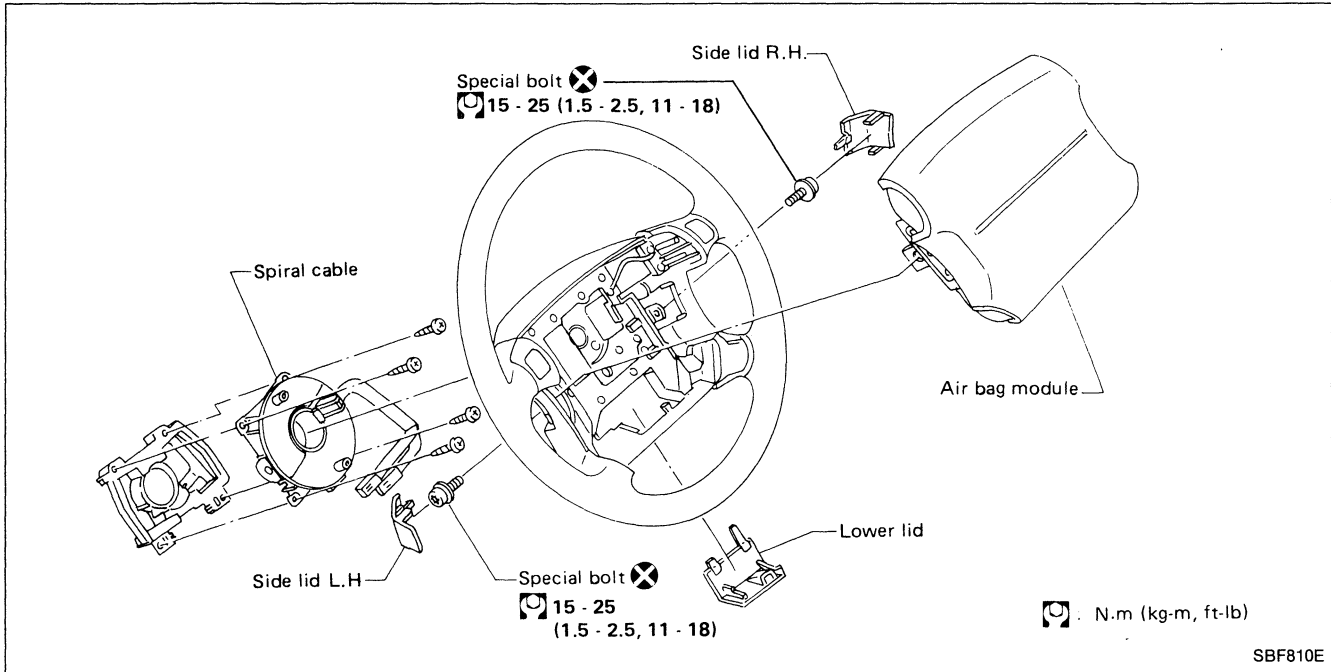


### CAUTION:

**Before servicing SRS, turn the ignition switch off, disconnect battery ground cable and wait for at least 10 minutes.**

1. Remove lower lid from steering wheel, and disconnect air bag module connector.

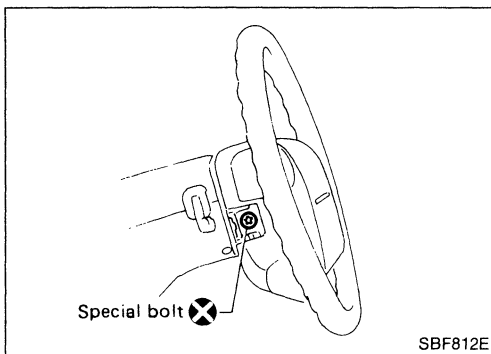

2. Remove side lid. Using T50H torx bit, remove left and right special bolts. Air bag module can then be removed.

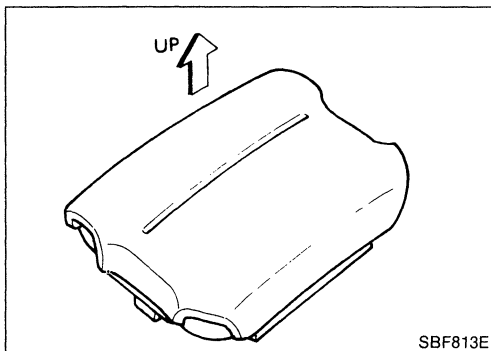


### CAUTION:


- Always place air bag module with pad side facing upward.
- Do not attempt to disassemble air bag module.
- The special bolts are coated with bonding agent. Discard old ones after removal; replace with new ones.

## SUPPLEMENTAL RESTRAINT SYSTEM (SRS)


### Removal — Air Bag Module and Spiral Cable (Cont'd)

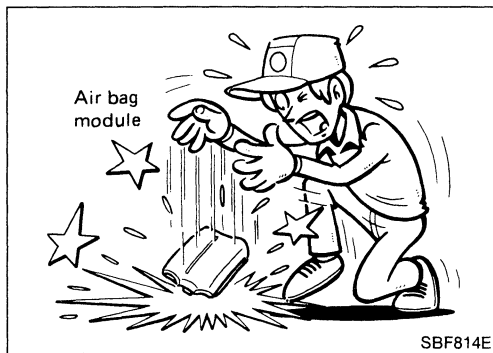

- Do not drop or impact air bag module. If any portion is deformed or cracked, replace the module.
- Do not expose the air bag module to temperatures exceeding 100°C (212°F).
- Do not allow oil, grease or water to come in contact with the air bag module.

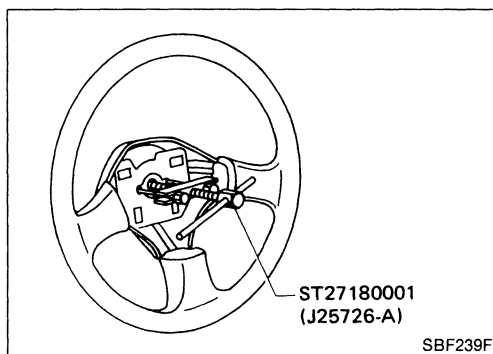


3. Set steering wheel in the neutral position.
4. Disconnect horn connector and remove nuts.
5. Using steering wheel puller, remove steering wheel. Be careful not to over-tighten puller bolt on steering wheel.

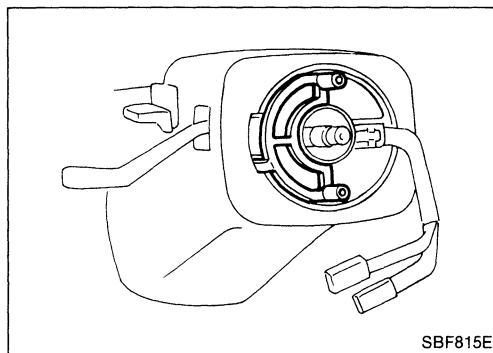

6. Attach spiral cable to stopper.
7. Remove steering column cover.
8. Disconnect connector and remove the four screws. The spiral cable can then be removed.

### Installation — Air Bag Module and Spiral Cable


1. Connect spiral cable connector and tighten with screws. Install steering column cover.

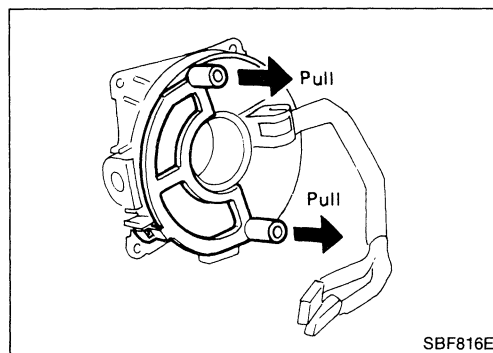


2. Remove stopper by pulling two pin guides.

## SUPPLEMENTAL RESTRAINT SYSTEM (SRS)


### Installation — Air Bag Module and Spiral Cable (Cont'd)

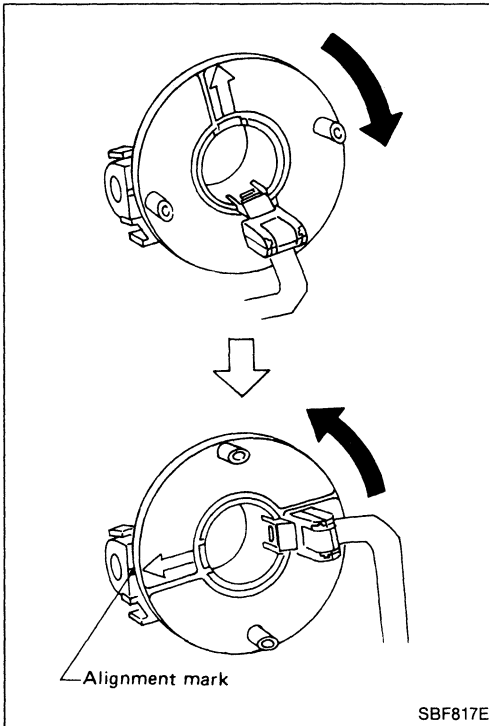

- Alignment of spiral cable with neutral position  
If stopper is not used, align spiral cable with neutral position as follows:  
Turn spiral cable clockwise until it catches stopper. Then, back spiral cable off approximately two turns until yellow alignment mark appears on left gear. Align arrow mark "←" of spiral cable with this yellow mark.

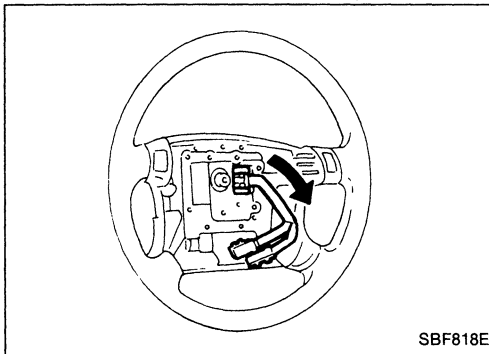

3. Install steering wheel setting spiral cable pin guides, and pull spiral cable through.
4. Connect horn connector and engage spiral cable with pawls in steering wheel.
5. Tighten nuts.

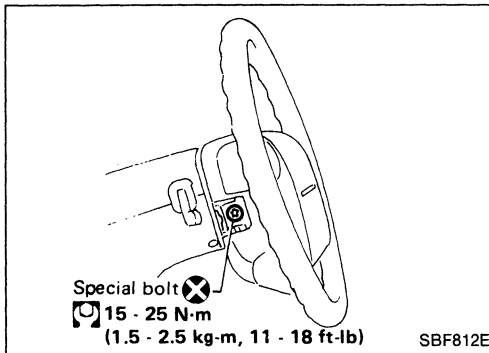


6. Position air bag module and tighten with new special bolts.
7. Connect air bag module connector.
8. Install all lids.

9. Conduct self-diagnosis to ensure entire SRS operates properly. (Use CONSULT or warning lamp check.)

## SUPPLEMENTAL RESTRAINT SYSTEM (SRS)


### Scrapping the Air Bag

Before scrapping an air bag module or a vehicle equipped with an SRS air bag, be sure to deploy air bag.

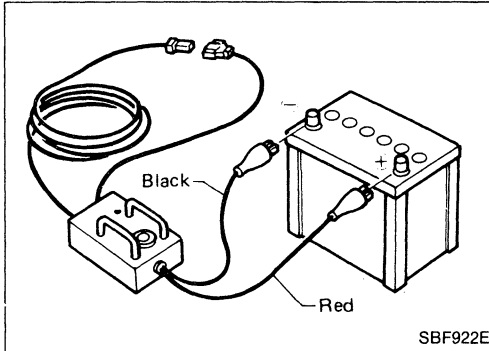


#### CONNECTING TO BATTERY

Prepare a 12-volt battery. Locate it approximately 5 m (16 ft) away from vehicle and connect deployment tool's battery cable. Ensure red light illuminates. If it does not, replace the battery with a new one.

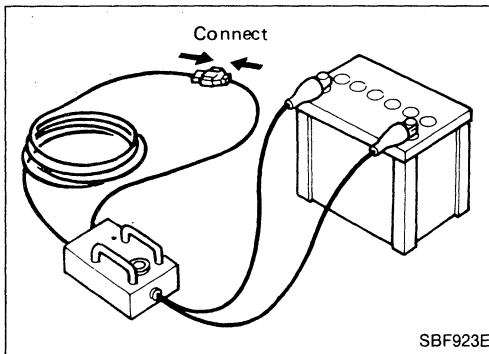


#### DEPLOYMENT TOOL CHECK

Connect check connector.

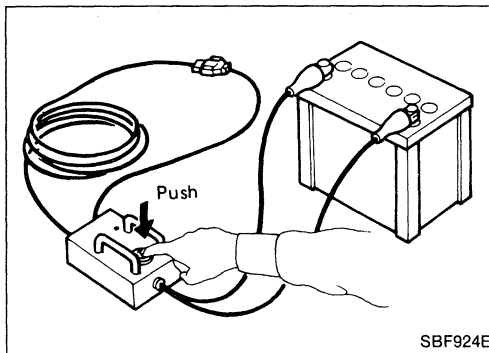

Push deployment tool switch to "ON" to ensure green light illuminates. If it does not, replace the deployment tool.

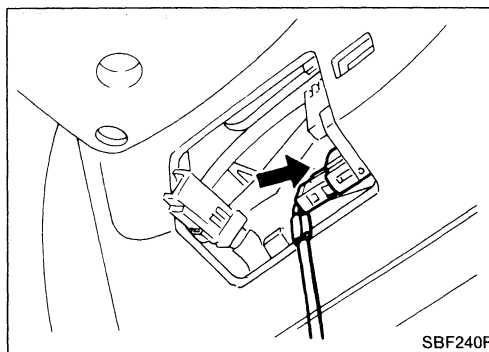

#### CONNECTING TO AIR BAG

1. Disconnect the prepared battery cable.
2. Also disconnect the vehicle battery ground cable and wait 10 minutes.
3. Remove lower lid from steering wheel and disconnect air bag module connector.
4. Connect deployment tool connector.
5. Reconnect the battery cable to the prepared battery. Ensure red light illuminates.

## SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

---


### Scrapping the Air Bag (Cont'd)

#### DEPLOYMENT


Press deployment tool switch. Green light will illuminate and air bag will deploy.

#### CAUTION:

- When deploying air bag, ensure vehicle is empty.
- No poisonous gas is produced upon air bag deployment. However, be careful not to inhale gas since it irritates throat and can cause choking.
- Due to heat, leave air bag module unattended for more than 30 minutes after air bag deployment.
- Do not attempt to disassemble air bag module.
- Air bag module can not be re-used.

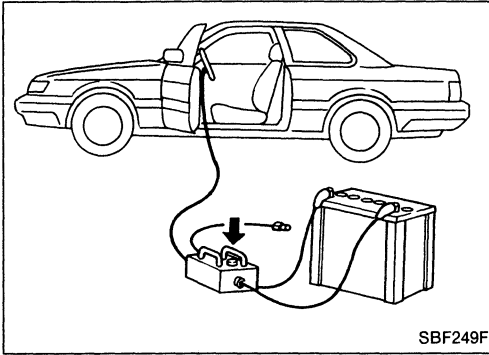


**Schematic**

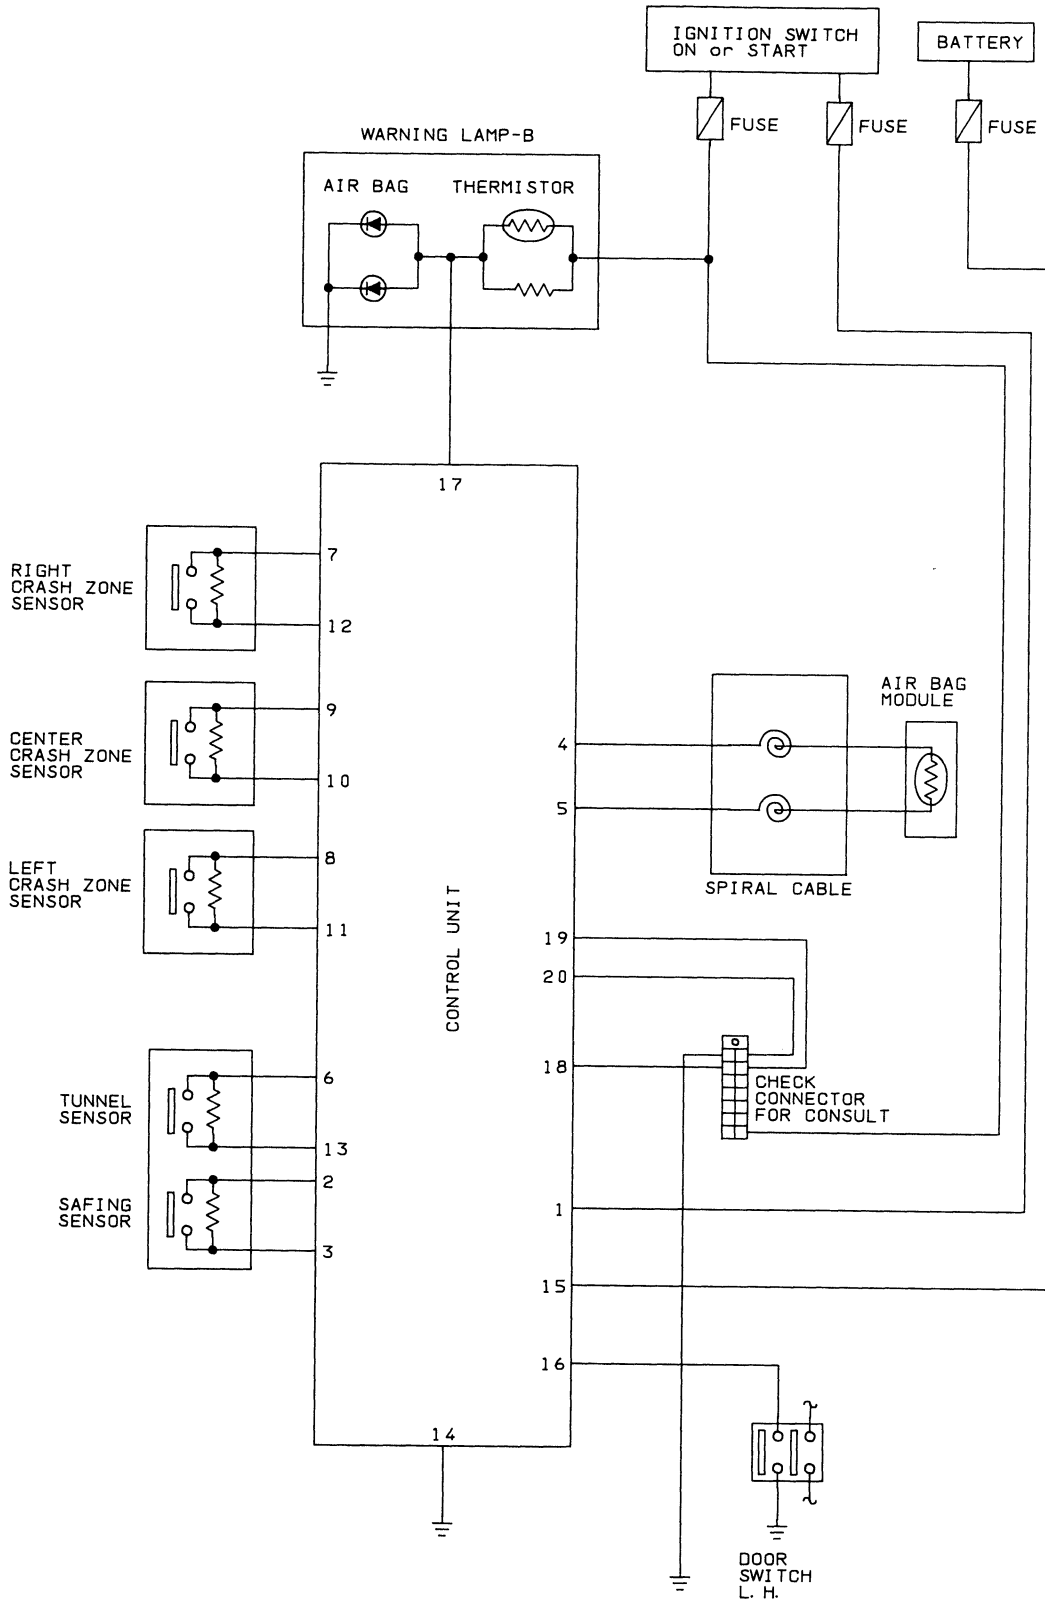


## Wiring Diagram

**CAUTION:**

- Do not use a circuit tester to check SRS "Air Bag" harness connectors. The wiring harness and connectors have yellow outer insulation for easy identification.
- Do not attempt to repair, splice or modify the SRS "Air Bag" wiring harness. If the harness is damaged, replace it with a new one.
- Keep ground portion clean.

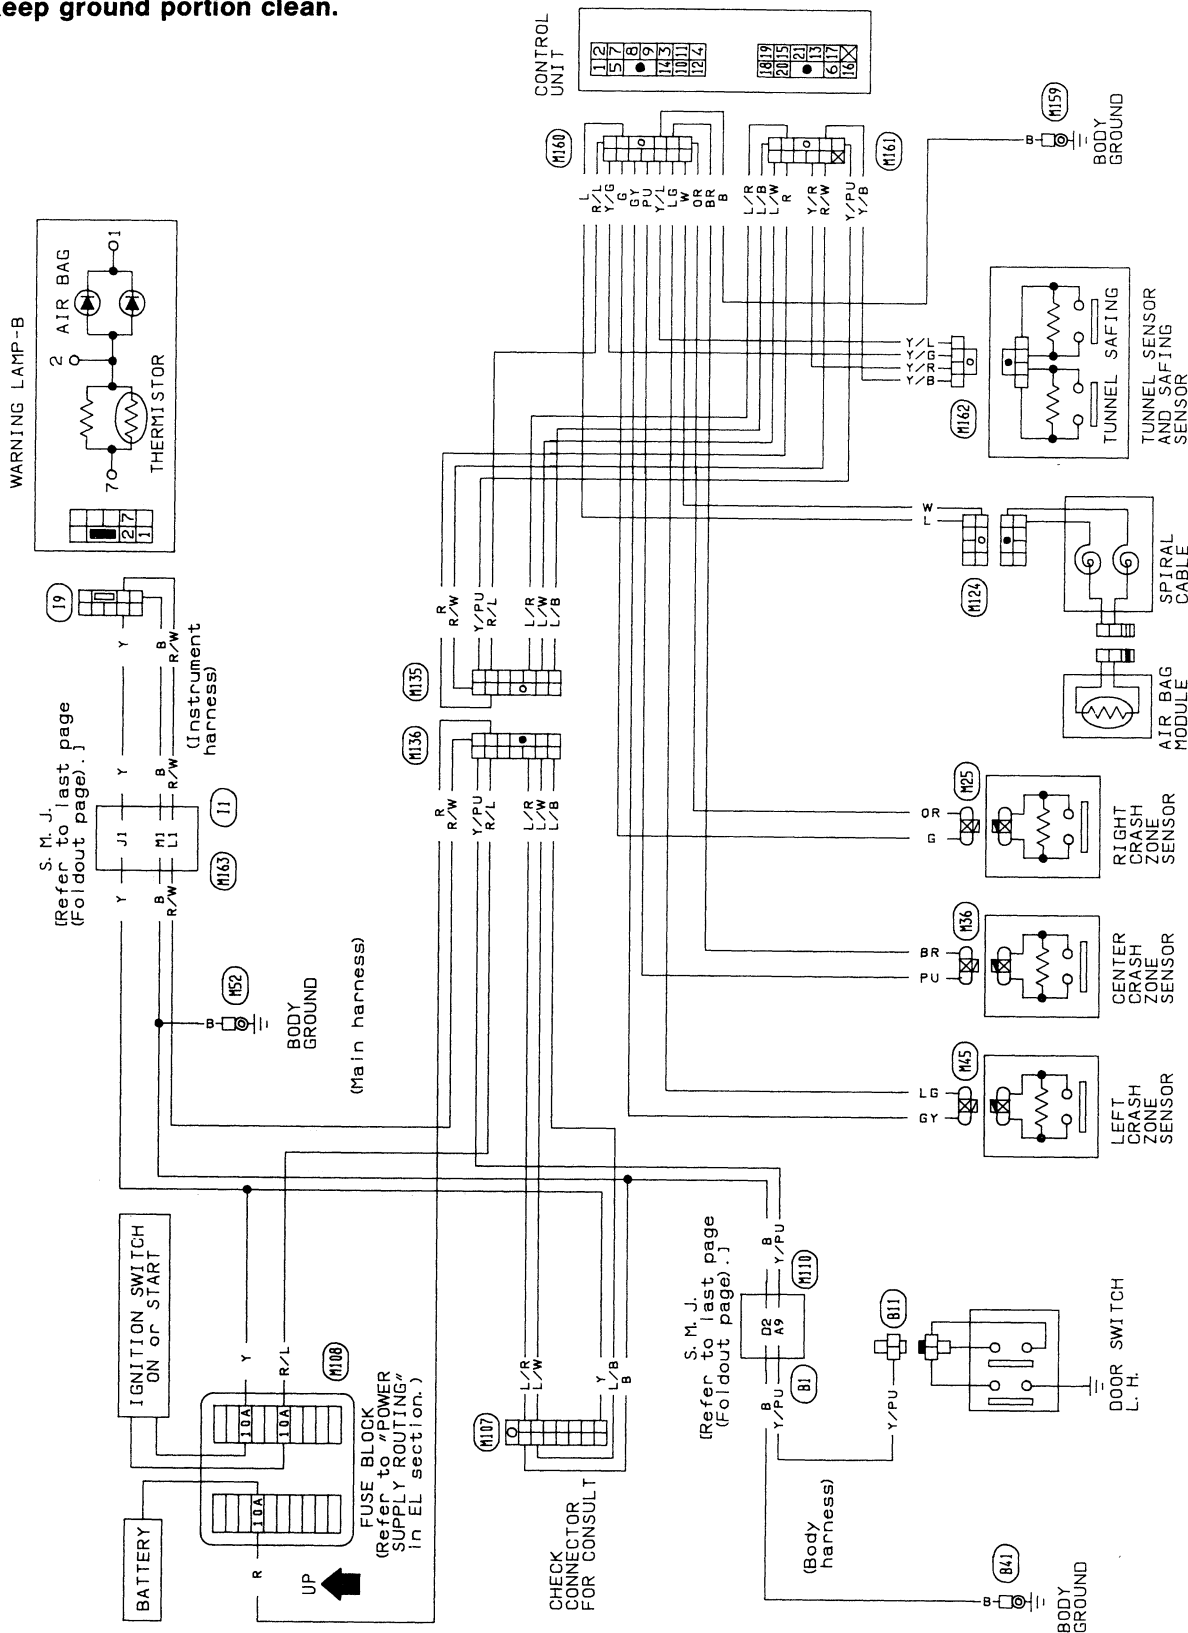



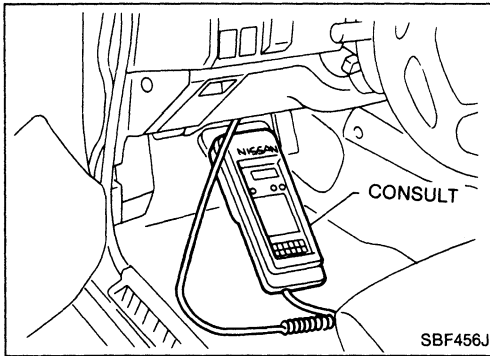

## Self-diagnosis

### USING CONSULT

The self-diagnosis results can be read by CONSULT, as follows:

1. Connect "CONSULT" to vehicle harness connector.



2. Turn ignition switch to "ON". (When CONSULT is connected, the "AIR BAG" warning lamp will be turned to present diagnosis mode.)



3. Touch "START" to operate "CONSULT".



4. Touch "AIR BAG" to choose air bag system.



5. Touch "SELF DIAG RESULTS" to read self-diagnosis results.



6. Problem codes are displayed on "SELF DIAG RESULT 1" (first page — present mode). The problem code last indicated is displayed on "SELF DIAG RESULT 2" (second page — initial mode).



7. When "PRINT" is pressed, information displayed on "SELF DIAG RESULTS 1 and 2" is printed out.



8. After repairing malfunctioning parts, press "ERASE" to clear self-diagnosis results.

- After repairing malfunctioning parts, attempt to clear self-diagnosis results from memory.
- If malfunctioning parts are not completely repaired, self-diagnosis results remain stored in memory.




9. Push "Back Key" of CONSULT until SELECT SYSTEM mode appears to make "SELF-DIAGNOSIS" user mode.



10. Push the power off switch.



11. Turn off ignition switch.

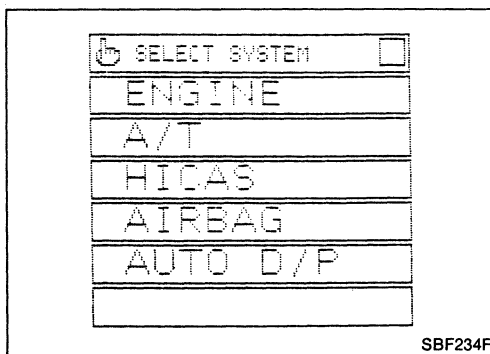

## TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

### Self-diagnosis (Cont'd)

#### Self-diagnosis results

Failure parts group [Present] and [Initial]	Explanation	Repair order * Recheck SRS at each replacement.
**** NO FAILURE ****	Normal. The SRS "Air Bag" is in good order.	—
SAFING SENSOR [OPEN/LWR-GND-SHORT]	The circuit for the safing sensor is open or the wire from the safing sensor to the control unit (terminal No. 3) is shorted.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the safing sensor. (safing sensor and tunnel sensor unit)</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
SAFING SENSOR [SHORT/LWR-VB-SHORT]	Both of the wires for the safing sensor are shorted or the wire from the safing sensor to the control unit (terminal No. 3) is shorted to some power supply circuit.	
AIRBAG MODULE [OPEN]	The circuit for the air bag module is open. (including the spiral cable)	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the spiral cable.</li> <li>3. Replace the air bag module. (Before disposing of it, it must be deployed.)</li> <li>4. Replace the control unit.</li> <li>5. Replace the main harness.</li> </ol>
AIRBAG MODULE [VB-SHORT]	The circuit for the air bag module is shorted to some power supply circuit. (including the spiral cable)	
AIRBAG MODULE [GND-SHORT]	The circuit for the air bag module is shorted. (including the spiral cable)	
TUNNEL SENSOR [OPEN/UPR-VB-SHORT]	The circuit for the tunnel sensor is open or the wire from the control unit (terminal No. 6) to the tunnel sensor is shorted to some power supply circuit.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the tunnel sensor. (safing sensor and tunnel sensor unit)</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
TUNNEL SENSOR [SHORT]	The circuits for the tunnel sensor are shorted to each other.	
CRASH ZONE SEN-RH [OPEN/UPR-VB-SHORT]	The circuit for the right crash zone sensor is open or the wire from the control unit (terminal No. 7) to the right crash zone sensor is shorted to some power supply circuit.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the right crash zone sensor.</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
CRASH ZONE SEN-RH [SHORT]	The circuits for the right crash zone sensor are shorted to each other.	
CRASH ZONE SEN-LH [OPEN/UPR-VB-SHORT]	The circuit for the left crash zone sensor is open or the wire from the control unit (terminal No. 8) to the left crash zone sensor is shorted to some power supply circuit.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the left crash zone sensor.</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
CRASH ZONE SEN-LH [SHORT]	The circuits for the left crash zone sensor are shorted to each other.	
CRASH ZONE SEN-CTR [OPEN/UPR-VB-SHORT]	The circuit for the center crash zone sensor is open or the wire from the control unit (terminal No. 9) to the center crash zone sensor is shorted to some power supply circuit.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the center crash zone sensor.</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
CRASH ZONE SEN-CTR [SHORT]	The circuits for the center crash zone sensor are shorted to each other.	
CONTROL UNIT	The control unit (diagnostic unit) is out of order.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the control unit.</li> <li>3. Replace the main harness.</li> </ol>

## TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

### Self-diagnosis (Cont'd)


Failure parts group [Present] and [Initial]	Explanation	Repair order * Recheck SRS at each replacement.
INDEFINITE FAILURES	A problem which cannot be specified occurs because more than two parts are out of order.	<ol style="list-style-type: none"><li>1. See the SELF-DIAGNOSIS RESULT 2 failure parts group [initial], then repair as necessary.</li><li>2. Visually check the wiring harness connections.</li><li>3. Replace the control unit.</li><li>4. Replace all sensors, the spiral cable and air bag module.</li><li>5. Replace the main harness.</li></ol>

**Self-diagnosis (Cont'd)**


**USING THE WARNING LAMP**

Self-diagnosis results can be also read by using the "AIR BAG" warning lamp.

The "Air bag" warning lamp operates as shown below:

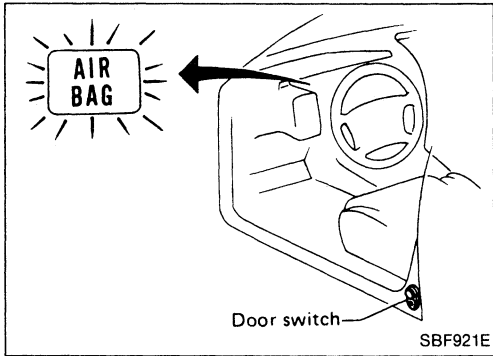


**How to alternate self-diagnoses**

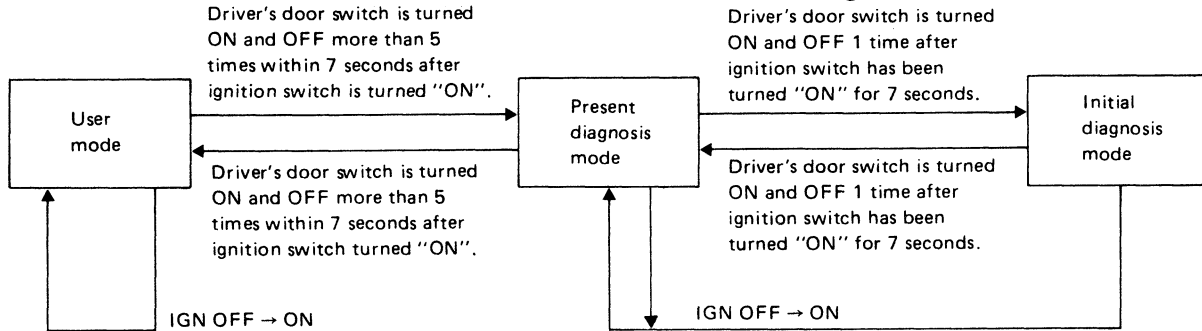

Problem codes are displayed in present diagnosis mode (self-diagnosis result 1). The problem code last indicated is displayed in initial diagnosis mode (self-diagnosis result 2).

After the malfunctioning parts have been repaired and the system is returned to the user mode, the present diagnosis mode information, displayed as self-diagnosis results, is automatically cleared from memory.

- After repairing malfunctioning part, attempt to clear self-diagnosis results from memory.
- If a malfunctioning part is not completely repaired, information stored in memory will not be cleared.

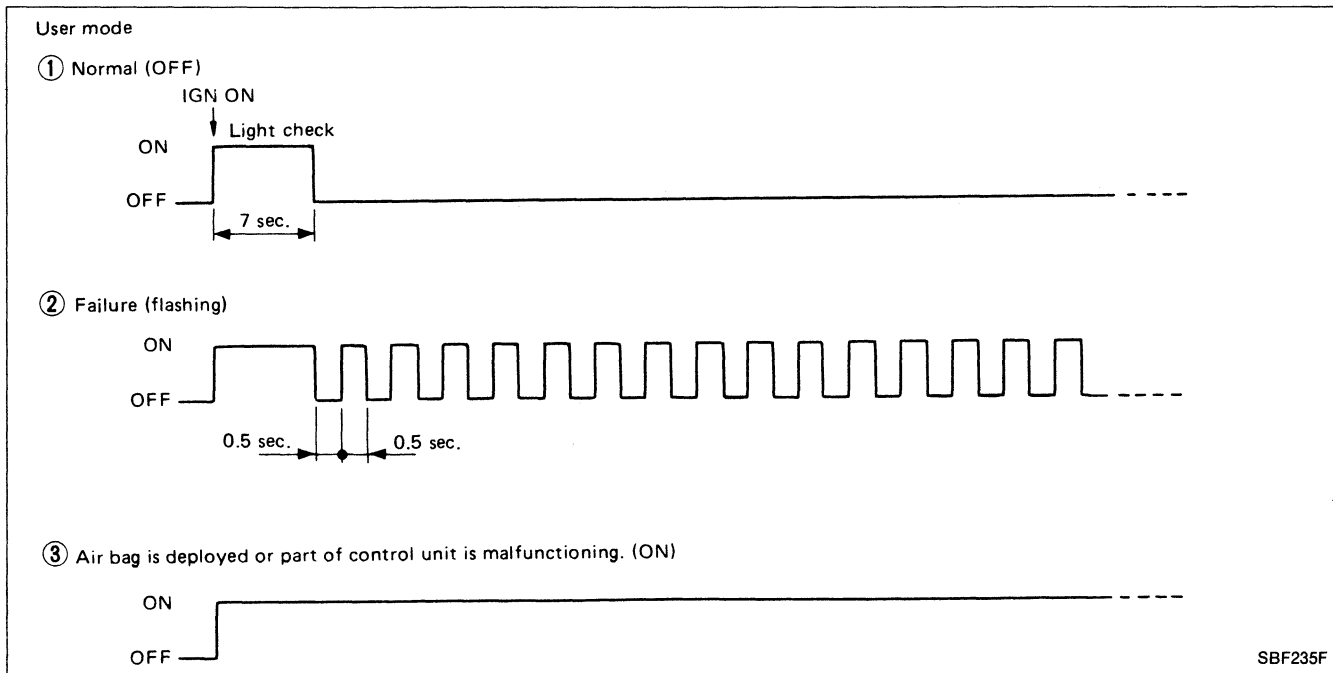


# TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)


## Self-diagnosis (Cont'd)

Present diagnosis mode (self-diagnosis result 1)

(b) Start signal; Start signal identifies display modes.

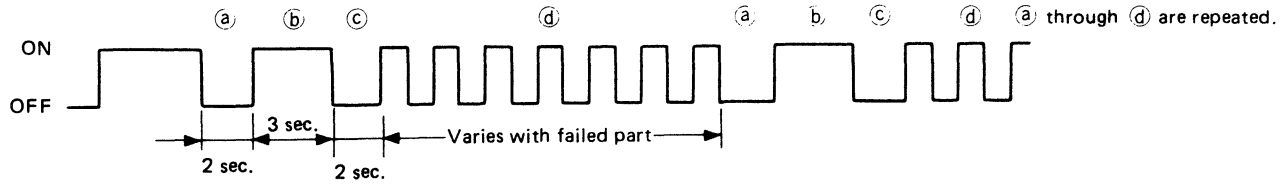


- No failure (or intermittent failure/repair completion)

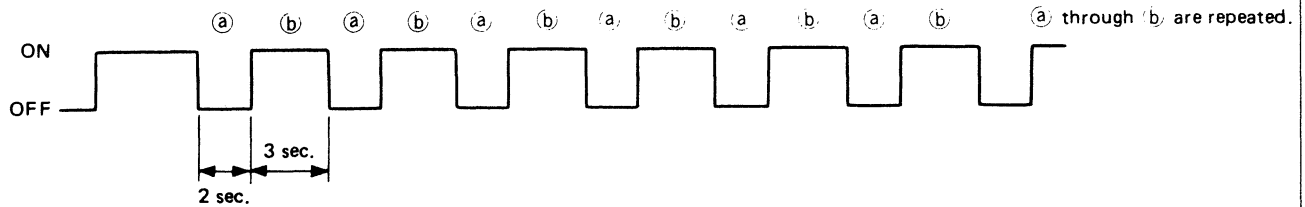

SBF236F


Initial diagnosis mode (self-diagnosis result 2)

b Start signal; Start signal identifies display modes.

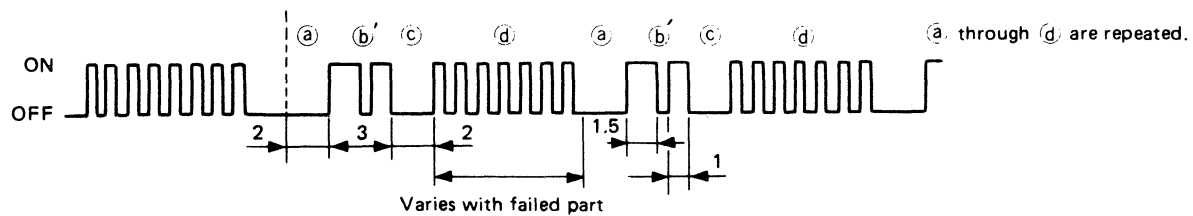

Unit: sec.

- No failure

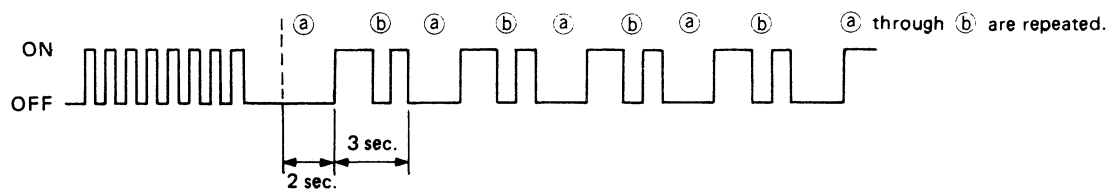

SBF237F



Self-diagnosis results in present- and initial-diagnosis modes can be identified by number of flashes (d). Refer to Table on next page for failed parts.

# TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

## Self-diagnosis (Cont'd)




### Warning lamp flashing times and repair

Flash code (d) (# of flashes)	Explanation	Repair order * Recheck SRS at each replacement.
0	Normal. The SRS "Air Bag" is in good order.	—
1	The circuit for the safing sensor is out of order.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the safing sensor. (safing sensor and tunnel sensor unit)</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
2	The circuit for the air bag module is out of order.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the spiral cable.</li> <li>3. Replace the air bag module. (Before disposing of it, it must be deployed.)</li> <li>4. Replace the control unit.</li> <li>5. Replace the main harness.</li> </ol>
3	The circuit for the tunnel sensor is out of order.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the tunnel sensor. (safing sensor and tunnel sensor unit)</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
4	The circuit for the right crash zone sensor is out of order.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the right crash sensor.</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
5	The circuit for the left crash zone sensor is out of order.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the left crash zone sensor.</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
6	The circuit for the center crash zone sensor is out of order.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the center crash zone sensor.</li> <li>3. Replace the control unit.</li> <li>4. Replace the main harness.</li> </ol>
7	The control unit (diagnostic unit) is out of order.	<ol style="list-style-type: none"> <li>1. Visually check the wiring harness connections.</li> <li>2. Replace the control unit.</li> <li>3. Replace the main harness.</li> </ol>
8	More than two parts groups are out of order.	<ol style="list-style-type: none"> <li>1. See the SELF-DIAGNOSIS RESULT 2 failure parts group [Initial], then repair it.</li> <li>2. Visually check the wiring harness connections.</li> <li>3. Replace the control unit.</li> <li>4. Replace all sensors, spiral cable and air bag module.</li> <li>5. Replace the main harness.</li> </ol>

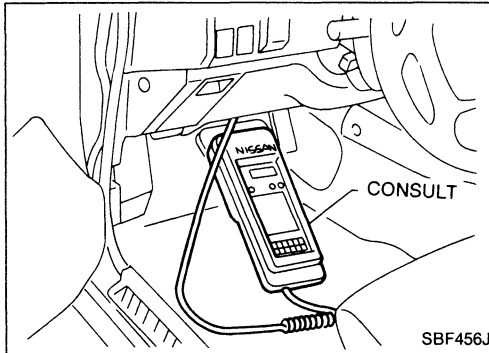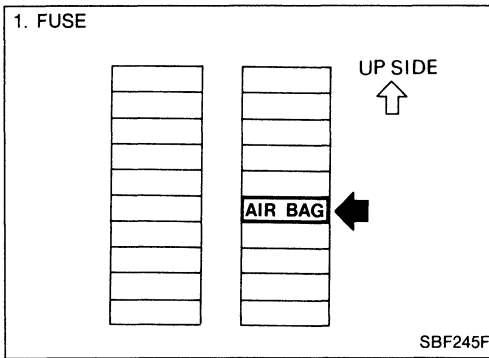


## Diagnostic Procedure 1

**SYMPTOM: Warning lamp flashes.**

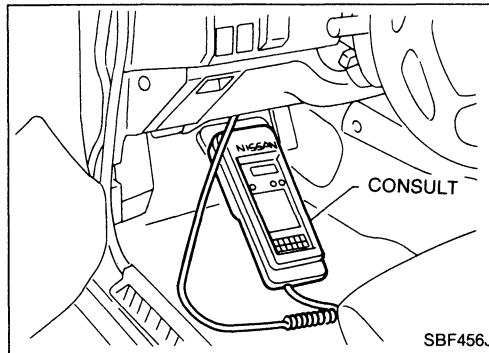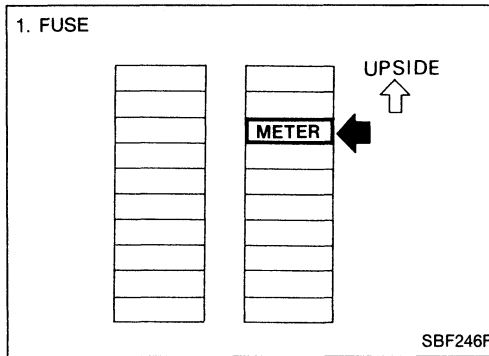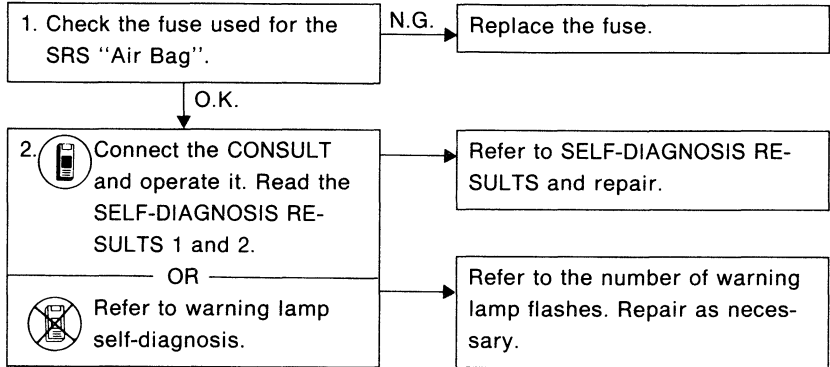

## Diagnostic Procedure 2




**SYMPTOM: Warning lamp does not come on.**

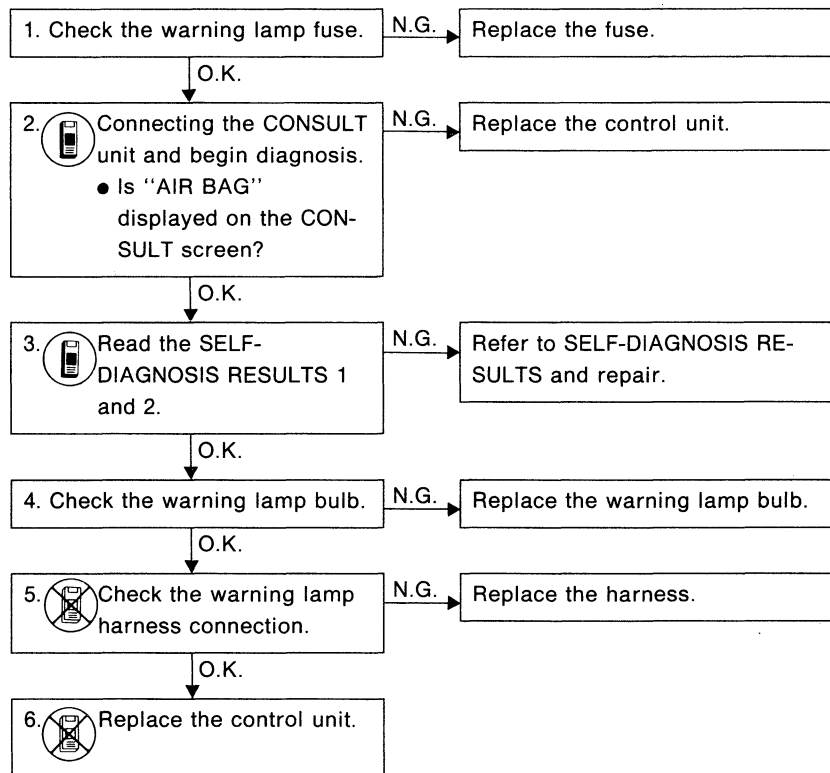

# TROUBLE DIAGNOSES — Supplemental Restraint System (SRS)

## Diagnostic Procedure 3

**SYMPTOM: Warning lamp does not go off.**

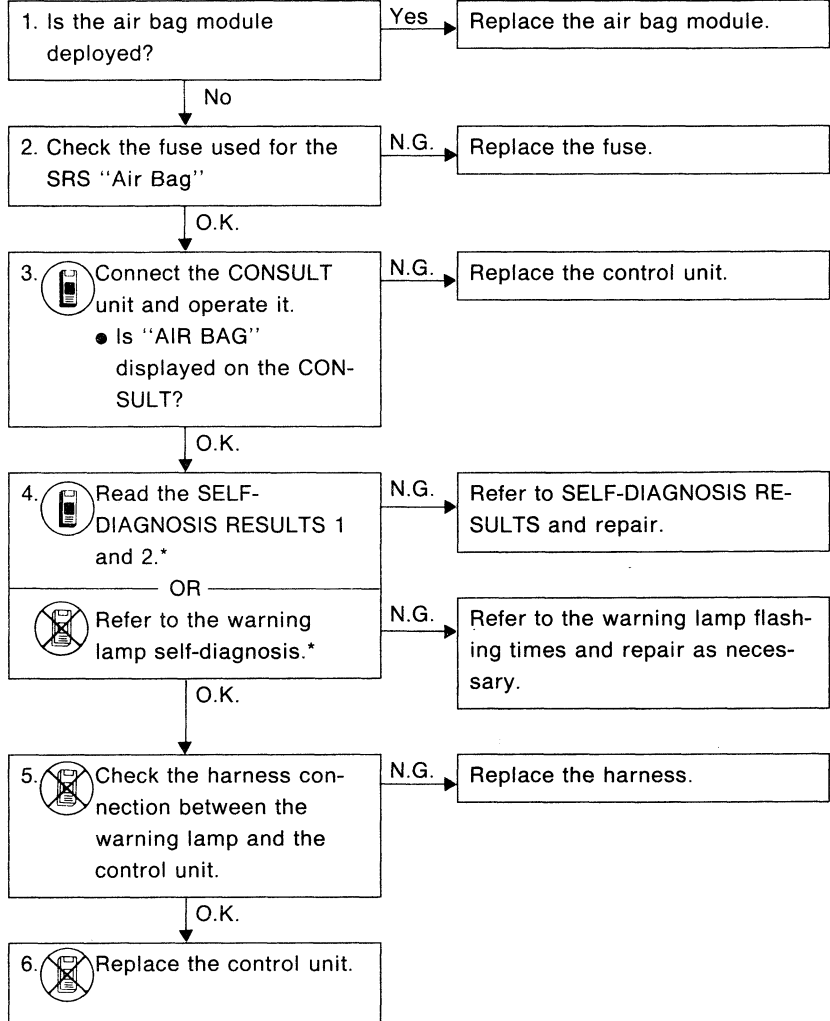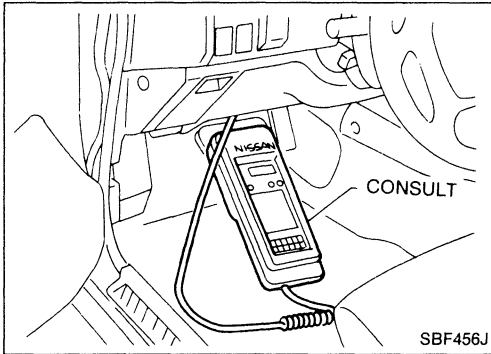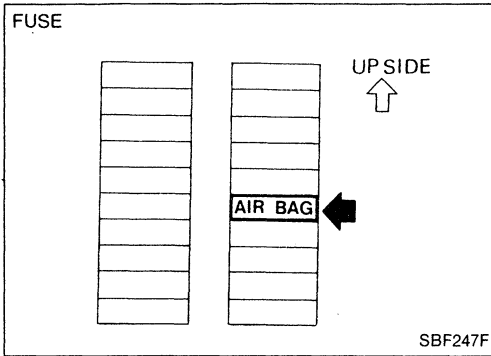

\*: Recheck SRS after each replacement.



## Collision Diagnosis

To repair the SRS "AIR BAG", perform the following steps.

- ① Check the control unit (diagnostic unit).
  - Connect CONSULT and then erase the memory. (However, the memory may not clear.)

OR

- Check "AIR BAG" warning lamp and perform the following twice: turn driver's door switch ON and OFF 5 times within 7 seconds after ignition switch turned "ON".

↓  
If "AIR BAG" warning lamp comes on continuously.

Replace the control unit.

- ② Remove the deployed air bag module.
- ③ Check the SRS components using the table shown below:
  - If the SRS components are showing any visible damage such as dents, cracks, or deformation, replace them with new ones.
- ④ Conduct self-diagnosis using CONSULT or "AIR BAG" warning lamp to ensure entire SRS operates properly except open circuit of air bag module.
- ⑤ Install new air bag module.

	Inspection (when air bag deploys in collision)	Inspection (when air bag does not deploy in low-speed collision)
Steering wheel	(1) Check harness (built into steering wheel) and connectors for damage, and terminals for deformities. (2) Install air bag module to check fit or alignment with steering wheel. (3) Check steering wheel for excessive free play.	
In-compartment sensor	(1) Check body and sensor brackets for deformities or rust. (2) Check sensor case for dents, cracks, deformities or rust. (3) Check sensor harness for binds, connector for damage, and terminals for deformities.	
All sensors (except those affected by collision)		
Air bag module	Replace air bag module.	(1) Remove air bag module from steering wheel. Check harness cover and connectors for damage, terminals for deformities, and harness for binds. (2) Install air bag module to steering wheel to check fit or alignment with the wheel. (3) Replace screws with new ones.
Harness connector (Main and Instrument harness)	(1) Check connectors for poor connections. (2) Check harness for binding, connectors for damage, and terminals for deformities.	
Spiral cable	(1) Visually check lock (engagement) pins and combination switch for damage. (2) Check connectors, flat cable and protective tape for damage. (3) Check steering wheel for noise, binds or heavy operation.	
Control unit	Replace control unit (diagnostic unit).	(1) Check case and bracket for dents, cracks or deformities. (2) Check connectors for damage, and terminals for deformities.



# HEATER & AIR CONDITIONER

## SECTION **HA**

### CONTENTS

PRECAUTIONS .....	HA- 2
DESCRIPTION — Overall System .....	HA- 3
OPERATIONAL CHECK .....	HA- 10
DESCRIPTION — Refrigeration System .....	HA- 14
DIAGNOSES — Overall System .....	HA- 16
LEAK CHECKING .....	HA- 26
PRECAUTIONS FOR REFRIGERANT CONNECTIONS .....	HA- 27
DISCHARGING, EVACUATING, CHARGING AND CHECKING .....	HA- 28
COMPRESSOR OIL — For DKS-16H (DIESEL-KIKI make) .....	HA- 33
SERVICE PROCEDURES .....	HA- 35
COMPRESSOR — Model DKS-16H (DIESEL-KIKI make) .....	HA- 38
TROUBLE DIAGNOSES — Manual Air Conditioner .....	HA- 41
TROUBLE DIAGNOSES — Auto Air Conditioner .....	HA- 76
DOOR CONTROL — Manual Air Conditioner .....	HA-128
DOOR CONTROL — Auto Air Conditioner .....	HA-130
DESCRIPTION — Push Control .....	HA-132
DESCRIPTION — Auto Air Conditioner .....	HA-136
PREPARATION .....	HA-157
SERVICE DATA AND SPECIFICATIONS (S.D.S.) .....	HA-159

**HA**

**When you read wiring diagrams:**

- Read GI section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

**When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES".**

## PRECAUTIONS

---

### **Supplemental Restraint System “AIR BAG”**

The Infiniti M30 has a Supplemental Restraint System “Air Bag”, to help reduce the risk or severity injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag (located in the center of the steering wheel), five sensors, a control unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the BF section of this Service Manual.

#### **WARNING:**

- a. **To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized INFINITI dealer.**
- b. **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.**
- c. **All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation and related components are located in the steering column, center console, dash, upper radiator core support and front fenders. Do not use electrical test equipment on these circuits.**

## DESCRIPTION — Overall System


### Introduction — Manual Air Conditioner

A push control system has been used to improve operation and enhance the value of the product.

### Features — Manual Air Conditioner

This push control system operates the intake and mode door motors to activate the doors corresponding to each button. When the MODE switch is moved to "DEF" or "F/D", the push control amplifier sets the intake door to "FRE". The compressor turns on when the MODE switch is moved to "DEF".

### Control Operation — Manual Air Conditioner

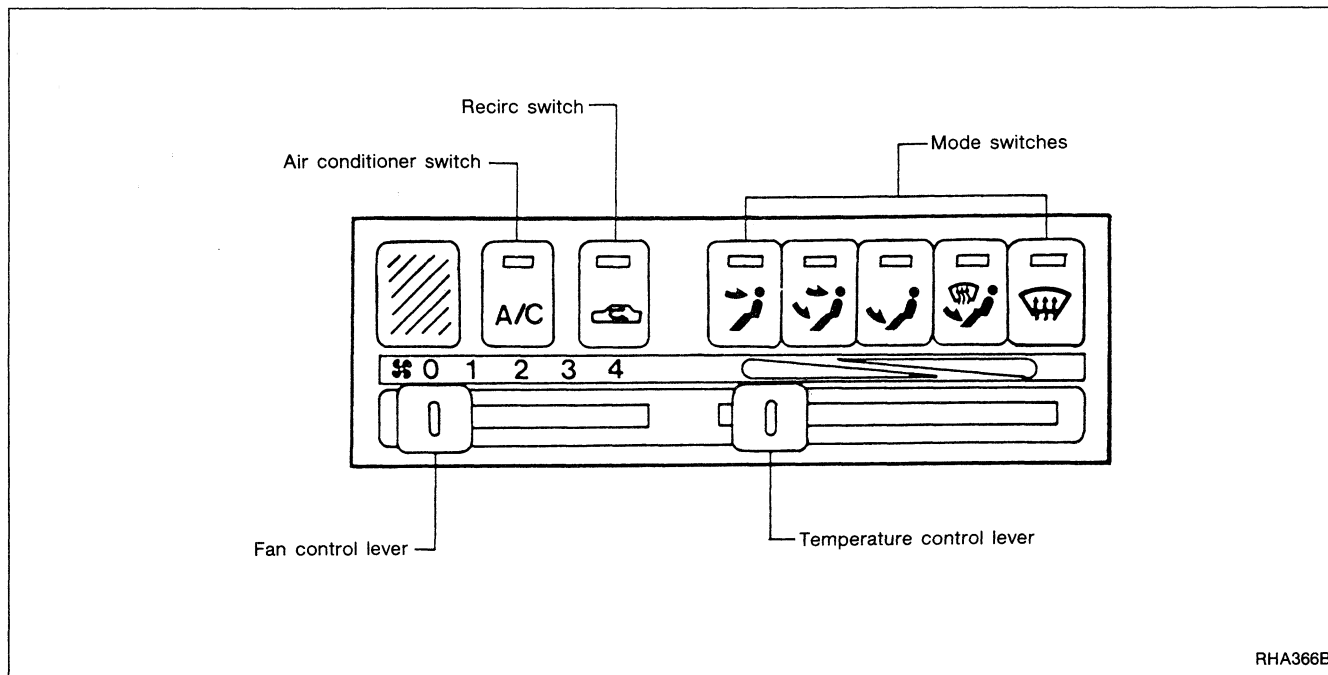

#### FAN CONTROL LEVER

This lever turns the fan ON and OFF, and controls fan speed.

#### MODE SWITCHES

These switches allow you to select the outlet air flow.

#### TEMPERATURE CONTROL LEVER

This lever allows you to adjust the temperature of the outlet air.

#### RECIRC SWITCH

OFF position:

Outside air is drawn into the passenger compartment when this switch is OFF.

ON position:

Interior air is recirculated inside the vehicle.

#### AIR CONDITIONER SWITCH

Start the engine, move the fan control lever to the desired (1 to 4) position and push the air conditioner switch to turn ON the air conditioner. The indicator light will come on when the air conditioner is ON. To stop the air conditioner, push the switch again to return it to the original position.

**The air conditioner cooling function operates only when the engine is running.**

## DESCRIPTION — Overall System

---

### Introduction — Auto Air Conditioner

The Automatic Temperature Control (ATC) system provides automatic regulation of the vehicles interior temperature based on the operator selected "set temperature", regardless of the outside temperature changes. This is done by utilizing a microcomputer, also referred to as the automatic amplifier, which receives input signals from several sensors. The automatic amplifier uses these input signals (including the set temperature) to automatically control the ATC system's outlet air volume, air temperature, and air distribution.

### Features — Auto Air Conditioner

#### **Air mix door control**

The air mix door is automatically controlled so that in-vehicle temperature will reach, and be maintained at the operator selected "set temperature". For a given set temperature, the mix door position will depend on: Ambient temperature, in-vehicle temperature, amount of sunload, and intake air temperature.

#### **Fan speed control**

The blower speed is automatically controlled, with the actual speed (for a given set temperature) depending on: Ambient temperature, in-vehicle temperature, amount of sunload, intake air temperature, and mix door position. Additionally, when the system is turned on, the blower will start slowly and then increase speed (over a period of approximately 5 seconds) until the objective speed is reached. When cold starting in cold ambient temperatures, the blower operation will be delayed to prevent blowing cold air on the occupants feet.

#### **Intake door control**

The intake door position will be determined by: Ambient temperature, in-vehicle temperature, and whether the compressor is on or off.

#### **Outlet door control**

The outlet door position will be determined by: Ambient temperature, in-vehicle temperature, intake air temperature, and amount of sunload.

#### **Compressor clutch control**

The compressor operation (ON-OFF) is automatically controlled by the ambient sensor to prevent compressor damage in very cold ambient temperatures.

#### **Recirculation switch**

If the operator does not want outside air, the RECIRC switch should be pushed. The passenger compartment air will be recirculated for approx. 10 minutes, then the RECIRC function will be automatically canceled.

#### **Self-diagnostic system**

The self-diagnostic system consists of five steps. Each step can be accessed by pushing the switches on the automatic amplifier.

STEP 1: Checks L.E.D.s and segments of the display.

STEP 2: Checks each sensor circuit for open or short circuit.

STEP 3: Checks mode door position.

STEP 4: Checks operation of each actuator.

STEP 5: Checks temperature detected by each sensor.

AUXILIARY TRIMMER MECHANISM: Set temperature trimmer.

#### **Memory function**


When the ignition switch is turned from "ON" to "OFF", the auto amplifier stores the set temperature and inputs of various switches in its memory. When the ignition switch is turned from "OFF" to "ON", the system begins operation with the information stored in the memory, then immediately compensates for the actual operating conditions.

#### **Refrigeration cycle**

Refer to page HA-14 for the description of the refrigeration cycle.

# DESCRIPTION — Overall System

## Control Operation — Auto Air Conditioner

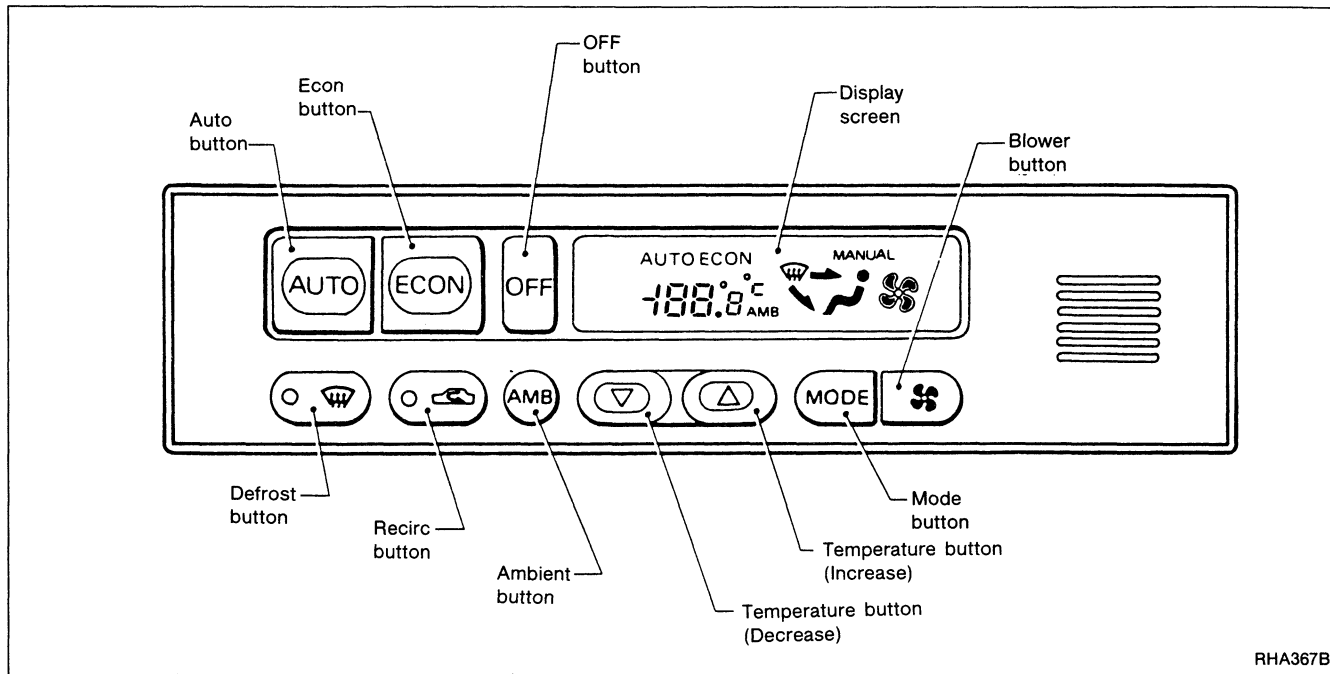

### DISPLAY SCREEN

Displays the operational status of the system.

### AUTO BUTTON

The compressor, air inlet door, air mix door, outlet doors, and blower speed are automatically controlled so that the in-vehicle temperature will reach, and be maintained at the set temperature selected by the operator.

### ECON BUTTON

Fully automatic control with the compressor off. With the compressor off, the system will not remove heat (cool) or de-humidify. The system will maintain the in-vehicle temperature at the set temperature when the set temperature is above the ambient (outside) temperature.

### TEMPERATURE INCREASE/DECREASE BUTTON

Increases or decreases the set temperature.

### OFF BUTTON

The compressor and blower are off, the air inlet door is set to the outside air position, and the air outlet doors are set to the foot (70% foot and 30% defrost) position. In the off position the ATC system uses the vehicle's "flow through" ventilation to try to maintain the interior temperature based on the temperature set when the system was last operating.

### BLOWER BUTTON

Manual control of the blower speed. Four speeds are available for manual control (as shown on the display screen):

low , medium low , medium high , high

### MODE BUTTON

Manual control of the air discharge outlets. There selections are available (as shown on the display screen):

face , bi-level , foot

### AMBIENT BUTTON

Shows the ambient (outside) air temperature on the display screen for 5 seconds.

## DESCRIPTION — Overall System

---

### Control Operation — Auto Air Conditioner (Cont'd)

#### RECIRC BUTTON

Positions the air inlet door to the recirculation position for 10 minutes, after which automatic control resumes.


#### DEFROST BUTTON

Positions the air discharge doors to the defrost position. Also positions the air inlet door to the outside air position. The compressor operates at ambient temperature approx. 2°C (35°F) or above.




# DESCRIPTION — Overall System

## Component Layout



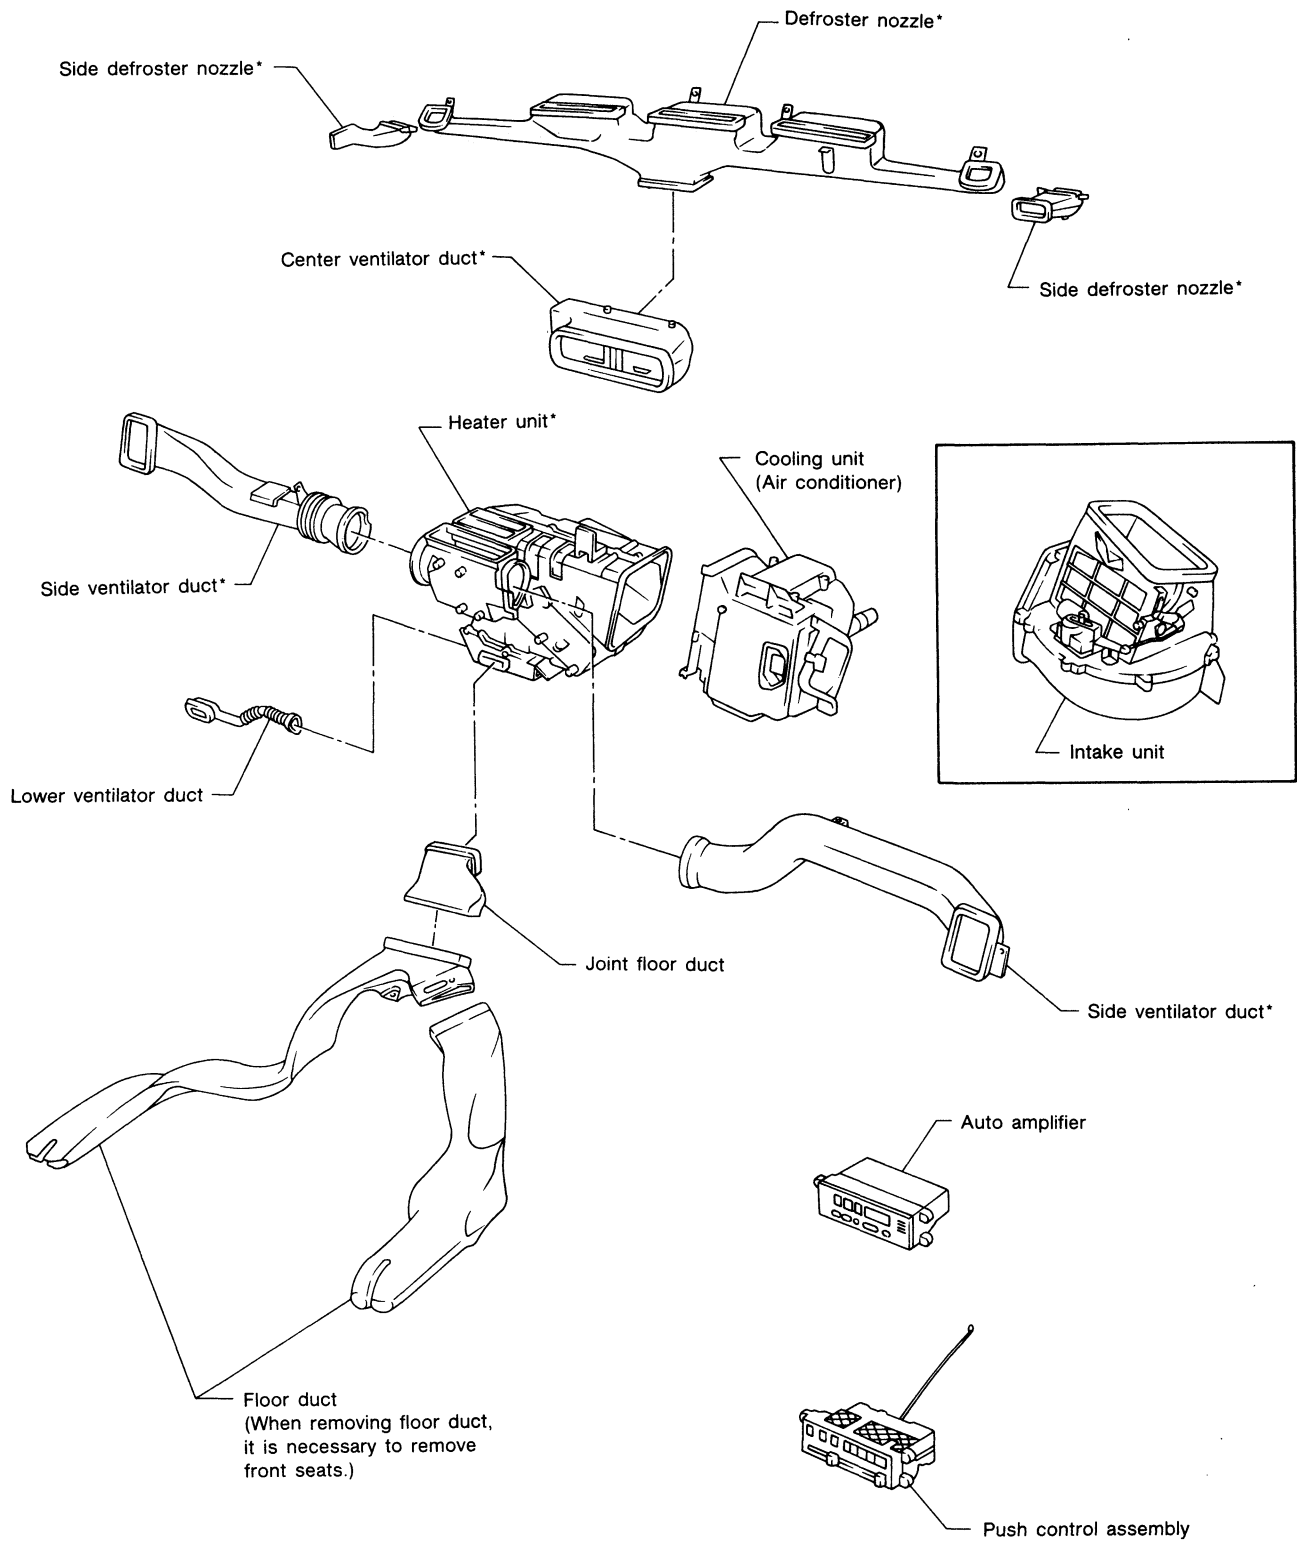


\*: For removal, it is necessary to remove instrument assembly.




Air Flow — Manual Air Conditioner

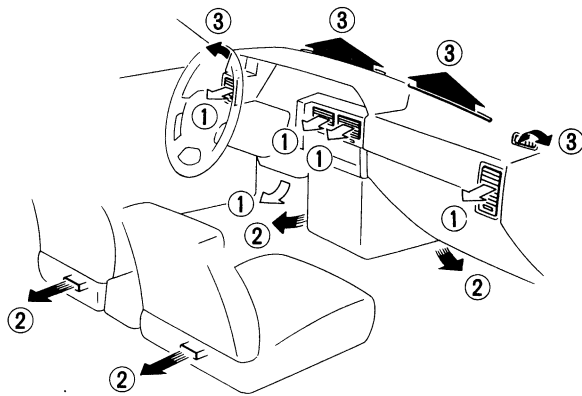




Ventilation

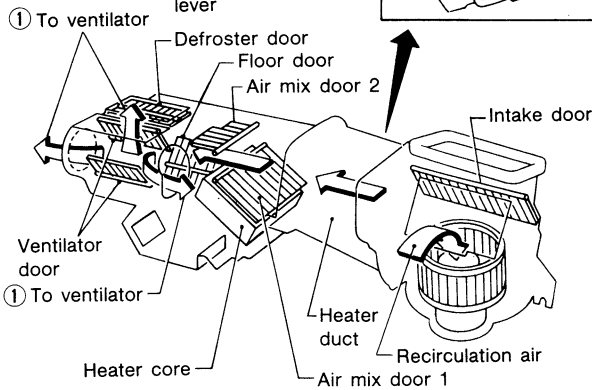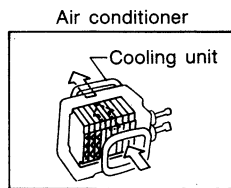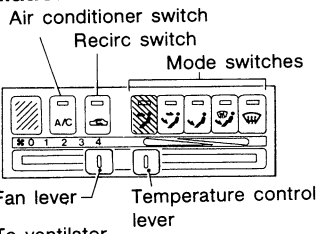




Floor

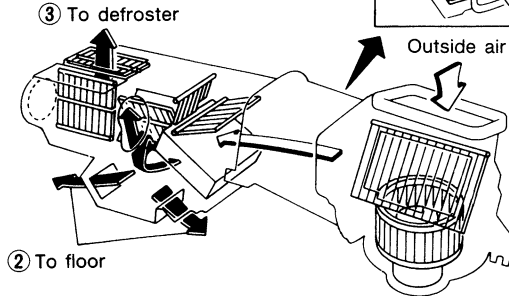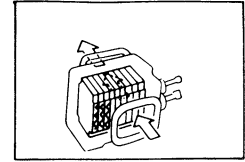




Floor and defroster

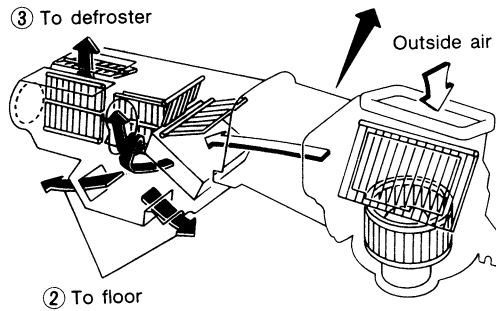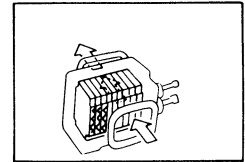

Bi-level

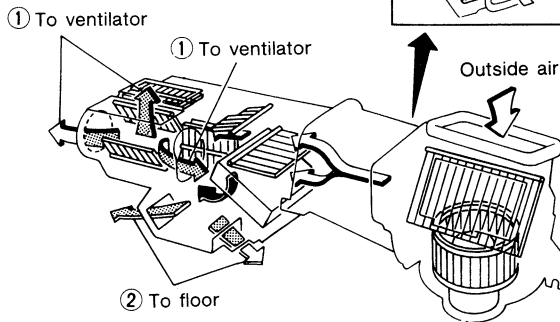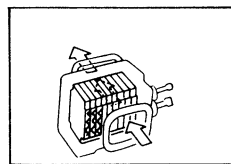


Defroster

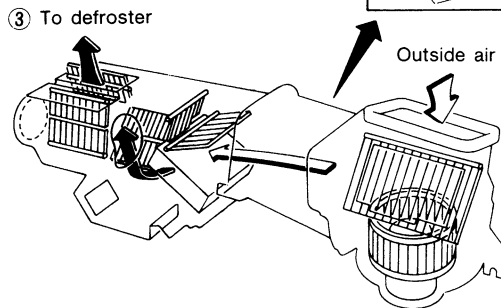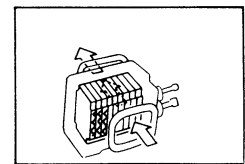

- ← : Air passed through heater core
- ← + → : Mixed air ( ← + → )
- ← : Air not passed through heater core


# DESCRIPTION — Overall System

## Air Flow — Auto Air Conditioner

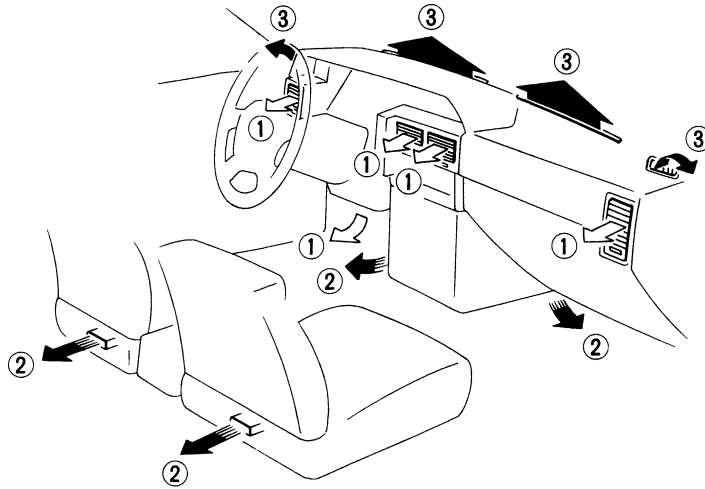


### Ventilation


Mode display




### Floor




① To ventilator

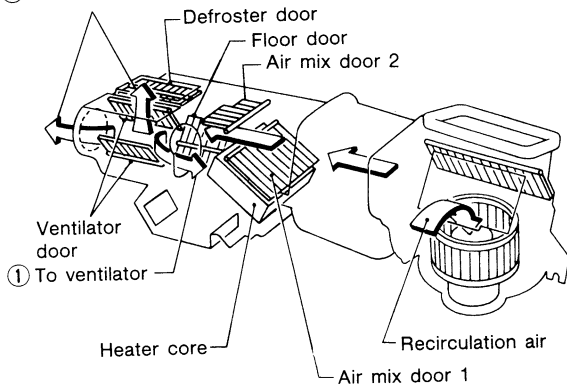


③ To defroster

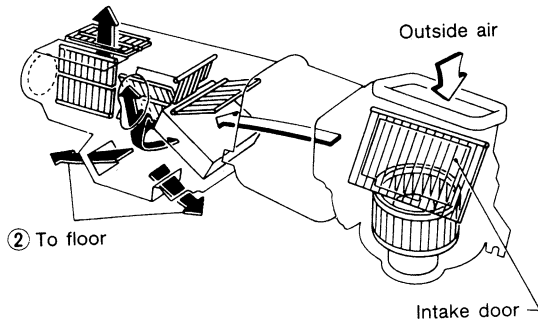


### Bi-level




### Defroster



① To ventilator

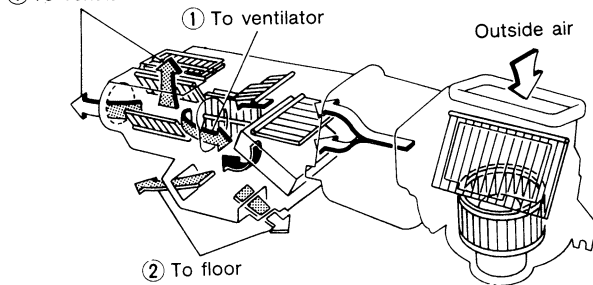

③ To defroster

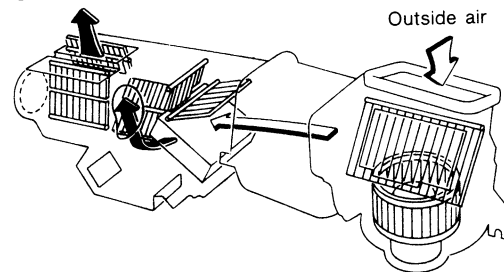

- ← : Air passed through heater core
- ← + → : Mixed air (← + →)
- ← : Air not passed through heater core

# OPERATIONAL CHECK

## Operational Check — Manual Air Conditioner

The purpose of the operational check is to confirm that the system operates as it should. The systems which are checked are the blower, mode (discharge air), intake air, temperature decrease, temperature increase.


### CONDITIONS:

Engine running at normal operating temperature.

### PROCEDURE:


#### 1. Check blower

- 1) Slide Fan lever to 1-speed.  
Blower should operate on 1-speed.
- 2) Then slide Fan Lever to 2-speed.
- 3) Continue checking blower speed until all four speeds are checked.
- 4) Leave blower on 4-speed.

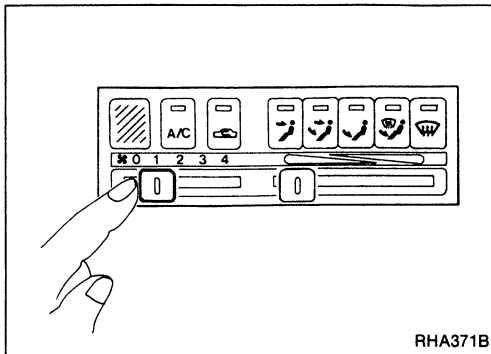


#### 2. Check discharge air

- 1) Press the VENT button.  
VENT indicator should light.
- 2) Confirm that all discharge air comes out of face vents.
- 3) Press the B/L button.  
B/L indicator should light.
- 4) Confirm that discharge air comes out of face vents and foot vents.
- 5) Press the FOOT button.  
FOOT indicator should light.
- 6) Confirm that discharge air comes out of foot vents, with some air from defroster vents.
- 7) Press the F/D button.  
F/D indicator should light.
- 8) Confirm that discharge air comes out of foot vents, with some air from defroster vents, and that intake door position is at FRE.
- 9) Press the DEF button.  
DEF indicator should light.
- 10) The discharge air should be coming only from defroster vents. At the same time compressor should turn ON and intake door position be at FRE.

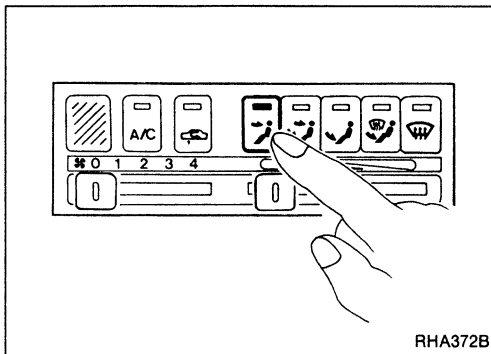


#### 3. Check recirc

- 1) Press RECIRC button.  
RECIRC indicator should light.
- 2) Listen for intake door position change (you should hear blower sound change slightly).

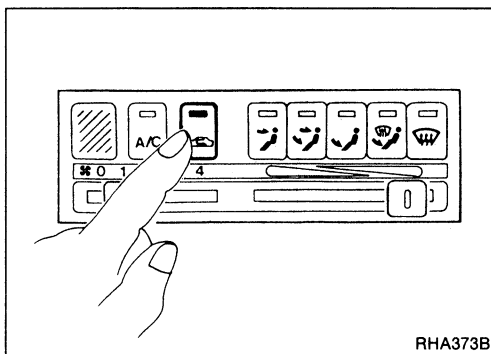


## OPERATIONAL CHECK

### Operational Check — Manual Air Conditioner (Cont'd)

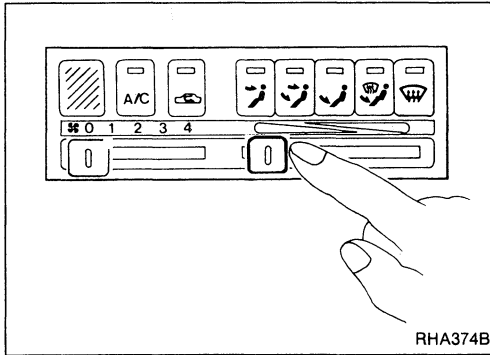


#### 4. Check temperature decrease

- 1) Slide temperature control lever to full cold.
- 2) Check for cold air at discharge air outlets.

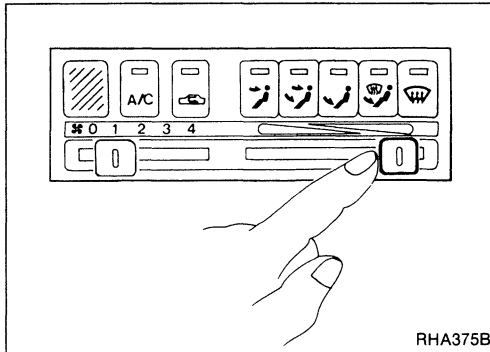

#### 5. Check temperature increase

- 1) Slide temperature control lever to full hot.
- 2) Check for hot air at discharge air outlets.

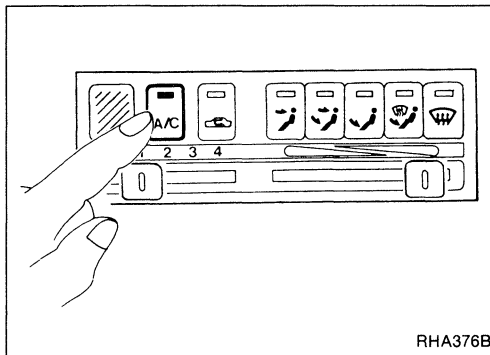

#### 6. Check air conditioner switch

Move the fan control lever to the desired (1 to 4-speed) position and push the air conditioner button to turn ON the air conditioner.

The indicator light should come on when air conditioner is ON.

### Operational Check — Auto Air Conditioner

The purpose of the operational check is to confirm that the system operates as it should. The systems which will be checked are the blower, mode (discharge air), ambient display, intake air, defrost, econ, auto, temperature decrease, temperature increase, and the memory function.


#### CONDITIONS:

Engine running at normal operating temperature.

#### PROCEDURE:


##### 1. Check blower

- 1) Press FAN button one time.  
MANUAL should appear on the display.  
Blower should operate on low speed, and the fan symbol should have one blade lit ( ).
- 2) Press FAN button one more time.
- 3) Continue checking blower speed and fan symbol until all four speeds have been checked.
- 4) Leave blower on high speed.

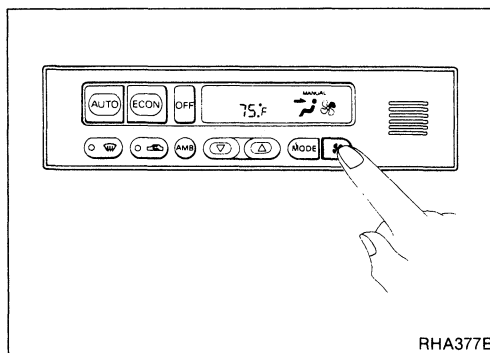




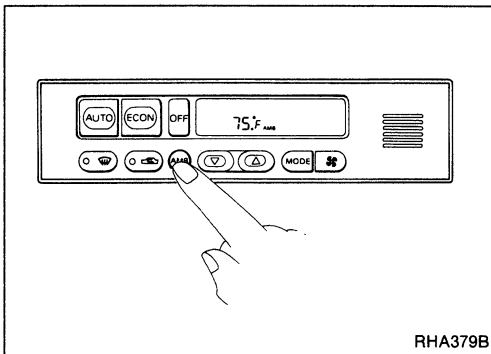
## OPERATIONAL CHECK
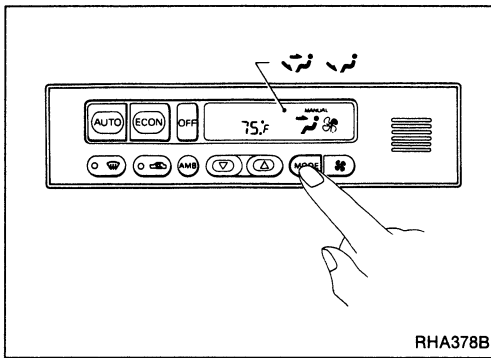
### Operational Check — Auto Air Conditioner (Cont'd)




#### 2. Check discharge air

- 1) Press the MODE button one time.  
Display should show air to the face (  ).
- 2) Confirm that all discharge air comes out the face vents.
- 3) Press MODE button one more time.  
Display should show air to face and foot (bi-level) (  ).
- 4) Confirm that discharge air comes out the face and foot vents.
- 5) Press MODE button one more time.  
Display should show air to foot (  ).
- 6) Confirm that discharge air comes mostly from the foot outlets, with some air from the defroster outlets.
- 7) Leave the system in the foot mode.




#### 3. Check ambient display

- 1) Press the AMB button.  
Display should show the outside (ambient) temperature for approximately 5 seconds.

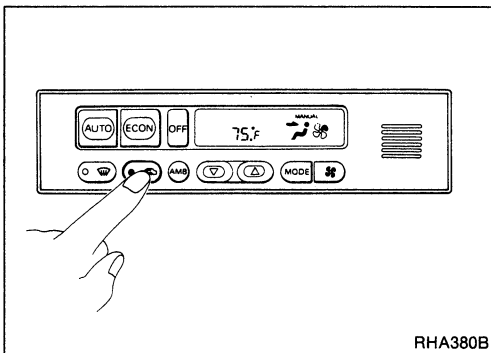


#### 4. Check recirc

- 1) Press RECIRC button.  
RECIRC indicator should light.
- 2) Listen for intake door position change (you should hear blower sound change slightly).

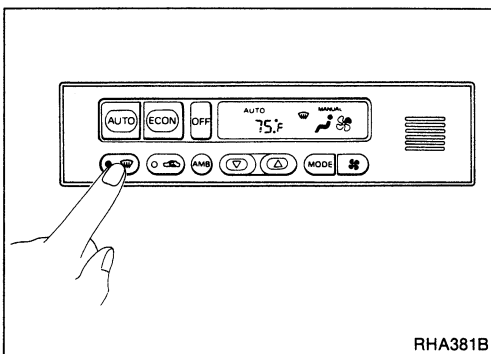


#### 5. Check defrost

- 1) Press defrost button.
- 2) Check that RECIRC is canceled.  
The discharge air should be coming only from the defrost vents.
- 3) Confirm that the compressor clutch is engaged (visual inspection).  
The display should indicate AUTO, MANUAL, and defrost (  ).


## OPERATIONAL CHECK

### Operational Check — Auto Air Conditioner (Cont'd)

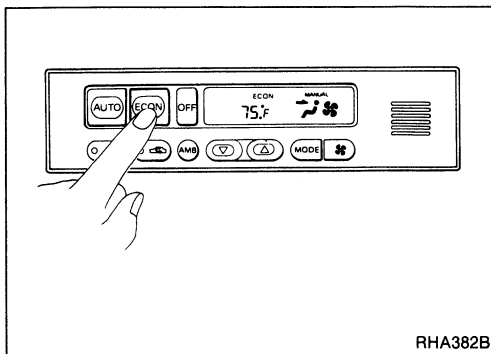


#### 6. Check ECON mode

- 1) Press ECON button.  
Defrost should be canceled.  
Discharge air outlet will depend on ambient, in-vehicle, and set temperatures.  
Display should indicate ECON (no AUTO, no MANUAL).
- 2) Confirm that the compressor clutch is not engaged (visual inspection).

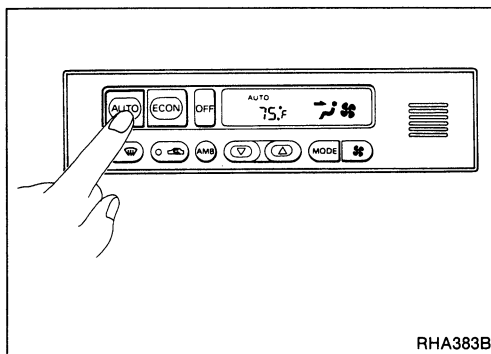


#### 7. Check AUTO mode

- 1) Press AUTO button.
- 2) Confirm that the compressor clutch engages (audio or visual inspection).  
Display should indicate AUTO (no ECON, no MANUAL).  
(Discharge air will depend on ambient, in-vehicle, and set temperatures).

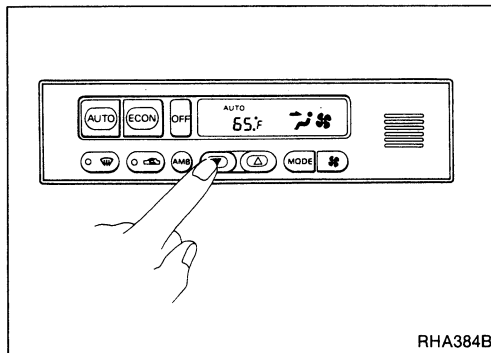


#### 8. Check temperature decrease

- 1) Press the temperature decrease button until 18°C (65°F) is displayed.
- 2) Check for cold air at discharge air outlets.

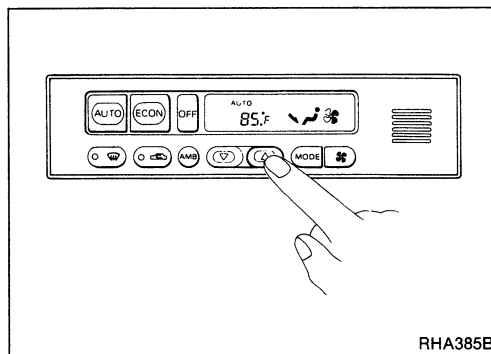

#### 9. Check temperature increase

- 1) Press the temperature increase button until 32°C (85°F) is displayed.
- 2) Listen for changes in blower speed as set temperature changes.
- 3) Check for hot air at discharge air outlets.

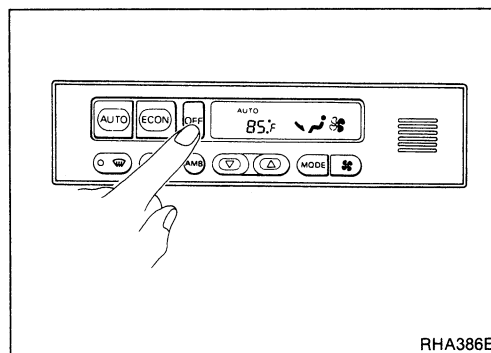

#### 10. Check memory function

- 1) Press off button.
- 2) Turn the ignition off.
- 3) Wait 15 seconds.
- 4) Turn the ignition on.
- 5) Press the AUTO button.
- 6) Confirm that the set temperature remained at 32°C (85°F).

## Refrigeration Cycle

### REFRIGERANT FLOW

The refrigerant flows in the standard pattern, that is, through the compressor, the condenser, the receiver drier, through the evaporator, and back to the compressor.

The refrigerant evaporation through the evaporator coil is controlled by an externally equalized expansion valve, located inside the evaporator case.

### FREEZE PROTECTION

When the A/C is switched on, the compressor runs continuously, and the evaporator pressure is controlled by a suction throttle valve (S.T.V.) to prevent freeze up.

### REFRIGERANT SYSTEM PROTECTION

#### Dual-pressure switch


The refrigerant system is protected against excessively high or low pressures by the dual-pressure switch, located on the receiver drier. If the system pressure rises above, or falls below the specifications, the dual-pressure switch opens to interrupt the compressor operation.

#### Fusible plug

Open at temperature above 105°C (221°F), thereby discharging refrigerant to the atmosphere. If this plug is melted and opened, check the refrigerant line and replace receiver drier.


#### Pressure relief valve

The refrigerant system is also protected by a pressure relief valve, located on the end of high flexible hose near compressor. When the pressure of refrigerant in the system increases to an abnormal level [more than 3,727 kPa (38 kg/cm<sup>2</sup>, 540 psi)], the release port on the pressure relief valve automatically opens and releases refrigerant into the atmosphere.

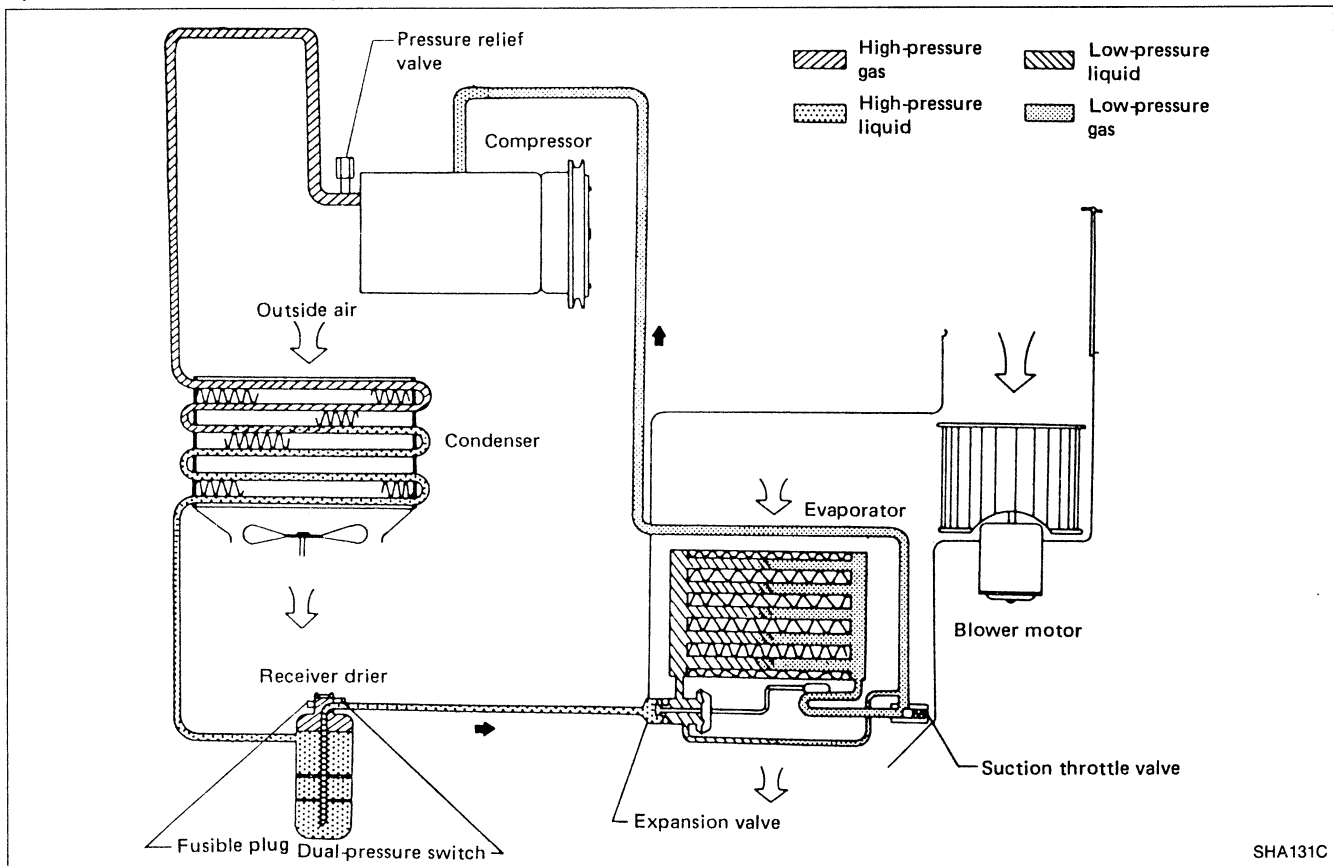




Refrigerant System

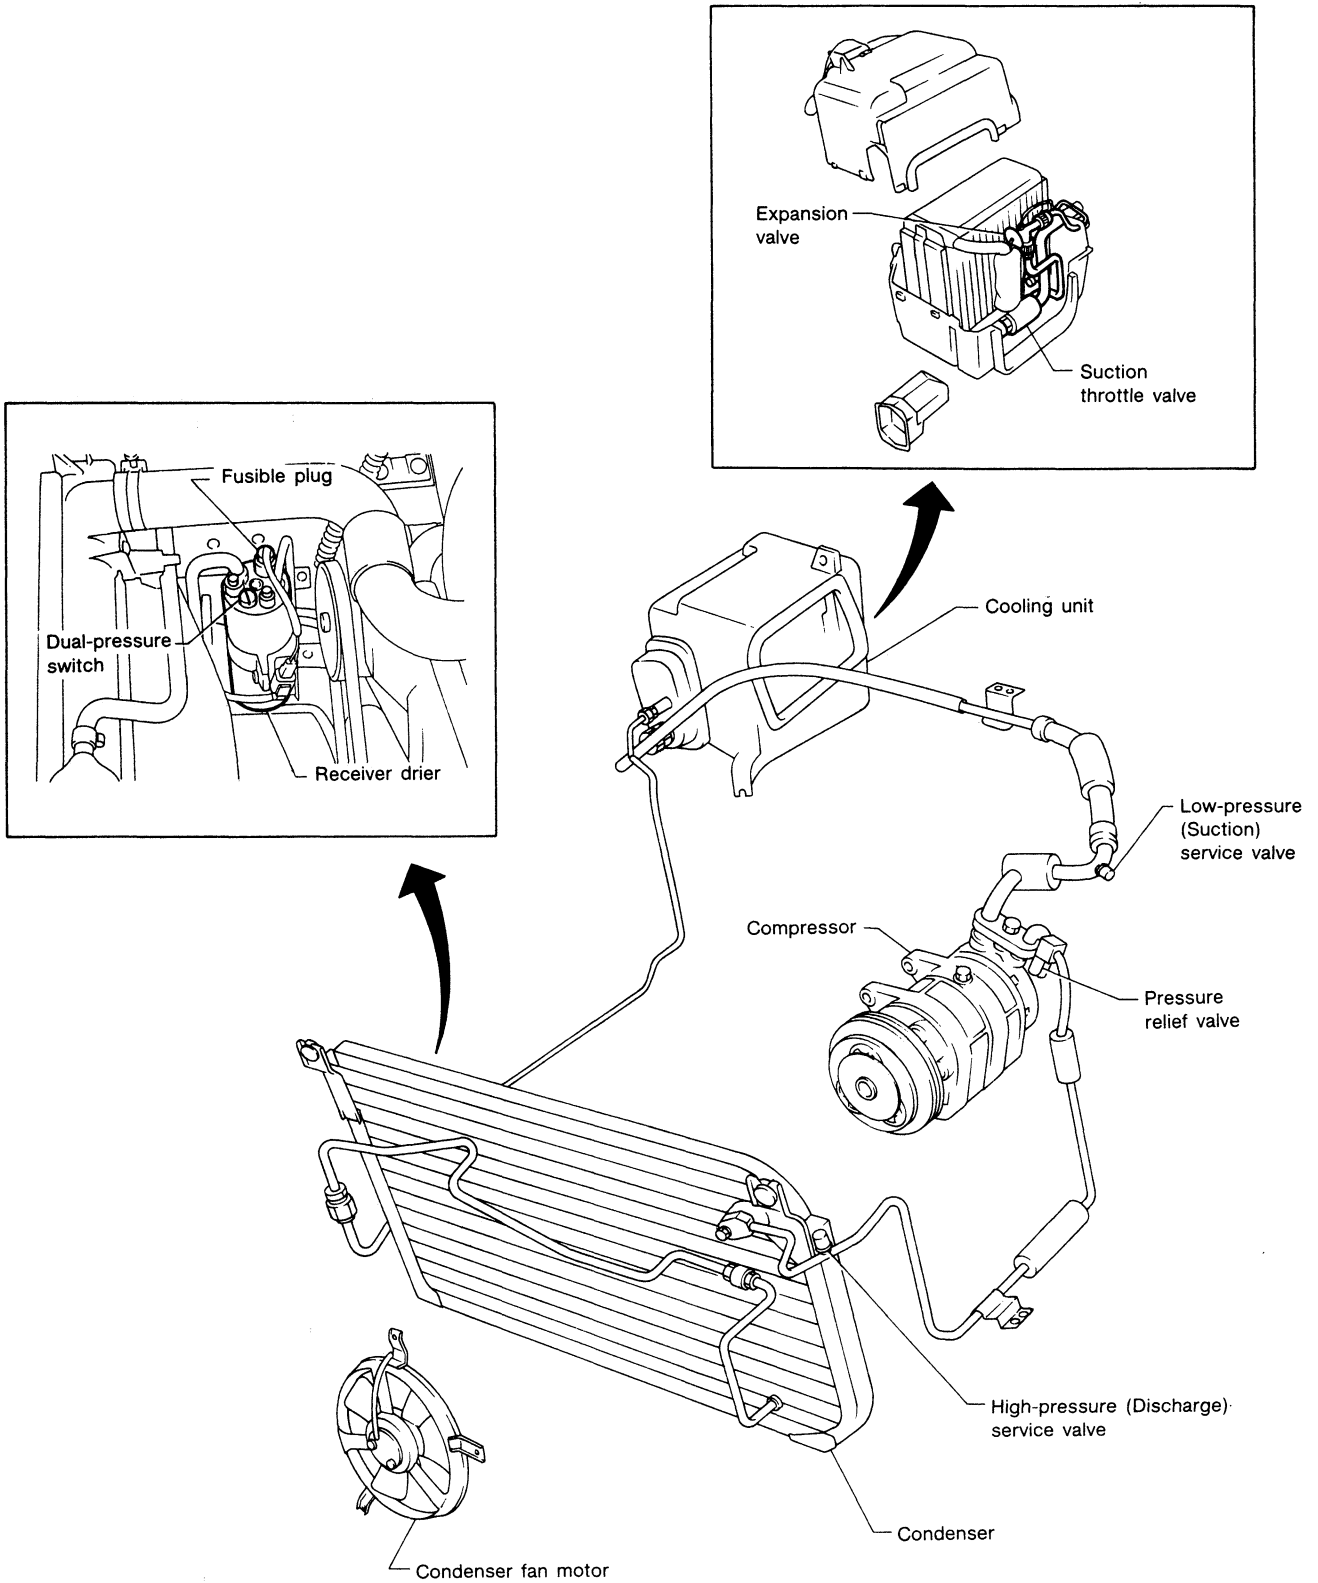


## How to Perform Trouble Diagnoses for Quick and Accurate Repair — Manual Air Conditioner

### WORK FLOW





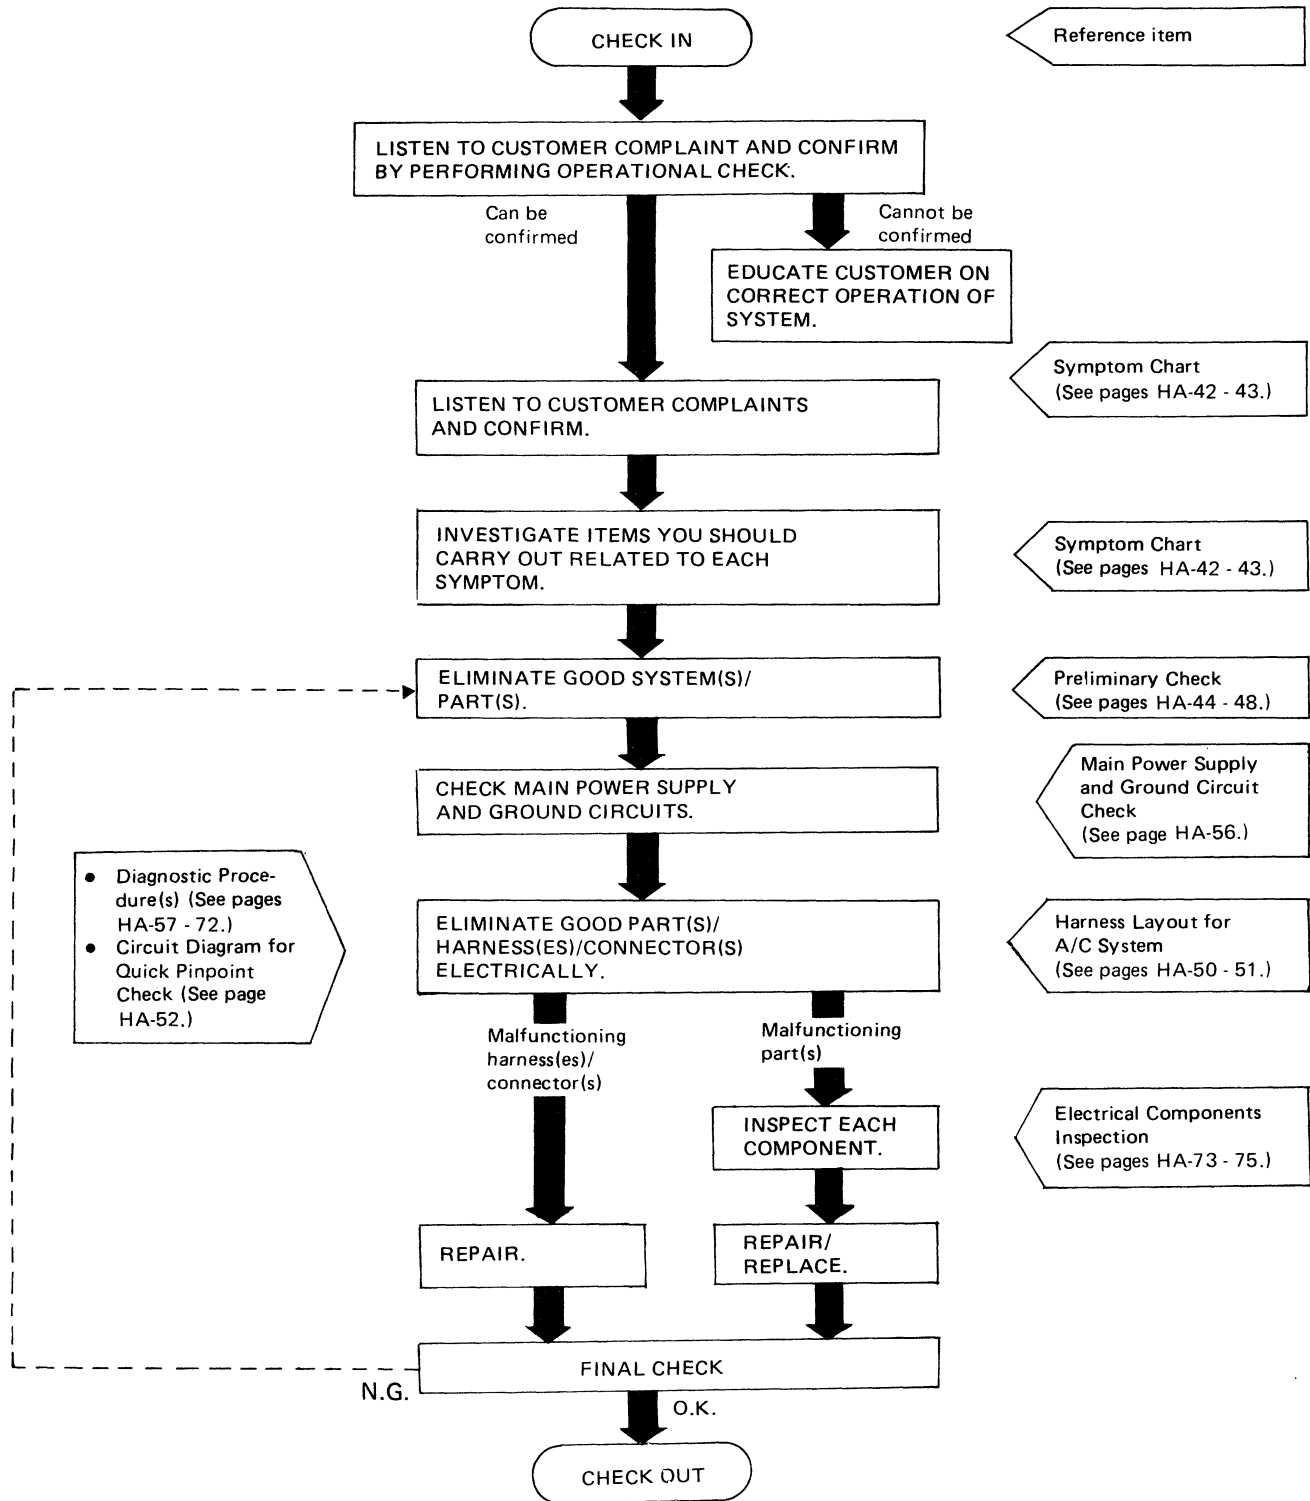


## How to Perform Trouble Diagnoses for Quick and Accurate Repair — Auto Air Conditioner

### WORK FLOW

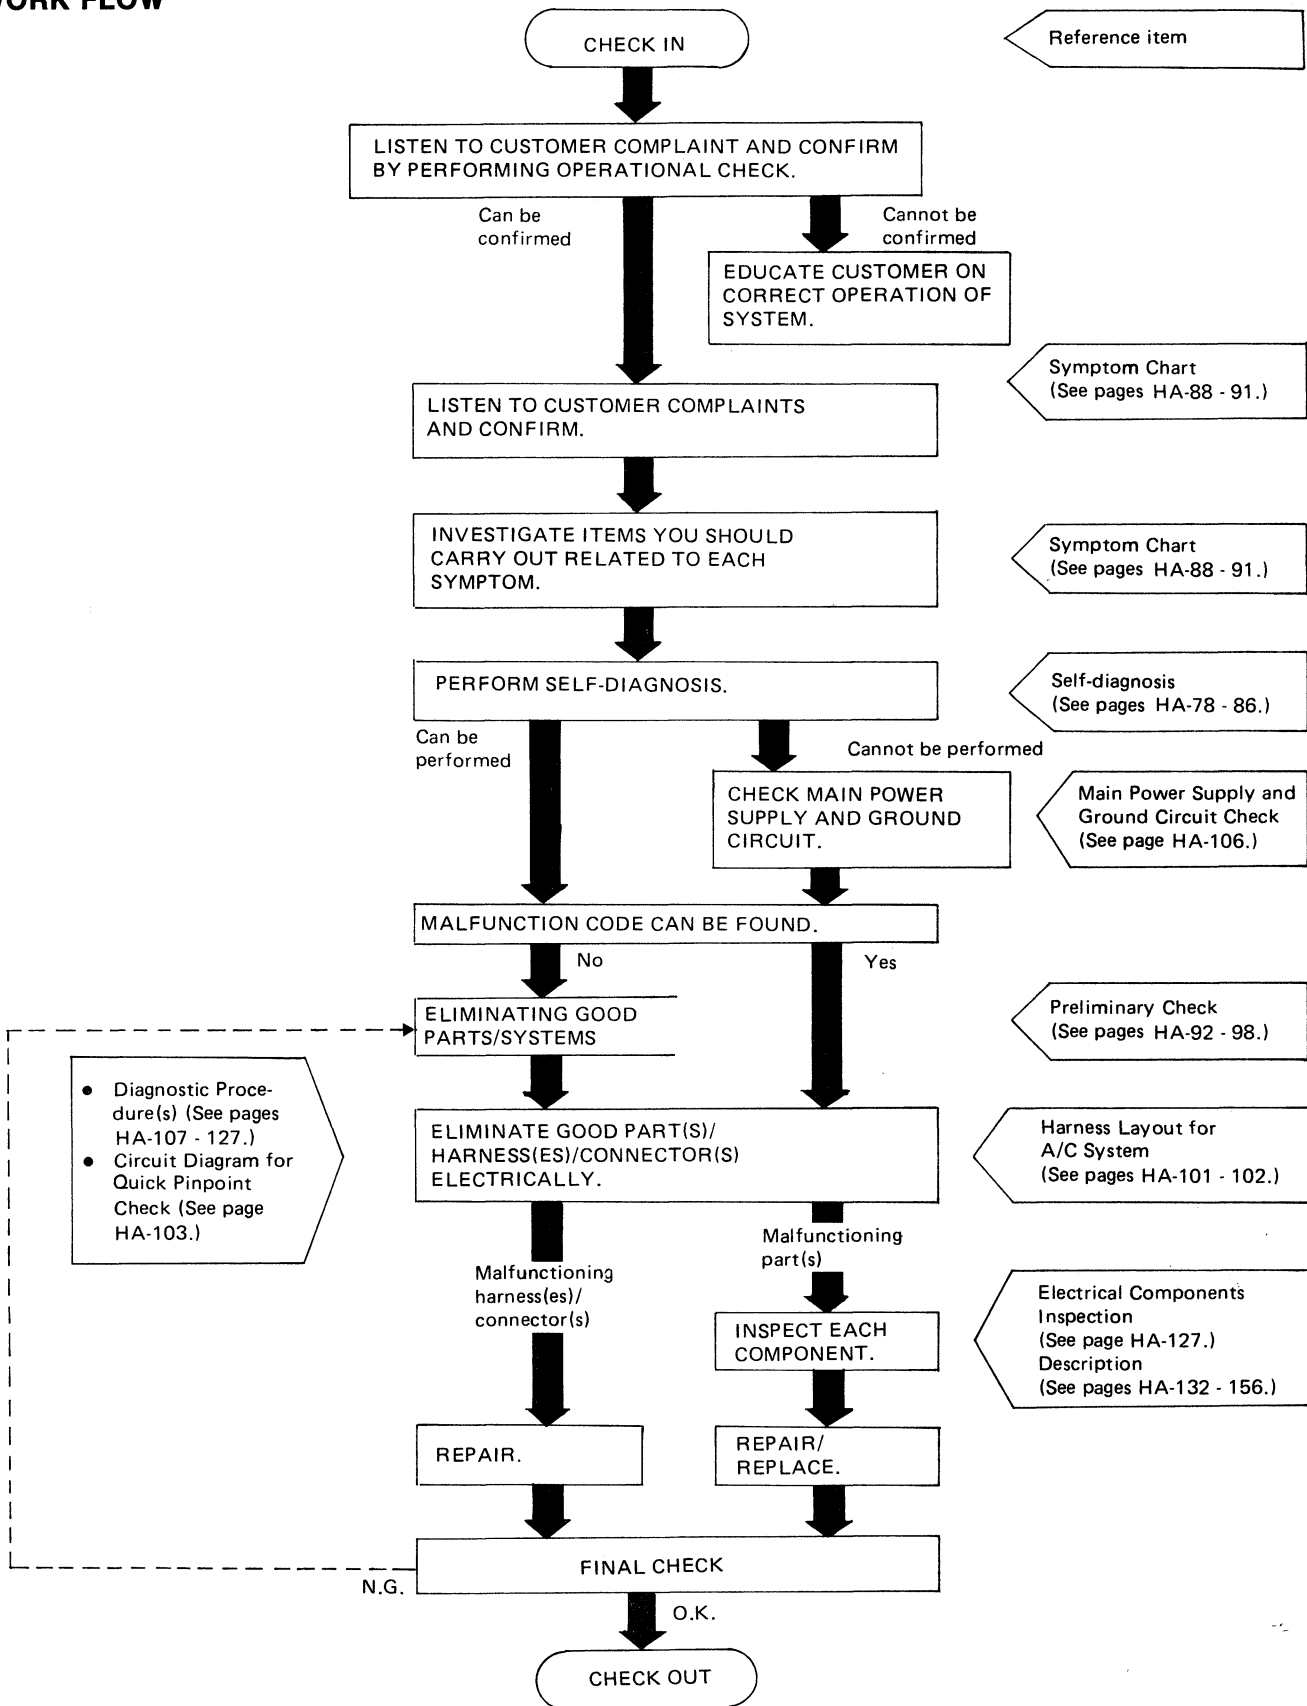

## DIAGNOSES — Overall System

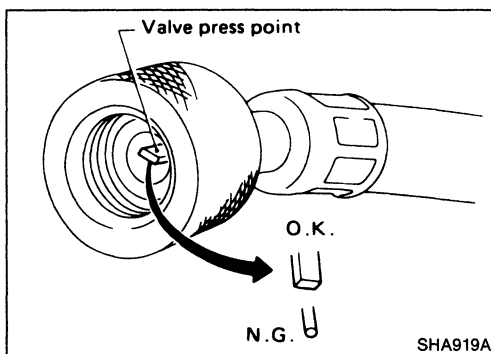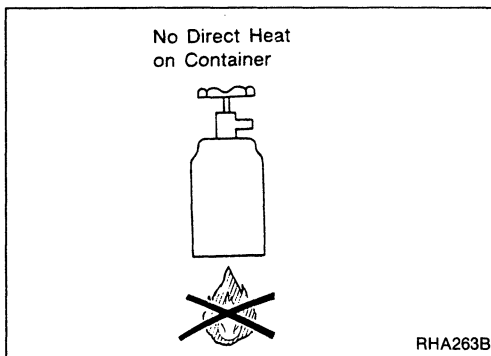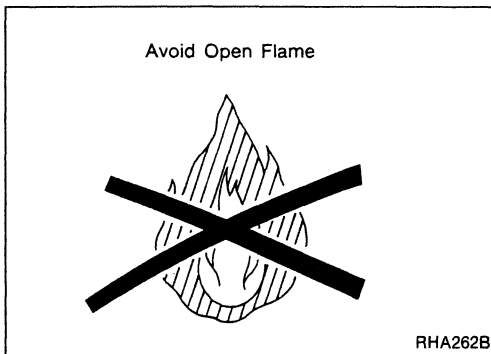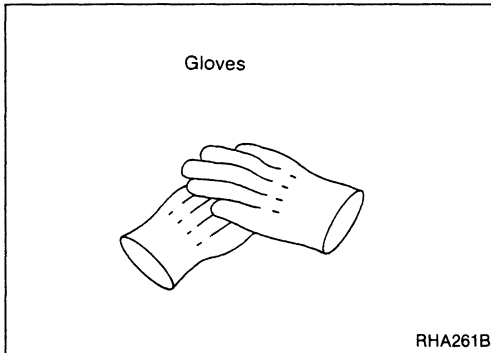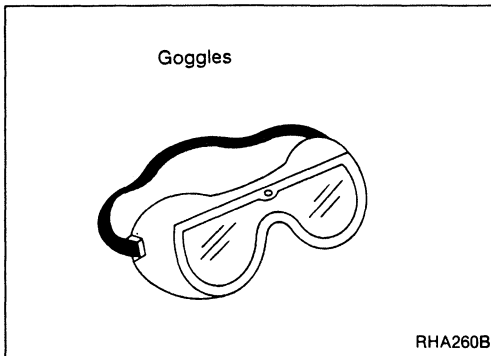

### Precautions

#### PRECAUTIONS FOR THE HANDLING OF REFRIGERANT

- Always wear eye protection when working around the system.
- Always be careful that refrigerant does not come in contact with your skin.
- Keep refrigerant containers stored below 40°C (104°F) and never drop from high places.
- Work in well-ventilated area because refrigerant gas evaporates quickly and breathing may become difficult due to the lack of oxygen.
- Keep refrigerant away from open flames because poisonous gas will be produced if it burns.
- Do not increase can temperature beyond 40°C (104°F) in charging.
- Do not heat refrigerant can with an open flame. There is a danger that can will explode.

#### CAUTION:

- Do not use steam to clean surface of condenser or evaporator. Be sure to use cold water or compressed air.
- Compressed air must never be used to clean a dirty line. Clean with refrigerant gas.

- Do not use manifold gauge whose press point shape is different from that shown. Otherwise, insufficient evacuation may occur.
- Do not over-tighten service valve cap.
- Do not allow refrigerant to rush out. Otherwise, compressor oil will be discharged along with refrigerant.

## Performance Chart

### TEST CONDITION — For Manual Air Conditioner

Testing must be performed as follows:

Vehicle location: Indoors or in the shade (in a well ventilated place)

Doors: Closed

Door window: Open

Hood: Open

TEMP. lever position: Max. COLD

Air control lever position:  (Ventilation)

 (REC) switch:  (Recirculation) set

FAN lever position: Max. position

Engine speed: 1,500 rpm

Time required before starting testing after air conditioner starts operating: More than 10 minutes

### TEST CONDITION — For Auto Air Conditioner

Testing must be performed as follows:

Vehicle location: Indoors or in the shade (in a well ventilated place)

Doors: Closed


Door window: Open

Hood: Open

 switch (P.T.C.): 65°F set

 (mode) switch:  (Ventilation) set

 (REC) switch:  (Recirculation) set

 (fan) switch: Max. speed set

Engine speed: 1,500 rpm

Time required before starting testing after air conditioner starts operating: More than 10 minutes

## DIAGNOSES — Overall System

### Performance Chart (Cont'd)

#### TEST READING

#### Recirculating-to-discharge air temperature table

Inside air (Recirculating air) at blower assembly inlet		Discharge air temperature at center ventilator °C (°F)
Relative humidity %	Air temperature °C (°F)	
50 - 60	20 (68)	5.0 - 7.5 (41 - 46)
	25 (77)	9.1 - 10.9 (48 - 52)
	30 (86)	12.2 - 14.3 (54 - 58)
	35 (95)	15.2 - 17.6 (59 - 64)
60 - 70	20 (68)	7.5 - 9.2 (46 - 49)
	25 (77)	10.9 - 12.8 (52 - 55)
	30 (86)	14.3 - 16.5 (58 - 62)
	35 (95)	17.6 - 20.2 (64 - 68)

#### Ambient air temperature-to-compressor pressure table




Ambient air		High-pressure (Discharge side) kPa (kg/cm <sup>2</sup> , psi)	Low-pressure (Suction side) kPa (kg/cm <sup>2</sup> , psi)
Relative humidity %	Air temperature °C (°F)		
50 - 70	20 (68)	1,108 - 1,353 (11.3 - 13.8, 161 - 196)	98 - 127 (1.0 - 1.3, 14 - 18)
	25 (77)	1,216 - 1,500 (12.4 - 15.3, 176 - 218)	108 - 147 (1.1 - 1.5, 16 - 21)
	30 (86)	1,334 - 1,648 (13.6 - 16.8, 193 - 239)	122.6 - 166.7 (1.25 - 1.7, 17.8 - 24.2)
	35 (95)	1,451 - 1,785 (14.8 - 18.2, 210 - 259)	137.3 - 181.4 (1.4 - 1.85, 19.9 - 26.3)
	40 (104)	1,559 - 1,922 (15.9 - 19.6, 226 - 279)	147 - 196 (1.5 - 2.0, 21 - 28)

# DIAGNOSES — Overall System

## Checking Refrigerant Level

### CONDITION

- Door window: Open
- A/C switch: ON
- TEMP. setting: Max. COLD
- FAN speed: 4
- Check sight glass after a lapse of about five minutes.

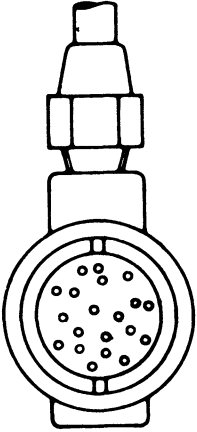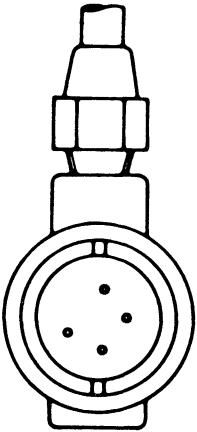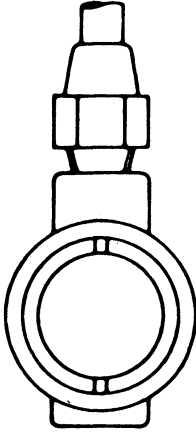Amount of refrigerant	Almost no refrigerant	Insufficient	Suitable	Too much refrigerant
Check item				
Temperature of high-pressure and low-pressure lines.	Almost no difference between high-pressure and low-pressure side temperature.	High-pressure side is warm and low-pressure side is fairly cold.	High-pressure side is hot and low-pressure side is cold.	High-pressure side is abnormally hot.
State in sight glass.	Bubbles flow continuously. Bubbles will disappear and something like mist will flow when refrigerant is nearly gone.	The bubbles are seen at intervals of 1 to 2 seconds.	Almost transparent. Bubbles may appear when engine speed is raised and lowered.	No bubbles can be seen.
	 AC256	 AC257	 AC258	No clear difference exists between these two conditions.
Pressure of system.	High-pressure side is abnormally low.	Both pressures on high and low-pressure sides are slightly low.	Both pressure on high and low-pressure sides are normal.	Both pressures on high and low-pressure sides are abnormally high.
Repair.	Stop compressor immediately and conduct an overall check.	Check for gas leakage, repair as required, replenish and charge system.		Discharge refrigerant from service valve of low-pressure side.

a. The bubbles seen through the sight glass are influenced by the ambient temperature. Since the bubbles are hard to show up in comparatively low temperatures below 20°C (68°F), it is possible that a slightly larger amount of refrigerant would be filled, if supplied according to the sight glass. Recheck the amount when it exceeds 20°C (68°F). In higher temperature the bubbles are easy to show up.

b. When the screen in the receiver drier is clogged, the bubbles will appear even if the amount or refrigerant is normal. In this case, the outlet side pipe of the receiver drier becomes considerably cold.




## DIAGNOSES — Overall System

### Performance Test Diagnoses

Characteristics revealed by the manifold gauge readings for the air conditioning system are shown in the following.

For how to do the performance test, refer to the item "Performance Chart".





**In the following table, the portion smeared with ink on each gauge scale indicates the range showing that the air conditioning system is in good order. This range is described in Performance Chart.**

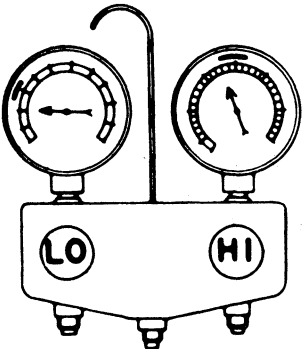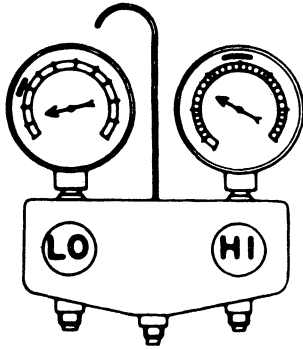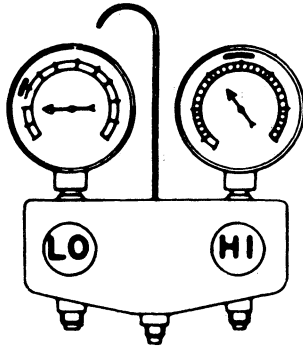Condition	Probable cause	Corrective action
<p><b>INSUFFICIENT REFRIGERANT CHARGE</b></p>  <p style="text-align: center;">AC352A</p>	<p>Insufficient cooling. Bubbles appear in sight glass.</p> <p>Refrigerant is low, or leaking slightly.</p>	<p>1. Leak test. 2. Repair leak. 3. Charge system. <b>Evacuate, as necessary, and recharge system.</b></p>
<p><b>ALMOST NO REFRIGERANT</b></p>  <p style="text-align: center;">AC353C</p>	<p>No cooling action. A lot of bubbles or something like mist appears in sight glass.</p> <p>Serious refrigerant leak.</p>	<p><b>Stop compressor immediately.</b></p> <p>1. Leak test. 2. Discharge system. 3. Repair leak(s). 4. Replace receiver drier if necessary. 5. Check oil level. 6. Evacuate and recharge system.</p>
<p><b>MALFUNCTIONING EXPANSION VALVE</b></p>  <p style="text-align: center;">AC354A</p>	<p>Slight cooling. Sweat or frosting on expansion valve inlet.</p> <p>Expansion valve restricts refrigerant flow.</p> <ul style="list-style-type: none"> <li>● Expansion valve is clogged.</li> <li>● Expansion valve is inoperative.</li> </ul> <p>Valve stuck closed. Thermal bulb has lost charge.</p>	<p>If valve inlet reveals sweat or frost:</p> <p>1. Discharge system. 2. Remove valve and clean it. Replace it if necessary. 3. Evacuate system. 4. Charge system.</p> <p>If valve does not operate:</p> <p>1. Discharge system. 2. Replace valve. 3. Evacuate and charge system.</p>






# DIAGNOSES — Overall System

## Performance Test Diagnoses (Cont'd)

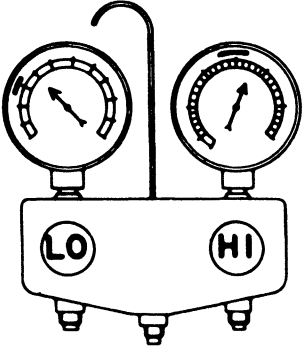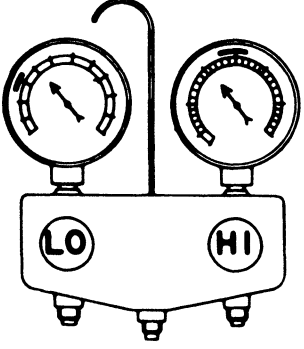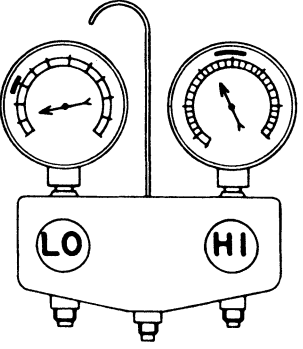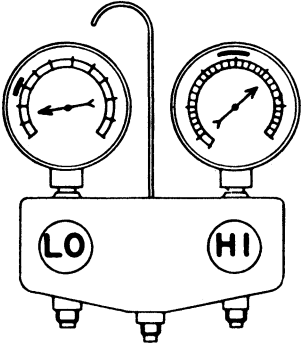Condition	Probable cause	Corrective action
 <p style="text-align: center;">AC355A</p>	<p>Insufficient cooling. Sweat on suction line.</p> <p>Expansion valve allows too much refrigerant through evaporator.</p>	<p>Check valve for operation. If suction side does not show a pressure decrease, replace valve.</p>
 <p style="text-align: center;">AC356A</p>	<p>No cooling. Sweat or frosting on suction line.</p> <p>Malfunctioning expansion valve.</p>	<ol style="list-style-type: none"> <li>1. Discharge system.</li> <li>2. Replace valve.</li> <li>3. Evacuate and charge system.</li> </ol>
<b>MALFUNCTIONING SUCTION THROTTLE VALVE</b>		
 <p style="text-align: center;">AC357A</p>	<p>Insufficient cooling. Frosted evaporator.</p> <p>Suction throttle valve is inoperative.</p>	<ol style="list-style-type: none"> <li>1. Discharge system.</li> <li>2. Replace valve.</li> <li>3. Evacuate and charge system.</li> </ol>
 <p style="text-align: center;">AC358A</p>	<p>Insufficient cooling.</p> <p>Suction throttle valve restricts refrigerant flow.</p>	<ol style="list-style-type: none"> <li>1. Discharge system.</li> <li>2. Replace valve.</li> <li>3. Evacuate and charge system.</li> </ol>




# DIAGNOSES — Overall System

## Performance Test Diagnoses (Cont'd)

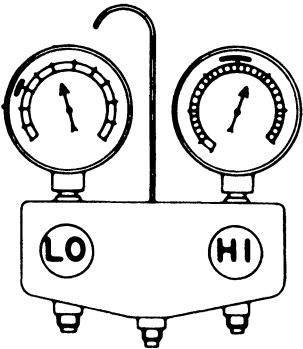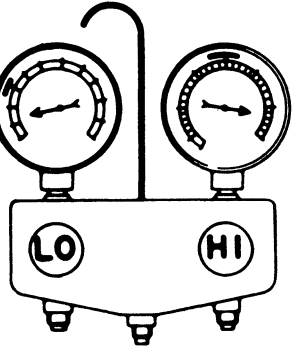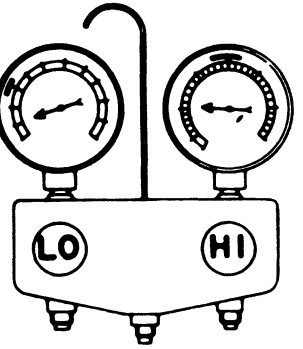Condition	Probable cause	Corrective action
<p><b>MALFUNCTIONING CONDENSER</b></p>  <p>AC361A</p>	<p>No cooling action: engine may overheat. Bubbles appear in sight glass of drier. Suction line is very hot.</p> <p>Usually a malfunctioning condenser.</p>	<ul style="list-style-type: none"> <li>● Check condenser fan motor. (Go to <b>Diagnostic Procedure 6.</b>)</li> <li>● Check fan belt and fluid coupling.</li> <li>● Check condenser for dirt accumulation.</li> <li>● Check engine cooling system for overheating.</li> <li>● Check for refrigerant overcharging.</li> </ul> <p><b>If pressure remains high in spite of all above actions taken, remove and inspect the condenser for possible oil clogging.</b></p>
<p><b>HIGH-PRESSURE LINE BLOCKED</b></p>  <p>AC362A</p>	<p>Insufficient cooling. Frosted high-pressure liquid line.</p> <p>Drier clogged, or restriction in high-pressure line.</p>	<ol style="list-style-type: none"> <li>1. Discharge system.</li> <li>2. Remove receiver drier or strainer and replace it.</li> <li>3. Evacuate and charge system.</li> </ol>
<p><b>MALFUNCTIONING COMPRESSOR</b></p>  <p>AC363A</p>	<p>Insufficient cooling.</p> <p>Internal problem in compressor, or damaged gasket and valve.</p>	<ol style="list-style-type: none"> <li>1. Discharge system.</li> <li>2. Remove and check compressor.</li> <li>3. Repair or replace compressor.</li> <li>4. Check oil level.</li> <li>5. Replace receiver drier.</li> <li>6. Evacuate and charge system.</li> </ol>


# DIAGNOSES — Overall System

## Performance Test Diagnoses (Cont'd)

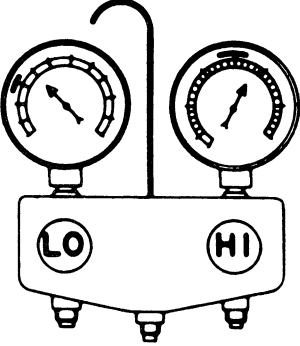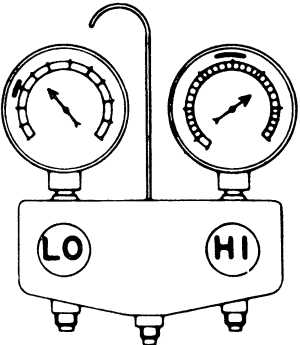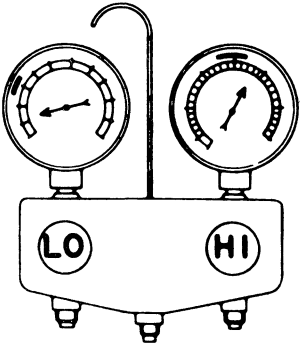Condition	Probable cause	Corrective action
<p><b>TOO MUCH OIL IN SYSTEM (Excessive)</b></p>  <p>AC364A</p>	<p>Insufficient cooling.</p>	<p>Too much oil circulates with refrigerant, causing the cooling capacity of the system to be reduced.</p> <p>Refer to COMPRESSOR OIL for correcting oil level.</p>
<p><b>AIR IN SYSTEM</b></p>  <p>AC459A</p>	<p>Insufficient cooling. Sight glass shows occasional bubbles.</p>	<p>Air mixed with refrigerant in system.</p> <ol style="list-style-type: none"> <li>1. Discharge system.</li> <li>2. Replace receiver drier.</li> <li>3. Evacuate and charge system.</li> </ol>
<p><b>MOISTURE IN SYSTEM</b></p>  <p>AC360A</p>	<p>After short operation, suction side may show vacuum pressure reading. During this condition, discharge air will be warm. As a warning of this, reading vibrates around 39 kPa (0.4 kg/cm<sup>2</sup>, 6 psi)</p>	<p>Drier is saturated with moisture. Moisture has frozen in expansion valve. Refrigerant flow is restricted.</p> <ol style="list-style-type: none"> <li>1. Discharge system.</li> <li>2. Replace receiver drier (twice if necessary).</li> <li>3. Evacuate system completely. (Repeat 30-minutes evacuating three times.)</li> <li>4. Recharge system.</li> </ol>

## LEAK CHECKING

Nominal sensitivity:  
15 - 25 g (0.53 - 0.88 oz)/year

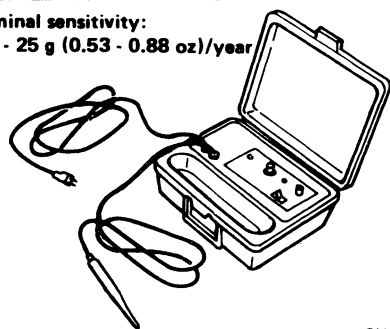

SHA733A


### Checking Refrigerant Leaks

#### ELECTRIC LEAK DETECTOR

The leak detector is a delicate device that detects small amounts of halogen.

**To use the device properly, read the manufacturer's manuals. Also perform the specified maintenance and inspections.**

#### UNION TYPE

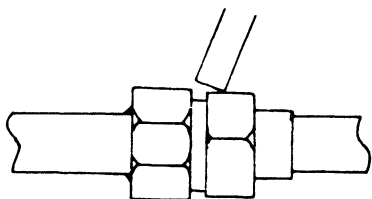

RHA279


#### GENERAL PRECAUTIONS FOR HANDLING LEAK DETECTOR

Place the probe on connection fitting and wait for 5 seconds or more.

To check cooling unit, wait for 10 seconds or more.

**Keep the probe as still as possible for one more minute.**

#### PLATE TYPE

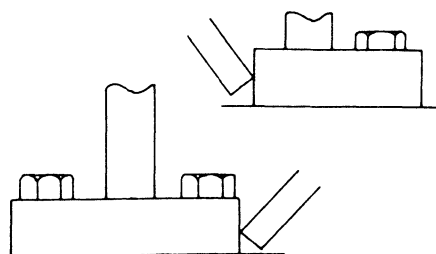

RHA280





**When testing single-bolt flange, place the probe on the opposite side of the fitting.**

#### MEASUREMENT STANDARD

**If any leak is noted with a detector having a nominal sensitivity of 15 to 25 g (0.53 to 0.88 oz)/year, that leak must be repaired.**

- The nominal sensitivity of the detector is determined under the assumption that all the leaking gas is collected by the detector. Accordingly, the quantity of gas actually leaking can amount to five to ten times the indicated value. Generally speaking, leakage of 150 to 200 g (5.29 to 7.05 oz) of refrigerant can cause insufficient cooling.
- Oil deposited during assembling must be wiped off before inspection. Refrigerant easily dissolves in oil, and the presence of oil can cause an error in measurement. This precaution is important when checking a used car for refrigerant leakage.
- If oil is noted at or around connections, it indicates that refrigerant is leaking.

## PRECAUTIONS FOR REFRIGERANT CONNECTIONS

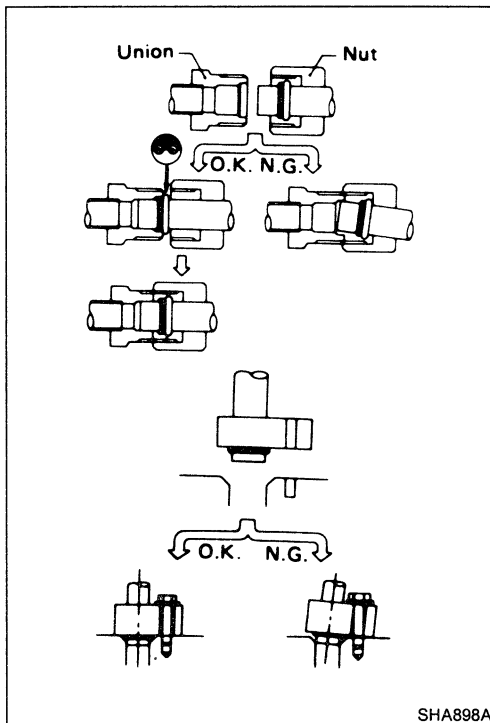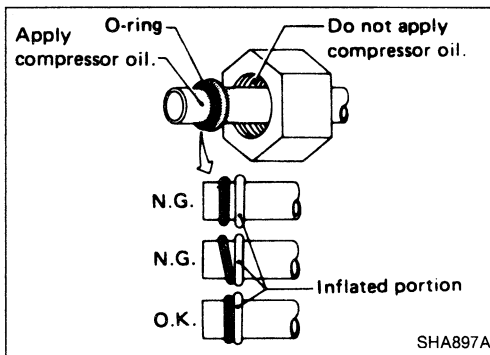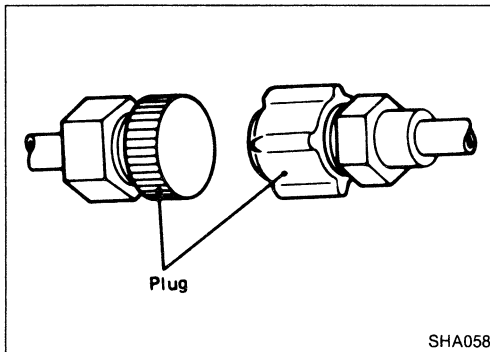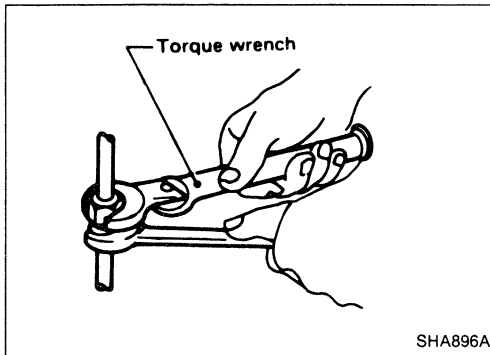

### Precautions for Refrigerant Connections

Gradually loosen discharge side hose fitting, and remove it after remaining pressure has been released.

#### CAUTION:


When replacing or cleaning refrigerant cycle components, observe the following.

- Do not leave compressor on its side or upside down for more than 10 minutes, as compressor oil will enter low pressure chamber.
- When connecting tubes, always use a torque wrench.
- After disconnecting tubes, plug all openings immediately to prevent entrance of dirt and moisture.

- Always replace used O-rings.
- When connecting tube, apply compressor oil to portions shown in illustration. Be careful not to apply oil to threaded portion.
- O-ring must be closely attached to inflated portion of tube.

- After inserting tube into union until O-ring is no longer visible, tighten nut to specified torque.
- After connecting line, conduct leak test and make sure that there is no leakage from connections. When the gas leaking point is found, disconnect that line and replace the O-ring. Then tighten connections of seal seat to the specified torque.


# DISCHARGING, EVACUATING, CHARGING AND CHECKING

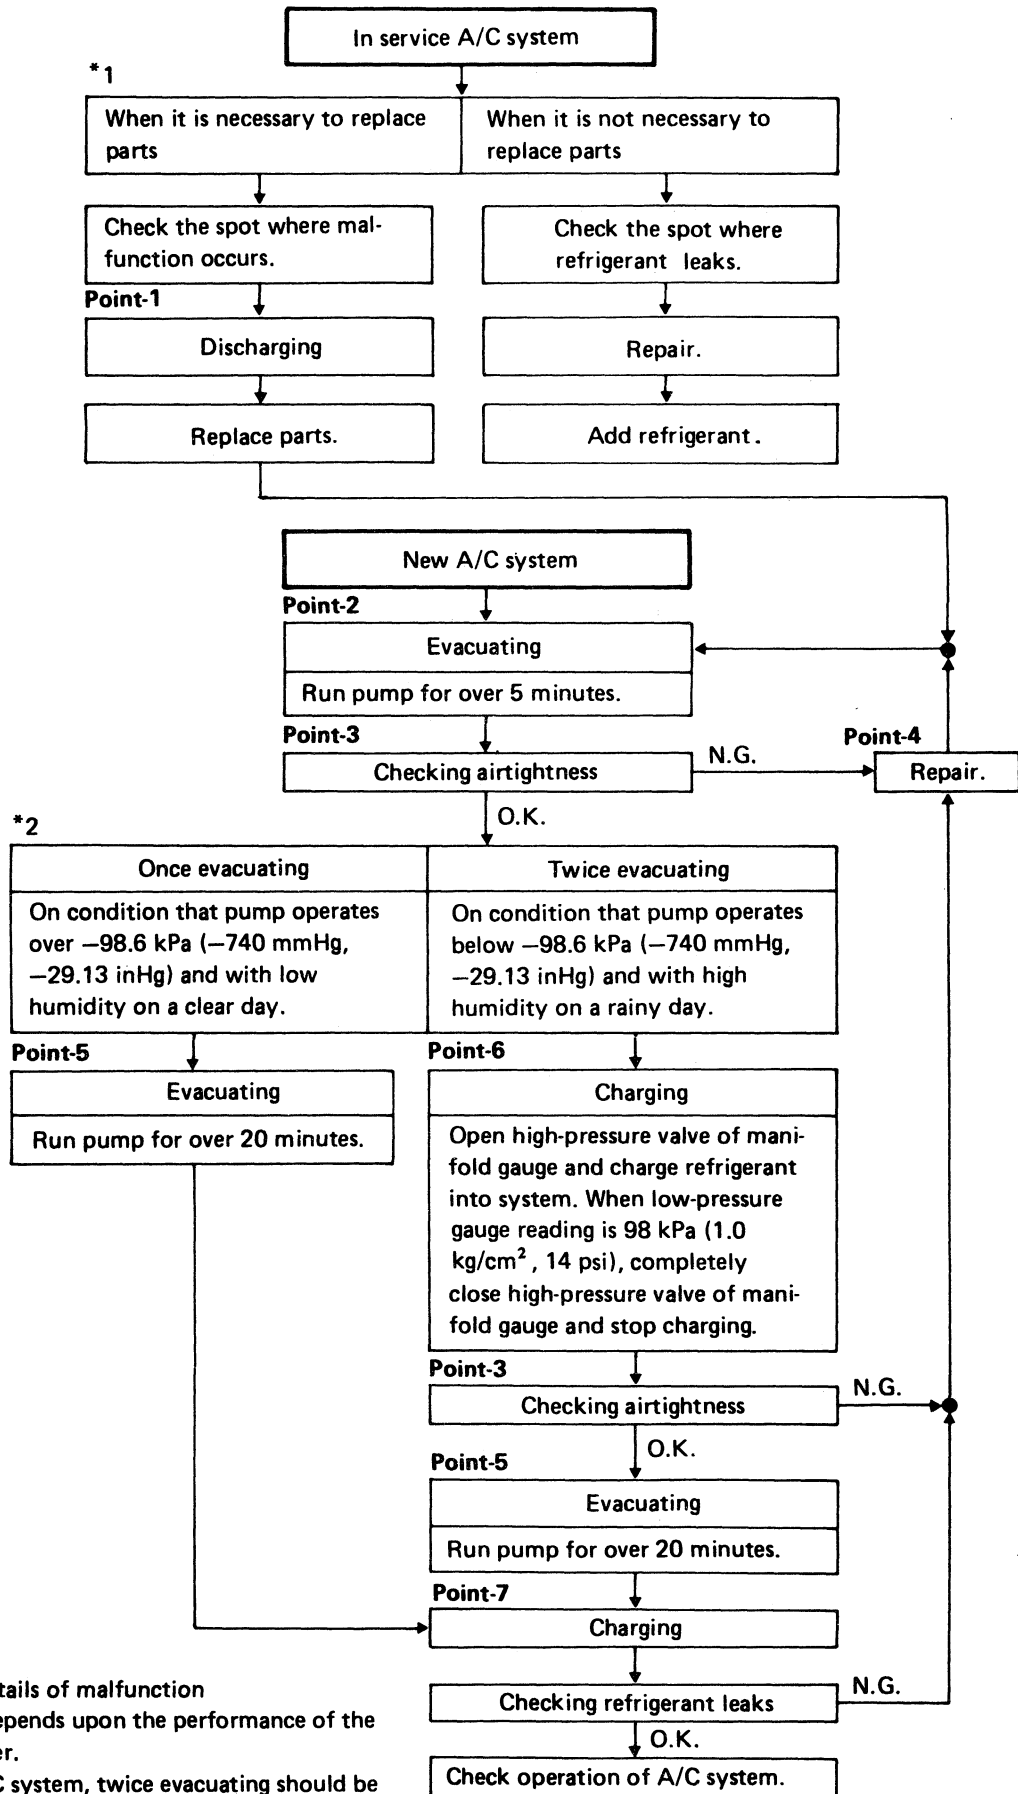

\*1: Depending on the details of malfunction


\*2: Working operation depends upon the performance of the pump and the weather.  
In case of service A/C system, twice evacuating should be done under any condition.

# DISCHARGING, EVACUATING, CHARGING AND CHECKING

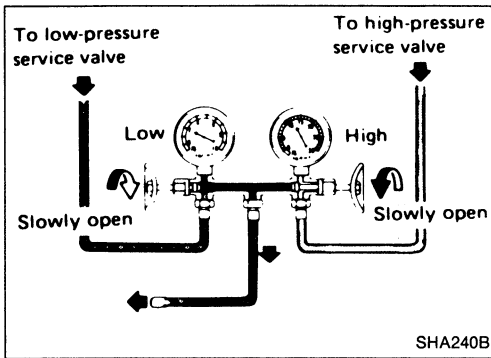

## Point-1 Discharging

Slowly open the valves to discharge only refrigerant. If they are opened quickly, compressor oil will also be discharged.

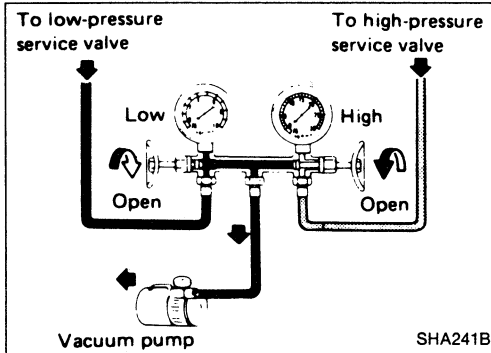

## Point-2 Evacuating the System

1. Start pump, then open both valves and run pump for over 5 minutes.
2. When low gauge has reached approx. 98.6 to 101.3 kPa (740 to 760 mmHg, 29.13 to 29.92 inHg), completely close both valves of gauge and stop vacuum pump.
  - a. The low-pressure gauge reads lower by 3.3 kPa (25 mmHg, 0.98 inHg) per 300 m (1,000 ft) elevation. Perform evacuation according to the following table.
  - b. The rate ascension of the low-pressure gauge should be less than 3.3 kPa (25 mmHg, 0.98 inHg) in 5 minutes.

Elevation m (ft)	Vacuum of system* kPa (mmHg, inHg)
0 (0)	101.3 (760, 29.92)
300 (1,000)	98.0 (735, 28.94)
600 (2,000)	94.6 (710, 27.95)
900 (3,000)	91.3 (685, 26.97)

\*: Values show reading of the low-pressure gauge.

## Point-3 Checking Airtightness


1. Close both low and high-pressure valves and leave them unattended for approx. 5 to 10 minutes.
2. Make sure the pointer of the low-pressure gauge does not deflect toward the "0" direction.
3. If the pointer deflects, gas leakage is present. Repair as outlined under [Point-4](#).

## Point-4 Repair

If a malfunction is noticed under [Point-3](#) above, locate and repair the leaking point using the following table as a guide.

Leak at/around pipe connection	Leak at/around gauge manifold
<ul style="list-style-type: none"> <li>● O-ring fouled, damaged or deformed</li> <li>● Oil not applied to pipe connections during installation</li> <li>● Pipe connections not properly tightened (too tight or too loose)</li> </ul>	<ul style="list-style-type: none"> <li>● Malfunctioning charging hose</li> <li>● Gauge improperly installed</li> <li>● Malfunctioning valve</li> <li>● Malfunctioning packing, etc.</li> </ul>


# DISCHARGING, EVACUATING, CHARGING AND CHECKING

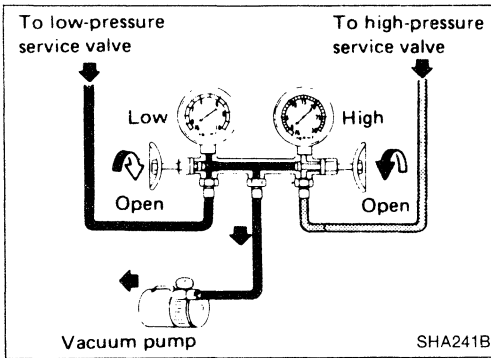

## Point-5

### Evacuating the System


1. Close manifold gauge valve securely and disconnect charging hose from refrigerant can.
2. Connect center charging hose to vacuum pump.
3. Start pump, then open both valves and run pump for over 20 minutes.

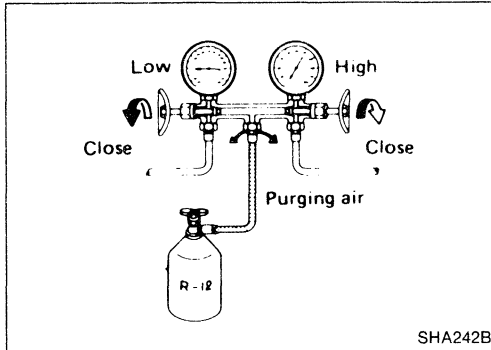

## Point-6

### Charging

1. Close manifold gauge valves securely and disconnect charging hose from vacuum pump.
2. Purge air from center charging hose.
  - 1) Connect center charging hose to refrigerant can through charge valve.
  - 2) Break seal of refrigerant can and purge air.

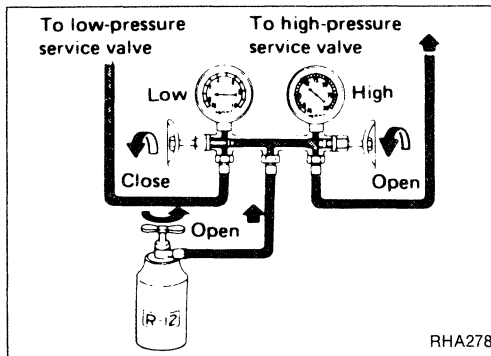


3. Charge refrigerant into system.

### WARNING:

Ensure that engine is off.

- 1) Open high-pressure valve of manifold gauge and charge refrigerant into system.

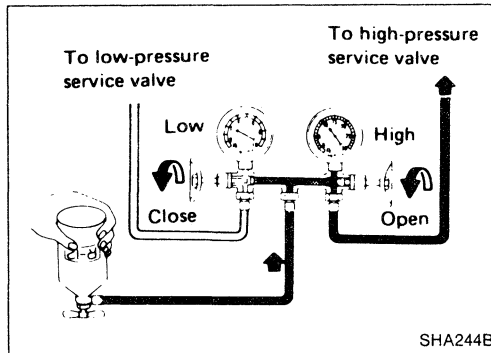


### CAUTION:

If charging liquefied refrigerant into the system with the can turned upside down to reduce charging time, charge it only through high-pressure (discharge) service valve. After charging, the compressor should always be turned several times manually.

- 2) When low-pressure gauge reading is 98 kPa (1.0 kg/cm<sup>2</sup>, 14 psi), completely close high-pressure valve of manifold gauge and stop charging.



# DISCHARGING, EVACUATING, CHARGING AND CHECKING

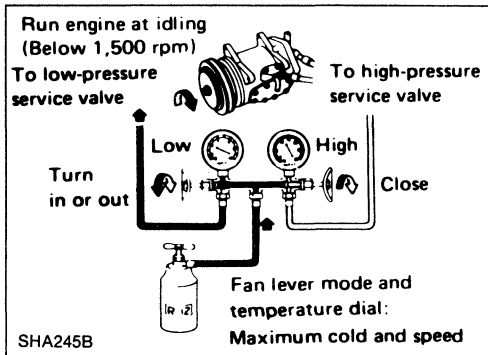

## Point-7 Charging

1. Open manifold gauge low-pressure valve and charge refrigerant into system.

### WARNING:

Ensure that engine is off.


2. When refrigerant charging speed slows down, start engine — Air conditioning system ON, maximum cold temperature set, maximum blower speed with can in upright position. Monitor sight glass. Charge is complete when sight glass is clear.

Cycling clutch systems will produce bubbles in sight glass when clutch engages. Therefore, allow 5 seconds after clutch engages to determine if bubbles continue, and, if so, add refrigerant to clear sight glass.

### WARNING:

Never charge refrigerant through high-pressure side (discharge side) of system since this will force refrigerant back into refrigerant can and it may explode.

3. Charge refrigerant while controlling low-pressure gauge reading at 275 kPa (2.8 kg/cm<sup>2</sup>, 40 psi) or less by turning in or out low-pressure valve of manifold gauge.
- Be sure to purge air from charging hose when replacing can with a new one.

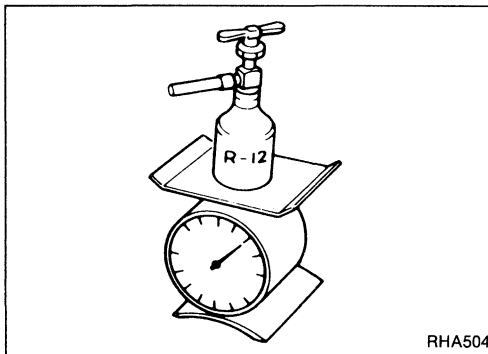

4. Charge the specified amount of refrigerant into system by weighing charged refrigerant with scale. Overcharging will cause discharge pressure to rise.

### Refrigerant amount:

0.9 - 1.0 kg (2.0 - 2.2 lb)

### Point-7

#### Charging (Cont'd)

The state of the bubbles in sight glass can only be used for checking whether the amount of charged refrigerant is small or not. The amount of charged refrigerant should be correctly judged by means of discharge pressure.

5. After charging, be sure to install valve cap on service valve.
6. Confirm that there are no leaks in system by checking with a leak detector.
- When refrigerant charging is performed with a charging cylinder, charging station, or automatic charging equipment, engine off, charge only through high side, after specified refrigerant amount has entered the system, close high-pressure valve on gauge set. Start engine return to idle speed, operate A/C at maximum temperature setting, high blower. Observe sight glass to confirm complete charge.

**Overcharging will result in increased high pressures, and reduced performance.**

# COMPRESSOR OIL — For DKS-16H (DIESEL-KIKI make)

## Checking and Adjusting

The oil used to lubricate the compressor is circulating with the refrigerant. Whenever replacing any component of the system or a large amount of gas leakage occurs, add oil to maintain the original amount of oil.

### OIL CAPACITY

Unit: mℓ(US fl oz, Imp fl oz)

Applied model	All models
Capacity	
Total in system	200 (6.8, 7.0)
Amount of oil which can be drained	130 (4.4, 4.6)*
Compressor (Service parts) charging amount	200 (6.8, 7.0)

\*: All oil cannot be drained from system.

### OIL RETURN OPERATION

Before checking and adjusting oil level, operate compressor at engine idling speed, with controls set for maximum cooling and high blower speed, for 20 to 30 minutes in order to return oil to compressor.

### CHECKING AND ADJUSTING FOR USED COMPRESSOR

- After oil return operation, stop the engine and discharge refrigerant and then remove compressor from the vehicle.
- Remove oil drain plug, drain compressor oil from compressor oil sump and measure the amount.

**Oil is sometimes hard to extract when compressor is cooled. Remove oil while compressor is warm [maintained to 40 to 50°C (104 to 122°F)].**

- If the amount is less than 130 mℓ(4.4 US fl oz, 4.6 Imp fl oz), some refrigerant may have leaked out. Conduct leak tests on connections of each system, and if necessary, repair or replace malfunctioning parts.

- Check the purity of the oil and then adjust oil level following the procedure below.
  - When oil is clean;

Unit: mℓ(US fl oz, Imp fl oz)

Amount of oil drained	Adjusting procedure
Above 130 (4.4, 4.6)*	Oil level is right. Pour in same amount of oil as was drained out.
Below 130 (4.4, 4.6)	Oil level may be low. Pour in 130 mℓ(4.4 US fl oz, 4.6 Imp fl oz) of oil.

\*: If amount of oil drained is much greater than under normal circumstances, flush air conditioner system with refrigerant. Then pour 200 mℓ(6.8 US fl oz, 7.0 Imp fl oz) of oil into air conditioner system.

- When oil contains chips or foreign material;  
After air conditioner system has been flushed with refrigerant, replace receiver drier. Then pour 200 mℓ (6.8 US fl oz, 7.0 Imp fl oz) of oil into air conditioner system.

### CHECKING AND ADJUSTING FOR COMPRESSOR REPLACEMENT

200 mℓ(6.8 US fl oz, 7.0 Imp fl oz) of oil is charged in compressor (service parts). So it is necessary to drain the proper amount of oil from new compressor. Follow the procedure below.

- After oil return operation, drain compressor oil from used compressor and measure the amount.  
(It is the same procedure as CHECKING AND ADJUSTING FOR USED COMPRESSOR.)
- Check the purity of the oil and then adjust oil level following the procedure below.
  - Oil is clean;

Unit: mℓ(US fl oz, Imp fl oz)

Amount of oil drained from used compressor	Draining amount of oil from new compressor
Above 130 (4.4, 4.6)*	200 (6.8, 7.0) — [Amount of oil drained + 25 (0.8, 0.9)]
Below 130 (4.4, 4.6)	130 (4.4, 4.6)

\*: If amount of oil drained is much greater than under normal circumstances, flush air conditioner system with refrigerant. Then install new compressor. [200 mℓ(6.8 US fl oz, 7.0 Imp fl oz) of oil is charged in compressor service parts.]

# COMPRESSOR OIL — For DKS-16H (DIESEL-KIKI make)

## Checking and Adjusting (Cont'd)

Example:


Unit: ml(US fl oz, Imp fl oz)

Amount of oil drained from used compressor	Draining amount of oil from new compressor
145 (4.9, 5.1)	30 (1.0, 1.1)
95 (3.2, 3.3)	130 (4.4, 4.6)

(b) When oil contains chips or foreign material;

After air conditioner system has been flushed with refrigerant, replace receiver drier. Then install new compressor. [200 ml (6.8 US fl oz, 7.0 Imp fl oz) of oil is charged in compressor service parts.]

## Compressor Mounting

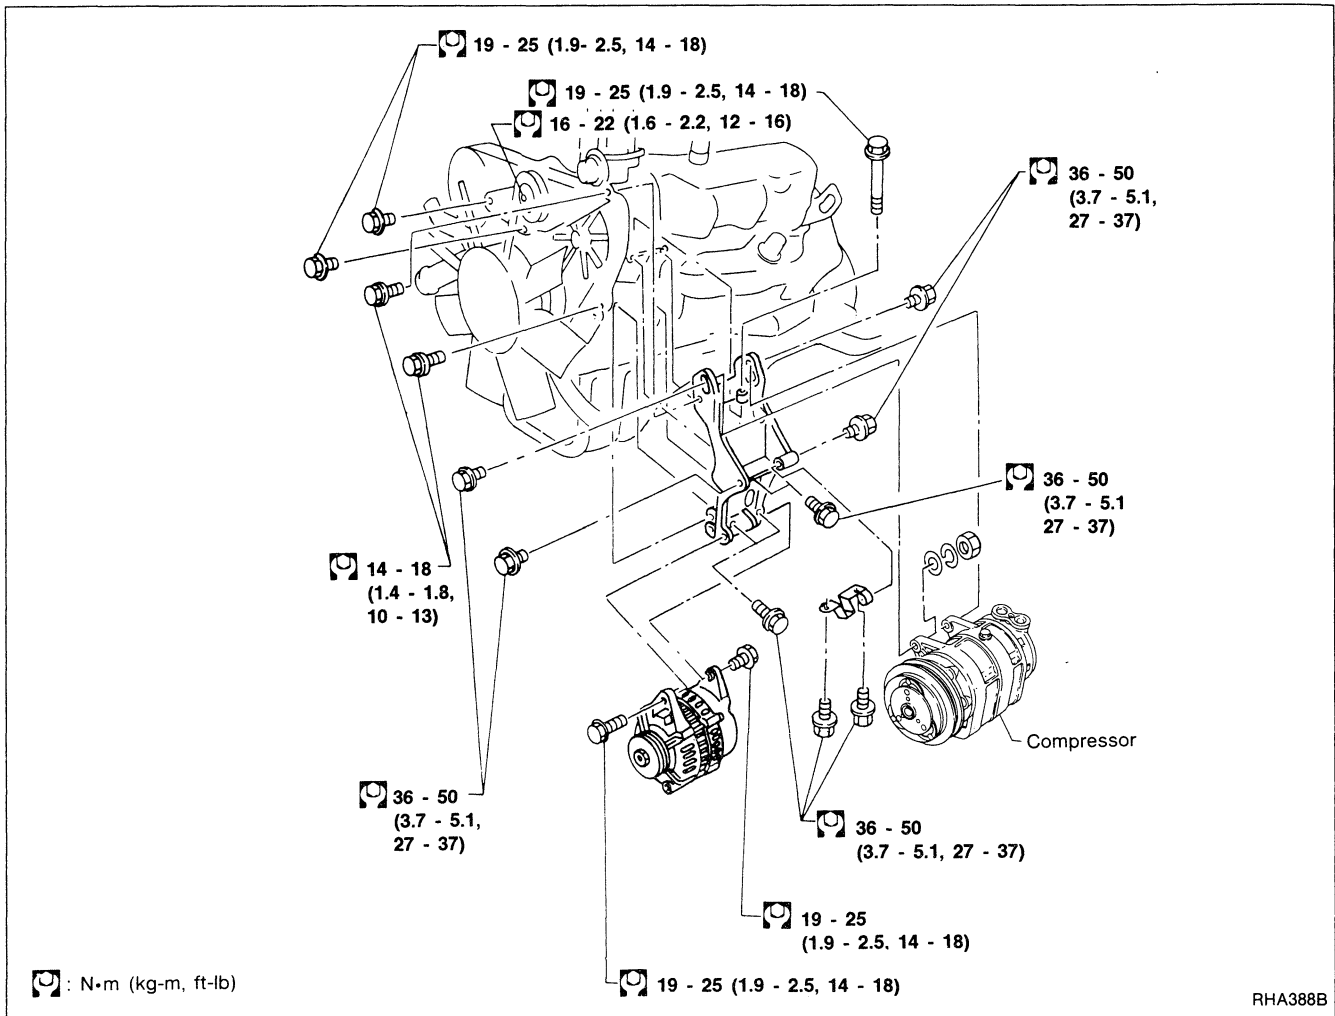

### Belt Tension

- Refer to MA section.

### Fast Idle Control Device (F.I.C.D.)

- Refer to EF & EC section.




### **General Precautions when Servicing the Compressor**

- **Plug all openings to prevent moisture and foreign matter from entering.**
- **Do not leave compressor on its side or upside down for more than 10 minutes.**
- **When replacing or repairing compressor, check compressor oil level in system.**
- **When replacing with a new compressor, drain specified oil from new compressor. Refer to COMPRESSOR OIL.**
- **Be sure there is no oil or dirt on frictional surface of clutch disc and pulley.**
- **When replacing compressor clutch, be careful not to scratch shaft or bend pulley.**
- **When replacing compressor clutch assembly, do not forget BREAK-IN OPERATION.**
- **When storing a compressor, be sure to fill it with refrigerant to prevent rust formation. Add refrigerant at the low-pressure side and purge air at the high-pressure side, while rotating shaft by hand.**
- **Replace shaft seal, seal seat, oil seal and O-ring as a set.**
- **When installing shaft seal, seal seat, oil seal, O-ring and gaskets, apply compressor oil sparingly to the contact surface. Do not reuse them.**
- **After replacement or repairs, conduct a Leak Test.**

# SERVICE PROCEDURES

## Refrigerant Lines

- Refer to page HA-27 regarding "Precautions for Refrigerant Connections".

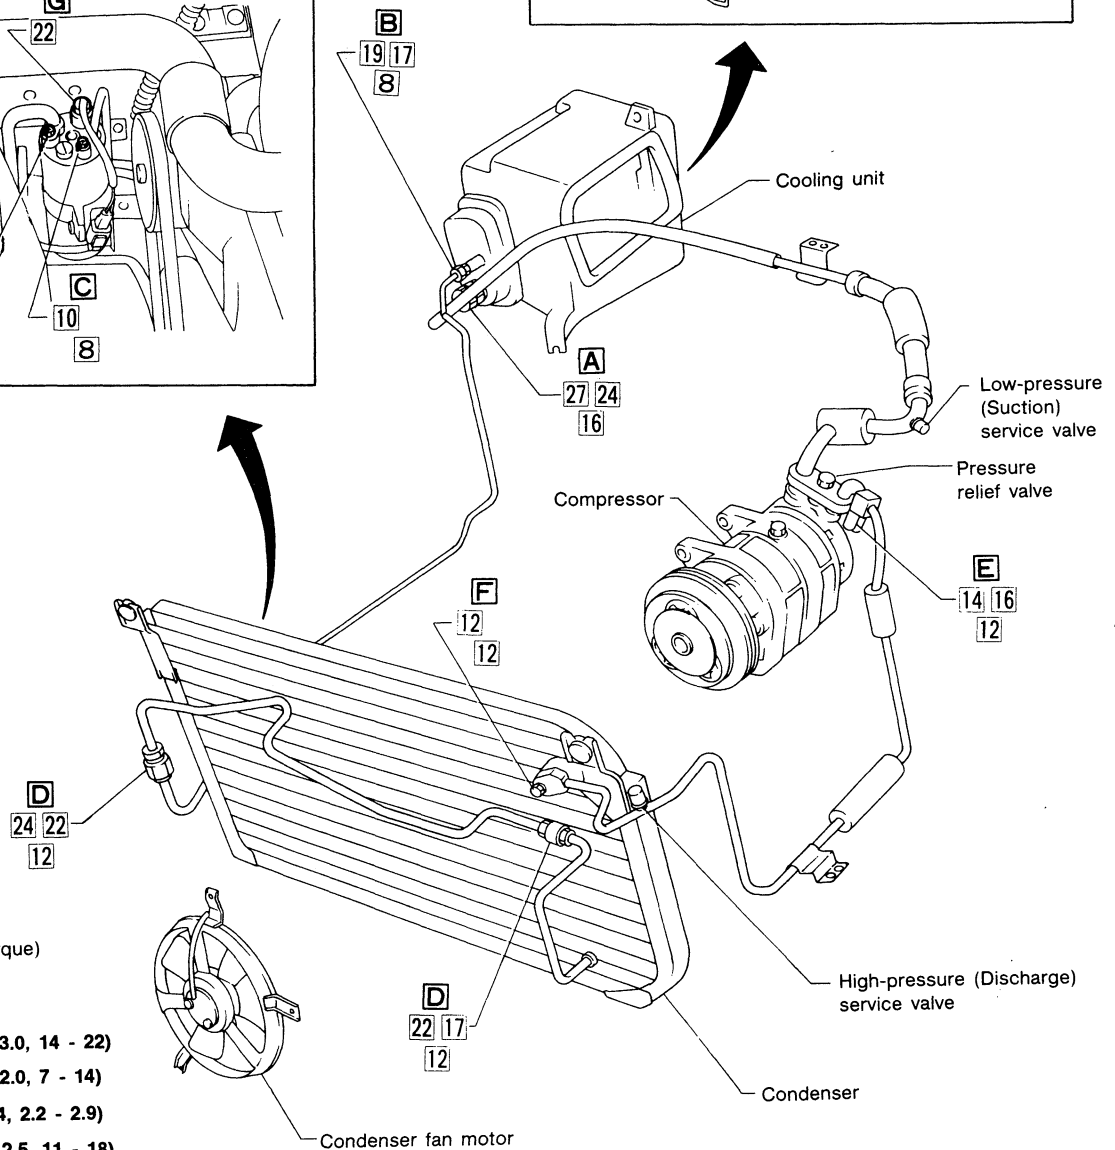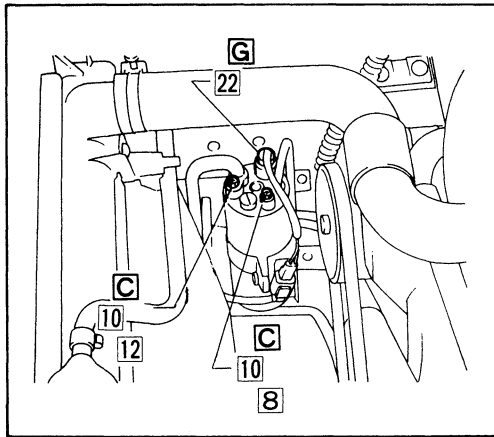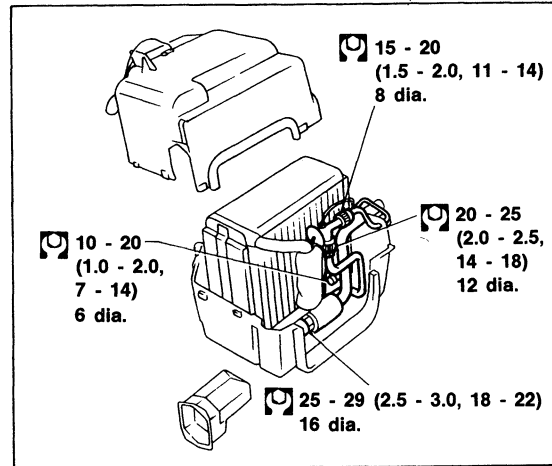

□ (Tightening torque)  
 □ (Wrench size)  
 □ (O-ring size)

**A** : 20 - 29 (2.0 - 3.0, 14 - 22)

**B** : 10 - 20 (1.0 - 2.0, 7 - 14)

**C** : 3 - 4 (0.3 - 0.4, 2.2 - 2.9)

**D** : 15 - 25 (1.5 - 2.5, 11 - 18)

**E** : 16 - 22 (1.6 - 2.2, 12 - 16)


**F** : 8 - 11 (0.8 - 1.1, 5.8 - 8.0)


**G** : 10 - 12 (1.0 - 1.2, 7 - 9)

Ⓜ : N·m (kg·m, ft·lb)

RHA389B

# COMPRESSOR — Model DKS-16H (DIESEL-KIKI make)

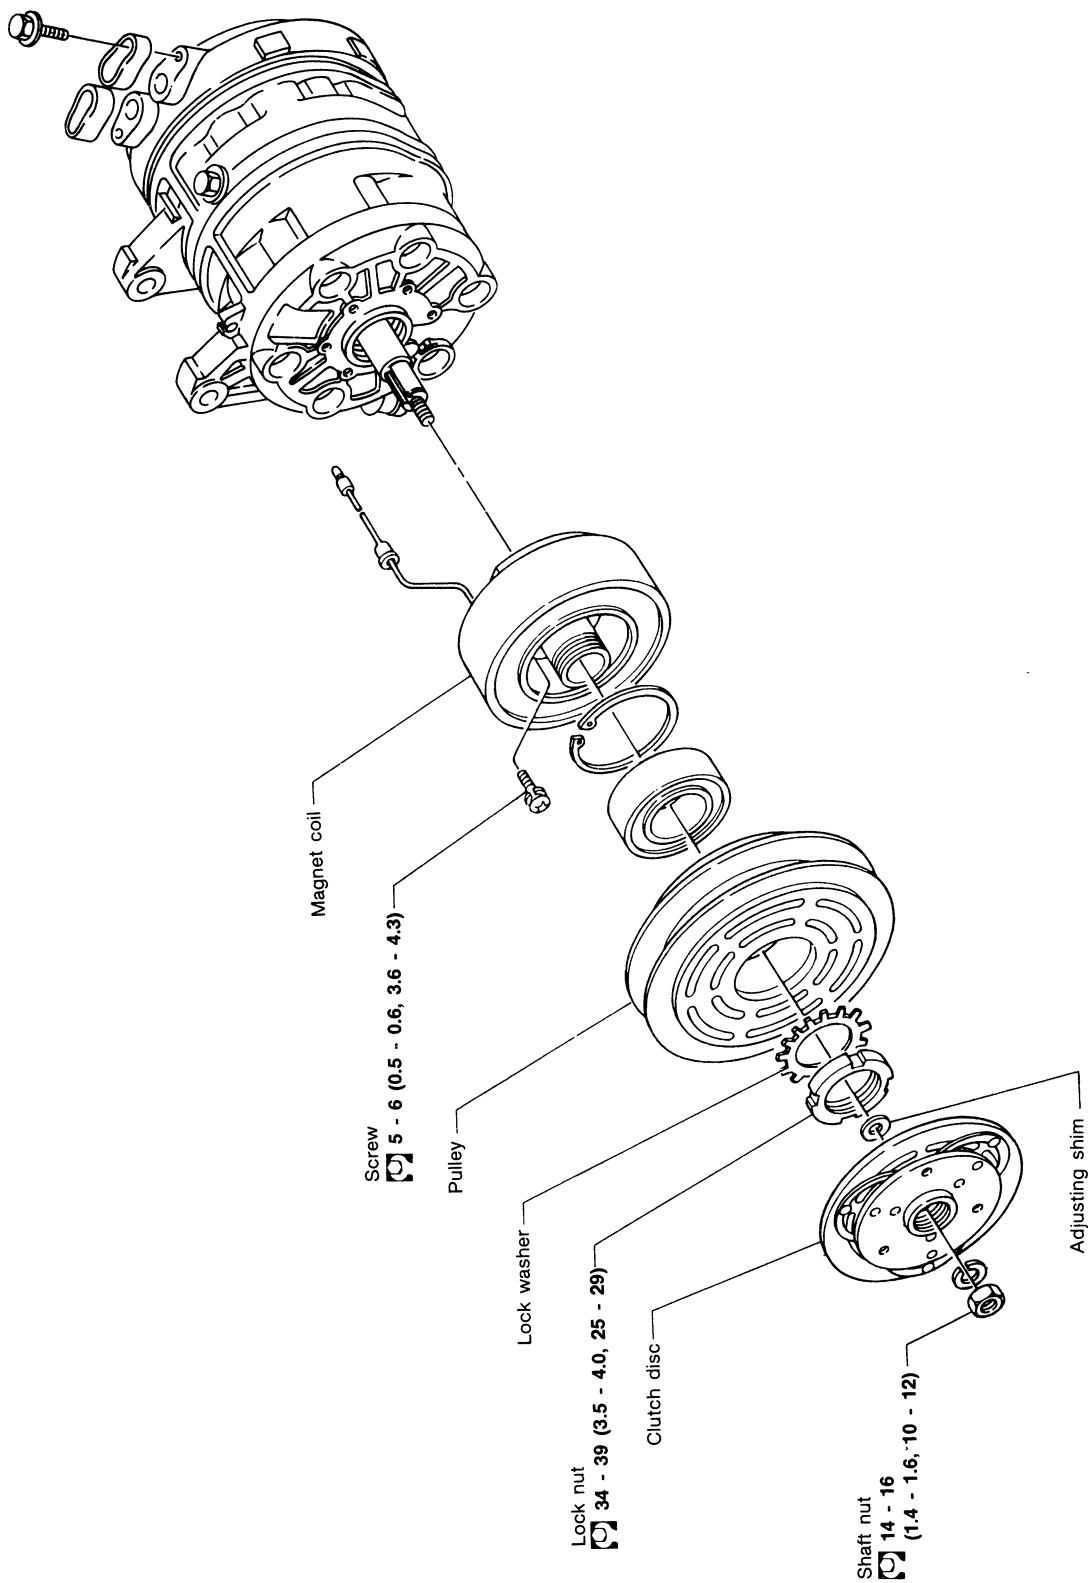


 : N·m (kg-m, ft-lb)




## Compressor Clutch


### REMOVAL

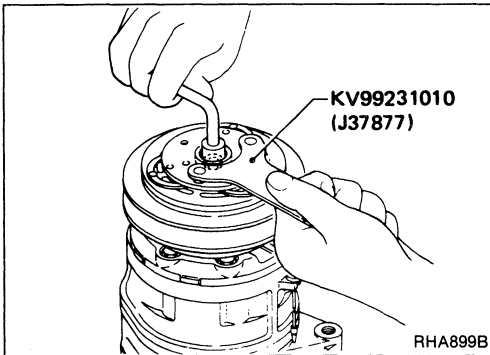


- When removing shaft nut, hold clutch disc with clutch disc wrench.

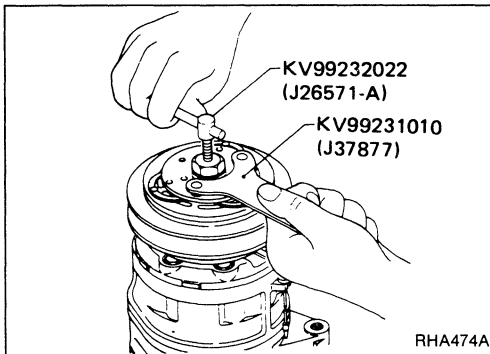

- Using clutch disc puller, clutch disc can be removed easily.

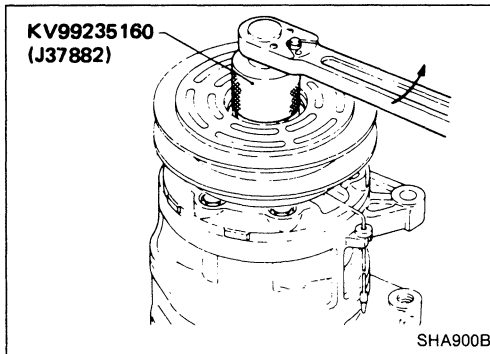

- Bend down pawl of lock washer.
- When removing pulley, remove lock nut with nut wrench.

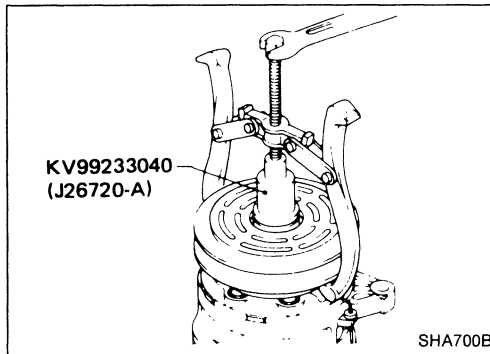

- Remove the pulley by hand. If difficult, use puller pilot.

# COMPRESSOR — Model DKS-16H (DIESEL-KIKI make)

## Compressor Clutch (Cont'd)

### INSPECTION

#### Clutch disc


If the contact surface shows signs of damage due to excessive heat, the drive plate and pulley should be replaced.

#### Pulley


Check the appearance of the pulley assembly. If the contact surface of the pulley shows signs of excessive grooving due to slippage, both the pulley and drive plate should be replaced. The contact surfaces of the pulley assembly should be cleaned with a suitable solvent before reinstallation.

#### Coil


Check coil for loose connection or cracked insulation.

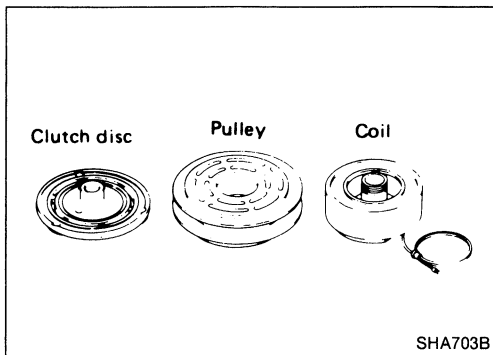


SHA703B

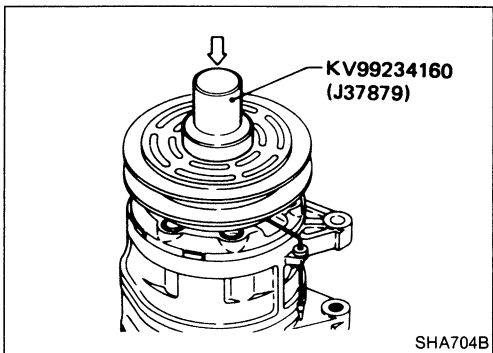

SHA704B

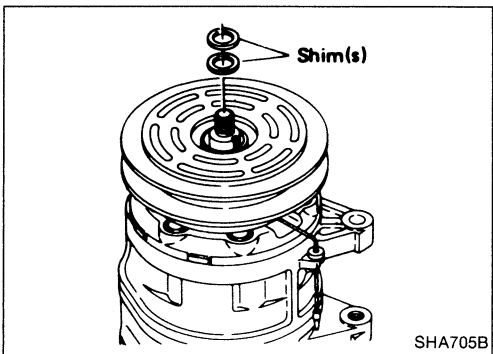

SHA705B

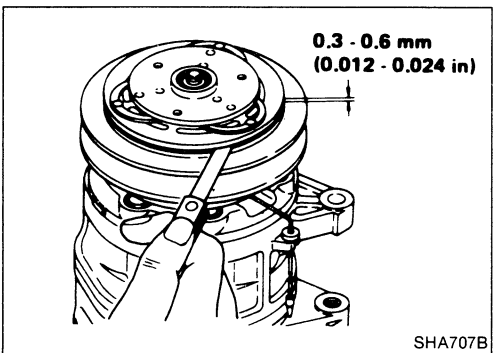

SHA707B

### INSTALLATION

- Install the key in the keyway on the compressor drive shaft.
- Install the coil to compressor (lead wire up) and tighten the mounting screws.
- Install the lead wire with its holder into the hold.

- Install lock washer and nut with nut wrench.
- Bend one pawl of the lock washer up against the nut to prevent the nut from loosening.

- Check to ensure that the clutch clearance is between 0.3 to 0.6 mm (0.012 to 0.024 in). Adjust the clearance using shim(s) as necessary.

### BREAK-IN OPERATION

When replacing compressor clutch assembly, do not forget break-in operation, accomplished by engaging and disengaging the clutch about thirty times.

Break-in operation raises the level of transmitted torque.

**Contents**

**Symptom Chart** ..... HA-42

**Preliminary Check** ..... HA-44

**PRELIMINARY CHECK 1**  
    (Intake door is not set at "FRESH" in DEF or F/D mode.) ..... HA-44

**PRELIMINARY CHECK 2**  
    (A/C does not blow cold air.) ..... HA-45

**PRELIMINARY CHECK 3**  
    (Magnet clutch does not engage in DEF mode.) ..... HA-46

**PRELIMINARY CHECK 4**  
    (Air outlet does not change.) ..... HA-47

**PRELIMINARY CHECK 5**  
    (Noise) ..... HA-48

**A/C Component Layout** ..... HA-49

**Harness Layout for A/C System** ..... HA-50

**Circuit Diagram for Quick Pinpoint Check** ..... HA-52

**Wiring Diagram** ..... HA-54

**Main Power Supply and Ground Circuit Check** ..... HA-56

**Diagnostic Procedure 1**

    SYMPTOM: Blower motor does not rotate. .... HA-57

**Diagnostic Procedure 2**

    SYMPTOM: Air outlet does not change. .... HA-60

**Diagnostic Procedure 3**

    SYMPTOM: Intake door does not change in VENT, B/L or FOOT mode. .... HA-62

**Diagnostic Procedure 4**

    SYMPTOM: Magnet clutch does not engage with A/C switch and fan switch are ON. .... HA-63

**Diagnostic Procedure 5**

    SYMPTOM: Illumination or indicators of push control unit do not come on. .... HA-67

**Diagnostic Procedure 6**

    SYMPTOM: Radiator fan motor does not operate. .... HA-71

**Electrical Components Inspection** ..... HA-73

# TROUBLE DIAGNOSES — Manual Air Conditioner

## Symptom Chart

### DIAGNOSTIC TABLE

PROCEDURE	Preliminary Check					Diagnostic Procedure						Main Power Supply and Ground Circuit Check			
REFERENCE PAGE	HA-44	HA-45	HA-46	HA-47	HA-48	HA-57 - 59	HA-60 - 61	HA-62	HA-63 - 66	HA-67 - 70	HA-71 - 72	HA-56	HA-56	HA-56	HA-56
SYMPTOM	Preliminary check 1	Preliminary check 2	Preliminary check 3	Preliminary check 4	Preliminary check 5	Diagnostic procedure 1	Diagnostic procedure 2	Diagnostic procedure 3	Diagnostic procedure 4	Diagnostic procedure 5	Diagnostic procedure 6	15A Fuses (#4 - #5)	10A Fuses (#10)	10A Fuses (#20)	Push control unit
A/C does not blow cold air.		①				○			○			○	○		
Blower motor does not rotate.		①				②						○			
Air outlet does not change.				①			②						○		○
Intake door does not change in VENT, B/L or FOOT mode.								①					○		○
Intake door is not set at "FRESH" in DEF or F/D mode.	①							○					○		○
Magnet clutch does not engage with A/C switch and fan switch are ON.		①							②				○	○	
Magnet clutch does not engage in DEF mode.		①	②						○				○	○	
Illumination or indicators of push control unit do not come on.										①			○		
Radiator fan motor does not operate.											①		○		
Noise					①										

①, ②: The number means checking order.


○: As for checking order, refer to each flow chart. (It depends on malfunctioning portion.)



## Preliminary Check

### PRELIMINARY CHECK 1

Intake door is not set at "FRESH" in DEF or F/D mode.

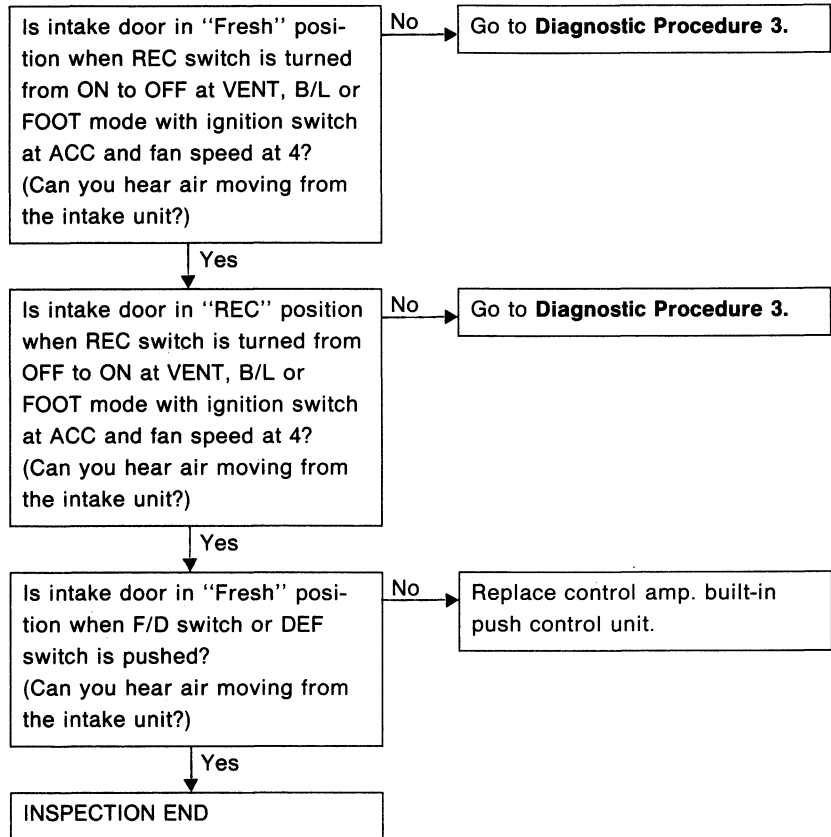


# TROUBLE DIAGNOSES — Manual Air Conditioner

## Preliminary Check (Cont'd)

### PRELIMINARY CHECK 2

A/C does not blow cold air.

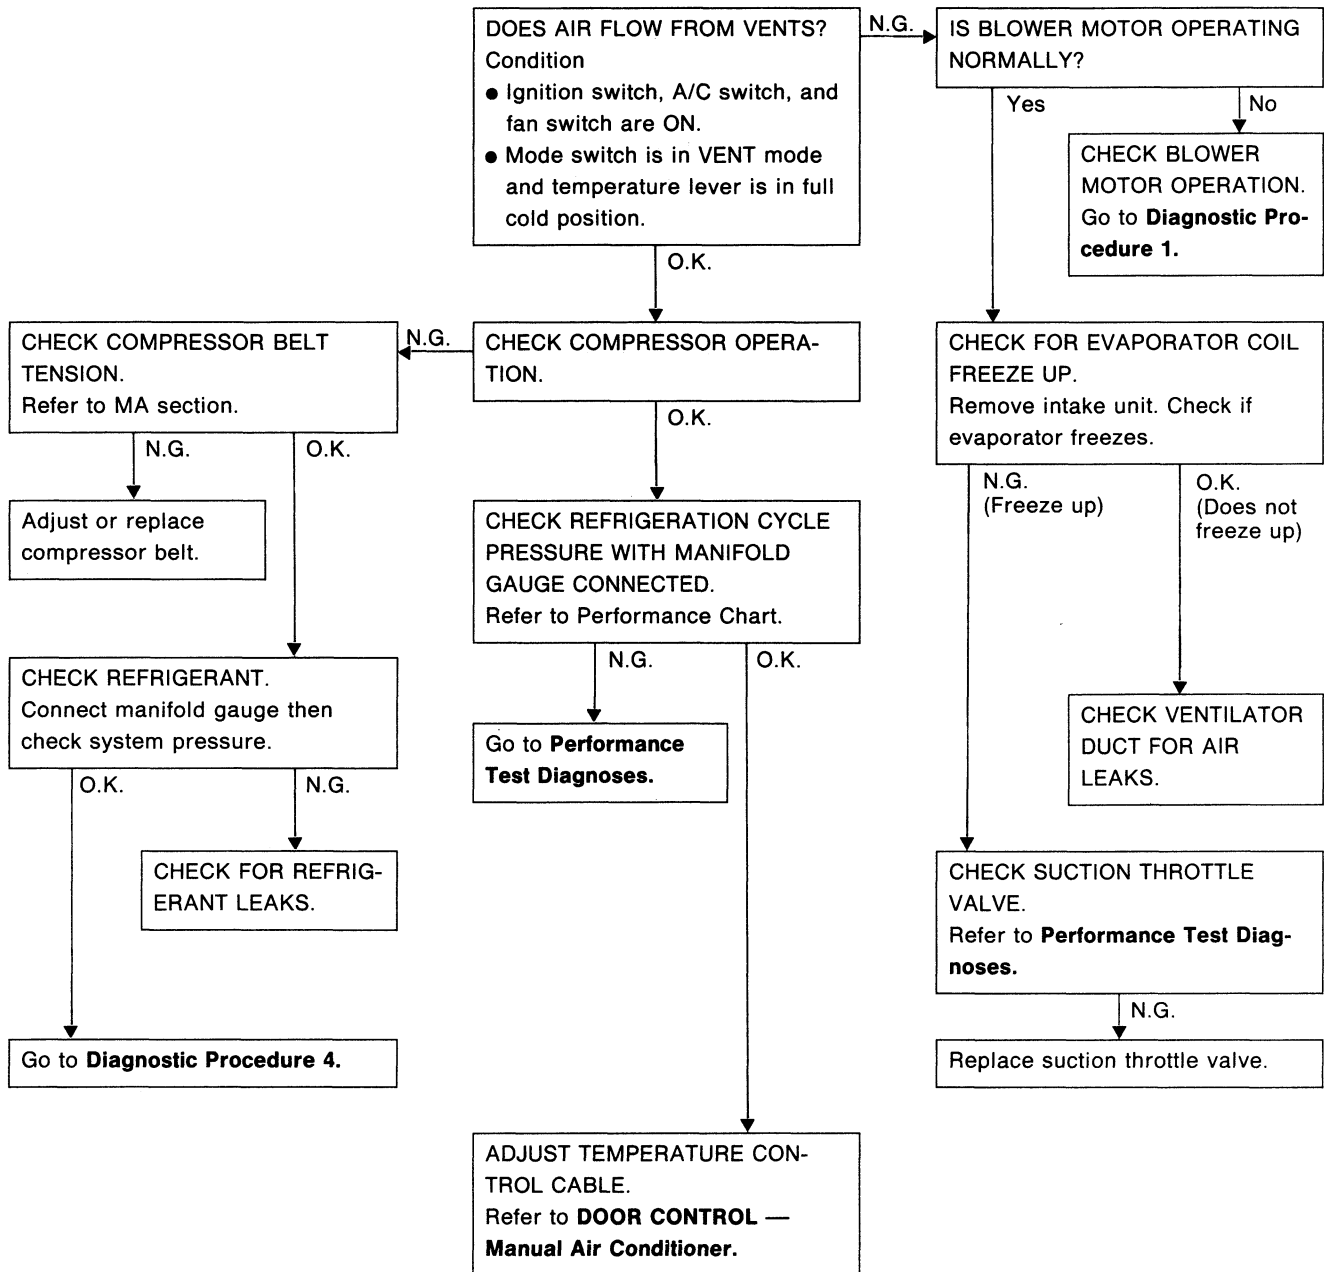


**Preliminary Check (Cont'd)**

**PRELIMINARY CHECK 3**

**Magnet clutch does not engage in DEF mode.**

- **Perform PRELIMINARY CHECK 2 before referring to the following flow chart.**

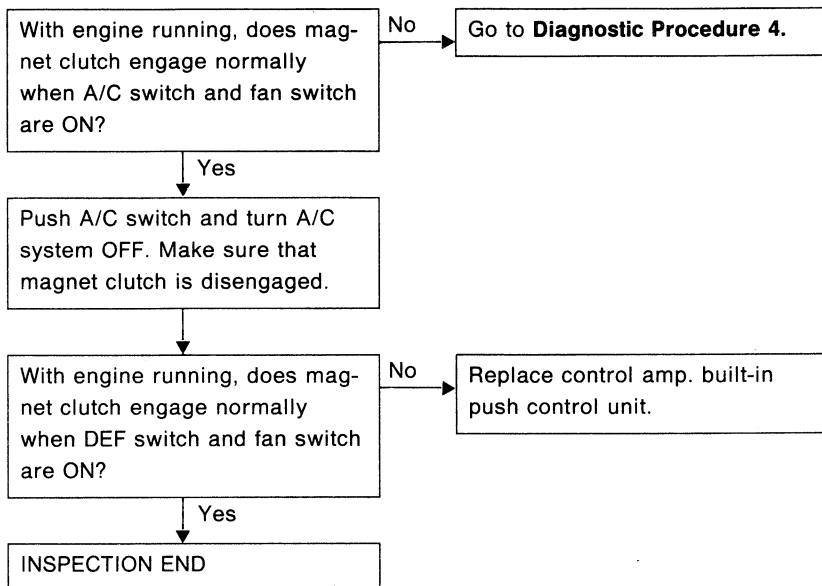



# TROUBLE DIAGNOSES — Manual Air Conditioner











## Preliminary Check (Cont'd)

### PRELIMINARY CHECK 4

**Air outlet does not change.**






DOES AIR COME OUT FROM EACH DUCT NORMALLY WHEN EACH MODE SWITCH IS PUSHED WITH IGNITION SWITCH AT ACC?

No → Go to **Diagnostic Procedure 2.**

Switch		Indicator illuminates					Air outlet
							
Mode		○					VENT
			○				FOOT & VENT
				○			FOOT & DEF
					○		FOOT & DEF
						○	DEF

**Air distribution ratios**

VENT	B/L	FOOT	F/D	DEF	
					(%)
					100
					65
					55
					35
					0

RHA391B

Yes ↓


INSPECTION END

# TROUBLE DIAGNOSES — Manual Air Conditioner

## Preliminary Check (Cont'd)


### PRELIMINARY CHECK 5

#### Noise

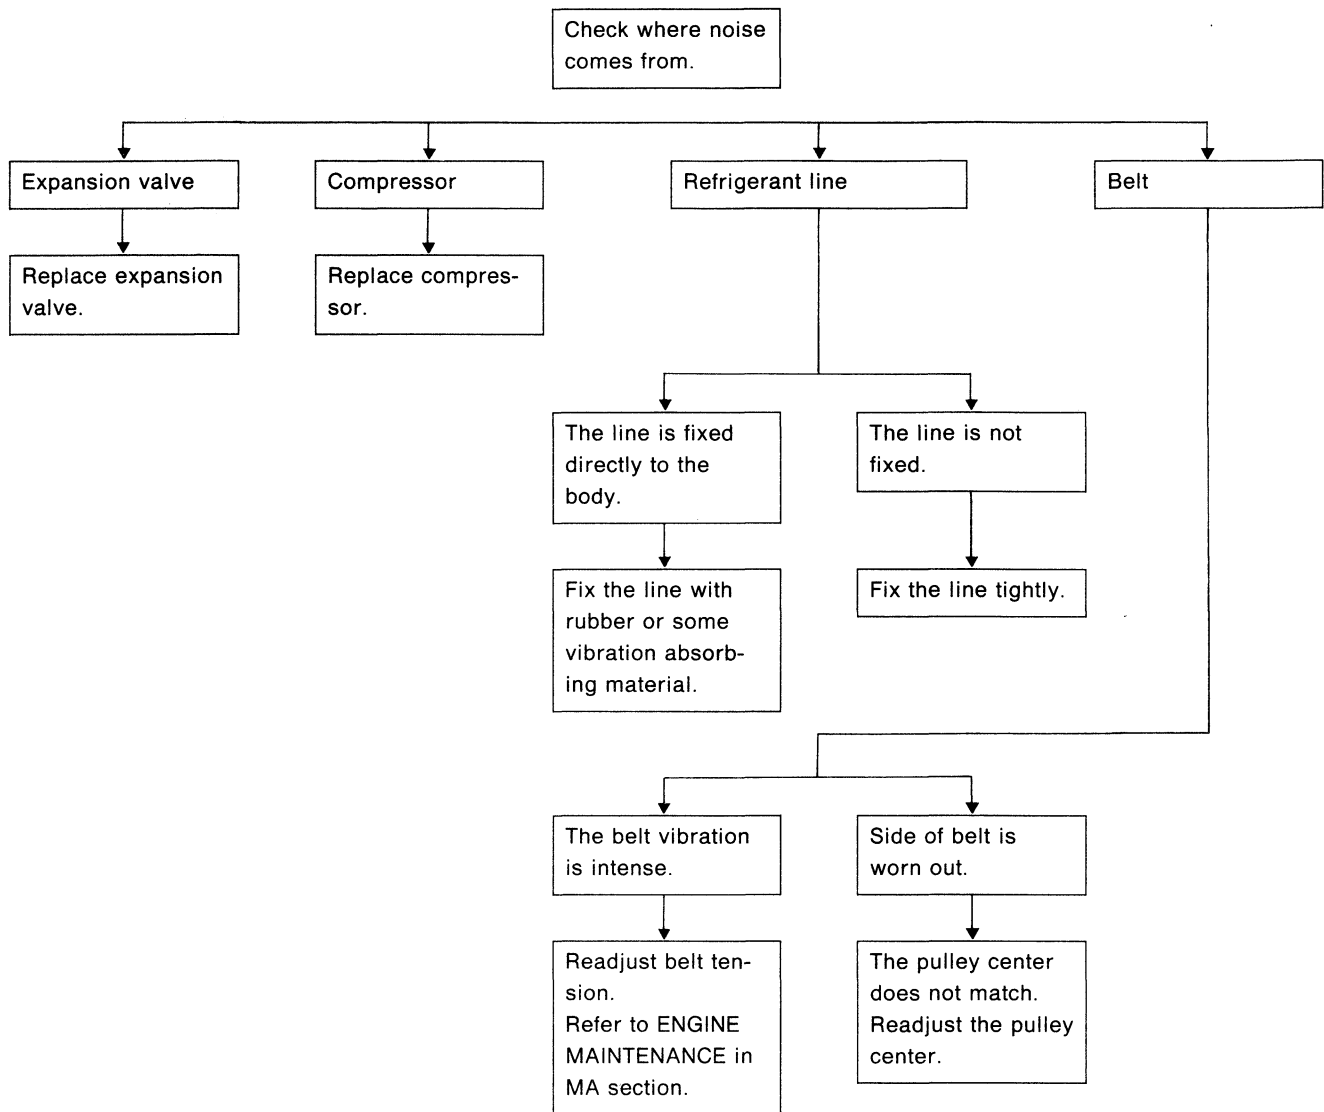


**A/C Component Layout**

**Passenger compartment**




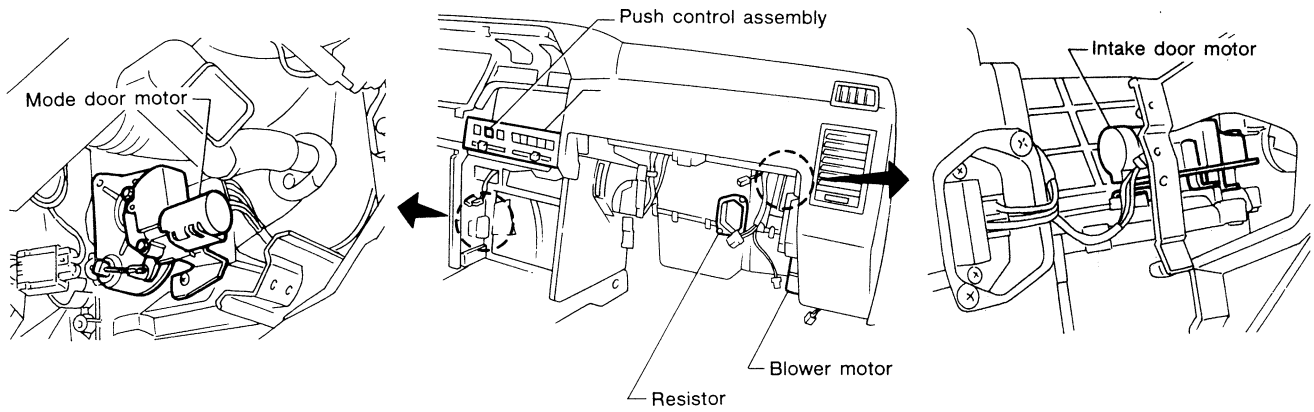


**Engine compartment**

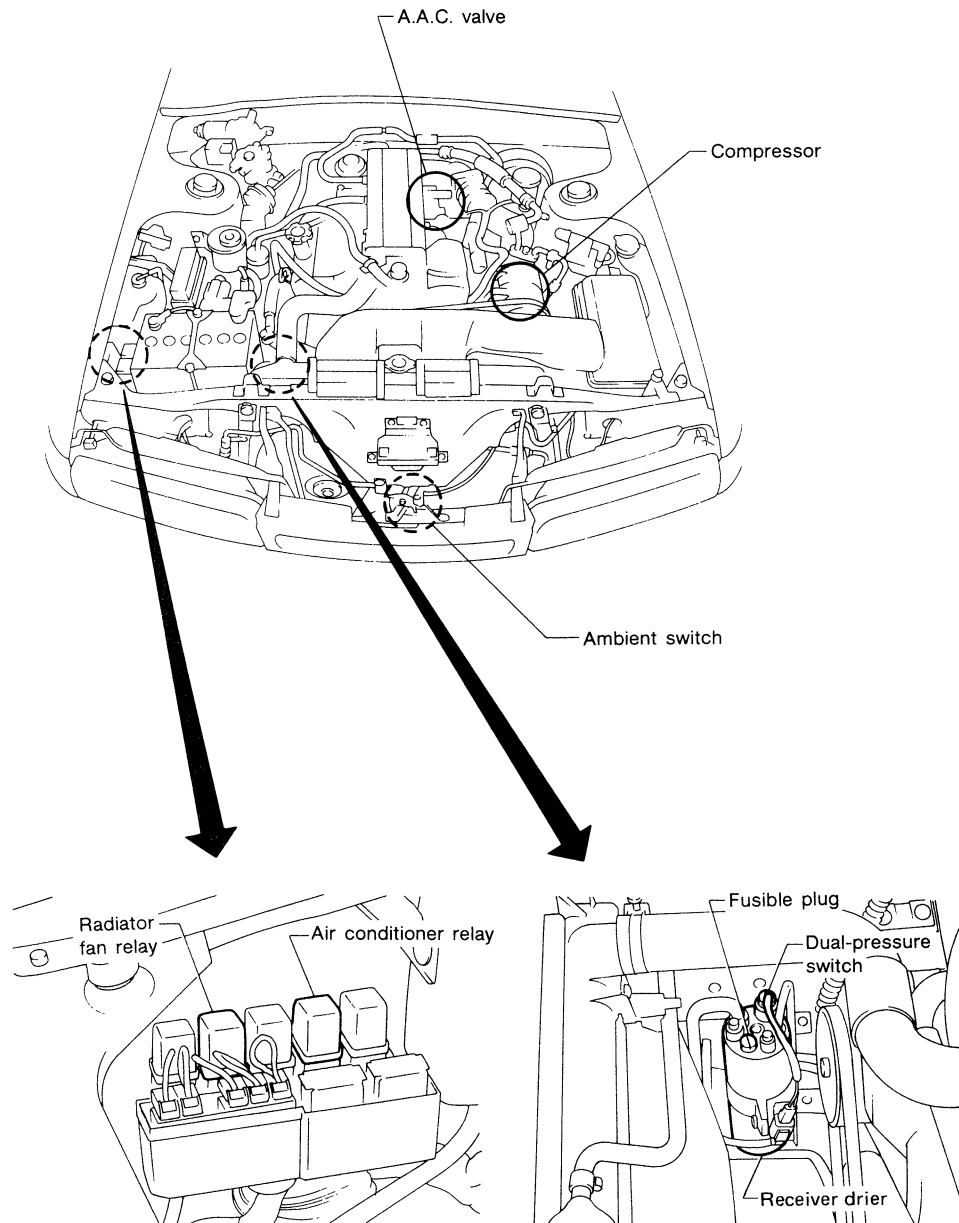


**Harness Layout for A/C System**

Engine compartment

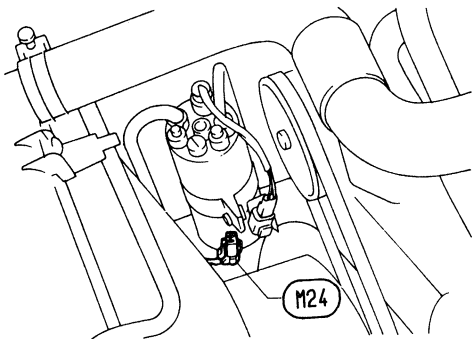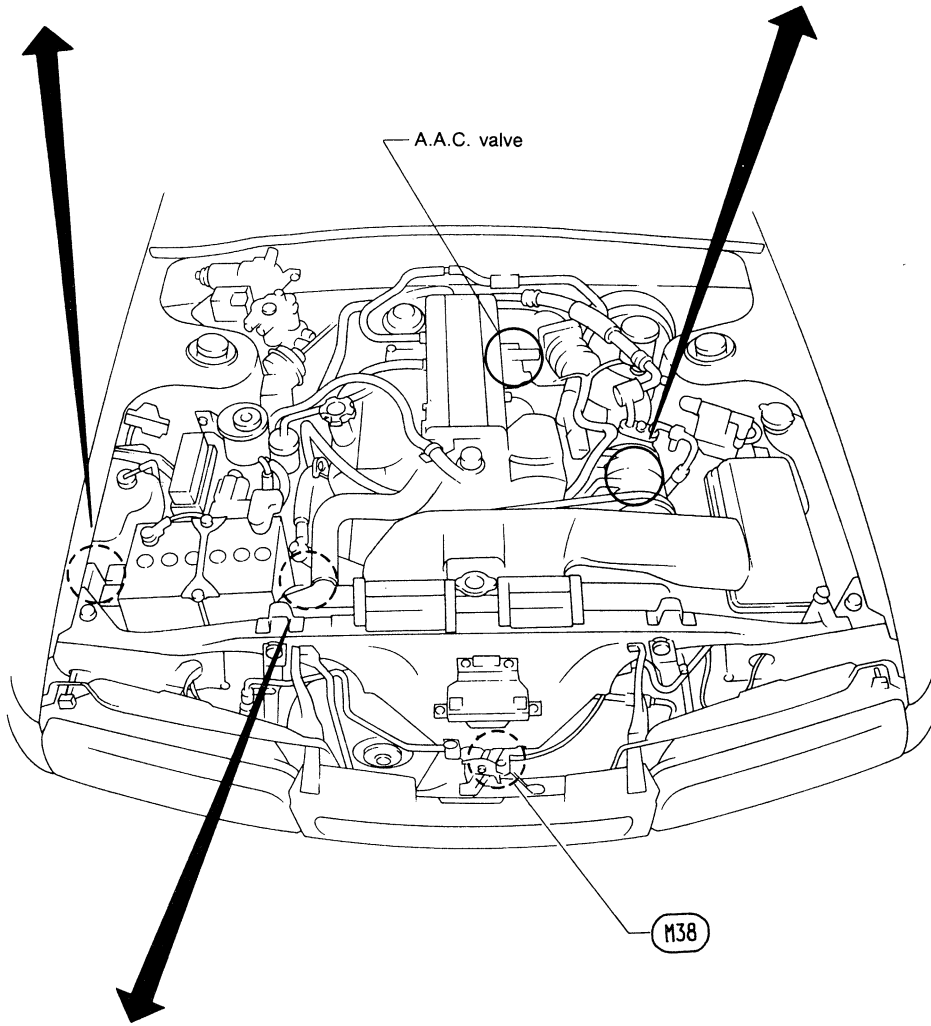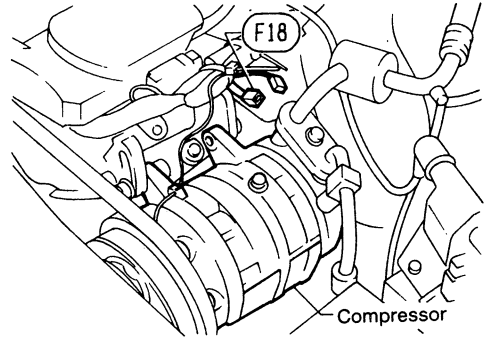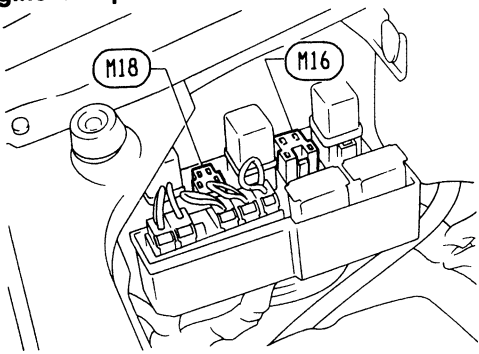

# TROUBLE DIAGNOSES — Manual Air Conditioner

## Harness Layout for A/C System (Cont'd)

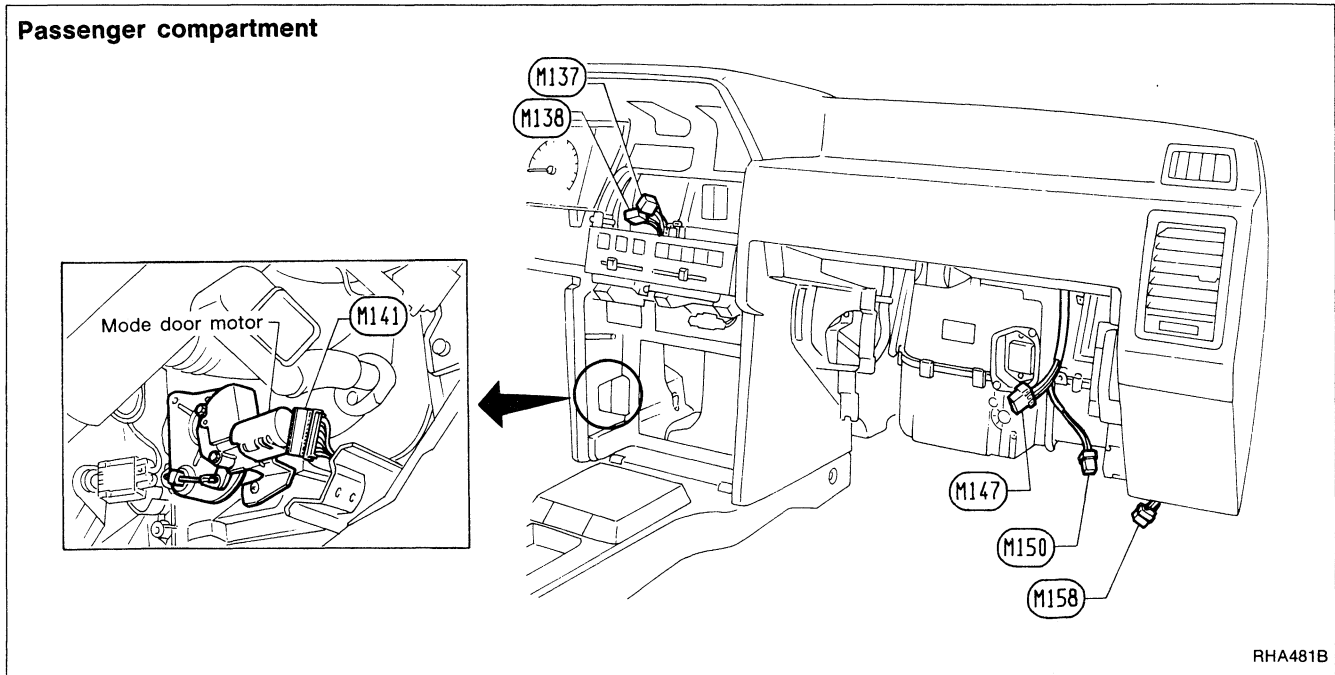


### Main relay

- M16 : A/C relay
- M18 : Radiator fan relay
- M24 : Dual-pressure switch
- M34 : Radiator fan motor
- M38 : Ambient switch
- M46 : Thermostwitch
- M137 : Push control unit
- M138 : Fan switch
- M141 : Mode door motor
- M143 : Blower relay
- M147 : Resistor
- M150 : Intake door motor
- M158 : Blower motor

### E.F.I. harness

- F18 : Compressor

Circuit Diagram for Quick Pinpoint Check

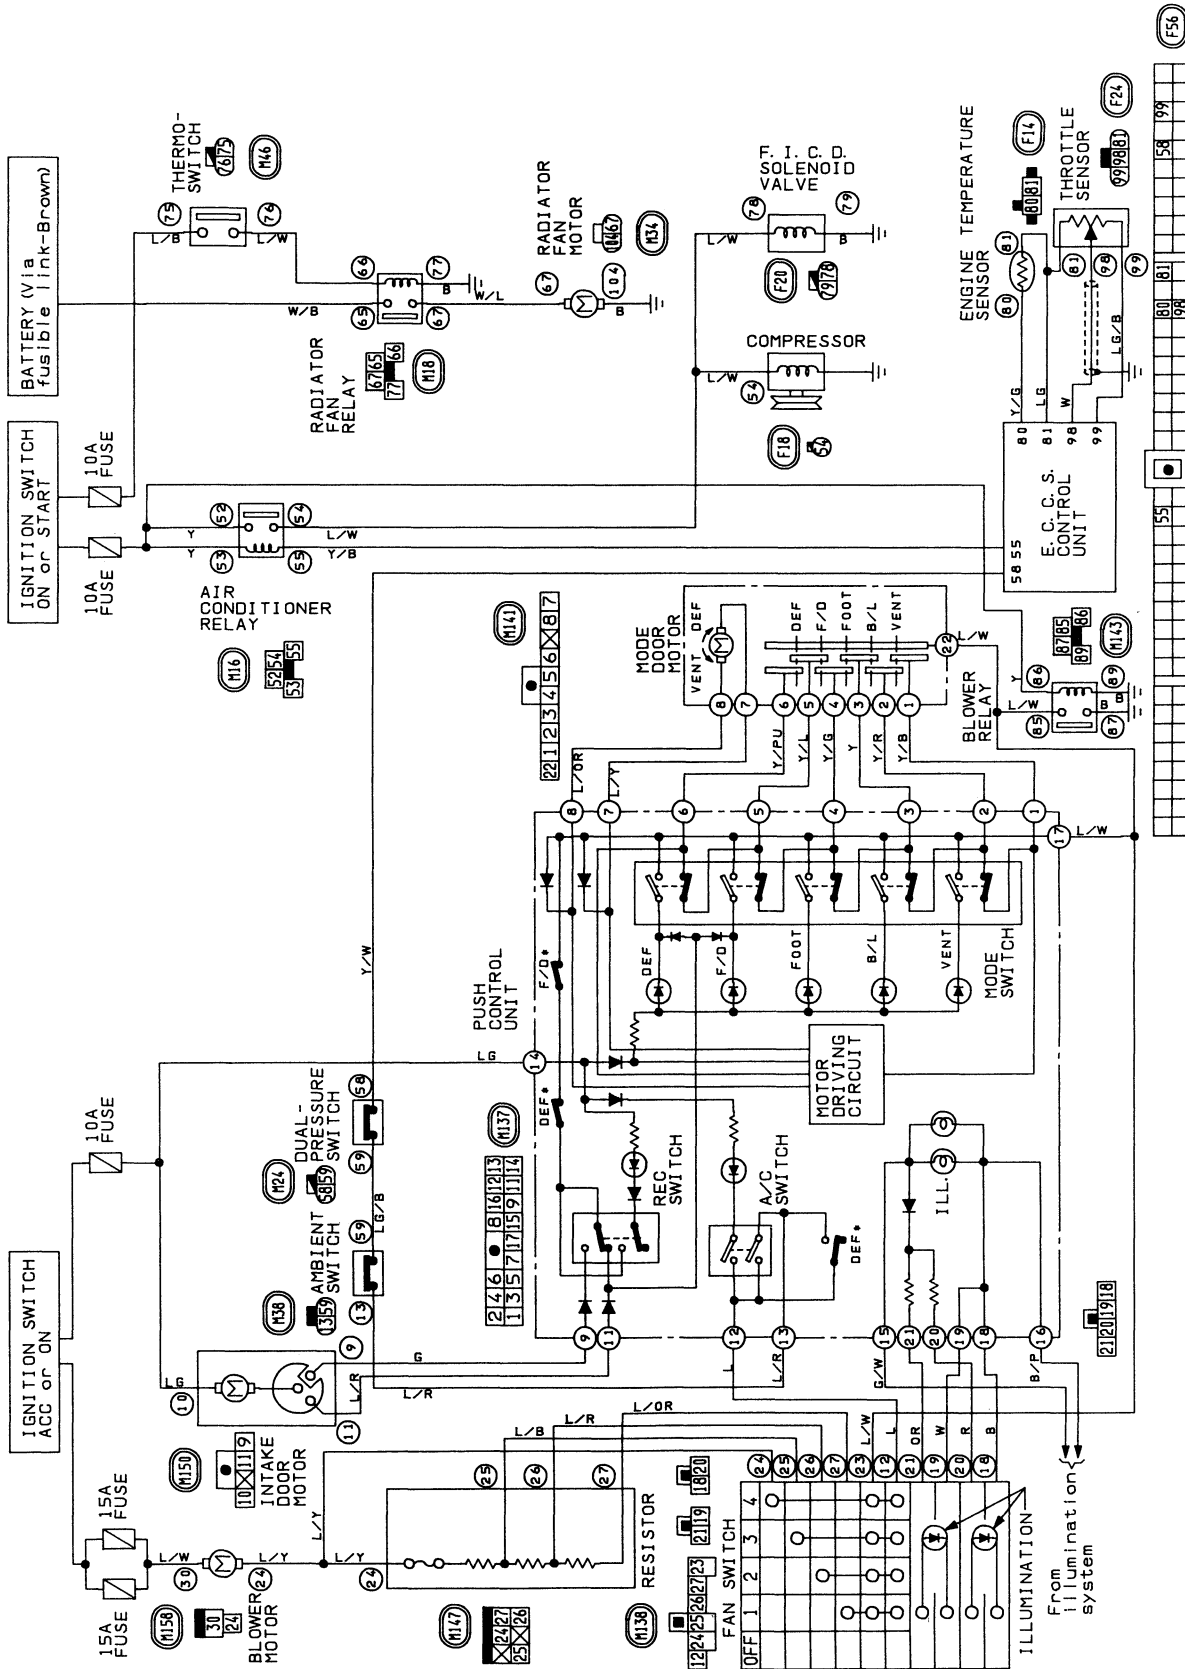


- All connectors shown in this illustration are unit side connectors.
- The unit side connectors with a double circle "○" are connected to the harness side connectors shown in the "Harness Layout for A/C System". (See pages HA-50 - HA-51.)
- The terminal numbers in the connector coincide with the circuit numbers surrounded by a single circle "○".
- \*: These switches are built in push control unit and mechanically linked to corresponding switches.

**NOTE**

# TROUBLE DIAGNOSES — Manual Air Conditioner


## Wiring Diagram

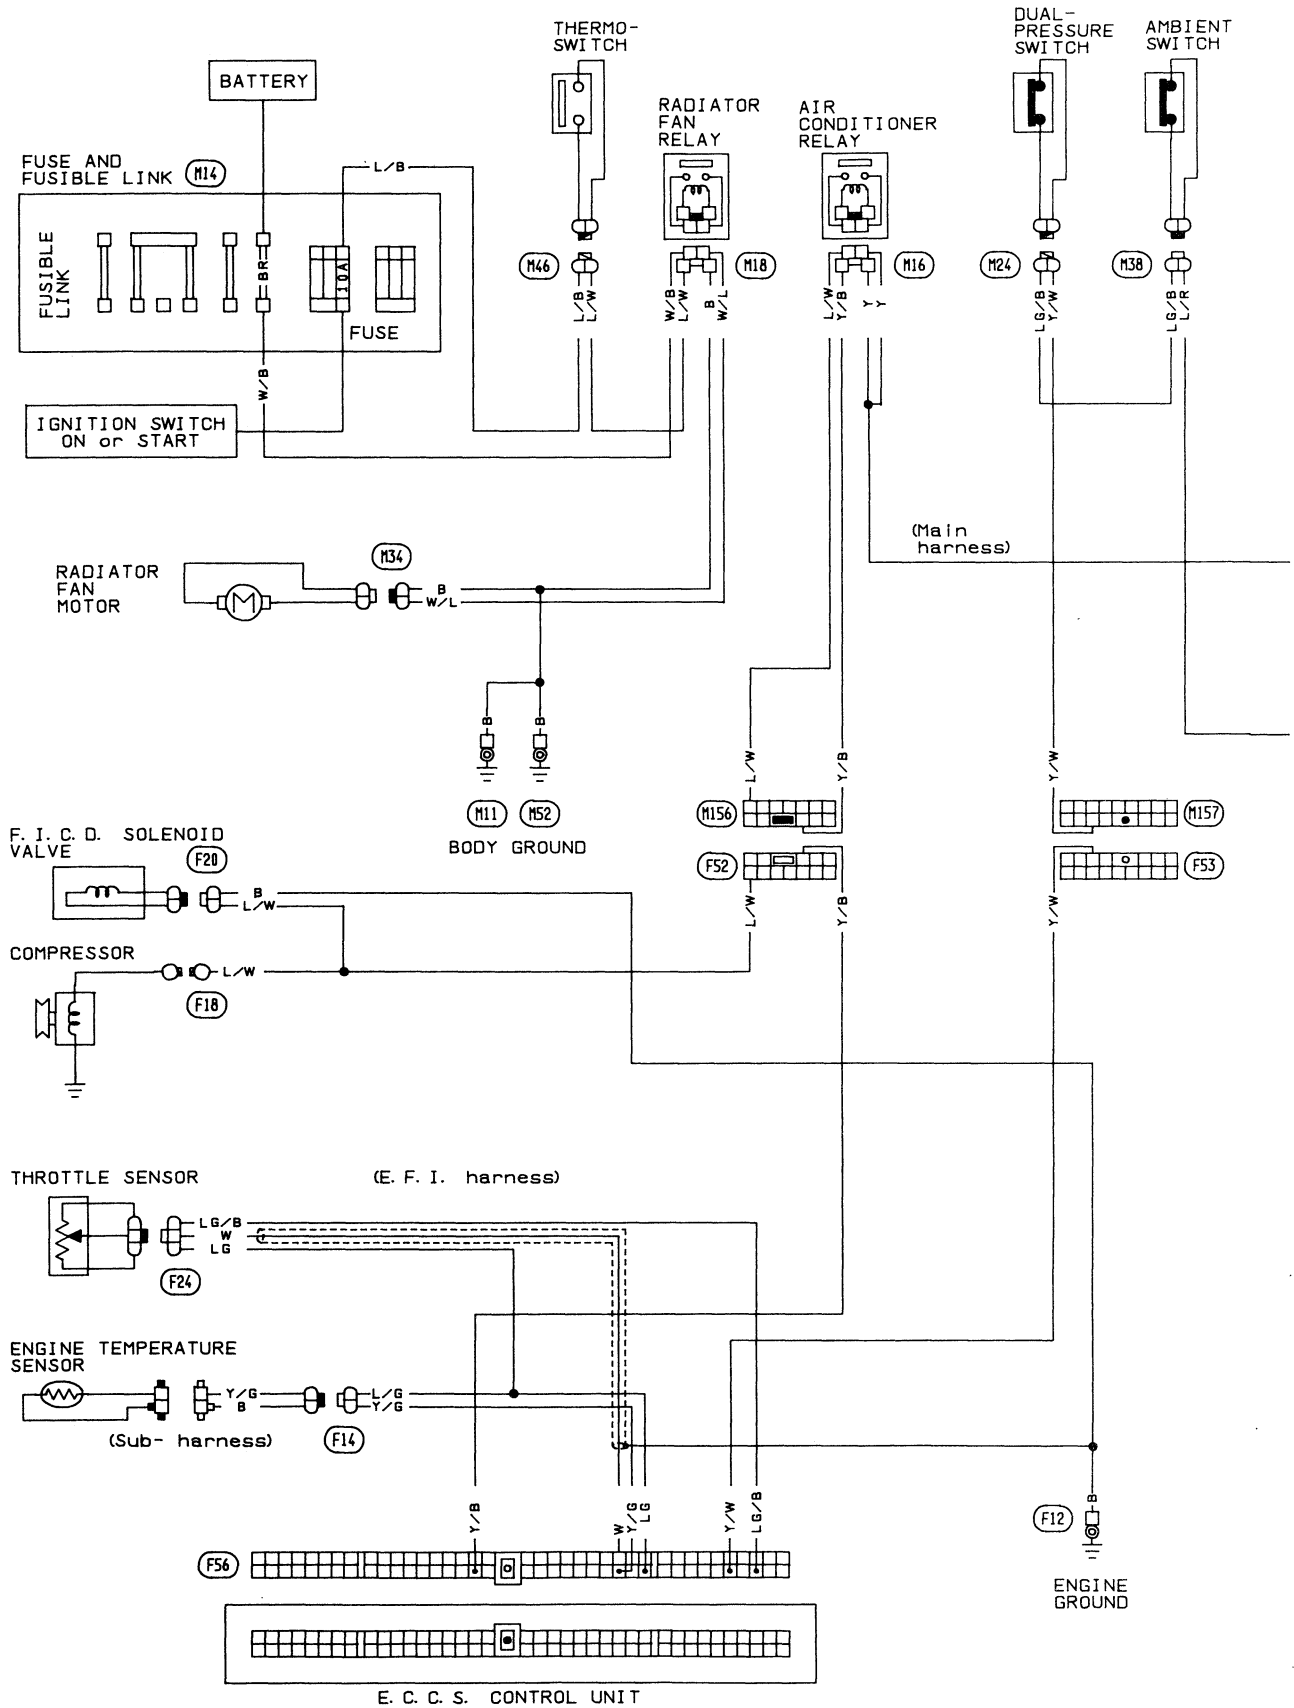



# TROUBLE DIAGNOSES — Manual Air Conditioner

## Wiring Diagram (Cont'd)

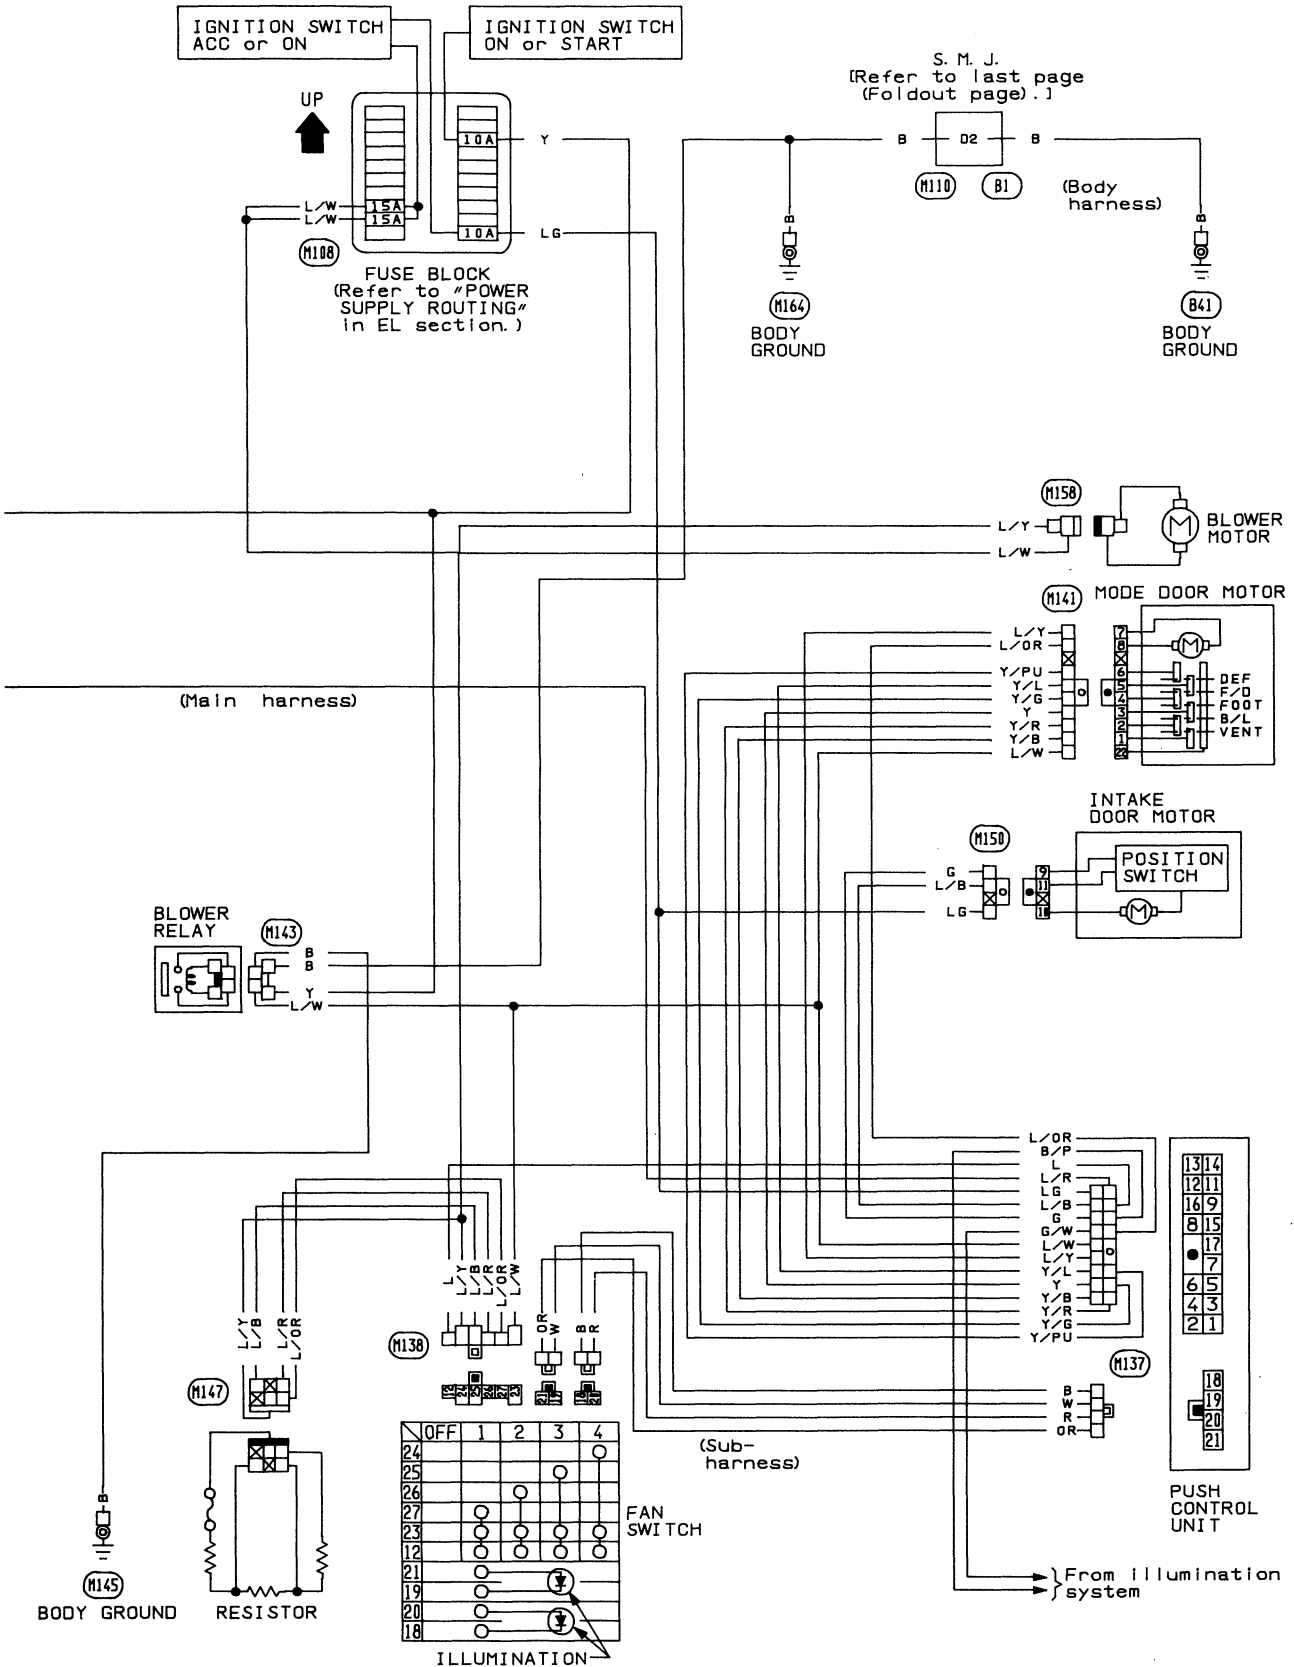


## Main Power Supply and Ground Circuit Check

### POWER SUPPLY CIRCUIT CHECK FOR A/C SYSTEM

Check power supply circuit for air conditioning system.

Refer to "POWER SUPPLY ROUTING" in EL section and A/C ELECTRICAL CIRCUIT.

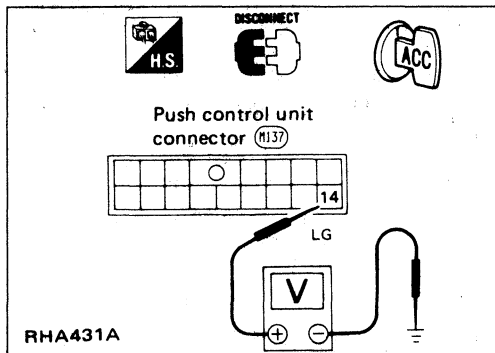


### PUSH CONTROL UNIT CHECK

Check power supply circuit for push control unit with ignition switch at ACC.

1. Disconnect push control unit harness connector.
2. Connect voltmeter from harness side.
3. Measure voltage across terminal No. ⑭ and body ground.

Voltmeter terminal		Voltage
⊕	⊖	
⑭	Body ground	Approx. 12V

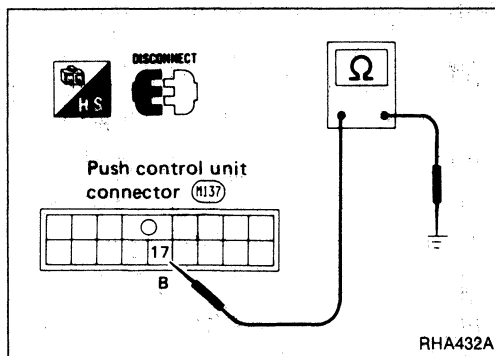

Check body ground circuit for push control unit with ignition switch OFF.

1. Disconnect push control unit harness connector.
2. Connect ohmmeter from harness side.
3. Check for continuity between terminal No. ⑰ and body ground.

# TROUBLE DIAGNOSES — Manual Air Conditioner

	INCIDENT	Flow chart No.
1	Fan fails to rotate.	1
2	Fan does not rotate at 1-speed.	2
3	Fan does not rotate at 2-speed.	3
4	Fan does not rotate at 3-speed.	4
5	Fan does not rotate at 4-speed.	5

## Diagnostic Procedure 1


**SYMPTOM: Blower motor does not rotate.**

- Perform **PRELIMINARY CHECK 2** before referring to the following flow chart.

Check if blower motor rotates properly at each fan speed. Conduct check as per flow chart at left.

**A** 1

**CHECK POWER SUPPLY FOR BLOWER MOTOR.**  
Disconnect blower motor harness connector.  
Do approx. 12 volts exist between blower motor harness terminal No. ③⑩ and body ground?

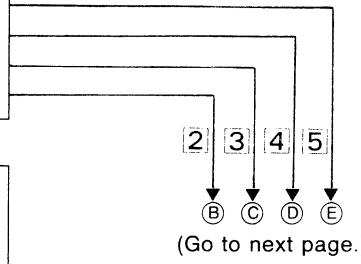

N.G. → Check 15A fuses at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and Wiring Diagram.)

**B** O.K.

Check circuit continuity between blower motor harness terminal No. ②④ and body ground.

N.G. → Reconnect blower motor harness connector.

O.K.

**CHECK BLOWER MOTOR.**  
(Refer to Electrical Components Inspection.)

N.G.

Replace blower motor.

**C**

**CHECK BLOWER MOTOR CIRCUIT BETWEEN BLOWER MOTOR AND RESISTOR.**  
Do approx. 12 volts exist between resistor harness terminal No. ②④ and body ground?





N.G. → Disconnect blower motor and resistor harness connectors.

O.K.

**D** Note  
Check circuit continuity between blower motor harness terminal No. ②④ and resistor harness terminal No. ②④.









(Go to next page.)

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

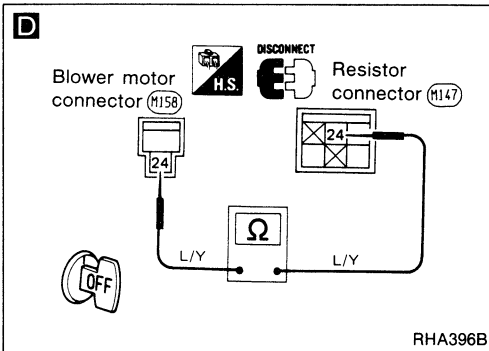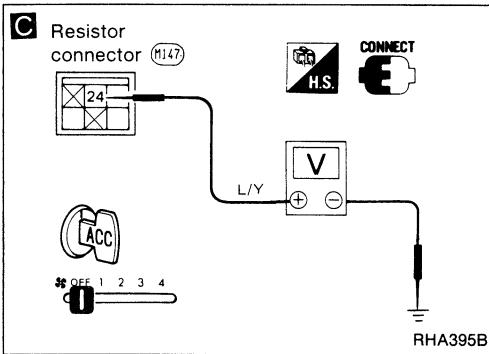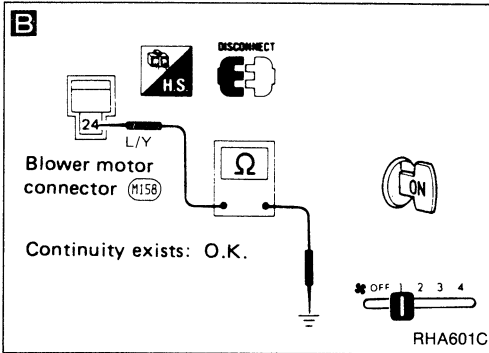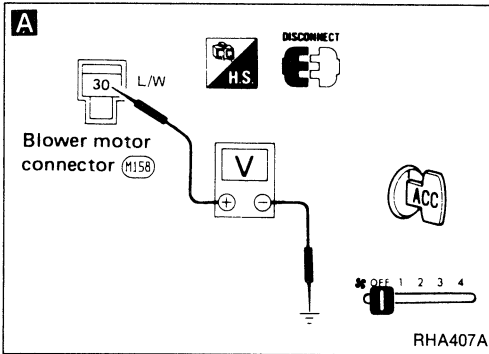

# TROUBLE DIAGNOSES — Manual Air Conditioner

## Diagnostic Procedure 1 (Cont'd)

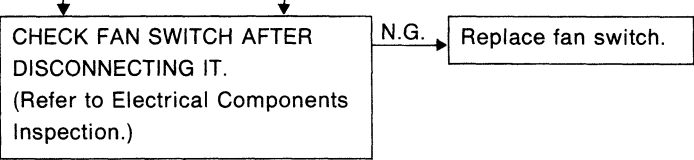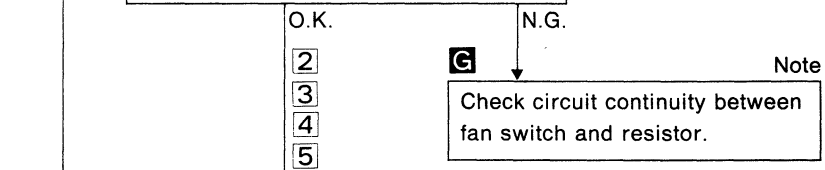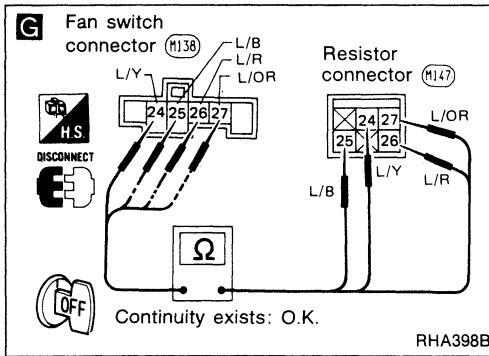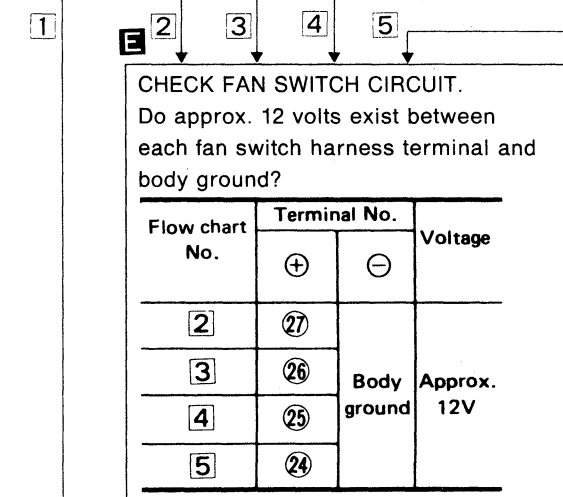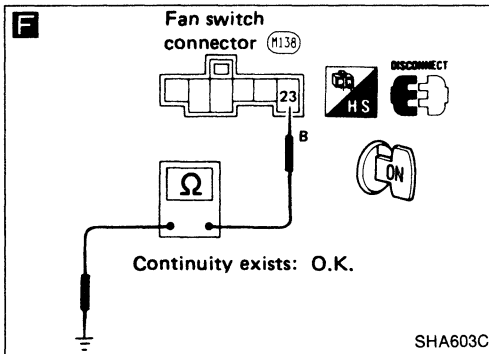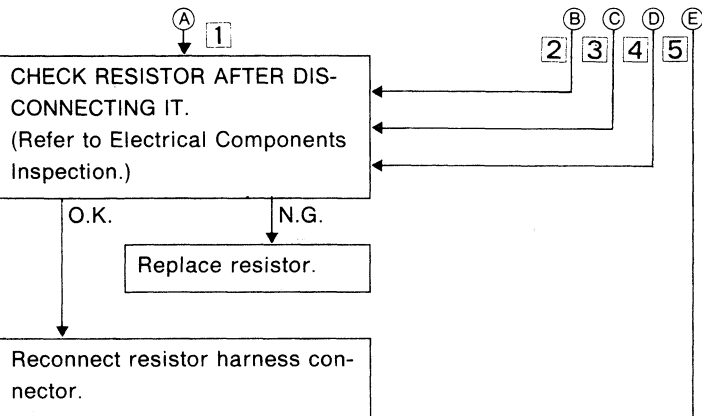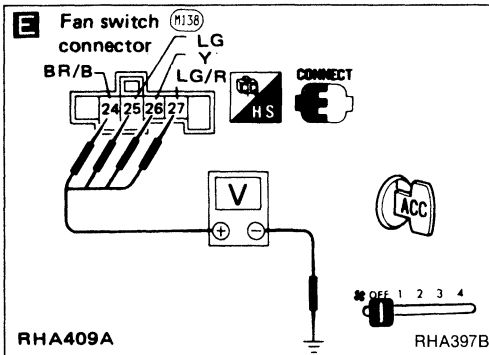


(Go to nex page.)

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Manual Air Conditioner


## Diagnostic Procedure 1 (Cont'd)

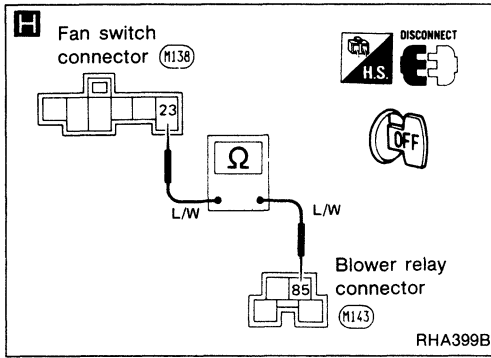

**Note**  
**F** Check circuit continuity between fan switch harness terminal No. 23 and blower relay harness terminal No. 85.

**I** CHECK POWER SUPPLY FOR BLOWER RELAY.  
 Do approx. 12 volts exist between blower relay harness terminal No. 86 and body ground?


**N.G.** Check 10A fuse at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and Wiring Diagram.)

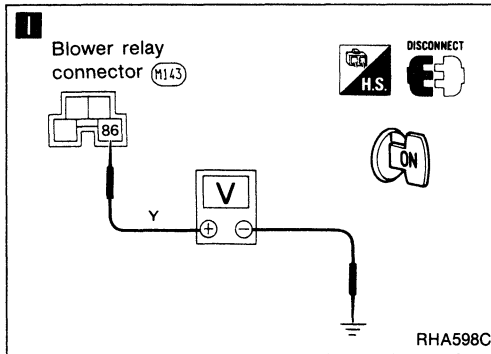

**J** Check circuit continuity between blower relay harness terminal No. 87, 89 and body ground.

**K** CHECK BLOWER RELAY AFTER DISCONNECTING IT.  
 (Refer to Electrical Components Inspection.)

**N.G.** Replace blower relay.



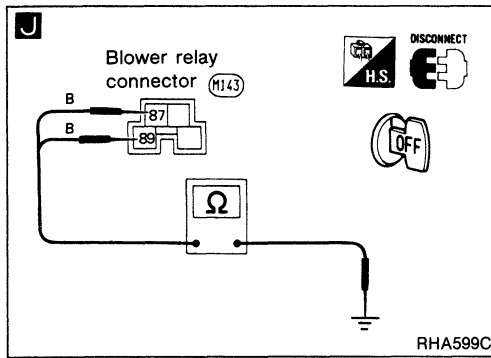


**Note:**  
 If the result is N.G. after checking circuit continuity, repair harness or connector.

## Diagnostic Procedure 2

**SYMPTOM: Air outlet does not change.**

- Perform **PRELIMINARY CHECK 4** and **Main Power Supply and Ground Circuit Check** before referring to the following flow chart.

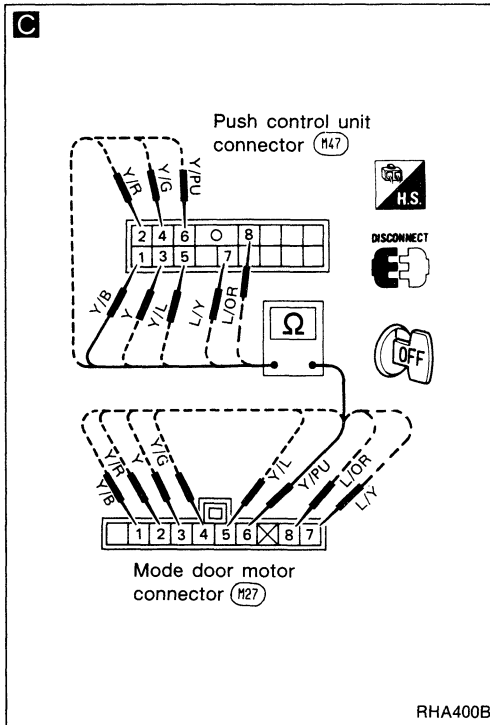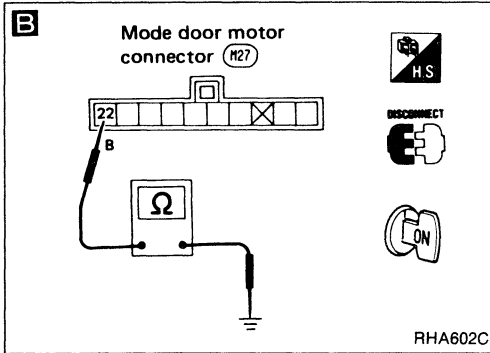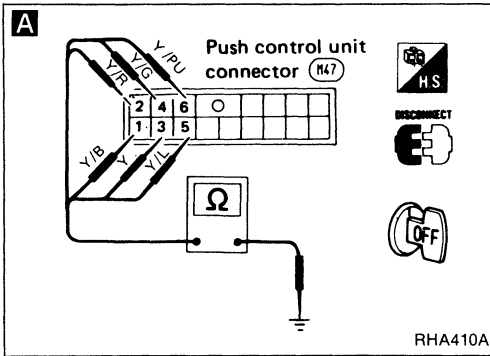

- A**
- CHECK MODE DOOR MOTOR POSITION SWITCH.
1. Turn VENT switch ON with ignition switch at ACC position.
  2. Turn ignition switch OFF. Disconnect push control unit connector.
  3. Check if continuity exists between terminal No. ① or ② of push control unit harness connector and body ground.
  4. Using above procedures, check for continuity in any other mode, as indicated in chart.

Mode switch	Terminal No.		Continuity
	⊕	⊖	
VENT	① or ②	Body ground	Yes
B/L	② or ③		
FOOT	③ or ④		
F/D	④ or ⑤		
DEF	⑤ or ⑥		

N.G. → Disconnect mode door motor harness connector.

**B**

CHECK BODY GROUND CIRCUIT FOR MODE DOOR MOTOR. Does continuity exist between mode door motor harness terminal No. ②② and body ground?

O.K. ↓ N.G. ↓

Disconnect blower relay harness connector

ⓑ (Go to next page.)

**C** Note

Check circuit continuity between each terminal on push control unit and on mode door motor.

Terminal No.		Continuity
⊕	⊖	
Push control unit	Mode door motor	Yes
①	①	
②	②	
③	③	
④	④	
⑤	⑤	
⑥	⑥	
⑦	⑦	
⑧	⑧	


Ⓐ (Go to next page.)

O.K. ↓

CHECK SIDE LINK. Refer to DOOR CONTROL — Manual Air Conditioner.

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

## Diagnostic Procedure 2 (Cont'd)

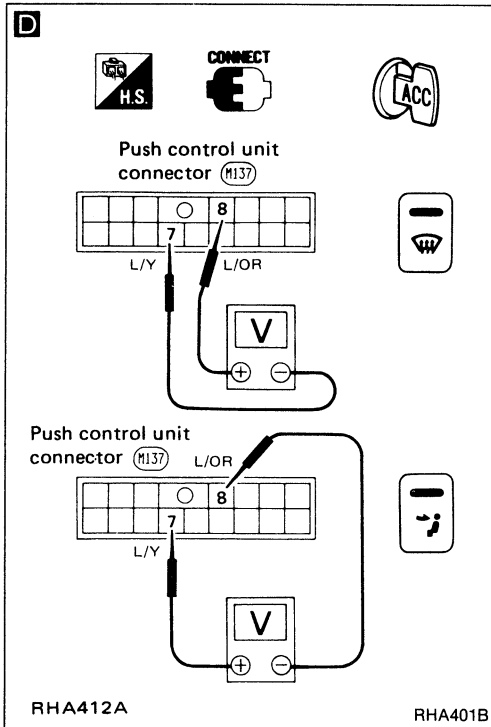

Reconnect push control unit and mode door motor harness connectors.

**D**

**CHECK FOR OUTPUT OF PUSH CONTROL UNIT.**  
Do approx. 12 volts exist between push control unit harness terminal No. ⑦ and ⑧ when mode is switched from "VENT" to "DEF" or when mode is switched from "DEF" to "VENT"?

Terminal No.		Mode door motor	
⑦	⑧	Mode door operation	Direction of linkage rotation
⊖	⊖	Stop	Stop
⊖	⊕	VENT → DEF	Clock-wise
⊕	⊖	DEF → VENT	Counter-clock-wise

N.G. → Replace control amp. built-in push control unit.

**E**

**Note**

Check circuit continuity between mode door motor harness terminal No. ②② and blower relay harness terminal No. ⑧⑤.

**F**

**CHECK POWER SUPPLY FOR BLOWER RELAY.**  
Do approx. 12 volts exist between blower relay harness terminal No. ⑧⑥ and body ground?

O.K. → Replace mode door motor.

**G**




**Note**

Check circuit continuity between blower relay harness terminal No. ⑧⑦, ⑧⑨ and body ground.




Check 10A fuse at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and Wiring Diagram.)

O.K. → CHECK BLOWER RELAY AFTER DISCONNECTING IT. (Refer to Electrical Components Inspection.)

N.G. → Replace blower relay.

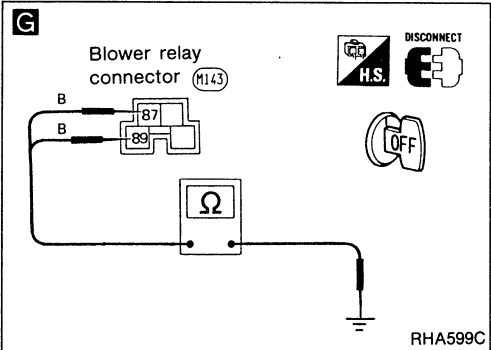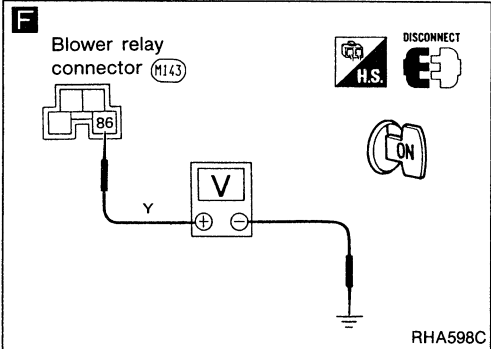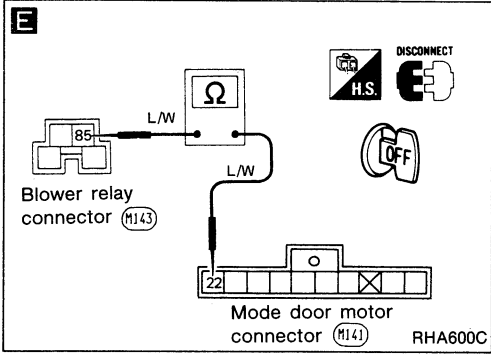


**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

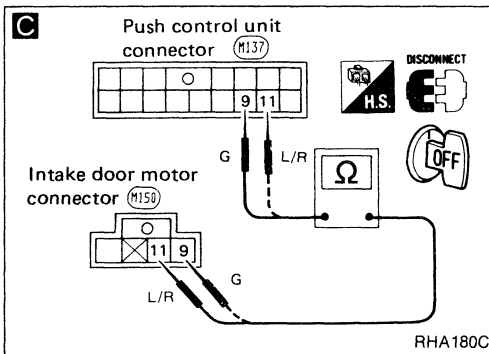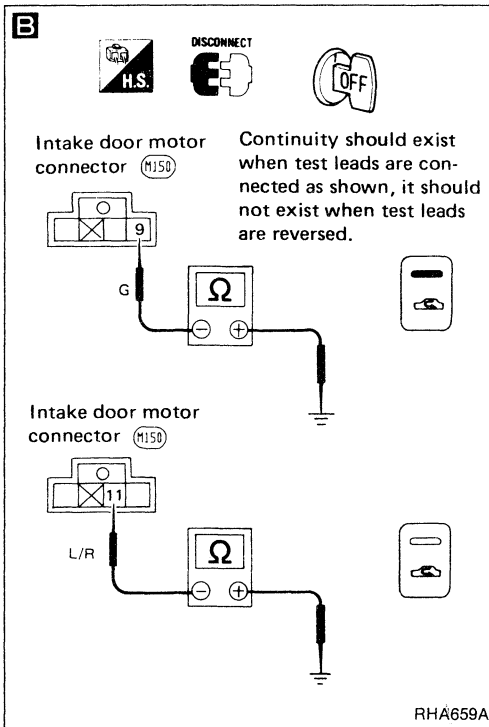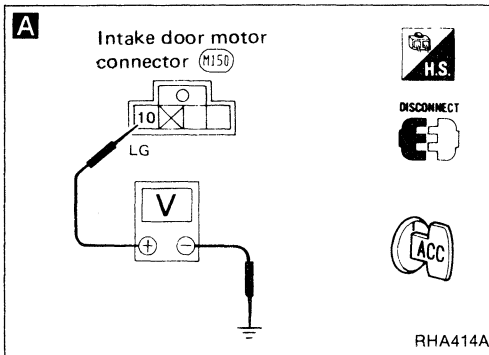

### Diagnostic Procedure 3

**SYMPTOM:** Intake door does not change in VENT, B/L or FOOT mode.

- Perform **PRELIMINARY CHECK 1** and **Main Power Supply and Ground Circuit Check** before referring to the following flow chart.

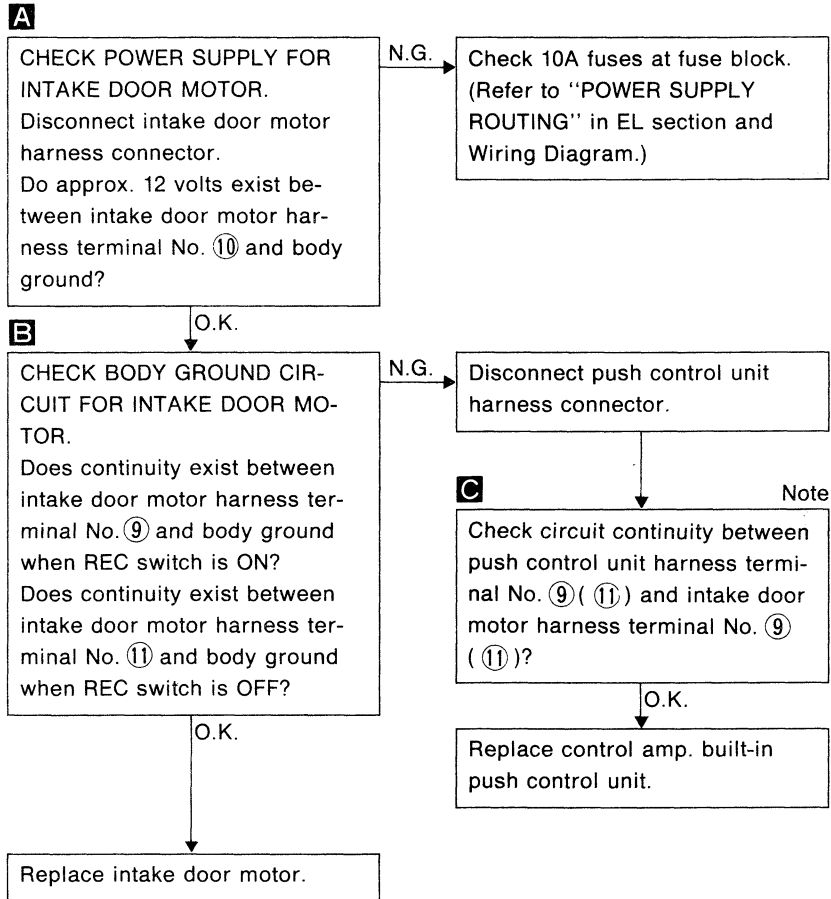










**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.



## Diagnostic Procedure 4

**SYMPTOM: Magnet clutch does not engage with A/C switch and fan switch are ON.**






- Perform **PRELIMINARY CHECK 2** before referring to the following flow chart.

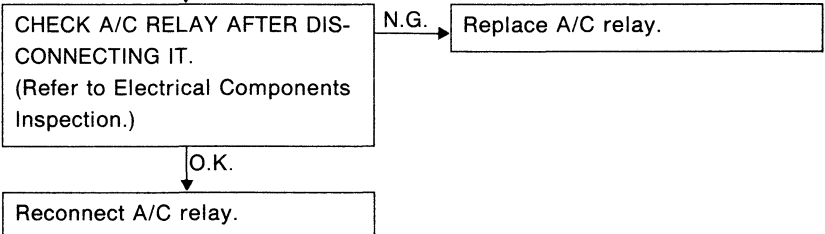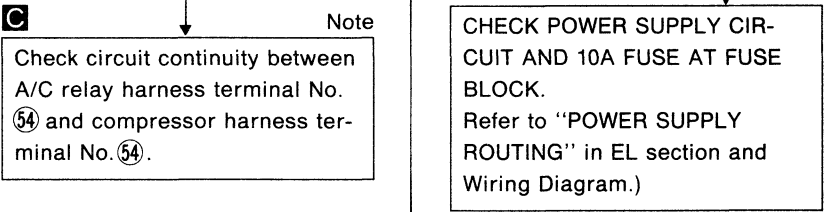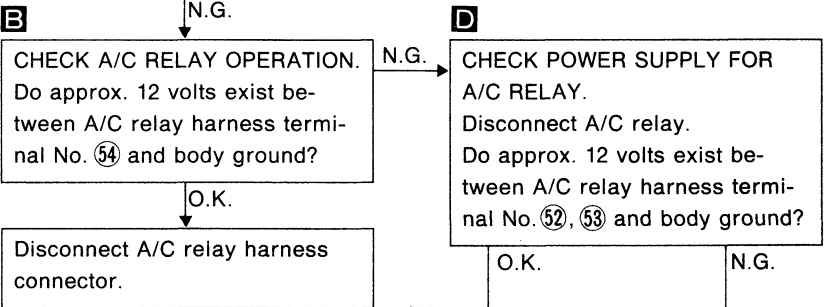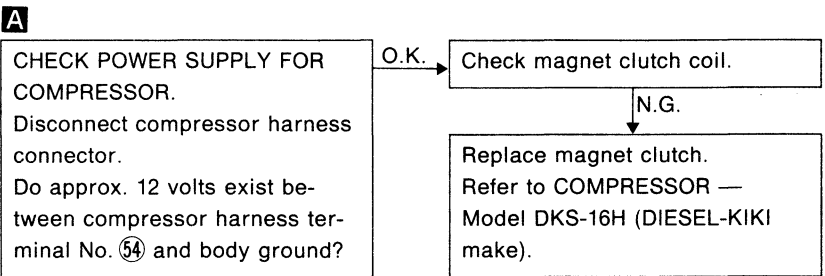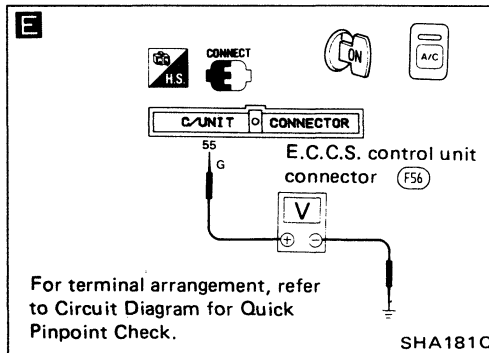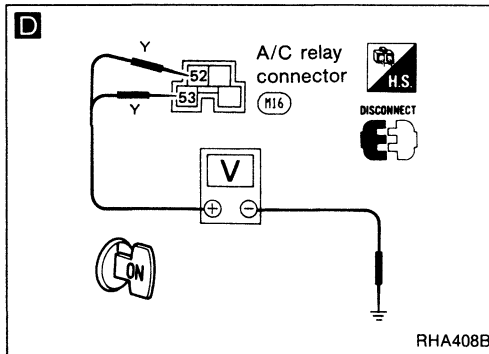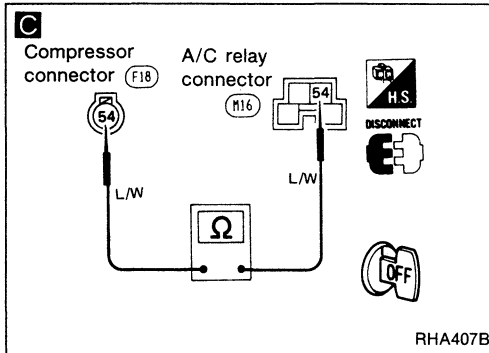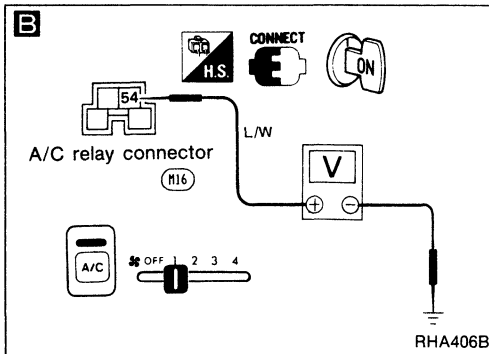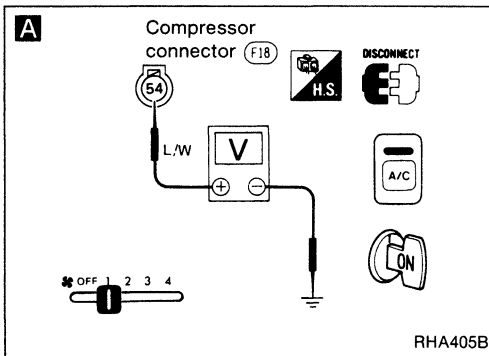

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Manual Air Conditioner

## Diagnostic Procedure 4 (Cont'd)

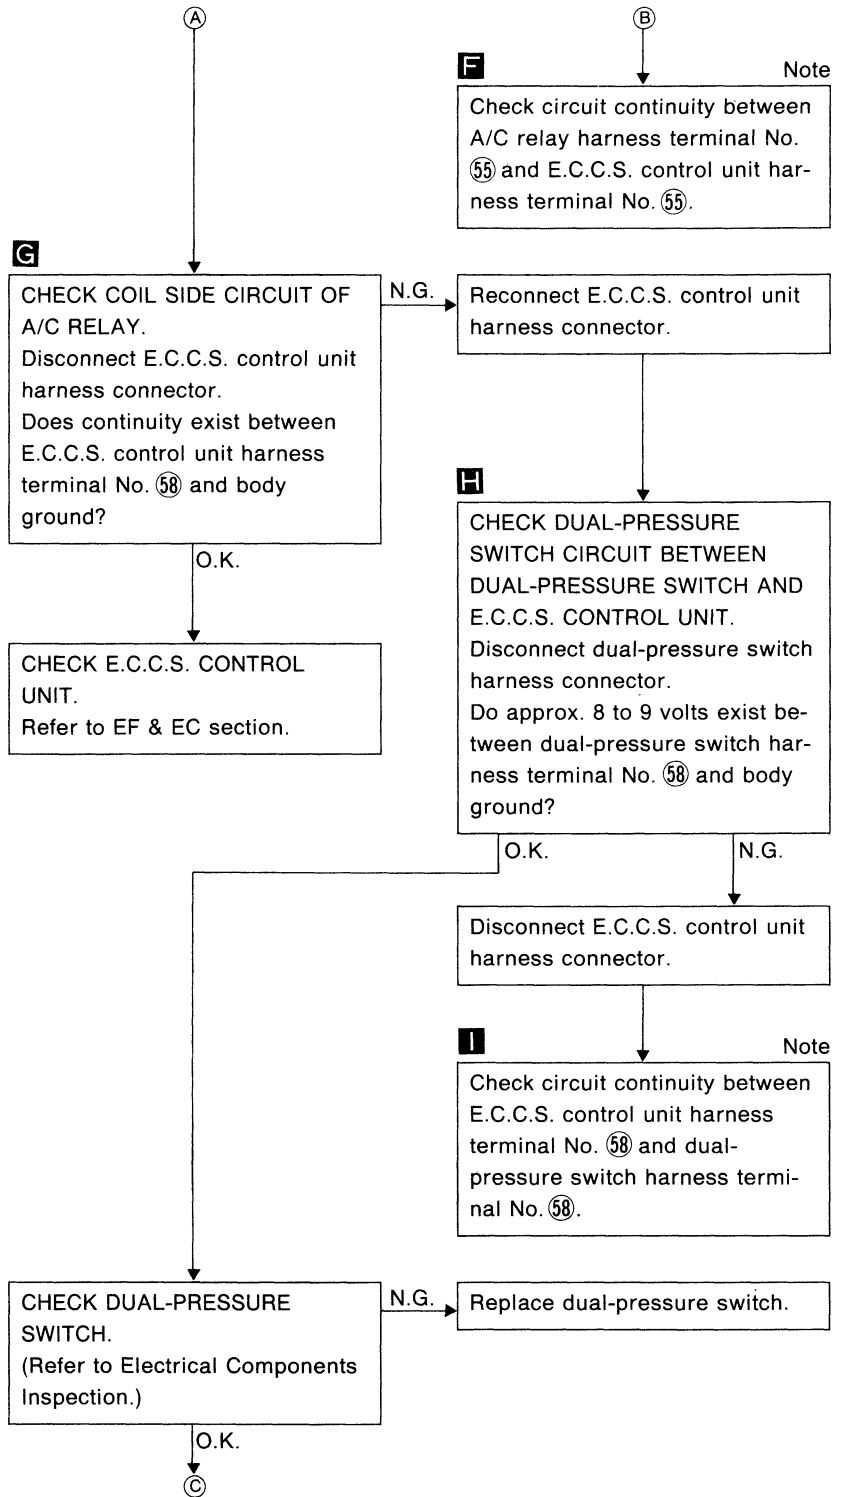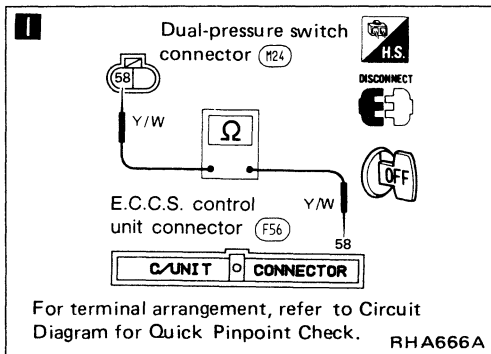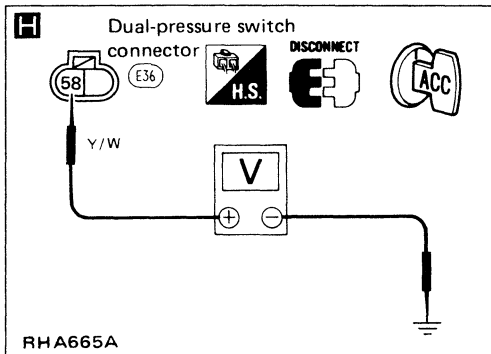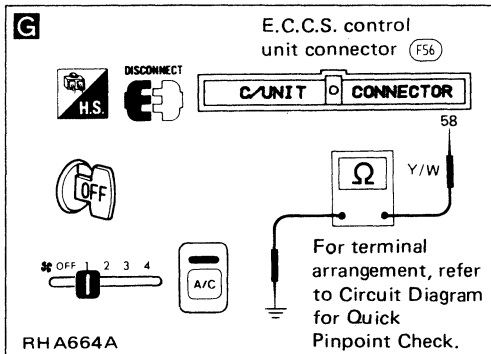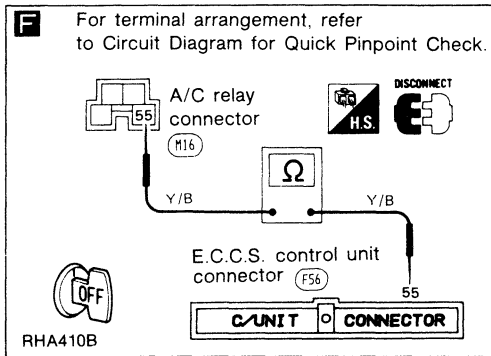


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Manual Air Conditioner


## Diagnostic Procedure 4 (Cont'd)

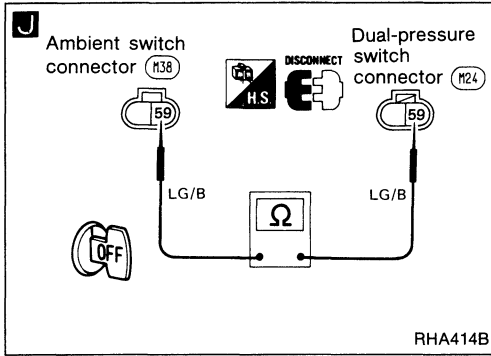

Disconnect ambient switch harness connector.

**J**      Note

Check continuity between dual-pressure switch harness terminal No. 59 and ambient switch harness terminal No. 59.

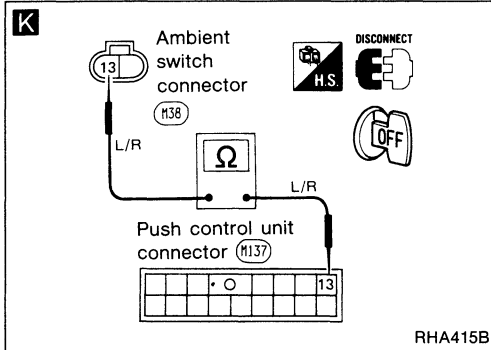

CHECK AMBIENT SWITCH. (Refer to Electrical Components Inspection.)

N.G. → Replace ambient switch.

O.K.

Disconnect push control unit harness connector.

**K**      Note

Check circuit continuity between ambient switch harness terminal No. 13 and push control unit harness terminal No. 13.


O.K.

CHECK A/C SWITCH OF PUSH CONTROL UNIT. (Refer to Electrical Components Inspection.)

N.G. → Replace control amp. built-in push control unit.

O.K.

Disconnect fan switch harness connector.

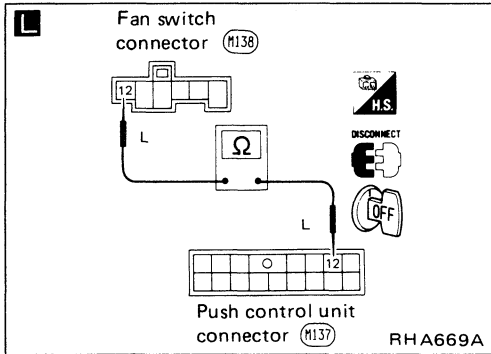

**L**      Note

Check circuit continuity between push control unit harness terminal No. 12 and fan switch harness terminal No. 12.

O.K.


(Go to next page.)

**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Manual Air Conditioner

## Diagnostic Procedure 4 (Cont'd)

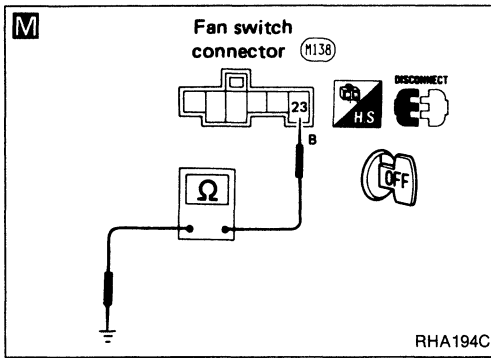

**M** **D**  
**Ⓜ** CHECK BODY GROUND CIRCUIT FOR FAN SWITCH.  
 Does continuity exist between fan switch harness terminal No. ⑳ and body ground?


N.G.

**N** **Note**  
 Check circuit continuity between fan switch harness terminal No. ⑳ and blower relay harness terminal No. ⑧⑤.

O.K.

O.K.  
**Ⓜ** CHECK FAN SWITCH.  
 (Refer to Electrical Components Inspection.)

N.G.  
 Replace fan switch.

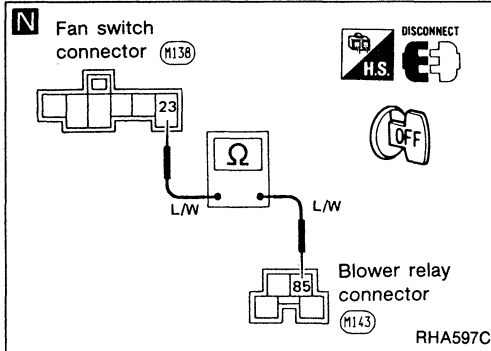


**Ⓜ** CHECK POWER SUPPLY FOR BLOWER RELAY.  
 Do approx. 12 volts exist between blower relay harness terminal No. ⑧⑥ and body ground?

N.G.

Check 10A fuse at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and Wiring Diagram.)

O.K.

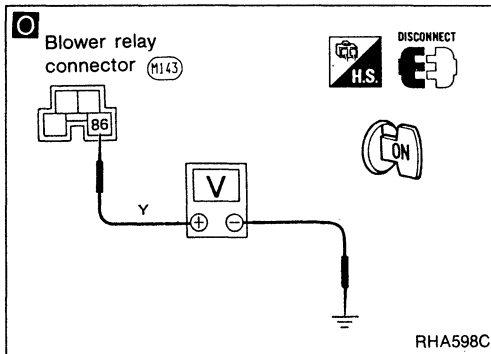


**Ⓜ** **Note**  
 Check circuit continuity between blower relay harness terminal No. ⑧⑦, ⑧⑧ and body ground.

O.K.

**Ⓜ** CHECK BLOWER RELAY AFTER DISCONNECTING IT.  
 (Refer to Electrical Components Inspection.)

N.G.

Replace blower relay.

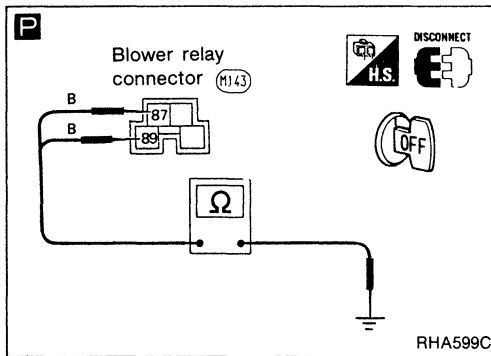


**Note:**  
 If the result is N.G. after checking circuit continuity, repair harness or connector.

## Diagnostic Procedure 5

**SYMPTOM:** Illumination or indicators of push control unit do not come on.

- Perform Main Power Supply and Ground Circuit Check before referring to the following flow chart.

Turn ignition switch and lighting switch ON.

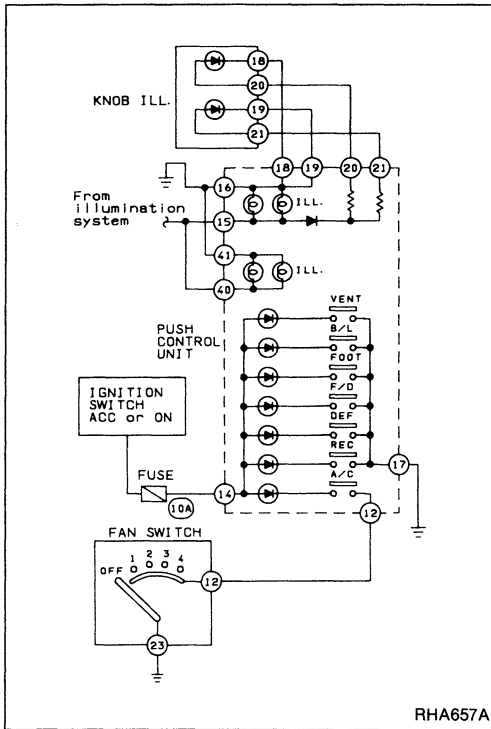

CHECK ILLUMINATION AND INDICATORS.

- Turn A/C, REC and fan switches ON.
- Push VENT, B/L, FOOT, F/D and DEF switches in order.
- Check for incidents and follow the repairing methods as shown:


ILL.		INCIDENTS							"How to repair"
		VENT	B/L	FOOT	F/D	DEF	REC	A/C	
Push control unit	Fresh vent								
X	○	○	○	○	○	○	○	○	Go to DIAGNOSTIC PROCEDURE 5-1.
△	○	○	○	○	○	○	○	X	Go to DIAGNOSTIC PROCEDURE 5-2.
○	○	X	X	X	X	X	X	△	Go to DIAGNOSTIC PROCEDURE 5-3.
△	○	△							Replace control amp. built-in push control unit.
○	○	X	X	X	X	X	X	○	Replace control amp. built-in push control unit.
△	○	X	X	X	X	X	X	○	Go to DIAGNOSTIC PROCEDURE 5-4.

○: Illumination or indicator comes on.  
 X: Illumination or indicator does not come on.  
 △: Some indicators for VENT, B/L, FOOT, F/D, DEF or REC come on.

# TROUBLE DIAGNOSES — Manual Air Conditioner

## Diagnostic Procedure 5 (Cont'd)

### DIAGNOSTIC PROCEDURE 5-1

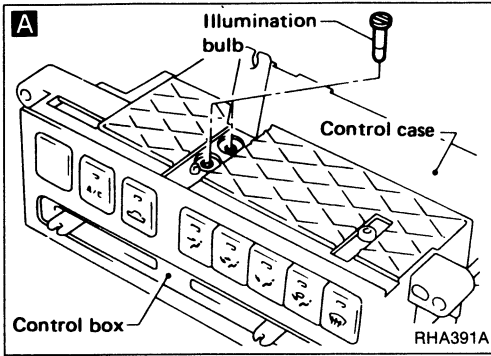


**CHECK THE OTHER ILLUMINATION SYSTEMS EXCEPT FOR A/C SYSTEM.**  
Do the other illumination come on with ignition switch and lighting switch ON?

N.G. → **CHECK ILLUMINATION SYSTEM.**  
Refer to Illumination/Wiring Diagram in EL section.

O.K.

Turn ignition switch and lighting switch OFF.

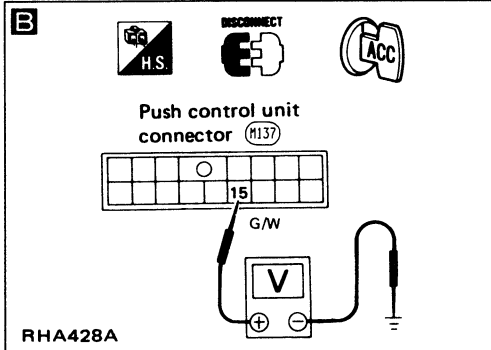

**CHECK ILLUMINATION BULB.**  
Remove push control unit and disconnect harness connectors. Remove illumination bulb(s) and check them.


N.G. → Replace illumination bulb(s).

O.K.

**CHECK POWER SUPPLY FOR ILLUMINATION WITH LIGHTING SWITCH ON.**  
Do approx. 12 volts exist between push control unit harness terminal No. ⑮ and body ground?

N.G. → **CHECK POWER SUPPLY FOR A/C ILLUMINATION SYSTEM.**  
Refer to Illumination/Wiring Diagram in EL section.

O.K.

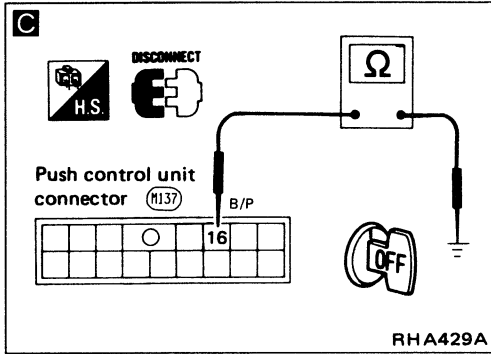

**CHECK BODY GROUND CIRCUIT FOR ILLUMINATION.**  
Does continuity exist between push control unit harness terminal No. ⑯ and body ground?

Note


O.K.

Replace control amp. built-in push control unit.

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

**Diagnostic Procedure 5 (Cont'd)**

**DIAGNOSTIC PROCEDURE 5-2**

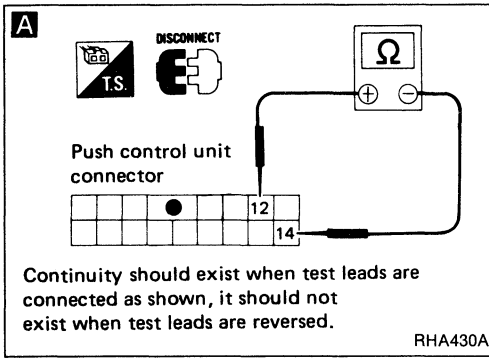

**A**

CHECK MAGNET CLUTCH OPERATION.  
Does magnet clutch operate normally when engine ON. A/C switch, fan switch are ON?

N.G. → Go to Diagnostic Procedure 4.


O.K.

**A**

Check circuit continuity of L.E.D.

N.G.

Replace control amp. built-in push control unit.

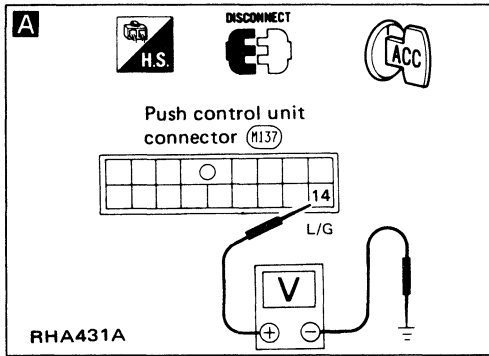

**DIAGNOSTIC PROCEDURE 5-3**

Turn ignition switch and lighting switch OFF.

Disconnect push control unit harness connector.

**A**

CHECK POWER SUPPLY FOR PUSH CONTROL UNIT.  
Do approx. 12 volts exist between push control unit harness terminal No. ⑭ and body ground?

N.G. → Check 10A fuse at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and Wiring Diagram.)


O.K.

**B** Note

CHECK BODY GROUND CIRCUIT FOR PUSH CONTROL UNIT.  
Does continuity exist between push control unit harness terminal No. ⑰ and body ground?

O.K.


Replace control amp. built-in push control unit.

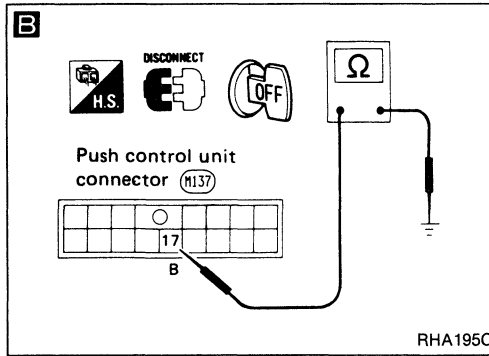

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

## Diagnostic Procedure 5 (Cont'd)

### DIAGNOSTIC PROCEDURE 5-4

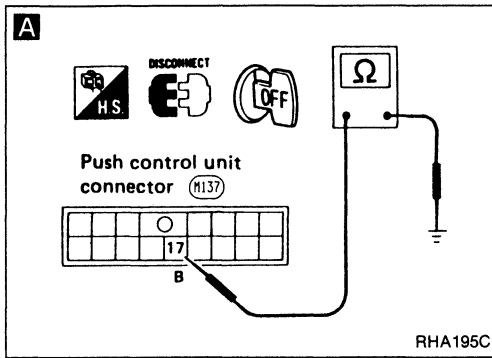

Turn ignition switch and lighting switch OFF.

Disconnect push control unit harness connector.

**A** Note

**CHECK BODY GROUND CIRCUIT FOR PUSH CONTROL UNIT.**  
Does continuity exist between push control unit harness terminal No. ⑰ and body ground?

O.K.

Replace control amp. built-in push control unit.

**Note:**




If the result is N.G. after checking circuit continuity, repair harness or connector.



## Diagnostic Procedure 6

**SYMPTOM: Radiator fan motor does not operate.**

- Perform PRELIMINARY CHECK 2 before referring to the following flow chart.

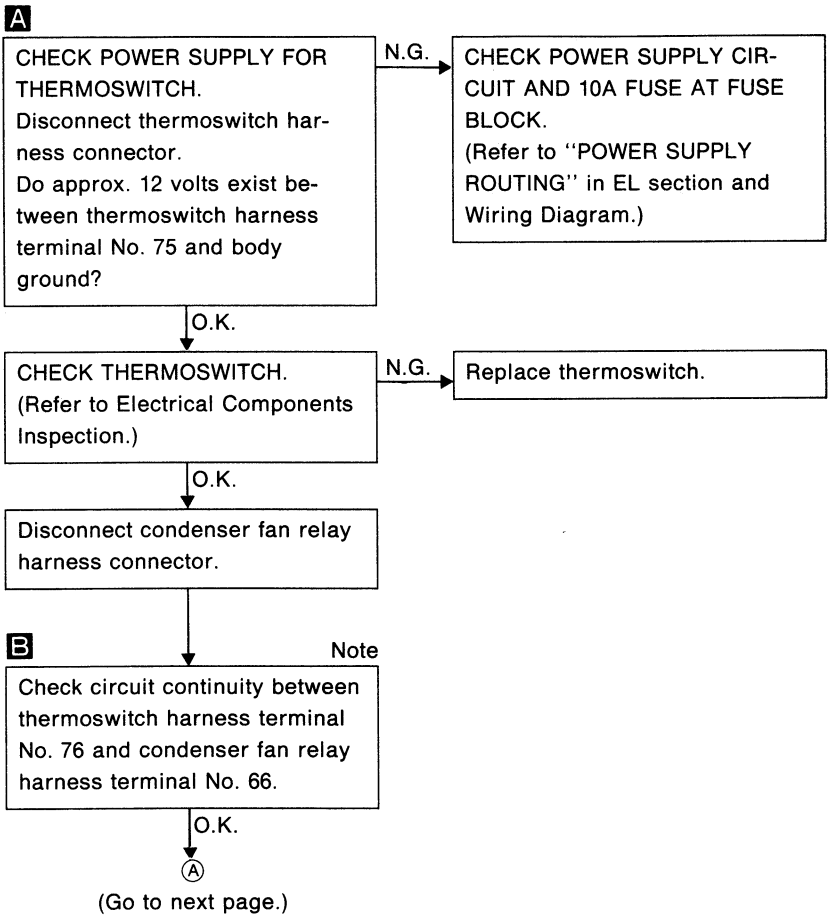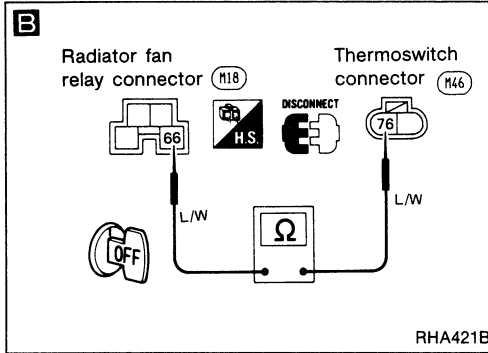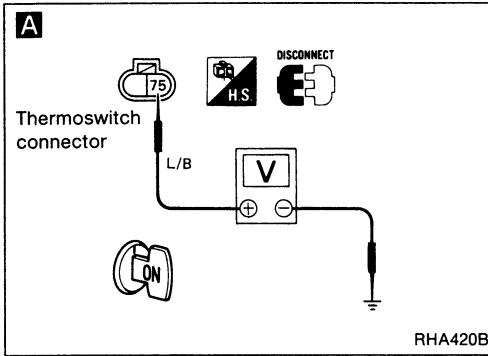


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Manual Air Conditioner


## Diagnostic Procedure 6 (Cont'd)

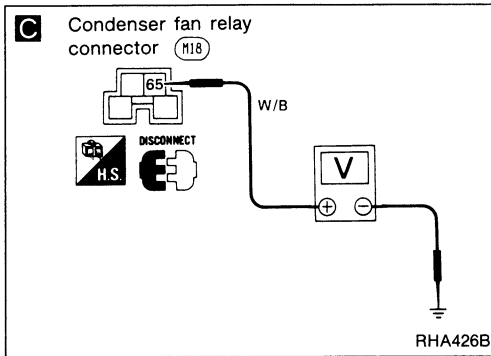

**C** CHECK POWER SUPPLY FOR CONDENSER FAN RELAY.  
Do approx. 12 volts exist between condenser fan relay harness terminal No. 65 and body ground?

N.G. → CHECK POWER SUPPLY CIRCUIT.  
(Refer to "POWER SUPPLY ROUTING" in EL section and Wiring Diagram.)

O.K.

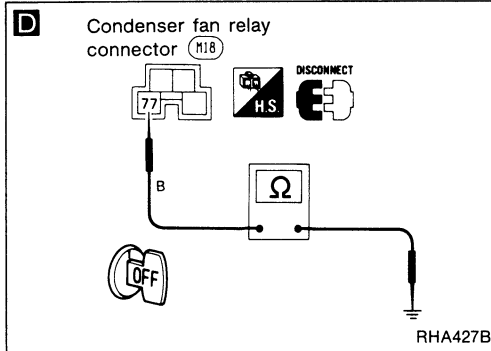


**D** CHECK BODY GROUND CIRCUIT FOR CONDENSER FAN RELAY.  
Does continuity exist between condenser fan relay harness terminal No. 77 and body ground?

O.K.


**D** CHECK CONDENSER FAN RELAY AFTER DISCONNECTING IT.  
(Refer to Electrical Components Inspection.)

N.G. → Replace condenser fan relay.

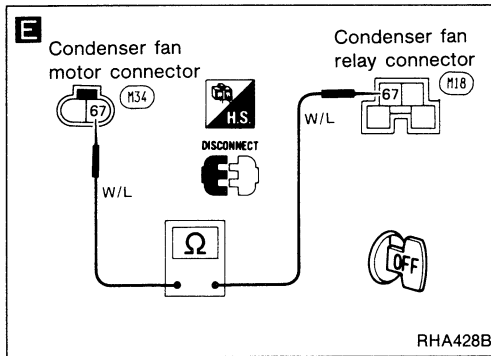

**E** Disconnect condenser fan motor harness connector.  
Check circuit continuity between condenser fan relay harness terminal No. 67 and condenser fan motor harness terminal No. 67.

O.K.

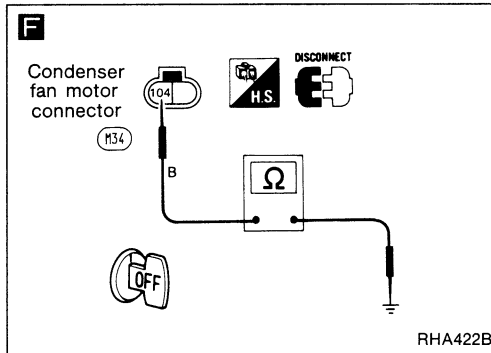

**F** CHECK BODY GROUND CIRCUIT FOR CONDENSER FAN MOTOR.  
Does continuity exist between condenser fan motor harness terminal No. 104 and body ground?

O.K.

Replace condenser fan motor.


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector.

## Electrical Components Inspection

### FAN SWITCH


Check continuity between terminals at each switch position.

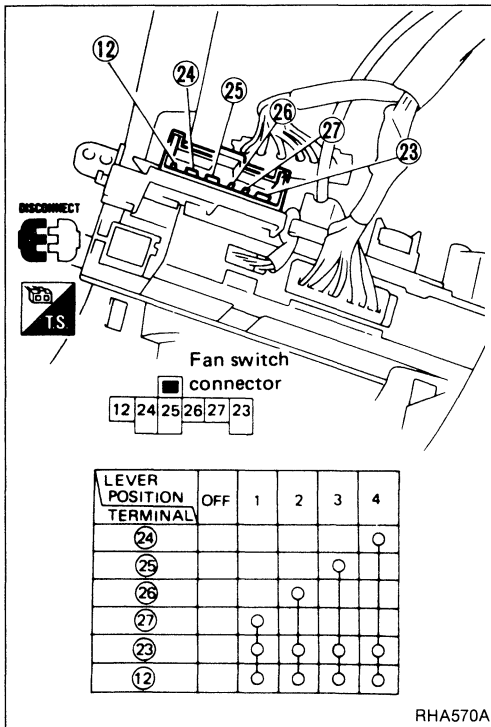

### BLOWER MOTOR


Confirm smooth rotation of the blower motor.

- Ensure that there are no foreign particles inside the intake unit.

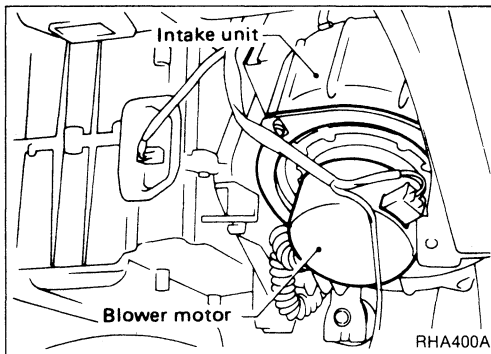

### BLOWER RESISTOR

Check continuity between terminals.

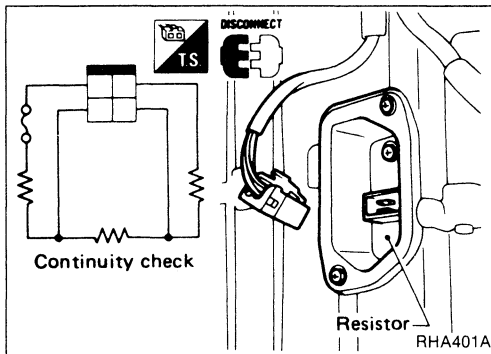

# TROUBLE DIAGNOSES — Manual Air Conditioner

## Electrical Components Inspection (Cont'd)


### A/C SWITCH

Check continuity between terminals at each switch position.

Switch condition		Terminal No.		Continuity
A/C	DEF	⊕	⊖	
ON	ON			Yes
ON	OFF	⑬	⑫	
OFF	ON			

RHA469A

### DUAL-PRESSURE SWITCH

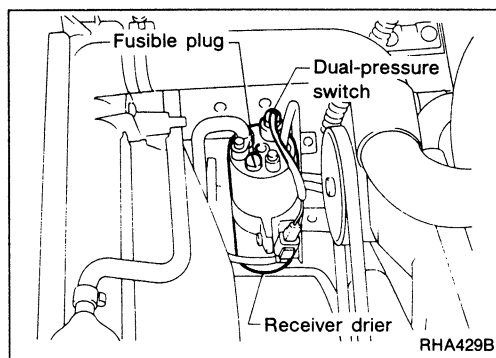

High-pressure side line pressure kPa (kg/cm <sup>2</sup> , psi)	Operation	Continuity
Decreasing to 177 - 216 (1.8 - 2.2, 26 - 31) Increasing to 2,452 - 2,844 (25 - 29, 356 - 412)	Turn OFF	Does not exist
Increasing to 177 - 235 (1.8 - 2.4, 26 - 34) Decreasing to 1,863 - 2,256 (19 - 23, 270 - 327)	Turn ON	Exists


### AMBIENT SWITCH

Ambient temperature °C (°F)	Operation
Increasing to approx. 0 - 3 (32 - 37)	Turn OFF
Decreasing to approx. 2 - 5 (36 - 41)	Turn ON

**Electrical Components Inspection (Cont'd)**

**A/C RELAY AND CONDENSER FAN RELAY**

Check circuit continuity between terminals by supplying 12 volts to coil side terminal of A/C relay.

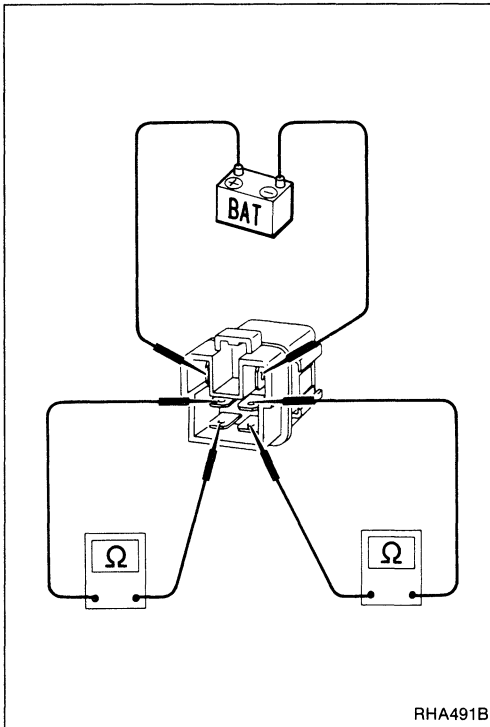

## Contents

<b>Self-diagnosis</b> .....	HA- 78
INTRODUCTION AND GENERAL DESCRIPTION .....	HA- 78
STEP BY STEP PROCEDURE .....	HA- 79
HOW TO INTERPRET THE RESULTS .....	HA- 81
STEP 1: Checks L.E.D.s and segments .....	HA- 81
STEP 2: Checks each sensor circuit for open or short circuit .....	HA- 81
STEP 3: Checks mode door position .....	HA- 83
STEP 4: Checks operation of each actuator .....	HA- 83
STEP 5: Checks temperature detected by sensors.....	HA- 85
AUXILIARY MECHANISM (Temperature setting trimmer) .....	HA- 86
<b>Symptom Chart</b> .....	HA- 88
<b>Preliminary Check</b> .....	HA- 92
PRELIMINARY CHECK 1	
(Air outlet does not change.) .....	HA- 92
PRELIMINARY CHECK 2	
(Intake door does not change.) .....	HA- 93
PRELIMINARY CHECK 3	
(Insufficient cooling) .....	HA- 94
PRELIMINARY CHECK 4	
(Insufficient heating) .....	HA- 95
PRELIMINARY CHECK 5	
(Blower motor operation is malfunctioning.) .....	HA- 96
PRELIMINARY CHECK 6	
(Magnet clutch does not engage.) .....	HA- 97
PRELIMINARY CHECK 7	
(Discharged air temperature does not change.) .....	HA- 98
PRELIMINARY CHECK 8	
(Noise) .....	HA- 98
<b>A/C Electrical Component Layout</b> .....	HA- 99
<b>Harness Layout for A/C system</b> .....	HA-101
<b>Circuit Diagram for Quick Pinpoint Check</b> .....	HA-103
<b>Wiring Diagram</b> .....	HA-104
<b>Main Power Supply and Ground Circuit Check</b> .....	HA-106
<b>Diagnostic Procedure 1</b>	
SYMPTOM: Ambient sensor circuit is open.	
(21 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-107
<b>Diagnostic Procedure 2</b>	
SYMPTOM: In-vehicle sensor circuit is open.	
(22 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-108
<b>Diagnostic Procedure 3</b>	
SYMPTOM: Intake sensor circuit is open.	
(24 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-109
<b>Diagnostic Procedure 4</b>	
SYMPTOM: Sunload sensor circuit is open.	
(25 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-110
<b>Diagnostic Procedure 5</b>	
SYMPTOM: P.B.R. circuit is open.	
(26 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-111
<b>Diagnostic Procedure 6</b>	
SYMPTOM: Ambient sensor circuit is shorted.	
(-21 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-112
<b>Diagnostic Procedure 7</b>	
SYMPTOM: In-vehicle sensor circuit is shorted.	
(-22 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-113





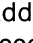
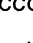
# TROUBLE DIAGNOSES — Auto Air Conditioner


## Contents (Cont'd)

<b>Diagnostic Procedure 8</b>	
SYMPTOM: Intake sensor circuit is shorted. (-24 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-114
<b>Diagnostic Procedure 9</b>	
SYMPTOM: sunload sensor circuit is shorted. (-25 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-115
<b>Diagnostic Procedure 10</b>	
SYMPTOM: P.B.R. circuit is shorted. (-25 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.) .....	HA-116
<b>Diagnostic Procedure 11</b>	
SYMPTOM: Radiator fan motor does not operate. ....	HA-116
<b>Diagnostic Procedure 12</b>	
SYMPTOM: Mode door motor does not operate normally. ....	HA-117
<b>Diagnostic Procedure 13</b>	
SYMPTOM: Intake door motor does not operate normally. ....	HA-119
<b>Diagnostic Procedure 14</b>	
SYMPTOM: Air mix door motor does not operate normally. ....	HA-121
<b>Diagnostic Procedure 15</b>	
SYMPTOM: Blower motor operation is malfunctioning under out of Starting Fan Speed Control. ....	HA-122
<b>Diagnostic Procedure 16</b>	
SYMPTOM: Magnet clutch does not engage after performing Preliminary Check 6. ....	HA-125
<b>Diagnostic Procedure 17</b>	
SYMPTOM: Self-diagnosis cannot be performed. ....	HA-127
<b>Electrical Components Inspection</b> .....	HA-127

Self-diagnosis

INTRODUCTION AND GENERAL DESCRIPTION

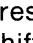The self-diagnostic system diagnoses sensors, door motors, blower motor, etc. by system line. Refer to applicable sections (items) for details. Shifting from normal control to the self-diagnostic system is accomplished by starting the engine (turning the ignition switch from "OFF" to "ON") and pressing  switch for at least 5 seconds. The  switch must be pressed within 10 seconds after starting the engine (ignition switch is turned "ON"). This system will be canceled by either pressing  switch or turning the ignition switch "OFF". Shifting from one step to another is accomplished by means of pushing  (HOT) or  (COLD) switch, as required. Additionally shifting from STEP 5 to AUXILIARY MECHANISM is accomplished by means of pushing  (fan) switch.

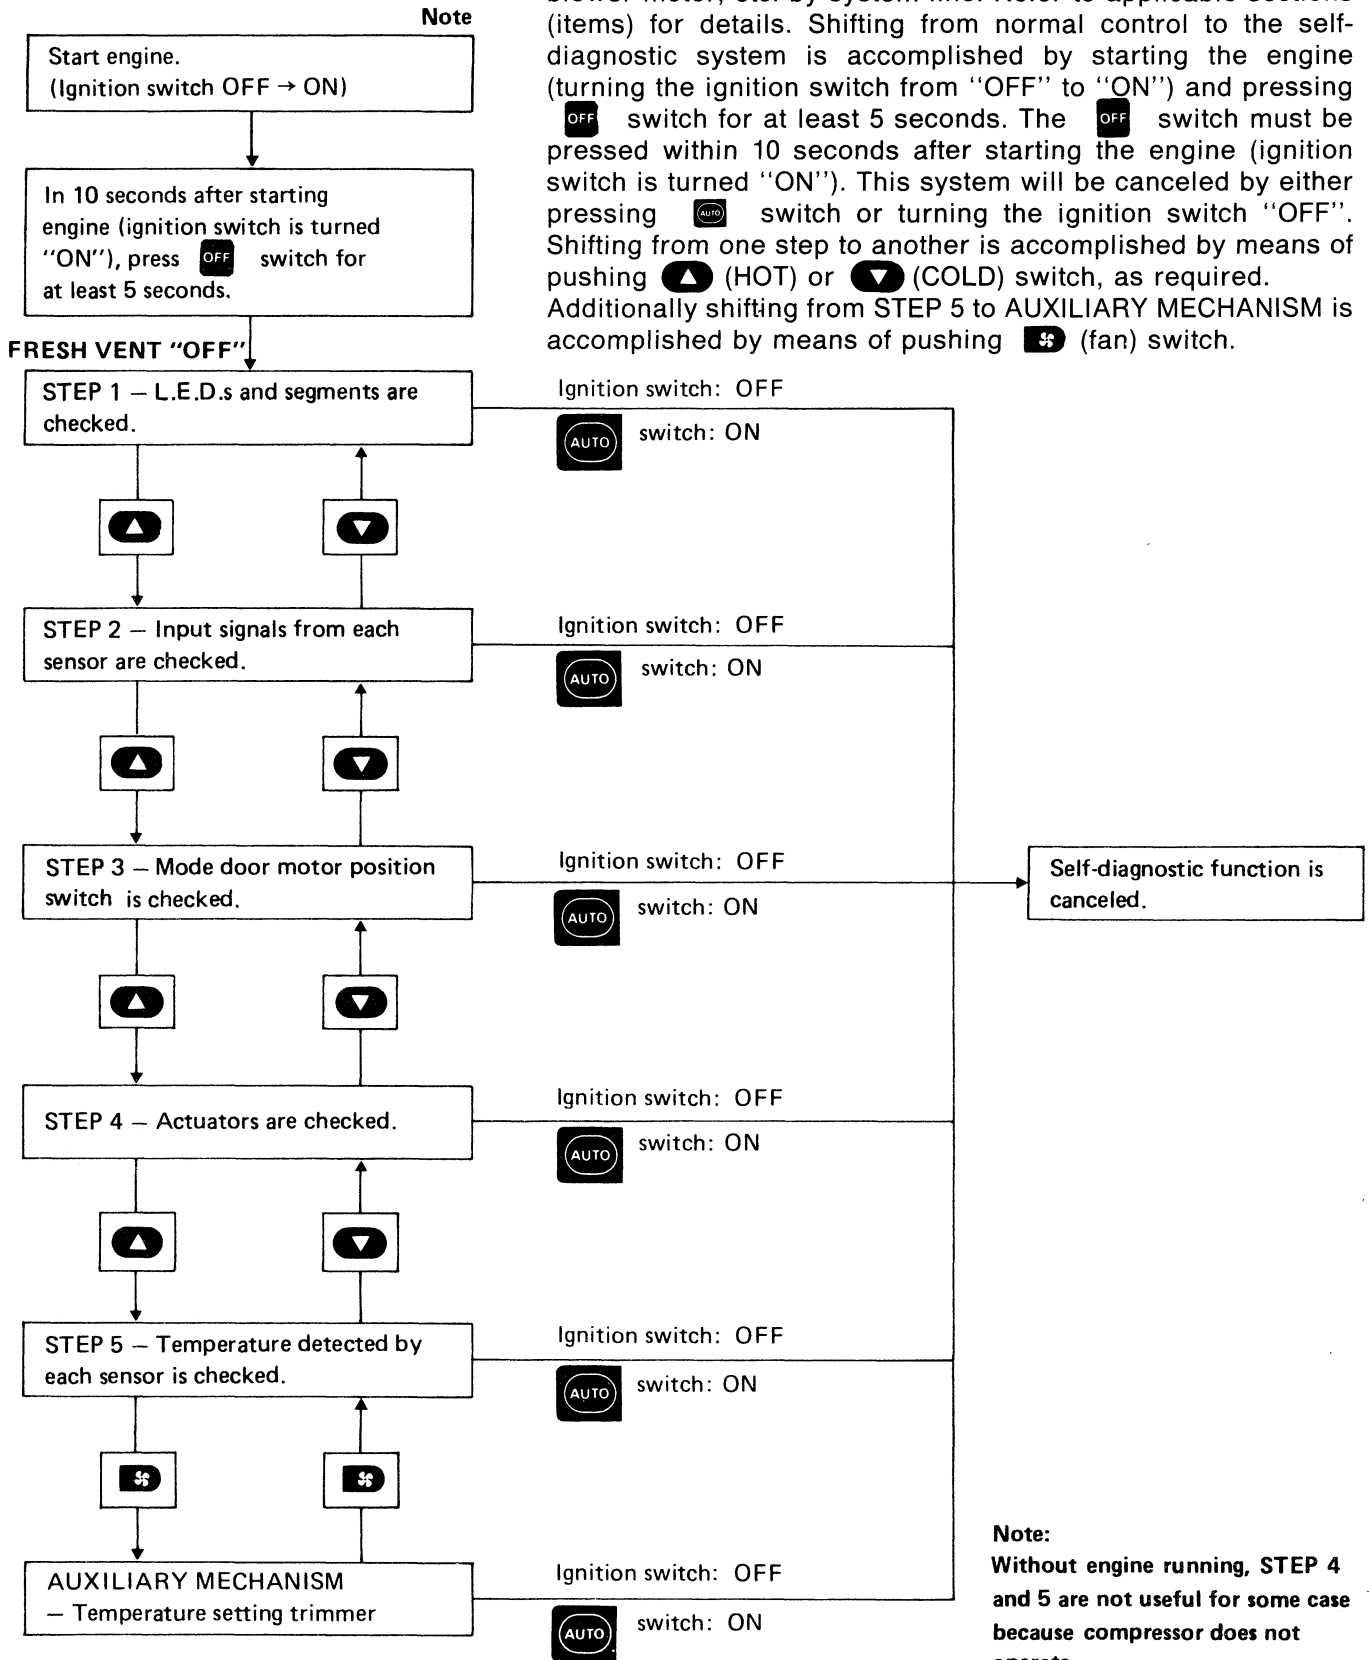


**Note:**  
Without engine running, STEP 4 and 5 are not useful for some case because compressor does not operate.




# TROUBLE DIAGNOSES — Auto Air Conditioner

## Self-diagnosis (Cont'd) STEP BY STEP PROCEDURE

Note

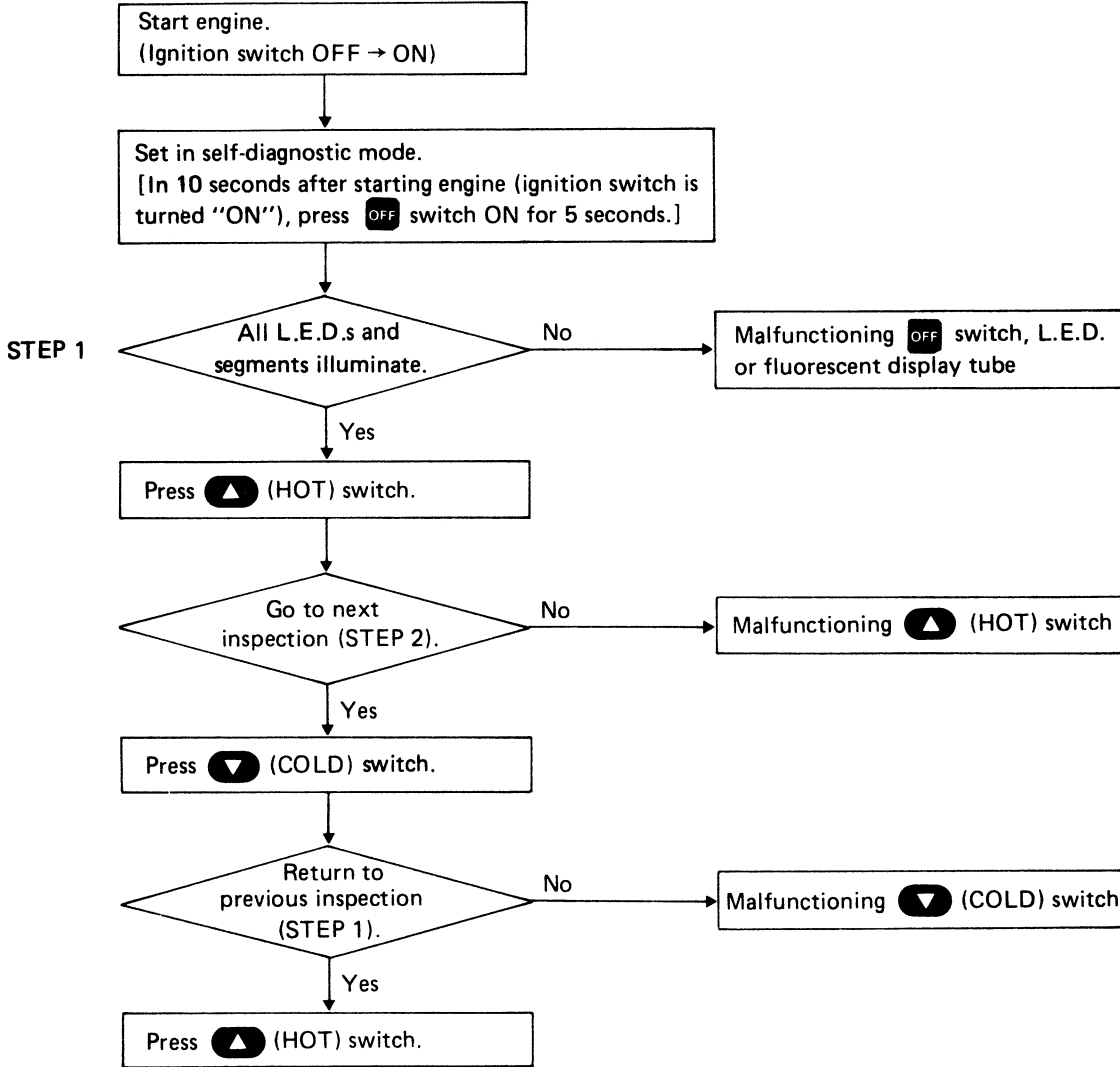

STEP 2

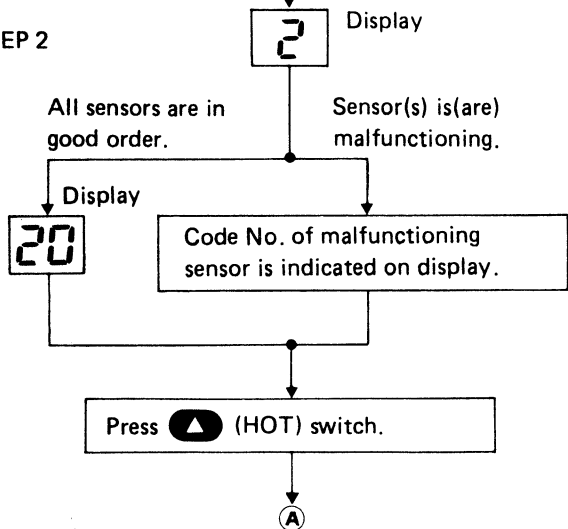

\*1: Conduct self-diagnosis STEP 2 under sunshine.

When conducting indoors, direct light (more than 60W) at sunload sensor or Code No. 25 will indicate despite that sunload sensor is functioning properly.


Code No.	Malfunctioning sensor (including circuits)
21	Ambient sensor
22	In-vehicle sensor
24	Intake sensor
25	Sunload sensor*1
26	P.B.R.

Note:

Without engine running, STEP 4 and 5 are not useful for some case because compressor does not operate.

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Self-diagnosis (Cont'd)

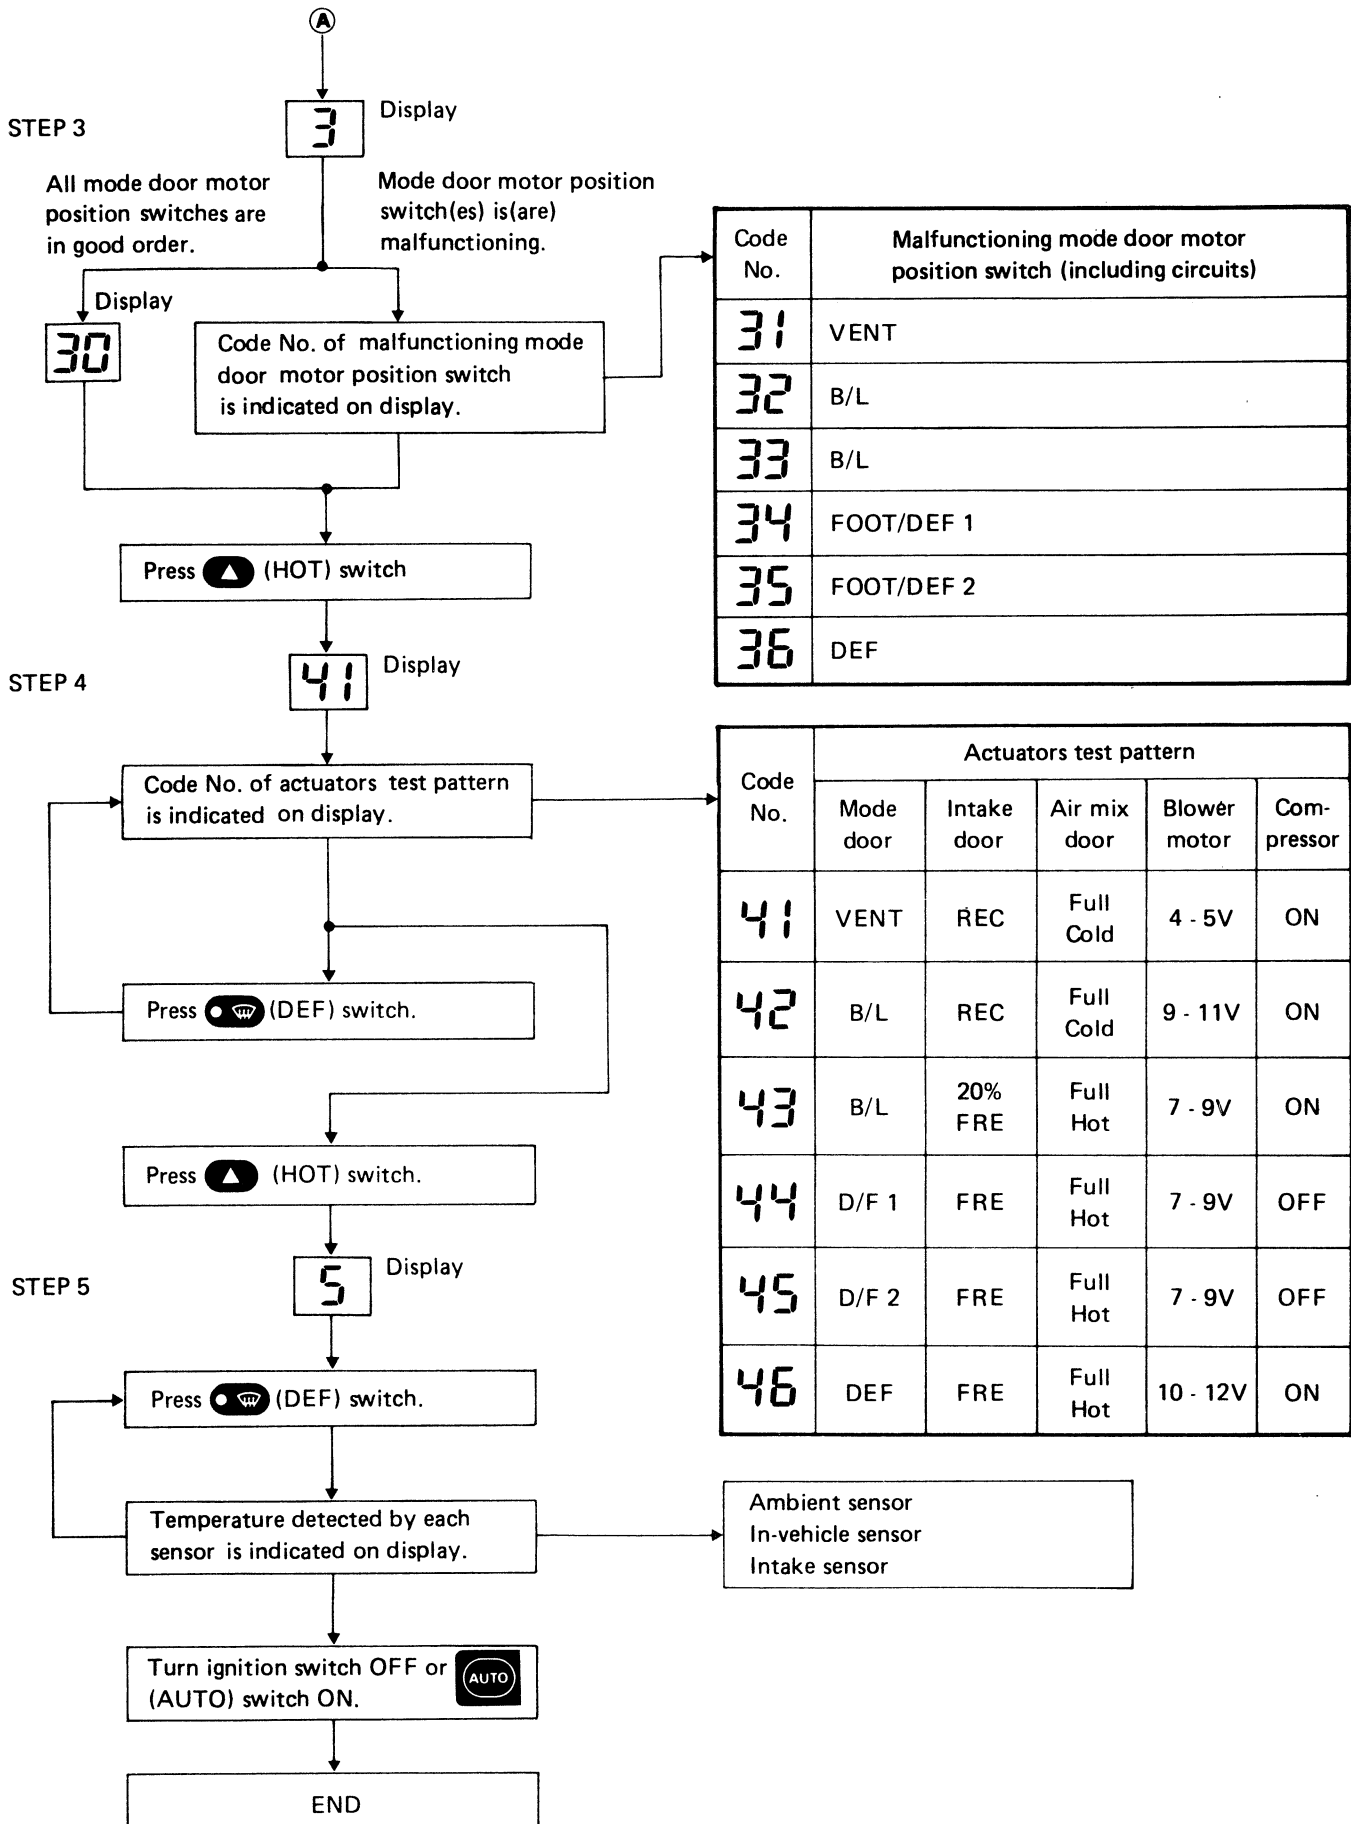



# TROUBLE DIAGNOSES — Auto Air Conditioner

## Self-diagnosis (Cont'd)


### HOW TO INTERPRET THE RESULTS

#### STEP 1: Checks L.E.D.s and segments

When switch's L.E.D. and segments are in good order in STEP 1 mode, the corresponding L.E.D. and fluorescent display tube will illuminate.

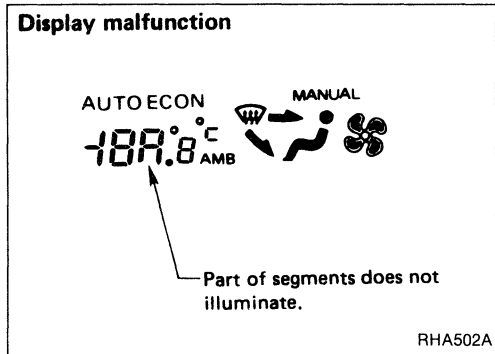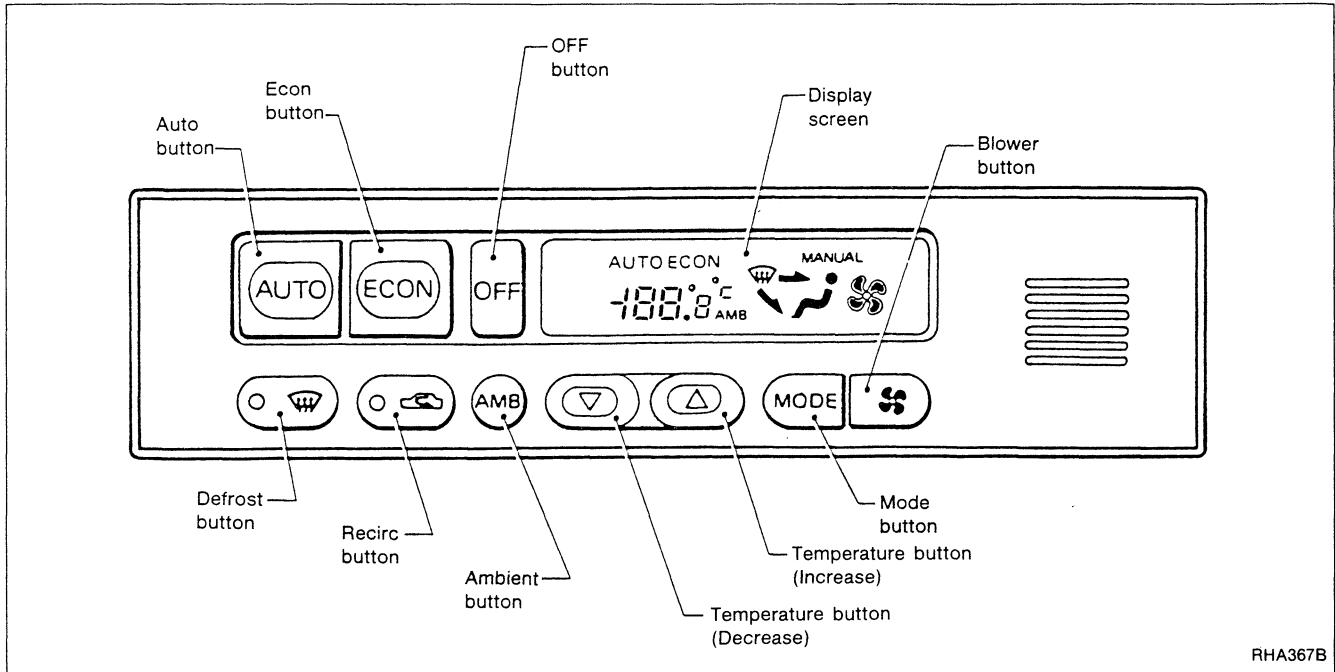

If L.E.D.s or segments malfunction, L.E.D. does not come on or display shows incomplete segment.

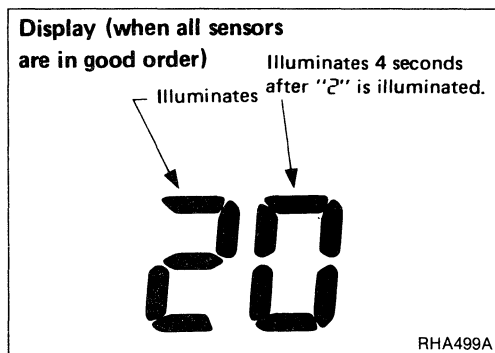

#### STEP 2: Checks each sensor circuit for open or short circuit


Display shows "2" in STEP 2 mode.

When all sensors are in good order, display shows "20".


**It takes approximately 4 seconds to check all sensors.**

## TROUBLE DIAGNOSES — Auto Air Conditioner

### Self-diagnosis (Cont'd)

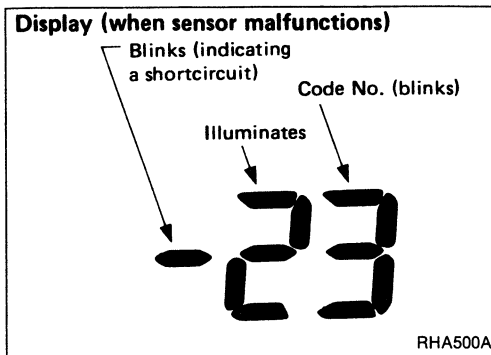

If a sensor is malfunctioning, the corresponding code No. blinks on display. A short circuit is identified by a blinking “-” mark preceding mode number.

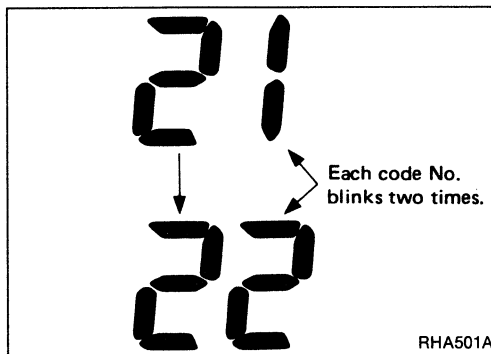

If two or more sensors malfunction, corresponding code Nos. respectively blink two times.

### Sensors and abnormalities

If a circuit is opened or shorted, display shows its code No. when input corresponds with any of following conditions.

Code No.	Sensor	Open circuit	Short circuit
21	Ambient sensor	Less than -41.9°C (-43°F)	Greater than 100°C (212°F)
22	In-vehicle sensor	Less than -41.9°C (-43°F)	Greater than 100°C (212°F)
24	Intake sensor	Less than -41.9°C (-43°F)	Greater than 100°C (212°F)
25	Sunload sensor*2	Less than 0.0319 mA	Greater than 1.147 mA
26	P.R.B.*1	Greater than 50%	Less than 30%

\*1: “50%” and “30%” refer to percentage with respect to full stroke of air mix door. (Full cold: 0%, Full hot: 100%)

\*2: **Conduct self-diagnosis STEP 2 under sunshine.**

When conducting indoors, direct light (more than 60W) at sunload sensor.




## Self-diagnosis (Cont'd)

### STEP 3: Checks mode door position

Display shows "3" in STEP 3 mode.

When all doors are in good order, display will then show "30".

It takes approximately 16 seconds to check all mode doors.

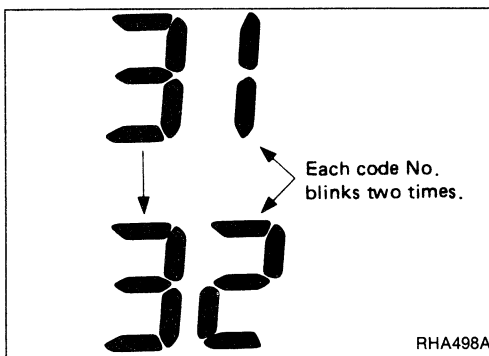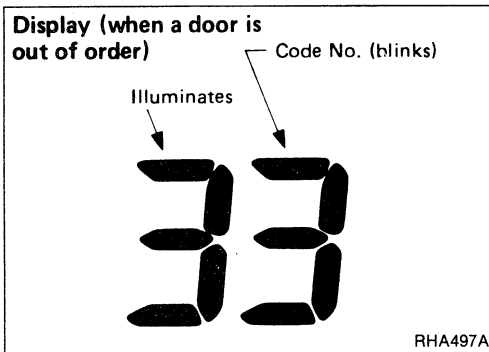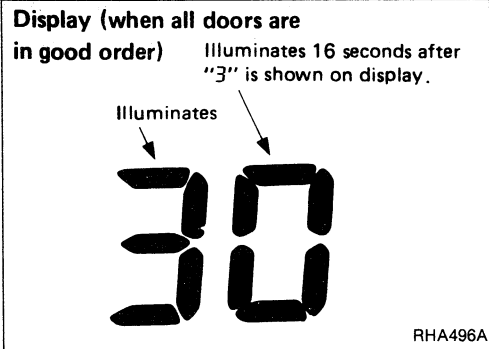


When abnormalities are detected, display shows a code No. corresponding with malfunctioning part.

Code No.	31	32	33	34	35	36
Malfunctioning part	VENT	B/L	B/L	F/D 1	F/D 2	DEF


If two or more mode doors are out of order, corresponding code numbers respectively blink two times.

If any mode door motor position switch is malfunctioning, mode door motor will also malfunction.

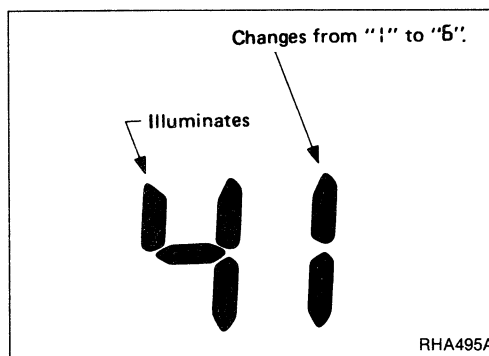

### STEP 4: Checks operation of each actuator

Display shows "41" in STEP 4 mode.

When  (DEF) switch is pressed one time, display shows "42". Thereafter, each time the switch is pressed, display advances one number at a time, up to "45", then returns to "41".

## TROUBLE DIAGNOSES — Auto Air Conditioner

### Self-diagnosis (Cont'd)

During inspection in STEP 4 mode, auto amplifier will forcefully transmit an output to the affected actuators in response to code No. shown on display, as indicated in table below.

**Checks must be made visually, by listening to any noise, or by touching air outlets with your hand, etc. for improper operation.**





Code No.	41	42	43	44	45	46
Actuator						
Mode door	VENT	B/L	B/L	F/D 1	F/D 2	DEF
Intake door	REC	REC	20% FRE	FRE	FRE	FRE
Air mix door	Full Cold	Full Cold	Full Hot	Full Hot	Full Hot	Full Hot
Blower motor	4 - 5 V	9 - 11 V	7 - 9 V	7 - 9 V	7 - 9 V	10 - 12 V
Compressor	ON	ON	ON	OFF	OFF	ON




**Operating condition of each actuator cannot be checked by indicators.**

## Self-diagnosis (Cont'd)

### STEP 5: Checks temperature detected by sensors

Display shows "5" in STEP 5 mode.

- When  (DEF) switch is pressed one time, display shows temperature detected by ambient sensor.
- When  (DEF) switch is pressed second time, display shows temperature detected by in-vehicle sensor.
- When  (DEF) switch is pressed third time, display shows temperature detected by intake sensor.
- When  (DEF) switch is pressed fourth time, display returns to original presentation "5".

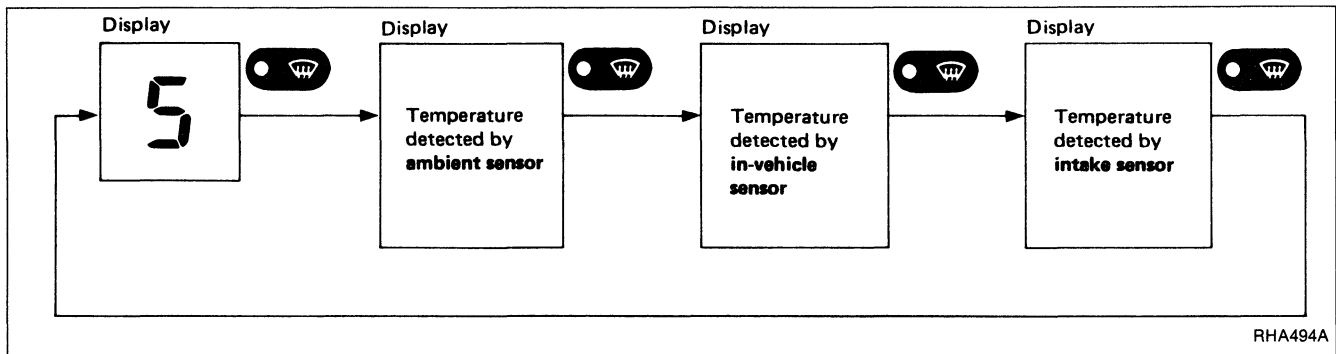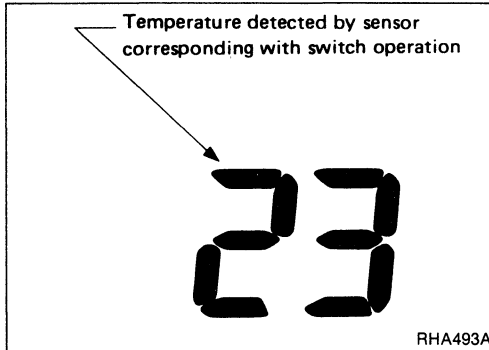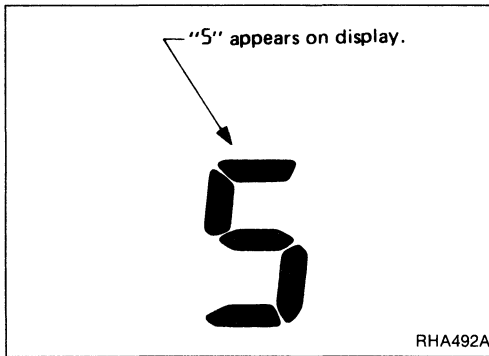




If temperature shown on display greatly differs from actual temperature, check sensor circuit at first then inspect sensor itself according to the procedures described in **Electrical Components Inspection**.


## Self-diagnosis (Cont'd)

### AUXILIARY MECHANISM (Temperature setting trimmer)

This trimmer compensates for differences between temperature setting (displayed digitally) and temperature felt by driver in a range of  $\pm 3^{\circ}\text{C}$  ( $\pm 6^{\circ}\text{F}$ ).

Operating procedures for this trimmer are as follows:

Starting with STEP 5 under "Self-diagnostic mode", press  (fan) switch to set air conditioning system in auxiliary mode. Then, press either  (HOT) or  (COLD) switch as desired. Temperature will change at a rate of  $0.5^{\circ}\text{C}$  ( $1^{\circ}\text{F}$ ) each time a switch is pressed.

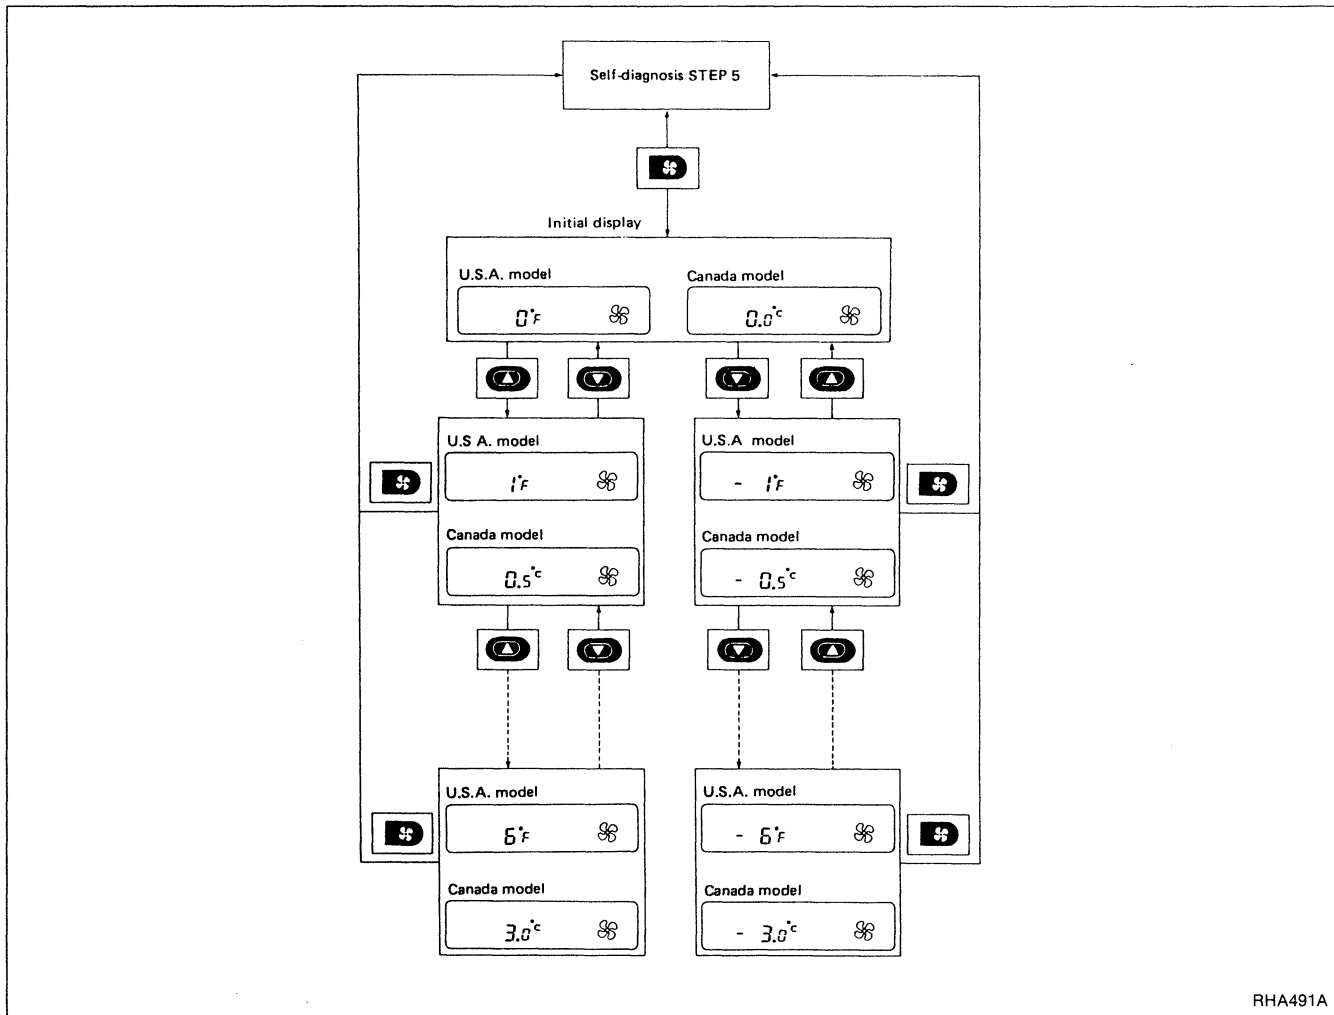

When battery cable is disconnected, trimmer operation is canceled and temperature set becomes that of initial condition i.e.  $0^{\circ}\text{C}$  ( $0^{\circ}\text{F}$ ).



## TROUBLE DIAGNOSES — Auto Air Conditioner

---

**NOTE**

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Symptom Chart

### DIAGNOSTIC TABLE

PROCEDURE	Self-diagnosis					Preliminary Check								Diagnostic Procedure											
REFERENCE PAGE	HA-79, 81	HA-79, 81	HA-80, 83	HA-80, 83	HA-80, 85	HA-78, 86	HA-92	HA-93	HA-94	HA-95	HA-96	HA-97	HA-98	HA-48, 98	HA-107	HA-108	HA-109	HA-110	HA-111	HA-112	HA-113	HA-114	HA-115	HA-116	HA-116
SYMPTOM	STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	AUXILIARY MECHANISM	Preliminary Check 1	Preliminary Check 2	Preliminary Check 3	Preliminary Check 4	Preliminary Check 5	Preliminary Check 6	Preliminary Check 7	Preliminary Check 8	Diagnostic Procedure 1	Diagnostic Procedure 2	Diagnostic Procedure 3	Diagnostic Procedure 4	Diagnostic Procedure 5	Diagnostic Procedure 6	Diagnostic Procedure 7	Diagnostic Procedure 8	Diagnostic Procedure 9	Diagnostic Procedure 10	Diagnostic Procedure 11
Air outlet does not change.	①	②	○	○	○		③								○	○	○	○	○	○	○	○	○	○	○
Intake door does not change.	①	②	○	○	○		④								○	○	○	○	○	○	○	○	○	○	○
Insufficient cooling	○	○	○	○	○	○	○	○	①		○	○	○		○	○	○	○	○	○	○	○	○	○	○
Insufficient heating	○	○	○	○	○	○	○	○		①	○		○		○	○	○	○	○	○	○	○	○	○	○
Blower motor operation is malfunctioning.	①	②	○	○	○							③			○	○	○	○	○	○	○	○	○	○	○
Magnet clutch does not engage.	①	②	○	○	○							③			○	○	○	○	○	○	○	○	○	○	○
Discharged air temperature does not change.	①	②	○	○	○							③			○	○	○	○	○	○	○	○	○	○	○
Noise														①											
Result of Self-diagnosis STEP 2	21	Ambient sensor circuit is open.	①	②		③									④										
	22	In-vehicle sensor circuit is open.	①	②		③										④									
	24	Intake sensor circuit is open.	①	②		③												④							
	25	Sunload sensor circuit is open.	①	②															③						
	26	P.B.R. circuit is open.	①	②																③					

①, ②: The number means checking order.

○: As for checking order, refer to each flow chart. (It depends on malfunctioning portion.)

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Symptom Chart (Cont'd)

Diagnostic Procedure	Main Power Supply and Ground Circuit Check	Electrical Components Inspection										
Diagnostic Procedure 12	Auto amp.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-117 - 118
Diagnostic Procedure 13	10A Fuse #23	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-119 - 120
Diagnostic Procedure 14	15A Fuses #4 and #5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-121
Diagnostic Procedure 15	10A Fuse #10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-122 - 124
Diagnostic Procedure 16	10A Fuse #20	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-125 - 126
Diagnostic Procedure 17	Ambient sensor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-127
	In-vehicle sensor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-106
	Intake sensor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-106
	Sunload sensor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-106
	P.B.R.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-106
	Air mix door motor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-138
	Mode door motor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-136 - 137
	Intake door motor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-139 - 140
	Blower motor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-138 - 139
	Fan control amp.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-147 - 148
	Blower high relay	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-146 - 147
	A/C relay	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-133, HA-149 - 150
	Dual-pressure switch	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-133, HA-143 - 144
	Magnet clutch (Compressor)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-73
	Auto amp.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	—
	E.C.C.S. control unit	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-75, 127
	Radiator fan motor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-73, 127
	Radiator fan relay	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	HA-74, 127
	Thermoswitch	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	—
	Harness	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Refer to EF & EC section.

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Symptom Chart (Cont'd)

PROCEDURE	Self-diagnosis					Preliminary Check								Diagnostic Procedure											
REFERENCE PAGE																									
SYMPTOM																									
Result of Self-diagnosis STEP 2	-21	Ambient sensor circuit is shorted.	①	②	③																				
	-22	In-vehicle sensor circuit is shorted.	①	②	③																④				
	-24	Intake sensor circuit is shorted.	①	②	③																		④		
	-25	Sunload sensor circuit is shorted.	①	②																				③	
	-26	P.B.R. circuit is shorted.	①	②																					④
Radiator fan motor does not operate.																								①	
Mode door motor does not operate normally.		①	②	③	④	○							○	○	○	○	○	○	○	○	○	○	○	○	
Intake door motor does not operate normally.		①	②	③	○								○	○	○	○	○	○	○	○	○	○	○	○	
Air mix door motor does not operate normally.		①	②	③	○								○	○	○	○	○	○	○	○	○	○	○	○	
Blower motor operation is malfunctioning under out of Starting Fan Speed Control.		①	②	○	○					③			○	○	○	○	○	○	○	○	○	○	○	○	
Magnet clutch does not operate after performing Preliminary Check 6.		①	②	○	○					③			○	○											
Self-diagnosis cannot be performed.																									

①, ②: The number means checking order.

○: As for checking order, refer to each flow chart. (It depends on malfunctioning portion.)

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Symptom Chart (Cont'd)


Diagnostic Procedure	Main Power Supply and Ground Circuit Check	Electrical Components Inspection										
Diagnostic Procedure 12	Auto amp.											HA-117 - 118
Diagnostic Procedure 13	10A Fuse #23											HA-119 - 120
Diagnostic Procedure 14	15A Fuses #4 and #5											HA-121
Diagnostic Procedure 15	10A Fuse #10											HA-122 - 124
Diagnostic Procedure 16	10A Fuse #20											HA-125 - 126
Diagnostic Procedure 17	Ambient sensor											HA-127
	In-vehicle sensor											HA-106
	Intake sensor											HA-106
	Sunload sensor											HA-106
	P.B.R.											HA-106
	Air mix door motor											HA-138
	Mode door motor											HA-136 - 137
	Intake door motor											HA-139 - 140
	Blower motor											HA-138 - 139
	Fan control amp.											HA-147 - 148
	Blower high relay											HA-146 - 147
	A/C relay											HA-133, HA-149 - 150
	Dual-pressure switch											HA-133, HA-143 - 144
	Magnet clutch (Compressor)											HA-73
	Auto amp.											—
	E.C.C.S. control unit											—
	Radiator fan motor											Refer to EF & EC section.
	Radiator fan relay											
	Thermoswitch											
	Harness											

## Preliminary Check

### PRELIMINARY CHECK 1

**Air outlet does not change.**

- Perform Self-diagnosis STEP 1 before referring to the flow chart.

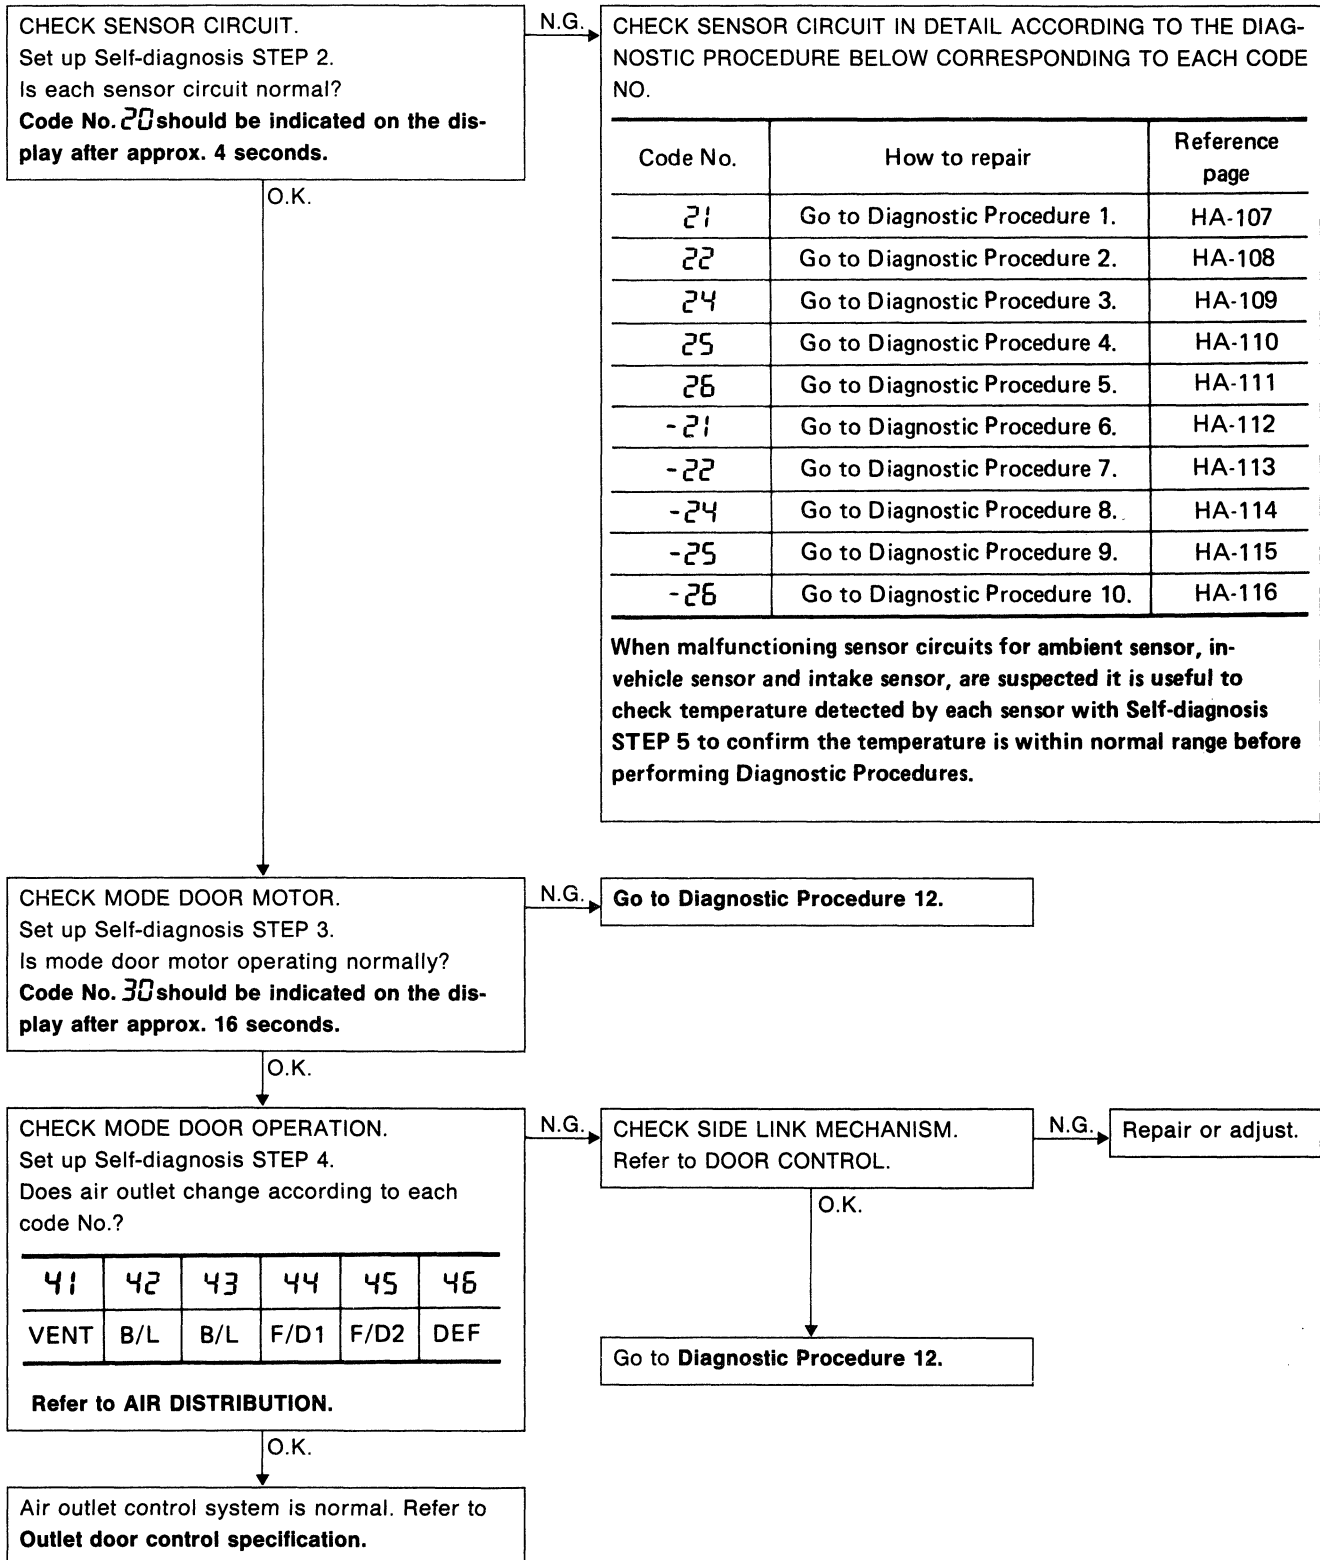

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Preliminary Check (Cont'd)

### PRELIMINARY CHECK 2

Intake door does not change.

- Perform Self-diagnosis STEP 1 before referring to the following flow chart.

CHECK SENSOR CIRCUIT.  
Set up Self-diagnosis STEP 2.  
Is each sensor circuit normal?  
**Code No. 20 should be indicated on the display after approx. 4 seconds later.**

N.G. →

CHECK SENSOR CIRCUIT IN DETAIL ACCORDING TO THE DIAGNOSTIC PROCEDURE BELOW CORRESPONDED TO EACH CODE NO.

Code No.	How to repair	Reference page
21	Go to Diagnostic Procedure 1.	HA-107
22	Go to Diagnostic Procedure 2.	HA-108
24	Go to Diagnostic Procedure 3.	HA-109
25	Go to Diagnostic Procedure 4.	HA-110
26	Go to Diagnostic Procedure 5.	HA-111
-21	Go to Diagnostic Procedure 6.	HA-112
-22	Go to Diagnostic Procedure 7.	HA-113
-24	Go to Diagnostic Procedure 8.	HA-114
-25	Go to Diagnostic Procedure 9.	HA-115
-26	Go to Diagnostic Procedure 10.	HA-116

When malfunctioning sensor circuits for ambient sensor, in-vehicle sensor and intake sensor, are suspected, it is useful to check temperature detected by each sensor with Self-diagnosis STEP 5 to confirm the temperature is within normal range before performing Diagnostic Procedure.

O.K. ↓

CHECK INTAKE DOOR MOTOR OPERATION.  
Set up Self-diagnosis STEP 4.  
Does intake air change according to each code No.?

41	42	43	44	45	46
REC	REC	20% FRE	FRE	FRE	FRE

N.G. →

CHECK INTAKE DOOR ROD or LEVER MECHANISM.  
Refer to DOOR CONTROL.

N.G. →

Repair or Adjust.

O.K. ↓

Go to Diagnostic Procedure 13.

O.K. ↓


Intake door control system is normal.  
Refer to Intake door control specification.

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Preliminary Check (Cont'd)

### PRELIMINARY CHECK 3

#### Insufficient cooling

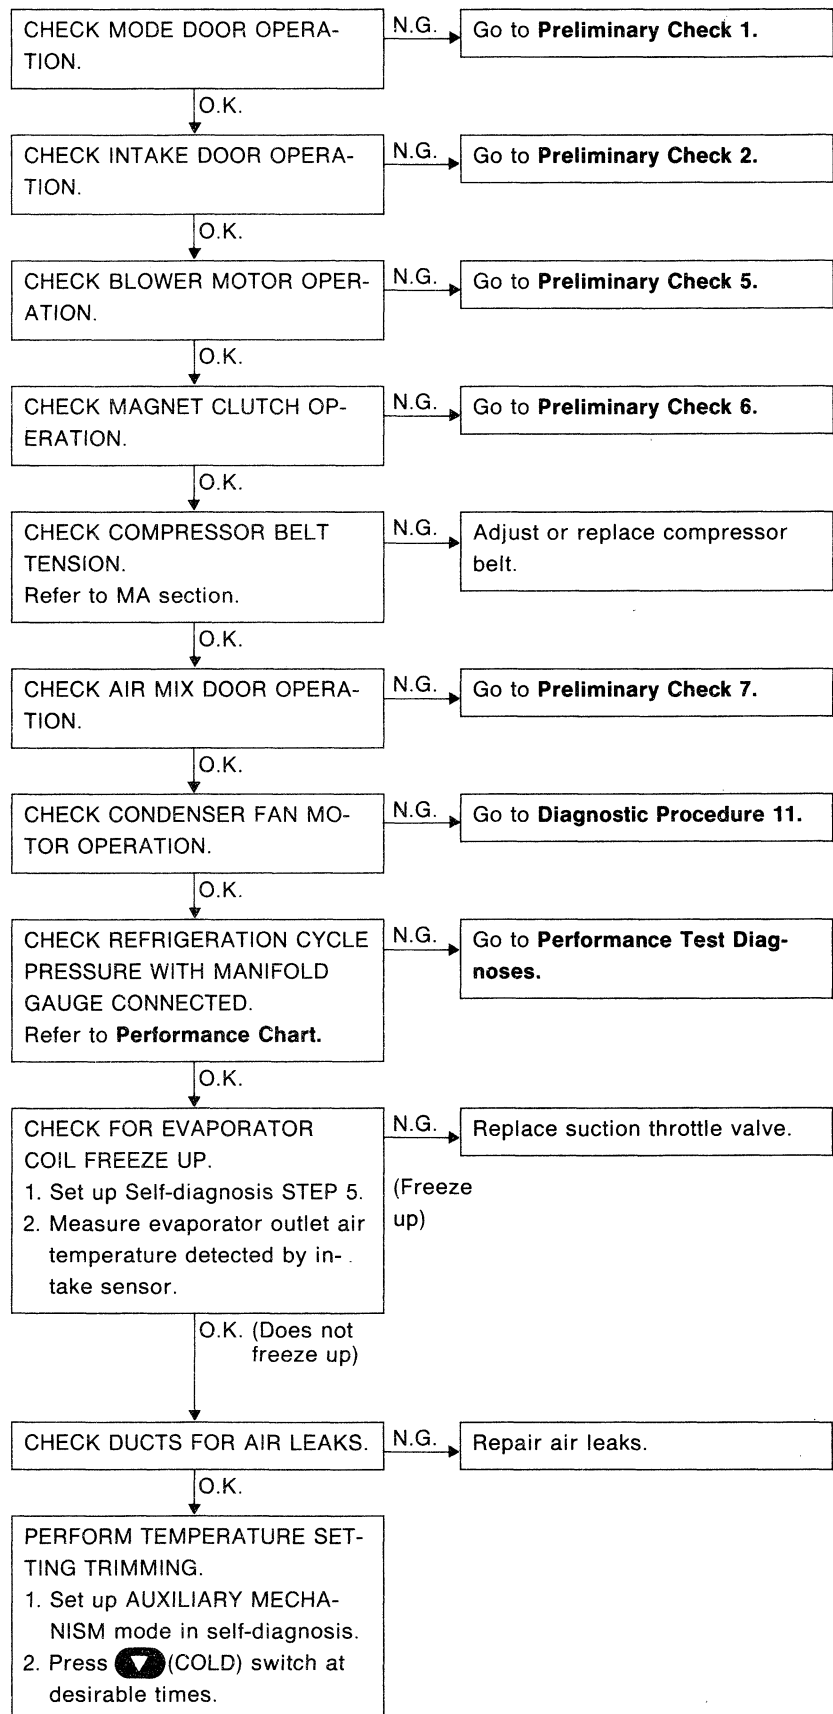




## Preliminary Check (Cont'd)

### PRELIMINARY CHECK 4

Insufficient heating

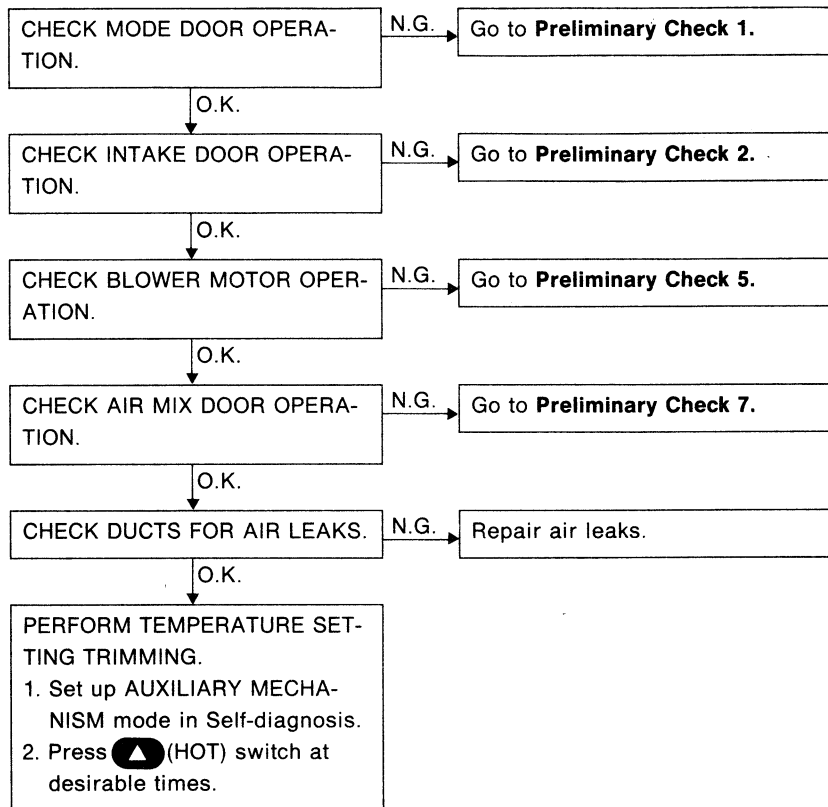

## Preliminary Check (Cont'd)

### PRELIMINARY CHECK 5

Blower motor operation is malfunctioning.

- Perform Self-diagnosis STEP 1 before referring to the following flow chart.

CHECK SENSOR CIRCUIT.  
Set up Self-diagnosis STEP 2.  
Is each sensor circuit normal?  
**Code No. 20 should be indicated on the display after approx. 4 seconds.**

N.G.

CHECK SENSOR CIRCUIT IN DETAIL ACCORDING TO THE DIAGNOSTIC PROCEDURE BELOW CORRESPONDING TO EACH CODE NO.

Code No.	How to repair	Reference page
21	Go to Diagnostic Procedure 1.	HA-107
22	Go to Diagnostic Procedure 2.	HA-108
24	Go to Diagnostic Procedure 3.	HA-109
25	Go to Diagnostic Procedure 4.	HA-110
26	Go to Diagnostic Procedure 5.	HA-111
-21	Go to Diagnostic Procedure 6.	HA-112
-22	Go to Diagnostic Procedure 7.	HA-113
-24	Go to Diagnostic Procedure 8.	HA-114
-25	Go to Diagnostic Procedure 9.	HA-115
-26	Go to Diagnostic Procedure 10.	HA-116

**When malfunctioning sensor circuits for ambient sensor, in-vehicle sensor and intake sensor are suspected, it is useful to check temperature detected by each sensor with Self-diagnosis STEP 5 to confirm the temperature is within normal range before performing Diagnostic Procedures.**

O.K.

CHECK BLOWER MOTOR OPERATION.  
Set up Self-diagnosis STEP 4.  
Does blower speed change according to each code No.?

Code No.	41	42	43	44	45	46
Blower motor speed	Low	Middle high	Middle low			high

N.G.

Go to Diagnostic Procedure 15.

O.K.

Is engine coolant temperature below 50°C (122°F) and ambient temperature below 15°C (59°F)?

No

Blower motor operation is normal  
Refer to **Fan speed control specification**.

Yes

IS BLOWER MOTOR CONTROLLED UNDER FAN STARTING SPEED CONTROL?  
Refer to **Starting fan speed control specification**.

No

Check engine temperature sensor control circuit.  
Refer to EF & EC section.

Yes

Blower motor operation is normal.

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Preliminary Check (Cont'd)

### PRELIMINARY CHECK 6

Magnet clutch does not engage.

- Perform Self-diagnosis STEP 1 before referring to the following flow chart.

CHECK SENSOR CIRCUIT.  
Set up Self-diagnosis STEP 2.  
Is each sensor circuit normal?  
**Code No. 20 should be indicated on the display after approx. 4 seconds.**

N.G.

CHECK SENSOR CIRCUIT IN DETAIL ACCORDING TO THE DIAGNOSTIC PROCEDURE BELOW CORRESPONDED TO EACH CODE NO.

Code No.	How to repair	Reference page
21	Go to Diagnostic Procedure 1.	HA-107
22	Go to Diagnostic Procedure 2.	HA-108
24	Go to Diagnostic Procedure 3.	HA-109
25	Go to Diagnostic Procedure 4.	HA-110
26	Go to Diagnostic Procedure 5.	HA-111
-21	Go to Diagnostic Procedure 6.	HA-112
-22	Go to Diagnostic Procedure 7.	HA-113
-24	Go to Diagnostic Procedure 8.	HA-114
-25	Go to Diagnostic Procedure 9.	HA-115
-26	Go to Diagnostic Procedure 10.	HA-116

When malfunctioning sensor circuits for ambient sensor, in-vehicle sensor and intake sensor are suspected, it is useful to check temperature detected by each sensor with setting up Self-diagnosis STEP 5 to confirm the temperature is within normal range before performing Diagnostic Procedures.

O.K.

CHECK MAGNET CLUTCH OPERATION.  
Set up Self-diagnosis STEP 4.  
Does magnet clutch operate according to each code No.?

Code No.	41	42	43	44	45	46
Actuator						
Compressor	ON	ON	ON	OFF	OFF	ON

N.G.

CHECK REFRIGERANT.  
Connect manifold gauge, then check system pressure.

N.G.

Check refrigerant leaks.

O.K.

Go to Diagnostic Procedure 16.

O.K.

Magnet clutch control system is normal.  
Refer to MAGNET CLUTCH CONTROL.


# TROUBLE DIAGNOSES — Auto Air Conditioner

## Preliminary Check (Cont'd)

### PRELIMINARY CHECK 7

Discharged air temperature does not change.

- Perform Self-diagnosis STEP 1 before referring to the following flow chart.

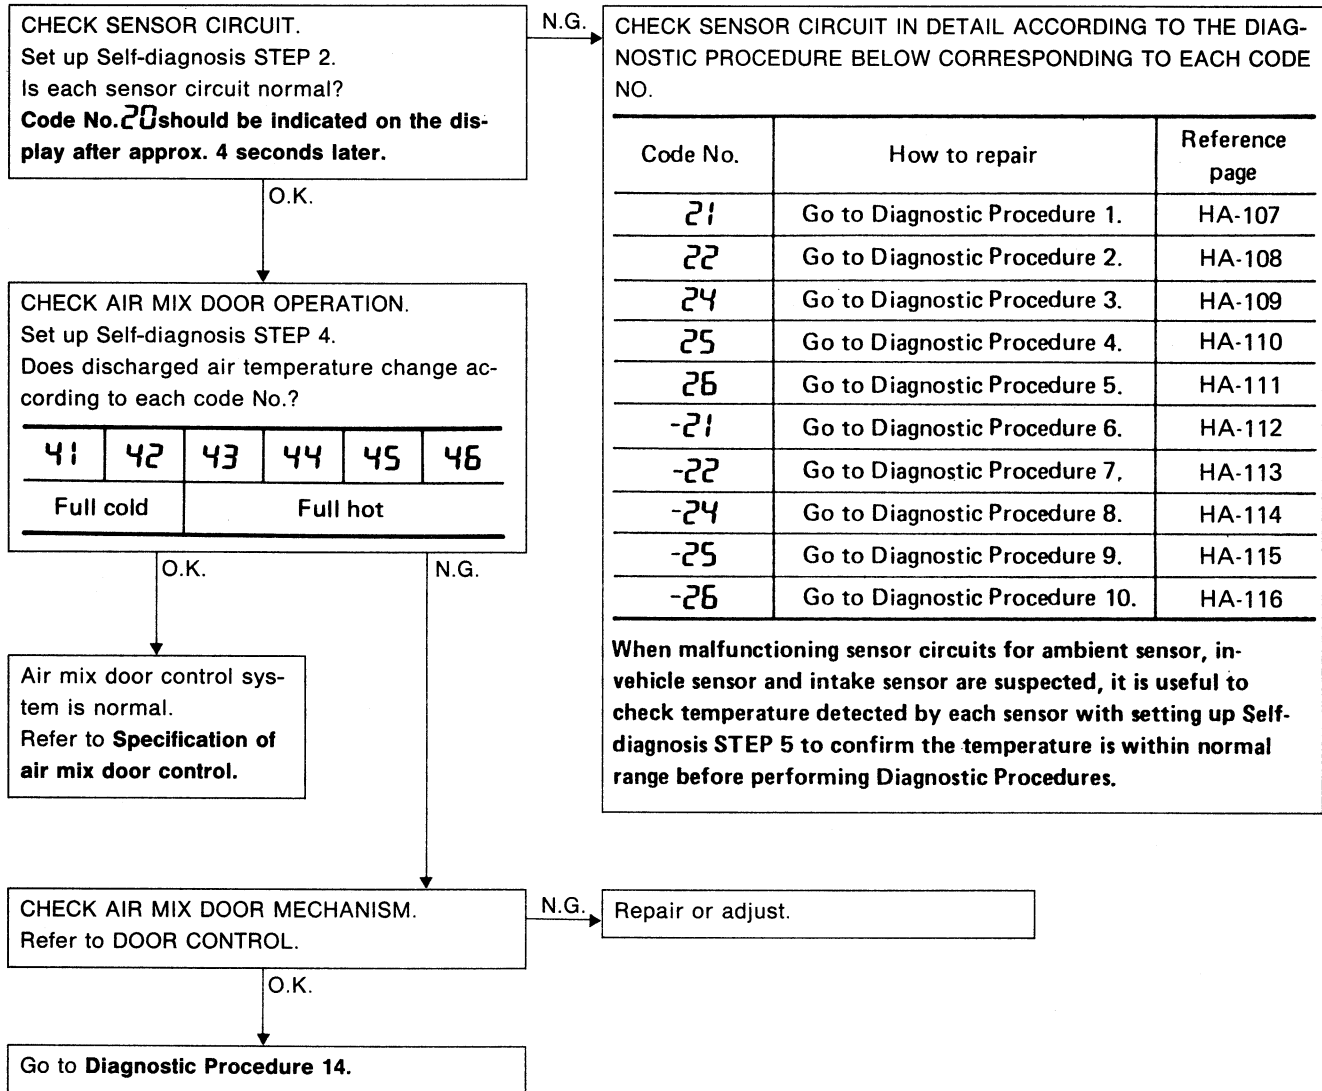

Code No.	How to repair	Reference page
21	Go to Diagnostic Procedure 1.	HA-107
22	Go to Diagnostic Procedure 2.	HA-108
24	Go to Diagnostic Procedure 3.	HA-109
25	Go to Diagnostic Procedure 4.	HA-110
26	Go to Diagnostic Procedure 5.	HA-111
-21	Go to Diagnostic Procedure 6.	HA-112
-22	Go to Diagnostic Procedure 7.	HA-113
-24	Go to Diagnostic Procedure 8.	HA-114
-25	Go to Diagnostic Procedure 9.	HA-115
-26	Go to Diagnostic Procedure 10.	HA-116

When malfunctioning sensor circuits for ambient sensor, in-vehicle sensor and intake sensor are suspected, it is useful to check temperature detected by each sensor with setting up Self-diagnosis STEP 5 to confirm the temperature is within normal range before performing Diagnostic Procedures.





### PRELIMINARY CHECK 8

Noise

- Refer to HA-48.

**A/C Electrical Component Layout**


**Engine Compartment**

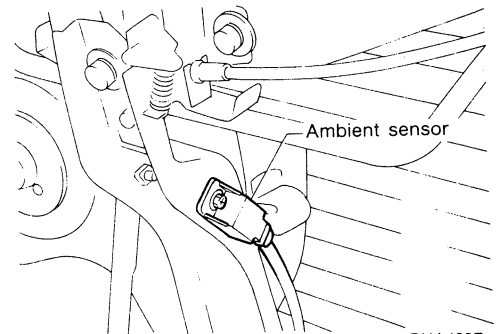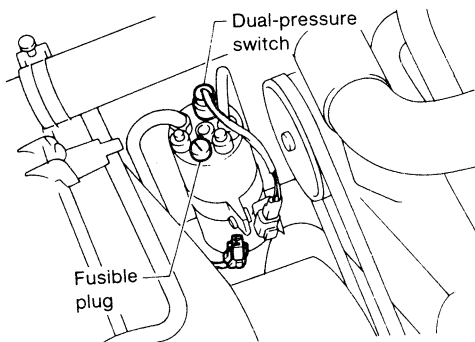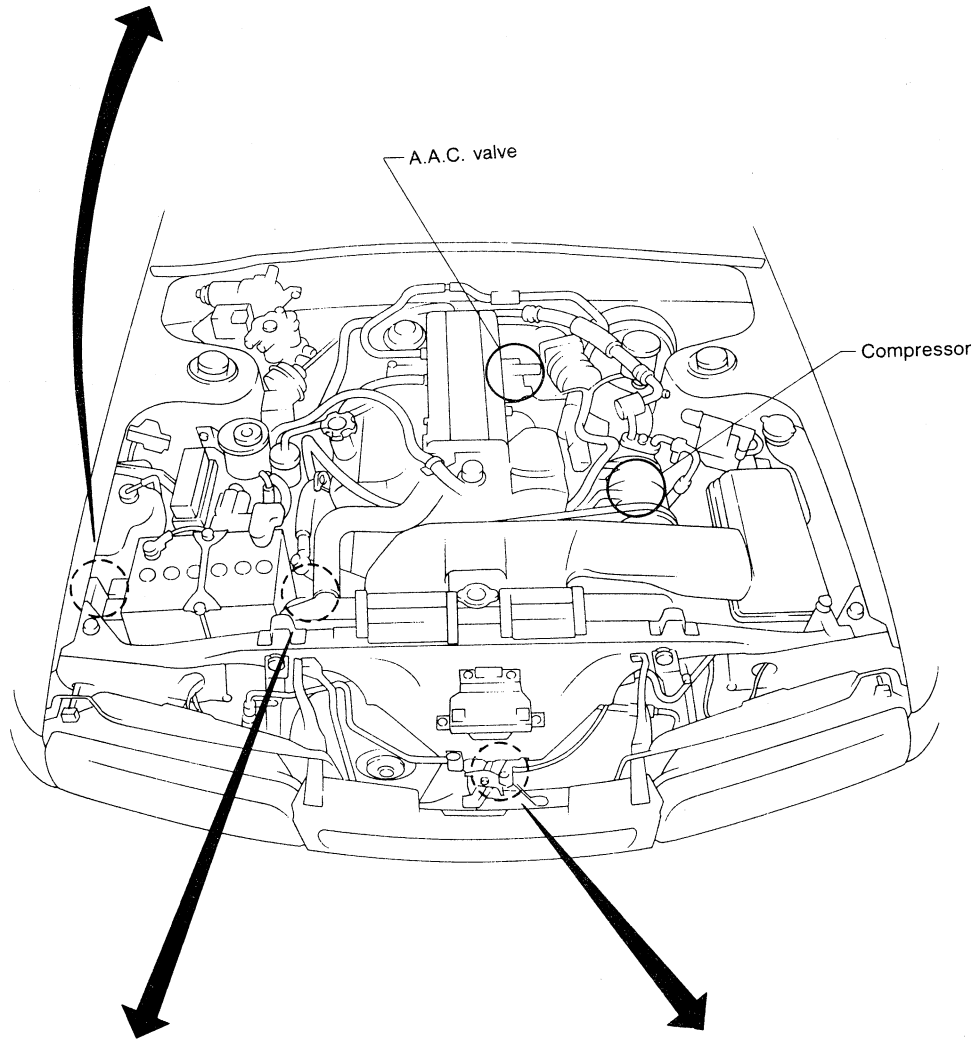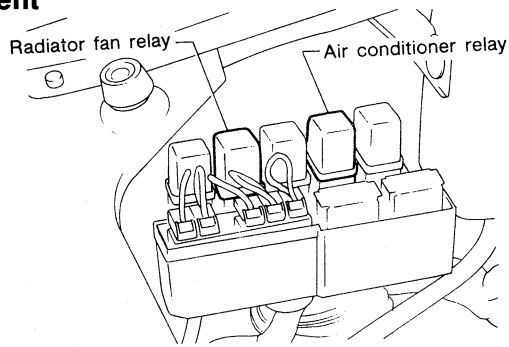






RHA483B

A/C Electrical Component Layout (Cont'd)


Passenger compartment

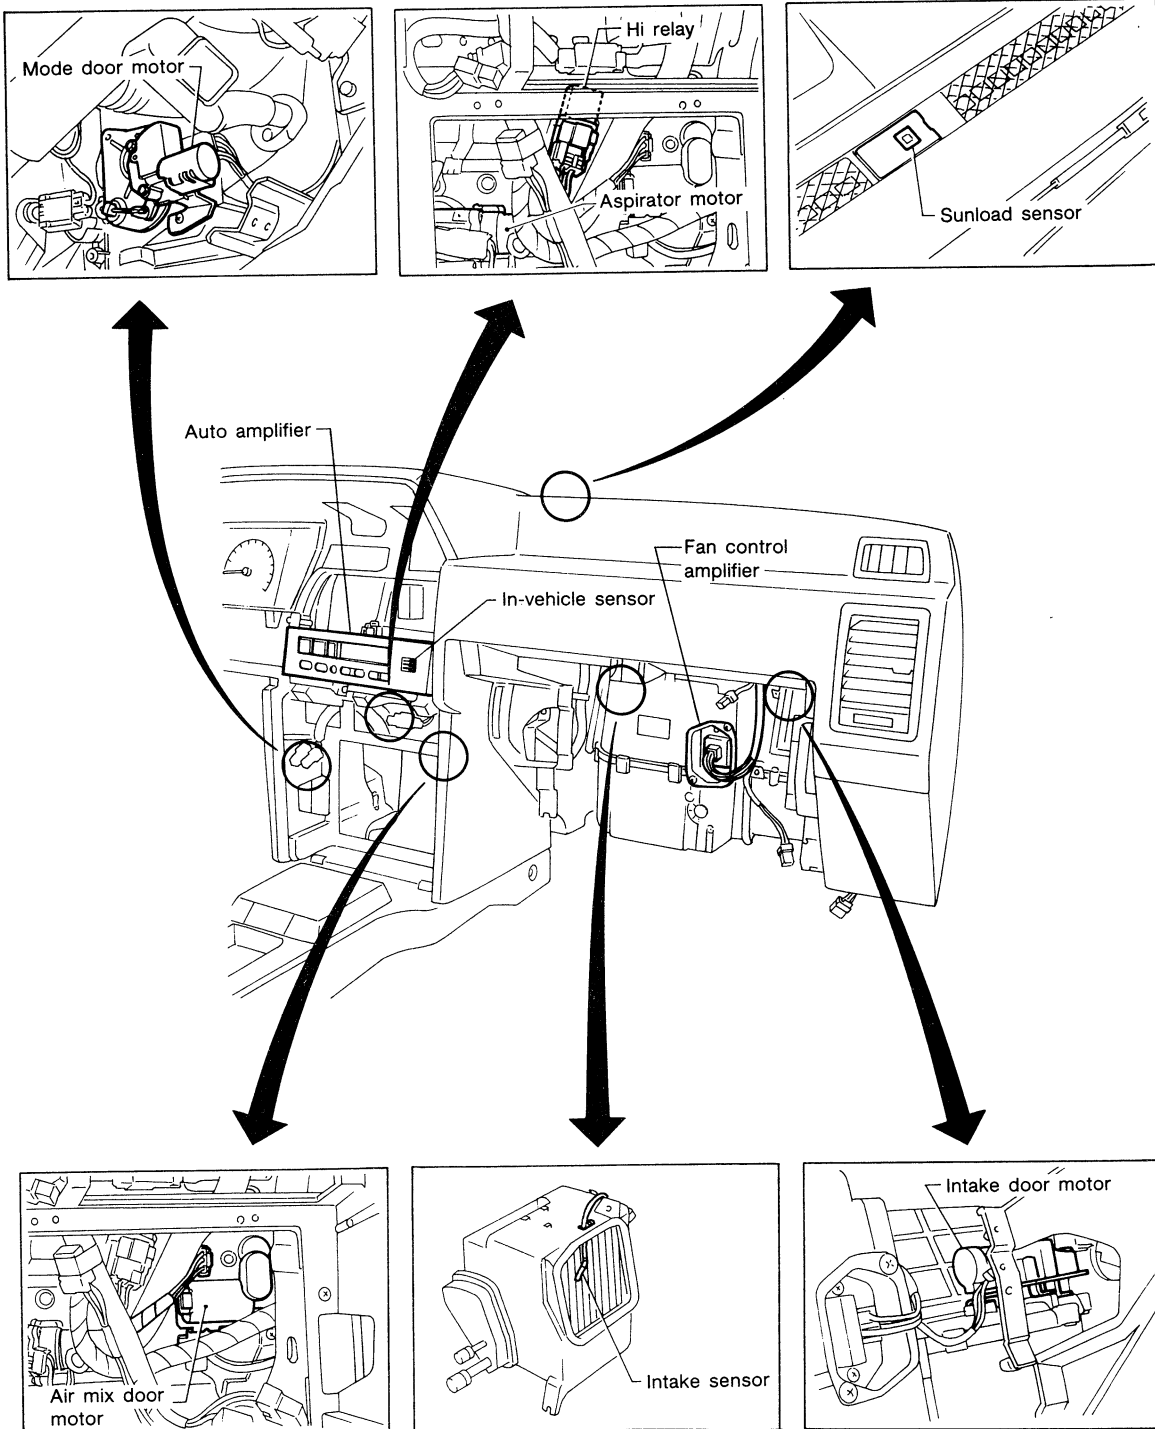

**Harness Layout for A/C System**

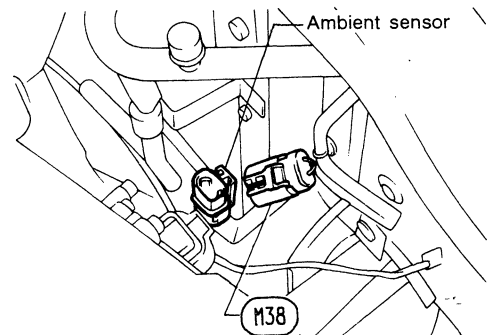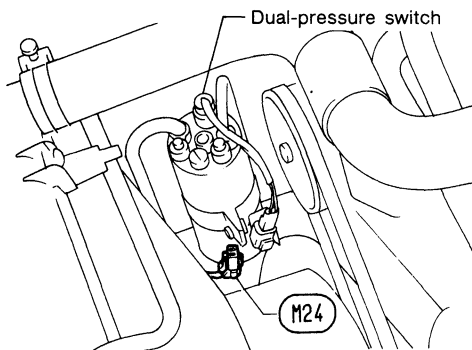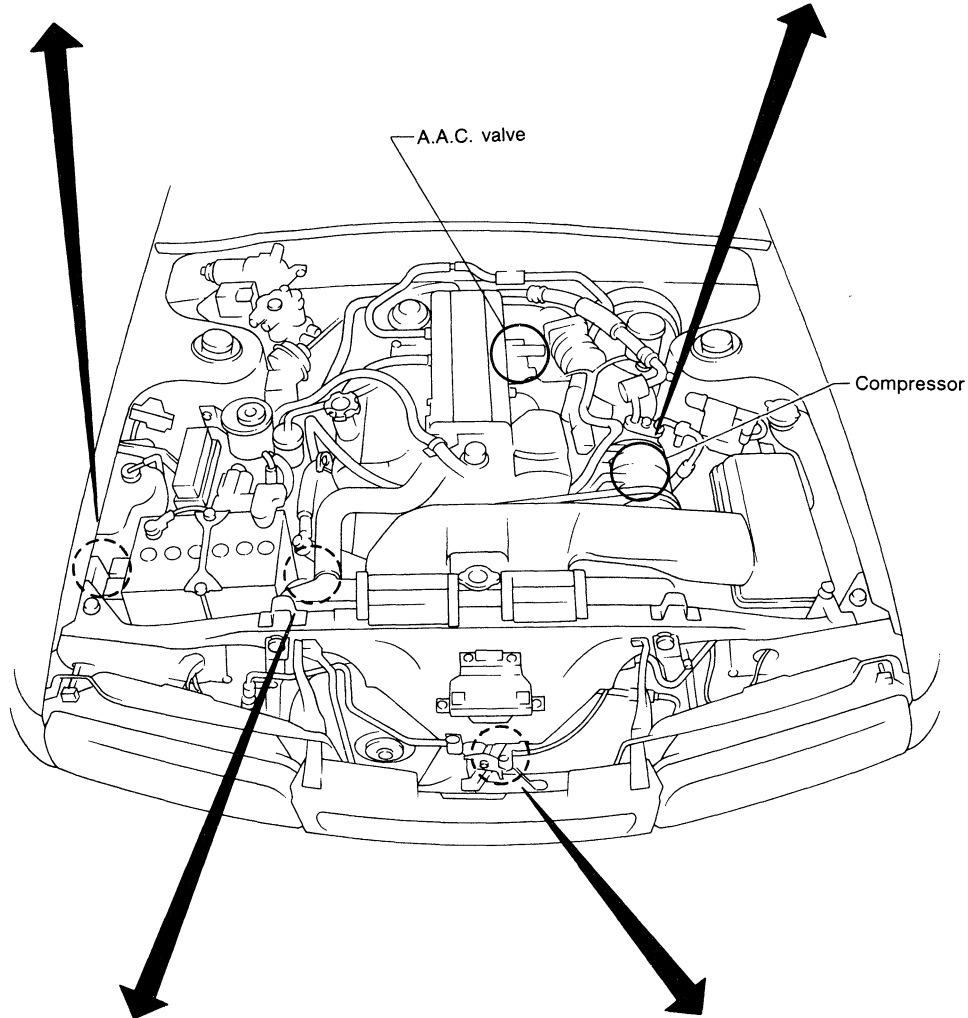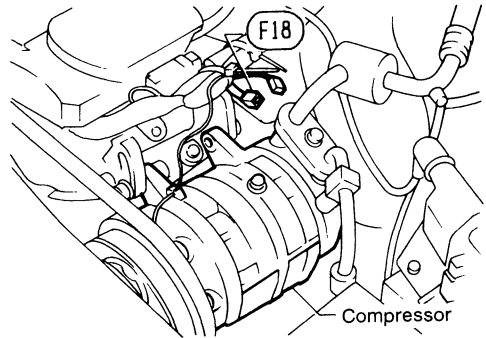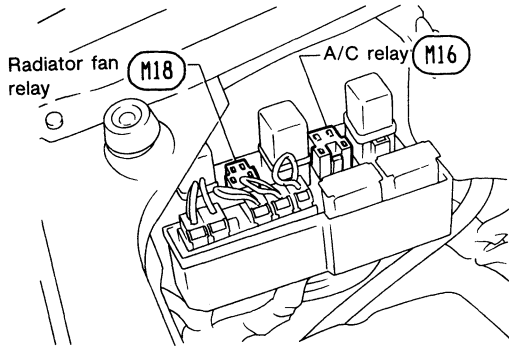

Harness Layout for A/C System (Cont'd)

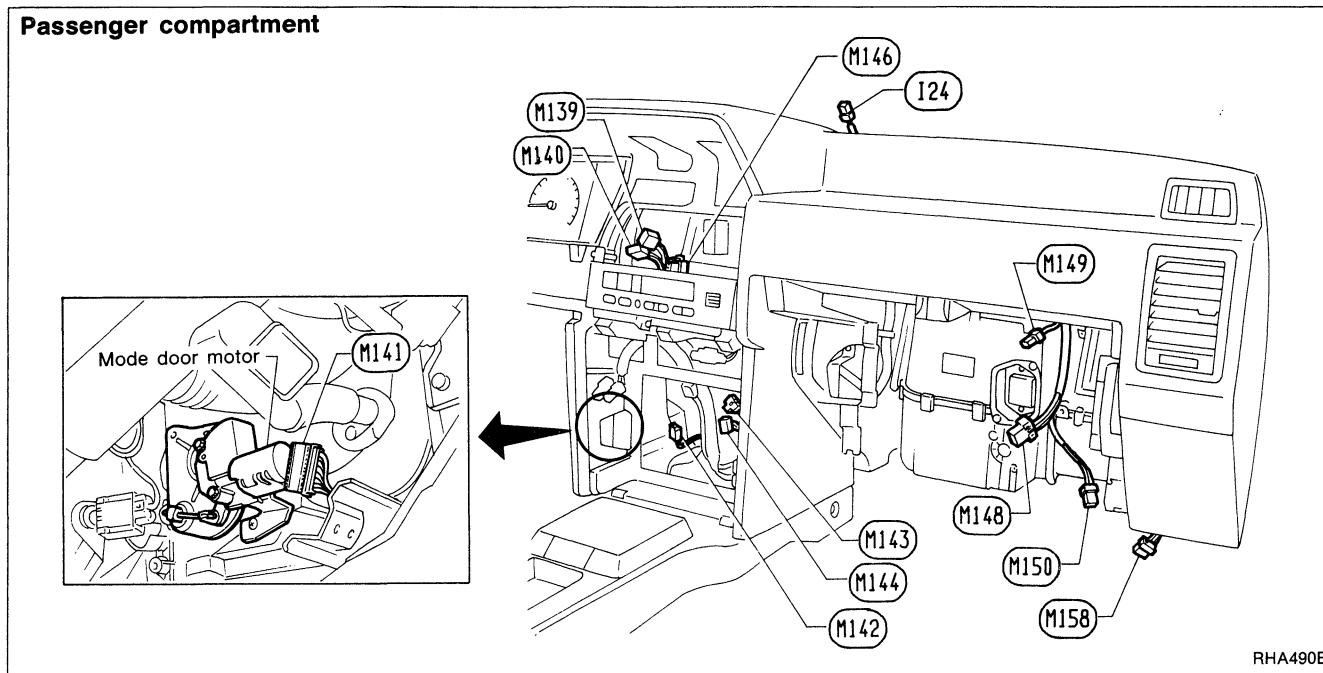

**Main harness**

- (M16) : A/C relay
- (M18) : Radiator fan relay
- (M24) : Dual-pressure switch
- (M34) : Radiator fan motor
- (M38) : Ambient sensor
- (M46) : Thermoswitch
- (M139) : Auto amp.
- (M140) : Auto amp.
- (M141) : Mode door motor
- (M142) : Aspirator fan motor
- (M143) : Blower HI relay
- (M144) : Air mix door motor
- (M146) : In-vehicle sensor
- (M148) : Fan control amp.
- (M149) : Intake sensor
- (M150) : Intake door motor
- (M158) : Blower motor

**Instrument harness**


- (I24) : Sunload sensor

**E.F.I. harness**

- (F14) : Engine temperature sensor
- (F18) : Compressor




Circuit Diagram for Quick Pinpoint Check

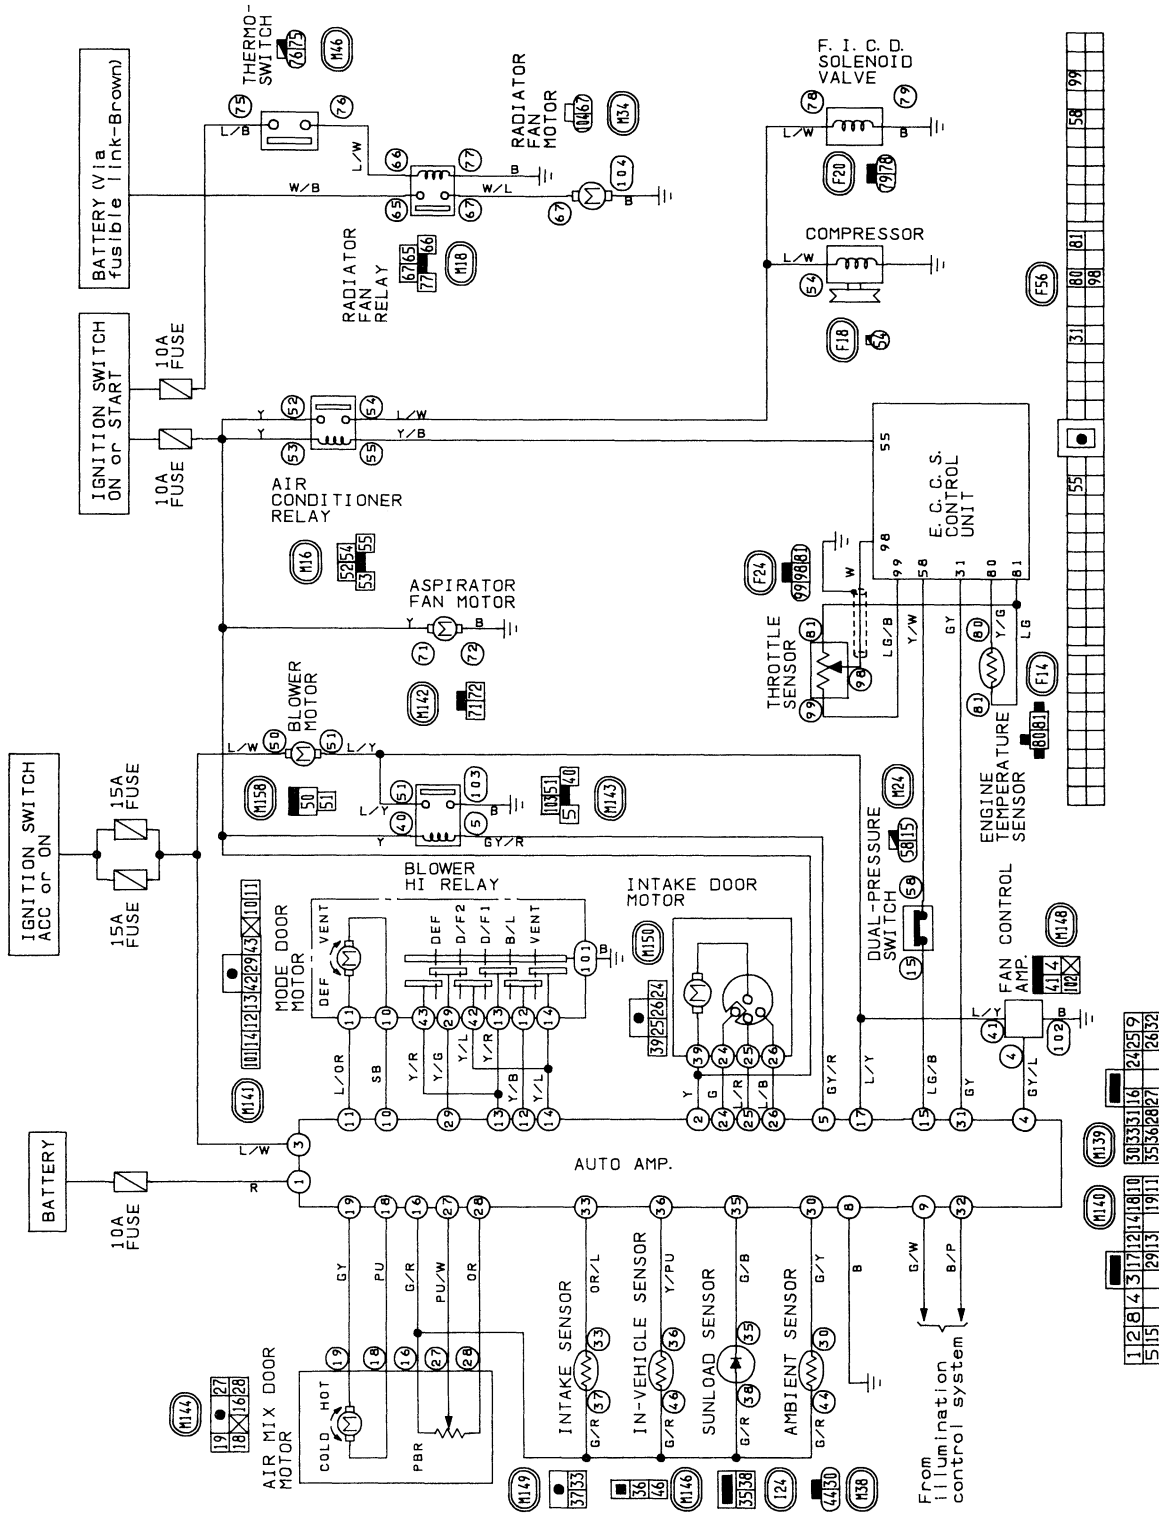

- All connectors shown in this illustration are unit side connectors.
- The unit side connectors with a double circle "⊖" are connected to the harness side connectors shown in the "Harness Layout for A/C System". (See pages HA-101 - HA-102.)
- The terminal numbers in the connector coincide with the circuit numbers surrounded by a single circle "○".
- \*: These switches are built in push control unit and mechanically linked to corresponding switches.


# TROUBLE DIAGNOSES — Auto Air Conditioner

## Wiring Diagram

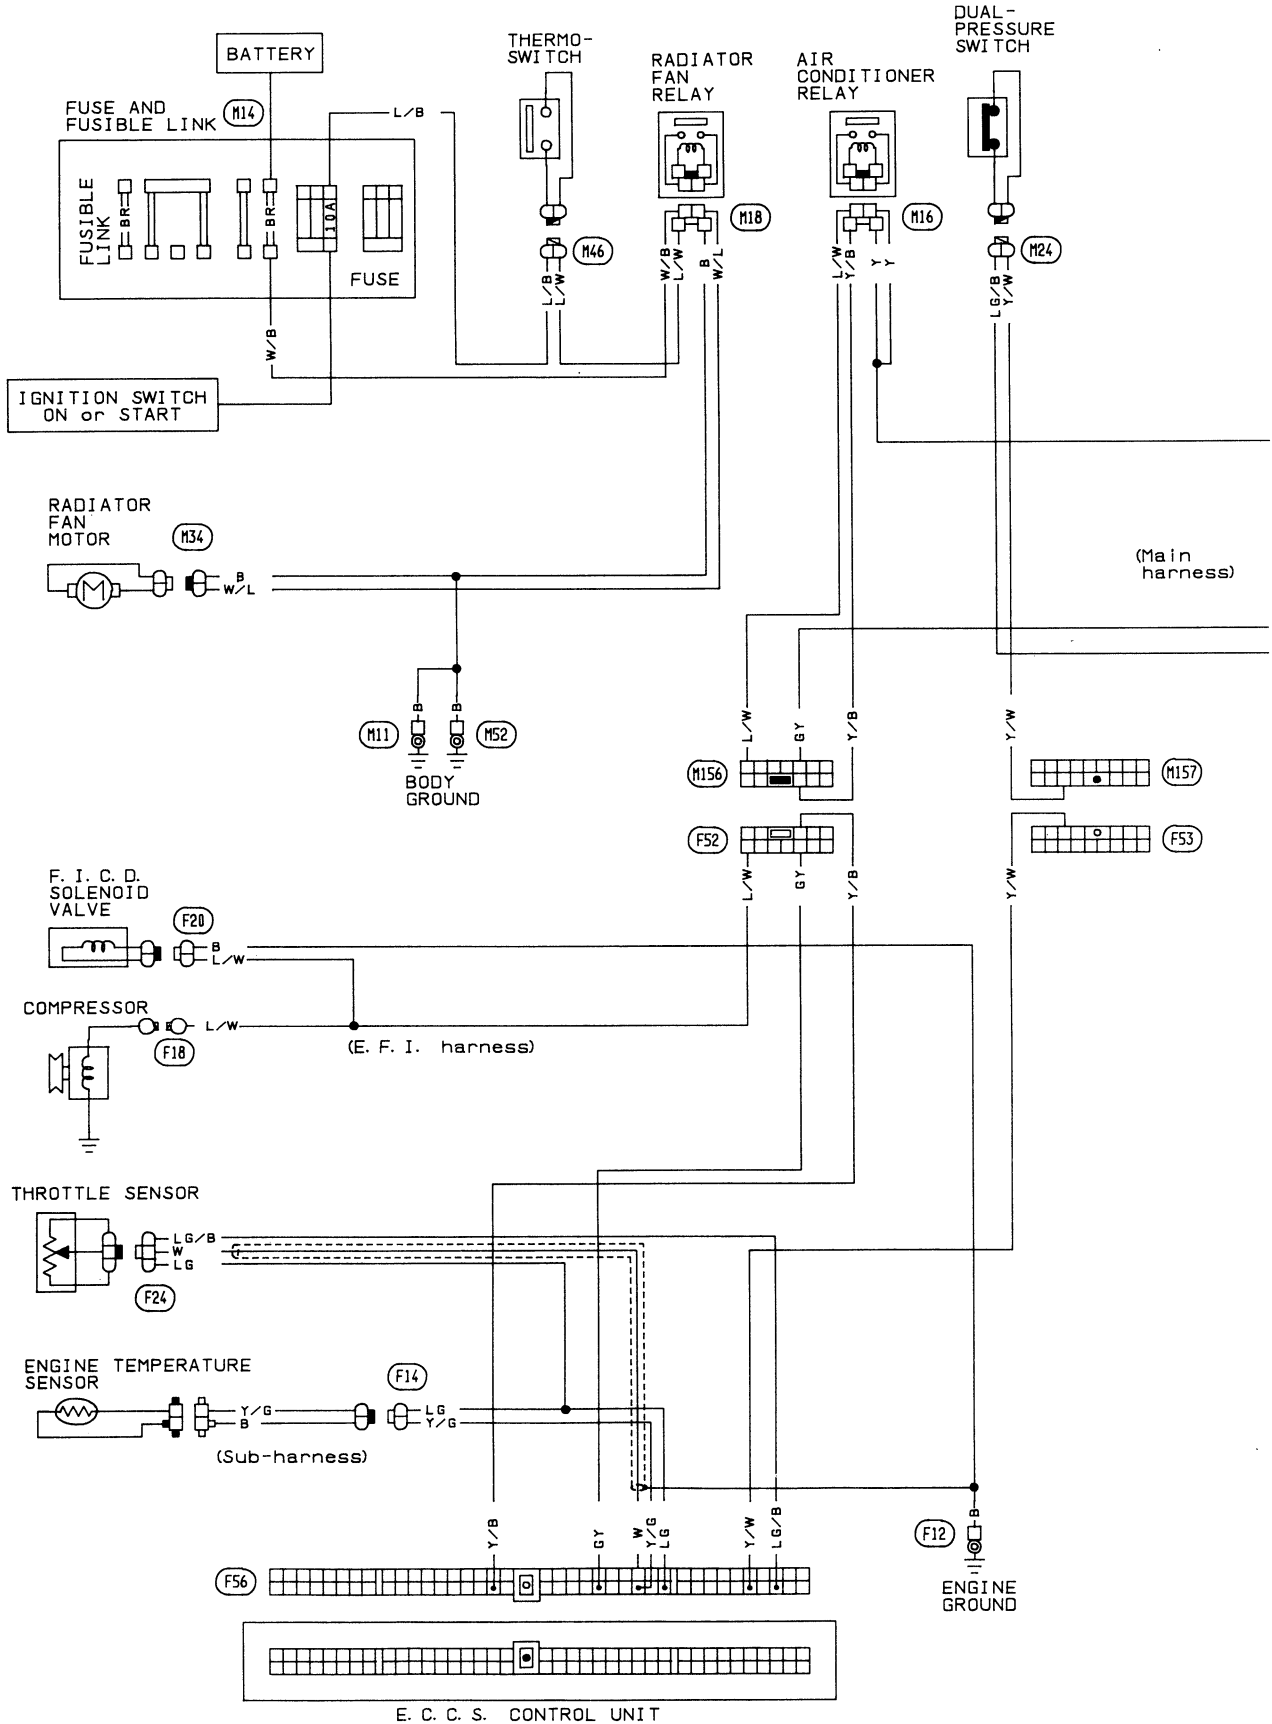

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Wiring Diagram (Cont'd)

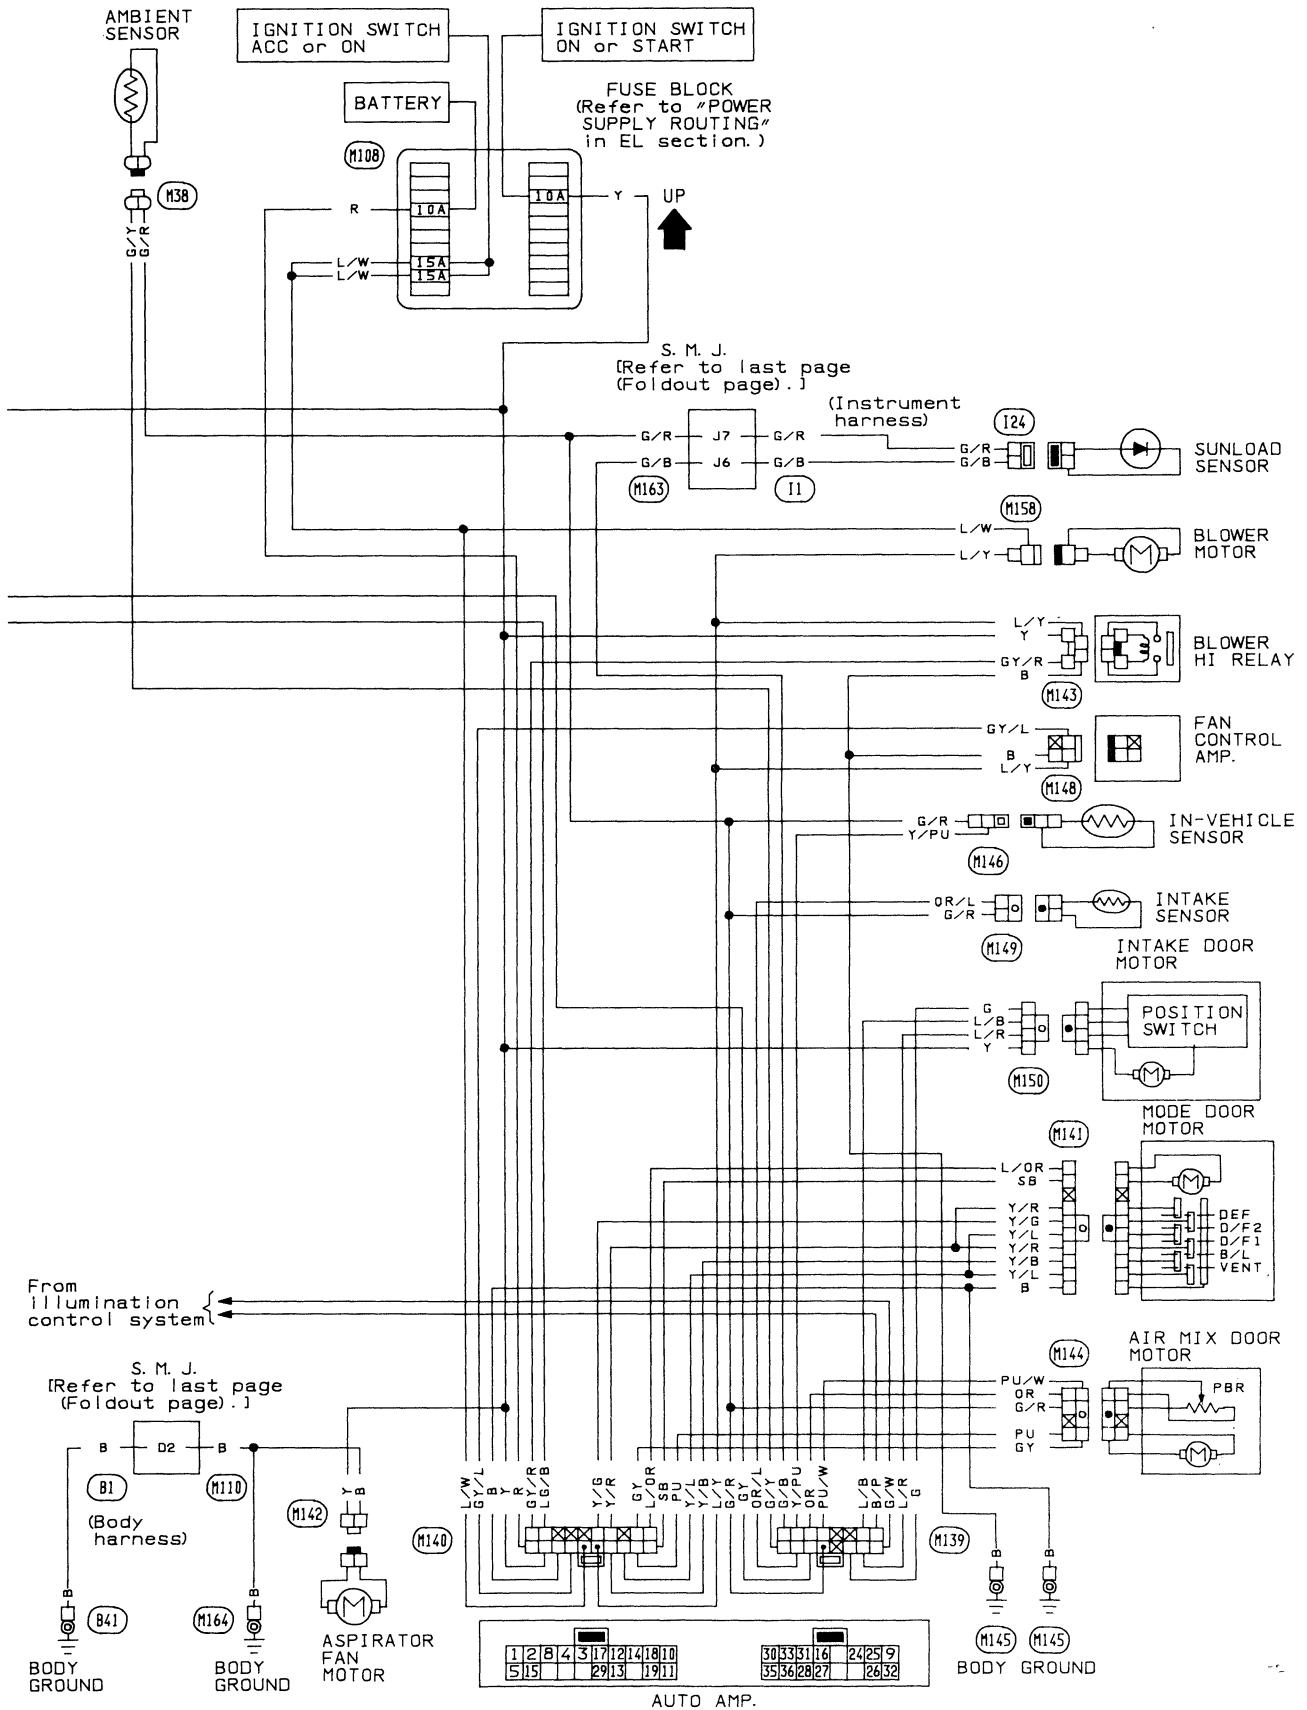


## Main Power Supply and Ground Circuit Check

### POWER SUPPLY CIRCUIT CHECK FOR AUTO A/C SYSTEM

Check power supply circuit for auto air conditioning system.

**Refer to “POWER SUPPLY ROUTING” in EL section and Wiring Diagram.**

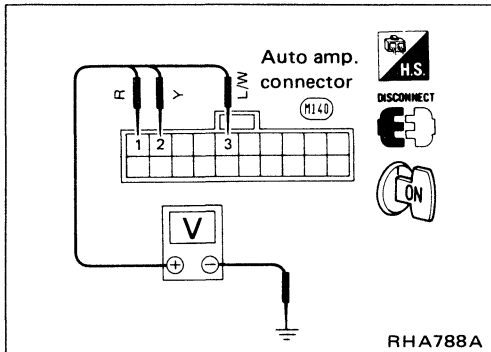


### AUTO AMP. CHECK

Check power supply circuit for auto amp. with ignition switch ON.

1. Disconnect auto amp. harness connector.
2. Connect voltmeter from harness side.
3. Measure voltage across terminal No. ①, ②, ③ and body ground.

Voltmeter terminal		Voltage
⊕	⊖	
①	Body ground	Approx. 12V
②		
③		

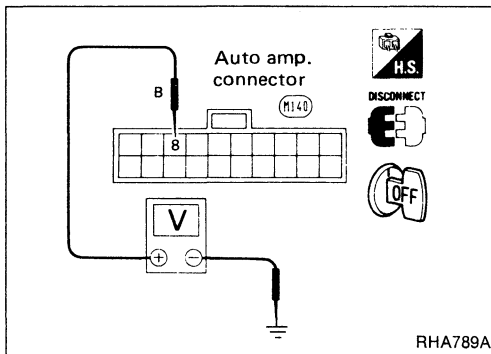

Check body ground circuit for auto amp. with ignition switch OFF.





1. Disconnect auto amp. harness connector.
2. Connect ohmmeter from harness side.
3. Check for continuity between terminal No. ⑧ and body ground.

Ohmmeter terminal		Continuity
⊕	⊖	
⑧	Body ground	Yes

# TROUBLE DIAGNOSES — Auto Air Conditioner




## Diagnostic Procedure 1

**SYMPTOM:** Ambient sensor circuit is open. (21 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)

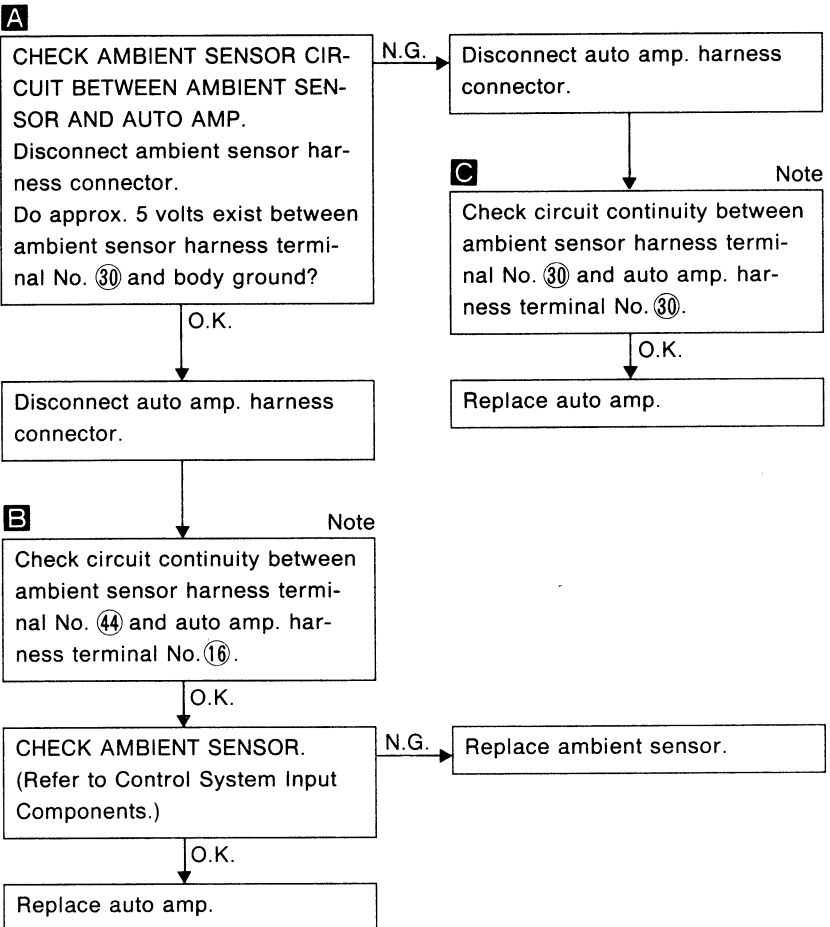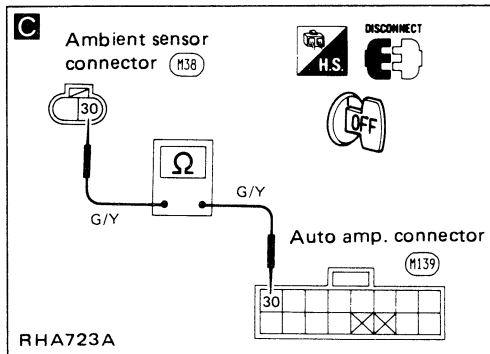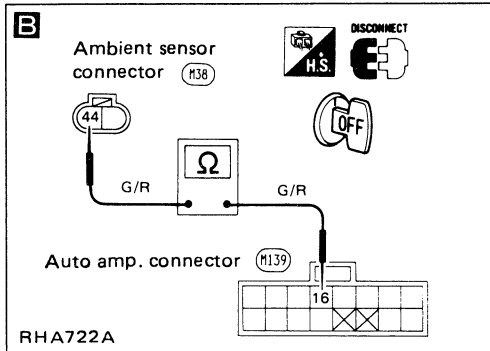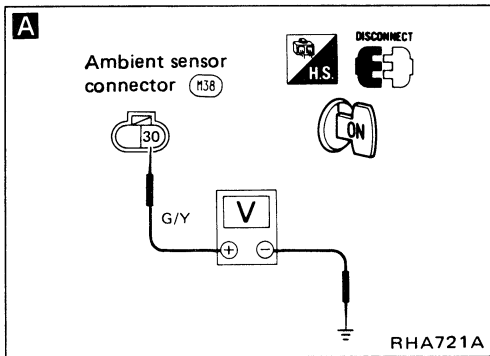


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector.

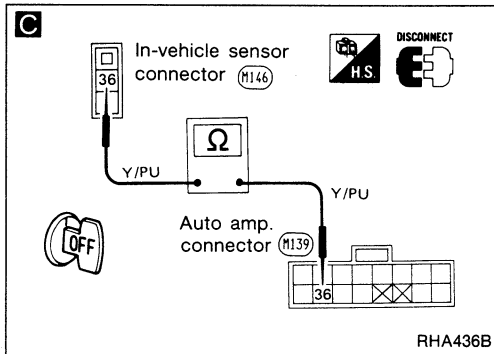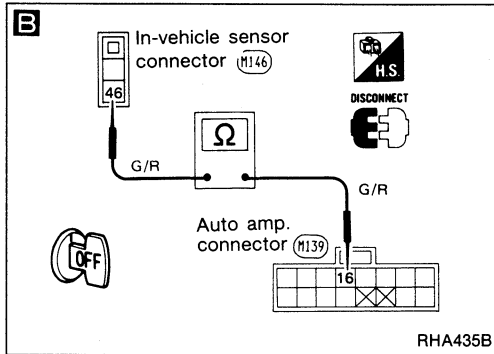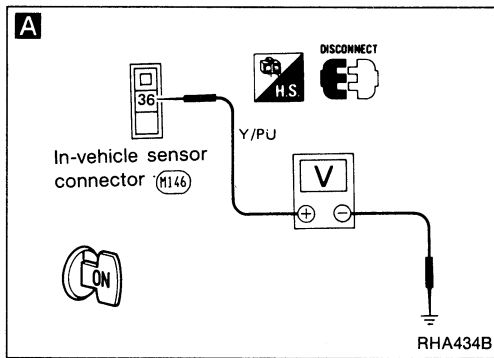




## Diagnostic Procedure 2

**SYMPTOM:** In-vehicle sensor circuit is open. (22 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)

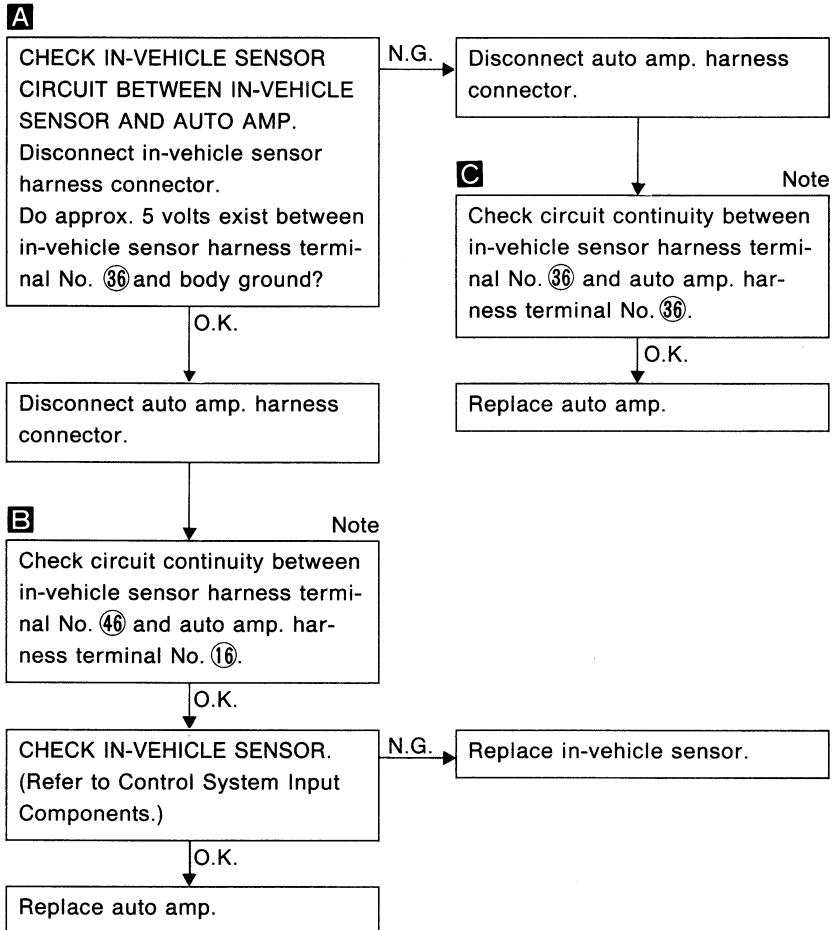


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector.

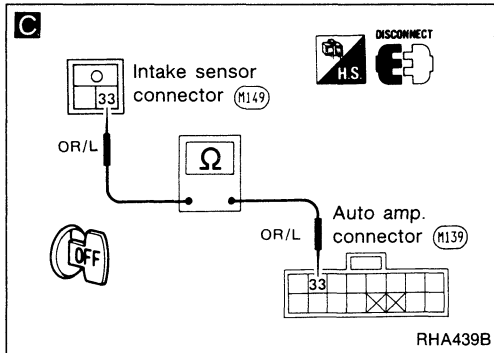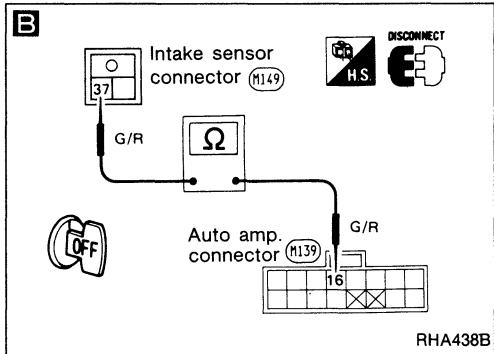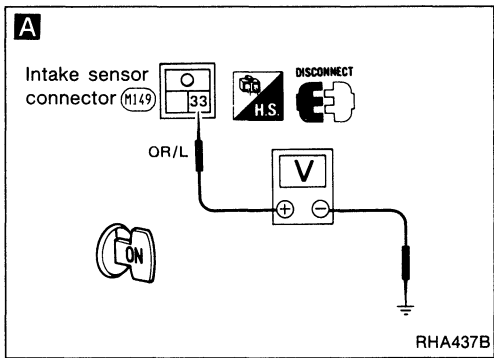




## Diagnostic Procedure 3

**SYMPTOM: Intake sensor circuit is open. (24 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)**

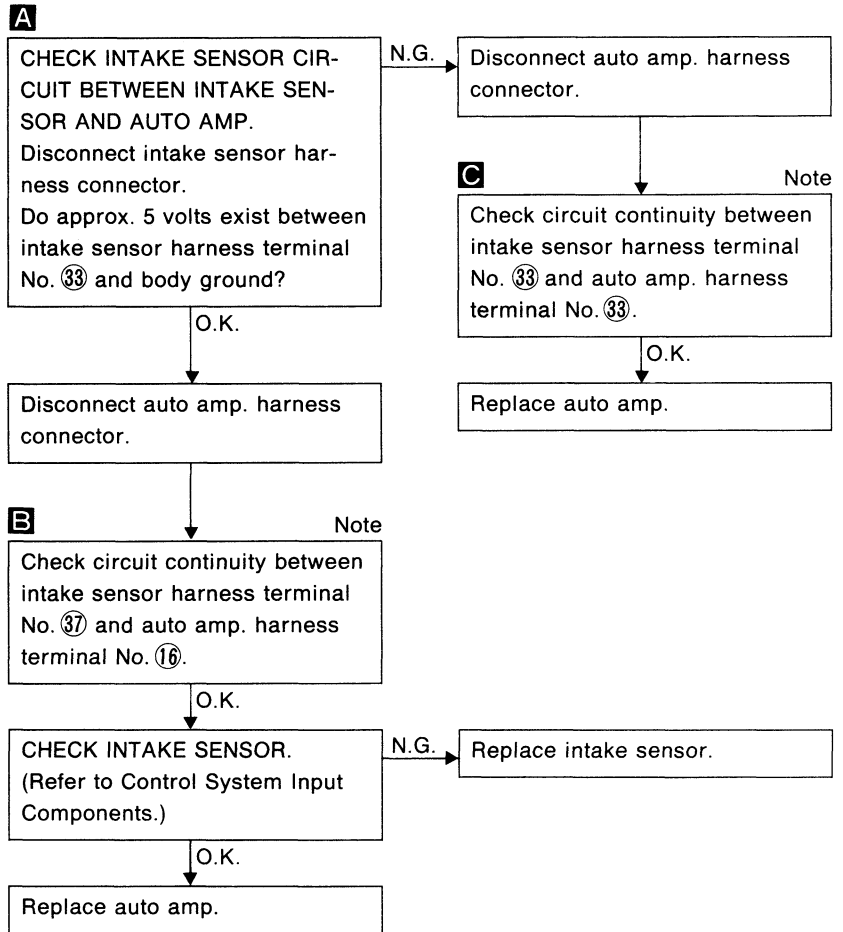


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector.

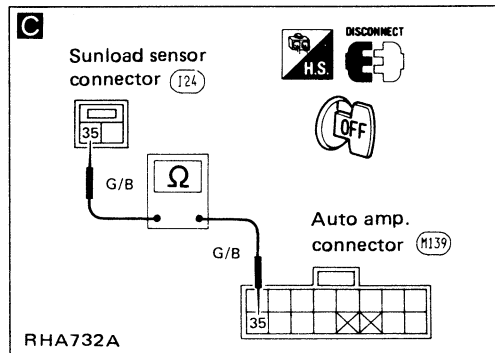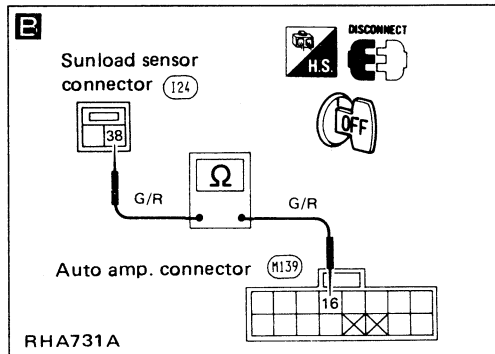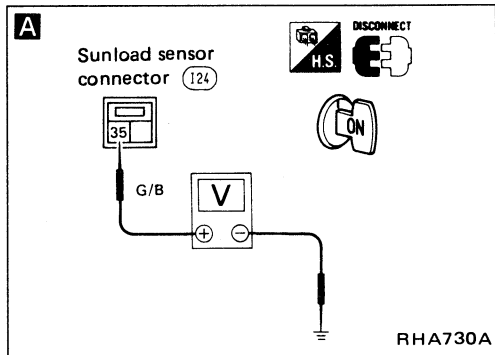

## Diagnostic Procedure 4

**SYMPTOM: Sunload sensor circuit is open. (25 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)**

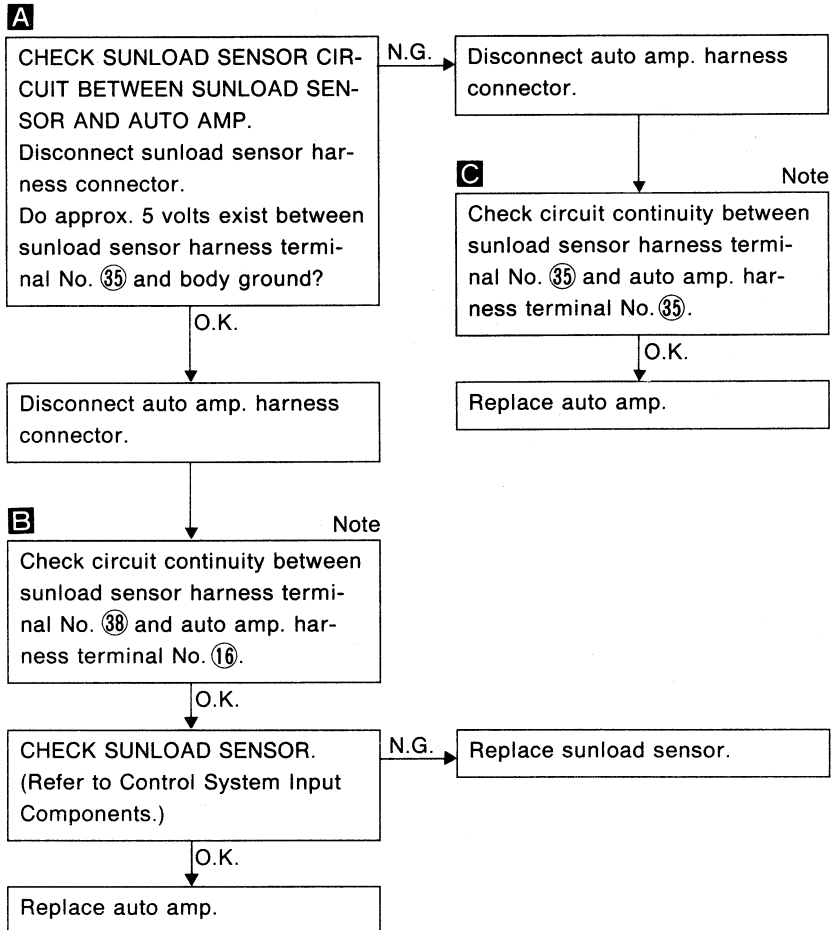

**Note:**






If the result is N.G. after checking circuit continuity, repair harness or connector.



# TROUBLE DIAGNOSES — Auto Air Conditioner

## Diagnostic Procedure 5

**SYMPTOM: P.B.R. circuit is open. (25 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)**

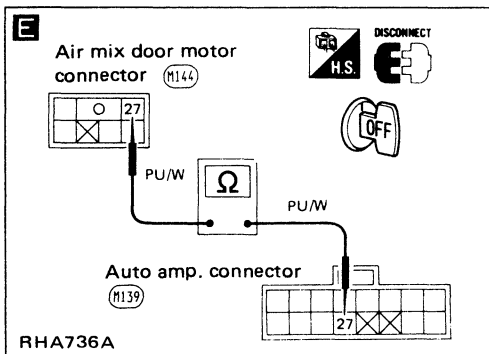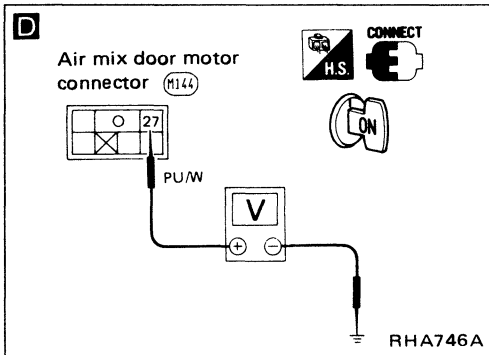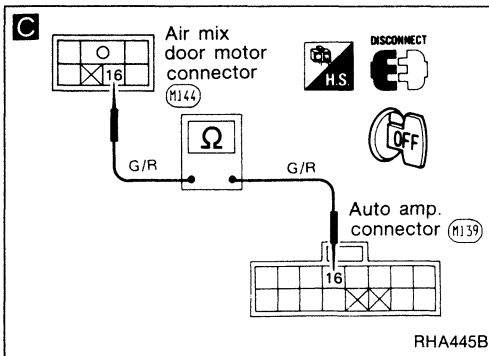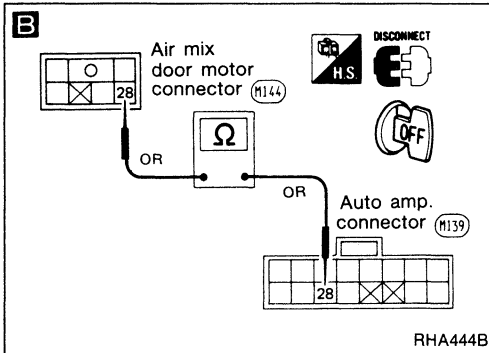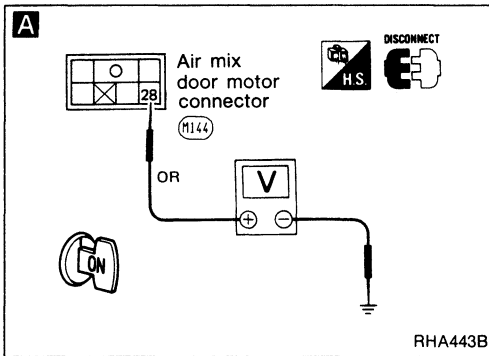

**A**

CHECK P.B.R. CIRCUIT BETWEEN P.B.R. AND AUTO AMP.

Disconnect air mix door motor harness connector.

Do approx. 5 volts exist between air mix door motor harness terminal No. 26 and body ground?

N.G.

Disconnect auto amp. harness connector.

**B** Note

Check circuit continuity between air mix door motor harness terminal No. 28 and auto amp. harness terminal No. 28.

O.K.

Replace auto amp.

Disconnect auto amp. harness connector.

**C** Note

Check circuit continuity between air mix door motor harness terminal No. 16 and auto amp. harness terminal No. 16.

O.K.

**D** Note

CHECK P.B.R. CIRCUIT BETWEEN P.B.R. AND AUTO AMP.

Reconnect auto amp. harness connector.

Do approx. 5 volts exist between air mix door motor harness terminal No. 27 and body ground?

N.G.

Disconnect auto amp. harness connector.

**E** Note

Check circuit continuity between air mix door motor harness terminal No. 27 and auto amp. harness terminal No. 27.

O.K.

Replace auto amp.

CHECK P.B.R. (Refer to Control System Output Components.)

N.G.



Replace air mix door motor (P.B.R.).

O.K.

Replace auto amp.


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector.

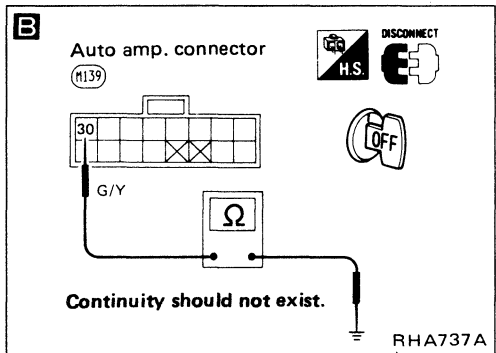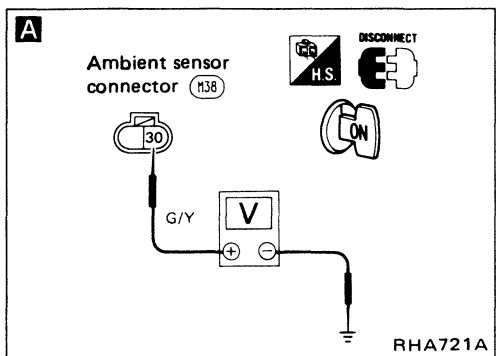



## Diagnostic Procedure 6

**SYMPTOM: Ambient sensor circuit is shorted. (-2; is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)**

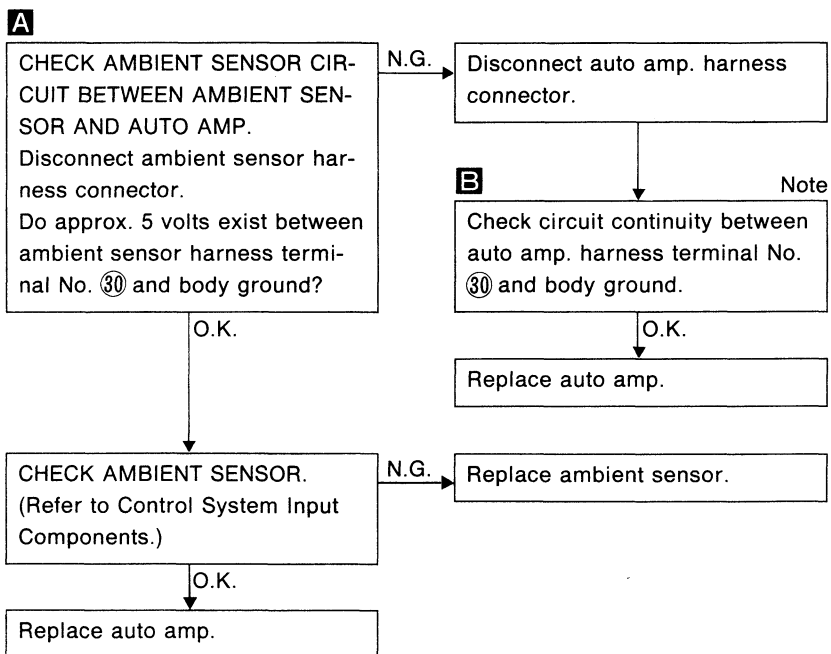


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector short.

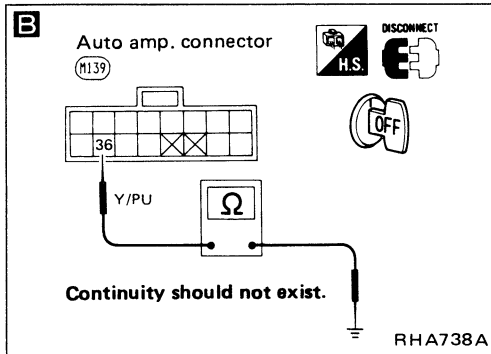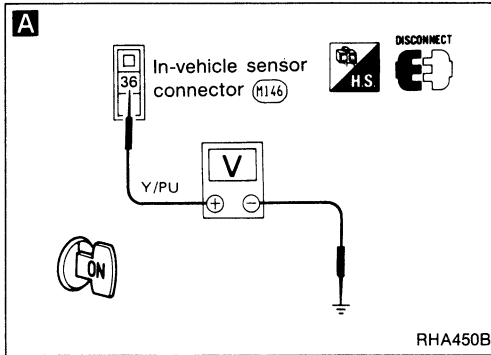



## Diagnostic Procedure 7

**SYMPTOM:** In-vehicle sensor circuit is shorted. (-22 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)

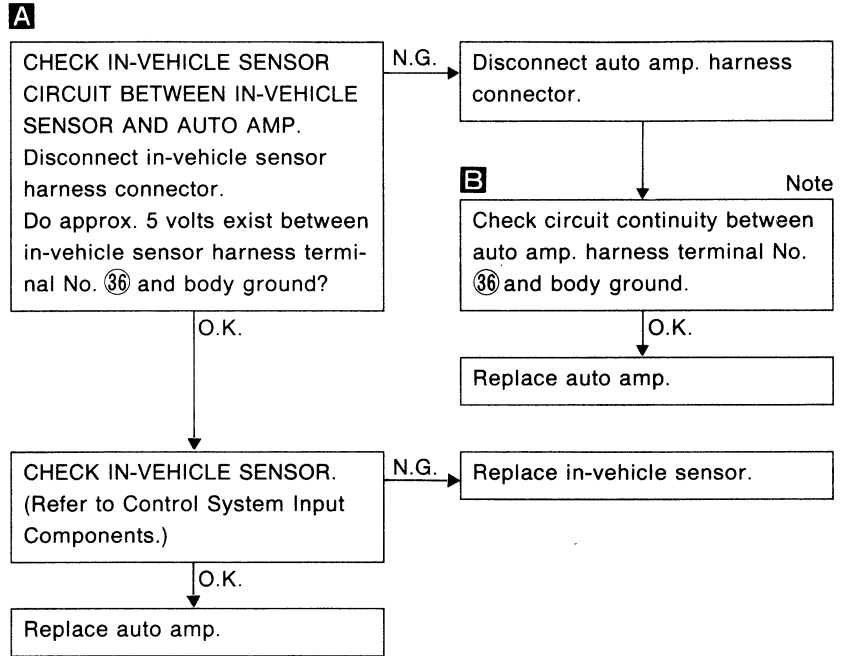


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector short.

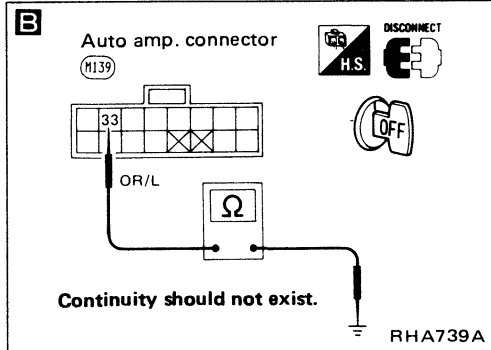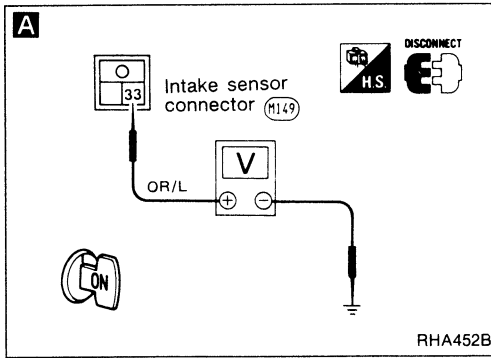



### Diagnostic Procedure 8

**SYMPTOM:** Intake sensor circuit is shorted. (-24 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)

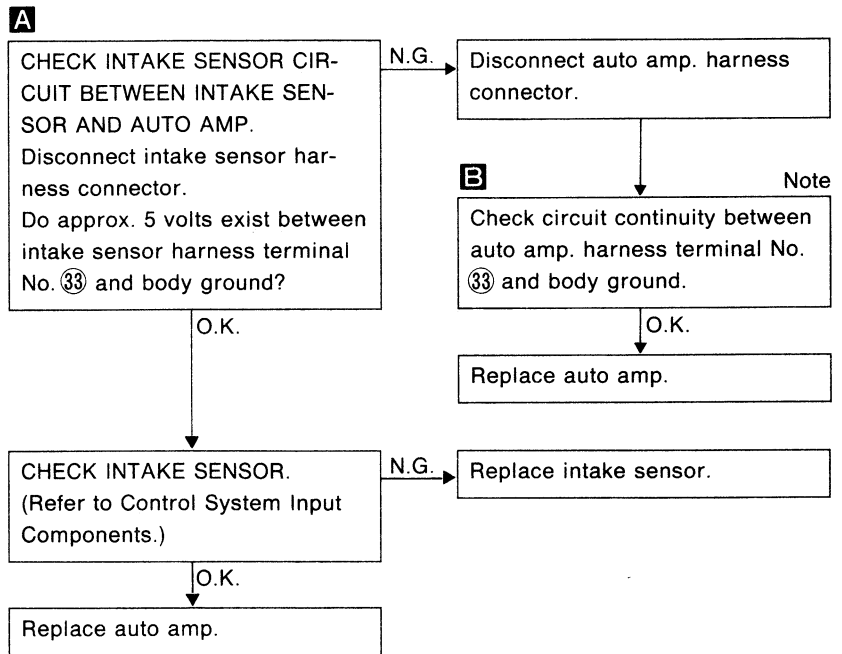


**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector short.

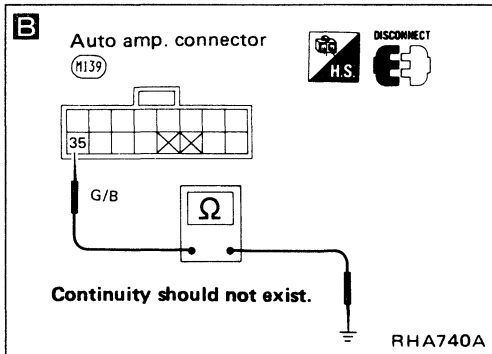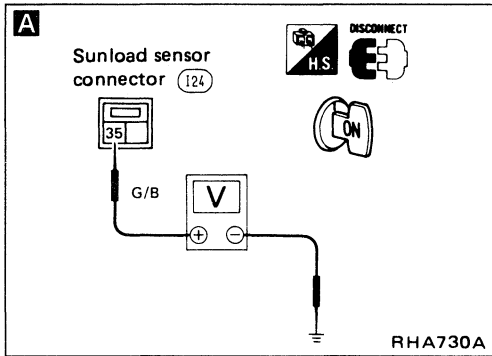

### Diagnostic Procedure 9

**SYMPTOM: Sunload sensor circuit is shorted. (-25 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)**





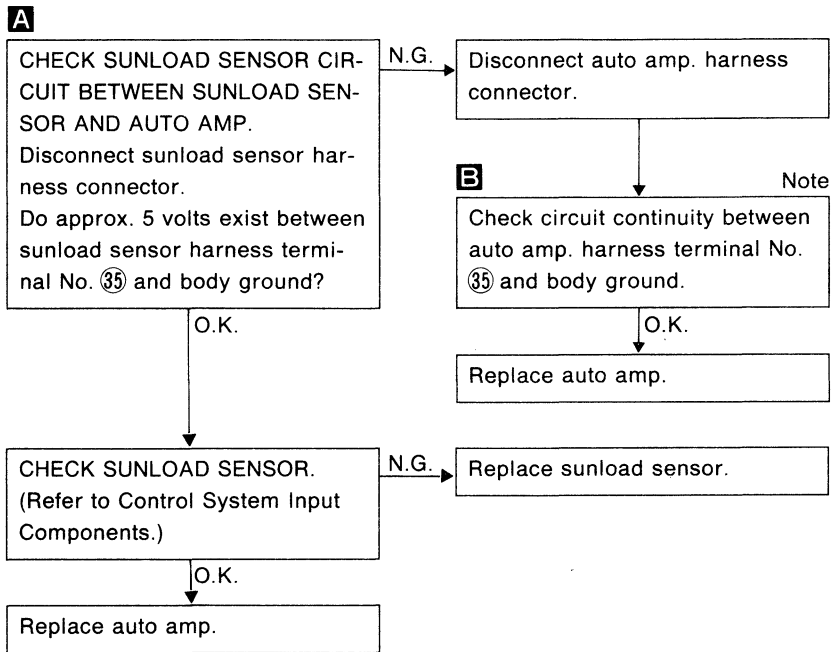


**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector short.

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Diagnostic Procedure 10

**SYMPTOM:** P.B.R. circuit is shorted. (-26 is indicated on auto amp. as a result of conducting Self-diagnosis STEP 2.)

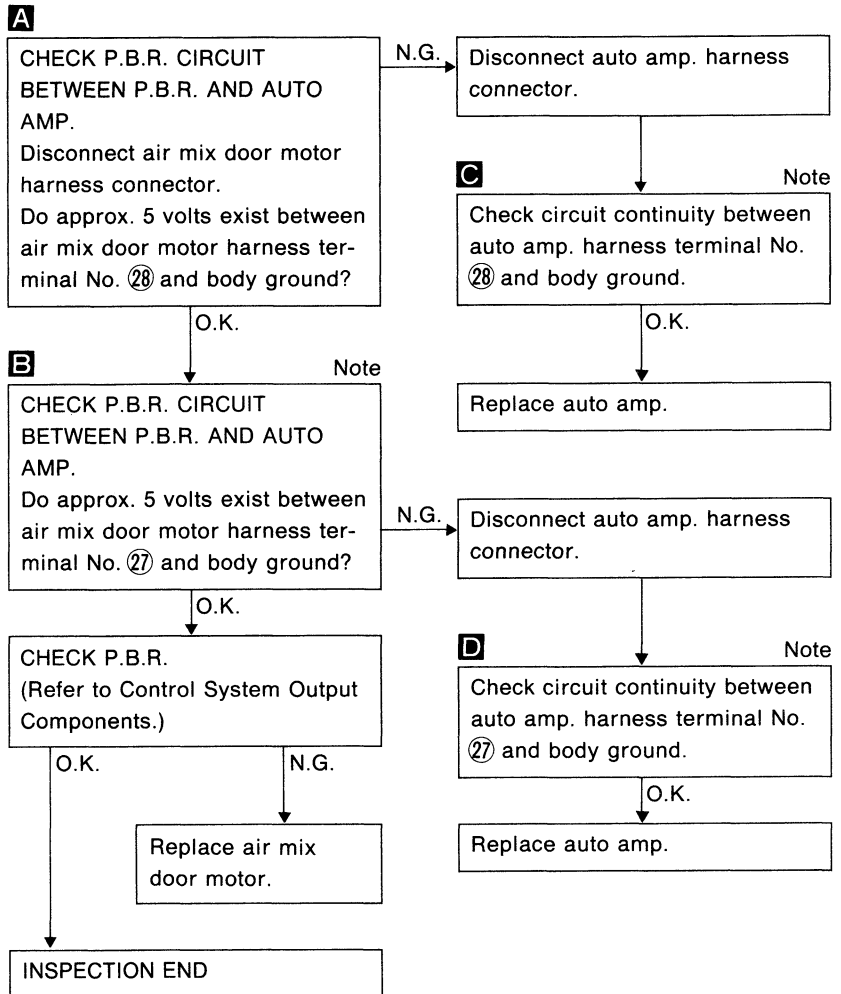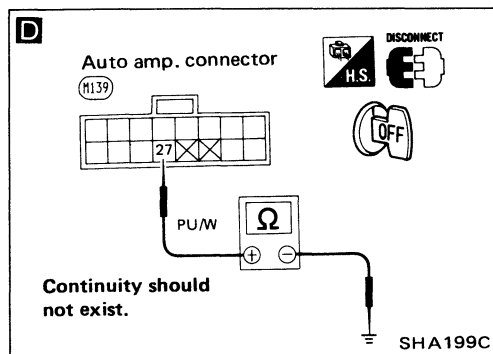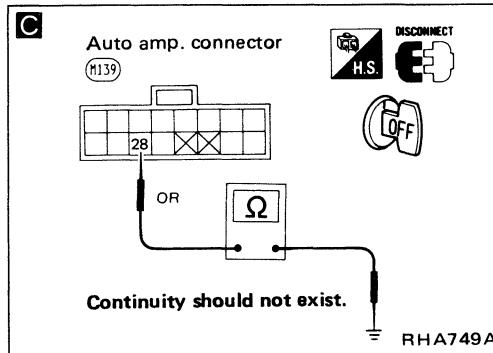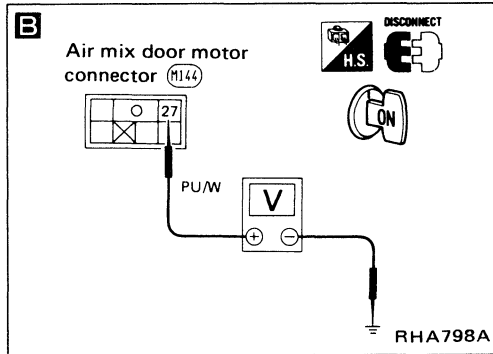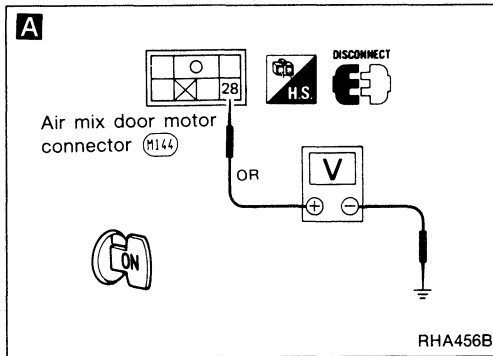

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector short.

## Diagnostic Procedure 11

**SYMPTOM:** Radiator fan motor does not operate.




- Refer to HA-71.

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Diagnostic Procedure 12

**SYMPTOM: Mode door motor does not operate normally.**

- Perform Self-diagnosis STEPS 1 to 4 before referring to the following flow chart.

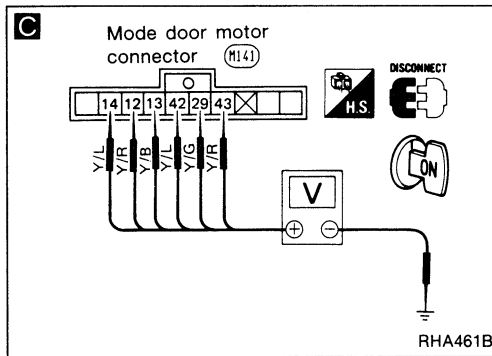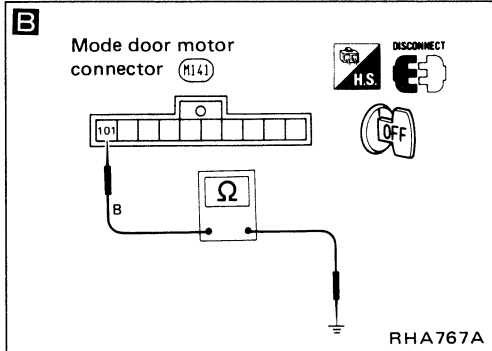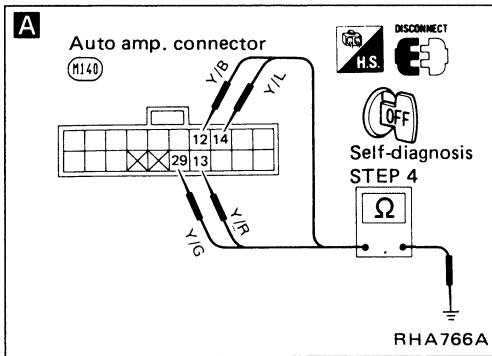

**A**

CHECK MODE DOOR MOTOR POSITION SWITCH.

1. Set up code No. 41 in Self-diagnosis STEP 4.
2. Disconnect auto amp. harness connector after turning ignition switch OFF.
3. Check if continuity exists between terminal No. 12 or 14 of auto amp. harness connector and body ground.
4. Using above procedure, check for continuity in any other mode, as indicated in chart.

Code No.	Condition	Terminal No.		Continuity
		+	-	
41	VENT	12 or 14		Yes
42 or 43	B/L	12 or 13		
44	F/D 1	13 or 14	Body ground	
45	F/D 2	14 or 29		
46	DEF	13 or 29		

N.G. → Disconnect mode door motor harness connector.

**B** Note  
CHECK BODY GROUND CIRCUIT FOR MODE DOOR MOTOR. Does continuity exist between mode door motor harness terminal No. 101 and body ground?

O.K. → Reconnect auto amp. harness connector.

**C**

CHECK POWER SUPPLY FOR MODE DOOR MOTOR CONTROL CIRCUIT. Do approx. 5 volts exist between mode door motor harness terminals and body ground?

Terminal No.		Voltage
+	-	
14	Body ground	Approx. 5V
12		
13		
42		
29		
43		

O.K. → Reconnect mode door motor harness connector.

N.G. →




(Go to next page.)

O.K. → INSPECTED END

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Diagnostic Procedure 12 (Cont'd)

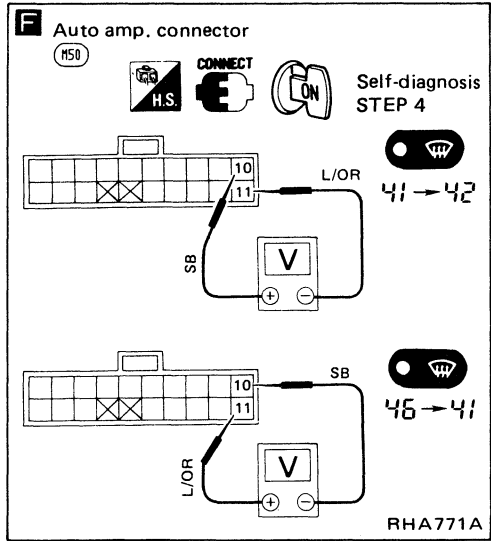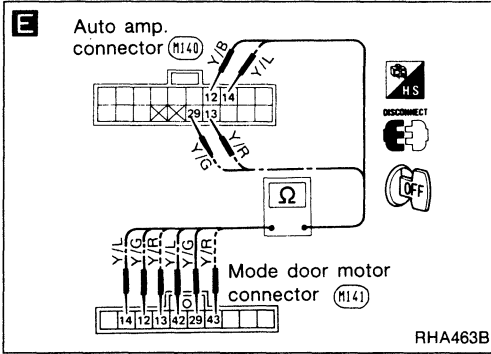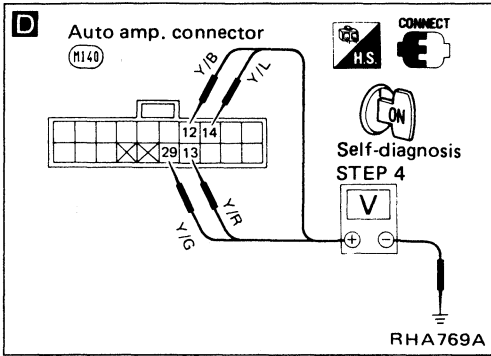

**D** CHECK MODE DOOR MOTOR POSITION SWITCH.  
Set up Self-diagnosis STEP 4. Measure voltage across auto amp. harness terminals and body ground.

Code No.	Condition	Terminal No.				Body ground
		⊕	⊖	⊕	⊖	
		(14)	(12)	(13)	(29)	
41	VENT	0V	0V	5V	5V	Body ground
42 or 43	B/L	5V	0V	0V	5V	
44	D/F 1	0V	5V	0V	5V	
45	D/F 2	0V	5V	5V	0V	
46	DEF	5V	5V	0V	0V	

0V: Approx. 0V  
5V: Approx. 5V

O.K. →

N.G. → Replace mode door motor.

**E** Note

Check circuit continuity between each terminal on auto amp. and on mode door motor.

Terminal No.		Continuity
⊕	⊖	
Auto amp. (29)	Mode door motor (29)	Yes
(13)	(13) or (43)	
(12)	(12)	
(14)	(14) or (42)	

O.K. →

Replace auto amp.

**F** CHECK FOR OUTPUT OF AUTO AMP.  
Do approx. 10.5 volts exist between auto amp. harness terminals No. (10) and (11) when code No. is switched from "41" to "42" or when code No. is switched from "46" to "41"?

Code No.	Mode door motor operation	Terminal No.		Voltage V
		(10)	(11)	
41 → 42	VENT → B/L	⊕	⊖	Approx. 10.5
46 → 41	DEF → VENT	⊖	⊕	
-	Stop	⊖	⊖	0

O.K. → Replace mode door motor.

N.G. → Replace auto amp.

**Note:**




If the result is N.G. after checking circuit continuity, repair harness or connector.



## Diagnostic Procedure 13

**SYMPTOM:** Intake door motor does not operate normally.

- Perform Self-diagnosis STEPS 1, 2 and 4 before referring to the following flow chart.

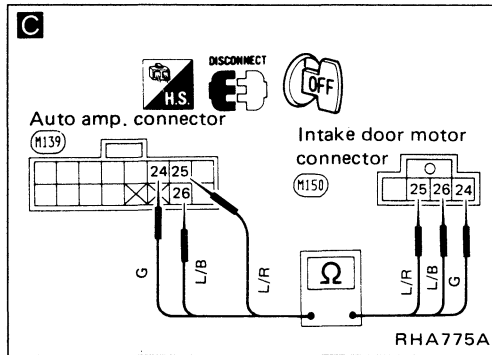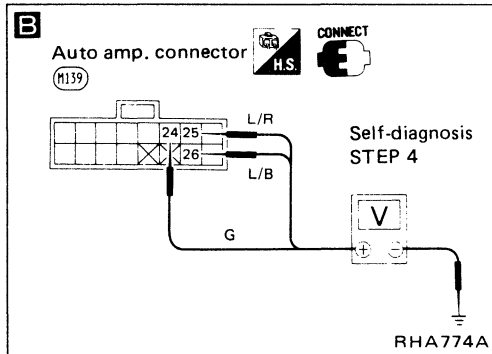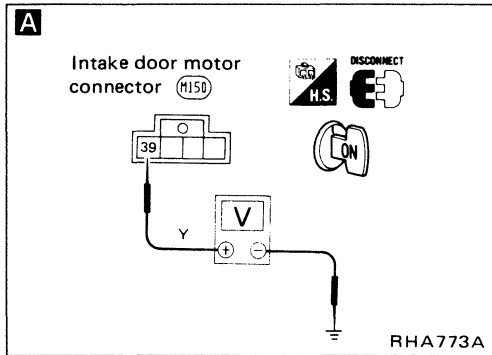

**A**

CHECK POWER SUPPLY FOR INTAKE DOOR MOTOR.  
Disconnect intake door motor harness connector.  
Do approx. 12 volts exist between intake door motor harness terminal No. ③⑨ and body ground?

N.G. → Check 10A fuse at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and Wiring Diagram.)

O.K. → Reconnect intake door motor harness connector.

**B**

CHECK FOR OUTPUT OF AUTO AMP.  
Set up Self-diagnosis STEP 4.  
Measure voltage across auto amp. harness terminals and body ground.

N.G. → Disconnect auto amp. and intake door motor harness connectors.

Code No.	Terminal No.		Condition	Voltage V
	+	-		
41, 42	24	-	REC	0
Other				12
43	25	Body ground	20% FRE	0
Other				12
44, 45, 46	26	-	FRE	0
Other				12

0V: Approx. 0V  
12V: Approx. 12V

O.K. → INSPECTION END

**C** Note

Check circuit continuity between each terminal on auto amp. and on intake door motor.

Terminal No.		Continuity
Auto amp.	Intake door motor	
+	-	Yes
②④	②④	
②⑤	②⑤	
②⑥	②⑥	



O.K. → (Go to next page.)

Ⓐ

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Auto Air Conditioner



## Diagnostic Procedure 13 (Cont'd)

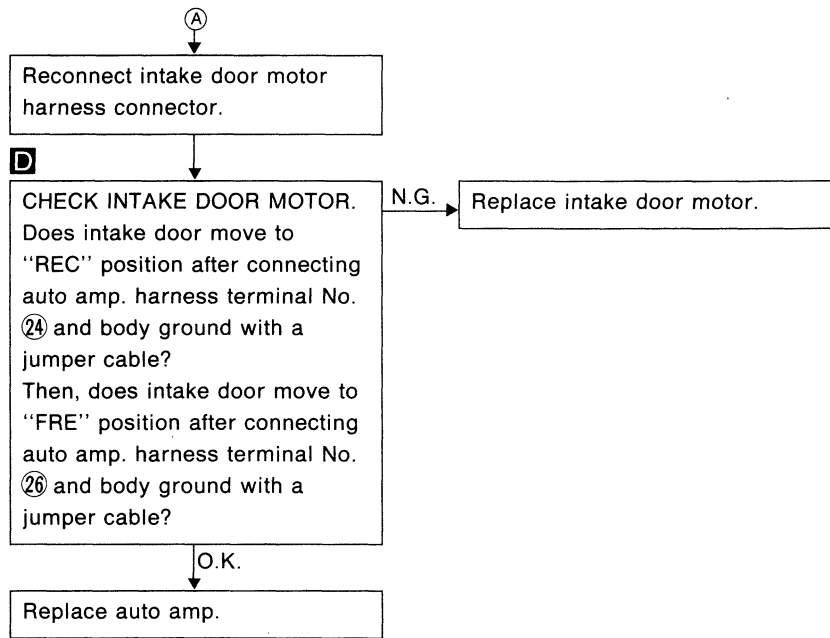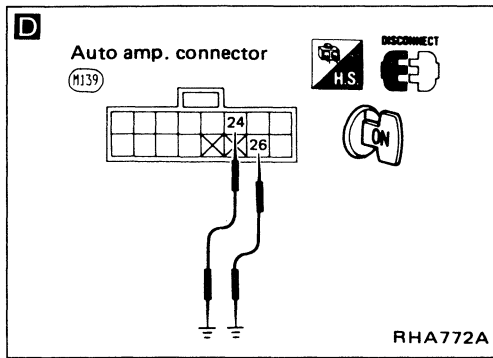

## Diagnostic Procedure 14

**SYMPTOM:** Air mix door motor does not operate normally.

- Perform Self-diagnosis STEPS 1, 2 and 4 before referring to the following flow chart.

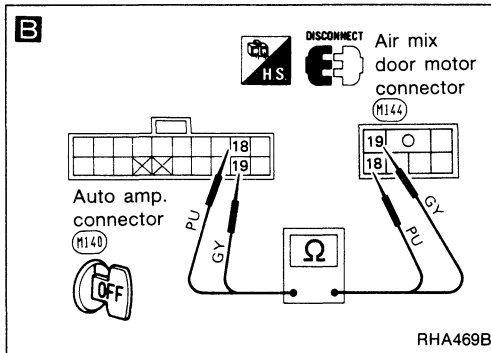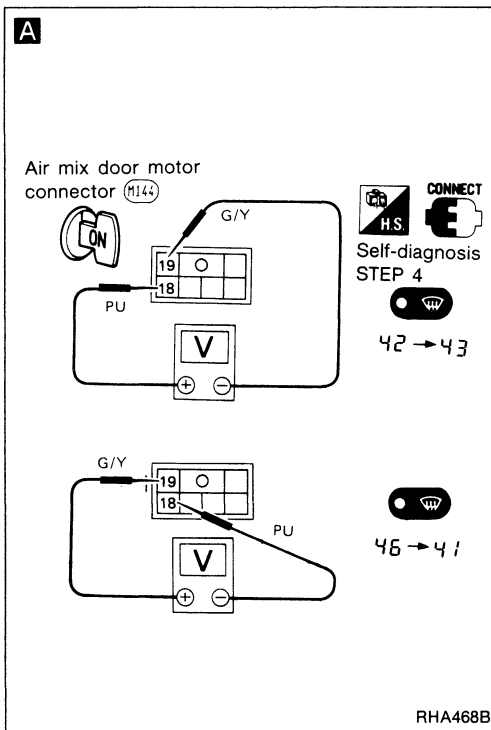

IS P.B.R. OPERATING NORMALLY?  
Refer to Self-diagnoses STEP 2.

N.G. → CHECK P.B.R. CIRCUIT.  
Go to **Diagnostic Procedure 5 or 10.**

**A**

CHECK FOR OUTPUT OF AUTO AMP.  
Set up Self-diagnosis STEP 4.  
Do approx. 10.5 volt exist between air mix door motor harness terminals No. ⑱ and ⑲ when code No. is switched from "42" to "43" or when code No. is switched from "46" to "41"?

N.G. → Disconnect auto amp. and air mix door motor harness connectors.

Code No.	Air mix door operation	Terminal No.		Voltage V
		⑱	⑲	
42 → 43	Cold → Hot	⊕	⊖	Approx. 10.5
46 → 41	Hot → Cold	⊖	⊕	
-	Stop	⊖	⊖	0

**B** Note

Check circuit continuity between auto amp. harness terminal No. ⑱ ( ⑲ ) and air mix door motor harness terminal No. ⑱ ( ⑲ ).

O.K. → Replace air mix door motor.






O.K. → Replace auto amp.

**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

## Diagnostic Procedure 15

**SYMPTOM: Blower motor operation is malfunctioning under out of Starting Fan Speed Control.**

- Perform Preliminary Check 5 before referring to the following flow chart.

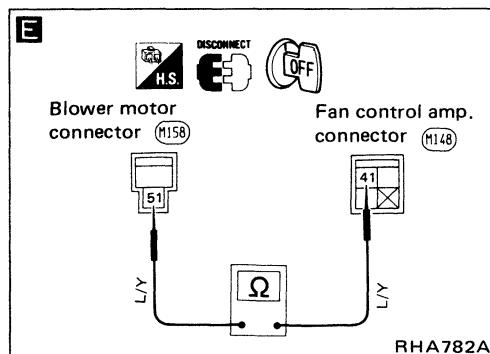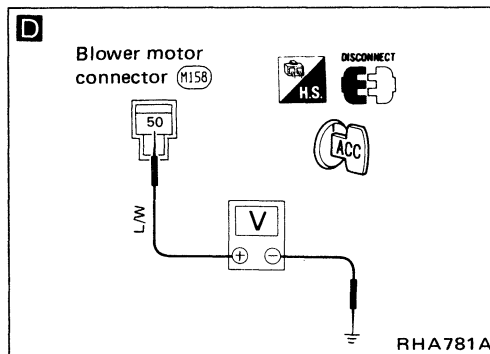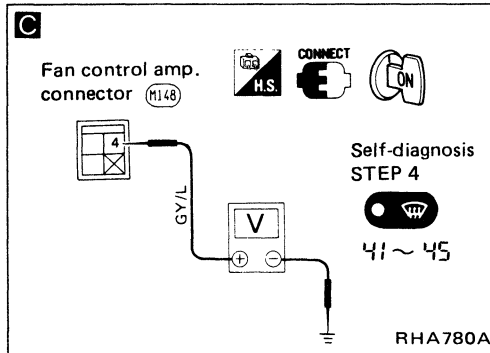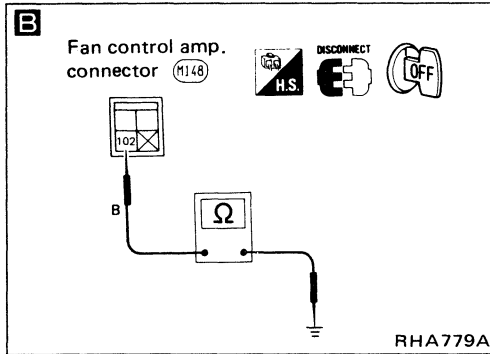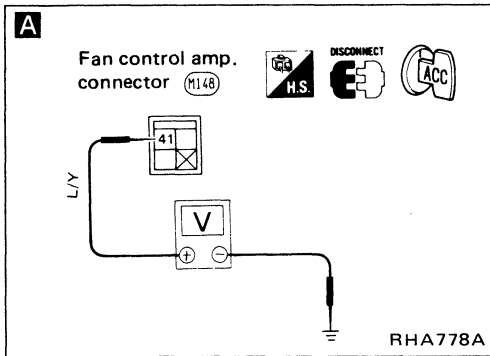

**A**

**CHECK POWER SUPPLY FOR FAN CONTROL AMP.**  
Disconnect fan control amp. harness connector.  
Do approx. 12 volts exist between fan control amp. harness terminal No. (41) and body ground?

**B** Note

**CHECK BODY GROUND CIRCUIT FOR FAN CONTROL AMP.**  
Does continuity exist between fan control amp. harness terminal No. (102) and body ground?

Reconnect fan control amp. harness connector.

**C**

**CHECK FOR OUTPUT OF AUTO AMP.**  
Set up Self-diagnosis STEP 4.  
Measure voltage across fan control amp. harness terminal No. (4) and body ground.

Code No.	Terminal No.		Voltage
	+	-	
41 - 45	(4)	Body ground	Approx. 1 - 3V

Replace fan control amp.

**D**

**CHECK POWER SUPPLY FOR BLOWER MOTOR.**  
Disconnect blower motor harness connector.  
Do approx. 12 volts exist between blower motor harness terminal No. (50) and body ground?

Check 15A fuses at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and Wiring Diagram.)

**E** Note

Check circuit continuity between blower motor harness terminal No. (51) and fan control amp. harness terminal No. (41).

**CHECK BLOWER MOTOR.**  
(Refer to Electrical Components Inspection.)





Replace blower motor.

(Go to next page.)




**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Auto Air Conditioner


## Diagnostic Procedure 15 (Cont'd)

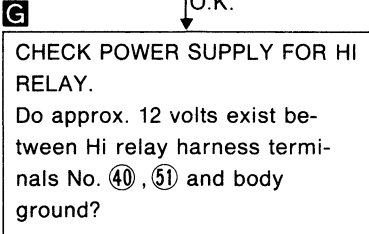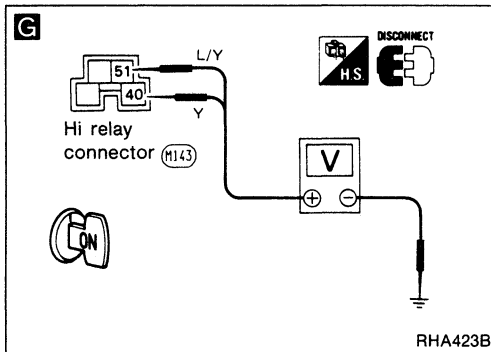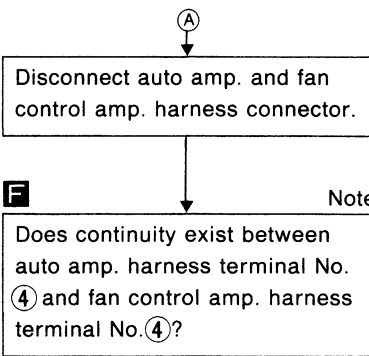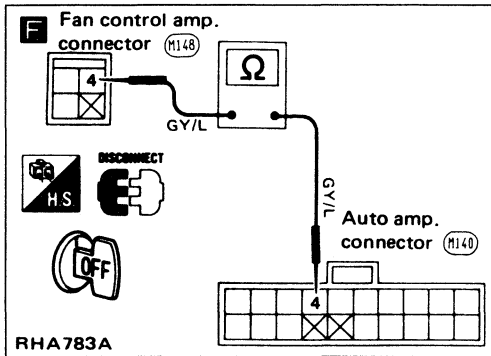

Check 10A or 15A fuses at fuse block. (Refer to "POWER SUPPLY ROUTING" in EL section and Wiring Diagram.)

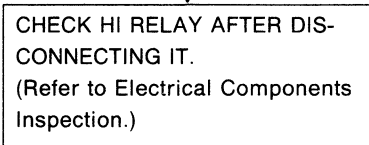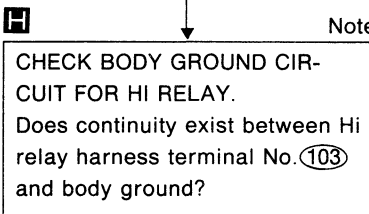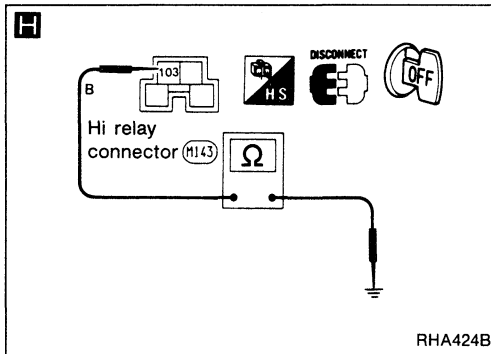

Replace Hi relay.



**B**



(Go to next page.)

**Note:**

If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Diagnostic Procedure 15 (Cont'd)

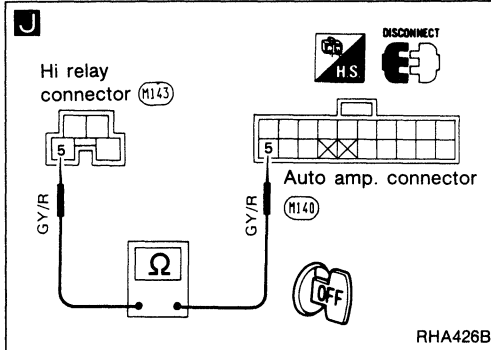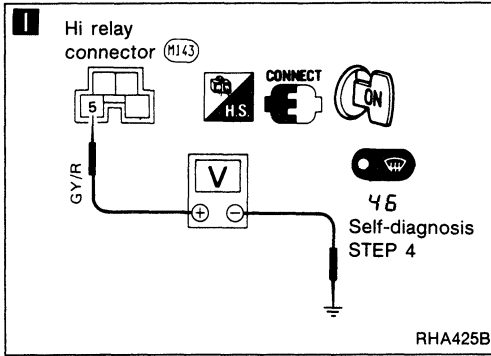

**I** **B**

CHECK FOR OUTLET OF AUTO AMP.  
Set up Self-diagnosis STEP 4.  
Measure voltage across Hi relay harness terminal No. ⑤ and body ground.

Code No.	Terminal No.		Voltage
	⊕	⊖	
46	⑤	Body ground	Less than approx. 1.5V

N.G. → Disconnect Hi relay and auto amp. harness connectors.






**J** **Note**  
Does continuity exist between Hi relay harness terminal No. ⑤ and auto amp. harness terminal No. ⑤?

O.K.

Replace auto amp.

O.K.


Replace blower motor.

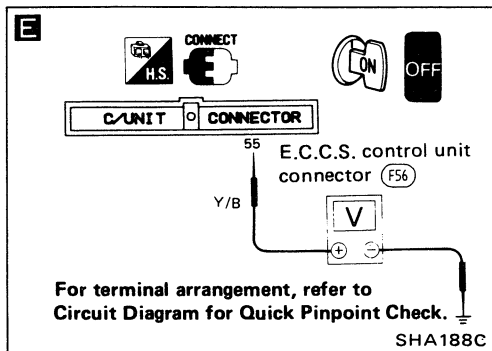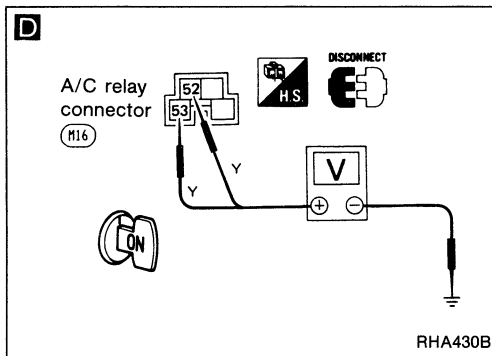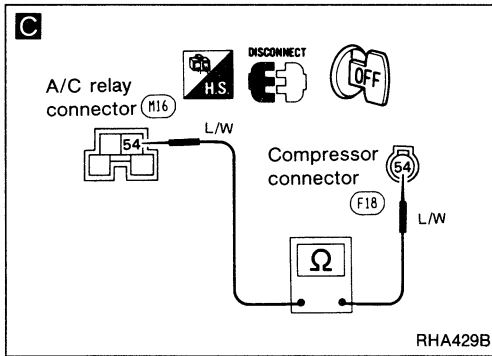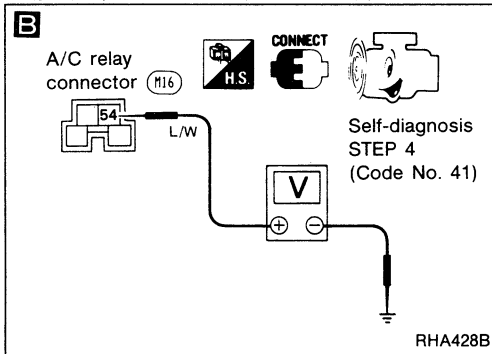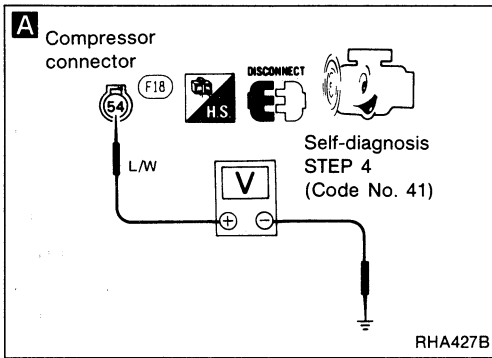

## Diagnostic Procedure 16

**SYMPTOM:** Magnet clutch does not engage after performing Preliminary Check 6.

















- Perform Preliminary Check 6 before referring to the flow chart.

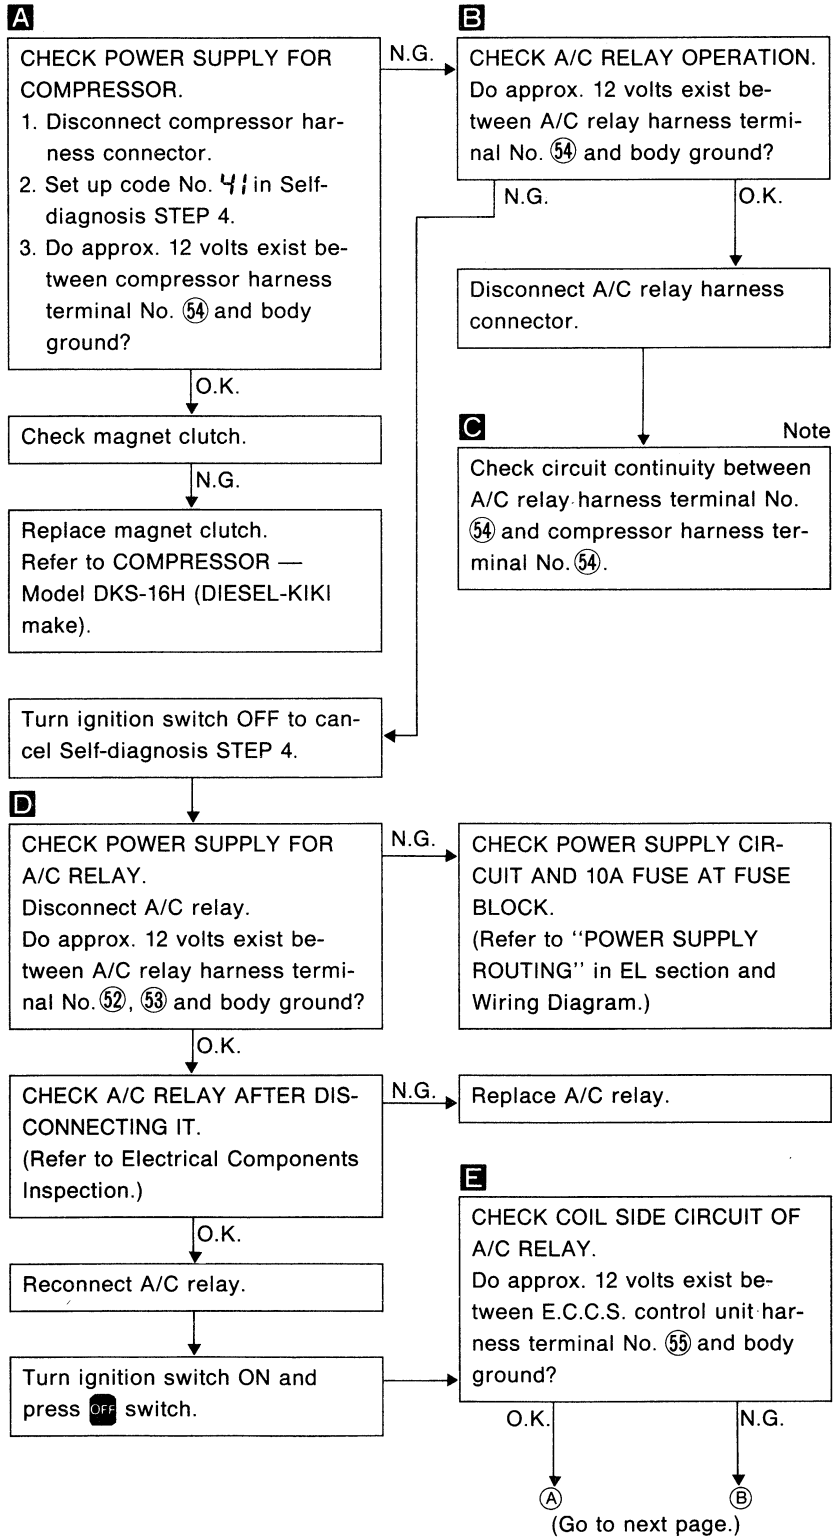

**Note:** If the result is N.G. after checking circuit continuity, repair harness or connector.

# TROUBLE DIAGNOSES — Auto Air Conditioner

## Diagnostic Procedure 16 (Cont'd)

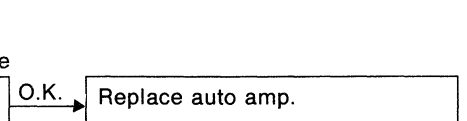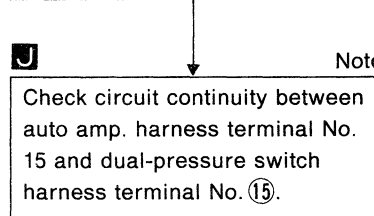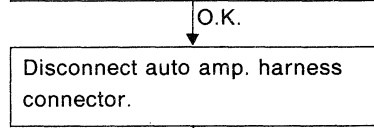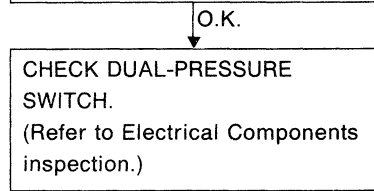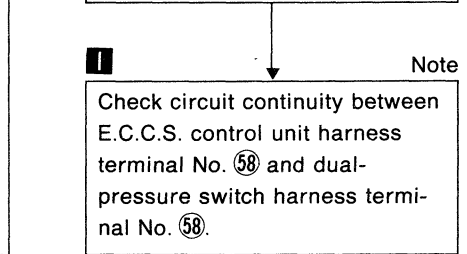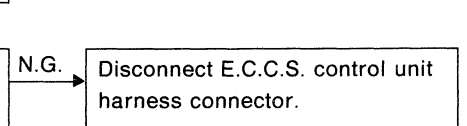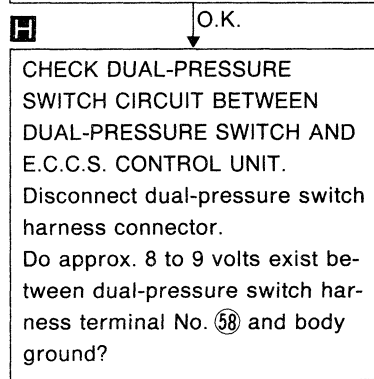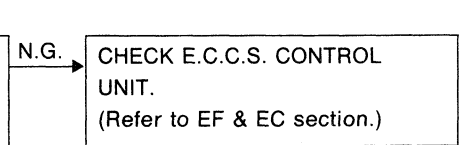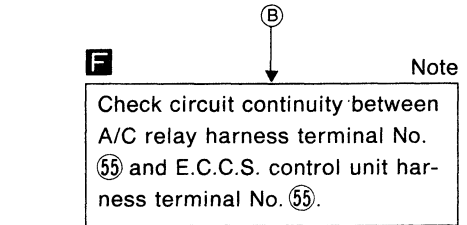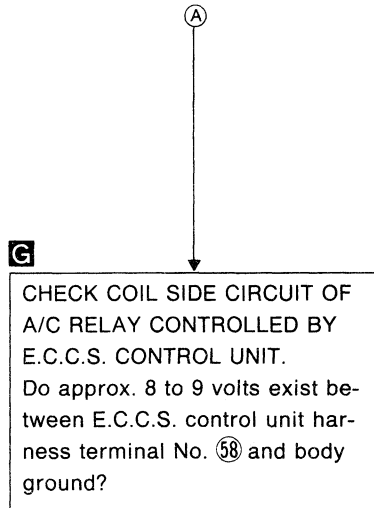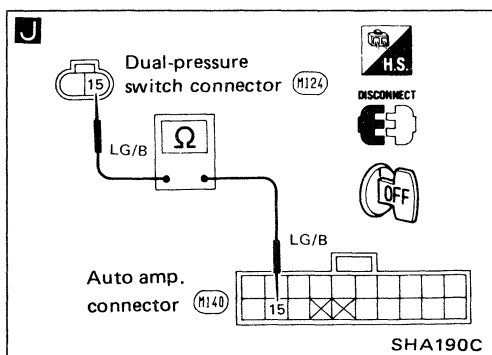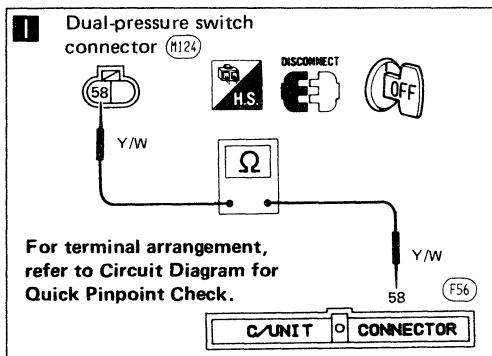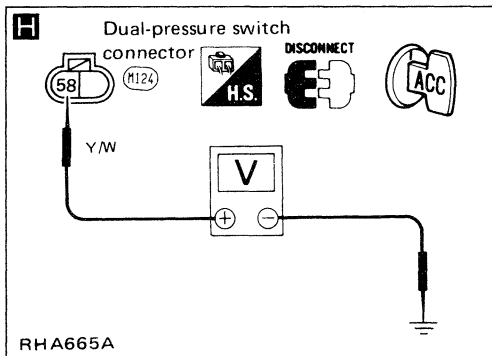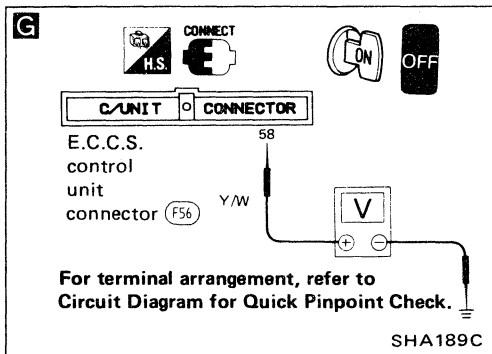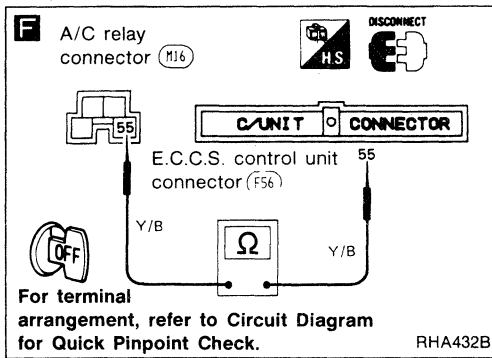


**Note:**  
If the result is N.G. after checking circuit continuity, repair harness or connector.



## Diagnostic Procedure 17

**SYMPTOM: Self-diagnosis cannot be performed.**

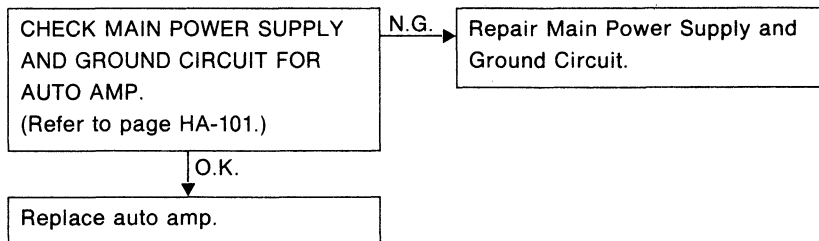

## Electrical Components Inspection

### BLOWER MOTOR

- Refer to page HA-73.

### HI RELAY


- Inspection method is the same as that of A/C relay. Refer to page HA-75.

### A/C RELAY

- Refer to page HA-75.

### DUAL-PRESSURE SWITCH


- Refer to page HA-74.

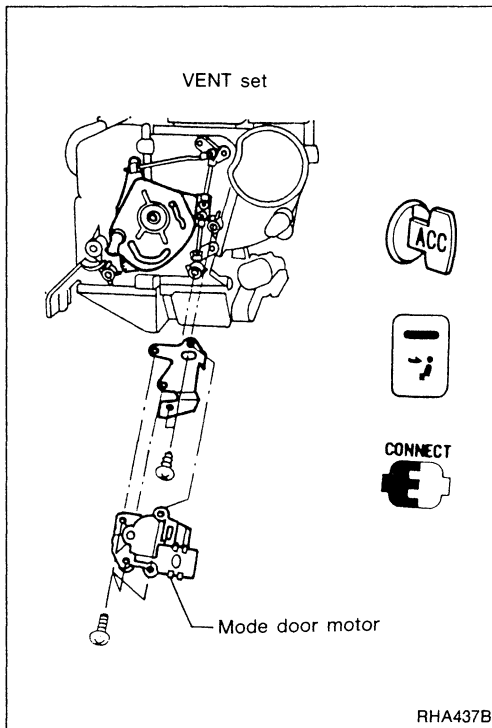

## Control Cable and Rod Adjustment

### MODE DOOR


1. Move side link with hand and hold mode door in VENT mode.
2. Install mode door motor on heater unit and connect it to body harness.
3. Turn ignition switch to ACC.
4. Turn VENT switch ON.
5. Attach mode door motor rod to side link rod holder.
6. Turn DEF switch ON. Check that side link operates at the fully-open position. Also turn VENT switch ON to check that side link operates at the fully-open position.

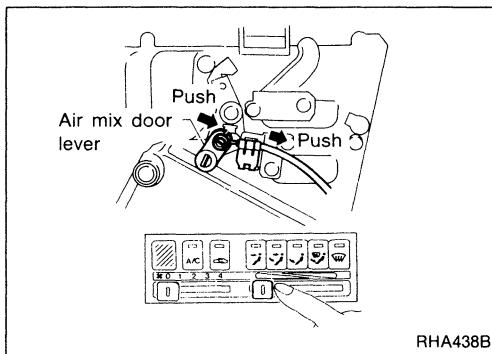

### TEMPERATURE CONTROL CABLE

- Clamp the cable while pushing cable outer and air mix door lever in direction of arrow.

**After positioning control cable, check it operates properly.**

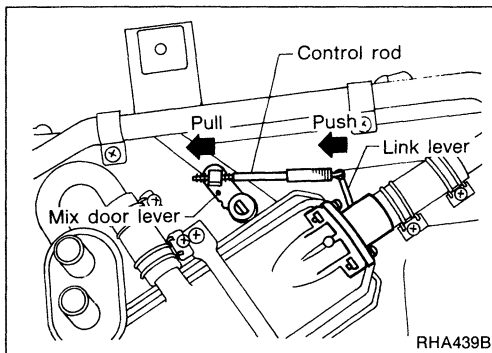

### WATER COCK CONTROL ROD

- **When adjusting water cock control rod, first disconnect temperature control cable from air mix door lever. Reconnect and readjust temperature control cable.**

1. Push air mix door lever in direction of arrow.
2. Pull control rod of water cock in direction of arrow so as to make clearance of about 2 mm (0.08 in) between ends of rod and link lever and connect the rod to door lever.


**After connecting control rod, check it operates properly.**

## DOOR CONTROL — Manual Air Conditioner

### Control Cable and Rod Adjustment (Cont'd)


#### INTAKE DOOR

1. Connect the intake door motor harness connector before installing to the intake door motor.
2. Turn ignition switch to ACC.
3. Turn REC switch ON.
4. Install intake door motor on intake unit.
5. Install intake door lever.
6. Set intake door rod in REC position and fasten door rod to holder on intake door lever.
7. Check that intake door operates properly when REC switch is turned ON and OFF.

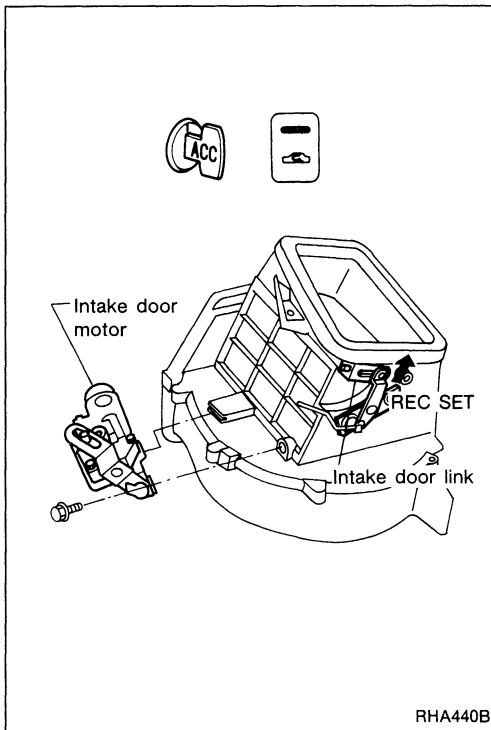


## Control Rod Adjustment


### MODE DOOR

1. Install mode door motor on heater unit and connect it to body harness.
2. Set up code No. **41** in Self-diagnosis STEP 4.
3. Move side link by hand and hold mode door in VENT mode.
4. Attach mode door motor rod to side link rod holder.
5. Check mode door operates properly when changing code No. **41** to **46** by pushing  (DEF) switch.


<b>41</b>	<b>42</b>	<b>43</b>	<b>44</b>	<b>45</b>	<b>46</b>
VENT	B/L	B/L	D/F1	D/F2	DEF

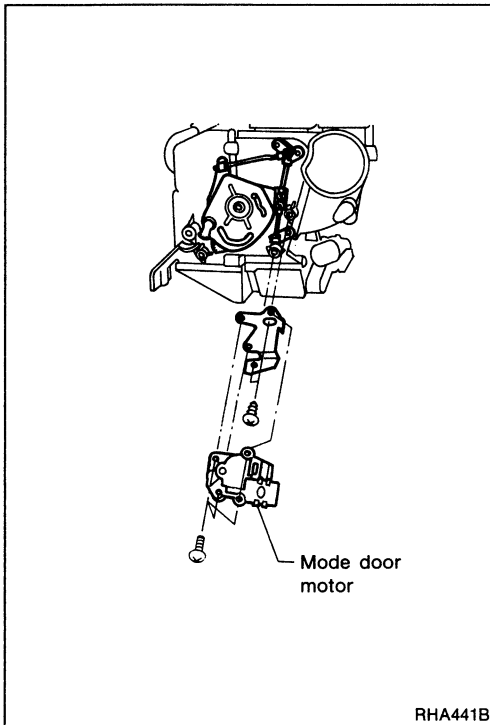

### AIR MIX DOOR

1. Install air mix door motor on heater unit and connect it to body harness.
2. Set up code No. **41** in Self-diagnosis STEP 4.
3. Move air mix door lever by hand and hold it at full cold position.
4. Attach air mix door lever to rod holder.
5. Check air mix door operates properly when changing code No. **41** to **46** by pushing  (DEF) switch.


<b>41</b>	<b>42</b>	<b>43</b>	<b>44</b>	<b>45</b>	<b>46</b>
Full Cold			Full Hot		

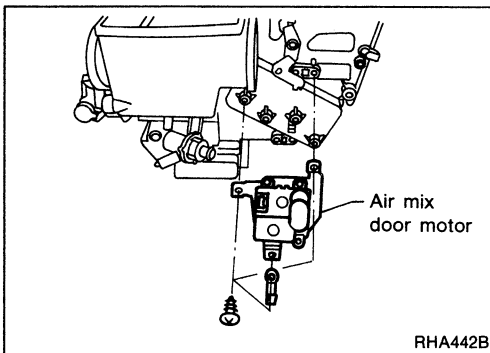


## DOOR CONTROL — Auto Air Conditioner

### Control Rod Adjustment (Cont'd)


#### INTAKE DOOR

1. Install intake door motor on intake unit and connect it to body harness.
2. Set up code No. **41** in Self-diagnosis STEP 4.
3. Move intake door link by hand and hold it at REC position.
4. Attach intake door lever to rod holder.
5. Check intake door operates properly when changing code No. **41** to **46** by pushing  (DEF) switch.

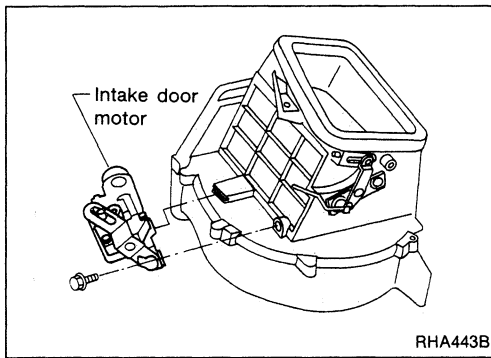

<b>41</b>	<b>42</b>	<b>43</b>	<b>44</b>	<b>45</b>	<b>46</b>
REC		20% FRE	FRE		

Push Control System

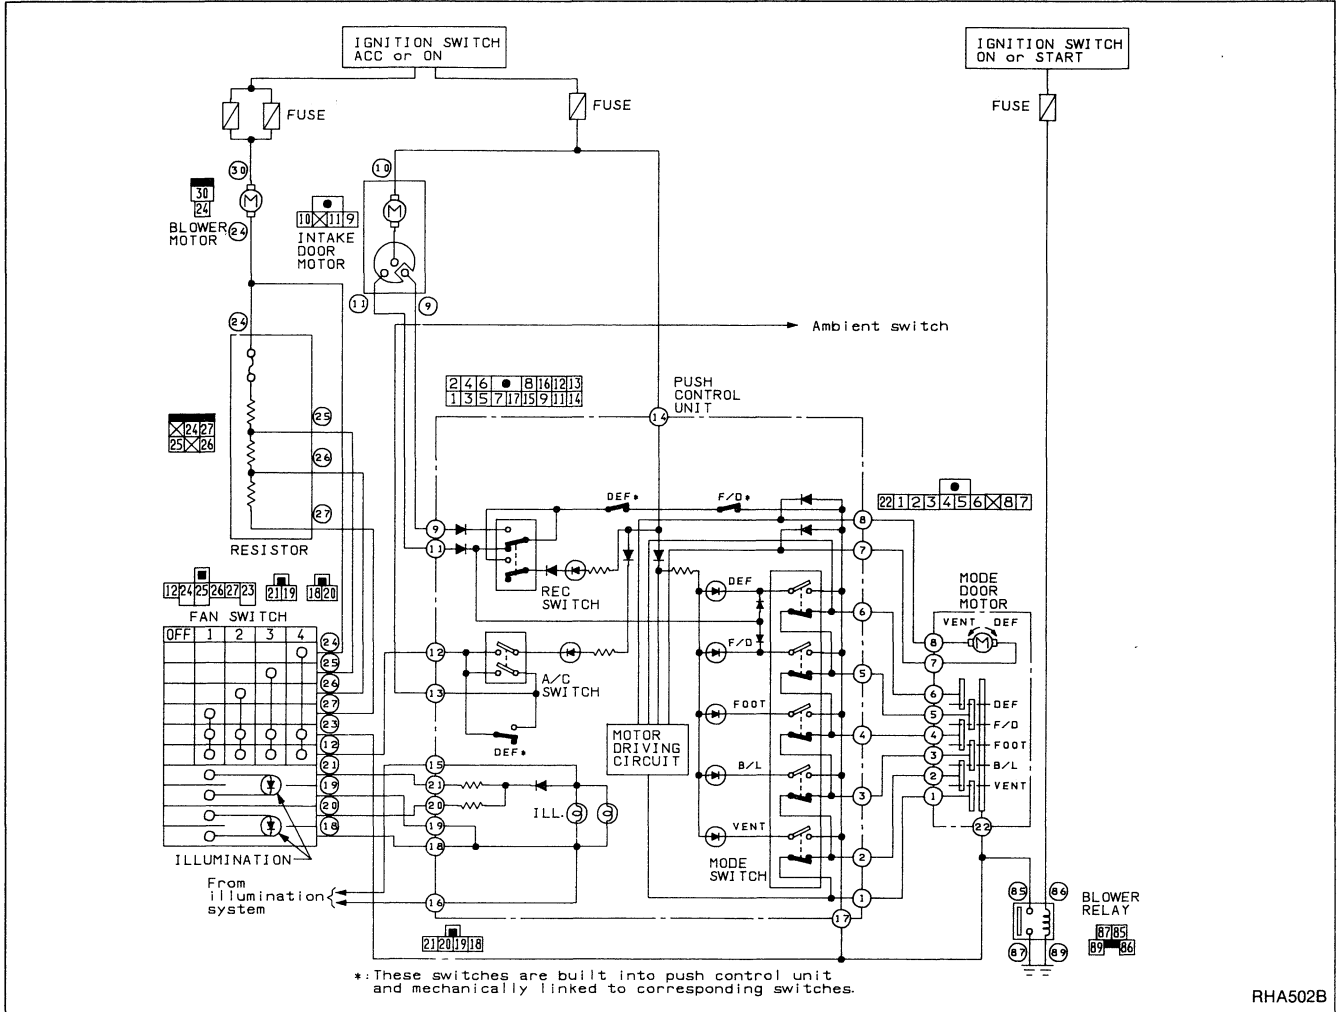

RHA502B

This push control system operates the intake and mode door motors to activate their corresponding doors.

SWITCHES AND THEIR CONTROL FUNCTIONS

Switch	Indicator illuminates						Air outlet	Intake air	Compressor
	A/C								
A/C	○								ON*1
Mode		○					VENT		
			○				B/L		
				○			FOOT		
					○		F/D	FRE	
						○	DEF	FRE	ON*1
								○*2	REC*2


\*1: Compressor operation depends on ambient temperature.

\*2: Depending on mode switch position

### Intake Door Motor

The intake door motor is installed on the front portion of the intake unit. Using a rod and link it opens and closes the intake door.

When the REC switch is ON (OFF), the ground line of the intake door motor is switched from terminal ⑪ to ⑨ (⑨ to ⑪). This causes the motor to start because the position switch contacts built into it are set to the current flow position. The contacts turn along with the motor. When they reach the non-current flow position, the motor will stop. The motor always turns in the same direction.

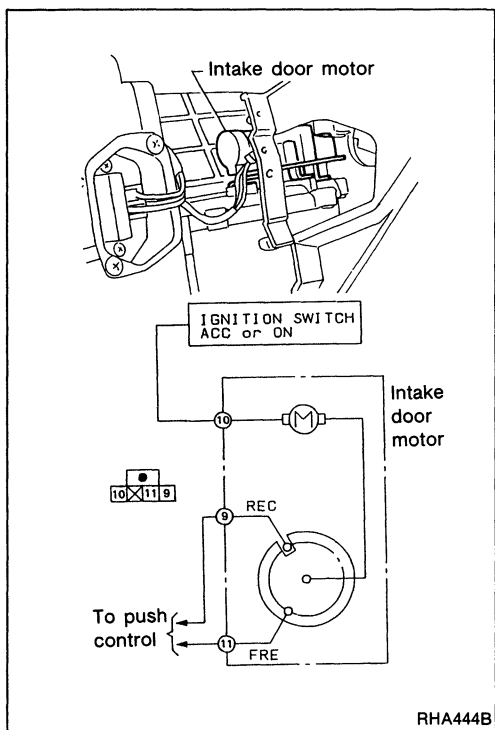


RHA444B

### Mode Door Motor

The mode door motor is located on the left side of the heater unit. Through the side link it opens and closes the vent, foot and defroster door.

When one mode switch is pushed, the position switch built into it reads the corresponding mode to determine the direction of the motor rotation. As soon as the desired mode is set, the position switch stops the motor.


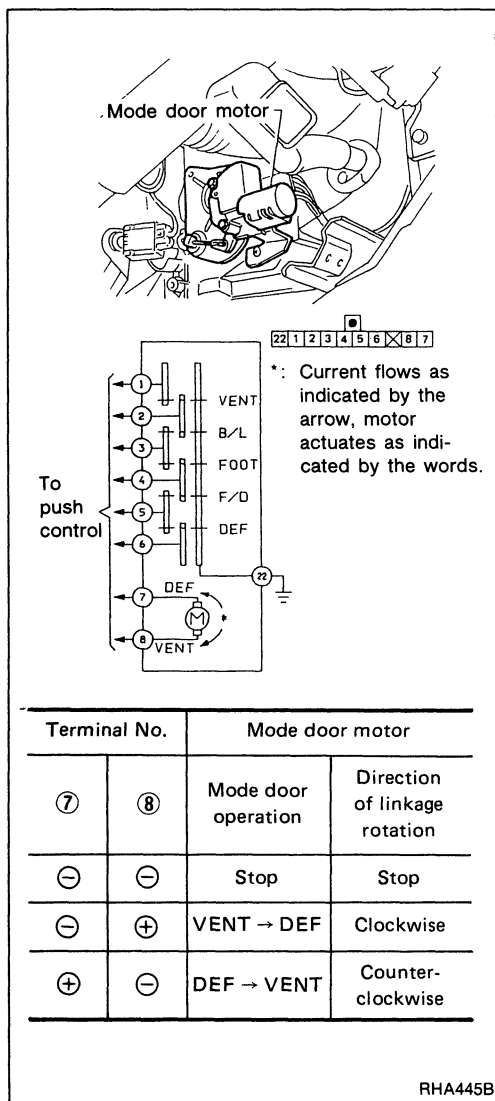


RHA445B

Terminal No.		Mode door motor	
⑦	⑧	Mode door operation	Direction of linkage rotation
⊖	⊖	Stop	Stop
⊖	⊕	VENT → DEF	Clockwise
⊕	⊖	DEF → VENT	Counter-clockwise


# DESCRIPTION — Push Control

## Overhaul — Push control unit assembly

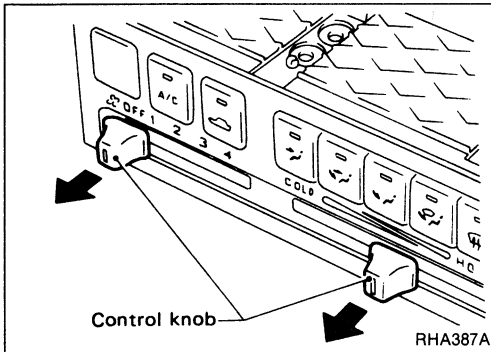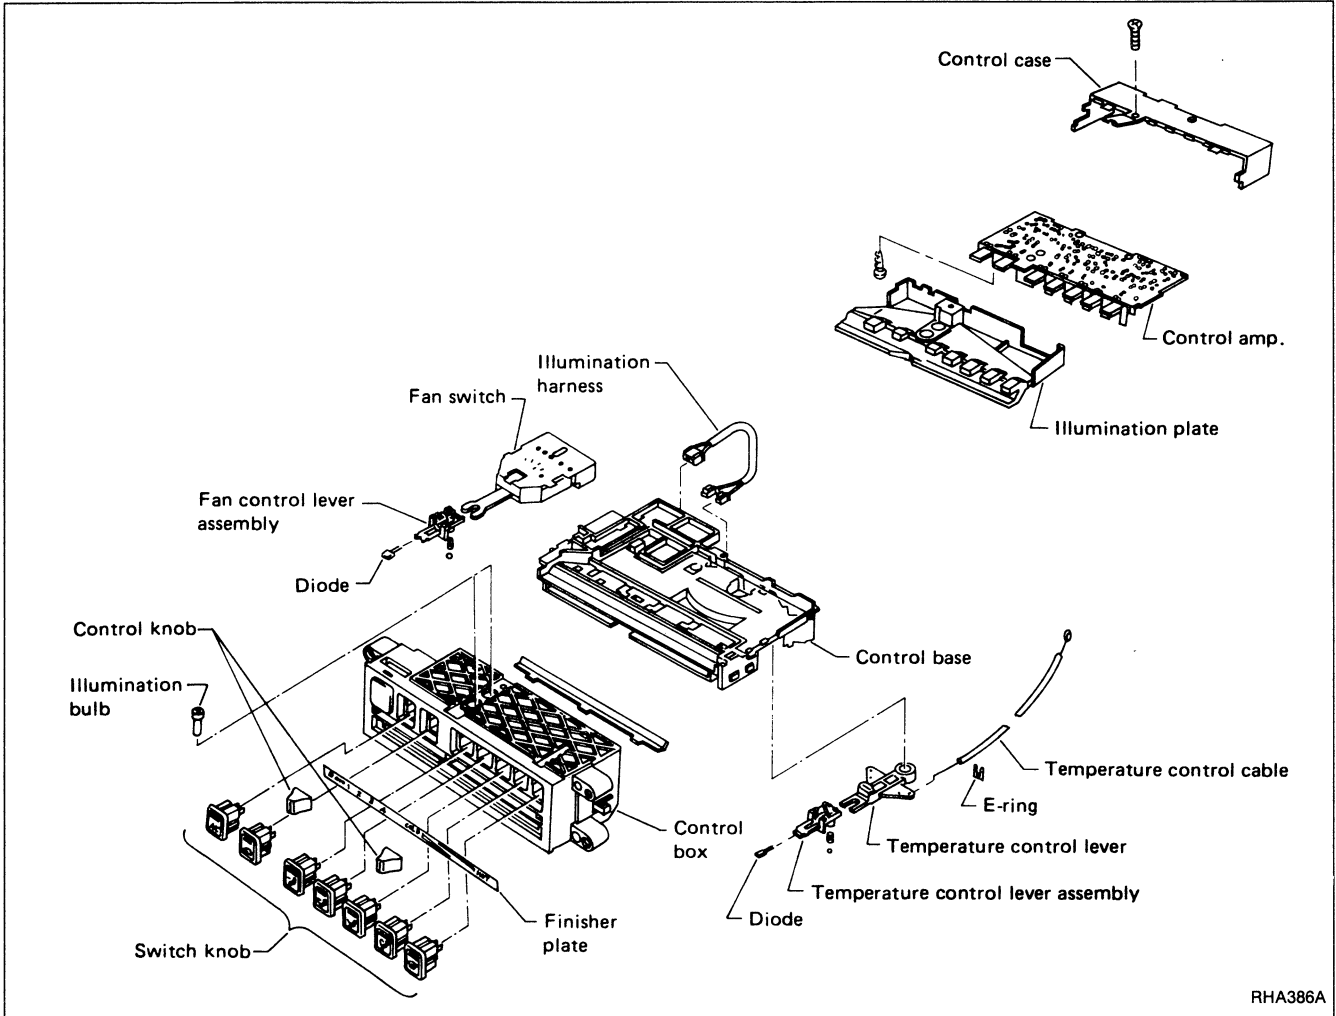

1. Remove control knobs.

Wrap knobs with a cloth and withdraw in direction indicated by arrow as shown in figure at left. Be careful not to scratch knobs during removal.

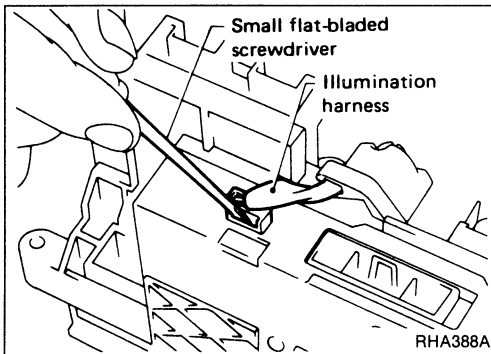


2. Disconnect illumination harness connectors.




## DESCRIPTION — Push Control

### Overhaul — Push control unit assembly (Cont'd)

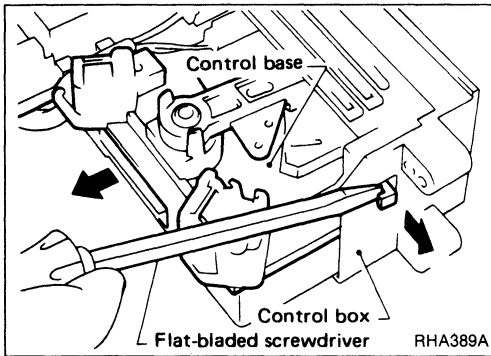

3. Remove control base.


**Undo hook at each end of control box and remove control base from control box by moving it in direction indicated by arrow.**

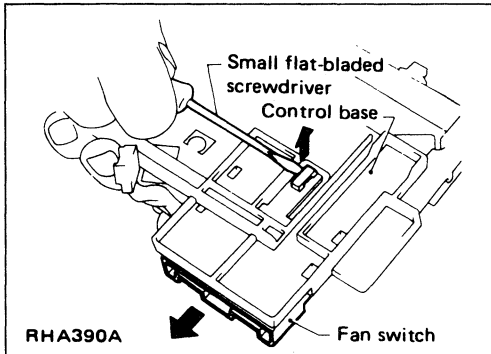

4. Remove fan switch.

5. Remove switch knobs.

**Wrap finisher with a cloth and remove knobs using pliers or similar tool. Be careful not to scratch finisher's surface.**

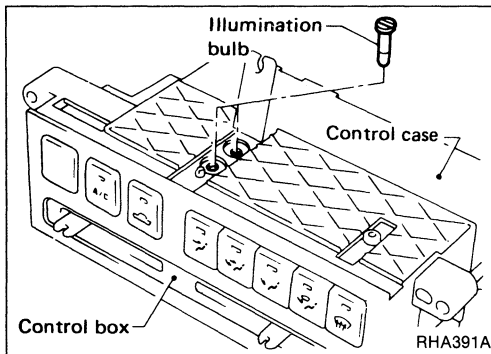

6. Remove illumination bulb.

7. Remove control case.

8. Remove illumination plate.

**Be careful not to scratch control amp. when removing illumination plate.**

9. Remove finisher plate.

10. Remove control amp.


**Be careful not to damage substrate when removing.**

11. Disconnect temperature control cable.


12. Installation is in reverse order of removal.

**Overview of Control System**

The control system consists of a) input sensors and switches, b) the automatic amplifier (microcomputer), and c) outputs. The relationship of these components is shown in the diagram below:

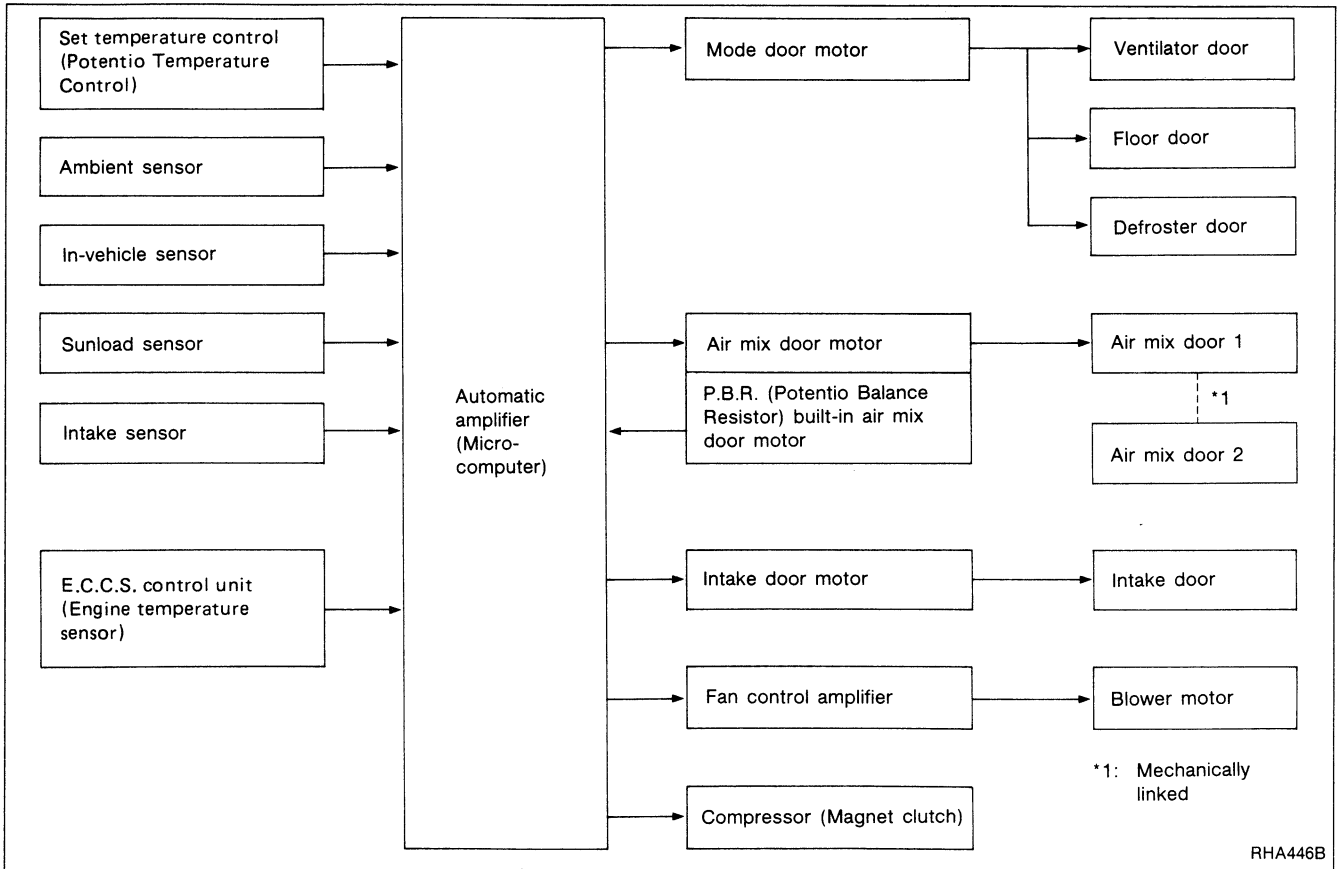

RHA446B

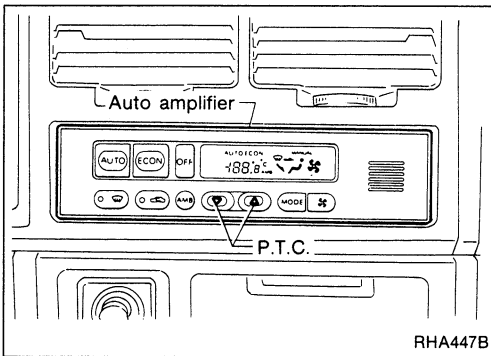


RHA447B

**Control System Input Components**

**POTENTIO TEMPERATURE CONTROL (P.T.C.)**

The P.T.C. is built into the auto amplifier. It can be set at an interval of 0.5°C (1.0°F) through both (HOT) and (COLD) control switches. Setting temperature is digitally displayed.

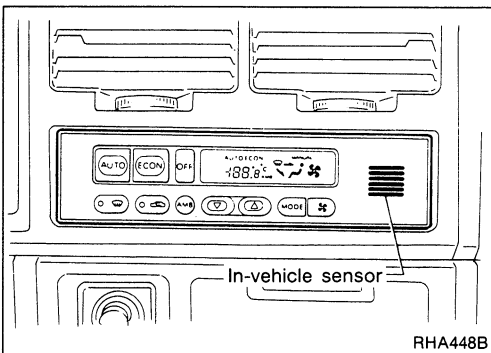

RHA448B


**IN-VEHICLE SENSOR**

The in-vehicle sensor is attached to the control finisher. It converts variations in temperature of compartment air drawn from the aspirator motor into a resistance value which is then input into the auto amplifier. (A more detailed description of the aspirator motor is shown on the following page.)


## DESCRIPTION — Auto Air Conditioner

### Control System Input Components (Cont'd)

After disconnecting in-vehicle sensor harness connector, measure resistance between terminals ③⑥ and ④⑥ at sensor harness side, using the table below.

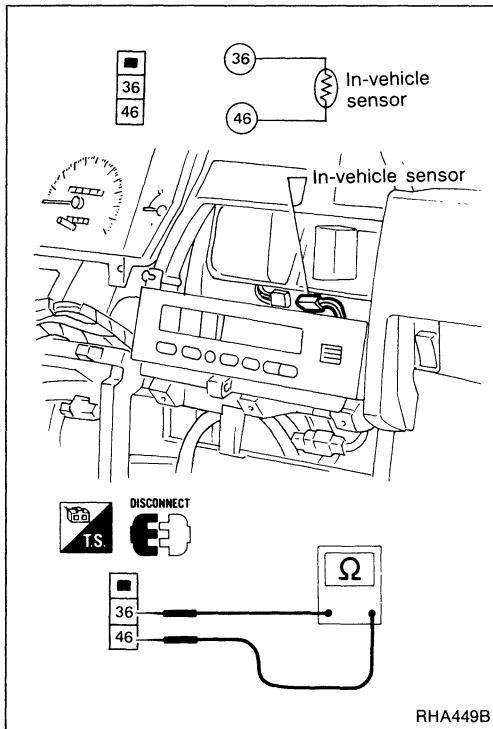

Temperature °C (°F)	Resistance kΩ
-35 (-31)	38.35
-30 (-22)	28.62
-25 (-13)	21.61
-20 (-4)	16.50
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07
50 (122)	0.91
55 (131)	0.77
60 (140)	0.66
65 (149)	0.57

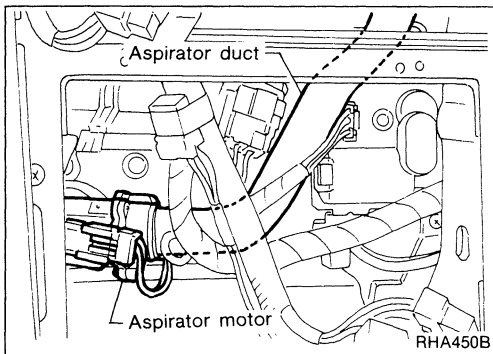

### ASPIRATOR MOTOR

The aspirator motor is located in front of the heater unit. The aspirator motor activates when the ignition switch is "ON". The aspirator is connected to the in-vehicle sensor via the aspirator duct so that the in-vehicle sensor monitors the compartment temperature. The aspirator continuously draws in a very small amount of compartment air.



## DESCRIPTION — Auto Air Conditioner

### Control System Input Components (Cont'd)


#### AMBIENT SENSOR

The ambient sensor is attached to hood lock stay. It detects ambient temperature and converts it into a resistance value which is then input to the auto amplifier.

After disconnecting ambient sensor harness connector, measure resistance between terminals ③⑩ and ④④ at sensor harness side, using the table below.

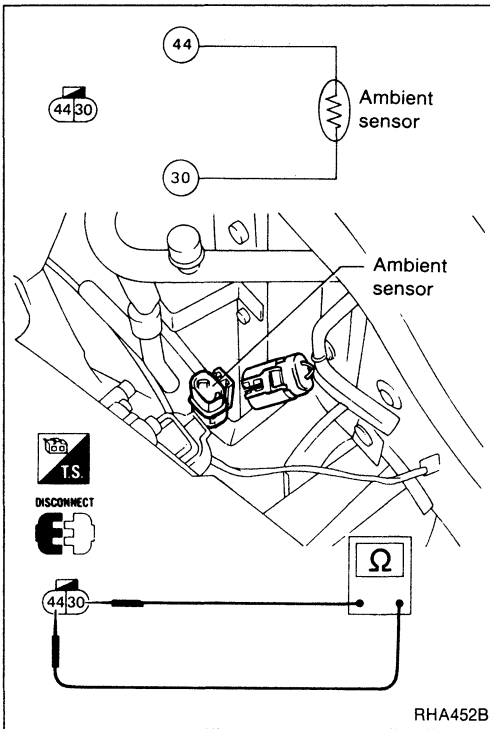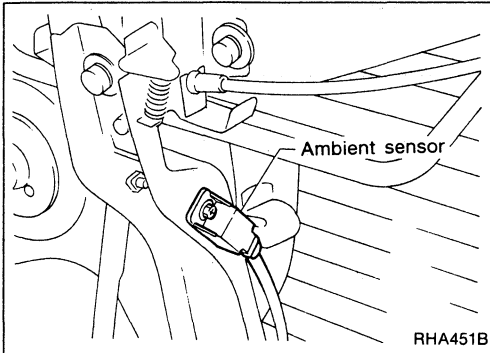

Temperature °C (°F)	Resistance kΩ
-35 (-31)	38.35
-30 (-22)	28.62
-25 (-13)	21.61
-20 (-4)	16.50
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07
50 (122)	0.91
55 (131)	0.77
60 (140)	0.66
65 (149)	0.57

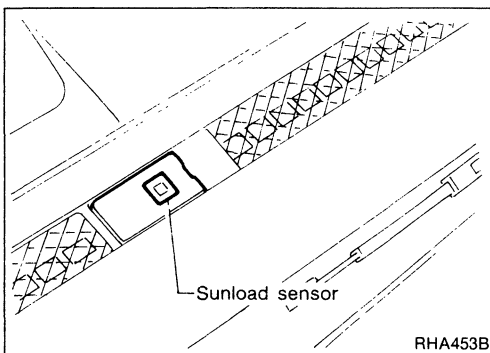

#### SUNLOAD SENSOR

The sunload sensor is located on the right defroster grille. It detects sunload entering through windshield by means of a photo diode and converts it into a current value which is then input to the auto amplifier.



## DESCRIPTION — Auto Air Conditioner

### Control System Input Components (Cont'd)

Measure voltage between terminals ⑩ and ⑳ at vehicle harness side, using the table below.

Input current mA	Output voltage V
0	5.0
0.1	4.1
0.2	3.1
0.3	2.2
0.4	1.3
0.5	0.4

- When checking sunload sensor, select a place where sun shines directly on it.

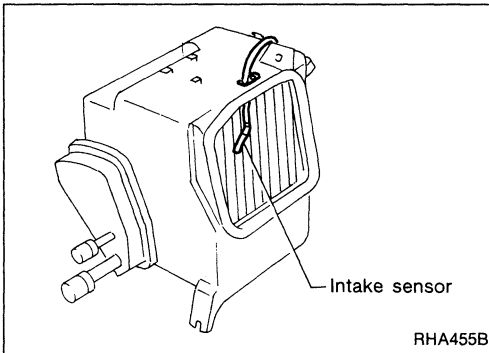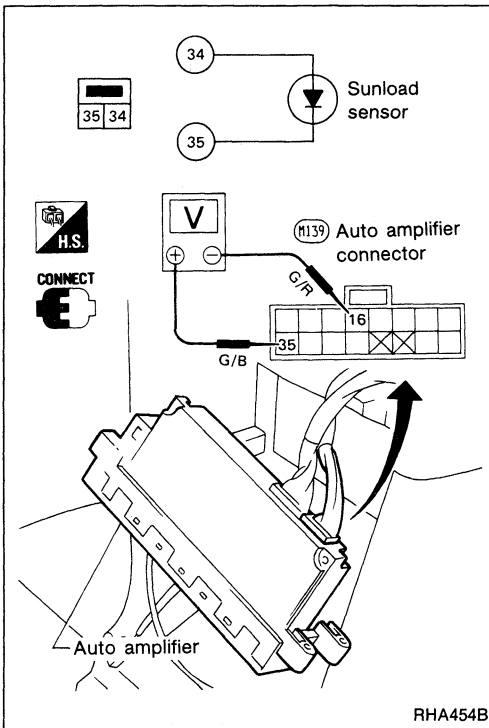


### INTAKE SENSOR

The intake sensor is located on the cooling unit. It converts temperature of air after it passes through the evaporator into a resistance value which is then input to the auto amplifier.

## DESCRIPTION — Auto Air Conditioner


### Control System Input Components (Cont'd)

After disconnecting intake sensor harness connector, measure resistance between terminals 33 and 37 at sensor harness side, using the table below.

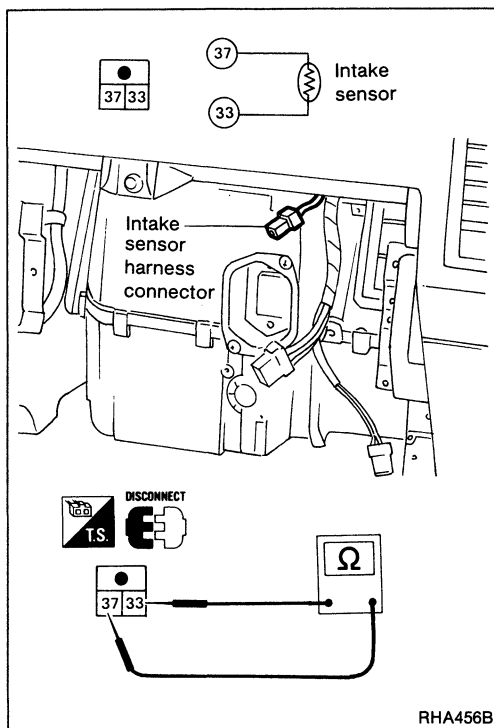

RHA456B

Temperature °C (°F)	Resistance kΩ
-35 (-31)	38.35
-30 (-22)	28.62
-25 (-13)	21.61
-20 (-4)	16.50
-15 (5)	12.73
-10 (14)	9.92
-5 (23)	7.80
0 (32)	6.19
5 (41)	4.95
10 (50)	3.99
15 (59)	3.24
20 (68)	2.65
25 (77)	2.19
30 (86)	1.81
35 (95)	1.51
40 (104)	1.27
45 (113)	1.07
50 (122)	0.91
55 (131)	0.77
60 (140)	0.66
65 (149)	0.57

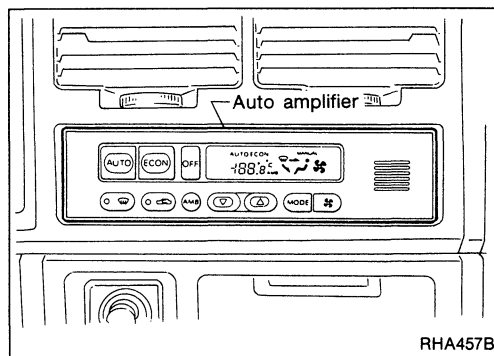

RHA457B

### Control System Automatic Amplifier (Auto amp.)

The auto amplifier has a built-in microcomputer which processes information sent from various sensors needed for air conditioner operation. The air mix door motor, mode door motor, intake door motor, blower motor and compressor are then controlled.

The auto amplifier is unitized with control mechanisms. Signals from various switches and Potentio Temperature Control (P.T.C.) are directly entered into auto amplifier.

Self-diagnostic functions are also built into auto amplifier to provide quick check of malfunctions in the auto air conditioner system.

## **DESCRIPTION — Auto Air Conditioner**

---

### **Control System Automatic Amplifier (Auto amp.) (Cont'd)**

#### **AMBIENT TEMPERATURE INPUT PROCESS**

The automatic amplifier includes a "processing circuit" for the ambient sensor input. When the temperature detected by the ambient sensor increases quickly, the processing circuit allows the auto amp. to recognize an ambient temperature increase of only 0.33°C (0.6°F) per 100 seconds.

As an example, consider stopping for a cup of coffee after high speed driving. Even though the actual ambient temperature has not changed, the temperature detected by the ambient sensor will increase because heat radiated from the engine compartment can radiate to the front grille area (where the ambient sensor is located).

#### **SUNLOAD INPUT PROCESS**

The auto amp. also includes a processing circuit which "average" the variations in detected sunload over a period of time. This prevents drastic swings in the A.T.C. system operation due to small or quick variations in detected sunload.

For example, consider driving along a road bordered by an occasional group of large trees. The sunload detected by the sunload sensor will vary whenever the trees obstruct the sunlight. The processing circuit averages the detected sunload over a period of time, so that the (insignificant) effect of the trees momentarily obstructing the sunlight does not cause any change in the A.T.C. system operation. On the other hand, shortly after entering a long tunnel, the system will recognize the change in sunload, and the system will react accordingly.

## Control System Output Components

### INTAKE DOOR CONTROL


#### Components parts

Intake door control system components are:

- 1) Auto amplifier
- 2) Intake door motor
- 3) P.B.R.
- 4) In-vehicle sensor
- 5) Ambient sensor
- 6) Sunload sensor
- 7) Intake sensor

#### System operation

The intake door control determines intake door position based on the ambient temperature and the in-vehicle temperature. When the ECON, DEF, or OFF buttons are pushed, the auto amplifier sets the intake door at the "Fresh" position.


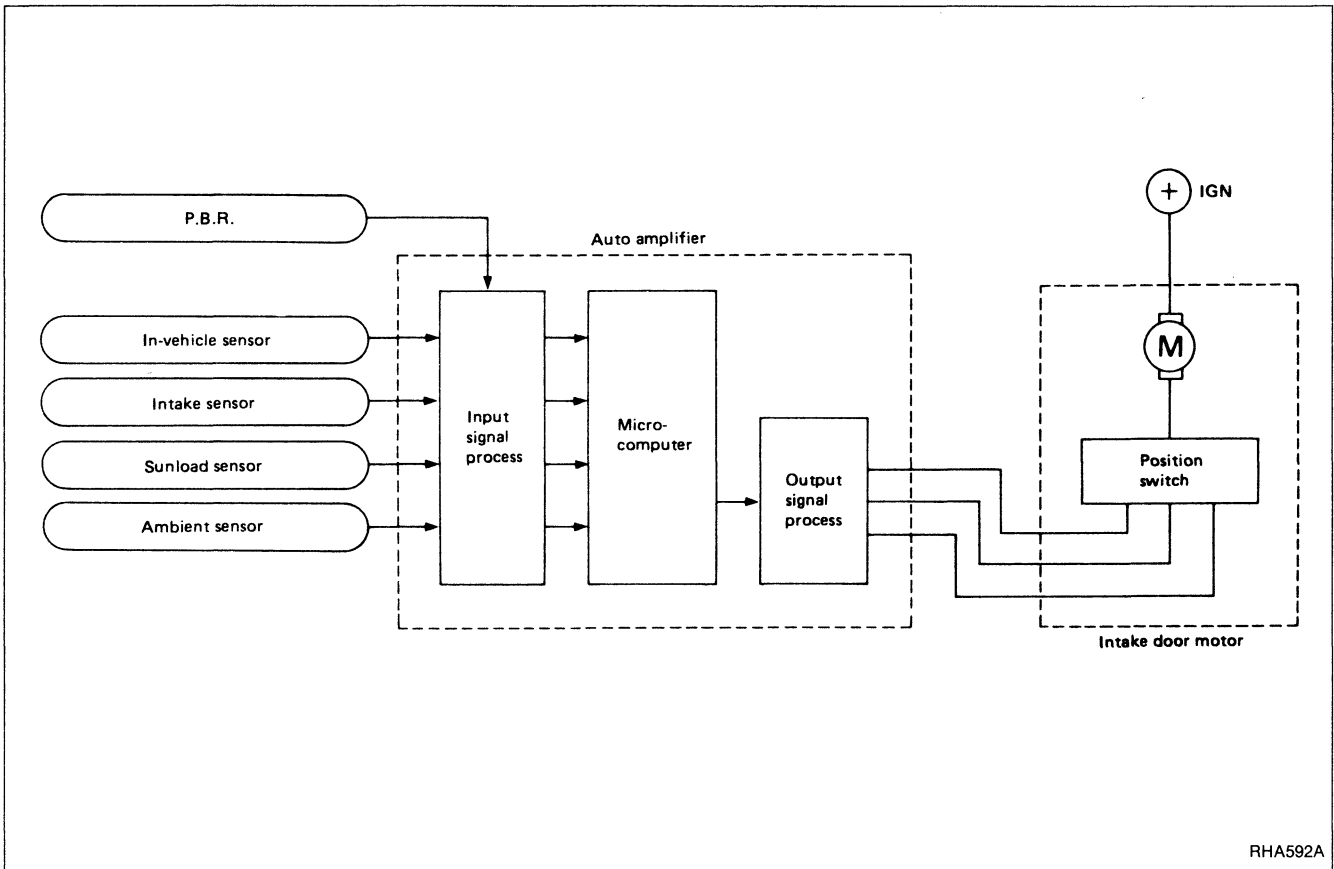


RHA592A



# DESCRIPTION — Auto Air Conditioner

## Control System Output Components (Cont'd) Intake door control specification

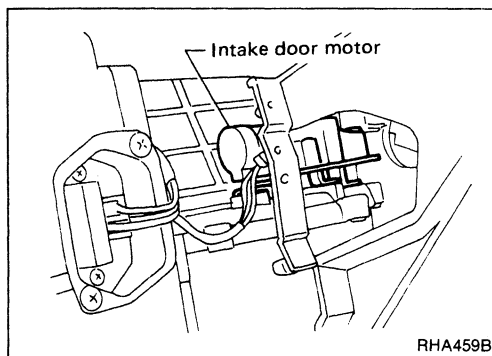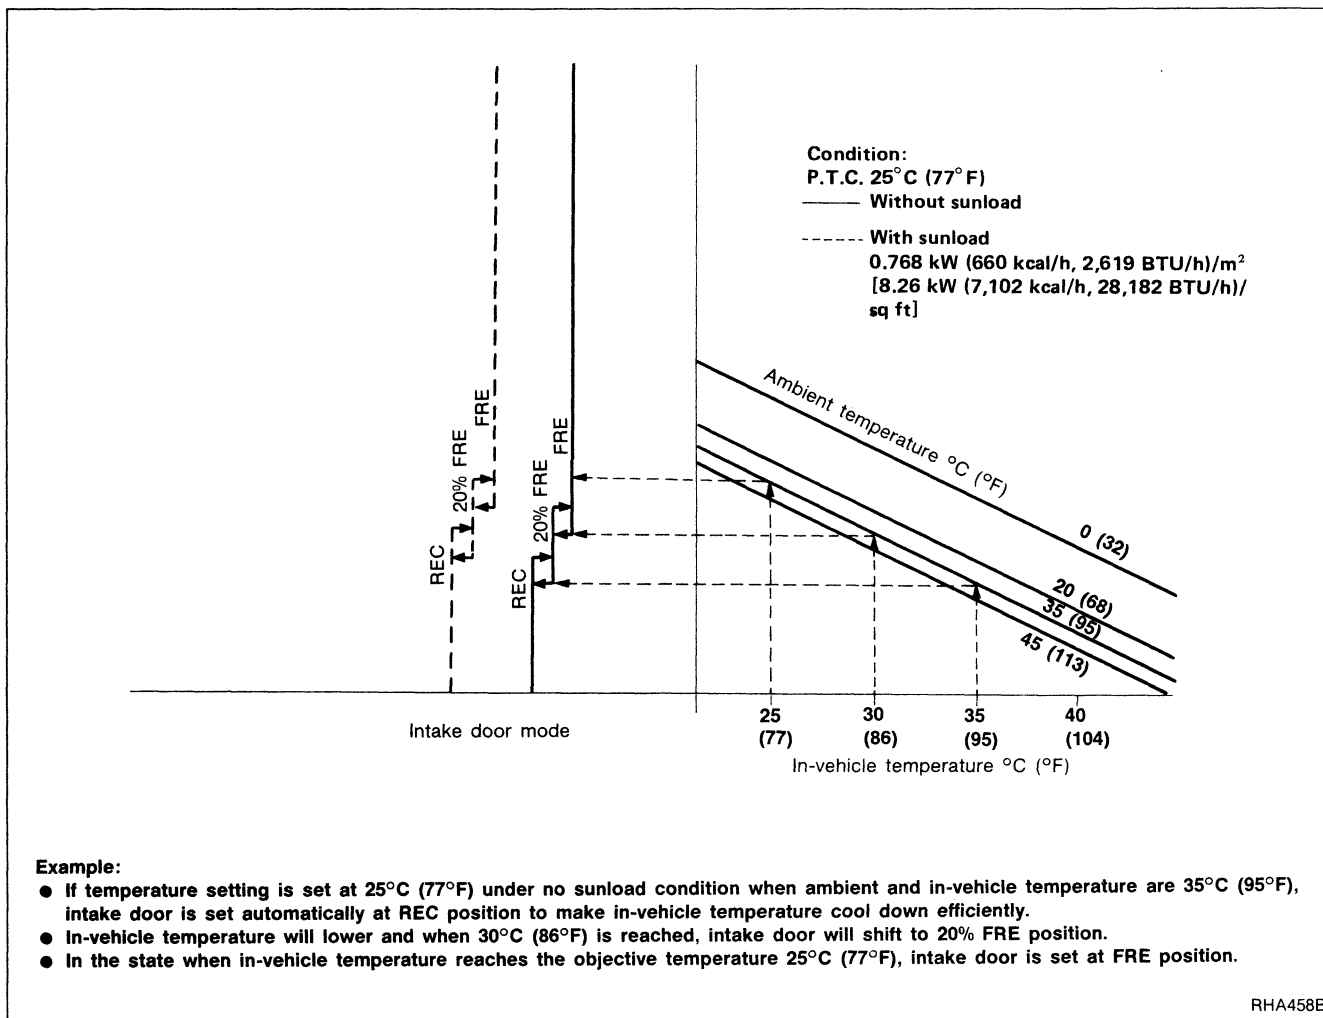


### INTAKE DOOR MOTOR

The intake door motor is attached to the heater unit. It rotates so that air is drawn from inlets set by the auto amplifier. Motor rotation is conveyed to a lever which activates the intake door.

# DESCRIPTION — Auto Air Conditioner


## Control System Output Components (Cont'd)

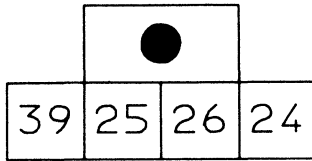

24	25	26	Intake door operation	Direction of lever rotation
CL	OP	OP	REC	Clockwise
OP	CL	OP	20% FRE	
OP	OP	CL	FRE	

OP: Open  
CL: Close

RHA485A

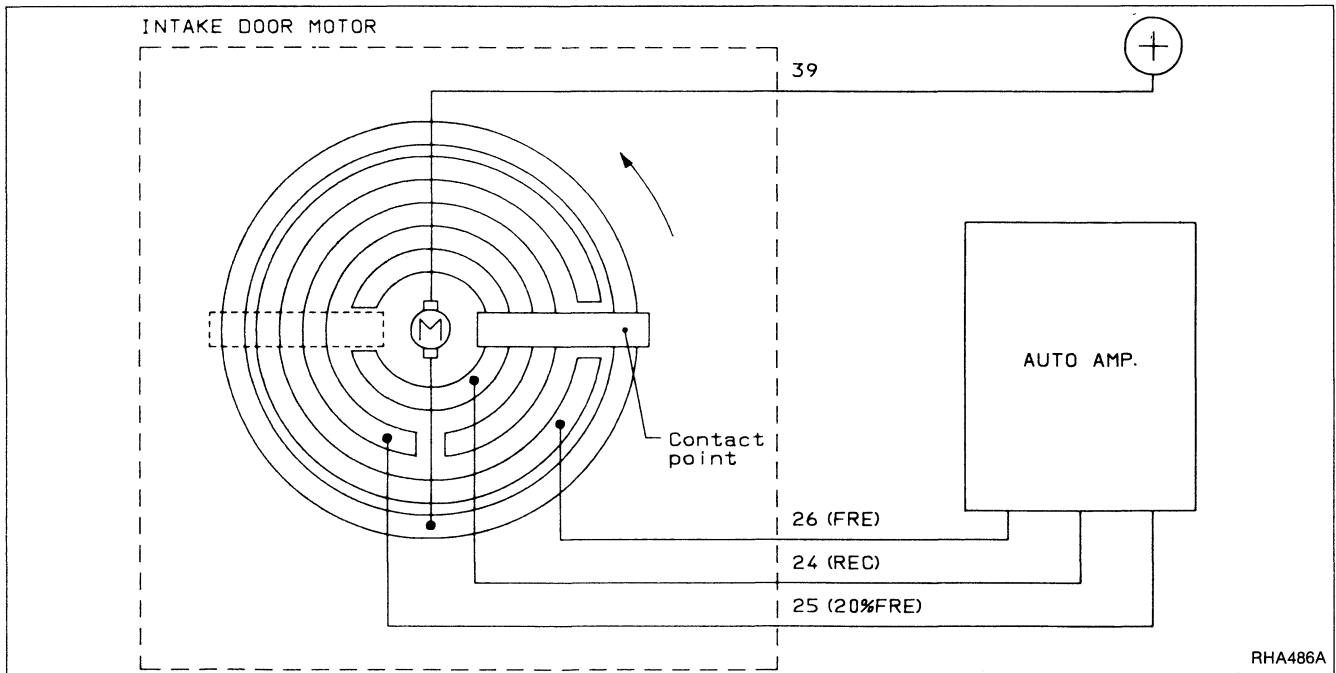

RHA486A

## DESCRIPTION — Auto Air Conditioner

### Control System Output Components (Cont'd) AIR MIX DOOR CONTROL (Automatic temperature control)

#### Component parts


Air mix door control system components are:

- 1) Auto amplifier
- 2) Air mix door motor (P.B.R.)
- 3) In-vehicle sensor
- 4) Ambient sensor
- 5) Sunload sensor
- 6) Intake sensor

#### System operation

Temperature set by Potentio Temperature Control (P.T.C.) is compensated through setting temperature correction circuit to determine target temperature.



Auto amplifier will operate air mix door motor to set air conditioning system in HOT or COLD position, depending upon relationship between conditions (target temperature, sunload, in-vehicle temperature and ambient temperature) and conditions (air mix door position and intake air temperature).

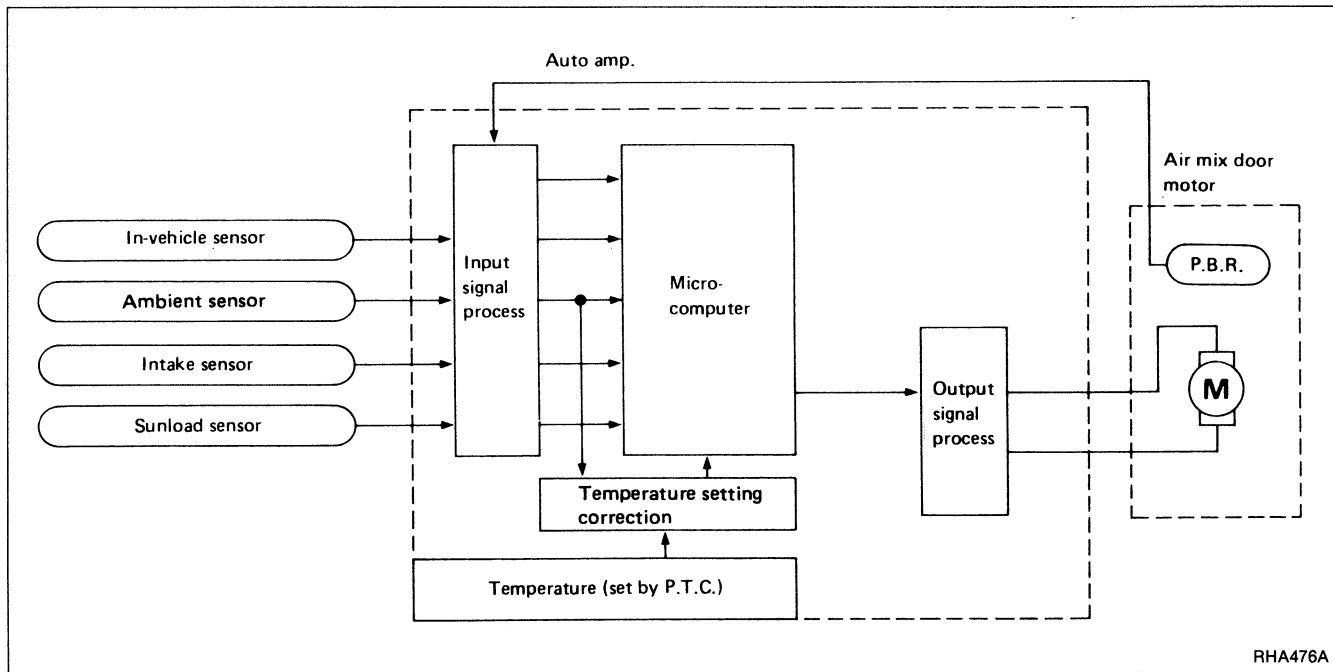

## DESCRIPTION — Auto Air Conditioner

### Control System Output Components (Cont'd)

#### Air mix door control specification

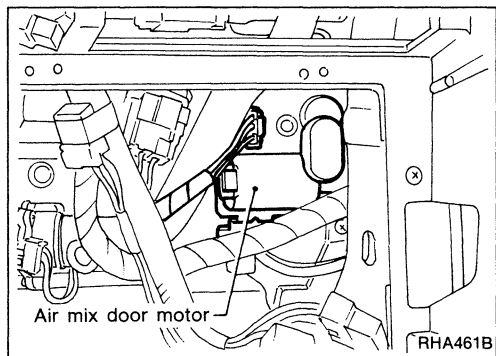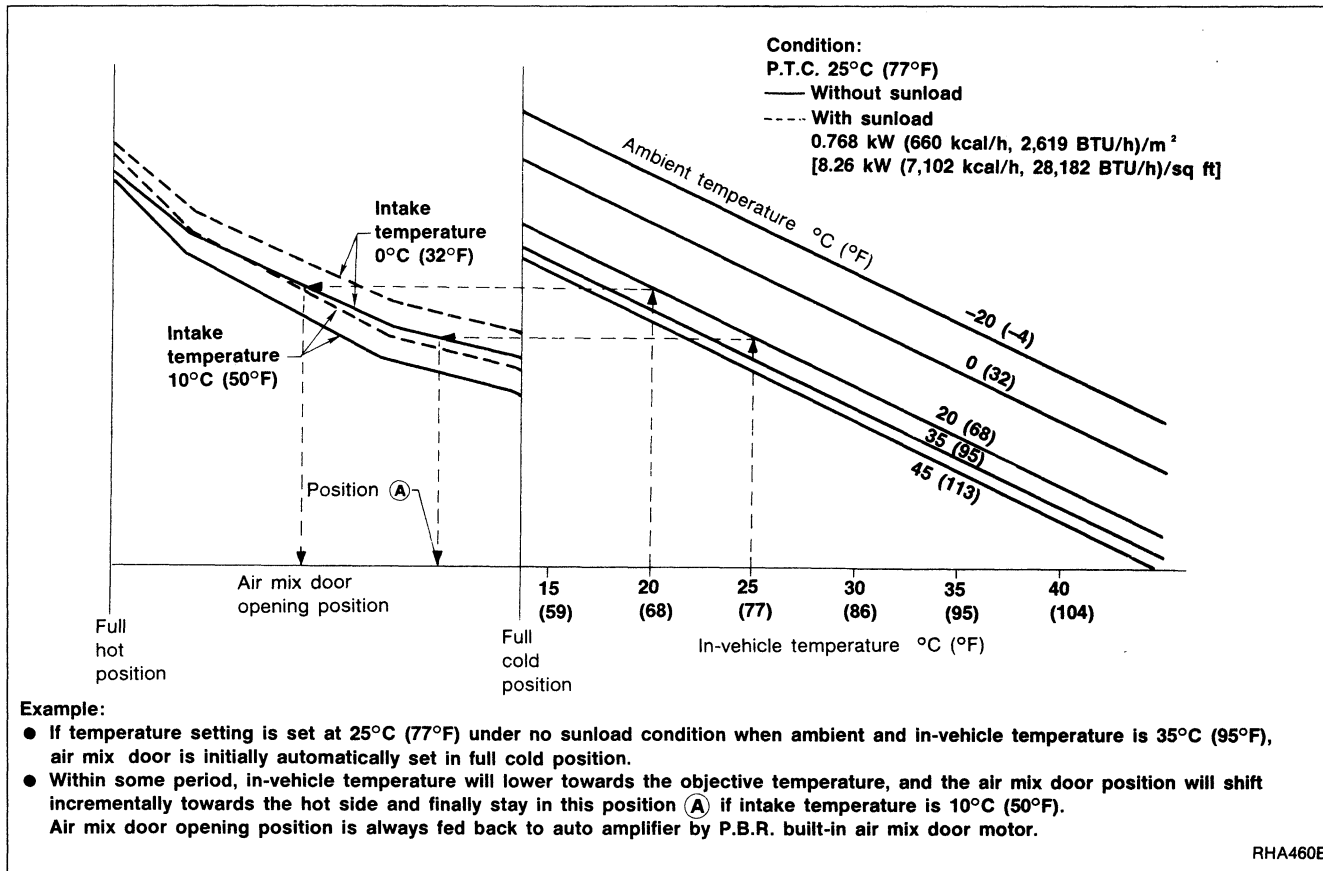


#### AIR MIX DOOR MOTOR

The air mix door motor is attached to the heater unit. It rotates so that the air mix door is opened to a position set by the auto amplifier. Motor rotation is then conveyed through a shaft and air mix door position is then fed back to the auto amplifier by P.B.R. built-in air mix door motor.

# DESCRIPTION — Auto Air Conditioner

## Control System Output Components (Cont'd)



### Air mix door motor operation

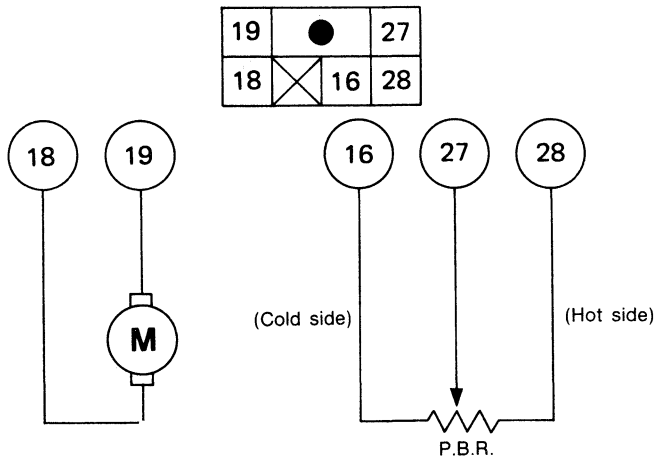

18	19	Air mix door operation	Direction of lever movement
⊕	⊖	COLD → HOT	Clockwise (Upward)
⊖	⊖	STOP	STOP
⊖	⊕	HOT → COLD	Counterclockwise (Downward)

RHA462B

### Characteristics of P.B.R.

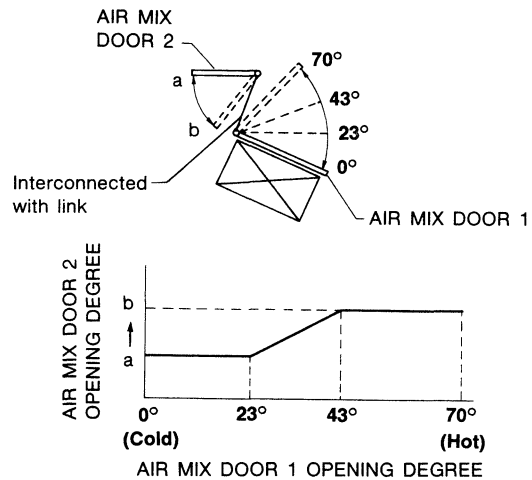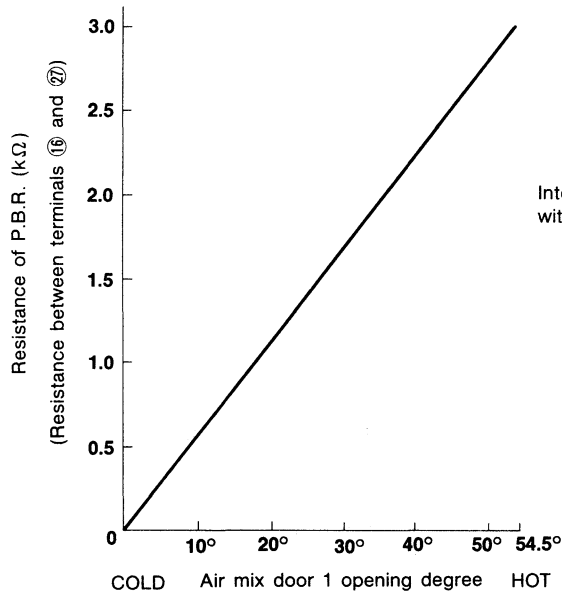



RHA463B

## DESCRIPTION — Auto Air Conditioner

### Control System Output Components (Cont'd)

#### P.B.R.

Measure voltage between terminals ②⑦ and ①⑥ at vehicle harness side.

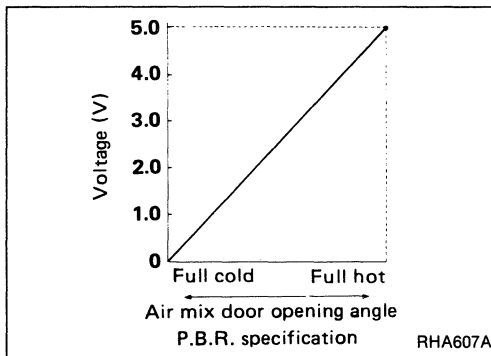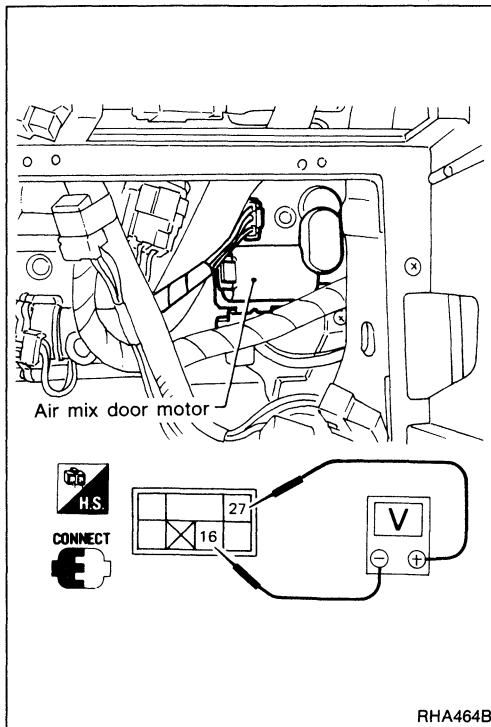

#### Ignition switch: ON

- Ensure tester pointer deflects smoothly when P.T.C. is moved from 18°C (65°F) to 32°C (85°F) and vice versa.

### WATER COCK

The water cock lever is linked to the air mix door shaft, so the amount of hot water flowing to the heater core is a function of the aperture of the air mix door.

### OUTLET DOOR CONTROL

#### Component parts

Outlet door control system components are:

- 1) Auto amplifier
- 2) Mode door motor
- 3) P.B.R.
- 4) In-vehicle sensor
- 5) Ambient sensor
- 6) Sunload sensor
- 7) Intake sensor



## DESCRIPTION — Auto Air Conditioner

### Control System Output Components (Cont'd)

#### System operation

The auto amplifier computes the air outlet conditions according to the ambient temperature and the in-vehicle temperature. The computed outlet conditions are then corrected for sunload to determine air outlets through which air is discharged into the passenger compartment.

When the air outlets is automatically selected as FOOT/DEF, the actual outlet will be either F/D1 or F/D2 depending on the ambient temperature.

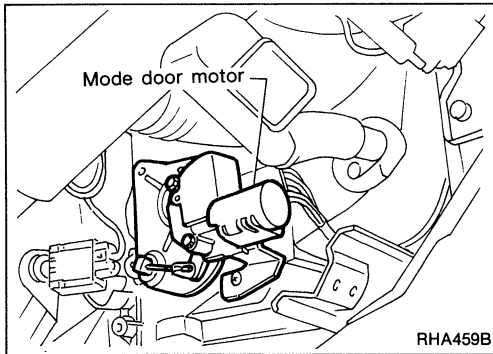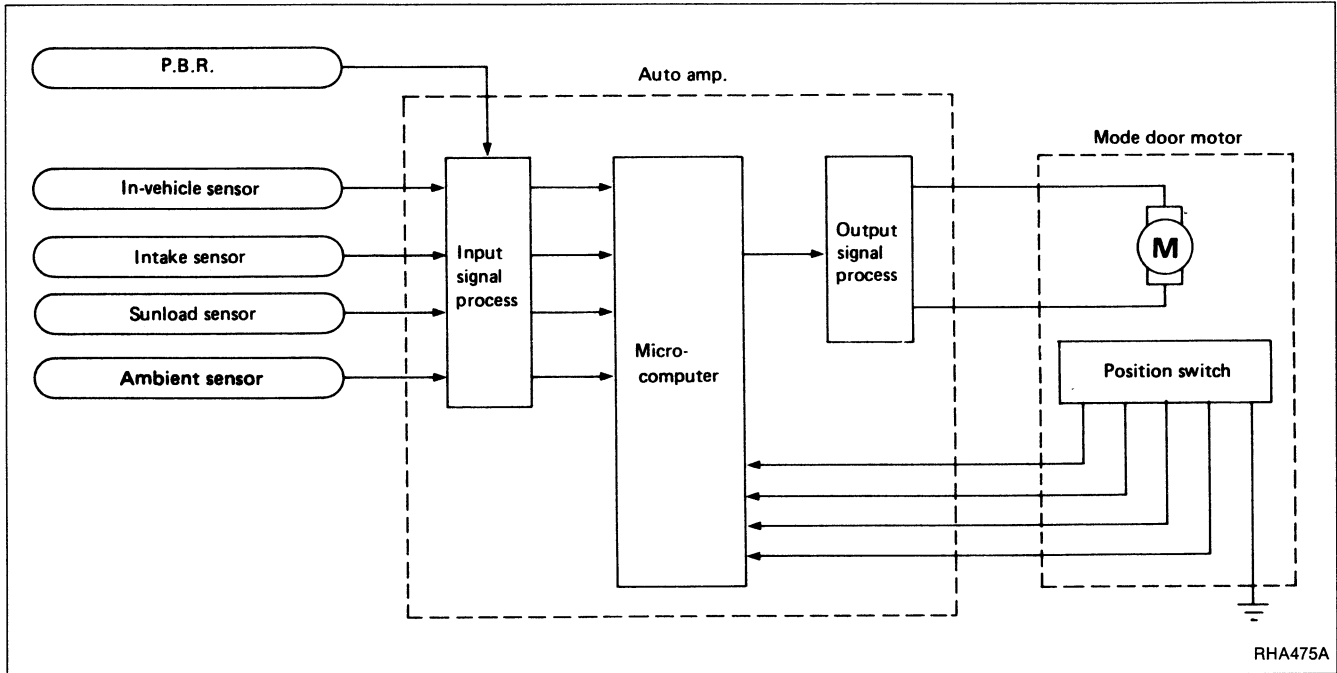


#### MODE DOOR MOTOR

The mode door motor is attached to the heater unit. It rotates so that air is discharged from outlet set by the auto amplifier. Motor rotation is conveyed to a link which activates the mode door.


# DESCRIPTION — Auto Air Conditioner

## Control System Output Components (Cont'd)



10	11	Mode door operation	Direction of side link rotation
⊕	⊖	VENT → DEF	Clockwise
⊖	⊖	STOP	STOP
⊖	⊕	DEF → VENT	Counterclockwise

RHA465B


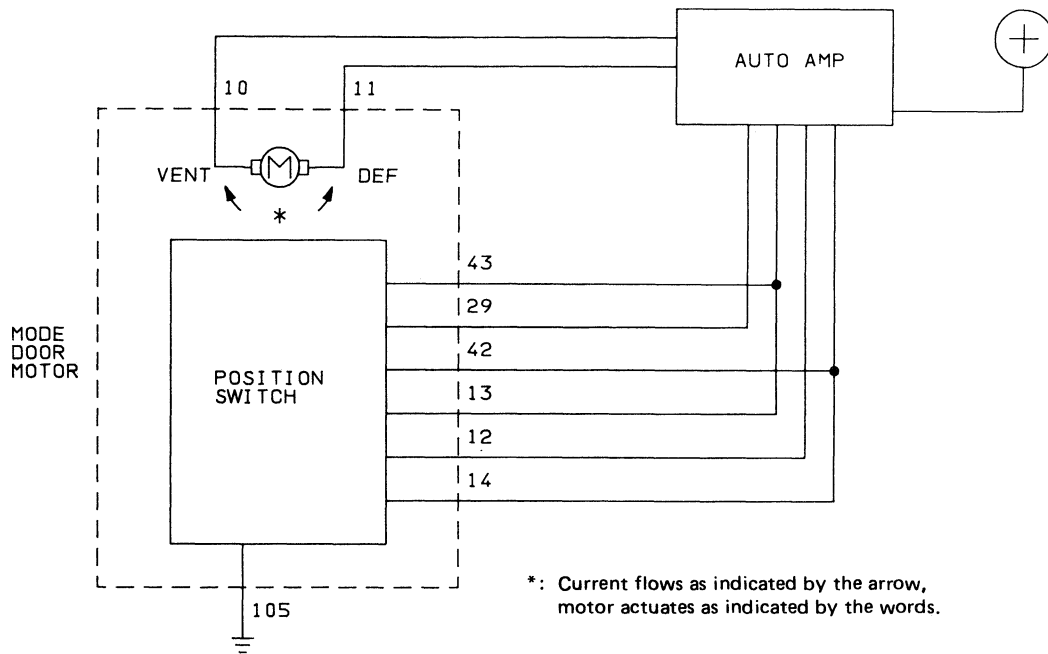


RHA488A



# DESCRIPTION — Auto Air Conditioner

## Control System Output Components (Cont'd) Outlet door control specification

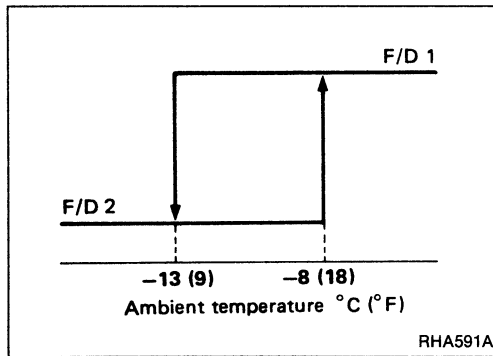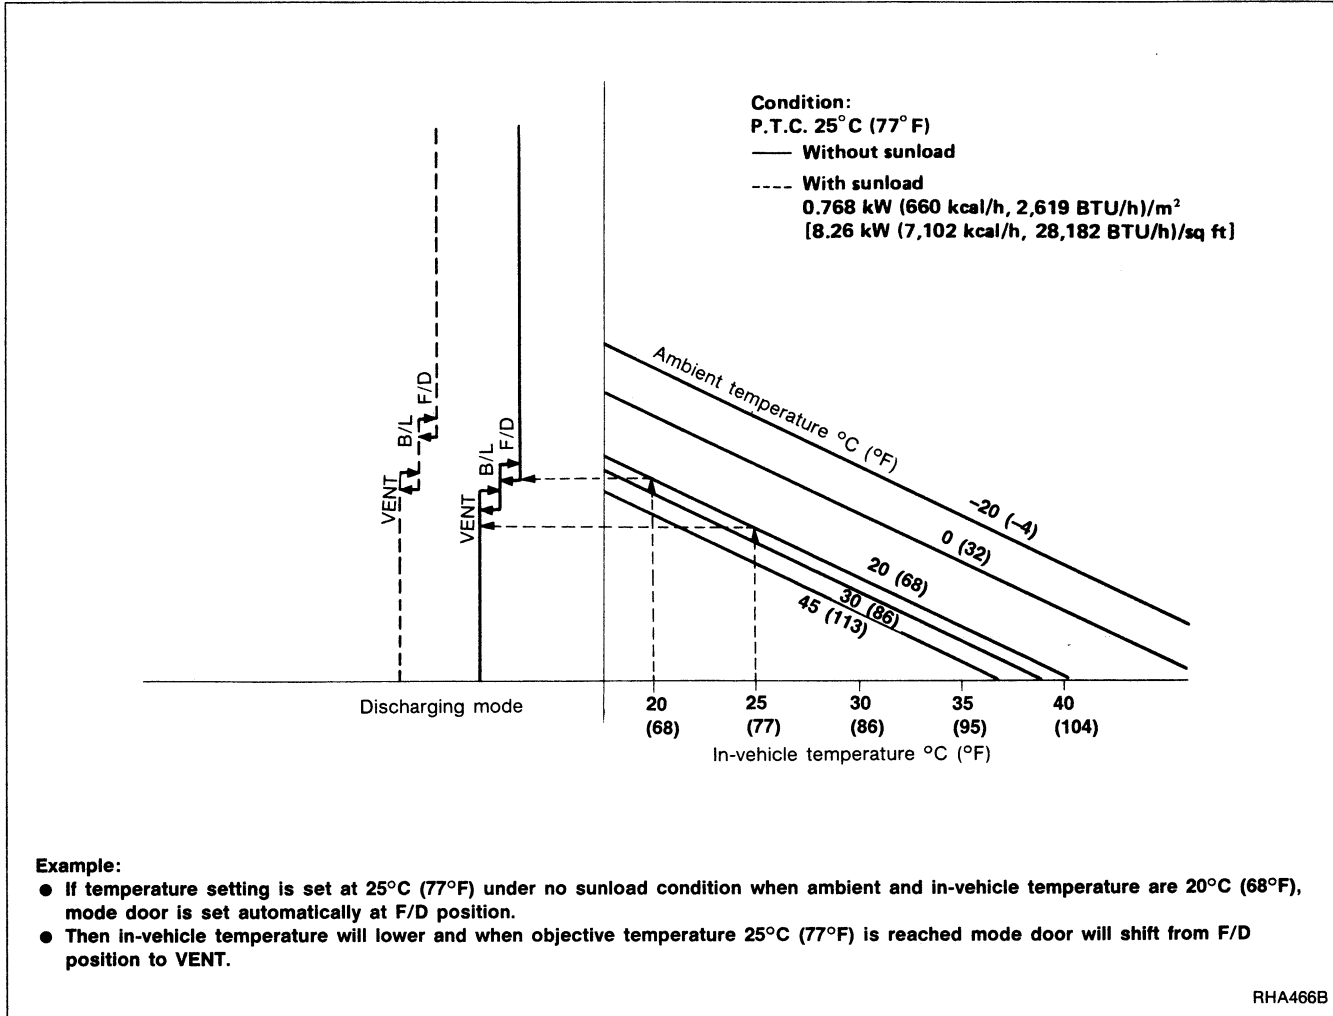

### FOOT/DEF mode specification

- When the ambient temperature decreases to -13°C (9°F), air outlet is changed from F/D1 to F/D2.
- When the ambient temperature increases to -8°C (18°F), air outlet is changed from F/D2 to F/D1.

## Control System Output Components (Cont'd) FAN SPEED CONTROL


### Component parts

Fan speed control system components are:

- 1) Auto amplifier
- 2) Fan control amplifier
- 3) P.B.R.
- 4) In-vehicle sensor
- 5) Ambient sensor
- 6) Sunload sensor
- 7) Intake sensor
- 8) Hi relay
- 9) E.C.C.S. control unit (Engine temperature sensor)

### System operation

For description of system operation, see next page.

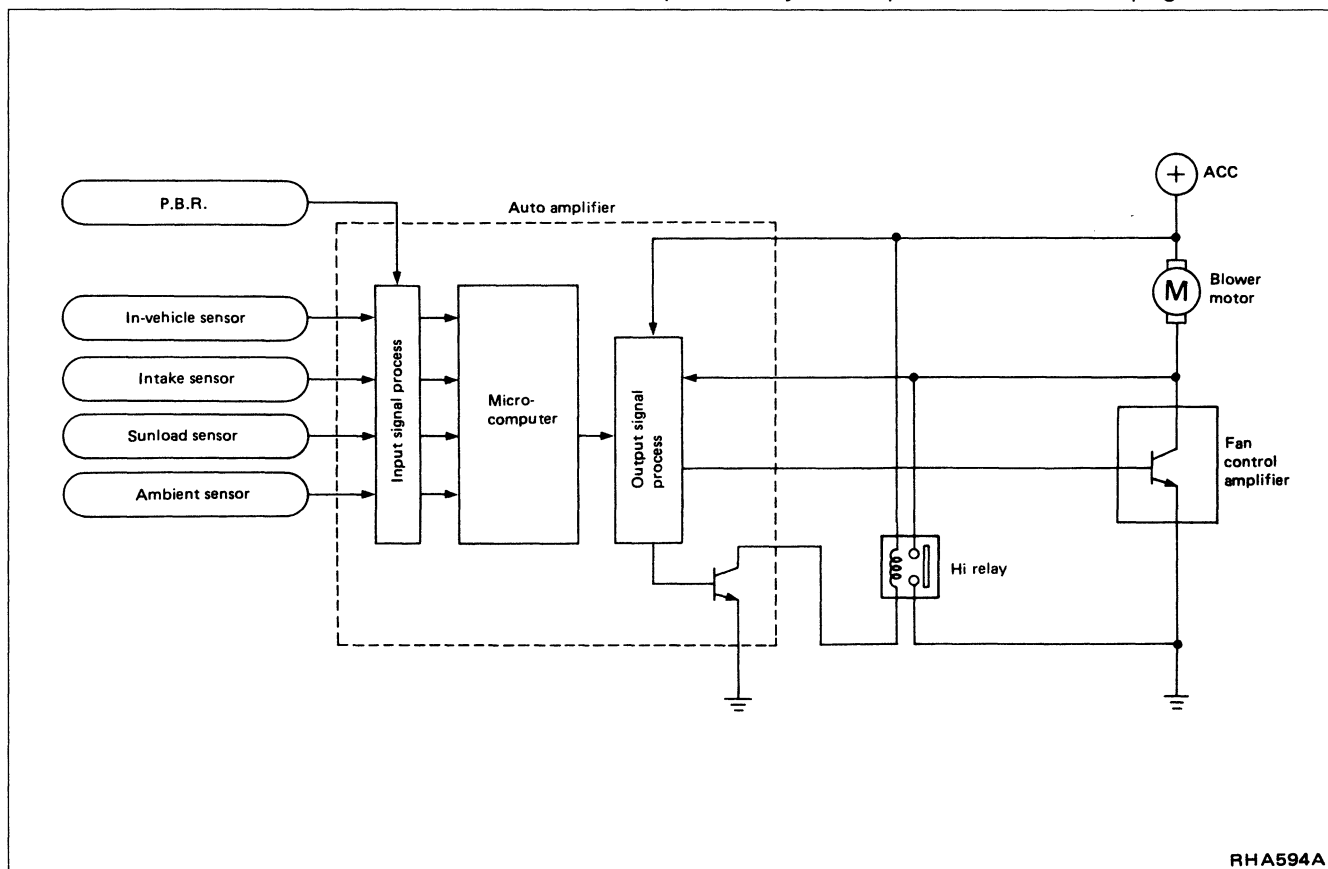

### AUTOMATIC MODE

In the automatic mode, the blower motor speed is calculated by the automatic amplifier based on inputs from the P.B.R., in-vehicle sensor, sunload sensor, and ambient sensor. The blower motor applied voltage ranges from approximately 5 volts (lowest speed) to 12 volts (highest speed).

The control blower speed (in the range of 5 to 10.5V), the automatic amplifier supplies a signal to the fan control amplifier. Based on this signal, the fan control amplifier controls the current flow from the blower motor to ground. If the computed blower voltage (from automatic amplifier) is above 10.5 volts, the high blower relay is activated. The high blower relay provides a direct path to ground (bypassing the fan control amplifier), and the blower motor operates at high speed.

### Control System Output Components (Cont'd)

#### STARTING FAN SPEED CONTROL

##### Start up from “COLD SOAK” condition (Automatic mode)

In a cold start up condition where the engine temperature is below 50°C (122°F) and the ambient temperature is below 15°C (59°F), the blower will not operate for a short period of time (up to 150 seconds). The exact start delay time varies depending on the ambient and engine temperature.

In the most extreme case (very low ambient) the blower starting delay will be 150 seconds. After this delay, the blower will operate at low speed until the engine temperature rises above 50°C (122°F), at which time the blower speed will increase to the objective speed.

##### Start up from normal or “HOT SOAK” condition (Automatic mode)

The blower will begin operation momentarily after the AUTO button is pushed. The blower speed will gradually rise to the objective speed over a time period of 5 seconds or less (actual time depends on the objective blower speed).

#### BLOWER SPEED COMPENSATION

##### Sunload

When the in-vehicle temperature and the set temperature are very close, the blower will be operating at low speed. The low speed will vary depending on the sunload. During conditions of high sunload, the blower low speed is “normal” low speed (approx. 6V). During low or no sunload conditions, the low speed will drop to “low” low speed (approx. 5V).



##### Ambient

When the ambient temperature is in the “moderate” range [10 to 15°C (50 to 59°F)], the computed blower voltage will be compensated (reduced) by up to 3.5V (depending on the blower speed). In the “extreme” ambient ranges [below 0°C (32°F) and above 20°C (68°F)] the computed objective blower voltage is not compensated at all. In the ambient temperature ranges between “moderate” and “extreme” [0 to 10°C (32 to 50°F) and 15 to 20°C (59 to 68°F)], the amount of compensation (for a given blower speed) varies depending on the ambient temperature.

# DESCRIPTION — Auto Air Conditioner

## Control System Output Components (Cont'd)

### Fan speed control specification

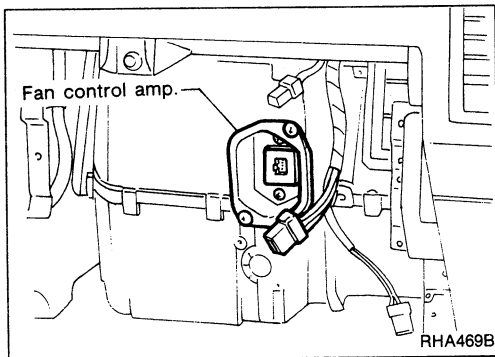
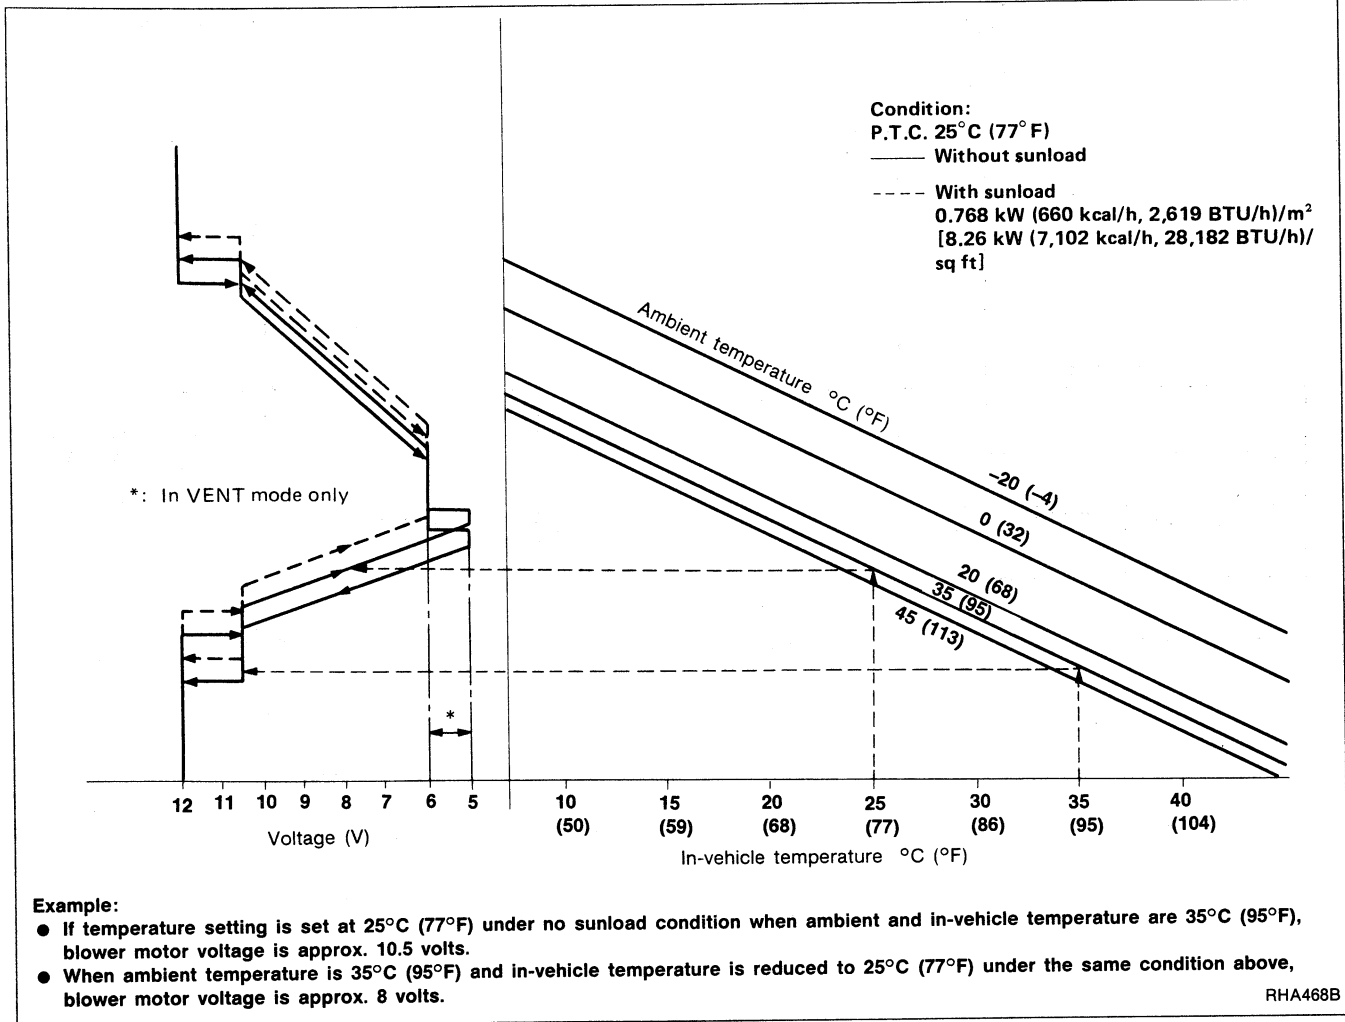


### FAN CONTROL AMPLIFIER

The fan control amplifier is located on the cooling unit. It amplifies a 12-step base current flowing from the auto amplifier to change blower speed.

# DESCRIPTION — Auto Air Conditioner

## Control System Output Components (Cont'd)

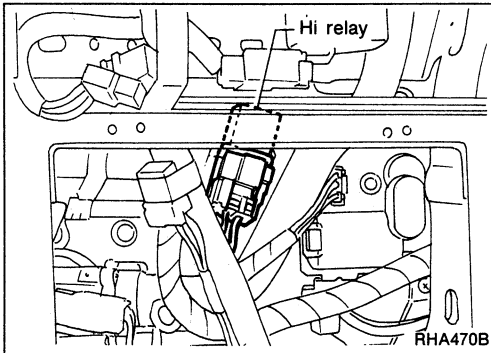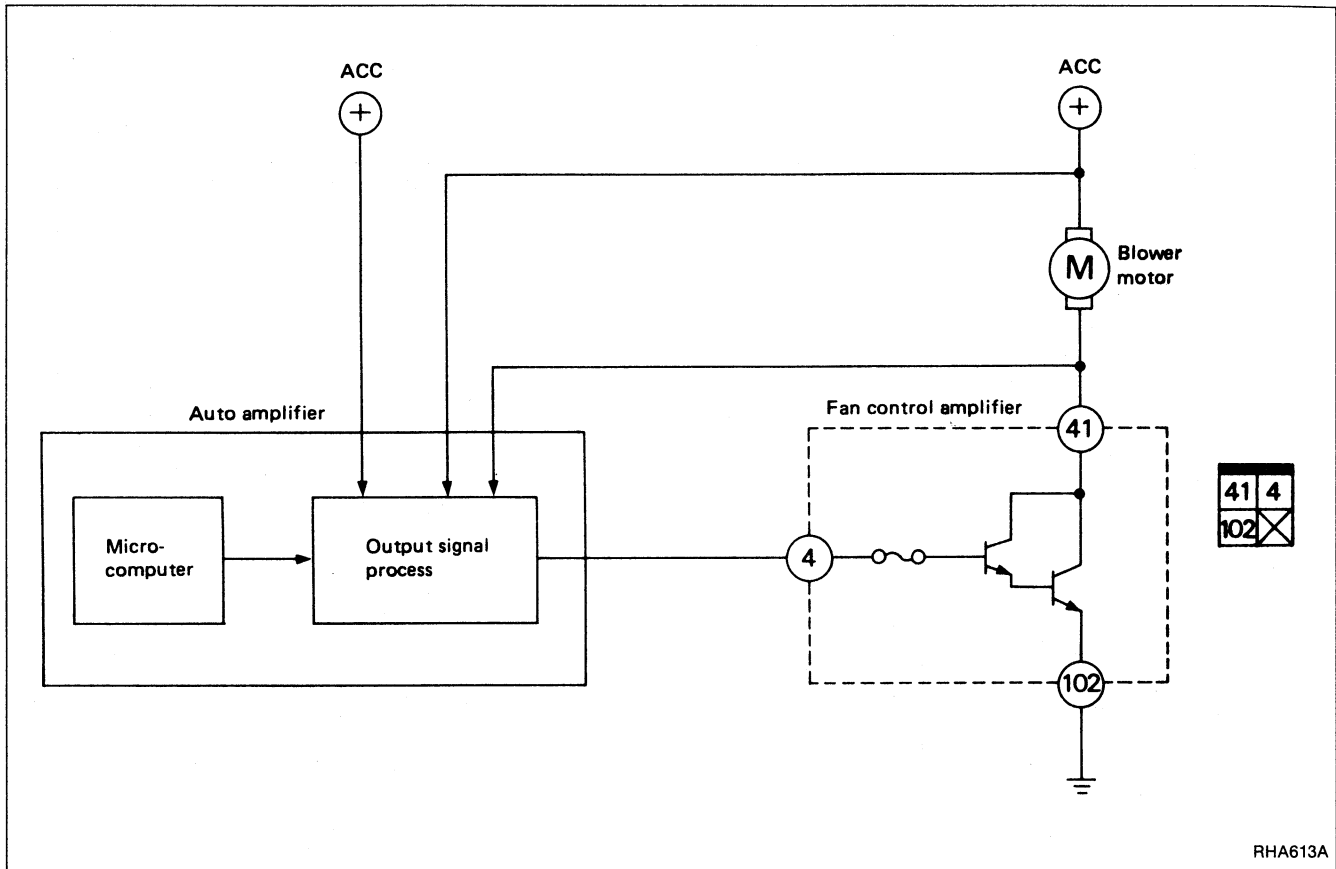

### HI RELAY


The Hi relay is located on the heater unit. It receives a signal from the auto amplifier to operate the blower motor at high speed.

## DESCRIPTION — Auto Air Conditioner

### Control System Output Components (Cont'd)

#### MAGNET CLUTCH CONTROL

Auto amplifier controls compressor operation by ambient temperature and signal from E.C.C.S. control unit.

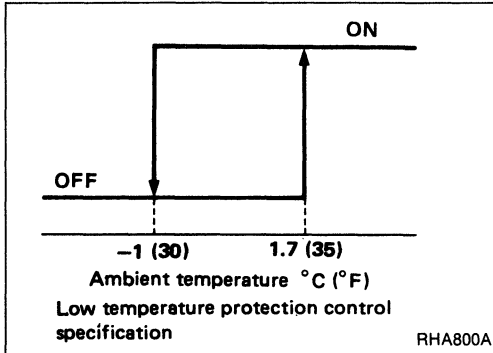

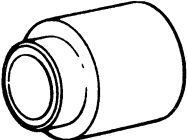
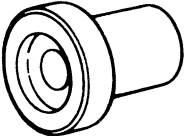



#### Low temperature protection control

Auto amplifier will turn the compressor "ON" or "OFF" as determined by a signal detected by ambient temperature sensor.


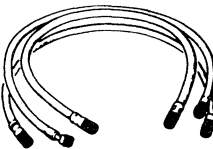
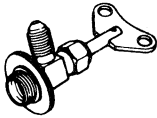
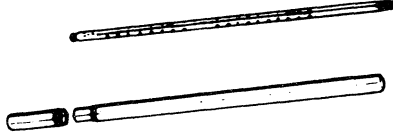
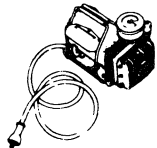

# PREPARATION

## SPECIAL SERVICE TOOLS

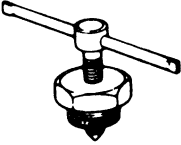Tool number (Kent-Moore No.) Tool name	Description
KV99232022 (J26571-A) Clutch disc puller	 Removing clutch disc
KV99231010 (J37877) Clutch disc wrench	 Removing shaft nut and clutch disc
KV99233040 (J26720-A) Puller pilot	 Removing pulley
KV99234160 (J37879) Pulley installer	 Installing pulley
KV99235160 (J37882) Nut wrench	 Removing lock nut

# PREPARATION

## SERVICE TOOLS

Tool name	Description
Manifold gauge	 Discharging and charging refrigerant
Charging hose	 Discharging, evacuating and checking refrigerant
Charge valve	 Discharging and charging refrigerant
Thermometer	 Checking temperature
Vacuum pump	 Evacuating refrigerant
Electric leak detector	<b>Nominal sensitivity: 15 - 25 g (0.53 - 0.88 oz)/year</b>  Checking refrigerant leaks



# SERVICE DATA AND SPECIFICATIONS (S.D.S.)

## General Specifications

### COMPRESSOR

Model	DIESEL-KIKI make DKS-16H
Type	Swash plate
Displacement cm <sup>3</sup> (cu in)/Rev.	167 (10.19)
Cylinder bore x stroke mm (in)	37.0 x 25.8 (1.457 x 1.016)
Direction of rotation	Clockwise (viewed from drive end)
Drive belt	Poly V

### LUBRICATION OIL

Model	DIESEL-KIKI make DKS-16H
Type	SUNISO 5GS
Capacity mℓ(US fl oz, Imp fl oz)	
Total in system	200 (6.8, 7.0)
Amount of oil which can be drained	130 (4.4, 4.6)
Compressor (Service parts) charging amount	200 (6.8, 7.0)

### REFRIGERANT

Type	R-12
Capacity kg (lb)	0.9 - 1.0 (2.0 - 2.2)

## Inspection and Adjustment

### ENGINE IDLING SPEED (When A/C is ON)

- Refer to EF & EC section.

### BELT TENSION

- Refer to Checking Drive Belts (MA section).

### COMPRESSOR

Model	DKS-16H
Clutch disc-pulley clearance mm (in)	0.3 - 0.6 (0.012 - 0.024)



# ELECTRICAL SYSTEM

## SECTION **EL**

When you read wiring diagrams:

- Read GI section, "HOW TO READ WIRING DIAGRAMS".

## CONTENTS

PRECAUTIONS .....	EL- 2
HARNESS CONNECTOR .....	EL- 3
STANDARDIZED RELAY .....	EL- 4
POWER SUPPLY ROUTING .....	EL- 6
BATTERY .....	EL- 9
STARTING SYSTEM .....	EL- 17
STARTING SYSTEM — Starter — .....	EL- 19
CHARGING SYSTEM .....	EL- 27
CHARGING SYSTEM — Alternator — .....	EL- 29
COMBINATION SWITCH .....	EL- 35
HEADLAMP .....	EL- 37
EXTERIOR LAMP .....	EL- 40
INTERIOR LAMP .....	EL- 44
METER AND GAUGES .....	EL- 46
WARNING LAMPS AND CHIME .....	EL- 51
TIME CONTROL SYSTEM .....	EL- 55
WIPER AND WASHER .....	EL- 67
HORN, CIGARETTE LIGHTER, CLOCK .....	EL- 70
REAR WINDOW DEFOGGER .....	EL- 71
AUDIO AND POWER ANTENNA .....	EL- 74
AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.) .....	EL- 80
THEFT WARNING SYSTEM .....	EL- 93
LOCATION OF ELECTRICAL UNITS .....	EL-117
HARNESS LAYOUT .....	EL-121
SPECIAL SERVICE TOOL .....	EL-133
SUPER MULTIPLE JUNCTION (S.M.J.) .....	EL-135

### WIRING DIAGRAM REFERENCE CHART

E.C.C.S. (Ignition system) .....	EF & EC SECTION
AUTOMATIC TRANSMISSION CONTROL SYSTEM, SHIFT LOCK SYSTEM.....	AT SECTION
SONAR SUSPENSION SYSTEM .....	FA SECTION
ANTI-LOCK BRAKING SYSTEM .....	BR SECTION
TRUNK LID AND FUEL FILLER LID OPENER, POWER WINDOW AND	
POWER DOOR LOCK, SRS "AIR BAG", POWER SEAT, SUN ROOF, DOOR MIRROR .....	BF SECTION
HEATER AND AIR CONDITIONER .....	HA SECTION

**EL**

## PRECAUTIONS

---

### **Supplemental Restraint System “AIR BAG”**

The Infiniti M30 has a Supplemental Restraint System “Air Bag”, to help reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag (located in the center of the steering wheel), five sensors, a control unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in section BF of this Service Manual.

**WARNING:**

- a. **To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized INFINITI dealer.**
- b. **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.**
- c. **All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation and related components are located in the steering column, center console, dash, upper radiator core support and front fenders. Do not use electrical test equipment on these circuits.**

# HARNESS CONNECTOR

## Description


### HARNESS CONNECTOR

- All harness connectors have been modified to prevent accidental loosening or disconnection.
- The connector can be disconnected by pushing or lifting the locking section.

#### CAUTION:

Do not pull the harness when disconnecting the connector.

[Example]

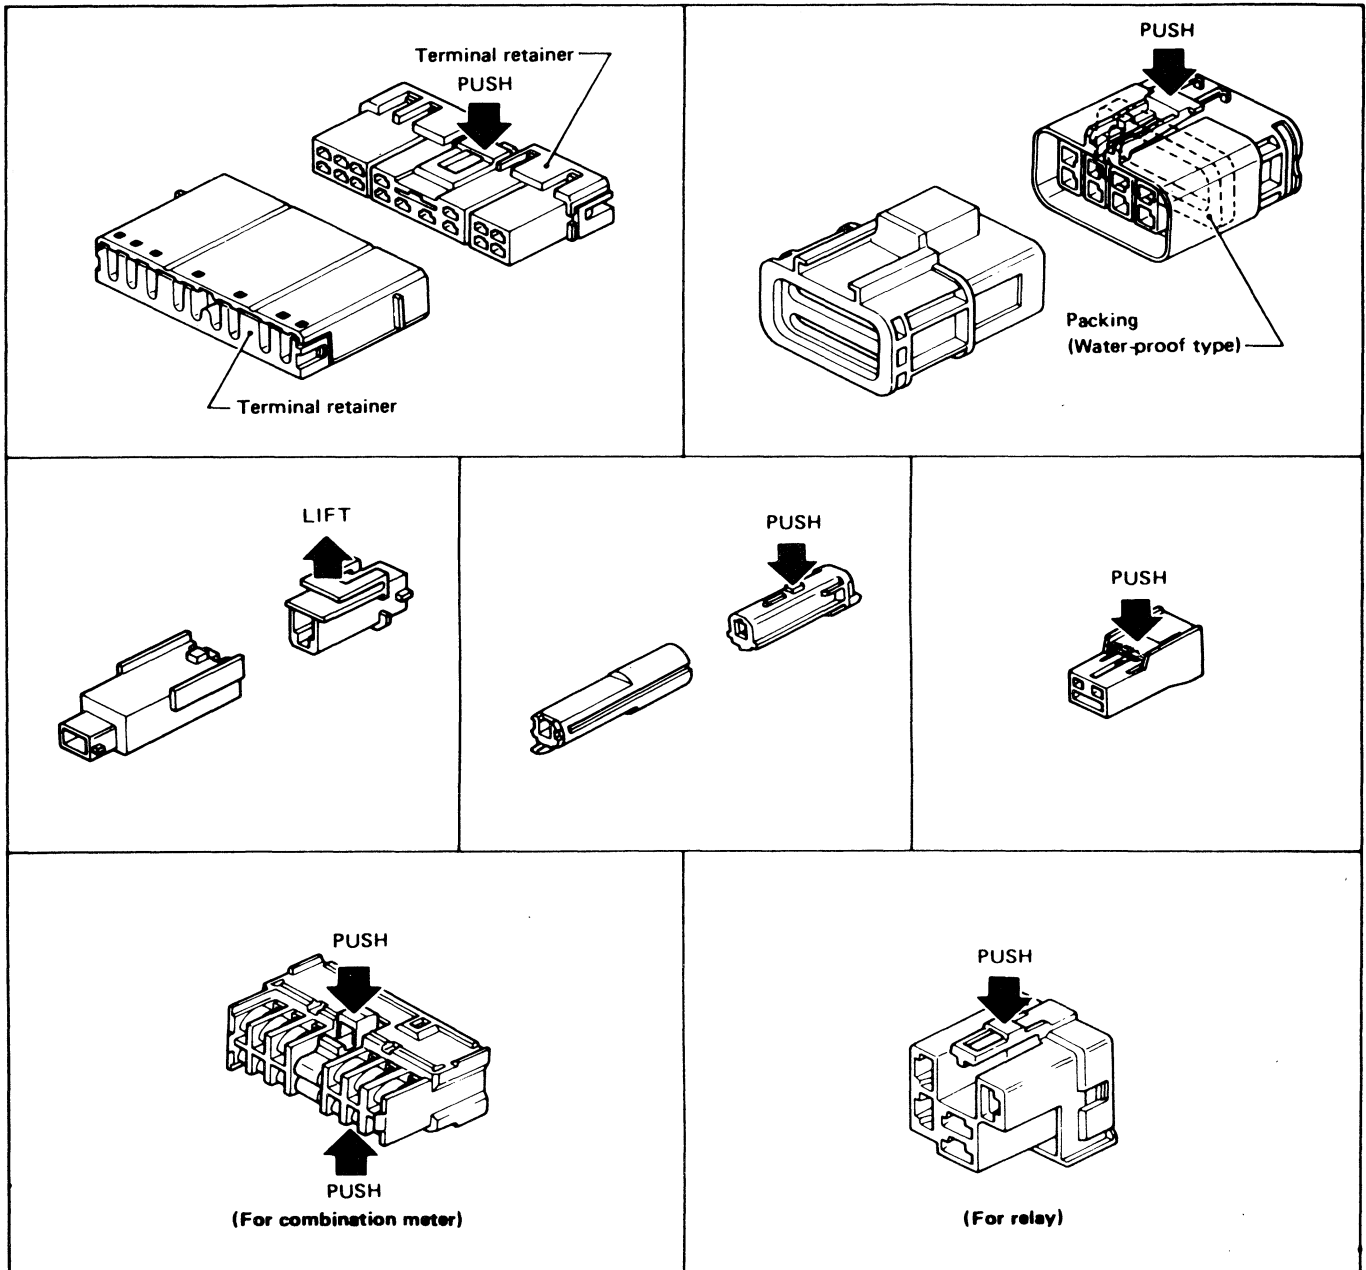


SEL769D

# STANDARDIZED RELAY

## Description

### NORMAL OPEN, NORMAL CLOSED AND MIXED TYPE RELAYS


Relays can mainly be divided into three types: normal open, normal closed and mixed type relays.

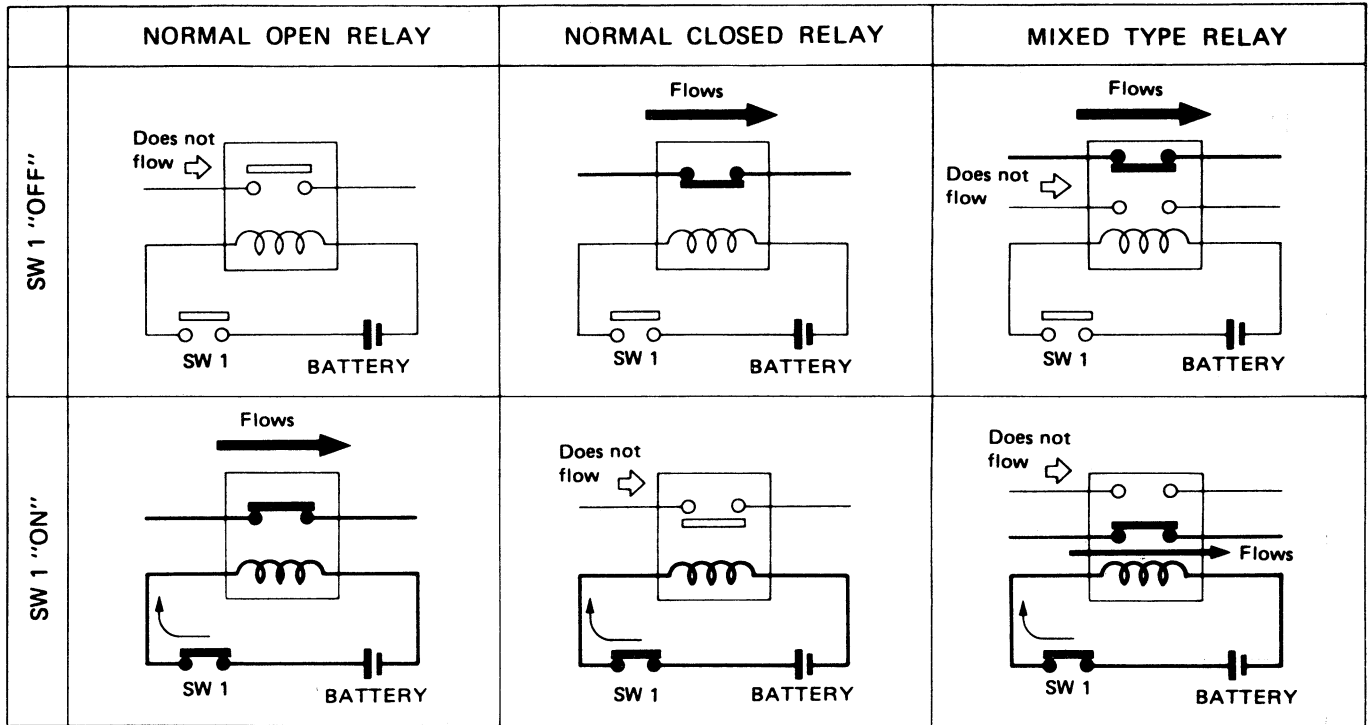

SEL881H













### TYPE OF STANDARDIZED RELAYS

1M ..... 1 Make      2M ..... 2 Make  
 1T ..... 1 Transfer    1M·1B ..... 1 Make 1 Break

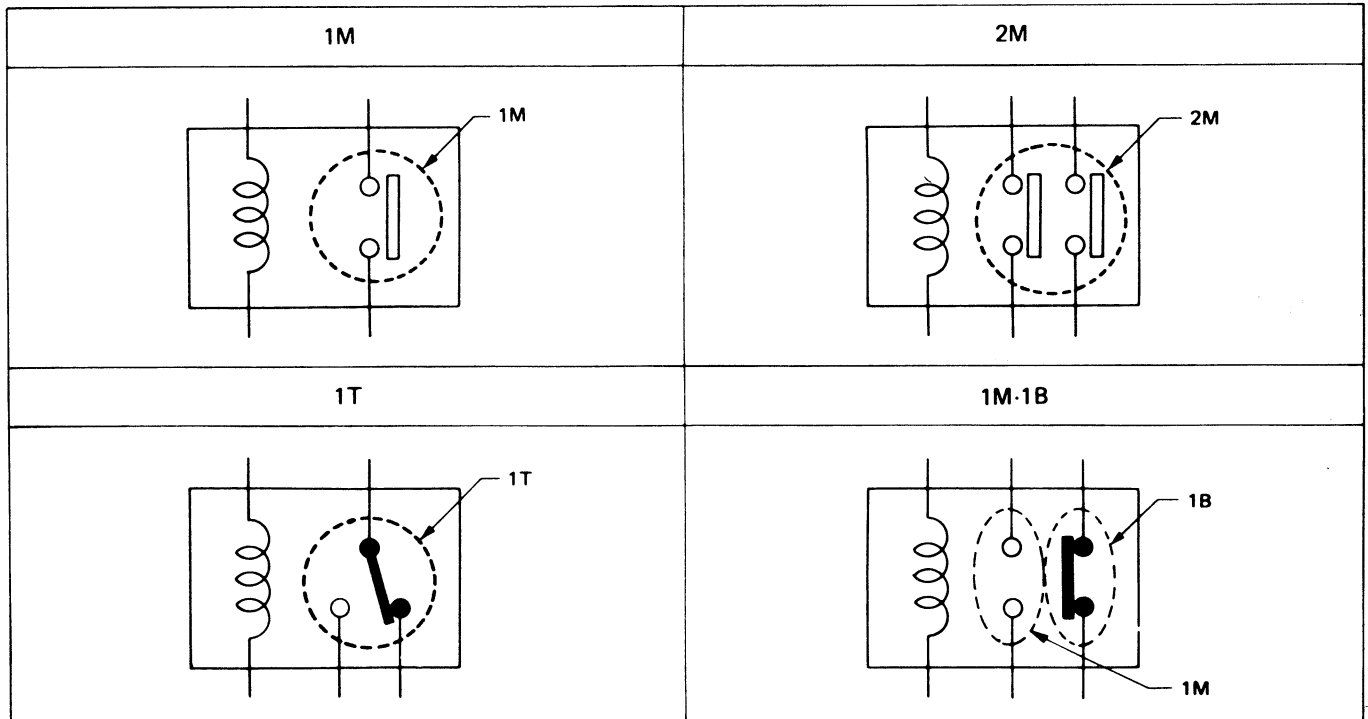

SEL882H


# STANDARDIZED RELAY

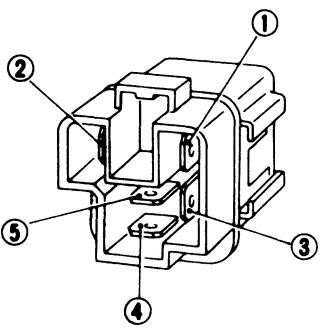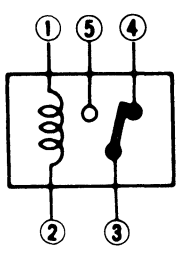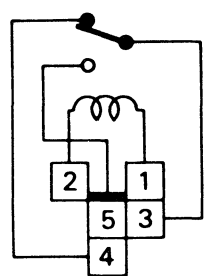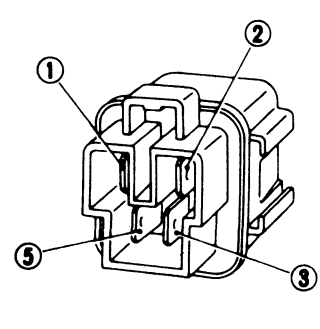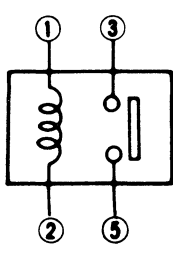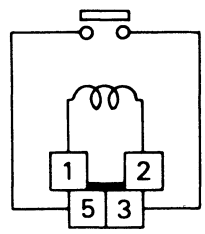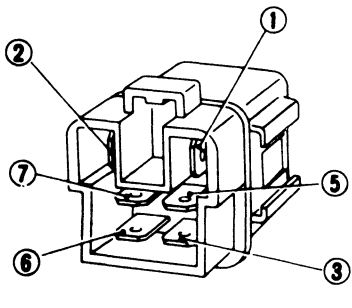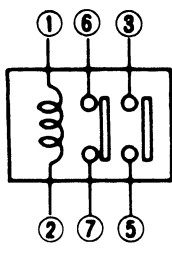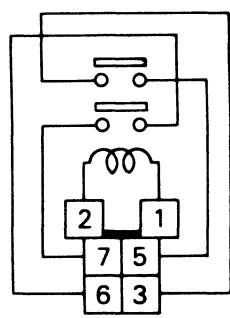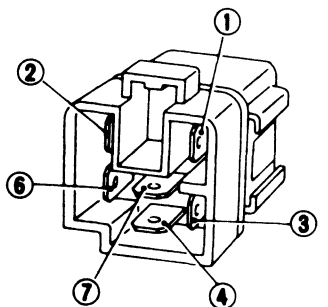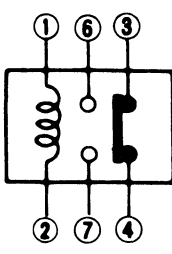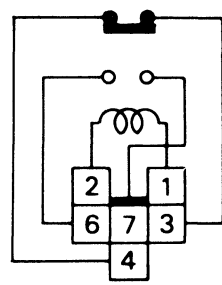Type	Outer view	Circuit	Connector symbol and connection	Case color
1T				BLACK
1M				BLUE or GREEN
2M				BROWN
1M-1B				GRAY

SEL883H

# POWER SUPPLY ROUTING


## Wiring Diagram

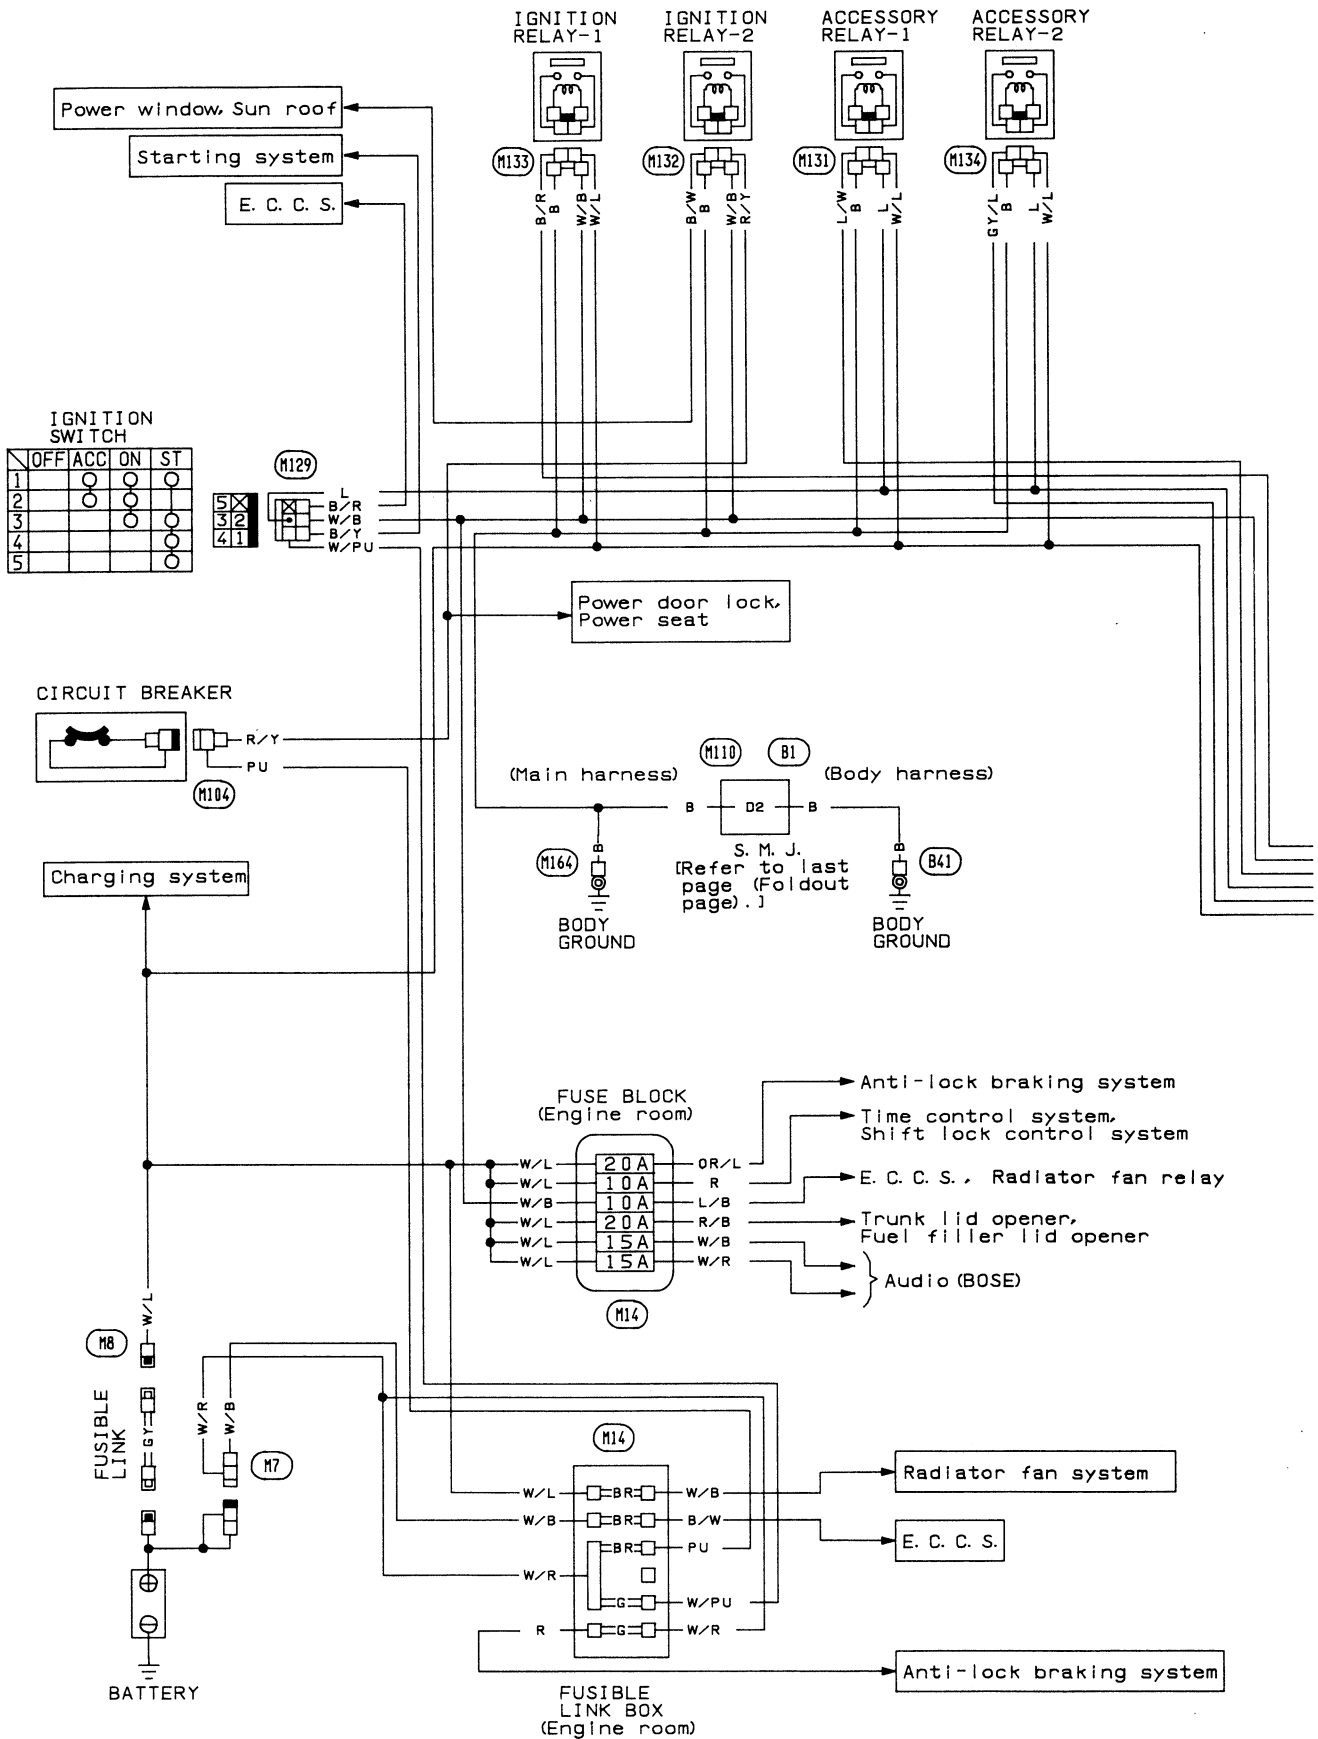




# POWER SUPPLY ROUTING

## Wiring Diagram (Cont'd)

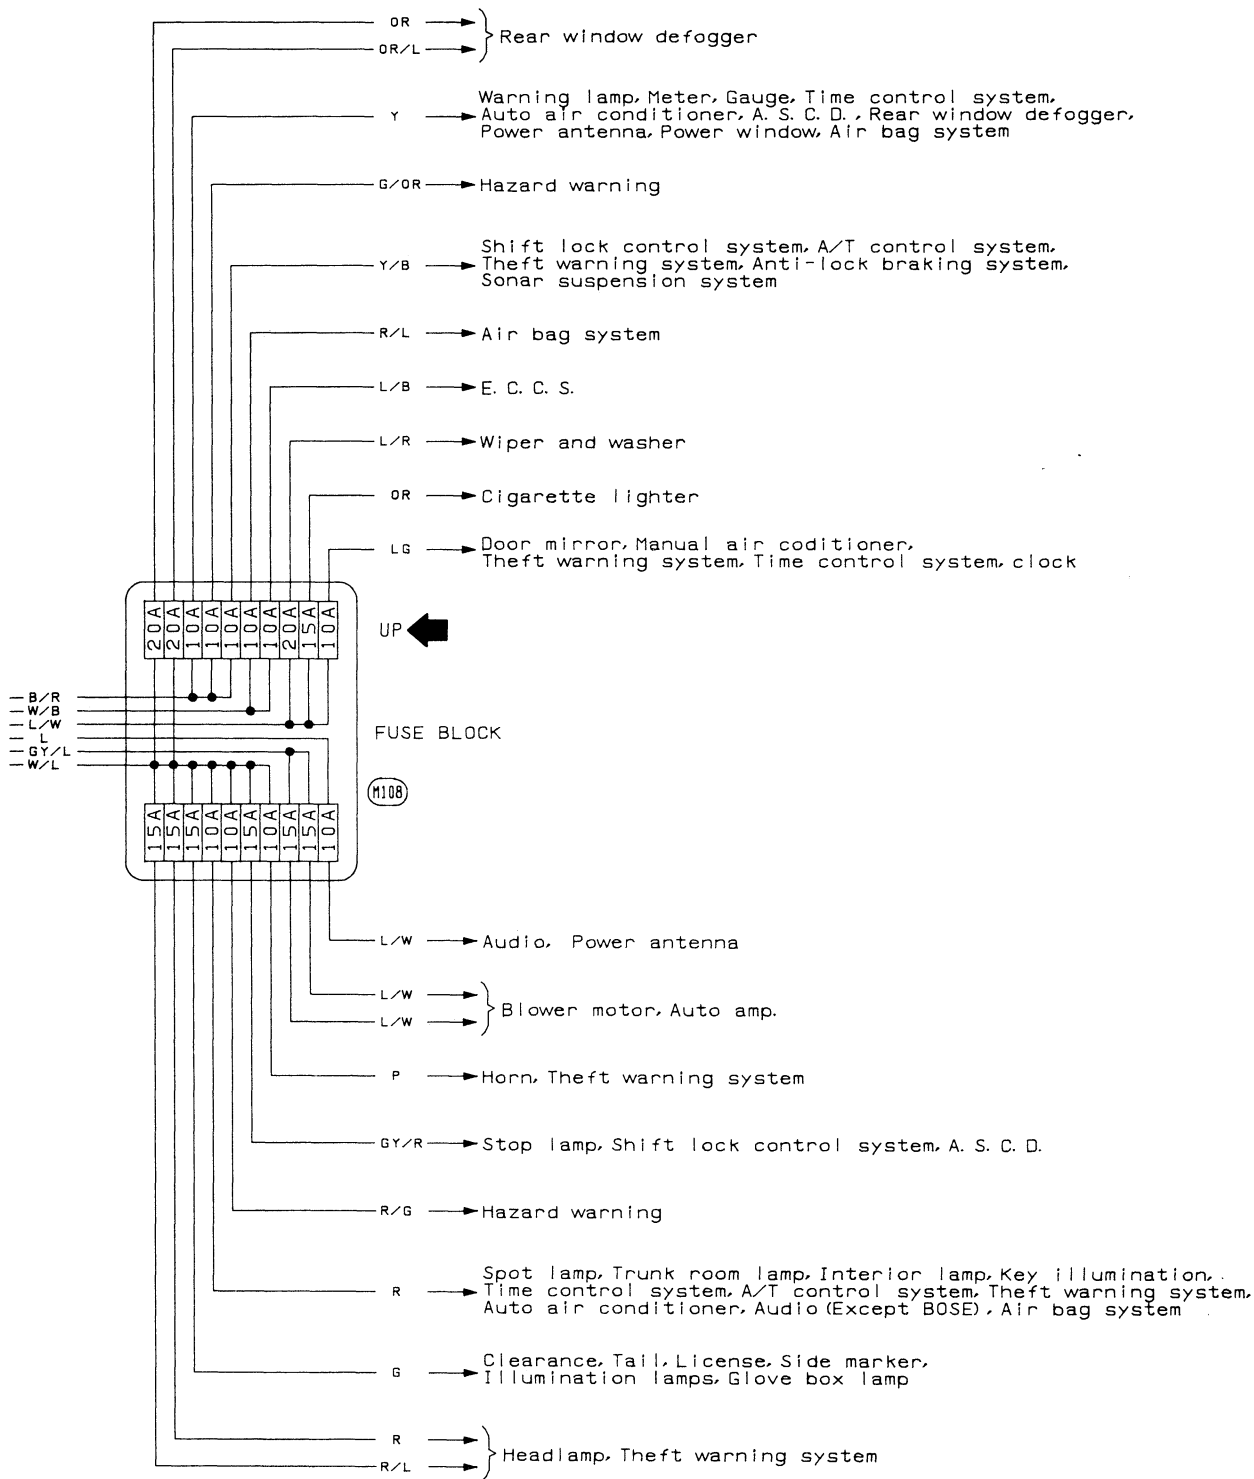


# POWER SUPPLY ROUTING

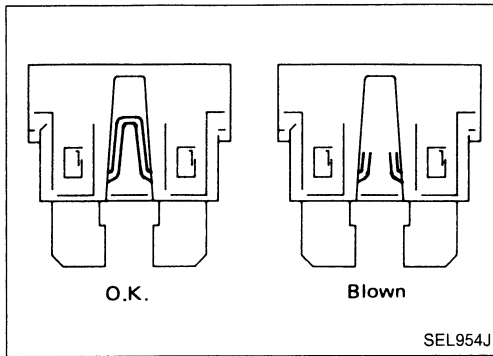

## Fuse

- If fuse is blown, be sure to eliminate cause of problem before installing new fuse.
- Use fuse of specified rating. Never use fuse of more than specified rating.
- Do not install fuse in oblique direction; always insert it into fuse holder properly.
- Remove fuse for clock if vehicle is not used for a long period of time.

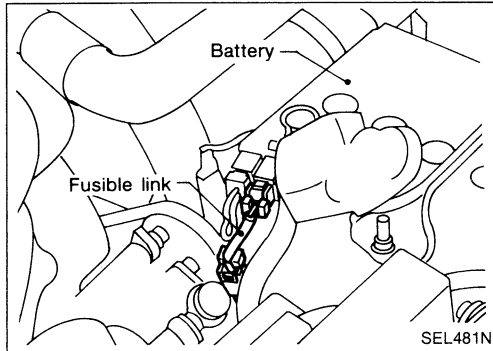


## Fusible Link

A melted fusible link can be detected either by visual inspection or by feeling with finger tip. If its condition is questionable, use circuit tester or test lamp.

### CAUTION:

- If fusible link should melt, it is possible that a critical circuit (power supply or large current carrying circuit) is shorted. In such a case, carefully check these circuits and eliminate cause of problem.
- Never wrap periphery of fusible link with vinyl tape. Extreme care should be taken with this link to ensure that it does not come into contact with any other wiring harness, or vinyl or rubber parts.

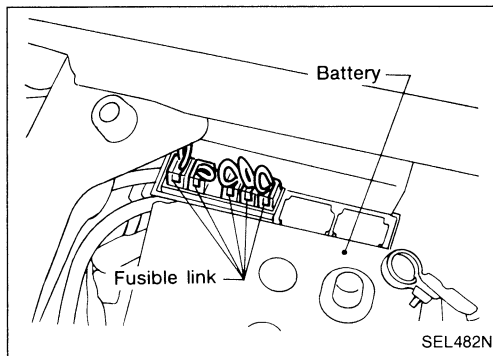

## FUSIBLE LINK (Wire type) VARIATION




Color	Maximum amperage (A)
Brown	15
Green	20
Red	30
Black	35
Gray	40

\*Temperature condition: Less than 80°C (176°F)

# BATTERY

## CAUTION:

- If it becomes necessary to start the engine with a booster battery and jumper cables, use a 12-volt booster battery.
- After connecting battery cables, ensure that they are tightly clamped to battery terminals for good contact.
- Never add distilled water through the hole used to check specific gravity.

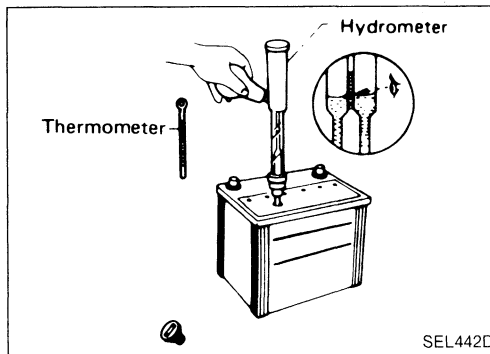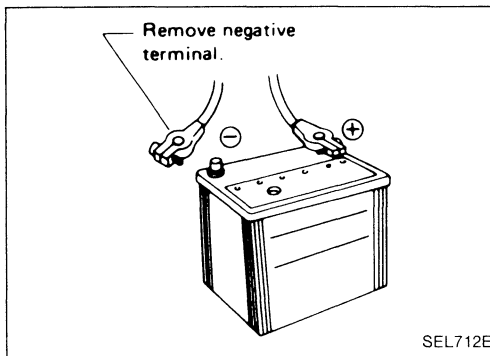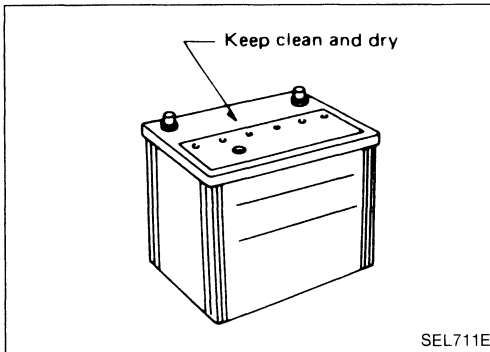

## How to Handle Battery

### METHODS OF PREVENTING OVER-DISCHARGE

The following precautions must be taken to prevent over-discharging a battery.

- The battery surface (particularly its top) should always be kept clean and dry. If the top surface of a battery is wet with electrolyte or water, leakage current will cause the battery to discharge. Always keep the battery clean and dry.
- When the vehicle is not going to be used over a long period of time, disconnect the negative battery terminal. (If the vehicle has an extended storage switch, turn it off.)
- Check the charge condition of the battery. Periodically check the specific gravity of the electrolyte. Keep a close check on charge condition to prevent over-discharge.

### CHECKING ELECTROLYTE LEVEL

#### WARNING:



Do not allow battery fluid to come in contact with skin, eyes, fabrics, or painted surfaces. After touching a battery, do not touch or rub your eyes until you have thoroughly washed your hands. If the acid contacts the eyes, skin or clothing, immediately flush with water for 15 minutes and seek medical attention.

Normally the battery does not require additional water. However, when the battery is used under severe conditions, adding distilled water may be necessary during the battery life.

# BATTERY

## How to Handle Battery (Cont'd)


- Remove the cell plug using a suitable tool.
- Add distilled water up to the MAX level.

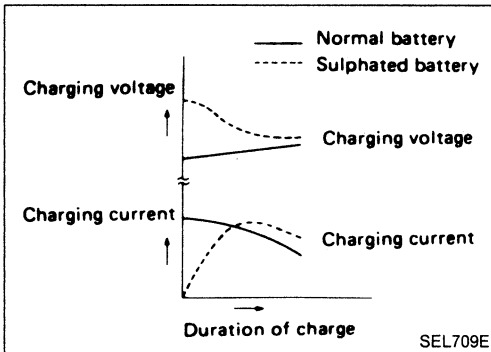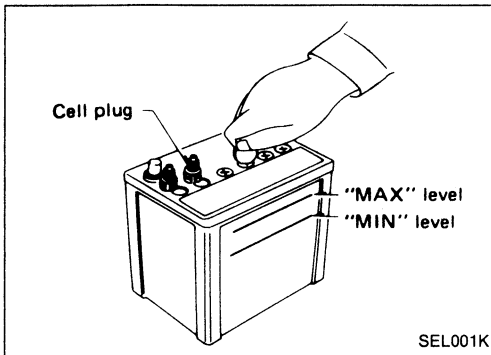

## SULPHATION


When a battery has been left unattended for a long period of time and has a specific gravity of less than 1.100, it will be completely discharged, resulting in sulphation on the cell plates.

Compared with a battery discharged under normal conditions, the current flow in a "sulphated" battery is not as smooth although its voltage is high during the initial stage of charging, as shown in the figure at the left.

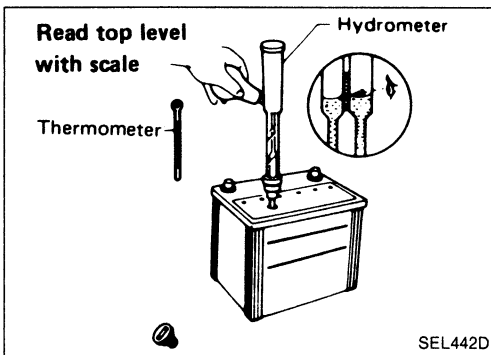

## SPECIFIC GRAVITY CHECK

1. Read hydrometer and thermometer indications at eye level.

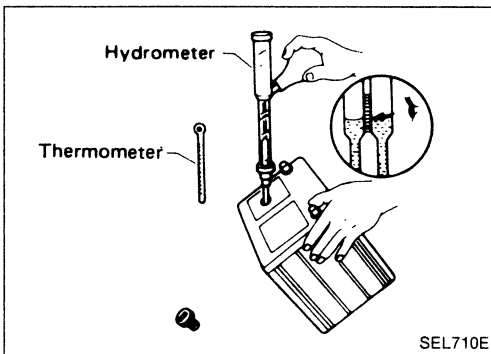

- When electrolyte level is too low, tilt battery case to raise it for easy measurement.


2. Convert into specific gravity at 20°C (68°F).

Example:

- When electrolyte temperature is 35°C (95°F) and specific gravity of electrolyte is 1.230, converted specific gravity at 20°C (68°F) is 1.240.
- When electrolyte temperature is 0°C (32°F) and specific gravity of electrolyte is 1.210, converted specific gravity at 20°C (68°F) is 1.196.

# BATTERY

## How to Handle Battery (Cont'd)

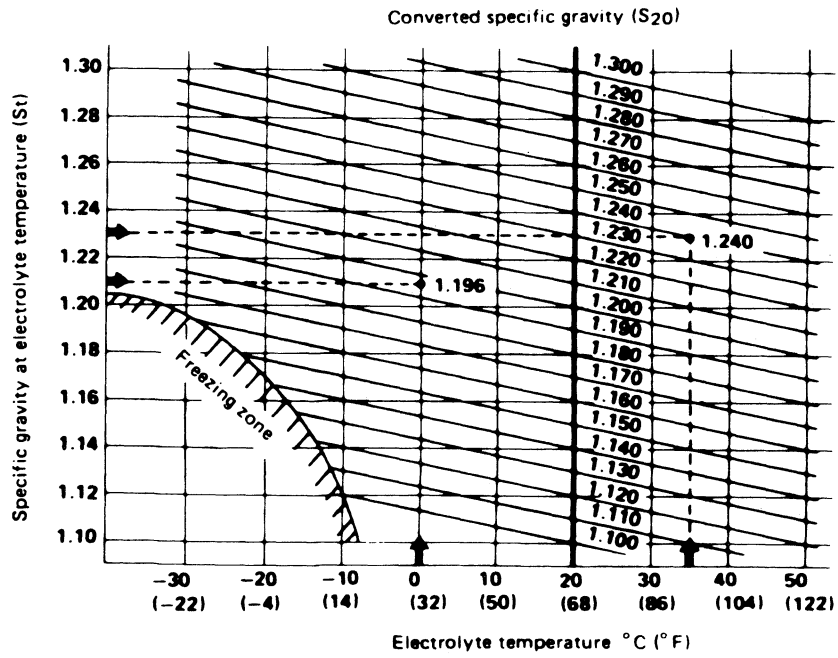


SEL042D

# BATTERY

## Battery Test and Charging Chart

Chart I

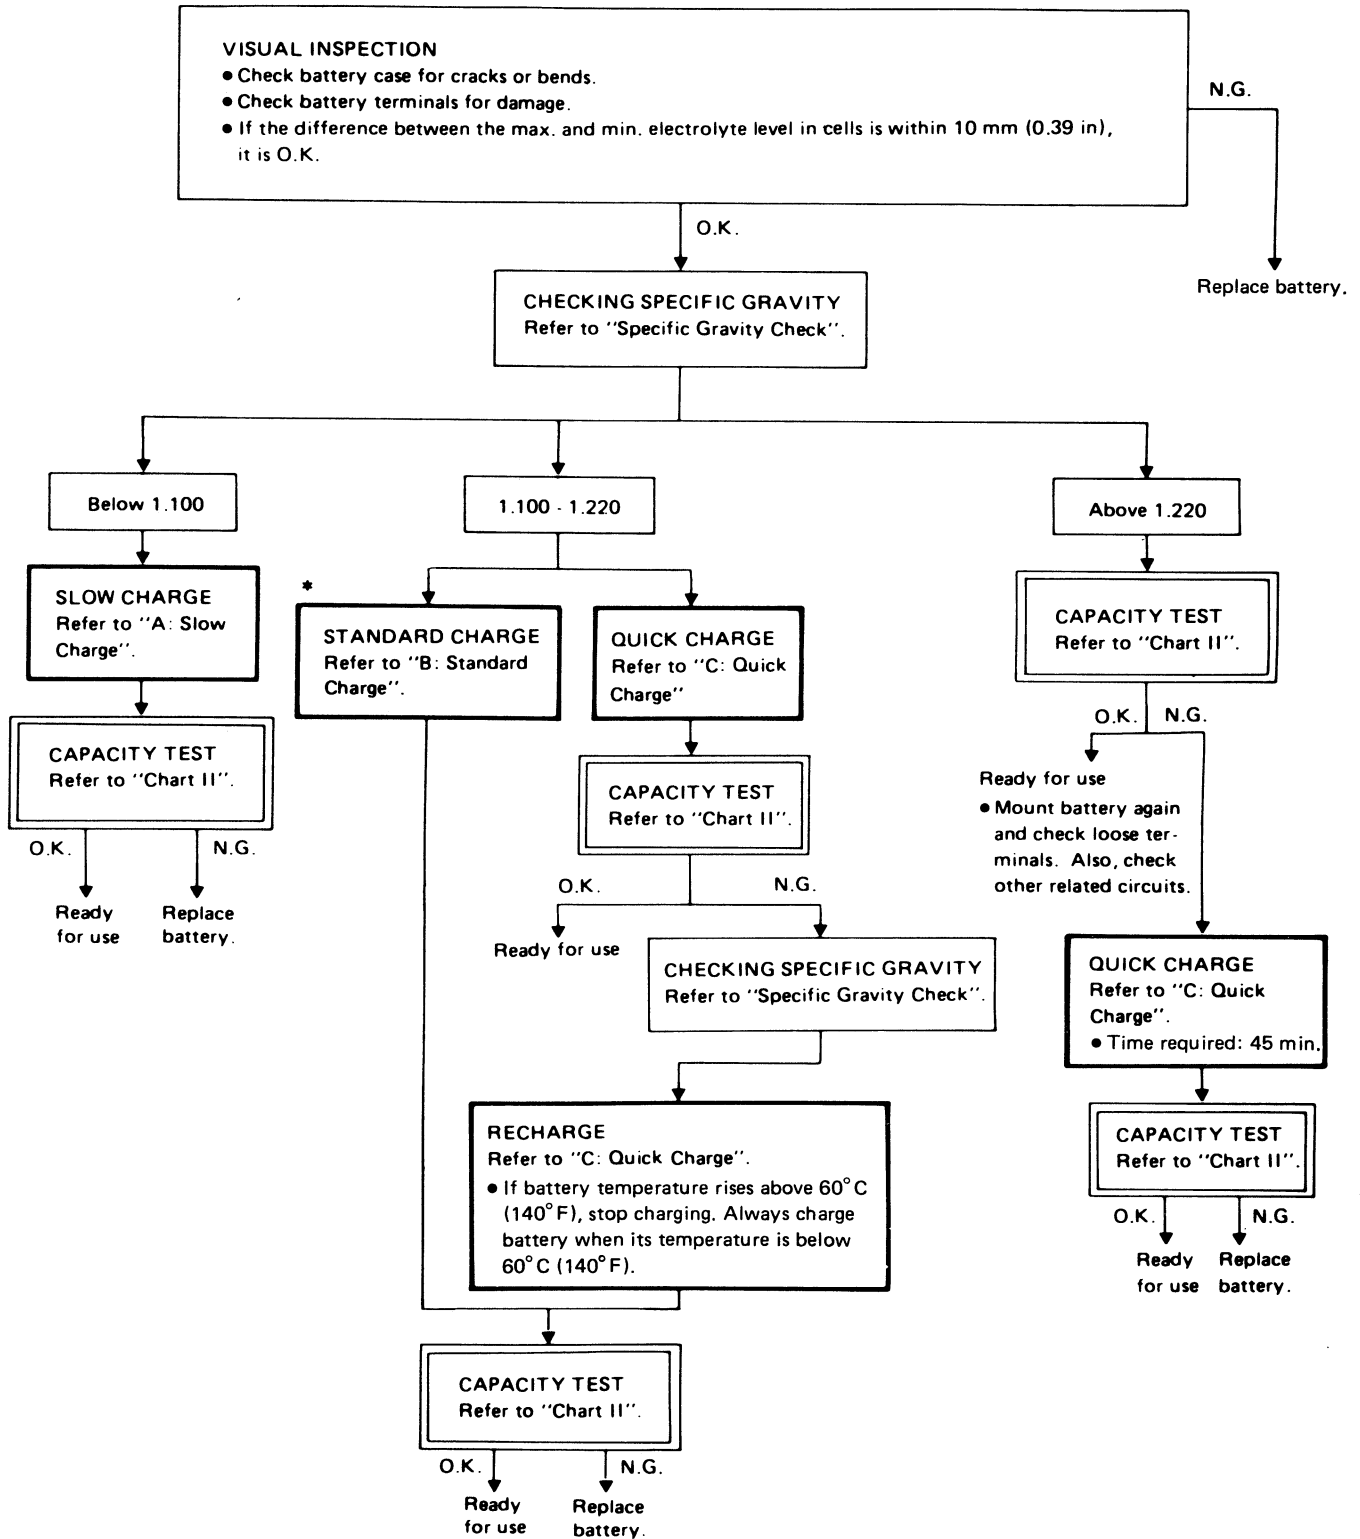


\* "STANDARD CHARGE" is recommended in case that the vehicle is in storage after charging.

# BATTERY

## Battery Test and Charging Chart (Cont'd)


Chart II

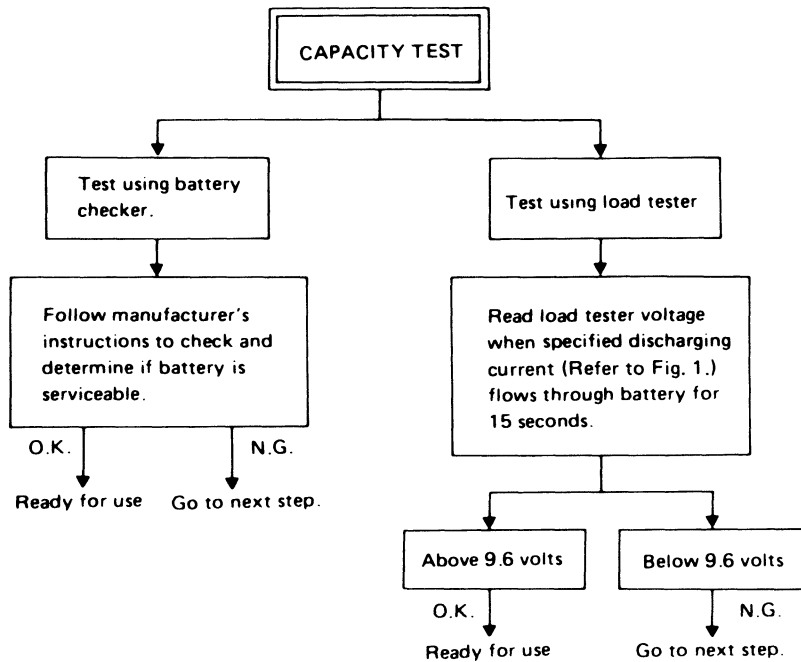

- Check battery type and determine the specified current using the following table.

Fig. 1 DISCHARGING CURRENT (Load tester)

Type	Current (A)
28B19R(L)	90
34B19R(L)	99
46B24R(L)	135
55B24R(L)	135
50D23R(L)	150
55D23R(L)	180
65D26R(L)	195
80D26R(L)	195
75D31R(L)	210
95D31R(L)	240
95E41R(L)	300
130E41R(L)	330

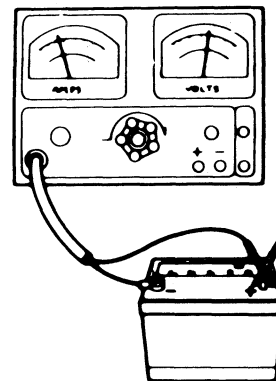

SEL697B

# BATTERY

## Battery Test and Charging Chart (Cont'd)

### A: SLOW CHARGE


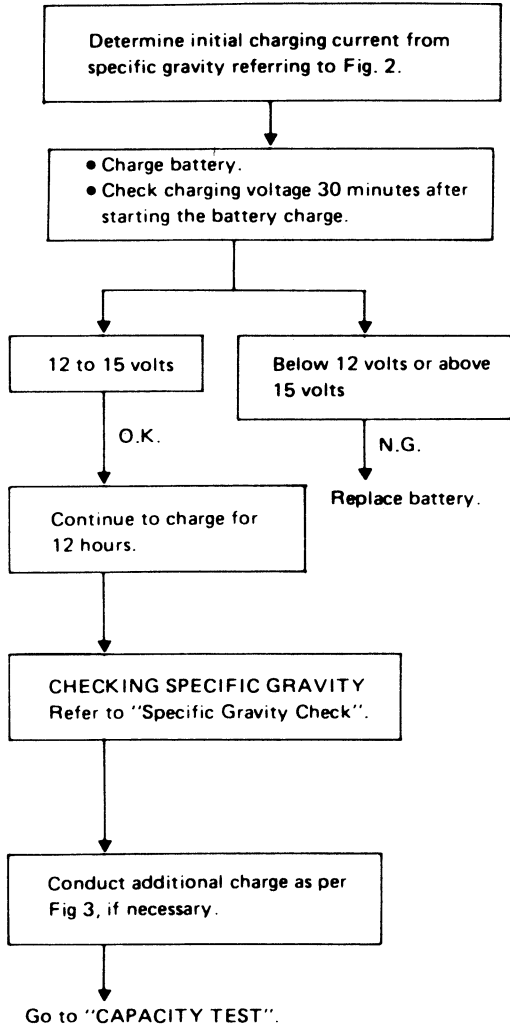


Fig. 2 INITIAL CHARGING CURRENT SETTING (Slow charge)

BATTERY TYPE CON- VERTED SPECIFIC GRAVITY	28B19R(L) 34B19R(L)	46B24R(L) 55B24R(L)	50D23R(L) 55D23R(L)	65D26R(L) 80D26R(L)	75D31R(L)	95D31R(L) 95E41R(L)	130E41R(L)
Below 1.100	4.0 (A)	5.0 (A)	7.0 (A)	8.0 (A)	9.0 (A)	10.0 (A)	14.0 (A)

- Check battery type and determine the specified current using the table shown above.
- After starting charging, adjustment of charging current is not necessary.

Fig. 3 ADDITIONAL CHARGE (Slow charge)

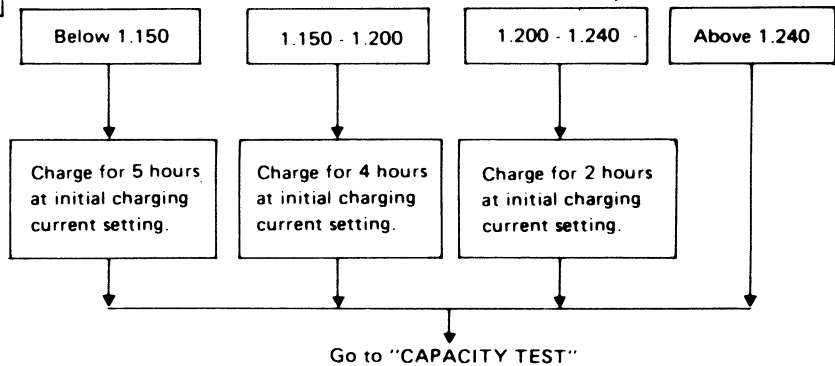

### CAUTION:

- Set charging current to value specified in Fig. 2. If charger is not capable of producing specified current value, set its charging current as close to that value as possible.
- Keep battery away from open flame while it is being charged.
- When connecting charger, connect leads first, then turn on charger. Do not turn on charger first, as this may cause a spark.
- If battery temperature rises above 60°C (140°F), stop charging. Always charge battery when its temperature is below 60°C (140°F).



# BATTERY

## Battery Test and Charging Chart (Cont'd)

### B: STANDARD CHARGE


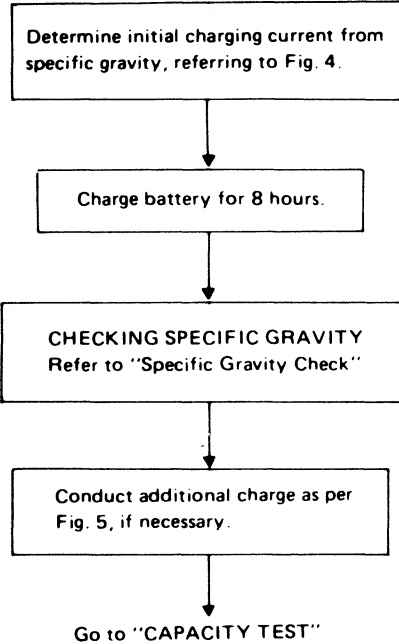


Fig. 4 INITIAL CHARGING CURRENT SETTING  
(Standard charge)

CON- VERTED SPECIFIC GRAVITY	BATTERY TYPE							
	28B19R(L) 34B19R(L)	46B24R(L) 55B24R(L)	50D23R(L) 55D23R(L)	65D26R(L) 80D26R(L)	75D31R(L)	95D31R(L) 95E41R(L)	130E41R(L)	
1.100 - 1.130	4.0 (A)	5.0 (A)	6.0 (A)	7.0 (A)	8.0 (A)	9.0 (A)	13.0 (A)	
1.130 - 1.160	3.0 (A)	4.0 (A)	5.0 (A)	6.0 (A)	7.0 (A)	8.0 (A)	11.0 (A)	
1.160 - 1.190	2.0 (A)	3.0 (A)	4.0 (A)	5.0 (A)	6.0 (A)	7.0 (A)	9.0 (A)	
1.190 - 1.220	2.0 (A)	2.0 (A)	3.0 (A)	4.0 (A)	5.0 (A)	5.0 (A)	7.0 (A)	

- Check battery type and determine the specified current using the table shown above.
- After starting charging, adjustment of charging current is not necessary.

Fig. 5 ADDITIONAL CHARGE (Standard charge)

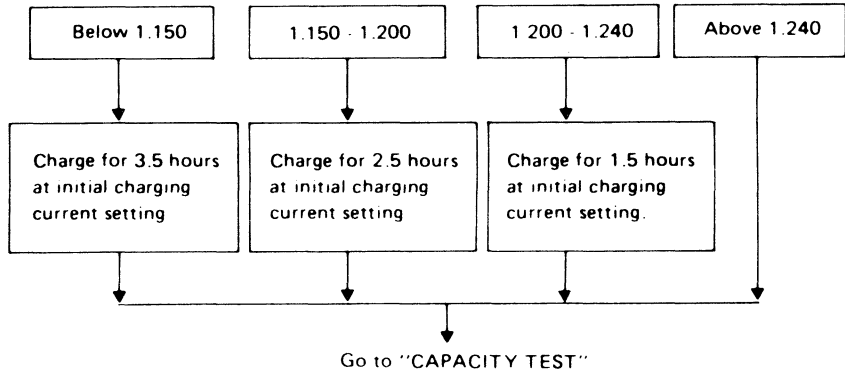

### CAUTION:

- Do not use standard charge method on a battery whose specific gravity is less than 1.100.
- Set charging current to value specified in Fig. 4. If charger is not capable of producing specified current value, set its charging current as close to that value as possible.
- Keep battery away from open flame while it is being charged.
- When connecting charger, connect leads first, then turn on charger. Do not turn on charger first, as this may cause a spark.
- If battery temperature rises above 60°C (140°F), stop charging. Always charge battery when its temperature is below 60°C (140°F).

# BATTERY

## Battery Test and Charging Chart (Cont'd)

### C: QUICK CHARGE

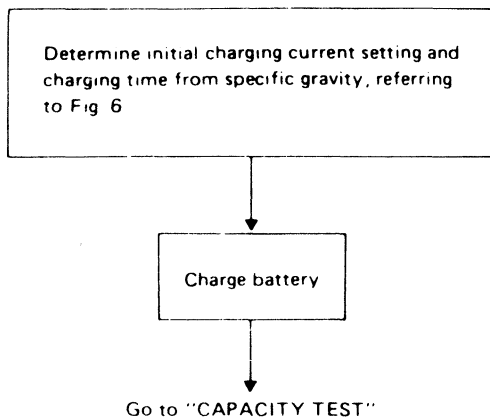


Fig. 6 INITIAL CHARGING CURRENT SETTING AND CHARGING TIME (Quick charge)

CON- VERTED SPECIFIC GRAVITY	BATTERY TYPE							
	28B19R(L) 34B19R(L)	46B24R(L) 55B24R(L)	50D23R(L)	55D23R(L) 65D26R(L)	80D26R(L)	75D31R(L) 95D31R(L) 95E41R(L)	130E41R(L)	
	CURRENT [A]							
	10 (A)	15 (A)	20 (A)	30 (A)	40 (A)			
1.100 - 1.130	2.5 hours							
1.130 - 1.160	2.0 hours							
1.160 - 1.190	1.5 hours							
1.190 - 1.220	1.0 hours							
Above 1.220	0.75 hours (45 min.)							

- Check battery type and determine the specified current using the table shown above.
- After starting charging, adjustment of charging current is not necessary.

### CAUTION:


- Do not use quick charge method on a battery whose specific gravity is less than 1.100.
- Set initial charging current to value specified in Fig. 6. If charger is not capable of producing specified current value, set its charging current as close to that value as possible.
- Keep battery away from open flame while it is being charged.
- When connecting charger, connect leads first, then turn on charger. Do not turn on charger first, as this may cause a spark.
- Be careful of a rise in battery temperature because a large current flow is required during quick-charge operation.  
If battery temperature rises above 60°C (140°F), stop charging. Always charge battery when its temperature is below 60°C (140°F).
- Do not exceed the charging time specified in Fig. 6, because charging battery over the charging time can cause deterioration of the battery.

### Service Data and Specifications (S.D.S.)

		Standard	Option
Type		65D26R	80D26R
Capacity	V-AH	12-65	

# STARTING SYSTEM


## Wiring Diagram

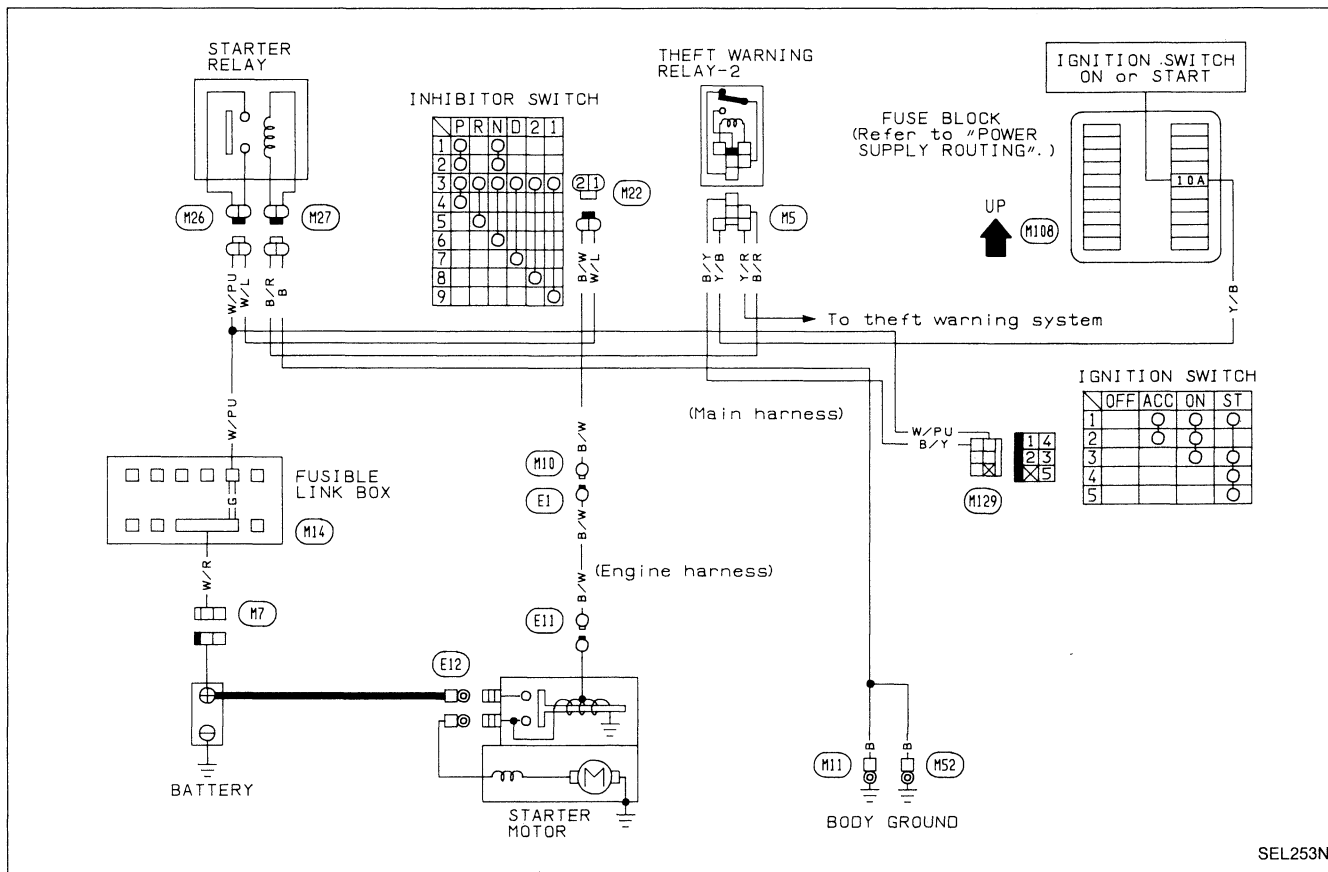

SEL253N


# STARTING SYSTEM

## Trouble-shooting

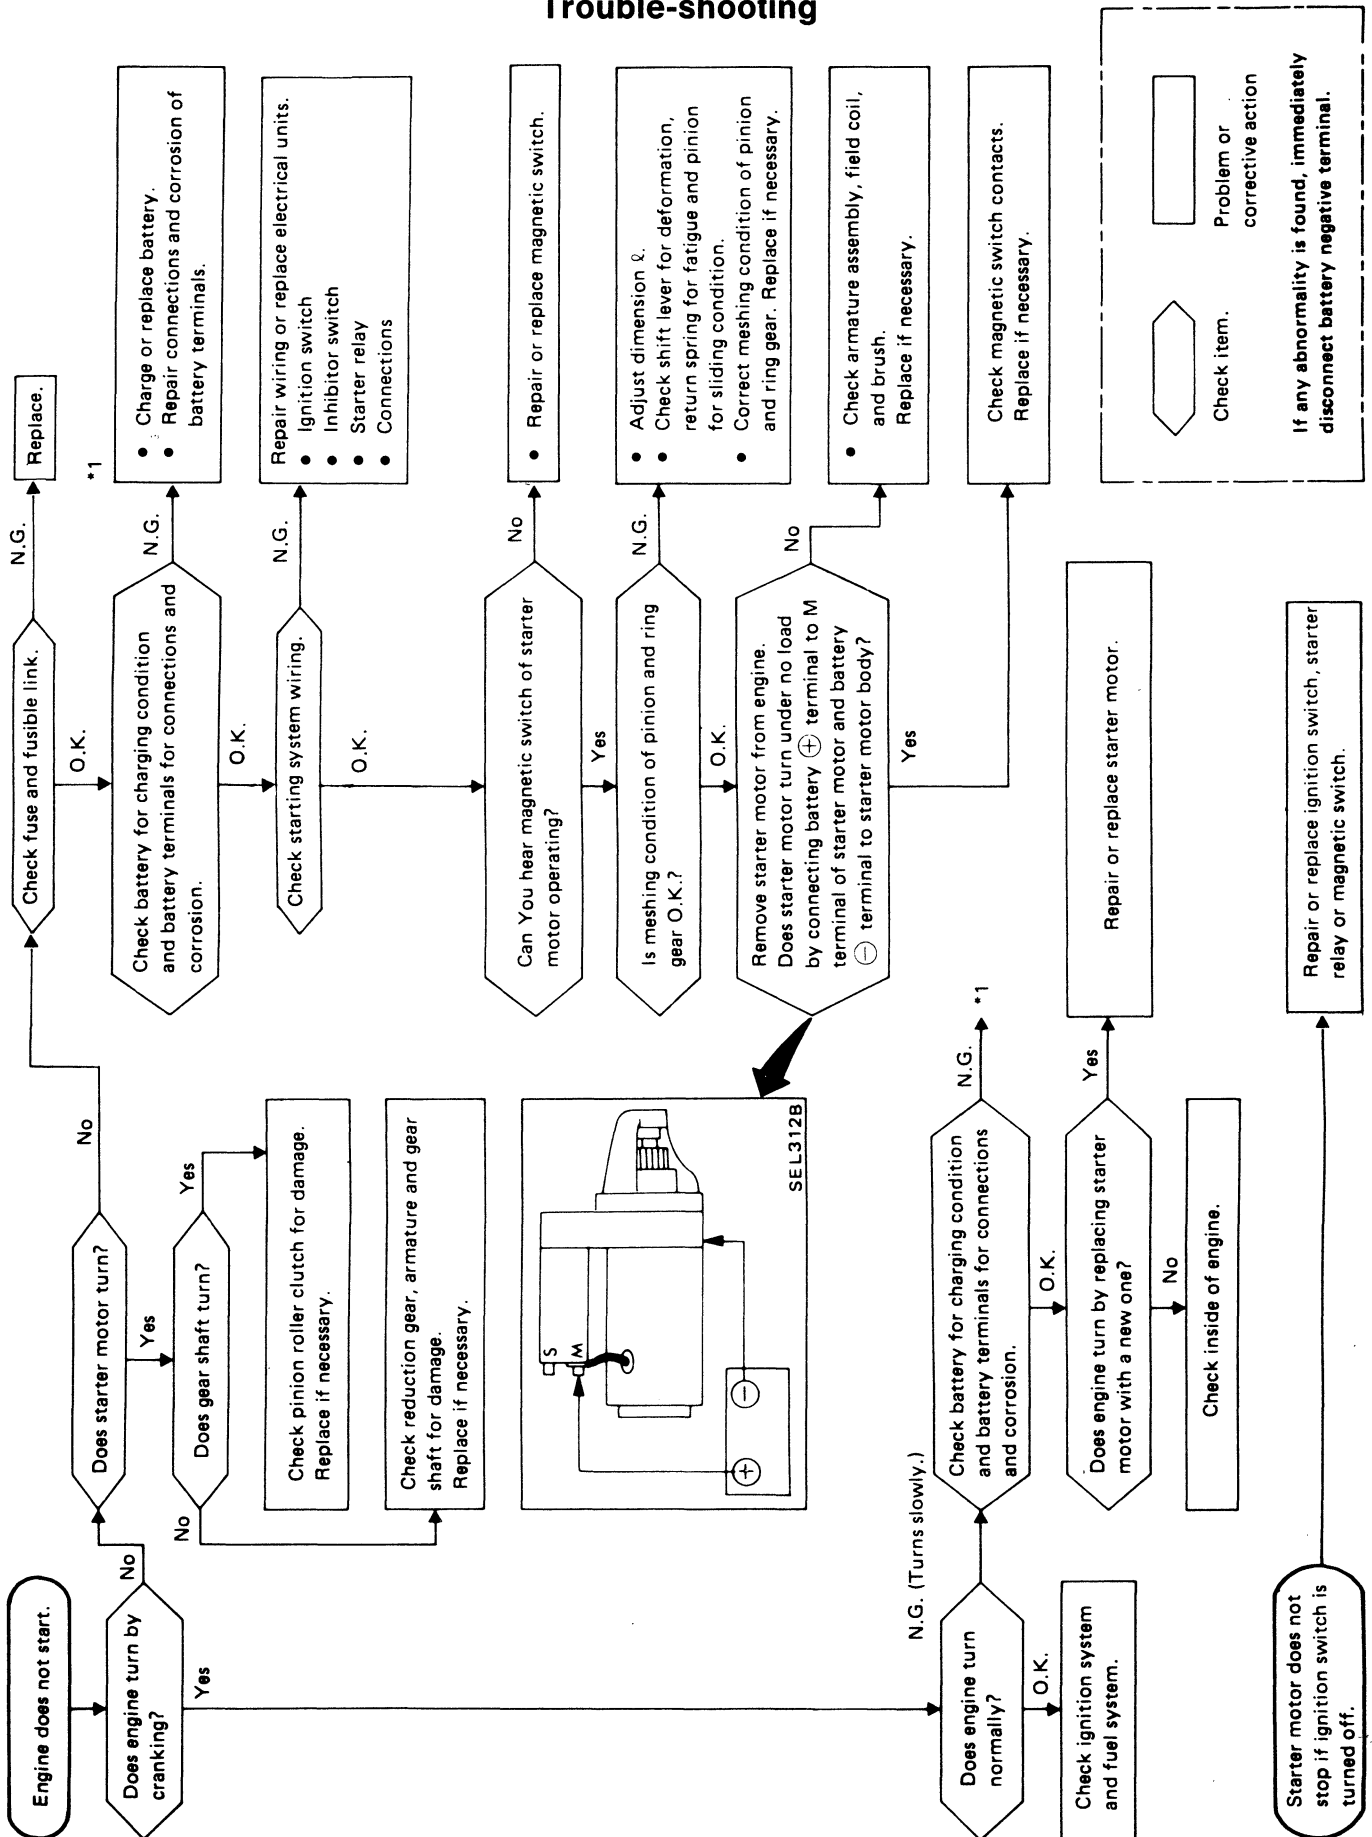

Construction

S114-484

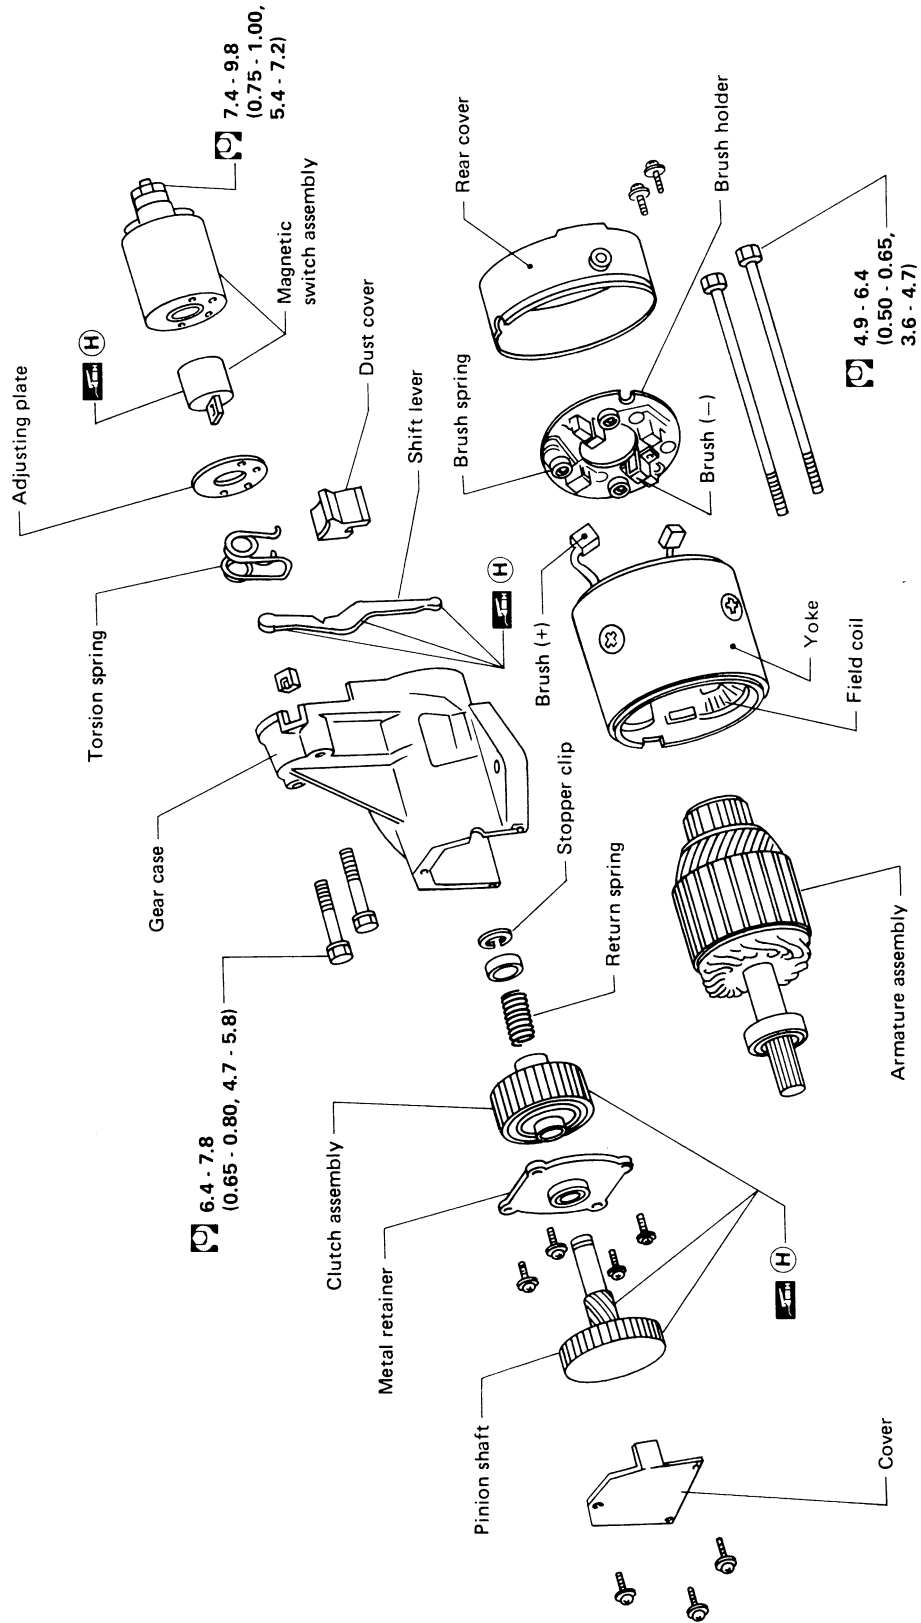


: N·m (kg·m, ft·lb)  
 : High-temperature grease points


STARTING SYSTEM — Starter —

Construction (Cont'd)

M3T26785


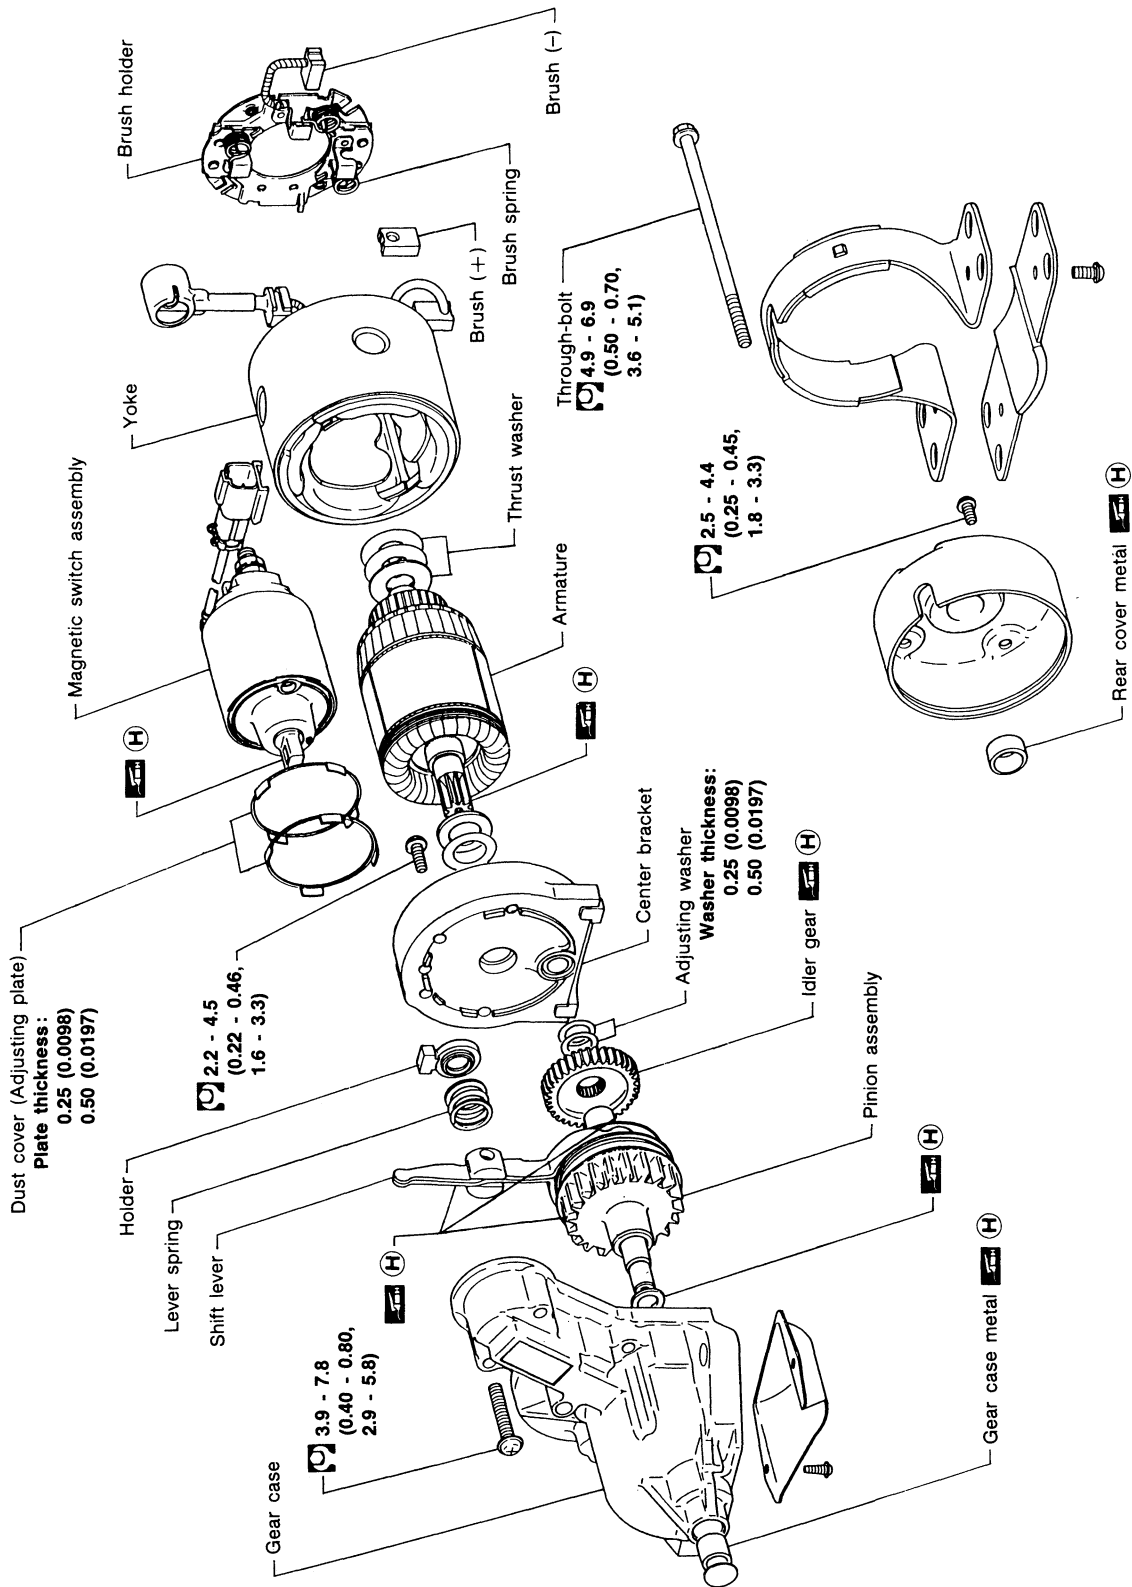


Unit: mm (in)  
 [Symbol] : N·m (kg-m, ft-lb)  
 [Symbol] [Symbol] : High-temperature grease point


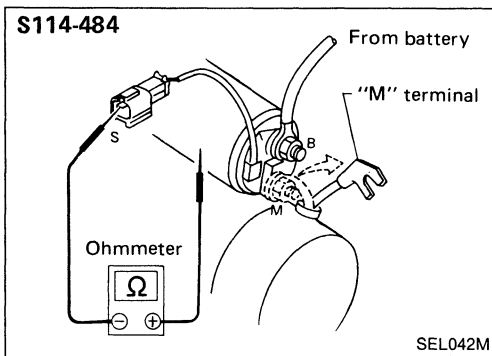


### Magnetic Switch Check

- Disconnect battery ground cable before starting to check.
  - Disconnect "M" terminal of starter motor.
1. Continuity test (between "S" terminal and switch body).
- No continuity ... Replace.

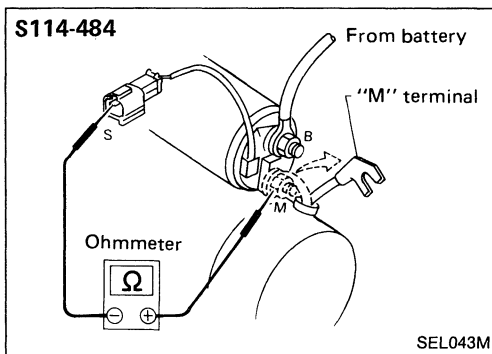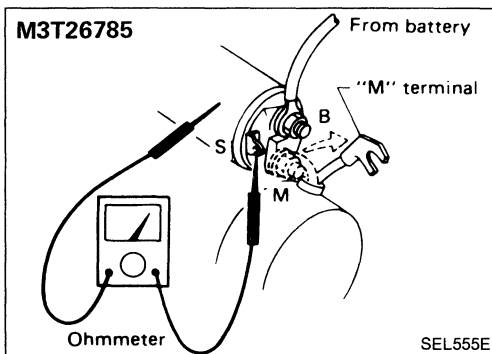



2. Continuity test (between "S" terminal and "M" terminal).
- No continuity ... Replace.

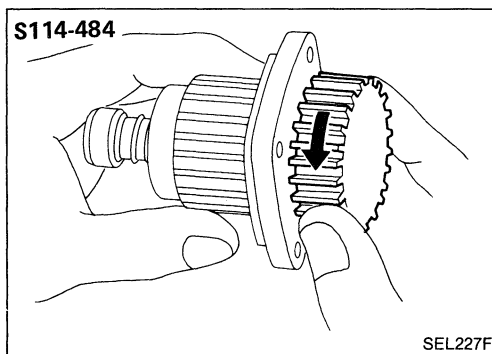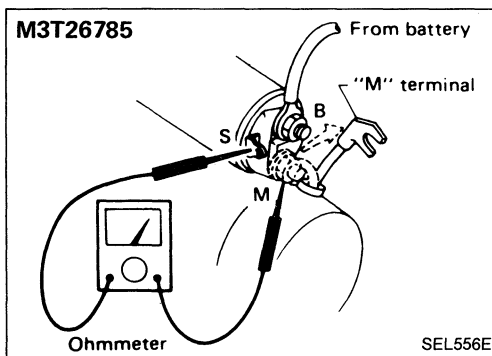

### Pinion/Clutch Check


1. Inspect pinion teeth.
  - Replace pinion if teeth are worn or damaged. (Also check condition of ring gear teeth.)
2. Check to see if pinion locks in one direction and rotates smoothly in the opposite direction.
  - If it does not lock (or locks) in either direction or unusual resistance is evident ... Replace.

Pinion/Clutch Check (Cont'd)

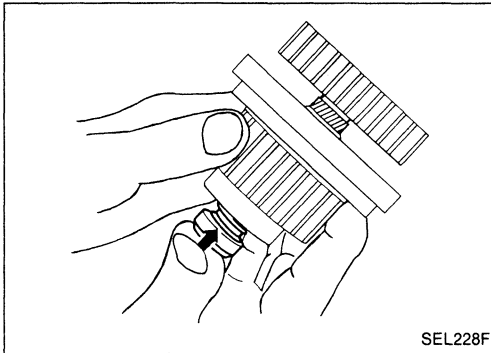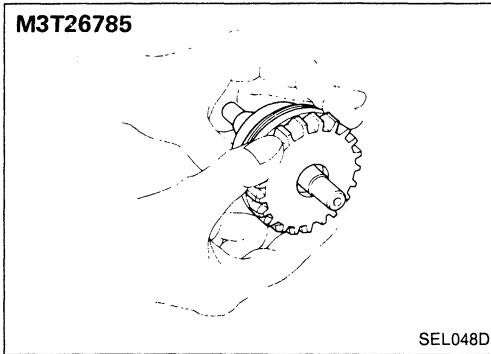

**REDUCTION GEAR TYPE**

3. Inspect reduction gear teeth.
  - Replace reduction gear if teeth are worn or damaged. (Also check condition of armature shaft gear teeth.)
4. Check pinion movement.
  - If it is hard to move, apply high-temperature grease or, if necessary, replace.

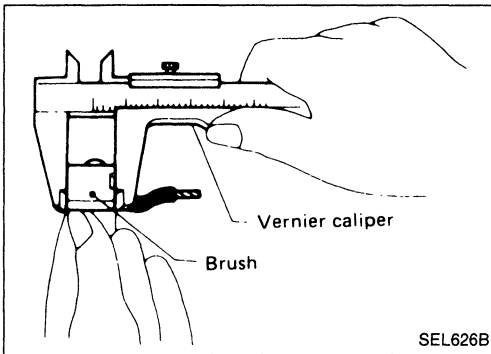

**Brush Check**


**BRUSH**

Check wear of brush.

**Wear limit length:**


**Refer to S.D.S.**

- Excessive wear ... Replace.

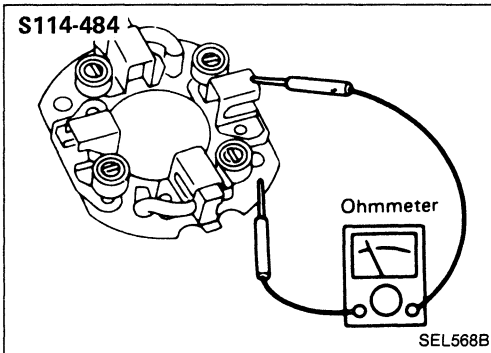


**BRUSH HOLDER**

1. Perform insulation test between brush holder (positive side) and its base (negative side).
  - Continuity exists. ... Replace.
2. Check brushes to see if they move smoothly.
  - If brush holder is bent, replace it; if sliding surface is dirty, clean.

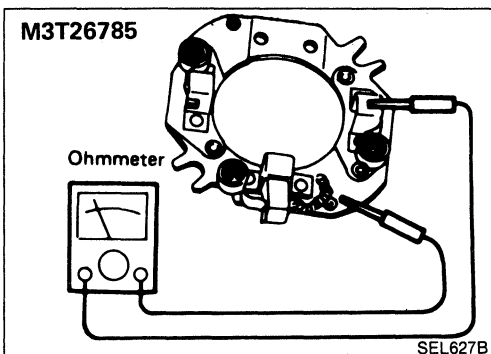




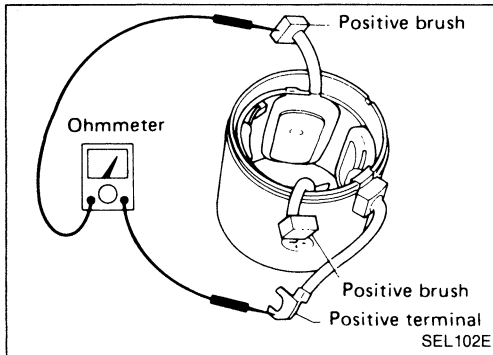


## Field Coil Check

1. Continuity test (between field coil positive terminal and positive brushes).
  - No continuity ... Replace yoke.

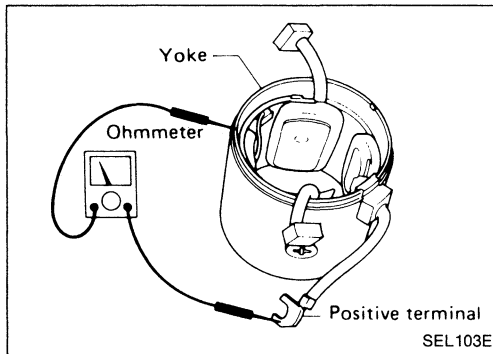


2. Insulation test (between field coil positive terminal and yoke).
  - Continuity exists. ... Replace yoke.

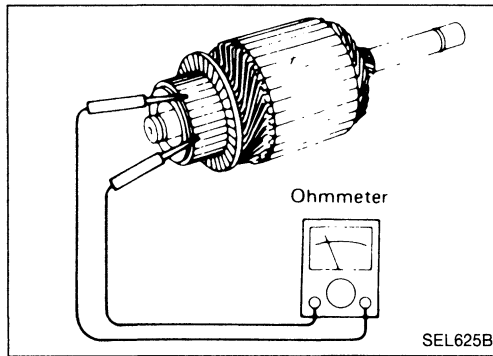


## Armature Check

1. Continuity test (between two segments side by side).
  - No continuity ... Replace.

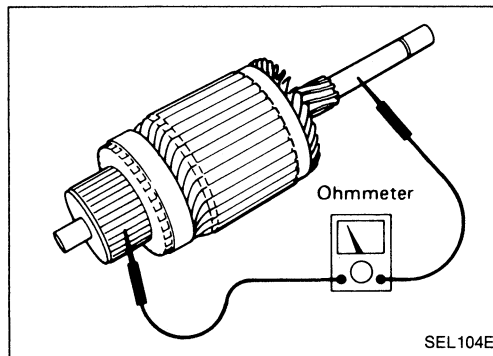


2. Insulation test (between each commutator bar and shaft).
  - Continuity exists. ... Replace.

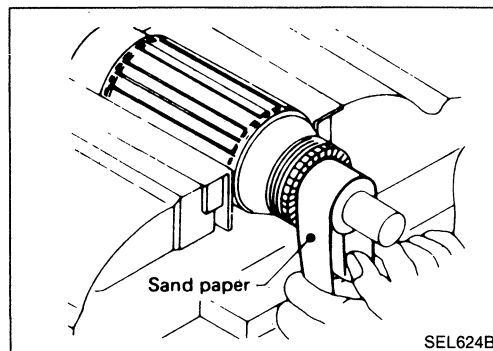


3. Check commutator surface.
  - Rough ... Sand lightly with No. 500 - 600 sandpaper.

**Armature Check (Cont'd)**

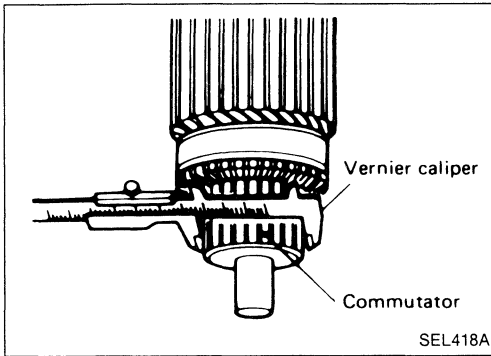

4. Check diameter of commutator.  
**Commutator minimum diameter:**  
**Refer to S.D.S.**
  - Less than specified value ... Replace.

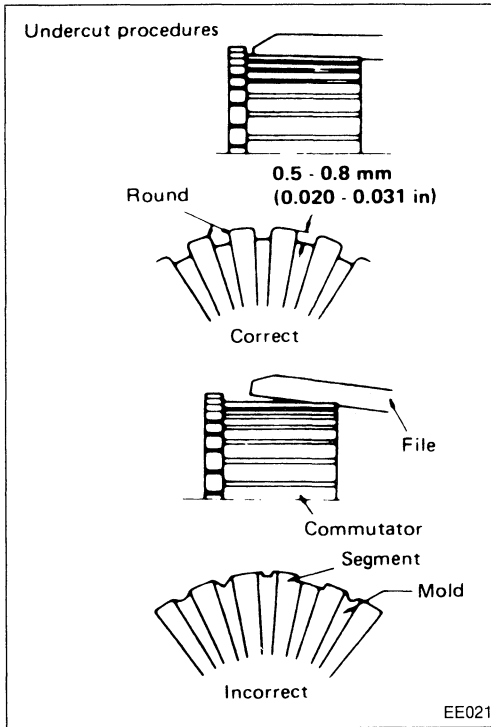


5. Check depth of insulating mold from commutator surface.
  - Less than 0.2 mm (0.008 in) ... Undercut to 0.5 to 0.8 mm (0.020 to 0.031 in)

**Assembly**

Carefully observe the following instructions.

**HIGH-TEMPERATURE GREASE POINT**

- Rear metal cover
- Gear metal case
- Frictional pinion surface
- Moving portion of shift lever
- Magnetic switch plunger

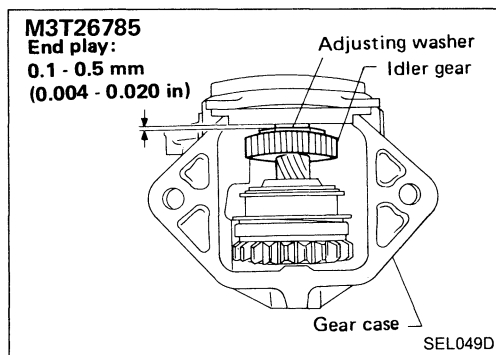

- a. After assembling gear case, pinion assembly, idler gear, adjusting washers and center bracket, turn idler gear with your hand in axial direction and adjust end play to the 0.1 to 0.5 mm (0.004 to 0.020 in) range using adjusting washer(s).
- b. Check pinion to see if its engagement length is correct.

Assembly (Cont'd)




**PINION PROTRUSION LENGTH ADJUSTMENT**

**Reduction gear type**


Compare movement "ℓ" in height of pinion when it is pushed out with magnetic switch energized and when it is pulled out by hand until it touches stopper.

**Movement "ℓ":**

**Refer to S.D.S.**

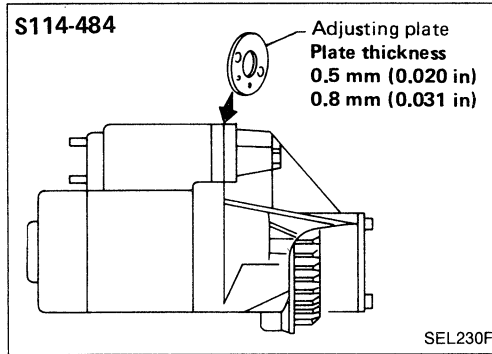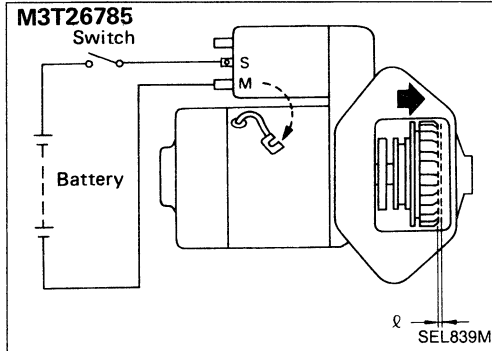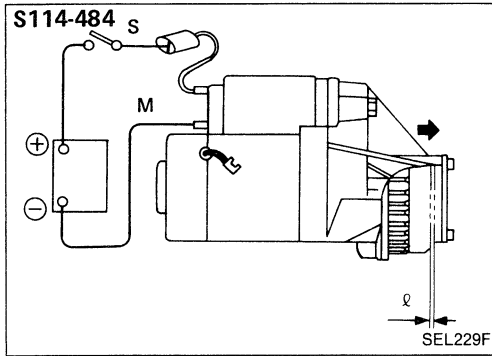

- Not in the specified value ... Adjust using adjusting plate.

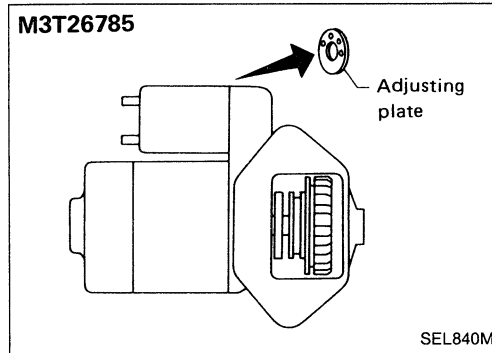


**Service Data and Specifications (S.D.S.)**

**STARTER MOTOR**

Type		S114-484	M3T26785
		HITACHI	MITSUBISHI
		Reduction gear type	
System voltage	V	12	
No-load			
Terminal voltage	V	11.0	
Current	A	Less than 100	70
Revolution	rpm	More than 3,000	2,200
Minimum diameter of commutator	mm (in)	32.0 (1.260)	38.1 (1.500)
Minimum length of brush	mm (in)	12.0 (0.472)	11.5 (0.453)
Brush spring tension	N (kg, lb)	17.7 - 21.6 (1.8 - 2.2, 4.0 - 4.9)	13.7 - 25.5 (1.4 - 2.6, 3.1 - 5.7)
Movement 'Ø' in height of pinion assembly	mm (in)	0.05 - 0.8 (0.0020 - 0.0315)	0.3 - 2.0 (0.012 - 0.079)
Clearance of bearing metal and armature shaft	mm (in)	—	—
Clearance 'Ø' between pinion front edge and pinion stopper	mm (in)	—	—

# CHARGING SYSTEM

## Wiring Diagram

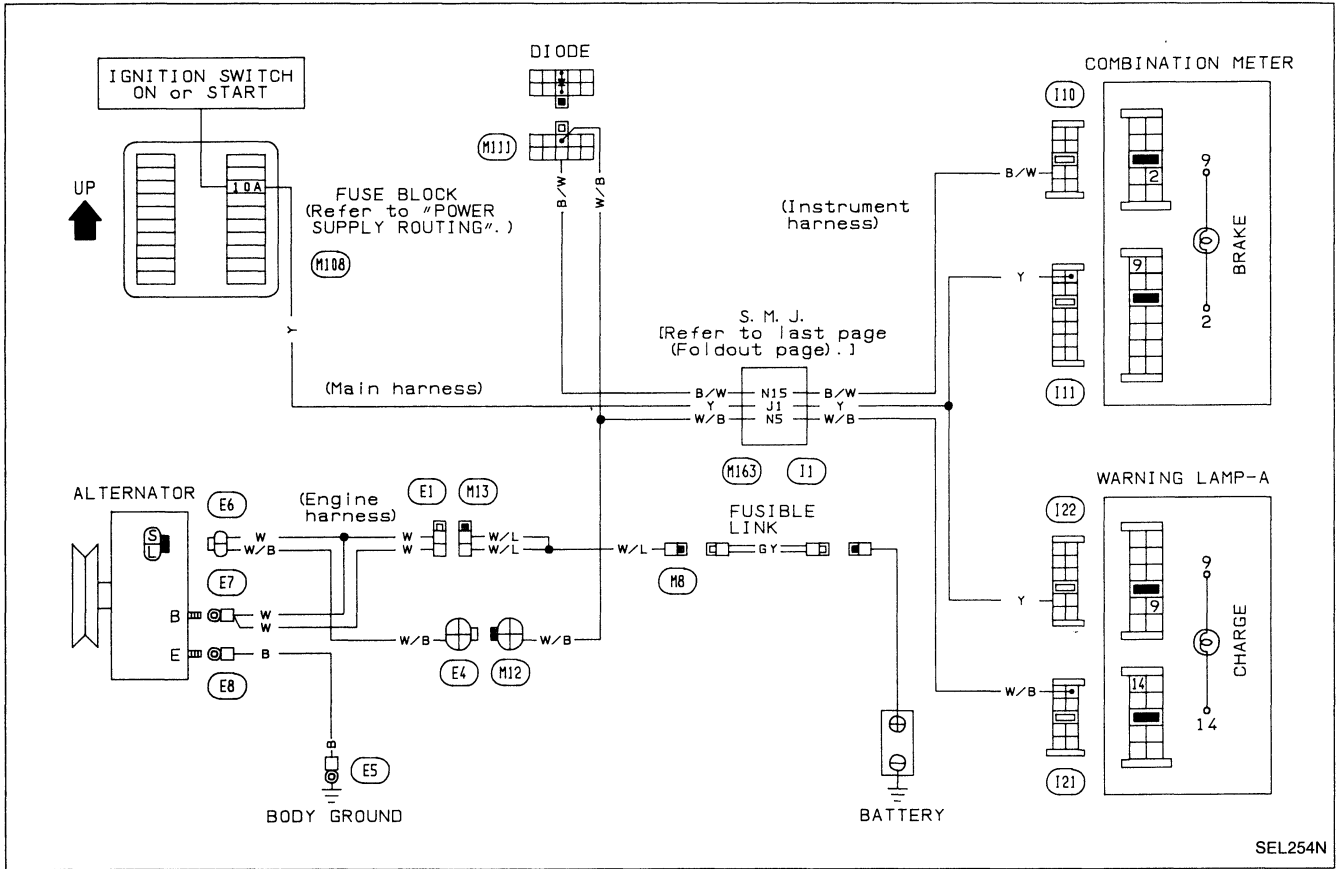


# CHARGING SYSTEM

## Trouble-shooting

Before conducting an alternator test, make sure that the battery is fully charged. A 30-volt voltmeter and suitable test probes are necessary for the test. The alternator can be checked easily by referring to the Inspection Table.

**Before starting trouble-shooting, inspect the fusible link.**

### WITH IC REGULATOR

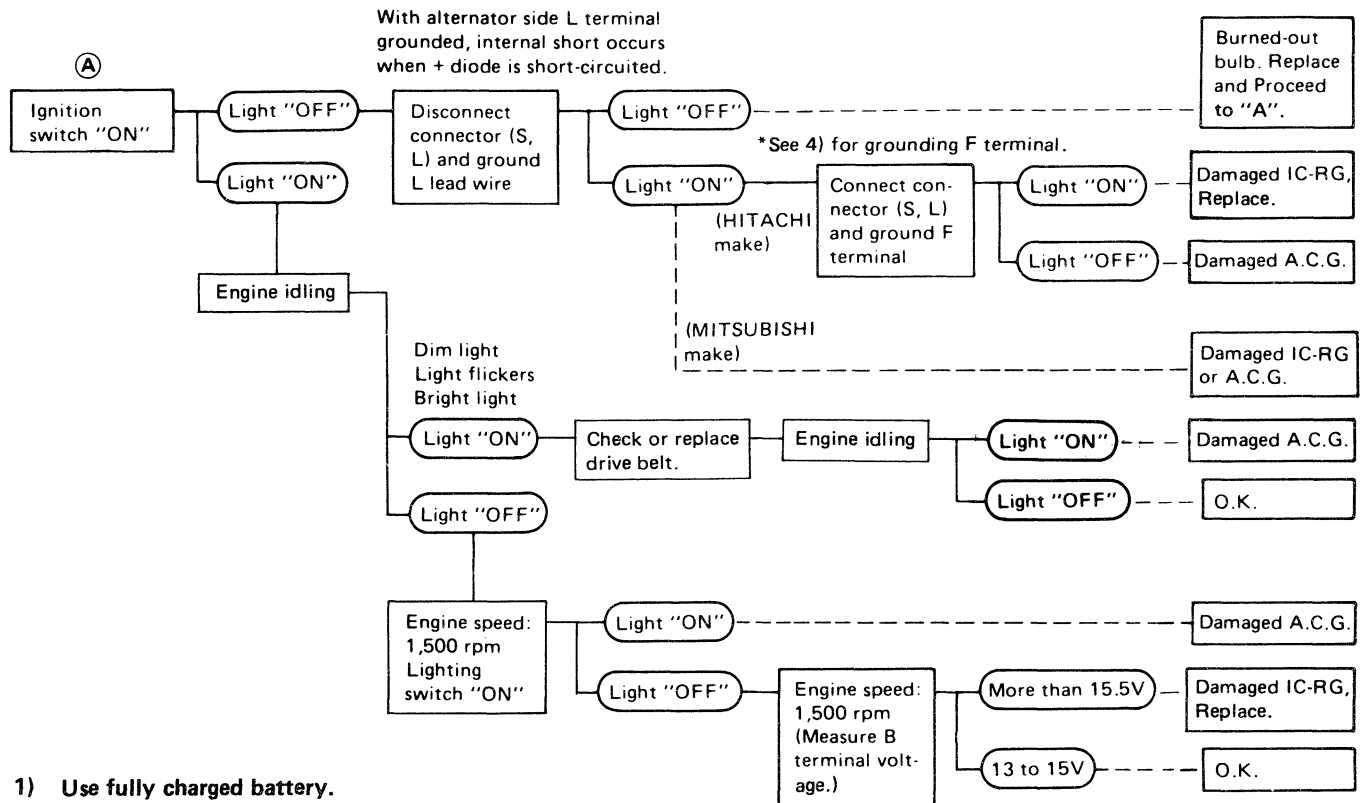


Make sure connector (S, L) is connected correctly.

- 1) Use fully charged battery.
- 2) Light : Charge warning light  
A.C.G. : Alternator parts except IC regulator  
IC-RG : IC regulator  
O.K. : IC alternator is in good condition.
- 3) When reaching "Damaged A.C.G.", remove alternator from vehicle and disassemble, inspect and correct or replace faulty parts.
- 4) \*Method of grounding F terminal (HITACHI make only)


#### Gasoline engine model

Contact tip of wire with brush and attach wire to alternator body.

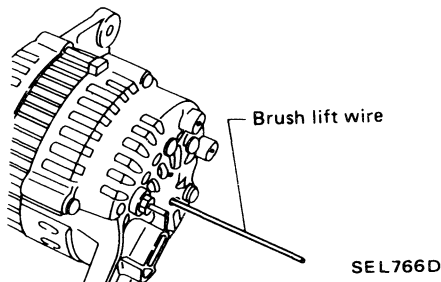

- 5) Terminals "S", "L", "B" and "E" are marked on rear cover of alternator.


Construction

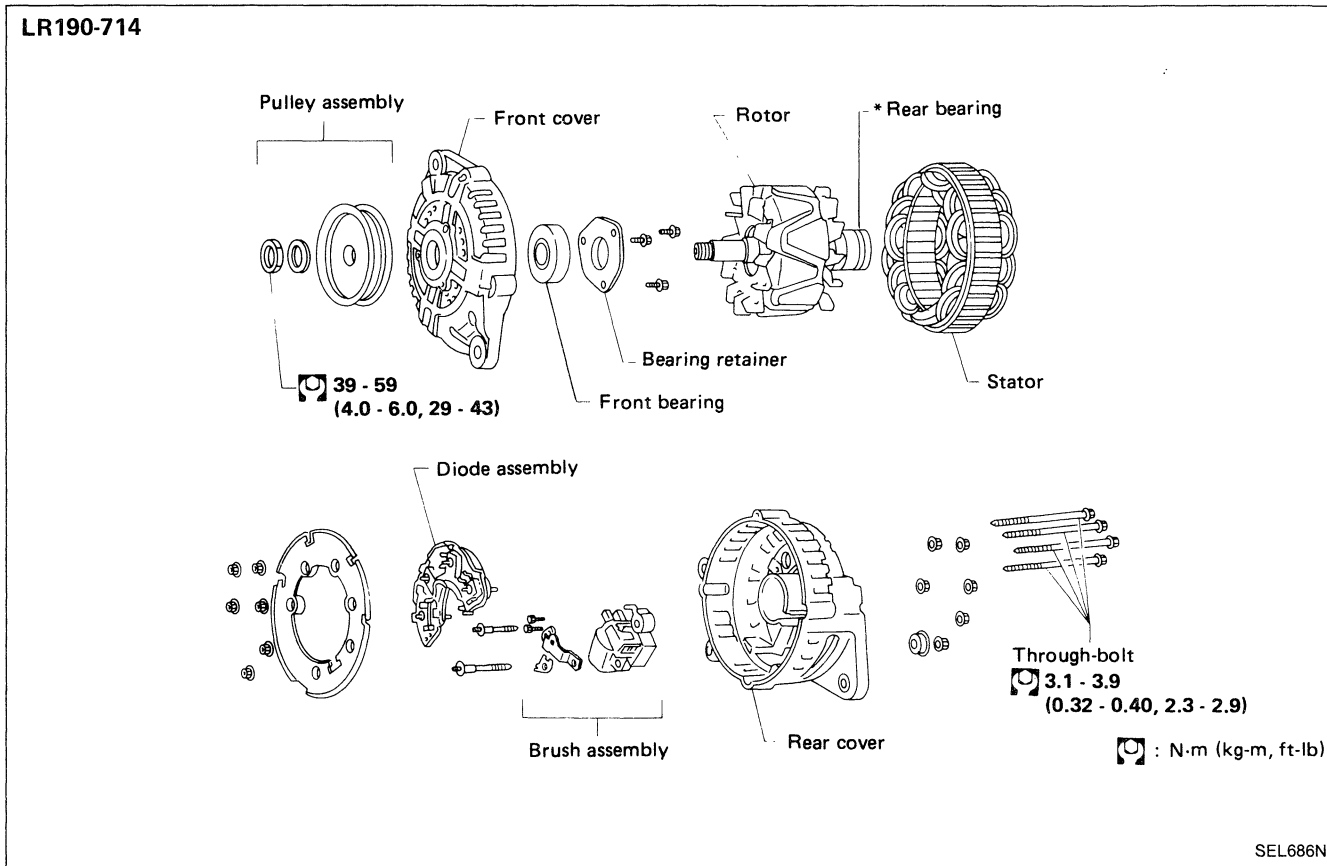

\*Rear bearing

**CAUTION:**


Rear cover may be hard to remove because a ring is used to lock outer race of rear bearing. Be careful not to lose this ring during removal.

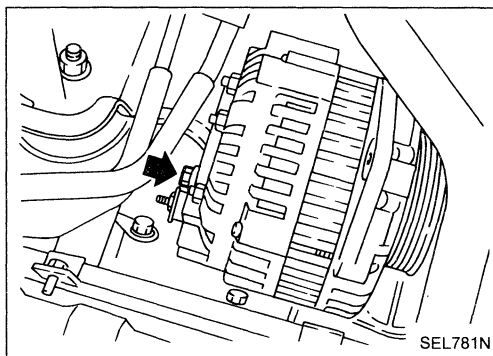

**Removal and Installation**


**REMOVAL**

1. Loosen alternator belt.
2. Remove alternator adjusting bar.
3. Remove harness connector and cable from alternator.
4. Remove alternator mounting rear bolt.

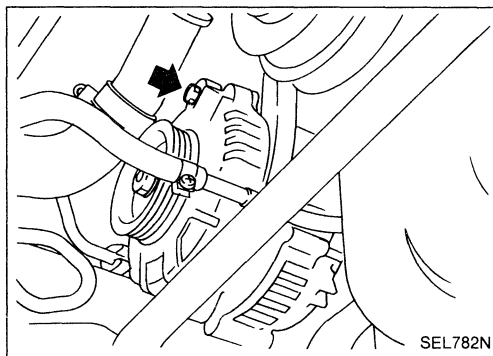

5. Loosen alternator mounting front bolt.

## Removal and Installation (Cont'd)

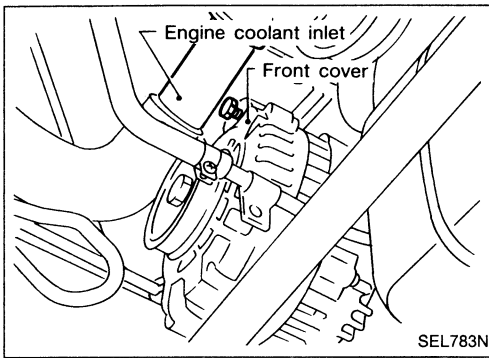

6. Remove alternator with alternator front mounting bolt.  
**Front alternator mounting bolt cannot be removed or installed separately due to insufficient clearance between alternator front cover and engine coolant inlet.**

## INSTALLATION


- Installation procedure is in reverse order of removal.

## Disassembly

### REAR COVER REMOVAL


#### CAUTION:

Rear cover may be hard to remove because a ring is used to lock outer race of rear bearing. To facilitate removal of rear cover, heat just bearing box section with a 200W soldering iron. Do not use a heat gun, as it can damage diode assembly.

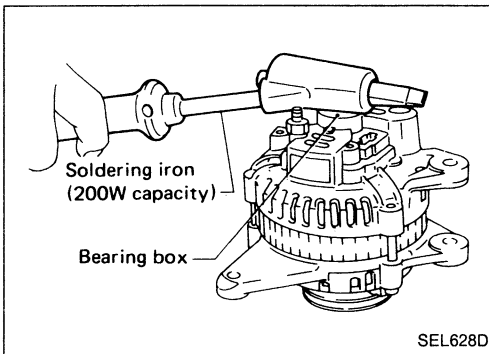


### Rotor Slip Ring Check


1. Continuity test
  - No continuity ... Replace rotor.

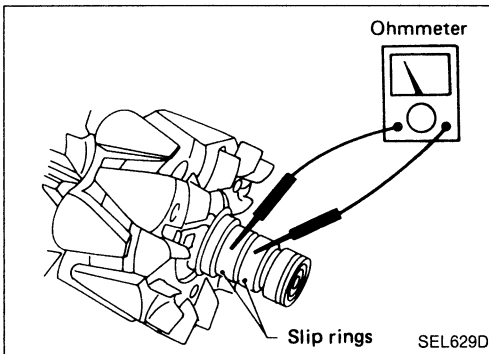

2. Insulator test
  - Continuity exists ... Replace rotor.
3. Check slip ring for wear.  
**Slip ring minimum outer diameter:  
Refer to S.D.S.**

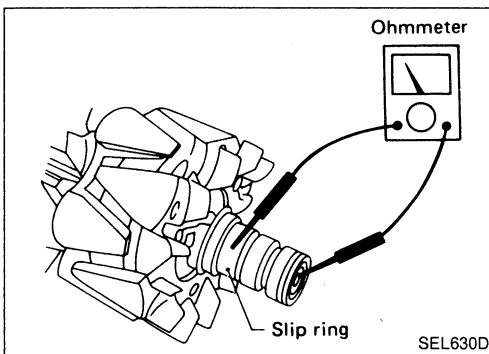




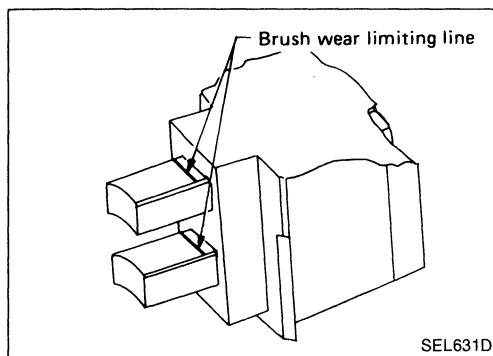

### Brush Check

1. Check smooth movement of brush.
  - Not smooth ... Check brush holder and clean.
2. Check brush for wear.
  - Replace brush if it is worn down to the limit line.

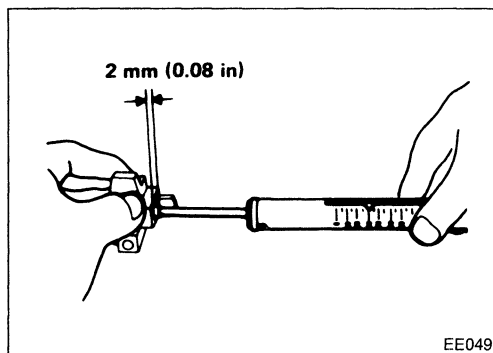


3. Check brush lead wire for damage.
  - Damaged ... Replace.
4. Check brush spring pressure. Measure brush spring pressure with brush projected approximately 2 mm (0.08 in) from brush holder.

#### Spring pressure:

Refer to S.D.S.

- Not within the specified values ... Replace.

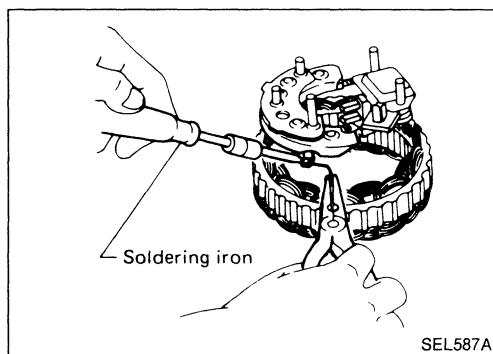


### Stator Check


To test the stator or diode, you must separate them by unsoldering the connecting wires.

#### CAUTION:

Use only as much heat as required to melt solder. Otherwise, diodes will be damaged by excessive heat.

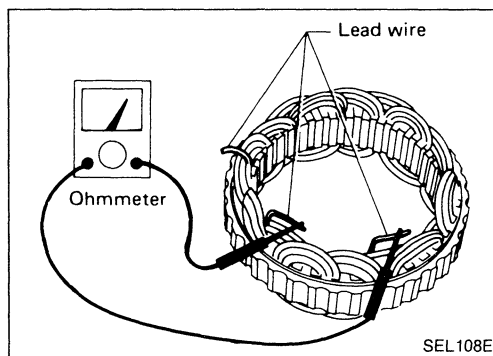

1. Continuity test
  - No continuity ... Replace stator.

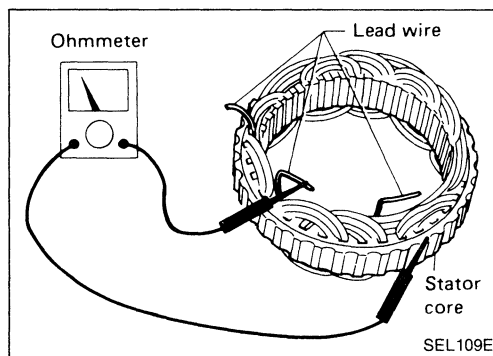


2. Ground test
  - Continuity exists ... Replace stator.

## Diode Check

### MAIN DIODES

- Use an ohmmeter to check condition of diodes as indicated in chart below.
- If any of the test results is not satisfactory, replace diode assembly.


	Ohmmeter probes		Continuity
	Positive ⊕	Negative ⊖	
Diodes check (Positive side)	Positive diode plate	Diode terminals	Yes
	Diode terminals	Positive diode plate	No
Diodes check (Negative side)	Negative diode plate	Diode terminals	No
	Diode terminals	Negative diode plate	Yes

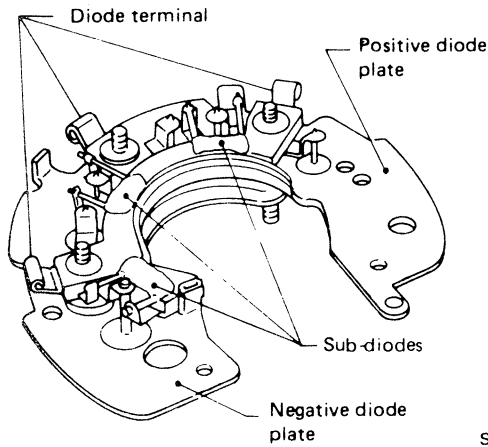

SEL768D

### SUB-DIODES

- Attach ohmmeter's probe to each end of diode to check for continuity.
- Continuity is N.G. ... Replace diode assembly.

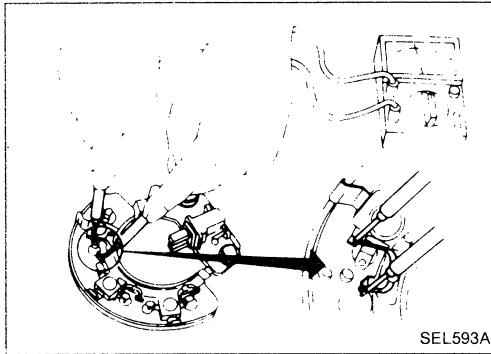

SEL593A

### Assembly


Carefully observe the following instructions.

- When soldering each stator coil lead wire to diode assembly terminal, carry out the operation as fast as possible.

**Assembly (Cont'd)**


**WHEN SOLDERING BRUSH LEAD WIRE**

- (1) Position brush so that it extends 10.5 - 11.5 mm (0.413 - 0.453 in) from brush holder.

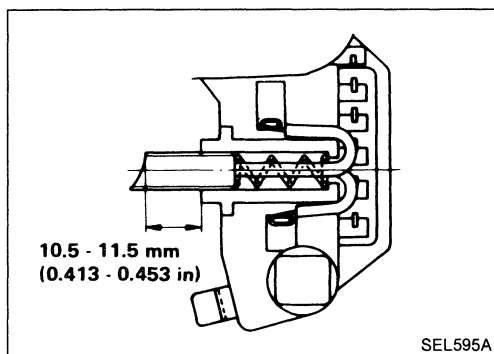


- (2) Coil lead wire 1.5 times around terminal groove. Solder outside of terminal.

**When soldering, be careful not to let solder adhere to insulating tube as it will weaken the tube and cause it to break.**

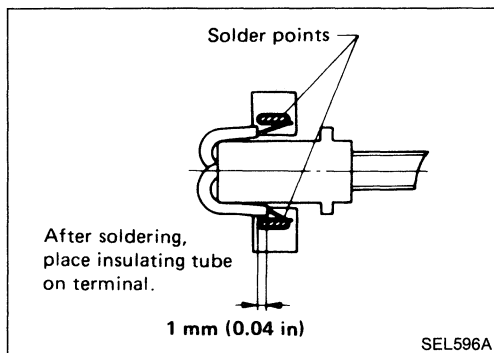



**RING FITTING IN REAR BEARING**

- Fix ring into groove in rear bearing so that it is as close to the adjacent area as possible.

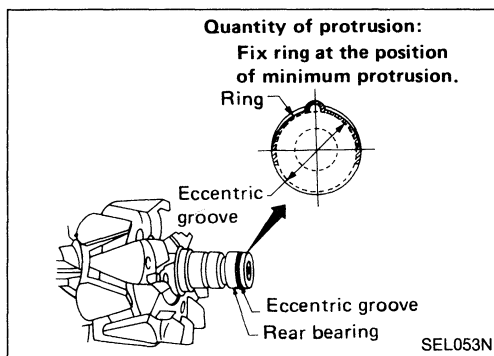

**REAR COVER INSTALLATION**

- (1) Before installing front cover with pulley and rotor with rear cover, push brush up with fingers and retain brush by inserting brush lift wire into brush lift hole from outside.
- (2) After installing front and rear sides of alternator, pull out brush lift wire.

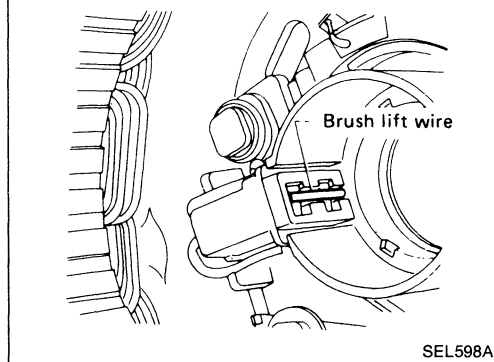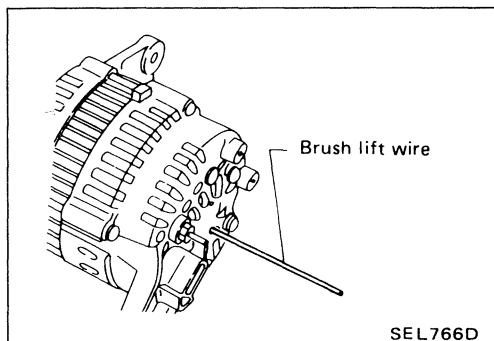




**Service Data and Specifications (S.D.S.)**

**ALTERNATOR**

Type		LR190-714
		HITACHI make
Applied engine		VG30E
Nominal rating	V-A	12-90
Ground polarity		Negative
Minimum revolution under no-load (when 13.5 volts is applied)	rpm	Less than 950
Hot output current	A/rpm	More than 22/1,300 More than 65/2,500 More than 80/5,000
Regulated output voltage	V	14.1 - 14.7
Minimum length of brush	mm (in)	More than 6.0 (0.236)
Brush spring pressure	N (g, oz)	1.471 - 3.432 (150 - 350, 5.29 - 12.34)
Slip ring minimum outer diameter	mm (in)	More than 30.6 (1.205)

# COMBINATION SWITCH

## Check

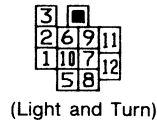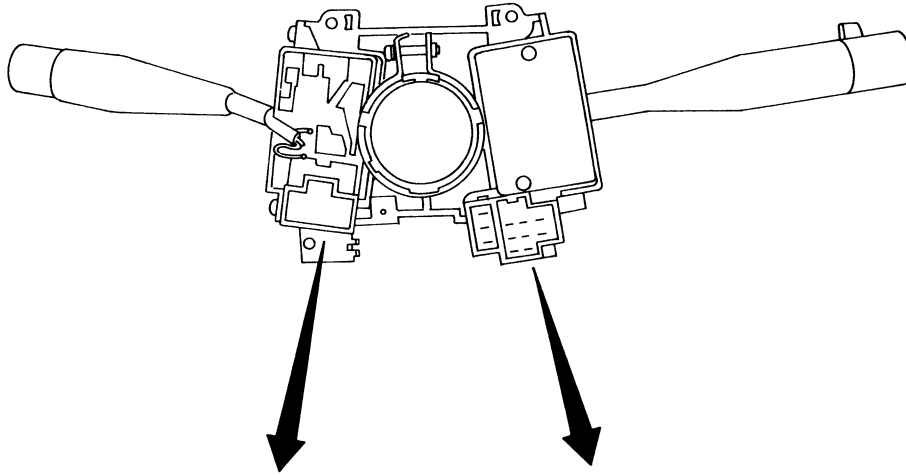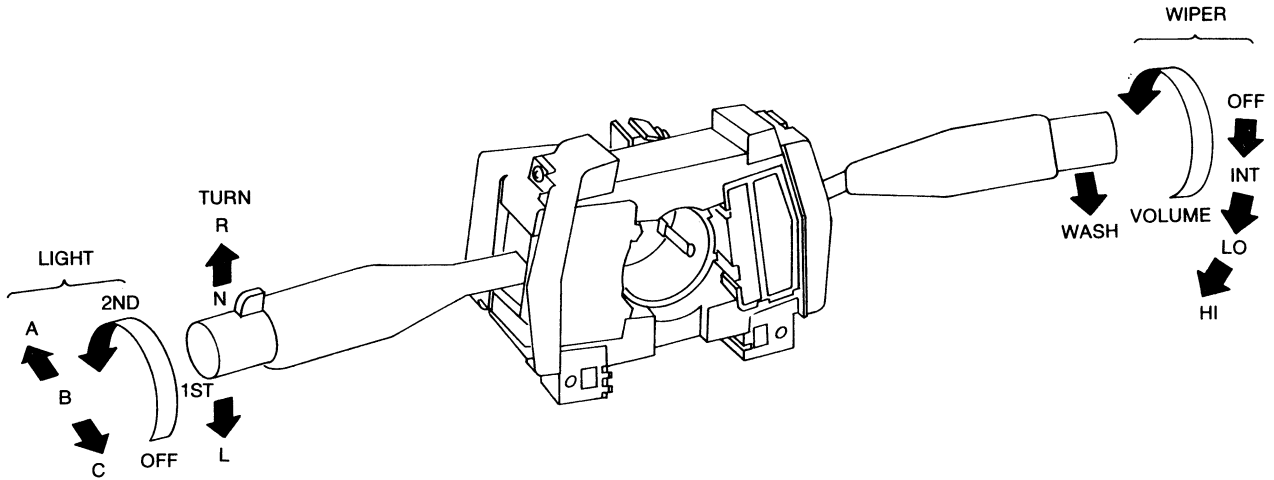


LIGHTING SWITCH

	OFF			1ST			2ND		
	A	B	C	A	B	C	A	B	C
5									
6									
7									
8									
9									
10									
11									
12									

WIPER SWITCH


	OFF	INT	LO	HI	WASH
13	○	○			
14	○	○	○		
15		○			
16				○	
17		○	○	○	○
18					○

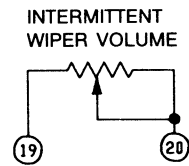

TURN SIGNAL SWITCH


	R	N	L
1	○		○
2	○		○
3			○

# COMBINATION SWITCH

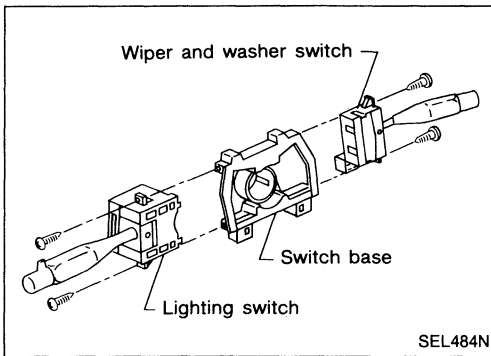

## Replacement


- Each switch can be replaced without removing combination switch base.

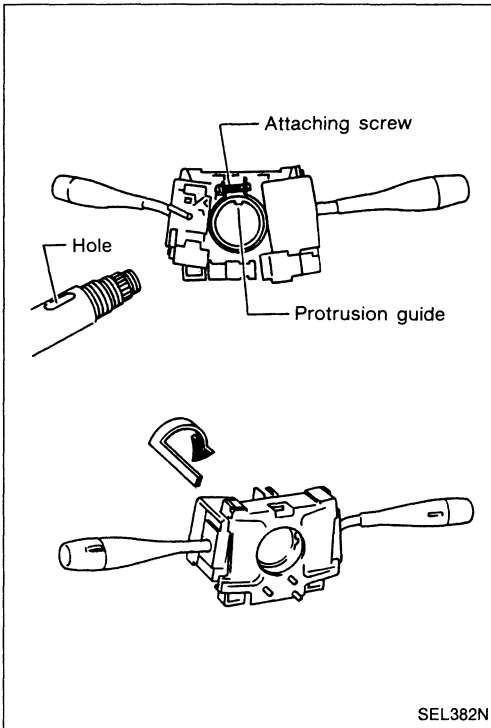

- To remove combination switch base, remove base attaching screw and turn after pushing on it.

# HEADLAMP

## Wiring Diagram

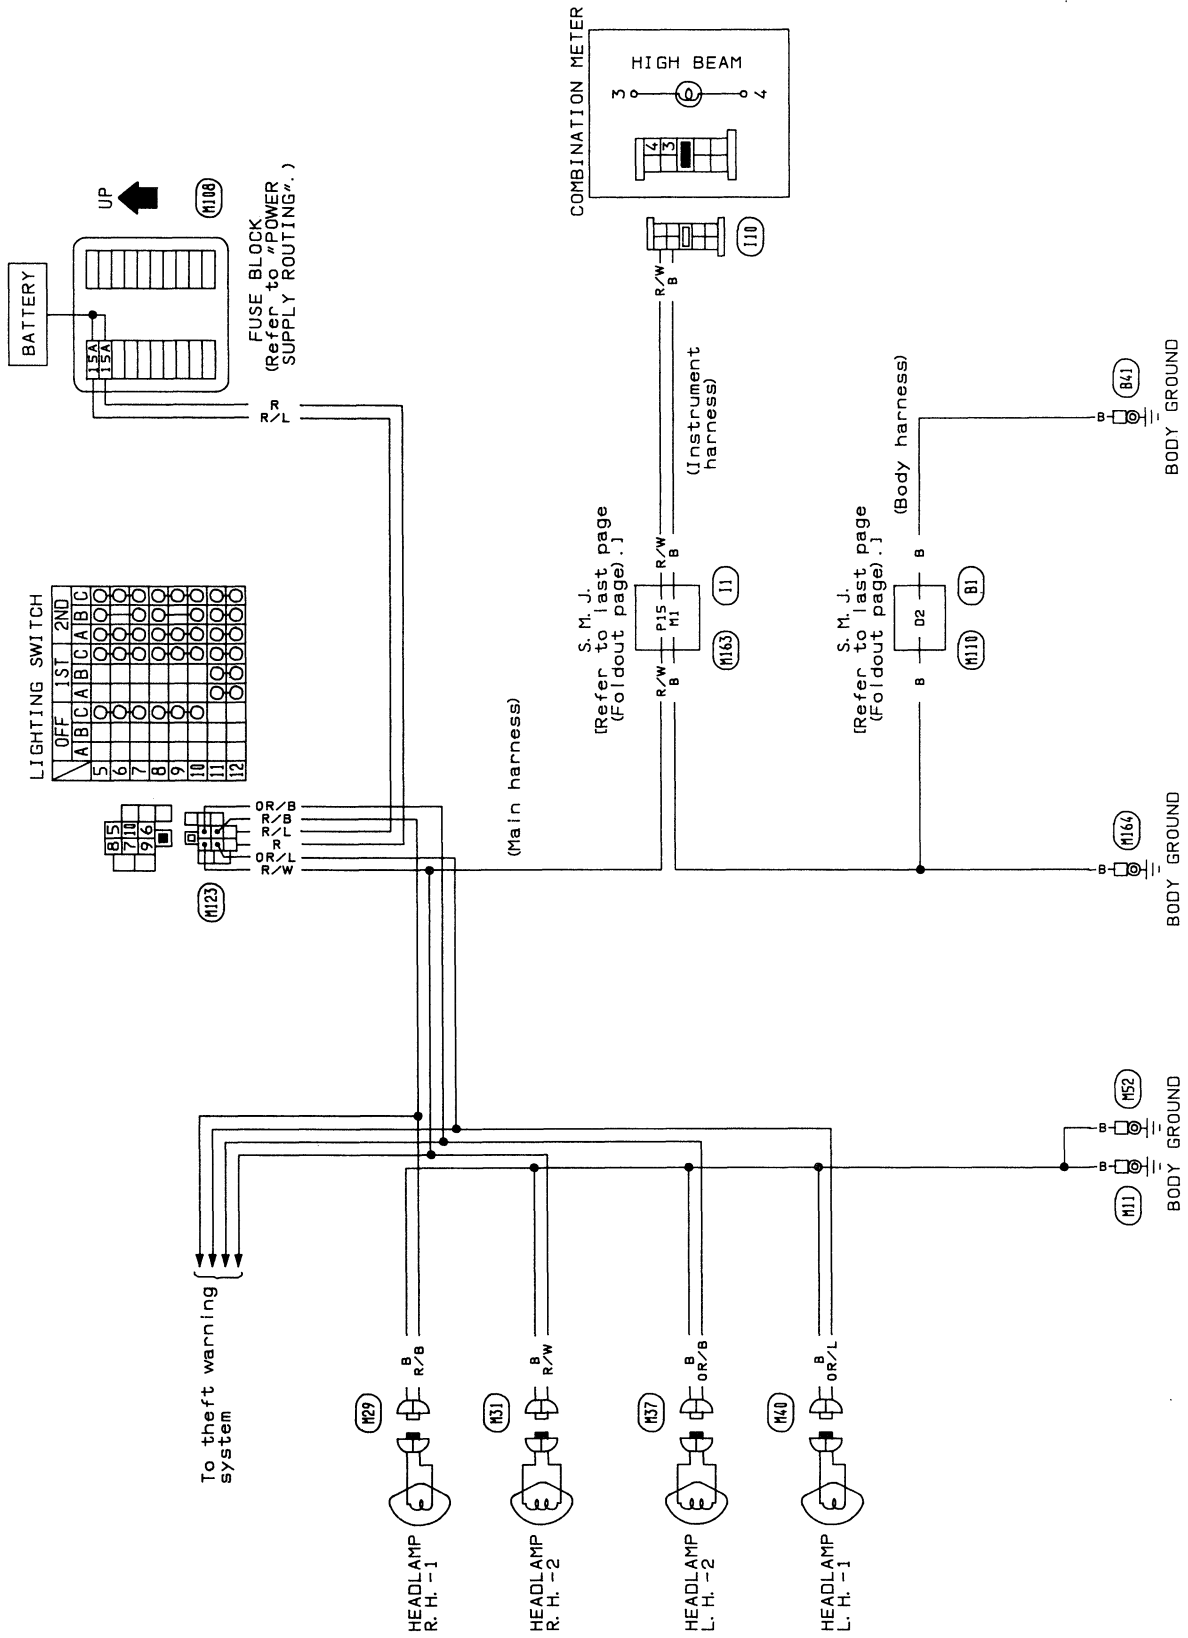

## HEADLAMP

### Bulb Replacement


The headlamp is a semi-sealed beam type which uses a replaceable halogen bulb. The bulb can be replaced from the engine compartment side without removing the headlamp body.

- **Grasp only the plastic base when handling the bulb. Never touch the glass envelope.**

1. Disconnect battery negative cable.
2. Disconnect harness connector from rear end of bulb.
3. Turn plastic base counterclockwise until it is free from headlamp reflector, then remove it.
4. Remove headlamp bulb. Do not shake or rotate bulb when removing it.
5. Install in the reverse order of removal.

#### CAUTION:

- **Do not leave the bulb out of the headlamp reflector for a long period of time as dust, moisture, smoke, etc. may enter the headlamp body and affect the performance of the headlamp. Thus, the headlamp bulb should not be removed from the headlamp reflector until just before a replacement bulb is to be installed.**

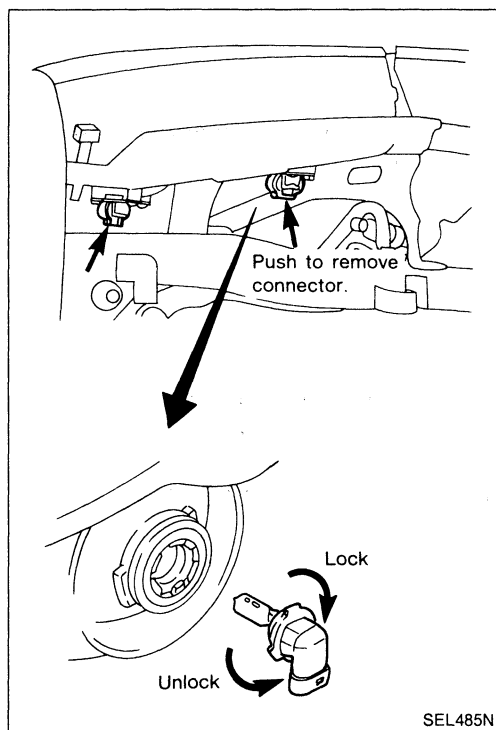

### Aiming Adjustment

When performing headlamp aiming adjustment, use an aiming machine, aiming wall screen or headlamp tester. For operating instructions of any aimer, it should be in good repair, calibrated and used according to respective operation manuals supplied with the unit.

If any aimer is not available, aiming adjustment can be done as follows:

**For details, refer to the regulations in your own country.**


- a. **Keep all tires inflated to correct pressures.**
- b. **Place vehicle and tester on one and same flat surface.**
- c. **See that there is no-load in vehicle (coolant, engine oil filled up to correct level and full fuel tank) other than the driver (or equivalent weight placed in driver's position).**

### AIMER ADJUSTMENT MARK

When using a mechanical aimer, adjust adapter legs to the data marked on the headlamps.

Example:

4H2V  
└── Vertical side: 2  
└── Horizontal side: 4

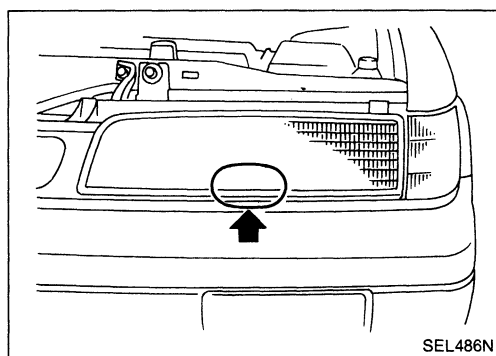





# HEADLAMP

## Aiming Adjustment (Cont'd)

### LOW BEAM


1. Turn headlamp low beam on.
  2. Use adjusting screws to perform aiming adjustment.
- First tighten the adjusting screw all the way and then make adjustment by loosening the screw.

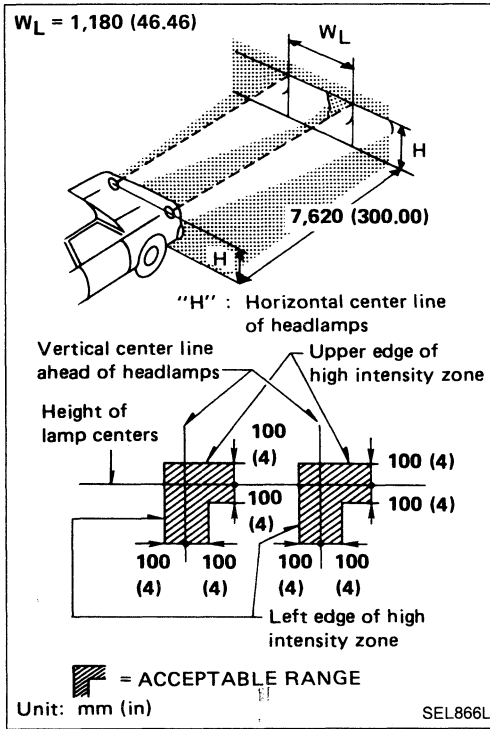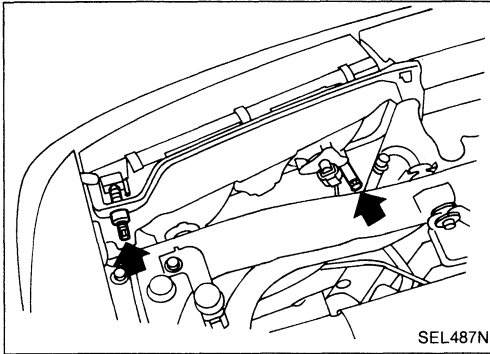

- Adjust headlamps so that upper edge and left edge of high intensity zone are within the acceptable range as shown at left.
  - Dotted lines in illustration show center of headlamp.
- "H": Horizontal center line of headlamps  
 "W<sub>L</sub>": Distance between each headlamp center


# EXTERIOR LAMP

## Clearance, License, Tail and Stop Lamps/Wiring Diagram

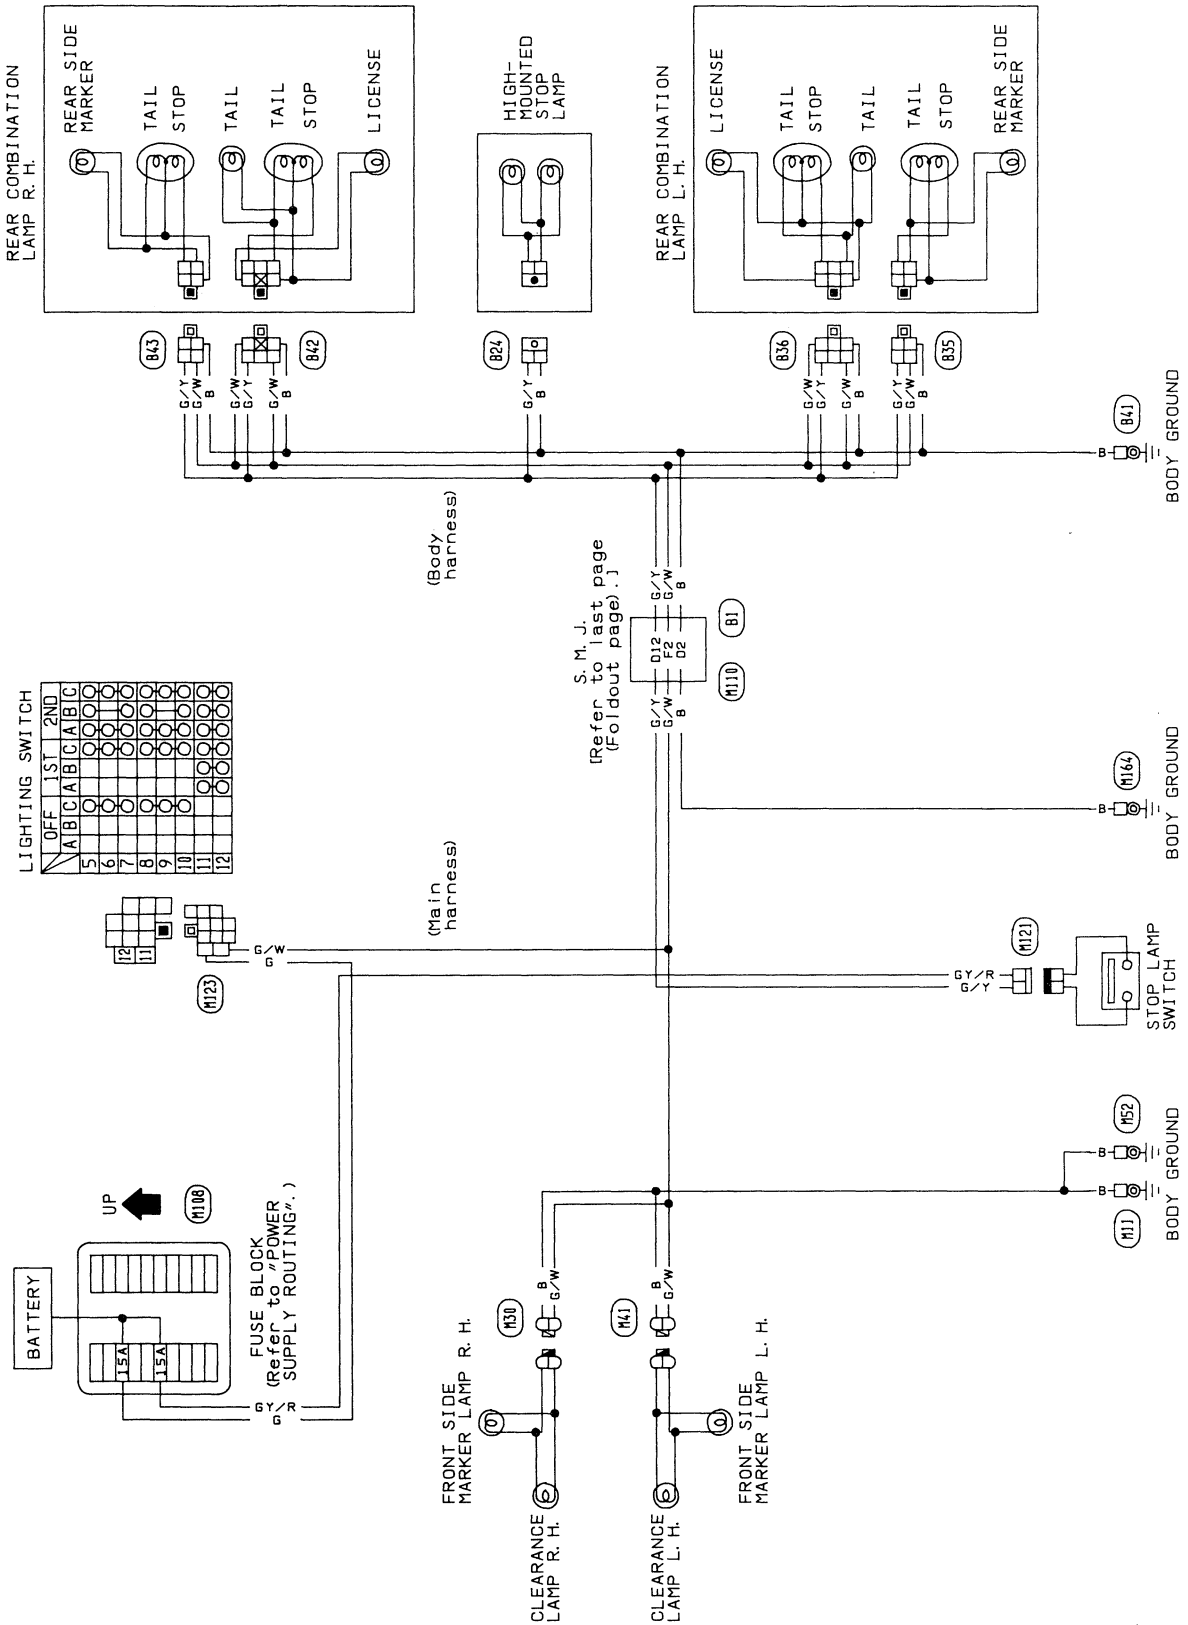


# EXTERIOR LAMP

## Back-up Lamp/Wiring Diagram

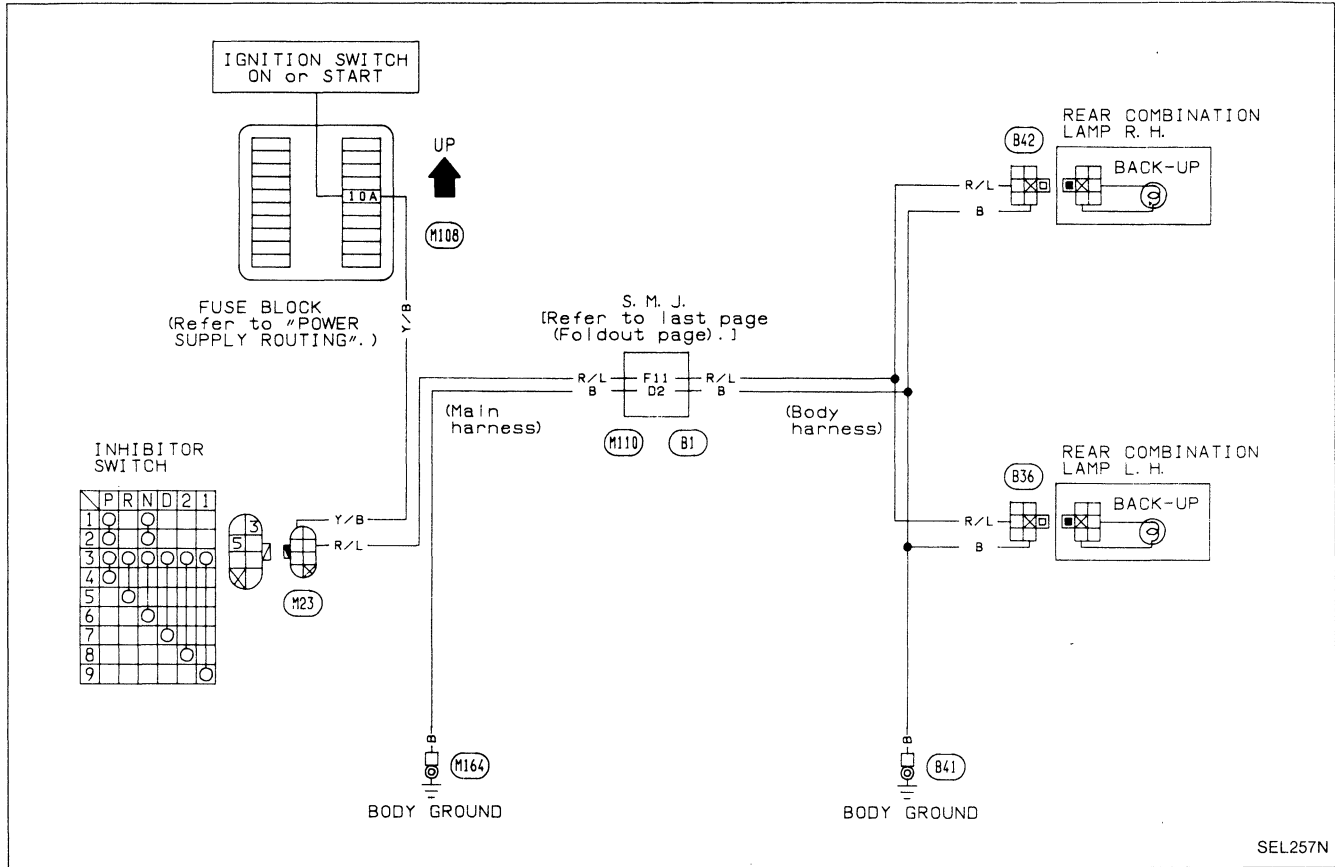


# EXTERIOR LAMP

## Turn Signal and Hazard Warning Lamps/Wiring Diagram

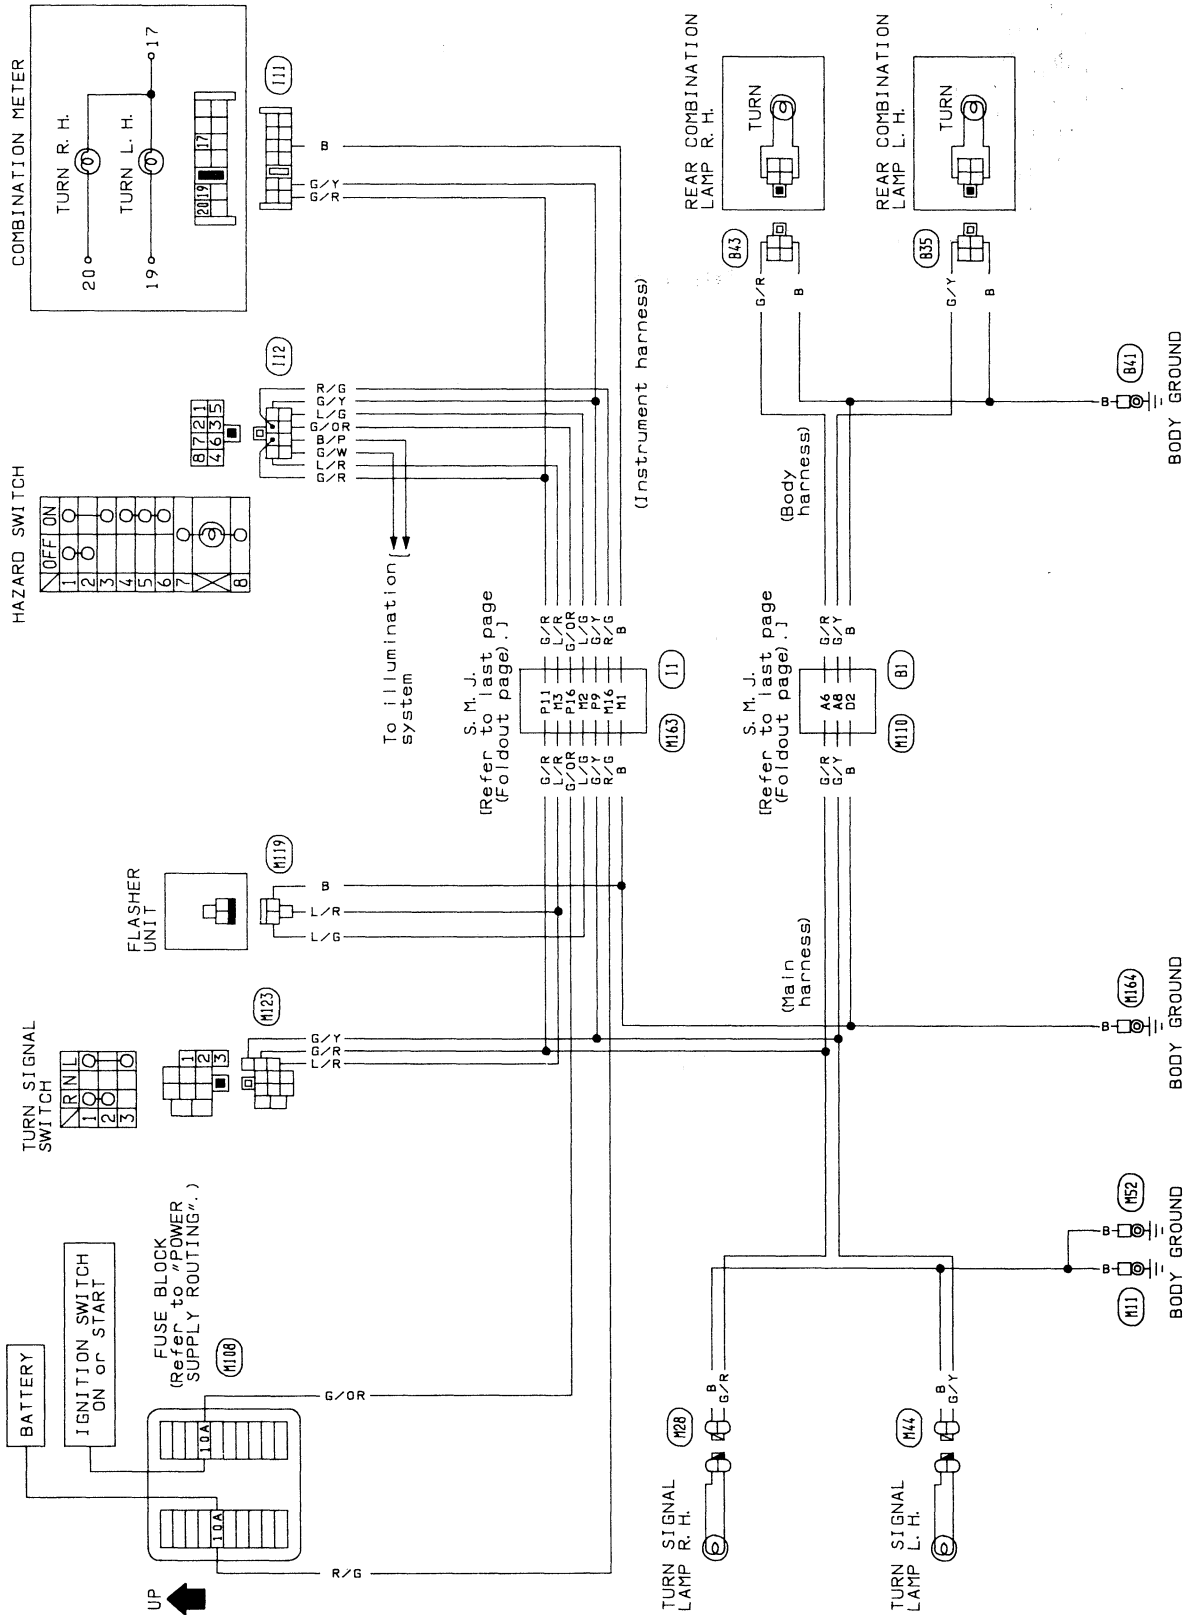

## EXTERIOR LAMP

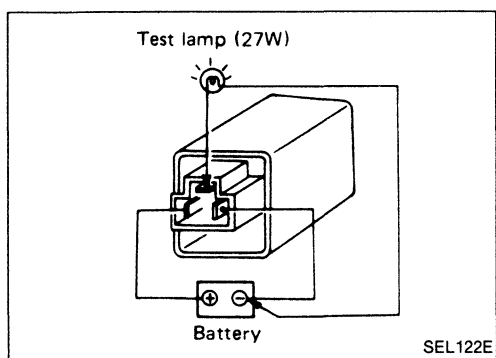

### Combination Flasher Unit Check


- Before checking, ensure that bulbs meet specifications.
- Connect a battery and test lamp to the combination flasher unit, as shown. Combination flasher unit is properly functioning if it blinks when power is supplied to the circuit.

### Bulb Specifications

	Wattage (12 volt)	Bulb No.
Headlamp (Semi-sealed beam)		
High (Inside)	65	9005
Low (Outside)	55	9006
Front turn signal lamp	27	1156
Front clearance lamp	3.8	194
Front side marker lamp	3.8	194
Rear combination lamp		
Turn signal	27	1156
Stop/Tail	27/8	1157
Tail	3.8	194
Back-up	27	1156
Rear side marker lamp	3.8	194
License plate lamp	8	67
High-mounted stop lamp	18	921
Interior lamp	10	—
Spot lamp	10	—
Step lamp	3.4	—
Trunk room lamp	3.4	158


# INTERIOR LAMP

## Illumination/Wiring Diagram

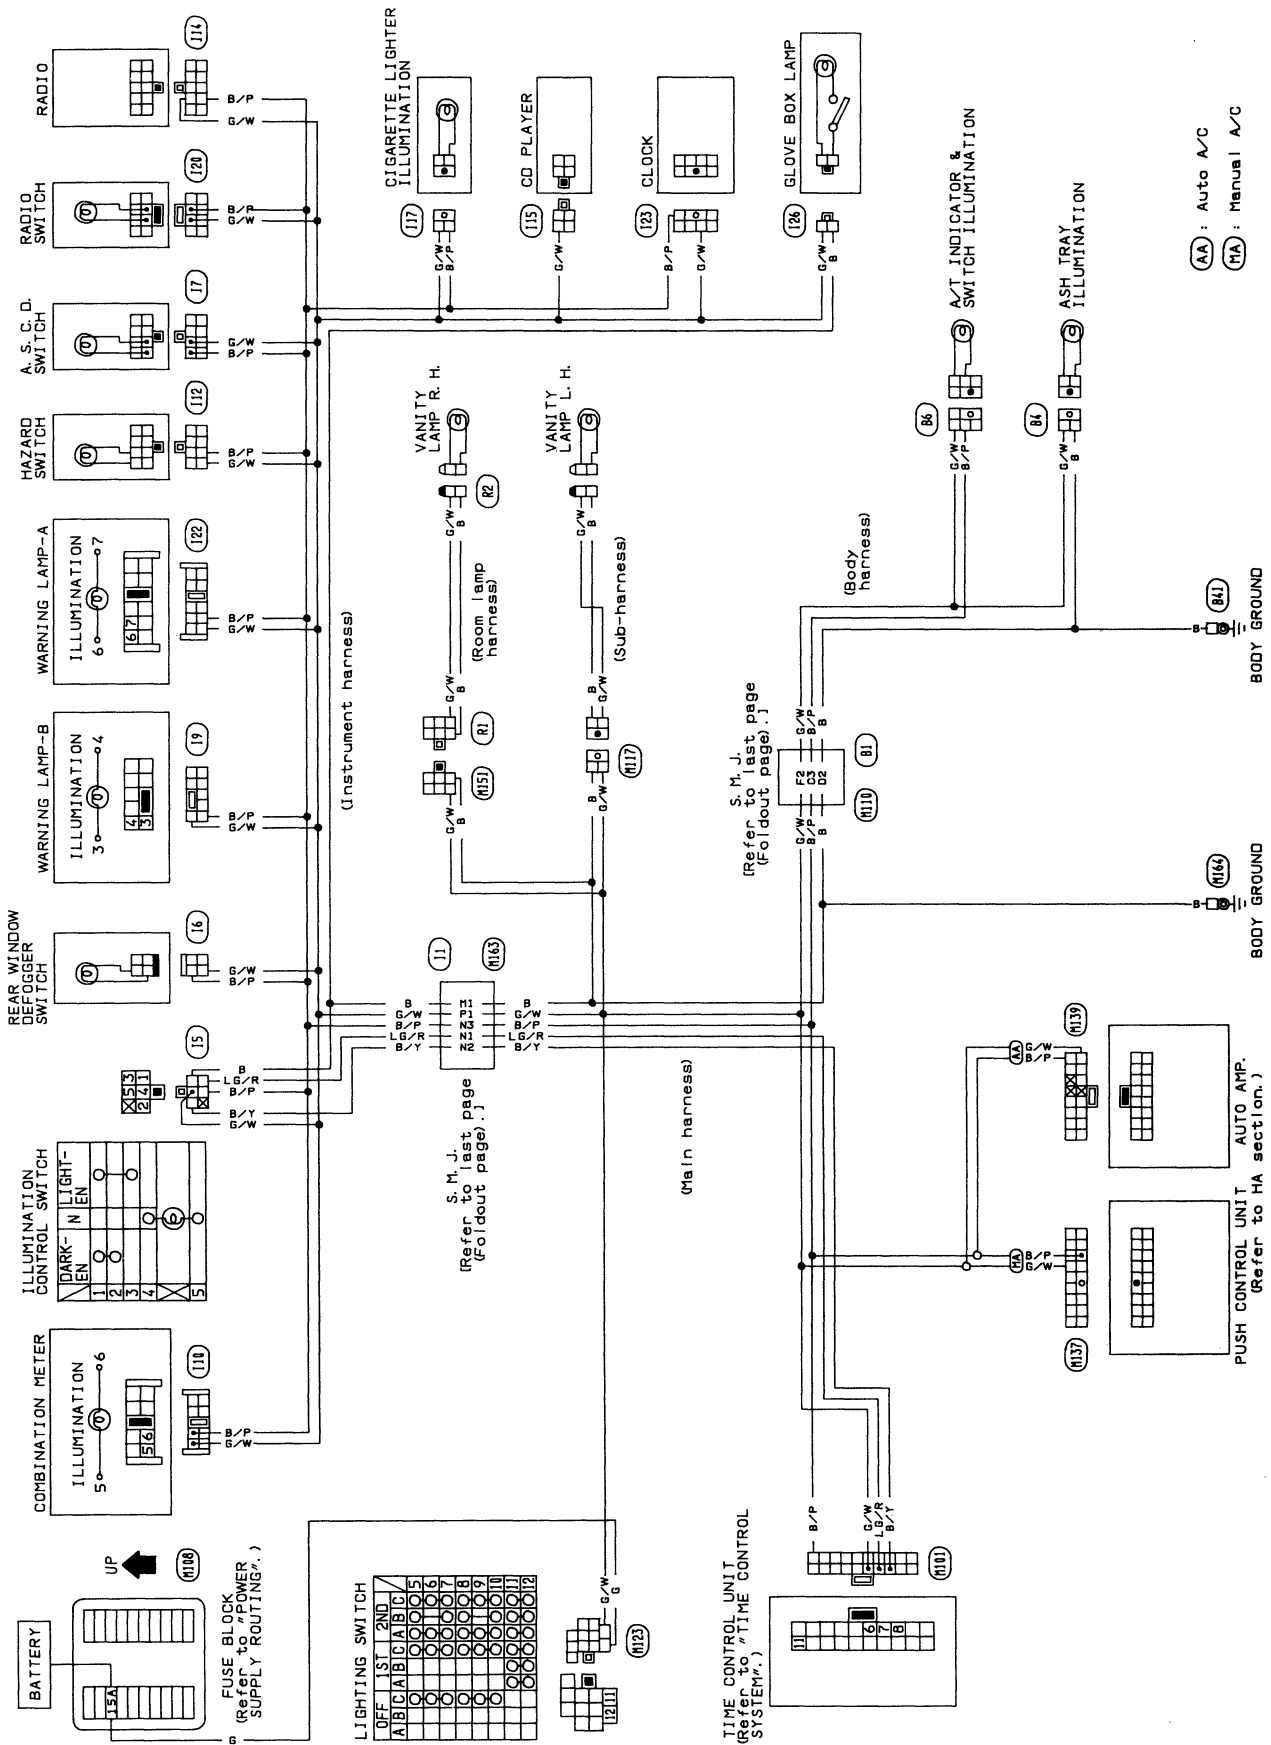




# INTERIOR LAMP

## Interior, Spot, Step and Trunk Room Lamps/Wiring Diagram

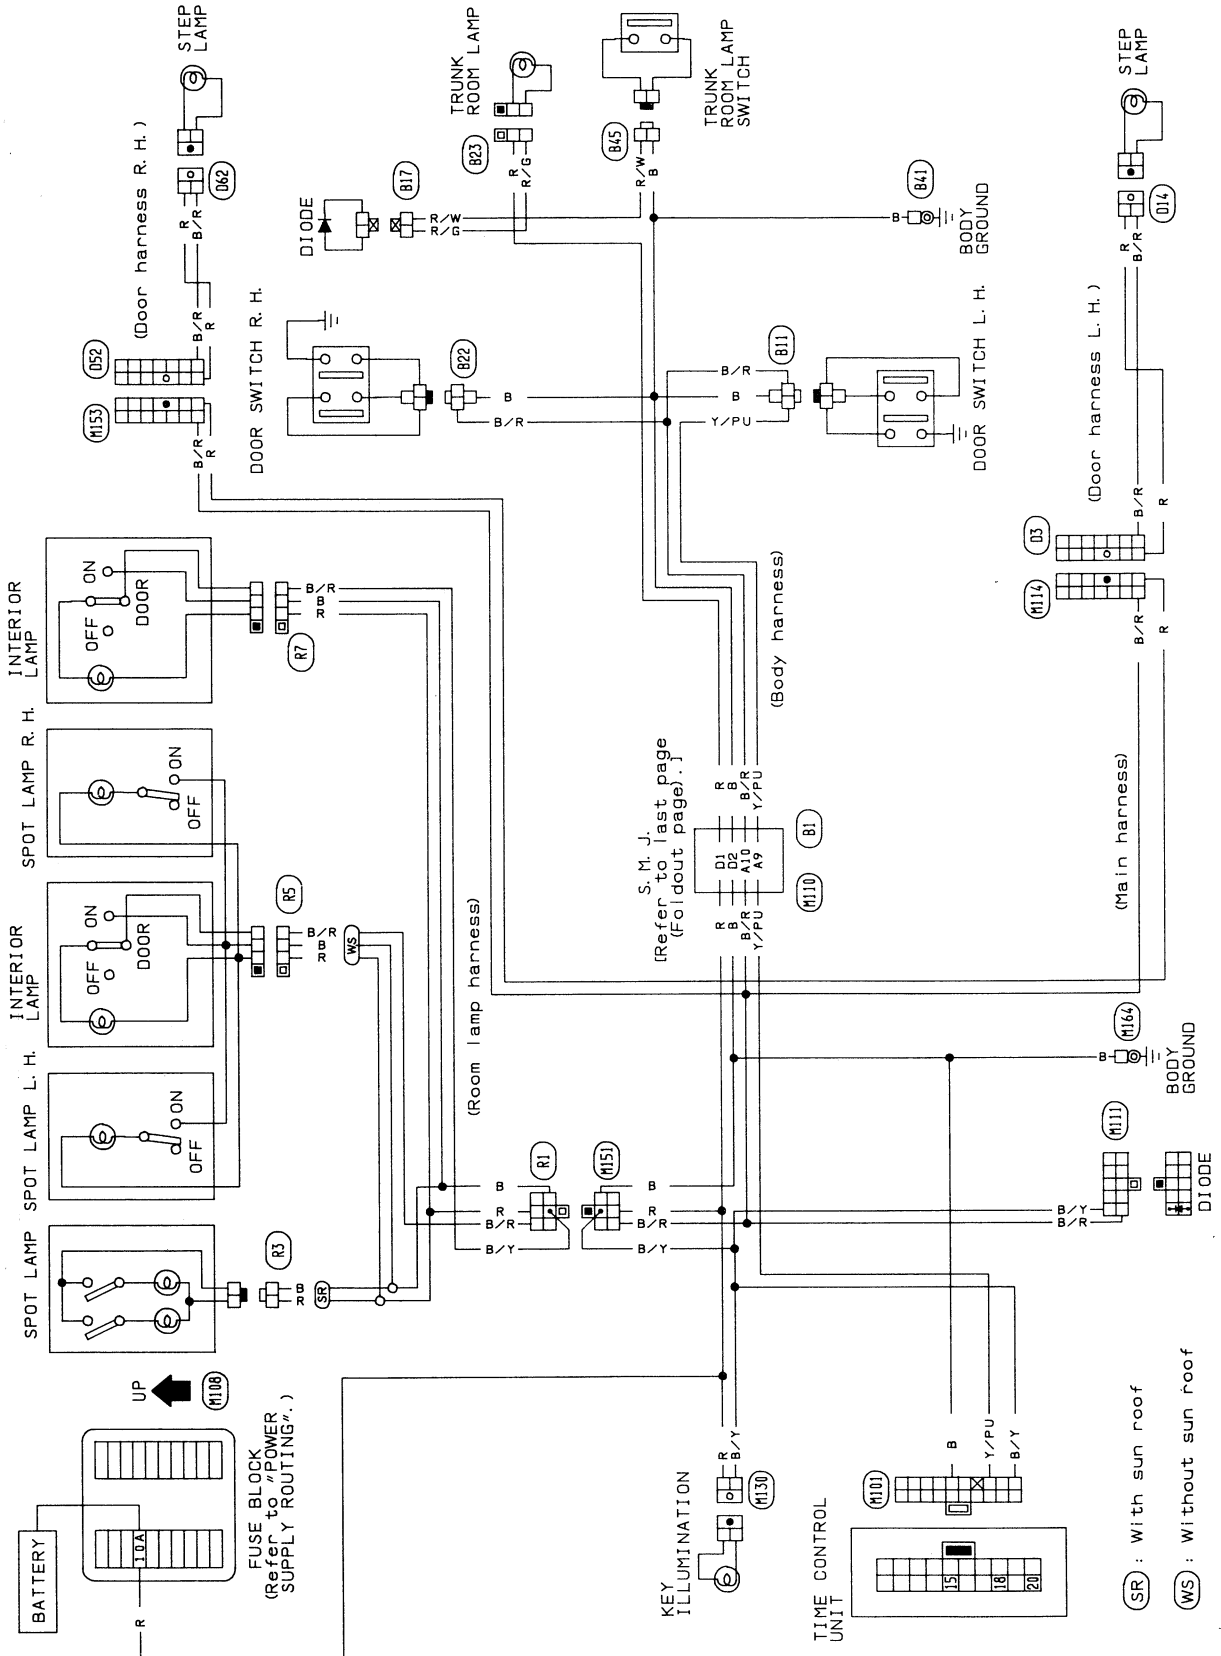

# METER AND GAUGES

## Combination Meter

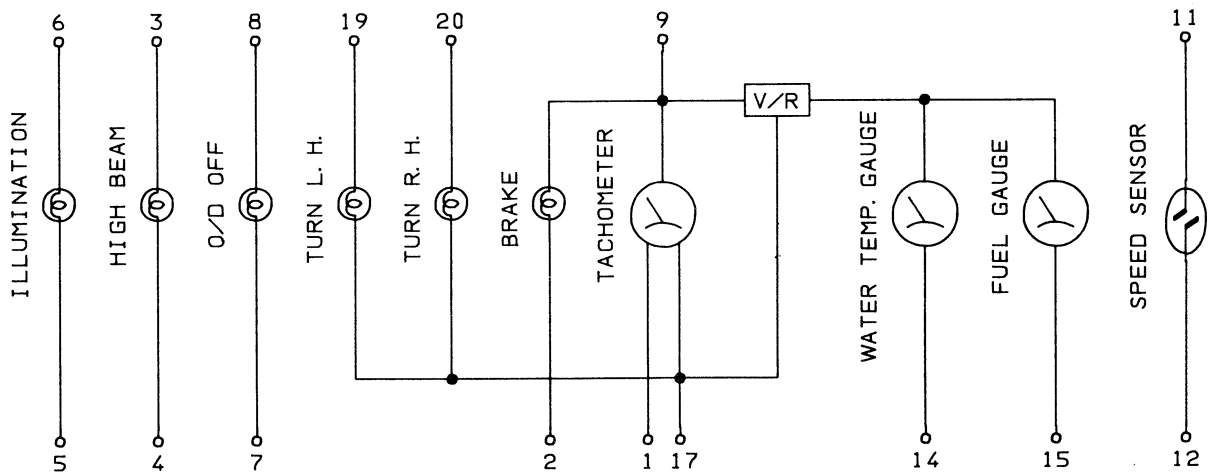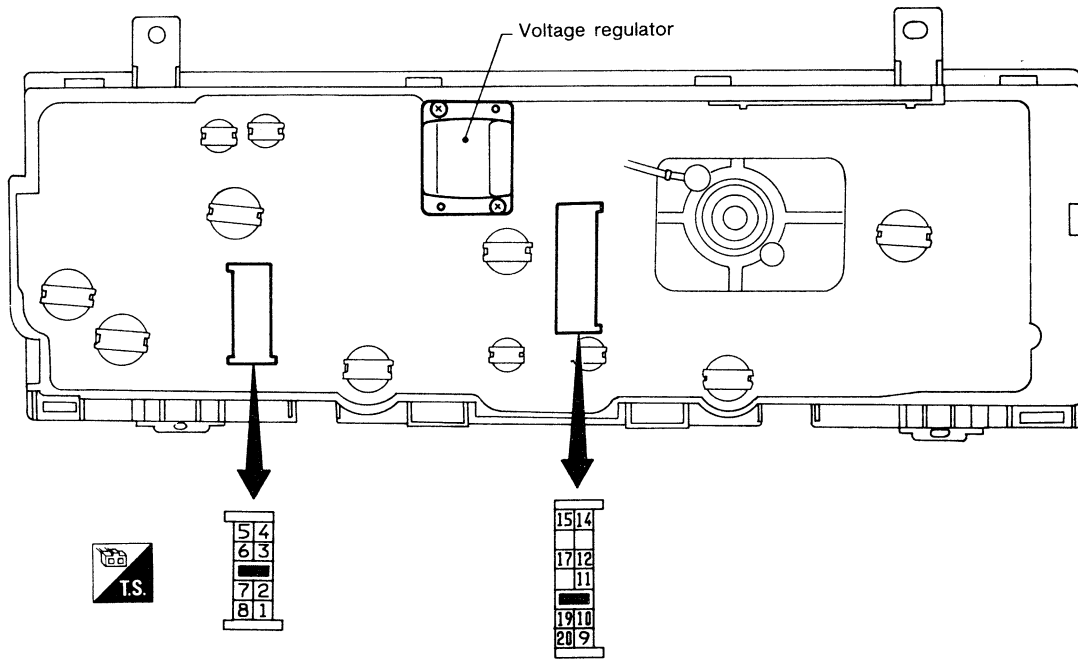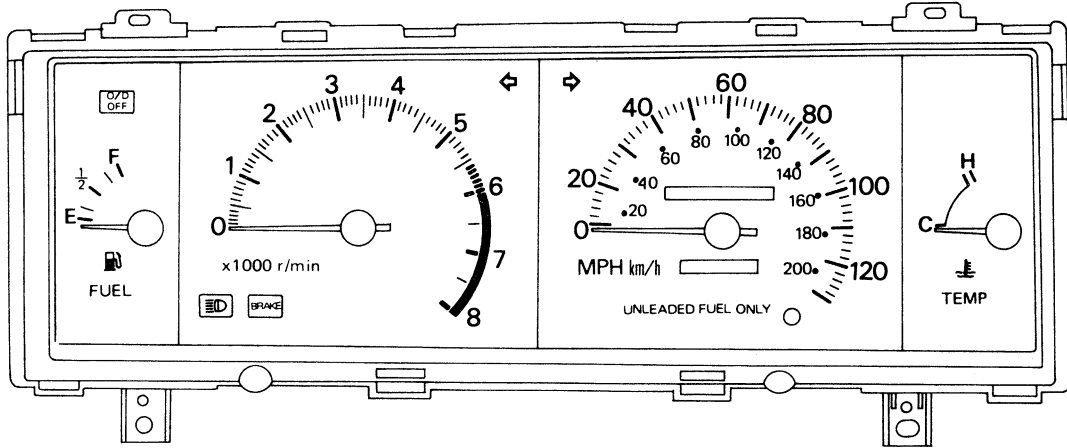


SEL488N




# METER AND GAUGES

## Tachometer, Temp., and Fuel Gauges/Wiring Diagram

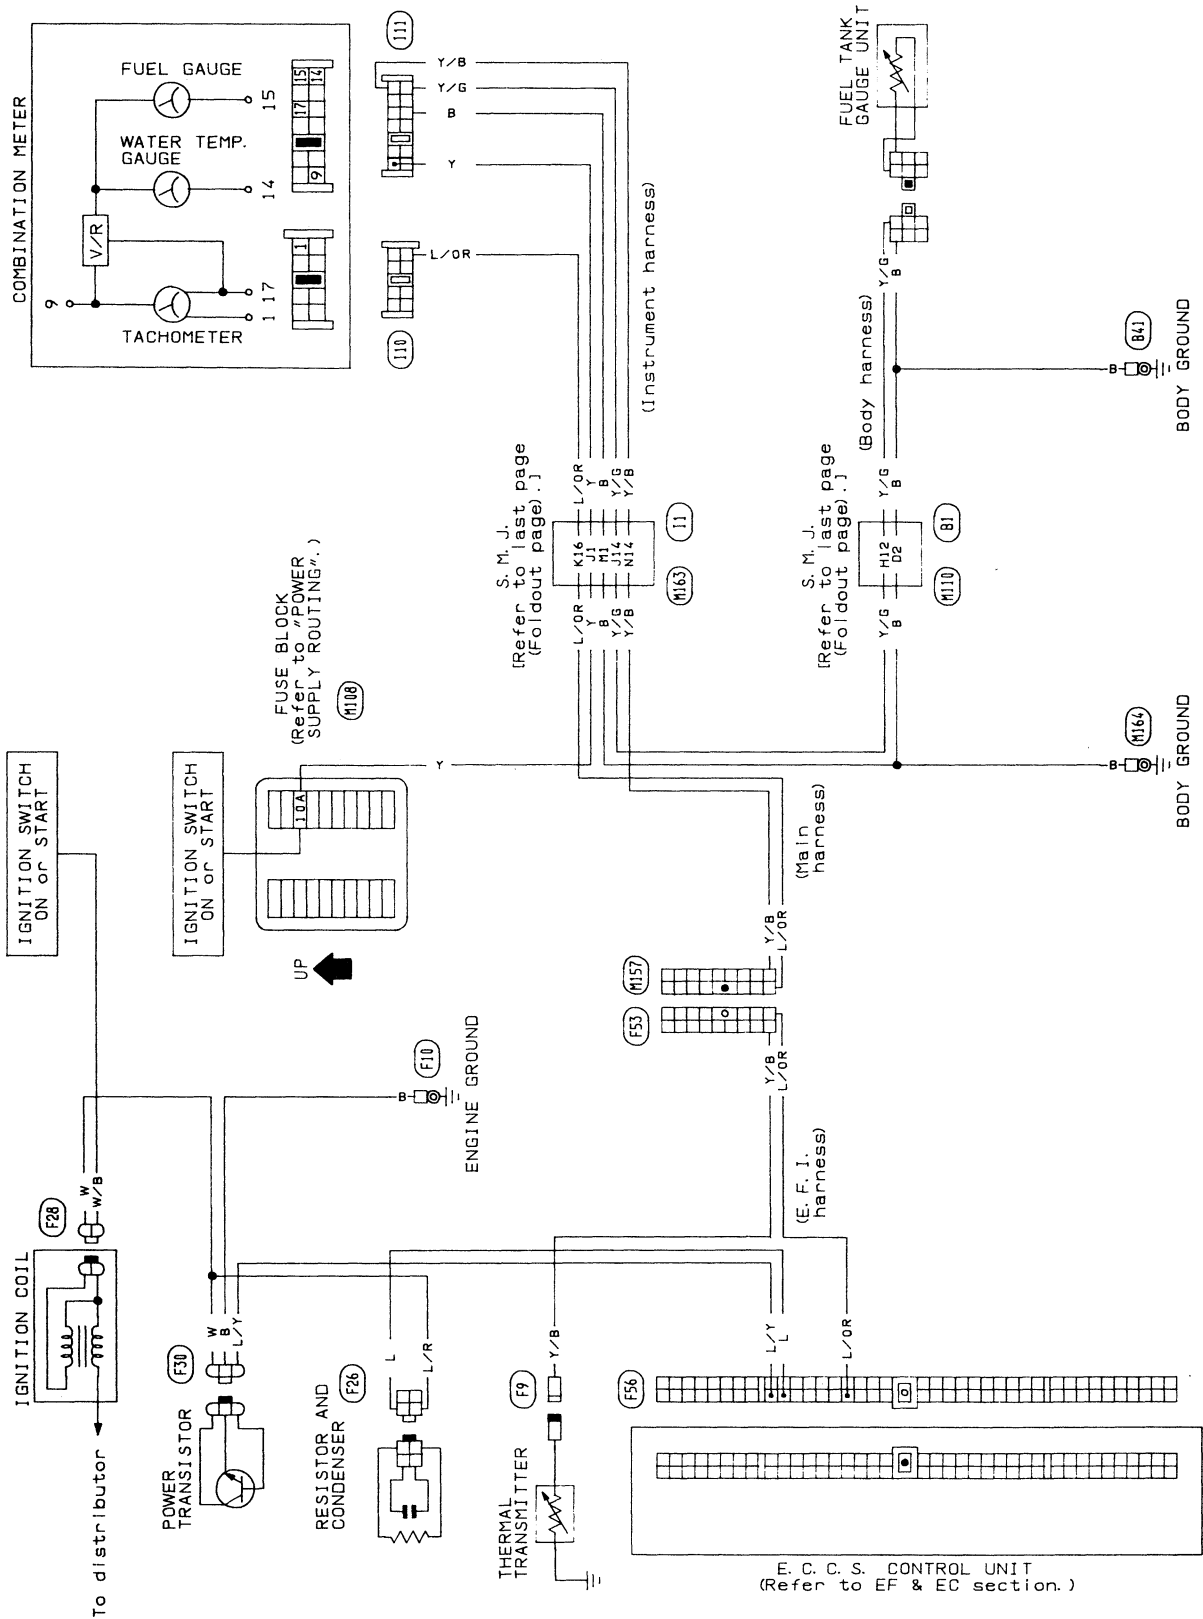

# METER AND GAUGES

## Inspection/Fuel Gauge and Water Temperature Gauge

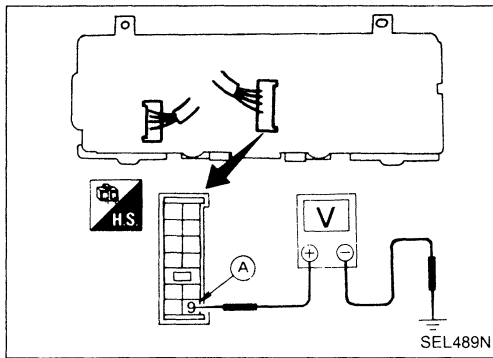

INSPECTION START


**CHECK POWER SOURCE**

- 1) Turn ignition switch "ON".
- 2) Check voltage between terminal **A** and ground.

**Battery voltage should exist.**

N.G. → Check the following items.

- 1) Harness continuity between battery terminal and combination meter
- 2) Ignition relay-1
- 3) Fusible link and fuse
- 4) Ignition switch

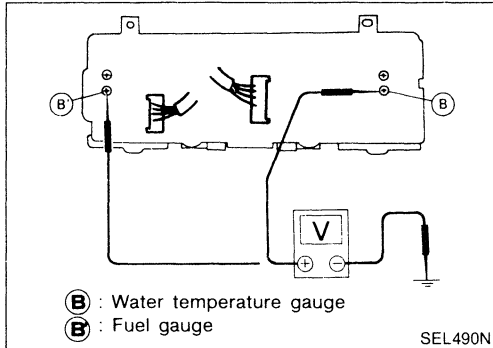


**CHECK OUTPUT VOLTAGE**

- 1) Turn ignition switch "ON".
- 2) Check voltage between terminal **B** and ground.

**Approx. 8 volts should exist.**

N.G. → Check the following items.

- 1) Printed circuit of combination meter
- 2) Voltage regulator

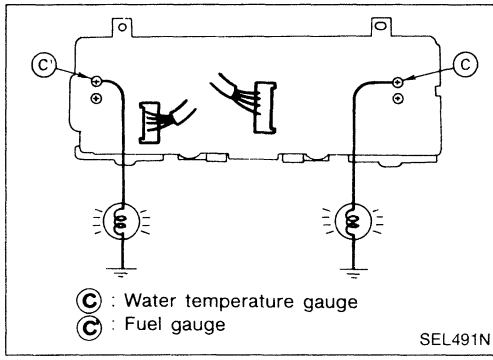

**CHECK GAUGE OPERATION**


- 1) Turn ignition switch "ON".
- 2) Connect terminal **C** and ground with wire through 3.4 W test bulb.
- 3) Check operation of gauge.

**Gauge should move smoothly to full scale.**

N.G. → Repair or replace gauge.

Check harness continuity between component and combination meter **D**.

N.G. → Repair or replace.

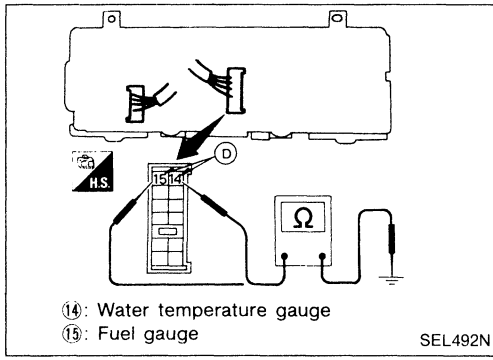

**CHECK COMPONENT**

Check gauge units and harness.

**Refer to "Fuel Tank Gauge Unit Check", "Thermal Transmitter Check".**

N.G. → Repair or replace.


**Refer to FE section. (Fuel tank gauge unit)**

Reinstall any part removed.

INSPECTION END

## Fuel Tank Gauge Unit Check


- For removal, refer to FE section.
- Check the resistance between terminals **G** and **E**.

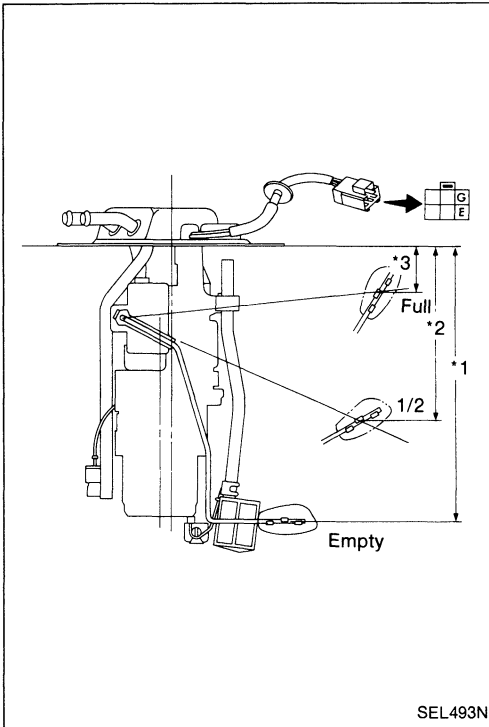

Ohmmeter		Float position			Resistance value ( $\Omega$ )
(+)	(-)		mm (in)		
G	E	*3	Full	33.9 (1.335)	Approx. 6.7 - 8.3
		*2	1/2	106.0 (4.17)	Approx. 29.7 - 36.4
		*1	Empty	187.7 (7.39)	Approx. 86.6 - 93.7


## Fuel Warning Lamp Sensor Check

- It will take a short time for the bulb to light.

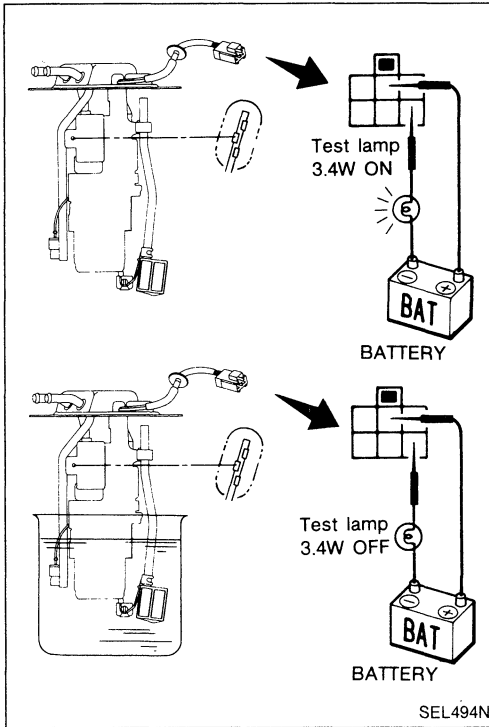


## Thermal Transmitter Check

- Check the resistance between the terminals of thermal transmitter and body ground.

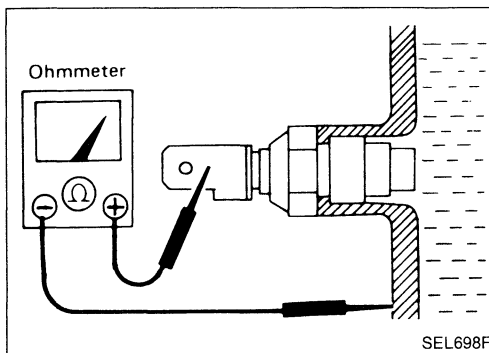

Water temperature	Resistance
60°C (140°F)	Approx. 20 - 90 $\Omega$
100°C (212°F)	Approx. 21 - 24 $\Omega$


## METER AND GAUGES

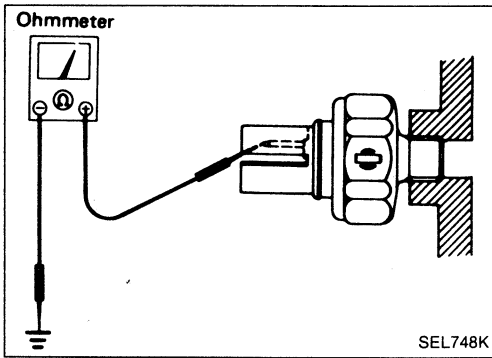

### Oil Pressure Switch Check


Check the continuity between the terminals of oil pressure switch and body ground.

	Oil pressure kPa (kg/cm <sup>2</sup> , psi)	Continuity
Engine start	More than 10 - 20 (0.1 - 0.2, 1.4 - 2.8)	NO
Engine stop	Less than 10 - 20 (0.1 - 0.2, 1.4 - 2.8)	YES

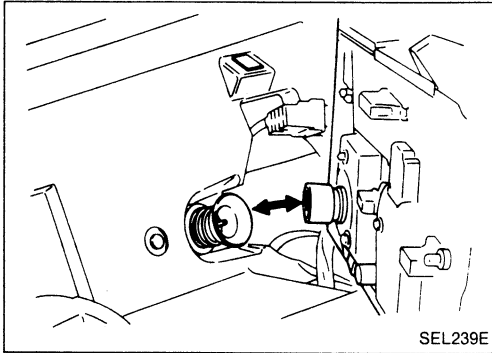

### Speedometer Cable Removal and Installation

Combination meter and speedometer cable can be joined together simply by inserting combination meter.

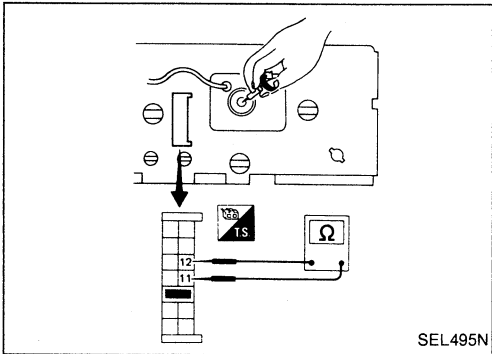


### Speed Sensor Signal Check

- A speed sensor is built into the speedometer.
- 1. Turn speedometer slowly using a small screwdriver.
- 2. Check continuity of speed sensor circuit.

**Continuity exists two times for each turn ... O.K.**


# WARNING LAMPS AND CHIME

## Warning Lamps/Schematic

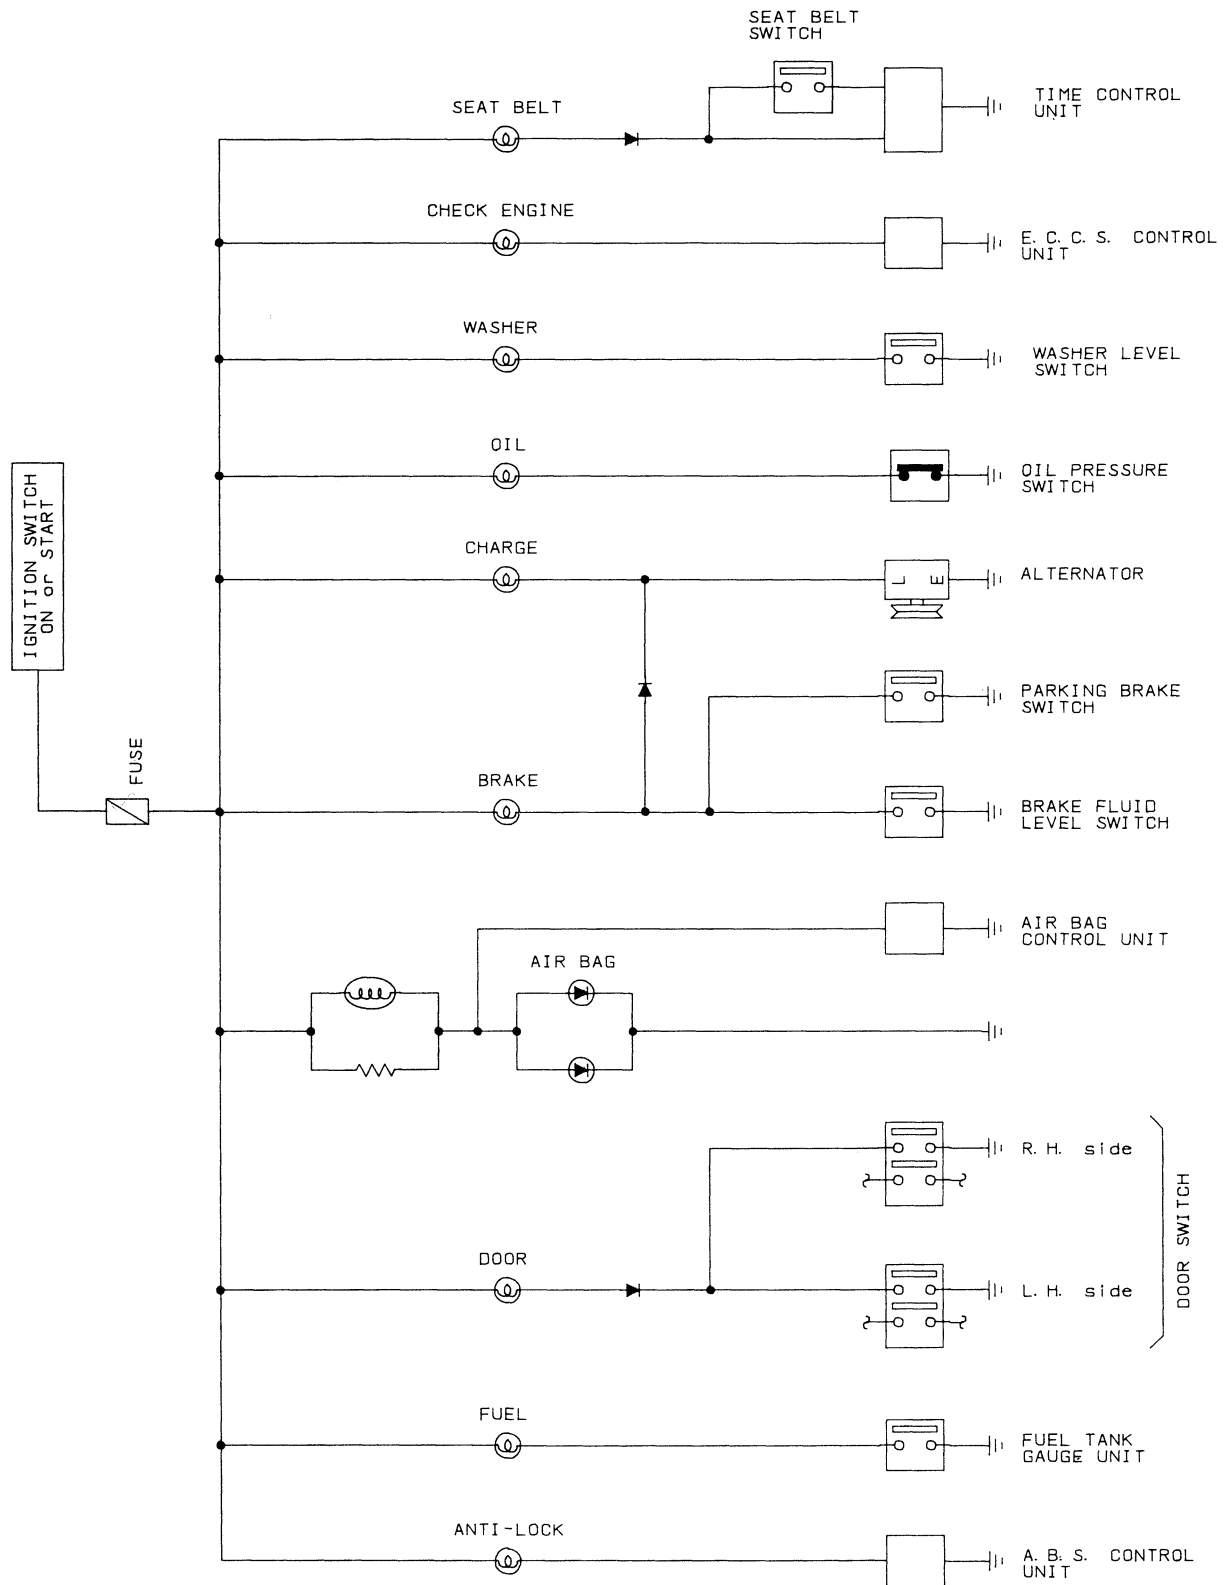


# WARNING LAMPS AND CHIME

## Warning Lamps/Wiring Diagram

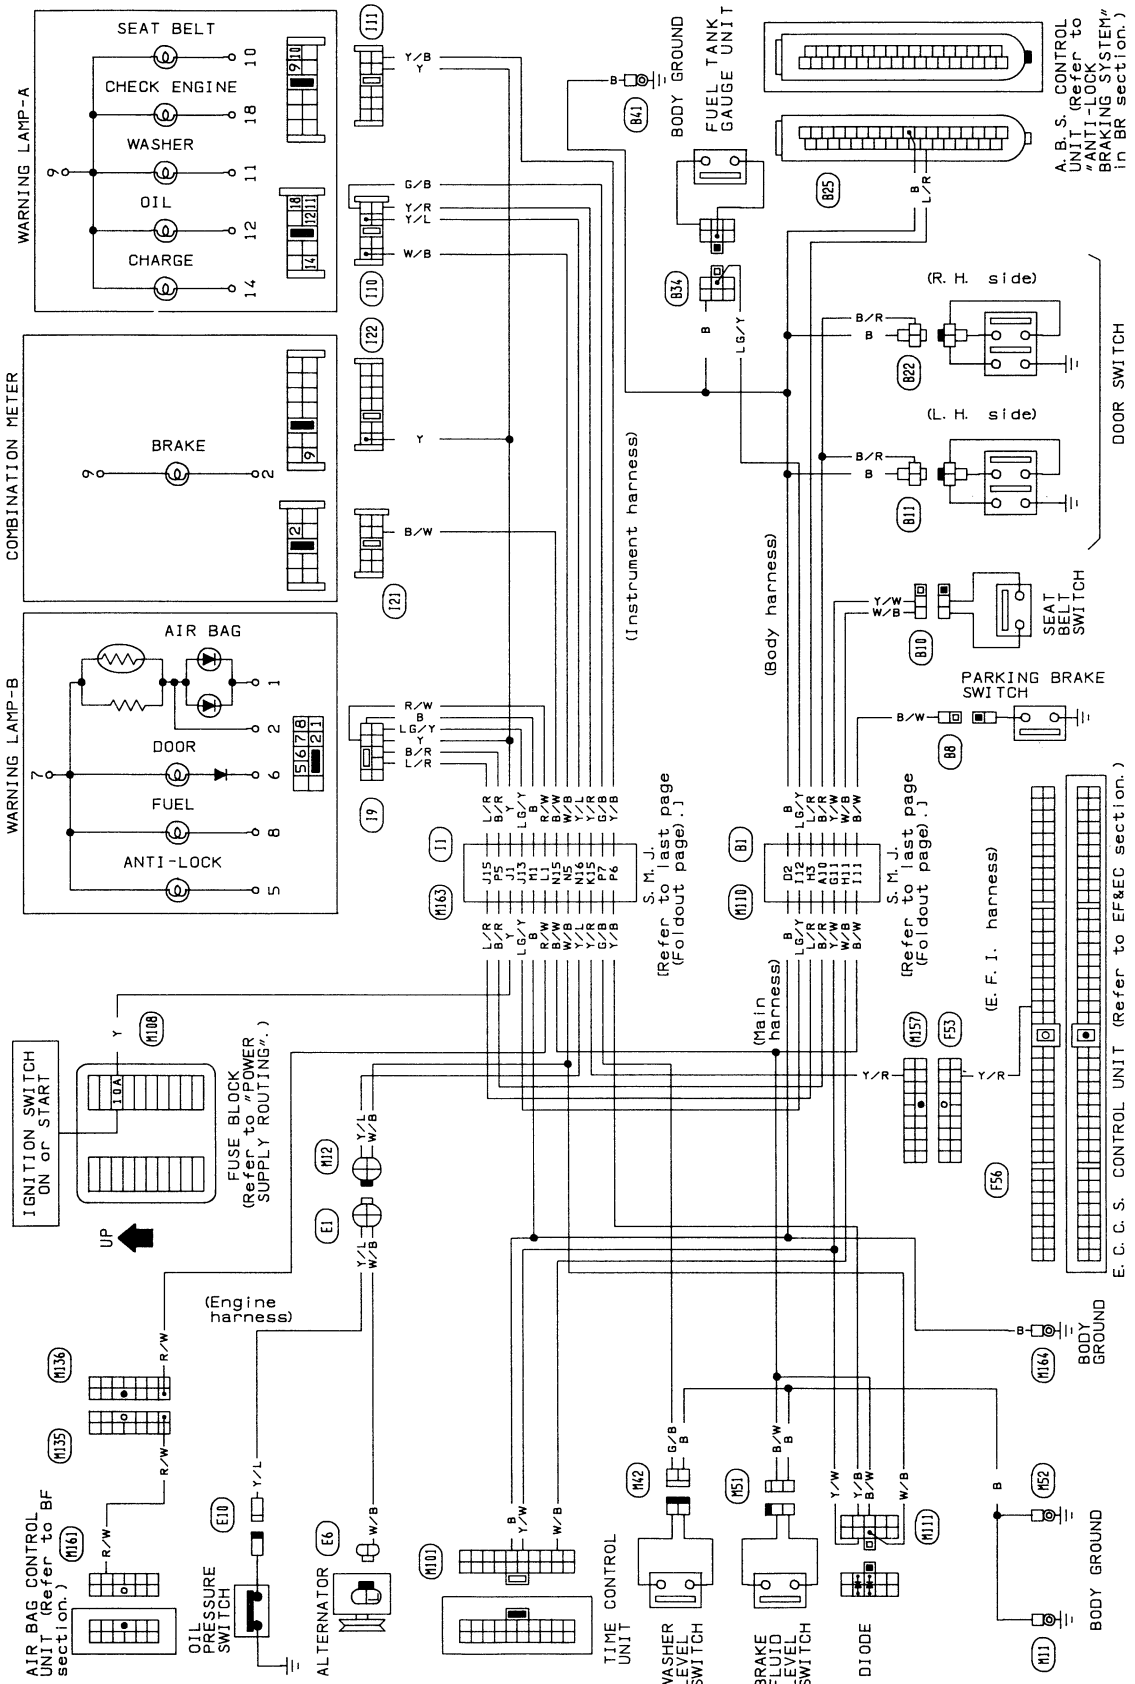

# WARNING LAMPS AND CHIME


## Warning Chime/Wiring Diagram

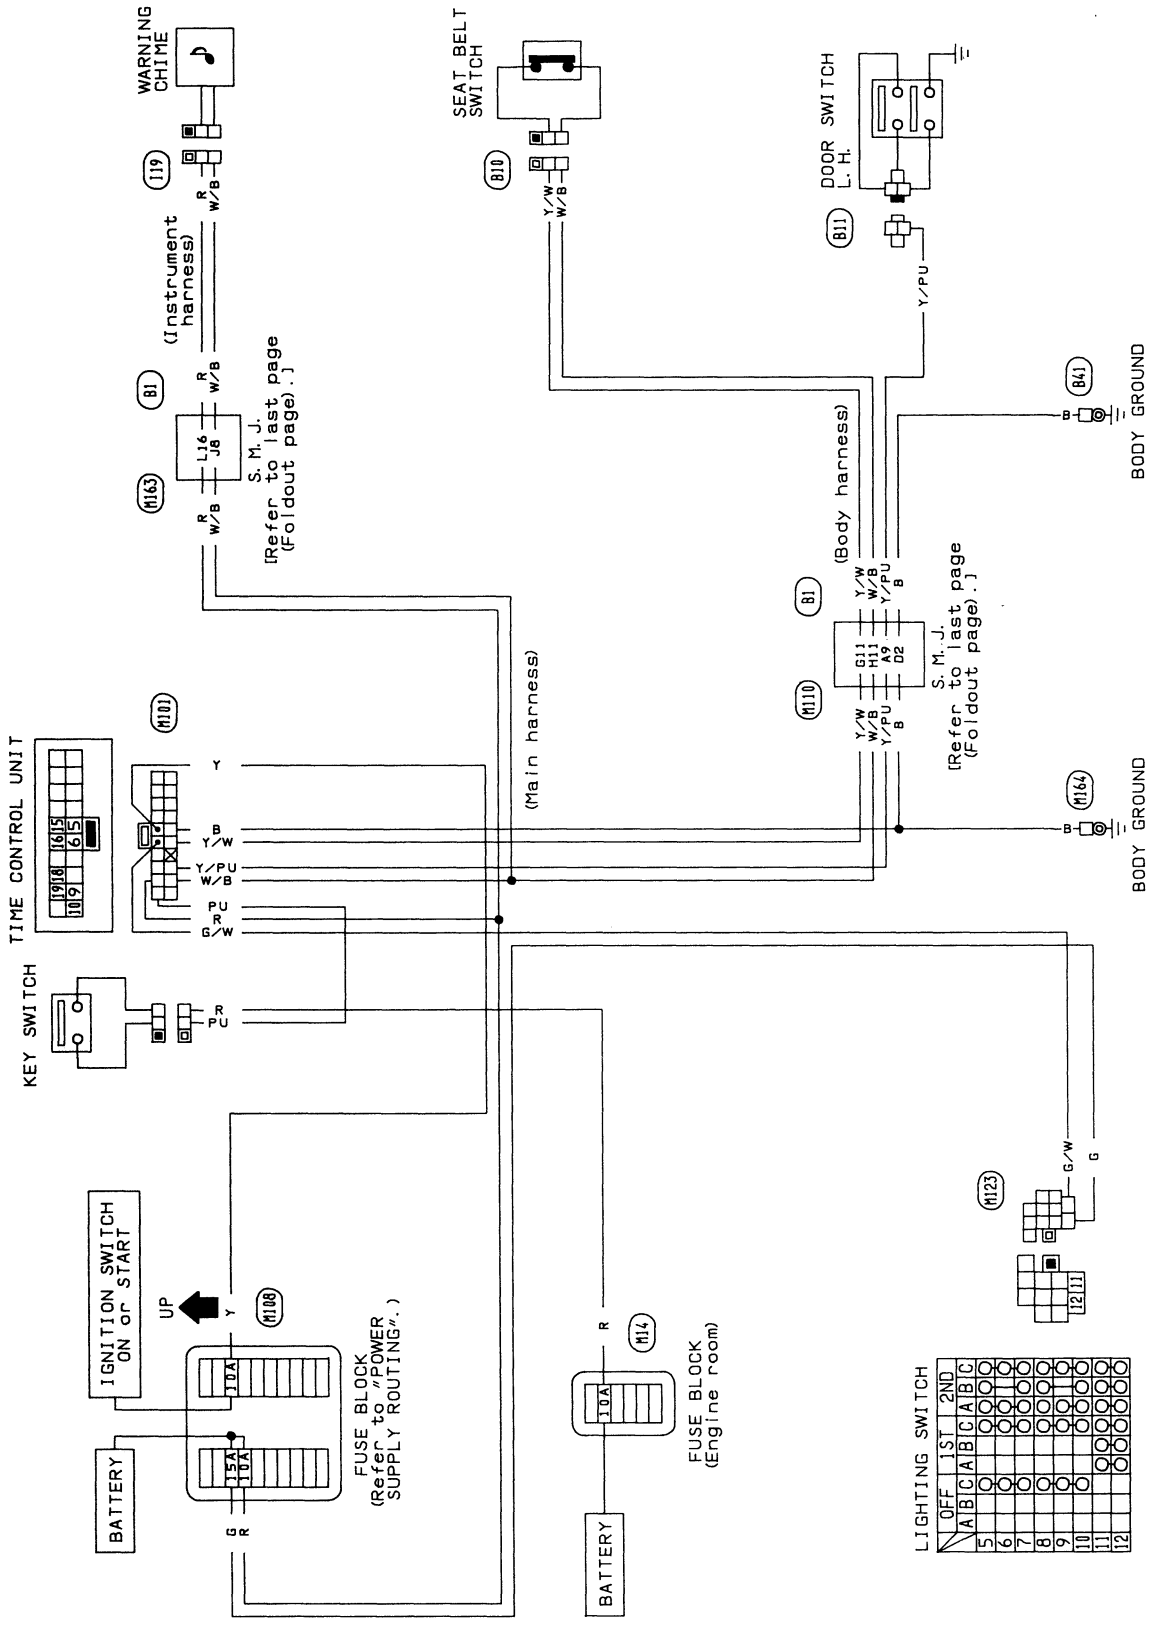

LIGHTING SWITCH


	OFF	1ST	2ND	A	B	C	A	B	C
5									
6									
7									
8									
9									
10									
11									
12									

## WARNING LAMPS AND CHIME

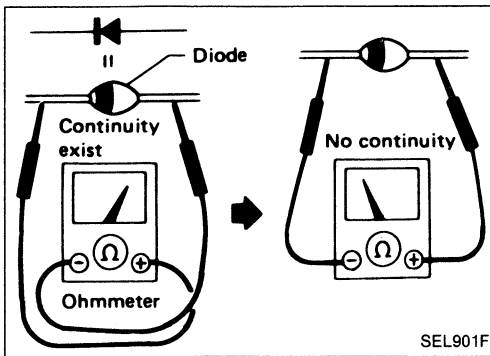


### Diode Check

- Check continuity using an ohmmeter.
- Diode is functioning properly if test results are as shown in the figure at left.

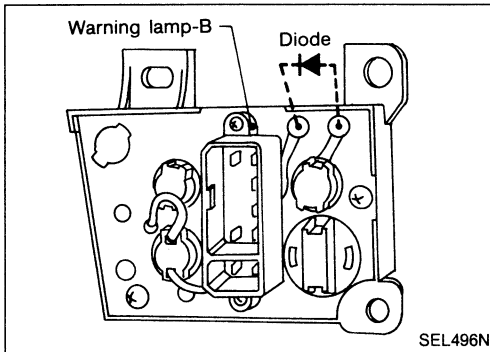

- Diode for warning lamp is built into the warning lamp-B printed circuit.

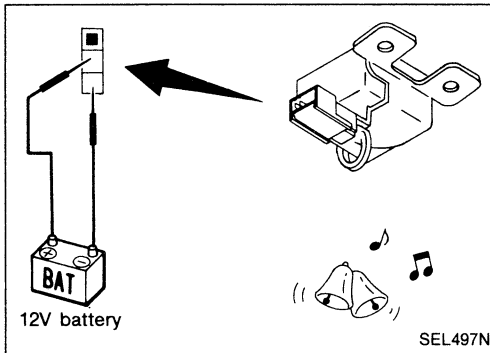

### Warning Chime Check



# TIME CONTROL SYSTEM

## Description


### FUNCTION

- Time control unit has the following functions.

Item		Details of control
1, 2	Intermittent wiper control	Regulates intermittent time from approximately 3 to 23 seconds depending on the intermittent wiper volume setting.
3	Washer and wiper combination control	Wiper is operated in conjunction with washer switch.
4	Light warning chime timer	When driver's door is opened with light switch ON and ignition switch OFF, warning chime sounds.
5	Ignition key warning chime timer	When driver's door is opened with ignition switch OFF, warning chime sounds.
6	Seat belt warning chime timer	Sounds warning chime for about 7 seconds if ignition switch is turned "ON" when seat belt switch is "ON" (seat belt is unfastened).
7	Seat belt warning lamp timer	Seat belt warning lamp blinks for about 7 seconds when ignition switch is turned to "ON".
8	Rear defogger timer	Rear defogger operates for about 15 minutes when defogger switch is ON.
9	Interior lamp timer	Fades out interior lamp when driver's side door is opened and closed.
10	Illumination control	Regulates brightness of illumination in 16 stages depending on the illumination control switch setting.

# TIME CONTROL SYSTEM

## Wiring Diagram

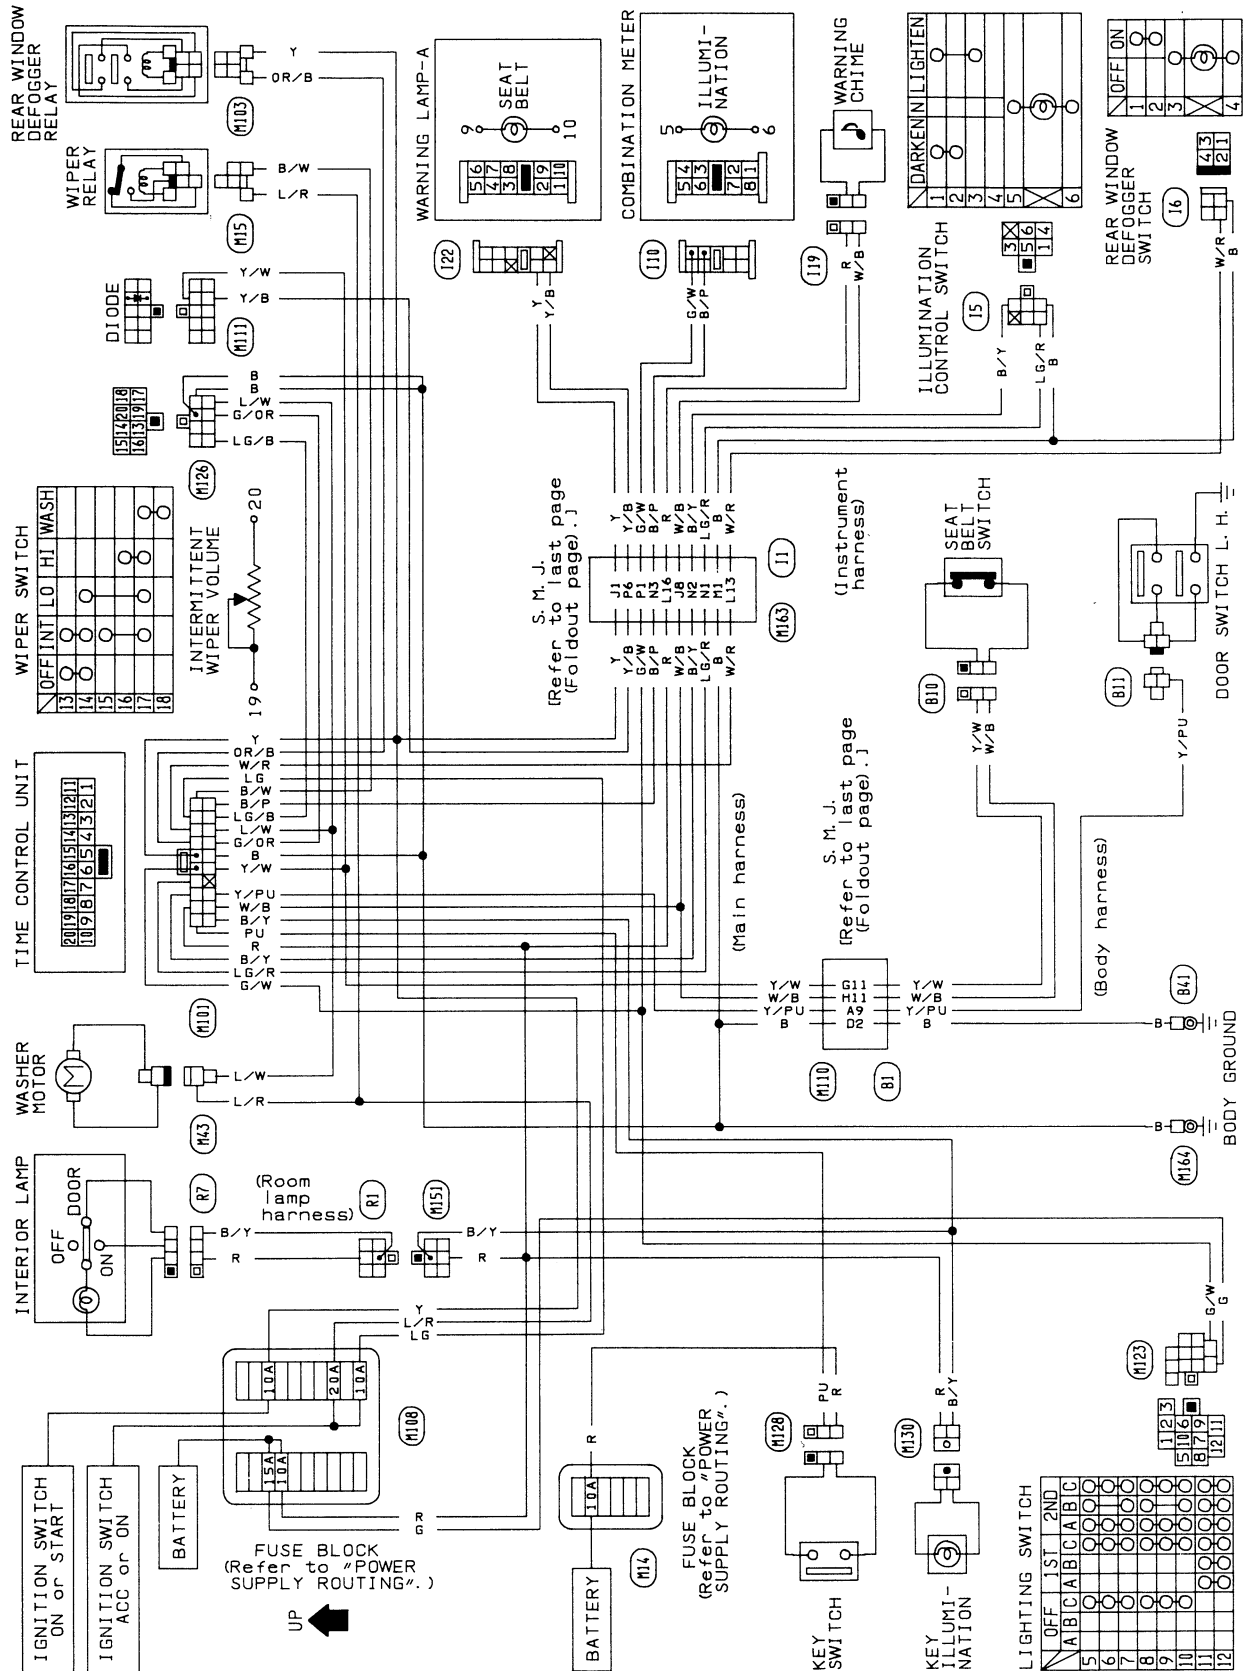

# TIME CONTROL SYSTEM

## Trouble Diagnoses

### SYMPTOM CHART

PROCEDURE	Preliminary Check			Main Power Supply and Ground Circuit Check	Diagnostic Procedure										
	REFERENCE PAGE	EL-58	EL-58		EL-58	EL-59	EL-61	EL-61	EL-62	EL-62	EL-63	EL-64	EL-64	EL-65	EL-65
SYMPTOM	Procedure 1	Procedure 2	Procedure 3	Main Power Supply and Ground Circuit	Diagnostic Procedure 1	Diagnostic Procedure 2	Diagnostic Procedure 3	Diagnostic Procedure 4	Diagnostic Procedure 5	Diagnostic Procedure 6	Diagnostic Procedure 7	Diagnostic Procedure 8	Diagnostic Procedure 9	Diagnostic Procedure 10	
Wiper & washer	Intermittent wiper does not operate.			○	○										
	Intermittent time of wiper cannot be adjusted.					○									
	Wiper and washer activate individually but not in combination.						○								
Warning	Light warning chime does not activate.	○		○				○							
	Ignition key warning chime does not activate.		○	○					○						
	Seat belt warning chime does not activate.			○	○					○					
	Seat belt warning lamp does not come on, or does not go off after coming on.				○						○				
Rear defogger	Rear defogger does not activate, or go off after activating.			○								○			
Illumination	Interior lamp does not fade out after driver's door is closed.			○									○		
	Illumination control system does not actuate.														○


# TIME CONTROL SYSTEM

## Trouble Diagnoses (Cont'd)

### PRELIMINARY CHECK


#### Procedure 1

- Light warning chime does not activate.

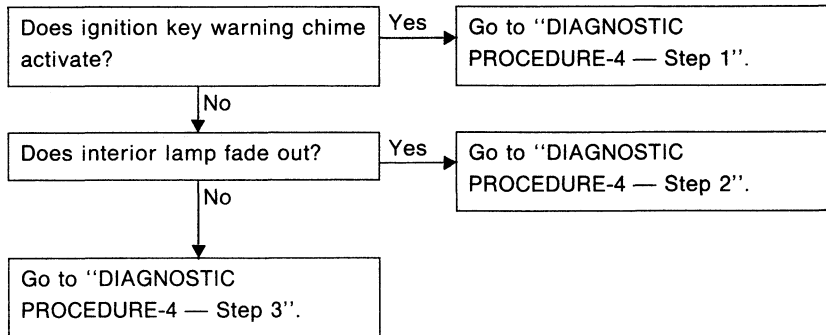


#### Procedure 2

- Ignition key warning chime dose not activate.

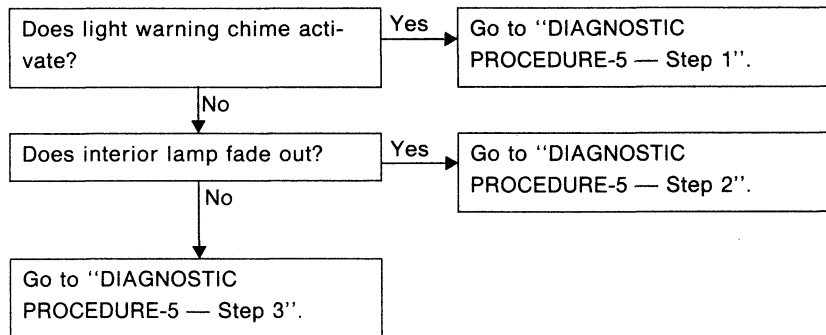

#### Procedure 3


- Seat belt warning chime does not activate.

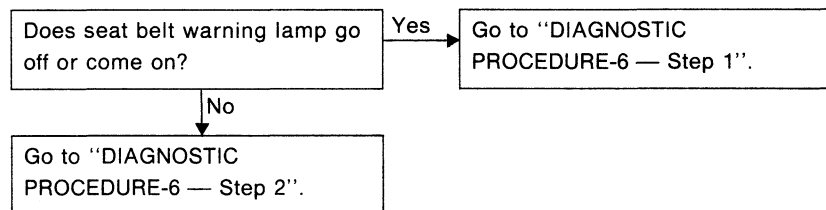

# TIME CONTROL SYSTEM


## Trouble Diagnoses (Cont'd)

### MAIN POWER SUPPLY AND GROUND CIRCUIT CHECK

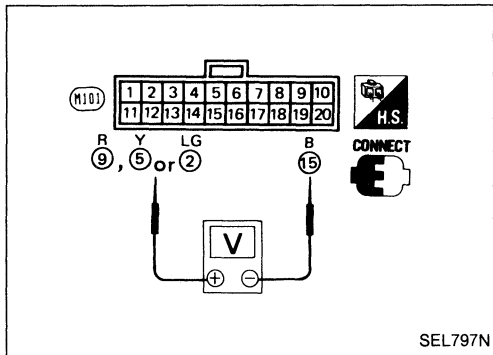

#### Main power supply

Terminals	Battery voltage existence condition		
	Ignition switch position		
	OFF	ACC	ON
⑨ - ⑮	Yes	Yes	Yes
⑤ - ⑮	No	No	Yes
② - ⑮	No	Yes	Yes

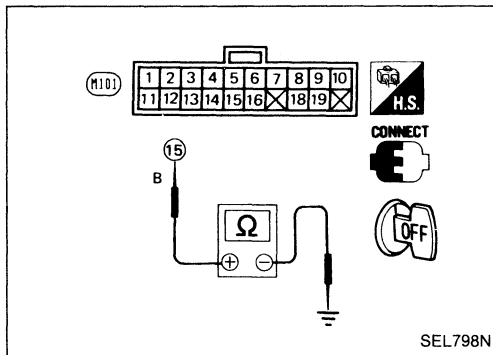


#### Ground circuit

Terminals	Continuity
⑮ - Ground	Yes

# TIME CONTROL SYSTEM

## Trouble Diagnoses (Cont'd)

### CIRCUIT DIAGRAM FOR QUICK PINPOINT CHECK




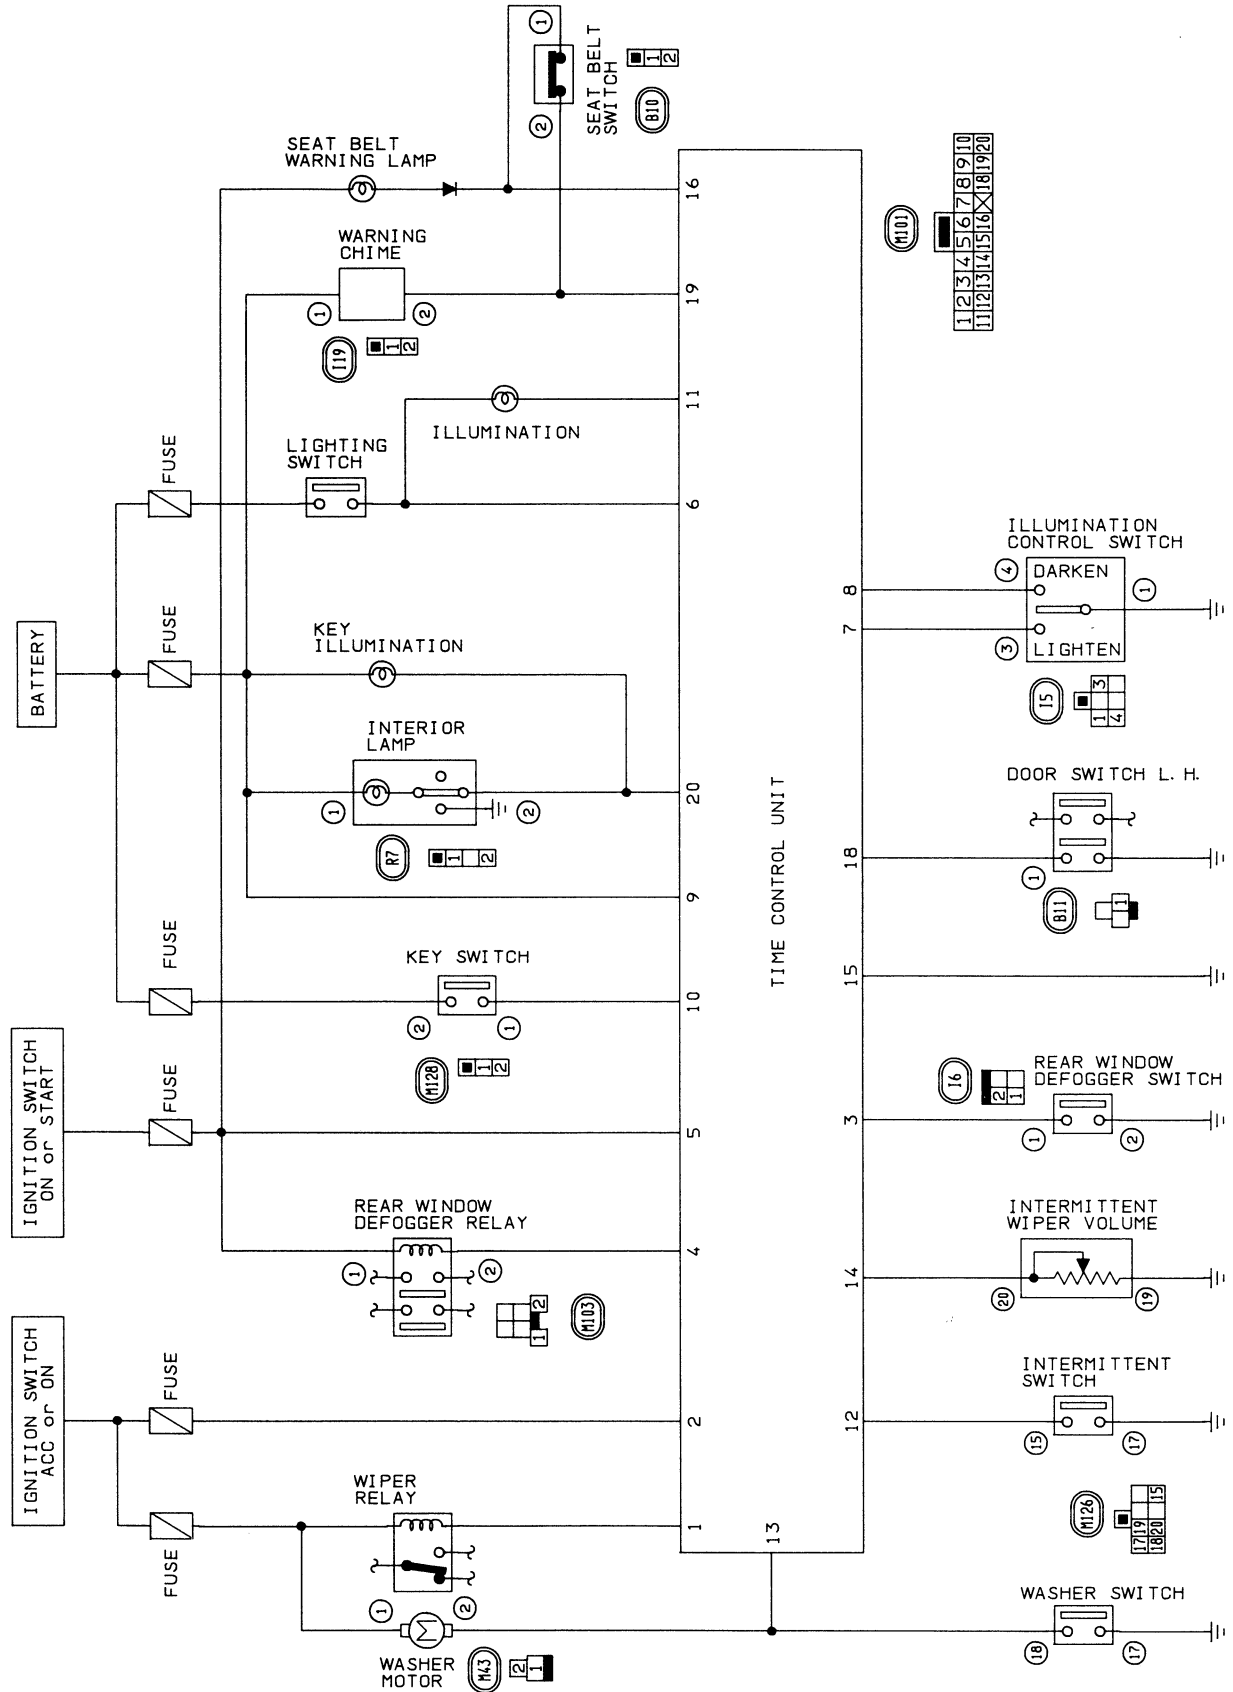


# TIME CONTROL SYSTEM

## Trouble Diagnoses (Cont'd)


### DIAGNOSTIC PROCEDURE-1

**SYMPTOM: Intermittent wiper does not operate.**

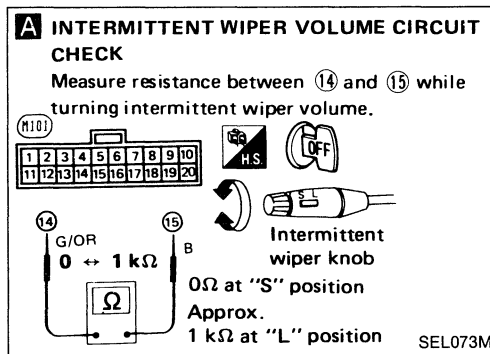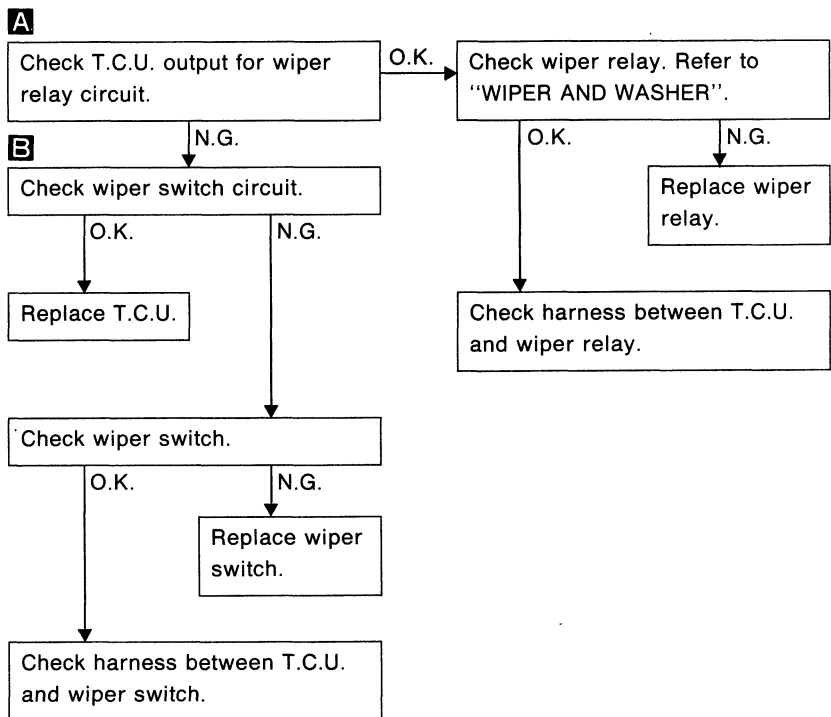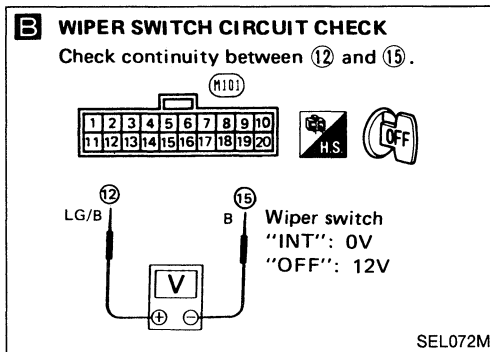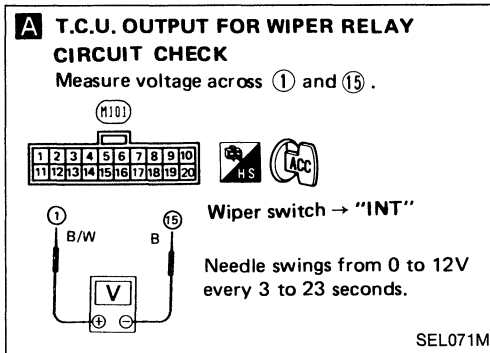

### DIAGNOSTIC PROCEDURE-2

**SYMPTOM: Intermittent time of wiper cannot be adjusted.**


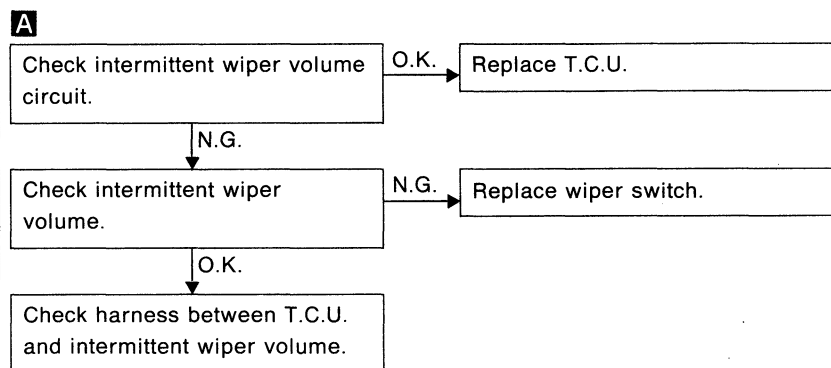


# TIME CONTROL SYSTEM

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE-3





**SYMPTOM: Wiper and washer activate individually but not in combination.**

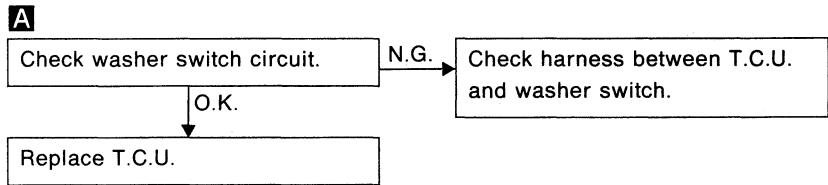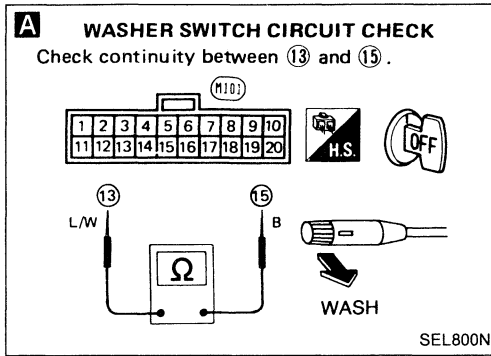

### DIAGNOSTIC PROCEDURE-4

**SYMPTOM: Light warning chime does not activate.**

- Perform "PRELIMINARY CHECK — Procedures 1 and 2" before referring to the following flow chart.

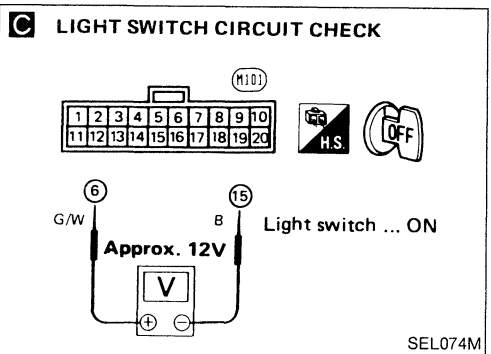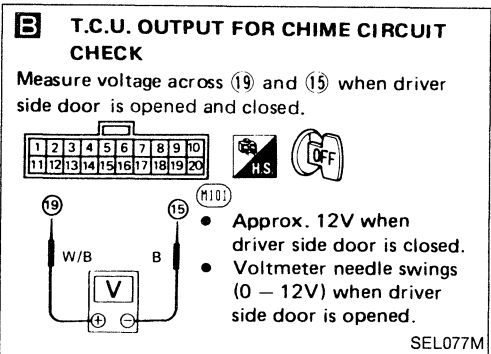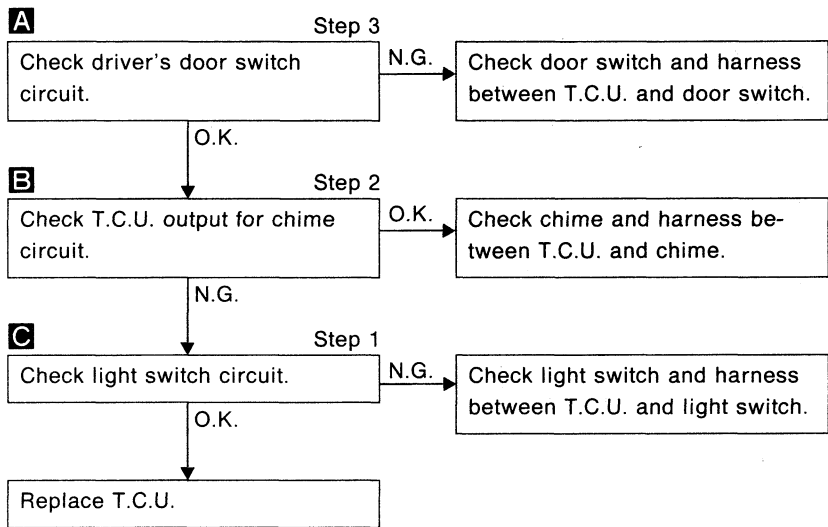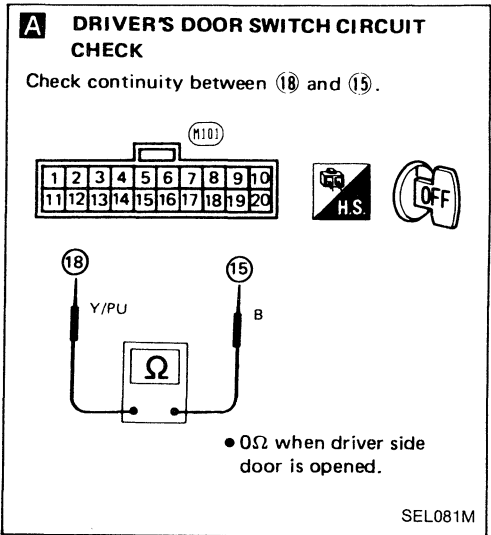







# TIME CONTROL SYSTEM

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE-5

**SYMPTOM: Ignition key warning chime does not activate.**

- Perform "PRELIMINARY CHECK — Procedures 1 and 2" before referring to the following flow chart.

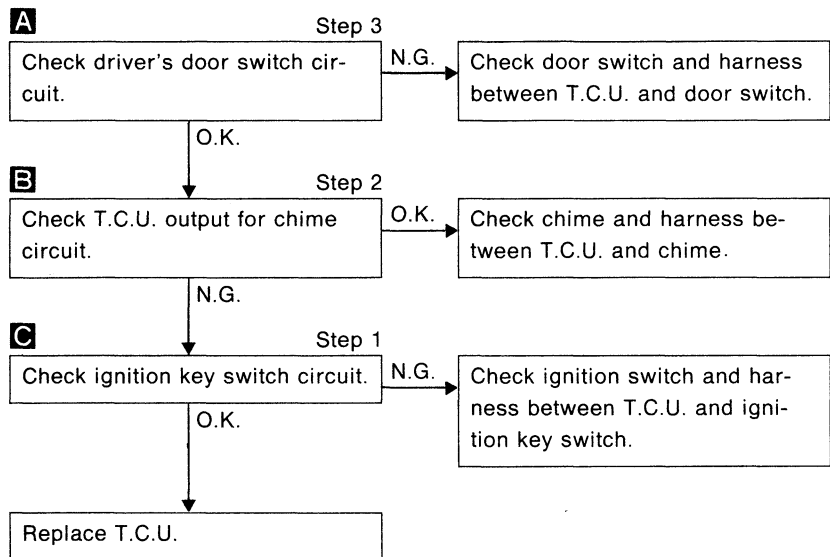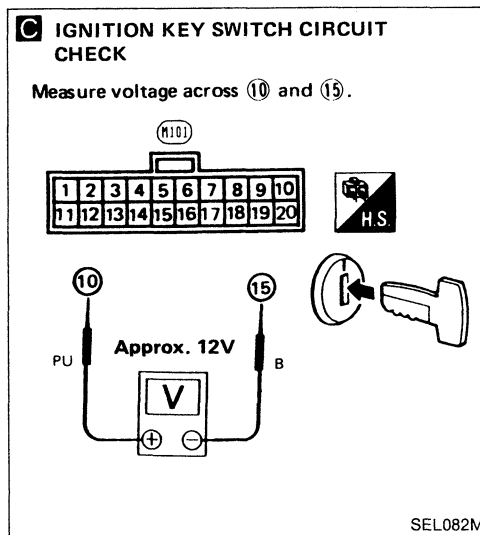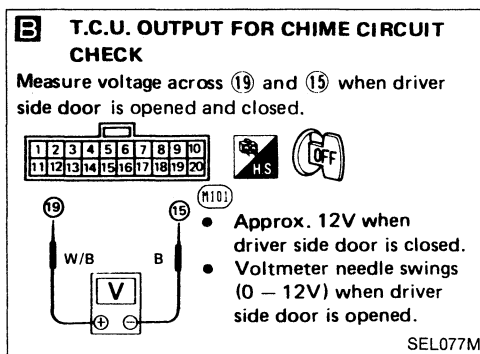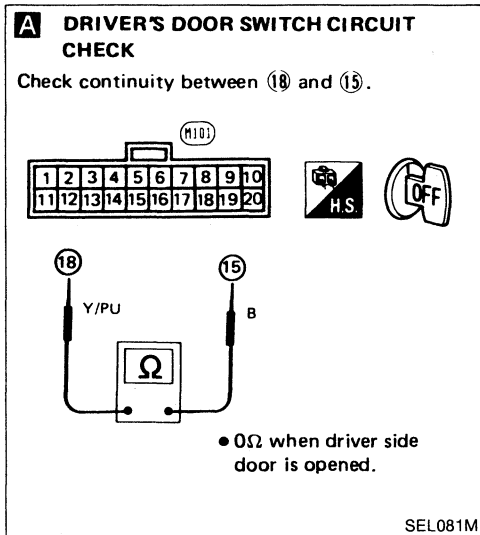


# TIME CONTROL SYSTEM

## Trouble Diagnoses (Cont'd)

### A SEAT BELT SWITCH CIRCUIT CHECK


1. Unfasten driver side seat belt.
2. Check continuity between (19) and (16).
3. Fasten driver side seat belt.
4. Check to determine if continuity does not exist between (19) and (16).

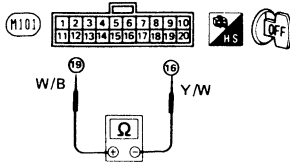

SEL078M

### B T.C.U. OUTPUT FOR CHIME CIRCUIT CHECK

Measure voltage across (19) and (15) when driver side door is opened and closed.




- Approx. 12V when driver side door is closed.
- Voltmeter needle swings (0 – 12V) when driver side door is opened.

SEL077M

### T.C.U. OUTPUT FOR BELT WARNING LAMP CIRCUIT CHECK

Measure voltage across (16) and (15) when ignition switch is "ON".

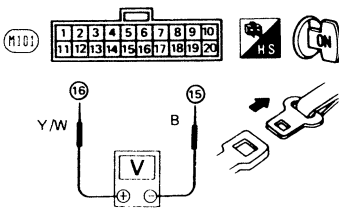


SEL079M

### DIAGNOSTIC PROCEDURE-6


**SYMPTOM: Seat belt warning chime does not activate.**

- Perform "PRELIMINARY CHECK — Procedure 3" before referring to the following flow chart.

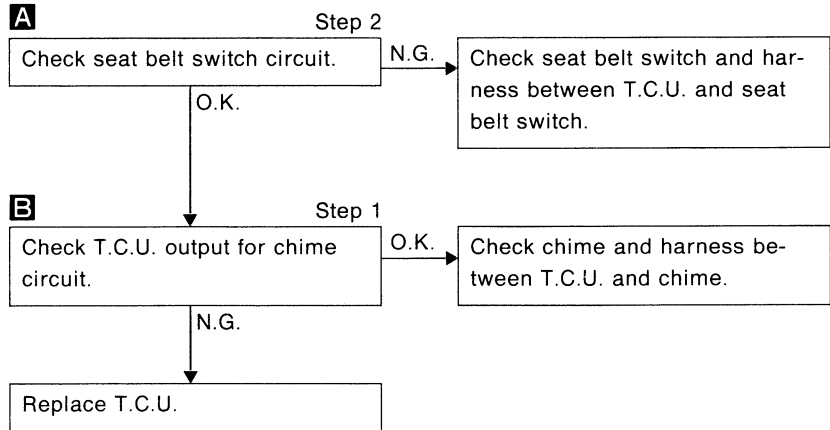

### DIAGNOSTIC PROCEDURE-7

**SYMPTOM: Seat belt warning lamp does not come on, or does not go off after coming on.**

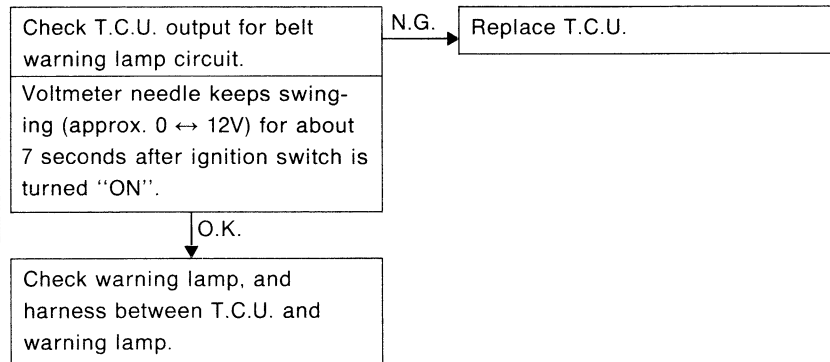

# TIME CONTROL SYSTEM

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE-8

**SYMPTOM:** Rear defogger does not activate, or does not go off after activating.

**A T.C.U. OUTPUT FOR REAR DEFOGGER CIRCUIT CHECK**  
 Measure voltage across (4) and (15) while operating rear defogger switch.


- Rear defogger switch "OFF": Approx. 12V
- Rear defogger switch "ON": Approx. 0V

SEL083M

**B DEFOGGER SWITCH CIRCUIT CHECK**

- Rear defogger switch "OFF": Except 0Ω
- Rear defogger switch "ON": 0Ω

SEL084M

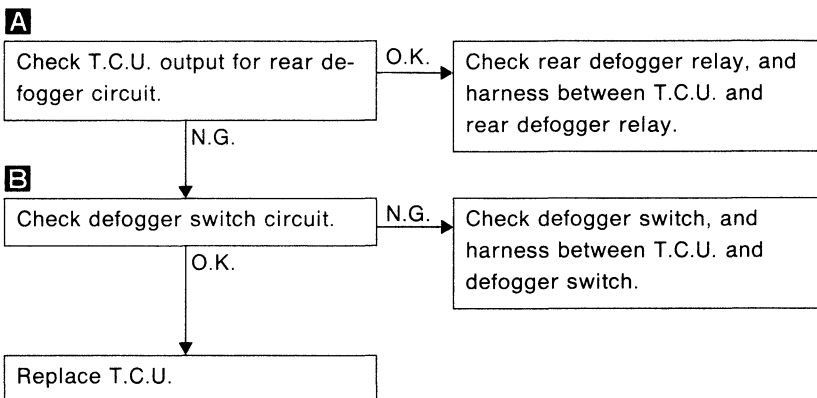

**A DRIVER'S DOOR SWITCH CIRCUIT CHECK**  
 Check continuity between (18) and (15).

- 0Ω when driver side door is opened.

SEL081M


### DIAGNOSTIC PROCEDURE-9

**SYMPTOM:** Interior lamp does not fade out after driver's door is closed.

**B T.C.U. OUTPUT FOR INTERIOR LAMP CIRCUIT CHECK**  
 Measure voltage across (20) and (15) when driver's door is open and closed.

- 0V when door is open.
- 0 → 12V when door is closed after opened once.

SEL799N




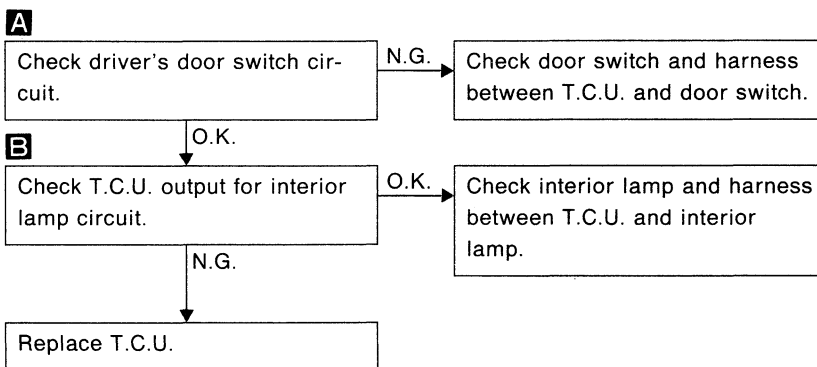


# TIME CONTROL SYSTEM

## Trouble Diagnoses (Cont'd)


### DIAGNOSTIC PROCEDURE-10

**SYMPTOM: Illumination control system does not actuate.**

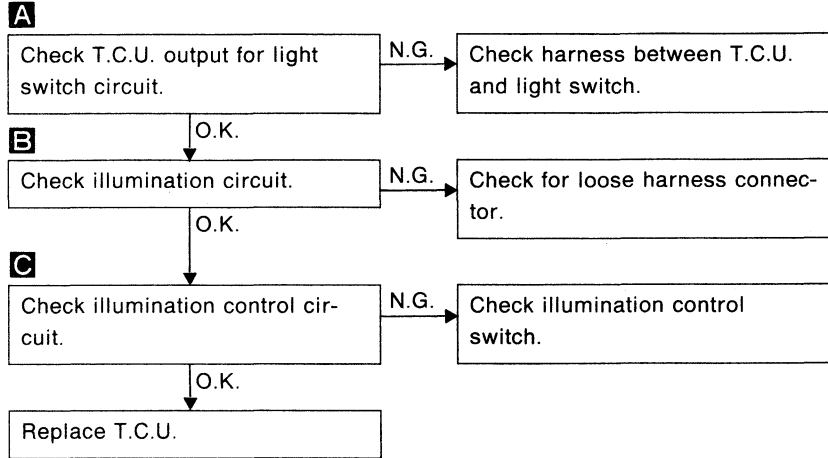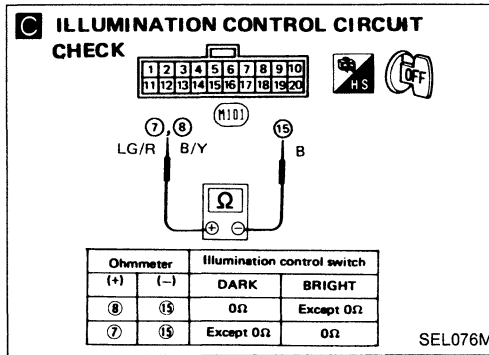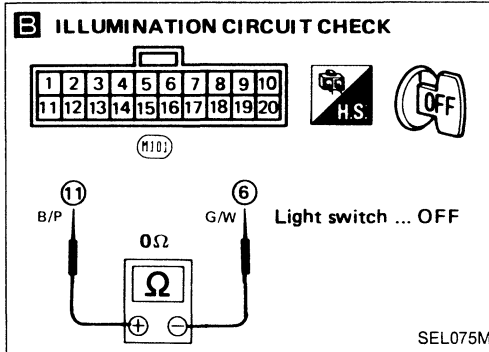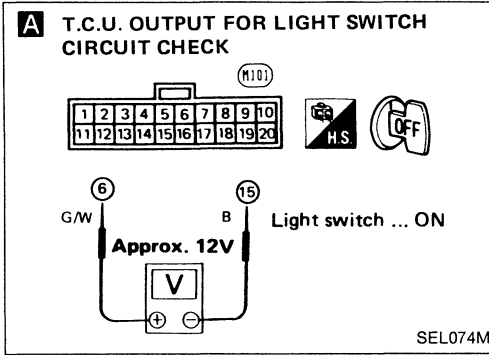

# WIPER AND WASHER

## Front Wiper and Washer/Wiring Diagram

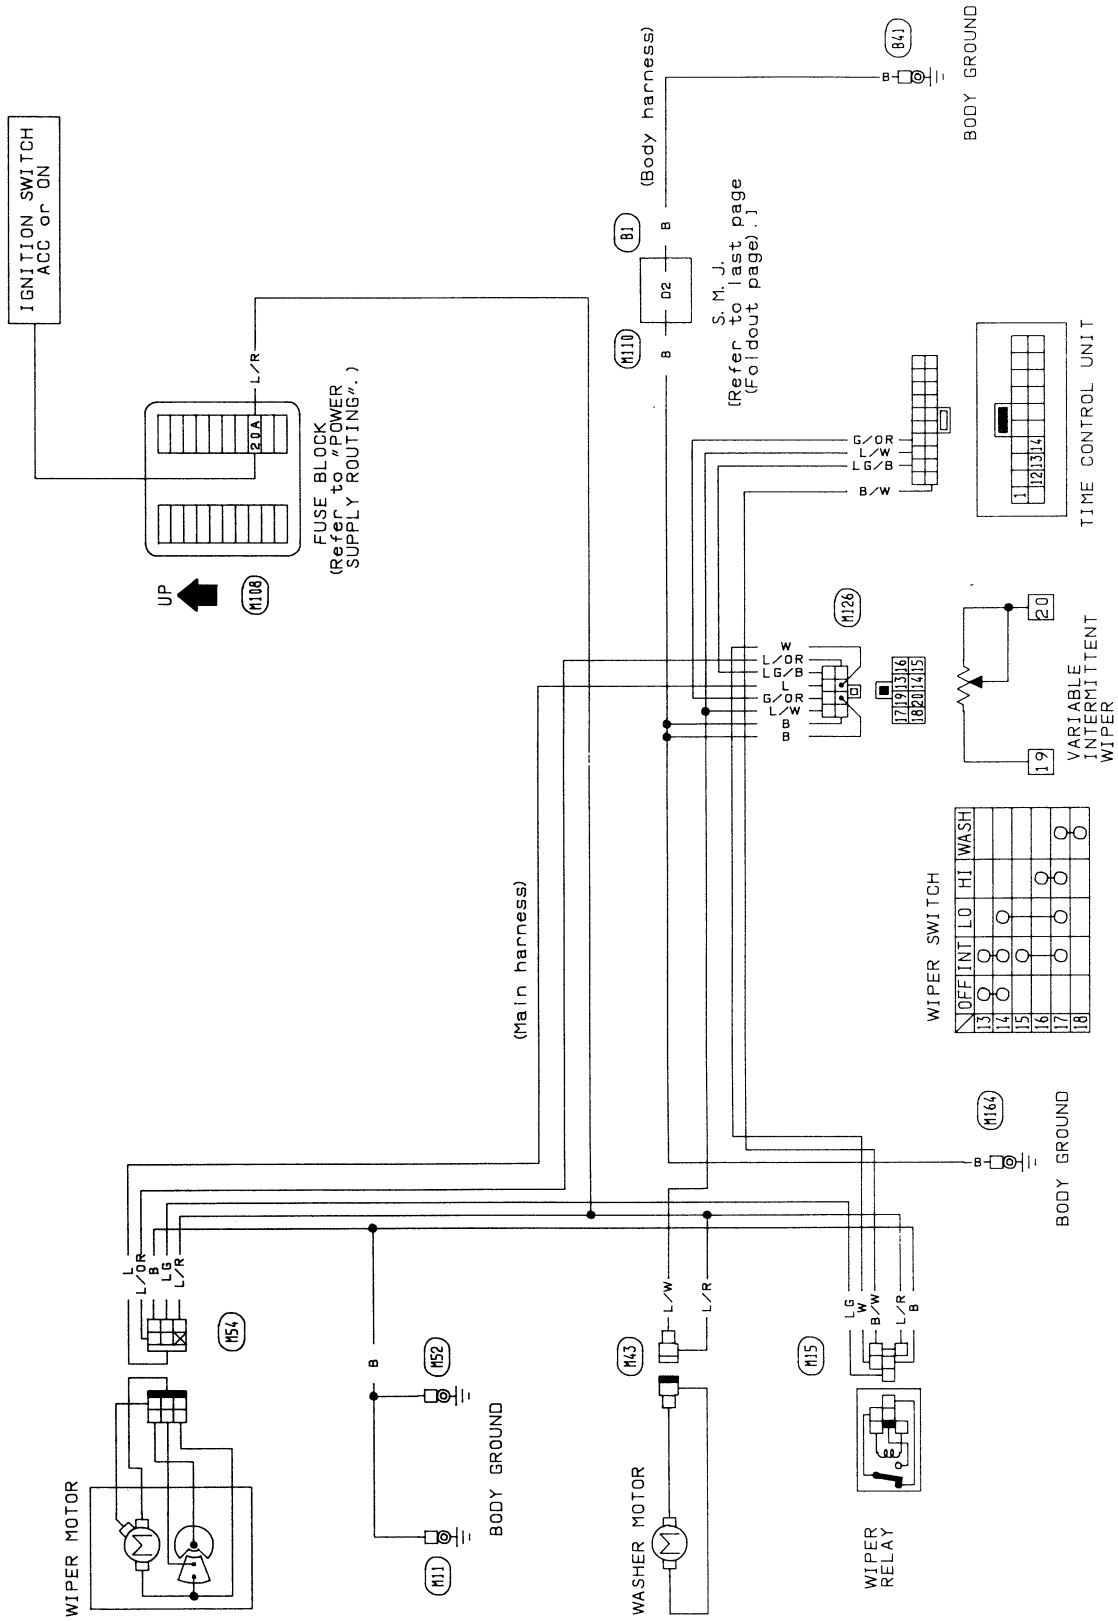


# WIPER AND WASHER


## Installation

1. Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
  2. Lift the blade up and then set it down onto glass surface to set the blade center to clearance "L<sub>1</sub>" or "L<sub>2</sub>" immediately before tightening nut.
  3. Eject washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".
  4. Ensure that wiper blades stop within clearance "L<sub>1</sub>" & "L<sub>2</sub>".  
**Clearance "L<sub>1</sub>": 25 - 35 mm (0.98 - 1.38 in)**  
**Clearance "L<sub>2</sub>": 35 - 45 mm (1.38 - 1.77 in)**
- Tighten windshield wiper arm nuts to specified torque.  
**Windshield wiper:**  
**[C]: 13 - 18 N·m (1.3 - 1.8 kg-m, 9 - 13 ft-lb)**

### Windshield wiper and washer

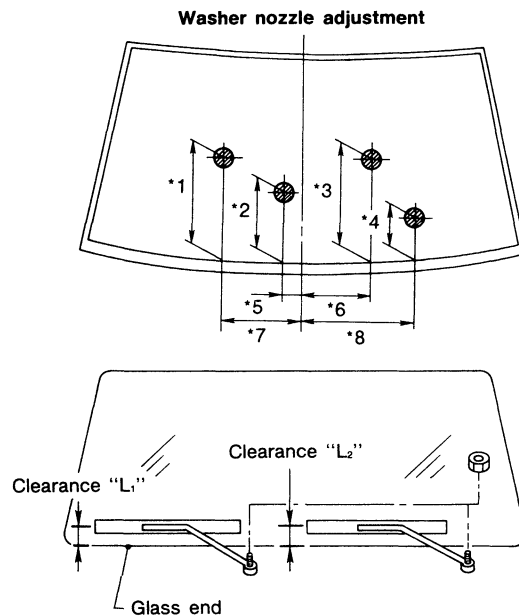


SEL498N

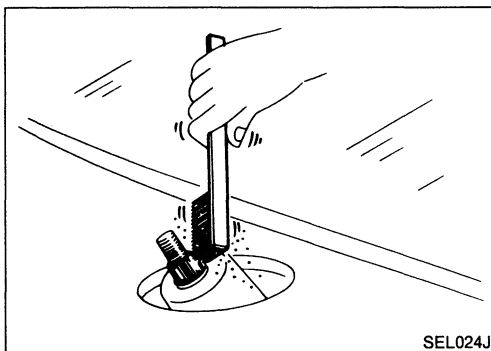

- Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.

## WIPER AND WASHER

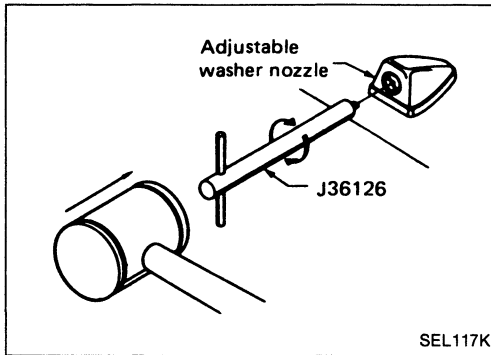


### Washer Nozzle Adjustment

- Using Tool J36126, adjust windshield washer nozzle to correct its spray pattern.


**Before attempting to turn the nozzle, gently tap the end of Tool to free the nozzle.**

**This will prevent “rounding out” the small female square in the center of the nozzle.**

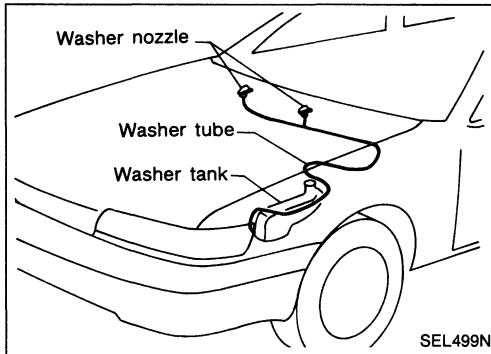

# HORN, CIGARETTE LIGHTER, CLOCK


## Wiring Diagram

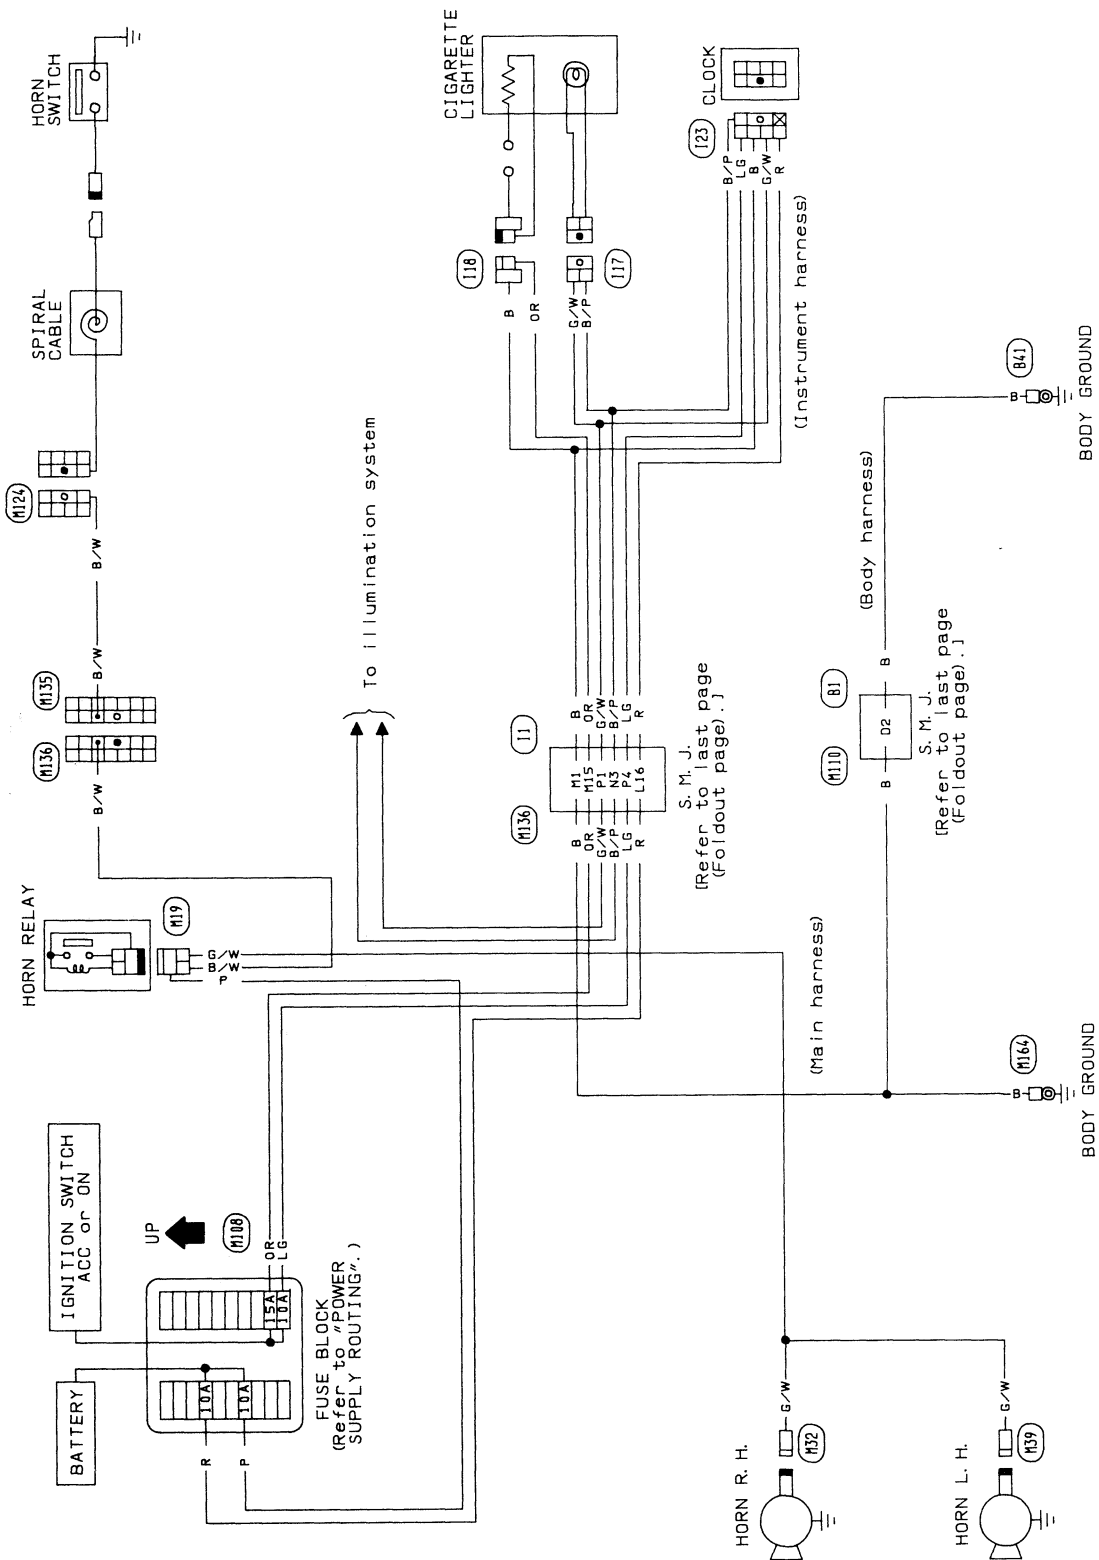






# REAR WINDOW DEFOGGER

## Wiring Diagram

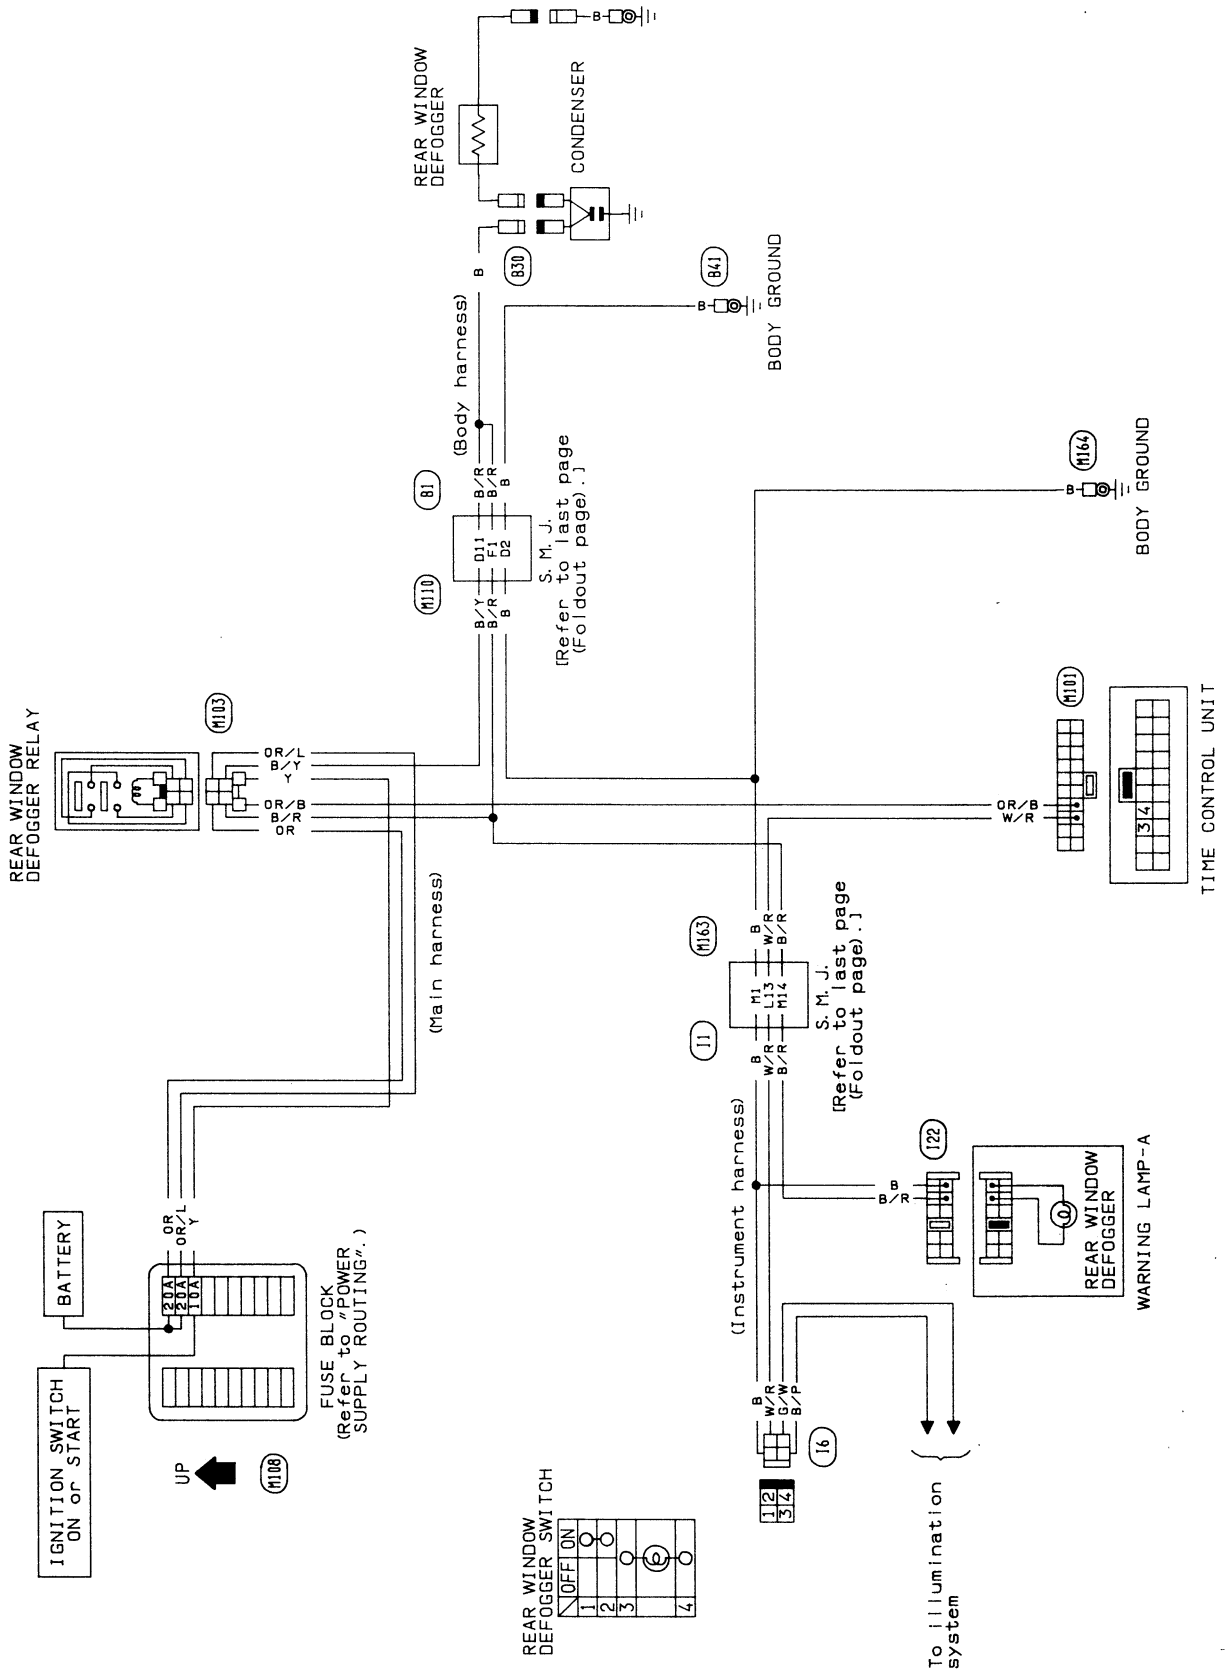

# REAR WINDOW DEFOGGER

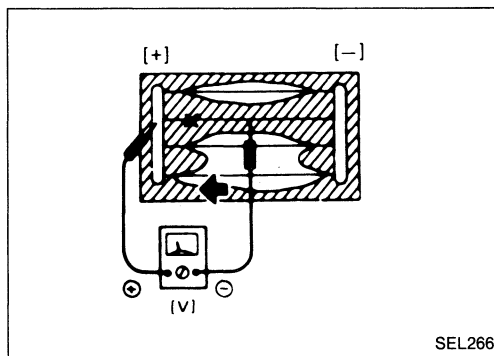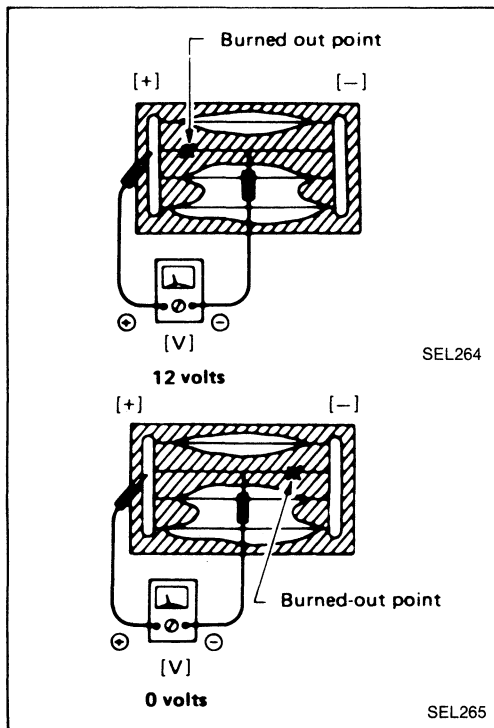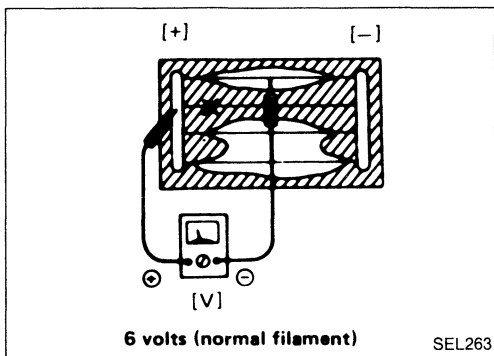

## Filament Check

1. Attach probe circuit tester (in volt range) to middle portion of each filament.
2. If a filament is burned out, circuit tester registers 0 or 12 volts.
3. To locate burned out point, move probe to left and right along filament to determine point where tester needle swings abruptly.

# REAR WINDOW DEFOGGER

## Filament Repair

### REPAIR EQUIPMENT

1. Conductive silver composition (Dupont No. 4817 or equivalent)
2. Ruler 30 cm (11.8 in) long
3. Drawing pen
4. Heat gun
5. Alcohol
6. Cloth




### REPAIRING PROCEDURE

1. Wipe broken heat wire and its surrounding area clean with a cloth dampened in alcohol.
2. Apply a small amount of conductive silver composition to tip of drawing pen.

#### **Shake silver composition container before use.**

3. Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.
4. After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited.

**Do not touch repaired area while test is being conducted.**

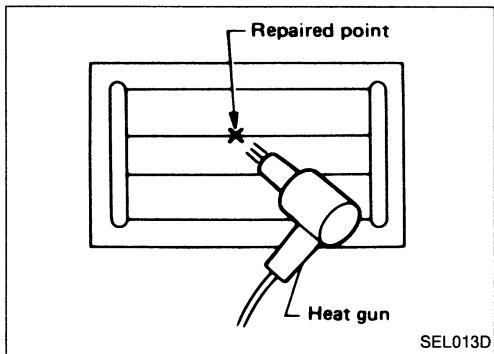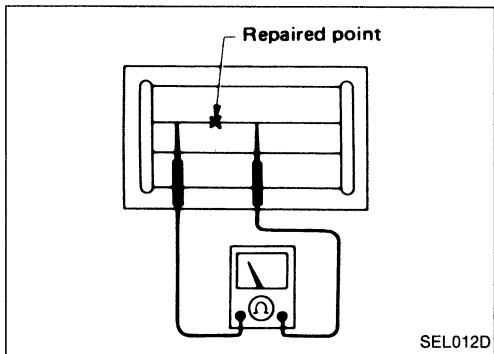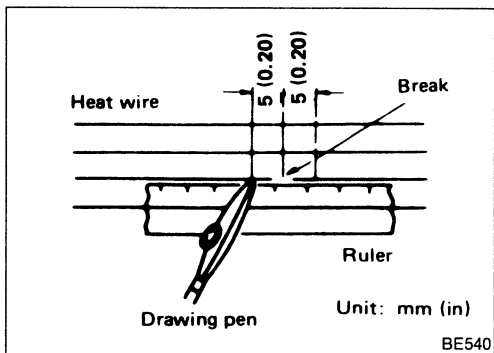


5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet. If a heat gun is not available, let the repaired area dry for 24 hours.



# AUDIO AND POWER ANTENNA


## Audio/Wiring Diagram (Cont'd)

EXCEPT BOSE SYSTEM

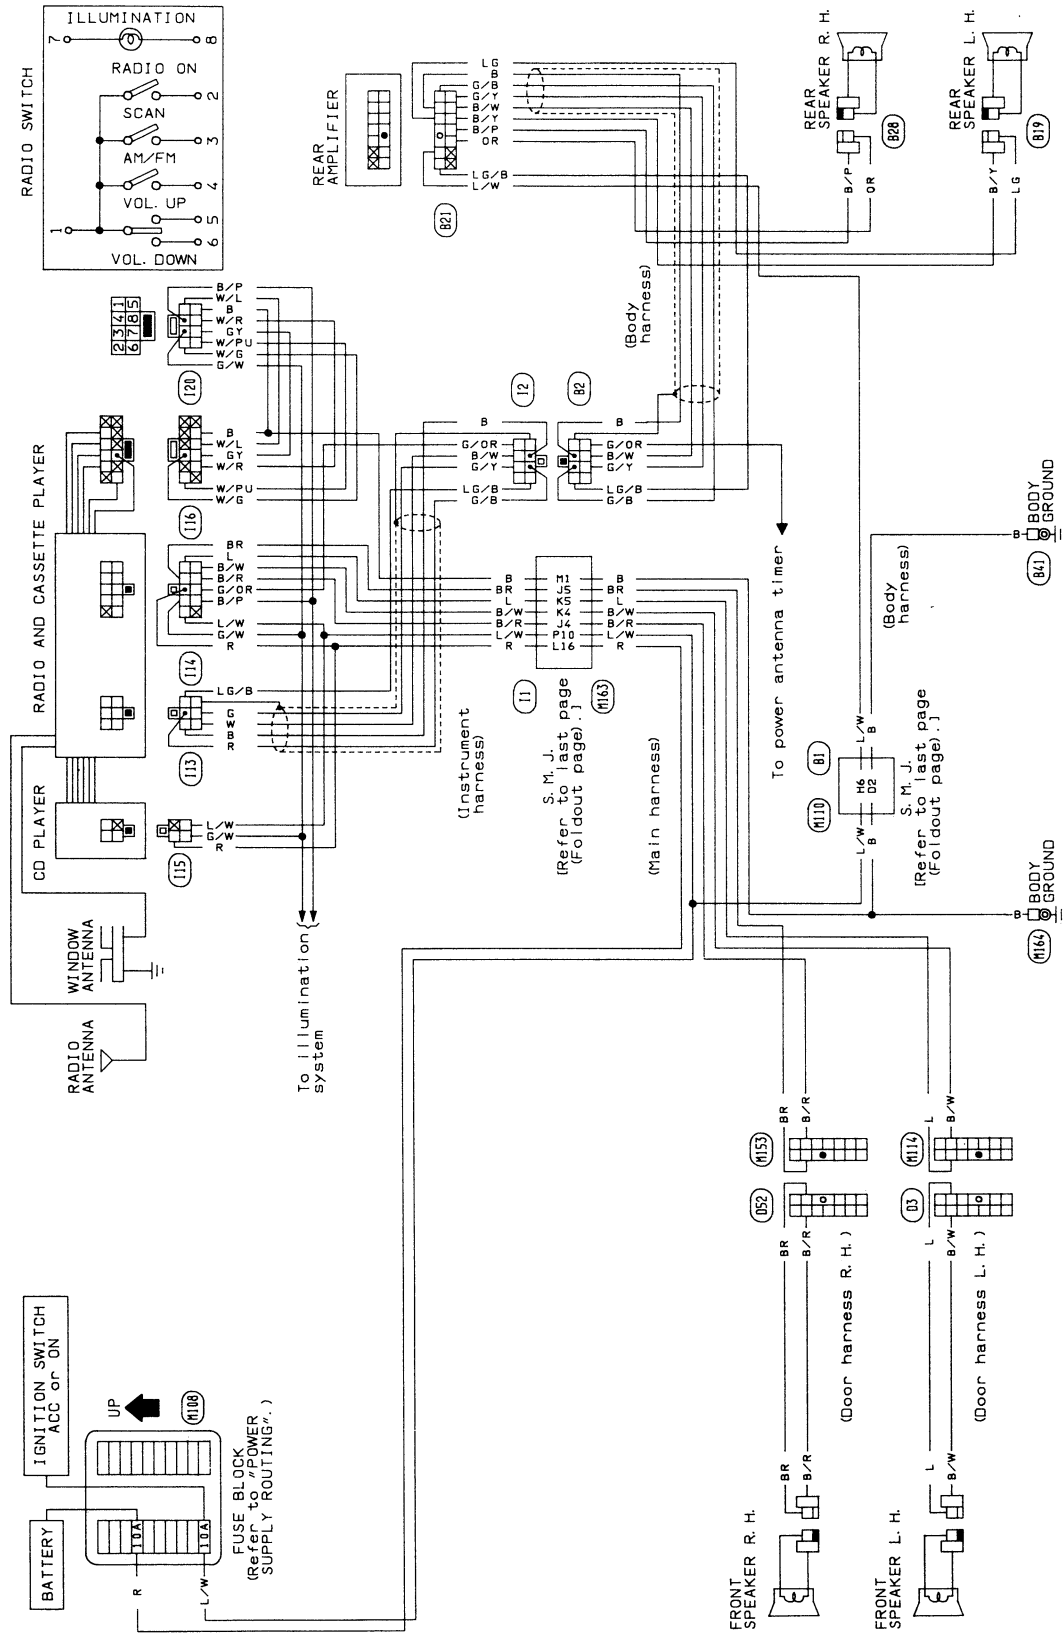



# AUDIO AND POWER ANTENNA

## Power Antenna/Wiring Diagram

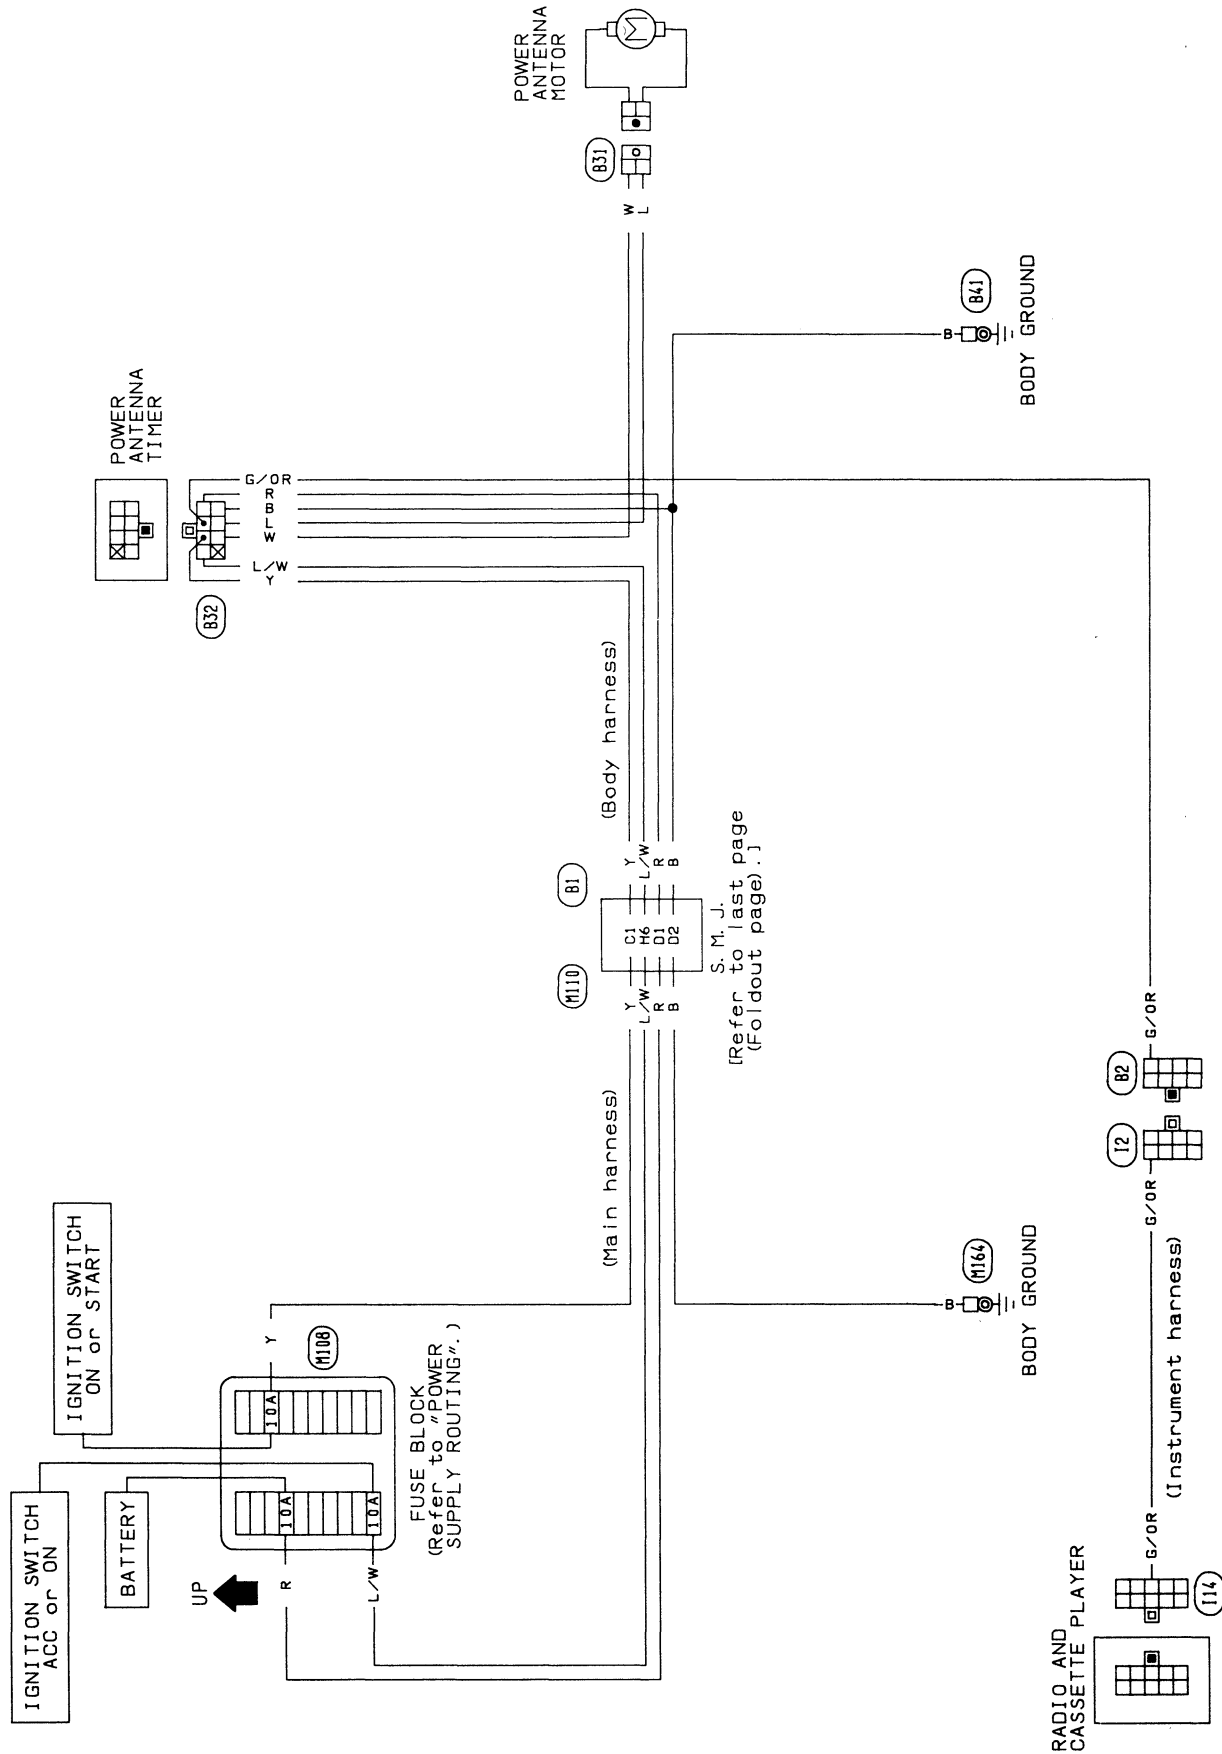


# AUDIO AND POWER ANTENNA

## Location of Antenna

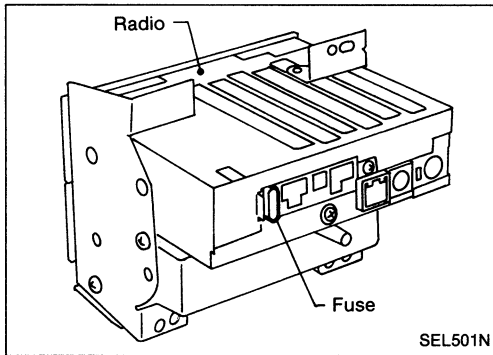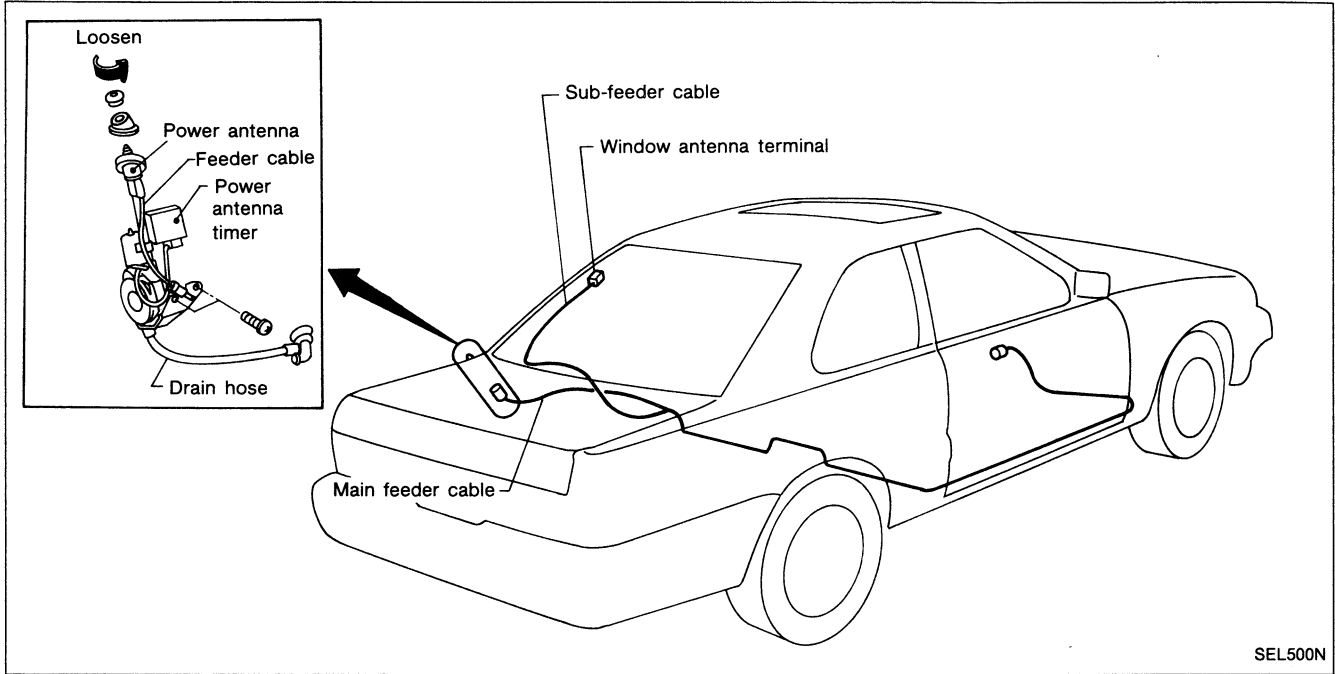

## Radio Fuse Check



# AUDIO AND POWER ANTENNA

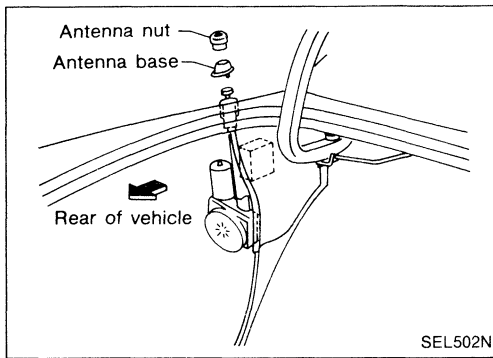

## Antenna Rod Replacement


### REMOVAL

1. Remove antenna nut and antenna base.
2. Withdraw antenna rod while raising it by operating antenna motor.

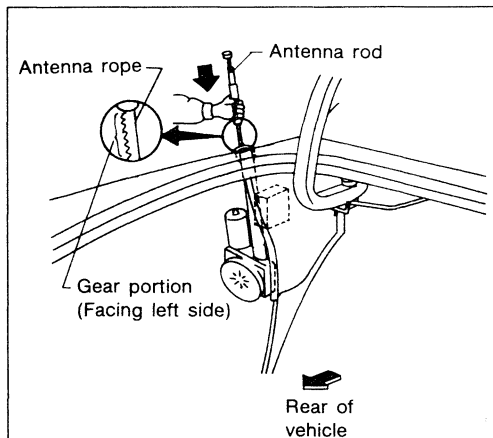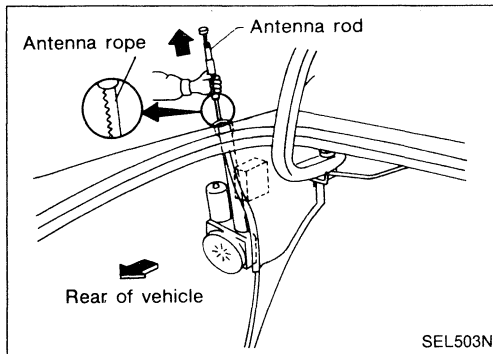

### INSTALLATION

1. Lower antenna rod by operating antenna motor.
2. Insert gear section of antenna rope into place with it facing toward antenna motor.
3. As soon as antenna rope is wound on antenna motor, stop antenna motor. Insert antenna rod lower end into antenna motor pipe.
4. Retract antenna rod completely by operating antenna motor.
5. Install antenna nut and base.

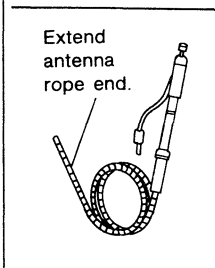






## Window Antenna Repair

### ELEMENT CHECK


1. Attach probe circuit tester (in ohm range) to antenna terminal on each side.

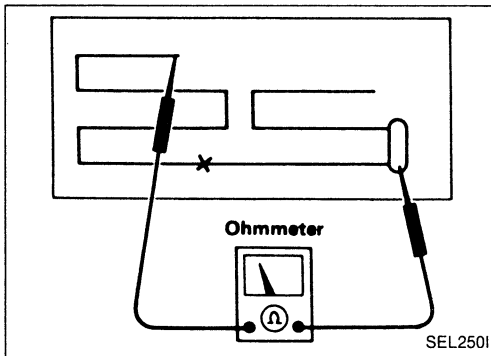

2. If an element is broken, no continuity will exist.

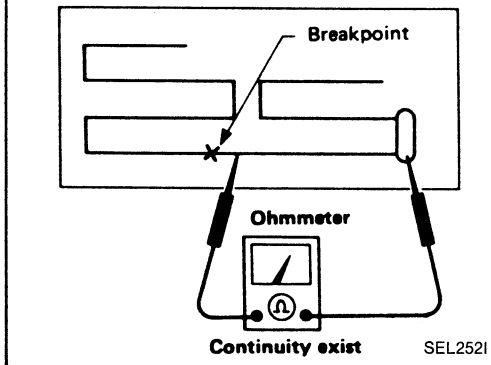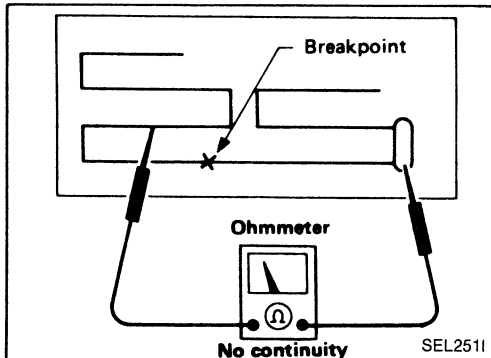

3. To locate broken point, move probe to left and right along element to determine point where tester needle swings abruptly.

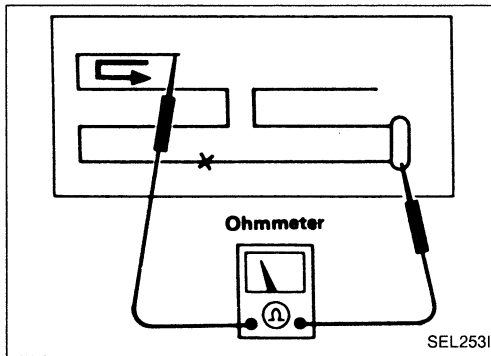


### ELEMENT REPAIR


Refer to REAR WINDOW DEFOGGER "Filament Repair".

# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Location of Control Unit

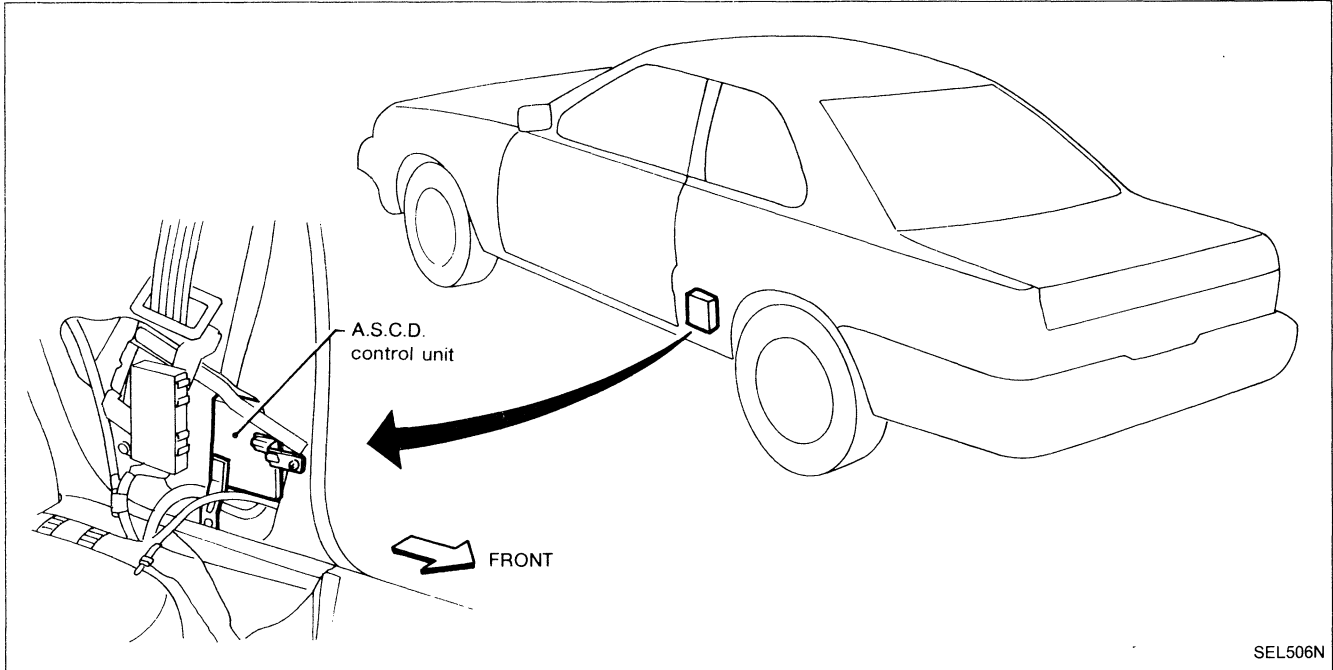

## A.S.C.D. Wire Adjustment

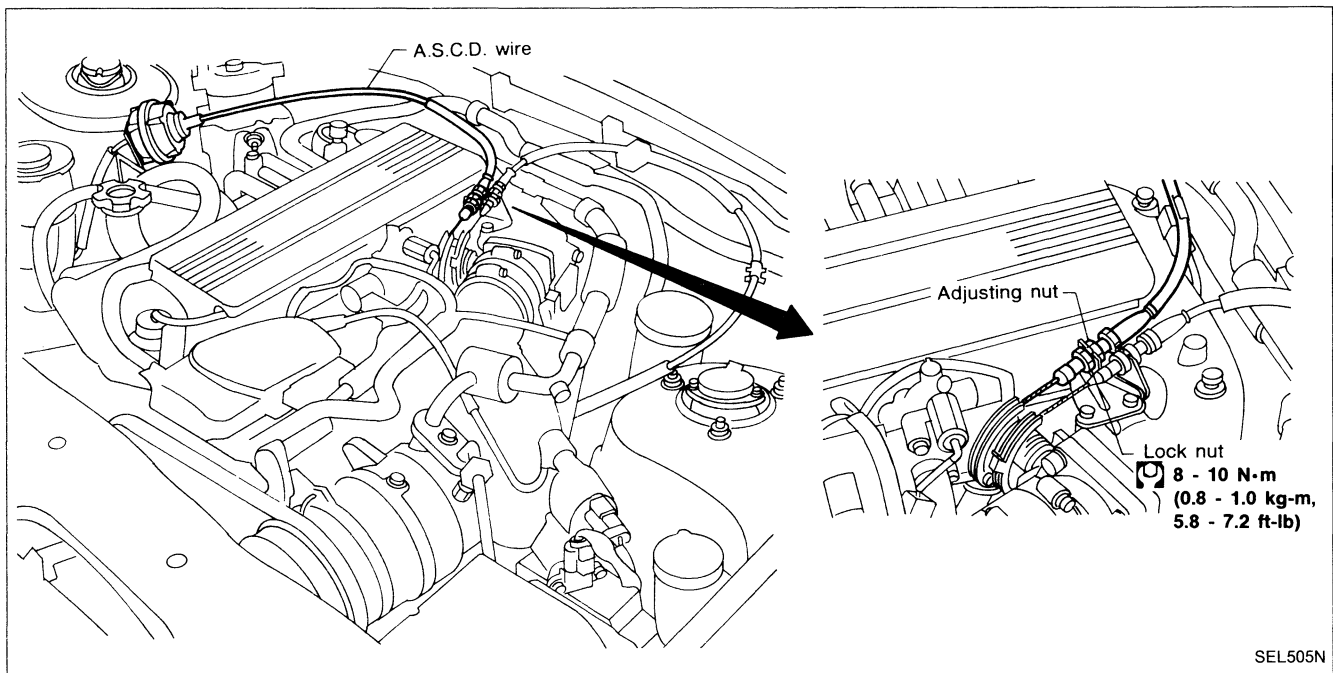

### CAUTION:


- Be careful not to twist A.S.C.D. wire when removing it.
- Do not tense A.S.C.D. wire excessively during adjustment.

After confirming that accelerator wire is properly adjusted, adjust the tension of A.S.C.D. wire in the following manner.

- (1) After adjusting the length of the accelerator wire, turn a securing nut by 1/2 to 1 turn from throttle open starting position to the wire loosening direction to fix. (Must be securing carried out to prevent response delay of operation of the A.S.C.D.)
  - (2) Securely tighten lock nut to hold adjusting nut in place.
- For A.S.C.D. brake switch adjustment, refer to BR section.

# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Wiring Diagram

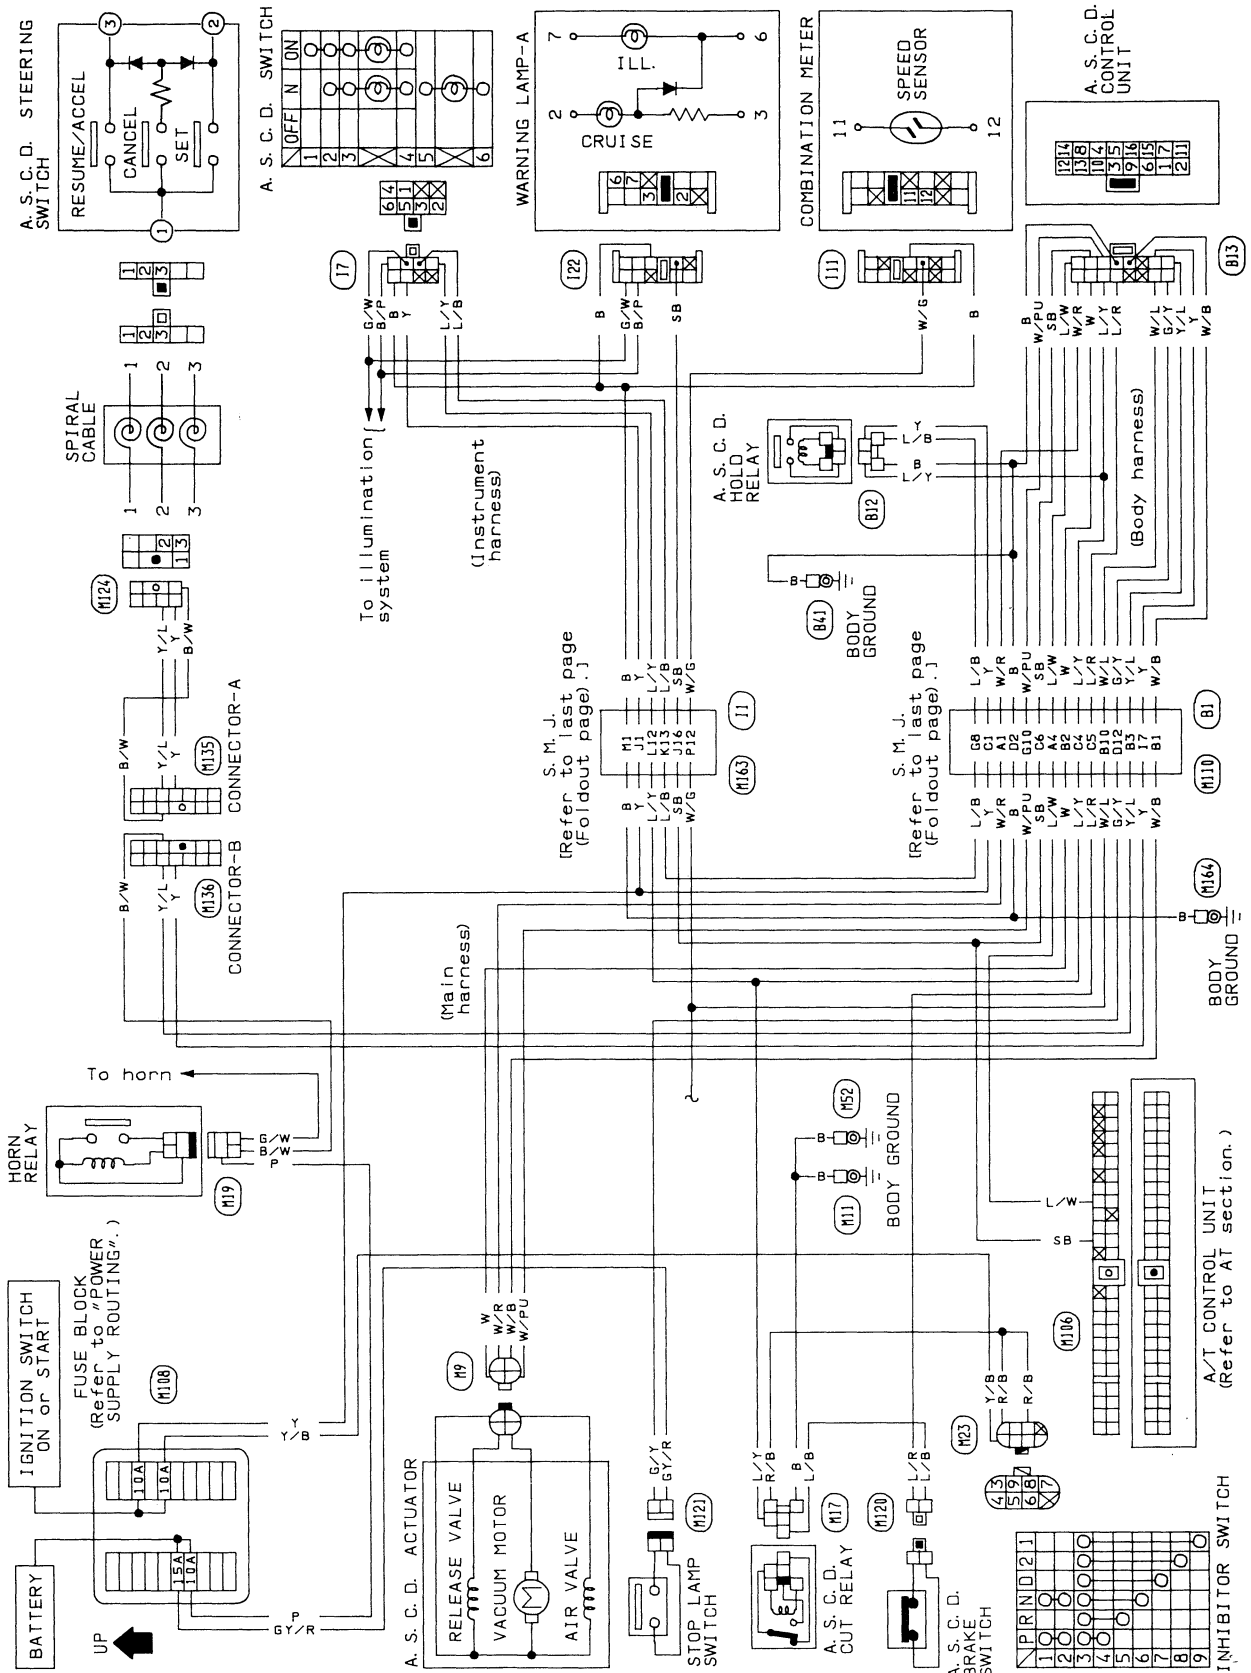

# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Trouble Diagnoses


### SYMPTOM CHART

PROCEDURE	Preliminary Check				Diagnostic Procedure									
REFERENCE PAGE	EL-84	EL-84	EL-85	EL-86	EL-87	EL-87	EL-88	EL-88	EL-89	EL-90	EL-90	EL-91	EL-91	EL-91
SYMPTOM	Preliminary Check 1	Preliminary Check 2	Preliminary Check 3	Preliminary Check 4	Diagnostic Procedure <b>(B)</b>	Diagnostic Procedure <b>(C)</b>	Diagnostic Procedure <b>(D)</b>	Diagnostic Procedure <b>(E)</b>	Diagnostic Procedure <b>(F)</b>	Diagnostic Procedure <b>(G)</b>	Diagnostic Procedure <b>(H)</b>	Diagnostic Procedure <b>(I)</b>	Diagnostic Procedure <b>(J)</b>	Diagnostic Procedure <b>(K)</b>
A.S.C.D. control unit cannot be set properly.	<input type="radio"/>								<input type="radio"/>	<input type="radio"/>				
Impossible to cruise at set speed.		<input type="radio"/>			<input type="radio"/>							<input type="radio"/>		
Set speed is compulsively canceled.			<input type="radio"/>			<input type="radio"/>		<input type="radio"/>					<input type="radio"/>	
Set speed cannot be canceled by depressing brake pedal.													<input type="radio"/>	
Resume switch will not operate.														<input type="radio"/>
Cancel switch will not operate.														<input type="radio"/>
Large difference between set speed and actual vehicle speed.							<input type="radio"/>							
Engine is hunting.							<input type="radio"/>							
Deceleration by cancellation is retarded.											<input type="radio"/>			
Indicator lamp ("CRUISE") blinks.				<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			<input type="radio"/>	<input type="radio"/>		

# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Trouble Diagnoses (Cont'd)

### CIRCUIT DIAGRAM FOR QUICK PINPOINT CHECK

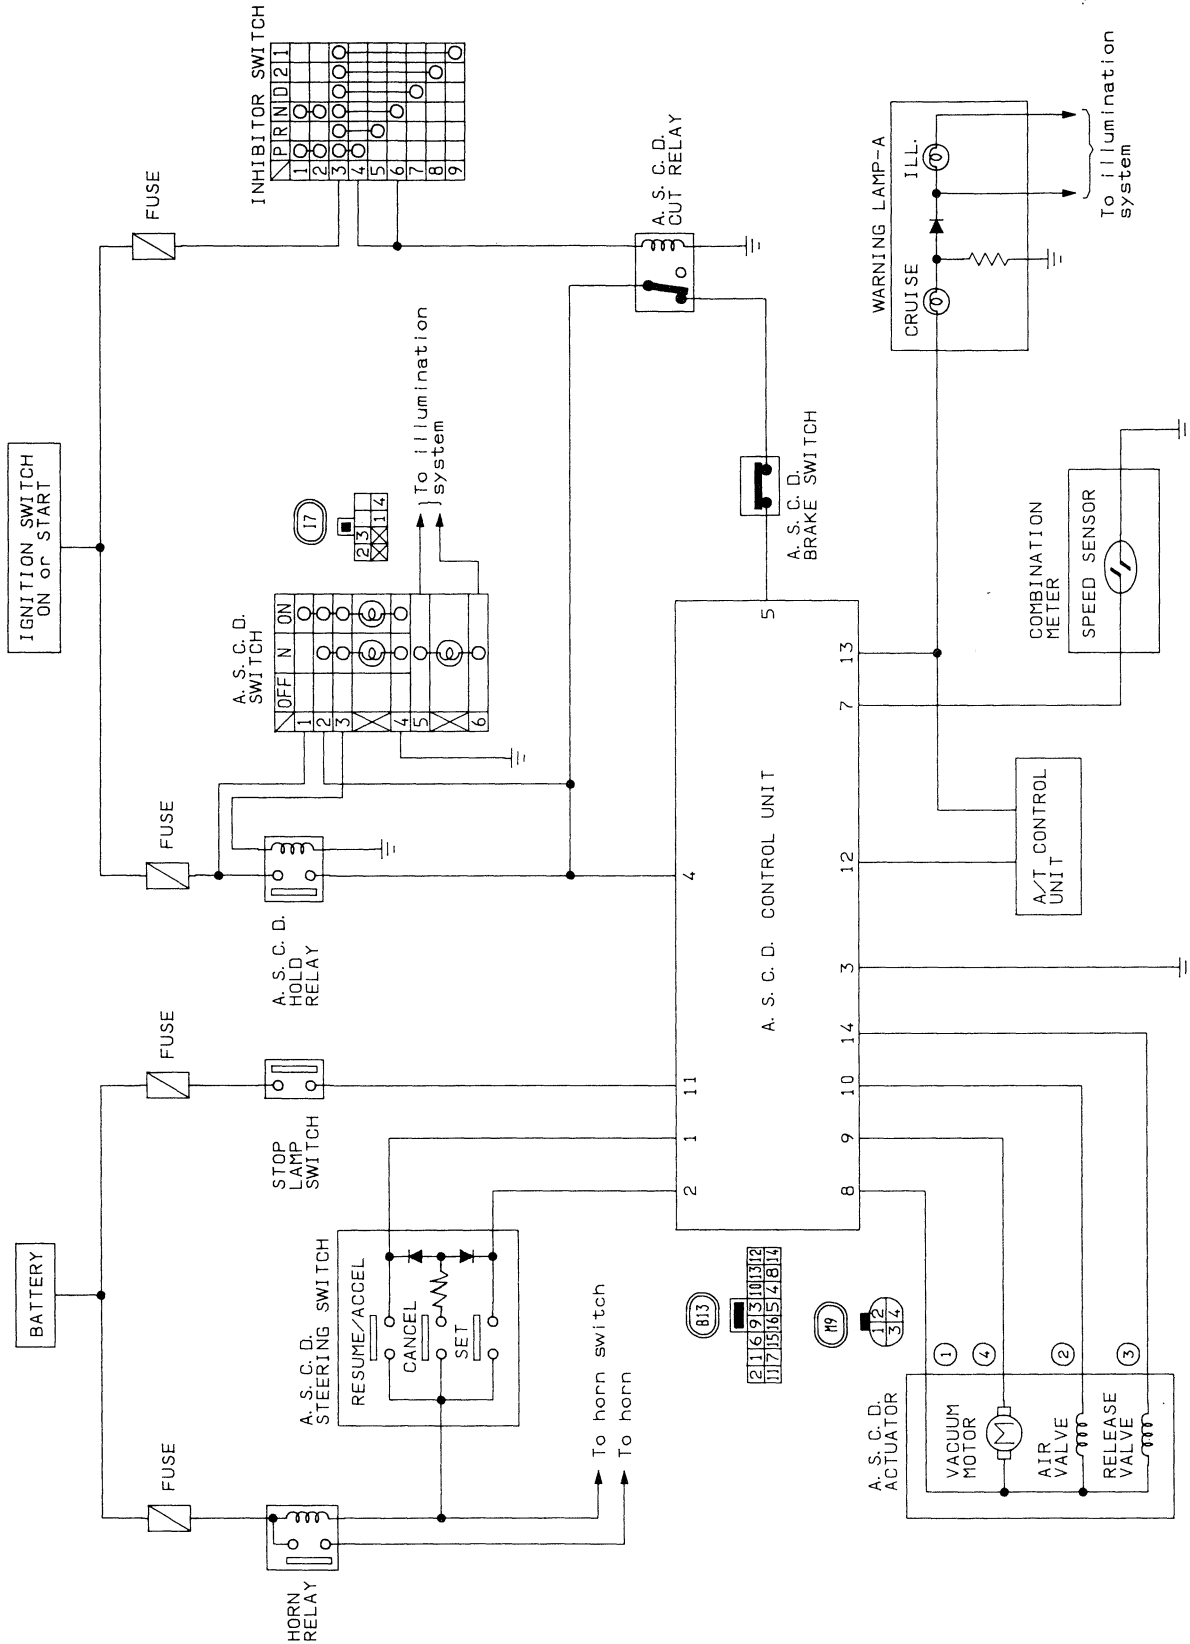


# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Trouble Diagnoses (Cont'd)

### PRELIMINARY CHECK


#### Preliminary check 1

**A.S.C.D. control unit cannot be set properly.**

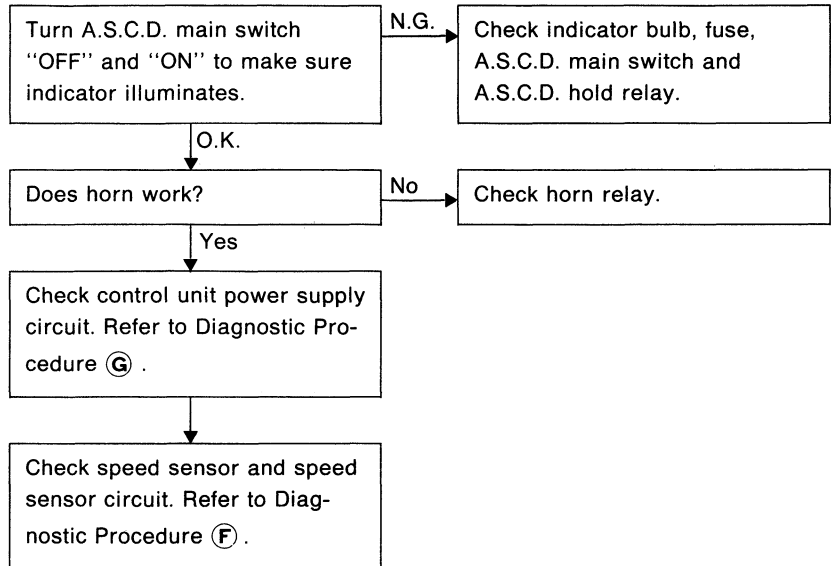

#### Preliminary check 2

**Impossible to cruise at set speed.**

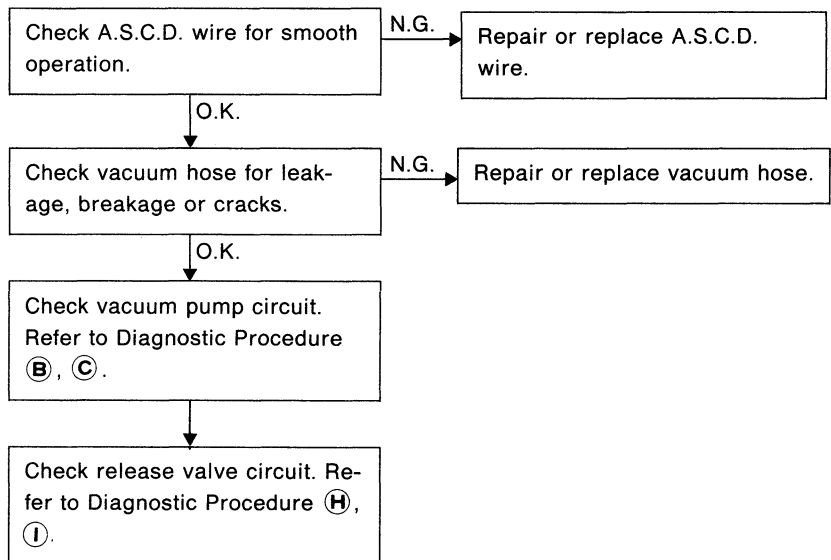


# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Trouble Diagnoses (Cont'd)

### Preliminary check 3

Set speed is compulsively canceled.

- If the actual vehicle speed is less than 48 km/h (30 MPH), or if the difference between the actual vehicle speed and the set speed is more than 13 km/h (8 MPH), the A.S.C.D. control unit cancels the set speed through the fail-safe (low speed or speed difference) circuit.

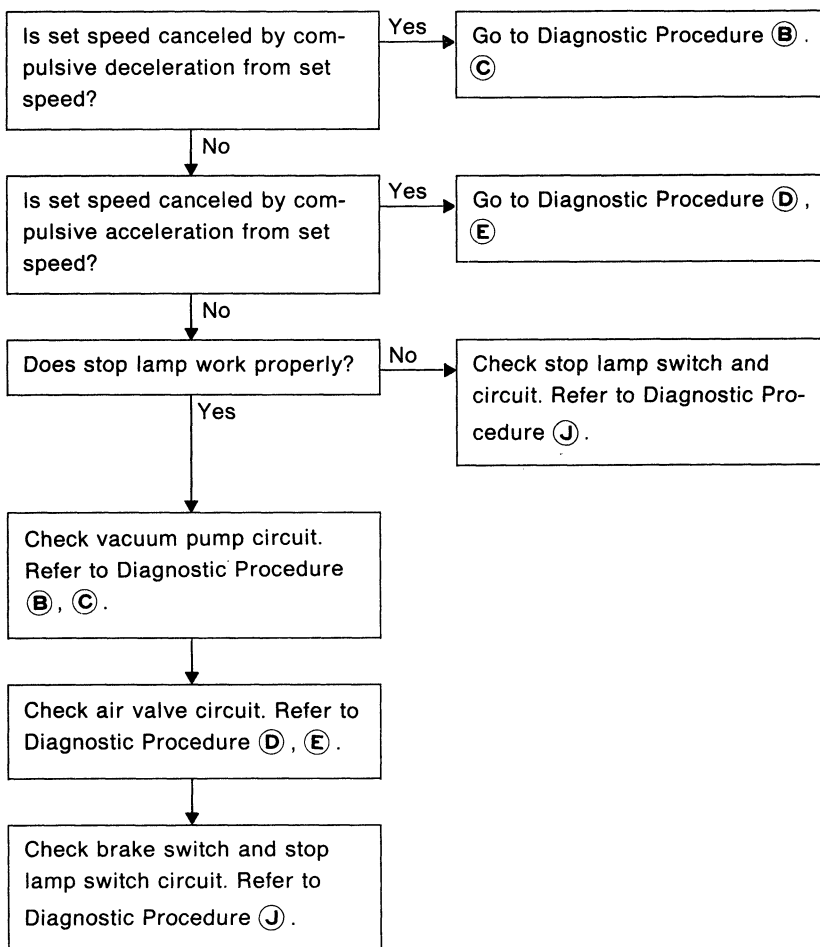


# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Trouble Diagnoses (Cont'd)

### Preliminary check 4

Indicator lamp "CRUISE" blinks.

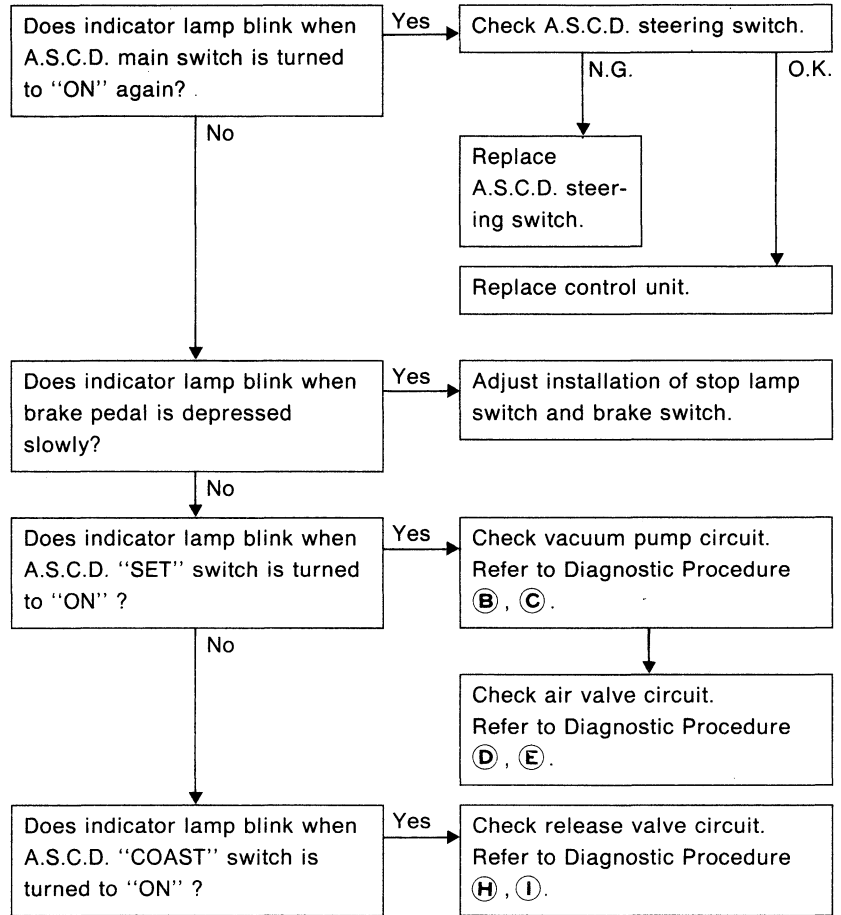






# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Trouble Diagnoses (Cont'd)


### DIAGNOSTIC PROCEDURE ②

**SYMPTOM: Impossible to cruise at set speed.**

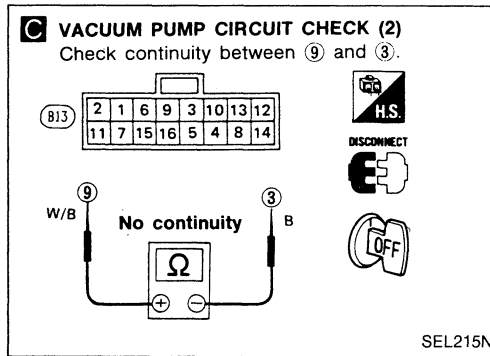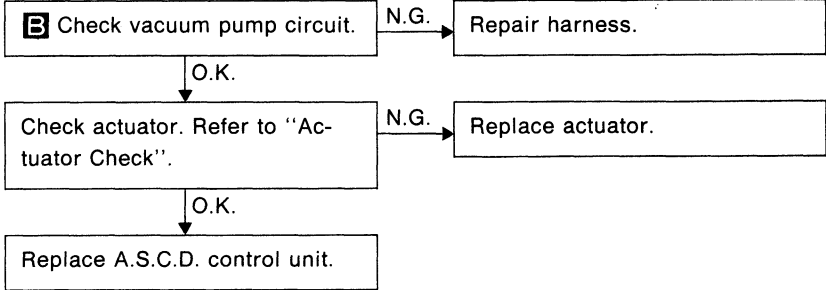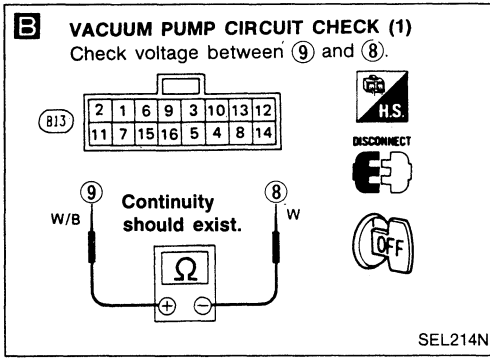


### DIAGNOSTIC PROCEDURE ③

**SYMPTOM: A.S.C.D. is compulsively canceled.**

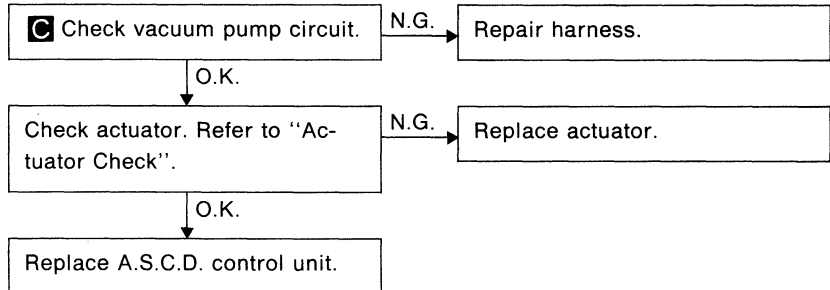



# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Trouble Diagnoses (Cont'd)

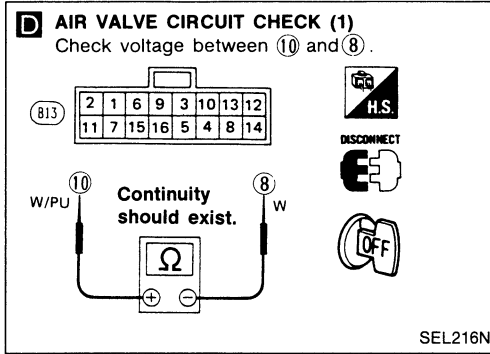


### DIAGNOSTIC PROCEDURE ④

**SYMPTOM: Actual cruise speed is lower than set speed. Or engine is hunting.**

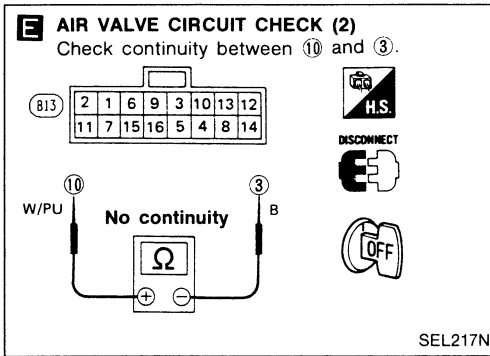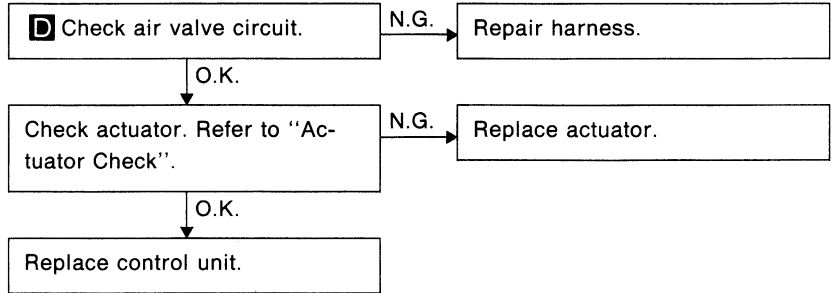

### DIAGNOSTIC PROCEDURE ⑤

**SYMPTOM: A.S.C.D. is compulsively canceled.**

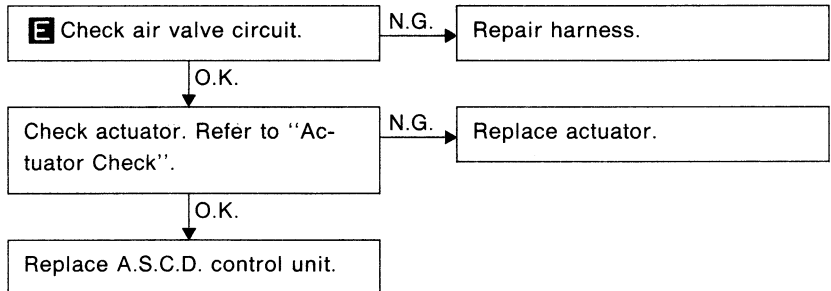

# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)


## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE (F)


**SYMPTOM: A.S.C.D. control unit cannot be set properly.**

#### **F** SPEED SENSOR CIRCUIT CHECK

1. Disconnect speed sensor from transmission.
  2. Connect a voltmeter between (7) and (3).
  3. Slowly turn speed sensor by hand to make sure voltmeter pointer deflects.
- Voltmeter pointer deflects twice per rotation of pinion.

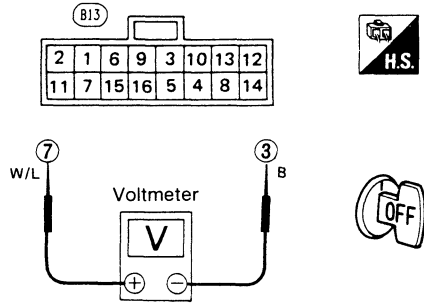

SEL218N

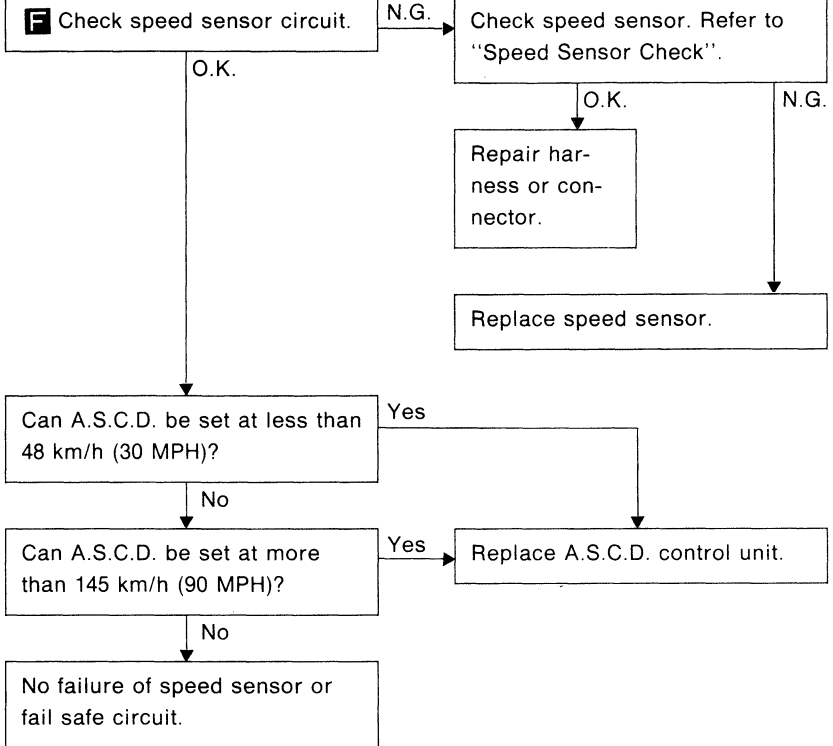


# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Trouble Diagnoses (Cont'd)


### G POWER SUPPLY CIRCUIT CHECK

1. Turn A.S.C.D. main switch to "ON".
2. Check voltage between ④ and ③.

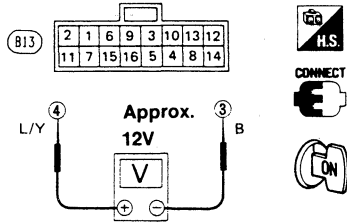

### GROUND CIRCUIT CHECK


Check continuity between ③ and body ground.

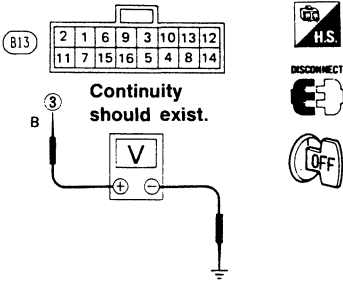

SEL219N

### H RELEASE VALVE CIRCUIT CHECK (1)


Check voltage between ⑭ and ⑧.

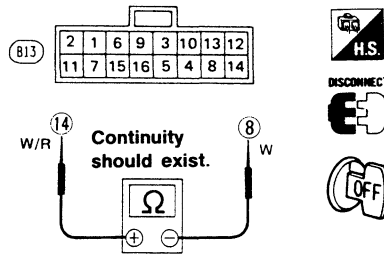

SEL220N


### DIAGNOSTIC PROCEDURE G

**SYMPTOM: A.S.C.D. control unit cannot be set properly.**

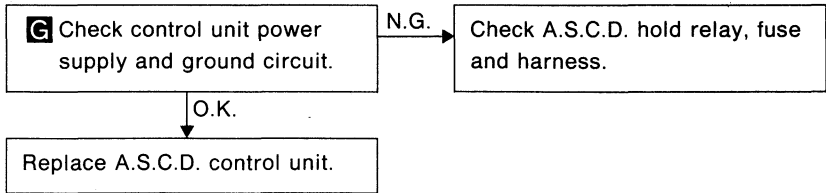

### DIAGNOSTIC PROCEDURE H

**SYMPTOM: Deceleration by cancellation is retarded.**



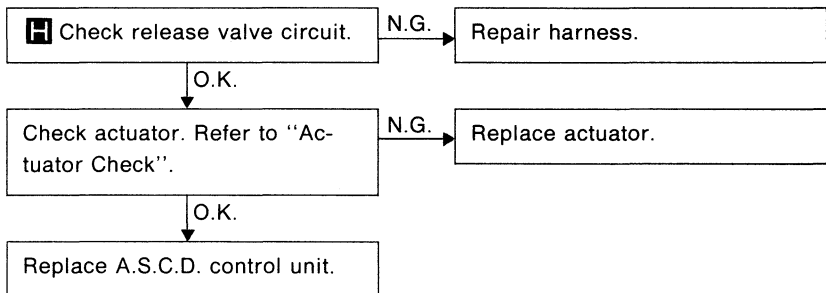


# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

## Trouble Diagnoses (Cont'd)



### DIAGNOSTIC PROCEDURE ①

**SYMPTOM: Impossible to cruise at set speed.**

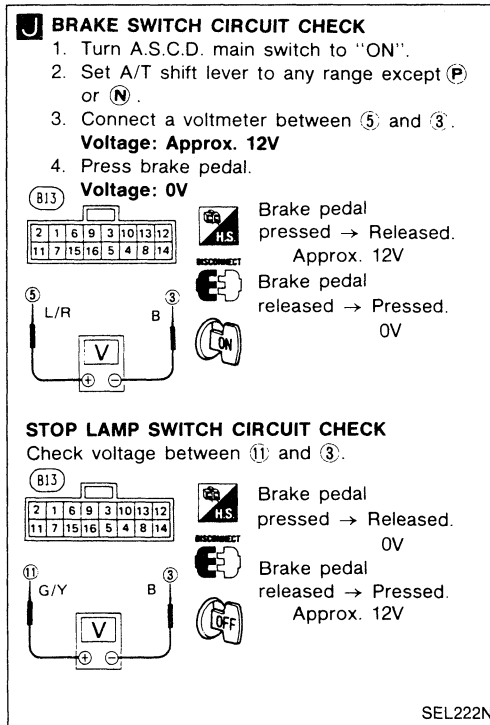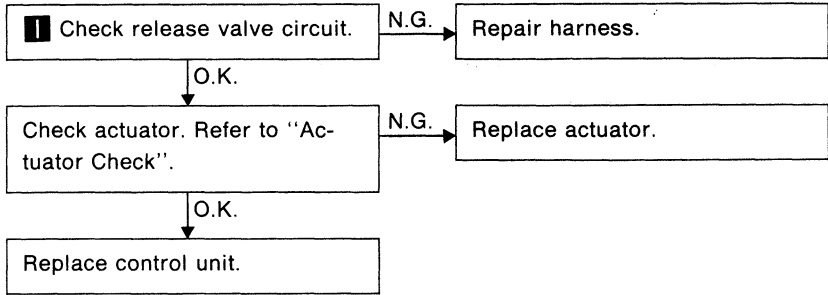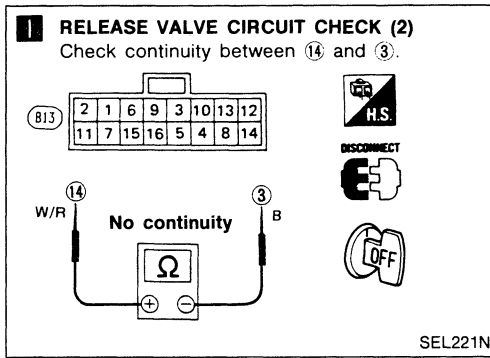


### DIAGNOSTIC PROCEDURE ④

**SYMPTOM: A.S.C.D. cannot be canceled by depressing brake pedal.**

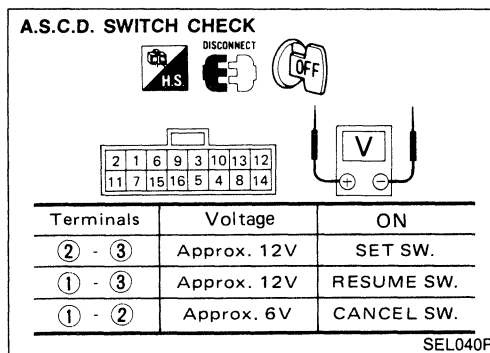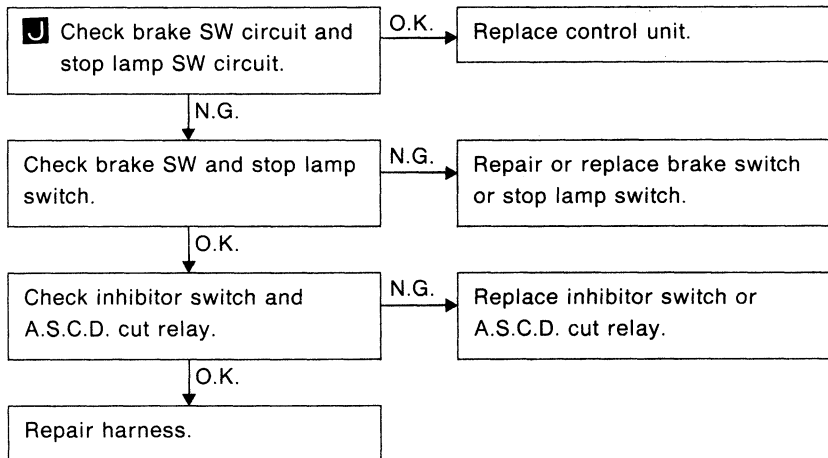


### DIAGNOSTIC PROCEDURE ⑧

**SYMPTOM: Resume switch or (and) cancel switch will not operate.**

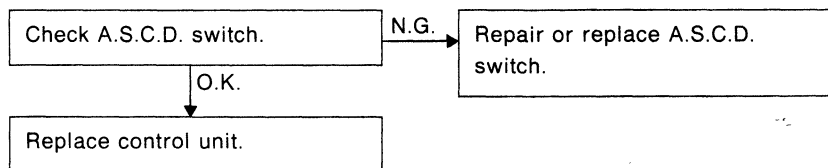

# AUTOMATIC SPEED CONTROL DEVICE (A.S.C.D.)

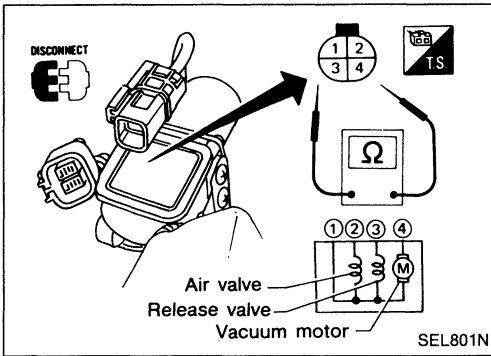

## Actuator Check

1. Disconnect connector of actuator from main harness.
2. Check actuator operations as shown.

Check actuator.

O.K.

**A**  
Check to see if motor starts when 12V D.C. is applied across ① and ④.

N.G.

Replace actuator.

O.K.

**B**  
Check to see if A.S.C.D. wire is pulled when 12V D.C. is applied across ①, ②, ③ and ④.

N.G.

Replace actuator.

O.K. (Wire is pulled.)

**C**  
Check to see if A.S.C.D. wire returns to original position 50 to 60 seconds after disconnecting lead from ④.

N.G.

Replace actuator.

O.K. (Wire does not return.)





**D**  
Disconnect lead from ① to see if A.S.C.D. wire returns immediately.

N.G.

Replace actuator.


O.K. (Wire returns.)

Actuator is O.K.

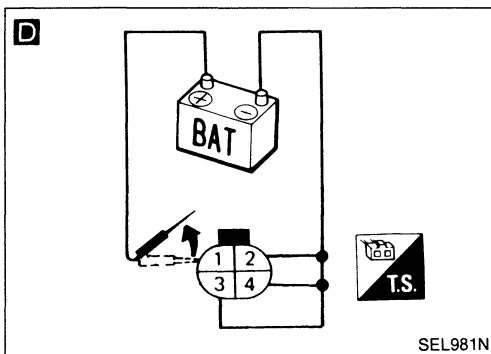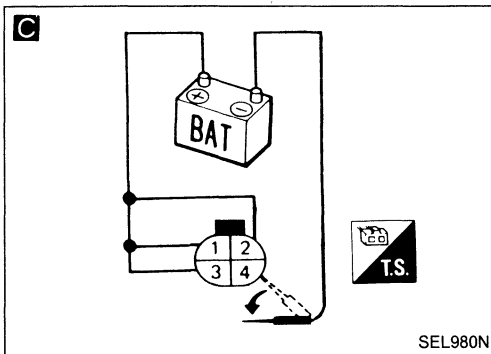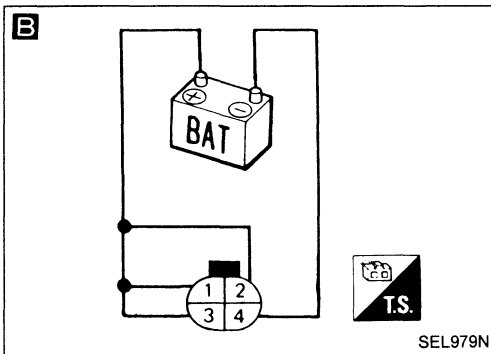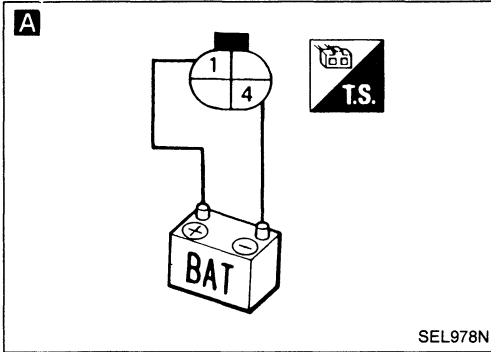


# THEFT WARNING SYSTEM

## Location of Electrical Units

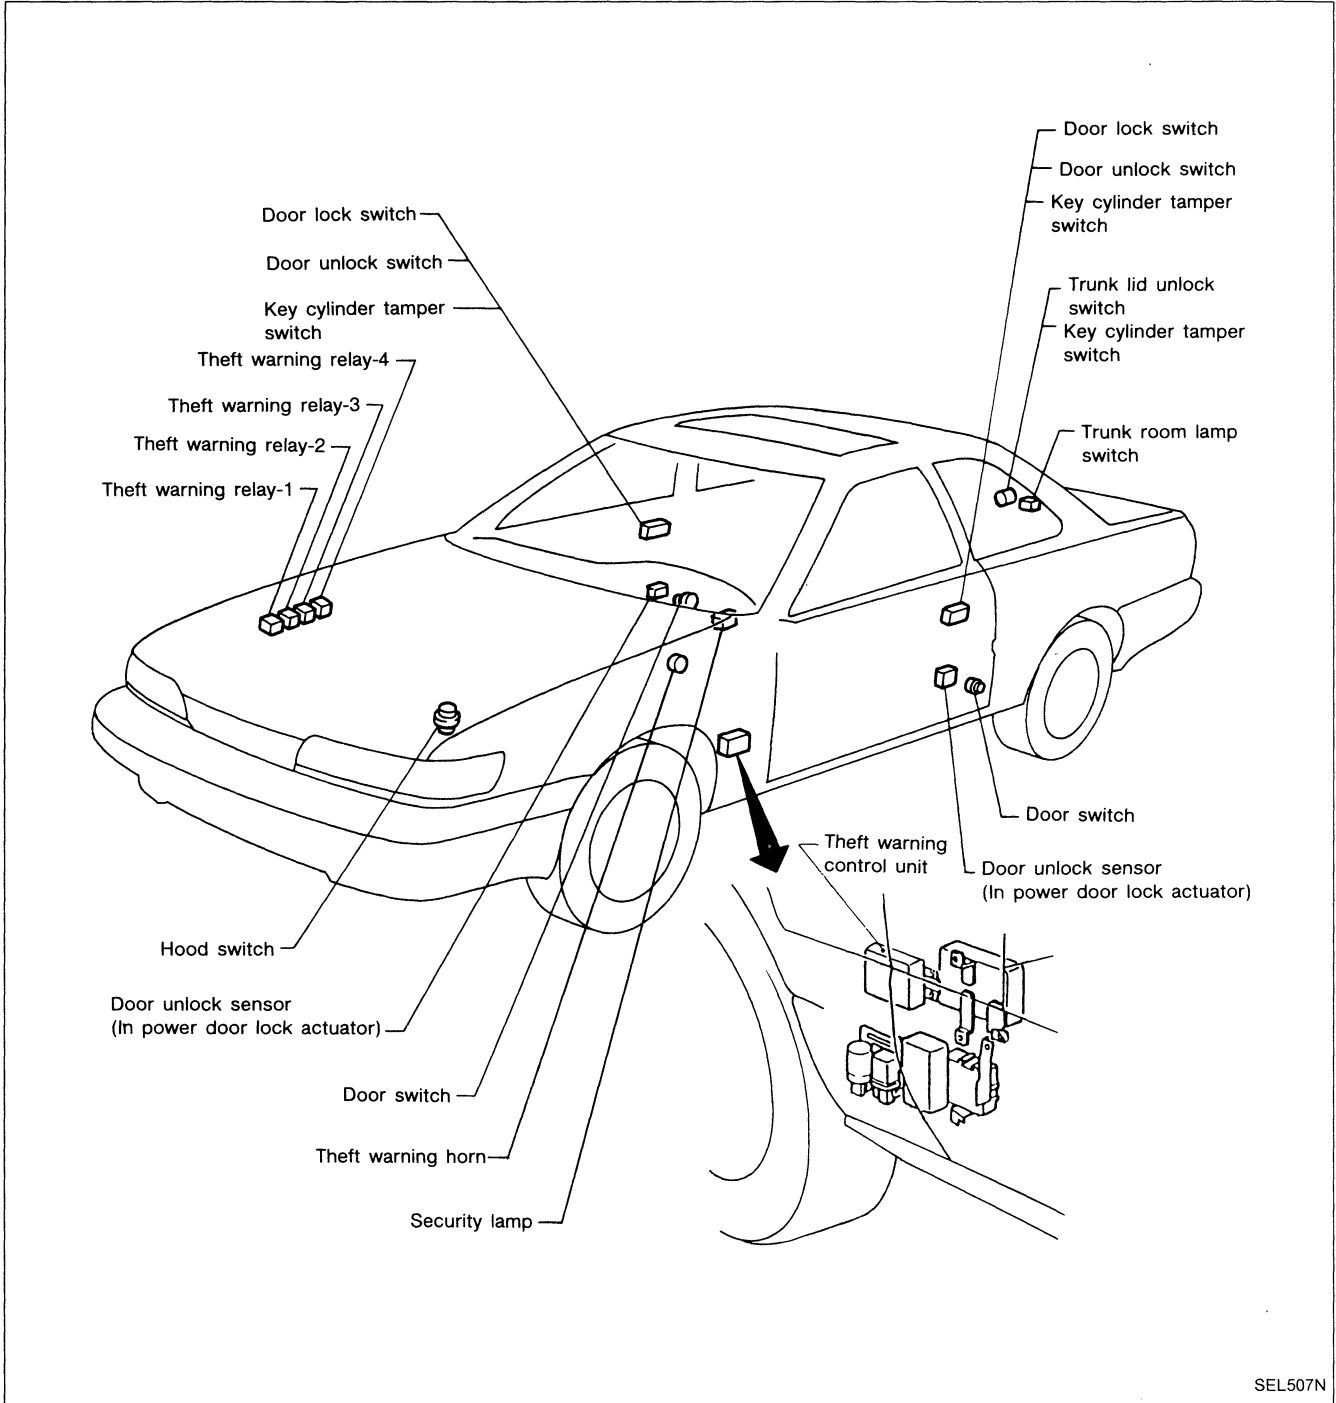

# THEFT WARNING SYSTEM


## Wiring Diagram

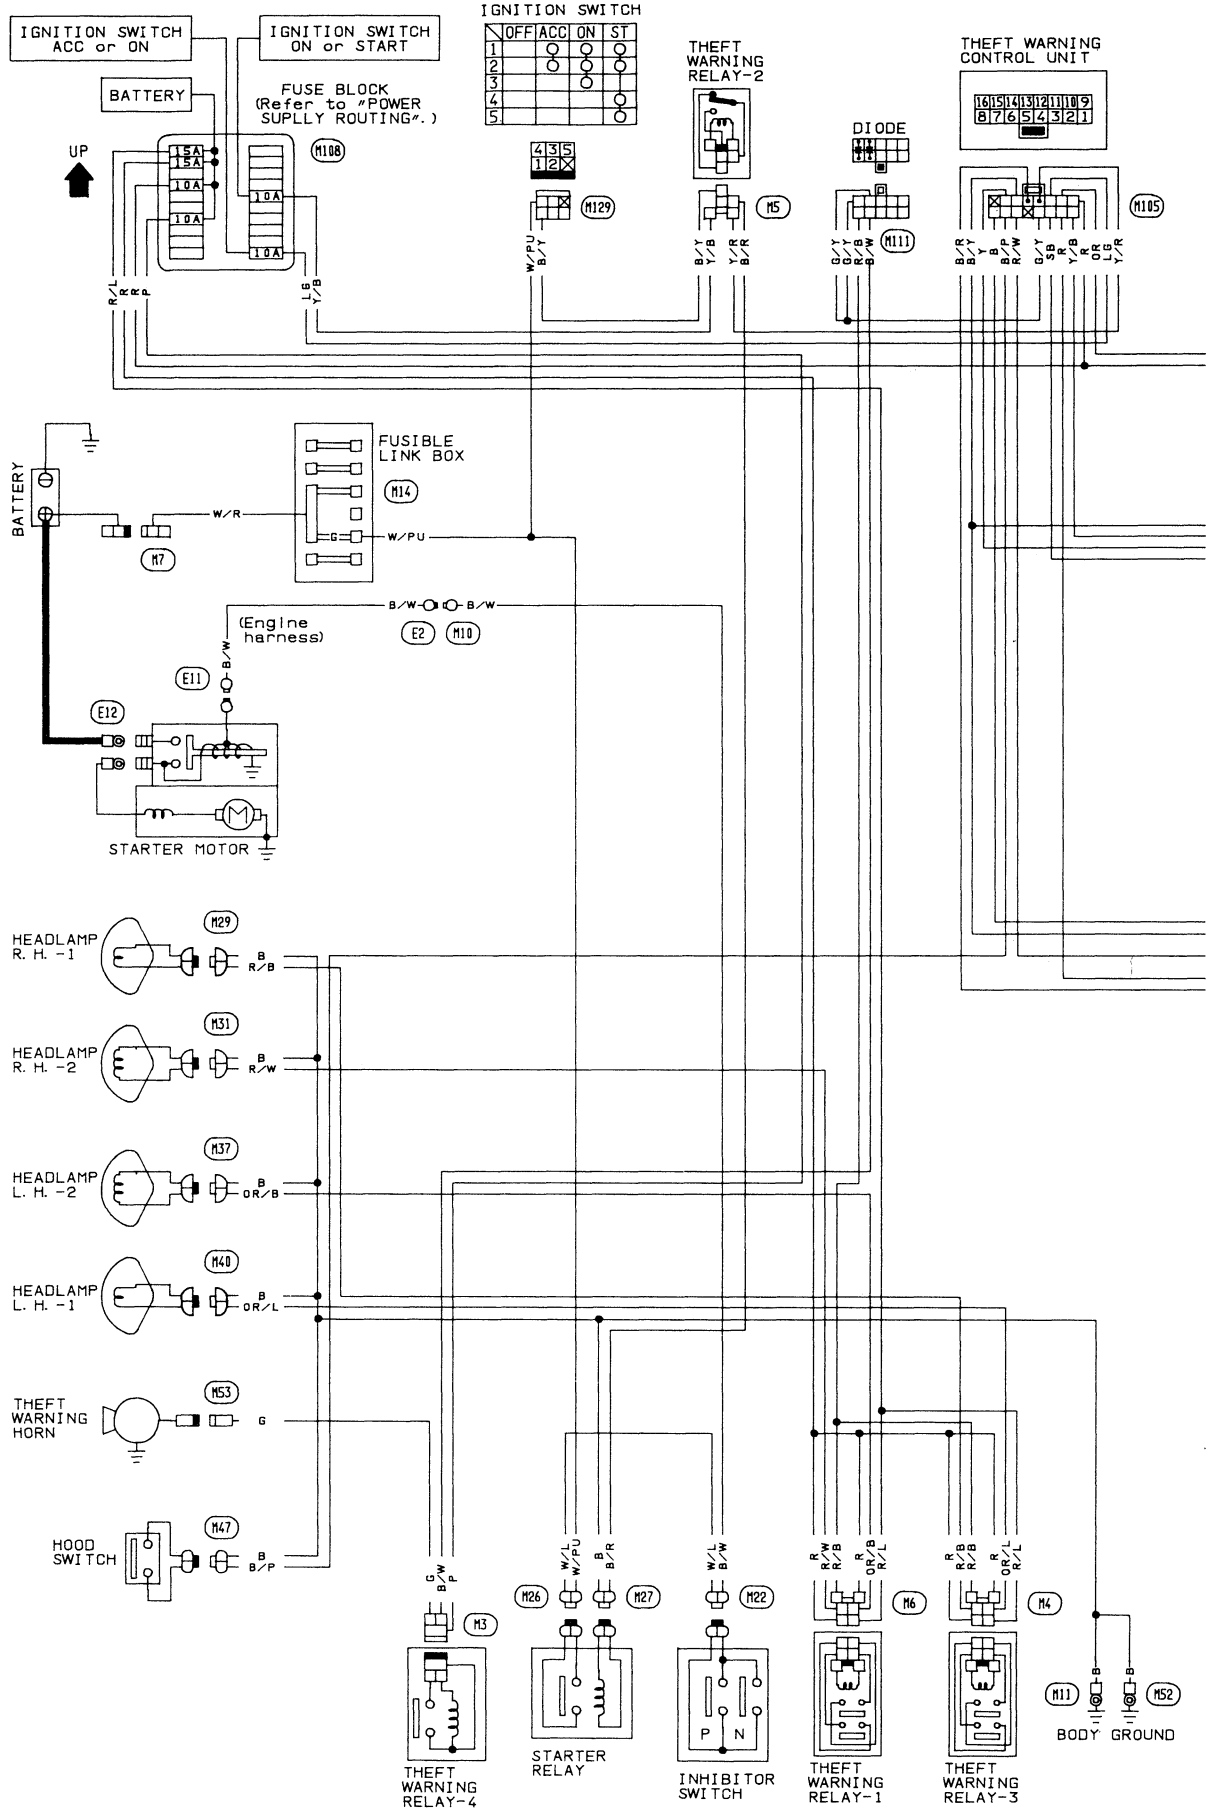



# THEFT WARNING SYSTEM

## Wiring Diagram (Cont'd)

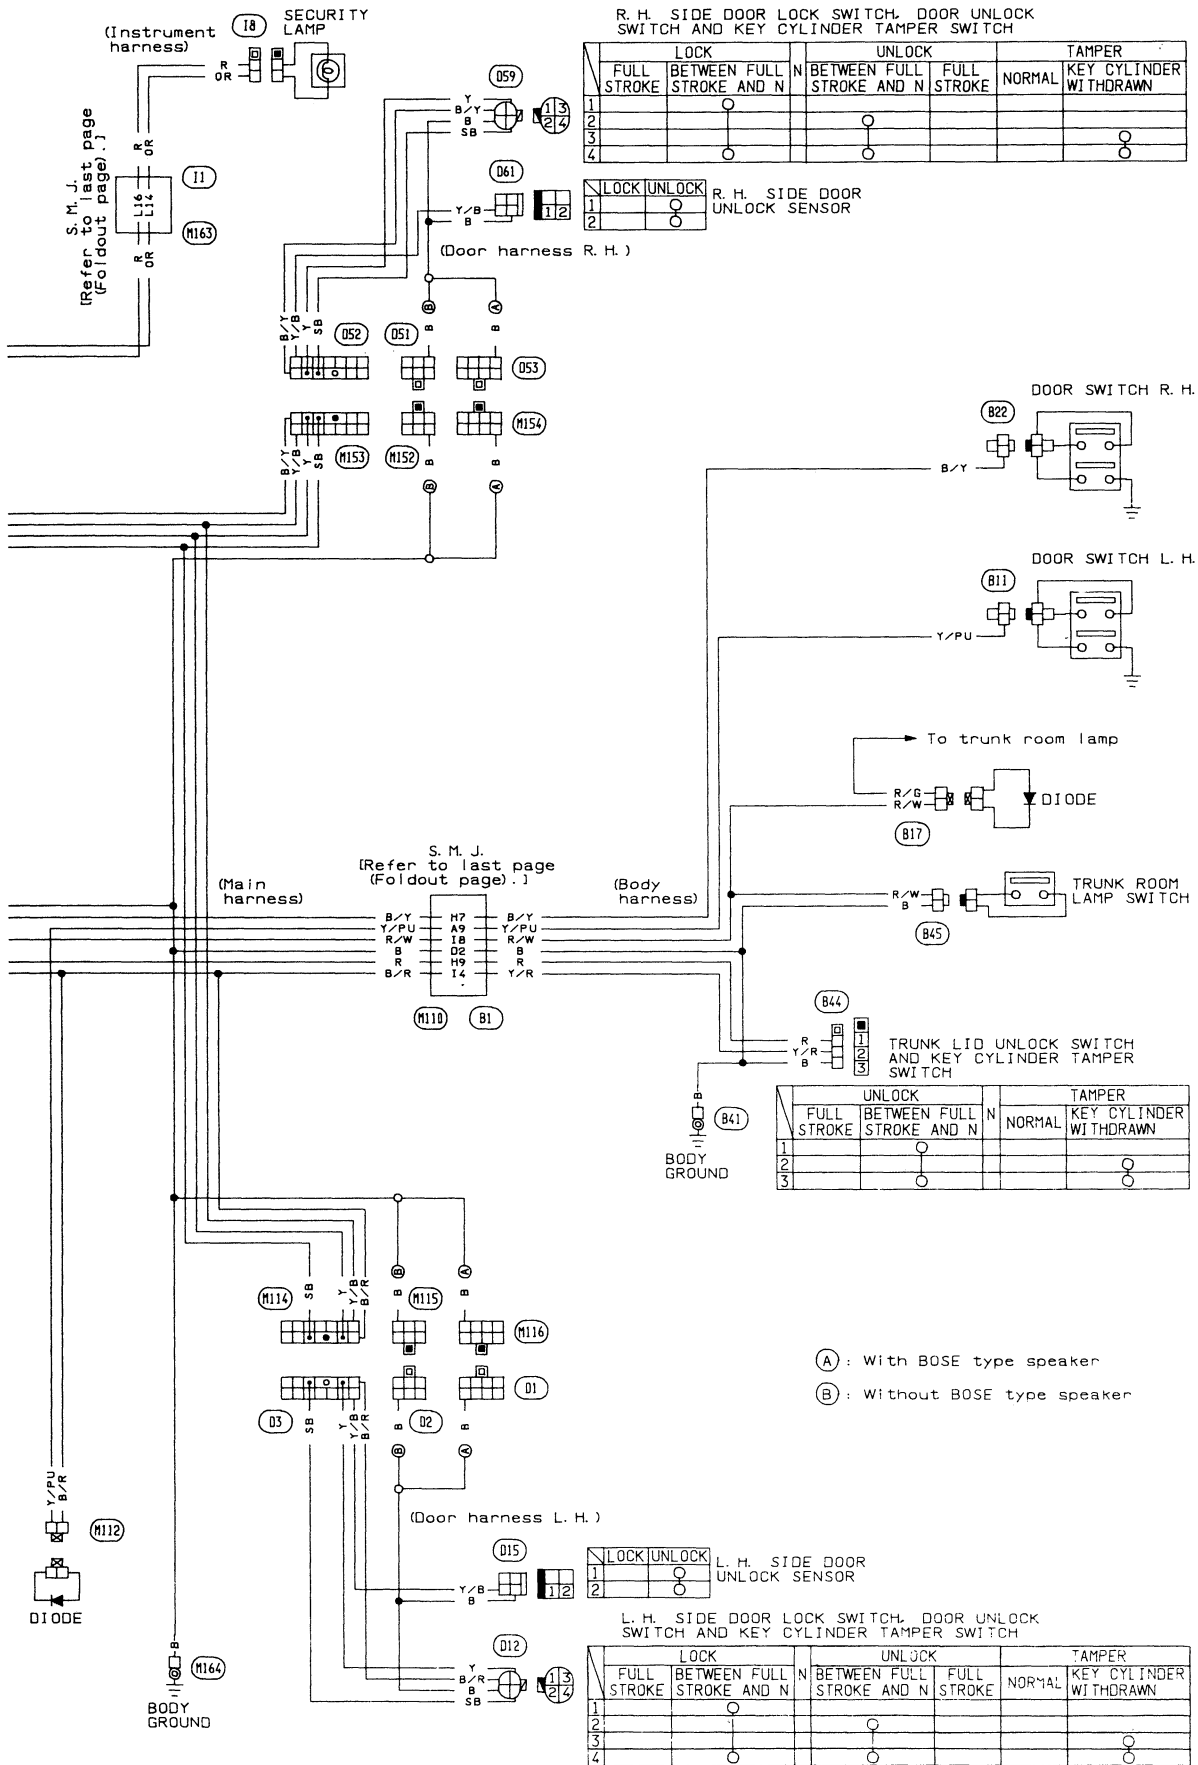

# THEFT WARNING SYSTEM

## Trouble Diagnoses

### CONTENTS

<b>SYMPTOM CHART</b> .....	EL- 97
<b>MAIN POWER SUPPLY AND GROUND CIRCUIT CHECK</b> .....	EL- 98
<b>CIRCUIT DIAGRAM FOR QUICK PINPOINT CHECK</b> .....	EL- 99
<b>DIAGNOSTIC PROCEDURE</b>	
DIAGNOSTIC PROCEDURE IND ① [SYMPTOM: Indicator lamp does not blink (Remains out).] .....	EL-100
DIAGNOSTIC PROCEDURE IND ② [SYMPTOM: Indicator lamp remains blinking.] .....	EL-101
DIAGNOSTIC PROCEDURE IND ③ [SYMPTOM: Indicator lamp does not come on (1).] .....	EL-103
DIAGNOSTIC PROCEDURE IND ④ [SYMPTOM: Indicator lamp does not come on (2).] .....	EL-104
DIAGNOSTIC PROCEDURE IND ⑤ [SYMPTOM: Indicator lamp remains lit.] .....	EL-105
DIAGNOSTIC PROCEDURE IND ⑥ [SYMPTOM: Indicator lamp does not go out (Comes on).] .....	EL-106
DIAGNOSTIC PROCEDURE IND ⑦ [SYMPTOM: Indicator lamp does not go out (Remains lit).] .....	EL-107
DIAGNOSTIC PROCEDURE ARM ① [SYMPTOM: Alarm is armed even if ignition switch is in ACC or ON position.] .....	EL-107
DIAGNOSTIC PROCEDURE ARM ② [SYMPTOM: Alarm is armed even if one or more of the doors is unlocked.] .....	EL-107
DIAGNOSTIC PROCEDURE ARM ③ [SYMPTOM: Alarm is armed even if one or more of the doors is open.] .....	EL-108
DIAGNOSTIC PROCEDURE ARM ④ [SYMPTOM: Alarm is not armed (Armed phase).] .....	EL-108
DIAGNOSTIC PROCEDURE ALR ① [SYMPTOM: Alarm is given without any cause.] .....	EL-109
DIAGNOSTIC PROCEDURE ALR ② [SYMPTOM: Alarm does not operate (Alarm phase).] .....	EL-111
DIAGNOSTIC PROCEDURE ALR ③ [SYMPTOM: Alarm does not stop (Alarm continues for over 4 minutes).] .....	EL-112
DIAGNOSTIC PROCEDURE ALR ④ [SYMPTOM: Alarm does not stop even if stop signal is given.] .....	EL-113
DIAGNOSTIC PROCEDURE ALR ⑤ [SYMPTOM: Alarm stops too soon.] .....	EL-114
DIAGNOSTIC PROCEDURE ALR ⑥ [SYMPTOM: Alarm is continuous (Alarm is not intermittent).] .....	EL-115
DIAGNOSTIC PROCEDURE ST ① [SYMPTOM: Starter motor cannot operate (Except alarm phase).] .....	EL-116
DIAGNOSTIC PROCEDURE ST ② [SYMPTOM: Starter motor can operate (Starter killed phase).] .....	EL-116

# THEFT WARNING SYSTEM

## Trouble Diagnoses (Cont'd)

### SYMPTOM CHART


PROCEDURE	Main Power Supply and Ground Circuit Check	Diagnostic Procedure																			
REFERENCE PAGE	EL-98	EL-100	EL-101	EL-103	EL-104	EL-105	EL-106	EL-107	EL-107	EL-107	EL-108	EL-108	EL-109	EL-111	EL-112	EL-113	EL-114	EL-115	EL-116	EL-116	
SYMPTOM	Power Supply and Ground Circuit	Procedure IND ①	Procedure IND ②	Procedure IND ③	Procedure IND ④	Procedure IND ⑤	Procedure IND ⑥	Procedure IND ⑦	Procedure ARM ①	Procedure ARM ②	Procedure ARM ③	Procedure ARM ④	Procedure ALR ①	Procedure ALR ②	Procedure ALR ③	Procedure ALR ④	Procedure ALR ⑤	Procedure ALR ⑥	Procedure ST ①	Procedure ST ②	
Indicator lamp	does not blink (Remains out)	○	○																		
	remains blinking			○																	
	does not come on (1)	○			○																
	does not come on (2)	○				○															
	remains lit						○														
	does not go out (Comes on)							○													
	does not go out (Remains lit)								○												
Alarm	is armed even if ignition switch is in ACC or ON position								○												
	is armed even if one or more of the doors is unlocked									○											
	is armed even if one or more of the doors is open										○										
	is not armed (Armed phase)	○										○									
	is given without any cause												○								
	does not operate (Alarm phase)	○												○							
	does not stop (Alarm continues for over 4 minutes)														○						
	does not stop even if stop signal is given																○				
	stops too soon																		○		
	is continuous (Alarm is not intermittent)																		○		
Starter motor	cannot operate (Except alarm phase)																		○		
	can operate (Starter killed phase)																			○	

# THEFT WARNING SYSTEM


## Trouble Diagnoses (Cont'd)

### MAIN POWER SUPPLY AND GROUND CIRCUIT CHECK


#### Power supply circuit check for theft warning control unit

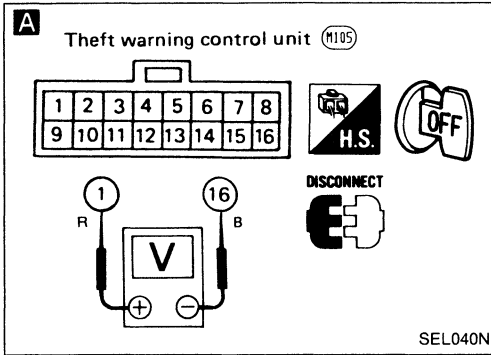

Terminals	Ignition switch position		
	OFF	ACC	ON
<b>A</b> ① - ⑩	Battery voltage	Battery voltage	Battery voltage
<b>B</b> ③ - ⑩	0V	Battery voltage	Battery voltage

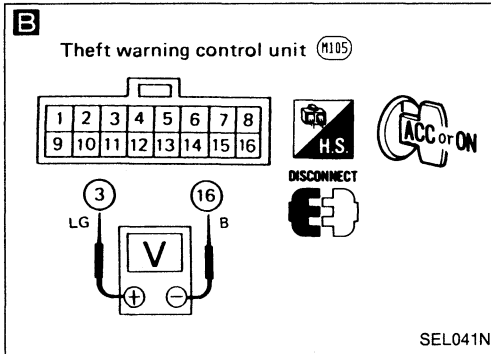

#### Ground circuit check for theft warning control unit

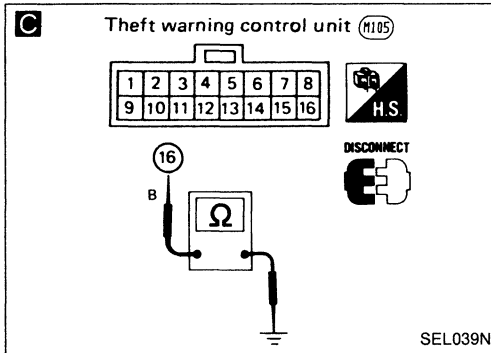


**C**

Terminals	Continuity
⑩ - Ground	Yes

# THEFT WARNING SYSTEM

## Trouble Diagnoses (Cont'd)

### CIRCUIT DIAGRAM FOR QUICK PINPOINT CHECK

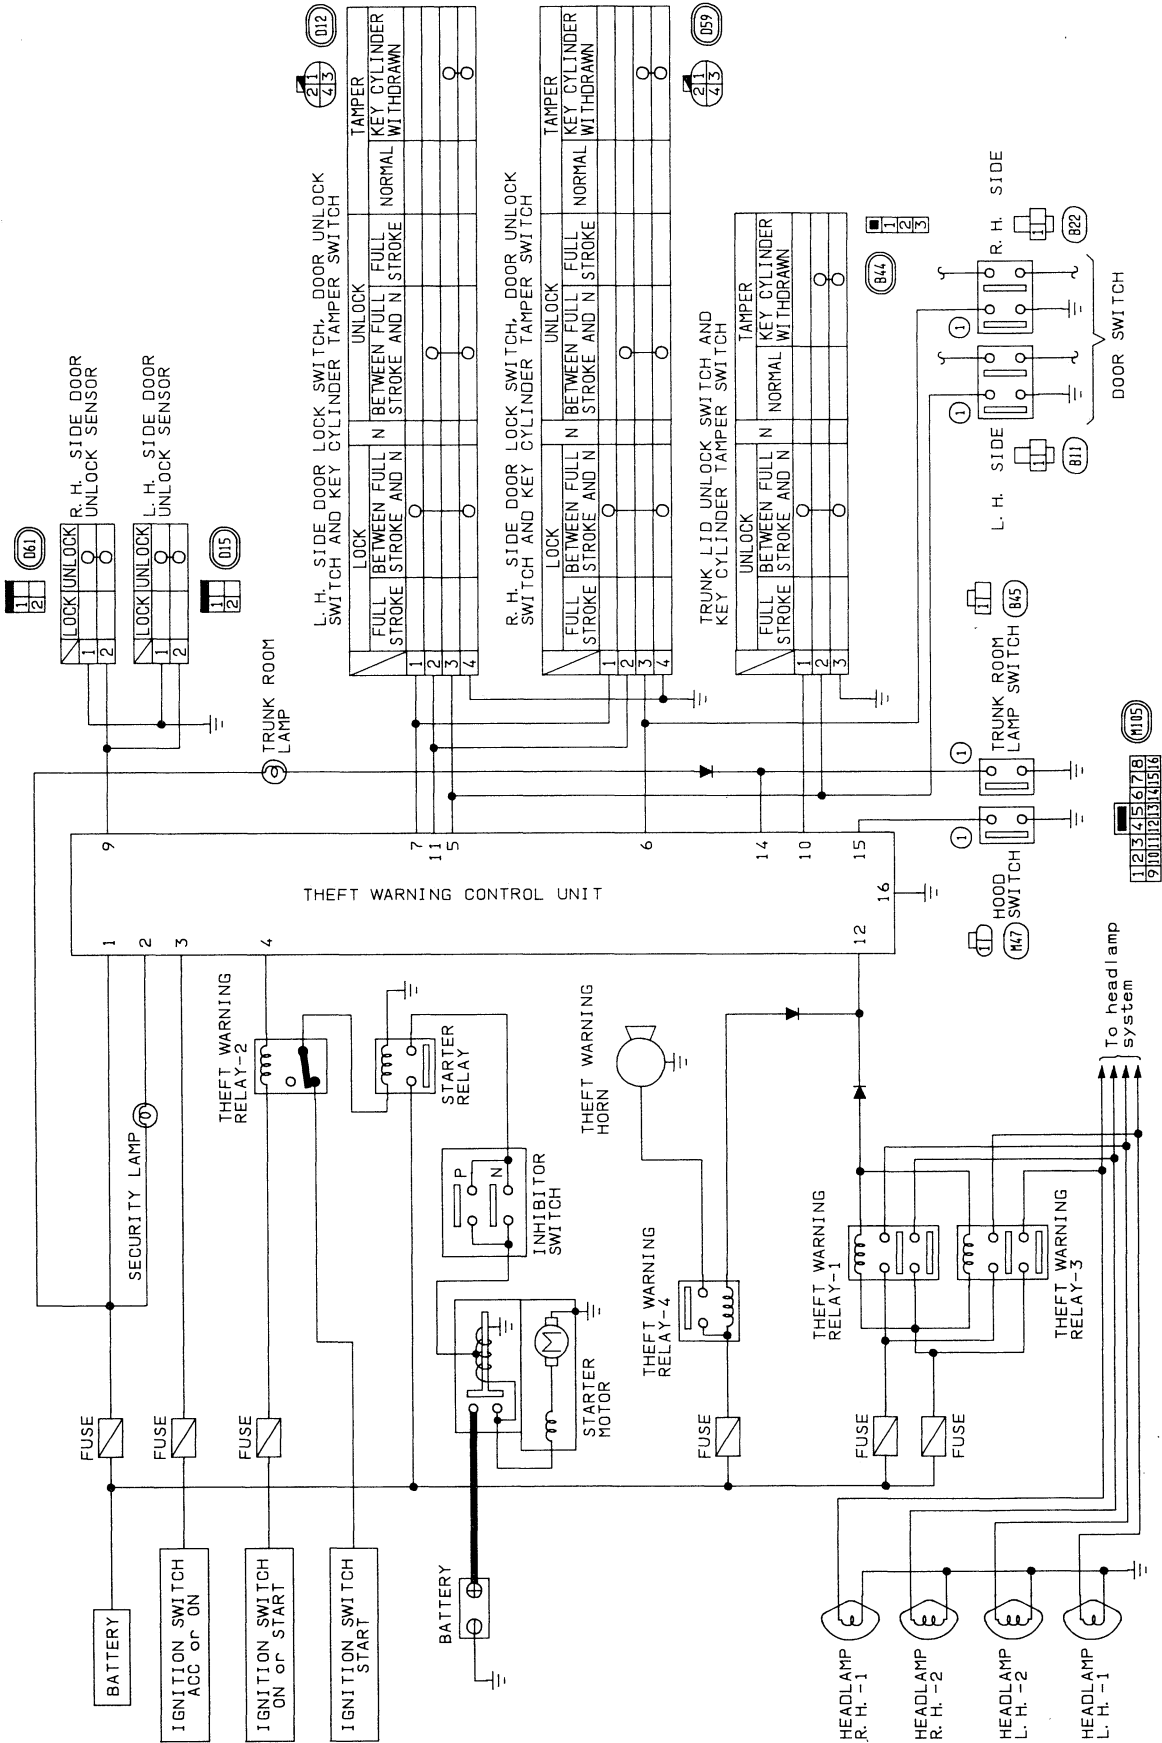

# THEFT WARNING SYSTEM





## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE IND ①

**SYMPTOM:** Indicator lamp does not blink (Remains out).

**CONDITION:**

- Ignition switch OFF
  - At least one of the doors, hood, or trunk lid is open.
- Perform MAIN POWER SUPPLY CIRCUIT AND GROUND CIRCUIT CHECK before referring to the following flow chart.

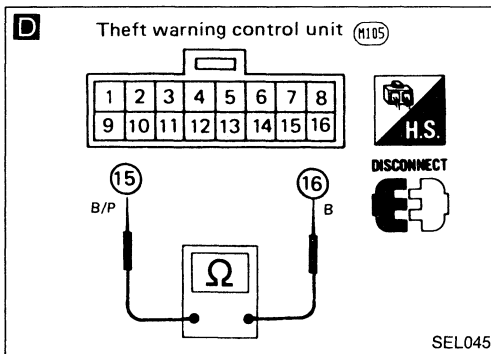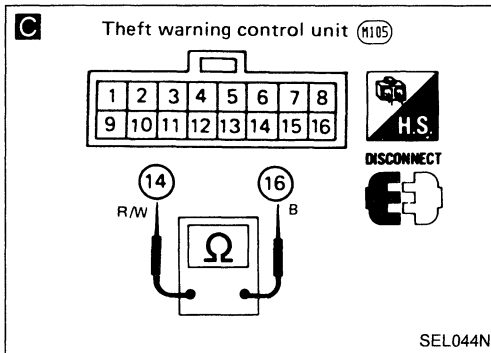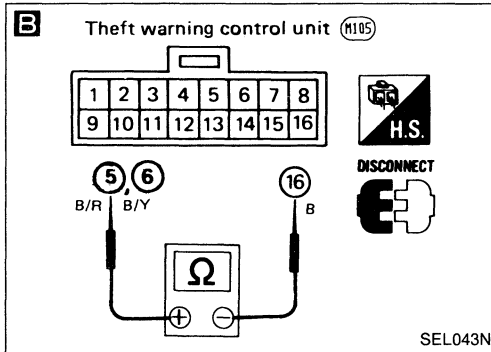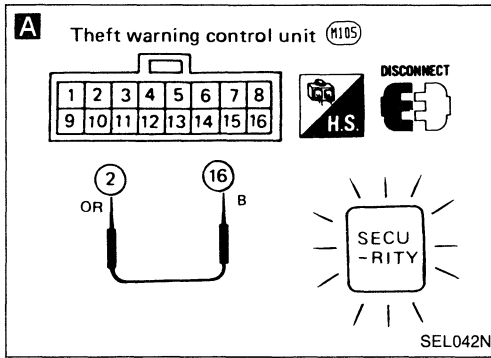

**A**

Indicator lamp circuit

- Check if indicator lamp comes on when connecting terminals ② and ⑩ .

N.G. → 1) Check indicator lamp bulb.  
2) Check indicator lamp circuit.

O.K. ↓

**B**

Door switch trigger check

- Check continuity between terminals ⑤ . ⑥ and ⑩ .

Condition	Continuity
Driver's door	
⑤ Closed	No
⑤ Opened	Yes
Passenger's door	
⑥ Closed	No
⑥ Opened	Yes

N.G. → 1) Check door switch.  
2) Check door switch circuit.

O.K. ↓

**C**

Trunk room lamp switch trigger check

- Check continuity between terminals ⑭ and ⑩ .

Condition	Continuity
Trunk lid is open	Yes
Trunk lid is closed	No

N.G. → 1) Check trunk room lamp switch.  
2) Check trunk room lamp switch circuit.

O.K. ↓

**D**

Hood switch trigger check

- Check continuity between terminals ⑮ and ⑩ .

Condition	Continuity
Hood is open	Yes
Hood is closed	No

N.G. → 1) Check hood switch.  
2) Check hood switch circuit.

O.K. ↓

Replace control unit.

# THEFT WARNING SYSTEM


## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE IND ②

**SYMPTOM:** Indicator lamp remains blinking.

**CONDITION:**

- Ignition switch OFF
- Doors, hood and trunk lid are closed.

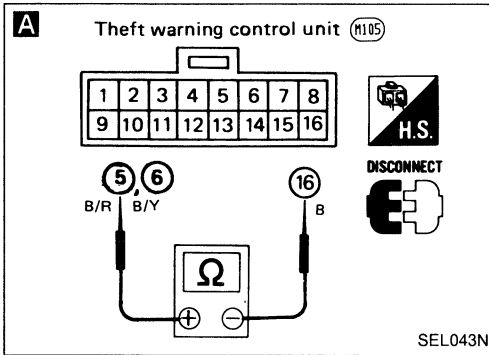

**A**

Door switch trigger check


- Check continuity between terminals ⑤, ⑥ and ⑯.

N.G.

Check following items.

- Door switch
- Door switch circuit

Condition	Continuity
Driver's door	
⑤ Closed	No
⑤ Opened	Yes
Passenger's door	
⑥ Closed	No
⑥ Opened	Yes

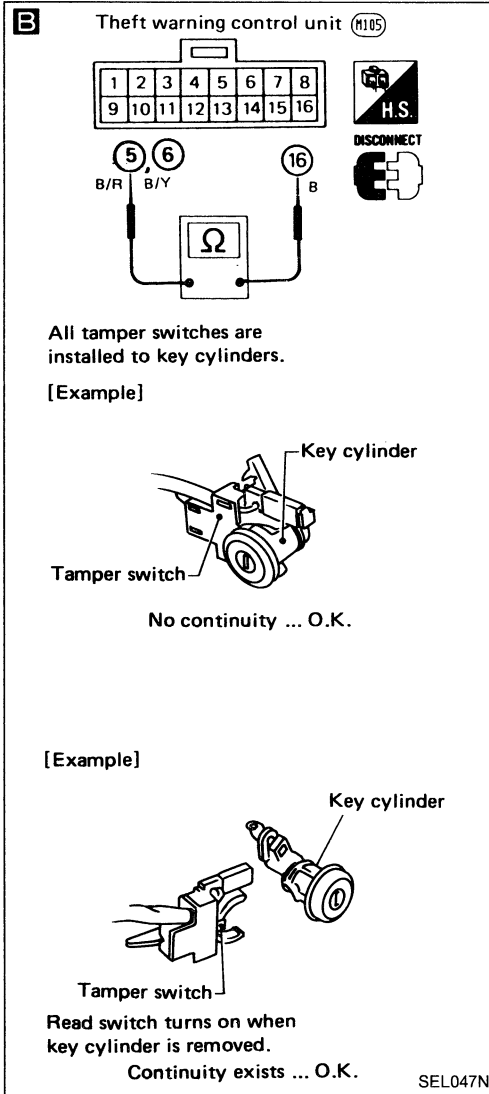

**B**

Tamper switch trigger check

- Check continuity between terminals ⑤, ⑥ and ⑯.

N.G.

Check following items.

- Tamper switch
- Tamper switch circuit

Condition	Continuity
Tamper switch (Driver's door/trunk lid)	
⑤ Normal	No
⑤ Removed	Yes
Tamper switch (Passenger's door)	
⑥ Normal	No
⑥ Removed	Yes

**C**

Trunk room lamp switch trigger check

- Check continuity between terminals ⑭ and ⑯.

N.G.


Check following items.

- Trunk room lamp
- Trunk room lamp switch circuit

Condition	Continuity
Trunk lid is open	Yes
Trunk lid is closed	No



O.K.

Ⓐ

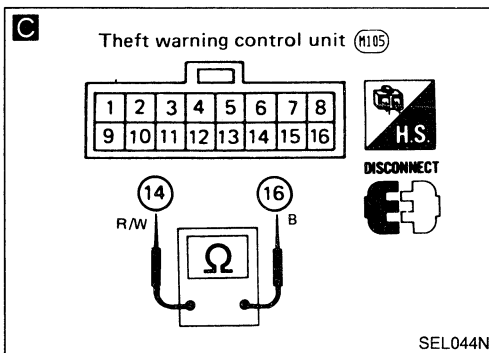

# THEFT WARNING SYSTEM

## Trouble Diagnoses (Cont'd)

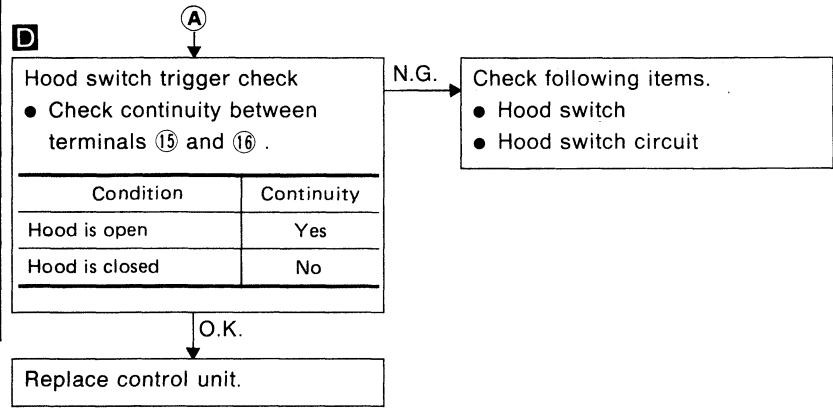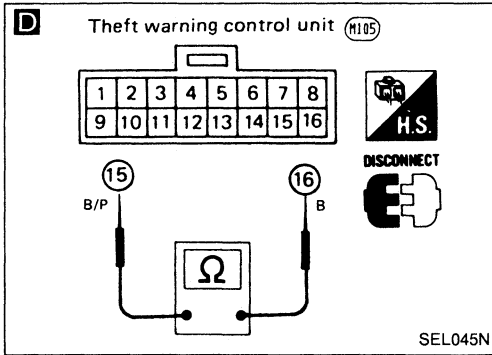



# THEFT WARNING SYSTEM




## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE IND ③

**SYMPTOM:** Indicator lamp does not come on (1).

**CONDITION:**

- Ignition switch OFF
- Doors hood and trunk lid are closed.
- After closing all doors, doors are locked with key.

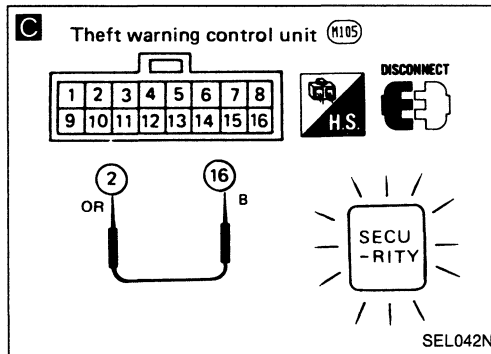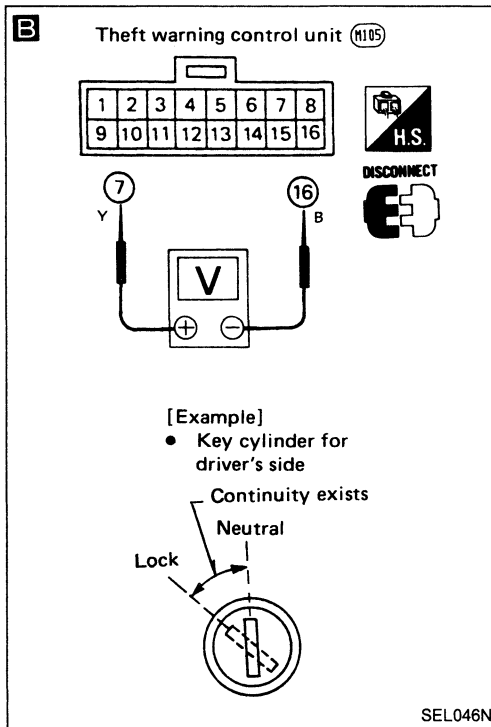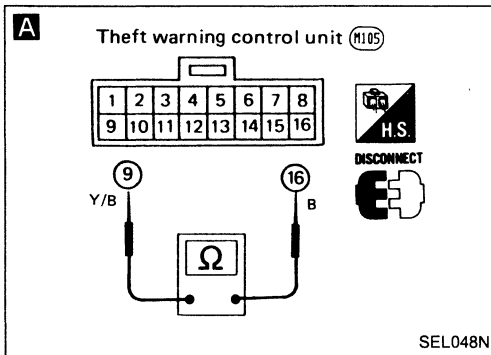

Check to see if indicator lamp blinks while opening any door.

N.G. Refer to "DIAGNOSTIC PROCEDURE IND ①".

O.K.

Check to see if indicator lamp goes out while closing and unlocking all doors.

N.G. Refer to "DIAGNOSTIC PROCEDURE IND ⑥".

O.K.

**A** Door unlock sensor signal check

- Check continuity between terminals ⑨ and ⑯.

N.G. Check following items.

- Door unlock sensor
- Door unlock sensor circuit

Condition	Continuity
Locked	No
Unlocked	Yes

O.K.

**B** Armed signal check

- Check continuity between terminals ⑦ and ⑯.
- Continuity exists ... O.K.

N.G. Check following items.

- Door lock switch
- Door lock switch circuit

O.K.

**C** Indicator lamp check

- Check to see if indicator lamp comes on while connecting terminals ② and ⑯

N.G. Check following items.

- Indicator lamp bulb
- Indicator lamp circuit

O.K.

Replace control unit.

# THEFT WARNING SYSTEM




## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE IND ④

**SYMPTOM:** Indicator lamp does not come on (2).

**CONDITION:**

- Ignition switch OFF
- After closing hood and trunk lid, lock and close all doors without key. Or after locking and closing all doors, close hood and trunk lid.

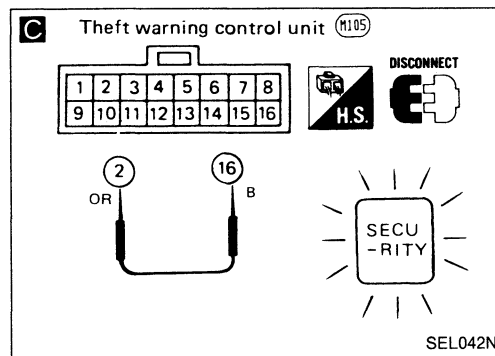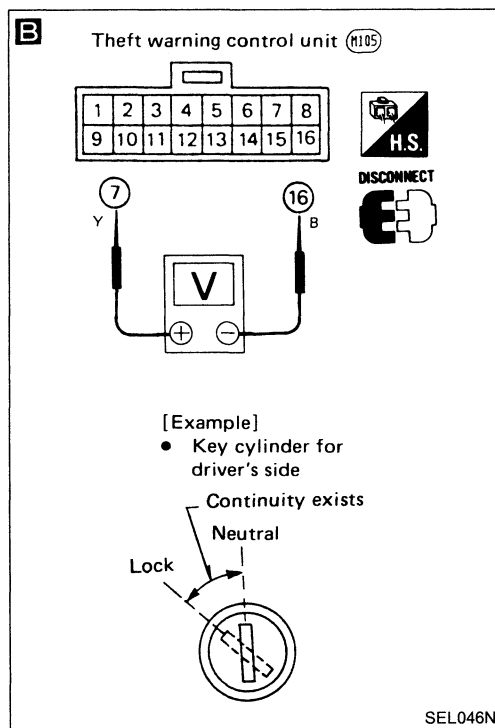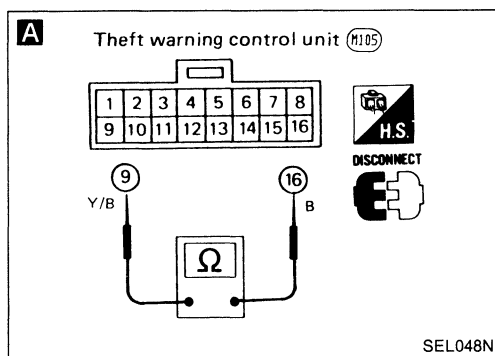

Check to see if indicator lamp blinks while any door is open. N.G. Refer to "DIAGNOSTIC PROCEDURE IND ①".

O.K.

Check to see if indicator lamp goes out while all doors are closed and unlocked. N.G. Refer to "DIAGNOSTIC PROCEDURE IND ⑥".

O.K.

**A** Door unlock sensor signal check

- Check continuity between terminals ⑨ and ⑯.

Condition	Continuity
Locked	No
Unlocked	Yes

N.G. Check following items.

- Door unlock sensor
- Door unlock sensor circuit

O.K.

**B** Armed signal check

- Check continuity between terminals ⑦ and ⑯.

**Continuity exists .. O.K.**

N.G. Check following items.

- Door lock sensor
- Door lock sensor circuit

O.K.

**C** Indicator lamp circuit check

- Check to see if indicator lamp comes on while connecting terminals ② and ⑯.

N.G. Check following items.

- Indicator lamp bulb
- Indicator lamp circuit

O.K.

Replace control unit.

# THEFT WARNING SYSTEM






## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE IND ⑤


**SYMPTOM:** Indicator lamp remains lit.

**CONDITION:**


- Ignition switch OFF
  - At least one of the doors is open or unlocked.
- or
- Reset the armed phase.

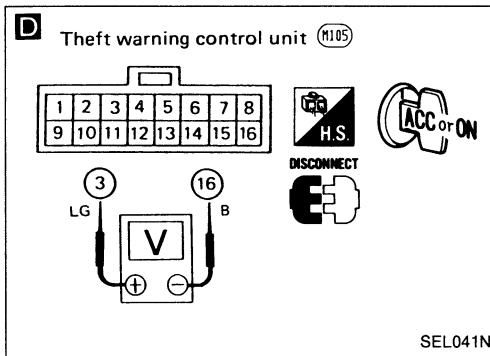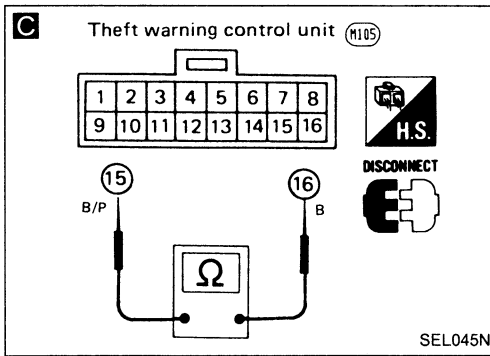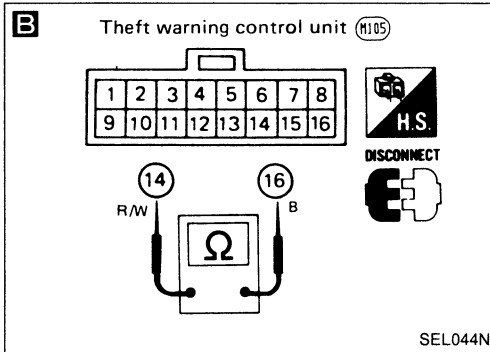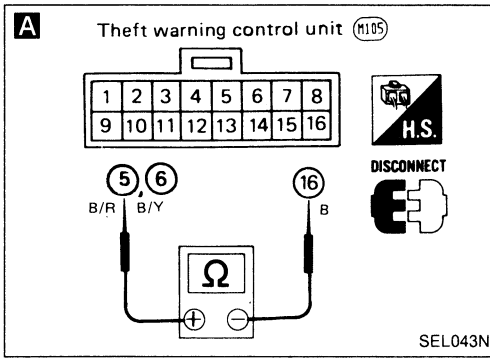


Condition	Continuity
Driver's door	
⑤ Closed	No
⑤ Opened	Yes
Passenger's door	
⑥ Closed	No
⑥ Opened	Yes

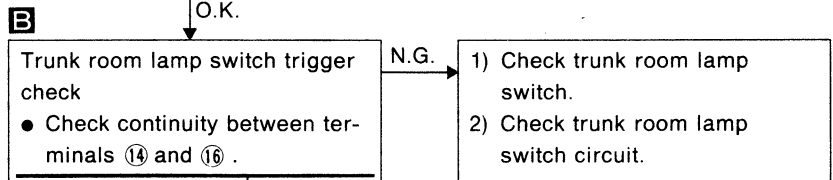

Condition	Continuity
Trunk lid is open	Yes
Trunk lid is closed	No



Condition	Continuity
Hood is open	Yes
Hood is closed	No



O.K. → Replace control unit.

# THEFT WARNING SYSTEM


## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE IND ⑥

**SYMPTOM:** Indicator lamp does not go out (Comes on).

**CONDITION:**

- Ignition switch OFF
- Doors close and at least one of the doors unlocks.

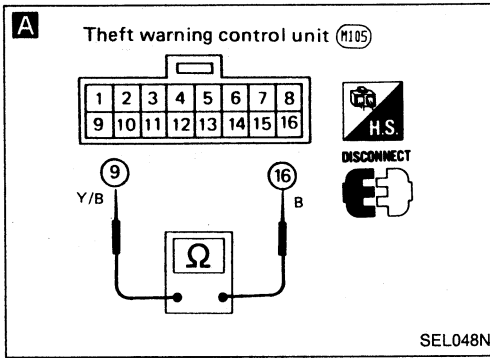

Check to see if indicator lamp does not blink while opening any door.

N.G.

Indicator lamp remains lit.

Indicator lamp goes out.

Refer to "DIAGNOSTIC PROCEDURE IND ⑤".

Refer to "DIAGNOSTIC PROCEDURE IND ①".

O.K.

**A**

Door unlock sensor signal check

- Check continuity between terminals ⑨ and ⑯.

N.G.

Check following items.

- Door unlock sensor
- Door unlock sensor circuit

Condition	Continuity
Locked	No
Unlocked	Yes

O.K.

Replace control unit.

# THEFT WARNING SYSTEM



## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE IND ⑦

**SYMPTOM:** Indicator lamp does not go out (Remains lit).



**CONDITION:**

- Ignition switch OFF
- More than 30 seconds have passed after closing and locking all doors.

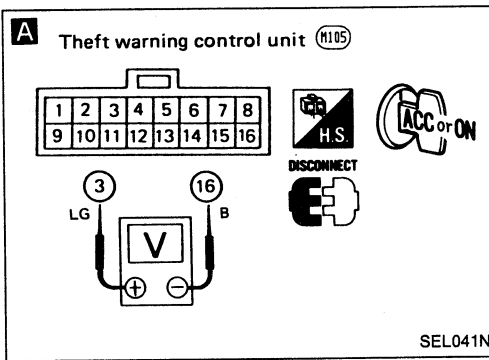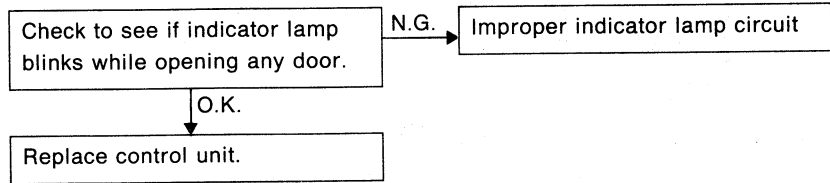


### DIAGNOSTIC PROCEDURE ARM ①

**SYMPTOM:** Alarm is armed even if ignition switch is in ACC or ON position.

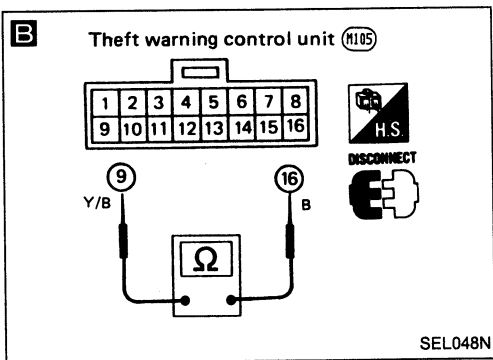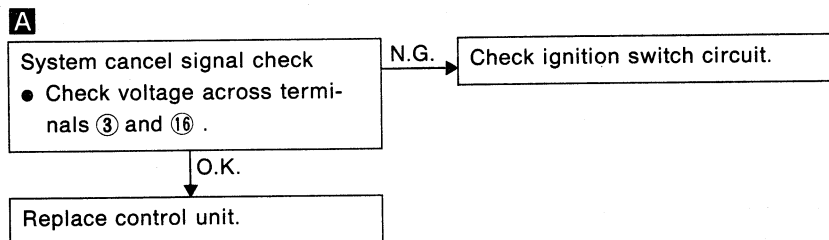

### DIAGNOSTIC PROCEDURE ARM ②

**SYMPTOM:** Alarm is armed even if one or more of the doors is unlocked.

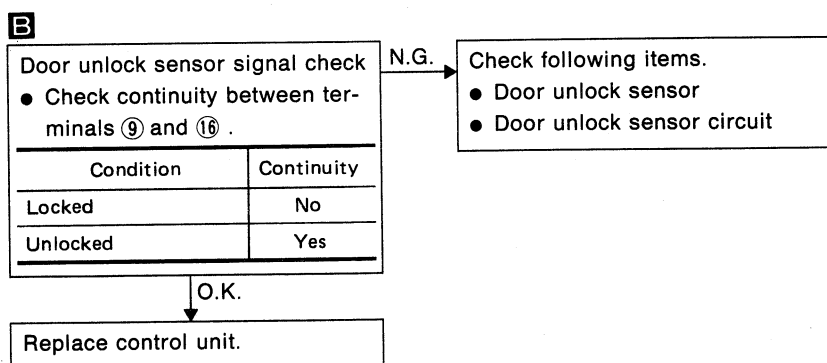


# THEFT WARNING SYSTEM

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE ARM ③

**SYMPTOM:** Alarm is armed even if one or more of the doors is open.

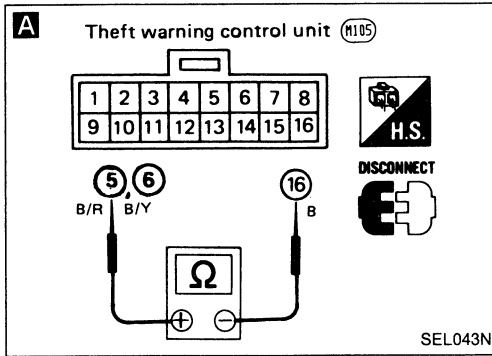

**A** Door switch trigger check  
 ● Check continuity between terminals ⑤, ⑥ and ⑯.

N.G. → 1) Check door switch.  
 2) Check door switch circuit.

O.K. ↓

**B** Trunk room lamp switch trigger check  
 ● Check continuity between terminals ⑭ and ⑯.

N.G. → 1) Check trunk room lamp switch.  
 2) Check trunk room lamp switch circuit.

Condition	Continuity
Trunk lid is open	Yes
Trunk lid is closed	No

O.K. ↓



**C** Hood switch trigger check  
 ● Check continuity between terminals ⑮ and ⑯.

N.G. → 1) Check hood switch.  
 2) Check hood switch circuit.

Condition	Continuity
Hood is open	Yes
Hood is closed	No

O.K. ↓

Replace control unit.

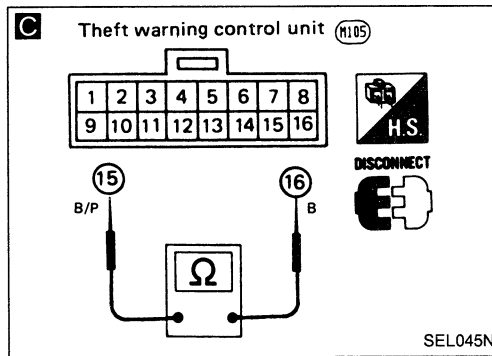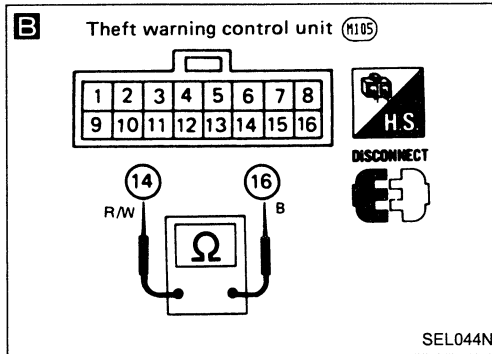

### DIAGNOSTIC PROCEDURE ARM ④

**SYMPTOM:** Alarm is not armed (Armed phase).

Check to see if indicator lamp comes on after the system is set.

N.G. → Refer to "DIAGNOSTIC PROCEDURE IND ③ and IND ④".

O.K. ↓

Check to see if indicator lamp goes out after about 30 seconds.

N.G. → Refer to "DIAGNOSTIC PROCEDURE IND ⑦".

O.K. ↓

Refer to "DIAGNOSTIC PROCEDURE ALR ②".

# THEFT WARNING SYSTEM





## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE ALR ①


**SYMPTOM:** Alarm is given without any cause.

**CONDITION:**


- Ignition switch OFF
- All doors are closed and locked.

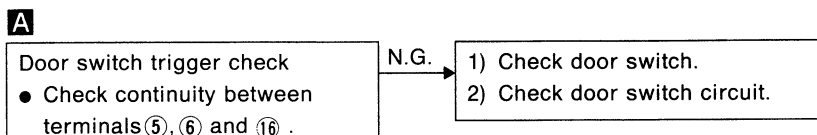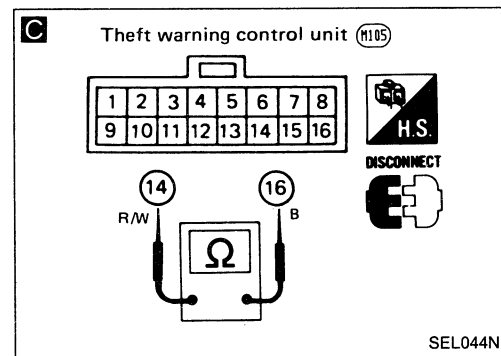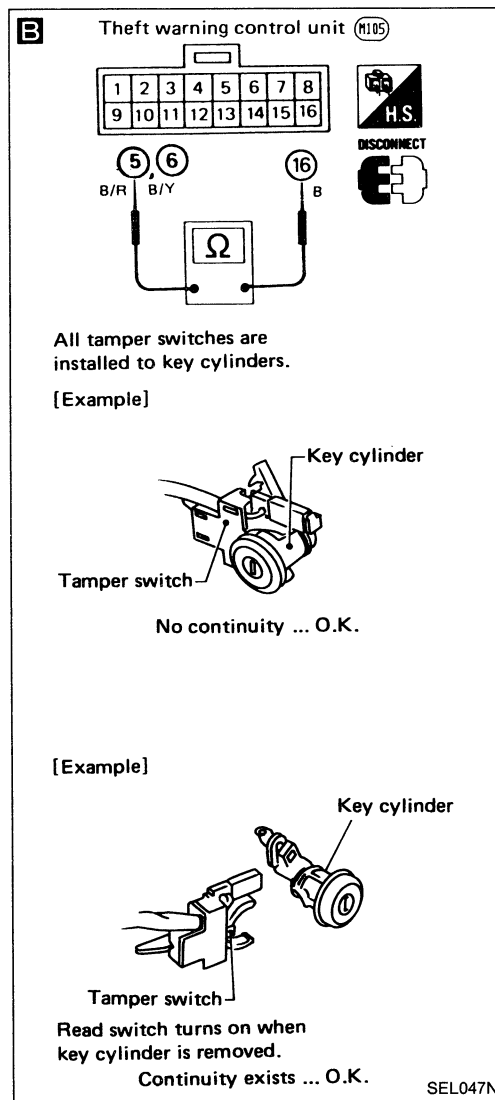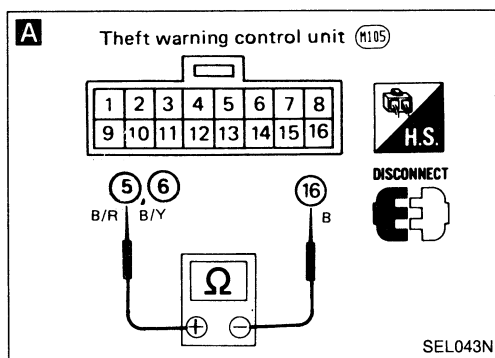

Condition	Continuity
Driver's door	
⑤ Closed	No
⑤ Opened	Yes
Passenger's door	
⑥ Closed	No
⑥ Opened	Yes

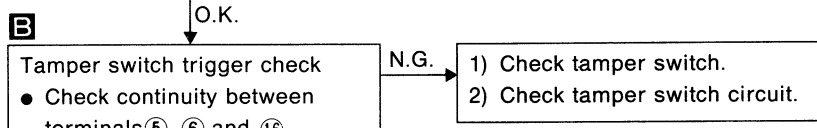

Condition	Continuity
Tamper switch (Driver's door/trunk lid)	
⑤ Normal	No
⑤ Removed	Yes
Tamper switch (Passenger's door)	
⑥ Normal	No
⑥ Removed	Yes


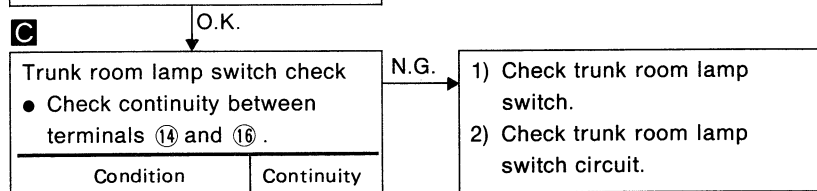


Condition	Continuity
Trunk lid is open	Yes
Trunk lid is closed	No

O.K. → **A**

# THEFT WARNING SYSTEM

## Trouble Diagnoses (Cont'd)

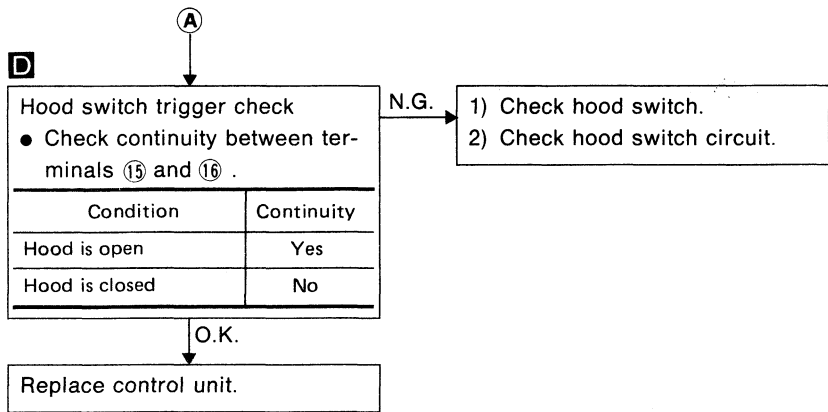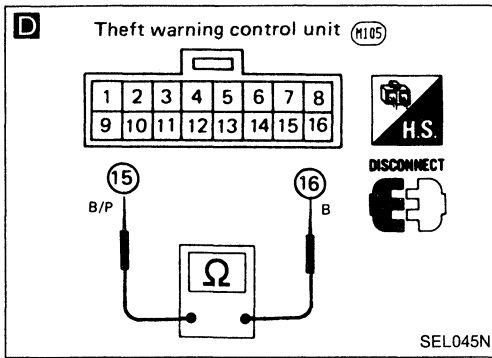






# THEFT WARNING SYSTEM

## Trouble Diagnoses (Cont'd)


### DIAGNOSTIC PROCEDURE ALR ②

**SYMPTOM: Alarm does not operate (Alarm phase).**

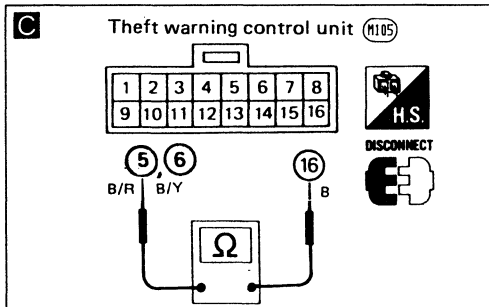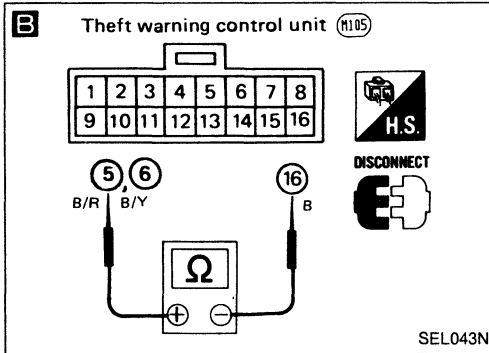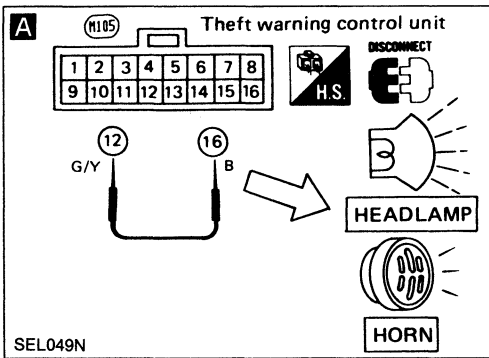


All tamper switches are installed to key cylinders.

[Example]

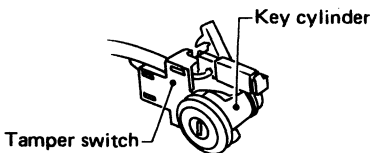

No continuity ... O.K.

[Example]

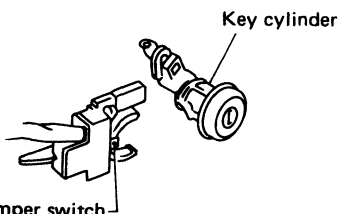

Read switch turns on when key cylinder is removed.

Continuity exists ... O.K.

SEL047N

Check to see if indicator lamp comes on after the system is set.

N.G.

Refer to "DIAGNOSTIC PROCEDURE IND ③ and IND ④".

O.K.

Check to see if indicator lamp goes out after about 30 seconds.

N.G.

Refer to "DIAGNOSTIC PROCEDURE IND ⑦".

O.K.

**A** Horn and headlamp circuit check

N.G.

Check the following items.

- 1) Headlamp circuit
- 2) Headlamp relay
- 3) Horn circuit
- 4) Horn relay

O.K.

**B** Door switch trigger check

N.G.

1) Check door switch.  
2) Check door switch circuit.

• Check continuity between terminals ⑤, ⑥ and ⑱.

Condition	Continuity
Driver's door	
⑤ Closed	No
⑤ Opened	Yes
Passenger's door	
⑥ Closed	No
⑥ Opened	Yes

O.K.

**C** Tamper switch trigger check

N.G.

1) Check tamper switch.  
2) Check tamper switch circuit.

• Check continuity between terminals ⑤, ⑥ and ⑱.





Condition	Continuity
Tamper switch (Driver's door/trunk lid)	
⑤ Normal	No
⑤ Removed	Yes
Tamper switch (Passenger's door)	
⑥ Normal	No
⑥ Removed	Yes

O.K.

Ⓐ

# THEFT WARNING SYSTEM

## Trouble Diagnoses (Cont'd)

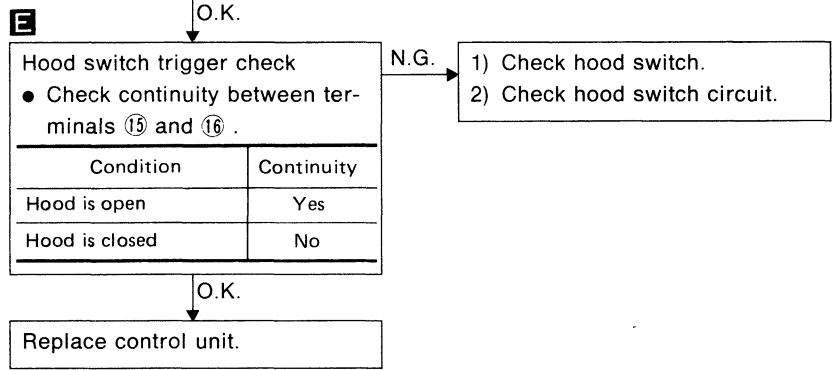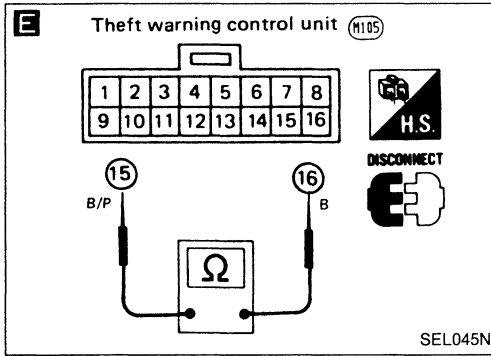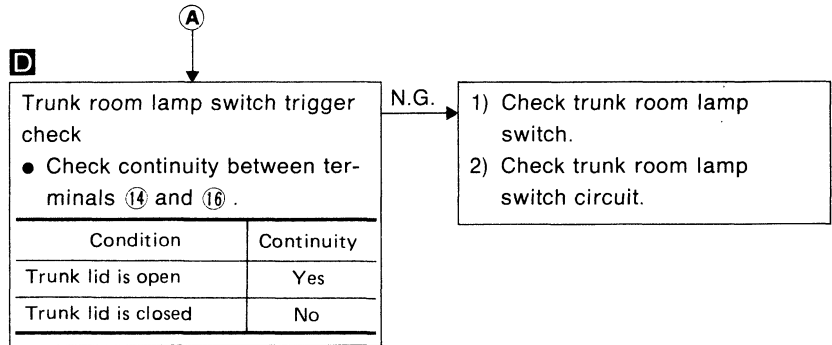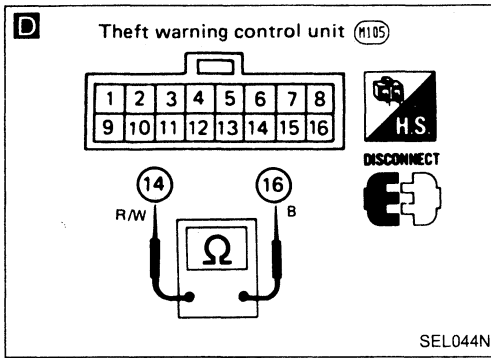


### DIAGNOSTIC PROCEDURE ALR ③

**SYMPTOM:** Alarm does not stop (Alarm continues for over 4 minutes).

**CONDITION:**

- Ignition switch OFF
- Alarm phase



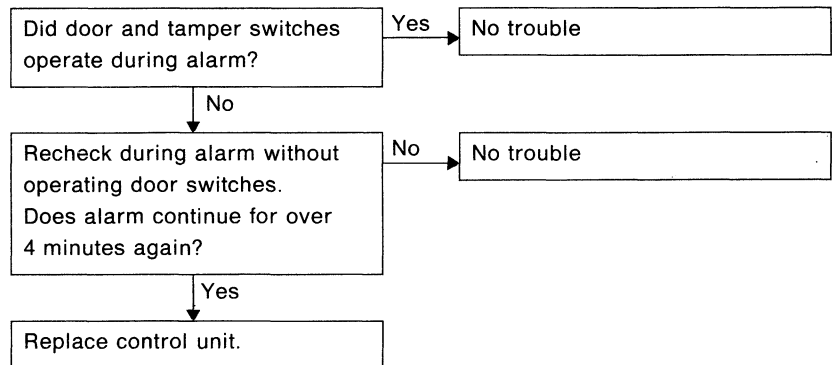


# THEFT WARNING SYSTEM

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE ALR ④

**SYMPTOM:** Alarm does not stop even if stop signal is given.

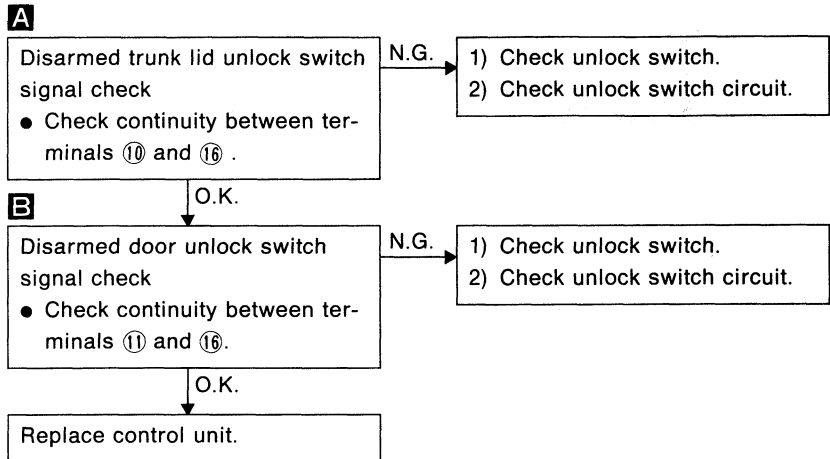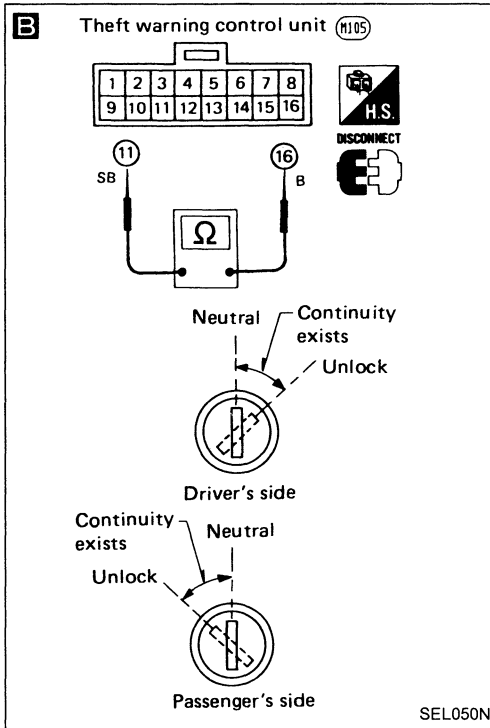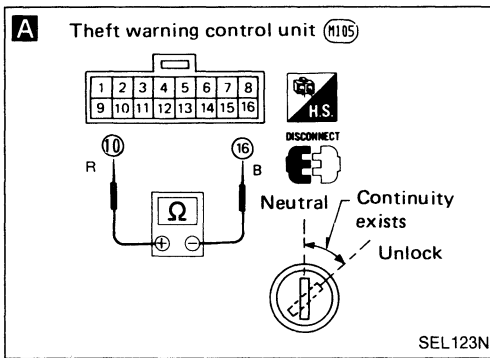

# THEFT WARNING SYSTEM



## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE ALR ⑤

**SYMPTOM:** Alarm stops too soon.

**CONDITION:**

- Ignition switch OFF
- Alarm phase

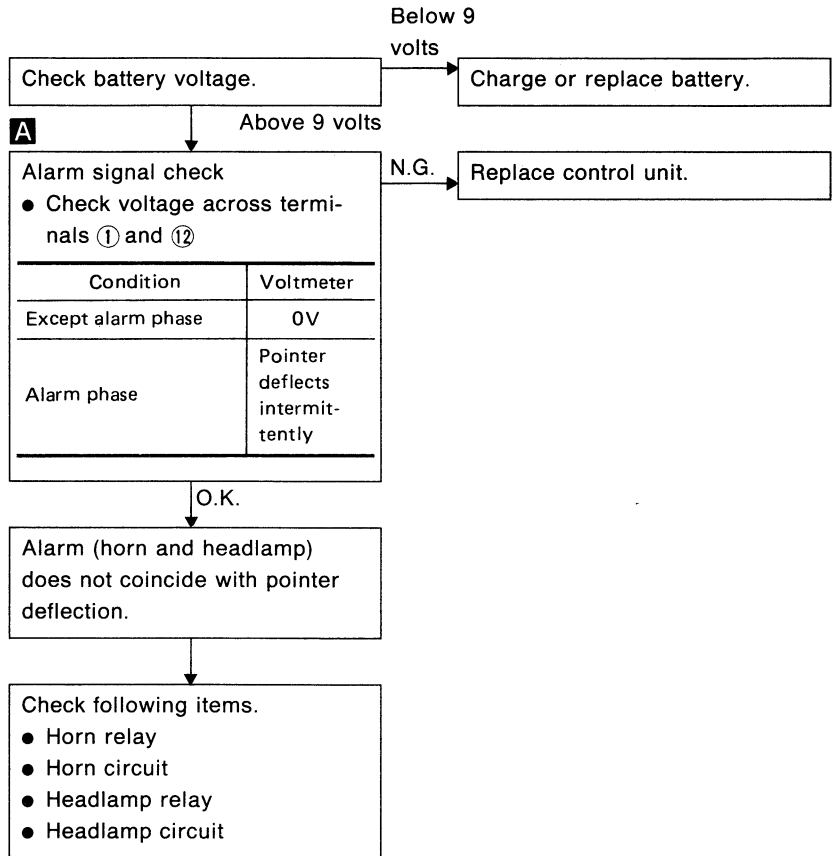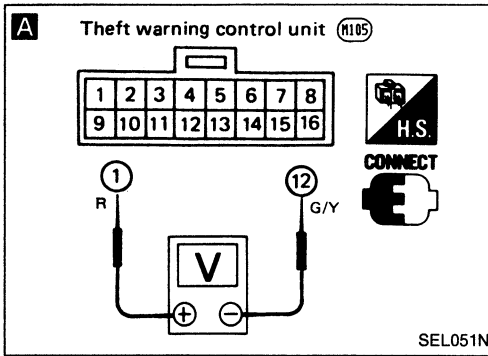

# THEFT WARNING SYSTEM


## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE ALR ⑥

**SYMPTOM: Alarm is continuous (Alarm is not intermittent).**

**CONDITION:**

- Ignition switch OFF
- Alarm phase

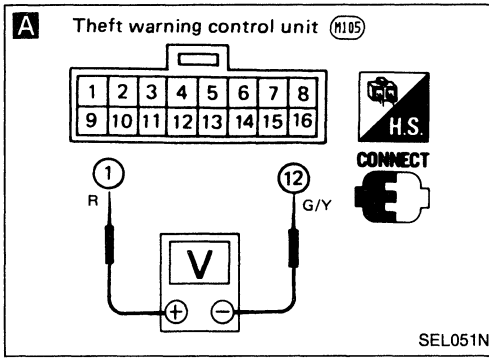

**A**

Alarm signal check

- Check voltage across terminals ① and ⑫.

N.G. →

Replace control unit.

Condition	Voltmeter
Except alarm phase	0V
Alarm phase	Pointer deflects intermittently

O.K. ↓

Check following items.



- Horn relay
- Horn circuit
- Headlamp relay
- Headlamp circuit

# THEFT WARNING SYSTEM

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE ST ①

**SYMPTOM: Starter motor cannot operate (Except alarm phase).**

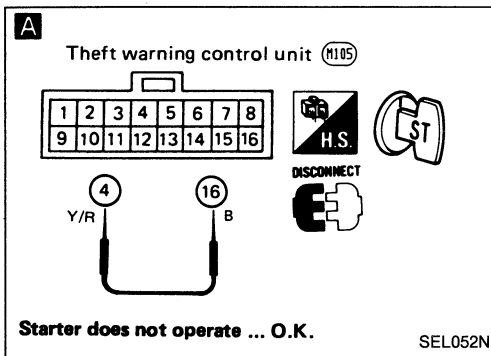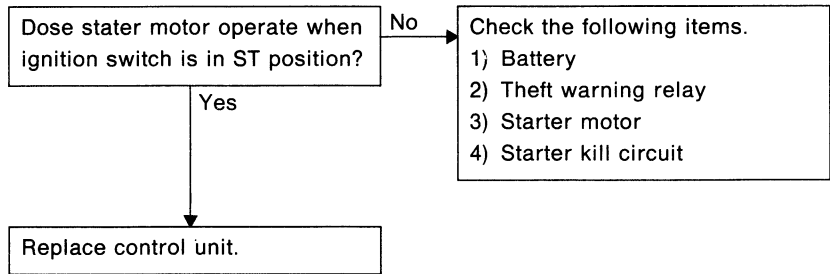


### DIAGNOSTIC PROCEDURE ST ②

**SYMPTOM: Starter motor can operate (Starter killed phase).**

**CONDITION:**


- Ignition switch ST

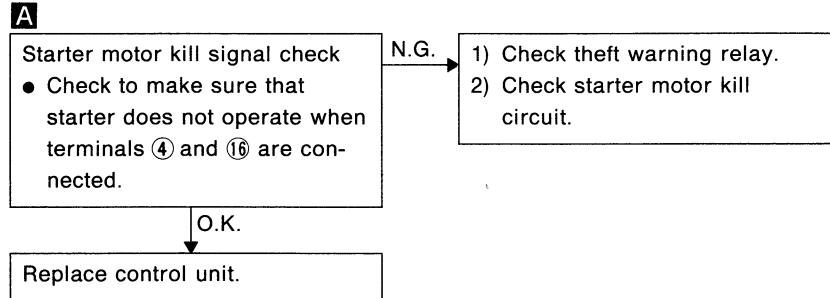



# LOCATION OF ELECTRICAL UNITS

## Engine Compartment

### Fuse, fusible link and relay box

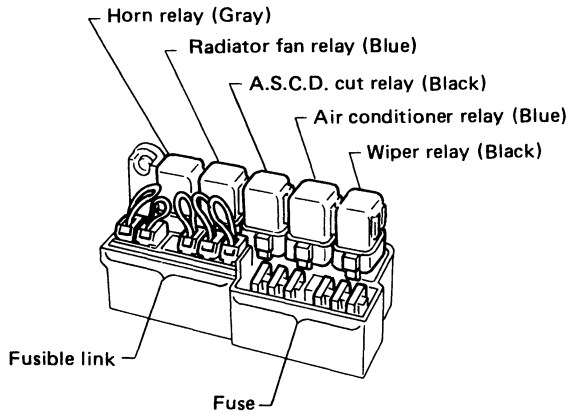


### Relay box

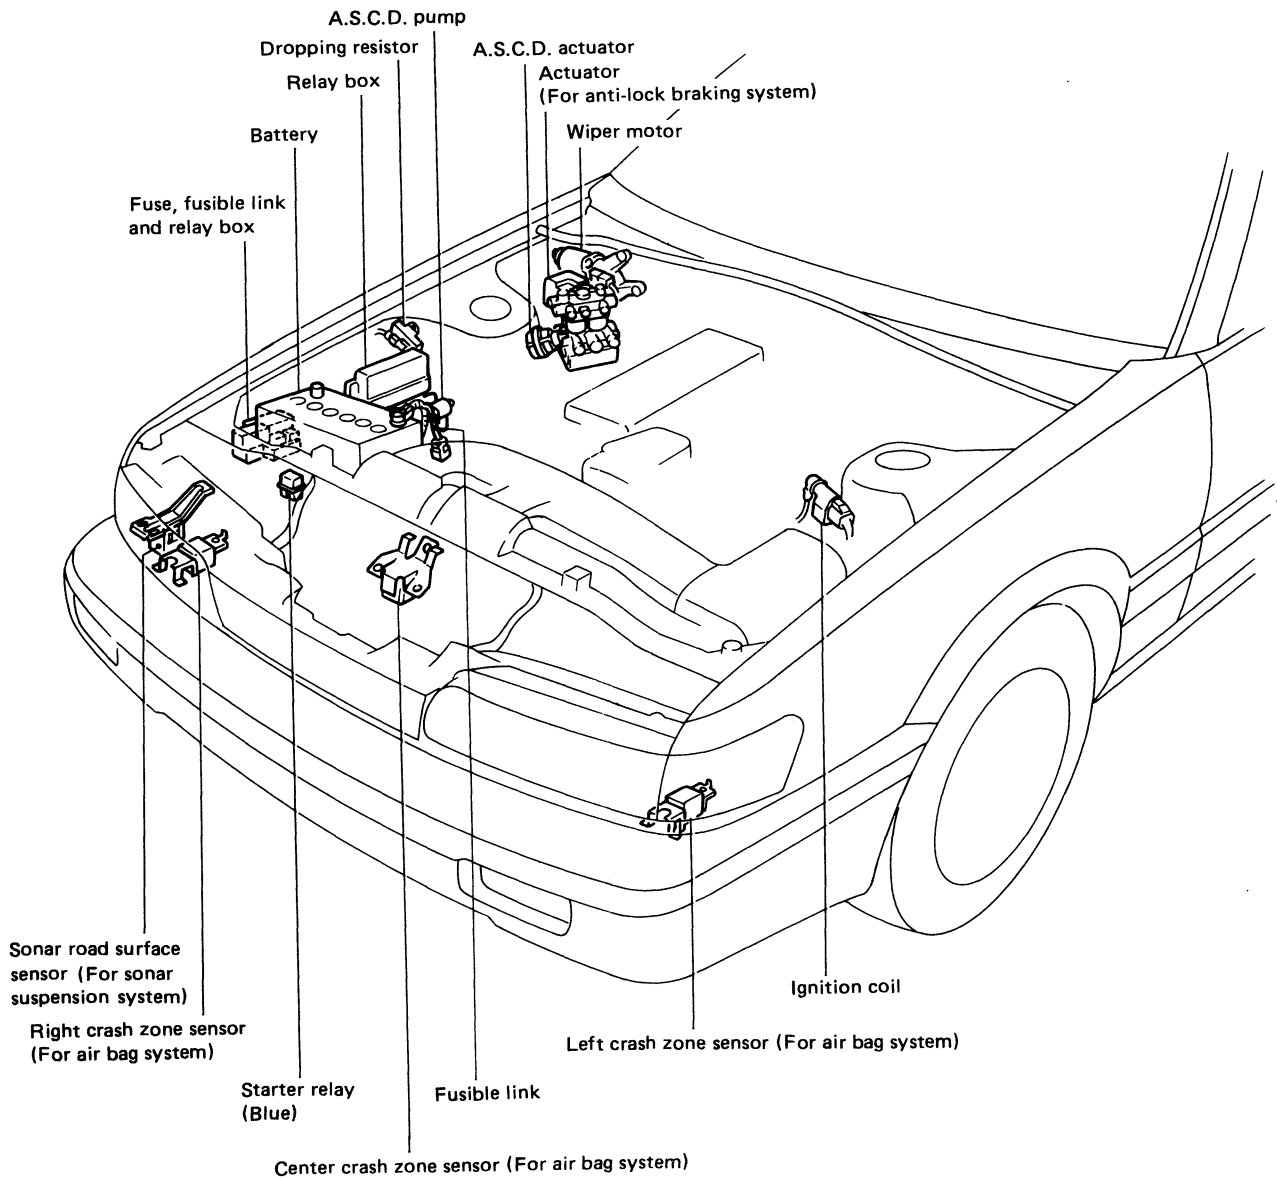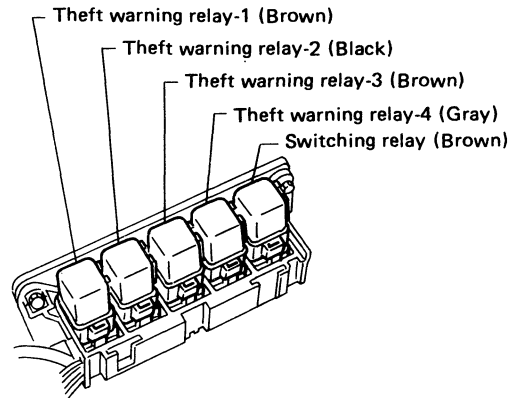

# LOCATION OF ELECTRICAL UNITS


## Passenger Compartment

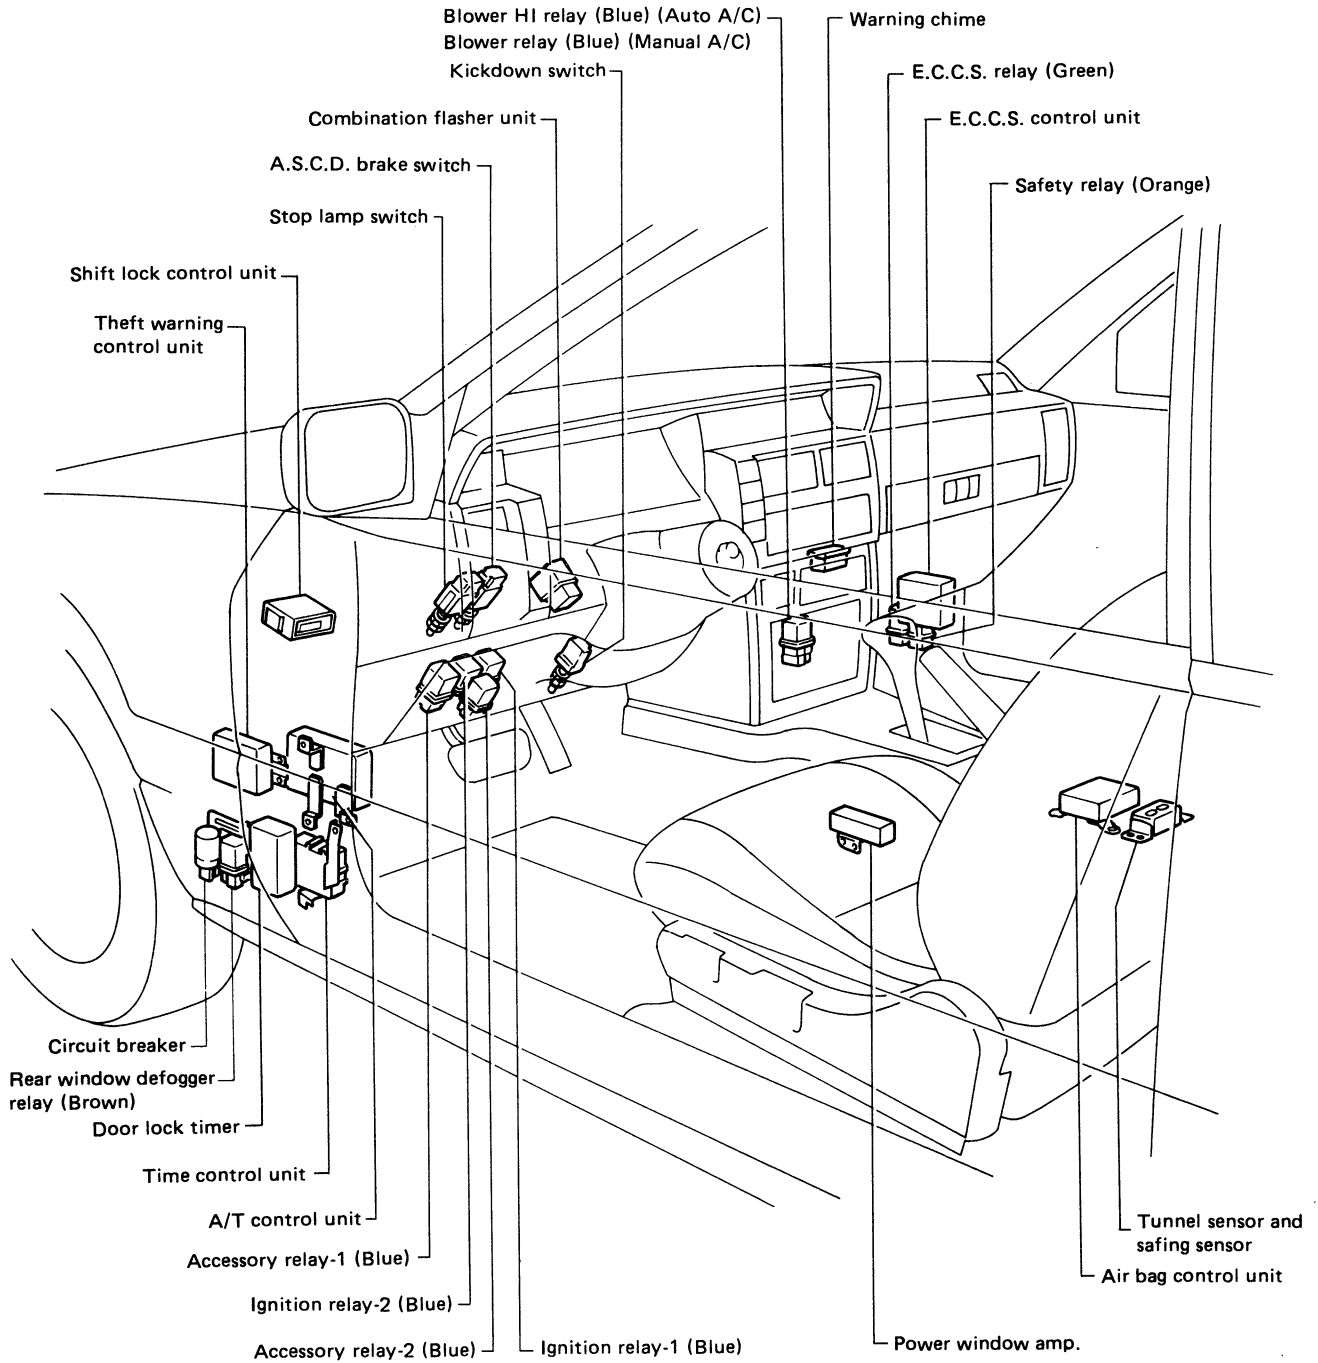



# LOCATION OF ELECTRICAL UNITS

## Luggage Compartment

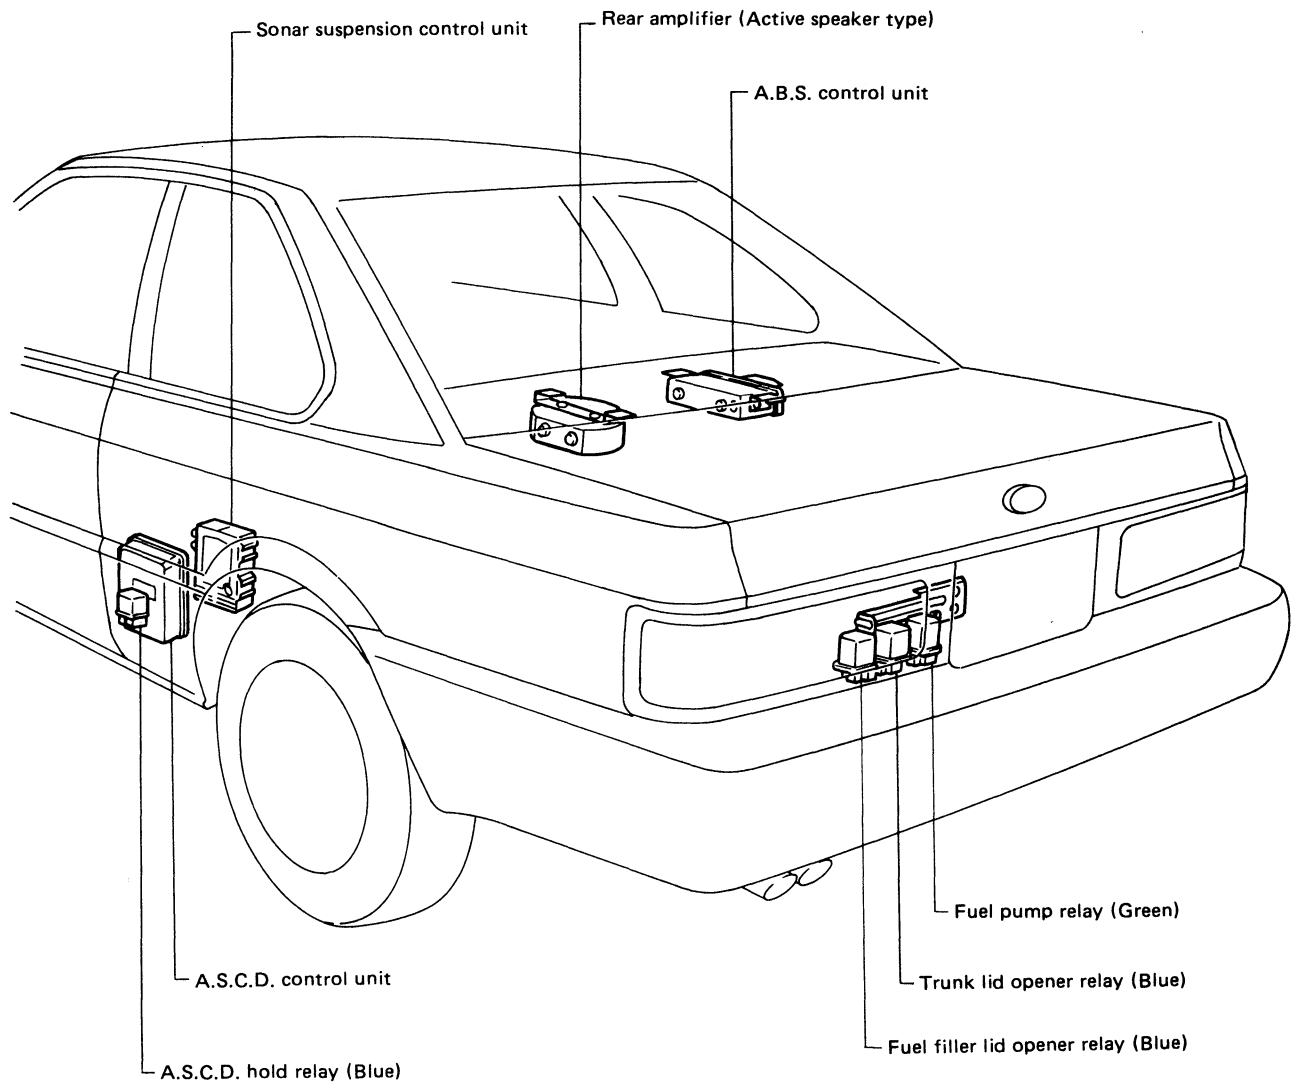


# LOCATION OF ELECTRICAL UNITS

---

**NOTE**

# HARNESS LAYOUT


## Outline

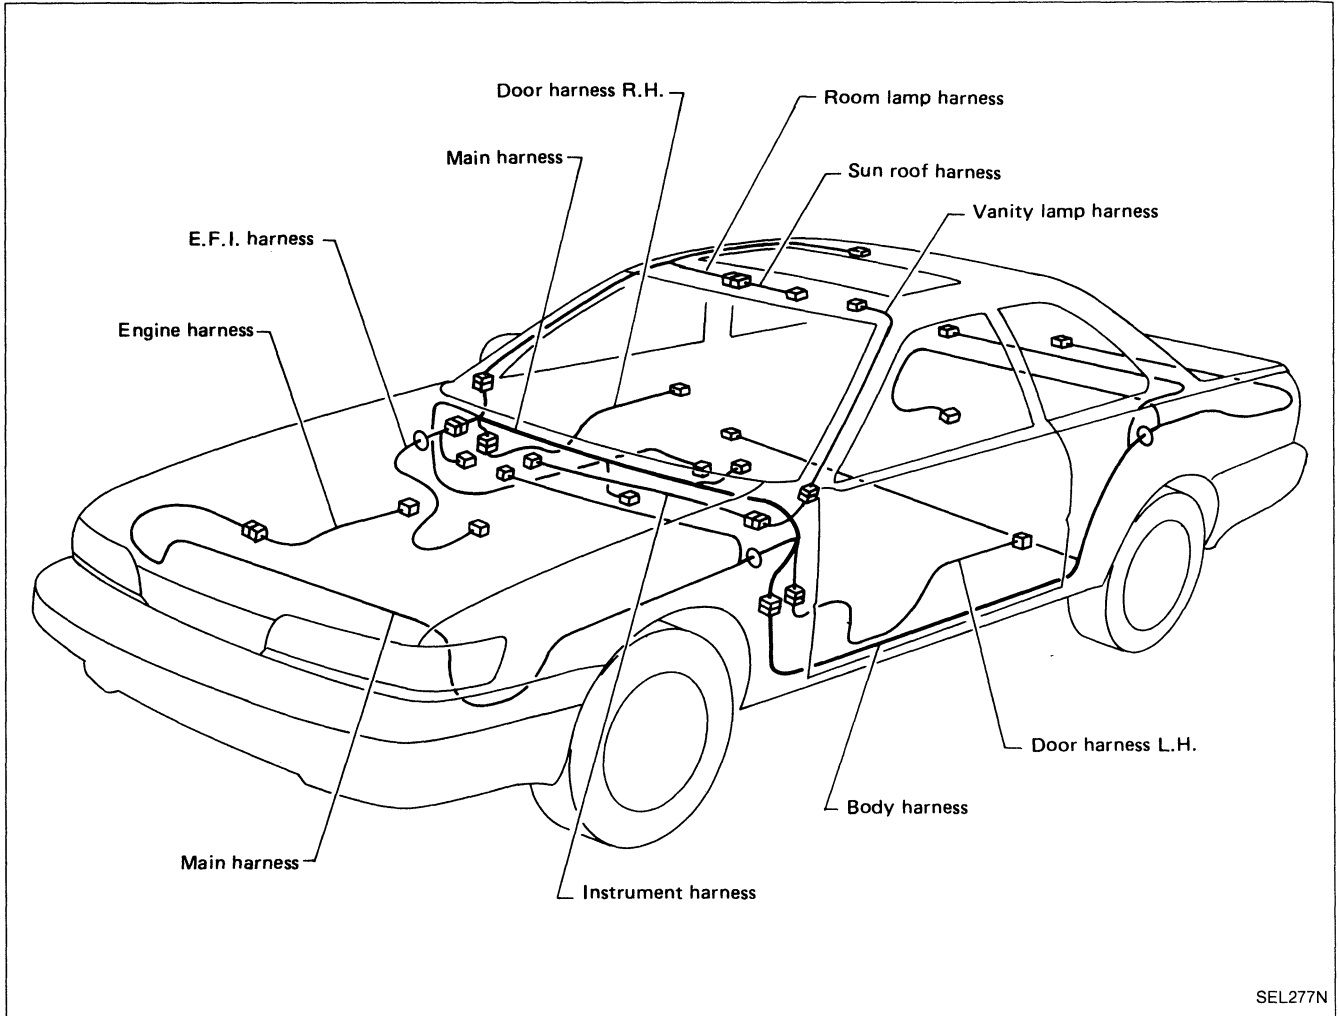

# HARNESS LAYOUT

## Main Harness

### ENGINE COMPARTMENT

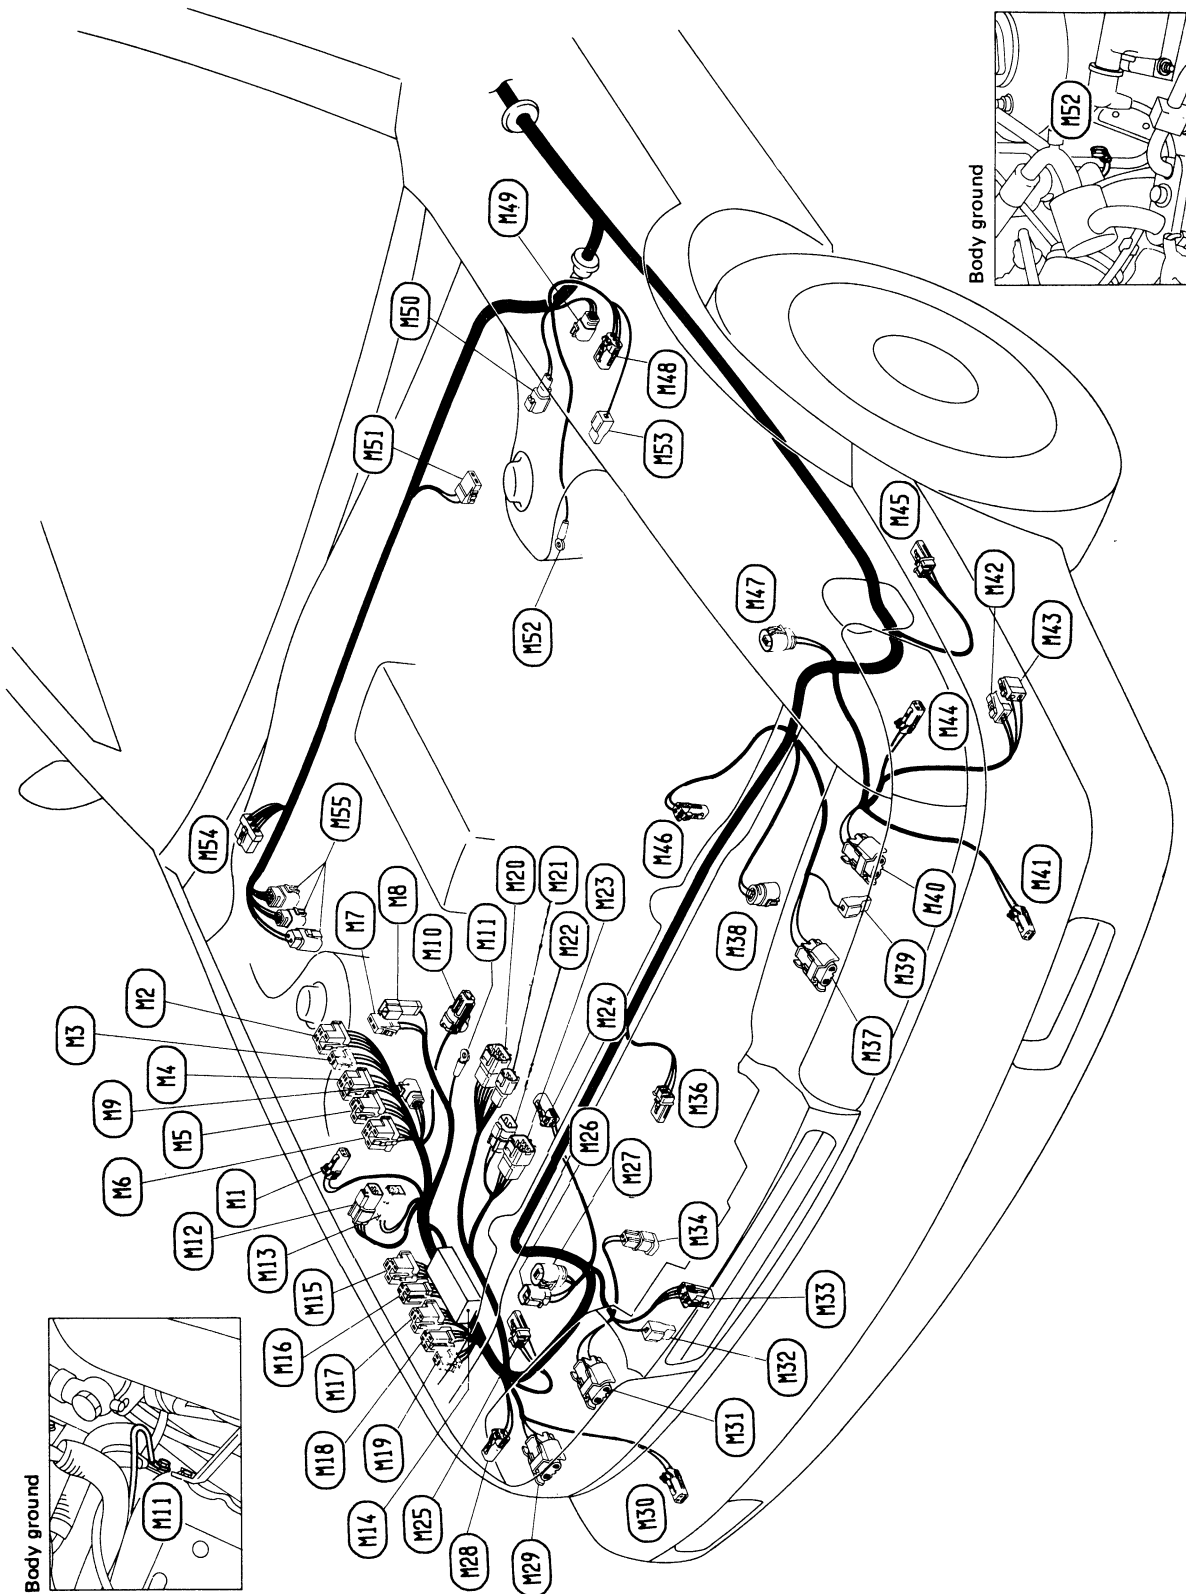

# HARNES LAYOUT

## Main Harness (Cont'd)


(11) : Dropping resistor  
(12) : Switching relay  
(13) : Theft warning relay-4  
(14) : Theft warning relay-3  
(15) : Theft warning relay-2  
(16) : Theft warning relay-1  
(17) : Battery  
(18) : Fusible link  
(19) : A.S.C.D. actuator  
(20) : To (E2)  
(21) : Body ground  
(22) : To (E4)  
(23) : To (E3)  
(24) : Fusible link box & Fuse block  
(25) : Wiper relay  
(26) : Air conditioner relay  
(27) : A.S.C.D. cut relay  
(28) : Radiator fan relay  
(29) : Horn relay  
(30) : To terminal cord assembly  
(31) : Revolution sensor  
(32) : Inhibitor switch  
(33) : Inhibitor switch  
(34) : Dual-pressure switch  
(35) : Right crash zone sensor (Air bag)  
(36) : Starter relay  
(37) : Starter relay  
(38) : Front turn signal lamp R.H.  
(39) : Headlamp R.H.-1

(40) : Front clearance lamp R.H.  
(41) : Headlamp R.H.-2  
(42) : Horn R.H.  
(43) : Sonar road surface sensor  
(44) : Radiator fan motor  
(45) : Center crash zone sensor (Air bag)  
(46) : Headlamp L.H.-2  
(47) : Ambient switch (Manual A/C)  
(48) : Ambient sensor (Auto A/C)  
(49) : Horn L.H.  
(50) : Headlamp L.H.-1  
(51) : Front clearance lamp L.H.  
(52) : Washer sensor  
(53) : Washer motor  
(54) : Front turn signal lamp L.H.  
(55) : Left crash zone sensor (Air bag)  
(56) : Thermo switch  
(57) : Hood switch  
(58) : Front shock absorber actuator-L.H.  
(59) : (For sonar suspension system)  
(60) : To (F2)  
(61) : Front sensor L.H.  
(62) : (For anti-lock braking system)  
(63) : Brake fluid level switch  
(64) : Body ground  
(65) : Theft warning horn  
(66) : Wiper motor  
(67) : Actuator (For anti-lock braking system)

# HARNESS LAYOUT

## Main Harness (Cont'd)

### PASSENGER COMPARTMENT

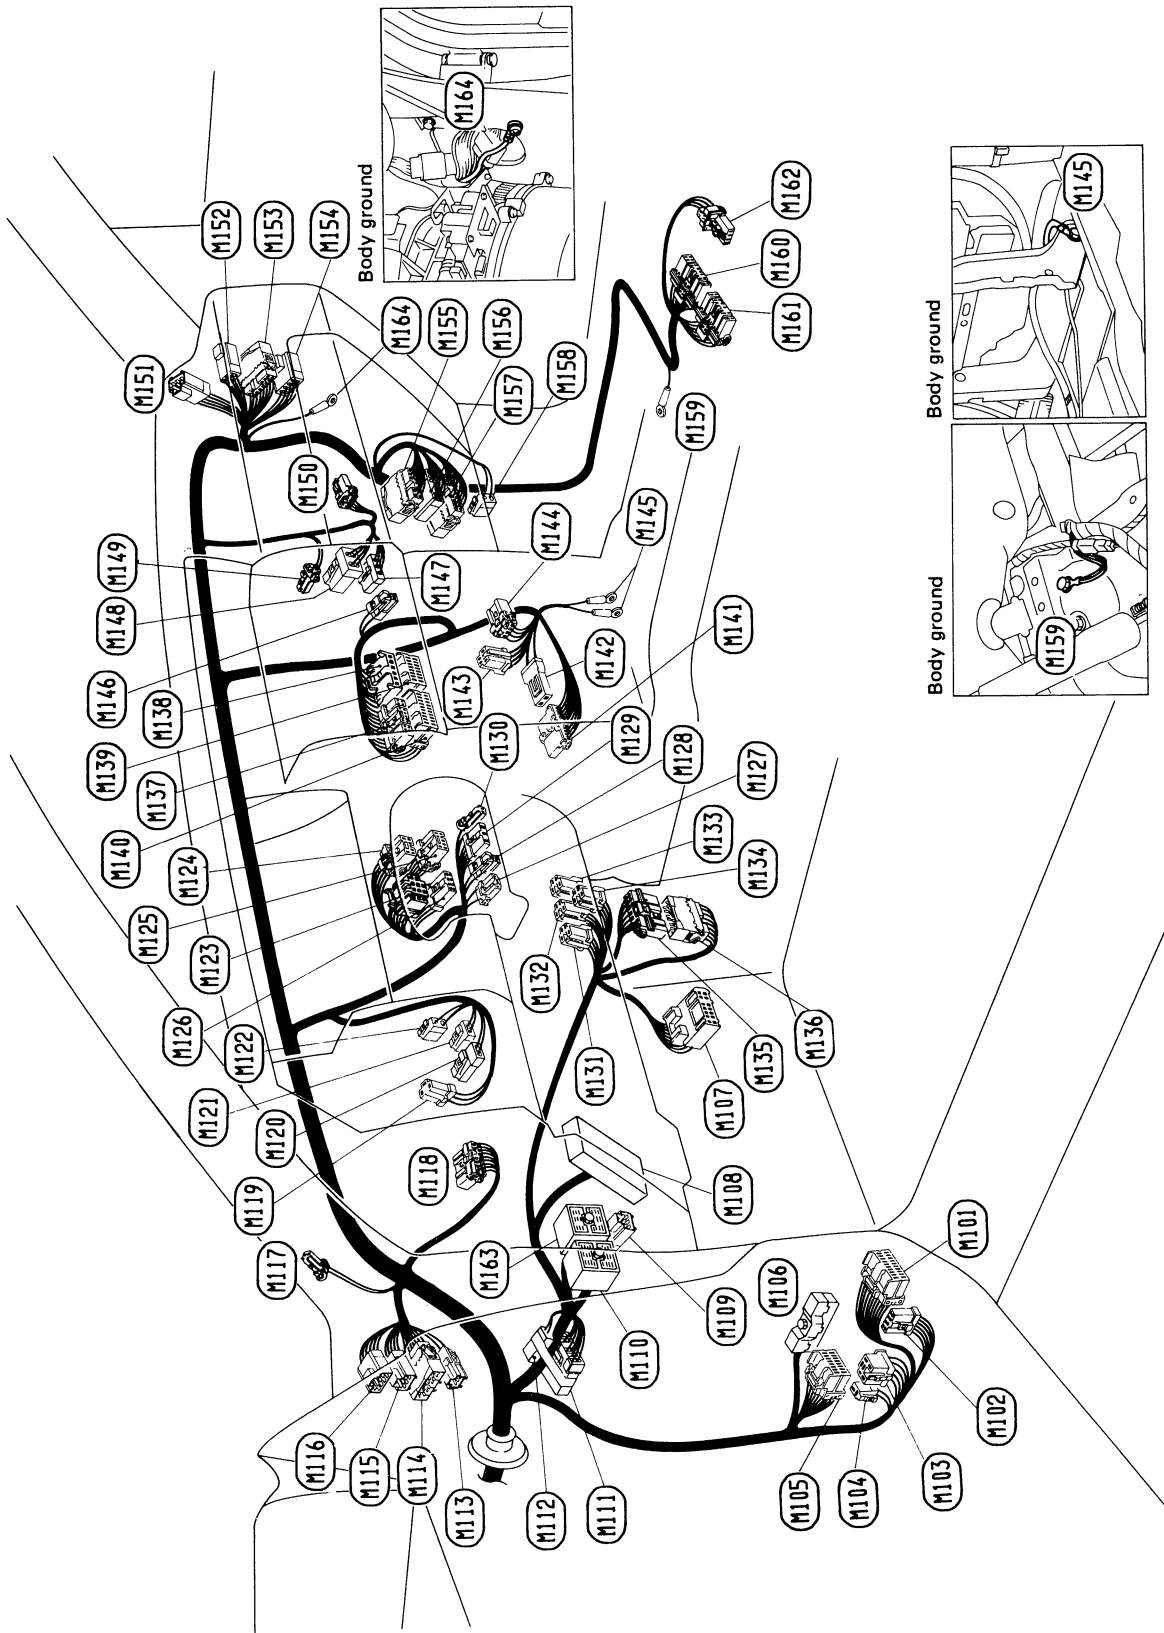

# HARNESS LAYOUT


## Main Harness (Cont'd)

- (M101) : Time control unit
- (M102) : Door lock timer
- (M103) : Rear window defogger relay
- (M104) : Circuit breaker
- (M105) : Theft warning control unit
- (M106) : A/T control unit
- (M107) : Check connector
- (M108) : Fuse block
- (M109) : To (B3)
- (M110) : To (B1) (S.M.J.)
- (M111) : Diode
- (M112) : Diode
- (M113) : To (D4)
- (M114) : To (D3)
- (M115) : To (D2)
- (M116) : To (D1)
- (M117) : To sub-harness (Vanity lamp)
- (M118) : Shift lock control unit
- (M119) : Combination flasher unit
- (M120) : A.S.C.D. brake switch
- (M121) : Stop lamp switch
- (M122) : Kickdown switch
- (M123) : Lighting switch
- (M124) : A.S.C.D. steering switch, horn switch and air bag module
- (M125) : Steering angle sensor
- (M126) : Wiper switch
- (M127) : Key lock solenoid
- (M128) : Key-in switch
- (M129) : Ignition switch
- (M130) : Key illumination
- (M131) : Accessory relay-1
- (M132) : Ignition relay-2
- (M133) : Ignition relay-1
- (M134) : Accessory relay-2
- (M135) : Connector-A
- (M136) : Connector-B
- (M137) : Push control unit (Manual A/C)
- (M138) : Fan switch (Manual A/C)


- (M139) : Auto air conditioner amp. (Auto A/C)
- (M140) : Auto air conditioner amp. (Auto A/C)
- (M141) : Mode door motor (A/C)
- (M142) : Aspirator fan (Auto A/C)
- (M143) : Blower relay (Manual A/C)
- (M144) : Blower HI relay (Auto A/C)
- (M145) : Air mix door motor (Auto A/C)
- (M146) : Body ground
- (M147) : In-vehicle sensor (Auto A/C)
- (M148) : Resistor (Manual A/C)
- (M149) : Fan control amp. (Auto A/C)
- (M150) : Intake sensor (Auto A/C)
- (M151) : Intake door motor
- (M152) : To (R1)

- (M153) : To (D51)
- (M154) : To (D52)
- (M155) : To (D53)
- (M156) : To (F51)
- (M157) : To (F52)
- (M158) : To (F53)
- (M159) : Blower motor
- (M160) : Body ground
- (M161) : Air bag control unit
- (M162) : Air bag control unit
- (M163) : Tunnel sensor and safing sensor (Air bag)
- (M164) : To (T1)
- (M165) : Body ground

### Diode (M111)

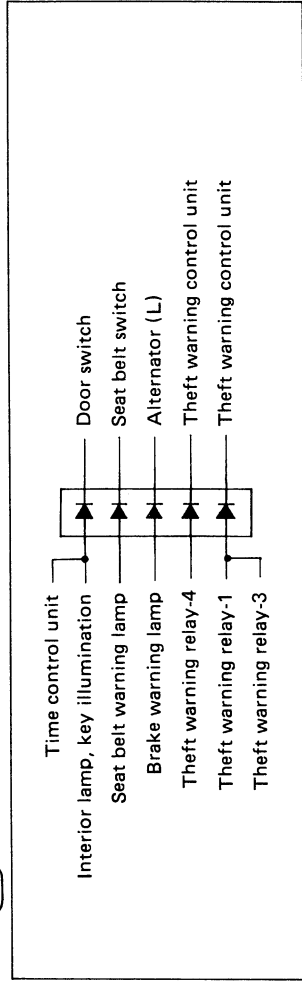


### Diode (M112)



# HARNESS LAYOUT

## Body Harness

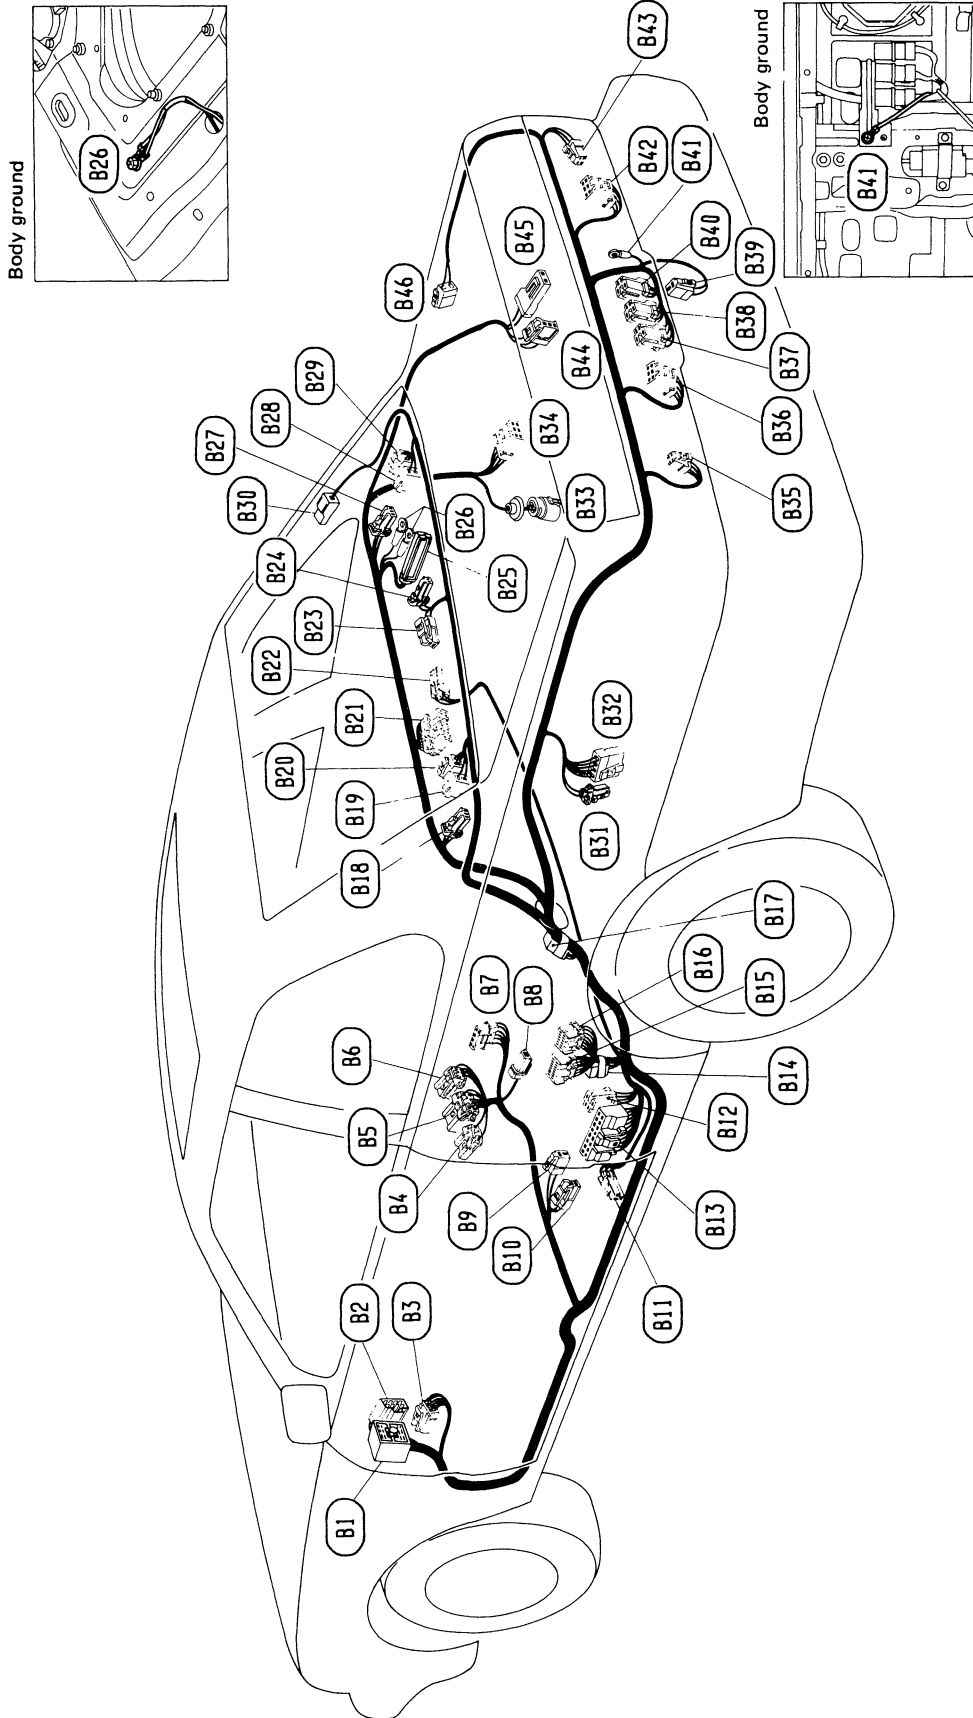




# HARNES LAYOUT

## Body Harness (Cont'd)


- 81 : To (8110) (S.M.J.)
- 82 : To (12)
- 83 : To (8109)
- 84 : Ash tray illumination
- 85 : Shift lock solenoid and detent switch
- 86 : Overdrive switch and A/T indicator illumination
- 87 : Shock absorber select switch (For sonar suspension system)
- 88 : Parking brake switch
- 89 : To power seat harness L.H.
- 810 : Seat belt switch
- 811 : Door switch L.H.
- 812 : A.S.C.D. hold relay
- 813 : A.S.C.D. control unit
- 814 : Diode
- 815 : Sonar suspension control unit
- 816 : Sonar suspension control unit
- 817 : Diode
- 818 : Rear shock absorber actuator L.H.
- 819 : Rear speaker L.H. (Active speaker type)
- 820 : Rear speaker L.H. (BOSE type)
- 821 : Rear amplifier (Active speaker type)
- 822 : Door switch R.H.
- 823 : Trunk room lamp
- 824 : High-mounted stop lamp
- 825 : A.B.S. control unit
- 826 : Body ground
- 827 : Rear shock absorber actuator R.H. (For sonar suspension system)

- 828 : Rear speaker R.H. (Active speaker type)
- 829 : Rear speaker R.H. (BOSE type)
- 830 : Rear window defogger
- 831 : Power antenna motor
- 832 : Power antenna timer
- 833 : Rear sensor braking (For anti-lock braking system)
- 834 : Fuel tank gauge unit
- 835 : Rear combination lamp L.H.
- 836 : Rear combination lamp L.H.
- 837 : Fuel filler lid opener relay
- 838 : Trunk lid opener relay
- 839 : Trunk lid opener solenoid
- 840 : Fuel pump relay
- 841 : Body ground
- 842 : Rear combination lamp R.H.
- 843 : Rear combination lamp R.H.
- 844 : Trunk room unlock switch
- 845 : Trunk room lamp switch
- 846 : Fuel filler lid opener solenoid

Diode (814)

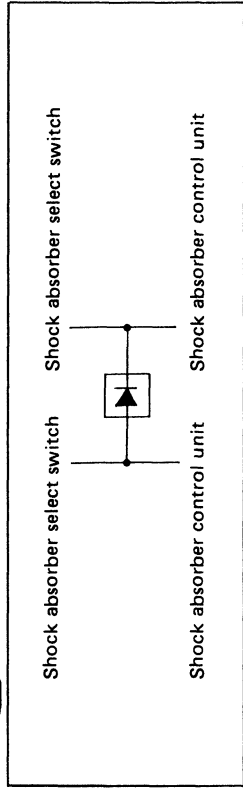


Diode (817)



# HARNESS LAYOUT

## E.F.I. Harness

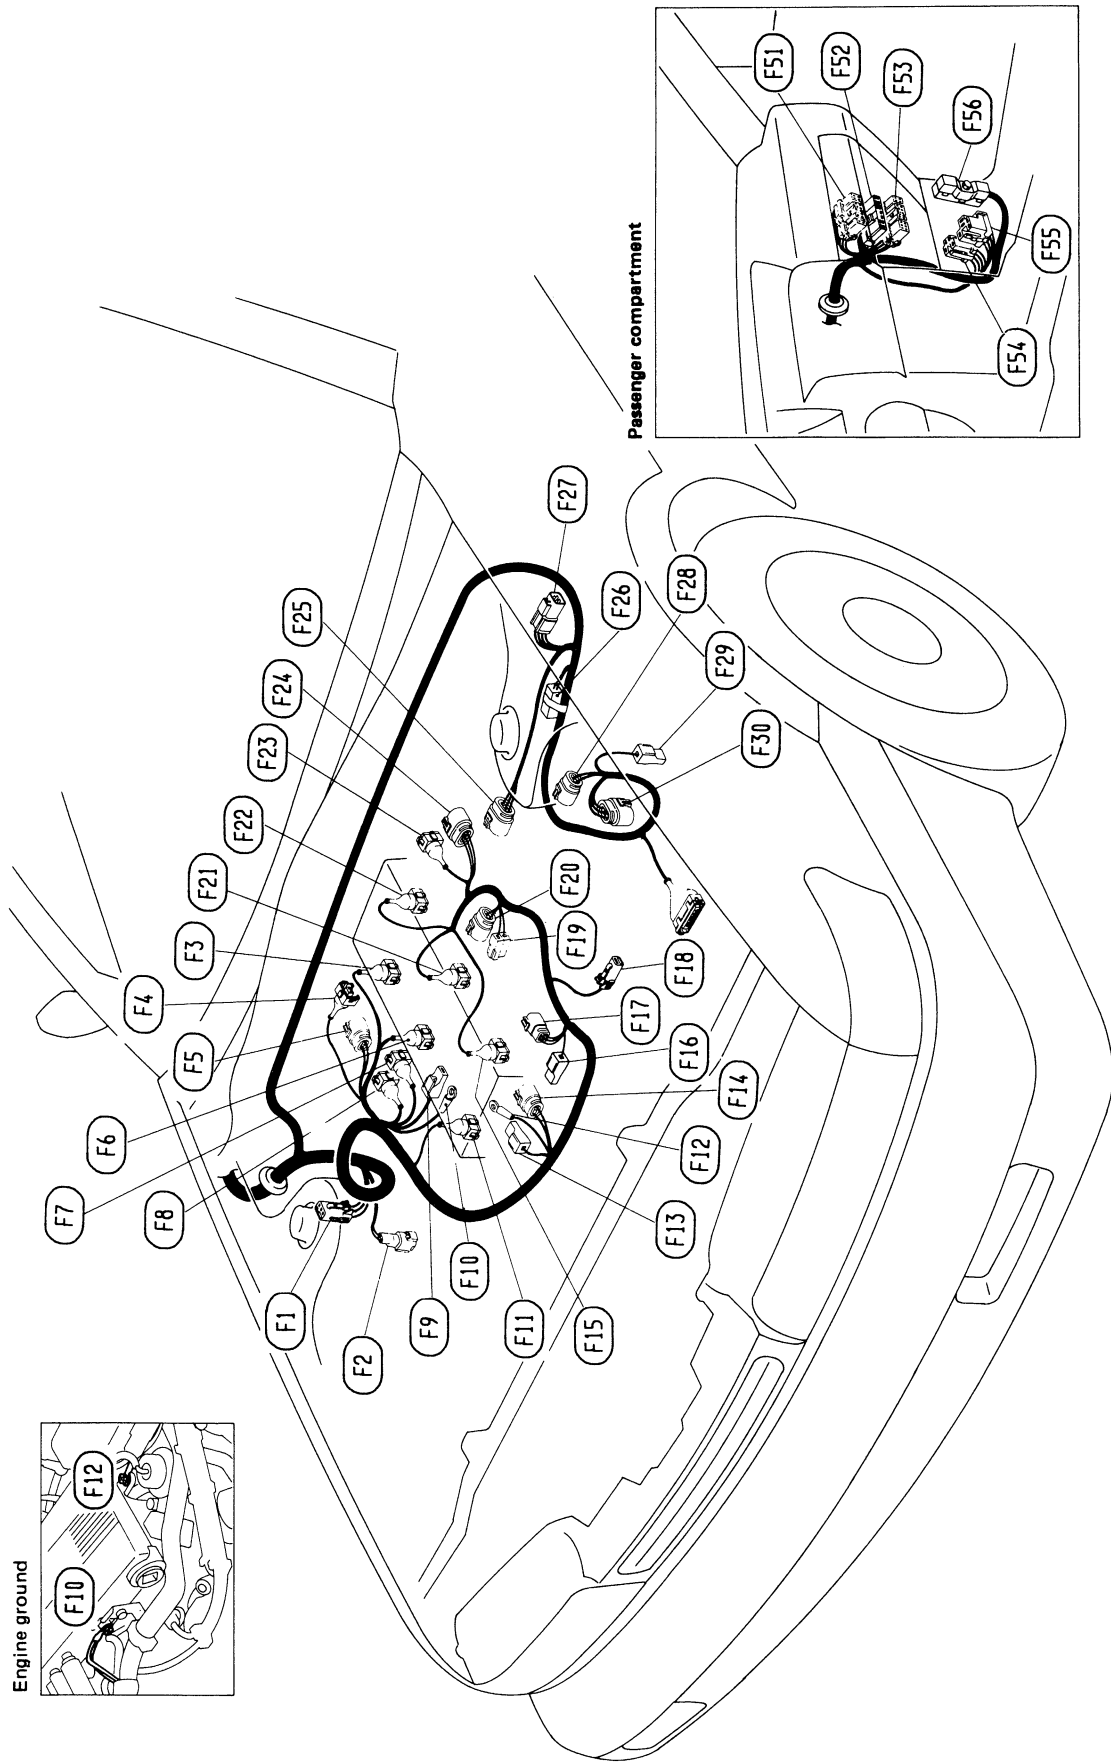

# HARNESS LAYOUT


## E.F.I. Harness (Cont'd)

- (F1) : Front shock absorber actuator R.H.  
(For sonar suspension system)
- (F2) : Front sensor R.H.  
(For anti-lock braking system)
- (F3) : Injector No. 5
- (F4) : E.G.R. control solenoid valve
- (F5) : Exhaust gas temperature sensor  
(For California)
- (F6) : Injector No. 3
- (F7) : Pressure regulator control solenoid valve
- (F8) : Air regulator
- (F9) : Thermal transmitter
- (F10) : Engine ground
- (F11) : Injector No. 1
- (F12) : Engine ground
- (F13) : Fuel temperature sensor
- (F14) : Sub-harness  
(To engine temperature sensor)
- (F15) : Injector No. 2
- (F16) : Distributor
- (F17) : Crank angle sensor
- (F18) : Compressor (A/C)
- (F19) : A.A.C. valve
- (F20) : F.I.C.D. control solenoid valve
- (F21) : Injector No. 4
- (F22) : Injector No. 6
- (F23) : Throttle valve switch
- (F24) : Throttle sensor
- (F25) : Exhaust gas sensor
- (F26) : Resistor and condenser  
(To (F49))
- (F28) : Ignition coil
- (F29) : Ignition coil
- (F30) : Power transistor
- (F31) : Air flow meter

### Passenger compartment


- (F51) : To (F155)
- (F52) : To (F156)
- (F53) : To (F157)
- (F54) : E.C.C.S. relay
- (F55) : Safety relay
- (F56) : E.C.C.S. control unit

### Resistor (F26)

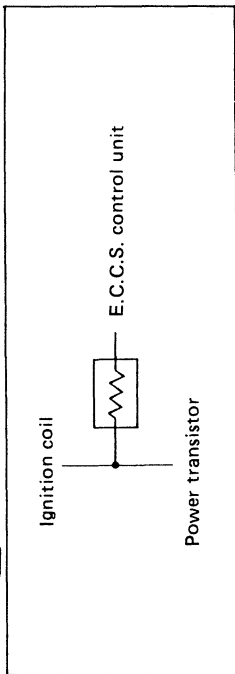


# HARNESS LAYOUT

## Instrument Harness

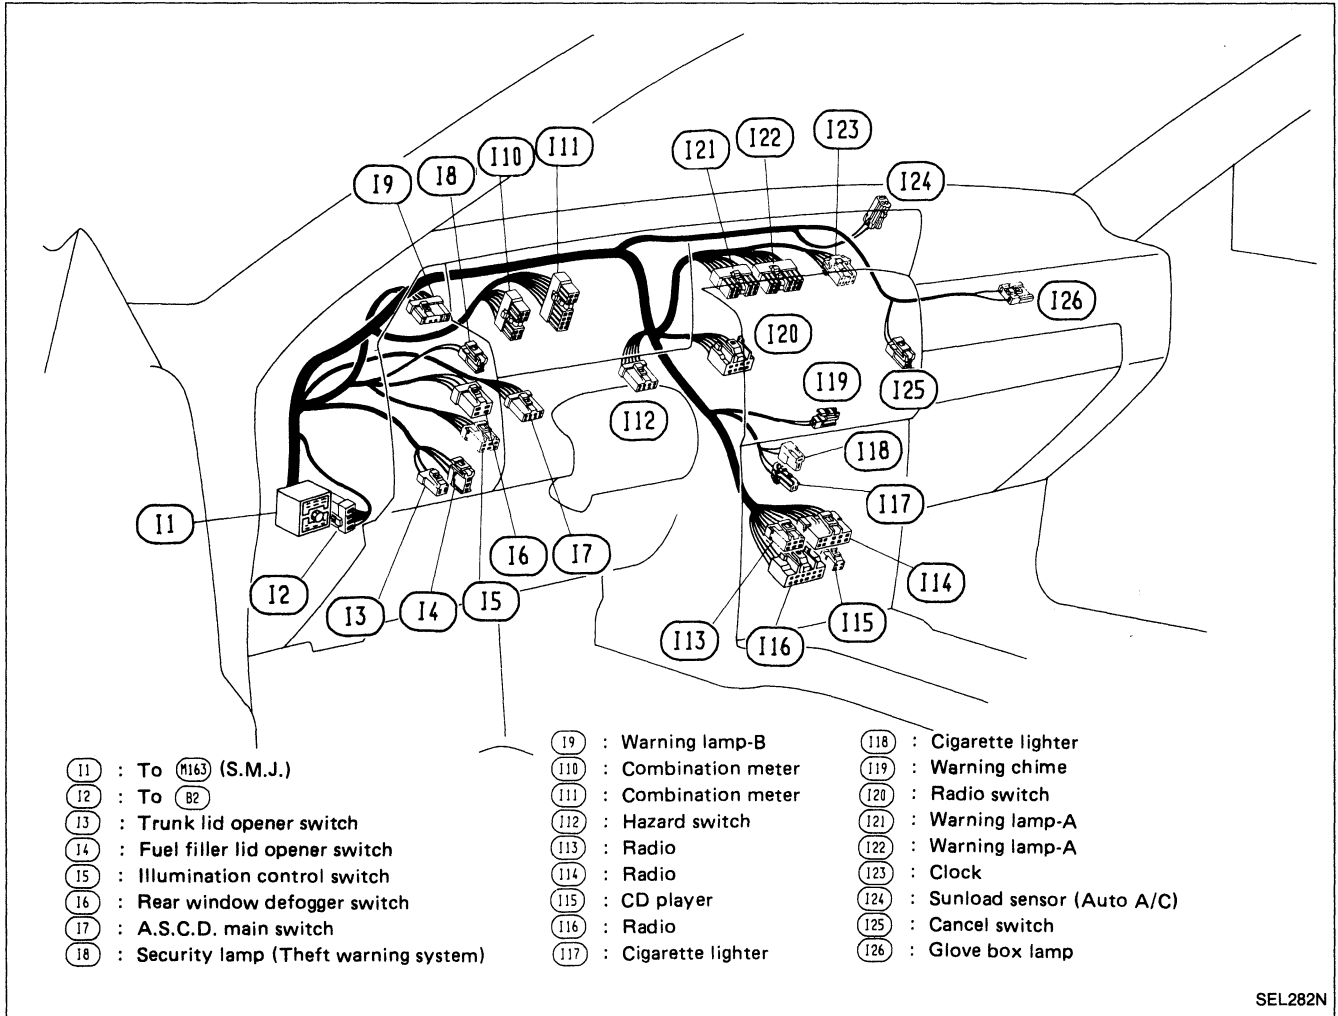

SEL282N

## Room Lamp and Sun Roof Harness

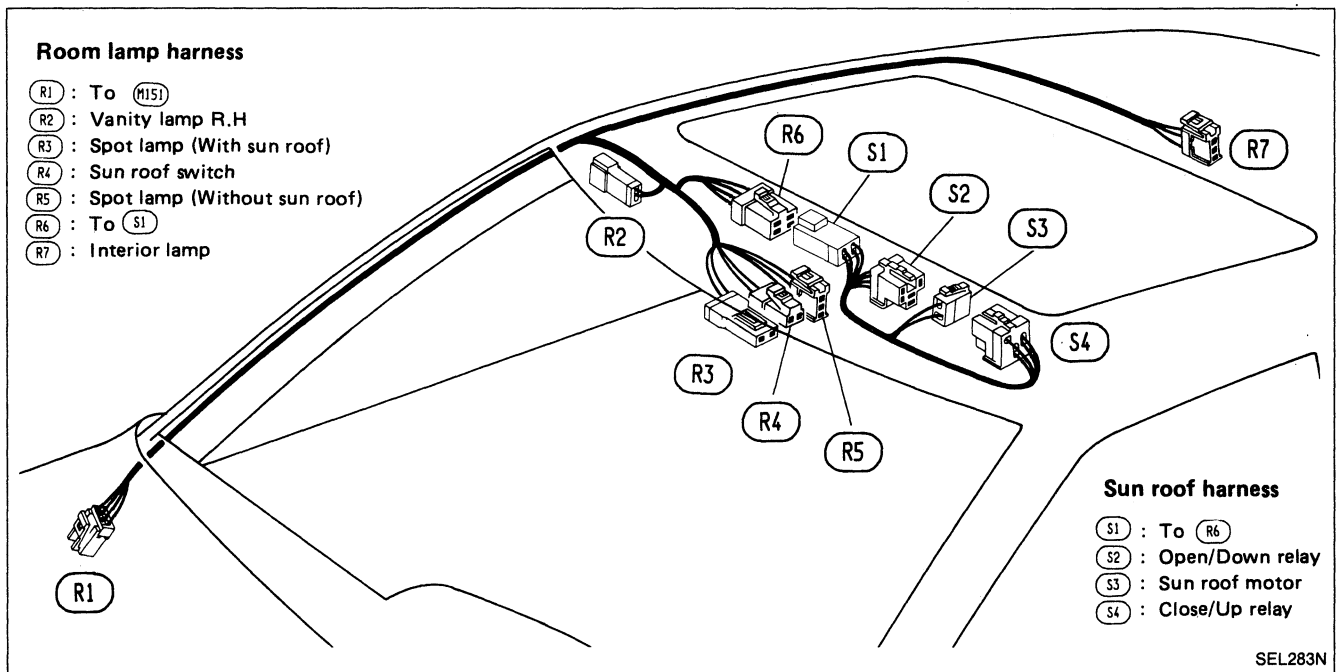


SEL283N

# HARNESS LAYOUT


## Door Harness

### L.H. SIDE

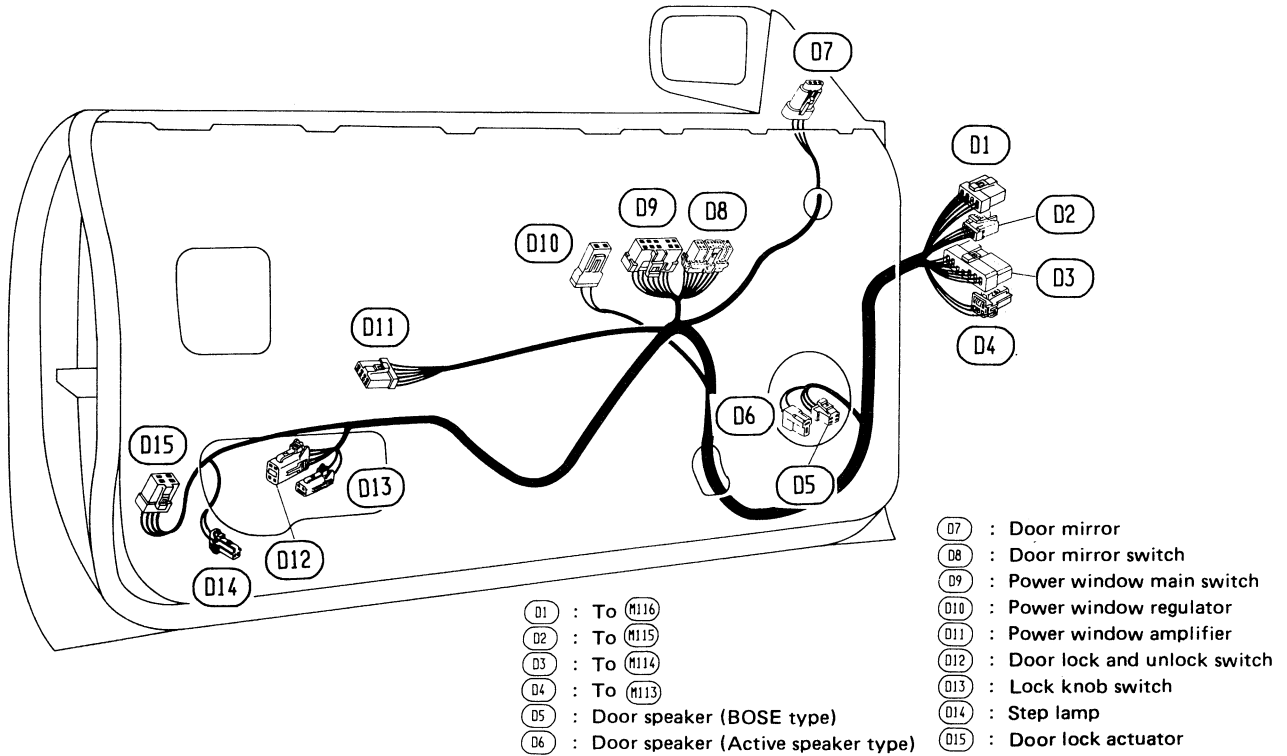

SEL284N


### R.H. SIDE

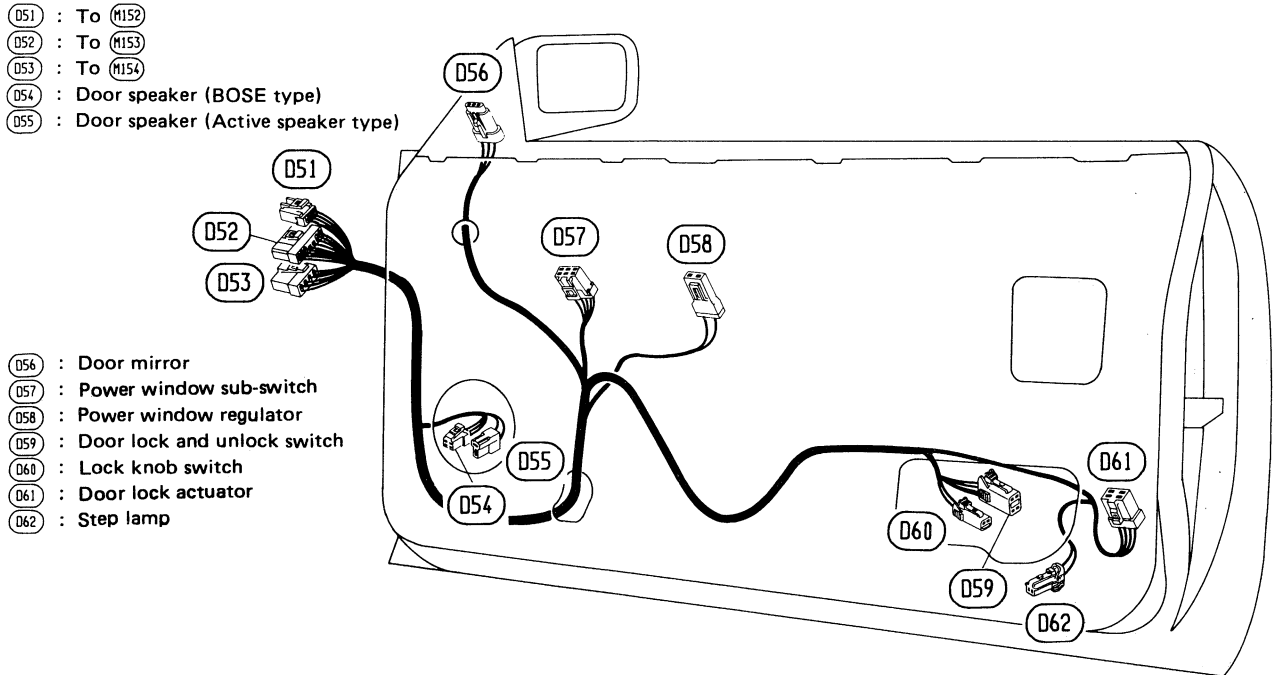

SEL285N


# HARNESS LAYOUT

## Engine Harness

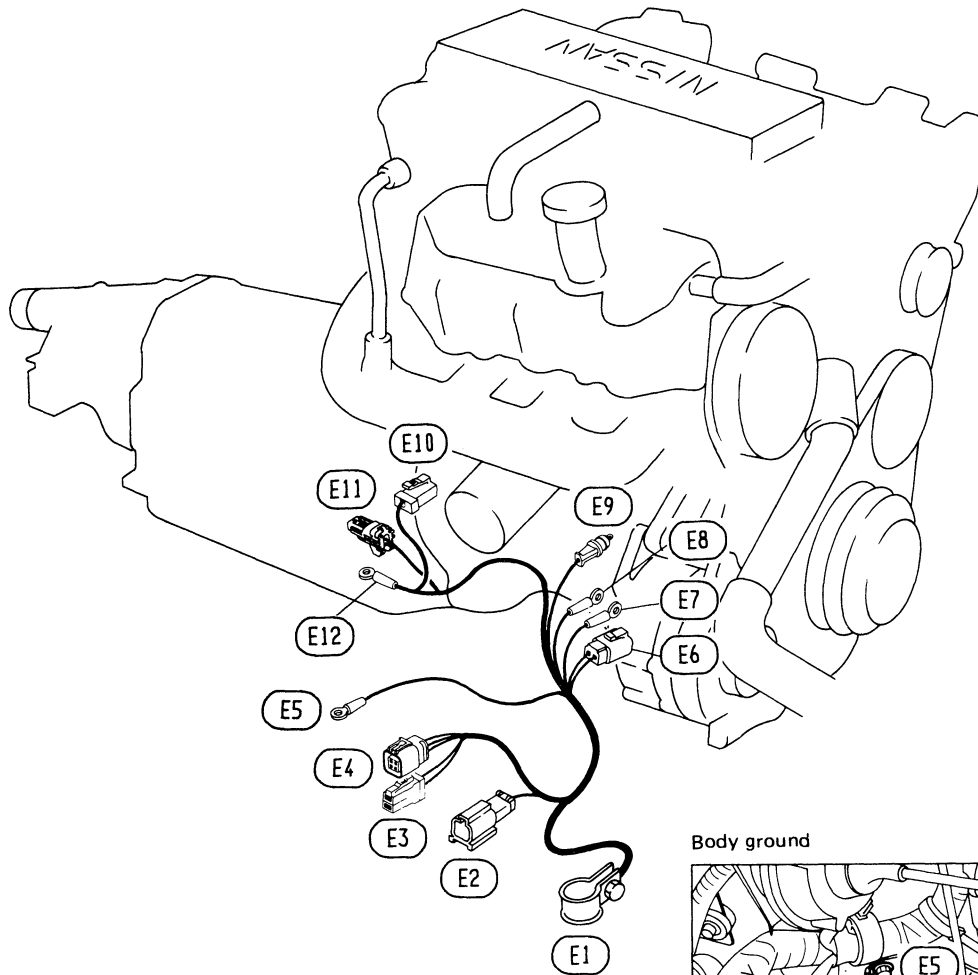


- (E1) : Battery
- (E2) : To (M10)
- (E3) : To (M13)
- (E4) : To (M12)
- (E5) : Body ground
- (E6) : Alternator
- (E7) : Alternator
- (E8) : Alternator
- (E9) : Detonation sensor
- (E10) : Oil pressure switch
- (E11) : Starter motor
- (E12) : Starter motor

Body ground

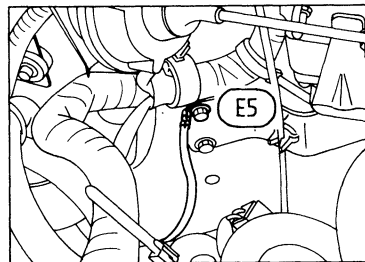


SEL286N

# SPECIAL SERVICE TOOL

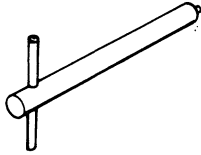Tool Number	Tool name
(J35126)	Washer nozzle adjusting tool 

## SUPER MULTIPLE JUNCTION (S.M.J.)

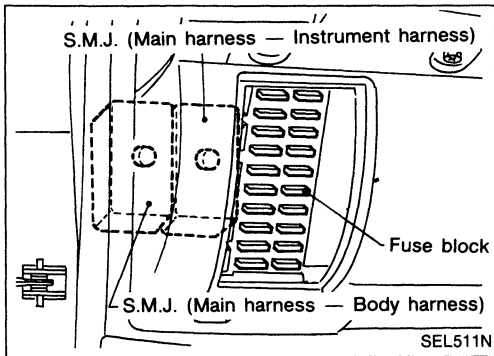

### INSTALLATION


To install S.M.J., tighten bolts until orange "full-tight" mark appears and then retighten to specified torque as required.

☐: 3 - 5 N·m

(0.3 - 0.5 kg-m, 2.2 - 3.6 ft-lb)

### CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

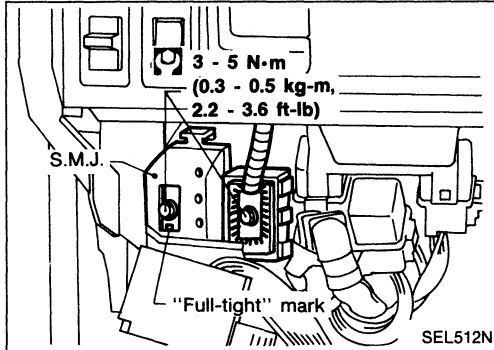



# SUPER MULTIPLE JUNCTION (S.M.J.)

## Terminal Arrangement

MAIN HARNESS

A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12
B1	B2	B3	B4	B5	B6	B7	B8	B9	B10	B11	B12
C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12
D1	D2								D11	D12	
E1	E2								E11	E12	
F1	F2								F11	F12	
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
H1	H2	H3	H4	H5	H6	H7	H8	H9	H10	H11	H12
I1	I2	I3	I4	I5	I6	I7	I8	I9	I10	I11	I12

J1	K1	L1	M1	N1	P1
J2	K2	L2	M2	N2	P2
J3	K3	L3	M3	N3	
J4	K4	L4	M4	N4	P4
J5	K5	L5	M5	N5	P5
J6					P6
J7					P7
J8					P8
J9					P9
J10					P10
J11					P11
J12	K12	L12	M12	N12	P12
J13	K13	L13	M13	N13	P13
J14	K14	L14	M14	N14	
J15	K15	L15	M15	N15	P15
J16	K16	L16	M16	N16	P16



I1	I2	I3	I4	I5	I6	I7	I8	I9	I10	I11	I12
H1	H2	H3	H4	H5	H6	H7	H8	H9	H10	H11	H12
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
F1	F2								F11	F12	
E1	E2								E11	E12	
D1	D2								D11	D12	
C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12
B1	B2	B3	B4	B5	B6	B7	B8	B9	B10	B11	B12
A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12

J16	K16	L16	M16	N16	P16
J15	K15	L15	M15	N15	P15
J14	K14	L14	M14	N14	
J13	K13	L13	M13	N13	P13
J12	K12	L12	M12	N12	P12
J11					P11
J10					P10
J9					P9
J8					P8
J7					P7
J6					P6
J5	K5	L5	M5	N5	P5
J4	K4	L4	M4	N4	P4
J3	K3	L3	M3	N3	
J2	K2	L2	M2	N2	P2
J1	K1	L1	M1	N1	P1

ENGINE ROOM HARNESS

INSTRUMENT HARNESS

### E.C.C.S. CONTROL UNIT



101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	9	10	21	22	23	24	25	26	27	28	29	30	41	42	43	44	45	46	47	48	49	50
109	110	111	112	113	114	115	116	11	12	13	14	15	16	17	18	19	20	31	32	33	34	35	36	37	38	39	40	51	52	53	54	55	56	57	58	59	60

View from harness side

### A/T CONTROL UNIT




1	2	3	4	9	10	11	12	13	14	15	23	24	25	26	27	28	29	30	31	32	33	34	35
5	6	7	8	16	17	18	19	20	21	22	36	37	38	39	40	41	42	43	44	45	46	47	48

View from harness side




## SUPER MULTIPLE JUNCTION (S.M.J.)

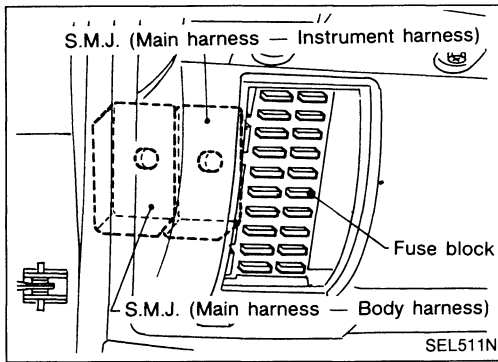

### INSTALLATION


To install S.M.J., tighten bolts until orange "full-tight" mark appears and then retighten to specified torque as required.

: 3 - 5 N·m

(0.3 - 0.5 kg-m, 2.2 - 3.6 ft-lb)

### CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

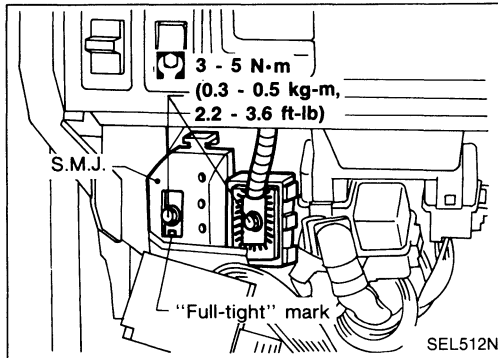

# SUPER MULTIPLE JUNCTION (S.M.J.)

## Terminal Arrangement

MAIN HARNESS

A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12
B1	B2	B3	B4	B5	B6	B7	B8	B9	B10	B11	B12
C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12
D1	D2								D11	D12	
E1	E2								E11	E12	
F1	F2								F11	F12	
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
H1	H2	H3	H4	H5	H6	H7	H8	H9	H10	H11	H12
I1	I2	I3	I4	I5	I6	I7	I8	I9	I10	I11	I12

J1	K1	L1	M1	N1	P1
J2	K2	L2	M2	N2	P2
J3	K3	L3	M3	N3	
J4	K4	L4		N4	P4
J5	K5	L5		N5	P5
J6					P6
J7					P7
J8					P8
J9					P9
J10					P10
J11					P11
J12	K12	L12		N12	P12
J13	K13	L13	M14	N13	P13
J14	K14	L14		N14	
J15	K15	L15	M15	N15	P15
J16	K16	L16	M16	N16	P16



I1	I2	I3	I4	I5	I6	I7	I8	I9	I10	I11	I12
H1	H2	H3	H4	H5	H6	H7	H8	H9	H10	H11	H12
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
F1	F2								F11	F12	
E1	E2								E11	E12	
D1	D2								D11	D12	
C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12
B1	B2	B3	B4	B5	B6	B7	B8	B9	B10	B11	B12
A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12

J16	K16	L16	M16	N16	P16
J15	K15	L15	M15	N15	P15
J14	K14	L14	M14	N14	
J13	K13	L13	M14	N13	P13
J12	K12	L12		N12	P12
J11					P11
J10					P10
J9					P9
J8					P8
J7					P7
J6					P6
J5	K5	L5		N5	P5
J4	K4	L4	M3	N4	P4
J3	K3	L3		N3	
J2	K2	L2	M2	N2	P2
J1	K1	L1	M1	N1	P1

ENGINE ROOM HARNESS

INSTRUMENT HARNESS

## E.C.C.S. CONTROL UNIT



101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	9	10	21	22	23	24	25	26	27	28	29	30	41	42	43	44	45	46	47	48	49	50
109	110	111	112	113	114	115	116	11	12	13	14	15	16	17	18	19	20	31	32	33	34	35	36	37	38	39	40	51	52	53	54	55	56	57	58	59	60

View from harness side


## A/T CONTROL UNIT




1	2	3	4	9	10	11	12	13	14	15	23	24	25	26	27	28	29	30	31	32	33	34	35
5	6	7	8	16	17	18	19	20	21	22	36	37	38	39	40	41	42	43	44	45	46	47	48

View from harness side

# 1990 INFINITI M30 E. C. C. S. WIRING DIAGRAM

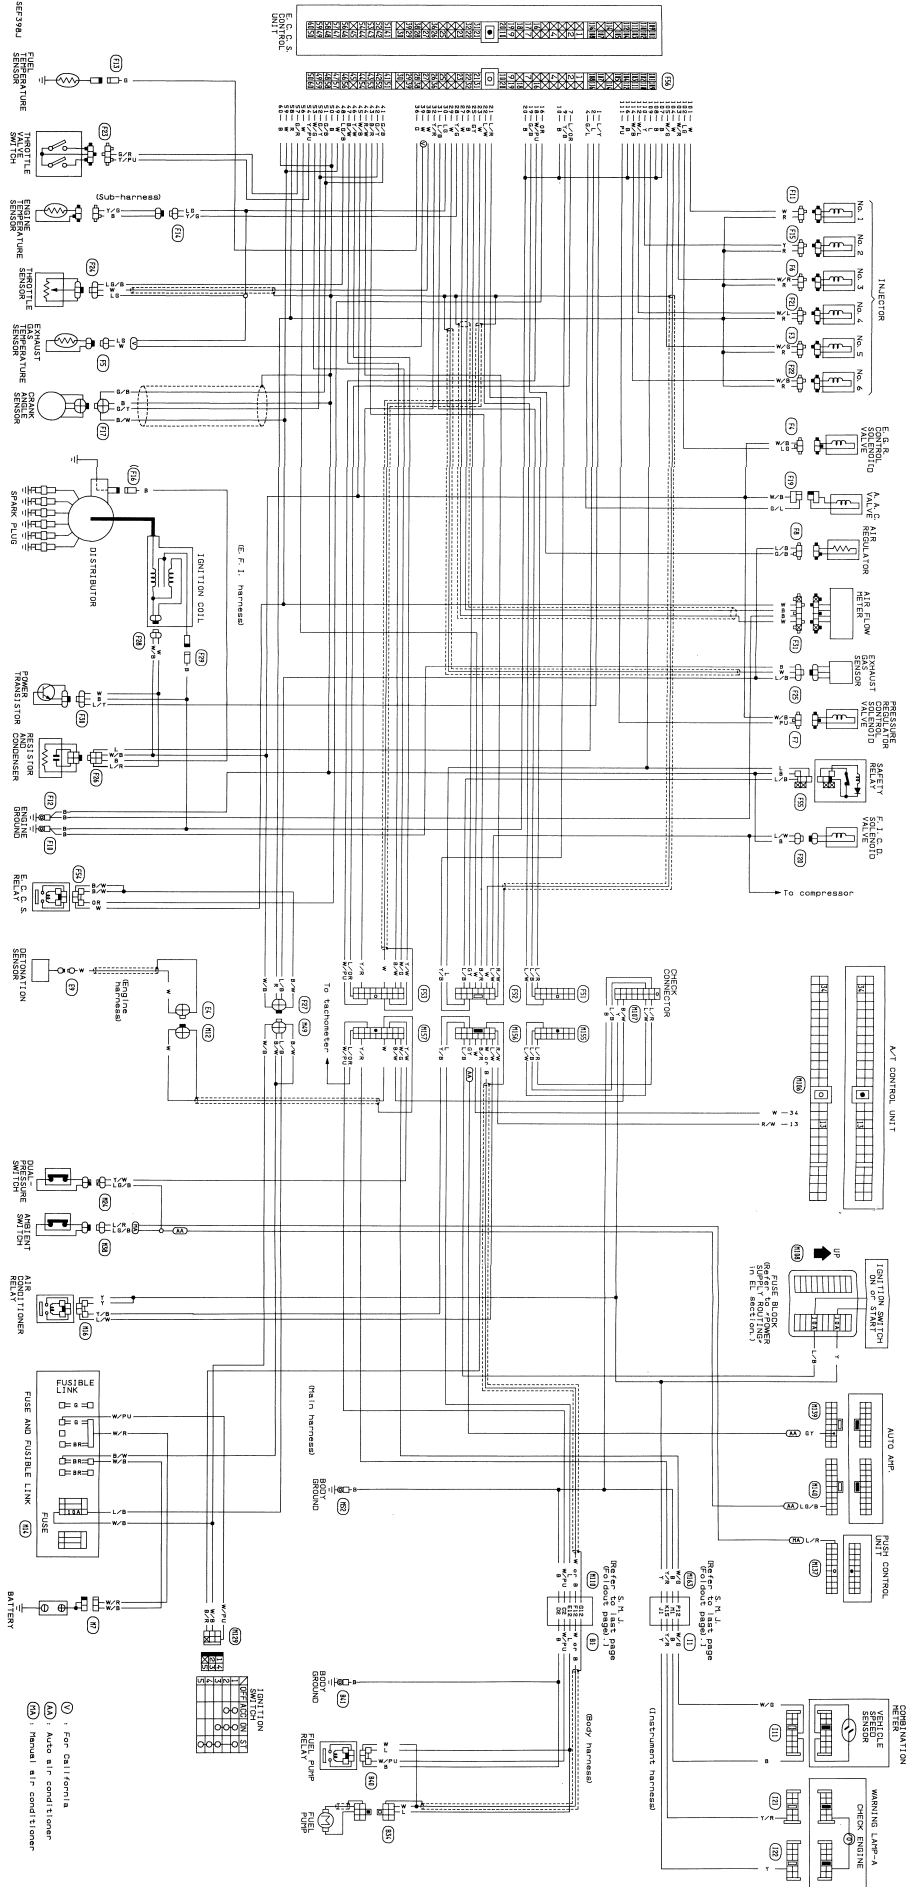

# 1990 INFINITI M30 CIRCUIT DIAGRAM

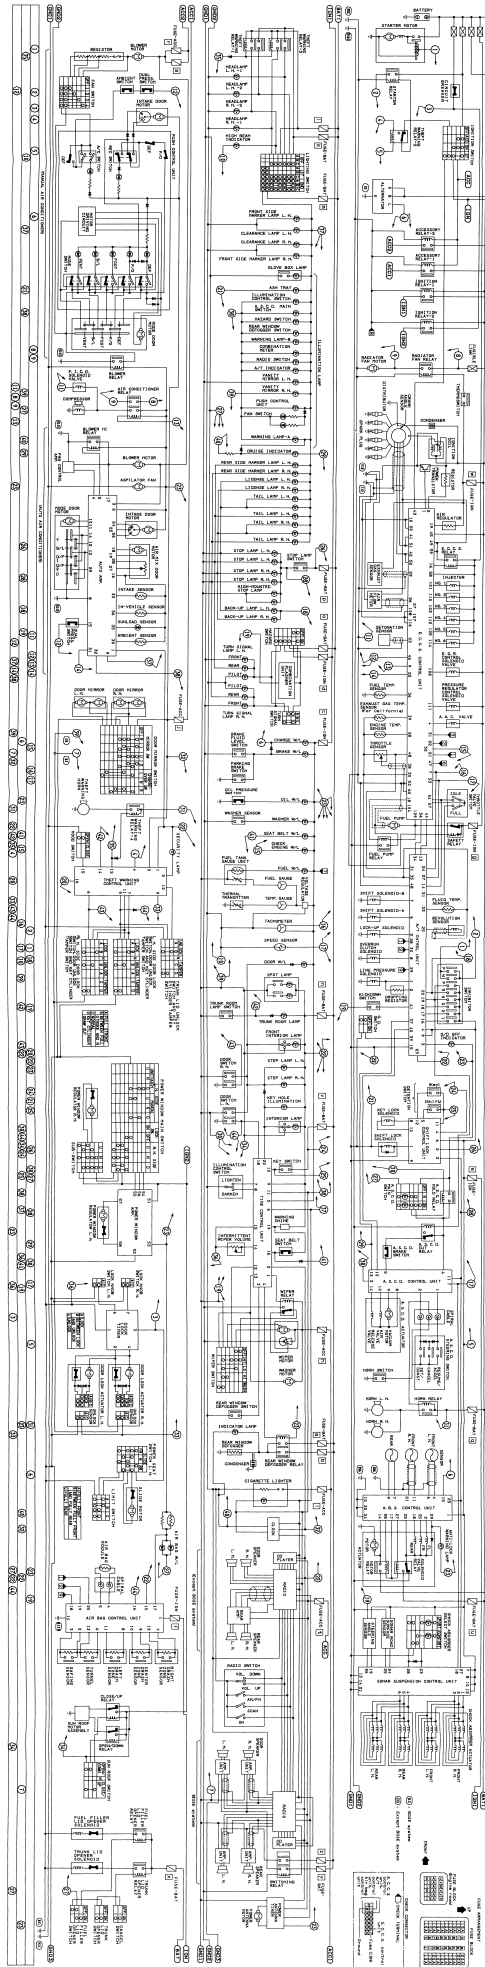

## INCH TO METRIC CONVERSION TABLE

(Rounded-off for automotive use)

inches	mm	inches	mm
.100	2.54	.610	15.49
.110	2.79	.620	15.75
.120	3.05	.630	16.00
.130	3.30	.640	16.26
.140	3.56	.650	16.51
.150	3.81	.660	16.76
.160	4.06	.670	17.02
.170	4.32	.680	17.27
.180	4.57	.690	17.53
.190	4.83	.700	17.78
.200	5.08	.710	18.03
.210	5.33	.720	18.29
.220	5.59	.730	18.54
.230	5.84	.740	18.80
.240	6.10	.750	19.05
.250	6.35	.760	19.30
.260	6.60	.770	19.56
.270	6.86	.780	19.81
.280	7.11	.790	20.07
.290	7.37	.800	20.32
.300	7.62	.810	20.57
.310	7.87	.820	20.83
.320	8.13	.830	21.08
.330	8.38	.840	21.34
.340	8.64	.850	21.59
.350	8.89	.860	21.84
.360	9.14	.870	22.10
.370	9.40	.880	22.35
.380	9.65	.890	22.61
.390	9.91	.900	22.86
.400	10.16	.910	23.11
.410	10.41	.920	23.37
.420	10.67	.930	23.62
.430	10.92	.940	23.88
.440	11.18	.950	24.11
.450	11.43	.960	24.38
.460	11.68	.970	24.64
.470	11.94	.980	24.89
.480	12.19	.990	25.15
.490	12.45	1.000	25.40
.500	12.70	2.000	50.80
.510	12.95	3.000	76.20
.520	13.21	4.000	101.60
.530	13.46	5.000	127.00
.540	13.72	6.000	152.40
.550	13.97	7.000	177.80
.560	14.22	8.000	203.20
.570	14.48	9.000	228.60
.580	14.73	10.000	254.00
.590	14.99	20.000	508.00
.600	15.24		

## METRIC TO INCH CONVERSION TABLE

(Rounded-off for automotive use)

mm	inches	mm	inches
1	.0394	51	2.008
2	.079	52	2.047
3	.118	53	2.087
4	.157	54	2.126
5	.197	55	2.165
6	.236	56	2.205
7	.276	57	2.244
8	.315	58	2.283
9	.354	59	2.323
10	.394	60	2.362
11	.433	61	2.402
12	.472	62	2.441
13	.512	63	2.480
14	.551	64	2.520
15	.591	65	2.559
16	.630	66	2.598
17	.669	67	2.638
18	.709	68	2.677
19	.748	69	2.717
20	.787	70	2.756
21	.827	71	2.795
22	.866	72	2.835
23	.906	73	2.874
24	.945	74	2.913
25	.984	75	2.953
26	1.024	76	2.992
27	1.063	77	3.031
28	1.102	78	3.071
29	1.142	79	3.110
30	1.181	80	3.150
31	1.220	81	3.189
32	1.260	82	3.228
33	1.299	83	3.268
34	1.339	84	3.307
35	1.378	85	3.346
36	1.417	86	3.386
37	1.457	87	3.425
38	1.496	88	3.465
39	1.535	89	3.504
40	1.575	90	3.543
41	1.614	91	3.583
42	1.654	92	3.622
43	1.693	93	3.661
44	1.732	94	3.701
45	1.772	95	3.740
46	1.811	96	3.780
47	1.850	97	3.819
48	1.890	98	3.858
49	1.929	99	3.898
50	1.969	100	3.937

