

A
B
C
D
E
F
G
H
I
J
SC
L
M

SECTION SC

STARTING & CHARGING SYSTEM

CONTENTS

PRECAUTIONS	2	Disassembly and Assembly	17
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	VQ35DE ENGINE MODELS (2WD)	17
Precautions for Power Generation Voltage Variable Control System	2	VQ35DE ENGINE MODELS (AWD)	18
PREPARATION	3	VK45DE ENGINE MODELS	19
Special Service Tools	3	Inspection After Disassembly	19
Commercial Service Tools	3	PINION/CLUTCH CHECK	19
BATTERY	4	CHARGING SYSTEM	20
How to Handle Battery	4	System Description	20
METHODS OF PREVENTING OVER-DISCHARGE	4	DESCRIPTION	20
CHECKING ELECTROLYTE LEVEL	5	MALFUNCTION INDICATOR	20
SPECIFIC GRAVITY CHECK	5	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM	21
CHARGING THE BATTERY	6	Wiring Diagram — CHARGE —	22
Trouble Diagnosis with Battery Service Center	7	VQ35DE ENGINE MODELS (2WD)	22
Removal and Installation	7	VQ35DE ENGINE MODELS (AWD)	23
REMOVAL	7	VK45DE ENGINE MODELS	24
INSTALLATION	7	Trouble Diagnosis with Starting/Charging System Tester (Charging)	25
STARTING SYSTEM	8	PRELIMINARY INSPECTION	26
System Description	8	DIAGNOSTIC PROCEDURE 1	26
Wiring Diagram — START —	9	DIAGNOSTIC PROCEDURE 2	27
VQ35DE ENGINE MODELS	9	DIAGNOSTIC PROCEDURE 3	27
VK45DE ENGINE MODELS	10	DIAGNOSTIC PROCEDURE 4	28
Trouble Diagnosis with Starting/Charging System		Power Generation Voltage Variable Control System	
Tester (Starting)	11	Operation Inspection	29
DIAGNOSTIC PROCEDURE 1	12	Removal and Installation	31
DIAGNOSTIC PROCEDURE 2	13	VQ35DE ENGINE MODELS	31
MINIMUM SPECIFICATION OF CRANKING VOLTAGE REFERENCING COOLANT TEMPERATURE	13	VK45DE ENGINE MODELS	33
Removal and Installation	14	Disassembly and Assembly	35
VQ35DE ENGINE MODELS (2WD)	14	VQ35DE ENGINE MODELS	35
VQ35DE ENGINE MODELS (AWD)	15	VK45DE ENGINE MODELS	36
VK45DE ENGINE MODELS	16	SERVICE DATA AND SPECIFICATIONS (SDS)	37
		Battery	37
		Starter	37
		Alternator	37

PRECAUTIONS

PRECAUTIONS

PF:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

NKS003NB

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for Power Generation Voltage Variable Control System

NKS003NC

CAUTION:

For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Do not connect the electrical component or the ground wire directly to the battery terminal.



PREPARATION

PREPARATION

PPF:00002


Special Service Tools

NKS005BM

Tool number (Kent-Moore No.) Tool name	Description
<p>— (J-48087) Battery Service Center</p>  <p>WKIA5280E</p>	<p>Tests battery. For operating instructions, refer to Technical Service Bulletin and Battery Service Center User Guide.</p>
<p>— (J-44373 Model MCR620) Starting/Charging System Tester</p>  <p>SEL403X</p>	<p>Tests starting and charging systems. For operating instructions, refer to Technical Service Bulletin.</p>

Commercial Service Tools

NKS005BN

Tool name	Description
<p>Power tool</p>  <p>PIIB1407E</p>	<p>Loosening bolts, nuts and screws</p>

A
B
C
D
E
F
G
H
I
J
SC
L
M

BATTERY

BATTERY

PFP:AYBGL

How to Handle Battery

NKS005B0




CAUTION:

- If it becomes necessary to start the engine with a booster battery and jumper cables, use a 12-volt booster battery.
- After connecting battery cables, ensure that they are tightly clamped to battery terminals for good contact.
- Never add distilled water through the hole used to check specific gravity.

METHODS OF PREVENTING OVER-DISCHARGE

The following precautions must be taken to prevent over-discharging a battery.

- The battery surface (particularly its top) should always be kept clean and dry.
- The terminal connections should be clean and tight.
- At every routine maintenance, check the electrolyte level. This also applies to batteries designated as "low maintenance" and "maintenance-free".
- When the vehicle is not going to be used over a long period of time, disconnect the battery cable from the negative terminal.
- Check the charge condition of the battery. Periodically check the specific gravity of the electrolyte. Keep a close check on charge condition to prevent over-discharge.

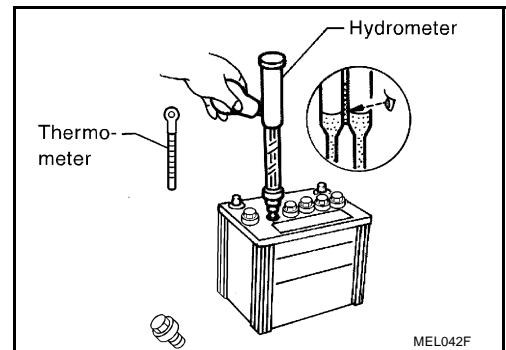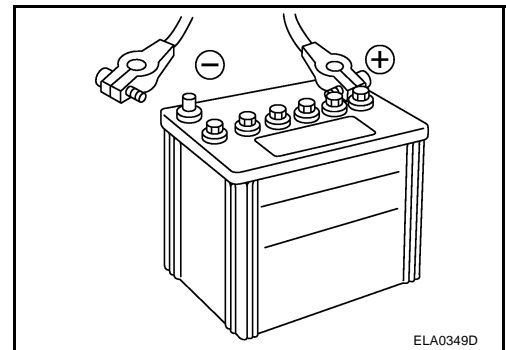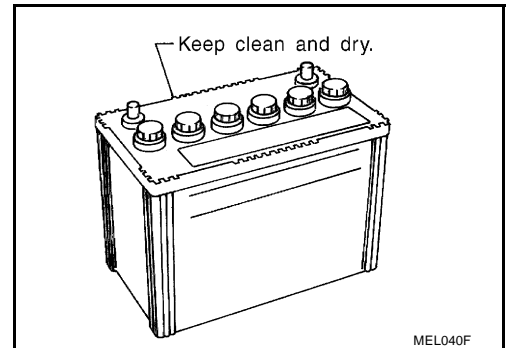


BATTERY

CHECKING ELECTROLYTE LEVEL

WARNING:

Never allow battery fluid to come in contact with skin, eyes, fabrics, or painted surfaces. After touching a battery, never touch or rub your eyes until you have thoroughly washed your hands. If acid contacts eyes, skin or clothing, immediately flush with water for 15 minutes and seek medical attention.

- Remove the cell plug using a suitable tool.
- Add distilled water up to the MAX level.

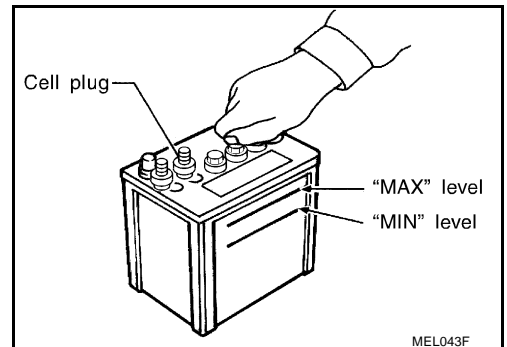


Sulphation

A battery will be completely discharged if it is left unattended for a long time and the specific gravity will become less than 1.100. This may result in sulphation on the cell plates.


To determine if a battery has been "sulphated", note its voltage and current when charging it. As shown in the figure, less current and higher voltage are observed in the initial stage of charging sulphated batteries.

A sulphated battery may sometimes be brought back into service by means of a long, slow charge, 12 hours or more, followed by a battery capacity test.

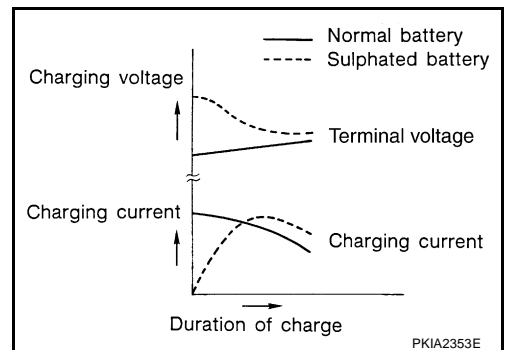

SPECIFIC GRAVITY CHECK

1. Read hydrometer and thermometer indications at eye level.
2. Use the chart below to correct your hydrometer reading according to electrolyte temperature.

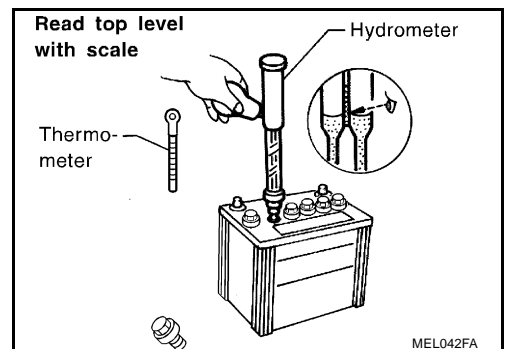

Hydrometer Temperature Correction

Battery electrolyte temperature °C (°F)	Add to specific gravity reading
71 (160)	0.032
66 (150)	0.028
60 (140)	0.024
54 (130)	0.020
49 (120)	0.016
43 (110)	0.012
38 (100)	0.008
32 (90)	0.004
27 (80)	0
21 (70)	-0.004

BATTERY

Battery electrolyte temperature °C (°F)	Add to specific gravity reading
16 (60)	-0.008
10 (50)	-0.012
4 (40)	-0.016
-1 (30)	-0.020
-7 (20)	-0.024
-12 (10)	-0.028
-18 (0)	-0.032

Corrected specific gravity	Approximate charge condition
1.260 - 1.280	Fully charged
1.230 - 1.250	3/4 charged
1.200 - 1.220	1/2 charged
1.170 - 1.190	1/4 charged
1.140 - 1.160	Almost discharged
1.110 - 1.130	Completely discharged

CHARGING THE BATTERY

CAUTION:

- Never “quick charge” a fully discharged battery.
- Keep the battery away from open flame while it is being charged.
- When connecting the charger, connect the leads first, then turn on the charger. Never turn on the charger first, as this may cause a spark.
- If battery electrolyte temperature rises above 55 °C (131 °F), stop charging. Always charge battery at a temperature below 55 °C (131 °F).

Charging Rates

Amps	Time
50	1 hour
25	2 hours
10	5 hours
5	10 hours

Never charge at more than 50 ampere rate.

NOTE:

The ammeter reading on your battery charger will automatically decrease as the battery charges. This indicates that the voltage of the battery is increasing normally as the state of charge improves. The charging amps indicated above refer to initial charge rate.

- If, after charging, the specific gravity of any two cells varies more than 0.050, the battery should be replaced.

BATTERY

Trouble Diagnosis with Battery Service Center

NKS005BP


For battery testing, use Battery Service Center (J-48087). For details and operating instructions, refer to Technical Service Bulletin and/or Battery Service Center User Guide.

Removal and Installation

NKS005BQ

REMOVAL

1. Remove engine room cover RH.
2. Remove battery cover.
3. Remove the clips (A), and remove hoodledge cover RH (1).

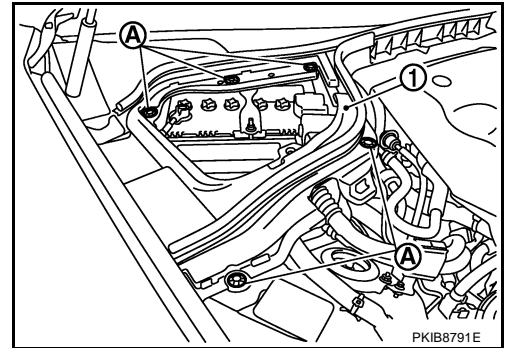


4. Remove the cowl top cover (RH). Refer to [EI-18, "Removal and Installation"](#).
5. Loosen battery terminal nuts (1), and disconnect both battery cables from battery terminals.

3 : Relay box

CAUTION:

When disconnecting, disconnect the battery cable from the negative terminal first.

6. Remove battery fix frame mounting nuts (2) and battery fix frame.
7. Remove battery.

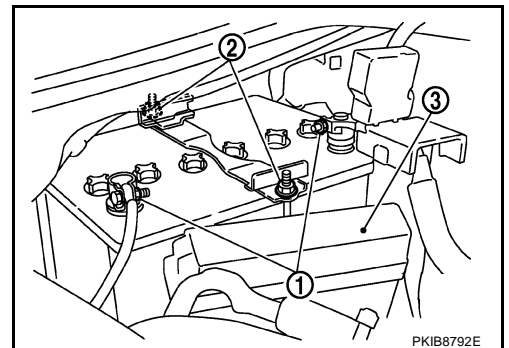

INSTALLATION

Installation is the reverse order of removal.

NOTE:

Locate the battery at the outside of the vehicle in the battery tray when installing the battery. Check that the positive terminal cap opens and closes.

CAUTION:

When connecting, connect the battery cable to the positive terminal first.

Battery fix frame mounting nut

: 4.4 N·m (0.45 kg·m, 39 in-lb)

Battery terminal nut

: 5.4 N·m (0.55 kg·m, 48 in-lb)

A
B
C
D
E
F
G
H
I
J
SC
L
M

STARTING SYSTEM

STARTING SYSTEM

PFP:23300

System Description

NKS005C2

Power is supplied at all times

- through 15A fuse (No. 78, located in the IPDM E/R)
- to CPU of IPDM E/R,
- through 15A fuse (No. 71, located in the IPDM E/R)
- to CPU of IPDM E/R.

Ground is supplied

- to IPDM E/R terminals 38 and 51
- from grounds E22 and E43.

When the selector lever in the P or N position, power is supplied

- from TCM, and through A/T assembly terminal 9
- to IPDM E/R terminal 53.

And then provided that IPDM E/R receives a starter relay ON signal with CAN communication, starter relay is energized.

With the ignition switch in the START position, power is supplied

- through IPDM E/R terminal 3
- to starter motor terminal 1.



The starter motor plunger closes and provides a closed circuit between the battery and starter motor. The starter motor is grounded to the engine block. With power and ground supplied, cranking occurs and the engine starts.

STARTING SYSTEM

Wiring Diagram — START — VQ35DE ENGINE MODELS

NKS005C3

SC-START-01

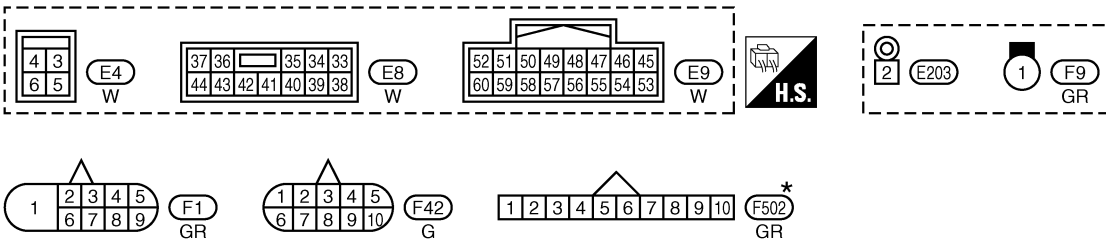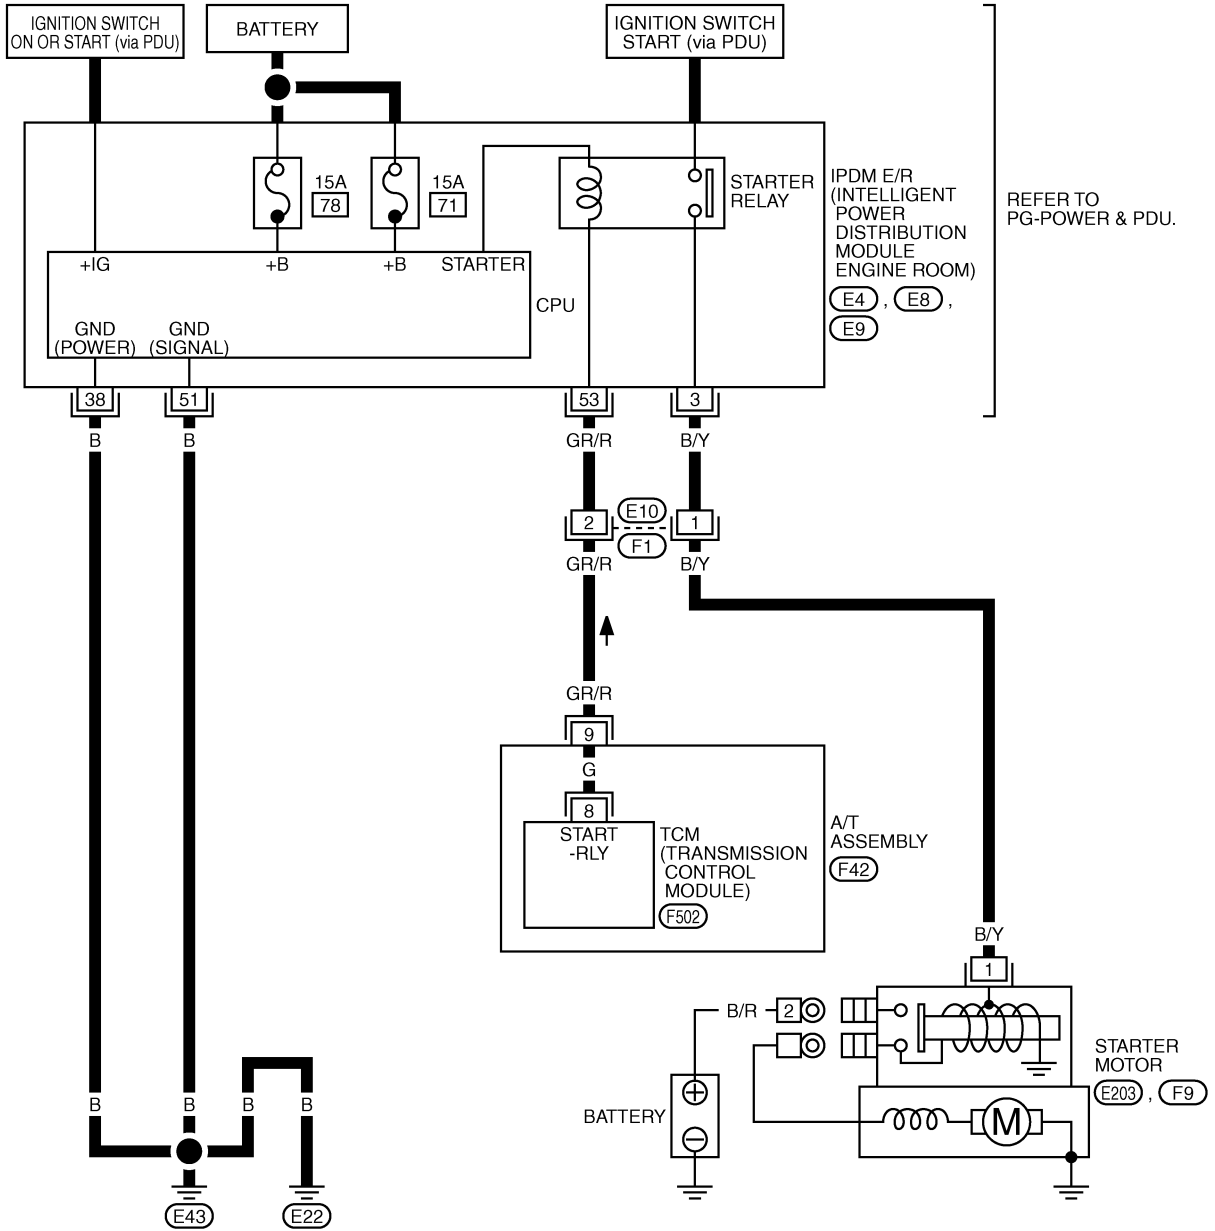



*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWT3232E

STARTING SYSTEM

VK45DE ENGINE MODELS

SC-START-02

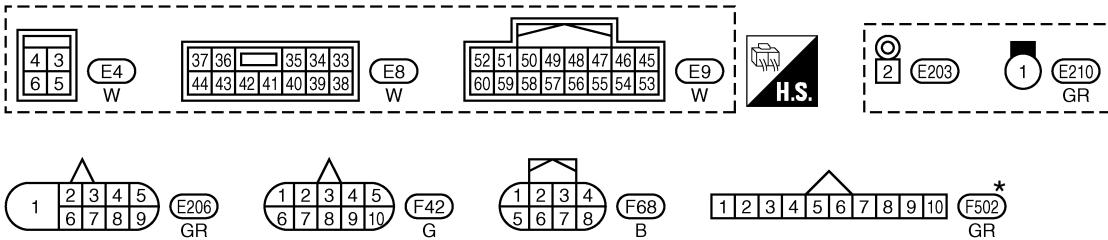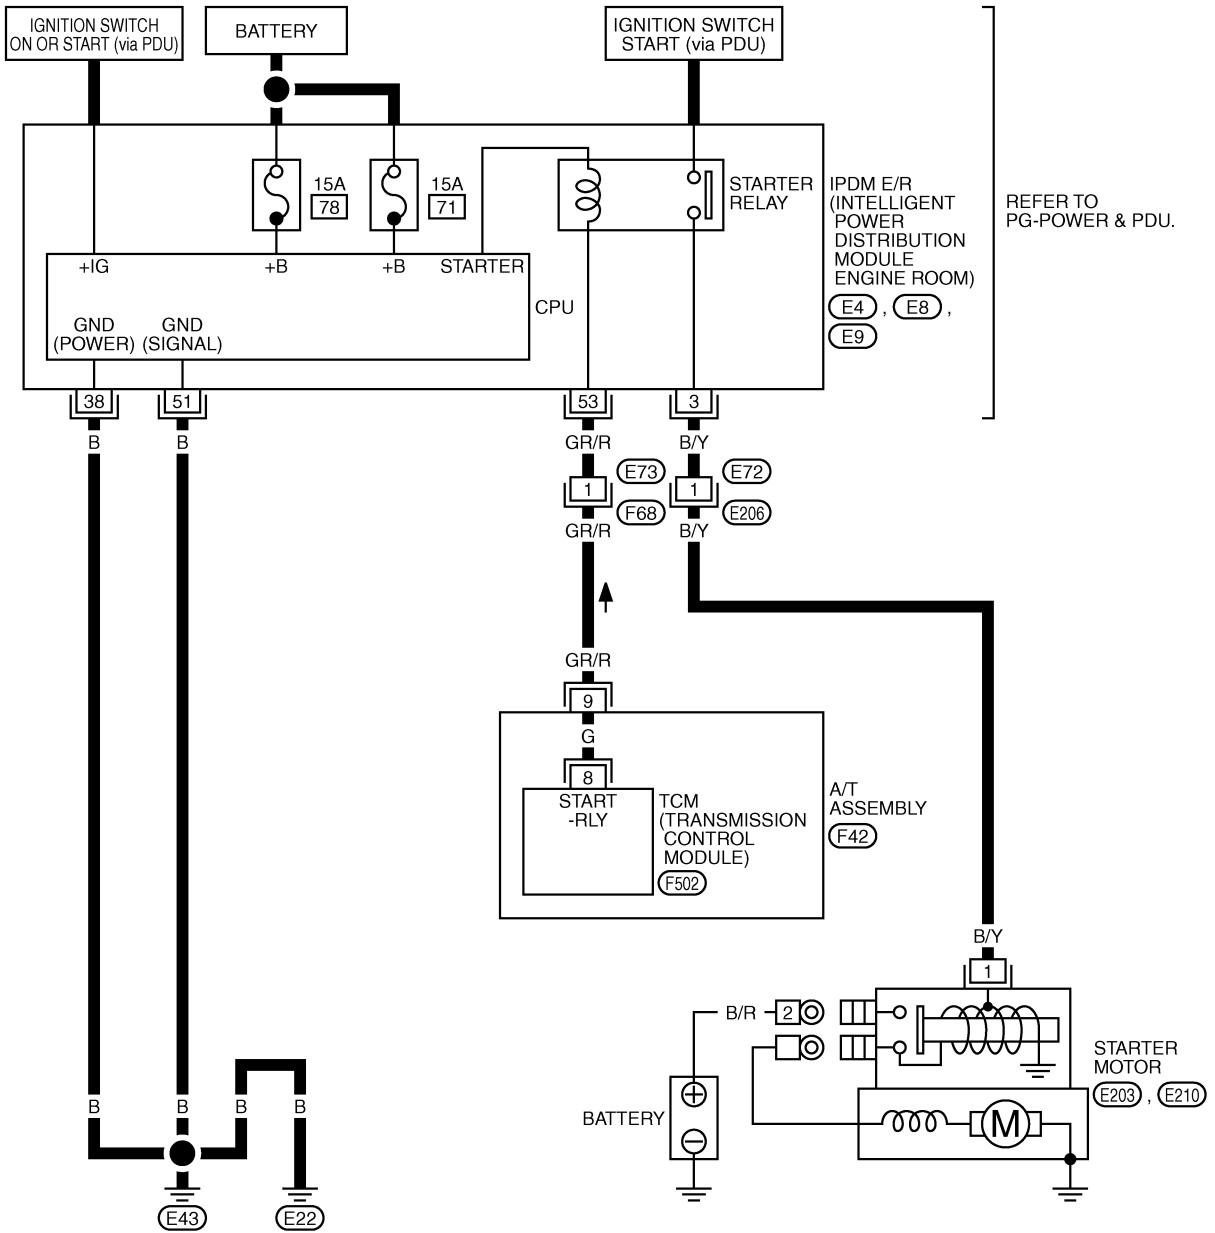

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.


TKWT3233E

STARTING SYSTEM

Trouble Diagnosis with Starting/Charging System Tester (Starting)

NKS005BT

For starting system testing, use Starting/Charging System Tester (J-44373). For details and operating instructions, refer to Technical Service Bulletin.

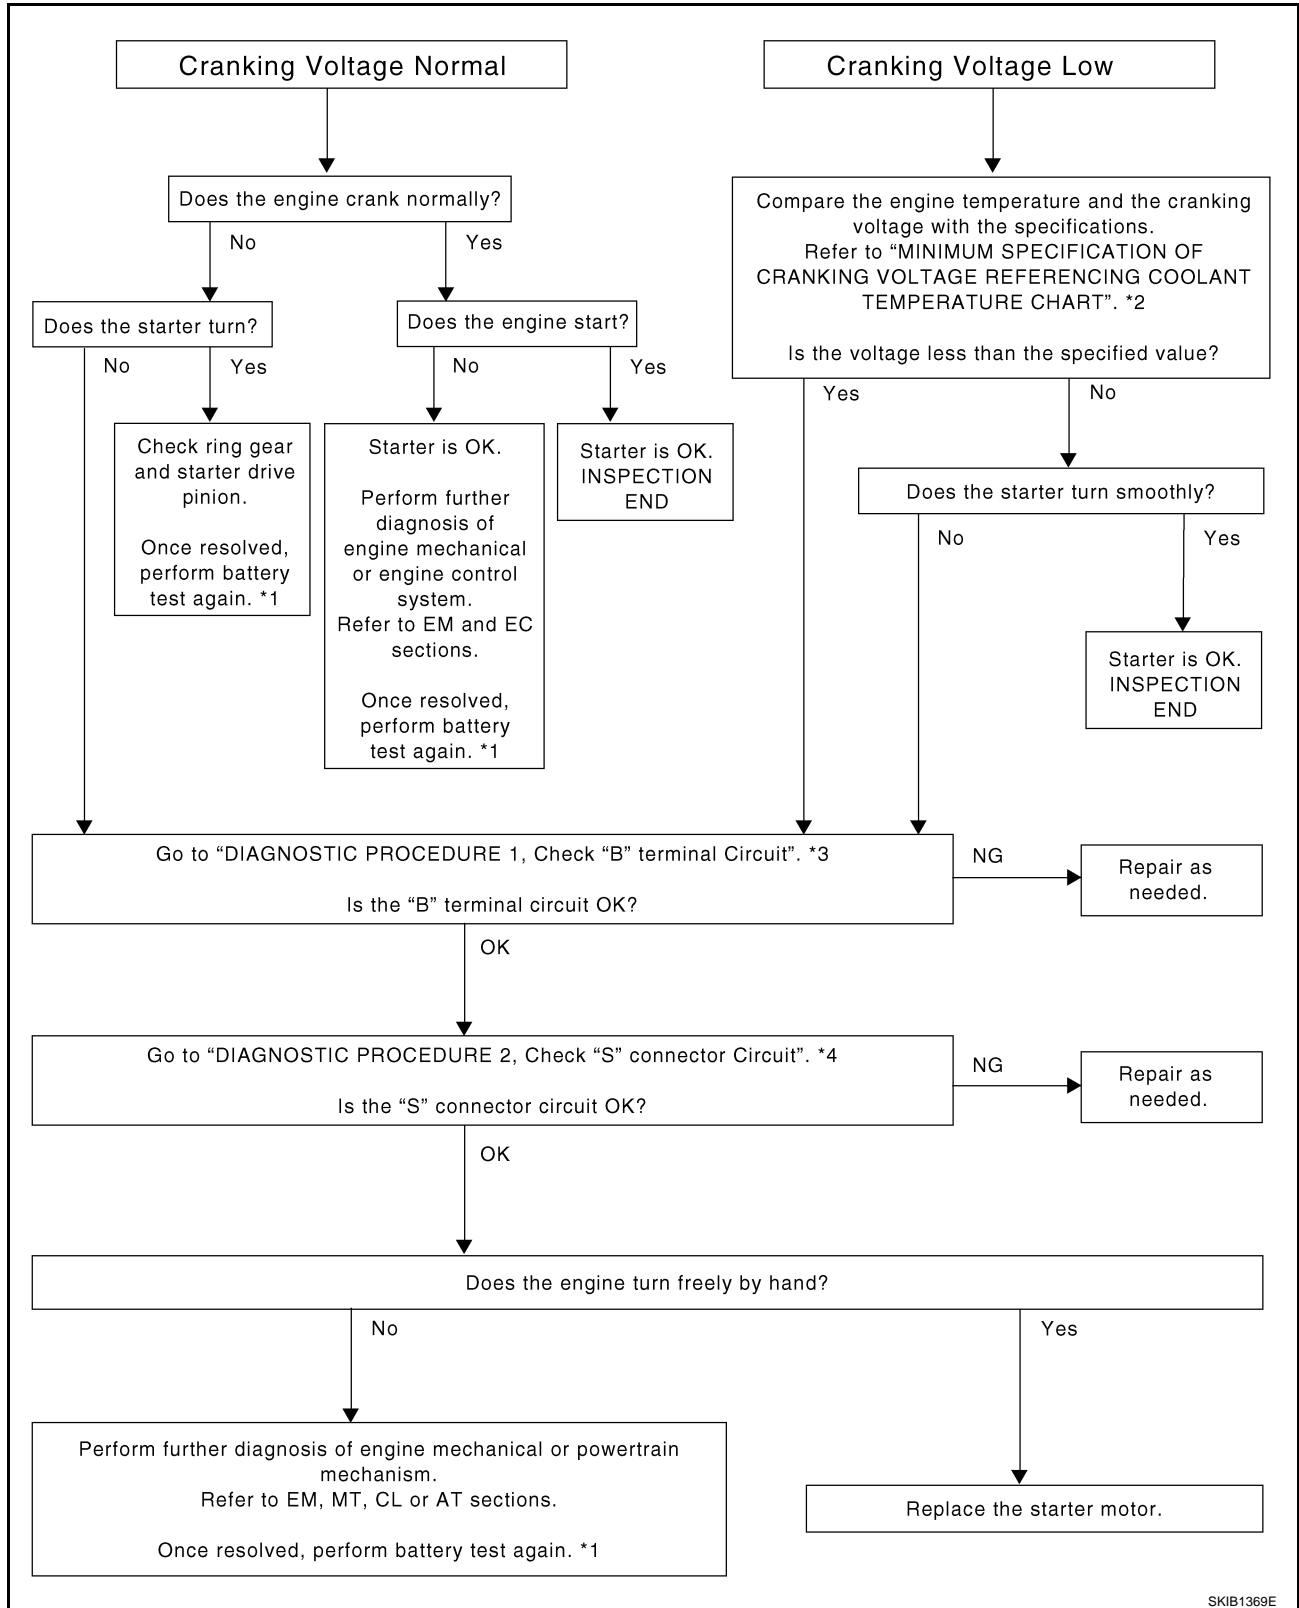

SKIB1369E

A
B
C
D
E
F
G
H
I
J
SC
L
M

STARTING SYSTEM

*1 For battery testing, use Battery Service Center (J-48087). For details and operating instructions, refer to Technical Service Bulletin and/or Battery Service Center User Guide.

*2 [SC-13. "MINIMUM SPECIFICATION OF CRANKING VOLTAGE REFERENCE COOLANT TEMPERATURE"](#)

*3 [SC-12. "Check "B" Terminal Circuit"](#)

*4 [SC-13. "Check "S" Connector Circuit"](#)

DIAGNOSTIC PROCEDURE 1

Check "B" Terminal Circuit

CAUTION:


Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

1. CHECK "B" TERMINAL CIRCUIT

1. Turn ignition switch OFF.
2. Make sure that starter motor "B" terminal connection is clean and tight.
3. Check voltage between starter motor "B" terminal and ground.

Terminals			Voltage (Approx.)
(+)	(-)		
Starter motor "B" terminal	Terminal		
E203	2	Ground	Battery voltage

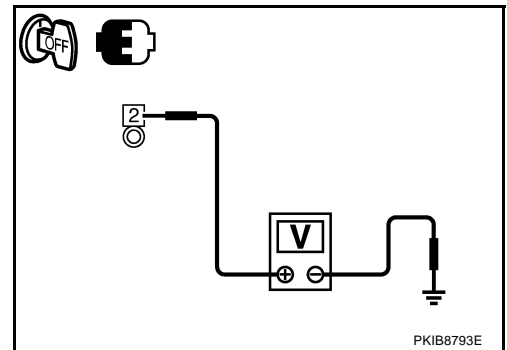

OK or NG


OK >> GO TO 2.

NG >> Check harness between battery and starter motor for open circuit.

2. CHECK BATTERY CABLE CONNECTION STATUS (VOLTAGE DROP TEST)

Check voltage between starter motor "B" terminal and battery positive terminal.

(+) Terminal	(-) Terminal		Condition	Voltage (Approx.)
	Starter motor "B" terminal	Terminal		
Battery positive terminal	E203	2	When the ignition switch is in START position	Less than 0.5 V

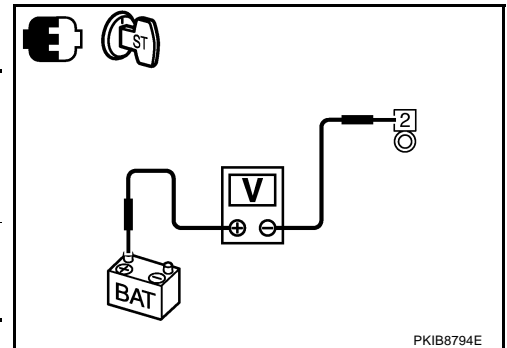

OK or NG

OK >> GO TO 3.


NG >> Check harness between the battery and the starter motor for poor continuity.

STARTING SYSTEM

3. CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

1. Turn ignition switch OFF.
2. Check voltage between starter motor case and battery negative terminal.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Starter motor case	Battery negative terminal	When the ignition switch is in START position	Less than 0.2 V

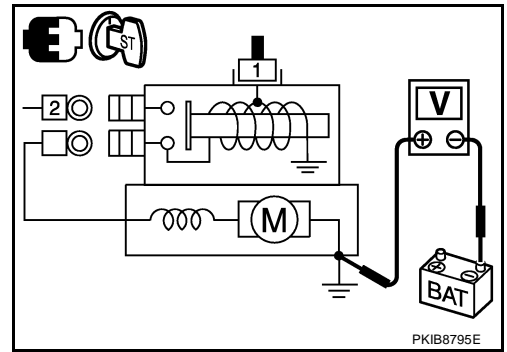

OK or NG

- OK >> "B" terminal circuit is OK. Further inspection necessary. Refer to [SC-11, "Trouble Diagnosis with Starting/Charging System Tester \(Starting\)"](#).
- NG >> Check the starter motor case and ground for poor continuity.

DIAGNOSTIC PROCEDURE 2

Check "S" Connector Circuit

CAUTION:


Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

1. CHECK "S" CONNECTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector.
3. Check voltage between starter motor harness connector and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Starter motor connector	Terminal	When the ignition switch is in START position	Battery voltage
F9 (VQ35DE) E210 (VK45DE)	1		

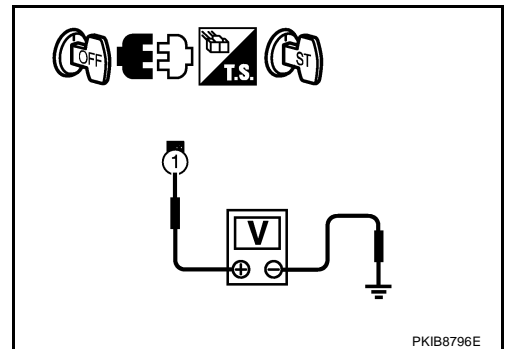

OK or NG

- OK >> "S" connector circuit is OK. Further inspection necessary. Refer to [SC-11, "Trouble Diagnosis with Starting/Charging System Tester \(Starting\)"](#).
- NG >> Check the following.
- Ignition switch and PDU
 - IPDM E/R
 - Harness between starter motor and IPDM E/R


MINIMUM SPECIFICATION OF CRANKING VOLTAGE REFERENCING COOLANT TEMPERATURE

Engine coolant temperature	Voltage [V]
-30 °C to -20 °C (-22 °F to -4 °F)	8.6
-19 °C to -10 °C (-2 °F to 14 °F)	9.1
-9 °C to 0 °C (16 °F to 32 °F)	9.5
More than 1 °C (More than 34 °F)	9.9

STARTING SYSTEM

NKS005BU

Removal and Installation VQ35DE ENGINE MODELS (2WD)

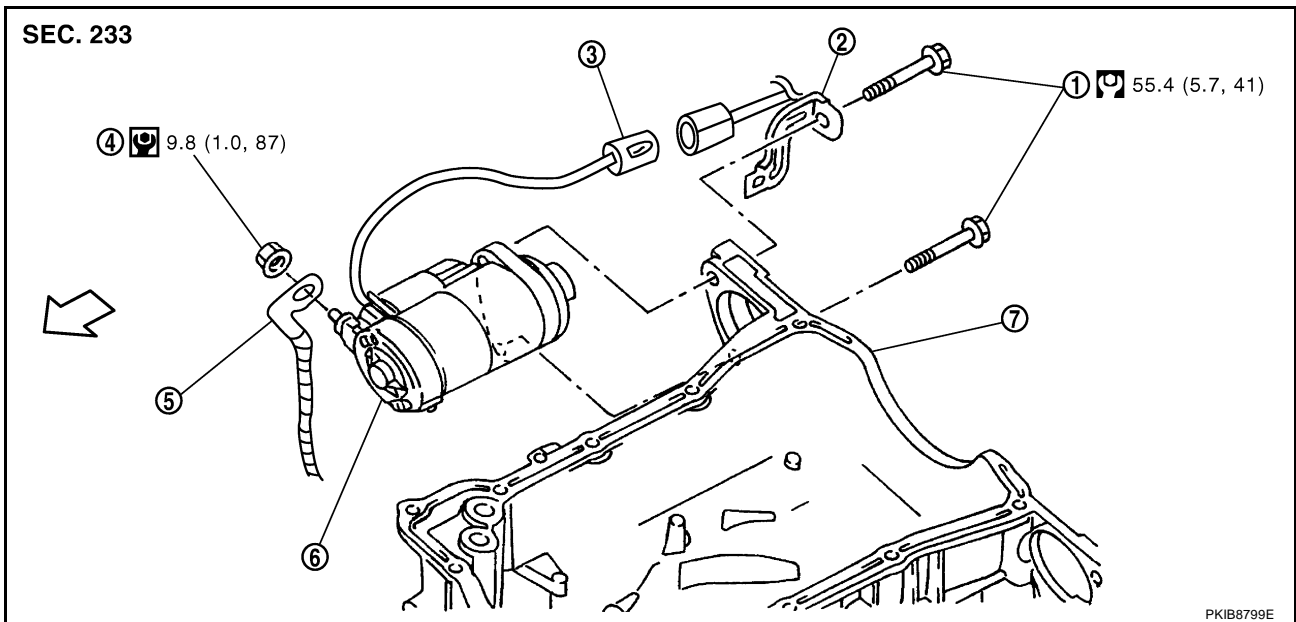


- | | | |
|--------------------------------|-------------------------|---------------------|
| 1. Starter motor mounting bolt | 2. Harness clip bracket | 3. "S" connector |
| 4. "B" terminal nut | 5. "B" terminal harness | 6. Starter motor |
| 7. Oil pan | : N·m (kg-m, ft-lb) | : N·m (kg-m, in-lb) |

: Engine front

Removal

1. Disconnect the battery cable from the negative terminal.
2. Remove engine front and rear undercover, using power tools.
3. Remove "B" terminal nut (1).
4. Disconnect "S" connector (2).
5. Remove starter motor mounting bolts (A), using power tools.
6. Remove starter motor downward from the vehicle.

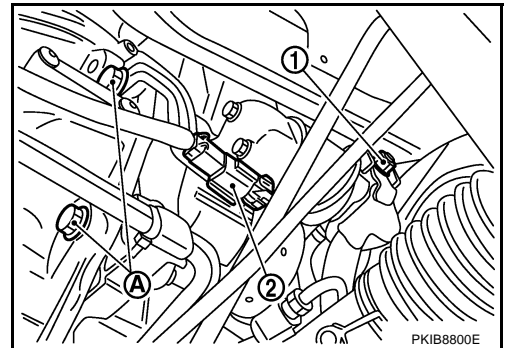

Installation

Installation is the reverse order of removal.


CAUTION:

Be sure to tighten "B" terminal nut carefully.


STARTING SYSTEM


VQ35DE ENGINE MODELS (AWD)

SEC. 233

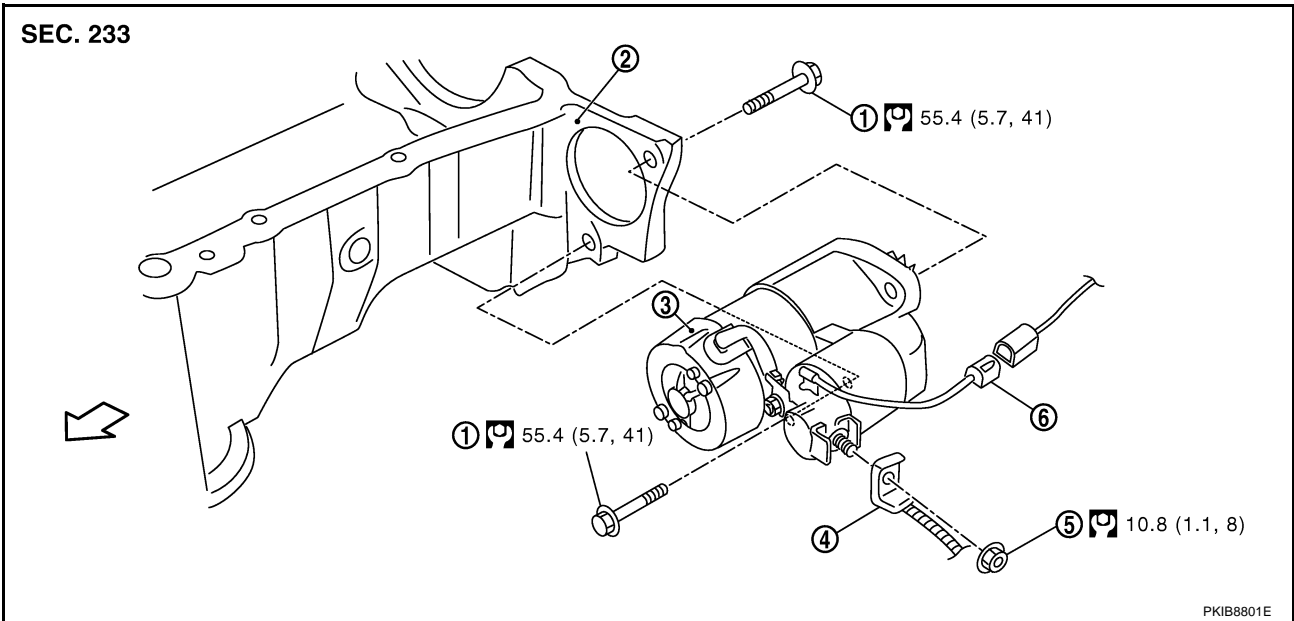


- | | | |
|--------------------------------|---------------------|------------------|
| 1. Starter motor mounting bolt | 2. Oil pan | 3. Starter motor |
| 4. "B" terminal harness | 5. "B" terminal nut | 6. "S" connector |

 : N·m (kg-m, ft-lb)


 : Engine front

Removal

1. Disconnect the battery cable from the negative terminal.
2. Remove engine rear undercover, using power tools.
3. Remove exhaust mounting bracket. Refer to [EM-28, "Removal and Installation"](#).
4. Remove "B" terminal nut (1).

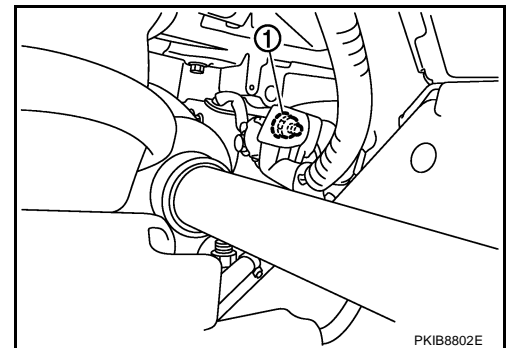

5. Disconnect "S" connector (1).
6. Remove starter motor mounting bolts (A) and harness bracket (2), using power tools.
7. Remove starter motor downward from the vehicle.

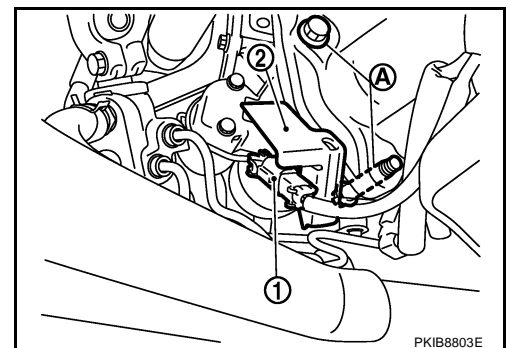

Installation


Installation is the reverse order of removal.



CAUTION:

Be sure to tighten "B" terminal nut carefully.

STARTING SYSTEM

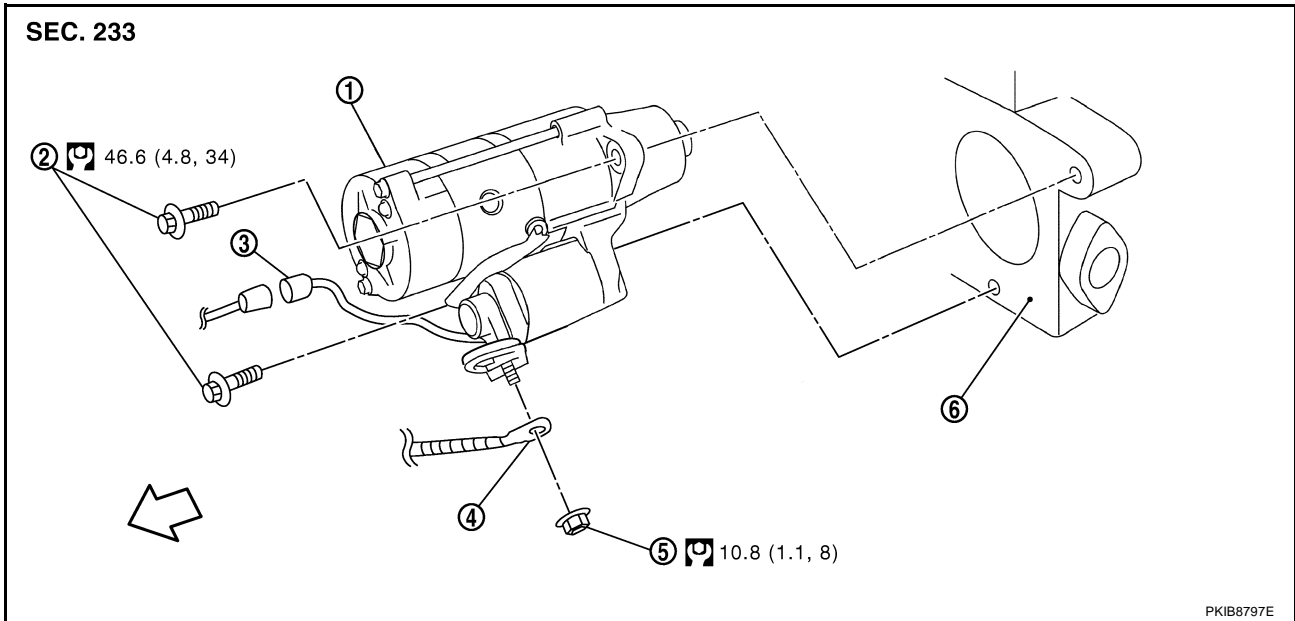
VK45DE ENGINE MODELS



- | | | |
|-------------------------|--------------------------------|-------------------|
| 1. Starter motor | 2. Starter motor mounting bolt | 3. "S" connector |
| 4. "B" terminal harness | 5. "B" terminal nut | 6. Cylinder block |
-  : N·m (kg·m, ft·lb)  : Engine front

Removal

1. Disconnect the battery cable from the negative terminal.
2. Remove engine front and rear undercover, using power tools.
3. Remove left engine mounting insulator and left engine mounting bracket. Refer to [EM-247, "ENGINE ASSEMBLY"](#).
4. Remove "B" terminal nut (1).
5. Disconnect "S" connector (2).
6. Remove the bolt (A) and the harness bracket (3).
7. Remove starter motor mounting bolts (B), using power tools.
8. Remove starter motor forward from the vehicle.

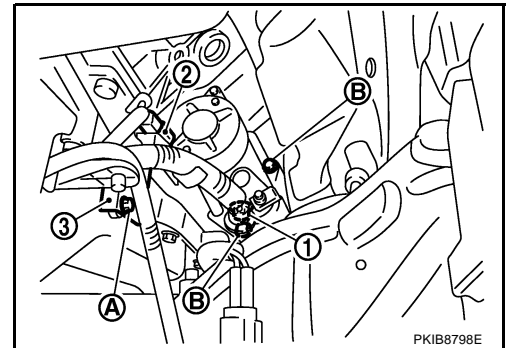

Installation

Installation is the reverse order of removal.

CAUTION:


Be sure to tighten "B" terminal nut carefully.

STARTING SYSTEM

Disassembly and Assembly VQ35DE ENGINE MODELS (2WD)

NKS005BV

A
B
C
D
E
F
G
H
I
J
SC
L
M

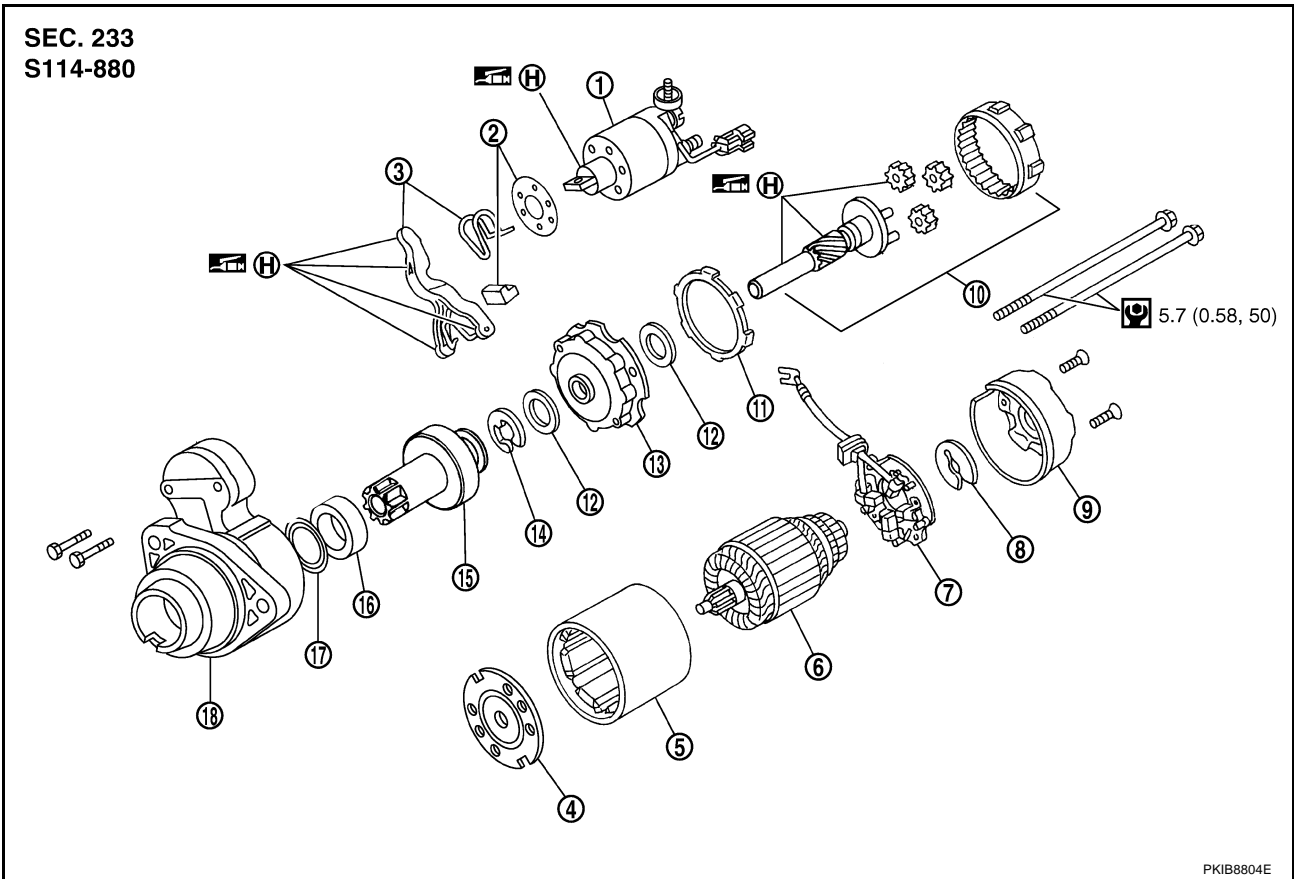


- | | | |
|-----------------------------|-------------------|------------------------|
| 1. Magnetic switch assembly | 2. Dust cover kit | 3. Shift lever set |
| 4. Center bracket (A) | 5. Yoke assembly | 6. Armature assembly |
| 7. Brush holder assembly | 8. Thrust washer | 9. Rear cover assembly |
| 10. Shaft gear assembly | 11. Packing | 12. Thrust washer |
| 13. Center bracket (P) | 14. E-ring | 15. Pinion assembly |
| 16. Ball bearing | 17. Caul | 18. Gear case assembly |
- : N-m (kg-m, in-lb)
 (H): High-temperature grease point

STARTING SYSTEM


VQ35DE ENGINE MODELS (AWD)

SEC. 233
S114-881

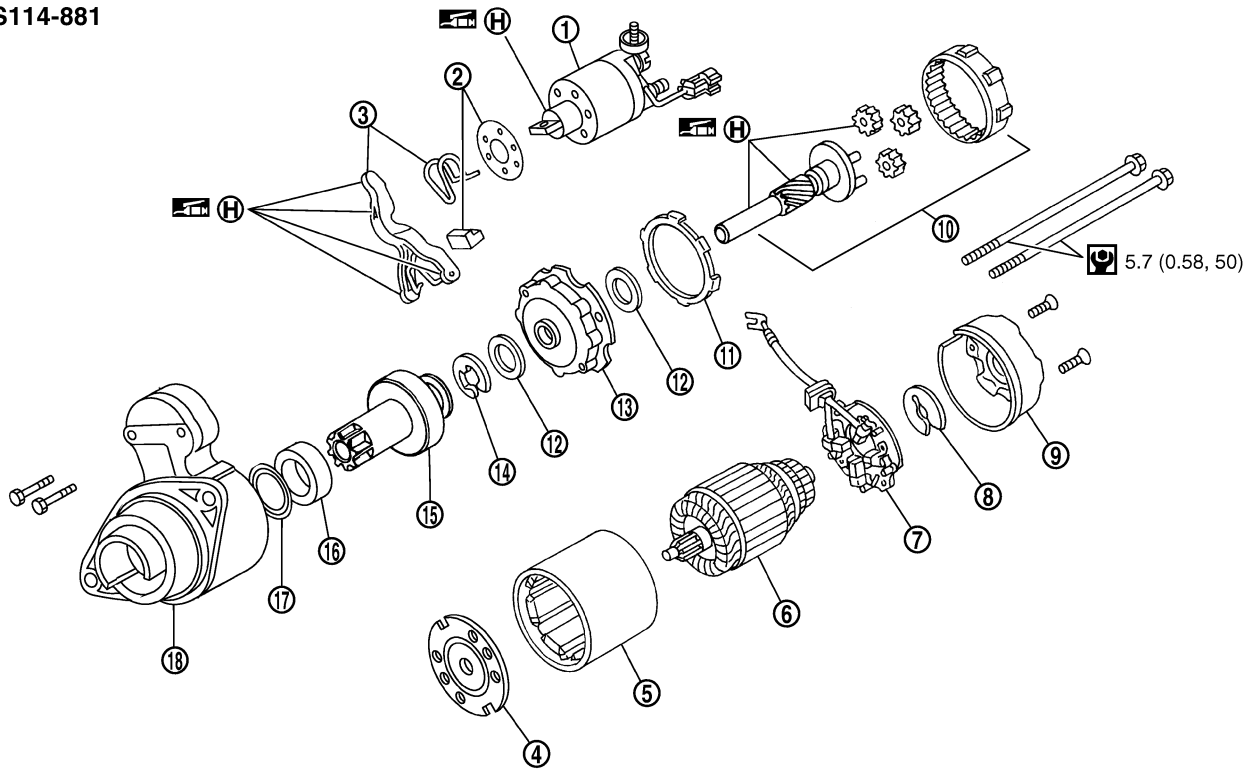

PKIB8805E

- | | | |
|-----------------------------|-------------------|------------------------|
| 1. Magnetic switch assembly | 2. Dust cover kit | 3. Shift lever set |
| 4. Center bracket (A) | 5. Yoke assembly | 6. Armature assembly |
| 7. Brush holder assembly | 8. Thrust washer | 9. Rear cover assembly |
| 10. Shaft gear assembly | 11. Packing | 12. Thrust washer |
| 13. Center bracket (P) | 14. E-ring | 15. Pinion assembly |
| 16. Ball bearing | 17. Caul | 18. Gear case assembly |


 : N·m (kg-m, in-lb)

 (H): High-temperature grease point

STARTING SYSTEM

VK45DE ENGINE MODELS

SEC. 233
M2T85771

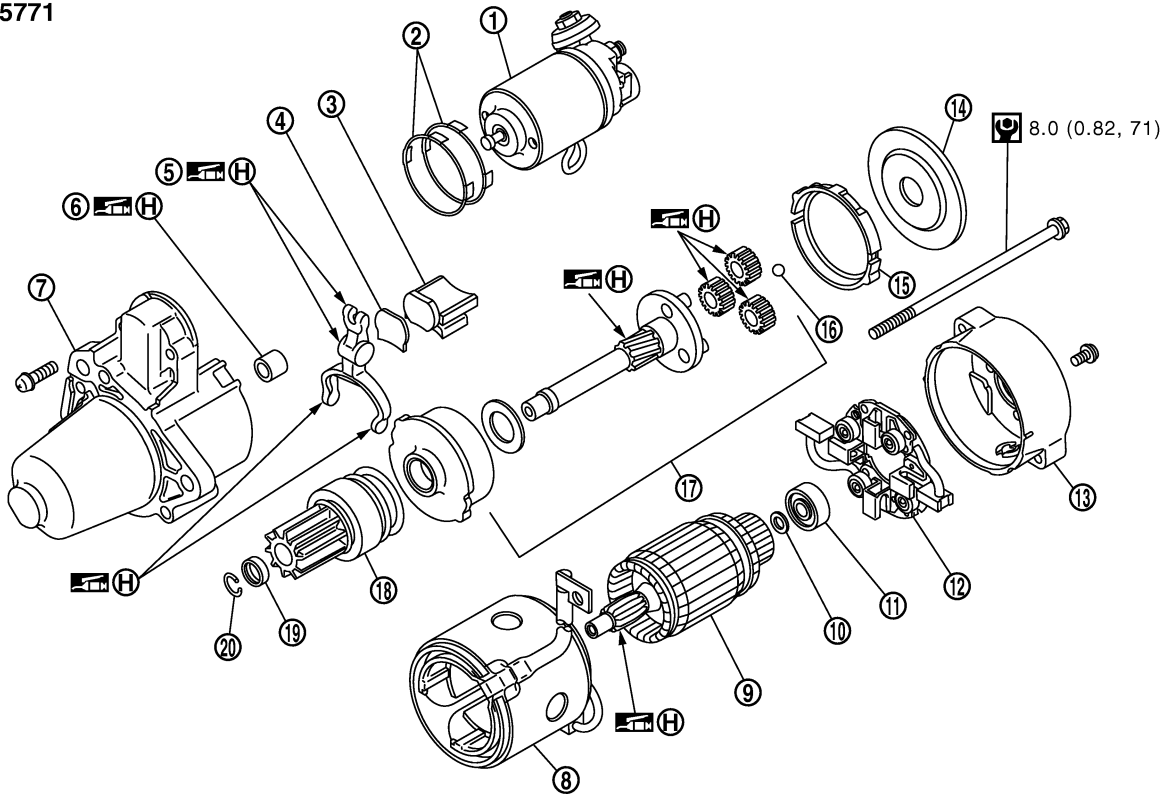

PKIB8653E

- | | | |
|-----------------------------|-------------------------|---------------------------|
| 1. Magnetic switch assembly | 2. Adjusting plate | 3. Packing |
| 4. Plate | 5. Shift lever | 6. Sleeve bearing |
| 7. Front bracket assembly | 8. Yoke assembly | 9. Armature assembly |
| 10. Washer | 11. Rear bearing | 12. Brush holder assembly |
| 13. Rear bracket assembly | 14. Cover | 15. Packing |
| 16. Ball | 17. Shaft gear assembly | 18. Clutch gear assembly |
| 19. Pinion stopper | 20. Stopper clip | |

: N-m (kg-m, in-lb)

(H): High-temperature grease point

Inspection After Disassembly PINION/CLUTCH CHECK

NKS005BW

1. Inspect pinion teeth.
 - Replace pinion if teeth are worn or damaged. (Also check condition of ring gear teeth.)
2. Inspect reduction gear teeth.
 - Replace reduction gear if teeth are worn or damaged. (Also check condition of armature shaft gear teeth.)
3. Check if pinion locks in one direction and rotates smoothly in the opposite direction.
 - If it locks or rotates in both directions, or unusual resistance is evident, replace.

A
B
C
D
E
F
G
H
I
J
SC
L
M

CHARGING SYSTEM

CHARGING SYSTEM

PF23100

System Description DESCRIPTION

NKS005BX

The alternator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged. The voltage output is controlled by the IC regulator.

Power is supplied at all times

- through 10A fuse [No. 36, located in the fuse, fusible link and relay block (J/B)]
- to alternator terminal 4 ("S" terminal).

"B" terminal supplies power to charge the battery and operate the vehicle's electrical system. Output voltage is controlled by the IC regulator at terminal 4 ("S" terminal) detecting the input voltage.

The alternator is grounded to the engine block.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 12 for the charge warning lamp.

Ground is supplied at signal

- to combination meter terminal 22
- through alternator terminal 3 ("L" terminal).

Then power and ground are supplied, the charge warning lamp will illuminate.

When the alternator is providing sufficient voltage with the engine running, the ground is opened and the charge warning lamp will go off.

If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Ground is supplied

- to alternator terminal 2 ("E" terminal)
- through grounds E222, E223 and E224. (VQ35DE)
- through ground E212. (VK45DE)

MALFUNCTION INDICATOR


The IC regulator warning function activates to illuminate the charge warning lamp, if any of the following symptoms occur while alternator is operating:

- Excessive voltage is produced.
- No voltage is produced.

CHARGING SYSTEM

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

Power generation voltage variable control system that controls the power generation voltage of the alternator has been adopted. By performing the power generation voltage variable control, the engine load due to the power generation of the alternator is reduced and fuel consumption is decreased.

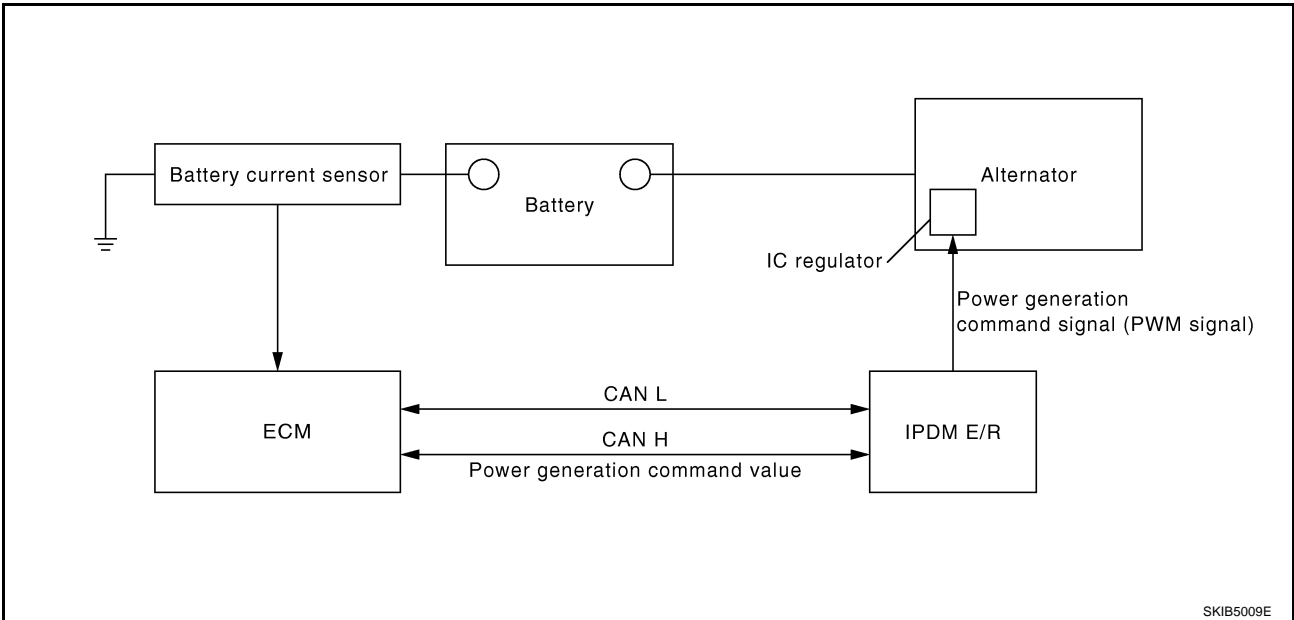

Operation Description

- The battery current sensor detects the charging/discharging current of the battery. ECM judges the battery condition based on this signal.
- ECM judges whether to perform the power generation voltage variable control according to the battery condition.
- When performing the power generation voltage variable control, ECM calculates the target power generation voltage according to the battery condition and sends the calculated value as the power generation command value to IPDM E/R.
- IPDM E/R converts the received power generation command value into the power generation command signal (PWM signal) and sends it to the IC regulator.
- The IC regulator controls the power generation voltage by the target power generation voltage based on the received power generation command signal.
- When there is no power generation command signal, the alternator performs the normal power generation according to the characteristic of the IC regulator.


NOTE:

When any malfunction is detected in the power generation voltage variable control system, the power generation is performed according to the characteristic of the IC regulator of the alternator.

Main Component Part

BATTERY CURRENT SENSOR

- Battery current sensor (1) is installed to the battery cable at the negative terminal, and it detects the charging/discharging current of the battery and sends the voltage signal to ECM according to the current value.




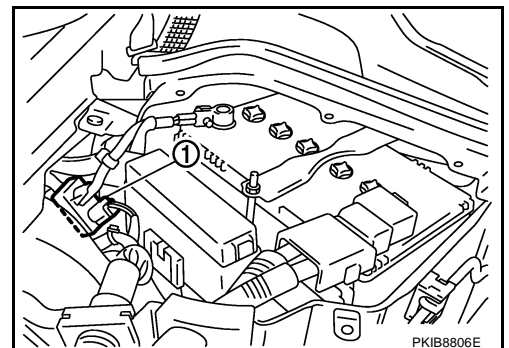


CHARGING SYSTEM

NKS005BY

Wiring Diagram — CHARGE — VQ35DE ENGINE MODELS (2WD)

SC-CHARGE-01

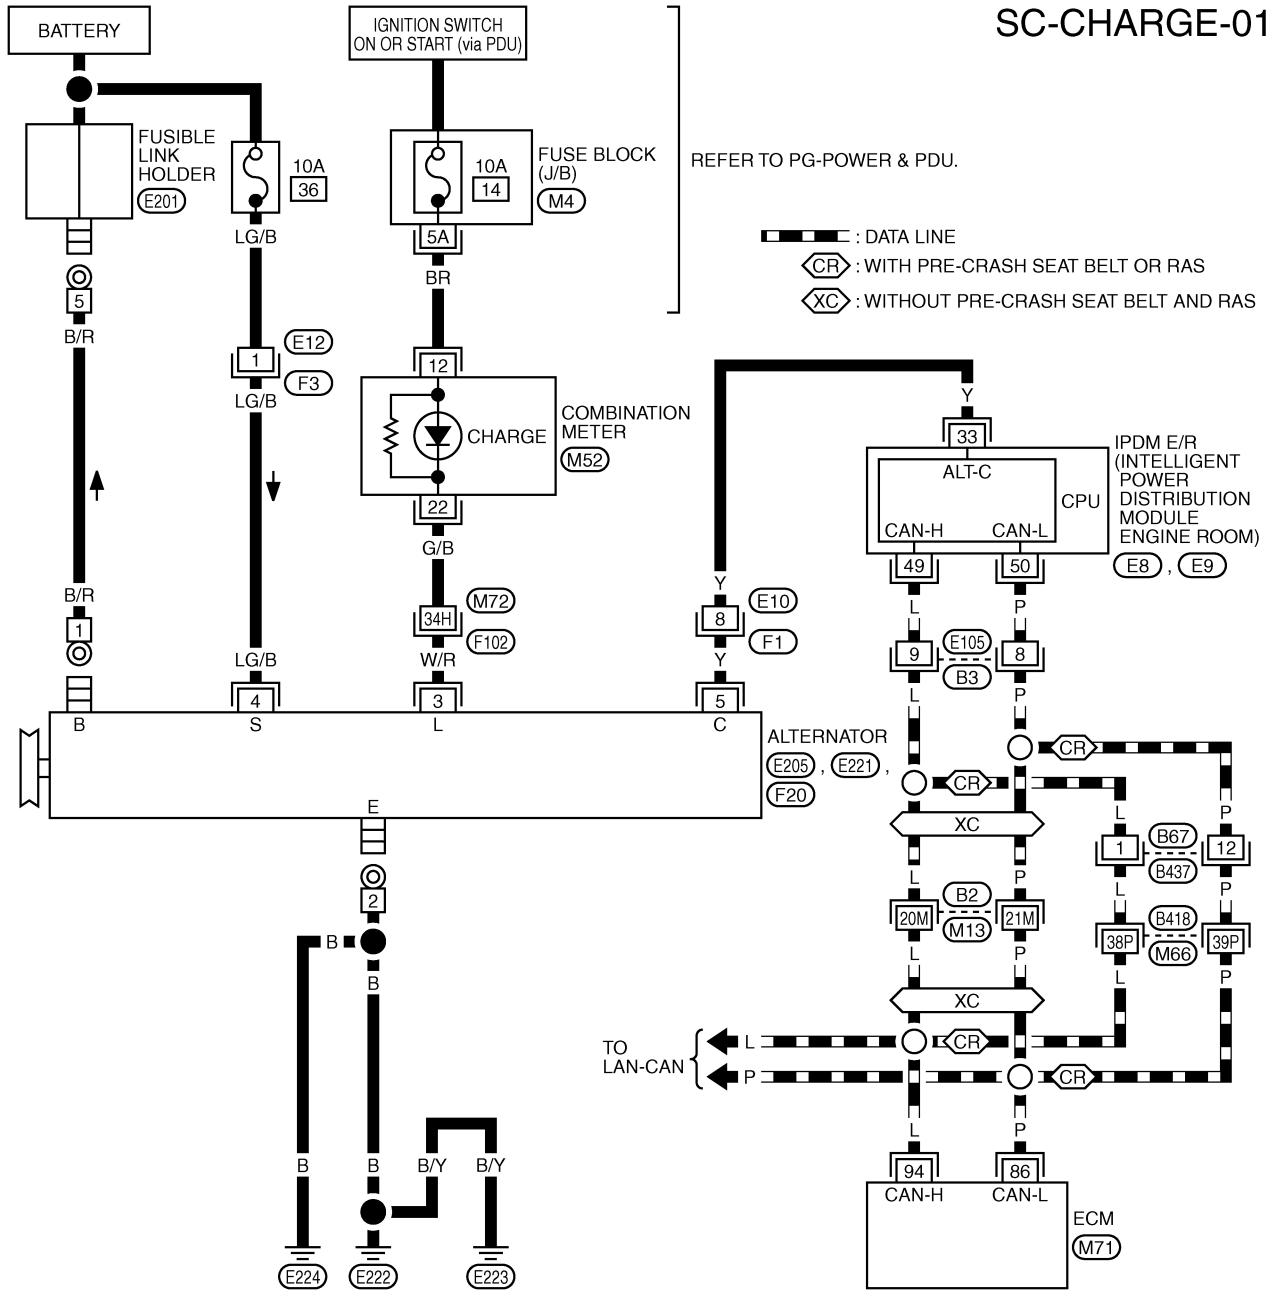

REFER TO THE FOLLOWING.




- (F102, B2, B418) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M71) -ELECTRICAL UNITS

TKWT5247E

CHARGING SYSTEM

VQ35DE ENGINE MODELS (AWD)

SC-CHARGE-02

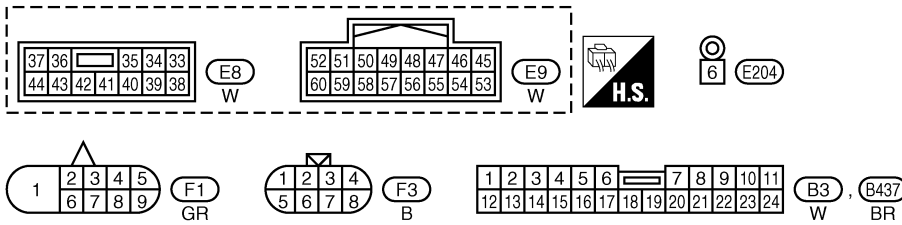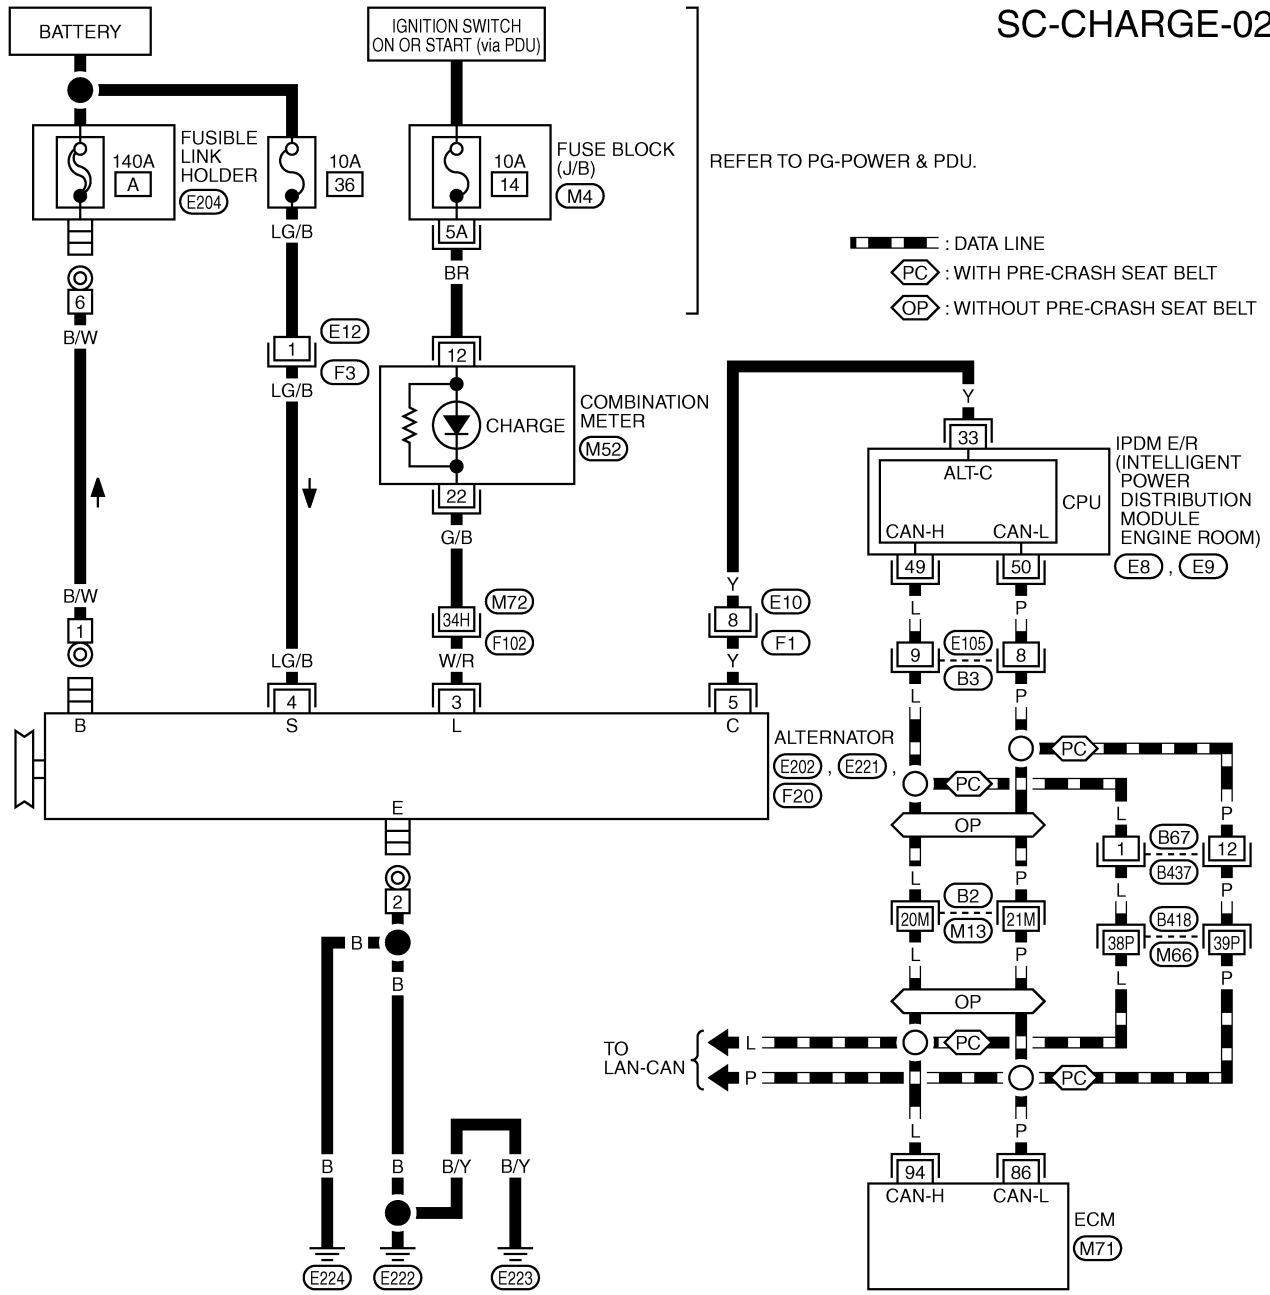





REFER TO THE FOLLOWING.
 (F102, B2, B418) -SUPER MULTIPLE JUNCTION (SMJ)
 (M4) -FUSE BLOCK-JUNCTION BOX (J/B)
 (M71) -ELECTRICAL UNITS

TKWT5248E

CHARGING SYSTEM

VK45DE ENGINE MODELS

SC-CHARGE-03

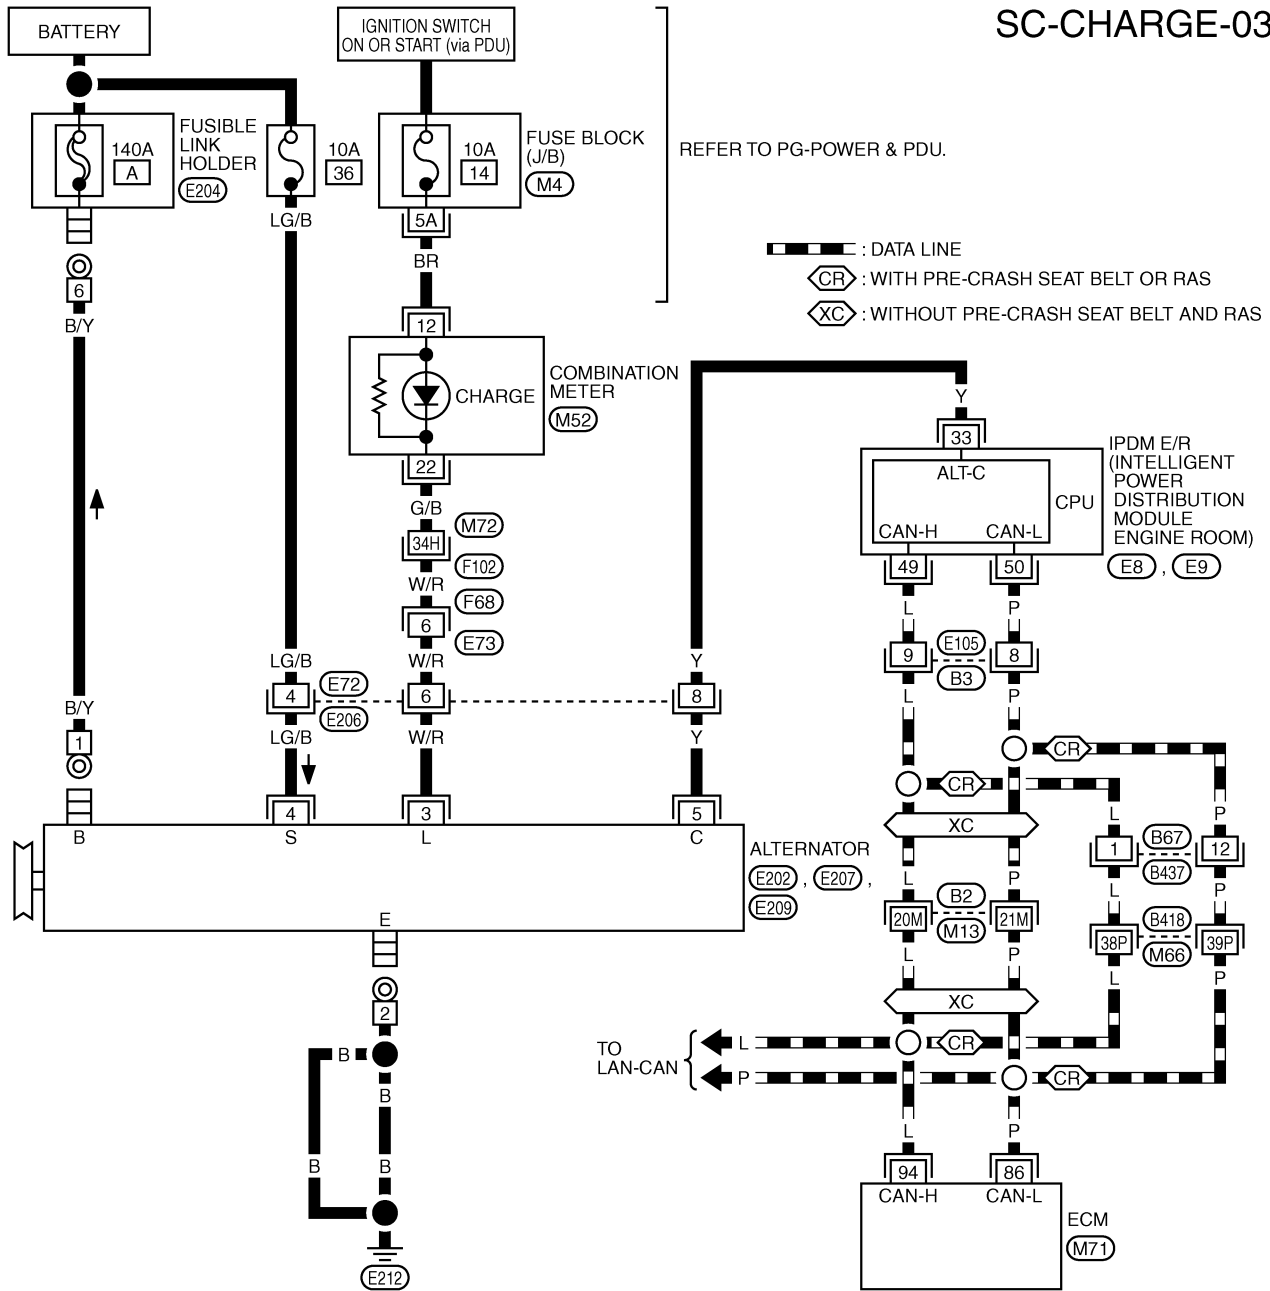

REFER TO THE FOLLOWING.

F102, B2, B418 -SUPER MULTIPLE JUNCTION (SMJ)

M4 -FUSE BLOCK-JUNCTION BOX (J/B)

M71 -ELECTRICAL UNITS


TKWT5249E

CHARGING SYSTEM

Trouble Diagnosis with Starting/Charging System Tester (Charging)

NKS005BZ

For charging system testing, use Starting/Charging System Tester (J-44373). For details and operating instructions, refer to Technical Service Bulletin.

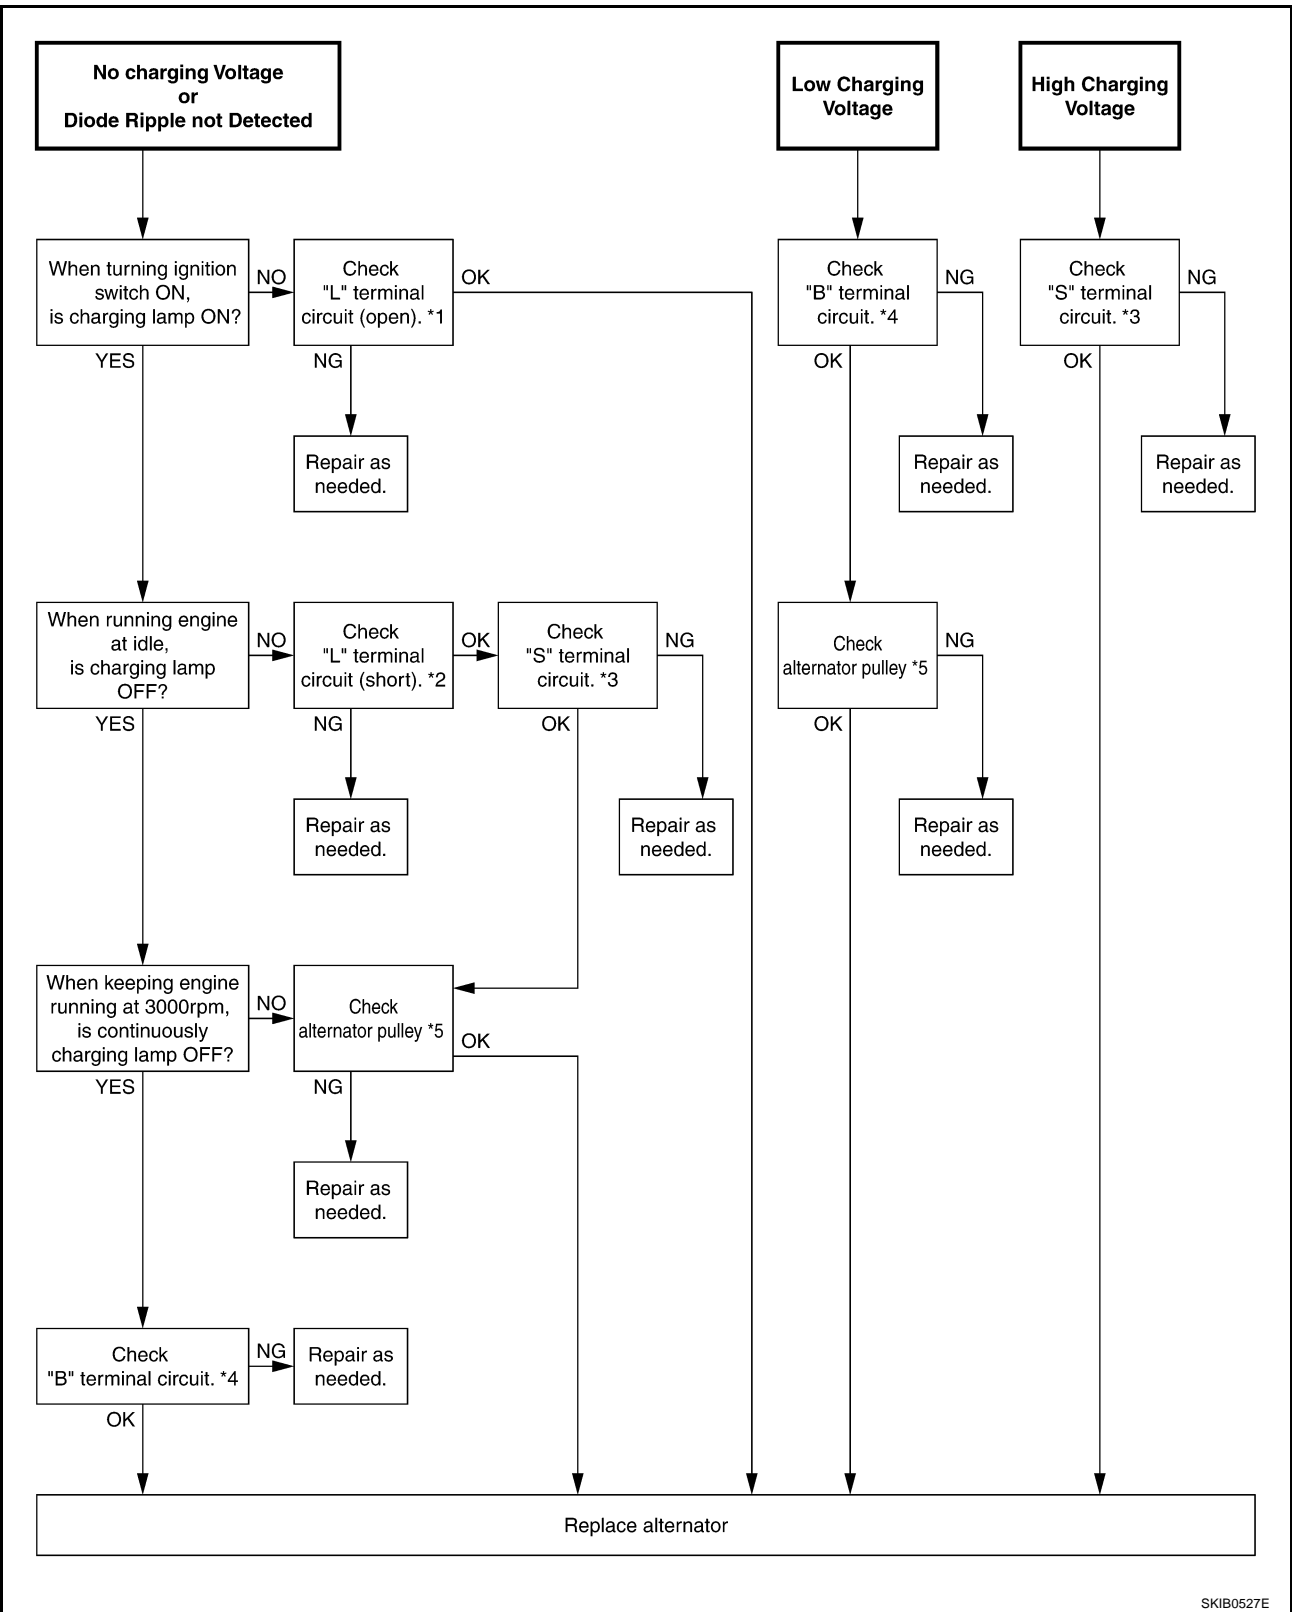

SKIB0527E

A
B
C
D
E
F
G
H
I
J
SC
L
M

CHARGING SYSTEM

- *1 [SC-26, "Check "L" Terminal Circuit \(Open\)"](#) *2 [SC-27, "Check "L" Terminal Circuit \(Short\)"](#) *3 [SC-27, "Check "S" Terminal Circuit"](#)
- *4 [SC-28, "Check "B" Terminal Circuit"](#) *5 [SC-32, "Alternator Pulley Inspection" \(VQ35DE\)](#)
[SC-34, "Alternator Pulley Inspection" \(VK45DE\)](#)

PRELIMINARY INSPECTION

1. CHECK BATTERY TERMINALS CONNECTION

Check if battery terminals is clean and tight.

OK or NG

- OK >> GO TO 2.
NG >> Repair battery terminals connection.

2. CHECK FUSE AND FUSIBLE LINK

Check for blown fuse and fusible link.

Unit	Power source (Power supply terminals)	Fuse and fusible link No.
Alternator	Battery ("S" terminal)	36
Combination meter	Ignition switch ON ("L" terminal)	14

OK or NG

- OK >> GO TO 3.
NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

3. CHECK "E" TERMINAL CONNECTION

Check if "E" terminal (alternator ground harness) is clean and tight.

OK or NG

- OK >> GO TO 4.
NG >> Repair "E" terminal connection.

4. CHECK ALTERNATOR DRIVE BELT TENSION

Check alternator drive belt tension. Refer to the following.

- VQ35DE: [EM-17, "Removal and Installation"](#)
- VK45DE: [EM-174, "Removal and Installation"](#)

OK or NG

- OK >> INSPECTION END
NG >> Repair as needed.

DIAGNOSTIC PROCEDURE 1

Check "L" Terminal Circuit (Open)

1. CHECK "L" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "L" terminal is clean and tight.

OK or NG


- OK >> GO TO 2.
NG >> Repair "L" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

CHARGING SYSTEM

2. CHECK "L" TERMINAL CIRCUIT (OPEN)

1. Disconnect alternator connector.
2. Apply ground to alternator harness connector terminal.
3. Check condition the charge warning lamp with the ignition switch in the ON position.

Alternator connector	Terminal	Ground	Condition	
			Ignition switch position	Charge warning lamp
F20 (VQ35DE) E209 (VK45DE)	3		ON	illuminate

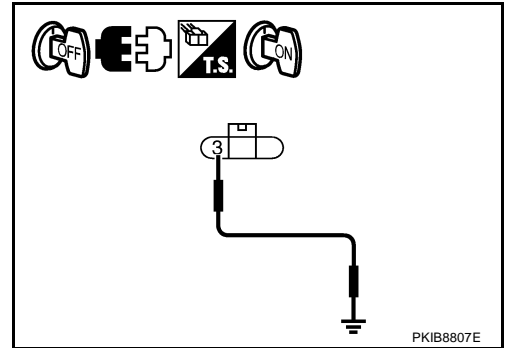

OK or NG

- OK >> Go to [SC-25, "Trouble Diagnosis with Starting/Charging System Tester \(Charging\)"](#) .
- NG >> Check the following.
- Harness for open between combination meter and alternator
 - Harness for open between combination meter and fuse
 - Charge warning lamp (Combination meter)

DIAGNOSTIC PROCEDURE 2

Check "L" Terminal Circuit (Short)

1. CHECK "L" TERMINAL CIRCUIT (SHORT)

1. Turn ignition switch OFF.
2. Disconnect alternator connector.
3. Turn ignition switch ON.

Charge warning lamp should illuminate?

- YES >> Check the following.
- Harness for short between combination meter and alternator
 - Charge warning lamp (Combination meter)
- NO >> Go to [SC-25, "Trouble Diagnosis with Starting/Charging System Tester \(Charging\)"](#) .

DIAGNOSTIC PROCEDURE 3

Check "S" Terminal Circuit

1. CHECK "S" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "S" terminal is clean and tight.

OK or NG


- OK >> GO TO 2.
- NG >> Repair "S" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

CHARGING SYSTEM

2. CHECK "S" TERMINAL CIRCUIT

1. Disconnect alternator connector.
2. Check voltage between alternator harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Alternator connector	Terminal		
F20 (VQ35DE) E209 (VK45DE)	4	Ground	Battery voltage

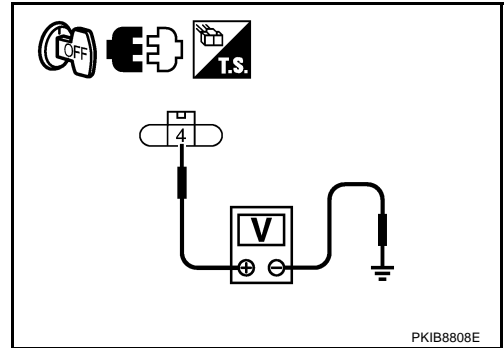

OK or NG

- OK >> Go to [SC-25, "Trouble Diagnosis with Starting/Charging System Tester \(Charging\)"](#).
- NG >> Check harness for open between alternator and fuse.

DIAGNOSTIC PROCEDURE 4

Check "B" Terminal Circuit

1. CHECK "B" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "B" terminal is clean and tight.


OK or NG

- OK >> GO TO 2.
- NG >> Repair "B" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2. CHECK "B" TERMINAL CIRCUIT

Check voltage between alternator "B" terminal and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
Alternator "B" terminal	Terminal		
E205 [VQ35DE (2WD)] E202 [VQ35DE (AWD)/VK45DE]	1	Ground	Battery voltage

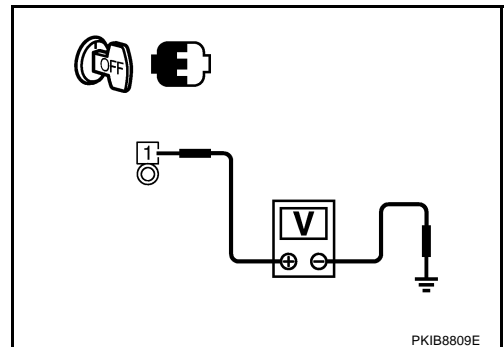

OK or NG


- OK >> GO TO 3.
- NG >> Check harness for open between alternator and fusible link.

CHARGING SYSTEM

3. CHECK "B" TERMINAL CONNECTION (VOLTAGE DROP TEST)

1. Start engine, then engine running at idle and warm.
2. Check voltage between battery positive terminal and alternator "B" terminal.

(+) Terminal	Terminals (-)		Voltage (Approx.)
	Alternator "B" terminal	Terminal	
Battery positive terminal	E205 [VQ35DE (2WD)] E202 [VQ35DE (AWD)/VK45DE]	1	Less than 0.2 V

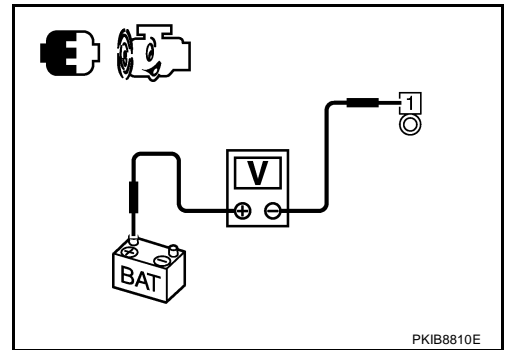

OK or NG

- OK >> Go to [SC-25, "Trouble Diagnosis with Starting/Charging System Tester \(Charging\)"](#) .
- NG >> Check harness between battery and alternator for poor continuity.

Power Generation Voltage Variable Control System Operation Inspection

NKS003NQ

CAUTION:

- For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Never connect the electrical component or the ground wire directly to the battery terminal.
- When performing this inspection, always use the charged battery that completed the battery inspection. (When the charging rate of the battery is low, the response speed of the voltage change will become slow. This is a cause of an incorrect inspection.)

INSPECTION PROCEDURE

1. CHECK ECM (CONSULT-II)

Perform ECM self-diagnosis with CONSULT-II. Refer to the following.

- VQ35DE: [EC-123, "CONSULT-II Function \(ENGINE\)"](#)
- VK45DE: [EC-826, "CONSULT-II Function \(ENGINE\)"](#)

Self-diagnostic results content

No malfunction detected>> GO TO 2.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

A
B
C
D
E
F
G
H
I
J
L
M

SC

CHARGING SYSTEM

2. CHECK OPERATION OF POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

1. Connect CONSULT-II and start the engine.
2. The selector lever is in "P" or "N" position and all of the electric loads and A/C, etc. are turned OFF.
3. Select "ALTERNATOR DUTY" at "ACTIVE TEST" of "ENGINE", and then check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 40.0 %.

"BATTERY VOLT"

2 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 40.0 % : 12 - 13.6 V

Example)

ACTIVE TEST	
ALTERNATOR DUTY	40.0 %
MONITOR	
BATTERY VOLT	12.3V
BAT CUR SEN	2190mV
Qu	UP DOWN Qd
MODE	BACK LIGHT COPY

PKIB4503E

4. Check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 80.0%.

"BATTERY VOLT"

20 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 80.0 % : +0.5 V or more against the value of "BATTERY VOLT" monitor when DUTY value is 40.0 %

Example)

ACTIVE TEST	
ALTERNATOR DUTY	80.0 %
MONITOR	
BATTERY VOLT	14.5V
BAT CUR SEN	2780mV
Qu	UP DOWN Qd
MODE	BACK LIGHT COPY

PKIB4504E

OK or NG

- OK >> INSPECTION END
 NG >> GO TO 3. (The charging condition of the battery should be normal.)

3. CHECK IPDM E/R (CONSULT-II)

Perform IPDM E/R self-diagnosis with CONSULT-II. Refer to [PG-20, "CONSULT-II Function \(IPDM E/R\)"](#).
Self-diagnostic results content

- No malfunction detected>> GO TO 4.
 Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

4. CHECK HARNESS BETWEEN ALTERNATOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect alternator connector and IPDM E/R connector.
3. Check continuity between alternator harness connector (A) and IPDM E/R harness connector (B).


A		B		Continuity
Connector	Terminal	Connector	Terminal	
F20 (VQ35DE) E209 (VK45DE)	5	E8	33	Yes

4. Check continuity between alternator harness connector (A) and ground.

A		Ground	Condition
Connector	Terminal		
F20 (VQ35DE) E209 (VK45DE)	5		No

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector between IPDM E/R and alternator.

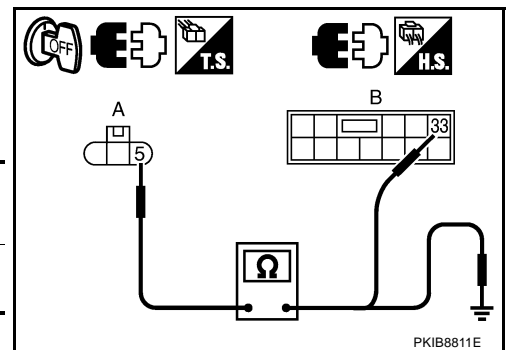


CHARGING SYSTEM

Removal and Installation VQ35DE ENGINE MODELS

NKS005C0


A
B
C
D
E
F
G
H
I
J
SC
L
M

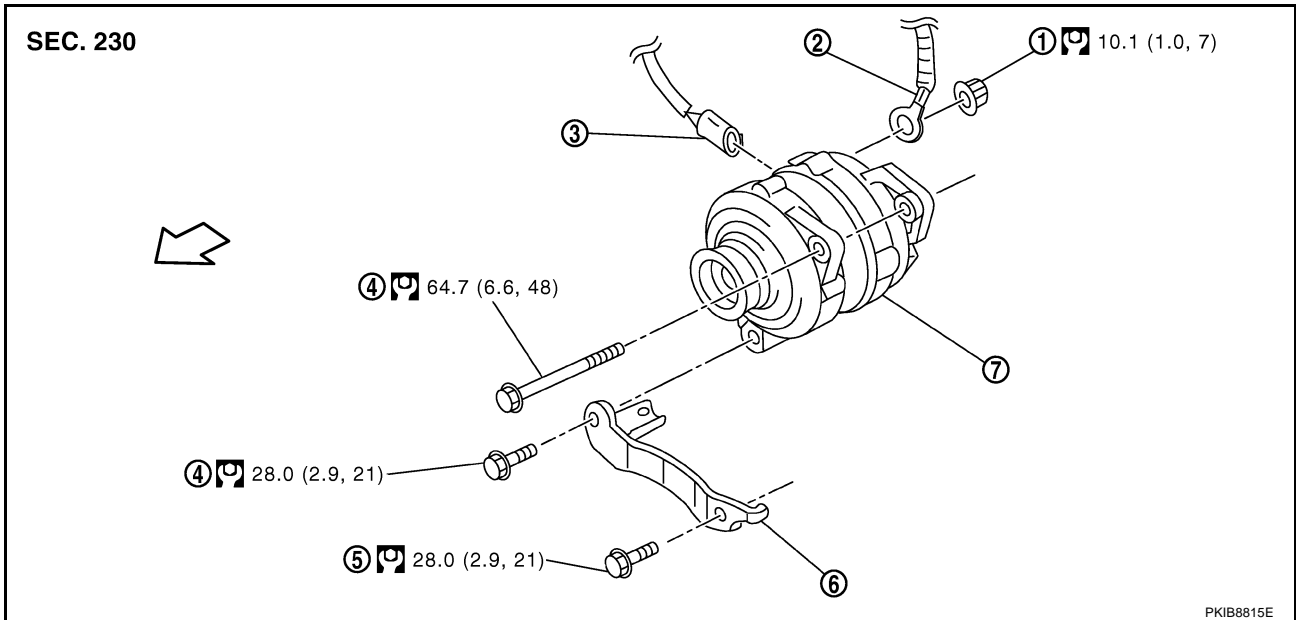


- | | | |
|-----------------------------|----------------------------------|-------------------------|
| 1. "B" terminal nut | 2. "B" terminal harness | 3. Alternator connector |
| 4. Alternator mounting bolt | 5. Alternator stay mounting bolt | 6. Alternator stay |
| 7. Alternator | : N·m (kg-m, ft-lb) | : Engine front |

Removal (2WD Models)

1. Disconnect the battery cable from the negative terminal.
2. Remove engine front undercover, using power tools.
3. Remove alternator and power steering oil pump belt. Refer to [EM-16, "DRIVE BELTS"](#).
4. Disconnect alternator connector (1).
5. Remove "B" terminal nut (2).
6. Remove the harness bracket bolts (A).

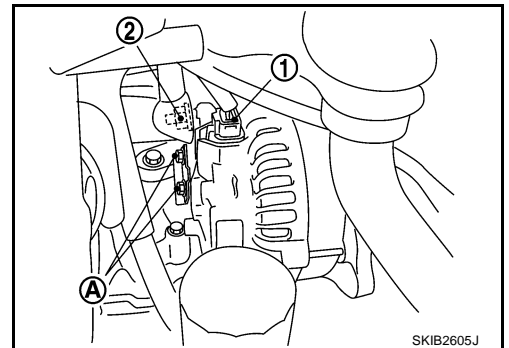


7. Remove oil pressure switch harness clip (A) from alternator stay.
8. Disconnect oil pressure switch connector (1).
9. Remove alternator mounting bolt (B) and alternator stay mounting bolt (C) using power tools, then remove alternator stay (2).
10. Remove alternator mounting bolt (D), using power tools.
11. Remove alternator assembly downward from the vehicle.

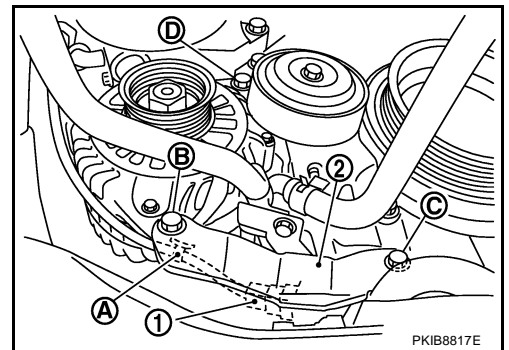


CHARGING SYSTEM

Removal (AWD Models)


1. Disconnect the battery cable from the negative terminal.
2. Remove power steering oil reservoir tank from the bracket.
3. Remove the clips (A) and the hose clamp (B) from the harness bracket (1).

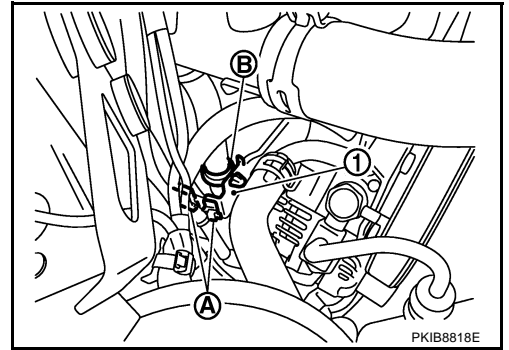

4. Remove engine front undercover, using power tools.
5. Remove alternator and power steering oil pump belt. Refer to [EM-16, "DRIVE BELTS"](#).
6. Remove alternator mounting bolt (A) and alternator stay mounting bolt (B) using power tools, then remove alternator stay (1).
7. Remove alternator mounting bolt (C), using power tools.

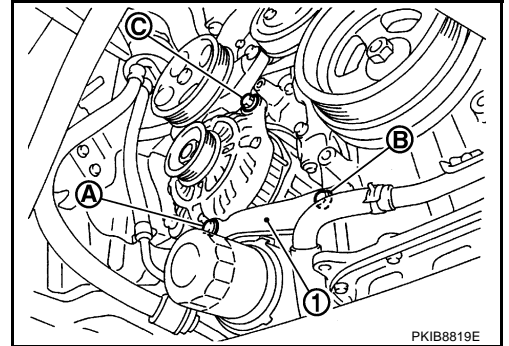

8. Pull and turn alternator, and then remove the harness bracket bolts (A).
9. Disconnect alternator connector (1).
10. Remove "B" terminal nut (2).
11. Remove alternator assembly downward from the vehicle.

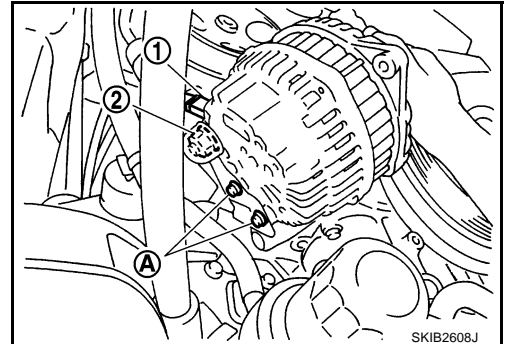

Alternator Pulley Inspection

Perform the following.

- Make sure that alternator pulley does not rattle.
- Make sure that alternator pulley nut is tight.

Alternator pulley nut:

: 118 N·m (12.0 kg·m, 87 ft·lb)

Installation

Installation is the reverse order of removal.


CAUTION:

Be sure to tighten "B" terminal nut carefully.

- Install alternator, and check tension of belt. Refer to [EM-16, "Checking Drive Belts"](#).
- For this model, the power generation voltage variable control system that controls the power generation voltage of the alternator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the alternator, and then make sure that the system operates normally. Refer to [SC-29, "Power Generation Voltage Variable Control System Operation Inspection"](#).

CHARGING SYSTEM

VK45DE ENGINE MODELS

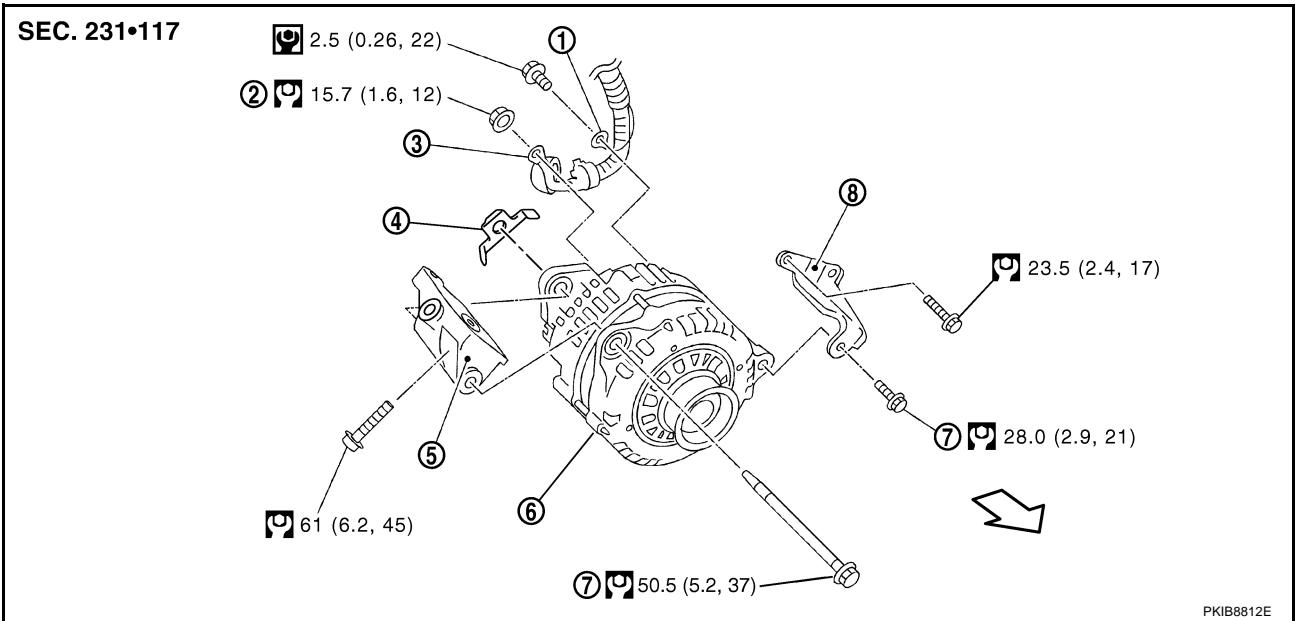

1. Alternator ground harness
4. Alternator nut
7. Alternator mounting bolt

2. "B" terminal nut
5. Alternator bracket
8. Alternator stay

3. "B" terminal harness
6. Alternator


: N·m (kg-m, in-lb)

: N·m (kg-m, ft-lb)


: Engine front

Removal

1. Disconnect the battery cable from the negative terminal.
2. Remove engine front undercover, using power tools.
3. Remove "B" terminal nut (1).
4. Disconnect alternator connector (2).
5. Remove alternator ground harness mounting bolt (3).
6. Remove the harness bracket bolts (A).

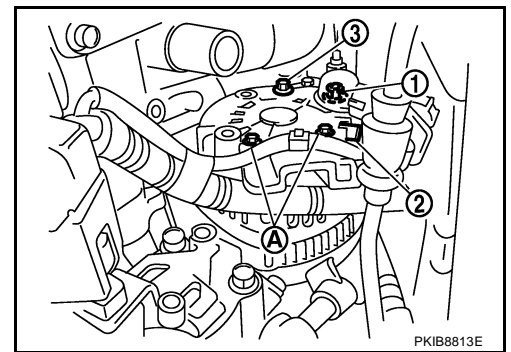

7. Remove air intake duct. Refer to [EM-177, "AIR CLEANER AND AIR DUCT"](#) .
8. Remove alternator, water pump and A/C compressor belt. Refer to [EM-174, "DRIVE BELTS"](#) .
9. Remove power steering oil reservoir tank (1) from the bracket, engine coolant reservoir tank (2) and vacuum tank (3).
10. Remove the harness clips (A).
11. Remove alternator mounting bolts (B), using power tools.
12. Remove alternator assembly upward.

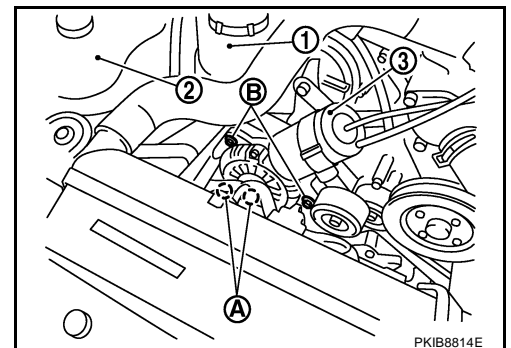

CHARGING SYSTEM

Alternator Pulley Inspection

Perform the following.

- Make sure that alternator pulley does not rattle.
- Make sure that alternator pulley nut is tight.

Alternator pulley nut:

: 118 N·m (12.0 kg-m, 87 ft-lb)

Installation

Installation is the reverse order of removal.

CAUTION:

Be sure to tighten “B” terminal nut carefully.


- Install alternator, and check tension of belt. Refer to [EM-174, "Checking Drive Belts"](#) .
- For this model, the power generation voltage variable control system that controls the power generation voltage of the alternator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the alternator, and then make sure that the system operates normally. Refer to [SC-29, "Power Generation Voltage Variable Control System Operation Inspection"](#) .

CHARGING SYSTEM

Disassembly and Assembly VQ35DE ENGINE MODELS

NKS005C1

A
B
C
D
E
F
G
H
I
J
SC
L
M

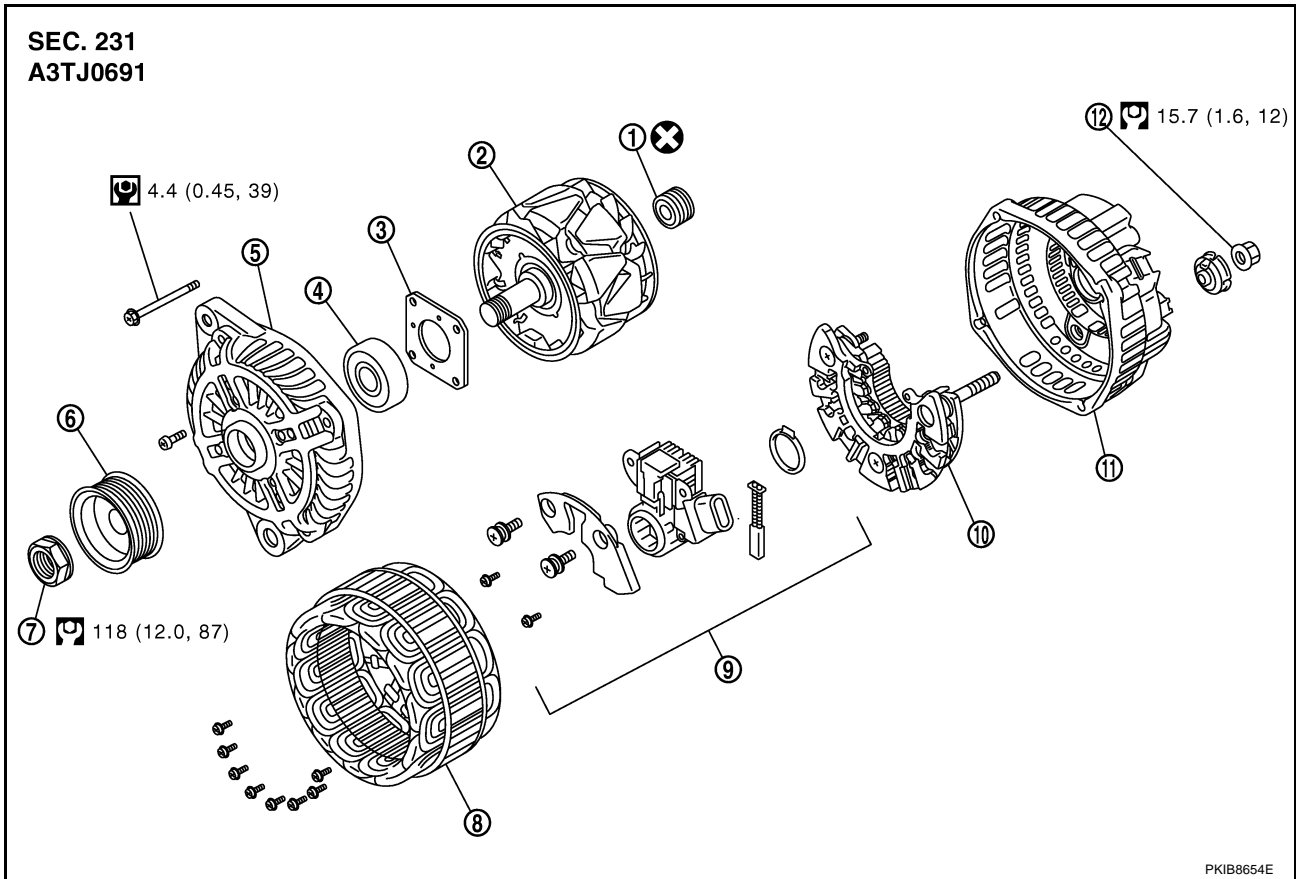


PKIB8654E

- | | | |
|---------------------|---------------------------|---|
| 1. Rear bearing | 2. Rotor assembly | 3. Retainer |
| 4. Front bearing | 5. Front bracket assembly | 6. Pulley |
| 7. Pulley nut | 8. Stator assembly | 9. IC voltage regulator assembly |
| 10. Diode assembly | 11. Rear bracket assembly | 12. "B" terminal nut |
| : N·m (kg·m, in·lb) | : N·m (kg·m, ft·lb) | : Always replace after every disassembly. |




CHARGING SYSTEM

VK45DE ENGINE MODELS

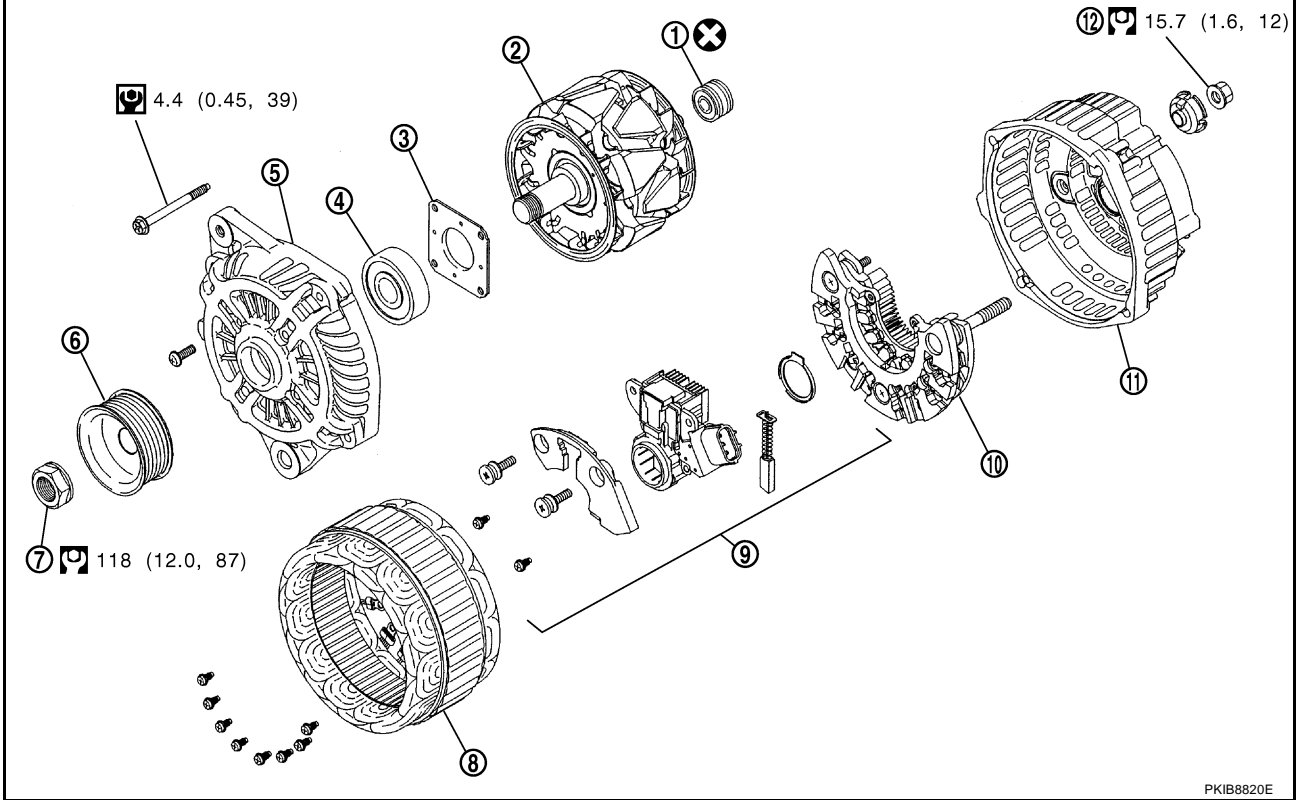SEC. 231
A3TJ0591



PKIB8820E

- | | | |
|--------------------|---------------------------|----------------------------------|
| 1. Rear bearing | 2. Rotor assembly | 3. Retainer |
| 4. Front bearing | 5. Front bracket assembly | 6. Pulley |
| 7. Pulley nut | 8. Stator assembly | 9. IC voltage regulator assembly |
| 10. Diode assembly | 11. Rear bracket assembly | 12. "B" terminal nut |
-  : N·m (kg·m, in·lb)
  : N·m (kg·m, ft·lb)
  : Always replace after every disassembly.

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

PPF:00030

Battery

NKS003NT

Type		110D26L
20 hour rate capacity	[V - Ah]	12 - 75
Cold cranking current (For reference value)	[A]	720

Starter

NKS003NU

Applied model		VK45DE	VQ35DE	VQ35DE
		2WD		AWD
Type		M2T85771	S114-880	S114-881
		MITSUBISHI make	HITACHI make	
		Reduction gear type		
System voltage	[V]	12		
No-load	Terminal voltage	[V] 11		
	Current	[A] Less than 145	Less than 90	
	Revolution	[rpm] More than 3,300	More than 2,880	
Minimum diameter of commutator	[mm (in)]	31.4 (1.236)	28.0 (1.102)	
Minimum length of brush	[mm (in)]	11.0 (0.433)	10.5 (0.413)	
Brush spring tension	[N (kg, lb)]	26.7 - 36.1 (2.72 - 3.68, 6.80 - 8.12)	16.2 (1.65, 3.6)	
Clearance between bearing metal and armature shaft	[mm (in)]	Less than 0.2 (0.008)		
Clearance between pinion front edge and pinion stopper	[mm (in)]	0.5 - 2.0 (0.020 - 0.079)	0.3 - 2.5 (0.012 - 0.098)	

Alternator

NKS003NV

Applied model		VK45DE	VQ35DE
		A3TJ0591	A3TJ0691
Type		MITSUBISHI make	
Nominal rating	[V - A]	12 - 150	
Ground polarity		Negative	
Minimum revolution under no-load (When 13.5 V is applied)	[rpm]	Less than 1,300	
Hot output current (When 13.5 V is applied)	[A/rpm]	More than 35/1,300 More than 105/2,500 More than 136/5,000	
Regulated output voltage	[V]	14.1 - 14.7 *	
Minimum length of brush	[mm (in)]	More than 5.00 (0.197)	
Brush spring pressure	[N (g, oz)]	4.1 - 5.3 (418 - 540, 14.8 - 19.1)	
Slip ring minimum outer diameter	[mm (in)]	More than 22.1 (0.870)	
Rotor (Field coil) resistance	[Ω]	1.6 - 2.0	

*: Adjustment range of power generation voltage variable control is 11.4 - 15.6 V.

SERVICE DATA AND SPECIFICATIONS (SDS)
