

SECTION **BL**

BODY, LOCK & SECURITY SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

SERVICE INFORMATION 4	Component Parts and Harness Connector Location24
DTC INDEX 4	System Description24
INTELLIGENT KEY UNIT U1000 - U10104	CAN Communication System Description26
INTELLIGENT KEY UNIT B20134	CAN Communication Unit27
INTELLIGENT KEY UNIT B2551 - B25634	Schematic27
INTELLIGENT KEY UNIT B25905	Wiring Diagram - D/LOCK -28
ECM P1610 - P16145	Terminal and Reference Value for BCM32
BCM B2192 - B21945	Work Flow32
PRECAUTIONS 6	CONSULT-III Function (BCM-DOOR LOCK)32
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"6	Trouble Diagnosis Chart by Symptom33
Precaution for Procedure without Cowl Top Cover.....6	Power Supply and Ground Circuit Inspection for BCM34
Precaution Necessary for Steering Wheel Rotation after Battery Disconnect6	Check Door Lock and Unlock Switch35
Precaution for Work7	Check Door Lock Actuator/Driver Side36
PREPARATION 8	Check Door Lock Actuator/Passenger Side37
Special Service Tool8	Check Door Lock Actuator/Rear LH38
Commercial Service Tool8	Check Door Lock Actuator/Rear RH39
SQUEAK AND RATTLE TROUBLE DIAGNOSIS 9	Check Fuel Lid Opener Actuator39
Work Flow9	Door Key Cylinder Switch Check40
Inspection Procedure11	INTELLIGENT KEY SYSTEM42
Diagnostic Worksheet13	Component Parts and Harness Connector Location42
HOOD15	System Description44
Fitting Adjustment15	CAN Communication System Description55
Removal and Installation of Hood Assembly17	CAN Communication Unit55
Removal and Installation of Hood Lock Control18	Schematic56
Hood Lock Control Inspection19	Wiring Diagram - I/KEY-58
RADIATOR CORE SUPPORT21	Terminal and Reference Value for Intelligent Key Unit69
Removal and Installation21	Terminal and Reference Value for BCM72
FRONT FENDER23	Terminal and Reference Value for IPDM E/R72
Removal and Installation23	Trouble Diagnosis Procedure72
POWER DOOR LOCK SYSTEM24	CONSULT-III Functions (INTELLIGENT KEY)74
	CONSULT-III Functions (BCM-INTELLIGENT KEY)79
	CONSULT-III Functions (BCM-PANIC ALARM)79
	Trouble Diagnosis Symptom Chart80
	Check CAN Communication System85
	Check Power Supply and Ground Circuit86



Check Key Slot	87	Trouble Diagnosis Symptom Chart 3	164
Check Door Switch	88	Check CAN Communication System	164
Check Trunk Room Lamp Switch	90	Check Push-Button Ignition Switch	165
Check Door Request Switch	92	Check Inside Key Antenna	166
Check Trunk Opener Request Switch	94	Check Remote Keyless Entry Receiver	168
Check Unlock Sensor	95	Check Key Switch Built in Key Slot	169
Check Intelligent Key Warning Buzzer	97	Check NATS Antenna Amp. Built in Key Slot	170
Check Outside Key Antenna (Driver Side and Passenger Side)	98	DOOR	172
Check Outside Key Antenna (Trunk Room)	100	Fitting Adjustment	172
Check Inside Key Antenna	101	Removal and Installation of Front Door	173
Check Transmission Range Switch	103	Removal and Installation of Rear Door	174
Check Ignition Switch Position	105	Door Weatherstrip	175
Check Remote Keyless Entry Receiver	106	FRONT DOOR LOCK	177
Check Trunk Lid Opener Cancel Switch	109	Component Structure	177
Check Key Slot Illumination	111	Removal and Installation	177
Check Horn Function	112	REAR DOOR LOCK	181
Check Combination Meter Display Function	112	Component Structure	181
Check Warning Chime Function	113	Removal and Installation	181
Removal and Installation of Intelligent Key Unit	113	TRUNK LID	184
Intelligent Key Battery Replacement	113	Fitting Adjustment	184
INTELLIGENT KEY SYSTEM/ENGINE		Removal and Installation of Trunk Lid Assembly	185
START FUNCTION	115	Removal and Installation of Trunk Lid Stay	186
Component Parts and Harness Connector Loca- tion	115	Removal and Installation of Trunk Lid Lock	186
System Description	116	Removal and Installation of Trunk Lid Striker	187
Operation Description	117	Removal and Installation of Trunk Lid Weather- strip	188
CAN Communication System Description	119	TRUNK LID OPENER	189
CAN Communication Unit	119	Component Parts and Harness Connector Loca- tion	189
Schematic	120	System Description	189
Wiring Diagram - ENG/ST -	122	Wiring Diagram - TLID -	191
Terminal and Reference Value for Intelligent Key Unit	131	Terminal and Reference Value for BCM	193
Terminal and Reference Value for Steering Lock Unit	135	CONSULT-III Function (BCM-TRUNK)	193
Terminal and Reference Value for BCM	136	Trouble Diagnosis	193
Terminal and Reference Value for IPDM E/R	136	VEHICLE SECURITY (THEFT WARNING)	
Terminal and Reference Value for PDU	137	SYSTEM	197
Work Flow	138	Component Parts and Harness Connector Loca- tion	197
CONSULT-III Functions (INTELLIGENT KEY)	139	System Description	198
CONSULT-III Functions (BCM-INTELLIGENT KEY)	144	CAN Communication System Description	201
B2013 STRG COMM 1	144	CAN Communication Unit	201
B2551 STEERING LOCK UNIT	147	Schematic	202
B2552 INTELLIGENT KEY	150	Wiring Diagram - VEHSEC -	203
B2553 IGN POWER CIRCUIT	150	Terminal and Reference Value for BCM	209
B2554 ACC POWER CIRCUIT	151	Terminal and Reference Value for IPDM E/R	209
B2555 STOP LAMP CIRCUIT	153	CONSULT-III Function (BCM-THEFT ALM)	209
B2556 ENG START SW	154	Trouble Diagnosis Work Flow	211
B2557 VEHICLE SPEED	155	Preliminary Check	211
B2558 SHIFT POSITION	157	Trouble Diagnosis Symptom Chart	212
B2559 PDU	159	Diagnosis Procedure 1	212
B2560 START POW SUP CIRC	160	Diagnosis Procedure 2	217
B2562 LOW VOLTAGE	161	Diagnosis Procedure 3	218
B2563 HI VOLTAGE	162	Diagnosis Procedure 4	218
B2590 DISCORD BCM-I-KEY	163	Diagnosis Procedure 5	219
Trouble Diagnosis Symptom Chart 1	163		
Trouble Diagnosis Symptom Chart 2	164		

Diagnosis Procedure 6	219	Check Security Indicator Harness	243	
Diagnosis Procedure 7	219	B2193 CHAIN OF BCM-ECM	244	A
IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)	220	B2192 ID DISCORD, BCM-ECM	245	
Component Parts and Harness Connector Location	220	B2590 DISCORD BCM-I-KEY	245	B
System Description	221	P1610 LOCK MODE	246	
Operation Description	222	P1614 CHAIN OF IMMU-KEY	246	B
ECM Re-Communicating Function	224	Removal and Installation of Key Slot	248	
Schematic	225	INTEGRATED HOMELINK TRANSMITTER ..	249	C
Wiring Diagram - NATS -	227	Wiring Diagram - TRNSCV -	249	
Terminal and Reference Value for Intelligent Key Unit	235	Trouble Diagnosis	249	
Terminal and Reference Value for Steering Lock Unit	237	BODY REPAIR	252	D
Terminal and Reference Value for BCM	238	Body Exterior Paint Color	252	
Terminal and Reference Value for IPDM E/R	238	Body Component Parts	253	E
Terminal and Reference Value for PDU	239	Corrosion Protection	256	
CONSULT-III Functions (ECM)	240	Body Sealing	258	E
CONSULT-III Functions (BCM-IMMU)	240	Body Construction	262	
CONSULT-III Functions (INTELLIGENT KEY)	241	Body Alignment	262	F
Work Flow	241	Handling Precaution for Plastics	273	
Symptom Chart for Security Indicator	243	Precaution in Repairing High Strength Steel	276	F
		Foam Repair	279	G
		Replacement Operation	280	

BL

J

K

L

M

N

O

P

DTC INDEX

< SERVICE INFORMATION >

SERVICE INFORMATION

DTC INDEX

INTELLIGENT KEY UNIT U1000 - U1010

INFOID:000000005349320

CONSULT display	Description	Action to take/Reference page
U1000: CAN COMM CIRCUIT	Malfunction is detected in CAN communication.	BL-85
U1010: CONTROL UNIT	Malfunction is detected in CAN communication caused by Intelligent Key unit internal malfunction.	BL-85

INTELLIGENT KEY UNIT B2013

INFOID:000000005349321

CONSULT display	Description	Action to take/Reference page
B2013: STRG COMM 1	Malfunction is detected in communication of Intelligent Key unit and steering lock unit	BL-144

INTELLIGENT KEY UNIT B2551 - B2563

INFOID:000000005349322

CONSULT display	Description	Action to take/Reference page
B2551: STEERING LOCK UNIT	Even if the communication with steering lock unit is normally performed, the steering lock is malfunctioning.	BL-147
B2552: INTELLIGENT KEY	Internal malfunction is detected in Intelligent Key unit.	BL-150
B2553: IGN POWER CIRCUIT	It continues for 2 seconds or more that ON power supply input to Intelligent Key unit is excessively low when the power supply position is in ON position.	BL-150
B2554: ACC POWER CIRCUIT	It continues for 2 seconds or more that ON power supply input to Intelligent Key unit is excessively low when the power supply position is in Acc or ON position.	BL-151
B2555: STOP LAMP CIRCUIT	5V or less is detected at both the stop lamp switch signal input circuit that is input to Intelligent Key unit and the monitor input before stop lamp switch.	BL-153
B2556: ENG START SW	Condition that push-button ignition switch is pushed is detected continuously for 100 seconds or more.	BL-154
B2557: VEHICLE SPEED	Some differences occur on one or more vehicle speed input of Intelligent Key unit.	BL-155
B2558: SHIFT POSITION	<ul style="list-style-type: none"> • There is a difference between the shift position input via CAN communication and the P position input by detente switch. • Vehicle speed (5 km/h or more) is detected continuously for 10 seconds or more even if the shift position is detected in P position when the power supply position is in ON position. 	BL-157
B2559: PDU	Internal malfunction is detected in PDU.	BL-159
B2560: START POW SUP CIRC	Though the engine start operation is not performed, starter relay in IPDM E/R is on.	BL-160
B2562: LOW VOLTAGE	Battery power supply input to Intelligent Key unit (8.8V or less) is detected continuously for 1.5 seconds or more.	BL-161
B2563: HI VOLTAGE	Battery power supply input to Intelligent Key unit (18V or more) is detected continuously for 90 seconds or more.	BL-162

DTC INDEX

< SERVICE INFORMATION >

INTELLIGENT KEY UNIT B2590

INFOID:000000005349323

CONSULT display	Description	Action to take/Reference page
B2590: NATS MALFUNCTION	Malfunction is detected in immobilizer system.	BL-241

ECM P1610 - P1614

INFOID:000000005349324

CONSULT display	Description	Action to take/Reference page
P1610: LOCK MODE	When the starting operation is carried out 5 or more times consecutively under the following conditions, IVIS(NATS) will shift the mode to prevent the engine start. <ul style="list-style-type: none"> • unregistered ignition key is used (without intelligent key system) • BCM or ECM malfunctioning 	BL-246
P1611: ID DISCORD, IMM-ECM	P1611 has the same meaning as B2192.	BL-245
P1612: CHAIN OF ECM-IMMU	P1612 has the same meaning as B2193.	BL-244
P1614: CHAIN OF IMMU-KEY	BCM cannot receive the key ID signal.	BL-246

BCM B2192 - B2194

INFOID:000000005349325

CONSULT display	Description	Action to take/Reference page
B2192: ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG. The registration is necessary.	BL-245
B2193: CHAIN OF BCM-ECM	Inactive communication between BCM and ECM.	BL-244
B2194: DISCORD BCM-I-KEY	B2194 has the same meaning as B2590.	BL-245

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BL

PRECAUTIONS

< SERVICE INFORMATION >

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005349326

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SUPPLEMENTAL RESTRAINT SYSTEM" and "SEAT BELTS" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SUPPLEMENTAL RESTRAINT SYSTEM".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000005349327

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

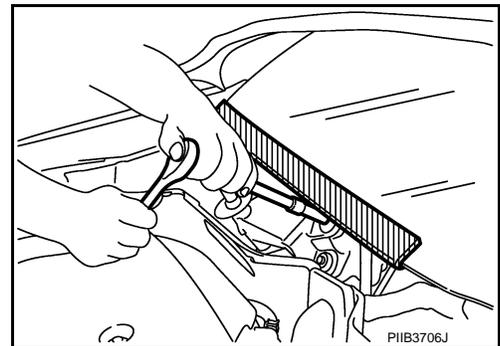

Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000005349328

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

PRECAUTIONS

< SERVICE INFORMATION >

OPERATION PROCEDURE

1. Connect both battery cables. A
NOTE:
Supply power using jumper cables if battery is discharged.
2. Turn the push-button ignition switch to ACC position. B
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned. C
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.) D
6. Perform self-diagnosis check of all control units using CONSULT-III. E

Precaution for Work

INFOID:000000005349329

- After removing and installing the opening/closing parts, be sure to carry out fitting adjustments to check their operational. F
- Check the lubrication level, damage, and wear of each part. If necessary, grease or replace it. G

H

BL

J

K

L

M

N

O

P

PREPARATION


< SERVICE INFORMATION >

PREPARATION

Special Service Tool



INFOID:000000005349330

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

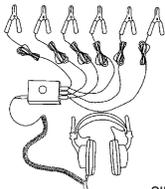Tool number (Kent-Moore No.) Tool name	Description
<p>(J-39570) Chassis ear</p>  <p style="text-align: center;">SIIA0993E</p>	<p>Locating the noise</p>
<p>(J-43980) NISSAN Squeak and Rattle Kit</p>  <p style="text-align: center;">SIIA0994E</p>	<p>Repairing the cause of noise</p>

Commercial Service Tool

INFOID:000000005349331

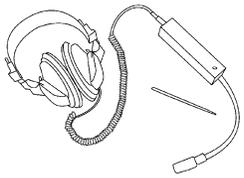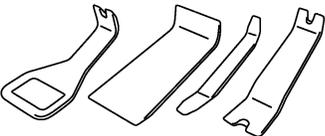Tool name	Description
<p>Engine ear</p>  <p style="text-align: center;">SIIA0995E</p>	<p>Locating the noise</p>
<p>Remover tool</p>  <p style="text-align: center;">PIIB7923J</p>	<p>Remove the clips, pawls, and metal clips</p>
<p>Power tool</p>  <p style="text-align: center;">PIIB1407E</p>	


SQUEAK AND RATTLE TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

SQUEAK AND RATTLE TROUBLE DIAGNOSIS

Work Flow

INFOID:000000005349332

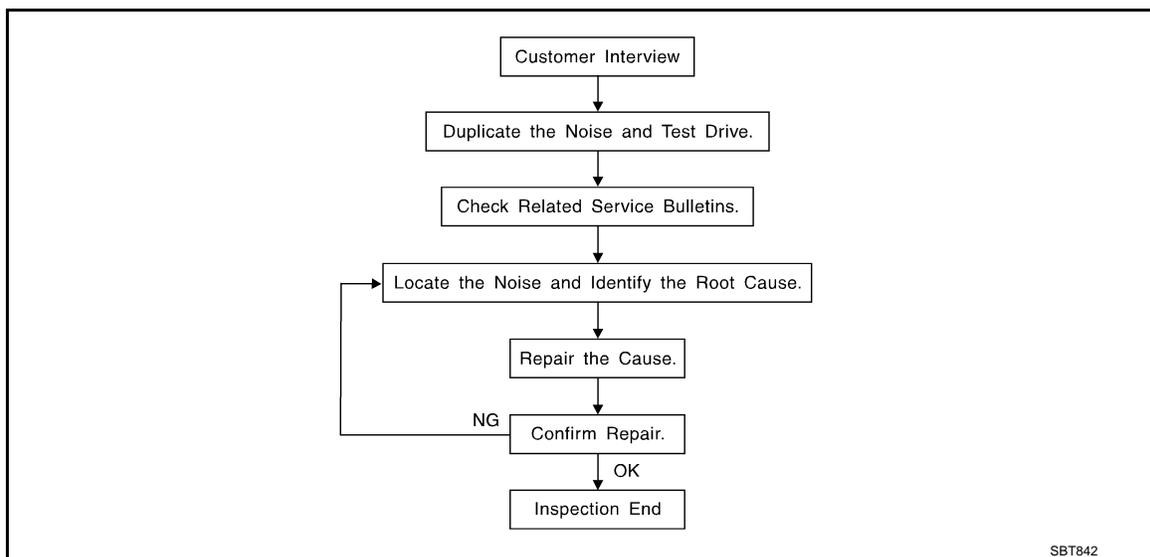

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any of customer's comments; refer to [BL-13, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, perform a diagnosis and repair the noise that the customer is concerned about. This can be accomplished by performing a cruise test on the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak – (Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping
- Creak – (Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle – (Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock – (Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick – (Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump – (Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz – (Like a bumblebee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending up on the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

SQUEAK AND RATTLE TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T models, drive position on A/T models).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear and mechanics stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - Removing the components in the area that you suspect the noise is coming from.
Do not use too much force when removing clips and fasteners, otherwise clips and fastener can be broken or lost during the repair, resulting in the creation of new noise.
 - Tapping or pushing/pulling the component that you suspect is causing the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - Feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
 - Placing a piece of paper between components that you suspect are causing the noise.
 - Looking for loose components and contact marks.
Refer to [BL-11. "Inspection Procedure"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - Separate components by repositioning or loosening and retightening the component, if possible.
 - Insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A Nissan Squeak and Rattle Kit (J-43980) is available through your authorized Nissan Parts Department.

CAUTION:

Do not use excessive force as many components are constructed of plastic and may be damaged.

NOTE:

Always check with the Parts Department for the latest parts information.

The following materials are contained in the Nissan Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100 × 135 mm (3.94 × 5.31 in)/76884-71L01: 60 × 85 mm (2.36 × 3.35 in)/76884-71L02: 15 × 25 mm (0.59 × 0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50 × 50 mm (1.97 × 1.97 in)/73982-

50Y00: 10 mm (0.39 in) thick, 50 × 50 mm (1.97 × 1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30 × 50 mm (1.18 × 1.97in)

FELT CLOTHTAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15 × 25 mm (0.59 × 0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll

The following materials, not found in the kit, can also be used to repair squeaks and rattles.

UHMW (TEFLON) TAPE

SQUEAK AND RATTLE TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

Insulates where slight movement is present. Ideal for instrument panel applications.

SILICONE GREASE

Used in place of UHMW tape that will be visible or not fit. Will only last a few months.

SILICONE SPRAY

Use when grease cannot be applied.

DUCT TAPE

Use to eliminate movement.

CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Inspection Procedure

INFOID:000000005349333

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicon spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.

CENTER CONSOLE

Components to pay attention to include:

1. Shifter assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the Nissan Squeak and Rattle Kit (J-43980) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid dumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

SQUEAK AND RATTLE TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sunvisor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

SQUEAK AND RATTLE TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

Diagnostic Worksheet

INFOID:000000005349334







SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

Dear Infiniti Customer:

We are concerned about your satisfaction with your Infiniti vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your Infiniti right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service consultant or technician to ensure we confirm the noise you are hearing.

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

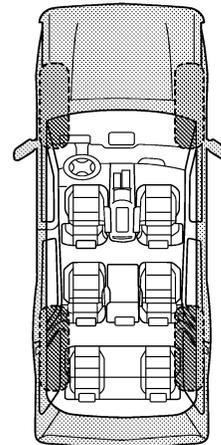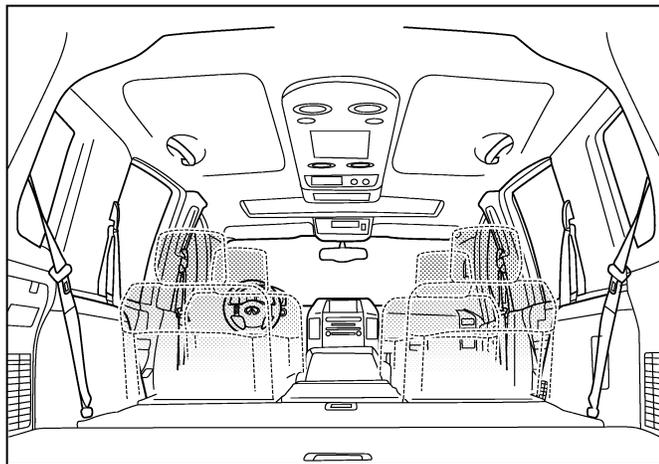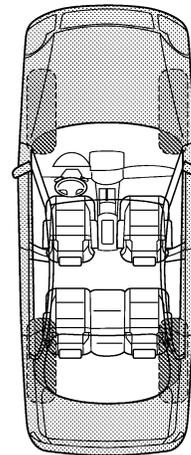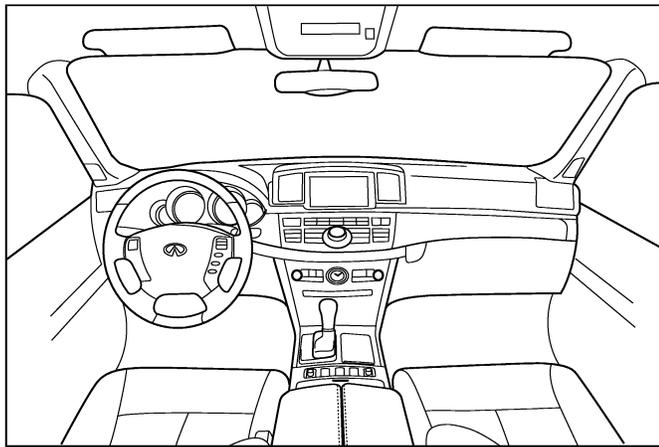

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

PIIB8741E

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

SQUEAK AND RATTLE TROUBLE DIAGNOSIS

< SERVICE INFORMATION >

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> anytime | <input type="checkbox"/> after sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> when it is raining or wet |
| <input type="checkbox"/> only when it is cold outside | <input type="checkbox"/> dry or dusty conditions |
| <input type="checkbox"/> only when it is hot outside | <input type="checkbox"/> other: |

III. WHEN DRIVING:

- through driveways
- over rough roads
- over speed bumps
- only about ____ mph
- on acceleration
- coming to a stop
- on turns: left, right or either (circle)
- with passengers or cargo
- other: _____
- after driving ____ miles or ____ minutes

IV. WHAT TYPE OF NOISE

- squeak (like tennis shoes on a clean floor)
- creak (like walking on an old wooden floor)
- rattle (like shaking a baby rattle)
- knock (like a knock at the door)
- tick (like a clock second hand)
- thump (heavy, muffled knock noise)
- buzz (like a bumble bee)

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: _____ Customer Name: _____
W.O.# _____ Date: _____

This form must be attached to Work Order

PIIB8742E


HOOD

< SERVICE INFORMATION >

HOOD

Fitting Adjustment

INFOID:000000005349335

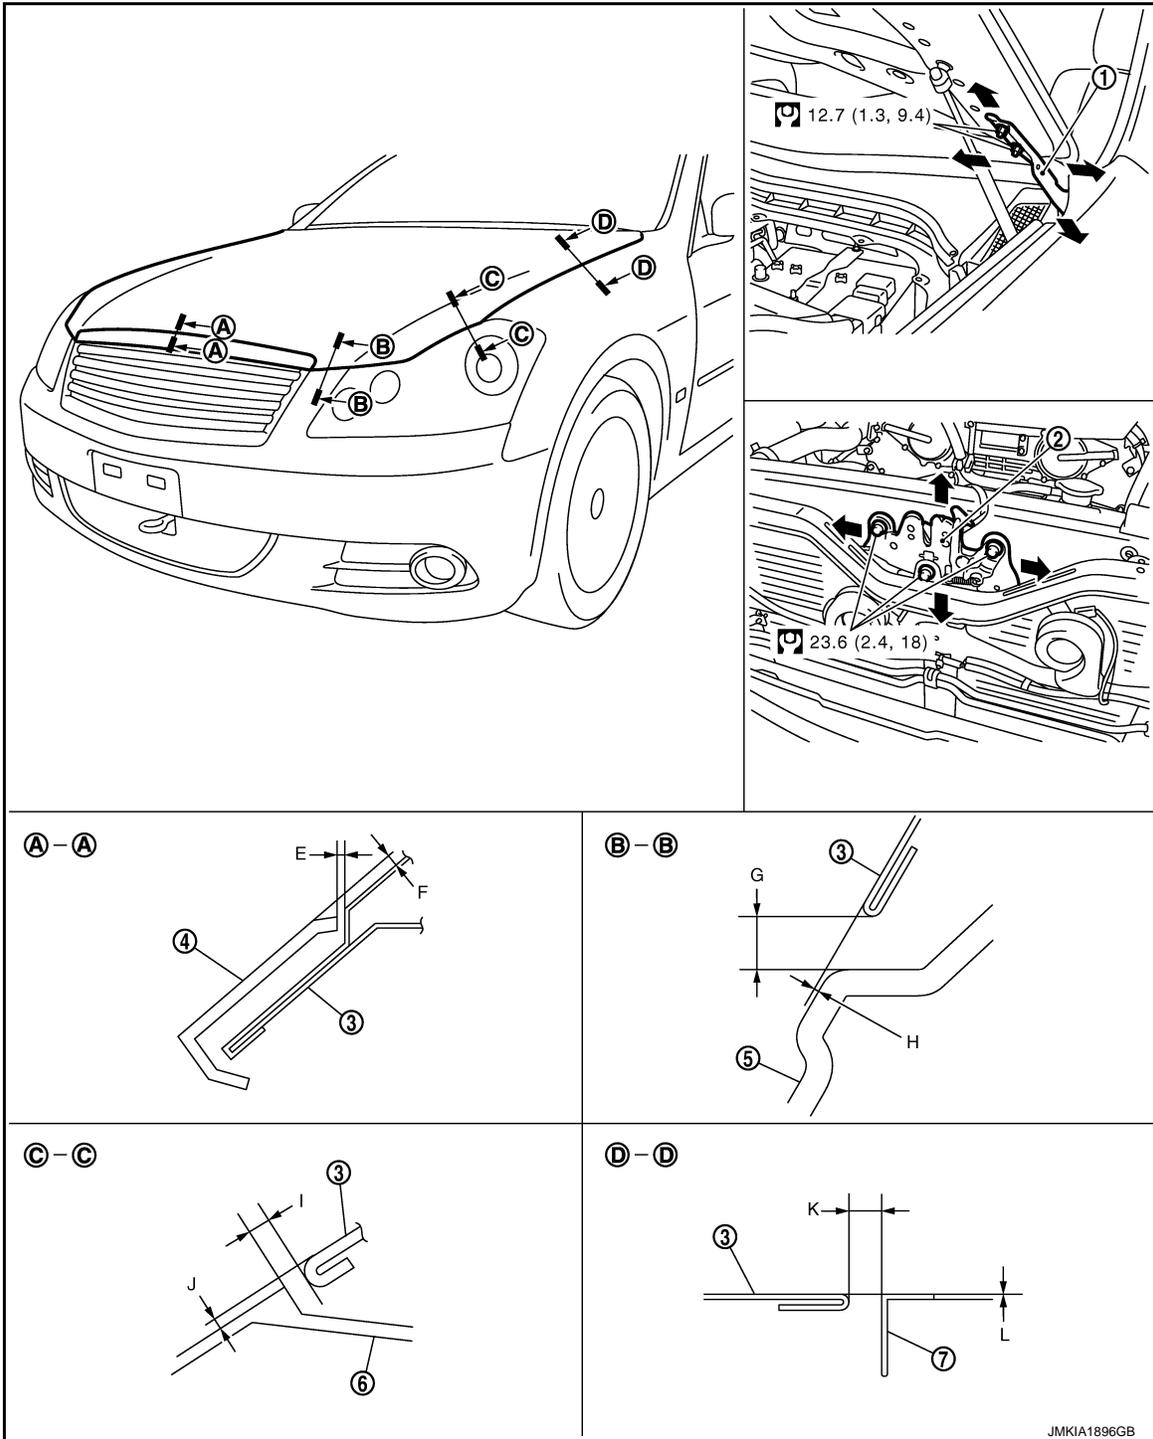

- | | | |
|---------------------|---------------------------|------------------|
| 1. Hood hinge | 2. Hood lock assembly | 3. Hood assembly |
| 4. Hood top molding | 5. Bumper fascia assembly | 6. Headlamp |
| 7. Front fender | | |

1. Check the clearance and the surface height between the hood and each part by visual and tactile feeling. (Fitting standard dimension in the table below should be satisfied.)

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P


HOOD

< SERVICE INFORMATION >


Parts		Standard	Right/left clearance (MAX)
A - A	E	Clearance	0.5 - 1.2 (0.002 - 0.047)
	F	Surface height	0.5 - 2.5 (0.002 - 0.098)
B - B	G	Clearance	1.5 - 5.5 (0.059 - 0.217)
	H	Surface height	-1.0 - 3.0 (-0.039 - 0.118)
C - C	I	Clearance	1.5 - 5.5 (0.059 - 0.217)
	J	Surface height	-1.0 - 3.0 (-0.039 - 0.118)
D - D	K	Clearance	2.0 - 5.0 (0.079 - 0.197)
	L	Surface height	-1.0 - 1.0 (-0.04 - 0.04)

* Unit: mm (in)

- In case out of specification, adjust them according to the procedures shown below.
- Remove the hood lock and adjust the height by rotating the bumper rubber until the hood becomes 1.0 to 1.5 mm (0.039 to 0.059 in) lower than the fender.

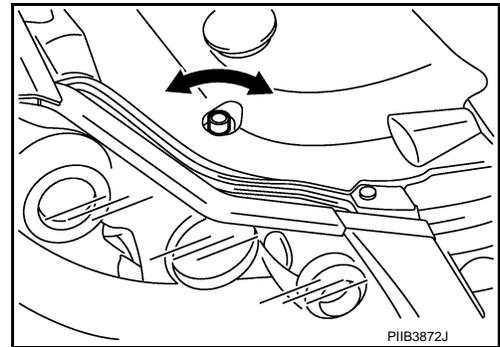

- Temporarily tighten the hood lock, and position by engaging it with the hood striker. Check the lock and striker for looseness and adjust the clearance and evenness by the striker to satisfy the specification.
- Adjust A and B shown in the figure to the following value with hood's own weight by dropping it from approx. 200 mm (7.874 in) height or the hood pressed lightly (approx. 29 N (3 kg)).

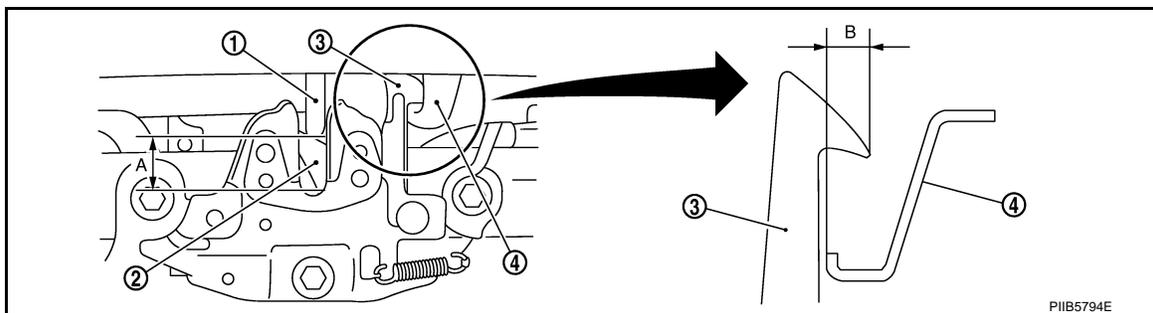

- Hood striker
- Primary latch
- Secondary striker
- Secondary latch

A : 20 mm (0.787 in)

B : 6.8 mm (0.268 in)


- After adjustment tighten lock bolts to the specified torque.

HOOD

< SERVICE INFORMATION >

Removal and Installation of Hood Assembly

INFOID:000000005349336

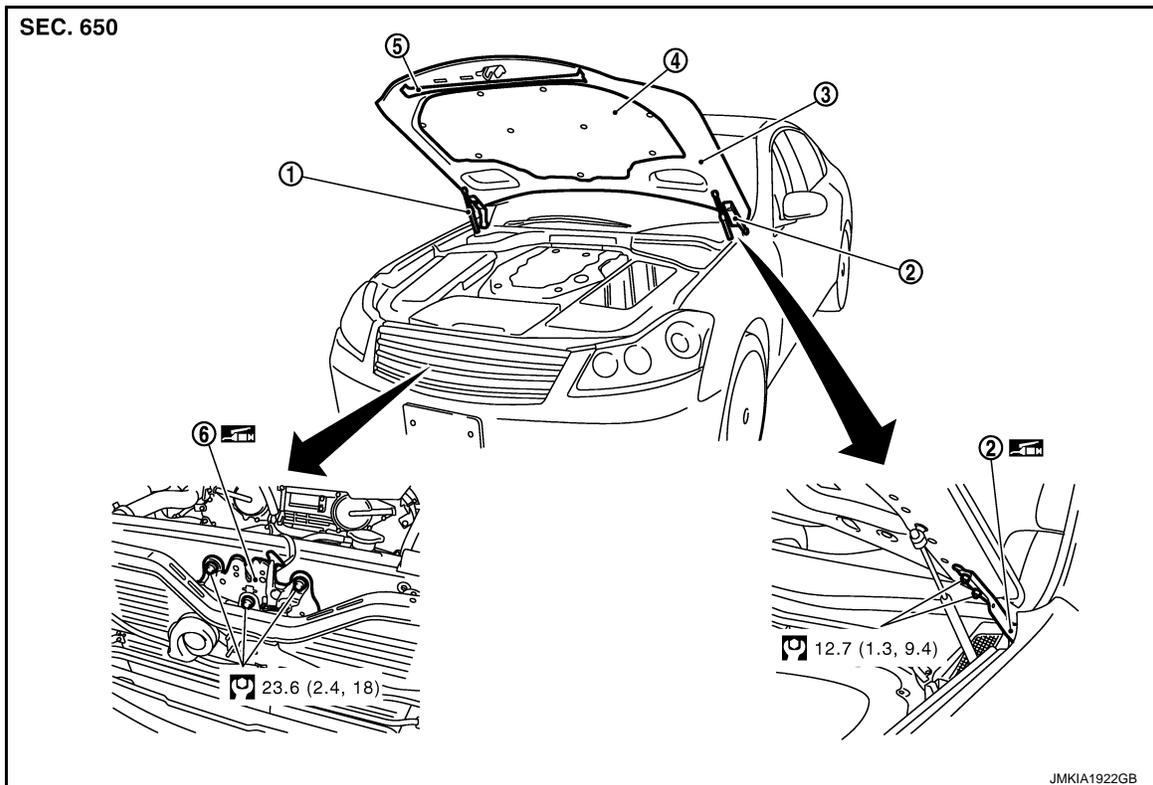

- | | | |
|-------------------|------------------------------|-----------------------|
| 1. Hood stay | 2. Hood hinge | 3. Hood assembly |
| 4. Hood insulator | 5. Hood front sealing rubber | 6. Hood lock assembly |


Refer to [GI-9, "Component"](#) for symbols in the figure.

REMOVAL

1. Support the hood lock assembly with a proper material to prevent it from falling.

WARNING:


Body injury may occur if no supporting rod is holding the hood open when removing the hood stay.

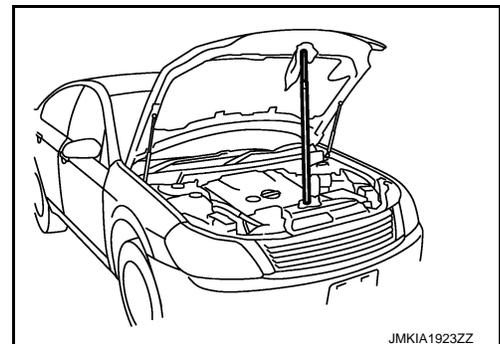

2. Remove stud balls on the hood stays at the hood side.
3. Remove the hinge mounting nuts on the hood to remove the hood assembly.

CAUTION:

Operate with two workers, because of its heavy weight.

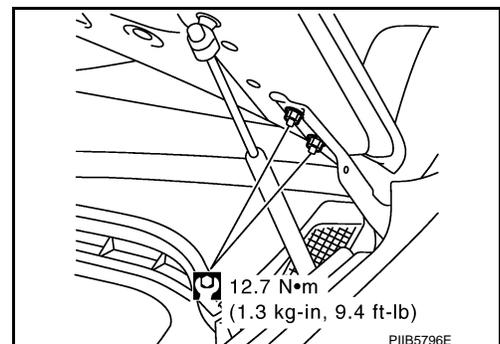

INSTALLATION

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

BL

HOOD

< SERVICE INFORMATION >


Install in the reverse order of removal.

CAUTION:

- Before installing hood hinge, apply anticorrosive agent onto the mounting surface of the vehicle body.
- After installing, perform hood fitting adjustment. Refer to [BL-15, "Fitting Adjustment"](#).

Removal and Installation of Hood Lock Control


INFOID:000000005349337

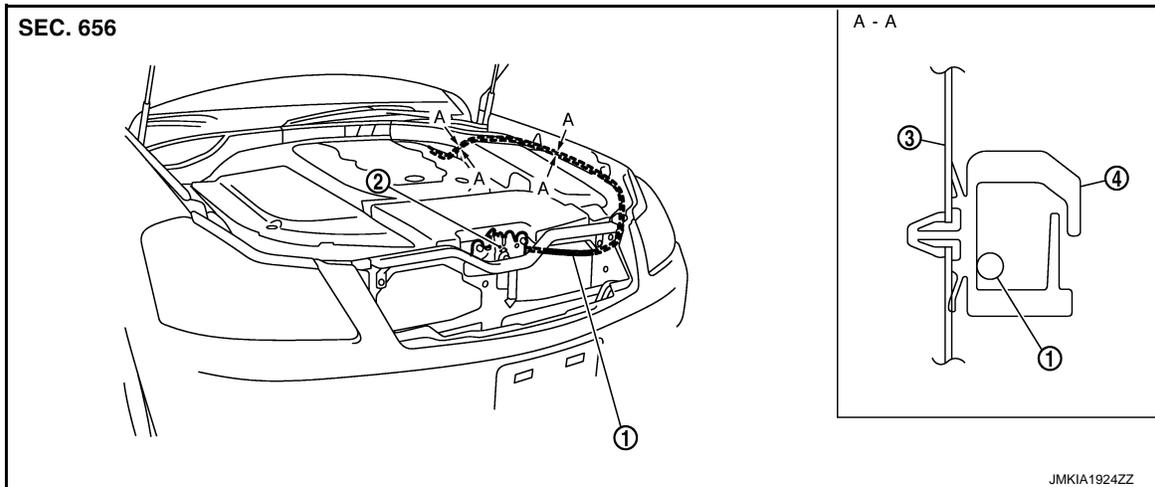


1. Hood lock cable
2. Hood lock assembly
3. Hood ledge reinforcement
4. Clip

REMOVAL

1. Remove the front grill. Refer to [EI-27](#).
2. Remove the fender protector. Refer to [EI-31](#).
3. Disconnect hood lock switch harness connector.

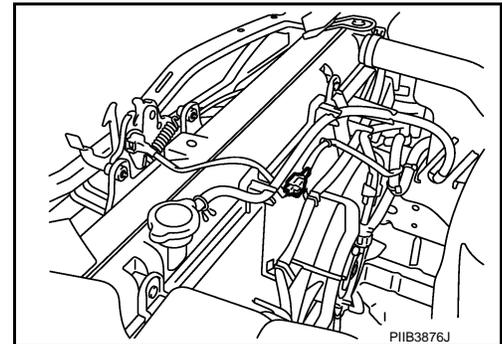


4. Remove the hood lock assembly mounting bolts.

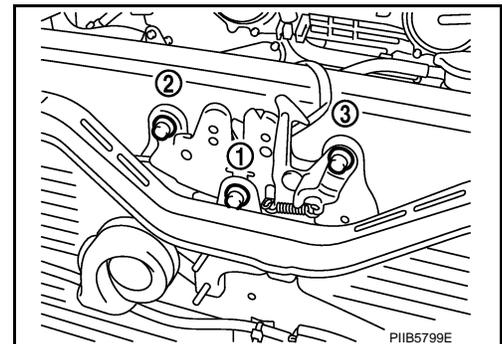

HOOD

< SERVICE INFORMATION >

5. Disconnect the hood lock cable from the hood lock, and clip it from the hood ledge.

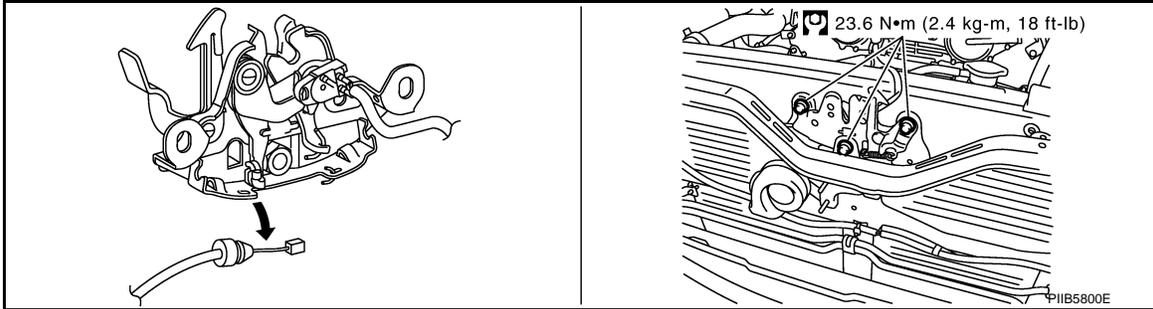

6. Remove the mounting screws with power tool, and remove the hood opener.
7. Remove the grommet on the dash board, and pull the hood lock cable toward the passenger compartment.

CAUTION:

While pulling, be careful not to damage (peeling) the outside of the hood lock cable.


INSTALLATION

1. Pull the hood lock cable through the panel hole to the engine compartment.

CAUTION:

Be careful not to bend the cable too much, keeping the radius 100 mm (3.937 in) or more.


2. Check that the cable is not offset from the positioning grommet, and push the grommet into the panel hole securely.
3. Apply the sealant to the grommet (at * mark) properly.

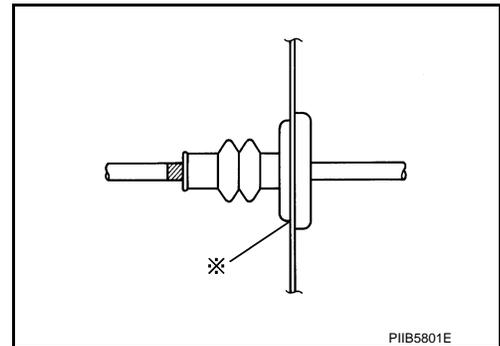

4. Install while pulling hood lock cable.
5. Install the hood lock cable securely to the lock.
6. Install hood lock assembly.

CAUTION:

- After installing, hood fitting adjustment. Refer to [BL-15, "Fitting Adjustment"](#).
- After installing, the check the hood lock control inspection Refer to [BL-19, "Hood Lock Control Inspection"](#).

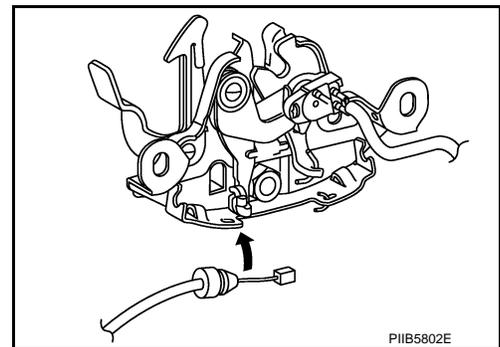

Hood Lock Control Inspection

INFOID:000000005349338


CAUTION:

If the hood lock cable is bent or deformed, replace it.

1. Check that the secondary latch is properly engaged with the secondary striker (B: 6.8 mm (0.268 in) shown in the figure) with hood's own weight.


HOOD

< SERVICE INFORMATION >

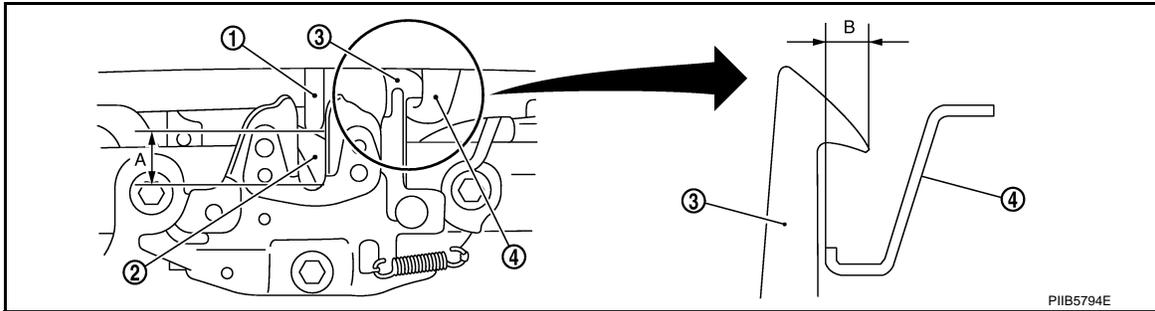

- 1. Hood striker
- 2. Primary latch
- 3. Secondary striker
- 4. Secondary latch

- 2. While operating the hood opener, carefully check that the front end of the hood is raised by approx. 20 mm (0.787 in). Also check that the hood opener returns to the original position.
- 3. Check that the hood opener operating is 294 N (30 kg) or below.
- 4. Install as static closing force of hood is 392 – 441 N·m (35– 44 kg·m).
- 5. Check the hood lock lubrication condition. If necessary, apply “body grease” to the points shown in the figure.

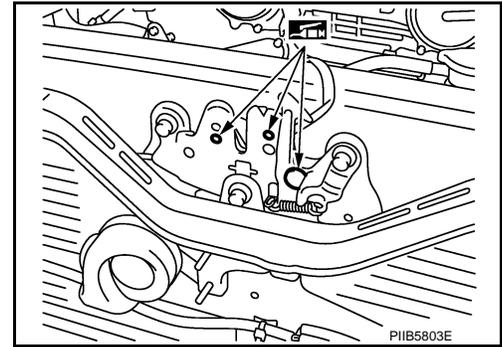


RADIATOR CORE SUPPORT

< SERVICE INFORMATION >

RADIATOR CORE SUPPORT

Removal and Installation

INFOID:000000005349339

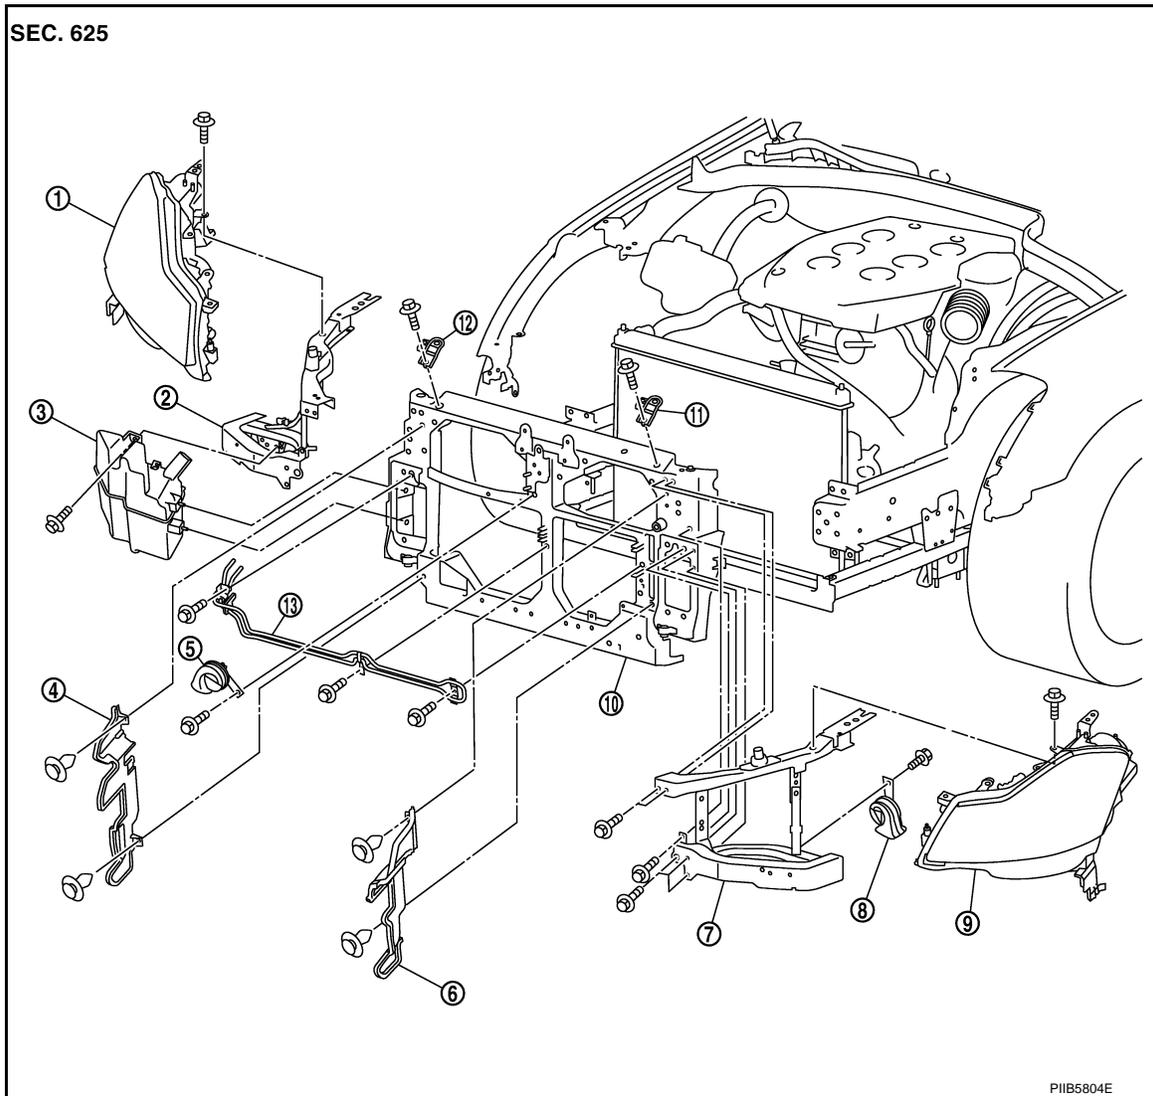

- | | | |
|------------------------------------|------------------------------------|---------------------------------|
| 1. Headlamp (RH) | 2. Radiator core support side (RH) | 3. Washer tank |
| 4. Air guide (RH) | 5. Horn (High) | 6. Air guide (LH) |
| 7. Radiator core support side (LH) | 8. Horn (Low) | 9. Headlamp (LH) |
| 10. Radiator core support center | 11. Upper radiator bracket (LH) | 12. Upper radiator bracket (RH) |
| 13. Power steering tube assembly | | |


REMOVAL

1. Remove air duct. Refer to [EM-17, "Removal and Installation"](#) (VQ35HR models) or [EM-172, "Removal and Installation"](#) (VK45DE models).
2. Remove front bumper and bumper reinforcement. Refer to [EI-13, "STANDARD TYPE : Removal and Installation"](#) (STANDARD TYPE) or [EI-17, "SPORTS TYPE : Removal and Installation"](#) (SPORTS TYPE).
3. Remove headlamp (LH/RH). Refer to [LT-33, "Removal and Installation"](#) (FOR USA) or [LT-64, "Removal and Installation"](#) (FOR CANADA).
4. Remove hood lock assembly, then remove hood lock cable. Refer to [BL-18, "Removal and Installation of Hood Lock Control"](#).
5. Remove washer tank. Refer to [WW-35, "Removal and Installation of Washer Tank"](#).
6. Remove ambient sensor. Refer to [ATC-110, "Removal and Installation"](#).


RADIATOR CORE SUPPORT

< SERVICE INFORMATION >

7. Remove crash zone sensor. Refer to [SRS-41. "Removal and Installation"](#).
8. Remove air guide (LH/RH).
9. Remove power steering tube assembly. Refer to [PS-36. "Removal and Installation"](#).
10. Remove horn (High/Low). Refer to [WW-42. "Removal and Installation"](#).
11. Remove mounting harness clip on radiator core support assembly, the harness is separate.
12. Remove ICC sensor integrated unit. Refer to [ACS-70. "ICC Sensor Integrated Unit"](#).
13. Remove upper radiator bracket (LH/RH) with power tool.
14. Remove radiator core support side with power tool.

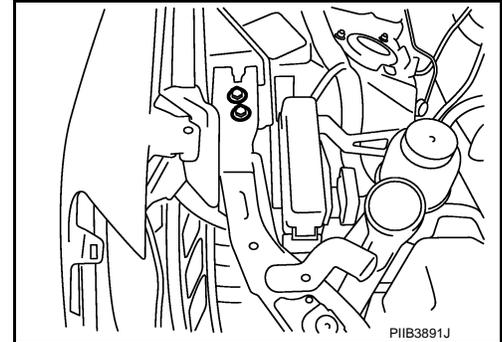


15. Remove radiator core support side (LH/RH) with power tool.

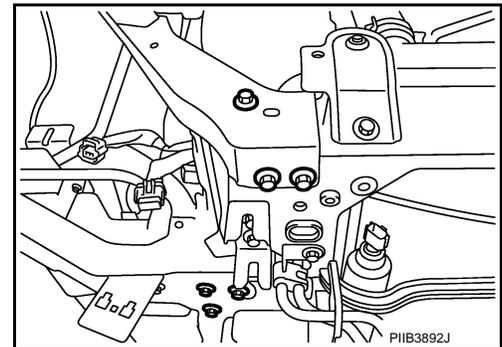

16. Remove radiator core support center.

CAUTION:

Put a wooden block under the radiator assembly to prevent the radiator assembly from falling.

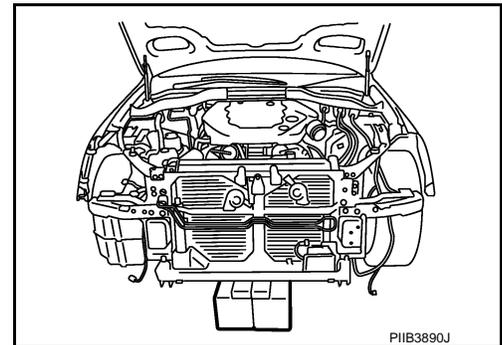

INSTALLATION

Install in the reverse order of removal.


FRONT FENDER

< SERVICE INFORMATION >

FRONT FENDER

Removal and Installation

INFOID:000000005349340

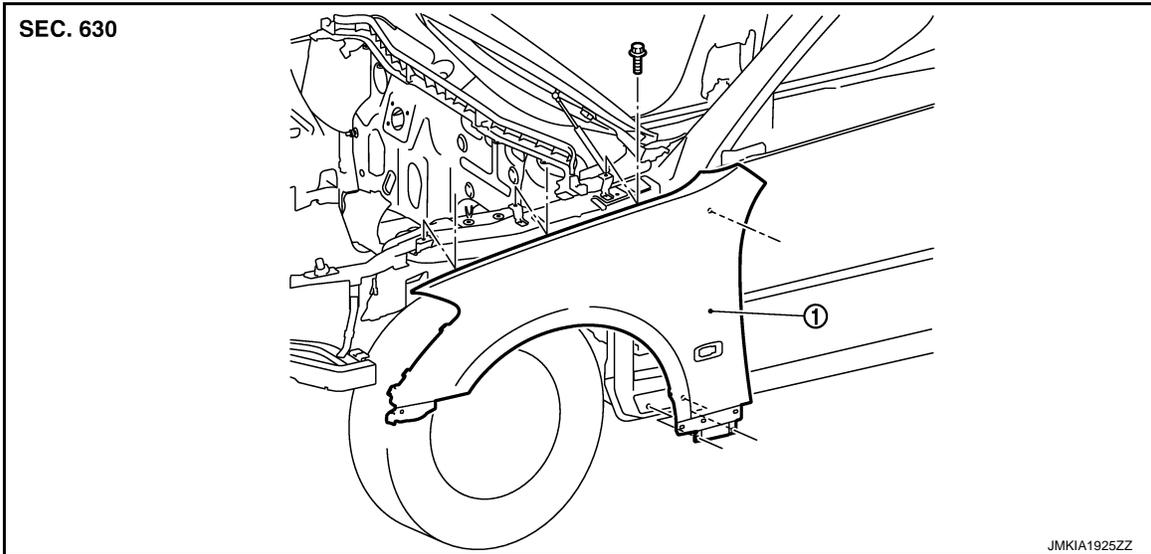

1. Front fender

REMOVAL

1. Remove the front bumper. Refer to [EI-12, "STANDARD TYPE : Component Parts Location"](#).
2. Remove the headlamp. Refer to [LT-33, "Removal and Installation"](#) (FOR USA) or [LT-64, "Removal and Installation"](#) (FOR CANADA).
3. Remove the turn signal lamp. Refer to [LT-166, "Removal and Installation of Front Turn Signal Lamp"](#).
4. Remove the front fender protector. Refer to [EI-31](#).
5. Remove the center mud guard. Refer to [EI-33, "Component Parts Location"](#).
6. Remove the mounting bolt and remove the front fender.

CAUTION:

While removing use a shop cloth to protect body from damaging.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- After installing, apply touch-up paint (the body color) onto the head of the front fender mounting bolts.
- After installing, check front fender adjustment. Refer to [BL-15, "Fitting Adjustment"](#) and [BL-172, "Fitting Adjustment"](#).


POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

POWER DOOR LOCK SYSTEM

Component Parts and Harness Connector Location

INFOID:000000005349341

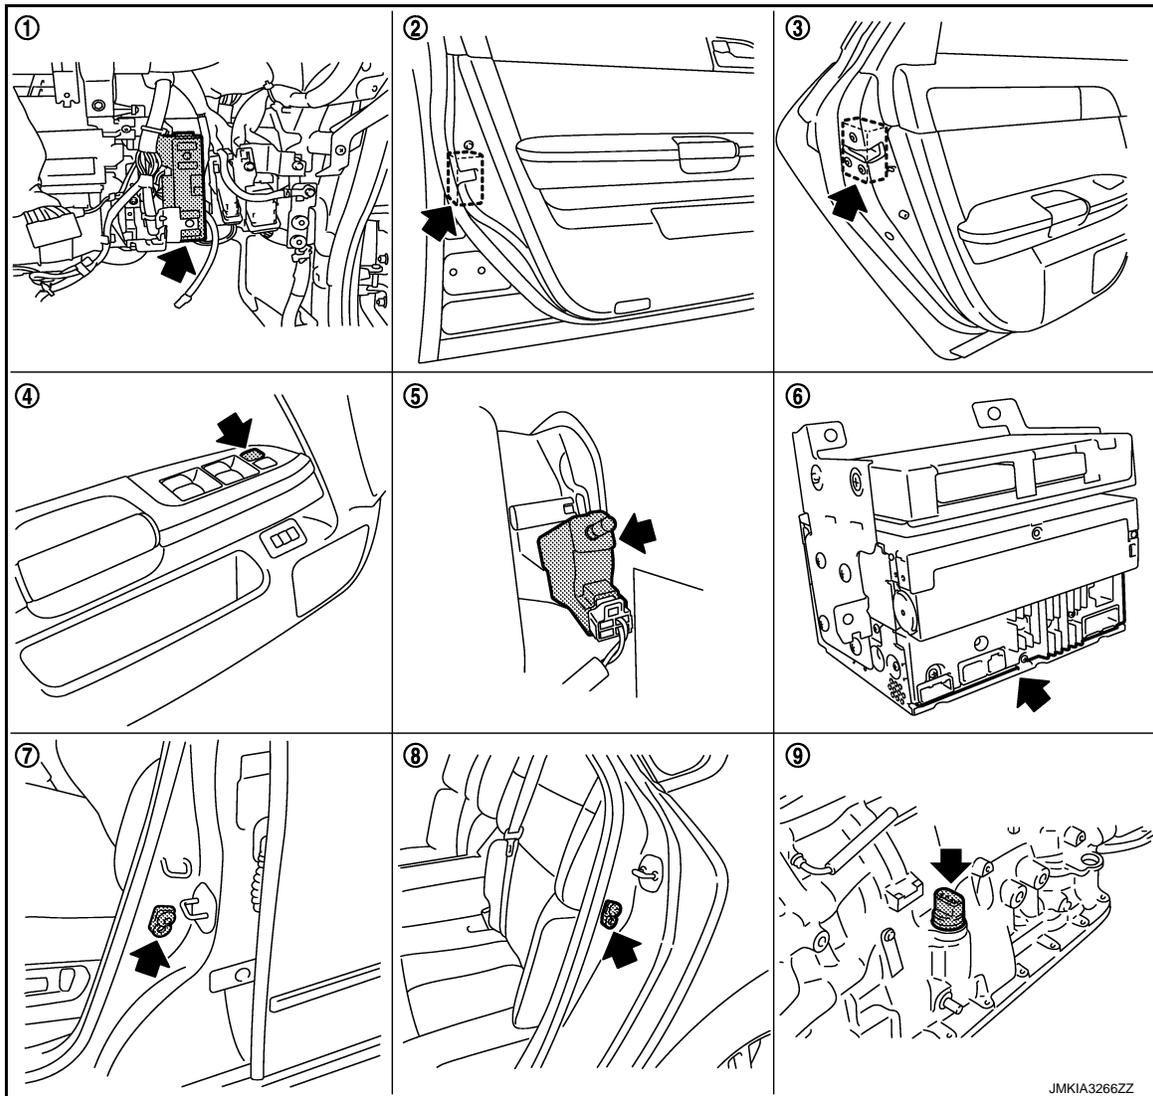

- | | | |
|--|---|-----------------------------------|
| 1. BCM M1, M2, M3 (View with instrument lower panel RH removed) | 2. Front door lock actuator (Driver side) D14 | 3. Rear door lock actuator LH D59 |
| 4. Power window main switch (door lock and unlock switch) D10, D11 | 5. Fuel lid lock actuator B477 | 6. Unified meter and A/C amp. M65 |
| 7. Front door switch (driver side) B11 | 8. Rear door switch LH B53 | 9. A/T assembly F42 |

System Description

INFOID:000000005349342

Power is supplied at all times

- through 50A fusible link (letter F, located in the fuse and fusible link box).
- to BCM terminal 55,
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to BCM terminal 42.

When ignition switch is in ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

When ignition switch is in ON or START position, power is supplied

- through 15A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38.

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

Ground is supplied

- to BCM terminal 52
- through body grounds M16 and M70.

When the door is locked or unlocked with power window main switch (door lock and unlock switch), ground is supplied

- to CPU of power window main switch
- through power window main switch (door lock and unlock switch) terminal 17
- through grounds M16 and M70.

Then power window main switch (door lock and unlock switch) operation signal is sent.

- to BCM terminal 22
- from power window main switch (door lock and unlock switch) terminal 14

When the door is locked or unlocked with power window sub-switch (front passenger side) (door lock and unlock switch), ground is supplied

- to CPU of power window sub-switch
- through power window sub-switch (front passenger side) (door lock and unlock switch) terminal 11
- through grounds M16 and M70.

Then power window sub-switch (front passenger side) (door lock and unlock switch) operation signal is sent

- to BCM terminal 22
- from power window sub-switch (front passenger side) (door lock and unlock switch) terminal 16.

When the door is locked with front door key cylinder switch (driver side), ground is supplied

- to CPU of power window main switch
- through power window main switch (door lock and unlock switch) terminal 4
- through front door key cylinder switch (driver side) terminals 6 and 4
- through grounds M16 and M70.

Then front door key cylinder switch (driver side) operation signal (lock) is sent

- to BCM terminal 22
- from power window main switch (door lock and unlock switch) terminal 14

When the door is unlocked with front door key cylinder switch (driver side), ground is supplied

- to CPU of power window main switch
- through power window main switch (door lock and unlock switch) terminal 6
- through front door key cylinder switch (driver side) terminals 5 and 4
- through grounds M16 and M70.

Then front door key cylinder switch (driver side) operation signal (unlock) is sent

- to BCM terminal 22
- from power window main switch (door lock and unlock switch) terminal 14

BCM is connected to power window main switch and power window sub-switch as serial link.

DOOR LOCK ACTUATOR OPERATION

When door is locked with door lock and unlock switch, all door lock actuator is locked. Ground is supplied

- to BCM terminal 50
- through each door lock actuator terminals 2 and 1
- through BCM terminals 44 (driver side), 70 (passenger side) and 51 (rear door).

When door is unlocked with door lock and unlock switch, all door lock actuator is unlocked. Ground is supplied

- to BCM terminals 44 (driver side), 70 (passenger side) and 51 (rear door)
- through each door lock actuator terminals 1 and 2
- through BCM terminal 50.

FUEL LID OPERATION

When door is locked with door lock and unlock switch, fuel lid lock actuator is locked. Ground is supplied

- to BCM terminal 69
- through fuel lid lock actuator terminals 2 and 1
- through BCM terminal 44.

When door is unlocked with door lock and unlock switch, fuel lid lock actuator is unlocked. Ground is supplied

- to BCM terminal 44
- through fuel lid lock actuator terminals 1 and 2
- through BCM terminal 69.

In this condition, fuel lid can be opened if it is pushed.

OUTLINE

Functions Available by Operating the Door Lock and Unlock Switches on Driver's Door and Passenger's Door

- Interlocked with the locking operation of door lock and unlock switch, door lock actuators of all doors and fuel lid lock actuator are locked.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

BL

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

- Interlocked with the unlocking operation of door lock and unlock switch, door lock actuators of all doors and fuel lid lock actuator are unlocked.

Functions Available by Operating the Key Cylinder Switch on Driver's Door

- Interlocked with the locking operation of door key cylinder, door lock actuators of all doors and fuel lid lock actuator are locked.

Selective Unlock Operation

- When door key cylinder is unlocked, door lock actuator driver side and fuel lid lock actuator are unlocked.
- When door key cylinder is unlocked for the second time within 5 seconds after the first operation, door lock actuators on all doors are unlocked.

Select unlock operation mode can be changed using "SELECTIVE UNLOCK FUNCTION" mode in "WORK SUPPORT". Refer to [BL-74. "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

Key Reminder Door System

Refer to [BL-44. "System Description"](#).

AUTOMATIC DOOR LOCK/UNLOCK FUNCTION (LOCK OPERATION)

Vehicle Speed Sensing Auto Door Lock

All doors are locked when the vehicle speed reaches 15 MPH (24 km/h) or more.

BCM outputs the lock signal to all door lock actuators when it detects that the ignition switch is turned ON, all doors are closed and the vehicle speed received from the unified meter and A/C amp. via CAN communication becomes 24 km/h (15 miles) or more.

Setting change of Automatic Door Lock/Unlock Function

The automatic door lock function ON/OFF can be switched by performing the following operation.

1. Close all doors (door switch OFF)
2. Turn ignition switch ON
3. Press and hold the door lock and unlock switch for 5 seconds or more in the lock direction within 20 seconds after turning the ignition switch ON.
4. The switching is completed when the hazard lamp blinks.

OFF → ON : 2 blinks

ON → OFF : 1 blink

AUTOMATIC DOOR LOCK/UNLOCK FUNCTION (UNLOCK OPERATION)

IGN OFF Interlock Door Unlock

All doors are unlocked when the power supply position is changed from ON to OFF.

BCM outputs the unlock signal to all door lock actuators when it detects that the power supply position is changed from ignition switch ON to OFF.

Setting change of Automatic Door Lock/Unlock Function

The automatic door unlock function ON/OFF can be switched by performing the following operation.

1. Close all doors below (door switch OFF)
2. Turn ignition switch ON
3. Press and hold the door lock and unlock switch for 5 seconds or more in the unlock direction within 20 seconds after turning the power supply position ON.
4. The switching is completed when the hazard lamp blinks.

OFF → ON : 2 blinks

ON → OFF : 1 blink

CAN Communication System Description

INFOID:000000005349343

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >


CAN Communication Unit

INFOID:000000005349344

Refer to [LAN-29, "CAN System Specification Chart"](#)

Schematic

INFOID:000000005349345

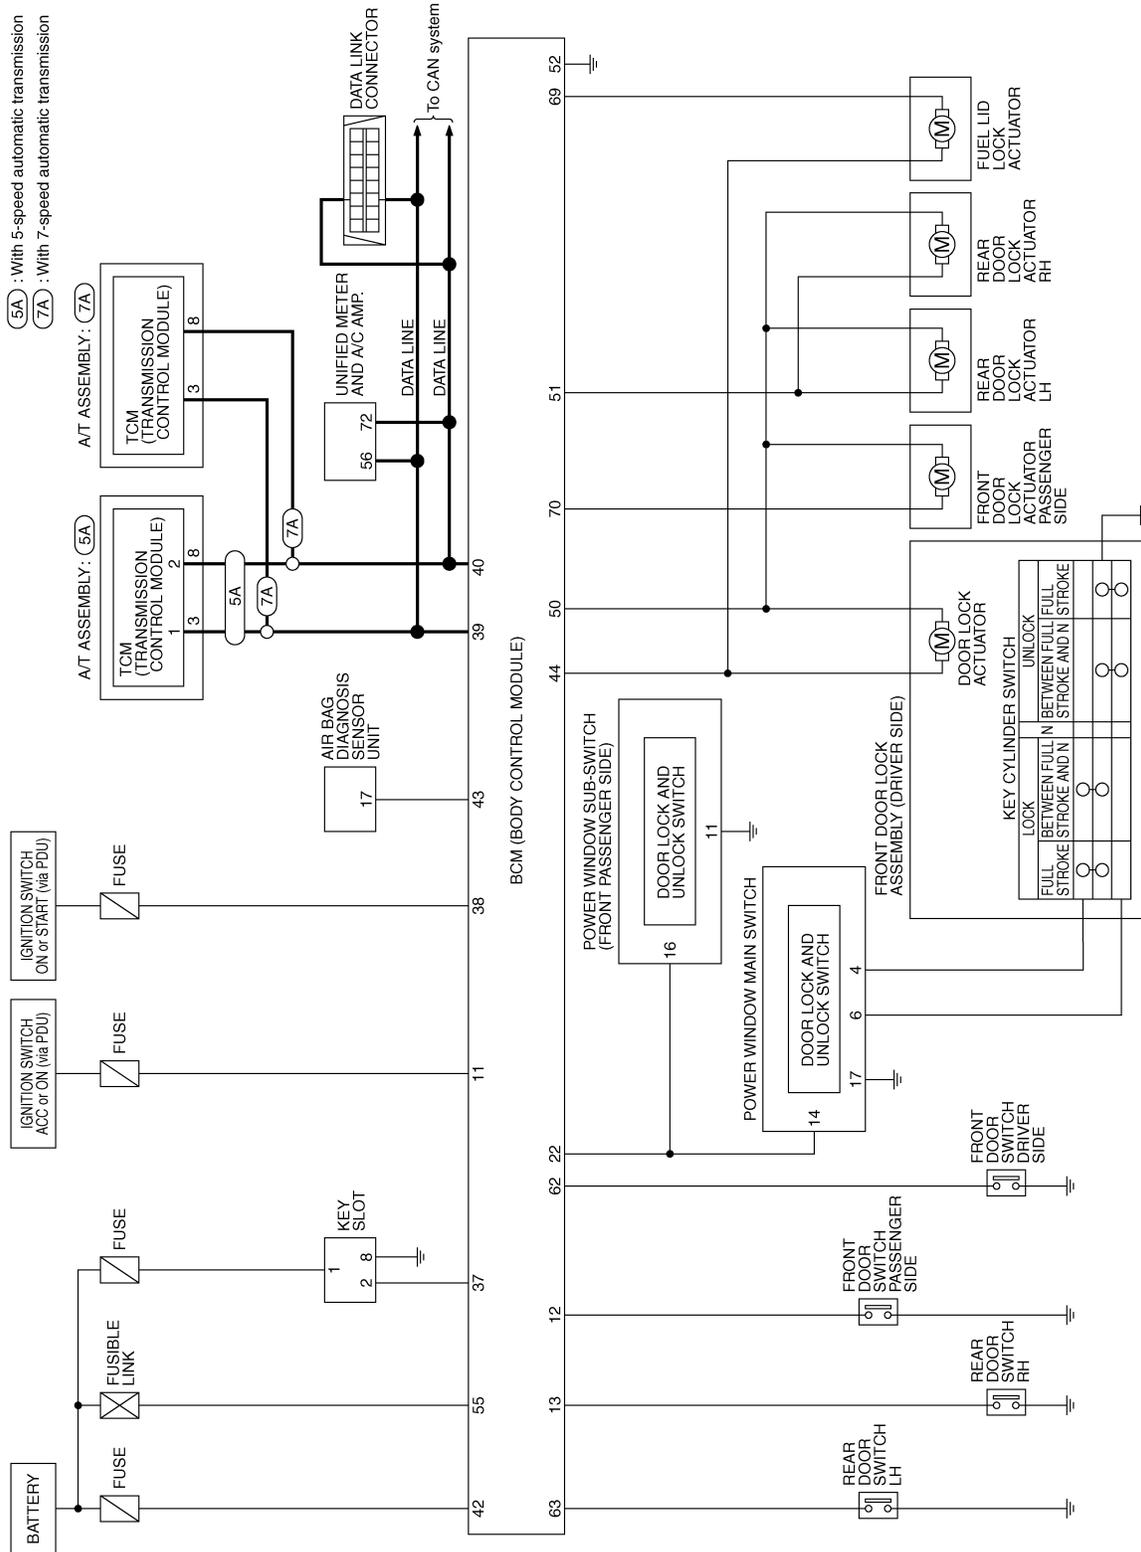

TIWT3132E

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BL


POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

Wiring Diagram - D/LOCK -

INFOID:00000005349346

BL-D/LOCK-01

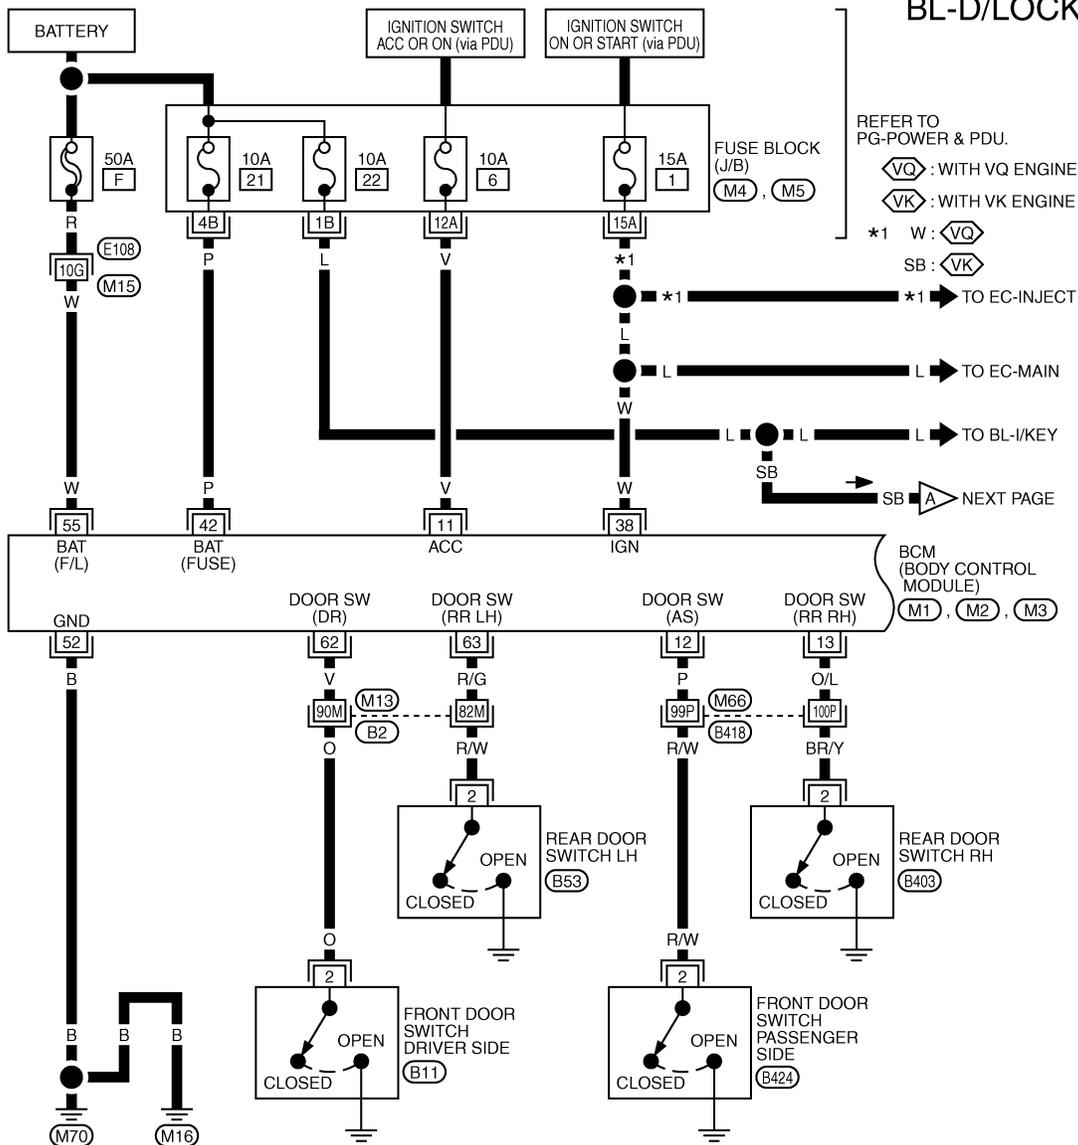

1	
2	(B11), (B53), (B403), (B424)
3	W W W W

REFER TO THE FOLLOWING.




- (E108), (B2), (B418) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4), (M5) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M1), (M2), (M3) -ELECTRICAL UNITS

TIWT3133E





POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

BL-D/LOCK-02

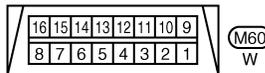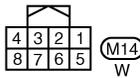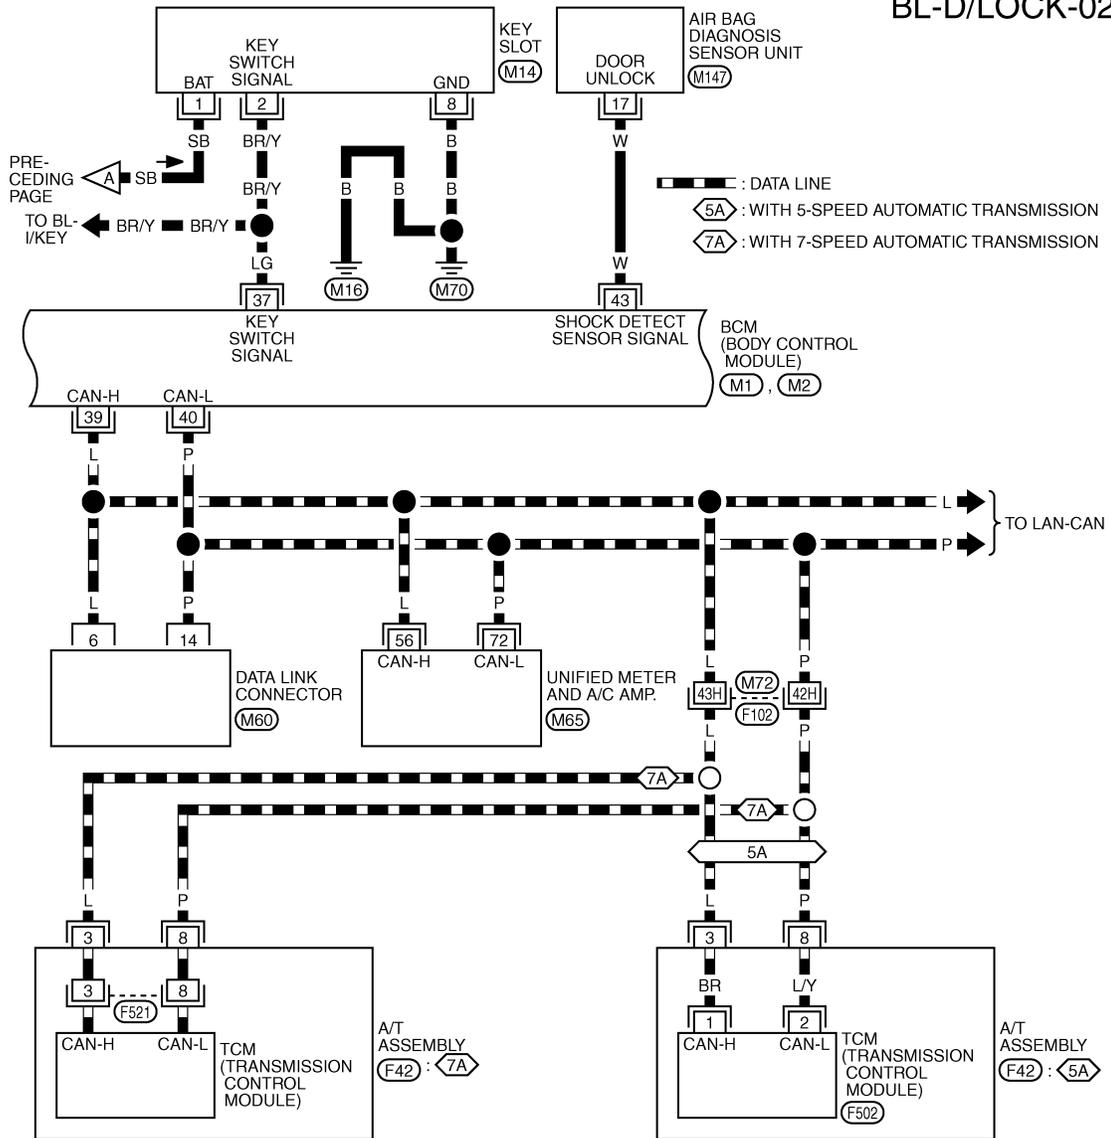

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

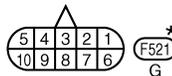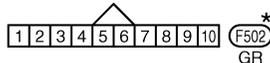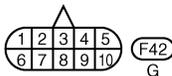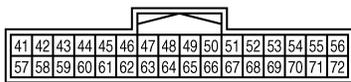





REFER TO THE FOLLOWING.
 (F102) -SUPER MULTIPLE JUNCTION (SMJ)
 (M1, M2) -ELECTRICAL UNITS

TIWT3134E

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

BL-D/LOCK-03

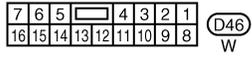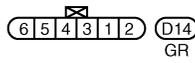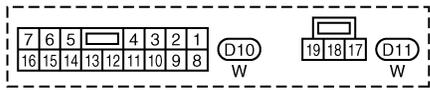
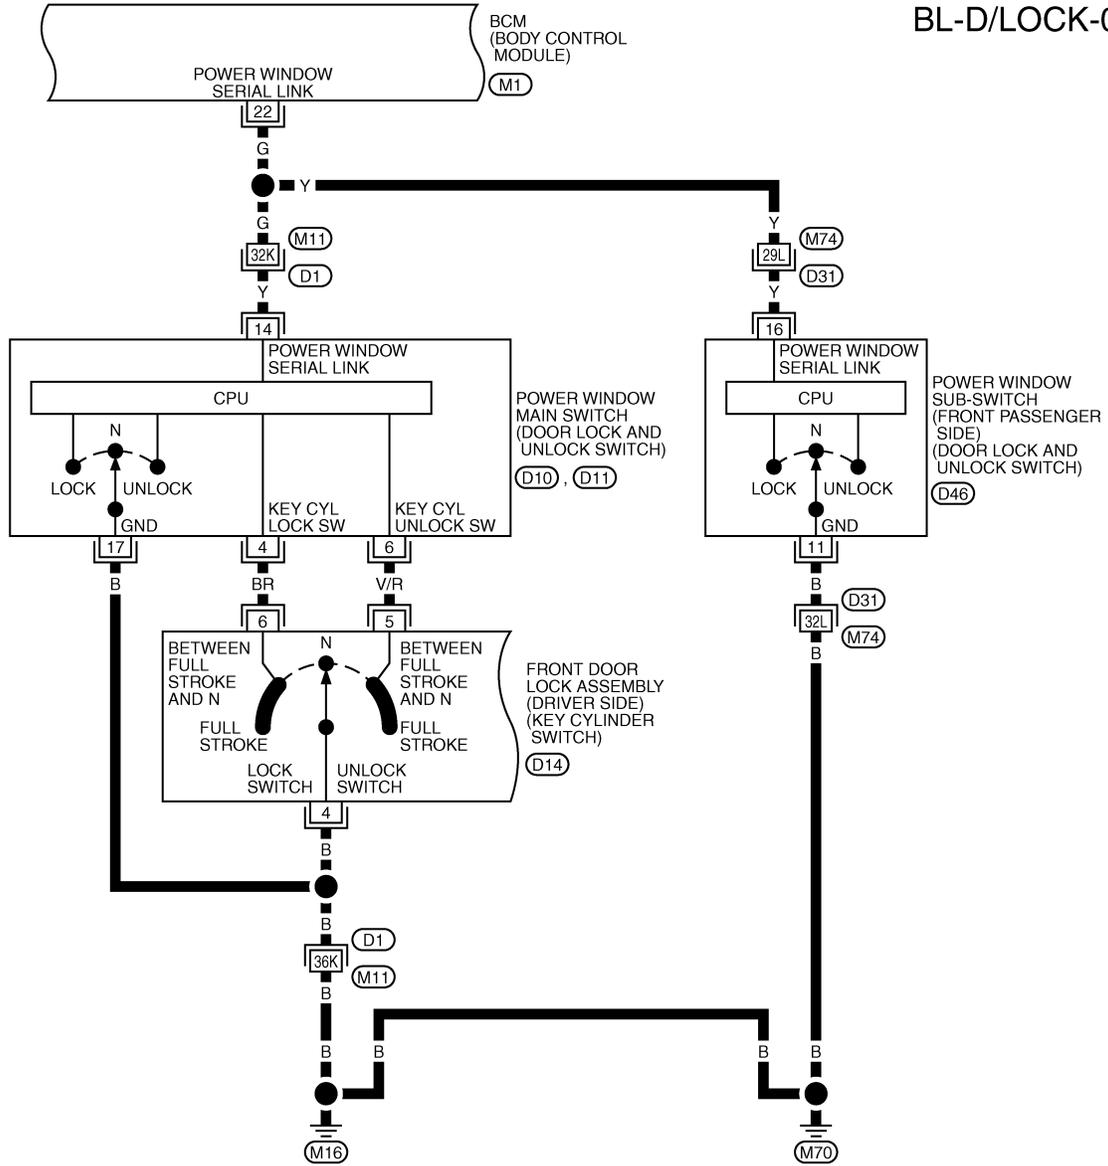


REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)
 (M1) -ELECTRICAL UNITS

TIWT3135E

POWER DOOR LOCK SYSTEM


< SERVICE INFORMATION >

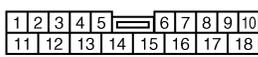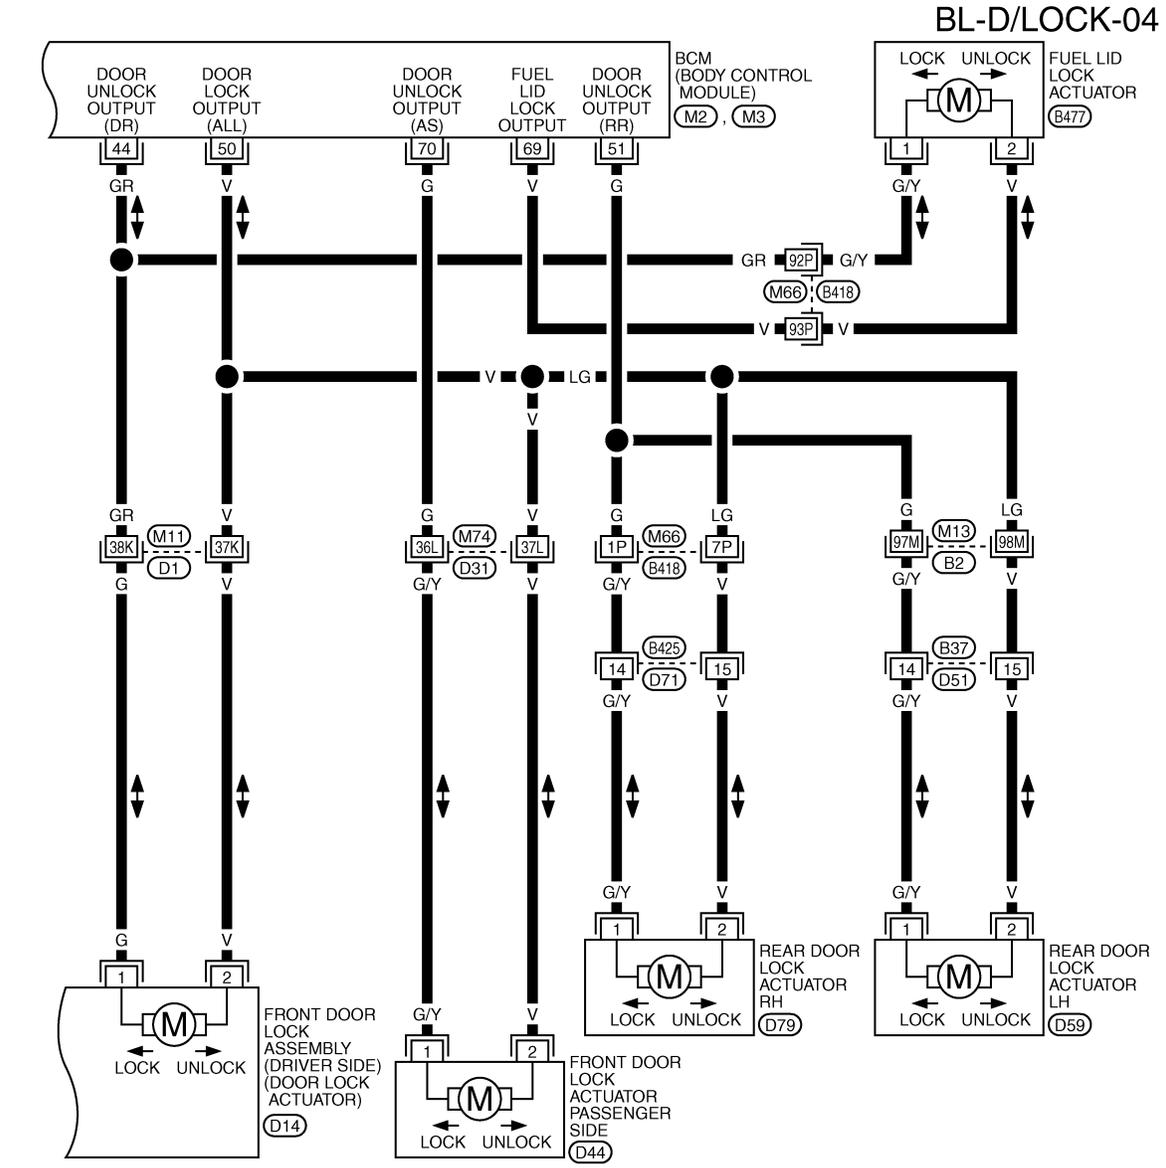

(B37), (B425)
W W



(B477)
W

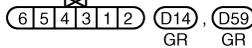

(D14), (D59)
GR GR



(D44), (D79)
GR GR

REFER TO THE FOLLOWING.
(B2), (B418), (D1), (D31)
-SUPER MULTIPLE JUNCTION (SMJ)
(M2), (M3) -ELECTRICAL UNITS

TIWT3136E


A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

Terminal and Reference Value for BCM

INFOID:000000005349347

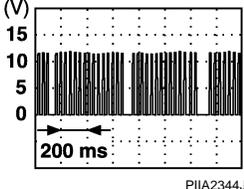Terminal	Wire color	Item	Signal Input/Output	Condition	Voltage (V) (Approx.)
11	V	Ignition switch (ACC)	Input	Ignition switch is in ACC position	Battery voltage
12	P	Front door switch passenger side	Input	Door open (ON) → Close (OFF)	0 → Battery voltage
13	O/L	Rear door switch RH	Input	Door open (ON) → Close (OFF)	0 → Battery voltage
22	G	Power window serial link	Input	Ignition switch ON	
38	W	Ignition switch (ON)	Input	Ignition switch is in ON or START position	Battery voltage
39	L	CAN H	Input/Output	—	—
40	P	CAN L	Input/Output	—	—
42	P	Battery source (Fuse)	Input	—	Battery voltage
44	GR	Driver door lock actuator (unlock) signal	Output	Door lock / unlock switch (Free → Unlock)	0 → Battery voltage → 0
50	V	Door lock actuator (lock) signal	Output	Door lock / unlock switch (Free → Lock)	0 → Battery voltage → 0
51	G	Rear doors lock actuator signal	Output	Door lock / unlock switch (Free → Unlock)	0 → Battery voltage → 0
52	B	Ground	—	—	0
55	W	Power source (Fusible link)	Input	—	Battery voltage
62	V	Front door switch driver side	Input	Door open (ON) → Close (OFF)	0 → Battery voltage
63	R/G	Rear door switch LH	Input	Door open (ON) → Close (OFF)	0 → Battery voltage
69	V	fuel lid lock actuator (unlock) signal	Output	Door lock / unlock switch (Free → Unlock)	0 → Battery voltage → 0
70	G	Front door lock actuator (passenger side) lock signal	Output	Door lock / unlock switch (Free → Unlock)	0 → Battery voltage → 0

Work Flow

INFOID:000000005349348

1. Check the symptom and customer's requests.
2. Understand the outline of system. Refer to [BL-24, "System Description"](#).
3. According to the trouble diagnosis chart by symptom, repair or replace the cause of the malfunction. Refer to [BL-33, "Trouble Diagnosis Chart by Symptom"](#).
4. Does power door lock system operate normally?
 YES: GO TO 5.
 NO: GO TO 3.
5. INSPECTION END

CONSULT-III Function (BCM-DOOR LOCK)

INFOID:000000005349349

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

Data Monitor

Monitor item	Content
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW	Indicates [ON/OFF] condition of lock signal from key cylinder.
KEY CYL UN-SW	Indicates [ON/OFF] condition of unlock signal from key cylinder.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch driver side.
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch passenger side.
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
BACK DOOR SW	This is displayed even if it is not equipped.
I -KEY LOCK	Indicates [ON/OFF] condition of lock signal from Intelligent Key.
I - KEY UNLOCK	Indicates [ON/OFF] condition of unlock signal from Intelligent Key.
ACC ON SW	Indicates [ON/OFF] condition of ignition switch in ACC position.
I - KEY DR UNLK	Indicates [ON/OFF] condition of unlock signal from door request switch (driver side)
I - KEY AS UNLK	Indicates [ON/OFF] condition of unlock signal from door request switch (passenger side)

Active Test

Test item in "DOOR LOCK"	Content
ALL LOCK	This test is able to check all door lock actuators lock operation. These actuators lock when "ALL LOCK" on CONSULT-III screen is touched.
DR UNLOCK	This test is able to check door lock actuator (driver side) unlock operation. This actuator unlock when "DR UNLOCK" on CONSULT-III screen is touched.
OTHER UNLOCK	This test is able to check all door lock actuators (except driver side) unlock operation. These actuators unlock when "OTHER UNLOCK" on CONSULT-III screen is touched.
ALL UNLOCK	This test is able to check all door lock actuators unlock operation. These actuators unlock when "ALL UNLOCK" on CONSULT-III screen is touched.
AS UNLOCK	This test is able to check door lock actuator (passenger side) unlock operation. This actuator unlock when "AS UNLOCK" on CONSULT-III screen is touched.

Trouble Diagnosis Chart by Symptom

INFOID:000000005349350

Always check the "Work Flow" before troubleshooting. Refer to [BL-32, "Work Flow"](#).

Symptom	Diagnoses service procedure	Reference page
Power door lock does not operate with door lock and unlock switch.	1. Power supply and ground circuit check of BCM.	BL-34
	2. Check door lock and unlock switch.	BL-35
	3. Check door lock actuator (driver side)	BL-36
	4. Replace BCM.	BCS-14

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

Symptom	Diagnoses service procedure	Reference page
Power door lock does not operate with door key cylinder operation. (Power door lock operate properly with door lock and unlock switch.)	1. Check front door key cylinder switch. 2. Replace power window main switch.	BL-40 -
Specific door lock actuator does not operate.	1. Check door lock actuator. 2. Replace BCM.	Driver side
		Passenger side
Rear LH		
Rear RH		
Selective unlock operation does not operate. (All other power door lock system is "OK".)	1. Check select unlock mode. Select unlock mode can be changed. First check select unlock mode. 2. Replace BCM.	BL-74 BCS-14
Fuel lid opener actuator does not operate. (All door lock actuators operates properly.)	Check fuel lid lock actuator.	BL-39
Automatic door lock/unlock function does not operate (All other power door lock system is "OK".)	1. Check vehicle speed signal.	DI-3
	2. Check BCM.	BCS-2
	3. Check TCM.	AT-8(5AT) AT-470(7AT)

Power Supply and Ground Circuit Inspection for BCM

INFOID:000000005349351

1. CHECK FUSE

Check the following fuse and fusible link.

- 50A fusible link (letter **F**, located in the fuse and fusible link box)
- 10A fuse [No.21, located in the fuse block (J/B)]
- 10A fuse [No.6, located in the fuse block (J/B)]
- 15A fuse [No.1, located in the fuse block (J/B)]

NOTE:

Refer to [BL-24, "Component Parts and Harness Connector Location"](#).

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse, refer to [PG-4](#).

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM and ground.

Terminals		Condition of ignition switch position	Voltage (V) (Approx.)
(+)	(-)		
BCM connector	Terminal	Ground	Battery voltage
	M3		
	38		
M2	42		
	55		

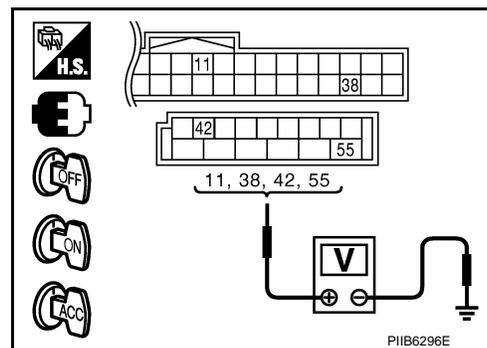

OK or NG

OK >> GO TO 3.

NG >> Repair or replace BCM power supply circuit.

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM connector	Terminal		Continuity
M2	52	Ground	Yes

OK or NG

- OK >> Power supply and ground circuit are OK.
- NG >> Repair or replace BCM ground circuit.

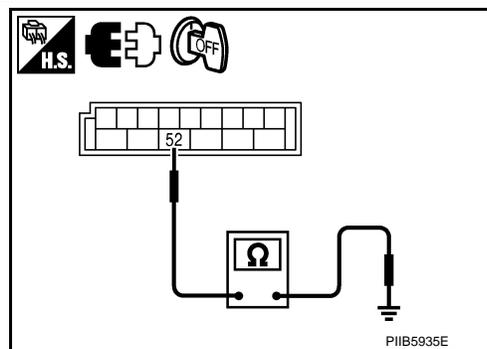

INFOID:000000005349352

Check Door Lock and Unlock Switch

1. CHECK POWER WINDOW SWITCH OUTPUT SIGNAL

With CONSULT-III


Check ("CDL LOCK SW", "CDL UNLOCK SW") in DATA MONITOR mode with CONSULT-III.

Monitor item	Condition	
CDL LOCK SW	LOCK	: ON
	UNLOCK	: OFF
CDL UNLOCK SW	LOCK	: OFF
	UNLOCK	: ON

Without CONSULT-III

1. Remove key from ignition switch, and the door of driver side and passenger side is closed.
2. Check signal between BCM connector and ground with oscilloscope when door lock and unlock switch (driver side and passenger side) is turned "LOCK" or "UNLOCK".
3. Make sure signals which are shown in the figure below can be detected during 10 second just after door lock and unlock switch (driver side and passenger side) is turned "LOCK" or "UNLOCK".

Terminal		Signal (Reference value)
(+)	(-)	
BCM connector	Terminal	
M1	22	

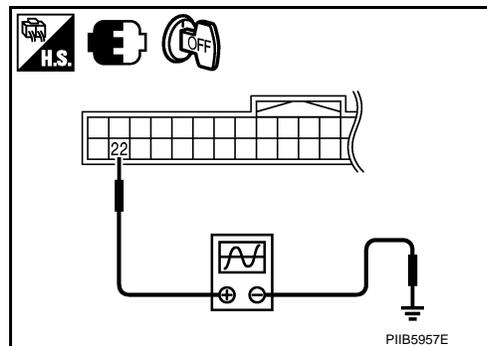

OK or NG

- OK >> Door lock and unlock switch is OK.
- NG >> GO TO 2.


2. CHECK POWER WINDOW SWITCH GROUND

1. Turn ignition switch OFF.
2. Disconnect power window main switch and front power window switch (passenger side) connector.
3. Check continuity between power window main switch connector and ground.

POWER DOOR LOCK SYSTEM


< SERVICE INFORMATION >

Power window main switch connector	Terminal		Continuity
D11	17	Ground	Yes

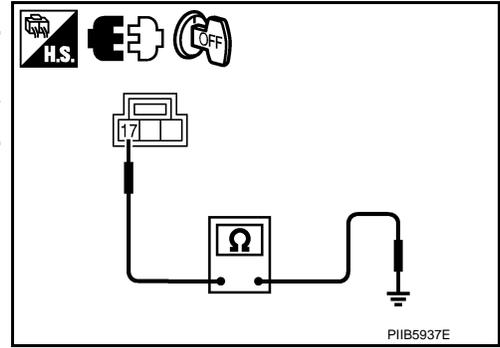

4. Check continuity between power window sub-switch (front passenger side) connector and ground.

Power window sub-switch (front passenger side) connector	Terminal		Continuity
D46	11	Ground	Yes

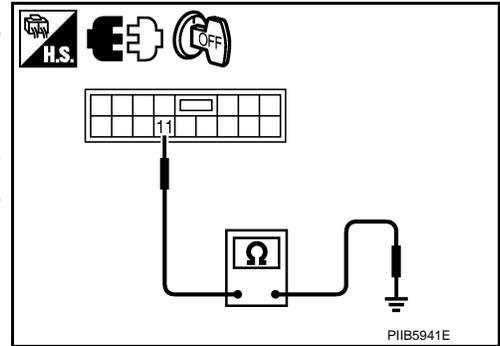


OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness.

3.CHECK POWER WINDOW SERIAL LINK CIRCUIT


1. Disconnect BCM connector.
2. Check continuity between BCM connector and power window main switch connector.

A		B		Continuity
BCM connector	Terminal	Power window main switch connector	Terminal	
M1	22	D10	14	Yes

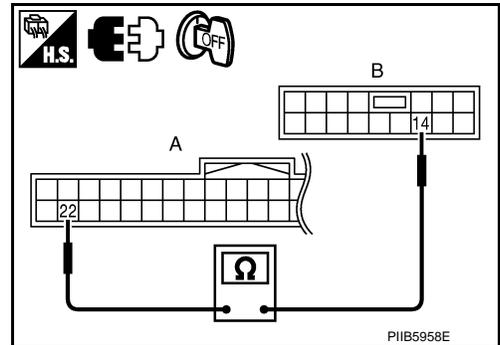

3. Check continuity between BCM connector and power window sub-switch (front passenger side) connector.

A		B		Continuity
BCM connector	Terminal	Power window sub-switch (front passenger side) connector	Terminal	
M1	22	D46	16	Yes

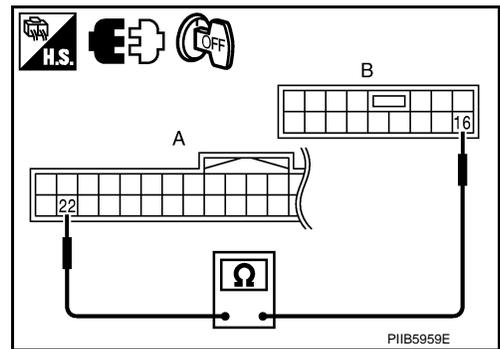

OK or NG

- OK >> Replace power window main switch.
- NG >> Repair or replace harness.

Check Door Lock Actuator/Driver Side

INFOID:000000005349353

1.CHECK OUTPUT SIGNAL

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

Check voltage between BCM connector and ground.

Terminals		Condition of door lock and unlock switch	Voltage (V) (Approx.)
(+)	(-)		
BCM connector	Terminal		
M2	50	Lock	0 → Battery voltage → 0
	44	Unlock	0 → Battery voltage → 0

OK or NG

- OK >> GO TO 2.
- NG >> Replace BCM.

2. CHECK DOOR LOCK ACTUATOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM and front door lock actuator driver side connector.
3. Check continuity between BCM connector and front door lock actuator driver side connector.

A		B		Continuity
BCM connector	Terminal	Door lock actuator connector	Terminal	
M2	50	D14	2	Yes
	44		1	

4. Check continuity between BCM connector and ground.

A		Continuity
BCM connector	Terminal	
M2	50	No
	44	

OK or NG

- OK >> Replace front door lock actuator (driver side).
- NG >> Repair or replace harness.

Check Door Lock Actuator/Passenger Side

INFOID:000000005349354

1. CHECK DOOR LOCK ACTUATOR SIGNAL

Check voltage between BCM connector and ground.




Terminals		Condition of door lock and unlock switch	Voltage (V) (Approx.)
(+)	(-)		
BCM connector	Terminal		
M2	50	Lock	0 → Battery voltage → 0
M3	70	Unlock	0 → Battery voltage → 0

OK or NG

- OK >> GO TO 2.
- NG >> Replace BCM.

2. CHECK DOOR LOCK ACTUATOR CIRCUIT

1. Disconnect BCM and front door lock actuator passenger side connectors.

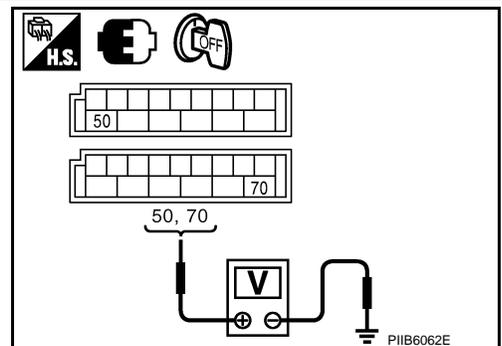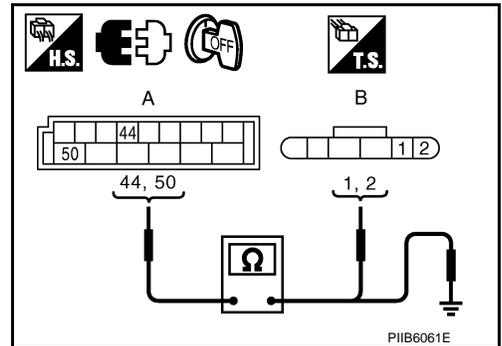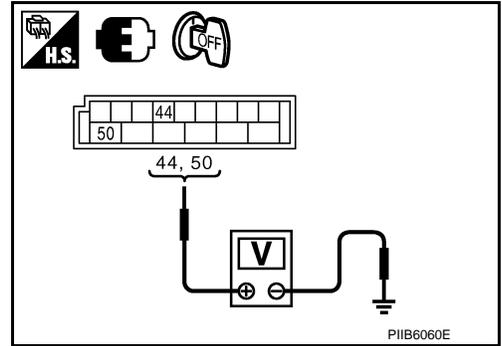

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

BL

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

2. Check continuity between BCM connector and front door lock actuator passenger side.

A		B		Continuity
BCM connector	Terminal	Door lock actuator connector	Terminal	
M2	50	D44	2	Yes
M3	70		1	

3. Check continuity between BCM connector and ground.

A		Continuity
BCM connector	Terminal	
M2	50	Ground
M3	70	

OK or NG

- OK >> Replace front door lock actuator (passenger side).
- NG >> Repair or replace harness.

Check Door Lock Actuator/Rear LH

INFOID:000000005349355

1. CHECK DOOR LOCK ACTUATOR SIGNAL

Check voltage between BCM connector and ground.

Terminals			Condition of door lock and unlock switch	Voltage (V) (Approx.)
(+)		(-)		
BCM connector	Terminal			
M2	50	Ground	Lock	0 → Battery voltage → 0
	51		Unlock	0 → Battery voltage → 0

OK or NG

- OK >> GO TO 2.
- NG >> Replace BCM.

2. CHECK DOOR LOCK ACTUATOR CIRCUIT




1. Disconnect BCM and rear door lock actuator LH connectors.
2. Check continuity between BCM connector and rear door lock actuator LH connectors.

A		B		Continuity
BCM connector	Terminal	Door lock actuator connector	Terminal	
M2	50	D59	2	Yes
	51		1	

3. Check continuity between BCM connector and ground.

A		Continuity
BCM connector	Terminal	
M2	50	Ground
	51	

OK or NG

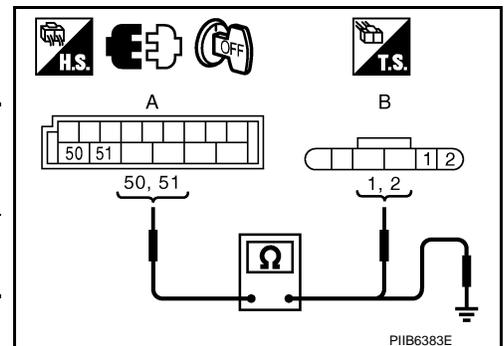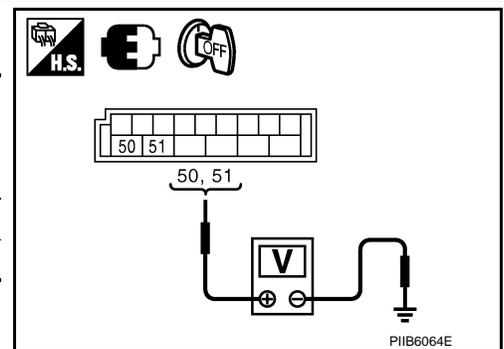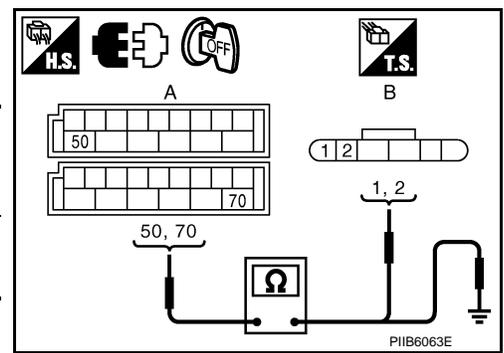

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

- OK >> Replace door lock actuator/rear LH.
- NG >> Repair or replace harness.


Check Door Lock Actuator/Rear RH

INFOID:000000005349356

1. CHECK DOOR LOCK ACTUATOR SIGNAL

Check voltage between BCM connector and ground.

Terminals (+)		(-)	Condition of door lock and unlock switch	Voltage (V) (Approx.)
BCM connector	Terminal			
M2	50	Ground	Lock	0 → Battery voltage → 0
	51		Unlock	0 → Battery voltage → 0

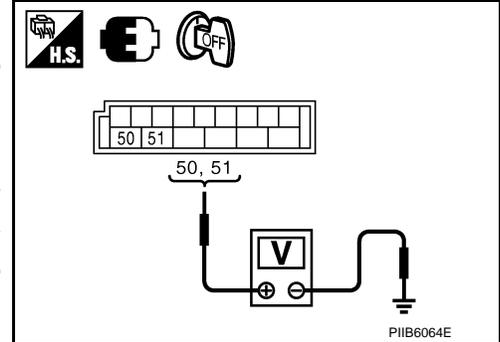


OK or NG

- OK >> GO TO 2.
- NG >> Replace BCM.

2. CHECK DOOR LOCK ACTUATOR CIRCUIT

1. Disconnect BCM and rear door lock actuator RH connectors.
2. Check continuity between BCM connector and rear door lock actuator RH connectors.

A		B		Continuity
BCM connector	Terminal	Door lock actuator connector	Terminal	
M2	50	D79	2	Yes
	51		1	

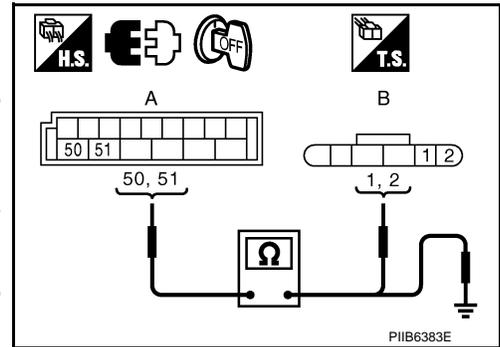

3. Check continuity between BCM connector and ground.

A		Continuity	
BCM connector	Terminal		
M2	50	Ground	No
	51		

OK or NG

- OK >> Replace door lock actuator/rear RH.
- NG >> Repair or replace harness.


Check Fuel Lid Opener Actuator

INFOID:000000005349357

1. CHECK FUEL LID OPENER ACTUATOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM and fuel lid lock actuator connector.
3. Check continuity between BCM connector and fuel lid lock actuator connector.

A		B		Continuity
BCM connector	Terminal	Fuel lid lock actuator connector	Terminal	
M2	44	B477	1	Yes
M3	69		2	

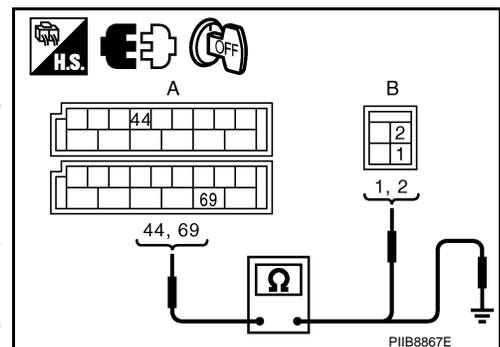

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

4. Check continuity between BCM connector and ground.

A		Continuity
BCM connector	Terminal	
M2	44	No
M3	69	
		Ground

OK or NG

OK >> Replace fuel lid lock actuator.

NG >> Repair or replace harness.

Door Key Cylinder Switch Check

INFOID:000000005349358

1. CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL

ⓐ With CONSULT-III


Check ("KEY CYL LK-SW", "KEY CYL UN-SW") in "DATA MONITOR" mode for "POWER DOOR LOCK SYSTEM" with CONSULT-III.

Monitor item	Condition
KEY CYL LK-SW	Lock : ON
	Neutral / Unlock : OFF
KEY CYL UN-SW	Unlock : ON
	Neutral / Lock : OFF

ⓑ Without CONSULT-III

- Turn ignition switch OFF.
- Check voltage between power window main switch connector and ground.

Terminals		Key position	Voltage (V) (Approx.)
(+)	(-)		
Power window main switch connector	Terminal		
D10	4	Lock	0
		Neutral / Unlock	5
	6	Unlock	0
		Neutral / Lock	5

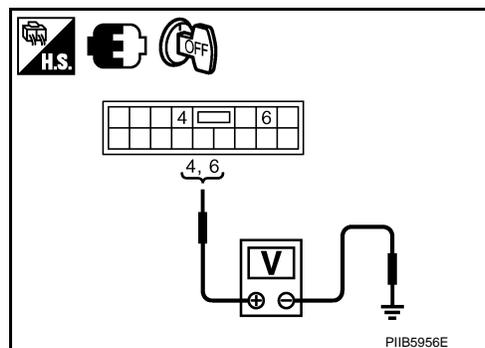

OK or NG

OK >> Key cylinder switch circuit is OK.

NG >> GO TO 2.


2. CHECK HARNESS CONTINUITY

- Disconnect power window main switch and front door key lock assembly (driver side) connector.
- Check continuity between power window main switch connector and front door lock assembly (driver side) connector.

POWER DOOR LOCK SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
Power window main switch connector	Terminal	Front door lock assembly (driver side) connector	Terminal	
D10	4	D14	6	Yes
	6		5	

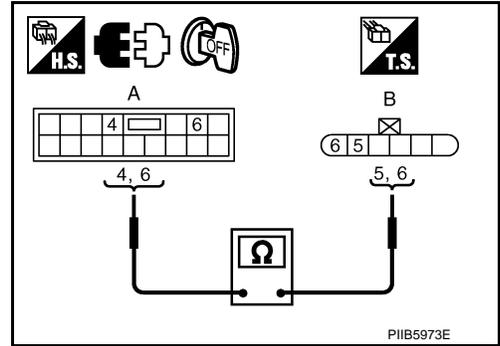


OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace harness.

3. CHECK DOOR KEY CYLINDER SWITCH GROUND

Check continuity between front door lock assembly (driver side) connector ground.

Front door lock assembly (driver side) connector	Terminal	Continuity
D14	4	Ground

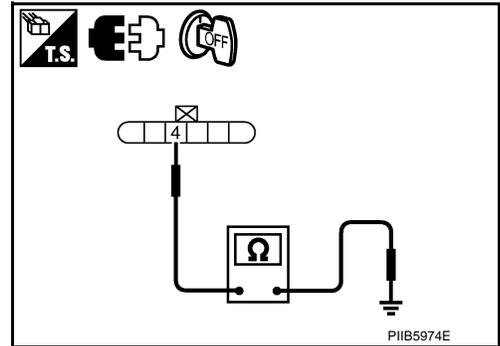


OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace harness.

4. CHECK DOOR KEY CYLINDER SWITCH

Check front door lock assembly (driver side).

Terminal		Key position	Continuity
Front door lock assembly (driver side)			
5	4	Unlock	Yes
		Neutral / Lock	No
6	4	Lock	Yes
		Neutral / Unlock	No

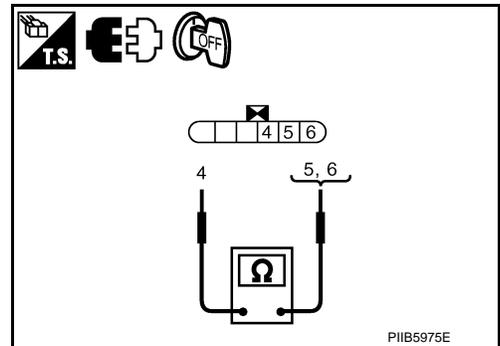

OK or NG

- OK >> INSPECTION END
- NG >> Replace front door key cylinder (driver side) switch.

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

INTELLIGENT KEY SYSTEM

Component Parts and Harness Connector Location

INFOID:000000005349359

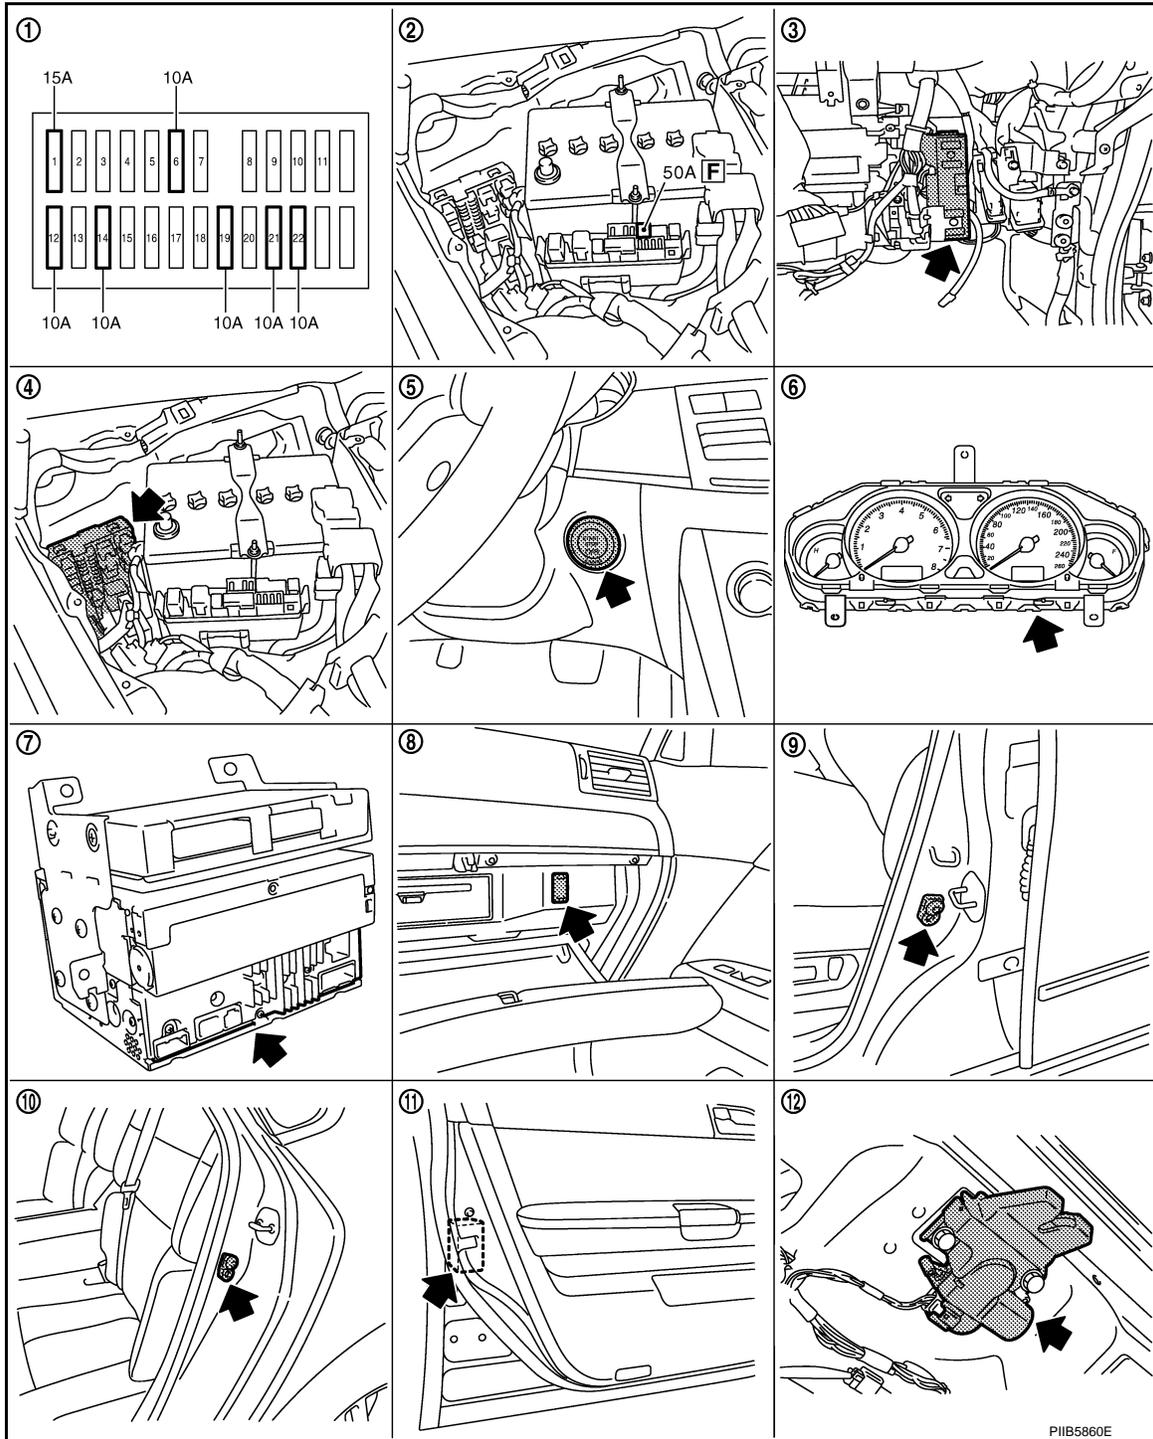


PIIB5860E

- | | | |
|--|--|---|
| 1. Fuse block (J/B) fuse layout | 2. Fuse and fusible link box | 3. BCM M1, M2, M3 (View with instrument lower panel RH removed) |
| 4. IPDM E/R E9 | 5. Push-button ignition switch M27 (Push switch) | 6. Combination meter M52 |
| 7. Unified meter and A/C amp. M64, M65 | 8. Trunk opener cancel switch M99 | 9. Front door switch (Driver side) B11 |
| 10. Rear door switch LH B53 | 11. Front door lock assembly D14 (Unlock sensor) | 12. Trunk lid lock assembly T106 (Trunk room lamp switch) |

INTELLIGENT KEY SYSTEM


< SERVICE INFORMATION >

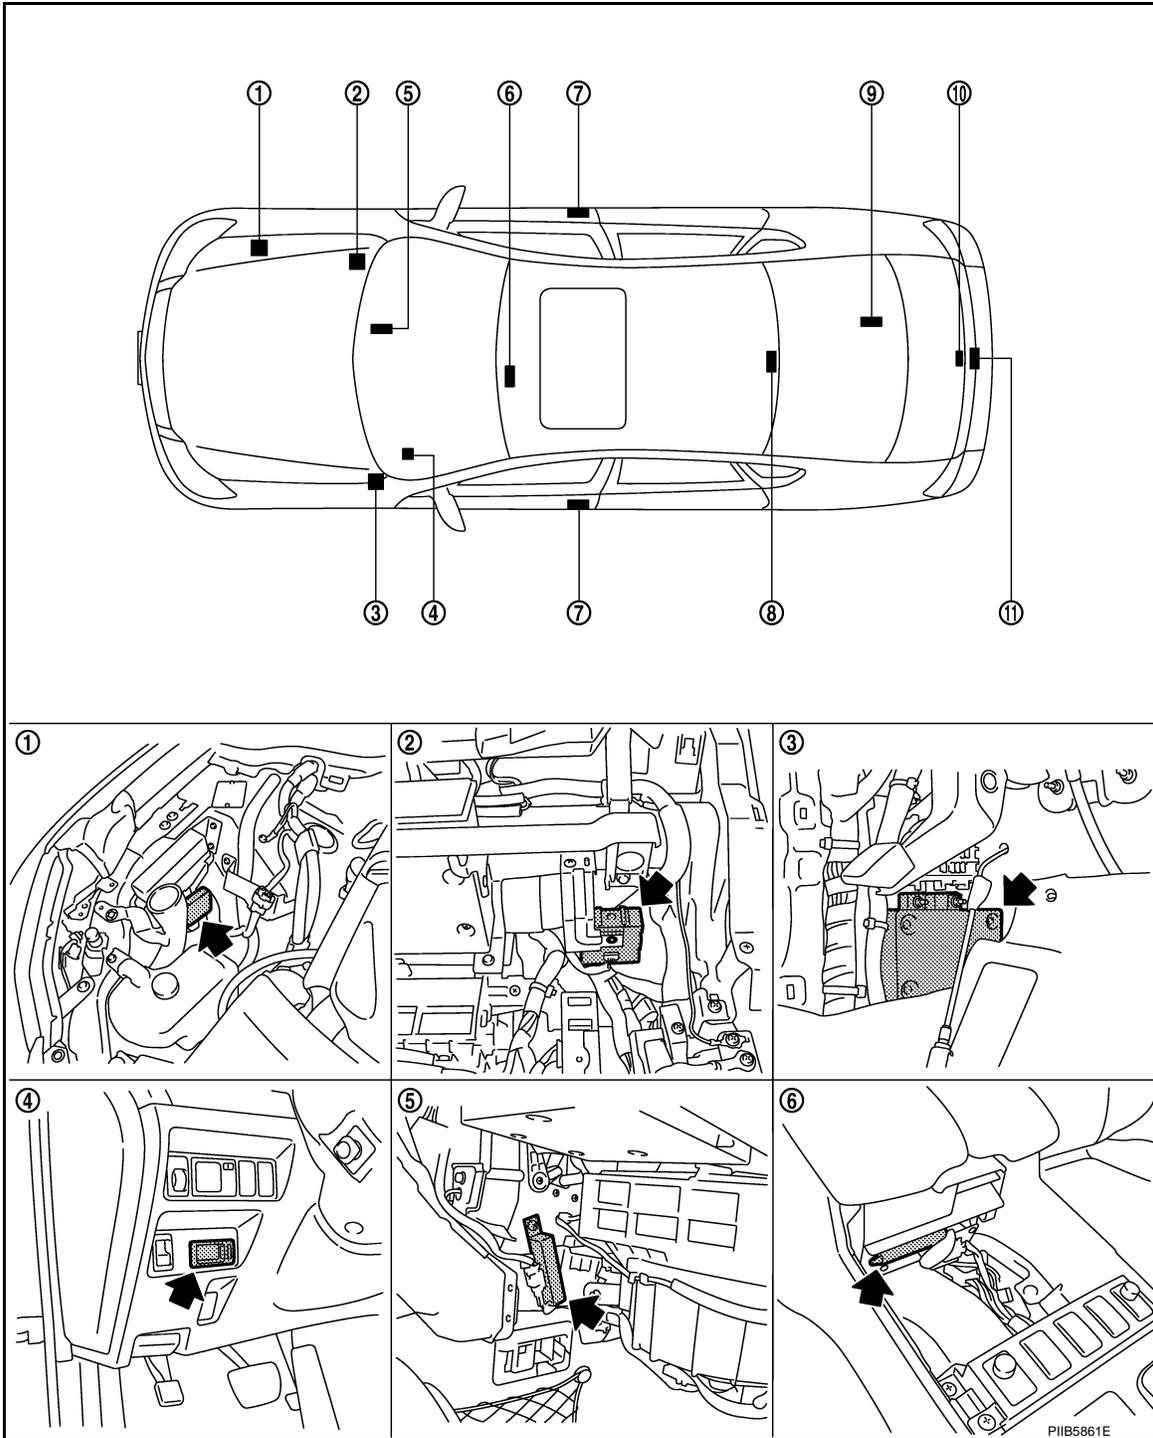

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

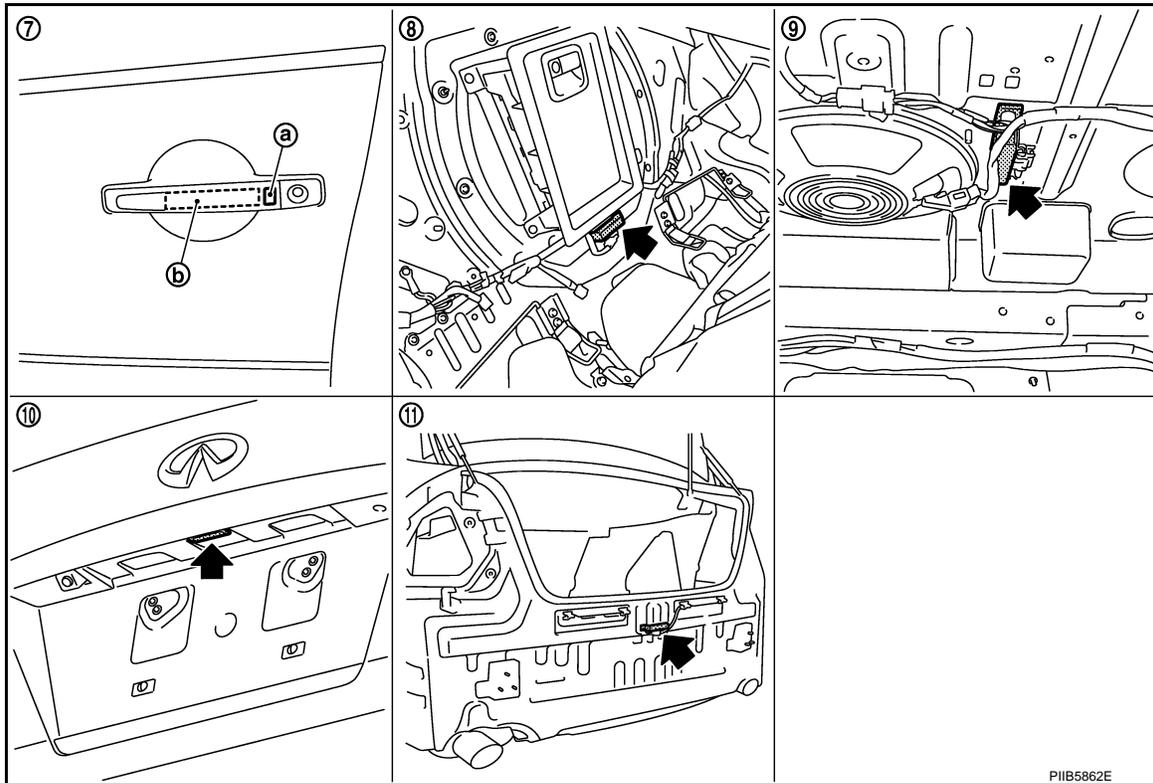

- | | | |
|--|---|---|
| 1. Intelligent Key warning buzzer E37 | 2. Remote keyless entry receiver M89
(View with instrument lower panel RH removed) | 3. Intelligent key unit M32, M33
(View with dash side finisher LH removed) |
| 4. Key slot M14 | 5. Inside key antenna M83
(Instrument center) | 6. Inside key antenna M142
(Console) |
| 7. a: Request switch (Front outside handle LH) D15
b: Outside key antenna D15 | 8. Inside key antenna B45
(Rear seat) | 9. Inside key antenna B473
(Trunk room) |
| 10. Trunk opener request switch T107 | 11. Outside key antenna B121
(Trunk room) | |

System Description

INFOID:000000005349360

- The Intelligent Key system is a system that makes it possible to lock and unlock the door locks (door lock/unlock function), open the trunk (trunk open function), and start the engine (engine start function) by carrying around the Intelligent Key (without some key operation), which operates based on the results of electronic ID verification using two-way communications between the Intelligent Key and the vehicle (Intelligent Key unit).

CAUTION:

The driver should always carry the Intelligent Key

- Operation of the remote controller buttons on the Intelligent Key also provides the same functions as the remote controller entry system. (Remote keyless entry functions)
- If an action that does not meet the operating conditions of the Intelligent Key system is taken, the buzzer goes off to inform the driver. (Warning chime functions)
- When a door lock is locked, unlocked or trunk open with request switch or remote controller button operation, the hazard lamps flash and the Intelligent Key warning buzzer or horn sounds (Hazard and buzzer/horn reminder function).
- Even if the Intelligent Key battery is completely discharged, the door locks can be locked and unlocked with the mechanical key built into the Intelligent Key, and then initiates engine by inserting Intelligent Key into key slot.
- The settings for each function can be changed with the CONSULT-III.
- If an Intelligent Key is lost, a new Intelligent Key can be registered. A maximum of 4 Intelligent Keys can be registered.
- It has been made possible to diagnose the system and register an Intelligent Key with the CONSULT-III.


DOOR LOCK/UNLOCK/TRUNK OPEN FUNCTION

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Only when pressing the request switch, it is possible to lock and unlock the door and open the trunk by carrying around the Intelligent Key (without some key operation).

System Diagram

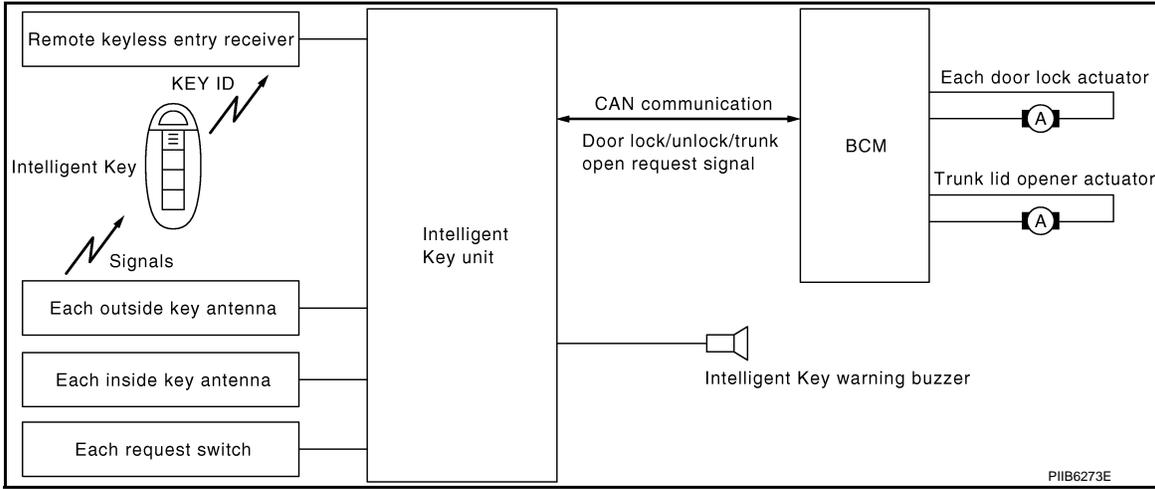

Operation Description/Door Lock/Unlock

- When the Intelligent Key unit detects that each door request switch is pressed, it starts the outside key antenna and inside key antenna corresponding to the pressed door request switch and sends the request signal to the Intelligent Key. And then, make sure that the Intelligent Key is near the door.
- If the Intelligent Key is within the outside key antenna detection area, it receives the request signal and sends the key ID signal to the Intelligent Key unit via remote keyless entry receiver.
- Intelligent Key unit receives the key ID signal and compares it with the registered key ID.
- If the key ID check result is OK, the Intelligent Key unit sends the door lock/unlock request signal to BCM (Body control module) via CAN communication line.
- Intelligent Key unit sends the door lock/unlock signal and sounds Intelligent Key buzzer warning (lock: 1 time, unlock: 2 times) at the same time.
- When BCM receives the door lock/unlock signal, it operates door lock actuator and flashes the hazard lamp (lock: 1 time, unlock: 2 times) at the same time as a reminder.

Operation Description/Trunk Open

- When the Intelligent Key unit detects that trunk open request switch is pressed, it starts the outside key antenna (trunk room) and inside key antenna corresponding to the pressed trunk open request switch and sends the request signal to the Intelligent Key. And then, make sure that the Intelligent Key is near the trunk.
- If the Intelligent Key is within the outside key antenna (trunk room) detection area, it receives the request signal and sends the key ID signal to the Intelligent Key unit via remote keyless entry receiver.
- Intelligent Key unit receives the key ID signal and compares it with the registered key ID.
- If the key ID check result is OK, the Intelligent Key unit sends trunk open request signal to BCM (Body control module) via CAN communication line.
- Intelligent Key unit sends the trunk open request signal and sounds Intelligent Key warning buzzer 4 times at the same time.
- When BCM receives the trunk open request signal, it operates the trunk lid opener actuator and opens the trunk.

Operation Condition

If the following conditions are not satisfied, door lock/unlock or trunk open operations are not performed even if the request switch is operated.

Each request switch operation	Operation condition
Lock operation	<ul style="list-style-type: none"> • All doors are closed • Ignition switch is in OFF position • Intelligent Key is out of key slot • Intelligent Key is outside the vehicle • Intelligent Key is within outside key antenna detection area

INTELLIGENT KEY SYSTEM


< SERVICE INFORMATION >

Each request switch operation	Operation condition
Unlock Operation	<ul style="list-style-type: none"> Intelligent Key is outside the vehicle Intelligent Key is within outside key antenna detection area *
Trunk open operation	<ul style="list-style-type: none"> Intelligent Key is within outside key antenna (trunk room) detection area* Trunk cancel switch is ON Key reminder functions operate (trunk)

*: Even with a registered Intelligent Key remain inside the vehicle, door locks can be unlock from outside of the vehicle with a spare Intelligent Key as long as key IDs are different.

Outside Key Antenna Detection Area

The outside key antenna detection area of door lock/unlock function is in the range of approximately 80 cm (31.50 in) surrounding the driver and passenger door handles (1). The outside key antenna detection area of trunk open function is in the range of approximately 80 cm (31.50 in) surrounding Trunk opener request switch (2). However, this operating range depends on the ambient conditions.

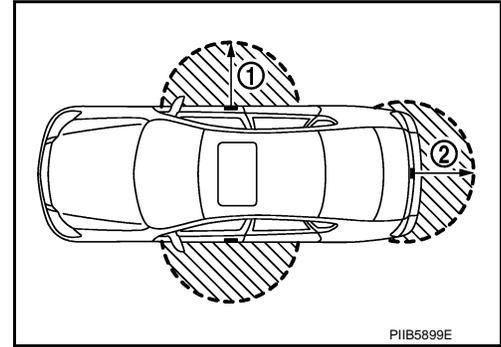

Key Reminder Function

Key reminder functions have the following 3 functions.

Key remainder function	Operation condition	Operation
Driver door close*	Right after driver side door is closed under the following conditions <ul style="list-style-type: none"> Door lock operation is performed Driver side door is opened Driver side door is in unlock state 	All doors unlock
Door is open or closed	Right after all doors are closed under the following conditions <ul style="list-style-type: none"> Intelligent Key is inside the vehicle Any door is opened All doors are locked by door lock and unlock switch or door lock knob 	<ul style="list-style-type: none"> All doors unlock Honk Intelligent Key warning buzzer
Trunk is closed	Right after trunk is closed under the following conditions <ul style="list-style-type: none"> Intelligent Key is inside trunk room all doors are closed all doors are locked 	<ul style="list-style-type: none"> Trunk open Honk Intelligent Key warning buzzer

*:If the door closing impact shocks the door lock knob, or contacts against baggage with the door lock knob might activate the door locks accidentally but unlock operation will be perform at these cases.

CAUTION:

- The above function operates when the Intelligent Key is inside the vehicle. However, there may be times when the Intelligent Key cannot be detected, and this function will not operate when the Intelligent Key is on the instrument panel, rear parcel shelf, or in the glove box. Also, this system sometimes does not operate if the Intelligent Key is in the door pocket for the open door.**
- When the key reminder function is operated when the trunk is open/closed and the buzzers sound, if the following operations are performed, the key reminder function is cleared and buzzer sounds are stopped.**
 - Remote controller door lock button operation of Intelligent Key
 - Remote controller door unlock button operation of Intelligent Key
 - When the trunk is closed, the Intelligent Key is not inside the vehicle
 - When any door is open

Selective Unlock Function

When an LOCK signal is sent from door request switch (driver side or passenger side), all doors will be locked. When an UNLOCK signal is sent from door request switch (driver side or passenger side) once, driver's door will be unlocked.

Then, if an UNLOCK signal is sent from door request switch (driver side and passenger side) again within 5 seconds, all other door will be unlocked.

Hazard and Buzzer Reminder Function

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

During lock, unlock, or trunk opening operation by each request switch, the hazard warning lamps and Intelligent Key warning buzzer will flashes or honk as a reminder.

When doors are locked, unlocked or trunk open by each request switch, Intelligent Key unit honks Intelligent Key warning buzzer as a reminder and sends hazard request signal to BCM via CAN communication line. BCM flashes hazard warning lamps as a reminder.

Operating function of hazard and buzzer reminder

Operation	Hazard warning lamp flash	Intelligent Key warning buzzer honk
Unlock	Once	Once
Lock	Twice	Twice
Trunk open	—	Fourth

How to change hazard and buzzer reminder mode

With CONSULT-III

Hazard and buzzer reminder can be changed using “HAZARD ANSWER BACK”, “ANSWER BACK WITH I-KEY LOCK” and “ANSWER BACK WITH I-KEY UNLOCK” mode in “WORK SUPPORT”. Refer to [BL-74, "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

Auto Door Lock Function

When all doors are locked, ignition switch is in OFF position and key switch is OFF (Intelligent Key is not inserted in key slot), doors are unlocked with door request switch

When Intelligent Key unit does not receive the following signals within 60 seconds, all doors are locked.

- Door switch is ON (door is opened)
- Door is locked
- Ignition switch is ON (ignition switch is pressed)
- Key switch is ON (Intelligent Key is inserted in key slot)

Auto door lock mode can be changed by “AUTO RELOCK TIMER” mode in “WORK SUPPORT”. Refer to [BL-74, "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

Room Lamp Operation

When the following conditions are met:

- Condition of interior lamp switch is in DOOR position
- Door switch OFF (all the doors are closed)

Intelligent Key system turns on interior lamp (for 30 seconds) by receiving UNLOCK signal from door request switch. For detailed description, refer to [LT-202, "System Description"](#).

List of Operation Related Parts

Parts marked with × are the parts related to operation.

Door lock/trunk open function	Intelligent Key	Key slot	Remote keyless entry receiver	Door switch	Trunk room lamp switch	Door request switch (Driver, Passenger)	Trunk opener request switch	Door lock actuator	Trunk lid opener actuator	Inside key antenna	Outside key antenna (Driver, Passenger)	Outside key antenna (Trunk)	Intelligent Key warning buzzer	Intelligent Key unit	CAN communication system	BCM	Hazard warning lamp	Trunk lid opener cancel switch	Push-button ignition switch
Door lock/unlock function by request switch	×	×	×	×		×		×		×	×			×	×	×			
Trunk open function by the trunk opener request switch	×	×	×		×		×		×			×		×	×	×		×	
Hazard and buzzer reminder function for door lock/unlock operation													×	×	×	×	×		
Buzzer reminder for trunk open operation													×	×	×	×			
Key reminder function	×	×	×	×		×		×		×	×	×	×	×	×	×	×		

INTELLIGENT KEY SYSTEM


< SERVICE INFORMATION >

Door lock/trunk open function	Intelligent Key	Key slot	Remote keyless entry receiver	Door switch	Trunk room lamp switch	Door request switch (Driver, Passenger)	Trunk opener request switch	Door lock actuator	Trunk lid opener actuator	Inside key antenna	Outside key antenna (Driver, Passenger)	Outside key antenna (Trunk)	Intelligent Key warning buzzer	Intelligent Key unit	CAN communication system	BCM	Hazard warning lamp	Trunk lid opener cancel switch	Push-button ignition switch
Selective unlock function by request switch (Driver side)	×					×		×		×	×			×	×	×			
Selective unlock function by request switch (Passenger side)	×					×		×		×	×			×	×	×			
Auto door lock function	×	×		×		×		×						×	×	×			×

REMOTE KEYLESS ENTRY FUNCTIONS

The Intelligent Key has the same functions as the remote control entry system. Therefore, it can be used in the same manner as the remote controller by operating the door lock/unlock button and trunk open button.

System Diagram

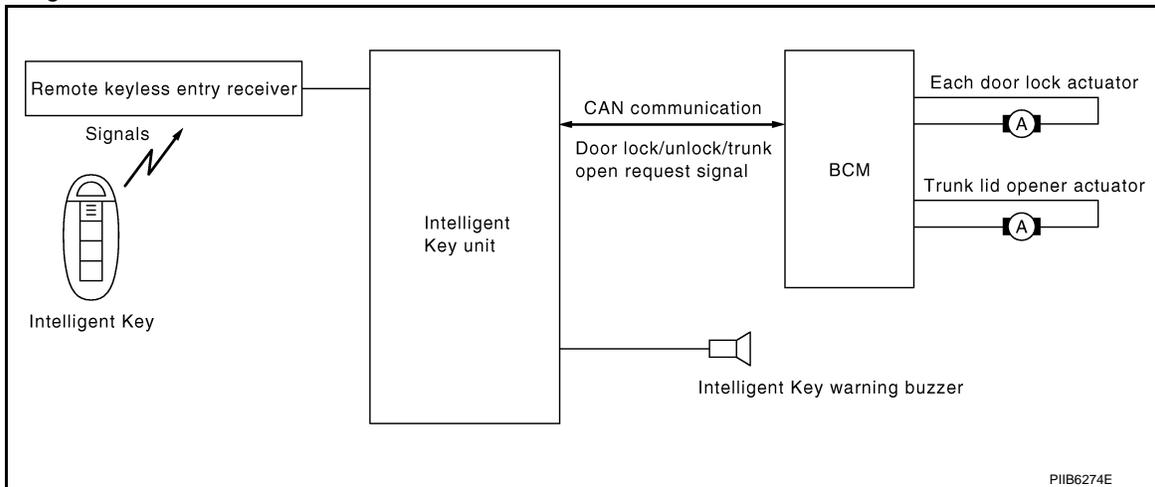

Operation Description/Door Lock/Unlock Function

- When door lock/unlock button of the Intelligent Key is pressed, lock signal or unlock signal is sent from Intelligent Key to Intelligent Key unit via remote keyless entry receiver.
- Intelligent Key unit sends the door lock/unlock request signal to BCM via CAN communication line.
- Intelligent Key unit sends the door lock/unlock signal to BCM.
- When BCM receives the door lock/unlock signal, it operates door lock actuator, flashes the hazard lamp (lock: 1 time, unlock: 2 times) and horn chirp signal to IPDM E/R at the same time as a reminder.
- IPDM E/R honks horn (lock: 1 time) as a reminder

Operation Description/Trunk Open Function

- When trunk button of the Intelligent Key is pressed, the trunk open signal is sent from the Intelligent Key to the Intelligent Key unit via remote keyless entry receiver.
- Intelligent Key unit sends trunk open request signal to BCM via CAN communication line.
- When BCM receives the trunk open request signal, it operates the trunk lid opener actuator and opens the trunk.

Operation Condition

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Remote controller operation	Operation condition	Operation
Lock	<ul style="list-style-type: none"> All doors closed 	All doors lock
Unlock	<ul style="list-style-type: none"> Intelligent Key is out of key slot 	All doors unlock
Trunk open	<ul style="list-style-type: none"> Press and hold the trunk open button for 0.5 second or more 	Trunk open

Operation Area

- Operating Range
- To ensure the Intelligent Key works effectively, use within 100 cm range of each doors, however the operable range might be differ by surroundings.

Selective Unlock Function

When an LOCK signal is sent from Intelligent Key, all doors will be locked.

When an UNLOCK signal is sent from Intelligent Key once, driver's door will be unlocked.

Then, if an UNLOCK signal is sent from Intelligent Key again within 5 seconds, all other door will be unlocked.

Hazard and Horn Reminder Function

When doors are locked or unlocked by Intelligent Key, Intelligent Key unit sends hazard and horn request signal to BCM via CAN communication line.

BCM flashes hazard warning lamps as a reminder and sends horn chirp signal to IPDM E/R. IPDM E/R sounds horn as a reminder.

The hazard and horn reminder has a horn chirp mode (C mode) and a non-horn chirp mode (S mode).

Operating function of hazard and horn reminder

	C mode			S mode		
	Lock	Unlock	Trunk open	Lock	Unlock	Trunk open
Intelligent Key operation	Lock	Unlock	Trunk open	Lock	Unlock	Trunk open
Hazard warning lamp flash	Twice	Once	—	Twice	—	—
Horn sound	Once	—	—	—	—	—

Hazard and horn reminder does not operate if any door switch is ON (any door is OPEN).


How to change hazard and horn reminder mode

With CONSULT-III

Hazard and horn reminder can be changed using "HORN WITH KEYLESS LOCK" and "HAZARD ANSWER BACK" mode in "WORK SUPPORT". Refer to [BL-74, "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

Without CONSULT-III

When LOCK and UNLOCK signals are sent from the Intelligent Key for more than 2 seconds at the same time, the hazard and horn reminder mode is changed and hazard warning lamp flashes and horn sounds as follows:

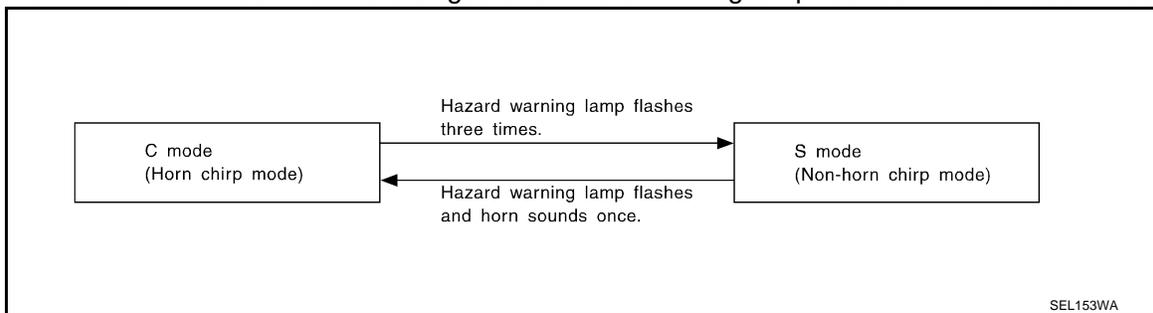

Auto Door Lock Function

When all doors are locked, ignition switch is OFF (ignition switch is not pressed) and key switch is OFF (Intelligent Key is not inserted in key slot), doors are unlocked with Intelligent Key button. When Intelligent Key unit does not receive the following signals within 30 seconds, all doors are locked.

- Door switch is ON (door is opened)
- Door is locked
- Ignition switch is ON
- Key switch is ON (Intelligent Key is inserted in key slot)

Auto door lock mode can be changed by "AUTO RELOCK TIMER" mode in "WORK SUPPORT". Refer to [BL-74, "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

Panic Alarm Function

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

When ignition switch is OFF (ignition switch is not pressed) and key switch is OFF (Intelligent Key is not inserted in key slot), Intelligent Key unit receives PANIC ALARM signal from Intelligent Key.

Intelligent Key unit sends alarm request signal to BCM via CAN communication line.

BCM turns on and off headlamp intermittently and sends theft warning horn signal to IPDM E/R. Then, IPDM E/R turns on and off horn intermittently.

The headlamp flashes and the horn sounds intermittently.

The alarm automatically turns off:

- After 25 seconds
- When Intelligent Key unit receives any signal from Intelligent Key
- When door request switch is pressed (Intelligent Key is within the outside key antenna detection area)

Panic alarm function mode can be changed by "PANIC ALARM DELAY" mode in "WORK SUPPORT". Refer to [BL-74, "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

Keyless Power Window Down (Open) Function

All power windows open when the unlock button on Intelligent Key is activated and kept pressed for more than 3 seconds with the ignition switch OFF. The windows keep opening if the unlock button is continuously pressed.

The power window opening stops when the following operations are performed:

- When the unlock button is kept pressed more than 15 seconds.
- When the ignition switch is turned ON while the power window opening is operated.
- When the unlock button is released.

While retained power operation activate, Keyless power window down (open) Function cannot be operated.

Keyless power window down operation mode can be changed by "P/W DOWN DELAY" mode in "WORK SUPPORT". Refer to [BL-74, "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

Room Lamp Illumination Operation

When the following conditions are met:

- Condition of interior lamp switch is in DOOR position
- Door switch OFF (all the doors are closed)

Intelligent Key system turns on interior lamp (for 30 seconds) by receiving UNLOCK signal from Intelligent Key. For detailed description, refer to [LT-202, "System Description"](#).

List of Operation Related Parts

Parts marked with × are the parts related to operation.

Remote keyless entry functions	Intelligent Key	Key slot	Door request switch (Driver, Passenger)	Door switch	Trunk room lamp switch	Door lock actuator	Trunk lid opener actuator	Intelligent Key warning buzzer	Intelligent Key unit	CAN communication system	BCM	Combination meter	Hazard warning lamp	Horn	IPDM E/R	Head lamp
Door lock/unlock function by remote control button	×	×		×		×			×	×	×					
Trunk open function by remote control button	×	×			×		×		×	×	×					
Hazard and horn reminder function	×							×	×	×	×	×	×	×	×	
Selective unlock function	×			×		×			×	×	×					
Keyless power window down (open) function	×	×							×	×	×					
Auto door lock function	×	×		×					×	×	×					
Panic alarm function	×		×						×	×	×			×	×	×

ENGINE START FUNCTION

Refer to [BL-115](#).

WARNING FUNCTION

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Operation Description

The warning function are as follows and are given to the user as warning information and warnings using combinations of Intelligent Key warning buzzer, KEY warning lamp, key slot illumination and combination meter display in combination meter.

- Intelligent Key system malfunction
- OFF position warning
- P position warning
- ACC warning
- Take away warning
- Door lock operation warning
- Key warning
- Intelligent Key insert information
- Engine start information
- Steering lock information
- Intelligent key low battery warning
- Key ID warning

Operation Condition

Once the following condition from below is established, alert or warning will be executed.

Warning/Information functions		Operation procedure
Intelligent Key system malfunction		When a malfunction is detected on Intelligent Key unit, "KEY" warning lamp will illuminate.
OFF position warning	For internal	<ul style="list-style-type: none"> • Ignition switch: ACC position. • Door switch (driver side): ON (Door is open).
	For external	OFF position warning (For internal) is in active mode, driver side door has been closed. NOTE: OFF position (For external) active only when each of the sequence has occurred as below: P position warning → ACC warning → OFF position warning (For internal) → OFF position warning (For internal)
P position warning		<ul style="list-style-type: none"> • Shift position: Except P position • Engine is running to stopped (Ignition switch is ON to ACC)
ACC warning		<ul style="list-style-type: none"> • During P position warning is in active mode, shift position has changed P position. • Ignition switch: Except OFF position.
Take away warning	Door is open to close	<ul style="list-style-type: none"> • Ignition switch: Except OFF position. • Door switch: ON to OFF (Door is open to close). • Intelligent Key can not be detected inside the vehicle.
	Door is open	<ul style="list-style-type: none"> • Door switch: ON (Door is open) • Key ID vilification every 5 seconds when registered Intelligent Key can not be detected inside the vehicle.
	Push-ignition switch operation	<ul style="list-style-type: none"> • Ignition switch: Except OFF position. • Press ignition switch. • Intelligent Key can not be detected inside the vehicle.
	Take away through window	<ul style="list-style-type: none"> • Engine is running. • Key ID vilification every 30 seconds when registered Intelligent Key can not be detected inside the vehicle. • After vehicle speed verification, the registered Intelligent Key can not be detect inside the vehicle.
	Intelligent Key is removed from key slot	<ul style="list-style-type: none"> • When Intelligent Key is removed from key slot, Intelligent Key can not be detected inside the vehicle.
Door lock operation warning	Request switch operation	When request switch is pushed (lock operation) under the following conditions. <ul style="list-style-type: none"> • Door switch: ON (Any door is open). • Intelligent Key is inside vehicle.
	Intelligent Key button operation	When Intelligent Key bottom is pushed (lock operation) under the following conditions. <ul style="list-style-type: none"> • Door switch: ON (Any door is open). • For 3 seconds after Intelligent Key is removed from key slot.

INTELLIGENT KEY SYSTEM


< SERVICE INFORMATION >

Warning/Information functions		Operation procedure
Key warning		<ul style="list-style-type: none"> Ignition switch is OFF position. Driver side door switch: ON (Driver side door is open). Intelligent Key is inserted in key slot.
Intelligent Key insert information		<ul style="list-style-type: none"> Door switch: ON to OFF (Door is open to close). Ignition switch: OFF to ON position. Intelligent Key is out of key slot. Intelligent Key can not be detected inside the vehicle.
Engine start information	Ignition switch is ON position	<ul style="list-style-type: none"> Ignition switch: ON position. Shift position: P position Engine is stopped
	Ignition switch is except ON position	<ul style="list-style-type: none"> Ignition switch: Except ON position. Shift position: P position Intelligent Key is inserted in key slot. Intelligent Key can be detected inside the vehicle.
Steering lock information		When steering lock can not be released after ignition switch is turned ON.
Intelligent Key low battery warning		When Intelligent Key is low battery, Intelligent Key unit is detected after ignition switch is turned ON.
Key ID warning		When registered Intelligent Key can not be detected inside the vehicle after ignition switch is turned ON.

Warning Method

The following table shows the alarm or warning methods with chime.

Meter display, "KEY" indicator or key slot illumination when the warning conditions are met.

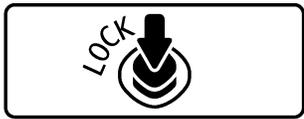Warning/Information functions		"KEY" warning lamp	Combination meter display	Key slot illumination	Warning chime	
					Combination meter buzzer	Intelligent Key warning buzzer
Intelligent Key system malfunction		Illuminate	—	—	—	—
OFF position warning	For internal	—	—	—	Activate	—
	For external	—	—	—	—	Activate
P position warning		—	 P11B4765J	—	Activate	—
ACC warning		—	 P11B4766J	—	Activate	—


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Warning/Information functions		"KEY" warning lamp	Combination meter display	Key slot illumination	Warning chime		
					Combination meter buzzer	Intelligent Key warning buzzer	
Take away warning	Door is open to close	—	 PIIB6452E	Flash	Activate	Activate	A
	Door is open	—		Flash	—	—	B
	Push-ignition switch operation	—		Flash	Activate	—	C
	Take away through window	—		Flash	Activate	—	D
	Intelligent Key is removed from key slot	—		Flash	—	—	E
Door lock operation warning	Request switch operation	—	—	—	—	Activate	F
	Intelligent Key operation	—	—	—	—	Activate	F
Key warning		—	 PIIB4769J	Flash	Activate	—	G
Intelligent Key insert information		—	 PIIB4768J	Flash	—	—	H
Engine start information	Ignition switch is ON position	—	 PIIB4771J	—	—	—	BL
	Ignition switch is except ON position	—	 PIIB4770J	—	—	—	J
Steering lock information		—	 PIIB4772J	—	—	—	K

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

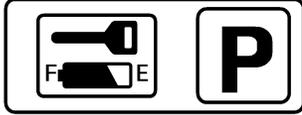Warning/Information functions	"KEY" warning lamp	Combination meter display	Key slot illumination	Warning chime	
				Combination meter buzzer	Intelligent Key warning buzzer
Intelligent Key low battery warning	—	 PIIB4774J	—	—	—
Key ID warning	—	 PIIB4773J	—	—	—

List of Operation Related Parts

Parts marked with × are the parts related to operation.

Warning function		Intelligent Key	Key slot	Ignition switch	Door switch	Door request switch	Inside key antenna	Outside key antenna	Intelligent Key warning buzzer	Combination meter warning buzzer	Intelligent Key unit	CAN communication system	BCM	Combination meter display	Key slot illumination	Transmission range switch	"KEY" warning lamp
Intelligent Key system malfunction											×	×					×
OFF position warning	For internal				×					×	×	×	×				
	For external				×				×		×	×	×				
P position warning				×						×	×	×		×		×	
ACC warning				×						×	×	×		×		×	
Take away warning	Door is open or close	×			×		×		×	×	×	×	×	×	×		
	Door is open	×			×		×			×	×	×	×	×	×		
	Push-ignition switch operation	×		×			×			×	×	×		×	×		
	Take away through window	×					×			×	×	×		×	×		
	Intelligent Key is removed from key slot	×	×				×				×	×		×	×		
Door lock operation warning		×	×		×	×	×	×	×		×	×	×				
Key warning		×	×		×					×	×	×	×	×	×		
Intelligent Key insert information		×	×	×	×		×				×	×	×	×	×		
Engine start information	Ignition switch is ON position	×	×	×			×				×	×		×		×	
	Ignition switch is except ON position	×	×	×			×				×	×		×			

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Warning function	Intelligent Key	Key slot	Ignition switch	Door switch	Door request switch	Inside key antenna	Outside key antenna	Intelligent Key warning buzzer	Combination meter warning buzzer	Intelligent Key unit	CAN communication system	BCM	Combination meter display	Key slot illumination	Transmission range switch	"KEY" warning lamp
Steering lock information			×							×	×		×			
Intelligent Key low battery warning	×					×				×	×		×			
Key ID warning	×	×	×			×				×	×		×			

CHANGE SETTINGS FUNCTION

The settings for each function can be changed with the CONSULT-III.

Changing Settings Using CONSULT-III

The settings for the Intelligent Key system functions can be changed using CONSULT-III (WORK SUPPORT). Refer to [BL-74, "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

NOTE:

Once a function setting is changed, it will remain effective even if the battery is disconnected.

INTELLIGENT KEY REGISTRATION

Intelligent Key-ID registration is performed using the CONSULT-III.

CAUTION:

- After a new Intelligent Key-ID is registered, be sure to check the function.
- When registering an additional Intelligent Key-ID, take any Intelligent Keys already registered and Intelligent Keys for any other vehicles out of the vehicle before starting.

CONSULT-III can be used to check and delete Intelligent Key-IDs.

For future information, see Technical Bulletin.

STEERING LOCK UNIT REGISTRATION

Steering Lock Unit ID Registration

CAUTION:

- The method for registering a steering lock unit ID depends on the status of the steering lock unit and Intelligent Key unit (new or old unit).
- After registration is completed, press ignition switch with an Intelligent Key in the vehicle so that it can be turned, and confirm that it cannot be turned even when ignition switch is pressed without an Intelligent Key in the vehicle.

For future information, see Technical Bulletin.

CAN Communication System Description

INFOID:000000005349361

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

INFOID:000000005349362


Refer to [LAN-29, "CAN System Specification Chart"](#)

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Schematic


INFOID:00000005349363

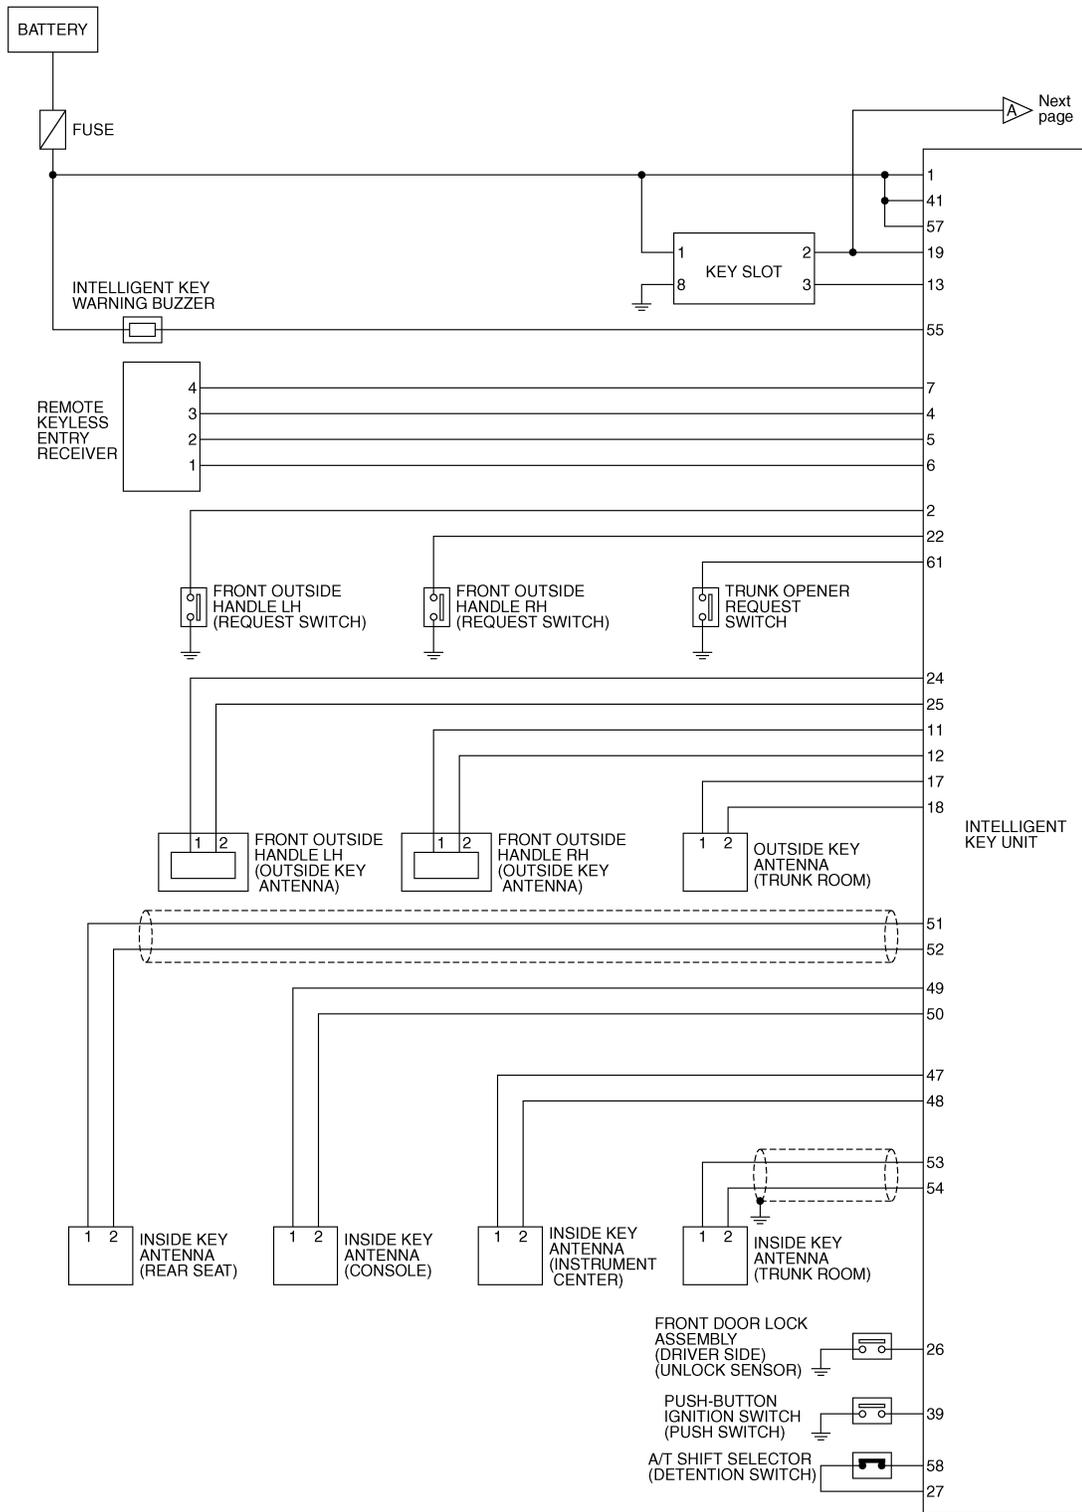

TIWT3137E

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

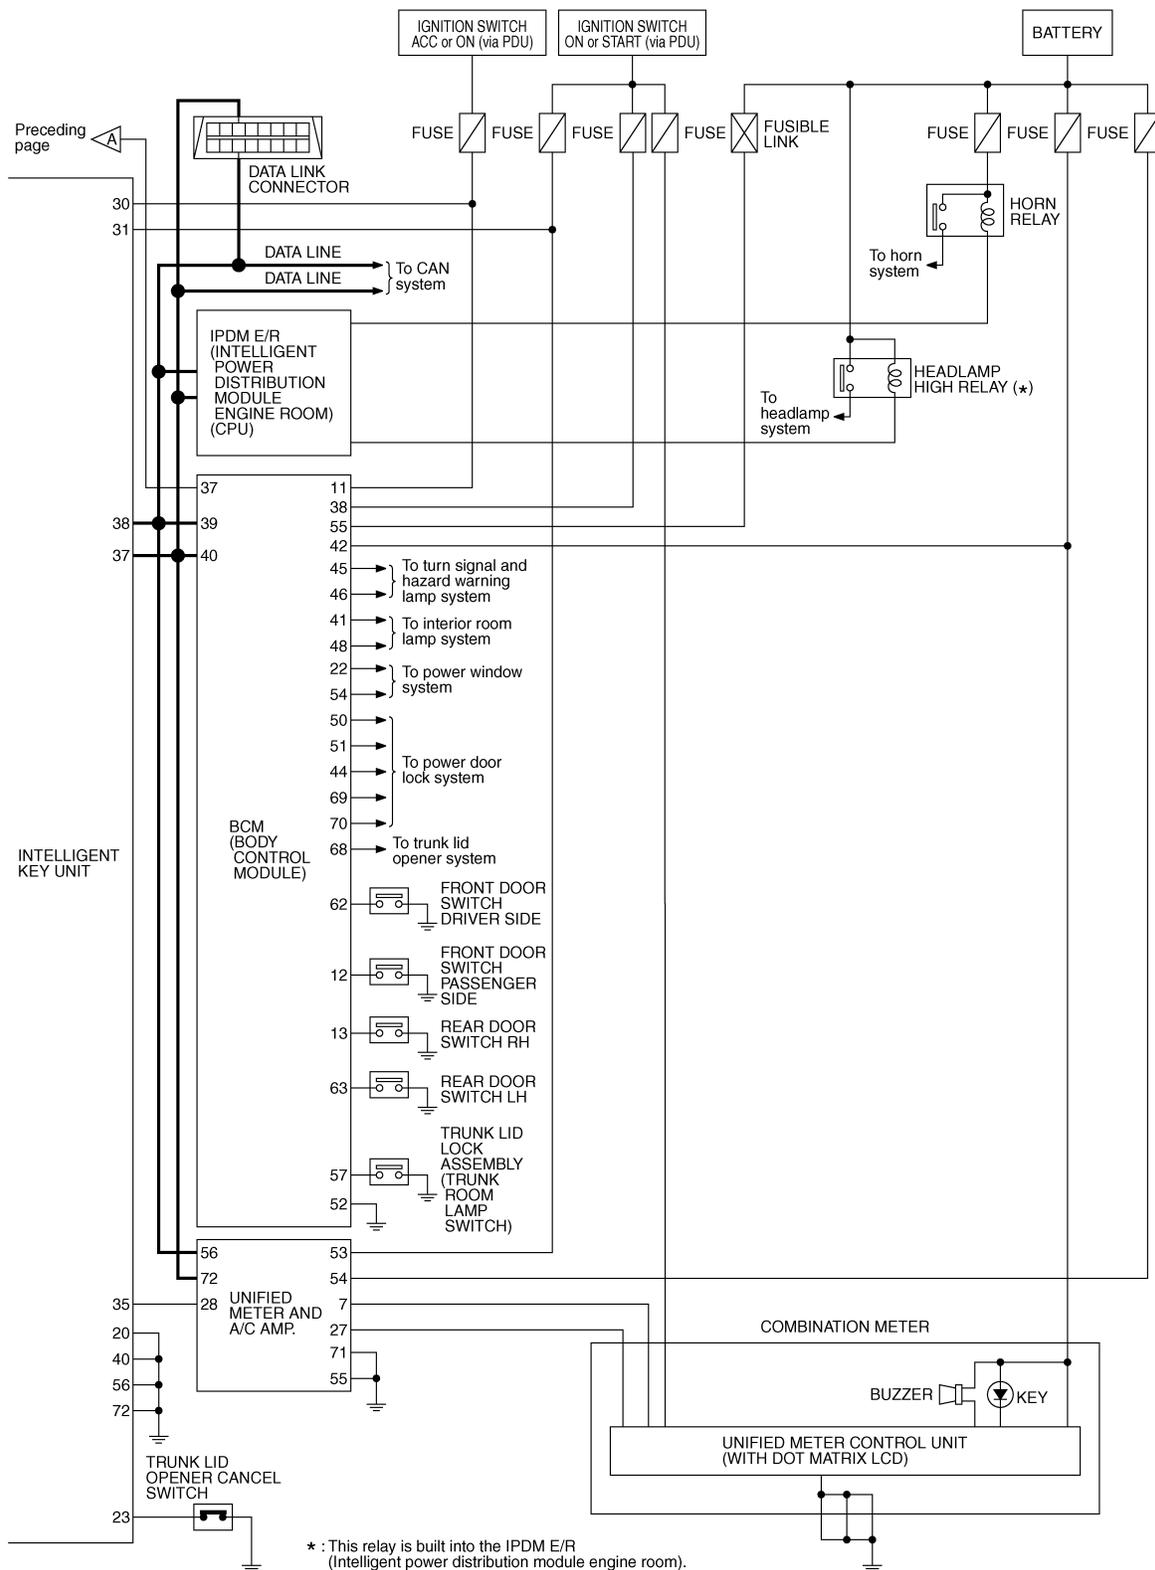

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P



INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >


Wiring Diagram - I/KEY-

INFOID:000000005349364

BL-I/KEY-01

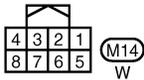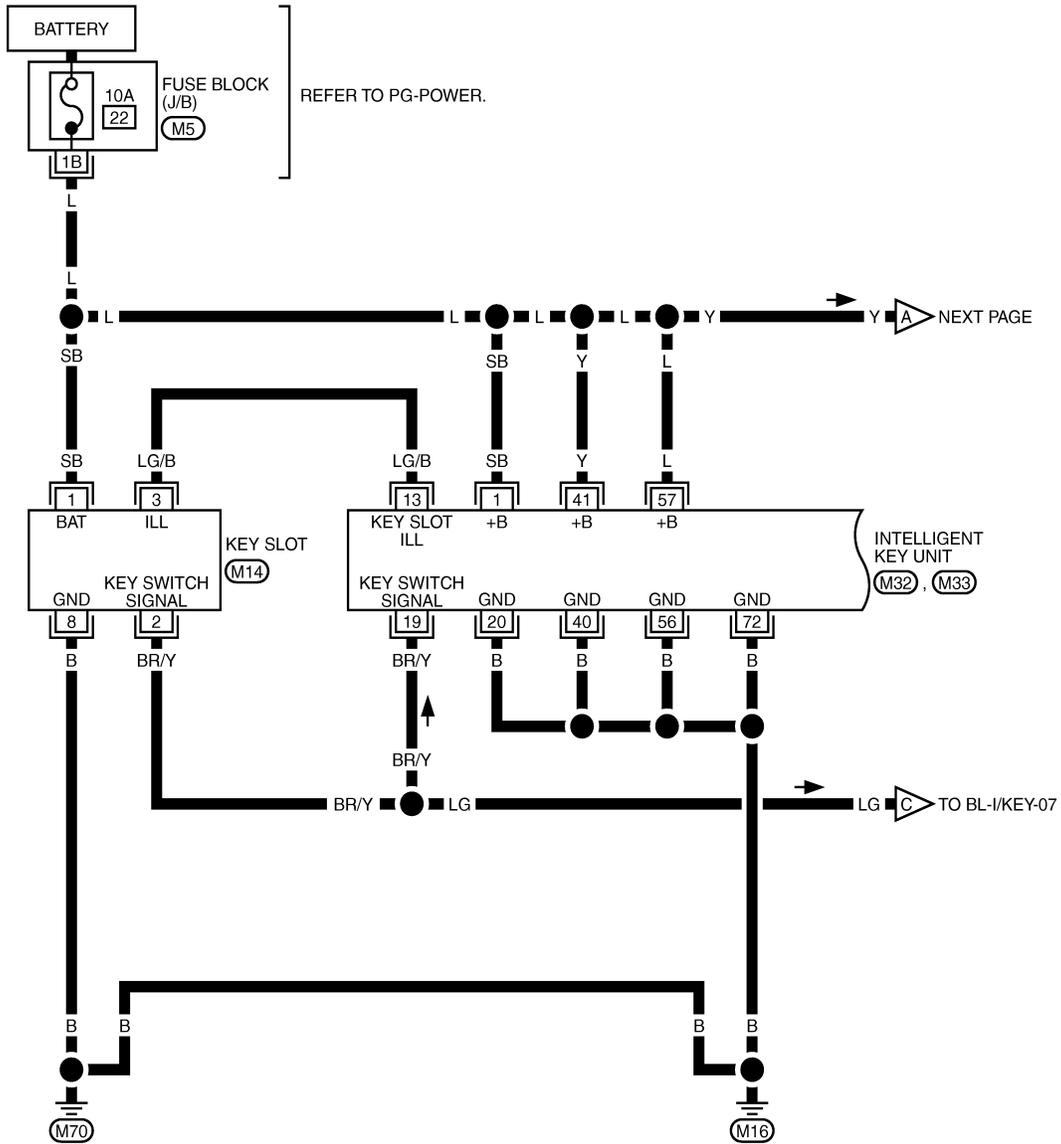

REFER TO THE FOLLOWING.
 M5 - FUSE BLOCK - JUNCTION BOX (J/B)


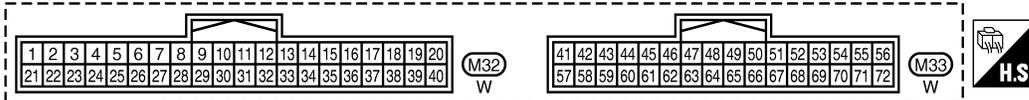


TIWT2604E

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

BL-I/KEY-02

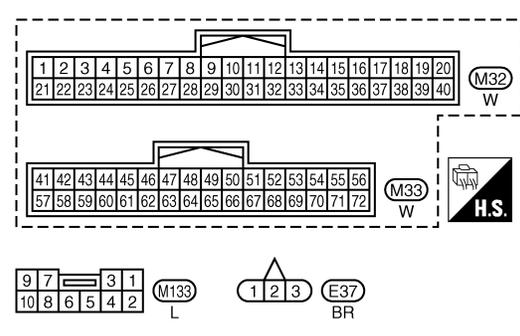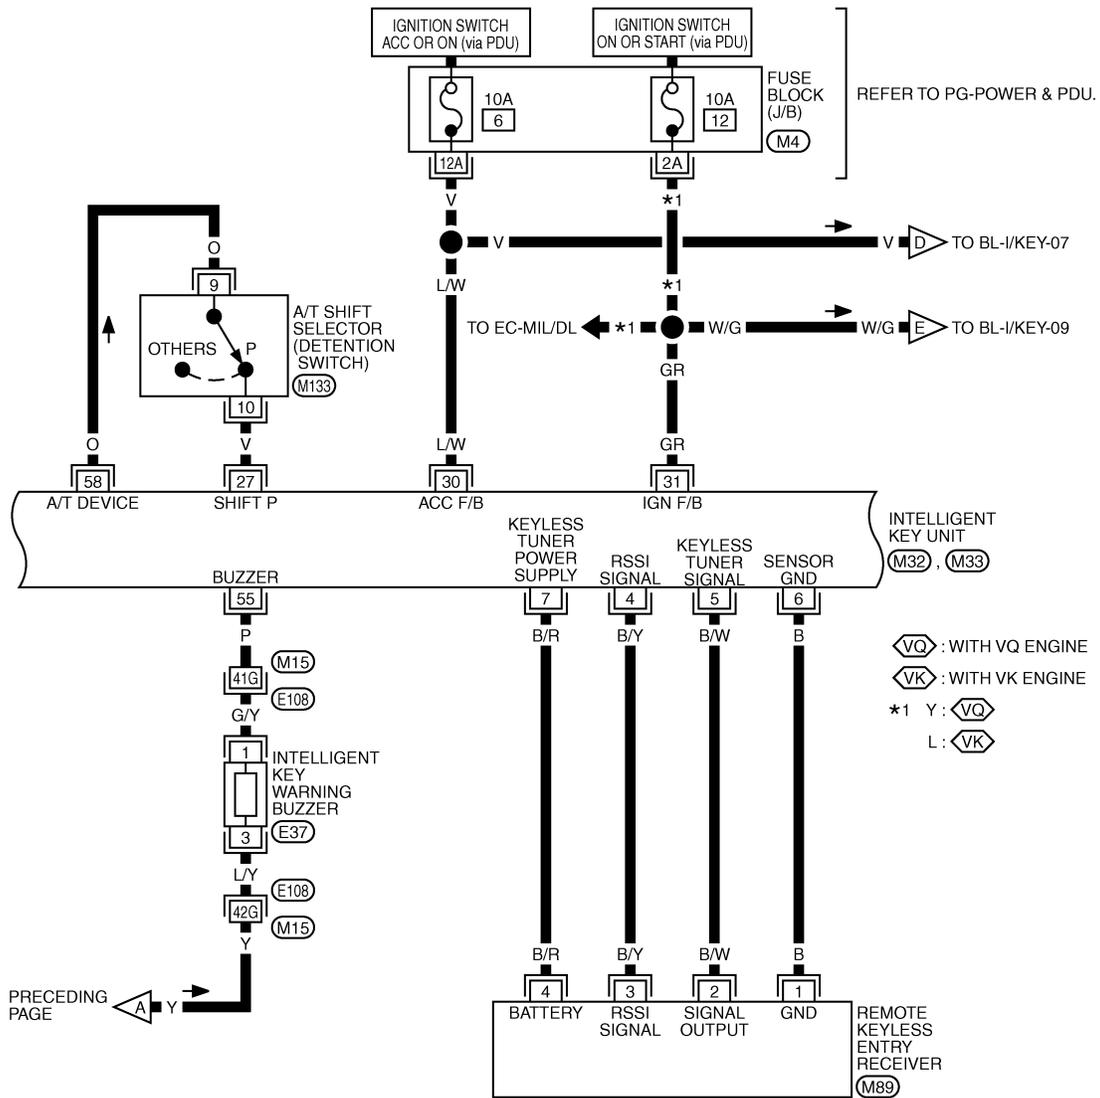

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(M4) -FUSE BLOCK-JUNCTION BOX (J/B)



TIWT3138E

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

BL-I/KEY-03

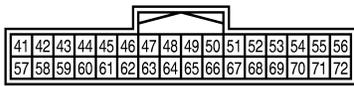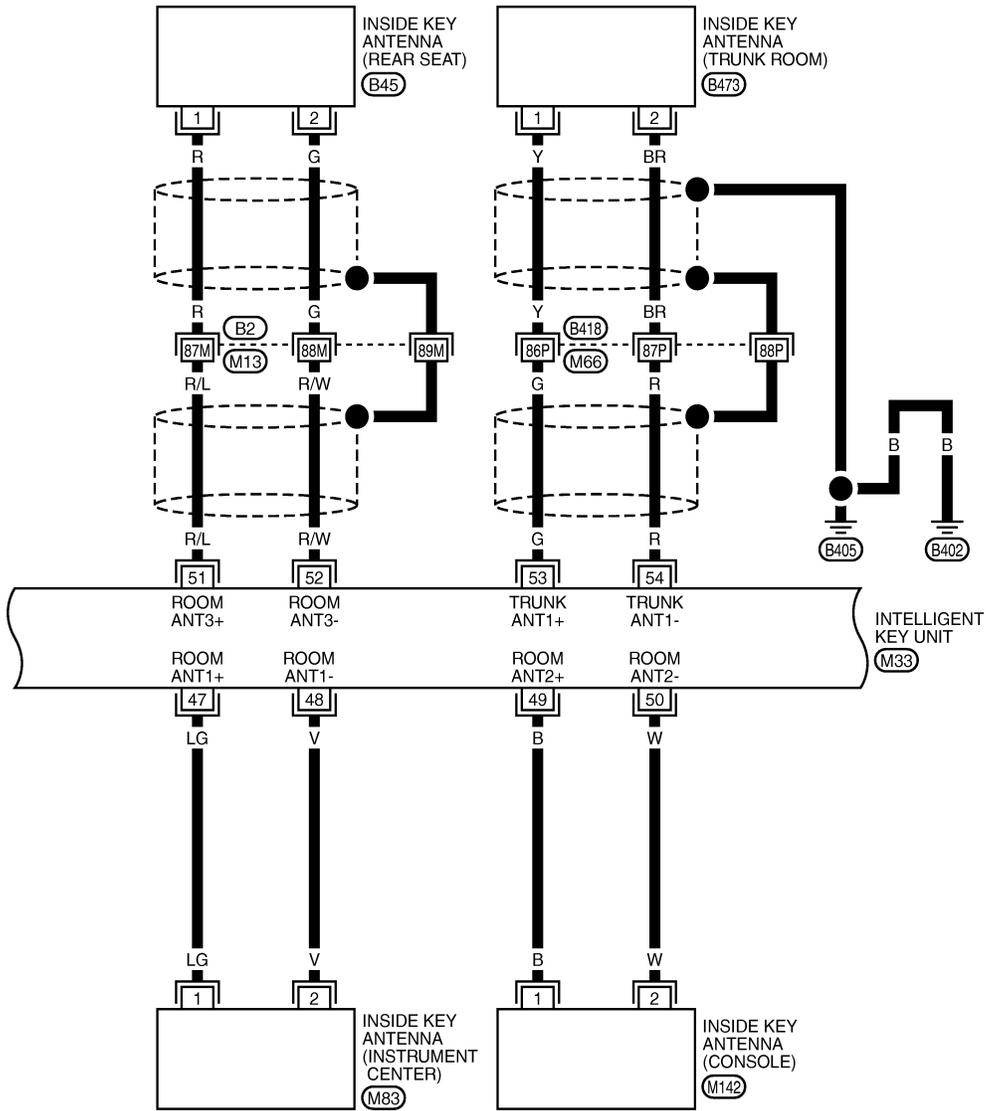

REFER TO THE FOLLOWING.
 (B2), (B418) - SUPER MULTIPLE JUNCTION (SMJ)



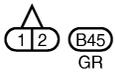


TIWT2606E

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

BL-I/KEY-04

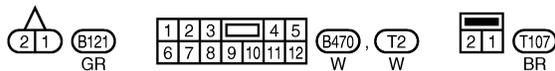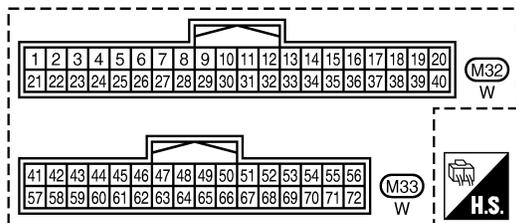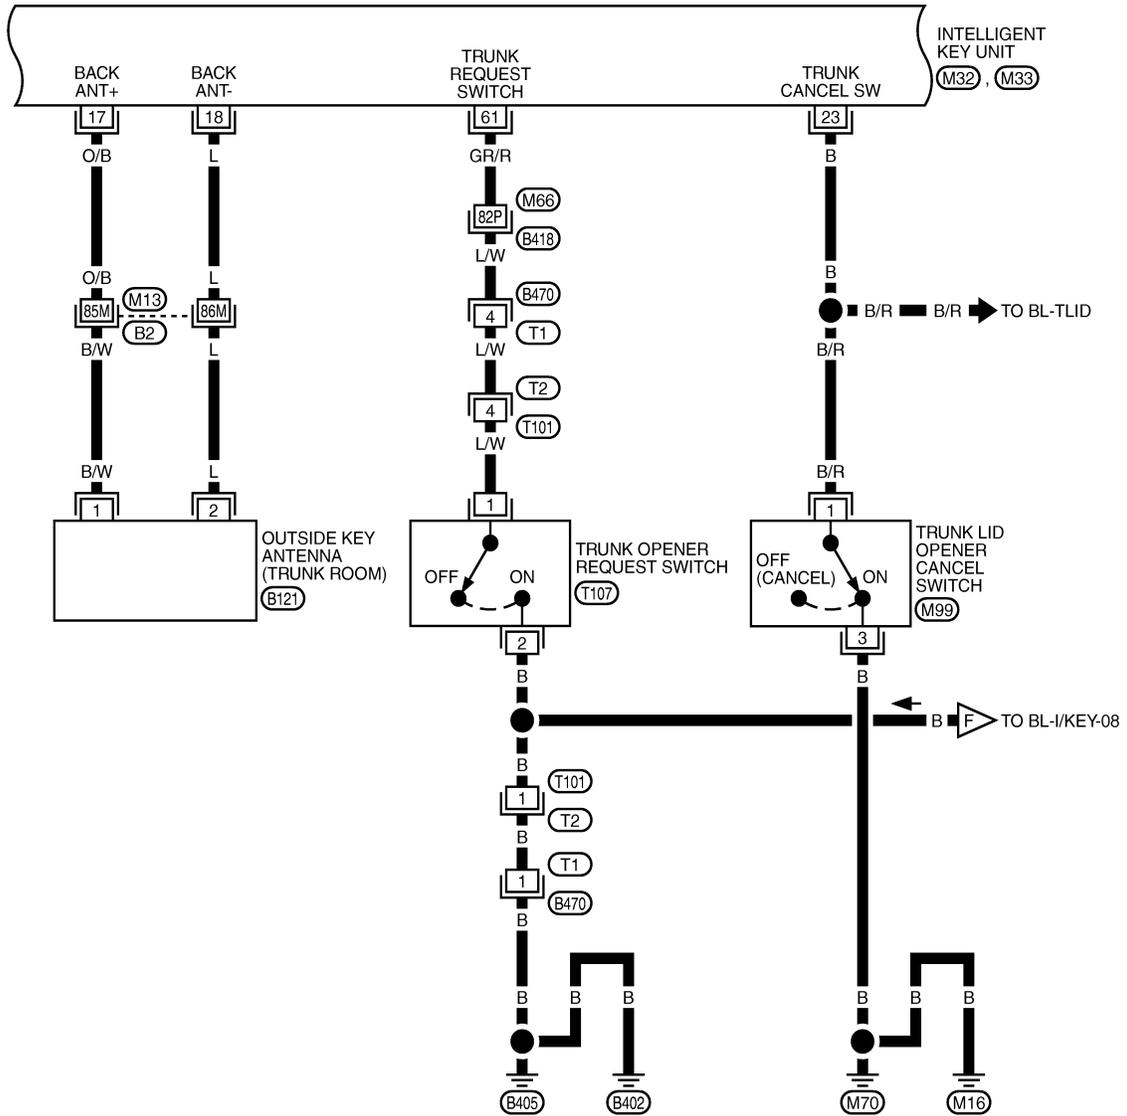

REFER TO THE FOLLOWING.
 (B2), (B418) - SUPER MULTIPLE JUNCTION (SMJ)

TIWT2607E



A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M
 N
 O
 P

BL

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

BL-I/KEY-05

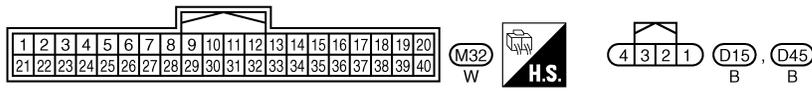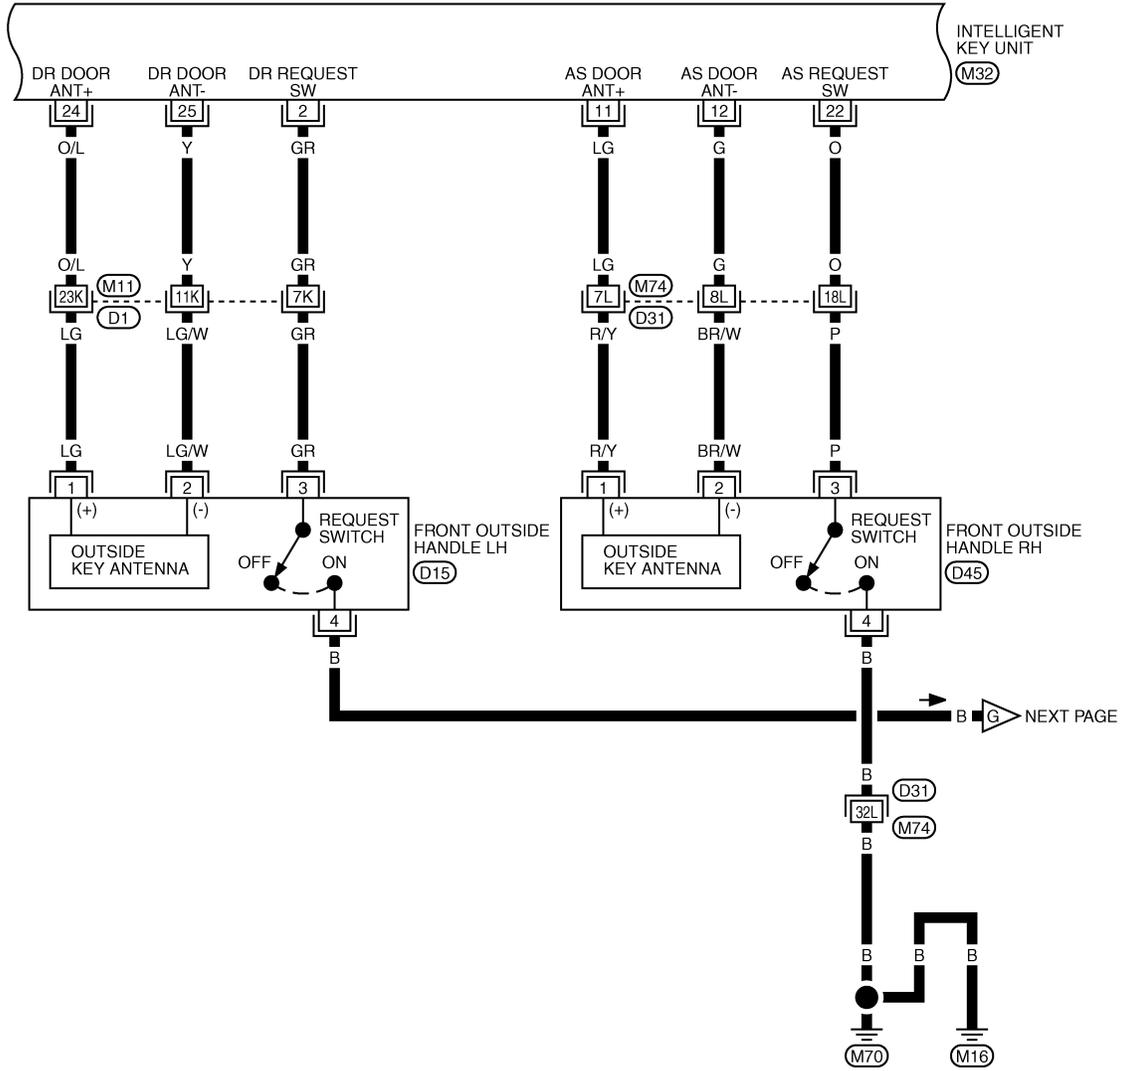



REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)

TIWT1909E

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

BL-I/KEY-06

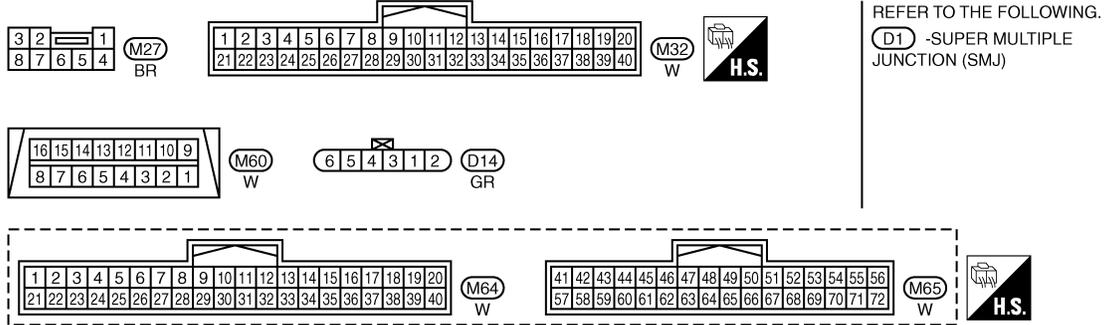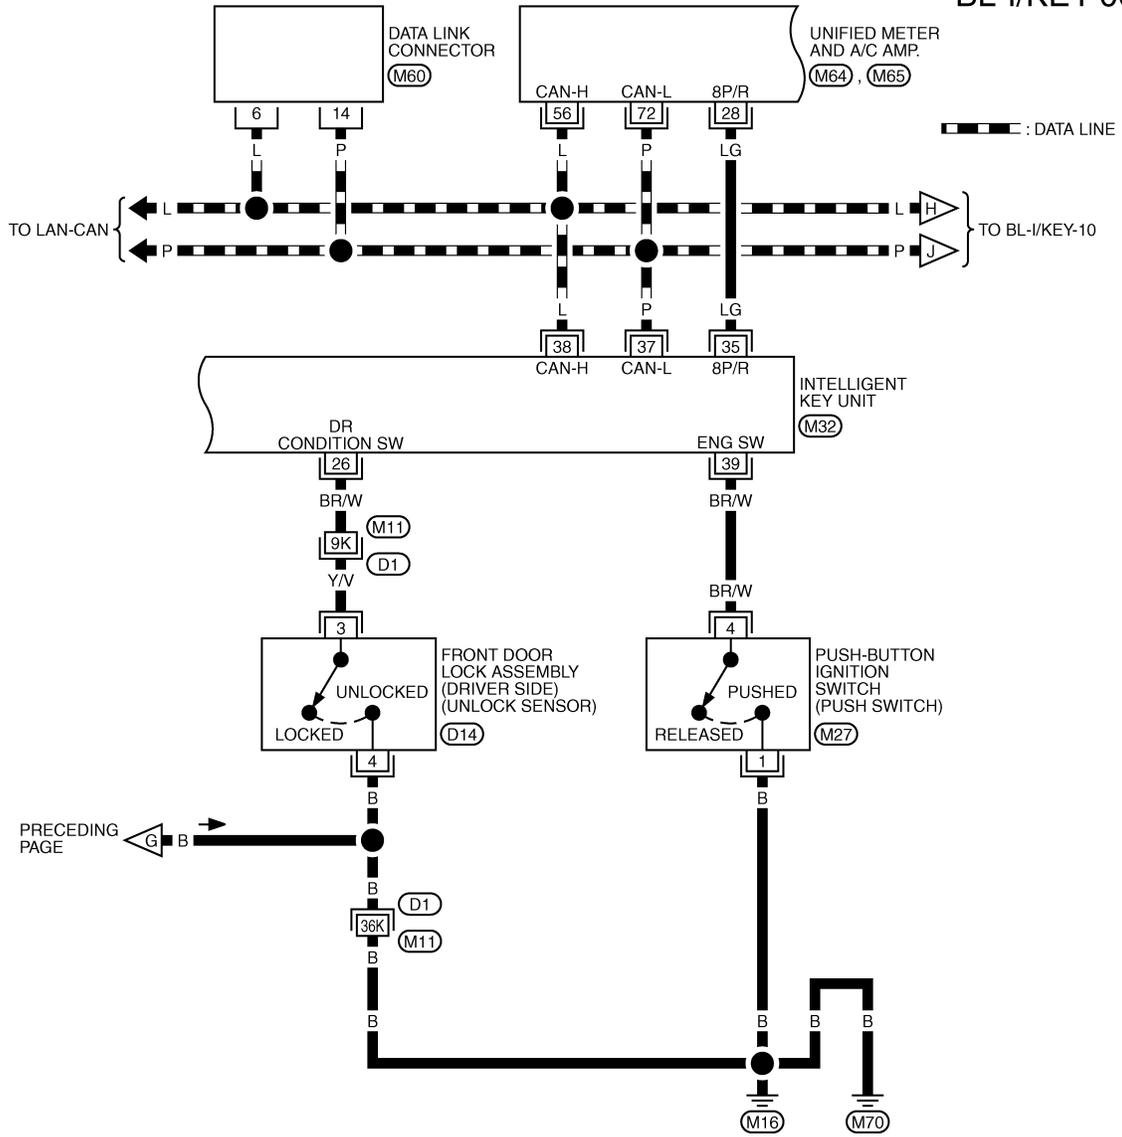


TIWT1297E

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

BL-I/KEY-07

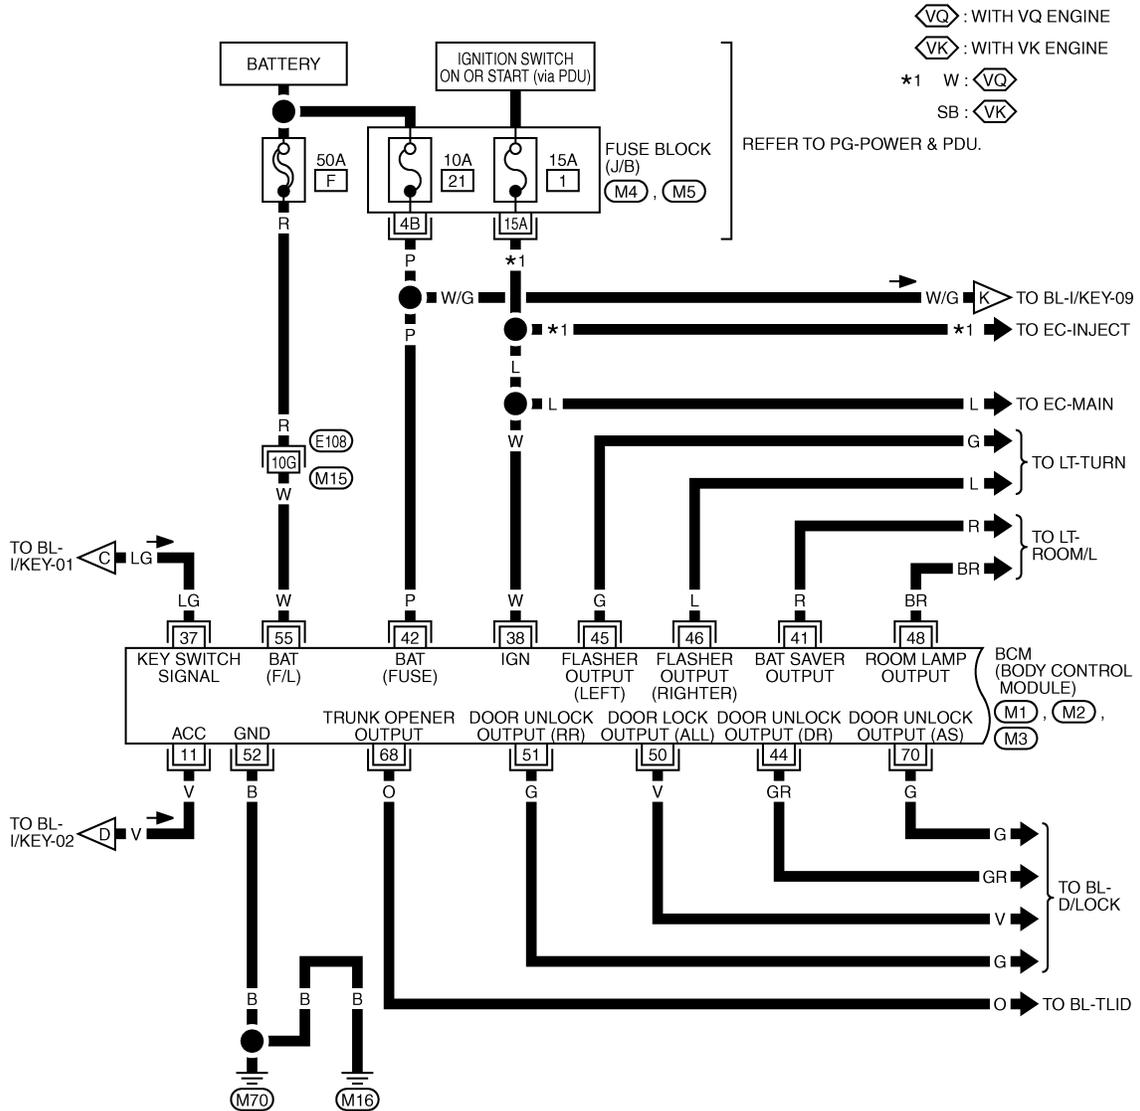

REFER TO THE FOLLOWING.



- (E108) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4), (M5) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M1), (M2), (M3) -ELECTRICAL UNITS

TIWT3139E

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

BL-I/KEY-08

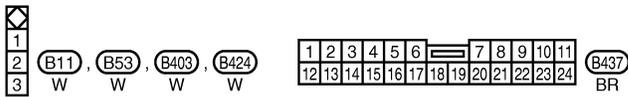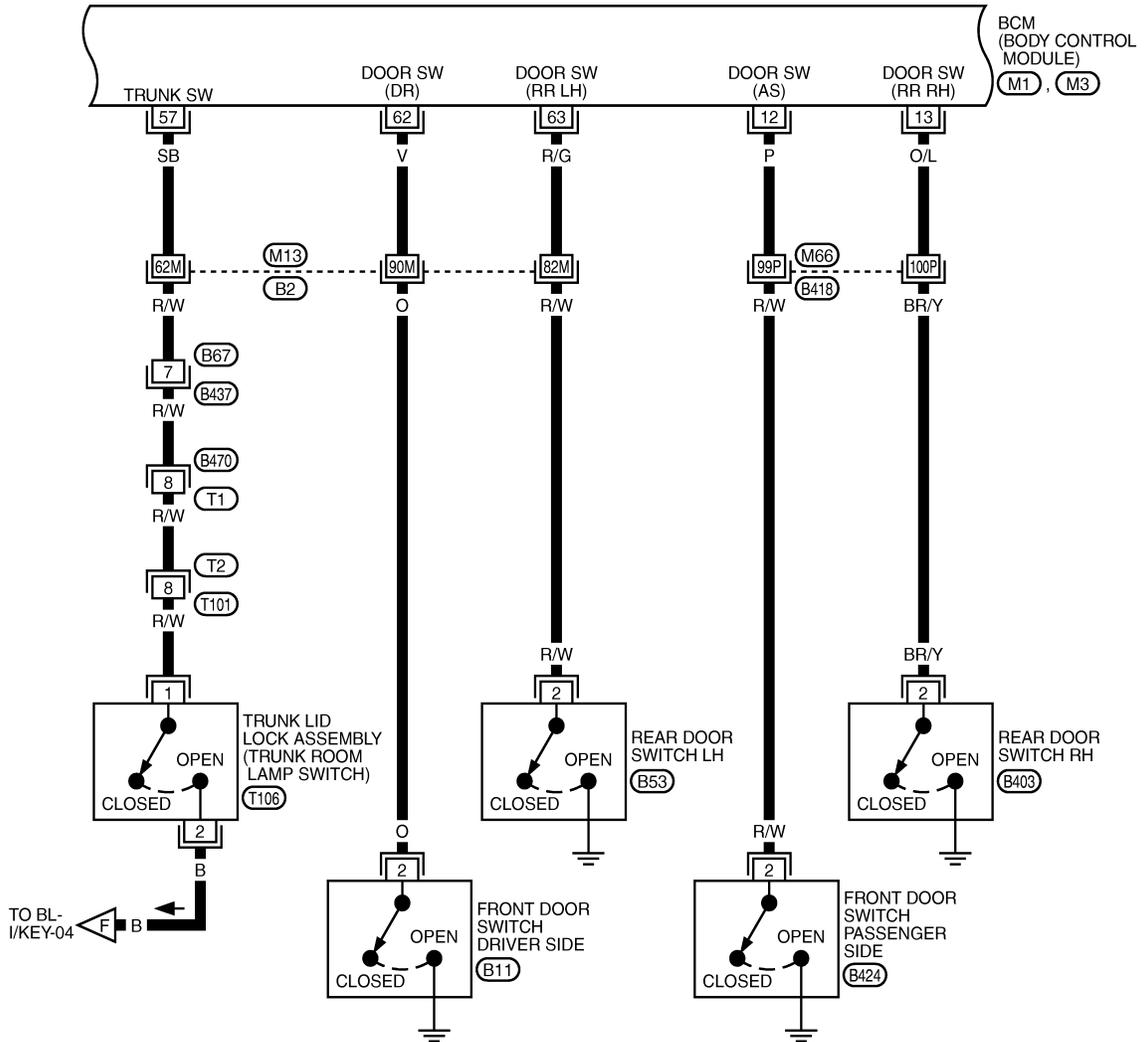


REFER TO THE FOLLOWING.
(B2), (B418) - SUPER MULTIPLE JUNCTION (SMJ)
(M1), (M3) - ELECTRICAL UNITS

TIWT2609E


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >


BL-I/KEY-09

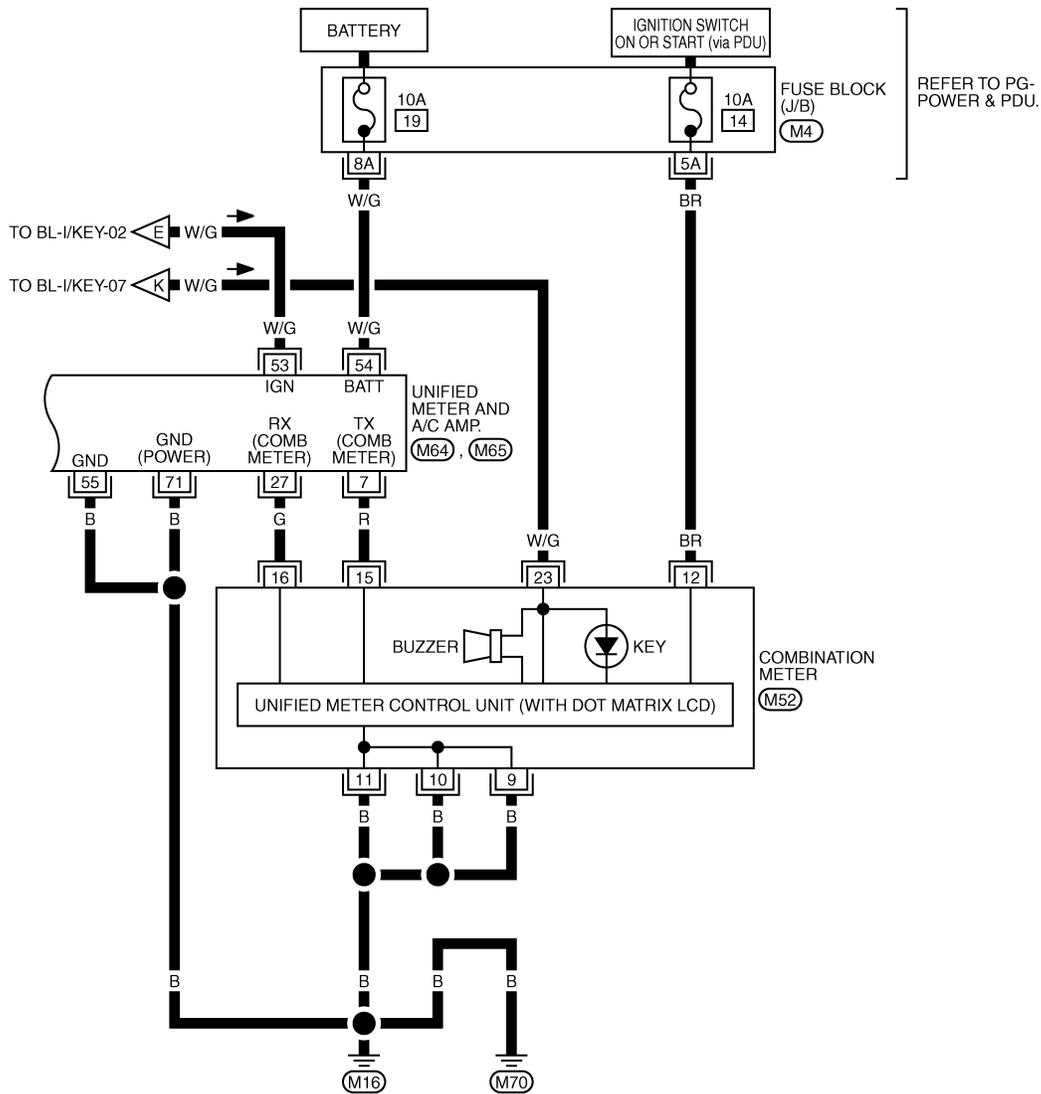

REFER TO PG-POWER & PDU.

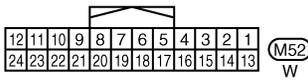

REFER TO THE FOLLOWING.
 (M4) - FUSE BLOCK-JUNCTION BOX (J/B)


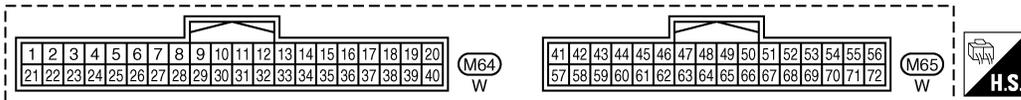


TIWT3140E


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

BL-I/KEY-10

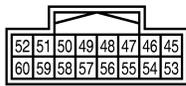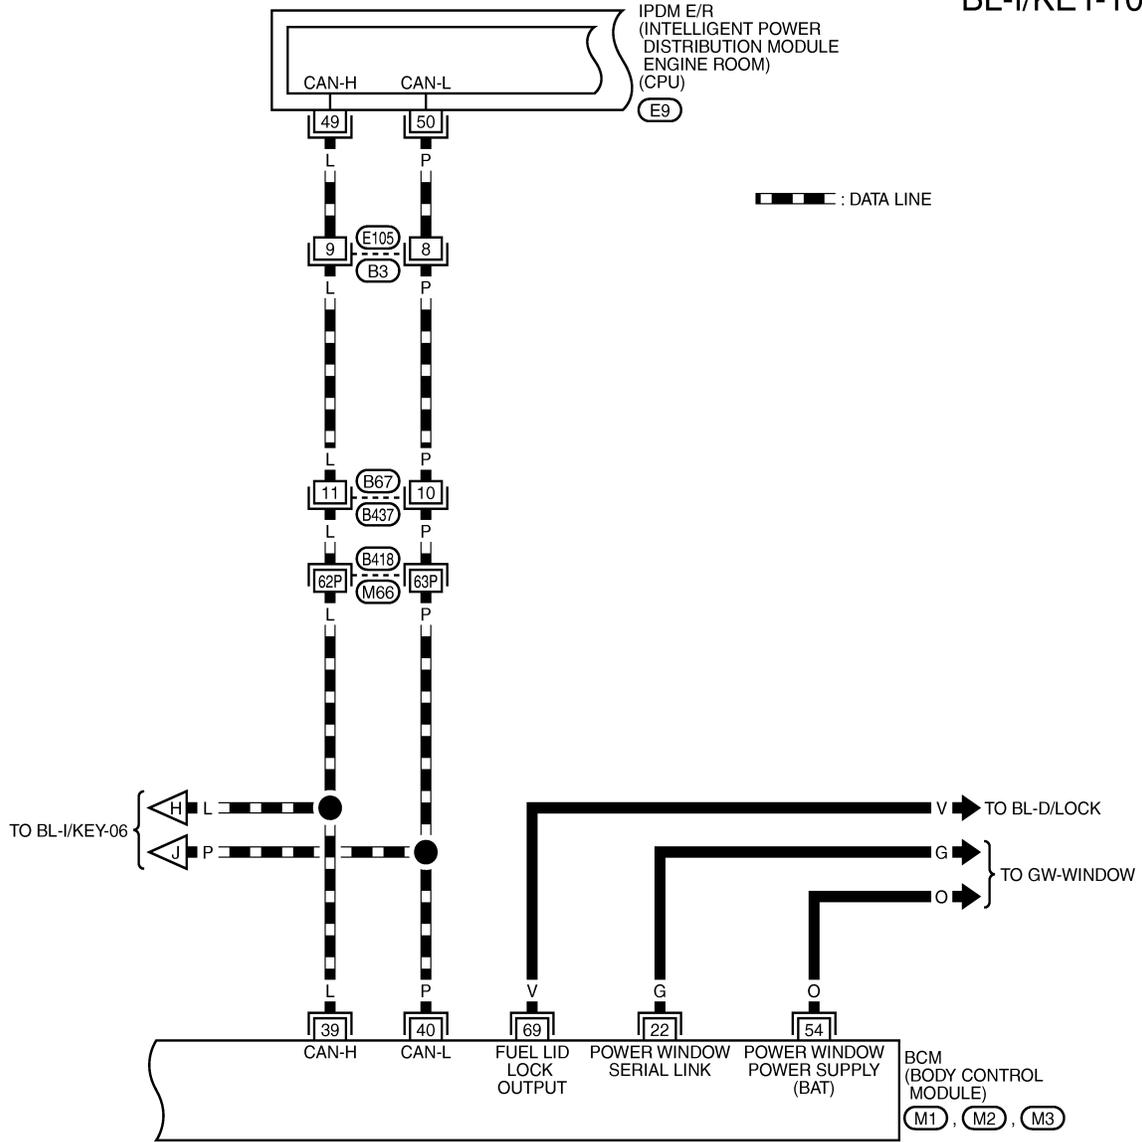

(E9)
W

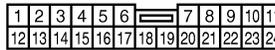

(B3), (B437)
W BR

REFER TO THE FOLLOWING.

(B418) - SUPER MULTIPLE
JUNCTION (SMJ)



(M1), (M2), (M3) - ELECTRICAL
UNITS

TIWT2610E

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

BL-I/KEY-11

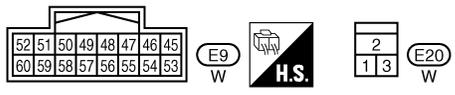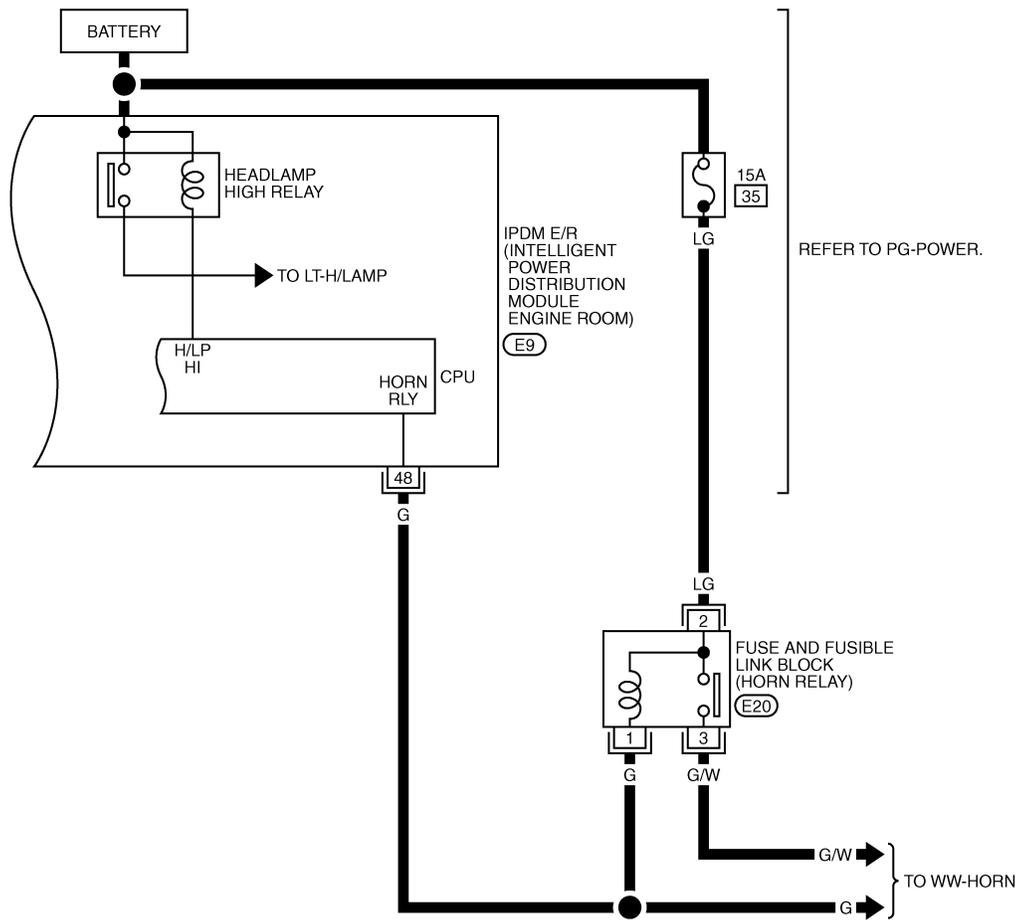

TIWT3141E

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminal and Reference Value for Intelligent Key Unit

INFOID:000000005349365

Terminal	Wire Color	Item	Signal Input/ Output	Condition		Voltage (V) Approx.
				Ignition Switch Position	Operation or Conditions	
1	SB	Power source (Fuse)	Input	—	—	Battery voltage
2	GR	Door request switch (driver side)	Input	—	Press door request switch (driver side).	0
					Other than above	5
4	B/Y	Remote keyless entry receiver RSSI signal	Input/ Output	LOCK	When Intelligent Key is in vehicle, press push-button ignition switch	0
					Other than above	
5	B/W	Remote keyless entry receiver signal	Input/ Output	LOCK	Waiting state	
					Any operation using Intelligent Key	
6	B	Remote keyless entry receiver ground	—	—	—	0
7	B/R	Remote keyless entry receiver power supply	Output	LOCK	—	
11	LG	Outside key antenna (+) signal (passenger side)	Output	LOCK	Press door request switch (passenger side).	
12	G	Outside key antenna (-) signal (passenger side)				

A

B

C

D

E

F

G

H

BL

J

K

L

M




N

O

P

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

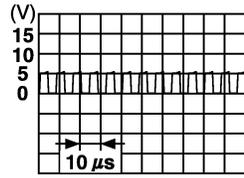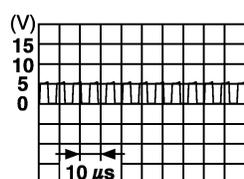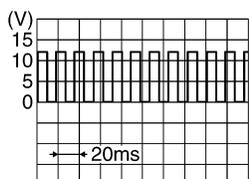Terminal	Wire Color	Item	Signal Input/Output	Condition		Voltage (V) Approx.
				Ignition Switch Position	Operation or Conditions	
13	LG/B	Key slot illumination signal	Output	LOCK	Insert Intelligent Key into key slot and driver side door is open.	Illuminate: Battery voltage Does not illuminate: 0
					Remove Intelligent Key from key slot.	0
17	O/B	Outside key antenna (+) signal (Trunk room)	Output	LOCK	Press trunk opener request switch.	 <p style="text-align: right; font-size: small;">SIIA1910J</p>
18	L	Outside key antenna (-) signal (Trunk room)				
19	BR/Y	Key switch signal	Input	LOCK	Insert Intelligent Key into key slot.	0
					Remove Intelligent Key from key slot.	Battery voltage
20	B	Ground	—	ON	—	0
22	O	Door request switch (passenger side)	Input	—	Press door request switch (passenger side).	0
					Other than above	5
23	B	Trunk lid opener cancel switch	Input	—	Trunk lid opener cancel switch is ON	0
					Trunk lid opener cancel switch is OFF (cancel)	5
24	O/L	Outside key antenna (+) signal (driver side)	Output	LOCK	Press door request switch (driver side).	 <p style="text-align: right; font-size: small;">SIIA1910J</p>
25	Y	Outside key antenna (-) signal (driver side)				
26	BR/W	Unlock sensor (driver side)	Input	—	Door (driver side) is locked.	Battery voltage
					Door (driver side) is unlocked.	0
27	V	P range switch	Input	—	Selector lever is in "P" position.	0
					Other than above	Battery voltage
30	L/W	Ignition switch (ACC)	Input	ACC	—	Battery voltage
31	GR	Ignition switch (ON)	Input	ON	—	Battery voltage
35	LG	Vehicle speed signal	Input	ON	At speedometer operation (vehicle speed approx. 40 km/h)	 <p style="text-align: right; font-size: small;">PKIA1935E</p>
37	P	CAN-L	Input/Output	—	—	—
38	L	CAN-H	Input/Output	—	—	—

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminal	Wire Color	Item	Signal Input/ Output	Condition		Voltage (V) Approx.	
				Ignition Switch Position	Operation or Conditions		
39	BR/W	Push-button ignition switch signal	Input	—	Press push-button ignition switch	0	
					Other than above	Battery voltage	
40	B	Ground	—	ON	—	0	
41	Y	Power source (Fuse)	Input	—	—	Battery voltage	
47	LG	Inside key antenna (+) signal (Instrument center)	Output	LOCK	Any door open → all door close		
48	V	Inside key antenna (-) signal (Instrument center)					
49	B	Inside key antenna (+) signal (Console)	Output	LOCK	Any door open → all door close		
50	W	Inside key antenna (-) signal (Console)					
51	R/L	Inside key antenna (+) signal (Rear seat)	Output	LOCK	Any door open → all door closed		
52	R/W	Inside key antenna (-) signal (Rear seat)					
53	G/W	Inside key antenna (+) signal (Trunk room)	Output	LOCK	Any door open → all door close		
54	LG	Inside key antenna (-) signal (Trunk room)					
55	P	Intelligent Key warning buzzer	Output	LOCK	Operate door request switch.	Buzzer OFF	Battery voltage
						Sound buzzer	0
56	B	Ground	—	ON	—	0	
57	L	Power source (Fuse)	Input	—	—	Battery voltage	
58	O	A/T shift selector power supply	Output	LOCK	Wake-up state (Open drive side door)	Battery voltage	
					Sleep state (After 30 seconds or more since all doors are closed under the condition that the ignition switch is in the LOCK position)	0	

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminal	Wire Color	Item	Signal Input/Output	Condition		Voltage (V) Approx.
				Ignition Switch Position	Operation or Conditions	
61	GR/R	Trunk opener request switch	Input	—	Press trunk opener request switch.	0
					Other than above	5
72	B	Ground	—	ON		0

Terminal and Reference Value for BCM

INFOID:000000005349366

Terminal	Wire Color	Item	Signal Input/Output	Condition	Voltage (V) Approx.
11	V	Ignition switch (ACC)	Input	Ignition switch is in ACC or ON position	Battery voltage
12	P	Front door switch passenger side	Input	Door open (ON) → Close (OFF)	0 → 8
13	O/L	Rear door switch RH	Input	Door open (ON) → Close (OFF)	0 → Battery voltage
37	LG	Key switch signal	Input	Insert Intelligent Key into key slot.	Battery voltage
				Remove Intelligent Key from key slot.	0
38	W	Ignition switch (ON)	Input	Ignition switch is in ON or START position.	Battery voltage
39	L	CAN-H	Input/Output	—	—
40	P	CAN-L	Input/Output	—	—
42	P	Power supply (fuse)	Input	—	Battery voltage
52	B	Ground	—	—	0
55	W	Power supply (Fusible link)	Input	—	Battery voltage
57	SB	Trunk room lamp switch	Input	Trunk lid open (ON) → Close (OFF)	0 → Battery voltage
62	V	Front door switch driver side	Input	Door open (ON) → Close (OFF)	0 → Battery voltage
63	R/G	Rear door switch LH	Input	Door open (ON) → Close (OFF)	0 → Battery voltage

*1: In the state that hazard reminder operates.

*2: In the state that room lamp switch is in "DOOR" position.

Terminal and Reference Value for IPDM E/R

INFOID:000000005349367

Terminal	Wire Color	Item	Signal Input/Output	Condition	Voltage (V) Approx.	
48	G/B	Horn relay	Output	Press panic alarm bottom.	Horn sounds.	0
					Horn does not sound.	Battery voltage
49	L	CAN-H	Input/Output	—	—	—
50	P	CAN-L	Input/Output	—	—	—

Trouble Diagnosis Procedure

INFOID:000000005349368

WORK FLOW

1. CHECK IN

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

CHECK IN.

>> GO TO 2.

2.GET SYMPTOMS

Listen to customer complaints request. (Get symptoms)

NOTE:

If customer reports a "No start" condition, request all Intelligent Keys to be brought to the dealer in case of Intelligent Key system malfunction.

Intelligent Key service request>>Refer to CONSULT-III operation manual.

Intelligent Key system is malfunctioning>>GO TO 3.

3.PERFORM SELF-DIAGNOSIS

Perform self-diagnosis of Intelligent Key system with CONSULT-III.

"SELF-DIAG RESULTS" are displayed>>Refer to [BL-74. "CONSULT-III Functions \(INTELLIGENT KEY\)".](#)

"SELF-DIAG RESULTS" are not displayed>>GO TO 4.

4.CHECK FUNCTION OF INTELLIGENT KEY SYSTEM

Does all function of Intelligent Key system operate?

All function of Intelligent Key system does not operate>>Refer to [BL-80. "Trouble Diagnosis Symptom Chart".](#)

Specific function of Intelligent Key system does not operate>>GO TO 5.

5.CHECK POWER DOOR LOCK OPERATION

Does door lock/unlock operation by door lock and unlock switch operate?

OK or NG

OK >> GO TO 6.

NG >> Refer to [BL-24.](#)

6.CHECK DOOR REQUEST SWITCH OPERATION

Does door lock/unlock operation by door request switch operate?

OK or NG

OK >> GO TO 7.

NG >> Refer to [BL-80. "Trouble Diagnosis Symptom Chart".](#)

7.CHECK TRUNK OPEN OPERATION

Does the trunk open operation by the trunk opener switch operate?

OK or NG

OK >> GO TO 8.

NG >> Refer to [BL-189.](#)

8.CHECK TRUNK OPENER REQUEST SWITCH OPERATION

Does the trunk open operation by the trunk opener request switch operate?

OK or NG

OK >> GO TO 9.

NG >> Refer to [BL-80. "Trouble Diagnosis Symptom Chart".](#)

9.CHECK REMOTE KEYLESS FUNCTION

Does the following operation by the Intelligent Key remote control button operate?

- Door lock/unlock function
- Trunk open function
- Panic alarm function

OK or NG

OK >> GO TO 10.

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

NG >> Refer to [BL-80, "Trouble Diagnosis Symptom Chart"](#).

10. CHECK POWER WINDOW OPERATION

Does power window operation by power window main switch operate?

OK or NG

OK >> GO TO 11.

NG >> Refer to [GW-14](#).

11. CHECK POWER WINDOW DOWN FUNCTION

Does power window down function by Intelligent Key remote control button operate?

OK or NG

OK >> GO TO 12.

NG >> Refer to [BL-80, "Trouble Diagnosis Symptom Chart"](#).

12. CHECK HAZARD AND BUZZER REMINDER FUNCTION BY REQUEST SWITCH

Does hazard and buzzer reminder function by the following switches operate?

- Door request switches
- Trunk opener request switch

OK or NG

OK >> GO TO 13.

NG >> Refer to [BL-80, "Trouble Diagnosis Symptom Chart"](#).

13. CHECK HAZARD AND HORN REMINDER FUNCTION BY INTELLIGENT KEY BUTTON

Does hazard and horn reminder function by Intelligent Key button operate?

OK or NG

OK >> GO TO 14.

NG >> Refer to [BL-80, "Trouble Diagnosis Symptom Chart"](#).

14. CHECK WARNING FUNCTION

Does warning function operate? Refer to [BL-44, "System Description"](#).

OK or NG

OK >> GO TO 15.

NG >> Refer to [BL-80, "Trouble Diagnosis Symptom Chart"](#).

15. CHECK OUT

CHECK OUT.

>> INSPECTION END

CONSULT-III Functions (INTELLIGENT KEY)

INFOID:000000005349369

CONSULT-III can display each diagnostic item using the diagnostic test modes as shown below.

Part to be diagnosed	Test item, Diagnosis mode	Description
Intelligent Key	WORK SUPPORT	Changes settings for each function.
	SELF-DIAG RESULTS	Intelligent Key unit performs CAN communication diagnosis.
	DATA MONITOR	Displays Intelligent Key unit input data in real time.
	CAN DIAGNOSTIC SUPPORT MONITOR	The results of transmit/receive diagnosis of CAN Communication can be read.
	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to then.
	ECU PART NUMBER	Displays Intelligent Key unit part No.

SELF-DIAGNOSTIC RESULTS

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Suspect Systems [DTC]	Diagnostic item is detected when...	Repair work	Reference page
CAN COMM CIRCUIT [U1000]	Malfunction is detected in CAN communication	Perform CAN communication system inspection	BL-85
CONTROL UNIT (CAN) [U1010]	Malfunction is detected in CAN communication caused by Intelligent Key unit internal malfunction	Replace Intelligent Key unit.	BL-85
STRG COMM 1 [B2013]	Communication malfunction with steering lock unit is detected	Check steering lock unit	BL-144
STEERING LOCK UNIT [B2551]	Even if the communication with steering lock unit is normally performed, the steering lock is malfunctioning	Replace steering lock unit	BL-147
INTELLIGENT KEY [B2552]	Internal malfunction is detected in Intelligent Key unit	Replace Intelligent Key unit.	BL-150
IGN POWER CIRCUIT [B2553]	It continues for 2 seconds or more that ON power supply input to Intelligent Key unit is excessively low when the power supply position is in ON position	Check Intelligent Key unit ON power supply input	BL-150
ACC POWER CIRCUIT [B2554]	It continues for 2 seconds or more that ACC power supply input to Intelligent Key unit is excessively low when the power supply position is in ACC or ON position	Check Intelligent Key unit ACC power supply input	BL-151
STOP LAMP CIRCUIT [B2555]	5V or less is detected at both the stop lamp switch signal input circuit that is input to Intelligent Key unit and the monitor input before stop lamp switch	Check stop lamp switch	BL-153
ENG START SW [B2556]	Condition that push-button ignition switch is pushed is detected continuously for 100 seconds or more	Check push-button ignition switch	BL-154
VEHICLE SPEED [B2557]	Some differences occur on one or more vehicle speed inputs of Intelligent Key unit	Check vehicle speed signal	BL-155
SHIFT POSITION [B2558]	<ul style="list-style-type: none"> • There is a difference between the shift position input via CAN communication and the P position input by detente switch • Vehicle speed (5 km/h or more) is detected continuously for 10 seconds or more even if the shift position is detected in P position when the power supply position is in ON position 	Check shift position input	BL-157
PDU [B2559]	Internal malfunction is detected in PDU	Replace PDU	BL-159
START POW SUP CIRC [B2560]	Though the engine start operation is not performed, starter relay in IPDM E/R is ON	Check starter power supply	BL-160
LOW VOLTAGE [B2562]	Battery power supply input to Intelligent Key unit (8.8V or less) is detected continuously for 1.5 seconds or more	Check battery low voltage	BL-161
HI VOLTAGE [B2563]	Battery power supply input to Intelligent Key unit (18V or more) is detected continuously for 90 seconds or more	Check for battery high voltage	BL-162
NATS MALFUNCTION [B2590]	Malfunction is detected in immobilizer system	Check (IVIS) NATS trouble diagnosis procedure	BL-220

CAUTION:

When CAN COMM [U1000] and CONTROL UNIT (CAN) [U1010] are displayed, give priority to performing trouble diagnosis.

DATA MONITOR

Monitor item	Content
DR REQ SW	Indicates [ON/OFF] condition of door request switch (driver side).
AS REQ SW	Indicates [ON/OFF] condition of door request switch (passenger side).
BD/TR REQ SW	Indicates [ON/OFF] condition of trunk opener request switch.
ON POS	Indicates [ON/OFF] condition of ignition switch in ON position.
ACC POS	Indicates [ON/OFF] condition of ignition switch in ACC position.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Monitor item	Content
DOOR STAT SW	Indicates [ON/OFF] condition of door unlock sensor.
STOP LAMP SW	Indicates [ON/OFF] condition of stop lamp switch.
P RANGE SW	Indicates [ON/OFF] condition of transmission range switch.
TR CANCEL SW	Indicates [ON/OFF] condition of trunk cancel switch.
DOOR LOCK SIG	Indicates [ON/OFF] condition of door lock signal from Intelligent Key remote controller button.
DOOR UNLOCK SIG	Indicates [ON/OFF] condition of door unlock signal from Intelligent Key remote controller button.
KEYLESS TRUNK	Indicates [ON/OFF] condition of trunk open signal from Intelligent Key remote controller button.
KEYLESS PANIC	Indicates [ON/OFF] condition of panic alarm signal from Intelligent Key remote controller button.
DOOR SW DR	Indicates [OPEN/CLOSE] condition of front door switch driver side from BCM via CAN communication line.
DOOR SW AS	Indicates [OPEN/CLOSE] condition of front door switch passenger side from BCM via CAN communication line.
DOOR SW RR	Indicates [OPEN/CLOSE] condition of rear door switch LH from BCM via CAN communication line.
DOOR SW RL	Indicates [OPEN/CLOSE] condition of rear door switch RH from BCM via CAN communication line.
DOOR BK SW	Indicates [OPEN/CLOSE] condition of back door switch from BCM via CAN communication line.
TRUNK SW	Indicates [OPEN/CLOSE] condition of trunk room lamp switch from BCM via CAN communication line.
FOB IN FLAG	Indicates [SET/RESET] of passenger room detection status for registered Intelligent Key.
ID OK FLAG	Indicates [SET/RESET] condition of key ID.
PRMT ENG STAT	Indicates [SET/RESET] of passenger room detection status for registered Intelligent Key.
BCM OK FLAG	This is displayed even if it is not equipped.
RMOT ENG STAT	This is displayed even if it is not equipped.
VEHICLE SPEED	Indicates [km/h] condition of vehicle speed.
STLK STAT SW1	Indicates [ON/OFF] condition that is judged by steering lock status switch.
STLK STAT SW2	Indicates [ON/OFF] condition that is judged by steering lock status switch.
ENGINE SW	Indicates [ON/OFF] condition of push-button ignition switch.
PNP RENGE SIG	Indicates [P position(ON)/other than P position(OFF)] condition that is judged by transmission range switch.
CARD IN	Indicates [ON/OFF] condition of key switch.
ACC POWER F/B	Indicates [ON/OFF] condition of ignition switch in ACC position.
IGN POWER F/B	Indicates [ON/OFF] condition of ignition switch in ON position.
STLK POWER F/B	Indicates [ON/OFF] condition of steering lock output power supply.
VHCL SPEED 2	Indicates [km/h] condition of vehicle speed.

WORK SUPPORT

Monitor item	Description
CONFIRM KEY FOB ID	It can be checked whether Intelligent Key ID code is registered or not in this mode.
SHORT CRANKING OUTPUT	<p>Starter motor can operate during the times below.</p> <ul style="list-style-type: none"> • 70 mses • 100 mses • 200 mses
TAKE OUT FROM WINDOW WARN	Take away warning chime (from window) mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.
LOW BAT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Monitor item	Description	
ANSWER BACK FUNCTION	Hazard and buzzer reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.	A
SELECTIVE UNLOCK FUNCTION	Selective unlock function mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.	B
ANTI KEY LOCK IN FUNCTION	Key reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.	C
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.	D
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/Unlock operation • OFF: Non-operation 	E
ANSWER BACK WITH I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • HORN CHIRP: Sound horn • BUZZER: Sound Intelligent Key warning buzzer • OFF: Non-operation 	F
ANSWER BACK WITH I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) with this mode.	G
AUTO RELOCK TIMER	Auto door lock timer mode can select the following with this mode. <ul style="list-style-type: none"> • 1 min • 5 min • OFF: Non-operation 	H
PANIC ALARM DELAY	Panic alarm button's pressing time on Intelligent Key remote control button can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • 0.5 sec • 1.5 sec • OFF: Non-operation 	I
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by trunk opener request switch can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.	J
TRUNK OPEN DELAY	Trunk button's pressing time on Intelligent Key button can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • 0.5 sec • 1.5 sec • OFF: Non-operation 	K
P/W DOWN DELAY	Unlock button's pressing time on Intelligent Key button can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • 3 sec • 5 sec • OFF: Non-operation 	L
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.	M
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side, passenger side and trunk) mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.	N

ACTIVE TEST

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Test item	Description
DOOR LOCK/UNLOCK	<p>This test is able to check door lock/unlock operation.</p> <ul style="list-style-type: none"> • The all door lock actuators are locked when "LOCK" on CONSULT-III screen is touched. • The all door lock actuators are unlocked when "ALL UNLK" on CONSULT-III screen is touched. • The door lock actuator (driver side) is unlocked when "DR UNLK" on CONSULT-III screen is touched. • The door lock actuator (passenger side) is unlocked when "AS UNLK" on CONSULT-III screen is touched. • The trunk lid opener actuator is open when "TRUNK OPEN" on CONSULT-III screen is touched.
ANTENNA	<p>This test is able to check Intelligent Key antenna operation. When the following conditions are met, hazard warning lamps flash.</p> <ul style="list-style-type: none"> • Inside key antenna (Instrument center) detects Intelligent Key, when "ROOM ANT1" on CONSULT-III screen is touched. • Inside key antenna (Center console) detects Intelligent Key, when "ROOM ANT2" on CONSULT-III screen is touched. • Inside key antenna (rear seat) detects Intelligent Key, when "ROOM ANT3" on CONSULT-III screen is touched. • Inside key antenna (Trunk room) detects Intelligent Key, when "LAG ANT1" on CONSULT-III screen is touched. • Outside key antenna (Driver side) detects Intelligent Key, when "DRIVER ANT" on CONSULT-III screen is touched. • Outside key antenna (Passenger side) detects Intelligent Key, when "ASSIST ANT" on CONSULT-III screen is touched. • Outside key antenna (Trunk room) detects Intelligent Key, when "BD/TR ANT" on CONSULT-III screen is touched.
OUTSIDE BUZZER	<p>This test is able to check Intelligent Key warning buzzer operation. Intelligent Key warning buzzer sounds when "ON" on CONSULT-III screen is touched.</p>
INSIDE BUZZER	<p>This test is able to check warning chime into combination meter operation.</p> <ul style="list-style-type: none"> • Take away warning chime sounds when "TAKE OUT" on CONSULT-III screen is touched. • Key warning chime sounds when "KEY WARN" on CONSULT-III screen is touched. • P position warning chime sounds when "P RNG WARN" on CONSULT-III screen is touched. • ACC warning chime sounds when "ACC WARN" on CONSULT-III screen is touched.
INDICATOR	<p>This test is able to check warning lamp operation.</p> <ul style="list-style-type: none"> • "KEY" Warning lamp illuminates when "KEY IND ON" on CONSULT-III screen is touched. • "KEY" Warning lamp flashes when "KEY IND FSH" on CONSULT-III screen is touched.
LCD	<p>This test is able to check meter display information</p> <ul style="list-style-type: none"> • Engine start information displays when "BRAKE/P" on CONSULT-III screen is touched. • Engine start information displays when "BRAKE/P/ON" on CONSULT-III screen is touched. • Key ID warning displays when "KEY ID NG" on CONSULT-III screen is touched. • Steering lock information displays when "STLCK RELES" on CONSULT-III screen is touched. • P position warning displays when "P RNG IND" on CONSULT-III screen is touched. • Intelligent Key insert information displays when "INSERT KEY" on CONSULT-III screen is touched. • Intelligent Key low battery warning displays when "KEY BAT LOW" on CONSULT-III screen is touched. • Take away through window warning displays when "TK AWAY WDW" on CONSULT-III screen is touched. • Take away warning display when "TAKE AWAY" on CONSULT-III screen is touched. • OFF position warning display when "IGN OFF WARN" on CONSULT-III screen is touched.
P RANGE	<p>This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "ON" on CONSULT-III screen is touched.</p>
ENGINE SW ILLUMI	<p>This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT-III screen is touched.</p>
LOCK INDICATOR	<p>This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.</p>
ACC INDICATOR	<p>This test is able to check ACC indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.</p>

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Test item	Description
IGNITION ON IND	This test is able to check IGNITION ON indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination flash when "ON" on CONSULT-III screen is touched.

CONSULT-III Functions (BCM-INTELLIGENT KEY)

INFOID:000000005349370

CONSULT-III can display each diagnostic item using the diagnostic test modes as shown below.

Part to be diagnosed	Test item, Diagnosis mode	Description
Intelligent Key	DATA MONITOR	Displays Intelligent Key unit input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to then.

DATA MONITOR

Monitor item	Content
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.
ACC ON SW	Indicates [ON/OFF] condition of ignition switch in ACC position.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
I-KEY UNLOCK	Indicates [ON/OFF] condition of unlock signal from Intelligent Key.
IKEY TRNK/HAT	Indicates [ON/OFF] condition of trunk lid open signal from Intelligent Key.
I-KEY DR UNLK	Indicates [ON/OFF] condition of unlock signal from door request switch (driver side)
I-KEY AS UNLK	Indicates [ON/OFF] condition of unlock signal from door request switch (passenger side)
I-KEY PANIC	Indicates [ON/OFF] condition of panic button of intelligent Key.
I-KEY PW DWN	Indicates [ON/OFF] condition of PW down signal from intelligent Key.
ENGINE START	Indicates [ON/OFF] condition of push-button ignition switch.

ACTIVE TEST

Test item	Description
DOOR LOCK	This test is able to check door lock/unlock operation. <ul style="list-style-type: none">The all door lock actuators are locked when "LOCK" on CONSULT-III screen is touched.The all door lock actuators are unlocked when "ALL UNLK" on CONSULT-III screen is touched.The door lock actuator (driver side) is unlocked when "DR UNLK" on CONSULT-III screen is touched.The door lock actuator (passenger side) is unlocked when "AS UNLK" on CONSULT-III screen is touched.The trunk lid opener actuator is open when "TRUNK OPEN" on CONSULT-III screen is touched.
INT LAMP	This test is able to check interior lamp operation. This interior room lamp will be activated after "ON" on CONSULT-III screen is touched.
TRUNK/GLASS HATCH	This test is able to check trunk lid opener actuator open operation. This actuator opens when "ON" on CONSULT-III screen is touched.
POWER WINDOW DOWN	This test is able to check power window down operation. This power window down will be activated after "ON" on CONSULT-III screen is touched.
FLASHER	This test is able to check security hazard lamp operation. This hazard lamps will be activated after "ON" on CONSULT-III screen is touched.
HORN	This test is able to check horn operation. This horn will be activated after "ON" on CONSULT-III screen is touched.

CONSULT-III Functions (BCM-PANIC ALARM)

INFOID:000000005349371

CONSULT-III can display each diagnostic item using the diagnostic test modes as shown below.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Part to be diagnosed	Test item, Diagnosis mode	Description
Panic alarm	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to then.

ACTIVE TEST

Test item	Description
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation. The horns will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
HEAD LAMP (HI)	This test is able to check vehicle security lamp operation. The headlamps will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.

Trouble Diagnosis Symptom Chart

INFOID:000000005349372

ALL FUNCTIONS OF INTELLIGENT KEY SYSTEM DOES NOT OPERATE

NOTE:

- Before performing the diagnosis in the following table, check "Trouble Diagnosis Procedure". Refer to [BL-72, "Trouble Diagnosis Procedure"](#).
- Make sure that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.
- If the following "symptoms" are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

Conditions of Vehicle (Operating Conditions)

- "ENGINE START BY I-KEY" and "LOCK/UNLOCK BY I-KEY" are ON when setting on CONSULT-III.
- All doors are closed.

Symptom	Diagnosis/service procedure	Reference page
All function of Intelligent Key system dose not operate.	1. Check Intelligent Key unit power supply and ground circuit.	BL-86
	2. Check Intelligent Key battery inspection.	BL-113
	3. Check remote keyless entry receiver.	BL-106
	4. Replace Intelligent Key unit.	BL-113

DOOR LOCK/UNLOCK FUNCTION MALFUNCTION

NOTE:

- Before performing the diagnosis in the following table, check "Trouble Diagnosis Procedure". Refer to [BL-72, "Trouble Diagnosis Procedure"](#).
- Make sure that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.
- If the following "symptoms" are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

Conditions of Vehicle (Operating Conditions)

- "LOCK/UNLOCK BY I-KEY" is ON when setting on CONSULT-III.
- Intelligent Key is out of key slot.
- All doors are closed.

Symptom	Diagnosis/service procedure	Reference page
Door lock/unlock do not operate by door request switch.	1. Check Intelligent Key unit power supply and ground circuit.	BL-86
	2. Check door switch.	BL-88
	3. Check key slot.	BL-87
	4. Replace Intelligent Key unit.	BL-113

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Symptom	Diagnosis/service procedure	Reference page
Door lock/unlock does not operate by request switch (driver side).	1. Check door request switch (driver side).	BL-92
	2. Check outside key antenna (driver side).	BL-98
	3. Replace Intelligent Key unit.	BL-113
Door lock/unlock does not operate by request switch (passenger side).	1. Check door request switch (passenger side).	BL-92
	2. Check outside key antenna (passenger side).	BL-98
	3. Replace Intelligent Key unit.	BL-113
Selective unlock function does not operate by door request switch (driver side) (other door lock function operate).	1. Check "SELECT UNLOCK FUNCTION" setting in "WORK SUPPORT".	BL-74
	2. Check selective unlock function with a remote controller or door key cylinder.	BL-24
	3. Replace BCM.	BCS-14
Selective unlock function does not operate by door request switch (passenger side) (other door lock function operate).	1. Check "SELECT UNLOCK FUNCTION" setting in "WORK SUPPORT".	BL-74
	2. Replace Intelligent Key unit.	BL-113
Auto lock function does not operate.	1. Check "AUTO RELOCK TIMER" setting in "WORK SUPPORT".	BL-74
	2. Check door switch.	BL-88
	3. Check key slot.	BL-87
	4. Replace BCM.	BCS-14
Key reminder function does not operate.	1. Check "ANTI KEY LOCK IN FUNCTION" setting in "WORK SUPPORT".	BL-74
	2. Check door switch.	BL-88
	3. Check inside key antenna.	BL-101
	4. Check unlock sensor.	BL-95
	5. Check Intelligent Key battery inspection.	BL-113
	6. Replace Intelligent Key unit.	BL-113

REMOTE KEYLESS ENTRY FUNCTION MALFUNCTION

NOTE:

- Before performing the diagnosis in the following table, check "Trouble Diagnosis Procedure". Refer to [BL-72, "Trouble Diagnosis Procedure"](#).
- Make sure that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.
- If the following "symptoms" are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

Conditions of Vehicle (Operating Conditions)

- Intelligent Key is out of key slot.
- Ignition switch is not ON position.
- All doors are closed.

Symptom	Diagnosis/service procedure	Reference page
All of the remote keyless entry functions do not operate.	1. Check Intelligent Key battery inspection.	BL-113
	2. Replace Intelligent Key unit.	BL-113
Selective unlock function does not operate by Intelligent Key.	1. Check "SELECT UNLOCK FUNCTION" setting in "WORK SUPPORT".	BL-74
	2. Check Intelligent Key battery inspection.	BL-113
	3. Replace Intelligent Key unit.	BL-113

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Symptom	Diagnosis/service procedure	Reference page
Auto lock function does not operate properly.	1. Check "AUTO RELOCK TIMER" setting in "WORK SUPPORT".	BL-74
	2. Check door switch.	BL-88
	3. Check key slot.	BL-87
	4. Replace BCM.	BCS-14
Key reminder function does not operate.	1. Check "ANTI KEY LOCK IN FUNCTION" setting in "WORK SUPPORT".	BL-74
	2. Check door switch.	BL-88
	3. Check inside key antenna.	BL-101
	4. Check unlock sensor.	BL-95
	5. Check Intelligent Key battery inspection.	BL-113
	6. Replace Intelligent Key unit.	BL-113
Panic alarm function does not operate.	1. Check "PANIC ALARM DELAY" setting in "WORK SUPPORT".	BL-74
	2. Check theft warning operation.	BL-197
	3. Check Intelligent Key battery inspection.	BL-113
	4. Check key slot.	BL-87
	5. Replace Intelligent Key unit.	BL-113

TRUNK OPEN FUNCTION MALFUNCTION

NOTE:

- Before performing the diagnosis in the following table, check "Trouble Diagnosis Procedure". Refer to [BL-72, "Trouble Diagnosis Procedure"](#).
- Make sure that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.
- If the following "symptoms" are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

Conditions of Vehicle (Operating Conditions)

- Intelligent Key is out of key slot.
- All doors are closed.

Symptom	Diagnosis/service procedure	Reference page
Trunk open function does not operate by trunk opener request switch.	1. Check trunk opener request switch.	BL-94
	2. Check trunk lid opener cancel switch.	BL-109
	3. Check outside key antenna (trunk room).	BL-100
	4. Replace Intelligent Key unit.	BL-113
Trunk open function does not operate by Intelligent Key.	1. Check "TRUNK OPEN DELAY" setting in "WORK SUPPORT".	BL-74
	2. Check trunk lid opener system.	BL-189
	3. Check trunk room lamp switch.	BL-90
	4. Check Intelligent Key battery inspection.	BL-113
	5. Replace Intelligent Key unit.	BL-113
Key reminder function does not operate.	1. Check door switch.	BL-88
	2. Check trunk room lamp switch.	BL-90
	3. Check inside key antenna (trunk room).	BL-101
	4. Check trunk lid opener system.	BL-189
	5. Replace Intelligent Key unit.	BL-113

HAZARD AND BUZZER REMINDER FUNCTION MALFUNCTION

NOTE:

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

- Before performing the diagnosis in the following table, check “Trouble Diagnosis Procedure”. Refer to [BL-72, "Trouble Diagnosis Procedure"](#).
- If the following “symptoms” are detected, check systems shown in the “Diagnosis/service procedure” column in this order.

Conditions of Vehicle (Operating Conditions)

- “LOCK/UNLOCK BY I-KEY” is ON when setting on CONSULT-III.
- “ANSWER BACK FUNCTION” is ON when setting on CONSULT-III.
- Ignition switch is in OFF position.
- All doors are closed.
- Intelligent Key is out of key slot.

Symptom	Diagnosis/service procedure	Reference page
Hazard reminder does not operate by request switch. (Horn reminder operate.)	1. Check “HAZARD ANSWER BACK” setting in “WORK SUPPORT”.	BL-74
	2. Check hazard function with hazard switch.	LT-152
	3. Replace Intelligent Key unit.	BL-113
Buzzer reminder does not operate by request switch. (Hazard reminder operate.)	1. Check “ANSWER BACK WITH I-KEY LOCK” or “ANSWER BACK WITH I-KEY UNLOCK” setting in “WORK SUPPORT”.	BL-74
	2. Check Intelligent Key warning buzzer.	BL-97
	3. Replace Intelligent Key unit.	BL-113
Buzzer reminder does not operate by trunk opener request switch.	1. Check “TRUNK/GLASS HATCH OPEN” setting in “WORK SUPPORT”.	BL-74
	2. Check Intelligent Key warning buzzer.	BL-97
	3. Check trunk opener lid system.	BL-189
	4. Replace Intelligent Key unit	BL-113

HAZARD AND HORN REMINDER FUNCTION MALFUNCTION

NOTE:

- Before performing the diagnosis in the following table, check “Trouble Diagnosis Procedure”. Refer to [BL-72, "Trouble Diagnosis Procedure"](#).
- Make sure that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.
- If the following “symptoms” are detected, check systems shown in the “Diagnosis/service procedure” column in this order.

Conditions of Vehicle (Operating Conditions)

- “ANSWER BACK FUNCTION” is ON when setting on CONSULT-III.
- Ignition switch is in OFF position.
- All doors are closed.

Symptom	Diagnosis/service procedure	Reference page
Hazard reminder does not operate by Intelligent Key button. (Horn reminder operate.)	1. Check “HAZARD ANSWER BACK” setting in “WORK SUPPORT”.	BL-74
	2. Check hazard function with hazard switch.	LT-152
	3. Replace Intelligent Key	BL-113
Horn reminder does not operate by Intelligent Key button (door lock/unlock button). (Hazard reminder operate.)	1. Check “HORN WITH KEYLESS LOCK” setting in “WORK SUPPORT”.	BL-74
	2. Check horn function.	BL-112
	3. Replace Intelligent Key unit	BL-113

POWER WINDOW DOWN FUNCTION MALFUNCTION

NOTE:

- Before performing the diagnosis in the following table, check “Trouble Diagnosis Procedure”. Refer to [BL-72, "Trouble Diagnosis Procedure"](#).

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

- If the following “symptoms” are detected, check systems shown in the “Diagnoses/service procedure” column in this order.

Conditions of Vehicle (Operating Conditions)

- Ignition switch is in OFF or ACC position.
- Retained power operation does not operate. Refer to [GW-14. "System Description"](#).

Symptom	Diagnosis/service procedure	Reference page
Power window down function does not operate.	1. Check “P/W DOWN DELAY” setting in “WORK SUPPORT”.	BL-74
	2. Check Intelligent Key battery inspection.	BL-113

WARNING FUNCTION MALFUNCTION

NOTE:

- Before performing the diagnosis in the following table, check “Trouble Diagnosis Procedure”. Refer to [BL-72. "Trouble Diagnosis Procedure"](#).
- Make sure that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.
- If the following “symptoms” are detected, check systems shown in the “Diagnosis/service procedure” column in this order.

Conditions of Vehicle (Operating Conditions)

Warning chime functions operating condition is extremely complicated, during operating confirmations, reconfirm the list above twice in order to ensure proper operation.

Symptom		Diagnosis/service procedure	Reference page
OFF position warning does not operate.	For internal	1. Check ignition switch position.	BL-105
		2. Check door switch.	BL-88
		3. Check warning chime function.	BL-113
		4. Replace Intelligent Key unit.	BL-113
	For external	1. Check ignition switch position.	BL-105
		2. Check door switch.	BL-88
		3. Check Intelligent Key warning buzzer.	BL-97
		4. Replace Intelligent Key unit.	BL-113
P position warning does not operate.		1. Check Transmission range switch.	BL-103
		2. Check door switch.	BL-88
		3. Check Intelligent Key warning buzzer.	BL-97
		4. Check warning chime function.	BL-113
		5. Check combination meter display.	BL-112
		6. Replace Intelligent Key unit.	BL-113
ACC warning does not operate		1. Check ignition switch position.	BL-105
		2. Check warning chime function.	BL-113
		3. Check combination meter display.	BL-112
		4. Replace Intelligent Key unit.	BL-113

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Symptom		Diagnosis/service procedure	Reference page	
Take away warning does not operate.	Door open to close	1. Check door switch.	BL-88	A
		2. Check inside key antenna.	BL-101	
		3. Check Intelligent Key warning buzzer.	BL-97	B
		4. Check warning chime function.	BL-113	
		5. Check key slot illumination.	BL-111	C
		6. Check combination meter display.	BL-112	
		7. Replace Intelligent Key unit.	BL-113	
	Push-button ignition switch operation	1. Check ignition switch position.	BL-105	D
		2. Check inside key antenna.	BL-101	
		3. Check warning chime function.	BL-113	E
		4. Check key slot illumination.	BL-111	
		5. Check combination meter display.	BL-112	F
		6. Replace Intelligent Key unit.	BL-113	
	Door is open	1. Check ignition switch position.	BL-105	G
		2. Check inside key antenna.	BL-101	
		3. Check combination meter display.	BL-112	H
		4. Replace Intelligent Key unit.	BL-113	
	Take away through window	1. Check "TAKE OUT FROM WINDOW WARN" setting in "WORK SUPPORT".	BL-74	I
		2. Check inside key antenna.	BL-101	
		3. Check warning chime function.	BL-113	BL
		4. Check key slot illumination.	BL-111	
		5. Check combination meter display.	BL-112	J
		6. Replace Intelligent Key unit.	BL-113	
	Key warning chime does not operate.	1. Check key slot.	BL-87	K
2. Check door switch.		BL-88		
3. Check warning chime function.		BL-113	L	
4. Check key slot illumination.		BL-111		
5. Check combination meter display.		BL-112	M	
6. Replace Intelligent Key unit.		BL-113		
Door lock operation warning chime does not operate.	1. Check door switch.	BL-88	N	
	2. Check key slot illumination.	BL-111		
	3. Check Intelligent Key warning buzzer.	BL-97	O	
	4. Check inside key antenna.	BL-101		
	5. Replace Intelligent Key unit.	BL-113	P	

Check CAN Communication System

INFOID:000000005349373

1. CHECK SELF-DIAGNOSTIC RESULTS

CAUTION:

If CONSULT-III is used with no connection of CONSULT-III CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which performs CAN communication.

Ⓜ With CONSULT-III

- Connect CONSULT-III, and turn ignition switch ON.
- Touch "INTELLIGENT KEY" on "SELECT SYSTEM" screen.
- Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
- Check display content in self-diagnostic results.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

CONSULT-III display item	DTC code
NO DTC IS DETECTED	—
CAN COMM CIRCUIT	U1000
CONTROL UNIT (CAN)	U1010

OK or NG

NO DTC IS DETECTED>> INSPECTION END

CAN COMM CIRCUIT [U1000]>> After printing "SELF-DIAGNOSIS RESULTS", go to "CAN SYSTEM",
Refer to [LAN-10. "Precautions for Trouble Diagnosis"](#).

CONTROL UNIT (CAN) [U1010]>> Replace Intelligent Key unit.

Check Power Supply and Ground Circuit

INFOID:000000005349374

1.CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit connector.
3. Check voltage between Intelligent Key unit harness connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Intelligent Key unit connector	Terminal	Ground Battery voltage
M32	1	
M33	41	
	57	

OK or NG

OK >> GO TO 2.

NG >> Repair or replace Intelligent Key power supply circuit.

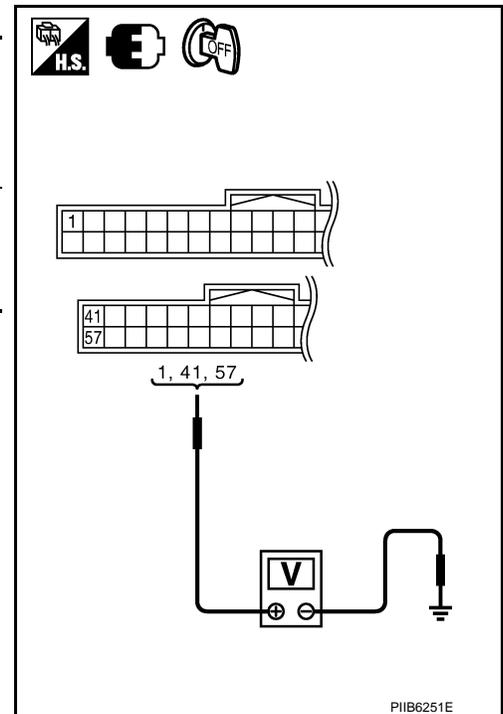

2.CHECK GROUND CIRCUIT

Check continuity between Intelligent Key unit harness connector and ground.


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Intelligent Key unit connector	Terminal	Ground	Continuity
M32	20		Ground
	40		
M33	56		
	72		

OK or NG

- OK >> Power supply and ground circuits are OK.
 NG >> Repair or replace the Intelligent Key unit ground circuit.

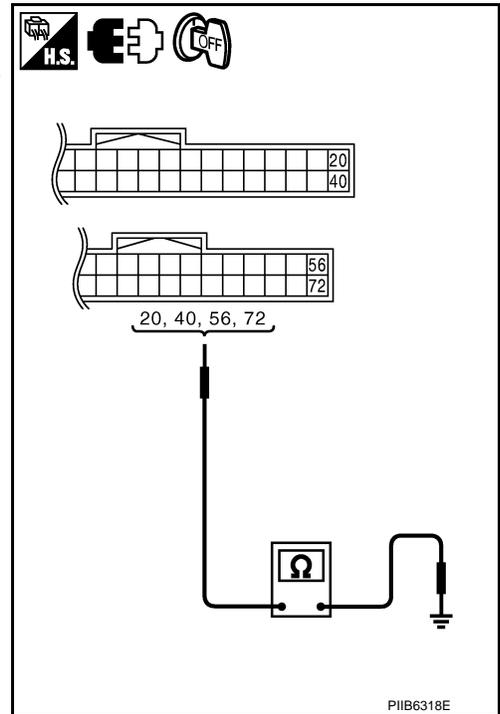

Check Key Slot

1. CHECK KEY SLOT INPUT SIGNAL

Check voltage between Intelligent Key unit harness connector and ground.

Terminals		Condition	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M32	19	Intelligent Key inserted	Battery voltage
		Intelligent Key removed	0

OK or NG

- OK >> Key slot is OK.
 NG >> GO TO 2.

2. CHECK KEY SLOT POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect key slot connector.
- Check voltage between slot connector and ground.



Terminals		Voltage (V) (Approx.)
(+)	(-)	
Key slot connector	Terminal	
M14	1	Battery voltage

OK or NG

- OK >> GO TO 3.
 NG >> Repair or replace key slot power supply circuit.

3. CHECK KEY SLOT

Check key slot.

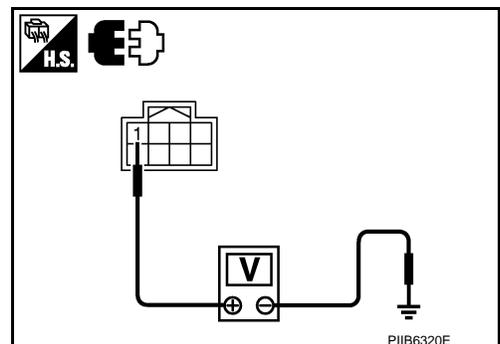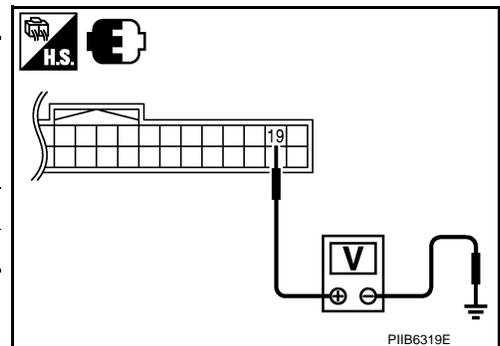


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminal		Condition	Continuity
Key slot			
1	3	Intelligent Key inserted	Yes
		Intelligent Key removed	No

OK or NG

- OK >> GO TO 4.
 NG >> Replace key slot.

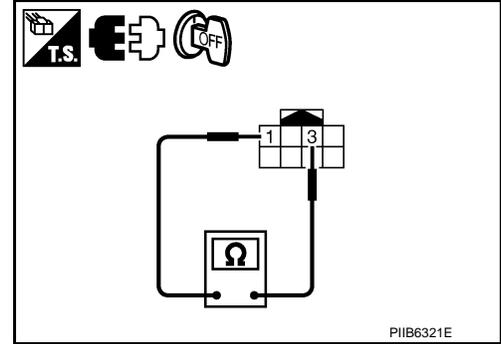


4. CHECK KEY SLOT GROUND CIRCUIT

Check continuity between key slot connector and ground.

Key slot connector	Terminal	Ground	Continuity
M14	8		

OK or NG

- OK >> GO TO 5.
 NG >> Repair or replace key slot ground circuit.

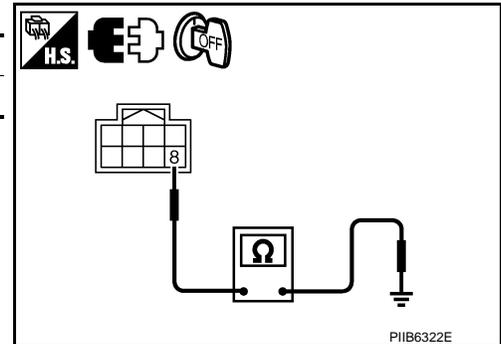

5. CHECK KEY SWITCH CIRCUIT

1. Disconnect Intelligent Key unit connector.
2. Check continuity between Intelligent Key unit connector 7 and key slot connector.


A		B		Continuity
Intelligent Key unit connector	Terminal	Key slot connector	Terminal	
M32	19	M14	2	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	19		No

OK or NG

- OK >> Check the condition of harness and harness connector.
 NG >> Repair or replace harness between Intelligent Key unit and key slot.

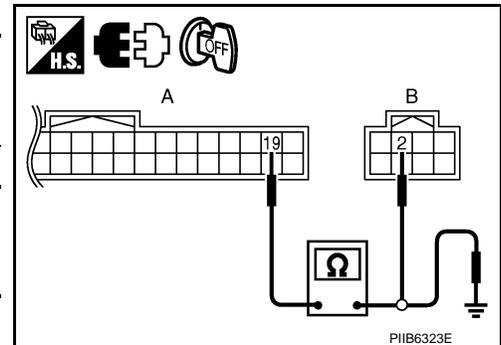

Check Door Switch

INFOID:000000005349376

1. CHECK DOOR SWITCH INPUT SIGNAL

Ⓟ With CONSULT-III

Check door switches (“DOOR SW-DR”, “DOOR SW-AS”, “DOOR SW-RL” and “DOOR SW-RR”) in “DATA MONITOR” mode with CONSULT-III.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Monitor item	Condition
DOOR SW-DR	CLOSE → OPEN: OFF → ON
DOOR SW-AS	
DOOR SW-RL	
DOOR SW-RR	


⊗ Without CONSULT-III

- Turn ignition switch OFF.
- Check voltage between BCM connector and ground.

Terminals		Door condition	Voltage (V) (Approx.)	
(+)	(-)			
BCM connector	Terminal			
M1	12	Front passenger side	OPEN: 0 CLOSE: Battery voltage	
		Rear RH side	OPEN: 0 CLOSE: Battery voltage	
	13		Ground	Driver side
		Rear LH side		OPEN: 0 CLOSE: Battery voltage

OK or NG

- OK >> Door switch circuit is OK.
 NG >> GO TO 2.

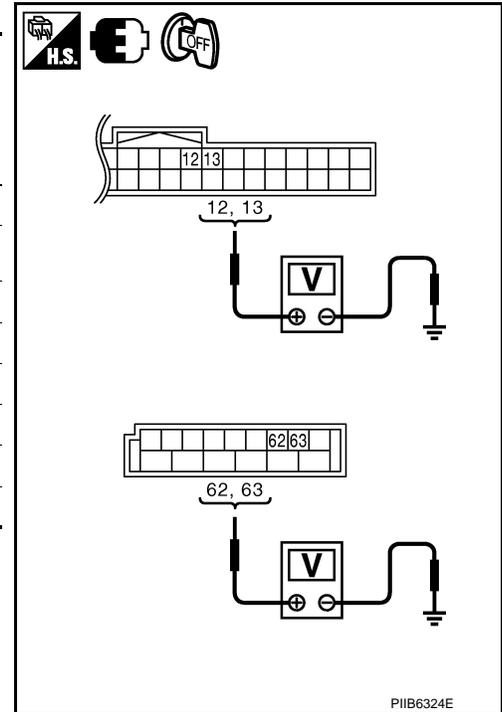


2. CHECK DOOR SWITCH

- Turn ignition switch OFF.
- Disconnect door switch connector.
- Check door switch.

Terminal	Door switch	Continuity
Door switch		
2	Pushed	No
	Released	Yes

OK or NG

- OK >> GO TO 3.
 NG >> Replace malfunction door switch.

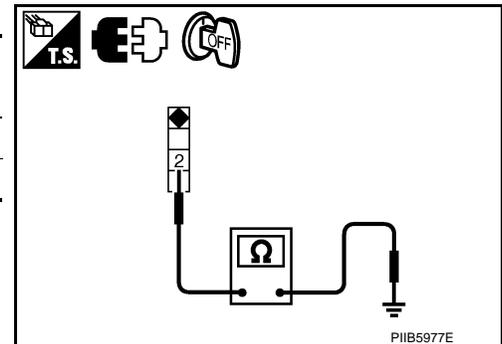

3. CHECK DOOR SWITCH CIRCUIT

- Disconnect BCM connector.
- Check continuity between BCM connector and door switch connector.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
BCM connector	Terminal	Door switch connector	Terminal	
M1	12	B424	2	Yes
	13	B403		
M3	62	B11		
	63	B53		

3. Check continuity between BCM connector and ground.

A		Ground	Continuity
BCM connector	Terminal		
M1	12	Ground	No
	13		
M3	62		
	63		

OK or NG

OK >> GO TO 4.

NG >> Repair or replace harness between BCM and door switch.

4. CHECK BCM OUTPUT SIGNAL



1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

Terminals		Voltage (V) (Approx.)	
(+)	(-)		
BCM connector	Terminal	Ground	Battery voltage
	M1		
	13		
M3	62		
	63		

OK or NG

OK >> Check the condition of harness and connector.

NG >> Replace BCM.

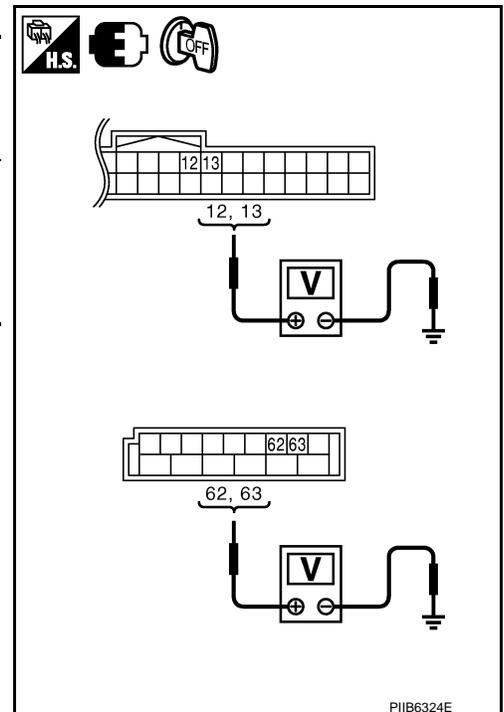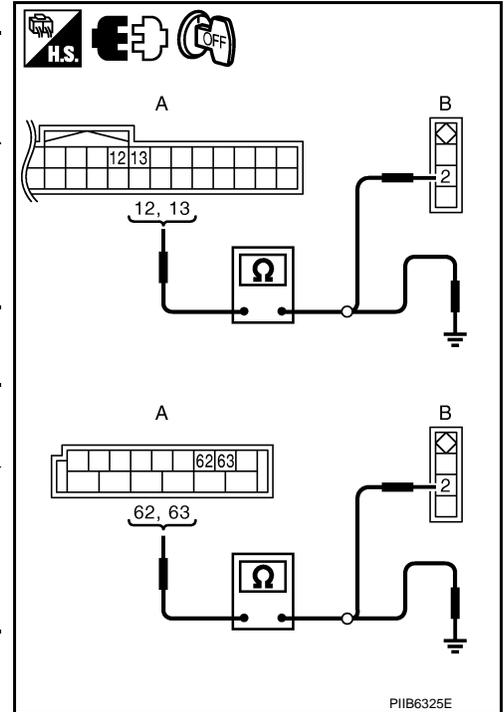

Check Trunk Room Lamp Switch

1. CHECK TRUNK ROOM LAMP SWITCH INPUT SIGNAL

Ⓜ With CONSULT-III

Check ("TRUNK SW") in "DATA MONITOR" mode with CONSULT-III.

INFOID:000000005349377

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Monitor item	Condition	
TRUNK SW	OPEN	: ON
	CLOSE	: OFF


⊗ Without CONSULT-III

1. Turn ignition switch OFF.
2. Check voltage between BCM connector and ground.

Terminals		Trunk condition	Voltage (V) (Approx.)
(+)			
BCM connector	Terminal		
M3	57	OPEN	0
		CLOSE	Battery voltage

OK or NG

- OK >> Trunk room lamp switch circuit is OK.
 NG >> GO TO 2.

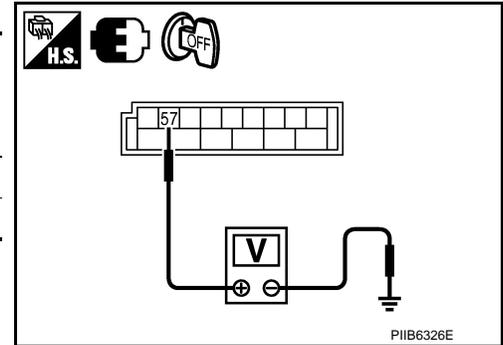


2. CHECK TRUNK ROOM LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect trunk lid lock assembly connector.
3. Check trunk room lamp switch.

Terminal		Trunk condition	Continuity
Trunk room lamp switch			
1	2		
		OPEN	Yes
		CLOSE	No

OK or NG

- OK >> GO TO 3.
 NG >> Replace trunk room lamp switch.

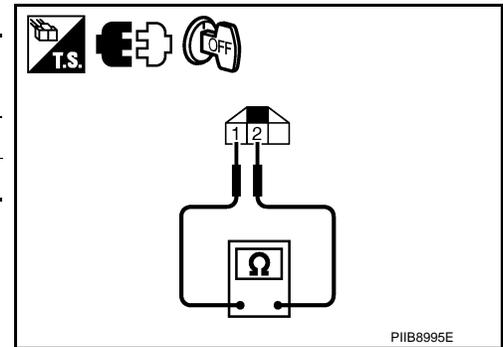

3. CHECK TRUNK ROOM LAMP SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM connector and trunk lid lock assembly connector.

A		B		Continuity
BCM connector	Terminal	Trunk lid lock assembly connector	Terminal	
M3	57	T106	1	Yes


3. Check continuity between BCM connector and ground.

A		Ground	Continuity
BCM connector	Terminal		
M3	57		No

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace harness between BCM and trunk room lamp switch.

4. CHECK TRUNK ROOM LAMP SWITCH GROUND CIRCUIT

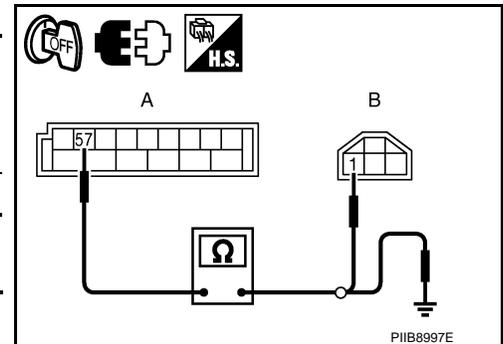

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BL

INTELLIGENT KEY SYSTEM


< SERVICE INFORMATION >

Check continuity between trunk lid lock assembly connector and ground.

Trunk lid lock assembly connector	Terminal	Ground	Continuity
T106	2		Yes

OK or NG

- OK >> GO TO 5.
- NG >> Repair or replace trunk room lamp switch ground circuit.

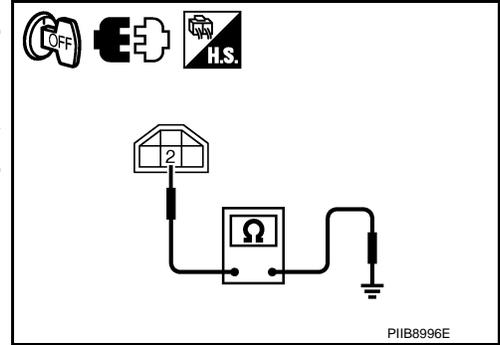


5. CHECK BCM OUTPUT SIGNAL

1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
BCM connector	Terminal	
M3	57	Battery voltage

OK or NG

- OK >> Check the condition of harness and connector.
- NG >> Replace BCM.

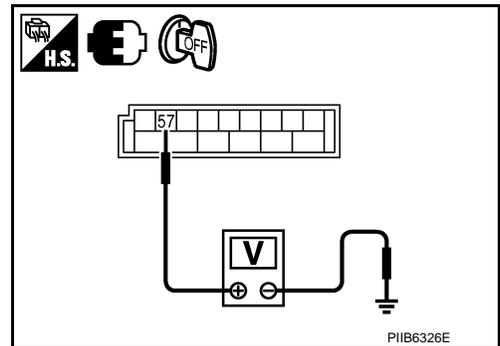

Check Door Request Switch

1. CHECK DOOR REQUEST SWITCH

With CONSULT-III

Check door request switch ("DR REQ SW" or "AS REQ SW") in "DATA MONITOR" mode.

Monitor item	Condition
DR REQ SW	Door request switch is pressed: ON
AS REQ SW	Door request switch is released: OFF

Without CONSULT-III


1. Turn ignition switch OFF.
2. Check voltage between Intelligent Key unit harness connector and ground.

Terminals		Door re- quest switch Condition	Voltage (V) (Approx.)		
(+)	(-)				
Intelligent Key unit connector	Terminal				
M32	Door request switch (driver side)	2	Ground	Pressed	0
				Released	5
	Door request switch (passenger side)	22	Ground	Pressed	0
				Released	5

OK or NG

- OK >> Door request switch is OK.
- NG >> GO TO 2.

2. CHECK DOOR REQUEST SWITCH CIRCUIT

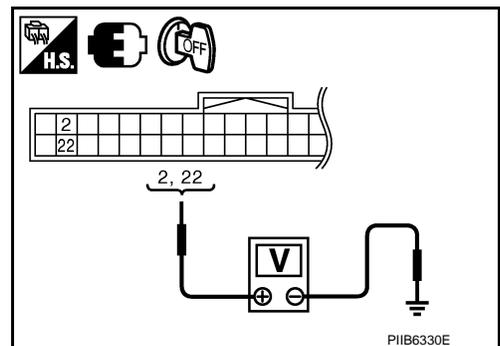


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

1. Disconnect Intelligent Key unit and front outside handle connector.
2. Check continuity between Intelligent Key unit connector and front outside handle connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Front outside handle connector	Terminal	
M32	2	D15 (LH)	3	Yes
	22	D45 (RH)		

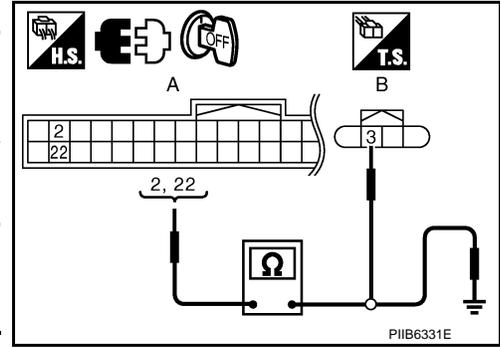

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	2		No
	22		

OK or NG


OK >> GO TO 3.

NG >> Repair or replace harness between Intelligent Key unit and front outside handle.

3. CHECK DOOR REQUEST SWITCH OPERATION

Check front outside handle.

Terminal		Door request switch condition	Continuity
Front outside handle			
3	4	Pressed	Yes
		Released	No

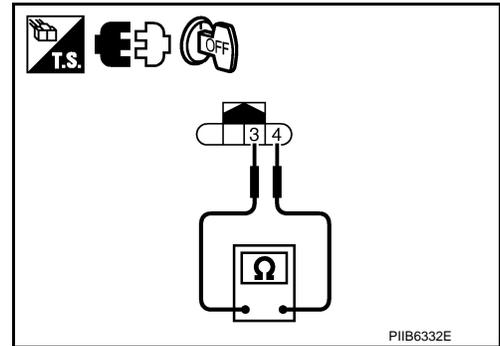

OK or NG


OK >> GO TO 4.

NG >> Replace malfunction front outside handle.

4. CHECK DOOR REQUEST SWITCH GROUND CIRCUIT

Check continuity between front outside handle connector and ground.

Front outside handle connector	Terminal	Ground	Continuity
D15 (LH)	4		
D45 (RH)			

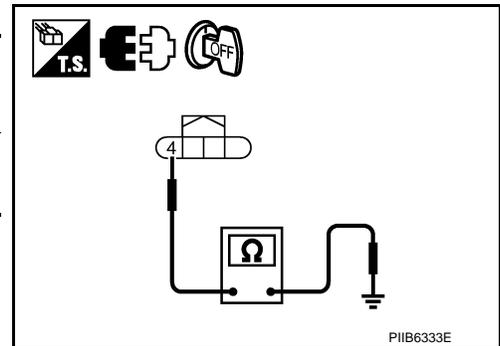

OK or NG

OK >> GO TO 5.

NG >> Repair or replace front outside handle ground circuit.


5. CHECK INTELLIGENT KEY UNIT OUTPUT SIGNAL

1. Connect Intelligent Key unit connector.
2. Check voltage between Intelligent Key unit connector and ground.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminals		(-)	Voltage (V) (Approx.)
(+)	Terminal		
Intelligent Key unit connector			
M32	2	Ground	5
	22		

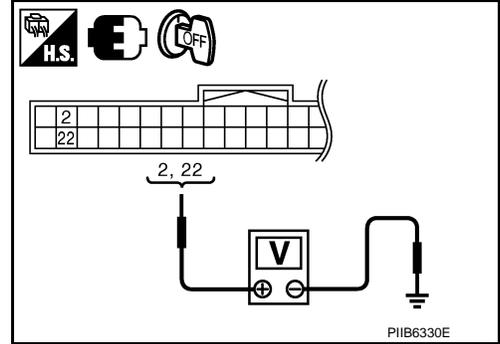

OK or NG

- OK >> Check the condition of harness and connector.
- NG >> Replace Intelligent Key unit.

Check Trunk Opener Request Switch

INFOID:000000005349379

1. CHECK TRUNK OPENER REQUEST SWITCH

Ⓟ With CONSULT-III


Check trunk opener request switch ("BD/TR REQ SW") in "DATA MONITOR" mode.

Monitor item	Condition
BD/TR REQ SW	Trunk opener request switch is pressed: ON
	Trunk opener request switch is released: OFF

ⓧ Without CONSULT-III

1. Turn ignition switch OFF.
2. Check voltage between Intelligent Key unit connector and ground.

Terminals		Trunk lid opener request switch condition	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M33	61	Pressed	0
		Released	5

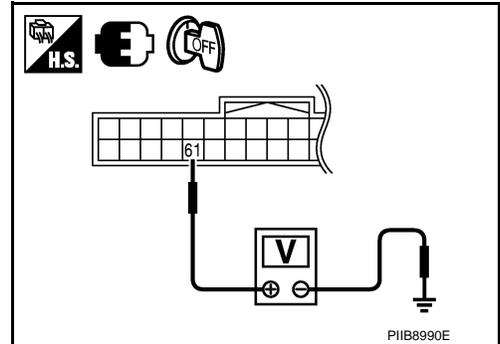

OK or NG

- OK >> Trunk opener request switch is OK.
- NG >> GO TO 2.


2. CHECK TRUNK OPENER REQUEST SWITCH CIRCUIT

1. Disconnect Intelligent Key unit and trunk opener request switch connector.
2. Check continuity between Intelligent Key unit connector and trunk opener request switch connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Trunk request switch connector	Terminal	
M33	61	T107	1	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M33	61		No

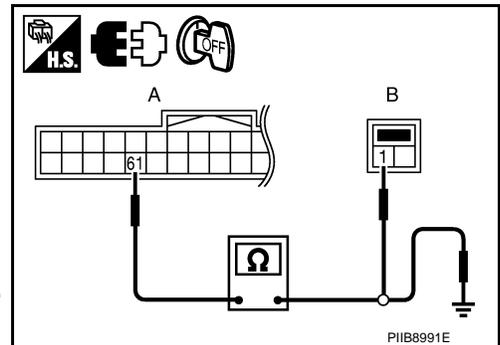

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

OK or NG


OK >> GO TO 3.

NG >> Repair or replace harness between Intelligent Key unit and trunk opener request switch.

3. CHECK TRUNK OPENER REQUEST SWITCH OPERATION

Check trunk opener request switch.

Terminal		Trunk opener request switch condition	Continuity
Trunk opener request switch			
1	2	Pressed	Yes
		Released	No

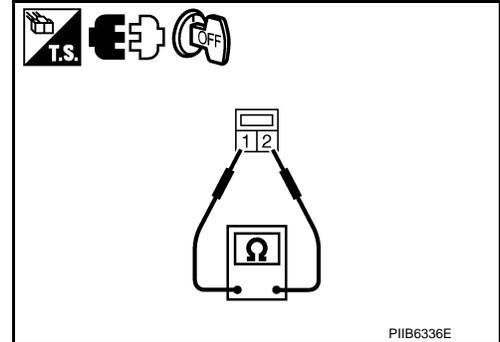

OK or NG


OK >> GO TO 4.

NG >> Replace trunk opener request switch.

4. CHECK TRUNK OPENER REQUEST SWITCH GROUND CIRCUIT

Check continuity between trunk opener request switch connector and ground.

Trunk opener request switch connector	Terminal	Ground	Continuity
T107	2		

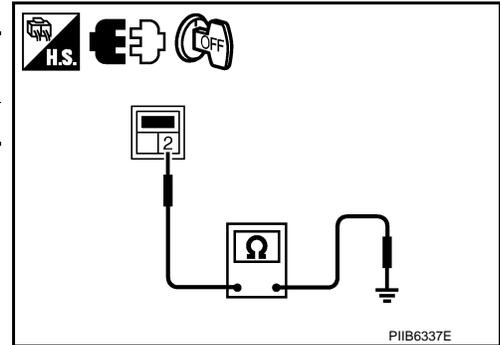

OK or NG


OK >> GO TO 5.

NG >> Repair or replace trunk opener request switch ground circuit.

5. CHECK INTELLIGENT KEY UNIT OUTPUT SIGNAL

1. Connect Intelligent Key unit connector.
2. Check voltage between Intelligent Key unit connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Intelligent Key unit connector	Terminal	
M33	61	Ground
		5

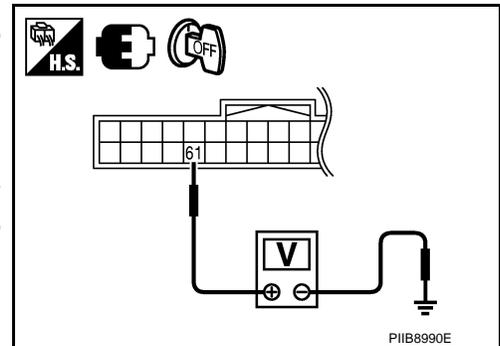

OK or NG

OK >> Check the condition of harness and connector.

NG >> Replace Intelligent Key unit.

Check Unlock Sensor

1. CHECK UNLOCK SENSOR POWER SUPPLY

With CONSULT-III

Check unlock sensor ("DOOR STAT SW") in "DATA MONITOR" mode.

Monitor item	Condition
DOOR STAT SW	Front door lock (driver side) LOCK: ON
	Front door lock (driver side) UNLOCK: OFF

INFOID:000000005349380

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >


⊗ Without CONSULT-III

Check voltage between Intelligent Key unit connector and ground.

Terminals		Front door lock (driver side) condition	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M32	26	Locked	Battery voltage
		Unlocked	0

OK or NG

- OK >> Unlock sensor is OK.
 NG >> GO TO 2.

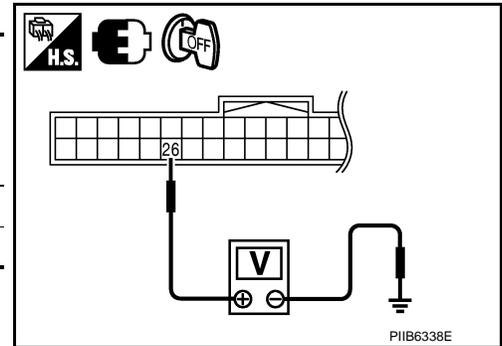

2. CHECK UNLOCK SENSOR CIRCUIT

- Turn ignition switch OFF.
- Disconnect Intelligent Key unit and front door lock assembly (driver side) connector.
- Check continuity between Intelligent Key unit connector and front door lock assembly (driver side) connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Front door lock assembly (driver side) connector	Terminal	
M32	26	D14	3	Yes

- Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	26		No

OK or NG

- OK >> GO TO 3.
 NG >> Repair or replace harness between Intelligent Key unit and front door lock assembly (driver side).


3. CHECK UNLOCK SENSOR GROUND CIRCUIT

Check continuity between front door lock assembly (driver side) connector and ground.

Front door lock assembly (driver side) connector	Terminal	Ground	Continuity
D14	4		Yes

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace harness.

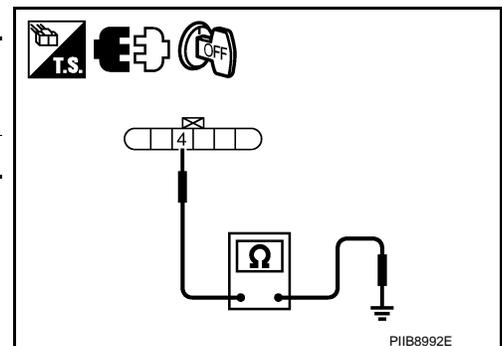

4. CHECK INTELLIGENT KEY UNIT OUTPUT SIGNAL

- Connect Intelligent Key unit harness connector.
- Check voltage between Intelligent Key unit connector and ground.


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminals			Voltage (V) (Approx.)
(+)		(-)	
Intelligent Key unit connector	Terminal		
M32	26	Ground	Battery voltage

OK or NG

- OK >> Replace front door lock assembly (driver side).
- NG >> Replace Intelligent Key unit.

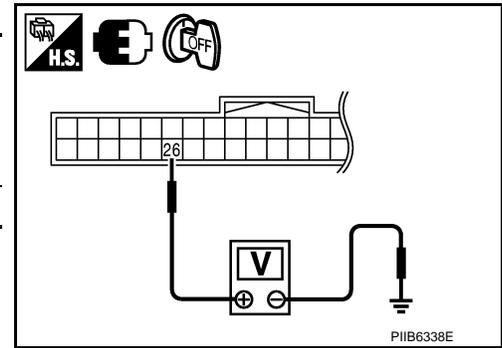

INFOID:000000005349381

Check Intelligent Key Warning Buzzer


1. CHECK INTELLIGENT KEY WARNING BUZZER

Check voltage between Intelligent Key unit connector and ground.

Terminals			Warning buzzer operation condition	Voltage (V) (Approx.)
(+)		(-)		
Intelligent Key unit connector	Terminal			
M33	55	Ground	Yes	0
			No	Battery voltage

OK or NG

- OK >> Intelligent Key warning buzzer is OK.
- NG >> GO TO 2.

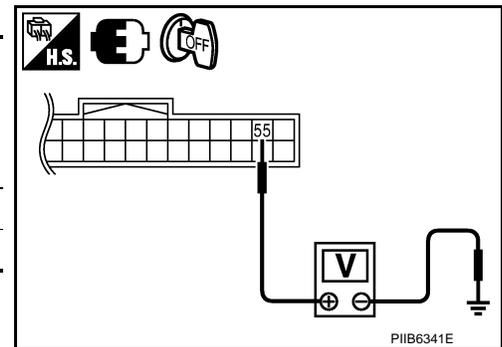


2. CHECK INTELLIGENT KEY WARNING BUZZER POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key warning buzzer connector.
3. Check voltage between Intelligent Key warning buzzer connector and ground.

Terminals			Voltage (V) (Approx.)
(+)		(-)	
Intelligent Key warning buzzer connector	Terminal		
E37	3	Ground	Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace Intelligent Key warning buzzer power supply circuit.

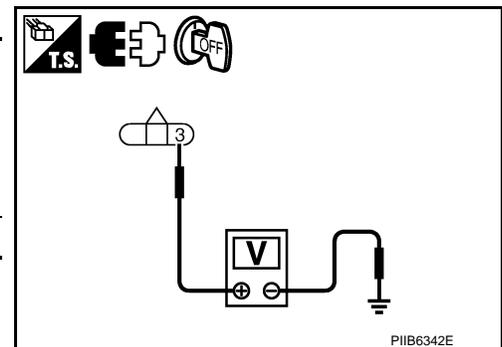

3. CHECK INTELLIGENT KEY WARNING BUZZER CIRCUIT

1. Disconnect Intelligent Key unit connector.
2. Check continuity between Intelligent Key unit connector and Intelligent Key warning buzzer connector.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	Intelligent Key warning buzzer connector	Terminal	
M33	55	E37	1	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M33	55		No

OK or NG

OK >> GO TO 4.

NG >> Repair or replace harness between Intelligent Key unit and Intelligent Key warning buzzer.

4. CHECK INTELLIGENT KEY WARNING BUZZER OPERATION



Connect battery power supply to Intelligent Key warning buzzer terminals 1 and 3, and check the operation.

1 (BAT-) - 3 (BAT+) : the buzzer sounds

OK or NG

OK >> Intelligent Key warning buzzer is OK.

NG >> Replace Intelligent Key warning buzzer.

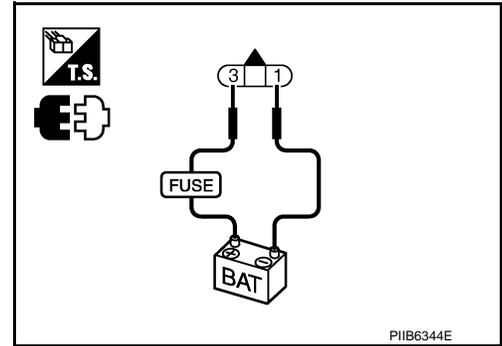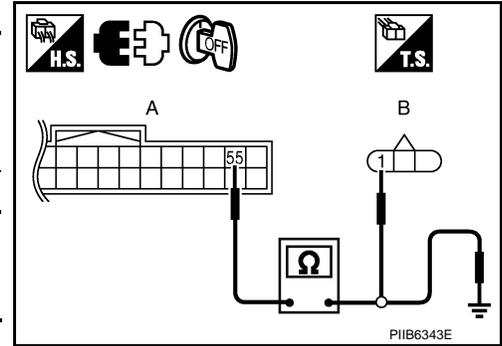

Check Outside Key Antenna (Driver Side and Passenger Side)

INFOID:000000005349382

1. CHECK OUTSIDE KEY ANTENNA FUNCTION

With CONSULT-III

1. Check the operation with ("ANTENNA") in the ACTIVE TEST.
2. Touch "DRIVER ANT" and "ASSIST ANT" on screen.
3. Carry the Intelligent Key into the antenna detection area.

Test item	Corresponding antenna
DRIVER ANT	Outside key antenna driver side
ASSIST ANT	Outside key antenna passenger side

Does the hazard lamps flash?

Yes >> Outside key antenna (driver side or passenger side) is OK.

No >> GO TO 2.

2. CHECK OUTSIDE KEY ANTENNA INPUT SIGNAL 1


1. Turn ignition switch OFF.
2. Check signal between Intelligent Key unit connector and ground with oscilloscope.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminals		Condition	Signal (Reference value.)
(+)			
Intelligent Key unit connector	Terminal		
M32	Driver side 24	Ground	
	Passenger side 11		

SIIA1910J

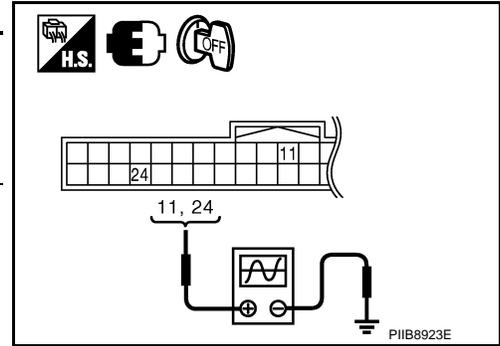


OK or NG

- OK >> Check the condition of harness and connector.
- NG >> GO TO 2.

3. CHECK OUTSIDE KEY ANTENNA CIRCUIT

1. Disconnect Intelligent Key unit and front outside handle connector.
2. Check continuity between Intelligent Key unit connector and front outside handle connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Front outside handle connector	Terminal	
M32	24	D15	1	Yes
	25		2	
	11	D45	1	
	12		2	

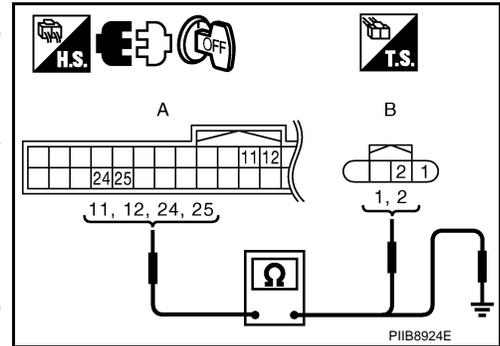

3. Check continuity between Intelligent Key unit connector and ground.

A		Continuity
Intelligent Key unit connector	Terminal	
M32	24	Ground
	25	
	11	
	12	

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace harness between Intelligent Key unit and front outside handle.


4. CHECK OUTSIDE KEY ANTENNA INPUT SIGNAL 2

1. Replace outside key antenna. (New antenna or other antenna)
2. Connect Intelligent Key unit and front outside handle connector.
3. Check signal between Intelligent Key unit connector and ground with oscilloscope.


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminals			Condition	Signal (Reference value.)
(+)		(-)		
Intelligent Key unit connector	Terminal			
M32	Driver side	24	Ground	Door request switch is pushed
	Passenger side	11		

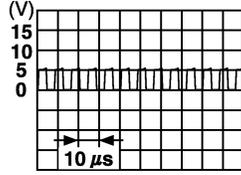

SIIA1910J

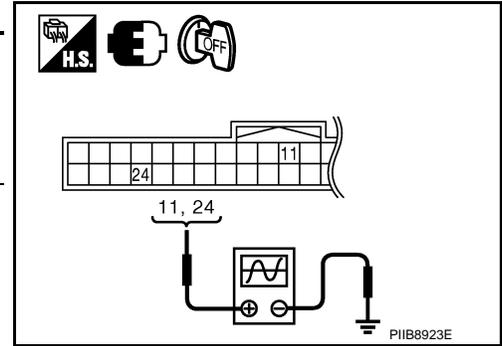

OK or NG

- OK >> Replace malfunction front outside handle.
- NG >> Replace Intelligent Key unit.

Check Outside Key Antenna (Trunk Room)

INFOID:000000005349383

1. CHECK OUTSIDE KEY ANTENNA FUNCTION

With CONSULT-III

1. Check the operation with ("ANTENNA") in the ACTIVE TEST.
2. Touch "BD/TR ANT" on screen.
3. Carry the Intelligent Key into the antenna detection area.

Test item	Corresponding antenna
BD/TR ANT	Outside key antenna trunk room


Do the hazard lamps flash?

- Yes >> Outside key antenna (trunk room) is OK.
- No >> GO TO 2.


2. CHECK OUTSIDE KEY ANTENNA INPUT SIGNAL 1

1. Turn ignition switch OFF.
2. Check signal between Intelligent Key unit connector and ground with oscilloscope.

Terminals			Condition	Signal (Reference value.)
(+)		(-)		
Intelligent Key unit connector	Terminal			
M32	17	Ground	Trunk request switch is pushed	

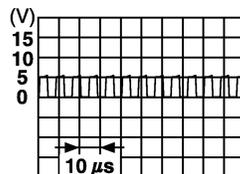

SIIA1910J

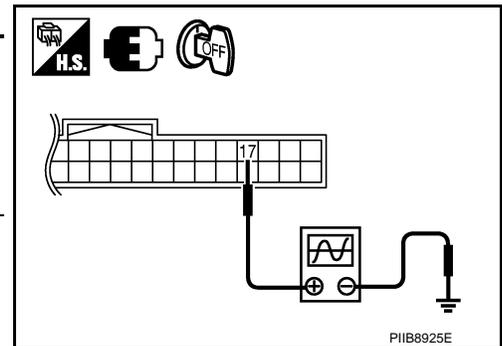

OK or NG

- OK >> Check the condition of harness and connector.
- NG >> GO TO 3.

3. CHECK OUTSIDE KEY ANTENNA CIRCUIT


1. Disconnect Intelligent Key unit and outside key antenna (trunk room) connector.
2. Check continuity between Intelligent Key unit connector and outside key antenna (trunk room) connector.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	Outside key antenna (trunk room) connector	Terminal	
M32	17	B121	1	Yes
	18		2	

3. Check continuity between Intelligent Key unit connector and ground.

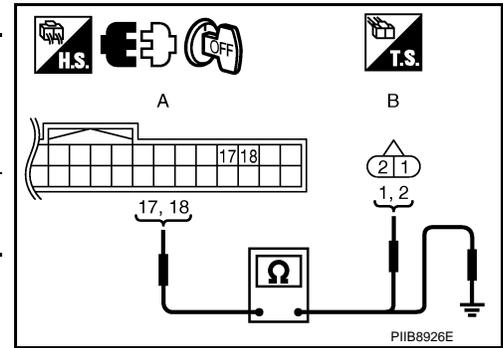

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	17		No
	18		

OK or NG


OK >> GO TO 4.

NG >> Repair or replace harness between Intelligent Key unit and outside key antenna (trunk room).

4. CHECK OUTSIDE KEY ANTENNA INPUT SIGNAL 2

1. Replace outside key antenna. (New antenna or other antenna)
2. Connect Intelligent Key unit and outside key antenna (trunk room) connector.
3. Check signal between Intelligent Key unit connector and ground with oscilloscope.

Terminals		Condition	Signal (Reference value.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M32	17	Ground	

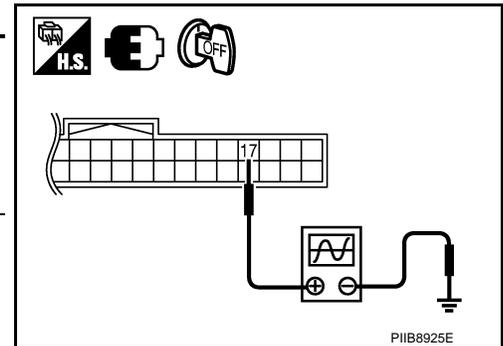

OK or NG

OK >> Replace malfunction front outside handle.

NG >> Replace Intelligent Key unit.

Check Inside Key Antenna

INFOID:000000005349384

1. CHECK INSIDE KEY ANTENNA FUNCTION

With CONSULT-III

1. Check the operation with ("ANTENNA") in the ACTIVE TEST.
2. Touch "ROOM ANT1" "ROOM ANT2" "ROOM ANT3" "LUG ANT" on screen.
3. Carry the Intelligent Key into the antenna detection area.

Test item	Corresponding antenna
ROOM ANT1	Inside key antenna instrument center
ROOM ANT2	Inside key antenna console

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >


Test item	Corresponding antenna
ROOM ANT3	Inside key antenna rear seat
LUG ANT1	Inside key antenna trunk room


Do the hazard lamps flash?

- Yes >> Inside key antenna is OK.
 No >> GO TO 2.

2. CHECK INSIDE KEY ANTENNA INPUT SIGNAL 1

- Turn ignition switch OFF.
- Check signal between Intelligent Key unit connector and ground with oscilloscope.

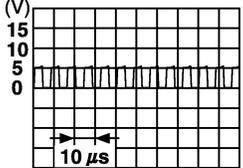Terminals		Condition	Signal (Reference value.)	
(+)				(-)
Intelligent Key unit connector	Terminal			
M33	Instrument center	Ground	 SIA1910J	
	Console			47
	Rear seat			49
	Trunk room			51

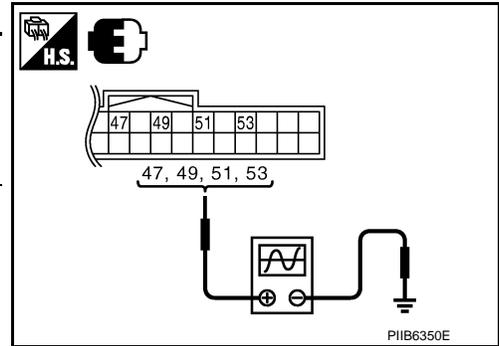


OK or NG

- OK >> Check the condition of harness and connector.
 NG >> GO TO 3.

3. CHECK INSIDE KEY ANTENNA CIRCUIT

- Disconnect Intelligent Key unit and inside key antenna connector.
- Check continuity between Intelligent Key unit connector and inside key antenna connector.

A		B		Continuity	
Intelligent Key unit connector	Terminal	Inside key antenna connector	Terminal		
M33	47	M83	Instrument center	1	Yes
	48		2		
	49	M142	Console	1	
	50		2		
	51	B45	Rear seat	1	
	52		2		
	53	B473	Trunk room	1	
	54		2		

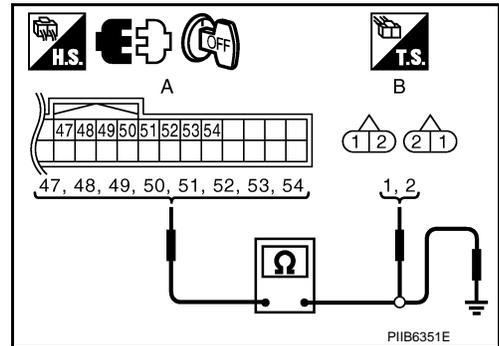

- Check continuity between Intelligent Key unit connector and ground.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

A		Terminal	Ground	Continuity
Intelligent Key unit connector				
M33	Instrument center	47	Ground	No
		48		
	Console	49		
		50		
	Rear seat	51		
		52		
	Trunk room	53		
		54		


OK or NG


OK >> GO TO 4.

NG >> Repair or replace harness between Intelligent Key unit and inside key antenna.

4. CHECK INDE KEY ANTENNA INPUT SIGNAL 2

1. Replace inside key antenna. (New antenna or other antenna)
2. Connect Intelligent Key unit and inside key antenna connector.
3. Check signal between Intelligent Key unit connector and ground with oscilloscope.

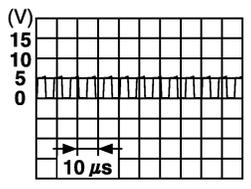Terminals		Condition	Signal (Reference value.)
(+)			
Intelligent Key unit connector	Terminal		
M33	Instrument center	47	Ground
	Console	49	
	Rear seat	51	
	Trunk room	53	
		Any door is open → close	 <p style="text-align: right; font-size: small;">SIIA1910J</p>

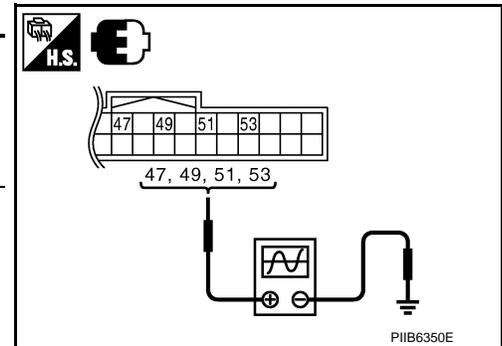

OK or NG

OK >> Replace malfunction inside key antenna.

NG >> Replace Intelligent Key unit.

Check Transmission Range Switch

INFOID:000000005349385

1. CHECK TRANSMISSION RANGE SWITCH INPUT SIGNAL

With CONSULT-III

Check ("P RANGE SW") in "DATA MONITOR" mode.

Monitor item	Condition
P RANGE SW	A/T shift selector P position: ON
	Other than above: OFF

Without CONSULT-III

1. Turn ignition switch OFF.
2. Check voltage between Intelligent Key unit connector and ground.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminals		A/T shift selector position	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M32	27	P	0
		Other than above	Battery voltage

OK or NG

- OK >> Transmission range switch circuit is OK.
 NG >> GO TO 2.

2. CHECK INTELLIGENT KEY UNIT OUTPUT SIGNAL

Check voltage between Intelligent Key unit connector and ground.

Terminals		Condition	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M33	58	Wake-up state (Open drive side door)	Battery voltage
		Sleep state (After 30 seconds or more since all doors are closed under the condition that the ignition switch is in the LOCK position)	0

OK or NG

- OK >> GO TO 3.
 NG >> Check the condition of harness and connector.

3. CHECK TRANSMISSION RANGE SWITCH

1. Disconnect A/T shift selector connector.
2. Check A/T shift selector.




Terminal	A/T shift selector position	Continuity
A/T shift selector		
9	P	Yes
10	Other than above	No

OK or NG

- OK >> GO TO 4.
 NG >> Check A/T shift lock system. Refer to [AT-211](#).

4. CHECK HARNESS CONTINUITY 1

1. Disconnect A/T shift selector connector.
2. Check continuity between Intelligent Key unit connector and A/T shift selector connector.

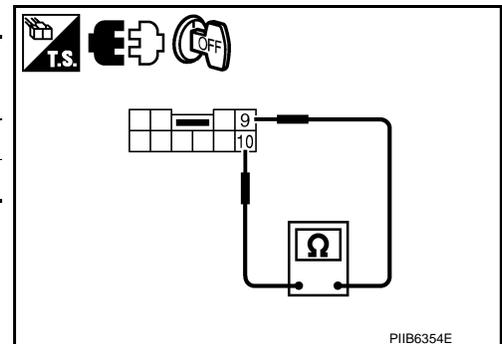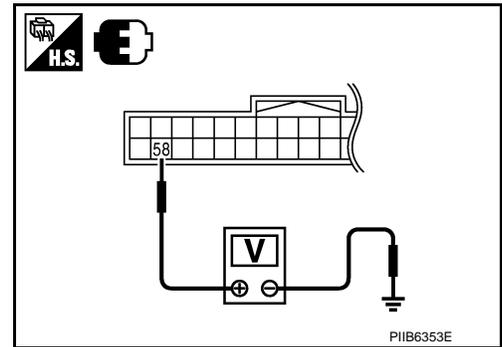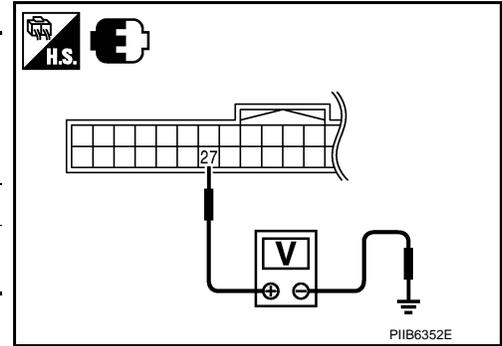

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	A/T shift selector connector	Terminal	
M32	27	M133	10	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	27		No

OK or NG

OK >> GO TO 5.

NG >> Repair or replace harness between Intelligent Key and A/T shift selector.

5. CHECK HARNESS CONTINUITY 2

1. Check continuity between Intelligent Key unit connector and A/T shift selector connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	A/T shift selector connector	Terminal	
M33	58	M133	9	Yes

2. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M33	58		No

OK or NG

OK >> Check the condition of harness and connector.

NG >> Repair or replace harness between Intelligent Key and A/T shift selector.

Check Ignition Switch Position

INFOID:0000000005349386

1. CHECK IGNITION POWER SUPPLY

Check voltage between Intelligent Key unit connector and ground.




Terminals			Ignition switch position		
(+)		(-)	OFF	ACC	ON
Intelligent Key unit connector	Terminal		OFF	ACC	ON
M32	30	Ground	0	Battery voltage	Battery voltage
	31		0	0	Battery voltage

OK or NG

OK >> Ignition power supply is OK.

NG >> Check the following.

- Repair or replace Intelligent Key unit power supply circuit.
- Check 10A fuse [No. 6, located in the fuse block (J/B)]

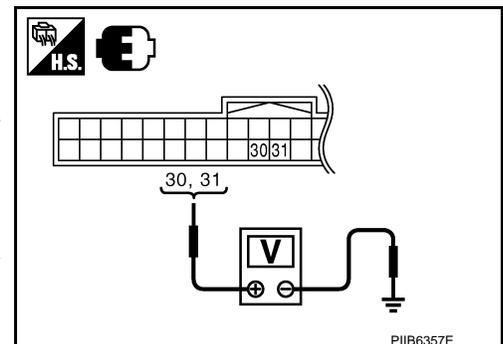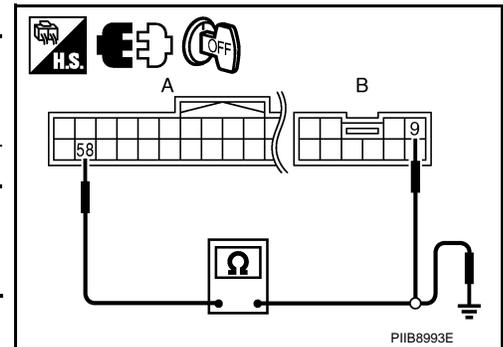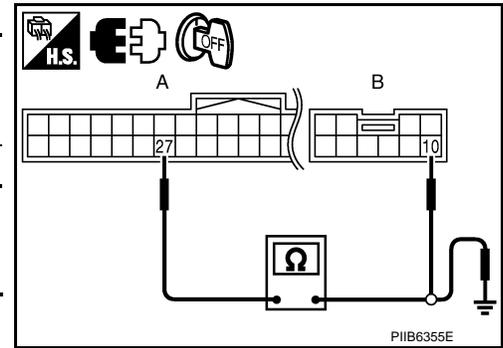

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >



- Check 10A fuse [No. 12, located in the fuse block (J/B)]


Check Remote Keyless Entry Receiver

INFOID:000000005349387

1. CHECK REMOTE KEYLESS ENTRY RECEIVER OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Check signal between remote keyless entry receiver connector and ground with oscilloscope.

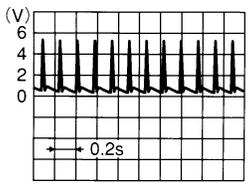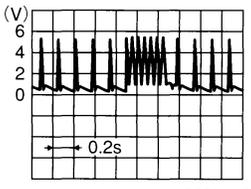Terminals		Keyfob condition	Signal (Reference value)
(+)	(-)		
Remote keyless entry receiver connector	Terminal		
M89	2	Ground	 <p>OCC3879D</p>
		Any button is pressed	 <p>OCC3880D</p>

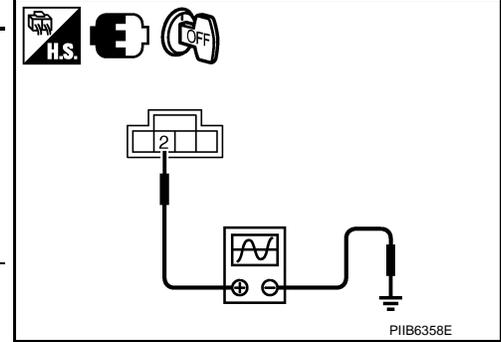



OK or NG

- OK >> Remote keyless entry receiver is OK.
 NG >> GO TO 2.

2. CHECK REMOTE KEYLESS ENTRY RECEIVER POWER SUPPLY

1. Disconnect remote keyless entry receiver connector.
2. Check signal between remote keyless entry receiver connector and ground with oscilloscope.

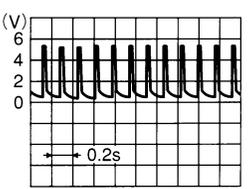Terminals		Keyfob condition	Signal (Reference value)
(+)	(-)		
Remote keyless entry receiver connector	Terminal		
M89	4	Ground	 <p>OCC3881D</p>

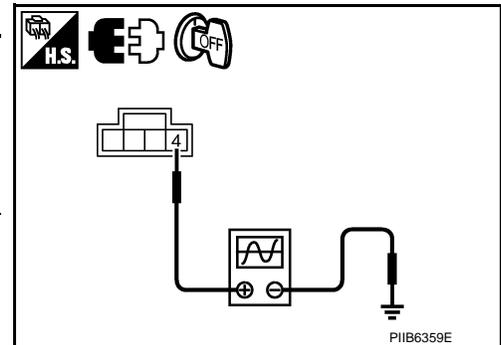

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 3.

3. CHECK HARNESS CONTINUITY 1

INTELLIGENT KEY SYSTEM


< SERVICE INFORMATION >

1. Disconnect Intelligent Key unit connector.
2. Check continuity between Intelligent Key unit connector and remote keyless entry receiver connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Remote keyless entry receiver connector	Terminal	
M32	7	M89	4	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	7		No

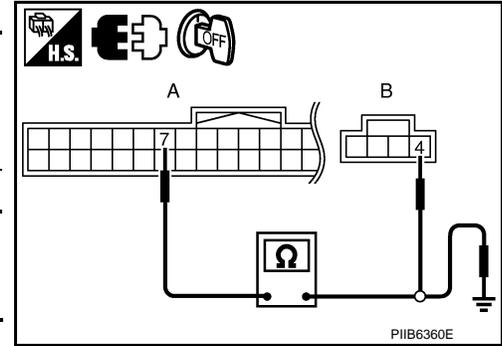

OK or NG

- OK >> Check the condition of harness and connector.
- NG >> Repair or replace harness between Intelligent Key unit and remote keyless entry receiver.


4.CHECK REMOTE KEYLESS ENTRY RECEIVER GROUND CIRCUIT

Check continuity between remote keyless entry receiver connector and ground.

Remote keyless entry receiver connector	Terminal	Ground	Continuity
M89	1		Yes

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

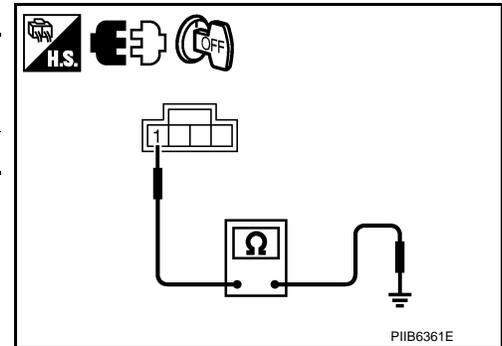


5.CHECK HARNESS CONTINUITY 2

Check continuity between Intelligent Key unit connector and remote keyless entry receiver connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Remote keyless entry receiver connector	Terminal	
M32	6	M89	1	Yes

OK or NG

- OK >> Check the condition of harness and connector.
- NG >> Repair or replace harness between Intelligent Key unit and remote keyless entry.

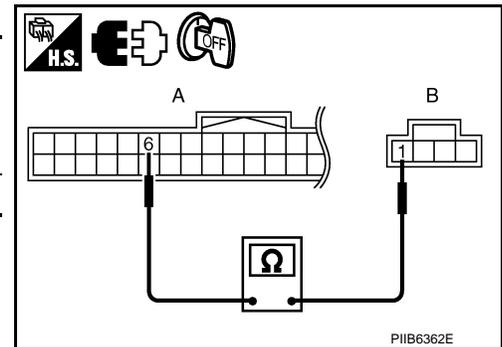

6.CHECK HARNESS CONTINUITY 3

1. Check continuity between Intelligent Key unit connector and remote keyless entry receiver connector.


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	Remote keyless entry receiver connector	Terminal	
M32	5	M89	2	Yes

2. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	5		No

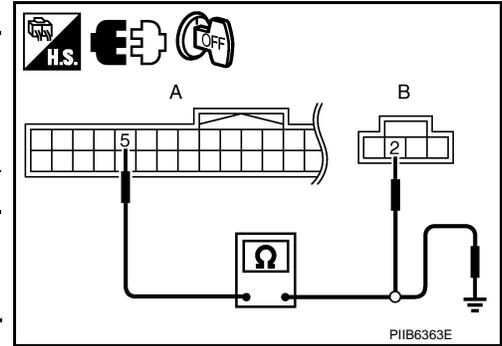

OK or NG


OK >> GO TO 7.

NG >> Repair or replace harness between Intelligent Key unit and remote keyless entry.

7. INTELLIGENT KEY UNIT OUTPUT SIGNAL

1. Connect Intelligent Key unit and remote keyless entry receiver connector.
2. Check voltage between Intelligent Key unit connector and ground.

Terminals			Condition	Voltage (V) (Approx.)
(+)		(-)		
Intelligent Key unit connector	Terminal			
M32	4	Ground	When Intelligent Key is in vehicle, press push-button ignition switch	0
			Other than above	<p>The oscilloscope shows a series of rectangular pulses. The vertical axis is labeled (V) and ranges from 0 to 6. The horizontal axis is labeled with a time scale of 0.2s. The pulses reach approximately 4V and have a width of about 0.1s.</p>

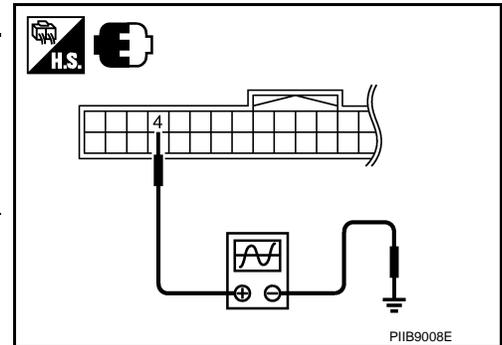

OK or NG

OK >> Check the condition of harness and connector.

NG >> GO TO 8.

8. CHECK HARNESS CONTINUITY 4

1. Disconnect Intelligent Key unit and remote keyless entry receiver connector.
2. Check continuity between Intelligent Key unit connector and remote keyless entry receiver connector.


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	Remote keyless entry receiver connector	Terminal	
M32	4	M89	3	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	4		No

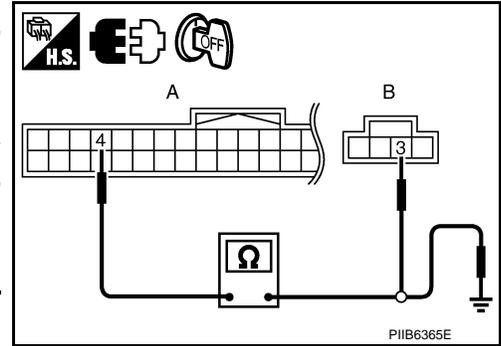

OK or NG

- OK >> Check the condition of harness and connector.
- NG >> Repair or replace harness between Intelligent Key unit and remote keyless entry receiver.

Check Trunk Lid Opener Cancel Switch

INFOID:000000005349388

1. CHECK TRUNK LID OPENER CANCEL SWITCH

With CONSULT-III


Check trunk lid opener cancel sensor ("TR CANCEL SW") in "DATA MONITOR" mode.

Monitor item	Condition
TR CANCEL SW	Trunk lid opener cancel switch ON: ON
	Trunk lid opener cancel switch OFF: OFF

Without CONSULT-III

1. Turn ignition switch OFF.
2. Check voltage between Intelligent Key unit connector and ground.

Terminals		Trunk lid opener cancel switch condition	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal	ON	0
M32	23	OFF (Cancel)	5

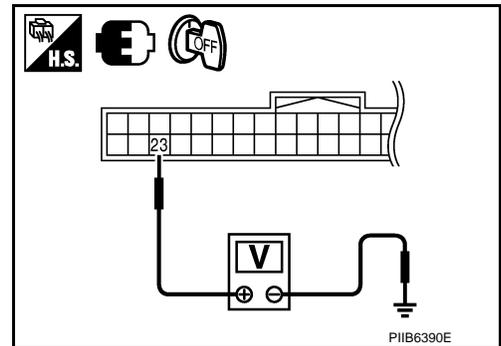

OK or NG

- OK >> Trunk lid opener cancel switch is OK.
- NG >> GO TO 2.

2. CHECK TRUNK LID OPENER CANCEL SWITCH CIRCUIT

1. Disconnect Intelligent Key unit and trunk lid opener cancel switch connector.
2. Check continuity between Intelligent Key unit connector and trunk lid opener cancel switch connector.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	Trunk lid opener cancel switch connector	Terminal	
M32	23	M99	1	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	23		No

OK or NG

OK >> GO TO 3.

NG >> Repair or replace harness between Intelligent Key unit and trunk lid opener cancel switch.

3. CHECK TRUNK LID OPENER CANCEL SWITCH OPERATION

Check trunk lid opener cancel switch.

Terminal		Trunk lid opener cancel switch condition	Continuity
Trunk lid opener cancel switch			
1	3	ON	Yes
		OFF (Cancel)	No

OK or NG

OK >> GO TO 4.

NG >> Replace trunk lid opener cancel switch.

4. CHECK TRUNK LID OPENER CANCEL SWITCH GROUND CIRCUIT

Check continuity between trunk lid opener cancel switch connector and ground.

Trunk lid opener cancel switch connector	Terminal	Ground	Continuity
M99	3		




OK or NG

OK >> GO TO 5.

NG >> Repair or replace trunk lid opener cancel switch ground circuit.

5. CHECK INTELLIGENT KEY UNIT OUTPUT SIGNAL

1. Connect Intelligent Key unit connector.
2. Check voltage between Intelligent Key unit connector and ground.

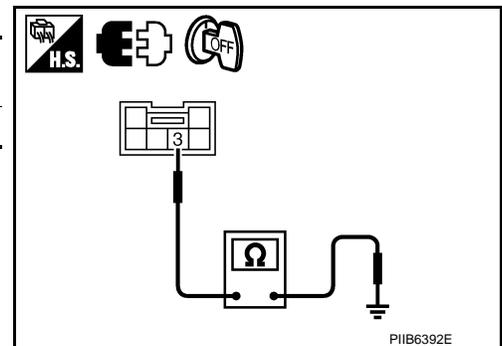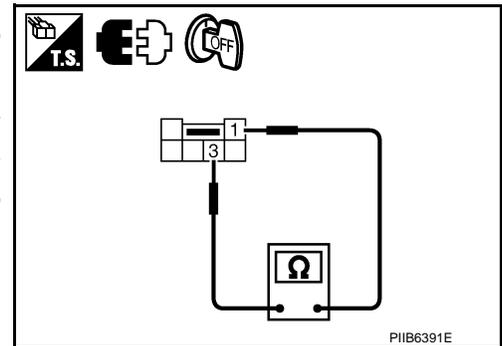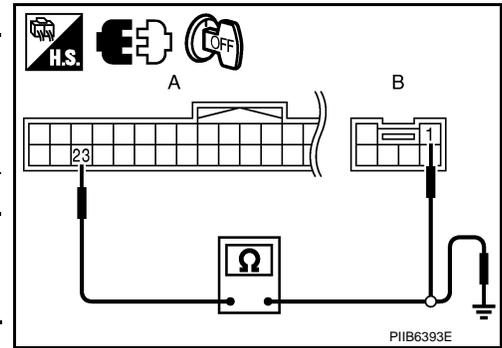


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Terminals		Voltage (V) (Approx.)
(+)		
Intelligent Key unit connector	Terminal	(-)
M32	23	Ground

OK or NG

- OK >> Check the condition of harness and connector.
- NG >> Replace Intelligent Key unit.

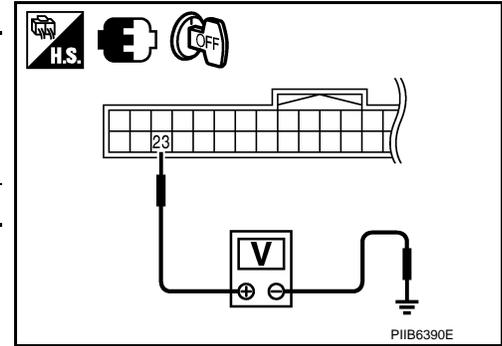


INFOID:000000005349389

Check Key Slot Illumination

1. CHECK KEY SLOT ILLUMINATION OUTPUT SIGNAL

Check voltage between key slot connector and ground.

Terminals		Condition	Key slot illumination	Voltage (V) (Approx.)
(+)				
Key slot connector	Terminal	(-)		
M14	3	Ground	Intelligent Key inserted	ON
			Intelligent Key inserted	OFF

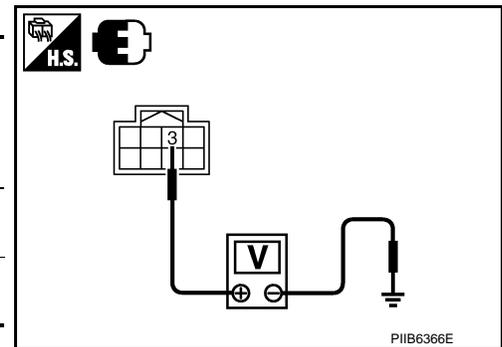

OK or NG

- OK >> Key slot illumination is OK.
- NG >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit and key slot connector.
3. Check continuity between Intelligent Key unit connector and key slot connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Key slot connector	Terminal	
M32	13	M14	3	Yes

4. Check continuity between Intelligent Key unit connector and ground.


A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	13		No

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness between Intelligent Key unit and key slot.

3. CHECK KEY SLOT GROUND CIRCUIT

Check continuity between key slot connector and ground.

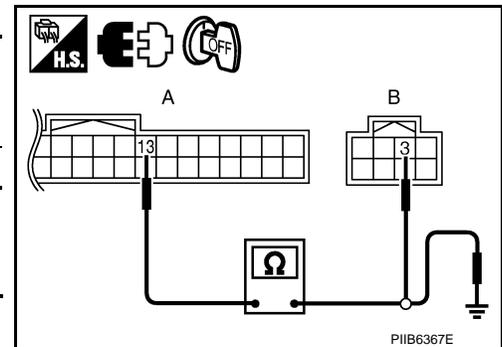


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Key slot connector	Terminal	Ground	Continuity
M14	8		Yes

OK or NG

- OK >> Replace key slot.
- NG >> Repair or replace key slot ground circuit.

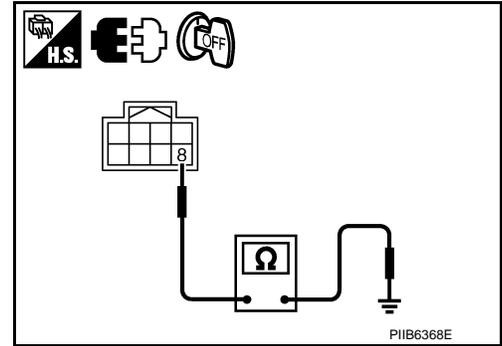

Check Horn Function

INFOID:000000005349390

First perform the “SELF-DIAG RESULTS” of “BCM” with CONSULT-III, then perform the trouble diagnosis of malfunction system indicated in “SELF-DIAG RESULTS” of “BCM”. Refer to [BCS-10, "CAN Communication Unit"](#).

1.CHECK HORN OPERATION

Check if horn sounds with horn switch.

Does horn operate?

- Yes >> GO TO 2.
- No >> Check horn circuit. Refer to [WW-42](#).


2.CHECK IPDM E/R INPUT SIGNAL

Check voltage between IPDM E/R connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
IPDM E/R connector	Terminal	Battery voltage
E9	48	

OK or NG

- OK >> Replace IPDM E/R.
- NG >> GO TO 3.

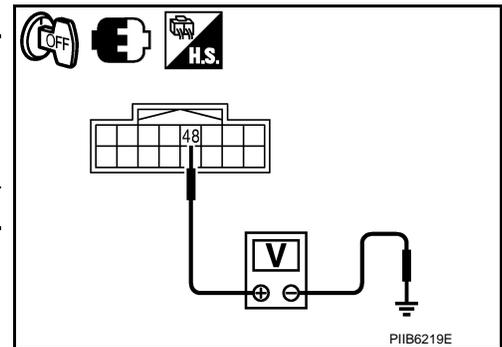


3.CHECK HORN RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R and horn relay connector.
3. Check continuity between IPDM E/R connector and horn relay connector.

A		B		Continuity
IPDM E/R connector	Terminal	Horn relay connector	Terminal	
E9	48	E20	1	Yes

OK or NG

- OK >> Check harness connection.
- NG >> Repair or replace harness.

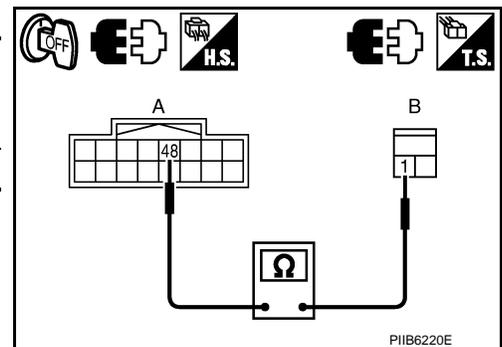

Check Combination Meter Display Function

INFOID:000000005349391

1.CHECK METER DISPLAY

Ⓟ With CONSULT-III

Check the operation with (“LCD”) in the ACTIVE TEST.

INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

Is each warning displayed on meter display?

OK or NG

OK >> Meter display is OK.

NG >> Check combination meter. Refer to [DI-17, "Self-Diagnosis Mode of Combination Meter"](#).

Check Warning Chime Function

INFOID:000000005349392

1. CHECK WARNING CHIME INTO COMBINATION METER OPERATION

 With CONSULT-III

1. Check the operation with "INSIDE BUZZER" in the "ACTIVE TEST".
2. Touch "TAKE OUT", "KEY WARN", "P RNG WARN" or "ACC WARN" on screen.

Does warning buzzer sound?

Yes >> Warning buzzer into combination meter is OK.

No >> GO TO 2.

2. CHECK OTHER WARNING CHIME OPERATION

Confirm other warning chime function. Refer to [DI-56, "System Description"](#).

Does other warning chime operate?

Yes >> Warning buzzer into combination meter is OK


No >> Check warning chime. Refer to [DI-66, "Trouble Diagnosis"](#).

Removal and Installation of Intelligent Key Unit

INFOID:000000005349393

REMOVAL

1. Remove dash side finisher. Refer to [EI-48, "Component Parts Location"](#).
2. Disconnect intelligent key unit connector.
3. Remove intelligent key unit mounting nuts, and then remove intelligent key unit.

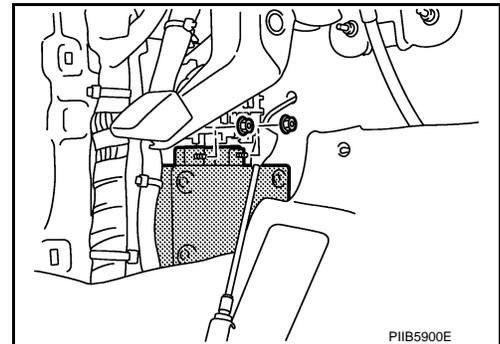

INSTALLATION

Installation is in the reverse order of removal.

Intelligent Key Battery Replacement


INFOID:000000005349394

DISASSEMBLY AND ASSEMBLY OF INTELLIGENT KEY

1. Release the lock knob at the back of the Intelligent Key and remove the mechanical key.
2. Insert a flat-blade screwdriver (A) wrapped with a cloth into the slit of the corner and twist it to separate the upper part from the lower part.

CAUTION:

- Be careful not to touch the circuit board or battery terminal.
- The key fob is water-resistant. However, if it does get wet, immediately wipe it dry.

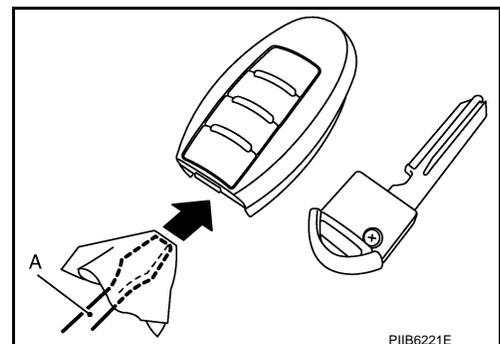


INTELLIGENT KEY SYSTEM

< SERVICE INFORMATION >

3. Replace the battery with new one.
4. Align the tips of the upper and lower parts, and then push them together until it is securely closed.

CAUTION:


- When replacing battery, be sure to keep dirt, grease, and other foreign materials off the electrode contact area.
- After replacing the battery, check to make sure all Intelligent Key functions work normally.

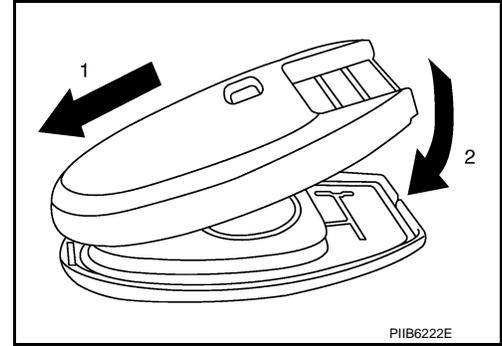

INTELLIGENT KEY BATTERY INSPECTION

Check by connecting a resistance (approximately 300Ω) so that the current value becomes about 10 mA.

Standard : **Approx. 2.5 - 3.0V**

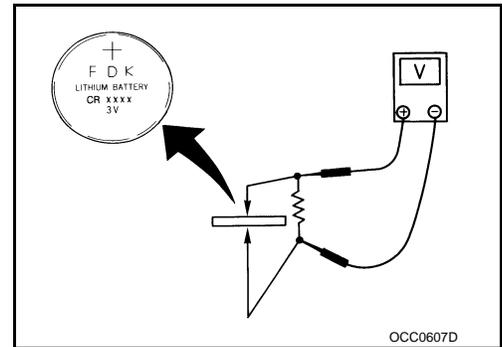


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

Component Parts and Harness Connector Location

INFOID:000000005349395

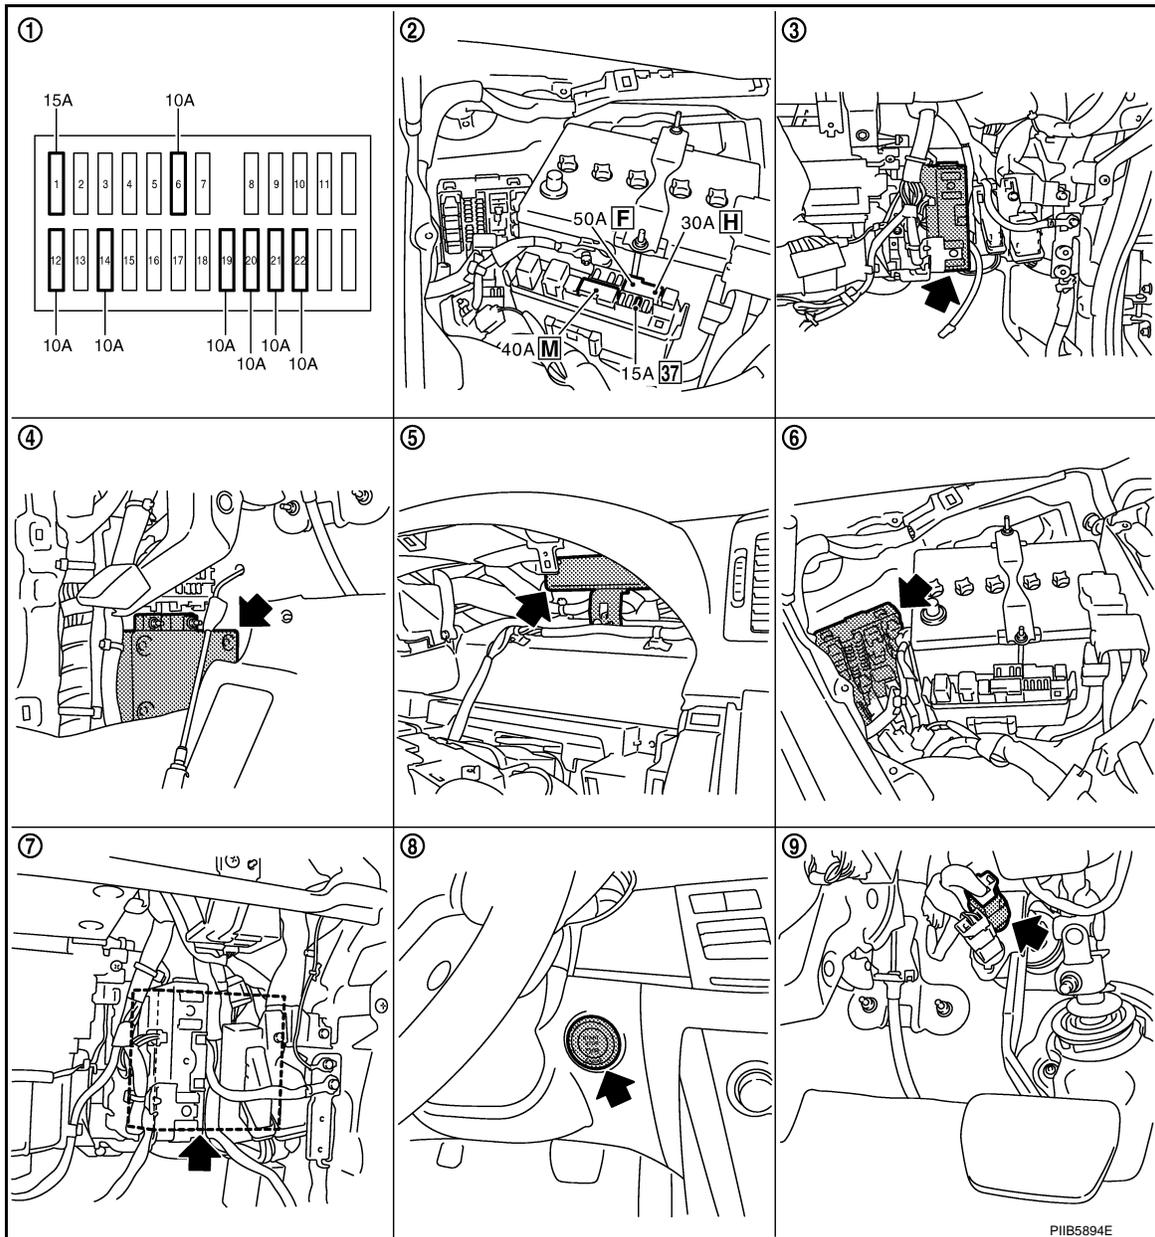


- | | | |
|--|---|---|
| 1. Fuse block (J/B) fuse layout | 2. Fuse and fusible link box | 3. BCM (View with instrument lower panel RH removed) M1, M2 |
| 4. Intelligent key unit (View with dash side finisher LH removed) M32, M33 | 5. PDU (View with combination meter removed) M30, M31 | 6. IPDM E/R (Engine room) E4, E9 |
| 7. ECM (View with instrument lower cover RH removed) M71 | 8. Push-button ignition switch M27 | 9. Stop lamp switch E124 |

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

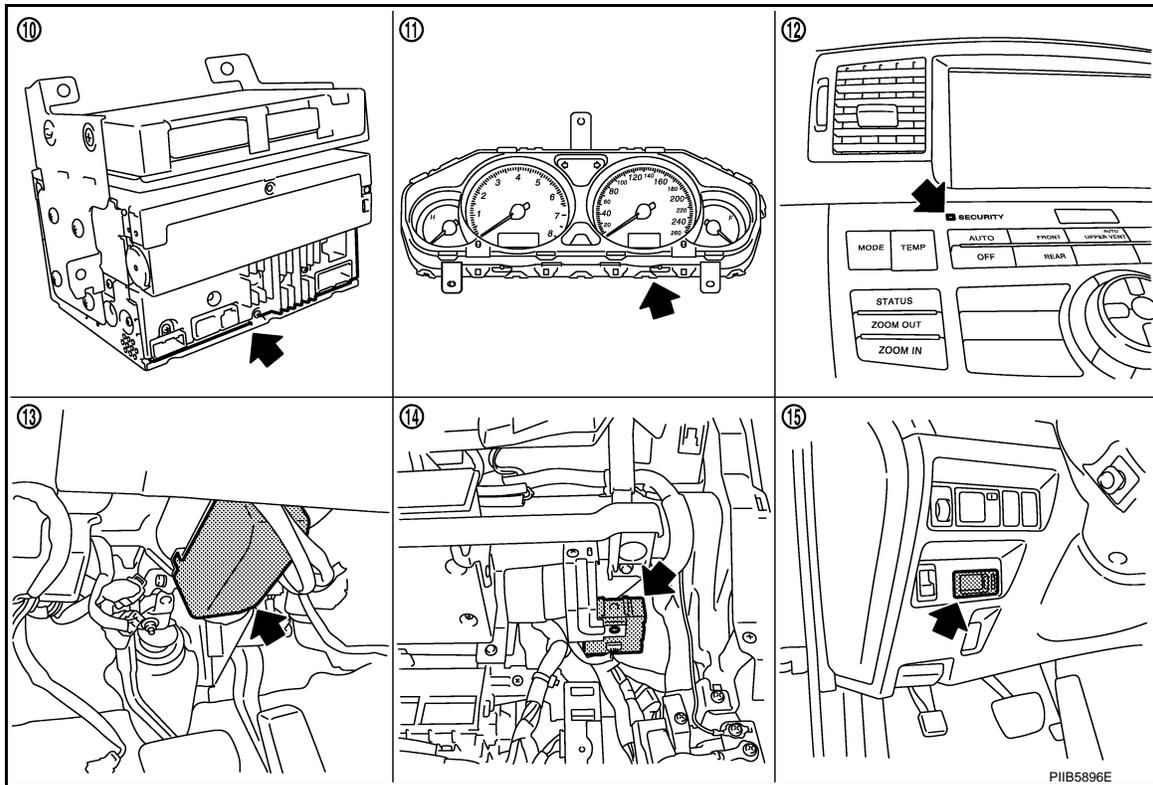

10. Unified meter and A/C amp M64, M65

11. Combination meter M52

12. Security indicator (Multifunction switch) M69

13. Steering lock unit M35 (Steering column)

14. Remote keyless entry receiver (View with instrument lower panel RH removed) M89

15. Key slot M14

System Description

INFOID:000000005349396

- The engine start function of Intelligent Key system is a system that makes it possible to start and stop the engine without removing the key. It verifies the electronic ID using two-way communications when pressing the push-button ignition switch while carrying the Intelligent Key, which operates based on the results of electronic ID verification for Intelligent Key using two-way communications between the Intelligent Key and the vehicle (Intelligent Key unit).

NOTE:

The driver should always carry the intelligent key at all times.

- Intelligent Key has 2 IDs (for Intelligent Key and for immobilizer). It can perform the door lock/unlock operation and the push-button ignition switch operation when carrying the registered Intelligent Key.
- When the Intelligent Key battery is discharged, it can be used as emergency by inserting the Intelligent Key to the key slot. At that time, perform the immobilizer ID verification. If it is used when carrying the Intelligent Key, perform the Intelligent Key ID verification.
- If the ID is successfully verified, and when push-button ignition switch is pressed, steering lock will be released and initiating the engine will be possible.
- If the door lock/unlock operation is performed when the Intelligent Key battery is discharged, all doors lock/unlock can be performed by operating the driver door key cylinder using the mechanical key set into the Intelligent Key.
- Intelligent Key can be registered up to 4 keys (Including the standard Intelligent Key) on request from the owner.

NOTE:

- Refer to [BL-42](#) for any functions other than engine start function of Intelligent Key system.

PRECAUTIONS FOR INTELLIGENT KEY SYSTEM

- In the Intelligent Key system of model Y50, the transponder (the chip for immobilizer ID verification) is integrated into the Intelligent Key. (For the conventional models, it is integrated into the mechanical key.) Therefore, the mechanical key cannot perform the ID verification, and thus it cannot start

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >


the engine. Instead of it, the immobilizer ID verification can be performed by inserting the Intelligent Key into the key slot, and then it can start the engine.

- When registering the Intelligent Key, 2 registration procedures (immobilizer ID registration and Intelligent Key ID registration) should be performed. The immobilizer ID registration is the procedure that registers the ID stored into the transponder (integrated into Intelligent Key) to the BCM. The Intelligent Key ID registration is the procedure that registers the ID to the Intelligent Key unit. Each registration is a different procedure.
- When performing the Intelligent Key ID registration only, the engine cannot be started by inserting the key into the key slot. When performing the engine immobilizer ID registration only, the engine cannot be started by the operation when carrying the key. The registrations of both systems should be performed.

Operation Description

INFOID:000000005349397

SYSTEM DIAGRAM

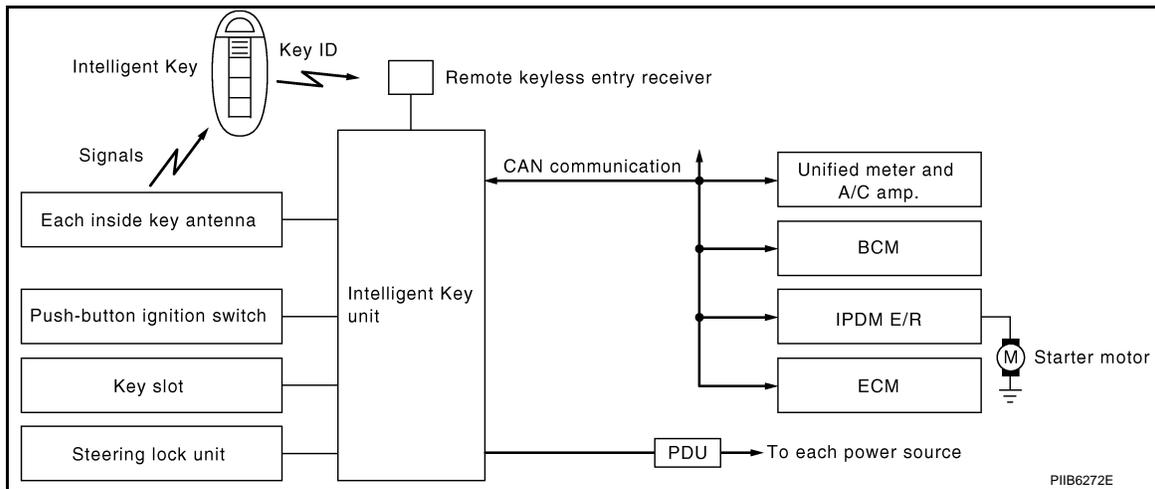

OPERATION WHEN INTELLIGENT KEY IS CARRIED

Description

1. When the push-button switch is pressed, the Intelligent Key unit signals the inside key antenna and sends the request signal to the Intelligent Key.
2. The Intelligent Key receives the request signal and sends the Intelligent Key ID signal to the Intelligent Key unit via the remote keyless entry receiver.
3. The Intelligent Key receives the Intelligent Key ID signal and verifies it with the registered ID.
4. If the ID is successfully verified, the Intelligent Key unit sends the steering unlock signal to the steering lock unit. Then, it sends each power supply request signal to PDU (Power Distribution Unit) after unlocking the steering lock.
5. If the Intelligent Key unit judges that the engine start condition is satisfied, it sends the starter request signal via CAN communication to IPDM E/R and turns the starter motor relay ON.
6. The steering lock unit unlocks the steering lock when receiving the signal. PDU starts the power supply distribution according to the push-button ignition switch operation when receiving the signal. If it enters the engine start permission mode, the power supply is supplied from PDU to the starter motor relay and the cranking is started.

CAUTION:

If a malfunction is detected in the Intelligent Key system, the “KEY” warning lamp in the combination meter illuminates for 15 seconds. At that time, the engine cannot be started.

7. When Intelligent Key unit received feedback signal from ECM acknowledging the engine has been initiated, the Intelligent Key unit sends a stop signal to IPDM E/R and stops the cranking by turning OFF the starter motor relay. (If the engine initiating has failed, the cranking will stop automatically within 5 seconds.)

CAUTION:

When the Intelligent Key is carried outside of the vehicle (inside key antenna detection area) with the power supply in ACC or ON position, even if the engine start condition* is satisfied, the engine cannot be started.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

*: For the engine start condition, refer to "PUSH-BUTTON IGNITION SWITCH OPERATION PROCEDURE".

Operation Range

Engine can be started when Intelligent Key is inside the vehicle. However, sometimes engine might not start when Intelligent Key is on instrument panel or in glove box.

OPERATION WHEN KEY SLOT IS USED

When the Intelligent Key battery is discharged, it performs the immobilizer ID verification between the integrated transponder and BCM by inserting the Intelligent Key into the key slot, and then the engine can be started.

For details relating to starting the engine using key slot, refer to [BL-220](#).

PUSH-BUTTON IGNITION SWITCH OPERATION PROCEDURE

The power supply position changing operation can be performed with the following operation.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when it is inserted to the key slot, it is equivalent to the operations below.
- When starting the engine, the Intelligent Key unit monitors the engine start conditions (brake pedal operating condition, A/T selector lever position, and vehicle speed).
- Unless each start condition is fulfilled, the engine will not respond regardless of how many times the engine switch is pushed. At that time, illumination repeats the position in the order of LOCK→ACC→ON→LOCK.

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Brake pedal	A/T selector lever position	
LOCK → ACC	Not depressed (When A/T selector lever is in any position other than P or N, there will be no effect even if it is depressed.)	Any position other than P or N (When the brake pedal is not depressed, there will be no effect even if the A/T selector lever is in P or N position.)	1
LOCK → ACC → ON	Not depressed (When A/T selector lever is in any position other than P or N, there will be no effect even if it is depressed.)	Any position other than P or N (When the brake pedal is not depressed, there will be no effect even if the A/T selector lever is in P or N position.)	2
LOCK → ACC → ON → LOCK	Not depressed (When A/T selector lever is in any position other than P or N, there will be no effect even if it is depressed.)	Any position other than P or N (When the brake pedal is not depressed, there will be no effect even if the A/T selector lever is in P or N position.)	3
LOCK → START ACC → START ON → START (Engine start)	Depressed	P or N position (*1)	1 [If the switch is pushed once, the engine starts from any power supply position (LOCK, ACC, and ON)]
Engine is running → LOCK (Engine stop)	—	P position	1
Engine is running → ACC (Engine stop)	—	Any position other than P (*2)	1
Engine stall return operation while driving	—	N position	1

*1: When the A/T selector lever position is N position, the engine start condition is different according to the vehicle speed.

- At vehicle speed of 5 km/h or less, the engine can start only when the brake pedal is depressed.
- At vehicle speed of 5 km/h or more, the engine can start even if the brake pedal is not depressed. (It is the same as "Engine stall return operation while driving".)

*2: When the A/T selector lever position is in any position other than P position and when the vehicle speed is 5 km/h or more, the engine stop condition is different.

- Press and hold the push-button ignition switch for 2 seconds or more. (When the push-button ignition switch is pressed for too short a time, the operation may be invalid, so properly press and hold to prevent the incorrect operation.)

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

- Press the push-button ignition switch 3 times or more within 1.5 seconds. (Emergency stop operation)

CAN Communication System Description

INFOID:000000005349398

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

INFOID:000000005349399

Refer to [LAN-29. "CAN System Specification Chart"](#)

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P


BL

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Schematic


INFOID:000000005349400

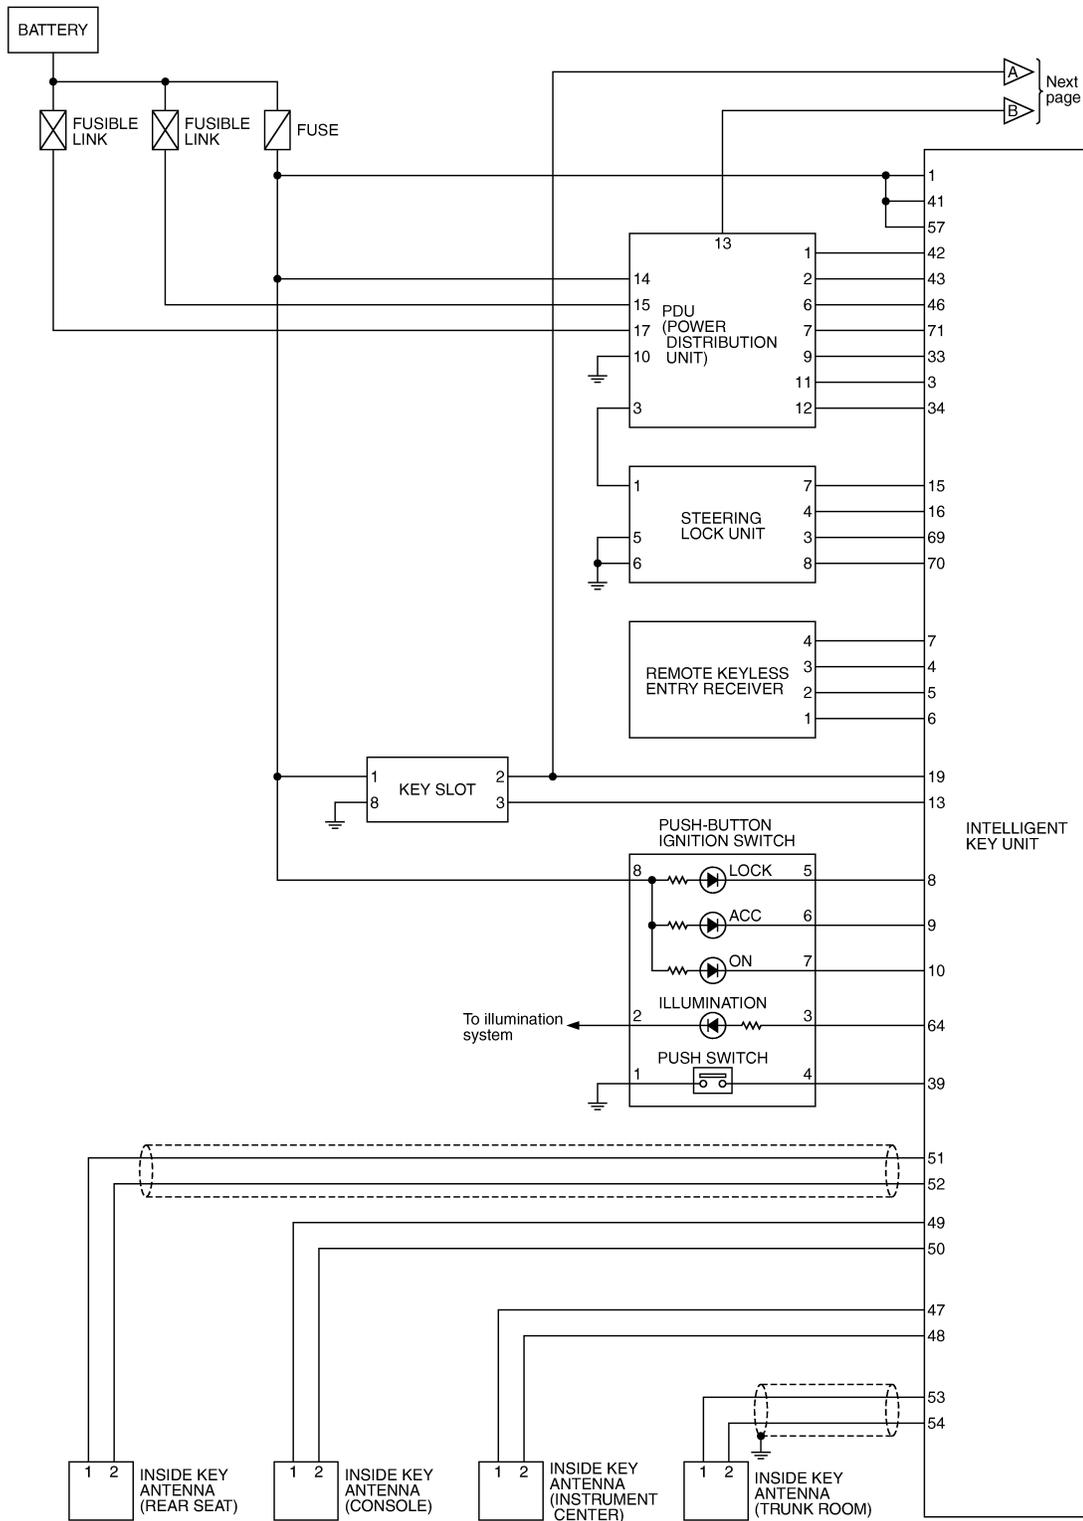

TIWT2611E

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

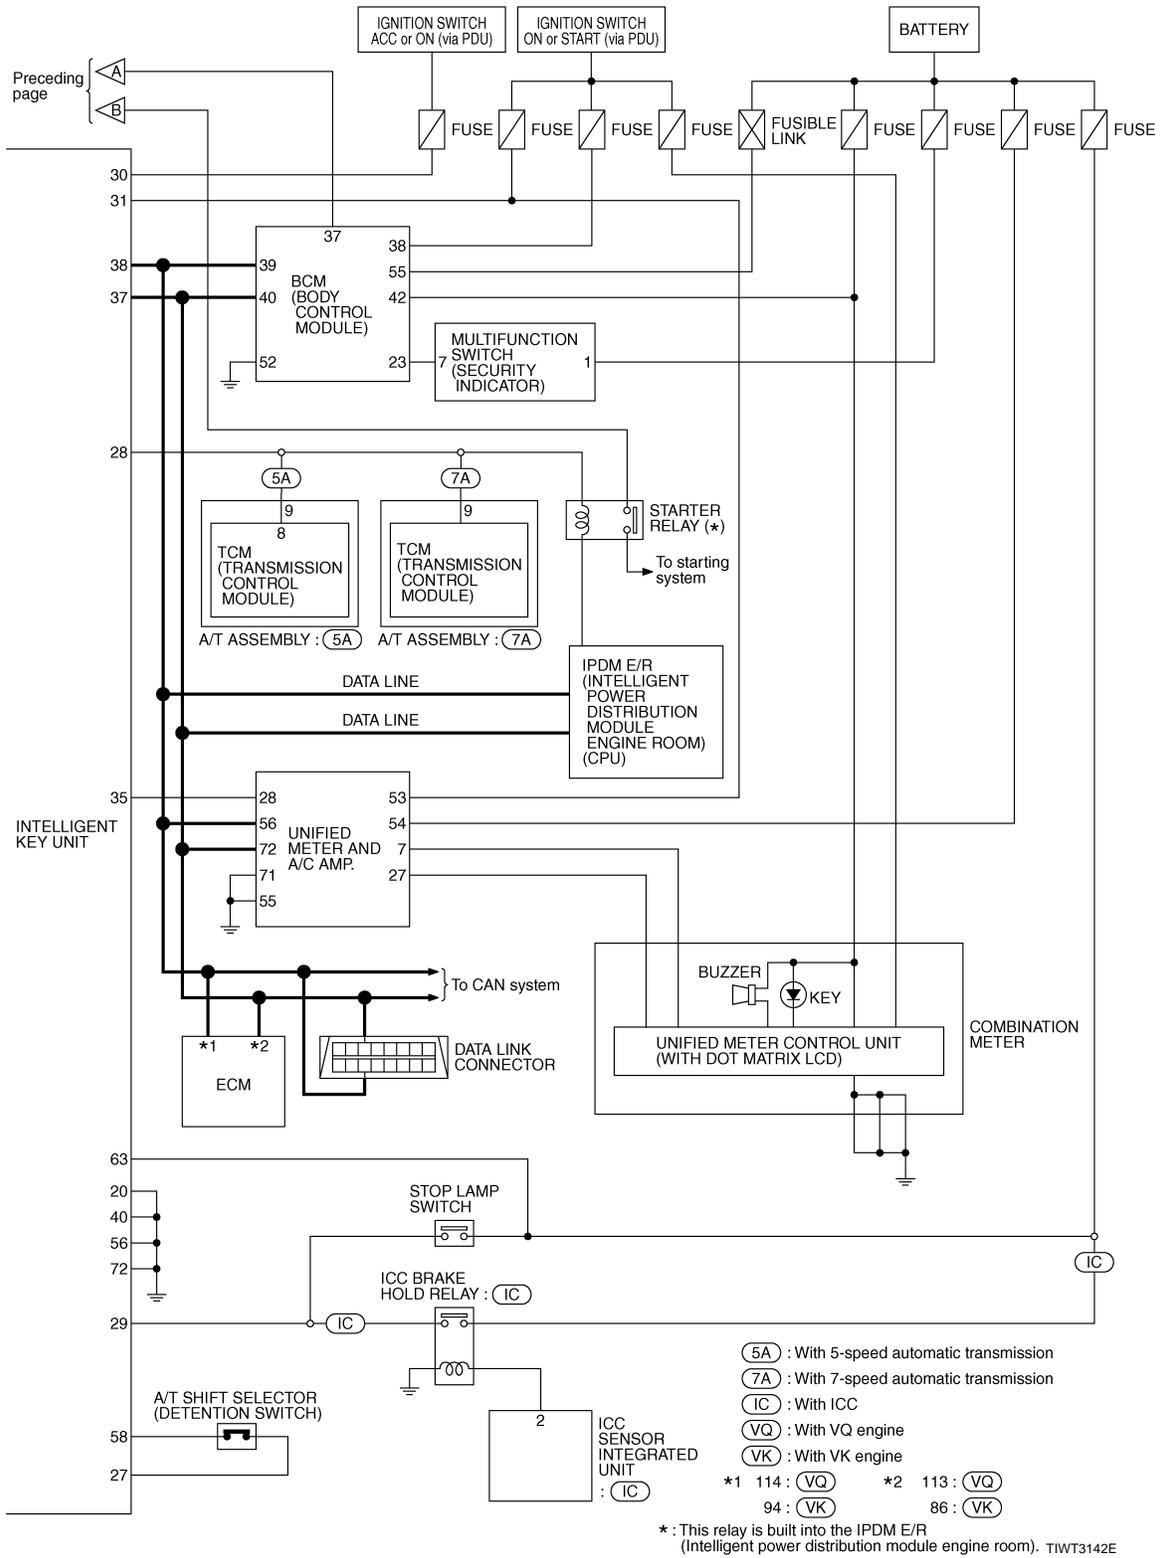

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BL

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Wiring Diagram - ENG/ST -

INFOID:000000005349401


BL-ENG/ST-01

⬡VQ : WITH VQ ENGINE

⬡VK : WITH VK ENGINE

*1 Y : ⬡VQ


L : ⬡VK

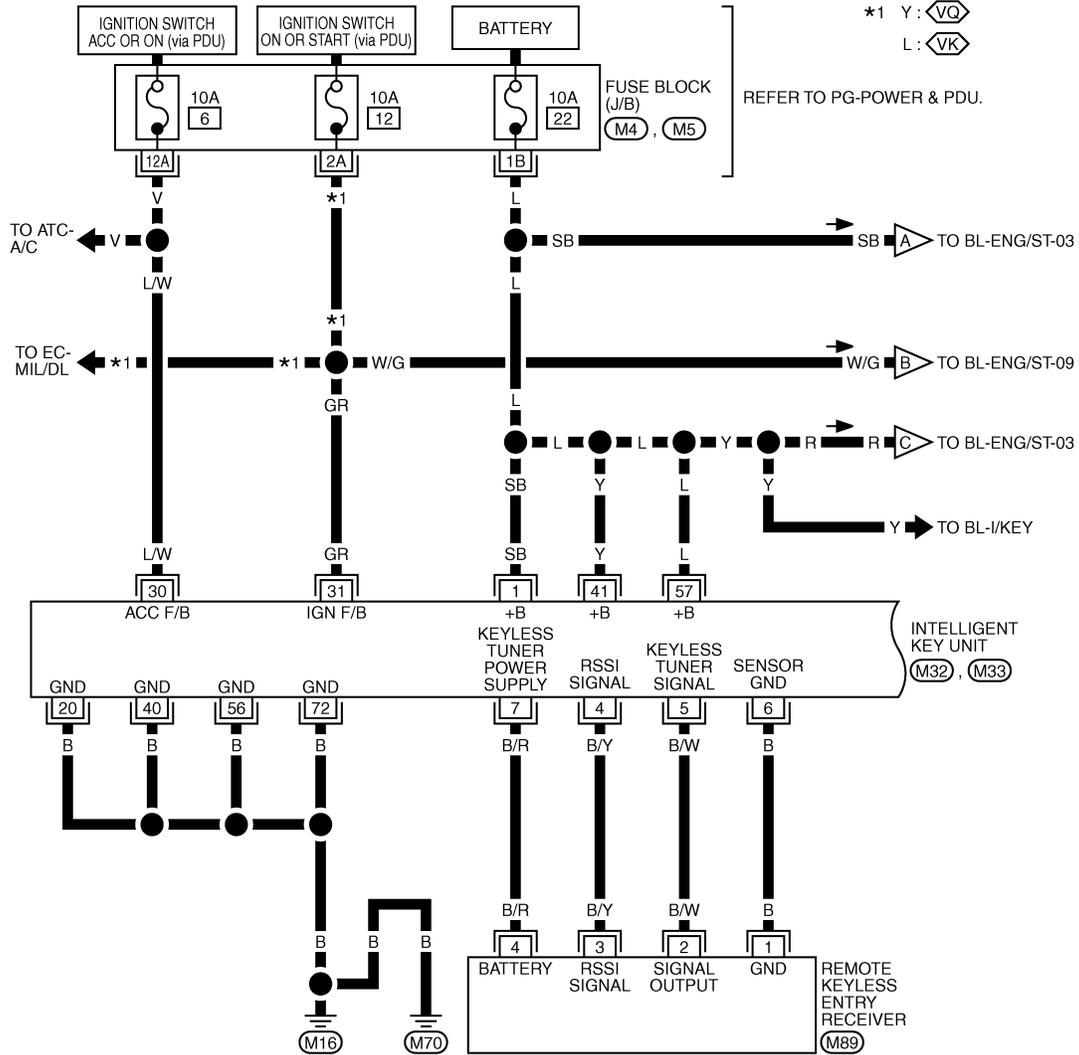

REFER TO PG-POWER & PDU.

INTELLIGENT KEY UNIT (M32, M33)

REMOTE KEYLESS ENTRY RECEIVER (M89)

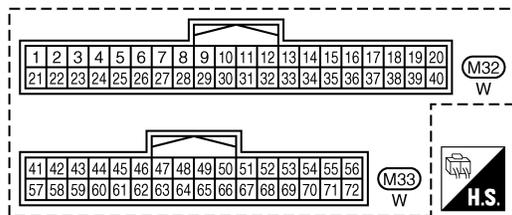

REFER TO THE FOLLOWING.


⬡M4, ⬡M5 - FUSE BLOCK-JUNCTION BOX (J/B)

TIWT3143E

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >


BL-ENG/ST-02

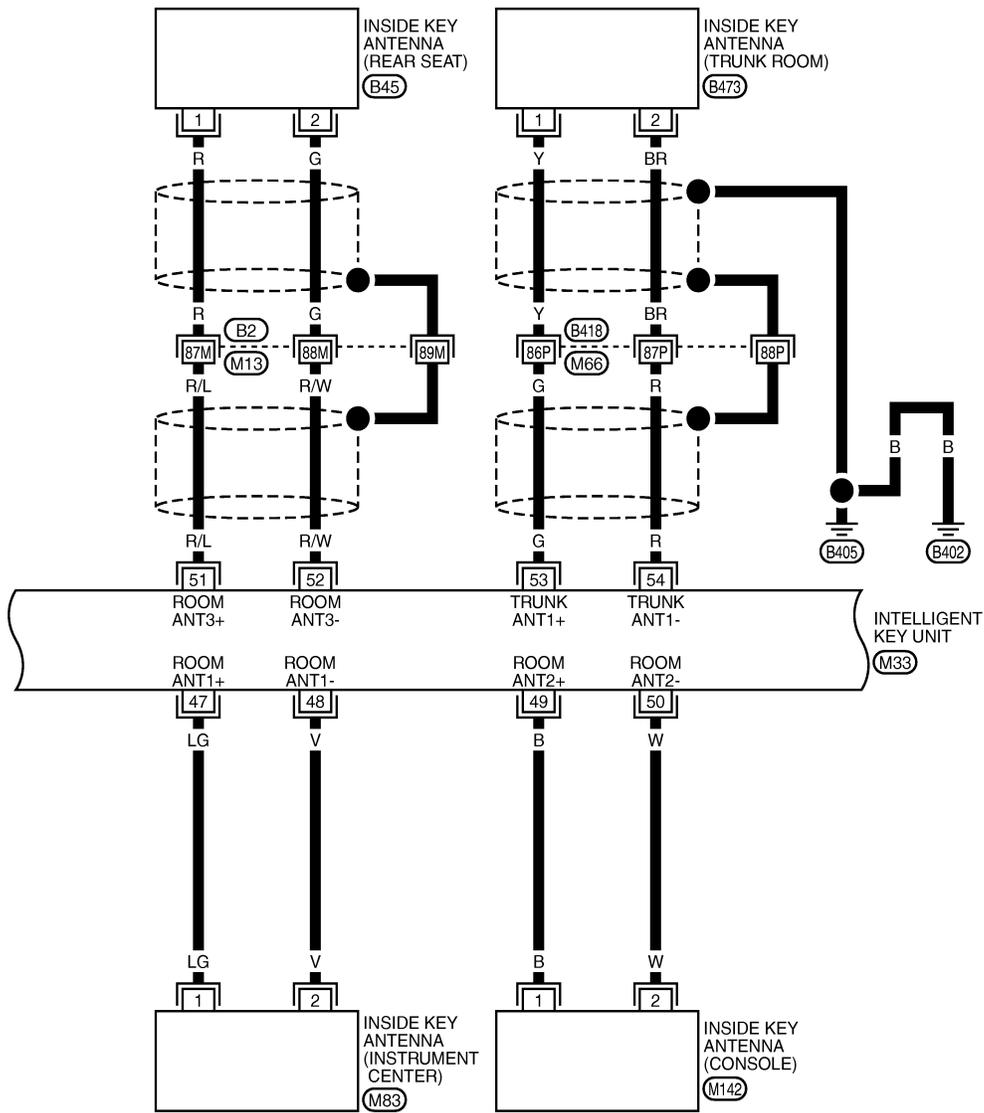

41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72



REFER TO THE FOLLOWING.
 (B2), (B418) - SUPER MULTIPLE JUNCTION (SMJ)

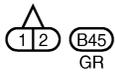

TIWT2613E






A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BL

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

BL-ENG/ST-03

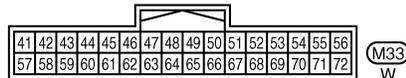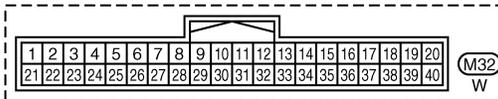
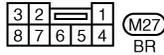
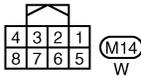
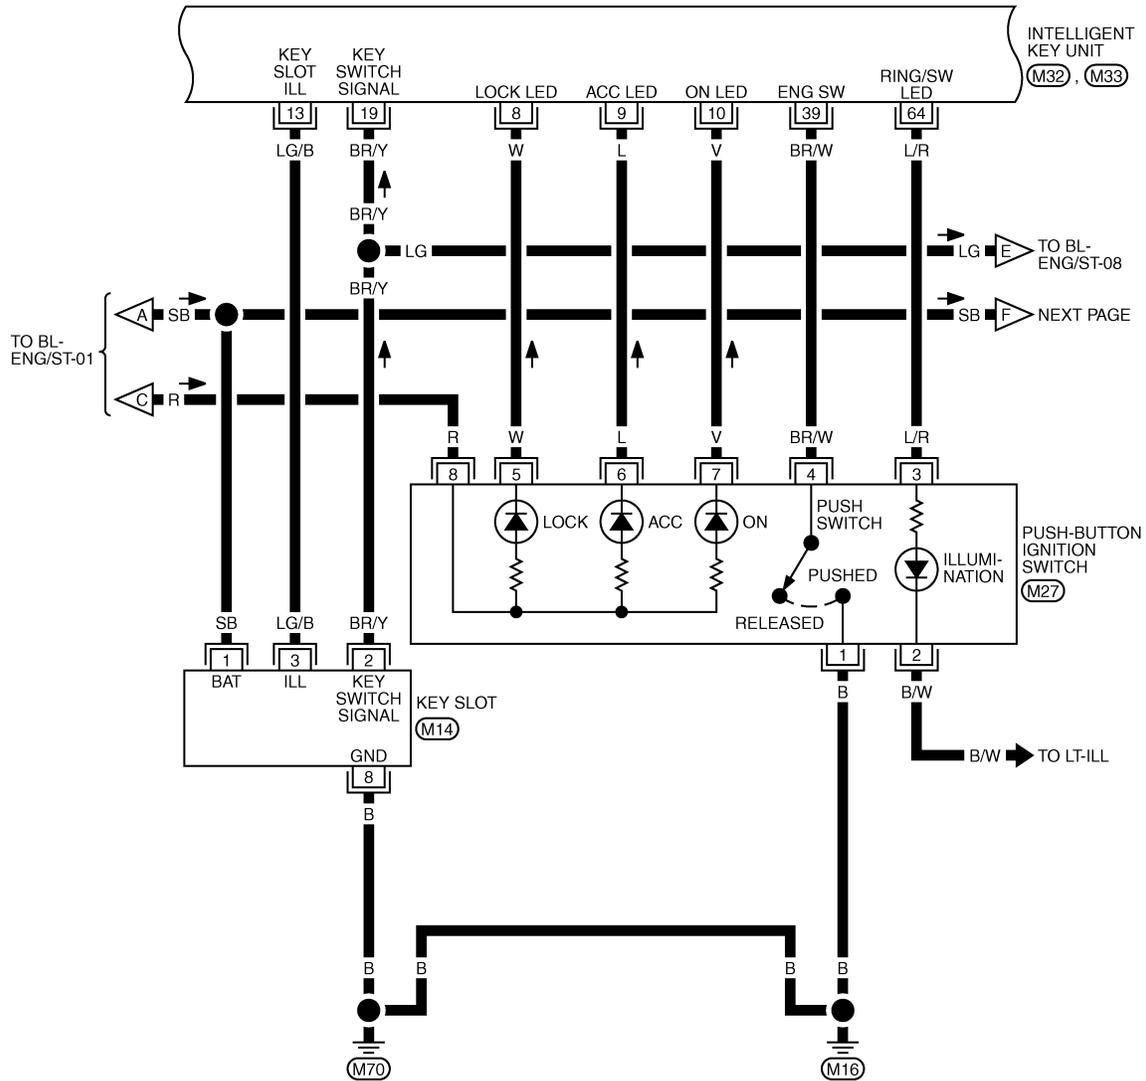


TIWT2024E

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

BL-ENG/ST-04

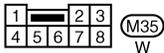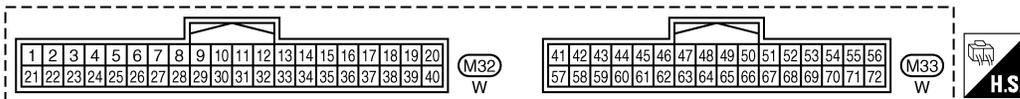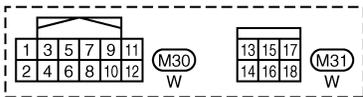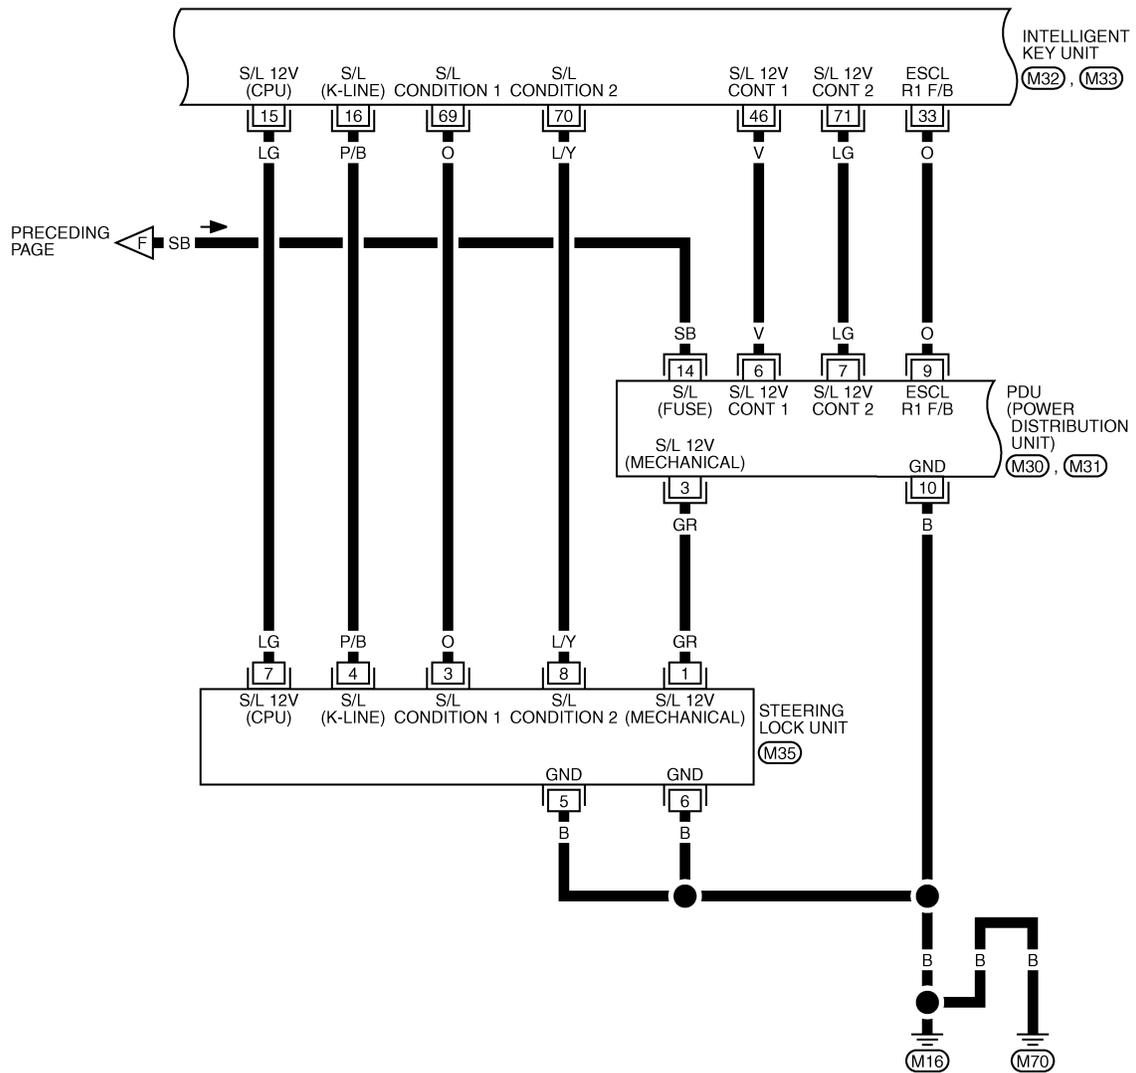





TIWT1917E

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

BL-ENG/ST-05

⬡ : WITH ICC

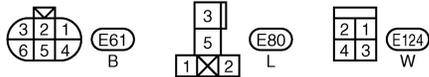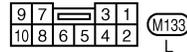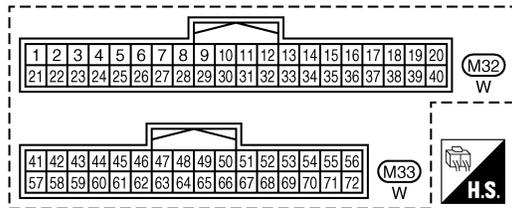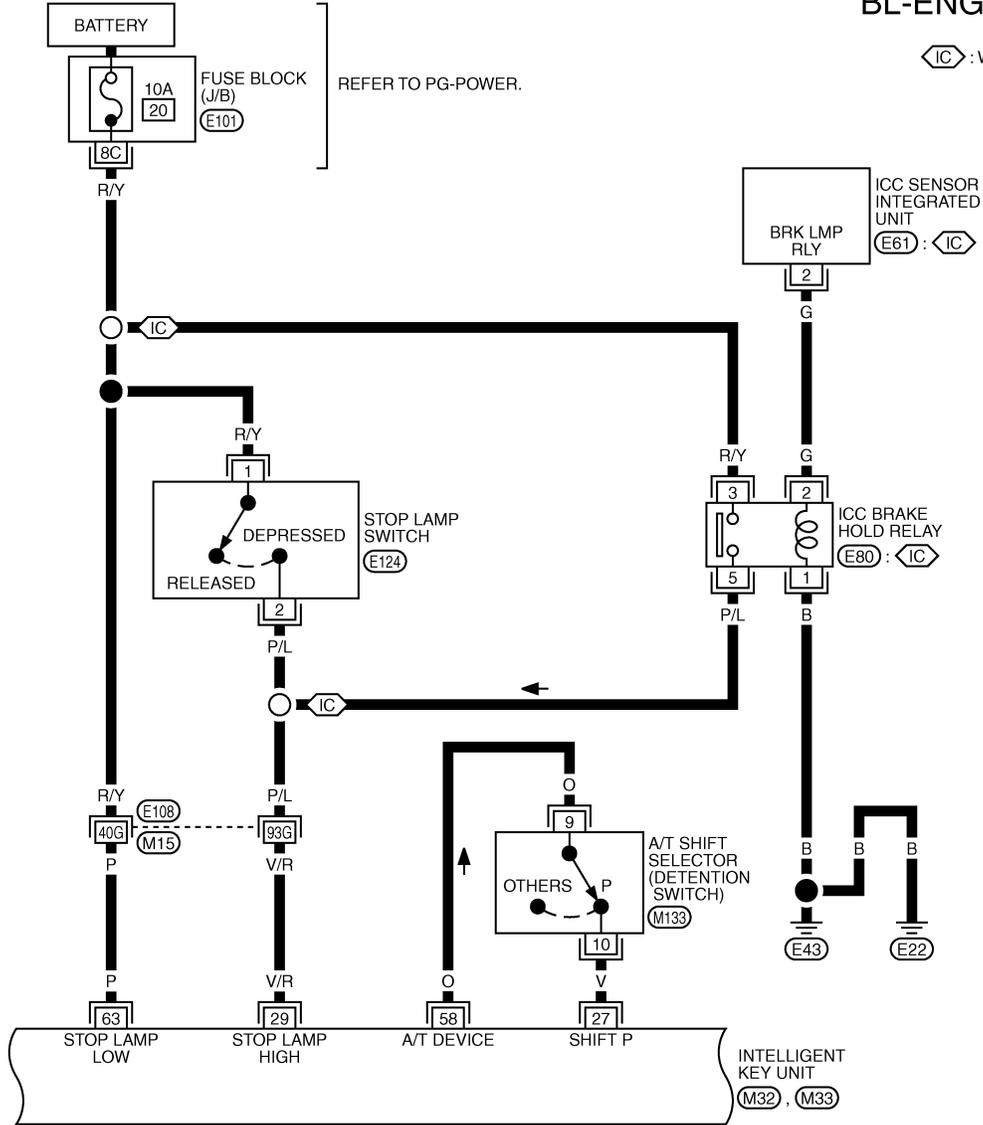

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)



(E101) -FUSE BLOCK-JUNCTION BOX (J/B)

TIWT3144E

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

BL-ENG/ST-06

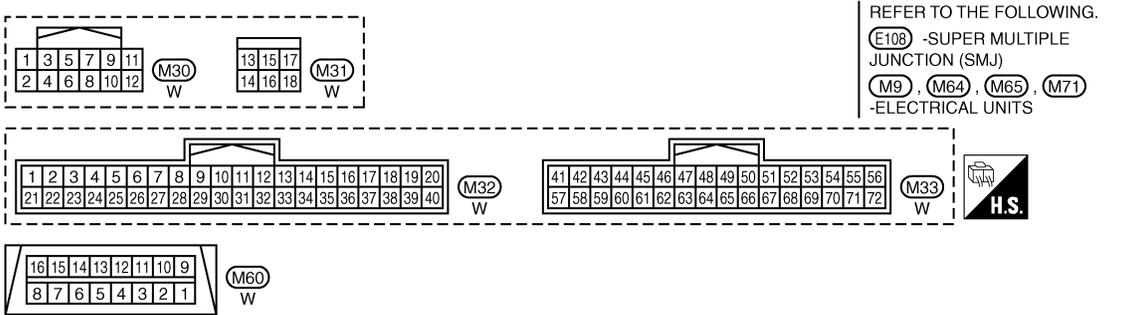
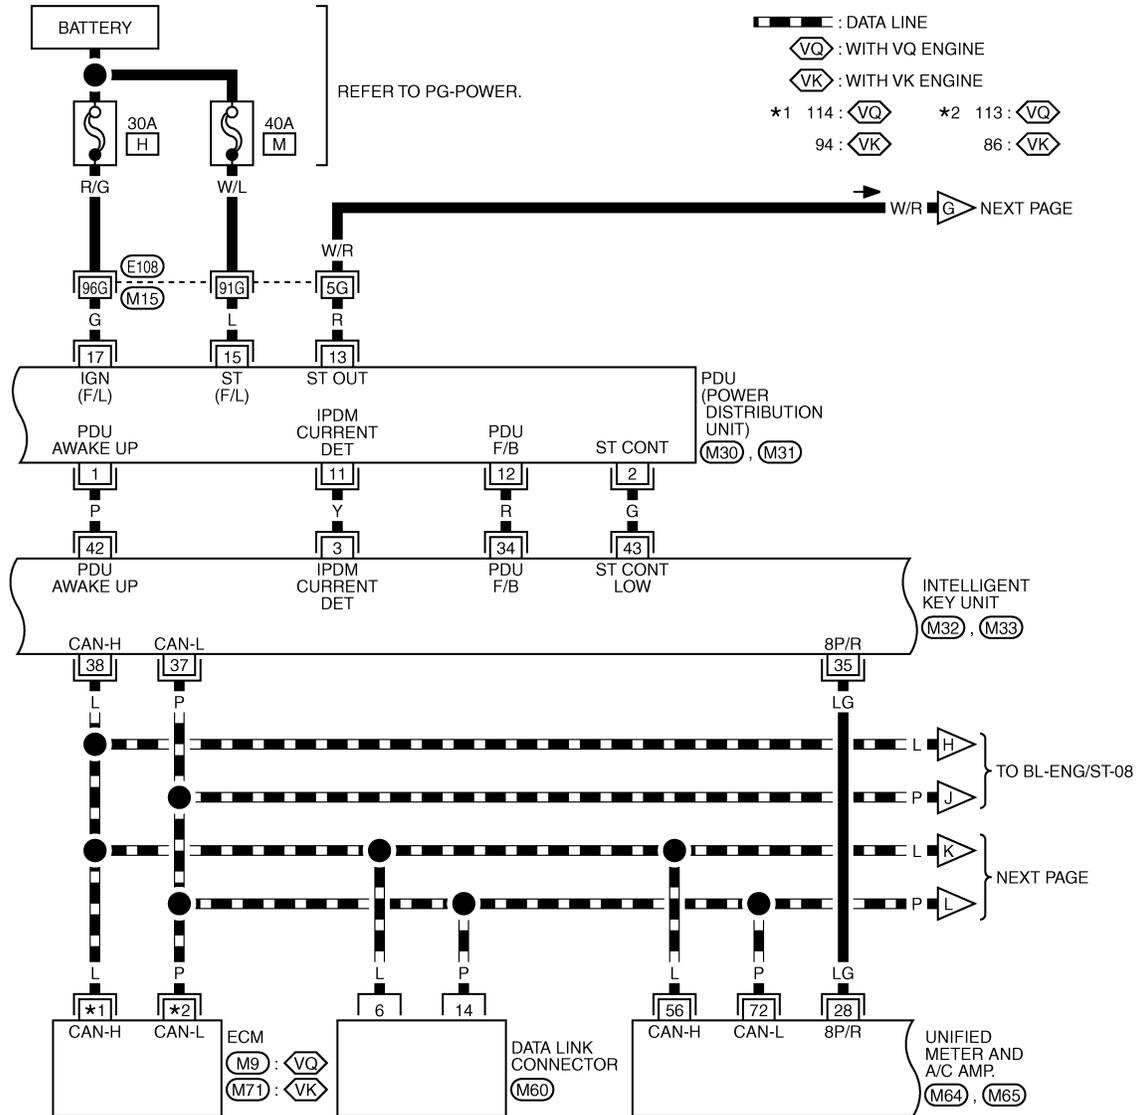


TIWT3145E

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

BL-ENG/ST-07

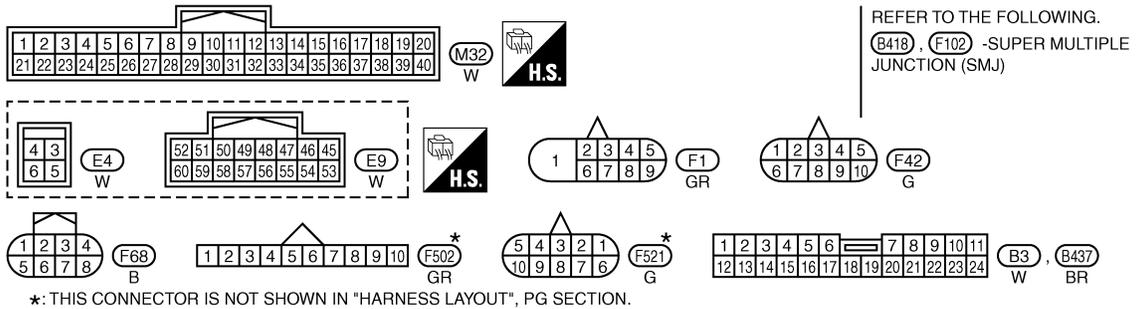
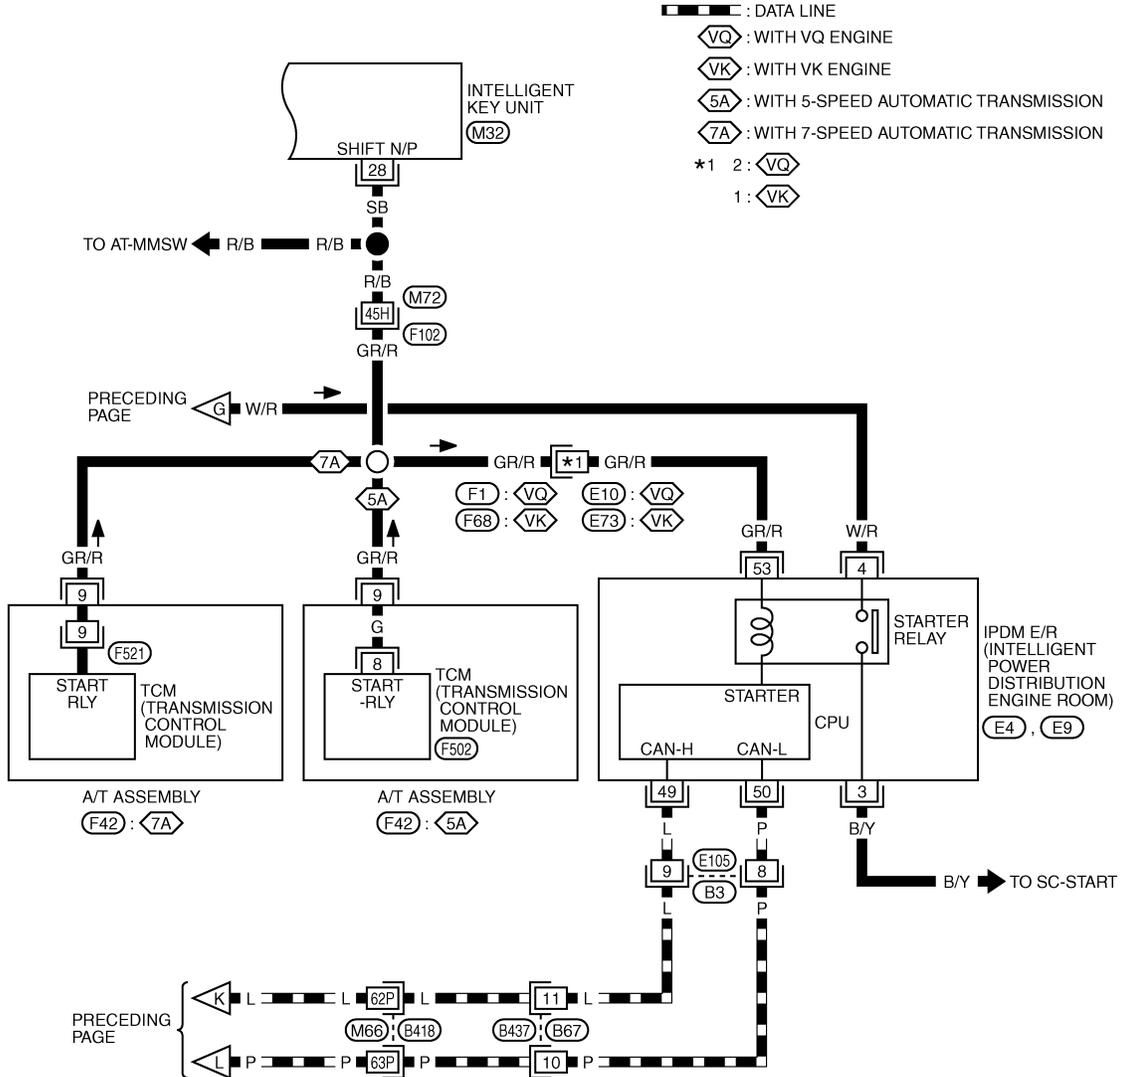


TIWT3146E

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

BL-ENG/ST-08

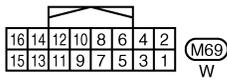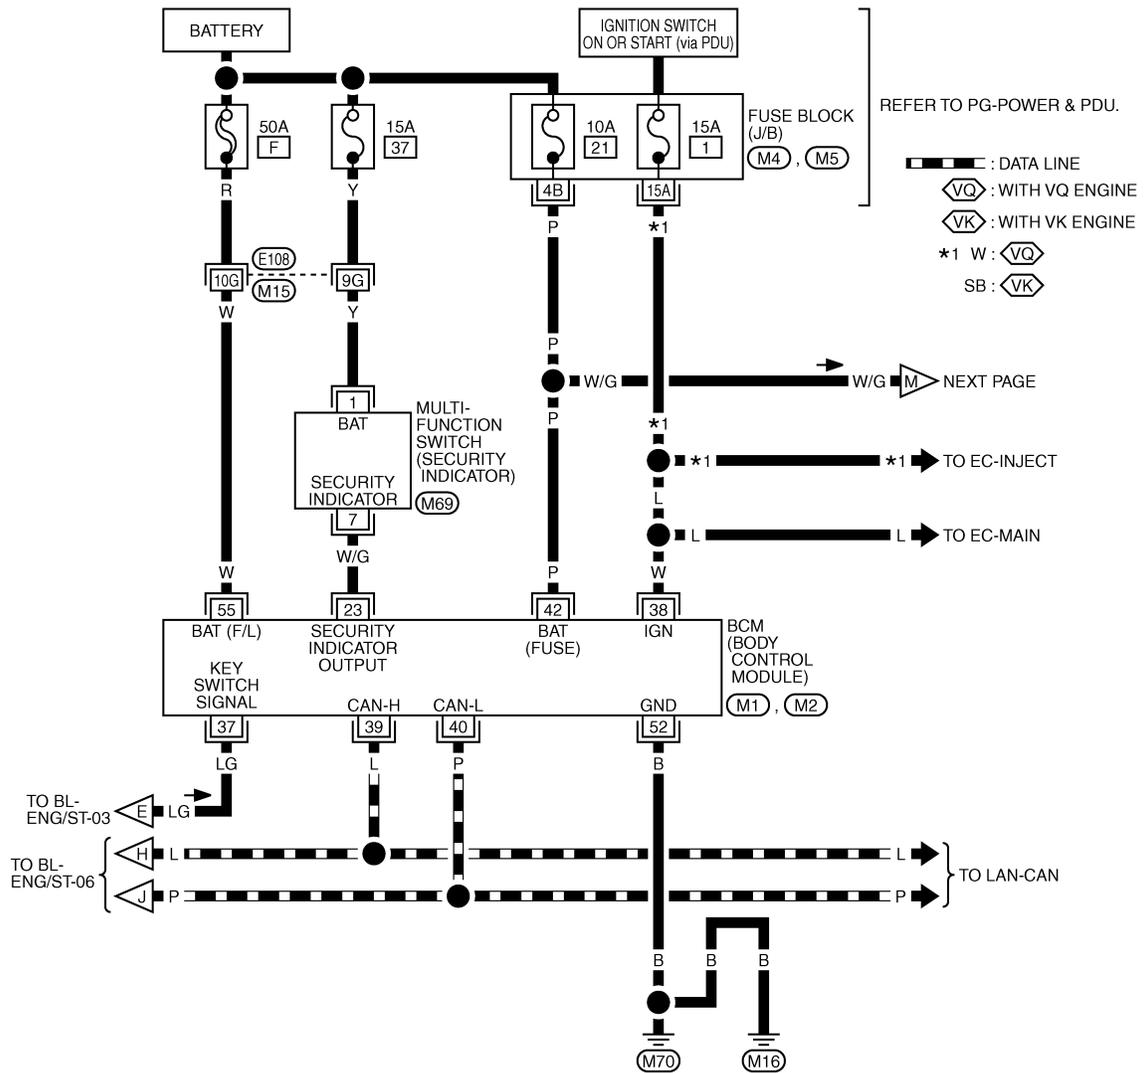

REFER TO THE FOLLOWING.

(E108) -SUPER MULTIPLE JUNCTION (SMJ)

(M4), (M5) -FUSE BLOCK-JUNCTION BOX (J/B)


(M1), (M2) -ELECTRICAL UNITS

TIWT3147E


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >


BL-ENG/ST-09

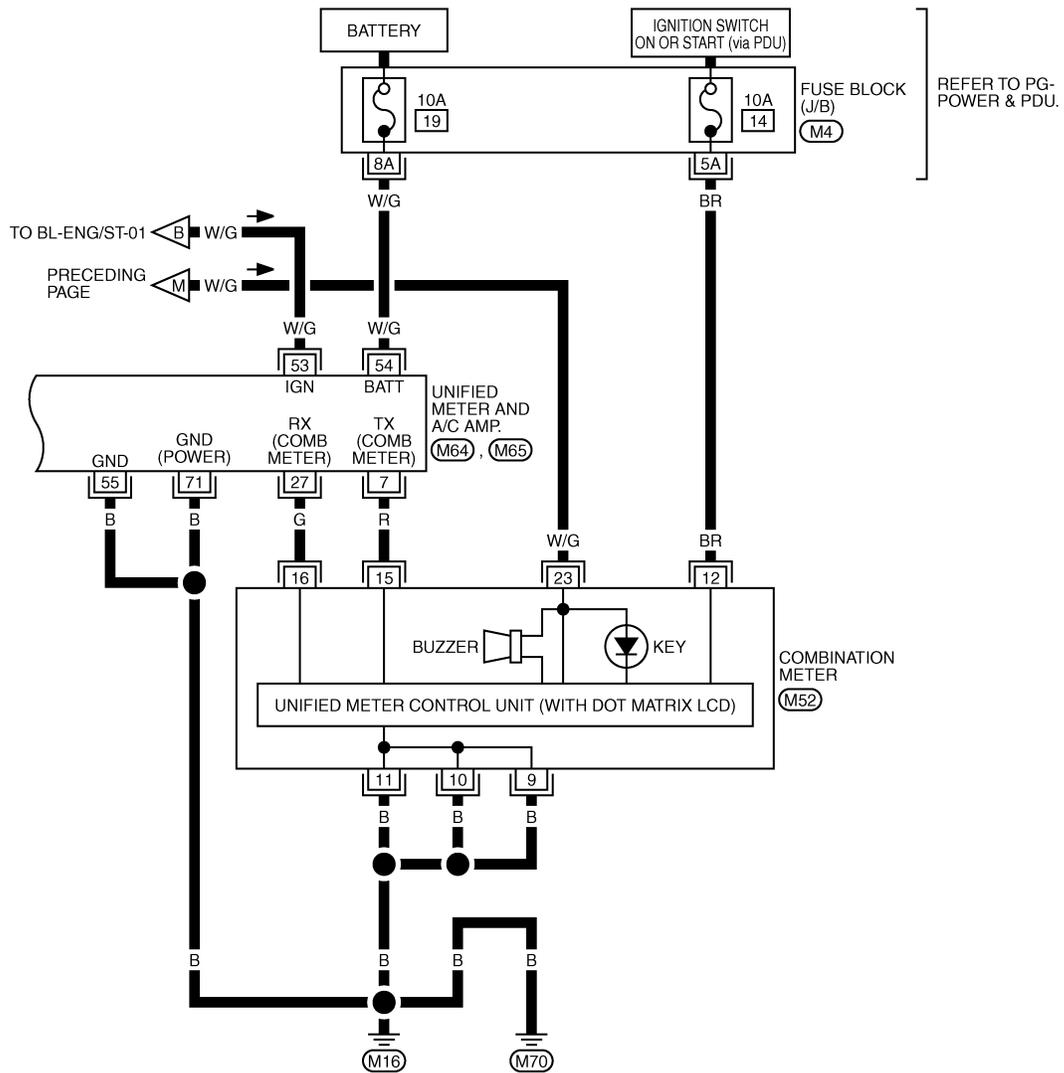

REFER TO PG-POWER & PDU.

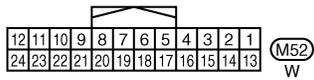

REFER TO THE FOLLOWING.
 (M4) - FUSE BLOCK-JUNCTION BOX (J/B)

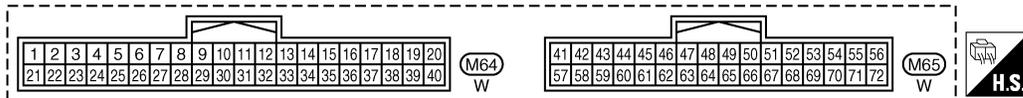

TIWT3148E

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal and Reference Value for Intelligent Key Unit

INFOID:000000005349402

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
1	SB	Power source (fuse)	Input	—	—	Battery voltage
3	Y	IPDM E/R status signal	Input	START	Engine starting (During cranking)	5
				LOCK	Other than above	2
4	B/Y	RSSI signal	Input/ Output	LOCK	Carry the Intelligent Key within the inside key antenna detection area, and then push the push-button ignition switch.	0
					Other than above	<p style="text-align: right; font-size: small;">PIIB5657J</p>
5	B/W	Remote key less entry receiver signal	Input/ Output	LOCK	Carry the Intelligent Key within the inside key antenna detection area, and then push the push-button ignition switch. (When receiving the signal from Intelligent Key)	<p style="text-align: right; font-size: small;">OCC3880D</p>
					Other than above (Signal receiving wait mode)	<p style="text-align: right; font-size: small;">OCC3879D</p>
6	B	Remote key less entry receiver ground	—	—	—	0
7	B/R	Remote keyless entry receiver power supply	Output	—	—	<p style="text-align: right; font-size: small;">OCC3881D</p>
8	W	Push-button ignition switch LOCK indicator	Output	LOCK	Push-button ignition switch is in LOCK position	0
				—	Push-button ignition switch is in any position (Except LOCK position)	1.2

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BL

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
9	L	Push-button ignition switch ACC indicator	Output	ACC	Push-button ignition switch is in ACC position	0
				—	Push-button ignition switch is in any position (Except ACC position)	1.2
10	V	Push-button ignition switch ON indicator	Output	ON	Push-button ignition switch is in ON position	0
				—	Push-button ignition switch is in any position (Except ON position)	1.2
13	LG/B	Key slot illumination	Output	LOCK	Insert Intelligent Key into key slot and driver side door is open.	Battery voltage
				—	Remove Intelligent Key from key slot.	0
15	LG	Steering lock unit power source	Output	LOCK	—	Battery voltage
16	P/B	Steering lock unit signal	Input/ Output	LOCK	Steering lock: Lock	Battery voltage
				ACC	Steering lock: Unlock (Unlocked moment)	0
				NO		0
19	BR/Y	Key switch signal	Input	LOCK	Insert Intelligent Key into key slot.	0
					Remove Intelligent Key from key slot	Battery voltage
20	B	Ground	—	—	—	0
27	V	A/T shift selector (Detention switch)	Input	LOCK	A/T selector lever is in P position	0
				ON	Other than above	Battery voltage
28	SB	Starter relay	Input	ON	A/T selector lever is in N or P position	Battery voltage
				—	Ignition switch position is in LOCK position or A/T selector lever is in any position other than N or P position	0
29	V/R	Stop lamp switch	Input	—	Brake pedal depressed	Battery voltage
					Brake pedal released	0
30	LW	Ignition power supply (ACC)	Input	ACC	Ignition switch position is in ACC or ON position	Battery voltage
31	GR	Ignition power supply (ON)	Input	ON	Ignition switch position is in ON or START position	Battery voltage
33	O	PDU signal	Input	LOCK	Steering lock: Lock	0
				ACC	Steering lock: Unlock	8
34	R	PDU feed back signal	Input	LOCK	Sleep condition (30 seconds or more after all doors are closed under the condition that the ignition switch position is in the LOCK position)	1
				—	Wake-up condition (any condition other than above)	0

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
35	LG	Vehicle speed signal	Input	ON	At speedometer operation (vehicle speed approx. 40 km/h)	<p style="text-align: right; font-size: small;">PKIA1935E</p>
37	P	CAN-L	Input/ Output	—	—	—
38	L	CAN-H	Input/ Output	—	—	—
39	BR/W	Push-button ignition switch	Input	—	Push-button ignition switch is pressed	0
				—	Push-button ignition switch is released	Battery voltage
40	B	Ground	—	—	—	0
41	Y	Power source (fuse)	Input	—	—	Battery voltage
42	P	PDU wake up signal	Output	LOCK	Sleep condition (30 seconds or more after all doors are closed under the condition that the ignition switch position is in the LOCK position)	Battery voltage
				—	Wake-up condition (Open driver door)	0
43	G	Starter signal	Output	ON	At starter motor cranking	0
				—	Any condition other than above	Battery voltage
46	V	Steering lock control signal-1	Output	—	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	Battery voltage
				LOCK	Ignition switch position is in LOCK position (Steering lock activated)	Battery voltage → 0 → Battery voltage (Battery voltage is detected when activating the steering lock)
47	LG	Inside key antenna (+) signal (Instrument center)	Input/ Output	LOCK	Any door open → closed (Door switch: ON → OFF)	<p style="text-align: right; font-size: small;">SIIA1910J</p>
48	V	Inside key antenna (-) signal (Instrument center)	Input/ Output			

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
49	B	Inside key antenna (+) signal (console)	Input/ Output	LOCK	Any door open → closed (Door switch: ON → OFF)	<p style="text-align: right; font-size: small;">SIIA1910J</p>
50	W	Inside key antenna (-) signal (console)	Input/ Output			
51	F/L	Inside key antenna (+) signal (Rear seat)	Input/ Output	LOCK	Any door open → closed (Door switch: ON → OFF)	<p style="text-align: right; font-size: small;">SIIA1910J</p>
52	R/W	Inside key antenna (-) signal (Rear seat)	Input/ Output			
53	G/W	Inside key antenna (+) signal (Trunk room)	Input/ Output	LOCK	Any door open → closed (Door switch: ON → OFF)	<p style="text-align: right; font-size: small;">SIIA1910J</p>
54	LG	Inside key antenna (-) signal (Trunk room)	Input/ Output			
56	B	Ground	—	—	—	0
57	L	Power source (fuse)	Input	—	—	Battery voltage
58	O	A/T shift selector (Detention switch)	Output	LOCK	At sleep (30 seconds or more after all doors are closed under the condition that the ignition switch position is in the LOCK position)	0
					At wake-up (Open driver door)	Battery voltage
63	P	Stop lamp switch	Input	—	Brake pedal depressed	Battery voltage
					Brake pedal released	Battery voltage
64	L/R	Push-button ignition switch illumination	Output	—	Push-button ignition switch illumination is turned on	2.6
					Push-button ignition switch illumination is turned off (15 seconds or more after the driver door is closed)	0
69	O	Steering lock unit condition signal-1	Input	LOCK	Steering lock: Lock	0
				ACC	Steering lock: Unlock	Battery voltage
				ON		Battery voltage
70	L/Y	Steering lock unit condition signal-2	Input	LOCK	Steering lock: Lock	Battery voltage
				ACC	Steering lock: Unlock	0
				ON		0

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
71	LG	Steering lock control signal-2	Output	LOCK	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	Battery voltage
				ACC	Ignition switch position is in LOCK position (Steering lock activated)	Battery voltage → 0 → Battery voltage (Battery voltage is detected when activating the steering lock)
72	B	Ground	—	—	—	0

Terminal and Reference Value for Steering Lock Unit

INFOID:000000005349403

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
1	GR	PDU signal	Input	LOCK	Press push-button ignition switch with Intelligent Key inside vehicle	0 → Battery voltage → 0 (Battery voltage is detected when pressing the push-button ignition switch)
3	O	Condition signal-1	Output	LOCK	Steering lock: Lock	0
				ACC	Steering lock: Unlock	Battery voltage
				ON		Battery voltage
4	P/B	Intelligent Key unit signal	Input/ Output	LOCK	Steering lock: Lock	Battery voltage
				ACC	Steering lock: Unlock	0
				ON		0
5	B	Ground	—	—	—	0
6	B	Ground	—	—	—	0
7	LG	Power source	Input	LOCK	—	Battery voltage
8	LY	Condition signal-2	Output	LOCK	Steering lock: Lock	Battery voltage
				ACC	Steering lock: Unlock	0
				ON		0

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal and Reference Value for BCM

INFOID:000000005349404

Terminal No.	Wire color	Item	Signal Input/Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
23	W/V	Security indicator	Output	LOCK	Intelligent Key is removed from key slot and power supply position is in LOCK position	Battery voltage → 0 (Every 2.4 seconds)
37	LG	Key slot (Key switch signal)	Input	LOCK	Intelligent Key is removed from key slot	0
					Intelligent Key is inserted into key slot	Battery voltage
38	W	Ignition power supply (ON or START)	Input	ON	Power supply position is in ON position	Battery voltage
39	L	CAN-H	Input/Output	—	—	—
40	P	CAN-L	Input/Output	—	—	—
42	P	Power source (fuse)	Input	—	—	Battery voltage
52	B	Ground	—	—	—	0
55	W	Power source (Fusilade link)	Input	—	—	Battery voltage

Terminal and Reference Value for IPDM E/R

INFOID:000000005349405

Terminal No.	Wire Color	Item	Signal Input/Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
4	W/R	Starter motor power supply	Input	LOCK	—	0
				START	Starter motor is activating	Battery voltage
49	L	CAN H	Input/Output	—	—	—
50	P	CAN L	Input/Output	—	—	—
53	GR/R	Shift position signal	Input	ON	A/T selector lever is in N or P position	Battery voltage
				LOCK	A/T selector lever is in any position other than P and N position	0

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal and Reference Value for PDU

INFOID:000000005349406

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
1	P	Wake up signal	Input	LOCK	Sleep condition (30 seconds or more after all doors are closed under the condition that the power supply position is in the LOCK position)	Battery voltage
				—	Wake-up condition (Open driver door)	0
2	G	Starter control signal	Input	ON	At starter motor cranking	0
				—	Any condition other than above	Battery voltage
3	GR	Steering lock unit power source	Output	LOCK	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	0 → Battery voltage → 0
				—	Any condition other than above	0
6	V	Steering lock control signal-1	Input	—	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	Battery voltage
				LOCK	Power supply position is in LOCK position (Steering lock activated)	Battery voltage → 0 → Battery voltage (Battery voltage is detected when activating the steering lock)
7	LG	Steering lock control signal-2	Input	—	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	Battery voltage
				LOCK	Power supply position is in LOCK position (Steering lock activated)	Battery voltage → 0 → Battery voltage (Battery voltage is detected when activating the steering lock)
9	O	Steering lock feed back signal	Output	—	Steering lock: Lock	0
				LOCK	Steering lock: Unlock	8
10	B	Ground	—	—	0	
11	Y	IPDM E/R current signal	Output	START	At starter motor cranking	5
				LOCK	Any condition other than above	2
12	R	Feed back signal	Output	LOCK	Sleep condition (30 seconds or more after all doors are closed under the condition that the power supply position is in the LOCK position)	1
				—	Wake-up condition (any condition other than above)	0
13	R	Starter relay	Output	START	At starter motor cranking	Battery voltage
				—	Any condition other than above	4
14	SB	Power source (fuse)	Input	—	—	Battery voltage

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

BL

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
15	L	Power source (fusible link)	Input	—	—	Battery voltage
17	G	Power source (fusible link)	Input	—	—	Battery voltage

Work Flow

INFOID:000000005349407

1.CHECK IN

Listen to customer complaints or request (Get symptoms).

NOTE:

In rare case, "CHAIN of ECM-IMMU" might be stored as a self-diagnostic result during key registration procedure, even if the system is not malfunction.

malfunction>> GO TO 2.

Key service request>>Perform Initialization. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

2.START ENGINE WITH INTELLIGENT KEY

Check if the engine could be started by all registered Intelligent Keys.

Is the inspection result normal?

The engine can be started by all Intelligent Keys>> GO TO 3.

The engine cannot be started by some Intelligent Keys>> Perform Initialization. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

The engine cannot be started by all Intelligent Keys>> GO TO 4.

3.START ENGINE WITH INTELLIGENT KEY INTO KEY SLOT

Check if the engine could be started by all Intelligent Keys into key slot.

Is the inspection result normal?

The engine can be started by all Intelligent Keys>> GO TO 5.

The engine cannot be started by some Intelligent Keys>> Perform Initialization. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

The engine cannot be started by all Intelligent Keys>> GO TO 4.

4.CHECK "KEY" WARNING LAMP ILLUMINATION

1. Intelligent key into key slot.

2. When pushing the push-button ignition switch, check if "KEY" warning lamp in combination meter illuminates.

Does "KEY" warning lamp illuminate?

YES >> GO TO 7.

NO >> Check function of intelligent key system. Refer to [BL-44, "System Description"](#)

5.CHECK SECURITY INDICATOR LIGHTING

Check security indicator lights up when ignition switch is in ON position.

Does security indicator illuminate?

YES >> GO TO 7.

NO >> GO TO 6.

6.CHECK SECURITY INDICATOR OPERATION

Check security indicator blinks when ignition switch is in OFF position.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair security indicator. Refer to [BL-243, "Symptom Chart for Security Indicator"](#).

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

7. INTELLIGENT KEY UNIT SELF DIAGNOSIS

Perform Intelligent Key unit SELF-DIAGNOSIS using CONSULT-III.

Is DTC displayed?

YES >> GO TO 8.

NO >> GO TO 9.

8. PERFORM INTELLIGENT KEY UNIT TROUBLE DIAGNOSIS

Check Intelligent Key unit self-diagnostic results item chart. Refer to [BL-139, "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Perform intelligent key trouble diagnosis again.

9. BCM SELF DIAGNOSIS

Perform BCM SELF-DIAGNOSIS using CONSULT-III.

Is DTC displayed?

YES >> GO TO 10.

NO >> GO TO 11.

10. PERFORM BCM TROUBLE DIAGNOSIS

Check BCM self-diagnostic results item chart. Refer to [BL-240, "CONSULT-III Functions \(BCM-IMMU\)"](#).

Is the inspection result normal?

YES >> GO TO 9.

NO >> Perform BCM trouble diagnosis again.

11. ECM SELF DIAGNOSIS

Perform ECM SELF-DIAGNOSIS using CONSULT-III.

Is DTC displayed?

P1610-P1615 is displayed >> GO TO 12.

No DTC is displayed >> GO TO 2.

Another code different from (P1610-P1615) is displayed. >> Go to EC section.

12. PERFORM ECM TROUBLE DIAGNOSIS

Check ECM self-diagnostic results item chart. Refer to [BL-240, "CONSULT-III Functions \(BCM-IMMU\)"](#).

Is the inspection result normal?

YES >> GO TO 11.

NO >> Perform ECM trouble diagnosis again.

CONSULT-III Functions (INTELLIGENT KEY)

INFOID:000000005349408

CONSULT-III can display each diagnostic item using the diagnostic test modes as shown below.

Part to be diagnosed	Test item, Diagnosis mode	Description
Intelligent Key	WORK SUPPORT	Changes settings for each function.
	SELF-DIAG RESULTS	Intelligent Key unit performs CAN communication diagnosis.
	DATA MONITOR	Displays Intelligent Key unit input data in real time.
	CAN DIAGNOSTIC SUPPORT MONITOR	The results of transmit/receive diagnosis of CAN Communication can be read.
	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to them.
	ECU PART NUMBER	Displays Intelligent Key unit part No.

SELF-DIAGNOSTIC RESULTS

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Suspect Systems [DTC]	Diagnostic item is detected when...	Repair work	Reference page
CAN COMM CIRCUIT [U1000]	Malfunction is detected in CAN communication	Perform CAN communication system inspection	BL-85
CONTROL UNIT (CAN) [U1010]	Malfunction is detected in CAN communication caused by Intelligent Key unit internal malfunction	Replace Intelligent Key unit.	BL-85
STRG COMM 1 [B2013]	Communication malfunction with steering lock unit is detected	Check steering lock unit	BL-144
STEERING LOCK UNIT [B2551]	Even if the communication with steering lock unit is normally performed, the steering lock is malfunctioning	Replace steering lock unit	BL-147
INTELLIGENT KEY [B2552]	Internal malfunction is detected in Intelligent Key unit	Replace Intelligent Key unit.	BL-150
IGN POWER CIRCUIT [B2553]	It continues for 2 seconds or more that ON power supply input to Intelligent Key unit is excessively low when the power supply position is in ON position	Check Intelligent Key unit ON power supply input	BL-150
ACC POWER CIRCUIT [B2554]	It continues for 2 seconds or more that ACC power supply input to Intelligent Key unit is excessively low when the power supply position is in ACC or ON position	Check Intelligent Key unit ACC power supply input	BL-151
STOP LAMP CIRCUIT [B2555]	5V or less is detected at both the stop lamp switch signal input circuit that is input to Intelligent Key unit and the monitor input before stop lamp switch	Check stop lamp switch	BL-153
ENG START SW [B2556]	Condition that push-button ignition switch is pushed is detected continuously for 100 seconds or more	Check push-button ignition switch	BL-154
VEHICLE SPEED [B2557]	Some differences occur on one or more vehicle speed inputs of Intelligent Key unit	Check vehicle speed signal	BL-155
SHIFT POSITION [B2558]	<ul style="list-style-type: none"> There is a difference between the shift position input via CAN communication and the P position input by detente switch Vehicle speed (5 km/h or more) is detected continuously for 10 seconds or more even if the shift position is detected in P position when the power supply position is in ON position 	Check shift position input	BL-157
PDU [B2559]	Internal malfunction is detected in PDU	Replace PDU	BL-159
START POW SUP CIRC [B2560]	Though the engine start operation is not performed, starter relay in IPDM E/R is ON	Check starter power supply	BL-160
LOW VOLTAGE [B2562]	Battery power supply input to Intelligent Key unit (8.8V or less) is detected continuously for 1.5 seconds or more	Check battery low voltage	BL-161
HI VOLTAGE [B2563]	Battery power supply input to Intelligent Key unit (18V or more) is detected continuously for 90 seconds or more	Check for battery high voltage	BL-162
NATS MALFUNCTION [B2590]	Malfunction is detected in immobilizer system	Check (IVIS) NATS trouble diagnosis procedure	BL-220

CAUTION:

When CAN COMM [U1000] and CONTROL UNIT (CAN) [U1010] are displayed, give priority to performing trouble diagnosis.

DATA MONITOR

Monitor item	Content
DR REQ SW	Indicates [ON/OFF] condition of door request switch (driver side).
AS REQ SW	Indicates [ON/OFF] condition of door request switch (passenger side).
BD/TR REQ SW	Indicates [ON/OFF] condition of trunk opener request switch.
ON POS	Indicates [ON/OFF] condition of ignition switch in ON position.
ACC POS	Indicates [ON/OFF] condition of ignition switch in ACC position.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Monitor item	Content
DOOR STAT SW	Indicates [ON/OFF] condition of door unlock sensor.
STOP LAMP SW	Indicates [ON/OFF] condition of stop lamp switch.
P RANGE SW	Indicates [ON/OFF] condition of transmission range switch.
TR CANCEL SW	Indicates [ON/OFF] condition of trunk cancel switch.
DOOR LOCK SIG	Indicates [ON/OFF] condition of door lock signal from Intelligent Key remote controller button.
DOOR UNLOCK SIG	Indicates [ON/OFF] condition of door unlock signal from Intelligent Key remote controller button.
KEYLESS TRUNK	Indicates [ON/OFF] condition of trunk open signal from Intelligent Key remote controller button.
KEYLESS PANIC	Indicates [ON/OFF] condition of panic alarm signal from Intelligent Key remote controller button.
DOOR SW DR	Indicates [OPEN/CLOSE] condition of front door switch driver side from BCM via CAN communication line.
DOOR SW AS	Indicates [OPEN/CLOSE] condition of front door switch passenger side from BCM via CAN communication line.
DOOR SW RR	Indicates [OPEN/CLOSE] condition of rear door switch LH from BCM via CAN communication line.
DOOR SW RL	Indicates [OPEN/CLOSE] condition of rear door switch RH from BCM via CAN communication line.
DOOR BK SW	Indicates [OPEN/CLOSE] condition of back door switch from BCM via CAN communication line.
TRUNK SW	Indicates [OPEN/CLOSE] condition of trunk room lamp switch from BCM via CAN communication line.
FOB IN FLAG	Indicates [SET/RESET] of passenger room detection status for registered Intelligent Key.
ID OK FLAG	Indicates [SET/RESET] condition of key ID.
PRMT ENG STAT	Indicates [SET/RESET] of passenger room detection status for registered Intelligent Key.
BCM OK FLAG	This is displayed even if it is not equipped.
RMOT ENG STAT	This is displayed even if it is not equipped.
VEHICLE SPEED	Indicates [km/h] condition of vehicle speed.
STLK STAT SW1	Indicates [ON/OFF] condition that is judged by steering lock status switch.
STLK STAT SW2	Indicates [ON/OFF] condition that is judged by steering lock status switch.
ENGINE SW	Indicates [ON/OFF] condition of push-button ignition switch.
PNP RENGE SIG	Indicates [P position(ON)/other than P position(OFF)] condition that is judged by transmission range switch.
CARD IN	Indicates [ON/OFF] condition of key switch.
ACC POWER F/B	Indicates [ON/OFF] condition of ignition switch in ACC position.
IGN POWER F/B	Indicates [ON/OFF] condition of ignition switch in ON position.
STLK POWER F/B	Indicates [ON/OFF] condition of steering lock output power supply.
VHCL SPEED 2	Indicates [km/h] condition of vehicle speed.

WORK SUPPORT

Monitor item	Description
CONFIRM KEY FOB ID	It can be checked whether Intelligent Key ID code is registered or not in this mode.
SHORT CRANKING OUTPUT	Starter motor can operate during the times below. <ul style="list-style-type: none"> • 70 mses • 100 mses • 200 mses
TAKE OUT FROM WINDOW WARN	Take away warning chime (from window) mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.
LOW BAT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Monitor item	Description
ANSWER BACK FUNCTION	Hazard and buzzer reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.
SELECTIVE UNLOCK FUNCTION	Selective unlock function mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.
ANTI KEY LOCK IN FUNCTION	Key reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/Unlock operation • OFF: Non-operation
ANSWER BACK WITH I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • HORN CHIRP: Sound horn • BUZZER: Sound Intelligent Key warning buzzer • OFF: Non-operation
ANSWER BACK WITH I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) with this mode.
AUTO RELOCK TIMER	Auto door lock timer mode can select the following with this mode. <ul style="list-style-type: none"> • 1 min • 5 min • OFF: Non-operation
PANIC ALARM DELAY	Panic alarm button's pressing time on Intelligent Key remote control button can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • 0.5 sec • 1.5 sec • OFF: Non-operation
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by trunk opener request switch can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.
TRUNK OPEN DELAY	Trunk button's pressing time on Intelligent Key button can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • 0.5 sec • 1.5 sec • OFF: Non-operation
P/W DOWN DELAY	Unlock button's pressing time on Intelligent Key button can be selected from the following with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched. <ul style="list-style-type: none"> • 3 sec • 5 sec • OFF: Non-operation
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side, passenger side and trunk) mode can be changed to operate (ON) or not operate (OFF) with this mode. The operation mode will be changed when "CHANGE SETT" on CONSULT-III screen is touched.

ACTIVE TEST

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Test item	Description
DOOR LOCK/UNLOCK	<p>This test is able to check door lock/unlock operation.</p> <ul style="list-style-type: none"> • The all door lock actuators are locked when "LOCK" on CONSULT-III screen is touched. • The all door lock actuators are unlocked when "ALL UNLK" on CONSULT-III screen is touched. • The door lock actuator (driver side) is unlocked when "DR UNLK" on CONSULT-III screen is touched. • The door lock actuator (passenger side) is unlocked when "AS UNLK" on CONSULT-III screen is touched. • The trunk lid opener actuator is open when "TRUNK OPEN" on CONSULT-III screen is touched.
ANTENNA	<p>This test is able to check Intelligent Key antenna operation. When the following conditions are met, hazard warning lamps flash.</p> <ul style="list-style-type: none"> • Inside key antenna (Instrument center) detects Intelligent Key, when "ROOM ANT1" on CONSULT-III screen is touched. • Inside key antenna (Center console) detects Intelligent Key, when "ROOM ANT2" on CONSULT-III screen is touched. • Inside key antenna (rear seat) detects Intelligent Key, when "ROOM ANT3" on CONSULT-III screen is touched. • Inside key antenna (Trunk room) detects Intelligent Key, when "LAG ANT1" on CONSULT-III screen is touched. • Outside key antenna (Driver side) detects Intelligent Key, when "DRIVER ANT" on CONSULT-III screen is touched. • Outside key antenna (Passenger side) detects Intelligent Key, when "ASSIST ANT" on CONSULT-III screen is touched. • Outside key antenna (Trunk room) detects Intelligent Key, when "BD/TR ANT" on CONSULT-III screen is touched.
OUTSIDE BUZZER	<p>This test is able to check Intelligent Key warning buzzer operation. Intelligent Key warning buzzer sounds when "ON" on CONSULT-III screen is touched.</p>
INSIDE BUZZER	<p>This test is able to check warning chime into combination meter operation.</p> <ul style="list-style-type: none"> • Take away warning chime sounds when "TAKE OUT" on CONSULT-III screen is touched. • Key warning chime sounds when "KEY WARN" on CONSULT-III screen is touched. • P position warning chime sounds when "P RNG WARN" on CONSULT-III screen is touched. • ACC warning chime sounds when "ACC WARN" on CONSULT-III screen is touched.
INDICATOR	<p>This test is able to check warning lamp operation.</p> <ul style="list-style-type: none"> • "KEY" Warning lamp illuminates when "KEY IND ON" on CONSULT-III screen is touched. • "KEY" Warning lamp flashes when "KEY IND FSH" on CONSULT-III screen is touched.
LCD	<p>This test is able to check meter display information</p> <ul style="list-style-type: none"> • Engine start information displays when "BRAKE/P" on CONSULT-III screen is touched. • Engine start information displays when "BRAKE/P/ON" on CONSULT-III screen is touched. • Key ID warning displays when "KEY ID NG" on CONSULT-III screen is touched. • Steering lock information displays when "STLCK RELES" on CONSULT-III screen is touched. • P position warning displays when "P RNG IND" on CONSULT-III screen is touched. • Intelligent Key insert information displays when "INSERT KEY" on CONSULT-III screen is touched. • Intelligent Key low battery warning displays when "KEY BAT LOW" on CONSULT-III screen is touched. • Take away through window warning displays when "TK AWAY WDW" on CONSULT-III screen is touched. • Take away warning display when "TAKE AWAY" on CONSULT-III screen is touched. • OFF position warning display when "IGN OFF WARN" on CONSULT-III screen is touched.
P RANGE	<p>This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "ON" on CONSULT-III screen is touched.</p>
ENGINE SW ILLUMI	<p>This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT-III screen is touched.</p>
LOCK INDCATOR	<p>This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.</p>
ACC INDCATOR	<p>This test is able to check ACC indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.</p>

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

BL

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Test item	Description
IGNITION ON IND	This test is able to check IGNITION ON indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT-III screen is touched.
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination flash when "ON" on CONSULT-III screen is touched.

CONSULT-III Functions (BCM-INTELLIGENT KEY)

INFOID:000000005349409

CONSULT-III can display each diagnostic item using the diagnostic test modes as shown below.

Part to be diagnosed	Test item, Diagnosis mode	Description
Intelligent Key	DATA MONITOR	Displays Intelligent Key unit input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to then.

DATA MONITOR

Monitor item	Content
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.
ACC ON SW	Indicates [ON/OFF] condition of ignition switch in ACC position.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
I-KEY UNLOCK	Indicates [ON/OFF] condition of unlock signal from Intelligent Key.
IKEY TRNK/HAT	Indicates [ON/OFF] condition of trunk lid open signal from Intelligent Key.
I-KEY DR UNLK	Indicates [ON/OFF] condition of unlock signal from door request switch (driver side)
I-KEY AS UNLK	Indicates [ON/OFF] condition of unlock signal from door request switch (passenger side)
I-KEY PANIC	Indicates [ON/OFF] condition of panic button of intelligent Key.
I-KEY PW DWN	Indicates [ON/OFF] condition of PW down signal from intelligent Key.
ENGINE START	Indicates [ON/OFF] condition of push-button ignition switch.

ACTIVE TEST

Test item	Description
DOOR LOCK	This test is able to check door lock/unlock operation. <ul style="list-style-type: none"> The all door lock actuators are locked when "LOCK" on CONSULT-III screen is touched. The all door lock actuators are unlocked when "ALL UNLK" on CONSULT-III screen is touched. The door lock actuator (driver side) is unlocked when "DR UNLK" on CONSULT-III screen is touched. The door lock actuator (passenger side) is unlocked when "AS UNLK" on CONSULT-III screen is touched. The trunk lid opener actuator is open when "TRUNK OPEN" on CONSULT-III screen is touched.
INT LAMP	This test is able to check interior lamp operation. This interior room lamp will be activated after "ON" on CONSULT-III screen is touched.
TRUNK/GLASS HATCH	This test is able to check trunk lid opener actuator open operation. This actuator opens when "ON" on CONSULT-III screen is touched.
POWER WINDOW DOWN	This test is able to check power window down operation. This power window down will be activated after "ON" on CONSULT-III screen is touched.
FLASHER	This test is able to check security hazard lamp operation. This hazard lamps will be activated after "ON" on CONSULT-III screen is touched.
HORN	This test is able to check horn operation. This horn will be activated after "ON" on CONSULT-III screen is touched.

B2013 STRG COMM 1

INFOID:000000005349410

DIAGNOSIS DESCRIPTION

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

B2013 steering lock communication malfunction monitors the communication condition between Intelligent Key unit and steering lock unit. If the reply from the steering lock unit against the communication from Intelligent Key unit does not come twice continuously, Intelligent Key unit judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code).

TERMINALS AND REFERENCE VALUE FOR INTELLIGENT KEY UNIT

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
15	LG	Steering lock unit power source	LOCK	—	Battery voltage
16	P/B	Steering lock unit signal	LOCK	Steering lock: Lock	Battery voltage
			ACC	Steering lock: Unlock (Unlocked moment)	0

SELF-DIAGNOSTIC LOGIC

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2013	STRG COMM 1	There is no replay from the steering lock unit against the communication from Intelligent Key unit.	<ul style="list-style-type: none"> Harness and connector (Open or shorted in the circuit between Intelligent Key unit and steering lock unit) Steering lock unit power supply circuit Steering lock unit

DIAGNOSTIC PROCEDURE

1. CHECK STEERING LOCK UNIT POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect steering lock unit connector.
- Check voltage between steering lock unit connector and ground.


Terminals			Voltage (V) (Approx.)
(+)		(-)	
Steering lock unit connector	Terminal		
M35	7	Ground	Battery voltage

OK or NG

- OK >> GO TO 3.
NG >> GO TO 2.

2. CHECK HARNESS CONTINUITY 1

- Disconnect Intelligent Key unit connector.
- Check continuity between Intelligent Key unit connector and steering lock unit connector.

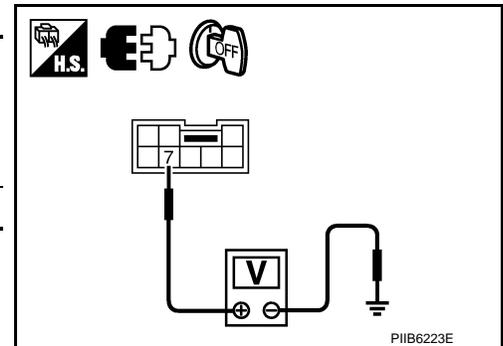

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	Steering lock unit connector	Terminal	
M32	15	M35	7	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	15		No

OK or NG

- OK >> Check the condition of harness and connector.
- NG >> Repair or replace harness.

3. CHECK STEERING LOCK UNIT SIGNAL

1. Connect steering lock unit connector.
2. Check voltage between steering lock unit connector and ground.

Terminals		Condition	Voltage (V) (Approx.)
(+)	(-)		
Steering lock unit connector	Terminal		
M35	4	When turn ignition switch to START with Intelligent Key in the car	Battery voltage ↓ 0 ↓ Battery voltage

OK or NG

- OK >> Replace steering lock unit.
- NG >> GO TO 4.

4. CHECK HARNESS CONTINUITY 2

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit and steering lock unit connector.
3. Check continuity between Intelligent Key unit connector and steering lock unit connector.




A		B		Continuity
Intelligent Key unit connector	Terminal	Steering lock unit connector	Terminal	
M32	16	M35	4	Yes

4. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	16		No

OK or NG

- OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.
- NG >> Repair or replace harness.

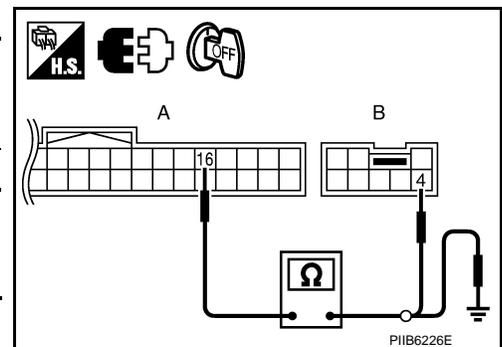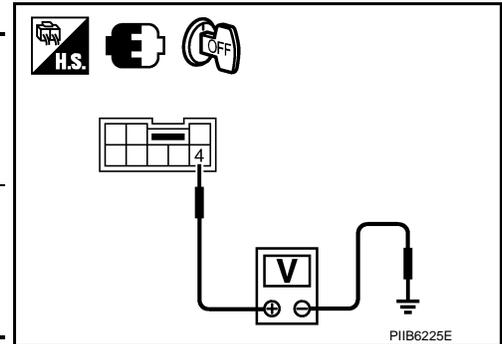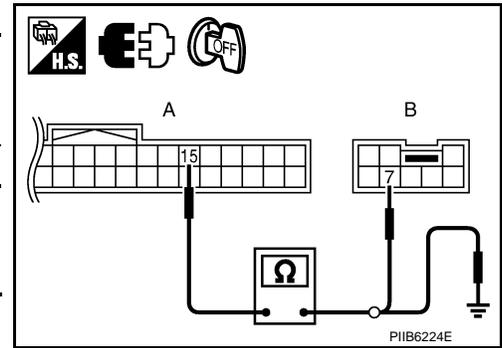

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

B2551 STEERING LOCK UNIT

INFOID:000000005349411

DIAGNOSIS DESCRIPTION

Though the communication between the Intelligent Key unit and the steering lock unit is normal, when the steering lock/unlock is not normal, B2551 steering lock unit malfunction judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code)

TERMINALS AND REFERENCE VALUE

Intelligent Key Unit

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
69	O	Steering lock unit condition signal-1	LOCK	Steering lock: Lock	0
			ACC	Steering lock: Unlock	Battery voltage
			ON		Battery voltage
70	L/Y	Steering lock unit condition signal-2	LOCK	Steering lock: Lock	Battery voltage
			ACC	Steering lock: Unlock	0
			ON		0
71	LG	PDU signal	LOCK	Steering lock: Lock	Battery voltage
			ACC	Steering lock: Unlocked moment	0

PDU (Power Distribution Unit)

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
3	GR	Steering lock unit power source	LOCK	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	0 → Battery voltage → 0
			—	Any condition other than above	0
7	LG	Steering lock control signal-2	—	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	Battery voltage
			LOCK	Power supply position is in LOCK position (Steering lock activated)	Battery voltage → 0 → Battery voltage (Battery voltage is detected when activating the steering lock)

SELF-DIAGNOSTIC LOGIC

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2551	STEERING LOCK UNIT	Though the communication between the Intelligent Key and the steering lock unit is normal, the steering lock unit condition signal is NG	<ul style="list-style-type: none"> • Harness and connector (Open or shorted in the circuit between the units) • Steering lock unit

DIAGNOSTIC PROCEDURE


1. CHECK STEERING LOCK SIGNAL

Check voltage between power distribution unit connector and ground.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminals		Condition	Voltage (V) (Approx.)
(+)			
Power distribution unit connector	Terminal	(-)	
M30	6	Ground	When turn ignition switch to START with Intelligent Key in the car
	7		
	6	Ground	When turn ignition switch to OFF (steering lock operates)
	7		

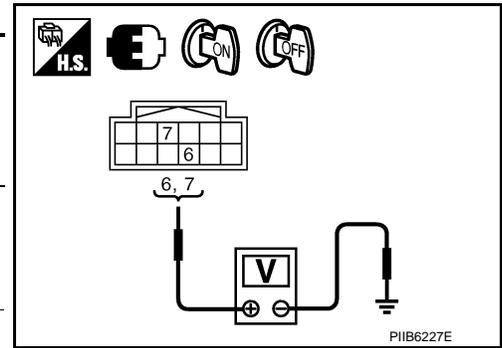


OK or NG

- OK >> GO TO 2.
- NG >> GO TO 4.

2. CHECK POWER DISTRIBUTION UNIT POWER SUPPLY

Check voltage between power distribution unit connector and ground.

Terminals		Condition	Voltage (V) (Approx.)
(+)			
Power distribution unit connector	Terminal	(-)	
M30	3	Ground	When turn ignition switch to OFF (steering lock operates)
			Ignition switch OFF

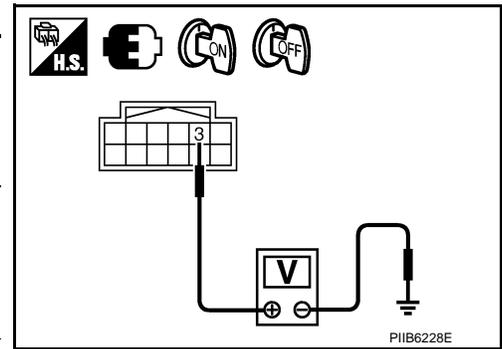

OK or NG

- OK >> GO TO 3.
- NG >> Check if "B2558 PDU" is displayed on self-diagnosis results. If it is displayed, first perform the diagnosis.


3. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect power distribution unit and steering lock unit connector.
3. Check continuity between power distribution unit connector and steering lock unit connector.

A		B		Continuity
Power distribution unit connector	Terminal	Steering lock unit connector	Terminal	
M30	3	M35	1	Yes

4. Check continuity between power distribution unit connector and ground.

A		Ground	Continuity
Power distribution unit connector	Terminal		
M30	3		No

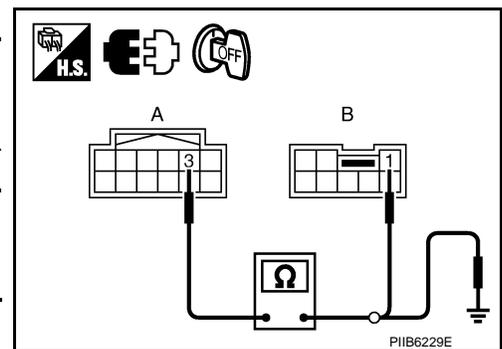

OK or NG

- OK >> GO TO 5.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

NG >> Repair or replace harness.

4. CHECK COMMUNICATION CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit and power distribution unit connector.
3. Check continuity between Intelligent Key unit connector and power distribution unit connector.


A		B		Continuity
Intelligent Key unit connector	Terminal	Power distribution unit connector	Terminal	
M33	46	M30	6	Yes
	71		7	

4. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M33	46		No
	71		

OK or NG

- OK >> Check the condition of harness and connector.
 NG >> Repair or replace harness.

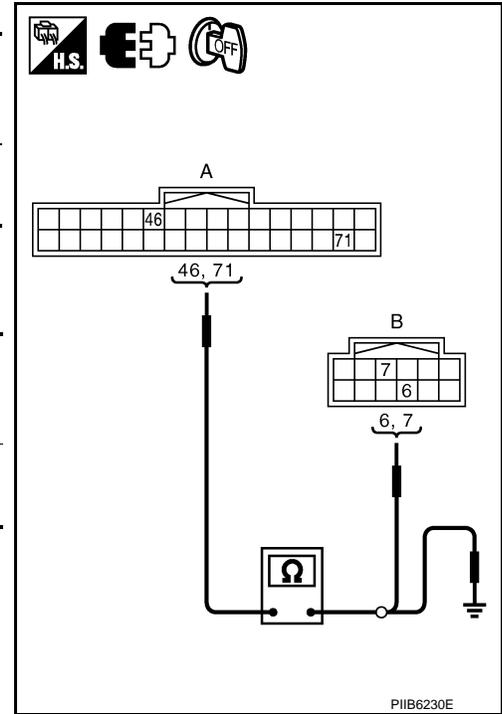

5. CHECK SIGNAL CIRCUIT

1. Connect steering lock unit and power distribution unit connector.
2. Check continuity between steering lock unit connector and ground.


Terminals			Condition	Voltage (V) (Approx.)
(+) Steering lock unit connector		(-) Terminal		
M35	3	Ground	When turn ignition switch to START with Intelligent Key in the car	Battery voltage
	8			0
	3		Ignition switch: OFF	0
	8			Battery voltage

OK or NG

- OK >> Replace steering lock unit.
 NG >> GO TO 6.

6. CHECK COMMUNICATION CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit and steering lock unit connector.
3. Check continuity between Intelligent Key unit connector and steering lock unit connector.

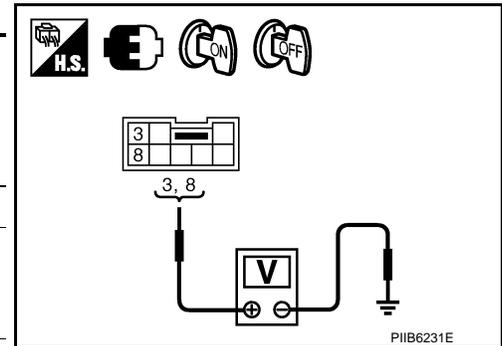


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	Steering lock unit connector	Terminal	
M33	69	M35	3	Yes
	70		8	

4. Check continuity between Intelligent Key unit connector and ground.

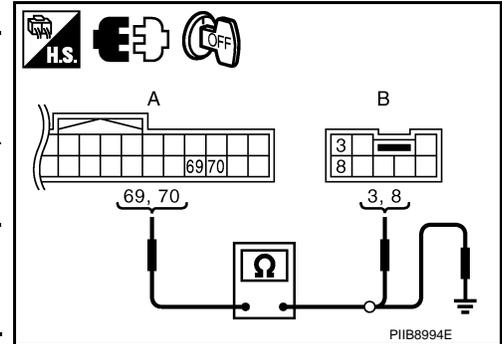

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M33	69		No
	70		

OK or NG

- OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.
- NG >> Repair or replace harness.

B2552 INTELLIGENT KEY

INFOID:000000005349412

DIAGNOSIS DESCRIPTION

B2552 Intelligent Key unit internal malfunction judges NG by self-detecting the Intelligent Key unit internal malfunction.

If this DTC (Diagnostic Trouble Code) is displayed, replace the Intelligent Key unit and perform the specified registration procedure. Refer to the Technical Bulletin.

B2553 IGN POWER CIRCUIT

INFOID:000000005349413

DIAGNOSIS DESCRIPTION

Though the power supply switching control to ON position by push-button ignition switch operation is performed normally, if there is no ON power supply input to the Intelligent Key unit, B2553 ignition power supply system judges it is the malfunction and displays the DTC (Diagnostic Trouble Code)

TERMINAL AND REFERENCE VALUE FOR INTELLIGENT KEY UNIT

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
31	GR	Ignition power supply (ON)	ON	Power supply position is in ON or START position	Battery voltage

CONSULT-III DATA MONITOR STANDARD VALUE

Monitor item	Measuring condition	Reference value
ON POS	Power supply position is in ON position	ON
	Power supply position is in any position other than ON	OFF

SELF-DIAGNOSTIC LOGIC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2553	IGN POWER CIRCUIT	Though the changing control to ON position by push-button ignition switch operation is performed normally, ON position power supply to the Intelligent Key unit is not supplied	<ul style="list-style-type: none"> 10A fuse Harness and connector (Open or shorted in the circuit)

DIAGNOSTIC PROCEDURE

1. CHECK POWER SUPPLY CIRCUIT

With CONSULT-III

Check ("IGN ON SW") in DATA MONITOR mode with CONSULT-III.


When ignition switch is turned to ON

IGN ON SW : ON

Without CONSULT-III

Check voltage between Intelligent Key unit connector and ground.

Terminals		Ignition switch condition	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M32	31	ON	Battery voltage
		OFF	0

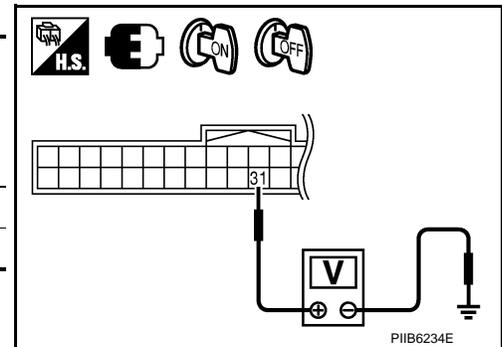

OK or NG

OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.

NG >> Check Intelligent Key unit power supply circuit for open or short.

B2554 ACC POWER CIRCUIT

INFOID:000000005349414

DIAGNOSIS DESCRIPTION

B2554 ACC power supply circuit monitors the following 2 signals.

- Though the power supply switching control to ACC position by push-button ignition switch operation is performed normally, if there is no ACC power supply input to the Intelligent Key unit, it judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code)
- When performing the power supply switching control to ACC position by push-button ignition switch operation, if the power supply position switching cannot be performed because the wake-up signal is not entered into PDU (Power Distribution Unit), it judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code)

TERMINALS AND REFERENCE VALUE FOR INTELLIGENT KEY UNIT

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
30	L/W	Ignition power supply (ACC)	ACC	Power supply position is in ACC position	Battery voltage

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
42	P	PDU wake up signal	LOCK	At sleep (30 seconds or more after all doors are closed under the condition that the power supply position is in the LOCK position)	Battery voltage
			—	At wake-up (Open driver door)	

CONSULT-III DATA MONITOR STANDARD VALUE

Monitor item	Measuring condition	Reference value
ACC POS	Power supply position is in ACC position	ON
	Power supply position is in any position other than ACC	OFF

SELF-DIAGNOSTIC LOGIC

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2554	ACC POWER CIRCUIT	<ul style="list-style-type: none"> Though the changing control to ACC position by push-button ignition switch operation is performed normally, ACC position power supply to the Intelligent Key unit is not supplied The power supply position switching cannot be performed because the wake-up signal is not entered into PDU (Power Distribution Unit) during position changing control to ACC position by push-button ignition switch operation 	<ul style="list-style-type: none"> Fuse Harness and connector (Open or shorted in the circuit)

DIAGNOSTIC PROCEDURE

1. CHECK POWER SUPPLY CIRCUIT 1

With CONSULT-III

Check ("IGN ACC SW") in DATA MONITOR mode with CONSULT-III.

When ignition switch is turned to ACC
ACC ON SW : ON

Without CONSULT-III

Check voltage between Intelligent Key unit connector and ground.

Terminals		Ignition switch condition	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M32	30	ACC	Battery voltage
		OFF	0


OK or NG

OK >> ACC power circuit is OK. Check the self-diagnosis results using CONSULT-III again.

NG >> GO TO 2.

2. CHECK COMMUNICATION CIRCUIT

- Turn ignition switch OFF.
- Disconnect Intelligent Key unit and power distribution unit connector.
- Check continuity between Intelligent Key unit connector and power distribution unit connector.

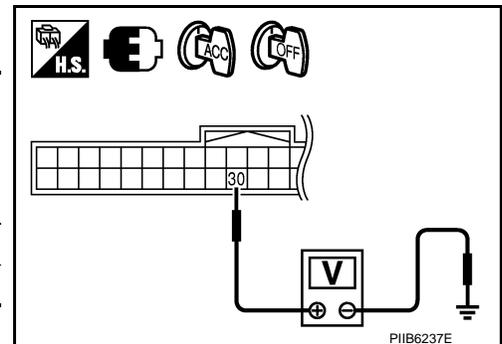

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	Power distribution unit connector	Terminal	
M33	42	M30	1	Yes

4. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M33	42		No

OK or NG

- OK >> GO TO 3.
 NG >> Repair or replace harness.



3. CHECK POWER SUPPLY CIRCUIT 2

1. Connect Intelligent Key unit and power distribution unit connector.
2. Check voltage between Intelligent Key unit connector and ground.

Terminals			Ignition switch condition	Voltage (V) (Approx.)
(+)		(-)		
Intelligent Key unit connector	Terminal			
M32	30	Ground	ACC	Battery voltage
			OFF	0

OK or NG

- OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.
- NG >> Check the following.
- 10A fuse [No.6, located in the fuse block (J/B)]
 - Harness for open or short between fuse and Intelligent Key unit.

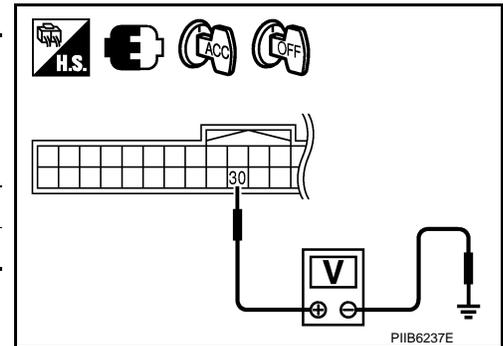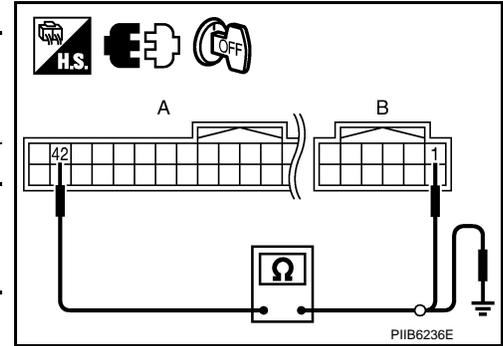

B2555 STOP LAMP CIRCUIT

INFOID:000000005349415

DIAGNOSIS DESCRIPTION

B2555 stop lamp system monitors the open circuit before the stop lamp switch (models without ICC system), which detects the brake pedal operation input to the Intelligent Key unit, or ICC brake relay (models with ICC system). If it detects the open circuit, it judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code)

TERMINALS AND REFERENCE VALUE FOR INTELLIGENT KEY UNIT INPUT

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
63	P	Stop lamp switch	—	Brake pedal depressed	Battery voltage
				Brake pedal released	Battery voltage
29	V/R	Stop lamp switch	—	Brake pedal depressed	Battery voltage
				Brake pedal released	0

CONSULT-III DATA MONITOR STANDARD VALUE

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Monitor item	Measuring condition	Reference value
STOP LAMP	Brake pedal is depressed	ON
	Brake pedal is released	OFF

SELF-DIAGNOSTIC LOGIC

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2555	STOP LAMP CIRCUIT	5V or less is detected at both the stop lamp switch signal input circuit that is input to Intelligent Key unit and the monitor input before stop lamp switch	<ul style="list-style-type: none"> 10A fuse Harness and connector (Open in the circuit between the units)

DIAGNOSTIC PROCEDURE

1. CHECK STOP LAMP SIGNAL

Ⓜ With CONSULT-III


Check ("STOP LAMP SW") in DATA MONITOR mode with CONSULT-III.

When depressing the break pedal
STOP LAMP SW : ON

⊗ Without CONSULT-III

Check voltage between Intelligent Key unit connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Intelligent Key unit connector	Terminal	
M32	63	Battery voltage

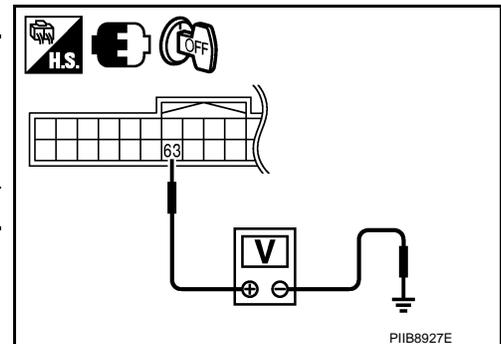

OK or NG

OK >> Check the condition of harness and connector. It is OK, check the self-diagnosis results using CONSULT-III again.

NG >> Check the following.

- 10A fuse [No.20, located in the fuse block (J/B)]
- Harness for open or short between fuse block and Intelligent Key unit.

B2556 ENG START SW

INFOID:000000005349416

DIAGNOSIS DESCRIPTION

When the push-button ignition switch input, which inputs to the Intelligent Key unit, continues for 100 seconds or more, B2556 push-button ignition switch judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code)

TERMINALS AND REFERENCE VALUE FOR INTELLIGENT KEY UNIT

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
39	BR/W	Push-button ignition switch	—	Push-button ignition switch is pressed	0
				Push-button ignition switch is released	Battery voltage

SELF-DIAGNOSTIC LOGIC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2556	ENG START SW	Input signal from push-button ignition switch to Intelligent Key unit continues for 100 seconds or more	<ul style="list-style-type: none"> Harness and connector (Open in the circuit between the units) Push-button ignition switch

DIAGNOSTIC PROCEDURE


1. CHECK HARNESS CONTINUITY

- Turn ignition switch OFF.
- Disconnect Intelligent Key unit and push-button ignition switch connector.
- Check continuity between Intelligent Key unit connector and push-button ignition switch connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Push-button ignition switch connector	Terminal	
M32	39	M27	4	Yes

- Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	39		No

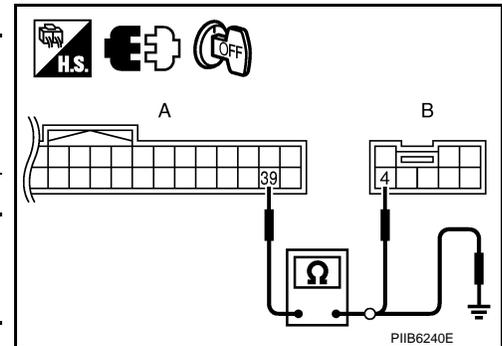

OK or NG

- OK >> GO TO 2.
 NG >> Repair or replace harness.


2. CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Terminal		Push-button ignition switch condition	Continuity
Push-button ignition switch			
1	4	Pushed	Yes
		Released	No

OK or NG

- OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.
 NG >> Replace push-button ignition switch.

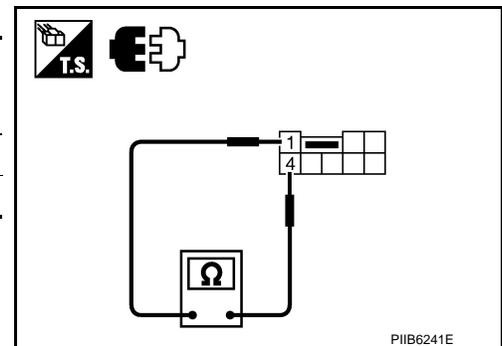

B2557 VEHICLE SPEED

INFOID:000000005349417


DIAGNOSIS DESCRIPTION

B2557 vehicle speed signal compares the vehicle speed input from the unified meter and A/C amp. and ABS via CAN communication and the vehicle signal (8 pulses) from the unified meter and A/C amp. If there is the difference between each vehicle speed input, it judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code).

TERMINALS AND REFERENCE VALUE FOR INTELLIGENT KEY UNIT

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

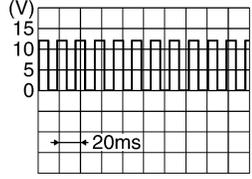Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
35	LG	Vehicle speed signal	ON	At speedometer operation (vehicle speed approx. 40 km/h)	 PKIA1935E


SELF-DIAGNOSTIC LOGIC


DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2557	VEHICLE SPEED	When comparing the vehicle speed signal, that is input to the Intelligent Key unit with power supply position ON and when one signal displays 10 km/h or more, the condition that another signal displays less than 5 km/h continues for 10 seconds or more	<ul style="list-style-type: none"> • Harness and connector (Open in the circuit between the units) • Unified meter and A/C amp.

DIAGNOSTIC PROCEDURE

1. CHECK VEHICLE SPEED SIGNAL

Check the signal between Intelligent Key unit connector and ground.

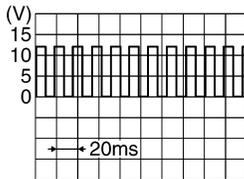Terminals		Condition	Signal (Reference value)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M32	35	Speed meter operated [When vehicle speed is Approx. 40 km/h (25MPH)]	 PKIA1935E

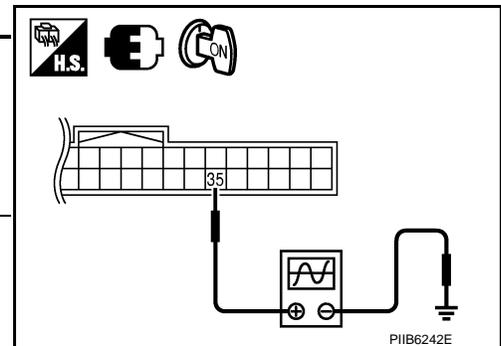

OK or NG

OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.

NG >> GO TO 2.

2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit and unified meter and A/C amp. Connector.
3. Check continuity between Intelligent Key unit connector and unified meter and A/C amp. Connector.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >


A		B		Continuity
Intelligent Key unit connector	Terminal	Unified meter and A/C amp. connector	Terminal	
M32	35	M64	28	Yes

4. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	35		No

OK or NG

- OK >>
- If the measured value is not waveform but 0V constant, the harness or connector between the using receiving the vehicle speed signal from unified meter and A/C amp. may be malfunctioning. Check these wirings.
 - If the measured value is not waveform but 5V or 12V constant, replace unified meter and A/C amp.
- NG >> Repair or replace harness.

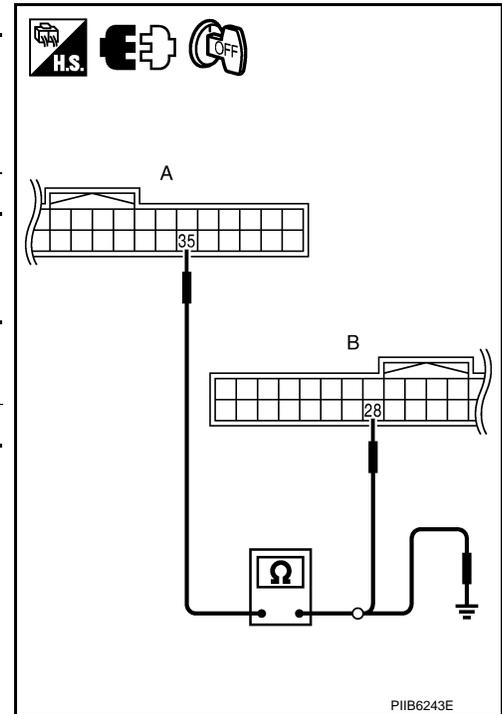

B2558 SHIFT POSITION

INFOID:000000005349418

DIAGNOSIS DESCRIPTION

B2558 shift position input system monitors the A/T selector lever position. If there is the difference between the input from A/T shift selector, the input from A/T assembly, and CAN communication input from A/T control unit, it judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code)

TERMINALS AND REFERENCE VALUE FOR INTELLIGENT KEY UNIT

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
27	V	A/T shift selector (Detention switch)	LOCK	A/T selector lever is in P position	0
			ON	A/T selector lever is in any position other than P	Battery voltage
28	SB	Starter relay	ON	A/T selector lever is in N or P position	Battery voltage
			—	Power supply position is in LOCK position or A/T selector lever is in any position other than N or P position	0
58	O	A/T shift selector (Detention switch)	LOCK	At sleep (30 seconds or more after all doors are closed under the condition that the power supply position is in the LOCK position)	0
			—	At wake-up (Open driver door)	Battery voltage

SELF-DIAGNOSTIC LOGIC

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >


DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2558	SHIFT POSITION	There is an input difference of A/T selector lever position input to Intelligent Key unit for 2 seconds or more	<ul style="list-style-type: none"> • Harness and connector (Open in the circuit between the units) • A/T shift selector (detente switch) • A/T assembly (control valve assembly)

DIAGNOSTIC PROCEDURE

1. CHECK A/T SHIFT SELECTOR SIGNAL

1. Turn ignition switch ON.
2. Check voltage between Intelligent Key unit connector and ground.

Terminals		A/T shift selector position	Voltage (V) (Approx.)
(+)	(-)		
Intelligent Key unit connector	Terminal		
M32	27	P	0
		Other than above	Battery voltage

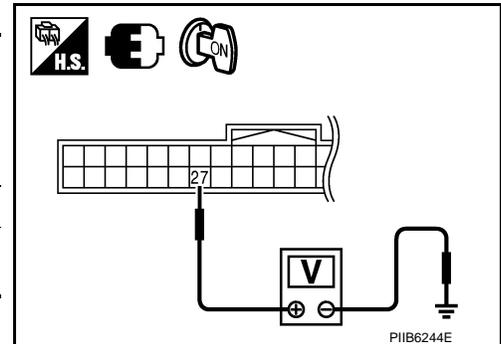


OK or NG

- OK >> GO TO 4.
 NG >> GO TO 2.

2. CHECK HARNESS CONTINUITY 1

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit and A/T shift selector connector.
3. Check continuity between Intelligent Key unit connector and A/T shift selector connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	A/T shift selector connector	Terminal	
M32	27	M133	10	Yes
M33	58		9	

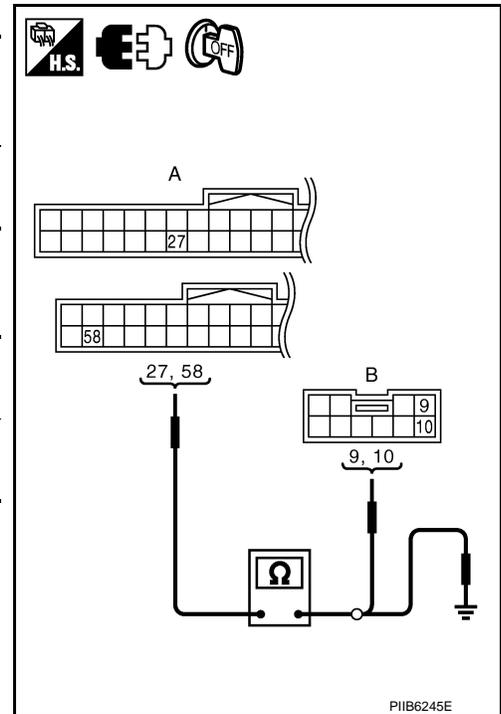

4. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	27		No
M33	58		

OK or NG

- OK >> GO TO 3.
 NG >> Repair or replace harness.

3. CHECK A/T SHIFT SELECTOR

Check A/T shift selector.


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal		A/T shift selector position	Continuity
A/T shift selector			
9	10	P	Yes
		Other than above	No

OK or NG

- OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.
- NG >> Replace A/T shift selector.

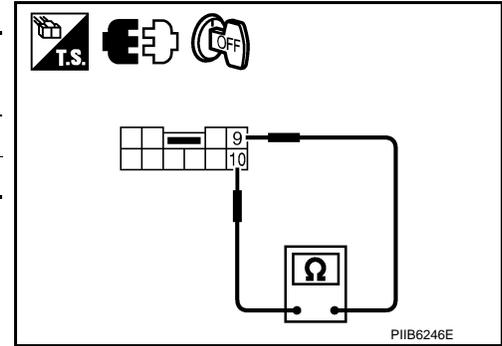


4. CHECK TCM SIGNAL

Check Intelligent Key unit connector and ground.

Terminals			A/T shift selector position	Voltage (V) (Approx.)
(+)		(-)		
Intelligent Key unit connector	Terminal			
M32	28	Ground	N or P	Battery voltage
			Other than above	0

OK or NG

- OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.
- NG >> GO TO 5.

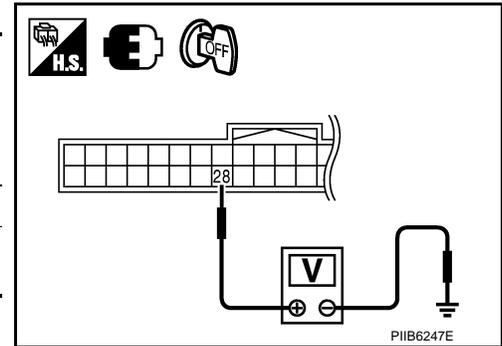

5. CHECK HARNESS CONTINUITY 2

- Turn ignition switch OFF.
- Disconnect Intelligent Key unit and TCM connector.
- Check continuity between Intelligent Key unit connector and TCM connector.


A		B		Continuity
Intelligent Key unit connector	Terminal	TCM connector	Terminal	
M32	28	F502	8	Yes

- Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	28		No

OK or NG

- OK >> Replace TCM.
- NG >> Repair or replace harness.

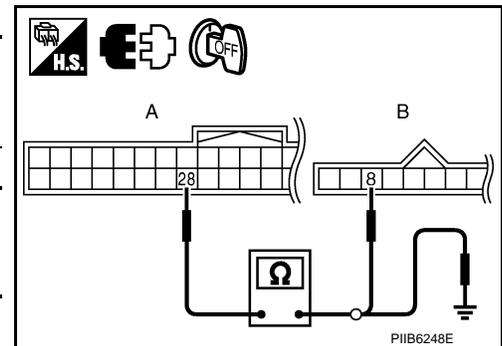

B2559 PDU

INFOID:000000005349419

DIAGNOSIS DESCRIPTION

B2559 PDU system that is Intelligent Key unit judges NG by self-detecting the PDU (Power Distribution Unit) internal malfunction.

If this DTC (Diagnostic Trouble Code) is displayed, replace the PDU.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

B2560 START POW SUP CIRC

INFOID:000000005349420

DIAGNOSIS DESCRIPTION

B2560 starter power supply system monitors the power supply condition to the starter motor relay and the starter motor relay condition in IPDM E/R. If it detects the starter motor relay ON condition in IPDM E/R without the "Engine start" request from the Intelligent Key unit, it judges that it is the malfunction and displays the DTC (Diagnostic Trouble Diagnosis).

TERMINALS AND REFERENCE VALUE

Intelligent Key Unit

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
3	Y	IPDM E/R current signal	START	At starter motor cranking	5
			LOCK	Any condition other than above	2

PDU (Power Distribution Unit)

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
13	R	Starter relay	START	At starter motor cranking	Battery voltage
			—	Any condition other than above	4

SELF-DIAGNOSTIC LOGIC

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2560	START POW SUP CIRC	It is detected that the power is supplied to the starter motor without the engine start request from the Intelligent Key unit	<ul style="list-style-type: none"> • Harness and connector (Open in the circuit between the units) • PDU • IPDM E/R

DIAGNOSTIC PROCEDURE


1. CHECK HARNESS CONTINUITY 1

1. Turn ignition switch OFF.
2. Disconnect Intelligent Key unit and power distribution unit connector.
3. Check continuity between Intelligent Key unit connector and power distribution unit connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Power distribution unit connector	Terminal	
M32	3	M30	11	Yes

4. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	3		No

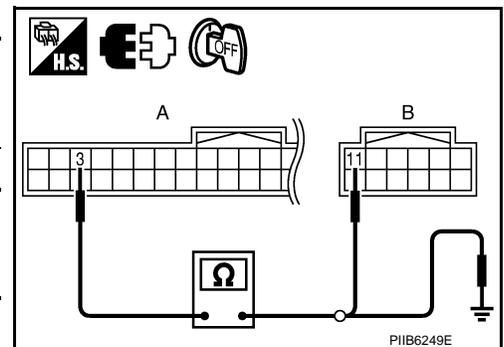

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

OK or NG

- OK >> GO TO 2.
- NG >> Repair or replace harness.


2.CHECK HARNESS CONTINUITY 2

1. Disconnect IPDM E/R connector.
2. Check continuity between power distribution unit connector and IPDM E/R connector.

A		B		Continuity
Power distribution unit connector	Terminal	IPDM E/R connector	Terminal	
M31	13	E4	4	Yes

3. Check continuity between power distribution unit connector and ground.

A		Ground	Continuity
Power distribution unit connector	Terminal		
M31	13		No

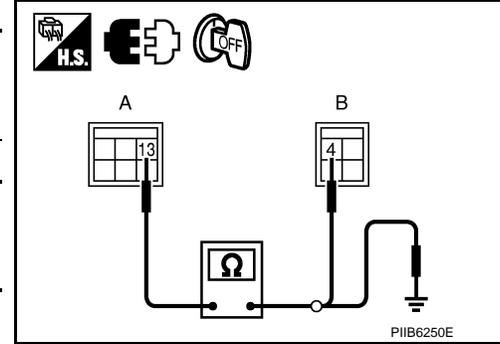

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair or replace harness.

B2562 LOW VOLTAGE

INFOID:000000005349421

DIAGNOSIS DESCRIPTION

B2562 battery low voltage monitors the battery voltage input to Intelligent Key unit. When the condition that the voltage is 8.8V or less is detected for 1.5 seconds or more, it judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code)

TERMINALS AND REFERENCE VALUE FOR INTELLIGENT KEY UNIT

Standard is the measured voltage between each terminal and ground

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
1	SB	Power source (fuse)	—	—	Battery voltage
41	Y	Power source (fuse)	—	—	Battery voltage
57	L	Power source (fuse)	—	—	Battery voltage

SELF-DIAGNOSTIC LOGIC

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2562	LOW VOLTAGE	It is detected for 1.5 seconds or more that the battery voltage that is input to the Intelligent Key unit is 8.8V or less	<ul style="list-style-type: none"> • Fuse • Harness and connector (Open in the circuit)

DIAGNOSTIC PROCEDURE

1.CHECK BATTERY

Measure the battery output voltage. Make sure that it is 9V or more.

OK or NG

- OK >> GO TO 2.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

NG >> Charge or replace the battery.


2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Check voltage between Intelligent Key unit connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
Intelligent Key unit connector	Terminal	Battery voltage
M32	1	
M33	41	
	57	

OK or NG

- OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.
- NG >> Check the following.
- 10A fuse [No.22, located in the fuse block (J/B)]
 - Harness for open or short between fuse block and Intelligent Key unit.

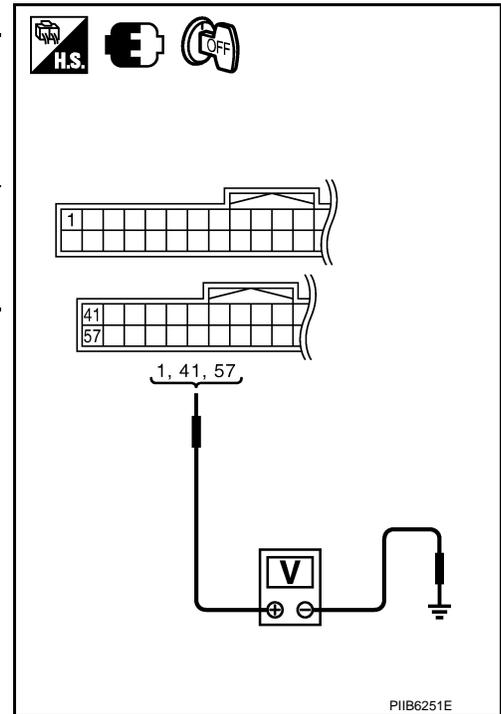

B2563 HI VOLTAGE

INFOID:000000005349422

DIAGNOSIS DESCRIPTION

B2563 battery high voltage monitors the battery voltage input to Intelligent Key unit. When the condition that the voltage is 18V or more is detected for 90 seconds or more, it judges that it is the malfunction and displays the DTC (Diagnostic Trouble Code)

TERMINAL AND REFERENCE VALUE FOR INTELLIGENT KEY UNIT

Standard is the measured voltage between each terminal and ground

Terminal No.	Wire color	Item	Condition		Voltage (V) (Approx.)
			Push-button ignition switch position	Operation or conditions	
1	SB	Power source (fuse)	—	—	Battery voltage
41	Y	Power source (fuse)	—	—	Battery voltage
57	L	Power source (fuse)	—	—	Battery voltage

SELF-DIAGNOSTIC LOGIC

DTC	Self-diagnosis name	DTC detecting condition	Possible causes
B2563	HI VOLTAGE	It is detected for 90 seconds or more that the battery voltage that is input to the Intelligent Key unit is 18V or more	Alternator

DIAGNOSTIC PROCEDURE

1. CHECK POWER SUPPLY CIRCUIT

1. Start engine.
2. Check voltage between Intelligent Key unit connector and ground.


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminals		(-)	Voltage (V) (Approx.)
(+)	Terminal		
Intelligent Key unit connector			
M32	1	Ground	Battery voltage
M33	41		
	57		

OK or NG

- OK >> Check the condition of harness and connector. If it is OK, check the self-diagnosis results using CONSULT-III again.
- NG >> Check alternator. Refer to

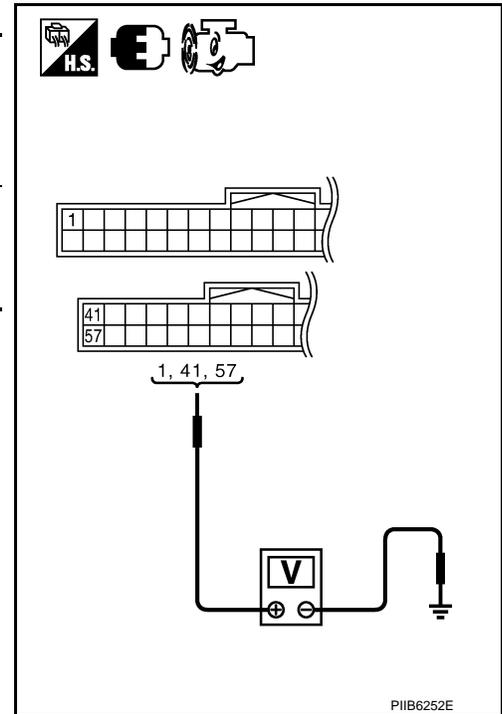

B2590 DISCORD BCM-I-KEY

INFOID:000000005349423

Intelligent Key unit performs the ID verification with BCM that allows the engine to .BCM starts the engine if the ID is OK and prevents the engine from starting if the ID is not registered.

1. PERFORM INITIALIZATION

Perform initialization with CONSULT-III. Re-register all mechanical keys.

For initialization and registration of mechanical key. Refer to "CONSULT-III Operation Manual NATS-IVIS/ NVIS".

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ID was unregistered.
- NO >> BCM is malfunctioning.
- Replace BCM
 - Perform initialization again

Trouble Diagnosis Symptom Chart 1

INFOID:000000005349424

Power supply switching operation cannot be operated with all Intelligent Keys.

CAUTION:

- Follow Trouble Diagnosis Flowchart referring to "Diagnosis Procedure". Determine malfunctioning condition before performing this diagnosis.
- Make sure that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis.
- Check systems shown in the "Diagnosis/service procedure" column in this order.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Engine start function is ON when setting on CONSULT-III.
- Use Intelligent Key with registered Intelligent Key ID.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the passenger room.

Diagnosis/service procedure	Reference page
1. Check push button ignition switch	BL-165
2. Check inside key antenna	BL-166
3. Check remote keyless entry receiver	BL-168
4. Replace Intelligent Key unit.	BL-113

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Trouble Diagnosis Symptom Chart 2

INFOID:000000005349425

When performing the push-button ignition switch operation when the Intelligent Key is carried, there is a time difference in the power supply position switching (the power supply changes in approximately 3 seconds)

CAUTION:

- Follow Trouble Diagnosis Flowchart referring to “Diagnosis Procedure”. Determine malfunctioning condition before performing this diagnosis.
- Make sure that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis.
- Check systems shown in the “Diagnosis/service procedure” column in this order.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Another Intelligent Key or foreign materials are not inserted in the key slot.

NOTE:

If another Intelligent Key or foreign materials are inserted at push-button ignition switch operation, perform the immobilizer ID verification first. When the immobilizer ID verification cannot be performed, the system switches to the Intelligent Key ID verification. Therefore, there is the time difference in the push-button ignition switch operation.

Diagnosis/service procedure	Reference page
1. Check key switch built in key slot	BL-169
2. Replace Intelligent Key unit.	BL-113

Trouble Diagnosis Symptom Chart 3

INFOID:000000005349426

When performing the push-button ignition switch operation when the Intelligent Key is inserted into the key slot, there is the time difference in the power supply position switching (the power supply changes in approximately 3 seconds)

CAUTION:

- Follow Trouble Diagnosis Flowchart referring to “Diagnosis Procedure”. Determine malfunctioning condition before performing this diagnosis.
- Make sure that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis.
- Check systems shown in the “Diagnosis/service procedure” column in this order.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- A device emitting electromagnetic signals such as a portable telephone or a radio is not used around the key slot.
- The Intelligent Key is inserted into the key slot until it clicks.

NOTE:

If another Intelligent Key is inserted at push-button ignition switch operation, perform the immobilizer ID verification first. When the immobilizer ID verification cannot be performed, the system switches to the Intelligent Key ID verification. Therefore, there is the time difference in the push-button ignition switch operation.

Diagnosis/service procedure	Reference page
1. Check NATS antenna amp. built in key slot	BL-170
2. Replace Intelligent Key unit.	BL-113

Check CAN Communication System

INFOID:000000005349427

1. CHECK SELF-DIAGNOSTIC RESULTS

CAUTION:

If CONSULT-III is used with no connection of CONSULT-III CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which performs CAN communication.

With CONSULT-III

- Connect CONSULT-III, and turn ignition switch ON.
- Touch “INTELLIGENT KEY” on “SELECT SYSTEM” screen.
- Touch “SELF-DIAG RESULTS” on “SELECT DIAG MODE” screen.
- Check display content in self-diagnostic results.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

CONSULT-III display item	DTC code
NO DTC IS DETECTED	—
CAN COMM CIRCUIT	U1000
CONROL UNIT (CAN)	U1010

OK or NG

NO DTC IS DETECTED>> INSPECTION END

CAN COMM CIRCUIT [U1000]>> After printing "SELF-DIAGNOSIS RESULTS", go to "CAN SYSTEM",

Refer to [LAN-10. "Precautions for Trouble Diagnosis"](#)

CONTROL UNIT(CAN) [U1010]>> Replace Intelligent Key unit.


Check Push-Button Ignition Switch

INFOID:000000005349428

1.CHECK POWER SUPPLYL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check voltage between push-button ignition switch connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
push-button ignition switch connector	Terminal	
M27	4	Battery voltage

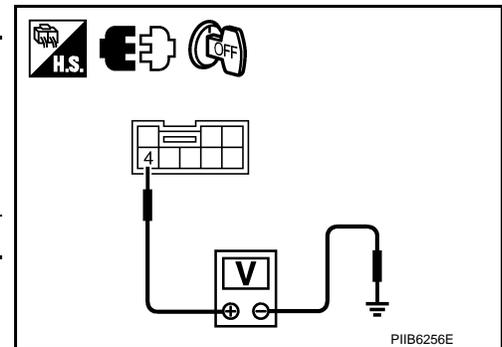

OK or NG


OK >> GO TO 3.

NG >> GO TO 2.

2.CHECK HARNESS CONTINUITY

1. Disconnect Intelligent Key unit connector.
2. Check continuity between Intelligent Key unit connector and push-button ignition switch connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	push-button ignition switch connector	Terminal	
M32	39	M27	4	Yes

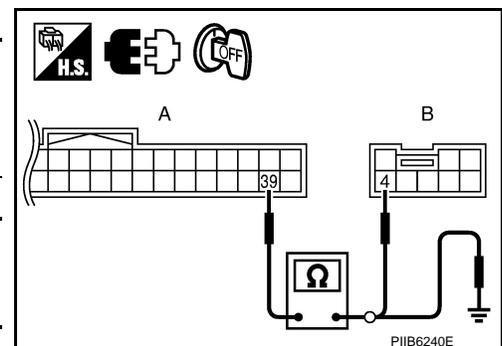

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	39		No

OK or NG

OK >> GO TO 3.

NG >> Repair or replace harness.

3.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.


INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminal		Push-button ignition switch condition	Continuity
Push-button ignition switch			
1	4	Pushed	Yes
		Released	No

OK or NG

- OK >> GO TO 4.
 NG >> Replace push-button ignition switch.

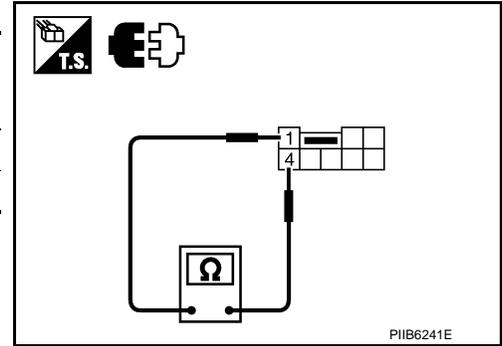


4.CHECK GROUND CIRCUIT

Check push-button ignition switch connector.

Push-button ignition switch connector	Terminal	Ground	Continuity
M27	1		Yes

OK or NG

- OK >> Check the condition of harness and connector.
 NG >> Repair or replace harness.

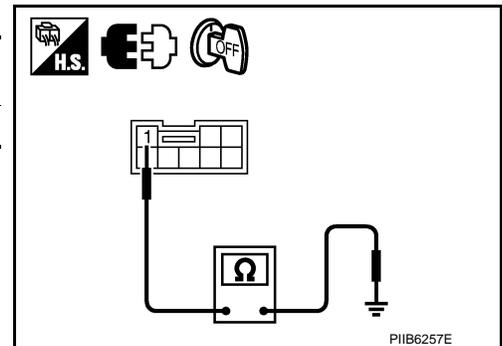

Check Inside Key Antenna

1.CHECK INSIDE KEY ANTENNA FUNCTION

④ With CONSULT-III

1. Check the operation with ("ANTENNA") in the ACTIVE TEST.
2. Touch "ROOM ANT1" "ROOM ANT2" "ROOM ANT3" "LUG ANT" on screen.
3. Carry the Intelligent Key into the antenna detection area.

Test item	Corresponding antenna
ROOM ANT1	Inside key antenna instrument center
ROOM ANT2	Inside key antenna console
ROOM ANT3	Inside key antenna rear seat
LUG ANT1	Inside key antenna trunk room

Do the hazard lamps flash?

- Yes >> Inside key antenna is OK.
 No >> GO TO 2.

2.CHECK INSIDE KEY ANTENNA INPUT SIGNAL 1

1. Turn ignition switch OFF.
2. Check signal between Intelligent Key unit connector and ground with oscilloscope.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

Terminals		Condition	Signal (Reference value.)
(+)			
Intelligent Key unit connector	Terminal		
M33	Instrument center	Ground	
	Console		
	Rear seat		
	Trunk room		

OK or NG

- OK >> Check the condition of harness and connector.
- NG >> GO TO 2.

3. CHECK INSIDE KEY ANTENNA CIRCUIT

1. Disconnect Intelligent Key unit and inside key antenna connector.
2. Check continuity between Intelligent Key unit connector and inside key antenna connector.

A		B		Continuity	
Intelligent Key unit connector	Terminal	Inside key antenna connector	Terminal		
M33	47	M83	Instrument center	1	Yes
	48		2		
	49	M142	Console	1	
	50		2		
	51	B45	Rear seat	1	
	52		2		
	53	B473	Trunk room	1	
	54		2		

3. Check continuity between Intelligent Key unit connector and ground.

A		Continuity		
Intelligent Key unit connector	Terminal			
M33	Instrument center	47	Ground	No
		48		
	Console	49		
		50		
	Rear seat	51		
		52		
	Trunk room	53		
		54		

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace harness between Intelligent Key unit and inside key antenna.


4. CHECK INSIDE KEY ANTENNA INPUT SIGNAL 2


1. Replace inside key antenna. (New antenna or other antenna)

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

2. Connect Intelligent Key unit and inside key antenna connector.
3. Check signal between Intelligent Key unit connector and ground with oscilloscope.

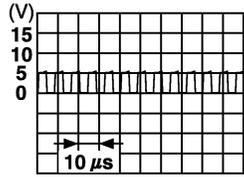Terminals		(-)	Condition	Signal (Reference value.)
(+) Intelligent Key unit connector				
Intelligent Key unit connector	Terminal			
M33	Instrument center	47	Ground	Any door is open → close 
	Console	49		
	Rear seat	51		
	Trunk room	53		

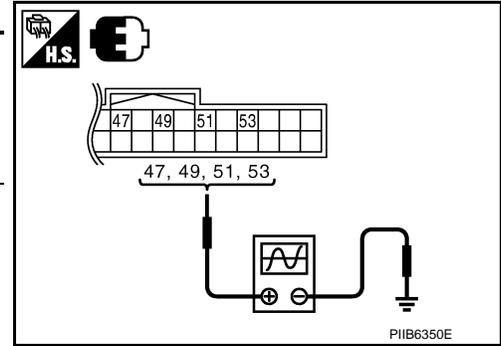

OK or NG


- OK >> Replace malfunction inside key antenna.
- NG >> Replace Intelligent Key unit.


Check Remote Keyless Entry Receiver

INFOID:000000005349430

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect remote keyless entry receiver connector.
3. Check voltage between Intelligent Key unit connector and ground.

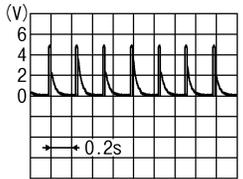Terminals		(-)	Condition	Voltage (V) (Approx.)
(+) Intelligent Key unit connector				
Intelligent Key unit connector	Terminal			
M32	4	Ground	Carry the Intelligent Key within the inside key antenna detection area, and then push the push-button ignition switch.	0
			Other than the above.	

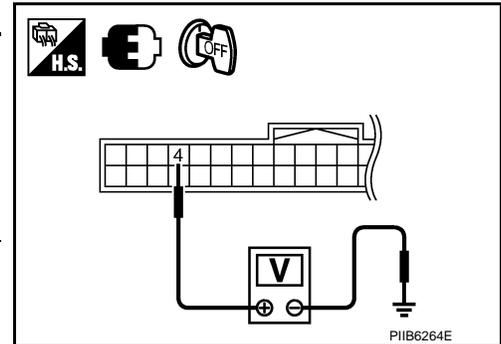

OK or NG

- OK >> GO TO 2.
- NG >> Replace Intelligent Key unit.

2. CHECK HARNESS CONTINUITY

1. Disconnect Intelligent Key unit connector.
2. Check continuity between Intelligent Key unit connector and remote keyless entry receiver connector.

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

A		B		Continuity
Intelligent Key unit connector	Terminal	Remote keyless entry receiver connector	Terminal	
M32	4	M89	3	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	4		No

OK or NG

OK >> GO TO 3.

NG >> Repair or replace harness between Intelligent Key unit and remote keyless entry receiver.

3.CHECK REMOTE KEYLESS ENTRY RECEIVER

1. Replace remote keyless entry receiver.
2. Connect Intelligent Key unit and remote keyless entry receiver connector. Check function the Intelligent Key is carried into the inside key antenna detection area and the ignition switch is turned to START.

OK or NG

OK >> Remote keyless entry receiver is malfunction.

NG >> Remote keyless entry receiver is OK. If its malfunction is the same malfunction that occurred before performing the Remote Keyless Entry Receiver Circuit Inspection, it is not a malfunction in the remote keyless entry receiver circuit.

Check Key Switch Built in Key Slot

INFOID:000000005349431

1.CHECK FUNCTION

When the driver door is opened while inserting the Intelligent Key into the key slot, make sure that key reminder warning functions properly.

Key inserted : **Sound**
Key removed : **No sound**

OK or NG

OK >> GO TO 5.

NG >> GO TO 2.

2.CHECK POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect key slot connector.
3. Check voltage between key slot connector and ground.



Terminals		Voltage (V) (Approx.)
(+)	(-)	
Key slot connector	Terminal	
M14	1	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check key slot power supply circuit for open or short.

3.CHECK HARNESS CONTINUITY 1

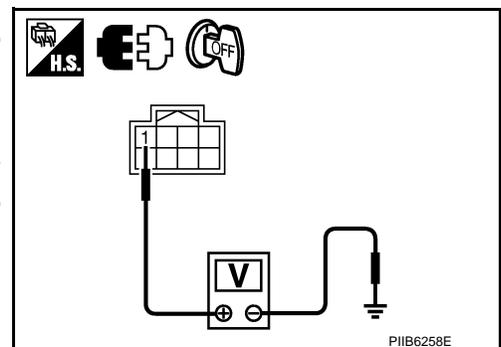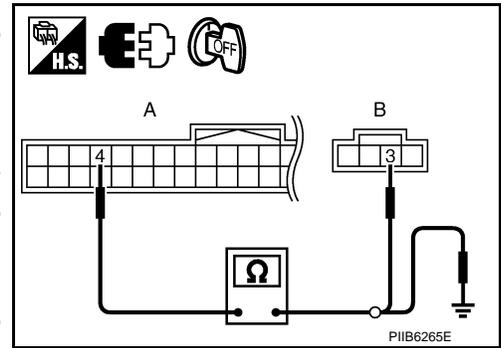

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

< SERVICE INFORMATION >

1. Disconnect Intelligent Key unit connector.
2. Check continuity between Intelligent Key unit connector and key slot connector.

A		B		Continuity
Intelligent Key unit connector	Terminal	Key slot connector	Terminal	
M32	19	M14	2	Yes

3. Check continuity between Intelligent Key unit connector and ground.

A		Ground	Continuity
Intelligent Key unit connector	Terminal		
M32	19		No

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace harness.

4.CHECK KEY SLOT

Check key slot.

Terminal		Condition	Continuity
Key slot			
1	2	Key slot inserted	Yes
		Key slot removed	No

OK or NG

- OK >> Check the condition of harness and connector.
 NG >> Replace key slot.

5.CHECK HARNESS CONTINUITY 2

1. Disconnect BCM connector.
2. Check continuity between BCM connector and key slot connector.

A		B		Continuity
BCM connector	Terminal	Key slot connector	Terminal	
M1	37	M14	2	Yes

3. Check continuity between BCM connector and ground.

A		Ground	Continuity
BCM connector	Terminal		
M1	37		No

OK or NG

- OK >> Replace BCM. Refer to "C/U INITIALIZATION", and then perform the registration again after replacing BCM.
 NG >> Repair or replace harness.




Check NATS Antenna Amp. Built in Key Slot

INFOID:000000005349432

For the circuit information of this diagnosis, refer to Engine Immobilizer System Circuit Diagram.

1.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.

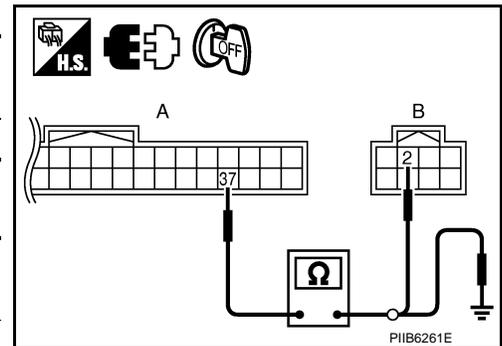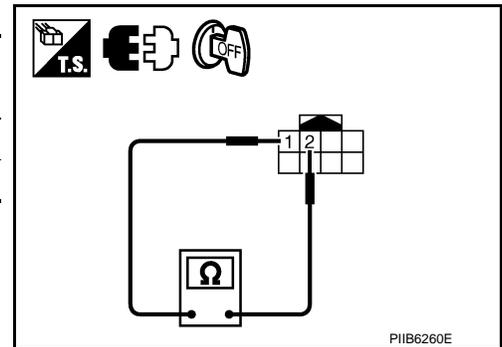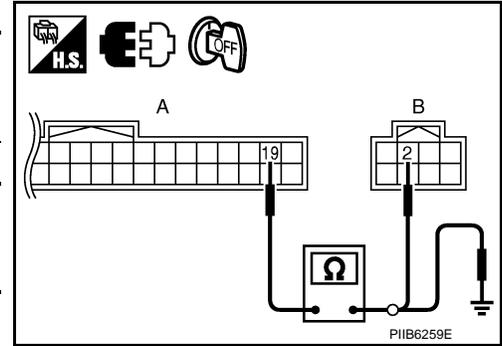

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION


< SERVICE INFORMATION >

2. Disconnect key slot connector.
3. Check voltage between key slot connector and ground.

Terminals		Voltage (V) (Approx.)
(+)		
Key slot connector	Terminal	(-)
M14	1	Ground
		Battery voltage

OK or NG

- OK >> GO TO 2.
 NG >> Check key slot power supply circuit for open or short.

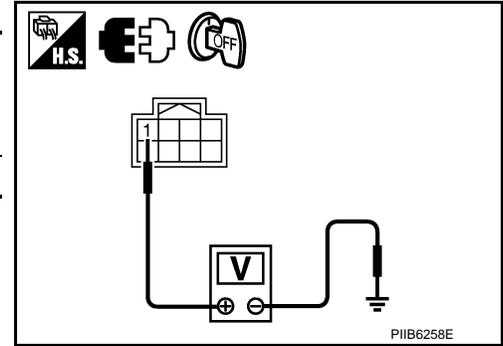


2.CHECK GROUND CIRCUIT

Check continuity between key slot connector and ground.

Key slot connector	Terminal	Ground	Continuity
M14	8		Yes

OK or NG

- OK >> GO TO 3.
 NG >> Repair or replace harness.

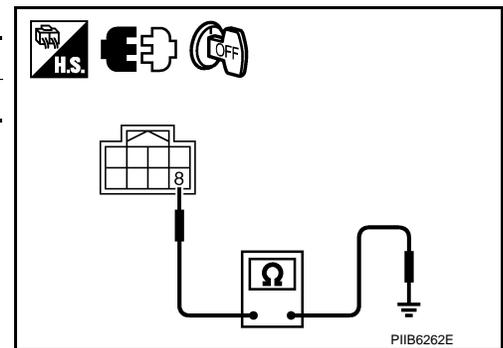


3.CHECK KEY SLOT SIGNAL

1. Connect key slot connector.
2. Check voltage between key slot connector and ground.

Terminals		Condition	Voltage (V) (Approx.)
(+)			
Key slot connector	Terminal	(-)	
M14	6	Ground	Check the voltage just after the Intelligent Key is inserted into the key slot and the ignition switch is turned to START.
	7		
			The pointer of the analog tester fluctuates.

OK or NG

- OK >> Check the condition of harness and connector.
 NG >> Repair or replace harness between BCM and key slot.

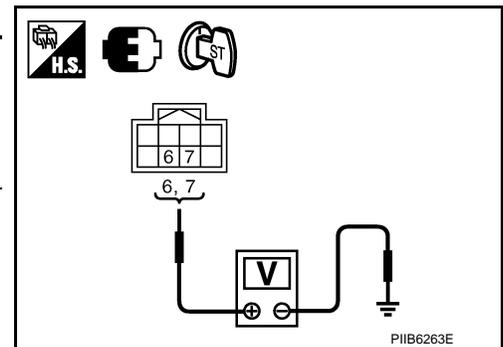

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P


DOOR

< SERVICE INFORMATION >

DOOR

Fitting Adjustment

INFOID:000000005349433

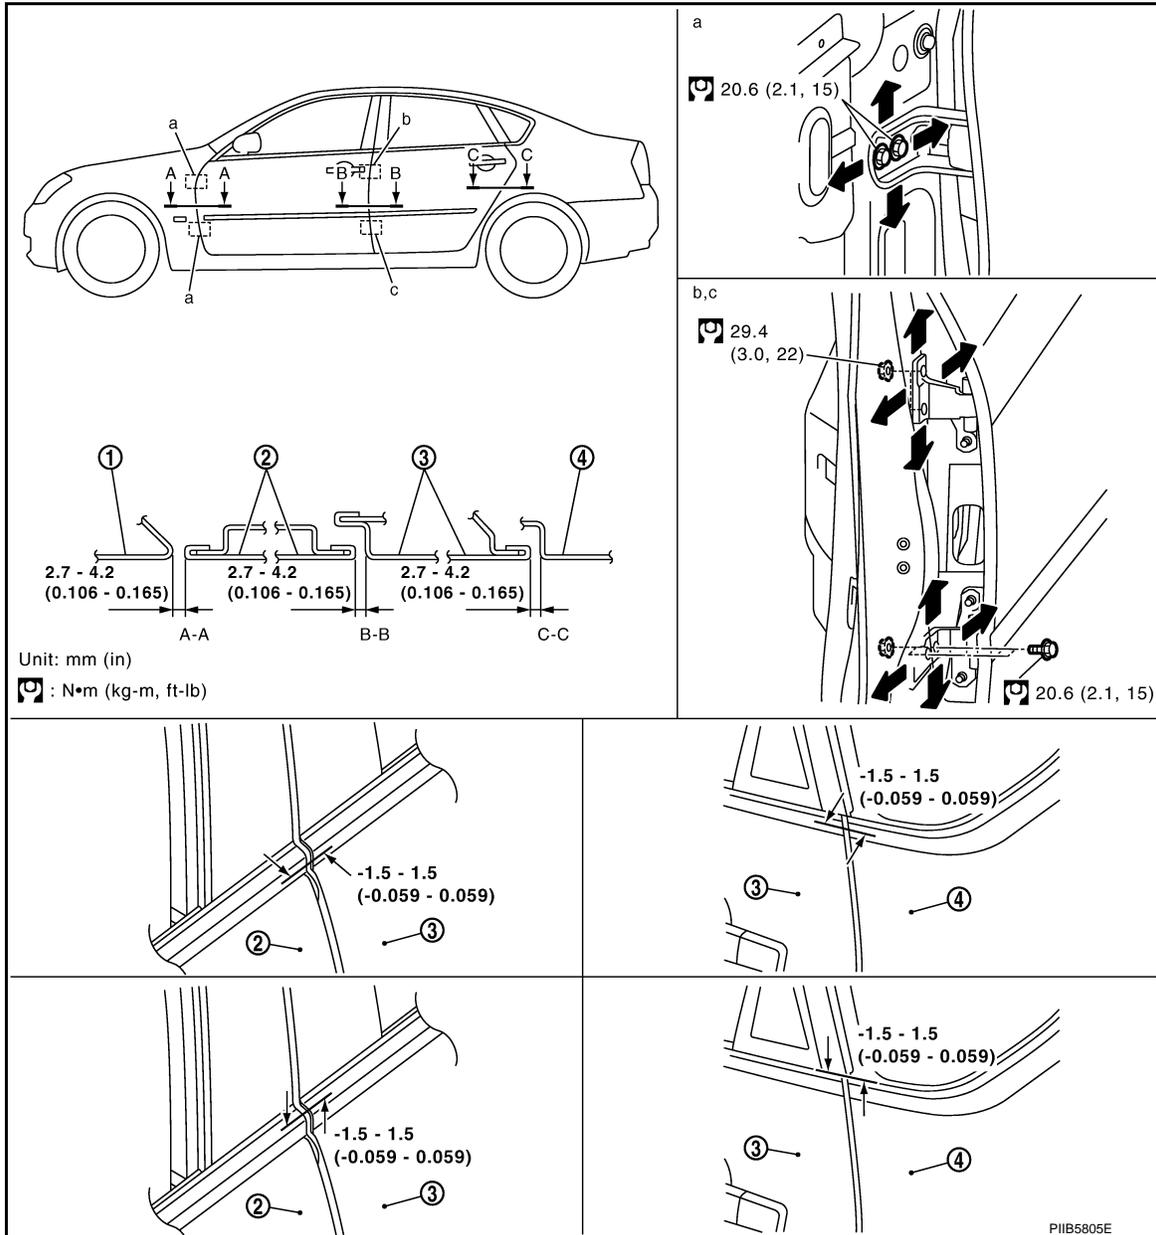

- 1. Front fender
- 4. Rear fender

- 2. Front door outer

- 3. Rear door outer

FRONT DOOR

Longitudinal Clearance and Surface Height Adjustment At Front End
Loosen the hinge mounting bolts. Raise the front door at rear end to adjust.

REAR DOOR

Longitudinal Clearance and Surface Height Adjustment At Front End

1. Remove the center pillar upper garnish and center pillar lower garnish. Refer to [EI-48, "Component Parts Location"](#).
2. Accessing from inside the vehicle, loosen the mounting nuts. Open the rear door, and raise the rear door at rear end to adjust.


DOOR

< SERVICE INFORMATION >

STRIKER ADJUSTMENT

Adjust the striker so that it becomes parallel with the lock insertion direction.

 :16.7 N·m (1.7 kg·m, 12.4 ft·lb)

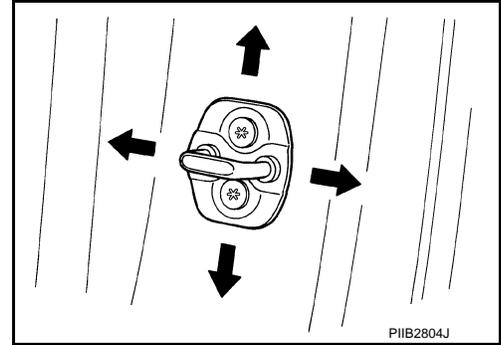

Removal and Installation of Front Door


INFOID:000000005349434

CAUTION:


- When removing and installing the front door assembly, support the door with a jack and cloth to protect the door and body.
- When removing and installing front door assembly, be sure to carry out the fitting adjustment. Refer to [BL-172, "Fitting Adjustment"](#).
- After installing, apply touch-up paint (the body color) onto the head of the hinge mounting nuts.
- Check the hinge rotating part for poor lubrication. If necessary, apply "body grease".
- Operate with two workers, because of its heavy weight.
- Check rear door open/close operation after installation.

REMOVAL

1. Pull the lever and disconnect the door harness connector while removing tabs of door harness connector.

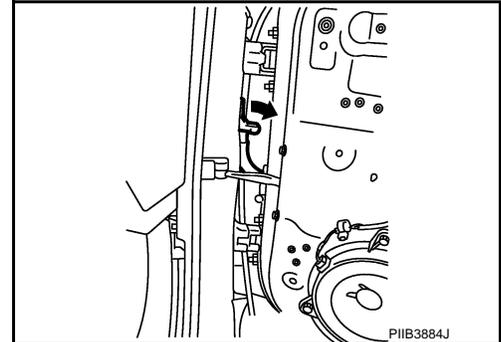


2. Remove the mounting bolts of the check link on the vehicle.

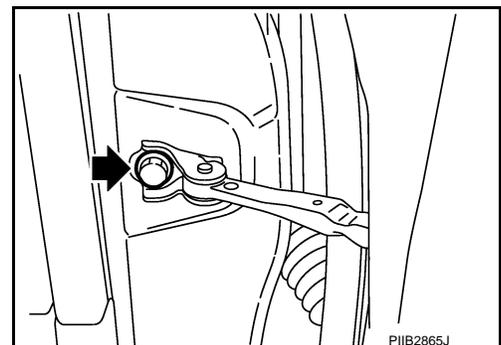

DOOR

< SERVICE INFORMATION >

3. Remove the door-side hinge mounting nuts, then remove the door assembly.

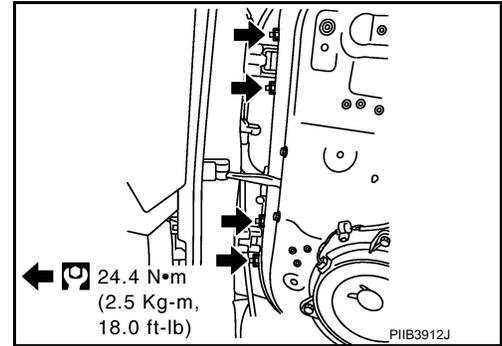

INSTALLATION

Install in the reverse order of removal.

Removal and Installation of Rear Door

INFOID:000000005349435

CAUTION:


- When removing and installing the rear door assembly, support the door with a jack and cloth to protect the door and body.
- When removing and installing rear door assembly, be sure to carry out the fitting adjustment. Refer to [BL-172, "Fitting Adjustment"](#).
- Check the hinge rotating part for poor lubrication. If necessary, apply "body grease".
- After installing, apply touch-up paint (the body color) onto the head of the hinge mounting nuts.
- Operate with two workers, because of its heavy weight.
- Check rear door open/close operation after installation.

REMOVAL

1. Pull out grommet and disconnect rear door harness connector.




2. Remove the mounting bolts of the check link on the vehicle.

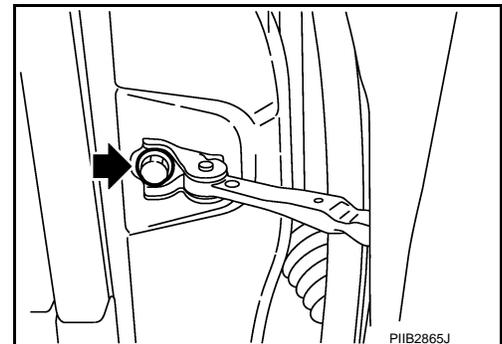

DOOR

< SERVICE INFORMATION >

3. Remove the door-side hinge mounting nuts, and remove the door assembly.

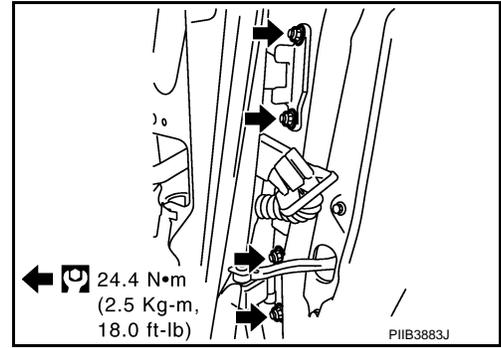


INSTALLATION

Install in the reverse order of removal.

Door Weatherstrip

INFOID:000000005349436

FRONT DOOR

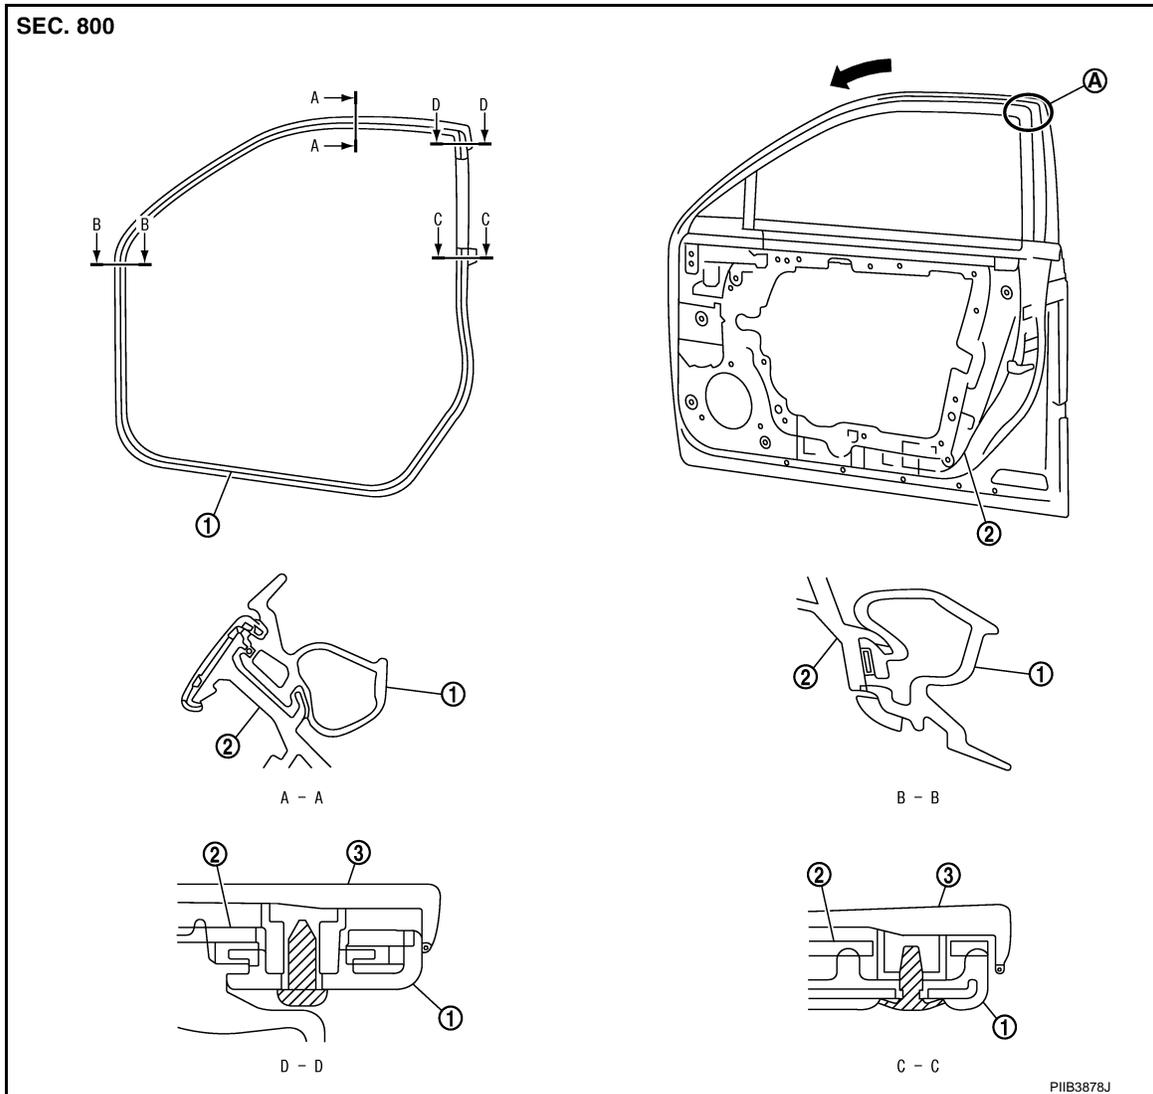

1. Door weatherstrip

2. Front door

3. Door sash molding

REMOVAL

1. Remove the mounting bolts of the check link on the vehicle. Refer to [BL-173, "Removal and Installation of Front Door"](#) or [BL-174, "Removal and Installation of Rear Door"](#).

DOOR

< SERVICE INFORMATION >

2. Remove the weatherstrip clips and remove weatherstrip.

CAUTION:


After removal, do not pull strongly on the weatherstrip.

INSTALLATION

Install in the reverse order of removal.

Install the door weatherstrip (A) and along the arrow direction.

REAR DOOR

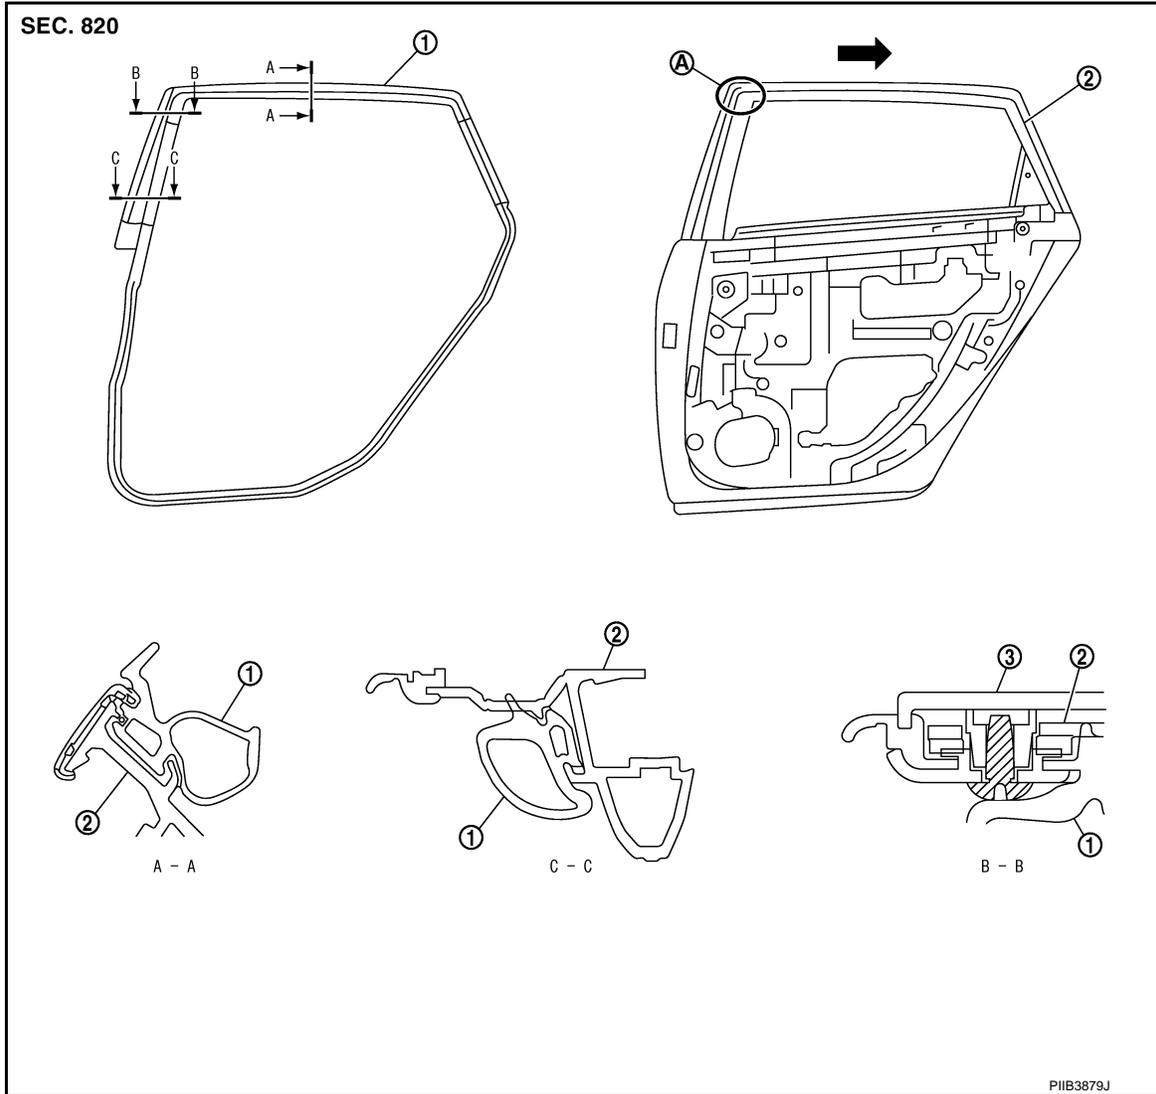

1. Door weatherstrip

2. Rear door

3. Door sash molding

REMOVAL

1. Remove the mounting bolts of the check link on the vehicle. Refer to [BL-173, "Removal and Installation of Front Door"](#) or [BL-174, "Removal and Installation of Rear Door"](#).
2. Remove the weatherstrip clips and remove weatherstrip.

CAUTION:

After removal, do not pull strongly on the weatherstrip.

INSTALLATION

Install in the reverse order of removal.

Install the door weatherstrip (A) and along the arrow direction.


FRONT DOOR LOCK

< SERVICE INFORMATION >

FRONT DOOR LOCK

Component Structure

INFOID:000000005349437

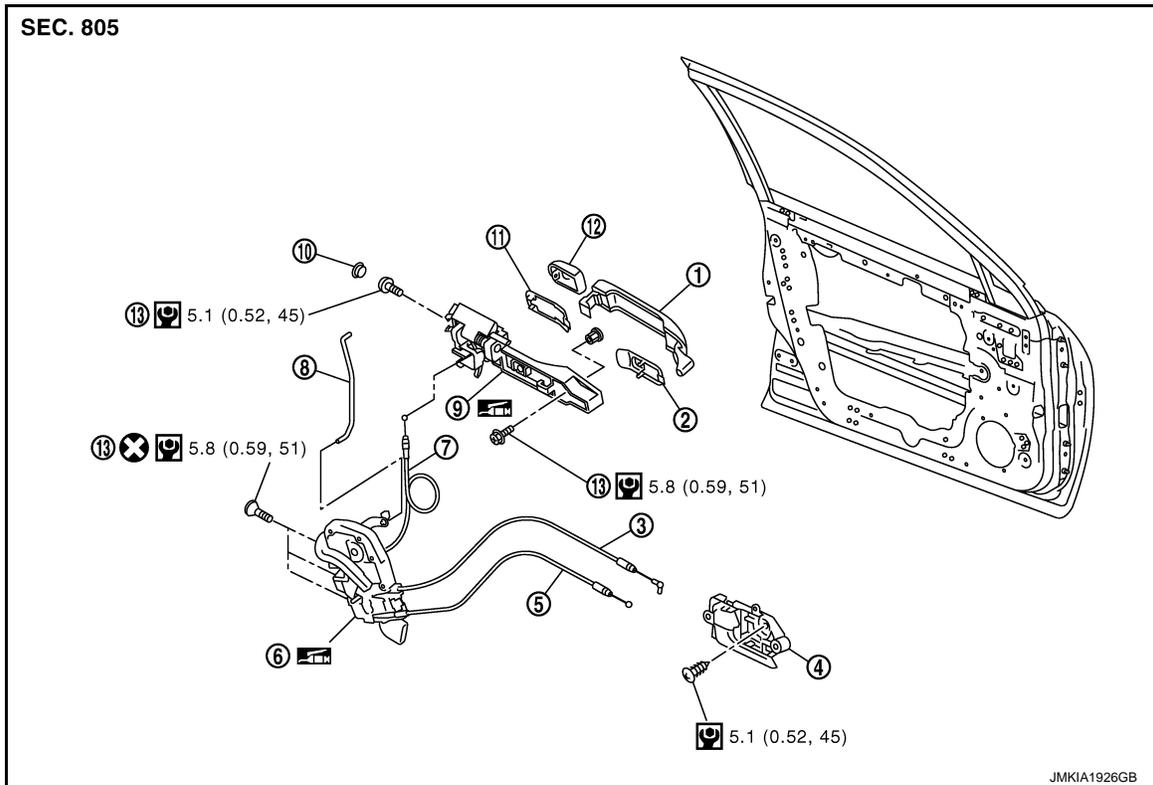

- | | | |
|-------------------------|--|--|
| 1. Outside handle | 2. Front gasket | 3. Lock knob cable |
| 4. Inside handle | 5. Inside handle knob cable | 6. Door lock assembly |
| 7. Outside handle cable | 8. Key cylinder rod (Driver side only) | 9. Outside handle bracket |
| 10. Grommet | 11. Rear gasket | 12. Door key cylinder assembly (Driver side)
Outside handle escutcheon (Passenger side) |
| 13. TORX bolt | | |


Refer to [GI-9, "Component"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005349438

REMOVAL

1. Remove the front door finisher. Refer to [EI-45, "Component Parts Location"](#).
2. Disconnect the inside handle knob cable and lock knob cable from the back side of the front door finisher.

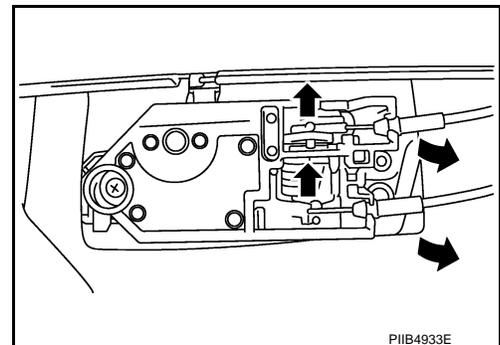

3. Remove the front door window and front door module assembly. Refer to [GW-54](#).


FRONT DOOR LOCK

< SERVICE INFORMATION >


4. Remove door side grommet, and remove door key cylinder assembly (driver side) and outside handle escutcheon (passenger side) bolts from grommet hole.

CAUTION:


Do not forcibly remove the TORX bolt.

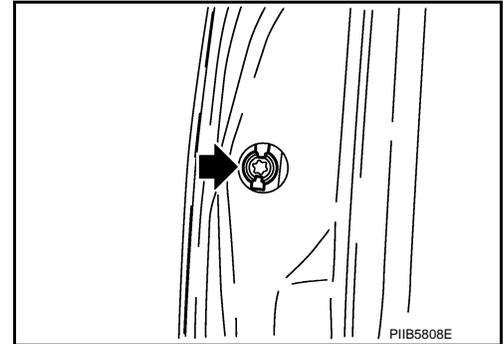


5. Disconnect door antenna and door request switch connector and remove harness clamp. (Models with intelligent Key system)

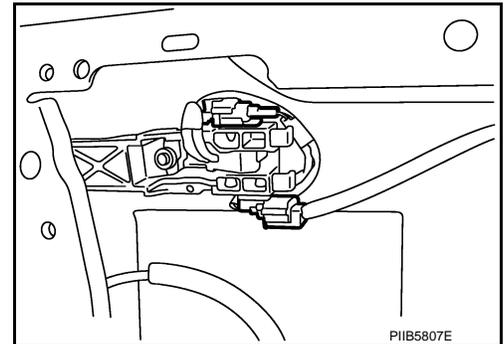

6. Reach to separate the key cylinder rod connection (on the handle).
7. Disconnect door key cylinder switch harness connector.
8. While pulling the outside handle, remove door key cylinder assembly.

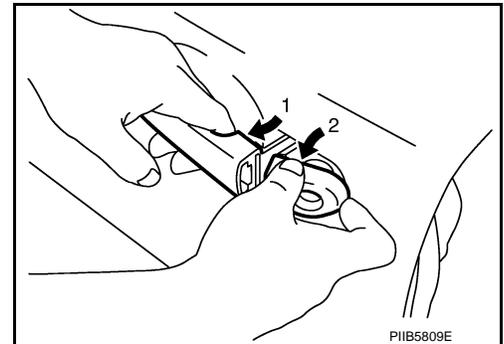


9. Disconnect front door request switch harness connector (with Intelligent Key system).
10. Slide toward rear of vehicle, and pull forward to remove the outside handle.

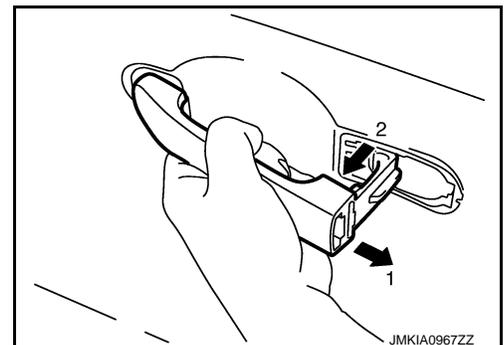


FRONT DOOR LOCK

< SERVICE INFORMATION >


11. Remove the front gasket and rear gasket.

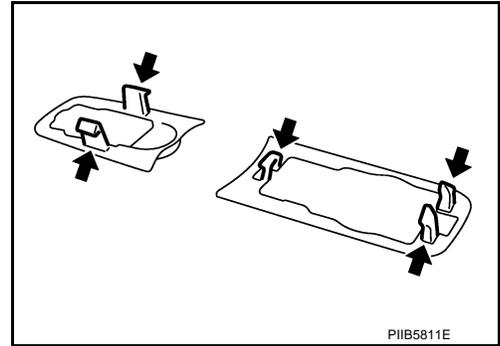


12. Remove the TORX bolts, remove the door lock assembly.

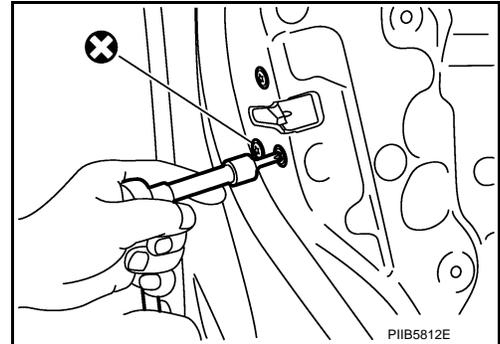

13. Remove the TORX bolt of the outside handle bracket.

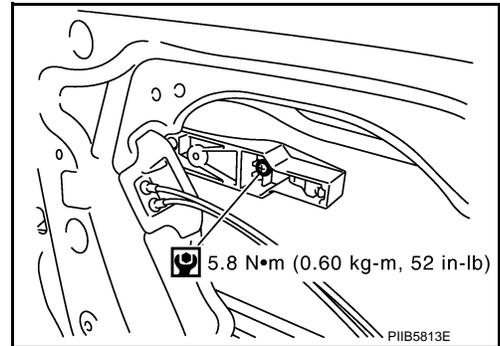

14. While pulling outside handle bracket, slide toward rear of vehicle to remove outside handle bracket.

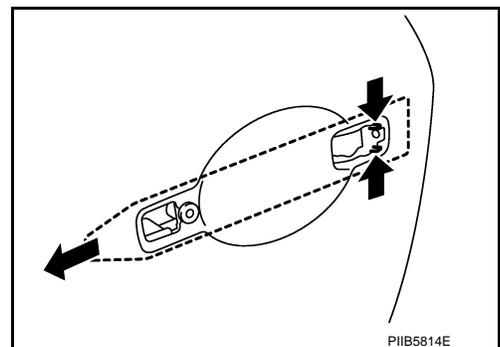


15. Disconnect the door lock actuator connector and remove the door lock assembly.

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

FRONT DOOR LOCK

< SERVICE INFORMATION >

16. Reach to separate the outside handle cable connection.

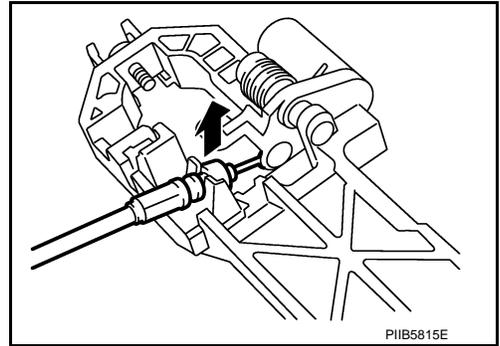

INSTALLATION

Install in the reverse order of removal.

CAUTION:

To install each rod, be sure to rotate the rod holder until a click is felt.


REAR DOOR LOCK

< SERVICE INFORMATION >

REAR DOOR LOCK

Component Structure

INFOID:000000005349439

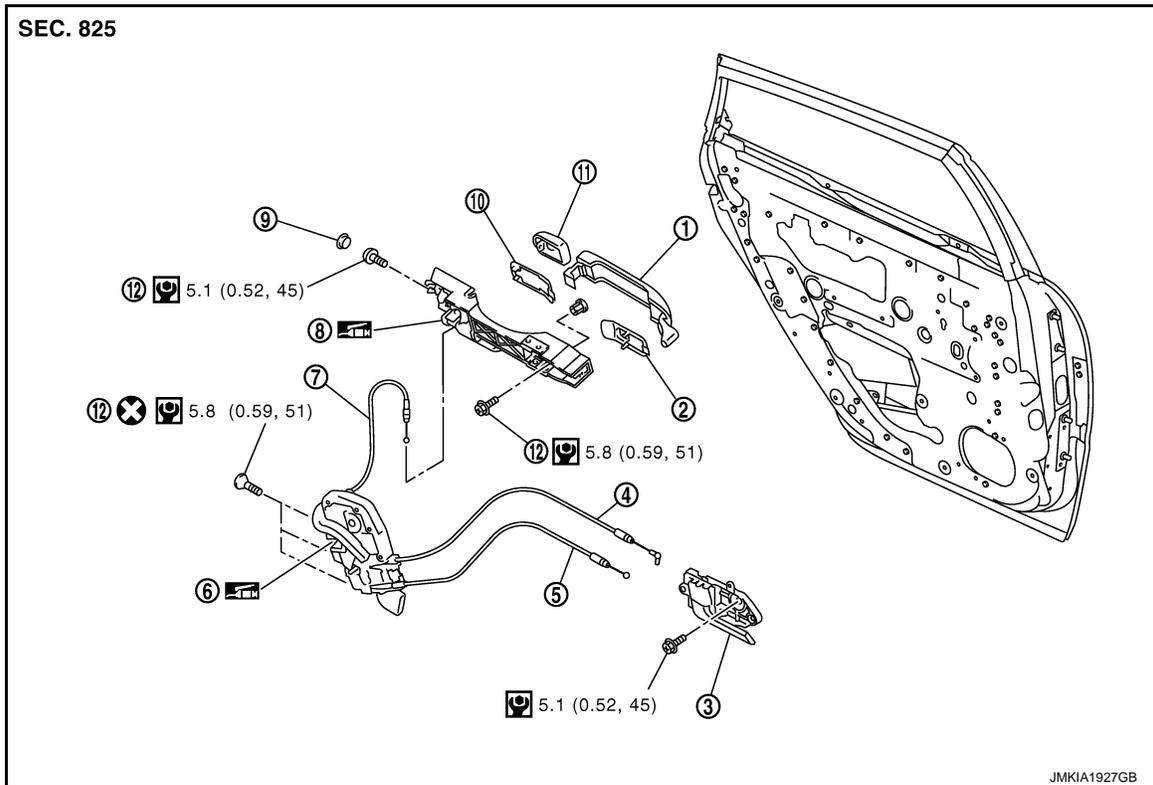

- | | | |
|-------------------------|-------------------------------|-----------------------|
| 1. Outside handle | 2. Front gasket | 3. Inside handle |
| 4. Lock knob cable | 5. Inside handle knob cable | 6. Door lock assembly |
| 7. Outside handle cable | 8. Outside handle bracket | 9. Grommet |
| 10. Rear gasket | 11. Outside handle escutcheon | 12. TORX bolt |


Refer to [GI-9, "Component"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005349440

REMOVAL

1. Remove the rear door finisher. Refer to [EI-45, "Component Parts Location"](#).
2. Disconnect the inside handle knob cable and lock knob cable from the back side of the rear door finisher.

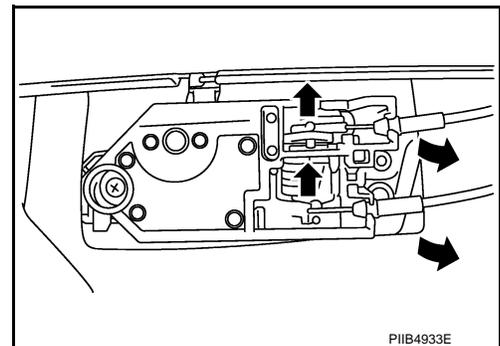


3. Remove the rear door sash. Refer to [GW-58](#).
4. Remove the rear door window and rear door screen assembly. Refer to [GW-58](#).
5. Remove door side grommet, and remove outside handle escutcheon bolt from grommet hole.

CAUTION:


REAR DOOR LOCK

< SERVICE INFORMATION >


Do not forcibly remove the TORX bolts.

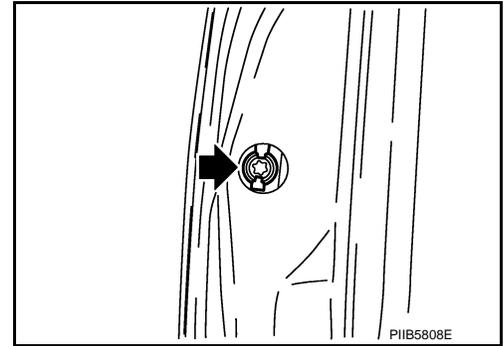


6. While pulling the outside handle, remove outside handle escutcheon.

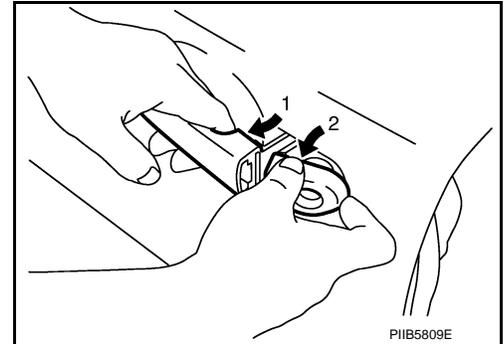


7. Slide toward rear of vehicle, and pull forward to remove the outside handle.

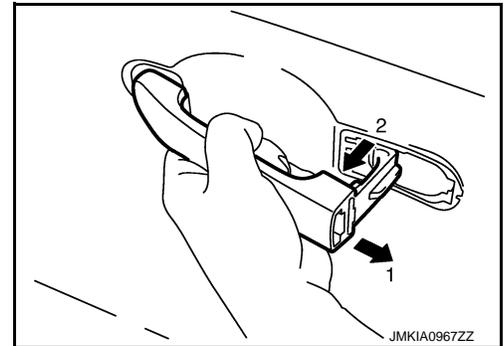

8. Remove the front gasket and rear gasket.

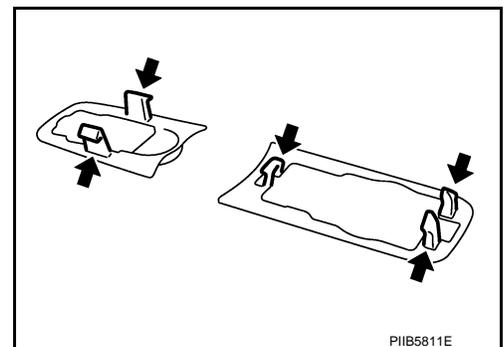


9. Remove the TORX bolts, remove the door lock assembly.

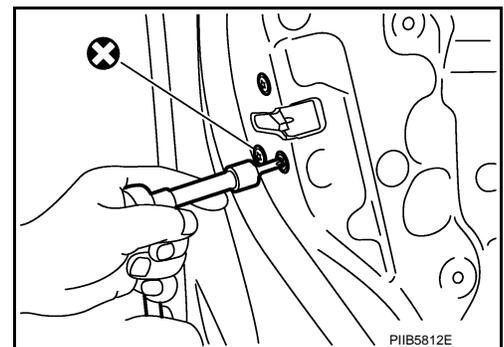


REAR DOOR LOCK

< SERVICE INFORMATION >

10. Remove the TORX bolt, and remove the outside handle bracket.

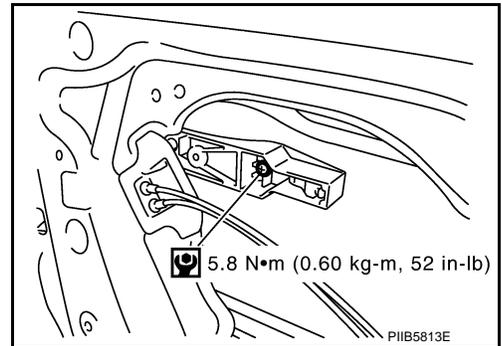


11. While pulling outside handle, slide toward rear of vehicle to remove outside handle.

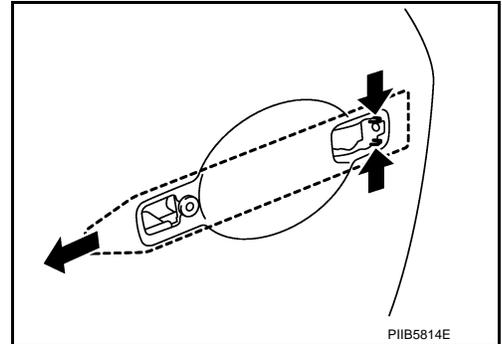

12. Disconnect the door lock actuator connector and remove the door lock assembly.

13. Reach to separate outside handle cable connection.

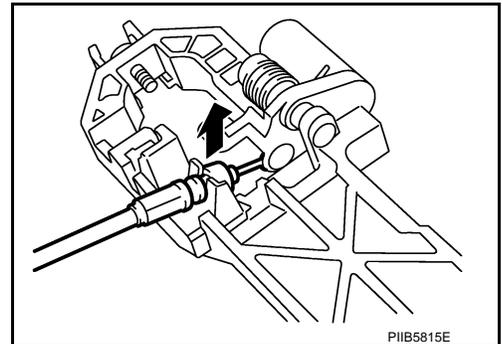

INSTALLATION

Install in the reverse order of removal.

CAUTION:

To install each rod, be sure to rotate the rod holder until a click is felt.

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P


TRUNK LID

< SERVICE INFORMATION >

TRUNK LID

Fitting Adjustment

INFOID:00000005349441

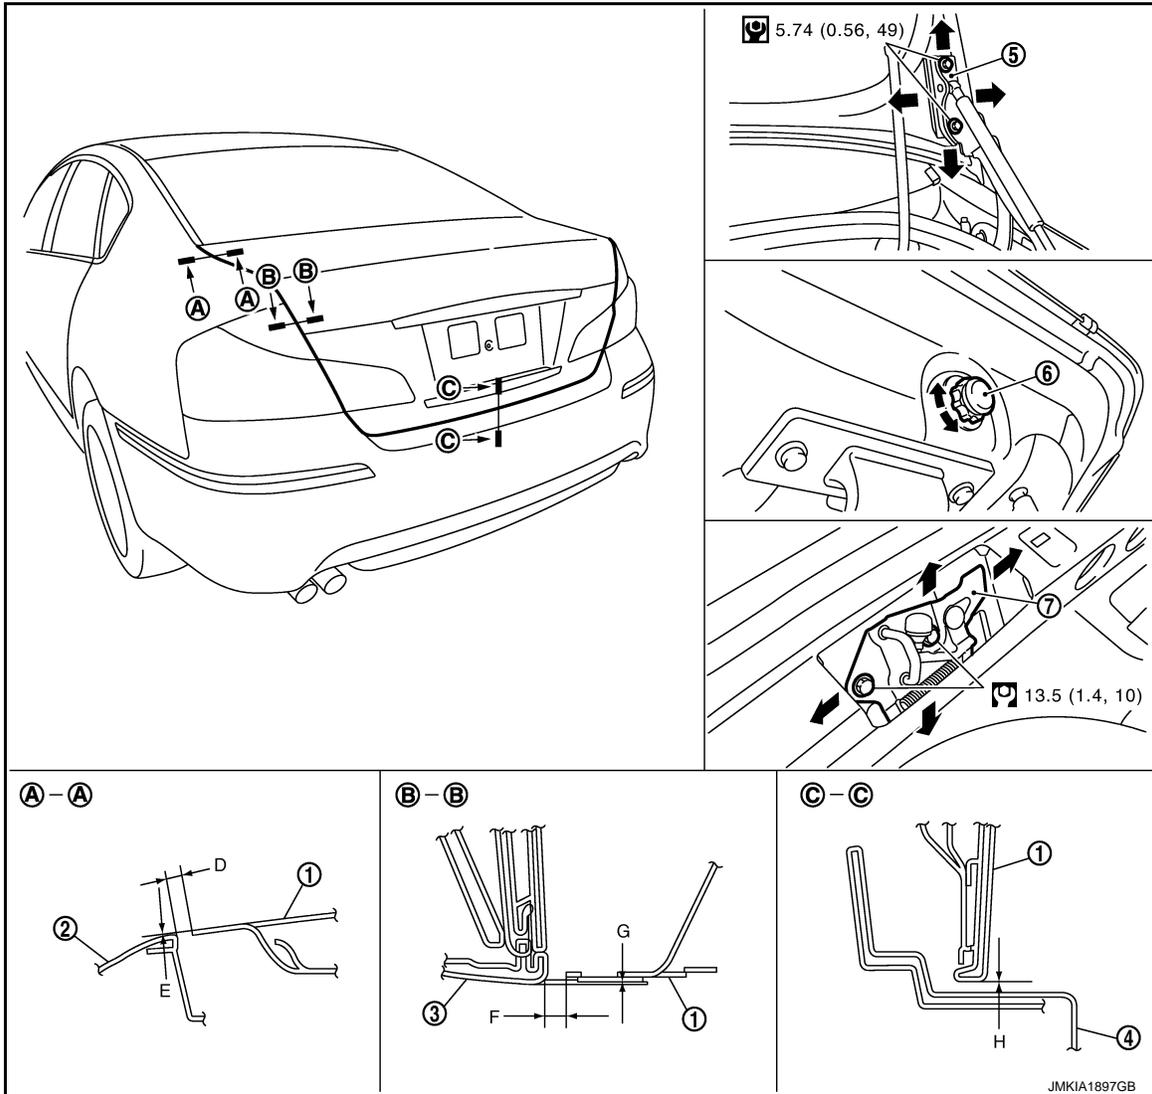

- | | | |
|-----------------------|--------------------|--------------------------|
| 1. Trunk lid assembly | 2. Rear fender | 3. Rear combination lamp |
| 4. Rear bumper fascia | 5. Trunk lid hinge | 6. Bumper rubber |
| 7. Trunk lid striker | | |

- Check the clearance and the evenness between the trunk lid and each part by visual and tactile feeling. (Fitting standard dimension in the table below should be satisfied.)

Parts		Standard	Right/left clearance (MAX)
A - A	D	2.5 - 4.5 (0.098 - 0.177)	1.5 (0.059)
	E	-1.0 - 1.0 (-0.039 - 0.039)	1.5 (0.059)
B - B	F	2.5 - 5.5 (0.098 - 0.217)	2.0 (0.079)
	G	-1.5 - 1.5 (-0.059 - 0.059)	2.0 (0.079)
C - C	H	2.4 - 6.6 (0.094 - 0.260)	—

* Unit: mm (in)

- In case out of specification, adjust them according to the procedures shown below.
 - Loosen the bumper rubber.


TRUNK LID

< SERVICE INFORMATION >

- Loosen the striker mounting bolts.
- Lift up the trunk lid approx. 100 – 150 mm (3.937 – 5.906 in) height then close it lightly and make sure it engaged firmly with the trunk lid closed.
- Check the clearance and evenness.
- Finally tighten the trunk lid striker.

Removal and Installation of Trunk Lid Assembly

INFOID:000000005349442

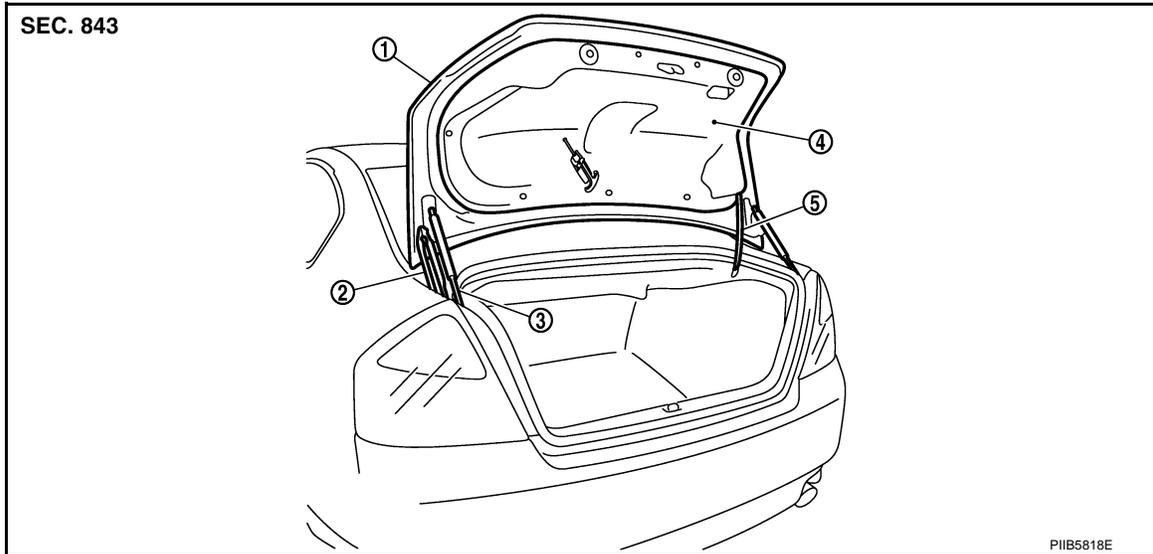


- | | | |
|-----------------------|----------------------|-------------------|
| 1. Trunk lid assembly | 2. Trunk lid hinge | 3. Trunk lid stay |
| 4. Trunk lid finisher | 5. Trunk lid harness | |

CAUTION:

- After installing, apply touch-up paint (the body color) onto the head of the hinge mounting bolts.
- After installing, check operation.
- After installing, perform fitting adjustment. Refer to [BL-184, "Fitting Adjustment"](#).

REMOVAL

1. Remove trunk lid finisher. Refer to [EI-65, "Component Parts Location"](#).
2. Disconnect the connectors in the trunk lid, and remove the harness clamps to pull the harness out of the trunk lid.
3. Insert flat-bladed screwdriver into the gap and remove holder.

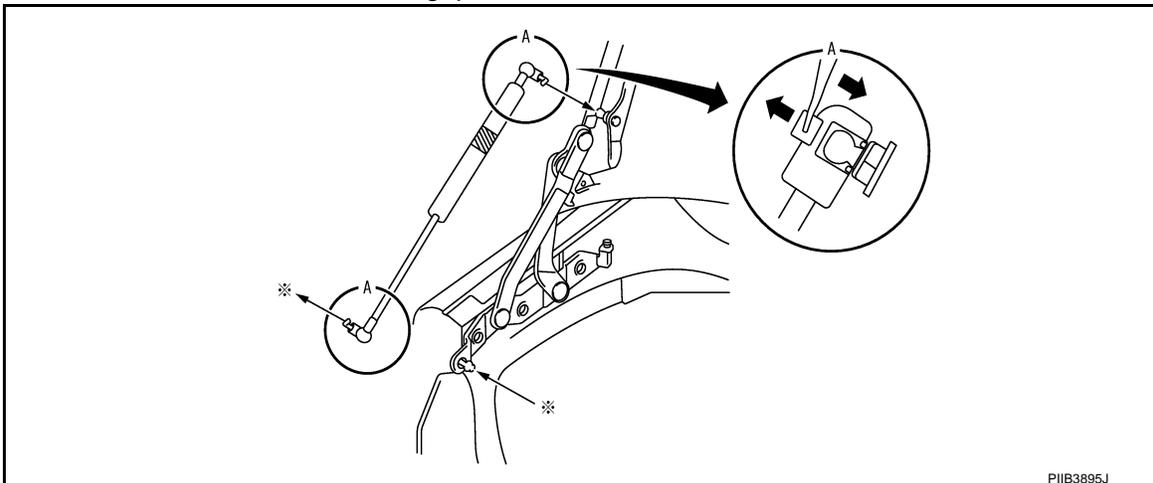

TRUNK LID


< SERVICE INFORMATION >

4. Remove trunk lid stay (gas stay).

WARNING:

Body injury may occur if no supporting rod is holding the trunk lid open when removing the damper stay.

5. Remove the mounting bolts, and remove the trunk lid assembly.

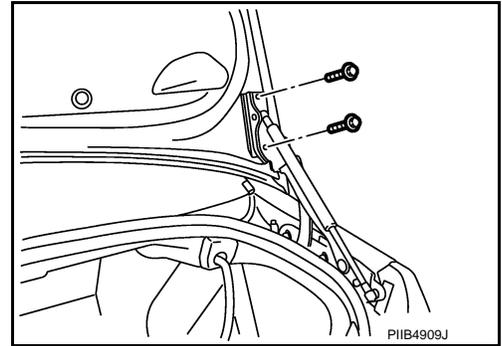

INSTALLATION


Install in the reverse order of removal.

Removal and Installation of Trunk Lid Stay

INFOID:000000005349443

REMOVAL

1. Insert flat-bladed screwdriver into the gap and remove holder.

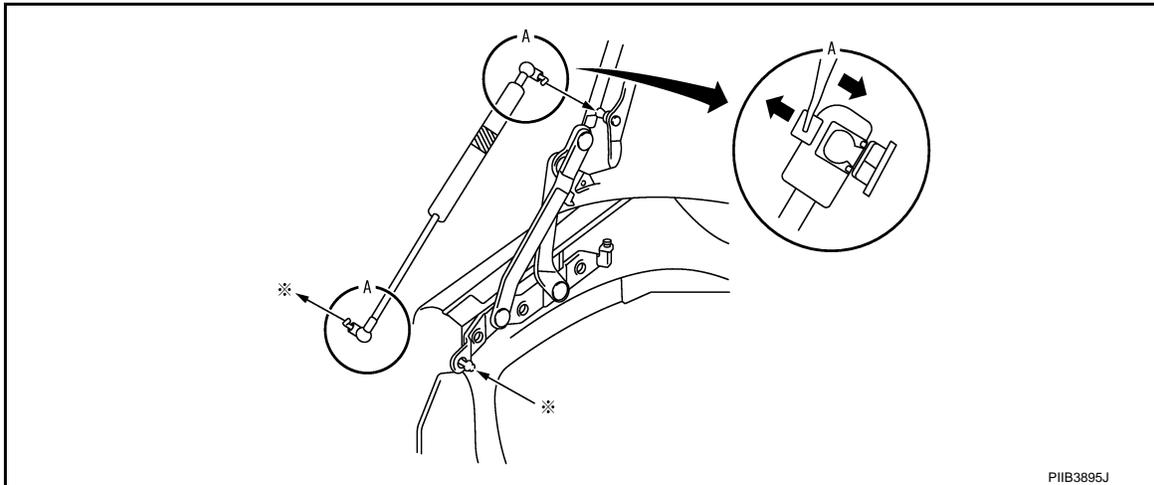

2. Remove trunk lid stay on the trunk lid.
3. Remove the stud balls, and trunk lid stay.

INSTALLATION

1. Install in the reverse order of removal.
2. After installing, check the operation.


Removal and Installation of Trunk Lid Lock

INFOID:000000005349444

REMOVAL


TRUNK LID

< SERVICE INFORMATION >

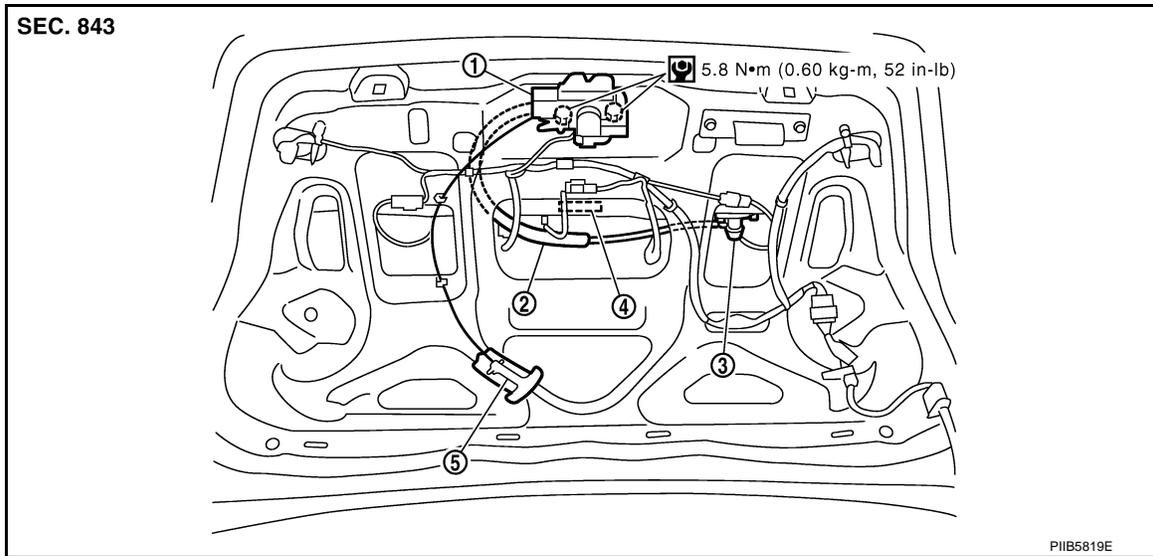

1. Trunk lid lock
2. Trunk lid opener cable
3. Trunk lid key cylinder
4. Trunk lid opener switch
5. Trunk lid emergency opener lever

1. Remove the trunk lid finisher. Refer to [EI-65. "Component Parts Location"](#).
2. Remove the trunk lid emergency opener lever.
3. Disconnect the trunk lid opener cable.
4. Disconnect the trunk lid.
5. Remove the mounting bolts, and remove the trunk lid lock.

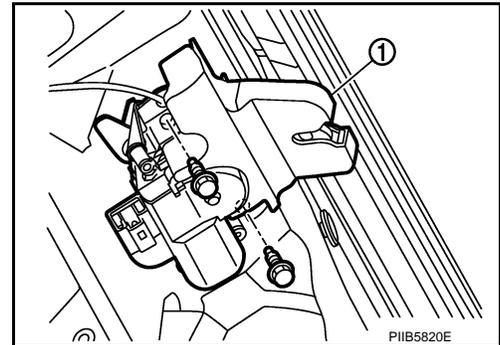

INSTALLATION

1. Install in the reverse order of removal.
2. After installing, close the trunk lid height. Perform the lock and surface height adjustment. Refer to [BL-184. "Fitting Adjustment"](#).
3. After installing, check the operation.

Removal and Installation of Trunk Lid Striker


INFOID:000000005349445

REMOVAL

TRUNK LID

< SERVICE INFORMATION >

1. Remove the trunk rear plate and trunk rear finisher. Refer to [EL-65](#), "Component Parts Location".
2. Remove the mounting bolts, and remove the striker from the trunk lock support.

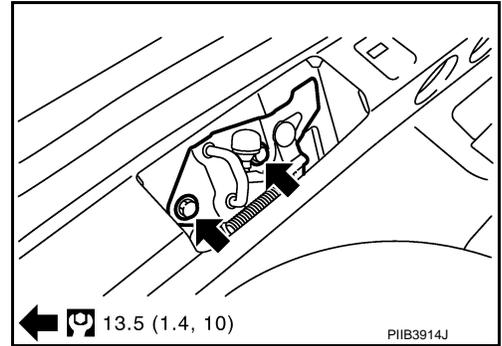


INSTALLATION

1. Install in the reverse order of removal.
2. After installing, close the trunk lid height. Perform the lock and surface height adjustment. Refer to [BL-184](#), "Fitting Adjustment".
3. After installing, check the operation.

Removal and Installation of Trunk Lid Weatherstrip

INFOID:000000005349446

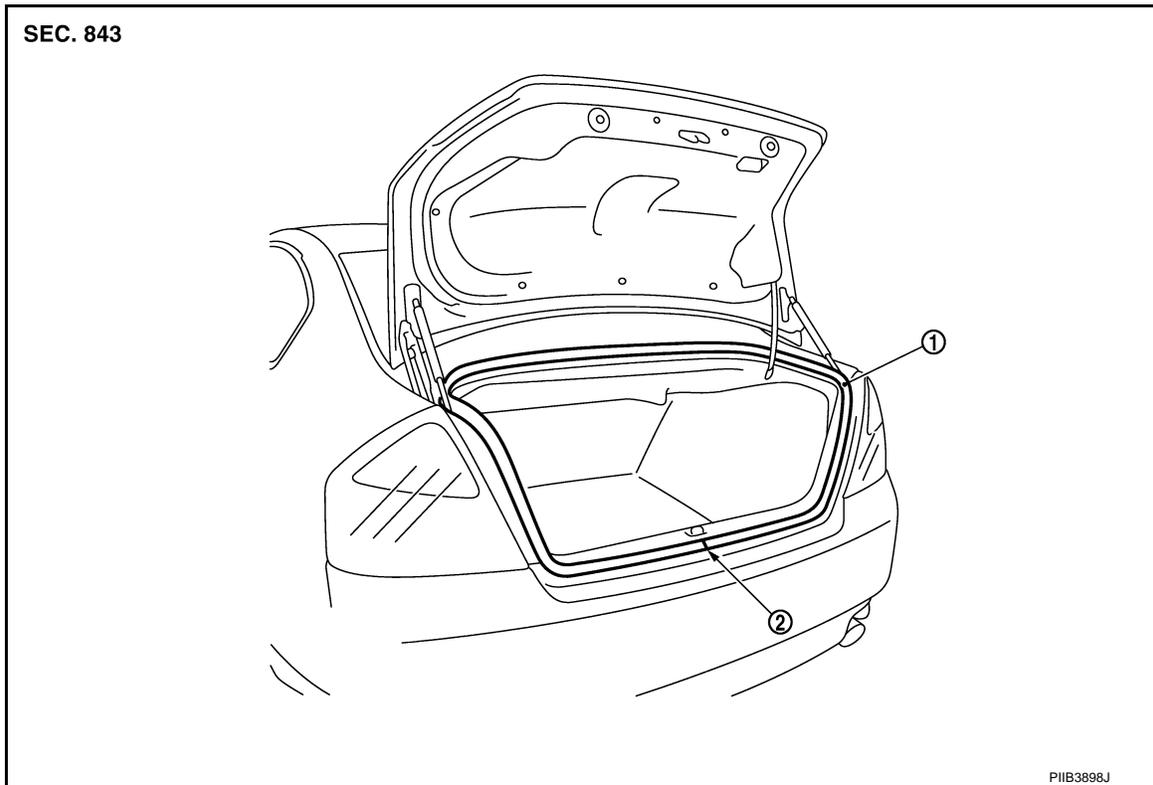

1. Weatherstrip

2. Seam

REMOVAL

Pull up and remove engagement with body from weatherstrip joint.

CAUTION:

After removal, do not pull strongly on the weatherstrip.

INSTALLATION

1. Working from the lower section, align the weatherstrip seam with center of the striker and weatherstrip onto the vehicle.
2. After installation, pull the weatherstrip gently to ensure that there is no loose section.

NOTE:

Make sure the weatherstrip is fit tightly at each corner and back door rear plate.


TRUNK LID OPENER

< SERVICE INFORMATION >

TRUNK LID OPENER

Component Parts and Harness Connector Location

INFOID:000000005349447

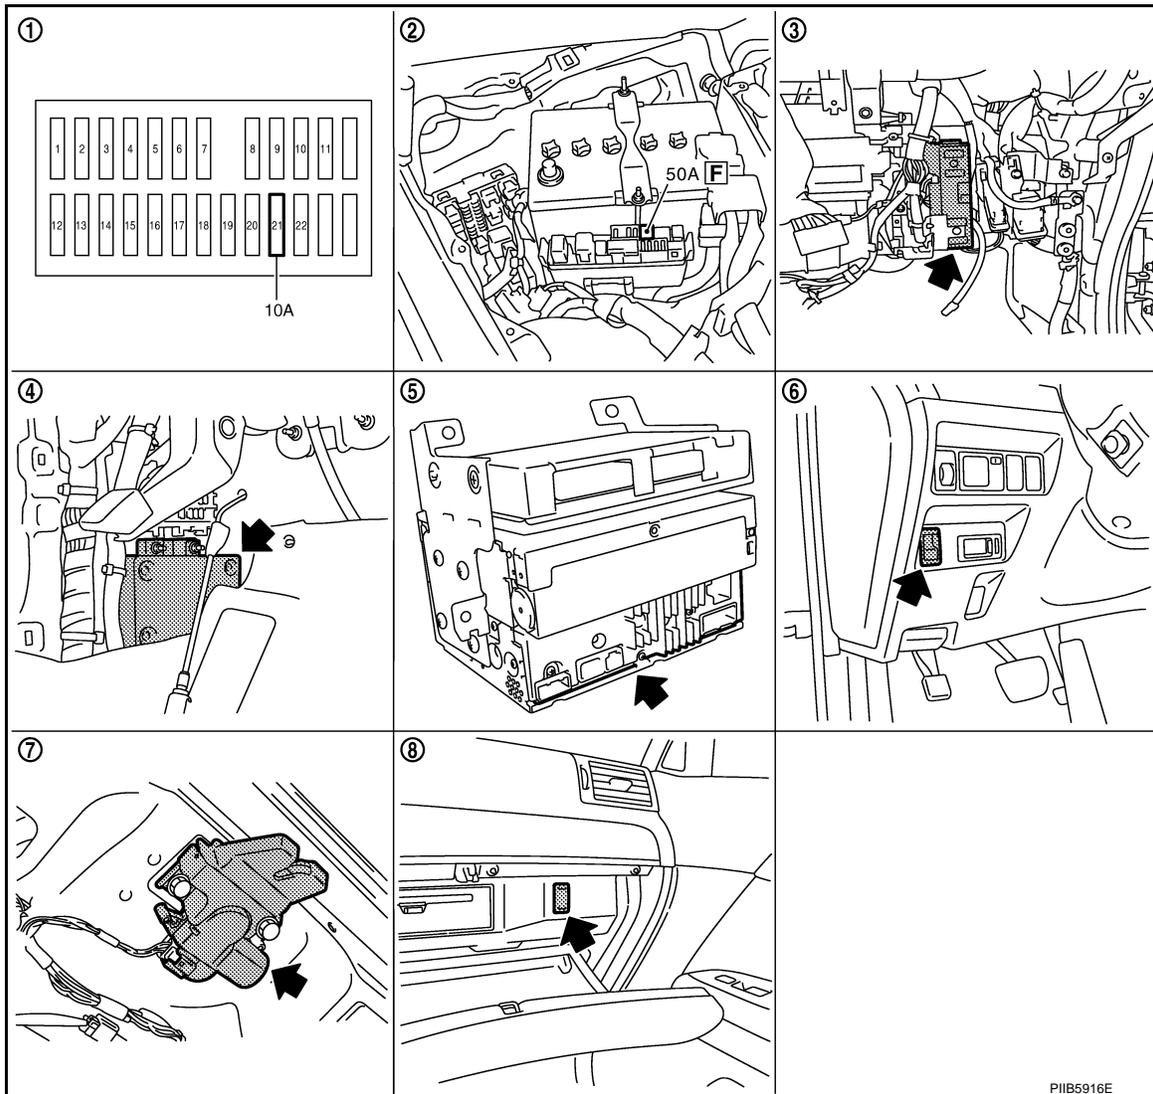

- | | | |
|---|--|---|
| 1. Fuse block (J / B) fuse layout | 2. Fuse and fusible link box | 3. BCM M1, M2, M3 (View with instrument lower panel RH removed) |
| 4. Intelligent key unit M32 (View with dash side finisher LH removed) | 5. Unified meter and A / C AMP M65 | 6. Trunk lid opener switch M25 |
| 7. Trunk lid lock assembly T106 (Trunk lid opener actuator) | 8. Trunk lid opener cancel switch M99 (Glove box inside) | |

System Description

INFOID:000000005349448

Power is supplied at all times

- through 50A fusible link (letter **F**, located in the fuse and fusible link box)
- to BCM terminal 55,
- through 10A fuse [No.21, located in the fuse block (J/B)]
- to BCM terminal 42.

Ground is supplied

- to BCM terminal 52
- through body grounds M16 and M70.

When trunk lid opener cancel switch is ON and trunk lid opener switch is ON (pushed)

Ground is supplied

TRUNK LID OPENER

< SERVICE INFORMATION >

- to BCM terminal 30
- through trunk lid opener switch terminals 1 and 2
- through trunk lid opener cancel switch terminals 1 and 3 and
- through body grounds M16 and M70.

And power is supplied

- through BCM terminal 68
- to trunk lid opener actuator terminal 3.

Ground is supplied

- to trunk lid opener actuator terminal 2
- through body grounds B402, B405.

Then BCM opens trunk lid opener actuator.

TRUNK LID OPENER OPERATION

When trunk lid opener switch or trunk button of Intelligent Key is ON, BCM opens trunk opener actuator.

BCM can open trunk lid opener actuator when

- vehicle speed is less than 5 km/h (3MPH)
- vehicle security system is disarmed or pre-armed phase

BCM does not open trunk lid opener actuator when

- trunk lid opener cancel switch is OFF (CANCEL)
- vehicle speed is more than 5 km/h (3MPH)
- vehicle security system is armed or alarm phase
- Intelligent Key is inserted in key slot




TRUNK LID OPENER

< SERVICE INFORMATION >

Wiring Diagram - TLID -

INFOID:000000005349449

BL-TLID-01

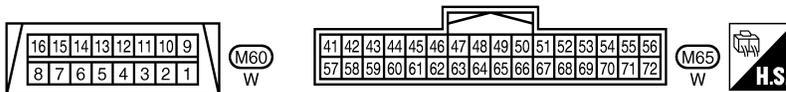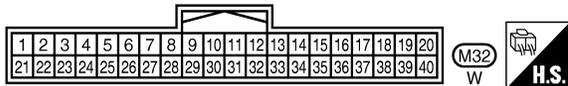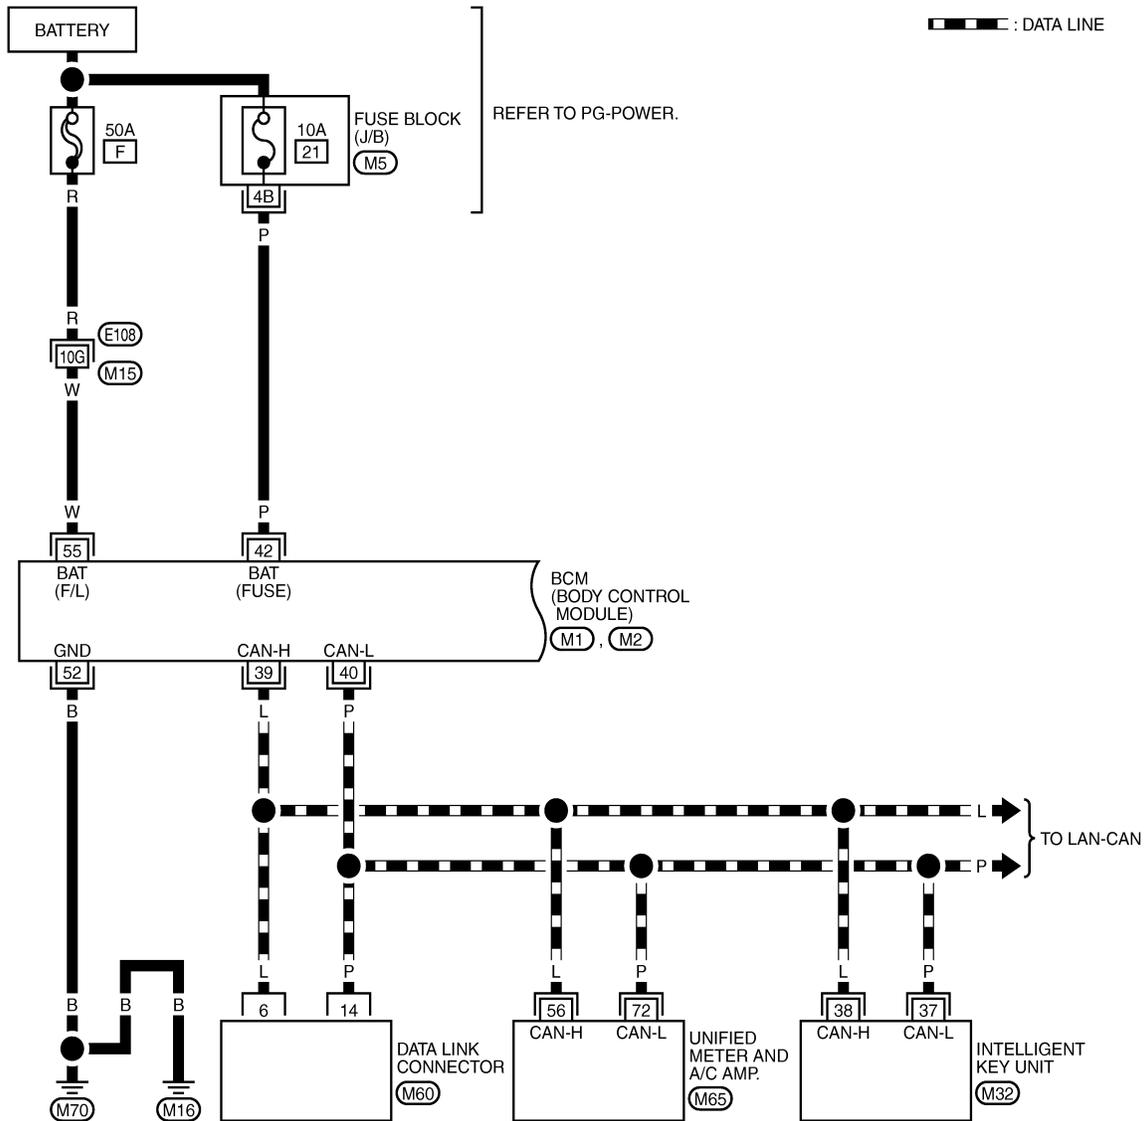

REFER TO THE FOLLOWING.



- (E108) - SUPER MULTIPLE JUNCTION (SMJ)
- (M5) - FUSE BLOCK - JUNCTION BOX (J/B)
- (M1), (M2) - ELECTRICAL UNITS

TIWT2618E

TRUNK LID OPENER

< SERVICE INFORMATION >

BL-TLID-02

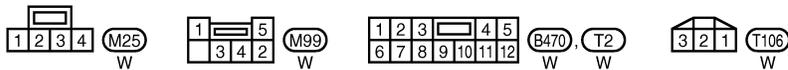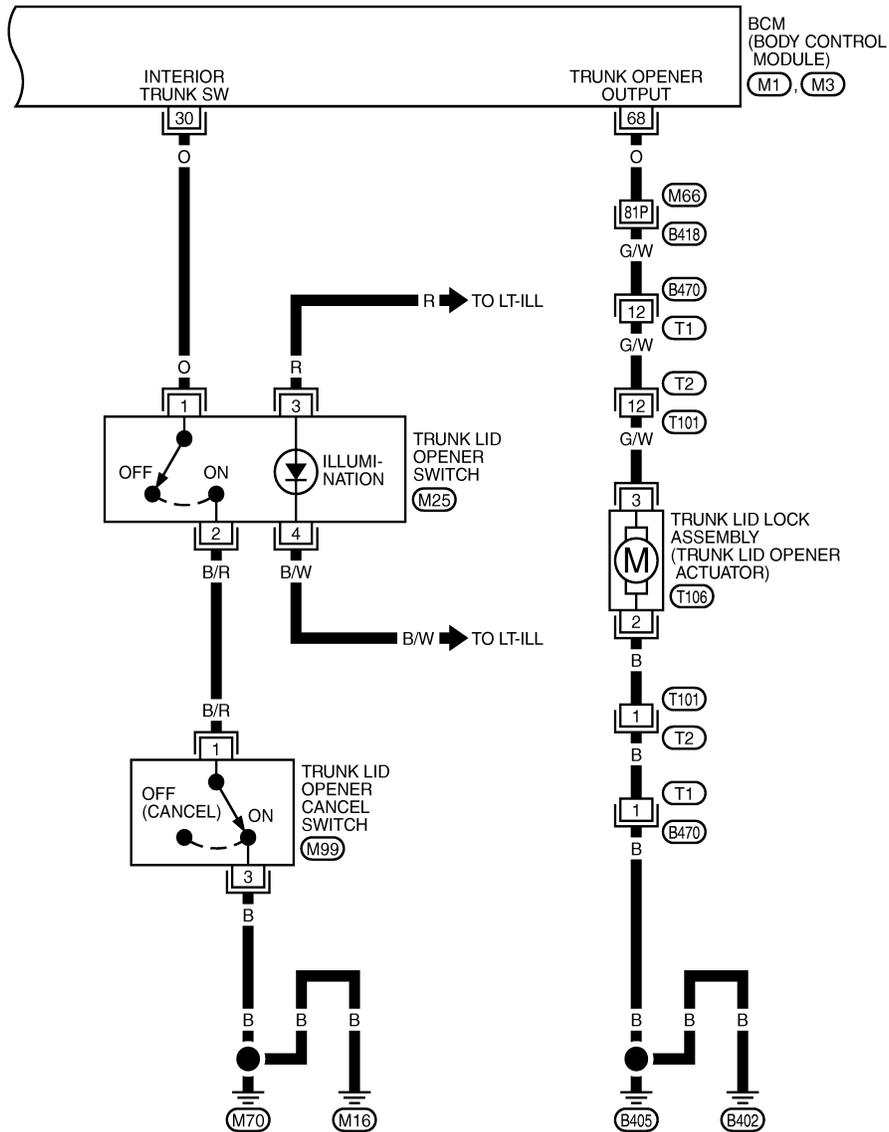

REFER TO THE FOLLOWING.

B418 - SUPER MULTIPLE JUNCTION (SMJ)

M1, M3 - ELECTRICAL UNITS

TIWT2619E

TRUNK LID OPENER

< SERVICE INFORMATION >

Terminal and Reference Value for BCM

INFOID:000000005349450

Terminal	Wire color	Item	Signal Input/ Output	Condition	Voltage (V) (Approx.)
30	O	Trunk lid opener switch	Input	Trunk lid opener cancel switch is ON position	0
				Trunk lid opener switch is ON	Battery voltage
				Trunk lid opener cancel switch is OFF position	Battery voltage
39	L	CAN-H	Input/ Output	—	—
40	P	CAN-L	Input/ Output	—	—
42	P	Power source (Fuse)	Input	—	Battery voltage
52	B	Ground	—	—	0
55	W	Power source (Fusible link)	Input	—	Battery voltage
68	O	Trunk lid opener output signal	Output	When trunk lid opener cancel switch is ON position, trunk lid opener switch is ON.	0 → Battery voltage → 0

CONSULT-III Function (BCM-TRUNK)

INFOID:000000005349451

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnosis part	Inspection item, self-diagnosis mode	Content
TRUNK	DATA MONITOR	Displays the input data of BCM in real time basis.
	ACTIVE TEST	Give a drive signals to load to check the operation check.

DATA MONITOR

Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.
KEY ON SW	Indicates [ON/OFF] condition of Intelligent Key inserted in key slot.
I KEY TRUNK/HAT	Indicates [ON/OFF] condition of trunk lid open signal from Intelligent Key.
TRUNK OPNR SW	Indicates [ON/OFF] condition of trunk lid opener switch.
VEHICLE SPEED	This item displays vehicle speed.

ACTIVE TEST

Test item	Content
TRUNK/GLASS HATCH	This test is able to check trunk lid opener actuator open operation. This actuator opens when "ON" on CONSULT-III screen is touched.

Trouble Diagnosis

INFOID:000000005349452

TRUNK DOSE NOT OPEN WITH TRUNK LID OPENER SWITCH / WITH INTELLIGENT KEY

1. CHECK TRUNK LID OPENER CANCEL SWITCH

Check trunk lid opener cancel switch position.

Does trunk lid opener cancel switch turn OFF (CANCEL)?

- Yes >> Turn on trunk lid opener cancel switch.
- No >> GO TO 2.

TRUNK LID OPENER

< SERVICE INFORMATION >

2. CHECK TRUNK LID OPEN INPUT SIGNAL

With CONSULT-III

Check trunk lid opener switch ("TRNK OPNR SW") in "DATA MONITOR" mode with CONSULT-III.

- When trunk lid opener switch is turned to "ON".

TRNK OPNR SW : ON


Without CONSULT-III

1. Remove Intelligent Key from key slot.
2. Turn on trunk lid opener cancel switch.
3. Check voltage between BCM connector and ground.

Terminals		Condition of trunk lid opener switch	Voltage (V) (Approx.)
(+)			
BCM connector	Terminal	(-)	
M1	30	Ground	0
			Battery voltage

OK or NG

- OK >> GO TO 3.
 NG >> GO TO 6.

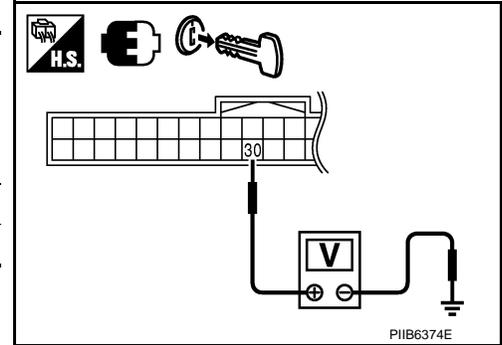


3. CHECK TRUNK LID OPEN OUTPUT SIGNAL

Check voltage between BCM connector and ground.

Terminals		Condition of trunk lid opener switch	Voltage (V) (Approx.)
(+)			
BCM connector	Terminal	(-)	
M3	68	Ground	0 → Battery voltage → 0

OK or NG

- OK >> GO TO 4.
 NG >> Replace BCM. Refer to [BCS-14, "Removal and Installation of BCM"](#).

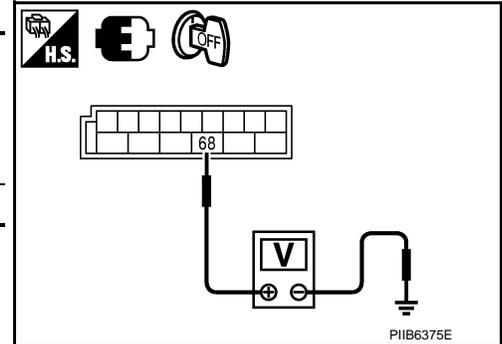

4. CHECK TRUNK LID OPENER ACTUATOR CIRCUIT

1. Disconnect BCM connector and trunk lid opener actuator connector.
2. Check continuity between BCM connector and trunk lid opener actuator connector.


A		B		Continuity
BCM connector	Terminal	Trunk lid opener actuator connector	Terminal	
M3	68	T106	3	Yes

3. Check continuity between BCM connector and ground.

A		Ground	Continuity
BCM connector	Terminal		
M3	68		No

OK or NG

- OK >> GO TO 5.
 NG >> Repair harness or connector.

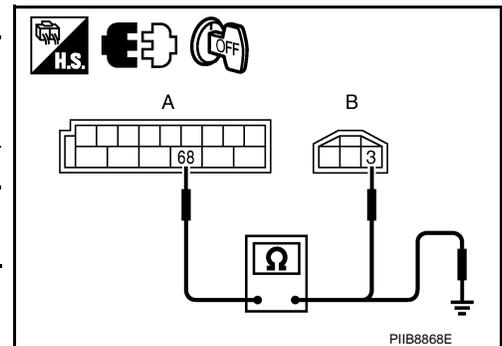

TRUNK LID OPENER

< SERVICE INFORMATION >


5. CHECK TRUNK LID OPENER ACTUATOR GROUND CIRCUIT

Check continuity between trunk lid opener actuator connector and ground.

Trunk lid opener actuator connector	Terminal		Continuity
T106	2	Ground	Yes

OK or NG

- OK >> Replace trunk lid opener actuator.
- NG >> Repair harness or connector.

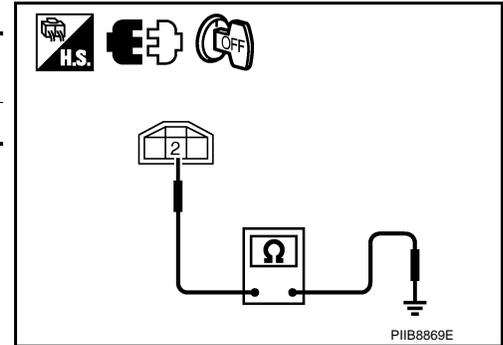


6. CHECK TRUNK LID OPENER SWITCH

1. Turn ignition switch OFF.
2. Disconnect trunk lid opener switch connector.
3. Check continuity between trunk lid opener switch connector.

Terminal		Condition	Continuity
Trunk lid opener switch			
1	2	ON (push and hold)	Yes
		OFF (release)	No

OK or NG

- OK >> GO TO 7.
- NG >> Replace trunk lid opener switch.

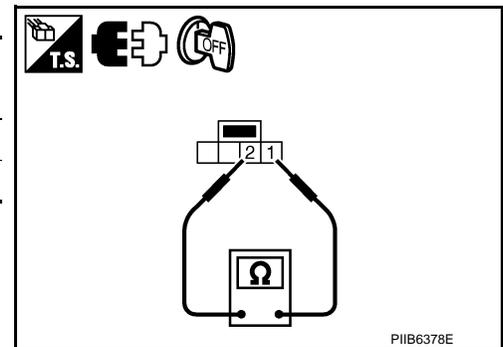


7. CHECK TRUNK LID OPENER CANCEL SWITCH

1. Disconnect trunk lid opener cancel switch connector.
2. Check continuity between trunk lid opener cancel switch connector.

Terminal		Condition	Continuity
Trunk lid opener cancel switch			
1	3	ON	Yes
		OFF (cancel)	No

OK or NG

- OK >> GO TO 8.
- NG >> Replace trunk lid opener cancel switch.

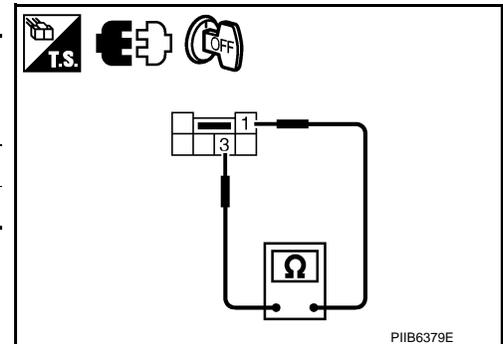

8. CHECK TRUNK LID OPENER SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM connector and trunk lid opener switch connector.

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

BL

TRUNK LID OPENER

< SERVICE INFORMATION >

A		B		Continuity
BCM connector	Terminal	Trunk lid opener switch connector	Terminal	
M1	30	M25	1	Yes

3. Check continuity between BCM connector and ground.

A		Ground	Continuity
BCM connector	Terminal		
M1	30		No

OK or NG

OK >> GO TO 9.

NG >> Repair harness or connector.

9. CHECK TRUNK LID OPENER CANCEL SWITCH CIRCUIT

1. Check continuity between trunk lid opener switch connector and trunk lid opener cancel switch connector.

A		B		Continuity
Trunk lid opener actuator connector	Terminal	Trunk lid opener cancel switch	Terminal	
M25	2	M99	1	Yes

2. Check continuity between trunk lid opener switch connector and ground.

A		Ground	Continuity
Trunk lid opener actuator connector	Terminal		
M25	2		No

OK or NG

OK >> GO TO 10.

NG >> Repair harness or connector.

10. CHECK TRUNK LID OPENER SWITCH GROUND CIRCUIT




Check continuity between trunk lid opener switch connector and ground.

A		Ground	Continuity
Trunk lid opener cancel switch	Terminal		
M99	3		Yes

OK or NG

OK >> Check condition of harness and connector.

NG >> Repair or replace harness.

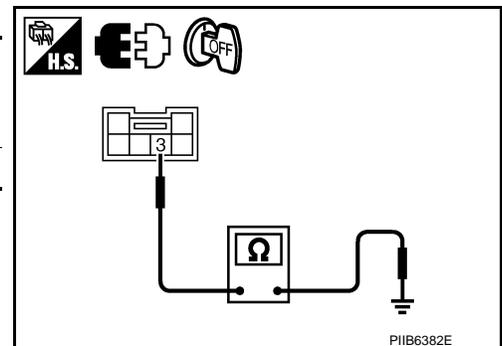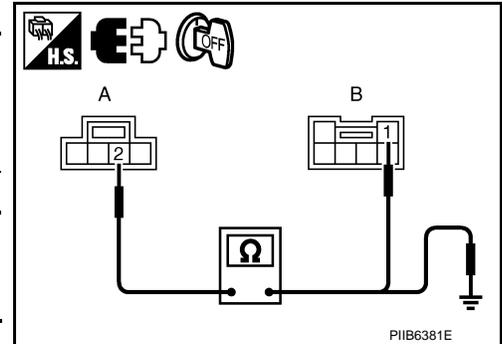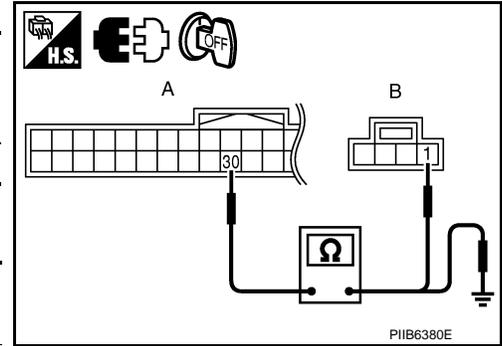


VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

VEHICLE SECURITY (THEFT WARNING) SYSTEM

Component Parts and Harness Connector Location


INFOID:000000005349453

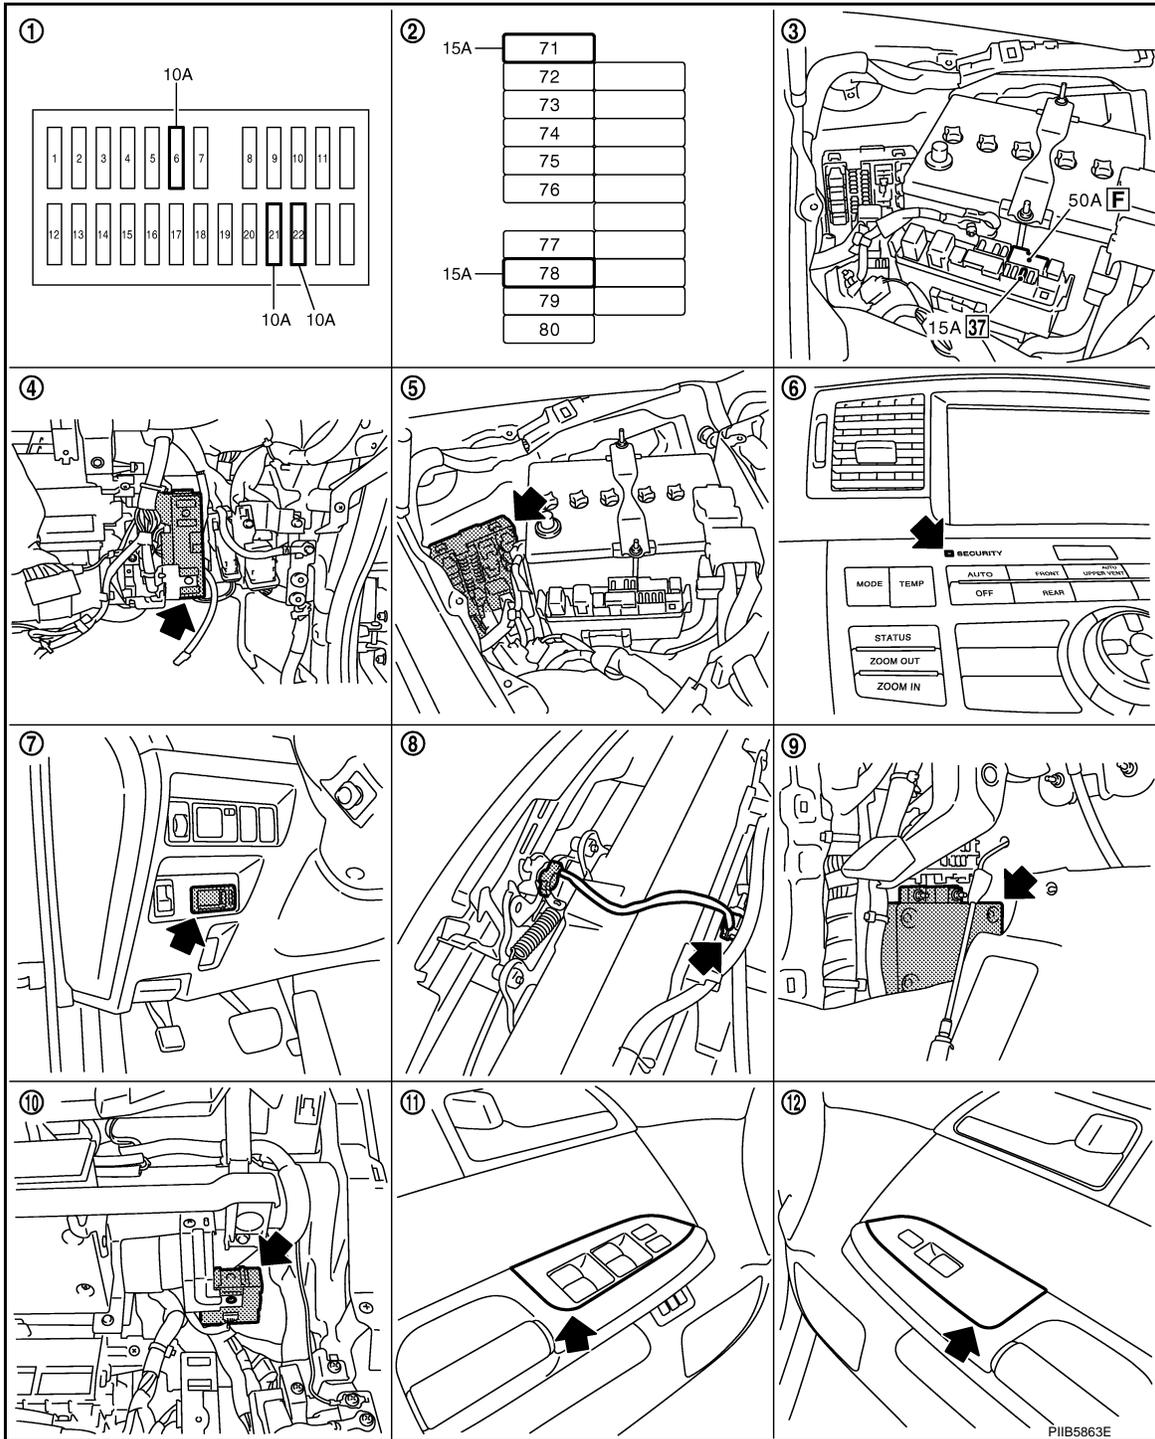

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

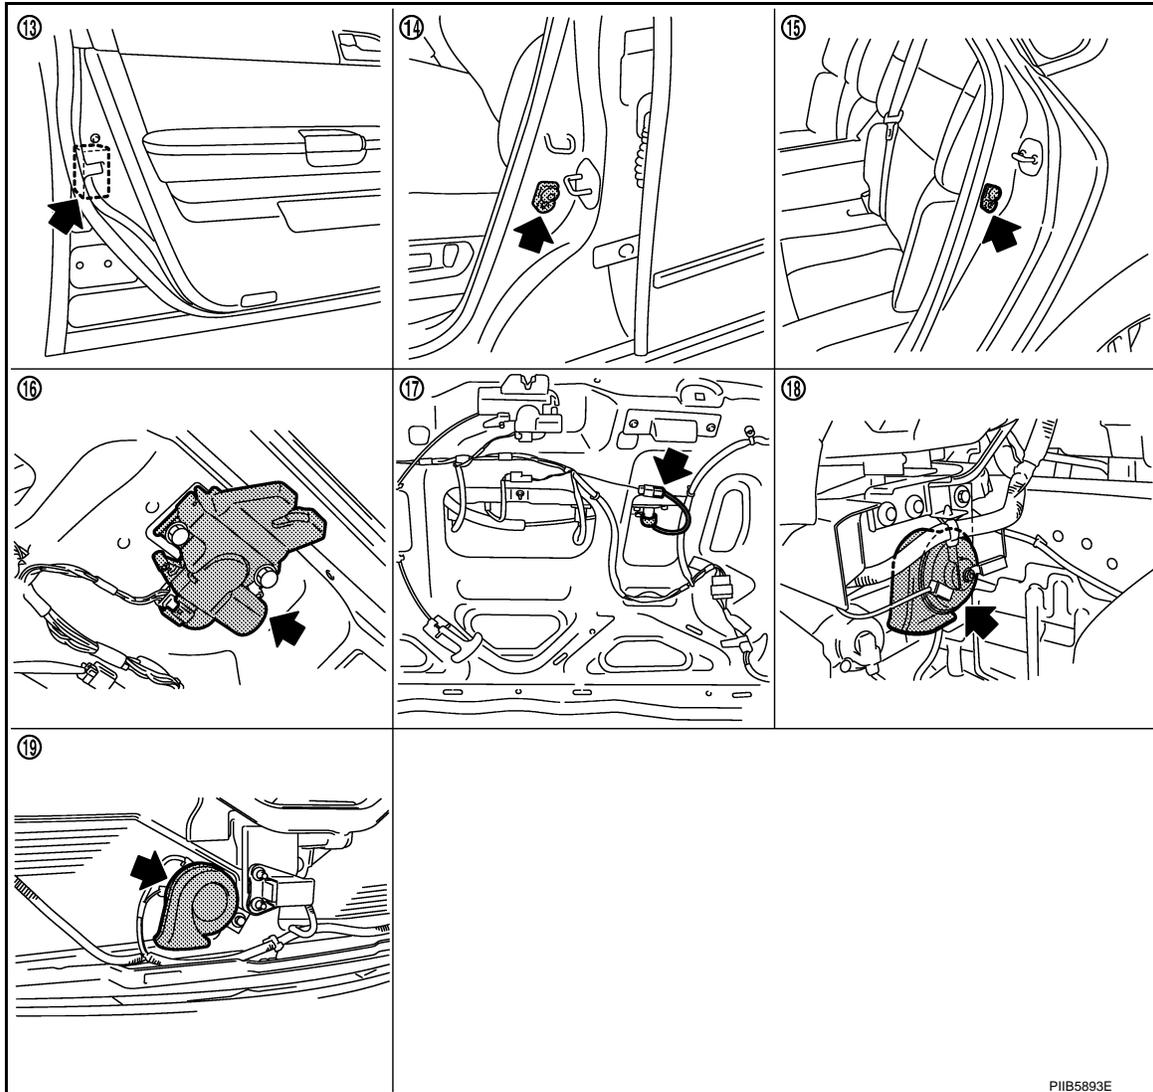

PIIB5893E

- | | | |
|---|--|---|
| 1. Fuse block (J/B) fuse layout | 2. IPDM E/R fuse layout | 3. Fuse and fusible link box |
| 4. BCM M1, M2, M3 (View with instrument lower panel RH removed) | 5. IPDM E/R E8, E9 (Engine room) | 6. Security indicator M69 (Multifunction switch) |
| 7. Key slot M14 | 8. Hood switch E44 (Hood lock assembly) | 9. Intelligent key unit M32 (View with dash side finisher LH removed) |
| 10. Remote keyless entry receiver M89 (View with instrument lower panel RH removed) | 11. Power window main switch D10, D11 (Driver side) | 12. Power window sub switch D46 (Passenger side) |
| 13. Front door lock assembly LH D14 (Key cylinder switch) | 14. Front door switch B11 (Driver side) | 15. Rear door switch LH B53 |
| 16. trunk lid lock assembly T106 (Trunk room lamp switch) | 17. Trunk lid key cylinder switch T104 (Unlock switch) | 18. Horn (low) E56, E57 (View with front fender protector LH removed) |
| 19. Horn (high) E64, E65 (View with front grille removed) | | |

System Description


INFOID:000000005349454

DESCRIPTION

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

Operation Flow

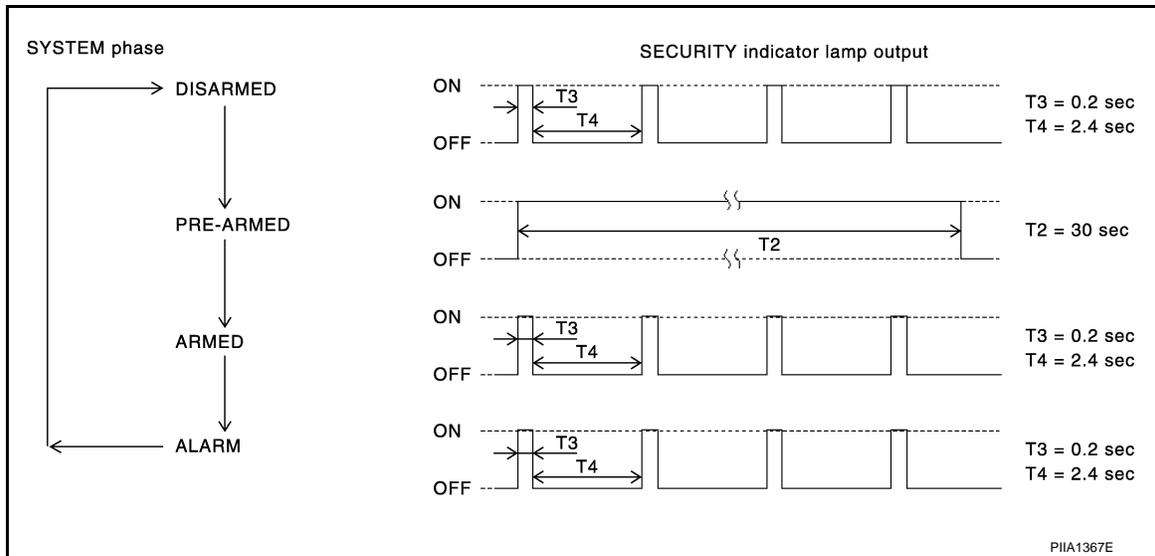

Setting the Vehicle Security System

Initial condition

- Ignition switch is in OFF position.

Disarmed phase

- When hood, doors or trunk is open, the vehicle security system is set in the disarmed phase on the assumption that the owner is inside or near the vehicle.
- When the vehicle security system is in the disarmed phase, the security indicator lamp blinks every 2.4 seconds.

Pre-armed phase and armed phase

When the following operation 1 or 2 is performed, the vehicle security system turns into the “pre-armed” phase. (The security indicator lamp illuminates.)

1. BCM receives LOCK signal from front door key cylinder switch or Intelligent Key, after hood, trunk and all doors are closed.
2. Hood, trunk and all doors are closed after front doors are locked by key or door lock and unlock switch. The security indicator lamp illuminates for 30 seconds. Then, the system automatically shifts into the “armed” phase.

Canceling the Set Vehicle Security System

When one of the following operations is performed, the armed phase is canceled.

1. Unlock the doors with the key or Intelligent Key.
2. Turn ignition switch “ON” or “ACC” position.

Canceling the Alarm Operation of the Vehicle Security System

When unlock the door with the key or Intelligent Key the alarm operation is canceled.

Activating the Alarm Operation of the Vehicle Security System

Make sure the system is in the armed phase. (The security indicator lamp blinks every 2.4 seconds.)

When the following operation 1 or 2 is performed, the system sounds the horns and flashes the headlamps for about 50 seconds.

1. Hood, trunk or any door is opened during armed phase.
2. Disconnecting and connecting the battery connector before canceling armed phase.

POWER SUPPLY AND GROUND CIRCUIT

Power is supplied at all times

- through 50A fusible link (letter F, located in the fuse and fusible link box)
- to BCM terminal 55,
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to BCM terminal 42,
- through 10A fuse [No. 71, located in the IPDM E/R]
- to IPDM E/R internal CPU,
- through 15A fuse [No. 78, located in the IPDM E/R]

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

- to IPDM E/R internal CPU,
- through 15A fuse [No. 37, located in the fuse block (J/B)]
- to multi-function switch (security indicator) terminal 1.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through body grounds M16 and M70.

INITIAL CONDITION TO ACTIVATE THE SYSTEM

The operation of the vehicle security system is controlled by the doors, hood and trunk.

To activate the vehicle security system, BCM must receive signals indicating the doors, hood and trunk are closed and the doors are locked by key fob.

When a door is open, terminal 12 (passenger side door), 13 (rear RH door), 62 (driver side door), 63 (rear LH door) receives a ground signal from each door switch.

When front door LH is unlocked by power window main switch (door lock and unlock switch), BCM terminal 22 receives an unlock signal from terminal 14 of power window main switch with power window serial link.

When front door RH is unlocked by power window sub-switch (passenger side) (door lock and unlock switch), BCM terminal 22 receives an unlock signal from terminal 16 of power window sub-switch (passenger side) with power window serial link.

When front door key cylinder switch is in LOCK position, ground is supplied

- to power window main switch terminal 4
- through front door key cylinder switch terminals 6 and 4
- through body grounds M16 and M70.

When the hood is open, IPDM E/R receives a ground signal

- to IPDM E/R terminal 60
- through hood switch terminal 2
- through hood switch terminal 1
- through body grounds E22, and E43.

The IPDM E/R then sends a signal to BCM via CAN communication line.

When the trunk is open, ground is supplied

- to BCM terminal 57
- through trunk room lamp switch terminal 1
- through trunk room lamp switch terminal 2
- through body grounds B402 and B405.

VEHICLE SECURITY SYSTEM ALARM OPERATION

The vehicle security system is triggered by

- opening a door
- opening the trunk
- opening the hood
- detection of battery disconnect and connect.

The vehicle security system will be triggered once the system is in armed phase, when BCM receives a ground signal at terminals 12 (passenger side door), 13 (rear RH door), 57 (trunk), 62 (driver side door), 63 (rear LH door), or receives a signal from the IPDM E/R (hood switch).

When the vehicle security system is triggered, ground is supplied intermittently to both headlamp relay and horn relay.

When headlamp relay and horn relay are energized, then power is supplied to headlamps (LH and RH) and horns (HIGH and LOW).

The headlamps flash and the horn sounds intermittently.

The alarm automatically turns off after 50 seconds, but will reactivate if the vehicle is tampered with again.

VEHICLE SECURITY SYSTEM DEACTIVATION

To deactivate the vehicle security system, a door or the trunk must be unlocked with the key, Intelligent Key.

When the key is used to unlock a door, BCM terminal 22 receives signal

- from the power window main switch (door lock and unlock switch) terminal 14.

When the BCM receives either one of these signals or unlock signal from key cylinder switch or Intelligent Key, the vehicle security system is deactivated. (Disarmed phase)

PANIC ALARM OPERATION

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

Intelligent Key system may or may not operate vehicle security system (horn and headlamps) as required. When the Intelligent Key system is triggered, ground is supplied intermittently to both headlamp relay and horn relay.

When headlamp relay and horn relay are energized, then power is supplied to headlamps (LH and RH) and horns (HIGH and LOW).

The headlamp flashes and the horn sounds intermittently.

The alarm automatically turns off after 25 seconds or when BCM receives any signal from Intelligent Key.

CAN Communication System Description

INFOID:000000005349455

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

INFOID:000000005349456

Refer to [LAN-29, "CAN System Specification Chart"](#)

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

BL


VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

Schematic

INFOID:000000005349457

* : This relay is built into the IPDM E/R
(Intelligent power distribution module engine room).

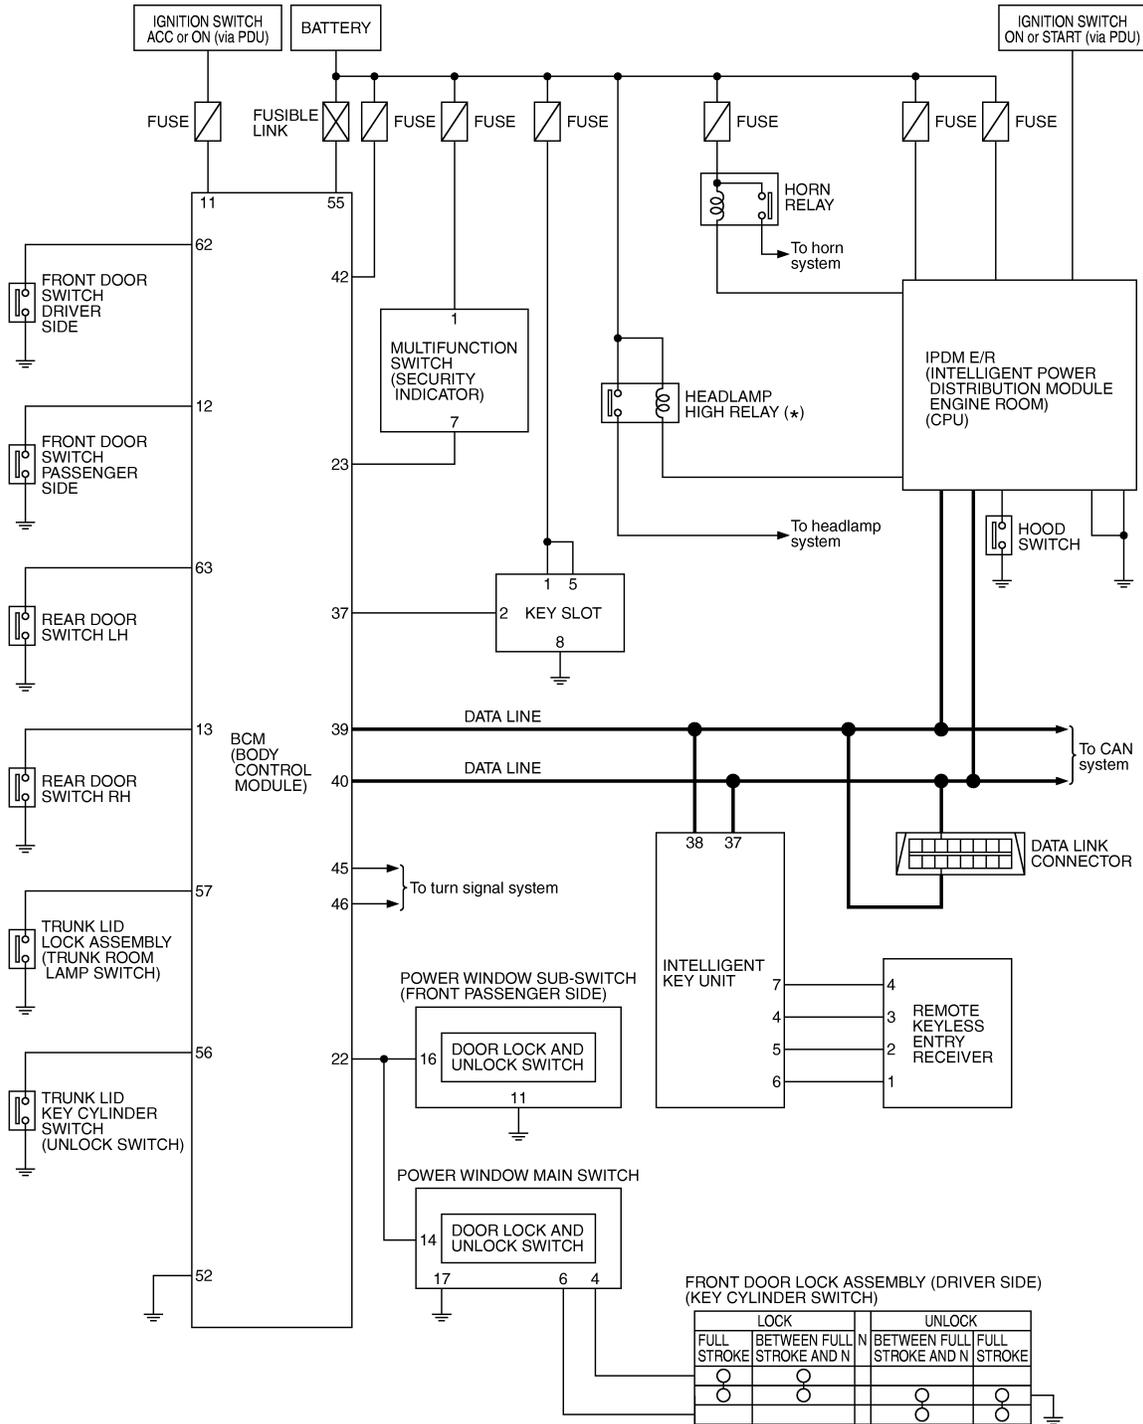

TIWT2620E



VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

Wiring Diagram - VEHSEC -

INFOID:000000005349458

BL-VEHSEC-01

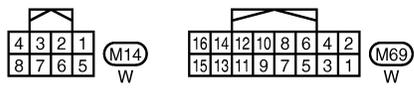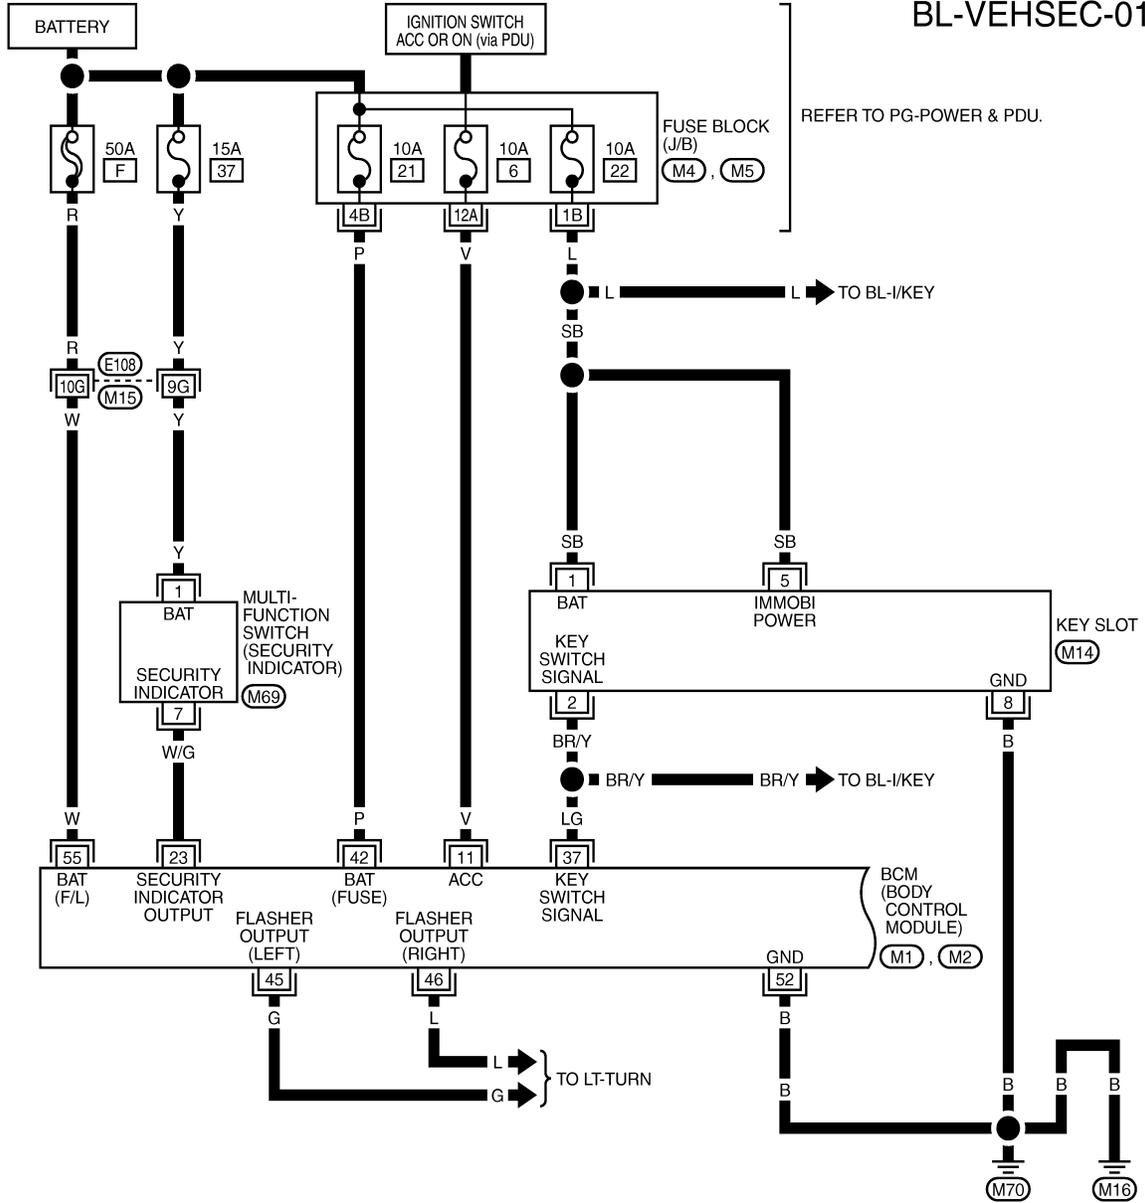

REFER TO THE FOLLOWING.



- (E108) - SUPER MULTIPLE JUNCTION (SMJ)
- (M4), (M5) - FUSE BLOCK - JUNCTION BOX (J/B)
- (M1), (M2) - ELECTRICAL UNITS

TIWT2621E

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

BL-VEHSEC-02

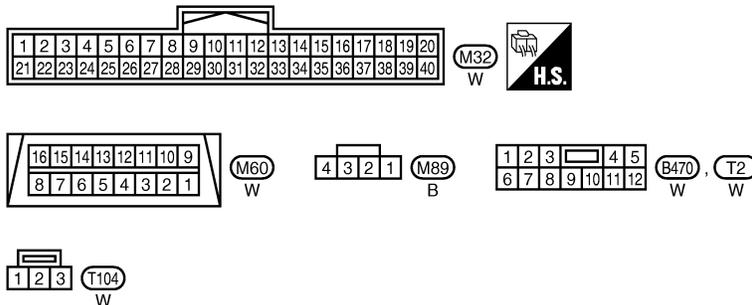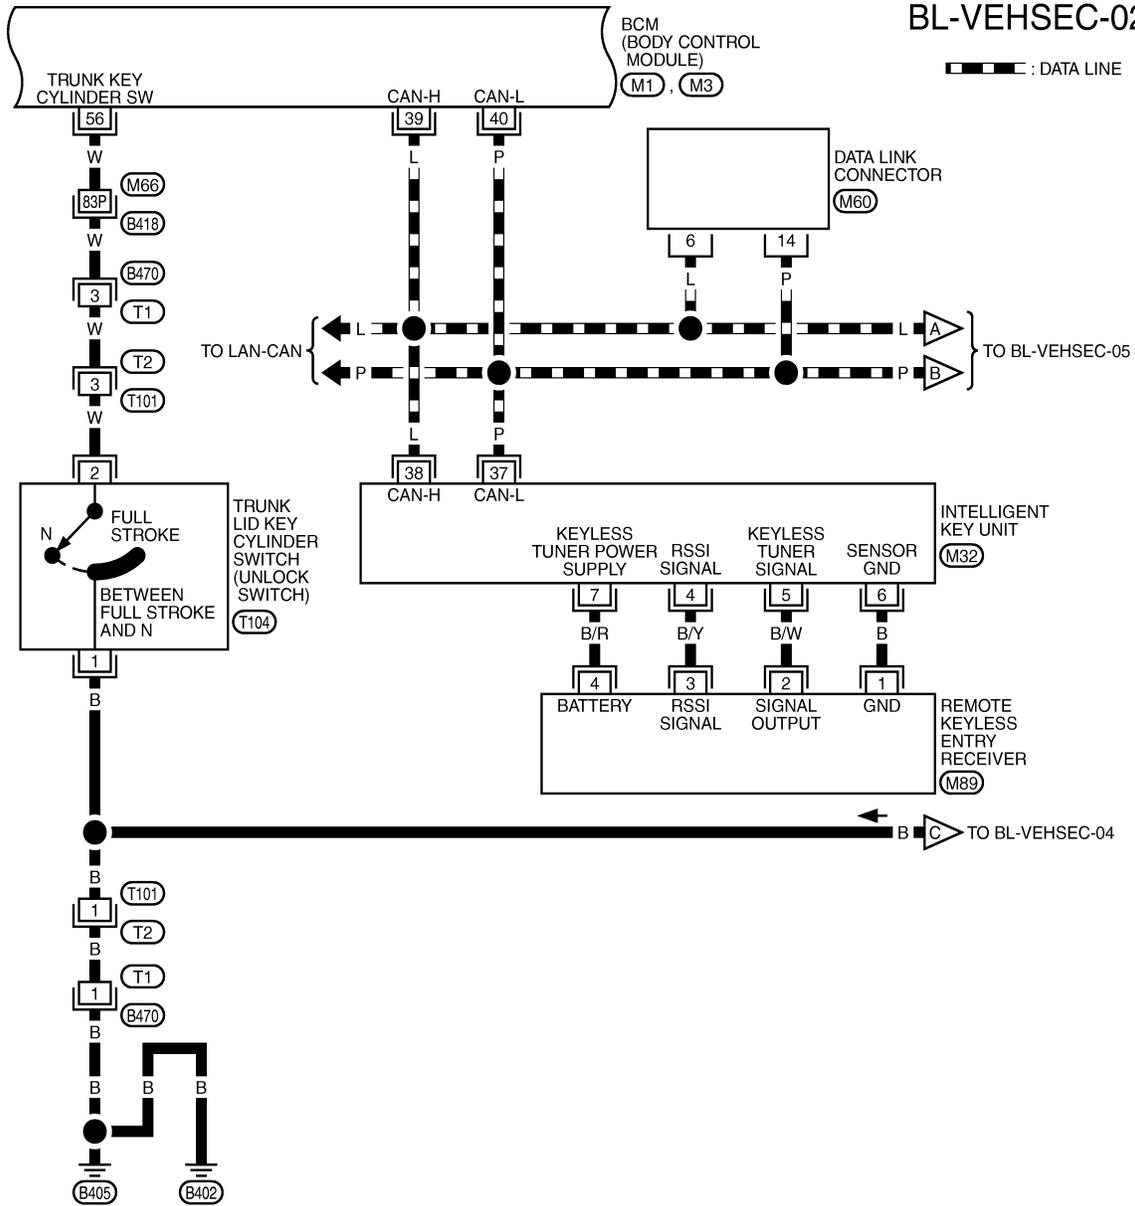

REFER TO THE FOLLOWING.





- (B418) - SUPER MULTIPLE JUNCTION (SMJ)
- (M1), (M3) - ELECTRICAL UNITS

TIWT2622E

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

BL-VEHSEC-03

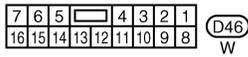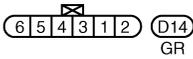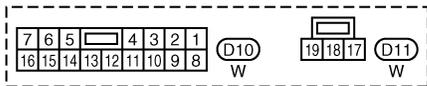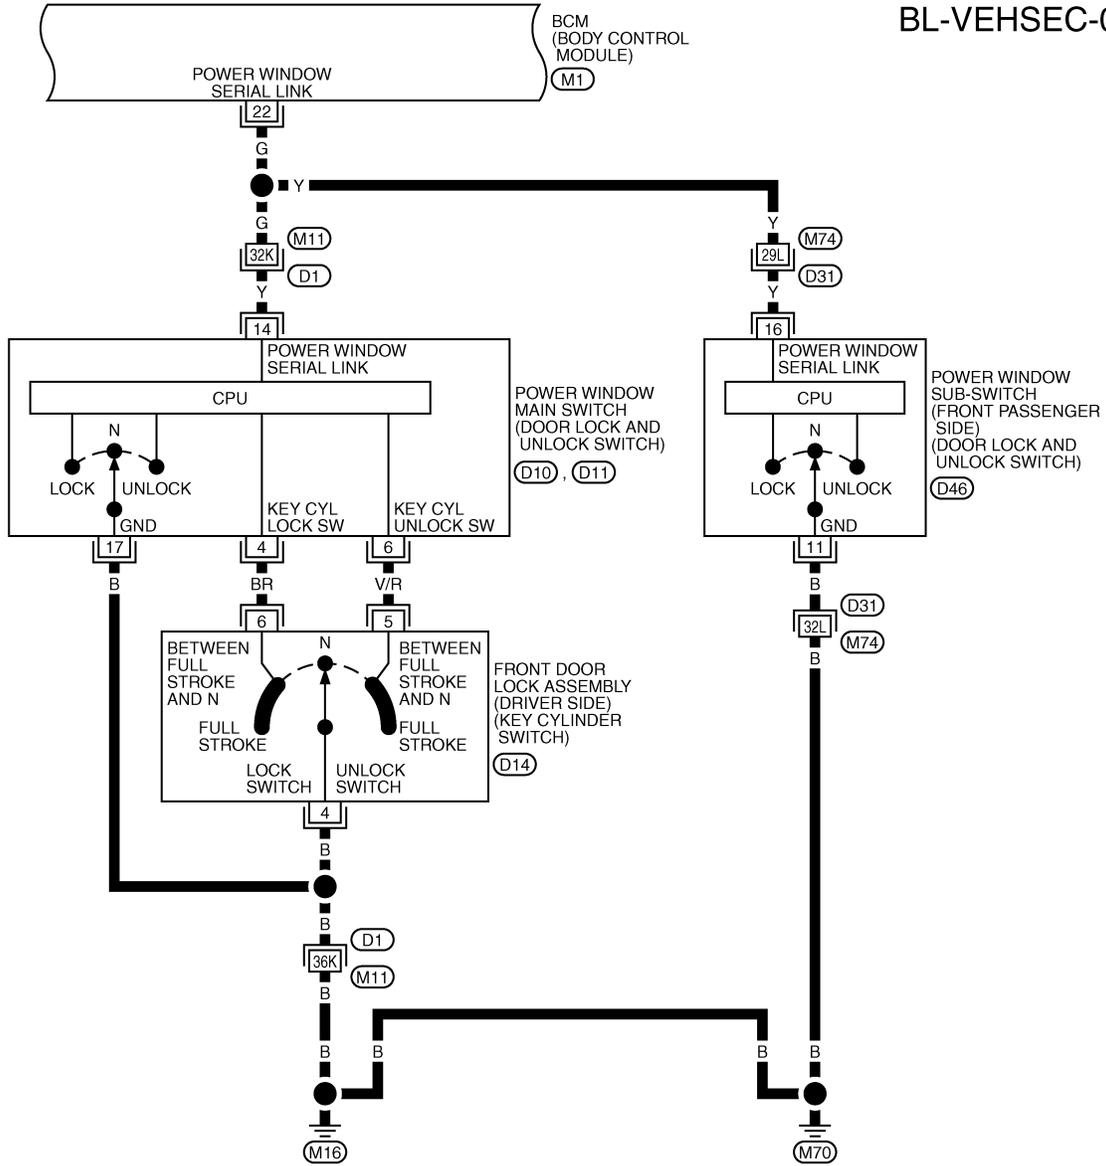

REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)
 (M1) -ELECTRICAL UNITS

TIWT1307E



A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

BL

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

BL-VEHSEC-04

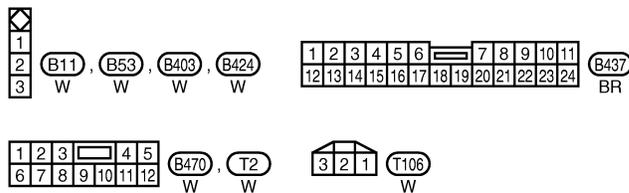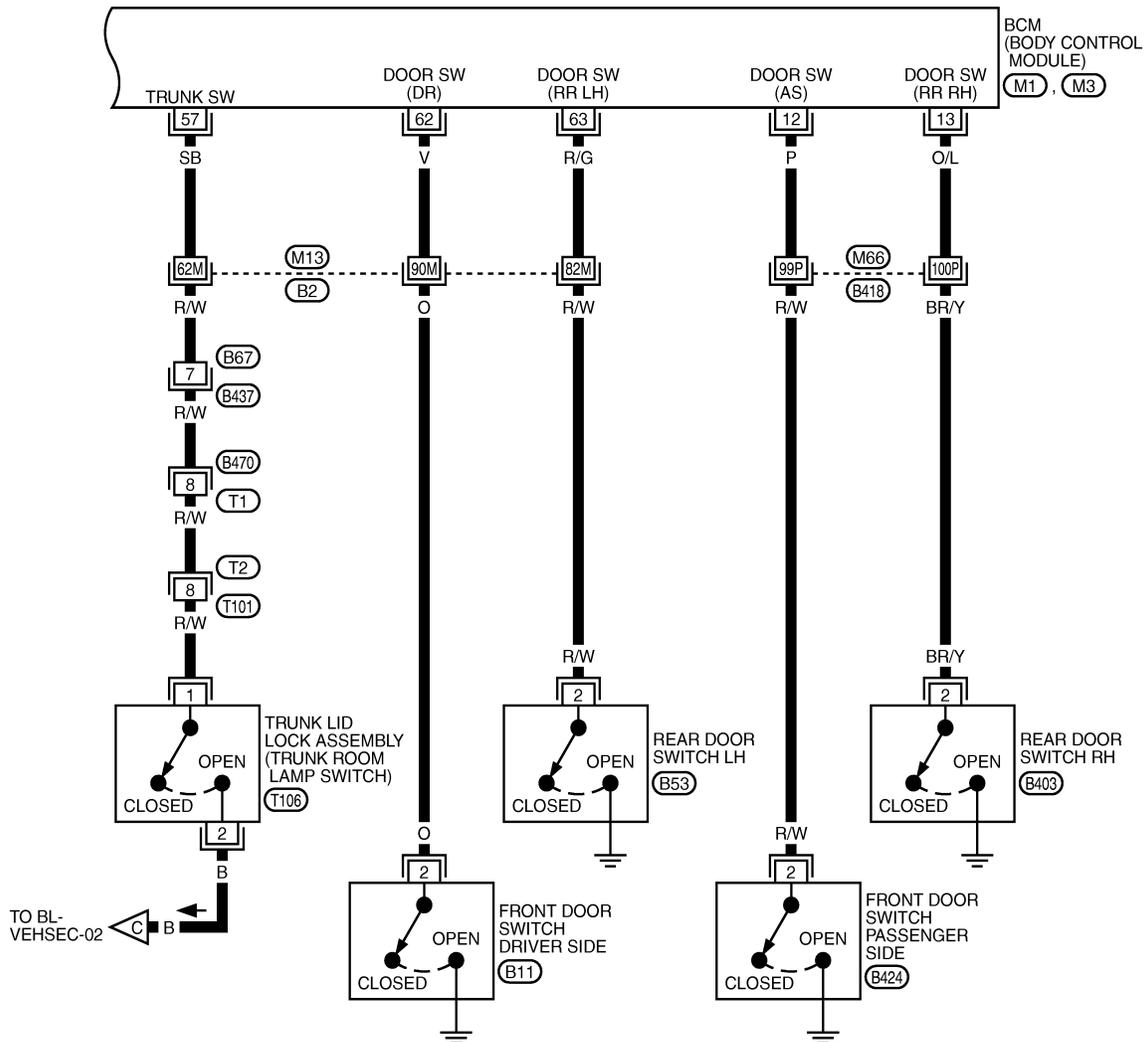

REFER TO THE FOLLOWING.

(B2), (B418) - SUPER MULTIPLE JUNCTION (SMJ)



(M1), (M3) - ELECTRICAL UNITS

TIWT2623E

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

BL-VEHSEC-05

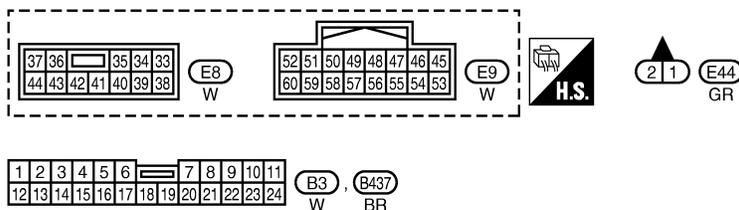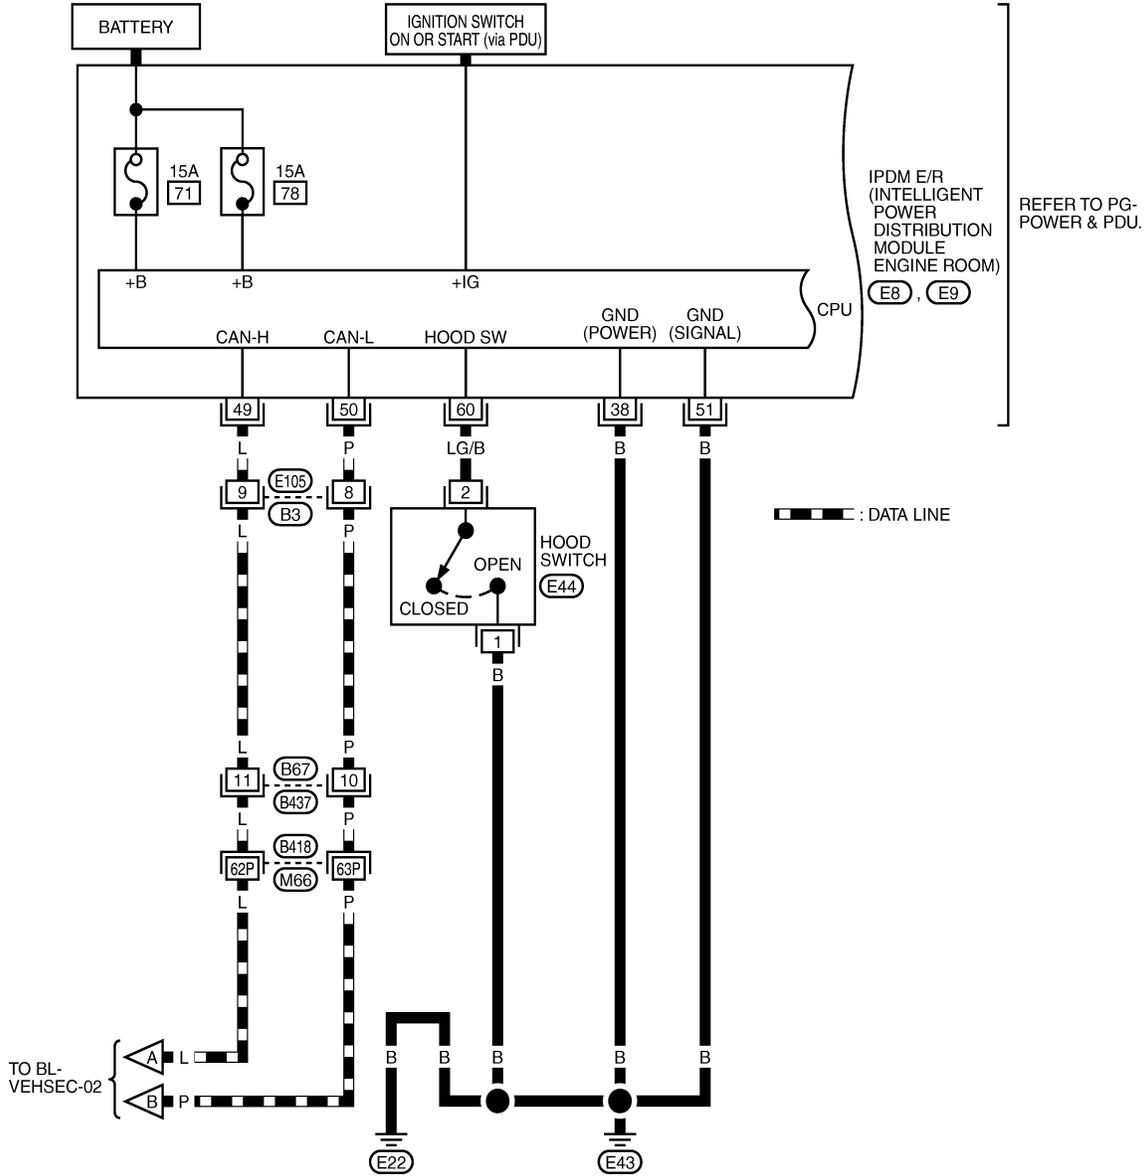

REFER TO THE FOLLOWING.

(B418) - SUPER MULTIPLE JUNCTION (SMJ)

TIWT2624E


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BL

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

BL-VEHSEC-06

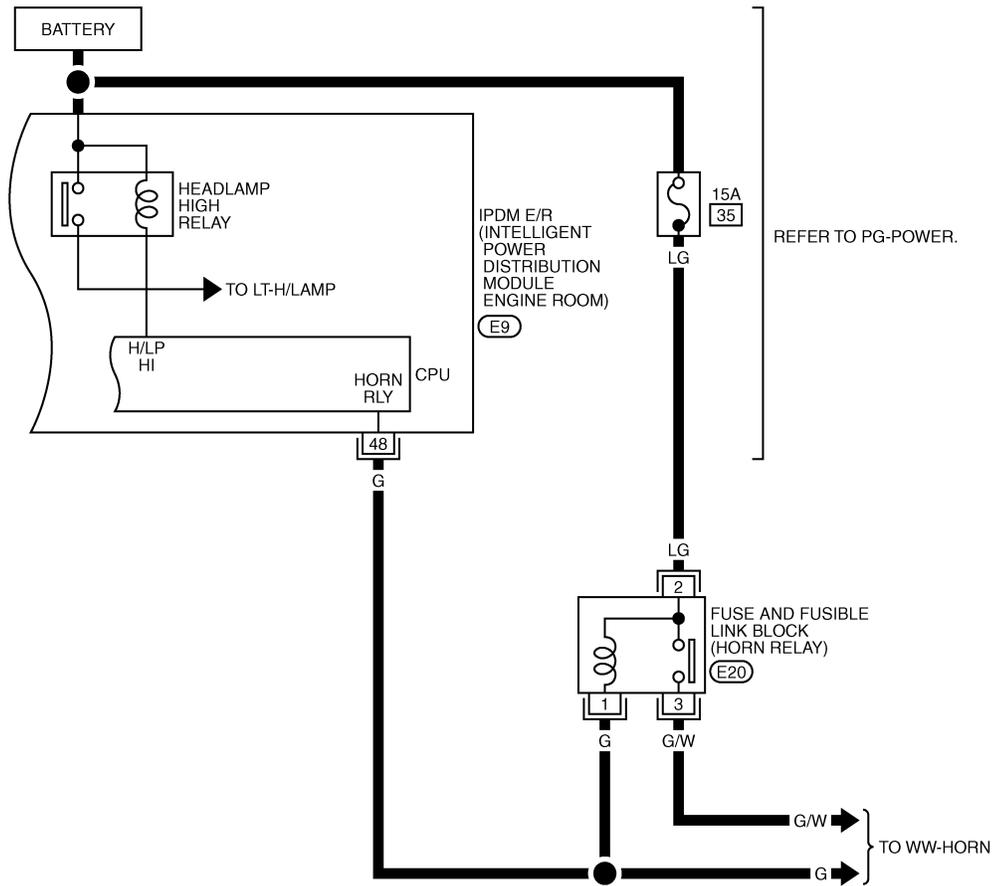


TIWT3149E

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

Terminal and Reference Value for BCM

INFOID:000000005349459

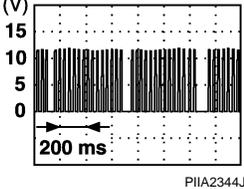Terminal	Wire color	Item	Signal Input/Output	Condition	Voltage (V) (Approx.)
11	V	Power supply (ACC)	Input	Ignition switch (ACC or ON position)	Battery voltage
12	P	Front door switch passenger side signal	Input	ON (Open) → OFF (Closed)	0 → Battery voltage
13	O/L	Rear door switch RH signal	Input	ON (Open) → OFF (Closed)	0 → Battery voltage
22	G	Power window serial link	Input/Output	Ignition switch ON or power window timer operating	
23	W/G	Security indicator lamp	Output	Goes off → Illuminates	Battery voltage → 0
37	LG	Key switch signal	Input	Key inserted in key slot → key removed from key slot	Battery voltage → 0
39	L	CAN-H	Input/Output	—	—
40	P	CAN-L	Input/Output	—	—
42	P	Power source (fuse)	Input	—	Battery voltage
52	B	Ground	—	—	0
55	W	Battery power supply (fusible link)	Input	—	Battery voltage
56	W	Trunk lid key cylinder switch	Input	Neutral → Unlock	Battery voltage → 0
57	SB	Trunk room lamp switch signal	Input	ON (Open) → OFF (Closed)	0 → Battery voltage
62	V	Front door switch driver side signal	Input	ON (Open) → OFF (Closed)	0 → Battery voltage
63	R/G	Rear door switch LH signal	Input	ON (Open) → OFF (Closed)	0 → Battery voltage

Terminal and Reference Value for IPDM E/R

INFOID:000000005349460

Terminal	Wire color	Item	Signal Input/Output	Condition	Voltage (V) (Approx.)
38	B	Ground (power)	—	—	0
48	G	Horn relay control signal	Output	Panic alarm is operating	0
				Other than above	Battery voltage
49	L	CAN-H	Input/Output	—	—
50	P	CAN-L	Input/Output	—	—
51	B	Ground (signal)	—	—	0
60	LG/B	Hood switch signal	Input	ON (Open) → OFF (closed)	0 → Battery voltage

CONSULT-III Function (BCM-THEFT ALM)

INFOID:000000005349461

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

BCM diagnosis position	Inspection items and diagnosis mode	Description
THEFT ALM	DATA MONITOR	Displays the input data to BCM in real time basis.
	ACTIVE TEST	Gives a drive signal to a load to check the operation.
	WORK SUPPORT	Changes setting of each function.

Work Support

Test Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT-III screen.

Data Monitor

Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
ACC ON SW	Indicates [ON/OFF] condition of ignition switch in ACC position.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
I-KEY DR UNLK	Indicates [ON/OFF] condition of unlock signal from driver side door request switch.
I-KEY AS UNLK	Indicates [ON/OFF] condition of unlock signal from passenger side door request switch.
I-KEY LOCK	Indicates [ON/OFF] condition of lock signal from Intelligent Key.
I-KEY UNLOCK	Indicates [ON/OFF] condition of unlock signal from Intelligent Key.
I-KEY TRNK/HAT	Indicates [ON/OFF] condition of trunk opener signal from Intelligent Key.
TRUNK OPNR SW	Indicates [ON/OFF] condition of trunk lid opener switch.
TRUNK CYL SW	Indicates [ON/OFF] condition of trunk lid opener cancel switch.
TRUNK OPN MNTR	Indicates [ON/OFF] condition of trunk room lamp switch.
HOOD SW	Indicates [ON/OFF] condition of hood switch.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
BACK DOOR SW	This is displayed even when it is not equipped.
KEY CYL LK-SW	Indicates [ON/OFF] condition of lock signal from front door key cylinder switch.
KEY CYL UN-SW	Indicates [ON/OFF] condition of unlock signal from front door key cylinder switch.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from door lock/unlock switch LH and RH.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from door lock/unlock switch LH and RH.

Active Test

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen is touched.
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation. The horns will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
HEADLAMP (HI)	This test is able to check vehicle security lamp operation. The headlamps will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
FLASHER	This test is able to check vehicle security hazard lamp operation. The hazard lamps will be activated after "ON" on CONSULT-III screen is touched.

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

Trouble Diagnosis Work Flow

INFOID:000000005349462

1.CHECK IN

Listen to customer complaint.

>> GO TO 2.

2.CHECK FUNCTION

Do "Power door lock system" and "Intelligent Key system" work properly?

YES >> GO TO 3.

NO >> Perform diagnosis and repair. Refer to [BL-42](#).

3.PERFORM DIAGNOSTIC PROCEDURE

Perform diagnostic procedure according to the symptom chart. Refer to [BL-212, "Trouble Diagnosis Symptom Chart"](#).

>> GO TO 4.

4.FINAL CHECK

Confirm that the malfunction is completely fixed by operating the system.

OK >> INSPECTION END

NG >> GO TO 3.

Preliminary Check

INFOID:000000005349463

1.INSPECTION START

Turn ignition switch "OFF" and pull out Intelligent Key from key slot.

NOTE:

Before starting operation check, open front windows.

>> GO TO 2.

2.CHECK SECURITY INDICATOR LAMP

1. Lock doors using Intelligent Key or mechanical key.
2. Make sure security indicator lamp illuminate for 30 seconds.

Security indicator lamp should illuminate.

OK >> GO TO 3.

NG >> Perform diagnosis and repair. Refer to [BL-212, "Diagnosis Procedure 1"](#).

3.CHECK ALARM FUNCTION

1. After 30 seconds, security indicator lamp will start blink.
2. Open any door or hood before unlocking with Intelligent Key or mechanical key, or open trunk lid without Intelligent Key or mechanical key.

Do alarm function properly.

OK >> GO TO 4.

NG >> Check the following.

- The vehicle security system does not phase in alarm mode. Refer to [BL-217, "Diagnosis Procedure 2"](#).
- Alarm (horn, headlamp and hazard lamp) do not operate. Refer to [BL-218, "Diagnosis Procedure 3"](#).

4.CHECK ALARM CANCEL OPERATION

Unlock any door or open trunk lid using Intelligent Key or mechanical key.

Alarm (horn, headlamp and hazard lamp) should stop.

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

OK >> INSPECTION END.

NG >> Perform diagnosis and repair. Refer to [BL-218, "Diagnosis Procedure 4"](#).

Trouble Diagnosis Symptom Chart

INFOID:000000005349464

Procedure		Diagnostic procedure	Refer to page
Symptom			
1	Vehicle security system cannot be set by	Door switch	Diagnostic Procedure 1 (Check door, hood and trunk switch) BL-212
		Lock / unlock switch	Diagnostic Procedure 6 (Check door lock / unlock switch) BL-219
		Door outside key	Diagnostic Procedure 3 (Check door key cylinder switch) BL-218
		Intelligent Key	Check Intelligent Key. BL-113
	—	If the above systems are "OK", replace BCM. BCS-14	
	Security indicator does not turn "ON".	Diagnostic Procedure 2 (Check security indicator lamp) BL-217	
		If the above systems are "OK", replace BCM. BCS-14	
2	* Vehicle security system does not alarm when	Any door is opened.	Diagnostic Procedure 1 (Check door, hood and trunk switch) BL-212 If the above systems are "OK", replace BCM. BCS-14
3	Vehicle security alarm does not activate.	Horn alarm	Diagnostic Procedure 4 (Check vehicle security horn alarm) BL-218
			If the above systems are "OK", replace BCM. BCS-14
		Head lamp alarm	Diagnostic Procedure 5 (Check head lamp alarm) BL-219
			If the above systems are "OK", replace BCM. BCS-14
Hazard lamp	Diagnostic Procedure 7 (Check hazard lamp alarm) BL-219		
	If the above systems are "OK", replace BCM. BCS-14		
4	Vehicle security system cannot be canceled by	Door outside key	Diagnostic Procedure 3 (Check door key cylinder switch) BL-218 If the above systems are "OK", replace power window main switch. EI-45
		Intelligent Key	Check remote keyless entry function. BL-42
			If the above systems are "OK", replace BCM. BCS-14

*: Make sure the system is in the armed phase.

Diagnosis Procedure 1

INFOID:000000005349465

CHECK DOOR SWITCH

1. CHECK DOOR SWITCH INPUT SIGNAL

With CONSULT-III

Check door switches ("DOOR SW-DR", "DOOR SW-AS", "DOOR SW-RL" and "DOOR SW-RR") in "DATA MONITOR" mode with CONSULT-III.

Monitor item	Condition
DOOR SW-DR	CLOSE → OPEN: OFF → ON
DOOR SW-AS	
DOOR SW-RL	
DOOR SW-RR	

Without CONSULT-III

1. Turn ignition switch OFF.
2. Check voltage between BCM connector and ground.


VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

Terminals		Door condition	Voltage (V) (Approx.)
(+)	(-)		
BCM connector	Terminal		
M1	12	Front passenger side OPEN	0
		Front passenger side CLOSE	Battery voltage
	13	Rear RH side OPEN	0
		Rear RH side CLOSE	Battery voltage
M3	62	Driver side OPEN	0
		Driver side CLOSE	Battery voltage
	63	Rear LH side OPEN	0
		Rear LH side CLOSE	Battery voltage

OK or NG

- OK >> Door switch circuit is OK.
 NG >> GO TO 2.

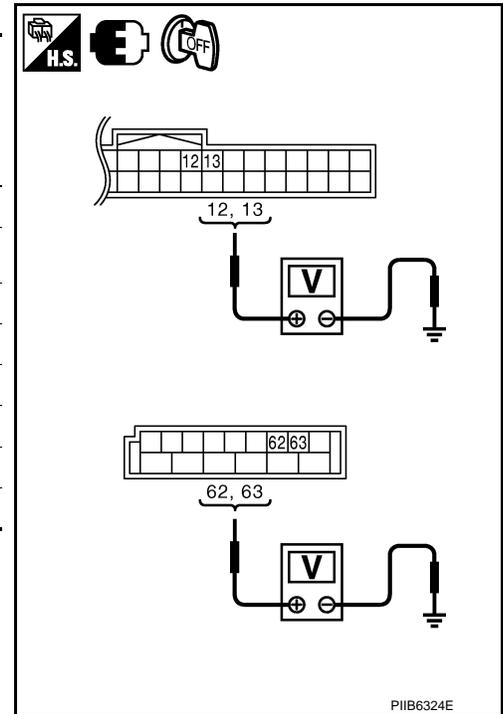


2. CHECK DOOR SWITCH

1. Turn ignition switch OFF.
2. Disconnect door switch connector.
3. Check door switch.

Terminal		Door switch	Continuity
Door switch			
2	Ground part of door switch	Pushed	No
		Released	Yes

OK or NG

- OK >> GO TO 3.
 NG >> Replace malfunction door switch.

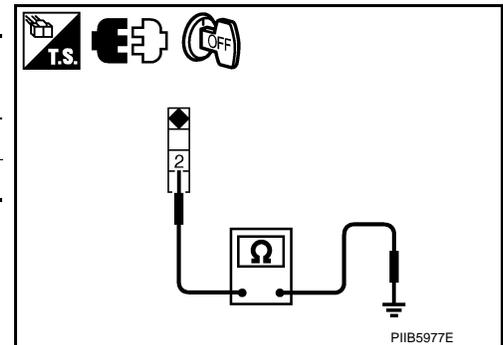

3. CHECK DOOR SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM connector and door switch connector.

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
BCM connector	Terminal	Door switch connector	Terminal	
M1	12	B424	2	Yes
	13	B403		
M3	62	B11		
	63	B53		

3. Check continuity between BCM connector and ground.

A		Ground	Continuity
BCM connector	Terminal		
M1	12	Ground	No
	13		
M3	62		
	63		

OK or NG

OK >> GO TO 4.

NG >> Repair or replace harness between BCM and door switch.

4. CHECK BCM OUTPUT SIGNAL


1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

Terminals		Voltage (V) (Approx.)	
(+)	(-)		
BCM connector	Terminal	Ground	Battery voltage
	M1		
13			
M3	62		
	63		


OK or NG

OK >> Check the condition of harness and connector.

NG >> Replace BCM.

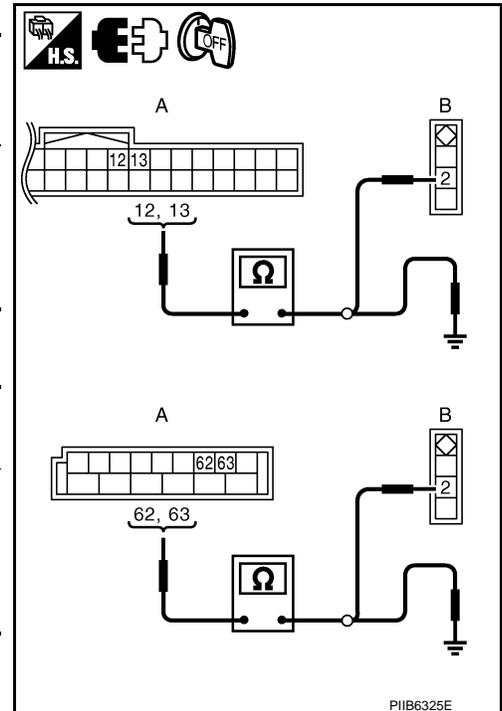

PIIB6325E

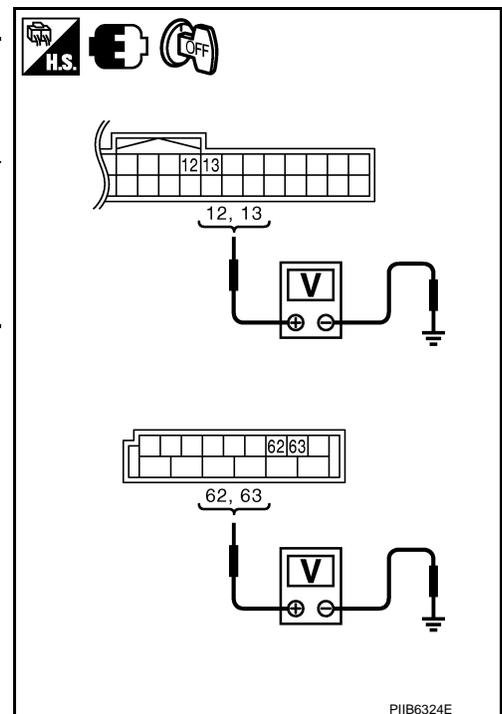

PIIB6324E

CHECK HOOD SWITCH

1. CHECK HOOD SWITCH

Check hood switch and hood fitting condition.

OK or NG

OK >> GO TO 2.

NG >> Adjust installation of hood switch.

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

2. CHECK HOOD SWITCH INPUT SIGNAL

With CONSULT-III

Check ("HOOD SW") in "DATA MONITOR" mode with CONSULT-III.

- When hood is opened:

HOOD SW : ON

- When hood is closed:

HOOD SW : OFF

Without CONSULT-III


Check voltage between IPDM E/R connector and ground.

IPDM E/R connector	Terminals		Condition of hood	Voltage (V) (Approx.)
	(+)	(-)		
E9	60	Ground	OPEN	0
			CLOSE	Battery voltage

OK or NG

OK >> Hood switch is OK, and go to "TRUNK ROOM LAMP SWITCH CHECK".

NG >> GO TO 3.

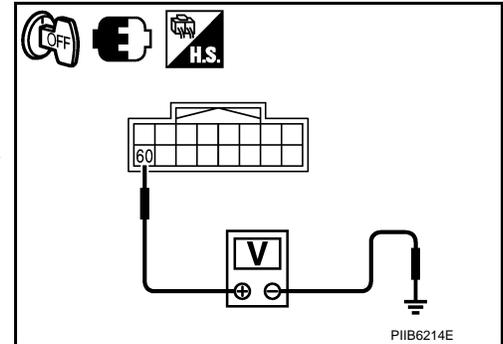

3. CHECK HOOD SWITCH


- Turn ignition switch OFF.
- Disconnect hood switch connector.
- Check continuity between hood switch terminals 1 and 2.

Hood switch	Terminals		Condition of hood switch	Continuity
E44	1	2	Pressed	No
			Released	Yes

OK or NG

OK >> GO TO 4.

NG >> Replace hood switch.

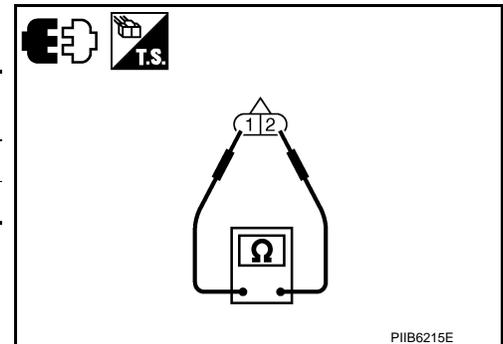

4. CHECK HOOD SWITCH CIRCUIT

- Disconnect IPDM E/R connector.
- Check continuity between hood switch connector and IPDM E/R connector.


A		B		Continuity
Hood switch connector	Terminal	IPDM E/R connector	Terminal	
E44	2	E9	60	Yes

- Check continuity between hood switch connector and ground.

A		Ground	Continuity
Hood switch connector	Terminal		
E44	2		No

OK or NG

OK >> GO TO 5.

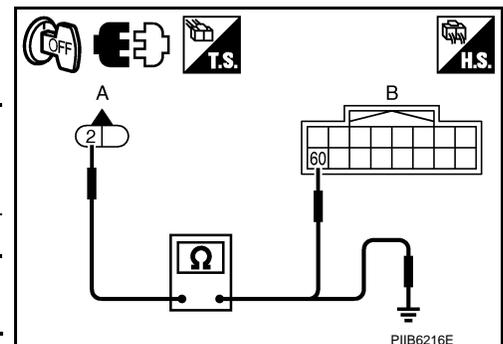

VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

NG >> Repair or replace hood switch harness.


5. CHECK HOOD SWITCH GROUND CIRCUIT

Check continuity between hood switch connector and ground.

Hood switch	Terminal	Ground	Continuity
E44	1		Yes

OK or NG

- OK >> Check condition of harness and connector.
 NG >> Repair or replace hood switch harness.

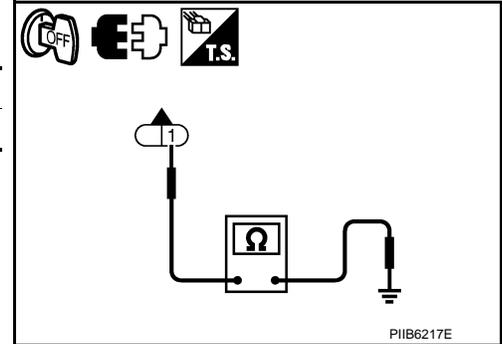

CHECK TRUNK ROOM LAMP SWITCH

1. CHECK TRUNK ROOM LAMP SWITCH INPUT SIGNAL

With CONSULT-III

Check ("TRUNK SW") in "DATA MONITOR" mode with CONSULT-III.

Monitor item	Condition
TRUNK SW	OPEN : ON
	CLOSE : OFF

Without CONSULT-III

- Turn ignition switch OFF.
- Check voltage between BCM connector and ground.

Terminals		Trunk condition	Voltage (V) (Approx.)
(+)	(-)		
BCM connector	Terminal	OPEN	0
M3	57	CLOSE	Battery voltage

OK or NG

- OK >> Trunk room lamp switch circuit is OK.
 NG >> GO TO 2.

2. CHECK TRUNK ROOM LAMP SWITCH

- Turn ignition switch OFF.
- Disconnect trunk lid lock assembly connector.
- Check trunk room lamp switch.



Terminal		Trunk condition	Continuity
Trunk room lamp switch			
1	2	OPEN	Yes
		CLOSE	No

OK or NG

- OK >> GO TO 3.
 NG >> Replace trunk room lamp switch.

3. CHECK TRUNK ROOM LAMP SWITCH CIRCUIT

- Disconnect BCM connector.
- Check continuity between BCM connector and trunk lid lock assembly connector.

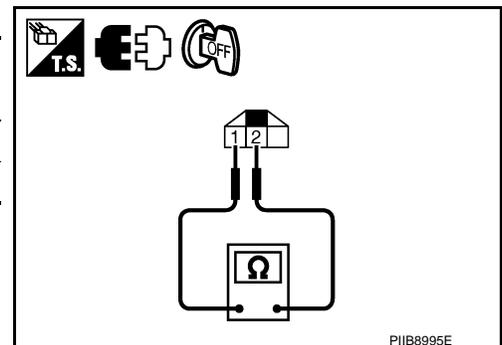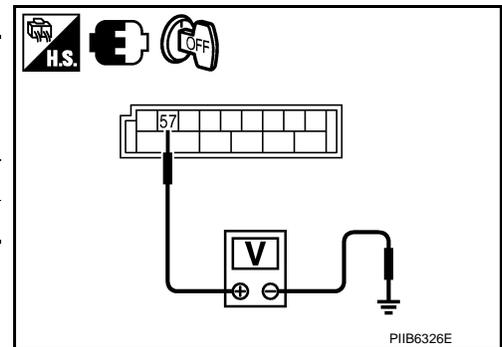


VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

A		B		Continuity
BCM connector	Terminal	Trunk lid lock assembly connector	Terminal	
M3	57	T106	1	Yes

3. Check continuity between BCM connector and ground.

A		Ground	Continuity
BCM connector	Terminal		
M3	57		No

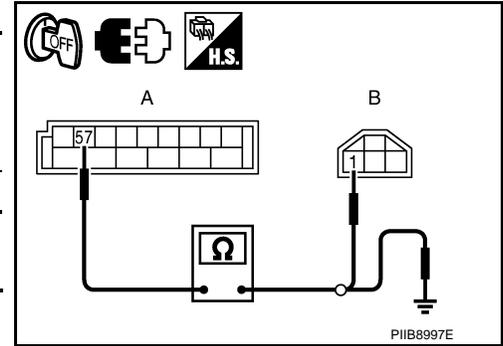

OK or NG

OK >> GO TO 4.

NG >> Repair or replace harness between BCM and trunk room lamp switch.

4. CHECK TRUNK ROOM LAMP SWITCH GROUND CIRCUIT


Check continuity between trunk lid lock assembly connector and ground.

Trunk lid lock assembly connector	Terminal	Ground	Continuity
T106	2		

OK or NG

OK >> GO TO 5.

NG >> Repair or replace trunk room lamp switch ground circuit.

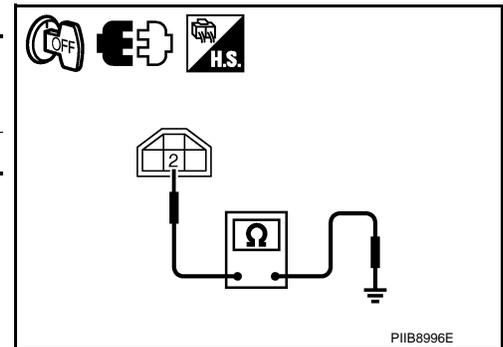

5. CHECK BCM OUTPUT SIGNAL


1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
BCM connector	Terminal	
M3	57	Battery voltage

OK or NG

OK >> Check the condition of harness and connector.

NG >> Replace BCM.

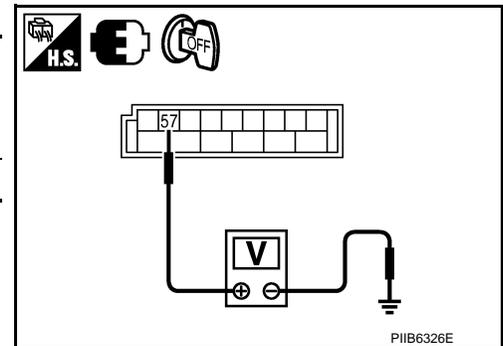

Diagnosis Procedure 2

INFOID:000000005349466

CHECK SECURITY INDICATOR LAMP

1. SECURITY INDICATOR LAMP ACTIVE TEST

With CONSULT-III

Check ("THEFT IND") in "ACTIVE TEST" mode with CONSULT-III.

Perform operation shown on display indicator lamp should illuminate.

OK or NG

VEHICLE SECURITY (THEFT WARNING) SYSTEM


< SERVICE INFORMATION >

- OK >> Security indicator lamp is OK.
 NG >> GO TO 2.

2.CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect security indicator lamp connector.
3. Check voltage between multi-function switch (security indicator lamp) connector and ground.

Terminals			Voltage (V) (Approx.)
(+)		(-)	
Security indicator lamp connector	Terminal		
M69	1	Ground	Battery voltage

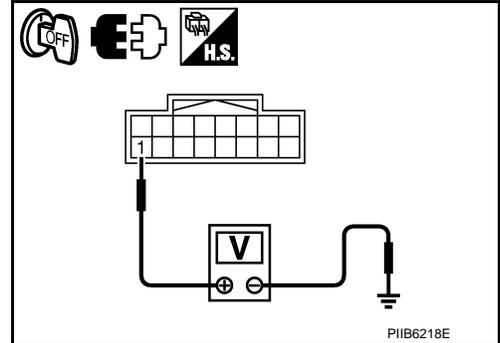

OK or NG

- OK >> Check the following.
- Harness for open or short between BCM and multi-function switch (security indicator lamp)
 - Security indicator lamp condition
- NG >> Check the following.
- 15A fuse [No.37, located in fuse block (J/B)]
 - Harness for open or short between multi-function switch (security indicator lamp) and fuse

Diagnosis Procedure 3

INFOID:000000005349467

CHECK FRONT DOOR KEY CYLINDER SWITCH

1.CHECK KEY CYLINDER SWITCH OPERATION

Check if door key cylinder switch using mechanical key.

Do doors lock / unlock when using the mechanical key?

- YES >> Front door key cylinder switch operation is OK.
 NO >> Check door key cylinder switch circuit. Refer to [BL-40. "Door Key Cylinder Switch Check"](#).

Diagnosis Procedure 4

INFOID:000000005349468

CHECK VEHICLE SECURITY HORN ALARM

First perform the "SELF-DIAG RESULTS" of "BCM" with CONSULT-III, then perform the trouble diagnosis of malfunction system indicated in "SELF-DIAG RESULTS" of "BCM". Refer to [BCS-11. "CONSULT-III Function \(BCM\)"](#).

1.CHECK HORN OPERATION

Check if horn sounds with horn switch.

Does horn operate?

- Yes >> GO TO 2.
 No >> Check horn circuit. Refer to [WW-42](#).

2.CHECK IPDM E/R INPUT SIGNAL

Check voltage between IPDM E/R connector and ground.


VEHICLE SECURITY (THEFT WARNING) SYSTEM

< SERVICE INFORMATION >

Terminals		Voltage (V) (Approx.)
(+)		
IPDM E/R connector	Terminal	(-)
E9	48	Ground
		Battery voltage

OK or NG

- OK >> Replace IPDM E/R.
- NG >> GO TO 3.

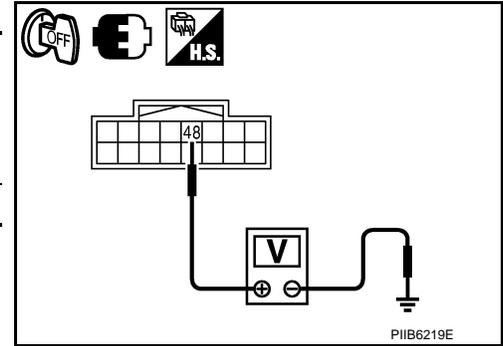


3. CHECK HORN RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R and horn relay connector.
3. Check continuity between IPDM E/R connector and horn relay connector.

A		B		Continuity
IPDM E/R connector	Terminal	Horn relay connector	Terminal	
E9	48	E20	1	Yes

OK or NG

- OK >> Check harness connection.
- NG >> Repair or replace harness.

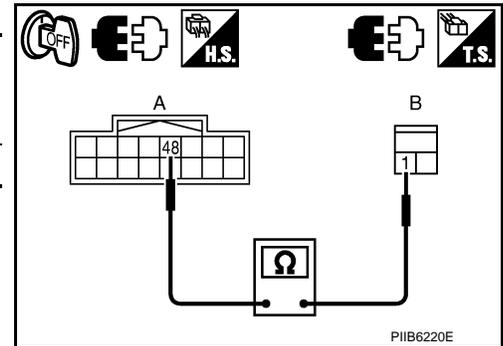

Diagnosis Procedure 5

CHECK VEHICLE SECURITY HEADLAMP ALARM

1. CHECK HEADLAMP OPERATION

Check if headlamp operate by lighting switch.

Does headlamp come on when turning switch "ON"?

- YES >> Headlamp circuit is OK.
- NO >> Check headlamp system. Refer to [LT-6](#) or [LT-35](#).

Diagnosis Procedure 6

CHECK DOOR LOCK AND UNLOCK SWITCH

1. CHECK DOOR LOCK AND UNLOCK SWITCH INPUT SIGNAL

Check if power door lock operated by door lock and unlock switch.

Do doors lock / unlock when using each door lock and unlock switches?

- YES >> Door lock and unlock switch is OK.
- NO >> Check door lock and unlock switch. Refer to [BL-35, "Check Door Lock and Unlock Switch"](#)

Diagnosis Procedure 7

CHECK VEHICLE SECURITY HAZARD LAMP ALARM

1. CHECK HAZARD WARNING LAMP

Does hazard warning lamp flash with hazard switch?

YES or NO

- YES >> Hazard warning lamp circuit is OK.
- NO >> Check hazard circuit. Refer to [LT-152](#).

INFOID:000000005349469

INFOID:000000005349470

INFOID:000000005349471


IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

Component Parts and Harness Connector Location


INFOID:000000005349472

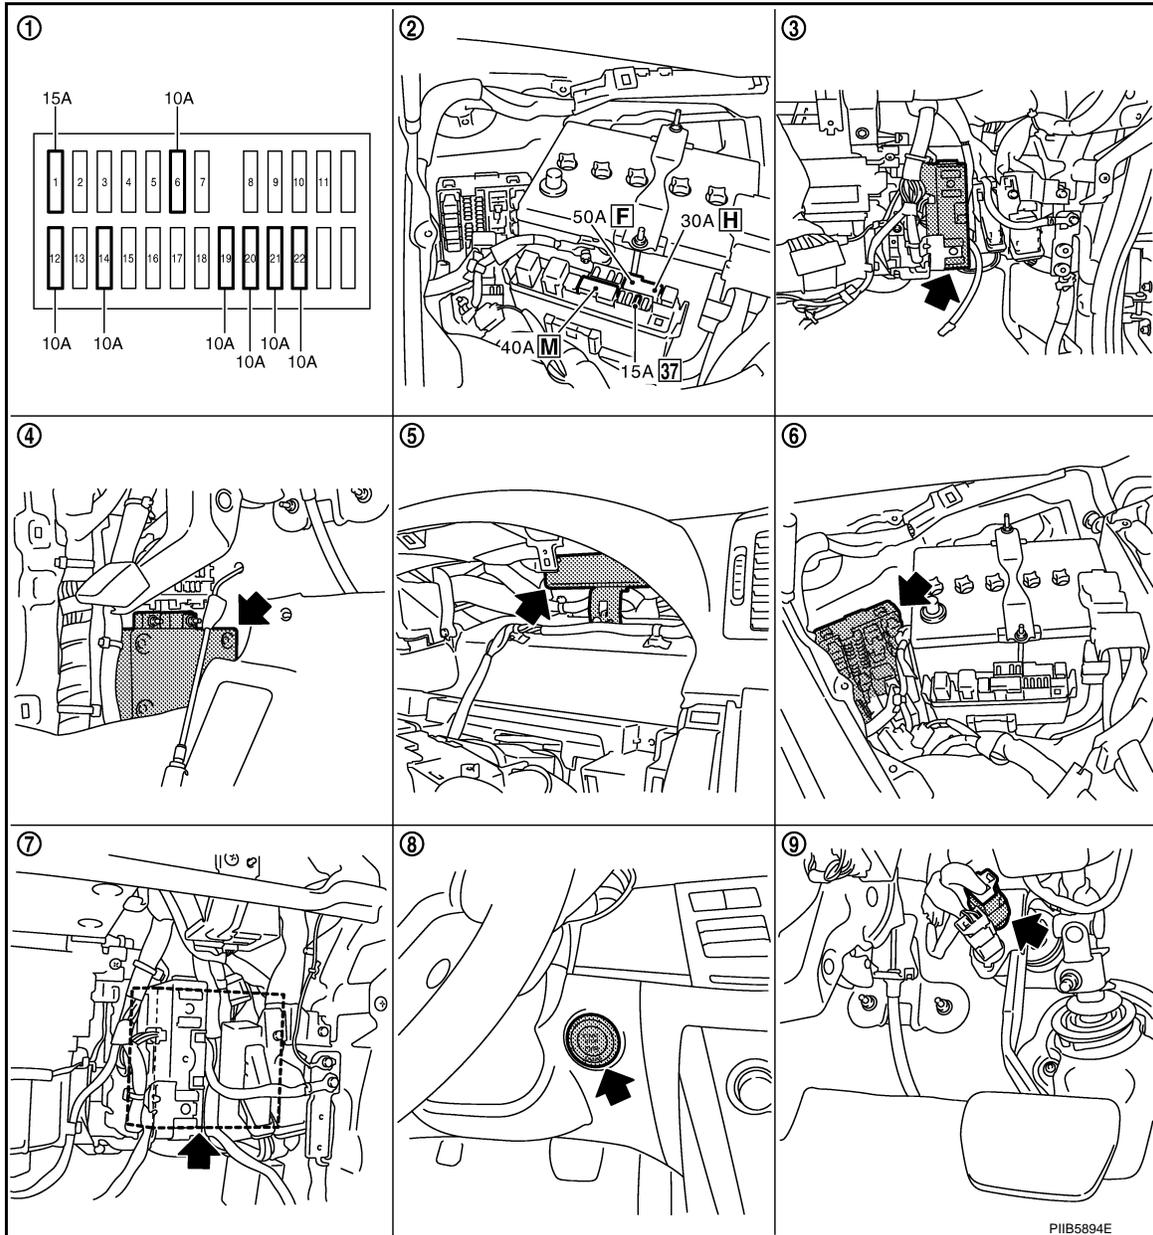

- | | | |
|--|---|---|
| 1. Fuse block (J/B) fuse layout | 2. Fuse and fusible link box | 3. BCM M1, M2, M3 (View with instrument lower panel RH removed) |
| 4. Intelligent key unit M32, M33 (View with dash side finisher LH removed) | 5. PDU M30, M31 (View with combination meter removed) | 6. IPDM E/R E4, E9 (Engine room) |
| 7. ECM M71 (View with instrument lower panel RH removed) | 8. Push-button ignition switch M27 | 9. Stop lamp switch E124 |

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

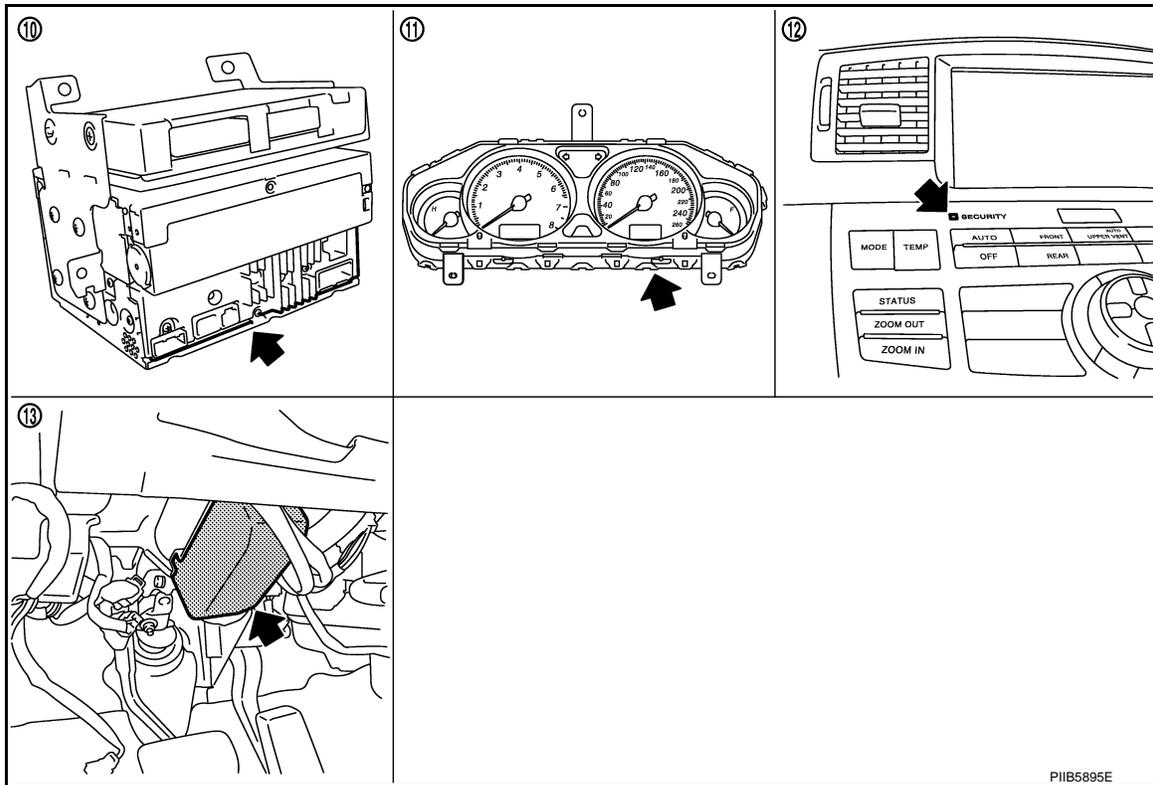

10. Unified meter and A / C amp M64, M65 11. Combination meter M52

12. Multifunction switch M69
(Security indicator)

13. Steering lock unit M35
(Steering column)

NOTE:

If customer reports a “No start” condition, request ALL KEYS to be brought to an INFINITI dealer to check for an IVIS (NATS) malfunction.

System Description

INFOID:000000005349473

DESCRIPTION

- The IVIS (NATS) is an anti-theft system by registering an Intelligent Key ID in to the vehicle and prevents the engine being started by an unregistered Intelligent Key. It has a higher protection against auto thefts that duplicates mechanical key.
- It performs the ID verification when starting the engine in the same way as the Intelligent Key system. But, it performs the IVIS (NATS) ID verification when inserting the Intelligent Key and performs the Intelligent Key ID verification when carrying the Intelligent Key.
- The Intelligent Key system of FUGA (Y50) is not the same as the conventional models. The mechanical key integrated in the Intelligent Key cannot start the engine. When the Intelligent Key battery is discharged, the IVIS (NATS) ID verification memorized to the transponder integrated with Intelligent Key is performed by inserting the Intelligent Key into the key slot. If the verification results are OK, the engine start operation can be performed by the push-button ignition switch operation.
- Locate the security indicator and apply the anti-theft system equipment sticker, forewarn that the IVIS (NATS) is onboard with the model.
- The security indicator always blinks when the Intelligent Key is removed from the key slot and when the power supply position is in LOCK position.
- Intelligent Key can be registered up to 4 keys (Including the standard ignition key) on request from the owner.
- The specified registration is required when replacing ECM, BCM or Intelligent Key. The registrations procedure for IVIS (NATS) and registration procedure for Intelligent Key when installing the Intelligent Key unit, refer to CONSULT-III Operation Manual NATS-IVIS/NVIS.

A
B
C
D
E
F
G
H

BL

J
K
L
M
N
O
P

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

- Possible symptom of IVIS (NATS) malfunction is “Engine cannot start”. In FUGA (Y50), the engine can be started with the Intelligent Key system and IVIS (NATS). Identify the possible causes according to “Work Flow”, Refer to [BL-241, "Work Flow"](#).
- If ECM other than Genuine NISSAN is installed, the engine cannot be started. For ECM replacement procedure, refer to [BL-224, "ECM Re-Communicating Function"](#).

PRECAUTIONS FOR KEY REGISTRATION

- The key registration is a procedure that erases the current IVIS (NATS) ID once, and then re register a new ID operation. Therefore the registered Intelligent Key is necessary for this procedure. Before starting the registration operation collect all registered Intelligent Key from the customer
- When registering the Intelligent Key, 2 registration procedures [IVIS (NATS) ID registration and Intelligent Key ID registration] should be performed. The IVIS (NATS) ID registration is the procedure that registers the ID stored into the transponder (integrated into Intelligent Key) to the BCM. The Intelligent Key ID registration is the procedure that registers the ID to the Intelligent Key unit. Each registration procedure should be done separated.
- When performing the Intelligent Key system registration only, the engine cannot be started by inserting the key into the key slot. When performing the IVIS (NATS) registration only, the engine cannot be started by the operation when carrying the key. The registrations of both systems should be performed.

SECURITY INDICATOR

- Warn the outside that the vehicle is the model with IVIS (NATS).
- The security indicator always blinks when the Intelligent Key is removed from the key slot and when the ignition switch is in LOCK position.


NOTE:

Because security indicator is highly efficient, the battery is barely affected.

Operation Description

INFOID:000000005349474

SYSTEM DIAGRAM

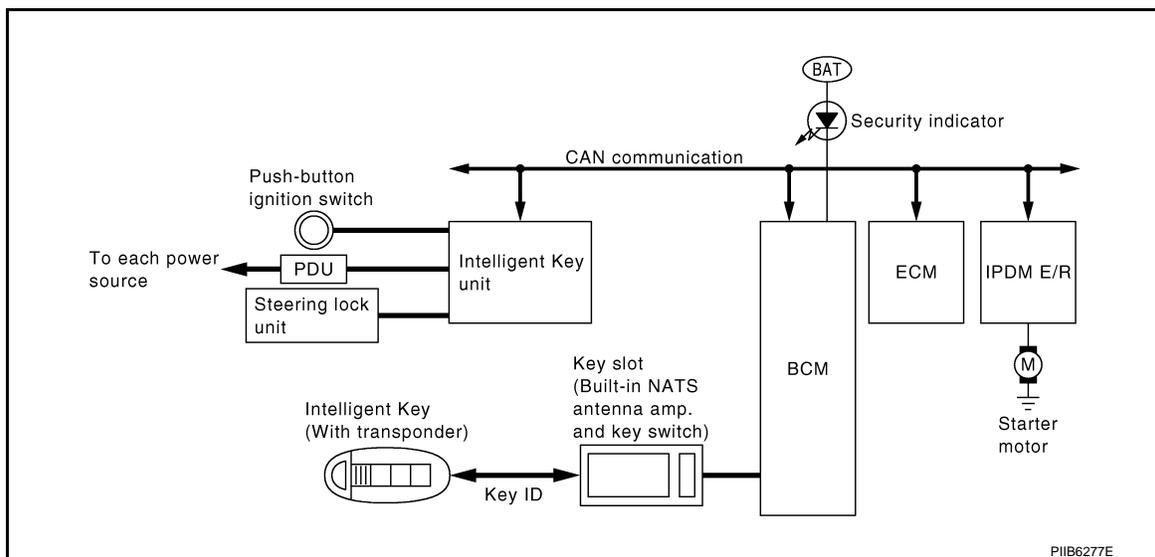

OPERATION WHEN INSERTING TO KEY SLOT

1. When inserting the Intelligent Key (with transponder) into the key slot, the key switch in the key slot turns ON, and then it is detected that the Intelligent Key is inserted.
2. When pressing the push-button ignition switch at that time, BCM starts the IVIS (NATS) antenna amplifier integrated with the key slot and starts the IVIS (NATS) ID communication with the transponder integrated with the Intelligent Key.
3. BCM sends the IVIS (NATS) ID verification result to ECM via CAN communication and performs the ID verification.
4. If the IVIS (NATS) ID verification result is OK, BCM sends the key ID verification OK signal to Intelligent Key unit via CAN communication line.
5. The Intelligent Key unit sends the steering unlock signal to the steering lock unit when receiving the signal. Then, it sends each power supply request signal to PDU (Power Distribution Unit) after unlocking the steering lock.

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

6. If the Intelligent Key unit judges that the engine start condition is satisfied, it sends the starter request signal via CAN communication to IPDM E/R and turns the starter motor relay ON.
7. The steering lock unit unlocks the latch when receiving the signal. PDU starts the power distribution according to the power supply position when receiving the signal.

NOTE:

If it is not in the engine start condition*, the starter motor relay is turned OFF. Therefore, the engine cannot be started and the power distributions of ACC, ON, and LOCK are performed only according to the push-button ignition switch operation.

*: For the engine start condition, refer to "PUSH-BUTTON IGNITION SWITCH OPERATION PROCEDURE".

OPERATION WHEN INTELLIGENT KEY IS CARRIED

By carrying the Intelligent Key, the engine start/stop operation can be performed only when pushing the push-button ignition switch.

For the details of the function, refer to [BL-115](#).

PUSH-BUTTON IGNITION SWITCH OPERATION PROCEDURE

The power supply position changing operation can be performed with the following operation.

NOTE:

- When an Intelligent Key is carried and when it is inserted to the key slot, the following operation is the same.
- When starting the engine, the Intelligent Key unit monitors the engine start conditions (brake pedal operation, A/T selector lever position, vehicle speed, and steering lock condition).
- Unless each start condition is fulfilled, the engine will not response regardless of how many times the push-button ignition switch is pushed. At that time, illumination repeats the position in the order of LOCK → ACC → ON → LOCK.

Power supply position	Engine start/stop condition		Engine switch operation frequency
	Brake pedal	A/T selector lever position	
LOCK → ACC	Not depressed (When A/T selector lever is in any position other than P or N, there will be no effect even if it is depressed.)	Any position other than P or N (When the brake pedal is not depressed, there will be no effect even if the A/T selector lever is in P or N position.)	1
LOCK → ACC → ON	Not depressed (When A/T selector lever is in any position other than P or N, there will be no effect even if it is depressed.)	Any position other than P or N (When the brake pedal is not depressed, there will be no effect even if the A/T selector lever is in P or N position.)	2
LOCK → ACC → ON → LOCK	Not depressed (When A/T selector lever is in any position other than P or N, there will be no effect even if it is depressed.)	Any position other than P or N (When the brake pedal is not depressed, there will be no effect even if the A/T selector lever is in P or N position.)	3
LOCK → START ACC → START ON → START (Engine start)	Depressed	P or N position (*1)	1 [If the switch is pushed once, the engine starts from any power supply position (LOCK, ACC, and ON)]
Engine start condition → LOCK (Engine stop)	—	P position	1
Engine start condition → ACC (Engine stop)	—	Any position other than P (*2)	1
Engine stall return operation while driving	—	N position	1

*1: When the A/T selector lever position is N position, the engine start condition is different according to the vehicle speed.

- At vehicle speed of 5 km/h or less, the engine can start only when the brake pedal is depressed.
- At vehicle speed of 5 km/h or more, the engine can start even if the brake pedal is not depressed. (It is the same as "Engine stall return operation while driving".)

*2: When the A/T selector lever position is in any position other than P position and when the vehicle speed is 5 km/h or more, the engine stop condition is different.

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

- Press and hold the push-button ignition switch for 2 seconds or more. (When the push-button ignition switch is pressed for too short a time, the operation may be invalid, so properly press and hold to prevent the incorrect operation.)
- Press the push-button ignition switch 3 times within 1.5 seconds. (Emergency stop operation)

ECM Re-Communicating Function

INFOID:000000005349475

Performing following procedure can automatically perform re-communication of ECM and BCM or Intelligent Key unit, but only when the ECM has been replaced with a new one (*1).

*1: New one means a virgin ECM which has never been energized on-board.

(In this step, initialization procedure by CONSULT-III is not necessary)

NOTE:

- **When registering new Key IDs or replacing the ECM other than brand new, refer to CONSULT-III Operation Manual NATS-IVIS/NVIS.**
- **If multiple keys are attached to the key holder, separate them before work.**
- **Distinguish keys with unregistered key ID from those with registered ID.**

1. Install ECM.
2. Insert the registered Intelligent Key (*2), turn ignition switch to "ON".
*2: To perform this step, use the key that has been used before performing ECM replacement.
3. Maintain ignition switch in "ON" position for at least 5 seconds.
4. Turn ignition switch to "OFF".
5. Start engine.

If engine can be started, procedure is completed.


If engine cannot be started, refer to CONSULT-III Operation Manual NATS-IVIS/NVIS and initialize control unit.

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Schematic


INFOID:00000005349476

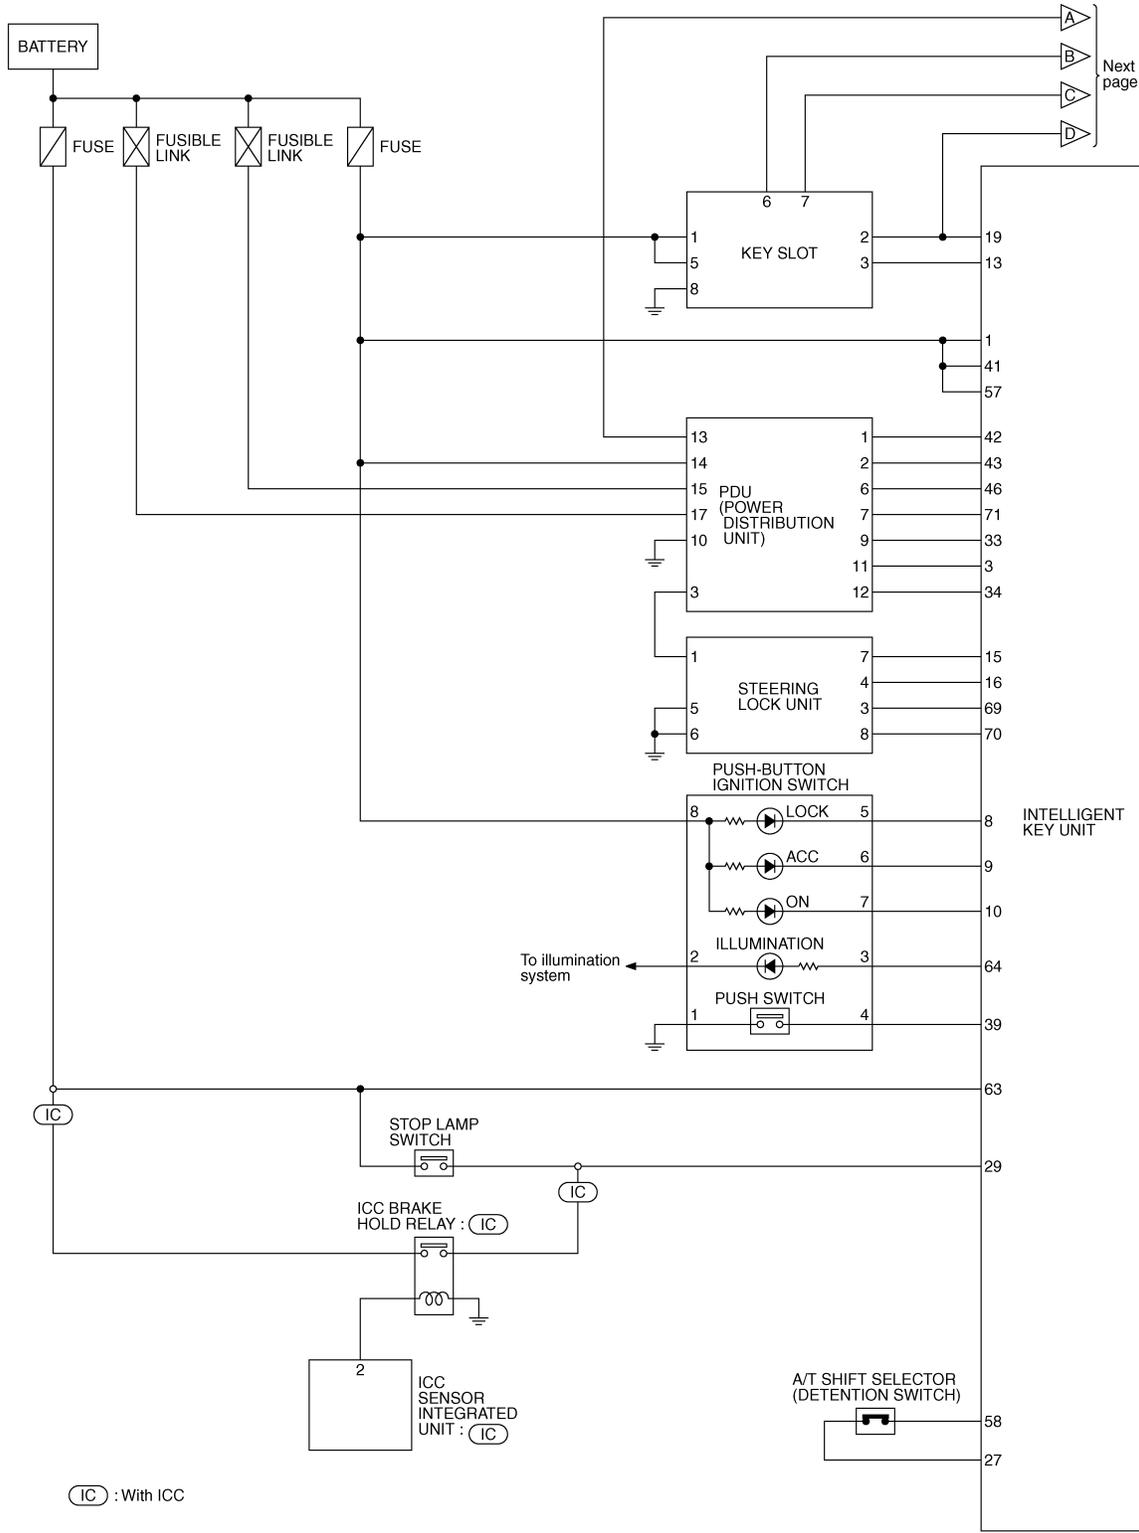

TIWT3150E

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

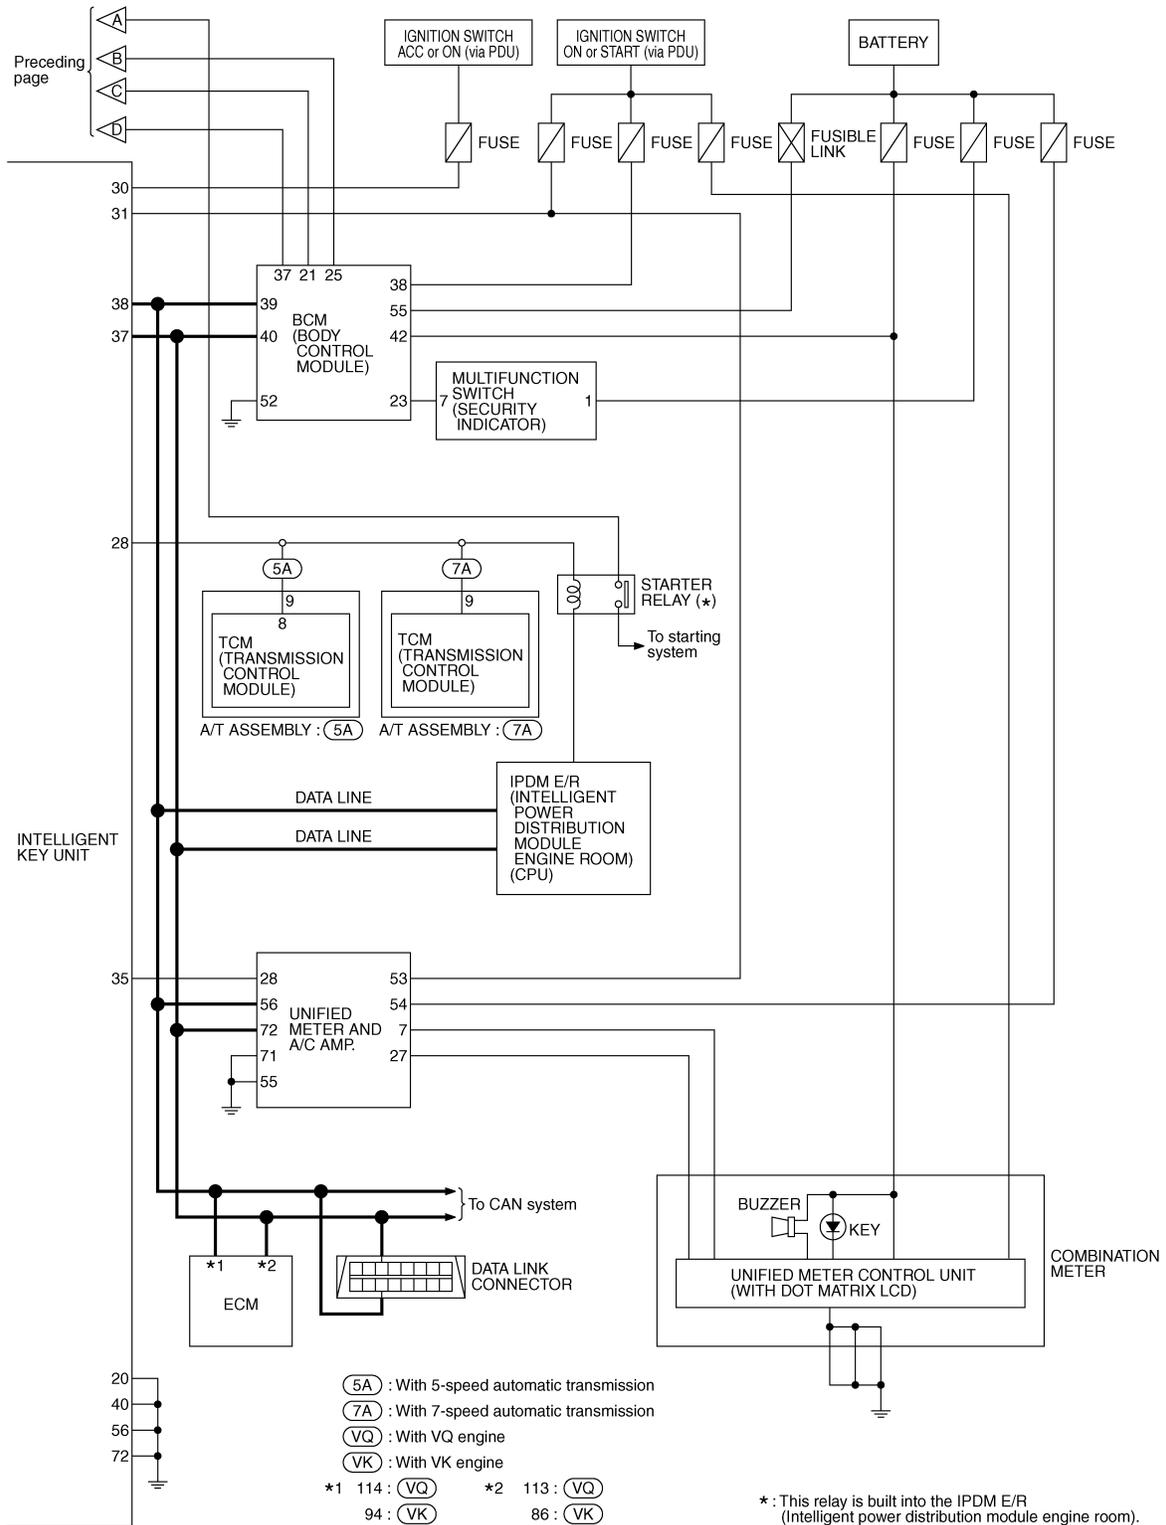

TIWT3151E



IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Wiring Diagram - NATS -

INFOID:000000005349477

BL-NATS-01

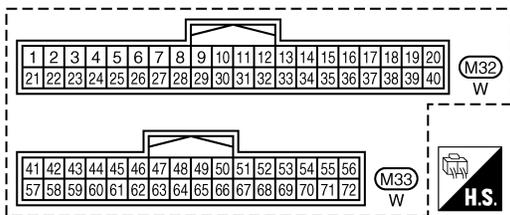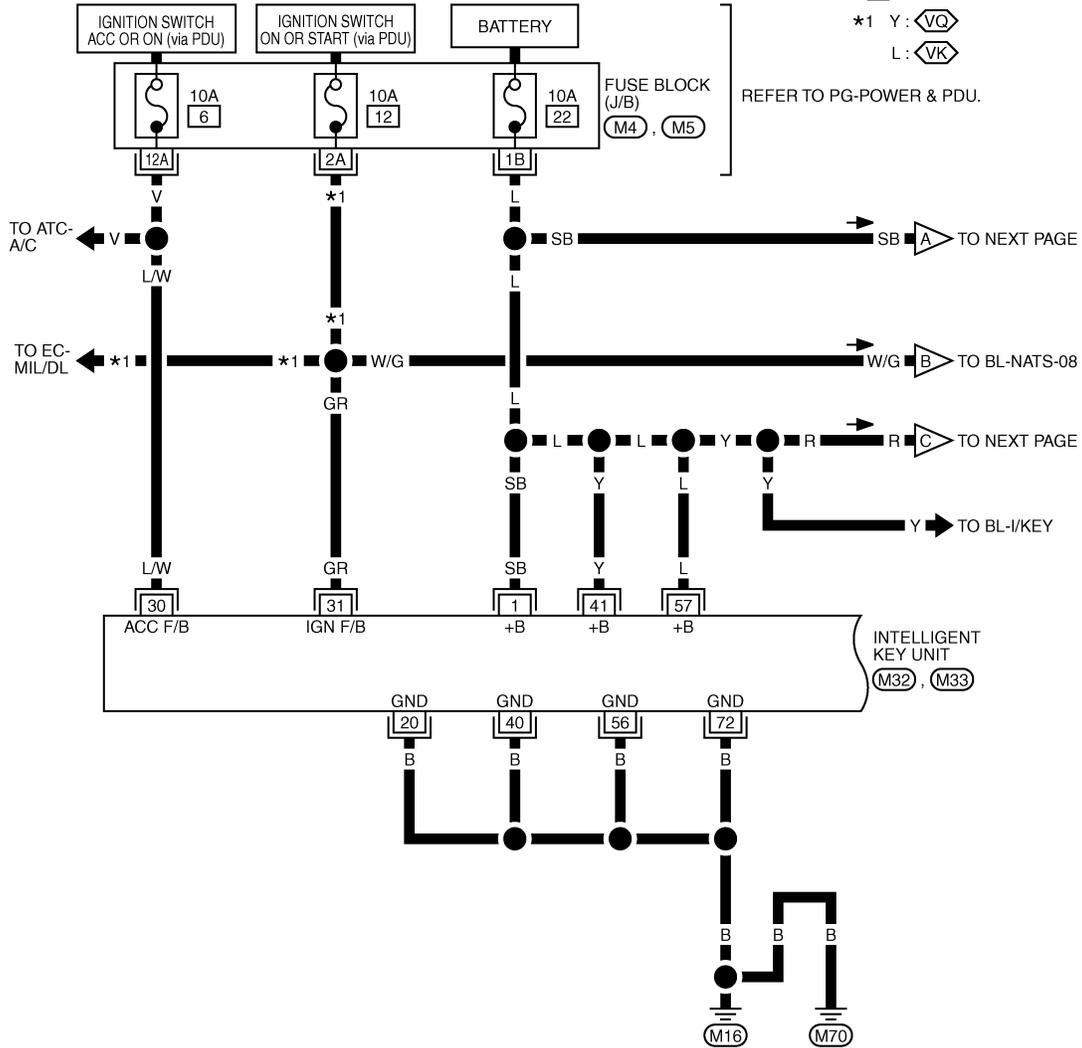

REFER TO THE FOLLOWING.






(M4), (M5) - FUSE BLOCK-JUNCTION BOX (J/B)

TIWT3152E

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

BL-NATS-02

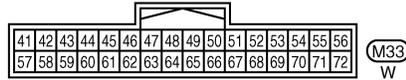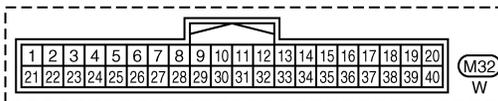
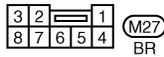
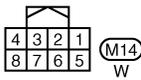
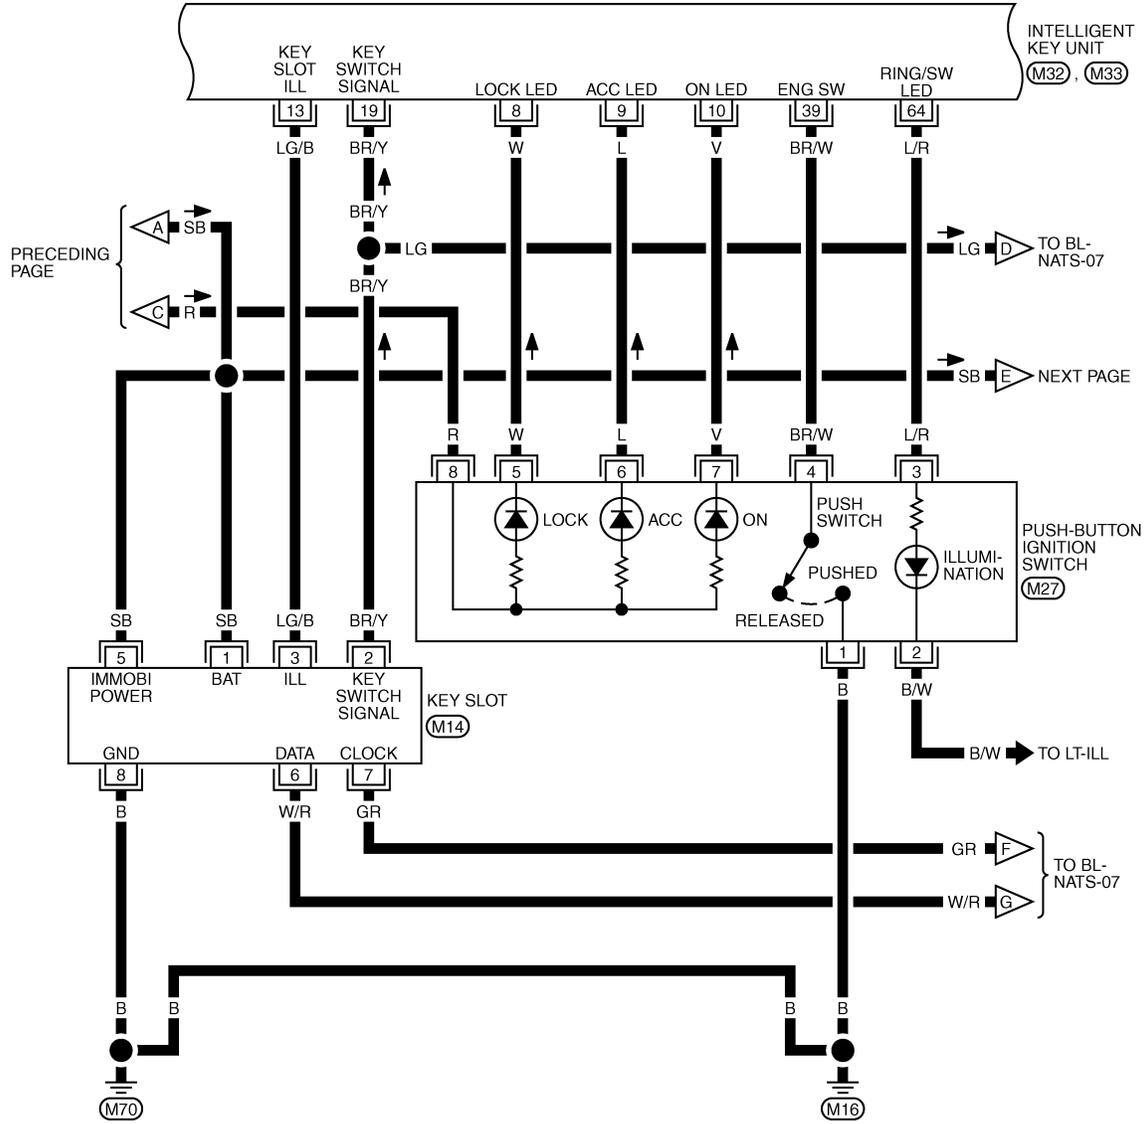


TIWT2031E

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

BL-NATS-03

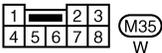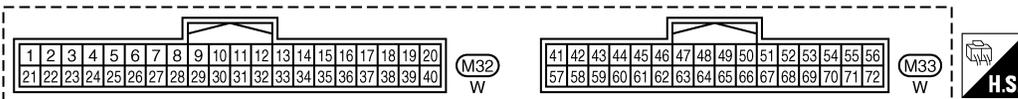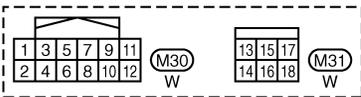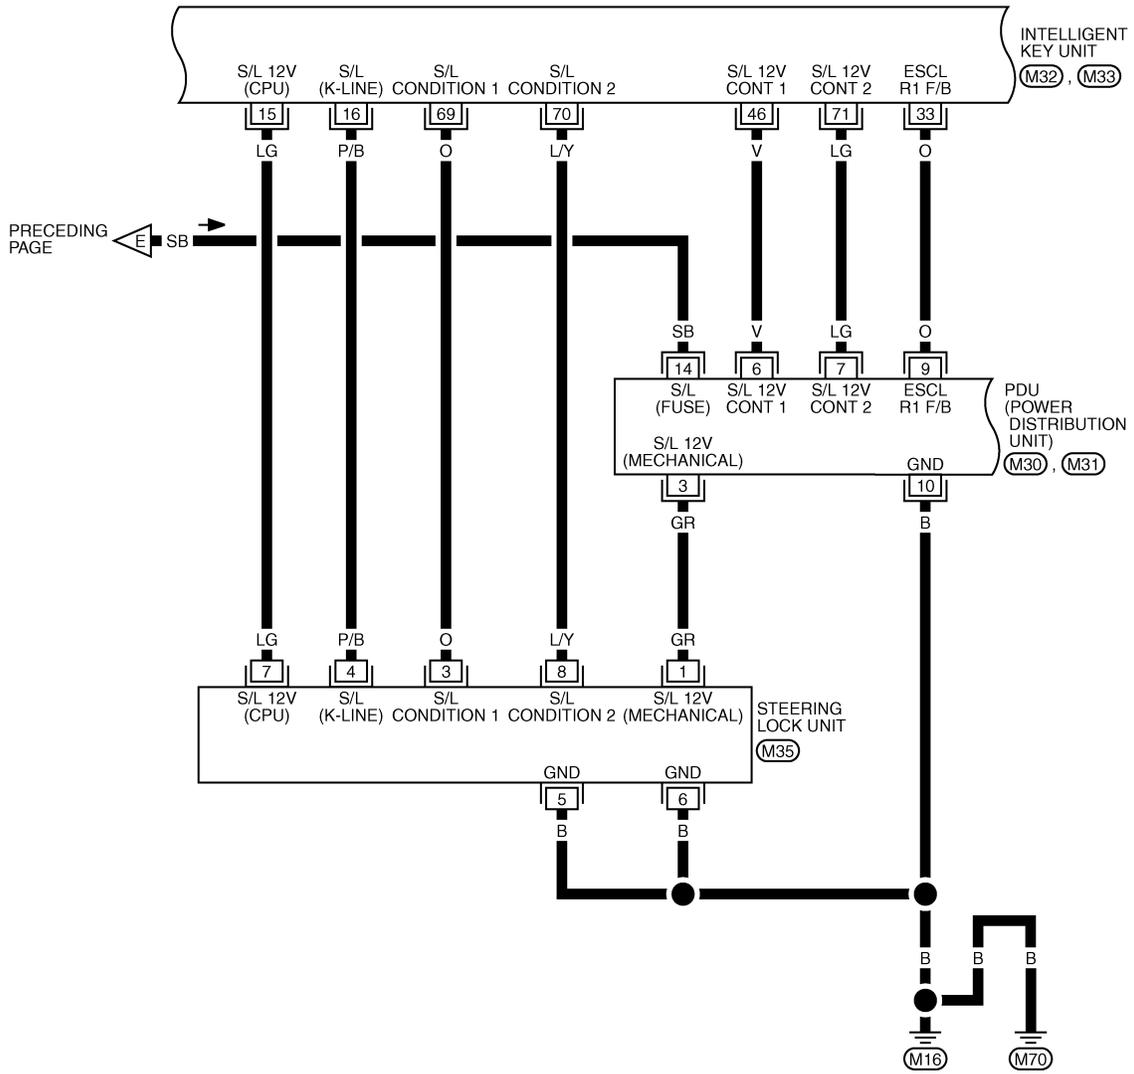





TIWT1927E

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

BL-NATS-04

⬡ : WITH ICC

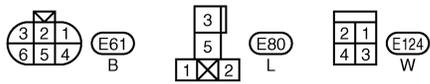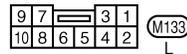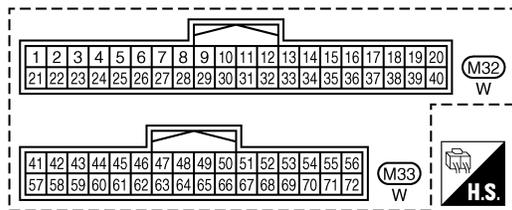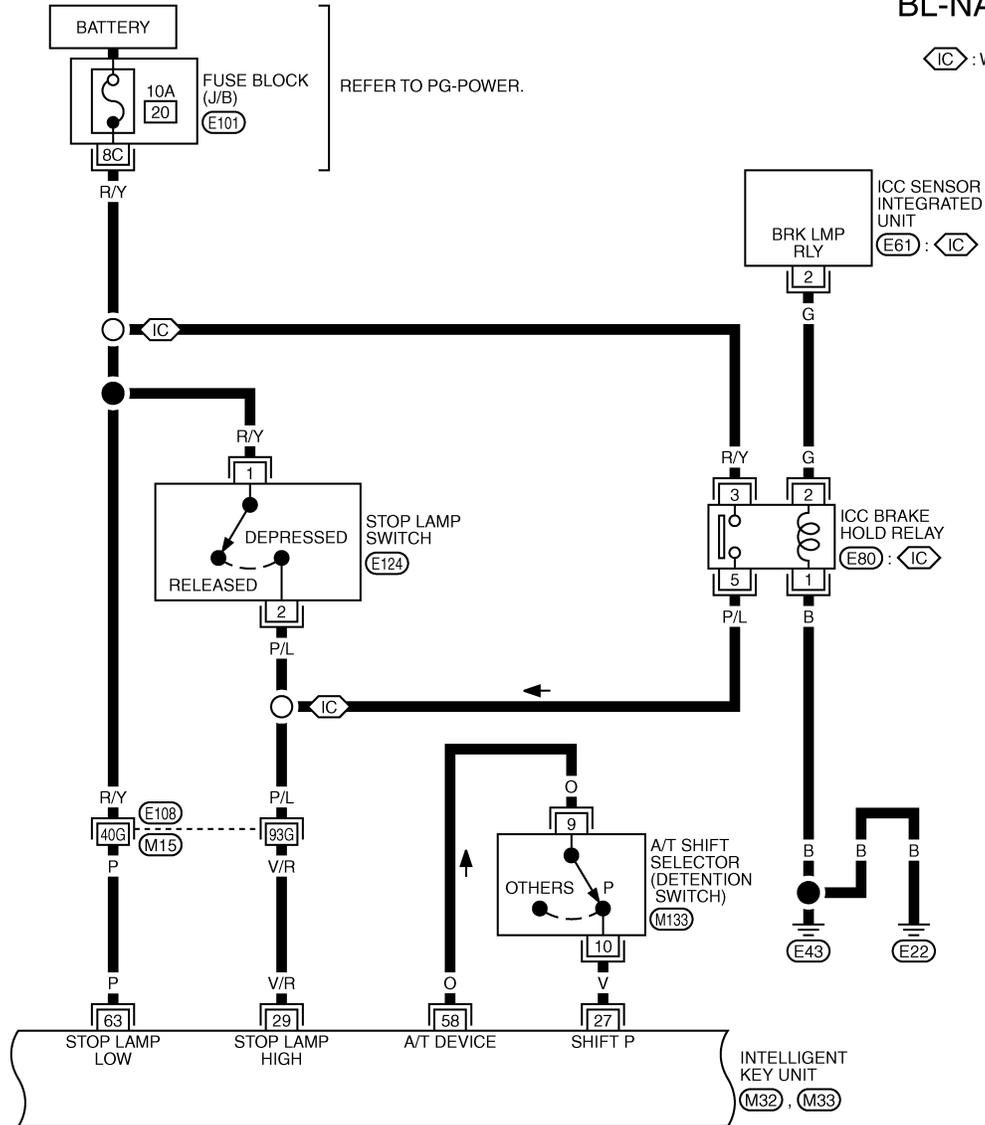



REFER TO THE FOLLOWING.
 (E108) -SUPER MULTIPLE JUNCTION (SMJ)
 (E101) -FUSE BLOCK-JUNCTION BOX (J/B)

TIWT3153E

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

BL-NATS-05

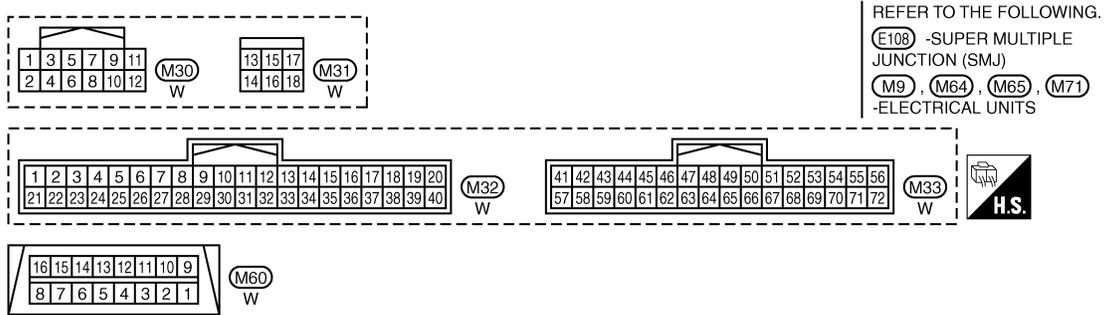
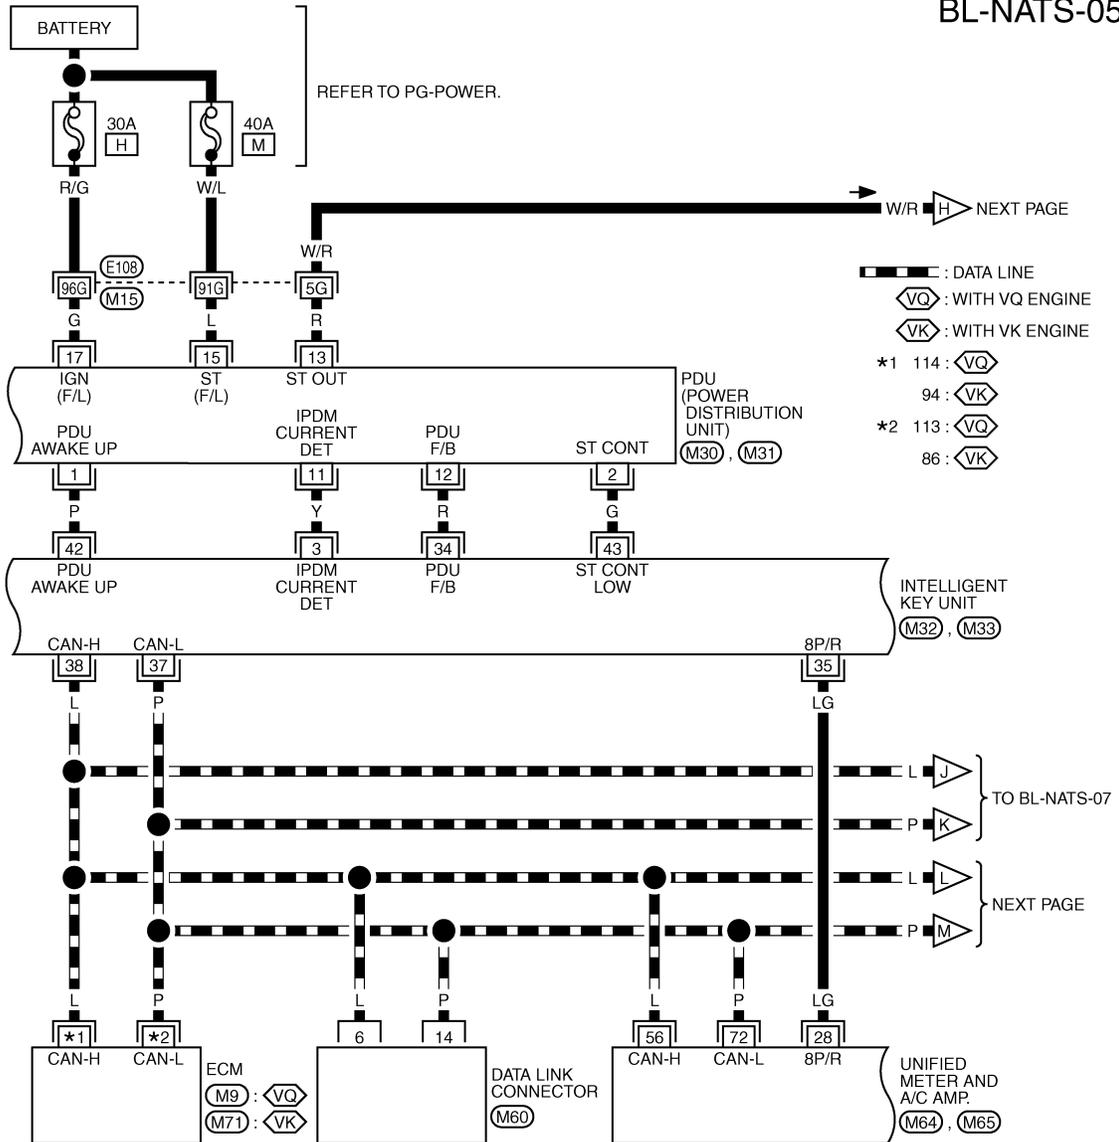


TIWT3154E

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

BL-NATS-06

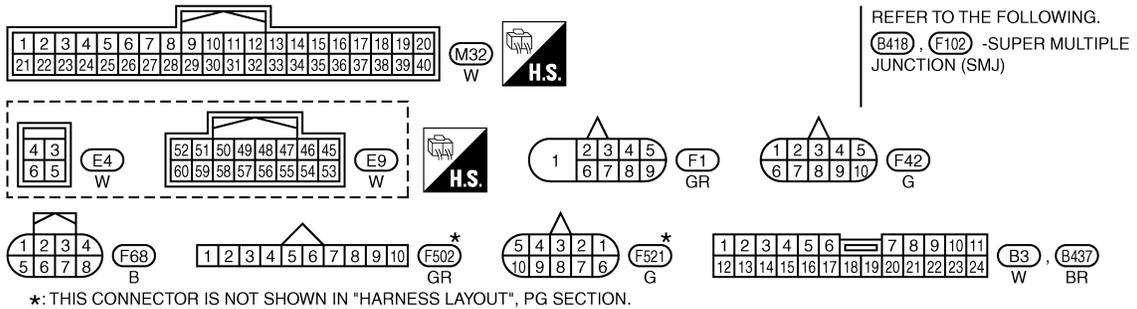
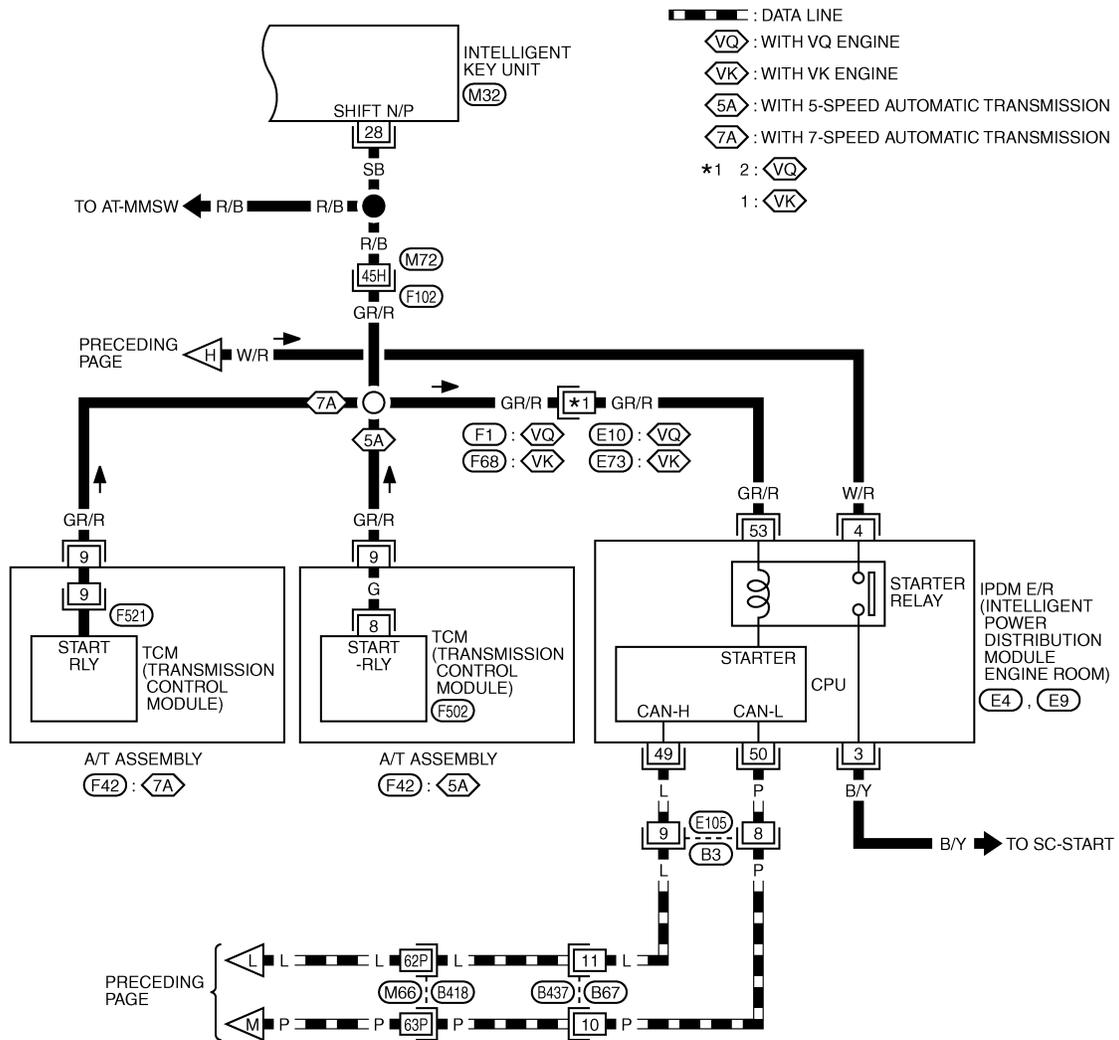


TIWT3155E

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

BL-NATS-07

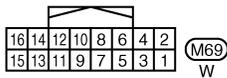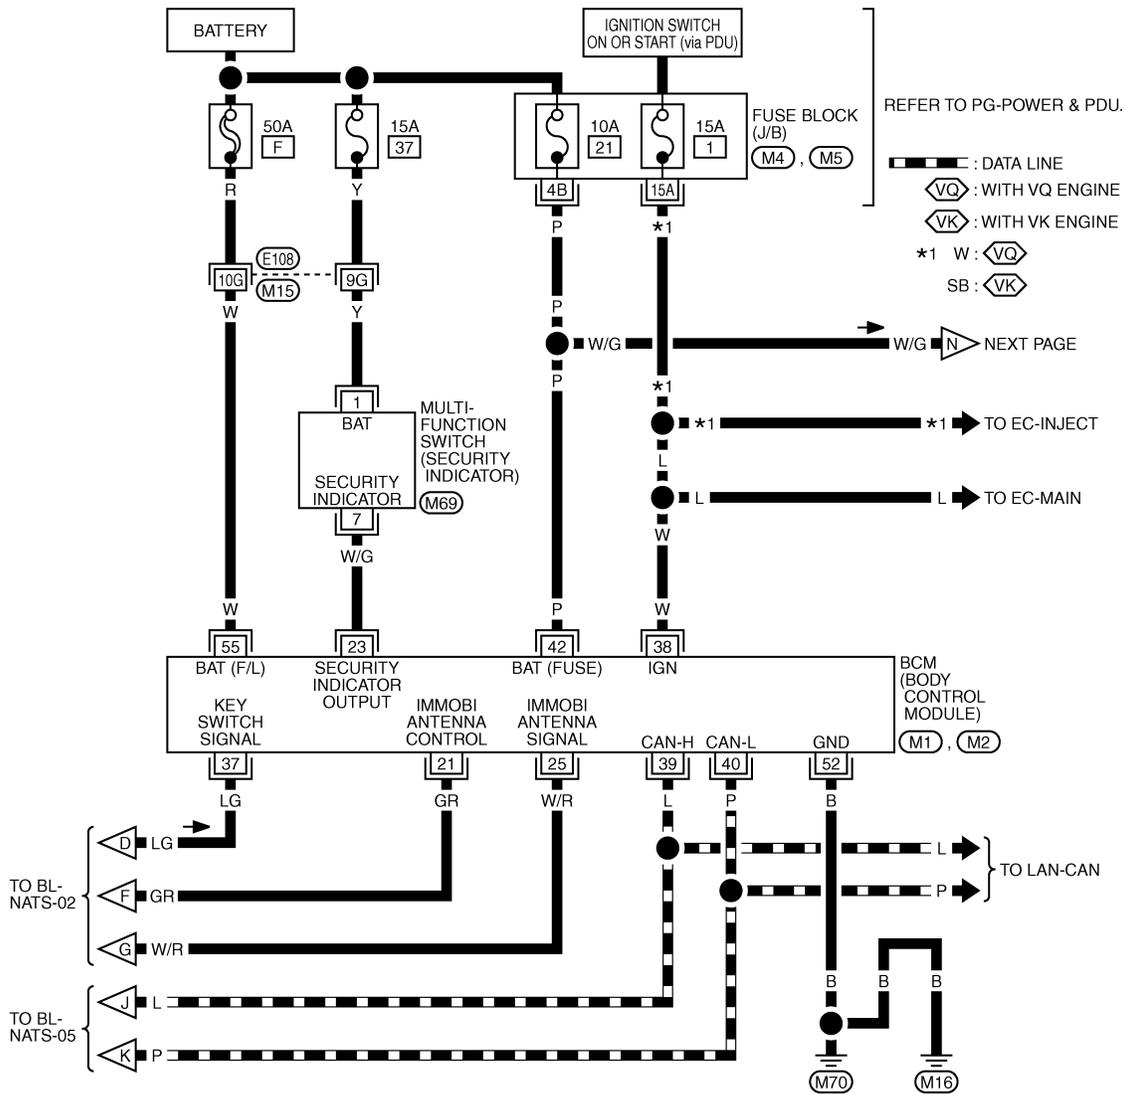

REFER TO THE FOLLOWING.



- (E108) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4), (M5) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M1), (M2) -ELECTRICAL UNITS

TIWT3156E


IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

BL-NATS-08

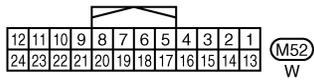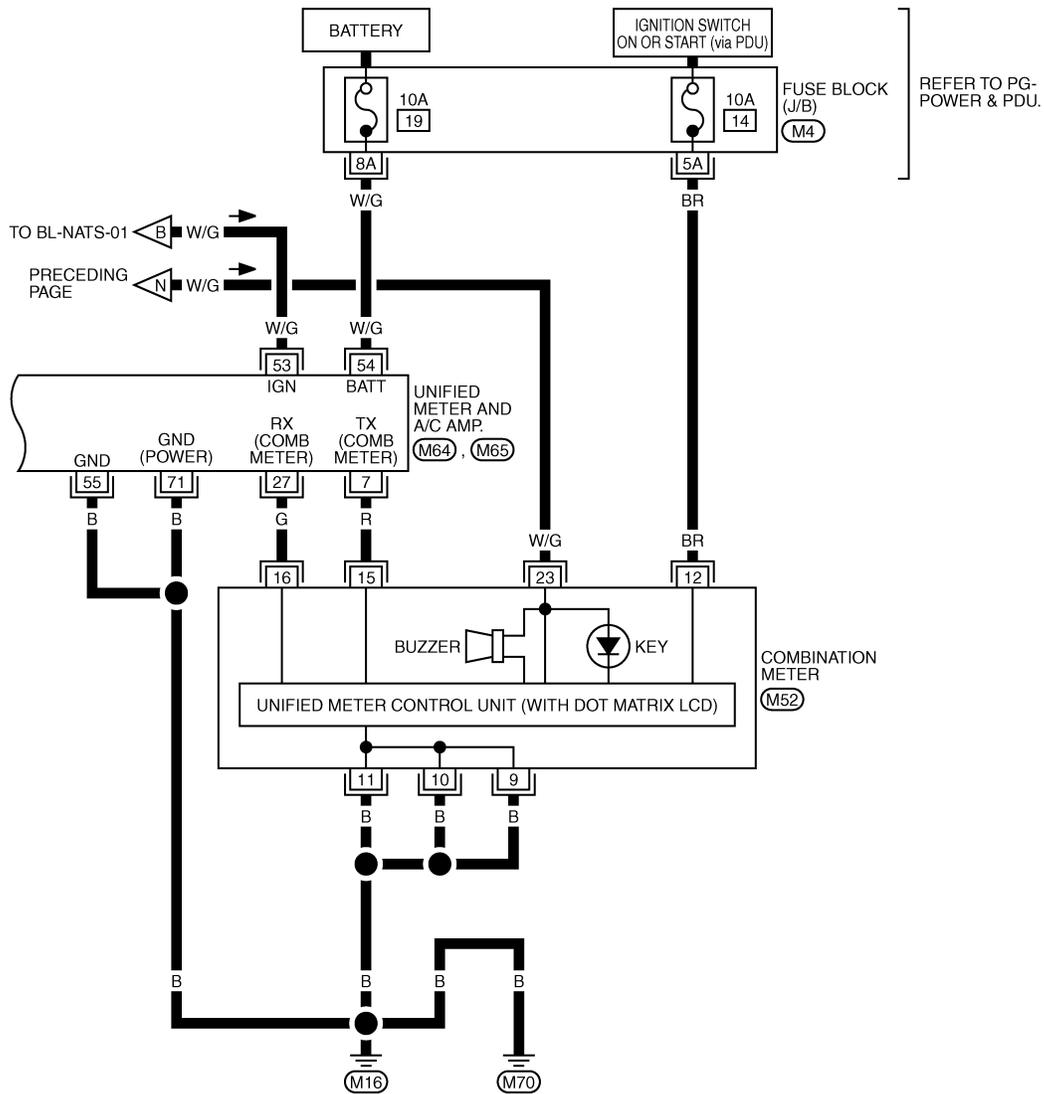

REFER TO THE FOLLOWING.
 (M4) - FUSE BLOCK-JUNCTION BOX (J/B)

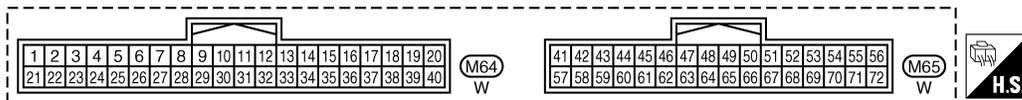

TIWT3157E

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Terminal and Reference Value for Intelligent Key Unit

INFOID:000000005349478


Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
1	SB	Power source (fuse)	Input	—	—	Battery voltage
3	Y	IPDM E/R current signal	Input	START	At starter motor cranking	5
				LOCK	Any condition other than above	2
8	W	Push-button ignition switch LOCK indicator	Output	LOCK	Power supply position is in LOCK position	0
				—	Power supply position is in any position other than LOCK	1.2
9	L	Push-button ignition switch ACC indicator	Output	ACC	Power supply position is in ACC position	0
				—	Power supply position is in any position other than ACC	1.2
10	V	Push-button ignition switch ON indicator	Output	ON	Power supply position is in ON position	0
				—	Power supply position is in any position other than ON	1.2
13	LG/B	Key slot illumination	Output	LOCK	Driver door is opened under the condition that the Intelligent Key is inserted into the key slot	0 → Battery voltage → 0
					Intelligent Key is removed from key slot (when key slot illumination is turned off)	0
15	LG	Steering lock unit power source	Output	LOCK	—	Battery voltage
16	P/B	Steering lock unit signal	Input/ Output	LOCK	Steering lock: Lock	Battery voltage
				ACC	Steering lock: Unlock (Unlocked moment)	0
19	BR/Y	Key switch	Input	LOCK	Intelligent Key is inserted into key slot	Battery voltage
					Intelligent Key is removed from key slot	0
20	B	Ground	—	—	—	0
27	V	Control device (Detention switch)	Input	LOCK	A/T selector lever is in P position	0
				ON	A/T selector lever is in any position other than P	Battery voltage
28	SB	Starter relay	Input	ON	A/T selector lever is in N or P position	Battery voltage
				—	Power supply position is in LOCK position or A/T selector lever is in any position other than N or P position	0
29	V/R	Stop lamp switch	Input	—	Brake pedal depressed	Battery voltage
				—	Brake pedal released	0
30	L/W	Ignition power supply (ACC)	Input	ACC	Power supply position is in ACC position	Battery voltage

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

BL

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

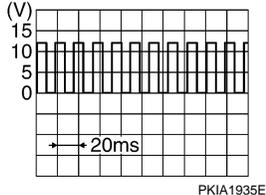Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
31	GR	Ignition power supply (ON)	Input	ON	Power supply position is in ON position	Battery voltage
33	O	PDU signal	Input	LOCK	Steering lock: Lock	0
				ACC	Steering lock: Unlock	8
34	R	PDU feed back signal	Input	LOCK	At wake-up (Open driver door)	0
35	LG	Vehicle speed signal	Input	ON	At speedometer operation (vehicle speed approx. 40 km/h)	
37	P	CAN L	Input/ Output	—	—	—
38	L	CAN H	Input/ Output	—	—	—
39	BR/W	Push-button ignition switch	Input	—	Push-button ignition switch is pressed	0
				—	Push-button ignition switch is released	Battery voltage
40	B	Ground	—	—	—	0
41	Y	Power source (fuse)	Input	—	—	Battery voltage
42	P	PDU wake up signal	Output	LOCK	At sleep (30 seconds or more after all doors are closed under the condition that the power supply position is in the LOCK position)	Battery voltage
				—	At wake-up (Open driver door)	0
43	G	Starter signal	Output	ON	At starter motor cranking	0
				—	Other than above	Battery voltage
46	V	PDU signal	Output	—	Steering lock: Lock	Battery voltage
				LOCK	Steering lock: Unlocked moment	0
56	B	Ground	—	—	—	0
57	L	Power source (fuse)	Input	—	—	Battery voltage
58	O	Control device (Detention switch)	Input	LOCK	At sleep (30 seconds or more after all doors are closed under the condition that the power supply position is in the LOCK position)	0
				—	At wake-up (Open driver door)	Battery voltage
63	P	Stop lamp switch	Input	—	Brake pedal depressed	Battery voltage
				—	Brake pedal released	Battery voltage
64	L/R	Push-button ignition switch illumination	Output	—	Push-button ignition switch illumination is turned on	2.6
				—	Push-button ignition switch illumination is turned off (15 seconds or more after the driver door is closed)	0

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
69	O	Steering lock unit condition signal-1	Input	LOCK	Steering lock: Lock	0
				ACC	Steering lock: Unlock	Battery voltage
				ON		Battery voltage
70	L/Y	Steering lock unit condition signal-2	Input	LOCK	Steering lock: Lock	Battery voltage
				ACC	Steering lock: Unlock	0
				ON		0
71	LG	PDU signal	Output	LOCK	Steering lock: Lock	Battery voltage
				ACC	Steering lock: Unlocked moment	0
72	B	Ground	—	—	—	0

Terminal and Reference Value for Steering Lock Unit

INFOID:000000005349479

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
1	GR	PDU signal	Input/ Output	LOCK	Press push-button ignition switch with Intelligent Key inside vehicle	0 → Battery voltage → 0 (Battery voltage is detected when pressing the push-button ignition switch)
3	O	Condition signal-1	Input	LOCK	Steering lock: Lock	0
				ACC	Steering lock: Unlock	Battery voltage
				ON		Battery voltage
4	P/B	Intelligent Key unit signal	Input	LOCK	Steering lock: Lock	Battery voltage
				ACC	Steering lock: Unlock	0
				ON		0
5	B	Ground	—	—	—	0
6	B	Ground	—	—	—	0
7	LG	Power source	Input	—	—	Battery voltage
8	L/Y	Condition signal-2	Input	LOCK	Steering lock: Lock	Battery voltage
				ACC	Steering lock: Unlock	0
				ON		0

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Terminal and Reference Value for BCM

INFOID:000000005349480

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
21	GR	NATS antenna amp. (Built-in key slot)	Input/ Output	LOCK	Ignition switch is pressed while inserting the Intelligent Key into the key slot	Just after pressing ignition switch. Pointer of tester should move
23	W/V	Security indicator	Output	LOCK	Intelligent Key is removed from key slot and power supply position is in LOCK position	Battery voltage → 0 (Every 2.4 seconds)
25	W/R	NATS antenna amp. (Built-in key slot)	Input/ Output	LOCK	Ignition switch is pressed while inserting the Intelligent Key into the key slot	Just after pressing ignition switch. Pointer of tester should move
37	LG	Key slot (Key switch signal)	Input	LOCK	Intelligent Key is removed from key slot	0
					Intelligent Key is inserted into key slot	Battery voltage
38	W	Ignition power supply (ON or START)	Input	ON	Power supply position is in ON position	Battery voltage
39	L	CAN H	Input/ Output	—	—	—
40	P	CAN L	Input/ Output	—	—	—
42	P	Power source (fuse)	Input	—	—	Battery voltage
52	B	Ground	—	—	—	0
55	W	Power source (Fusable link)	Input	—	—	Battery voltage

Terminal and Reference Value for IPDM E/R

INFOID:000000005349481

Terminal No.	Wire Color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
4	W/R	Starter motor power supply	Output	LOCK	—	0
				START	Starter motor is activating	Battery voltage
49	L	CAN H	Input/ Output	—	—	—
50	P	CAN L	Input/ Output	—	—	—
53	GR/R	A/T Shift position signal	Input	ON	A/T shift position is P/ N position	Battery voltage
				LOCK	Other than above	0

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Terminal and Reference Value for PDU

INFOID:000000005349482

A
B
C
D
E
F
G
H
J
K
L
M
N
O
P

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
1	P	Wake up signal	Input	LOCK	Sleep condition (30 seconds or more after all doors are closed under the condition that the power supply position is in the LOCK position)	Battery voltage
				—	Wake-up condition (Open driver door)	0
2	G	Starter control signal	Input	ON	At starter motor cranking	0
				—	Any condition other than above	Battery voltage
3	GR	Steering lock unit power source	Output	LOCK	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	0 → Battery voltage → 0
				—	Any condition other than above	0
6	V	Steering lock control signal-1	Input	—	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	Battery voltage
				LOCK	Power supply position is in LOCK position (Steering lock activated)	Battery voltage → 0 → Battery voltage (Battery voltage is detected when activating the steering lock)
7	LG	Steering lock control signal-2	Input	—	Push-button ignition switch is pressed under the condition that Intelligent Key is in the vehicle or Intelligent Key is inserted	Battery voltage
				LOCK	Power supply position is in LOCK position (Steering lock activated)	Battery voltage → 0 → Battery voltage (Battery voltage is detected when activating the steering lock)
9	O	Steering lock feed back signal	Input	—	Power supply position is in ACC or ON position	0
				LOCK	Power supply position is in LOCK position	0 → 8 → 0 (0V is detected when activating the steering lock)
10	B	Ground	—	—	0	
11	Y	IPDM E/R current signal	Input	START	At starter motor cranking	5
				LOCK	Any condition other than above	2
12	R	Feed back signal	Input	LOCK	Sleep condition (30 seconds or more after all doors are closed under the condition that the power supply position is in the LOCK position)	1
				—	Wake-up condition (any condition other than above)	0
13	R	Starter relay	Output	START	At starter motor cranking	Battery voltage
				—	Any condition other than above	4

BL

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Terminal No.	Wire color	Item	Signal Input/ Output	Condition		Voltage (V) (Approx.)
				Push-button ignition switch position	Operation or conditions	
14	SB	Power source (fuse)	Input	—	—	Battery voltage
15	L	Power source (fusable link)	Input	—	—	Battery voltage
17	G	Power source (fusable link)	Input	—	—	Battery voltage

CONSULT-III Functions (ECM)

INFOID:000000005349483

SELF-DIAGNOSTIC RESULTS ITEM CHART

Suspect Systems	Description	Possible malfunction	Action to take/Reference page
LOCK MODE [P1610]	The immobilizer switches to the mode that prevents the engine from being started. If the ID verification between BCM and ECM is NG, the ID verification malfunction between remote control starter and BCM may be detected 5 times or more.	—	BL-246
ID DISCORD, IMM-ECM [P1611]	P1611 has the same meaning as B2192.	Registration of ECM is not completed.	BL-245
		ECM malfunction	Replace ECM.
CHAIN OF ECM-IMMU [P1612]	P1612 has the same meaning as B2193.	Short circuit in communication line between BCM and ECM to power supply line.	BL-244
		Open circuit in communication line between BCM and ECM.	
		Short circuit in communication line between BCM and ECM to ground.	
		ECM malfunction	
CHAIN OF IMMU-KEY [P1614]	Inactive communication between key slot.	Short circuit in harness.	BL-246
	BCM Malfunction	BCM malfunction	BCS-14

CONSULT-III Functions (BCM-IMMU)

INFOID:000000005349484

CONSULT-III can display each diagnostic item using the diagnostic test modes as shown below.

Part to be diagnosed	Test item, Diagnosis mode	Description
IMMU	SELF-DIAG RESULTS	Intelligent Key unit performs CAN communication diagnosis.
	DATA MONITOR	Displays Intelligent Key unit input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to then.

SELF-DIAGNOSTIC RESULTS ITEM CHART

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Suspect Systems	Description	Possible malfunction	Action to take/Reference page	
NO DTC	NO DTC	—	—	A
ID DISCORD BCM-ECM [B2192]	The ID verification results between BCM and ECM are NG. The registration is necessary.	Registration of ECM is not completed.	BL-245	B
		ECM malfunction	Replace ECM.	
CHAIN OF BCM-ECM [B2193]	Inactive communication between ECM and BCM.	Short circuit in communication line between BCM and ECM to power supply line.	BL-244	C
		Open circuit in communication line between BCM and ECM.		D
		Short circuit in communication line between BCM and ECM to ground.	Replace ECM.	E
		ECM malfunction		
DISCORD IMMU-I-KEY [B2194]	B2194 has the same meaning as B2590.	Short circuit in communication line between BCM and Intelligent Key unit to power supply line.	BL-245.	F
		Short circuit in communication line between BCM and ECM to ground.		G
		Intelligent Key unit malfunction	BL-113	H

DATA MONITOR

Monitor item	Content	
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.	BL
KEY ON SW	Indicates [ON/OFF] condition of key switch.	
ENGINE START	Indicates [ON/OFF] condition of push-button ignition switch.	J

ACTIVE TEST

Test item	Description	
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen is touched.	L

CONSULT-III Functions (INTELLIGENT KEY)

INFOID:000000005349485

SELF-DIAGNOSTIC RESULTS ITEM CHART

Suspect Systems	Description	Possible malfunction	Action to take/Reference page	
NO DTC	NO DTC	—	—	N
DISCORD BCM-I-KEY [B2590]	The ID verification results between Intelligent Key unit and BCM are NG.	Short circuit in communication line between BCM and Intelligent Key unit to power supply line.	BL-245.	O
		Short circuit in communication line between BCM and ECM to ground.		P
		BCM malfunction	BCS-14	

Work Flow

INFOID:000000005349486

1.CHECK IN

Listen to customer complaints or request (Get symptoms).

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

NOTE:

In rare case, "CHAIN of ECM-IMMU" might be stored as a self-diagnostic result during key registration procedure, even if the system is not malfunction.

malfunction>> GO TO 2.

Key service request>>Perform Initialization. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

2.START ENGINE WITH INTELLIGENT KEY

Check if the engine could be started by all registered Intelligent Keys.

Is the inspection result normal?

The engine can be started by all Intelligent Keys>> GO TO 3.

The engine cannot be started by some Intelligent Keys>> Perform Initialization. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

The engine cannot be started by all Intelligent Keys>> GO TO 4.

3.START ENGINE WITH INTELLIGENT KEY INTO KEY SLOT

Check if the engine could be started by all Intelligent Keys into key slot.

Is the inspection result normal?

The engine can be started by all Intelligent Keys>> GO TO 5.

The engine cannot be started by some Intelligent Keys>> Perform Initialization. Refer to CONSULT-III operation manual NATS-IVIS/NVIS.

The engine cannot be started by all Intelligent Keys>> GO TO 4.

4.CHECK "KEY" WARNING LAMP ILLUMINATION

1. Intelligent key into key slot.

2. When pushing the push-button ignition switch, check if "KEY" warning lamp in combination meter illuminates.

Does "KEY" warning lamp illuminate?

YES >> GO TO 7.

NO >> Check function of intelligent key system. Refer to [BL-44, "System Description"](#)

5.CHECK SECURITY INDICATOR LIGHTING

Check security indicator lights up when ignition switch is in ON position.

Does security indicator illuminate?

YES >> GO TO 7.

NO >> GO TO 6.

6.CHECK SECURITY INDICATOR OPERATION

Check security indicator blinks when ignition switch is in OFF position.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair security indicator. Refer to [BL-243, "Symptom Chart for Security Indicator"](#).

7.INTELLIGENT KEY UNIT SELF DIAGNOSIS

Perform Intelligent Key unit SELF-DIAGNOSIS using CONSULT-III.

Is DTC displayed?

YES >> GO TO 8.

NO >> GO TO 9.

8.PERFORM INTELLIGENT KEY UNIT TROUBLE DIAGNOSIS

Check Intelligent Key unit self-diagnostic results item chart. Refer to [BL-241, "CONSULT-III Functions \(INTELLIGENT KEY\)"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Perform intelligent key trouble diagnosis again.

9.BCM SELF DIAGNOSIS

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Perform BCM SELF-DIAGNOSIS using CONSULT-III.

Is DTC displayed?

- YES >> GO TO 10.
- NO >> GO TO 11.

10.PERFORM BCM TROUBLE DIAGNOSIS

Check BCM self-diagnostic results item chart. Refer to [BL-240, "CONSULT-III Functions \(BCM-IMMU\)"](#).

Is the inspection result normal?

- YES >> GO TO 9.
- NO >> Perform BCM trouble diagnosis again.

11.ECM SELF DIAGNOSIS

Perform ECM SELF-DIAGNOSIS using CONSULT-III.

Is DTC displayed?

- P1610-P1615 is displayed>> GO TO 12.
- No DTC is displayed>> GO TO 2.
- Another code different from (P1610-P1615) is displayed.>> Go to EC section.

12.PERFORM ECM TROUBLE DIAGNOSIS

Check ECM self-diagnostic results item chart. Refer to [BL-240, "CONSULT-III Functions \(BCM-IMMU\)"](#).

Is the inspection result normal?

- YES >> GO TO 11.
- NO >> Perform ECM trouble diagnosis again.

Symptom Chart for Security Indicator

INFOID:000000005349487

Security indicator does not turn ON or flash.

CAUTION:

- Follow Trouble Diagnosis Flowchart referring to "Work Flow". Determine malfunctioning condition before performing this diagnosis.
- Make sure that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis.
- Check systems shown in the "Action" column in this order.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Intelligent Key is not inserted into key slot.
- Engine switch is not depressed.

Action	Reference page
1. Check security indicator harness	BL-243
2. Replace BCM	BCS-14

Check Security Indicator Harness

INFOID:000000005349488

1.SECURITY INDICATOR LAMP ACTIVE TEST

With CONSULT-III

Check ("THEFT IND") in "ACTIVE TEST" mode with CONSULT-III.

Perform operation shown on display indicator lamp should illuminate.

OK or NG

- OK >> Security indicator lamp is OK.
- NG >> GO TO 2.

2.CHECK HARNESS CONTINUITY


1. Turn ignition switch OFF.
2. Disconnect multifunction switch (security indicator) connector.

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

3. Check voltage between multifunction switch (security indicator) connector and ground.

Terminals		(-)	Voltage (V) (Approx.)
(+) Multifunction switch (security indicator) connector			
M69	Terminal 1	Ground	Battery voltage

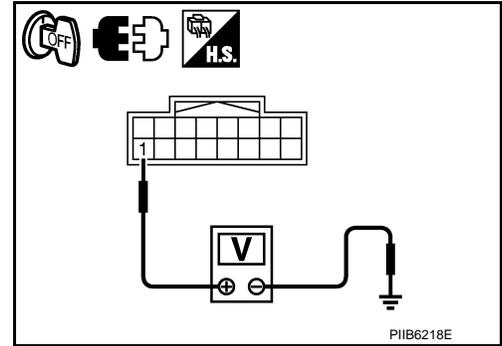

OK or NG

- OK >> Check the following.
- Harness for open or short between BCM and multifunction switch (security indicator)
 - Security indicator lamp condition
- NG >> Check the following.
- 15A fuse [No.37, located in fuse block (J/B)]
 - Harness for open or short between multifunction switch (security indicator) and fuse

B2193 CHAIN OF BCM-ECM

INFOID:000000005349489

Self-diagnostic results:

“CHAIN OF BCM-ECM” displayed on CONSULT-III screen

First perform the “SELF-DIAG RESULTS” in “BCM” with CONSULT-III, then perform the trouble diagnosis of malfunction system indicated “SELF-DIAG RESULTS” of “BCM”. Refer to [BL-240, "CONSULT-III Functions \(BCM-IMMU\)"](#).

1. CONFIRM SELF-DIAGNOSTIC RESULTS

Confirm SELF-DIAGNOSTIC RESULTS “CHAIN OF BCM-ECM” displayed on CONSULT-III screen.

NOTE:

In rare case, “CHAIN OF BCM-ECM” might be stored during key registration procedure, even if the system is not malfunctioning.


Is CONSULT-III screen displayed?

- Yes >> GO TO 2.
No >> Refer to [BL-240, "CONSULT-III Functions \(BCM-IMMU\)"](#).

2. CHECK POWER SUPPLY CIRCUIT FOR BCM

Check voltage between BCM and ground with CONSULT-III or tester.

Terminals		(-)	Condition of ignition switch	Voltage (V) (Approx.)
(+) BCM connector				
M1	Terminal 38	Ground	ON	Battery voltage
M2	42		OFF	
	55			

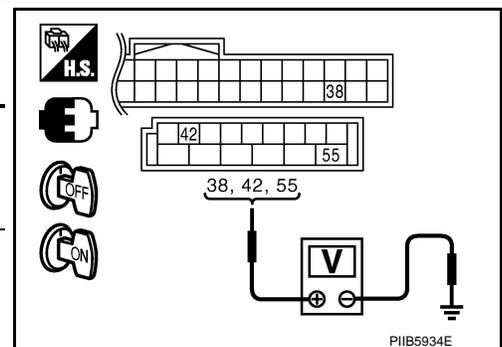

OK or NG

- OK >> GO TO 3.
NG >> Check the following.
- 50A fusible link (letter **F**, located in the fuse and fusible link box)
 - 10A fuse [No.21, located in the fuse block (J/B)]
 - 15A fuse [No. 1, located in the fuse block (J/B)]
 - Harness for open or short between fusible link and BCM
 - Harness for open or short between fuse and BCM

3. CHECK GROUND CIRCUIT FOR BCM

1. Turn ignition switch OFF.
2. Disconnect BCM connector.

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)


< SERVICE INFORMATION >

3. Check continuity between BCM connector and ground.

BCM connector	Terminal	Ground	Continuity
M2	52		Yes

OK or NG

- OK >> GO TO 4.
 NG >> Repair or replace harness.

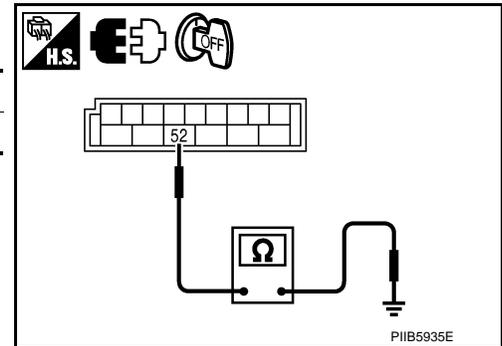

4. REPLACE BCM

1. Replace BCM
2. Perform initialization with CONSULT-III.
 For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Does the engine start?

- Yes >> BCM is malfunctioning.
- Replace BCM.
 - Perform initialization with CONSULT-III
 - For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS"
- No >> ECM is malfunctioning.
- Replace ECM.
 - Perform initialization or re-communicating function
 - For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS"
 - For re-communicating function, refer to [BL-224, "ECM Re-Communicating Function"](#)

B2192 ID DISCORD, BCM-ECM

INFOID:000000005349490

Self-diagnostic results:

"ID DISCORD, BCM-ECM" displayed on CONSULT-III screen

1. CONFIRM SELF-DIAGNOSTIC RESULTS

Confirm SELF-DIAGNOSTIC RESULTS "ID DISCORD BCM-ECM" displayed on CONSULT-III screen.

NOTE:

"ID DISCORD IMM-ECM":

Registered ID of BCM is in discord with that of ECM.

Is CONSULT-III screen displayed?

- Yes >> GO TO 2.
 No >> Refer to [BL-240, "CONSULT-III Functions \(BCM-IMMU\)"](#).

2. PERFORM INITIALIZATION WITH CONSULT-III

Perform initialization with CONSULT-III. Re-register all NATS ignition key IDs.

For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

NOTE:

If the initialization is not completed or malfunctions, CONSULT-III shows message on the screen.

Can the system be initialized?

- Yes >>
- Start engine. (END)
 - (System initialization had not been completed.)
- No >> ECM is malfunctioning.
- Replace ECM.
 - Perform initialization with CONSULT-III
 - For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS"

B2590 DISCORD BCM-I-KEY

INFOID:000000005349491

Self-diagnostic results:

"DISCORD, BCM-I-KEY" displayed on CONSULT-III screen

1. PERFORM INITIALIZATION

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Perform initialization with CONSULT-III. Refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

Can the system be initialized and can the engine be started with re-registered mechanical key?

- YES >> ID was unregistered.
NO >> BCM is malfunctioning.
- Replace BCM
 - Perform initialization again

P1610 LOCK MODE

INFOID:000000005349492

Self-diagnostic results:

"LOCK MODE" displayed on CONSULT-III screen

1. CONFIRM SELF-DIAGNOSTIC RESULTS

Confirm SELF-DIAGNOSTIC RESULTS "LOCK MODE" is displayed on CONSULT-III screen.

Is CONSULT-III screen displayed?

- Yes >> GO TO 2.
No >> Refer to [BL-240, "CONSULT-III Functions \(BCM-IMMU\)"](#).

2. ESCAPE FROM LOCK MODE

1. Turn ignition switch OFF.
2. Turn ignition switch ON with registered key. (Do not start engine.) Wait 5 seconds.
3. Return the key to OFF position. Wait 5 seconds.
4. Repeat steps 2 and 3 twice (total of three cycles).
5. Start the engine.

Does engine start?

- Yes >> System is OK (Now system is escaped from "LOCK MODE").
No >> GO TO 3.

3. PERFORM INITIALIZATION WITH CONSULT-III

Perform initialization with CONSULT-III.

For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

NOTE:

If the initialization is not completed or malfunctions, CONSULT-III shows the message on the screen.

Can the system be initialized?

- Yes >> System is OK.
No >> GO TO 4.

4. PERFORM INITIALIZATION WITH CONSULT-III AGAIN

1. Replace BCM.
2. Perform initialization with CONSULT-III.
For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

NOTE:

If the initialization is not completed or malfunctions, CONSULT-III shows the message on the screen.

Can the system be initialized?

- Yes >> System is OK. (BCM is malfunctioning.)
No >> ECM is malfunctioning.
- Replace ECM.
 - Perform initialization with CONSULT-III
 - For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS"

P1614 CHAIN OF IMMU-KEY

INFOID:000000005349493

Self-diagnostic results:

"CHAIN OF IMMU-KEY" displayed on CONSULT-III screen

1. CONFIRM SELF-DIAGNOSTIC RESULTS

Confirm SELF-DIAGNOSTIC RESULTS "CHAIN OF IMMU-KEY" displayed on CONSULT-III screen.

Is CONSULT-III screen displayed?

- Yes >> GO TO 2.

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

No >> Refer to [BL-240, "CONSULT-III Functions \(ECM\)"](#).

2.CHECK KEY SLOT. INSTALLATION

Check key slot. installation. Refer to [BL-248, "Removal and Installation of Key Slot"](#).

OK or NG

- OK >> GO TO 3.
 NG >> Reinstall NATS antenna amp. correctly.

3.CHECK MECHANICAL KEY ID CHIP

Start engine with another registered.

Does the engine start?

- Yes >> Ignition key ID chip is malfunctioning.
- Replace the mechanical key
 - Perform initialization with CONSULT-III
- For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS"
- No >> GO TO 4.


4.CHECK POWER SUPPLY FOR KEY SLOT

1. Turn ignition switch "OFF".
2. Check voltage between key slot. connector and ground.

Key slot	Terminal		Voltage (V) (Approx.)
	(+)	(-)	
M14	1	Ground	Battery voltage

OK or NG

- OK >> GO TO 5.
 NG >> Check the following Harness for open or short between fuse and key slot.

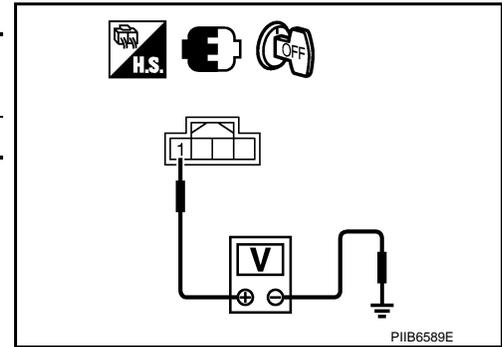


5.CHECK KEY SLOT SIGNAL LINE- 1

Check voltage between Key slot. connector and ground with analogue tester.

Key slot	Terminal		Conditions	Status of Voltage and tester
	(+)	(-)		
M14	2	Ground	Before tuning ignition switch to ON	Approx. 0 V
			Right after tuning ignition switch to ON	Pointer of tester should move

OK or NG

- OK >> GO TO 6.
 NG >> • Check harness for open or short between Key slot and BCM.
- NOTE:**
 If harness is OK, replace BCM, perform initialization with CONSULT-III. For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/NVIS".

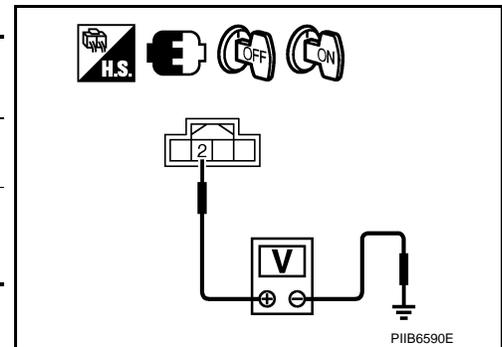


6.CHECK KEY SLOT SIGNAL LINE- 2

Check voltage between KEY SLOT. connector and ground with analogue tester.

IVIS (INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS)

< SERVICE INFORMATION >

Key slot	Terminal		Conditions	Status of Voltage and tester
	(+)	(-)		
M14	3	Ground	Before tuning ignition switch to ON	Approx. 0 V
			Right after tuning ignition switch to ON	Pointer of tester should move

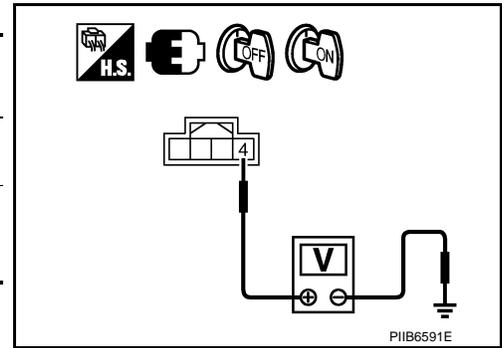

OK or NG

OK >> GO TO 7.

NG >> • Check harness for open or short between key slot and BCM.


NOTE:

If harness is OK, replace BCM, perform initialization with CONSULT-III. For initialization, refer to "CONSULT-III Operation Manual NATS-IVIS/EVIS".

7. CHECK KEY SLOT GROUND LINE CIRCUIT

1. Turn ignition switch "OFF".
2. Disconnect key slot connector.
3. Check continuity between key slot connector and ground.

Key slot	Terminal		Continuity
	(+)	(-)	
M14	8	Ground	Yes

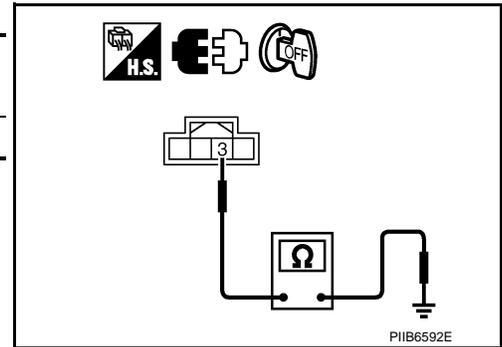

OK or NG


OK >> Key slot is malfunctioning. Refer to [BL-248. "Removal and Installation of Key Slot"](#)

NG >> Repair or replace key slot ground circuit.

Removal and Installation of Key Slot

REMOVAL

1. Remove instrument driver lower panel. Refer to [IP-11](#).
2. Disconnect key slot connector.
3. Remove key slot mounting screw, and then remove key slot.

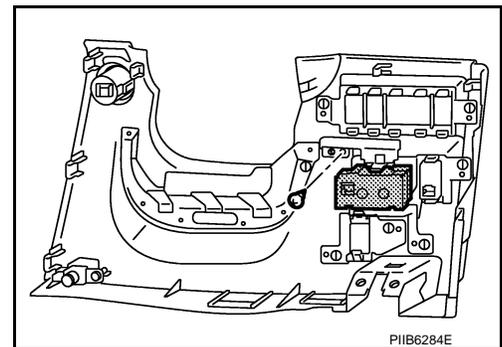

INSTALLATION

Installation is in the reverse order of removal.

INTEGRATED HOMELINK TRANSMITTER



< SERVICE INFORMATION >

INTEGRATED HOMELINK TRANSMITTER

Wiring Diagram - TRNSCV -

INFOID:000000005349495

BL-TRNSCV-01

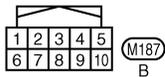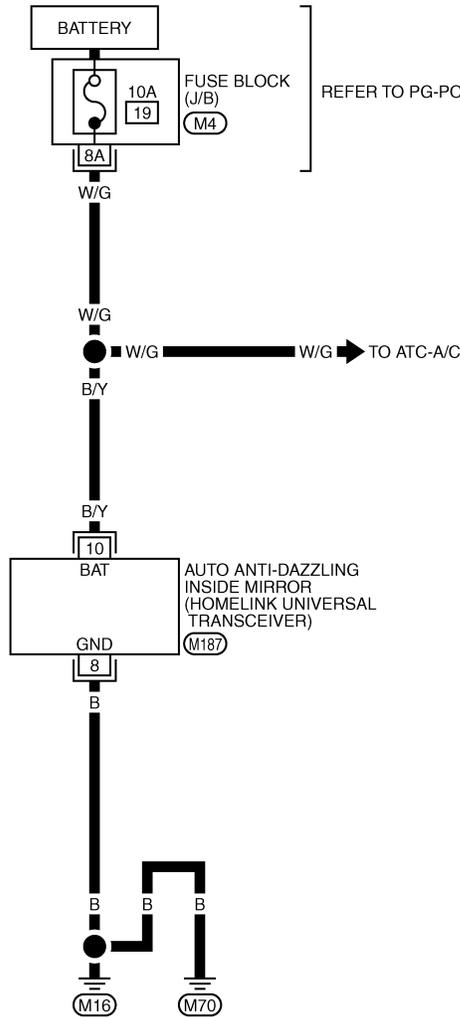

REFER TO THE FOLLOWING.
 (M4) - FUSE BLOCK-JUNCTION BOX (J/B)

TIWT2033E

Trouble Diagnosis

INFOID:000000005349496

DIAGNOSTIC PROCEDURE

SYMPTOM: Transmitter does not activate receiver.

Revision: 2009 June

BL-249

2010 M35/M45

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

INTEGRATED HOMELINK TRANSMITTER

< SERVICE INFORMATION >


Before conducting the procedure given below, make sure that system receiver (garage door opener, etc.) operates with original, hand-held transmitter. If NG, receiver or hand-held transmitter is malfunctioning, not vehicle related.

1. ILLUMINATE CHECK

1. Turn ignition switch "OFF".
2. Does red light (1) of transmitter illuminate when any transmitter button (2) is pressed?

YES or NO

- YES >> GO TO 2.
NO >> GO TO 3.

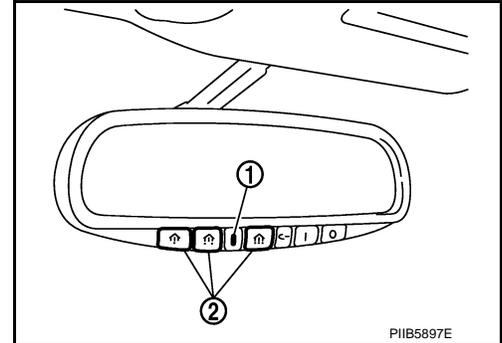

2. TRANSMITTER CHECK

Check transmitter with Tool*.

*:For details, refer to Technical Service Bulletin.


OK or NG

- OK >> Receiver or hand-held transmitter malfunction, not vehicle related.
NG >> Replace auto anti-dazzling inside mirror (homelink universal transceiver).

3. CHECK POWER SUPPLY

1. Disconnect auto anti-dazzling inside mirror (homelink universal transceiver) connector.
2. Check voltage between auto anti-dazzling inside mirror (homelink universal transceiver) harness connector and ground.

Terminal			Voltage (V) (Approx.)
(+)		(-)	
Auto anti-dazzling inside mirror (Homelink universal transceiver) connector	Terminal		
M187	10	Ground	Battery voltage

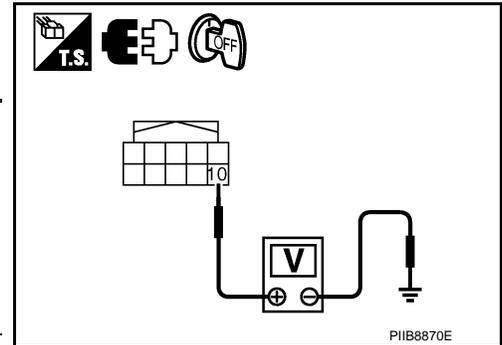


OK or NG

- OK >> GO TO 4.
NG >> Check the following.
- 10A fuse [No. 19 located in the fuse block (J/B)]
 - Harness for open or short between fuse and auto anti-dazzling inside mirror (homelink universal transceiver).

4. GROUND CIRCUIT CHECK

Check continuity between auto anti-dazzling inside mirror (homelink universal transceiver) harness connector and ground.

Terminal			Continuity
Auto anti-dazzling inside mirror (Homelink universal transceiver) connector	Terminal	Ground	
M187	8		Yes

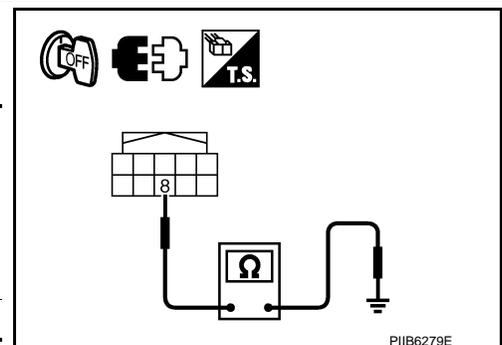

OK or NG

INTEGRATED HOMELINK TRANSMITTER

< SERVICE INFORMATION >

OK >> Replace auto anti-dazzling inside mirror (homelink universal transceiver).
NG >> Repair harness.

A

B

C

D

E

F

G

H

BL

J

K

L

M

N

O

P


BODY REPAIR

< SERVICE INFORMATION >

BODY REPAIR

Body Exterior Paint Color

INFOID:000000005349497

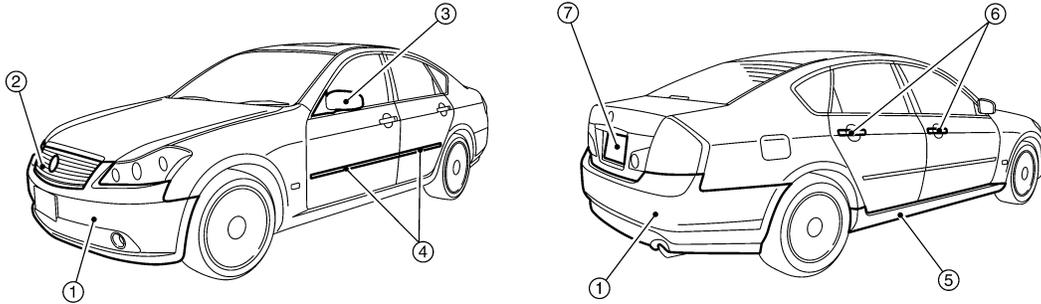

SIA2451E

Component		Color code	BB30	BHAA	BKAC	BKH3	BK23	BK51	BK52	BQAA	
		Description	Blue	Beige	Brown-ish Gray	Black	Silver	Gray	Dark Gray	White	
		Paint type ^{note}	M	TM	TM	2S	M	M	PM	3P	
		Hard clear coat	×	×	×	×	×	×	×	×	
1	Bumper fascia	Body color	BB30	BHAA	BKAC	BKH3	BK23	BK51	BK52	BQAA	
2	Front grille	Chromium plate	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	
3	Door outside mirror	Cover	Body color	BB30	BHAA	BKAC	BKH3	BK23	BK51	BK52	BQAA
4	Side guard molding	Body color	BB30	BHAA	BKAC	BKH3	BK23	BK51	BK52	BQAA	
5	Center mudguard	Body color	BB30	BHAA	BKAC	BKH3	BK23	BK51	BK52	BQAA	
6	Door outside handle	Chromium plate	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	
		Body color	BB30	BHAA	BKAC	BKH3	BK23	BK51	BK52	BQAA	
7	Trunk lid finisher	Molding	Chromium plate	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	Cr2P	
		Finisher	Body color	BB30	BHAA	BKAC	BKH3	BK23	BK51	BK52	BQAA

NOTE:

- 2S: Solid + Clear
- M: Metallic
- P: 2-Coat pearl
- 3P: 3-Coat pearl
- FPM: Iron oxide pearl
- RPM: Multi flex color
- TPM: Titanium pearl metallic
- TM: Micro titanium metallic
- PM: Pearl metallic


BODY REPAIR

< SERVICE INFORMATION >

Body Component Parts

INFOID:000000005349498

UNDERBODY COMPONENT PARTS

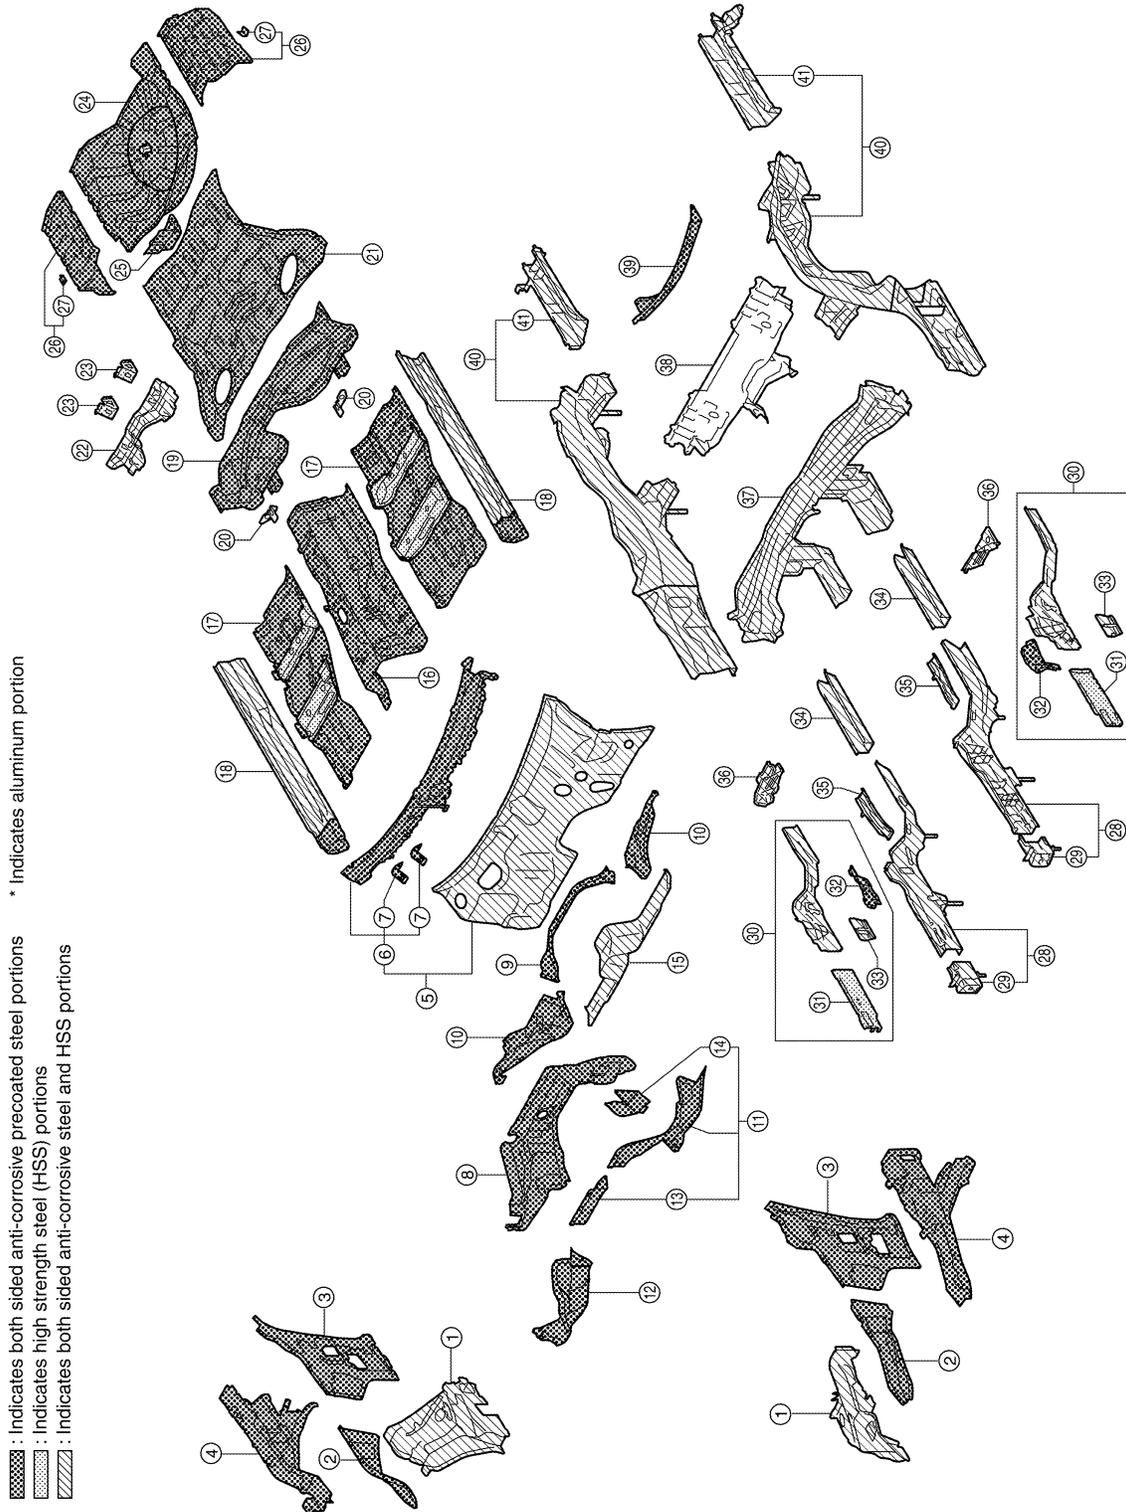

SIIA2736E

1. Front strut housing
2. Upper front hoodledge
3. Upper rear hoodledge


BODY REPAIR

< SERVICE INFORMATION >

4. Hoodledge reinforcement
5. Upper dash assembly
6. Upper dash crossmember assembly
7. Harness clamp bracket
8. Cowl top
9. Lower center dash crossmember reinforcement
10. Lower dash crossmember reinforcement
11. Lower dash crossmember assembly (LH)
12. Lower dash crossmember (RH)
13. Front crossmember center
14. Steering column mounting reinforcement
15. Lower dash
16. Front floor center
17. Front floor
18. Inner sill
19. Rear seat crossmember reinforcement assembly
20. Front carpet bracket
21. Rear floor front
22. Rear floor seat belt anchor reinforcement
23. Rear seat reclining device bracket
24. Rear floor rear
25. Differential mounting bracket assembly
26. Rear floor side assembly
27. Rear bumper side stay
28. Front side member assembly
29. Front side member front extension
30. Front side member closing plate assembly
31. Front side member front closing plate
32. Front side member center closing plate
33. Front suspension mounting bracket
34. Front side member rear extension
35. Front side member rear reinforcement
36. Front side member outrigger assembly
37. Rear seat crossmember
38. 2ND rear crossmember
39. Rear crossmember
40. Rear side member assembly
41. Rear side member extension

BODY REPAIR

< SERVICE INFORMATION > BODY COMPONENT PARTS

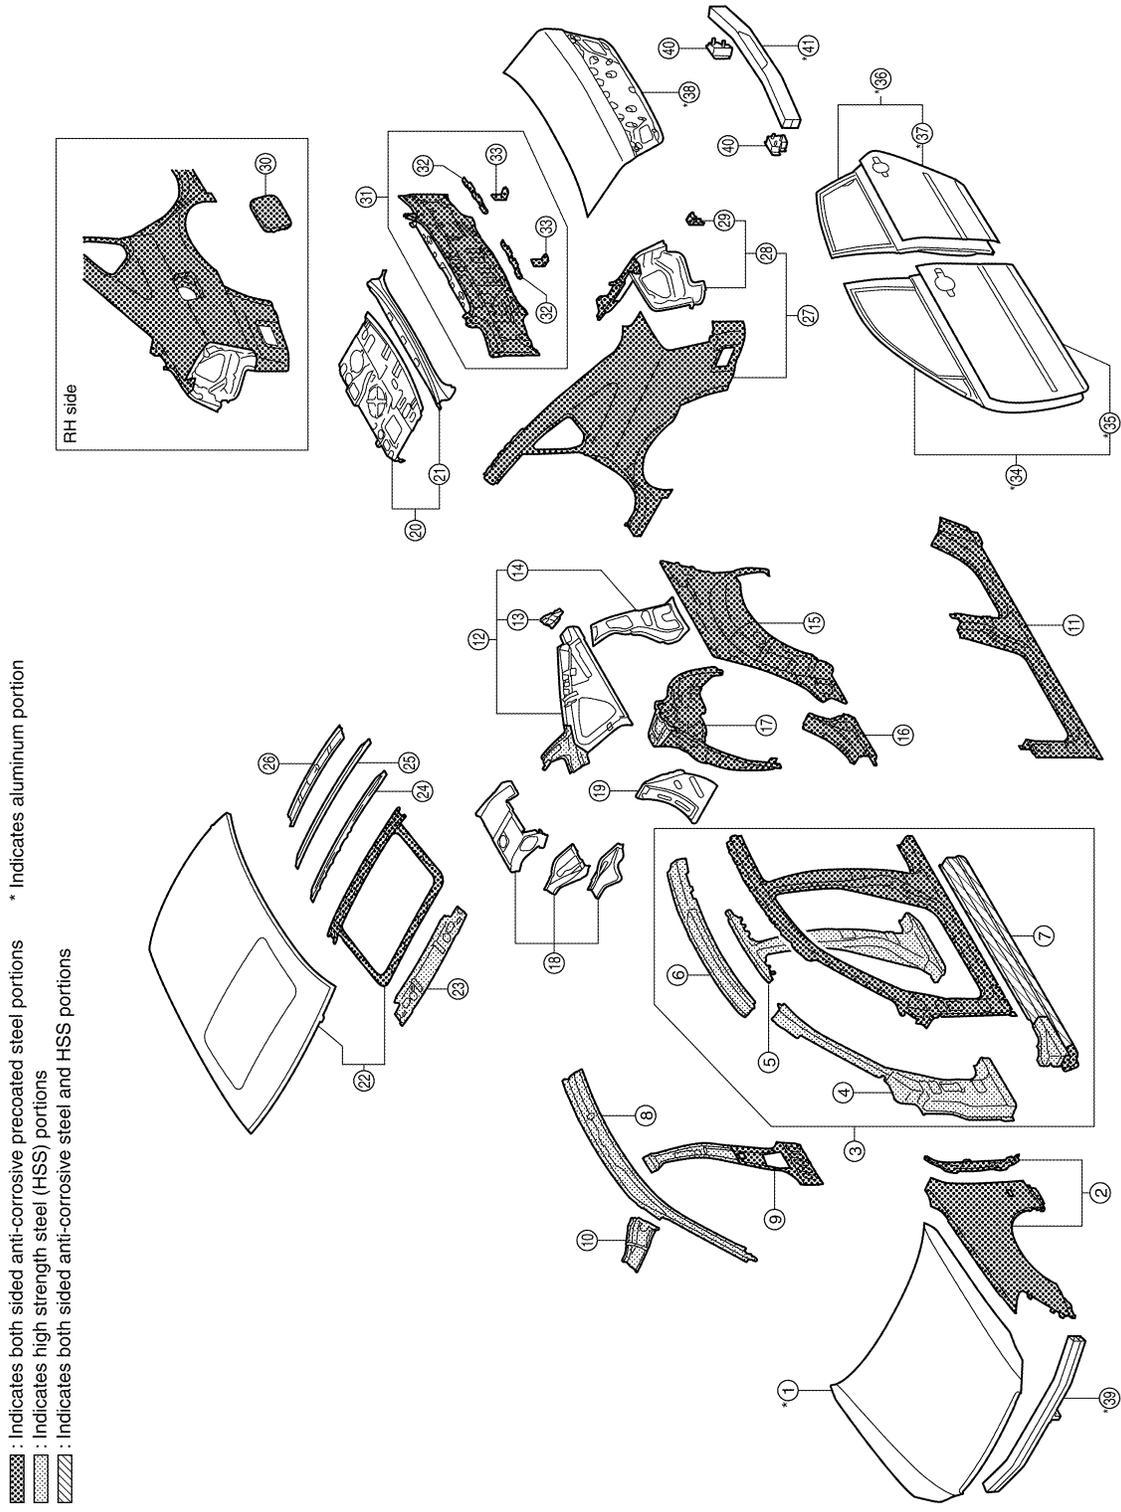

: Indicates both sided anti-corrosive pre-coated steel portions
 : Indicates high strength steel (HSS) portions
 * : Indicates aluminum portion
 : Indicates both sided anti-corrosive steel and HSS portions

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

- 1. Hood
- 2. Front fender (RH&LH)
- 3. Side body assembly (RH&LH)
- 4. Outer front pillar reinforcement (RH&LH)
- 5. Center pillar reinforcement (RH&LH)

SIIA2453E

BODY REPAIR

< SERVICE INFORMATION >

6. Outer roof side rail reinforcement (RH&LH)
7. Outer sill reinforcement (RH&LH)
8. Inner roof side rail (RH&LH)
9. Inner center pillar (RH&LH)
10. Front roof rail brace (RH&LH)
11. Outer sill (RH&LH)
12. Inner rear pillar assembly (RH&LH)
13. Inner rear pillar rear (RH&LH)
14. Inner rear pillar reinforcement (RH&LH)
15. Outer rear wheelhouse (RH&LH)
16. Outer rear wheelhouse extension (RH&LH)
17. Inner rear wheelhouse (RH&LH)
18. Side parcel shelf assembly (RH&LH)
19. Seat back support (RH&LH)
20. Parcel shelf assembly
21. Rear waist
22. Roof assembly
23. Front roof rail
24. Front roof bow
25. Rear roof bow
26. Rear roof rail
27. Rear fender assembly (RH&LH)
28. Rear fender extension (RH&LH)
29. Rear bumper side bracket
30. Fuel filler lid (RH)
31. Rear panel assembly
32. Upper rear bumper retainer
33. Lower rear bumper retainer
34. Front door assembly (RH&LH)
35. Outer front door panel (RH&LH)
36. Rear door assembly (RH&LH)
37. Outer rear door panel (RH&LH)
38. Trunk lid
39. Front bumper reinforcement
40. Rear bumper stay
41. Rear bumper reinforcement

Corrosion Protection

INFOID:000000005349499

DESCRIPTION

To provide improved corrosion prevention, the following anti-corrosive measures have been implemented in NISSAN production plants. When repairing or replacing body panels, it is necessary to use the same anti-corrosive measures.


Anti-corrosive Precoated Steel (Galvannealed Steel)

BODY REPAIR

< SERVICE INFORMATION >

To improve repairability and corrosion resistance, a new type of anti-corrosive precoated steel sheet has been adopted replacing conventional zinc-coated steel sheet.

Galvannealed steel is electroplated and heated to form Zinc-iron alloy, which provides excellent and long term corrosion resistance with cationic electrodeposition primer.

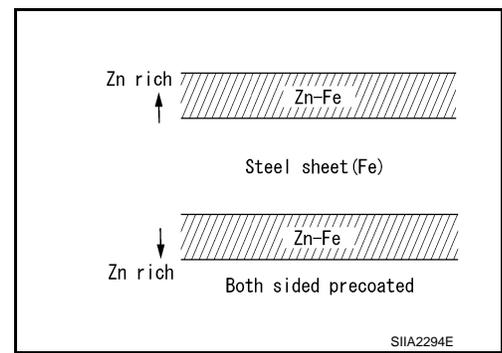


Nissan Genuine Service Parts are fabricated from galvannealed steel. Therefore, it is recommended that GENUINE NISSAN PARTS or equivalent be used for panel replacement to maintain the anti-corrosive performance built into the vehicle at the factory.

Phosphate Coating Treatment and Cationic Electrodeposition Primer

A phosphate coating treatment and a cationic electrodeposition primer, which provide excellent corrosion protection, are employed on all body components.

CAUTION:

Confine paint removal during welding operations to an absolute minimum.

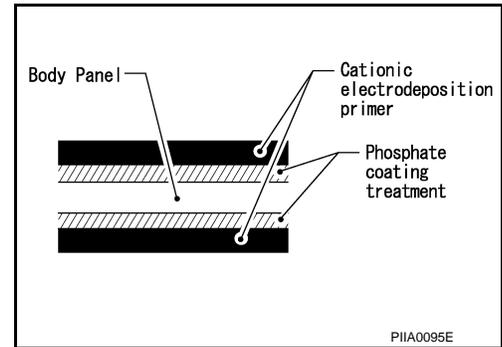

Nissan Genuine Service Parts are also treated in the same manner. Therefore, it is recommended that GENUINE NISSAN PARTS or equivalent be used for panel replacement to maintain anti-corrosive performance built into the vehicle at the factory.

UNDERCOATING

The underside of the floor and wheelhouse are undercoated to prevent rust, vibration, noise and stone chipping. Therefore, when such a panel is replaced or repaired, apply undercoating to that part. Use an undercoating which is rust preventive, soundproof, vibration-proof, shock-resistant, adhesive, and durable.

Precautions in Undercoating


1. Do not apply undercoating to any place unless specified (such as the areas above the muffler and three way catalyst which are subjected to heat).
2. Do not undercoat the exhaust pipe or other parts which become hot.
3. Do not undercoat rotating parts.
4. Apply bitumen wax after applying undercoating.

BODY REPAIR

< SERVICE INFORMATION >

5. After putting seal on the vehicle, put undercoating on it.

-  : Indicates undercoated portions.
-  : Indicates sealed portions.

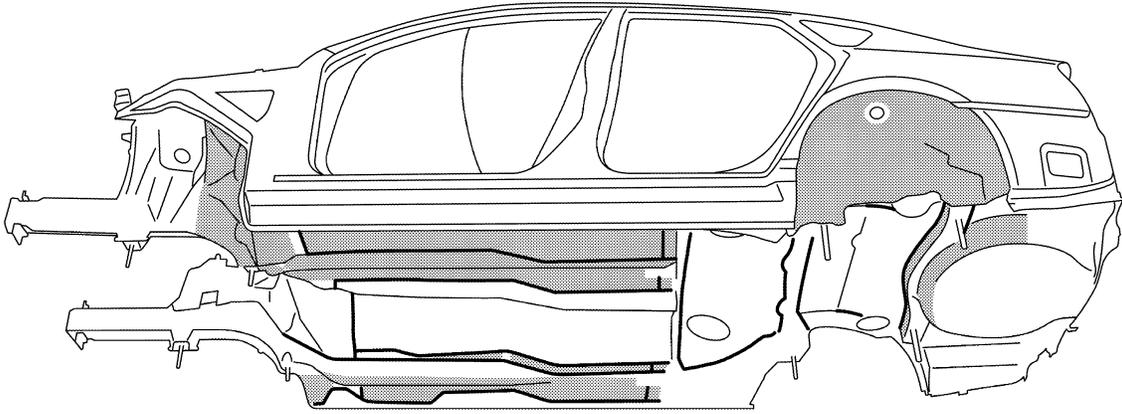

SIA2735E

INFOID:000000005349500



Body Sealing

DESCRIPTION

BODY REPAIR

< SERVICE INFORMATION >

The following figure shows the areas which are sealed at the factory. Sealant which has been applied to these areas should be smooth and free from cuts or gaps. Care should be taken not to apply an excess amount of sealant and not to allow other unaffected parts to come into contact with the sealant.

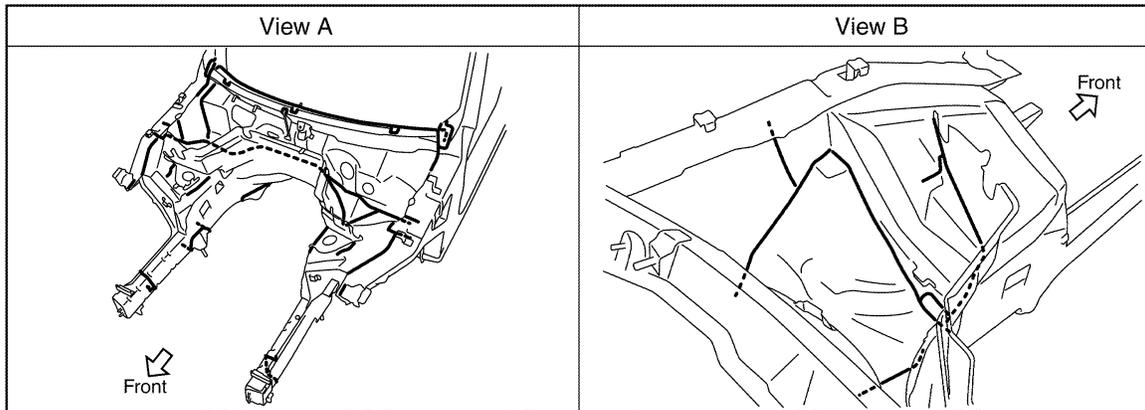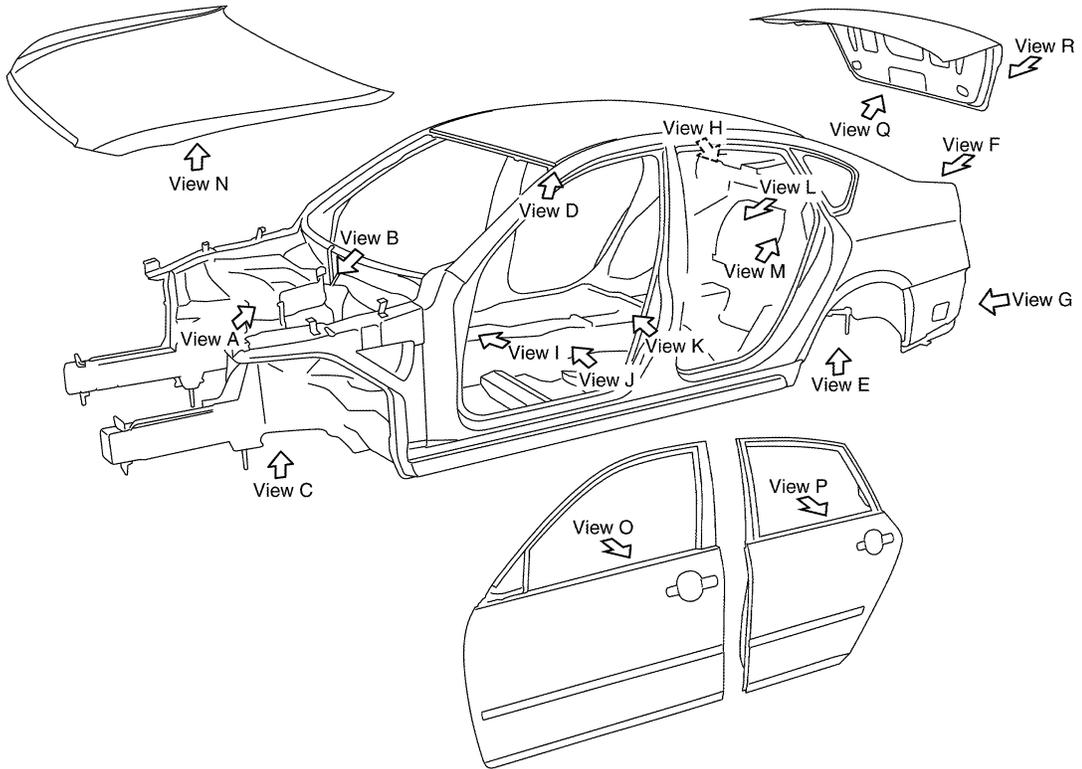


SIIA2734E

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR


< SERVICE INFORMATION >

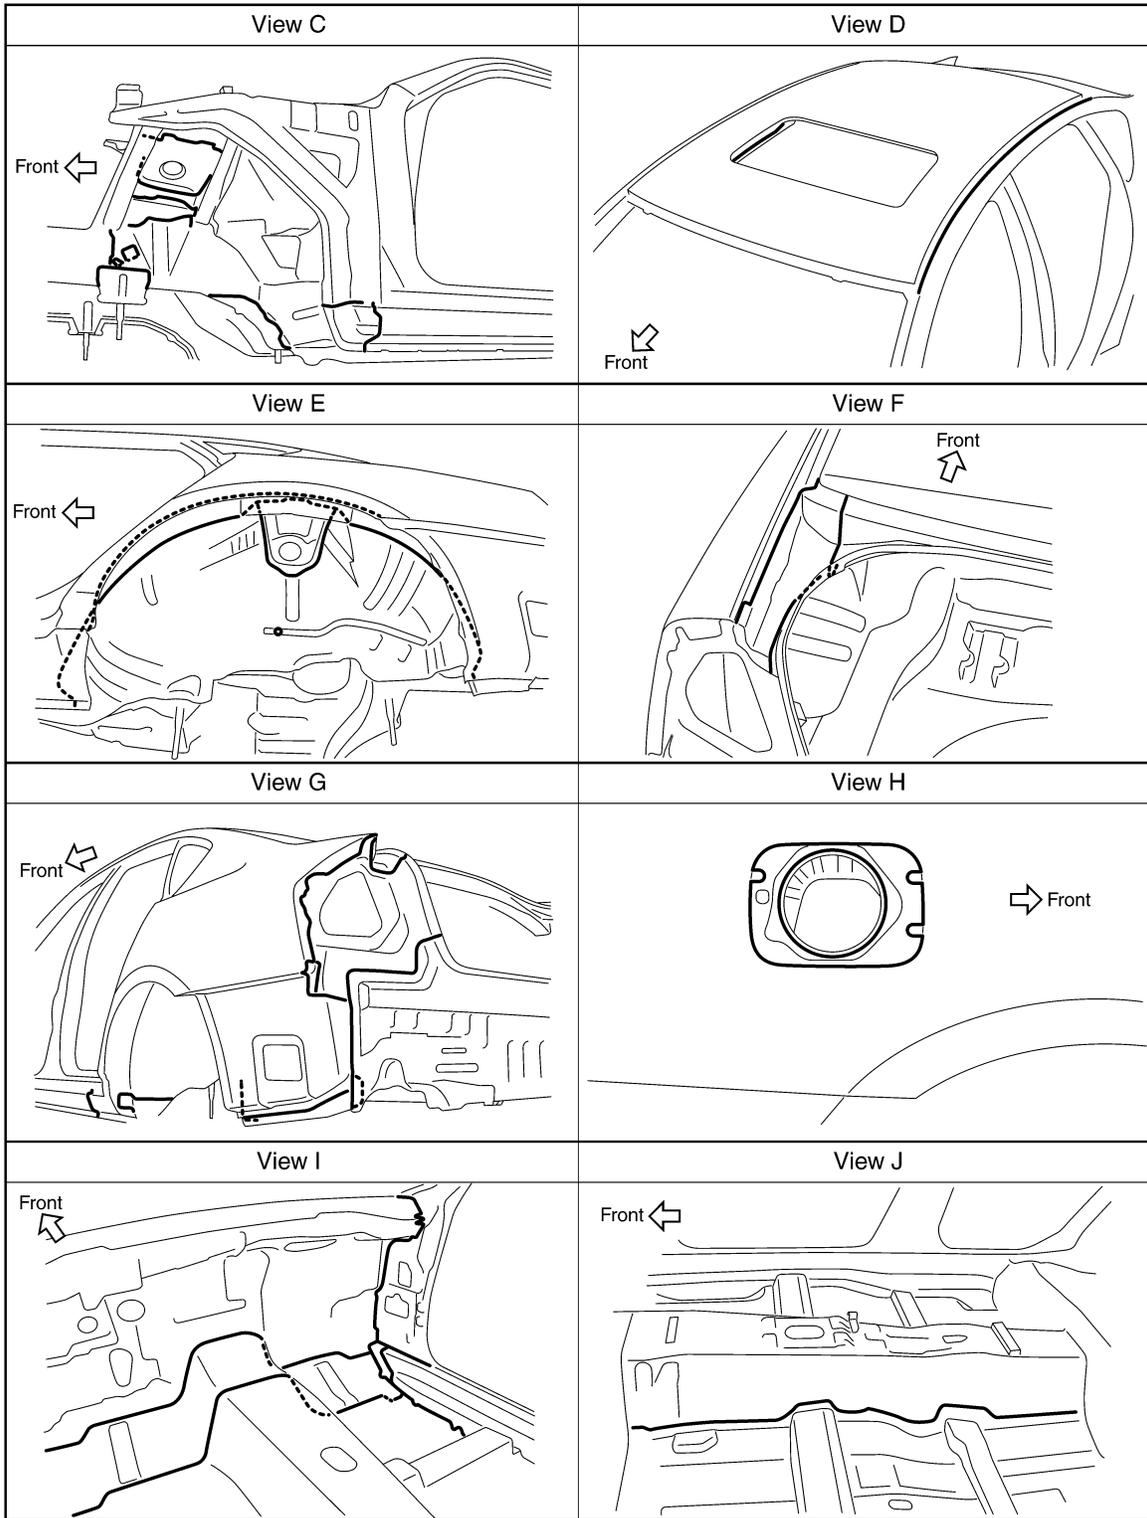

SIIA2456E

BODY REPAIR

< SERVICE INFORMATION >

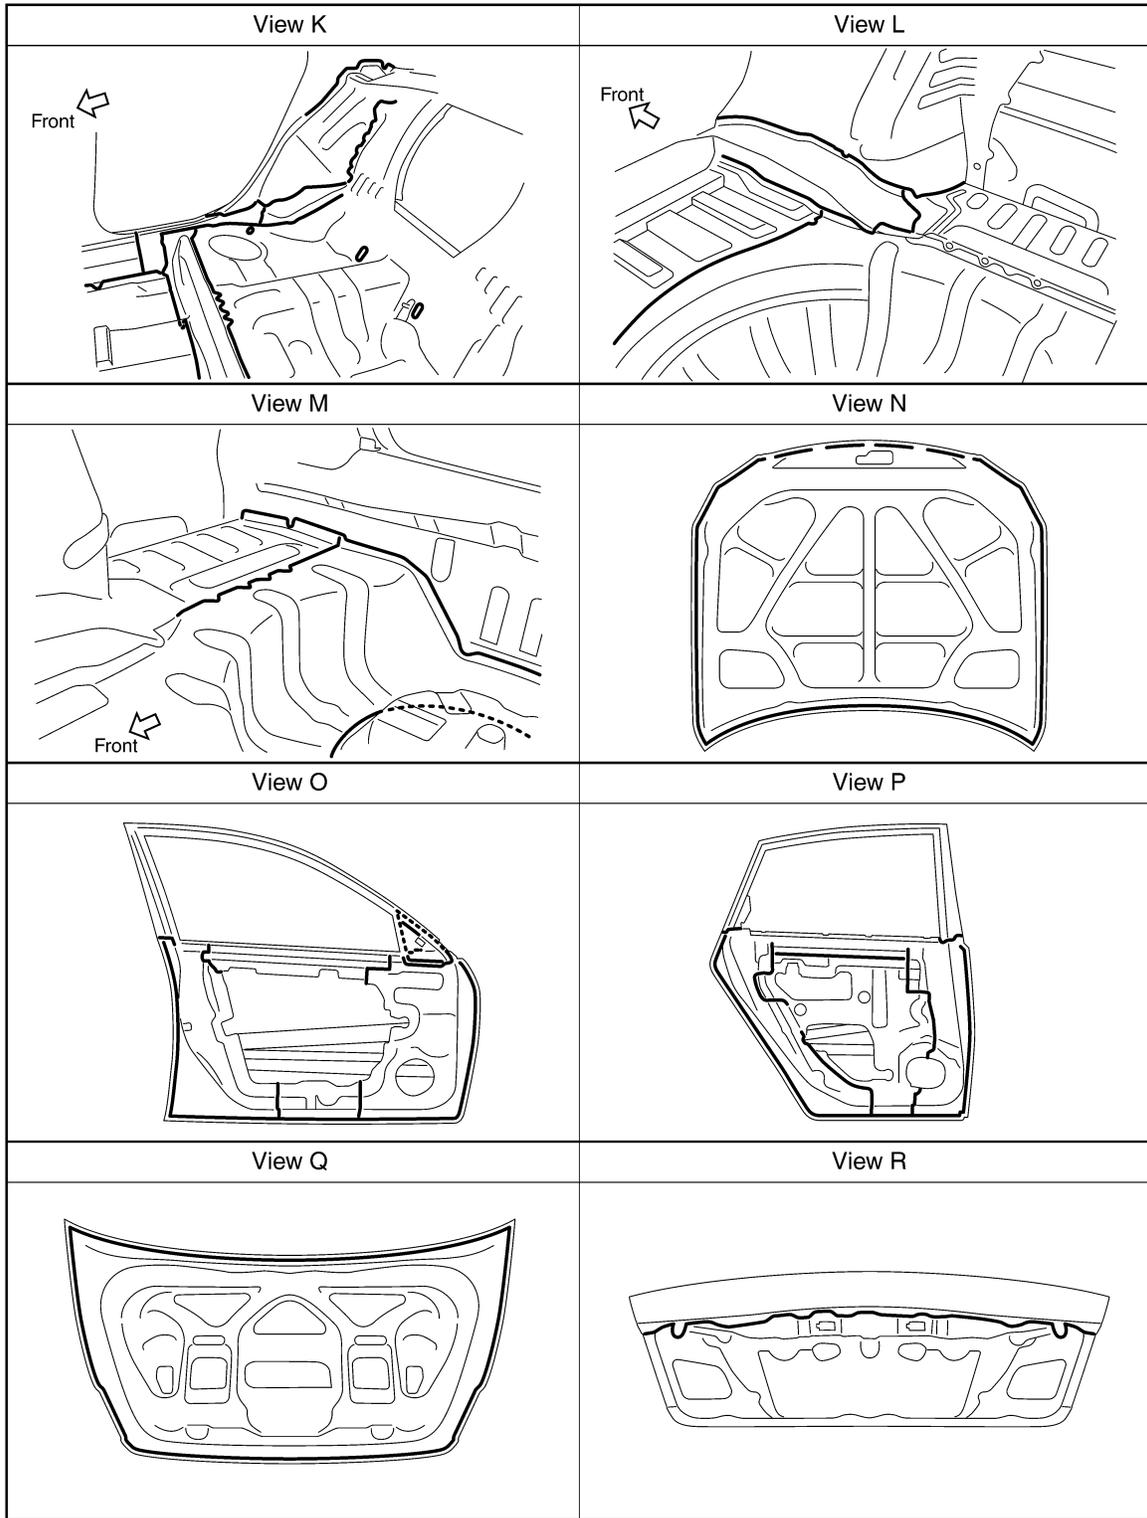

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

SIIA2457E


BODY REPAIR

< SERVICE INFORMATION >

Body Construction

INFOID:000000005349501

BODY CONSTRUCTION

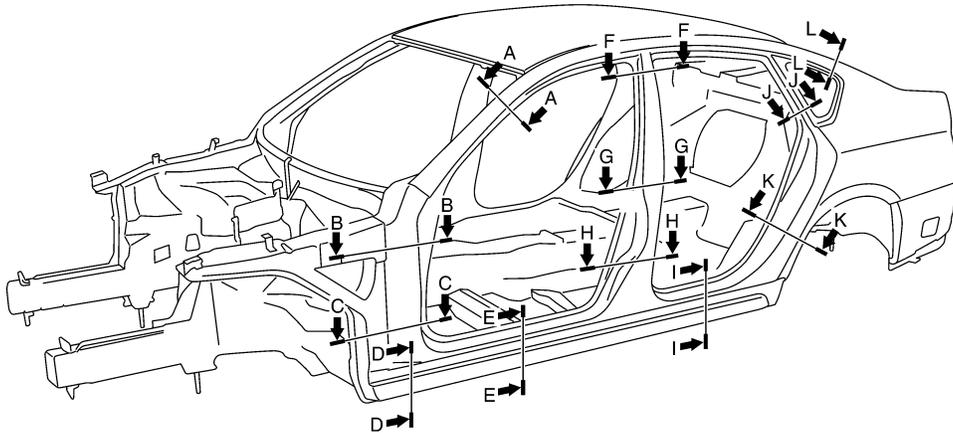

Section A-A	Section B-B	Section C-C	Section D-D
Section E-E	Section F-F	Section G-G	Section H-H
Section I-I	Section J-J	Section K-K	Section L-L

SIIA2458E

Body Alignment


INFOID:000000005349502

BODY CENTER MARKS

BODY REPAIR

< SERVICE INFORMATION >

A mark has been placed on each part of the body to indicate the vehicle center. When repairing parts damaged by an accident which might affect the vehicle frame (members, pillars, etc.), more accurate and effective repair will be possible by using these marks together with body alignment specifications.

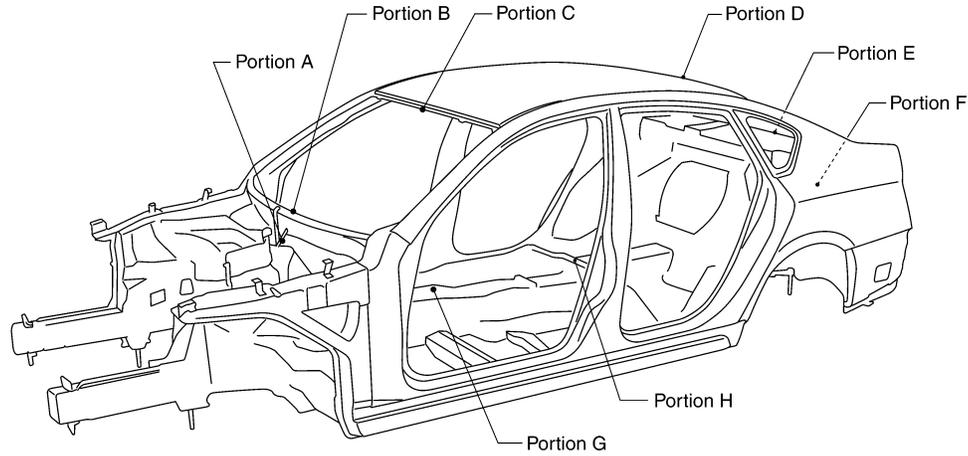

Portion A,B	Portion C,D	Portion E
<p>Flange end</p> <p>Embossment</p> <p>Front</p> <p>● Cowl top</p>	<p>Embossment</p> <p>Front</p> <p>● Front roof</p> <p>● Rear roof</p>	<p>Front</p> <p>Embossment</p> <p>● Rear waist panel</p>
Portion F	Portion G,H	
<p>Embossment</p> <p>Front</p> <p>● Rear panel</p>	<p>Hole 5dia.</p> <p>Hole 5dia.</p> <p>Front</p> <p>● Front floor</p> <p>● Rear floor</p>	



SIIA2459E

PANEL PARTS MATCHING MARKS

BODY REPAIR

< SERVICE INFORMATION >

A mark has been placed on each body panel to indicate the parts matching positions. When repairing parts damaged by an accident which might affect the vehicle structure (members, pillars, etc.), more accurate and effective repair will be possible by using these marks together with body alignment specifications.

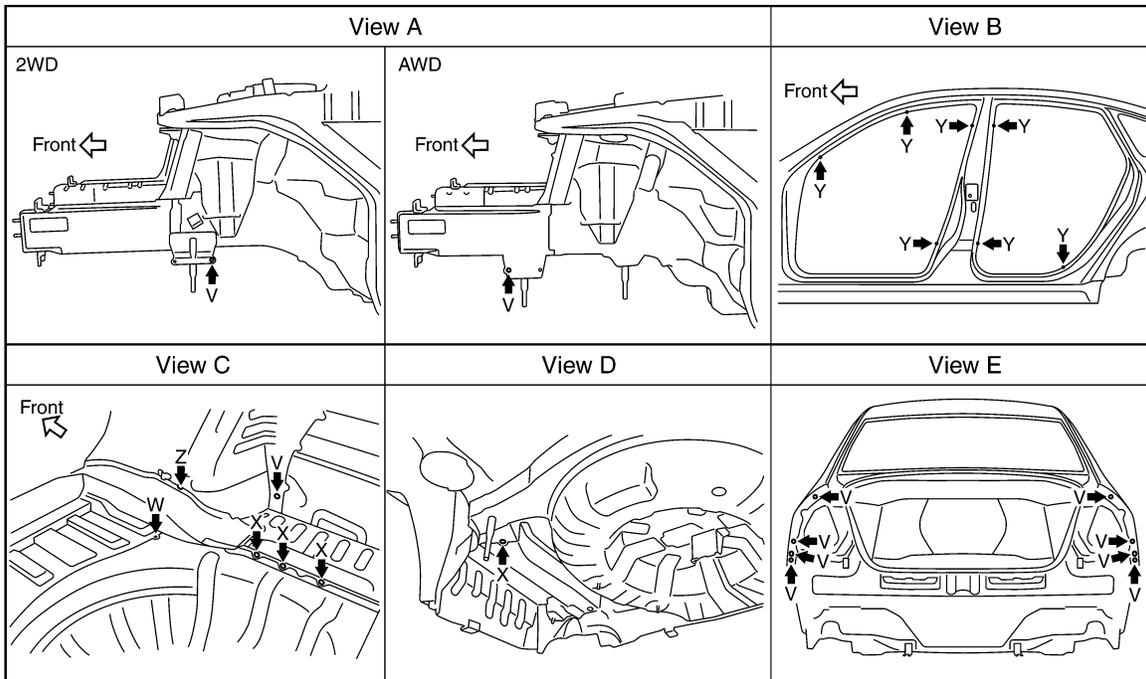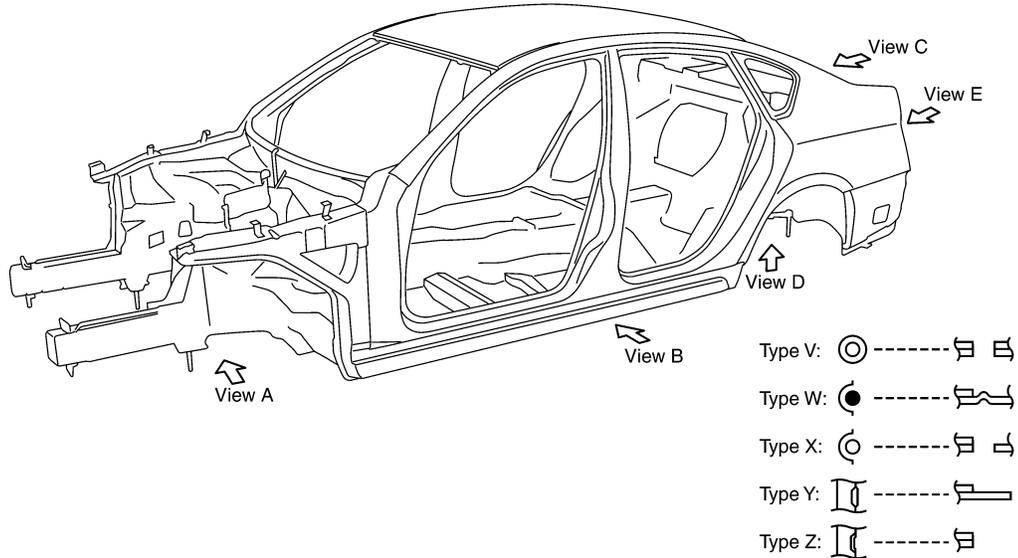


S1IA2460E

DESCRIPTION

- All dimensions indicated in the figures are actual.
- When using a tracking gauge, adjust both pointers to equal length. Then check the pointers and gauge itself to make sure there is no free play.
- When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
- Measurements should be taken at the center of the mounting holes.
- An asterisk (*) following the value at the measuring point indicates that the measuring point on the other side is symmetrically the same value.
- The coordinates of the measurement points are the distances measured from the standard line of "X", "Y" and "Z".

BODY REPAIR

< SERVICE INFORMATION >

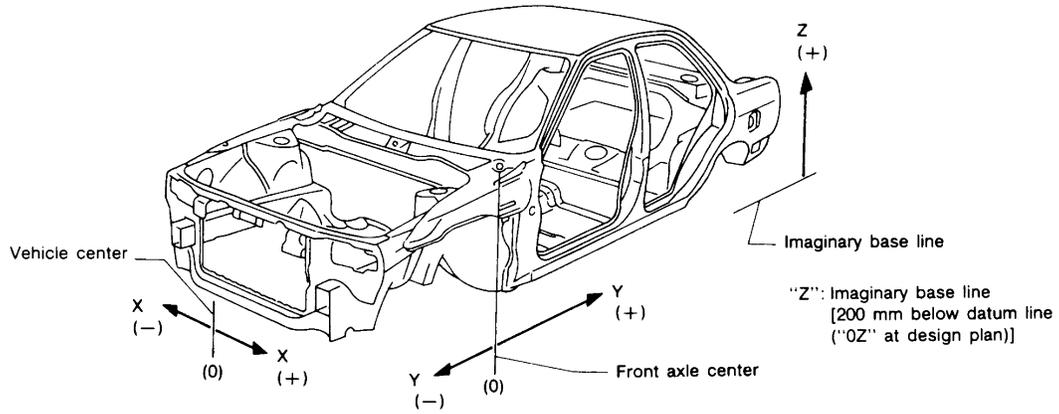

PIIA0104E

ENGINE COMPARTMENT

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P



BODY REPAIR


< SERVICE INFORMATION >

Measurement

Figures marked with a (*) indicate symmetrically identical dimensions on both right and left hand sides of the vehicle.

Unit : mm

② : 2WD ④ : AWD

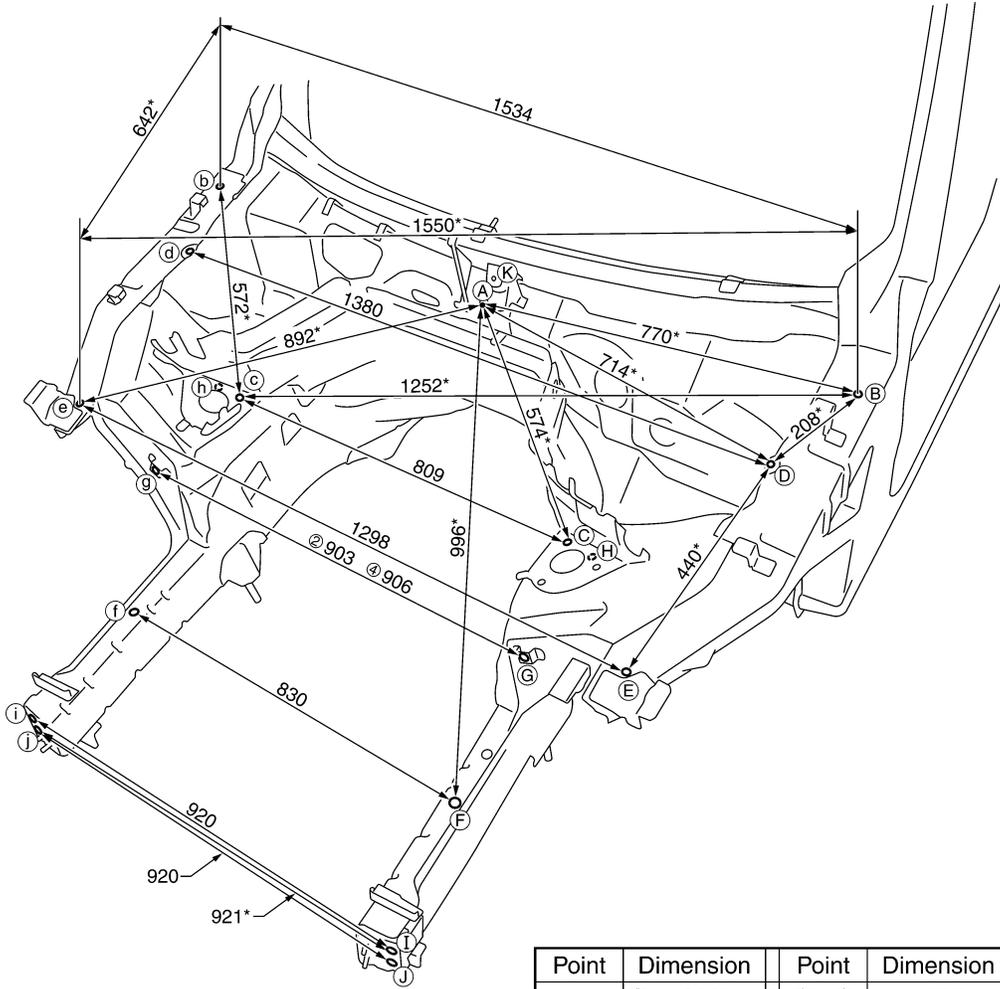







Point	Dimension	Point	Dimension
C~g	② 886*	K~C	567
	④ 888*	K~c	607
H~h	② 903	K~E	869
	④ 906	K~e	911
K~B	738	K~F	1,005
K~b	796	K~f	1,028

SIIA2461E

BODY REPAIR

< SERVICE INFORMATION >

Measurement Points

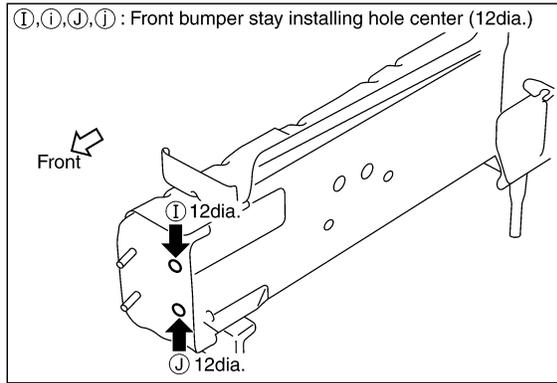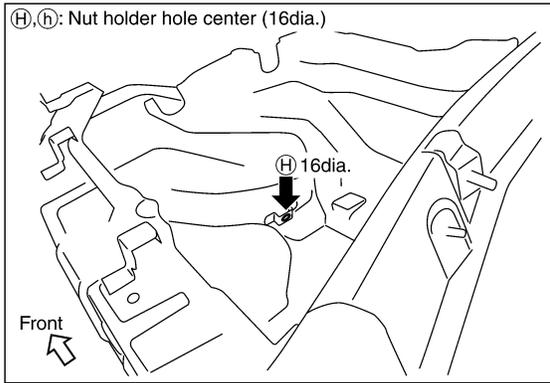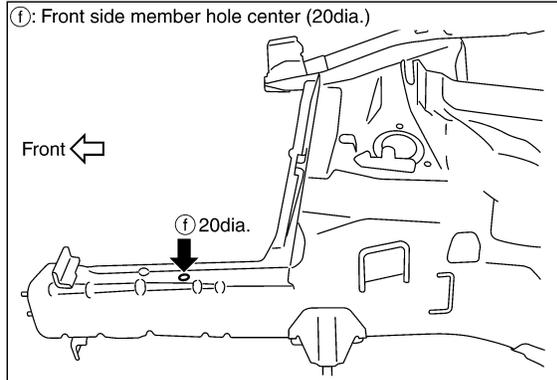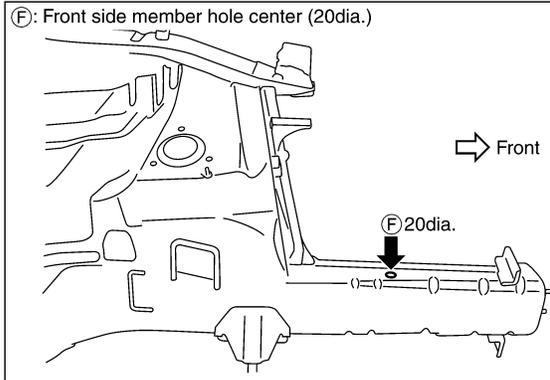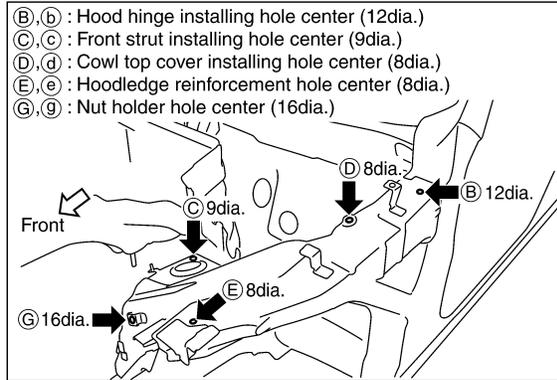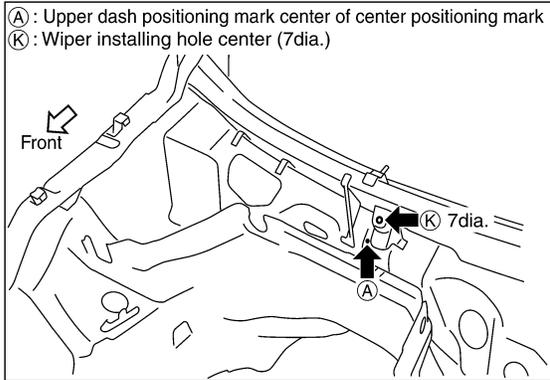

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

UNDERBODY

SIIA2462E

BODY REPAIR

< SERVICE INFORMATION >

Measurement


Unit : mm

Figures marked with a * indicate symmetrically identical dimensions on both right and left hand sides of the vehicle.

As viewed from underside.

★ : Bolt head
 ② : 2WD
 ④ : AWD

All dimensions indicated in this figure are actual.

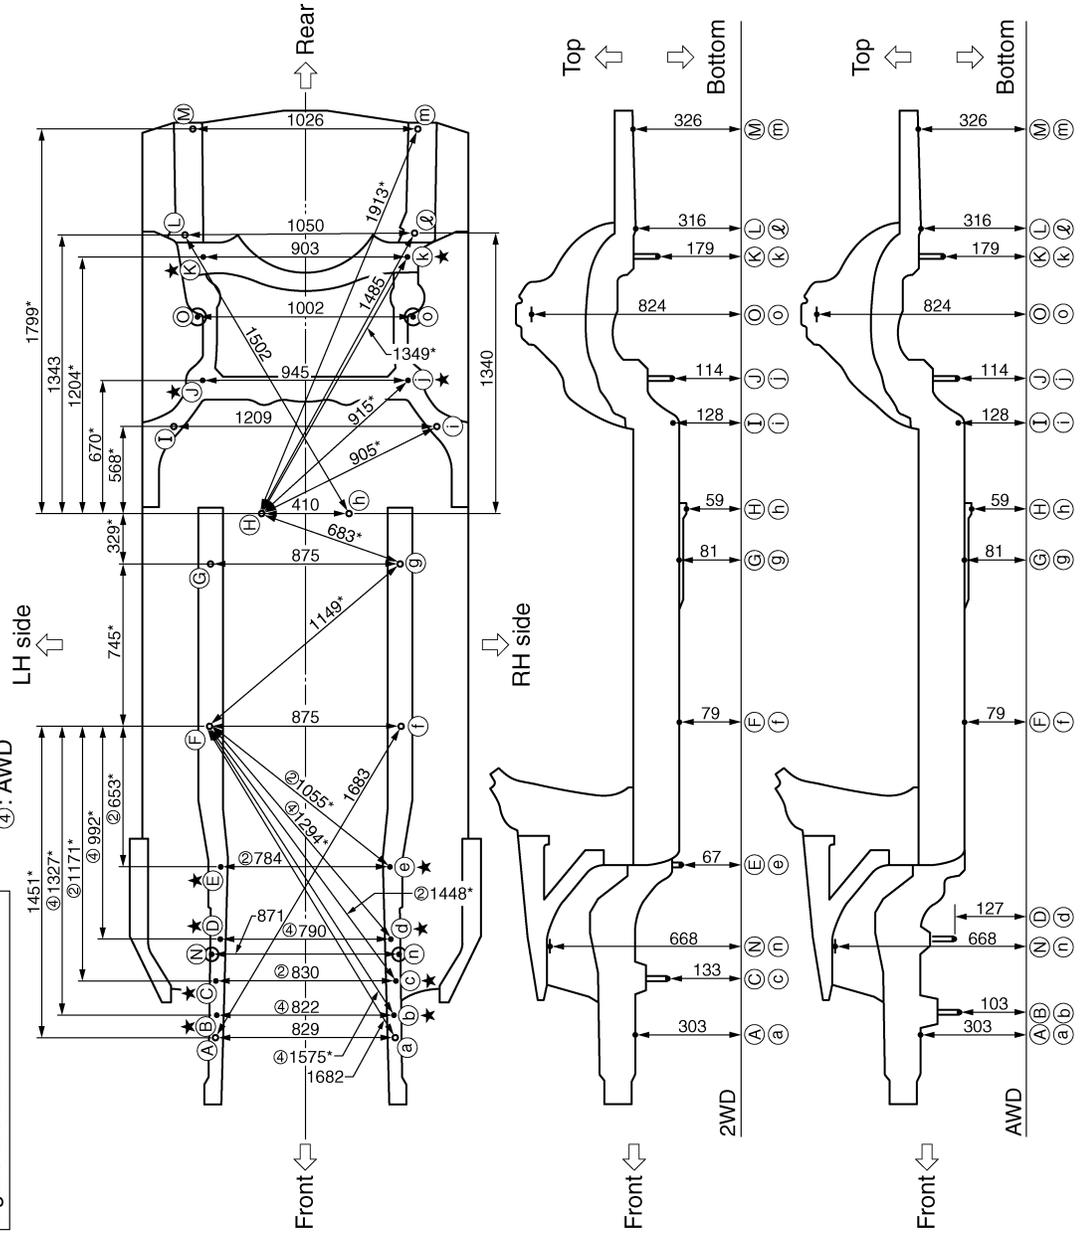

SIIA2792E


BODY REPAIR

< SERVICE INFORMATION >

Measurement Points


As viewed from underside.

Unit : mm

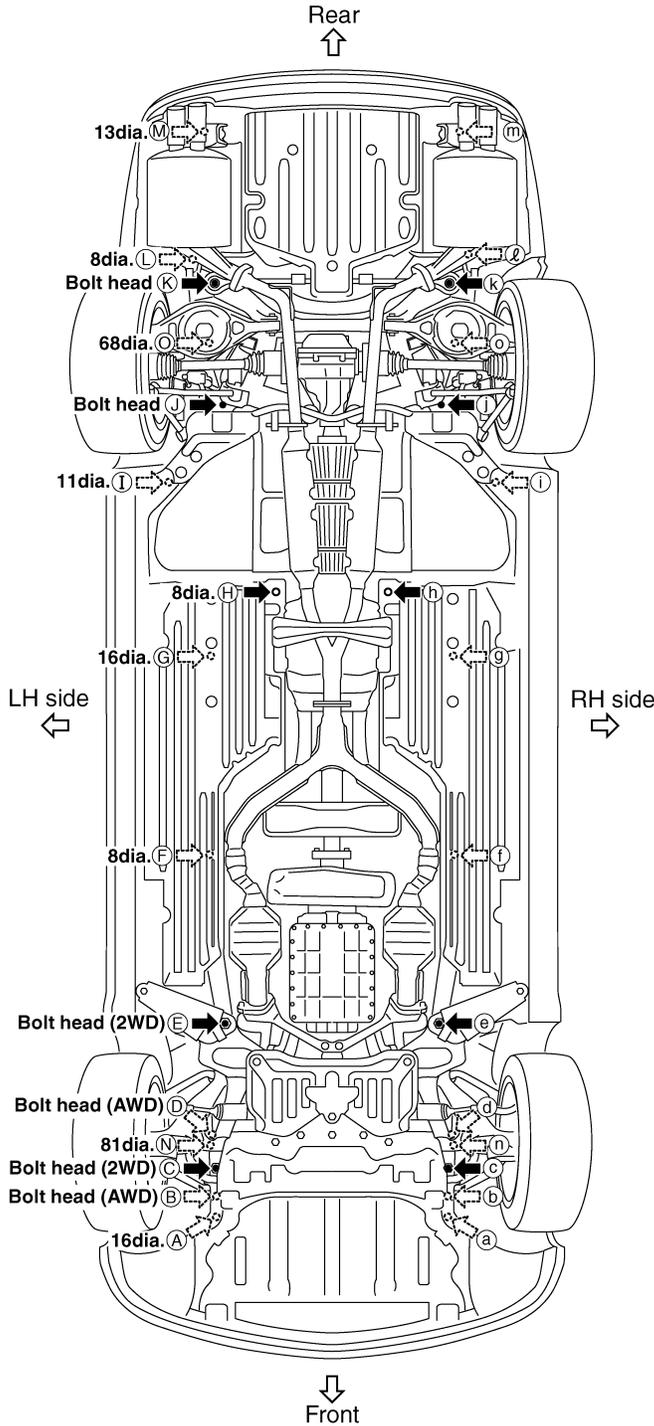

Coordinates:

(A)	(H, h)
X:416	X:±205
Y:-368	Y:2042
Z:303	Z:59
(a)	(I, i)
X:-413	X:±605
Y:-368	Y:2440
Z:303	Z:128
(B, b)	(J, j)
X:±411	X:±473
Y:-261	Y:2654
Z:103	Z:114
(C, c)	(K, k)
X:±415	X:±452
Y:-104	Y:3214
Z:133	Z:179
(D, d)	(L)
X:±395	X:550
Y:76	Y:3315
Z:127	Z:316
(E, e)	(L)
X:±392	X:-500
Y:414	Y:3323
Z:67	Z:316
(F, f)	(M, m)
X:±438	X:±513
Y:1066	Y:3795
Z:79	Z:326
(G, g)	
X:±438	
Y:1810	
Z:81	

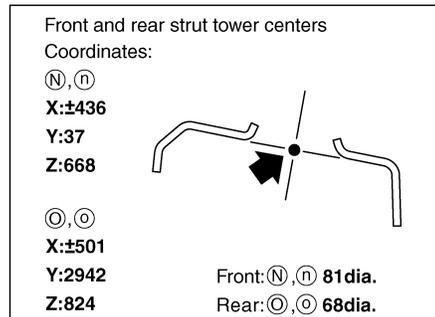

S1IA2793E

PASSENGER COMPARTMENT


BODY REPAIR

< SERVICE INFORMATION >

Measurement

Unit : mm

Figures marked with a (*) indicate symmetrically identical dimensions on both right and left hand sides of the vehicle.

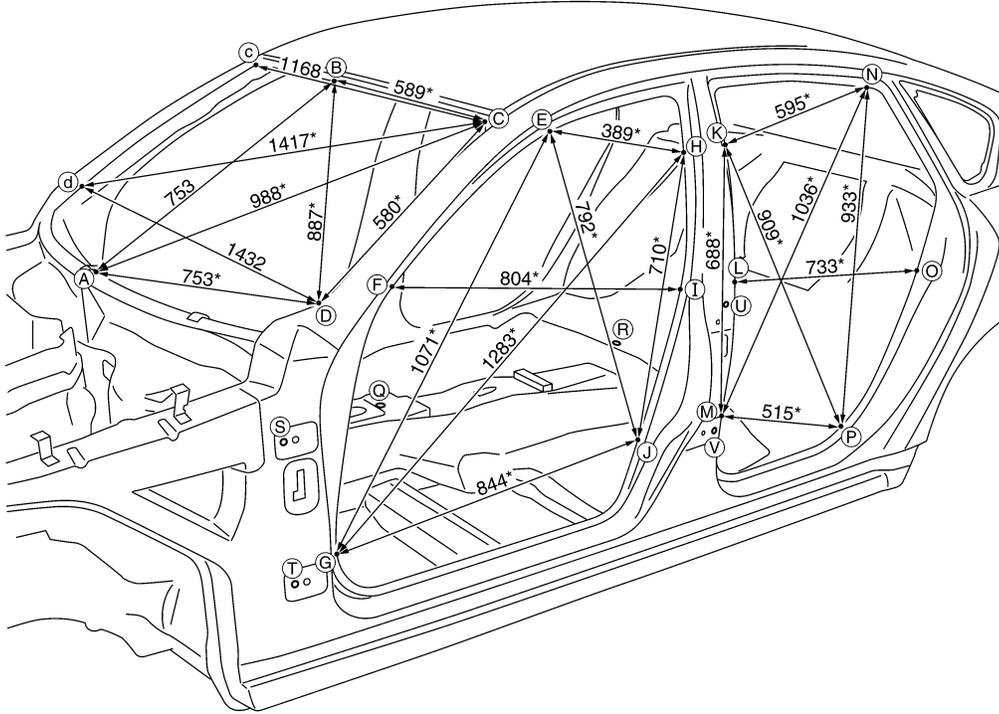


Point	Dimension	Point	Dimension	Point	Dimension
E~e	1,221	K~m	1,551*	Q~G	923*
E~g	1,722*	K~n	1,376*	Q~H	1,114*
E~h	1,322*	K~P	1,667*	Q~I	959*
E~j	1,566*	L~l	1,490	Q~J	808*
F~f	1,446	L~o	1,642*	R~K	1,004*
F~i	1,673*	M~m	1,482	R~L	880*
G~g	1,491	M~n	1,680*	R~M	797*
G~h	1,896*	M~P	1,576*	R~N	1,092*
G~j	1,715*	N~n	1,181	R~O	937*
H~h	1,307	N~P	1,624*	R~P	780*
H~j	1,568*	O~o	1,448	S~U	1,193*
I~i	1,488	P~P	1,496	S~V	1,186*
J~j	1,495	Q~E	1,043*	T~U	1,254*
K~k	1,304	Q~F	1,001*	T~V	1,164*

SIIA2465E

BODY REPAIR

< SERVICE INFORMATION >

Measurement Points

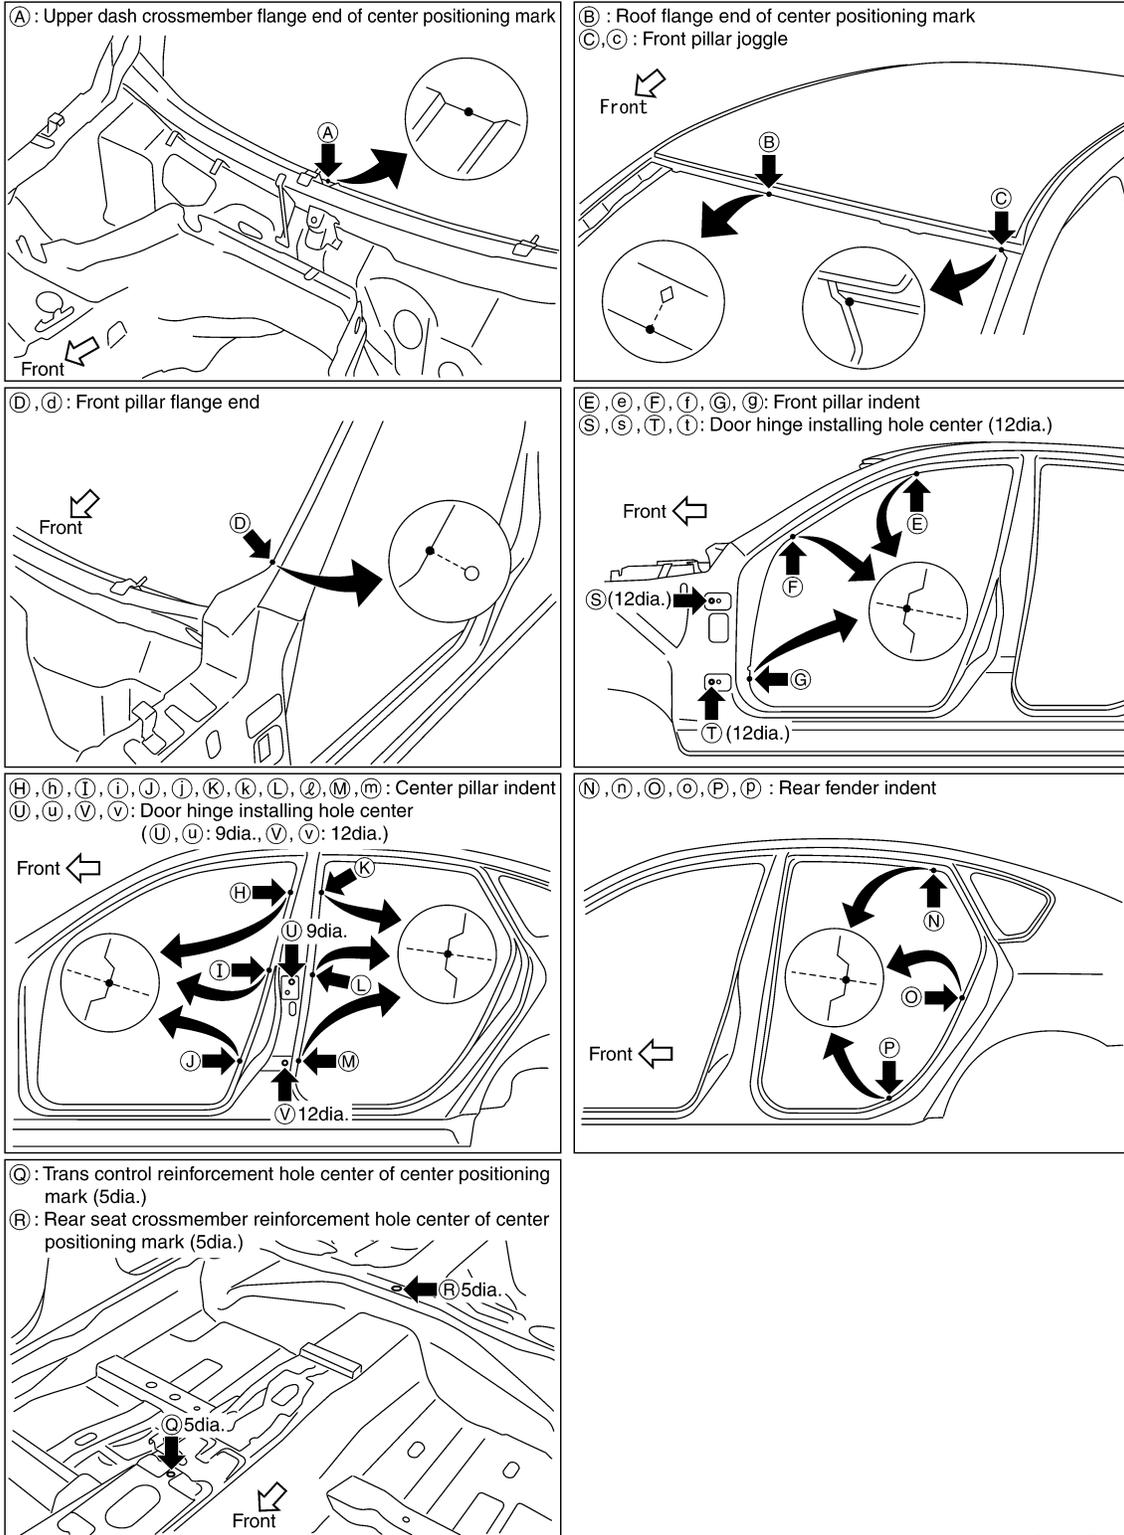

SIIA2466E

REAR BODY


Measurement

Dimensions marked with "" indicate symmetrically identical dimensions on both the right and left hand of the vehicle.

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR

< SERVICE INFORMATION >

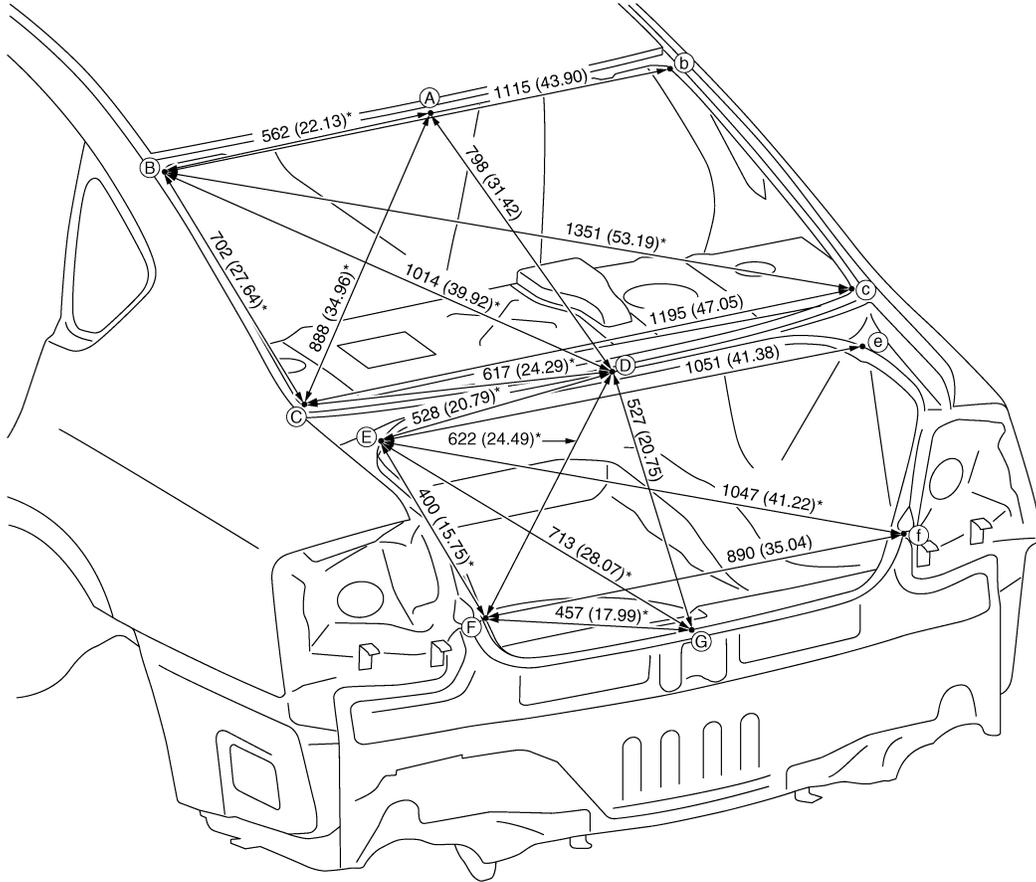


JSKIA0519GB

Unit: mm (in)

Measurement Points

BODY REPAIR

< SERVICE INFORMATION >

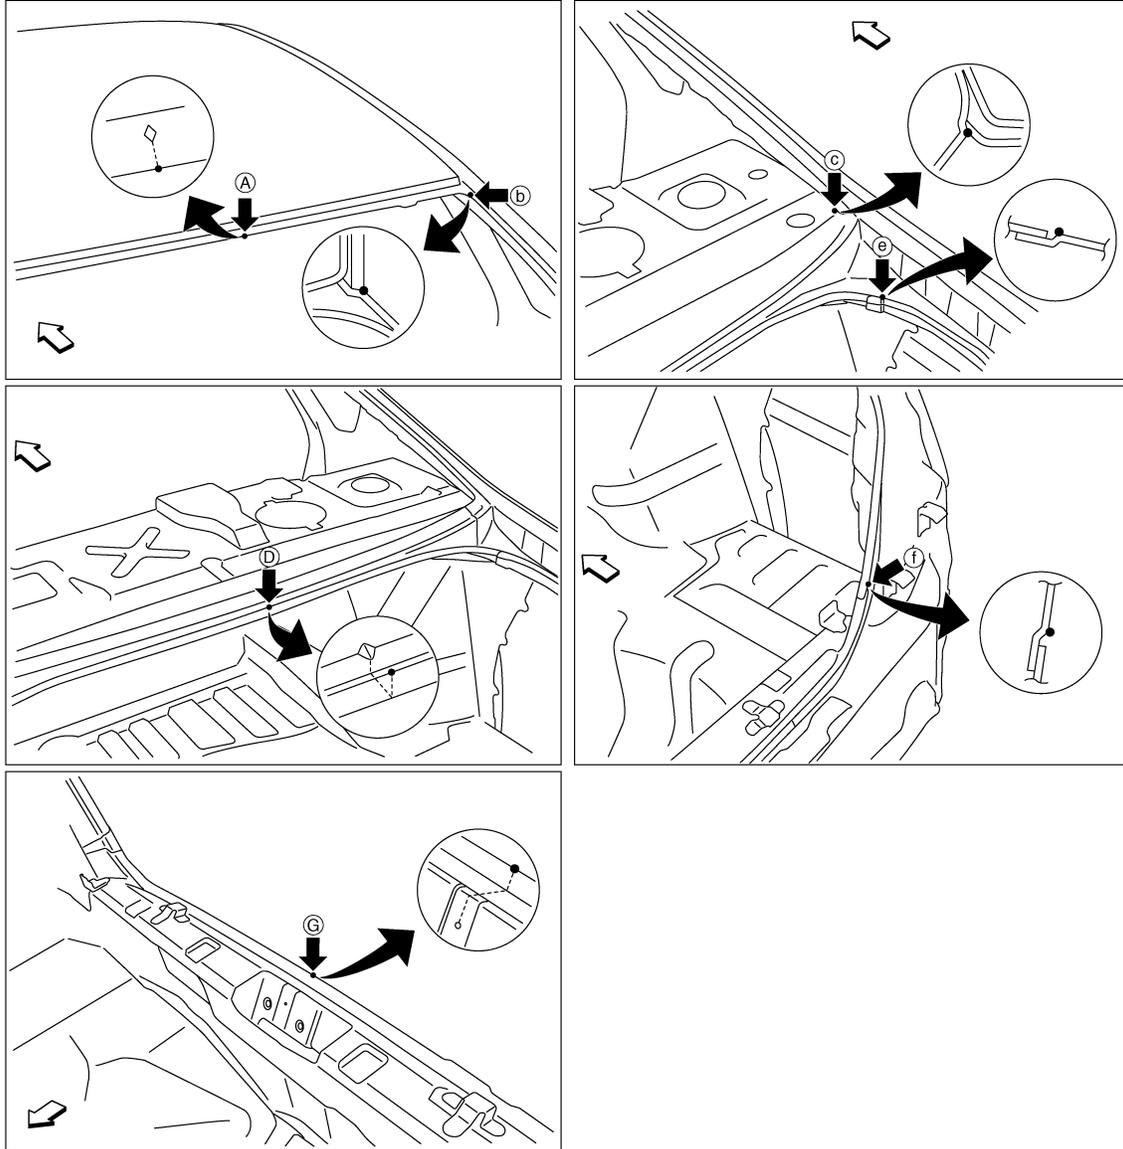

JSKIA0520ZZ

←: Vehicle front

Point	Material	Point	Material
A	Roof flange end of center positioning mark	E, e	Rear fender corner extension joggle
B, b	Rear fender joggle	F, f	Rear combination lamp base joggle
C, c	Rear fender extension joggle	G	Upper rear panel flange end of center positioning mark
D	Rear waist flange end of center positioning mark		

Handling Precaution for Plastics

INFOID:000000005349503

HANDLING PRECAUTIONS FOR PLASTICS

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR

< SERVICE INFORMATION >



Abbre- viation	Material name	Heatresisting temperature °C(°F)	Resistance to gasoline and solvents	Other cautions
PE	Polyethylene	60(140)	Gasoline and most solvents are harmless if applied for a very short time (wipe up quickly).	Flammable
PVC	Poly Vinyl Chloride	80(176)	Same as above.	Poison gas is emitted when burned.
EPM/ EPDM	Ethylene Propylene (Diene) co-polymer	80(176)	Same as above.	Flammable
TPO	Thermoplastic Olefine	80(176)	Same as above.	Flammable
PP	Polypropylene	90(194)	Same as above.	Flammable, avoid battery acid.
UP	Unsaturated Polyester	90(194)	Same as above.	Flammable
PS	Polystyrene	80(176)	Avoid solvents.	Flammable
ABS	Acrylonitrile Butadiene Styrene	80(176)	Avoid gasoline and solvents.	
AES	Acrylonitrile Ethylene Styrene	80(176)	Same as above.	
PMMA	Poly Methyl Methacrylate	85(185)	Same as above.	
EVAC	Ethylene Vinyl Acetate	90(194)	Same as above.	
ASA	Acrylonitrile Styrene Acrylate	100(222)	Same as above.	Flammable
PPE	Poly Phenylene Ether	110(230)	Same as above.	
PC	Polycarbonate	120(248)	Same as above.	
PAR	Polyarylate	180(356)	Same as above.	
PUR	Polyurethane	90(194)	Same as above.	
POM	Poly Oxymethylene	120(248)	Same as above.	Avoid battery acid.
PBT+ PC	Poly Butylene Terephthalate + Polycarbonate	120(248)	Same as above.	Flammable
PA	Polyamide	140(284)	Same as above.	Avoid immersing in water.
PBT	Poly Butylene Terephthalate	140(284)	Same as above.	
PET	Polyester	180(356)	Same as above.	
PEI	Polyetherimide	200(392)	Same as above.	

1. When repairing and painting a portion of the body adjacent to plastic parts, consider their characteristics (influence of heat and solvent) and remove them if necessary or take suitable measures to protect them.
2. Plastic parts should be repaired and painted using methods suiting the materials' characteristics.

BODY REPAIR

< SERVICE INFORMATION >

LOCATION OF PLASTIC PARTS

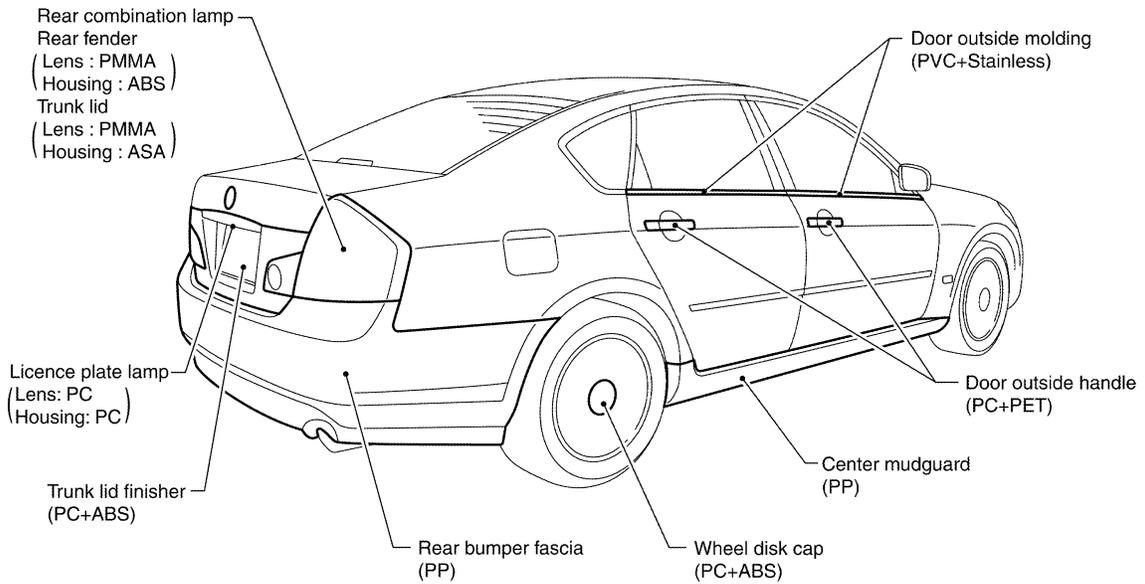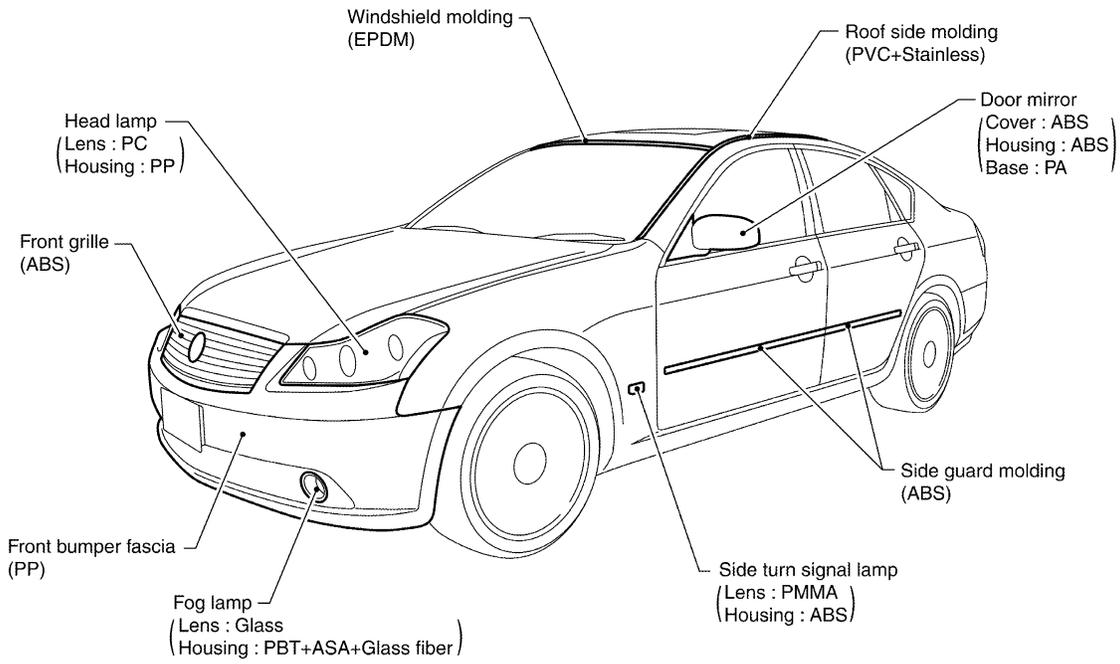


SIIA2737E

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR

< SERVICE INFORMATION >

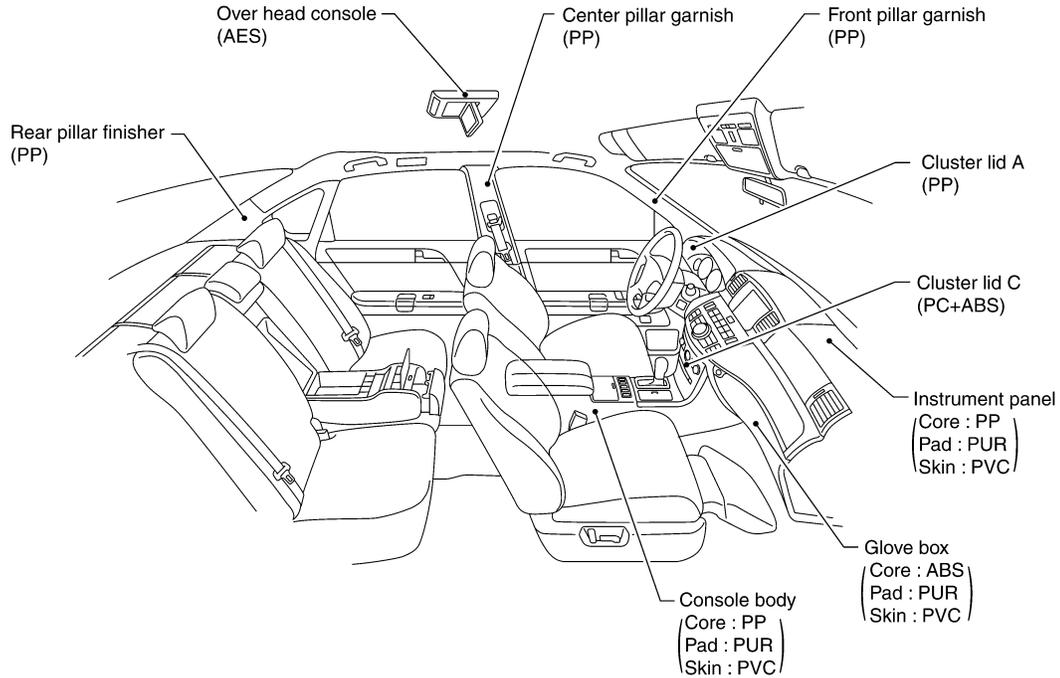

SIIA2470E

INFOID:000000005349504

Precaution in Repairing High Strength Steel

High strength steel is used for body panels in order to reduce vehicle weight. Accordingly, precautions in repairing automotive bodies made of high strength steel are described below:

HIGH STRENGTH STEEL (HSS) USED IN NISSAN VEHICLES

Tensile strength	Nissan/Infiniti designation	Major applicable parts
373 N/mm ² (38kg/mm ² , 54klb/sq in)	SP130	<ul style="list-style-type: none"> • Front & rear side member assembly • Front side member closing plate assembly • Front strut housing • Lower dash • Rear seat crossmember • Other reinforcements
785-1350 N/mm ² (80-138kg/mm ² , 114-196klb/sq in)	SP150	<ul style="list-style-type: none"> • Center pillar reinforcement (Component part) • Outer roof side rail reinforcement (Component part)

SP130 is the most commonly used HSS.

SP150 HSS is used only on parts that require much more strength.


Read the Following Precautions When Repairing HSS:

1. Additional points to consider


BODY REPAIR

< SERVICE INFORMATION >


- The repair of reinforcements (such as side members) by heating is not recommended since it may weaken the component. When heating is unavoidable, do not heat HSS parts above 550°C (1,022°F). Verify heating temperature with a thermometer. (Crayon-type and other similar type thermometer are appropriate.)

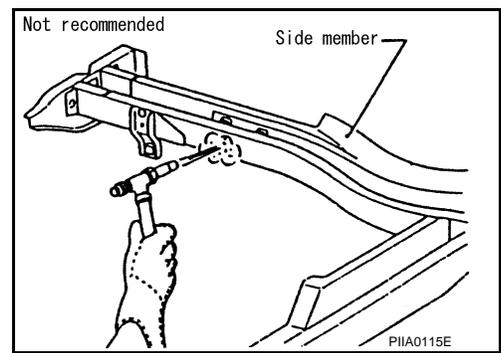


- When straightening body panels, use caution in pulling any HSS panel. Because HSS is very strong, pulling may cause deformation in adjacent portions of the body. In this case, increase the number of measuring points, and carefully pull the HSS panel.

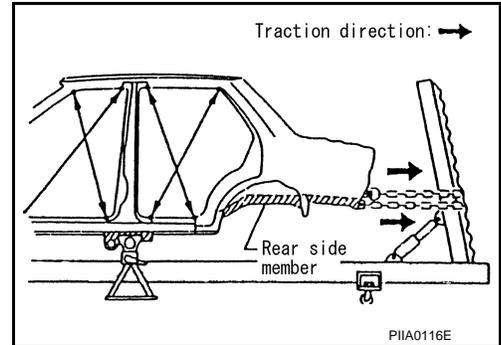

- When cutting HSS panels, avoid gas (torch) cutting if possible. Instead, use a saw to avoid weakening surrounding areas due to heat. If gas (torch) cutting is unavoidable, allow a minimum margin of 50 mm (1.97in).

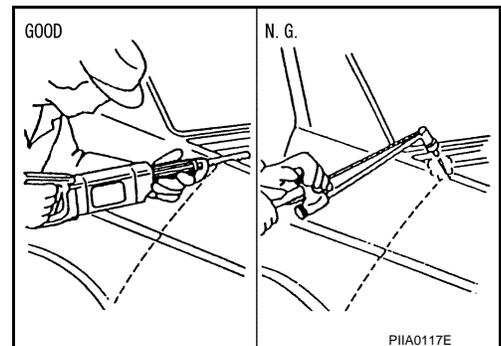

- When welding HSS panels, use spot welding whenever possible in order to minimize weakening surrounding areas due to heat. If spot welding is impossible, use M.I.G. welding. Do not use gas (torch) welding because it is inferior in welding strength.

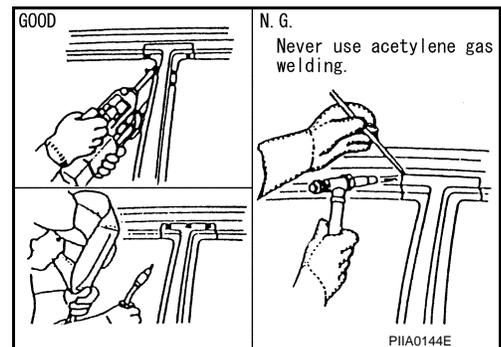


A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR

< SERVICE INFORMATION >


- The spot weld on HSS panels is harder than that of an ordinary steel panel.
Therefore, when cutting spot welds on a HSS panel, use a low speed high torque drill (1,000 to 1,200 rpm) to increase drill bit durability and facilitate the operation.

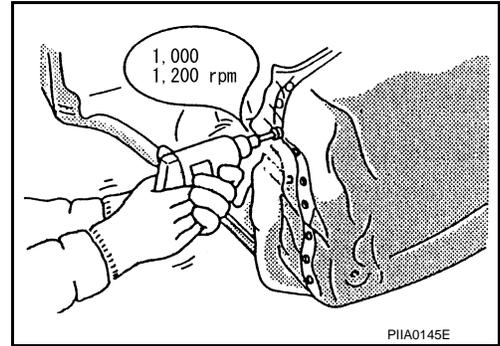


2. Precautions in spot welding HSS

This work should be performed under standard working conditions. Always note the following when spot welding HSS:

- The electrode tip diameter must be sized properly according to the metal thickness.

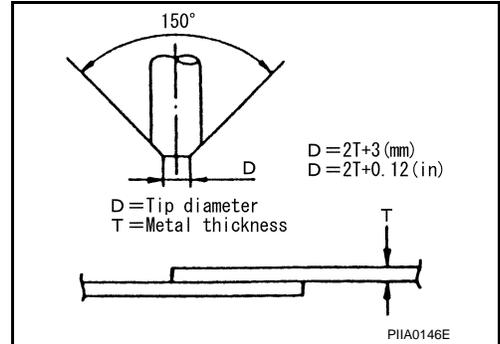


- The panel surfaces must fit flush to each other, leaving no gaps.

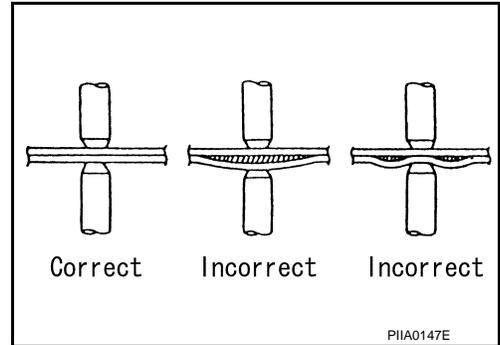

- Follow the specifications for the proper welding pitch.

Unit: mm

Thickness (t)	Minimum pitch (l)
0.6 (0.024)	10 (0.39) or over
0.8 (0.031)	12 (0.47) or over
1.0 (0.039)	18 (0.71) or over
1.2 (0.047)	20 (0.79) or over
1.6 (0.063)	27 (1.06) or over
1.8 (0.071)	31 (1.22) or over

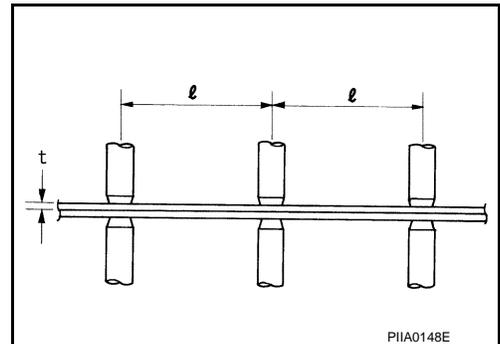

Rear fender hemming process

- A wheel arch is to be installed and hemmed over left and right outer wheel house.
- In order to hem the wheel arch, it is necessary to repair any damaged or defaced parts around outer wheel house.

CAUTION:

Ensure that the area that is to be glued around outer wheelhouse is undamaged or defaced.

Procedure of the hemming process


BODY REPAIR

< SERVICE INFORMATION >


- Peel off old bonding material on the surface of outer wheelhouse and clean thoroughly.
- Peel off a primer coat in the specified area where new adhesive is to be applied on rear fender (the replacing part).
- Apply new adhesive to both specified areas of outer wheelhouse and rear fender.

**<Adhesive> 3M automix panel bond 8115,
or any equivalents**


- Attach rear fender to the body of the car, and weld the required part except the hemming part.

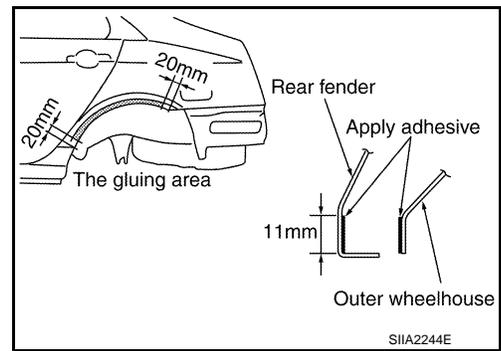


- Bend the welded part starting from the center of the wheel arch gradually with a hammer and a dolly. (Also hem the end of the flange.)
- Hemming with a hammer is conducted to an approximate angle of 80 degrees.

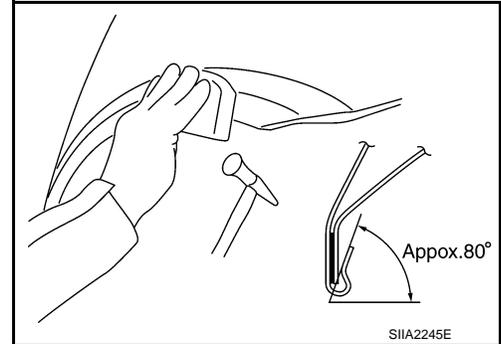

- Starting from the center, hem the wheel arch gradually, using slight back and forth motion with a hemming tool.

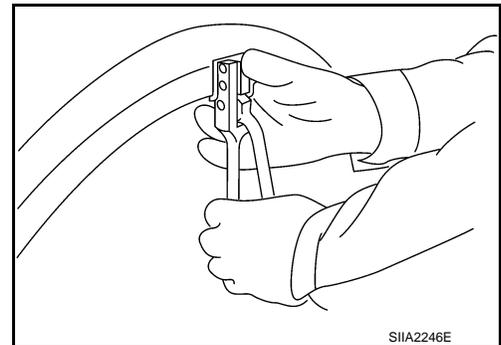

- Seal up the area around the hemmed end of the flange.

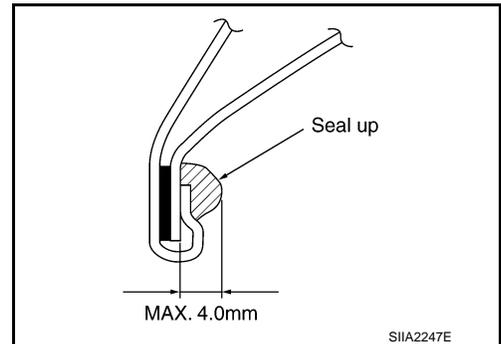

Foam Repair

INFOID:000000005349505

During factory body assembly, foam insulators are installed in certain body panels and locations around the vehicle. Use the following procedure(s) to replace any factory-installed foam insulators.

URETHANE FOAM APPLICATIONS


Use commercially available spray foam for sealant (foam material) repair of material used on vehicle. Read instructions on product for fill procedures.

1. Fill procedures after installation of service part.
 - Remove foam material remaining on vehicle side.
 - Clean area in which foam was removed.

BODY REPAIR

< SERVICE INFORMATION >

- Install service part.
- Insert nozzle into hole near fill area and fill foam material or fill in enough to close gap with the service part.

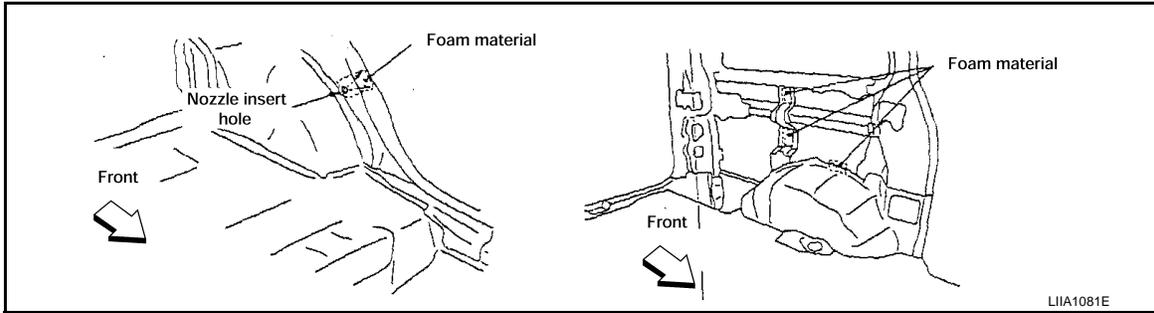

2. Fill procedures before installation of service part.
 - Remove foam material remaining on vehicle side.
 - Clean area in which foam was removed.
 - Fill foam material on wheelhouse outer side.


NOTE:

Fill in enough to close gap with service part while avoiding flange area.

- Install service part.

NOTE:

Refer to label for information on working times.

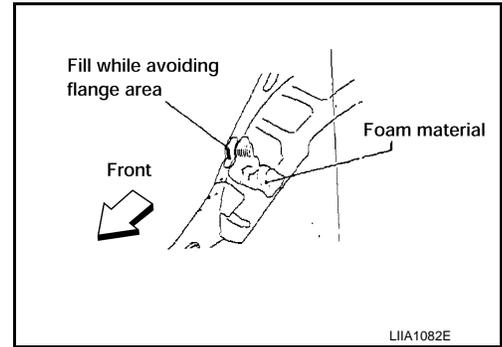

Replacement Operation

INFOID:000000005349506

DESCRIPTION

This section is prepared for technicians who have attained a high level of skill and experience in repairing collision-damaged vehicles and also use modern service tools and equipment. Persons unfamiliar with body repair techniques should not attempt to repair collision-damaged vehicles by using this section.


















Technicians are also encouraged to read Body Repair Manual (Fundamentals) in order to ensure that the original functions and quality of the vehicle can be maintained. The Body Repair Manual (Fundamentals) contains additional information, including cautions and warning, that are not including in this manual. Technicians should refer to both manuals to ensure proper repairs.

Please note that these information are prepared for worldwide usage, and as such, certain procedures might not apply in some regions or countries.

BODY REPAIR

< SERVICE INFORMATION >

The symbols used in this section for cutting and welding / brazing operations are shown below.

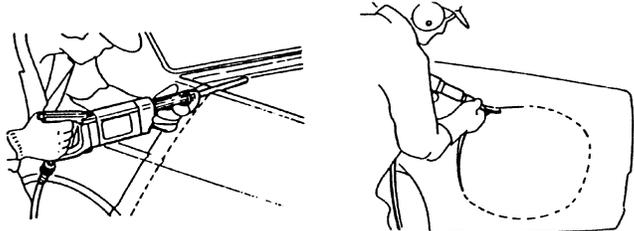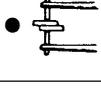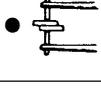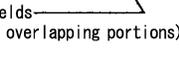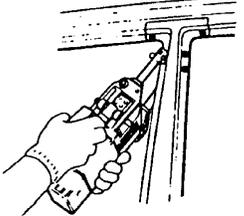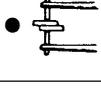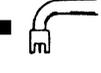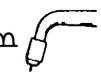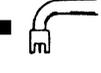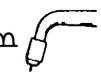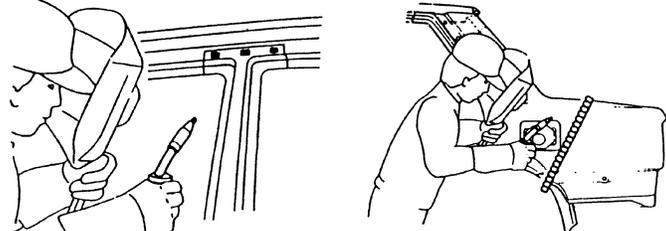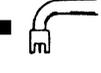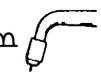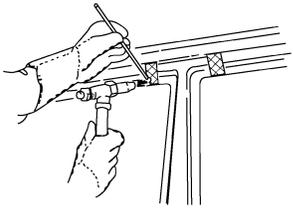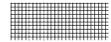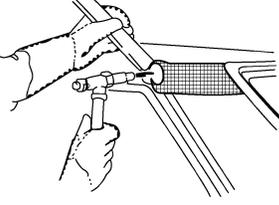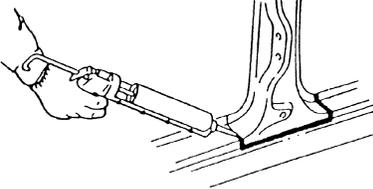 Saw cut or air chisel cut							
<table border="1"> <tr> <td data-bbox="282 478 380 604"> Spot weld </td> <td data-bbox="380 478 633 604">  2-spot welds </td> <td data-bbox="532 510 633 604">  </td> </tr> <tr> <td data-bbox="282 604 380 701"> 3-spot welds </td> <td data-bbox="380 604 633 701">  3-spot welds </td> <td data-bbox="532 636 633 701">  </td> </tr> </table>	Spot weld	 2-spot welds		3-spot welds	 3-spot welds		<p>2-spot welds (2-panel overlapping portions)</p>  <p>3-spot welds (3-panel overlapping portions)</p>  
Spot weld	 2-spot welds						
3-spot welds	 3-spot welds						
<table border="1"> <tr> <td data-bbox="282 724 633 835">  MIG plug weld </td> <td data-bbox="532 762 633 835">  </td> </tr> <tr> <td data-bbox="282 846 633 945">  MIG seam weld/ Point weld </td> <td data-bbox="532 867 633 945">  </td> </tr> </table>	 MIG plug weld		 MIG seam weld/ Point weld				
 MIG plug weld							
 MIG seam weld/ Point weld							
<p>Brazing</p>  							
<p>Soldering</p>  							
<p>Sealing</p> 							

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P


CAUTION:
 A steel plate using ultra high strength steel plate is below welding with strength falling by adding heat, and not doing a limit patch.

PIIA0149E


BODY REPAIR

< SERVICE INFORMATION >


- Front pillar butt joint can be determined anywhere within shaded area as shown in the figure. The best location for the butt joint is at position A due to the construction of the vehicle. Refer to the front pillar section.

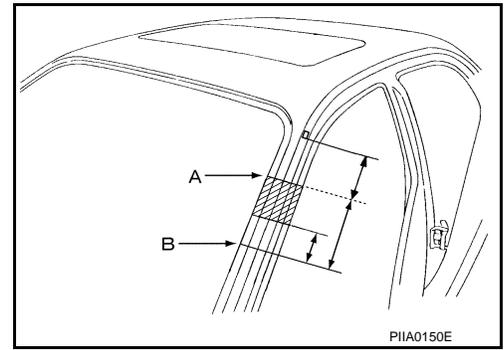

- Determine cutting position and record distance from the locating indent. Use this distance when cutting the service part. Cut outer front pillar over 60 mm above inner front pillar cut position.

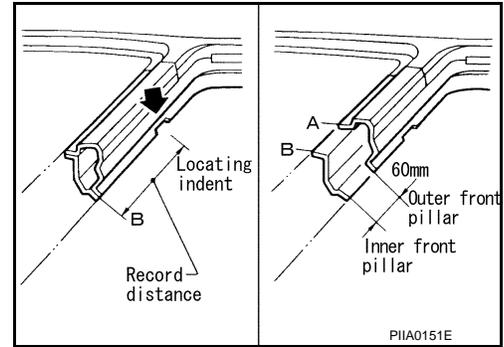


- Prepare a cutting jig to make outer pillar easier to cut. Also, this will permit service part to be accurately cut at joint position.

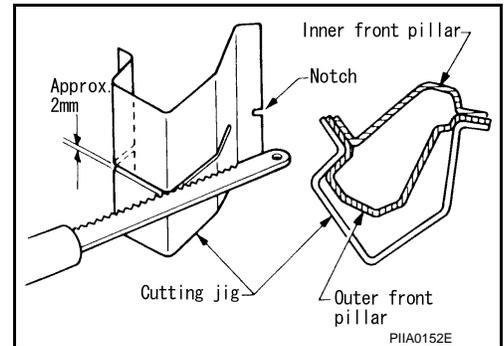

- An example of cutting operation using a cutting jig is as follows.


1. Mark cutting lines.
A: Cut position of outer pillar
B: Cut position of inner pillar
2. Align cutting line with notch on jig. Clamp jig to pillar.
3. Cut outer pillar along groove of jig. (At position A)
4. Remove jig and cut remaining portions.
5. Cut inner pillar at position B in same manner.

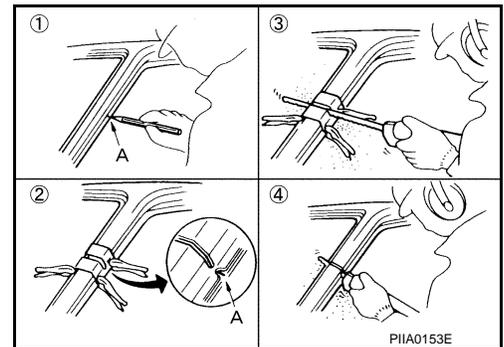

HOODLEDGE

BODY REPAIR

< SERVICE INFORMATION >

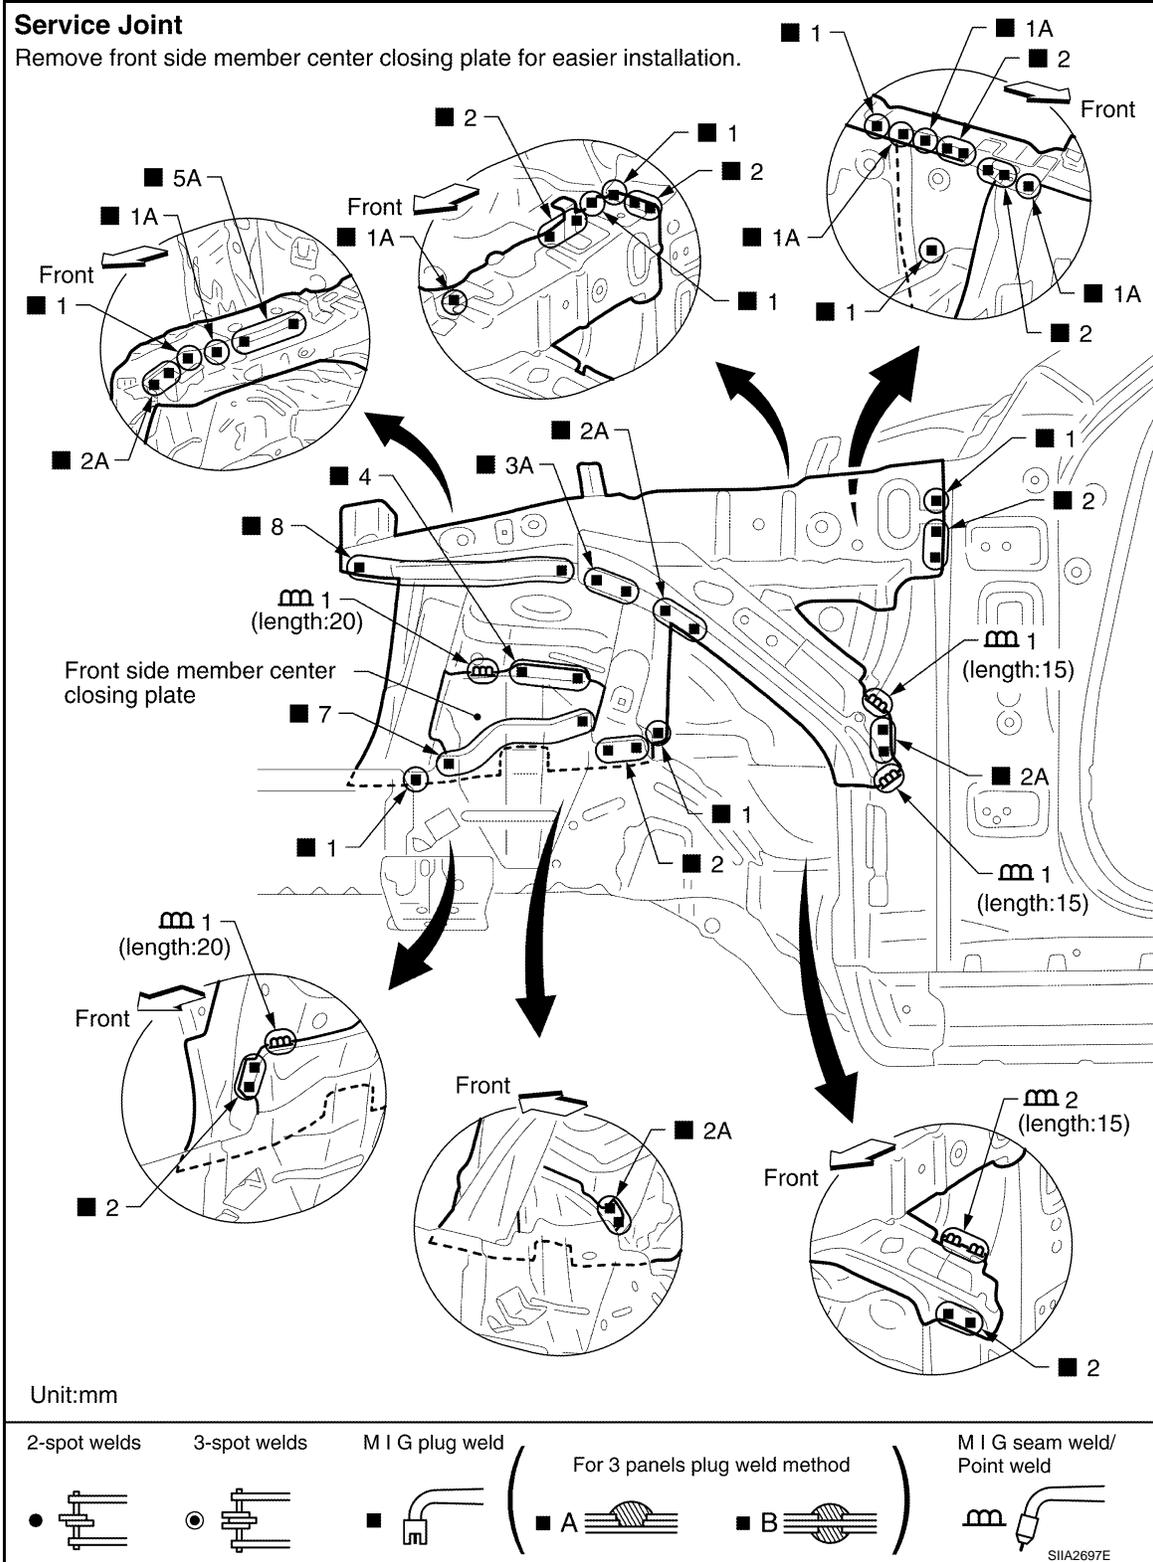


Change parts

- Front strut housing (LH)
- Upper front hoodledge (LH)
- Hoodledge reinforcement (LH)

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR

< SERVICE INFORMATION >

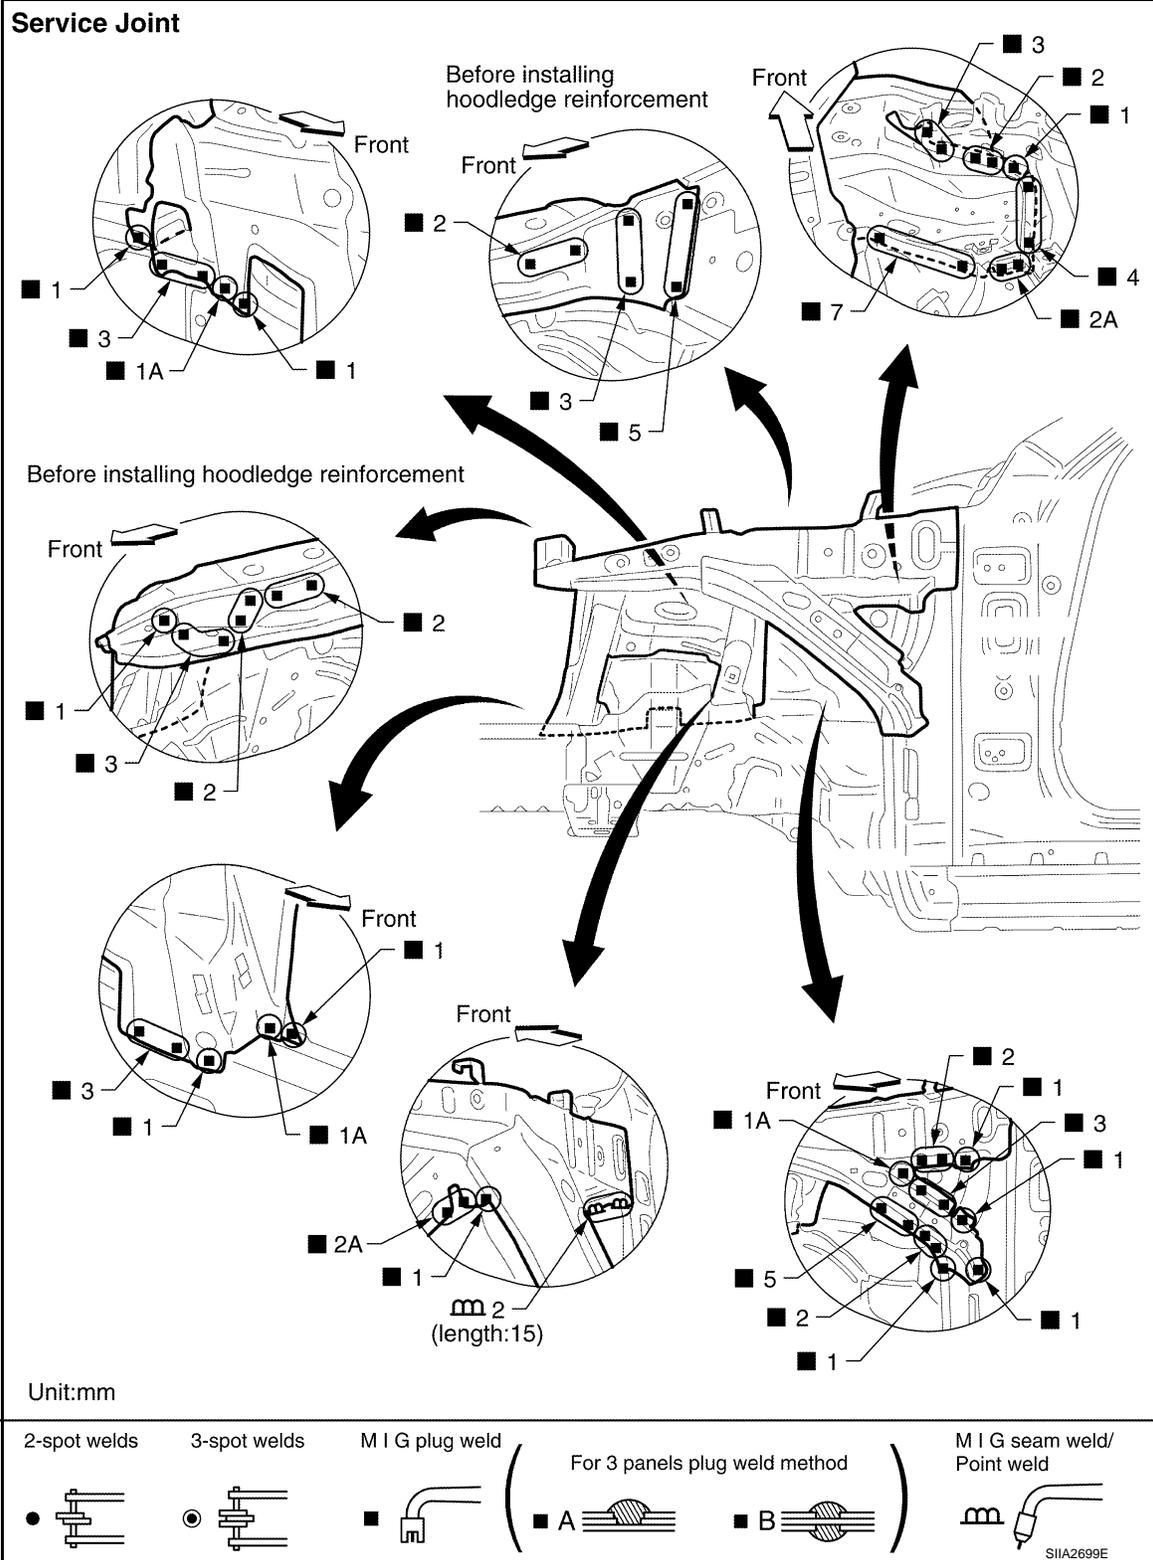


FRONT SIDE MEMBER (2WD)

- Work after hoodledge has been removed.

BODY REPAIR

< SERVICE INFORMATION >

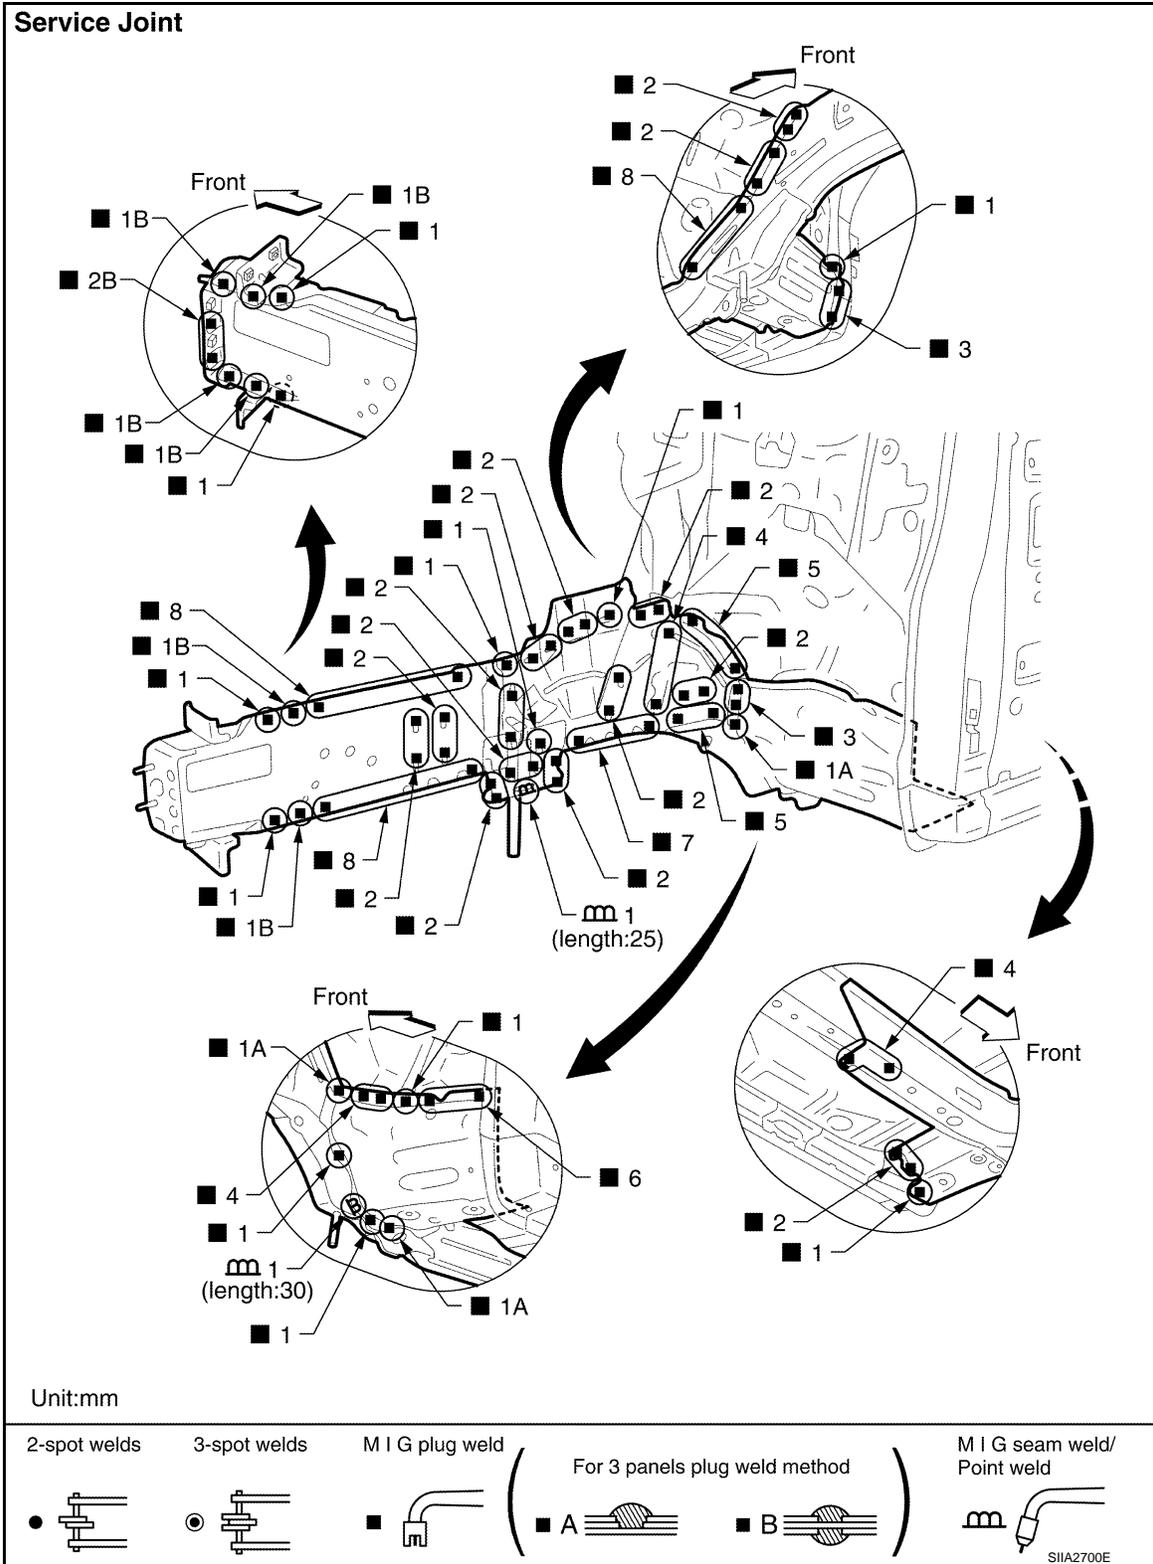


Change parts

- Front side member assembly (LH)
- Front side member closing plate assembly (LH)
- Front side member outrigger assembly (LH)
- Front side member rear reinforcement (LH)

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR

< SERVICE INFORMATION >

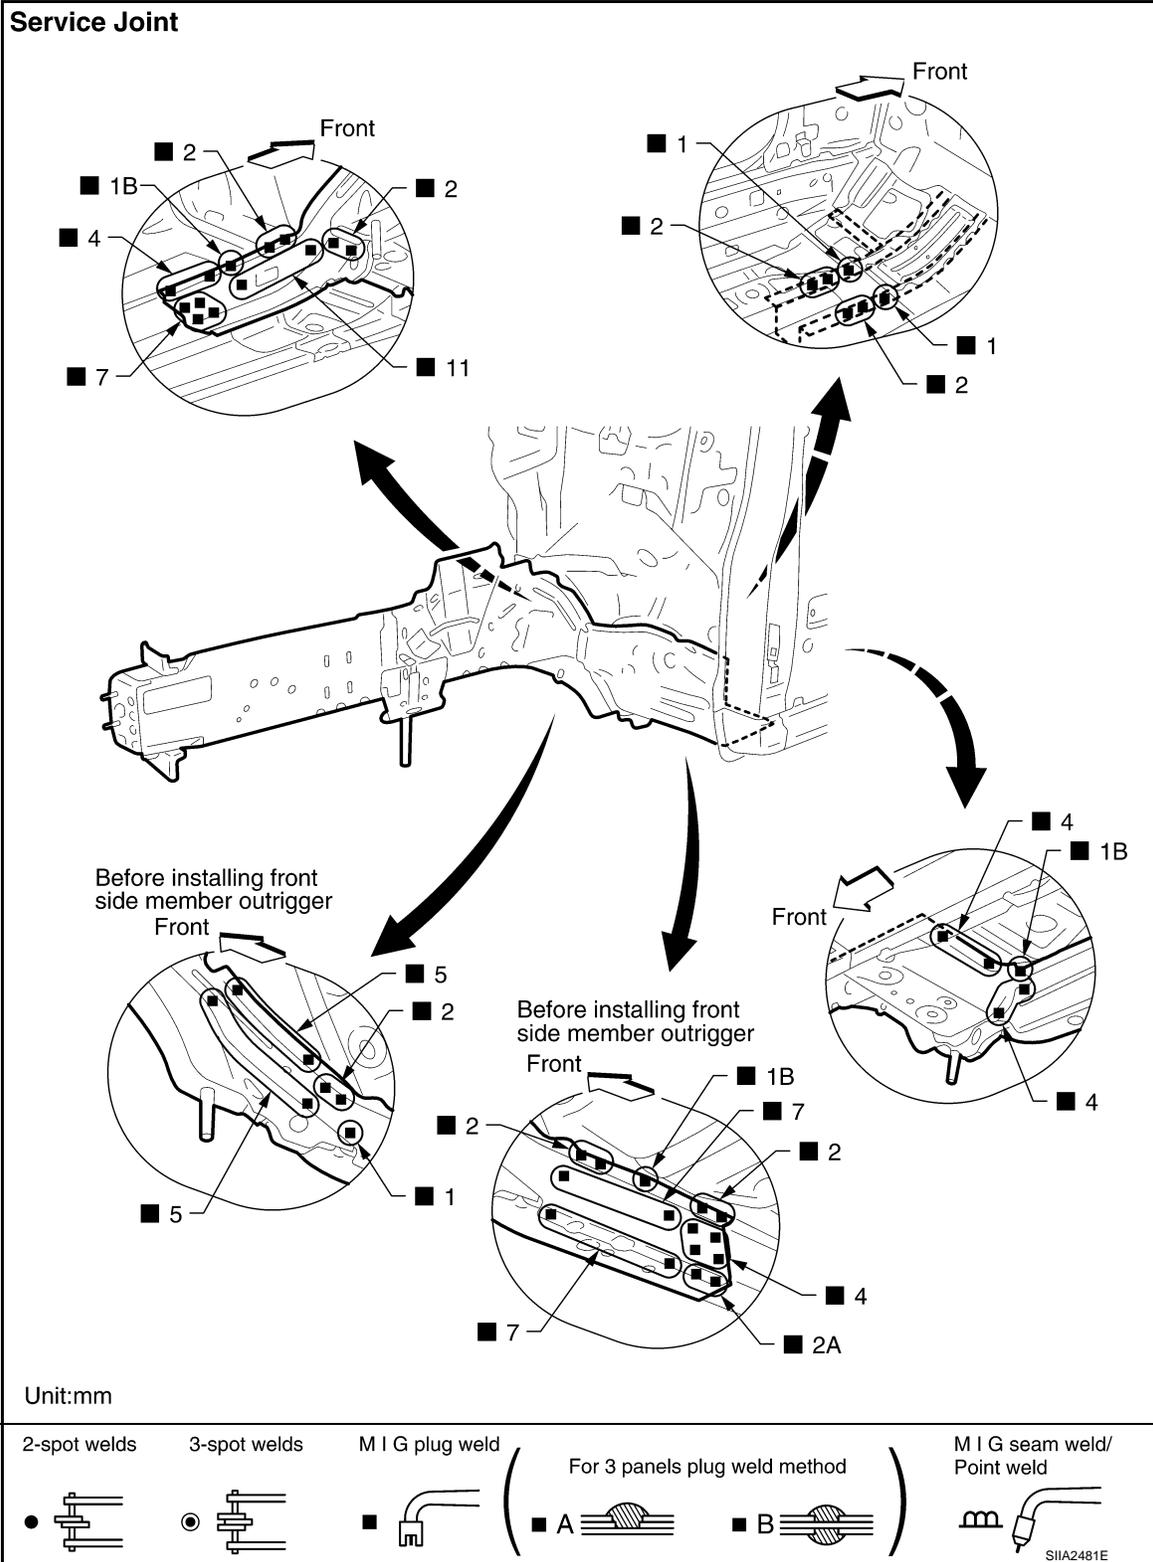


FRONT SIDE MEMBER (AWD)

- Work after hoodledge has been removed.

BODY REPAIR

< SERVICE INFORMATION >

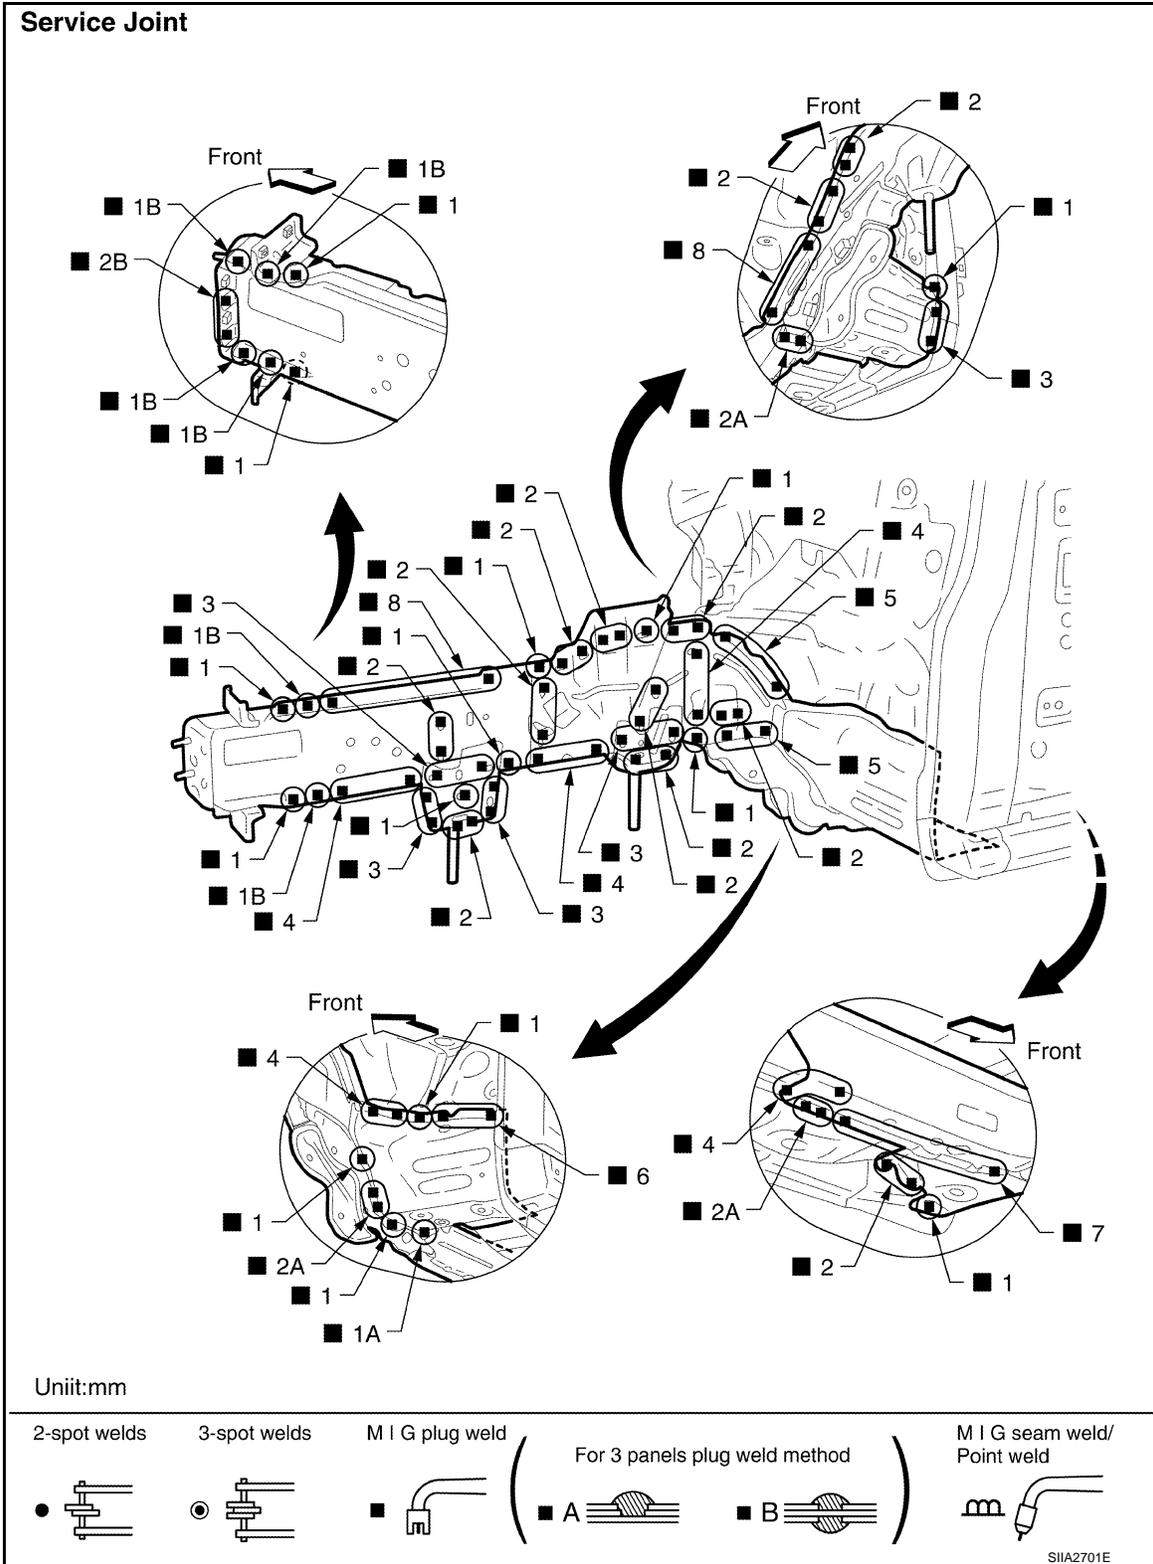


Change parts

- Front side member assembly (LH)
- Front side member closing plate assembly (LH)
- Front side member outrigger assembly (LH)
- Front side member rear reinforcement (LH)

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR


< SERVICE INFORMATION >

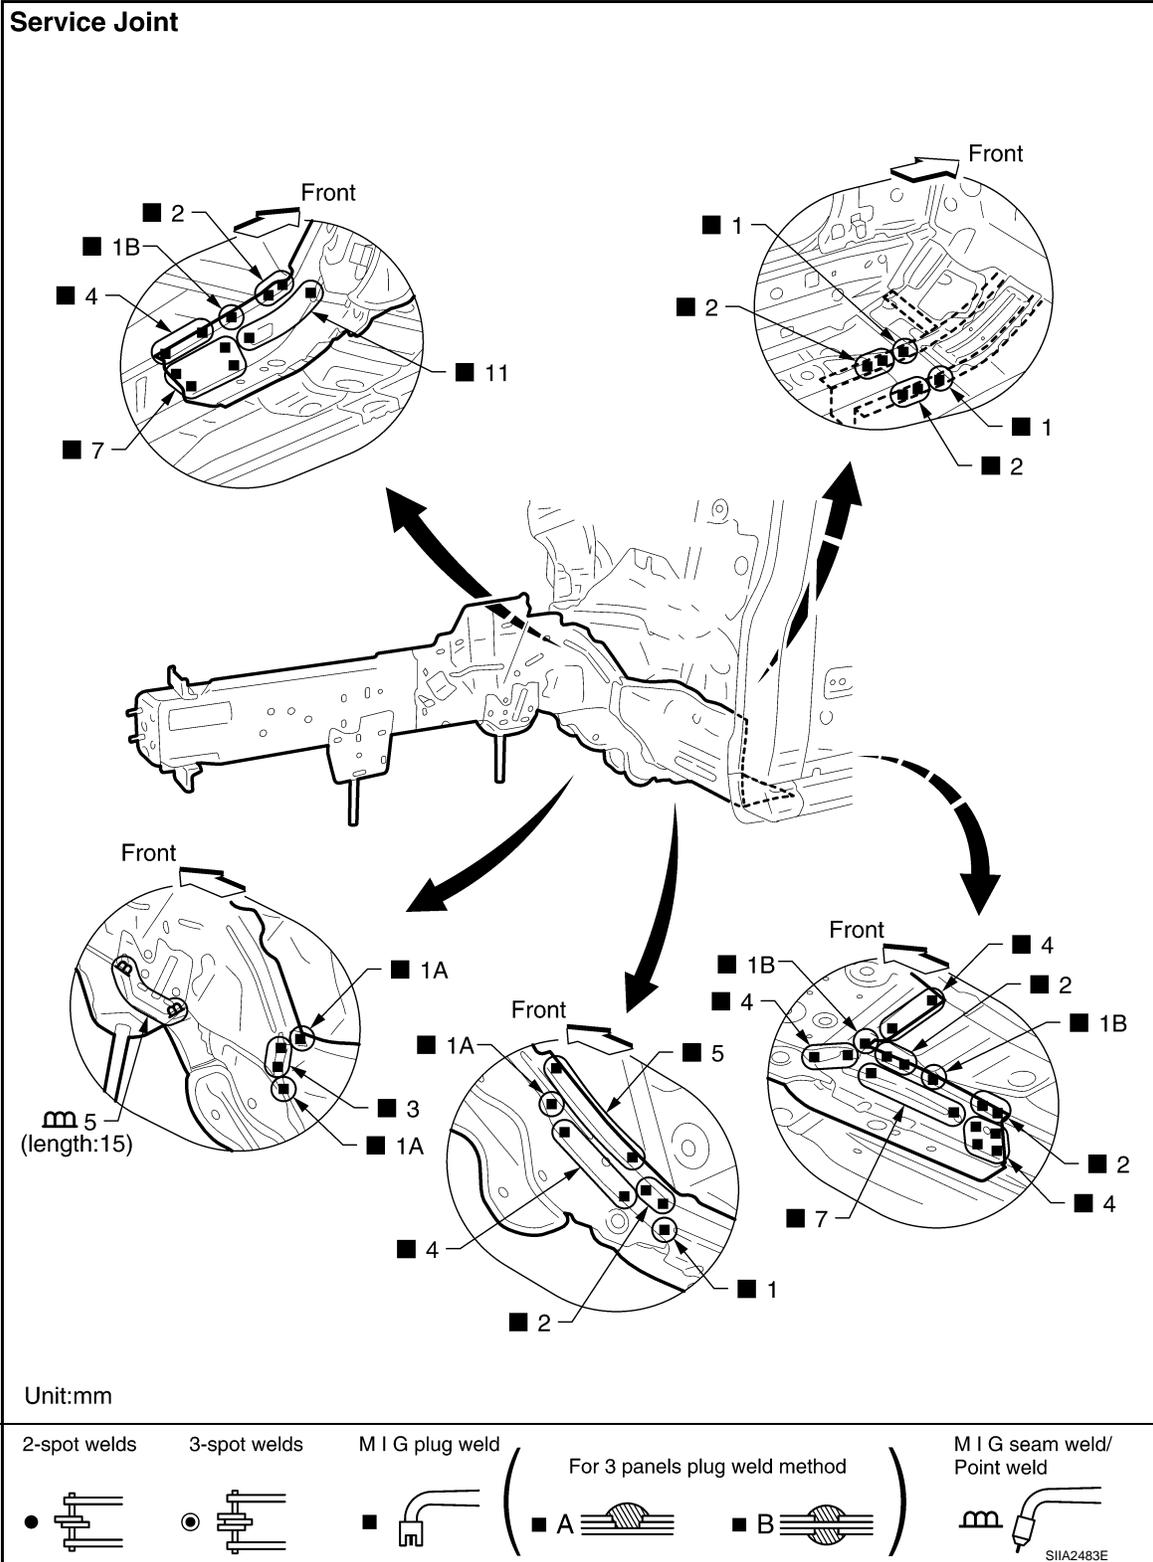

FRONT SIDE MEMBER (2WD) (PARTIAL REPLACEMENT)

BODY REPAIR

< SERVICE INFORMATION >

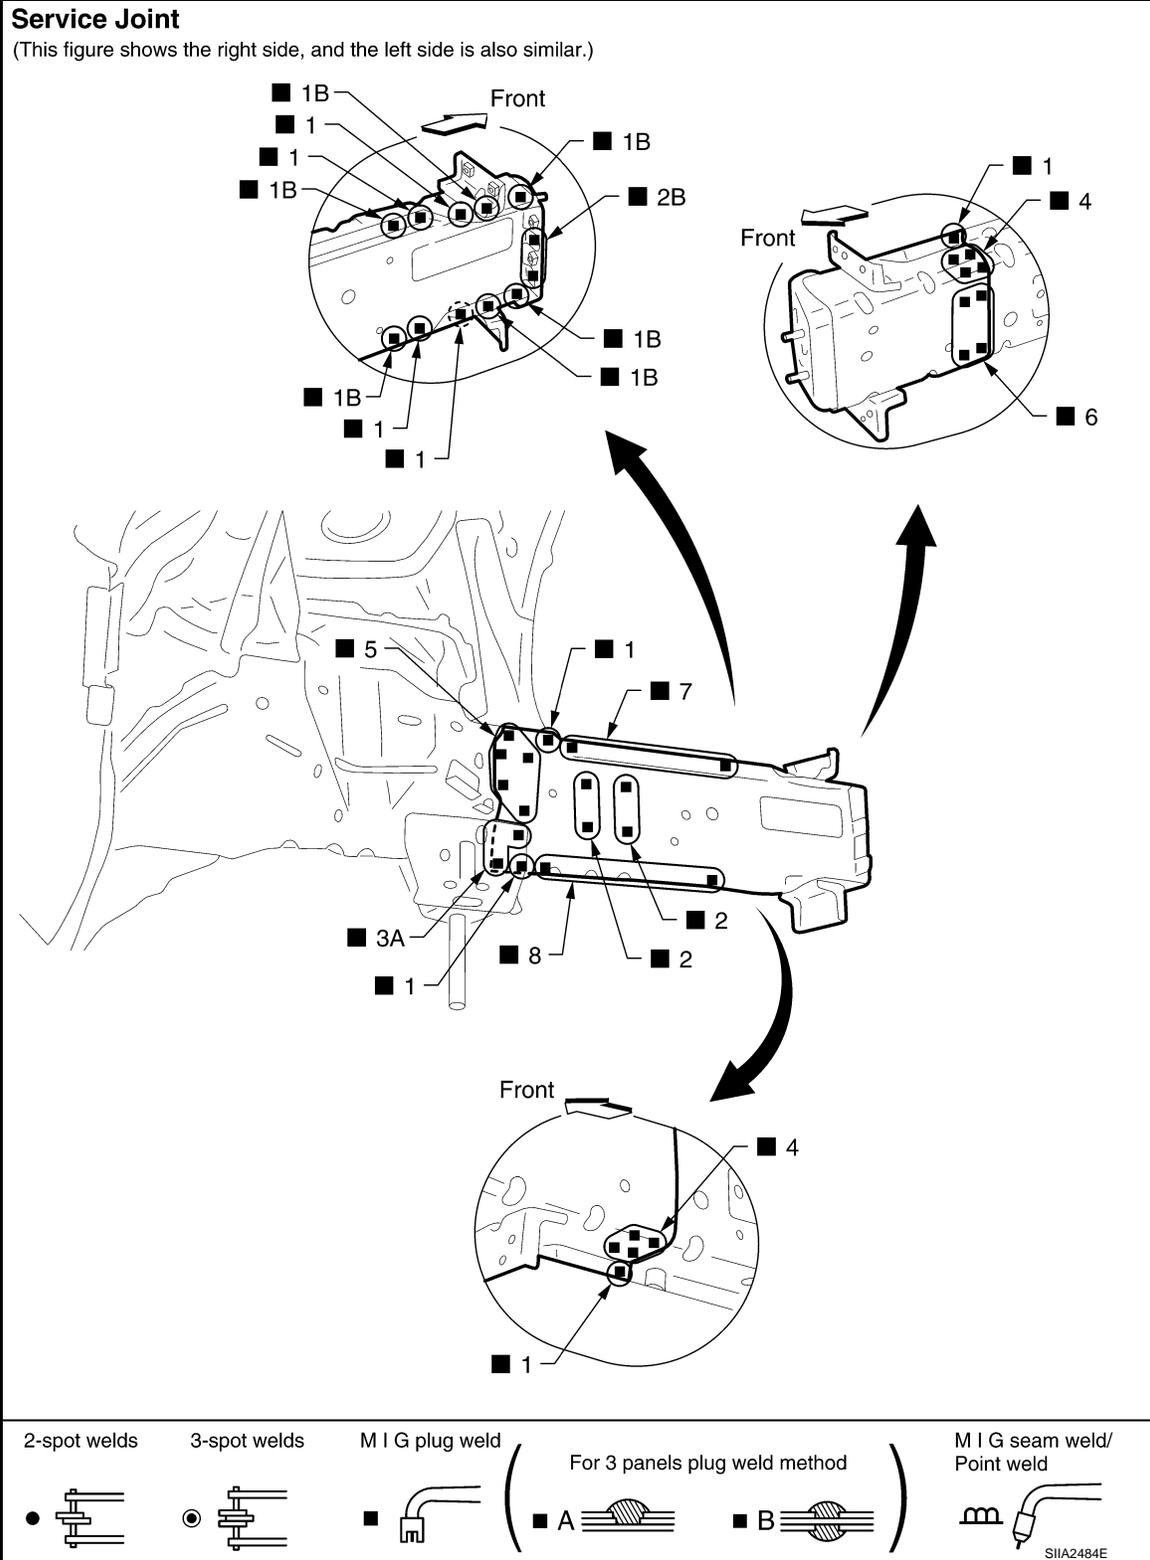

Change parts

- Front side member front extension (RH)
- Front side member front closing plate (RH)

FRONT SIDE MEMBER (AWD) (PARTIAL REPLACEMENT)


A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR


< SERVICE INFORMATION >

Service Joint


(This figure shows the right side, and the left side is also similar.)

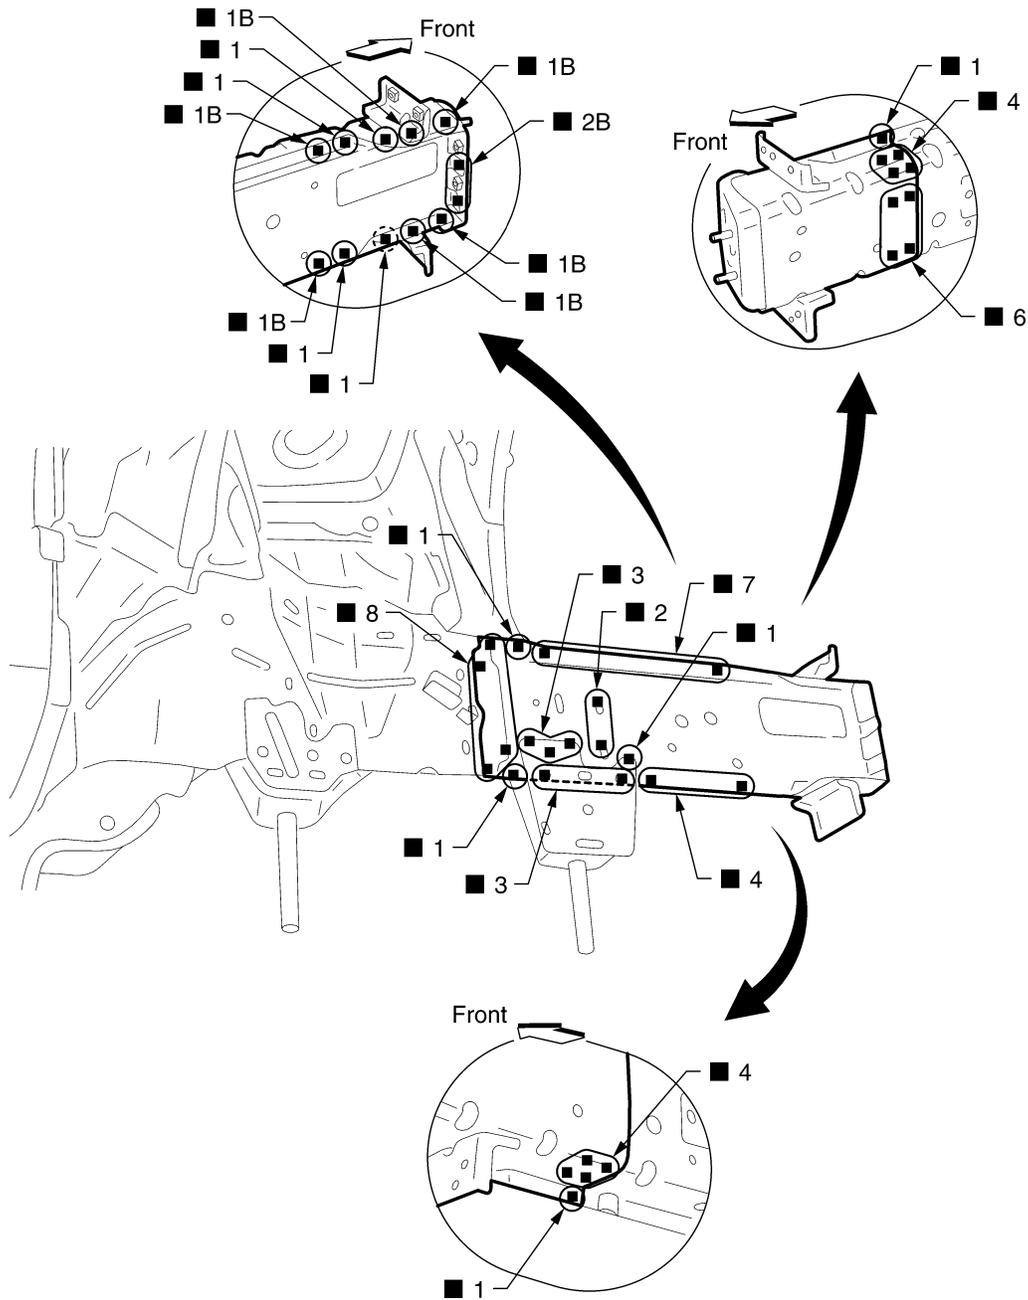


2-spot welds

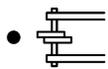

3-spot welds

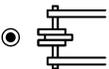

M I G plug weld

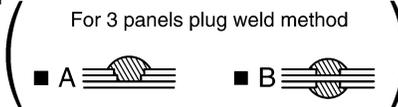

M I G seam weld/
Point weld



SIIA2485E

Change parts


- Front side member front extension (RH)
- Front side member front closing plate (RH)

FRONT PILLAR

- Work after hoodledge reinforcement has been removed.

BODY REPAIR

< SERVICE INFORMATION >

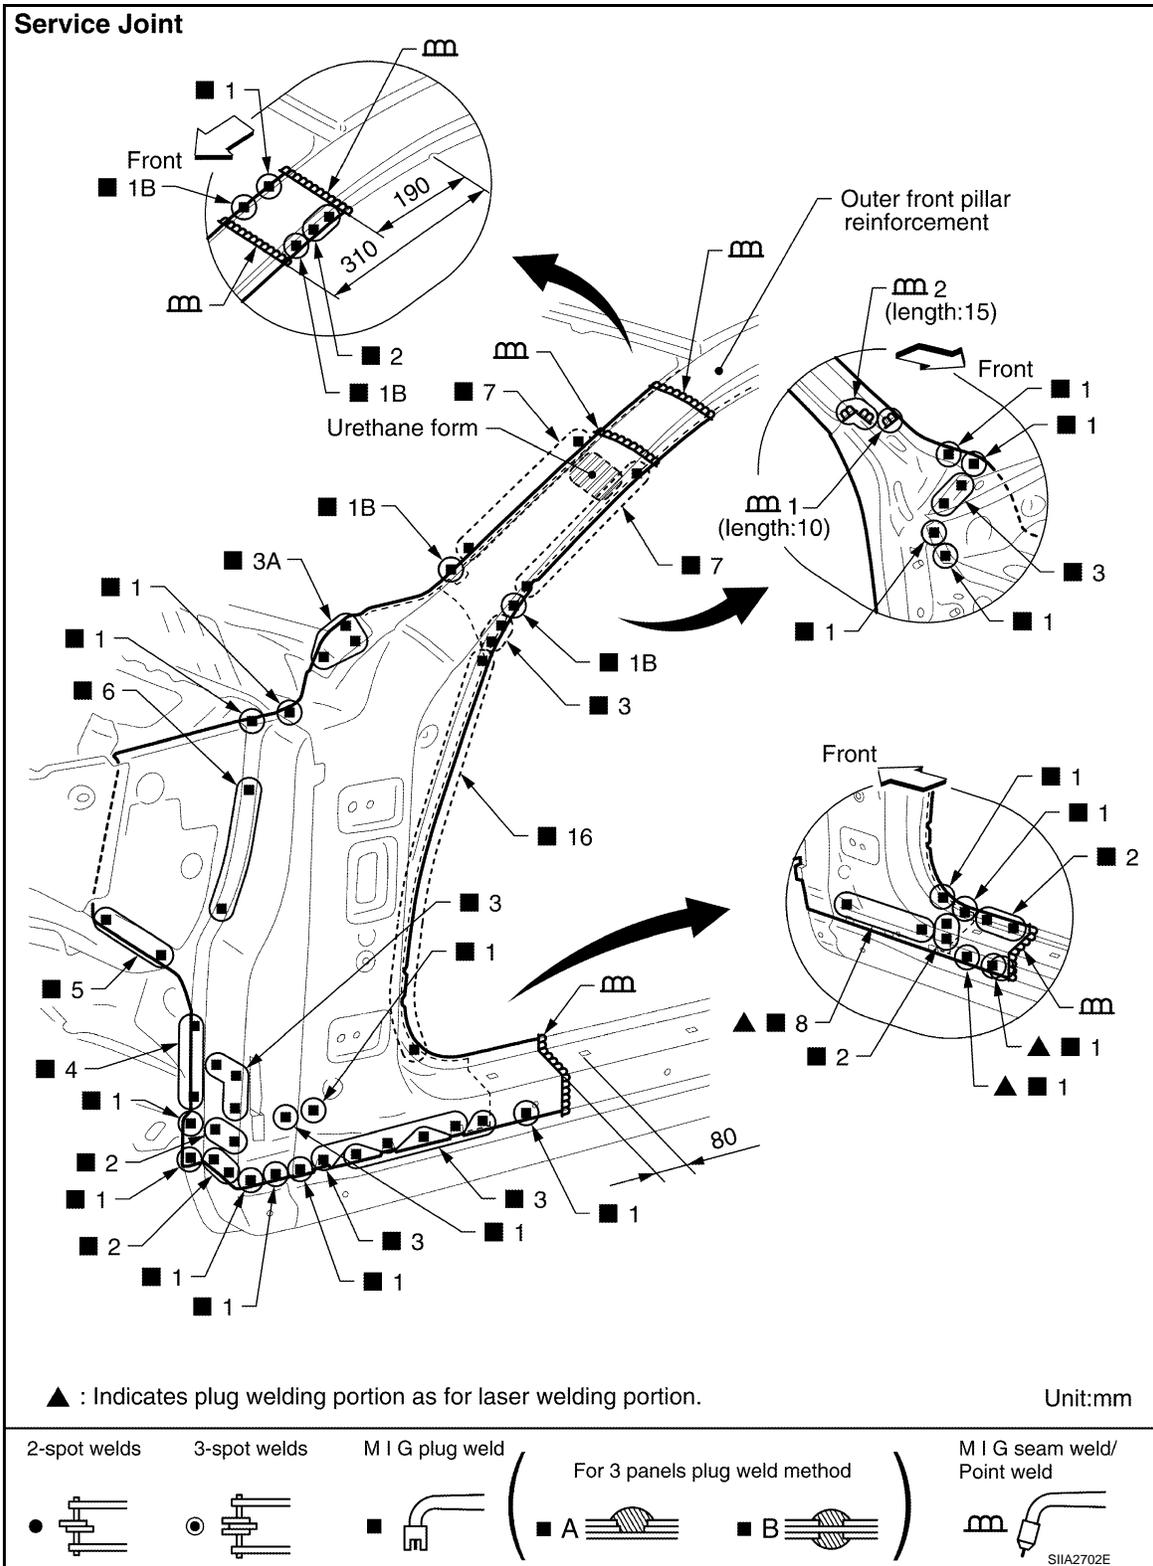

Change parts

- Side body assembly (LH)
- Inner roof side rail (LH)
- Upper rear hoodledge (LH)

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P



BODY REPAIR

< SERVICE INFORMATION >

Service Joint

Note: Center pillar seat belt reinforcement and outer roof side rail reinforcement are using ultra high strength steel plate.

Therefore, cut the spot welding portions from center roof rail brace.

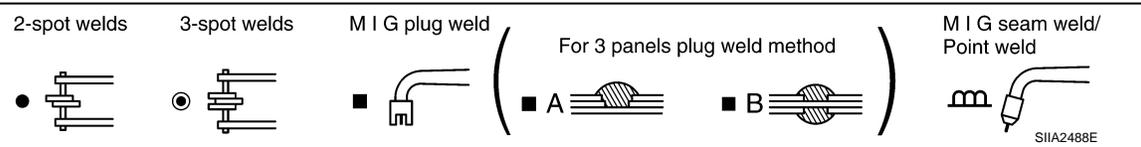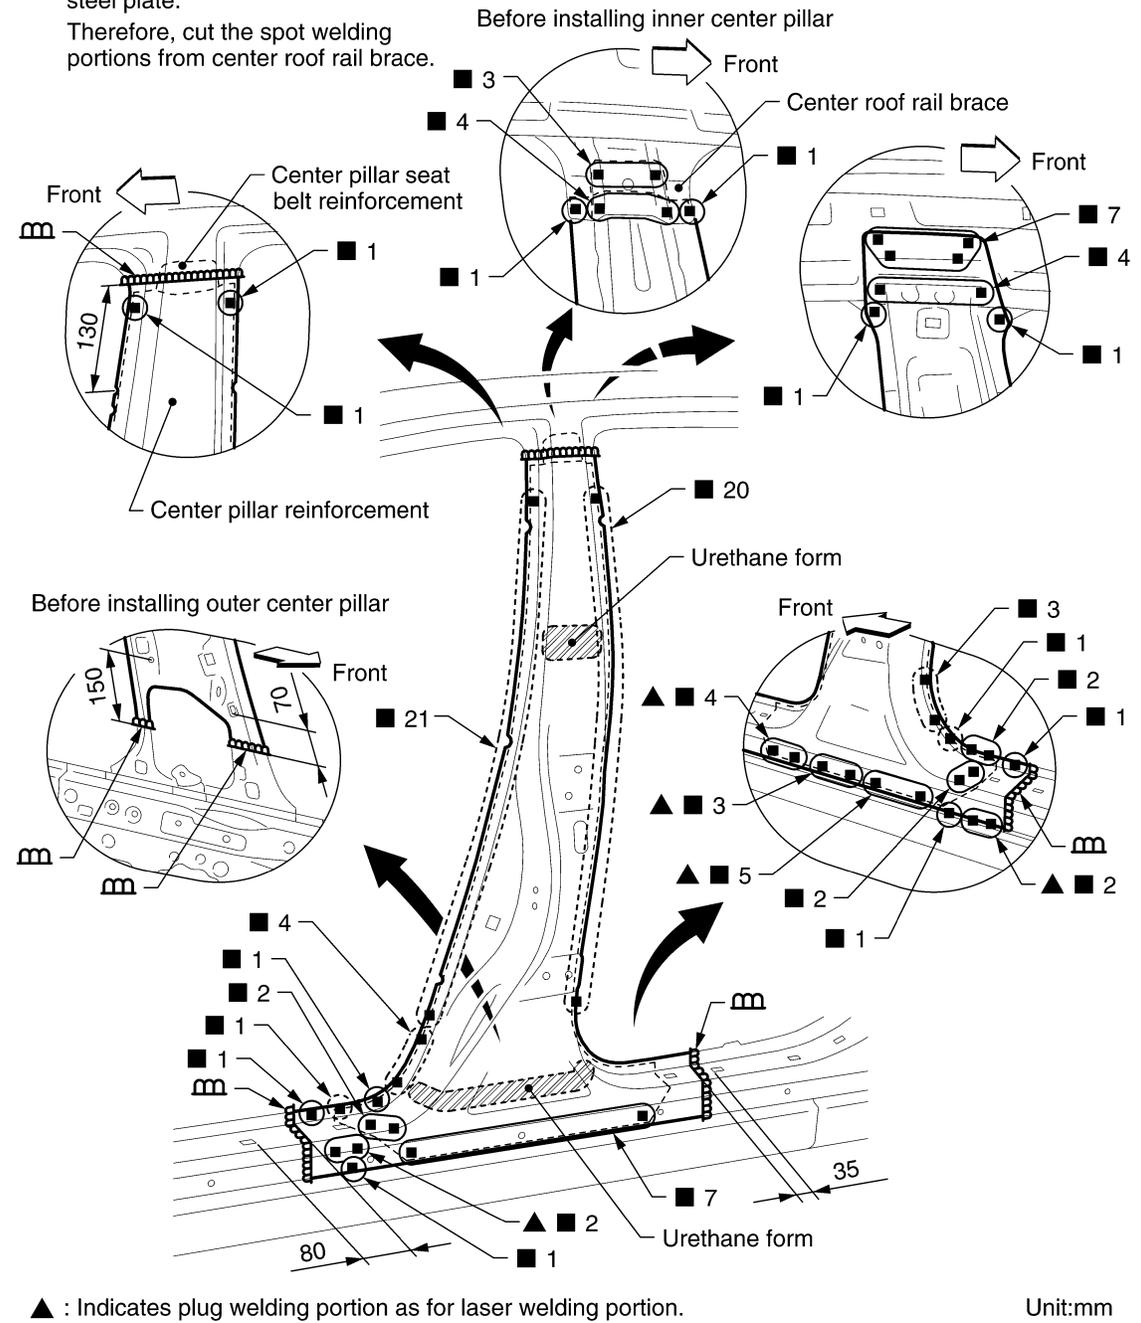

Change parts


- Side body assembly (LH)
- Inner center pillar (LH)

OUTER SILL

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

BODY REPAIR

< SERVICE INFORMATION >

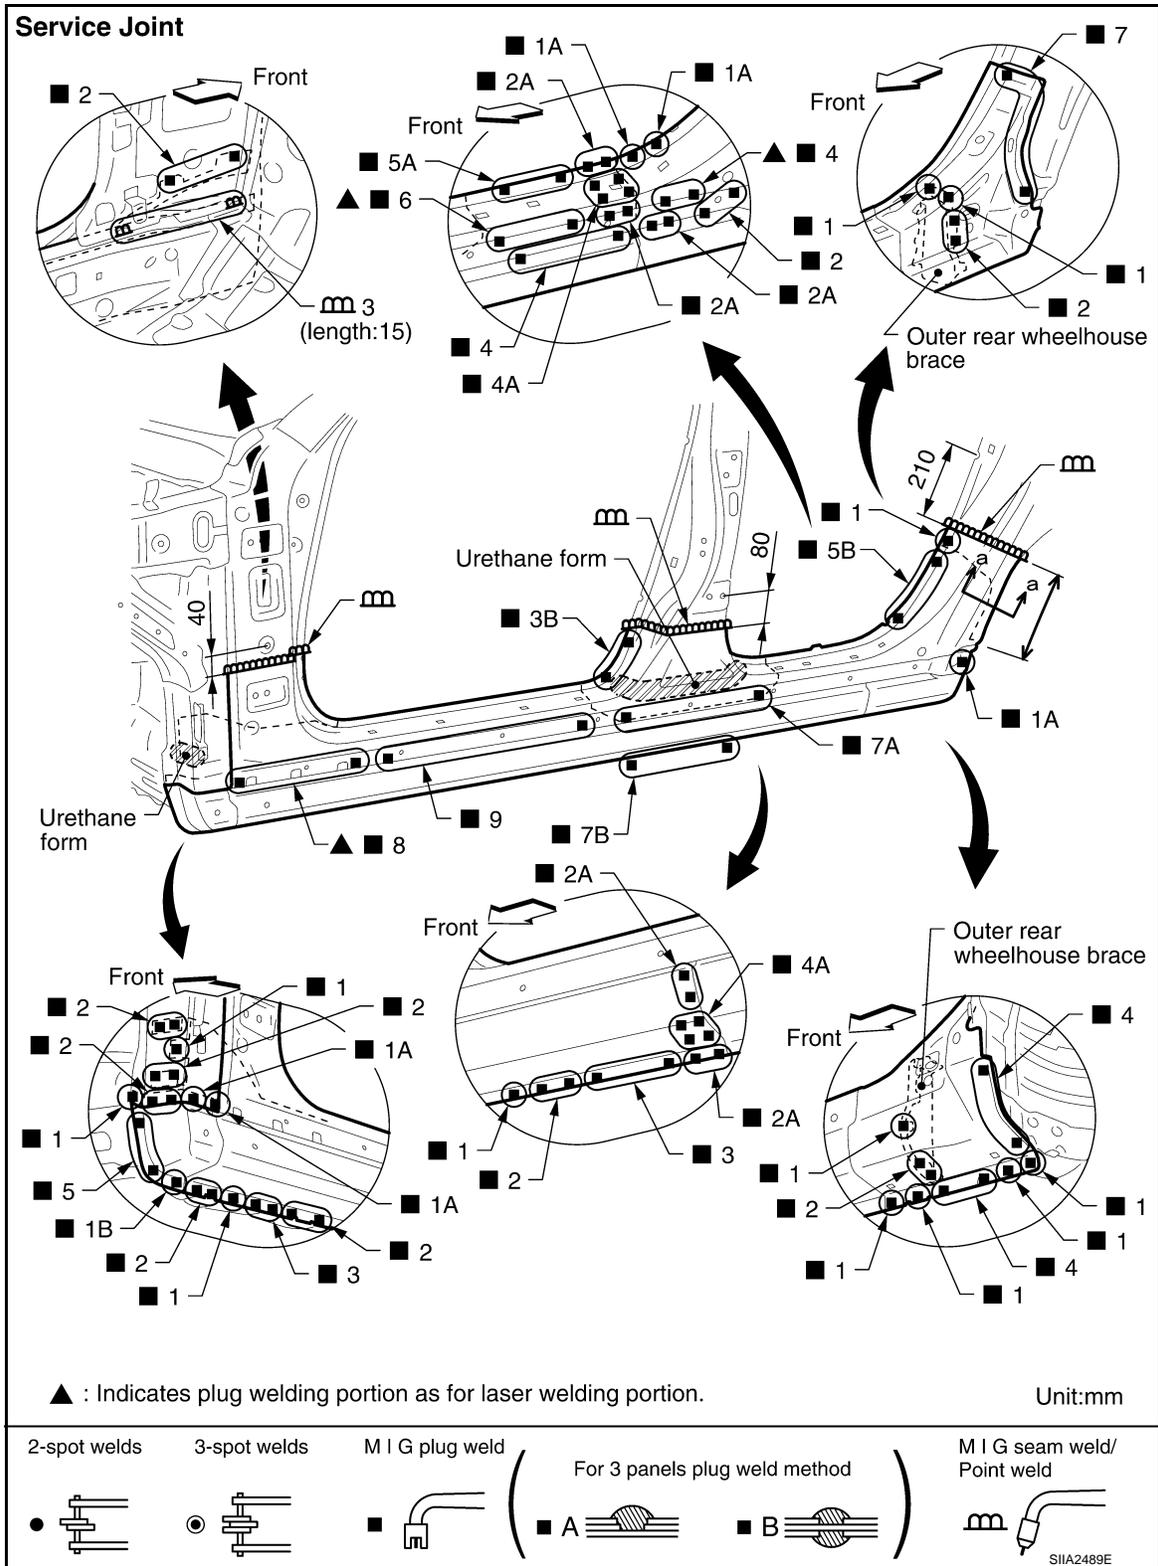

Change parts


● Outer sill (LH)

● Outer sill reinforcement (LH)

● Outer rear wheelhouse extension (LH)

BODY REPAIR


< SERVICE INFORMATION >

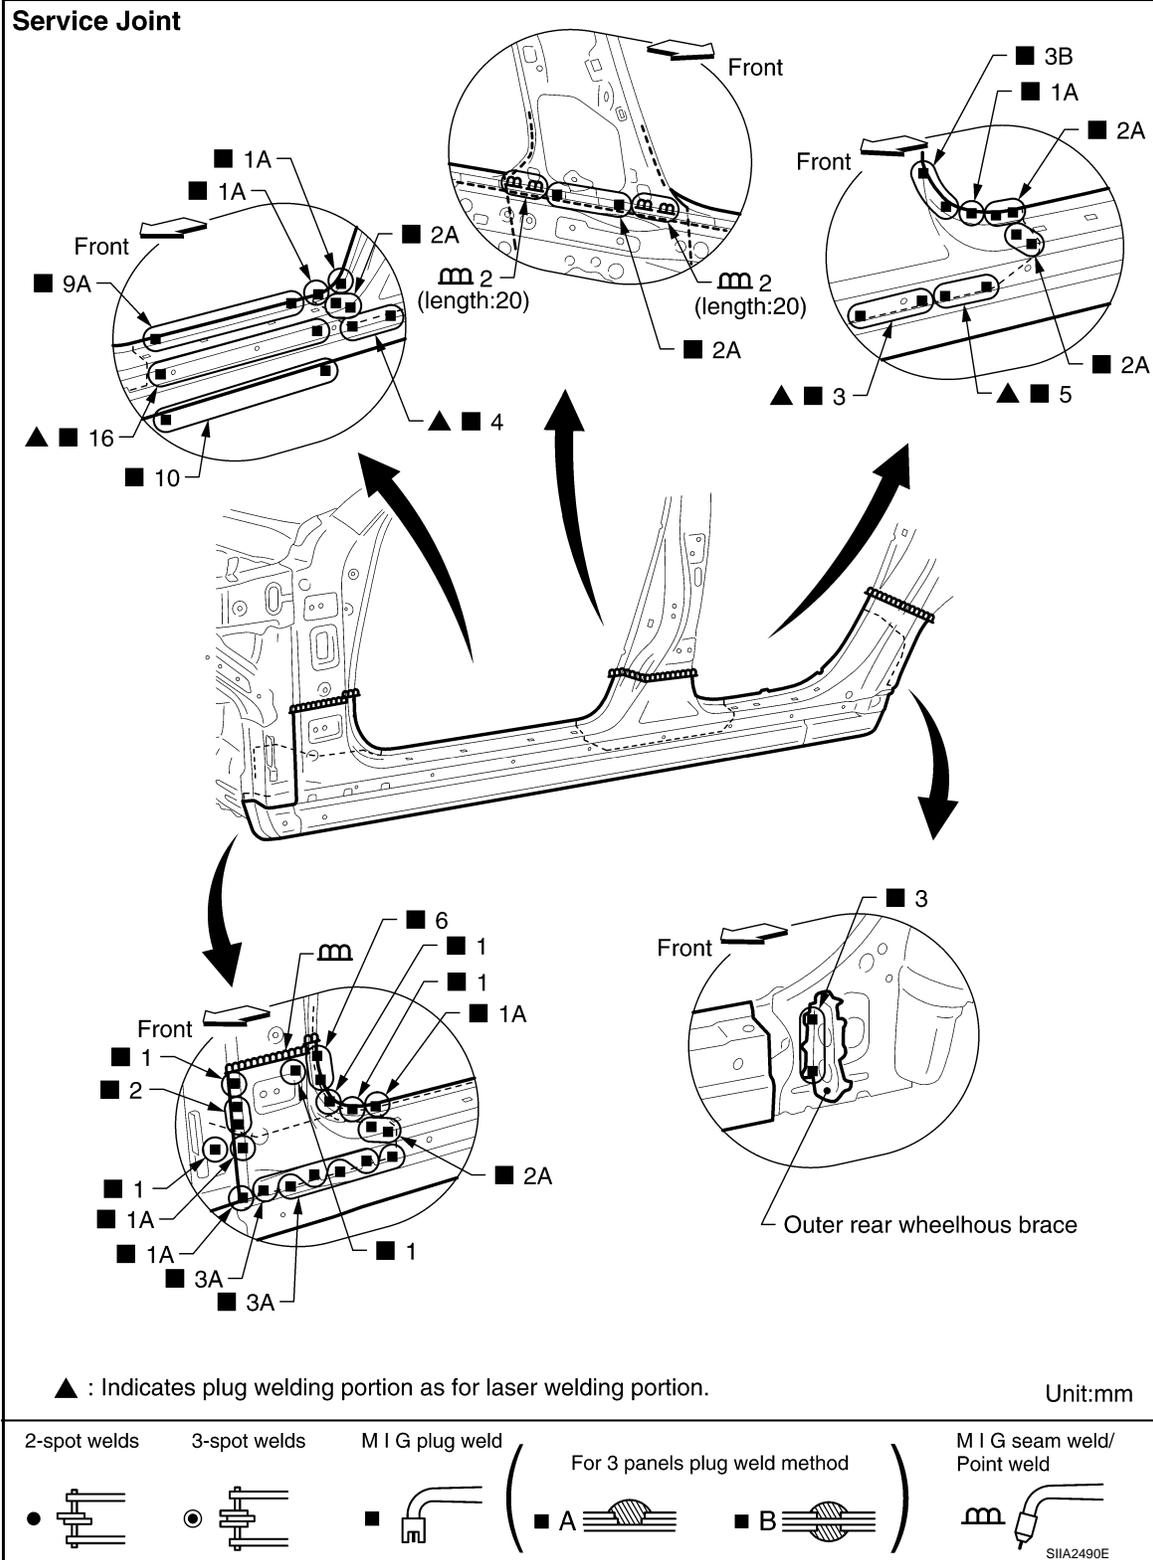

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P


BODY REPAIR

< SERVICE INFORMATION >

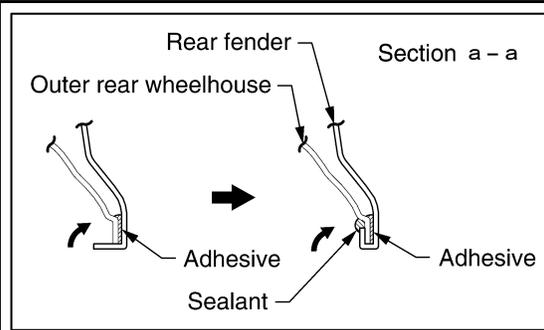

INSTALLATION NOTES


- Flange of a wheel arch department hem after having apply adhesive.
- Seal up the area around the hemmed end of the flange.
- Refer to "Rear fender hemming process".

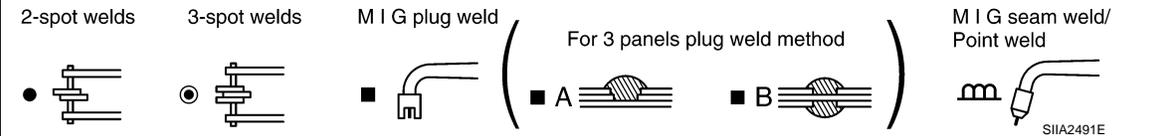

REAR FENDER


BODY REPAIR

< SERVICE INFORMATION >

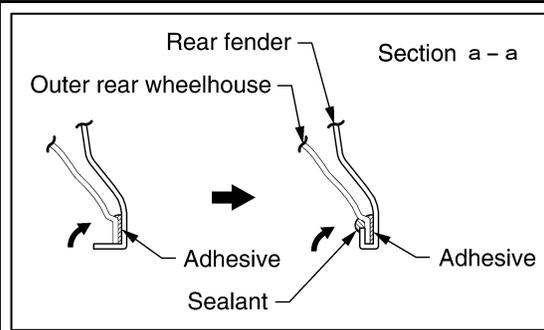

INSTALLATION NOTES


- Flange of a wheel arch department hem after having apply adhesive.
- Seal up the area around the hemmed end of the flange.
- Refer to "Rear fender hemming process".

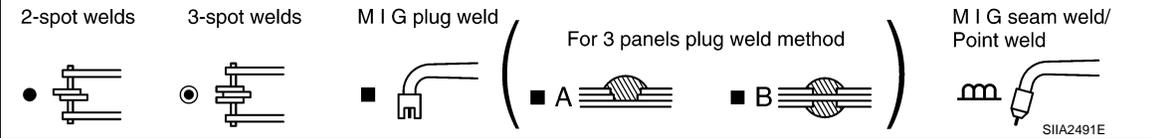

REAR PANEL

BODY REPAIR

< SERVICE INFORMATION >

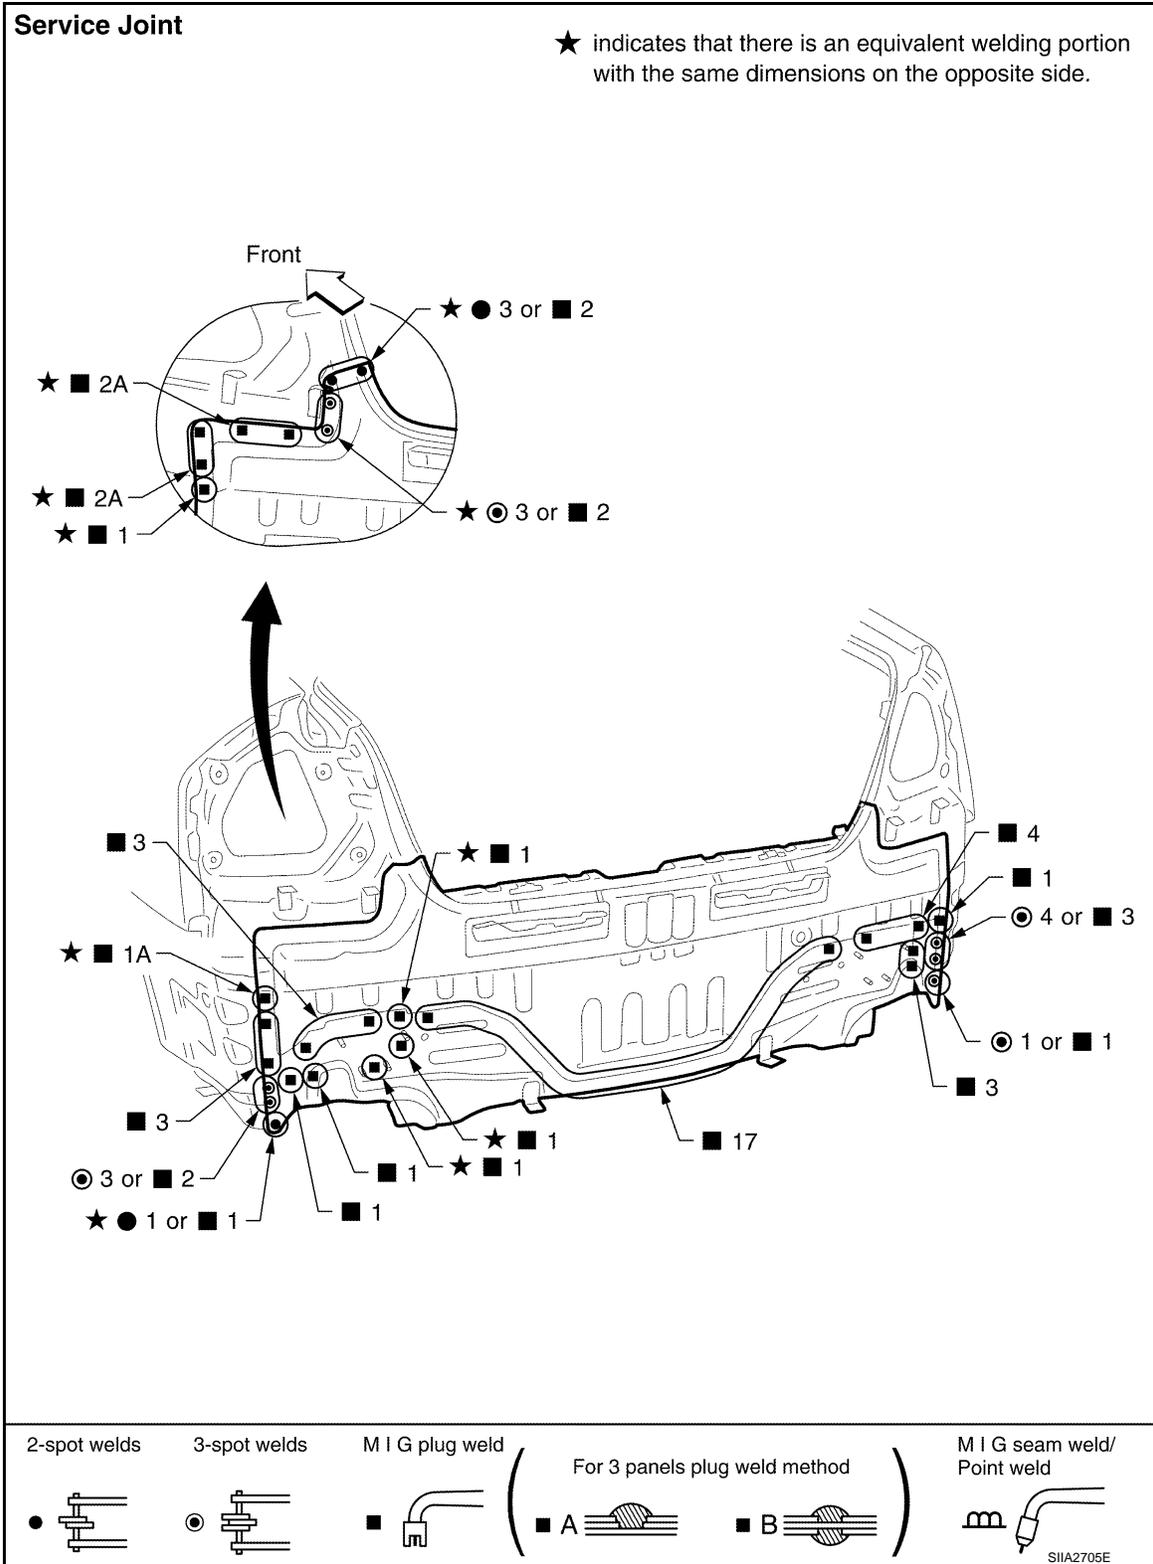

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P

Change parts


- Rear panel assembly

REAR FLOOR REAR

- Work after rear panel has been removed.

BODY REPAIR

< SERVICE INFORMATION >

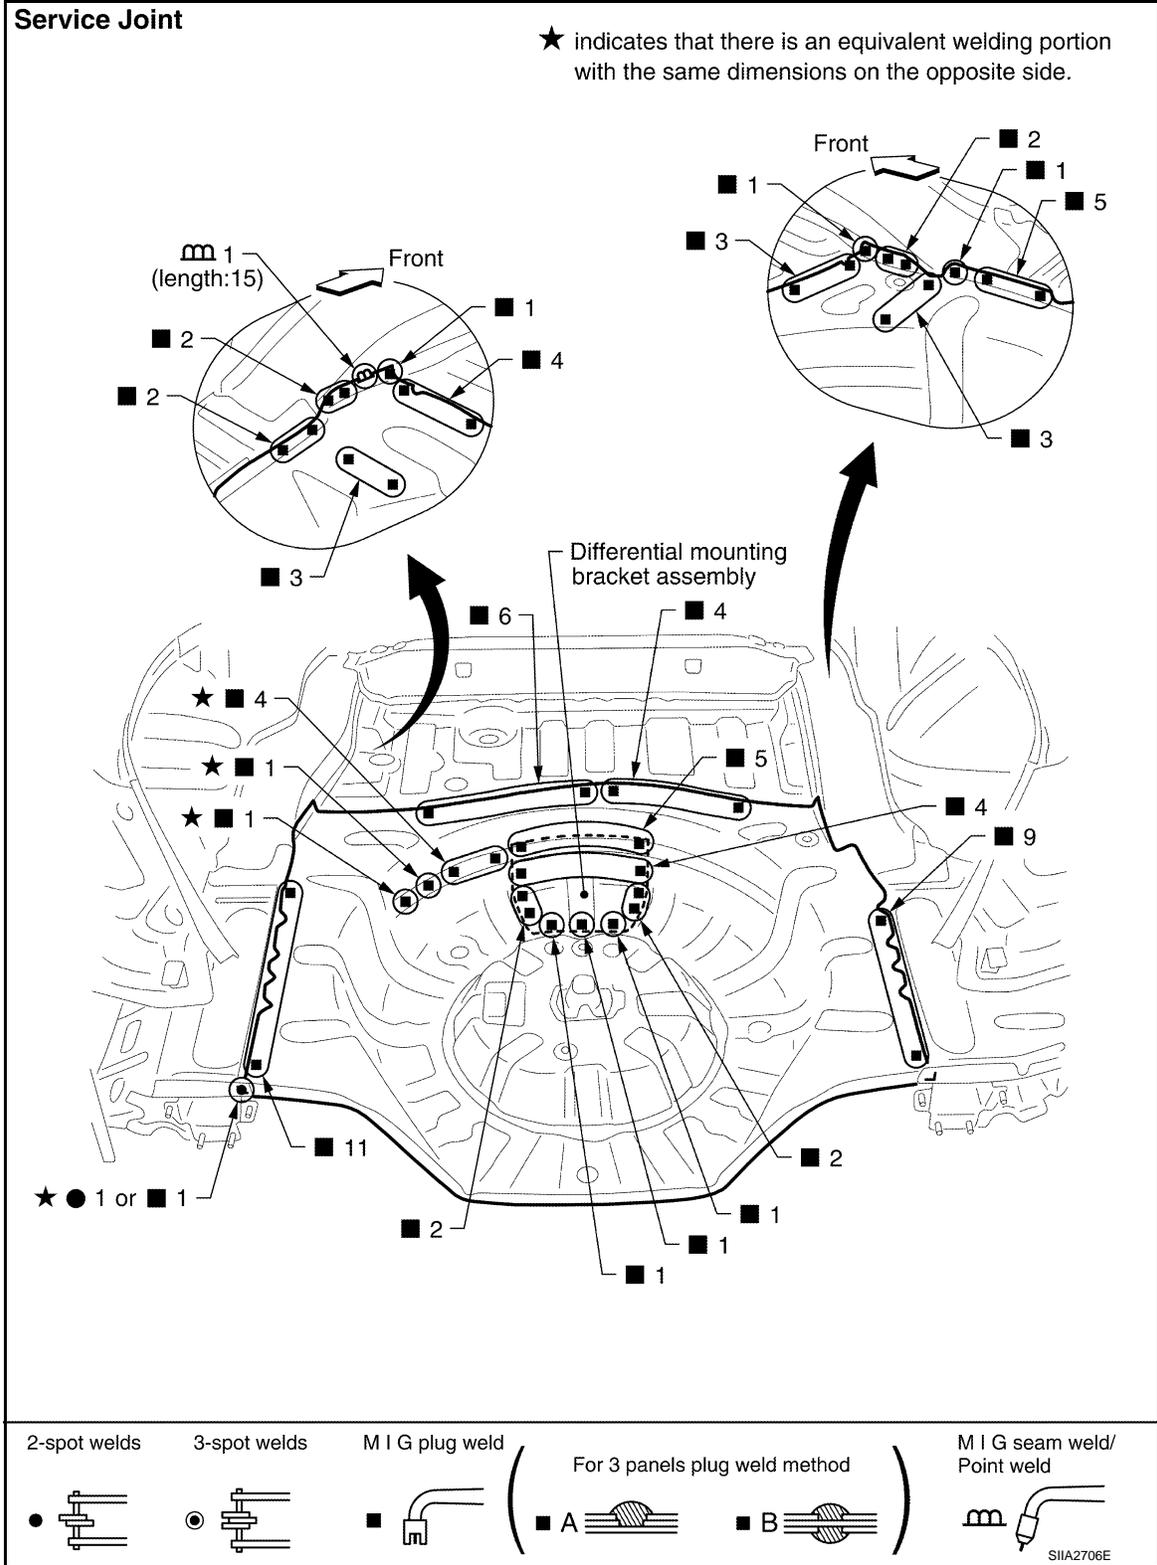

Change parts


- Rear floor rear
- Differential mounting bracket assembly

REAR SIDE MEMBER EXTENSION

- Work after rear panel has been removed.

BODY REPAIR

< SERVICE INFORMATION >

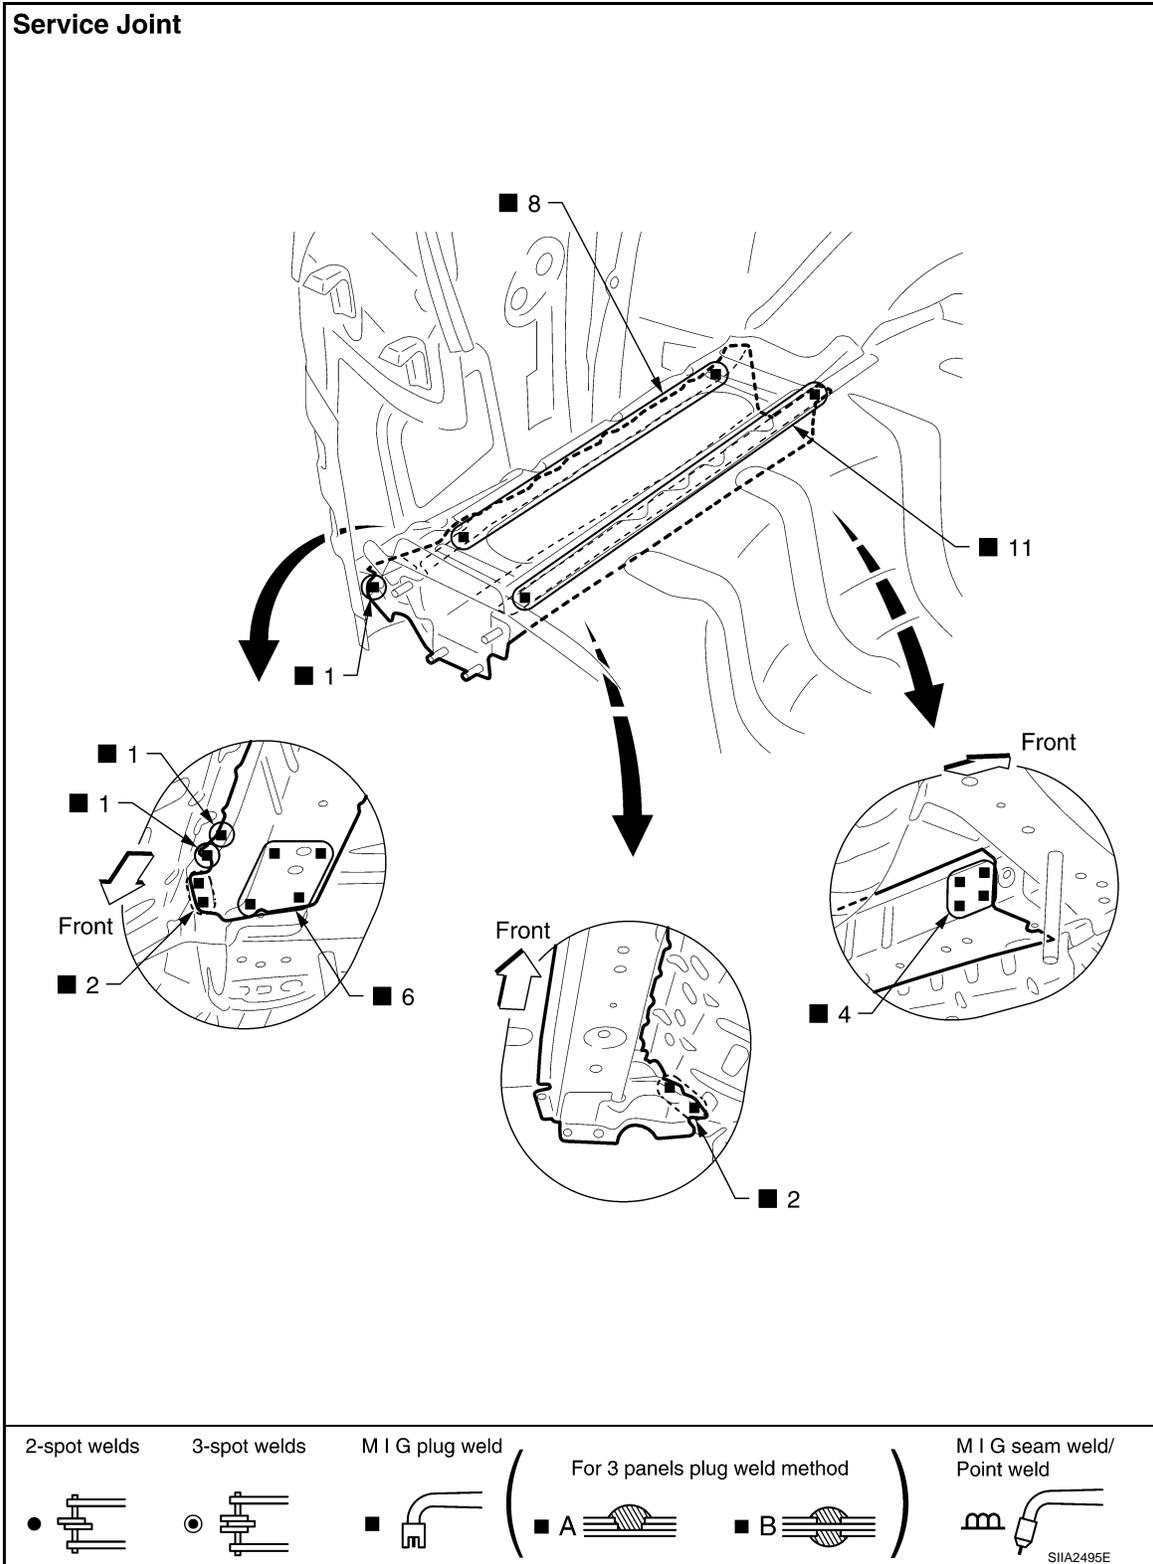

Change parts

- Rear side member extension (LH)

A
B
C
D
E
F
G
H
BL
J
K
L
M
N
O
P