

SECTION **CHG**
CHARGING SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CONTENTS

PRECAUTION	3	WARNING/INDICATOR/CHIME LIST : Warning Lamps/Indicator Lamps	8
PRECAUTIONS	3	WIRING DIAGRAM	9
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	CHARGING SYSTEM	9
Precaution for Power Generation Voltage Variable Control System	3	Wiring Diagram	9
PREPARATION	4	BASIC INSPECTION	13
PREPARATION	4	DIAGNOSIS AND REPAIR WORKFLOW	13
Special Service Tool	4	Work Flow (With EXP-800 NI or GR8-1200 NI)	13
Commercial Service Tool	4	Work Flow (Without EXP-800 NI or GR8-1200 NI).....	16
SYSTEM DESCRIPTION	5	DTC/CIRCUIT DIAGNOSIS	19
COMPONENT PARTS	5	CHARGING SYSTEM PRELIMINARY INSPECTION	19
CHARGING SYSTEM	5	Diagnosis Procedure	19
CHARGING SYSTEM : Component Parts Location	5	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION	20
CHARGING SYSTEM : Generator	5	Diagnosis Procedure	20
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM	5	B TERMINAL CIRCUIT	22
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : Component Parts Location.....	5	Diagnosis Procedure	22
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : Generator (IC voltage regulator)	6	L TERMINAL CIRCUIT (OPEN)	23
SYSTEM	7	Diagnosis Procedure	23
CHARGING SYSTEM	7	L TERMINAL CIRCUIT (SHORT)	25
CHARGING SYSTEM : System Description	7	Diagnosis Procedure	25
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM	7	S TERMINAL CIRCUIT	26
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : System Description	7	Diagnosis Procedure	26
WARNING/INDICATOR/CHIME LIST	8	SYMPTOM DIAGNOSIS	27
		CHARGING SYSTEM	27
		Symptom Table	27
		REMOVAL AND INSTALLATION	28

CHG

GENERATOR	28
Exploded View	28
Removal and Installation	28
Inspection	29

SERVICE DATA AND SPECIFICATIONS (SDS)	30
--	----

SERVICE DATA AND SPECIFICATIONS (SDS)	30
Generator	30

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012203254

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Power Generation Voltage Variable Control System

INFOID:000000011933721

CAUTION:

For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Do not connect the electrical component or the ground wire directly to the battery terminal.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG

PREPARATION

< PREPARATION >



PREPARATION

PREPARATION

Special Service Tool


INFOID:000000012196375

The actual shape of the tools may differ from those illustrated here.

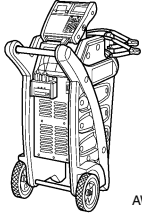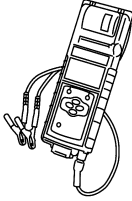Tool number (TechMate No.) Tool name	Description
<p>— (165-GR8-1200KIT-NI) Nissan battery and electronics tester</p>  <p style="text-align: right;">AWI1A1239ZZ</p>	<p>Tests batteries, starting and charging systems and charges batteries. For operating instructions, refer to diagnostic station instruction manual.</p>
<p>— (165-EXP-800-NI) Midtronic hand-held battery tester</p>  <p style="text-align: right;">JSMIA0806ZZ</p>	<p>Tests batteries and charging systems. For operating instructions, refer to diagnostic analyzer instruction manual.</p>

Commercial Service Tool

INFOID:000000012196376

Tool name	Description
<p>Power tool</p>  <p style="text-align: right;">PIIB1407E</p>	<p>Loosening nuts, screws and bolts</p>

COMPONENT PARTS

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

COMPONENT PARTS

CHARGING SYSTEM

CHARGING SYSTEM : Component Parts Location

INFOID:0000000012227571

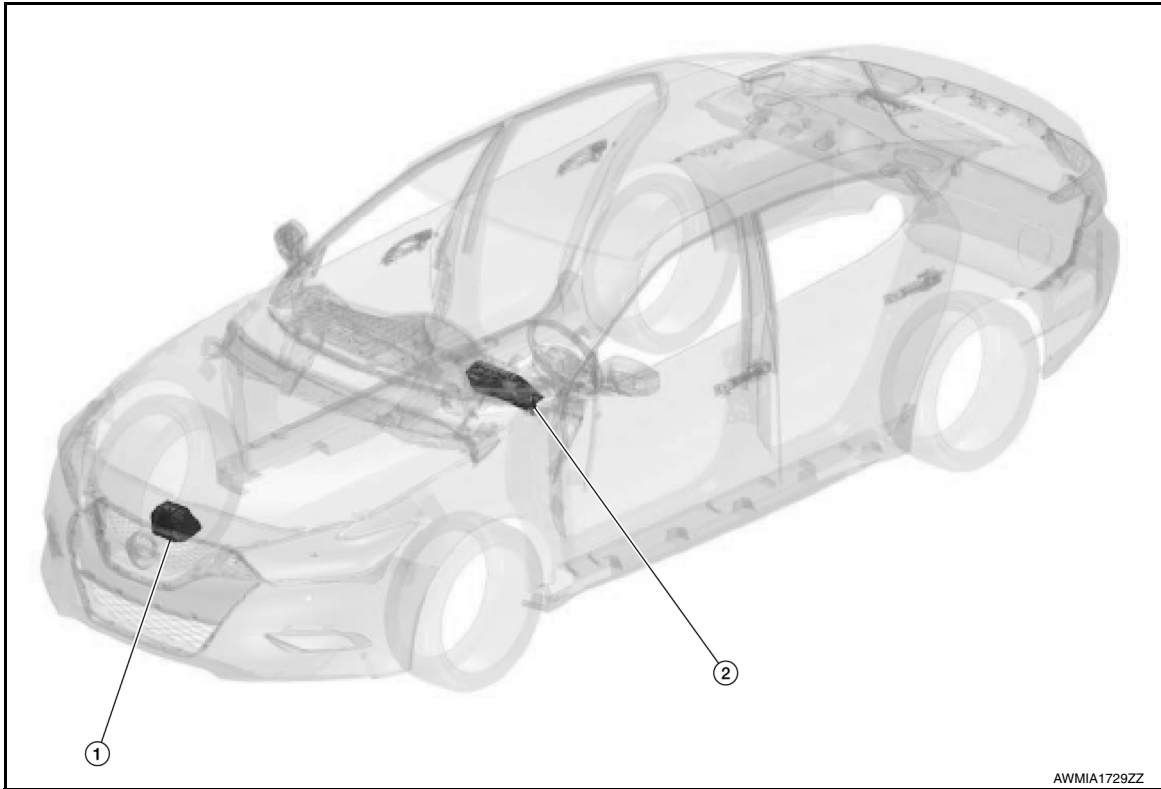


A
B
C
D
E
F
G
H
I
J
K
L

No.	Component	Function
1.	Generator	Refer to CHG-5, "CHARGING SYSTEM : Generator" .
2.	Combination meter (Charge warning lamp)	The IC voltage regulator warning function activates to illuminate the charge warning lamp, if any of the following symptoms occur while generator is operating: <ul style="list-style-type: none"> • Excessive voltage is produced. • No voltage is produced.

CHARGING SYSTEM : Generator

INFOID:0000000012227572

The generator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged. The voltage output is controlled by the IC voltage regulator.

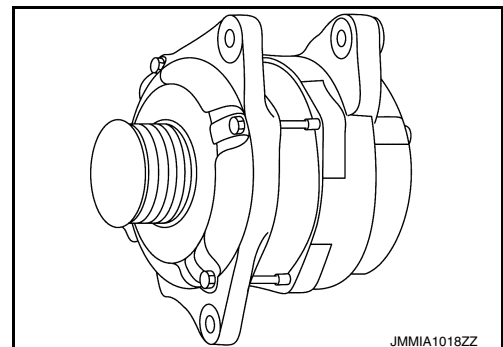

CHG

N
O
P

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM


POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : Component

COMPONENT PARTS

< SYSTEM DESCRIPTION >

Parts Location

INFOID:000000012227573

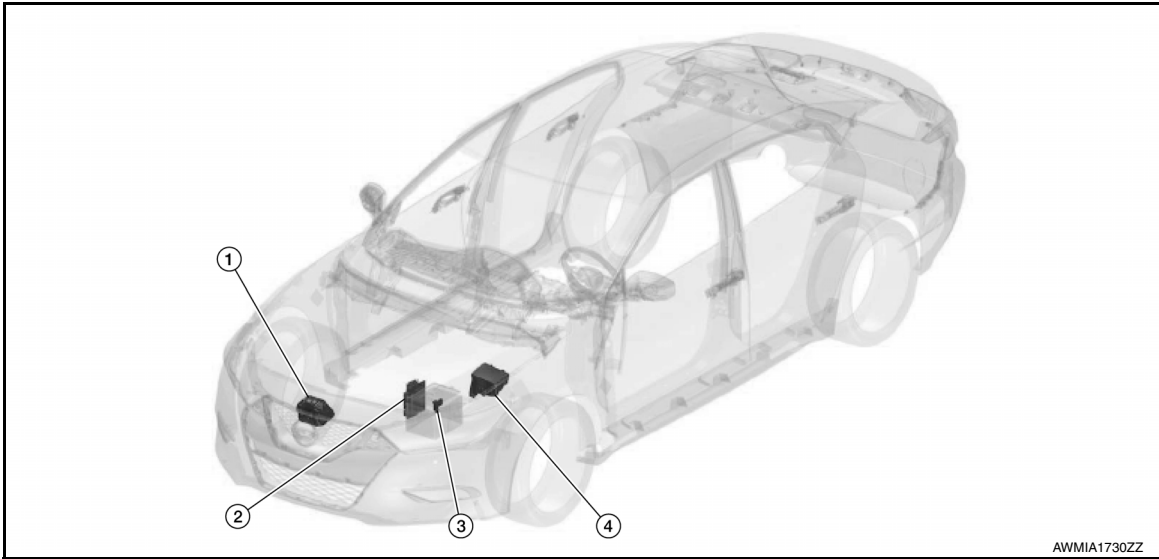

AWMIA1730ZZ

No.	Component	Function
1.	Generator (IC voltage regulator)	Refer to CHG-6. "POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : Generator (IC voltage regulator)".
2.	Battery current sensor	Battery current sensor is installed to the battery cable at the negative terminal, and it detects the charging/discharging current of the battery and sends the voltage signal to ECM according to the current value.
3.	ECM	ECM judges whether to perform the power generation voltage variable control according to the battery condition. When performing the power generation voltage variable control, ECM calculates the target power generation voltage according to the battery condition and sends the calculated value as the power generation command value signal to IPDM E/R. Refer to EC-22. "ECM" for detailed installation location.
4.	IPDM E/R	IPDM E/R converts the received power generation command value into the power generation command signal (PWM signal) and sends it to the IC voltage regulator. Refer to PCS-5. "Component Parts Location" for detailed installation location.


POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : Generator (IC voltage regulator)

INFOID:000000012227574

The output voltage of the generator is controlled by the IC voltage regulator inside the generator.

IC voltage regulator controls the power generation voltage by the target power generation voltage based on the received power generation command signal (PWM signal).

When there is no power generation command signal (PWM signal), the generator performs the normal power generation according to the characteristic of the IC voltage regulator.

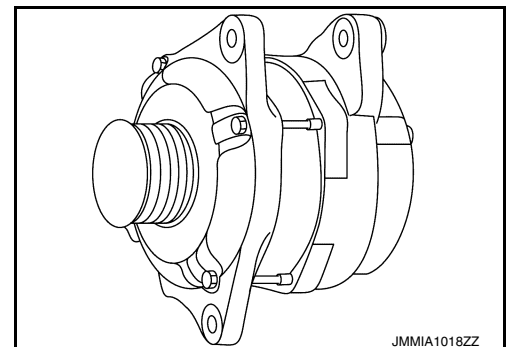

JMMIA1018ZZ

SYSTEM

< SYSTEM DESCRIPTION >


SYSTEM

CHARGING SYSTEM

CHARGING SYSTEM : System Description

INFOID:000000012227709

SYSTEM DIAGRAM

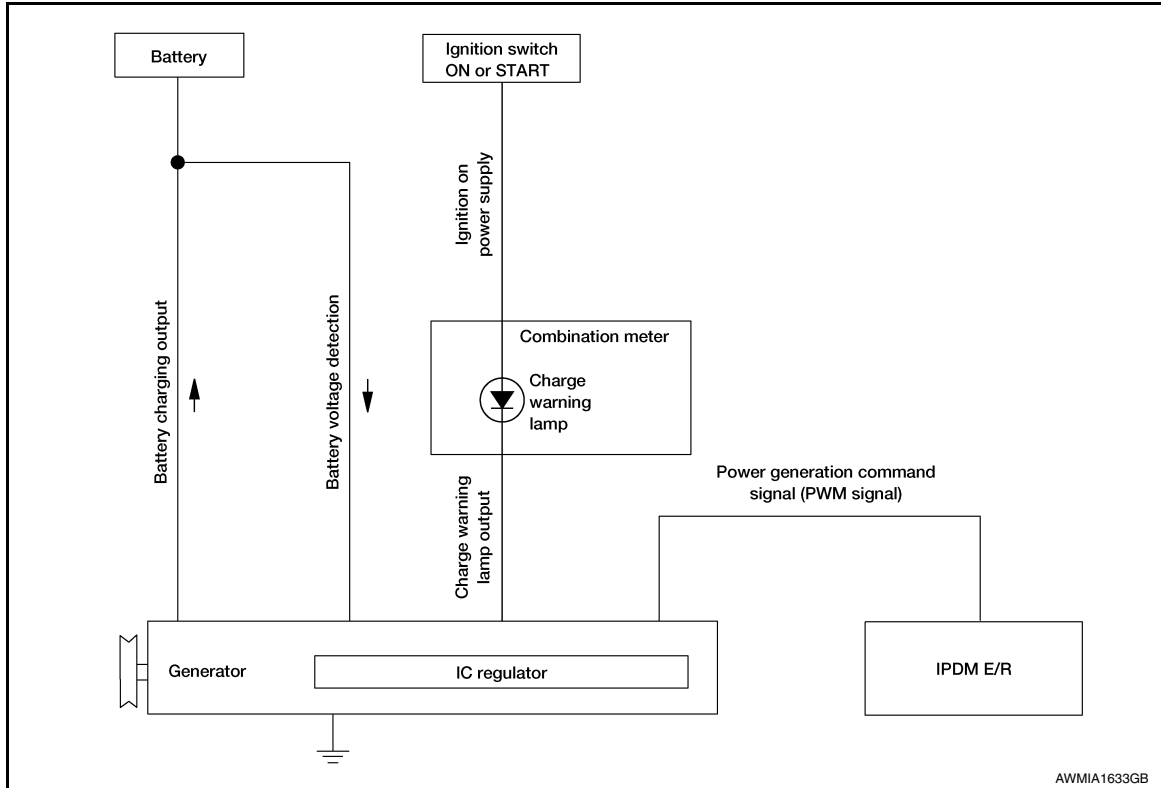

SYSTEM DESCRIPTION

- “B” terminal circuit supplies power to charge the battery and to operate the vehicle’s electrical system.
- “L” terminal circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the generator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.
- “S” terminal circuit detects the battery voltage to adjust the generator output voltage with the IC voltage regulator.

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : System De-

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG


SYSTEM

< SYSTEM DESCRIPTION >

scription

INFOID:000000012227710

SYSTEM DIAGRAM

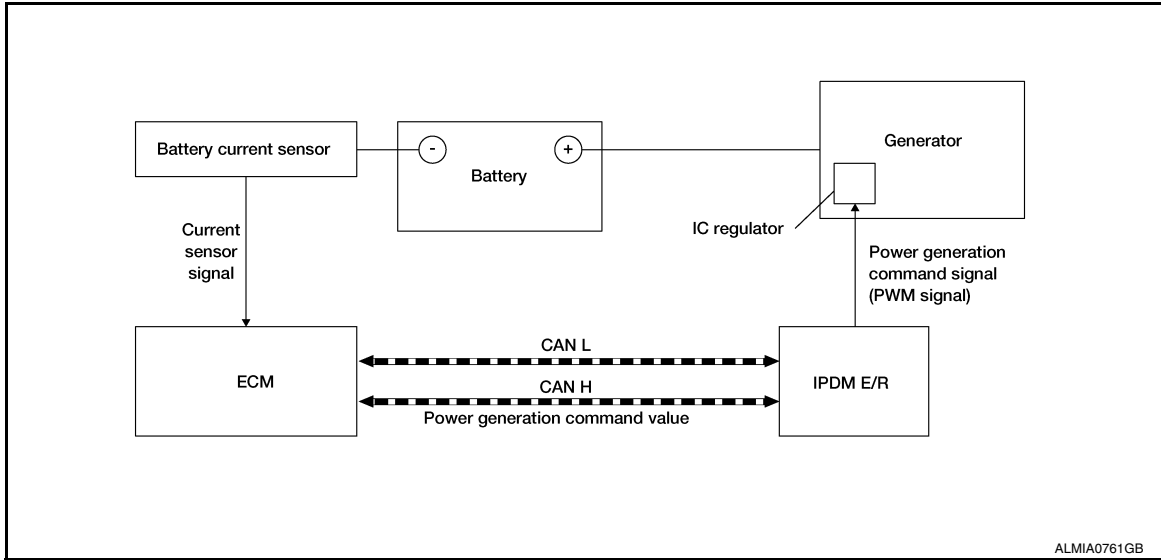

SYSTEM DESCRIPTION

By performing the power generation voltage variable control, the engine load due to the power generation of the generator is reduced and fuel consumption is decreased.


NOTE:

When any malfunction is detected in the power generation voltage variable control system, the power generation is performed according to the characteristic of the IC voltage regulator of the generator.

WARNING/INDICATOR/CHIME LIST

WARNING/INDICATOR/CHIME LIST : Warning Lamps/Indicator Lamps

INFOID:000000012227711

Item	Design	Reference
Charge warning lamp		For layout, refer to MWI-6, "METER SYSTEM : Design" .
		For function, refer to MWI-7, "METER SYSTEM : Combination Meter" .

CHARGING SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

CHARGING SYSTEM

Wiring Diagram

INFOID:000000011933718

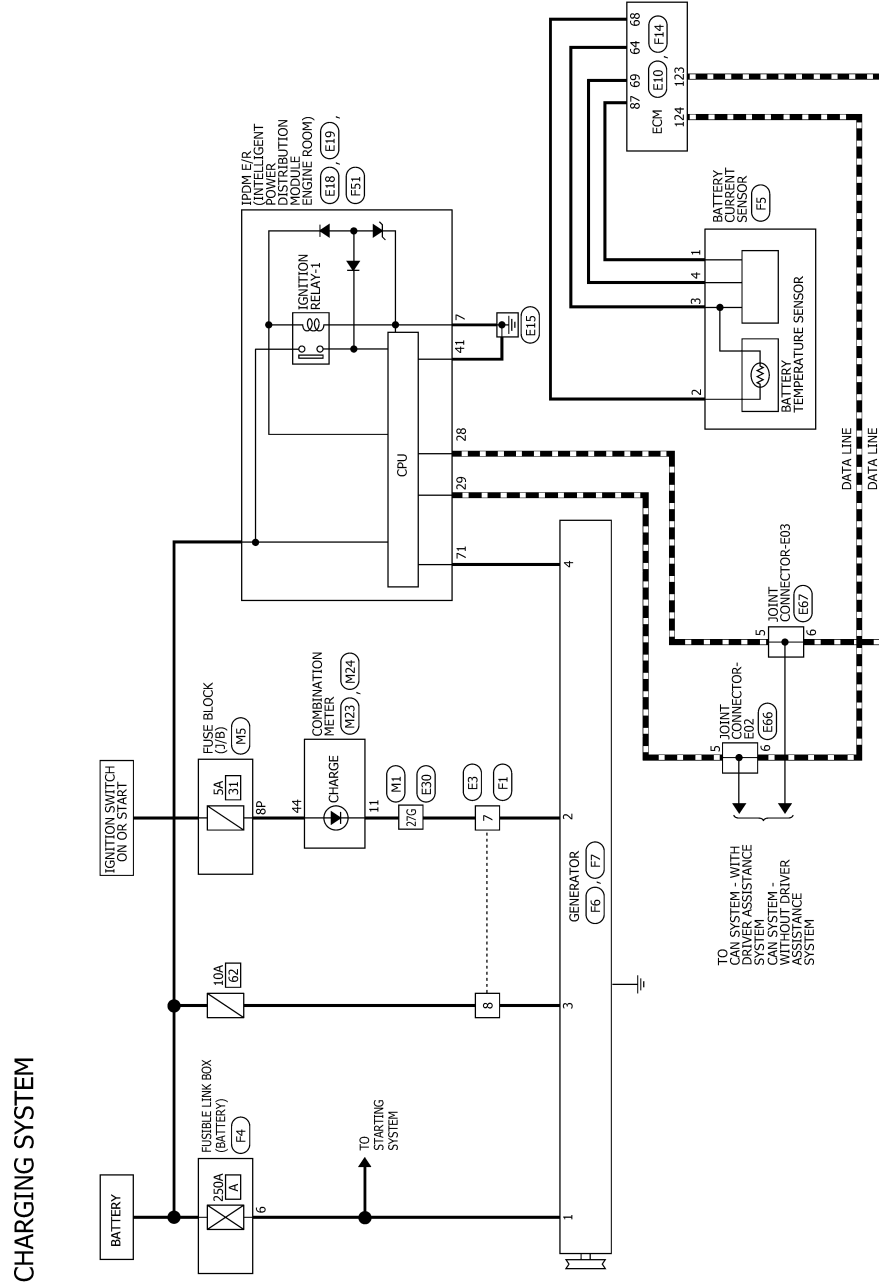

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG


AAMWA1731GB

CHARGING SYSTEM

< WIRING DIAGRAM >


CHARGING SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CST16-TM4
Connector Color	WHITE

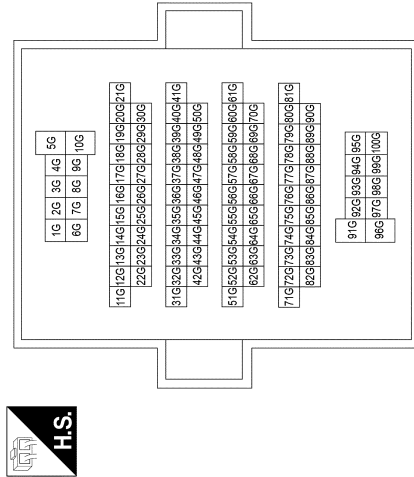

Terminal No.	27G
Color of Wire	R
Signal Name	-

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS
Connector Color	WHITE




Terminal No.	8P
Color of Wire	BR
Signal Name	-

Connector No.	M23
Connector Name	COMBINATION METER
Connector Type	TH16FW-NH
Connector Color	WHITE




Terminal No.	44
Color of Wire	BR
Signal Name	POWER (IGN)

Connector No.	M24
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH
Connector Color	WHITE




Terminal No.	11
Color of Wire	R
Signal Name	CHARGE

Connector No.	E3
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH
Connector Color	WHITE




Terminal No.	7
Color of Wire	W
Signal Name	-
Terminal No.	8
Color of Wire	Y
Signal Name	-

Connector No.	E10
Connector Name	ECM
Connector Type	RH24FB-RZ8-L-LH
Connector Color	BLACK

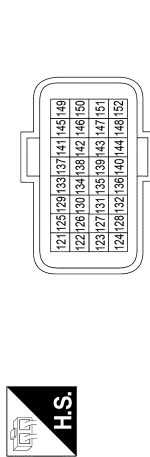

Terminal No.	123
Color of Wire	P
Signal Name	CAN-L
Terminal No.	124
Color of Wire	L
Signal Name	CAN-H

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	NS12FW-CS
Connector Color	WHITE



Terminal No.	7
Color of Wire	B
Signal Name	P-GND

CHARGING SYSTEM

< WIRING DIAGRAM >

Connector No.	F4
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Type	24340_JA04D
Connector Color	-



Terminal No.	Color of Wire	Signal Name
6	B/R	-

Connector No.	F5
Connector Name	BATTERY CURRENT SENSOR
Connector Type	SAZ04FGY
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	P	-
2	R	-
3	G	-
4	W	-

Connector No.	F6
Connector Name	GENERATOR
Connector Type	-
Connector Color	-




Terminal No.	Color of Wire	Signal Name
1	B/R	-

Connector No.	E66
Connector Name	JOINT CONNECTOR-E02
Connector Type	A06FGY
Connector Color	GRAY

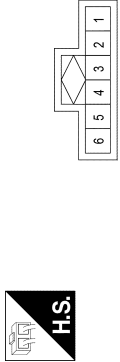


Terminal No.	Color of Wire	Signal Name
5	L	-
6	L	-

Connector No.	E67
Connector Name	JOINT CONNECTOR-E03
Connector Type	A06FGY
Connector Color	GRAY

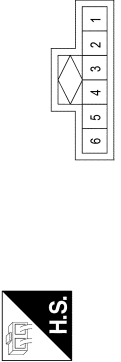


Terminal No.	Color of Wire	Signal Name
5	P	-
6	P	-

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH
Connector Color	WHITE

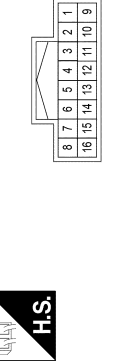


Terminal No.	Color of Wire	Signal Name
7	BR	-
8	Y	-

Connector No.	E19
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH32FW-NH
Connector Color	WHITE

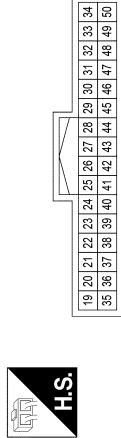

Terminal No.	Color of Wire	Signal Name
28	P	CAN-L
29	L	CAN-H
41	B	S-GND

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4
Connector Color	WHITE

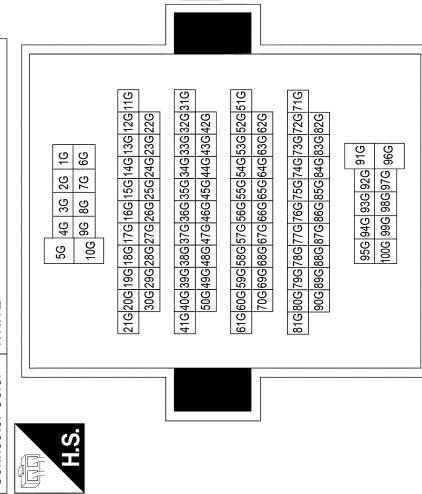

Terminal No.	Color of Wire	Signal Name
27G	W	-


AAMIA3397GB

A
B
C
D
E
F
G
H
I
J
K
L
CHG
N
O
P

CHARGING SYSTEM


< WIRING DIAGRAM >

Connector No.	F51
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH12FW-NH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
71	SB	ALTC

Connector No.	F7
Connector Name	GENERATOR
Connector Type	HS03FB
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
2	BR	-
3	Y	-
4	SB	-

Connector No.	F14
Connector Name	ECM
Connector Type	MAB5FB-MEB10-LH
Connector Color	BLACK

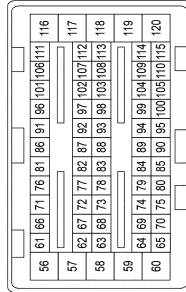

Terminal No.	Color of Wire	Signal Name
64	G	SENSOR GROUND
68	R	BATTERY TEMPERATURE SENSOR
69	W	BATTERY CURRENT SENSOR
87	P	SENSOR GROUND

AAMIA3398GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow (With EXP-800 NI or GR8-1200 NI)

INFOID:0000000011933700

CHARGING SYSTEM DIAGNOSIS WITH EXP-800 NI OR GR8-1200 NI

To test the charging system, use the following special service tools:

- EXP-800 NI Battery and electrical diagnostic analyzer
- GR8-1200 NI Multitasking battery and electrical diagnostic station

NOTE:

Refer to the applicable Instruction Manual for proper charging system diagnosis procedures.


A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

OVERALL SEQUENCE

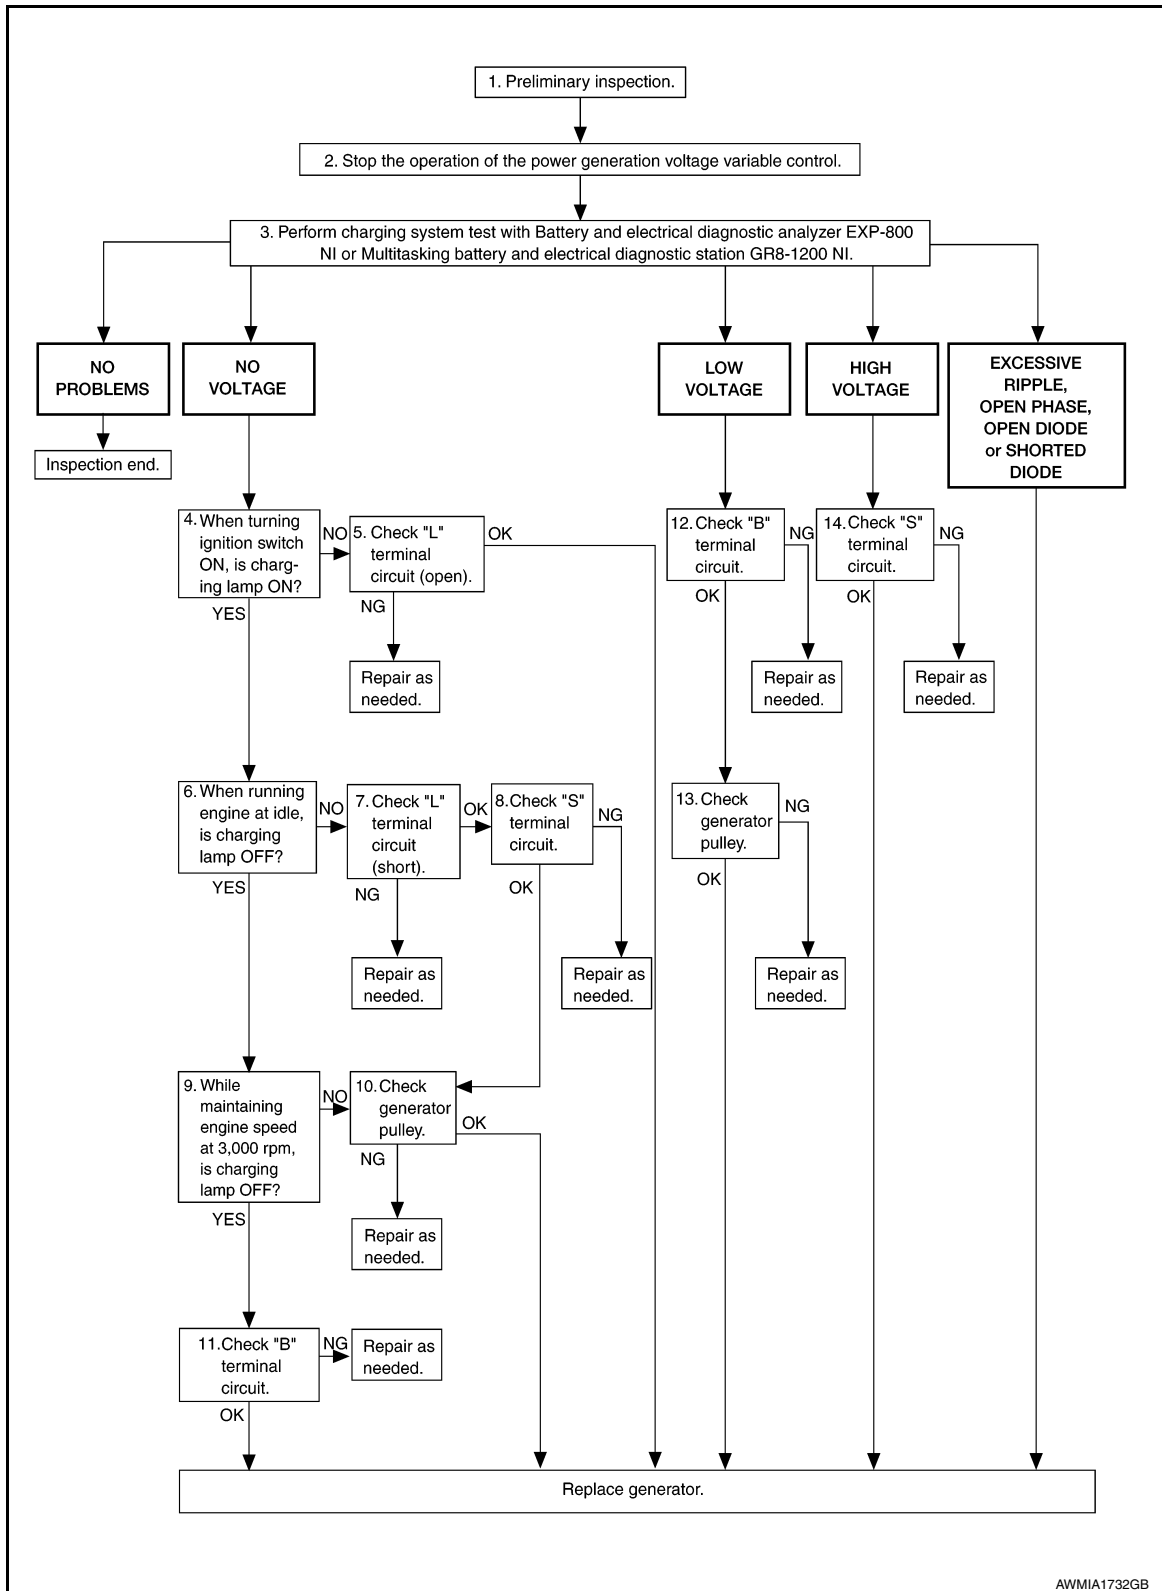

AWMIA1732GB

DETAILED FLOW

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter and generator test segments must be done as a set from start to finish.

1. PRELIMINARY INSPECTION

Perform the preliminary inspection. Refer to [CHG-19, "Diagnosis Procedure"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

>> GO TO 2.

2. STOP POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

Stop the operation of the power generation voltage variable control in either of the following procedures.

- After selecting “ENGINE” using CONSULT, set the DUTY value of “ALTERNATOR DUTY” to 0 % by selecting “ALTERNATOR DUTY” of “Active Test”. Continue “Active Test” until the end of inspection. (When the DUTY value is 0 or 100 %, the normal power generation is performed according to the characteristic of the IC regulator of the generator.)
- Turn the ignition switch OFF, and disconnect the battery current sensor connector. [However, DTC (P1550–P1554) of the engine might remain. After finishing the inspection, connect the battery current sensor connector and erase the self diagnosis results history of the engine using CONSULT.]

>> GO TO 3.

3. DIAGNOSIS WITH EXP-800 NI OR GR8-1200 NI

Perform the charging system test using Multitasking battery and electrical diagnostic station GR8-1200 NI or Battery and electrical diagnostic analyzer EXP-800 NI. Refer to the applicable Instruction Manual for proper testing procedures.

Test result

NO PROBLEMS>>Charging system is normal and will also show “DIODE RIPPLE” test result.

NO VOLTAGE>>GO TO 4.

LOW VOLTAGE>>GO TO 12.

HIGH VOLTAGE>>GO TO 14.

EXCESSIVE RIPPLE, OPEN PHASE, OPEN DIODE or SHORTED DIODE>>Replace the generator. Refer to [CHG-28. "Removal and Installation"](#). Perform “DIODE RIPPLE” test again using Multitasking battery and electrical diagnostic station GR8-1200 NI or Battery and electrical diagnostic analyzer EXP-800 NI to confirm repair.

4. INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS ON)

Turn the ignition switch ON.

Does the charge warning lamp illuminate?

YES >> GO TO 6.

NO >> GO TO 5.

5. “L” TERMINAL CIRCUIT (OPEN) INSPECTION

Check “L” terminal circuit (open). Refer to [CHG-23. "Diagnosis Procedure"](#).

Is the “L” terminal circuit normal?

YES >> Replace generator. Refer to [CHG-28. "Removal and Installation"](#).

NO >> Repair as needed.

6. INSPECTION WITH CHARGE WARNING LAMP (IDLING)

Start the engine and run it at idle.

Does the charge warning lamp turn OFF?

YES >> GO TO 9.

NO >> GO TO 7.

7. “L” TERMINAL CIRCUIT (SHORT) INSPECTION

Check “L” terminal circuit (short). Refer to [CHG-25. "Diagnosis Procedure"](#).

Is the “L” terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

8. “S” TERMINAL CIRCUIT INSPECTION

Check “S” terminal circuit. Refer to [CHG-26. "Diagnosis Procedure"](#).

Is the “S” terminal circuit normal?

YES >> GO TO 10.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NO >> Repair as needed.

9. INSPECTION WITH CHARGE WARNING LAMP (ENGINE AT 3,000 RPM)

Increase and maintain the engine speed at 3,000 rpm.

Does the charge warning lamp remain off?

YES >> GO TO 11.

NO >> GO TO 10.

10. INSPECTION OF GENERATOR PULLEY

Check generator pulley. Refer to [CHG-28. "Removal and Installation"](#).

Is generator pulley normal?

YES >> Replace generator. Refer to [CHG-28. "Removal and Installation"](#).

NO >> Repair as needed.

11. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [CHG-22. "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> Replace generator. Refer to [CHG-28. "Removal and Installation"](#).

NO >> Repair as needed.

12. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [CHG-22. "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> GO TO 13.

NO >> Repair as needed.

13. INSPECTION OF GENERATOR PULLEY

Check generator pulley. Refer to [CHG-28. "Removal and Installation"](#).

Is generator pulley normal?

YES >> Replace generator. Refer to [CHG-28. "Removal and Installation"](#).

NO >> Repair as needed.

14. "S" TERMINAL CIRCUIT INSPECTION

Check "S" terminal circuit. Refer to [CHG-26. "Diagnosis Procedure"](#).

Is the "S" terminal circuit normal?

YES >> Replace generator. Refer to [CHG-28. "Removal and Installation"](#).

NO >> Repair as needed.

Work Flow (Without EXP-800 NI or GR8-1200 NI)

INFOID:000000011933701

OVERALL SEQUENCE


Before performing a generator test, make sure that the battery is fully charged. A 30-volt voltmeter and suitable test probes are necessary for the test.

- Before starting, inspect the fusible link.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

- Use fully charged battery.

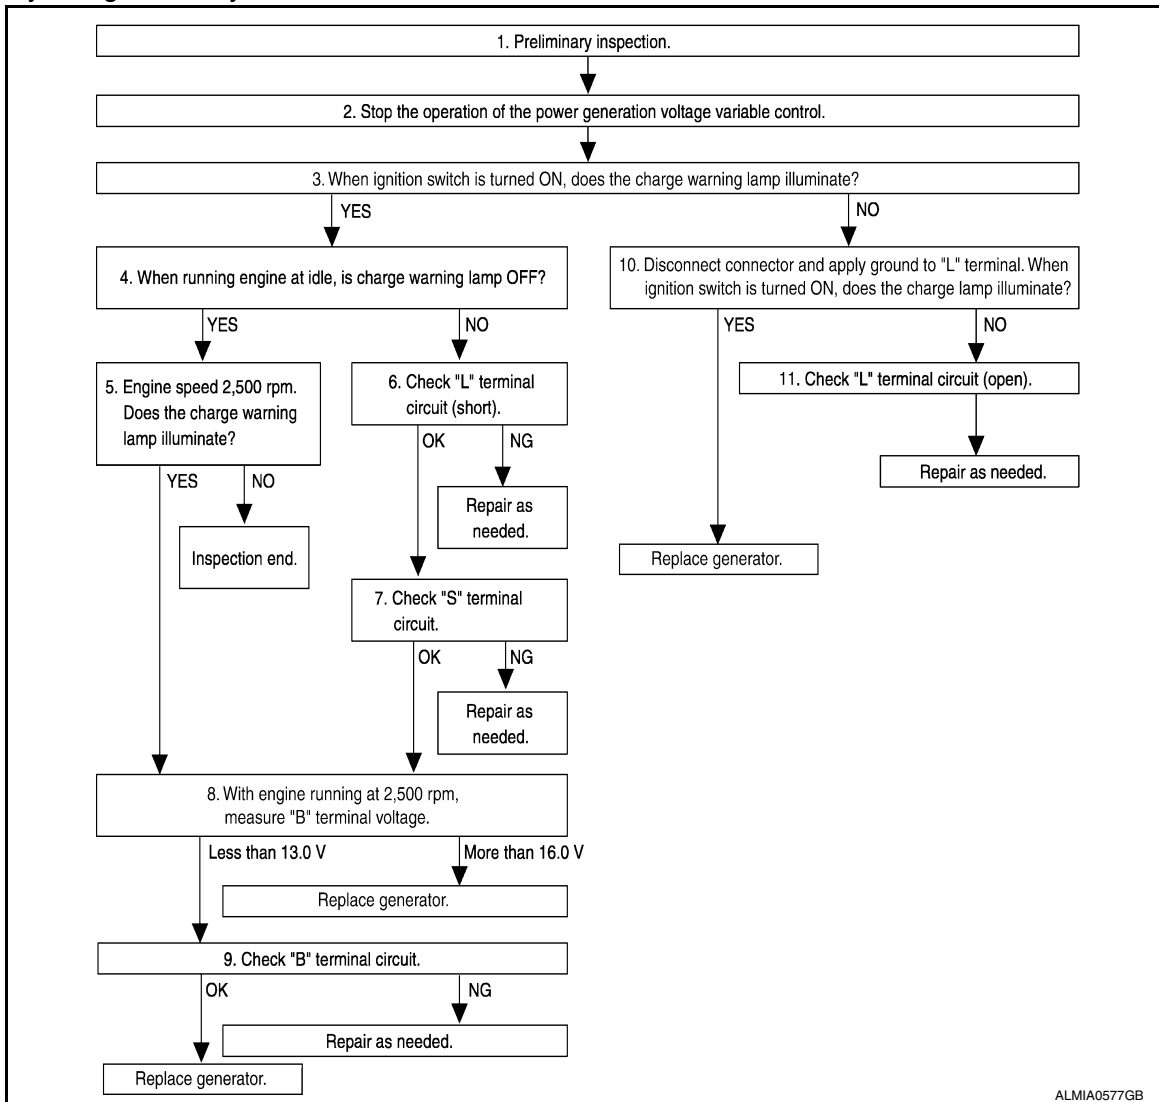

DETAILED FLOW

1. PRELIMINARY INSPECTION

Perform the preliminary inspection. Refer to [CHG-19, "Diagnosis Procedure"](#).

>> GO TO 2.

2. STOP POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

Stop the operation of the power generation voltage variable control in either of the following procedures:

- After selecting "ENGINE" using CONSULT, set the DUTY value of "ALTERNATOR DUTY" to 0 % by selecting "ALTERNATOR DUTY" with "Active Test". Continue "Active Test" until the end of inspection. (When the DUTY value is 0 or 100 %, the normal power generation is performed according to the characteristic of the IC regulator of the generator.)
- Turn the ignition switch OFF, and disconnect the battery current sensor connector. [However, DTC (P1550 - P1554) of the engine might remain. After finishing the inspection, connect the battery current sensor connector and erase the self-diagnostic results history of the engine using CONSULT.]

>> GO TO 3.

3. INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS TURNED ON)

When ignition switch is turned ON.

Does the charge warning lamp illuminate?

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

YES >> GO TO 4.
NO >> GO TO 10.

4.INSPECTION WITH CHARGE WARNING LAMP (IDLING)

Start the engine and run it at idle

Does the charge warning lamp turn OFF?

YES >> GO TO 5.
NO >> GO TO 6.

5.INSPECTION WITH CHARGE WARNING LAMP (ENGINE AT 2,500 RPM)

Increase and maintain the engine speed at 2,500 rpm.

Does the charge warning lamp illuminate?

YES >> GO TO 8.
NO >> Inspection End.

6.“L” TERMINAL CIRCUIT (SHORT) INSPECTION

Check terminal “L” circuit for (short). Refer to [CHG-25, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 7.
NO >> Repair as needed.

7.“S” TERMINAL CIRCUIT INSPECTION

Check terminal “S” circuit. Refer to [CHG-26, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 8.
NO >> Repair as needed.

8.MEASURE “B” TERMINAL VOLTAGE

Start engine. With engine running at 2,500 rpm, measure “B” terminal voltage.

What voltage does the measurement result show?

Less than 13.0 V>>GO TO 9.
More than 16.0 V>>Replace generator. Refer to [CHG-28, "Removal and Installation"](#).

9.“B” TERMINAL CIRCUIT INSPECTION

Check “B” terminal circuit. Refer to [CHG-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace generator. Refer to [CHG-28, "Removal and Installation"](#).
NO >> Repair as needed.

10.INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS ON)

1. Disconnect generator connector and apply ground to “L” terminal.
2. Turn the ignition switch ON.

Does the charge warning lamp illuminate?

YES >> Replace generator. Refer to [CHG-28, "Removal and Installation"](#).
NO >> GO TO 11.

11.CHECK “L” TERMINAL CIRCUIT (OPEN)

Check “L” terminal circuit (OPEN). Refer to [CHG-23, "Diagnosis Procedure"](#).

>> Repair as needed.

CHARGING SYSTEM PRELIMINARY INSPECTION

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

CHARGING SYSTEM PRELIMINARY INSPECTION

Diagnosis Procedure

INFOID:0000000011933708

1. CHECK BATTERY TERMINALS CONNECTION

Check if battery terminals are clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair battery terminals connection. Confirm repair by performing complete Charging system test using EXP-800 NI or GR8-1200 NI (if available). Refer to applicable Instruction Manual for proper testing procedures.

2. CHECK FUSE

Check for blown fuse and fusible link.

Unit	Power source (Power supply terminals)	Fuse or Fusible Link No
Generator	Battery (terminal 3)	62 (10 A)
	Battery (terminal 1)	Fusible Link A (250 A)
Combination meter	Ignition switch ON or START (terminal 2)	31 (5 A)

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the blown fuse or fusible link after repairing the affected circuit.

3. CHECK DRIVE BELT TENSION

Check drive belt tension. Refer to [CHG-29. "Inspection"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair as needed.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< DTC/CIRCUIT DIAGNOSIS >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

Diagnosis Procedure

INFOID:000000011933709

Regarding Wiring Diagram information, refer to [CHG-9, "Wiring Diagram"](#).

CAUTION:

When performing this inspection, always use a charged battery that has completed the battery inspection. (When the charging rate of the battery is low, the response speed of the voltage change will become slow. This can cause an incorrect inspection.)

1. CHECK ECM (CONSULT)

Perform ECM self-diagnosis with CONSULT. Refer to [EC-73, "CONSULT Function"](#).

Self-diagnostic results content

No malfunction detected>> GO TO 2.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

2. CHECK OPERATION OF POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

1. Connect CONSULT and start the engine.
2. The selector lever is in "P" or "N" position and all of the electric loads and A/C, etc. are turned OFF.
3. Select "ALTERNATOR DUTY" in "Active Test" of "ENGINE", and then check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 40.0 %.

"BATTERY VOLT"

2 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 40.0 % : 12 - 13.6 V

4. Check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 80.0%.

"BATTERY VOLT"

20 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 80.0 % : +0.5 V or more against the value of "BATTERY VOLT" monitor when DUTY value is 40.0 %

Is the measurement value within the specification?

YES >> Inspection End.

NO >> GO TO 3.

3. CHECK IPDM E/R (CONSULT)

Perform IPDM E/R self-diagnosis with CONSULT. Refer to [PCS-11, "CONSULT Function \(IPDM E/R\)"](#).

Self-diagnostic results content

No malfunction detected>> GO TO 4.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

4. CHECK HARNESS BETWEEN GENERATOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect generator connector and IPDM E/R connector.
3. Check continuity between generator harness connector F7 and IPDM E/R harness connector F51.

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< DTC/CIRCUIT DIAGNOSIS >

Generator		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
F7	4	F51	71	Yes

4. Check continuity between generator harness connector F7 and ground.

Generator		-	Continuity
Connector	Terminal		
F7	4	Ground	No

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-36. "Removal and Installation"](#).

NO >> Repair harness or connector between IPDM E/R and generator.

A
B
C
D
E
F
G
H
I
J
K
L

CHG

N
O
P

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

B TERMINAL CIRCUIT

Diagnosis Procedure

INFOID:000000012196399

Regarding Wiring Diagram information, refer to [CHG-9, "Wiring Diagram"](#).

1. CHECK TERMINAL "B" CONNECTION

1. Turn ignition switch OFF.
2. Verify terminal "B" is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal "B" connection. Confirm repair by performing complete charging system test using the EXP-800 NI or GR8-1200 NI (if available). Refer to the applicable instruction manual for proper testing procedures.

2. CHECK TERMINAL "B" CIRCUIT

Check voltage between generator connector F6 and ground.

(+)		(-)	Voltage (Approx.)
Connector	Terminal		
F6	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness for open between generator and fusible link.

3. CHECK TERMINAL "B" CONNECTION (VOLTAGE DROP TEST)

1. Start engine, engine should be running at idle and warm.
2. Check voltage between battery positive terminal and generator connector F6.

(+)		(-)	Voltage (Approx.)
Connector	Terminal		
F6	1	Battery positive terminal	Less than 0.2 V

Is the inspection result normal?

YES >> Terminal "B" circuit is normal. Refer to [CHG-13, "Work Flow \(With EXP-800 NI or GR8-1200 NI\)"](#) or [CHG-16, "Work Flow \(Without EXP-800 NI or GR8-1200 NI\)"](#).

NO >> Check harness between battery and generator for high resistance.

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (OPEN)

Diagnosis Procedure

INFOID:000000012196400

Regarding Wiring Diagram information. Refer to [CHG-9, "Wiring Diagram"](#).

1. CHECK "L" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "L" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "L" terminal connection. Confirm repair by performing complete charging system test using EXP-800 NI or GR8-1200 NI (if available). Refer to applicable instruction manual for proper testing procedures.

2. CHECK "L" TERMINAL CIRCUIT (OPEN)

1. Disconnect the generator connector F7.
2. Apply ground to generator harness connector terminal.
3. Check condition of the charge warning lamp with the ignition switch in the ON position.

Generator		Ground	Condition	
Connector	Terminal		Ignition switch position	Charge warning lamp
F7	2	ON	Illuminate	

Does it illuminate?

YES >> "L" terminal circuit is normal. Refer to [CHG-13, "Work Flow \(With EXP-800 NI or GR8-1200 NI\)"](#) or [CHG-16, "Work Flow \(Without EXP-800 NI or GR8-1200 NI\)"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the battery cable from the negative terminal.
2. Disconnect the combination meter connector M24.
3. Check continuity between generator harness connector F7 and combination meter harness connector M24.

Generator		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
F7	2	M24	11	Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the harness or connectors.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check continuity between combination meter harness connector M23 and fuse block (J/B) M5.

Combination meter		Fuse block (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
M23	44	M5	8P	Yes

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the harness or connectors.

5. CHECK POWER SUPPLY CIRCUIT

A
B
C
D
E
F
G
H
I
J
K
L

CHG

N
O
P

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

1. Connect the battery cable to the negative terminal.
2. Check voltage between combination meter harness connector M23 and ground.

(+) Combination meter		(-)	Condition	Voltage (Approx.)
Connector	Terminal			
M23	44	Ground	When the ignition switch is in ON position	Battery voltage

Is the inspection result normal?

- YES >> Replace the combination meter. Refer to [MWI-68. "Removal and Installation"](#).
- NO >> Repair or replace the harness or connectors.

L TERMINAL CIRCUIT (SHORT)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (SHORT)

Diagnosis Procedure

INFOID:000000012196401

Regarding Wiring Diagram information, refer to [CHG-9, "Wiring Diagram"](#).

1. CHECK "L" TERMINAL CIRCUIT (SHORT)

1. Turn ignition switch OFF.
2. Disconnect generator connector.
3. Turn ignition switch ON.

Does charge warning lamp illuminate?

YES >> GO TO 2.

NO >> Refer to [CHG-13, "Work Flow \(With EXP-800 NI or GR8-1200 NI\)"](#) or [CHG-16, "Work Flow \(Without EXP-800 NI or GR8-1200 NI\)"](#).

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Turn ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect combination meter connector M23.
4. Check continuity between the combination meter harness connector M23 and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M23	44		No

Is the inspection result normal?

YES >> Replace the combination meter. Refer to [MWI-68, "Removal and Installation"](#).

NO >> Repair or replace the harness or connectors.

A
B
C
D
E
F
G
H
I
J
K
L

CHG

N
O
P

S TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S TERMINAL CIRCUIT

Diagnosis Procedure

INFOID:000000012196402

Regarding Wiring Diagram information. Refer to [CHG-9, "Wiring Diagram"](#).

1. CHECK "S" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "S" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "S" terminal connection. Confirm repair by performing complete Charging system test using EXP-800 NI or GR8-1200 NI (if available). Refer to the applicable Instruction Manual for proper testing procedures.

2. CHECK "S" TERMINAL CIRCUIT

Check voltage between generator harness connector F7 and ground.

(+)		(-)	Voltage (Approx.)
Generator			
Connector	Terminal		
F7	3	Ground	Battery voltage

Is the inspection result normal?

YES >> Refer to [CHG-13, "Work Flow \(With EXP-800 NI or GR8-1200 NI\)"](#) or [CHG-16, "Work Flow \(Without EXP-800 NI or GR8-1200 NI\)"](#).

NO >> Check harness for open between generator and fuse.

CHARGING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

CHARGING SYSTEM

Symptom Table

INFOID:0000000011933719

Symptom	Reference
Battery discharged	Refer to CHG-13, "Work Flow (With EXP-800 NI or GR8-1200 NI)" or CHG-16, "Work Flow (Without EXP-800 NI or GR8-1200 NI)" .
The charge warning lamp does not illuminate when the ignition switch is set to ON.	
The charge warning lamp does not turn OFF after the engine starts.	
The charging warning lamp turns ON when increasing the engine speed.	

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG

GENERATOR


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

GENERATOR

Exploded View

INFOID:000000011933724

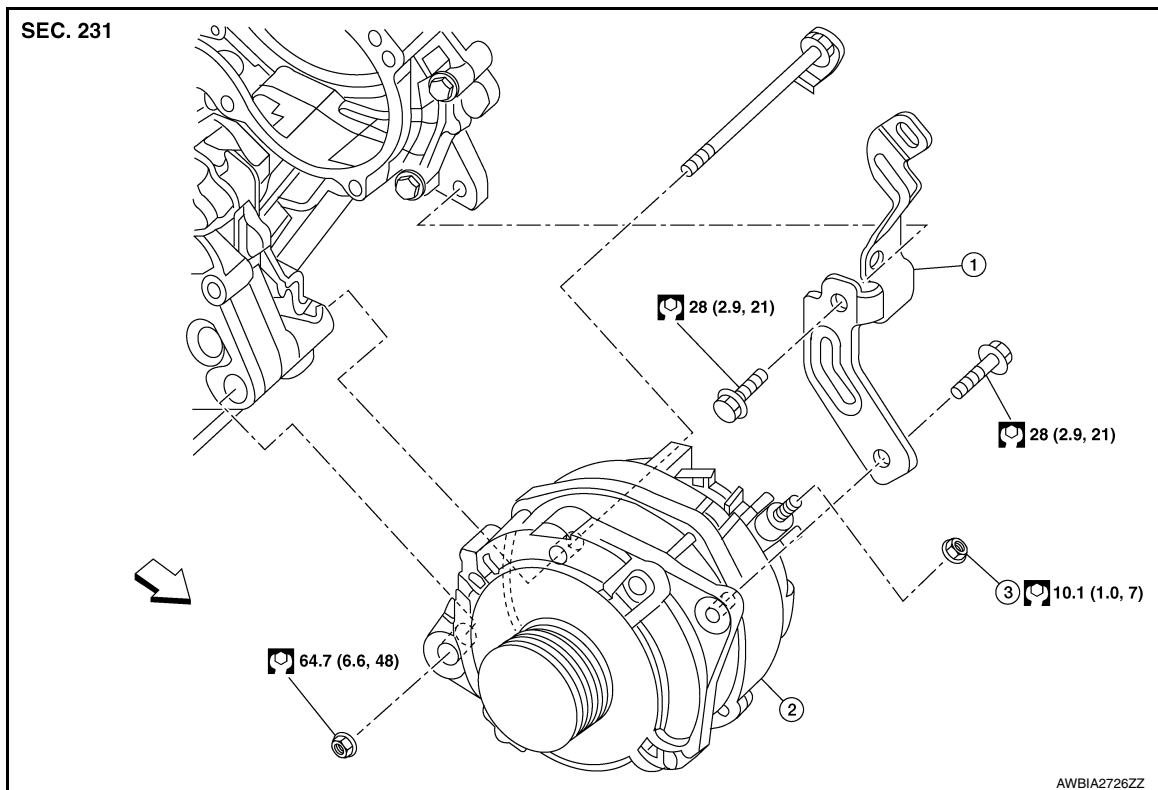

1. Generator bracket

2. Generator

3. "B" terminal nut

← Front

Removal and Installation


INFOID:000000011933725

REMOVAL

1. Remove the cooling fan assembly. Refer to [CO-16, "Removal and Installation"](#).
2. Remove the drive belt. Refer to [EM-16, "Removal and Installation"](#).
3. Remove the front undercover. Refer to [EXT-26, "Removal and Installation"](#).
4. Discharge the refrigerant. Refer to [HA-25, "Recycle Refrigerant"](#).
5. Disconnect the low-pressure flexible hose (1) from the compressor (2).

CAUTION:

Cap or wrap the joint with a suitable material to avoid entry of air.

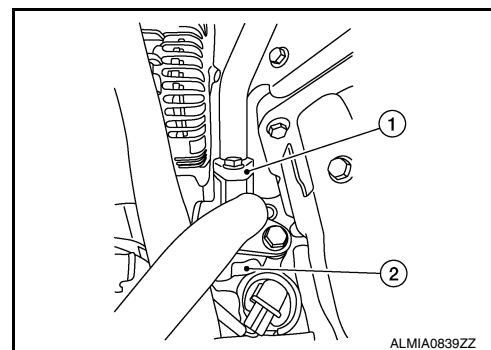

6. Remove the "B" terminal nut and disconnect the "B" terminal and generator harness bracket.
7. Remove the generator bolts and remove the generator bracket.

GENERATOR

< REMOVAL AND INSTALLATION >


8. Remove the generator nut and bolt and the remove generator.

INSTALLATION

Installation is in the reverse order of removal.

- Temporarily tighten bolts and nut, then finish tightening in the specified numerical order.

↶ : Front

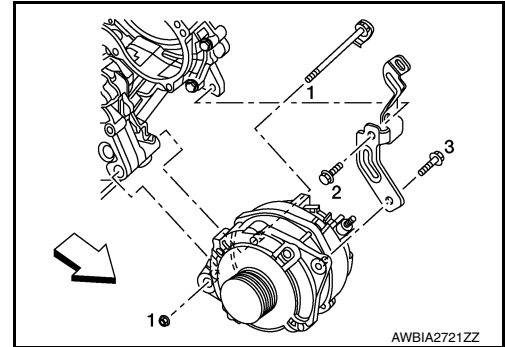

CAUTION:

Be sure to tighten "B" terminal nut carefully.

"B" terminal nut : 10.1 N·m (1.0 kg-m, 7 ft-lb)

- Install generator and check tension of belt. Refer to [EM-16, "Checking Drive Belt"](#).
- For this model, the power generation voltage variable control system that controls the power generation voltage of the generator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the generator, and then make sure that the system operates normally. Refer to [CHG-20, "Diagnosis Procedure"](#).
- Recharge A/C refrigerant. Refer to [HA-25, "Charge Refrigerant"](#).

CAUTION:

Apply A/C oil to the O-ring of the low-pressure flexible hose for installation.

Inspection

INFOID:000000011933726

GENERATOR PULLEY INSPECTION

Perform the following:

- Make sure that generator pulley does not rattle.
- Make sure that generator pulley nut is tight.

NOTE:

Replace the generator as an assembly if necessary.

CHG

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Generator

INFOID:0000000011933727

Application	VQ35DE
Type*	A003TJ3691ZC
	Mitsubishi
Nominal rating	12V-130A
Ground polarity	Negative
Minimum revolution under no-load	1,000 rpm
Hot output current (when 13.5 volts are applied)	More than 108A/2,500 rpm More than 124A/5,000 rpm
Regulated output voltage	14.1 - 14.7 V
Adjustment range of power generation voltage variable control	11.4 – 15.6 V

*: Always check with the Parts Department for the latest parts information.