

SECTION **LT**
LIGHTING SYSTEM

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 LT
 L
 M

CONTENTS

PRECAUTIONS	5	Sides)	25
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5	Headlamp Low Beam Does Not Illuminate (One Side)	28
General Precautions For Service Operations	5	Headlamp RH Low Beam and High Beam Does Not Illuminate	29
HEADLAMP - XENON TYPE -	6	Headlamp LH Low Beam and High Beam Does Not Illuminate	30
Component Parts and Harness Connector Location...	6	Headlamps Do Not Turn OFF	31
System Description	6	General Information for Xenon Headlamp Trouble Diagnosis	33
OUTLINE	6	Caution:	33
HEADLAMP OPERATION	7	Xenon Headlamp Trouble Diagnosis	33
COMBINATION SWITCH READING FUNCTION...	8	Aiming Adjustment	34
EXTERIOR LAMP BATTERY SAVER CONTROL...	8	PREPARATION BEFORE ADJUSTING	34
AUTO LIGHT OPERATION	8	LOW BEAM AND HIGH BEAM	34
VEHICLE SECURITY SYSTEM	8	ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)	35
XENON HEADLAMP	8	Bulb Replacement	36
CAN Communication System Description	8	HEADLAMP HIGH/LOW BEAM	36
CAN Communication Unit	8	PARKING LAMP (CLEARANCE LAMP)	36
Schematic	9	FRONT TURN SIGNAL LAMP	36
Wiring Diagram — H/LAMP —	10	FRONT SIDE MARKER LAMP	36
Terminals and Reference Values for BCM	14	Removal and Installation	37
Terminals and Reference Values for IPDM E/R	15	REMOVAL	37
How to Proceed With Trouble Diagnosis	15	INSTALLATION	37
Preliminary Check	16	Disassembly and Assembly	37
CHECK POWER SUPPLY AND GROUND CIRCUIT	16	DISASSEMBLY	37
CONSULT-II Functions (BCM)	17	ASSEMBLY	38
CONSULT-II BASIC OPERATION	17	HEADLAMP - CONVENTIONAL TYPE-	39
WORK SUPPORT	18	Component Parts and Harness Connector Location..	39
DATA MONITOR	18	System Description	39
ACTIVE TEST	19	OUTLINE	39
CONSULT-II Functions (IPDM E/R)	20	HEADLAMP OPERATION	40
CONSULT-II BASIC OPERATION	20	COMBINATION SWITCH READING FUNCTION..	41
DATA MONITOR	21	EXTERIOR LAMP BATTERY SAVER CONTROL..	41
ACTIVE TEST	21	AUTO LIGHT OPERATION	41
Headlamp Does Not Change To High Beam (Both Sides)	22	VEHICLE SECURITY SYSTEM	41
Headlamp Does Not Change To High Beam (One Side)	24	CAN Communication System Description	41
High Beam Indicator Lamp Does Not Illuminate ...	25	CAN Communication Unit	41
Headlamp Low Beam Does Not Illuminate (Both		Schematic	42

Wiring Diagram — H/LAMP —	43	Terminals and Reference Values for IPDM E/R	77
Terminals and Reference Values for BCM	47	How to Proceed With Trouble Diagnosis	77
Terminals and Reference Values for IPDM E/R	48	Preliminary Check	78
How to Proceed With Trouble Diagnosis	48	CHECK POWER SUPPLY AND GROUND CIR-	
Preliminary Check	49	CUIT	78
CHECK POWER SUPPLY AND GROUND CIR-		CHECK PARKING BRAKE SWITCH CIRCUIT ...	79
CUIT	49	CONSULT-II Functions (BCM)	80
CONSULT-II Functions (BCM)	50	CONSULT-II BASIC OPERATION	80
CONSULT-II BASIC OPERATION	50	WORK SUPPORT	81
WORK SUPPORT	51	DATA MONITOR	81
DATA MONITOR	51	ACTIVE TEST	82
ACTIVE TEST	52	CONSULT-II Functions (IPDM E/R)	83
CONSULT-II Functions (IPDM E/R)	53	CONSULT-II BASIC OPERATION	83
CONSULT-II BASIC OPERATION	53	DATA MONITOR	84
DATA MONITOR	54	ACTIVE TEST	84
ACTIVE TEST	54	Daytime Light Control Does Not Operate Properly...	85
Headlamp High Beam Does Not Illuminate (Both		Front Fog Lamp Does Not Illuminate (One Side) ...	86
Side)	55	Aiming Adjustment	87
Headlamp High Beam Does Not Illuminate (One		Bulb Replacement	87
Side)	57	Removal and Installation	87
High Beam Indicator Lamp Does Not Illuminate ...	58	AUTO LIGHT SYSTEM	88
Headlamp Low Beam Does Not Illuminate (Both		Component Parts and Harness Connector Location..	88
Sides)	58	System Description	88
Headlamp Low Beam Does Not Illuminate (One		OUTLINE	88
Side)	61	COMBINATION SWITCH READING FUNCTION..	89
Headlamp RH Low Beam and High Beam Do Not		EXTERIOR LAMP BATTERY SAVER CONTROL..	89
Illuminate	62	DELAY TIMER FUNCTION	89
Headlamp LH Low Beam and High Beam Do Not		CAN Communication System Description	89
Illuminate	63	CAN Communication Unit	89
Headlamps Do Not Turn OFF	64	Major Components and Functions	89
Aiming Adjustment	65	Schematic	90
PREPARATION BEFORE ADJUSTING	65	Wiring Diagram — AUTO/L —	91
LOW BEAM AND HIGH BEAM	65	Terminals and Reference Values for BCM	94
ADJUSTMENT USING AN ADJUSTMENT		Terminals and Reference Values for IPDM E/R	95
SCREEN (LIGHT/DARK BORDERLINE)	66	How to Proceed With Trouble Diagnosis	96
Bulb Replacement	66	Preliminary Check	96
HEADLAMP HIGH/LOW BEAM	66	SETTING CHANGE FUNCTIONS	96
PARKING LAMP (CLEARANCE LAMP)	67	CHECK POWER SUPPLY AND GROUND CIR-	
FRONT TURN SIGNAL LAMP	67	CUIT	96
FRONT SIDE MARKER LAMP	67	CONSULT-II Functions (BCM)	98
Removal and Installation	67	CONSULT-II BASIC OPERATION	98
REMOVAL	67	WORK SUPPORT	99
INSTALLATION	67	DATA MONITOR	99
Disassembly and Assembly	68	ACTIVE TEST	100
DISASSEMBLY	68	CONSULT-II Functions (IPDM E/R)	101
ASSEMBLY	68	CONSULT-II BASIC OPERATION	101
DAYTIME LIGHT SYSTEM	69	DATA MONITOR	102
Component Parts and Harness Connector Location..	69	ACTIVE TEST	102
System Description	69	Symptom Chart	103
OUTLINE	69	Lighting Switch Inspection	103
DAYTIME LIGHT OPERATION	70	Optical Sensor System Inspection	104
COMBINATION SWITCH READING FUNCTION..	70	Removal and Installation of Optical Sensor	106
EXTERIOR LAMP BATTERY SAVER CONTROL..	70	REMOVAL	106
AUTO LIGHT OPERATION	71	INSTALLATION	106
CAN Communication System Description	71	HEADLAMP AIMING CONTROL	107
CAN Communication Unit	71	Wiring Diagram — H/AIM —	107
Schematic	72	Removal and Installation	109
Wiring Diagram — DTRL —	73	REMOVAL	109
Terminals and Reference Values for BCM	76		

INSTALLATION	109	LIGHTING AND TURN SIGNAL SWITCH	140	
Switch Circuit Inspection (Xenon type)	109	Removal and Installation	140	A
FRONT FOG LAMP	110	REMOVAL	140	
Component Parts and Harness Connector Location	110	INSTALLATION	140	B
System Description	110	HAZARD SWITCH	141	
OUTLINE	110	Removal and Installation	141	
FOG LAMP OPERATION	111	REMOVAL	141	
COMBINATION SWITCH READING FUNCTION	111	INSTALLATION	141	C
EXTERIOR LAMP BATTERY SAVER CONTROL	111	COMBINATION SWITCH	142	
CAN Communication System Description	111	Wiring Diagram — COMBSW —	142	
CAN Communication Unit	111	Combination Switch Reading Function	143	D
Wiring Diagram — F/FOG —	112	CONSULT-II Functions (BCM)	143	
Terminals and Reference Values for BCM	114	CONSULT-II BASIC OPERATION	143	
Terminals and Reference Values for IPDM E/R	115	DATA MONITOR	144	E
How to Proceed With Trouble Diagnosis	115	Combination Switch Inspection	145	
Preliminary Check	116	Removal and Installation	147	
CHECK POWER SUPPLY AND GROUND CIR- CUIT	116	STOP LAMP	148	F
CONSULT-II Functions (BCM)	117	Wiring Diagram — STOP/L —	148	
CONSULT-II Functions (IPDM E/R)	117	High-Mounted Stop Lamp	149	
Front Fog Lamps Do Not Illuminate (Both Sides)	117	BULB REPLACEMENT, REMOVAL AND INSTALLATION	149	G
Front Fog Lamp Does Not Illuminate (One Side)	119	Stop Lamp	149	
Aiming Adjustment	121	BULB REPLACEMENT	149	
Bulb Replacement	122	REMOVAL AND INSTALLATION	149	
Removal and Installation	122	STEP LAMP	150	H
REMOVAL	122	Bulb Replacement	150	
INSTALLATION	122	Removal and Installation	150	
TURN SIGNAL AND HAZARD WARNING LAMPS 123		REMOVAL	150	I
Component Parts and Harness Connector Location	123	INSTALLATION	150	
System Description	123	BACK-UP LAMP	151	J
TURN SIGNAL OPERATION	123	Wiring Diagram — BACK/L —	151	
HAZARD LAMP OPERATION	124	Bulb Replacement	152	
REMOTE CONTROL ENTRY SYSTEM OPER- ATION	125	Removal and Installation	152	
COMBINATION SWITCH READING FUNCTION	126	REMOVAL	152	
CAN Communication System Description	126	INSTALLATION	152	LT
CAN Communication Unit	126	PARKING, LICENSE PLATE AND TAIL LAMPS .. 153		
Schematic	127	Component Parts and Harness Connector Location	153	L
Wiring Diagram — TURN —	128	System Description	153	
Terminals and Reference Value for BCM	131	OPERATION BY LIGHTING SWITCH	154	
How to Proceed With Trouble Diagnosis	132	COMBINATION SWITCH READING FUNCTION	154	
Preliminary Check	133	EXTERIOR LAMP BATTERY SAVER CONTROL	154	M
CHECK POWER SUPPLY AND GROUND CIR- CUIT	133	CAN Communication System Description	154	
CONSULT-II Functions (BCM)	134	CAN Communication Unit	155	
CONSULT-II BASIC OPERATION	134	Schematic	156	
DATA MONITOR	135	Wiring Diagram — TAIL/L —	157	
ACTIVE TEST	135	Terminals and Reference Values for BCM	161	
Turn Signal Lamp Does Not Operate	135	Terminals and Reference Values for IPDM E/R	162	
Hazard Warning Lamp Does Not Operate But Turn Signal Lamp Operate	137	How to Proceed With Trouble Diagnosis	162	
Turn Signal Indicator Lamp Does Not Operate	138	Preliminary Check	163	
Bulb Replacement (Front Turn Signal Lamp)	139	CHECK POWER SUPPLY AND GROUND CIR- CUIT	163	
Bulb Replacement (Rear Turn Signal Lamp)	139	CONSULT-II Functions (BCM)	164	
Removal and Installation of Front Turn Signal Lamp	139	CONSULT-II Functions (IPDM E/R)	164	
Removal and Installation of Rear Turn Signal Lamp	139	Parking, License Plate and Tail Lamps Do Not Illu- minate	164	
		Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)	168	
		Bulb Replacement	169	
		LICENSE PLATE LAMP	169	

PARKING LAMP (CLEARANCE LAMP)	169	CIRCUIT	197
TAIL LAMP	169	CONSULT-II Functions (BCM)	198
FRONT SIDE MARKER LAMP	169	CONSULT-II BASIC OPERATION	198
REAR SIDE MARKER LAMP	169	WORK SUPPORT	199
Removal and Installation	169	DATA MONITOR	199
LICENSE PLATE LAMP	169	ACTIVE TEST	200
PARKING LAMP (CLEARANCE LAMP)	169	Room Lamp Does Not Illuminate	200
TAIL LAMP	169	Personal Lamp Does Not Illuminate	202
FRONT SIDE MARKER LAMP	169	Ignition Key Hole Illumination Does Not Illuminate	204
REAR SIDE MARKER LAMP	169	Step Lamp Does Not Illuminate	205
REAR COMBINATION LAMP	170	All Interior Room Lamp Does Not Operate	207
Bulb Replacement	170	Bulb Replacement	207
STOP & TAIL LAMP BULB, REAR SIDE MARKER		ROOM LAMP	207
LAMP BULB, REAR TURN SIGNAL LAMP BULB	170	MAP LAMP	207
Removal and Installation	170	PERSONAL LAMP	207
REMOVAL	170	STEP LAMP	207
INSTALLATION	170	LUGGAGE ROOM LAMP	207
VANITY MIRROR LAMP	171	Removal and Installation	208
Bulb Replacement	171	ROOM LAMP	208
MAP LAMP	172	MAP LAMP	208
Bulb Replacement	172	PERSONAL LAMP	208
Removal and Installation	172	STEP LAMP	208
REMOVAL	172	LUGGAGE ROOM LAMP	208
INSTALLATION	172	IGNITION KEY HOLE ILLUMINATION	208
PERSONAL LAMP	173	ILLUMINATION	209
Bulb Replacement, Removal and Installation	173	System Description	209
LUGGAGE ROOM LAMP	174	ILLUMINATION OPERATION BY LIGHTING	
Bulb Replacement, Removal and Installation	174	SWITCH	209
INTERIOR ROOM LAMP	175	EXTERIOR LAMP BATTERY SAVER CONTROL	210
Component Parts and Harness Connector Location	175	CAN Communication System Description	210
System Description	175	CAN Communication Unit	210
POWER SUPPLY AND GROUND	176	Schematic	211
SWITCH OPERATION	177	Wiring Diagram — ILL —	212
ROOM LAMP TIMER OPERATION	178	Removal and Installation	218
INTERIOR LAMP BATTERY SAVER CONTROL	179	ILLUMINATION CONTROL SWITCH	218
Schematic	180	CONSOLE POCKET LAMP	218
Wiring Diagram — ROOM/L —	182	GLOVE BOX LAMP	218
WITH INTELLIGENT KEY	182	COIN BOX ILLUMINATION	218
WITHOUT INTELLIGENT KEY	189	BULB SPECIFICATIONS	219
Terminals and Reference Values for BCM	196	Headlamp	219
How to Proceed With Trouble Diagnosis	196	Exterior Lamp	219
Preliminary Check	197	Interior Lamp/Illumination	219
CHECK FOR POWER SUPPLY AND GROUND			

PRECAUTIONS

PRECAUTIONS

PF0:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

AKS004/3

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.



WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

General Precautions For Service Operations

AKS004/5

- Never work with wet hands.
- Xenon headlamp includes high voltage generating part. Be sure to disconnect battery negative cable (negative terminal) or power fuse before removing, installing, or touching the xenon headlamp (including lamp bulb).
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When turning the xenon headlamp on and while it is illuminated, never touch the harness, bulb, and socket of the headlamp.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- Install the xenon headlamp bulb socket correctly. If it is installed improperly, high-voltage leak or corona discharge may occur that can melt the bulb, connector, and housing. Do not illuminate the xenon headlamp bulb out of the headlamp housing. Doing so can cause fire and harm your eyes.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- When adjusting the headlamp aiming, turn the aiming adjustment screw only in the tightening direction. (If it is necessary to loosen the screw, first fully loosen the screw, and then turn it in the tightening direction.)
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.

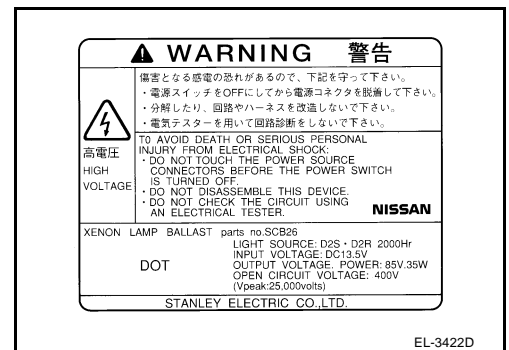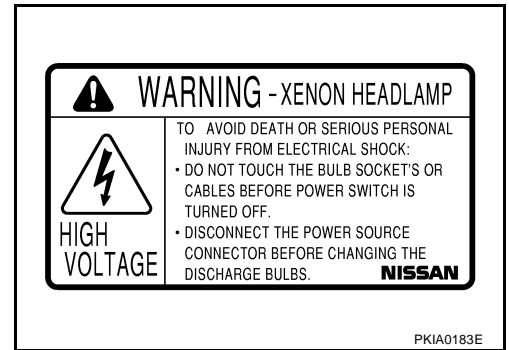


HEADLAMP - XENON TYPE -

HEADLAMP - XENON TYPE -

PFP:26010

Component Parts and Harness Connector Location

AKS007KW

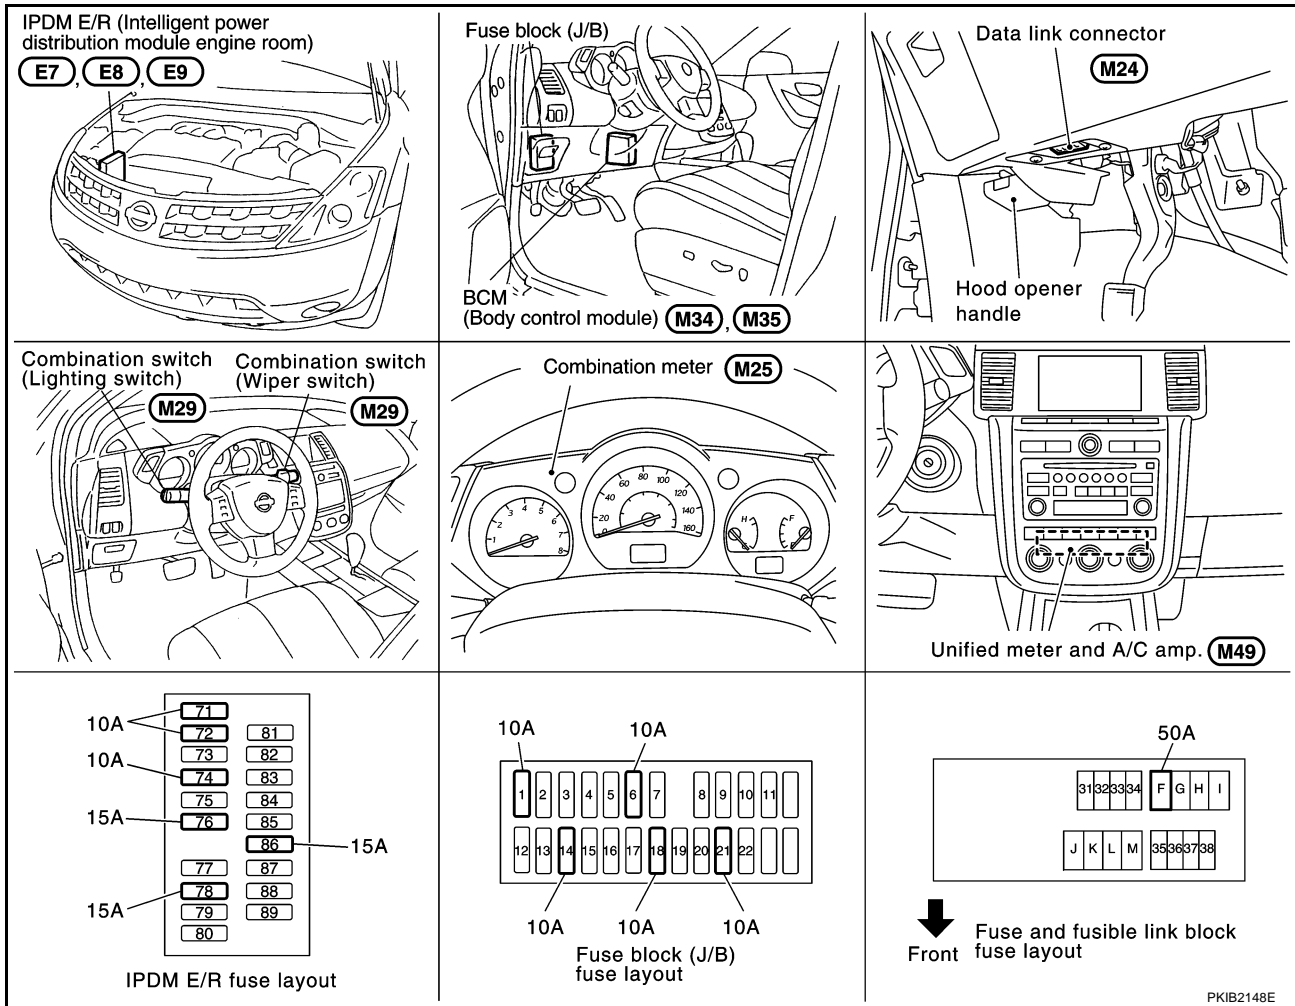

System Description

AKS007KX

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input signal requesting the headlamps (and tail lamps) illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) located in the IPDM E/R controls the headlamp high and headlamp low relay coils. These relays, when energized, direct power to the respective headlamps, which then illuminate.

If voltage is applied to a high beam solenoid, the bulb shade will move, even a xenon headlamp bulb comes out, and a high beam and a low beam are changed.

OUTLINE

Power is supplied at all times

- to ignition relay, located in IPDM E/R,
- to headlamp high relay located in IPDM E/R, and
- to headlamp low relay located in IPDM E/R, from battery direct,
- through 50A fusible link (letter F, located in fuse and fusible link block)
- to BCM terminal 55,
- through 10A fuse [No. 18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 15A fuse (No. 78, located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 10A fuse (No. 71, located in IPDM E/R)

HEADLAMP - XENON TYPE -

- to CPU located in IPDM E/R,
- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to combination meter terminal 21.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in IPDM E/R, from battery direct,
- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38,
- through 10A fuse [No. 14 located in fuse block (J/B)]
- to combination meter terminal 20.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds E13, E26 and E28,
- to IPDM E/R terminals 38 and 60
- through grounds E13, E26 and E28,
- to combination meter terminals 22, 23 and 24
- through grounds M14 and M78.

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input signal requesting the headlamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU located in the IPDM E/R controls the headlamp low relay coil, which when energized, directs power

- through 15A fuse (No. 76, located in IPDM E/R)
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 4,
- through 15A fuse (No. 86, located in IPDM E/R)
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 4.

Ground is supplied

- to front combination lamp RH terminal 5
- through grounds E13, E26 and E28,
- to front combination lamp LH terminal 5
- through grounds E13, E26 and E28.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input signal requesting the headlamp high beams to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU located in the IPDM E/R controls the headlamp high relay coil and low relay coil, which when energized, directs power

- through 15A fuse (No. 76, located in IPDM E/R)
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 4,
- through 15A fuse (No. 86, located in IPDM E/R)
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 4,
- through 10A fuse (No. 72, located in the IPDM E/R)
- through IPDM E/R terminal 27

A

B

C

D

E

F

G

H

I

J

LT

L

M

HEADLAMP - XENON TYPE -

- to front combination lamp RH terminal 1,
- through 10A fuse (No. 74, located in the IPDM E/R)
- through IPDM E/R terminal 28
- to front combination lamp LH terminal 1.

Ground is supplied

- to front combination lamp RH terminal 5
- through grounds E13, E26 and E28,
- to front combination lamp LH terminal 5
- through grounds E13, E26 and E28.

With power and ground supplied, the high beam headlamps illuminate.

If voltage is applied to a high beam solenoid, the bulb shade will move, even a xenon headlamp bulb comes out, and a high beam and a low beam are changed.

The unified meter and A/C amp that received the high beam request signal by BCM across the CAN communication makes a high beam indicator lamp turn on in combination meter.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, and then the headlamps are turned off. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

AUTO LIGHT OPERATION

Refer to [LT-88, "System Description"](#) in "AUTO LIGHT SYSTEM".

VEHICLE SECURITY SYSTEM

The vehicle security system will flash the high beams if the system is triggered. Refer to [BL-205, "VEHICLE SECURITY \(THEFT WARNING\) SYSTEM"](#) .

XENON HEADLAMP

Xenon type lamps are used for to the low beam headlamps. Xenon bulbs do not use a filament. Instead, they produce light when a high voltage current is passed between two tungsten electrodes through a mixture of xenon (an inert gas) and certain other metal halides. In addition to strong lighting power, electronic control of the power supply gives the headlamps stable quality and tone color.

Followings are some advantages of the xenon type headlamp.

- The light produced by the headlamps is white color similar to sunlight that is easy to the eyes.
- Light output is nearly double that of halogen headlamps, affording increased area of illumination.
- Counter-reflected luminance increases and the contrast enhances on the wet road in the rain. That makes visibility go up more than the increase of the light volume.
- Power consumption is approximately 25 percent less than halogen headlamps, reducing battery load.

CAN Communication System Description

AKS007KY

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS007QL


Refer to [LAN-29, "CAN Communication Unit"](#) .

HEADLAMP - XENON TYPE -

Schematic

AKS007L0

A
B
C
D
E
F
G
H
I
J
LT
L
M

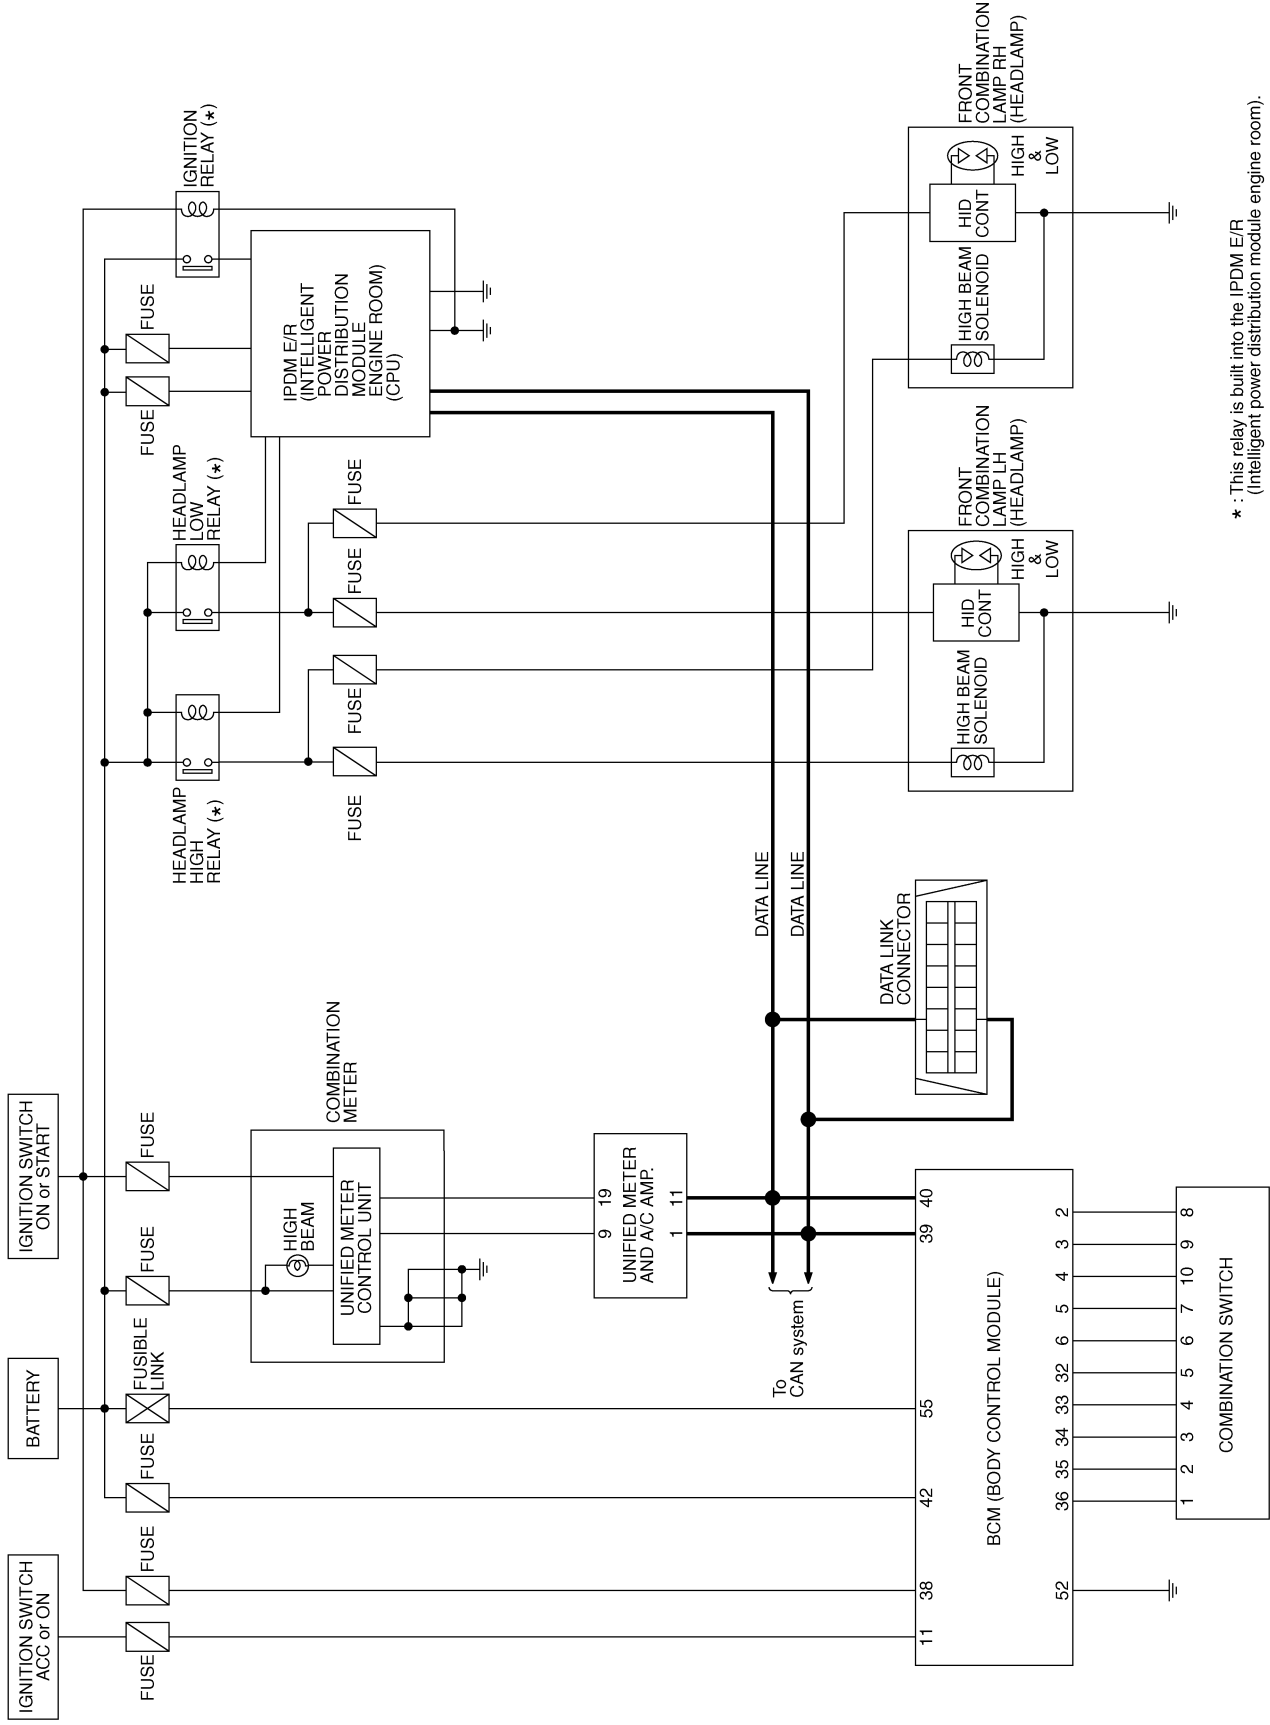

* : This relay is built into the IPDM E/R (Intelligent power distribution module engine room).

TKWB0440E





HEADLAMP - XENON TYPE -

AKS007L1

Wiring Diagram — H/LAMP —

LT-H/LAMP-01

▬ : DATA LINE

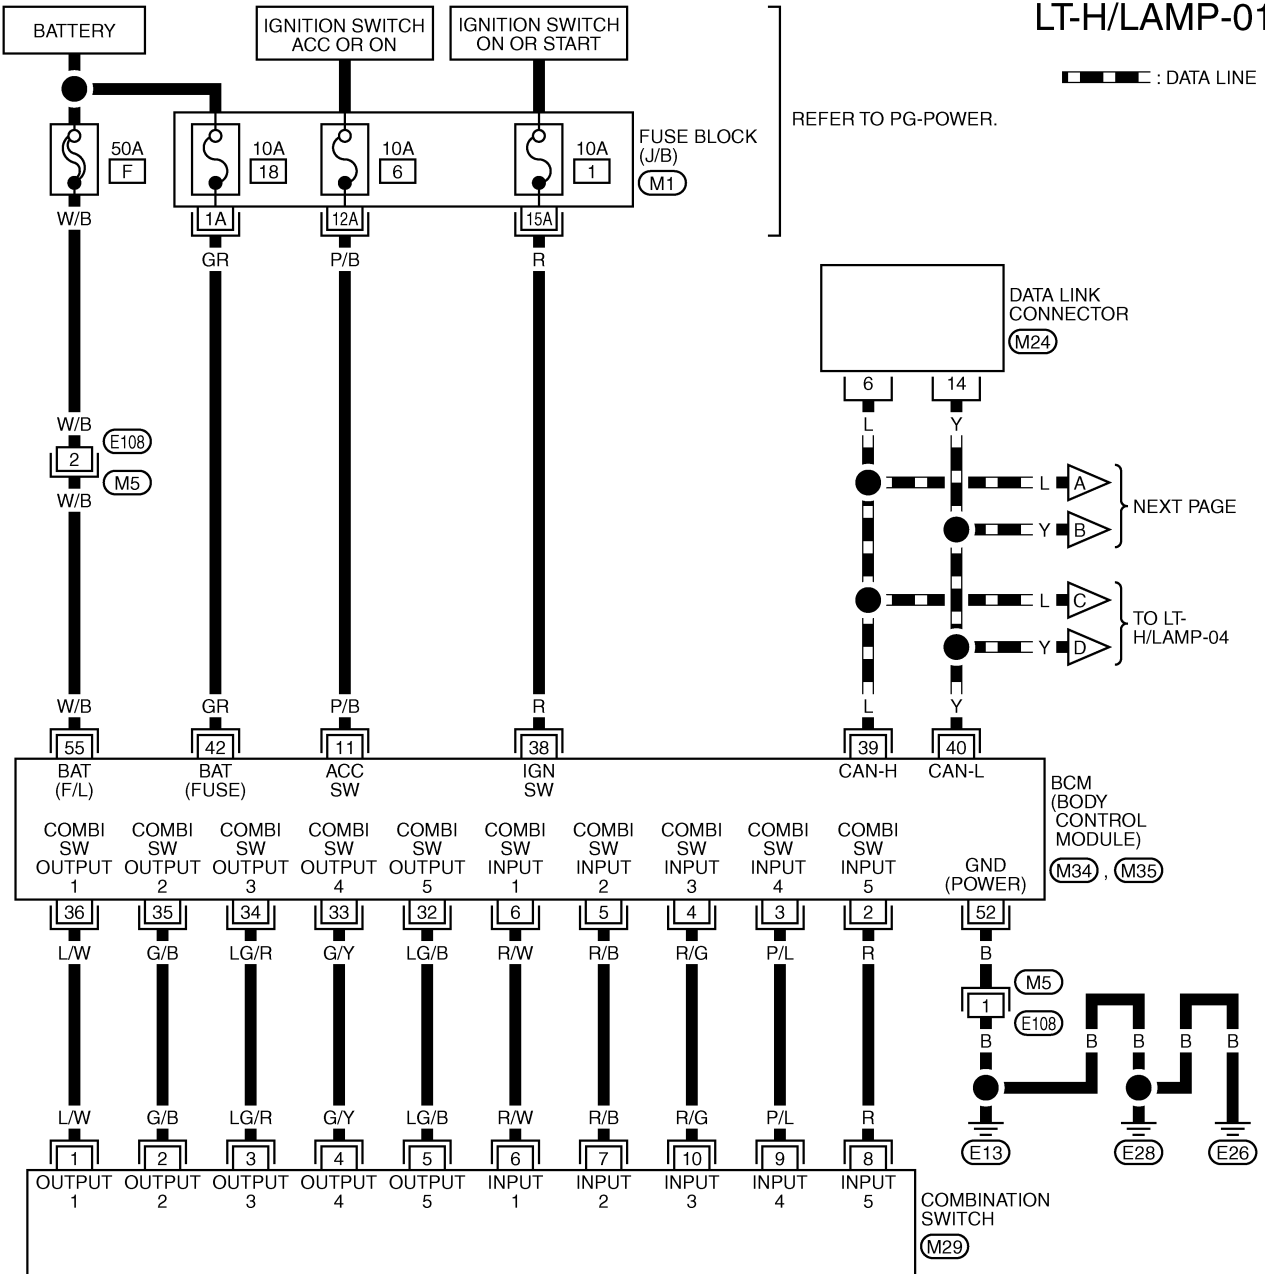

REFER TO THE FOLLOWING.


(M1) - FUSE BLOCK-JUNCTION BOX (J/B)

(M34), (M35) - ELECTRICAL UNITS



TKWB0441E

HEADLAMP - XENON TYPE -

LT-H/LAMP-02

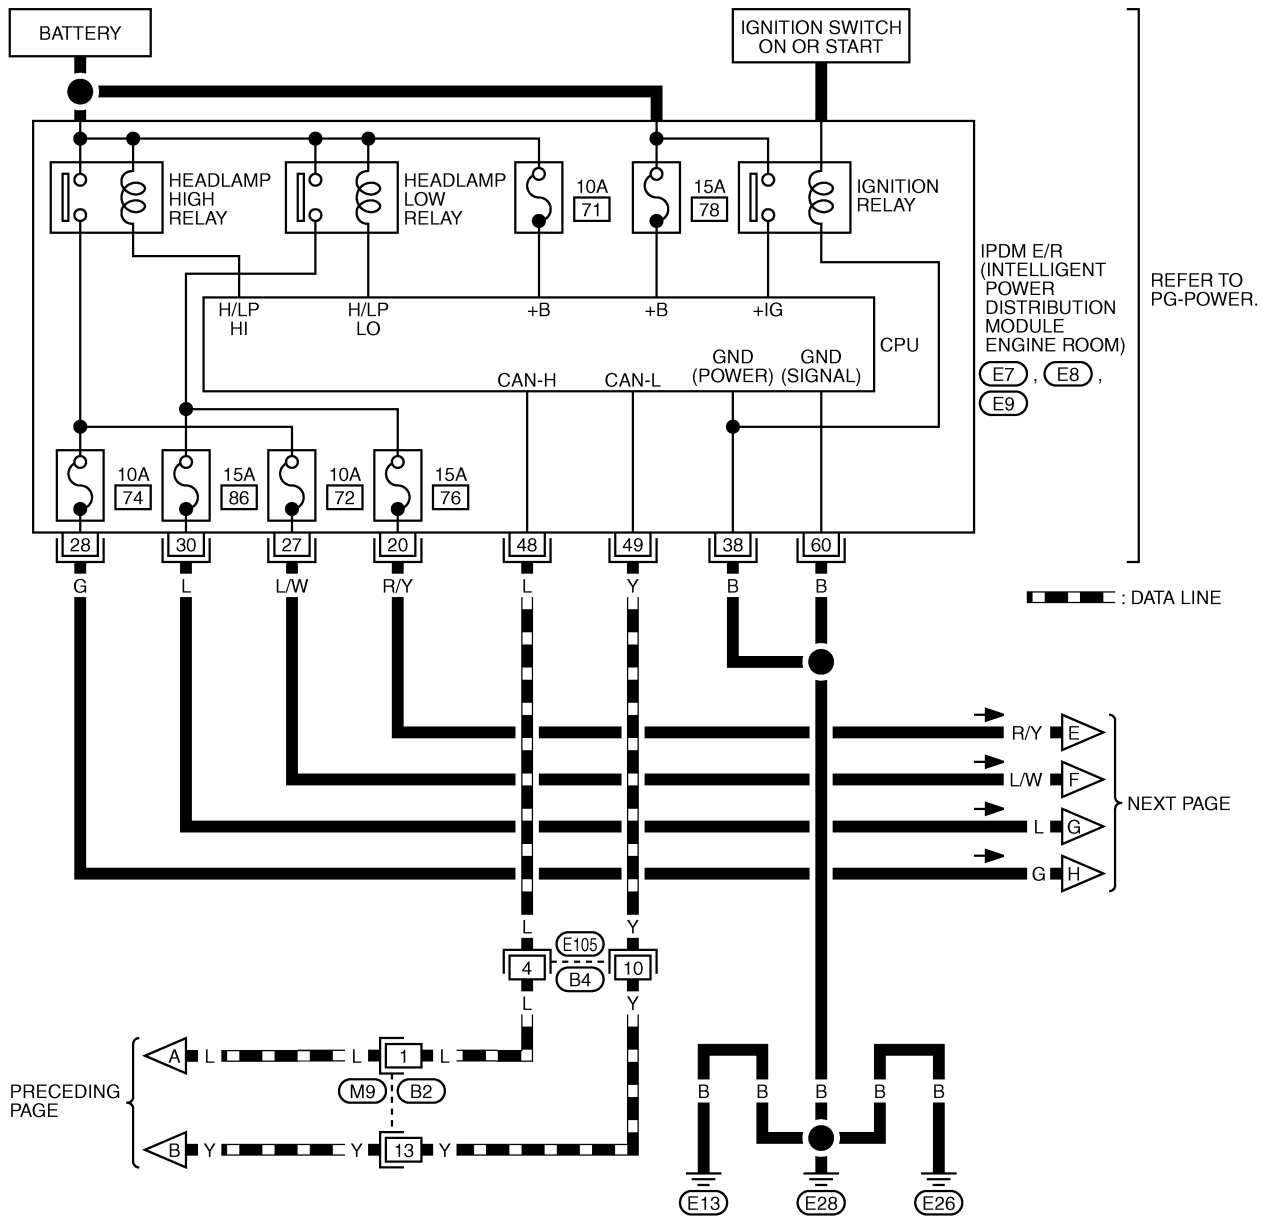



A
B
C
D
E
F
G
H
I
J
LT
L
M



TKWB0442E

HEADLAMP - XENON TYPE -

LT-H/LAMP-03



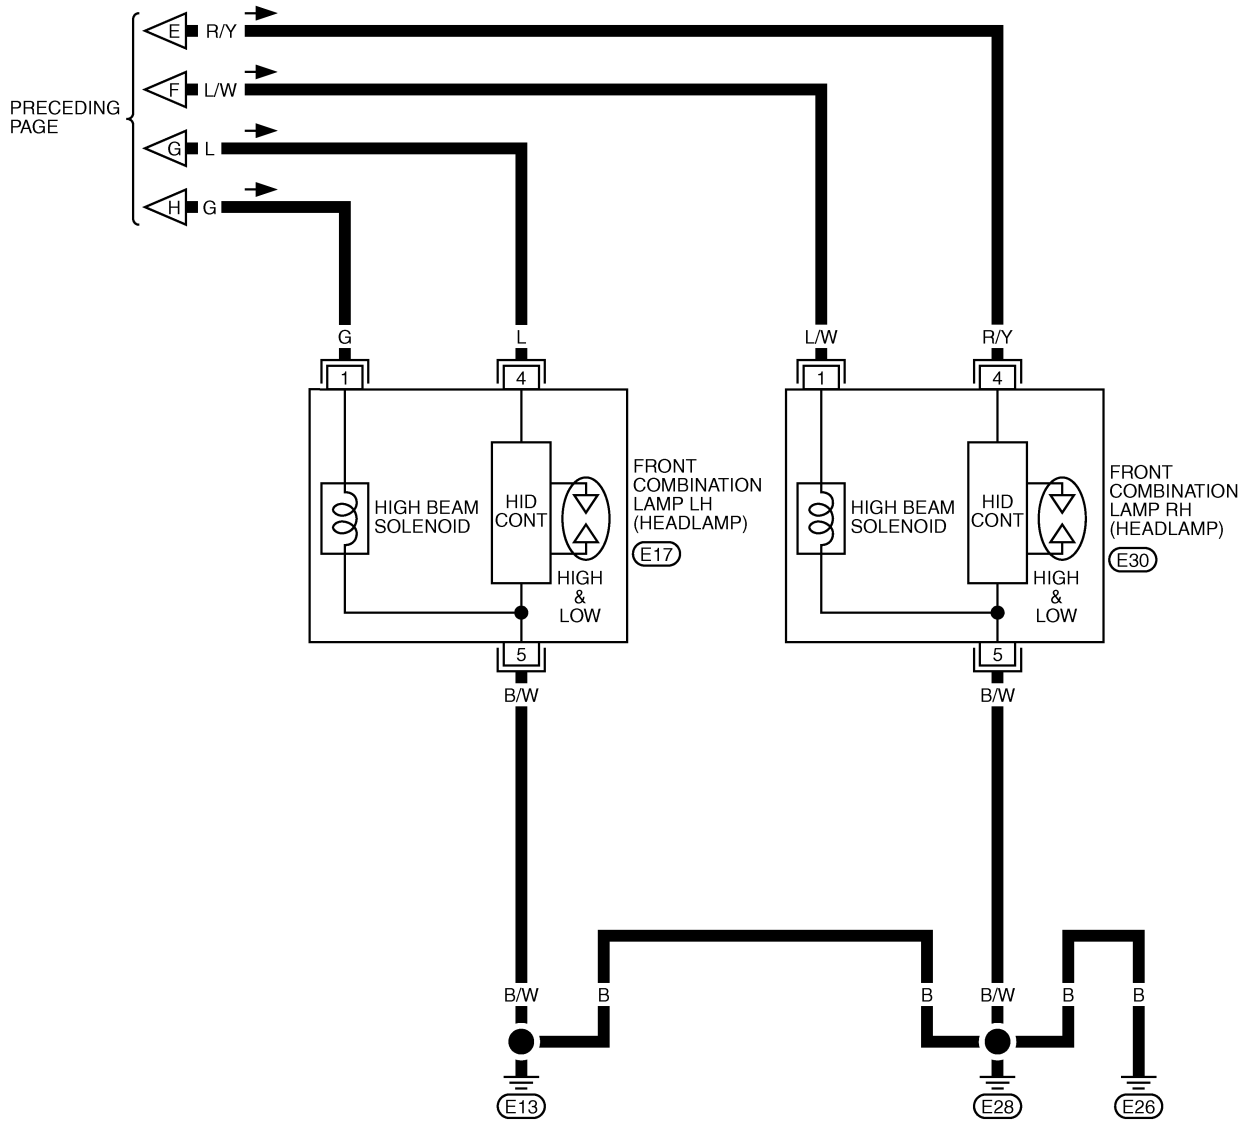


TKWA0740E

HEADLAMP - XENON TYPE -

LT-H/LAMP-04

▬ : DATA LINE

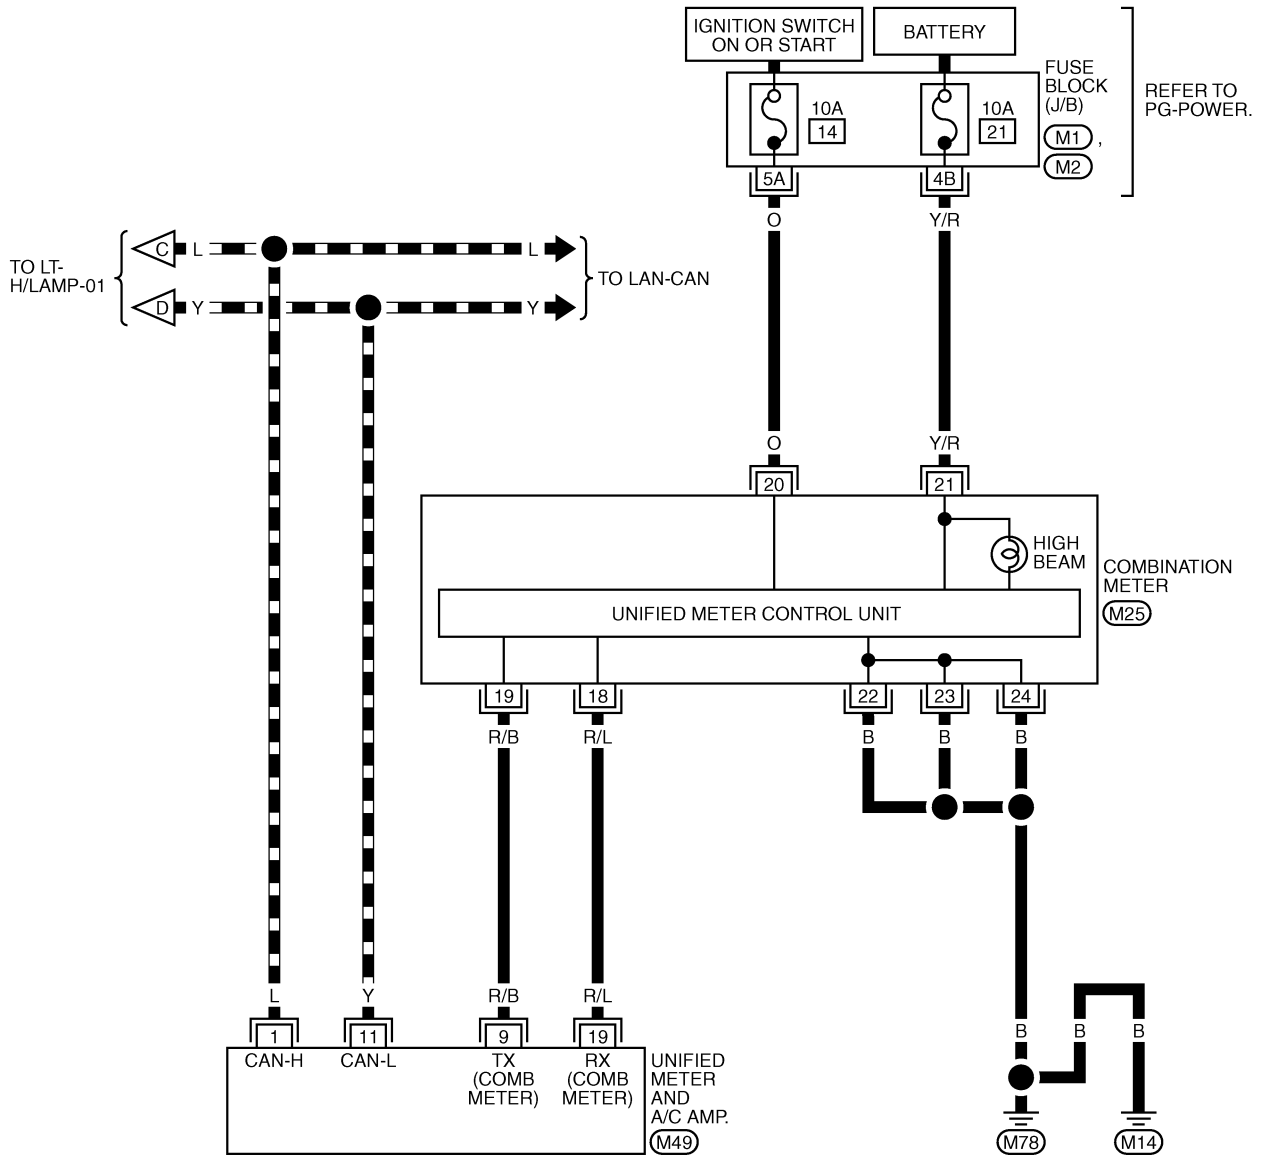





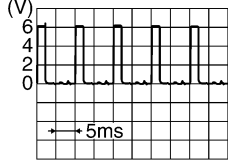
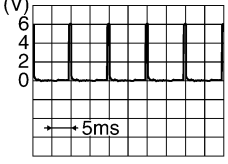
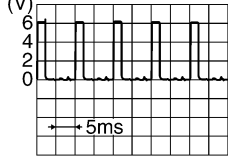
REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)

TKWA0741E

HEADLAMP - XENON TYPE -

Terminals and Reference Values for BCM

AKS00AJQ

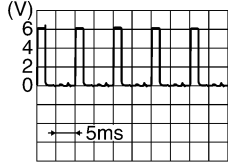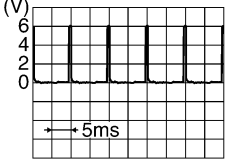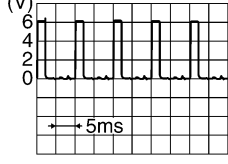Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
2	R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	P/L	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	R/G	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	R/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	R/W	Combination switch input 1			
11	P/B	Ignition switch (ACC)	ACC	—	Battery voltage
32	LG/B	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	G/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	LG/R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

HEADLAMP - XENON TYPE -

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
35	G/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	L/W	Combination switch output 1			
38	R	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN - H	—	—	—
40	Y	CAN - L	—	—	—
42	GR	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0V
55	W/B	Battery power supply	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

AKS00AJR

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
20	R/Y	Headlamp HIGH & LOW (RH)	ON	Lighting switch 2ND position	OFF	Approx. 0V
					ON	Battery voltage
27	L/W	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0V
					ON	Battery voltage
28	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0V
					ON	Battery voltage
30	L	Headlamp HIGH & LOW (LH)	ON	Lighting switch 2ND position	OFF	Approx. 0V
					ON	Battery voltage
38	B	Ground	ON	—	Approx. 0V	
48	L	CAN - H	—	—	—	
49	Y	CAN - L	—	—	—	
60	B	Ground	ON	—	Approx. 0V	

How to Proceed With Trouble Diagnosis

AKS00AJS

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-6, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-16, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

HEADLAMP - XENON TYPE -

AKS00AJT

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown fuses.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	72
		74
		76
		86

Refer to [LT-10, "Wiring Diagram — H/LAMP —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-3, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

Terminal (+)		Terminal (-)	Ignition switch position		
Connector	Terminal (Wire color)		OFF	ACC	ON
M34	11 (P/B)	Ground	Approx. 0V	Battery voltage	Battery voltage
	38 (R)		Approx. 0V	Approx. 0V	Battery voltage
M35	42 (GR)		Battery voltage	Battery voltage	Battery voltage
	55 (W/B)		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

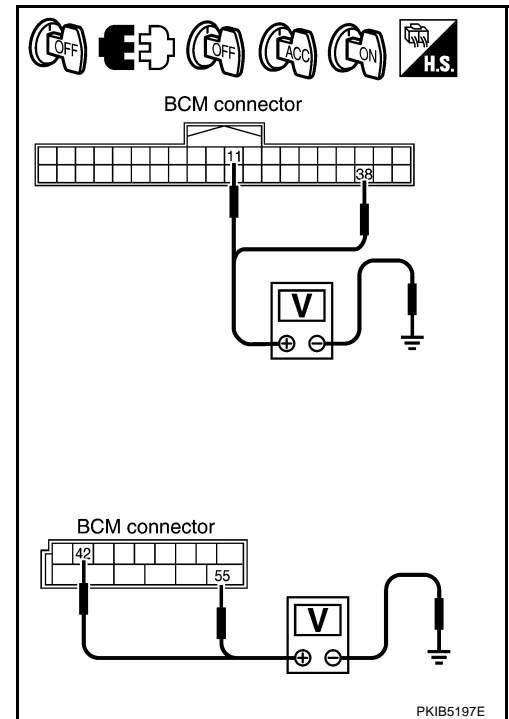

HEADLAMP - XENON TYPE -


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

Terminal		Ground	Continuity
Connector	Terminal (Wire color)		
M35	52 (B)		Yes

OK or NG

- OK >> INSPECTION END
- NG >> Check ground circuit harness.

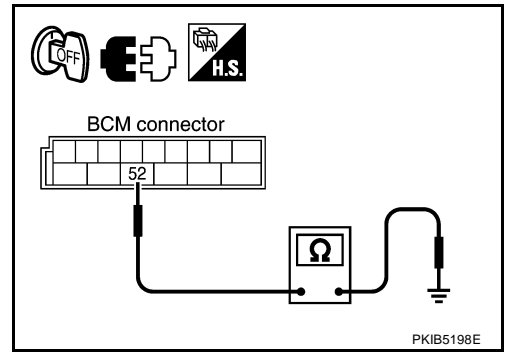

CONSULT-II Functions (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnosis part	Diagnosis mode	Description
HEADLAMP	WORK SUPPORT	Changes the setting for each function.
	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
BCM	SELF-DIAG RESULTS	BCM performs self-diagnosis of CAN communication.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn ignition switch ON.

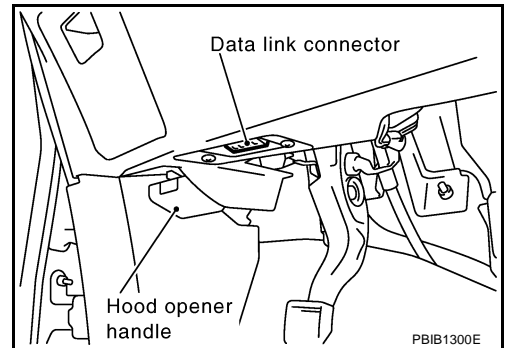


2. Touch "START (NISSAN BASED VHCL)".

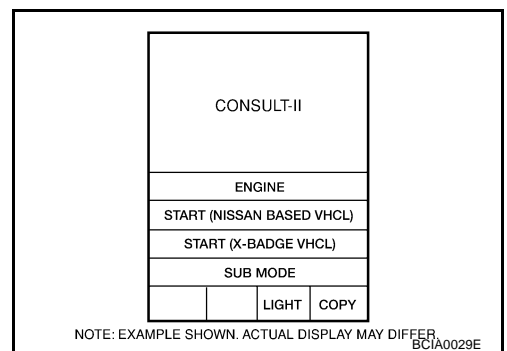


HEADLAMP - XENON TYPE -

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

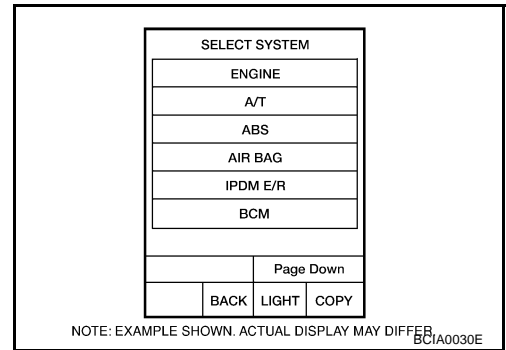

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

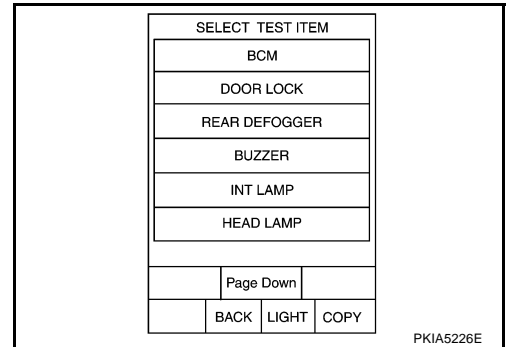

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SET".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between two ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects items and monitors them.

4. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
5. Touch "START".
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

HEADLAMP - XENON TYPE -

Display Item List

Monitor item	Contents
IGN ON SW	“ON/OFF” Displays “IGN position (ON)/OFF, ACC position (OFF)” judged from the ignition switch signal.
ACC ON SW	“ON/OFF” Displays “ACC (ON)/OFF, Ignition OFF (OFF)” status judged from ignition switch signal.
HI BEAM SW	“ON/OFF” Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1	“ON/OFF” Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 1 judged from lighting switch signal.
HEAD LAMP SW 2	“ON/OFF” Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1 ST	“ON/OFF” Displays status (lighting switch 1ST or 2ND position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW	“ON/OFF” Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW	“ON/OFF” Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW	“ON/OFF” Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW - DR	“ON/OFF” Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	“ON/OFF” Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR	“ON/OFF” Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RL	“ON/OFF” Displays status of the rear door as judged from the passenger door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW	“ON/OFF” Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R	“ON/OFF” Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L	“ON/OFF” Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW ^{NOTE}	“OFF” —
OPTICAL SENSOR	“0 - 5V” Displays “outside brightness (close to 5V when light/close to 0V when dark)” judged from optical sensor signal.

NOTE:

This item is displayed, but cannot be monitored.

ACTIVE TEST

Operation Procedure

1. Touch “HEAD LAMP” on “SELECT TEST ITEM” screen.
2. Touch “ACTIVE TEST” on “SELECT DIAG MODE” screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching “BACK” deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CORNERING LAMP ^{NOTE}	—

NOTE:

This item is displayed, but cannot be tested.

HEADLAMP - XENON TYPE -

AKS00AJV

CONSULT-II Functions (IPDM E/R)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


Diagnosis Mode	Description
SELF-DIAGNOSTIC RESULTS	Refer to PG-20. "SELF-DIAG RESULTS" .
DATA MONITOR	The input/output data of IPDM E/R is displayed in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	IPDM E/R sends a drive signal to electronic components to check their operation.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn the ignition switch ON.

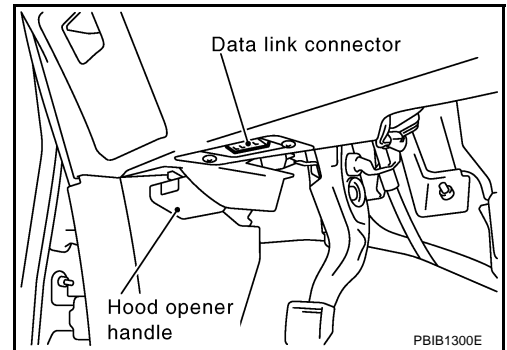

2. Touch "START (NISSAN BASED VHCL)".

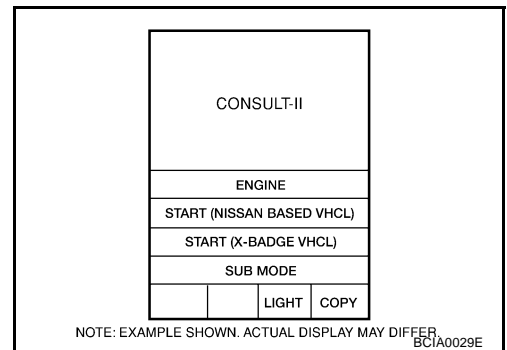


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not indicated, refer to [GI-39. "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

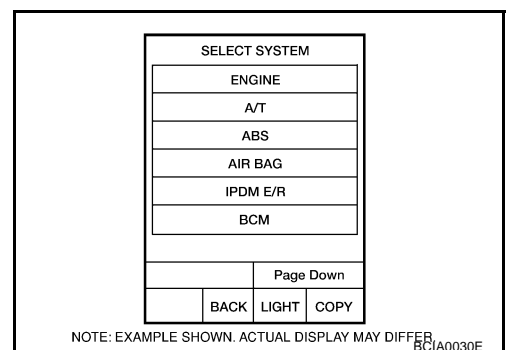

HEADLAMP - XENON TYPE -

- Select the desired part to be diagnosed on "SELECT SYSTEM" screen.

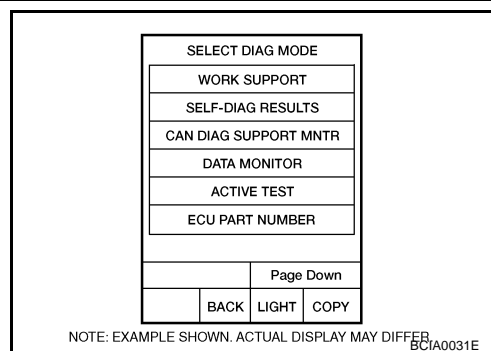

A
B
C
D

DATA MONITOR

Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS", or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all items.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Selects items and monitors them.

F
G

- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "START".
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

H
I

All Signals, Main Signals, Selection From Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Position lights request	TAIL & CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Font fog lights request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

J
LT
L

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

M

ACTIVE TEST

Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch item to be tested, and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI ON, LO ON) at your option. (Headlamp high beam repeats ON-OFF every 1 second.)
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.

HEADLAMP - XENON TYPE -

AKS00AJW

Headlamp Does Not Change To High Beam (Both Sides)

1. CHECK COMBINATION SWITCH INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is HIGH BEAM position : HI BEAM SW ON

DATA MONITOR			
MONITOR			
HI BEAM SW	ON		
		RECORD	
MODE	BACK	LIGHT	COPY

PKIA7585E

⊗ Without CONSULT-II

Refer to [LT-145, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check combination switch (lighting switch). Refer to [LT-145, "Combination Switch Inspection"](#) .

2. HEADLAMP ACTIVE TEST

④ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "HI" screen.
4. Make sure headlamp high beam operates.

**Headlamp high beam should operate.
(Headlamp high beam repeats ON-OFF every 1 second.)**

ACTIVE TEST			
LAMPS		OFF	
		HI	
LO		FOG	
MODE	BACK	LIGHT	COPY

SKIA5774E

⊗ Without CONSULT-II

1. Start auto active test. Refer to [PG-23, "Auto Active Test"](#) .
2. Make sure headlamp high beam operates.

Headlamp high beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" and "HL HI REQ" turns ON when lighting switch is in HI position.

**When lighting switch is HIGH BEAM position : HL LO REQ ON
: HL HI REQ ON**

DATA MONITOR			
MONITOR			
HL LO REQ	ON		
HL HI REQ	ON		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5775E

OK or NG

OK >> Replace IPDM E/R.


NG >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#) .

HEADLAMP - XENON TYPE -

4. CHECK HEADLAMP INPUT SIGNAL

☑ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Select "IPDM E/R" on CONSULT-II. and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "HI" screen.
6. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connector and ground (Headlamp high beam repeats ON-OFF every 1 second).

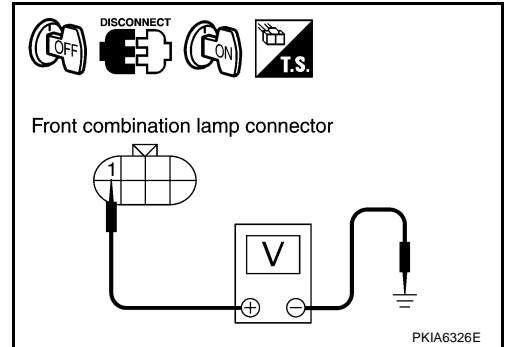

Terminal (+)			(-)	Voltage
Connector	Terminal (Wire color)			
RH	E30	1 (L/W)	Ground	Battery voltage
LH	E17	1 (G)		

☒ Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
4. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

Terminal (+)			(-)	Voltage
Connector	Terminal (Wire color)			
RH	E30	1 (L/W)	Ground	Battery voltage
LH	E17	1 (G)		

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 27 (L/W) and front combination lamp RH harness connector E30 terminal 1 (L/W).

27 (L/W) – 1 (L/W) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E7 terminal 28 (G) and front combination lamp LH harness connector E17 terminal 1 (G).

28 (G) – 1 (G) : Continuity should exist.

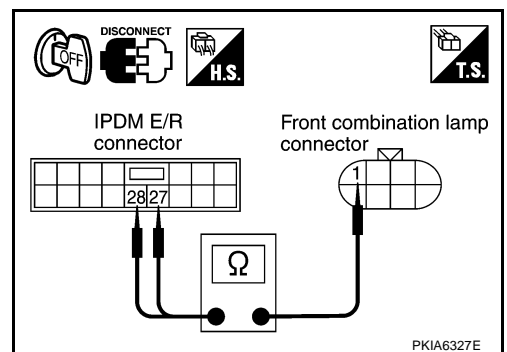

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.

HEADLAMP - XENON TYPE -

6. CHECK HEADLAMP GROUND

1. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.


5 (B/W) – Ground : Continuity should exist.

2. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> Replace front combination lamp.
 NG >> Repair harness or connector.

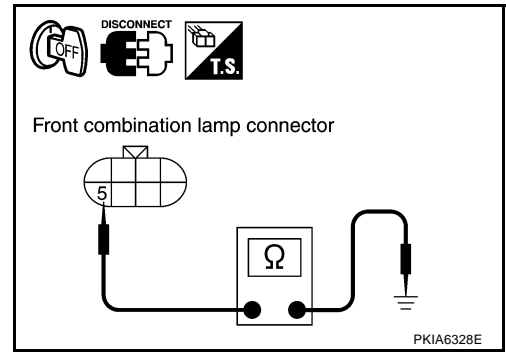


Headlamp Does Not Change To High Beam (One Side)

AKS00AJX

1. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH or LH connector.
3. Turn ignition switch ON.
4. Lighting switch is turned HIGH BEAM position.
5. Check voltage between front combination lamp RH or LH harness connector and ground.

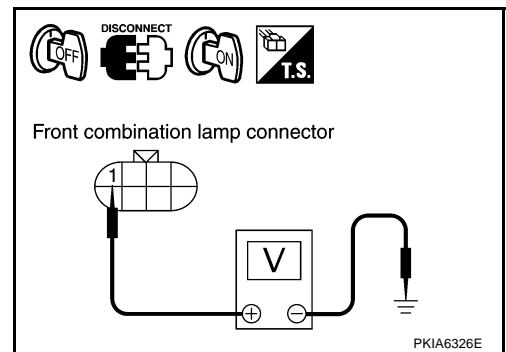

		Terminal		Voltage
		(+)	(-)	
Connector		Terminal (Wire color)		Ground
RH	E30	1 (L/W)		
LH	E17	1 (G)		
Battery voltage				

OK or NG

- OK >> GO TO 3.
 NG >> GO TO 2.

2. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 27 (L/W) and front combination lamp RH harness connector E30 terminal 1 (L/W).


27 (L/W) – 1 (L/W) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E7 terminal 28 (G) and front combination lamp LH harness connector E17 terminal 1 (G).

28 (G) – 1 (G) : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.

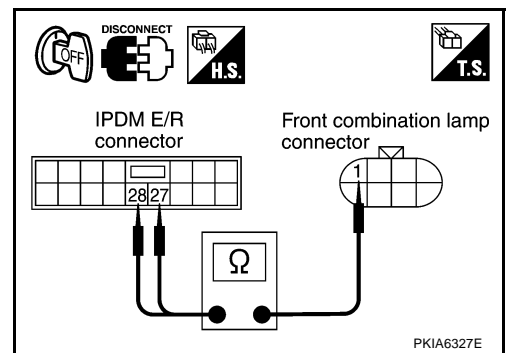

HEADLAMP - XENON TYPE -

3. CHECK HEADLAMP GROUND

1. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.


5 (B/W) – Ground : Continuity should exist.

2. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> Replace front combination lamp.
- NG >> Repair harness or connector.

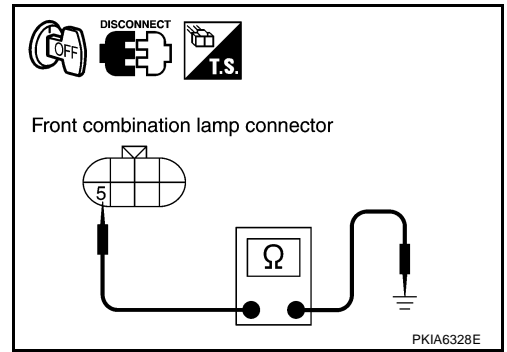

High Beam Indicator Lamp Does Not Illuminate

1. CHECK BULB

Check bulb of high beam indicator lamp.

OK or NG

- OK >> Replace combination meter.
- NG >> Replace indicator bulb.

Headlamp Low Beam Does Not Illuminate (Both Sides)

1. CHECK COMBINATION SWITCH INPUT SIGNAL

① With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is 2ND position : HEAD LAMP SW 1 ON
: HEAD LAMP SW 2 ON**

⊗ Without CONSULT-II

Refer to [LT-145, "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Check combination switch (lighting switch). Refer to [LT-145, "Combination Switch Inspection"](#).

DATA MONITOR			
MONITOR			
HEAD LAMP SW1	ON		
HEAD LAMP SW2	ON		
RECORD			
MODE	BACK	LIGHT	COPY

PKIA7586E

HEADLAMP - XENON TYPE -

2. HEADLAMP ACTIVE TEST

☑ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST" ITEM screen.
3. Touch "LO" screen.
4. Make sure headlamp low beam operates.

Headlamp low beam should operate.

☒ Without CONSULT-II

1. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
2. Make sure headlamp low beam operates.

Headlamp low beam should operate.

ACTIVE TEST			
LAMPS		OFF	
		HI	
LO		FOG	
MODE	BACK	LIGHT	COPY

SKIA5774E

OK or NG

- OK >> GO TO 3.
NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is 2ND : HL LO REQ ON position

OK or NG

- OK >> Replace IPDM E/R.
NG >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).

DATA MONITOR			
MONITOR			
HL LO REQ		ON	
		Page Down	
RECORD			
MODE	BACK	LIGHT	COPY


SKIA5780E

HEADLAMP - XENON TYPE -

4. CHECK HEADLAMP INPUT SIGNAL

④ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "LO" screen.
6. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

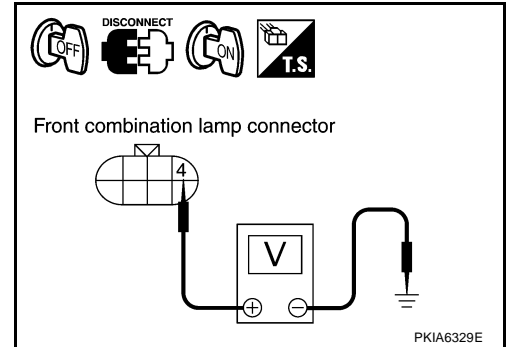

Terminal (+)			(-)	Voltage
Connector	Terminal (Wire color)			
RH	E30	4 (R/Y)	Ground	Battery voltage
LH	E17	4 (L)		

⊗ Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
4. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

Terminal (+)			(-)	Voltage
Connector	Terminal (Wire color)			
RH	E30	4 (R/Y)	Ground	Battery voltage
LH	E17	4 (L)		

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 20 (R/Y) and front combination lamp RH harness connector E30 terminal 4 (R/Y).

20 (R/Y) – 4 (R/Y) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E7 terminal 30 (L) and front combination lamp LH harness connector E17 terminal 4 (L).

30 (L) – 4 (L) : Continuity should exist.

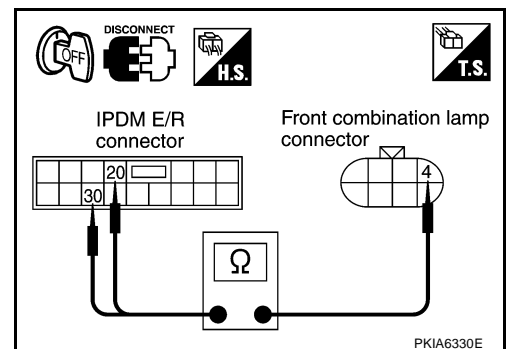

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.

HEADLAMP - XENON TYPE -

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.


3. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

OK >> Check headlamp harness and connectors, ballasts (HID control unit), and xenon bulbs. Refer to [LT-33, "Xenon Headlamp Trouble Diagnosis"](#) .

NG >> Repair harness or connector.

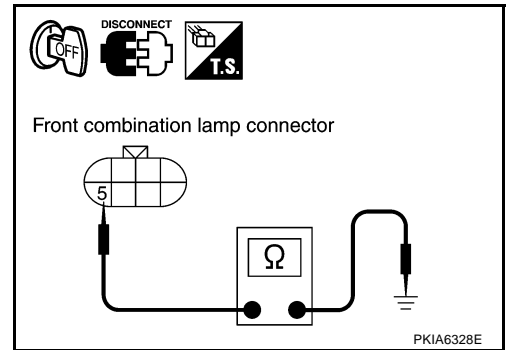

Headlamp Low Beam Does Not Illuminate (One Side)

AKS00AK0

1. CHECK BULB

Check ballast (HID control unit) and xenon bulb of lamp which does not illuminate. Refer to [LT-33, "Xenon Headlamp Trouble Diagnosis"](#) .


OK or NG

OK >> GO TO 2.

NG >> Replace malfunctioning part.

2. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH or LH connector.
3. Turn ignition switch ON.
4. Lighting switch is turned 2ND position.
5. Check voltage between front combination lamp RH or LH harness connector and ground.

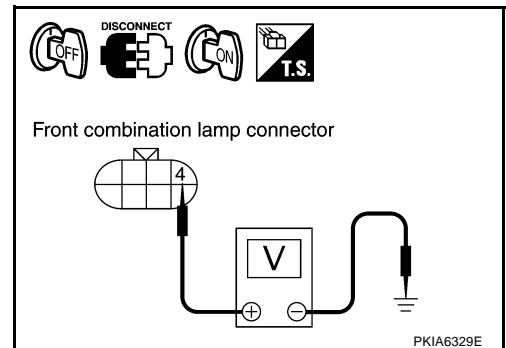

		Terminal		Voltage
		(+)	(-)	
Connector		Terminal (Wire color)		
RH	E30	4 (R/Y)		Ground Battery voltage
LH	E17	4 (L)		

OK or NG

OK >> GO TO 4.

NG >> GO TO 3.

HEADLAMP - XENON TYPE -


3. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 20 (R/Y) and front combination lamp RH harness connector E30 terminal 4 (R/Y).

20 (R/Y) – 4 (R/Y) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E7 terminal 30 (L) and front combination lamp LH harness connector E17 terminal 4 (L).

30 (L) – 4 (L) : Continuity should exist.

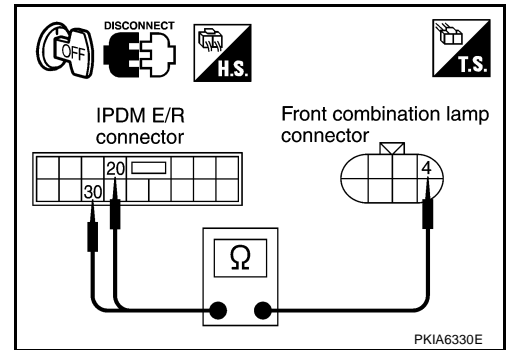

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness or connector.

4. CHECK HEADLAMP GROUND

1. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.


5 (B/W) – Ground : Continuity should exist.

2. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> Check connector for connection, bend and loose fit and repair.
- NG >> Repair harness or connector.

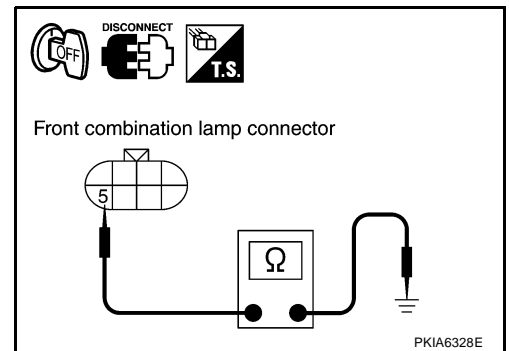

Headlamp RH Low Beam and High Beam Does Not Illuminate

AKS00AK1

1. CHECK BULB

Check ballast (HID control unit) and xenon bulb of lamp which does not illuminate. Refer to [LT-33, "Xenon Headlamp Trouble Diagnosis"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Replace malfunctioning part.


2. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH connector.
3. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

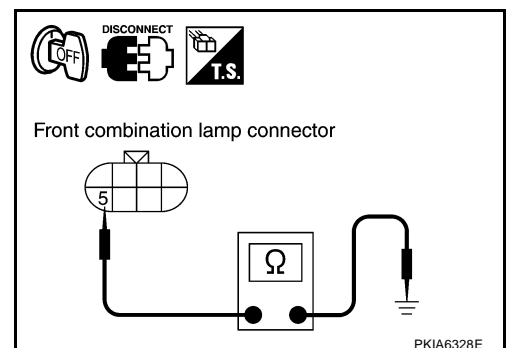


HEADLAMP - XENON TYPE -

3. CHECK HEADLAMP CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector E7 terminal 27 (L/W) and front combination lamp RH harness connector E30 terminal 1 (L/W).

27 (L/W) – 1 (L/W) : Continuity should exist.

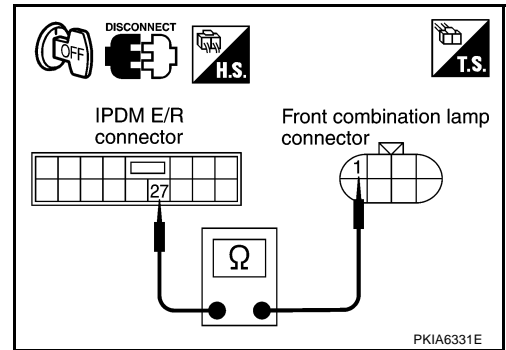


3. Check continuity between IPDM E/R harness connector E7 terminal 20 (R/Y) and front combination lamp RH harness connector E30 terminal 4 (R/Y).

20 (R/Y) – 4 (R/Y) : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness or connector.

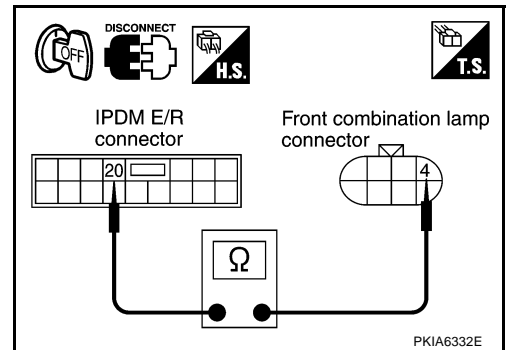

Headlamp LH Low Beam and High Beam Does Not Illuminate

1. CHECK BULB

Check ballast (HID control unit) and xenon bulb of lamp which does not illuminate. Refer to [LT-33, "Xenon Headlamp Trouble Diagnosis"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Replace malfunctioning part.


2. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Disconnect front combination lamp LH connector.
3. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

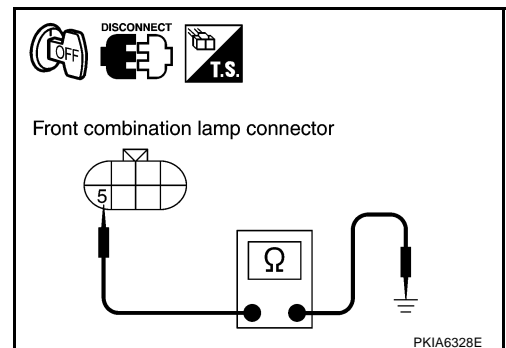


HEADLAMP - XENON TYPE -

3. CHECK HEADLAMP CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector E7 terminal 28 (G) and front combination lamp LH harness connector E17 terminal 1 (G).

28 (G) – 1 (G) : Continuity should exist.

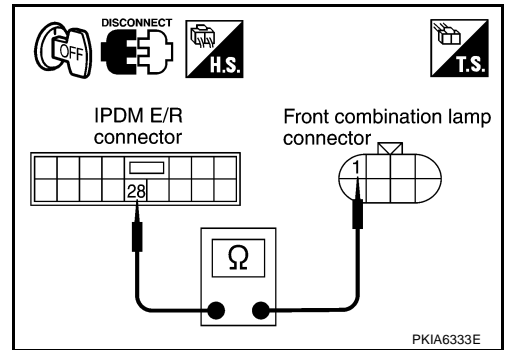

3. Check continuity between IPDM E/R harness connector E7 terminal 30 (L) and front combination lamp LH harness connector E17 terminal 4 (L).

30 (L) – 4 (L) : Continuity should exist.

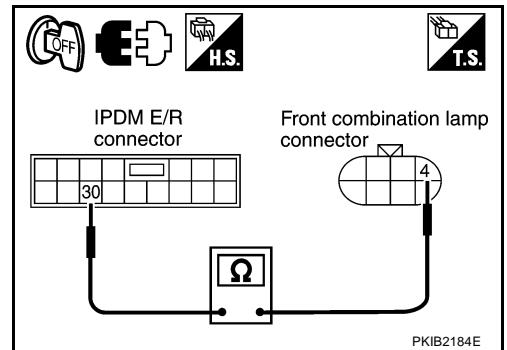

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness or connector.

Headlamps Do Not Turn OFF

1. CHECK HEADLAMP TURN OFF

Make sure that lighting switch is OFF. And make sure headlamp turns off when ignition switch is turned OFF.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

When lighting switch is OFF : HEAD LAMP SW 1 OFF position : HEAD LAMP SW 2 OFF

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Check combination switch (lighting switch). Refer to [LT-145, "Combination Switch Inspection"](#).

DATA MONITOR			
MONITOR			
HEAD LAMP SW1	OFF		
HEAD LAMP SW2	OFF		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

PKIA7588E

HEADLAMP - XENON TYPE -

3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-II, and perform self-diagnosis for "BCM".

Display of self-diagnosis results

NO DTC>> Replace IPDM E/R.

CAN COMM CIRCUIT>> Refer to [BCS-15, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]			
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

PKIA7627E

HEADLAMP - XENON TYPE -

General Information for Xenon Headlamp Trouble Diagnosis

AKS00CR7

In most cases, malfunction of xenon headlamp - "does not illuminate", "flickers" or "dark" - is caused by a malfunctioning xenon bulb. A malfunctioning HID control unit or lamp housing, however, may be a cause. Be sure to perform trouble diagnosis following the steps described below.

Caution:

AKS00CR8

- Installation or removal of connector must be done with lighting switch OFF.
- Disconnect the battery cable from the negative terminal or remove power fuse.
- When the lamp is illuminated (when lighting switch is ON), never touch harness, HID control unit, inside of lamp, or lamp metal parts.
- To check illumination, temporarily install lamp in vehicle. Be sure to connect power at vehicle side connector.
- If error can be traced directly to electrical system, first check for items such as blown fuses and fusible links, broken wires or loose connectors, dislocated terminals, and improper connections.
- Never work with wet hands.
- Using a tester for HID control unit circuit trouble diagnosis is prohibited.
- Disassembling HID control unit or harnesses (bulb socket harness, ECM harness) is prohibited.
- Immediately after illumination, light intensity and color will fluctuate, but there is nothing wrong.
- When bulb has come to end of its life, brightness will drop significantly, it will flash repeatedly, or light color will turn reddish.

Xenon Headlamp Trouble Diagnosis

AKS00CR9

1. CHECK 1: XENON HEADLAMP LIGHTING

Install normal xenon bulb to corresponding xenon bulb headlamp, and check if lamp lights up.

OK or NG

- OK >> Replace xenon bulb.
- NG >> GO TO 2.

2. CHECK 2: XENON HEADLAMP LIGHTING

Install normal HID control unit to corresponding xenon headlamp, and check if lamp lights up.

OK or NG

- OK >> Replace HID control unit.
- NG >> GO TO 3.

3. CHECK 3: XENON HEADLAMP LIGHTING

Install normal xenon lamp housing assembly to corresponding xenon headlamp, and check if lamp lights up.

OK or NG


- OK >> Replace xenon headlamp housing assembly. [Malfunction in starter (boosting circuit) in xenon headlamp housing]
- NG >> INSPECTION END

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP - XENON TYPE -

Aiming Adjustment

AKS00AK6

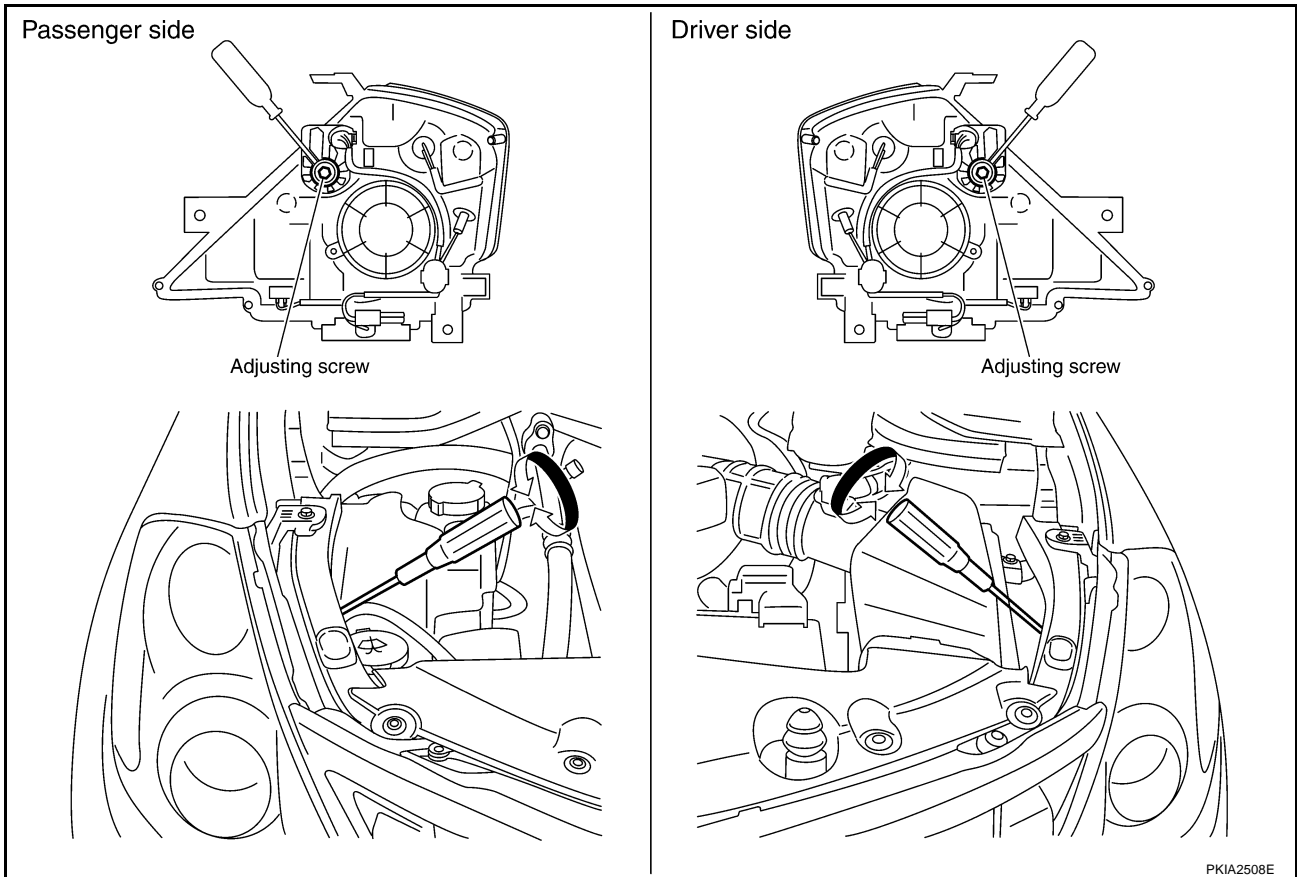

PREPARATION BEFORE ADJUSTING

For Details, Refer To the Regulations In Your Own Country.

Before performing aiming adjustment, check the following.


1. Keep all tires inflated to correct pressures.
2. Place vehicle on flat surface.
3. Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank.

LOW BEAM AND HIGH BEAM

1. Turn headlamp low beam ON.
2. Use adjusting screws to perform aiming adjustment.

HEADLAMP - XENON TYPE -

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

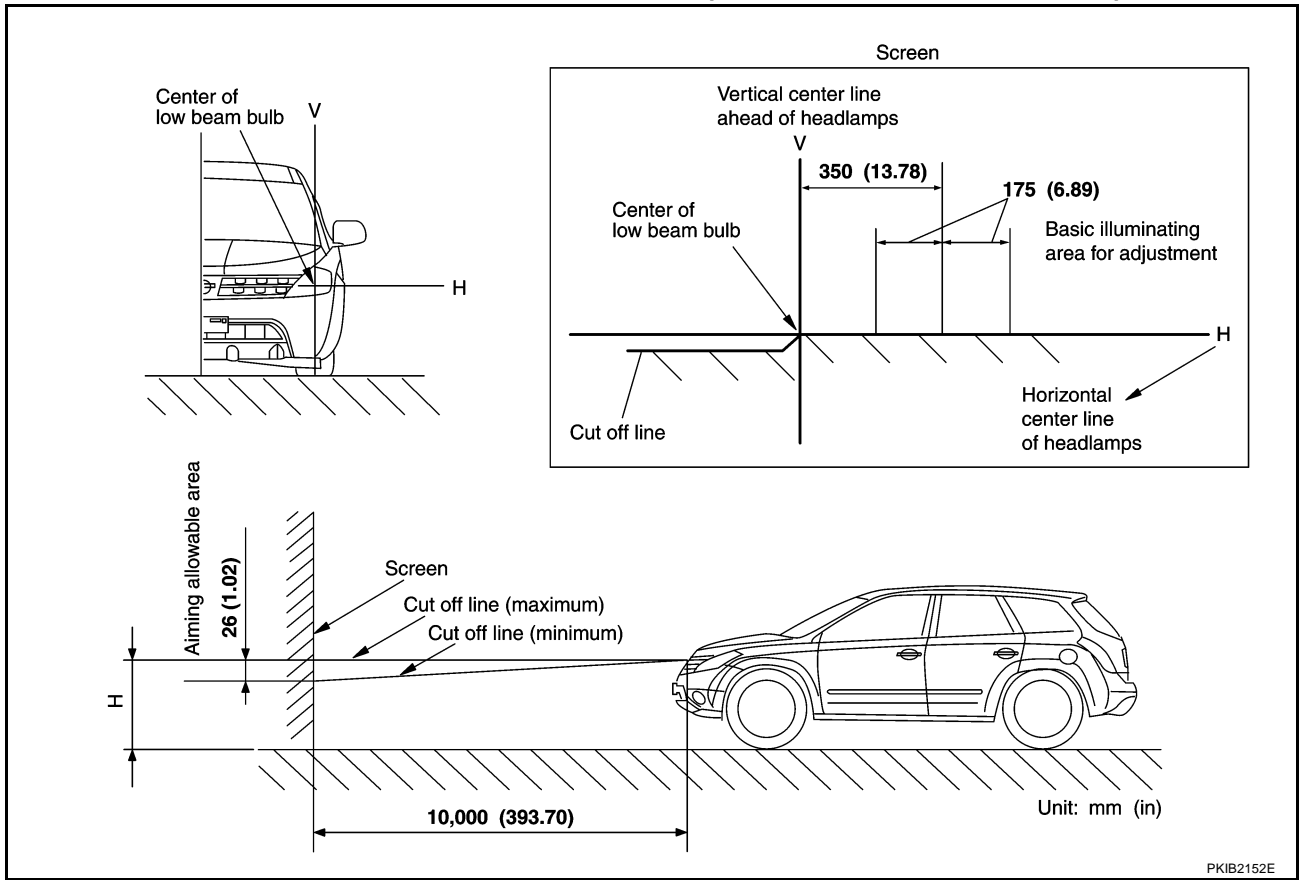


If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- Basic illumination area for adjustment should be within the range shown on the aiming chart. Adjust headlamp accordingly.

CAUTION:

Be sure aiming switch is set to "0" when performing aiming adjustment.

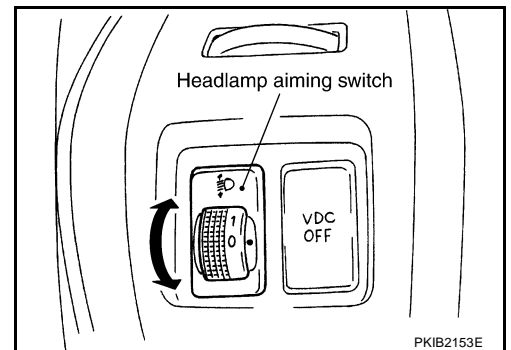


A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP - XENON TYPE -

AKS00AK7

Bulb Replacement HEADLAMP HIGH/LOW BEAM

1. Turn lighting switch OFF.
2. Disconnect the battery cable from the negative terminal or remove power fuse.
3. Remove fender protector (front). Refer to [EI-22, "FENDER PROTECTOR"](#) in "EI" section.
4. Turn plastic cap counterclockwise and unlock it.
5. Turn bulb socket counterclockwise and unlock it.
6. Unlock retaining spring and remove bulb from headlamp.
7. Installation is the reverse order of removal.

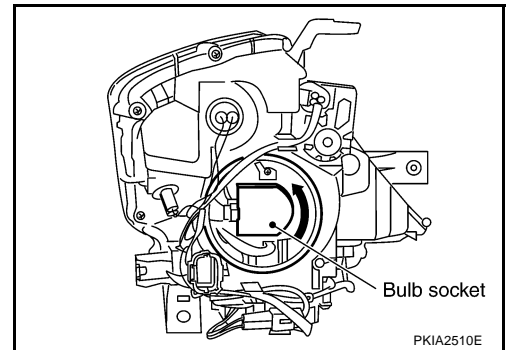

NOTE:

After installation, perform aiming adjustment. Refer to [LT-34, "Aiming Adjustment"](#).

Headlamp high/low beam (Xenon) : 12V - 35W (D2S)

PARKING LAMP (CLEARANCE LAMP)

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-22, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Installation is the reverse order of removal.

Parking lamp (Clearance lamp) : 12V - 3.8W

FRONT TURN SIGNAL LAMP

1. Turn lighting switch OFF.
2. Remove air cleaner case (when replacing LH bulb). Refer to [EM-16, "AIR CLEANER AND AIR DUCT"](#) in "EM" section.
3. Remove IPDM E/R (when replacing RH bulb). Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) in "PG" section (RH).
4. Turn bulb socket counterclockwise and unlock it.
5. Remove bulb from its socket.
6. Installation is the reverse order of removal.

Front turn signal lamp : 12V - 21W (amber)

FRONT SIDE MARKER LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-22, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Installation is the reverse order of removal.

Front side marker lamp : 12V - 3.8W

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.


HEADLAMP - XENON TYPE -

AKS00AK8

Removal and Installation

REMOVAL

1. Disconnect the battery cable from the negative terminal or remove power fuse.
2. Remove front bumper. Refer to [EI-14, "FRONT BUMPER"](#) in "EI" section.
3. Remove headlamp mounting bolts.
4. Remove plastics bumper bracket, then pull headlamp toward vehicle front, disconnect connector, and remove headlamp.

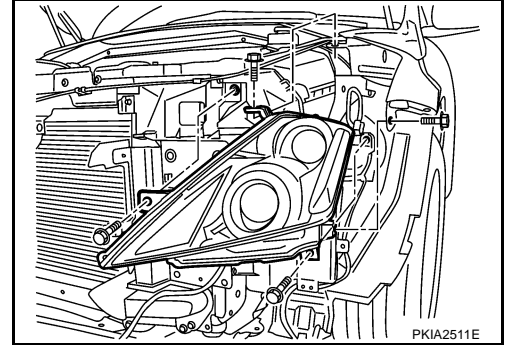

INSTALLATION

Installation is the reverse order of removal.

Headlamp mounting bolt




: 5.1 N·m (0.52 kg·m, 45 in·lb)

NOTE:

After installation, perform aiming adjustment. Refer to [LT-34, "Aiming Adjustment"](#).

Disassembly and Assembly

AKS00AK9

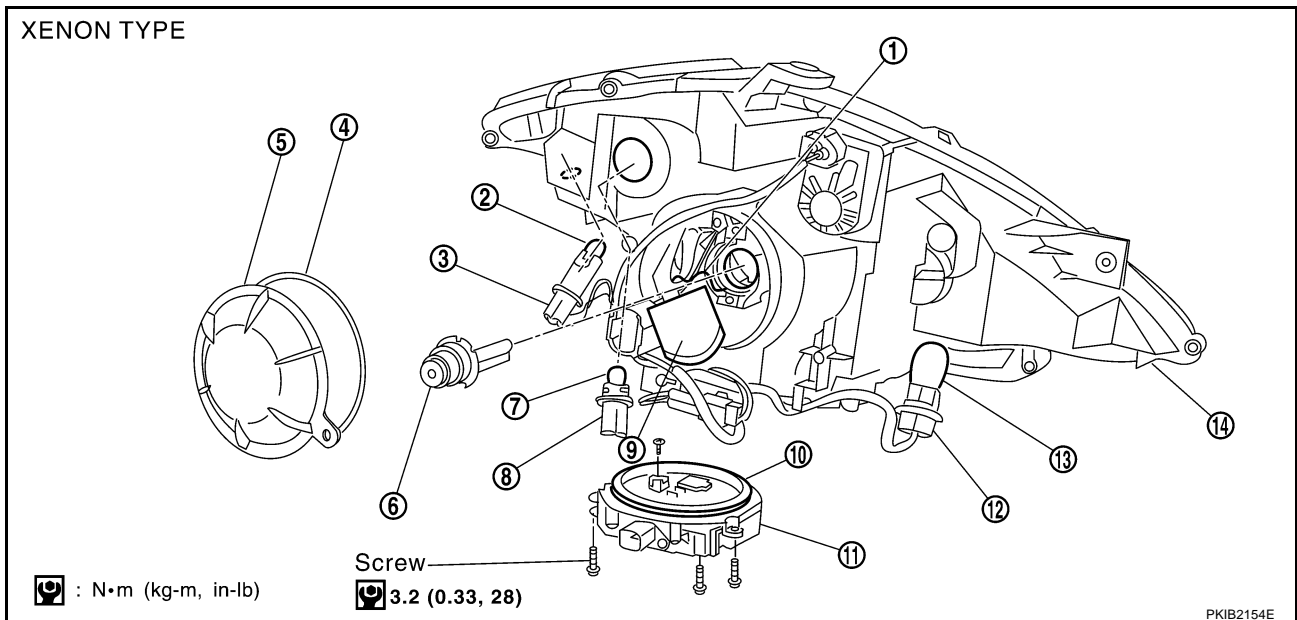

- | | | |
|---------------------------------|-------------------------------|--|
| 1. Retaining spring | 2. Side marker lamp bulb | 3. Side marker lamp bulb socket |
| 4. Seal rubber | 5. Plastic cap | 6. Xenon bulb |
| 7. Parking lamp bulb | 8. Parking lamp bulb socket | 9. Xenon bulb socket |
| 10. Seal packing | 11. HID control unit | 12. Front turn signal lamp bulb socket |
| 13. Front turn signal lamp bulb | 14. Headlamp housing assembly | |

DISASSEMBLY

1. Turn plastic cap counterclockwise and unlock it.
2. Turn xenon bulb socket counterclockwise, and unlock it.
3. Unlock retaining spring, and remove xenon bulb.
4. Disconnect HID control unit connector, and remove HID control unit screws.
5. Turn parking lamp bulb socket counterclockwise and unlock it.
6. Remove parking lamp bulb from its socket.
7. Turn front turn signal lamp bulb socket counterclockwise and unlock it.

HEADLAMP - XENON TYPE -

8. Remove front turn signal lamp bulb from its socket.
9. Turn front side marker lamp bulb socket counterclockwise and unlock it.
10. Remove front side marker lamp bulb from its socket.

ASSEMBLY

Assembly is the reverse order of disassembly.

HID control unit mounting screw  : 3.2 N·m (0.33 kg-m, 28 in-lb)

CAUTION:

- When HID control unit is removed, reinstall it securely and avoid any looseness.
- After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.


HEADLAMP -CONVENTIONAL TYPE-

HEADLAMP -CONVENTIONAL TYPE-

PPF:26010

Component Parts and Harness Connector Location

AKS007LL

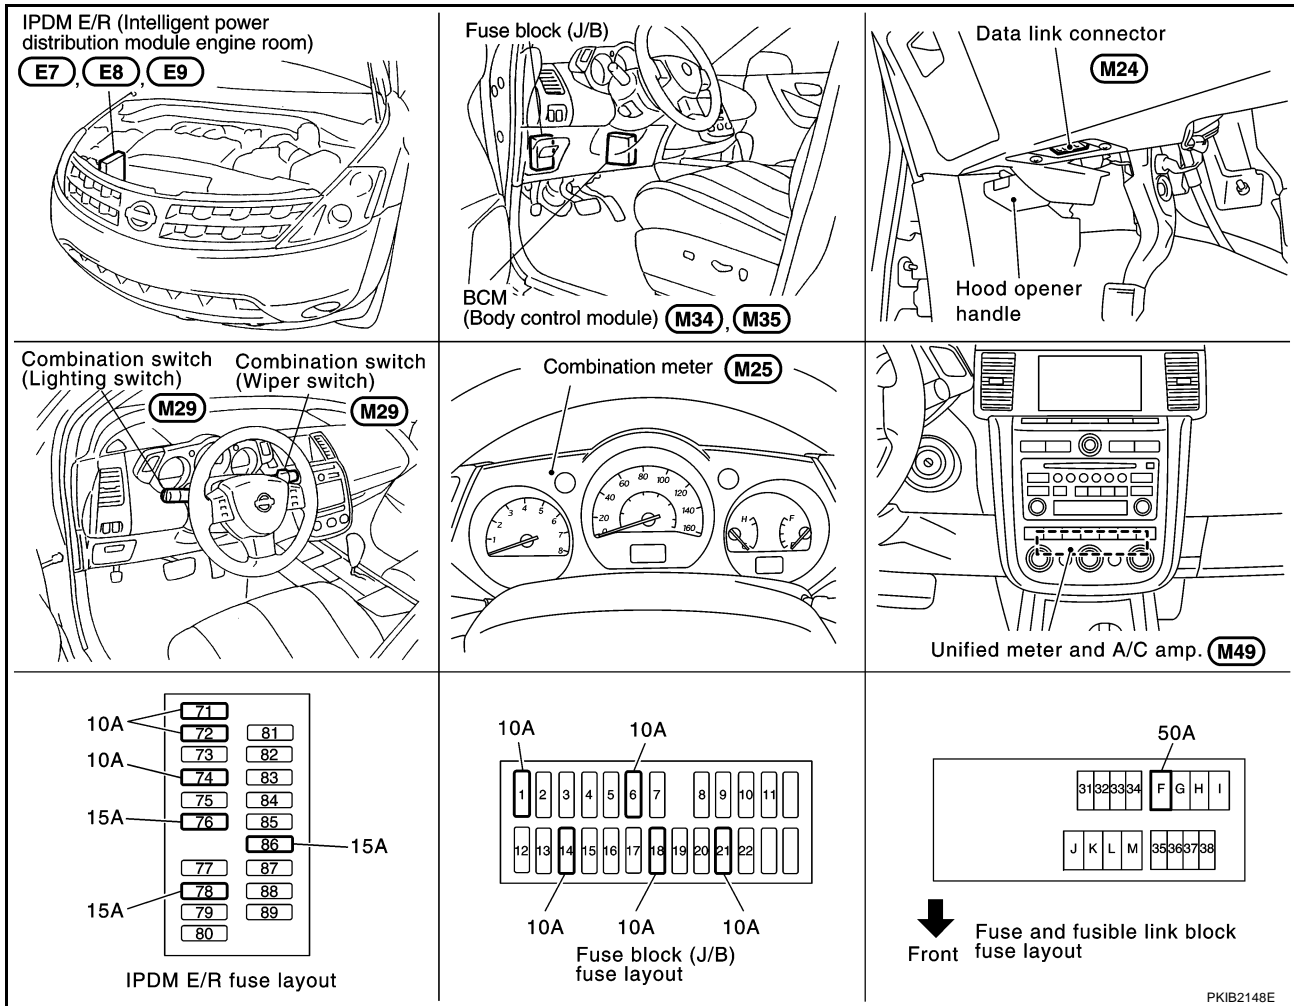

PKIB2148E

System Description

AKS007LM

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input signal requesting the headlamps (and tail lamps) illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) located in the IPDM E/R controls the headlamp high and headlamp low relay coils. These relays, when energized, direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to ignition relay, located in IPDM E/R,
- to headlamp high relay located in IPDM E/R, and
- to headlamp low relay located in IPDM E/R, from battery direct,
- through 50A fusible link (letter F, located in fuse and fusible link block)
- to BCM terminal 55,
- through 10A fuse [No. 18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 15A fuse (No. 78, located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 10A fuse (No. 71, located in IPDM E/R)
- to CPU located in IPDM E/R,

A
B
C
D
E
F
G
H
I
J
LT

HEADLAMP -CONVENTIONAL TYPE-

- through 10A fuse [No. 21, located in fuse block (J/B)]
- to combination meter terminal 21.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in IPDM E/R, from battery direct
- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38,
- through 10A fuse [No. 14 located in fuse block (J/B)]
- to combination meter terminal 20.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds E13, E26 and E28,
- to IPDM E/R terminals 38 and 60
- through grounds E13, E26 and E28,
- to combination meter terminals 22, 23 and 24
- through grounds M14 and M78.

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input signal requesting the headlamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU located in the IPDM E/R controls the headlamp low relay coil, which when energized, directs power

- through 15A fuse (No. 76, located in IPDM E/R)
- through IPDM E/R terminal 20
- to front combination lamp RH terminal 4,
- through 15A fuse (No. 86, located in IPDM E/R)
- through IPDM E/R terminal 30
- to front combination lamp LH terminal 4.

Ground is supplied at all times

- to front combination lamp RH terminal 5
- through grounds E13, E26 and E28,
- to front combination lamp LH terminal 5
- through grounds E13, E26 and E28.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input signal requesting the headlamp high beams to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU located in the IPDM E/R controls the headlamp high relay coil, which when energized, directs power

- through 10A fuse (No. 72, located in IPDM E/R)
- through IPDM E/R terminal 27
- to front combination lamp RH terminal 1,
- through 10A fuse (No. 74, located in IPDM E/R)
- through IPDM E/R terminal 28
- to front combination lamp LH terminal 1.

Ground is supplied

- to front combination lamp RH terminal 5
- through grounds E13, E26 and E28,

HEADLAMP -CONVENTIONAL TYPE-

- to front combination lamp LH terminal 5
- through grounds E13, E26 and E28.

With power and ground supplied, the high beam headlamps illuminate.

The unified meter and A/C amp that received the high beam request signal by BCM across the CAN communication makes a high beam indicator lamp turn on in combination meter.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, and then the headlamps are turned off. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

AUTO LIGHT OPERATION

Refer to [LT-88, "System Description"](#) in "AUTO LIGHT SYSTEM".

VEHICLE SECURITY SYSTEM

The vehicle security system will flash the high beams if the system is triggered. Refer to [BL-205, "VEHICLE SECURITY \(THEFT WARNING\) SYSTEM"](#) .

CAN Communication System Description

AKS007LN

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS007QN

Refer to [LAN-29, "CAN Communication Unit"](#) .


A
B
C
D
E
F
G
H
I
J
LT
L
M



HEADLAMP -CONVENTIONAL TYPE-

Schematic

AKS007LP

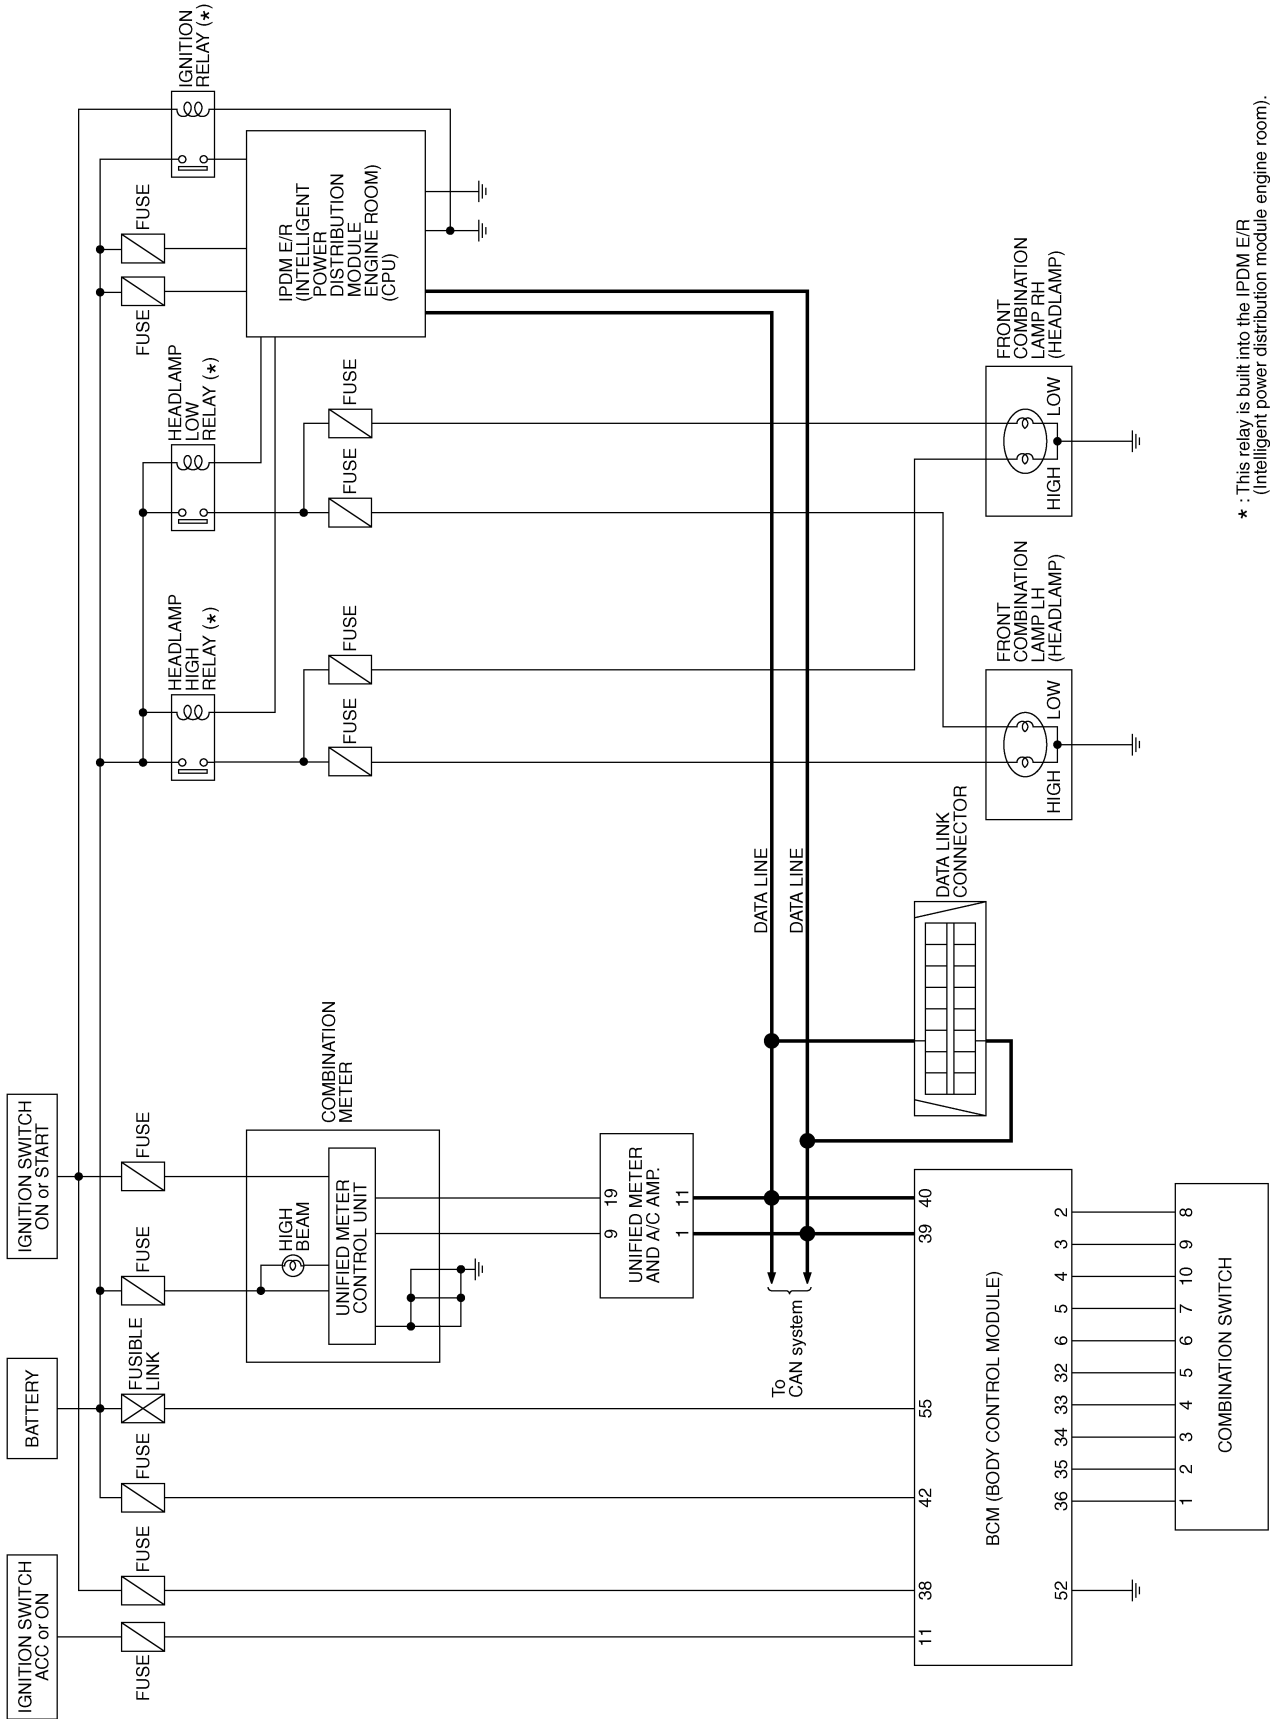

* : This relay is built into the IPDM E/R (Intelligent power distribution module engine room).



TKWB0443E

HEADLAMP - CONVENTIONAL TYPE-

Wiring Diagram — H/LAMP —

AKS007LQ

LT-H/LAMP-05

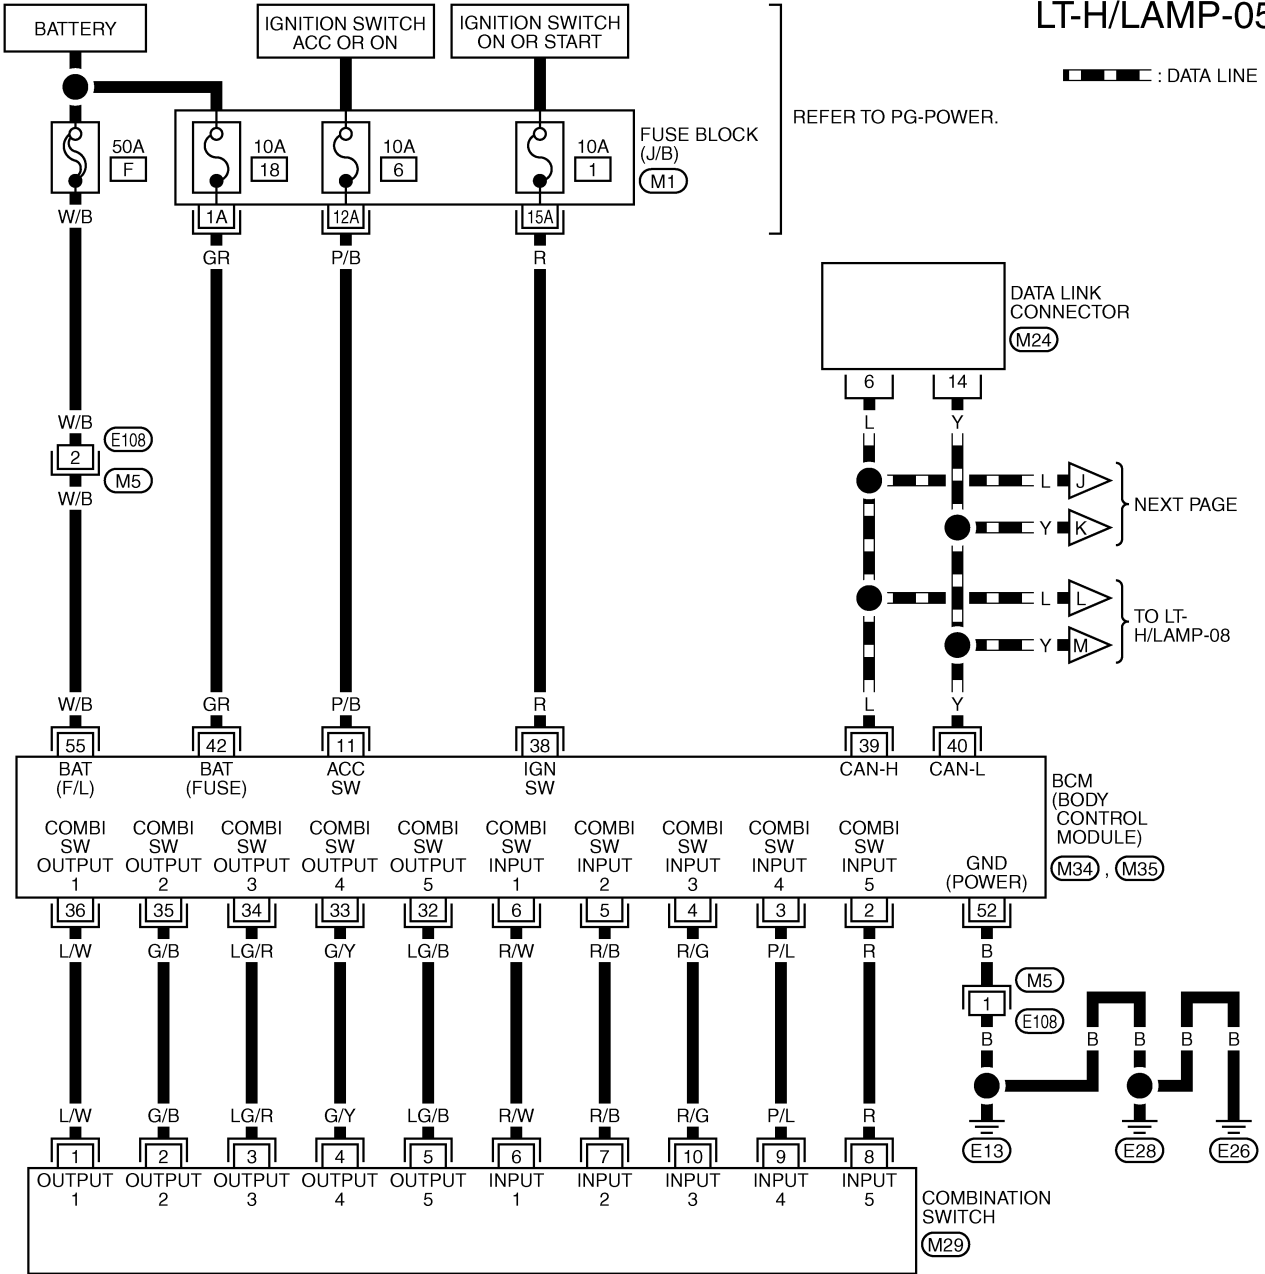




REFER TO THE FOLLOWING.
 (M1) - FUSE BLOCK-JUNCTION BOX (J/B)
 (M34), (M35) - ELECTRICAL UNITS

A
B
C
D
E
F
G
H
I
J
K
L
M

LT

HEADLAMP - CONVENTIONAL TYPE-



LT-H/LAMP-06

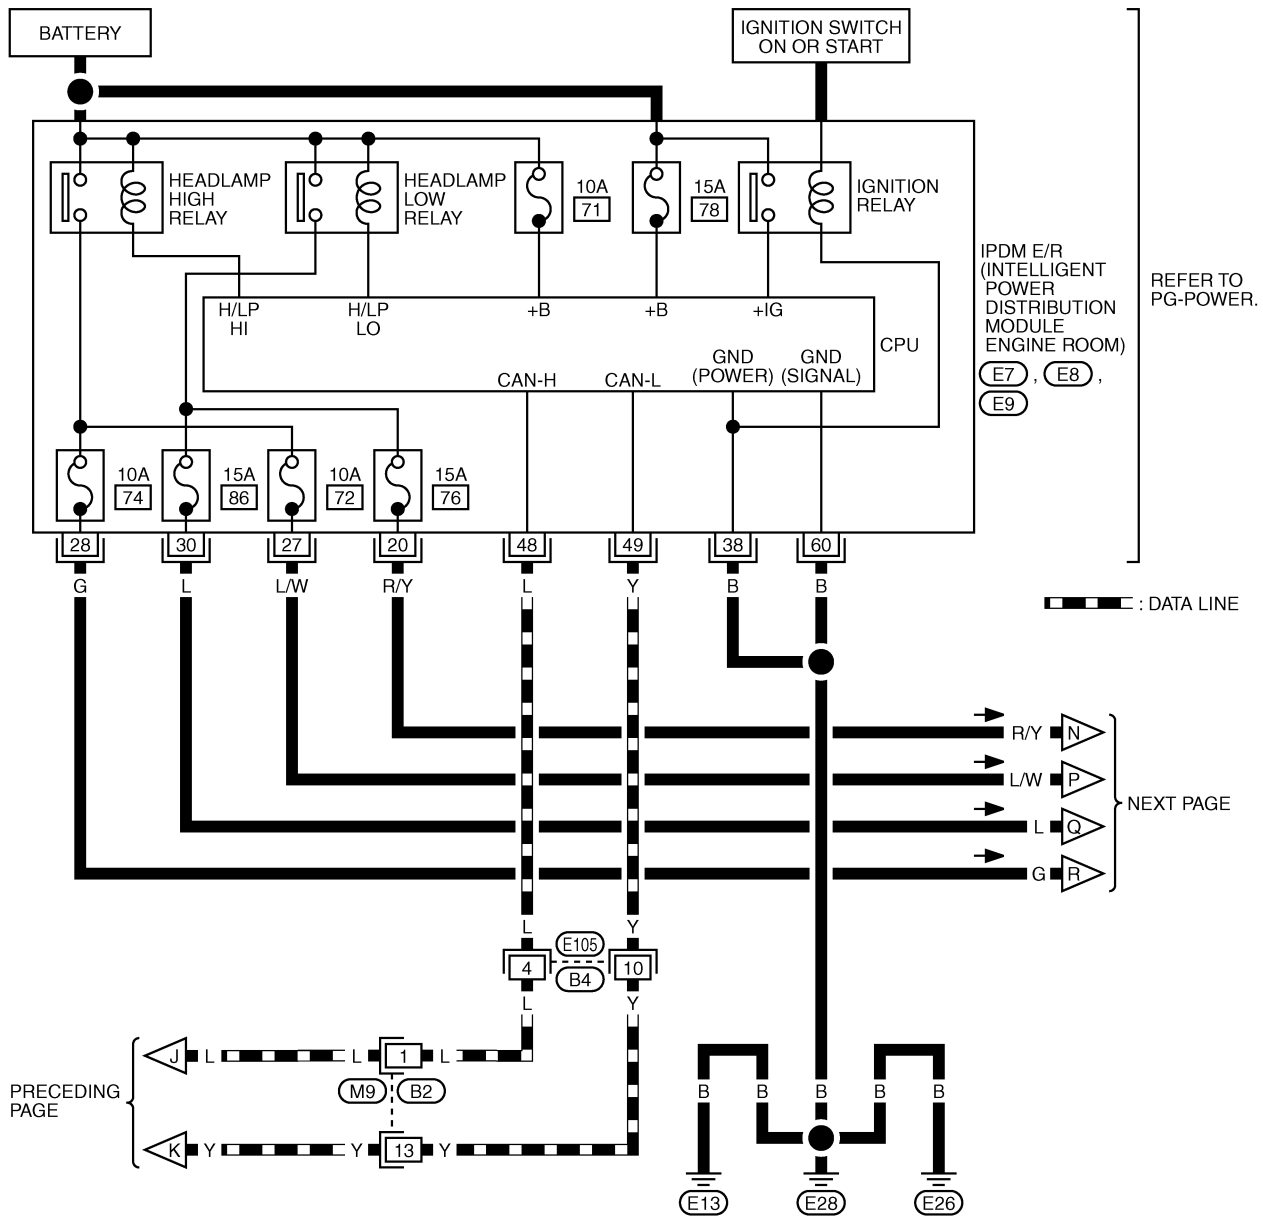

TKWB0445E

HEADLAMP - CONVENTIONAL TYPE-

LT-H/LAMP-07

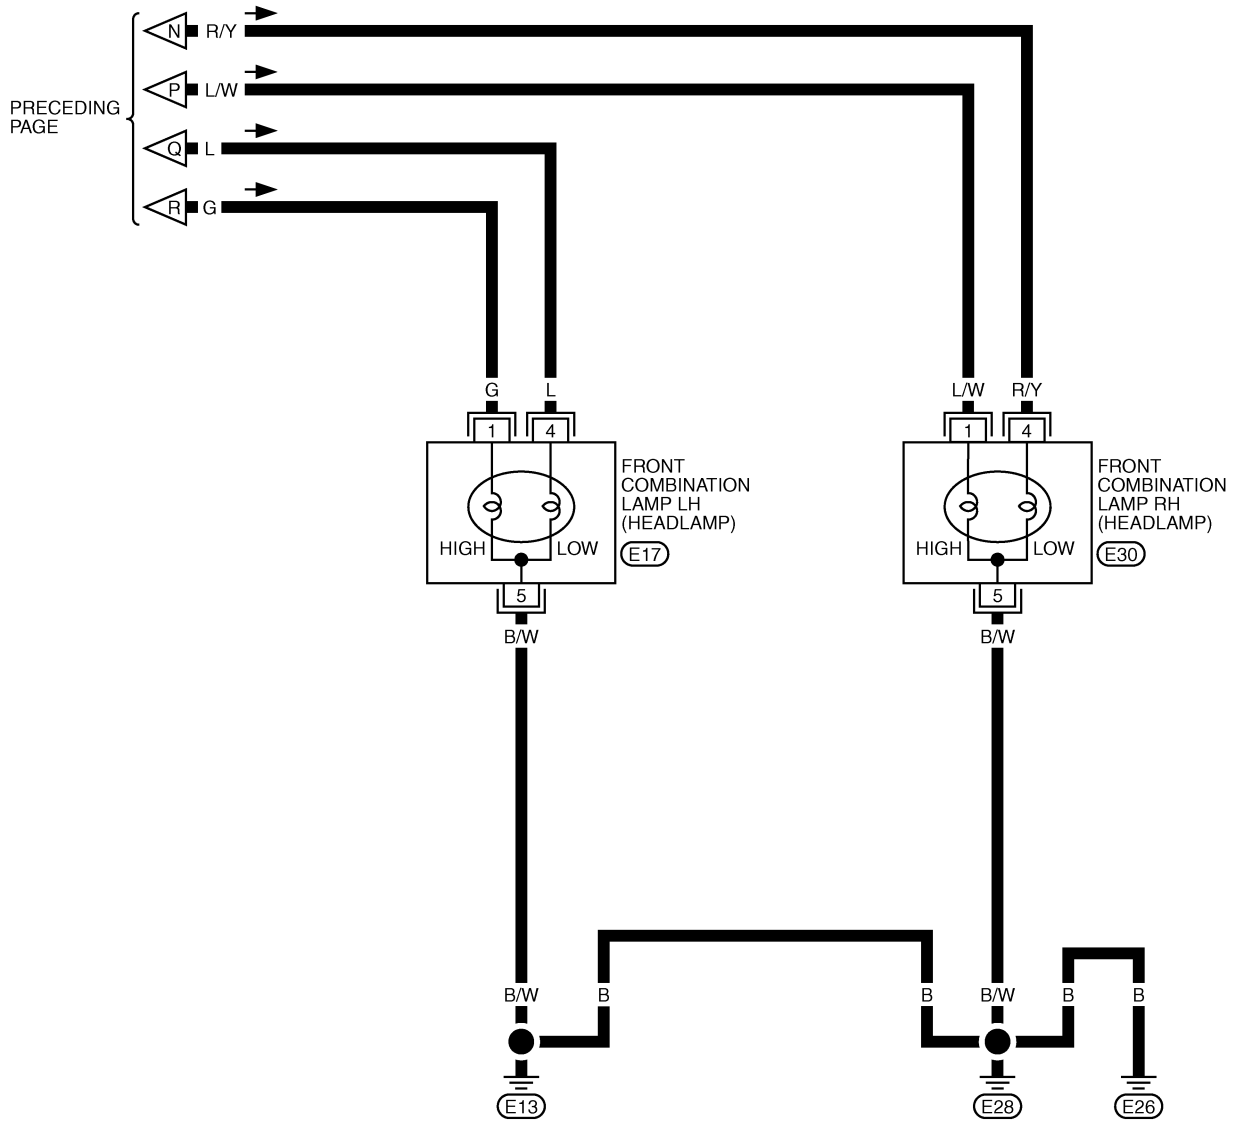

A
B
C
D
E
F
G
H
I
J
K
L
M




LT

TKWA0745E

HEADLAMP -CONVENTIONAL TYPE-

LT-H/LAMP-08

▬ : DATA LINE

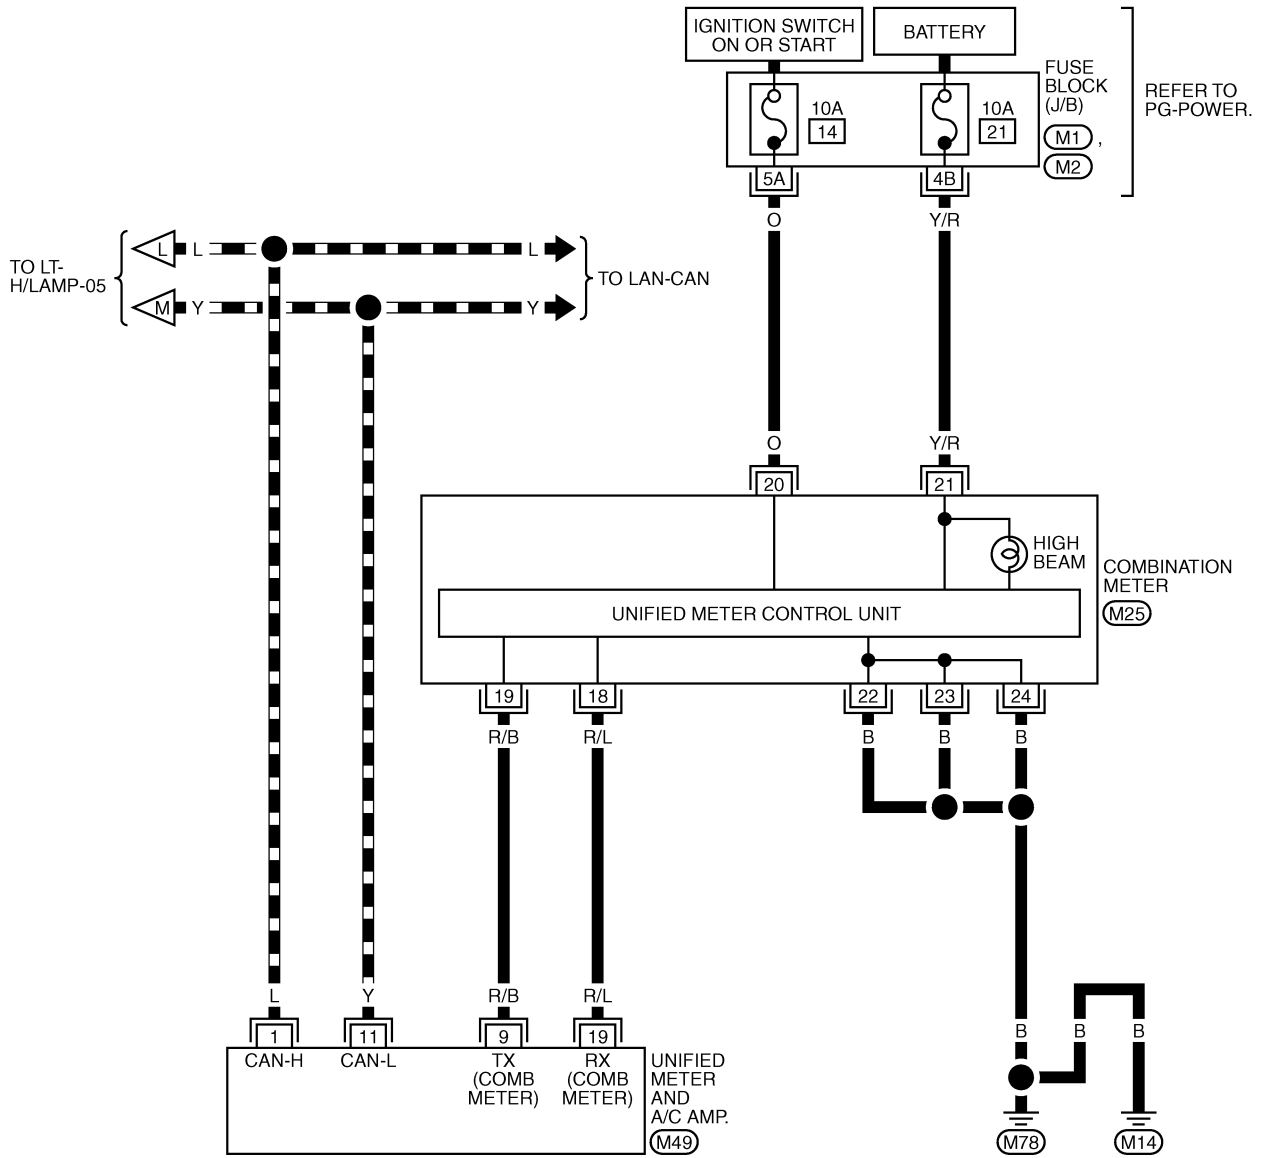




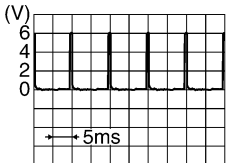

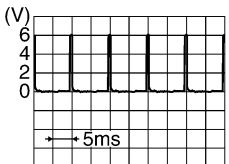
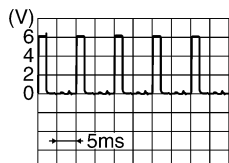
REFER TO THE FOLLOWING.
 (M1), (M2) -FUSE BLOCK-JUNCTION BOX (J/B)

TKWA0746E

HEADLAMP -CONVENTIONAL TYPE-


Terminals and Reference Values for BCM

AKS00AKA

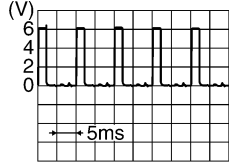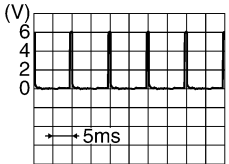Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
2	R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	P/L	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	R/G	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	R/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	R/W	Combination switch input 1			
11	P/B	Ignition switch (ACC)	ACC	—	Battery voltage
32	LG/B	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	G/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	LG/R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP -CONVENTIONAL TYPE-

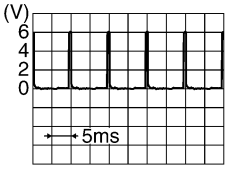Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
35	G/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	L/W	Combination switch output 1			
38	R	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN – H	—	—	—
40	Y	CAN – L	—	—	—
42	GR	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0V
55	W/B	Battery power supply	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

AKS00AKB

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
20	R/Y	Headlamp low (RH)	ON	Lighting switch 2ND position	OFF	Approx. 0V
					ON	Battery voltage
27	L/W	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0V
					ON	Battery voltage
28	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0V
					ON	Battery voltage
30	L	Headlamp low (LH)	ON	Lighting switch 2ND position	OFF	Approx. 0V
					ON	Battery voltage
38	B	Ground	ON	—	Approx. 0V	
48	L	CAN – H	—	—	—	
49	Y	CAN – L	—	—	—	
60	B	Ground	ON	—	Approx. 0V	

How to Proceed With Trouble Diagnosis

AKS00AKC

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-39, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-49, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

HEADLAMP -CONVENTIONAL TYPE-

AKS00AKD

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown fuses.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	72
		74
		76
		86

Refer to [LT-43, "Wiring Diagram — H/LAMP —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-3, "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

Terminal (+)		(-)	Ignition switch position		
Connector	Terminal (Wire color)		OFF	ACC	ON
M34	11 (P/B)	Ground	Approx. 0V	Battery voltage	Battery voltage
	38 (R)		Approx. 0V	Approx. 0V	Battery voltage
M35	42 (GR)		Battery voltage	Battery voltage	Battery voltage
	55 (W/B)		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

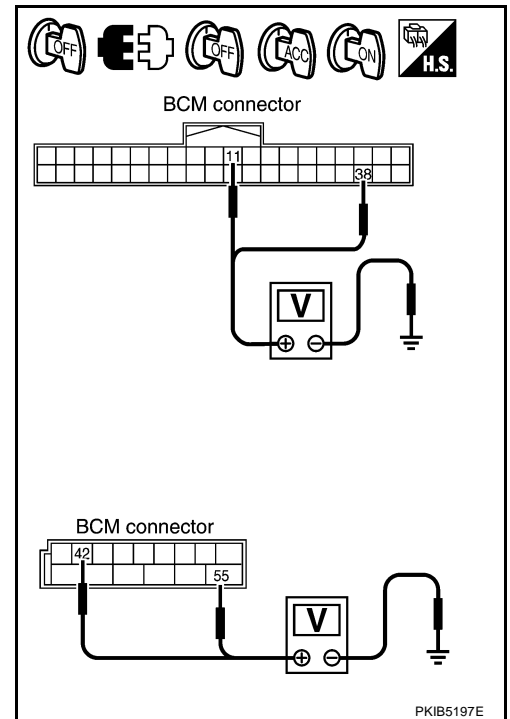

HEADLAMP -CONVENTIONAL TYPE-


3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

Terminal		Ground	Continuity
Connector	Terminal (Wire color)		
M35	52 (B)		Yes

OK or NG

- OK >> INSPECTION END
- NG >> Check ground circuit harness.

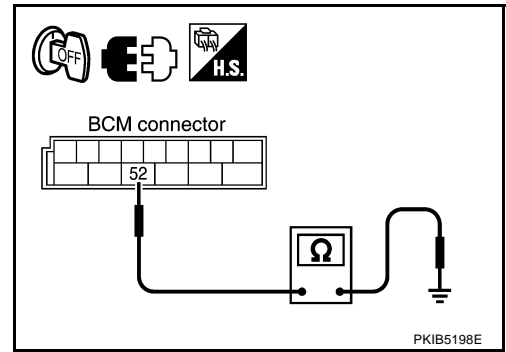

PKIB5198E

CONSULT-II Functions (BCM)

AKS00CRA

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnosis part	Diagnosis mode	Description
HEADLAMP	WORK SUPPORT	Changes the setting for each function.
	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
BCM	SELF-DIAG RESULTS	BCM performs self-diagnosis of CAN communication.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

CONSULT-II BASIC OPERATION

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn ignition switch ON.

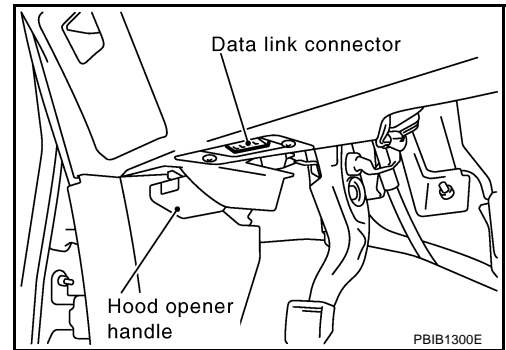

PBIB1300E


2. Touch "START (NISSAN BASED VHCL)".

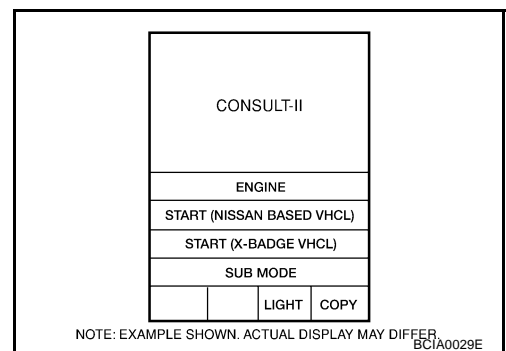


BCIA0029E

HEADLAMP -CONVENTIONAL TYPE-

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

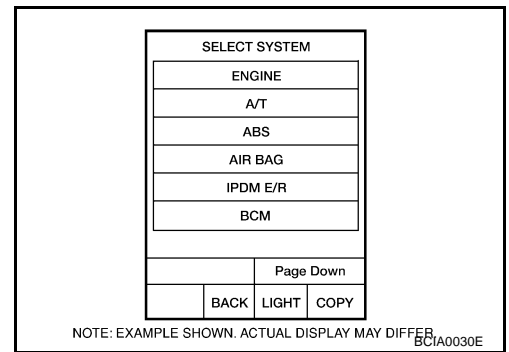

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

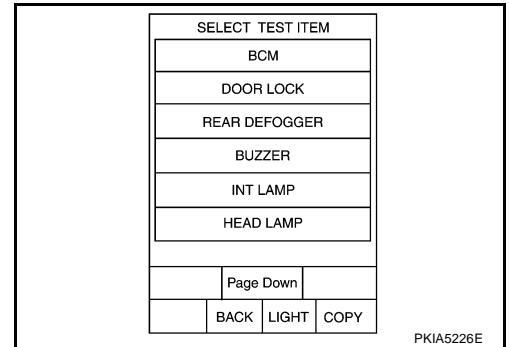

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SET".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between two ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects items and monitors them.

4. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
5. Touch "START".
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

HEADLAMP -CONVENTIONAL TYPE-

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 1 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1 ST "ON/OFF"	Displays status (lighting switch 1ST or 2ND position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW - DR "ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS "ON/OFF"	Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RL "ON/OFF"	Displays status of the rear door as judged from the passenger door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW ^{NOTE} "OFF"	—
OPTICAL SENSOR "0 - 5V"	Displays "outside brightness (close to 5V when light/close to 0V when dark)" judged from optical sensor signal.

NOTE:

This item is displayed, but cannot be monitored.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CORNERING LAMP ^{NOTE}	—

NOTE:

This item is displayed, but cannot be tested.

HEADLAMP -CONVENTIONAL TYPE-

CONSULT-II Functions (IPDM E/R)

AKS00CRB

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


Diagnosis Mode	Description
SELF-DIAGNOSTIC RESULTS	Refer to PG-20, "SELF-DIAG RESULTS" .
DATA MONITOR	The input/output data of IPDM E/R is displayed in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	IPDM E/R sends a drive signal to electronic components to check their operation.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn the ignition switch ON.

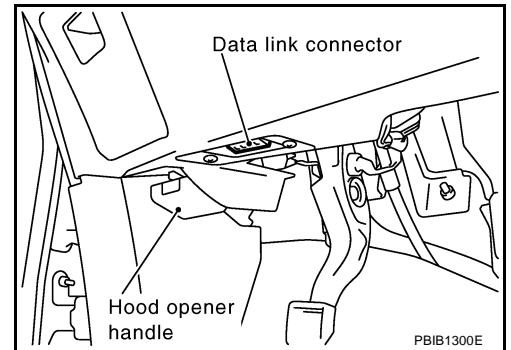

2. Touch "START (NISSAN BASED VHCL)".

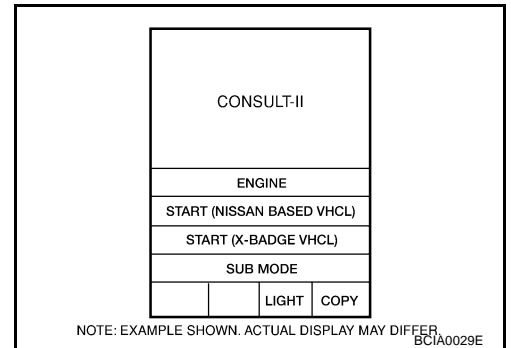


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen.
If "IPDM E/R" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

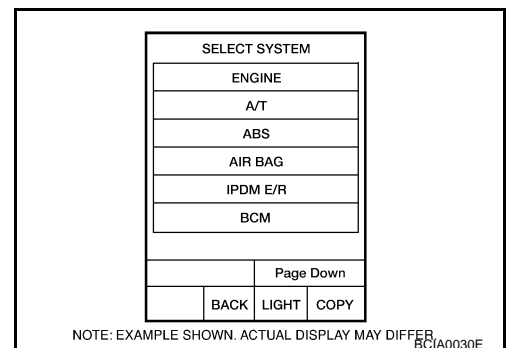

HEADLAMP -CONVENTIONAL TYPE-

- Select the desired part to be diagnosed on "SELECT SYSTEM" screen.

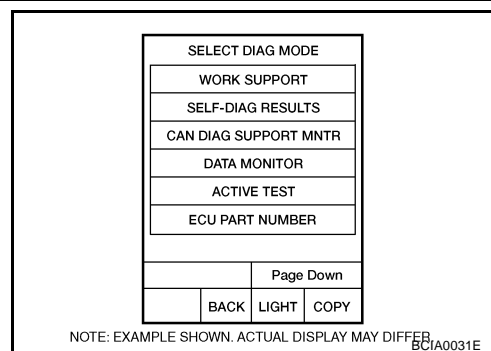

DATA MONITOR

Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS", or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all items.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Selects items and monitors them.

- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "START".
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Signals, Main Signals, Selection From Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Position lights request	TAIL & CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Font fog lights request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch item to be tested, and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI ON, LO ON) at your option. (Headlamp high beam repeats ON-OFF every 1 second.)
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.

HEADLAMP -CONVENTIONAL TYPE-

Headlamp High Beam Does Not Illuminate (Both Side)

AKS00AKG

1. CHECK COMBINATION SWITCH INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is HIGH BEAM position : HI BEAM SW ON

⊗ Without CONSULT-II

Refer to [LT-145, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check combination switch (lighting switch). Refer to [LT-145, "Combination Switch Inspection"](#) .

DATA MONITOR			
MONITOR			
HI BEAM SW	ON		
		RECORD	
MODE	BACK	LIGHT	COPY

PKIA7585E

2. HEADLAMP ACTIVE TEST

④ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "HI" screen.
4. Make sure headlamp high beam operates.

Headlamp high beam should operate.

⊗ Without CONSULT-II

1. Start auto active test. Refer to [PG-23, "Auto Active Test"](#) .
2. Make sure headlamp high beam operates.

Headlamp high beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
LAMPS		OFF	
		HI	
LO		FOG	
MODE	BACK	LIGHT	COPY

SKIA5774E

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" and "HL HI REQ" turns ON when lighting switch is in HI position.

**When lighting switch is HIGH BEAM position : HL LO REQ ON
: HL HI REQ ON**

OK or NG

OK >> Replace IPDM E/R.

NG >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#) .

DATA MONITOR			
MONITOR			
HL LO REQ	ON		
HL HI REQ	ON		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY


SKIA5775E

HEADLAMP -CONVENTIONAL TYPE-

4. CHECK HEADLAMP INPUT SIGNAL

☑ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "HI" screen.
6. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connector and ground (Headlamp high beam repeats ON-OFF every 1 second).

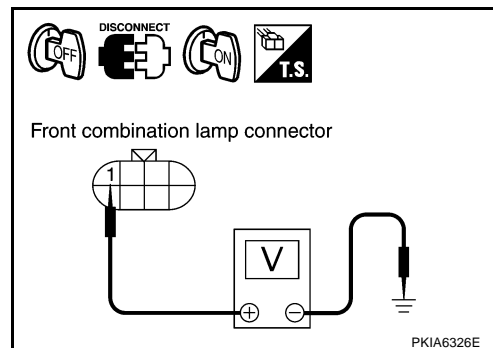

Terminal (+)			(-)	Voltage
Connector	Terminal (Wire color)			
RH	E30	1 (L/W)	Ground	Battery voltage
LH	E17	1 (G)		

☒ Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
4. When headlamp high beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

Terminal (+)			(-)	Voltage
Connector	Terminal (Wire color)			
RH	E30	1 (L/W)	Ground	Battery voltage
LH	E17	1 (G)		

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 27 (L/W) and front combination lamp RH harness connector E30 terminal 1 (L/W).

27 (L/W) – 1 (L/W) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E7 terminal 28 (G) and front combination lamp LH harness connector E17 terminal 1(G).

28 (G) – 1 (G) : Continuity should exist.

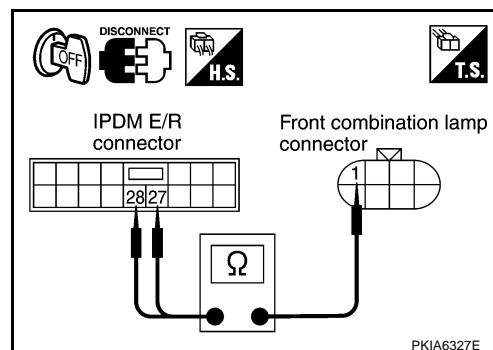

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.

HEADLAMP -CONVENTIONAL TYPE-

6. CHECK HEADLAMP GROUND

1. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.


5 (B/W) – Ground : Continuity should exist.

2. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> Check headlamp bulb.
- NG >> Repair harness or connector.

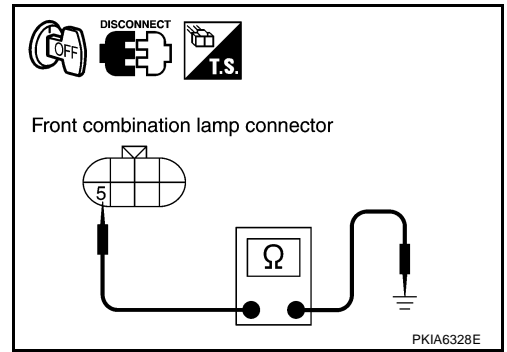

Headlamp High Beam Does Not Illuminate (One Side)

AKS00AKH

1. CHECK BULB

Check bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace headlamp bulb.


2. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH or LH connector.
3. Turn ignition switch ON.
4. Lighting switch is turned HIGH BEAM position.
5. Check voltage between front combination lamp RH or LH harness connector and ground.

Terminal		Terminal (Wire color)	(-)	Voltage
(+)				
Connector				
RH	E30	1 (L/W)	Ground	Battery voltage
LH	E17	1 (G)		

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

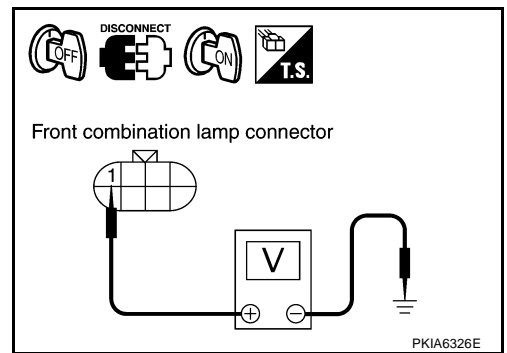

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP -CONVENTIONAL TYPE-


3. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 27 (L/W) and front combination lamp RH harness connector E30 terminal 1 (L/W).

27 (L/W) – 1 (L/W) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E7 terminal 28 (G) and front combination lamp LH harness connector E17 terminal 1 (G).

28 (G) – 1 (G) : Continuity should exist.

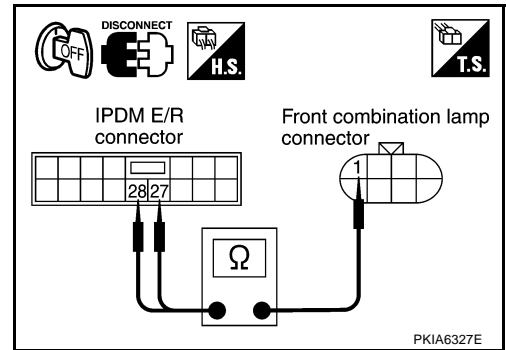

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.

4. CHECK HEADLAMP GROUND

1. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.


5 (B/W) – Ground : Continuity should exist.

2. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> Check headlamp harness and connector.
 NG >> Repair harness or connector.

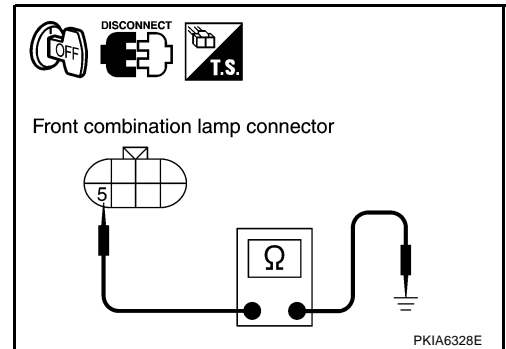

High Beam Indicator Lamp Does Not Illuminate

1. CHECK BULB

Check bulb of high beam indicator lamp.

OK or NG

- OK >> Replace combination meter.
 NG >> Replace indicator bulb.

Headlamp Low Beam Does Not Illuminate (Both Sides)

1. CHECK COMBINATION SWITCH INPUT SIGNAL

☑ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is 2ND position : HEAD LAMP SW 1 ON
 : HEAD LAMP SW 2 ON**

☒ Without CONSULT-II

Refer to [LT-145, "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 2.
 NG >> Check combination switch (lighting switch). Refer to [LT-145, "Combination Switch Inspection"](#).

DATA MONITOR			
MONITOR			
HEAD LAMP SW1	ON		
HEAD LAMP SW2	ON		
RECORD			
MODE	BACK	LIGHT	COPY

HEADLAMP -CONVENTIONAL TYPE-

2. HEADLAMP ACTIVE TEST

☑ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST" ITEM screen.
3. Touch "LO" screen.
4. Make sure headlamp low beam operates.

Headlamp low beam should operate.

☒ Without CONSULT-II

1. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
2. Make sure headlamp low beam operates.

Headlamp low beam should operate.

OK or NG

- OK >> GO TO 3.
 NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is 2ND : HL LO REQ ON position

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).

ACTIVE TEST			
LAMPS		OFF	
		HI	
LO		FOG	
MODE	BACK	LIGHT	COPY

SKIA5774E

DATA MONITOR			
MONITOR			
HL LO REQ		ON	
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5780E


A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP -CONVENTIONAL TYPE-

4. CHECK HEADLAMP INPUT SIGNAL

④ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "LO" screen.
6. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

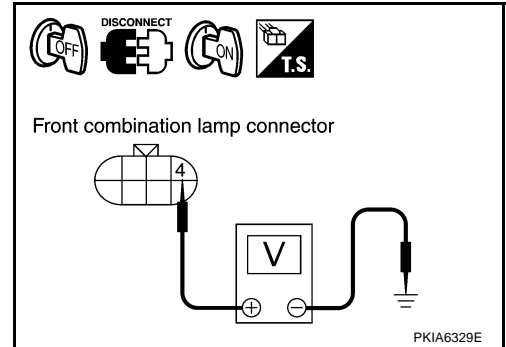

Terminal (+)			(-)	Voltage
Connector	Terminal (Wire color)			
RH	E30	4 (R/Y)	Ground	Battery voltage
LH	E17	4 (L)		

⊗ Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connector.
3. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
4. When headlamp low beam is operating, check voltage between front combination lamp RH and LH harness connector and ground.

Terminal (+)			(-)	Voltage
Connector	Terminal (Wire color)			
RH	E30	4 (R/Y)	Ground	Battery voltage
LH	E17	4 (L)		

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E7 terminal 20 (R/Y) and front combination lamp RH harness connector E30 terminal 4 (R/Y).

20 (R/Y) – 4 (R/Y) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E7 terminal 30 (L) and front combination lamp LH harness connector E17 terminal 4 (L).

30 (L) – 4 (L) : Continuity should exist.

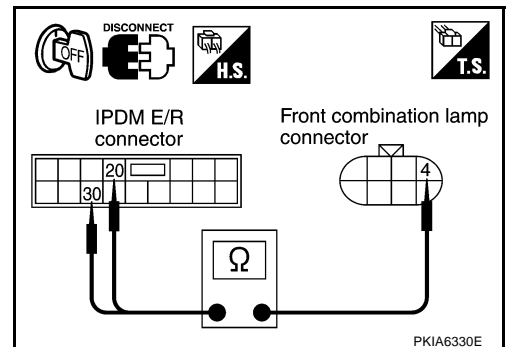

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.

HEADLAMP -CONVENTIONAL TYPE-

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.


5 (B/W) – Ground : Continuity should exist.

3. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> Check headlamp bulb.
- NG >> Repair harness or connector.

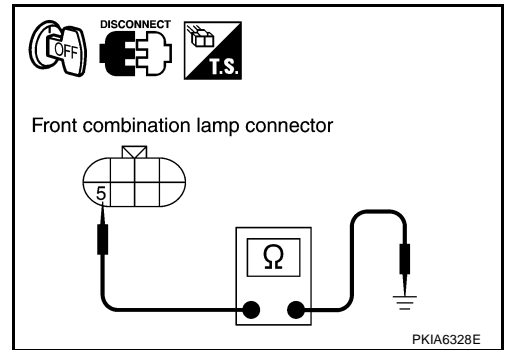

Headlamp Low Beam Does Not Illuminate (One Side)

AKS00AKK

1. CHECK BULB

Check bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Repair malfunctioning part.


2. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH or LH connector.
3. Turn ignition switch ON.
4. Lighting switch is turned 2ND position.
5. Check voltage between front combination lamp RH or LH harness connector and ground.

Terminal (+)			(-)	Voltage
Connector	Terminal (Wire color)			
RH	E30	4 (R/Y)	Ground	Battery voltage
LH	E17	4 (L)		

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

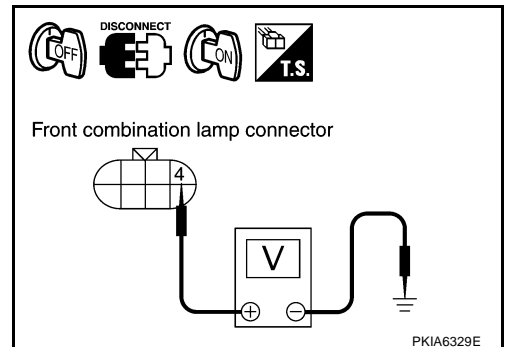

A
B
C
D
E
F
G
H
I
J
K
L
M

LT

HEADLAMP -CONVENTIONAL TYPE-


3. CHECK HEADLAMP CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector E7 terminal 20 (R/Y) and front combination lamp RH harness connector E30 terminal 4 (R/Y).

20 (R/Y) – 4 (R/Y) : Continuity should exist.

3. Check continuity between IPDM E/R harness connector E7 terminal 30 (L) and front combination lamp LH harness connector E17 terminal 4 (L).

30 (L) – 4 (L) : Continuity should exist.

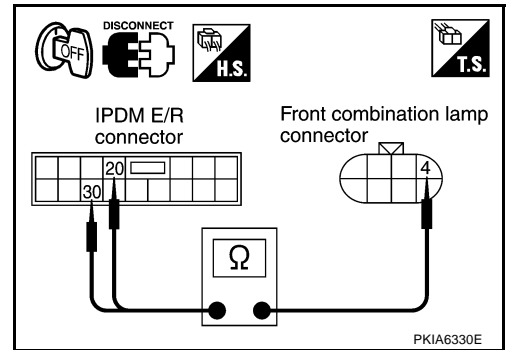

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness or connector.


4. CHECK HEADLAMP GROUND

1. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

2. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

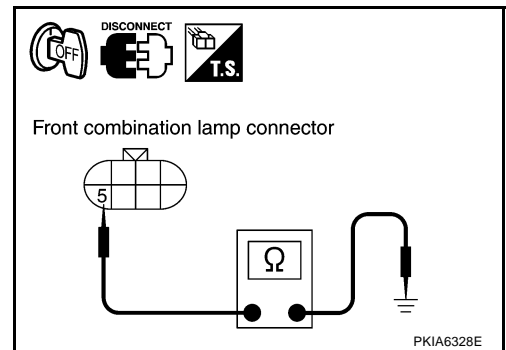

OK or NG

- OK >> Check headlamp harness and connector.
- NG >> Repair harness or connector.

Headlamp RH Low Beam and High Beam Do Not Illuminate

AKS00AKL

1. CHECK BULB

Check bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace headlamp bulb.


2. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH connector.
3. Check continuity between front combination lamp RH harness connector E30 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

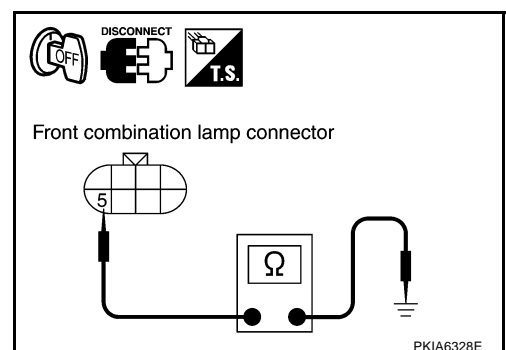


HEADLAMP -CONVENTIONAL TYPE-

3. CHECK HEADLAMP CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector E7 terminal 27 (L/W) and front combination lamp RH harness connector E30 terminal 1 (L/W).

27 (L/W) – 1 (L/W) : Continuity should exist.

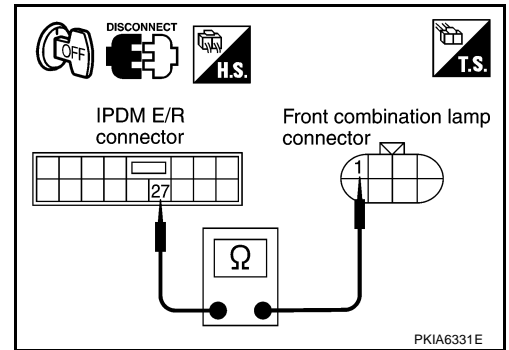


3. Check continuity between IPDM E/R harness connector E7 terminal 20 (R/Y) and front combination lamp RH harness connector E30 terminal 4 (R/Y).

20 (R/Y) – 4 (R/Y) : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness or connector.

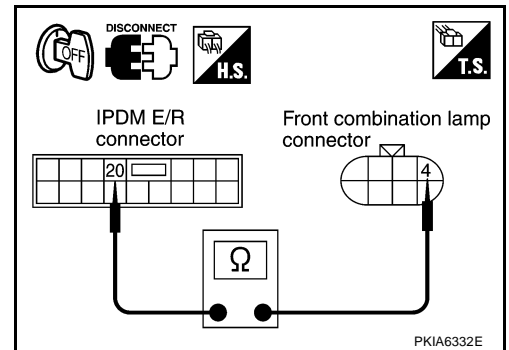

Headlamp LH Low Beam and High Beam Do Not Illuminate

1. CHECK BULB

Check bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace headlamp bulb.


2. CHECK HEADLAMP GROUND

1. Disconnect front combination lamp LH connector.
2. Check continuity between front combination lamp LH harness connector E17 terminal 5 (B/W) and ground.

5 (B/W) – Ground : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

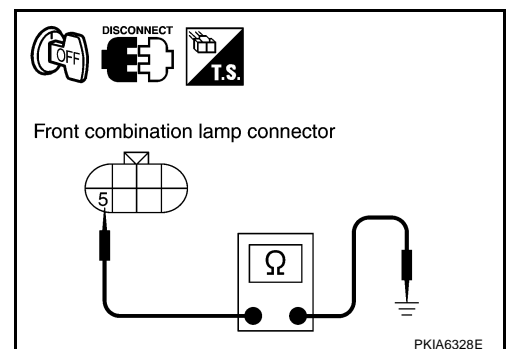


HEADLAMP -CONVENTIONAL TYPE-

3. CHECK HEADLAMP CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector E7 terminal 28 (G) and front combination lamp LH harness connector E17 terminal 1 (G).

28 (G) – 1 (G) : Continuity should exist.

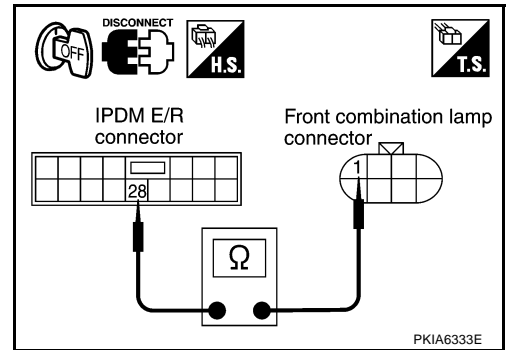

3. Check continuity between IPDM E/R harness connector E7 terminal 30 (L) and front combination lamp LH harness connector E17 terminal 4 (L).

30 (L) – 4 (L) : Continuity should exist.

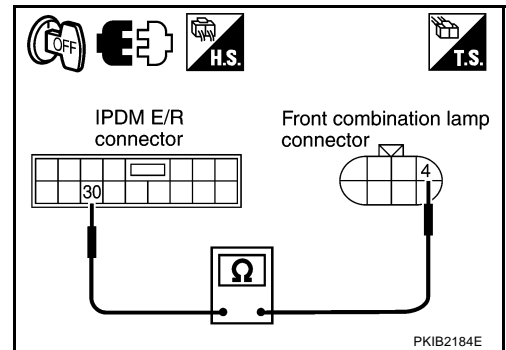

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness or connector.

Headlamps Do Not Turn OFF

1. CHECK HEADLAMP TURN OFF

Make sure that lighting switch is OFF. And make sure headlamps turns off when ignition switch is turned OFF.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turn ON-OFF linked with operation of lighting switch.

When lighting switch is OFF : HEAD LAMP SW 1 OFF position : HEAD LAMP SW 2 OFF

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Check combination lamp (lighting switch). Refer to [LT-145](#), "Combination Switch Inspection".

DATA MONITOR			
MONITOR			
HEAD LAMP SW1	OFF		
HEAD LAMP SW2	OFF		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

PKIA7588E

HEADLAMP -CONVENTIONAL TYPE-

3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-II, and perform self-diagnosis for "BCM".

Display of self-diagnosis results

NO DTC>> Replace IPDM E/R.


CAN COMM CIRCUIT>> Refer to [BCS-15, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]			
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

PKIA7627E

Aiming Adjustment

AKS00AKO

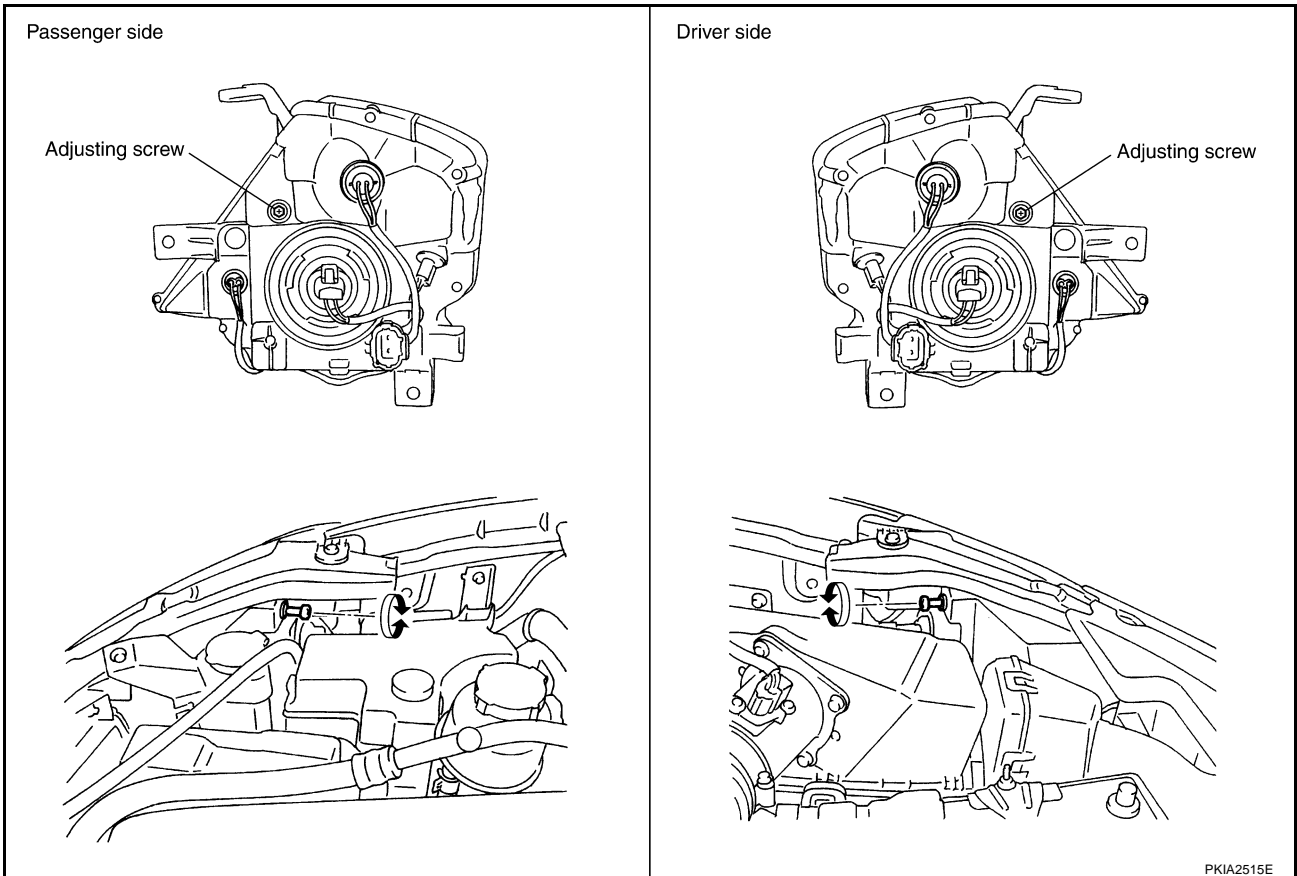

PREPARATION BEFORE ADJUSTING

For Details, Refer To the Regulations In Your Own Country.

Before performing aiming adjustment, check the following.


1. Keep all tires inflated to correct pressures.
2. Place vehicle on flat surface.
3. Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank.

LOW BEAM AND HIGH BEAM

1. Turn headlamp low beam ON.
2. Use adjusting screws to perform aiming adjustment.

HEADLAMP -CONVENTIONAL TYPE-

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

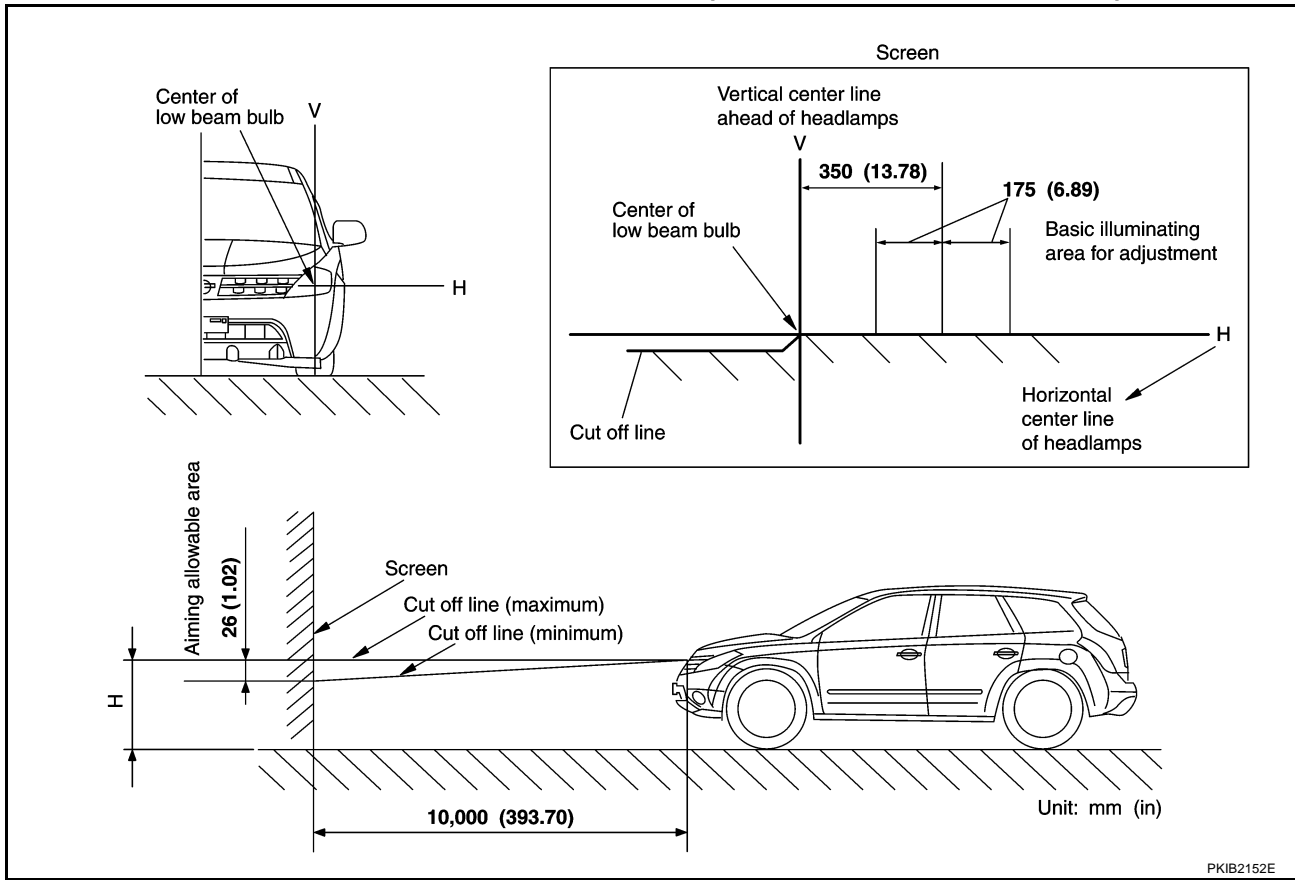

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

- Basic illumination area for adjustment should be within the range shown on the aiming chart. Adjust headlamp accordingly.

Bulb Replacement HEADLAMP HIGH/LOW BEAM

AKS00AKP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-22, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn plastic cap counterclockwise and unlock it.
4. Disconnect bulb terminal.
5. Unlock retaining spring and remove bulb from headlamp.
6. Installation is the reverse order of removal.

Headlamp high/low beam (Halogen) : 12V - 65/55W (HB5)

HEADLAMP -CONVENTIONAL TYPE-

PARKING LAMP (CLEARANCE LAMP)

1. Turn lighting switch OFF.
2. Remove air cleaner case (when replacing LH bulb). Refer to [EM-16, "AIR CLEANER AND AIR DUCT"](#) in "EM" section.
3. Remove IPDM E/R (when replacing RH bulb). Refer to [PG-29, "Removal and Installation of IPDM E/R"](#) in "PG" section.
4. Turn bulb socket counterclockwise and unlock it.
5. Remove bulb from its socket.
6. Installation is the reverse order of removal.

Parking lamps (Clearance lamps) : 12V - 3.8W

FRONT TURN SIGNAL LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-22, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Installation is the reverse order of removal.

Front turn signal lamp : 12V - 21W (amber)

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.

FRONT SIDE MARKER LAMP

1. Turn lighting switch OFF.
2. Remove fender protector (front). Refer to [EI-22, "FENDER PROTECTOR"](#) in "EI" section.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.
5. Installation is the reverse order of removal.

Front side marker lamp : 12V - 3.8W


CAUTION:

After installing bulb, be sure to install plastic cap and socket securely to insure watertightness.

Removal and Installation

REMOVAL

1. Remove front bumper. Refer to [EI-14, "FRONT BUMPER"](#) in "EI" section.
2. Remove headlamp mounting bolts.
3. Remove plastics bumper bracket, then pull headlamp toward vehicle front, disconnect connector, and remove headlamp.

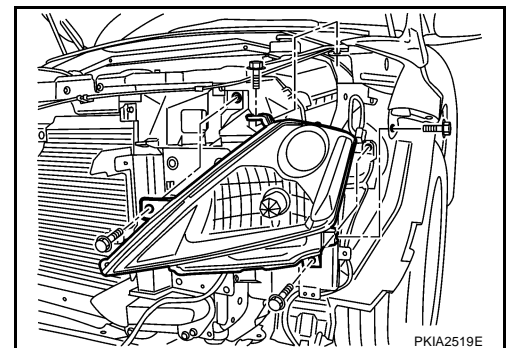

INSTALLATION

Installation is the reverse order of removal.

Headlamp mounting bolt  : 5.1N·m (0.52 kg·m, 45 in·lb)


NOTE:

After installation, perform aiming adjustment. Refer to [LT-65, "Aiming Adjustment"](#).

HEADLAMP -CONVENTIONAL TYPE-

Disassembly and Assembly

AKS00AKR

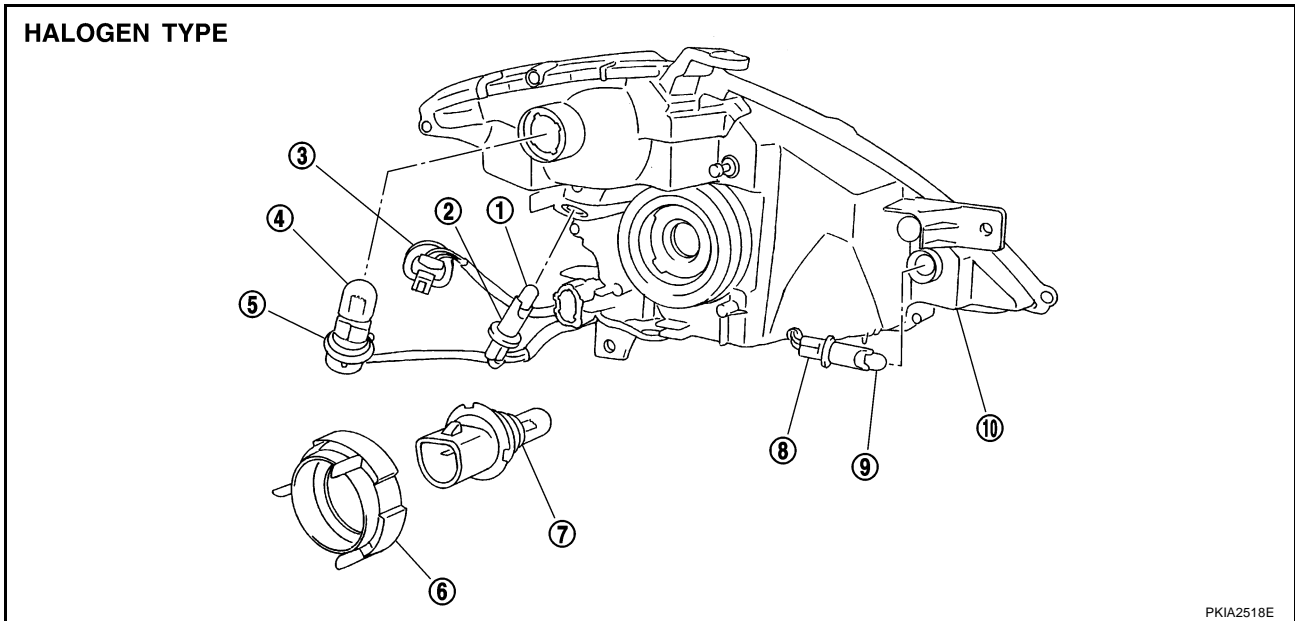

- | | | |
|--------------------------------|---------------------------------------|---------------------------|
| 1. Side marker lamp bulb | 2. Side marker lamp bulb socket | 3. Halogen bulb connector |
| 4. Front turn signal lamp bulb | 5. Front turn signal lamp bulb socket | 6. Plastic holder |
| 7. Halogen bulb | 8. Parking lamp bulb socket | 9. Parking lamp bulb |
| 10. Headlamp housing assembly | | |

DISASSEMBLY

1. Disconnect the connector to the halogen bulb (high/low).
2. Turn plastic holder counterclockwise and unlock it.
3. Disconnect bulb socket.
4. Unlock retaining spring, and remove halogen bulb (high/low).
5. Turn parking lamp bulb socket counterclockwise and unlock it.
6. Remove parking lamp bulb from its socket.
7. Turn front turn signal lamp bulb socket counterclockwise and unlock it.
8. Remove front turn signal lamp bulb from its socket.
9. Turn front side marker lamp bulb socket counterclockwise and unlock it.
10. Remove front side lamp marker lamp bulb from its socket.

ASSEMBLY

Assembly is the reverse order of disassembly.

CAUTION:

- After installing bulb, be sure to install plastic cap and bulb socket securely to insure watertightness.


DAYTIME LIGHT SYSTEM

PFP:284B2

DAYTIME LIGHT SYSTEM

Component Parts and Harness Connector Location

AKS007NE

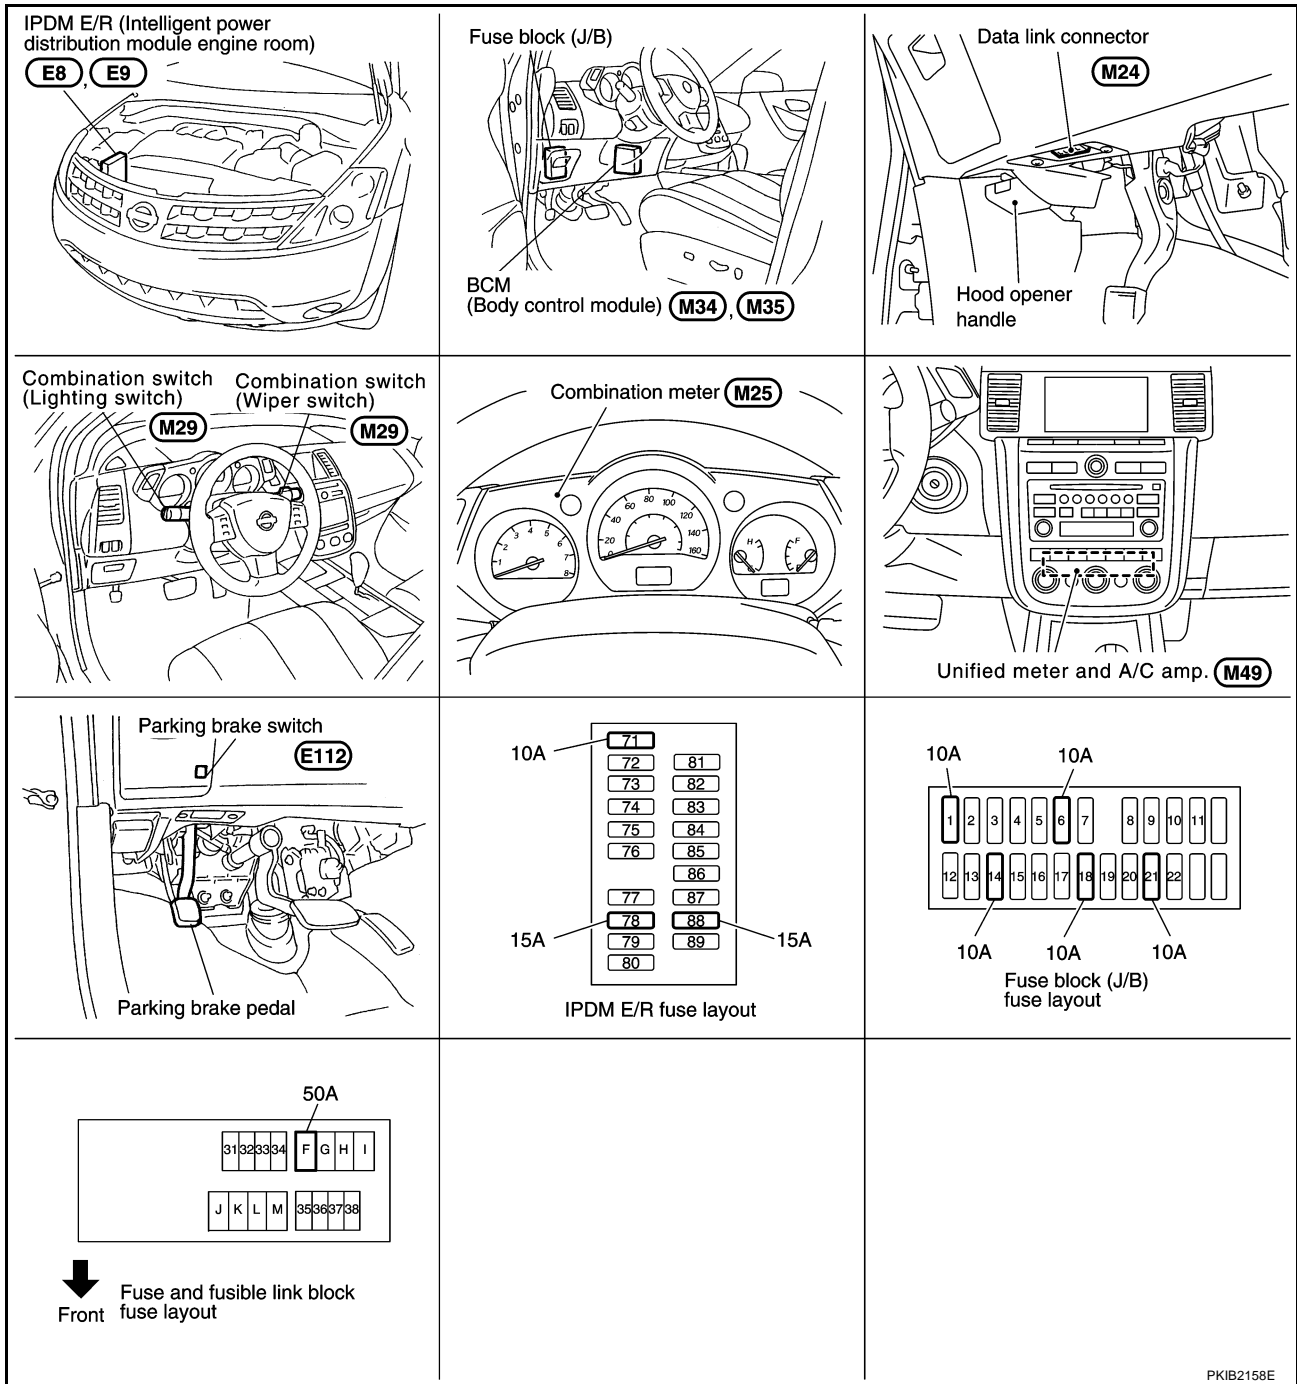

PKIB2158E

System Description

AKS007NF

Daytime light system turns ON daytime light lamps (front fog lamps) while driving. Daytime light lamps are not turned ON if engine is activated with parking brake ON. Release parking brake to turn on daytime light lamps. The lamps turn OFF when lighting switch is in the 2ND position or AUTO position (headlamp is ON) and when lighting switch is in the PASSING position. (Daytime light lamps are not turned off only by parking brake itself.) A parking brake signal and engine run or stop signal are sent to BCM (body control module) by CAN communication line, and control daytime light system.

OUTLINE

Power is supplied at all times

- to ignition relay, located in IPDM E/R (intelligent power distribution module engine room), from battery direct,

A
B
C
D
E
F
G
H
I
J
LT
L
M

DAYTIME LIGHT SYSTEM

- through 15A fuse (No. 88, located in IPDM E/R)
- to front fog lamp relay located in IPDM E/R,
- through 10A fuse (No. 71, located in IPDM E/R)
- to CPU (central processing unit) located in IPDM E/R,
- through 15A fuse (No. 78, located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 50A fusible link (letter F, located in fuse and fusible link block)
- to BCM terminal 55,
- through 10A fuse [No. 18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 10A fuse [No. 21, located in fuse block (J/B)]
- to combination meter terminal 21.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in IPDM E/R, from battery direct,
- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38,
- through 10A fuse [No. 14, located in fuse block (J/B)]
- to combination meter terminal 20.

When the ignition switch is in ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds E13, E26 and E28,
- to IPDM E/R terminals 38 and 60
- through grounds E13, E26 and E28,
- to combination meter terminals 22, 23 and 24
- through grounds M14 and M78.

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, the CPU located in the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay then directs power

- through IPDM E/R terminal 37
- to front fog lamp LH terminal 1,
- through IPDM E/R terminal 36
- to front fog lamp RH terminal 1.

Ground is supplied

- to front fog lamp LH terminal 2
- through grounds E13, E26 and E28,
- to front fog lamp RH terminal 2
- through grounds E13, E26 and E28.

With power and grounds supplied, the front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

With the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the front fog lamps remain illuminated for 5 minutes, and then the front fog lamps are turned off.

Exterior lamp battery saver control made can be changed by the function setting of CONSULT-II.

DAYTIME LIGHT SYSTEM

AUTO LIGHT OPERATION

For auto light operation, refer to [LT-88, "System Description"](#) in "AUTO LIGHT SYSTEM".

CAN Communication System Description

AKS007NG

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS007QP

Refer to [LAN-29, "CAN Communication Unit"](#) .

A

B

C

D

E

F

G

H

I

J

LT


L

M

DAYTIME LIGHT SYSTEM

Schematic

AKS007NI

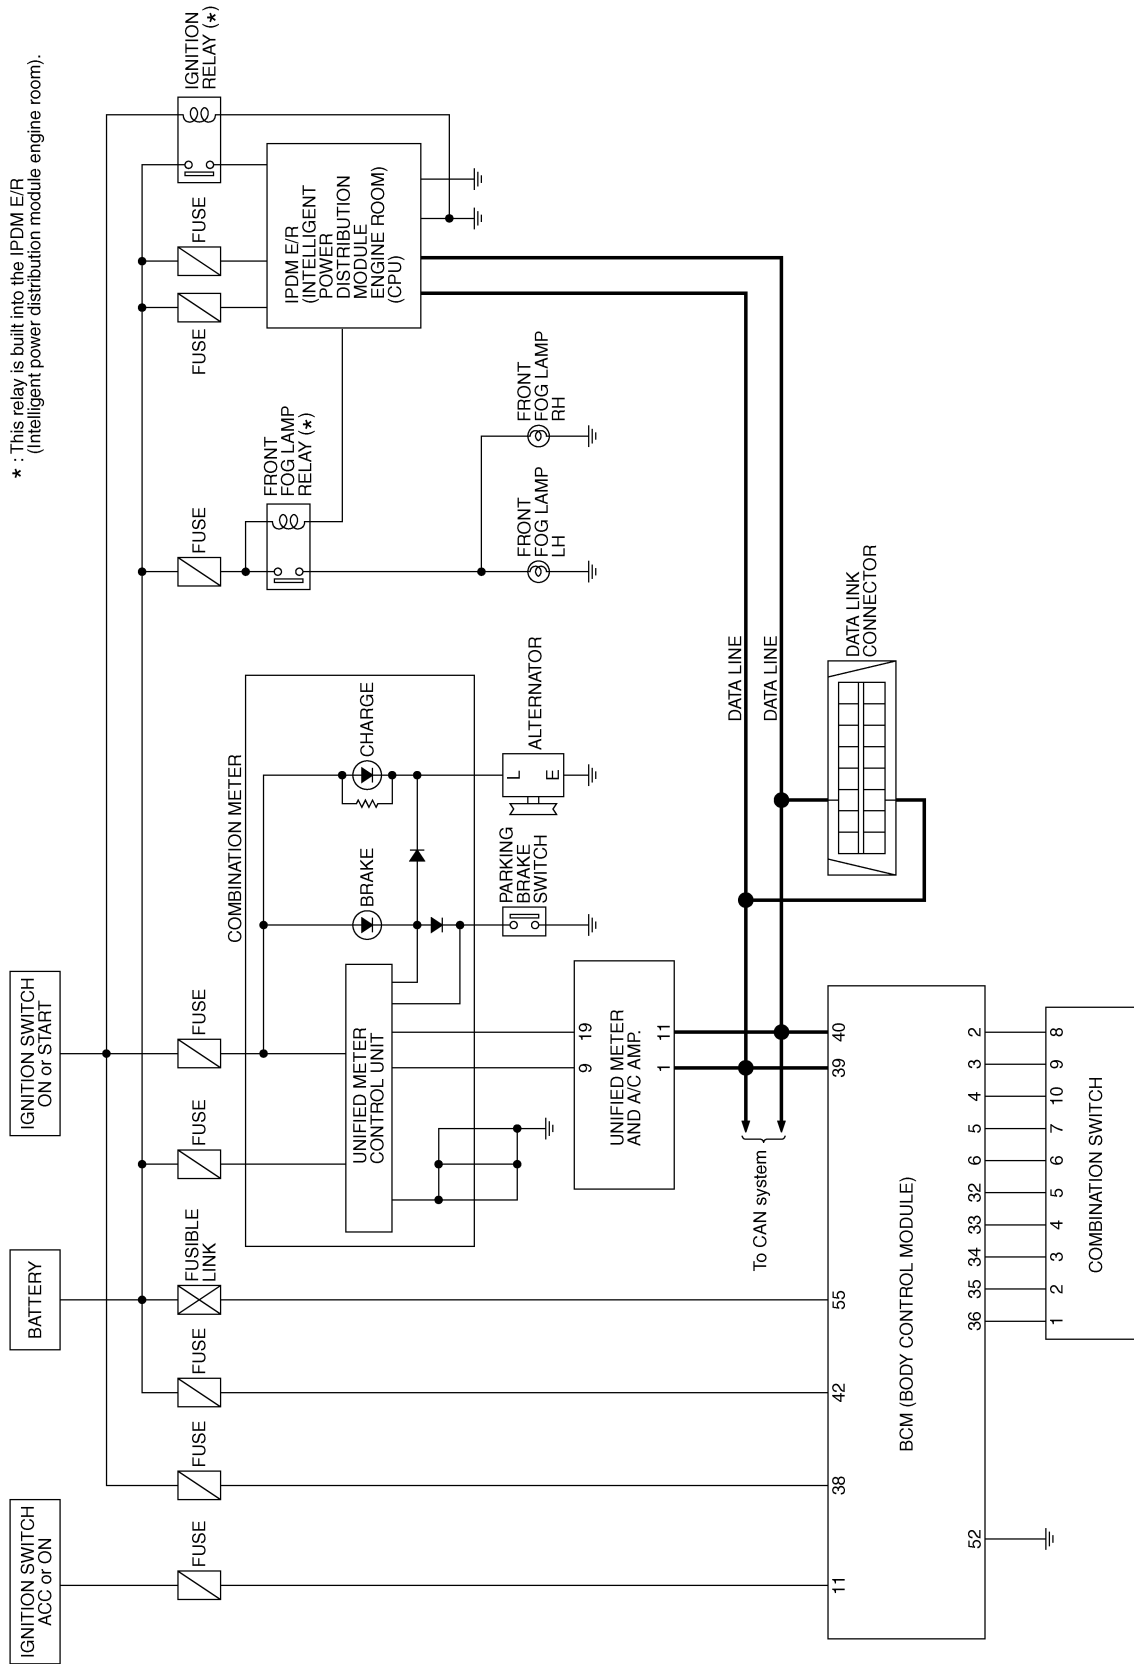

TKWB0446E







DAYTIME LIGHT SYSTEM

Wiring Diagram — DTRL —

AKS007NJ

LT-DTRL-01

▬ : DATA LINE

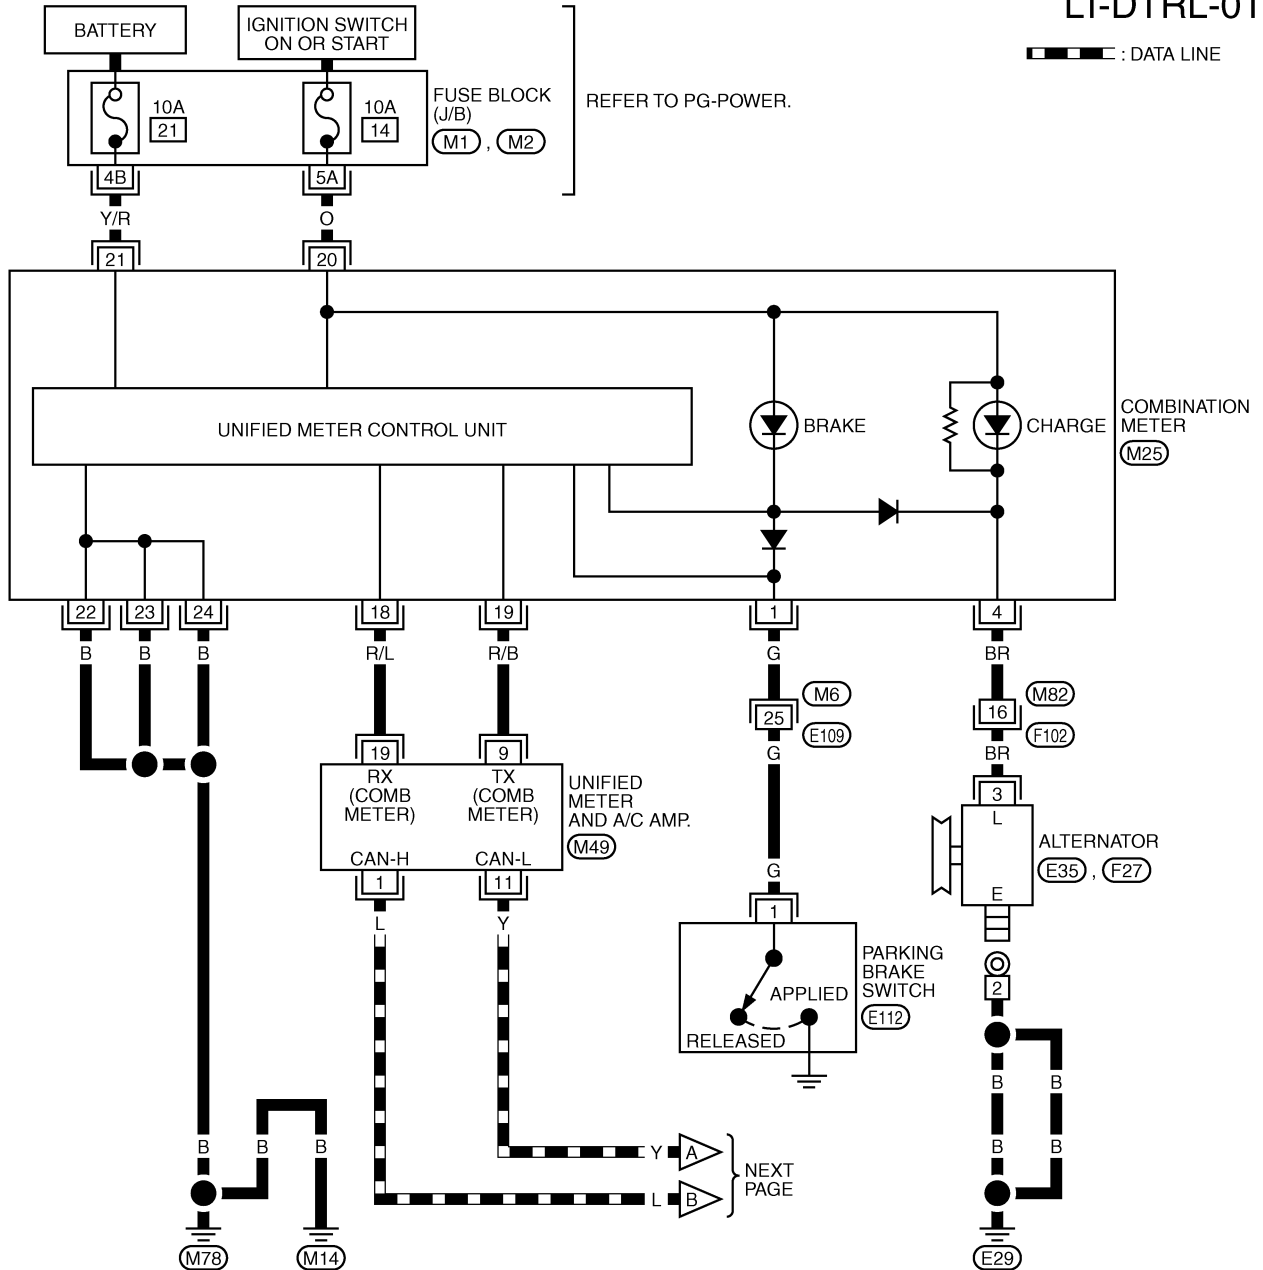

REFER TO THE FOLLOWING.

(M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)



A
B
C
D
E
F
G
H
I
J
K
L
M

LT

DAYTIME LIGHT SYSTEM

LT-DTRL-02

▬ : DATA LINE


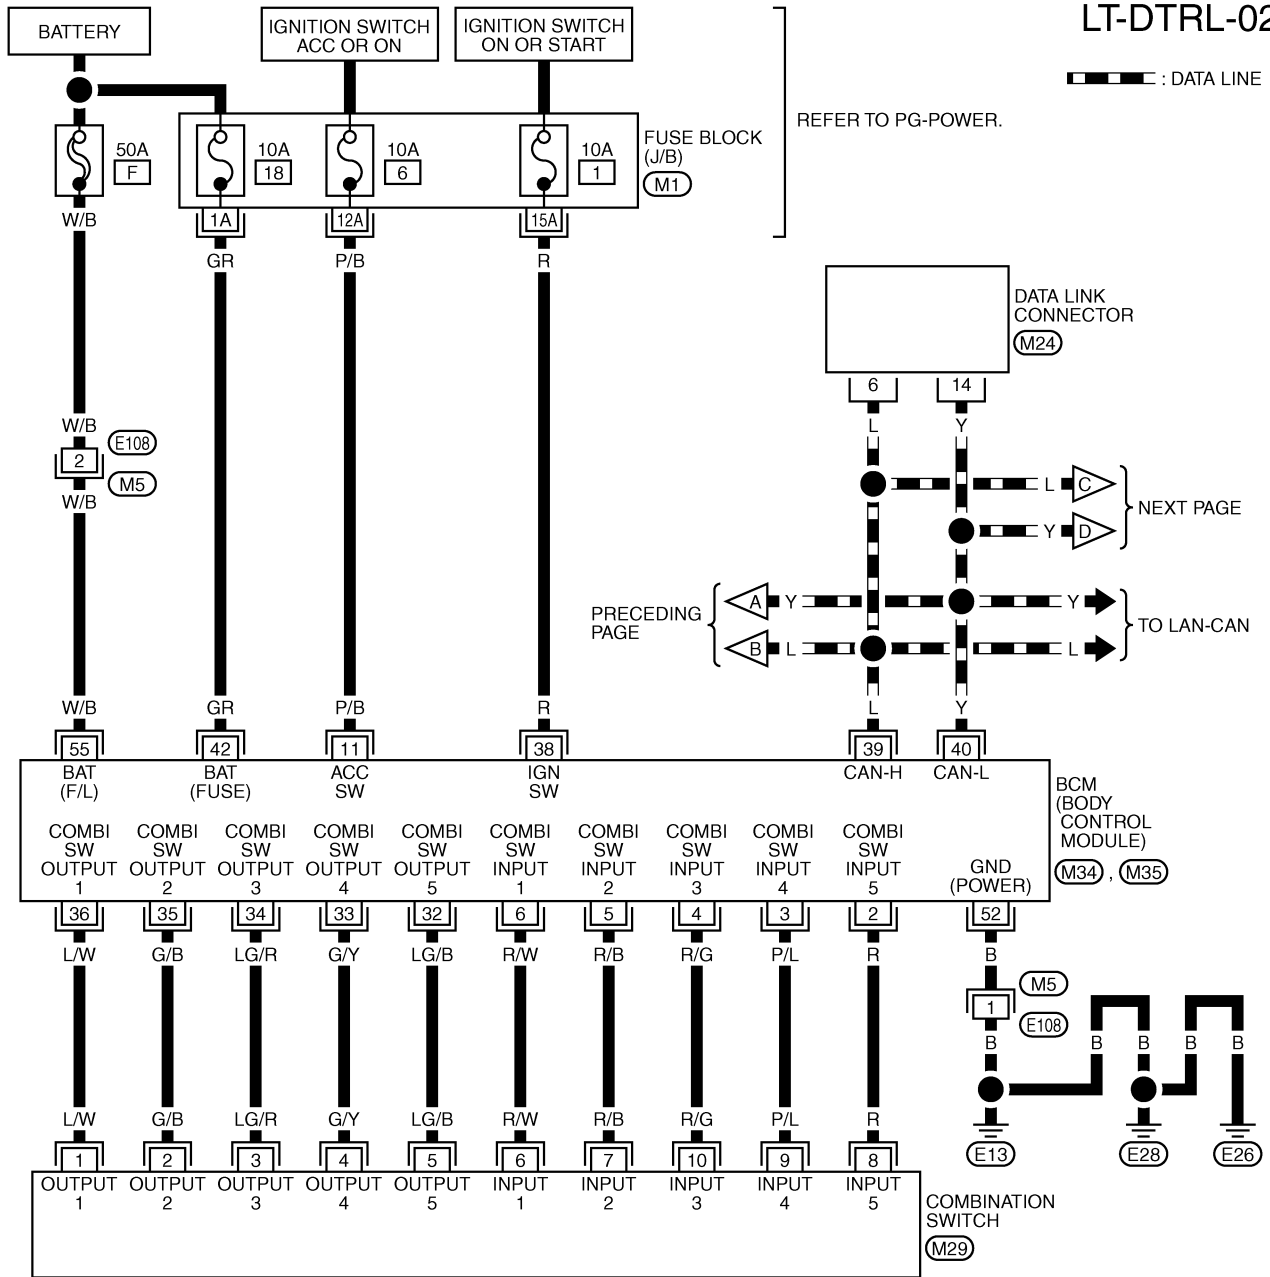


REFER TO THE FOLLOWING.
 (M1) - FUSE BLOCK-JUNCTION BOX (J/B)
 (M34), (M35) - ELECTRICAL UNITS

TKWB0448E

DAYTIME LIGHT SYSTEM

LT-DTRL-03

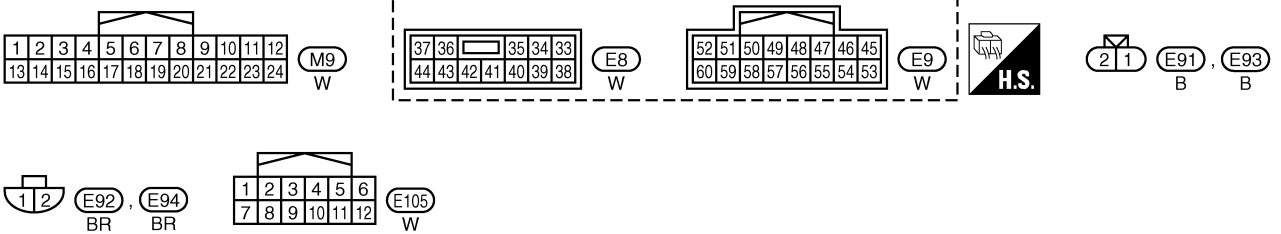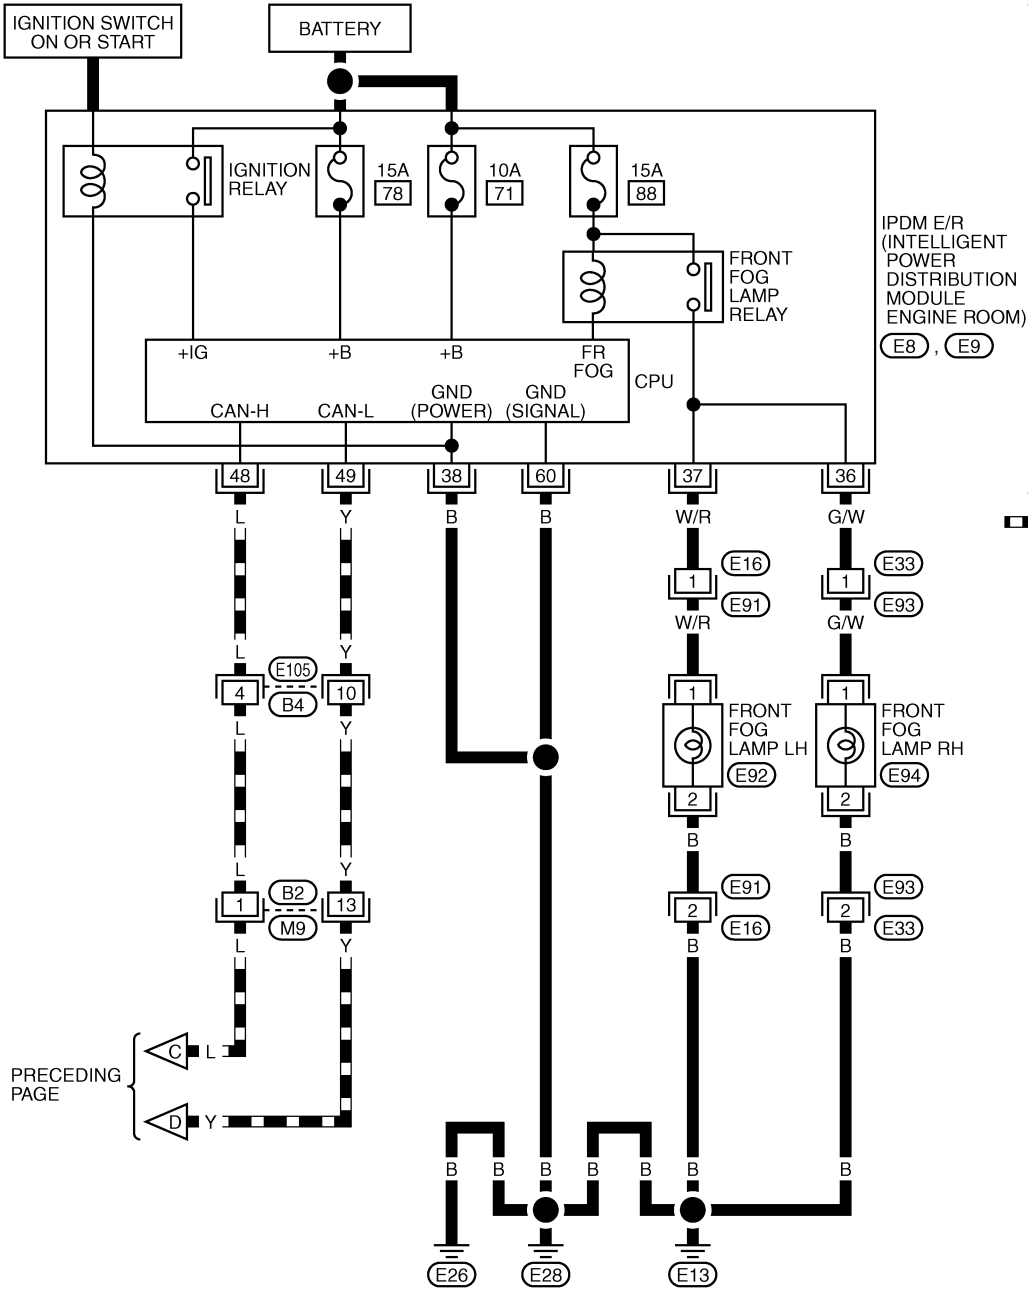

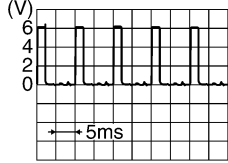
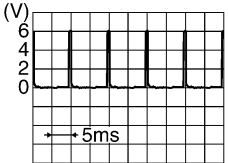
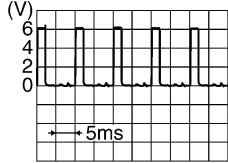
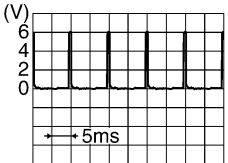
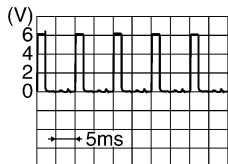


TKWB0449E

DAYTIME LIGHT SYSTEM

Terminals and Reference Values for BCM

AKS00AKT

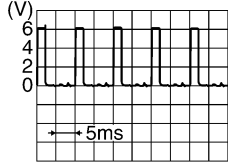Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
2	R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	P/L	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	R/G	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	R/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	R/W	Combination switch input 1			
11	P/B	Ignition switch (ACC)	ACC	—	Battery voltage
32	LG/B	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	G/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	LG/R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

DAYTIME LIGHT SYSTEM

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
35	G/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	L/W	Combination switch output 1			
38	R	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN – H	—	—	—
40	Y	CAN – L	—	—	—
42	GR	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0V
55	W/B	Battery power supply	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

AKS00AKU

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
36	G/W	Front fog lamp (RH)	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON.	OFF	Approx. 0V
					ON	Battery voltage
37	W/R	Front fog lamp (LH)	ON	Lighting switch must be in the 2ND position or AUTO position (LOW beam is ON) and the front fog lamp switch must be ON.	OFF	Approx. 0V
					ON	Battery voltage
38	B	Ground	ON	—	Approx. 0V	
48	L	CAN – H	—	—	—	
49	Y	CAN – L	—	—	—	
60	B	Ground	ON	—	Approx. 0V	

How to Proceed With Trouble Diagnosis

AKS00AKV

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-69. "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-78. "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

DAYTIME LIGHT SYSTEM

AKS00AKW

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown fuses.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	88

Refer to [LT-73, "Wiring Diagram — DTRL —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-3, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

Terminal		Ignition switch position			
Connector	(+)	(-)	OFF	ACC	ON
	Terminal (Wire color)				
M34	11 (P/B)	Ground	Approx. 0V	Battery voltage	Battery voltage
	38 (R)		Approx. 0V	Approx. 0V	Battery voltage
M35	42 (GR)		Battery voltage	Battery voltage	Battery voltage
	55 (W/B)		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

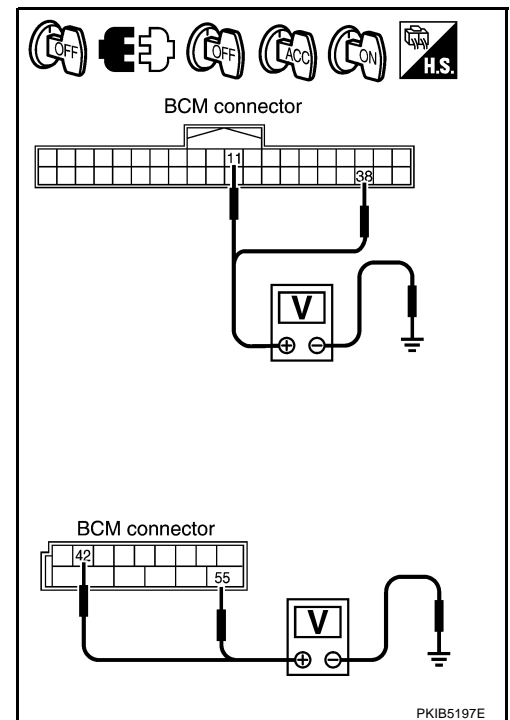

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

Terminal		Ground	Continuity
Connector	Terminal (Wire color)		
M35	52 (B)		Yes

OK or NG

OK >> INSPECTION END

NG >> Check ground circuit harness.

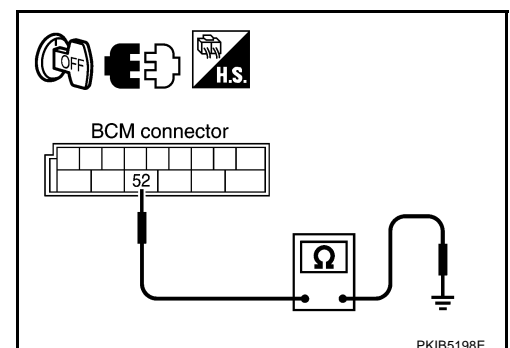

DAYTIME LIGHT SYSTEM

CHECK PARKING BRAKE SWITCH CIRCUIT

1. CHECK BRAKE INDICATOR

1. Turn ignition switch ON.
2. When parking brake is made ON/OFF, it checks whether the brake indicator lamp of combination meter lights up/puts out the light.

OK or NG

- OK >> INSPECTION END
 NG >> GO TO 2.


2. CHECK PARKING BRAKE SWITCH SIGNAL

1. Turn ignition switch ON.
2. Check voltage between parking brake switch harness connector and ground, when parking brake is released.

Terminal		(-)	Condition	Voltage
Parking brake switch (+)				
Connector	Terminal (Wire color)			
E112	1 (G)	Ground	Not released	Approx. 0V
			Released	Battery voltage

OK or NG

- OK >> GO TO 3
 NG >> Replace parking brake switch.

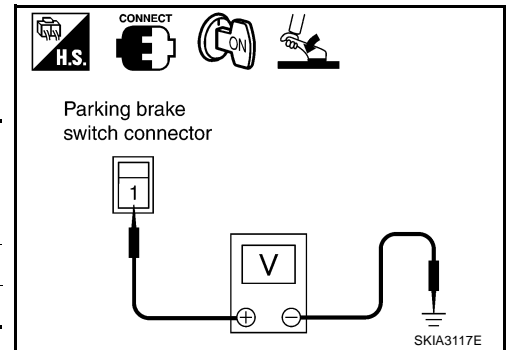


3. CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect parking brake switch connector and combination meter connector.
3. Check continuity between combination meter harness connector M25 terminal 1 (G) and parking brake switch harness connector E112 terminal 1 (G).

1 (G) – 1 (G) : Continuity should exist.

OK or NG

- OK >> INSPECTION END
 NG >> Repair harness or connector.

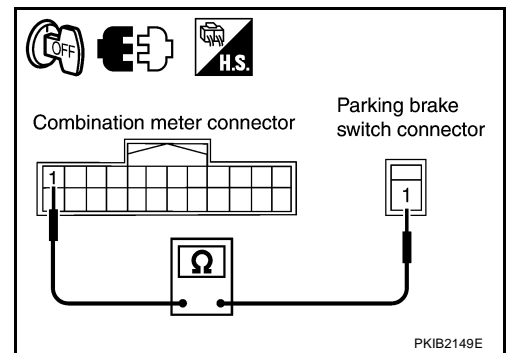

DAYTIME LIGHT SYSTEM

CONSULT-II Functions (BCM)

AKS00CRC

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnosis part	Diagnosis mode	Description
HEADLAMP	WORK SUPPORT	Changes the setting for each function.
	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
BCM	SELF-DIAG RESULTS	BCM performs self-diagnosis of CAN communication.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn ignition switch ON.

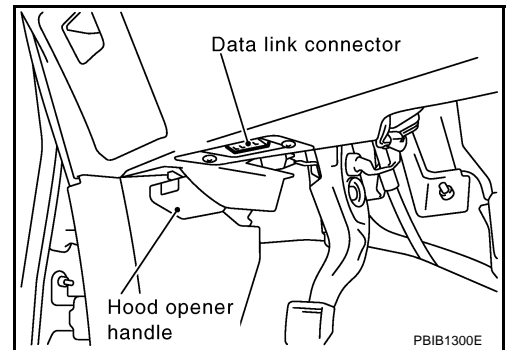

2. Touch "START (NISSAN BASED VHCL)".

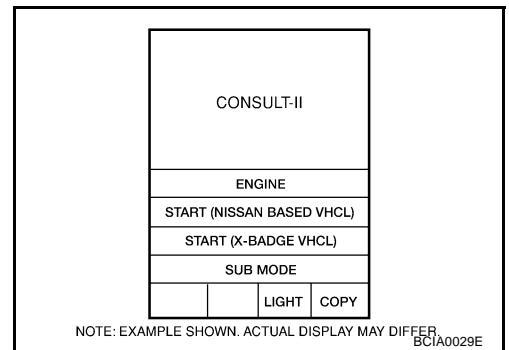


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

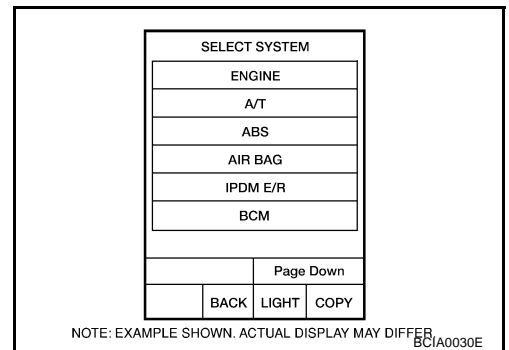

DAYTIME LIGHT SYSTEM

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

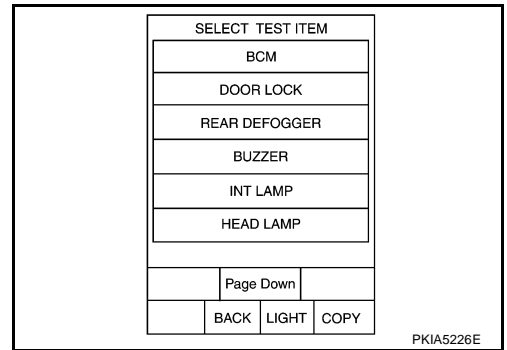

A
B
C
D
E
F
G
H
I
J
LT
L
M

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SET".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between two ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects items and monitors them.

4. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
5. Touch "START".
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 1 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1 ST "ON/OFF"	Displays status (lighting switch 1ST or 2ND position: ON/Others: OFF) of lighting switch judged from lighting switch signal.

DAYTIME LIGHT SYSTEM

Monitor item	Contents
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW - DR "ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS "ON/OFF"	Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RL "ON/OFF"	Displays status of the rear door as judged from the passenger door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW ^{NOTE} "OFF"	—
OPTICAL SENSOR "0 - 5V"	Displays "outside brightness (close to 5V when light/close to 0V when dark)" judged from optical sensor signal.

NOTE:

This item is displayed, but cannot be monitored.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CORNERING LAMP ^{NOTE}	—

NOTE:

This item is displayed, but cannot be tested.

DAYTIME LIGHT SYSTEM

CONSULT-II Functions (IPDM E/R)

AKS00CRD

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


Diagnosis Mode	Description
SELF-DIAGNOSTIC RESULTS	Refer to PG-20, "SELF-DIAG RESULTS" .
DATA MONITOR	The input/output data of IPDM E/R is displayed in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	IPDM E/R sends a drive signal to electronic components to check their operation.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn the ignition switch ON.

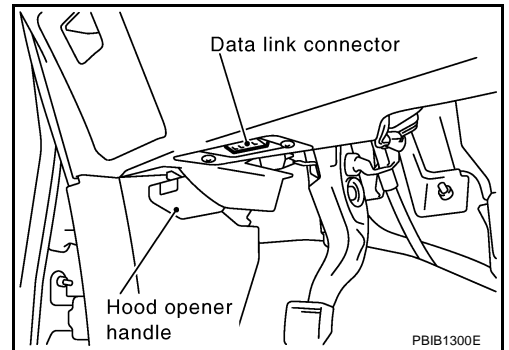

2. Touch "START (NISSAN BASED VHCL)".

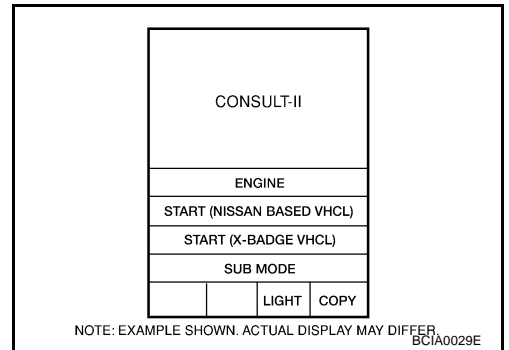


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

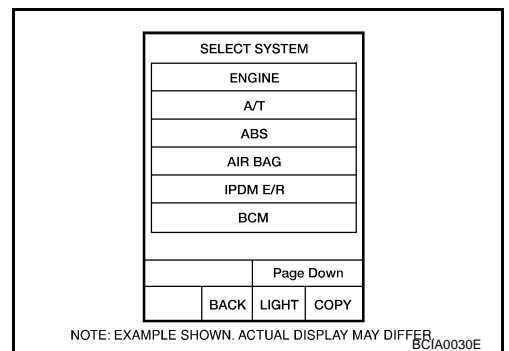

DAYTIME LIGHT SYSTEM

- Select the desired part to be diagnosed on "SELECT SYSTEM" screen.

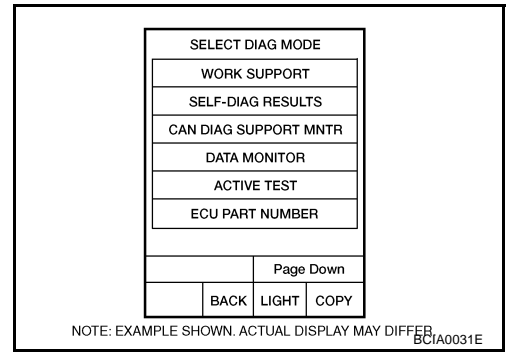

DATA MONITOR

Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS", or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all items.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Selects items and monitors them.

- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "START".
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Signals, Main Signals, Selection From Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Position lights request	TAIL & CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Front fog lights request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch item to be tested, and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI ON, LO ON) at your option. (Headlamp high beam repeats ON-OFF every 1 second.)
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.

DAYTIME LIGHT SYSTEM

AKS00AKZ

Daytime Light Control Does Not Operate Properly

1. FOG LAMP ACTIVE TEST

☑ With CONSULT-II


1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "FOG" screen.
4. Make sure fog lamp operates.

Fog lamp should operate.

☒ Without CONSULT-II

1. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
2. Make sure fog lamp operates.

Fog lamp should operate.

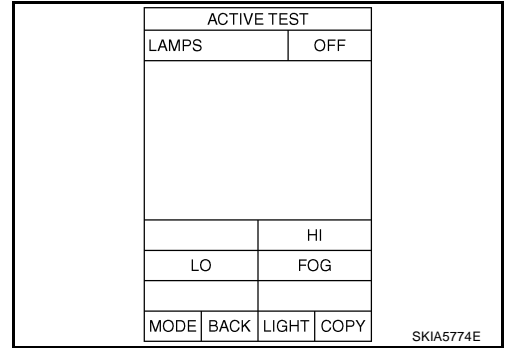


OK or NG

- OK >> GO TO 5.
 NG >> GO TO 2.

2. CHECK FRONT FOG LAMP INPUT SIGNAL

☑ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front fog lamp RH and LH connectors.
3. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "FOG" screen.
6. When fog lamp is operating, check voltage between front fog lamp RH and LH harness connector and ground.

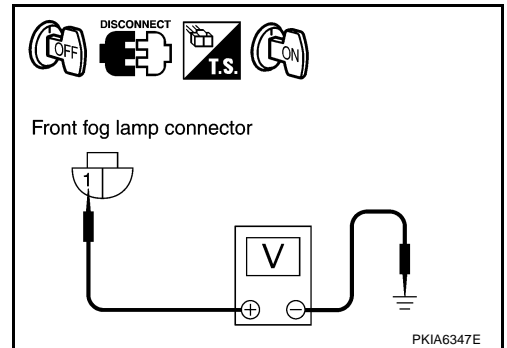

Terminal (+)			Terminal (-)	Voltage
Connector	Terminal (Wire color)			
RH	E94	1 (G/W)	Ground	Battery voltage
LH	E92	1 (W/R)		

☒ Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front fog lamp RH and LH connectors.
3. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
4. When fog lamp is operating, check voltage between front fog lamp RH and LH harness connectors and ground.

Terminal (+)			Terminal (-)	Voltage
Connector	Terminal (Wire color)			
RH	E94	1 (G/W)	Ground	Battery voltage
LH	E92	1 (W/R)		

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 3.

DAYTIME LIGHT SYSTEM


3. CHECK FRONT FOG LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E8 terminal 36 (G/W) and front fog lamp RH harness connector E94 terminal 1 (G/W).

36 (G/W) – 1 (G/W) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E8 terminal 37 (W/R) and front fog lamp LH harness connector E92 terminal 1 (W/R).

37 (W/R) – 1 (W/R) : Continuity should exist.

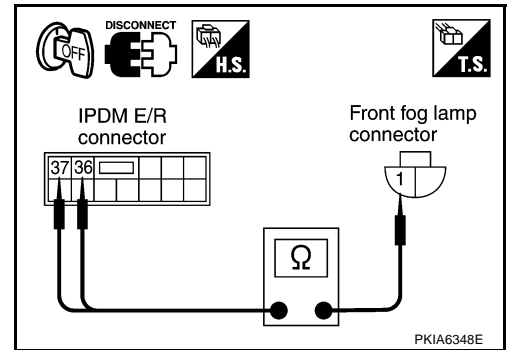

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness or connector.


4. CHECK FRONT FOG LAMP GROUND

1. Check continuity between front fog lamp RH harness connector E94 terminal 2 (B) and ground.

2 (B) – Ground : Continuity should exist.

2. Check continuity between front fog lamp LH harness connector E92 terminal 2 (B) and ground.

2 (B) – Ground : Continuity should exist.

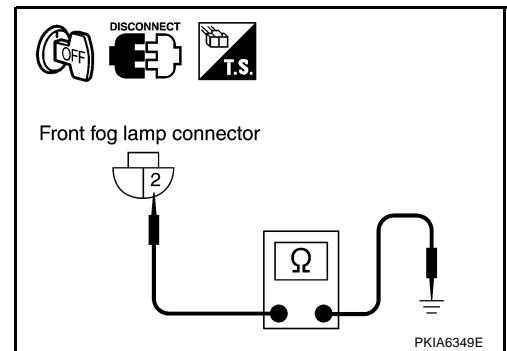

OK or NG

- OK >> Check front fog lamp bulbs.
- NG >> Repair harness or connector.

5. CHECK SELF-DIAGNOSIS

Select "BCM" on CONSULT-II, and self-diagnosis for "BCM".

Displayed results of self-diagnosis

No malfunction detected>> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#) .

CAN communications or CAN system>> Check BCM CAN communication system. Refer to [BCS-15, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) .

SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]			
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

Front Fog Lamp Does Not Illuminate (One Side)

1. CHECK BULB

Check bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace front fog lamp bulb.

DAYTIME LIGHT SYSTEM

2. CHECK FRONT FOG LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front fog lamp LH or RH connector.
3. Check continuity between IPDM E/R harness connector E8 terminal 36 (G/W) and front fog lamp RH harness connector E94 terminal 1 (G/W).

36 (G/W) – 1 (G/W) : Continuity should exist.


4. Check continuity between IPDM E/R harness connector E8 terminal 37 (W/R) and front fog lamp LH harness connector E92 terminal 1 (W/R).

37 (W/R) – 1 (W/R) : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

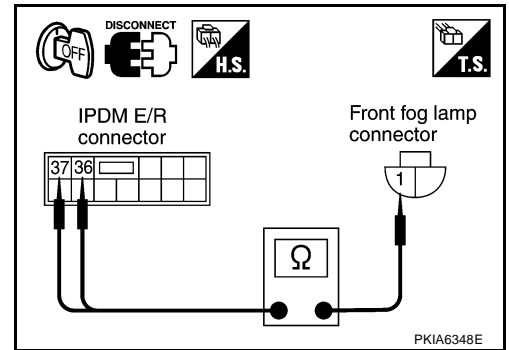

3. CHECK FRONT FOG LAMP GROUND

1. Check continuity between front fog lamp RH harness connector E94 terminal 2 (B) and ground.

2 (B) – Ground : Continuity should exist.


2. Check continuity between front fog lamp LH harness connector E92 terminal 2 (B) and ground.

2 (B) – Ground : Continuity should exist.

OK or NG

OK >> Replace IPDM E/R.

NG >> Repair harness or connector.

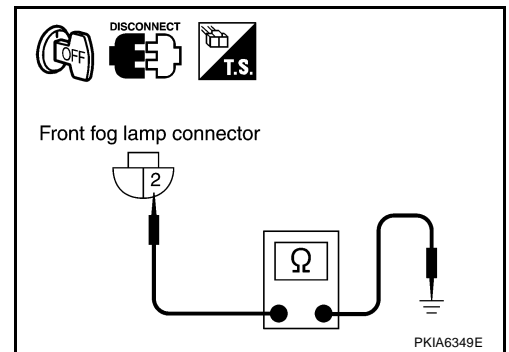

Aiming Adjustment

Refer to [LT-121, "Aiming Adjustment"](#) in "FRONT FOG LAMP".

Bulb Replacement

Refer to [LT-122, "Bulb Replacement"](#) in "FRONT FOG LAMP".

Removal and Installation

Refer to [LT-122, "Removal and Installation"](#) in "FRONT FOG LAMP".

AKS00A03

LT

AKS00A04

L

AKS00A05

M


AUTO LIGHT SYSTEM

AUTO LIGHT SYSTEM

PFP:28491

Component Parts and Harness Connector Location

AKS004JH

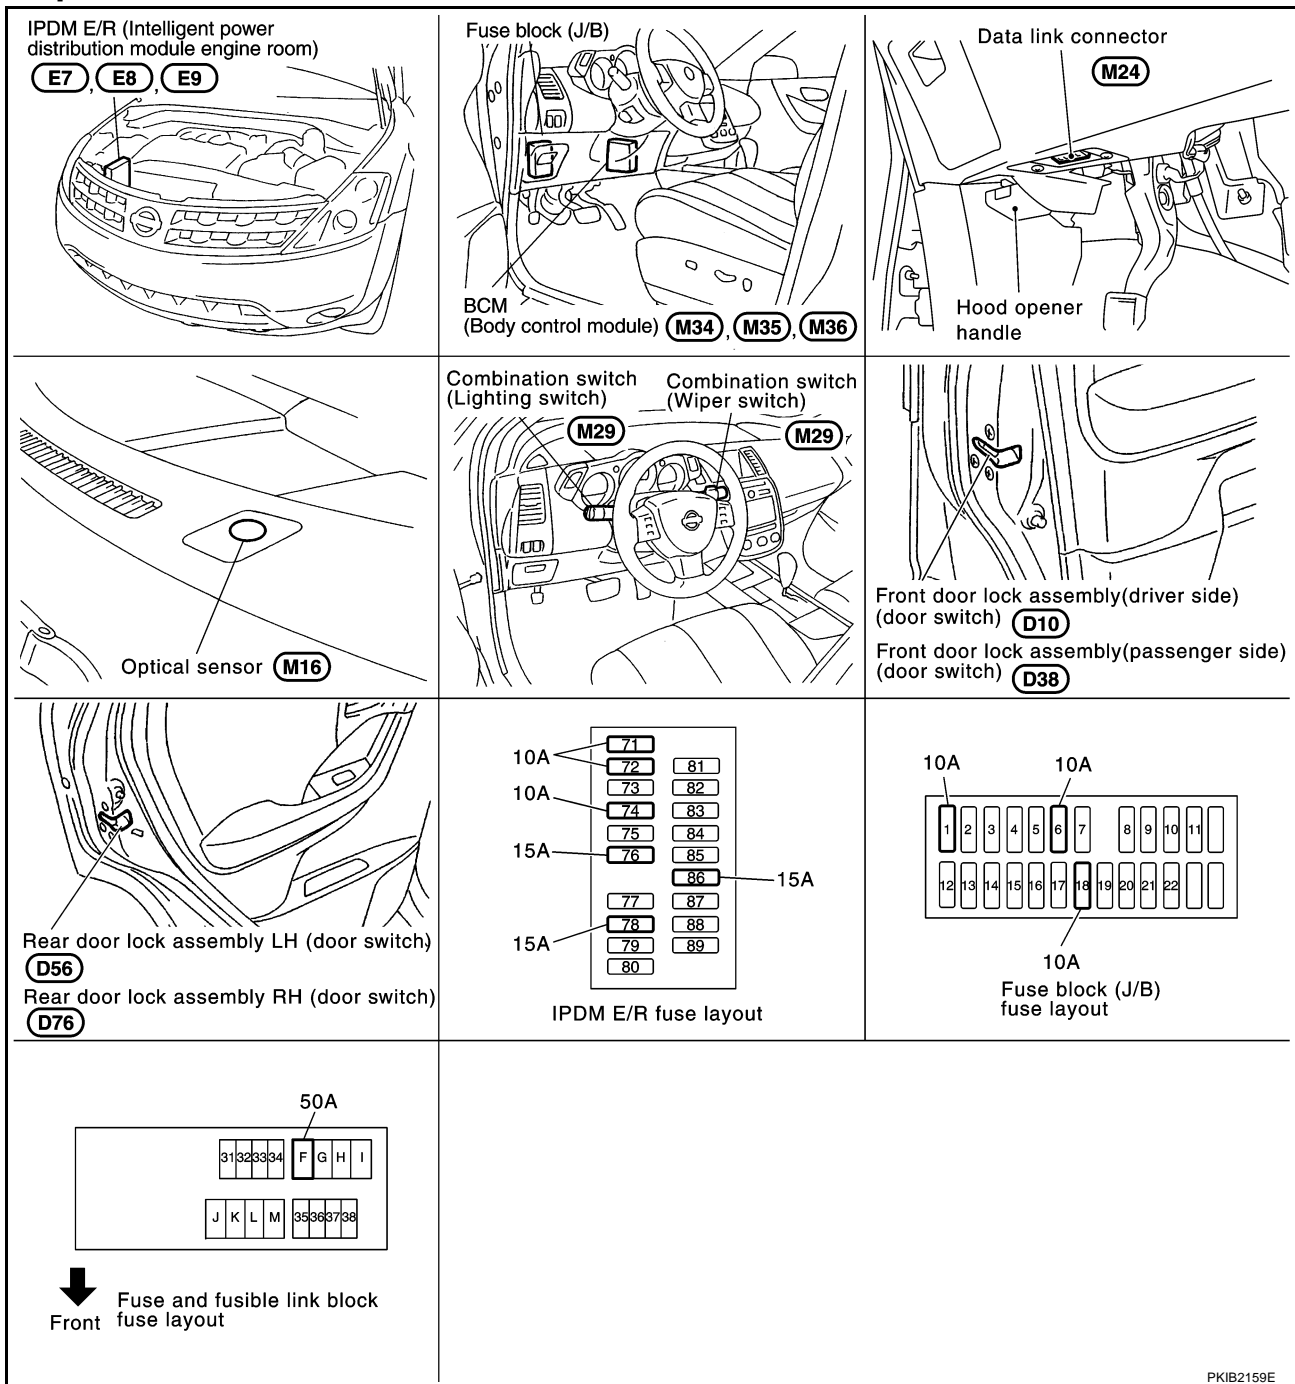

PKIB2159E

System Description

AKS004JI

Automatically turns ON/OFF the parking lamps and the headlamps in accordance with ambient light. Timing for when the lamps turn ON/OFF can be selected using four modes.

OUTLINE

The auto light control system has an optical sensor inside it that detects outside brightness. When the lighting switch is in AUTO position, it automatically turns ON/OFF the parking lamps and the headlamps in accordance with the ambient light. Sensitivity can be adjusted in four steps. For the details of the setting, Refer to [LT-96, "SETTING CHANGE FUNCTIONS"](#).

Optical sensor, power is supplied

- from BCM (body control module) terminal 17

AUTO LIGHT SYSTEM

- to optical sensor terminal 1.
- Optical sensor, ground is supplied
- to optical sensor terminal 3
 - through BCM terminal 18.

When ignition switch is turn to "ON" position, and

When outside brightness is darker than prescribed level, input is supplied

- from optical sensor terminal 2
- to BCM terminal 14.

The headlamps will then illuminate. For a description of headlamp operation, Refer to [LT-88, "System Description"](#).

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, and then the headlamps are turned off. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

DELAY TIMER FUNCTION

Delay timer function carries out a function that BCM activates the timer and controls lights out of headlamps by door switch signal and lightning switch signal when turning the Ignition switch OFF while it is ON and headlamps are ON by the auto light function.

Timer types are a 5-minute timer and a 45-second timer

- When opening any door (door switch is ON), the 5-minute timer starts and then headlamps go out five minutes later
- When all the doors are closed (from door switch ON to OFF), the 45-second timer starts and then headlamps go out forty-five seconds later. If any door is opened (door switch ON) while the 45-second timer is in operation, the 5-minute timer starts again
- The timer stops when turning on the ignition switch or turning off the auto light switch under the above conditions.

Delay timer control mode can be changed by the function setting of CONSULT-II or display.

CAN Communication System Description

AKS004JJ

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS007QR

Refer to [LAN-29, "CAN Communication Unit"](#).

Major Components and Functions


AKS004JL

Components	Functions
BCM	● Turns on/off circuits of tail light and headlamp according to signals from light sensor, lighting switch (AUTO), driver door switch, passenger door switch, rear door switch, and ignition switch (ON, OFF).
Optical sensor	● Converts outside brightness (lux) to voltage, and sends it to BCM. (Detects brightness of 50 to 1,300 lux)

AUTO LIGHT SYSTEM

Schematic

AKS004JM

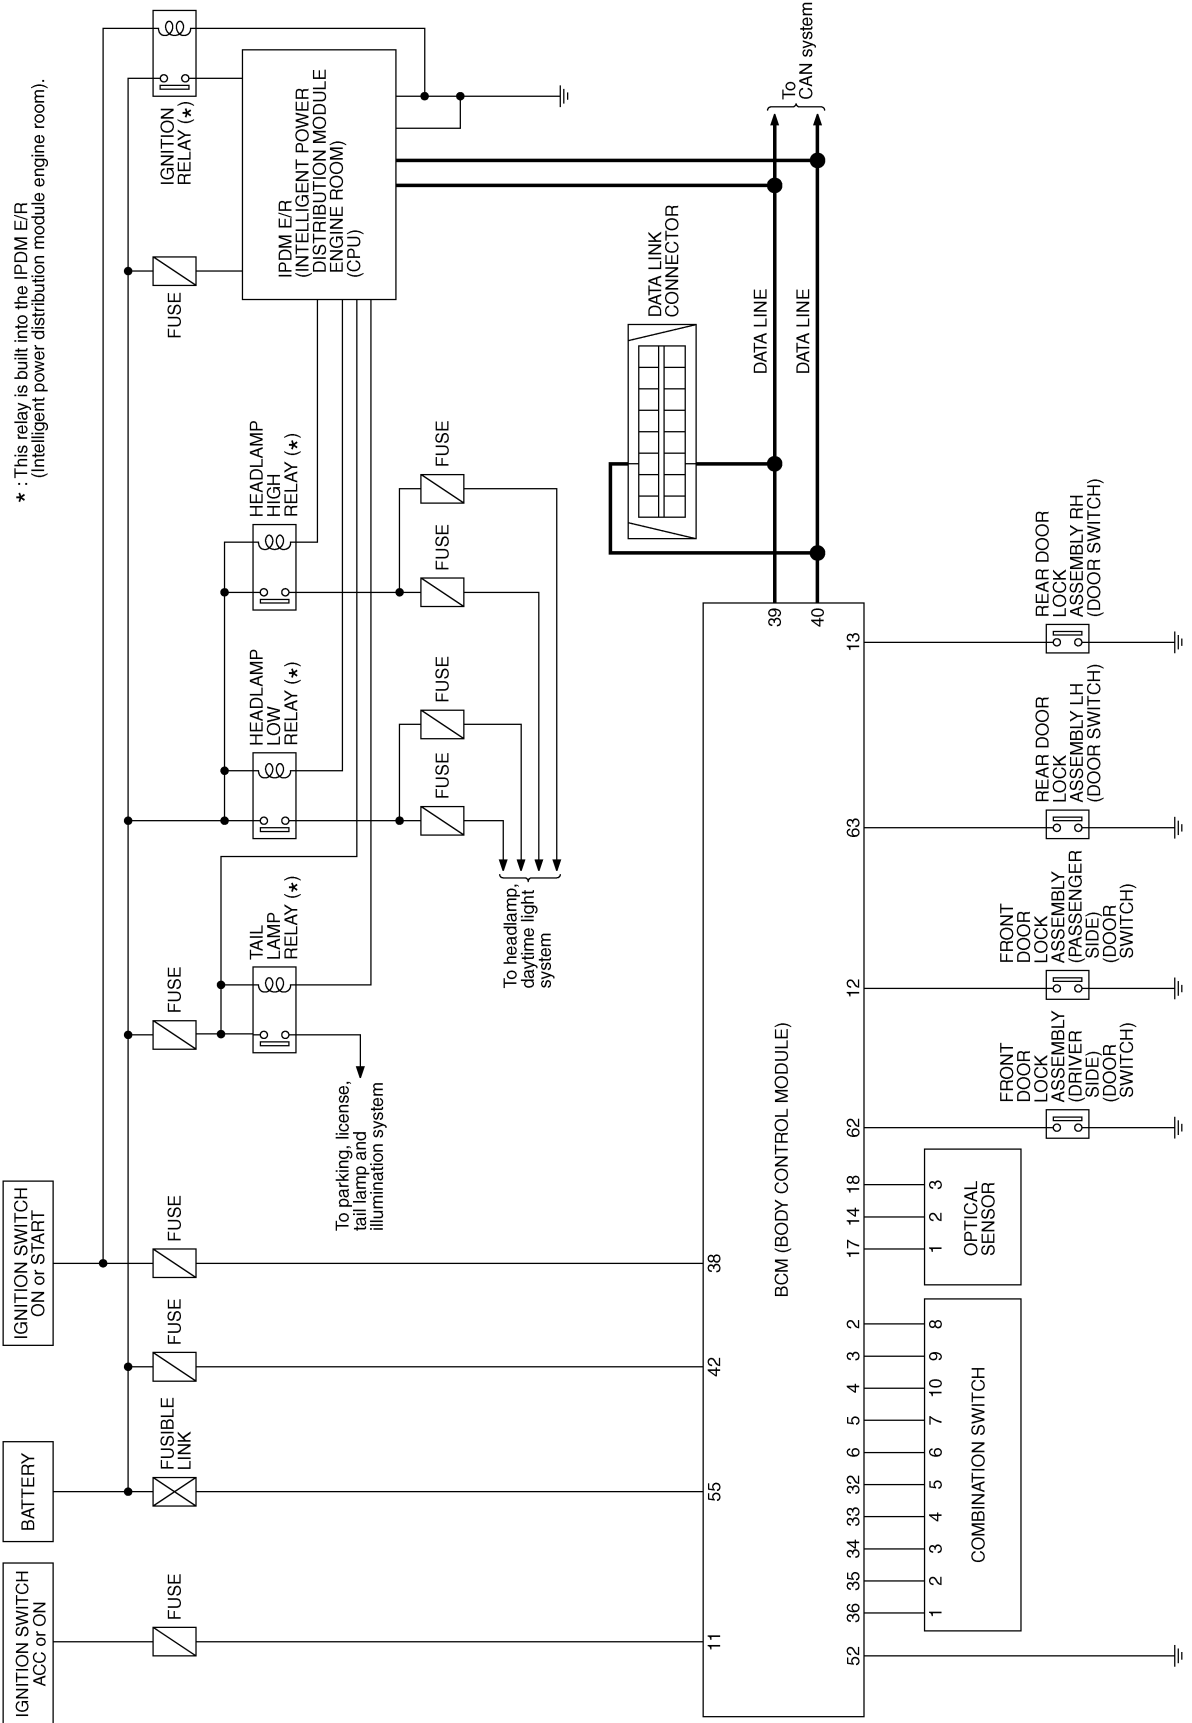

*: This relay is built into the IPDM E/R (Intelligent power distribution module engine room).

TKWB0450E




AUTO LIGHT SYSTEM

Wiring Diagram — AUTO/L —

AKS004JN

LT-AUTO/L-01

▬ : DATA LINE

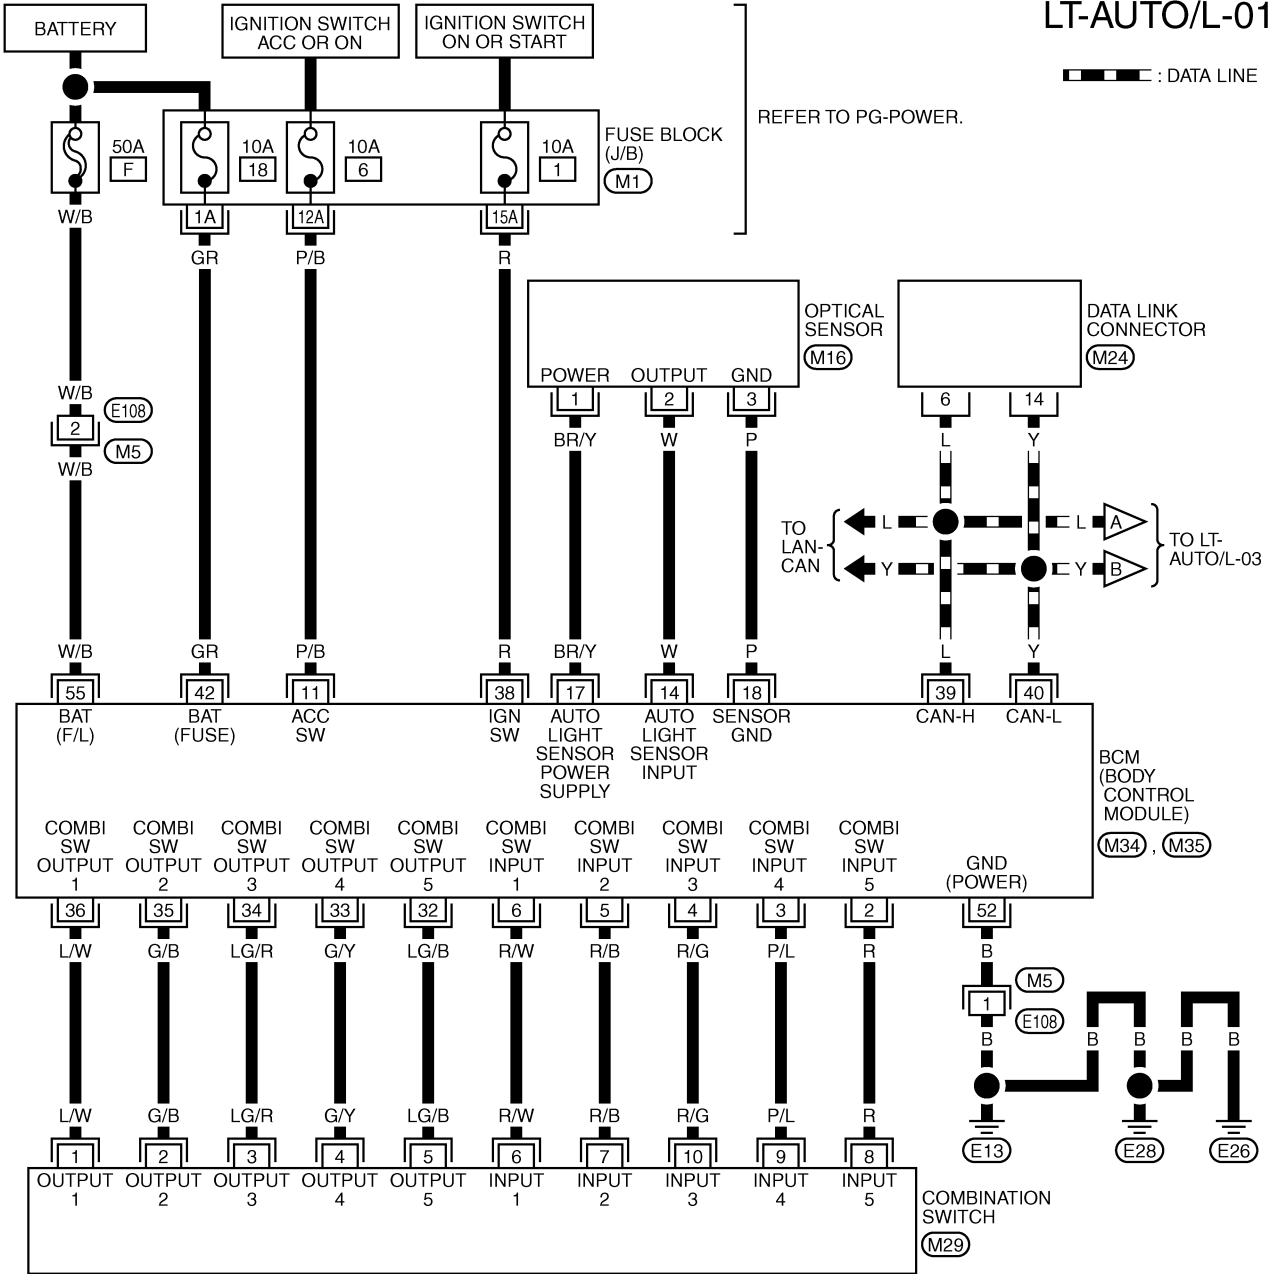

REFER TO THE FOLLOWING.
 (M1) - FUSE BLOCK-JUNCTION BOX (J/B)
 (M34), (M35) - ELECTRICAL UNITS



A
B
C
D
E
F
G
H
I
J
K
L
M

LT

AUTO LIGHT SYSTEM

LT-AUTO/L-02

(IK) : WITH INTELLIGENT KEY
 (OK) : WITHOUT INTELLIGENT KEY
 *1 R/G : (IK) *2 R/W : (IK)
 R : (OK) R/Y : (OK)

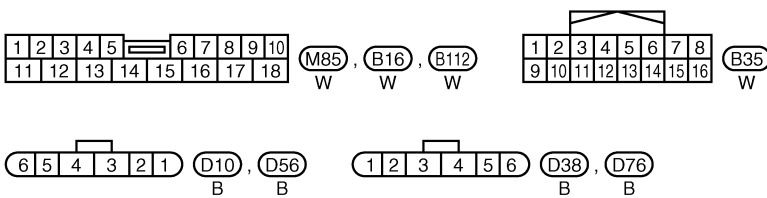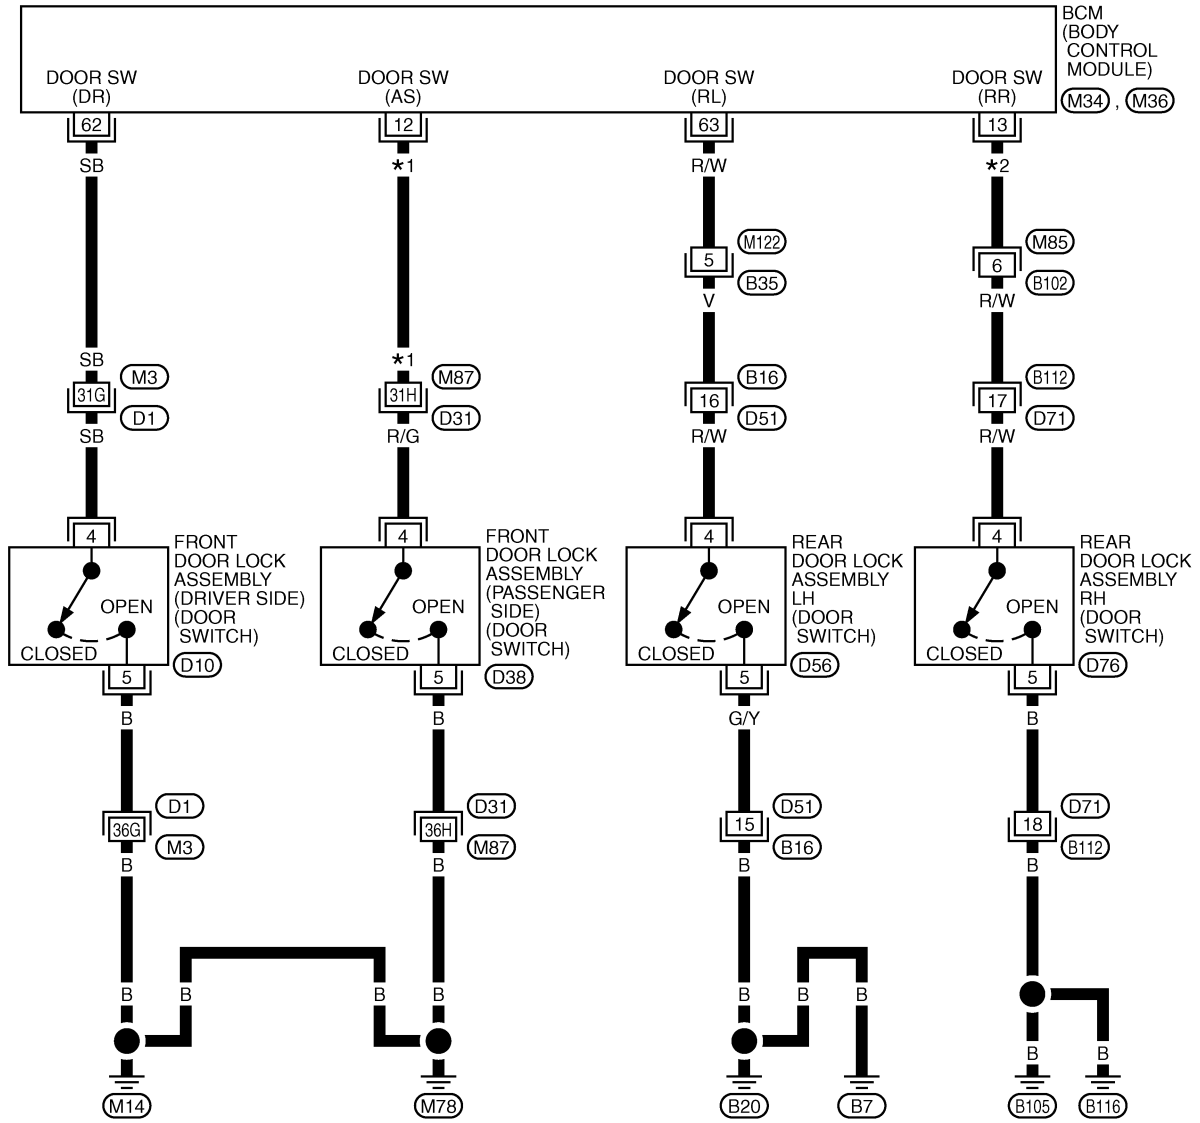




REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)
 (M34), (M36) -ELECTRICAL UNITS

TKWB0452E

AUTO LIGHT SYSTEM

LT-AUTO/L-03

A
B
C
D
E
F
G
H
I
J
K
L
M





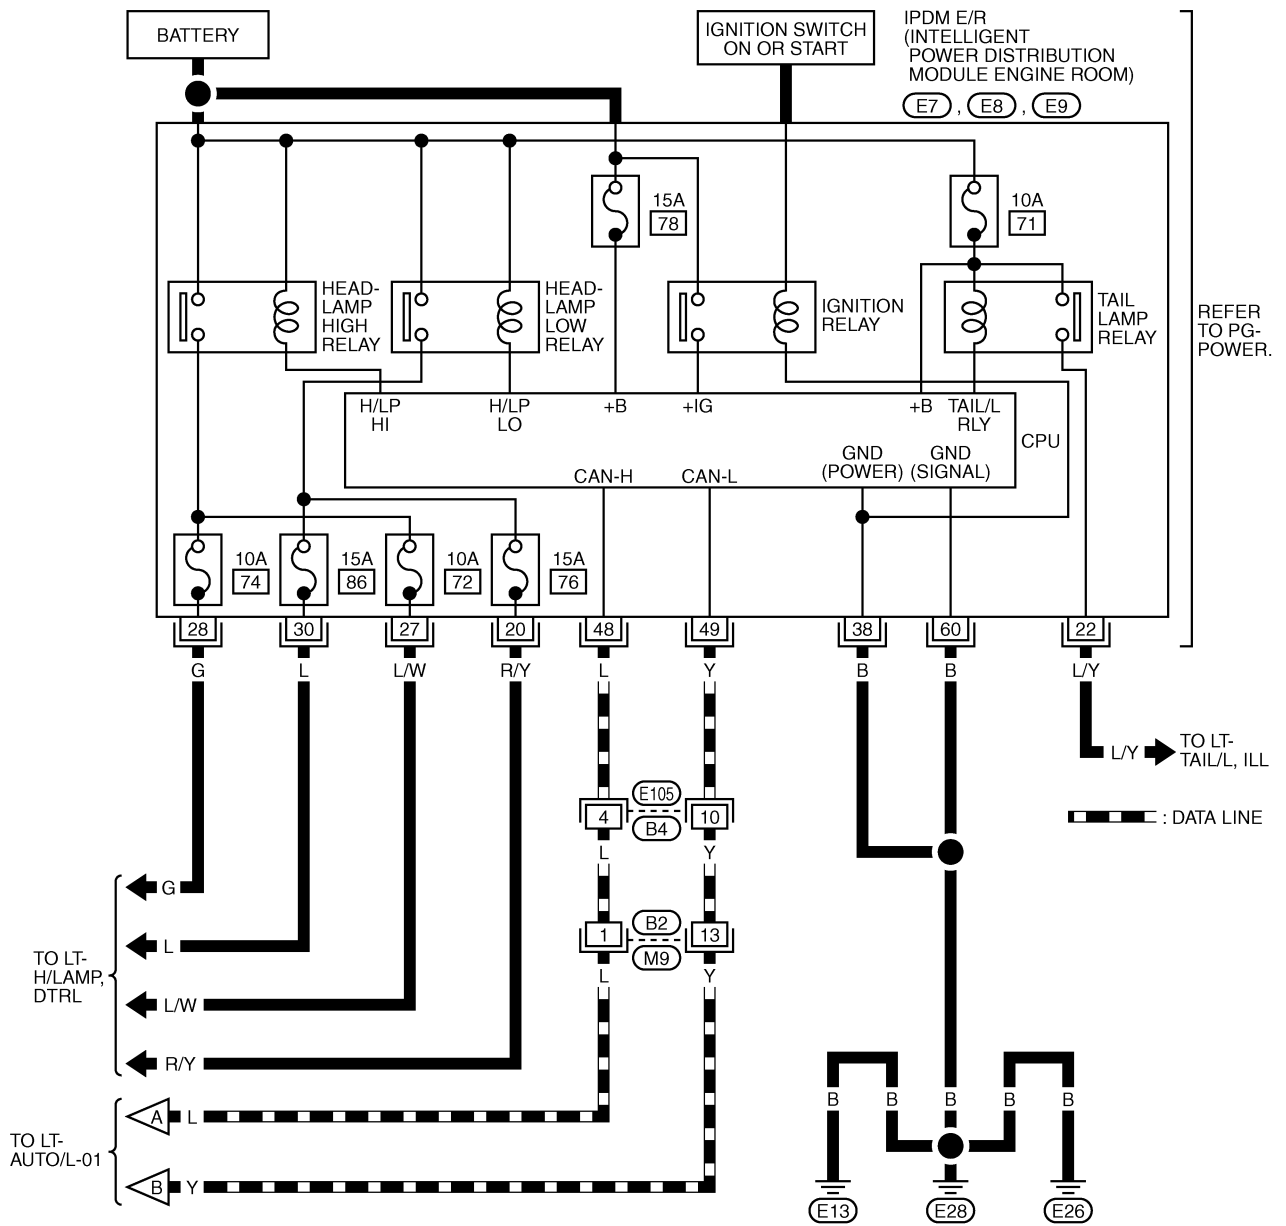


TKWB0453E




AUTO LIGHT SYSTEM

Terminals and Reference Values for BCM

AKS00AL4

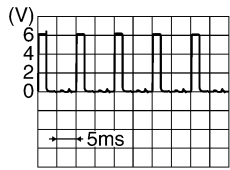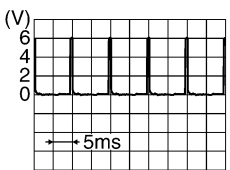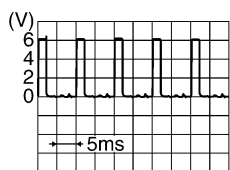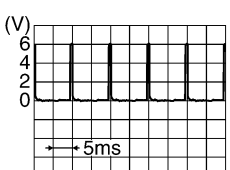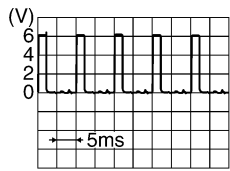Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
2	R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>	
3	P/L	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>	
4	R/G	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>	
5	R/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>	
6	R/W	Combination switch input 1				
11	P/B	Ignition switch (ACC)	ACC	—	Battery voltage	
12	R/G ^{*1} , R ^{*2}	Front door switch AS signal	OFF	Front door switch AS	ON (open)	Approx. 0V
					OFF (closed)	Battery voltage
13	R/W ^{*1} , R/Y ^{*2}	Rear door switch RH signal	OFF	Rear door switch RH	ON (open)	Approx. 0V
					OFF (closed)	Battery voltage
14	W	Optical sensor signal	ON	When optical sensor is illuminated		3.1 V or more ^{NOTE}
				When optical sensor is not illuminated		0.6 V or less
17	BR/Y	Optical sensor power supply	ON	—	Approx. 5V	
18	P	Keyless and auto light sensor ground	ON	—	Approx. 0V	
32	LG/B	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>	

AUTO LIGHT SYSTEM

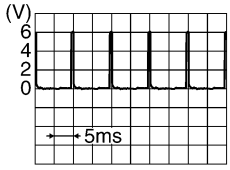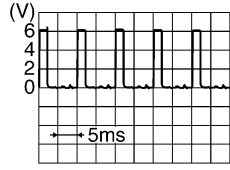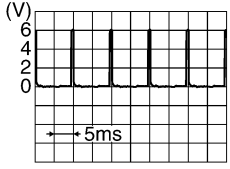Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
33	G/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E	
34	LG/R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5291E	
35	G/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 SKIA5292E	
36	L/W	Combination switch output 1				
38	R	Ignition switch (ON)	ON	—	Battery voltage	
39	L	CAN - H	—	—	—	
40	Y	CAN - L	—	—	—	
42	GR	Battery power supply	OFF	—	Battery voltage	
52	B	Ground	ON	—	Approx. 0V	
55	W/B	Battery power supply	OFF	—	Battery voltage	
62	SB	Front door switch DR signal	OFF	Front door switch DR	ON (open)	Approx. 0V
					OFF (closed)	Battery voltage
63	R/W	Rear door switch LH signal	OFF	Rear door switch LH	ON (open)	Approx. 0V
					OFF (closed)	Battery voltage

*1: With intelligent key, *2: Without intelligent key

NOTE:

Optical sensor must be securely subjected to work lamp light. If the optical sensor is insufficiently illuminated, the measured value may not satisfy standard.

Terminals and Reference Values for IPDM E/R

AKS00AL5

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
20	R/Y	Headlamp HIGH & LOW (RH)	ON	Lighting switch 2ND position	OFF	Approx. 0V
					ON	Battery voltage
22	L/Y	Parking, license, and tail lamp	ON	Lighting switch 1ST position	OFF	Approx. 0V
					ON	Battery voltage
27	L/W	Headlamp high (RH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0V
					ON	Battery voltage
28	G	Headlamp high (LH)	ON	Lighting switch HIGH or PASS position	OFF	Approx. 0V
					ON	Battery voltage

AUTO LIGHT SYSTEM

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
30	L	Headlamp HIGH & LOW (LH)	ON	Lighting switch 2ND position	OFF
					ON
38	B	Ground	ON	—	Approx. 0V
48	L	CAN – H	—	—	—
49	Y	CAN – L	—	—	—
60	B	Ground	ON	—	Approx. 0V

How to Proceed With Trouble Diagnosis

AKS00AL6

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-88, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-96, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction. Refer to [LT-103, "Symptom Chart"](#) .
5. Does the auto light system operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

Preliminary Check

AKS00AL7

SETTING CHANGE FUNCTIONS

- Sensitivity of auto light system can be adjusted using CONSULT-II. Refer to [LT-99, "WORK SUPPORT"](#) .

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown fuses.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	71
		72
		74
		76
		86

Refer to [LT-91, "Wiring Diagram — AUTO/L —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-3, "POWER SUPPLY ROUTING CIRCUIT"](#) .

AUTO LIGHT SYSTEM

2. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

Terminal		Ignition switch position			
(+)		(-)	OFF	ACC	ON
Connector	Terminal (Wire color)				
M34	11 (P/B)	Ground	Approx. 0V	Battery voltage	Battery voltage
	38 (R)		Approx. 0V	Approx. 0V	Battery voltage
M35	42 (GR)		Battery voltage	Battery voltage	Battery voltage
	55 (W/B)		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

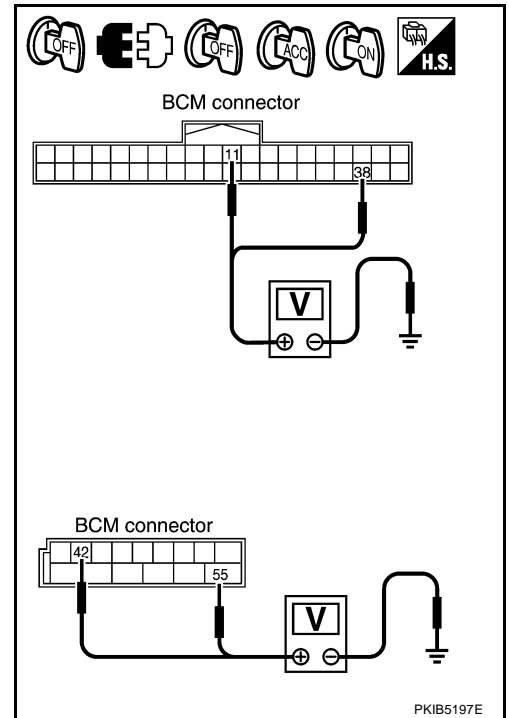

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

Terminal		Ground	Continuity
Connector	Terminal (Wire color)		
M35	52 (B)		Yes

OK or NG

OK >> INSPECTION END

NG >> Check ground circuit harness.

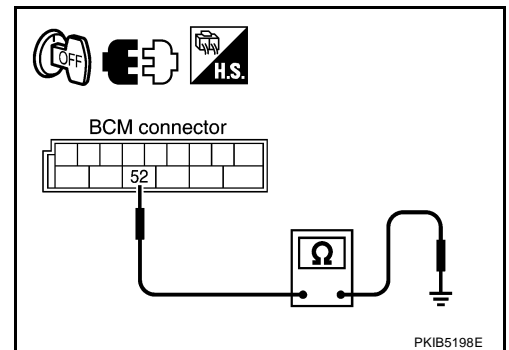

A
B
C
D
E
F
G
H
I
J
LT
L
M

AUTO LIGHT SYSTEM

AKS00AL8

CONSULT-II Functions (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnosis part	Diagnosis mode	Description
HEADLAMP	WORK SUPPORT	Changes the setting for each function.
	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
BCM	SELF-DIAG RESULTS	BCM performs self-diagnosis of CAN communication.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn ignition switch ON.

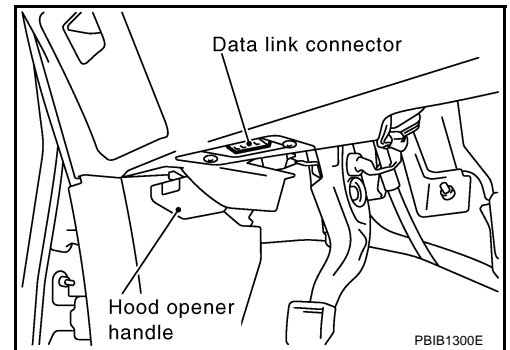

2. Touch "START (NISSAN BASED VHCL)".

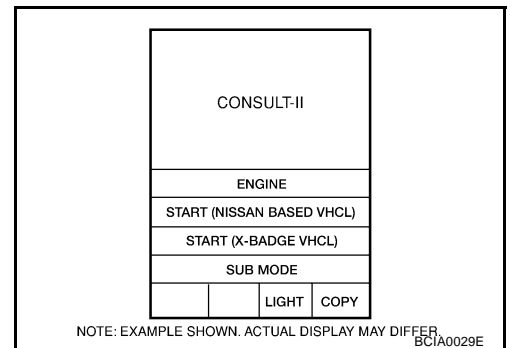


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

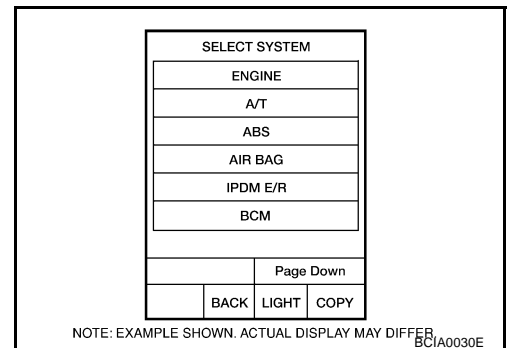

AUTO LIGHT SYSTEM

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

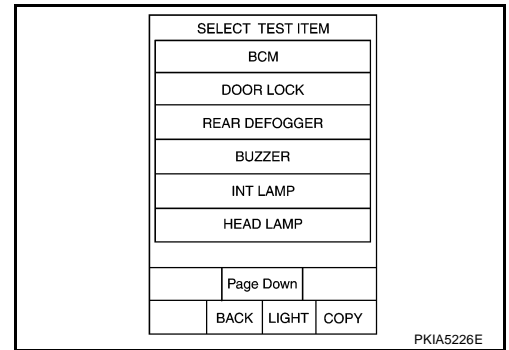

A
B
C
D
E
F
G
H
I
J
LT
L
M

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "CUSTOM A/LIGHT SETTING" or "ILL DELAY SET" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "NORMAL" or "MODE 2 - 4" of setting to be changed (CUSTOM A/LIGHT SETTING) or touch "MODE1-8" of setting to be changed (ILL DELAY SET).
6. Touch "SETTING CHANGE".
7. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
8. Touch "END".

Work Support Setting Item

- Sensitivity of auto light can be selected and set from four modes.

Work item	Description
CUSTOM A/LIGHT SETTING	Auto light sensitivity can be changed in this mode. Sensitivity can be adjusted in four modes. ● MODE 1 (Normal)/ MODE 2 (sensitive)/MODE 3 (Desensitized)/MODE4 (Insensitive)
ILL DELAY SET	Auto light delay off timer period can be changed in this mode. Selects auto light delay off timer period among eight modes. ● MODE 1 (45 sec.)/MODE 2 (OFF)/MODE 3 (30 sec.)/MODE 4 (60 sec.)/MODE 5 (90 sec.)/MODE 6 (120 sec.)/MODE 7 (150 sec.)/MODE 8 (180 sec.)

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects items and monitors them.

4. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
5. Touch "START".
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.

AUTO LIGHT SYSTEM

Monitor item	Contents
HEAD LAMP SW 1	"ON/OFF" Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 1 judged from lighting switch signal.
HEAD LAMP SW 2	"ON/OFF" Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1 ST	"ON/OFF" Displays status (lighting switch 1ST or 2ND position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW	"ON/OFF" Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW	"ON/OFF" Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW	"ON/OFF" Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW - DR	"ON/OFF" Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	"ON/OFF" Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RR	"ON/OFF" Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RL	"ON/OFF" Displays status of the rear door as judged from the passenger door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW	"ON/OFF" Displays status of the back door as judged from the back door switch signal. (Door is open: ON/Door is closed: OFF)
TURN SIGNAL R	"ON/OFF" Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L	"ON/OFF" Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW ^{NOTE}	"OFF" —
OPTICAL SENSOR	"0 - 5V" Displays "outside brightness (close to 5V when light/close to 0V when dark)" judged from optical sensor signal.

NOTE:

This item is displayed, but cannot be monitored.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CORNERING LAMP ^{NOTE}	—

NOTE:

This item is displayed, but cannot be tested.

AUTO LIGHT SYSTEM

CONSULT-II Functions (IPDM E/R)

AKS00CRE

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


Diagnosis Mode	Description
SELF-DIAGNOSTIC RESULTS	Refer to PG-20, "SELF-DIAG RESULTS" .
DATA MONITOR	The input/output data of IPDM E/R is displayed in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	IPDM E/R sends a drive signal to electronic components to check their operation.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn the ignition switch ON.

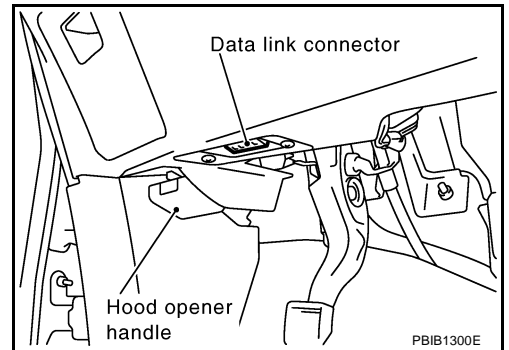

2. Touch "START (NISSAN BASED VHCL)".

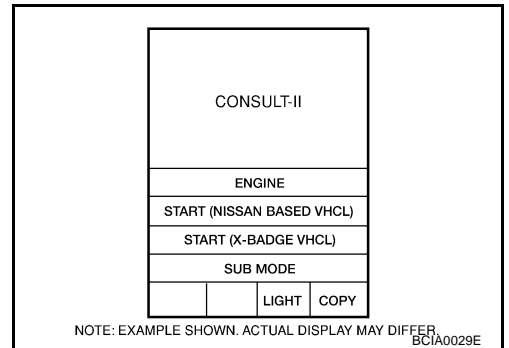


3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#) .

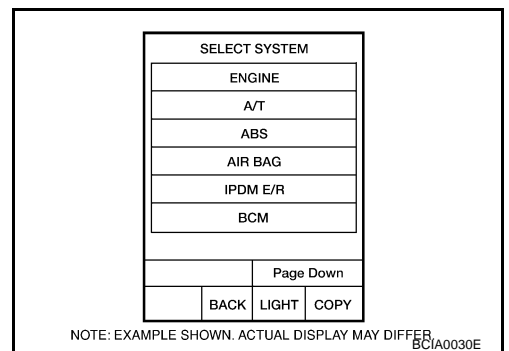

AUTO LIGHT SYSTEM

- Select the desired part to be diagnosed on "SELECT SYSTEM" screen.

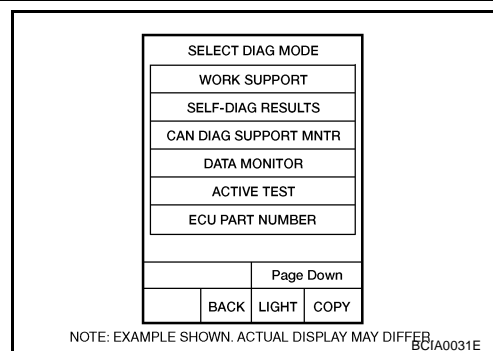

DATA MONITOR

Operation Procedure

- Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
- Touch "ALL SIGNALS", "MAIN SIGNALS", or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all items.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Selects items and monitors them.

- Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
- Touch "START".
- Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

All Signals, Main Signals, Selection From Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Position lights request	TAIL & CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Font fog lights request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

- Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
- Touch item to be tested, and check operation.
- Touch "START".
- Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI ON, LO ON) at your option. (Headlamp high beam repeats ON-OFF every 1 second.)
Front fog lamp relay output		Allows fog lamp relay to operate by switching operation ON-OFF at your option.
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.

AUTO LIGHT SYSTEM

Symptom Chart

AKS00ALA

Phenomenon	Malfunction system and reference
<ul style="list-style-type: none"> ● Parking lamps and headlamps will not illuminate when outside of the vehicle becomes dark. (Lighting switch 1ST position and 2ND position operate normally.) ● Parking lamps and headlamp will not go out when outside of the vehicle becomes light. (Lighting switch 1ST position and 2nd position operate normally.) ● Headlamps go out when outside of the vehicle becomes light, but parking lamps stay on. 	<ul style="list-style-type: none"> ● Refer to LT-99, "WORK SUPPORT" . ● Refer to LT-103, "Lighting Switch Inspection" . ● Refer to LT-104, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM.</p>
<p>Parking lamps illuminate when outside of the vehicle becomes dark, but headlamps stay off. (Lighting switch 1ST position and 2ND position operate normally.)</p>	<ul style="list-style-type: none"> ● Refer to LT-99, "WORK SUPPORT" . ● Refer to LT-104, "Optical Sensor System Inspection" . <p>If above systems are normal, replace BCM.</p>
<p>Auto light adjustment system will not operate. (Lighting switch AUTO, 1ST position and 2ND position operate normally.)</p>	<ul style="list-style-type: none"> ● Refer to LT-104, "Optical Sensor System Inspection" . <p>If above system is normal, replace BCM.</p>
<p>Auto light adjustment system of combination meter will not operate.</p>	<ul style="list-style-type: none"> ● CAN communication line inspection between BCM and combination meter. Refer to BCS-15, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" .
<p>Shut off delay feature will not operate.</p>	<ul style="list-style-type: none"> ● CAN communication line inspection between BCM and combination meter. Refer to BCS-15, "CAN Communication Inspection Using CONSULT-II (Self-Diagnosis)" . ● Refer to BL-45, "Check Door Switch" . <p>If above system is normal, replace BCM.</p>

Lighting Switch Inspection

AKS00ALB

1. CHECK LIGHTING SWITCH INPUT SIGNAL

Ⓟ With CONSULT-II
 Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "AUTO LIGHT SW" turns ON-OFF linked with operation of lighting switch.


When lighting switch is AUTO : AUTO LIGHT SW ON position

ⓧ Without CONSULT-II
 Refer to [LT-145, "Combination Switch Inspection"](#) .

OK or NG

OK >> INSPECTION END

NG >> Check combination switch (lighting switch). Refer to [LT-145, "Combination Switch Inspection"](#) .

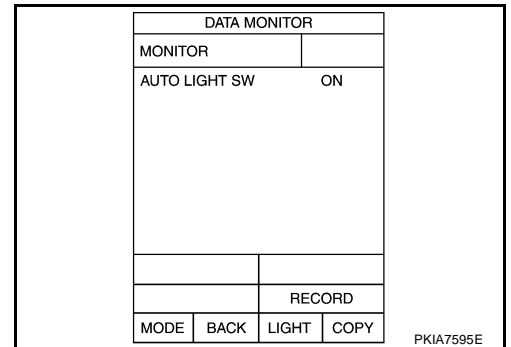

AUTO LIGHT SYSTEM

AKS00ALC

Optical Sensor System Inspection

1. CHECK OPTICAL SENSOR INPUT SIGNAL

④ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "OPTICAL SENSOR", check difference in voltage when the optical sensor is illuminated and not illuminated.

Illuminated

OPTICAL SENSOR : 3.1V or more

Not illuminated

OPTICAL SENSOR : 0.6V or less

CAUTION:

Optical sensor must be securely subjected to work lamp light. If optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.

⊗ Without CONSULT-II

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector M34 terminal 14 (W) and ground.

Illuminated

OPTICAL SENSOR : 3.1V or more

Not illuminated

OPTICAL SENSOR : 0.6V or less

CAUTION:

Optical sensor must be securely subjected to work lamp light. If optical sensor is insufficiently illuminated, the measured value may not satisfy the standard.

OK or NG

OK >> INSPECTION END

NG >> GO TO 2.

2. CHECK OPTICAL SENSOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and optical sensor connector.
3. Check continuity (open circuit) between BCM harness connector M34 terminal 17 (BR/Y) and optical sensor harness connector M16 terminal 1 (BR/Y).

17 (BR/Y) – 1 (BR/Y) : Continuity should exist.

4. Check continuity (short circuit) between BCM harness connector M34 terminal 17 (BR/Y) and ground.

17 (BR/Y) – Ground : Continuity should not exist.



OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

DATA MONITOR	
MONITOR	
OPTICAL SENSOR	0.75V
RECORD	
MODE	BACK
LIGHT	COPY

PKIA7596E

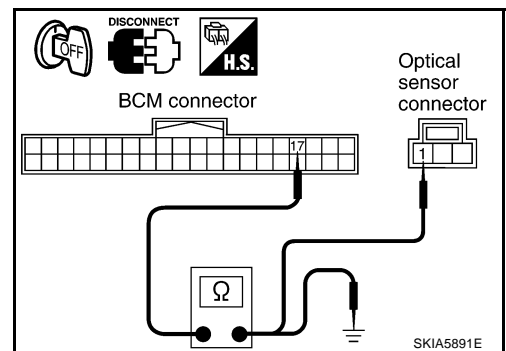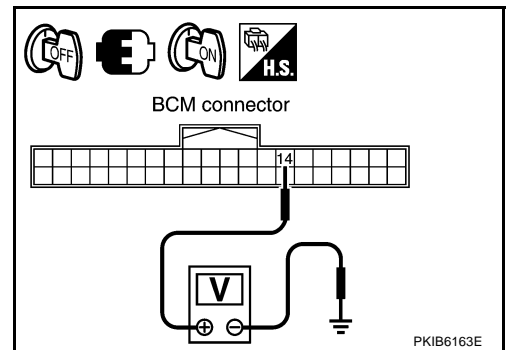

AUTO LIGHT SYSTEM

3. CHECK OPTICAL SENSOR SIGNAL CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M34 terminal 14 (W) and optical sensor harness connector M16 terminal 2 (W).

14 (W) – 2 (W) : Continuity should exist.


2. Check continuity (short circuit) between BCM harness connector M34 terminal 14 (W) and ground.

14 (W) – Ground : Continuity should not exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

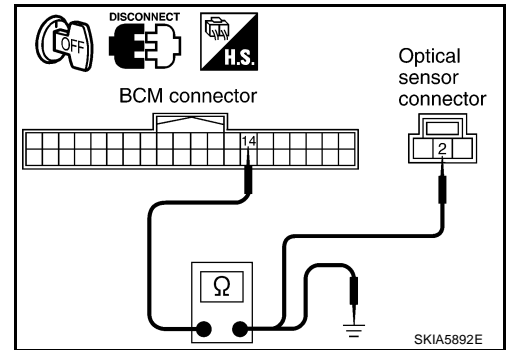

4. CHECK OPTICAL SENSOR GROUND CIRCUIT

1. Check continuity (open circuit) between BCM harness connector M34 terminal 18 (P) and optical sensor harness connector M16 terminal 3 (P).

18 (P) – 3 (P) : Continuity should exist.


2. Check continuity (short circuit) between BCM harness connector M34 terminal 18 (P) and ground.

18 (P) – Ground : Continuity should not exist.

OK or NG

OK >> GO TO 5.

NG >> Repair harness or connector.

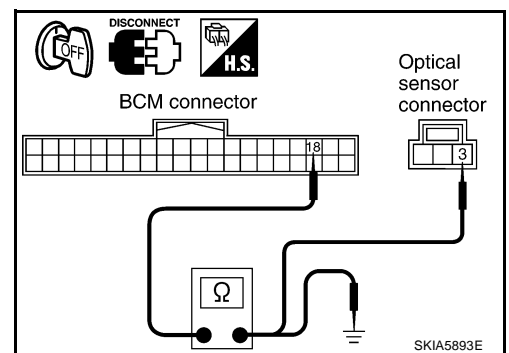

5. CHECK OPTICAL SENSOR VOLTAGE


1. Connect BCM connector.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M34 terminal 17 (BR/Y) and ground.

17 (BR/Y) – Ground : Approx. 5V

OK or NG

OK >> Replace the optical sensor.

NG >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).

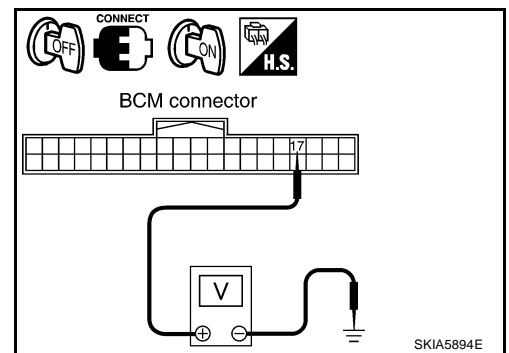


AUTO LIGHT SYSTEM

Removal and Installation of Optical Sensor

AKS00ALD

REMOVAL

1. Remove instrument mask (LH) assembly. Refer to [IP-11, "Removal and Installation"](#) .
2. While pressing pawl in direction as shown in the figure, remove the sensor unit from instrument mask.

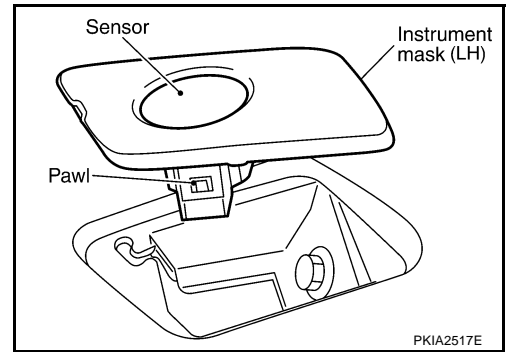

INSTALLATION

Installation is the reverse order of removal.

HEADLAMP AIMING CONTROL

PPF:26010

A
B
C
D
E
F
G
H
I
J
K
L
M





HEADLAMP AIMING CONTROL

Wiring Diagram — H/AIM —

AKS004UC

LT-H/AIM-01

▬ : DATA LINE

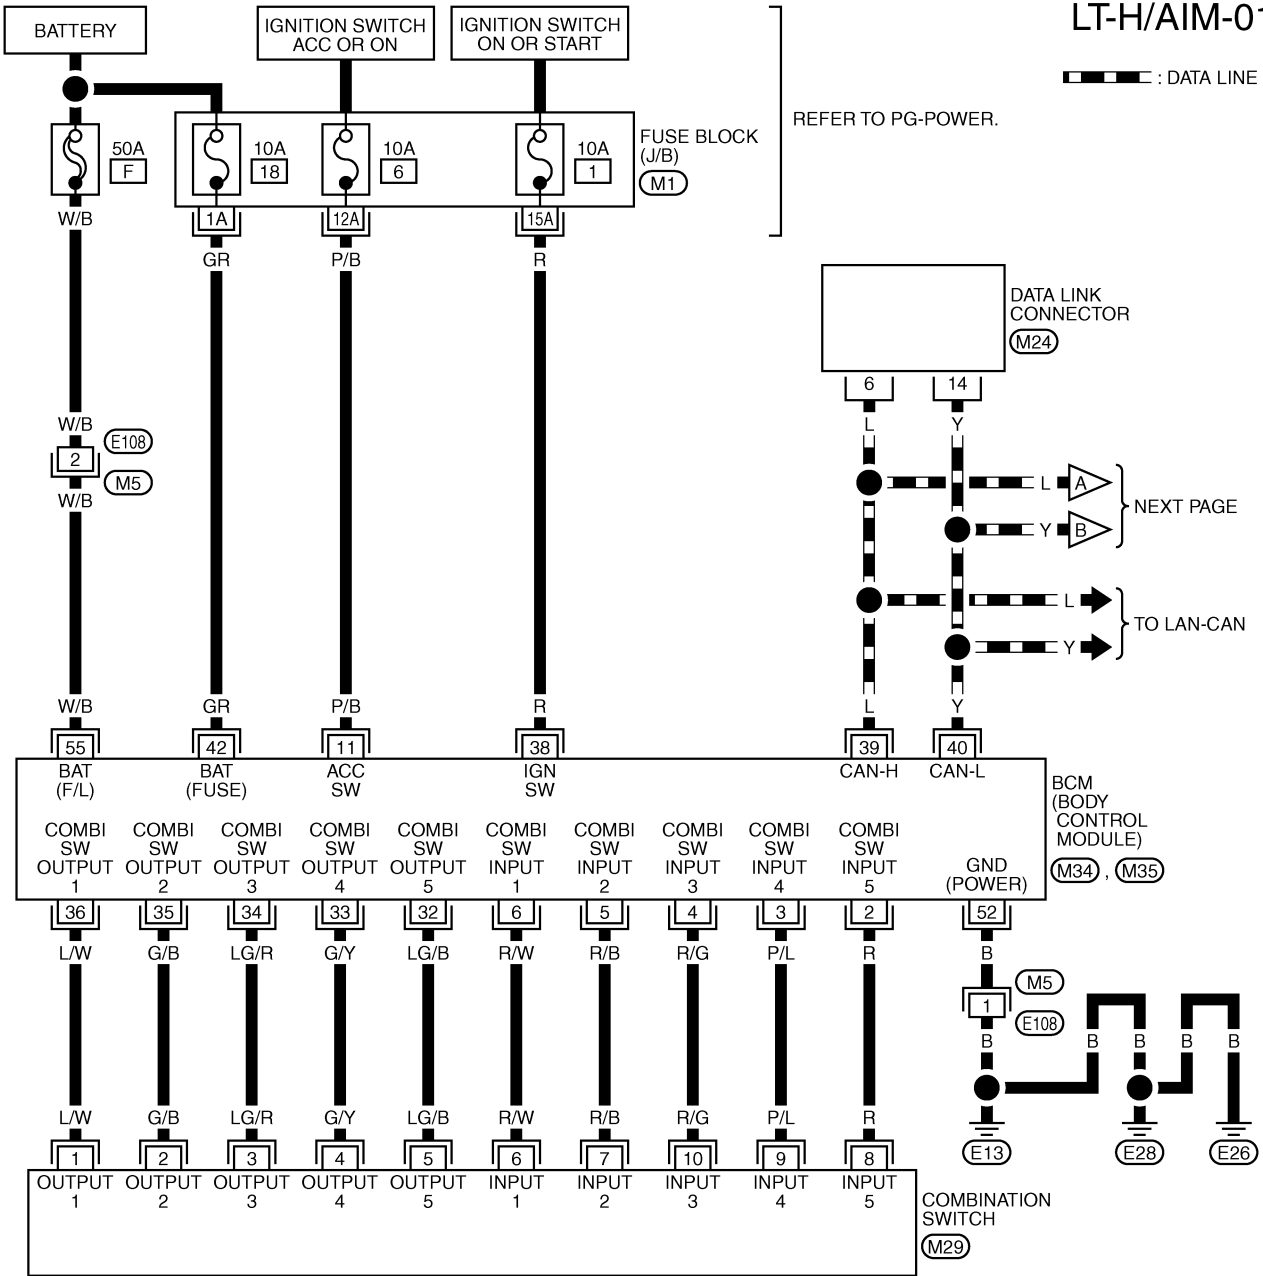

REFER TO THE FOLLOWING.

- (M1) - FUSE BLOCK-JUNCTION BOX (J/B)
- (M34), (M35) - ELECTRICAL UNITS

TKWB0454E










HEADLAMP AIMING CONTROL

LT-H/AIM-02

— : DATA LINE

REFER TO PG-POWER.

IPDM E/R
(INTELLIGENT
POWER
DISTRIBUTION
MODULE
ENGINE ROOM)
E7, E8,
E9

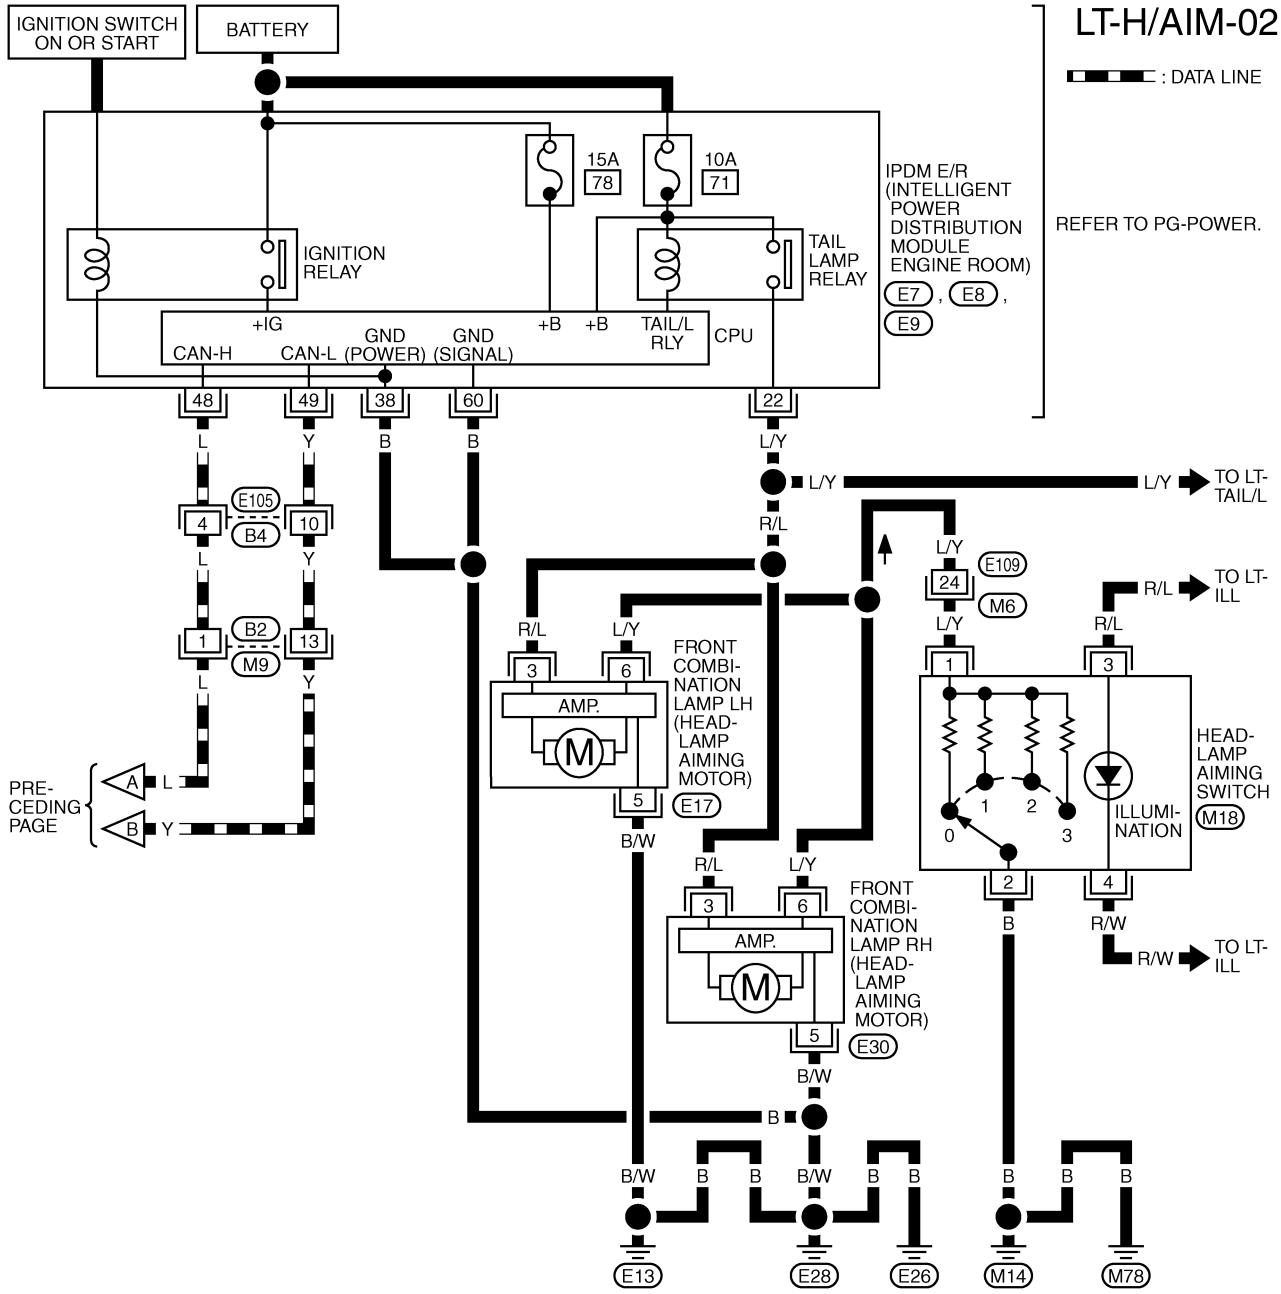


TKWB0455E

HEADLAMP AIMING CONTROL

Removal and Installation

REMOVAL

1. Remove the side ventilator assembly (LH). Refer to [IP-11](#), "[Removal and Installation](#)" in "INSTRUMENT PANEL (IP)" section.
2. Press the headlamp aiming switch fixing pawls and remove the unit from the side ventilator assembly (LH).

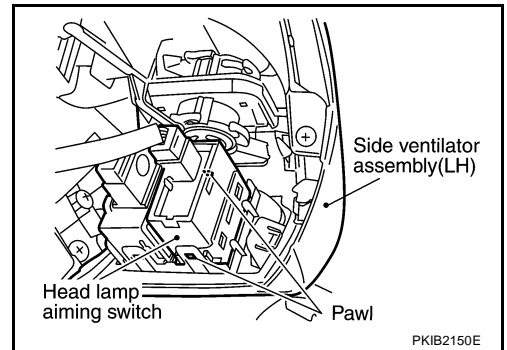


INSTALLATION

Installation is the reverse order of removal.

Switch Circuit Inspection (Xenon type)

Using a circuit tester, check resistance between the headlamp aiming switch connector terminals in each operation status of the aiming switch.

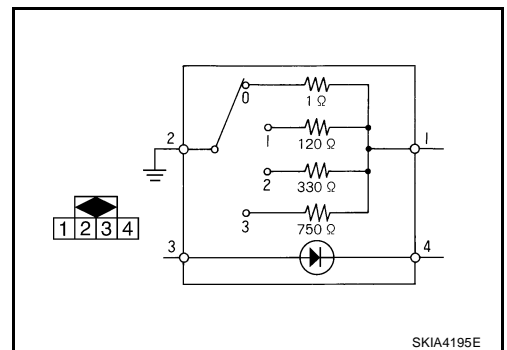

A
B
C
D
E
F
G
H
I
J
LT
L
M


FRONT FOG LAMP

FRONT FOG LAMP

PFP:26150

Component Parts and Harness Connector Location

AKS00AMD

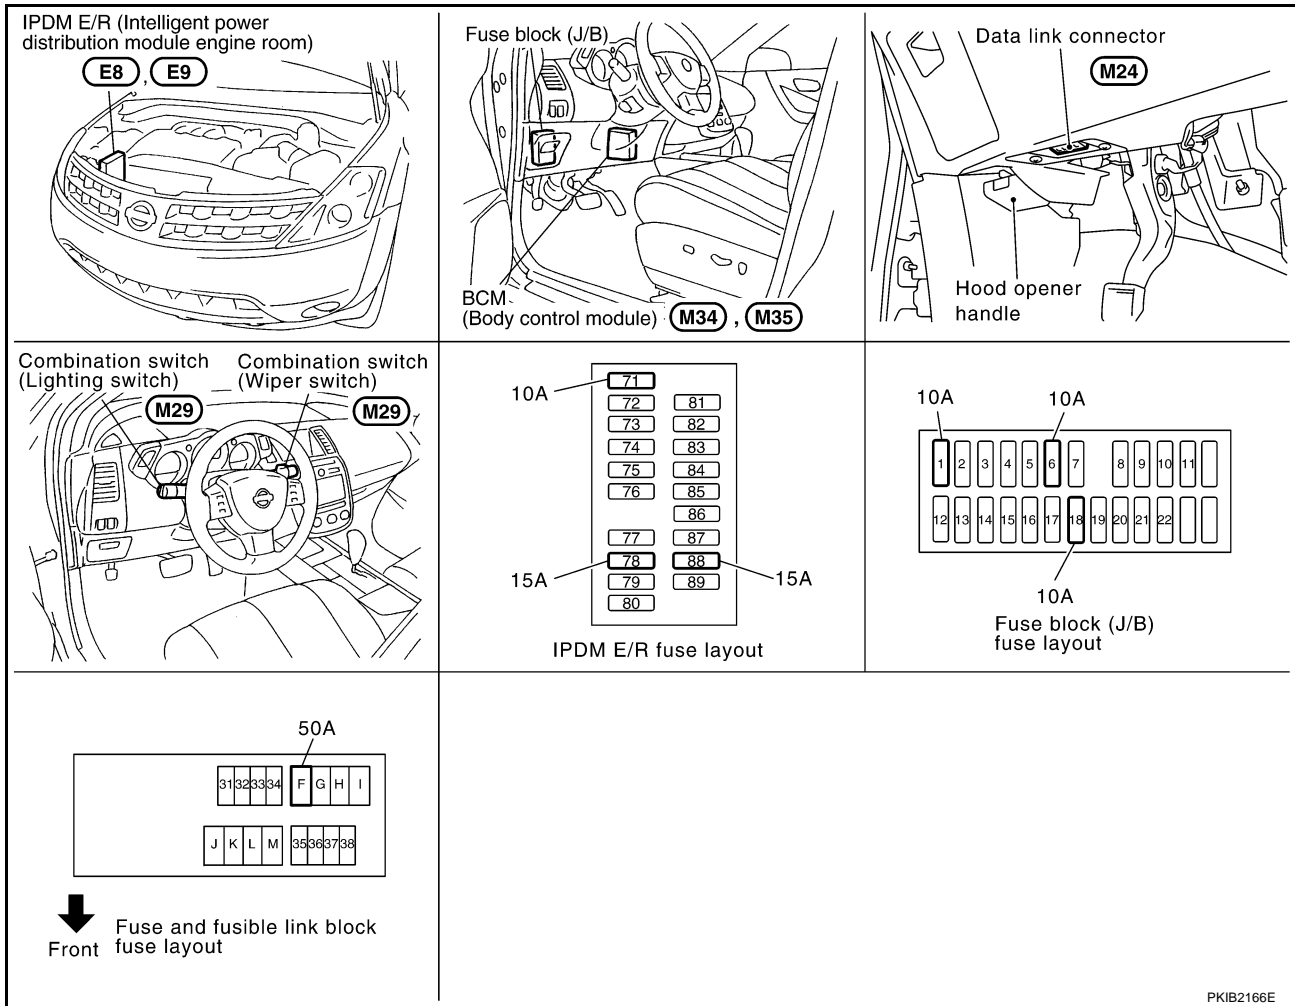

System Description

AKS005P3

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position or AUTO position (headlamp is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) located in the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

OUTLINE

Power is supplied at all times

- to ignition relay, located in IPDM E/R, from battery direct,
- through 15A fuse (No. 88, located in IPDM E/R)
- to front fog lamp relay, located in IPDM E/R,
- through 10A fuse (No. 71, located in the IPDM E/R)
- to CPU located in IPDM E/R,
- through 15A fuse (No. 78, located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 50A fusible link (letter F, located in the fuse and fusible link block)
- to BCM terminal 55,
- through 10A fuse [No. 18, located in fuse block (J/B)]

FRONT FOG LAMP

- to BCM terminal 42.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in IPDM E/R, from battery direct,
- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38.

When the ignition switch is in ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds E13, E26 and E28,
- to IPDM E/R terminals 38 and 60
- through grounds E13, E26 and E28.

FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position or AUTO position (headlamp is ON) and the fog lamp switch must be ON for fog lamp operation.

With the fog lamp switch in the ON position, the CPU located in the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay then directs power

- through IPDM E/R terminal 37
- to front fog lamp LH terminal 1,
- through IPDM E/R terminal 36
- to front fog lamp RH terminal 1.

Ground is supplied

- to front fog lamp LH terminal 2
- through grounds E13, E26 and E28,
- to front fog lamp RH terminal 2
- through grounds E13, E26 and E28.

With power and grounds supplied, the front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, and then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

AKS004JX

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS007QT

Refer to [LAN-29, "CAN Communication Unit"](#) .

A
B
C
D
E
F
G
H
I
J
LT
L
M


FRONT FOG LAMP

AKS004JZ

Wiring Diagram — F/FOG —

LT-F/FOG-01

▬ : DATA LINE

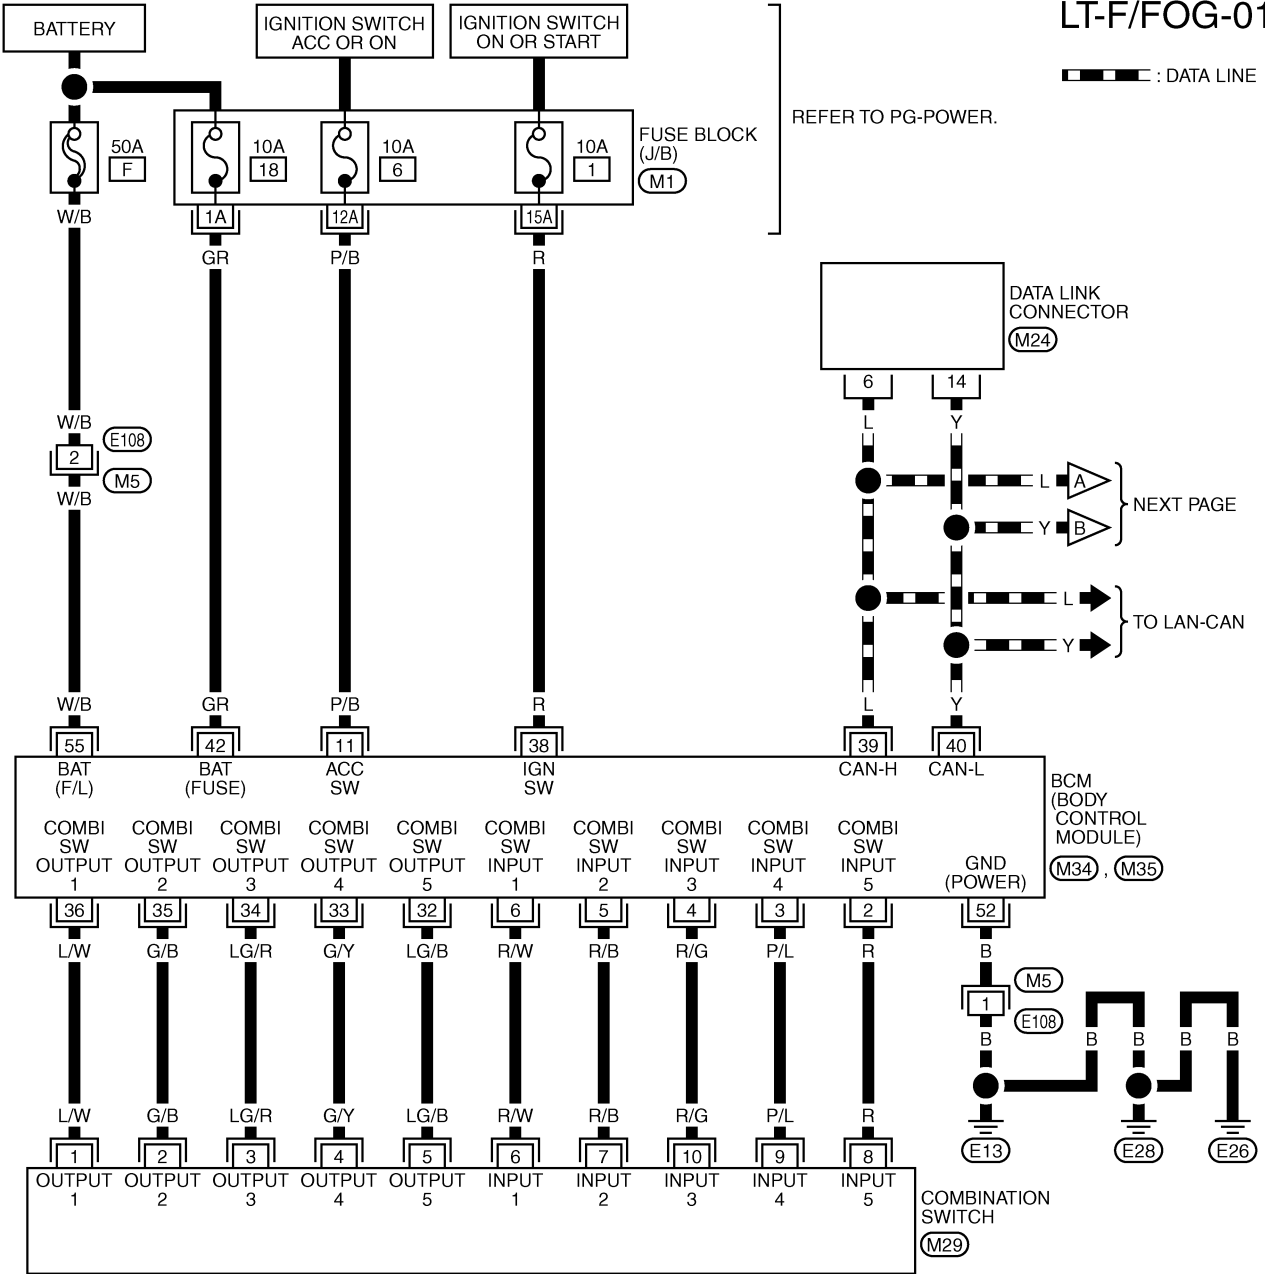




REFER TO PG-POWER.

NEXT PAGE

TO LAN-CAN

BCM (BODY CONTROL MODULE) (M34), (M35)


COMBINATION SWITCH (M29)









REFER TO THE FOLLOWING.
 (M1) - FUSE BLOCK-JUNCTION BOX (J/B)
 (M34), (M35) - ELECTRICAL UNITS

FRONT FOG LAMP

LT-F/FOG-02

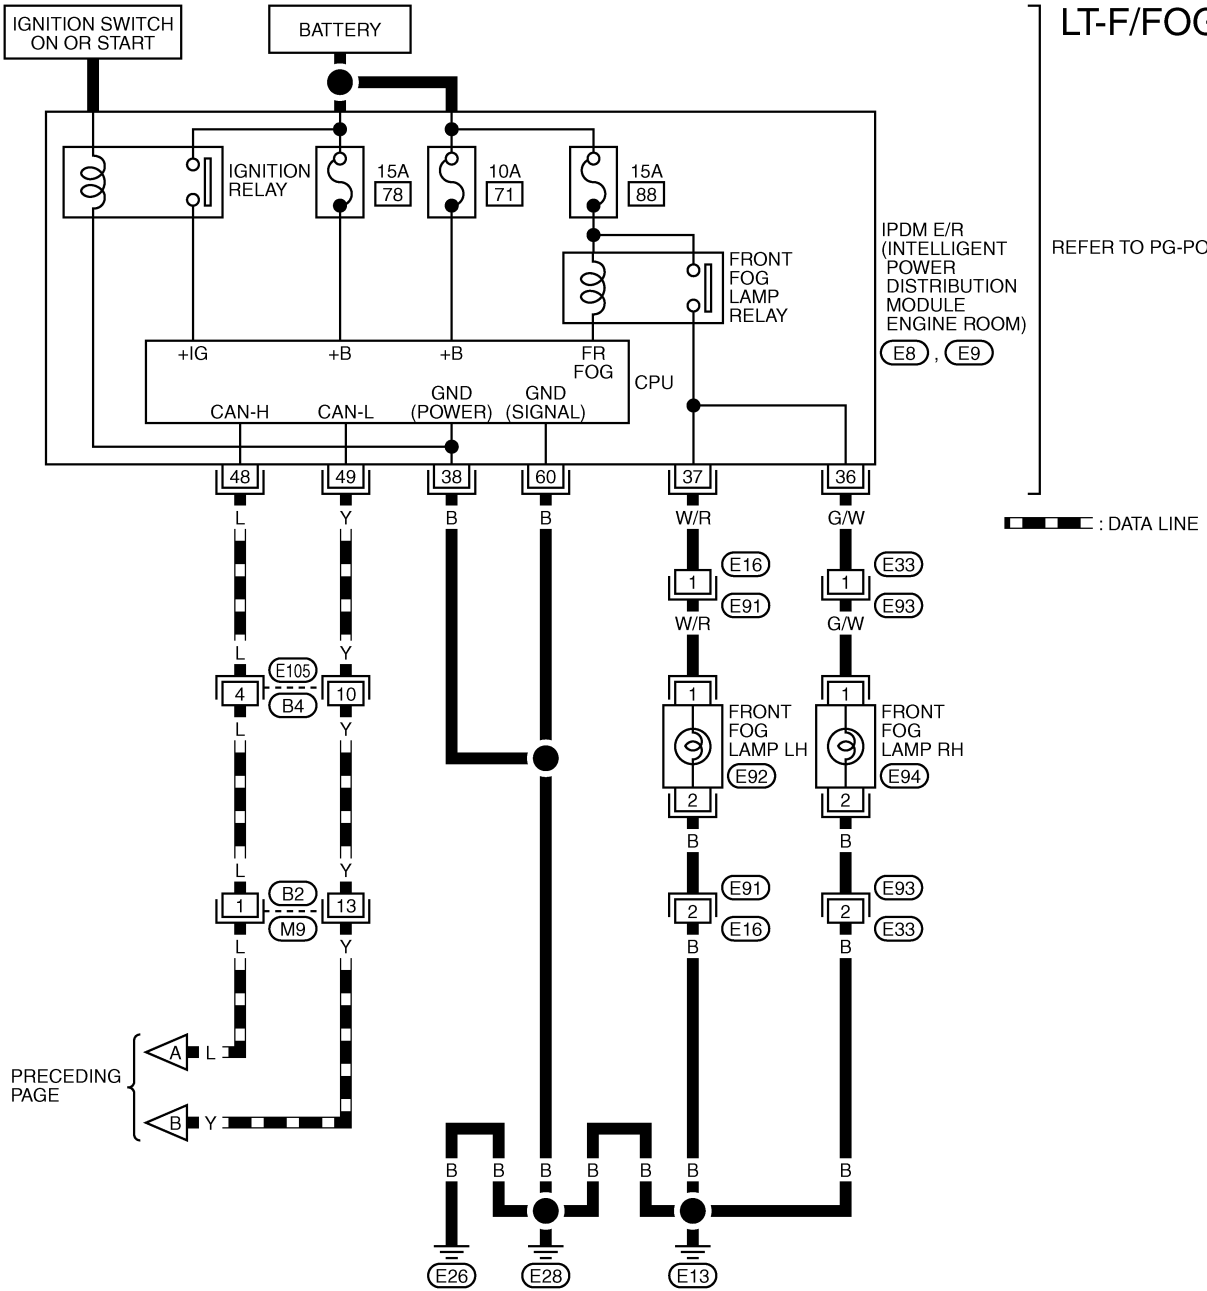

PRECEDING PAGE







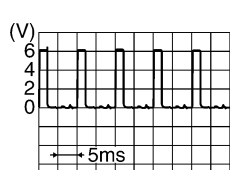


TKWB0457E


FRONT FOG LAMP

Terminals and Reference Values for BCM

AKS00AM3

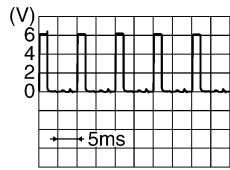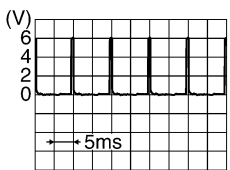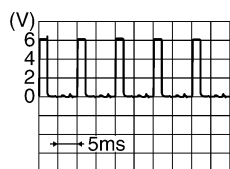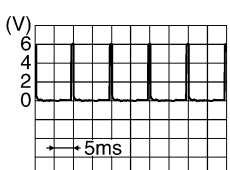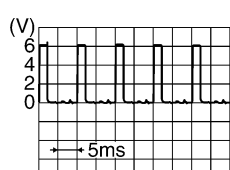Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
2	R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	P/L	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	R/G	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	R/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	R/W	Combination switch input 1			
11	P/B	Ignition switch (ACC)	ACC	—	Battery voltage
32	LG/B	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	G/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	LG/R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

FRONT FOG LAMP

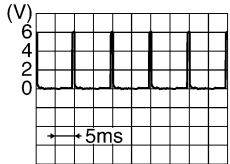Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
35	G/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	
36	L/W	Combination switch output 1			
38	R	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN – H	—	—	—
40	Y	CAN – L	—	—	—
42	GR	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0V
55	W/B	Battery power supply	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

AKS00AM4

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
36	G/W	Front fog lamp (RH)	ON	Lighting switch must be in the 2ND position or AUTO position (headlamp is ON) and the front fog lamp switch must be ON.	OFF	Approx. 0V
					ON	Battery voltage
37	W/R	Front fog lamp (LH)	ON	Lighting switch must be in the 2ND position or AUTO position (headlamp is ON) and the front fog lamp switch must be ON.	OFF	Approx. 0V
					ON	Battery voltage
38	B	Ground	ON	—	Approx. 0V	
48	L	CAN – H	—	—	—	
49	Y	CAN – L	—	—	—	
60	B	Ground	ON	—	Approx. 0V	

How to Proceed With Trouble Diagnosis

AKS00AM5

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-110, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-116, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

FRONT FOG LAMP

AKS00AM6

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown fuses

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	88

Refer to [LT-112. "Wiring Diagram — F/FOG —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-3. "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

Terminal		Ignition switch position			
Connector	(+)	(-)	OFF	ACC	ON
	Terminal (Wire color)				
M34	11 (P/B)	Ground	Approx. 0V	Battery voltage	Battery voltage
	38 (R)		Approx. 0V	Approx. 0V	Battery voltage
M35	42 (GR)		Battery voltage	Battery voltage	Battery voltage
	55 (W/B)		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

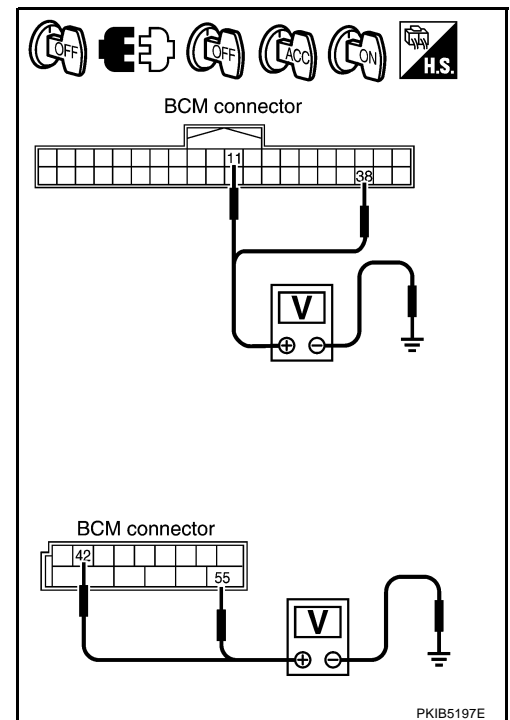

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

Terminal		Ground	Continuity
Connector	Terminal (Wire color)		
M35	52 (B)		Yes

OK or NG

OK >> INSPECTION END

NG >> Check ground circuit harness.

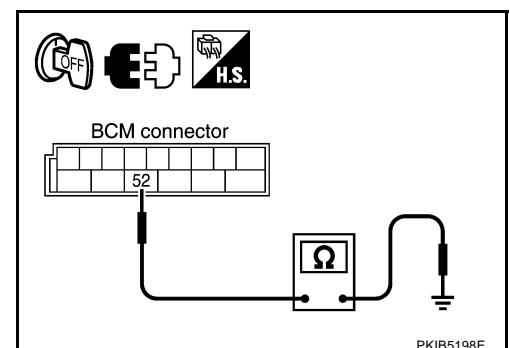

FRONT FOG LAMP

CONSULT-II Functions (BCM)

AKS00AM7

Refer to [LT-17, "CONSULT-II Functions \(BCM\)"](#) in HEADLAMP - XENON TYPE.

Refer to [LT-50, "CONSULT-II Functions \(BCM\)"](#) in HEADLAMP - CONVENTIONAL TYPE.

CONSULT-II Functions (IPDM E/R)

AKS00CRF

Refer to [LT-20, "CONSULT-II Functions \(IPDM E/R\)"](#) in HEADLAMP - XENON TYPE.

Refer to [LT-53, "CONSULT-II Functions \(IPDM E/R\)"](#) in HEADLAMP - CONVENTIONAL TYPE.

Front Fog Lamps Do Not Illuminate (Both Sides)

AKS00AMB

1. CHECK COMBINATION SWITCH INPUT SIGNAL

☑ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is FOG : FR FOG SW ON position

☒ Without CONSULT-II

Refer to [LT-145, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 2.

NG >> Check combination switch (lighting switch). Refer to [LT-145, "Combination Switch Inspection"](#).

DATA MONITOR			
MONITOR			
FR FOG SW		ON	
RECORD			
MODE	BACK	LIGHT	COPY

PKIA7598E

2. FOG LAMP ACTIVE TEST

☑ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "FOG" screen.
4. Make sure fog lamp operates.

Fog lamp should operate.

☒ Without CONSULT-II

1. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
2. Make sure fog lamp operates.

Fog lamp should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
LAMPS		OFF	
HI			
LO		FOG	
MODE	BACK	LIGHT	COPY


SKIA5774E

FRONT FOG LAMP

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

When lighting switch is FOG : FR FOG REQ ON position

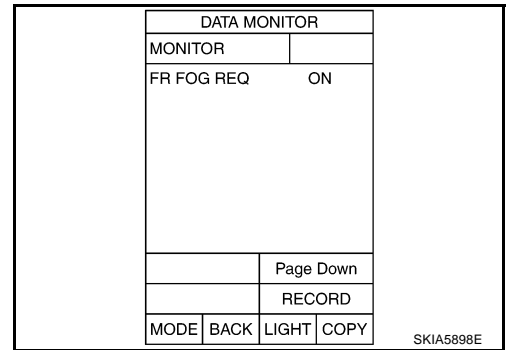


OK or NG

- OK >> Replace IPDM E/R.
 NG >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).

4. CHECK FRONT FOG LAMP INPUT SIGNAL

With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH connectors.
3. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "FOG" screen.
6. When fog lamp is operating, check voltage between front fog lamp RH and LH harness connector and ground.

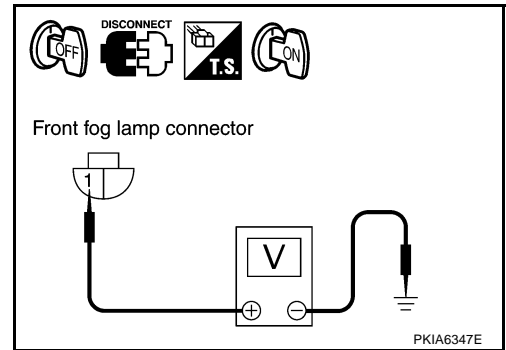

Terminal			(-)	Voltage
(+)				
Connector	Terminal (Wire color)		Ground	Battery voltage
RH	E94	1 (G/W)		
LH	E92	1 (W/R)		

Without CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front fog lamp RH and LH connectors.
3. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
4. When fog lamp is operating, check voltage between front fog lamp RH and LH harness connectors and ground.

Terminal			(-)	Voltage
(+)				
Connector	Terminal (Wire color)		Ground	Battery voltage
RH	E94	1 (G/W)		
LH	E92	1 (W/R)		

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.

FRONT FOG LAMP

5. CHECK FRONT FOG LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E8 terminal 36 (G/W) and front fog lamp RH harness connector E94 terminal 1 (G/W).


36 (G/W) – 1 (G/W) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E8 terminal 37 (W/R) and front fog lamp LH harness connector E92 terminal 1 (W/R).

37 (W/R) – 1 (W/R) : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.

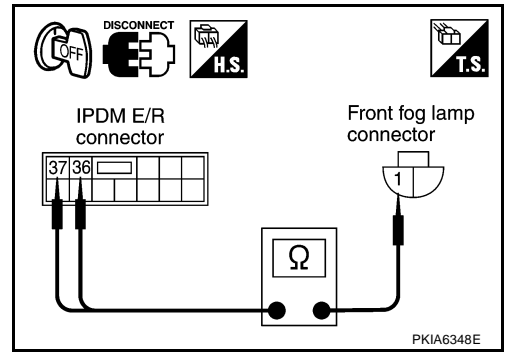

6. CHECK FRONT FOG LAMP GROUND

1. Check continuity between front fog lamp RH harness connector E94 terminal 2 (B) and ground.


2 (B) – Ground : Continuity should exist.

2. Check continuity between front fog lamp LH harness connector E92 terminal 2 (B) and ground.

2 (B) – Ground : Continuity should exist.

OK or NG

- OK >> Check front fog lamp bulbs.
 NG >> Repair harness or connector.

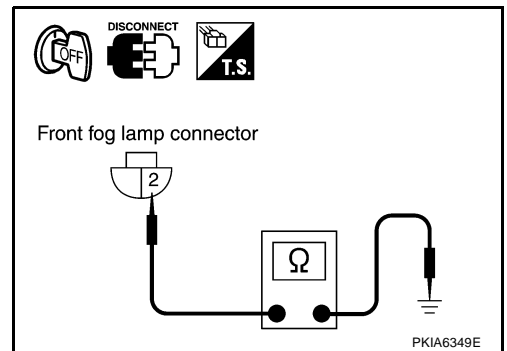

Front Fog Lamp Does Not Illuminate (One Side)

1. CHECK BULB

Check bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
 NG >> Replace front fog lamp bulb.


2. CHECK FRONT FOG LAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front fog lamp RH or LH connector.
3. Check voltage between front fog lamp RH or LH harness connectors and ground.

Terminal (+)			Terminal (-)	Voltage
Connector	Terminal (Wire color)			
RH	E94	1 (G/W)	Ground	Battery voltage
LH	E92	1 (W/R)		

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 3.

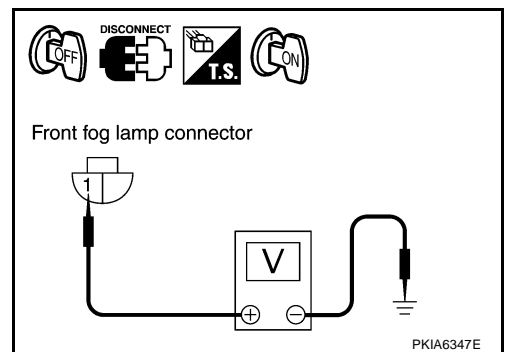

FRONT FOG LAMP


3. CHECK FRONT FOG LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E8 terminal 36 (G/W) and front fog lamp RH harness connector E94 terminal 1 (G/W).

36 (G/W) - 1 (G/W) : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E8 terminal 37 (W/R) and front fog lamp LH harness connector E92 terminal 1 (W/R).

37 (W/R) - 1 (W/R) : Continuity should exist.

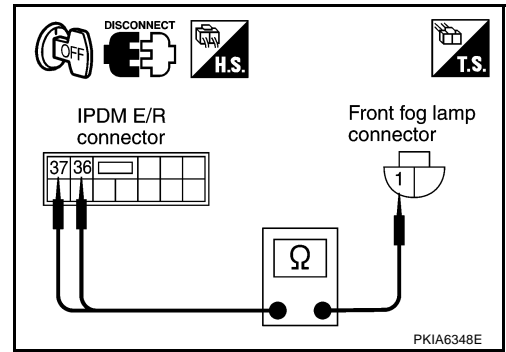

OK or NG

- OK >> Replace IPDM E/R.
- NG >> Repair harness or connector.

4. CHECK FRONT FOG LAMP GROUND

1. Check continuity between front fog lamp RH harness connector E94 terminal 2 (B) and ground.


2 (B) – Ground : Continuity should exist.

2. Check continuity between front fog lamp LH harness connector E92 terminal 2 (B) and ground.

2 (B) – Ground : Continuity should exist.

OK or NG

- OK >> Check connector for connection, bend and loose fit and repair.
- NG >> Repair harness or connector.

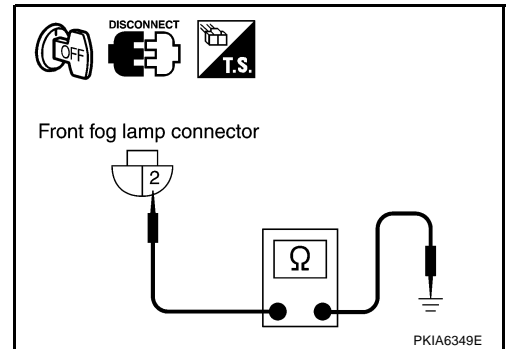

FRONT FOG LAMP


Aiming Adjustment

AKS00AMA


The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


Adjust aiming in the vertical direction by turning the adjusting screw.

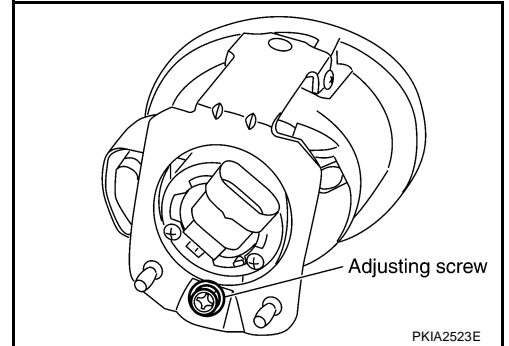

1. Set the distance between the screen and the center of the fog lamp lens as shown at left.
2. Turn front fog lamps ON.

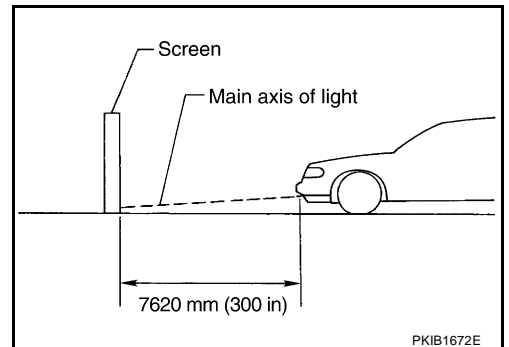

3. Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone is in the hatched area as shown in the figure.
 - When performing this adjustment, cover the headlamps and the opposite fog lamp, if necessary.

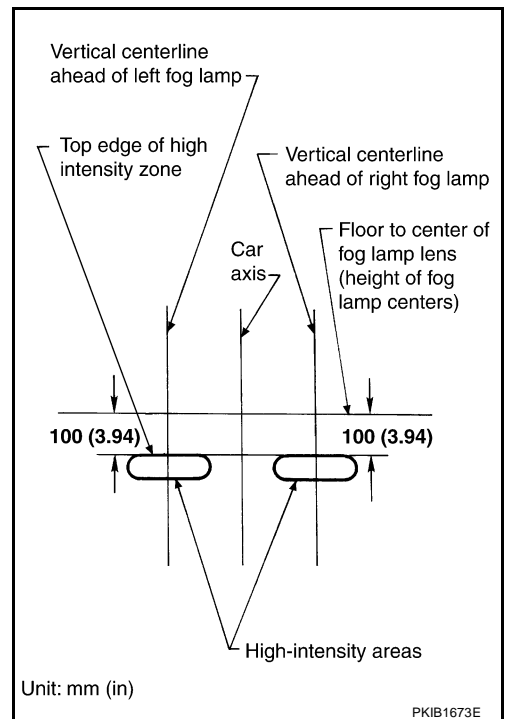

A
B
C
D
E
F
G
H
I
J
LT
L
M

FRONT FOG LAMP

AKS00AMB

Bulb Replacement


1. Remove fender protector front. Refer to [EI-22, "FENDER PROTECTOR"](#) in "E1" section.
2. Remove the one side of front bumper where a fog lamp bulb to be changed.
3. Disconnect connector.
4. Turn bulb socket counterclockwise and unlock it.

Fog lamp :12 V - 51 W (HB4 halogen)

5. Installation is the reverse order of removal.

CAUTION:


- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it. Never touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Never leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. May affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.

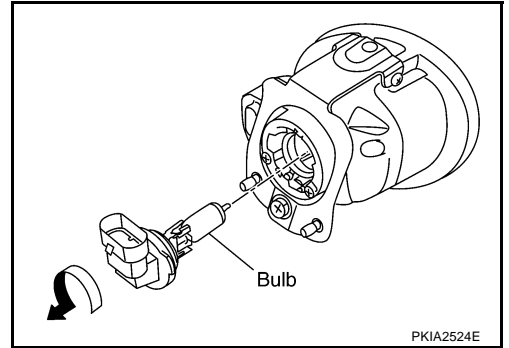

Removal and Installation

REMOVAL

1. Remove fender protector front. Refer to [EI-22, "FENDER PROTECTOR"](#) in "E1" section.
2. Remove the one side of front bumper where a fog lamp needs to be changed. Refer to [EI-14, "FRONT BUMPER"](#) in "E1" section.
3. Remove fog lamp mounting bolt.
4. Pull out fog lamp from vehicle and disconnect connector.

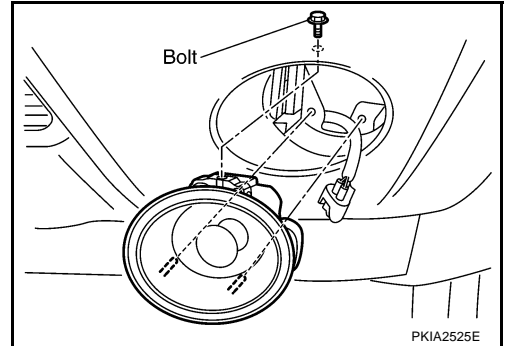

INSTALLATION

Installation is the reverse order of removal.

Front lamp mounting bolt  : 5.5 N·m (0.56 kg-m, 49 in-lb)


TURN SIGNAL AND HAZARD WARNING LAMPS

TURN SIGNAL AND HAZARD WARNING LAMPS

PDF:26120

Component Parts and Harness Connector Location

AKS00ALE

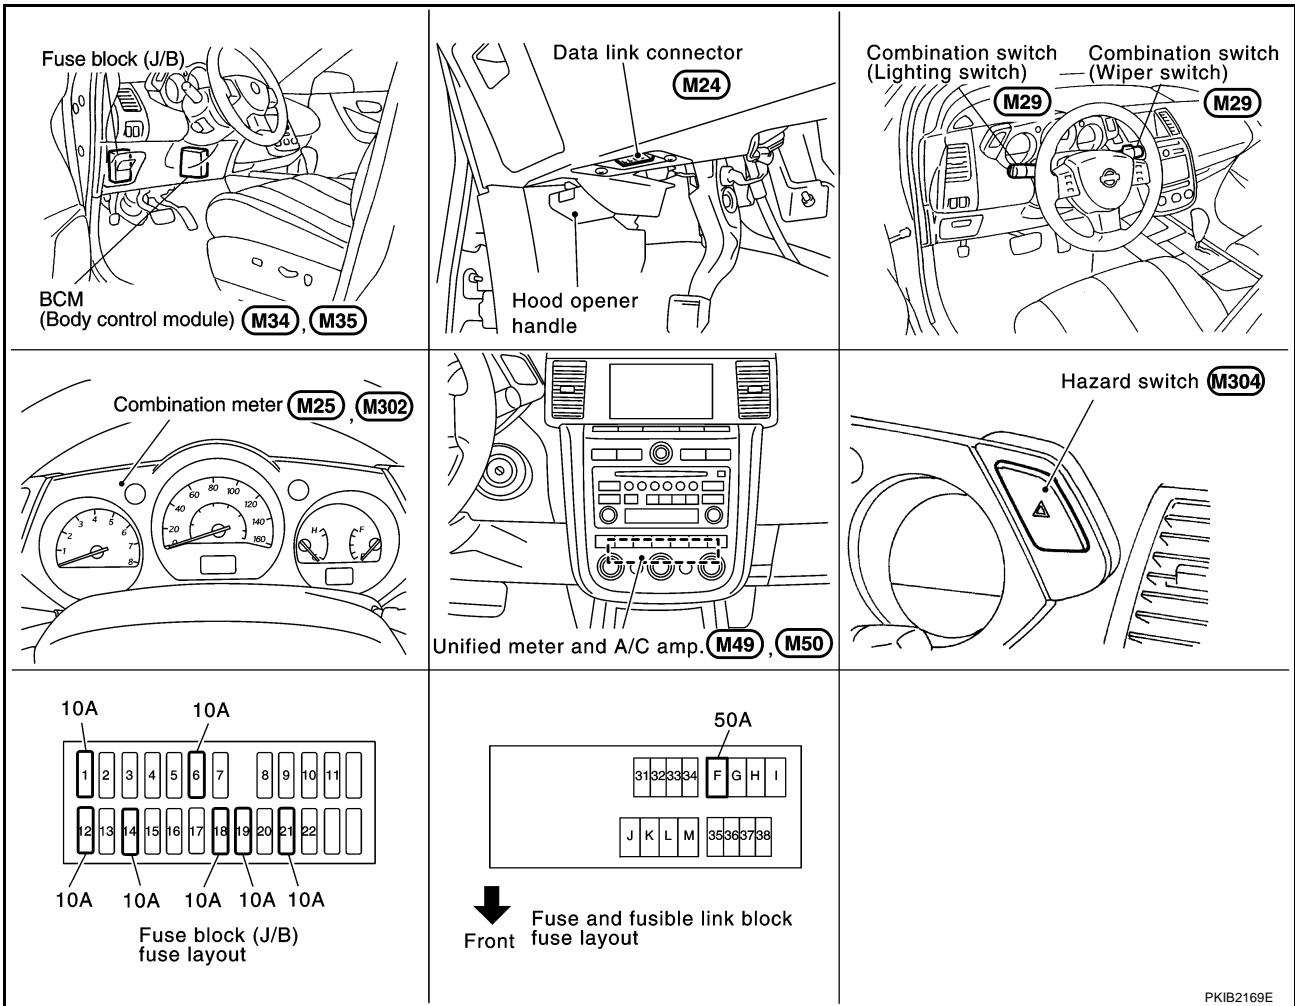

System Description

TURN SIGNAL OPERATION

AKS004KB

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM (body control module) terminal 38,
- through 10A fuse [No. 12, located in fuse block (J/B)]
- to unified meter and A/C amp. terminal 22,
- through 10A fuse [No. 14, located in fuse block (J/B)]
- to combination meter terminal 20.

Ground is supplied

- to BCM terminal 52
- through grounds E13, E26 and E28,
- to unified meter and A/C amp. terminals 29 and 30
- through grounds M14 and M78,
- to combination meter terminals 22, 23 and 24
- through grounds M14 and M78.

LH Turn Signal Lamp

When the turn signal switch (combination switch) is moved to the left position, the BCM receives input signal requesting the left turn signals to flash. The BCM then supplies power

- through BCM terminal 45

A
B
C
D
E
F
G
H
I
J

LT

L

M

TURN SIGNAL AND HAZARD WARNING LAMPS

- to front combination lamp LH terminal 2, and
- to rear combination lamp LH terminal 3.

Ground is supplied

- to front combination lamp LH terminal 8
- through grounds E13, E26 and E28,
- to rear combination lamp LH terminal 4
- through grounds B7 and B20.

The BCM also supplies input to unified meter and A/C amp. terminals 1 and 11 across the CAN communication lines.

The unified meter and A/C amp. which received the turn indicator signal makes a left turn signal indicator turn on in combination meter.

With power and input supplied, the BCM controls the flashing of the LH turn signal lamps.

RH Turn Signal Lamp

When the turn signal switch (combination switch) is moved to the right position, the BCM (body control module) receives input signal requesting the right turn signals to flash. The BCM then supplies power

- through BCM (body control module) terminal 46
- to front combination lamp RH terminal 2, and
- to rear combination lamp RH terminal 3.

Ground is supplied

- to front combination lamp RH terminal 8
- through grounds E13, E26 and E28,
- to rear combination lamp RH terminal 4
- through grounds B7 and B20.

The BCM also supplies input to unified meter and A/C amp. terminals 1 and 11 across the CAN communication lines.

The unified meter and A/C amp. which received the turn indicator signal makes a right turn signal indicator turn on in combination meter.

With power and input supplied, the BCM controls the flashing of the RH turn signal lamps.

HAZARD LAMP OPERATION

Power is supplied at all times

- through 50A fusible link (letter F, located in fuse and fusible link block)
- to BCM terminal 55,
- through 10A fuse [No. 18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 10A fuse [No. 19, located in fuse block (J/B)]
- to unified meter and A/C amp. terminal 21,
- through 10A fuse [No. 21, located in fuse block (J/B)]
- to combination meter terminal 21.

Ground is supplied

- to BCM terminal 52
- through grounds E13, E26 and E28,
- to unified meter and A/C amp. terminals 29 and 30
- through grounds M14 and M78,
- to combination meter terminals 22, 23 and 24
- through grounds M14 and M78.

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through combination meter terminal 9
- through combination meter terminals 22, 23 and 24
- through grounds M14 and M78.

TURN SIGNAL AND HAZARD WARNING LAMPS

The BCM then supplies power

- through BCM terminal 45
- to front combination lamp LH terminal 2
- to rear combination lamp LH terminal 3,
- through BCM terminal 46
- to front combination lamp RH terminal 2
- to rear combination lamp RH terminal 3.

Ground is supplied

- to front combination lamp LH terminal 8, and
- to front combination lamp RH terminal 8
- through grounds E13, E26 and E28,
- to rear combination lamp LH terminal 4, and
- to rear combination lamp RH terminal 4
- through grounds B7 and B20.

The BCM also supplies input to unified meter and A/C amp. terminals 1 and 11 across the CAN communication lines.

The unified meter and A/C amp. which received the turn indicator signal makes a left and right turn signal indicator turn on in combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps.

REMOTE CONTROL ENTRY SYSTEM OPERATION

Power is supplied at all times

- through 50A fusible link (letter F, located in fuse and fusible link block)
- to BCM terminal 55,
- through 10A fuse [No. 18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 10A fuse [No. 19, located in fuse block (J/B)]
- to unified meter and A/C amp. terminal 21,
- through 10A fuse [No. 21, located in fuse block (J/B)]
- to combination meter terminal 21.

Ground is supplied

- to BCM terminal 52
- through grounds E13, E26 and E28,
- to unified meter and A/C amp. terminals 29 and 30
- through grounds M14 and M78,
- to combination meter terminals 22, 23 and 24
- through grounds M14 and M78.

When the remote control entry system is triggered by input from the key fob, the BCM supplies power

- through BCM terminal 45
- to front combination lamp LH terminal 2
- to rear combination lamp LH terminal 3,
- through BCM terminal 46
- to front combination lamp RH terminal 2
- to rear combination lamp RH terminal 3.

Ground is supplied

- to front combination lamp LH terminal 8, and
- to front combination lamp RH terminal 8
- through grounds E13, E26 and E28,
- to rear combination lamp LH terminal 4, and
- to rear combination lamp RH terminal 4

A

B

C

D

E

F

G

H

I

J

LT

L

M

TURN SIGNAL AND HAZARD WARNING LAMPS

- through grounds B7 and B20.

The BCM also supplies input to unified meter and A/C amp. terminals 1 and 11 across the CAN communication lines.

The unified meter and A/C amp. which received the turn indicator signal makes a left and right turn signal indicator turn on in combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when key fob is used to activate the remote control entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

CAN Communication System Description

AKS004KC

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit


AKS007QV

Refer to [LAN-29, "CAN Communication Unit"](#) .

TURN SIGNAL AND HAZARD WARNING LAMPS

Schematic

AKS004KE

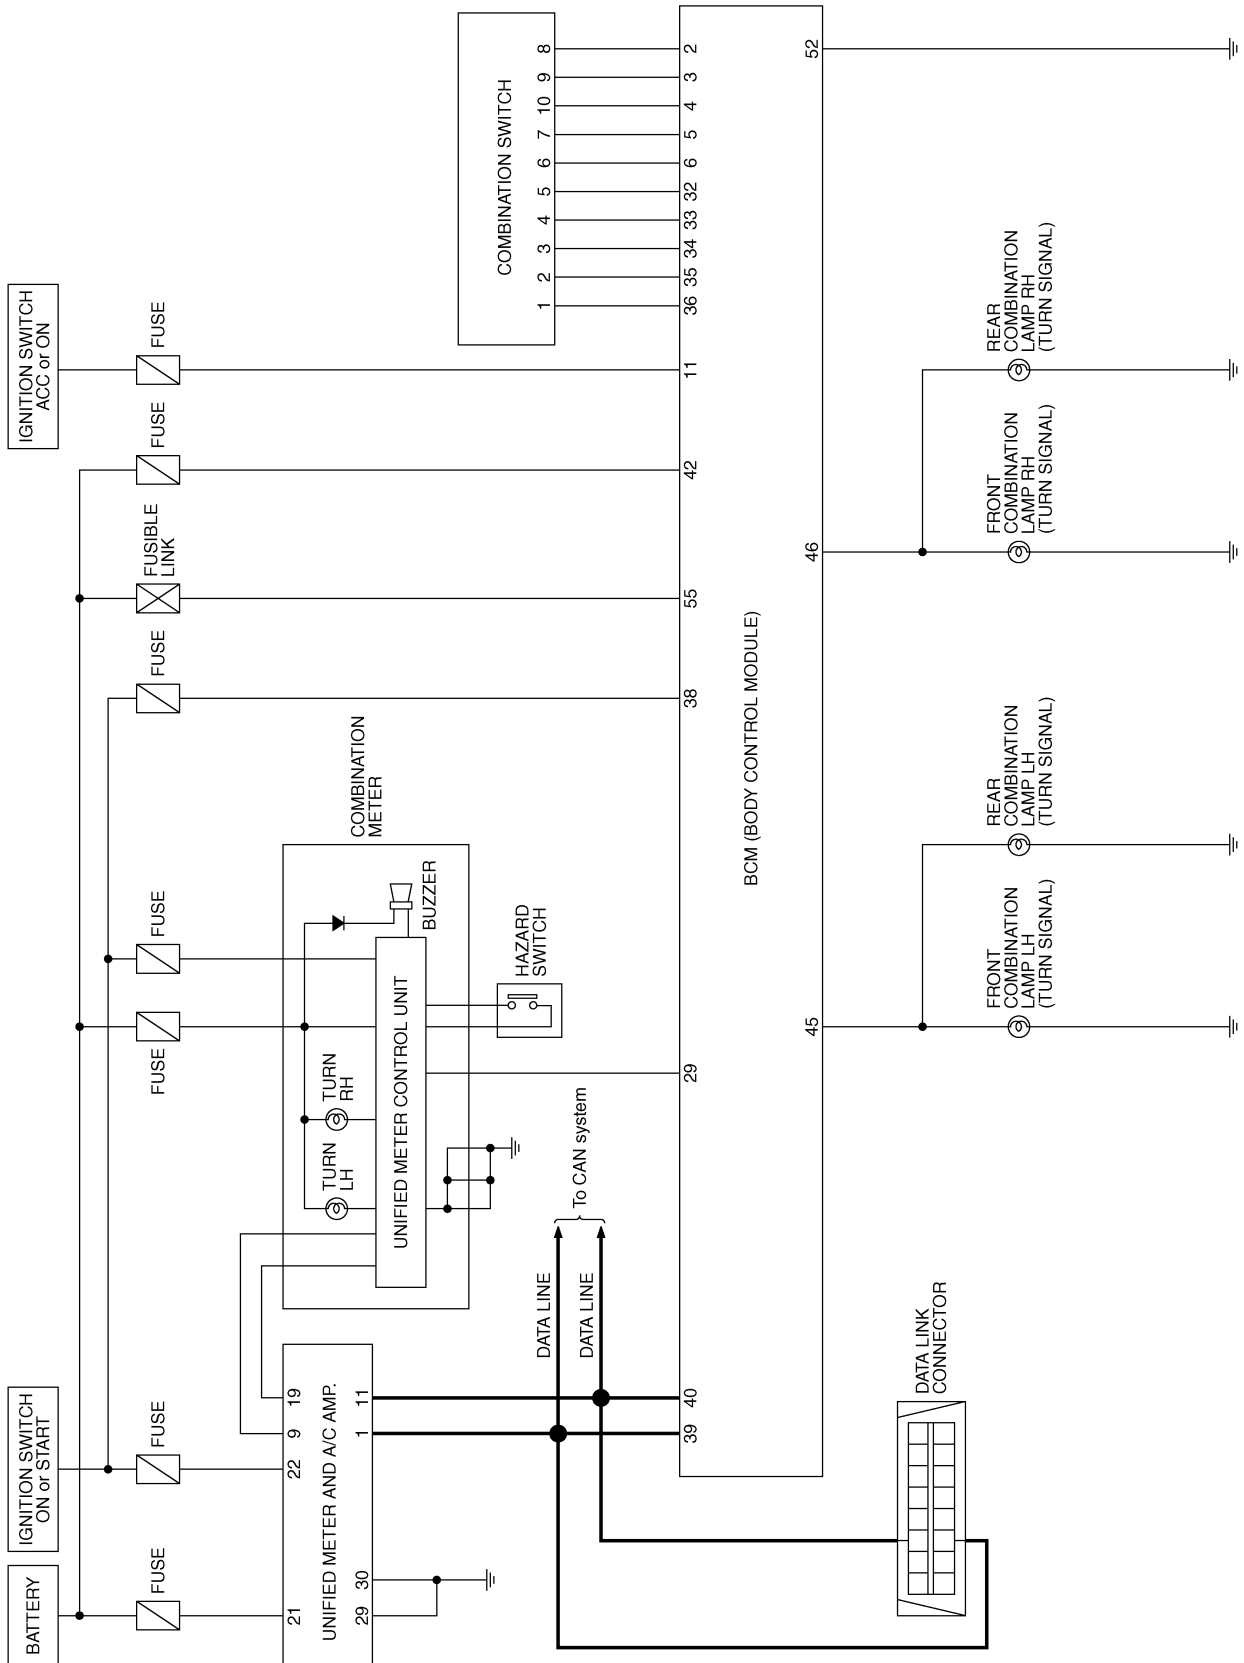

A
B
C
D
E
F
G
H
I
J
LT
L
M



TKWB0458E

TURN SIGNAL AND HAZARD WARNING LAMPS

AKS004KF

Wiring Diagram — TURN —

LT-TURN-01






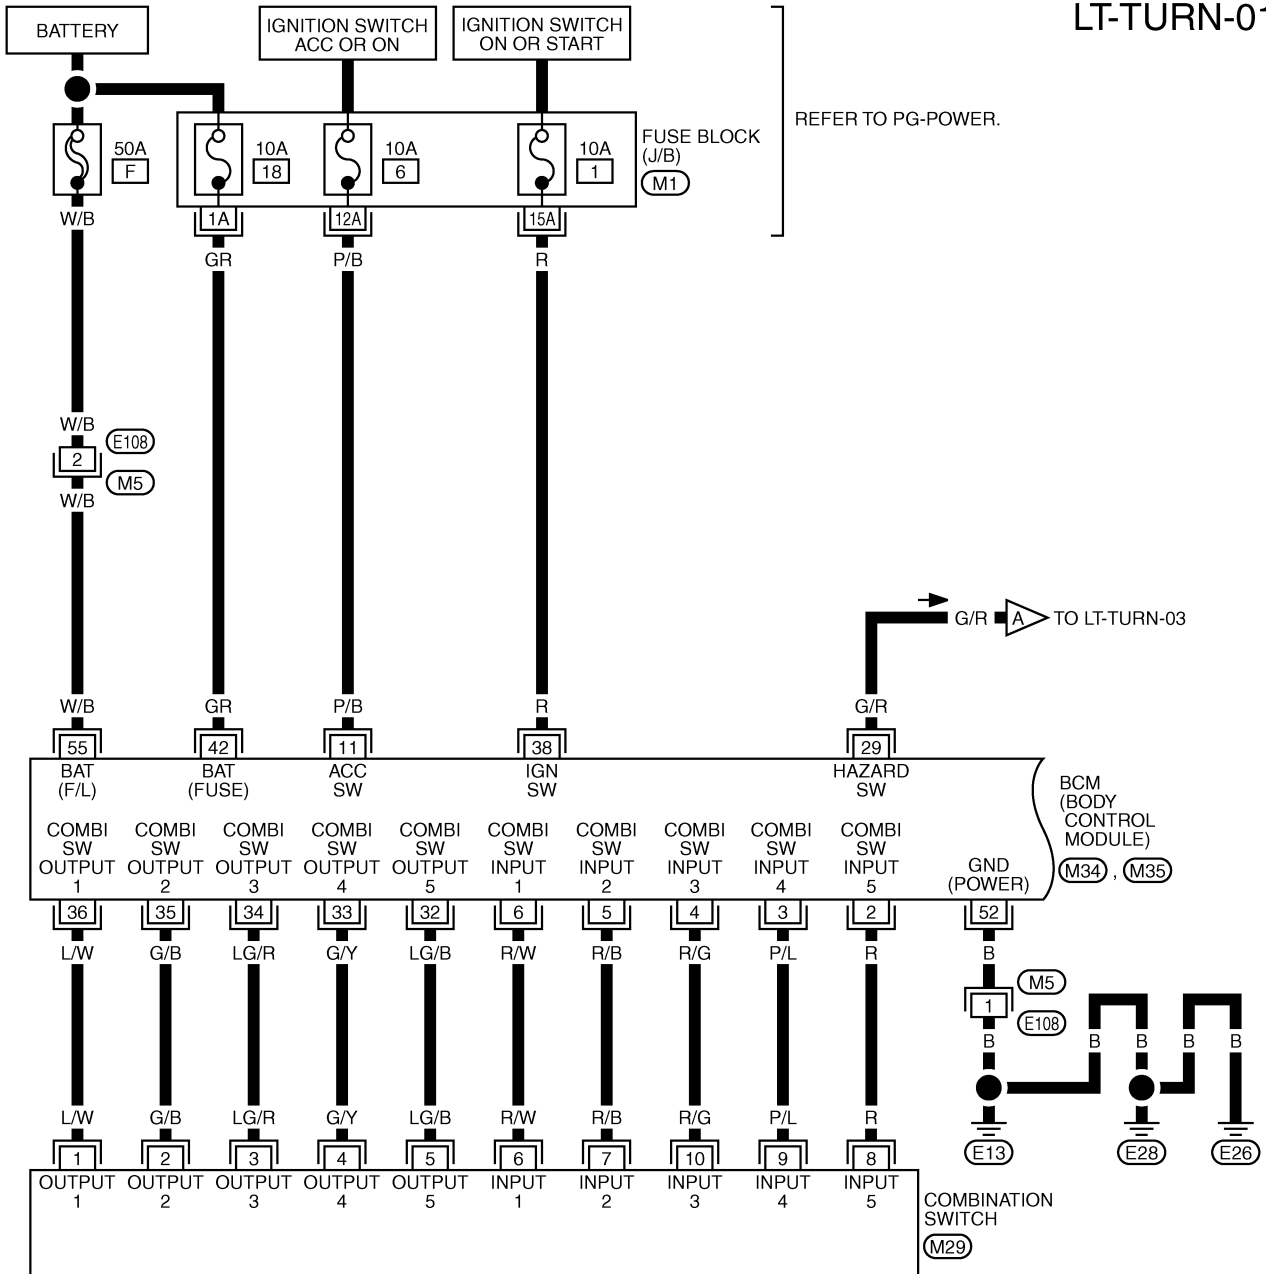


REFER TO THE FOLLOWING.
 (M1) - FUSE BLOCK-JUNCTION BOX (J/B)
 (M34), (M35) - ELECTRICAL UNITS

TKWB0459E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02

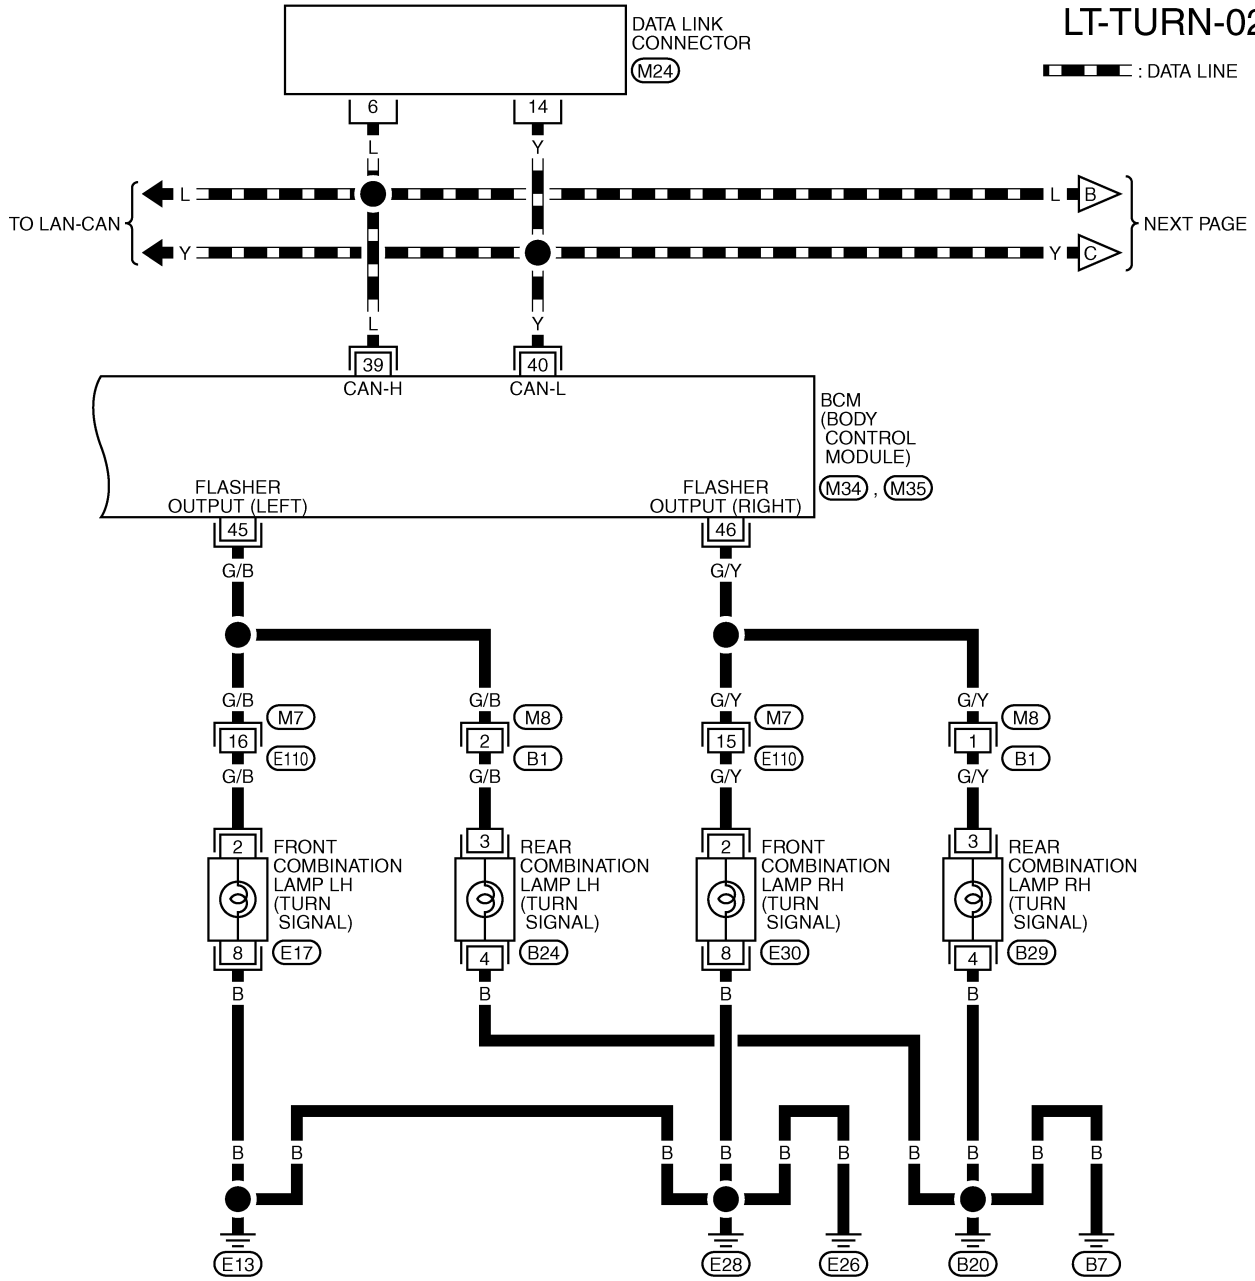




REFER TO THE FOLLOWING.
(M34), (M35) -ELECTRICAL
UNITS

TKWA1693E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-03

▬ : DATA LINE

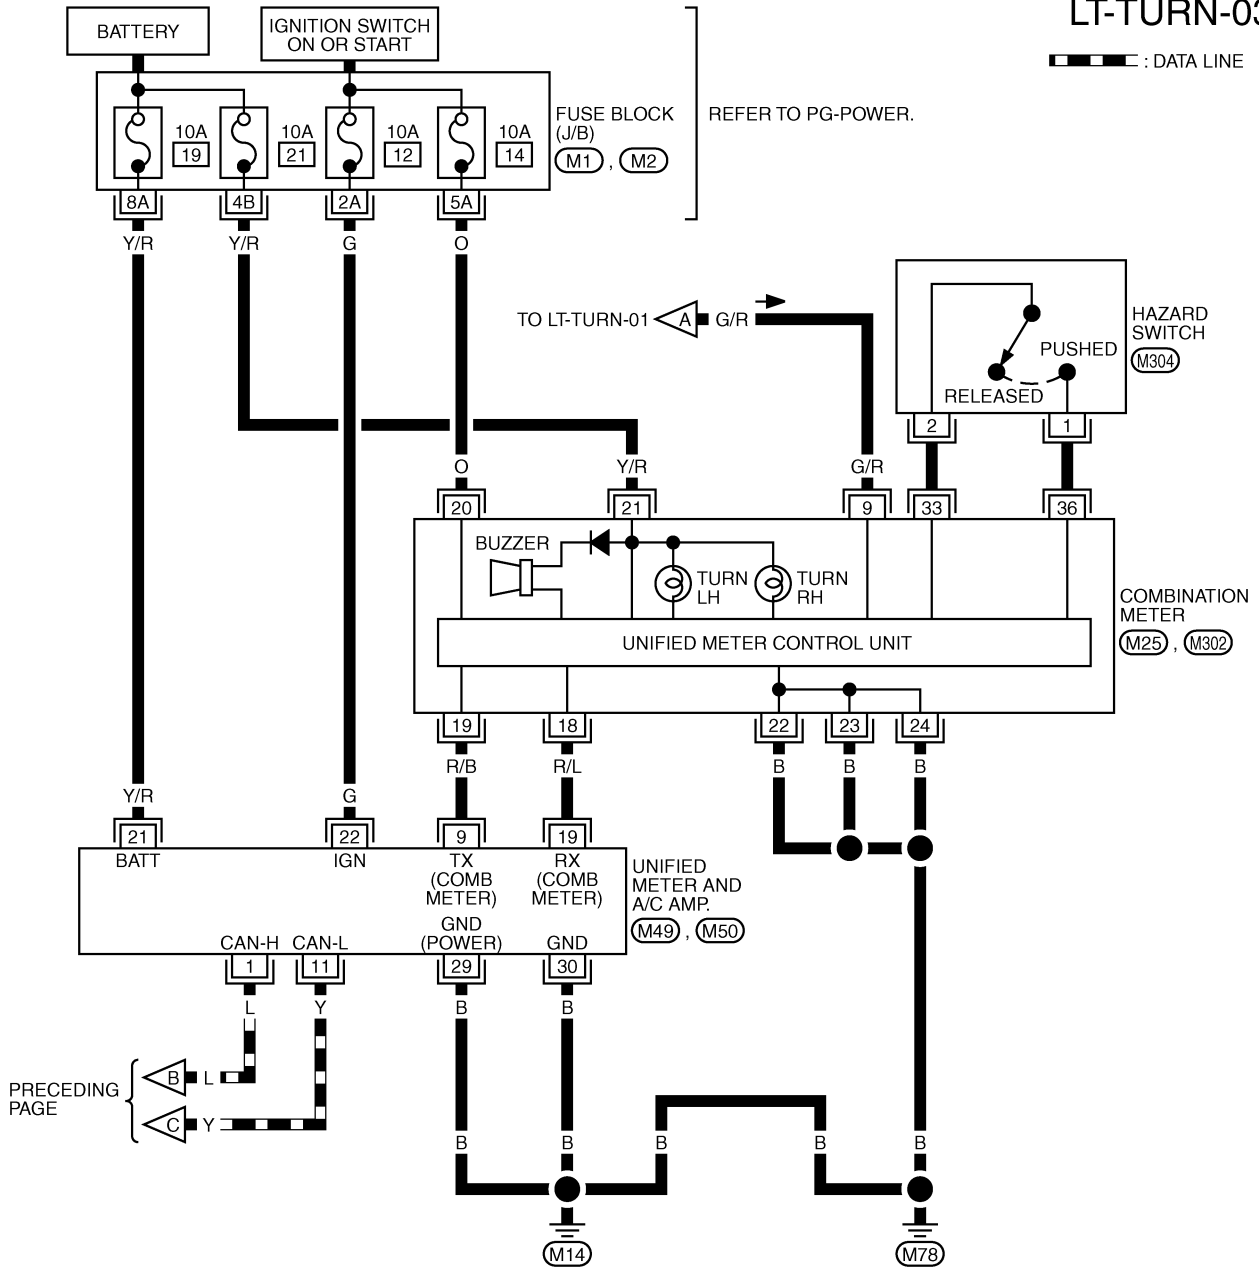

REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)







*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWB0899E

TURN SIGNAL AND HAZARD WARNING LAMPS





Terminals and Reference Value for BCM

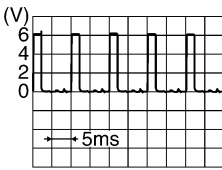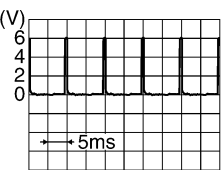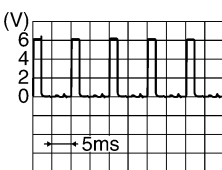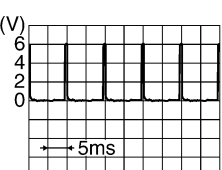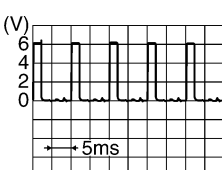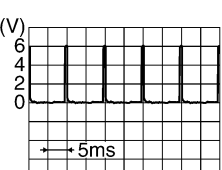AKS00ALF

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
2	R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>	
3	P/L	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>	
4	R/G	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>	
5	R/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>	
6	R/W	Combination switch input 1				
11	P/B	Ignition switch (ACC)	ACC	—	Battery voltage	
29	G/R	Hazard switch signal	OFF	Hazard switch	ON	Approx. 0V
					OFF	Battery voltage
32	LG/B	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>	
33	G/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>	

A
B
C
D
E
F
G
H
I
J
LT
L
M

TURN SIGNAL AND HAZARD WARNING LAMPS

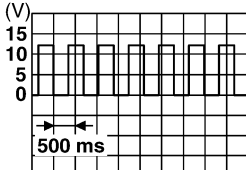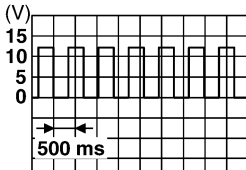Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
34	LG/R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>	
35	G/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>	
36	L/W	Combination switch output 1				
38	R	Ignition switch (ON)	ON	—	Battery voltage	
39	L	CAN – H	—	—	—	
40	Y	CAN – L	—	—	—	
42	GR	Battery power supply	OFF	—	Battery voltage	
45	G/B	Turn signal (left)	ON	Combination switch	Turn left ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
46	G/Y	Turn signal (right)	ON	Combination switch	Turn right ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
52	B	Ground	ON	—	Approx. 0V	
55	W/B	Battery power supply	OFF	—	Battery voltage	

How to Proceed With Trouble Diagnosis

AKS00ALG

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-123, "System Description"](#).
3. Perform preliminary check. Refer to [LT-133, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

TURN SIGNAL AND HAZARD WARNING LAMPS

AKS00ALH

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown fuses.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6

Refer to [LT-128. "Wiring Diagram — TURN —"](#) .

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-3. "POWER SUPPLY ROUTING CIRCUIT"](#) .

2. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

Terminal (+)		Terminal (-)	Ignition switch position		
Connector	Terminal (Wire color)		OFF	ACC	ON
M34	11 (P/B)	Ground	Approx. 0V	Battery voltage	Battery voltage
	38 (R)		Approx. 0V	Approx. 0V	Battery voltage
M35	42 (GR)		Battery voltage	Battery voltage	Battery voltage
	55 (W/B)		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

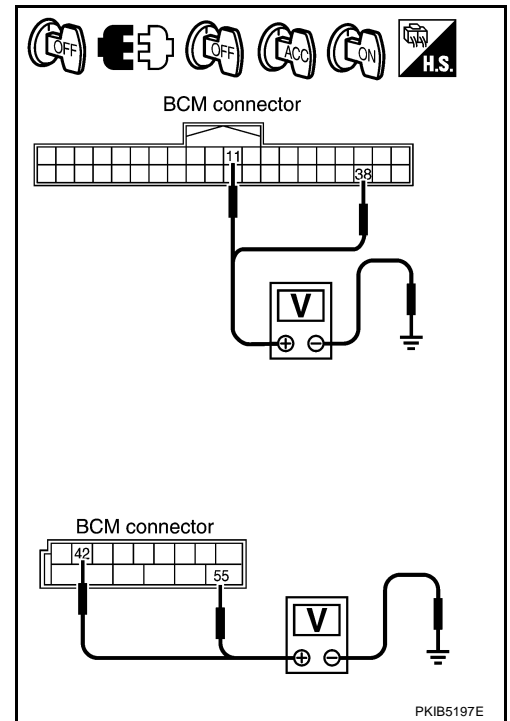

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

Terminal		Ground	Continuity
Connector	Terminal (Wire color)		
M35	52 (B)		Yes

OK or NG

OK >> INSPECTION END

NG >> Check ground circuit harness.

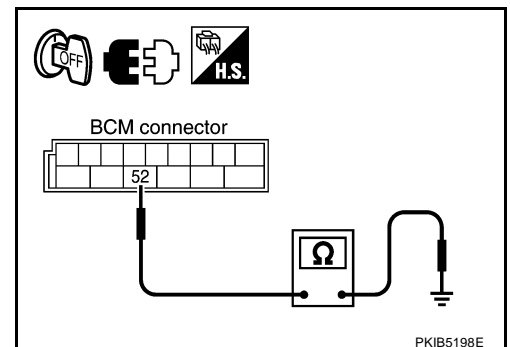

TURN SIGNAL AND HAZARD WARNING LAMPS

AKS00ALI

CONSULT-II Functions (BCM)

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnosis part	Diagnosis mode	Description
FLASHER	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to them.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn ignition switch ON.

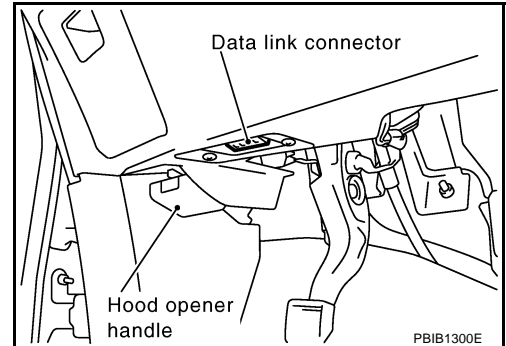


2. Touch "START (NISSAN BASED VHCL)".

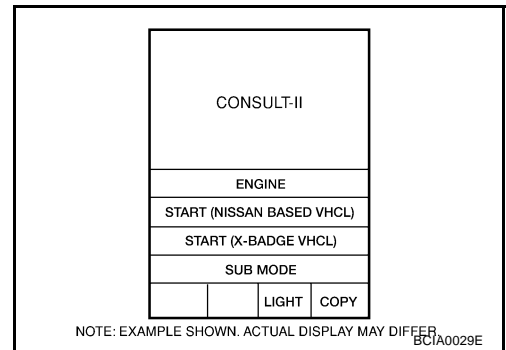

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

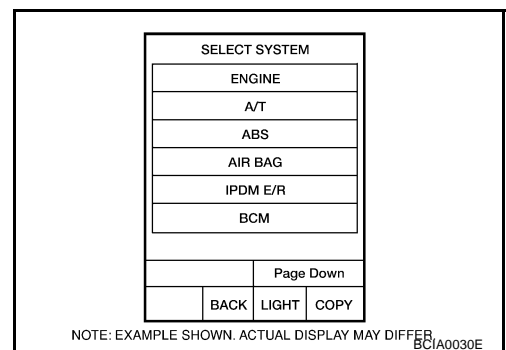

4. Touch "FLASHER" on "SELECT TEST ITEM" screen.

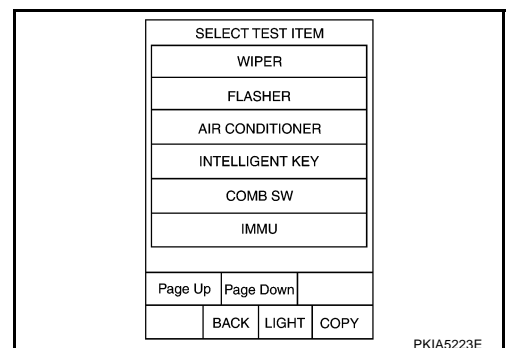

TURN SIGNAL AND HAZARD WARNING LAMPS

DATA MONITOR

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects items and monitors them.

4. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
5. Touch "START".
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW "ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.
TURN SIGNAL R "ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW ^{NOTE} "OFF"	—

NOTE:

This item is displayed, but cannot be monitored

ACTIVE TEST

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
FLASHER	With a certain operation (OFF, RH, LH), turn signal lamp can be operated.

Turn Signal Lamp Does Not Operate

AKS00ALJ

1. CHECK BULB

Check bulb of each turn signal lamp.

OK or NG

- OK >> GO TO 2.
NG >> Replace turn signal lamp bulb.

TURN SIGNAL AND HAZARD WARNING LAMPS

2. CHECK COMBINATION SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is : TURN SIGNAL R ON
TURN RH position**

**When lighting switch is : TURN SIGNAL L ON
TURN LH position**

ⓧ Without CONSULT-II

Refer to [LT-145, "Combination Switch Inspection"](#).

OK or NG

OK >> GO TO 3.

NG >> Check combination switch (lighting switch). Refer to [LT-145, "Combination Switch Inspection"](#).

DATA MONITOR			
MONITOR			
TURN SIGNAL R	ON		
TURN SIGNAL L	ON		
		RECORD	
MODE	BACK	LIGHT	COPY

PKIA7600E

3. ACTIVE TEST

Ⓜ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-135, "ACTIVE TEST"](#).
2. Make sure "FLASHER RIGHT" and "FLASHER LEFT" operates.

Turn signal lamp should operate.

ⓧ Without CONSULT-II

GO TO 4.

OK or NG

OK >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).

NG >> GO TO 4.

ACTIVE TEST			
FLASHER	OFF		
RH	LH	OFF	
MODE	BACK	LIGHT	COPY

PKIA5276E

4. CHECK SHORT CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector and all turn signal lamp connectors.
3. Check continuity (short circuit) between harness connector of BCM and ground.

Terminal			Continuity
BCM		Ground	
Connector	Terminal (Wire color)		
RH	M35	46 (G/Y)	No
LH		45 (G/B)	

OK or NG

OK >> Replace BCM if turn signal lamps does not work after setting the connector again. Refer to [BCS-16, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.

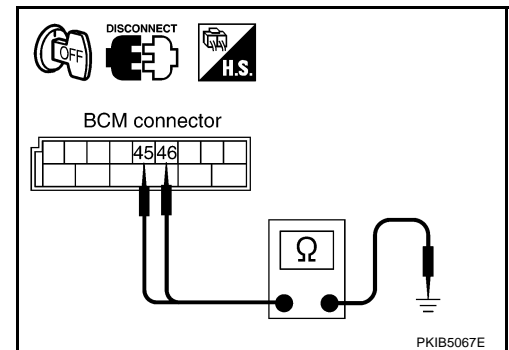

TURN SIGNAL AND HAZARD WARNING LAMPS

Hazard Warning Lamp Does Not Operate But Turn Signal Lamp Operate

AKS00ALK

1. CHECK BULB

Check bulb of each turn signal lamp.

OK or NG


- OK >> GO TO 2.
- NG >> Replace bulb.

2. CHECK HAZARD SWITCH INPUT SIGNAL

☑ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor to make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.


When hazard switch is ON : HAZARD SW ON position

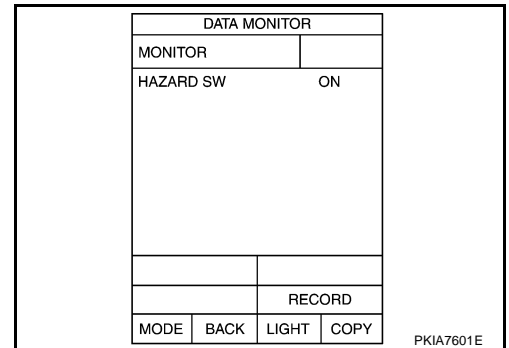

☒ Without CONSULT-II

Check voltage between BCM harness connector M34 terminal 29 (G/R) and ground.

Terminal (+)		Terminal (-)	Condition	Voltage
Connector	Terminal (Wire color)			
M34	29 (G/R)	Ground	Hazard switch is ON	Approx. 0V
			Hazard switch is OFF	Battery voltage

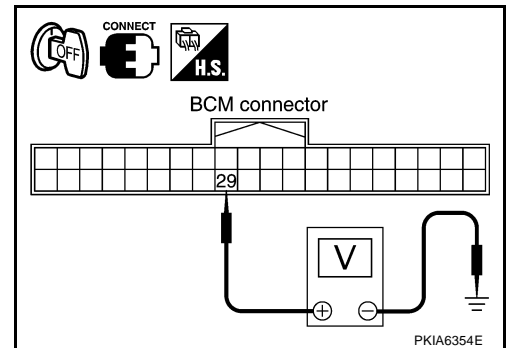

OK or NG

- OK >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.


3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and combination meter connector.
3. Check continuity BCM harness connector M34 terminal 29 (G/R) and combination meter harness connector M25 terminal 9 (G/R).

29 (G/R) – 9 (G/R) : Continuity should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

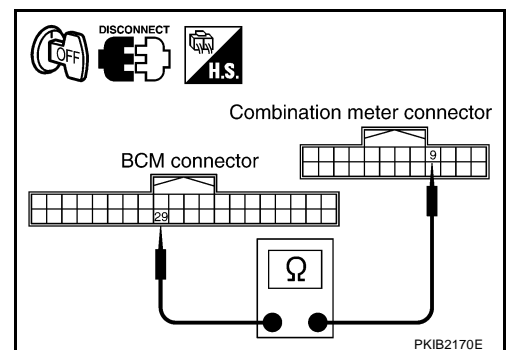

TURN SIGNAL AND HAZARD WARNING LAMPS

4. CHECK HAZARD SWITCH


1. Remove hazard switch from combination meter lid. Refer to [LT-141, "Removal and Installation"](#).
2. Check continuity hazard switch.

Terminal		Condition	Continuity
Hazard switch			
1	2	Hazard switch is ON.	Yes
		Hazard switch is OFF.	No

OK or NG

OK >> GO TO 6.

NG >> Replace hazard switch.

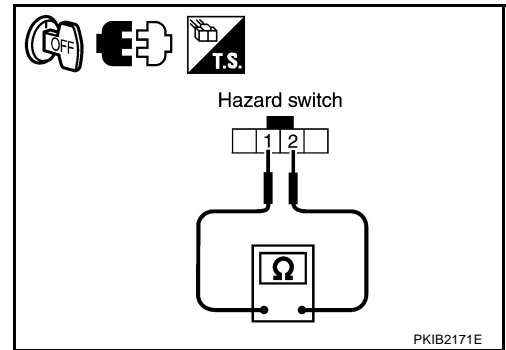

5. CHECK HAZARD SWITCH CIRCUIT

1. Check continuity between hazard switch harness connector M304 terminal 1 and combination meter harness connector M302 terminal 36.

1 - 36 : Continuity should exist.


2. Check continuity between hazard switch harness connector M304 terminal 2 and combination meter harness connector M302 terminal 33.

2 - 33 : Continuity should exist.

OK or NG

OK >> Replace combination meter.

NG >> Repair or replace harness.

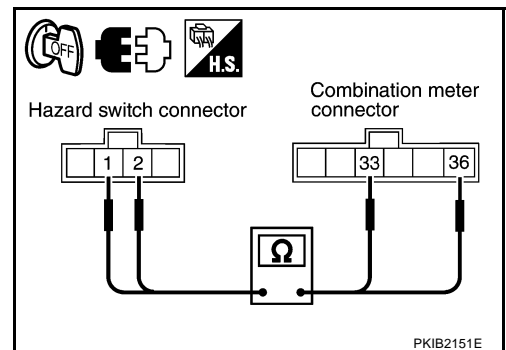

Turn Signal Indicator Lamp Does Not Operate

1. CHECK BULB

Check bulb of turn signal indicator lamp in combination meter.

OK or NG

OK >> Replace combination meter.

NG >> Replace indicator bulb.

AKS00ALL

TURN SIGNAL AND HAZARD WARNING LAMPS

Bulb Replacement (Front Turn Signal Lamp)

AKS00ALM

Refer to [LT-36, "Bulb Replacement"](#) in "HEADLAMP" (XENON TYPE).

Refer to [LT-66, "Bulb Replacement"](#) in "HEADLAMP" (CONVENTIONAL TYPE).

A

Bulb Replacement (Rear Turn Signal Lamp)

AKS00ALN

Refer to [LT-170, "Bulb Replacement"](#) in "REAR COMBINATION LAMP".

B

Removal and Installation of Front Turn Signal Lamp

AKS00ALO

Refer to [LT-37, "Removal and Installation"](#) in "HEADLAMP" (XENON TYPE).

Refer to [LT-67, "Removal and Installation"](#) in "HEADLAMP" (CONVENTIONAL TYPE).

C

Removal and Installation of Rear Turn Signal Lamp

AKS00ALP

Refer to [LT-170, "Removal and Installation"](#) in "REAR COMBINATION LAMP".

D

E

F

G

H

I

J

LT

L

M

LIGHTING AND TURN SIGNAL SWITCH

LIGHTING AND TURN SIGNAL SWITCH


PFP:25540

Removal and Installation

AKS005LK

REMOVAL

1. Remove instrument driver lower panel and steering column cover. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) in "IP" section.
2. While pressing pawls in direction as shown in the figure, pull lighting and turn signal switch toward driver door and disconnect from the base.

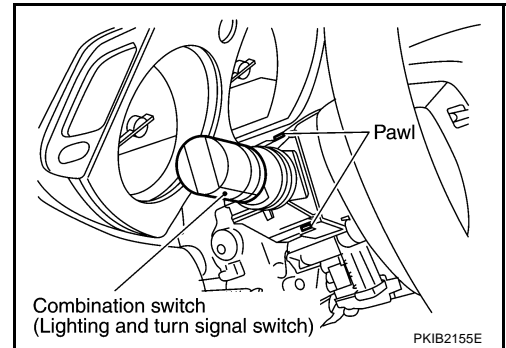

INSTALLATION

Installation is the reverse order of removal.

HAZARD SWITCH

HAZARD SWITCH


PFP:25290

Removal and Installation

AKS005LL

REMOVAL

1. Remove meter lid. Refer to [DI-26, "Disassembly and Assembly of Combination Meter"](#) in "DI" section.
2. Disconnect hazard switch connector.
3. Press pawl on reverse side and remove the hazard switch.

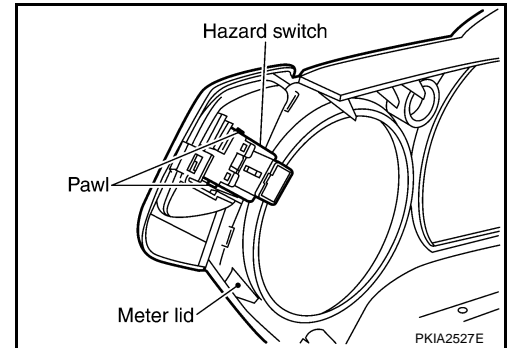

INSTALLATION

Installation is the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M

COMBINATION SWITCH

PFP:25567


COMBINATION SWITCH

Wiring Diagram — COMBSW —

AKS00A3X

LT-COMBSW-01

▬ : DATA LINE

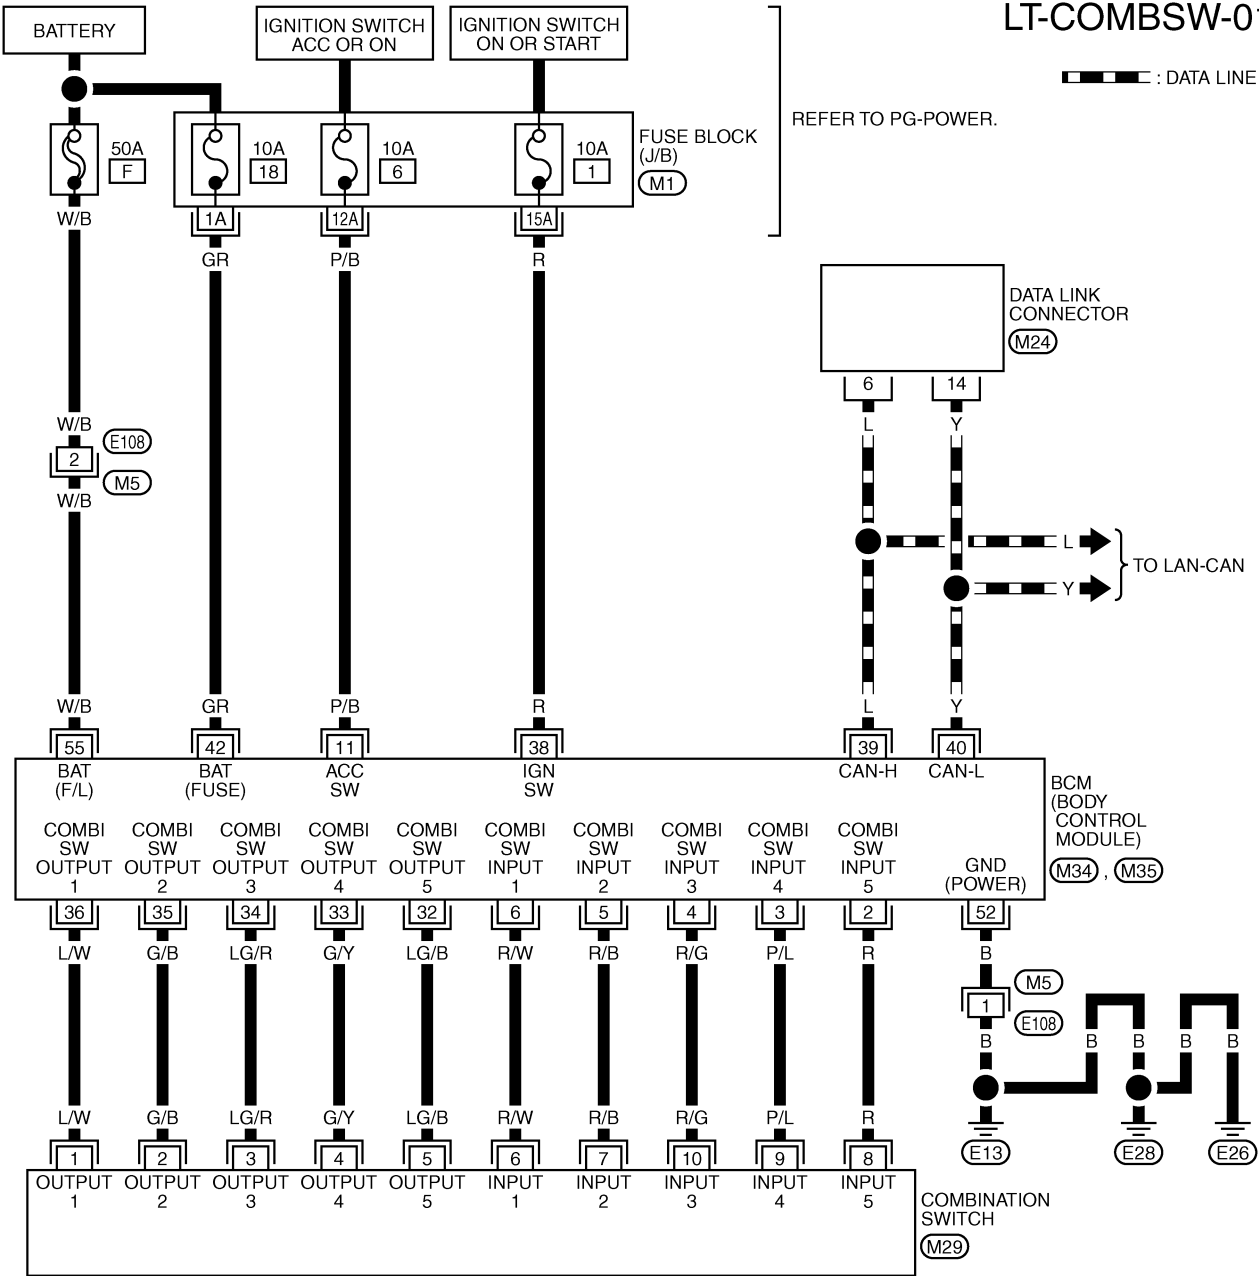

REFER TO THE FOLLOWING.

- (M1) - FUSE BLOCK-JUNCTION BOX (J/B)
- (M34), (M35) - ELECTRICAL UNITS

TKWB0460E

COMBINATION SWITCH

Combination Switch Reading Function

AKS00A3Y

For details, refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) in "BCS" section.

CONSULT-II Functions (BCM)

AKS00CRG

CONSULT-II can display each diagnostic item using the diagnostic test mode shown following.


BCM diagnosis part	Diagnosis mode	Description
COMB SW	DATA MONITOR	Displays BCM input data in real time.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn ignition switch ON.

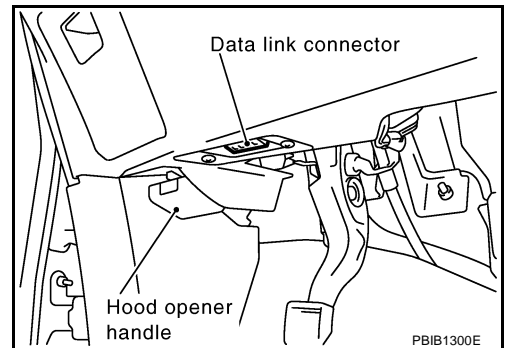

2. Touch "START (NISSAN BASED VHCL)".

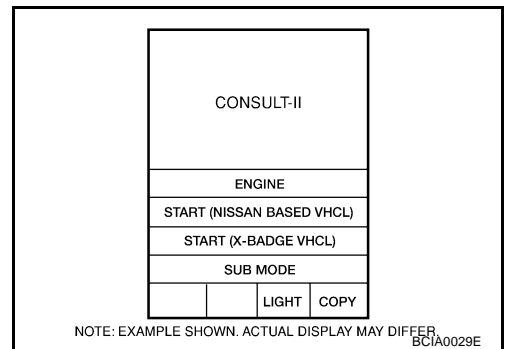


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

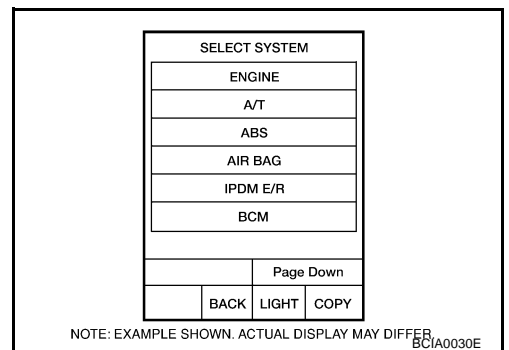

COMBINATION SWITCH

4. Touch "COMB SW".

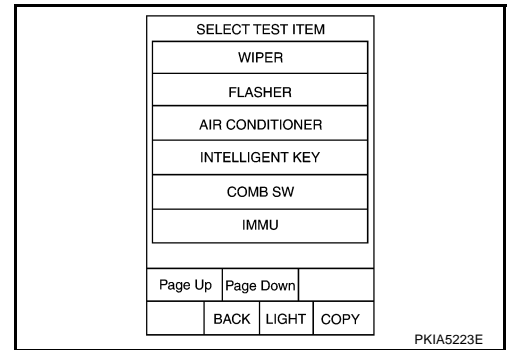

DATA MONITOR

Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects items and monitors them.

4. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
5. Touch "START".
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 1 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1ST or 2ND position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR FOG SW "ON/OFF"	Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT "ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW "ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME "1 - 7"	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.
RR WIPER ON "ON/OFF"	Displays "rear Wiper (ON)/Other (OFF)" status as judged from wiper switch signal.
RR WIPER INT "ON/OFF"	Displays "rear Wiper INT (ON)/Other (OFF)" status as judged from wiper switch signal.
RR WASHER SW "ON/OFF"	Displays "rear Washer Switch (ON)/Other (OFF)" status as judged from wiper switch signal.

COMBINATION SWITCH

Combination Switch Inspection

AKS00A40

1. SYSTEM CHECK

1. Referring to table below, check which system malfunctioning switch belongs to.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP1
INT VOLUME 1	RR WASHER	—	HEAD LAMP2	HI BEAM
RR WIPER INT	INT VOLUME 3	AUTO LIGHT	—	LIGHT SW 1ST
INT VOLUME 2	RR WIPER ON	—	FR FOG	—

>> Check the system to which malfunctioning switch belongs, and GO TO 2.

2. SYSTEM CHECK

Ⓜ With CONSULT-II

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

1. Connect CONSULT-II, and select "COMB SW" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR".
3. Select "START", and confirm that other switches in malfunctioning system operate normally.

Example: When the auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

DATA MONITOR	
MONITOR	
TURN SIGNAL R	OFF
TURN SIGNAL L	OFF
HIBEAM SW	OFF
HEAD LAMP SW1	OFF
HEAD LAMP SW2	OFF
LIGHT SW 1ST	OFF
PASSING SW	OFF
AUTO LIGHT SW	OFF
FR FOG SW	OFF
Page Down	
RECORD	
MODE	BACK
LIGHT	COPY

PKIA7602E

ⓧ Without CONSULT-II

Operating combination switch, and confirm that other switches in malfunctioning system operate normally.
Example: When the auto light switch is malfunctioning, confirm that FRONT WIPER LOW and FRONT WIPER INT in System 3, to which the auto light switch belongs, operate normally.

Check results


- Other switches in malfunctioning system operate normally.>>Replace lighting switch or wiper switch.
Other switches in malfunctioning system do not operate normally.>>GO TO 3.

COMBINATION SWITCH

3. HARNESS INSPECTION


1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

Suspect system	Terminal				Continuity	
	BCM		Combination switch			
	Connector	Terminal (Wire color)	Connector	Terminal (Wire color)		
1	M34	Input 1	6 (R/W)	M29	6 (R/W)	Yes
		Output 1	36 (L/W)		1 (L/W)	
2		Input 2	5 (R/B)		7 (R/B)	
		Output 2	35 (G/B)		2 (G/B)	
3		Input 3	4 (R/G)		10 (R/G)	
		Output 3	34 (LG/R)		3 (LG/R)	
4		Input 4	3 (P/L)		9 (P/L)	
		Output 4	33 (G/Y)		4 (G/Y)	
5		Input 5	2 (R)		8 (R)	
		Output 5	32 (LG/B)		5 (LG/B)	

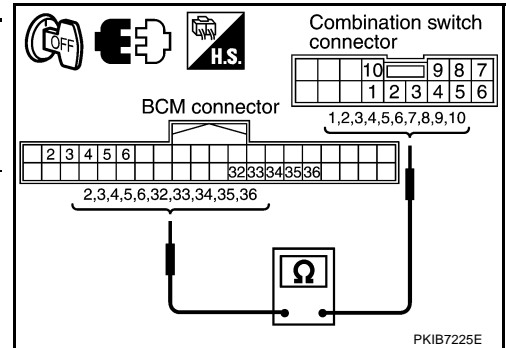

4. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

Suspect system	Terminal				Continuity
	BCM		Ground		
	Connector	Terminal (Wire color)			
1	M34	Input 1	6 (R/W)	Ground	No
		Output 1	36 (L/W)		
2		Input 2	5 (R/B)		
		Output 2	35 (G/B)		
3		Input 3	4 (R/G)		
		Output 3	34 (LG/R)		
4		Input 4	3 (P/L)		
		Output 4	33 (G/Y)		
5		Input 5	2 (R)		
		Output 5	32 (LG/B)		

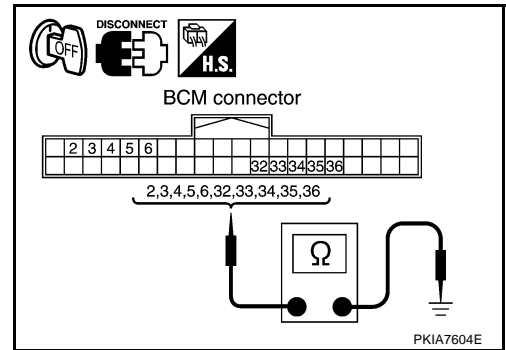

OK or NG

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

COMBINATION SWITCH

4. BCM OUTPUT TERMINAL INSPECTION


1. Turn lighting switch and wiper switch into OFF.
2. Set wiper dial position 4.
3. Connect BCM and combination switch connectors, and check BCM output terminal voltage waveform of suspect malfunctioning system.

Suspect system	Terminal		(-)
	Combination switch (+)		
	Connector	Terminal (Wire color)	
1	M29	1 (L/W)	Ground
2		2 (G/B)	
3		3 (LG/R)	
4		4 (G/Y)	
5		5 (LG/B)	

OK or NG

OK >> Open circuit in combination switch, GO TO 5.

NG >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).

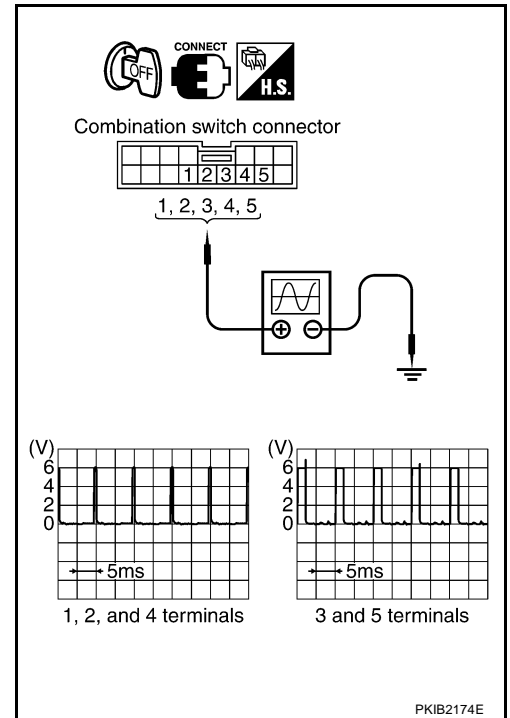

5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch	Confirm check results	OK	INSPECTION END	Confirm check results	OK	INSPECTION END	Confirm check results	OK	INSPECTION END
		NG	Replace wiper switch		NG	Replace switch base		NG	Confirm symptom again

>> INSPECTION END

Removal and Installation

For details, refer to [LT-140, "LIGHTING AND TURN SIGNAL SWITCH"](#).

STOP LAMP



PFP:26550

AKS004L1

LT-STOP/L-01

STOP LAMP

Wiring Diagram — STOP/L —

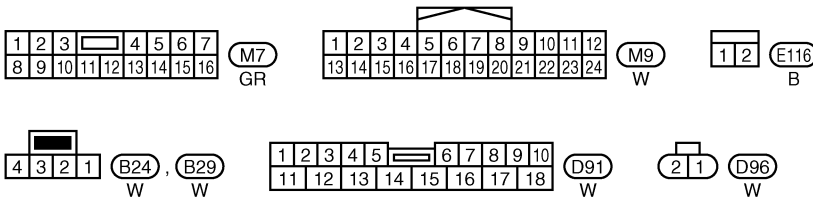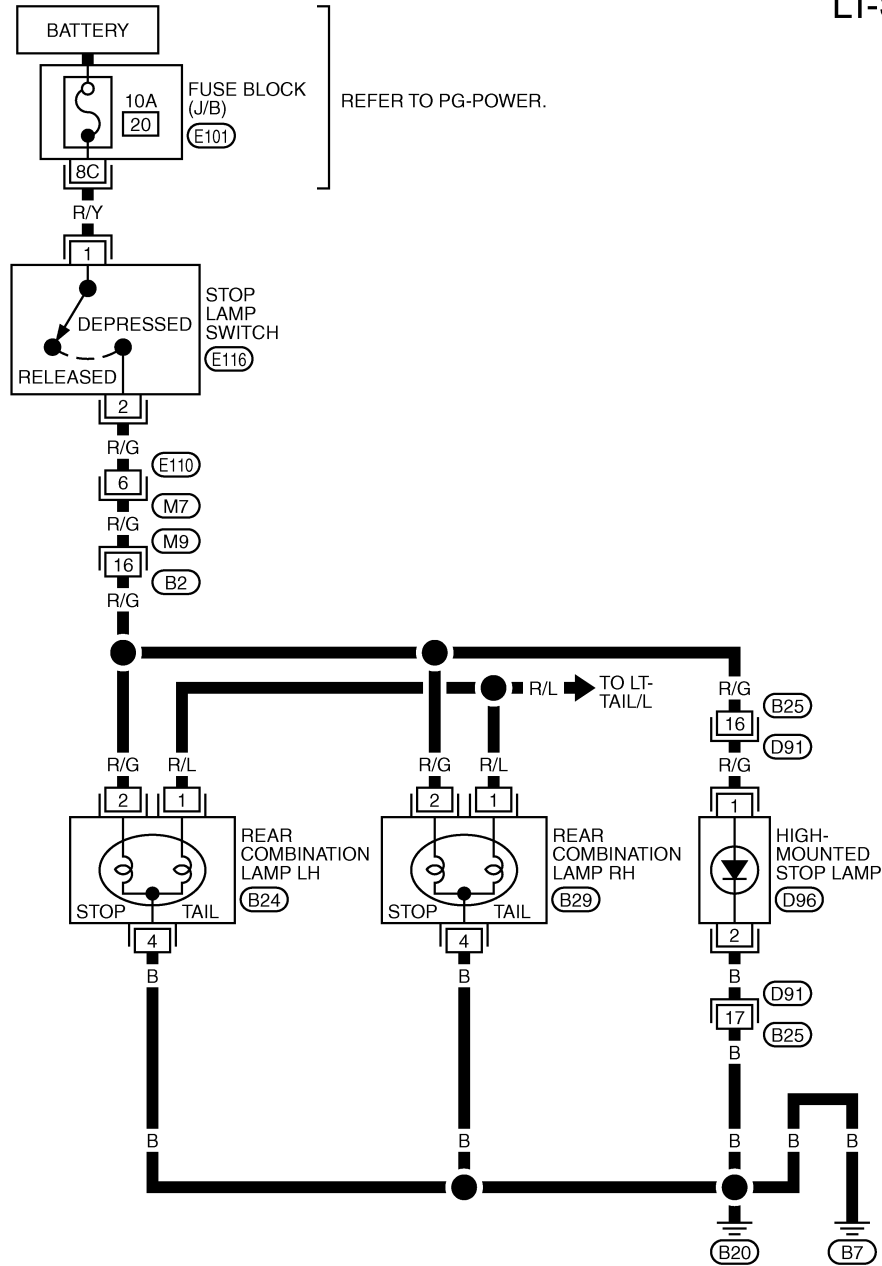

REFER TO THE FOLLOWING.
 (E101) - FUSE BLOCK-JUNCTION BOX (J/B)

TKWB0461E

STOP LAMP

High-Mounted Stop Lamp

BULB REPLACEMENT, REMOVAL AND INSTALLATION


1. Remove cover high-mounted stop lamp on back door inner panel. Refer to [EI-40, "BACK DOOR TRIM"](#) in "EI" section.
2. Disconnect high-mounted stop lamp connector.
3. Remove washer tube from high-mounted stop lamp.
4. Remove nuts and remove high-mounted stop lamp from back door.

High-mounted stop lamp : LED

5. Installation is the reverse order of removal.
 - Install a new seal packing to the high-mounted stop lamp.

CAUTION:

Seal packing cannot be reused.

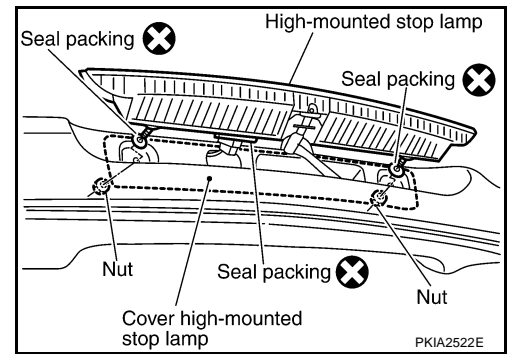

Stop Lamp

BULB REPLACEMENT

Refer to [LT-170, "Bulb Replacement"](#) in "REAR COMBINATION LAMP".

REMOVAL AND INSTALLATION

Refer to [LT-170, "Removal and Installation"](#) in "REAR COMBINATION LAMP".

STEP LAMP

STEP LAMP

PFP:26420

Bulb Replacement


AKS005LQ

Wiring diagram. Refer to [LT-182, "Wiring Diagram — ROOM/L —"](#) .

1. Disconnect the battery cable from the negative terminal or remove power fuse.
2. Insert a screwdriver in the chink between lens and door trim, and remove the lens.
3. Remove the bulb.

Step lamp : 12V - 2.7W


4. Installation is the reverse order of removal.

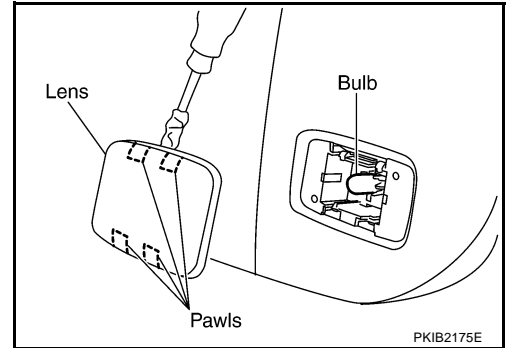

Removal and Installation

REMOVAL

1. Insert a screwdriver in the chink between lens and door trim, and remove the lens.
2. Using a clip driver or a suitable tool, press and disengage the metal clip fittings of the step lamp.
3. Disconnect the step lamp connector and remove the step lamp.

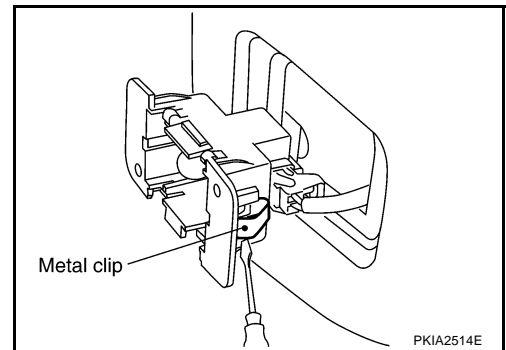

INSTALLATION

Installation is the reverse order of removal.

BACK-UP LAMP

PFP:26550

A
B
C
D
E
F
G
H
I
J
LT
L
M






BACK-UP LAMP

Wiring Diagram — BACK/L —

AKS004L8

LT-BACK/L-01

▬ : DATA LINE

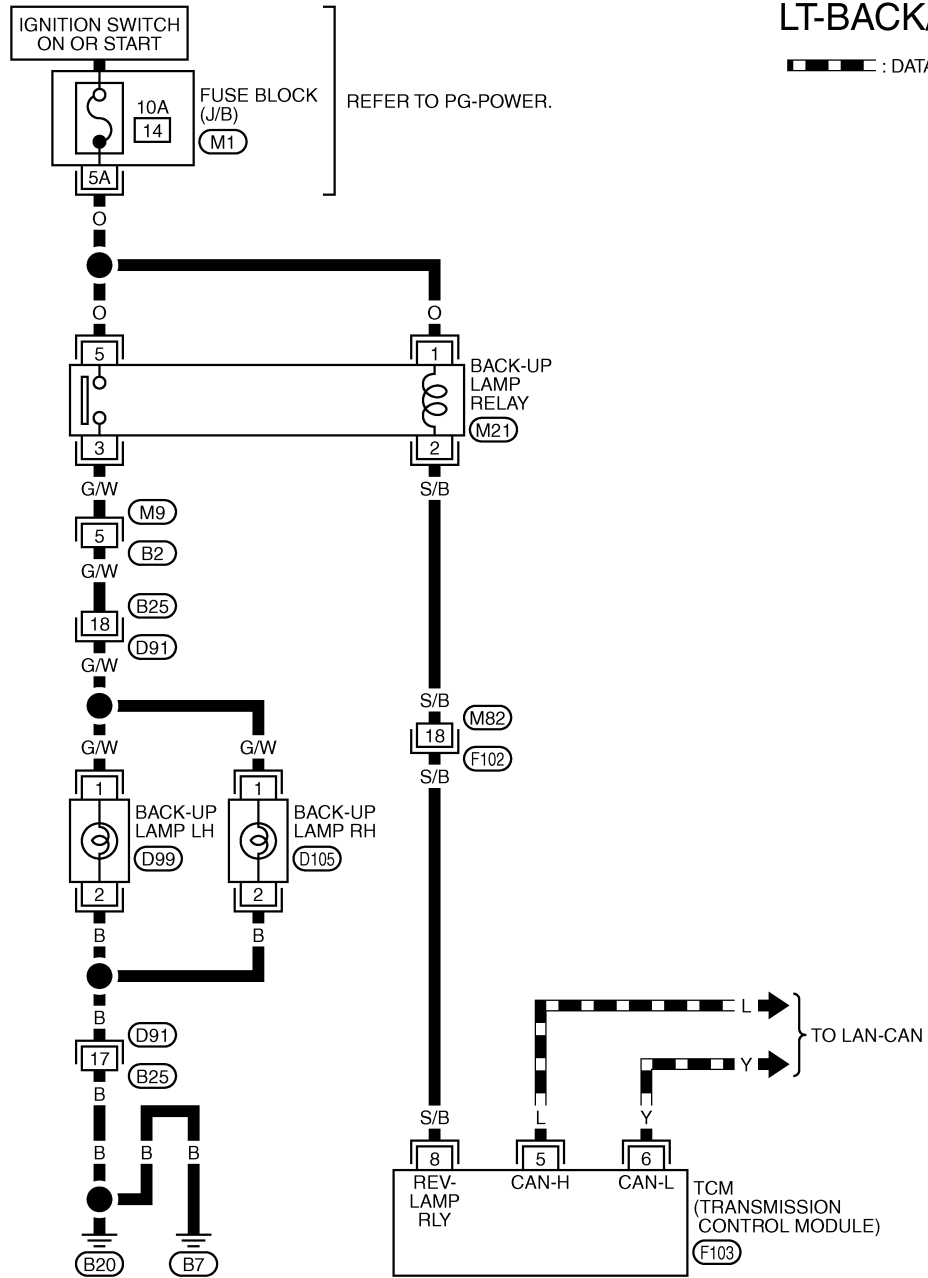

REFER TO THE FOLLOWING.

(M1) - FUSE BLOCK-JUNCTION BOX (J/B)

(F103) - ELECTRICAL UNITS

TKWB0462E

BACK-UP LAMP


Bulb Replacement

AKS004L9

1. Remove back door finisher. Refer to [EI-40, "BACK DOOR TRIM"](#) in "EI" section.
2. Disconnect the back-up lamp connector.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.

Back-up lamp : 12V - 16W

5. Installation is the reverse order of removal.

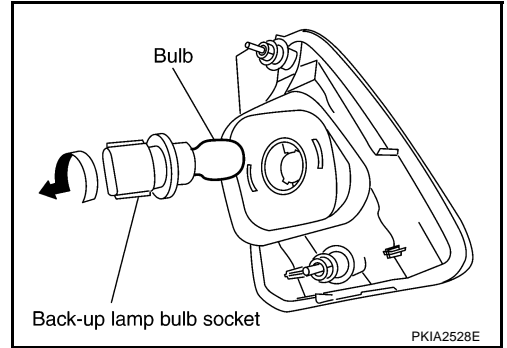


Removal and Installation

REMOVAL

AKS004LA

1. Remove back door finisher. Refer to [EI-40, "BACK DOOR TRIM"](#) in "EI" section.
2. Remove the back-up lamp mounting nuts and remove it.
3. Disconnect the back-up lamp connector.

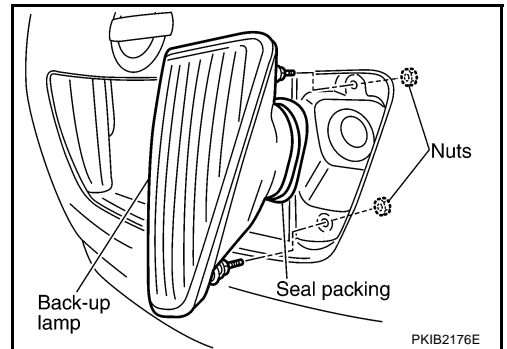

INSTALLATION

Installation is the reverse order of removal.

Back-up lamp mounting nuts  : 5.5 N-m (0.56 kg-m, 49 in-lb)


PARKING, LICENSE PLATE AND TAIL LAMPS

PARKING, LICENSE PLATE AND TAIL LAMPS

PPF:26550

Component Parts and Harness Connector Location

AKS00ALQ

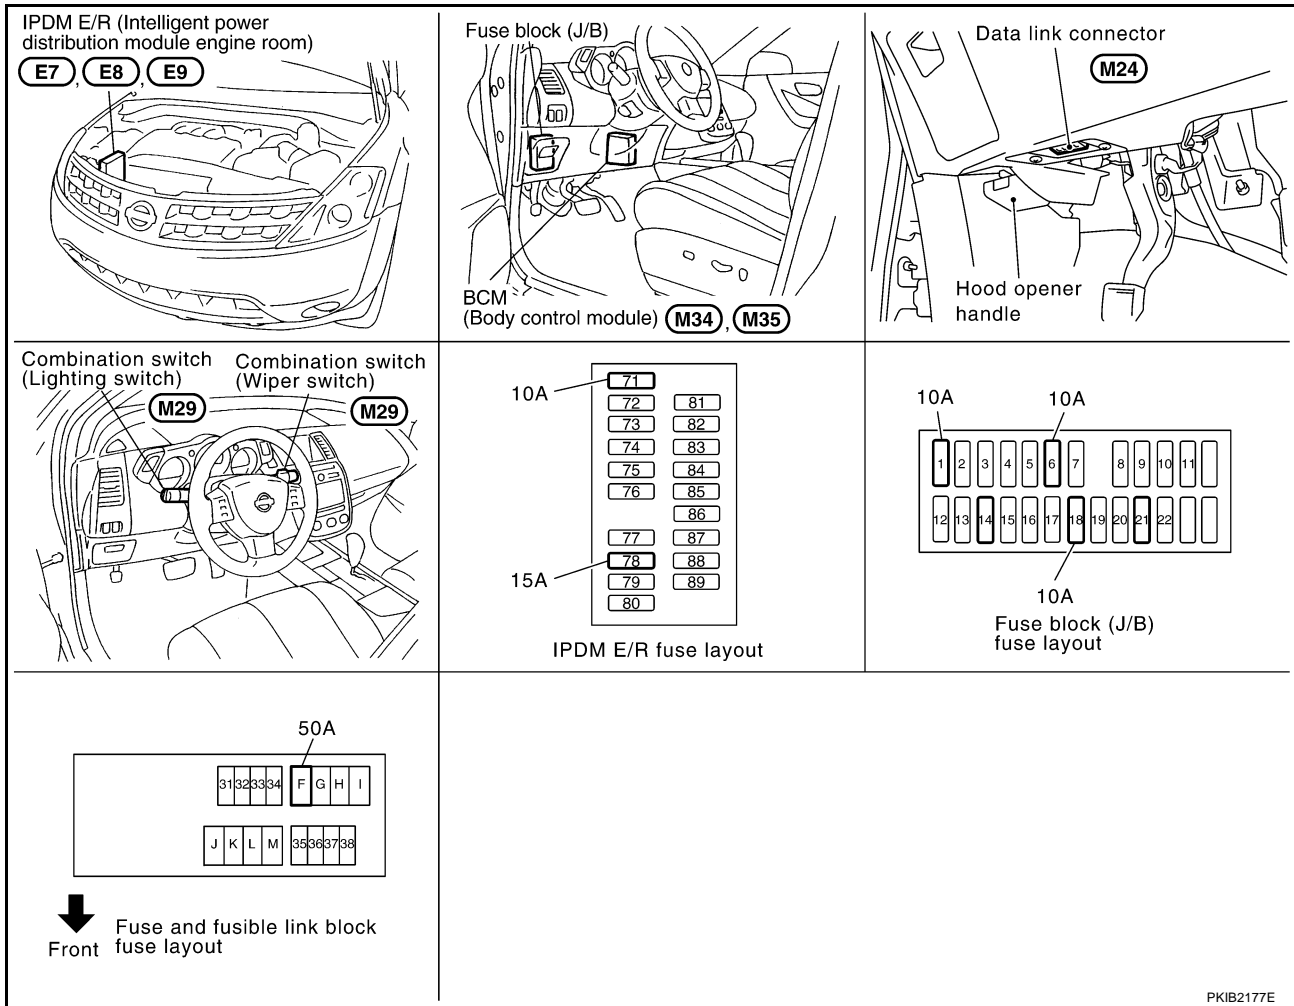

System Description

AKS004LB

Control of the parking, license plate, side marker and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) located in the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, license plate, side marker and tail lamps, which then illuminate.

Power is supplied at all times

- to ignition relay, located in IPDM E/R, from battery direct,
- through 10A fuse (No. 71, located in IPDM E/R)
- to tail lamp relay, located in IPDM E/R, and
- to CPU located in IPDM E/R,
- through 15A fuse (No. 78 located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 50A fusible link (letter F, located in fuse and fusible link block)
- to BCM terminal 55,
- through 10A fuse [No. 18, located in fuse block (J/B)]
- to BCM terminal 42.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in IPDM E/R, from battery direct,

A
B
C
D
E
F
G
H
I
J

LT

L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 52
- through grounds E13, E26 and E28,
- to IPDM E/R terminals 38 and 60
- through grounds E13, E26 and E28.

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU in the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through IPDM E/R terminal 22
- to front combination lamp RH terminal 7
- to front combination lamp LH terminal 7
- to rear combination lamp RH terminal 1
- to rear combination lamp LH terminal 1
- to license plate lamp RH terminal 1
- to license plate lamp LH terminal 1.

Ground is supplied at all times

- to front combination lamp RH terminal 5
- through grounds E13, E26 and E28,
- to front combination lamp LH terminal 5
- through grounds E13, E26 and E28,
- to rear combination lamp RH terminal 4
- through grounds B7 and B20,
- to rear combination lamp LH terminal 4
- through grounds B7 and B20,
- to license plate lamp RH terminal 2
- through grounds B7 and B20,
- to license plate lamp LH terminal 2
- through grounds B7 and B20.

With power and ground supplied, the parking, license plate, side marker and tail lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3. "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, license plate, side marker and tail lamps remain illuminated for 5 minutes, and then the parking, license plate, side marker and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

AKS004LC

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2

PARKING, LICENSE PLATE AND TAIL LAMPS

communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS007QX

Refer to [LAN-29, "CAN Communication Unit"](#) .

A

B

C

D

E

F

G

H

I

J

LT


L

M

PARKING, LICENSE PLATE AND TAIL LAMPS

Schematic

AKS004LE

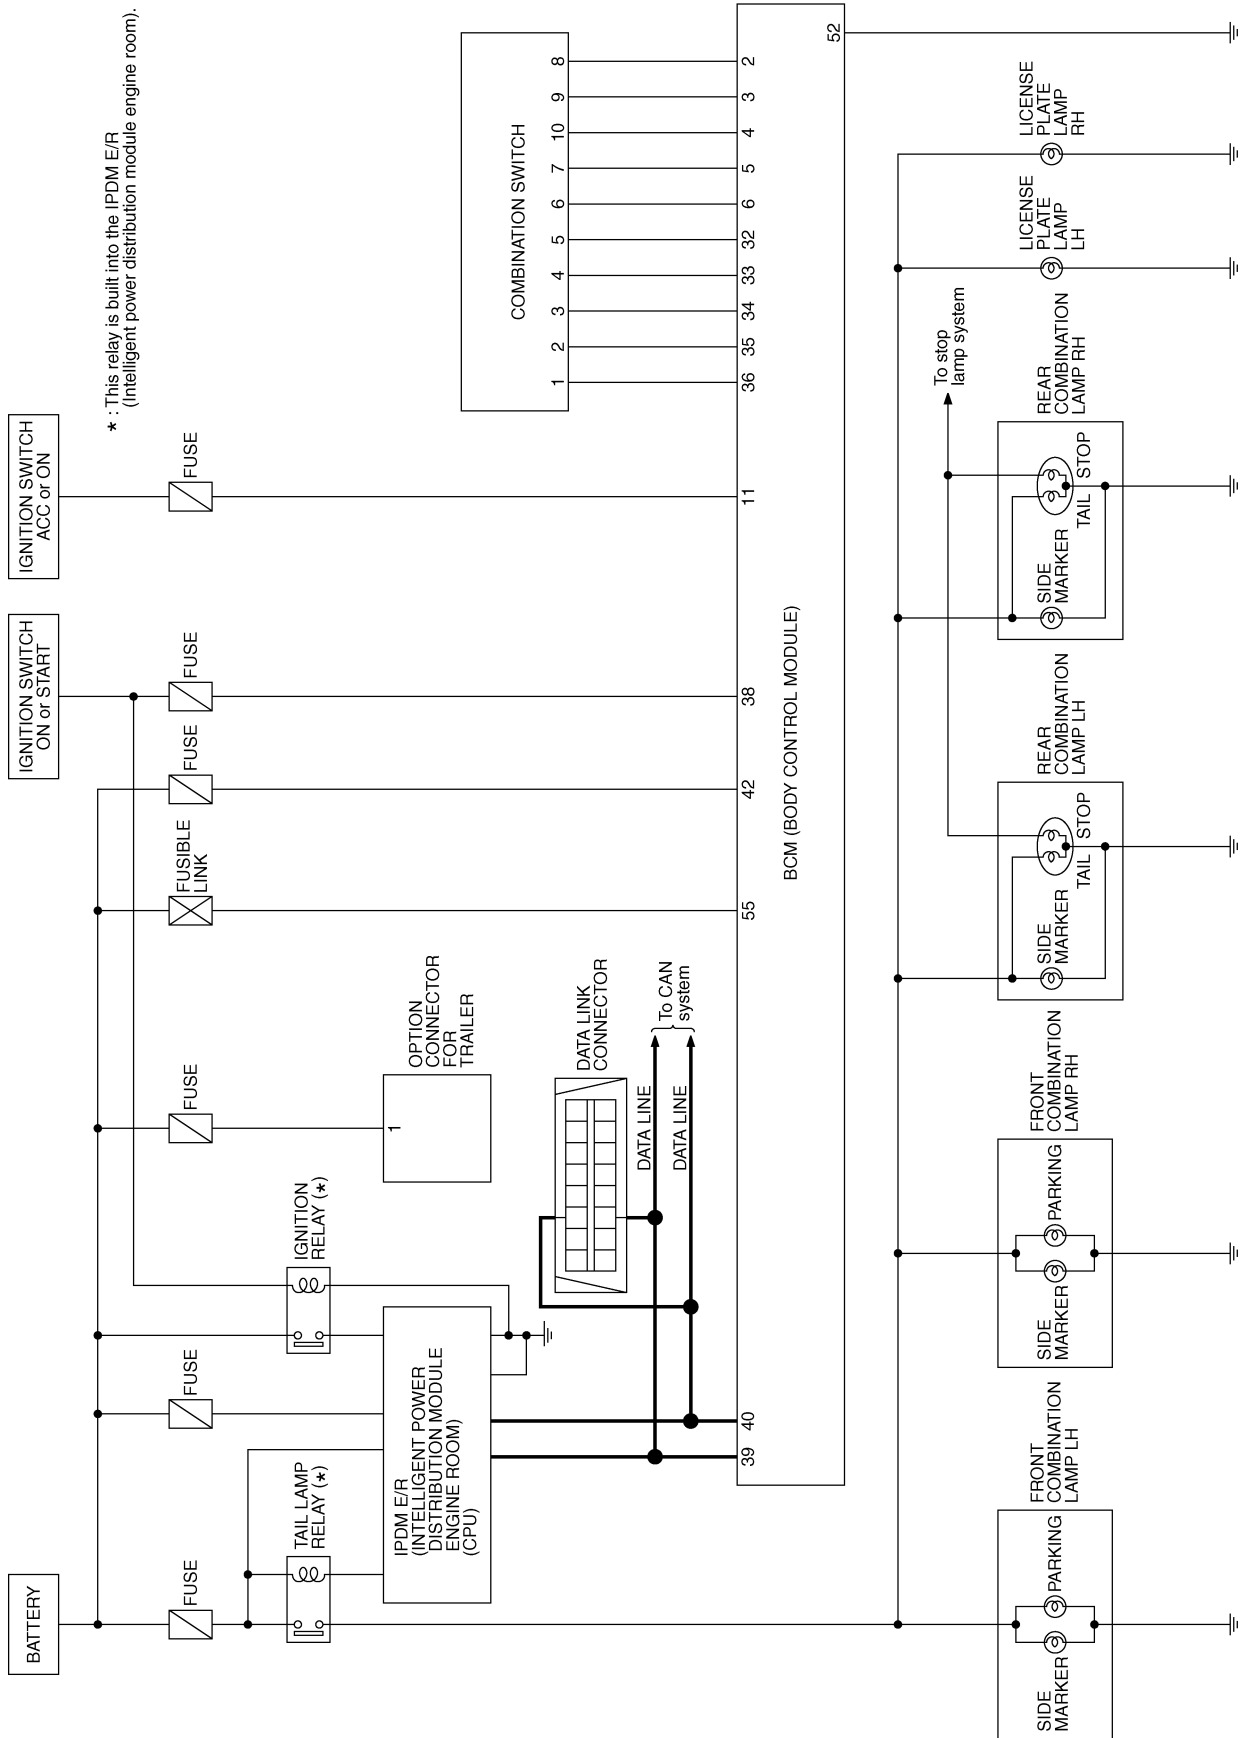

TKWB0463E


PARKING, LICENSE PLATE AND TAIL LAMPS

Wiring Diagram — TAIL/L —

AKS004LF


LT-TAIL/L-01

▬ : DATA LINE

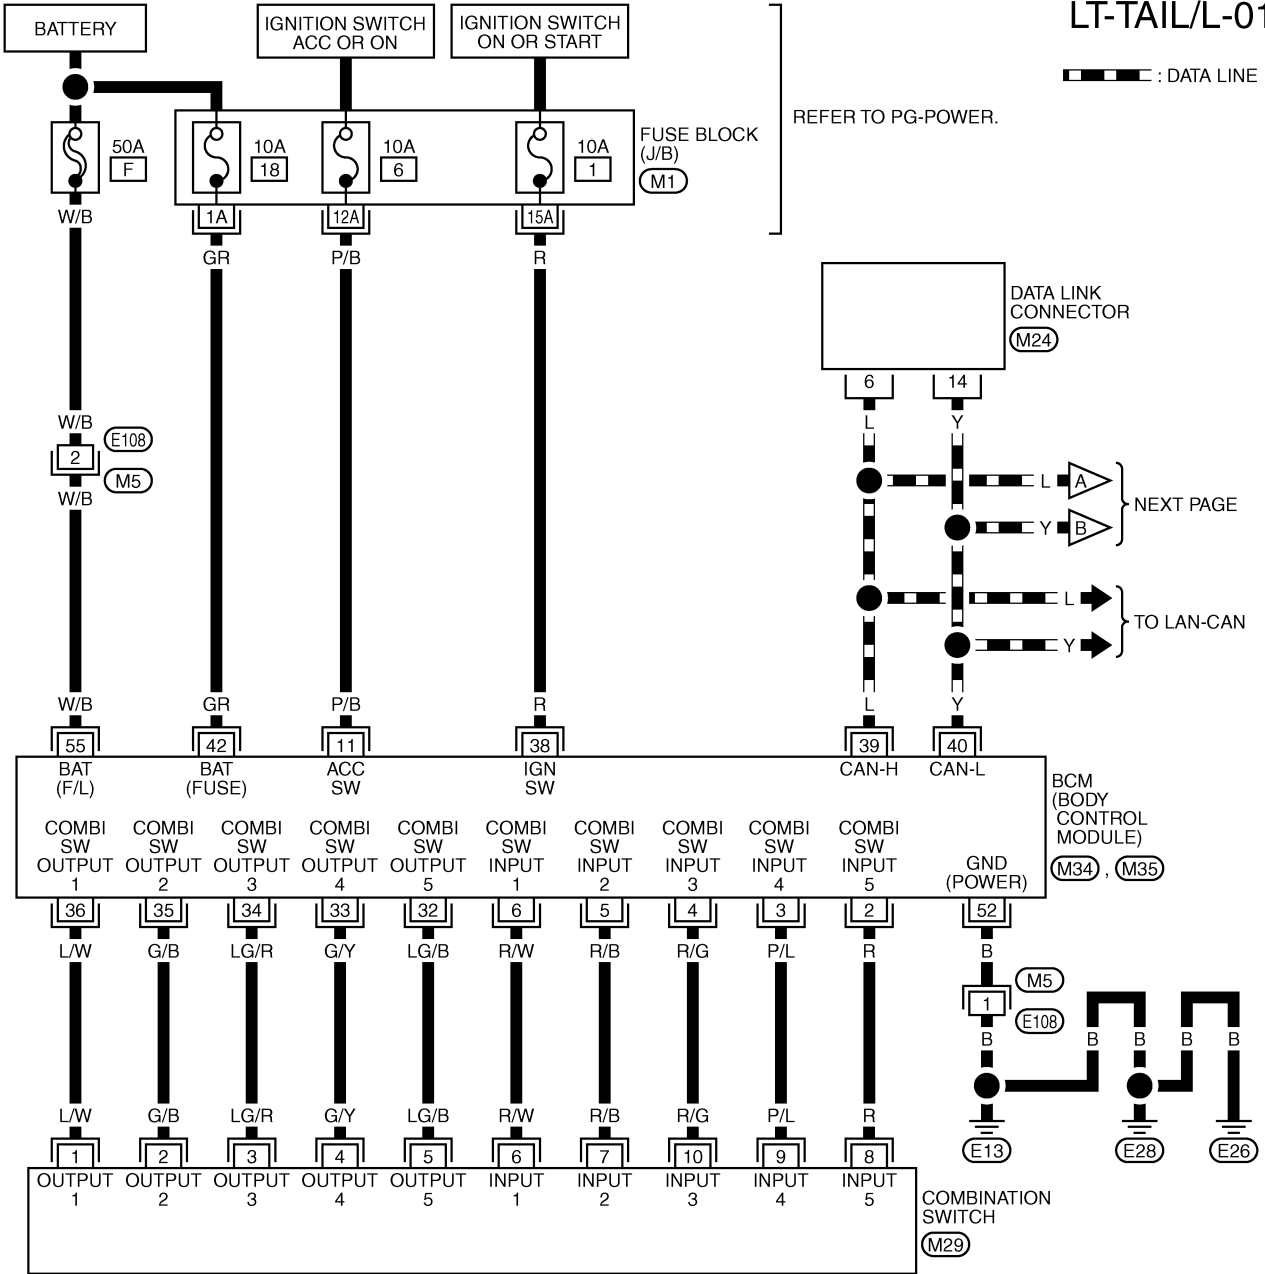

A
B
C
D
E
F
G
H
I
J
K
L
M

LT







REFER TO THE FOLLOWING.
 (M1) - FUSE BLOCK-JUNCTION BOX (J/B)
 (M34), (M35) - ELECTRICAL UNITS

PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-02



▬ : DATA LINE

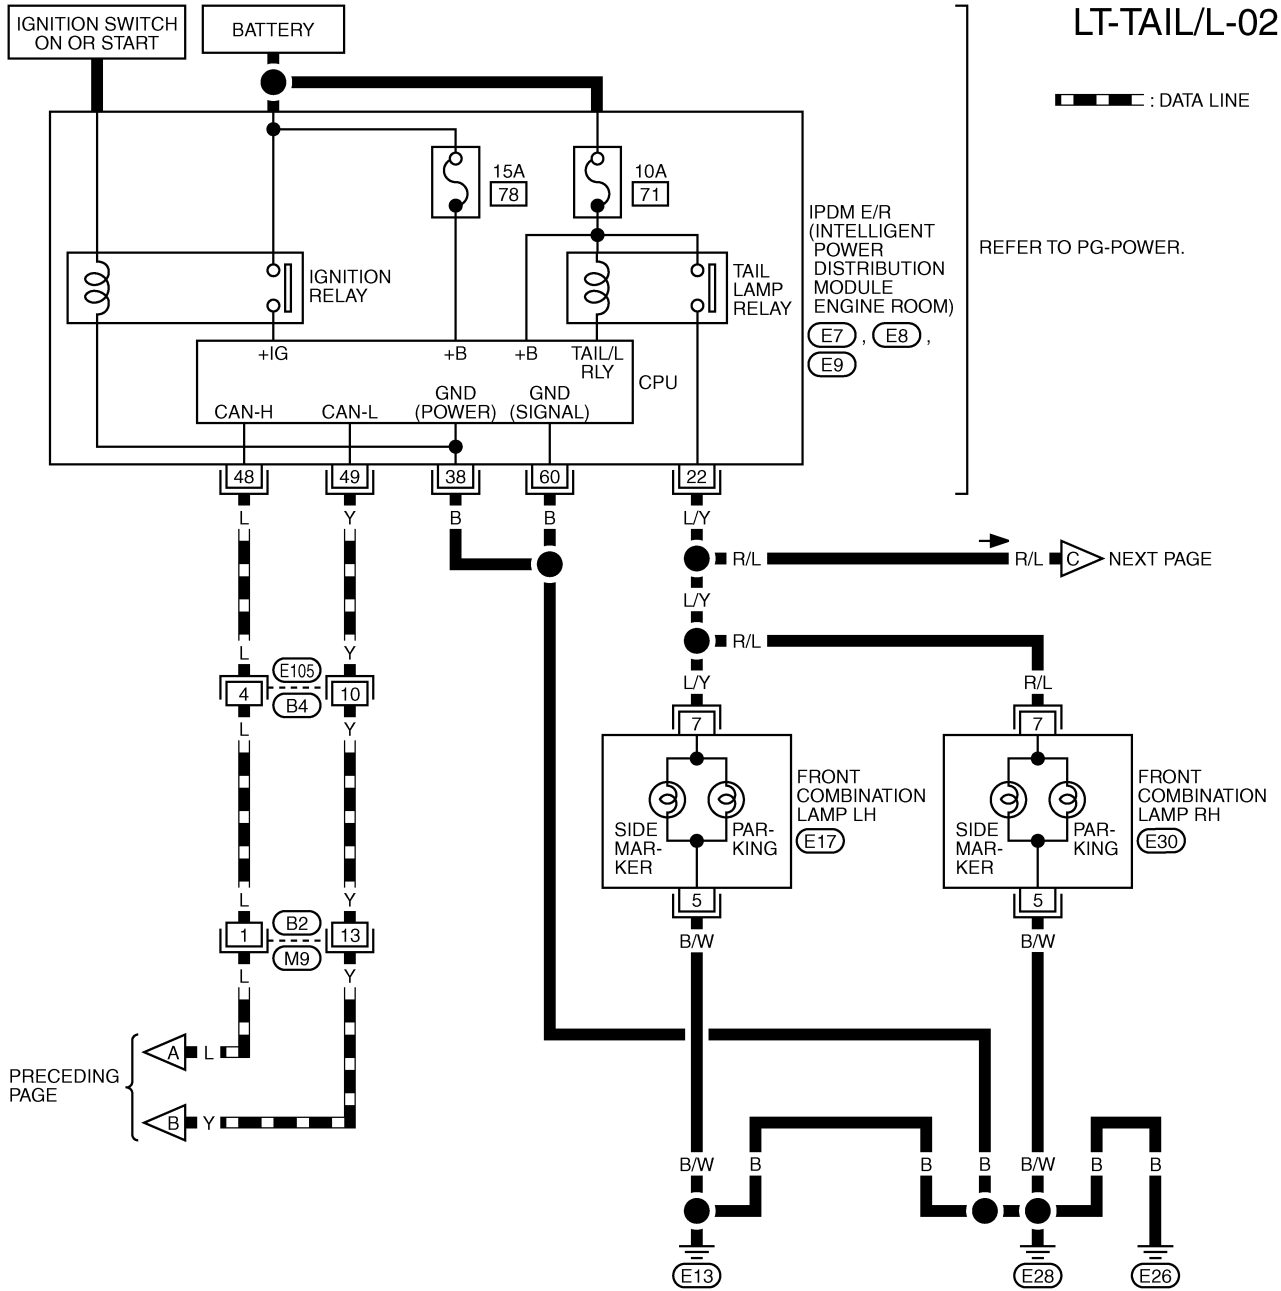

TKWB0465E

PARKING, LICENSE PLATE AND TAIL LAMPS


LT-TAIL/L-03

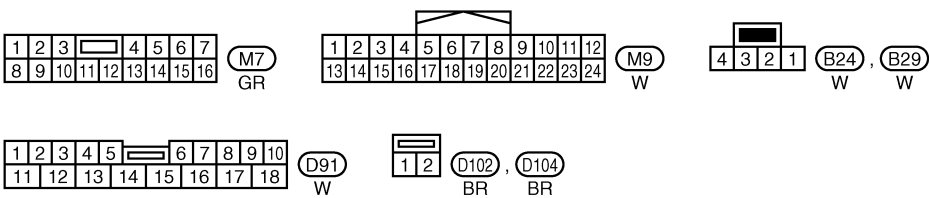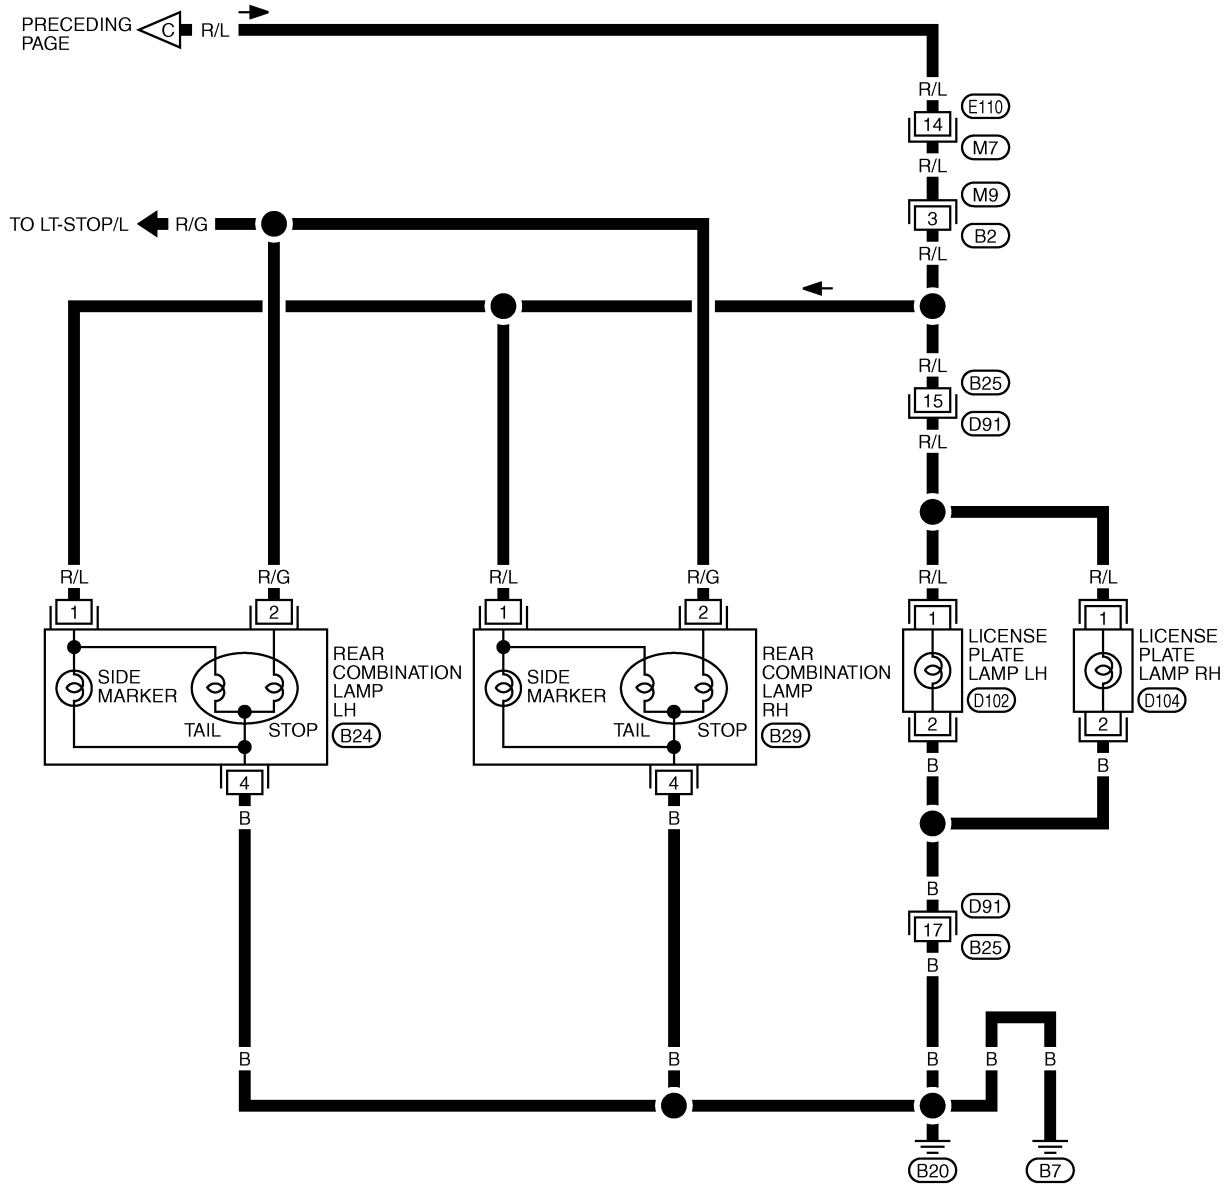

TKWB0466E

PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-04

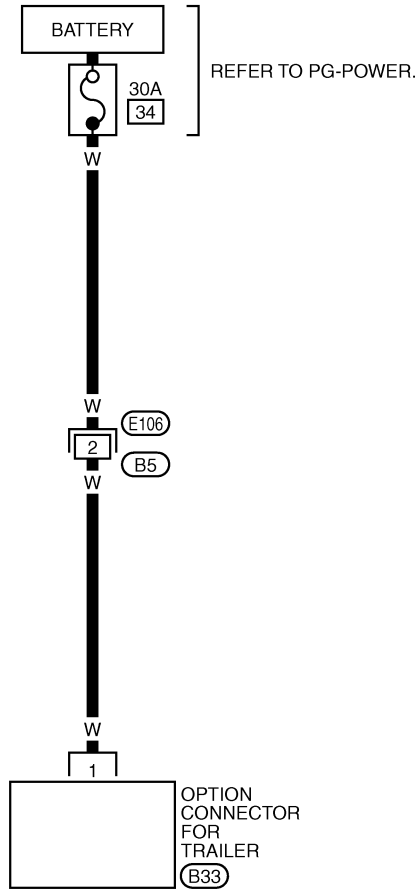
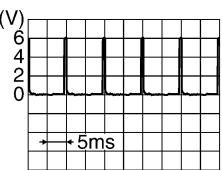
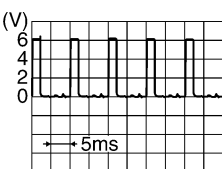
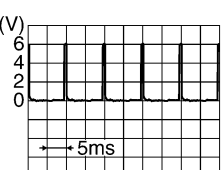





TKWB0007E

PARKING, LICENSE PLATE AND TAIL LAMPS


Terminals and Reference Values for BCM

AKS00ALR

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
2	R	Combination switch input 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	P/L	Combination switch input 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	R/G	Combination switch input 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	R/B	Combination switch input 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	R/W	Combination switch input 1			
11	P/B	Ignition switch (ACC)	ACC	—	Battery voltage
32	LG/B	Combination switch output 5	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
33	G/Y	Combination switch output 4	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
34	LG/R	Combination switch output 3	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>

A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

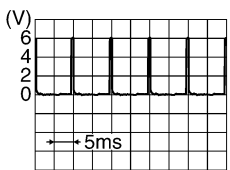Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
35	G/B	Combination switch output 2	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <small>SKIA5292E</small>
36	L/W	Combination switch output 1			
38	R	Ignition switch (ON)	ON	—	Battery voltage
39	L	CAN – H	—	—	—
40	Y	CAN – L	—	—	—
42	GR	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0V
55	W/B	Battery power supply	OFF	—	Battery voltage

Terminals and Reference Values for IPDM E/R

AKS00ALS

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
22	L/Y	Parking, license, and tail lamp	ON	Lighting switch 1ST position	OFF	Approx. 0V
					ON	Battery voltage
38	B	Ground	ON	—	Approx. 0V	
48	L	CAN – H	—	—	—	
49	Y	CAN – L	—	—	—	
60	B	Ground	ON	—	Approx. 0V	

How to Proceed With Trouble Diagnosis

AKS00ALT

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-153, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-163, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license plate, side marker and tail lamps operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

PARKING, LICENSE PLATE AND TAIL LAMPS

AKS00ALU

Preliminary Check CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown fuses.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
	Ignition switch ON or START position	1
	Ignition switch ACC or ON position	6
IPDM E/R	Battery	71

Refer to [LT-157, "Wiring Diagram — TAIL/L —"](#).

OK or NG

OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-3, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

Terminal (+)		Terminal (-)	Ignition switch position		
Connector	Terminal (Wire color)		OFF	ACC	ON
M34	11 (P/B)	Ground	Approx. 0V	Battery voltage	Battery voltage
	38 (R)		Approx. 0V	Approx. 0V	Battery voltage
M35	42 (GR)		Battery voltage	Battery voltage	Battery voltage
	55 (W/B)		Battery voltage	Battery voltage	Battery voltage

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

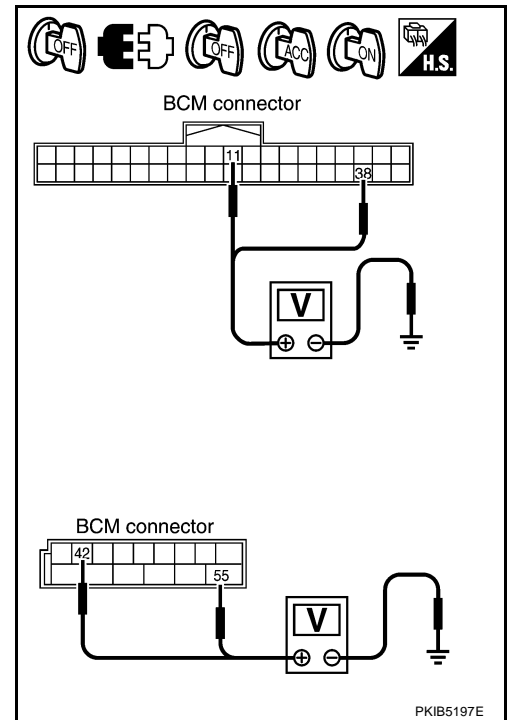

3. CHECK GROUND CIRCUIT


Check continuity between BCM harness connector and ground.

Terminal		Continuity
Connector	Terminal (Wire color)	
M35	52 (B)	Yes

OK or NG

OK >> INSPECTION END

NG >> Check ground circuit harness.

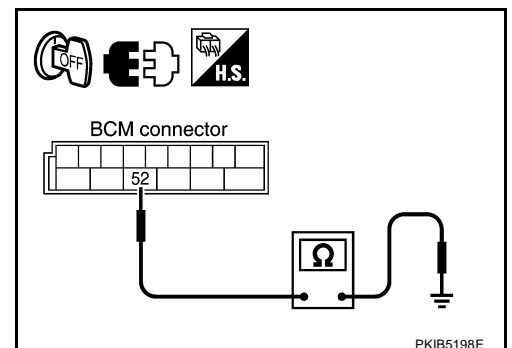

PARKING, LICENSE PLATE AND TAIL LAMPS

CONSULT-II Functions (BCM)

AKS00ALV

Refer to [LT-17, "CONSULT-II Functions \(BCM\)"](#) in HEADLAMP - XENON TYPE.

Refer to [LT-50, "CONSULT-II Functions \(BCM\)"](#) in HEADLAMP - CONVENTIONAL TYPE.

CONSULT-II Functions (IPDM E/R)

AKS00CRH

Refer to [LT-20, "CONSULT-II Functions \(IPDM E/R\)"](#) in HEADLAMP - XENON TYPE.

Refer to [LT-53, "CONSULT-II Functions \(IPDM E/R\)"](#) in HEADLAMP - CONVENTIONAL TYPE.

Parking, License Plate and Tail Lamps Do Not Illuminate

AKS00ALW

1. CHECK COMBINATION SWITCH INPUT SIGNAL

☑ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

When lighting switch is 1ST : LIGHT SW 1 ST ON position

☒ Without CONSULT-II

Refer to [LT-145, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check combination switch (lighting switch). Refer to [LT-145, "Combination Switch Inspection"](#) .

DATA MONITOR			
MONITOR			
LIGHT SW 1ST	ON		
RECORD			
MODE	BACK	LIGHT	COPY

PKIA7607E

2. ACTIVE TEST

☑ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
3. Touch "ON" screen.
4. Make sure parking, license plate, side marker and tail lamps operate.

Parking, license plate, side marker and tail lamp should operate.

☒ Without CONSULT-II

1. Start auto active test. Refer to [PG-23, "Auto Active Test"](#) .
2. Make sure parking, license plate, side marker and tail lamps operate.

Parking, license plate, side marker and tail lamp should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
TAIL LAMP		OFF	
ON			
MODE	BACK	LIGHT	COPY

SKIA5957E

PARKING, LICENSE PLATE AND TAIL LAMPS

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "TAIL & CLR REQ" turns ON when lighting switch is in 1ST position.

When lighting switch is 1ST : TAIL & CLR REQ ON position

OK or NG

- OK >> Replace IPDM E/R.
NG >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).

DATA MONITOR			
MONITOR			
TAIL&CLR REQ		ON	
RECORD			
MODE	BACK	LIGHT	COPY

SKIA5958E

A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

4. CHECK INPUT SIGNAL


☑ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH, license plate lamp RH and LH and rear combination lamp RH and LH connectors.
3. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
5. Touch "ON" screen.
6. When tail lamp is operating, check voltage between front combination lamp, license plate lamp, rear combination lamp harness connector and ground.

☒ Without CONSULT-II


1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH, license plate lamp RH and LH and rear combination lamp RH and LH connectors.
3. Start auto active test. Refer to [PG-23, "Auto Active Test"](#).
4. Check voltage between front combination lamp harness connector and ground.

Terminal			(-)	Voltage
Front combination lamp (+) (Parking)				
Connector	Terminal (Wire color)		Ground	Battery voltage
RH	E30	7 (R/L)		
LH	E17	7 (L/Y)		

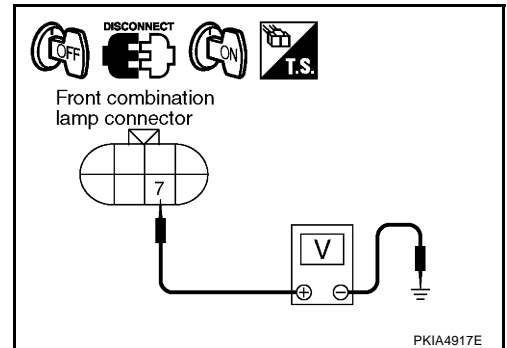


5. Check voltage between license plate lamp harness connector and ground.

Terminal			(-)	Voltage
License plate lamp (+)				
Connector	Terminal (Wire color)		Ground	Battery voltage
RH	D104	1 (R/L)		
LH	D102			

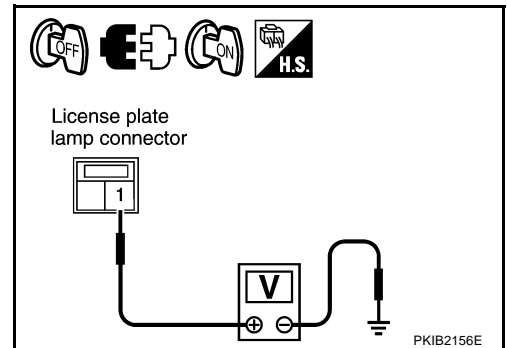

6. Check voltage between rear combination lamp harness connector and ground.

Terminal			(-)	Voltage
Rear combination lamp (+) (Tail and side marker)				
Connector	Terminal (Wire color)		Ground	Battery voltage
RH	B29	1 (R/L)		
LH	B24			

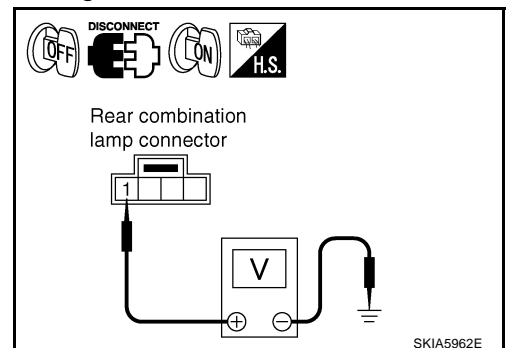

OK or NG


- OK >> GO TO 6.
 NG >> GO TO 5.

PARKING, LICENSE PLATE AND TAIL LAMPS

5. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp harness connector.

Terminal					Continuity
IPDM E/R		Front combination lamp (Parking)			
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)		
E7	22 (L/Y)	RH	E30	7 (R/L)	Yes
		LH	E17	7 (L/Y)	

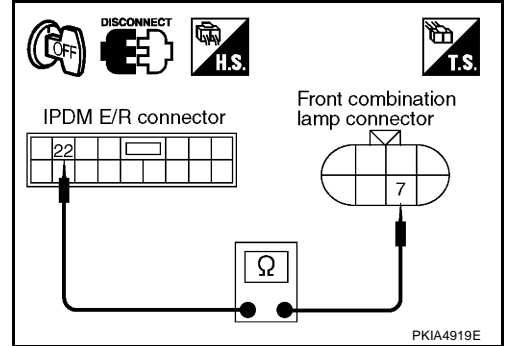


4. Check continuity between IPDM E/R harness connector and license plate lamp harness connector.

Terminal					Continuity
IPDM E/R		License plate lamp			
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)		
E7	22 (L/Y)	RH	D104	1 (R/L)	Yes
		LH	D102		

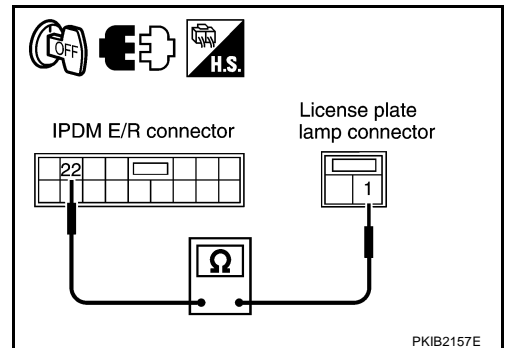

5. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

Terminal					Continuity
IPDM E/R		Rear combination lamp (Tail and side marker)			
Connector	Terminal (Wire color)	Connector	Terminal (Wire color)		
E7	22 (L/Y)	RH	B29	1 (R/L)	Yes
		LH	B24		

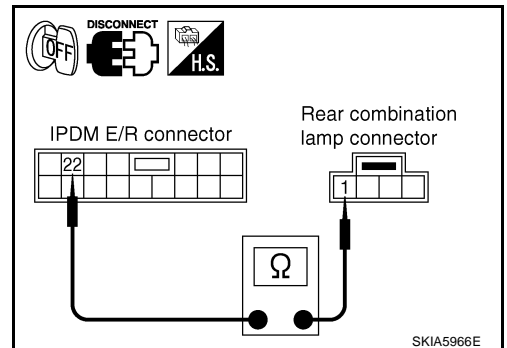

OK or NG

- OK >> Replace IPDM E/R.
 NG >> Repair harness or connector.


A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

6. CHECK GROUND


1. Check continuity between front combination lamp harness connector and ground.

Terminal		Ground	Continuity
Front combination lamp (Parking)			
Connector	Terminal (Wire color)		
RH	E30		
LH	E17		

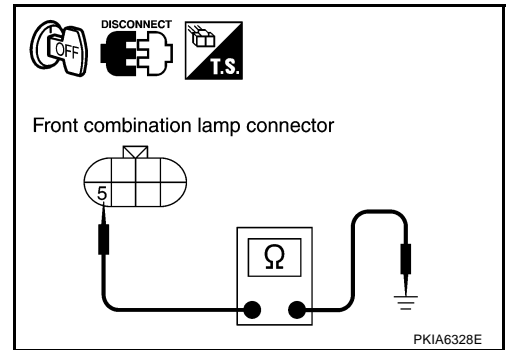


2. Check continuity between license plate lamp harness connector and ground.

Terminal		Ground	Continuity
License plate lamp			
Connector	Terminal (Wire color)		
RH	D104		
LH	D102		

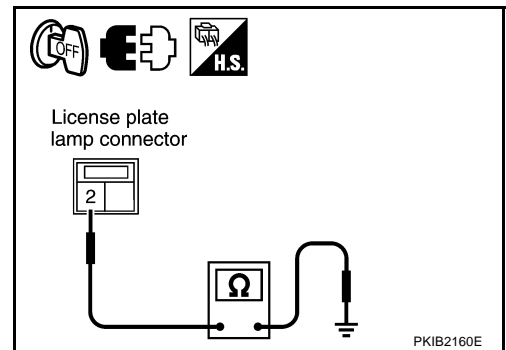

3. Check continuity between rear combination lamp harness connector and ground.

Terminal		Ground	Continuity
Rear combination lamp (Tail and side marker)			
Connector	Terminal (Wire color)		
RH	B29		
LH	B24		

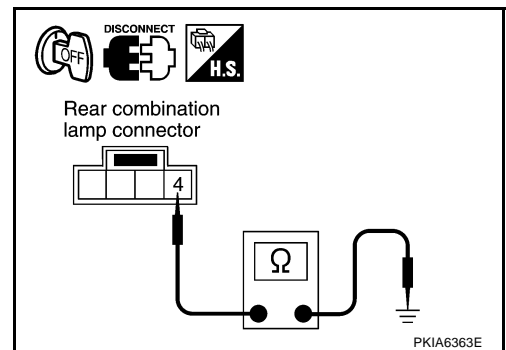

OK or NG

- OK >> Check bulbs.
- NG >> Repair harness or connector.

Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

AKS00ALX

1. CHECK IPDM E/R

1. Turn the ignition switch ON. Place the combination switch (lighting switch) in the ON position. Turn the ignition switch OFF.
2. Make sure the parking, license plate, and tail lamps turn OFF after approximately 10 minutes.

OK or NG

- OK >> INSPECTION END
- NG >> Ignition relay malfunction. Refer to [PG-18, "Function of Detecting Ignition Relay Malfunction"](#).

PARKING, LICENSE PLATE AND TAIL LAMPS


Bulb Replacement LICENSE PLATE LAMP

AKS00ALY

1. Remove back door inner finisher. Refer to [EI-40, "BACK DOOR TRIM"](#) in "EI" section.
2. Disconnect the license plate lamp connector.
3. Turn bulb socket counterclockwise and unlock it.
4. Remove bulb from its socket.

License plate lamp : 12V - 5W

5. Installation is the reverse order of removal.

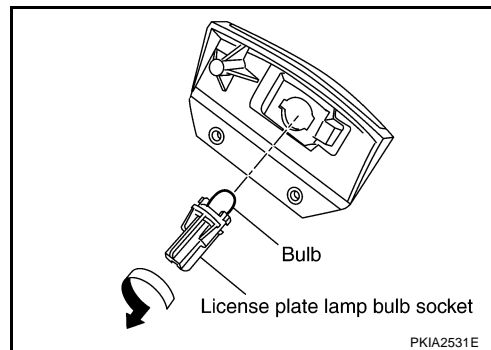

PARKING LAMP (CLEARANCE LAMP)

For bulb replacement, refer to [LT-36, "Bulb Replacement"](#) in "HEADLAMP" (XENON TYPE).
For bulb replacement, refer to [LT-66, "Bulb Replacement"](#) in "HEADLAMP" (CONVENTIONAL TYPE).

TAIL LAMP

For bulb replacement, refer to [LT-170, "Bulb Replacement"](#) in "REAR COMBINATION LAMP".

FRONT SIDE MARKER LAMP

For bulb replacement, refer to [LT-36, "Bulb Replacement"](#) in "HEADLAMP" (XENON TYPE).
For bulb replacement, refer to [LT-66, "Bulb Replacement"](#) in "HEADLAMP" (CONVENTIONAL TYPE).

REAR SIDE MARKER LAMP


For bulb replacement, refer to [LT-170, "Bulb Replacement"](#) in "REAR COMBINATION LAMP".

Removal and Installation

LICENSE PLATE LAMP

AKS00ALZ

1. Remove back door inner finisher. Refer to [EI-40, "BACK DOOR TRIM"](#) in "EI" section.
2. Remove rear wiper motor. Refer to [WW-51, "Removal and Installation of Rear Wiper Motor"](#).
3. Remove the license plate lamp mounting screws and remove it.
4. Installation is the reverse order of removal.

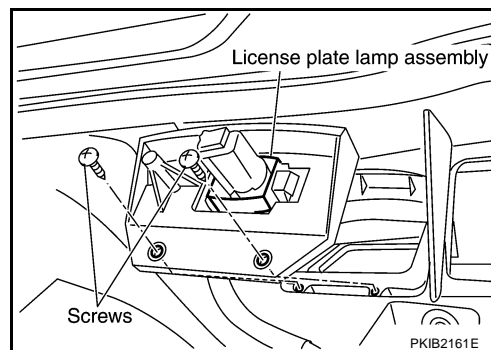

PARKING LAMP (CLEARANCE LAMP)

For parking lamp (clearance lamp) removal and installation procedures, refer to [LT-37, "Removal and Installation"](#) in "HEADLAMP" (XENON TYPE).

For parking lamp (clearance lamp) removal and installation procedures, refer to [LT-67, "Removal and Installation"](#) in "HEADLAMP" (CONVENTIONAL TYPE).

TAIL LAMP

For tail lamp removal and installation procedures, refer to [LT-170, "Removal and Installation"](#) in "REAR COMBINATION LAMP".

FRONT SIDE MARKER LAMP

For headlamp removal and installation procedures, refer to [LT-37, "Removal and Installation"](#) in "HEADLAMP" (XENON TYPE).

For headlamp removal and installation procedures, refer to [LT-67, "Removal and Installation"](#) in "HEADLAMP" (CONVENTIONAL TYPE).

REAR SIDE MARKER LAMP

For rear side marker lamp removal and installation procedures, refer to [LT-170, "Removal and Installation"](#) in "REAR COMBINATION LAMP".

REAR COMBINATION LAMP

REAR COMBINATION LAMP

PFP:26554

Bulb Replacement

AKS005M1


STOP & TAIL LAMP BULB, REAR SIDE MARKER LAMP BULB, REAR TURN SIGNAL LAMP BULB

1. Remove rear combination lamp. Refer to [LT-170, "Removal and Installation"](#) .
2. Turn bulb socket counterclockwise and unlock it.
3. Remove bulb.
4. Installation is the reverse order of removal.

Stop/tail lamp : 12V - 21/5W

Rear side marker lamp : 12V - 5W

Rear turn signal lamp : 12V - 21W

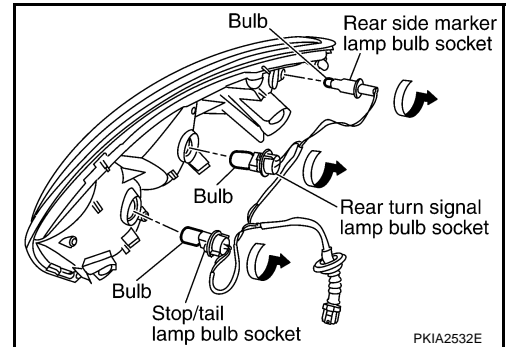


Removal and Installation

REMOVAL

AKS005M2

1. Remove rear combination lamp finisher.
2. Remove rear combination lamp mounting bolts.
3. Pull the rear combination lamp toward side of the vehicle and remove from the vehicle.
4. Disconnect rear combination lamp connector.

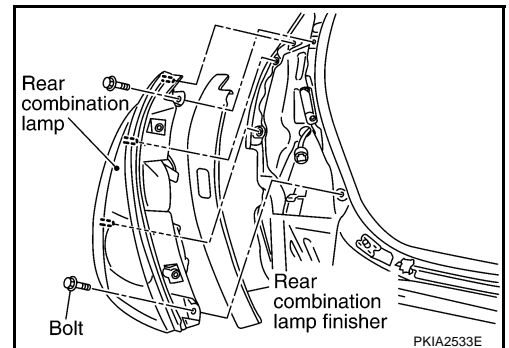

INSTALLATION

Installation is the reverse order of removal.

Rear combination lamp mounting bolt  : 5.5 N·m (0.56 kg·m, 49 in·lb)

VANITY MIRROR LAMP

VANITY MIRROR LAMP

PFP:96400

Bulb Replacement


AKS005M3

Wiring diagram. Refer to [LT-182, "Wiring Diagram — ROOM/L —"](#) .

1. Insert a thin screwdriver in the notch and remove lens.
2. Remove bulb.

Vanity mirror lamp : 12V - 2W

3. Installation is the reverse order of removal.

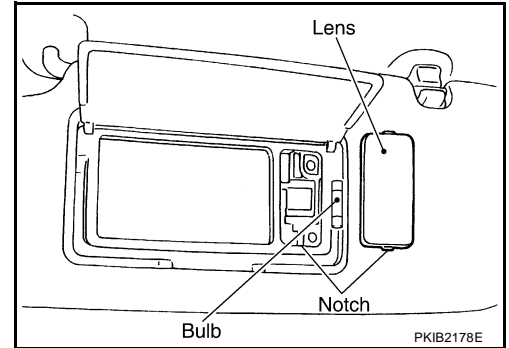

A
B
C
D
E
F
G
H
I
J
LT
L
M

MAP LAMP

MAP LAMP

PFP:26430

Bulb Replacement


AKS005M4

Wiring diagram. Refer to [LT-182, "Wiring Diagram — ROOM/L —"](#) .

1. Disconnect the battery negative cable.
2. Remove the lens using clip driver or suitable tool.
3. Remove the bulb.

Map lamp : 12V - 8 W

4. Installation is the reverse order of removal.

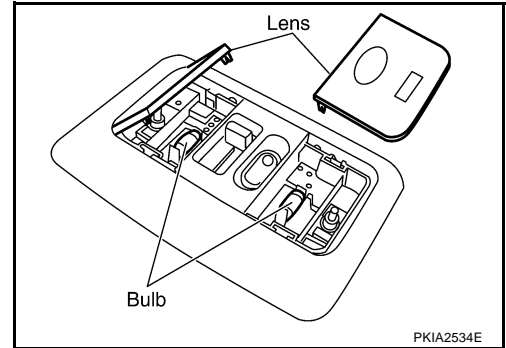


AKS005M5

Removal and Installation

REMOVAL

1. Pull wider part of thin plate of the map lamp to disengage the metal clip.
2. Pull map lamp in direction shown by the arrow in the figure.
3. Disconnect map lamp connector and remove the map lamp.

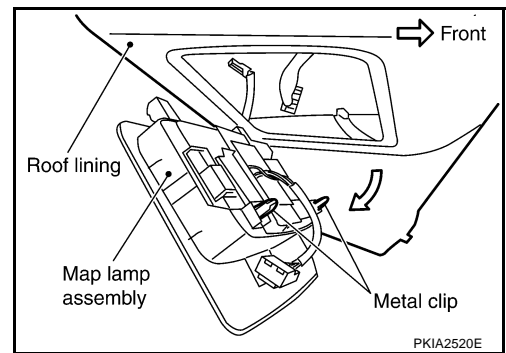

INSTALLATION

Installation is the reverse order of removal.

PERSONAL LAMP

PERSONAL LAMP


PPF:26415

Bulb Replacement, Removal and Installation

AKS004LW

Wiring diagram. Refer to [LT-182, "Wiring Diagram — ROOM/L —"](#).


1. Insert a clip driver or suitable tool and disengage the metal clip fittings of the personal lamp.
2. Disconnect personal lamp connector and remove the personal lamp.

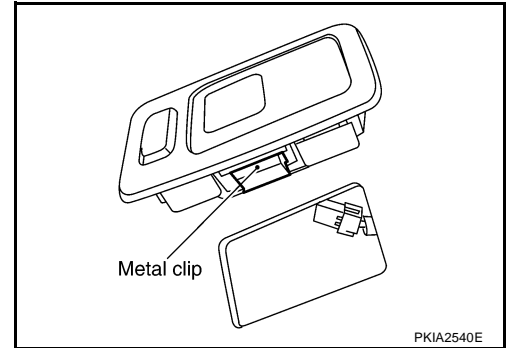

3. Remove the housing mounting screws, and separate it.
4. Remove bulb from the base.

Personal lamp : 12V - 8W

5. Installation is the reverse order of removal.

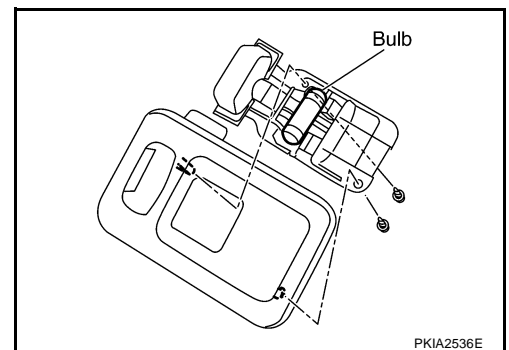

A
B
C
D
E
F
G
H
I
J

LT

L
M

LUGGAGE ROOM LAMP

LUGGAGE ROOM LAMP


PFP:26410

Bulb Replacement, Removal and Installation

AKS005M6

Wiring diagram. Refer to [LT-182, "Wiring Diagram — ROOM/L —"](#) .


1. Insert a screwdriver as shown in the figure and pull out the luggage room lamp.
2. Disconnect the luggage room lamp connector.

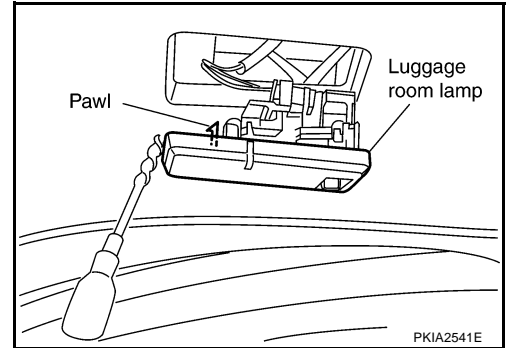

3. Remove the bulb.

Luggage room lamp : 12V - 8W

4. Installation is the reverse order of removal.

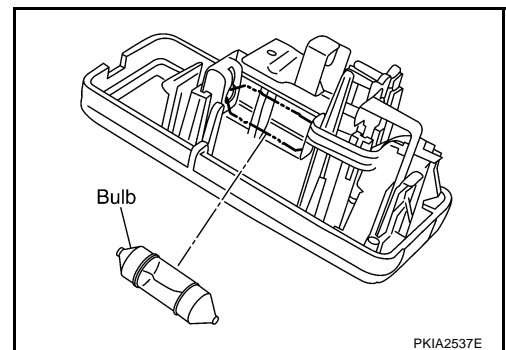


INTERIOR ROOM LAMP

INTERIOR ROOM LAMP

PF26410

Component Parts and Harness Connector Location

AKS00AME

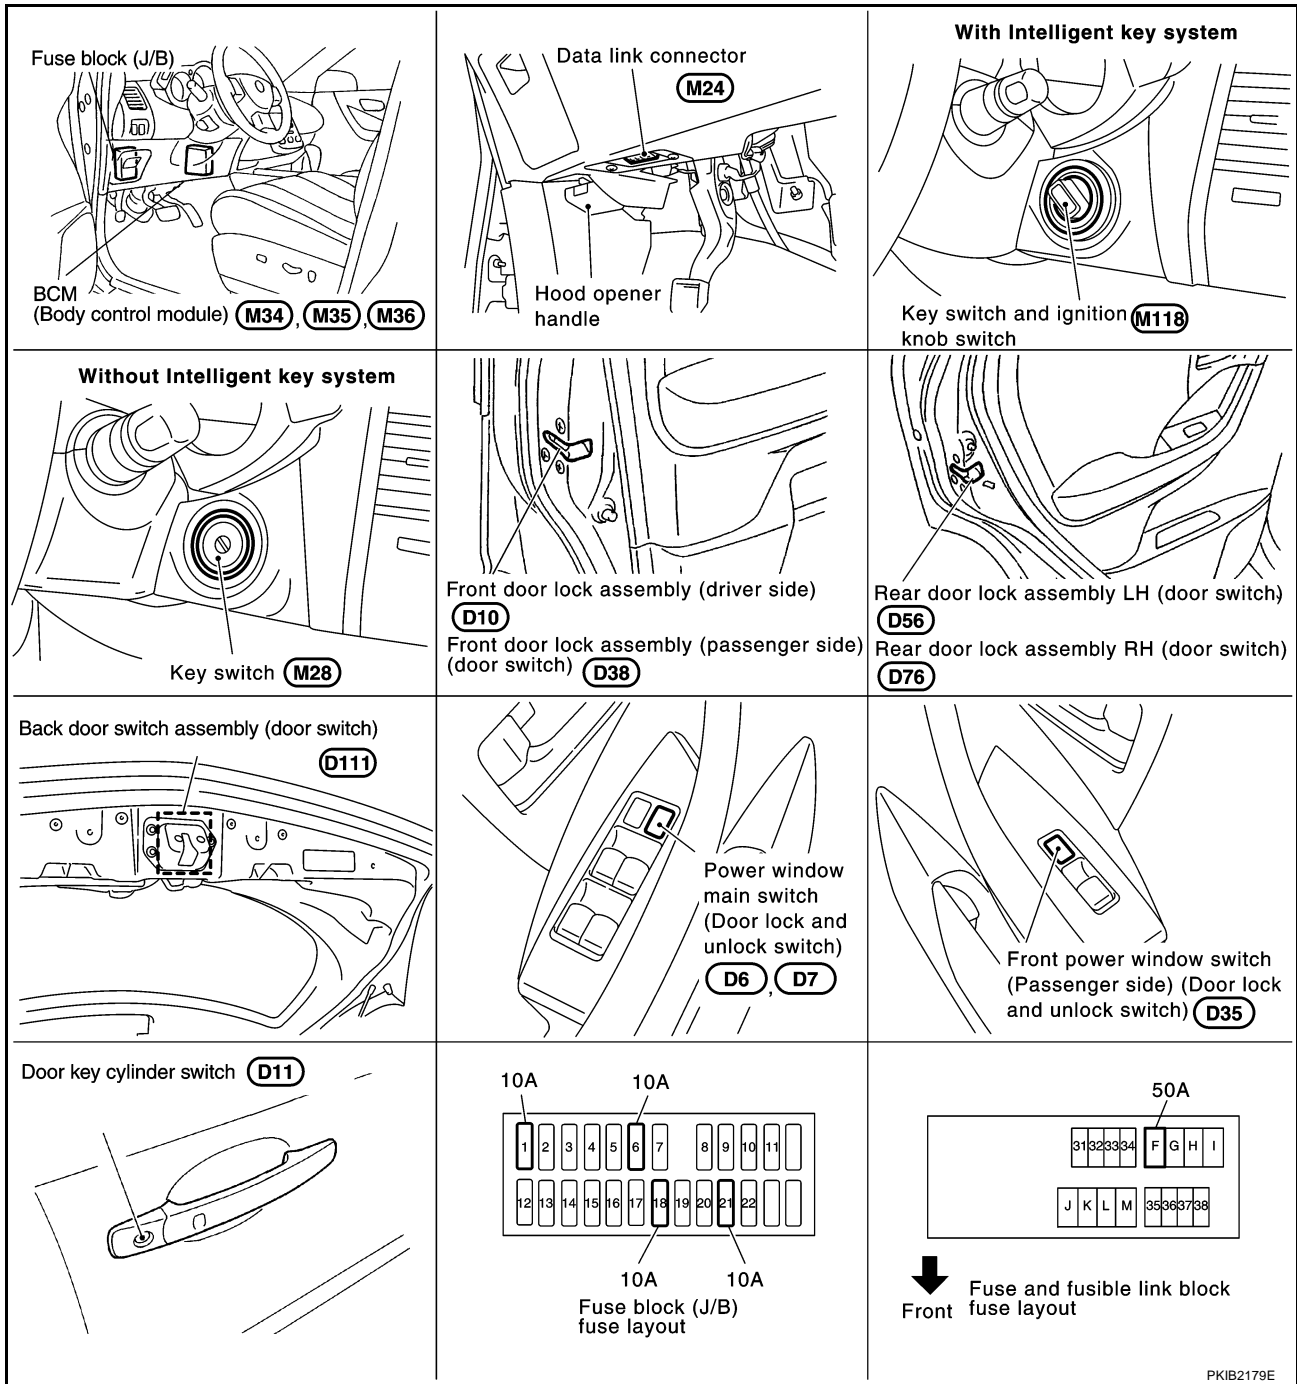

A
B
C
D
E
F
G
H
I
J
LT
L
M

System Description

AKS005R0

When the room lamp and personal lamp switch is in DOOR position, room lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch, front door switch driver side, unlock signal from key fob, door lock and unlock switch, key cylinder lock and unlock switch, ignition switch. When the room lamp and personal lamp turns ON, there is a gradual brightening over 1 second. When room lamp and personal lamp turns OFF, there is a gradual dimming over 1 second. The room lamp and personal lamp timer is controlled by the BCM (body control module). Room lamp and personal lamp timer control settings can be changed with CONSULT-II. Ignition key hole illumination turns ON at time when driver door is opened (door switch ON) or removed key fob from key cylinder. Illumination turns OFF when driver door is closed (door switch OFF). Step lamp turns ON at time when driver door or passenger door is opened (door switch ON). Lamp turns OFF when driver, passenger doors are closed (all door switches OFF).

INTERIOR ROOM LAMP

POWER SUPPLY AND GROUND

Power is supplied at all times (without Intelligent Key system)

- through 10A fuse [No. 21, located in fuse block (J/B)]
- to key switch terminal 3,
- through 50A fusible link (letter F, located in fuse and fusible link block)
- to BCM terminal 55.

Power is supplied at all times (with Intelligent Key system)

- through 10A fuse [No.22, located in fuse block (J/B)]
- to key switch and ignition knob switch terminals 1 and 3,
- through 10A fuse [No. 18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 50A fusible link (letter F, located in fuse and fusible link block)
- to BCM terminal 55.

When the key is inserted to ignition key cylinder, power is interrupted (without Intelligent Key system)

- through key switch terminal 4
- to BCM terminal 37.

When inserted key plate to key switch and ignition knob switch, power is supplied (with Intelligent Key system)

- through key switch and ignition knob switch terminal 4
- to BCM terminal 37.

When pushed key switch and ignition knob switch, power is supplied (with Intelligent Key system)

- through key switch and ignition knob switch terminal 2
- to intelligent key unit terminal 27.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 52
- through grounds E13, E26 and E28.

When the driver side door is opened, ground is supplied

- to BCM terminal 62
- through front door lock assembly (driver side) (door switch) terminal 4
- through front door lock assembly (driver side) (door switch) terminal 5
- through grounds M14 and M78.

When the passenger side door is opened, ground is supplied

- to BCM terminal 12
- through front door lock assembly (passenger side) (door switch) terminal 4
- through front door lock assembly (passenger side) (door switch) terminal 5
- through grounds M14 and M78.

When the rear door LH is opened, ground is supplied

- to BCM terminal 63
- through rear door lock assembly LH (door switch) terminal 4
- through rear door lock assembly LH (door switch) terminal 5
- through grounds B7 and B20.

When the rear door RH is opened, ground is supplied

- to BCM terminal 13
- through rear door lock assembly RH (door switch) terminal 4
- through rear door lock assembly RH (door switch) terminal 5
- through grounds B105 and B116.

When the driver side door is unlocked by the door lock and unlock switch, BCM receives a ground signal

INTERIOR ROOM LAMP

- through grounds M14 and M78
- to power window main switch (door lock and unlock switch) terminal 17 or front power window switch (passenger side) (door lock and unlock switch) terminal 11
- from power window main switch (door lock and unlock switch) terminal 14 or front power window switch (passenger side) (door lock and unlock switch) terminal 16
- to BCM terminal 22.

When the front driver side door is unlocked by the driver side door lock assembly (door key cylinder switch), BCM receives a ground signal

- through grounds M14 and M78
- to front door lock assembly (driver side) (door key cylinder switch) terminal 5 (without Intelligent Key system)
- to door key cylinder switch terminal 2 (with Intelligent Key system)
- from front door lock assembly (driver side) (door key cylinder switch) terminal 6 (without Intelligent Key system)
- from door key cylinder switch terminal 3 (with Intelligent Key system)
- to power window main switch (door lock and unlock switch) terminal 6
- from power window main switch (door lock and unlock switch) terminal 14
- to BCM terminal 22.

When a signal, or combination of signals is received by BCM, ground is supplied

- to room lamp terminal 1 and
- to personal lamp LH and RH terminal 3
- through BCM terminal 48.

With power and supplied, the interior lamp illuminates.

SWITCH OPERATION

When driver door switch is ON (door is opened), ground is supplied

- to ignition key hole illumination terminal 2
- through BCM terminal 1.

And power is supplied

- from BCM terminal 41
- to ignition key hole illumination terminal 1.

When any door switch is ON (door is opened), ground is supplied

- through BCM terminal 47
- to step lamp (driver side and passenger side) terminal 2.

And power is supplied

- from BCM terminal 41
- to step lamp (driver side and passenger side) terminal 1.

When map lamp switch is ON, ground is supplied

- to map lamp terminal 2
- through grounds M14 and M78.

And power is supplied

- from BCM terminal 41
- to map lamp terminal 1.

When vanity mirror lamp (driver side and passenger side) is ON, ground is supplied

- to vanity mirror lamp (driver side and passenger side) terminal 2
- through grounds M14 and M78.

And power is supplied

- from BCM terminal 41
- to vanity mirror lamp (driver side and passenger side) terminal 1.

When personal lamp LH and RH switch is ON, ground is supplied

A
B
C
D
E
F
G
H
I
J
L
M

LT

INTERIOR ROOM LAMP

- to personal lamp LH and RH terminal 2
- through grounds M14 and M78.

And power is supplied

- from BCM terminal 41
- to personal lamp LH and RH terminal 1.

When room lamp switch is ON, ground is supplied

- to room lamp terminal 3
- through grounds M14 and M78.

And power is supplied

- from BCM terminal 41
- to room lamp terminal 2.

When luggage room lamp RH and LH is ON, and then back door switch is ON, ground is supplied

- to luggage room lamp RH and LH terminal 2
- through back door switch terminal 3
- through back door switch terminal 4
- through grounds B7 and B20.

And power is supplied

- from BCM terminal 41
- to luggage room lamp RH and LH terminal 1.

ROOM LAMP TIMER OPERATION

Without Intelligent Key System

When room lamp and personal lamp switch is in DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for room lamp and personal lamp ON/OFF.

In addition, when spot turns ON or OFF there is gradual brightening or dimming over 1 second.

Power is supplied

- through 10A fuse [No. 21, located in the fuse block (J/B)]
- to key switch terminal 3.

Key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37.

Ground is supplied

- from BCM terminal 22
- to power window main switch (door lock and unlock switch) terminal 14.

At this time, BCM detects that driver door is unlocked. It determines that room lamp and personal lamp timer operation conditions are met, and turns the room lamp and personal lamp ON for 30 seconds.

Key is in ignition key cylinder (key switch ON),

Power is supplied

- through key switch terminal 4
- to BCM terminal 37.

When key is removed from key switch (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that room lamp and personal lamp timer conditions are met, and turns the room lamp and personal lamp ON for 30 seconds.

When driver door opens → closes, and the key is not inserted in the key switch and key lock solenoid (key switch OFF), BCM terminal 62 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for room lamp and personal lamp operation are met and turns the interior lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Driver door is locked [when locked key fob or power window main switch (door lock and unlock switch), door key cylinder switch]
- Driver door is opened (driver door switch turns ON)
- Ignition switch ON.

INTERIOR ROOM LAMP

With Intelligent Key System

When the room lamp and personal lamp switch is in DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 second) for room lamp and personal lamp ON/OFF.

In addition, when spot turns ON or OFF there is gradual brightening or dimming over 1 second.

Power is supplied

- to 10A fuse [No. 22, located in fuse and fuse block (J/B)]
- through key switch and ignition knob switch terminals 1 and 3.

Key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37. And not turned ignition knob switch, power will not be supplied to Intelligent Key unit.

Ground is supplied

- from BCM terminal 22
- to power window main switch (door lock and unlock switch) terminal 14.

At the time that driver door are opened, BCM detects that driver door is unlocked. It determines that room lamp and personal lamp timer operation conditions are met, and turns room lamp and personal lamp ON for 30 seconds.

Key is in ignition key cylinder (key switch ON), or turned ignition knob switch,

Power is supplied

- through key switch terminal 4
- to BCM terminal 37,
- through key switch terminal 2
- to intelligent key unit terminal 27.

When the key is removed from key switch (key switch OFF), power supply to BCM terminal 37 is terminated. And turned ignition knob switch, power supply to Intelligent Key unit is terminated. BCM detects that key has been removed, determines that room lamp and personal lamp timer conditions are met, and turns room lamp and personal lamp ON for 30 seconds.

When driver door opens → closes, and key is not inserted in key switch (or not turned ignition knob switch), BCM terminal 62 changes between 0V (door open) → 12V (door closed). BCM determines that conditions for room lamp and personal lamp operation are met and turns the room lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Driver door is locked [when locked key fob, power window main switch (door lock and unlock switch) or door key cylinder switch].
- Driver door is opened (driver door switch turns ON).
- Ignition switch ON.

INTERIOR LAMP BATTERY SAVER CONTROL

If interior lamp is left "ON", it will not be turned out even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned off.

BCM controls interior lamps listed below:

- Luggage room lamp
- Vanity mirror lamp
- Room lamp
- Personal lamp

After lamps turn OFF by battery saver system, lamps illuminate again when

- signal from key fob, or power window main switch (door lock and unlock switch) or key cylinder is locked or unlocked,
- door is opened or closed,
- key is removed from ignition key cylinder or inserted in ignition key cylinder, or turned ignition knob switch.

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II.

A

B

C

D

E

F

G

H

I

J

LT


L

M

INTERIOR ROOM LAMP


Schematic

AKS004M4

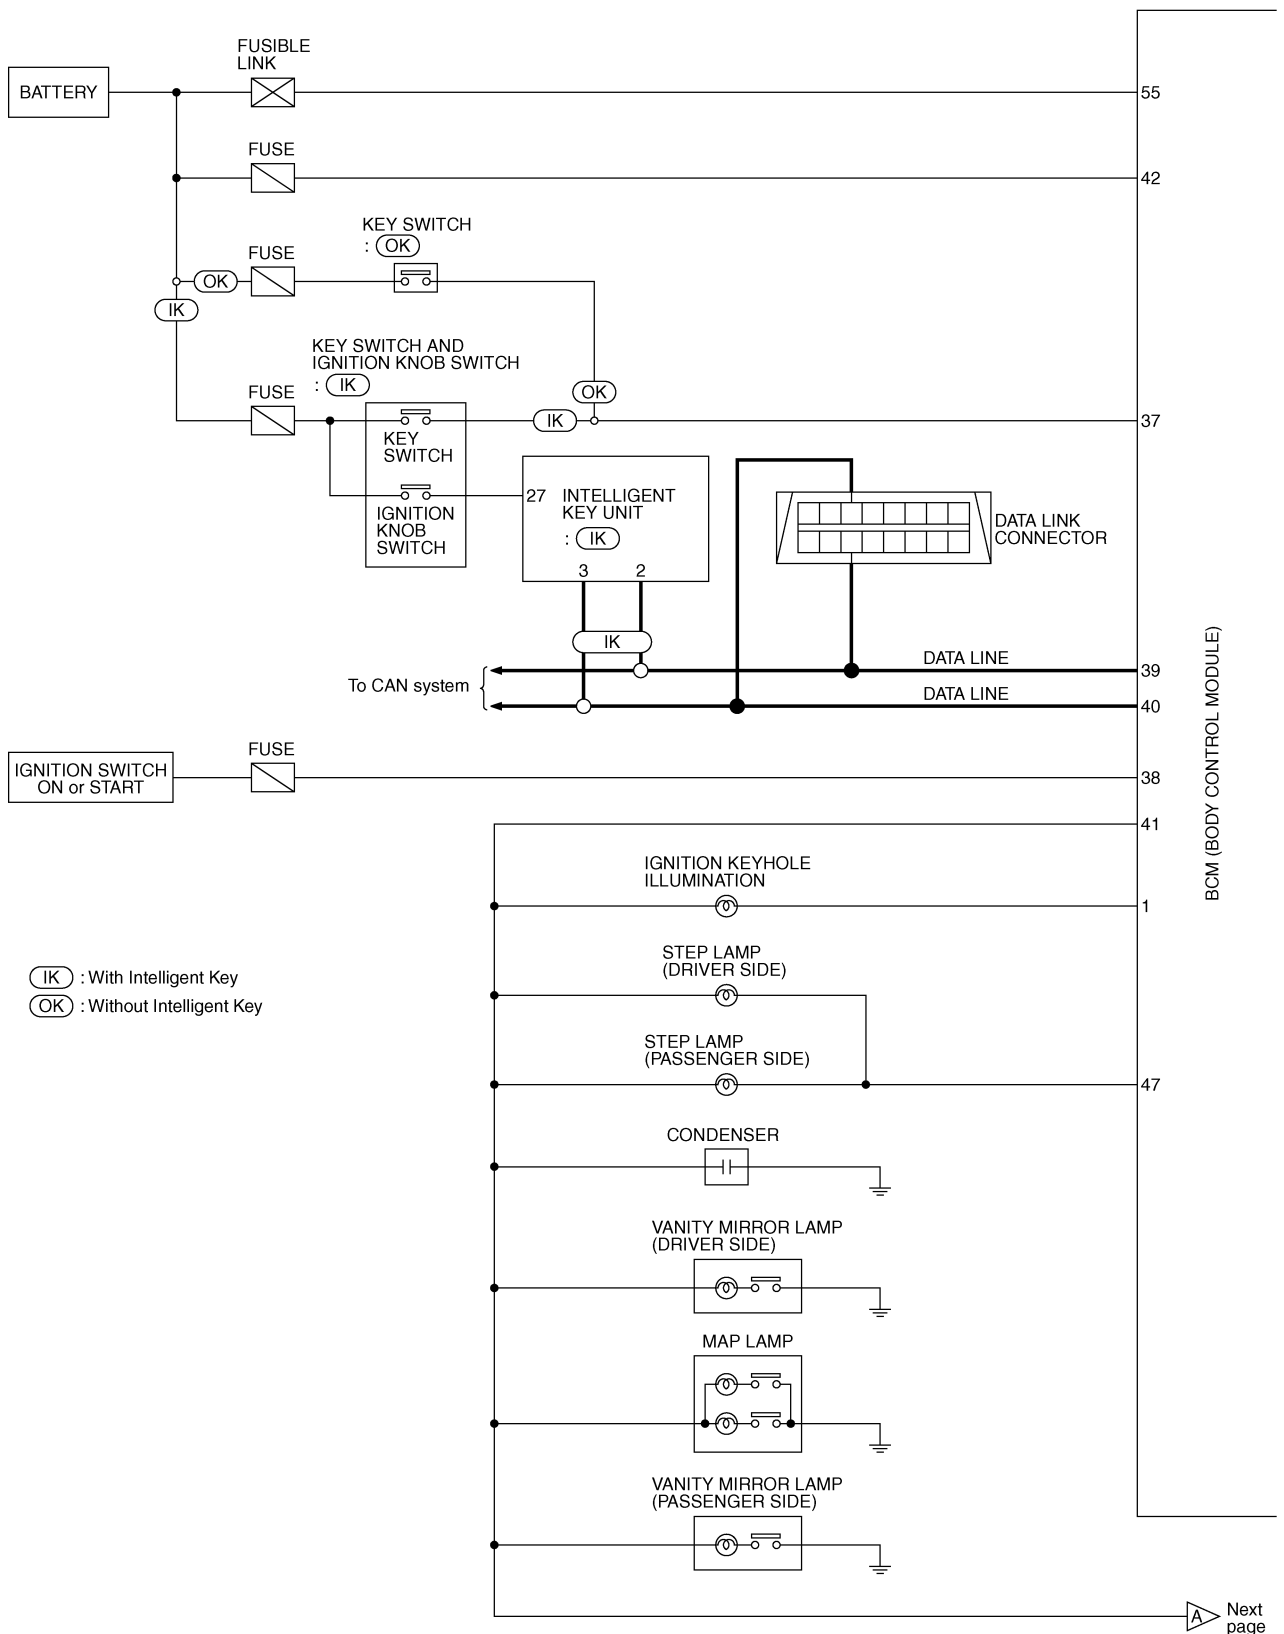

TKWB0467E

INTERIOR ROOM LAMP

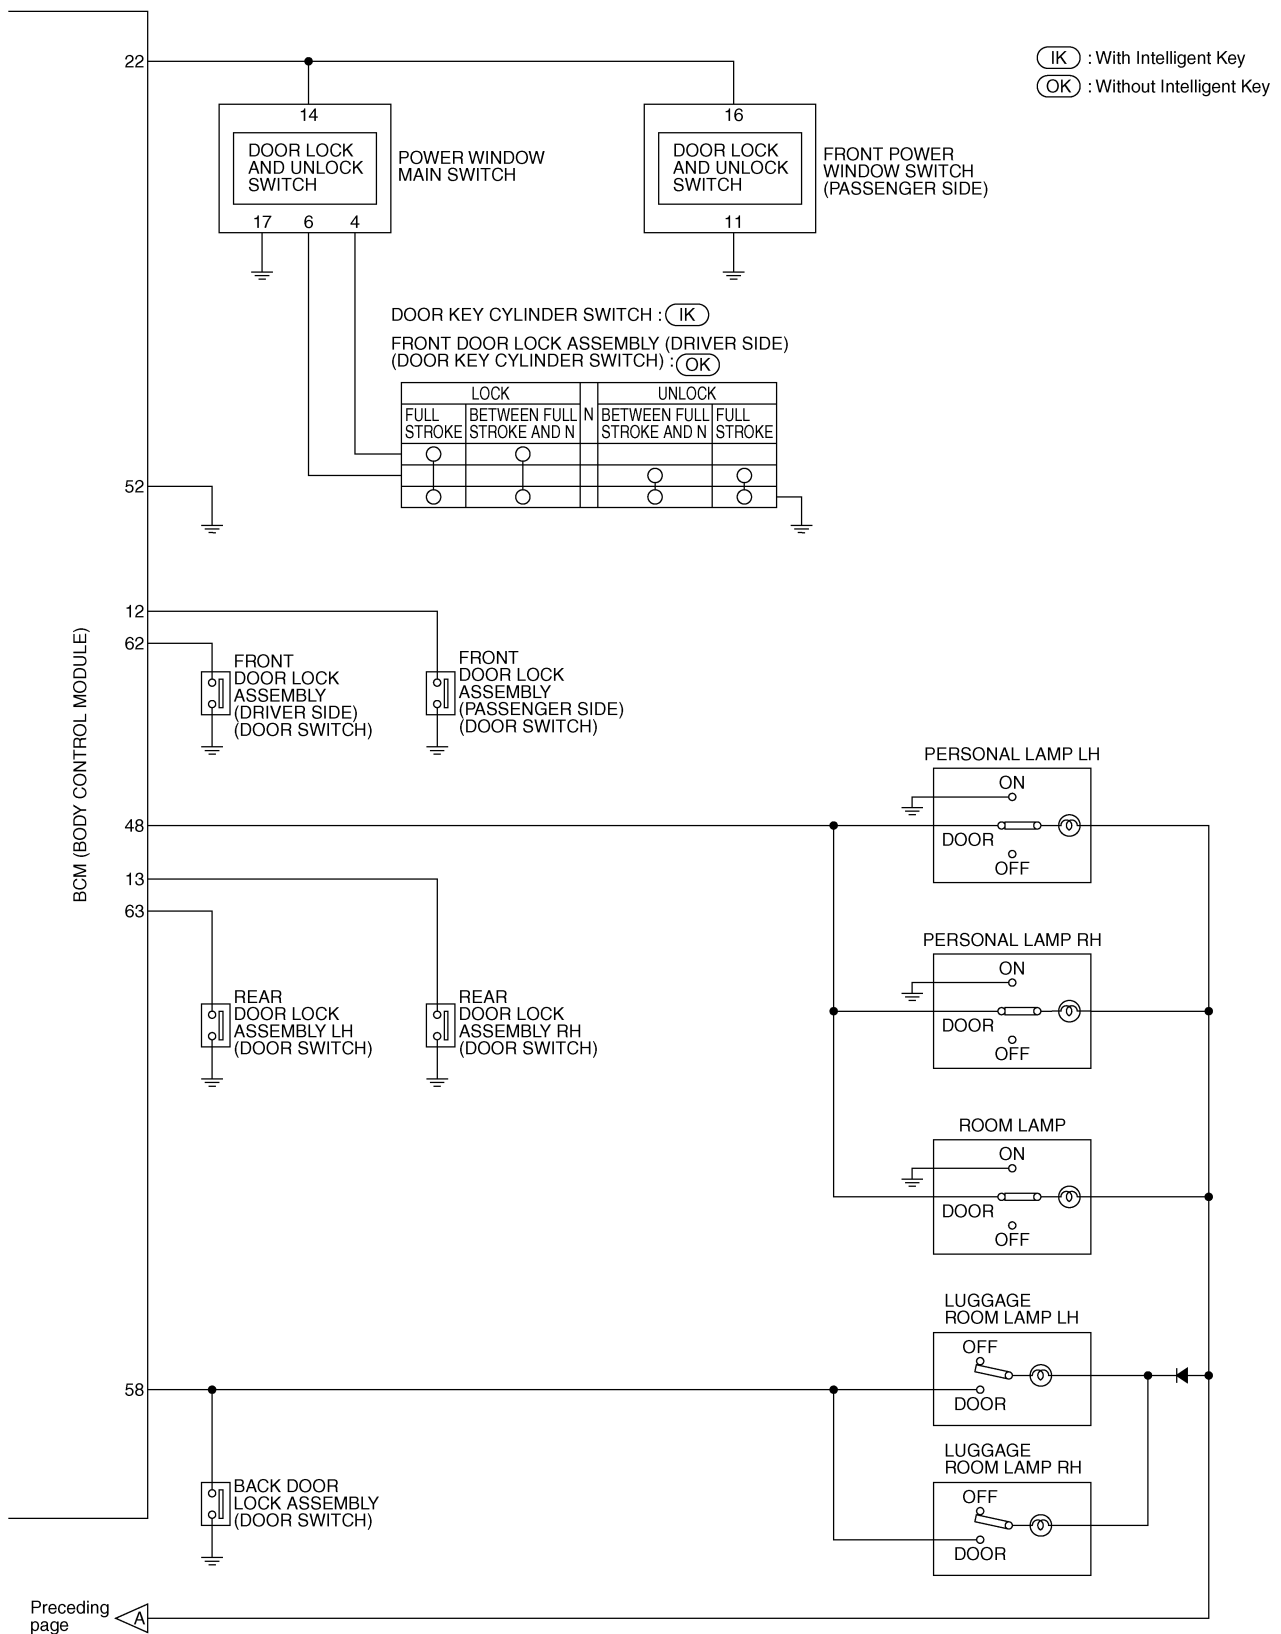

A
B
C
D
E
F
G
H
I
J
LT
L
M

TKWB0468E



INTERIOR ROOM LAMP

AKS004M5

Wiring Diagram — ROOM/L — WITH INTELLIGENT KEY

LT-ROOM/L-01

▬ : DATA LINE

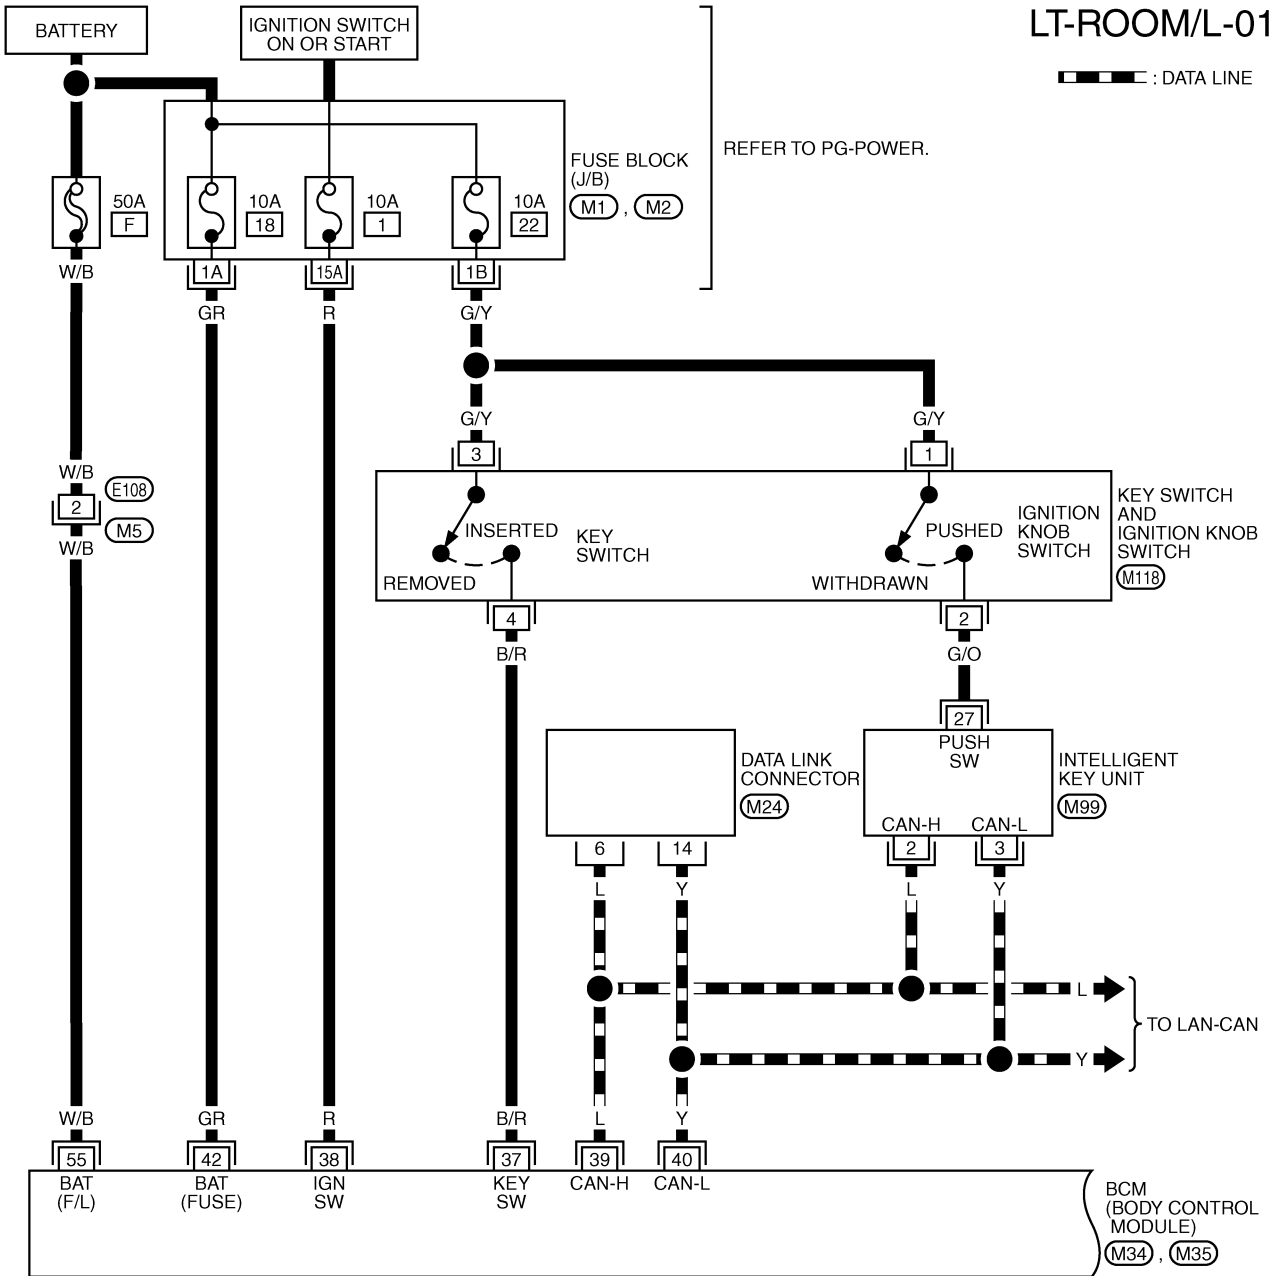

REFER TO THE FOLLOWING.



- (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)
- (M34), (M35), (M99) - ELECTRICAL UNITS

TKWB0469E

INTERIOR ROOM LAMP

LT-ROOM/L-02

A
B
C
D
E
F
G
H
I
J
LT
L
M


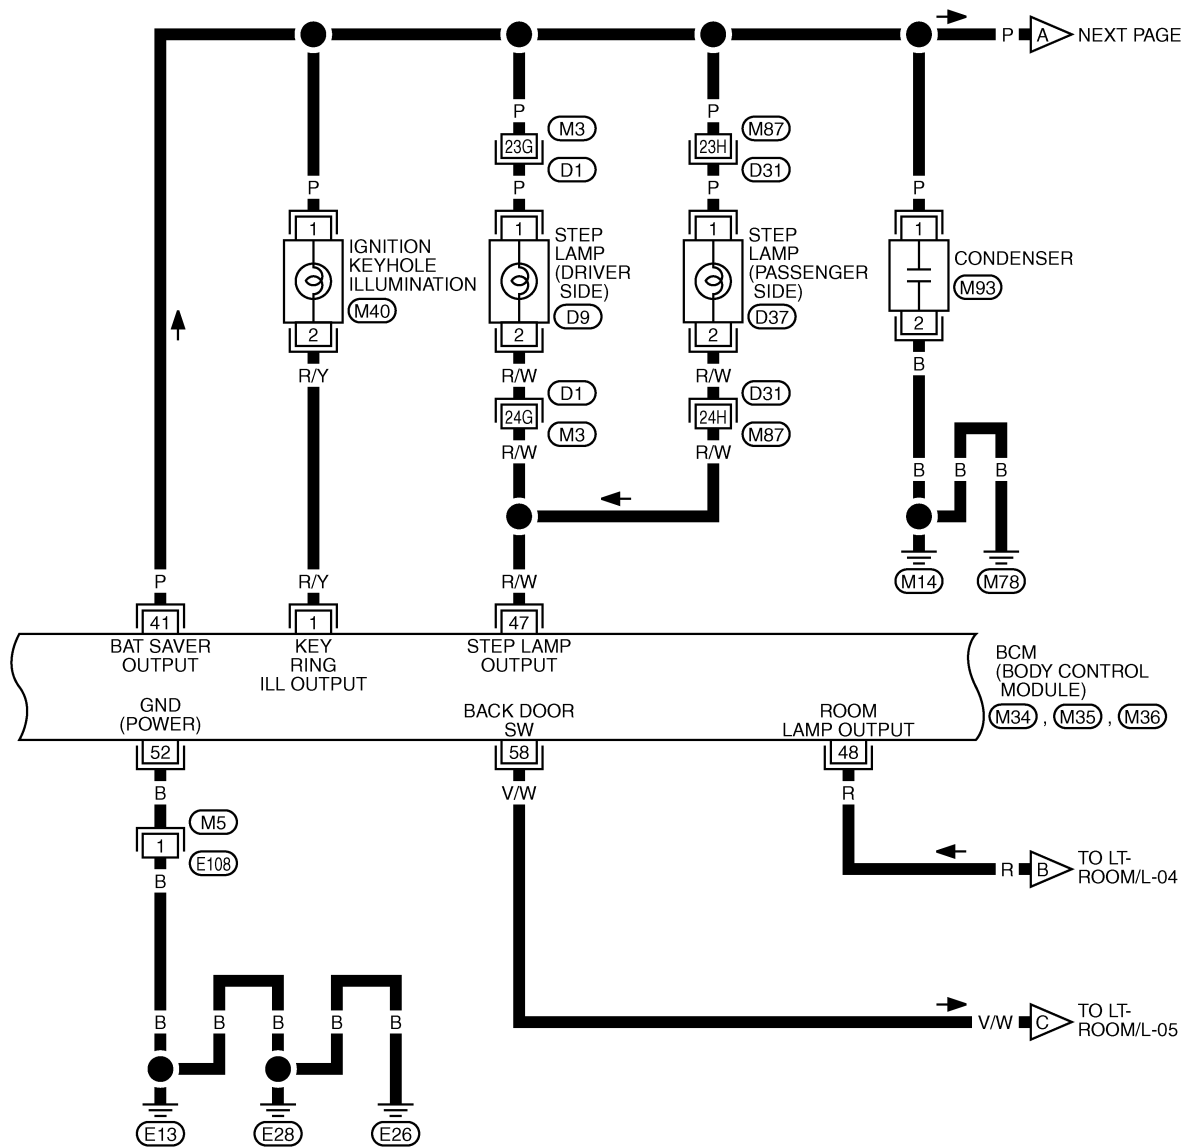


REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)
 (M34), (M35), (M36) -ELECTRICAL UNITS

TKWB0470E

INTERIOR ROOM LAMP

LT-ROOM/L-03


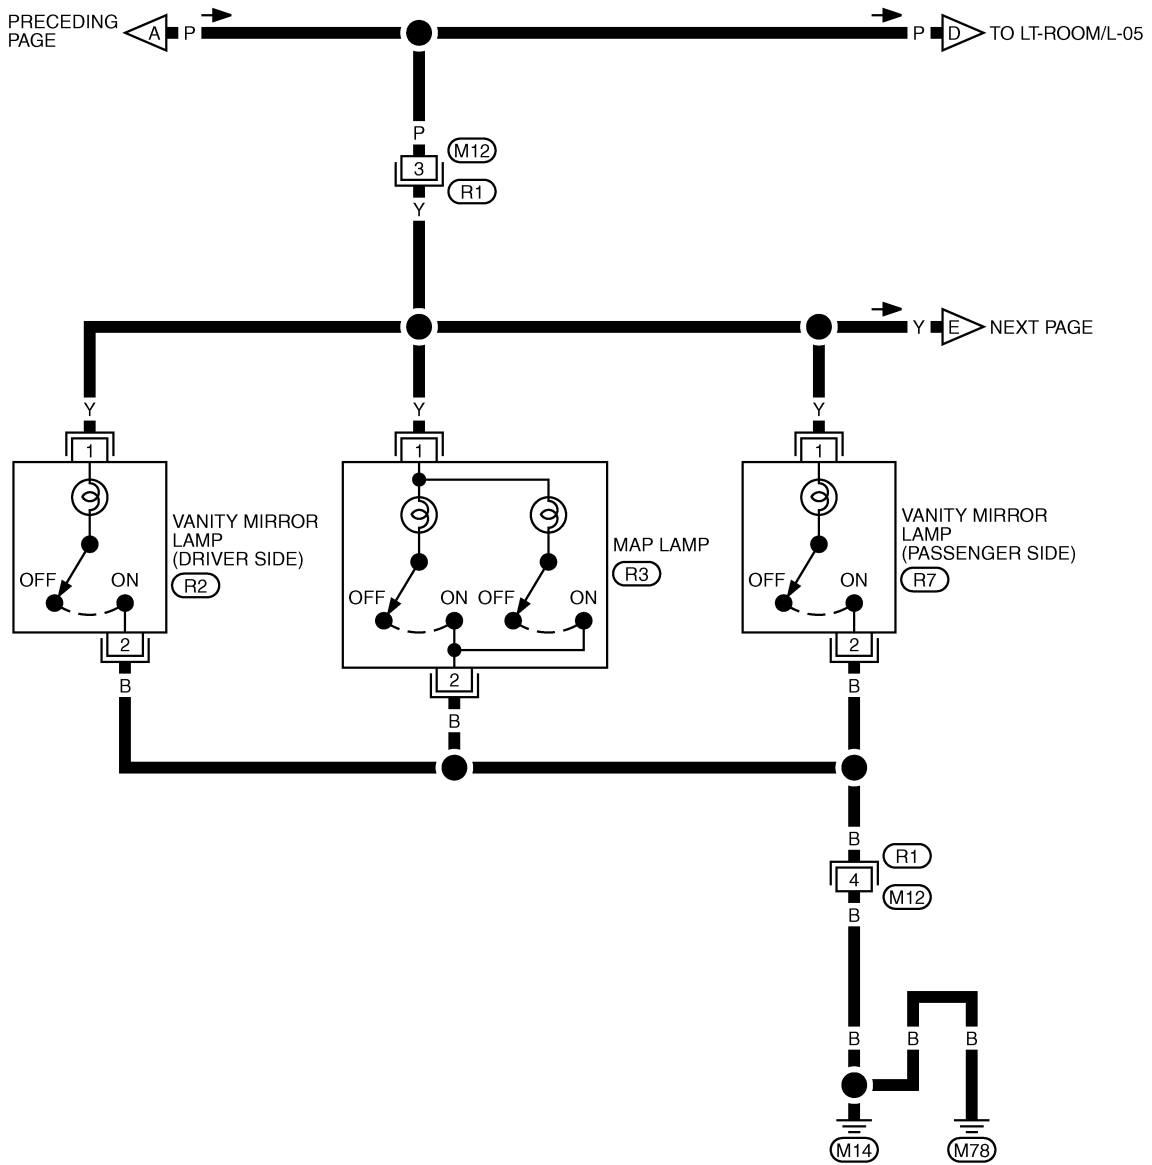


TKWB0471E

INTERIOR ROOM LAMP

LT-ROOM/L-04



A
B
C
D
E
F
G
H
I
J
LT
L
M

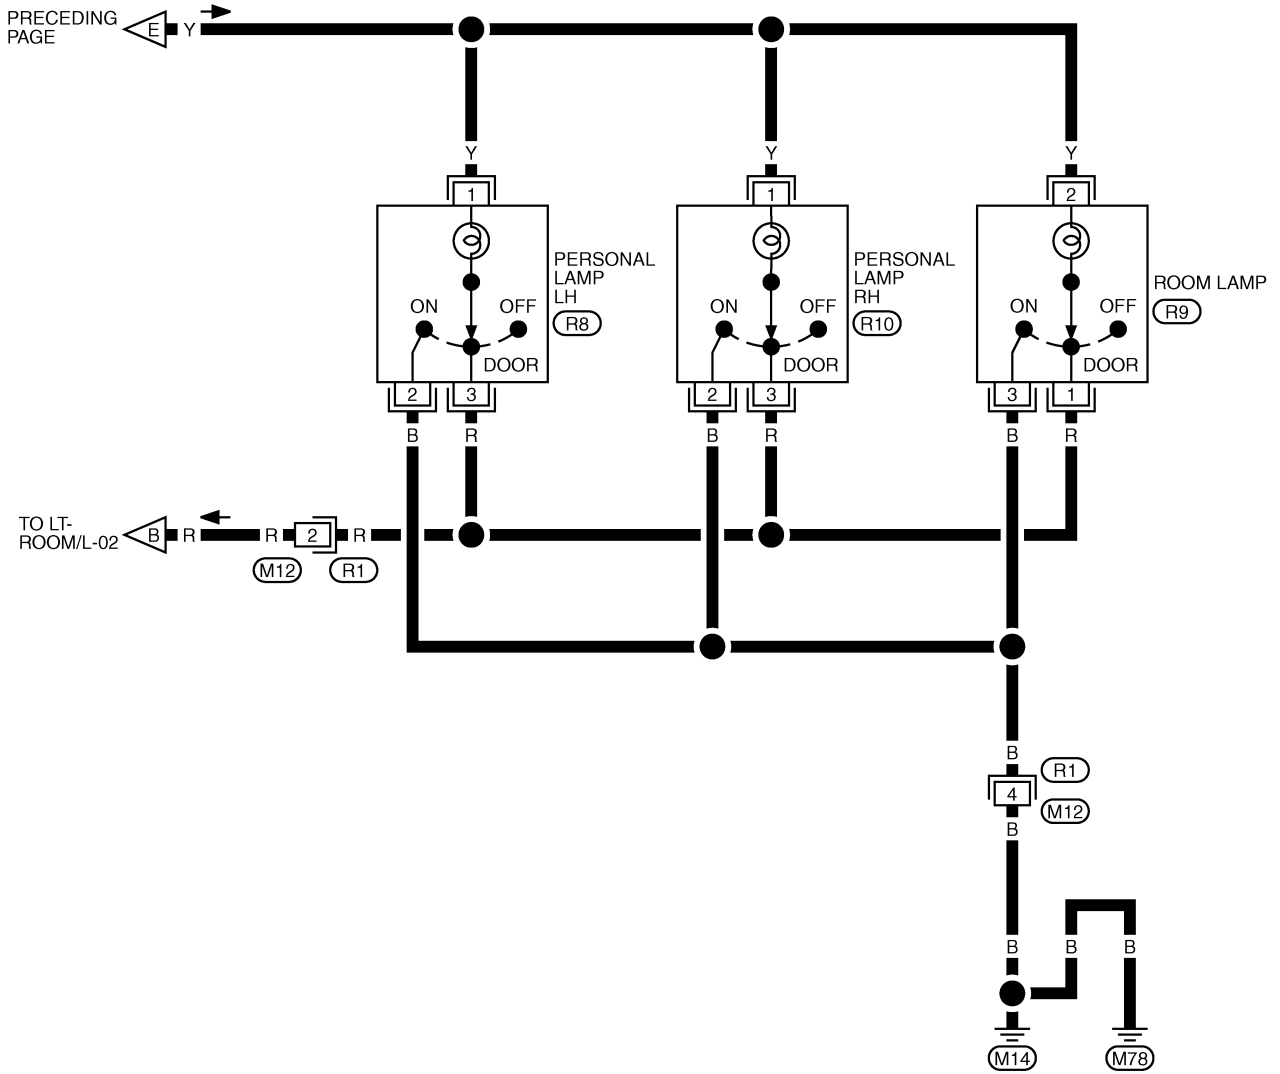


TKWB0472E

INTERIOR ROOM LAMP


LT-ROOM/L-05

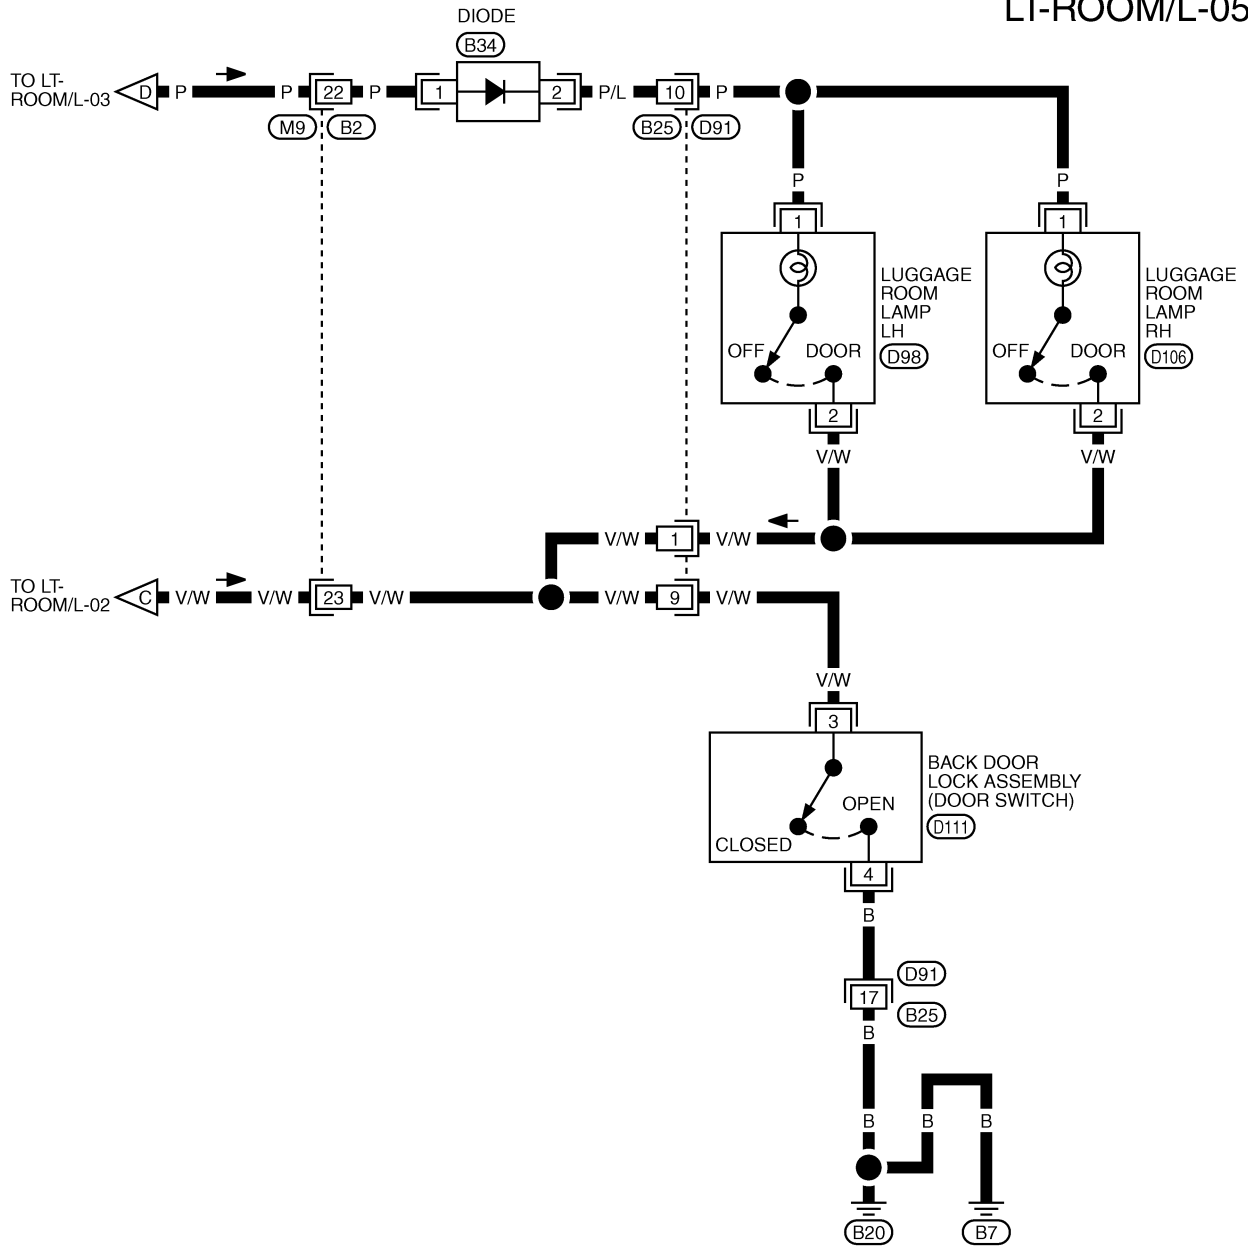


M9
W



B34
W




D91
W



D98
W

D106
W







D111
W

TKWB0473E

INTERIOR ROOM LAMP

LT-ROOM/L-06


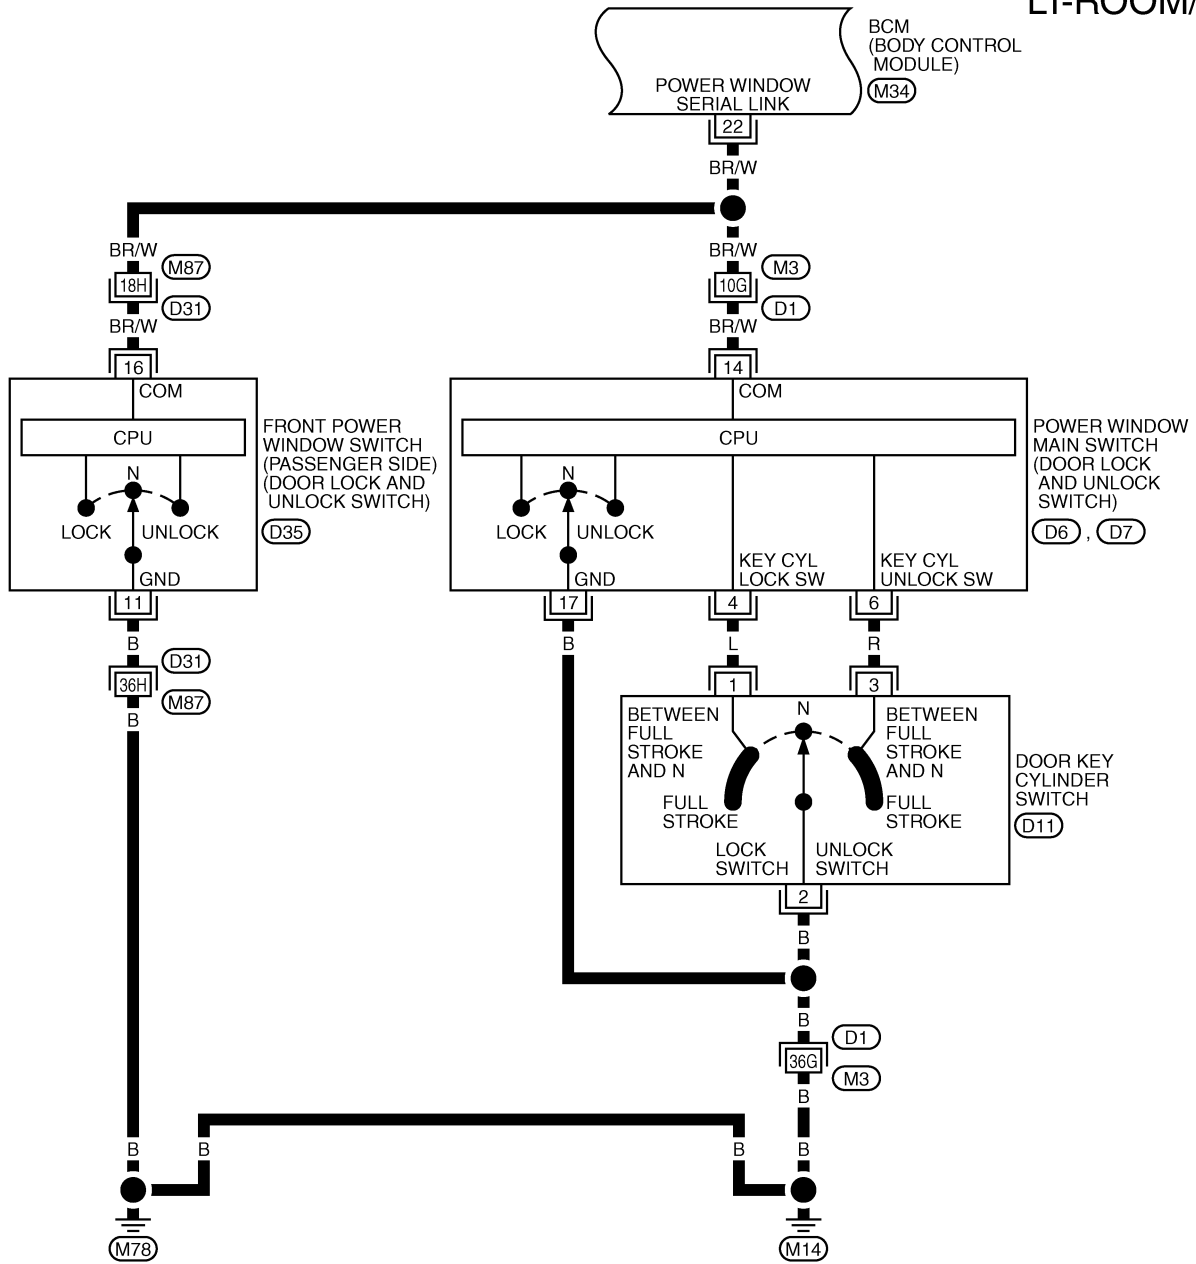


REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)
 (M34) -ELECTRICAL UNITS

TKWB0474E

INTERIOR ROOM LAMP

LT-ROOM/L-07

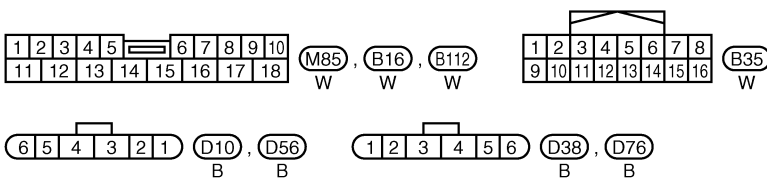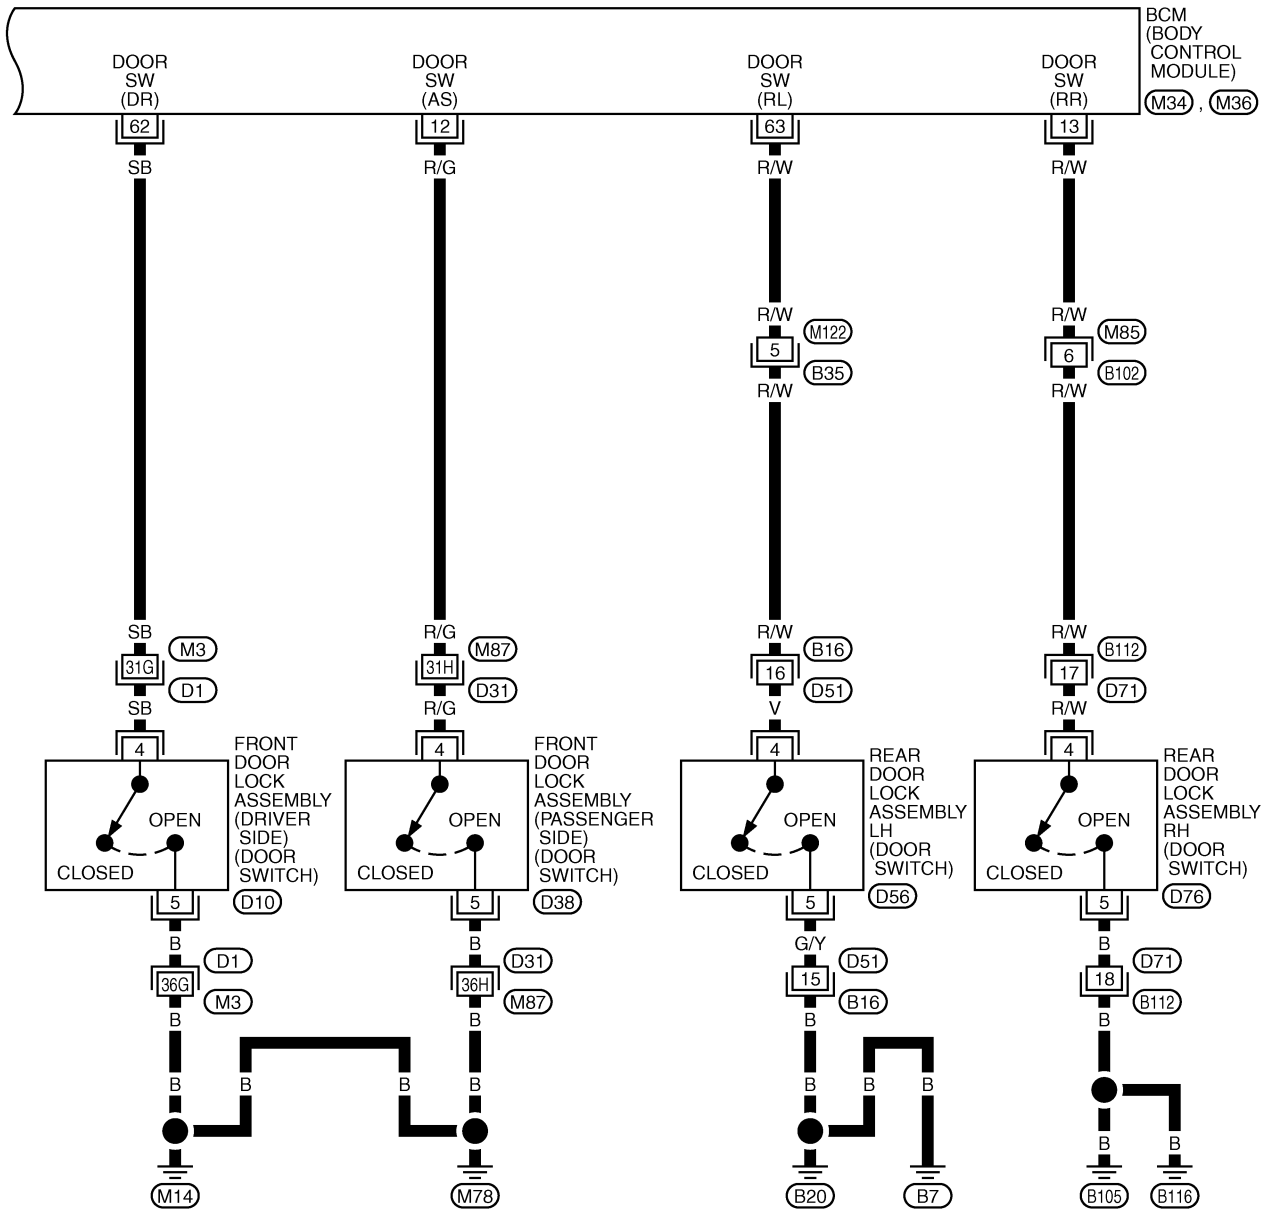

REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)
 (M34), (M36) -ELECTRICAL UNITS



TKWB0475E

INTERIOR ROOM LAMP

WITHOUT INTELLIGENT KEY

LT-ROOM/L-08

A
B
C
D
E
F
G
H
I
J
LT
L
M


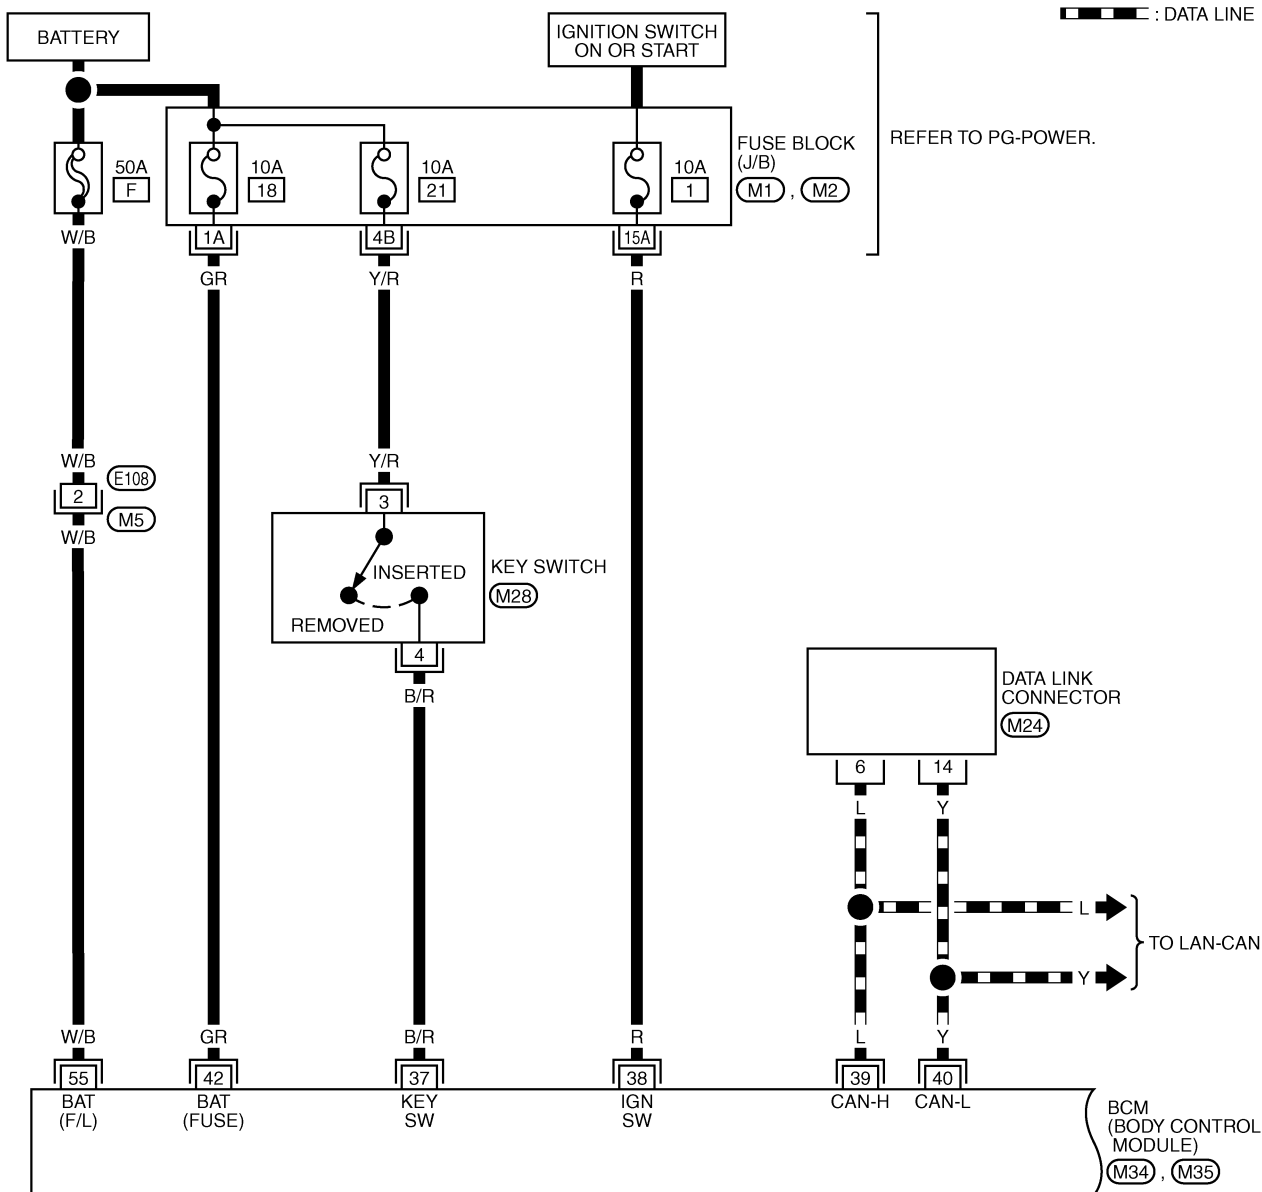


REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)
 (M34), (M35) - ELECTRICAL UNITS

TKWB0910E

INTERIOR ROOM LAMP

LT-ROOM/L-09

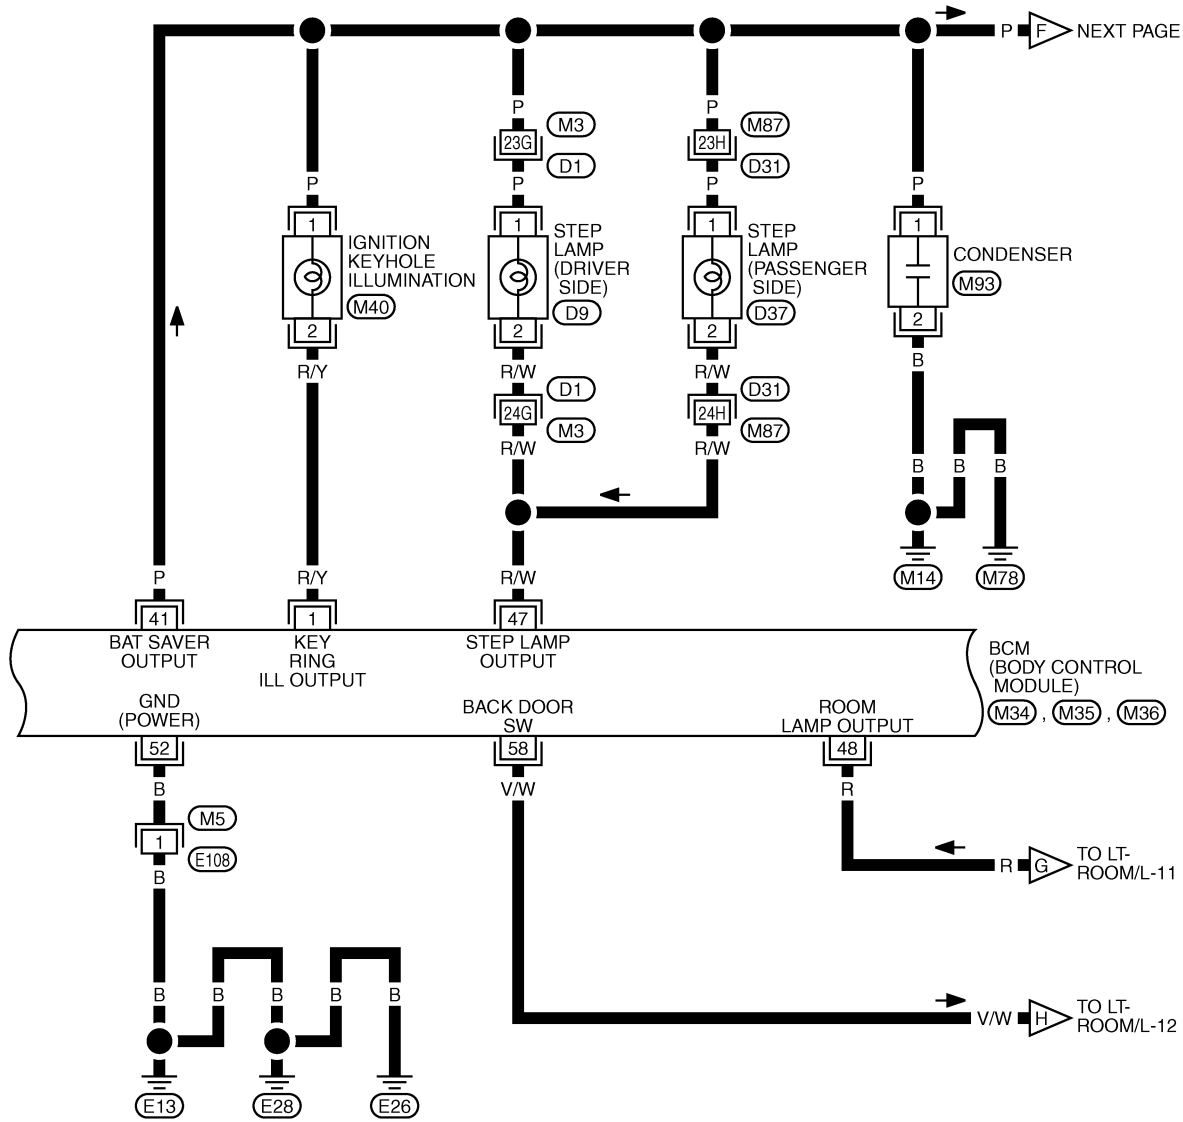


REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)
 (M34), (M35), (M36) -ELECTRICAL UNITS

TKWB0911E


INTERIOR ROOM LAMP

LT-ROOM/L-10

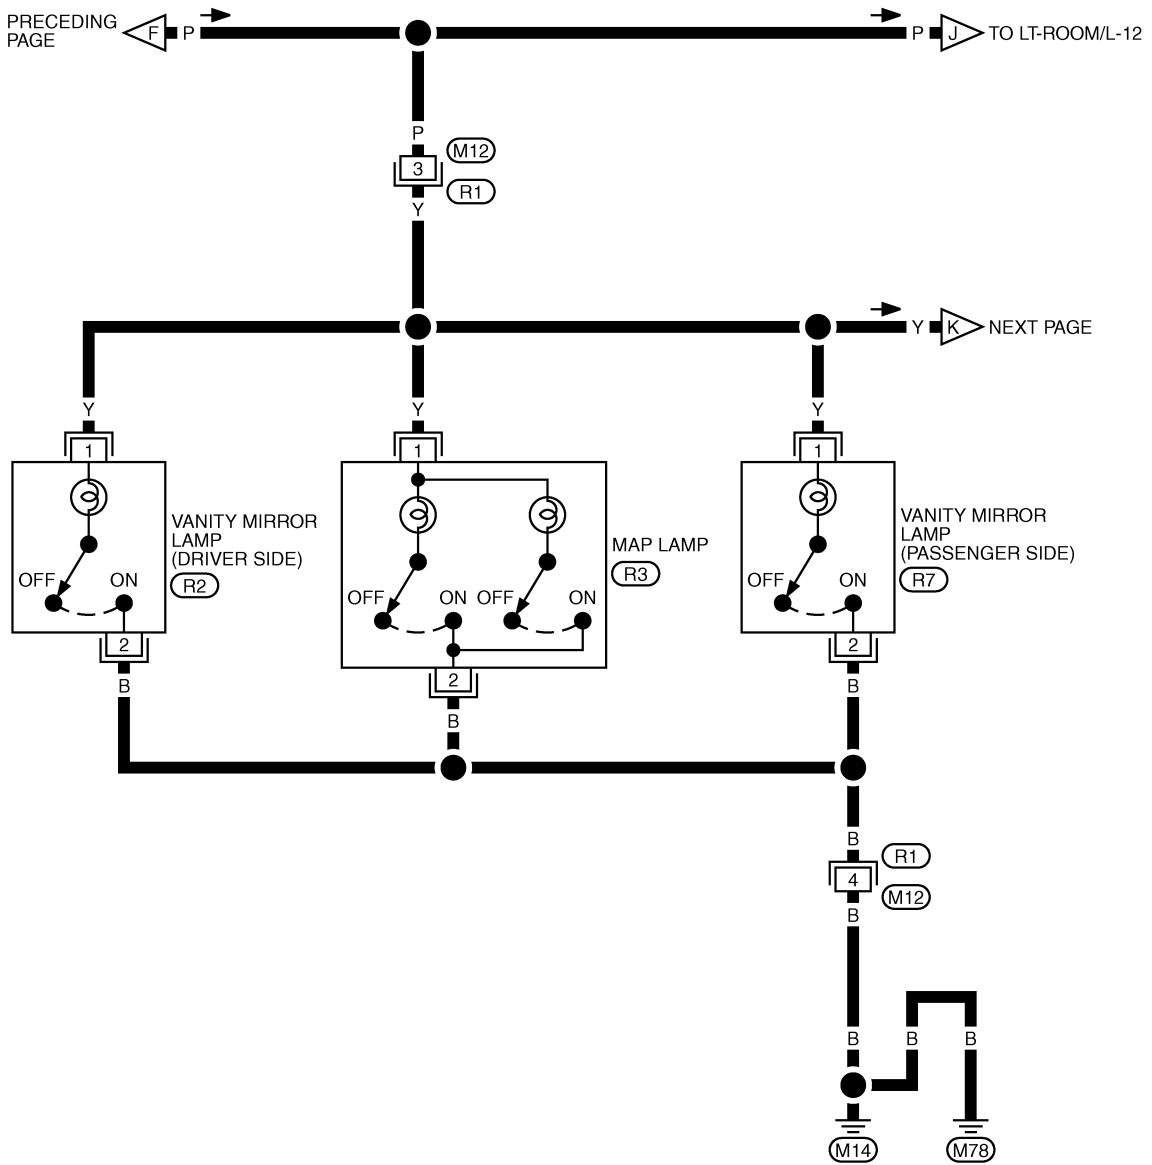

A
B
C
D
E
F
G
H
I
J
K
L
M



LT



TKWB0912E

INTERIOR ROOM LAMP







LT-ROOM/L-11

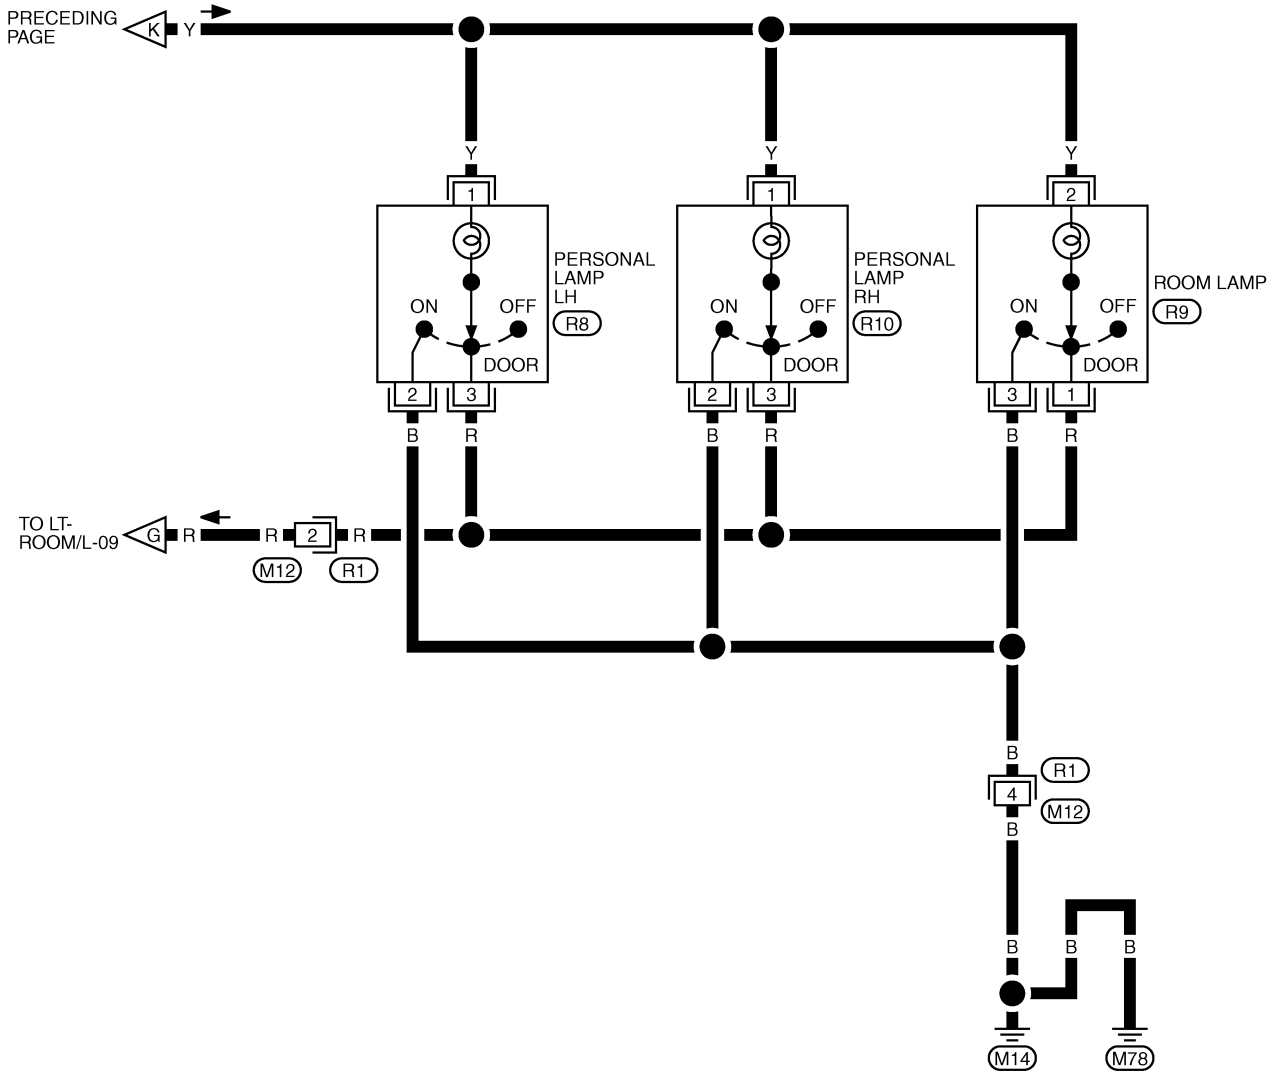

TKWB0913E

INTERIOR ROOM LAMP




LT-ROOM/L-12

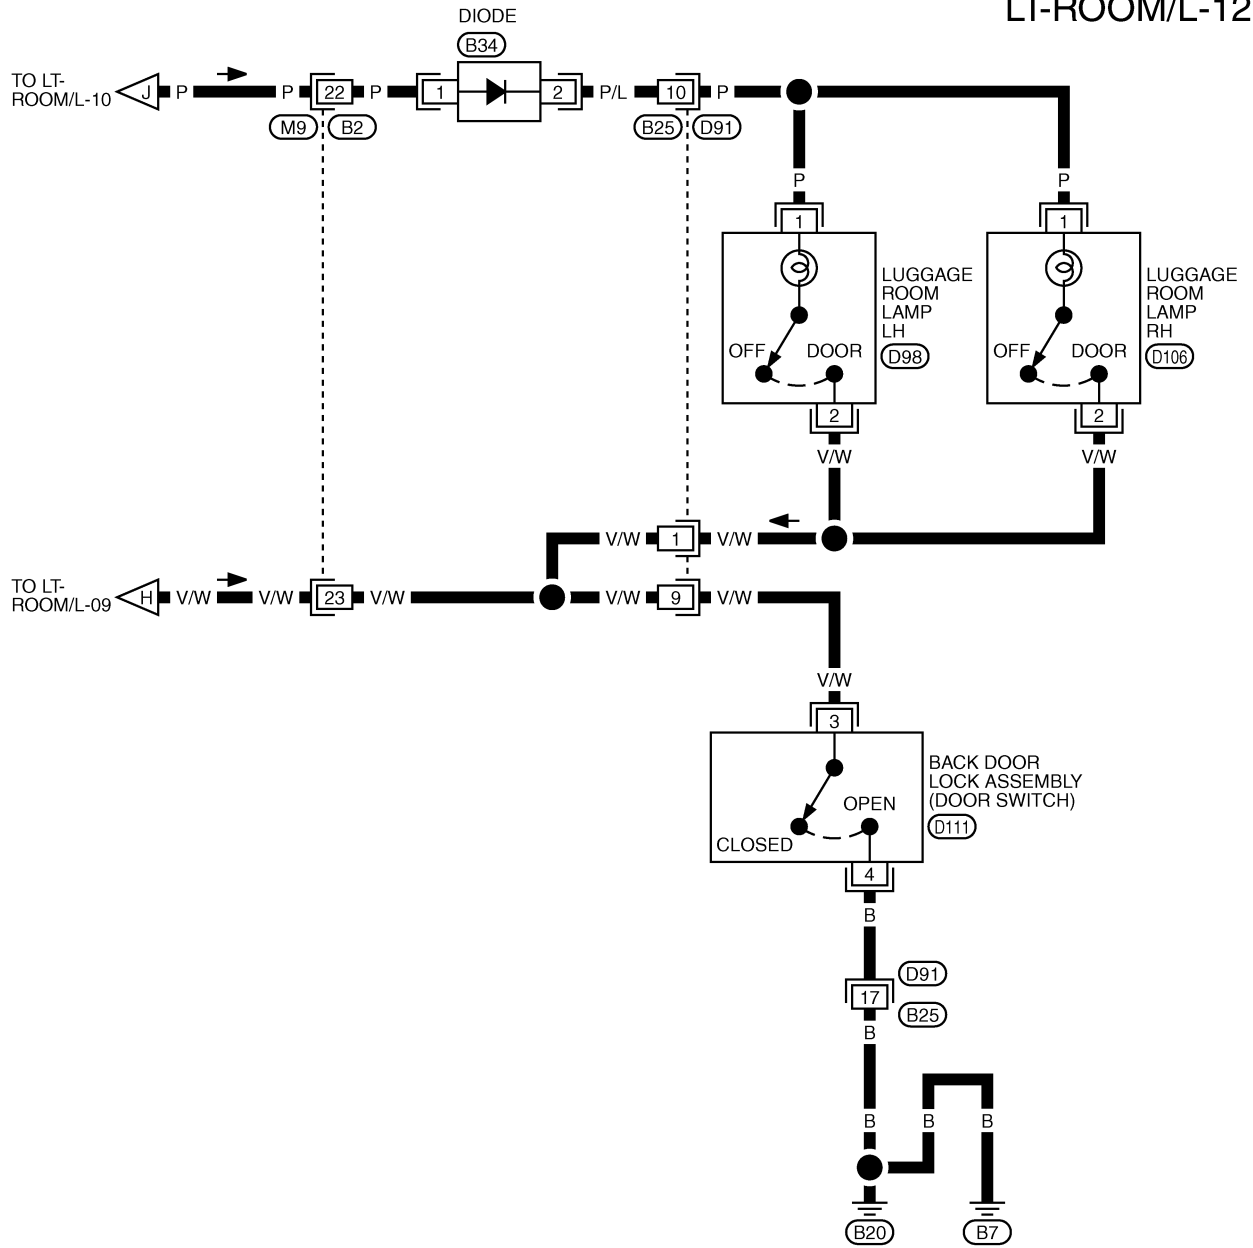


TKWB0914E

INTERIOR ROOM LAMP

LT-ROOM/L-13

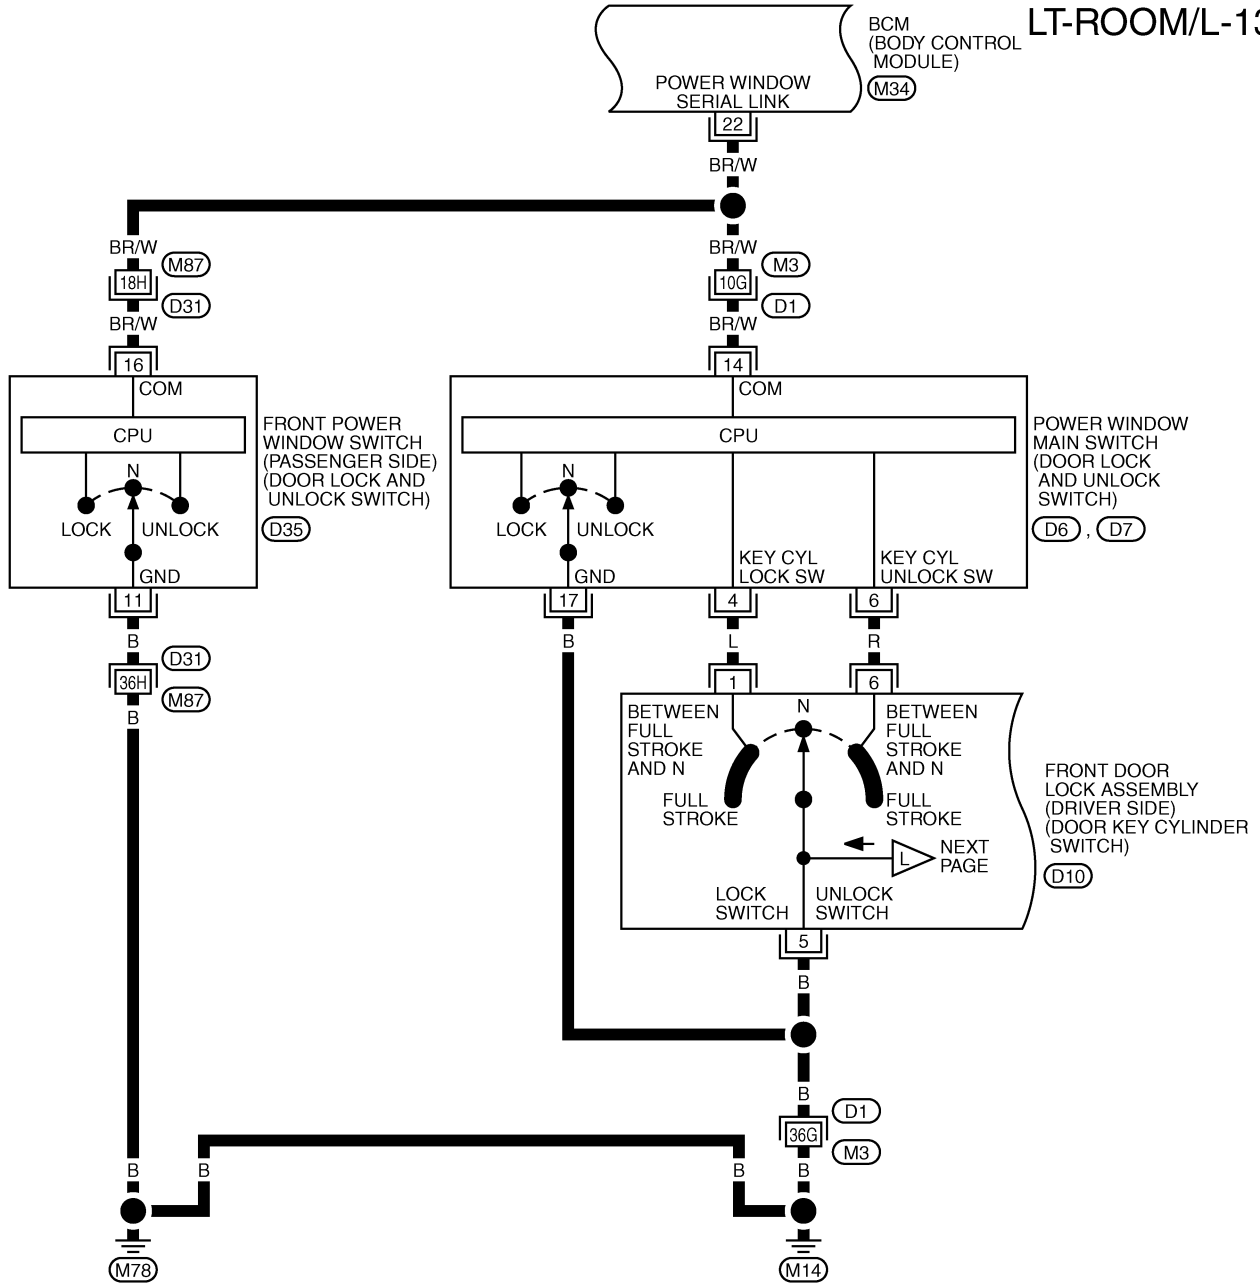



REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)
 (M34) -ELECTRICAL UNITS



TKWB0915E

INTERIOR ROOM LAMP

LT-ROOM/L-14

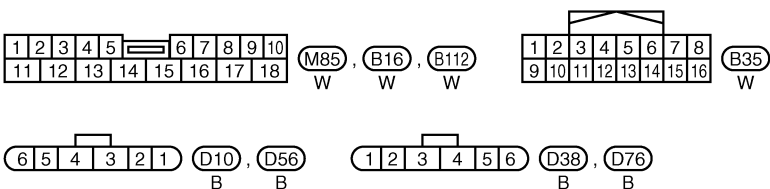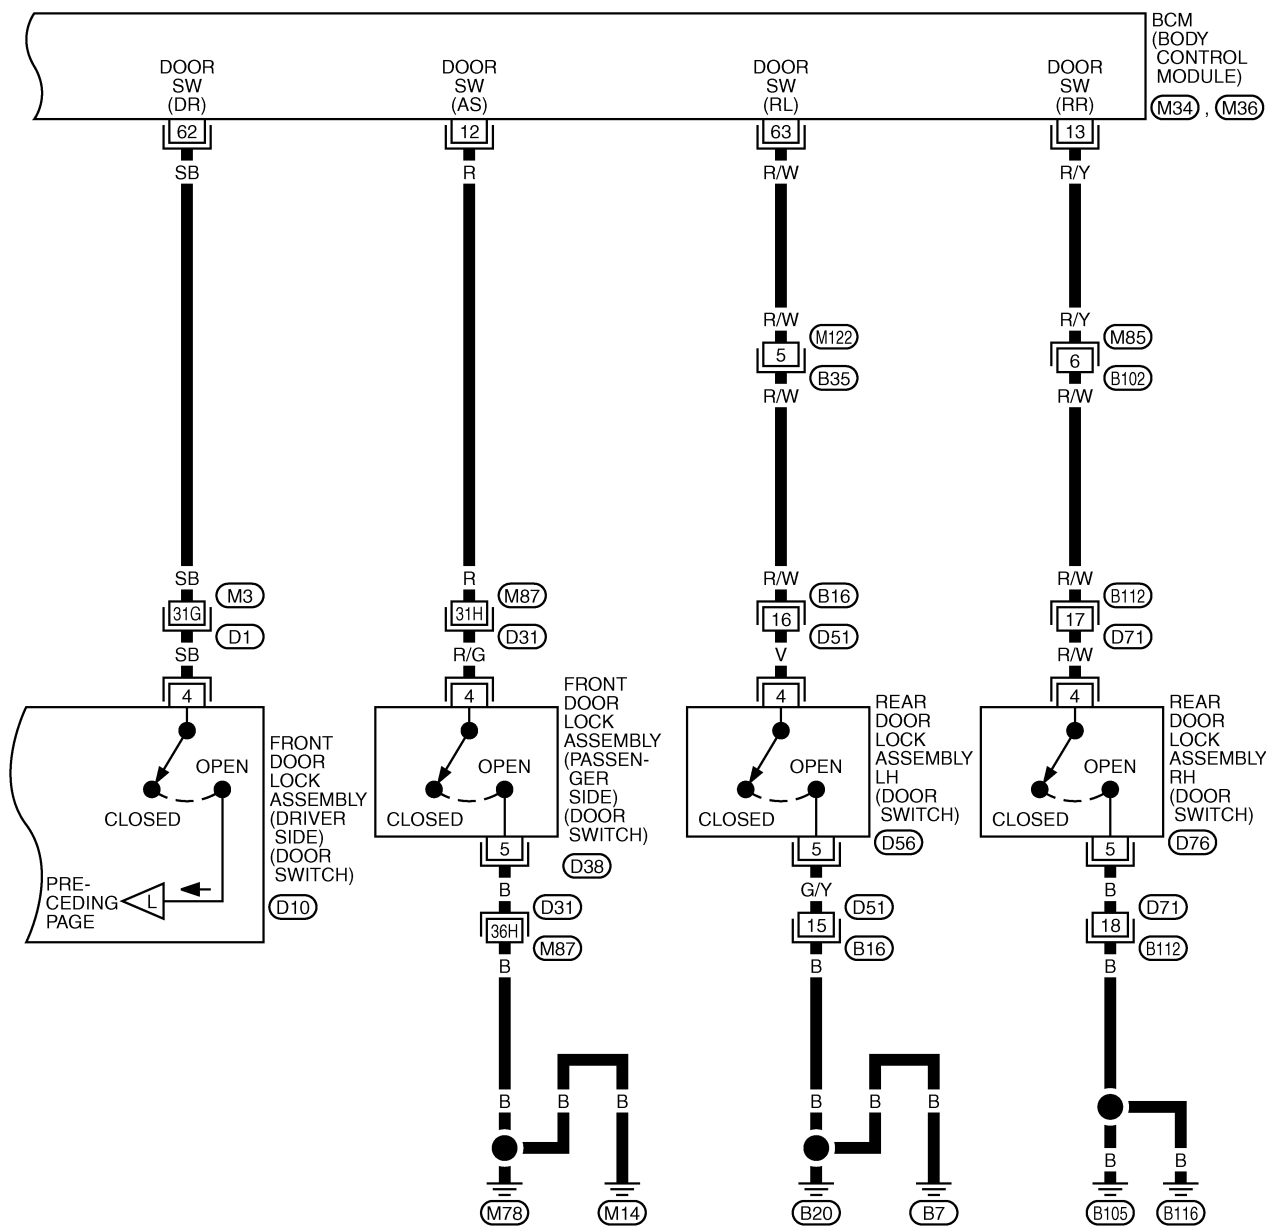


REFER TO THE FOLLOWING.
 (D1), (D31) -SUPER MULTIPLE JUNCTION (SMJ)
 (M34), (M36) -ELECTRICAL UNITS

TKWB0916E

INTERIOR ROOM LAMP

Terminals and Reference Values for BCM

AKS00AMF

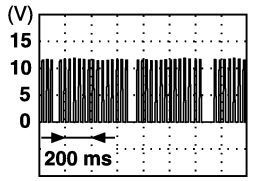Terminal No.	Wire color	Signal name	Measuring condition			Reference value
			Ignition switch	Operation or condition		
1	R/Y	Ignition key hole illumination signal	OFF	Door is locked. (SW OFF)		Battery voltage
				Door is unlocked. (SW ON)		Approx. 0V
12	R/G ^{*1} , R ^{*2}	Front door switch AS signal	OFF	Front door switch AS	ON (open)	Approx. 0V
					OFF (closed)	Battery voltage
13	R/W ^{*1} , R/Y ^{*2}	Rear door switch RH signal	OFF	Rear door switch RH	ON (open)	Approx. 0V
					OFF (closed)	Battery voltage
22	BR/W	Power window switch serial link	—	—		
37	B/R	Key-in detection switch signal	OFF	Vehicle key is removed.		Approx. 0V
				Vehicle key is inserted.		Battery voltage
38	R	Ignition power supply	ON	—	Battery voltage	
39	L	CAN – H	—	—	—	
40	Y	CAN – L	—	—	—	
41	P	Battery saver output signal	OFF	30 minutes after ignition switch is turned to OFF.		Approx. 0V
			ON	—		Battery voltage
42	GR	Battery power supply	OFF	—	Battery voltage	
47	R/W	Step lamp signal	OFF	Any door is open. (ON)		Approx. 0V
				All doors are closed. (OFF)		Battery voltage
48	R	Personal lamp LH and RH, map lamp illumination output signal	OFF	Interior door switch: DOOR position	Any door switch ON (open)	Approx. 0V
					Any door switch OFF (closed)	Battery voltage
52	B	Ground	ON	—	Approx. 0V	
55	W/B	Battery power supply	OFF	—	Battery voltage	
58	V/W	Back door switch signal	OFF	Back door switch	ON (open)	Approx. 0V
					OFF (closed)	Battery voltage
62	SB	Front door switch DR signal	OFF	Front door switch DR	ON (open)	Approx. 0V
					OFF (closed)	Battery voltage
63	R/W	Rear door switch LH signal	OFF	Rear door switch LH	ON (open)	Approx. 0V
					OFF (closed)	Battery voltage

*1: With intelligent key, *2: Without intelligent key

How to Proceed With Trouble Diagnosis

AKS00AMG

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-175, "System Description"](#).
3. Carry out the Preliminary Check. Refer to [LT-197, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

INTERIOR ROOM LAMP

AKS00AMQ

Preliminary Check CHECK FOR POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES

- Check for blown fuses.

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		18
		21
	22	
	Ignition switch ON or START position	1

Refer to [LT-182, "Wiring Diagram — ROOM/L —"](#).

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse. Refer to [PG-3, "POWER SUPPLY ROUTING CIRCUIT"](#).

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM connector and ground.

Terminal		(-)	Ignition switch position	
(+)	Connector		Terminal (Wire color)	OFF
M35	42 (GR)	Ground	Battery voltage	Battery voltage
			55 (W/B)	Battery voltage
M34	38 (R)		Approx. 0V	Battery voltage

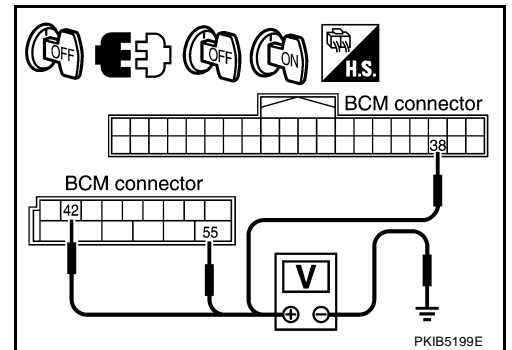

OK or NG

OK >> GO TO 3.

NG >> Check harness for open or short between BCM and fuse.

3. CHECK GROUND CIRCUIT


Check continuity between BCM and ground.

Terminal		Ground	Continuity
Connector	Terminal (Wire color)		
M35	52 (B)		Yes

OK or NG

OK >> INSPECTION END

NG >> Check harness ground circuit.

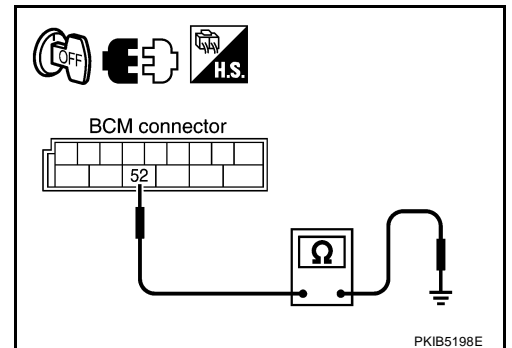

INTERIOR ROOM LAMP

CONSULT-II Functions (BCM)

AKS00AMR

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnosis part	Diagnosis mode	Description
INT LAMP	WORK SUPPORT	Changes setting for each function.
	DATA MONITOR	Displays BCM input data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending driving signal to them.

CONSULT-II BASIC OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, and then turn ignition switch ON.

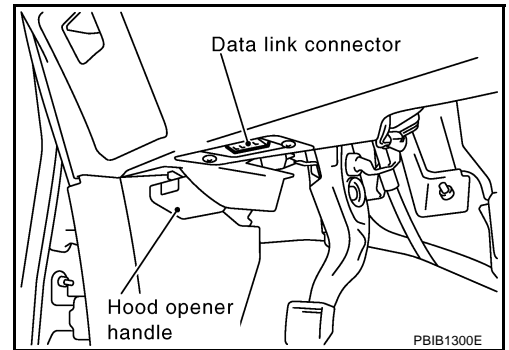

2. Touch "START (NISSAN BASED VHCL)".

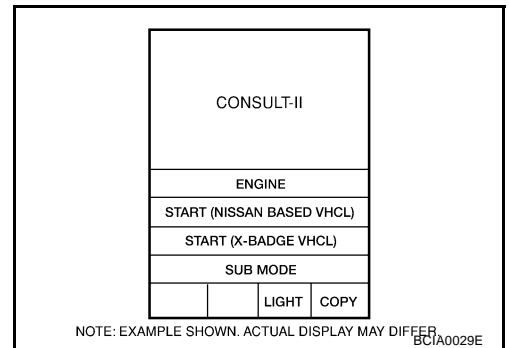


3. Touch "BCM" on "SELECT SYSTEM" screen. If "BCM" is not indicated, refer to [GI-39, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

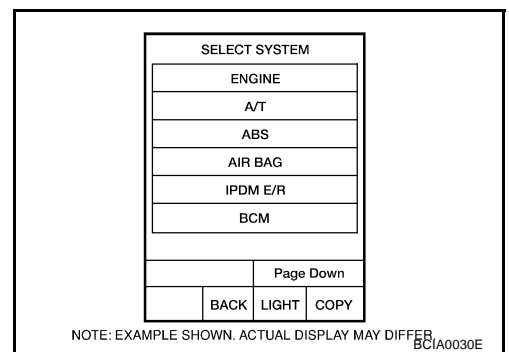

INTERIOR ROOM LAMP

4. Touch "INT LAMP" on "SELECT TEST ITEM" screen.

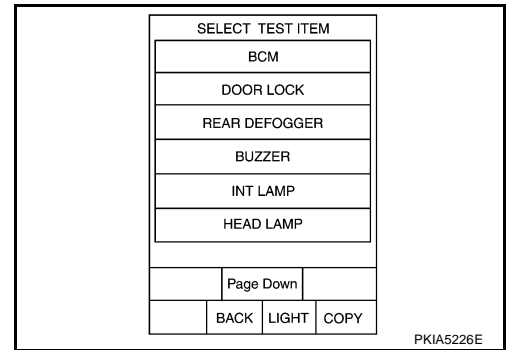

A
B
C
D
E
F
G

WORK SUPPORT

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "SET I/L D- UNLCK INTCON" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II
SET I/L D-UNLCK INTCON	The 30 seconds glowing function the interior room lamps and the ignition key hole illumination can be selected when driver door is released (unlocked).	ON/OFF
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when the interior room lamps and the ignition key hole illumination is turned on.	MODE 1 - 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when the interior room lamps and the ignition key hole illumination is turned off.	MODE 1 - 7

H
I
J

Reference between "MODE" and "TIME" for "TURN ON/OFF"

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

LT

DATA MONITOR

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects items and monitors them.

L
M

4. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
5. Touch "START".
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW	"ON/OFF" Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW	"ON/OFF" Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.

INTERIOR ROOM LAMP

Monitor item	Contents
DOOR SW - DR	"ON/OFF" Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - AS	"ON/OFF" Displays status of the passenger door as judged from passenger door switch signal. (Door open (ON)/Door closed (OFF))
DOOR SW - RR	"ON/OFF" Displays status of rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW - RL	"ON/OFF" Displays status of rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW	"ON/OFF" Displays status of the back door as judged from back door switch signal. (Door open (ON)/Door closed (OFF))
KEY CYL LK - SW	"ON/OFF" Displays "Door locked (ON) status, determined from key cylinder lock switch in driver door.
KEY CYL UN - SW	"ON/OFF" Displays "Door unlocked (OFF) status, determined from key cylinder lock switch in driver door.
CDL LOCK SW	"ON/OFF" Displays "Door locked (ON)/Door unlocked (OFF) status, determined from locking detection switch in driver door.
CDL UNLOCK SW	"ON/OFF" Displays "Door unlocked (OFF)" status, determined from locking detection switch in passenger door.
I – KEY LOCK ^{NOTE}	"ON/OFF" Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
I – KEY UNLOCK ^{NOTE}	"ON/OFF" Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.

NOTE:

Vehicle with intelligent key system display this item.

ACTIVE TEST

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

Display Item List

Test item	Description
INT LAMP	Interior room lamp can be operated by any ON–OFF operations.
IGN ILLUM	Ignition key hole illumination can be operated by ON–OFF operation.
STEP LAMP TEST	All step lamp can be operated by ON–OFF operation.
LUGGAGE LAMP TEST ^{NOTE}	—

NOTE:

This item is displayed, but cannot be tested.

Room Lamp Does Not Illuminate

AKS00AMJ

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor to make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-199, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
 NG >> Inspect malfunctioning switch system.

DATA MONITOR			
MONITOR			
IGN ON SW	ON		
KEY ON SW	ON		
DOOR SW-DR	ON		
DOOR SW-AS	ON		
DOOR SW-RR	OFF		
DOOR SW-RL	OFF		
BACK DOOR SW	OFF		
KEY CYL LK-SW	OFF		
KEY CYL UN-SW	OFF		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

PKIB3532E


INTERIOR ROOM LAMP

2. CHECK WITH ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
2. When room lamp switch is in "DOOR" position, use active test to make sure room lamp operates.

OK or NG

- OK >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

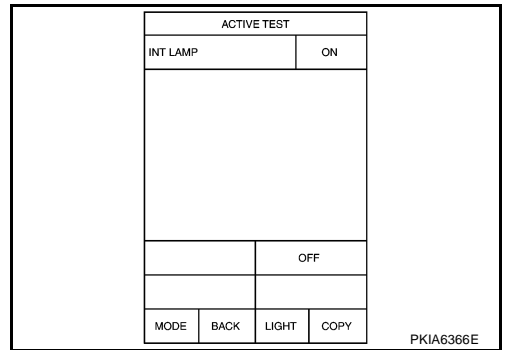


3. CHECK POWER SUPPLY TO ROOM LAMP

1. Turn ignition switch OFF.
2. Disconnect room lamp connector.
3. Turn ignition switch ON.
4. Check voltage between room lamp harness connector R9 terminal 2 (Y) and ground.

2 (Y) - Ground : Battery voltage.

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 6.

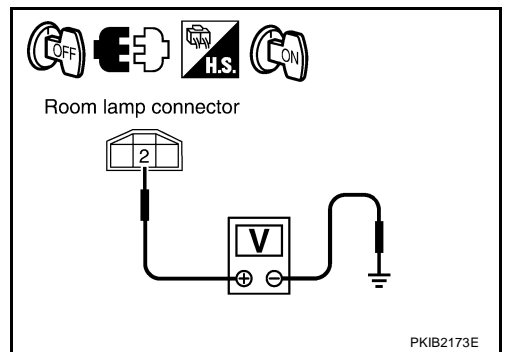


4. CHECK ROOM LAMP

Check continuity between room lamp terminals.

Terminal		Condition	Continuity
Room lamp			
1	2	Room lamp switch is DOOR	Yes
		Room lamp switch is OFF	No

OK or NG

- OK >> GO TO 5.
- NG >> Check bulb or replace room lamp.

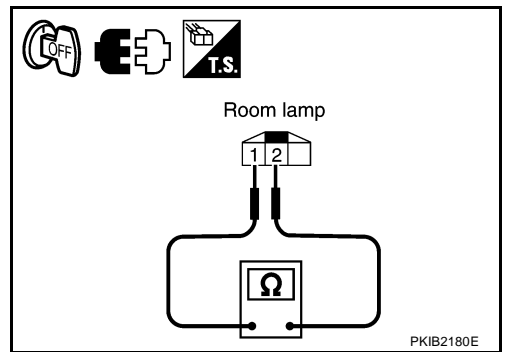


5. CHECK POWER SUPPLY CIRCUIT FOR ROOM LAMP

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M35 terminal 48 (R) and room lamp harness connector R9 terminal 1 (R).

48 (R) - 1 (R) : Continuity should exist.

OK or NG

- OK >> Replace BCM if room lamp does not work after setting the connector again. Refer to [BCS-16, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

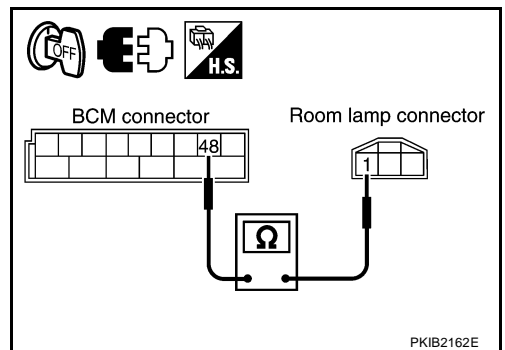

INTERIOR ROOM LAMP


6. CHECK GROUND CIRCUIT FOR ROOM LAMP

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M35 terminal 41 (P) and room lamp harness connector R9 terminal 2 (Y).

41 (P) - 2 (Y) : Continuity should exist.

OK or NG

- OK >> Replace BCM if room lamp does not work after setting the connector again. Refer to [BCS-16, "Removal and Installation of BCM"](#) .
- NG >> Repair harness or connector.

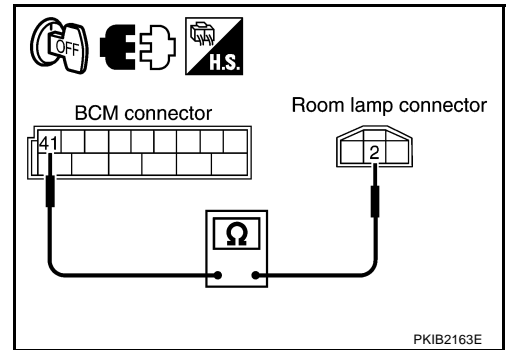

Personal Lamp Does Not Illuminate

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor to make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-199, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR			
MONITOR			
IGN ON SW		ON	
KEY ON SW		ON	
DOOR SW-DR		ON	
DOOR SW-AS		ON	
DOOR SW-RR		OFF	
DOOR SW-RL		OFF	
BACK DOOR SW		OFF	
KEY CYL LK-SW		OFF	
KEY CYL UN-SW		OFF	
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

PKIB3532E

2. CHECK WITH ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
2. When personal lamp switch is in "DOOR" position, use active test to make sure personal lamp operates.

OK or NG

- OK >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#) .
- NG >> GO TO 3.

ACTIVE TEST			
INT LAMP		ON	
		OFF	
MODE	BACK	LIGHT	COPY

PKIA6366E

INTERIOR ROOM LAMP


3. CHECK PERSONAL LAMP INPUT

1. Turn ignition switch OFF.
2. Disconnect personal lamp connectors.
3. Turn ignition switch ON.
4. Check voltage between personal lamp RH harness connector R10 terminal 1 (Y) and ground.

1 (Y) - Ground : Battery voltage.

5. Check voltage between personal lamp LH harness connector R8 terminal 1 (Y) and ground.

1 (Y) - Ground : Battery voltage.

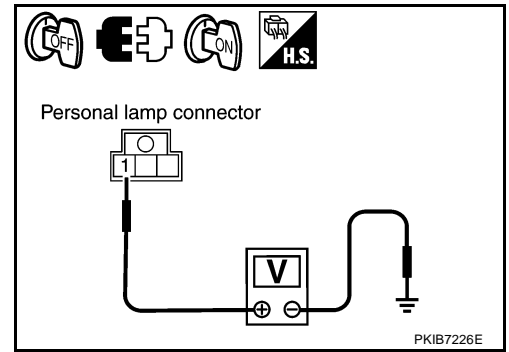

OK or NG

- OK >> GO TO 4.
NG >> GO TO 6.


4. CHECK PERSONAL LAMP

1. Disconnect personal lamp connector.
2. Check continuity between personal lamp terminals.

Terminal		Condition	Continuity
Personal lamp			
1	3	Personal lamp switch is DOOR	Yes
		Personal lamp switch is OFF	No

OK or NG

- OK >> GO TO 5.
NG >> Check bulb or replace personal lamp.

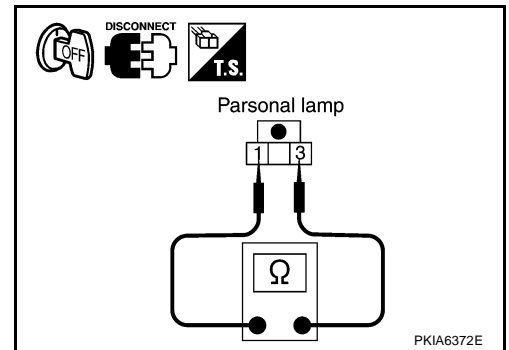


5. CHECK PERSONAL LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector M35 terminal 48 (R) and personal lamp RH harness connector R10 terminal 3 (R).

48 (R) - 3 (R) : Continuity should exist.

4. Check continuity between BCM harness connector M35 terminal 48 (R) and personal lamp LH harness connector R8 terminal 3 (R).

48 (R) - 3 (R) : Continuity should exist.

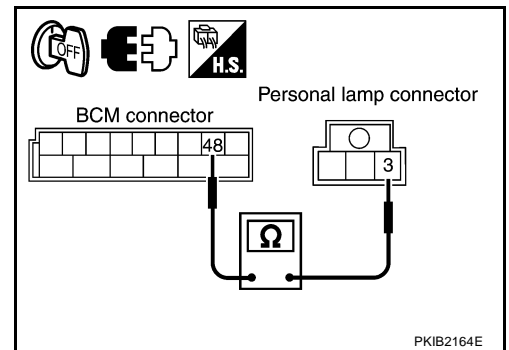

OK or NG

- OK >> Replace BCM if personal amp does not work after setting the connector again. Refer to [BCS-16, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

INTERIOR ROOM LAMP


6. CHECK PERSONAL LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector M35 terminal 41 (P) and personal lamp RH harness connector R10 terminal 1 (Y).

41 (P) - 1 (Y) : Continuity should exist.

4. Check continuity between BCM harness connector M35 terminal 41 (P) and personal lamp LH harness connector R8 terminal 1 (Y).

41 (P) - 1 (Y) : Continuity should exist.

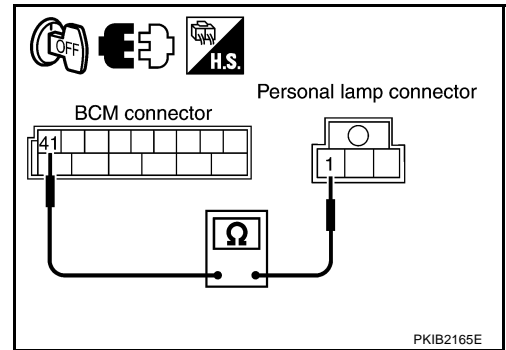

OK or NG

OK >> Replace BCM if personal lamp does not work after setting the connector again. Refer to [BCS-16, "Removal and Installation of BCM"](#).

NG >> Repair harness or connector.

Ignition Key Hole Illumination Does Not Illuminate

AKS00AML

1. CHECK BULB

Check bulb of lamp which does not operate.

OK or NG

OK >> GO TO 2.

NG >> Replace bulb.

2. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor to make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-199, "Display Item List"](#) for switches and their functions.

OK or NG

OK >> GO TO 3.

NG >> Inspect malfunctioning switch system.

DATA MONITOR			
MONITOR			
IGN ON SW	ON		
KEY ON SW	ON		
DOOR SW-DR	ON		
DOOR SW-AS	ON		
DOOR SW-RR	OFF		
DOOR SW-RL	OFF		
BACK DOOR SW	OFF		
KEY CYL LK-SW	OFF		
KEY CYL UN-SW	OFF		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

PKIB3532E

3. CHECK WITH ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
2. Select "IGN ILLUM" active test to make sure lamp operates.

OK or NG

OK >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).

NG >> GO TO 4.

ACTIVE TEST			
IGN ILLUM	ON		
		OFF	
MODE	BACK	LIGHT	COPY

PKIA6375E

INTERIOR ROOM LAMP


4. CHECK POWER SUPPLY TO IGNITION KEY HOLE ILLUMINATION

1. Turn ignition switch OFF.
2. Disconnect ignition key hole illumination connector.
3. Turn ignition switch ON.
4. Check voltage between ignition key hole illumination harness connector M40 terminal 1 (P) and ground.

1 (P) - Ground : Battery voltage.

OK or NG

- OK >> GO TO 6.
NG >> GO TO 5.

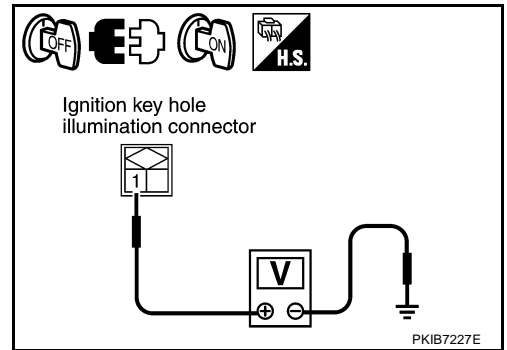


5. CHECK POWER SUPPLY CIRCUIT FOR IGNITION KEY HOLE ILLUMINATION

1. Turn ignition switch OFF.
2. Disconnect BCM connector and key hole illumination connector.
3. Check continuity between BCM harness connector M35 terminal 41 (P) and key hole illumination harness connector M40 terminal 1 (P).

41 (P) - 1 (P) : Continuity should exist.

OK or NG

- OK >> Replace BCM if ignition key hole illumination does not work after setting the connector again. Refer to [BCS-16, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

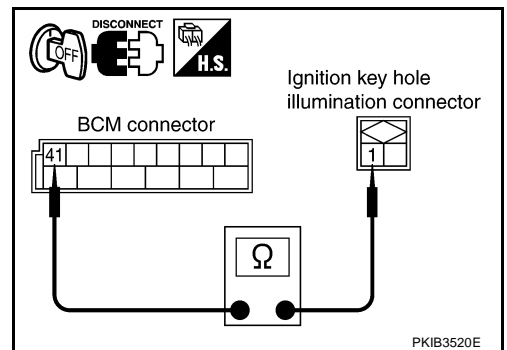


6. CHECK GROUND CIRCUIT FOR IGNITION KEY HOLE ILLUMINATION

1. Turn ignition switch OFF.
2. Disconnect BCM connector and key hole illumination connector.
3. Check continuity between BCM harness connector M34 terminal 1 (R/Y) and key hole illumination harness connector M40 terminal 2 (R/Y).

1 (R/Y) - 2 (R/Y) : Continuity should exist.

OK or NG

- OK >> Replace BCM if ignition key hole illumination does not work after setting the connector again. Refer to [BCS-16, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

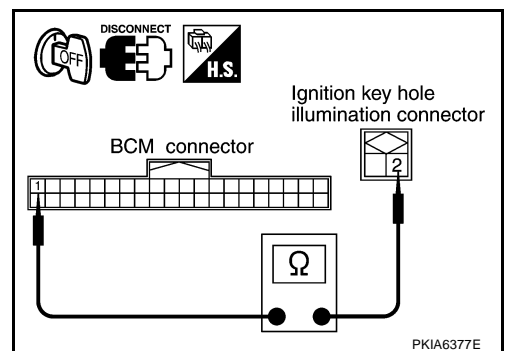

Step Lamp Does Not Illuminate

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor to make sure switches listed below turn ON-OFF linked with switch operation.

Switch name	CONSULT screen
Driver side door switch	DOOR SW - DR
Passenger side door switch	DOOR SW - AS

OK or NG

- OK >> GO TO 2.
NG >> Inspect malfunctioning switch system.

DATA MONITOR			
MONITOR			
IGN ON SW	ON		
KEY ON SW	ON		
DOOR SW-DR	ON		
DOOR SW-AS	ON		
DOOR SW-RR	OFF		
DOOR SW-RL	OFF		
BACK DOOR SW	OFF		
KEY CYL LK-SW	OFF		
KEY CYL UN-SW	OFF		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

PKIB3532E

INTERIOR ROOM LAMP

2. CHECK BULB

Check bulb of lamp which does not illuminate.

OK or NG

- OK >> GO TO 3.
- NG >> Replace bulb.

3. CHECK STEP LAMP INPUT

1. Turn ignition switch OFF.
2. Disconnect step lamp (driver side and passenger side) connectors.
3. Turn ignition switch ON.
4. Check voltage between step lamp (driver side) harness connector D9 terminal 1 (P) and ground.

1 (P) - Ground : Battery voltage.

5. Check voltage between step lamp (passenger side) harness connector D37 terminal 1 (P) and ground.

1 (P) - Ground : Battery voltage.

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.

4. CHECK GROUND CIRCUIT FOR STEP LAMP

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector M35 terminal 47 (R/W) and step lamp (driver side) harness connector D9 terminal 2 (R/W).



47 (R/W) - 2 (R/W) : Continuity should exist.

4. Check continuity between BCM harness connector M35 terminal 47 (R/W) and step lamp (passenger side) harness connector D37 terminal 2 (R/W).

47 (R/W) - 2 (R/W) : Continuity should exist.

OK or NG

- OK >> Replace BCM if step lamp does not work after setting the connector again. Refer to [BCS-16, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

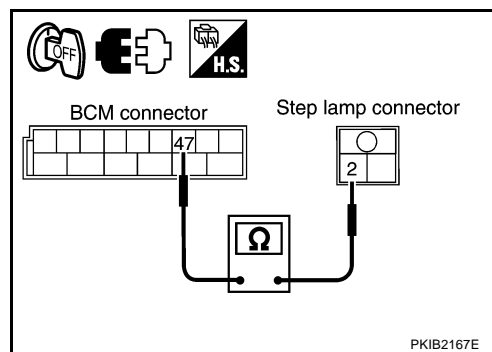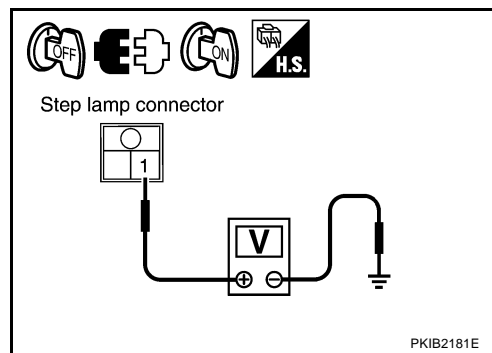

INTERIOR ROOM LAMP


5. CHECK STEP LAMP CIRCUIT

1. Disconnect BCM connector and step lamp connector.
2. Check continuity between BCM harness connector M35 terminal 41 (P) and step lamp (driver side) harness connector D9 terminal 1 (P).

41 (P) - 1 (P) : Continuity should exist.

3. Check continuity between BCM harness connector M35 terminal 41 (P) and step lamp (passenger side) harness connector D37 terminal 1 (P).

41 (P) - 1 (P) : Continuity should exist.

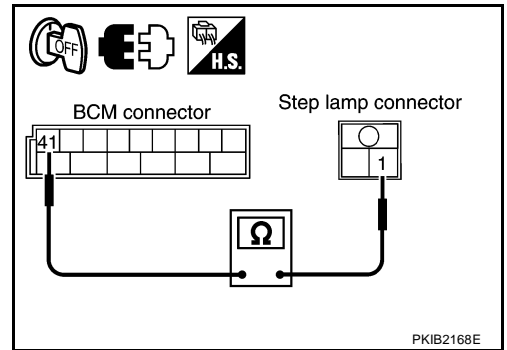

OK or NG

- OK >> Replace BCM if step lamp does not work after setting the connector again. Refer to [BCS-16, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

All Interior Room Lamp Does Not Operate


1. CHECK POWER SUPPLY CIRCUIT

1. All interior room lamps switch are OFF.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M35 terminal 41 (P) and ground.

41 (P) - Ground : Battery voltage

OK or NG

- OK >> Repair harness or connector. In a case of making a short circuit, be sure to disconnect battery negative cable after repairing harness, and then reconnect
- NG >> Replace BCM. Refer to [BCS-16, "Removal and Installation of BCM"](#).

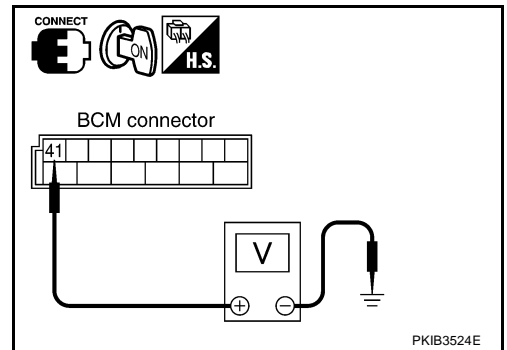


Bulb Replacement ROOM LAMP

1. Disconnect the battery negative cable.
2. Remove the lens using clip driver or suitable tool.
3. Remove the bulb.

Room lamp : 12V - 8W

4. Installation is the reverse order of removal.

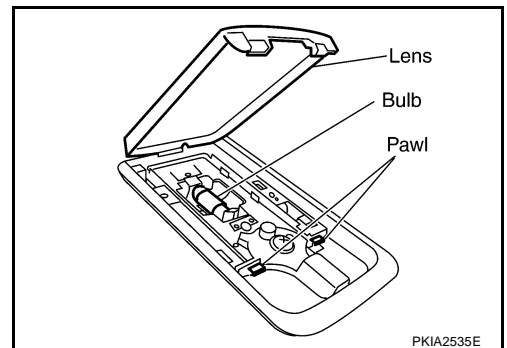

MAP LAMP

Refer to [LT-172, "Bulb Replacement"](#) in "MAP LAMP".

PERSONAL LAMP

Refer to [LT-173, "Bulb Replacement, Removal and Installation"](#) in "PERSONAL LAMP".

STEP LAMP

Refer to [LT-150, "Bulb Replacement"](#) in "STEP LAMP".

LUGGAGE ROOM LAMP


Refer to [LT-174, "Bulb Replacement, Removal and Installation"](#) in "LUGGAGE ROOM LAMP".

INTERIOR ROOM LAMP

AKS00AMP

Removal and Installation ROOM LAMP

1. Remove the lens using clip driver or suitable tool.
2. Using a clip driver or suitable tool and disengage the metal clip fittings of the room lamp.
3. Disconnect room lamp connector and remove the room lamp.

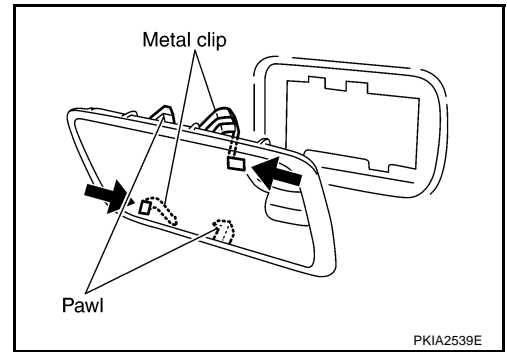

MAP LAMP

Refer to [LT-172, "Removal and Installation"](#) in "MAP LAMP".

PERSONAL LAMP

Refer to [LT-173, "Bulb Replacement, Removal and Installation"](#) in "PERSONAL LAMP".

STEP LAMP

Refer to [LT-150, "Removal and Installation"](#) in "STEP LAMP".

LUGGAGE ROOM LAMP


Refer to [LT-174, "Bulb Replacement, Removal and Installation"](#) in "LUGGAGE ROOM LAMP".

IGNITION KEY HOLE ILLUMINATION

Without intelligent key system

1. Remove the ignition key finisher. Refer to [IP-11, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Turn the bulb socket counterclockwise and unlock it.


Ignition key hole illumination : 12V - 0.8W

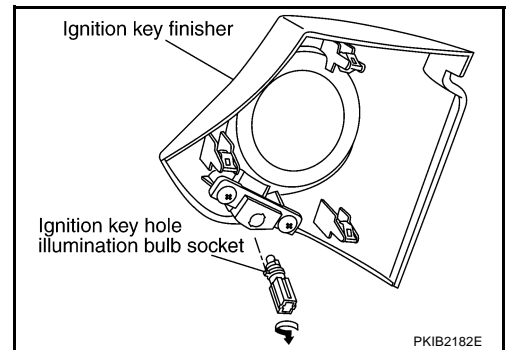

With intelligent key system

1. Remove the ignition key finisher. Refer to [IP-11, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Remove the steering lock escutcheon.
3. Turn the bulb socket counterclockwise and unlock it.

Ignition key hole illumination : 12V - 0.8W

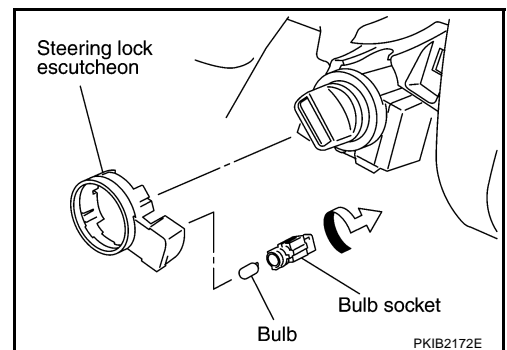

ILLUMINATION

PFP:27545

System Description

AKS004MG

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) located in the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the illumination lamps, which then illuminate.

Power is supplied at all times

- to ignition relay, located in IPDM E/R, from battery direct,
- through 10A fuse (No. 71, located in IPDM E/R)
- to tail lamp relay, located in IPDM E/R, and
- to CPU located in IPDM E/R,
- through 15A fuse (No. 78, located in IPDM E/R)
- to CPU located in IPDM E/R.
- through 50A fusible link (letter F, located in fuse and fusible link block)
- to BCM terminal 55,
- through 10A fuse [No. 18, located in fuse block (J/B)]
- to BCM terminal 42,
- through 10A fuse [No. 21, located in fuse block (J/B)]
- to combination meter terminal 21.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in IPDM E/R, from battery direct,
- through 10A fuse [No. 1, located in fuse block (J/B)]
- to BCM terminal 38,
- through 10A fuse [No. 14, located in fuse block (J/B)]
- to combination meter terminal 20.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal and 52
- through grounds E13, E26 and E28,
- to IPDM E/R terminals 38 and 60
- through grounds E13, E26 and E28,
- to combination meter 22, 23 and 24
- through grounds M14 and M78.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU located in the IPDM E/R controls the tail lamp relay coil, which, when energized, directs power

- through IPDM E/R terminal 22
- to CVT illumination terminal 1
- to VDC off switch (illumination) terminal 3 (with VDC)
- to headlamp aiming switch (illumination) terminal 3 (with headlamp aiming)
- to AWD lock switch (illumination) terminal 4 (AWD models)
- to heated seat switch (driver side) (illumination) terminal 5 (with heater seat)
- to heated seat switch (passenger side) (illumination) terminal 5 (with heater seat)
- to door mirror remote control switch (illumination) terminal 16

A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

- to NAVI control unit terminal 25 (with NAVI)
- to A/C and AV switch terminal 3
- to coin box illumination terminal 1, and
- to glove box lamp terminal 1.

Ground is supplied

- to CVT illumination terminal 2
- to VDC off switch (illumination) terminal 4 (with VDC)
- to headlamp aiming switch (illumination) terminal 4 (with headlamp aiming)
- to AWD lock switch (illumination) terminal 2 (AWD models)
- to heated seat switch (driver side) (illumination) terminal 6 (with heater seat)
- to heated seat switch (passenger side) (illumination) terminal 6 (with heater seat)
- to door mirror remote control switch (illumination) terminal 15
- to NAVI control unit terminal 30 (with navigation system), and
- to A/C and AV switch terminal 4
- through combination meter terminal 15,
- to coin box illumination terminal 2, and
- to glove box lamp terminal 2
- through grounds M14 and M78.

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position (or if auto light system is activated), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated. Under this condition, the illumination lamps remain illuminated for 5 minutes, and then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, and illumination lamps illuminate again.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

AKS004MH

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

AKS007QZ


Refer to [LAN-29, "CAN Communication Unit"](#) .

ILLUMINATION

Schematic

AKS004MJ

A
B
C
D
E
F
G
H
I
J
LT
L
M

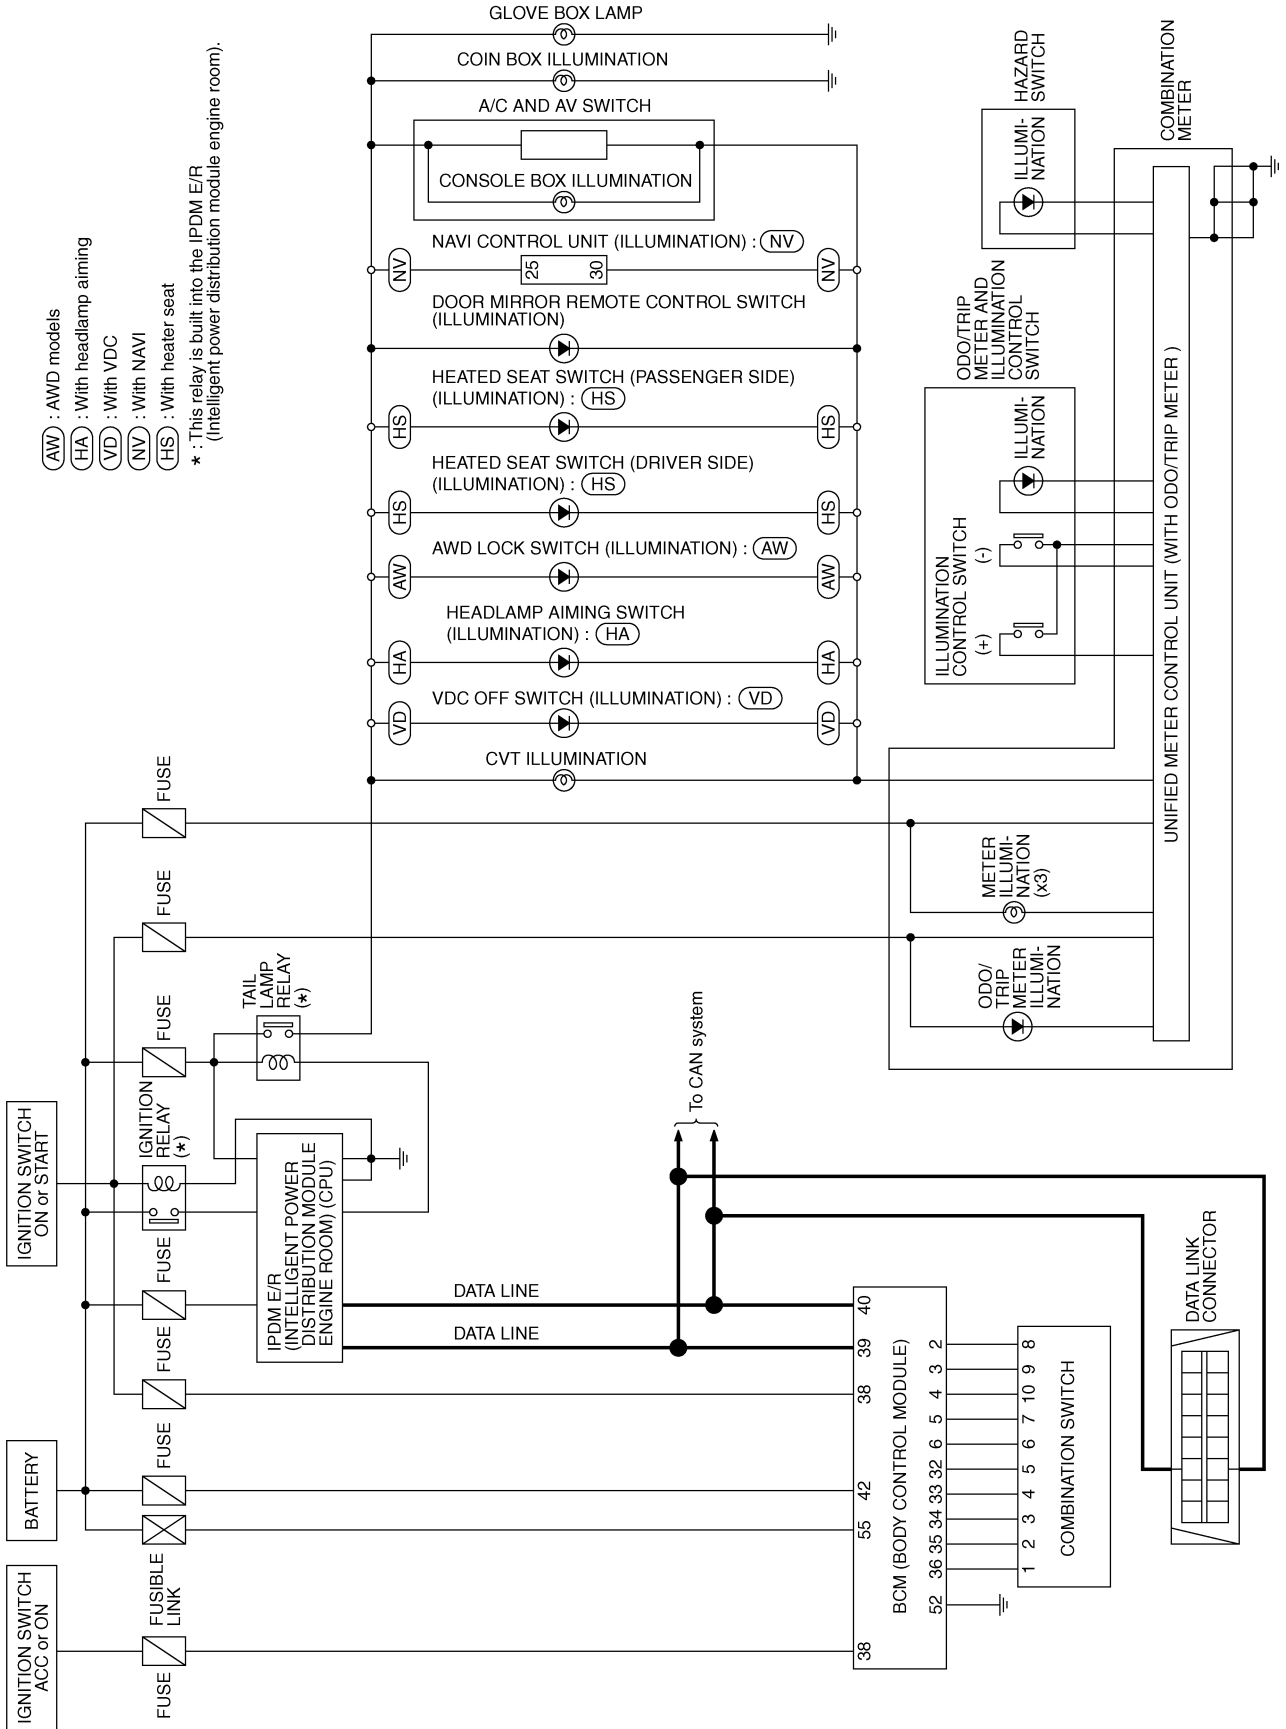





TKWB0476E

ILLUMINATION

AKS004MK

Wiring Diagram — ILL —

LT-ILL-01

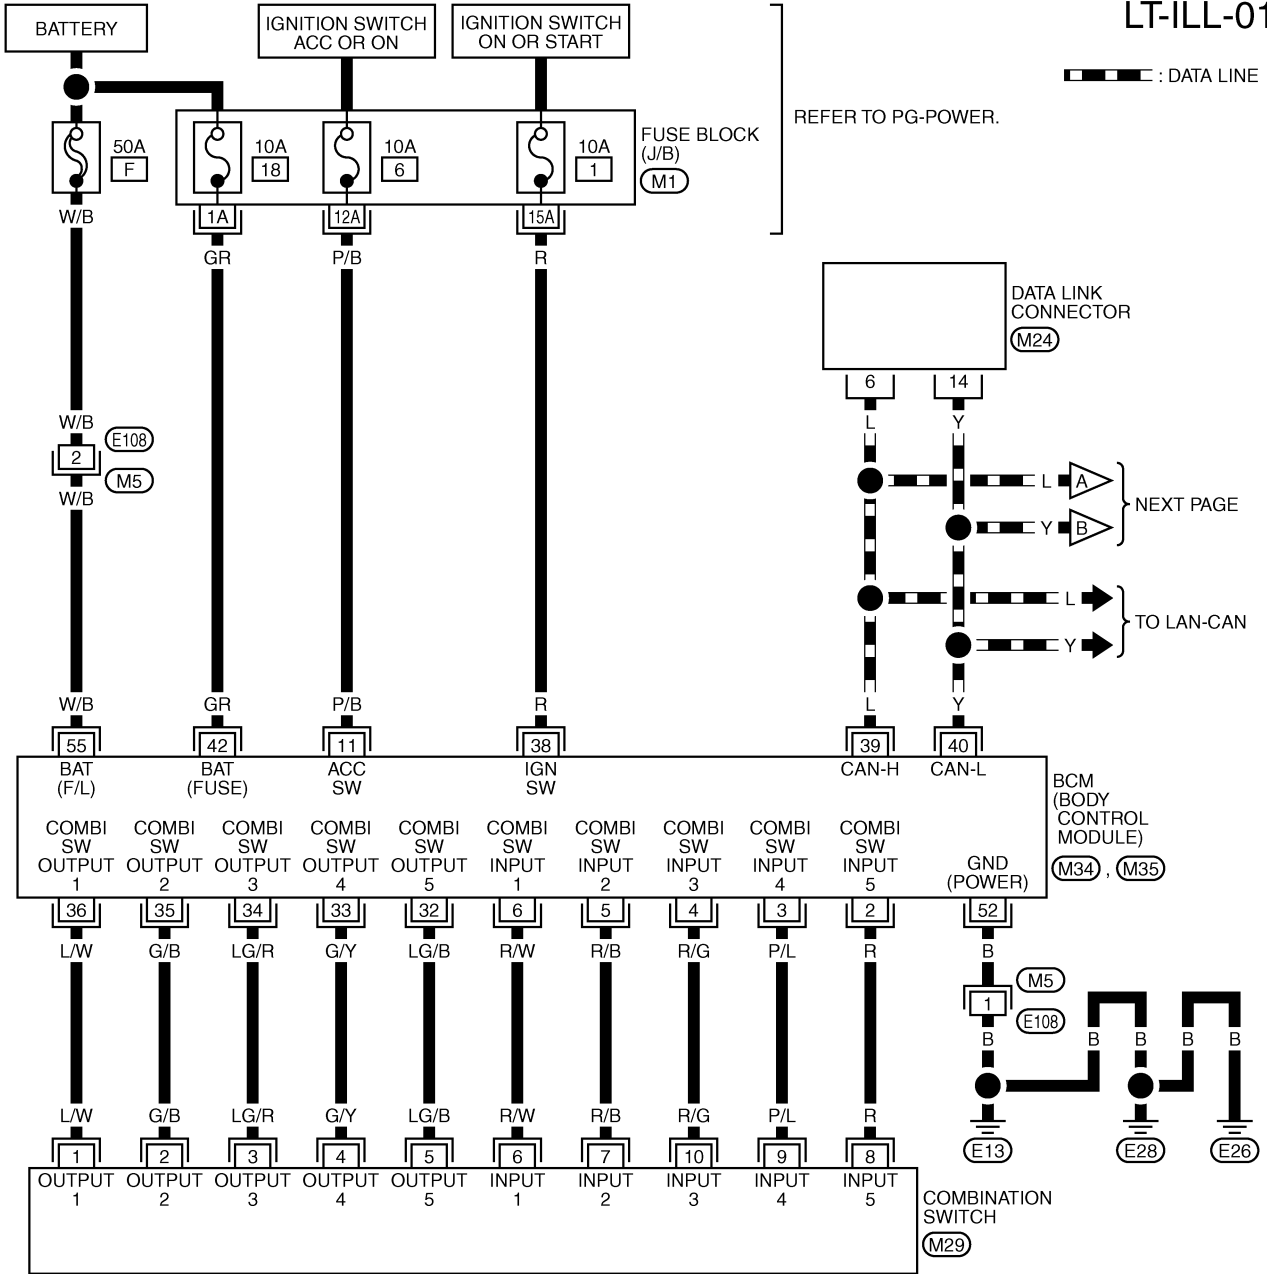

REFER TO THE FOLLOWING.



(M1) - FUSE BLOCK-JUNCTION BOX (J/B)

(M34), (M35) - ELECTRICAL UNITS

TKWB0477E

ILLUMINATION




LT-ILL-02

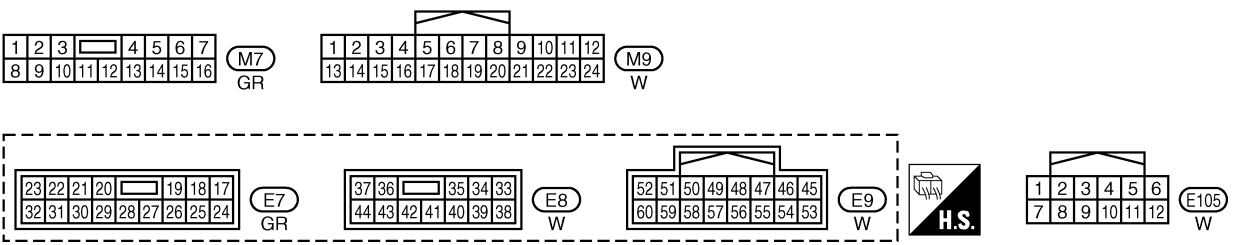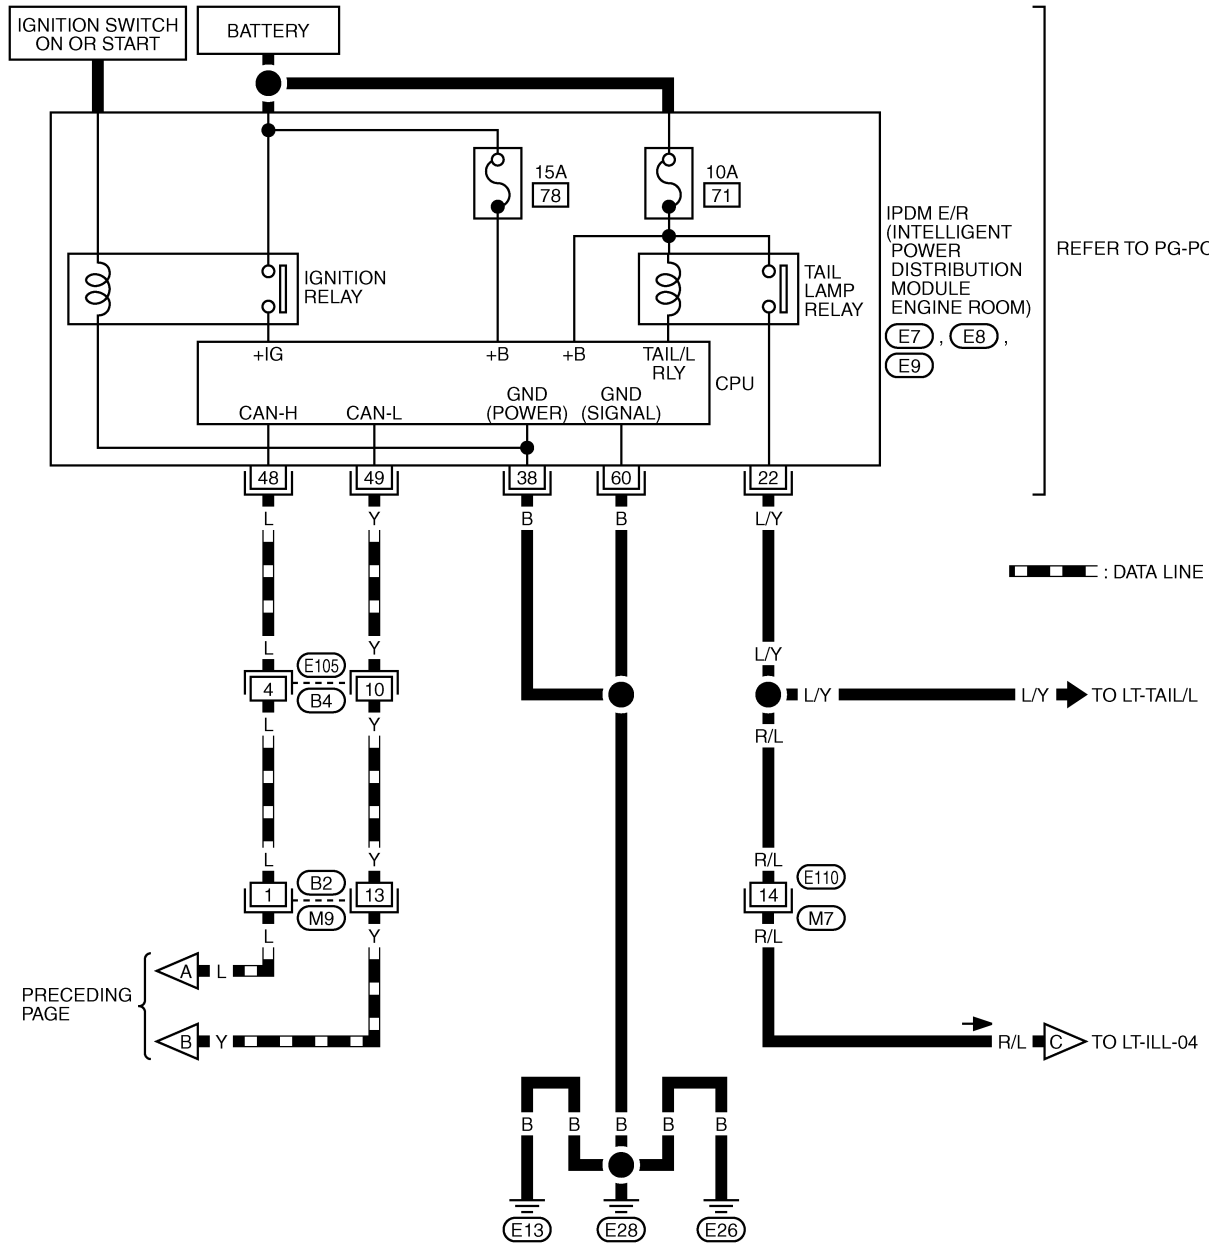

TKWB0478E

ILLUMINATION

LT-ILL-03

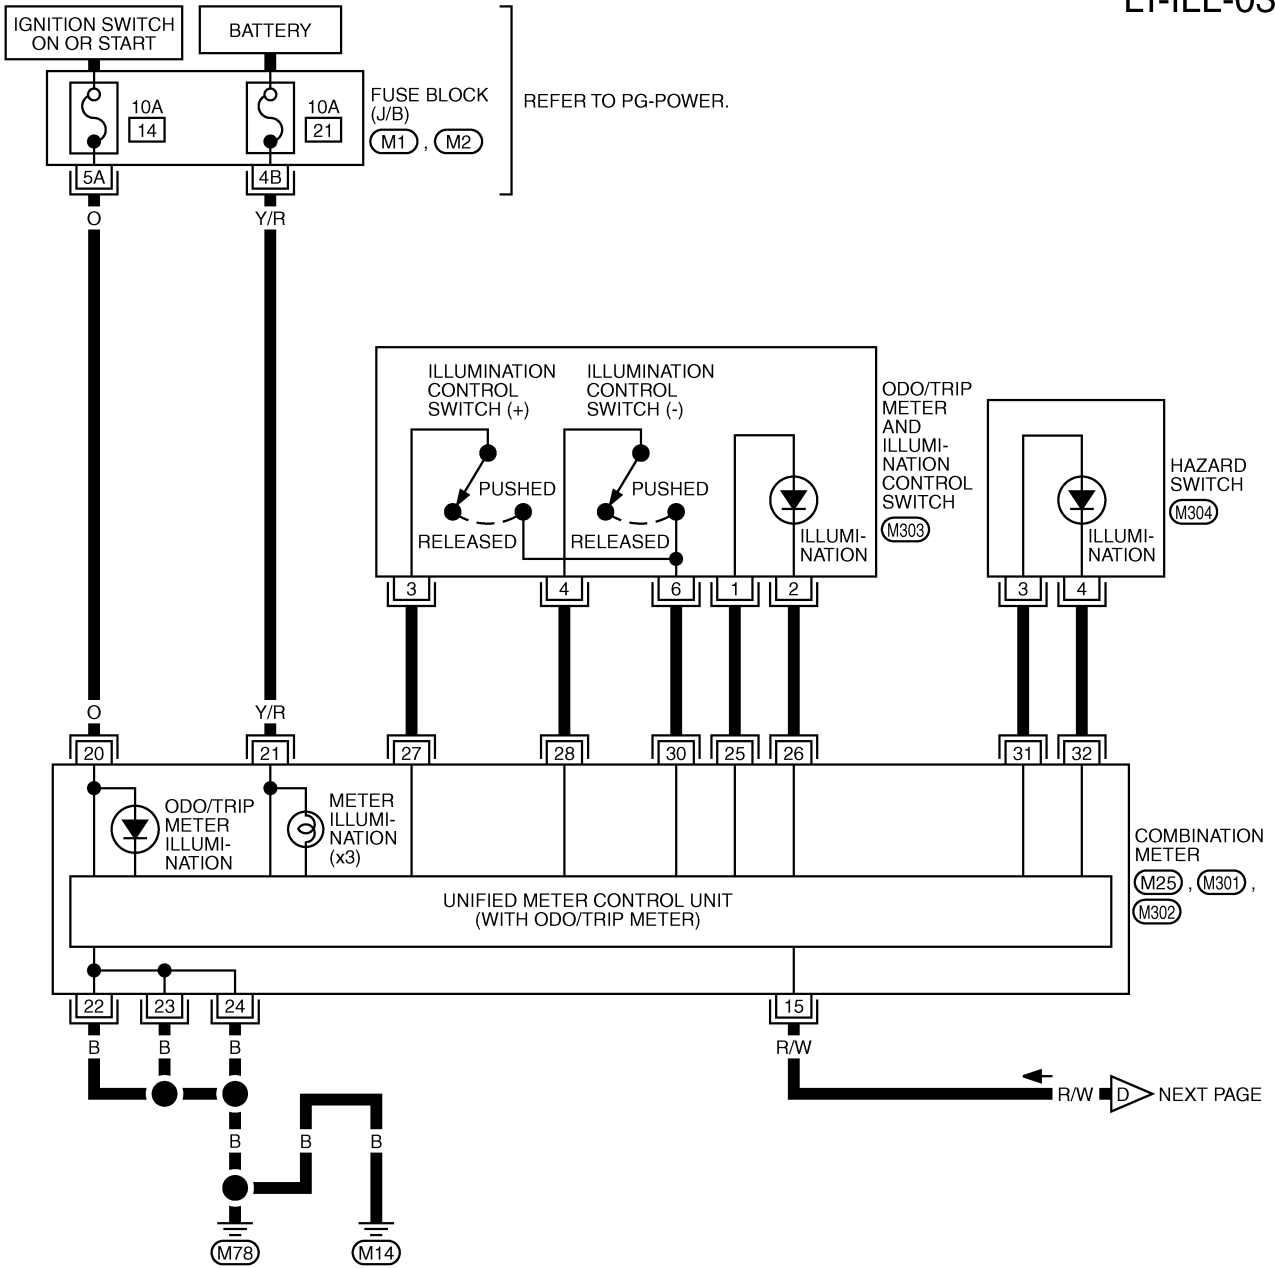

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.



REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)

TKWB0900E

ILLUMINATION

LT-ILL-04

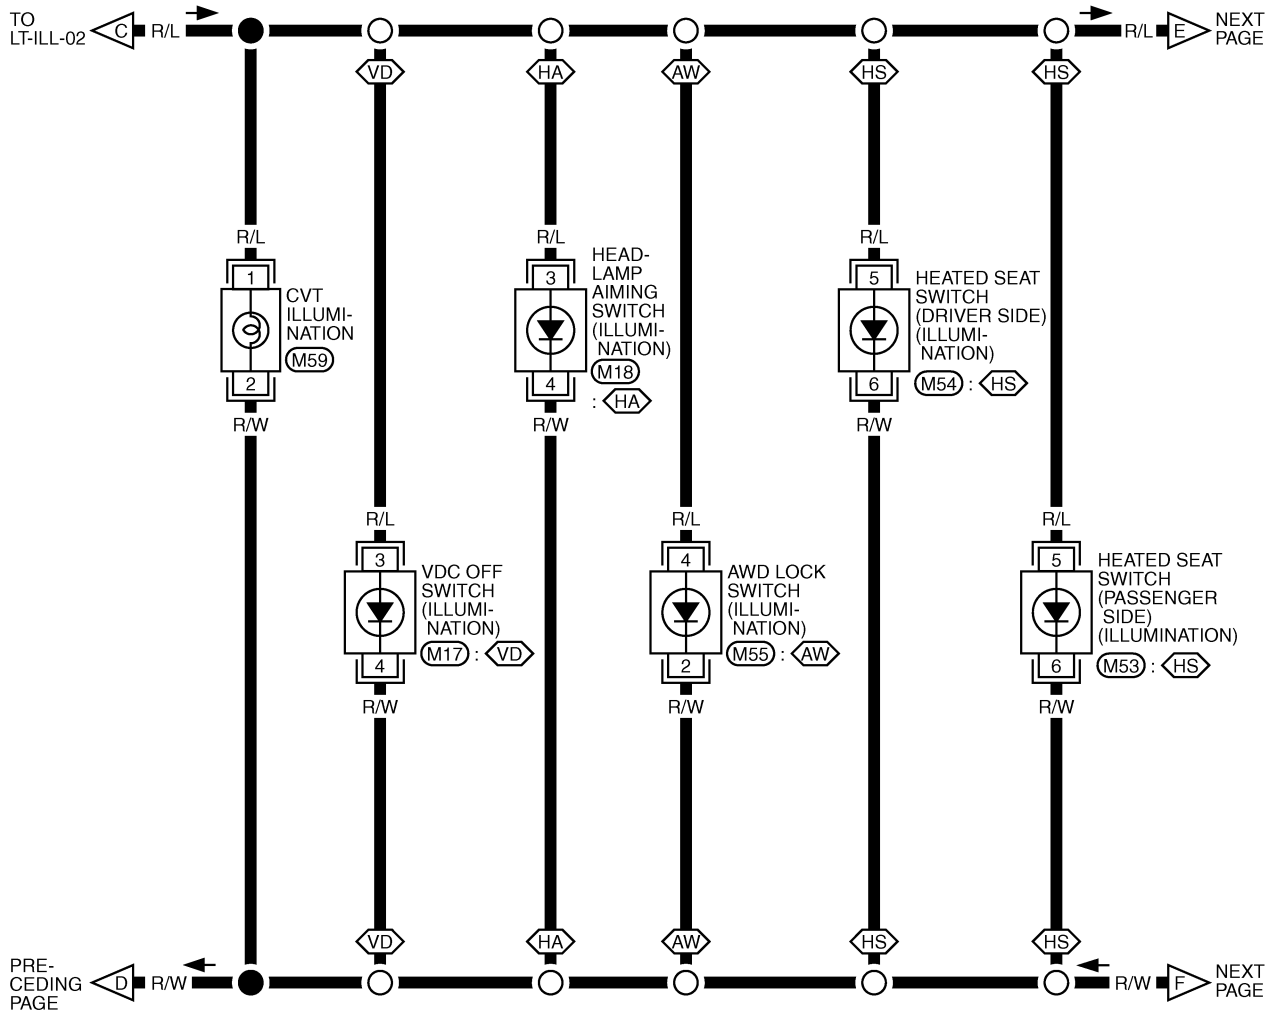


- : AWD MODELS
- : WITH HEADLAMP AIMING
- : WITH VDC
- : WITH HEATER SEAT








TKWA0924E

ILLUMINATION

LT-ILL-05

-  : WITH NAVI
-  : WITH MEMORY MIRROR
-  : WITHOUT MEMORY MIRROR

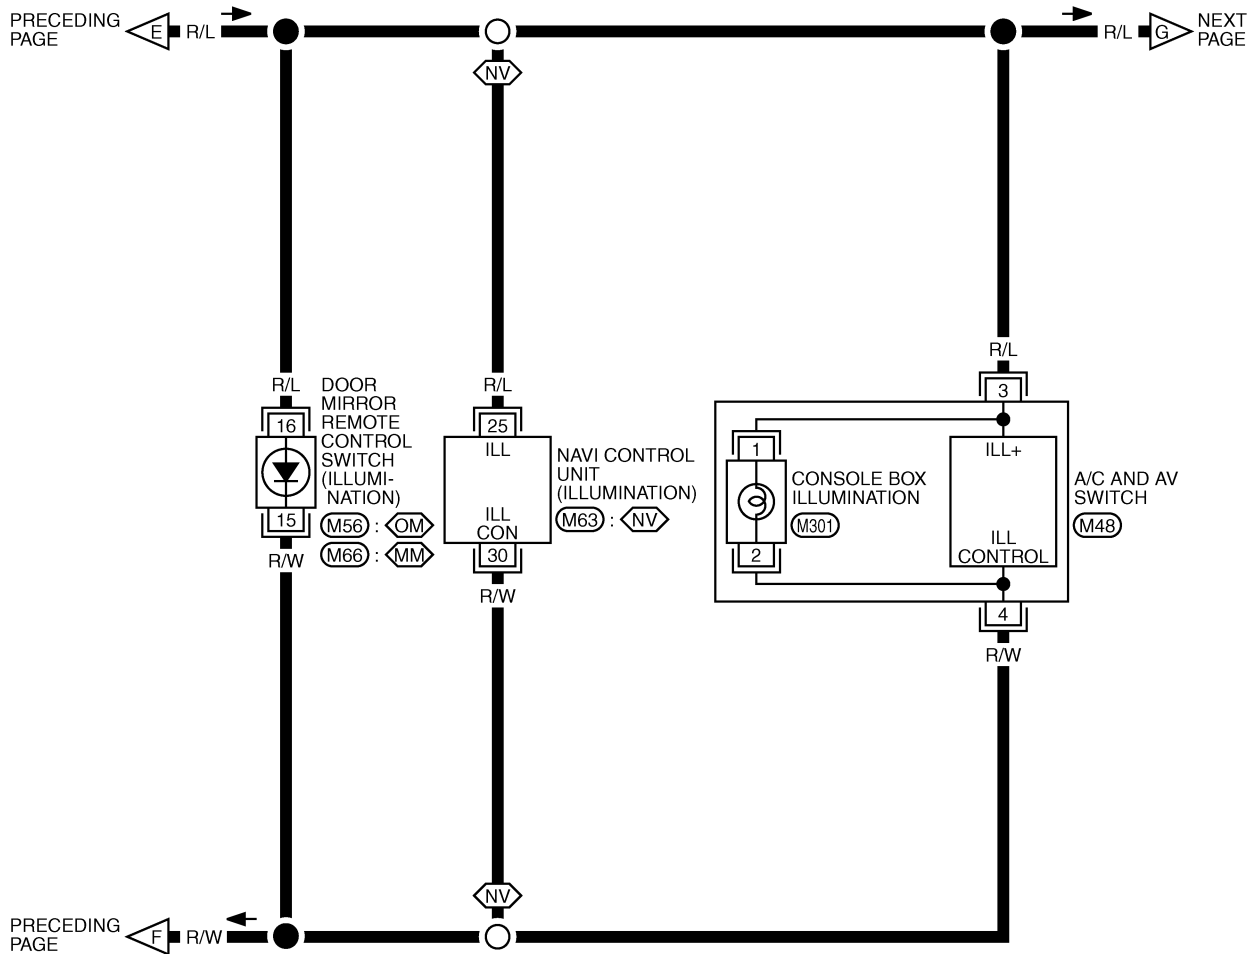


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWB0901E

ILLUMINATION

LT-ILL-06

A
B
C
D
E
F
G
H
I
J
LT
L
M

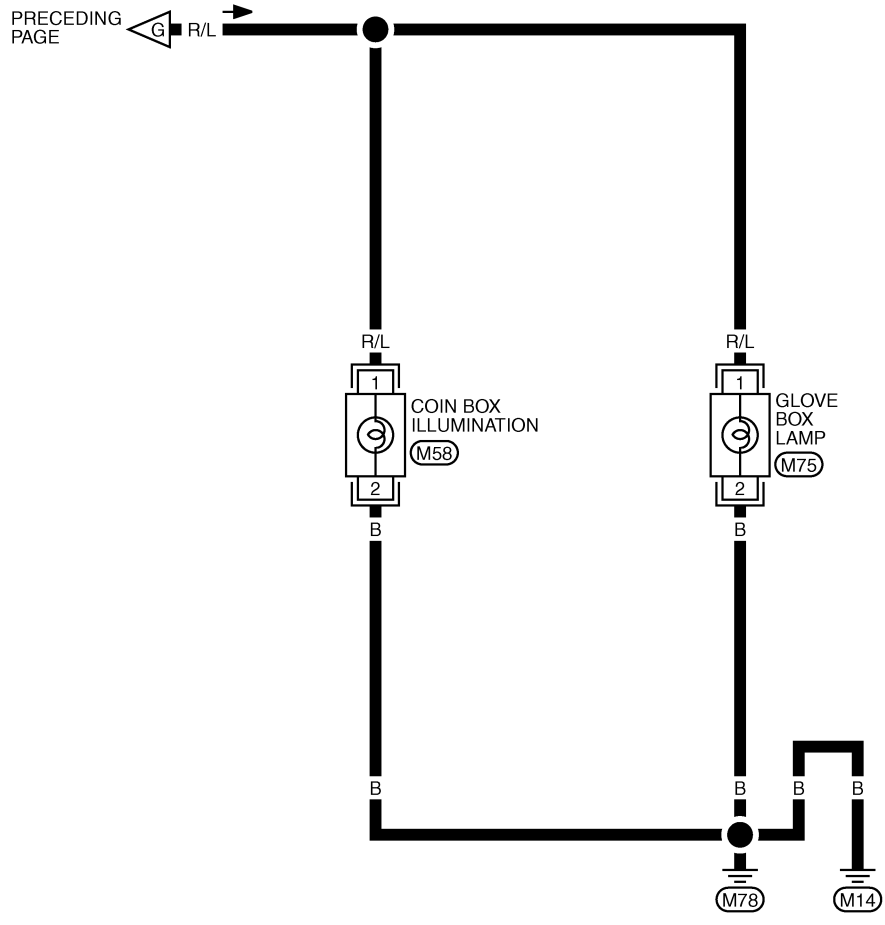


TKWB0479E

ILLUMINATION

AKS005MB

Removal and Installation ILLUMINATION CONTROL SWITCH


1. Remove the meter lid. Refer to [DI-26, "Disassembly and Assembly of Combination Meter"](#) in "DRIVER INFORMATION SYSTEM (DI)" section.
2. Remove the illumination control switch fixing screws and remove the unit from the meter lid.

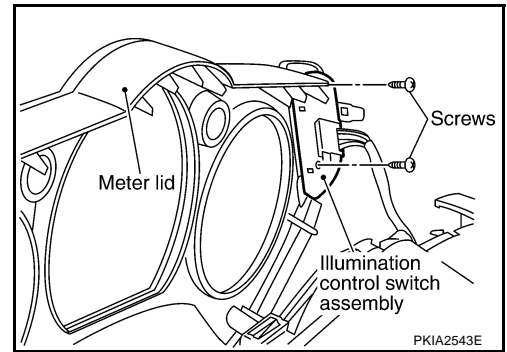

CONSOLE POCKET LAMP

1. Remove the instrument stay cover. Refer to [IP-11, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Turn the bulb socket counterclockwise and unlock it.


Console pocket lamp : 12V - 1.4W

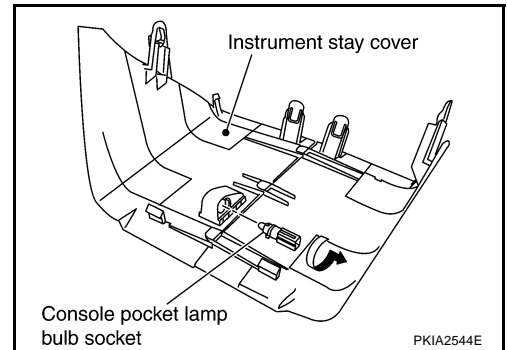

GLOVE BOX LAMP

1. Remove the instrument passenger lower panel. Refer to [IP-11, "Removal and Installation"](#) in "INSTRUMENT PANEL (IP)" section.
2. Turn the bulb socket counterclockwise and unlock it.


Glove box lamp : 12V - 1.4W

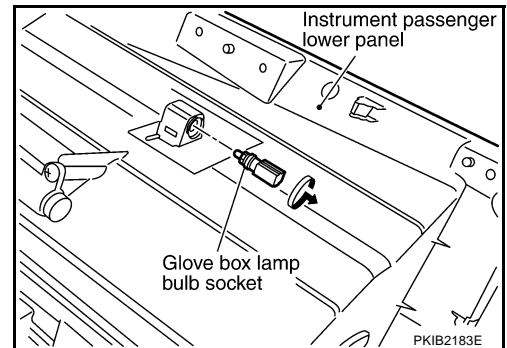

COIN BOX ILLUMINATION

1. Remove the A/T console finisher. Refer to [IP-17, "CENTER CONSOLE ASSEMBLY"](#) in "INSTRUMENT PANEL (IP)" section.
2. Turn the bulb socket counterclockwise and unlock it.

Coin box illumination : 12V - 1.4W

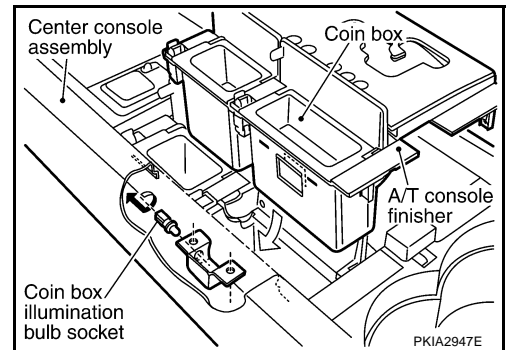

BULB SPECIFICATIONS

BULB SPECIFICATIONS

PFP:26297

Headlamp

AKS005ME

Item	Wattage (W)
High/Low (Halogen type)	65/55 (HB5)
High/Low (Xenon type)	35 (D2S)

Exterior Lamp

AKS005MF

Item	Wattage (W)	
Front combination lamp	Front turn signal lamp	21 (amber)
	Parking lamp	3.8
	Front side marker lamp	3.8
Rear combination lamp	Stop/Tail lamp	21/5
	Rear turn signal lamp	21
	Rear side marker lamp	5
Front fog lamp	51 (HB4)	
Back-up lamp	16	
License plate lamp	5	
High-mounted stop lamp (back door mount)	LED	

Interior Lamp/Illumination

AKS005MG

Item	Wattage (W)
Map lamp	8
Room lamp	8
Personal lamp	8
Luggage room lamp	8
Step lamp	2.7
Glove box lamp	1.4
Vanity mirror lamp	2
Ignition key hole illumination	0.8
Console pocket lamp	1.4
Coin box illumination	1.4

BULB SPECIFICATIONS
