

D

Е

# **CONTENTS**

THROTTLE VALVE CLOSED POSITION
LEARNING : Description18 THROTTLE VALVE CLOSED POSITION
LEARNING : Special Repair Requirement18
IDLE AIR VOLUME LEARNING18
IDLE AIR VOLUME LEARNING : Description18 IDLE AIR VOLUME LEARNING : Special Repair
Requirement18
MIXTURE RATIO SELF-LEARNING VALUE
CLEAR20
MIXTURE RATIO SELF-LEARNING VALUE
CLEAR : Description
MIXTURE RATIO SELF-LEARNING VALUE
CLEAR : Special Repair Requirement20
SYSTEM DESCRIPTION21
ENGINE CONTROL SYSTEM21
System Diagram21
System Description22
Component Parts Location22
Component Description27
MULTIPORT FUEL INJECTION SYSTEM29
System Diagram29
System Description29
Component Parts Location32
Component Description37
ELECTRIC IGNITION SYSTEM38
System Diagram38
System Description38
Component Parts Location
Component Description44
AIR CONDITIONING CUT CONTROL45
System Diagram45
System Description
Component Parts Location46

AUTOMATIC SPEED CONTROL DEVICE		U0164 CAN COMM CIRCUIT	138
(ASCD)	52	Description	
System Diagram		DTC Logic	138
System Description		Diagnosis Procedure	138
Component Parts Location	53	HARRA CAN COMM CIRCUIT	
Component Description	58	U1001 CAN COMM CIRCUIT	
CAN COMMUNICATION	50	Description	
CAN COMMUNICATION		DTC Logic  Diagnosis Procedure	
System Description	59	_	
COOLING FAN CONTROL	60	P0011, P0021 IVT CONTROL	140
System Diagram	60	DTC Logic	
System Description		Diagnosis Procedure	
Component Parts Location		Component Inspection	142
Component Description	67	P0031, P0032, P0051, P0052 A/F SEN	NSOR 1
ELECTRONIC CONTROLLED ENGINE		HEATER	
MOUNT	68	Description	
System Diagram		DTC Logic	
System Description		Diagnosis Procedure	
Component Parts Location		Component Inspection	
Component Description		·	
		P0037, P0038, P0057, P0058 HO2S2	
EVAPORATIVE EMISSION SYSTEM		ER	
System Diagram		Description	
System Description  Component Parts Location		DTC Logic  Diagnosis Procedure	
Component Description		Component Inspection	
·		·	
INTAKE VALVE TIMING CONTROL	87	P0075, P0081 IVT CONTROL SOLEN	IOID
System Diagram		VALVE	150
System Description		Description	
Component Parts Location		DTC Logic	
Component Description	93	Diagnosis Procedure	
VARIABLE INDUCTION AIR SYSTEM	94	Component Inspection	151
System Diagram		P0101 MAF SENSOR	153
System Description		Description	153
Component Parts Location	96	DTC Logic	
Component Description	101	Component Function Check	154
ON BOARD DIAGNOSTIC (ORD) SYSTEM	402	Diagnosis Procedure	
ON BOARD DIAGNOSTIC (OBD) SYSTEM Diagnosis Description		Component Inspection	156
CONSULT-III Function		P0102, P0103 MAF SENSOR	150
Diagnosis Tool Function		Description	
•		DTC Logic	
DTC/CIRCUIT DIAGNOSIS	126	Diagnosis Procedure	
TROUBLE DIAGNOSIS - SPECIFICATION		Component Inspection	
VALUE	426	D0440 D0440 LAT OFNOOD	
		P0112, P0113 IAT SENSOR	
Description  Component Function Check		Description	
Diagnosis Procedure		DTC Logic	
•		Diagnosis Procedure  Component Inspection	
POWER SUPPLY AND GROUND CIRCUIT	134	Component inspection	105
Diagnosis Procedure	134	P0116 ECT SENSOR	167
U0101 CAN COMM CIRCUIT	127	Description	
Description		DTC Logic	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure		Component Inspection	168

DOLLA DOLLA FOT CENCOD	400	Component Function Check	200
P0117, P0118 ECT SENSOR		Component Function Check  Diagnosis Procedure	
Description			
DTC Logic		Component Inspection	212
Diagnosis Procedure		P0139, P0159 HO2S2	215
Component Inspection	170	Description	
DO422 DO422 TD SENSOD	470		
P0122, P0123 TP SENSOR		DTC Logic	
Description		Component Function Check	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure		Component Inspection	219
Component Inspection		P0171, P0174 FUEL INJECTION SYST	'=NЛ
Special Repair Requirement	174		
D0405 FOT OFNOOD		FUNCTION	
P0125 ECT SENSOR		DTC Logic	
Description		Diagnosis Procedure	223
DTC Logic		DO470 DO475 FUEL IN IECTION CVCT	
Diagnosis Procedure	176	P0172, P0175 FUEL INJECTION SYST	
Component Inspection	176	FUNCTION	
2040-14-7-0-1-20-		DTC Logic	
P0127 IAT SENSOR		Diagnosis Procedure	227
Description		DOLOG ETT OFNICOS	
DTC Logic	178	P0181 FTT SENSOR	
Diagnosis Procedure		Description	
Component Inspection	179	DTC Logic	230
		Diagnosis Procedure	231
P0128 THERMOSTAT FUNCTION	180	Component Inspection	232
DTC Logic	180		
Diagnosis Procedure	181	P0182, P0183 FTT SENSOR	
Component Inspection		Description	233
·		DTC Logic	233
P0130, P0150 A/F SENSOR 1	182	Diagnosis Procedure	233
Description	182	Component Inspection	234
DTC Logic	182	·	
Component Function Check		P0196 EOT SENSOR	236
Diagnosis Procedure		Description	236
-		DTC Logic	236
P0131, P0151 A/F SENSOR 1	186	Diagnosis Procedure	
Description	186	Component Inspection	
DTC Logic		·	
Diagnosis Procedure		P0197, P0198 EOT SENSOR	239
		Description	239
P0132, P0152 A/F SENSOR 1	190	DTC Logic	
Description		Diagnosis Procedure	
DTC Logic		Component Inspection	
Diagnosis Procedure			
		P0222, P0223 TP SENSOR	242
P0133, P0153 A/F SENSOR 1	194	Description	
Description		DTC Logic	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure		Component Inspection	
g		Special Repair Requirement	
P0137, P0157 HO2S2	199	opoolal Nopall Nequilement	
Description		P0300, P0301, P0302, P0303, P0304, F	<sup>2</sup> 0305.
DTC Logic		P0306 MISFIRE	
Component Function Check			
Diagnosis Procedure		DTC Logic	
		Diagnosis Procedure	246
Component Inspection	203	P0327, P0328, P0332, P0333 KS	251
P0138, P0158 HO2S2	206		
Description		Description	
•		DTC Logic	
DTC Logic	206	Diagnosis Procedure	251

Component Inspection	252	DTC Logic	
DOOGE OVER OFFICER (DOO)		Diagnosis Procedure	294
P0335 CKP SENSOR (POS)		Component Inspection	296
Description		D0450 EV4D 0041TD01 0V0TEM DD50	
DTC Logic		P0452 EVAP CONTROL SYSTEM PRES-	
Diagnosis Procedure		SURE SENSOR	
Component Inspection	257	Description	
P0340, P0345 CMP SENSOR (PHASE)	259	DTC Logic	
Description		Diagnosis Procedure	
DTC Logic		Component Inspection	300
Diagnosis Procedure		P0453 EVAP CONTROL SYSTEM PRES-	
Component Inspection		SURE SENSOR	202
Component inspection	200		
P0420, P0430 THREE WAY CATALYST		Description	
FUNCTION	262	DTC Logic	
DTC Logic		Diagnosis Procedure	
Component Function Check		Component Inspection	306
Diagnosis Procedure		P0455 EVAP CONTROL SYSTEM	308
		DTC Logic	
P0441 EVAP CONTROL SYSTEM		Diagnosis Procedure	
DTC Logic		Component Inspection	
Component Function Check	268	·	
Diagnosis Procedure	269	P0456 EVAP CONTROL SYSTEM	314
DOAAO EVAD CONTDOL EVETEM	070	DTC Logic	
P0442 EVAP CONTROL SYSTEM		Component Function Check	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure		Component Inspection	320
Component Inspection	277	DO 400 FUEL LEVEL OFNOOD	
P0443 EVAP CANISTER PURGE VOLUME	=	P0460 FUEL LEVEL SENSOR	
CONTROL SOLENOID VALVE		Description	
Description		DTC Logic	
DTC Logic		Diagnosis Procedure	321
Diagnosis Procedure		P0461 FUEL LEVEL SENSOR	323
Component Inspection		Description	
Component inspection	202	DTC Logic	
P0444, P0445 EVAP CANISTER PURGE		Component Function Check	
VOLUME CONTROL SOLENOID VALVE	283	Diagnosis Procedure	
Description	283	210911001011100000010111111111111111111	02 .
DTC Logic	283	P0462, P0463 FUEL LEVEL SENSOR	325
Diagnosis Procedure	283	Description	325
Component Inspection	285	DTC Logic	
		Diagnosis Procedure	325
P0447 EVAP CANISTER VENT CONTROL		B0500 VCC	
VALVE		P0500 VSS	
Description		Description	
DTC Logic		DTC Logic	
Diagnosis Procedure		Component Function Check	
Component Inspection	288	Diagnosis Procedure	328
P0448 EVAP CANISTER VENT CONTROL		P0506 ISC SYSTEM	329
		Description	
VALVE		DTC Logic	
Description		Diagnosis Procedure	
DTC Logic		Diagnoolo i roocadio	523
Diagnosis Procedure		P0507 ISC SYSTEM	331
Component Inspection	292	Description	331
P0451 EVAP CONTROL SYSTEM PRES-		DTC Logic	
SURE SENSOR	204	Diagnosis Procedure	
Description	294	-	

P050E COLD START CONTROL333	Description	359
Description	DTC Logic	359
DTC Logic	Diagnosis Procedure	359
Diagnosis Procedure334	Component Inspection	360
P0550 PSP SENSOR335	P1551, P1552 BATTERY CURRENT SEN-	
Description	SOR	362
DTC Logic	Description	
Diagnosis Procedure	DTC Logic	
Component Inspection	Diagnosis Procedure	
Component inopedual	Component Inspection	
P0603 ECM POWER SUPPLY338	·	
Description	P1553 BATTERY CURRENT SENSOR	365
DTC Logic	Description	365
Diagnosis Procedure338	DTC Logic	365
	Diagnosis Procedure	365
P0605 ECM340	Component Inspection	366
Description340	·	
DTC Logic340	P1554 BATTERY CURRENT SENSOR	
Diagnosis Procedure341	Description	
P0607 ECM342	DTC Logic	
	Component Function Check	
Description	Diagnosis Procedure	
DTC Logic	Component Inspection	370
Diagnosis Procedure342	P1564 ASCD STEERING SWITCH	274
P0643 SENSOR POWER SUPPLY343		
DTC Logic	Description	
Diagnosis Procedure	DTC Logic	
Diagnosis Procedure343	Diagnosis Procedure	
P0850 PNP SWITCH346	Component Inspection	373
Description346	P1572 ASCD BRAKE SWITCH	27/
DTC Logic	Description	
Component Function Check		
Diagnosis Procedure347	DTC Logic	
	Diagnosis Procedure	
P1148, P1168 CLOSED LOOP CONTROL349	Component Inspection (ASCD Brake Switch)	
DTC Logic	Component Inspection (Stop Lamp Switch)	378
P1212 TCS COMMUNICATION LINE350	P1574 ASCD VEHICLE SPEED SENSOR	380
	Description	380
Description	DTC Logic	380
DTC Logic	Diagnosis Procedure	
Diagnosis Procedure350		
P1217 ENGINE OVER TEMPERATURE351	P1700 CVT CONTROL SYSTEM	
DTC Logic	Description	382
Component Function Check	D1715 INDIT COEED CENCOD (DDIMADV	
Diagnosis Procedure352	P1715 INPUT SPEED SENSOR (PRIMARY	200
Diagnosis i roccatio	SPEED SENSOR)	
P1225 TP SENSOR355	Description	
Description355	DTC Logic	
DTC Logic	Diagnosis Procedure	383
Diagnosis Procedure	P1720 VSS	205
Special Repair Requirement		
	Description	
P1226 TP SENSOR357	DTC Logic	
Description357	Diagnosis Procedure	385
DTC Logic	P1800 VIAS CONTROL SOLENOID VALVE	1 327
Diagnosis Procedure357		
Special Repair Requirement	Description	
	DTC Logic	
P1550 BATTERY CURRENT SENSOR359	Diagnosis Procedure	387

Component Inspection	388	Special Repair Requirement	416
P1801 VIAS CONTROL SOLENOID VALVE 2	390	P2138 APP SENSOR	417
Description	390	Description	417
DTC Logic		DTC Logic	
Diagnosis Procedure	390	Diagnosis Procedure	418
Component Inspection	391	Component Inspection	420
P1805 BRAKE SWITCH	202	Special Repair Requirement	420
Description		P2A00, P2A03 A/F SENSOR 1	424
•		Description	
DTC Logic			
Diagnosis Procedure		DTC Logic  Diagnosis Procedure	
		•	
P2100, P2103 THROTTLE CONTROL MO- TOR RELAY	206	ASCD BRAKE SWITCH  Description	
		Component Function Check	
Description		Diagnosis Procedure	
DTC Logic		Component Inspection (ASCD Brake Switch)	
Diagnosis Procedure	396		
P2101 ELECTRIC THROTTLE CONTROL		ASCD INDICATOR	
FUNCTION	398	Description	
Description	398	Component Function Check	
DTC Logic	398	Diagnosis Procedure	427
Diagnosis Procedure		COOLING FAN	400
Component Inspection	100		
Special Repair Requirement	101	Description	
DOLLO TUDOTTI E CONTROL MOTOR		Component Function Check	
P2118 THROTTLE CONTROL MOTOR		Diagnosis Procedure	
Description		Component Inspection (Cooling Fan Motor)	
DTC Logic		Component Inspection (Cooling Fan Relay)	432
Diagnosis Procedure		ELECTRICAL LOAD SIGNAL	433
Component Inspection		Description	
Special Repair Requirement	103	Component Function Check	
P2119 ELECTRIC THROTTLE CONTROL		Diagnosis Procedure	
ACTUATOR	105		
Description		ELECTRONIC CONTROLLED ENGINE	
DTC Logic		MOUNT	435
Diagnosis Procedure		Description	
Special Repair Requirement		Component Function Check	
		Diagnosis Procedure	
P2122, P2123 APP SENSOR	107	Component Inspection	436
Description		FUEL INJECTOR	120
DTC Logic		Description	
Diagnosis Procedure		Component Function Check	
Component Inspection		Diagnosis Procedure	
Special Repair Requirement	109	Component Inspection	
P2127, P2128 APP SENSOR	110	·	
Description		FUEL PUMP	
DTC Logic		Description	
Diagnosis Procedure		Component Function Check	
Component Inspection		Diagnosis Procedure	
Special Repair Requirement		Component Inspection (Fuel Pump)	
		Component Inspection (Condenser)	444
P2135 TP SENSOR		IGNITION SIGNAL	445
Description		Description	
DTC Logic		Component Function Check	
Diagnosis Procedure		Diagnosis Procedure	
Component Inspection	+10	<del>-</del>	_


Component Inspection (Ignition Coil with Power	FOR USA AND CANADA519
Transistor)448	FOR USA AND CANADA: Precaution for Supple-
Component Inspection (Condenser)449	mental Restraint System (SRS) "AIR BAG" and
MALFUNCTION INDICATOR LAMP450	"SEAT BELT PRE-TENSIONER"519
Description450	FOR USA AND CANADA: Precautions For Xenon
Component Function Check	Headlamp Service519
Diagnosis Procedure450	FOR USA AND CANADA : Precaution for Proce-
Diagnosis i roccaire400	dure without Cowl Top Cover520
ON BOARD REFUELING VAPOR RECOV-	FOR USA AND CANADA : On Board Diagnostic
ERY (ORVR)451	(OBD) System of Engine and CVT520 FOR USA AND CANADA: General Precautions520
Description451	FOR USA AND CANADA. General Precautions520
Component Function Check451	FOR MEXICO523
Diagnosis Procedure451	FOR MEXICO: Precaution for Supplemental Re-
Component Inspection454	straint System (SRS) "AIR BAG" and "SEAT BELT
DOCITIVE OD ANIZOACE VENTU ATION	PRE-TENSIONER"523
POSITIVE CRANKCASE VENTILATION456	FOR MEXICO: Precautions For Xenon Headlamp
Description	Service523
Component Inspection456	FOR MEXICO: Precaution for Procedure without
REFRIGERANT PRESSURE SENSOR457	Cowl Top Cover524
Description457	FOR MEXICO: On Board Diagnostic (OBD) Sys-
Component Function Check	tem of Engine and CVT524
Diagnosis Procedure457	FOR MEXICO : General Precautions524
	DDEDADATION
VARIABLE INDUCTION AIR SYSTEM460	PREPARATION528
Description460	PREPARATION528
Component Function Check460	Special Service Tools528
Diagnosis Procedure461	Commercial Service Tools
ECU DIAGNOSIS INFORMATION464	PERIODIC MAINTENANCE530
ECM464	
Reference Value	FUEL PRESSURE530
Wiring Diagram—ENGINE CONTROL SYS-	Inspection530
TEM—	EVAP LEAK CHECK532
Fail-safe	
DTC Inspection Priority Chart496	Inspection532
DTC Index	REMOVAL AND INSTALLATION534
How to Set SRT Code501	
How to Erase Permanent DTC503	<b>EVAP CANISTER</b> 534
Test Value and Test Limit507	Exploded View534
	Removal and Installation534
SYMPTOM DIAGNOSIS514	Inspection535
ENGINE CONTROL SYSTEM SYMPTOMS	SEDVICE DATA AND SDECIFICATIONS
ENGINE CONTROL SYSTEM SYMPTOMS514	SERVICE DATA AND SPECIFICATIONS
Symptom Table514	(SDS) 536
NORMAL OPERATING CONDITION518	SERVICE DATA AND SPECIFICATIONS
Description518	
·	(SDS)
PRECAUTION519	Idle Speed
	Ignition Timing
PRECAUTIONS519	Calculated Load Value536
	Mass Air Flow Sensor536

# **BASIC INSPECTION**

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

#### **OVERALL SEQUENCE**

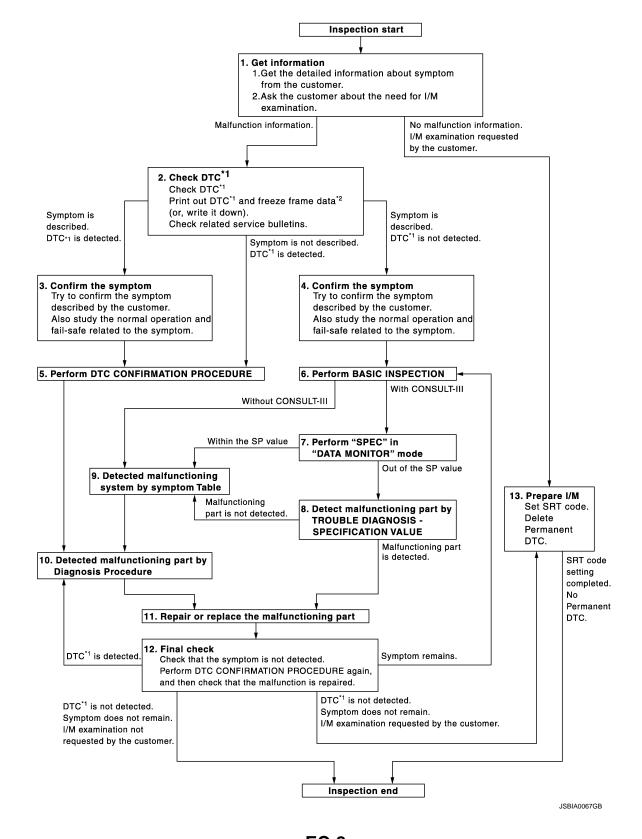

< BASIC INSPECTION > [VQ35DE]

\*1: Include 1st trip DTC.

\*2: Include 1st trip freeze frame data.

#### DETAILED FLOW

### 1.GET INFORMATION FOR SYMPTOM

EC

D

Е

Α

- Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the "Diagnostic Work Sheet". (Refer to <u>EC-11</u>, "<u>Diagnostic</u> <u>Work Sheet</u>".)
- 2. Ask if the customer requests I/M examination.

Malfunction information, obtained>>GO TO 2.

No malfunction information, but a request for I/M examination>>GO TO 13.

### 2. CHECK DTC

- 1. Check DTC.
- 2. Perform the following procedure if DTC is displayed.
- Record DTC and freeze frame data. (Print them out with CONSULT-III or GST.)
- Erase DTC. (Refer to EC-102, "Diagnosis Description".)
- Study the relationship between the cause detected by DTC and the symptom described by the customer. (Symptom Table is useful. Refer to <u>EC-514</u>, "Symptom Table".)
- 3. Check related service bulletins for information.

#### Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3.

Symptom is described, DTC is not displayed>>GO TO 4.

Symptom is not described, DTC is displayed>>GO TO 5.

### 3.confirm the symptom

Try to confirm the symptom described by the customer (except MIL ON).

Also study the normal operation and fail safe related to the symptom. Refer to <u>EC-518</u>, "<u>Description</u>" and <u>EC-494</u>, "Fail-<u>safe</u>".

Diagnosis Work Sheet is useful to verify the incident.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

### 4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail safe related to the symptom. Refer to <u>EC-518</u>, "<u>Description</u>" and <u>EC-494</u>, "<u>Fail-safe</u>".

Diagnosis Work Sheet is useful to verify the incident.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

N

### PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the displayed DTC, and then check that DTC is detected again.

If two or more DTCs are detected, refer to <u>EC-496, "DTC Inspection Priority Chart"</u> and determine trouble diagnosis order.

#### NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

#### Is DTC detected?

Revision: 2009 September

### < BASIC INSPECTION > [VQ35DE]

YES >> GO TO 10.

NO >> Check according to GI-39, "Intermittent Incident".

#### 6.PERFORM BASIC INSPECTION

Perform EC-13, "BASIC INSPECTION: Special Repair Requirement".

#### Will CONSULT-III be used?

YES >> GO TO 7. NO >> GO TO 9.

### 7.PERFORM "SPEC" OF "DATA MONITOR" MODE

#### (P) With CONSULT-III

Check that "MAS A/F SE-B1", "B/FUEL SCHDL", "A/F ALPHA-B1" and "A/F ALPHA-B2" are within the SP value using "SPEC" of "DATA MONITOR" mode with CONSULT-III. Refer to <u>EC-126</u>, "Component Function Check".

#### Are they within the SP value?

YES >> GO TO 9. NO >> GO TO 8.

### 8.DETECT MALFUNCTIONING PART BY TROUBLE DIAGNOSIS - SPECIFICATION VALUE

Detect malfunctioning part according to EC-127, "Diagnosis Procedure".

#### Is malfunctioning part detected?

YES >> GO TO 11. NO >> GO TO 9.

### $\mathbf{9}.$ DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to <u>EC-514</u>. "Symptom Table" based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 10.

# 10. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

#### NOTE:

The Diagnostic Procedure in EC section described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure. For details, refer to "Circuit Inspection" in GI-42, "Circuit Inspection".

#### Is malfunctioning part detected?

YES >> GO TO 11.

NO >> Monitor input data from related sensors or check voltage of related ECM terminals using CON-SULT-III. Refer to EC-464, "Reference Value".

### 11. REPAIR OR REPLACE THE MALFUNCTIONING PART

- 1. Repair or replace the malfunctioning part.
- Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
- 3. Check DTC. If DTC is displayed, erase it, refer to <a href="EC-102">EC-102</a>, "Diagnosis Description".

>> GO TO 12.

### 12. FINAL CHECK

When DTC was detected in step 2, perform DTC CONFIRMATION PROCEDURE or Component Function Check again, and then check that the malfunction have been repaired securely.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

#### Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 10.

YES-2 >> Symptom remains: GO TO 6.

< BASIC INSPECTION > [VQ35DE]

NO-1 >> No request for I/M examination from the customer: Before returning the vehicle to the customer, always erase unnecessary DTC in ECM and TCM (Transmission Control Module). Refer to <a href="EC-102">EC-102</a>, "Diagnosis Description".

NO-2 >> I/M examination, requested from the customer: GO TO 13.

### 13. PREPARE FOR I/M EXAMINATION

- 1. Set SRT codes. Refer to EC-501, "How to Set SRT Code".
- 2. Erase permanent DTCs. Refer to EC-503, "How to Erase Permanent DTC".

#### >> INSPECTION END

### Diagnostic Work Sheet

#### **DESCRIPTION**

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make troubleshooting faster and more accurate.

In general, each customer feels differently about symptoms. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the WORKSHEET SAMPLE below in order to organize all the information for troubleshooting. Some conditions may cause the MIL to illuminate or blink, and DTC to be detected. Examples:

- Vehicle ran out of fuel, which caused the engine to misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere.

#### **KEY POINTS**

WHAT ..... Vehicle & engine model
WHEN ..... Date, Frequencies
WHERE..... Road conditions
HOW ..... Operating conditions,
Weather conditions,
Symptoms

SEF907L

INFOID:0000000005536467

D

EC

Е

\_

Н

K

L

M

Ν

0

### < BASIC INSPECTION >

[VQ35DE]

### **WORKSHEET SAMPLE**

Customer nar	ne MR/MS	Model & Year VIN		
Engine #		Trans.	Mileage	
Incident Date		Manuf. Date In Service Date		
Fuel and fuel	filler cap	☐ Vehicle ran out of fuel causing misfire ☐ Fuel filler cap was left off or incorrectly screwed on.		
	☐ Startability	☐ Impossible to start ☐ No combustion ☐ Partial combustion ☐ Partial combustion affected by throttle position ☐ Partial combustion NOT affected by throttle position ☐ Possible but hard to start ☐ Others [ ]		
Symptoms	□ Idling	☐ No fast idle ☐ Unstable ☐ H☐ Others [	ligh idle □ Low idle ]	
,,,,	☐ Driveability	☐ Stumble ☐ Surge ☐ Knock ☐ Intake backfire ☐ Exhaust backfi ☐ Others [	☐ Lack of power re ]	
	☐ Engine stall	□ At the time of start  □ While idling     □ While accelerating  □ While decelerating     □ Just after stopping  □ While loading		
Incident occur	rrence	☐ Just after delivery ☐ Recently ☐ In the morning ☐ At night ☐	☐ In the daytime	
Frequency		☐ All the time ☐ Under certain conditions ☐ Sometimes		
Weather cond	litions	☐ Not affected		
	Weather	☐ Fine ☐ Raining ☐ Snowing ☐ Others [ ]		
	Temperature	☐ Hot ☐ Warm ☐ Cool ☐	] Cold ☐ Humid °F	
☐ Cold ☐ During warm-up ☐ After warm-up		After warm-up		
Engine conditions  Engine speed  0 2,000 4,000 6,000 8,000 rpm			4,000 6,000 8,000 rpm	
Road conditio	ns	☐ In town ☐ In suburbs ☐ Highway ☐ Off road (up/down)		
□ Not affected         □ At starting       □ While idling       □ At racing         □ While accelerating       □ While cruising         □ While decelerating       □ While turning (RH/LH)			ing	
		Vehicle speed 0 10 20	30 40 50 60 MPH	
Malfunction in	dicator lamp	☐ Turned on ☐ Not turned on		

MTBL0017

[VQ35DE] < BASIC INSPECTION >

# INSPECTION AND ADJUSTMENT BASIC INSPECTION

### BASIC INSPECTION: Special Repair Requirement

INFOID:0000000005536468

#### EC


Α

### 1.INSPECTION START

- Check service records for any recent repairs that may indicate a related malfunction, or a current need for scheduled maintenance.
- 2. Open engine hood and check the following:
- Harness connectors for improper connections
- Wiring harness for improper connections, pinches and cut
- Vacuum hoses for splits, kinks and improper connections
- Hoses and ducts for leakage
- Air cleaner clogging
- Gasket
- 3. Check that electrical or mechanical loads are not applied.
- Head lamp switch is OFF.
- Air conditioner switch is OFF.
- Rear window defogger switch is OFF.
- Steering wheel is in the straight-ahead position, etc.




Start engine and warm it up until engine coolant temperature indicator points to the middle of gauge. Check that engine stays below 1,000 rpm.

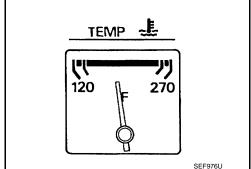

- Run engine at approximately 2,000 rpm for approximately 2 minutes under no load.
- 6. Check that no DTC is displayed with CONSULT-III or GST.

#### Are any DTCs detected?

YES >> GO TO 2. NO >> GO TO 3.

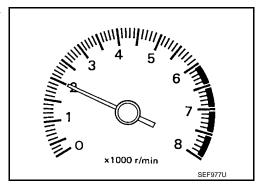

# 2.repair or replace

Repair or replace components as necessary according to corresponding Diagnostic Procedure.

>> GO TO 3

# 3.CHECK TARGET IDLE SPEED

Run engine at approximately 2,000 rpm for approximately 2 minutes under no load.

SEF983L

Е

D

F

Н

M

N

Р

2010 Murano

< BASIC INSPECTION > [VQ35DE]

Rev engine (2,000 to 3,000 rpm) 2 or 3 times under no load, then run engine at idle speed for approximately 1 minute.


Check idle speed.

For procedure, refer to <u>EC-16</u>, "IDLE SPEED : Special Repair Requirement".

For specification, refer to EC-536, "Idle Speed".

#### Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 4.

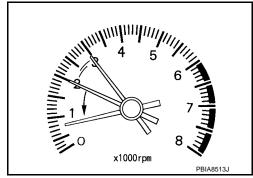

### 4. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

- 1. Stop engine.
- 2. Perform <u>EC-18</u>, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 5.

### ${f 5.}$ PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 6.

### 6. PERFORM IDLE AIR VOLUME LEARNING

Perform EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

#### Is Idle Air Volume Learning carried out successfully?

YES >> GO TO 7.

NO >> Follow the instruction of Idle Air Volume Learning. Then GO TO 4.

### 7. CHECK IDLE SPEED AGAIN

- Start engine and warm it up to normal operating temperature.
- 2. Check idle speed.

For procedure, refer to EC-16, "IDLE SPEED: Special Repair Requirement".

For specification, refer to EC-536, "Idle Speed".

#### Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 8.

### 8. DETECT MALFUNCTIONING PART

Check the Following.

- Check camshaft position sensor (PHASE) and circuit. Refer to EC-259, "Diagnosis Procedure".
- Check crankshaft position sensor (POS) and circuit. Refer to <u>EC-255, "Diagnosis Procedure"</u>.

#### Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace malfunctioning part. Then GO TO 4.

### 9. CHECK ECM FUNCTION

- 1. Substitute with a non-malfunctioning ECM to check ECM function. (ECM may be the cause of the incident, although this is rare.)
- 2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to SEC-8, "ECM RECOMMUNICATING FUNCTION: Special Repair Requirement".

>> GO TO 4.

### 10. CHECK IGNITION TIMING

- Run engine at idle.
- 2. Check ignition timing with a timing light.

Revision: 2009 September EC-14 2010 Murano

[VQ35DE] < BASIC INSPECTION > For procedure, refer to EC-17, "IGNITION TIMING: Special Repair Requirement". For specification, refer to EC-536, "Ignition Timing". Α Is the inspection result normal? YES >> GO TO 19. NO >> GO TO 11. EC 11. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING Stop engine. Perform EC-18, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement". D >> GO TO 12. 12.perform throttle valve closed position learning Perform EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement". >> GO TO 13. 13.perform idle air volume learning Perform EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement". Is Idle Air Volume Learning carried out successfully? YES >> GO TO 14. NO >> Follow the instruction of Idle Air Volume Learning. Then GO TO 4. 14. CHECK IDLE SPEED AGAIN Н Start engine and warm it up to normal operating temperature. Check idle speed. For procedure, refer to EC-16, "IDLE SPEED: Special Repair Requirement". For specification, refer to EC-536, "Idle Speed". Is the inspection result normal? YES >> GO TO 15. NO >> GO TO 17. 15. CHECK IGNITION TIMING AGAIN Run engine at idle. 2. Check ignition timing with a timing light. For procedure, refer to EC-17, "IGNITION TIMING: Special Repair Requirement". For specification, refer to <a>EC-536</a>, "Ignition Timing". Is the inspection result normal? YES >> GO TO 19. M NO >> GO TO 16. 16.check timing chain installation Check timing chain installation. Refer to EM-94, "Disassembly and Assembly". Is the inspection result normal? YES >> GO TO 17. NO >> Repair the timing chain installation. Then GO TO 4. 17.DETECT MALFUNCTIONING PART Check the following. Check camshaft position sensor (PHASE) and circuit. Refer to <u>EC-259, "Diagnosis Procedure"</u>. • Check crankshaft position sensor (POS) and circuit. Refer to EC-255, "Diagnosis Procedure". Is the inspection result normal? YES >> GO TO 18. >> Repair or replace malfunctioning part. Then GO TO 4. NO 18.check ecm function

< BASIC INSPECTION > [VQ35DE]

 Substitute with a non-malfunctioning ECM to check ECM function. (ECM may be the cause of the incident, although this is rare.)

2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to EC-16, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> GO TO 4.

### 19. INSPECTION END

If ECM is replaced during this BASIC INSPECTION procedure, perform <u>EC-16</u>, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> INSPECTION END

### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Description

INFOID:0000000005536469

When replacing ECM, the following procedure must be performed.

# ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement

 ${\bf 1}$ .PERFORM INITIALIZATION OF NVIS (NATS) SYSTEM AND REGISTRATION OF ALL NVIS (NATS) IGNITION KEY IDS

Refer to SEC-8, "ECM RECOMMUNICATING FUNCTION: Special Repair Requirement".

>> GO TO 2.

### 2.PERFORM VIN REGISTRATION

Refer to EC-17, "VIN REGISTRATION: Special Repair Requirement".

>> GO TO 3.

# 3. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

Refer to EC-18, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 4.

### 4. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 5.

# 5. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END
IDLE SPEED

**IDLE SPEED**: Description

INFOID:0000000005536471

This describes how to check the idle speed. For the actual procedure, follow the instructions in "BASIC INSPECTION".

IDLE SPEED: Special Repair Requirement

INFOID:0000000005536472

1. CHECK IDLE SPEED

[VQ35DE] < BASIC INSPECTION >

(P)With CONSULT-III

Check idle speed in "DATA MONITOR" mode with CONSULT-III.

**With GST** 

Check idle speed with Service \$01 of GST.

>> INSPECTION END

### **IGNITION TIMING**

**IGNITION TIMING: Description** 

INFOID:0000000005536473


INFOID:0000000005536474

This describes how to check the ignition timing. For the actual procedure, follow the instructions in "BASIC INSPECTION".

### IGNITION TIMING: Special Repair Requirement


### 1. CHECK IGNITION TIMING

- Attach timing light to loop wires as shown.
- Timing light (A)
- : Vehicle front

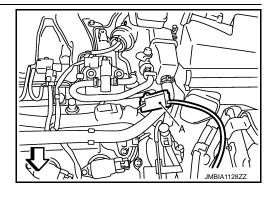

2. Check ignition timing.

>> INSPECTION END

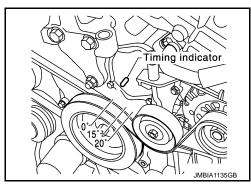

VIN REGISTRATION

VIN REGISTRATION: Description

INFOID:0000000005536475

VIN Registration is an operation to register VIN in ECM. It must be performed each time ECM is replaced. NOTE:

Accurate VIN which is registered in ECM may be required for Inspection & Maintenance (I/M).

VIN REGISTRATION: Special Repair Requirement

INFOID:0000000005536476

1.CHECK VIN

Check the VIN of the vehicle and note it. Refer to GI-20, "Information About Identification or Model Code".

>> GO TO 2.

### 2.PERFORM VIN REGISTRATION

#### (II) With CONSULT-III

Revision: 2009 September

Turn ignition switch ON with engine stopped.

**EC-17** 

EC

Α

Е

D

F

[VQ35DE] < BASIC INSPECTION >

- Select "VIN REGISTRATION" in "WORK SUPPORT" mode.
- Follow the instructions on the CONSULT-III display.

>> END

### ACCELERATOR PEDAL RELEASED POSITION LEARNING

### ACCELERATOR PEDAL RELEASED POSITION LEARNING: Description INFOID-000000005538477

Accelerator Pedal Released Position Learning is a function of ECM to learn the fully released position of the accelerator pedal by monitoring the accelerator pedal position sensor output signal. It must be performed each time the harness connector of the accelerator pedal position sensor or ECM is disconnected.

#### ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement INFOID:0000000005536478

### 1.START

- Check that accelerator pedal is fully released.
- Turn ignition switch ON and wait at least 2 seconds.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON and wait at least 2 seconds.
- Turn ignition switch OFF and wait at least 10 seconds.

#### THROTTLE VALVE CLOSED POSITION LEARNING

### THROTTLE VALVE CLOSED POSITION LEARNING: Description

INFOID:0000000005536479

Throttle Valve Closed Position Learning is a function of ECM to learn the fully closed position of the throttle valve by monitoring the throttle position sensor output signal. It must be performed each time the harness connector of electric throttle control actuator or ECM is disconnected.

### THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement

# 1.START

- Check that accelerator pedal is fully released.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds. Check that throttle valve moves during the above 10 seconds by confirming the operating sound.

>> END

### IDLE AIR VOLUME LEARNING

### IDLE AIR VOLUME LEARNING: Description

Idle Air Volume Learning is a function of ECM to learn the idle air volume that keeps engine idle speed within the specific range. It must be performed under the following conditions:

- Each time the electric throttle control actuator or ECM is replaced.
- Idle speed or ignition timing is out of the specification.

### IDLE AIR VOLUME LEARNING: Special Repair Requirement

INFOID:0000000005536482

INFOID:0000000005536481

# 1.PRECONDITIONING

Check that all of the following conditions are satisfied.

Learning will be cancelled if any of the following conditions are missed for even a moment.

- Battery voltage: More than 12.9 V (At idle)
- Engine coolant temperature: 70 100°C (158 212°F)
- Selector lever position: P or N

#### < BASIC INSPECTION > [VQ35DE]

· Electric load switch: OFF

(Air conditioner, head lamp, rear window defogger)

On vehicles equipped with daytime light systems, if the parking brake is applied before the engine is started the head lamp will not illuminate.

- Steering wheel: Neutral (Straight-ahead position)
- Vehicle speed: Stopped
- Transmission: Warmed-up
- With CONSULT-III: Drive vehicle until "ATF TEMP SEN" in "DATA MONITOR" mode of "CVT" system indicates less than 0.9 V.
- Without CONSULT-III: Drive vehicle for 10 minutes.

#### Will CONSULT-III be used?

YES >> GO TO 2.

NO >> GO TO 3.

### 2. PERFORM IDLE AIR VOLUME LEARNING

#### (P)With CONSULT-III

- Perform <u>EC-18</u>, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".
- 2. Perform EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- 3. Start engine and warm it up to normal operating temperature.
- 4. Select "IDLE AIR VOL LEARN" in "WORK SUPPORT" mode.
- 5. Touch "START" and wait 20 seconds.

### Is "CMPLT" displayed on CONSULT-III screen?

YES >> GO TO 4.

NO >> GO TO 5.

# 3.perform idle air volume learning

#### Without CONSULT-III

#### NOTE:

- It is better to count the time accurately with a clock.
- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.
- Perform <u>EC-18</u>, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".
- Perform <u>EC-18</u>, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- 3. Start engine and warm it up to normal operating temperature.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
- 6. Repeat the following procedure quickly 5 times within 5 seconds.
- Fully depress the accelerator pedal.
- Fully release the accelerator pedal.
- Wait 7 seconds, fully depress the accelerator pedal for approx. 20 seconds until the MIL stops blinking and turns ON.
- 8. Fully release the accelerator pedal within 3 seconds after the MIL turns ON.
- 9. Start engine and let it idle.
- 10. Wait 20 seconds.

Run Engine Not run L Idle air volume learning starts ON Ianition switch OFF Approx. 20 sec. 3 sec Within 7 sec 3 sec. 5 sec. Within 10 sec. 12345 Fully depressed Accelerator Fully pedal released Blinking ON MII ON OFF SEC8970

>> GO TO 4.

EC

Α

D

Е

F

Ы

Н

ı

J

K

L

IVI

N

 $\circ$ 

Р

< BASIC INSPECTION > [VQ35DE]

### 4.CHECK IDLE SPEED AND IGNITION TIMING

Rev up the engine 2 or 3 times and check that idle speed and ignition timing are within the specifications. For procedure, refer to <a href="EC-16">EC-16</a>, "IDLE SPEED: Special Repair Requirement" and <a href="EC-17">EC-17</a>, "IGNITION TIMING: Special Repair Requirement".

For specifications, refer to EC-536, "Idle Speed" and EC-536, "Ignition Timing".

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

# 5.DETECT MALFUNCTIONING PART-I

#### Check the following

- Check that throttle valve is fully closed.
- Check PCV valve operation.
- Check that downstream of throttle valve is free from air leakage.

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning part.

### 6.DETECT MALFUNCTIONING PART-II

Engine component parts and their installation condition are questionable. Check and eliminate the cause of the incident.

It is useful to perform "TROUBLE DIAGNOSIS - SPECIFICATION VALUE". Refer to <a href="EC-126">EC-126</a>, "Description". If any of the following conditions occur after the engine has started, eliminate the cause of the incident and perform Idle Air Volume Learning again:

- Engine stalls.
- Incorrect idle.

#### >> INSPECTION END

# MIXTURE RATIO SELF-LEARNING VALUE CLEAR

### MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Description

INFOID:0000000005536483

This describes show to erase the mixture ratio self-learning value. For the actual procedure, follow the instructions in "Diagnosis Procedure".

### MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement

INFOID:0000000005536484

### 1.START

#### (P)With CONSULT-III

- 1. Start engine and warm it up to normal operating temperature.
- 2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT-III.
- 3. Clear mixture ratio self-learning value by touching "CLEAR".

#### With GST

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF.
- 3. Disconnect mass air flow sensor harness connector.
- 4. Restart engine and let it idle for at least 5 seconds.
- 5. Stop engine and reconnect mass air flow sensor harness connector.
- 6. Select Service \$03 with GST. Check that DTC P0102 is detected.
- 7. Select Service \$04 with GST to erase the DTC P0102.


>> END

Α

# SYSTEM DESCRIPTION

### **ENGINE CONTROL SYSTEM**

System Diagram

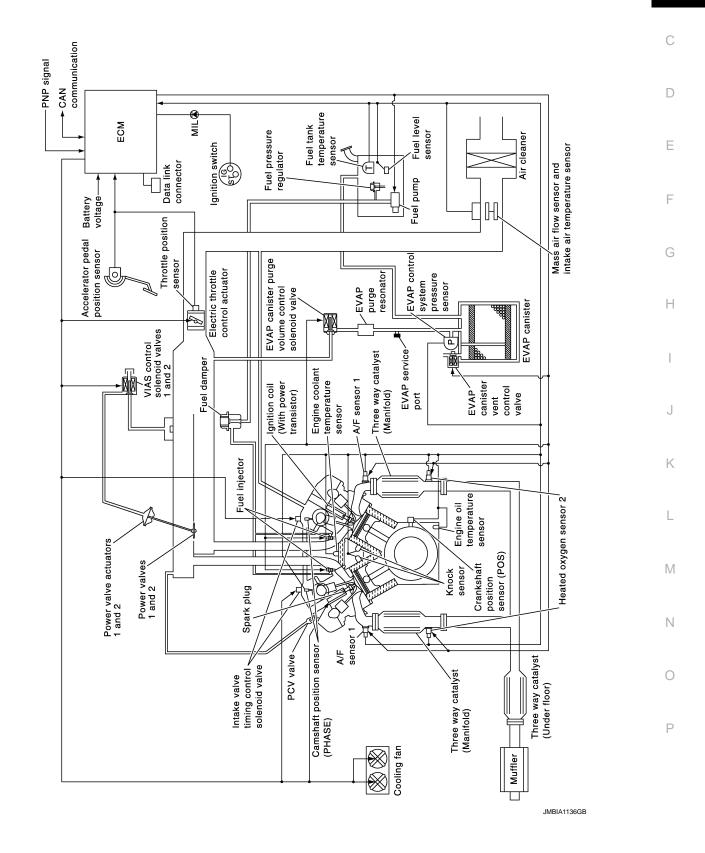


### System Description

INFOID:0000000005536486

ECM performs various controls such as fuel injection control and ignition timing control.

### Component Parts Location

INFOID:0000000005536487

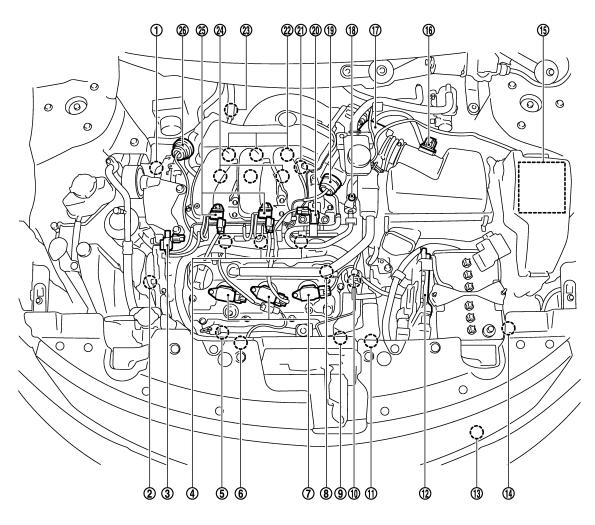


JMBIA1108ZZ

- Intake valve timing control solenoid valve (bank 1)
- 4. Fuel injector (bank 2)
- Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1


- Intake valve timing control solenoid valve (bank 2)
- A/F sensor 1 (bank 2)
- Camshaft position sensor (PHASE) 9. (bank 2)
- 11. Cooling fan motor-1
- 14. Battery current sensor
- 16. Mass air flow sensor (with intake air 17. Electric throttle control actuator
  - solenoid valve
  - 23. A/F sensor 1 (bank 1)

- Electronic controlled engine mount 3. control solenoid valve
- Cooling fan motor-2
- Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- 20. EVAP canister purge volume control 21. Camshaft position sensor (PHASE) (bank 1)
  - 24. Fuel injector (bank 1)

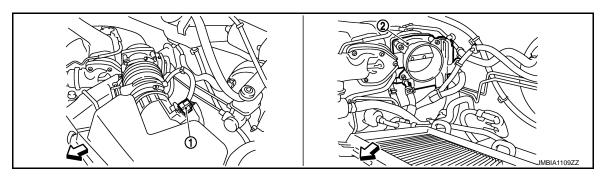


- Mas air flow sensor (with intake air temperature sensor)
- 2. Electric throttle control actuator

⟨
→ : Vehicle front

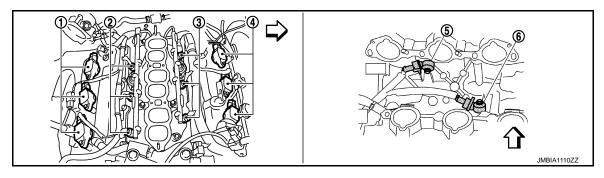

- 1. Ignition coil (with power transistor) and spark plug (bank 1)
- 4. Ignition coil (with power transistor) and spark plug (bank 2)
- 2. Fuel injector (bank 1)
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- 6. Knock sensor (bank 1)

: Vehicle front

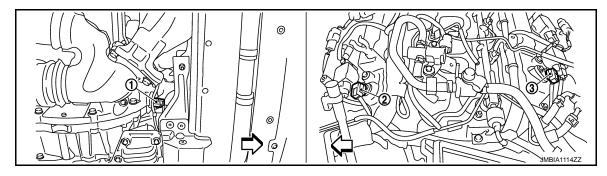

- 1. Crankshaft position sensor (POS)
- Camshaft position sensor (PHASE) (bank 1)

2.

3. Camshaft position sensor (PHASE) (bank 2)

: Vehicle front

EC

Α

D

Е

F

G

Н

J


K

L

M

Ν


0

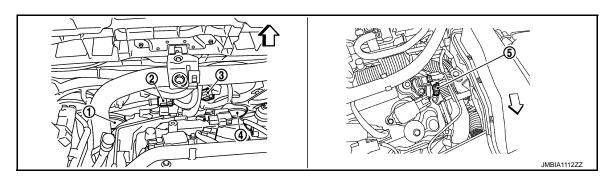

- Cooling fan motor-1 1.
- Cooling fan motor-1 harness connector
- Cooling fan motor-1 harness connector


⟨
⇒ : Vehicle front

Cooling fan motor-2 5. Engine coolant temperature sensor

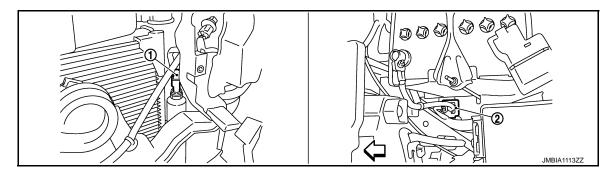

- Refrigerant pressure sensor

Battery current sensor

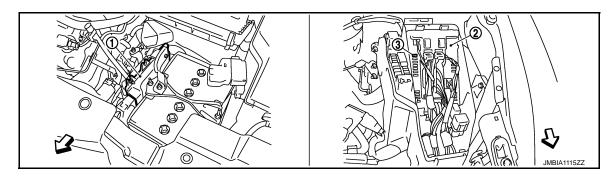

- ECM

2. IPDM E/R 3. Fuel pump fuse

Α

EC

D

Е

Н


K


M

Ν

0

Р

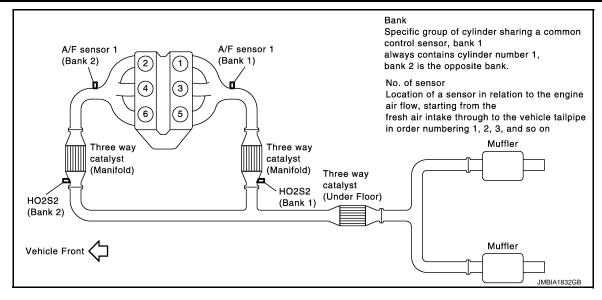


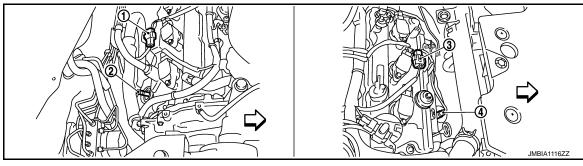

- A/F sensor 1 (bank 1) harness con- 2. A/F sensor 1 (bank 1) nector
- A/F sensor 1 (bank 2) harness connector

A/F sensor 1 (bank 2)


: Vehicle front

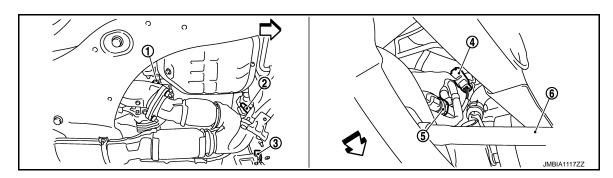

- HO2S2 (bank 1) 1.
- HO2S2 (bank 2) 2.
- HO2S2 (bank 1) harness connector 5.
  - Power steering pressure sensor
- HO2S2 (bank 2) harness connector 3.
- 6. Drive shaft (RH)

: Vehicle front


Revision: 2009 September

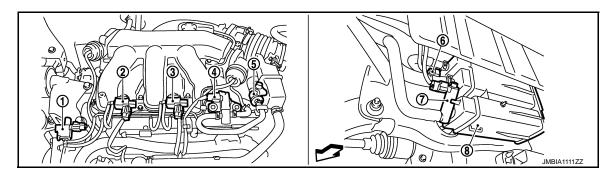


- Electronic controlled engine mount control solenoid valve
- 4. EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve

- VIAS control solenoid valve 1
- EVAP service port
- 8. EVAP canister


- 3. VIAS control solenoid valve 2
- 6. EVAP control system pressure sensor

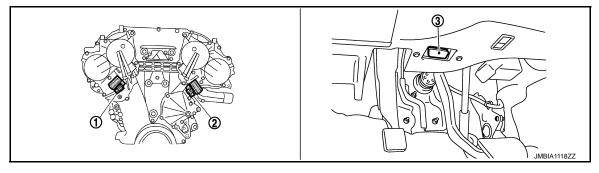

- Intake valve timing control solenoid valve (bank 1)
- Intake valve timing control solenoid 3. valve (bank 2)
  - Data link connector

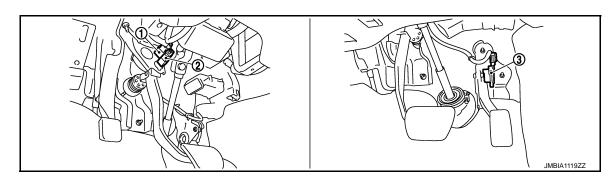

- Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

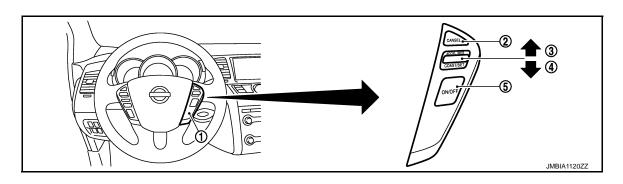

[VQ35DE]

Α

EC

D

Е

F

G

Н


Ν


0

Р

- 1. ASCD steering switch
- 4. SET/COAST switch
- CANSEL switch
   MAIN switch

3. RESUME/ACCELERATE switch

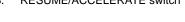

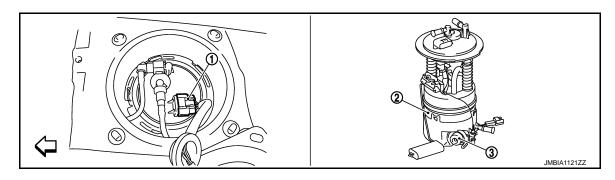

. Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

# Component Description

INFOID:0000000005536488

Component	Reference
A/F sensor 1	EC-182, "Description"
A/F sensor 1 heater	EC-144, "Description"
Accelerator pedal position sensor	EC-407, "Description"
ASCD brake switch	EC-374, "Description"
ASCD steering switch	EC-371, "Description"
Battery current sensor	EC-359, "Description"
Camshaft position sensor (PHASE)	EC-258, "Description"
Cooling fan motor	EC-428, "Description"
Crankshaft position sensor (POS)	EC-254, "Description"
Electric throttle control actuator	EC-405, "Description"
Electronic controlled engine mount	EC-435, "Description"
Engine coolant temperature sensor	EC-167, "Description"
Engine oil temperature sensor	EC-236, "Description"
EVAP canister purge volume control solenoid valve	EC-278, "Description"
EVAP canister vent control valve	EC-286, "Description"
EVAP control system pressure sensor	EC-294, "Description"
Fuel injector	EC-438, "Description"
Fuel level sensor	EC-321, "Description"
Fuel pump	EC-441, "Description"
Fuel tank temperature sensor	EC-230, "Description"
Heated oxygen sensor 2	EC-199, "Description"
Heated oxygen sensor 2 heater	EC-147, "Description"
Ignition coil with power transistor	EC-445, "Description"
Intake air temperature sensor	EC-164, "Description"
Intake valve timing control solenoid valve	EC-150, "Description"
Knock sensor	EC-251, "Description"
Mass air flow sensor	EC-153, "Description"

Revision: 2009 September

### **ENGINE CONTROL SYSTEM**

### < SYSTEM DESCRIPTION >


[VQ35DE]

Component	Reference
PCV valve	EC-456, "Description"
Power steering pressure sensor	EC-335, "Description"
Power valves 1 and 2	EC-460, "Description"
Refrigerant pressure sensor	EC-457, "Description"
Stop lamp switch	EC-393, "Description"
TCM	EC-346, "Description"
Throttle control motor	EC-402, "Description"
Throttle control motor relay	EC-396, "Description"
Throttle position sensor	EC-172, "Description"
VIAS control solenoid valve 1	EC-387, "Description"
VIAS control solenoid valve 2	EC-390, "Description"

[VQ35DE]

# MULTIPORT FUEL INJECTION SYSTEM

System Diagram

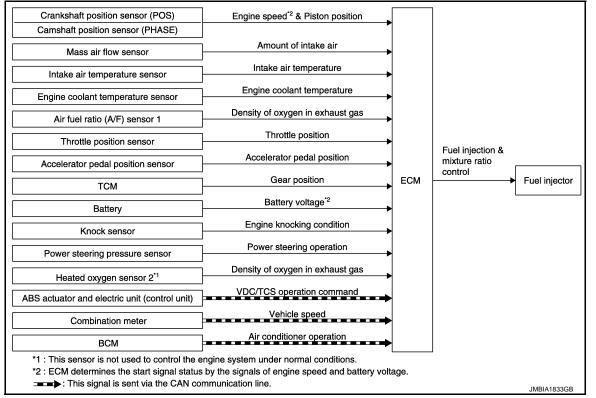

### System Description

#### INPUT/OUTPUT SIGNAL CHART

ECM function Sensor Input signal to ECM Actuator Crankshaft position sensor (POS) Engine speed\*3 Piston position Camshaft position sensor (PHASE) Mass air flow sensor Amount of intake air Intake air temperature sensor Intake air temperature Engine coolant temperature sensor Engine coolant temperature Air fuel ratio (A/F) sensor 1 Density of oxygen in exhaust gas Throttle position sensor Throttle position Accelerator pedal position sensor Accelerator pedal position Fuel injection **TCM** & mixture ratio Fuel injector Gear position control Battery Battery voltage\*3 Engine knocking condition Knock sensor Power steering pressure sensor Power steering operation Density of oxygen in exhaust gas Heated oxygen sensor 2\*1 ABS actuator and electric unit (control unit) VDC/TCS operation command\*2 Combination meter Vehicle speed\*2 **BCM** Air conditioner operation\*2

Revision: 2009 September EC-29 2010 Murano

EC

Α

D

Е

F

G

Н

INFOID:0000000005536490

1 4

L

IVI

<sup>\*1:</sup> This sensor is not used to control the engine system under normal conditions.

<sup>\*2:</sup> This signal is sent to the ECM via the CAN communication line.

\*3: ECM determines the start signal status by the signals of engine speed and battery voltage.

#### SYSTEM DESCRIPTION

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from the crankshaft position sensor (POS), camshaft position sensor (PHASE) and the mass air flow sensor.

#### VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.


#### <Fuel increase>

- During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever position is changed from N to D
- · High-load, high-speed operation

#### <Fuel decrease>

- During deceleration
- · During high engine speed operation

#### MIXTURE RATIO FEEDBACK CONTROL (CLOSED LOOP CONTROL)

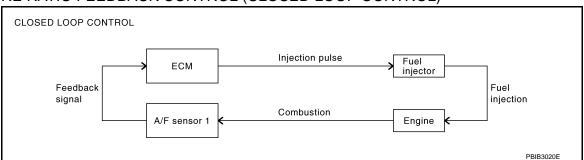

The mixture ratio feedback system provides the best air-fuel mixture ratio for drive ability and emission control. The three way catalyst (manifold) can better reduce CO, HC and NOx emissions. This system uses A/F sensor 1 in the exhaust manifold to monitor whether the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about A/F sensor 1, refer to EC-182, "Description". This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Heated oxygen sensor 2 is located downstream of the three way catalyst (manifold). Even if the switching characteristics of A/F sensor 1 shift, the air-fuel ratio is controlled to stoichiometric by the signal from heated oxygen sensor 2.

Open Loop Control

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of A/F sensor 1 or its circuit
- Insufficient activation of A/F sensor 1 at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- After shifting from N to D
- When starting the engine

#### MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from A/F sensor 1. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally

#### MULTIPORT FUEL INJECTION SYSTEM

### < SYSTEM DESCRIPTION >

[VQ35DE]

designed. Both manufacturing differences (i.e., mass air flow sensor hot wire) and characteristic changes during operation (i.e., fuel injector clogging) directly affect mixture ratio.


Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes "short-term fuel trim" and "long-term fuel trim".

"Short-term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from A/F sensor 1 indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

"Long-term fuel trim" is overall fuel compensation carried out over time to compensate for continual deviation of the "short-term fuel trim" from the central value. Continual deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

#### **FUEL INJECTION TIMING**

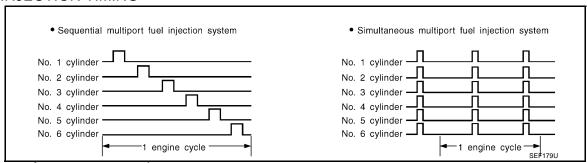

Two types of systems are used.

- Sequential Multiport Fuel Injection System
  - Fuel is injected into each cylinder during each engine cycle according to the ignition order. This system is used when the engine is running.
- Simultaneous Multiport Fuel Injection System
  - Fuel is injected simultaneously into all six cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.
  - The six injectors will then receive the signals 2 times for each engine cycle.
  - This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

#### **FUEL SHUT-OFF**

Fuel to each cylinder is cut off during deceleration, operation of the engine at excessively high speeds or operation of the vehicle at excessively high speeds.

EC

Α

D

Е

F

Н

.1

Κ


L

N

0

### Component Parts Location

INFOID:0000000005536491

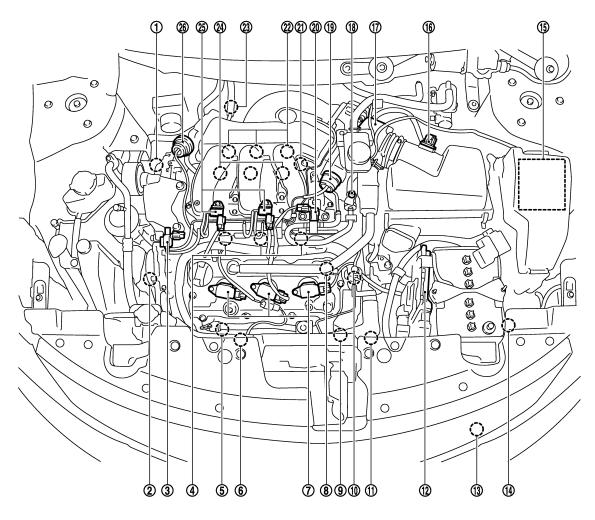


JMBIA1108ZZ

- Intake valve timing control solenoid valve (bank 1)
- Fuel injector (bank 2) 4.
- Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- 16. Mass air flow sensor (with intake air 17. Electric throttle control actuator temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1


- Intake valve timing control solenoid valve (bank 2)
- A/F sensor 1 (bank 2)
- Camshaft position sensor (PHASE) (bank 2)
- 11. Cooling fan motor-1
- 14. Battery current sensor
- solenoid valve
- 23. A/F sensor 1 (bank 1)

- Electronic controlled engine mount 3. control solenoid valve
- Cooling fan motor-2
- 9. Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- 20. EVAP canister purge volume control 21. Camshaft position sensor (PHASE) (bank 1)
  - 24. Fuel injector (bank 1)

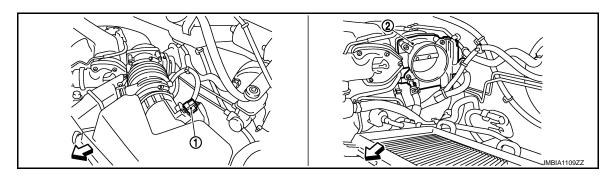


- Mas air flow sensor (with intake air temperature sensor)
- 2. Electric throttle control actuator

⟨
→ : Vehicle front

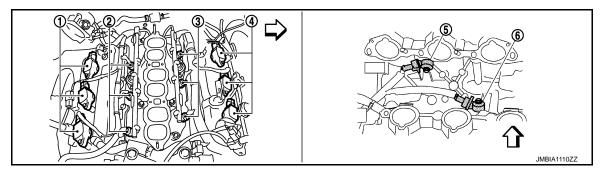

- Ignition coil (with power transistor) and spark plug (bank 1)
- Ignition coil (with power transistor) and spark plug (bank 2)
- 2. Fuel injector (bank 1)
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- 6. Knock sensor (bank 1)

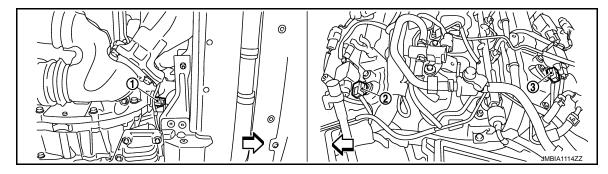

- Crankshaft position sensor (POS)
- 2. Camshaft position sensor (PHASE) (bank 1)
- 3. Camshaft position sensor (PHASE) (bank 2)

: Vehicle front

EC

Α

D

Е

F


Н

K

M

Ν


0

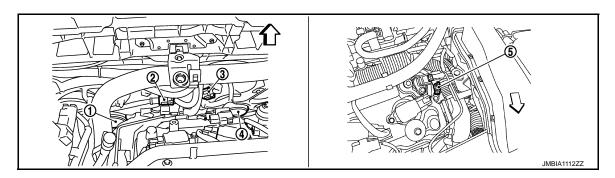

- Cooling fan motor-1 1.
- Cooling fan motor-1 harness con-
- Cooling fan motor-1 harness connector

⟨
⇒ : Vehicle front


Cooling fan motor-2 5. Engine coolant temperature sensor

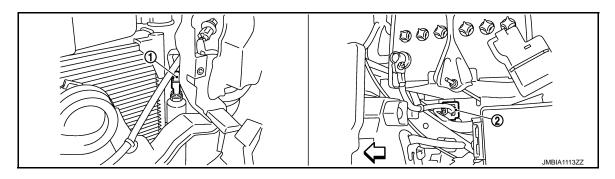

- Refrigerant pressure sensor


Battery current sensor




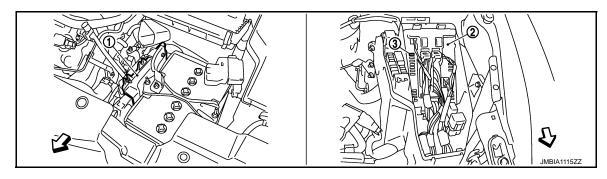

- ECM
- : Vehicle front

2. IPDM E/R 3. Fuel pump fuse

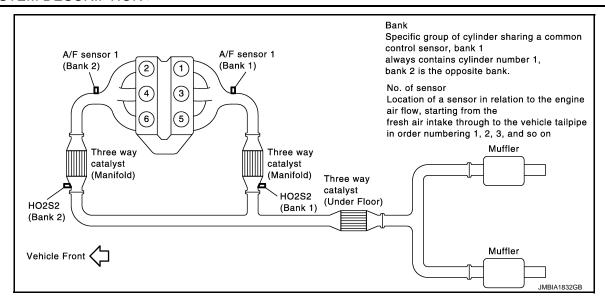


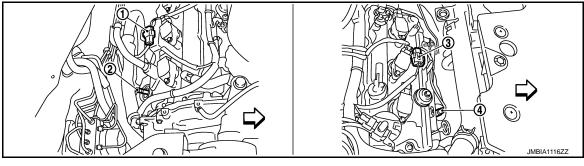

- A/F sensor 1 (bank 1) harness con- 2. A/F sensor 1 (bank 1) nector
- A/F sensor 1 (bank 2) harness connector

A/F sensor 1 (bank 2)

: Vehicle front

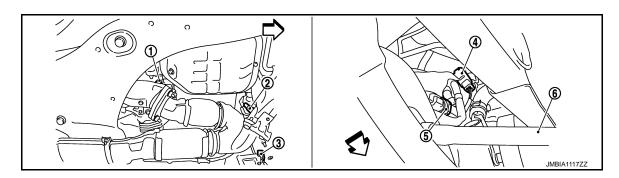

- HO2S2 (bank 1) 1.
- HO2S2 (bank 2) 2.
- HO2S2 (bank 1) harness connector 5.
- Power steering pressure sensor
- 6. Drive shaft (RH)

3.

HO2S2 (bank 2) harness connector

: Vehicle front

Α

EC

D

Е


Н

K

M

Ν


0

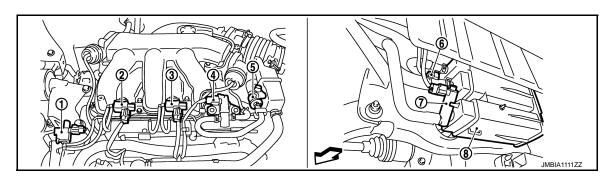

- Electronic controlled engine mount control solenoid valve
- 4. EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve


- VIAS control solenoid valve 1
- EVAP service port
- 8. EVAP canister

- 3. VIAS control solenoid valve 2
- 6. EVAP control system pressure sensor

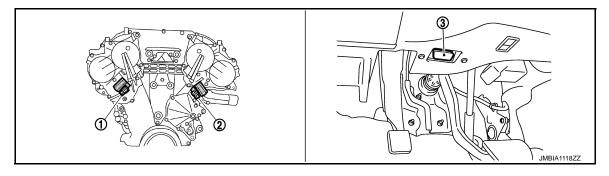

- Intake valve timing control solenoid valve (bank 1)
- Intake valve timing control solenoid 3. valve (bank 2)
- JMBIA1119ZZ
- 1. Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

Data link connector

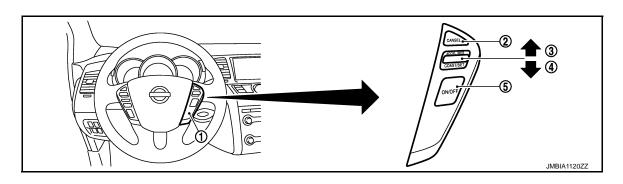


### **MULTIPORT FUEL INJECTION SYSTEM**

# < SYSTEM DESCRIPTION >

- 1. ASCD steering switch
- SET/COAST switch
- 2. CANSEL switch

RESUME/ACCELERATE switch

MAIN switch

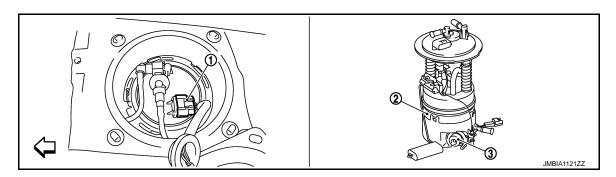

Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

# **Component Description**

INFOID:0000000005536492

[VQ35DE]

Component	Reference
A/F sensor 1	EC-182, "Description"
Accelerator pedal position sensor	EC-407, "Description"
Camshaft position sensor (PHASE)	EC-258, "Description"
Crankshaft position sensor (POS)	EC-254, "Description"
Engine coolant temperature sensor	EC-167, "Description"
Fuel injector	EC-438, "Description"
Heated oxygen sensor 2	EC-199, "Description"
Intake air temperature sensor	EC-164, "Description"
Knock sensor	EC-251, "Description"
Mass air flow sensor	EC-153, "Description"
Power steering pressure sensor	EC-335, "Description"
TCM	EC-346, "Description"
Throttle position sensor	EC-172, "Description"

Ν

0

**EC-37** Revision: 2009 September 2010 Murano

EC

Α

D

Е

F

G


Н

K

### **ELECTRIC IGNITION SYSTEM**

### System Diagram

INFOID:0000000005536493

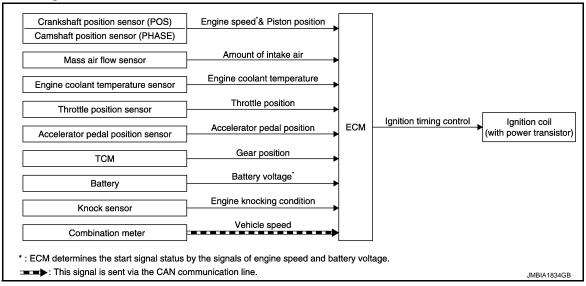

# System Description

INFOID:0000000005536494

#### INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed*2		lanition coil
Camshaft position sensor (PHASE)	Piston position  Amount of intake air		
Mass air flow sensor			
Engine coolant temperature sensor	Engine coolant temperature	Ignition timing   Ignition coil   (with power transistor	
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position		(with power transistor)
ТСМ	Gear position		
Battery	Battery voltage*2		
Knock sensor	Engine knocking		
Combination meter	Vehicle speed*1		

<sup>\*1:</sup> This signal is sent to the ECM via the CAN communication line.

#### SYSTEM DESCRIPTION

Ignition order: 1 - 2 - 3 - 4 - 5 - 6

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM.

The ECM receives information such as the injection pulse width and camshaft position sensor (PHASE) signal. Computing this information, ignition signals are transmitted to the power transistor.

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.

- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not


<sup>\*2:</sup> ECM determines the start signal status by the signals of engine speed and battery voltage.

[VQ35DE]

operate under normal driving conditions. If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

### Component Parts Location

INFOID:0000000005536495

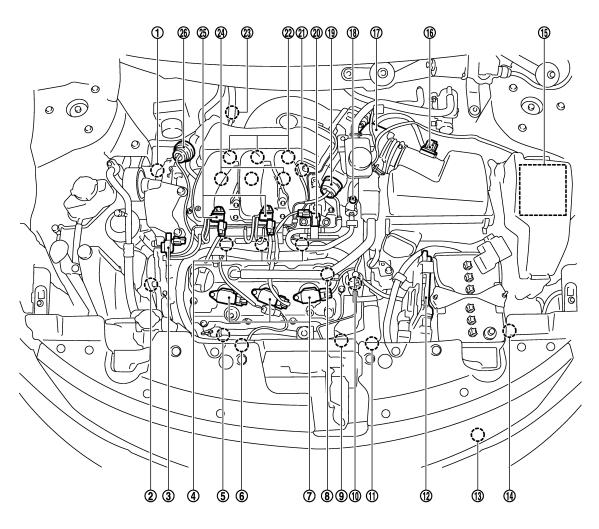

JMBIA1108ZZ

1.	Intake valve timing control solenoid
	valve (bank 1)

- Fuel injector (bank 2) 4.
- 7. Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- Mass air flow sensor (with intake air temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1

- Intake valve timing control solenoid valve (bank 2)
- 5. A/F sensor 1 (bank 2)
- Camshaft position sensor (PHASE) (bank 2)
- 11. Cooling fan motor-1
- Battery current sensor
- 17. Electric throttle control actuator
- 20. EVAP canister purge volume control solenoid valve
- 23. A/F sensor 1 (bank 1)

- 3. Electronic controlled engine mount control solenoid valve
- 6. Cooling fan motor-2
- Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- 21. Camshaft position sensor (PHASE) (bank 1)

EC

D

F


Н

M

Ν


Р

24. Fuel injector (bank 1)

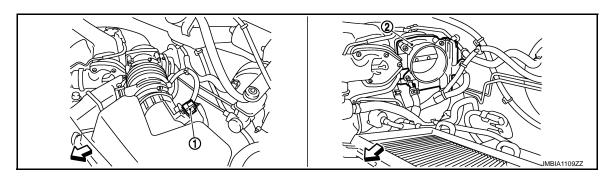


- 1. Mas air flow sensor (with intake air temperature sensor)
- 2. Electric throttle control actuator

⟨
→ : Vehicle front

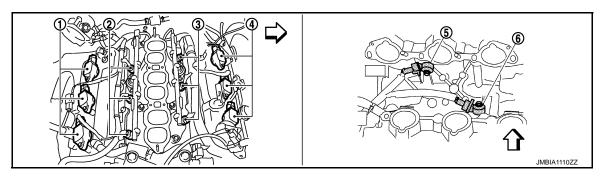


- 1. Ignition coil (with power transistor) and spark plug (bank 1)
- 4. Ignition coil (with power transistor) and spark plug (bank 2)
- : Vehicle front

- 2. Fuel injector (bank 1)
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- 6. Knock sensor (bank 1)

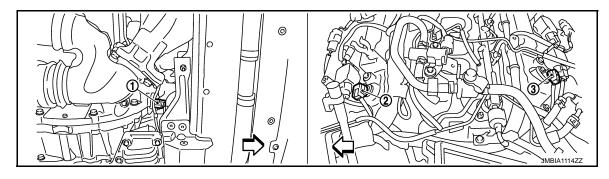

- 1. Crankshaft position sensor (POS)
- 2. Camshaft position sensor (PHASE) (bank 1)
- 3. Camshaft position sensor (PHASE) (bank 2)

⟨
→ : Vehicle front

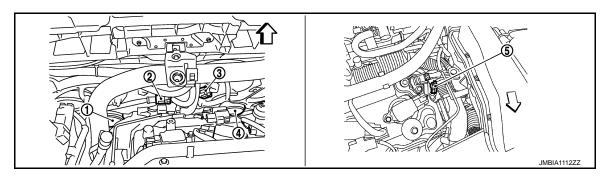

- 1. Cooling fan motor-1
- 2. Cooling fan motor-1 harness connector


Engine coolant temperature sensor

5.

3. Cooling fan motor-1 harness connector

4. Cooling fan motor-2


⟨
⇒ : Vehicle front

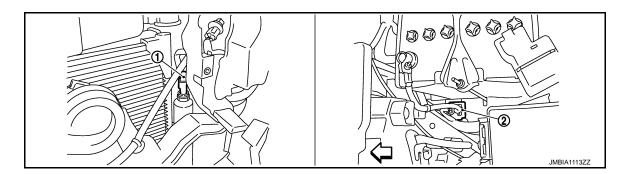

1. Refrigerant pressure sensor

2. Battery current sensor

: Vehicle front

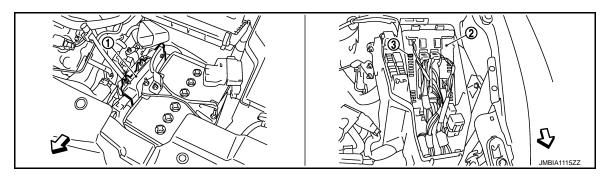

1. ECM

: Vehicle front

2. IPDM E/R

3. Fuel pump fuse

Α

EC

С

D

Е

F

G

Н

.

J

Κ


L


. .

M

Ν


0

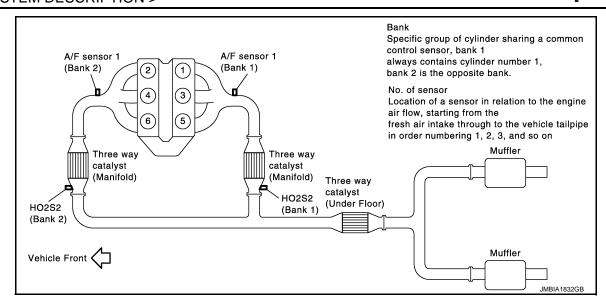

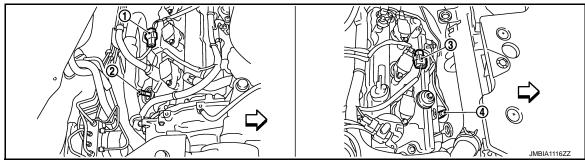


- A/F sensor 1 (bank 1) harness con- 2. A/F sensor 1 (bank 1) nector
- 3. A/F sensor 1 (bank 2) harness connector

- A/F sensor 1 (bank 2)

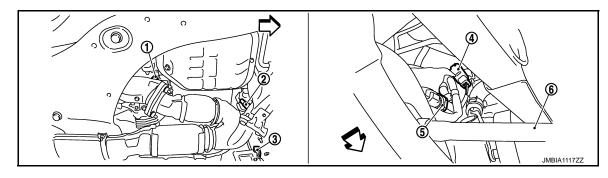

- HO2S2 (bank 1)
- HO2S2 (bank 2) 2.
- HO2S2 (bank 1) harness connector 5.
- Power steering pressure sensor
- HO2S2 (bank 2) harness connector 3.
- 6. Drive shaft (RH)


⟨
□ : Vehicle front

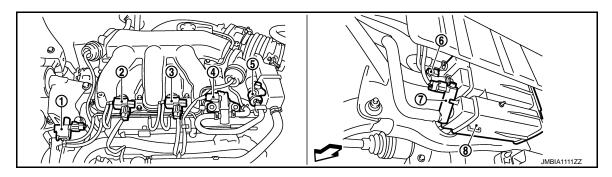


- Electronic controlled engine mount control solenoid valve
- 4. EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve
- ⟨
  □ : Vehicle front

- VIAS control solenoid valve 1
  - EVAP service port
- 8. EVAP canister


- 3. VIAS control solenoid valve 2
- EVAP control system pressure sensor

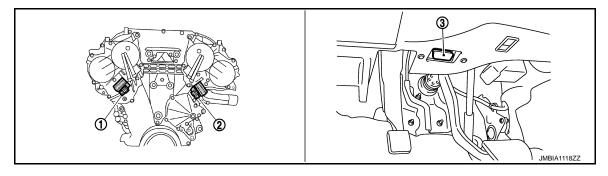

- Intake valve timing control solenoid 2. valve (bank 1)
- . Intake valve timing control solenoid 3. valve (bank 2)
  - Data link connector

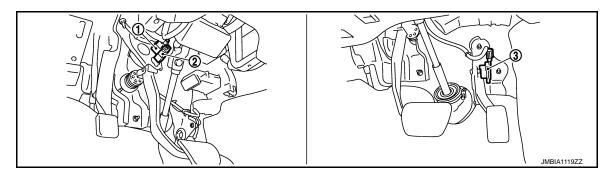

- 1. Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

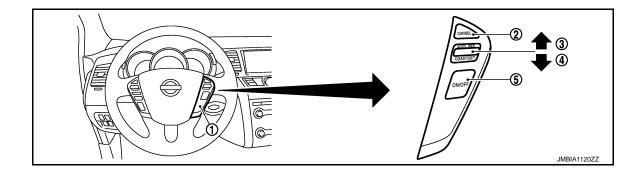

Α

EC

D

Е

F

Н

1

K

M


Ν

0

- 1. ASCD steering switch
- SET/COAST switch
- CANSEL switch MAIN switch

5.

3. RESUME/ACCELERATE switch

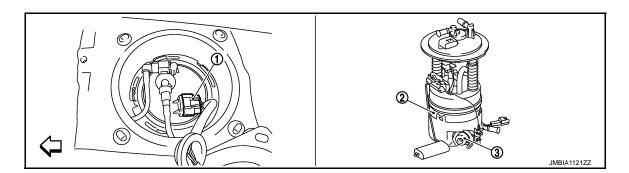

Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

 $\ \ \ \ \ \ \ \ \ \ \$  : Vehicle front

# **Component Description**

INFOID:0000000005536496

Component	Reference
Accelerator pedal position sensor	EC-407, "Description"
Camshaft position sensor (PHASE)	EC-258, "Description"
Crankshaft position sensor (POS)	EC-254, "Description"
Engine coolant temperature sensor	EC-167, "Description"
Ignition signal	EC-445, "Description"
Knock sensor	EC-251, "Description"
Mass air flow sensor	EC-153, "Description"
TCM	EC-346, "Description"
Throttle position sensor	EC-172, "Description"

[VQ35DE]


Α

EC

D

# AIR CONDITIONING CUT CONTROL

System Diagram

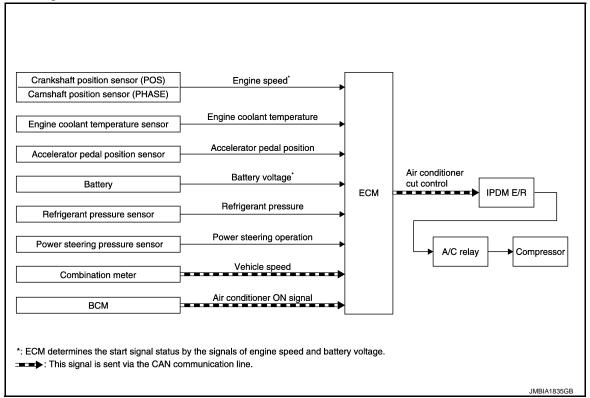

# System Description

#### INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator	
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*2			
Engine coolant temperature sensor	Engine coolant temperature		IPDM E/R ↓ Air conditioner relay	
Accelerator pedal position sensor	Accelerator pedal position			
Battery	Battery voltage*2	Air conditioner		
Refrigerant pressure sensor	Refrigerant pressure	cut control ↓		
Power steering pressure sensor	Power steering operation		Compressor	
Combination meter	Vehicle speed*1			
ВСМ	Air conditioner ON signal*1			

<sup>\*1:</sup> This signal is sent to the ECM via the CAN communication line.

#### SYSTEM DESCRIPTION

This system improves engine operation when the air conditioner is used. Under the following conditions, the air conditioner is turned OFF.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- At high engine speeds.
- When the engine coolant temperature becomes excessively high.
- When operating power steering during low engine speed or low vehicle speed.
- · When engine speed is excessively low.
- When refrigerant pressure is excessively low or high.

INFOID:0000000005536498


Ν

Revision: 2009 September EC-45 2010 Murano

<sup>\*2:</sup> ECM determines the start signal status by the signals of engine speed and battery voltage.

### Component Parts Location

INFOID:0000000005536499

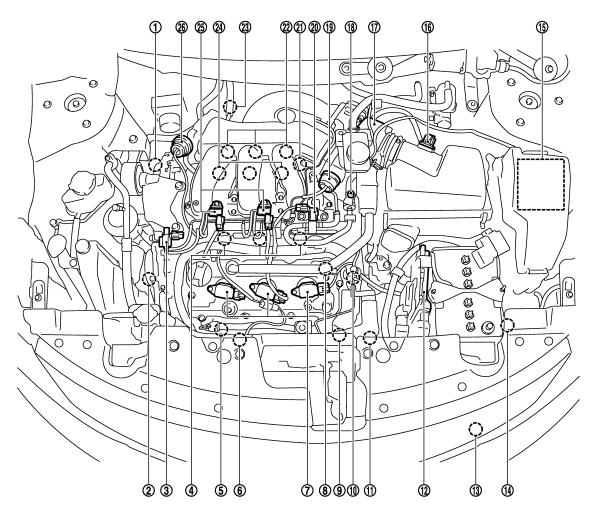


JMBIA1108ZZ

- Intake valve timing control solenoid valve (bank 1)
- Fuel injector (bank 2) 4.
- Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- 16. Mass air flow sensor (with intake air 17. Electric throttle control actuator temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1


- Intake valve timing control solenoid valve (bank 2)
- A/F sensor 1 (bank 2)
- Camshaft position sensor (PHASE) (bank 2)
- 11. Cooling fan motor-1
- 14. Battery current sensor
- solenoid valve
- 23. A/F sensor 1 (bank 1)

- 3. Electronic controlled engine mount control solenoid valve
- Cooling fan motor-2
- 9. Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- 20. EVAP canister purge volume control 21. Camshaft position sensor (PHASE) (bank 1)
  - 24. Fuel injector (bank 1)

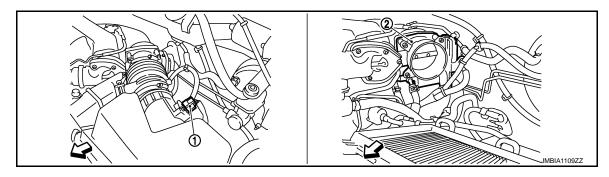


- Mas air flow sensor (with intake air temperature sensor)
- 2. Electric throttle control actuator

⟨
→ : Vehicle front

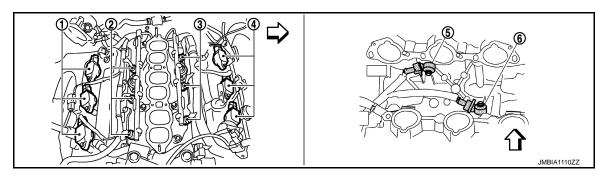

- 1. Ignition coil (with power transistor) and spark plug (bank 1)
- 4. Ignition coil (with power transistor) and spark plug (bank 2)
- 2. Fuel injector (bank 1)
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- 6. Knock sensor (bank 1)

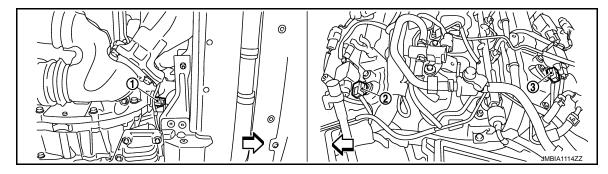

- 1. Crankshaft position sensor (POS)
- Camshaft position sensor (PHASE) (bank 1)
- Camshaft position sensor (PHASE) (bank 2)

: Vehicle front

EC

Α

D

Е

F

Н

J

K

L

M


Ν

0

Р

2010 Murano

2.

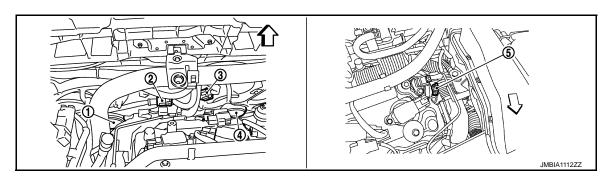


- Cooling fan motor-1 1.
- Cooling fan motor-1 harness con-
- Cooling fan motor-1 harness connector


Cooling fan motor-2

⟨
⇒ : Vehicle front

5. Engine coolant temperature sensor

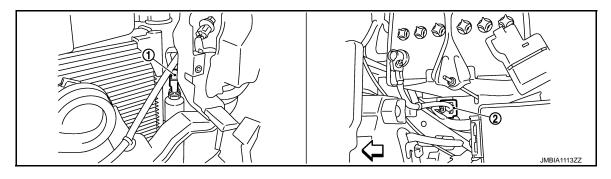



- Refrigerant pressure sensor
- Battery current sensor

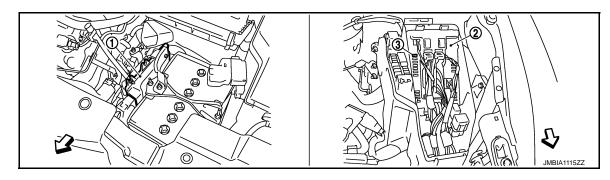

- ECM

2. IPDM E/R 3. Fuel pump fuse

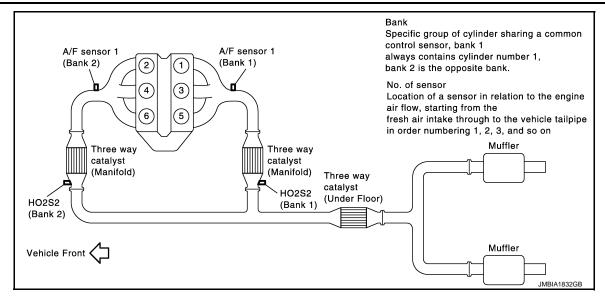


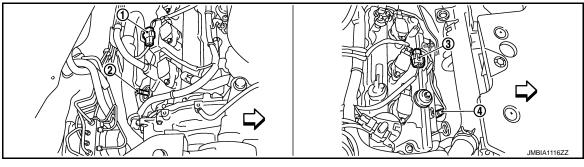

A/F sensor 1 (bank 1) harness con A/F sensor 1 (bank 1) nector

A/F sensor 1 (bank 2) harness connector

- 4. A/F sensor 1 (bank 2)
- : Vehicle front

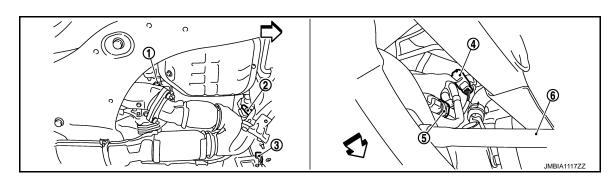

1. HO2S2 (bank 1)

- 2. HO2S2 (bank 2)
- 4. HO2S2 (bank 1) harness connector 5.
- Power steering pressure sensor
- 3. HO2S2 (bank 2) harness connector
- 6. Drive shaft (RH)

: Vehicle front

Α

EC

D

Е

H

G

Н


J

K

M

Ν


0

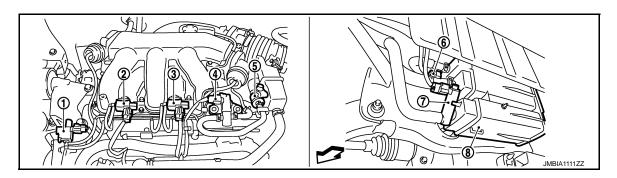


- Electronic controlled engine mount control solenoid valve
- EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve

- VIAS control solenoid valve 1
- EVAP service port
- 3. EVAP canister


- 3. VIAS control solenoid valve 2
- 6. EVAP control system pressure sensor

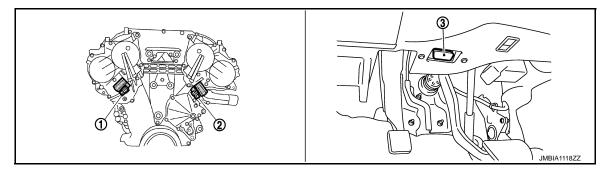

- Intake valve timing control solenoid valve (bank 1)
- Intake valve timing control solenoid 3. valve (bank 2)
  - 3. Data link connector

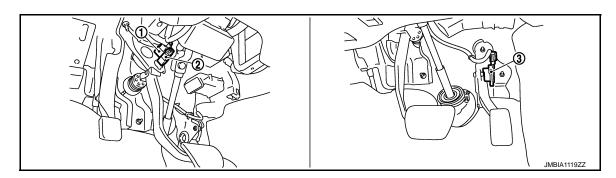

- 1. Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

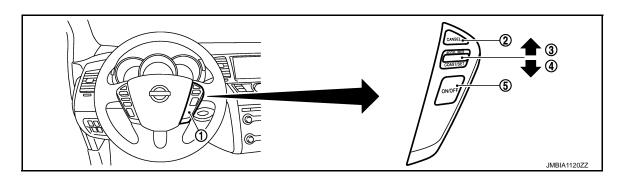

### AIR CONDITIONING CUT CONTROL


# < SYSTEM DESCRIPTION >

- 1. ASCD steering switch
- 4. SET/COAST switch
- CANSEL switch
   MAIN switch

3. RESUME/ACCELERATE switch

Α

[VQ35DE]

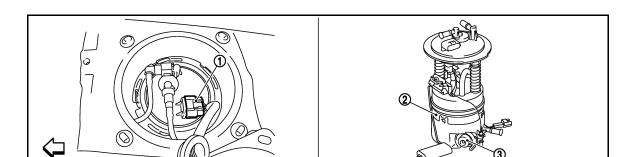

 Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

⟨
→ : Vehicle front

# Component Description

INFOID:0000000005536500

JMBIA1121ZZ

Component	Reference
Accelerator pedal position sensor	EC-407, "Description"
Camshaft position sensor (PHASE)	EC-258, "Description"
Crankshaft position sensor (POS)	EC-254, "Description"
Engine coolant temperature sensor	EC-167, "Description"
Power steering pressure sensor	EC-335, "Description"
Refrigerant pressure sensor	EC-457, "Description"

EC

D

Е

F

G

Н

K

0


Ν

[VQ35DE]

# AUTOMATIC SPEED CONTROL DEVICE (ASCD)

### System Diagram

INFOID:0000000005536501

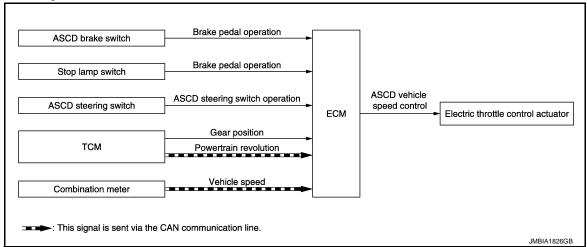

# System Description

INFOID:0000000005536502

#### INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator	
ASCD brake switch	Brake pedal operation			
Stop lamp switch	Brake pedal operation		Electric throttle control	
ASCD steering switch	ASCD steering switch operation	ACCD vahiala anaad aantral		
TOM	Gear position	ASCD vehicle speed control	actuator	
TCM	Powertrain revolution*			
Combination meter	Vehicle speed*			

<sup>\*:</sup> This signal is sent to the ECM via the CAN communication line

#### BASIC ASCD SYSTEM

Refer to Owner's Manual for ASCD operating instructions.

Automatic Speed Control Device (ASCD) allows a driver to keep vehicle at predetermined constant speed without depressing accelerator pedal. Driver can set vehicle speed in advance between approximately 40 km/h (25 MPH) and 144 km/h (89 MPH).

ECM controls throttle angle of electric throttle control actuator to regulate engine speed.

Operation status of ASCD is indicated by CRUISE on combination meter. If any malfunction occurs in the ASCD system, it automatically deactivates control.

#### NOTE:

Always drive vehicle in a safe manner according to traffic conditions and obey all traffic laws.

#### **SET OPERATION**

Press MAIN switch. (The CRUISE on combination meter illuminates.)

When vehicle speed reaches a desired speed between approximately 40 km/h (25 MPH) and 144 km/h (89 MPH), press SET/COAST switch.

#### ACCELERATE OPERATION

If the RESUME/ACCELERATE switch is pressed during cruise control driving, increase the vehicle speed until the switch is released or vehicle speed reaches maximum speed controlled by the system. And then ASCD will maintain the new set speed.

#### **CANCEL OPERATION**

When any of following conditions exist, cruise operation will be canceled.

- CANCEL switch is pressed
- More than 2 switches on ASCD steering switch are pressed at the same time (Set speed will be cleared)
- · Brake pedal is depressed

### **AUTOMATIC SPEED CONTROL DEVICE (ASCD)**

< SYSTEM DESCRIPTION > [VQ35DE]

- Selector lever position changed to N, P or R
- Vehicle speed decreased to 13 km/h (8 MPH) lower than the set speed
- TCS system is operated
- CVT control system has a malfunction. Refer to EC-382, "Description".
- Engine coolant temperature is slightly higher than the normal operating temperature

When the ECM detects any of the following conditions, the ECM will cancel the cruise operation and inform the driver by blinking indicator lamp.

Malfunction for some self-diagnoses regarding ASCD control: CRUISE will blink quickly.

If MAIN switch is turned to OFF while ASCD is activated, all of ASCD operations will be canceled and vehicle speed memory will be erased.

#### **COAST OPERATION**


When the SET/COAST switch is pressed during cruise control driving, decrease vehicle set speed until the switch is released. And then ASCD will maintain the new set speed.

#### RESUME OPERATION

When the RESUME/ACCELERATE switch is pressed after canceling operation other than pressing the MAIN switch is performed, vehicle speed will return to last set speed. To resume vehicle set speed, vehicle condition must meet following conditions.

- Brake pedal is released
- Selector lever position is other than P and N
- Vehicle speed is greater than 40 km/h (25 MPH) and less than 144 km/h (89 MPH)

### Component Parts Location

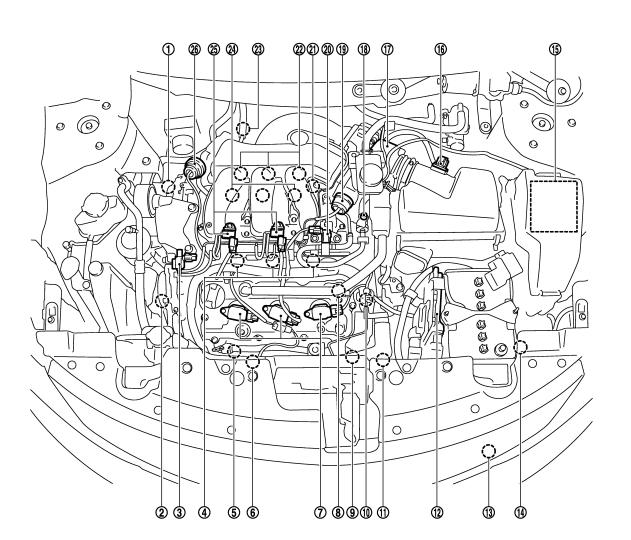

Е

D

Α

EC

F

INFOID:0000000005536503

J

M

Ν

0


Р

Revision: 2009 September EC-53 2010 Murano

- Intake valve timing control solenoid valve (bank 1)
- 4. Fuel injector (bank 2)
- Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- Mass air flow sensor (with intake air temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1


- Intake valve timing control solenoid valve (bank 2)
- A/F sensor 1 (bank 2) 5.
- 8. Camshaft position sensor (PHASE) (bank 2)
- 11. Cooling fan motor-1
- 14. Battery current sensor
- 17. Electric throttle control actuator
- 20. EVAP canister purge volume control 21. Camshaft position sensor (PHASE) solenoid valve
- 23. A/F sensor 1 (bank 1)

- 3. Electronic controlled engine mount control solenoid valve
- Cooling fan motor-2
- 9. Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- (bank 1)
- 24. Fuel injector (bank 1)

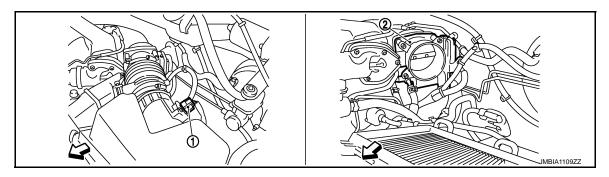


- Mas air flow sensor (with intake air temperature sensor)
- Electric throttle control actuator

: Vehicle front

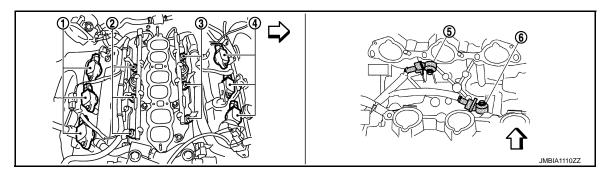


- Ignition coil (with power transistor) and spark plug (bank 1)
- Ignition coil (with power transistor) and spark plug (bank 2)
- : Vehicle front

- Fuel injector (bank 1) 2.
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- Knock sensor (bank 1) 6.

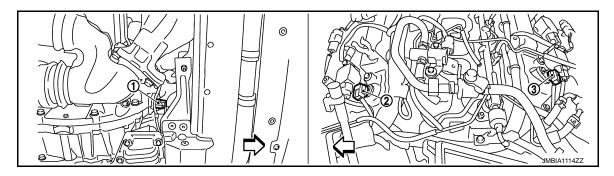

- 1. Crankshaft position sensor (POS)
- Camshaft position sensor (PHASE) 3. (bank 1)
- Camshaft position sensor (PHASE) (bank 2)

⟨
→ : Vehicle front

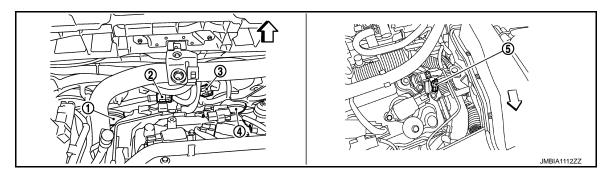


- 1. Cooling fan motor-1
- Cooling fan motor-1 harness connector

Engine coolant temperature sensor

5.


3. Cooling fan motor-1 harness connector

4. Cooling fan motor-2

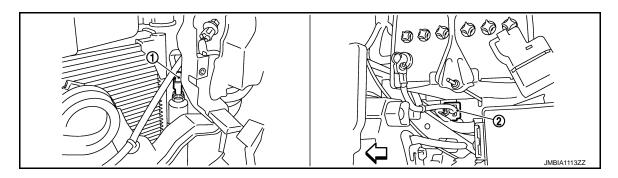

- Refrigerant pressure sensor
- 2. Battery current sensor

: Vehicle front

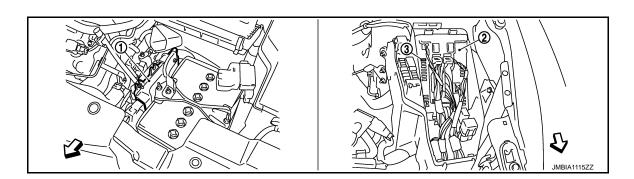

А

EC

D

Е

F

G

Н

J

K

L

M


Ν


0

1. ECM

2. IPDM E/R


3. Fuel pump fuse

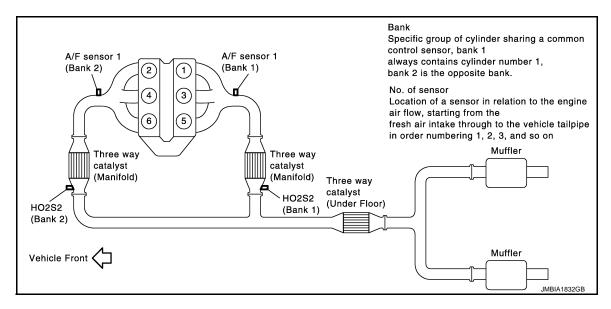

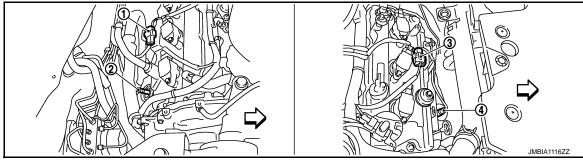

- A/F sensor 1 (bank 1) harness con A/F sensor 1 (bank 1) nector
- 3. A/F sensor 1 (bank 2) harness connector

- 4. A/F sensor 1 (bank 2)
- ⟨
  → : Vehicle front

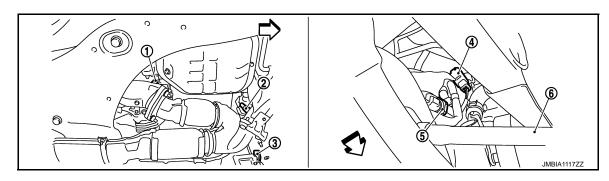


1. HO2S2 (bank 1)

2. HO2S2 (bank 2)

3. HO2S2 (bank 2) harness connector

- 4. HO2S2 (bank 1) harness connector 5.
  - Power steering pressure sensor
- 6. Drive shaft (RH)


: Vehicle front

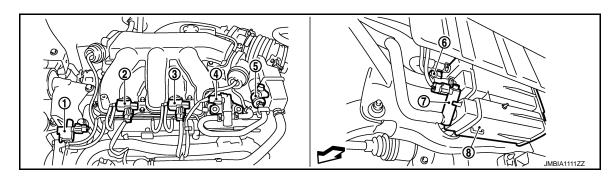


- Electronic controlled engine mount control solenoid valve
- 4. EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve
- ⟨
  □ : Vehicle front

- VIAS control solenoid valve 1
  - EVAP service port
- 8. EVAP canister

- 3. VIAS control solenoid valve 2
- EVAP control system pressure sensor

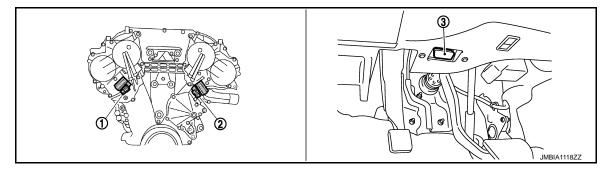


- Intake valve timing control solenoid 2. valve (bank 1)
- Intake valve timing control solenoid 3. valve (bank 2)

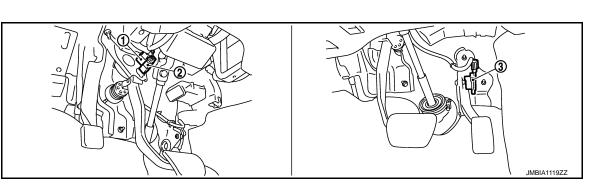

- 1. Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

Data link connector

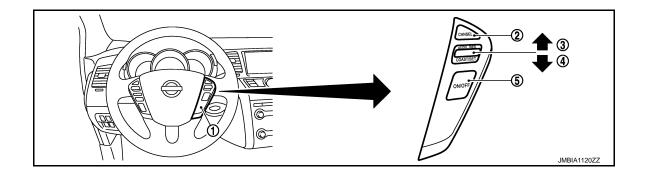

Α

EC

D

Е

F

G

Н

ı

J

K

L

M

Ν

0

# **AUTOMATIC SPEED CONTROL DEVICE (ASCD)**


# < SYSTEM DESCRIPTION >

[VQ35DE]

- ASCD steering switch 1.
- 2. CANSEL switch

3. RESUME/ACCELERATE switch

- SET/COAST switch
- 5. MAIN switch

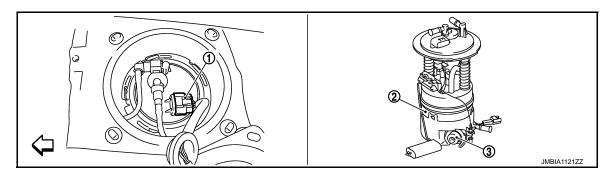

- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector
- $\ \ \ \ \ \ \ \ \ \ \$  : Vehicle front

# Component Description

INFOID:0000000005536504

Component	Reference
ASCD brake switch	EC-374, "Description"
ASCD indicator	EC-427, "Description"
ASCD steering switch	EC-371, "Description"
Electric throttle control actuator	EC-405, "Description"
Stop lamp switch	EC-393, "Description"

### **CAN COMMUNICATION**

< SYSTEM DESCRIPTION >

[VQ35DE]

### **CAN COMMUNICATION**

## System Description

INFOID:0000000005536505

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Refer to LAN-27, "CAN Communication Signal Chart", about CAN communication for detail.

EC

Α

Е

D

F

G

Н

.

K

L

M


Ν

0

### **COOLING FAN CONTROL**

# System Diagram

INFOID:0000000005536506

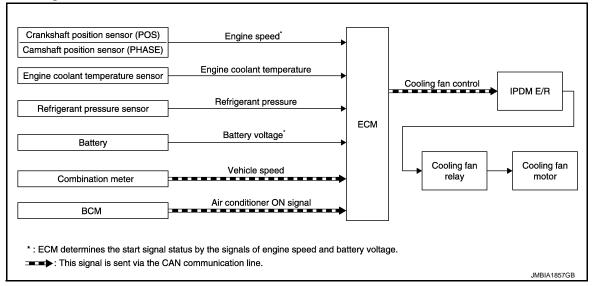

### System Description

INFOID:0000000005536507

#### INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*1 Piston position		IPDM E/R ↓ Cooling fan relay
Engine coolant temperature sensor	Engine coolant temperature		
Refrigerant pressure sensor	Refrigerant pressure	Cooling fan	
Battery	Battery voltage*1	control	<b>1</b>
Combination meter	Vehicle speed* <sup>2</sup>		Cooling fan motor
ВСМ	Air conditioner ON signal*2		


<sup>\*1:</sup> The ECM determines the start signal status by the signals of engine speed and battery voltage.


#### SYSTEM DESCRIPTION

The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature, refrigerant pressure, and air conditioner ON signal. The control system has 4-step control [HIGH/MIDDLE/LOW/OFF].

<sup>\*2:</sup> This signal is sent to ECM via the CAN communication line.

[VQ35DE]

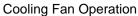

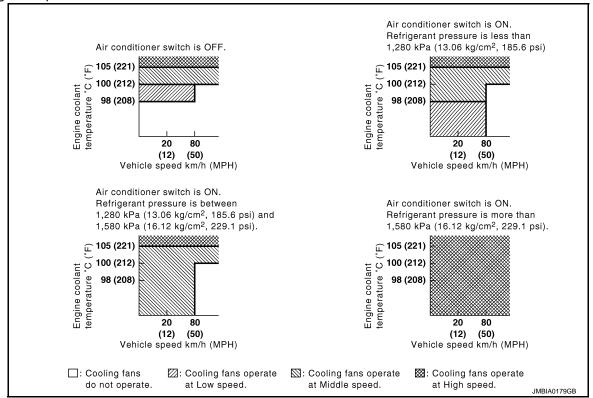

Cooling Fan Relay Operation

The ECM controls cooling fan relays in the IPDM E/R through CAN communication line.

Cooling for speed	Cooling fan relay		
Cooling fan speed	1	2	3
Stop (OFF)	OFF	OFF	OFF
Low (LOW)	ON	OFF	OFF
Middle (MID)	OFF	ON	OFF
High (HI)	OFF	ON	ON

Α

EC

D

Е

F

G

Н

K

L

M

Ν


0

Р

2010 Murano

## Component Parts Location

INFOID:0000000005536508

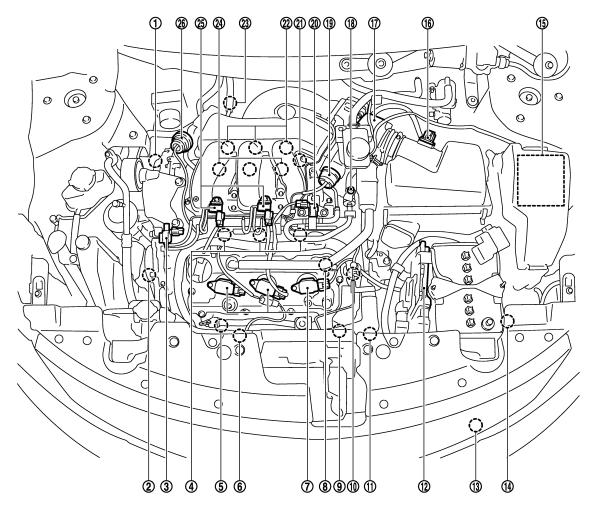


JMBIA1108ZZ

- Intake valve timing control solenoid valve (bank 1)
- Fuel injector (bank 2) 4.
- Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- 16. Mass air flow sensor (with intake air 17. Electric throttle control actuator temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1


- Intake valve timing control solenoid valve (bank 2)
- A/F sensor 1 (bank 2)
- Camshaft position sensor (PHASE) (bank 2)
- 11. Cooling fan motor-1
- 14. Battery current sensor
- solenoid valve
- 23. A/F sensor 1 (bank 1)

- 3. Electronic controlled engine mount control solenoid valve
- Cooling fan motor-2
- 9. Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- 20. EVAP canister purge volume control 21. Camshaft position sensor (PHASE) (bank 1)
  - 24. Fuel injector (bank 1)

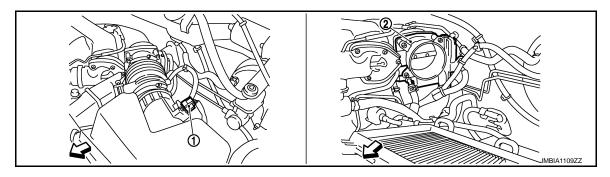


- Mas air flow sensor (with intake air temperature sensor)
- 2. Electric throttle control actuator

⟨
→ : Vehicle front

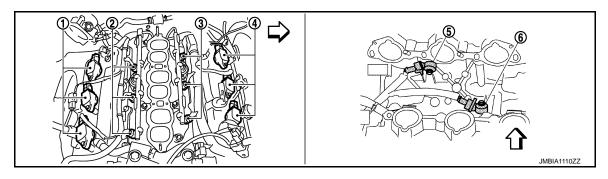

- 1. Ignition coil (with power transistor) and spark plug (bank 1)
- 4. Ignition coil (with power transistor) and spark plug (bank 2)
- 2. Fuel injector (bank 1)
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- 6. Knock sensor (bank 1)

: Vehicle front

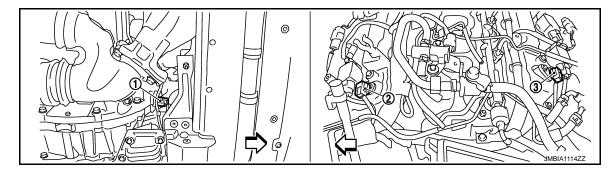

- 1. Crankshaft position sensor (POS)
- 2. Camshaft position sensor (PHASE) (bank 1)
- 3. Camshaft position sensor (PHASE) (bank 2)

: Vehicle front

EC

Α

D

Е

F

G

Н

ı

J


Κ

L

M

Ν

0

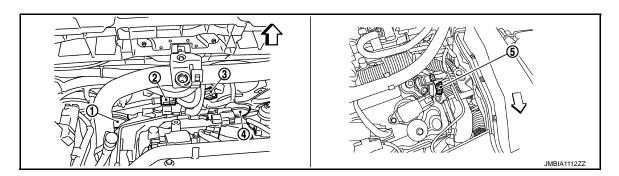

- Cooling fan motor-1 1.
- Cooling fan motor-1 harness connector


Engine coolant temperature sensor

5.

Cooling fan motor-1 harness connector


Cooling fan motor-2

⟨
⇒ : Vehicle front

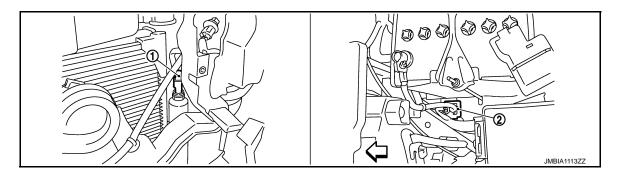


- Refrigerant pressure sensor


Battery current sensor

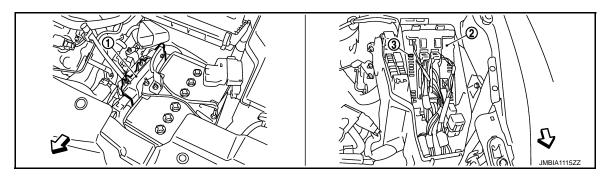

- ECM
- : Vehicle front

2. IPDM E/R 3. Fuel pump fuse

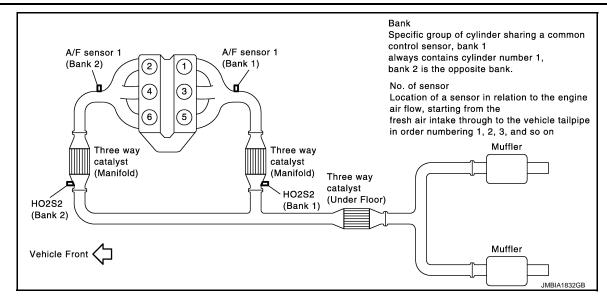


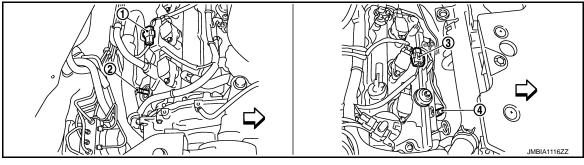

A/F sensor 1 (bank 1) harness con A/F sensor 1 (bank 1) nector

A/F sensor 1 (bank 2) harness connector

- 4. A/F sensor 1 (bank 2)
- : Vehicle front

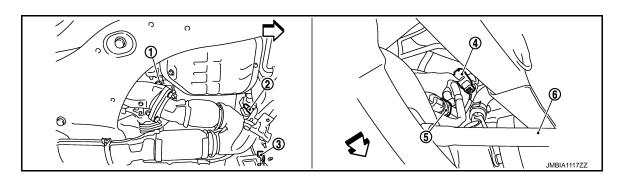

- 1. HO2S2 (bank 1)
- 2. HO2S2 (bank 2)
- 4. HO2S2 (bank 1) harness connector 5.
- Power steering pressure sensor
- 3. HO2S2 (bank 2) harness connector
- 6. Drive shaft (RH)

: Vehicle front

Α

EC

D

Е

G

Н

J

K

L


M

Ν

0

Р


2010 Murano

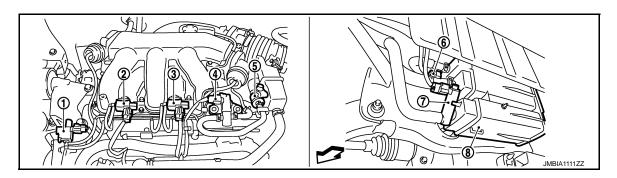


- Electronic controlled engine mount control solenoid valve
- 4. EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve

- VIAS control solenoid valve 1
- EVAP service port
- 8. EVAP canister


- 3. VIAS control solenoid valve 2
- 6. EVAP control system pressure sen-

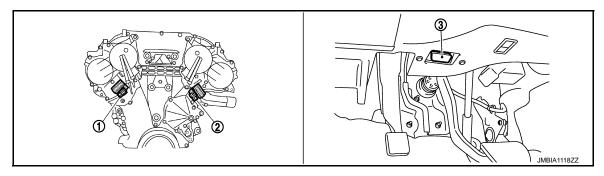

- Intake valve timing control solenoid valve (bank 1)
- Intake valve timing control solenoid 3. valve (bank 2)
  - 3. Data link connector

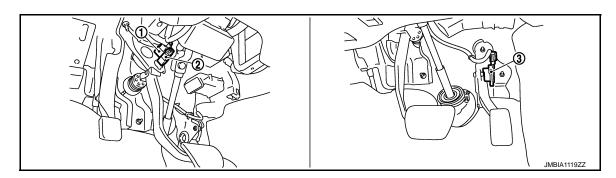

- Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

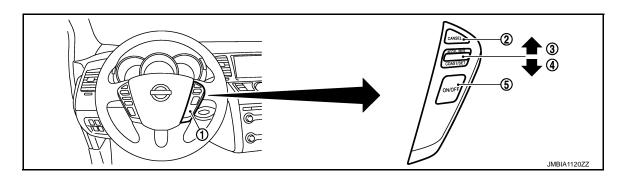

Α

EC

D

Е

F


G

Н

- 1. ASCD steering switch
- SET/COAST switch
- 2. CANSEL switch MAIN switch

5.

RESUME/ACCELERATE switch

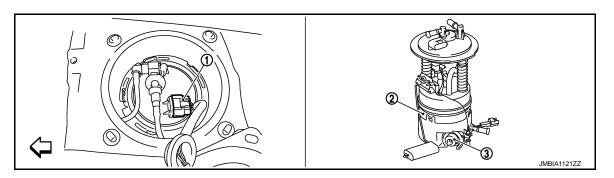

Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

⟨
→ : Vehicle front

# Component Description

INFOID:0000000005536509

Component	Reference
Camshaft position sensor (PHASE)	EC-258, "Description"
Cooling fan motor	EC-428, "Description"
Crankshaft position sensor (POS)	EC-254, "Description"
Engine coolant temperature sensor	EC-167, "Description"
Refrigerant pressure sensor	EC-457, "Description"

K


Ν

0

[VQ35DE]

## **ELECTRONIC CONTROLLED ENGINE MOUNT**

System Diagram

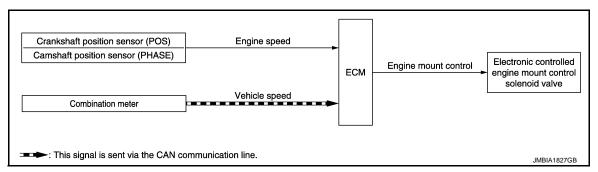

# **System Description**

INFOID:0000000005536511

### INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed	Engine mount	Electronic controlled engine mount control solenoid
Combination meter	Vehicle speed*	Control	valve


<sup>\*:</sup> This signal is sent to the ECM via the CAN communication line.

#### SYSTEM DESCRIPTION

The ECM controls the engine mount operation corresponding to the engine speed. The control system has a 2-step control [Soft/Hard]

Vehicle condition	Engine mount control
Engine speed: Below 950 rpm	Soft
Engine speed: Above 950 rpm	Hard

### ELECTRONIC CONTROLLED ENGINE MOUNT LINE DRAWING

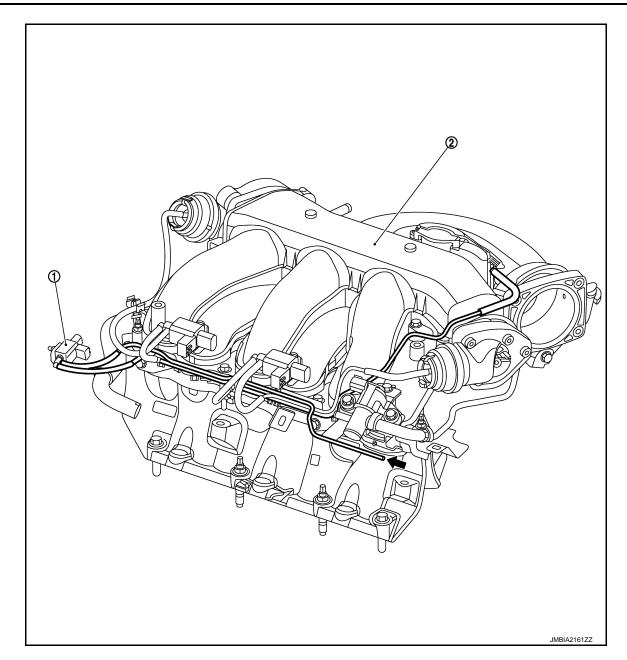

 Electronic controlled engine mount 2. Intake manifold collector control solenoid valve

: From next figure

EC

Α

D

Е

G

Н

r\


\_

IVI

Ν

0

2010 Murano

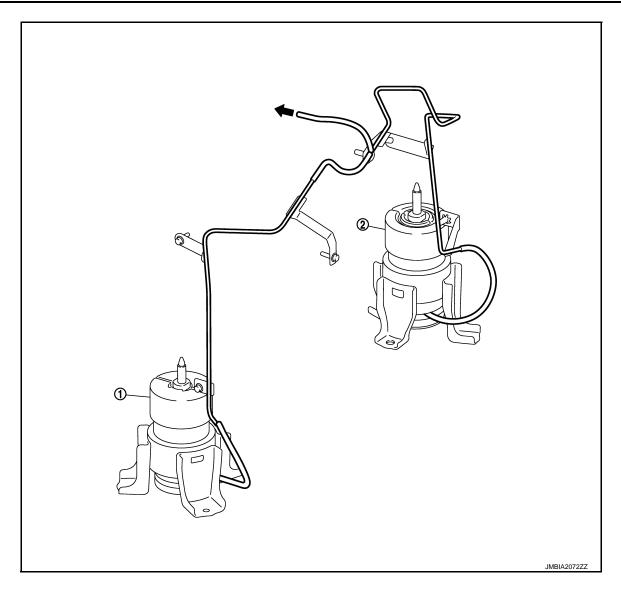


- 1. Front electronic controlled engine mount 2. Rear electronic controlled engine mount
- : To previous figure

#### NOTE:

Do not use soapy water or any type of solvent while installing vacuum hose.

# Component Parts Location

INFOID:0000000005536512

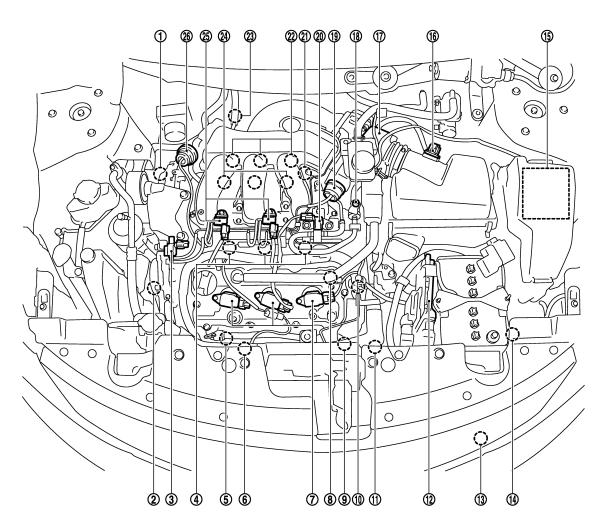

JMBIA110877

- Intake valve timing control solenoid valve (bank 1)
- Fuel injector (bank 2) 4.
- Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- 16. Mass air flow sensor (with intake air temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1

- Intake valve timing control solenoid valve (bank 2)
- A/F sensor 1 (bank 2)
- Camshaft position sensor (PHASE) (bank 2)
- 11. Cooling fan motor-1
- Battery current sensor
- 17. Electric throttle control actuator
- 20. EVAP canister purge volume control 21. Camshaft position sensor (PHASE) solenoid valve
- 23. A/F sensor 1 (bank 1)

- 3. Electronic controlled engine mount control solenoid valve
- Cooling fan motor-2
- 9. Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- (bank 1)
- 24. Fuel injector (bank 1)

EC

Α

D


Е

Н

K


M

Ν

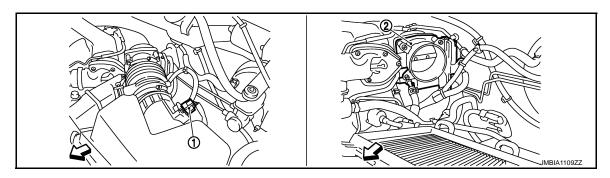


- 1. Mas air flow sensor (with intake air temperature sensor)
- 2. Electric throttle control actuator

⟨
→ : Vehicle front

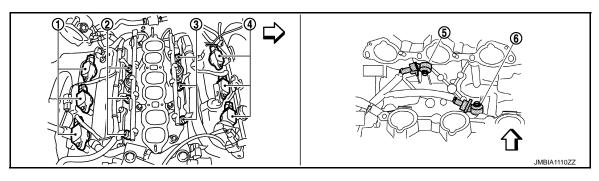


- 1. Ignition coil (with power transistor) and spark plug (bank 1)
- 4. Ignition coil (with power transistor) and spark plug (bank 2)
- : Vehicle front

- 2. Fuel injector (bank 1)
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- 6. Knock sensor (bank 1)

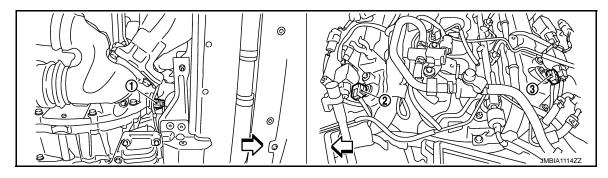

- 1. Crankshaft position sensor (POS)
- Camshaft position sensor (PHASE) (bank 1)
- 3. Camshaft position sensor (PHASE) (bank 2)

⟨
→ : Vehicle front

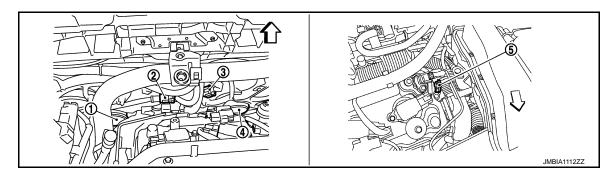

- 1. Cooling fan motor-1
- 2. Cooling fan motor-1 harness connector


Engine coolant temperature sensor

5.


3. Cooling fan motor-1 harness connector

4. Cooling fan motor-2

⟨
⇒ : Vehicle front

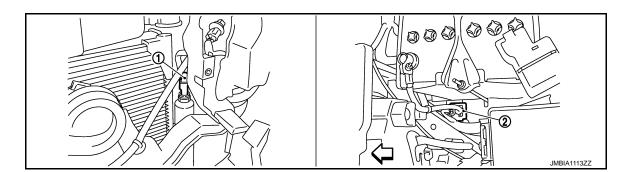

- 1. Refrigerant pressure sensor
- 2. Battery current sensor

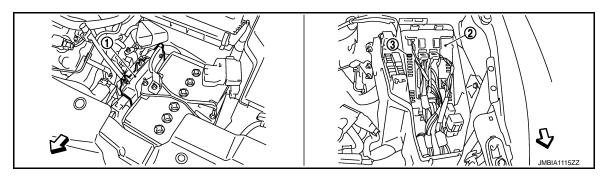

1. ECM

2. IPDM E/R

3. Fuel pump fuse

: Vehicle front

EC

Α

D

Е

F

G

Н


.


K

M

Ν


0

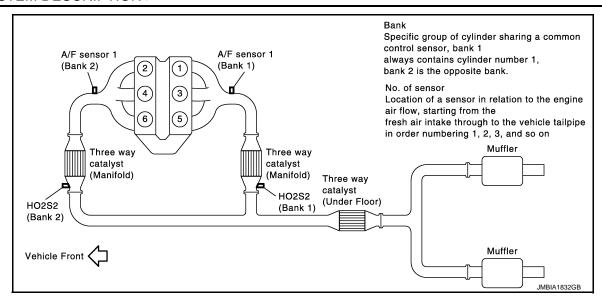

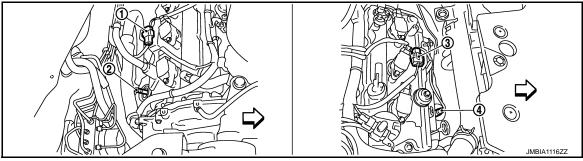

- A/F sensor 1 (bank 1) harness con- 2. A/F sensor 1 (bank 1) nector
- 3. A/F sensor 1 (bank 2) harness connector


- A/F sensor 1 (bank 2)

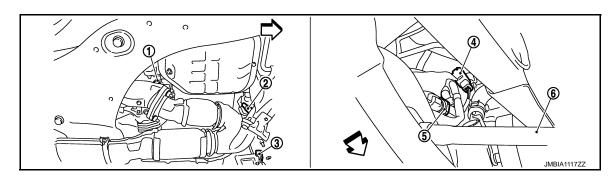

HO2S2 (bank 1)

- HO2S2 (bank 2)
- HO2S2 (bank 1) harness connector 5.
- Power steering pressure sensor
- HO2S2 (bank 2) harness connector 3.
- 6. Drive shaft (RH)


⟨
□ : Vehicle front

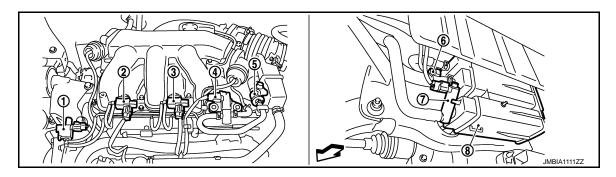


- Electronic controlled engine mount control solenoid valve
- 4. EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve

- VIAS control solenoid valve 1
  - EVAP service port
- 8. EVAP canister

- 3. VIAS control solenoid valve 2
- EVAP control system pressure sensor

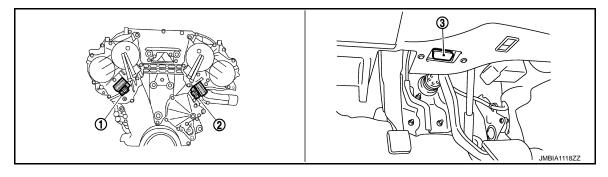


- Intake valve timing control solenoid 2. valve (bank 1)
- Intake valve timing control solenoid 3. valve (bank 2)

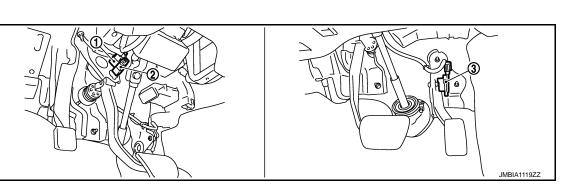

- 1. Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

Data link connector

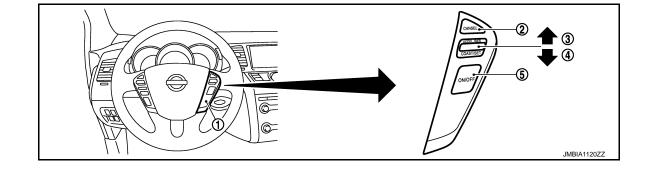

Α

EC

D

Е

F

G

Н

J

K

L

M

Ν

0

# **ELECTRONIC CONTROLLED ENGINE MOUNT**


1. ASCD steering switch

< SYSTEM DESCRIPTION >

2. CANSEL switch 3. RESUME/ACCELERATE switch

SET/COAST switch

5. MAIN switch

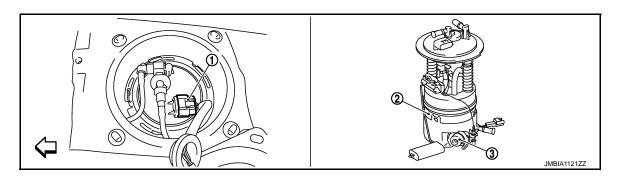

Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

 $\ \ \ \ \ \ \ \ \ \ \$  : Vehicle front

# Component Description

INFOID:0000000005536513

[VQ35DE]

Component	Reference
Camshaft position sensor (PHASE)	EC-258, "Description"
Crankshaft position sensor (POS)	EC-254, "Description"
Electronic controlled engine mount control solenoid valve	EC-435, "Description"

[VQ35DE]

Α


EC

D

Е

# **EVAPORATIVE EMISSION SYSTEM**

System Diagram

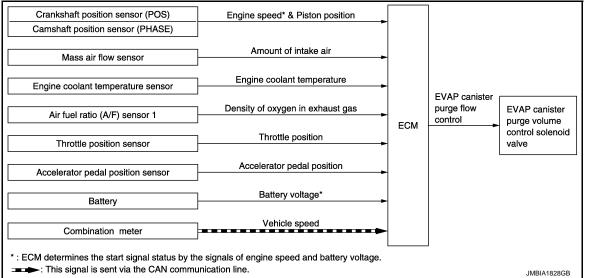

# System Description

### INFOID:0000000005536515

## INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator		
Crankshaft position sensor (POS)	Engine speed*1				
Camshaft position sensor (PHASE)	Piston position				
Mass air flow sensor	Amount of intake air				
Engine coolant temperature sensor	Engine coolant temperature				
Air fuel ratio (A/F) sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	EVAP canister purge flow control	EVAP canister purge vol- ume control solenoid valve		
Throttle position sensor	Throttle position				
Accelerator pedal position sensor	Accelerator pedal position				
Battery	Battery voltage*1				
Combination meter	Vehicle speed*2				

<sup>\*1:</sup> ECM determines the start signal status by the signals of engine speed and battery voltage.

.


 $\cap$ 

Ν

P

<sup>\*2:</sup> This signal is sent to the ECM via the CAN communication line.

## SYSTEM DESCRIPTION

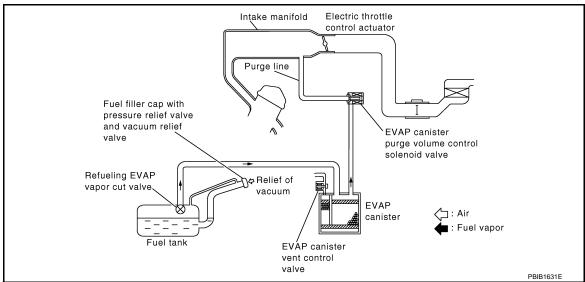


The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.

The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank.

The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases.

EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating and idling.

**EVAPORATIVE EMISSION LINE DRAWING** 

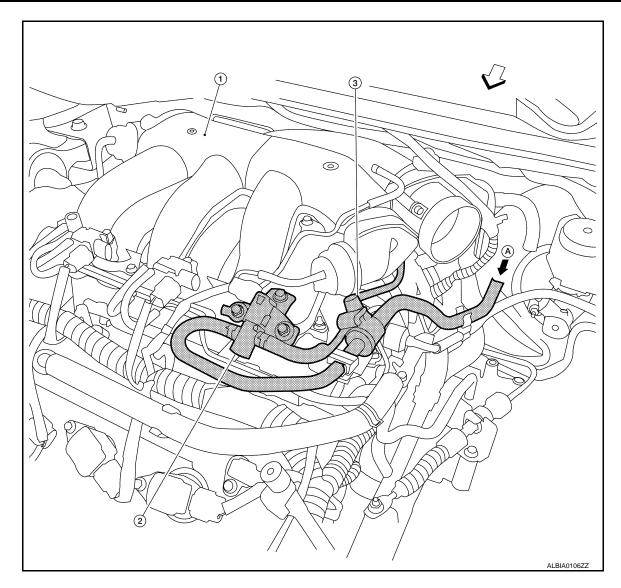

1. Intake manifold collector

A. From EVAP canister

2. EVAP canister purge volume control 3. EVAP service port solenoid valve

Α

EC

С

D

Е

F

G

Н

l


J

K

M

Ν

0

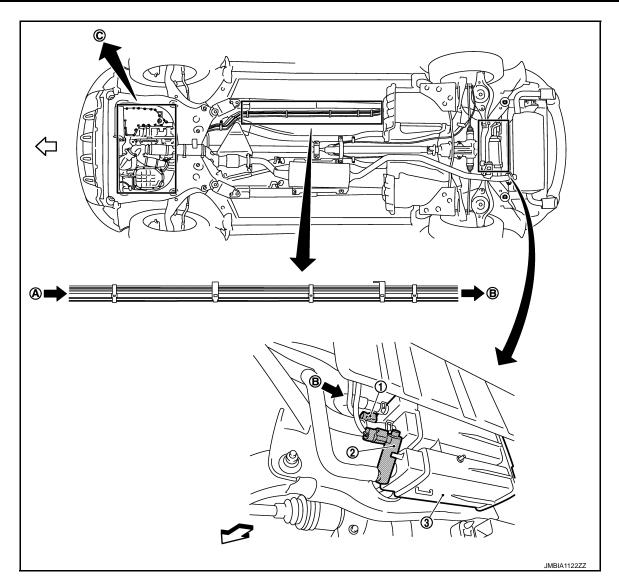

- 1. EVAP control system pressure sen- 2. EVAP canister vent control valve
- 3. EVAP canister

- A. To previous figure
- B. To/From B in this figure
- C. Refer to previous figure

# 


## NOTE:

Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

[VQ35DE]

# Component Parts Location

INFOID:0000000005536516

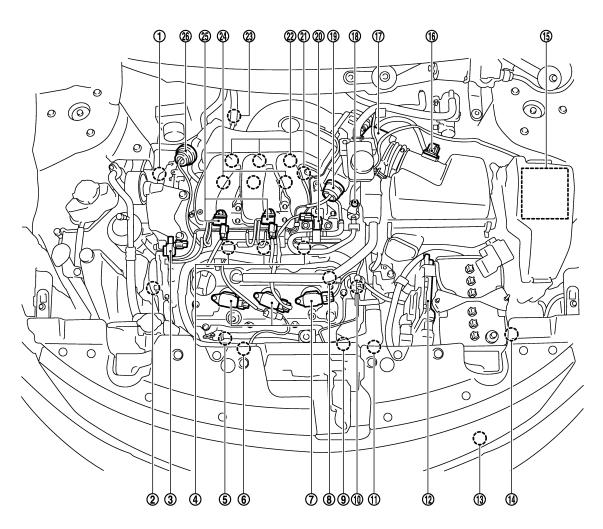

JMBIA110877

- Intake valve timing control solenoid valve (bank 1)
- Fuel injector (bank 2) 4.
- Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- 16. Mass air flow sensor (with intake air temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1

- Intake valve timing control solenoid 2. valve (bank 2)
- A/F sensor 1 (bank 2)
- Camshaft position sensor (PHASE) (bank 2)
- 11. Cooling fan motor-1
- Battery current sensor
- 17. Electric throttle control actuator
  - solenoid valve
- 23. A/F sensor 1 (bank 1)

- 3. Electronic controlled engine mount control solenoid valve
- Cooling fan motor-2
- 9. Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- 20. EVAP canister purge volume control 21. Camshaft position sensor (PHASE) (bank 1)
  - 24. Fuel injector (bank 1)

EC

Α

D


Е

Н

K


M

Ν

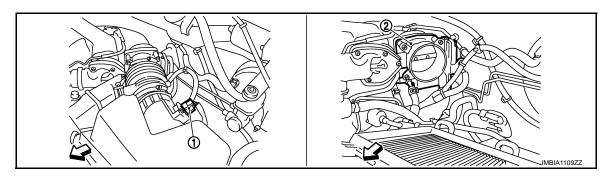


- 1. Mas air flow sensor (with intake air temperature sensor)
- 2. Electric throttle control actuator

⟨
→ : Vehicle front

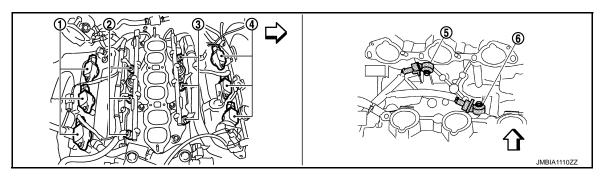

- 1. Ignition coil (with power transistor) and spark plug (bank 1)
- 4. Ignition coil (with power transistor) and spark plug (bank 2)
- : Vehicle front

- 2. Fuel injector (bank 1)
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- 6. Knock sensor (bank 1)

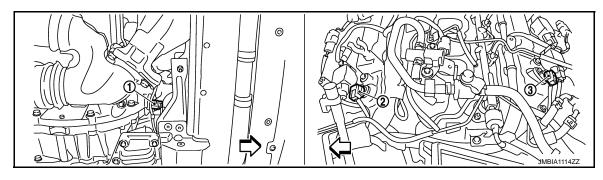

- 1. Crankshaft position sensor (POS)
- 2. Camshaft position sensor (PHASE) (bank 1)
- 3. Camshaft position sensor (PHASE) (bank 2)

⟨
→ : Vehicle front

Α

EC

D


Е

F

G

Н

K

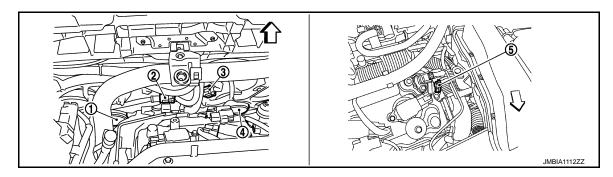

- 1. Cooling fan motor-1
- 2. Cooling fan motor-1 harness connector


Engine coolant temperature sensor

5.

 Cooling fan motor-1 harness connector

4. Cooling fan motor-2


⟨
⇒ : Vehicle front

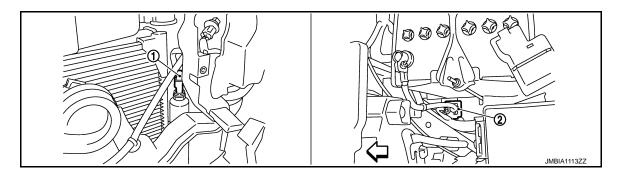

1. Refrigerant pressure sensor

2. Battery current sensor

: Vehicle front

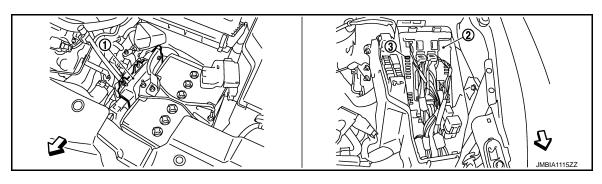

1. ECM

2. IPDM E/R


3. Fuel pump fuse


: Vehicle front

Ν

M


0

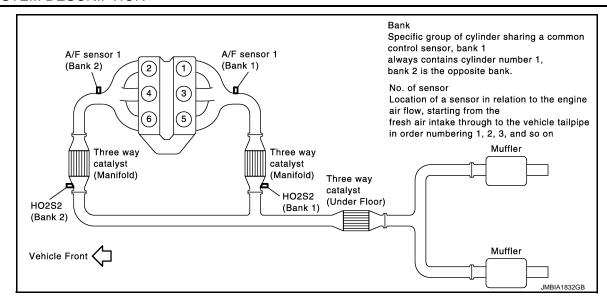

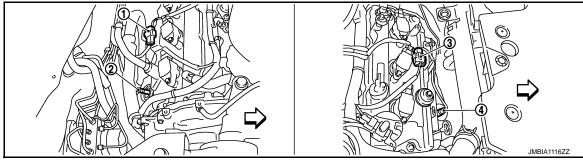

- A/F sensor 1 (bank 1) harness con- 2. A/F sensor 1 (bank 1) nector
- 3. A/F sensor 1 (bank 2) harness connector

- A/F sensor 1 (bank 2)

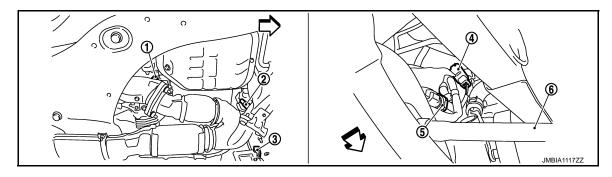


- HO2S2 (bank 1)
- HO2S2 (bank 2) 2.

- 6. Drive shaft (RH)

3.

HO2S2 (bank 2) harness connector


HO2S2 (bank 1) harness connector 5. Power steering pressure sensor ⟨
□ : Vehicle front

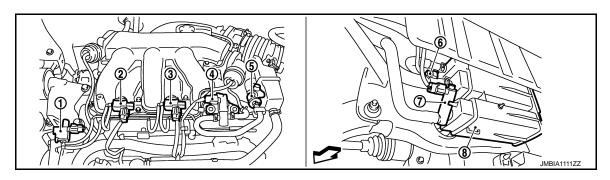


- Electronic controlled engine mount control solenoid valve
- 4. EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve

- VIAS control solenoid valve 1
  - EVAP service port
- 8. EVAP canister


- 3. VIAS control solenoid valve 2
- EVAP control system pressure sensor

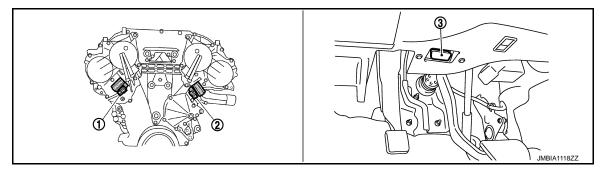

- Intake valve timing control solenoid 2. valve (bank 1)
- Intake valve timing control solenoid 3. valve (bank 2)
  - Data link connector

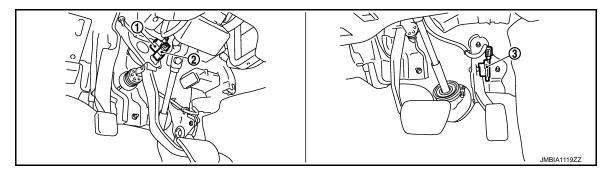

- 1. Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

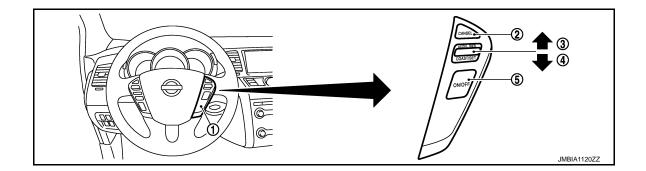

Α

EC

D

Е

F

Н

-

J

K

L

M


Ν

0

- 1. ASCD steering switch
- SET/COAST switch
- 2. CANSEL switch MAIN switch

5.

3. RESUME/ACCELERATE switch

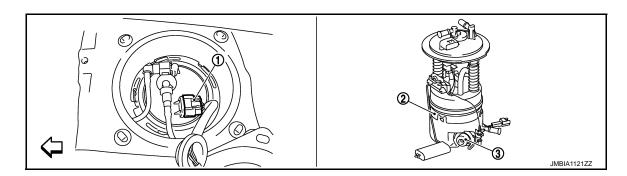

Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

 $\ \ \ \ \ \ \ \ \ \ \$  : Vehicle front

# Component Description

INFOID:0000000005536517


Component	Reference
A/F sensor 1	EC-182, "Description"
Accelerator pedal position sensor	EC-407, "Description"
Camshaft position sensor (PHASE)	EC-258, "Description"
Crankshaft position sensor (POS)	EC-254, "Description"
Engine coolant temperature sensor	EC-167, "Description"
EVAP canister purge volume control solenoid valve	EC-278, "Description"
EVAP control system pressure sensor	EC-294, "Description"
Fuel tank temperature sensor	EC-230, "Description"
Mass air flow sensor	EC-153, "Description"
Throttle position sensor	EC-172, "Description"

[VQ35DE]

# INTAKE VALVE TIMING CONTROL

# System Diagram

INFOID:0000000005536518

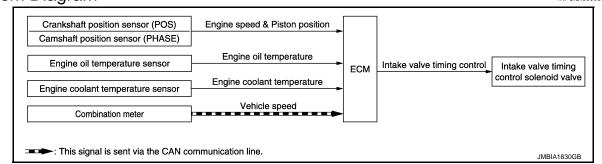

# System Description


### INFOID:0000000005536519

## INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator	
Crankshaft position sensor (POS)	Engine speed and piston position			
Camshaft position sensor (PHASE)	Engine speed and piston position		Intake valve timing control solenoid valve	
Engine oil temperature sensor	Engine oil temperature	Intake valve timing control		
Engine coolant temperature sensor	Engine coolant temperature			
Combination meter	Vehicle speed*			

<sup>\*:</sup> This signal is sent to the ECM via the CAN communication line

### SYSTEM DESCRIPTION

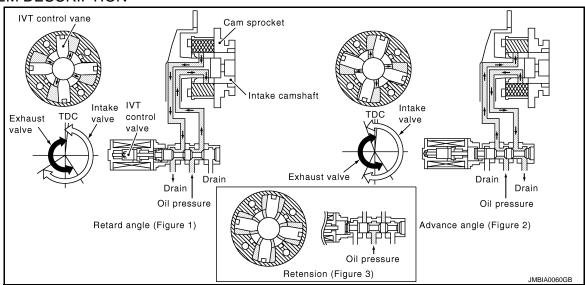

This mechanism hydraulically controls cam phases continuously with the fixed operating angle of the intake valve.

The ECM receives signals such as crankshaft position, camshaft position, engine speed, and engine coolant temperature. Then, the ECM sends ON/OFF pulse duty signals to the intake valve timing (IVT) control solenoid valve depending on driving status. This makes it possible to control the shut/open timing of the intake valve to increase engine torque in low/mid speed range and output in high-speed range.

Revision: 2009 September EC-87 2010 Murano

EC

Α

С

D

F

Е


G

Н

Ν

# Component Parts Location

INFOID:0000000005536520

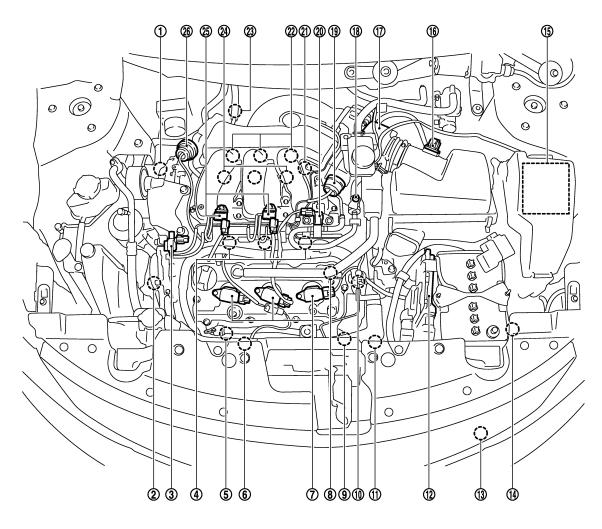


JMBIA1108ZZ

- Intake valve timing control solenoid valve (bank 1)
- Fuel injector (bank 2) 4.
- Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- 16. Mass air flow sensor (with intake air 17. Electric throttle control actuator temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1


- Intake valve timing control solenoid valve (bank 2)
- A/F sensor 1 (bank 2)
- Camshaft position sensor (PHASE) (bank 2)
- 11. Cooling fan motor-1
- 14. Battery current sensor
- solenoid valve
- 23. A/F sensor 1 (bank 1)

- 3. Electronic controlled engine mount control solenoid valve
- Cooling fan motor-2
- 9. Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- 20. EVAP canister purge volume control 21. Camshaft position sensor (PHASE) (bank 1)
  - 24. Fuel injector (bank 1)

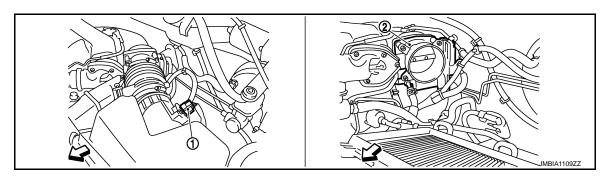


- Mas air flow sensor (with intake air temperature sensor)
- 2. Electric throttle control actuator

⟨
→ : Vehicle front

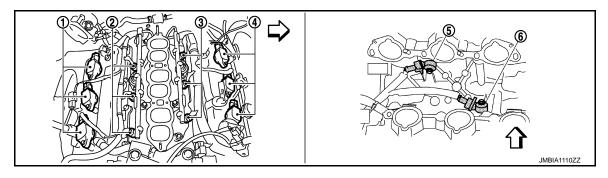

- 1. Ignition coil (with power transistor) and spark plug (bank 1)
- 4. Ignition coil (with power transistor) and spark plug (bank 2)
- 2. Fuel injector (bank 1)
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- 6. Knock sensor (bank 1)

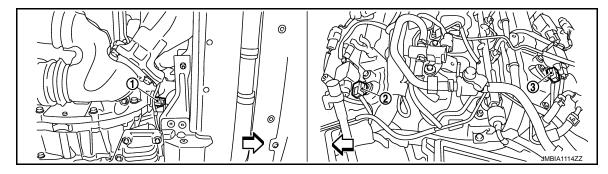

- 1. Crankshaft position sensor (POS)
- Camshaft position sensor (PHASE) (bank 1)
- 3. Camshaft position sensor (PHASE) (bank 2)

: Vehicle front

EC

Α

D

Е

F

G

Н

1


J

1

M

Ν

0

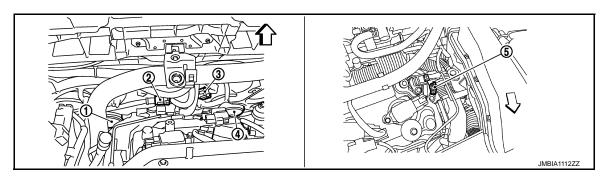

- Cooling fan motor-1 1.
- Cooling fan motor-1 harness con-

Engine coolant temperature sensor


Cooling fan motor-1 harness connector

Cooling fan motor-2

⟨
⇒ : Vehicle front


- - 000 JMBIA1113ZZ
- Refrigerant pressure sensor
  - Battery current sensor


5.

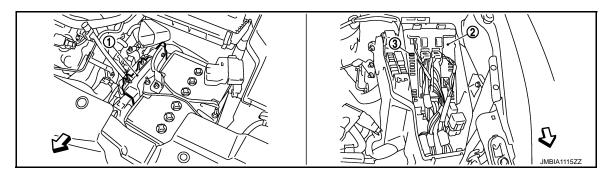

ECM

2. IPDM E/R 3. Fuel pump fuse

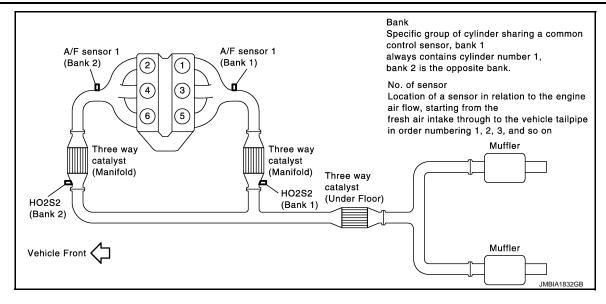


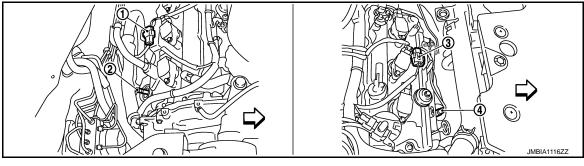

- A/F sensor 1 (bank 1) harness con- 2. A/F sensor 1 (bank 1) nector
- A/F sensor 1 (bank 2) harness connector

A/F sensor 1 (bank 2)

: Vehicle front

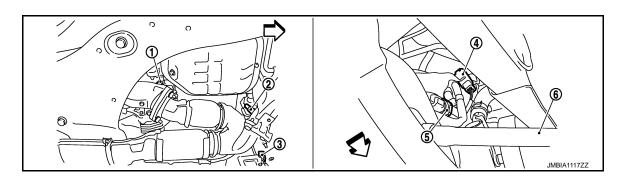

HO2S2 (bank 1) 1.

: Vehicle front

- HO2S2 (bank 2) 2.
- HO2S2 (bank 1) harness connector 5.
- Power steering pressure sensor
- HO2S2 (bank 2) harness connector 3.
- 6. Drive shaft (RH)

Α

EC

D

Е


Н

K

M

Ν


0

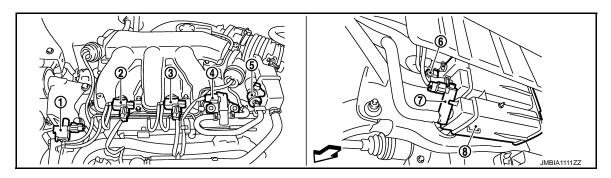


- Electronic controlled engine mount control solenoid valve
- 4. EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve

- VIAS control solenoid valve 1
- EVAP service port
- 8. EVAP canister


- 3. VIAS control solenoid valve 2
- 6. EVAP control system pressure sensor

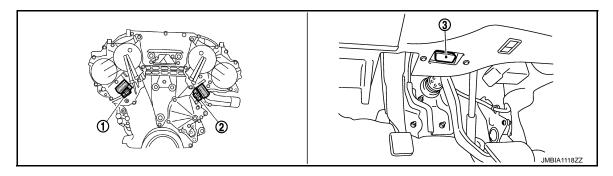

- Intake valve timing control solenoid valve (bank 1)
- Intake valve timing control solenoid 3. valve (bank 2)
- 3. Data link connector

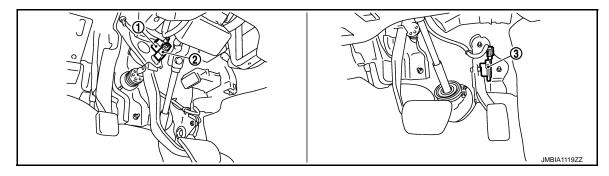


- 1. Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

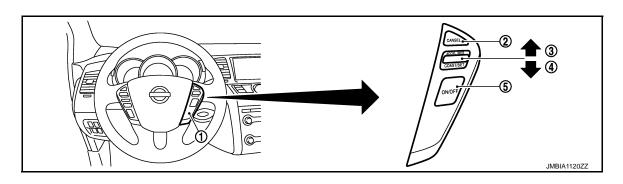

- 1. ASCD steering switch
- SET/COAST switch
- 2. CANSEL switch MAIN switch

RESUME/ACCELERATE switch

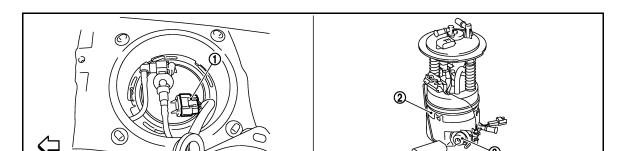

Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

⟨
→ : Vehicle front

# Component Description

INFOID:0000000005536521

JMBIA1121ZZ

Component	Reference
Camshaft position sensor (PHASE)	EC-258, "Description"
Crankshaft position sensor (POS)	EC-254, "Description"
Engine coolant temperature sensor	EC-167, "Description"
Engine oil temperature sensor	EC-236, "Description"
Intake valve timing control solenoid valve	EC-150, "Description"

EC

Α

Е

D

F

G

Н


Ν

0

# VARIABLE INDUCTION AIR SYSTEM

# System Diagram

INFOID:0000000005536522

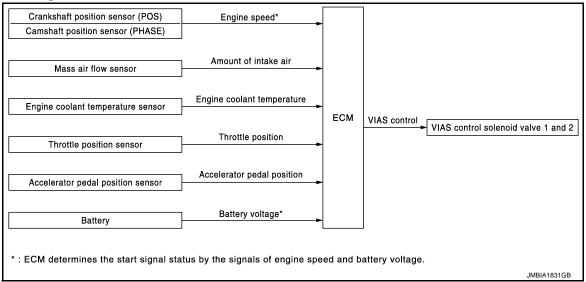

# System Description


INFOID:0000000005536523

## INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator		
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*				
Mass air flow sensor	Amount of intake air				
Engine coolant temperature sensor	Engine coolant temperature	VIAS control	VIAS control solenoid valve 1 VIAS control solenoid valve 2		
Throttle position sensor	Throttle position		VIAS control solenold valve 2		
Accelerator pedal position sensor	Accelerator pedal position				
Battery	Battery voltage*				

<sup>\*:</sup> ECM determines the start signal status by the signals of engine speed and battery voltage.

## SYSTEM DESCRIPTION

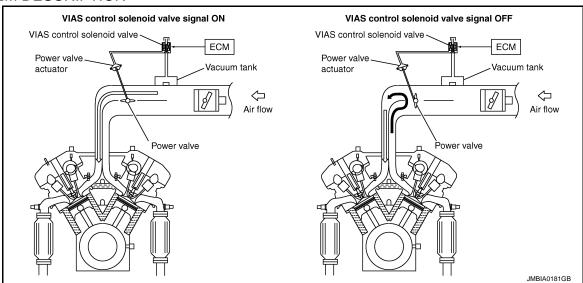

In the medium speed range, the ECM sends the ON signal to the VIAS control solenoid valve. This signal introduces the intake manifold vacuum into the power valve actuator and therefore closes the power valve.


[VQ35DE]

Under this condition, the pressure waves of the exhaust stroke do not disturb the pressure waves of the intake stroke of each opposite bank. Therefore, charging efficiency is increased together with the effect of the long intake passage.

However, in the high speed range, the ECM sends the OFF signal to the VIAS control solenoid valve and the power valve is opened. Under this condition, the pressure waves of intake stroke are resonant with those of each opposite bank exhaust stroke. Therefore, charging efficiency is also increased.

In addition, both valves 1 and 2 are opened or closed in other ranges mentioned above. Thus maximum charging efficiency is obtained for the various driving conditions.

### VACUUM HOSE DRAWING

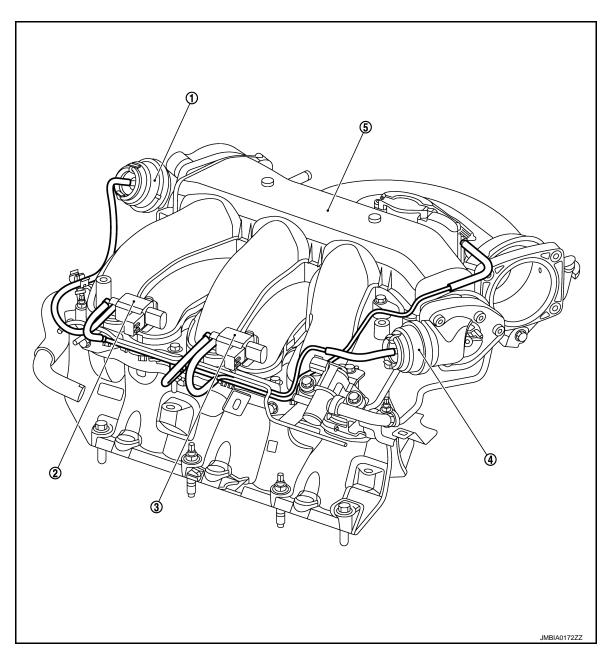

- Power valve actuator 1
- 4. Power valve actuator 2
- VIAS control solenoid valve 1
- Intake manifold collector
- 3. VIAS control solenoid valve 2

EC

D

Е

I

NΛ


Ν

0

D

# Component Parts Location

INFOID:0000000005536524

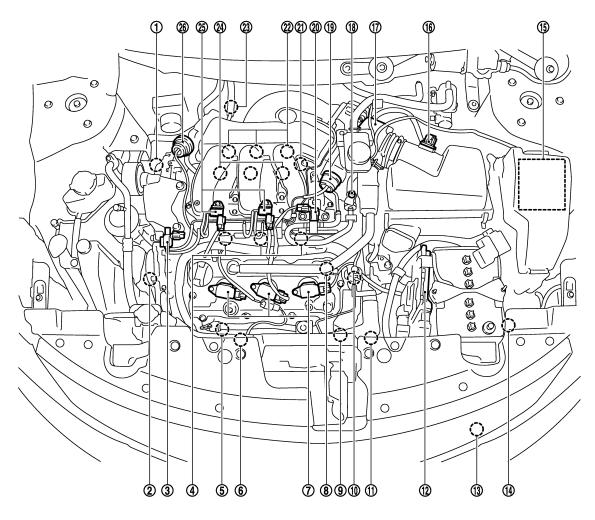


JMBIA1108ZZ

- Intake valve timing control solenoid valve (bank 1)
- Fuel injector (bank 2) 4.
- Ignition coil (with power transistor) and spark plug (bank 2)
- 10. Engine coolant temperature sensor
- 13. Refrigerant pressure sensor
- 16. Mass air flow sensor (with intake air 17. Electric throttle control actuator temperature sensor)
- 19. Power valve actuator 2
- 22. Ignition coil (with power transistor) and spark plug (bank 1)
- 25. VIAS control solenoid valve 1 and 2 26. Power valve actuator 1


- Intake valve timing control solenoid valve (bank 2)
- A/F sensor 1 (bank 2)
- Camshaft position sensor (PHASE) (bank 2)
- 11. Cooling fan motor-1
- 14. Battery current sensor
- solenoid valve
- 23. A/F sensor 1 (bank 1)

- 3. Electronic controlled engine mount control solenoid valve
- Cooling fan motor-2
- 9. Crankshaft position sensor (POS)
- 12. ECM
- 15. IPDM E/R
- 18. EVAP service port
- 20. EVAP canister purge volume control 21. Camshaft position sensor (PHASE) (bank 1)
  - 24. Fuel injector (bank 1)

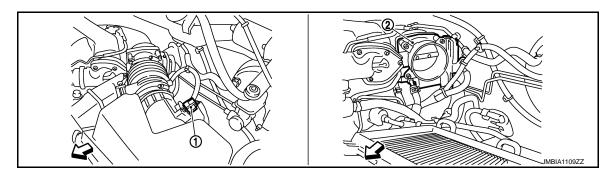


- Mas air flow sensor (with intake air temperature sensor)
- 2. Electric throttle control actuator

⟨
→ : Vehicle front

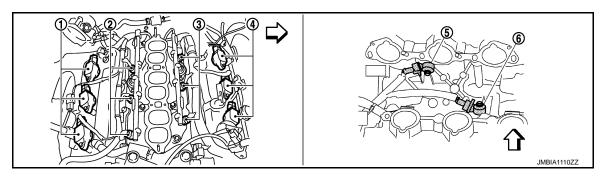

- 1. Ignition coil (with power transistor) and spark plug (bank 1)
- 4. Ignition coil (with power transistor) and spark plug (bank 2)
- 2. Fuel injector (bank 1)
- 5. Knock sensor (bank 2)
- 3. Fuel injector (bank 2)
- 6. Knock sensor (bank 1)

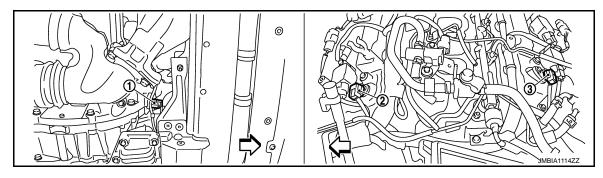

- 1. Crankshaft position sensor (POS)
- Camshaft position sensor (PHASE) (bank 1)

2.

3. Camshaft position sensor (PHASE) (bank 2)

: Vehicle front

EC

Α

D

Е

F

G

Н

ı


J

K

M

Ν

0

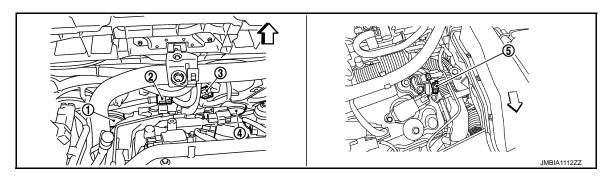


- 1. Cooling fan motor-1
- Cooling fan motor-1 harness connector
- Cooling fan motor-1 harness connector


4. Cooling fan motor-2

⟨
⇒ : Vehicle front

5. Engine coolant temperature sensor

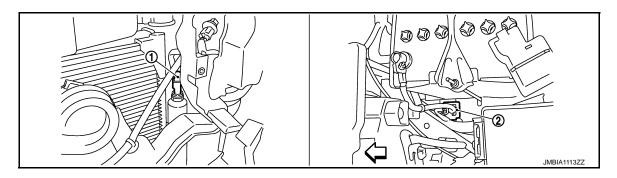

- 1. Refrigerant pressure sensor
- : Vehicle front
- 2. Battery current sensor

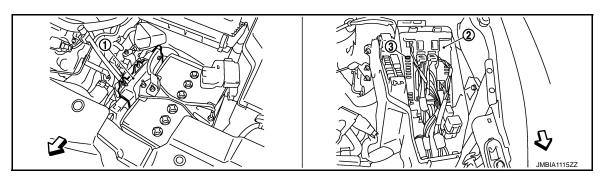



1. ECM

: Vehicle front

2. IPDM E/R

3. Fuel pump fuse

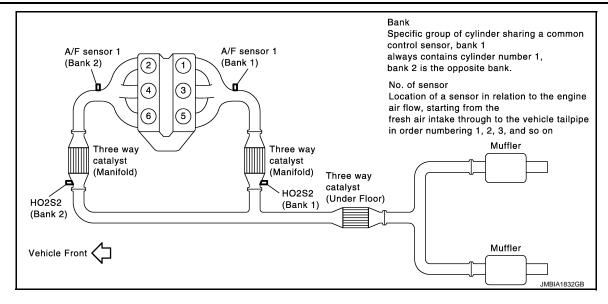


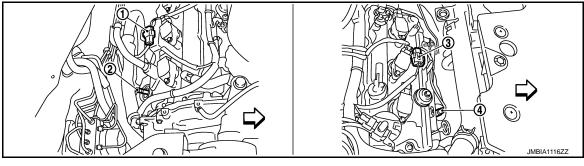

- A/F sensor 1 (bank 1) harness con- 2. A/F sensor 1 (bank 1) nector
- A/F sensor 1 (bank 2) harness connector

A/F sensor 1 (bank 2)

: Vehicle front

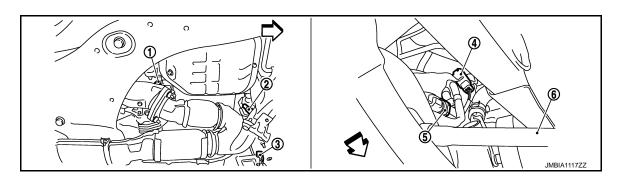

HO2S2 (bank 1) 1.

: Vehicle front

- HO2S2 (bank 2) 2.
- HO2S2 (bank 1) harness connector 5.
- Power steering pressure sensor
- HO2S2 (bank 2) harness connector 3.
- 6. Drive shaft (RH)

Α

EC

D

Е


Н

K

M

Ν


0

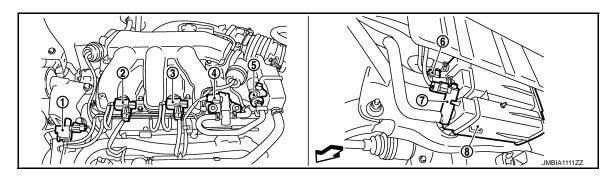


- Electronic controlled engine mount control solenoid valve
- 4. EVAP canister purge volume control 5. solenoid valve
- 7. EVAP canister vent control valve

- VIAS control solenoid valve 1
- EVAP service port
- 8. EVAP canister

- 3. VIAS control solenoid valve 2
- 6. EVAP control system pressure sensor

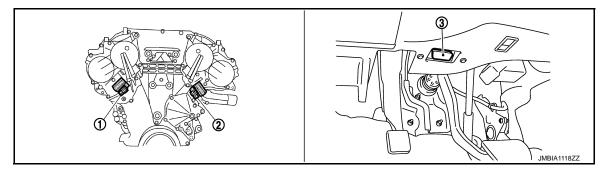


- Intake valve timing control solenoid valve (bank 1)
- Intake valve timing control solenoid 3. valve (bank 2)

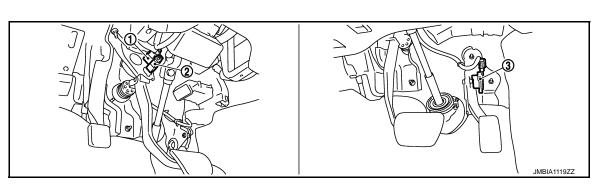

- Stop lamp switch
- 2. ASCD brake switch
- 3. Accelerator pedal position sensor

Data link connector

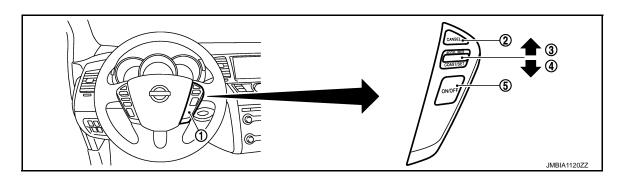

# **VARIABLE INDUCTION AIR SYSTEM**

# < SYSTEM DESCRIPTION > [VQ35DE]

- 1. ASCD steering switch
- 4. SET/COAST switch
- CANSEL switch
   MAIN switch

3. RESUME/ACCELERATE switch

\_\_\_\_

Α

EC


D

Е

F

G

Н

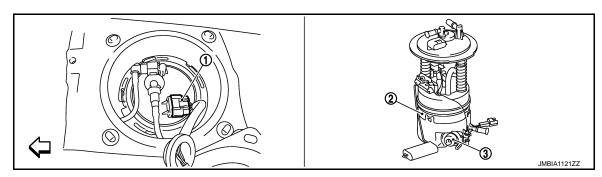

. Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

# Component Description

INFOID:0000000005536525

Component	Reference
Accelerator pedal position sensor	EC-407, "Description"
Camshaft position sensor (PHASE)	EC-258, "Description"
Crankshaft position sensor (POS)	EC-254, "Description"
Engine coolant temperature sensor	EC-167, "Description"
Mass air flow sensor	EC-153, "Description"
Power valve 1 and 2	EC-460, "Description"
Throttle position sensor	EC-172, "Description"
VIAS control solenoid valve 1	EC-387, "Description"
VIAS control solenoid valve 2	EC-390, "Description"

K

M

Ν

0

Р

Revision: 2009 September EC-101 2010 Murano

[VQ35DE]

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

# **Diagnosis Description**

### INFOID:0000000005536526

## INTRODUCTION

The ECM has an on board diagnostic system, which detects malfunctions related to engine sensors or actuators. The ECM also records various emission-related diagnostic information including:

Emission-related diagnostic information	Diagnostic service
Diagnostic Trouble Code (DTC)	Service \$03 of SAE J1979/ISO 15031-5
Freeze Frame data	Service \$02 of SAE J1979/ISO 15031-5
System Readiness Test (SRT) code	Service \$01 of SAE J1979/ISO 15031-5
1st Trip Diagnostic Trouble Code (1st Trip DTC)	Service \$07 of SAE J1979/ISO 15031-5
1st Trip Freeze Frame data	-
Test values and Test limits	Service \$06 of SAE J1979/ISO 15031-5
Calibration ID	Service \$09 of SAE J1979/ISO 15031-5
Permanent Diagnostic Trouble Code (Permanent DTC)	Service \$0A* of SAE J1979/ISO 15031-5

<sup>\*:</sup> Service \$0A is not applied for regions where it is not mandated.

The above information can be checked using procedures listed in the table below.

×: Applicable —: Not applicable

	DTC	1st trip DTC	Freeze Frame data	1st trip Freeze Frame data	SRT code	SRT status	Test value	Permanent DTC status
CONSULT-III	×	×	×	×	×	×	_	×
GST	×	×	×	_	×	×	×	×
ECM	×	×*	_	_	_	×	_	_

<sup>\*:</sup> When DTC and 1st trip DTC simultaneously appear on the display, they cannot be clearly distinguished from each other.

The malfunction indicator lamp (MIL) on the instrument panel illuminates when the same malfunction is detected in two consecutive trips (Two trip detection logic), or when the ECM enters fail-safe mode. (Refer to EC-494, "Fail-safe".)

## TWO TRIP DETECTION LOGIC

When a malfunction is detected for the 1st time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MIL will not illuminate at this stage. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MIL illuminates. The MIL illuminates at the same time when the DTC is stored. <2nd trip> The "trip" in the "Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to illuminate or blink the MIL, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

×: Applicable —: Not applicable

	MIL				DTC		1st trip DTC	
Items	1st trip		2nd trip		1st trip	2nd trip	1st trip	2nd trip
	Blinking	illuminate	Blinking	illuminate	displaying	displaying	displaying	display- ing
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0306 is being detected	×	_	_	_	_	_	×	_
Misfire (Possible three way catalyst damage) — DTC: P0300 - P0306 is being detected	_	_	×	_	_	×	_	_
One trip detection diagnoses (Refer to EC-498, "DTC Index".)	_	×	_	_	×	_	_	_
Except above	_	_	_	×	_	×	×	_

### DTC AND FREEZE FRAME DATA

#### [VQ35DE] < SYSTEM DESCRIPTION >

## DTC and 1st Trip DTC

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not recur, the 1st trip DTC will not be displayed.

If a malfunction is detected during the 1st trip, the 1st trip DTC is saved in the ECM memory. The MIL will not illuminate (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are stored in the ECM memory and the MIL illuminates. In other words, the DTC is stored in the ECM memory and the MIL illuminates when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is saved and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or illuminate the MIL during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.

Procedures for clearing the DTC and the 1st trip DTC from the ECM memory are described in "How to Erase DTC and 1st Trip DTC".

For malfunctions in which 1st trip DTCs are displayed, refer to EC-498, "DTC Index". These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT-III.

1st trip DTC is specified in Service \$07 of SAE J1979/ISO 15031-5. 1st trip DTC detection occurs without illuminating the MIL and therefore does not warn the driver of a malfunction. However, 1st trip DTC detection will not prevent the vehicle from being tested, for example during Inspection/Maintenance (I/M) tests.

When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in Work Flow procedure Step 2, refer to EC-8, "Work Flow". Then perform DTC Confirmation Procedure or Component Function Check to try to duplicate the malfunction. If the malfunction is duplicated, the item requires repair.

## Freeze Frame Data and 1st Trip Freeze Frame Data

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed, absolute throttle position, base fuel schedule and intake air temperature at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-III or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-III screen, not on the GST.

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items			
1	Freeze frame data	Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175		
2		Except the above items (Includes CVT related items)		
3	1st trip freeze frame data			

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was saved in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased. Procedures for clearing the ECM memory are described in "How to Erase DTC and 1st Trip DTC".

How to Read DTC and 1st Trip DTC

### (P) With CONSULT-III

CONSULT-III displays the DTC in "SELF DIAGNOSTIC RESULT" mode. Examples: P0340, P0850, P1148, etc.

**EC-103** 2010 Murano Revision: 2009 September

EC

D

Е

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

# < SYSTEM DESCRIPTION > [VQ35DE]

These DTCs are prescribed by SAE J2012/ISO 15031-6.

(CONSULT-III also displays the malfunctioning component or system.)

Time data indicates how many times the vehicle was driven after the last detection of a DTC.

If the DTC is being detected currently, the time data will be [0].

If a 1st trip DTC is stored in the ECM, the time data will be [1t].

## With GST

GST (Generic Scan Tool) displays the DTC in Diagnostic Service \$03. Examples: P0340, P0850, P1148, etc. These DTCs are prescribed by SAE J2012/ISO 15031-6.

1st trip DTC is displayed in Diagnostic Service \$07.

## No Tools

The number of blinks of the MIL in the Diagnostic Test Mode II (Self-Diagnostic Results) indicates the DTC. Example: 0340, 0850, 1148, etc.

These DTCs are controlled by NISSAN.

- 1st trip DTC No. is the same as DTC No.
- Output of a DTC indicates a malfunction. However, GST and the Diagnostic Test Mode II do not indicate whether the malfunction is still occurring or has occurred in the past and has returned to normal. CONSULT-III can identify malfunction status as shown below. Therefore, using CONSULT-III (if available) is recommended.

How to Erase DTC and 1st Trip DTC

## (A) With CONSULT-III

### NOTE:

- If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
- If the DTC is not for CVT related items (see EC-498), skip step 1.
- 1. Erase DTC in TCM. Refer to TM-34, "Diagnosis Description".
- 2. Select "ENGINE" with CONSULT-III.
- 3. Select "SELF-DIAG RESULTS".
- 4. Touch "ERASE". (DTC in ECM will be erased.)

### **WITH GST**

### NOTE:

• If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.

Select Service \$04 with GST (Generic Scan Tool).

## No Tools

### NOTE:

• If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.

Erase DTC in ECM. Refer to How to Erase Diagnostic Test Mode II (Self-diagnostic Results).

- If the battery is disconnected, the emission-related diagnostic information will be cleared within 24 hours.
- The following data are cleared when the ECM memory is erased.
- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

Actual work procedures are explained using a DTC as an example. Be careful so that not only the DTC, but all of the data listed above, are cleared from the ECM memory during work procedures.

## SYSTEM READINESS TEST (SRT) CODE

System Readiness Test (SRT) code is specified in Service \$01 of SAE J1979/ISO 15031-5.

As part of an enhanced emissions test for Inspection & Maintenance (I/M), certain states require the status of SRT be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.

If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating "INCMP", use the information in this Service Manual to set the SRT to "CMPLT".

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

## < SYSTEM DESCRIPTION >

[VQ35DE]

In most cases the ECM will automatically complete its self-diagnosis cycle during normal usage, and the SRT status will indicate "CMPLT" for each application system. Once set as "CMPLT", the SRT status remains "CMPLT" until the self-diagnosis memory is erased.

Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern; the SRT will indicate "INCMP" for these items.

### NOTE:

The SRT will also indicate "INCMP" if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.

If, during the state emissions inspection, the SRT indicates "CMPLT" for all test items, the inspector will continue with the emissions test. However, if the SRT indicates "INCMP" for one or more of the SRT items the vehicle is returned to the customer untested.

### NOTE:

If permanent DTC is stored or MIL illuminates during the state emissions inspection, the vehicle is also returned to the customer untested even though the SRT indicates "CMPLT" for all test items. Therefore, it is important to check SRT ("CMPLT"), DTC (No DTCs) and permanent DTC (No permanent DTCs) before the inspection.

### SRT Item

The table below shows required self-diagnostic items to set the SRT to "CMPLT".

SRT item (CONSULT-III indication)	Performance Priority*	Required self-diagnostic items to set the SRT to "CMPLT"	Corresponding DTC No.
CATALYST	2	Three way catalyst function	P0420, P0430
EVAP SYSTEM	2	EVAP control system purge flow monitoring	P0441
	1	EVAP control system	P0442
	2	EVAP control system	P0456
HO2S	2	Air fuel ratio (A/F) sensor 1	P0133, P0153
		Heated oxygen sensor 2	P0137, P0157
		Heated oxygen sensor 2	P0138, P0158
		Heated oxygen sensor 2	P0139, P0159
EGR/VVT SYSTEM	3	Intake value timing control function	P0011, P0021

<sup>\*:</sup> If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure), one by one based on the priority for models with CONSULT-III.

## SRT Set Timing

SRT is set as "CMPLT" after self-diagnosis has been performed one or more times. Completion of SRT is done regardless of whether the result is OK or NG. The set timing is different between OK and NG results and is shown in the table below.

Self-diagnosis result		Example						
		Diagnosis	$\begin{array}{cccccccccccccccccccccccccccccccccccc$					
All OK	Case 1	P0400	OK (1)	— (1)	OK (2)	— (2)		
		P0402	OK (1)	— (1)	— (1)	OK (2)		
		P1402	OK (1)	OK (2)	— (2)	— (2)		
		SRT of EGR	"CMPLT"	"CMPLT"	"CMPLT"	"CMPLT"		
	Case 2	P0400	OK (1)	— (1)	— (1)	— (1)		
		P0402	— (0)	— (0)	OK (1)	— (1)		
		P1402	OK (1)	OK (2)	— (2)	— (2)		
		SRT of EGR	"INCMP"	"INCMP"	"CMPLT"	"CMPLT"		

Revision: 2009 September EC-105 2010 Murano

EC

D

Е

F

G

Н

J

K

N /I

Ν

0

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SYSTEM DESCRIPTION >

[VQ35DE]

Self-diagnosis result		Example						
		Diagnosis	$\begin{array}{cccccccccccccccccccccccccccccccccccc$					
NG exists	Case 3	P0400	OK	OK	_	_		
		P0402	_	_	_	_		
		P1402	NG	_	NG	NG (Consecutive NG)		
		(1st trip) DTC	1st trip DTC	_	1st trip DTC	DTC (= MIL ON)		
		SRT of EGR	"INCMP"	"INCMP"	"INCMP"	"CMPLT"		

OK: Self-diagnosis is carried out and the result is OK.

NG: Self-diagnosis is carried out and the result is NG.

When all SRT related self-diagnoses show OK results in a single cycle (Ignition OFF-ON-OFF), the SRT will indicate "CMPLT".  $\rightarrow$  Case 1 above

When all SRT related self-diagnoses show OK results through several different cycles, the SRT will indicate "CMPLT" at the time the respective self-diagnoses have at least one OK result. → Case 2 above

If one or more SRT related self-diagnoses show NG results in 2 consecutive cycles, the SRT will also indicate "CMPLT".  $\rightarrow$  Case 3 above

The table above shows that the minimum number of cycles for setting SRT as "INCMP" is the number one (1) for each self-diagnosis (Case 1 & 2) or the number two (2) for one of self-diagnoses (Case 3). However, in preparation for the state emissions inspection, it is unnecessary for each self-diagnosis to be executed twice (Case 3) for the following reasons:

- The SRT will indicate "CMPLT" at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires "CMPLT" of the SRT only with OK self-diagnosis results.
- During SRT driving pattern, the 1st trip DTC (NG) is detected prior to "CMPLT" of SRT and the self-diagnosis memory must be erased from the ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate "INCMP".

## NOTE:

SRT can be set as "CMPLT" together with the DTC(s). Therefore, DTC check must always be carried out prior to the state emission inspection even though the SRT indicates "CMPLT".

### SRT Service Procedure

If a vehicle has failed the state emissions inspection due to one or more SRT items indicating "INCMP", review the flowchart diagnostic sequence on the next page.

<sup>—:</sup> Self-diagnosis is not carried out.

Α


EC

D

Е

Ν

Р

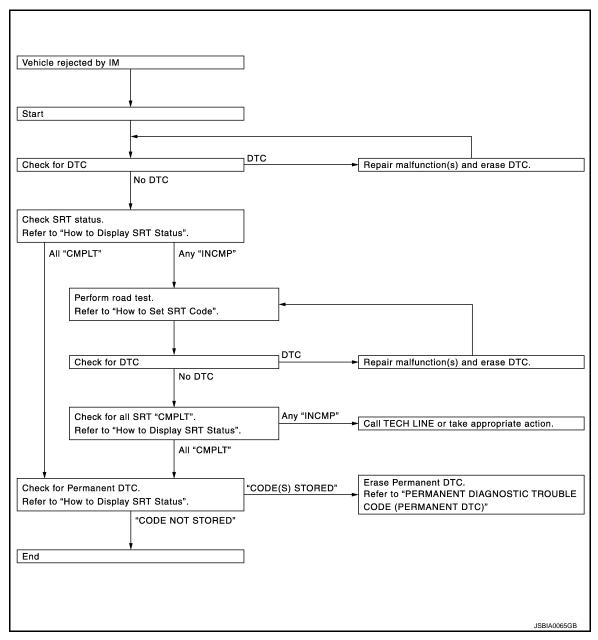

How to Display SRT Status

## (P) WITH CONSULT-III

Selecting "SRT STATUS" in "DTC CONFIRMATION" mode with CONSULT-III.

For items whose SRT codes are set, "CMPLT" is displayed on the CONSULT-III screen; for items whose SRT codes are not set, "INCMP" is displayed.

## NOTE:

- Though displayed on the CONSULT-III screen, "HO2S HTR" is not SRT item.
- "SRT STATUS" provides the presence or absence of permanent DTCs stored in ECM memory.

### ■WITH GST


Selecting Service \$01 with GST (Generic Scan Tool)

### NO TOOLS

A SRT code itself cannot be displayed, however SRT status can.

- Turn ignition switch ON and wait 20 seconds.
- SRT status is indicated as shown below.
  - When all SRT codes are set, MIL illuminates continuously.

When any SRT codes are not set, MIL will blink periodically for 10 seconds.

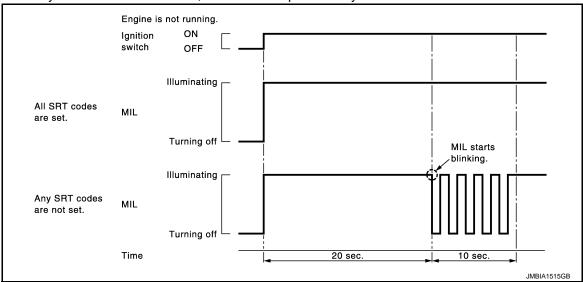

## PERMANENT DIAGNOSTIC TROUBLE CODE (PERMANENT DTC)

Permanent DTC is defined in SAE J1979/ISO 15031-5 Service \$0A.

ECM stores a DTC issuing a command of turning on MIL as a permanent DTC and keeps storing the DTC as a permanent DTC until ECM judges that there is no presence of malfunction.

Permanent DTCs cannot be erased by using the Erase function of CONSULT-III or Generic Scan Tool (GST) and by disconnecting the battery to shut off power to ECM. This prevents a vehicle from passing the state emission inspection without repairing a malfunctioning part.

When not passing the state emission inspection due to more than one permanent DTC, permanent DTCs should be erased, referring to this manual.

### NOTE:

- The important items in state emission inspection are that MIL is not ON, SRT test items are set, and permanent DTCs are not included.
- Permanent DTCs do not apply for regions that permanent DTCs are not regulated by law.


Permanent DTC Item

For permanent DTC items, MIL turns on. Refer to EC-498, "DTC Index".

Permanent DTC Set Timing

The setting timing of permanent DTC is stored in ECM with the lighting of MIL when a DTC is confirmed.

Permanent DTC Service Procedure

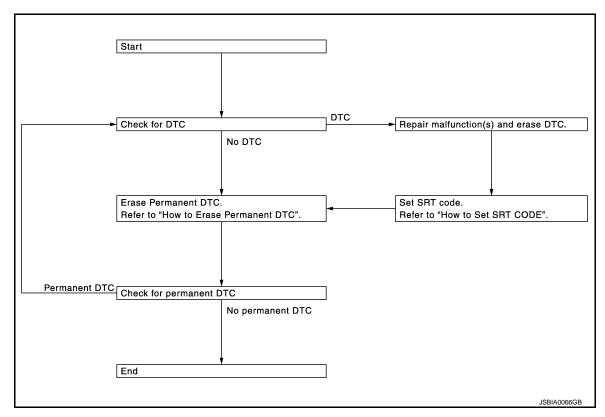

How to Display Permanent DTC Status

# WITH CONSULT-III 1. Turn ignition sw

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
  - Select "PERMANENT DTC STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT-III.
     NOTE:

Permanent DTCs stored in ECM memory are displayed on the CONSULT-III screen to show if a driving pattern required for erasing permanent DTCs is complete (CMPLT) or incomplete (INCMP).

#### **CAUTION:**

Since the "PERMANENT DTC STATUS" screen displays the previous trip information, repeat the following twice to update the information: "Ignition switch OFF", "Wait for more than 10 seconds" and "Ignition switch ON".

CAUTION: Turn ignition switch from O status screen.	N to OFF twice to update the informa	ation on the
PERMANENT DTC	DRIVING PATTERN B	DRIVING PATTERN D
xxxx	INCMP	INCMP
xxxx	CMPLT	INCMP
xxxx	INCMP	CMPLT
xxxx	CMPLT	INCMP
xxxx	INCMP	INCMP
XXXX	INCMP	INCMP

JSBIA0062GB

EC

Α

D

Е

F

G

Н

M

Ν

0

Ρ

[VQ35DE]


- **WITH GST**1. Turn ian Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select Service \$0A with GST (Generic Scan Tool). 5.

### MALFUNCTION INDICATOR LAMP (MIL)

### Description

The MIL is located on the instrument panel.

- The MIL will illuminate when the ignition switch is turned ON without the engine running. This is a bulb check. If the MIL does not illuminate, check MIL circuit. Refer to EC-450, "Component Function Check".
- 2. When the engine is started, the MIL should turn off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

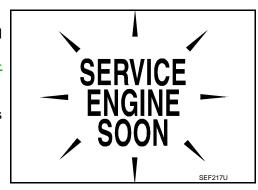

#### On Board Diagnostic System Function

The on board diagnostic system has the following three functions.

Diagnostic Test Mode	KEY and ENG. Status	Function	Explanation of Function
Mode I	Ignition switch in ON position  Engine stopped	BULB CHECK	This function checks the MIL bulb for damage (blown, open circuit, etc.).  If the MIL does not illuminate, check MIL circuit.
	Engine running	MALFUNCTION WARNING	When a malfunction is detected twice in two consecutive driving cycles (two trip detection logic), the MIL will illuminate to inform the driver that a malfunction has been detected.  The following malfunctions will illuminate or blink the MIL in the 1st trip.  • Misfire (Possible three way catalyst damage)  • One trip detection diagnoses
Mode II	Ignition switch in ON position  Engine stopped	SELF-DIAGNOSTIC RESULTS	This function allows DTCs and 1st trip DTCs to be read.

Diagnostic Test Mode I — Bulb Check

In this mode, the MIL on the instrument panel should stay ON. If it remains OFF, check MIL circuit. Refer to EC-450, "Component Function Check".

Diagnostic Test Mode I — Malfunction Warning


MIL	Condition				
ON	When the malfunction is detected.				
OFF	No malfunction.				

This DTC number is clarified in Diagnostic Test Mode II (SELF-DIAGNOSTIC RESULTS)

Diagnostic Test Mode II — Self-diagnostic Results

In this mode, the DTC and 1st trip DTC are indicated by the number of blinks of the MIL as shown below.

The DTC and 1st trip DTC are displayed at the same time. If the MIL does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MIL illuminates in diagnostic test mode II (SELF-DIAGNOSTIC RESULTS), it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the CONSULT-III or GST. A DTC will be used as an example for how to read a code.

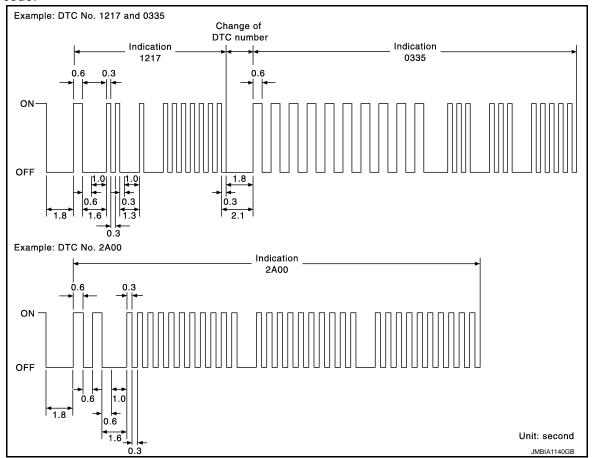

A particular trouble code can be identified by the number of four-digit numeral blinks as per the following.

Number	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
Blinks	10	1	2	3	4	5	6	7	8	9	11	12	13	14	15	16

The length of time the 1,000th-digit numeral flashes on and off is 1.2 seconds consisting of an ON (0.6-seconds) - OFF (0.6-seconds) cycle.

The 100th-digit numeral and lower digit numerals consist of a 0.3-seconds ON and 0.3-seconds OFF cycle. A change from one digit numeral to another occurs at an interval of 1.0-second OFF. In other words, the later numeral appears on the display 1.3 seconds after the former numeral has disappeared.

A change from one trouble code to another occurs at an interval of 1.8-seconds OFF.

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC 0000 refers to no malfunction. (See <a href="EC-498">EC-498</a>, "DTC Index")

How to Switch Diagnostic Test Mode

#### NOTE:

It is better to count the time accurately with a clock.

Revision: 2009 September EC-111 2010 Murano

EC

Α

С

D

Е

F

G

Н

K

N/I

Ν

Р

< SYSTEM DESCRIPTION > [VQ35DE]

- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.
- ECM always returns to Diagnostic Test Mode I after the ignition switch is turned OFF.


### HOW TO SET DIAGNOSTIC TEST MODE II (SELF-DIAGNOSTIC RESULTS)

- 1. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
- 2. Repeat the following procedure quickly 5 times within 5 seconds.
- Fully depress the accelerator pedal.
- Fully release the accelerator pedal.
- Wait 7 seconds, fully depress the accelerator pedal and keep it depressed for approx. 10 seconds until the MIL starts blinking.
- 4. Fully release the accelerator pedal.

ECM has entered to Diagnostic Test Mode II (Self-diagnostic results).

#### NOTE:

Wait until the same DTC (or 1st trip DTC) appears to completely confirm all DTCs.

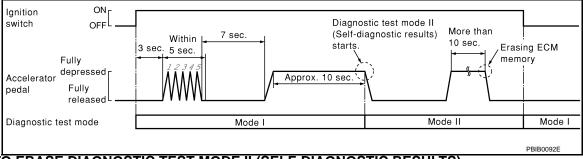

### HOW TO ERASE DIAGNOSTIC TEST MODE II (SELF-DIAGNOSTIC RESULTS)

- Set ECM in Diagnostic Test Mode II (Self-diagnostic results). Refer to "How to Set Diagnostic Test Mode II (Self-diagnostic Results)".
- Fully depress the accelerator pedal and keep it depressed for more than 10 seconds.The emission-related diagnostic information has been erased from the backup memory in the ECM.
- 3. Fully release the accelerator pedal, and confirm the DTC 0000 is displayed.
- If the battery is disconnected, the DTC will be lost from the backup memory within 24 hours.
- Do not erase the stored memory before starting trouble diagnoses.

### **OBD System Operation Chart**

Relationship Between MIL, 1st Trip DTC, DTC, and Detectable Items

- When a malfunction is detected for the 1st time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MIL will come on.
- The MIL will turn off after the vehicle is driven 3 times (driving pattern B) with no malfunction. A drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The "TIME" in "SELF-DIAGNOSTIC RESULTS" mode of CONSULT-III will count the number of times the vehicle is driven.
- The 1st trip DTC is not displayed when the self-diagnosis results in OK for the 2nd trip.

### **Summary Chart**


Items	Fuel Injection System	Misfire	Other
MIL (turns off)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1, *2	*1, *2	1 (pattern B)

For details about patterns B and C under "Fuel Injection System" and "Misfire", see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".

For details about patterns A and B under Other, see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".

- \*1: Clear timing is at the moment OK is detected.
- \*2: Clear timing is when the same malfunction is detected in the 2nd trip.

Relationship Between MIL, DTC, 1st Trip DTC and Driving Patterns for "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System"

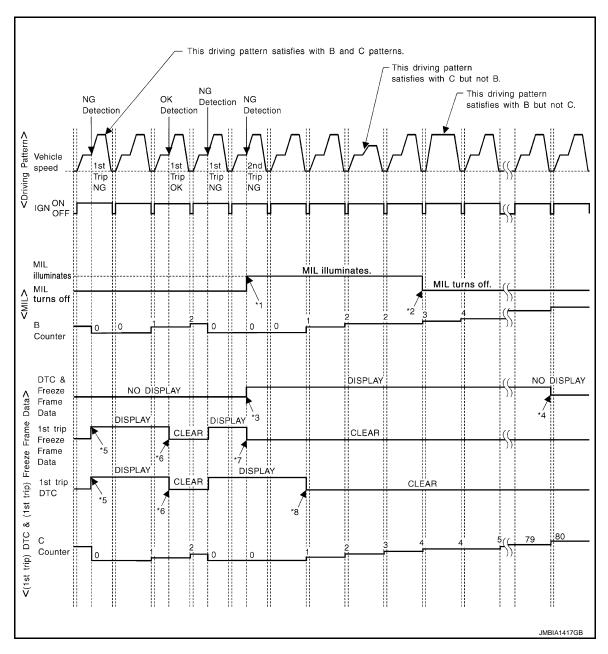

- \*1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- \*2: MIL will turn off after vehicle is driven 3 times (pattern B) without any malfunctions.
- \*3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

EC

D

Е

F

G

Н

K

M

N

 $\circ$ 

Р

< SYSTEM DESCRIPTION > [VQ35DE]

- \*4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- the 1st time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.

\*5: When a malfunction is detected for

\*6: The 1st trip DTC and the 1st trip freeze frame data will be cleared at the moment OK is detected.

- \*7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.
- \*8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.

Explanation for Driving Patterns for "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System" <Driving Pattern B>

Driving pattern B means the vehicle operation as per the following:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunction.
- The MIL will turn off when the B counter reaches 3. (\*2 in "OBD SYSTEM OPERATION CHART")
   Corriving Pattern C>

Driving pattern C means operating vehicle as per the following:

The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data)  $\pm$  375 rpm

Calculated load value: (Calculated load value in the freeze frame data) x (1  $\pm$  0.1) [%]

Engine coolant temperature (T) condition:

- When the freeze frame data shows lower than 70°C (158°F), T should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), T should be higher than or equal to 70°C (158°F).

Example:

If the stored freeze frame data is as per the following:


Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)

To be satisfied with driving pattern C, the vehicle should run under the following conditions:

Engine speed: 475 - 1,225 rpm, Calculated load value: 27 - 33%, Engine coolant temperature: more than 70°C (158°F)

- The C counter will be cleared when the malfunction is detected regardless of vehicle conditions above.
- The C counter will be counted up when vehicle conditions above are satisfied without the same malfunction.
- The DTC will not be displayed after C counter reaches 80.
- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

Relationship Between MIL, DTC, 1st Trip DTC and Driving Patterns Except For "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System"

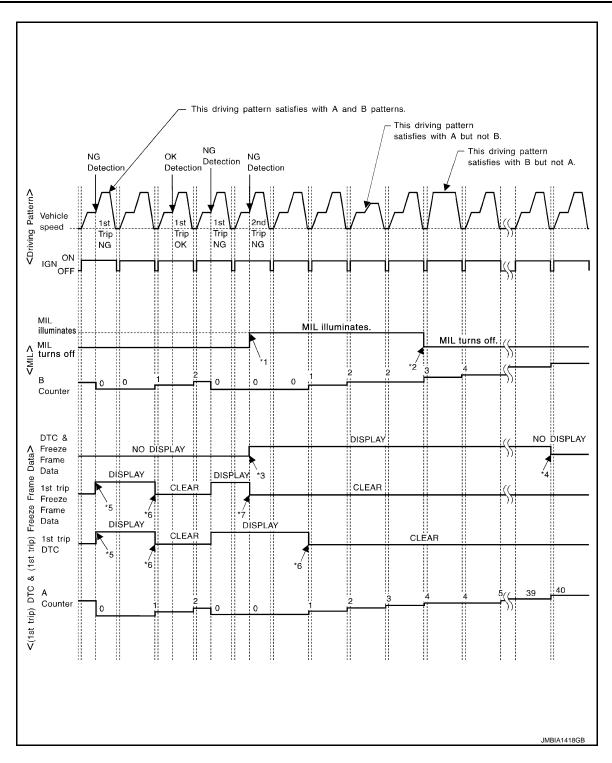

- \*1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- \*2: MIL will turn off after vehicle is driven 3 times (pattern B) without any malfunctions.
  - \*3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

EC

Α

D

Е

F

G

Н

J

Κ

.

M

Ν

0

Р


### < SYSTEM DESCRIPTION >

- \*4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- \*7: When the same malfunction is detected in the 2nd trip, the 1st trip

freeze frame data will be cleared.

- \*5: When a malfunction is detected for the 1st time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- \*6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.

Explanation for Driving Patterns Except for "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System" <Driving Pattern A>

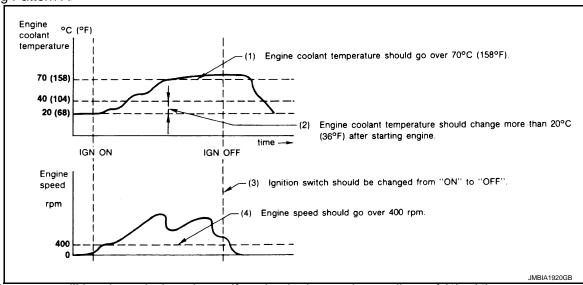

- The A counter will be cleared when the malfunction is detected regardless of (1) (4).
- The A counter will be counted up when (1) (4) are satisfied without the same malfunction.
- The DTC will not be displayed after the A counter reaches 40.

<Driving Pattern B>

Driving pattern B means operating vehicle as per the following:

All components and systems should be monitored at least once by the OBD system.

- The B counter will be cleared when the malfunction is detected once regardless of the driving pattern.
- The B counter will be counted up when driving pattern B is satisfied without any malfunctions.
- The MIL will turn off when the B counter reaches 3 (\*2 in OBD SYSTEM OPERATION CHART).

### **CONSULT-III Function**

INFOID:0000000005536527

#### **FUNCTION**

Diagnostic test mode	Function
Work Support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT-III unit.
Self Diagnostic Result	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*
Data Monitor	Input/Output data in the ECM can be read.
Active Test	Diagnostic Test Mode in which CONSULT-III drives some actuators apart from the ECM and also shifts some parameters in a specified range.
DTC & SRT Confirmation	The status of system monitoring tests and the self-diagnosis status/results can be confirmed.
Function Test	This mode is used to inform customers when the vehicle requires periodic maintenance.
ECU Part Number	ECM part number can be read.

- \*: The following emission-related diagnostic information is cleared when the ECM memory is erased.
- · Diagnostic trouble codes
- · 1st trip diagnostic trouble codes
- Freeze frame data

< SYSTEM DESCRIPTION >

- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

### WORK SUPPORT MODE

Work Item

EC

M

Ν

Р

Α

[VQ35DE]

WORK ITEM	CONDITION	USAGE
FUEL PRESSURE RELEASE	FUEL PUMP WILL STOP BY TOUCHING "START" DUR- ING IDLING.     CRANK A FEW TIMES AFTER ENGINE STALLS.	When releasing fuel pressure from fuel line
IDLE AIR VOL LEARN	THE IDLE AIR VOLUME THAT KEEPS THE ENGINE WITHIN THE SPECIFIED RANGE IS MEMORIZED IN ECM.	When learning the idle air volume
SELF-LEARNING CONT	THE COEFFICIENT OF SELF-LEARNING CONTROL MIXTURE RATIO RETURNS TO THE ORIGINAL COEF- FICIENT.	When clearing mixture ratio self- learning value
EVAP SYSTEM CLOSE	CLOSE THE EVAP CANISTER VENT CONTROL VALVE IN ORDER TO MAKE EVAP SYSTEM CLOSE UNDER THE FOLLOWING CONDITIONS.  IGN SW ON  ENGINE NOT RUNNING  AMBIENT TEMPERATURE IS ABOVE 0°C (32°F).  NO VACUUM AND NO HIGH PRESSURE IN EVAP SYSTEM  FUEL TANK TEMP. IS MORE THAN 0°C (32°F).  WITHIN 10 MINUTES AFTER STARTING "EVAP SYSTEM CLOSE"  WHEN TRYING TO EXECUTE "EVAP SYSTEM CLOSE" UNDER THE CONDITION EXCEPT ABOVE, CONSULT-III WILL DISCONTINUE IT AND DISPLAY APPROPRIATE INSTRUCTION.  NOTE:  WHEN STARTING ENGINE, CONSULT-III MAY DISPLAY "BATTERY VOLTAGE IS LOW. CHARGE BATTERY", EVEN WHEN USING A CHARGED BATTERY.	When detecting EVAP vapor leakage in the EVAP system
VIN REGISTRATION	IN THIS MODE, VIN IS REGISTERED IN ECM.	When registering VIN in ECM
TARGET IDLE RPM ADJ*	IDLE CONDITION	When setting target idle speed
TARGET IGN TIM ADJ*	IDLE CONDITION	When adjusting target ignition timing

### **SELF-DIAG RESULTS MODE**

Self Diagnostic Item

Regarding items of DTC and 1st trip DTC, refer to EC-498, "DTC Index".

Freeze Frame Data and 1st Trip Freeze Frame Data

Freeze frame data item*	Description
DIAG TROUBLE CODE [PXXXX]	The engine control component part/control system has a trouble code that is displayed as PXXXX. (Refer to EC-498, "DTC Index".)
FUEL SYS-B1	"Fuel injection system status" at the moment a malfunction is detected is displayed.
FUEL SYS-B2	One of the following mode is displayed.     Mode2: Open loop due to detected system malfunction     Mode3: Open loop due to driving conditions (power enrichment, deceleration enleanment)     Mode4: Closed loop - using oxygen sensor(s) as feedback for fuel control     Mode5: Open loop - has not yet satisfied condition to go to closed loop
CAL/LD VALUE [%]	The calculated load value at the moment a malfunction is detected is displayed.

## < SYSTEM DESCRIPTION >

[VQ35DE]

Freeze frame data item*	Description
COOLANT TEMP [°C] or [°F]	The engine coolant temperature at the moment a malfunction is detected is displayed.
L-FUEL TRM-B1 [%]	"Long-term fuel trim" at the moment a malfunction is detected is displayed.
L-FUEL TRM-B2 [%]	<ul> <li>The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim.</li> </ul>
S-FUEL TRM-B1 [%]	"Short-term fuel trim" at the moment a malfunction is detected is displayed.
S-FUEL TRM-B2 [%]	<ul> <li>The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule.</li> </ul>
ENGINE SPEED [rpm]	The engine speed at the moment a malfunction is detected is displayed.
VEHICL SPEED [km/h] or [mph]	The vehicle speed at the moment a malfunction is detected is displayed.
ABSOL TH.P/S [%]	The throttle valve opening angle at the moment a malfunction is detected is displayed.
B/FUEL SCHDL [msec]	The base fuel schedule at the moment a malfunction is detected is displayed.
INT/A TEMP SE [°C] or [°F]	The intake air temperature at the moment a malfunction is detected is displayed.
INT MANI PRES [kPa]	a. These items are displayed but are not applicable to this model
COMBUST CONDITION	These items are displayed but are not applicable to this model.

<sup>\*:</sup> The items are the same as those of 1st trip freeze frame data.

### DATA MONITOR MODE

### Monitored Item

Monitored item	Unit	Description	×: Applicable
ENG SPEED	rpm	Indicates the engine speed computed from the signal of the crankshaft position sensor (POS) and camshaft position sensor (PHASE).	Accuracy becomes poor if engine speed drops below the idle rpm.     If the signal is interrupted while the engine is running, an abnormal value may be indicated.
MAS A/F SE-B1	V	The signal voltage of the mass air flow sensor is displayed.	<ul> <li>When the engine is stopped, a certain value is indicated.</li> <li>When engine is running, specification range is indicated in "SPEC".</li> </ul>
B/FUEL SCHDL	msec	"Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction.	When engine is running, specification range is indicated in "SPEC".
A/F ALPHA-B1			When the engine is stopped, a certain
A/F ALPHA-B2	%	The mean value of the air-fuel ratio feedback cor- rection factor per cycle is indicated.	<ul> <li>value is indicated.</li> <li>This data also includes the data for the air-fuel ratio learning control.</li> <li>When engine is running, specification range is indicated in "SPEC".</li> </ul>
COOLAN TEMP/S	°C or °F	The engine coolant temperature (determined by the signal voltage of the engine coolant tempera- ture sensor) is displayed.	When the engine coolant temperature sensor is open or short-circuited, ECM enters fail-safe mode. The en- gine coolant temperature determined by the ECM is displayed.
A/F SEN1 (B1)	V	The A/F signal computed from the input signal of	
A/F SEN1 (B2)	V	the air fuel ratio (A/F) sensor 1 is displayed.	
HO2S2 (B1)	V	The signal voltage of the heated oxygen sensor 2	
HO2S2 (B2)	V	is displayed.	
HO2S2 MNTR(B1)		Display of heated oxygen sensor 2 signal:	
HO2S2 MNTR(B2)	RICH/LEAN	RICH: means the amount of oxygen after three way catalyst is relatively small.  LEAN: means the amount of oxygen after three way catalyst is relatively large.	When the engine is stopped, a certain value is indicated.

## < SYSTEM DESCRIPTION >

[VQ35DE]

Monitored item	Unit	Description	Remarks	
VHCL SPEED SE	km/h or mph	The vehicle speed computed from the vehicle speed signal sent from combination meter is displayed.		
BATTERY VOLT	V	The power supply voltage of ECM is displayed.		
ACCEL SEN 1	.,,	The accelerator pedal position sensor signal volt-	ACCEL SEN 2 signal is converted by	
ACCEL SEN 2	V	age is displayed.	ECM internally. Thus, it differs from ECM terminal voltage signal.	
TP SEN 1-B1		The throttle position sensor signal voltage is dis-	TP SEN 2-B1 signal is converted by	
TP SEN 2-B1	V	played.	ECM internally. Thus, it differs from ECM terminal voltage signal.	
FUEL T/TMP SE	°C or °F	<ul> <li>The fuel temperature (determined by the signal voltage of the fuel tank temperature sensor) is displayed.</li> </ul>		
INT/A TEMP SE	°C or °F	The intake air temperature (determined by the signal voltage of the intake air temperature sen- sor) is indicated.		
EVAP SYS PRES	V	The signal voltage of EVAP control system pressure sensor is displayed.		
FUEL LEVEL SE	V	The signal voltage of the fuel level sensor is displayed.		
START SIGNAL	ON/OFF	Indicates start signal status [ON/OFF] computed by the ECM according to the signals of engine speed and battery voltage.	After starting the engine, [OFF] is dis- played regardless of the starter sig- nal.	
CLSD THL POS	ON/OFF	Indicates idle position [ON/OFF] computed by ECM according to the accelerator pedal position sensor signal.		
AIR COND SIG	ON/OFF	Indicates [ON/OFF] condition of the air conditioner switch as determined by the air conditioner signal.		
P/N POSI SW	ON/OFF	Indicates [ON/OFF] condition from the park/neu- tral position (PNP) signal.		
PW/ST SIGNAL	ON/OFF	[ON/OFF] condition of the power steering system (determined by the signal voltage of the power steering pressure sensor) is indicated.		
LOAD SIGNAL	ON/OFF	Indicates [ON/OFF] condition from the electrical load signal.     ON: Rear window defogger switch is ON and/or lighting switch is in 2nd position.     OFF: Both rear window defogger switch and lighting switch are OFF.		
IGNITION SW	ON/OFF	Indicates [ON/OFF] condition from ignition switch signal.		
HEATER FAN SW	ON/OFF	Indicates [ON/OFF] condition from the heater fan switch signal.		
BRAKE SW	ON/OFF	Indicates [ON/OFF] condition from the stop lamp switch signal.		
INJ PULSE-B1	mene	Indicates the actual fuel injection pulse width compensated by ECM according to the input sig-	When the engine is stopped, a certain	
INJ PULSE-B2	msec	nals.	computed value is indicated.	
IGN TIMING	BTDC	Indicates the ignition timing computed by ECM according to the input signals.	When the engine is stopped, a certain value is indicated.	
CAL/LD VALUE	%	"Calculated load value" indicates the value of the current air flow divided by peak air flow.		
MASS AIRFLOW	g⋅m/s	Indicates the mass air flow computed by ECM according to the signal voltage of the mass air flow sensor.		

## < SYSTEM DESCRIPTION >

[VQ35DE]

Monitored item	Unit	Description	Remarks
PURG VOL C/V	%	<ul> <li>Indicates the EVAP canister purge volume control solenoid valve control value computed by the ECM according to the input signals.</li> <li>The opening becomes larger as the value increases.</li> </ul>	
INT/V TIM (B1) INT/V TIM (B2)	°CA	Indicates [°CA] of intake camshaft advance angle.	
INT/V SOL-B1 INT/V SOL-B2	%	<ul> <li>The control value of the intake valve timing control solenoid valve (determined by ECM according to the input signals) is indicated.</li> <li>The advance angle becomes larger as the value increases.</li> </ul>	
VIAS S/V-1	ON/OFF	The control condition of the VIAS control solenoid valve 1 (determined by ECM according to the input signals) is indicated.     ON: VIAS control solenoid valve 1 is operating.     OFF: VIAS control solenoid valve 1 is not operating.	
VIAS S/V-2	ON/OFF	<ul> <li>The control condition of the VIAS control solenoid valve 2 (determined by ECM according to the in- put signals) is indicated.</li> <li>ON: VIAS control solenoid valve 2 is operating.</li> <li>OFF: VIAS control solenoid valve 2 is not operat- ing.</li> </ul>	
AIR COND RLY	ON/OFF	The air conditioner relay control condition (determined by ECM according to the input signals) is indicated.	
ENGINE MOUNT	IDLE/TRVL	The control condition of the electronic controlled engine mount (determined by ECM according to the input signals) is indicated.  IDLE: Engine speed is below 950 rpm TRVL: Engine speed is above 950 rpm	
FUEL PUMP RLY	ON/OFF	Indicates the fuel pump relay control condition determined by ECM according to the input signals.	
VENT CONT/V	ON/OFF	The control condition of the EVAP canister vent control valve (determined by ECM according to the input signals) is indicated.     ON: Closed OFF: Open	
THRTL RELAY	ON/OFF	Indicates the throttle control motor relay control condition determined by the ECM according to the input signals.	
COOLING FAN	HI/MID/LOW/ OFF	The control condition of the cooling fan (determined by ECM according to the input signals) is indicated.     HI: High speed operation     MID: Middle speed operation     LOW: Low speed operation     OFF: Stop	
HO2S2 HTR (B1)	0.11.5 ===	Indicates [ON/OFF] condition of heated oxygen	
HO2S2 HTR (B2)	ON/OFF	sensor 2 heater determined by ECM according to the input signals.	
I/P PULLY SPD	rpm	Indicates the engine speed computed from the in- put speed sensor signal.	
VEHICLE SPEED	km/h or mph	The vehicle speed computed from the vehicle speed signal sent from TCM is displayed.	

## < SYSTEM DESCRIPTION >

[VQ35DE]

Monitored item	Unit	Description	Remarks	0
IDL A/V LEARN	YET/CMPLT	Displays the condition of idle air volume learning YET: Idle Air Volume Learning has not been performed yet.  CMPLT: Idle Air Volume Learning has already been performed successfully.		EC
ENG OIL TEMP	°C or °F	The engine oil temperature (determined by the signal voltage of the engine oil temperature sen- sor) is displayed.		С
TRVL AFTER MIL	km or mile	Distance traveled while MIL is activated.		
A/F S1 HTR(B1)		Air fuel ratio (A/F) sensor 1 heater control value		D
A/F S1 HTR(B2)	%	<ul> <li>computed by ECM according to the input signals.</li> <li>The current flow to the heater becomes larger as the value increases.</li> </ul>		
AC PRESS SEN	V	The signal voltage from the refrigerant pressure sensor is displayed.		Е
VHCL SPEED SE	km/h or mph	<ul> <li>The vehicle speed computed from the vehicle speed signal sent from combination meter is dis- played.</li> </ul>		F
SET VHCL SPD	km/h or mph	The preset vehicle speed is displayed.		
MAIN SW	ON/OFF	Indicates [ON/OFF] condition from MAIN switch signal.		G
CANCEL SW	ON/OFF	Indicates [ON/OFF] condition from CANCEL switch signal.		Н
RESUME/ACC SW	ON/OFF	Indicates [ON/OFF] condition from RESUME/AC- CELERATE switch signal.		
SET SW	ON/OFF	<ul> <li>Indicates [ON/OFF] condition from SET/COAST switch signal.</li> </ul>		
BRAKE SW1	ON/OFF	Indicates [ON/OFF] condition from ASCD brake switch signal or ASCD clutch switch.		J
BRAKE SW2	ON/OFF	Indicates [ON/OFF] condition of stop lamp switch signal.		
VHCL SPD CUT	NON/CUT	Indicates the vehicle cruise condition.     NON: Vehicle speed is maintained at the ASCD set speed.     CUT: Vehicle speed decreased to excessively low compared with the ASCD set speed, and ASCD operation is cut off.		K L
LO SPEED CUT	NON/CUT	Indicates the vehicle cruise condition.     NON: Vehicle speed is maintained at the ASCD set speed.     CUT: Vehicle speed decreased to excessively low, and ASCD operation is cut off.		M
AT OD MONITOR	ON/OFF	Indicates [ON/OFF] condition of CVT O/D according to the input signal from the TCM.		N
AT OD CANCEL	ON/OFF	Indicates [ON/OFF] condition of CVT O/D cancel request signal.		0
CRUISE LAMP	ON/OFF	Indicates [ON/OFF] condition of CRUISE lamp determined by the ECM according to the input signals.		Р
SET LAMP	ON/OFF	Indicates [ON/OFF] condition of SET lamp determined by the ECM according to the input signals.		
BAT CUR SEN	mV	The signal voltage of battery current sensor is displayed.		

### < SYSTEM DESCRIPTION >

[VQ35DE]

Monitored item	Unit	Description	Remarks
ALT DUTY SIG	ON/OFF	The control condition of the power generation voltage variable control (determined by ECM according to the input signals) is indicated.     ON: Power generation voltage variable control is active.     OFF: Power generation voltage variable control is inactive.	
A/F ADJ-B1		Indicates the correction of a factor stored in ECM.	
A/F ADJ-B2	_	The factor is calculated from the difference be- tween the target air-fuel ratio stored in ECM and the air-fuel ratio calculated from A/F sensor 1 sig- nal.	
ALT DUTY	%	Indicates the duty ratio of the power generation command value. The ratio is calculated by ECM based on the battery current sensor signal.	

### NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

### **ACTIVE TEST MODE**

### Test Item

TEST ITEM	CONDITION	JUDGMENT	CHECK ITEM (REMEDY)
FUEL INJEC- TION	Engine: Return to the original non-standard condition     Change the amount of fuel injection using CONSULT-III.	If malfunctioning symptom disappears, see CHECK ITEM.	<ul> <li>Harness and connectors</li> <li>Fuel injector</li> <li>Air fuel ratio (A/F) sensor 1</li> </ul>
IGNITION TIM- ING	Engine: Return to the original non-standard condition     Timing light: Set     Retard the ignition timing using CONSULT-III.	If malfunctioning symptom disappears, see CHECK ITEM.	Perform Idle Air Volume Learning.
POWER BAL- ANCE	<ul> <li>Engine: After warming up, idle the engine.</li> <li>A/C switch OFF</li> <li>Selector lever: P or N position</li> <li>Cut off each injector signal one at a time using CONSULT-III.</li> </ul>	Engine runs rough or stops.	<ul> <li>Harness and connectors</li> <li>Compression</li> <li>Fuel injector</li> <li>Power transistor</li> <li>Spark plug</li> <li>Ignition coil</li> </ul>
COOLING FAN*	Ignition switch: ON     Turn the cooling fan "HI", "MID",     "LOW" and "OFF" using CON- SULT-III.	Cooling fan moves and stops.	Harness and connectors     Cooling fan motor     IPDM E/R
ENG COOLANT TEMP	Engine: Return to the original non-standard condition     Change the engine coolant temperature using CONSULT-III.	If malfunctioning symptom disappears, see CHECK ITEM.	Harness and connectors     Engine coolant temperature sensor     Fuel injector
FUEL PUMP RE- LAY	Ignition switch: ON (Engine stopped)     Turn the fuel pump relay "ON" and "OFF" using CONSULT-III and listen to operating sound.	Fuel pump relay makes the operating sound.	Harness and connectors     Fuel pump relay
VIAS S/V-1	Ignition switch: ON     Turn solenoid valve "ON" and     "OFF" using CONSULT-III and listen to operating sound.	Solenoid valve makes the operating sound.	Harness and connectors     Solenoid valve
VIAS S/V-2	Ignition switch: ON     Turn solenoid valve "ON" and     "OFF" using CONSULT-III and listen to operating sound.	Solenoid valve makes the operating sound.	Harness and connectors     Solenoid valve

< SYSTEM DESCRIPTION >

[VQ35DE]

Α

D

Е

M

Ν

TEST ITEM	CONDITION	JUDGMENT	CHECK ITEM (REMEDY)
ENGINE MOUNTING	Ignition switch: ON     Turn electronic controlled engine mount "IDLE" and "TRVL" with CONSULT-III.	Electronic controlled engine mount makes the operating sound.	Harness and connectors     Electronic controlled engine mount
PURG VOL CONT/V	Engine: After warming up, run engine at 1,500 rpm.     Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT-III.	Engine speed changes according to the opening percent.	Harness and connectors     Solenoid valve
FUEL/T TEMP SEN	Change the fuel tank temperature using CONSULT-III.		
VENT CON- TROL/V	Ignition switch: ON (Engine stopped)     Turn solenoid valve "ON" and "OFF" with the CONSULT-III and listen to operating sound.	Solenoid valve makes an operating sound.	Harness and connectors     Solenoid valve
INT V/T ASSIGN ANGLE	Engine: Return to the original non-standard condition     Change intake valve timing using CONSULT-III.	If malfunctioning symptom disappears, see CHECK ITEM.	Harness and connectors     Intake valve timing control solenoid valve
ALTERNATOR DUTY	Engine: Idle     Change duty ratio using CON- SULT-III.	Battery voltage changes.	Harness and connectors     IPDM E/R     Alternator

<sup>\*:</sup> Leaving cooling fan OFF with CONSULT-III while engine is running may cause the engine to overheat.

### **DTC & SRT CONFIRMATION MODE**

SRT STATUS Mode

For details, refer to EC-102, "Diagnosis Description".

PERMANENT DTC STATUS Mode

For details, refer to EC-102, "Diagnosis Description".

### NOTE:

This mode is not used in regions that permanent DTCs are not regulated by law.

### SRT WORK SUPPORT Mode

This mode enables a technician to drive a vehicle to set the SRT while monitoring the SRT status.

### PERMANENT DTC WORK SUPPORT Mode

This mode enables a technician to drive a vehicle to complete the driving pattern that is required for erasing permanent DTC.

#### NOTE:

This mode is not used in regions that permanent DTCs are not regulated by law.

#### DTC WORK SUPPORT Mode

Test mode	Test item	Corresponding DTC No.	Reference page
	EVP SML LEAK P0442/P1442*	P0442	EC-272
		P0455	EC-308
EVAPORATIVE SYSTEM		P0456	EC-314
	PURG VOL CN/V P1444	P0443	EC-278
	PURG FLOW P0441	P0441	EC-267
	A/F SEN1(B1) P1278/P1279	P0133	EC-194
A/F SEN1	A/F SEN1(B1) P1276	P0130	EC-182
A/F SEINT	A/F SEN1(B2) P1288/P1289	P0153	EC-194
	A/F SEN1(B2) P1286	P0150	EC-182

< SYSTEM DESCRIPTION >

[VQ35DE]

Test mode	Test item	Corresponding DTC No.	Reference page
	HO2S2(B1) P1146	P0138	EC-206
	HO2S2(B1) P1147	P0137	EC-199
HO2S2	HO2S2(B1) P0139	P0139	EC-215, "DTC Logic"
110232	HO2S2(B2) P1166	P0158	EC-206
	HO2S2(B2) P1167	P0157	EC-199
	HO2S2(B2) P0159	P0159	EC-215, "DTC Logic"

<sup>\*:</sup> DTC P1442 and P1456 does not apply to this model but appears in DTC Work Support Mode screens.

## Diagnosis Tool Function


INFOID:0000000005536528

### **DESCRIPTION**

Generic Scan Tool (OBD II scan tool) complying with SAE J1978/ ISO 15031-4 has several functions explained below.

ISO15765-4 is used as the protocol.

The name "GST" or "Generic Scan Tool" is used in this service manual.

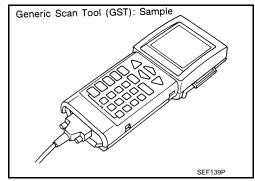

### **FUNCTION**

Di	agnostic Service	Function
Service \$01	READINESS TESTS	This diagnostic service gains access to current emission-related data values, including analog inputs and outputs, digital inputs and outputs, and system status information.
Service \$02	(FREEZE DATA)	This diagnostic service gains access to emission-related data value that were stored by ECM during the freeze frame. For details, refer to <a href="EC-498">EC-498</a> , "DTC Index".
Service \$03	DTCs	This diagnostic service gains access to emission-related power train trouble codes which were stored by ECM.
Service \$04	CLEAR DIAG INFO	This diagnostic service can clear all emission-related diagnostic information. This includes:  Clear number of diagnostic trouble codes (Service \$01)  Clear diagnostic trouble codes (Service \$03)  Clear trouble code for freeze frame data (Service \$01)  Clear freeze frame data (Service \$02)  Reset status of system monitoring test (Service \$01)  Clear on board monitoring test results (Service \$06 and \$07)
Service \$06	(ON BOARD TESTS)	This diagnostic service accesses the results of on board diagnostic monitoring tests of specific components/systems that are not continuously monitored.
Service \$07	(ON BOARD TESTS)	This diagnostic service enables the off board test drive to obtain test results for emission-related powertrain components/systems that are continuously monitored during normal driving conditions.
Service \$08	_	This diagnostic service can close EVAP system in ignition switch ON position (Engine stopped). When this diagnostic service is performed, EVAP canister vent control valve can be closed.  In the following conditions, this diagnostic service cannot function.  Low ambient temperature  Low battery voltage  Engine running  Ignition switch OFF  Low fuel temperature  Too much pressure is applied to EVAP system

< SYSTEM DESCRIPTION >

[VQ35DE]

Α

EC

D

Е

F

Н

K

M

Diagnostic Service		Function
Service \$09 (CALIBRATION ID)		This diagnostic service enables the off-board test device to request specific vehicle information such as Vehicle Identification Number (VIN) and Calibration IDs.
Service \$0A*	PERMANENT DTCs	This diagnostic service gains access to permanent DTCs which were stored by ECM.


:

### NOTE:


\*: Service \$0A is not applied for regions where it is not mandated.

### INSPECTION PROCEDURE

- 1. Turn ignition switch OFF.
- 2. Connect "GST" to data link connector (2), which is located under LH dash panel.

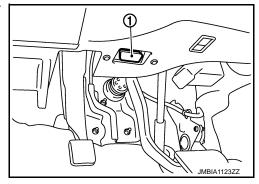

- 3. Turn ignition switch ON.
- 4. Enter the program according to instruction on the screen or in the operation manual.
  - (\*: Regarding GST screens in this section, sample screens are shown.)

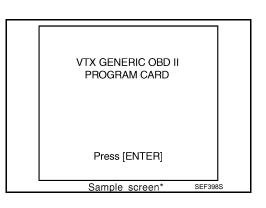

5. Perform each diagnostic mode according to each service procedure.

For further information, see the GST Operation Manual of the tool maker.



- F0: DATA LIST
- F1: FREEZE DATA
- F2: DTCs
- F3: SNAPSHOT
- F4: CLEAR DIAG INFO
- F5: O2 TEST RESULTS

### **F6: READINESS TESTS**

- F7: ON BOARD TESTS
- F8: EXPAND DIAG PROT
- F9: UNIT CONVERSION

Sample screen\* SEF416S

0

Ν

Р

[VQ35DE]

## DTC/CIRCUIT DIAGNOSIS

## TROUBLE DIAGNOSIS - SPECIFICATION VALUE

**Description** 

The specification (SP) value indicates the tolerance of the value that is displayed in "SPEC" in "DATA MONITOR" mode of CONSULT-III during normal operation of the Engine Control System. When the value in "SPEC" in "DATA MONITOR" mode is within the SP value, the Engine Control System is confirmed OK. When the value in "SPEC" in "DATA MONITOR" mode is NOT within the SP value, the Engine Control System may have one or more malfunctions.

The SP value is used to detect malfunctions that may affect the Engine Control System, but will not illuminate the MIL.

The SP value will be displayed for the following three items:

- B/FUEL SCHDL (The fuel injection pulse width programmed into ECM prior to any learned on board correction)
- A/F ALPHA-B1/B2 (The mean value of air-fuel ratio feedback correction factor per cycle)
- MAS A/F SE-B1 (The signal voltage of the mass air flow sensor)

## Component Function Check

INFOID:0000000005536530

## 1.START

Check that all of the following conditions are satisfied.

- Vehicle driven distance: More than 5,000 km (3,107 miles)
- Barometric pressure: 98.3 104.3 kPa (1.003 1.064 kg/cm<sup>2</sup>, 14.25 15.12 psi)
- Atmospheric temperature: 20 30°C (68 86°F)
- Engine coolant temperature: 75 95°C (167 203°F)
- Transmission: Warmed-up
- After the engine is warmed up to normal operating temperature, drive vehicle until "FLUID TEMP SE" (CVT fluid temperature sensor signal) indicates more than 60°C (140°F).
- Electrical load: Not applied
- Rear window defogger switch, air conditioner switch lighting switch are OFF. Steering wheel is straight ahead.
- Engine speed: Idle

>> GO TO 2.

## 2.PERFORM "SPEC" OF "DATA MONITOR" MODE

#### (P)With CONSULT-III

#### NOTE:

Perform "SPEC" in "DATA MONITOR" mode in maximum scale display.

- 1. Perform "EC-13, "BASIC INSPECTION: Special Repair Requirement".
- Select "B/FUEL SCHDL", "A/F ALPHA-B1", "A/F ALPHA-B2" and "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode with CONSULT-III.
- 3. Check that monitor items are within the SP value.

#### Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Go to EC-127, "Diagnosis Procedure".


[VQ35DE]


Α

Diagnosis Procedure

INFOID:0000000005536531

### **OVERALL SEQUENCE**

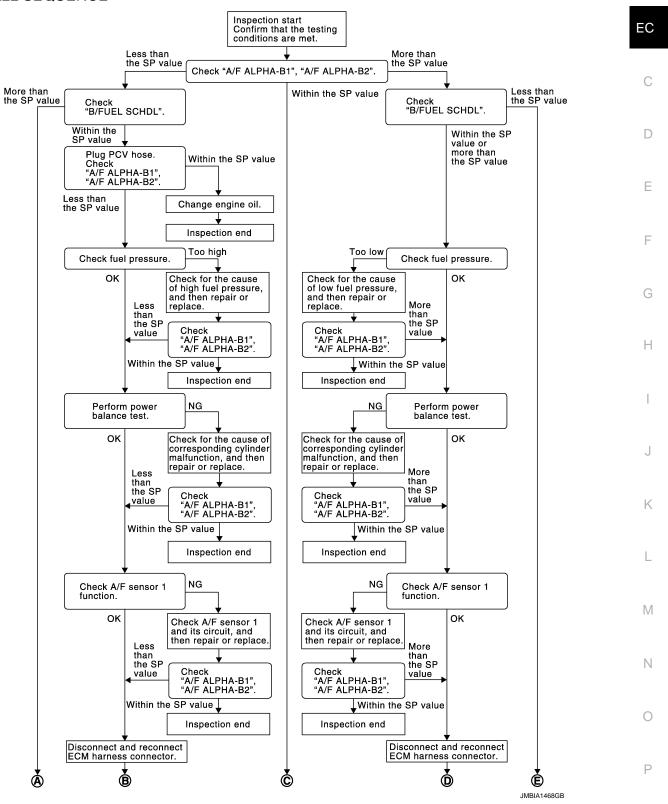

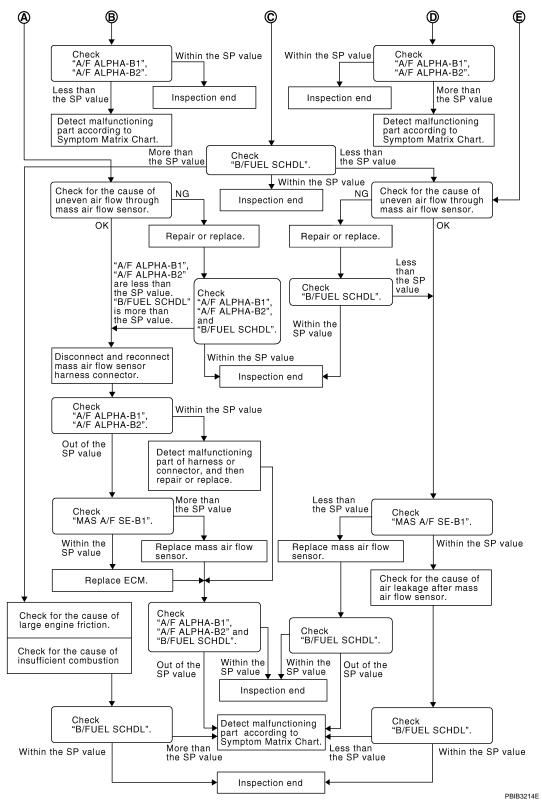

### **DETAILED PROCEDURE**

 ${f 1}$  .CHECK "A/F ALPHA-B1", "A/F ALPHA-B2"

### (E)With CONSULT-III

- Start engine.
- Confirm that the testing conditions are met. Refer to <u>EC-126, "Component Function Check"</u>.
- Select "A/F ALPHA-B1", "A/F ALPHA-B2" in "SPEC" of "DATA MONITOR" mode, and check that each indication is within the SP value.

TROUBLE DIAGNOSIS - SPECIFICATION VALUE < DTC/CIRCUIT DIAGNOSIS >	[VQ35DE]
	[140052]
<b>NOTE:</b> Check "A/F ALPHA-B1", "A/F ALPHA-B2" for approximately 1 minute because they may if the indication is out of the SP value even a little.	fluctuate. It is NG A
Is the measurement value within the SP value?	
YES >> GO TO 17.	EC
NO-1 >> Less than the SP value: GO TO 2.  NO-2 >> More than the SP value: GO TO 3.	
2.CHECK "B/FUEL SCHDL"	
	C
Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and check that the indicatio value.	n is within the SP
Is the measurement value within the SP value?	D
YES >> GO TO 4.	
NO >> More than the SP value: GO TO 19.	_
3.CHECK "B/FUEL SCHDL"	Е
Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and check that the indicatio value.	
Is the measurement value within the SP value?	F
YES >> GO TO 6.	
NO-1 >> More than the SP value: GO TO 6. NO-2 >> Less than the SP value: GO TO 25.	G
4.CHECK "A/F ALPHA-B1", "A/F ALPHA-B2"	
<ol> <li>Stop the engine.</li> <li>Disconnect PCV hose, and then plug it.</li> <li>Start engine.</li> <li>Select "A/F ALPHA-B1", "A/F ALPHA-B2" in "SPEC" of "DATA MONITOR" mode, and indication is within the SP value.</li> </ol>	check that each
Is the measurement value within the SP value?	
YES >> GO TO 5.	J
NO >> GO TO 6.	
5. CHANGE ENGINE OIL	
<ol> <li>Stop the engine.</li> <li>Change engine oil.</li> <li>NOTE:         This symptom may occur when a large amount of gasoline is mixed with engine oil be conditions (such as when engine oil temperature does not rise enough since a journe short during winter). The symptom will not be detected after changing engine oil or char ditions.     </li> </ol>	ey distance is too
>> INSPECTION END	
6.CHECK FUEL PRESSURE	N
Check fuel pressure. (Refer to EC-530, "Inspection".)	
Is the inspection result normal?	^
YES >> GO TO 9.	0
NO-1 >> Fuel pressure is too high: Replace "fuel filter and fuel pump assembly" and then	. GO TO 8.

NO-1 >> Fuel pressure is too high: Replace "fuel filter and fuel pump assembly" and then. GO TO 8. NO-2 >> Fuel pressure is too low: GO TO 7.

Р

## 7.DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

### Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly" and then GO TO 8.

>> Repair or replace malfunctioning part and then GO TO 8. NO

## 8.CHECK "A/F ALPHA-B1", "A/F ALPHA-B2"

**EC-129** Revision: 2009 September 2010 Murano

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- Start engine.
- Select "A/F ALPHA-B1", "A/F ALPHA-B2" in "SPEC" of "DATA MONITOR" mode, and check that each indication is within the SP value.

#### Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> GO TO 9.

## 9.PERFORM POWER BALANCE TEST

- Perform "POWER BALANCE" in "ACTIVE TEST" mode.
- Check that the each cylinder produces a momentary engine speed drop.

### Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 10.

# 10.detect malfunctioning part

#### Check the following below.

- Ignition coil and its circuit (Refer to <u>EC-445</u>, "Component Function Check".)
- Fuel injector and its circuit (Refer to EC-438, "Component Function Check".)
- Intake air leakage
- Low compression pressure (Refer to EM-27, "Inspection".)

#### Is the inspection result normal?

YES >> Replace fuel injector and then GO TO 11.

NO >> Repair or replace malfunctioning part and then GO TO 11.

# 11. CHECK "A/F ALPHA-B1", "A/F ALPHA-B2"

- Start engine.
- Select "A/F ALPHA-B1", "A/F ALPHA-B2" in "SPEC" of "DATA MONITOR" mode, and check that each indication is within the SP value.

#### Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> GO TO 12.

## 12.CHECK A/F SENSOR 1 FUNCTION

### Perform all DTC CONFIRMATION PROCEDURE related with A/F sensor 1.

- For DTC P0130, P0150, refer to <u>EC-182, "DTC Logic"</u>.
  For DTC P0131, P0151, refer to <u>EC-186, "DTC Logic"</u>.
- For DTC P0132, P0152, refer to <u>EC-190, "DTC Logic"</u>.
- For DTC P0133, P0153, refer to EC-194, "DTC Logic".
- For DTC P2A00, P2A03, refer to <u>EC-421, "DTC Logic"</u>.

#### Are any DTCs detected?

YES >> GO TO 15.

>> GO TO 13. NO

# 13. CHECK A/F SENSOR 1 CIRCUIT

Perform Diagnostic Procedure according to corresponding DTC.

>> GO TO 14.

## **14.**CHECK "A/F ALPHA-B1", "A/F ALPHA-B2"

- 1. Start engine.
- Select "A/F ALPHA-B1", "A/F ALPHA-B2" in "SPEC" of "DATA MONITOR" mode, and check that each indication is within the SP value.

#### Is the measurement value within the SP value?

YES >> INSPECTION END

>> GO TO 15. NO

# 15. DISCONNECT AND RECONNECT ECM HARNESS CONNECTOR

Stop the engine.

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

2. Disconnect ECM harness connector. Check pin terminal and connector for damage, and then reconnect it.

>> GO TO 16.

# 16.CHECK "A/F ALPHA-B1", "A/F ALPHA-B2"

EC

Α

- 1. Start engine.
- 2. Select "A/F ALPHA-B1", "A/F ALPHA-B2" in "SPEC" of "DATA MONITOR" mode, and check that each indication is within the SP value.

### Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Detect malfunctioning part according to <a href="EC-514">EC-514</a>, "Symptom Table".

D

## 17. CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and check that the indication is within the SP value.

Е

F

Н

### Is the measurement value within the SP value?

YES >> INSPECTION END

NO-1 >> More than the SP value: GO TO 18.

NO-2 >> Less than the SP value: GO TO 25.

18.detect malfunctioning part

1. Check for the cause of large engine friction. Refer to the following.

Engine oil level is too high

- Engine oil viscosity
- Belt tension of power steering, alternator, A/C compressor, etc. is excessive

Noise from engine

- Noise from transmission, etc.
- 2. Check for the cause of insufficient combustion. Refer to the following.
- Valve clearance malfunction
- Intake valve timing control function malfunction
- Camshaft sprocket installation malfunction, etc.

J

K

N

>> Repair or replace malfunctioning part, and then GO TO 30.

## 19. CHECK INTAKE SYSTEM

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- Crushed air ducts
- · Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Improper specification of intake air system

### Is the inspection result normal?

YES >> GO TO 21.

NO >> Repair or replace malfunctioning part, and then GO TO 20.

20.CHECK "A/F ALPHA-B1", "A/F ALPHA-B2", AND "B/FUEL SCHDL"

Select "A/F ALPHA-B1", "A/F ALPHA-B2", and "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and

# check that each indication is within the SP value. Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> "B/FUEL SCHDL" is more, "A/F ALPHA-B1", "A/F ALPHA-B2" are less than the SP value: GO TO

21. DISCONNECT AND RECONNECT MASS AIR FLOW SENSOR HARNESS CONNECTOR

- 1. Stop the engine.
- 2. Disconnect mass air flow sensor harness connector. Check pin terminal and connector for damage and then reconnect it again.

>> GO TO 22.

Revision: 2009 September

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# 22.CHECK "A/F ALPHA-B1", "A/F ALPHA-B2"

- 1. Start engine.
- Select "A/F ALPHA-B1", "A/F ALPHA-B2" in "SPEC" of "DATA MONITOR" mode, and check that each indication is within the SP value.

### Is the measurement value within the SP value?

YES >> Detect malfunctioning part of mass air flow sensor circuit and repair it. Refer to <u>EC-160, "Diagnosis Procedure"</u>. Then GO TO 29.

NO >> GO TO 23.

23. CHECK "MAS A/F SE-B1"

Select "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode, and check that the indication is within the SP value.

### Is the measurement value within the SP value?

YES >> GO TO 24.

NO >> More than the SP value: Replace mass air flow sensor, and then GO TO 29.

## 24.REPLACE ECM

- 1. Replace ECM.
- Refer to <u>EC-16</u>, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> GO TO 29.

## 25. CHECK INTAKE SYSTEM

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- Crushed air ducts
- · Malfunctioning seal in air cleaner element
- · Uneven dirt in air cleaner element
- Improper specification in intake air system

### Is the inspection result normal?

YES >> GO TO 27.

NO >> Repair or replace malfunctioning part, and then GO TO 26.

## 26.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and check that the indication is within the SP value.

### Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Less than the SP value: GO TO 27.

## 27 . CHECK "MAS A/F SE-B1"

Select "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode, and check that the indication is within the SP value.

#### Is the measurement value within the SP value?

YES >> GO TO 28.

NO >> Less than the SP value: Replace mass air flow sensor, and then GO TO 30.

## 28.CHECK INTAKE SYSTEM

Check for the cause of air leakage after the mass air flow sensor. Refer to the following.

- Disconnection, looseness, and cracks in air duct
- Looseness of oil filler cap
- · Disconnection of oil level gauge
- Open stuck, breakage, hose disconnection, or cracks in PCV valve
- Disconnection or cracks in EVAP purge hose, stuck open EVAP canister purge volume control solenoid valve
- Malfunctioning seal in rocker cover gasket
- · Disconnection, looseness, or cracks in hoses, such as a vacuum hose, connecting to intake air system parts

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

• Malfunctioning seal in intake air system, etc.

>> GO TO 30.

 $29.\mathtt{CHECK}$  "A/F ALPHA-B1", "A/F ALPHA-B2", AND "B/FUEL SCHDL"

Select "A/F ALPHA-B1", "A/F ALPHA-B2", and "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and check that each indication is within the SP value.

### Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Detect malfunctioning part according to <a>EC-514</a>, "Symptom Table"</a>.

## 30. CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and then check that the indication is within the SP value.

### Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Detect malfunctioning part according to <a>EC-514</a>, "Symptom Table"</a>.

EC

Α

C

D

Е

F

Н

K

M

L

Ν

Р

### POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## POWER SUPPLY AND GROUND CIRCUIT

## Diagnosis Procedure

INFOID:0000000005536532

## 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2.CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect ECM harness connector.
- 2. Check the continuity between ECM harness connector and ground.

E	CM	Ground	Continuity	
Connector	Terminal	Giodila	Continuity	
F7	12		Existed	
F/	16			
	107	Ground		
E16	108	Ground	LXISIGU	
LIO	111			
	112			

3. Also check harness for short to power.

#### is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

# 3.DETECT MALFUNCTIONING PART

#### Check the following.

- Harness connectors F121, E7
- · Harness for open or short between ECM and ground

>> Repair open circuit or short to power in harness or connectors.

## 4. CHECK ECM POWER SUPPLY CIRCUIT-I

- 1. Reconnect ECM harness connector.
- 2. Turn ignition switch OFF and then ON.
- 3. Check the voltage between ECM harness connector terminals.

Connector	+	_	Voltage
Connector	Terminal	Terminal	
E16	93	112	Battery voltage

### Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

## 5. DETECT MALFUNCTIONING PART

### Check the following.

- IPDM E/R connector E10
- 10 A fuse (No. 44)
- Harness for open or short between ECM and IPDM E/R

### POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

Е

>> Repair open circuit, short to ground or short to power in harness or connectors.

## 6.CHECK ECM POWER SUPPLY CIRCUIT-II

Check the voltage between ECM harness connector terminals.

ECM				
Connector	+	_	Condition	Voltage
Connector	Terminal	Terminal		
E16	105	112	Ignition switch ON → OFF	After turning ignition switch OFF, battery voltage will exist for a few seconds, then drop to approximately 0 V.

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 9.

## 7.CHECK ECM POWER SUPPLY CIRCUIT-III

- 1. Turn ignition switch ON.
- 2. Check the voltage between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Voltage	
Connector	Terminal	Giodila	voltage	
F12	49	Ground	Battery voltage	
1 12	53	Giodila	battery voltage	

### Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace IPDM E/R.

## 8. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

### >> INSPECTION END

## 9. CHECK ECM POWER SUPPLY CIRCUIT-IV

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Check the voltage between ECM harness connector terminals.

ECM				
	+	-		Voltage
Connector	Terminal	Connector	Terminal	
F7	24	E16	112	Battery voltage

### Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 10.

# 10. CHECK ECM POWER SUPPLY CIRCUIT-V

- 1. Disconnect ECM harness connector.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between ECM harness connector and IPDM E/R harness connector.

E	CM	IPDN	M E/R	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F7	24	F12	69	Existed

Revision: 2009 September

### POWER SUPPLY AND GROUND CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

2010 Murano

4. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 11. CHECK 15 A FUSE

- 1. Disconnect 15 A fuse (No. 50) from IPDM E/R.
- 2. Check 15 A fuse.

### Is the inspection result normal?

YES >> GO TO 13.

NO >> Replace 15 A fuse.

# 12. CHECK ECM POWER SUPPLY CIRCUIT-VI

- 1. Disconnect ECM harness connector.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between ECM harness connector and IPDM E/R harness connector.

•	ECM		IPDM E/R		Continuity
•	Connector	Terminal	Connector	Terminal	Continuity
	E16	105	E10	10	Existed

4. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 13. CHECK INTERMITTENT INCIDENT

### Refer to GI-39, "Intermittent Incident".

#### Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace harness or connectors.

### **U0101 CAN COMM CIRCUIT**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## U0101 CAN COMM CIRCUIT

Description INFOID:0000000005536533

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
U0101	Lost communication with TCM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) with TCM for 2 seconds or more.	CAN communication line between TCM and ECM     CAN communication line open or shorted

### DTC CONFIRMATION PROCEDURE

## 1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- Check DTC.

#### Is DTC detected?

YES >> EC-137, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

Go to LAN-17, "Trouble Diagnosis Flow Chart".

INFOID:0000000005536535

EC

Α

D

Е

Н

J

K

M

Ν

0

Р

[VQ35DE]

## U0164 CAN COMM CIRCUIT

**Description** 

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
U0164	Lost communication with Unified meter and A/C amp.	When ECM is not transmitting or receiving CAN communication signal of OBD (emission related diagnosis) with Unified meter and A/C amp. for 2 seconds or more.	CAN communication line between Unified meter and A/C amp. and ECM CAN communication line open or shorted

#### DTC CONFIRMATION PROCEDURE

## 1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- 2. Check DTC.

### Is DTC detected?

YES >> EC-138, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

Go to LAN-17, "Trouble Diagnosis Flow Chart".

INFOID:0000000005536538

### **U1001 CAN COMM CIRCUIT**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

D

Е

F

Н

K

Ν

Р

### U1001 CAN COMM CIRCUIT

Description INFOID:0000000005536539

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
U1001	CAN communication line	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission related diagnosis) for 2 seconds or more.	Harness or connectors (CAN communication line is open or shorted)

**EC-139** 

### DTC CONFIRMATION PROCEDURE

## 1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- Check DTC.

#### Is DTC detected?

YES >> EC-139, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

Go to LAN-17, "Trouble Diagnosis Flow Chart".

INFOID:0000000005536541

2010 Murano

Revision: 2009 September

[VQ35DE]

## P0011, P0021 IVT CONTROL

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

If DTC P0011 or P0021 is displayed with DTC P0075 or P0081, first perform the trouble diagnosis for DTC P0075, P0081. Refer to <u>EC-150</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0011	Intake valve timing control performance (bank 1)		Crankshaft position sensor (POS)     Camshaft position sensor (PHASE)     Intake valve timing control solenoid valve
P0021	Intake valve timing control performance (bank 2)	There is a gap between angle of target and phase-control angle degree.	<ul> <li>Accumulation of debris to the signal pick-up portion of the camshaft</li> <li>Timing chain installation</li> <li>Foreign matter caught in the oil groove for intake valve timing control</li> </ul>

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is between 10 V and 16 V at idle.

>> GO TO 2.

## 2. PERFORM DTC CONFIRMATION PROCEDURE-I

#### (P)With CONSULT-III

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III.
- 2. Start engine and warm it up to the normal operating temperature.
- Maintain the following conditions for at least 6 consecutive seconds. Hold the accelerator pedal as steady as possible.

ENG SPEED	1,200 - 2,000 rpm
COOLAN TEMP/S	More than 60°C (140°F)
B/FUEL SCHDL	More than 7.3 msec
Selector lever	D position

#### **CAUTION:**

#### Always drive at a safe speed.

- Stop vehicle with engine running and let engine idle for 10 seconds.
- 5. Check 1st trip DTC.

### With GST

Follow the procedure "With CONSULT-III" above.

### Is 1st trip DTC detected?

YES >> Go to EC-141, "Diagnosis Procedure"

NO >> GO TO 3.

## 3. PERFORM DTC CONFIRMATION PROCEDURE-II

### (P)With CONSULT-III

### **P0011, P0021 IVT CONTROL**

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Maintain the following conditions for at least 20 consecutive seconds.

ENG SPEED	1,400 - 3,175 rpm (A constant rotation is maintained.)
COOLAN TEMP/S	More than 70°C (158°F)
Selector lever	1st or 2nd position
Driving location uphill	Driving vehicle uphill (Increased engine load will help maintain the driving conditions required for this test.)

CAUTION:

Always drive at a safe speed.

2. Check 1st trip DTC.

■With GST

Follow the procedure "With CONSULT-III" above.

Is 1st trip DTC detected?

YES >> Go to EC-141, "Diagnosis Procedure"

>> INSPECTION END NO

## Diagnosis Procedure

1. CHECK OIL PRESSURE WARNING LAMP


Start engine.

2. Check oil pressure warning lamp and confirm it is not illuminated.

Is oil pressure warming lamp illuminated?

>> Go to LU-7, "Inspection". YES

NO >> GO TO 2.

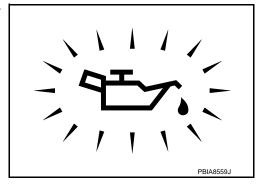

## 2.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to EC-142, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace malfunctioning intake valve timing control solenoid valve.

3.CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to EC-257, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace crankshaft position sensor (POS).

4. CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to EC-260, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace malfunctioning camshaft position sensor (PHASE).

**5.**CHECK CAMSHAFT (INTAKE)

Check the following.

EC

Α

D

Е

INFOID:0000000005536543

Н

K

Ν

Р

**EC-141** 2010 Murano

### < DTC/CIRCUIT DIAGNOSIS >


- Accumulation of debris on the signal plate of camshaft rear end
- · Chipping signal plate of camshaft rear end

#### Is the inspection result normal?

YES >> GO TO 6.

NO

>> Remove debris and clean the signal plate of camshaft rear end or replace camshaft.

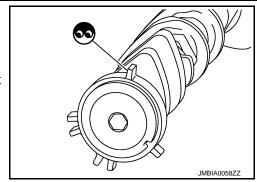

## 6.CHECK TIMING CHAIN INSTALLATION

Check service records for any recent repairs that may cause timing chain misalignment.

Are there any service records that may cause timing chain misalignment?

>> Check timing chain installation. Refer to EM-94, "Disassembly and Assembly".

>> GO TO 7. NO

## 7.CHECK LUBRICATION CIRCUIT

Refer to EM-102, "Inspection".

### Is the inspection result normal?

YES >> GO TO 8.

NO >> Clean lubrication line.

### 8.CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

## Component Inspection

INFOID:0000000005536544

[VQ35DE]

## 1. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-I

- Disconnect intake valve timing control solenoid valve harness connector.
- Check resistance between intake valve timing control solenoid valve terminals as per the following.

Terminals	Resistance
1 and 2	7.0 - 7.5 Ω [at 20°C (68°F)]
1 or 2 and ground	${}^{\infty}\Omega$ (Continuity should not exist)

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace malfunctioning intake valve timing control solenoid valve.

## 2.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-II

- 1. Remove intake valve timing control solenoid valve.
- 2. Provide 12 V DC between intake valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Check that the plunger moves as shown in the figure.

### **CAUTION:**


Never apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.

NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

## Is the inspection result normal?

YES >> INSPECTION END

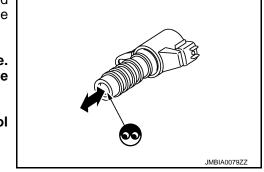

## **P0011, P0021 IVT CONTROL**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

NO >> Replace malfunctioning intake valve timing control solenoid valve.

Α

EC

С

D

Е

F

G

Н

J

Κ

L

 $\mathbb{N}$ 

Ν

0

Ρ

[VQ35DE]

## P0031, P0032, P0051, P0052 A/F SENSOR 1 HEATER

Description INFOID:000000005536545

#### SYSTEM DESCRIPTION

Sensor	Input signal to ECM	ECM function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Air fuel ratio (A/F) sensor 1	Air fuel ratio (A/F) sensor 1 heater
Mass air flow sensor	Amount of intake air	Tieater control	Heater

The ECM performs ON/OFF duty control of the A/F sensor 1 heater corresponding to the engine operating condition to keep the temperature of A/F sensor 1 element within the specified range.

DTC Logic

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0031	Air fuel ratio (A/F) sensor 1 heater (bank 1) control circuit low	The current amperage in the A/F sensor 1 heater circuit is out of the normal range.  (An excessively low voltage signal is sent to ECM through the A/F sensor 1 heater.)	Harness or connectors     (The A/F sensor 1 heater circuit is open or shorted.)     A/F sensor 1 heater
P0032	Air fuel ratio (A/F) sensor 1 heater (bank 1) control circuit high	The current amperage in the A/F sensor 1 heater circuit is out of the normal range.  (An excessively high voltage signal is sent to ECM through the A/F sensor 1 heater.)	<ul> <li>Harness or connectors         (The A/F sensor 1 heater circuit is shorted.)     </li> <li>A/F sensor 1 heater</li> </ul>
P0051	Air fuel ratio (A/F) sensor 1 heater (bank 2) control circuit low	The current amperage in the A/F sensor 1 heater circuit is out of the normal range.  (An excessively low voltage signal is sent to ECM through the A/F sensor 1 heater.)	Harness or connectors     (The A/F sensor 1 heater circuit is open or shorted.)     A/F sensor 1 heater
P0052	Air fuel ratio (A/F) sensor 1 heater (bank 2) control circuit high	The current amperage in the A/F sensor 1 heater circuit is out of the normal range.  (An excessively high voltage signal is sent to ECM through the A/F sensor 1 heater.)	Harness or connectors     (The A/F sensor 1 heater circuit is shorted.)     A/F sensor 1 heater

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

## 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for at least 10 seconds.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-144, "Diagnosis Procedure".

NG >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536547

## 1. CHECK GROUND CONNECTION

Revision: 2009 September EC-144 2010 Murano

### P0031, P0032, P0051, P0052 A/F SENSOR 1 HEATER

# < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

Е

F

Н

Ν

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-39, "Intermittent Incident".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect air fuel ratio (A/F) sensor 1 harness connector.
- Turn ignition switch ON.
- 3. Check the voltage between A/F sensor 1 harness connector and ground.

DTC		A/F sensor 1	Ground	Voltage	
ыс	Bank	Connector	Connector Terminal		voltage
P0031, P0032	1	F27	4	Ground	Battery voltage
P0051, P0052	2	F64	4	Giodila	Dattery Voltage

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

# 3.DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R harness connector F12
- 15 A fuse (No. 46)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

# 4.CHECK A/F SENSOR 1 HEATER OUTPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check harness continuity between A/F sensor 1 harness connector and ECM harness connector.

DTC	A/F sensor 1			E	Continuity	
ыс	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0031, P0032	1	F27	3	F7	4	Existed
P0051, P0052	2	F64	3	1 7	8	LXISIEU

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

#### 5.CHECK A/F SENSOR 1 HEATER

Refer to EC-146, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

## $oldsymbol{6}$ .REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1.

#### **CAUTION:**

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

EC-145

>> INSPECTION END

# 7. CHECK INTERMITTENT INCIDENT

Perform GI-39, "Intermittent Incident".

>> INSPECTION END

# Component Inspection

INFOID:0000000005536548

2010 Murano

# 1. CHECK AIR FUEL RATIO (A/F) SENSOR 1

Check resistance between A/F sensor terminals as per the following.

Terminal No.	Resistance
3 and 4	1.8 - 2.44 Ω [at 25°C (77°F)]
3 and 1, 2	∞ Ω
4 and 1, 2	(Continuity should not exist)

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1.

#### **CAUTION:**

- Discard any (A/F) sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new (A/F) sensor, clean exhaust system threads using Heated Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

## P0037, P0038, P0057, P0058 HO2S2 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

D

Е

Р

# P0037, P0038, P0057, P0058 HO2S2 HEATER

Description INFOID:0000000005536549

#### SYSTEM DESCRIPTION

Sensor Input signal to EC		ECM function	Actuator	
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 2	Heated oxygen sensor 2 heater	
Engine coolant temperature sensor	Engine coolant temperature	heater control		
Mass air flow sensor	Amount of intake air			

The ECM performs ON/OFF control of the heated oxygen sensor 2 heater corresponding to the engine speed, amount of intake air and engine coolant temperature.

#### **OPERATION**

Engine speed	Heated oxygen sensor 2 heater	F
Above 3,600 rpm	OFF	
Below 3,600 rpm after the following conditions are met.  Engine: After warming up  Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load	ON	G

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0037	Heated oxygen sensor 2 heater (bank 1) control circuit low	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range.  (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	Harness or connectors     (The heated oxygen sensor 2 heater circuit is open or shorted.)     Heated oxygen sensor 2 heater
P0038	Heated oxygen sensor 2 heater (bank 1) control circuit high	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	Harness or connectors     (The heated oxygen sensor 2 heater circuit is shorted.)     Heated oxygen sensor 2 heater
P0057	Heated oxygen sensor 2 heater (bank 2) control circuit low	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	Harness or connectors     (The heated oxygen sensor 2 heater circuit is open or shorted.)     Heated oxygen sensor 2 heater
P0058	Heated oxygen sensor 2 heater (bank 2) control circuit high	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	Harness or connectors     (The heated oxygen sensor 2 heater circuit is shorted.)     Heated oxygen sensor 2 heater

#### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

## **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is between 10.5 V and 16 V at idle.

>> GO TO 2.

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to the normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 6. Let engine idle for 1 minute.
- 7. Check 1st trip DTC.

#### Is 1st tip DTC detected?

YES >> Go to EC-148, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536551

# 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2. CHECK HO2S2 POWER SUPPLY CIRCUIT

- 1. Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between HO2S2 harness connector and ground.

DTC		HO2S2	Ground	Voltage	
DIO	Bank	Connector	Terminal	Ground	voltage
P0037, P0038	1	F70	2	Ground	Battery voltage
P0057, P0058	2	F71	2	Giodila	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

# 3.DETECT MALFUNCTIONING PART

#### Check the following.

- IPDM E/R connector F8
- 15 A fuse (No. 46)
- · Harness for open or short between heated oxygen sensor 2 and fuse

>> Repair open circuit, short to ground or short to power in harness or connectors.

# 4. CHECK HO2S2 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between HO2S2 harness connector and ECM harness connector.

DTC	HO2S2			E	Continuity	
ы	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0037, P0038	1	F70	3	F7	13	Existed
P0057, P0058	2	F71	3	ГΙ	17	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 5.

## P0037, P0038, P0057, P0058 HO2S2 HEATER

[VQ35DE] < DTC/CIRCUIT DIAGNOSIS > NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 5. CHECK HEATED OXYGEN SENSOR 2 HEATER

Refer to EC-149, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

## 6.REPLACE HEATED OXYGEN SENSOR 2

Replace malfunctioning heated oxygen sensor 2.

#### **CAUTION:**

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

# 7.CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

# Component Inspection

1 .CHECK HEATED OXYGEN SENSOR 2 HEATER

Check resistance between HO2S2 terminals as per the following.

Terminal No.	Resistance
2 and 3	3.4 - 4.4 Ω [at 25°C (77°F)]
1 and 2, 3, 4	∞ Ω
4 and 1, 2, 3	(Continuity should not exist)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

Revision: 2009 September

## 2.REPLACE HEATED OXYGEN SENSOR 2.

Replace malfunctioning heated oxygen sensor 2.

#### **CAUTION:**

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

Р

**EC-149** 2010 Murano

Α

EC

Е

F

INFOID:0000000005536552

# P0075, P0081 IVT CONTROL SOLENOID VALVE

**Description** 


Intake valve timing control solenoid valve is activated by ON/OFF pulse duty (ratio) signals from the ECM.

The intake valve timing control solenoid valve changes the oil amount and direction of flow through intake valve timing control unit or stops oil flow.

The longer pulse width advances valve timing.

The shorter pulse width retards valve timing.

When ON and OFF pulse widths become equal, the solenoid valve stops oil pressure flow to fix the intake valve angle at the control position.

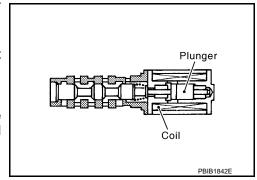

**DTC** Logic

INFOID:0000000005536554

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0075	Intake valve timing control so- lenoid valve (bank 1) circuit	An improper voltage is sent to the ECM through intake valve timing control solenoid	Harness or connectors     (Intake valve timing control solenoid valve)
P0081	Intake valve timing control so- lenoid valve (bank 2) circuit		circuit is open or shorted.)  • Intake valve timing control solenoid valve

## DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 5 seconds.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-150, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536555

# 1. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect intake valve timing (IVT) control solenoid valve harness connector.
- Turn ignition switch ON.
- Check the voltage between intake valve timing control solenoid valve harness connector and ground with CONSULT-III or tester.

DTC	IVT control solenoid valve			Ground	Voltage
DIC	Bank	Connector	Terminal	Giodila	voltage
P0075	1	F81	2	Ground	Battery voltage
P0081	2	F82	2	Giodila	Ballery Vollage

## P0075, P0081 IVT CONTROL SOLENOID VALVE

# < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

2.check intake valve timing control solenoid valve output signal circuit for open AND SHORT

EC

Α

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between intake valve timing control solenoid valve harness connector and ECM harness connector.

DTC	IVT co	ontrol solenoid	d valve	E	СМ	Continuity
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0075	1	F81	1	F8	78	Existed
P0081	2	F82	1	10	75	LXISIEU

Also check harness for short to ground and short to power.

## Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to EC-151, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace malfunctioning intake valve timing control solenoid valve.

# 4. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

# Component Inspection

INFOID:0000000005536556

2010 Murano

# ${f 1}$ .CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-I

- Disconnect intake valve timing control solenoid valve harness connector.
- 2. Check resistance between intake valve timing control solenoid valve terminals as per the following.

Terminals	Resistance
1 and 2	7.0 - 7.5 Ω [at 20°C (68°F)]
1 or 2 and ground	${}^{\infty}\Omega$ (Continuity should not exist)

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace malfunctioning intake valve timing control solenoid valve.

# 2.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-II

1. Remove intake valve timing control solenoid valve.

Р

**EC-151** Revision: 2009 September

Е

D

F

Н

N

# P0075, P0081 IVT CONTROL SOLENOID VALVE

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

2. Provide 12 V DC between intake valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Check that the plunger moves as shown in the figure.

#### **CAUTION:**

Never apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.


NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace malfunctioning intake valve timing control solenoid valve.

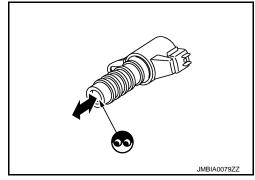


## P0101 MAF SENSOR

Description INFOID:0000000005536557

The mass air flow sensor (1) is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. The mass air flow sensor controls the temperature of the hot wire to a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The greater air flow, the greater the heat loss.

Therefore, the electric current supplied to hot wire is changed to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

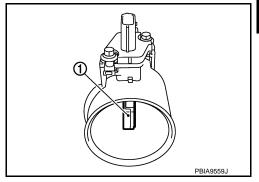

**DTC Logic** INFOID:0000000005536558

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	name DTC detecting condition		Possible cause
		A)	A high voltage from the sensor is sent to ECM under light load driving condition.	Harness or connectors     (The sensor circuit is open or shorted.)     Mass air flow sensor     EVAP control system pressure sensor
P0101	Mass air flow sensor circuit range/performance	В)	A low voltage from the sensor is sent to ECM under heavy load driving condition.	Harness or connectors     (The sensor circuit is open or shorted.)     Intake air leakage     Mass air flow sensor     EVAP control system pressure sensor     Intake air temperature sensor

#### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

# >> GO TO 2. 2.perform dtc confirmation procedure for malfunction a

- Start engine and warm it up to normal operating temperature.
- 2. Run engine for at least 10 seconds at idle speed.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-155, "Diagnosis Procedure".

NO-1 >> With CONSULT-III: GO TO 3.

NO-2 >> Without CONSULT-III: GO TO 5.

# 3.CHECK MASS AIR FLOW SENSOR FUNCTION

- 1. Turn ignition switch ON.
- Start engine and warm it up to normal operating temperature. If engine cannot be started, go to EC-155, "Diagnosis Procedure".

**EC-153** Revision: 2009 September 2010 Murano

EC

Α

D

Е

M

N

Р


#### < DTC/CIRCUIT DIAGNOSIS >

- Select "MAS A/F SE-B1" in "DATA MONITOR" mode with CON-SULT-III.
- 4. Check the voltage of "MAS A/F SE-B1".
- 5. Increases engine speed to about 4,000 rpm.
- Monitor the linear voltage rise in response to engine speed increases.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-155, "Diagnosis Procedure".

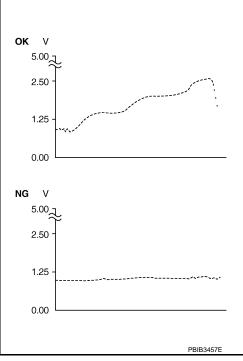

# 4. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B

1. Maintain the following conditions for at least 10 consecutive seconds.

ENG SPEED	More than 2,000 rpm
TP SEN 1-B1	More than 1.5 V
TP SEN 2-B1	More than 1.5 V
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

#### **CAUTION:**

#### Always drive vehicle at a safe speed.

2. Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-155, "Diagnosis Procedure".

NO >> INSPECTION END

# ${f 5.}$ PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B

Perform component function check. Refer to EC-154, "Component Function Check".

#### NOTE:

Use component function check to check the overall function of the mass air flow sensor circuit. During this check, a 1st trip DTC might not be confirmed.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-155, "Diagnosis Procedure".

# Component Function Check

INFOID:0000000005536559

# 1. PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B

### With GST

- 1. Start engine and warm it up to normal operating temperature.
- Select Service \$01 with GST.

#### P0101 MAF SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >


[VQ35DE]

- Check the mass air flow sensor signal with Service \$01.
- Check for linear mass air flow sensor signal value rise in response to increases to about 4,000 rpm in engine speed.

#### Is the inspection result normal?

>> INSPECTION END YES

NO >> Go to EC-155, "Diagnosis Procedure".

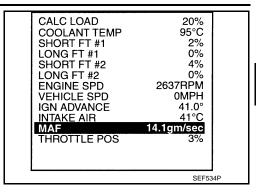

# Diagnosis Procedure

INFOID:0000000005536560

# 1. INSPECTION START

Confirm the detected malfunction (A or B). Refer to EC-153, "DTC Logic".

#### Which malfunction is detected?

Α >> GO TO 3.

В >> GO TO 2.

# 2.check intake system

Check the following for connection.

- Air duct
- Vacuum hoses
- · Intake air passage between air duct and intake manifold

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Reconnect the parts.

# 3.check ground connection

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

## Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace ground connection.

## f 4.CHECK MAF SENSOR POWER SUPPLY CIRCUIT

- Disconnect mass air flow (MAF) sensor harness connector.
- Turn ignition switch ON.
- Check the voltage between MAF sensor harness connector and ground.

MAF	sensor	Ground	Voltage	
Connector Terminal		Giodila	voltage	
F4	5	Ground	Battery voltage	

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

# DETECT MALFUNCTIONING PART

#### Check the following.

- Harness connectors E7. F121
- Harness for open or short between mass air flow sensor and ECM
- Harness for open or short between mass air flow sensor and IPDM E/R

>> Repair open circuit, short to ground or short to power in harness or connectors.

# O.CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

**EC-155** Revision: 2009 September 2010 Murano

Α

EC

F

N

#### < DTC/CIRCUIT DIAGNOSIS >

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF	sensor	E	Continuity	
Connector	Terminal	Connector	Continuity	
F4	4	F8	56	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 7.CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF	sensor	E	Continuity	
Connector	Terminal	Connector	Continuity	
F4	3	F8	58	Existed

2. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 8. CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to EC-165, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace mass air flow sensor (with intake air temperature sensor).

## 9.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-296, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace EVAP control system pressure sensor.

# 10. CHECK MASS AIR FLOW SENSOR

Refer to EC-156, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace mass air flow sensor.

# 11. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

## >> INSPECTION END

# Component Inspection

INFOID:0000000005536561

# 1. CHECK MASS AIR FLOW SENSOR-I

#### (I) With CONSULT-III

- 1. Reconnect all harness connectors disconnected.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Connect CONSULT-III and select "DATA MONITOR" mode.
- 4. Select "MAS A/F SE-B1" and check indication under the following conditions.

Monitor item	Condition	MAS A/F SE-B1 (V)
MAS A/F SE-B1	Ignition switch ON (Engine stopped.)	Approx. 0.4
	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
	Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### Without CONSULT-III

- Reconnect all harness connectors disconnected.
- Start engine and warm it up to normal operating temperature.
- Check the voltage between ECM harness connector terminals under the following conditions.

ECM				
Connector	+	_	Condition	Voltage (V)
Connector	Terminal	Terminal		
	58 (MAF sen- sor signal)		Ignition switch ON (Engine stopped.)	Approx. 0.4
F8			Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
		ground)	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
			Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2.check for the cause of uneven air flow through mass air flow sensor

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- · Crushed air ducts
- Malfunctioning seal of air cleaner element
- · Uneven dirt of air cleaner element
- Improper specification of intake air system parts

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

# 3. CHECK MASS AIR FLOW SENSOR-II

#### (P)With CONSULT-III

- 1. Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Connect CONSULT-III and select "DATA MONITOR" mode.
- 4. Select "MAS A/F SE-B1" and check indication under the following conditions.

Monitor item	Condition	MAS A/F SE-B1 (V)
	Ignition switch ON (Engine stopped.)	Approx. 0.4
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
MAS A/F SE-B1	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
	Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### Without CONSULT-III

- Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Check the voltage between ECM harness connector terminals under the following conditions.

Revision: 2009 September EC-157 2010 Murano

--

EC

Α

С

D

Е

F

0

П

. .

L

. .

 $\mathbb{N}$ 

Ν

0

Р

ECM				
Connector	+	_	Condition	Voltage (V)
	Terminal	Terminal		
			Ignition switch ON (Engine stopped.)	Approx. 0.4
F8	58 (MAF sen-	56 (Sensor	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
го	sor signal)	ground)	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
			Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

## Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK MASS AIR FLOW SENSOR-III

## (I) With CONSULT-III

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT-III and select "DATA MONITOR" mode.
- 5. Select "MAS A/F SE-B1" and check indication under the following conditions.

Monitor item	Condition	MAS A/F SE-B1 (V)
	Ignition switch ON (Engine stopped.)	Approx. 0.4
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
	Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### **⋈**Without CONSULT-III

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector terminals under the following conditions.

ECM				
Connector	+	_	Condition	Voltage (V)
	Terminal	Terminal		
`		58 56 MAF sen- sor signal) (Sensor ground)	Ignition switch ON (Engine stopped.)	Approx. 0.4
			Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
	sor signal)		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
			Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### Is the inspection result normal?

YES >> INSPECTION END


NO >> Clean or replace mass air flow sensor.

# P0102, P0103 MAF SENSOR

**Description** 

The mass air flow sensor (1) is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. The mass air flow sensor controls the temperature of the hot wire to a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The greater air flow, the greater the heat loss.

Therefore, the electric current supplied to hot wire is changed to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

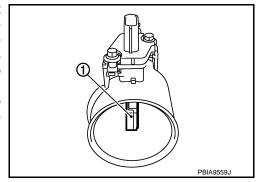

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0102	Mass air flow sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted.)     Intake air leakage     Mass air flow sensor
P0103	Mass air flow sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted.)     Mass air flow sensor

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### Which DTC is detected?

P0102 >> GO TO 2.

P0103 >> GO TO 3.

# 2.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0102

- 1. Start engine and wait at least 5 seconds.
- Check DTC.

## Is DTC detected?

YES >> Go to EC-160, "Diagnosis Procedure".

NO >> INSPECTION END

# 3.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0103-I

- 1. Turn ignition switch ON and wait at least 5 seconds.
- Check DTC.

#### Is DTC detected?

YES >> Go to EC-160, "Diagnosis Procedure".

NO >> GO TO 4.

# 4. PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0103-II

- 1. Start engine and wait at least 5 seconds.
- Check DTC.

EC

Α

D

Ε

F

G

П

K

.

M

N

IN

 $\circ$ 

C

F

## **P0102, P0103 MAF SENSOR**

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

#### Is DTC detected?

YES >> Go to EC-160, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536564

# 1. INSPECTION START

Confirm the detected DTC.

#### Which DTC is detected?

P0102 >> GO TO 2.

P0103 >> GO TO 3.

# 2. CHECK INTAKE SYSTEM

Check the following for connection.

- Air duct
- Vacuum hoses
- · Intake air passage between air duct to intake manifold

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Reconnect the parts.

# 3.check ground connection

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace ground connection.

## 4. CHECK MAF SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect mass air flow (MAF) sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between MAF sensor harness connector and ground.

MAF	sensor	Ground	Voltage
Connector	Terminal	Glound	voltage
F4	5	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

# ${f 5.}$ DETECT MALFUNCTIONING PART

#### Check the following.

- Harness connectors E7, F121
- Harness for open or short between mass air flow sensor and ECM
- Harness for open or short between mass air flow sensor and IPDM E/R

>> Repair open circuit, short to ground or short to power in harness or connectors.

# 6.CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF	sensor	ECM		Continuity	
Connector Terminal		Connector	Terminal	Continuity	
F4 4		F8	56	Existed	
Also check harness for short to ground and short to power.					

#### Is the inspection result normal?

YES >> GO TO 7.

>> Repair open circuit, short to ground or short to power in harness or connectors. NO

## .CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF	sensor	E	Continuity	
Connector	Terminal	Connector	Terminal	Continuity
F4	3	F8	58	Existed

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 8.CHECK MASS AIR FLOW SENSOR

Refer to EC-161, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace mass air flow sensor.

## 9. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

# Component Inspection

# 1.CHECK MASS AIR FLOW SENSOR-I

#### With CONSULT-III

- 1. Reconnect all harness connectors disconnected.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Connect CONSULT-III and select "DATA MONITOR" mode.
- 4. Select "MAS A/F SE-B1" and check indication under the following conditions.

Monitor item	Condition	MAS A/F SE-B1 (V)
	Ignition switch ON (Engine stopped.)	Approx. 0.4
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
WAS A/F SE-DI	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
	Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### Without CONSULT-III

- 1. Reconnect all harness connectors disconnected.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Check the voltage between ECM harness connector terminals under the following conditions.

EC

Α

Е

INFOID:0000000005536565

	ECM			
Connector	+	_	Condition	Voltage (V)
	Terminal	Terminal		
	58 (MAF sen- sor signal)		Ignition switch ON (Engine stopped.)	Approx. 0.4
F8			Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
го		ground)	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
			Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2.CHECK FOR THE CAUSE OF UNEVEN AIR FLOW THROUGH MASS AIR FLOW SENSOR

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- · Improper specification of intake air system parts

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

# 3.CHECK MASS AIR FLOW SENSOR-II

#### (P)With CONSULT-III

- Repair or replace malfunctioning part.
- Start engine and warm it up to normal operating temperature.
- Connect CONSULT-III and select "DATA MONITOR" mode.
- Select "MAS A/F SE-B1" and check indication under the following conditions.

Monitor item	Condition	MAS A/F SE-B1 (V)
	Ignition switch ON (Engine stopped.)	Approx. 0.4
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
WAS A/F SE-BT	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
	Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### **Without CONSULT-III**

- Repair or replace malfunctioning part.
- Start engine and warm it up to normal operating temperature.
- Check the voltage between ECM harness connector terminals under the following conditions.

	ECM			
Connector	+	_	Condition	Voltage (V)
	Terminal	Terminal		
	58 (MAF sen- sor signal)	(MAF sen- (Sensor	Ignition switch ON (Engine stopped.)	Approx. 0.4
F8			Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
			2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
			Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### Is the inspection result normal?

## **P0102, P0103 MAF SENSOR**

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK MASS AIR FLOW SENSOR-III

## With CONSULT-III

- Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT-III and select "DATA MONITOR" mode.
- 5. Select "MAS A/F SE-B1" and check indication under the following conditions.

Monitor item	Condition	MAS A/F SE-B1 (V)
	Ignition switch ON (Engine stopped.)	Approx. 0.4
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2
MAS A/F SE-B1	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
	Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

#### Without CONSULT-III

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector terminals under the following conditions.

	ECM				
Connector	+	_	Condition	Voltage (V)	
	Terminal	Terminal			
	58 (MAF sen- sor signal)		Ignition switch ON (Engine stopped.)	Approx. 0.4	
F8		56 (Sensor	Idle (Engine is warmed-up to normal operating temperature.)	0.9 - 1.2	
го		`	ground)	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.6 - 1.9
			Idle to approximately 4,000 rpm	0.9 - 1.2 to Approx. 2.4*	

<sup>\*:</sup> Check for linear voltage rise in response to engine being increased to approximately 4,000 rpm.

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Clean or replace mass air flow sensor.

EC

Α

D

Е

F

Н

K

L

Ν

0


Р

# P0112, P0113 IAT SENSOR

Description INFOID:0000000005536566

The intake air temperature sensor is built-into the mass air flow sensor (1). The sensor detects intake air temperature and transmits a signal to the ECM.


The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the rise in temperature.

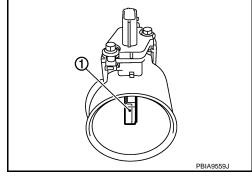

#### <Reference data>

Intake air temperature [°C (°F)]	Voltage* (V)	Resistance ( $k\Omega$ )
25 (77)	3.3	1.800 - 2.200
80 (176)	1.2	0.283 - 0.359

<sup>\*:</sup> These data are reference values and are measured between ECM terminals 50 (Intake air temperature sensor) and 56 (Sensor ground).

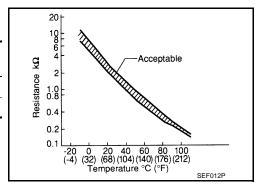

**DTC Logic** 

INFOID:0000000005536567

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0112	Intake air tempera- ture sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted.)
P0113	Intake air tempera- ture sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Intake air temperature sensor

#### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### >> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON and wait at least 5 seconds.
- 2. Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-165, "Diagnosis Procedure".

>> INSPECTION END NO

## **P0112, P0113 IAT SENSOR**

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Diagnosis	Procedure
-----------	-----------

INFOID:0000000005536568

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK INTAKE AIR TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- Disconnect mass air flow sensor (with intake air temperature sensor) harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between mass air flow sensor harness connector and ground.

MAF sensor		Ground	Voltage
Connector	Terminal	Ground	voltage
F4	2	Ground	Approx. 5 V

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.CHECK INTAKE AIR TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check harness continuity between mass air flow sensor harness connector and ECM harness connector.

MAF sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F4	1	F8	56	Existed

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

### 4.CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to EC-165, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace mass air flow sensor (with intake air temperature sensor).

#### 5. CHECK INTERMITTENT INCIDENT

>> INSPECTION END

Refer to GI-39, "Intermittent Incident".

# Component Inspection

# 1. CHECK INTAKE AIR TEMPERATURE SENSOR

- Turn ignition switch OFF.
- Disconnect mass air flow sensor harness connector. 2.
- Check resistance between mass air flow sensor terminals as per the following.

**EC-165** 

EC

Α

Е

D

M

INFOID:0000000005536569

Р

# **P0112, P0113 IAT SENSOR**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Terminal	Condition		Resistance (kΩ)
1 and 2	Temperature [°C (°F)]	25 (77)	1.800 - 2.200

## Is the inspection result normal?


YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor).

## P0116 ECT SENSOR

Description


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

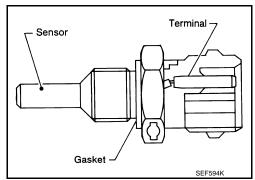

#### <Reference data>

Engine coolant temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

<sup>\*:</sup> These data are reference values and are measured between ECM terminals 46 (Engine coolant temperature sensor) and 52 (Sensor ground).

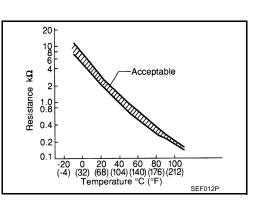

# DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

If DTC P0116 is displayed with P0117 or P0118, first perform the trouble diagnosis for DTC P0117, P0118. Refer to <a href="EC-169">EC-169</a>, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0116	Engine coolant temper- ature sensor circuit range/performance	Engine coolant temperature signal from engine coolant temperature sensor does not fluctuate, even when some time has passed after starting the engine with pre-warming up condition.	Harness or connectors     (High or low resistance in the circuit)     Engine coolant temperature sensor

#### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TEST CONDITION:**

Before performing the following procedure, do not add fuel.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to normal operating temperature.
- 2. Rev engine up to 2,000 rpm for more than 10 minutes.
- 3. Move the vehicle to a cool place, then stop engine and turn ignition switch OFF.

D

Α

EC

Е

G

..

INFOID:0000000005536571

K

N/I

Ν

 $\cap$ 

Р

Revision: 2009 September EC-167 2010 Murano

#### < DTC/CIRCUIT DIAGNOSIS >

- Check resistance between "fuel level sensor unit and fuel pump" terminals 4 and 5.
- Soak the vehicle until the resistance between "fuel level sensor unit and fuel pump" terminals 4 and 5 becomes  $0.5 \text{ k}\Omega$  higher than the value measured before soaking.

**CAUTION:** 

Never turn ignition switch ON during soaking.

NOTE:

Soak time changes depending on ambient air temperature. It may take several hours.

- 6. Start engine and let it idle for 20 minutes.
- 7. Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> EC-168, "Diagnosis Procedure"

>> INSPECTION END NO

# Diagnosis Procedure

INFOID:0000000005536572

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-168, "Component Inspection".

## Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace engine coolant temperature sensor.

# 3. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

# Component Inspection

INFOID:0000000005536573

# 1. CHECK ENGINE COOLANT TEMPERATURE SENSOR


- Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- 3. Remove engine coolant temperature sensor.
- Check resistance between engine coolant temperature sensor terminals as per the following.

Terminals	Condition		Resistance (k $\Omega$ )
		20 (68)	2.1 - 2.9
1 and 2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
		90 (194)	0.236 - 0.260

#### Is the inspection result normal?

YES >> INSPECTION END


NO >> Replace engine coolant temperature sensor.

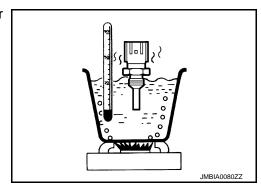

# P0117, P0118 ECT SENSOR

Description INFOID:0000000005536574


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

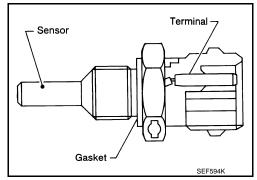

#### <Reference data>

Engine coolant temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

<sup>\*:</sup> These data are reference values and are measured between ECM terminals 46 (Engine coolant temperature sensor) and 52 (Sensor ground).

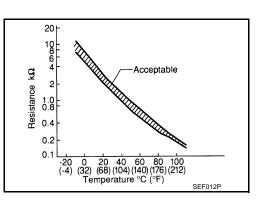

# **DTC** Logic

DTC DETECTION LOGIC

DTC No.	Trouble Diagnosis Name	DTC detecting condition	Possible Cause	k
P0117	Engine coolant tem- perature sensor cir- cuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors  (The connect significance or cheeted.)	
P0118	Engine coolant tem- perature sensor cir- cuit high input	An excessively high voltage from the sensor is sent to ECM.	<ul><li>(The sensor circuit is open or shorted.)</li><li>Engine coolant temperature sensor</li></ul>	

## DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### >> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON and wait at least 5 seconds.
- Check DTC.

#### Is DTC detected?

>> Go to EC-170, "Diagnosis Procedure". YES

>> INSPECTION END NO

**EC-169** Revision: 2009 September 2010 Murano

EC

Α

D

Е

INFOID:0000000005536575

Ν

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# Diagnosis Procedure

INFOID:0000000005536576

# 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2. CHECK ECT SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect engine coolant temperature (ECT) sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between ECT sensor harness connector and ground.

ECT s	ECT sensor Ground Voltage		Voltage	
Connector	Terminal	Ground	voltage	
F80	1	Ground	Approx. 5 V	

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# ${f 3.}$ CHECK ECT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between ECT sensor harness connector and ECM harness connector.

ECT sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F80	2	F8	52	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 4.CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-170, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace engine coolant temperature sensor.

#### CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

# Component Inspection

INFOID:0000000005536577

# 1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

- 1. Turn ignition switch OFF.
- Disconnect engine coolant temperature sensor harness connector.
- Remove engine coolant temperature sensor.


# **P0117, P0118 ECT SENSOR**

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

4. Check resistance between engine coolant temperature sensor terminals as per the following.

Terminals	Condition		Resistance (kΩ)
		20 (68)	2.1 - 2.9
1 and 2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
		90 (194)	0.236 - 0.260

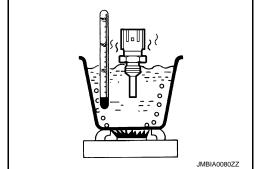

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor.

D

C

Α

EC

Е

F

G

Н

Κ

L

M

Ν

0


Р

# P0122, P0123 TP SENSOR

Description INFOID:0000000005536578

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

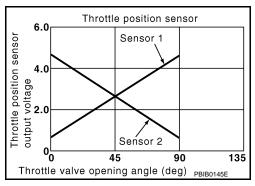

**DTC** Logic

INFOID:0000000005536579

#### DTC DETECTION LOGIC

#### NOTE:

If DTC P0122 or P0123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-343, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0122	Throttle position sensor 2 circuit low input	An excessively low voltage from the TP sensor 2 is sent to ECM.	Harness or connectors     (TP sensor 2 circuit is open or shorted.)
P0123	Throttle position sensor 2 circuit high input	An excessively high voltage from the TP sensor 2 is sent to ECM.	Electric throttle control actuator (TP sensor 2)

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 1 second.
- Check DTC.

#### Is DTC detected?

YES >> Go to EC-172, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536580

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## P0122, P0123 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# 2.check throttle position sensor 2 power supply circuit

- 1. Disconnect electric throttle control actuator harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between electric throttle control actuator harness connector and ground.

EC

D

Е

K

Electric throttle	control actuator	Ground	Voltage
Connector Terminal		Ground	voltage
F29	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# ${f 3.}$ CHECK THROTTLE POSITION SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	control actuator	E	Continuity	
Connector	Terminal	Connector Terminal		
F29	4	F8	36	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 4.CHECK THROTTLE POSITION SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	control actuator	E	Continuity	
Connector	Terminal	Connector Terminal		
F29	3	F8	38	Existed

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 5. CHECK THROTTLE POSITION SENSOR

Refer to EC-174, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

Revision: 2009 September

# 6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Refer to EC-174, "Special Repair Requirement".

#### >> INSPECTION END

## 7. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

EC-173

2010 Murano

>> INSPECTION END

# Component Inspection

INFOID:0000000005536581

# 1. CHECK THROTTLE POSITION SENSOR

- 1. Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- 3. Perform EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- 4. Turn ignition switch ON.
- 5. Set selector lever to D position.
- 6. Check the voltage between ECM harness connector terminals under the following conditions.

ECM					
Connector	+	_	Condition		Voltage
Connector	Terminal	Terminal			
	37	36 (Sensor ground)	Accelerator pedal	Fully released	More than 0.36 V
F8	(TP sensor 1 sig- nal)			Fully depressed	Less than 4.75 V
го	38			Fully released	Less than 4.75 V
	(TP sensor 2 sig- nal)			Fully depressed	More than 0.36 V

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- Go to <u>EC-174</u>, "Special Repair Requirement".

>> INSPECTION END

# Special Repair Requirement

INFOID:0000000005536582

# 1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement"

>> GO TO 2.

# 2.PERFORM IDLE AIR VOLUME LEARNING


Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement"

>> END

## P0125 ECT SENSOR

Description INFOID:0000000005536583


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

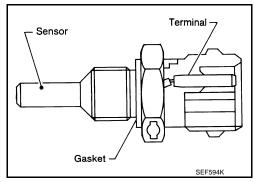

#### <Reference data>

Engine coolant temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

<sup>\*:</sup> These data are reference values and are measured between ECM terminals 46 (Engine coolant temperature sensor) and 52 (Sensor ground).

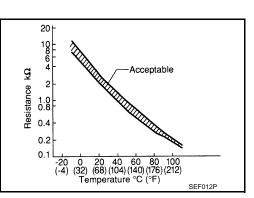

# **DTC** Logic

DTC DETECTION LOGIC

#### NOTE:

- If DTC P0125 is displayed with P0116, first perform the trouble diagnosis for DTC P0116. Refer to EC-167, "DTC Logic".
- If DTC P0125 is displayed with P0117 or P0118, first perform the trouble diagnosis for DTC P0117, P0118. Refer to EC-169, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0125	Insufficient engine cool- ant temperature for closed loop fuel control	<ul> <li>Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine.</li> <li>Engine coolant temperature is insufficient for closed loop fuel control.</li> </ul>	Harness or connectors     (High resistance in the circuit)     Engine coolant temperature sensor     Thermostat

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2.CHECK ENGINE COOLANT TEMPERATURE SENSOR FUNCTION

#### (P)With CONSULT-III

Turn ignition switch ON.

Revision: 2009 September

**EC-175** 

EC

Α

D

Е

INFOID:0000000005536584

M

Ν

Р

2010 Murano

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- 2. Select "DATA MONITOR" mode with CONSULT-III.
- Check that "COOLAN TEMP/S" is above 10°C (50°F).

#### With GST

Follow the procedure "With CONSULT-III" above.

#### Is the temperature above 10°C (50°F)?

YES >> INSPECTION END

NO >> GO TO 3.

# 3. PERFORM DTC CONFIRMATION PROCEDURE

#### (P)With CONSULT-III

1. Start engine and run it for 65 minutes at idle speed.

If "COOLAN TEMP/S" increases to more than 10°C (50°F) within 65 minutes, stop engine because the test result will be OK.

#### **CAUTION:**

Never overheat engine.

2. Check 1st trip DTC.

### With GST

Follow the procedure "With CONSULT-III" above.

#### Is 1st trip DTC detected?

YES >> EC-176, "Diagnosis Procedure"

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536585

# 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2. CHECK ENGINE COOLANT TEMPERATURE SENSOR

#### Refer to EC-176, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace engine coolant temperature sensor.

# 3.CHECK THERMOSTAT OPERATION

When the engine is cold [lower than 70°C (158°F)] condition, grasp lower radiator hose and confirm that the engine coolant does not flow.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace thermostat. Refer to <u>CO-26, "Exploded View"</u>.

## 4. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

# Component Inspection

INFOID:0000000005536586

# 1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- 3. Remove engine coolant temperature sensor.

## **P0125 ECT SENSOR**

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

4. Check resistance between engine coolant temperature sensor terminals as per the following.

Terminals	Condition		Resistance (kΩ)
		20 (68)	2.1 - 2.9
1 and 2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
		90 (194)	0.236 - 0.260

# JMBIA0080ZZ

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor.

D

Α

EC

C

Е

F

G

Н

J

Κ

L

M

Ν

0


Р

## P0127 IAT SENSOR

Description INFOID:000000005536587

The intake air temperature sensor is built-into the mass air flow sensor (1). The sensor detects intake air temperature and transmits a signal to the ECM.


The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the rise in temperature.

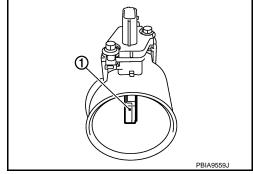

#### <Reference data>

Intake air temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
25 (77)	3.3	1.800 - 2.200
80 (176)	1.2	0.283 - 0.359

<sup>\*:</sup> These data are reference values and are measured between ECM terminals 50 (Intake air temperature sensor) and 56 (Sensor ground).

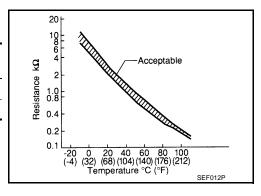

**DTC** Logic

INFOID:000000005536588

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0127	Intake air temperature too high	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.	Harness or connectors     (The sensor circuit is open or shorted)     Intake air temperature sensor

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

# (P)With CONSULT-III

- Wait until engine coolant temperature is less than 96°C (205°F)
- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT-III.
- Check the engine coolant temperature.

#### P0127 IAT SENSOR [VQ35DE] < DTC/CIRCUIT DIAGNOSIS > If the engine coolant temperature is not less than 96°C (205°F), turn ignition switch OFF and cool down engine. Α NOTE: Perform the following steps before engine coolant temperature is above 96°C (205°F). 2. Turn ignition switch ON. EC 3. Select "DATA MONITOR" mode with CONSULT-III. Start engine. 5. Hold vehicle speed at more than 70 km/h (43 MPH) for 100 consecutive seconds. **CAUTION:** Always drive vehicle at a safe speed. 6. Check 1st trip DTC. With GST D Follow the procedure "With CONSULT-III" above. Is 1st trip DTC detected? YES >> Go to EC-179, "Diagnosis Procedure". Е NO >> INSPECTION END Diagnosis Procedure INFOID:0000000005536589 F 1. CHECK GROUND CONNECTION Turn ignition switch OFF. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection". Is the inspection result normal? YES >> GO TO 2. Н NO >> Repair or replace ground connection. 2.CHECK INTAKE AIR TEMPERATURE SENSOR Refer to EC-179, "Component Inspection". Is the inspection result normal? YES >> GO TO 3. NO >> Replace mass air flow sensor (with intake air temperature sensor). 3.check intermittent incident Refer to GI-39, "Intermittent Incident". K >> INSPECTION END Component Inspection INFOID:0000000005536590 1. CHECK INTAKE AIR TEMPERATURE SENSOR Turn ignition switch OFF. Disconnect mass air flow sensor harness connector. Check resistance between mass air flow sensor terminals as per the following. N

Terminal	Condition		Resistance (kΩ)
1 and 2	Temperature [°C (°F)]	25 (77)	1.800 - 2.200

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor).

**EC-179** Revision: 2009 September

Р

## P0128 THERMOSTAT FUNCTION

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

If DTC P0128 is displayed with DTC P0300, P0301, P0302, P0303, P0304, P0305 or P0306, first perform the trouble diagnosis for DTC P0300, P0301, P0302, P0303, P0304, P0305, P0306. Refer to <a href="EC-245">EC-245</a>. "DTC Logic".

Engine coolant temperature has not risen enough to open the thermostat even though the engine has run long enough.

This is due to a leakage in the seal or the thermostat being stuck open.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0128	Thermostat function	The engine coolant temperature does not reach to specified temperature even though the engine has run long enough.	Thermostat Leakage from sealing portion of thermostat Engine coolant temperature sensor

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

- For best results, perform at ambient temperature of -10°C (14°F) or higher.
- For best results, perform at engine coolant temperature of -10°C (14°F) to 56°C (133°F).
- · Before performing the following procedure, do not add fuel.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

#### (P) With CONSULT-III

- 1. Turn A/C switch OFF.
- 2. Turn blower fan switch OFF.
- 3. Turn ignition switch ON.
- 4. Select "COOLAN TEMP/S" in "DATA MONITOR" mode with CONSULT-III.
- 5. Check the indication of "COOLAN TEMP/S"
  - If it is below 56°C (133°F), go to next step.

If it is above 56°C (133°F), cool down the engine to less than 56°C (133°F). Then go to next steps.

- 6. Start engine.
- 7. Drive vehicle for 10 consecutive minutes under the following conditions.

VHCL SPEED SE	More than 56 km/h (35 MPH)

#### **CAUTION:**

Always drive vehicle at a safe speed.

NOTÉ:

If "COOLAN TEMP/S" increases to more than 75°C (167°F) within 10 minutes, turn ignition switch OFF because the test result will be OK.

8. Check 1st trip DTC.

#### **With GST**

Follow the procedure "With CONSULT-III" above.

#### Is 1st trip DTC detected?

YES >> Go to EC-181, "Diagnosis Procedure".

NO >> INSPECTION END

## **P0128 THERMOSTAT FUNCTION**

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Diagnosis Procedure

INFOID:0000000005536592

## 1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-181, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace engine coolant temperature sensor.

2. CHECK THERMOSTAT

Check thermostat. Refer to CO-26, "Exploded View".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace thermostat.


## Component Inspection

INFOID:0000000005536593

## 1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

- Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- 3. Remove engine coolant temperature sensor.
- Check resistance between engine coolant temperature sensor terminals as per the following.


Terminals	Condition	Resistance (kΩ)	
		20 (68)	2.1 - 2.9
1 and 2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
		90 (194)	0.236 - 0.260

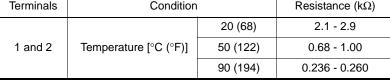

### Is the inspection result normal?

>> INSPECTION END YES

NO >> Replace engine coolant temperature sensor.

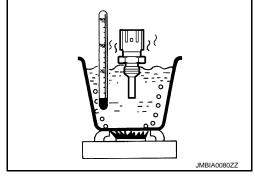

EC

Α

D

Е

Н

K

M

Ν

Р


## P0130, P0150 A/F SENSOR 1

**Description** 


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement  $\lambda = 1$ , but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide  $\lambda$  range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

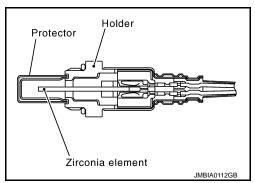

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of approximately 800°C (1,472°F).

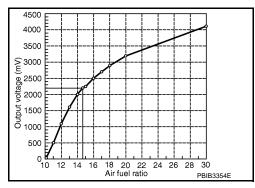

DTC Logic

#### DTC DETECTION LOGIC

To judge malfunctions, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal fluctuates according to fuel feedback control.

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause		
P0130	Air fuel ratio (A/F) sensor 1		The A/F signal computed by ECM from the A/F sensor 1 signal is constantly in a range other than approx. 2.2 V.	Harness or connectors (The A/F sensor 1 circuit is open or shorted.)		
(bank 1) circuit	(bank 1) circuit	B)	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 2.2 V.	A/F sensor 1		
P0150	P0150 Air fuel ratio (A/F) sensor 1		Air fuel ratio (A/F) sensor 1 (bank 2) circuit  The A/F signal computed by ECM from the A/F sensor 1 signal is constantly in a range other than approx. 2.2 V.		Harness or connectors     (The A/F sensor 1 circuit is open or shorted.)	
	(Darik 2) Circuit	B)	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 2.2 V.	A/F sensor 1		

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

### P0130, P0150 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

# 2.perform dtc confirmation procedure for malfunction a

- 1. Start engine and warm it up to normal operating temperature.
- Let engine idle for 2 minutes.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

>> Go to EC-184, "Diagnosis Procedure".

NO-1 >> With CONSULT-III: GO TO 3.

NO-2 >> With GST: GO TO 7.

## 3.CHECK AIR FUEL RATIO (A/F) SENSOR 1 FUNCTION

- Start engine and warm it up to normal operating temperature.
- Select "A/F SEN1 (B1)" or "A/F SEN1 (B2)" in "DATA MONITOR" mode with CONSULT-III.
- Check "A/F SEN1 (B1)" or "A/F SEN1 (B2)" indication.

#### Does the indication fluctuate around 2.2 V?

YES >> GO TO 4.

NO >> Go to EC-184, "Diagnosis Procedure".

## f 4 . PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-I

- Select "A/F SEN1 (B1) P1276" (for DTC P0130) or "A/F SEN1 (B2) P1286" (for DTC P0150) of "A/F SEN1" in "DTC WORK SUPPORT" mode with CONSULT-III.
- Touch "START".
- 3. When the following conditions are met, "TESTING" will be displayed on the CONSULT-III screen.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 64 km/h (40 mph)
B/FUEL SCHDL	1.0 - 8.0 msec
Selector lever	D position

## If "TESTING" is not displayed after 20 seconds, retry from step 2.

#### **CAUTION:**

Always drive vehicle at a safe speed.

### Is "TESTING" displayed on CONSULT-III screen?

YES >> GO TO 5.

NO >> Check A/F sensor 1 function again. GO TO 3.

## $oldsymbol{5}$ .PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-II

Release accelerator pedal fully.

Never apply brake when releasing the accelerator pedal.

#### Which does "TESTING" change to?

COMPLETED>>GO TO 6.

OUT OF CONDITION>>Retry DTC CONFIRMATION PROCEDURE. GO TO 4.

## $oldsymbol{6}$ PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-III

Touch "SELF-DIAG RESULT".

### Which is displayed on CONSULT-III screen?

OK >> INSPECTION END

NG >> Go to EC-184, "Diagnosis Procedure".

## /.PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B

Perform component function check. Refer to EC-184, "Component Function Check".

## NOTE:

Use component function check to check the overall function of the A/F sensor 1 circuit. During this check, a 1st trip DTC might not be confirmed.

### Is the inspection result normal?

YES >> INSPECTION END EC

[VQ35DE]

D

Е

F

Н

K

N

Р

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

NO >> Go to EC-184, "Diagnosis Procedure".

## Component Function Check

INFOID:0000000005536596

## 1. PERFORM COMPONENT FUNCTION CHECK

### 

- 1. Start engine and warm it up to normal operating temperature.
- 2. Drive the vehicle at a speed of 80 km/h (50 MPH) for a few minutes in the suitable gear position.
- Shift the selector lever to the D position, then release the accelerator pedal fully until the vehicle speed decreases to 50 km/h (31 MPH).

### **CAUTION:**

### Always drive vehicle at a safe speed.

#### NOTÉ:

Never apply brake when releasing the accelerator pedal.

- 4. Repeat steps 2 and 3 for 5 times.
- 5. Stop the vehicle and turn ignition switch OFF.
- 6. Wait at least 10 seconds and restart engine.
- 7. Repeat steps 2 and 3 for 5 times.
- 8. Stop the vehicle.
- 9. Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-184, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536597

## 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect A/F sensor 1 harness connector.
- Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

DTC		A/F sensor 1	Ground	Voltage	
DIC	Bank	Bank Connector Termina			Ground
P0130	1	F27	4	Ground	Battery voltage
P0150	2	F64	4	Giouna	Dattery Voltage

### Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

3. DETECT MALFUNCTIONING PART

## Check the following.

- IPDM E/R harness connector F12
- 15 A fuse (No. 46)
- Harness for open or short between A/F sensor 1 and IPDM E/R

>> Repair or replace harness or connectors.

## 4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.

Revision: 2009 September EC-184 2010 Murano

[VQ35DE]

3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

DTC	A/F sensor 1			E	Continuity	
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0130	1	F27	1		45	
F0130	P0130   1	121	2	F8	49	Existed
P0150	2	F64	1		53	LXISIEU
P0150 2	2	Γ0 <del>4</del>	2		57	

 Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

DTC		A/F sensor 1			Continuity
DIC	Bank	Connector	Terminal	Ground	Continuity
P0130	1	F27	1		
F0130	'	121	2	Ground	Not existed
P0150	2	F64	1	Olouliu	Not existed
F 0130	P0150 2	F04	2		

DTC	ECM		Ground	Continuity	
DIC	Connector Terminal		Olouliu		
P0130		45			
P0130	F8	49	Ground	Not existed	
P0150	ГО	53	Giouna		
		57			

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 5. CHECK INTERMITTENT INCIDENT

Perform GI-39, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning part.

6. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1.

**CAUTION:** 

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

EC

Α

Е

D

F

Κ

M

L

Ν

Р


## P0131, P0151 A/F SENSOR 1

**Description** 


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement  $\lambda = 1$ , but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide  $\lambda$  range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

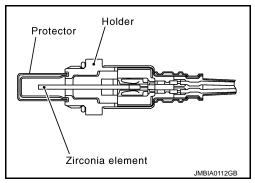

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of approximately 800°C (1,472°F).

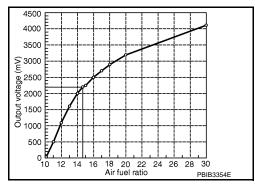

DTC Logic

#### DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal is not inordinately low.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0131	Air fuel ratio (A/F) sensor 1 (bank 1) circuit low voltage	The A/F signal computed by ECM from the A/	Harness or connectors     (The A/F sensor 1 circuit is open or
P0151	Air fuel ratio (A/F) sensor 1 (bank 2) circuit low voltage	F sensor 1 signal is constantly approx. 0 V.	shorted.) • A/F sensor 1

## DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10.5 V at idle.

>> GO TO 2.

## 2.CHECK A/F SENSOR 1 FUNCTION

## (I) With CONSULT-III

- Start engine and warm it up to normal operating temperature.
- 2. Select "A/F SEN1 (B1)" or "A/F SEN1 (B2)" in "DATA MONITOR" mode with CONSULT-III.
- 3. Check "A/F SEN1 (B1)" or "A/F SEN1 (B2)" indication.

### P0131, P0151 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Follow the procedure "With CONSULT-III" above.

Is the indication constantly approx. 0 V?

>> Go to EC-187, "Diagnosis Procedure". YES

NO >> GO TO 3.

## 3.PERFORM DTC CONFIRMATION PROCEDURE

### (P)With CONSULT-III

- Turn ignition switch OFF, wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF, wait at least 10 seconds and then restart engine.
- Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine. **CAUTION:**

Always drive vehicle at a safe speed.

Maintain the following conditions for approximately 20 consecutive seconds.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 40 km/h (25 mph)
B/FUEL SCHDL	1.5 - 9.0 msec
Selector lever	Suitable position

#### NOTE:

- Keep the accelerator pedal as steady as possible during cruising.
- If this procedure is not completed within 1 minute after restarting engine at step 1, return to step
- Check 1st trip DTC.

#### ■With GST

Follow the procedure "With CONSULT-III" above.

#### Is 1st trip DTC detected?

YES >> Go to EC-187, "Diagnosis Procedure".

>> INSPECTION END NO

## Diagnosis Procedure

## 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

DTC		A/F sensor 1	Ground	Voltage	
DIC	Bank	Connector	Terminal	Giodila	vollage
P0131	1	F27	4	Ground	Battery voltage
P0151	2	F64	4	Ground	Dattery voltage

## Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

## 3.DETECT MALFUNCTIONING PART

Check the following.

Revision: 2009 September

**EC-187** 

EC

Α

D

Е

INFOID:0000000005536600

Ν

#### < DTC/CIRCUIT DIAGNOSIS >

- IPDM E/R harness connector F12
- 15 A fuse (No. 46)
- Harness for open or short between A/F sensor 1 and IPDM E/R
  - >> Repair or replace harness or connectors.

## 4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

DTC	A/F sensor 1			E	Continuity	
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0131	1	F27	1		45	
P0131	P0131 1	Γ21	2	F8	49	Existed
D0151	2	E64	1	- го	53	Existed
P0151 2	F64	2		57		

4. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

DTC		A/F sensor 1	Ground	Continuity	
DIC	Bank	Connector	Terminal	Giodila	Continuity
P0131	1	F27	1		
FUISI	'	1 21	2	Ground	Not existed
P0151	2	F64	1	Giodila	NOT EXISTED
FUISI	70131 2	1 04	2		

DTC	ECM		Ground	Continuity
ыс	Connector	Terminal	Ground	Continuity
P0131		45		Not existed
P0131	F8	49	Ground	
P0151		53		
		57		

5. Also check harness for short to power.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## CHECK INTERMITTENT INCIDENT

Perform GI-39, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning part.

 $\mathbf{6}.\mathsf{REPLACE}$  AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1.

#### **CAUTION:**

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

EC

С

D

Е

F

G

Н

1

Κ

L

M

Ν

 $\bigcirc$ 

Ρ


## P0132, P0152 A/F SENSOR 1

Description INFOID:0000000005536601


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement  $\lambda = 1$ , but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide  $\lambda$  range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

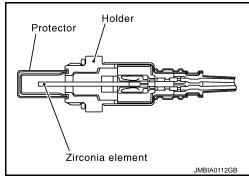

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of approximately 800°C (1,472°F).

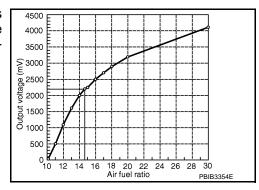

DTC Logic

#### DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal is not inordinately high.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0132	Air fuel ratio (A/F) sensor 1 (bank 1) circuit high voltage	The A/F signal computed by ECM from the A/F	Harness or connectors (The A/F sensor 1 circuit is open or
P0152	Air fuel ratio (A/F) sensor 1 (bank 2) circuit high voltage	sensor 1 signal is constantly approx. 5 V.	shorted.) • A/F sensor 1

## DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always preform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10.5 V at idle.

>> GO TO 2.

## 2.CHECK A/F SENSOR 1 FUNCTION

## (I) With CONSULT-III

- Start engine and warm it up to normal operating temperature.
- 2. Select "A/F SEN1 (B1)" or "A/F SEN1 (B2)" in "DATA MONITOR" mode with CONSULT-III.
- 3. Check "A/F SEN1 (B1)" or "A/F SEN1 (B2)" indication.

## P0132, P0152 A/F SENSOR 1

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Follow the procedure "With CONSULT-III" above.

Is the indication constantly approx. 5 V?

>> Go to EC-191, "Diagnosis Procedure". YES

NO >> GO TO 3.

## 3.PERFORM DTC CONFIRMATION PROCEDURE

### (P)With CONSULT-III

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF, wait at least 10 seconds and then restart engine.
- Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine. **CAUTION:**

Always drive vehicle at a safe speed.

Maintain the following conditions for approximately 20 consecutive seconds.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 40 km/h (25 mph)
B/FUEL SCHDL	1.5 - 9.0 msec
Selector lever	Suitable position

#### NOTE:

- Keep the accelerator pedal as steady as possible during cruising.
- If this procedure is not completed within 1 minute after restarting engine at step 1, return to step
- Check 1st trip DTC.

### ■With GST

Follow the procedure "With CONSULT-III" above.

### Is 1st trip DTC detected?

YES >> Go to EC-191, "Diagnosis Procedure".

>> INSPECTION END NO

## Diagnosis Procedure

## 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

DTC	A/F sensor 1		Ground	Voltage	
DIC	Bank	Connector	Connector Terminal		voltage
P0132	1	F27	4	Ground	Battery voltage
P0152	2	F64	4	Ground	Battery voltage

## Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

## 3.DETECT MALFUNCTIONING PART

Check the following.

**EC-191** Revision: 2009 September 2010 Murano

EC

Α

D

Е

INFOID:0000000005536603

Ν

#### < DTC/CIRCUIT DIAGNOSIS >

- IPDM E/R harness connector F12
- 15 A fuse (No. 46)
- Harness for open or short between A/F sensor 1 and IPDM E/R
  - >> Repair or replace harness or connectors.

## 4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

DTC			A/F sensor 1		ECM		
Bank		Connector	Terminal	Connector	Terminal	Continuity	
P0132	1	F27	1		45		
P0132	Į.	2	49	Existed			
D0152	2	F64	1	F8	53	Existed	
P0152	52 2 F64	0152 2 F64		57			

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

DTC		A/F sensor 1	Ground	Continuity	
DIC	Bank	Connector Terminal		Giodila	Continuity
P0132	1	F27	1		
P0132	I   F27	Γ21	2	Ground	Not existed
P0152	2	F64	1	Giouna	Not existed
P0152	2   F04	F04	2		

DTC	ECM		Ground	Continuitu
DIC	Connector	Terminal	Ground	Continuity
P0132		45		Not existed
F0132	F8	49	Ground	
P0152		53		
		57		

5. Also check harness for short to power.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 5. CHECK INTERMITTENT INCIDENT

Perform GI-39, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning part.

 $\mathbf{6}.\mathsf{REPLACE}$  AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1.

#### **CAUTION:**

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

EC

Α

C

D

Е

F

G

Н

1

Κ

L

M

Ν

 $\bigcirc$ 

Ρ


## P0133, P0153 A/F SENSOR 1

Description INFOID:0000000005536604


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement  $\lambda = 1$ , but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide  $\lambda$  range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

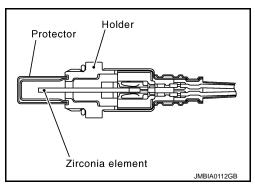

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of approximately 800°C (1,472°F).

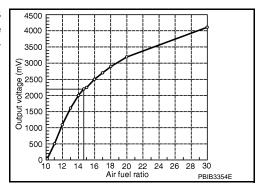

DTC Logic

#### DTC DETECTION LOGIC

To judge the malfunction of A/F sensor 1, this diagnosis measures response time of the A/F signal computed by ECM from the A/F sensor 1 signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and the A/F sensor 1 temperature index. Judgment is based on whether the compensated time (the A/F signal cycling time index) is inordinately long or not.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0133	Air fuel ratio (A/F) sensor 1 (bank 1) circuit slow response		Harness or connectors     (The A/F sensor 1 circuit is open or shorted.)
P0153	Air fuel ratio (A/F) sensor 1 (bank 2) circuit slow response	The response of the A/F signal computed by ECM from A/F sensor 1 signal takes more than the specified time.	<ul> <li>A/F sensor 1</li> <li>A/F sensor 1 heater</li> <li>Fuel pressure</li> <li>Fuel injector</li> <li>Intake air leakage</li> <li>Exhaust gas leakage</li> <li>PCV</li> <li>Mass air flow sensor</li> </ul>

### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

Will CONSULT-III be used?

## P0133, P0153 A/F SENSOR 1

[VQ35DE] < DTC/CIRCUIT DIAGNOSIS > YES >> GO TO 2. NO >> GO TO 5. Α 2.PERFORM DTC CONFIRMATION PROCEDURE-I (P)With CONSULT-III EC 1. Start engine and warm it up to normal operating temperature. Turn ignition switch OFF and wait at least 10 seconds. 3. Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds. 5. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1minute under no load. 6. Let engine idle for 1 minute. Select "A/F SEN1(B1) P1278/P1279" (for DTC P0133) or "A/F SEN1(B2) P1288/P1289" (for DTC P0153) of "A/F SEN1" in "DTC WORK SUPPORT" mode with CONSULT-III. Touch "START". Is COMPLETED displayed? Е YES >> GO TO 3. NO >> GO TO 4. 3.perform dtc confirmation procedure-ii  $\,$ Check that "OK" is displayed after touching "SELF-DIAG RESULT". Is OK displayed? YES >> INSPECTION END NO >> Go to EC-196, "Diagnosis Procedure". 4. PERFORM DTC CONFIRMATION PROCEDURE-III After perform the following procedure, "TESTING" will be displayed on the CONSULT-III screen. Increase the engine speed up to between 4,000 and 5,000 rpm and maintain that speed for 10 seconds. Fully release accelerator pedal and then let engine idle for approximately 10 seconds. If "TESTING" is not displayed after 10 seconds, go to EC-126, "Component Function Check". 2. Wait for approximately 20 seconds idle under the condition that "TESTING" is displayed on the CON-SULT-III screen. 3. Check that "TESTING" changes to "COMPLETED". If "TESTING" changed to "OUT OF CONDITION", go to EC-126, "Component Function Check". 4. Check that "OK" is displayed after touching "SELF-DIAG RESULT". Is OK displayed? YES >> INSPECTION END NO >> Go to EC-196, "Diagnosis Procedure". f 5.CHECK MIXTURE RATIO SELF-LEARNING VALUE With GST 1. Start engine and warm it up to normal operating temperature. Select Service \$01 with GST. Calculate the total value of "Short term fuel trim" and "Long term fuel trim" indications. Is the total percentage within  $\pm 15\%$ ? N YES >> GO TO 7. NO >> GO TO 6. O. DETECT MALFUNCTIONING PART Check the following. Intake air leakage Exhaust gas leakage P Incorrect fuel pressure Lack of fuel Fuel injector Incorrect PCV hose connection PCV valve Mass air flow sensor

[VQ35DE]

>> Repair or replace malfunctioning part.

## 7.PERFORM DTC CONFIRMATION PROCEDURE-IV

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Increase the engine speed up to between 4,000 and 5,000 rpm and maintain that speed for 10 seconds.
- Fully release accelerator pedal and then let engine idle for approximately 1 minute.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-196, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536606

## 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.


## 2.RETIGHTEN A/F SENSOR 1

Loosen and retighten the A/F sensor 1. Refer to EM-38, "Exploded View".

>> GO TO 3.

## 3. CHECK EXHAUST GAS LEAKAGE

- 1. Start engine and run it at idle.
- 2. Listen for an exhaust gas leakage before three way catalyst (manifold).

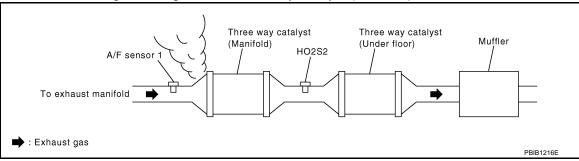

### Is exhaust gas leakage detected?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 4.

## 4. CHECK FOR INTAKE AIR LEAKAGE

Listen for an intake air leakage after the mass air flow sensor.

### Is intake air leakage detected?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 5.

## 5. CLEAR MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to <u>EC-20, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement"</u>.
- Run engine for at least 10 minutes at idle speed.
- Check 1st trip DTC.

### Is the 1st trip DTC P0171, P0172, P0174 or P0175 detected? Is it difficult to start engine?

## P0133, P0153 A/F SENSOR 1

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

YES >> Perform trouble diagnosis for DTC P0171, P0174 or P0172, P0175. Refer to <u>EC-222, "DTC Logic"</u> or <u>EC-226, "DTC Logic"</u>.

NO >> GO TO 6.

## 6. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.

- 2. Disconnect A/F sensor 1 harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between A/F sensor 1 harness connector and ground.

DTC	DTC A/F sensor 1  Bank Connector Terminal			Ground	Voltage	
DIC			Ground	voltage		
P0133	1	F27	4	Ground	Battery voltage	
P0153	2	F64	4	Giodila		

### Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

## 7.DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R harness connector F12
- 15 A fuse (No. 46)
- Harness for open or short between A/F sensor 1 and IPDM E/R

>> Repair or replace harness or connectors.

## 8. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

DTC	A/F sensor 1			E	Continuity		
DIC	Bank	Connector	Terminal	Connector Terminal		Continuity	
P0133	1	F27	1		45		
F0133	P0133 1	Γ21	2	F8	49	Existed	
P0153	2	F64	1		53		
F0103	FU100 2 F04	1 04	2		57		

 Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector ground.

	DTC	A/F sensor 1			Ground	Continuity
	ыс	Bank	Connector	Terminal	Olouliu	Continuity
	P0133	1	F27	1		
	F0133		121	2	Ground	Not existed
	P0153	2	F64	1	Giodila	NOI EXISIEU
_	F0103	2	2			

EC

Α

D

Е

F

G

Н

K

L

M

Ν

Ρ

DTC	E	CM	Ground	Continuity
DIC	Connector	Terminal	Giodila	
P0133		45		Not existed
F0133	F8	49	Ground	
P0153		53	Giodila	
F0155		57		

5. Also check harness for short to power.

### Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 9. CHECK AIR FUEL RATIO (A/F) SENSOR 1 HEATER

Refer to EC-146, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 13.

## 10. CHECK MASS AIR FLOW SENSOR

Refer to EC-156, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace mass air flow sensor.

## 11. CHECK PCV VALVE

Refer to EC-456, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace PCV valve.

## 12. CHECK INTERMITTENT INCIDENT

Perform GI-39, "Intermittent Incident".

### <u>Is the inspection result normal?</u>

YES >> GO TO 13.

NO >> Repair or replace malfunctioning part.

## 13.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1.

#### **CAUTION:**

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

#### >> INSPECTION END

Α

EC

D

Е

F

Н

M

Ν

Р

## P0137, P0157 HO2S2


Description

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.


Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

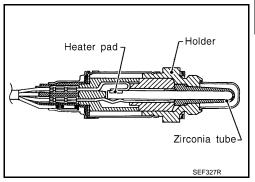

DTC Logic

### DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the maximum voltage of the sensor is sufficiently high during various driving conditions such as fuel-cut.

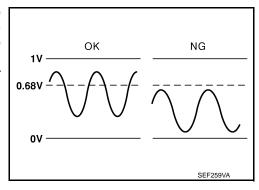

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
P0137	Heated oxygen sensor 2 (bank 1) circuit low voltage	The maximum voltage from the sensor does not	<ul> <li>Harness or connectors (The sensor circuit is open or shorted)</li> <li>Heated oxygen sensor 2</li> </ul>	
P0157	Heated oxygen sensor 2 (bank 2) circuit low voltage	reach the specified voltage.	<ul><li>Fuel pressure</li><li>Fuel injector</li><li>Intake air leakage</li></ul>	

### DTC CONFIRMATION PROCEDURE

## 1.INSPECTION START

Will CONSULT-III be used?

Will CONSULT-III be used?

YES >> GO TO 2.

NO >> GO TO 5.

## 2.PRECONDITIONING

If DTC confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

>> GO TO 3.

## 3. PERFORM DTC CONFIRMATION PROCEDURE

#### (P)With CONSULT-III

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III.
- 2. Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- 6. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 7. Let engine idle for 1 minute.
- 8. Check that "COOLAN TEMP/S" indicates more than 70°C (158°F).

If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).

- 9. Open engine hood.
- 10. Select "HO2S2 (B1) P1147" (for DTC P0137) or "HO2S2 (B2) P1167" (for DTC P0157) of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-III.
- 11. Follow the instruction of CONSULT-III display.

#### NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

12. Touch "SELF-DIAG RESULTS".

### Which is displayed on CONSULT-III screen?

OK >> INSPECTION END

NG >> Go to EC-201, "Diagnosis Procedure".

CAN NOT BE DIAGNOSED>>GO TO 4.

## 4. PERFORM DTC CONFIRMATION PROCEDURE AGAIN

- 1. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- Perform DTC confirmation procedure again.

>> GO TO 3.

## 5. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-200, "Component Function Check".

#### NOTE

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-201, "Diagnosis Procedure".

## Component Function Check

INFOID:0000000005536609

## 1.PERFORM COMPONENT FUNCTION CHECK-I

### **⊗Without CONSULT-III**

- 1. Start engine and warm it up to the normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 6. Let engine idle for 1 minute.
- 7. Check the voltage between ECM harness connector terminals under the following conditions.

### < DTC/CIRCUIT DIAGNOSIS >

		ECM			
DTC Connector		+	_	Condition	Voltage
		Terminal	Terminal		
P0137	Eo	33 [HO2S2 (bank 1) signal]	35 (Sensor	Revving up to 4,000 rpm under no	The voltage should be above 0.68 V
P0157	P0157 F8 34 [HO2S2 (the signal		ground)	load at least 10 times	at least once during this procedure.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

## 2. PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector terminals under the following conditions.

		ECM				
DTC	Connec-	+ -		Condition	Voltage	
tor		Terminal	Terminal			
P0137	Eo	33 [HO2S2 (bank 1) signal]	35	Keeping engine at idle for 10 min-	The voltage should be above 0.68 V	
P0157	34 [HO2S2 (bank 2) signal]	(Sensor ground)	utes	at least once during this procedure.		

#### <u>Is the inspection result normal?</u>

YES >> INSPECTION END

NO >> GO TO 3.

## 3.PERFORM COMPONENT FUNCTION CHECK-III

Check the voltage between ECM harness connector terminals under the following conditions.

		ECM				
DTC	Connec-	+	_	Condition	Voltage	
	tor	Terminal	Terminal			
P0137	F8	33 [HO2S2 (bank 1) signal]	35 (Sensor	Coasting from 80 km/h (50 MPH)	The voltage should be above 0.68 V	I
P0157	го	34 [HO2S2 (bank 2) signal]	ground)	with selector lever in the D position	at least once during this procedure.	

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-201, "Diagnosis Procedure".

## Diagnosis Procedure

## 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

Revision: 2009 September EC-201 2010 Murano

EC

Α

D

\_

Е

F

G

K

\_

M

Ν

0

INFOID:0000000005536610

# 2.clear mixture ratio self-learning value

- Clear the mixture ratio self-learning value. Refer to <u>EC-20, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR</u>: Special Repair Requirement".
- 2. Run engine for at least 10 minutes at idle speed.

### Is the 1st trip DTC P0171 or P0174 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171 or P0174. Refer to EC-222, "DTC Logic".

NO >> GO TO 3.

## 3.CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between heated oxygen sensor 2 (HO2S2) harness connector and ECM harness connector.

DTC		HO2S2		E	Continuity	
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0137	1	F70	1	F8	35	Existed
P0157	2	F71	1	ГО	33	Existed

5. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between HO2S2 harness connector and ECM harness connector.

DTC		HO2S2		E	Continuity	
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0137	1	F70	4	F8	33	Existed
P0157	2	F71	4	1-0	34	LAISIEU

 Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

DTC		HO2S2	Ground	Continuity	
DIC	Bank	Connector	Terminal	Giodila	Continuity
P0137	1	F70	4	Ground	Not existed
P0157	2	F71	4	Giodila	INUL EXISTED

DTC	E	CM	Ground	Continuity	
DIC	Connector	Terminal	Ground		
P0137	F8	33	Ground	Not existed	
P0157	10	34	Ground	NOT EXISTED	

3. Also check harness for short to power.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 5. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-203, "Component Inspection".

### Is the inspection result normal?

### P0137, P0157 HO2S2

#### [VQ35DE] < DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 7. NO >> GO TO 6.

## 6.REPLACE HEATED OXYGEN SENSOR 2

Replace malfunctioning heated oxygen sensor 2.

#### **CAUTION:**

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

## .CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

## Component Inspection

1.INSPECTION START

Will CONSULT-III be used?

Will CONSULT-III be used?


YES >> GO TO 2.

NO >> GO TO 3.

## 2 CHECK HEATED OXYGEN SENSOR 2

## (I) With CONSULT-III

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III.
- Start engine and warm it up to the normal operating temperature. 2.
- Turn ignition switch OFF and wait at least 10 seconds. 3.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)/(B2)" as the monitor item with CONSULT-III.
- 7. Check "HO2S2 (B1)/(B2)" at idle speed when adjusting "FUEL INJECTION" to ± 25%.

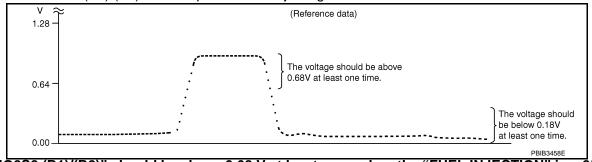

"HO2S2 (B1)/(B2)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)/(B2)" should be below 0.18 V at least once when the "FUEL INJECTION" is - 25%.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

## 3.CHECK HEATED OXYGEN SENSOR 2-I

### Without CONSULT-III

- Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds. 2.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.

EC

Α

D

Е

INFOID:0000000005536611

Н

N

Р

### < DTC/CIRCUIT DIAGNOSIS >

- Let engine idle for 1 minute.
- Check the voltage between ECM harness connector terminals under the following conditions.

	ECM			
Connector	+	_	Condition	Voltage
Connector	Terminal	Terminal		
E0	33 [HO2S2 (bank 1) signal]	35 (Sensor ground)	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure.
F8 -	34 [HO2S2 (bank 2) signal]			The voltage should be below 0.18 V at least once during this procedure.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

## 4. CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector terminals under the following conditions.

	ECM			
Connector	+	_	Condition	Voltage
Connector	Terminal	Terminal		
F8	33 [HO2S2 (bank 1) signal] 34 [HO2S2 (bank 2) signal]	35 (Sensor ground)	Keeping engine at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

## 5. CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector terminals under the following conditions.

	ECM			
Connector	+	_	Condition	Voltage
Connector	Terminal	Terminal		
F8 -	33 [HO2S2 (bank 1) signal]	35 (Sensor ground)	Coasting from 80 km/h (50 MPH) with selector lever in the D position	The voltage should be above 0.68 V at least once during this procedure.
	34 [HO2S2 (bank 2) signal]			The voltage should be below 0.18 V at least once during this procedure.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

## **6.**REPLACE HEATED OXYGEN SENSOR 2

Replace malfunctioning heated oxygen sensor 2.

#### CAUTION:

• Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

[VQ35DE]

• Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

EC

D

Е

F

G

Н

K

L

M

Ν

0

Р

## P0138, P0158 HO2S2


Description INFOID:0000000005536612

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

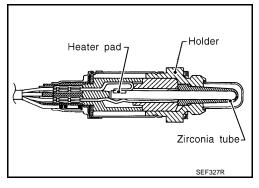

**DTC** Logic


INFOID:0000000005536613

#### DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time.


#### **MALFUNCTION A**

To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the voltage is unusually high during various driving conditions such as fuel cut.

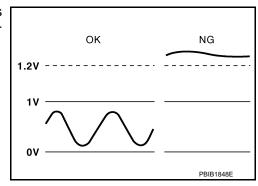

#### **MALFUNCTION B**

To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the minimum voltage of sensor is sufficiently low during various driving conditions such as fuel-cut.

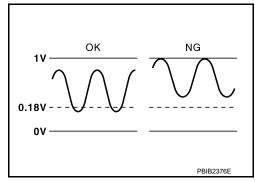

DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
Heated oxygen sensor 2	A)	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted)     Heated oxygen sensor 2	
P0138	(bank 1) circuit high voltage	B)	The minimum voltage from the sensor is not reached to the specified voltage.	<ul> <li>Harness or connectors (The sensor circuit is open or shorted)</li> <li>Heated oxygen sensor 2</li> <li>Fuel pressure</li> <li>Fuel injector</li> </ul>

[VQ35DE]

< DTC/CIR	CUIT DIAGNOSIS >			[VQ35DE]
DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
	Heated oxygen sensor 2	A)	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted)     Heated oxygen sensor 2
P0158	(bank 2) circuit high voltage	B)	The minimum voltage from the sensor is not reached to the specified voltage.	<ul> <li>Harness or connectors (The sensor circuit is open or shorted)</li> <li>Heated oxygen sensor 2</li> <li>Fuel pressure</li> <li>Fuel injector</li> </ul>
	FIRMATION PROCI	EDU	RE	
	NDITIONING			
ing the nex 1. Turn ig 2. Turn ig		l wait		erform the following before conduct-
_	GO TO 2.			
			PROCEDURE FOR MALFUNCTION	N A
<ol> <li>Turn ig</li> <li>Turn ig</li> <li>Turn ig</li> <li>Start er</li> <li>Let eng</li> </ol>	nition switch OFF and nition switch ON. nition switch OFF and	l wait l wait gine		ı for at least 1 minute under no load.
	TC detected?			
NO-1 >>	Go to <u>EC-209, "Diag</u> With CONSULT-III: G Without CONSULT-II	O T	O 3.	
3.PERFO	RM DTC CONFIRMAT	ΓΙΟN	PROCEDURE FOR MALFUNCTION	N B
<ol> <li>Select</li> <li>Start er</li> <li>Turn ig</li> <li>Turn ig</li> <li>Turn ig</li> <li>Start er</li> <li>Let eng</li> <li>Check</li> </ol>	"DATA MONITOR" mongine and warm it up to nition switch OFF and nition switch ON. It is not one witch OFF and nition switch OFF and nition and keep the engine idle for 1 minute. It is that "COOLAN TEMP"	ode voor to the state of the st	e normal operating temperature. at least 10 seconds. at least 10 seconds. speed between 3,500 and 4,000 rpm adicates more than 70°C (158°F).	n for at least 1 minute under no load.
<ol> <li>Open 6</li> <li>Select "DTC V</li> <li>Follow NOTE:</li> </ol>	engine hood. "HO2S2 (B1) P1146" VORK SUPPORT" mo the instruction of CON	(for ode w NSUL	_T-III display.	,
	ake at most 10 minute 'SELF-DIAG RESULT		il "COMPLETED" is displayed.	
Which is dis OK >> NG >>	splayed on CONSULT INSPECTION END Go to EC-209, "Diag BE DIAGNOSED>>0	-III s nosis	s Procedure".	

4. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B AGAIN

1. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).

Revision: 2009 September EC-207

2. Perform DTC confirmation procedure again.

>> GO TO 3.

## ${f 5.}$ PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B

Perform component function check. Refer to EC-208. "Component Function Check".

#### NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-209, "Diagnosis Procedure".

## Component Function Check

INFOID:0000000005536614

## 1. PERFORM COMPONENT FUNCTION CHECK-I

#### **⋈**Without CONSULT-III

- 1. Start engine and warm it up to the normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 6. Let engine idle for 1 minute.
- 7. Check the voltage between ECM harness connector terminals under the following conditions.

		ECM				
DTC	Connec-	nnec- +		Condition	Voltage	
	tor	Terminal	Terminal			
P0138	F8	33 [HO2S2 (bank 1) signal]	35 (Sensor	Revving up to 4,000 rpm under no	The voltage should be below 0.18 V	
P0158	F8 34 [HO2S2 (ba signal]		ground)	load at least 10 times	at least once during this procedure.	

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

## 2.PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector terminals under the following conditions.

		ECM			
DTC	Connec-			Condition	Voltage
	tor				
P0138	F8	33 [HO2S2 (bank 1) signal]	35 (Sensor	Keeping engine speed at idle for 10	The voltage should be below 0.18 V
P0158	P0158 F8		ground)	minutes	at least once during this procedure.

## Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

## 3. PERFORM COMPONENT FUNCTION CHECK-III

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Check the voltage between ECM harness connector terminals under the following conditions.

ECM		ECM				
DTC	Connec-	+	_	Condition	Voltage	E
	tor	Terminal	Terminal			
P0138	F8	33 [HO2S2 (bank 1) signal]	35 (Sensor	Coasting from 80 km/h (50 MPH)	The voltage should be below 0.18 V	-
P0158	ГО	34 [HO2S2 (bank 2) signal]	ground)	with selector lever in the D position	at least once during this procedure.	

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-209, "Diagnosis Procedure".

## Diagnosis Procedure

## 1.INSPECTION START

Confirm the detected malfunction (A or B). Refer to EC-206, "DTC Logic".

### Which malfunction is detected?

Α >> GO TO 2.

В >> GO TO 9.

## 2.CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace ground connection.

## 3.CHECK HO2S2 CONNECTOR FOR WATER

- Disconnect heated oxygen sensor 2 harness connector.
- 2. Check that water is not inside connectors.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.

## f 4.CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- Disconnect heated oxygen sensor 2 harness connector.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between heated oxygen sensor 2 (HO2S2) harness connector and ECM harness connector.

DTC		HO2S2		E	Continuity	
	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0138	1	F70	1	F8	35	Existed
P0158	2	F71	1	10	33	LXISIEU

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 5.CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between HO2S2 harness connector and ECM harness connector.

**EC-209** Revision: 2009 September 2010 Murano

Α

Е

INFOID:0000000005536615

Н

M

Ν

DTC		HO2S2			СМ	Continuity
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0138	1	F70	4	F8	33	Existed
P0158	2	F71	4	10	34	LXISIGU

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

DTC		HO2S2		Ground	Continuity
DIC	Bank	Connector	Terminal	Giodila	Continuity
P0138	1	F70	4	Ground	Not existed
P0158	2	F71	4	Giouna	Not existed

DTC	E	СМ	Ground	Continuity	
DIC	Connector Terminal		Giodila	Continuity	
P0138	EΩ	F8 33		Not existed	
P0158	10	34	Ground	NOI EXISIEU	

3. Also check harness for short to power.

### Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 6. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-212, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 7.

## 7.REPLACE HEATED OXYGEN SENSOR 2

Replace malfunctioning heated oxygen sensor 2.

#### **CAUTION:**

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

## 8.CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

## 9. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace ground connection.

## 10.clear mixture ratio self-learning value

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- Clear the mixture ratio self-learning value. Refer to EC-20, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- Run engine for at least 10 minutes at idle speed.

### Is the 1st trip DTC P0172 or P0175 detected? Is it difficult to start engine?

>> Perform trouble diagnosis for DTC P0172, P0175. Refer to EC-226, "DTC Logic". YES

NO >> GO TO 11.

## 11. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 harness connector.
- Disconnect ECM harness connector.
- Check the continuity between HO2S2 harness connector and ECM harness connector.

DTC		HO2S2			ECM		
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity	
P0138	1	F70	1	F8	35	Existed	
P0158	2	F71	1	го	33	Existed	

Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 12.check ho $_{2}$ s $_{2}$ input signal circuit for open and short

Check the continuity between HO2S2 harness connector and ECM harness connector.

DTC		HO2S2		E	СМ	Continuity
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0138	1	F70	4	F8	33	Existed
P0158	2	F71	4	10	34	LXISIEU

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

DTC		HO2S2		Ground	Continuity
DIC	Bank	Connector	Terminal		
P0138	1	F70	4	Ground	Not existed
P0158	2	F71	4	Giouna	NOI EXISIEU

DTC	E	СМ	Ground	Continuity	
DIC	Connector	Terminal	Giodila	Continuity	
P0138	F8 33		Ground	Not existed	
P0158	ГО	34	Giouria	inoi existed	

Also check harness for short to power.

### Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 13.CHECK HEATED OXYGEN SENSOR 2

Refer to EC-212, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 14.

**EC-211** Revision: 2009 September

EC

Α

Е

D

N

Р

## 14. REPLACE HEATED OXYGEN SENSOR 2

Replace malfunctioning heated oxygen sensor 2. **CAUTION:** 

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

### >> INSPECTION END

## 15. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

## Component Inspection

INFOID:0000000005536616

## 1.INSPECTION START

Will CONSULT-III be used?

### Will CONSULT-III be used?


YES >> GO TO 2.

NO >> GO TO 3.

## 2.CHECK HEATED OXYGEN SENSOR 2

### (P)With CONSULT-III

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III.
- Start engine and warm it up to the normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)/(B2)" as the monitor item with CONSULT-III.
- 7. Check "HO2S2 (B1)/(B2)" at idle speed when adjusting "FUEL INJECTION" to  $\pm$  25%.

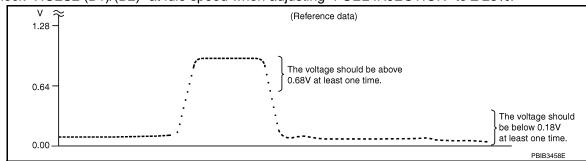

"HO2S2 (B1)/(B2)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)/(B2)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

### <u>Is the inspection result normal?</u>

YES >> INSPECTION END

NO >> GO TO 6.

3.CHECK HEATED OXYGEN SENSOR 2-I

### **Without CONSULT-III**

- 1. Start engine and warm it up to the normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector terminals under the following conditions.

Α

EC

D

Е

F

Н

K

Ν

ECM				
Connector	+	_	Condition	Voltage
	Terminal	Terminal		
F8	33 [HO2S2 (bank 1) signal] 34 [HO2S2 (bank 2) signal]	35 (Sensor ground)	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

## 4. CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector terminals under the following conditions.

ECM				
Connector	+	_	Condition	Voltage
	Terminal	Terminal		
F8	33 [HO2S2 (bank 1) signal]	35 (Sensor ground)	Keeping engine at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.
	34 [HO2S2 (bank 2) signal]			

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

## 5. CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector terminals under the following conditions.

ECM				
Connector	+	_	Condition	Voltage
	Terminal	Terminal		
F8	33 [HO2S2 (bank 1) signal]	35 (Sensor ground)	Coasting from 80 km/h (50 MPH) with selector lever in the D position	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.
	34 [HO2S2 (bank 2) signal]			

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

## 6. REPLACE HEATED OXYGEN SENSOR 2

Replace malfunctioning heated oxygen sensor 2.

### **CAUTION:**

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

[VQ35DE]

Α

D

Е

F

Н

M

Ν

## P0139, P0159 HO2S2


Description INFOID:0000000005575275

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.


Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

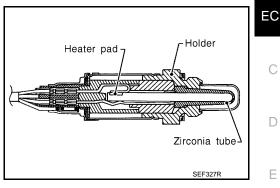

**DTC** Logic INFOID:0000000005575294

### DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst 1 causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the switching response of the sensor's voltage is faster than specified during various driving conditions such as fuel cut.

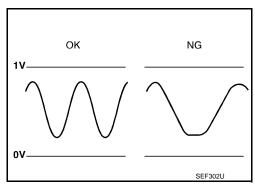

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0139	Heated oxygen sensor 2 (bank 1) circuit slow response	The switching time between rich and lean of a heated oxygen sensor 2 signal delays more	<ul> <li>Harness or connectors (The sensor circuit is open or shorted)</li> <li>Heated oxygen sensor 2</li> </ul>
P0159	Heated oxygen sensor 2 (bank 2) circuit slow response	than the specified time computed by ECM.	<ul><li>Fuel system</li><li>EVAP system</li><li>Intake air system</li></ul>

### DTC CONFIRMATION PROCEDURE

## 1.INSPECTION START

Do you have CONSULT-III?

## Do you have CONSULT-III?

YFS >> GO TO 2.

NO >> GO TO 7.

## 2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds. 1.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

>> GO TO 3.

## 3. PERFORM DTC CONFIRMATION PROCEDURE

### (P)With CONSULT-III

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III.
- 2. Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Turn ignition switch OFF and wait at least 10 seconds.
- 6. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 7. Let engine idle for 1 minute.
- 8. Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
- 9. Drive the vehicle in a proper gear at 60 km/h (38MPH) and maintain the speed.

#### **CAUTION:**

#### Always drive vehicle at a safe speed.

10. Release the accelerator pedal fully at least 5 seconds.

#### **CAUTION:**

- Enable the engine brake.
- Always drive carefully.
- Never apply brake when releasing the accelerator pedal.
- 11. Repeat step 9 and 10 at least 8 times.
- 12. Check the following item of "DATA MONITOR".

DTC	Data monitor item	Status	
P0139	HO2 S2 DIAG1 (B1)		
F0139	HO2 S2 DIAG2 (B1)	CMPLT	
P0159	HO2 S2 DIAG1 (B2)	CIVIFLI	
F0159	HO2 S2 DIAG2 (B2)		

## Is "CMPLT" displayed on CONSULT-III screen?

YES >> GO TO 6.

NO-1: "CMPLT" is not displayed on DIAG 1>>Perform DTC confirmation procedure again.

NO-2: "CMPLT" is not displayed on DIAG 2>>GO TO 4.

## 4. PERFORM DTC WORK SUPPORT

- 1. Open engine hood.
- 2. Select "HO2S2 (B1) P0139" or "HO2S2 (B2) P0159" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT-III.
- Start engine and follow the instruction of CONSULT-III display.

### NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

#### Is "COMPLETED" displayed on CONSULT-III screen?

YES >> GO TO 6.

NO >> GO TO 5.

## 5.perform dtc confirmation procedure again

- Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- Perform DTC confirmation procedure again.

>> GO TO 3.

## 6. PERFORM SELF-DIAGNOSIS

#### (P)With CONSULT-III

Perform ECM self-diagnosis.

### Is DTC "P0139" or "P0159" detected?

YES >> Proceed to EC-218, "Diagnosis Procedure".

NO >> INSPECTION END

## 7. PERFORM COMPONENT FUNCTION CHECK

## P0139, P0159 HO2S2

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

Е

F

Perform component function check. Refer to EC-217. "Component Function Check".

#### NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-218, "Diagnosis Procedure".

## Component Function Check

INFOID:0000000005575279

# 1.PERFORM COMPONENT FUNCTION CHECK-I

## **Without CONSULT-III**

- 1. Start engine and warm it up to the normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 7. Check the voltage between ECM harness connector terminals under the following conditions.

	ECM				
DTC	Connec-	+	_	Condition	Voltage
	tor	Terminal	Terminal		
P0139	F0.	33 [HO2S2 (bank 1) signal]	35 (Sensor	Revving up to 4,000 rpm under no	A change of voltage should be more than 0.8 V for 1 second during this
P0159		34 [HO2S2 (bank 2) signal]	ground)	load at least 10 times	procedure.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2. PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector terminals under the following conditions.

DTC	ECM					
	Connec-	+	-	Condition	Voltage	
	tor	Terminal	Terminal			
P0139	- F8	33 [HO2S2 (bank 1) signal]	35 (Sensor	Keeping engine at idle for 10 minutes	A change of voltage should be more than 0.8 V for 1 second during this procedure.	
P0159	10	34 [HO2S2 (bank 2) signal]	ground)			

## Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

Revision: 2009 September

# 3. PERFORM COMPONENT FUNCTION CHECK-III

Check the voltage between ECM harness connector terminals under the following conditions.

EC-217

0

Ν

K

L

	ECM				
DTC C	Connec-	+	_	Condition	Voltage
	tor	Terminal Terminal			
P0139	P0139 F8 P0159	33 [HO2S2 (bank 1) signal]	35 (Sensor	Coasting from 80 km/h (50 MPH) in D position	A change of voltage should be more than 0.8 V for 1 second during this procedure.
P0159		34 [HO2S2 (bank 2) signal]	ground)		

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-218, "Diagnosis Procedure".

## Diagnosis Procedure

INFOID:0000000005575280

# 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CLEAR MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to <u>EC-20</u>, "MIXTURE RATIO SELF-LEARNING VALUE <u>CLEAR</u>: Special Repair Requirement".
- 2. Run engine for at least 10 minutes at idle speed.

### Is the 1st trip DTC P0171, P0172, P0174 or P0175 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171, P0174 or P0172, P0175. Refer to <u>EC-222, "DTC Logic"</u> or <u>EC-226, "DTC Logic"</u>.

NO >> GO TO 3.

# 3.CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 harness connector.
- Disconnect ECM harness connector.
- Check the continuity between heated oxygen sensor 2 (HO2S2) harness connector and ECM harness connector.

DTC		HO2S2		E	Continuity		
БТО	Bank	Connector	Terminal	Connector	Terminal	Continuity	
P0139	1	F70	1	F8	35	Existed	
P0159	2	F71	1	10	33	LAISIEG	

5. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## f 4 .CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between HO2S2 harness connector and ECM harness connector.

DTC		HO2S2		ECM		Continuity
DIC	Bank Connector Terminal Connector		Terminal	Continuity		
P0139	1	F70	4	F8	33	Existed
P0159	2	F71	4	10	34	LXISIEU

EC

Α

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

DTC		HO2S2	Ground	Continuity	
DIC	Bank	Connector	Terminal	Oround	Continuity
P0139	1	F70	4	Ground	Not existed
P0159	2	F71	4	Ground	

Е

D

DTC	E	CM	Ground	Continuity	
DIC	Connector	Terminal	Oround		
P0139	F8	33	Ground	Not existed	
P0159	10	34	Giodila		

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-219, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

) >> GO TO 6.

**6.**REPLACE HEATED OXYGEN SENSOR 2
Replace malfunctioning heated oxygen sensor 2.

## **CAUTION:**

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

# 7. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

# Component Inspection

1.INSPECTION START

Will CONSULT-III be used?

Will CONSULT-III be used?

YES >> GO TO 2. NO >> GO TO 3.

2.CHECK HEATED OXYGEN SENSOR 2

Revision: 2009 September EC-219 2010 Murano

F

G

Н

K

M

Ν


0

INFOID:0000000005575276

Р

## (P)With CONSULT-III

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III.
- 2. Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)/(B2)" as the monitor item with CONSULT-III.
- 7. Check "HO2S2 (B1)/(B2)" at idle speed when adjusting "FUEL INJECTION" to ± 25%.

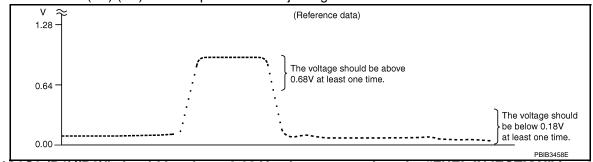

"HŌ2S2 (B1)/(B2)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)/(B2)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3.check heated oxygen sensor 2-1  $\,$ 

### Without CONSULT-III

- 1. Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector terminals under the following conditions.

ECM					
Connector	+	_	Condition	Voltage	
Connector	Terminal	Terminal			
F8	33 [HO2S2 (bank 1) signal]	35 (Sensor	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.	
	34 [HO2S2 (bank 2) signal]	ground)	least to times		

## Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

## 4. CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector terminals under the following conditions.

Α

EC

D

Е

F

Н

ECM				_
Connector	+	_	Condition	Voltage
	Terminal	Terminal		
F8	33 [HO2S2 (bank 1) signal] 34 [HO2S2 (bank 2) signal]	35 (Sensor ground)	Keeping engine at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

# 5. CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector terminals under the following conditions.

ECM				
Connector	+	_	Condition	Voltage
	Terminal	Terminal		
F8 -	33 [HO2S2 (bank 1) signal]	35 (Sensor	Coasting from 80 km/h (50 MPH) with se-	The voltage should be above 0.68 V at least once during this procedure.
	34 [HO2S2 (bank 2) signal]	ground)	lector lever in the D position	The voltage should be below 0.18 V at least once during this procedure.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

## 6. REPLACE HEATED OXYGEN SENSOR 2

Replace malfunctioning heated oxygen sensor 2.

## **CAUTION:**

- Discard any heated oxygen sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new oxygen sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

M

Ν

K

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# P0171, P0174 FUEL INJECTION SYSTEM FUNCTION

DTC Logic

### DTC DETECTION LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from A/F sensor 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (the actual mixture ratio is too lean), the ECM judges the condition as the fuel injection system malfunction and illuminates the MIL (2 trip detection logic).

Sensor	Input signal to ECM	ECM function	Actuator
A/F sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injector

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0171	Fuel injection system too lean (bank 1)		Intake air leakage     A/F sensor 1
P0174	Fuel injection system too lean (bank 2)	<ul> <li>Fuel injection system does not operate properly.</li> <li>The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.)</li> </ul>	<ul> <li>Fuel injector</li> <li>Exhaust gas leakage</li> <li>Incorrect fuel pressure</li> <li>Lack of fuel</li> <li>Mass air flow sensor</li> <li>Incorrect PCV hose connection</li> </ul>

### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE-I

- Clear the mixture ratio self-learning value. Refer to <u>EC-20, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement"</u>.
- 2. Start engine.

## Is it difficult to start engine?

YES >> GO TO 3.

NO >> GO TO 4.

# 3. RESTART ENGINE

If it is difficult to start engine, the fuel injection system has a malfunction, too.

Crank engine while depressing accelerator pedal.

### NOTE:

• When depressing accelerator pedal three-fourths (3/4) or more, the control system does not start the engine. Do not depress accelerator pedal too much.

## Does engine start?

YES >> Go to EC-223, "Diagnosis Procedure".

NO >> Check exhaust and intake air leakage visually.

# 4. PERFORM DTC CONFIRMATION PROCEDURE-II

- 1. Keep engine idle for at least 5 minutes.
- 2. Check 1st trip DTC.

< DTC/CIRCUIT DIAGNOSIS >

Is 1st trip DTC detected?

YES >> Go to EC-223, "Diagnosis Procedure".

NO >> GO TO 5.

# 5. PERFORM DTC CONFIRMATION PROCEDURE-III

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Start engine.
- Maintain the following conditions for at least 10 consecutive minutes. Hold the accelerator pedal as steady as possible.

VHCL SPEED SE

50 - 120 km/h (31 - 75 mph)

#### **CAUTION:**

## Always drive vehicle at a safe speed.

Check 1st trip DTC.

### Is 1st trip DTC detected?


YES >> Go to EC-223, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

## CHECK EXHAUST GAS LEAKAGE

Start engine and run it at idle. Listen for an exhaust gas leakage before three way catalyst (manifold).

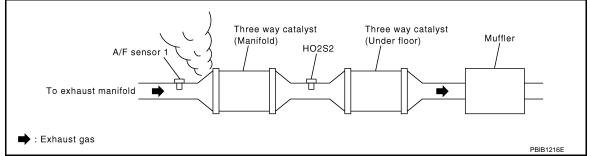

### Is exhaust gas leakage detected?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 2.

# 2.CHECK FOR INTAKE AIR LEAKAGE

- Listen for an intake air leakage after the mass air flow sensor.
- Check PCV hose connection.

#### Is intake air leakage detected?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 3.

# 3.check a/f sensor 1 input signal circuit

- 1. Turn ignition switch OFF.
- Disconnect corresponding A/F sensor 1 harness connector. 2.
- Disconnect ECM harness connector.
- Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

DTC	A/F sensor 1		E	Continuity		
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0171	1	F27	1		45	
10171		121	2	F8	49	Existed
P0174	2	F64	1	10	53	LAISIEU
	2	104	2		57	

**EC-223** Revision: 2009 September 2010 Murano

EC

Α

[VQ35DE]

D

INFOID:0000000005536623

Ν

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

DTC	A/F sensor 1			Ground	Continuity
DIC	Bank	Connector	Terminal	Oround	Continuity
P0171	1	F27	1		
P0171	'	Γ21	2	Ground	Not existed
P0174	2	F64	1	Giouna	NOI existed
FU174	2	F04	2		

DTC	ECM		Ground	Continuity
DIC	Connector	Terminal	Giodila	Continuity
P0171		45		
FUITI	F8	49	Ground	Not existed
P0174		53		
FU174		57		

Also check harness for short to power.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4. CHECK FUEL PRESSURE

- Release fuel pressure to zero. Refer to <u>EC-530</u>, "Inspection".
- 2. Install fuel pressure gauge kit [SST (J-44321)] and check fuel pressure. Refer to EC-530, "Inspection".

# At idling: Approximately 350 kPa (3.57 kg/cm<sup>2</sup>, 51 psi)

### Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

# DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

### Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly".

NO >> Repair or replace malfunctioning part.

## 6.CHECK MASS AIR FLOW SENSOR

### (I) With CONSULT-III

- Install all removed parts.
- Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-III. For specification, refer to <u>EC-536</u>, "Mass Air Flow Sensor".

### **With GST**

- Install all removed parts.
- Check mass air flow sensor signal in Service \$01 with GST. For specification, refer to <u>EC-536</u>, "Mass Air Flow Sensor".

### Is the measurement value within the specification?

YES >> GO TO 7.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or ground. Refer to <u>EC-160</u>, "<u>Diagnosis Procedure</u>".

# 7. CHECK FUNCTION OF FUEL INJECTOR

### (P) With CONSULT-III

Start engine.

< DTC/CIRCUIT DIAGNOSIS >

- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-III.
- 3. Check that each circuit produces a momentary engine speed drop.


With GST

- 1. Let engine idle.
- Listen to each fuel injector operating sound.

## Is the inspection result normal?

YES >> GO TO 8.

NO >> Perform trouble diagnosis for FUEL INJECTOR, refer to EC-438, "Diagnosis Procedure".

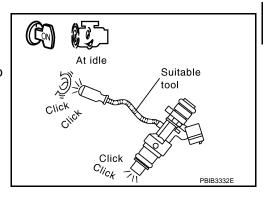

# 8. CHECK FUEL INJECTOR

- Turn ignition switch OFF.
- 2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- 3. Disconnect all fuel injector harness connectors.
- 4. Remove fuel tube assembly. Refer to <a href="EM-49">EM-49</a>, "Exploded View". Keep fuel hose and all fuel injectors connected to fuel tube.
- For DTC P0171, reconnect fuel injector harness connectors on bank 1.
   For DTC P0174, reconnect fuel injector harness connectors on bank 2.
- 6. Disconnect all ignition coil harness connectors.
- 7. Prepare pans or saucers under each fuel injector.
- 8. Crank engine for about 3 seconds.
  - For DTC P0171, check that fuel sprays out from fuel injectors on bank 1.
  - For DTC P0174, check that fuel sprays out from fuel injectors on bank 2.

### Fuel should be sprayed evenly for each fuel injector.

### Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace fuel injectors from which fuel does not spray out. Always replace O-ring with new ones.

## 9. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

EC

Α

[VQ35DE]

С

D

Е

F

Н

0

K

M

Ν

0

[VQ35DE]

# P0172, P0175 FUEL INJECTION SYSTEM FUNCTION

DTC Logic

### DTC DETECTION LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from A/F sensor 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (the actual mixture ratio is too rich), the ECM judges the condition as the fuel injection system malfunction and illuminates the MIL (2 trip detection logic).

Sensor	Input signal to ECM	ECM function	Actuator
A/F sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injector

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0172	Fuel injection system too rich (bank 1)	Fuel injection system does not operate properly.	A/F sensor 1     Fuel injector
P0175	Fuel injection system too rich (bank 2)	The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)	<ul><li>Exhaust gas leakage</li><li>Incorrect fuel pressure</li><li>Mass air flow sensor</li></ul>

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE-I

- Clear the mixture ratio self-learning value. Refer to <u>EC-20, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement"</u>.
- Start engine.

### Is it difficult to start engine?

YES >> GO TO 3.

NO >> GO TO 4.

## 3. RESTART ENGINE

If it is difficult to start engine, the fuel injection system has a malfunction, too.

Crank engine while depressing accelerator pedal.

## NOTE:

 When depressing accelerator pedal three-fourths (3/4) or more, the control system does not start the engine. Do not depress accelerator pedal too much.

### Does engine start?

YES >> Go to EC-227, "Diagnosis Procedure".

NO >> Check exhaust and intake air leakage visually.

# 4. PERFORM DTC CONFIRMATION PROCEDURE-II

- 1. Keep engine idle for at least 5 minutes.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-227, "Diagnosis Procedure".

NO >> GO TO 5.

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

INFOID:0000000005536625

# 5.PERFORM DTC CONFIRMATION PROCEDURE-III

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine.
- 3. Maintain the following conditions for at least 10 consecutive minutes. Hold the accelerator pedal as steady as possible.

VHCL SPEED SE

50 - 120 km/h (31 - 75 mph)

### **CAUTION:**

## Always drive vehicle at a safe speed.

4. Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-227, "Diagnosis Procedure".


NO >> INSPECTION END

## Diagnosis Procedure

# 1. CHECK EXHAUST GAS LEAKAGE

Start engine and run it at idle.

Listen for an exhaust gas leakage before three way catalyst (manifold).

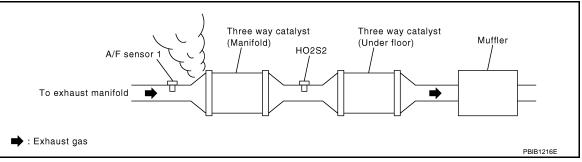

## Is exhaust gas leakage detected?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 2.

## 2. CHECK FOR INTAKE AIR LEAKAGE

Listen for an intake air leakage after the mass air flow sensor.

### Is intake air leakage detected?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 3.

# 3.check a/f sensor 1 input signal circuit

- 1. Turn ignition switch OFF.
- Disconnect corresponding A/F sensor 1 harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

DTC	A/F sensor 1		E	Continuity		
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0172	1	F27	1		45	
F0172	2   1	Γ21	2		F8 49	Existed
P0175	2	F64	1	10	53	LXISIEU
F0173	2   F04	2		57		

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

EC

D

Е

F

G

Н

K

.

M

Ν

0

DTC	A/F sensor 1			Ground	Continuity
DIC	Bank	Connector Terminal		Giouna	Continuity
P0172	1	F27	1		
P0172	P0172 1		2	Ground	Not existed
D0175	2	F64	1	Giouna	Not existed
PU175	P0175 2 F64		2		

DTC	ECM		Ground	Continuity
DIC	Connector	Terminal	Giodila	Continuity
P0172		45		Not existed
FUITZ	F8	49	Ground	
P0175		53		
F0175		57		

6. Also check harness for short to power.

## Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4. CHECK FUEL PRESSURE

- Release fuel pressure to zero. Refer to <u>EC-530, "Inspection"</u>.
- Install fuel pressure gauge kit [SST (J-44321)] and check fuel pressure. Refer to <u>EC-530, "Inspection"</u>.

## At idling: Approximately 350 kPa (3.57 kg/cm<sup>2</sup>, 51 psi)

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace "fuel filter and fuel pump assembly".

## **5.**CHECK MASS AIR FLOW SENSOR

### (P)With CONSULT-III

- Install all removed parts.
- Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-III. For specification, refer to <u>EC-536, "Mass Air Flow Sensor"</u>.

## **With GST**

- 1. Install all removed parts.
- Check mass air flow sensor signal in "Service \$01" with GST. For specification, refer to <u>EC-536</u>, "Mass Air Flow Sensor".

## Is the measurement value within the specification?

YES >> GO TO 6.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or ground. Refer to <a href="EC-160">EC-160</a>, "Diagnosis Procedure".

## 6. CHECK FUNCTION OF FUEL INJECTOR

### (P) With CONSULT-III

- Start engine.
- 2. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-III.
- 3. Check that each circuit produces a momentary engine speed drop.

### 

1. Let engine idle.

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]


2. Listen to each fuel injector operating sound.

### Is the inspection result normal?

YES >> GO TO 7.

NO

>> Perform trouble diagnosis for FUEL INJECTOR, refer to EC-438, "Diagnosis Procedure".

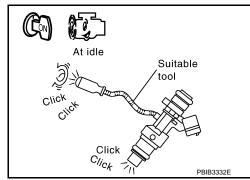

# 7. CHECK FUEL INJECTOR

- 1. Remove fuel injector assembly. Refer to <a href="EM-49">EM-49</a>, "Exploded View". Keep fuel hose and all fuel injectors connected to fuel tube.
- 2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- 3. Disconnect all fuel injector harness connectors.
- 4. Disconnect all ignition coil harness connectors.
- 5. Prepare pans or saucers under each fuel injectors.
- Crank engine for about 3 seconds. Check fuel does not drip from fuel injector.

## Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace the fuel injectors from which fuel is dripping. Always replace O-ring with new one.

## 8. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

EC

Α

D

Е

F

G

Н

L

K

M

Ν

0


## P0181 FTT SENSOR

**Description** 

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

#### <Reference data>

Fluid temperature [°C (°F)]	Voltage* (V)	Resistance $(k\Omega)$
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

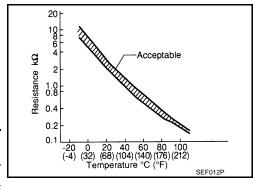

<sup>\*:</sup> These data are reference values and are measured between ECM terminals 95 (Fuel tank temperature sensor) and ground.

DTC Logic

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0181	Fuel tank temperature sensor circuit range/per- formance	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signals from engine coolant temperature sensor and intake air temperature sensor.	( The sensor circuit is open or shorted)

### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

### >> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE-I

- 1. Turn ignition switch ON and wait at least 10 seconds.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-231, "Diagnosis Procedure".

NO >> GO TO 3.

## 3. CHECK ENGINE COOLANT TEMPERATURE

### (P)With CONSULT-III

- 1. Select "COOLAN TEMP/S" in "DATA MONITOR" with CONSULT-III.
- Check "COOLAN TEMP/S" value.

#### **With GST**

Follow the procedure "With CONSULT-III" above.

### Is "COOLAN TEMP/S" less than 60°C (140°F)?

YES >> INSPECTION END

NO >> GO TO 4.

### 4. PERFORM DTC CONFIRMATION PROCEDURE-II

## P0181 FTT SENSOR

#### [VQ35DE] < DTC/CIRCUIT DIAGNOSIS >

## (P)With CONSULT-III

- 1. Cool engine down until "COOLAN TEMP/S" is less than 60°C (140°F).
- Wait at least 10 seconds.
- Check 1st trip DTC.

## 

Follow the procedure "With CONSULT-III" above.

## Is 1st trip DTC detected?

YES >> Go to EC-231, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

# 1. CHECK GROUND CONNECTION

Turn ignition switch OFF.

Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK FUEL TANK TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect "fuel level sensor unit and fuel pump" harness connector. 2.
- Turn ignition switch ON.
- Check the voltage between "fuel level sensor unit and fuel pump" harness connector and ground.

Fuel level sensor	unit and fuel pump	Ground	Voltage	
Connector	Terminal	Ground		
B40	4	Ground	Approx. 5 V	

### Is the inspection result normal?

YES >> GO TO 4. NO

>> GO TO 3.

# 3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E104, B4
- Harness for open or short between ECM and "fuel level sensor unit and fuel pump"

>> Repair open circuit, short to ground or short to power in harness or connector.

# $oldsymbol{4}$ .CHECK FUEL TANK TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between "fuel level sensor unit and fuel pump" harness connector and ECM harness connector.

Fuel level sensor unit and fuel pump		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
B40	5	E16	104	Existed

Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

# ${f 5.}$ DETECT MALFUNCTIONING PART

Check the following.

Revision: 2009 September

**EC-231** 

EC

Α

D

INFOID:0000000005536628

Е

M

## P0181 FTT SENSOR

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- Harness connectors E105, M11
- Harness connectors M77, B11
- Harness for open or short between "fuel level sensor unit and fuel pump" and ECM

>> Repair open circuit, short to ground or short to power in harness or connector.

# 6. CHECK FUEL TANK TEMPERATURE SENSOR

Refer to EC-232, "Component Inspection".

## Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace "fuel level sensor unit and fuel pump".

# 7. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

### >> INSPECTION END

# Component Inspection

INFOID:0000000005536629

# 1. CHECK FUEL TANK TEMPERATURE SENSOR


- 1. Turn ignition switch OFF.
- 2. Remove fuel level sensor unit.
- 3. Check resistance between "fuel level sensor unit and fuel pump" terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
4 and 5	Temperature [°C (°F)]	20 (68)	2.3 - 2.7 kΩ
4 and 5	Temperature [ O ( 1 )]	50 (122)	0.79 - 0.90 kΩ

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace "fuel level sensor unit and fuel pump".

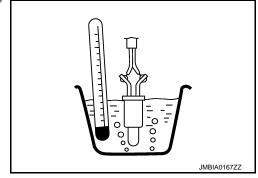

[VQ35DE]


# P0182, P0183 FTT SENSOR

Description INFOID:0000000005536630

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

#### <Reference data>

Fluid temperature [°C (°F)]	Voltage* (V)	Resistance $(k\Omega)$
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

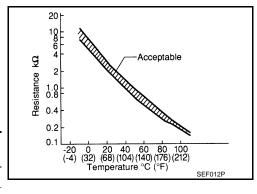

<sup>\*:</sup> These data are reference values and are measured between ECM terminals 95 (Fuel tank temperature sensor) and ground.

**DTC Logic** INFOID:000000000553663

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
P0182	Fuel tank temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted.)	
P0183	Fuel tank temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Fuel tank temperature sensor	

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON and wait at least 5 seconds.
- Check 1st trip DTC.

## Is 1st trip DTC detected?

>> Go to EC-233, "Diagnosis Procedure". YES

NO >> INSPECTION END

## Diagnosis Procedure

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK FUEL TANK TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

Turn ignition switch OFF.

Α

EC

D

Ν

INFOID:0000000005536632

**EC-233** 

Revision: 2009 September

## < DTC/CIRCUIT DIAGNOSIS > [VQ35DE]

- 2. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between "fuel level sensor unit and fuel pump" harness connector and ground.

Fuel level sensor unit and fuel pump		Ground	Voltage	
Connector	Terminal	Ground	voltage	
B40	4	Ground	Approx. 5 V	

### Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

# 3. DETECT MALFUNCTIONING PART

## Check the following.

- Harness connectors E104, B4
- Harness for open or short between ECM and "fuel level sensor unit and fuel pump"
  - >> Repair open circuit, short to ground or short to power in harness or connector.

# 4.CHECK FUEL TANK TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between "fuel level sensor unit and fuel pump" harness connector and ECM harness connector.

Fuel level sensor unit and fuel pump		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
B40	5	E16	104	Existed

4. Also check harness for short to ground and short to power.

## Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

## DETECT MALFUNCTIONING PART

### Check the following.

- Harness connectors E105, M11
- Harness connectors M77, B11
- Harness for open or short between "fuel level sensor unit and fuel pump" and ECM
  - >> Repair open circuit, short to ground or short to power in harness or connector.

## 6. CHECK FUEL TANK TEMPERATURE SENSOR

Refer to EC-234, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace "fuel level sensor unit and fuel pump".

## 7. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

### >> INSPECTION END

# Component Inspection

## INFOID:0000000005536633

# 1. CHECK FUEL TANK TEMPERATURE SENSOR

1. Turn ignition switch OFF.

# **P0182, P0183 FTT SENSOR**

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]


- 2. Remove fuel level sensor unit.
- 3. Check resistance between "fuel level sensor unit and fuel pump" terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
4 and 5	Temperature [°C (°F)]	20 (68)	2.3 - 2.7 kΩ
4 and 5	Temperature [ O ( 1 )]	50 (122)	0.79 - 0.90 kΩ

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace "fuel level sensor unit and fuel pump".

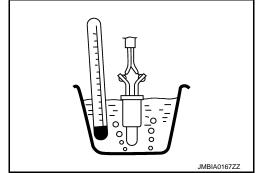

Α

EC

С

D

Е

F

G

Н

K

L

M


Ν

0

# P0196 EOT SENSOR


Description INFOID:000000005536634

The engine oil temperature sensor is used to detect the engine oil temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine oil temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

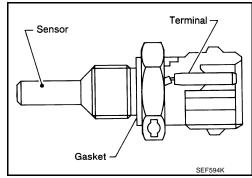

### <Reference data>

Engine oil temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260
110 (230)	0.6	0.143 - 0.153

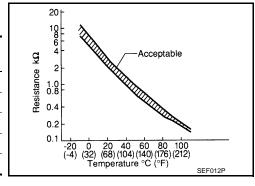

<sup>\*:</sup> These data are reference values and are measured between ECM terminals 54 (Engine oil temperature sensor) and 52 (Sensor ground).

DTC Logic

### DTC DETECTION LOGIC

#### NOTE:

If DTC P0196 is displayed with P0197 or P0198, first perform the trouble diagnosis for DTC P0197, P0198. Refer to EC-239, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0196	Engine oil temperature sensor range/performance	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signals from engine coolant temperature sensor and intake air temperature sensor.	Harness or connectors     (The sensor circuit is open or shorted)     Engine oil temperature sensor

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE-I

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.

### P0196 EOT SENSOR

### [VQ35DE] < DTC/CIRCUIT DIAGNOSIS > Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds. Α Start engine and let it idle for 5 minutes and 10 seconds. Check 1st trip DTC. Is 1st trip DTC detected? EC YES >> EC-237, "Diagnosis Procedure". NO >> GO TO 3. 3.PERFORM DTC CONFIRMATION PROCEDURE-II (P)With CONSULT-III Select "DATA MONITOR" mode with CONSULT-III. D Check that "COOLAN TEMP/S" indicates above 70°C (158°F). If it is above 70°C (158°F), go to the following steps. If it is below 70°C (158°F), warm engine up until "COOLAN TEMP/S" indicates more than 70°C (158°F). Then perform the following steps. Е 3. Turn ignition switch OFF and soak the vehicle in a cool place. 4. Turn ignition switch ON. NOTE: F Do not turn ignition switch OFF until step 8. 5. Select "DATA MONITOR" mode with CONSULT-III. Check the following. COOLAN TEMP/S Below 40°C (104°F) INT/A TEMP SE Below 40°C (104°F) Н Difference between "COOLAN TEMP/S" and "INT/A TEMP SE" Within 6°C (11°F) If they are within the specified range, perform the following steps. If they are out of the specified range, soak the vehicle to meet the above conditions. Then perform the following steps. NOTE: Do not turn ignition switch OFF. If it is supposed to need a long period of time, do not deplete the battery. Start engine and let it idle for 5 minutes. Check 1st trip DTC. ■With GST Follow the procedure "With CONSULT-III" above. Is 1st trip DTC detected? YES >> EC-237, "Diagnosis Procedure". >> INSPECTION END NO Diagnosis Procedure INEOID:0000000005536636 M 1. CHECK GROUND CONNECTION Turn ignition switch OFF. N Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection". Is the inspection result normal? YES >> GO TO 2. NO >> Repair or replace ground connection. 2.check engine oil temperature sensor Refer to EC-238. "Component Inspection". Is the inspection result normal? YES >> GO TO 3. NO >> Replace engine oil temperature sensor. 3.check intermittent incident Refer to GI-39, "Intermittent Incident"

[VQ35DE]

## >> INSPECTION END


# Component Inspection

INFOID:0000000005536637

# 1.CHECK ENGINE OIL TEMPERATURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect engine oil temperature sensor harness connector.
- 3. Remove engine oil temperature sensor.
- 4. Check resistance between engine oil temperature sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
1 and 2	Temperature [°C (°F)]	20 (68)	2.1 - 2.9 kΩ
		50 (122)	0.68 - 1.00 kΩ
		90 (194)	0.236 - 0.260 kΩ

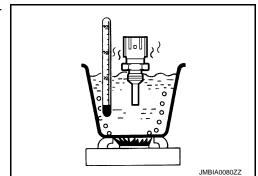

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine oil temperature sensor.

Α

EC


D

Е

# P0197, P0198 EOT SENSOR

Description INFOID:0000000005536638


The engine oil temperature sensor is used to detect the engine oil temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine oil temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

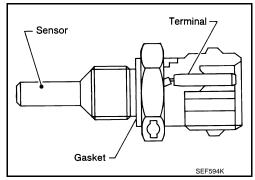

#### <Reference data>

Engine oil temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.1 - 2.9
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260
110 (230)	0.6	0.143 - 0.153

<sup>\*:</sup> These data are reference values and are measured between ECM terminals 54 (Engine oil temperature sensor) and 52 (Sensor ground).

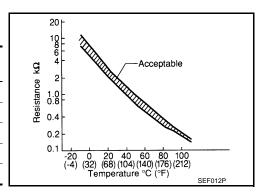

DTC Logic INFOID:0000000005536639

### DTC DETECTION LOGIC

DTC No.	Trouble Diagnosis Name	DTC detecting condition	Possible Cause
P0197	Engine oil tempera- ture sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted.)
P0198	Engine oil tempera- ture sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Engine oil temperature sensor

## DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### >> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and wait at least 5 seconds.
- 2. Check 1st trip DTC.

### Is 1st trip DTC detected?

K

M

Ν

## **P0197, P0198 EOT SENSOR**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

YES >> Go to EC-240, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536640

# 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK EOT SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect engine oil temperature (EOT) sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between EOT sensor harness connector and ground.

EOT sensor		Ground	Voltage
Connector	Terminal	Ground	voltage
F66	1	Ground	Approx. 5 V

### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# ${f 3.}$ CHECK EOT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between EOT sensor harness connector and ECM harness connector.

EOT sensor		EC	Continuity	
Connector	Terminal	Connector Terminal		Continuity
F66	2	F8	52	Existed

4. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4. CHECK ENGINE OIL TEMPERATURE SENSOR

Refer to EC-240, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace engine oil temperature sensor.

### 5. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

# Component Inspection

INFOID:0000000005536641

# 1. CHECK ENGINE OIL TEMPERATURE SENSOR

- Turn ignition switch OFF.
- Disconnect engine oil temperature sensor harness connector.
- 3. Remove engine oil temperature sensor.

# **P0197, P0198 EOT SENSOR**

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]


4. Check resistance between engine oil temperature sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
		20 (68)	2.1 - 2.9 kΩ
1 and 2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00 kΩ
		90 (194)	0.236 - 0.260 kΩ

# Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine oil temperature sensor.

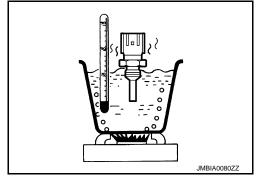

EC

Α

D

C

Е

F

G

Н

K

L

M

Ν

0


INFOID:0000000005536643

# P0222, P0223 TP SENSOR

Description INFOID:0000000005536642

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

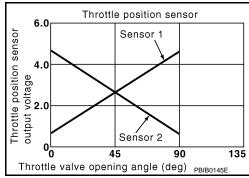

**DTC** Logic

### DTC DETECTION LOGIC

#### NOTE:

If DTC P0222 or P0223 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to <u>EC-343</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0222	Throttle position sensor 1 circuit low input	An excessively low voltage from the TP sensor 1 is sent to ECM.	Harness or connectors     (TP sensor 1 circuit is open or shorted.)
P0223	Throttle position sensor 1 circuit high input	An excessively high voltage from the TP sensor 1 is sent to ECM.	Electric throttle control actuator (TP sensor 1)

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

### Is DTC detected?

YES >> Go to EC-242, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536644

# 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## **P0222, P0223 TP SENSOR**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# 2.CHECK THROTTLE POSITION SENSOR 1 POWER SUPPLY CIRCUIT-I

- 1. Disconnect electric throttle control actuator harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between electric throttle control actuator harness connector and ground.

EC

D

Е

N

Electric throttle control actuator		Ground	Voltage	
Connector	Terminal	Ground	Voltage	
F29	1	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.check throttle position sensor 1 ground circuit for open and short

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between electric throttle control actuator and ECM harness connector.

Electric throttle control actuator		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F29	4	F8	36	Existed

4. Also check harness for short to ground and short to power.

## Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# ${f 4.}$ CHECK THROTTLE POSITION SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between electric throttle control actuator and ECM harness connector.

Electric throttle	Electric throttle control actuator		ECM	
Connector	Terminal	Connector Terminal		Continuity
F29	2	F8	37	Existed

2. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

### 5. CHECK THROTTLE POSITION SENSOR

Refer to EC-244, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

Revision: 2009 September

## 6.REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- Replace electric throttle control actuator.
- Refer to EC-244, "Special Repair Requirement".

### >> INSPECTION END

## 7. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

**EC-243** 

2010 Murano

[VQ35DE]

## Component Inspection

INFOID:0000000005536645

# 1. CHECK THROTTLE POSITION SENSOR

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Perform EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- 4. Turn ignition switch ON.
- 5. Set selector lever to D position.
- 6. Check the voltage between ECM harness connector terminals under the following conditions.

ECM					
Connector	+ -		Condition		Voltage
Connector	Terminal	Terminal			
	37 (TP sensor 1 sig- nal) 36		Fully released	More than 0.36 V	
F8		36	Accelerator pedal	Fully depressed	Less than 4.75 V
10	38	(Sensor ground)	Accelerator pedar	Fully released	Less than 4.75 V
	(TP sensor 2 sig- nal)			Fully depressed	More than 0.36 V

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2.replace electric throttle control actuator

- 1. Replace electric throttle control actuator.
- 2. Go to EC-174, "Special Repair Requirement".

>> INSPECTION END

# Special Repair Requirement

INFOID:0000000005536646

# 1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement"

>> GO TO 2.

# 2. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement"

>> END

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# P0300, P0301, P0302, P0303, P0304, P0305, P0306 MISFIRE

DTC Logic INFOID:0000000005536647

### DTC DETECTION LOGIC

When a misfire occurs, engine speed will fluctuate. If the engine speed fluctuates enough to cause the crankshaft position (CKP) sensor (POS) signal to vary, ECM can determine that a misfire is occurring.

Sensor	Input signal to ECM	ECM function
Crankshaft position sensor (POS)	Engine speed	On board diagnosis of misfire

The misfire detection logic consists of the following two conditions.

1. One Trip Detection Logic (Three Way Catalyst Damage)

On the 1st trip, when a misfire condition occurs that can damage the three way catalyst (TWC) due to overheating, the MIL will blink.

When a misfire condition occurs, the ECM monitors the CKP sensor signal every 200 engine revolutions for a change.

When the misfire condition decreases to a level that will not damage the TWC, the MIL will turn off. If another misfire condition occurs that can damage the TWC on a second trip, the MIL will blink. When the misfire condition decreases to a level that will not damage the TWC, the MIL will remain on. If another misfire condition occurs that can damage the TWC, the MIL will begin to blink again.

Two Trip Detection Logic (Exhaust quality deterioration)

For misfire conditions that will not damage the TWC (but will affect vehicle emissions), the MIL will only illuminate when the misfire is detected on a second trip. During this condition, the ECM monitors the CKP sensor signal every 1,000 engine revolutions.

A misfire malfunction can be detected in any one cylinder or in multiple cylinders.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0300	Multiple cylinder misfires detected	Multiple cylinders misfire.	Improper spark plug
P0301	No. 1 cylinder misfire detected	No. 1 cylinder misfires.	Insufficient compression     Incorrect fuel pressure
P0302	No. 2 cylinder misfire detected	No. 2 cylinder misfires.	The fuel injector circuit is open or shorted
P0303	No. 3 cylinder misfire detected	No. 3 cylinder misfires.	Fuel injector     Intake air leakage
P0304	No. 4 cylinder misfire detected	No. 4 cylinder misfires.	The ignition signal circuit is open or shorted
P0305	No. 5 cylinder misfire detected	No. 5 cylinder misfires.	Lack of fuel     Signal plate
P0306	No. 6 cylinder misfire detected	No. 6 cylinder misfires.	A/F sensor 1     Incorrect PCV hose connection

## DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

**EC-245** 

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### >> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE-I

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds. 2.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Restart engine and let it idle for approximately 15 minutes.
- Check 1st trip DTC.

## Is 1st trip DTC detected?

EC

Α

D

Е

F

Н

M

N

Revision: 2009 September

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

YES >> Go to EC-246, "Diagnosis Procedure".

NO >> GO TO 3.

# 3.perform dtc confirmation procedure-ii

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and drive the vehicle under similar conditions to (1st trip) Freeze Frame Data for a certain time. Refer to the table below.

### Hold the accelerator pedal as steady as possible.

Similar conditions to (1st trip) Freeze Frame Data mean that the following conditions should be satisfied at the same time.

### **CAUTION:**

Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws when driving.

Engine speed	Engine speed in the freeze frame data $\pm$ 400 rpm
Vehicle speed	Vehicle speed in the freeze frame data ± 10 km/h (6 MPH)
Basic fuel schedule	Basic fuel schedule in freeze frame data $\times$ (1 $\pm$ 0.1)
Engine coolant temperature (T)	When the freeze frame data shows lower than 70°C (158°F), T should be lower than 70°C (158°F).
condition	When the freeze frame data shows higher than or equal to 70°C (158°F), T should be higher than or equal to 70°C (158°F).

Driving time varies according to the engine speed in the freeze frame data.

Engine speed	Time
Around 1,000 rpm	Approximately 10 minutes
Around 2,000 rpm	Approximately 5 minutes
More than 3,000 rpm	Approximately 3.5 minutes

### 5. Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-246, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536648

# 1. CHECK FOR INTAKE AIR LEAKAGE AND PCV HOSE

- 1. Start engine and run it at idle speed.
- 2. Listen for the sound of the intake air leakage.
- Check PCV hose connection.

## Is intake air leakage detected?

YES >> Discover air leakage location and repair.

NO >> GO TO 2.

# 2.CHECK FOR EXHAUST SYSTEM CLOGGING

Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.

### Is the inspection result normal?

YES-1 >> With CONSULT-III: GO TO 3.

YES-2 >> Without CONSULT-III: GO TO 4.

NO >> Repair or replace malfunctioning part.

# 3.perform power balance test

### (P) With CONSULT-III

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-III.

## < DTC/CIRCUIT DIAGNOSIS >

Check that each circuit produces a momentary engine speed drop.

### Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 4.

## 4. CHECK FUNCTION OF FUEL INJECTOR


- Start engine and let it idle.
- Listen to each fuel injector make operation sound.

### Clicking sound should be heard.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Perform trouble diagnosis for FUEL INJECTOR, refer to EC-438. "Diagnosis Procedure".

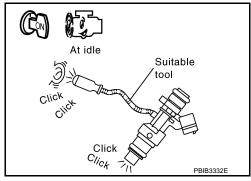

## ${f 5}$ .CHECK FUNCTION OF IGNITION COIL-I

### **CAUTION:**

## Perform the following procedure in a place with no combustible objects and good ventilation.

- Turn ignition switch OFF.
- Remove fuel pump fuse in IPDM E/R to release fuel pressure.

#### NOTE:

Do not use CONSULT-III to release fuel pressure, or fuel pressure applies again during the following procedure.

- 3. Start engine.
- After engine stalls, crank it 2 or 3 times to release all fuel pressure. 4.
- Turn ignition switch OFF.
- Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- Remove ignition coil and spark plug of the cylinder to be checked.
- Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 9. Connect spark plug and harness connector to ignition coil.
- 10. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 -0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 11. Crank engine for approximately 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

## Spark should be generated.

#### **CAUTION:**

- During the operation, always stay 0.5 m (19.7 in) or more away from the spark plug and the ignition coil. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.
- It might damage the ignition coil if the gap of more than 17 mm (0.66 in) is made. NOTE:

When the gap is less than 13 mm (0.52 in), a spark might be generated even if the coil is malfunctioning.

#### Is the inspection result normal?

YES >> GO TO 9. NO >> GO TO 6.

# 6. CHECK FUNCTION OF IGNITION COIL-II

- Turn ignition switch OFF.
- Disconnect spark plug and connect a non-malfunctioning spark plug.

[VQ35DE]

Α

EC

D

Е

Н

13 - 17 mm (0.52-0.66 in) Grounded metal portion (Cylinder head, cylinder block, etc.) JMBIA0066GB

M

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

3. Crank engine for approximately 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

### Spark should be generated.

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> Check ignition coil, power transistor and their circuits. Refer to <u>EC-445</u>, "Diagnosis Procedure".


## 7. CHECK SPARK PLUG

Check the initial spark plug for fouling, etc.

## Is the inspection result normal?

YES >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to MA-39, "SPARK PLUG: Spark

NO >> Repair or clean spark plug. Then GO TO 8.

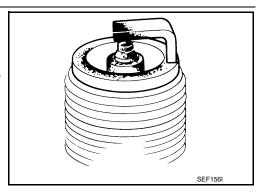

# 8. CHECK FUNCTION OF IGNITION COIL-III

- Reconnect the initial spark plugs.
- 2. Crank engine for approximately 3 seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

### Spark should be generated.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to MA-39, "SPARK PLUG: Spark Plug".

# 9. CHECK COMPRESSION PRESSURE

Check compression pressure. Refer to EM-27, "Inspection".

### Is the inspection result normal?

YES >> GO TO 10.

NO >> Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

# 10. CHECK FUEL PRESSURE

- Install all removed parts.
- Release fuel pressure to zero. Refer to <u>EC-530, "Inspection"</u>.
- 3. Install fuel pressure gauge kit [SST (J-44321)] and check fuel pressure. Refer to EC-530, "Inspection".

# At idle: Approximately 350 kPa (3.57 kg/cm<sup>2</sup>, 51 psi)

## Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 11.

# 11. DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

### Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly".

NO >> Repair or replace malfunctioning part.

# 12. CHECK IGNITION TIMING

Check idle speed and ignition timing.

For procedure, refer to EC-13, "BASIC INSPECTION: Special Repair Requirement".

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

For specification, refer to EC-536, "Idle Speed" and EC-536, "Ignition Timing".

#### Is the inspection result normal?

YES >> GO TO 13.

NO >> Follow the EC-13, "BASIC INSPECTION: Special Repair Requirement".

# 13. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect corresponding A/F sensor 1 harness connector.
- Disconnect ECM harness connector.
- 4. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

	A/F sensor 1			ECM		
Bank	Connector	Terminal	Connector	Terminal	Continuity	
	F27	1	Ε0.	45		
ļ	Γ21	2		49	Existed	
2	F64	1	F8	53	Existed	
		2		57		

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1			Ground	Continuity	
Bank	Connector Terminal		Giodila	Continuity	
1	F27	1		Not existed	
		2	Ground		
2	F64	1			
		2			

ECM		Ground	Continuity	
Connector Terminal		Olouliu		
	45		Not existed	
F8	49	Ground		
10	53	Giodila		
	57			

6. Also check harness for short to power.

## Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 14. CHECK A/F SENSOR 1 HEATER

Refer to EC-146, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace malfunctioning A/F sensor 1.

# 15. CHECK MASS AIR FLOW SENSOR

### (P)With CONSULT-III

- 1. Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT-III.
- 2. For specification, refer to EC-536, "Mass Air Flow Sensor".

### With GST

- 1. Check mass air flow sensor signal in Service \$01 with GST.
- 2. For specification, refer to EC-536, "Mass Air Flow Sensor".

EC

Α

U

Е

D

F

1

Н

K

L

IV

P

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Is the measurement value within the specification?

YES >> GO TO 16.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or ground. Refer to <u>EC-160</u>, "<u>Diagnosis Procedure</u>".

# 16. CHECK SYMPTOM TABLE

Check items on the rough idle symptom in EC-514, "Symptom Table".

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair or replace malfunctioning part.

17. ERASE THE 1ST TRIP DTC

Some tests may cause a 1st trip DTC to be set.

Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to <u>EC-102</u>, "<u>Diagnosis Description</u>".

>> GO TO 18.

# 18. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

[VQ35DE]

# P0327, P0328, P0332, P0333 KS

Description INFOID:0000000005536649

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM.

EC

Α

**DTC Logic** 

### INFOID:0000000005536650

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detected condition	Possible cause	
P0327	Knock sensor (bank 1) circuit low input	An excessively low voltage from the sensor is sent to ECM.		
P0328	Knock sensor (bank 1) circuit high input	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted.)	
P0332	Knock sensor (bank 2) circuit low input	An excessively low voltage from the sensor is sent to ECM.	Knock sensor	
P0333	Knock sensor (bank 2) circuit high input	An excessively high voltage from the sensor is sent to ECM.		

### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and run it for at least 5 seconds at idle speed.
- Check 1st trip DTC. 2.

### Is 1st trip DTC detected?

YFS >> Go to EC-251, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

>> GO TO 2. YES

NO >> Repair or replace ground connection.

# 2.CHECK KNOCK SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Disconnect knock sensor harness connector and ECM harness connector.
- Check the continuity between knock sensor harness connector and ECM harness connector.

D

Н

N

INFOID:0000000005536651

DTC	Knock sensor		ECM		Continuity	
	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0327, P0328	1	F201	2	F8	67	Existed
P0332, P0333	2	F202	2			

3. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

# 3. DETECT MALFUNCTIONING PART

### Check the following.

- Harness connectors F200, F78
- Harness for open or short between knock sensor and ECM
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

# 4. CHECK KNOCK SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between knock sensor harness connector and ECM harness connector.

DTC	Knock sensor		ECM		Continuity	
	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0327, P0328	1	F201	1	F8	61	Existed
P0332, P0333	2	F202	1	ГО	62	Existed

2. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

# 5. DETECT MALFUNCTIONING PART

### Check the following.

- Harness connectors F200, F78
- Harness for open or short between knock sensor and ECM
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

## 6.CHECK KNOCK SENSOR

Refer to EC-252, "Component Inspection".

## Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace malfunctioning knock sensor.

## .CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

### >> INSPECTION END

# Component Inspection

INFOID:0000000005536652

# 1. CHECK KNOCK SENSOR

- Turn ignition switch OFF.
- 2. Disconnect knock sensor harness connector.
- Check resistance between knock sensor terminal as per the following.NOTE:

# P0327, P0328, P0332, P0333 KS

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

It is necessary to use an ohmmeter which can measure more than 10 M $\Omega$ .

Terminals	Resistance
1 and 2	Approx. 532 - 588 kΩ [at 20°C (68°F)]

## **CAUTION:**

Never use any knock sensors that have been dropped or physically damaged. Use only new ones.

## Is the inspection result normal?

YES	>> INSPECTION END
1 - 0	

NO >> Replace malfunctioning knock sensor.

EC

Α

С

D

F

Е

Н

J

Κ

L

M

Ν

0

Р

# P0335 CKP SENSOR (POS)

**Description** 

The crankshaft position sensor (POS) is located on the oil pan facing the gear teeth (cogs) of the signal plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet and Hall IC.


When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.


The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

ECM receives the signals as shown in the figure.

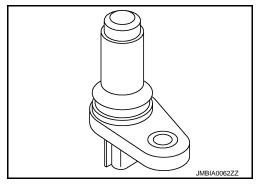

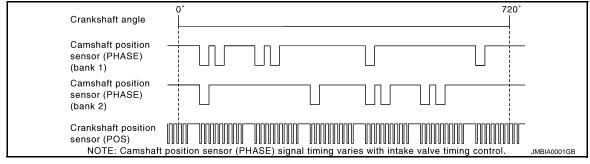

DTC Logic

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	e diagnosis name DTC detecting condition Possible cau	
P0335	Crankshaft position sensor (POS) circuit	<ul> <li>The crankshaft position sensor (POS) signal is not detected by the ECM during the first few seconds of engine cranking.</li> <li>The proper pulse signal from the crankshaft position sensor (POS) is not sent to ECM while the engine is running.</li> <li>The crankshaft position sensor (POS) signal is not in the normal pattern during engine running.</li> </ul>	Harness or connectors [CKP sensor (POS) circuit is open or shorted.] (APP sensor 2 circuit is shorted.) (EVAP control system pressure sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.)      Crankshaft position sensor (POS)     Accelerator pedal position sensor     EVAP control system pressure sensor     Refrigerant pressure sensor     Signal plate

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10.5 V with ignition switch ON.

>> GO TO 2.

## P0335 CKP SENSOR (POS)

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# 2.perform dtc confirmation procedure

Start engine and let it idle for at least 5 seconds. If engine does not start, crank engine for at least 2 seconds.

Check 1st trip DTC.

## Is 1st trip DTC detected?

YES >> Go to EC-255, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536655

EC

D

Е

F

Н

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.check crankshaft position (ckp) sensor (pos) power supply circuit-i

- Disconnect crankshaft position (CKP) sensor (POS) harness connector.
- Turn ignition switch ON. 2.
- Check the voltage between CKP sensor (POS) harness connector and ground.

CKP sensor (POS)		Ground	Voltage (V)	
Connector	Terminal	Ground	voltage (v)	
F20	1	Ground	Approx. 5	

### Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

# 3.check crankshaft position (ckp) sensor (pos) power supply circuit-ii

- Turn ignition switch ON.
- 2. Disconnect ECM harness connector.
- Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

CKP sensor (POS)		ECM		Continuity	
Connector	Terminal	Connector Terminal		Continuity	
F20	1	F8	76	Existed	

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit.

## 4. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

EC	CM	Sensor		
Connector	Terminal	Name	Connector	Terminal
F8 72 Refrigerant pressure sensor 76 CKP sensor (POS)		Refrigerant pressure sensor	E300	1
		CKP sensor (POS)	F20	1
E16	87	APP sensor	E110	5
	91	EVAP control system pressure sensor	B17	3

## Is the inspection result normal?

YES >> GO TO 5.

Revision: 2009 September

**EC-255** 

2010 Murano

Ν

Р

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

NO >> Repair short to ground or short to power in harness or connectors.

# CHECK COMPONENTS

Check the following.

- EVAP control system pressure sensor (Refer to <u>EC-296, "Component Inspection"</u>.)
- Refrigerant pressure sensor (Refer to EC-457, "Diagnosis Procedure".)

### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

## 6.CHECK APP SENSOR

Refer to EC-409, "Component Inspection".

## Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 7.

# 7. REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- 2. Refer to EC-409, "Special Repair Requirement".

### >> INSPECTION END

# 8.CHECK CKP SENSOR (POS) GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

CKP sensor (POS)		E	Continuity		
Connector	Terminal	Connector Terminal		Continuity	
F20	2	F8	60	Existed	

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# ${f 9.}$ CHECK CKP SENSOR (POS) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

CKP sen	sor (POS)	E	Continuity		
Connector	Terminal	Connector Terminal		Continuity	
F20	3	F8	65	Existed	

2. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 10.CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to EC-257, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace crankshaft position sensor (POS).

# 11. CHECK GEAR TOOTH

Visually check for chipping signal plate gear tooth.

## Is the inspection result normal?

# P0335 CKP SENSOR (POS)

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

INFOID:0000000005536656

YES >> GO TO 12.

NO >> Replace the signal plate.

# 12. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

EC

Α

D

#### >> INSPECTION END

# Component Inspection


# 1. CHECK CRANKSHAFT POSITION SENSOR (POS)-I

- 1. Loosen the fixing bolt of the sensor.
- Disconnect crankshaft position sensor (POS) harness connector.
- 3. Remove the sensor.
- 4. Visually check the sensor for chipping.

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace crankshaft position sensor (POS)

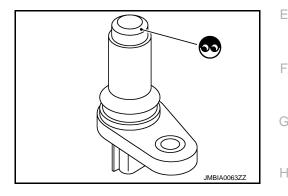

# $2. \hbox{CHECK CRANKSHAFT POSITION SENSOR (POS)-II}$

Check resistance crankshaft position sensor (POS) terminals as per the following.

Terminal No. (Polarity)	Resistance
1 (+) - 2 (-)	
1 (+) - 3 (-)	Except 0 or ∞ Ω [at 25°C (77°F)]
2 (+) - 3 (-)	

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace crankshaft position sensor (POS)

K

M

Ν

O

Р

# P0340, P0345 CMP SENSOR (PHASE)

**Description** 

The camshaft position sensor (PHASE) senses the protrusion of camshaft (INT) to identify a particular cylinder. The camshaft position sensor (PHASE) senses the piston position.

When the crankshaft position sensor (POS) system becomes inoperative, the camshaft position sensor (PHASE) provides various controls of engine parts instead, utilizing timing of cylinder identification signals.


The sensor consists of a permanent magnet and Hall IC.


When engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

ECM receives the signals as shown in the figure.

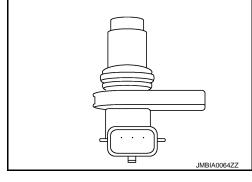

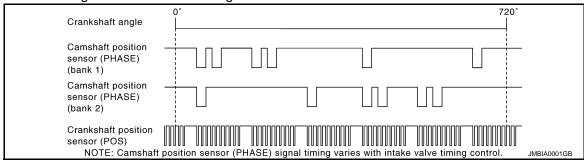

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

If DTC P0340 or P0345 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-343, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0340	Camshaft position sensor (PHASE) (bank 1) circuit	The cylinder No. signal is not sent to ECM for the first few seconds during engine cranking.	Harness or connectors     (The sensor circuit is open or shorted)     Camshaft position sensor (PHASE)
P0345	Camshaft position sensor (PHASE) (bank 2) circuit	<ul> <li>The cylinder No. signal is not sent to ECM during engine running.</li> <li>The cylinder No. signal is not in the normal pattern during engine running.</li> </ul>	Camshaft (INT) Starter motor (Refer to STR-5, "System Description".) Starting system circuit (Refer to STR-5, "System Description".) Dead (Weak) battery

## DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10.5 V with ignition switch ON.

>> GO TO 2.

## P0340, P0345 CMP SENSOR (PHASE)

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

INFOID:0000000005536659

EC

D

Е

Н

N

# 2.perform dtc confirmation procedure-i

Start engine and let it idle for at least 5 seconds. If engine does not start, crank engine for at least 2 seconds.

2. Check 1st trip DTC.

## Is 1st trip DTC detected?

>> Go to EC-259, "Diagnosis Procedure".

NO >> GO TO 3.

# 3.PERFORM DTC CONFIRMATION PROCEDURE-I

Maintaining engine speed at more than 800 rpm for at least 5 seconds.

Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-259, "Diagnosis Procedure".

>> INSPECTION END NO

# Diagnosis Procedure

1. CHECK STARTING SYSTEM

Does the engine turn over? Does the starter motor operate?

YES >> GO TO 2.

NO >> Check starting system. (Refer to <u>STR-2, "Work Flow"</u>.)

# 2.CHECK GROUND CONNECTION

Turn ignition switch to START position.

Turn ignition switch OFF.

Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace ground connection.

# 3.CHECK CAMSHAFT POSITION (CMP) SENSOR (PHASE) POWER SUPPLY CIRCUIT

- Disconnect camshaft position (CMP) sensor (PHASE) harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between CMP sensor (PHASE) harness connector and ground.

DTC	CMF	CMP sensor (PHASE)			Voltage (V)
DIC			Terminal	Ground	voltage (v)
P0340	1	F26	1	Ground	Approx. 5
P0345	2	F69	1	Ground	

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 4.CHECK CMP SENSOR (PHASE) GROUND CIRCUIT FOR OPEN AND SHORT

Turn ignition switch OFF.

Revision: 2009 September

- 2. Disconnect ECM harness connector.
- Check the continuity between CMP sensor (PHASE) harness connector and ECM harness connector.

DTC	CMP sensor (PHASE)		ECM		Continuity	
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0340	1	F26	2	F8	64	Existed
P0345	2	F69	2	10	68	LXISIEU

Also check harness for short to ground and short to power.

**EC-259** 

### < DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 5.CHECK CMP SENSOR (PHASE) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between CMP sensor (PHASE) harness connector and ECM harness connector.

DTC	CMP sensor (PHASE)			ECM		Continuity
ыс	Bank	Connector	Terminal	Connector	Terminal	Continuity
P0340	1	F26	3	F8	70	Existed
P0345	2	F69	3	1.0	69	LAISIEU

2. Also check harness for short to ground and short to power.

# Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# **6.**CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to EC-260, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace malfunctioning camshaft position sensor (PHASE).

# 7.CHECK CAMSHAFT (INT)


Check the following.

- Accumulation of debris to the signal plate of camshaft rear end
- · Chipping signal plate of camshaft rear end

### Is the inspection result normal?

YES >> GO TO 8.

NO >> Remove debris and clean the signal plate of camshaft rear end or replace camshaft.

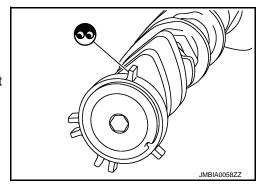

# 8. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

## >> INSPECTION END

# Component Inspection

INFOID:0000000005536660

# 1. CHECK CAMSHAFT POSITION SENSOR (PHASE)-I

- 1. Turn ignition switch OFF.
- 2. Loosen the fixing bolt of the sensor.
- 3. Disconnect camshaft position sensor (PHASE) harness connector.
- 4. Remove the sensor.

# P0340, P0345 CMP SENSOR (PHASE)

## < DTC/CIRCUIT DIAGNOSIS >


[VQ35DE]

5. Visually check the sensor for chipping.

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace malfunctioning camshaft position sensor (PHASE).

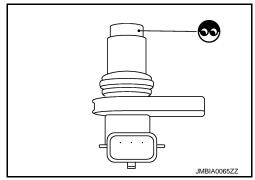

# $2. \hbox{CHECK CAMSHAFT POSITION SENSOR (PHASE)-II}$

Check resistance camshaft position sensor (PHASE) terminals as per the following.

Terminal No. (Polarity)	Resistance
1 (+) - 2 (-)	
1 (+) - 3 (-)	Except 0 or ∞ Ω [at 25°C (77°F)]
2 (+) - 3 (-)	

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace malfunctioning camshaft position sensor (PHASE).

Α

EC

С

D

Е

F

Н

1

K

L

M

Ν

0

Р

[VQ35DE]

# P0420, P0430 THREE WAY CATALYST FUNCTION


DTC Logic

#### DTC DETECTION LOGIC

The ECM monitors the switching frequency ratio of air fuel ratio (A/F) sensor 1 and heated oxygen sensor 2.

A three way catalyst (manifold) with high oxygen storage capacity will indicate a low switching frequency of heated oxygen sensor 2. As oxygen storage capacity decreases, the heated oxygen sensor 2 switching frequency will increase.

When the frequency ratio of A/F sensor 1 and heated oxygen sensor 2 approaches a specified limit value, the three way catalyst (manifold) malfunction is diagnosed.

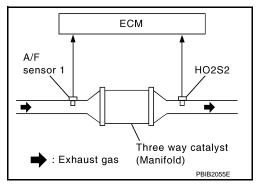

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0420	Catalyst system efficiency below threshold (bank 1)	Three way catalyst (manifold) does not operate properly.	Intake air leakage
P0430	Catalyst system efficien- cy below threshold (bank 2)	TI	<ul><li>Fuel injector</li><li>Fuel injector leakage</li><li>Spark plug</li><li>Improper ignition timing</li></ul>

## DTC CONFIRMATION PROCEDURE

# 1. INSPECTION START

Will CONSULT-III be used?

## Will CONSULT-III be used?

YES >> GO TO 2.

NO >> GO TO 7.

# 2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Do not maintain engine speed for more than the specified minutes below.

>> GO TO 3.

# 3.perform dtc confirmation procedure-i

#### (P)With CONSULT-III

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III.
- 2. Start engine and warm it up to the normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Turn ignition switch OFF and wait at least 10 seconds.
- 6. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 8. Check that "COOLAN TEMP/S" indicates more than 70°C (158°F).

  If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).
- Open engine hood.
- Select "DTC & SRT CONFIRMATION" then "SRT WORK SUPPORT" mode with CONSULT-III.

## P0420, P0430 THREE WAY CATALYST FUNCTION

[VQ35DE] < DTC/CIRCUIT DIAGNOSIS > 11. Rev engine between 2,000 and 3,000 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely. Α 12. Check the indication of "CATALYST". Which is displayed on CONSULT-III screen? CMPLT>> GO TO 6. EC INCMP >> GO TO 4. 4.PERFORM DTC CONFIRMATION PROCEDURE-II Wait 5 seconds at idle. Rev engine between 2,000 and 3,000 rpm and maintain it until "INCMP" of "CATALYST" changes to "CMPLT" (It will take approximately 5 minutes). D Does the indication change to "CMPLT"? YES >> GO TO 6. NO >> GO TO 5. Е  ${f 5}$  .PERFORM DTC CONFIRMATION PROCEDURE AGAIN Stop engine and cool it down to less than 70°C (158°F). Perform DTC CONFIRMATION PROCEDURE again. F >> GO TO 3. **6.**PERFORM DTC CONFIRMATION PROCEDURE-III Check 1st trip DTC. Is 1st trip DTC detected? Н YES >> Go to EC-264, "Diagnosis Procedure". NO >> INSPECTION END 7.PERFORM COMPONENT FUNCTION CHECK Perform component function check. Refer to EC-263, "Component Function Check". NOTE: Use component function check to check the overall function of the three way catalyst (manifold). During this check, a 1st trip DTC might not be confirmed. Is the inspection result normal? YES >> INSPECTION END K NO >> Go to EC-264, "Diagnosis Procedure". Component Function Check INFOID:0000000005536662  ${f 1}$  .PERFORM COMPONENT FUNCTION CHECK Without CONSULT-III M Start engine and warm it up to the normal operating temperature. Turn ignition switch OFF and wait at least 10 seconds. 3. Turn ignition switch ON. 4. Turn ignition switch OFF and wait at least 10 seconds. Ν 5. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load. 6. Let engine idle for 1 minute. Open engine hood. 7. Check the voltage between ECM harness connector terminals under the following conditions. Р

INFOID:0000000005536663

	ECM				
DTC	Connec-	+	_	Condition	Voltage (V)
	tor	Terminal	Terminal		
P0420	Eo	33 [HO2S2 (bank 1) signal]	35 (Sensor	Keeping engine speed at 2,500 rpm	The voltage fluctuation cycle takes more than 5 seconds.
P0430	- F8	34 [HO2S2 (bank 2) signal]	ground)	constant under no load	• 1 cycle: 0.6 - 1.0 → 0 - 0.3 → 0.6 - 1.0

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-264, "Diagnosis Procedure".

# Diagnosis Procedure

# 1. CHECK EXHAUST SYSTEM

Visually check exhaust tubes and muffler for dents.


#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning part.

# 2. CHECK EXHAUST GAS LEAKAGE

- 1. Start engine and run it at idle.
- Listen for an exhaust gas leakage before the three way catalyst (manifold).

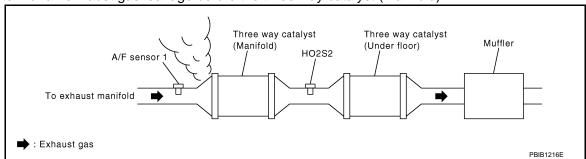

#### Is exhaust gas leakage detected?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 3.

# 3.CHECK INTAKE AIR LEAKAGE

Listen for an intake air leakage after the mass air flow sensor.

## Is intake air leakage detected?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 4.

# 4. CHECK IGNITION TIMING

Check idle speed and ignition timing.

For procedure, refer to EC-13, "BASIC INSPECTION: Special Repair Requirement".

For specification, refer to EC-536, "Idle Speed" and EC-536, "Ignition Timing".

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Follow the EC-13, "BASIC INSPECTION: Special Repair Requirement".

# CHECK FUEL INJECTORS

- 1. Stop engine and then turn ignition switch ON.
- Check the voltage between ECM harness connector terminals.

## P0420, P0430 THREE WAY CATALYST FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

Е

Н

	+ -			
Connector	Terminal	Connector Terminal		
	1	E16		Battery voltage
	3		112	
F7	29			
Γ/	30			
	31			
	32			

Is the inspection result normal?

YES >> GO TO 6.

NO >> Perform <u>EC-438</u>, "<u>Diagnosis Procedure</u>".

6.CHECK FUNCTION OF IGNITION COIL-I

#### **CAUTION:**

Perform the following procedure in a place with no combustible objects and good ventilation.

- 1. Turn ignition switch OFF.
- 2. Remove fuel pump fuse in IPDM E/R to release fuel pressure.

#### NOTE:

Do not use CONSULT-III to release fuel pressure, or fuel pressure applies again during the following procedure.

- 3. Start engine.
- 4. After engine stalls, crank it 2 or 3 times to release all fuel pressure.
- 5. Turn ignition switch OFF.
- 6. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- 7. Remove ignition coil and spark plug of the cylinder to be checked.
- Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 9. Connect spark plug and harness connector to ignition coil.
- 10. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 11. Crank engine for approximately 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

#### **CAUTION:**

- During the operation, always stay 0.5 m (19.7 in) or more away from the spark plug and the ignition coil. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken. NOTE:

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

## Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 7.

7.check function of ignition coil-ii

- 1. Turn ignition switch OFF.
- Disconnect spark plug and connect a known-good spark plug.
- 3. Crank engine for approximately 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

13 - 17 mm (0.52-0.66 in) Grounded metal portion (Cylinder head, cylinder block, etc.)

Ν

M

0

Р

[VQ35DE]

#### Spark should be generated.

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> Check ignition coil, power transistor and their circuit. Refer to <a href="EC-445">EC-445</a>, "Diagnosis Procedure".


# 8.CHECK SPARK PLUG

Check the initial spark plug for fouling, etc.

### Is the inspection result normal?

YES >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to MA-39. "SPARK PLUG: Spark

NO >> Repair or clean spark plug. Then GO TO 9.

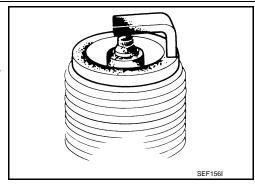

# 9. CHECK FUNCTION OF IGNITION COIL-III

- Reconnect the initial spark plugs.
- Crank engine for approximately 3 seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

## Spark should be generated.

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to MA-39, "SPARK PLUG: Spark Plug".

# 10. CHECK FUEL INJECTOR

- 1. Turn ignition switch OFF.
- Remove fuel injector assembly.

Refer to EM-49, "Exploded View".

Keep fuel hose and all fuel injectors connected to fuel tube.

- 3. Disconnect all ignition coil harness connectors.
- Reconnect all fuel injector harness connectors disconnected.
- Turn ignition switch ON.
- 6. Check that the fuel does not drip from fuel injector.

#### Does fuel drip from fuel injector?

YES >> Replace the fuel injector(s) from which fuel is dripping.

NO >> GO TO 11.

# 11. CHECK INTERMITTENT INCIDENT

## Refer to GI-39, "Intermittent Incident".

### Is the inspection result normal?

YES >> Replace three way catalyst assembly.

NO >> Repair or replace harness or connector.

[VQ35DE]

Α

EC

D

Е

F

Ν

Р

# P0441 EVAP CONTROL SYSTEM

DTC Logic


#### DTC DETECTION LOGIC

#### NOTE:

If DTC P0441 is displayed with other DTC such as P2122, P2123, P2127, P2128 or P2138, first perform trouble diagnosis for other DTC.

In this evaporative emission (EVAP) control system, purge flow occurs during non-closed throttle conditions. Purge volume is related to air intake volume. Under normal purge conditions (non-closed throttle), the EVAP canister purge volume control solenoid valve is open to admit purge flow. Purge flow exposes the EVAP control system pressure sensor to intake manifold vacuum.

Under normal conditions (non-closed throttle), sensor output voltage indicates if pressure drop and purge flow are adequate. If not, a malfunction is determined.

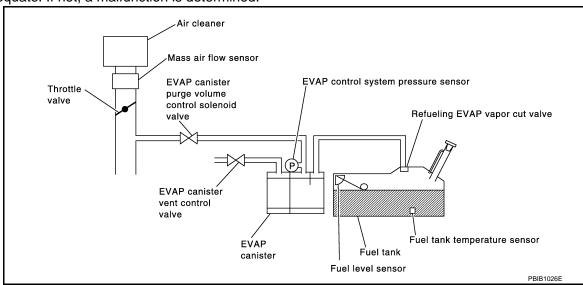

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0441	EVAP control system incorrect purge flow	EVAP control system does not operate properly, EVAP control system has a leakage between intake manifold and EVAP control system pressure sensor.	<ul> <li>EVAP canister purge volume control solenoid valve stuck closed</li> <li>EVAP control system pressure sensor and the circuit</li> <li>Loose, disconnected or improper connection of rubber tube</li> <li>Blocked rubber tube</li> <li>Cracked EVAP canister</li> <li>EVAP canister purge volume control solenoid valve circuit</li> <li>Accelerator pedal position sensor</li> <li>Blocked purge port</li> <li>EVAP canister vent control valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

# 1.INSPECTION START

Will CONSULT-III be used?

Will CONSULT-III be used?

YES >> GO TO 2.

NO >> GO TO 6.

# 2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

1. Turn ignition switch OFF and wait at least 10 seconds.

Revision: 2009 September EC-267 2010 Murano

2. Turn ignition switch ON.

Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 3.

# 3. PERFORM DTC CONFIRMATION PROCEDURE-I

### (P)With CONSULT-III

- Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and let it idle for at least 70 seconds.
- Select "PURG FLOW P0441" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CON-SULT-III.
- 7. Touch "START".

### Is "COMPLETED" displayed on CONSULT-III screen?

YES >> GO TO 5. NO >> GO TO 4.

# f 4.PERFORM DTC CONFIRMATION PROCEDURE-II

When the following conditions are met, "TESTING" will be displayed on the CONSULT-III screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 35 seconds.)

Selector lever	Suitable position
VHCL SPEED SE	32 - 120 km/h (20 - 75 mph)
ENG SPEED	500 - 3,000 rpm
B/FUEL SCHDL	1.3 - 9.0 msec
COOLAN TEMP/S	More than 0°C (32°F)

#### **CAUTION:**

#### Always drive vehicle at a safe speed.

If "TESTING" does not change for a long time, retry from step 2.

#### Is "COMPLETED" displayed on CONSULT-III screen?

YES >> GO TO 5.

NO >> Perform DTC CONFIRMATION PROCEDURE again. GO TO 3.

# 5. PERFORM DTC CONFIRMATION PROCEDURE-III

Touch "SELF-DIAG RESULTS".

#### Which is displayed on CONSULT-III screen?

OK >> INSPECTION END

NG >> Go to EC-269, "Diagnosis Procedure".

### 6.PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-268, "Component Function Check".

#### NOTE:

Use component function check to check the overall monitoring function of the EVAP control system purge flow monitoring. During this check, a 1st trip DTC might not be confirmed.

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-269, "Diagnosis Procedure".

# Component Function Check

# 1.PERFORM COMPONENT FUNCTION CHECK

## Without CONSULT-III

Revision: 2009 September EC-268 2010 Murano

INFOID:0000000005536665

[VQ35DE]

1	Lift	นท	drive	wheel	s
		up	uiiv C	WILCO	·

- Start engine (VDC switch OFF) and warm it up to normal operating temperature.
- Turn ignition switch OFF, wait at least 10 seconds.
- Turn ignition switch ON.

< DTC/CIRCUIT DIAGNOSIS >

- 5. Turn ignition switch OFF, wait at least 10 seconds.
- 6. Start engine and wait at least 70 seconds.
- Set voltmeter probes to ECM harness connector terminals under the following conditions.

	ECM	
Connector	+	-
Connector	Terminal	Terminal
E16	86 (EVAP control system pressure sensor signal)	96 (Sensor ground)

- 8. Check EVAP control system pressure sensor value at idle speed and note it.
- 9. Establish and maintain the following conditions for at least 1 minute.

Air conditioner switch	ON
Head lamp switch	ON
Rear window defogger switch	ON
Engine speed	Approx. 3,000 rpm
Gear position	Any position other than P, N or R

10. Verify that EVAP control system pressure sensor value stays 0.1 V less than the value at idle speed (measured at step 6) for at least 1 second.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-269, "Diagnosis Procedure".

# Diagnosis Procedure

# 1. CHECK EVAP CANISTER

- Turn ignition switch OFF.
- Check EVAP canister for cracks.

## Is the inspection result normal?

YES-1 >> With CONSULT-III: GO TO 2.

YES-2 >> Without CONSULT-III: GO TO 3.

NO >> Replace EVAP canister.

# 2.CHECK PURGE FLOW

#### (P)With CONSULT-III

- 1. Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. For the location of EVAP service port, refer to EC-77, "System Diagram".
- Start engine and let it idle.
- Select "PURG VOL C/V" in "ACTIVE TEST" mode with CONSULT-III.
- 4. Touch "Qd" and "Qu" on CONSULT-III screen to adjust "PURG VOL C/V" opening and check vacuum existence.

PURG VOL C/V	Vacuum
100%	Existed
0%	Not existed

## Is the inspection result normal?

YES >> GO TO 7.

>> GO TO 4. NO

EC

[VQ35DE]

Α

D

Е

F

INFOID:0000000005536666

K

M

Ν

Р

# 3. CHECK PURGE FLOW

### **⋈** Without CONSULT-III

- 1. Start engine and warm it up to normal operating temperature.
- Stop engine.
- Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. For the location of EVAP service port, refer to <a href="EC-77">EC-77</a>, "System Diagram".
- 4. Start engine and let it idle.

## Do not depress accelerator pedal even slightly.

5. Check vacuum gauge indication before 60 seconds pass after starting engine.

## Vacuum should not exist.

6. Rev engine up to 2,000 rpm after 100 seconds pass after starting engine.

#### Vacuum should exist.

#### Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 4.

# 4. CHECK EVAP PURGE LINE

- Turn ignition switch OFF.
- 2. Check EVAP purge line for improper connection or disconnection. Refer to <u>EC-77</u>, "System Diagram".


## Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair EVAP purge line.

## 5. CHECK EVAP PURGE HOSE AND PURGE PORT

- Disconnect purge hoses connected to EVAP service port A and EVAP canister purge volume control solenoid valve B.
- 2. Blow air into each hose and EVAP purge port C.

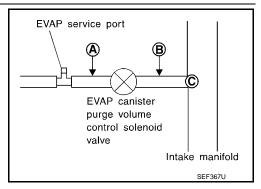


3. Check that air flows freely.

#### Is the inspection result normal?

YES-1 >> With CONSULT-III: GO TO 6.

YES-2 >> Without CONSULT-III: GO TO 7.

NO >> Repair or clean hoses and/or purge port.

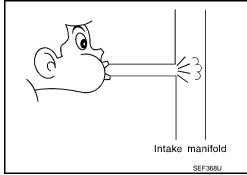

# 6. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

#### (P)With CONSULT-III

- Start engine.
- Perform "PURG VOL C/V" in "ACTIVE TEST" mode with CONSULT-III. Check that engine speed varies according to the valve opening.

P0441 EVAP CONTROL SYSTEM	[VO2EDE]
< DTC/CIRCUIT DIAGNOSIS >	[VQ35DE]
Does engine speed vary according to the valve opening?	А
YES >> GO TO 8. NO >> GO TO 7.	^
7.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	EC
Refer to EC-282, "Component Inspection".	
Is the inspection result normal?	
YES >> GO TO 8.  NO >> Replace EVAP canister purge volume control solenoid valve.	С
8. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR	
Disconnect EVAP control system pressure sensor harness connector.	D
Check that water is not inside connectors.	
Is the inspection result normal?	E
YES >> GO TO 9.  NO >> Replace EVAP control system pressure sensor.	L
9. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION	
Refer to EC-297, "DTC Logic" for DTC P0452, EC-302, "DTC Logic" for DTC P0453.	F
Is the inspection result normal?	
YES >> GO TO 10.	G
NO >> Replace EVAP control system pressure sensor.	
10.CHECK RUBBER TUBE FOR CLOGGING	— н
<ol> <li>Disconnect rubber tube connected to EVAP canister vent control valve.</li> <li>Check the rubber tube for clogging.</li> </ol>	11
Is the inspection result normal?	1
YES >> GO TO 11.  NO >> Clean the rubber tube using an air blower.	1
NO >> Clean the rubber tube using an air blower.  11.CHECK EVAP CANISTER VENT CONTROL VALVE	
	J
Refer to <u>EC-288, "Component Inspection"</u> .  Is the inspection result normal?	
YES >> GO TO 12.	K
NO >> Replace EVAP canister vent control valve.	
12.CHECK EVAP PURGE LINE	I
Inspect EVAP purge line (pipe and rubber tube). Check for evidence of leakage. Refer to EC-77, "System Diagram".	
Is the inspection result normal?	M
YES >> GO TO 13.	
NO >> Repair EVAP purge line.  13. CLEAN EVAP PURGE LINE	
	N
Clean EVAP purge line (pipe and rubber tube) using air blower.	
>> GO TO 14.	0
14. CHECK INTERMITTENT INCIDENT	
Refer to GI-39, "Intermittent Incident".	Р
>> INSPECTION END	

Revision: 2009 September EC-271 2010 Murano


DTC Logic

#### DTC DETECTION LOGIC

This diagnosis detects leakage in the EVAP purge line using engine intake manifold vacuum.

If pressure does not increase, the ECM will check for leakage in the line between the fuel tank and EVAP canister purge volume control solenoid valve, under the following "Vacuum test" conditions.

The EVAP canister vent control valve is closed to shut the EVAP purge line off. The EVAP canister purge volume control solenoid valve will then be opened to depressurize the EVAP purge line using intake manifold vacuum. After this occurs, the EVAP canister purge volume control solenoid valve will be closed.

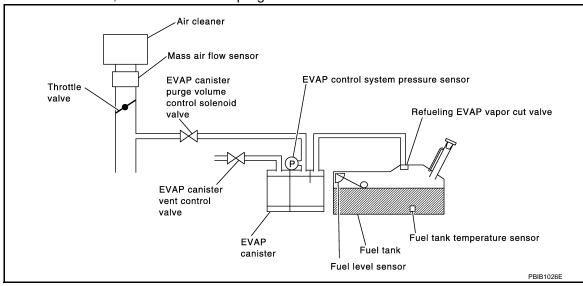

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0442	EVAP control system small leakage detected (negative pressure)	EVAP control system has a leakage, EVAP control system does not operate properly.	Incorrect fuel tank vacuum relief valve Incorrect fuel filler cap used Fuel filler cap remains open or does not close. Foreign matter caught in fuel filler cap. Leakage is in line between intake manifold and EVAP canister purge volume control solenoid valve. Foreign matter caught in EVAP canister vent control valve. EVAP canister or fuel tank leakage EVAP purge line (pipe and rubber tube) leakage EVAP purge line rubber tube bent Loose or disconnected rubber tube EVAP canister vent control valve and the circuit EVAP canister purge volume control solenoid valve and the circuit Fuel tank temperature sensor O-ring of EVAP canister vent control valve is missing or damaged EVAP canister is saturated with water EVAP control system pressure sensor Fuel level sensor and the circuit Refueling EVAP vapor cut valve ORVR system leakage

### **CAUTION:**

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may illuminate.
- If the fuel filler cap is not tightened properly, the MIL may illuminate.
- Use only a genuine NISSAN rubber tube as a replacement.

### DTC CONFIRMATION PROCEDURE

[VQ35DE1 < DTC/CIRCUIT DIAGNOSIS > 1.PRECONDITIONING Α If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test. Turn ignition switch OFF and wait at least 10 seconds. EC Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds. **TESTING CONDITION:** • Perform "DTC WORK SUPPORT" when the fuel level is between 1/4 and 3/4 full, and vehicle is placed on flat level surface. Always perform test at a temperature of 0 to 30°C (32 to 86°F). D Check that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly. Will CONSULT-III be used? YES >> GO TO 2. Е NO >> GO TO 3. 2 Perform DTC Confirmation procedure (P)With CONSULT-III 1. Turn ignition switch ON. 2. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III. 4. Check that the following conditions are met. COOLAN TEMP/S: 0 - 70°C (32 - 158°F) INT/A TEMP SE: 0 - 30°C (32 - 86°F) 5. Select "EVP SML LEAK P0442/P1442" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-III. Follow the instructions displayed. NOTE: If the engine speed cannot be maintained within the range displayed on the CONSULT-III screen, go to EC-13, "BASIC INSPECTION: Special Repair Requirement". Which is displayed on CONSULT-III screen? OK >> INSPECTION END NG >> Go to EC-273, "Diagnosis Procedure". 3.perform component function check K With GST NOTE: Be sure to read the explanation of DRIVING PATTERN in EC-501, "How to Set SRT Code" before driving vehicle. 1. Start engine. Drive vehicle according to DRIVING PATTERN. M Stop vehicle. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. N Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. Check 1st trip DTC. Is 1st trip DTC displayed? YES-1 >> P0441: Go to EC-269, "Diagnosis Procedure". YES-2 >> P0442: Go to EC-273, "Diagnosis Procedure". >> INSPECTION END Diagnosis Procedure INFOID:0000000005536668

# CHECK FUEL FILLER CAP DESIGN

1. Turn ignition switch OFF.

**EC-273** Revision: 2009 September 2010 Murano

### < DTC/CIRCUIT DIAGNOSIS >


[VQ35DE]

2. Check for genuine NISSAN fuel filler cap design.

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace with genuine NISSAN fuel filler cap.

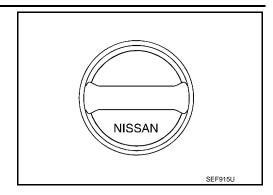

# 2. CHECK FUEL FILLER CAP INSTALLATION

Check that the cap is tightened properly by rotating the cap clockwise.

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. Retighten until ratcheting sound is heard.

# 3. CHECK FUEL FILLER CAP FUNCTION

Check for air releasing sound while opening the fuel filler cap.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

## 4. CHECK FUEL TANK VACUUM RELIEF VALVE

Refer to EC-277, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace fuel filler cap with a genuine one.

## 5. CHECK FOR EVAP LEAKAGE

Refer to EC-532, "Inspection".

## Is there any leakage in EVAP line?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 6.

## 6.CHECK EVAP CANISTER VENT CONTROL VALVE

#### Check the following.

• EVAP canister vent control valve is installed properly.

Refer to EC-534, "Removal and Installation".

EVAP canister vent control valve.

Refer to EC-288, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace EVAP canister vent control valve and O-ring.

# 7.CHECK IF EVAP CANISTER IS SATURATED WITH WATER

#### < DTC/CIRCUIT DIAGNOSIS >


[VQ35DE]

Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

Does water drain from the EVAP canister?

YES >> GO TO 8.

NO-1 >> With CONSULT-III: GO TO 10. NO-2 >> Without CONSULT-III: GO TO 11.

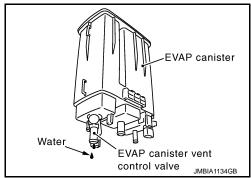

# 8. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 2.1 kg (4.6 lb).

Is the inspection result normal?

YES-1 >> With CONSULT-III: GO TO 10.

YES-2 >> Without CONSULT-III: GO TO 11.

NO >> GO TO 9.

## 9. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister.

# 10.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

(P) With CONSULT-III

- 1. Disconnect vacuum hose from EVAP canister purge volume control solenoid valve at EVAP service port.
- 2. Start engine.
- 3. Perform "PURG VOL C/V" in "ACTIVE TEST" mode.
- 4. Touch "Qu" on CONSULT-III screen to increase "PURG VOL C/V" opening to 100%.
- 5. Check vacuum hose for vacuum.

#### Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

# 11. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

#### Without CONSULT-III

- 1. Start engine and warm it up to normal operating temperature.
- 2. Stop engine.
- 3. Disconnect vacuum hose from EVAP canister purge volume control solenoid valve at EVAP service port.
- 4. Start engine and let it idle for at least 80 seconds.
- 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.

#### Vacuum should exist.

## Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

# 12. CHECK VACUUM HOSE

Check vacuum hoses for clogging or disconnection. Refer to <a href="EC-77">EC-77</a>, "System Diagram". Is the inspection result normal?

Α

EC

Е

D

F

Н

- 1

K

M

Ν

0

Р

Revision: 2009 September EC-275 2010 Murano

# < DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 13.

NO >> Repair or reconnect the hose.

# 13. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-282, "Component Inspection".

## Is the inspection result normal?

YES >> GO TO 14.

NO >> Replace EVAP canister purge volume control solenoid valve.

# 14. CHECK FUEL TANK TEMPERATURE SENSOR

Refer to EC-232. "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace fuel level sensor unit and fuel pump.

# 15. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-296, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 16.

>> Replace EVAP control system pressure sensor. NO

# 16.CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to EC-77, "System Diagram".

#### Is the inspection result normal?

YES >> GO TO 17.

>> Repair or reconnect the hose.

# 17. CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.

>> GO TO 18.

# 18. CHECK EVAP/ORVR LINE

Check EVAP/ORVR line between EVAP canister and fuel tank for clogging, kinks, looseness and improper connection. For location, refer to EC-451, "Description".

## Is the inspection result normal?

YES >> GO TO 19.

NO >> Repair or replace hoses and tubes.

# 19. CHECK RECIRCULATION LINE

Check recirculation line between filler neck tube and fuel tank for clogging, kinks, cracks, looseness and improper connection.

#### Is the inspection result normal?

YES >> GO TO 20.

NO >> Repair or replace hose, tube or filler neck tube.

# 20.CHECK REFUELING EVAP VAPOR CUT VALVE

### Refer to EC-454, "Component Inspection".

## Is the inspection result normal?

YES >> GO TO 21.

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

# 21. CHECK FUEL LEVEL SENSOR

#### Refer to MWI-46. "Component Inspection".

## Is the inspection result normal?

YES >> GO TO 22.

**EC-276** Revision: 2009 September 2010 Murano

[VQ35DE]

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

C

Е

F

NO >> Replace fuel level sensor unit and fuel pump.

# 22. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".


>> INSPECTION END

# Component Inspection

INFOID:0000000005536669

# 1. CHECK FUEL FILLER CAP

- Turn ignition switch OFF.
- 2. Remove fuel filler cap.
- 3. Wipe clean valve housing.

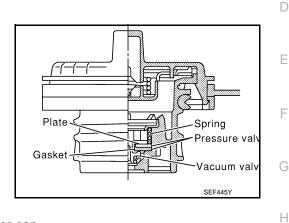

Install fuel filler cap adapter (commercial service tool) to fuel filler cap.

Check valve opening pressure and vacuum.

Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm<sup>2</sup>, 2.22 -

2.90 psi)

Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm<sup>2</sup>,

-0.87 to -0.48 psi)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# Vacuum/Pressure gauge Vacuum/ Fuel filler Pressure pump cap One-way valve $^{igstyle L}$ Fuel filler cap adapter SEF943S

# 2.replace fuel filler cap

Replace fuel filler cap.

**CAUTION:** 

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may illuminate.

>> INSPECTION END

Ν

K

Р

Revision: 2009 September


< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description INFOID:0000000005536670

The EVAP canister purge volume control solenoid valve is used to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

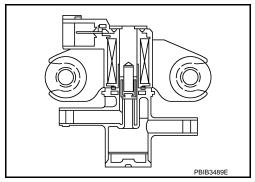

DTC Logic

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
P0443  EVAP canister purge volume control solenoid valve  Valve is completely closed.  The canister purge flow is detected during the specified driving conditions, even those services are purged flow in the specified driving conditions, even those services are purged in the specified driving conditions, even those services are purged in the specified driving conditions, even those services are purged in the specified driving conditions, even those services are purged in the specified driving conditions, even the specified driving conditions, even those services are purged in the specified driving conditions, even the specified driving conditions, even the specified driving conditions, even the specified driving conditions are purged in the specified driving conditions.	A	ing the cehicle is stopped while the engine is running, even when EVAP canister purge volume control solenoid	lenoid valve (The valve is stuck open.)	
	Hoses     (Hoses are connected incorrectly or			

### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

- Perform "DTC CONFIRMATION PROCEDURE" when the fuel level is between 1/4 and 3/4 full, and vehicle is placed on flat level surface.
- Always perform test at a temperature of 5 to 60°C (41 to 140°F).
- Cool the vehicle so that engine coolant temperature becomes same level as ambient temperature.

#### Do you have CONSULT-III

YES >> GO TO 2. NO >> GO TO 4.

# 2. PERFORM DTC CONFIRMATION PROCEDURE A

## (P)With CONSULT-III

- 1. Turn ignition switch ON.
- 2. Check that the following condition are met. FUEL T/TMP SE: 0 35°C (32 95°F)
- 3. Start enfine and wait at least 60 seconds.
- 4. Check 1st trip DTC.

## IS 1st trip DTC detected?

YES >> Go to EC-279, "Diagnosis Procedure".

NO >> GO TO 3.

Revision: 2009 September EC-278 2010 Murano

< DTC/CIRCUIT DIAGNOSIS > [VQ35DE]

# 3.perform dtc confirmation procedure b

#### (II) With CONSULT-III

1. Start engine and warm it up to normal operating temperature.

- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "PURG VOL CN/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-III.
- 7. Touch "START".
- 8. Start engine and let it idle until "TESTING" on CONSULT-III changes to "COMPLETED". (It will take approximately 10 seconds.)

If "TESTING" is not displayed after 5 minutes, retry from step 2.

9. Touch "SELF-DIAG RESULTS".

#### Which is displayed on CONSULT-III screen?

YES >> INSPECTION END

NO >> Go to EC-279, "Diagnosis Procedure".

# f 4.PERFORM DTC CONFIRMATION PROCEDURE A

### With GST

- 1. Turn ignition switch ON.
- Set voltmeter probes to ECM harness connector terminals.

Connector	+	_	Voltage (V)
Connector	Terminal	Terminal	
M107	95 (Fuel tank temperature sensor signal)	104 (Sensor ground)	3.1 - 4.0

- Start engine and wait at least 60 seconds.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-279. "Diagnosis Procedure".

NO >> GO TO 5.

# ${f 5}$ .PERFORM DTC CONFIRMATION PROCEDURE B

#### With GST

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and let it idle for at least 20 seconds.
- Check 1st trip DTC.

## Is 1st trip DTC displayed?

YES >> Go to EC-279, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

# 1.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.
- 3. Turn ignition switch ON.
- Check the voltage between EVAP canister purge volume control solenoid valve harness connector and ground.

EC

Е

F

Н

I

J

Κ

ľ

O

N

INFOID:0000000005536672

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

•	rge volume control id valve	Ground	Voltage	
Connector	Connector Terminal			
F30	F30 1		Battery voltage	

## Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

# 2.DETECT MALFUNCTIONING PART

### Check the following.

- Harness connectors F121, E7
- Harness for open or short between EVAP canister purge volume control solenoid valve and IPDM E/R
- Harness for open or short between EVAP canister purge volume control solenoid valve and ECM
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between EVAP canister purge volume control solenoid valve harness connector and ECM harness connector.

EVAP canister purge volume control solenoid valve		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F30	2	F7	25	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

- Disconnect EVAP control system pressure sensor harness connector.
- 2. Check that water is not inside connectors.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace EVAP control system pressure sensor.

# ${f 5.}$ CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-296, "Component Inspection".

#### Is the inspection result normal?

YES-1 >> With CONSULT-III: GO TO 6.

YES-2 >> Without CONSULT-III: GO TO 7.

NO >> Replace EVAP control system pressure sensor.

## **6.**CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

## (P)With CONSULT-III

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Start engine.
- 4. Perform "PURG VOL C/V" in "ACTIVE TEST" mode with CONSULT-III. Check that engine speed varies according to the valve opening.

#### Does engine speed vary according to the valve opening?

[VQ35DE] < DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 8. NO >> GO TO 7.

7.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-282, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace EVAP canister purge volume control solenoid valve.

8.CHECK RUBBER TUBE FOR CLOGGING

Disconnect rubber tube connected to EVAP canister vent control valve.

Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Clean the rubber tube using an air blower.

9.CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-288, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.


NO >> Replace EVAP canister vent control valve.

10.check if evap canister is saturated with water

Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

Does water drain from the EVAP canister?

YES >> GO TO 11. NO >> GO TO 13.

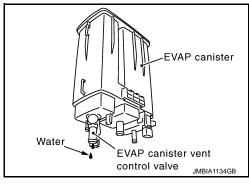

# 11. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

**EC-281** 

The weight should be less than 2.1 kg (4.6 lb).

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

12. DETECT MALFUNCTIONING PART

Check the following.

EVAP canister for damage

EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister.

13. CHECK INTERMITTENT INCIDENT

Refer to GI-39. "Intermittent Incident".

>> INSPECTION END

Е

Н

M

D

Α

EC

2010 Murano

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# Component Inspection


INFOID:0000000005536673

# 1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

### (P)With CONSULT-III

- 1. Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Turn ignition switch ON.
- 5. Select "PURG VOL C/V" in "ACTIVE TEST" mode with CONSULT-III.
- Touch "Qd" and "Qu" on CONSULT-III screen to adjust "PURG VOL C/V" opening and check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.


Condition (PURG VOL C/V value)	Air passage continuity between (A) and (B)
100%	Existed
0%	Not existed

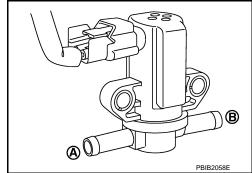

### **Without CONSULT-III**

- 1. Turn ignition switch OFF.
- 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals 1 and 2	Existed
No supply	Not existed

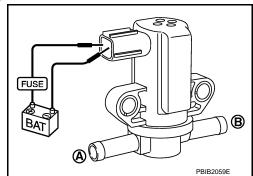

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister purge volume control solenoid valve

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC


D

Е

# P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description INFOID:0000000005536674

The EVAP canister purge volume control solenoid valve is used to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

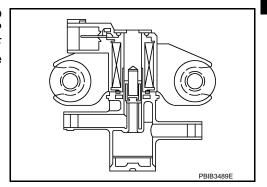

**DTC** Logic INFOID:0000000005536675

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
P0444	EVAP canister purge volume control solenoid valve circuit open	An excessively low voltage signal is sent to ECM through the valve	Harness or connectors     (The solenoid valve circuit is open or shorted.)     EVAP canister purge volume control solenoid valve	ŀ
P0445	EVAP canister purge volume control solenoid valve circuit shorted	An excessively high voltage signal is sent to ECM through the valve	Harness or connectors     (The solenoid valve circuit is shorted.)     EVAP canister purge volume control solenoid valve	ı

## DTC CONFIRMATION PROCEDURE

### 1.CONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for at least 13 seconds.
- Check 1st trip DTC.

## Is 1st trip DTC detected?

YES >> Go to EC-283, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

# 1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve harness connector.
- Turn ignition switch ON.

L

Ν

INFOID:0000000005536676

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

4. Check the voltage between EVAP canister purge volume control solenoid valve harness connector and ground.

	rge volume control id valve	Ground	Voltage	
Connector	Connector Terminal			
F30	1	Ground	Battery voltage	

#### Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

# 2.DETECT MALFUNCTIONING PART

#### Check the following.

- Harness connectors F121, E7
- Harness for open or short between EVAP canister purge volume control solenoid valve and IPDM E/R
- · Harness for open or short between EVAP canister purge volume control solenoid valve and ECM
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between EVAP canister purge volume control solenoid valve harness connector and ECM harness connector.

EVAP canister purge volume control solenoid valve		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F30	2	F7	25	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES-1 >> With CONSULT-III: GO TO 4.

YES-2 >> Without CONSULT-III: GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

4.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

### (P)With CONSULT-III

- 1. Reconnect all harness connectors disconnected.
- Start engine.
- 3. Perform "PURG VOL C/V" in "ACTIVE TEST" mode with CONSULT-III. Check that engine speed varies according to the valve opening.

## Does engine speed vary according to the valve opening?

YES >> GO TO 6.

NO >> GO TO 5.

# ${f 5.}$ CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

## Refer to EC-285, "Component Inspection".

## Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace EVAP canister purge volume control solenoid valve.

### 6.CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

# < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

>> INSPECTION END

# Component Inspection


INFOID:0000000005536677

# 1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

## (P)With CONSULT-III

- Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- Turn ignition switch ON.
- Select "PURG VOL C/V" in "ACTIVE TEST" mode with CONSULT-III.
- Touch "Qd" and "Qu" on CONSULT-III screen to adjust "PURG VOL C/V" opening and check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.


Condition (PURG VOL C/V value)	Air passage continuity between (A) and (B)
100%	Existed
0%	Not existed

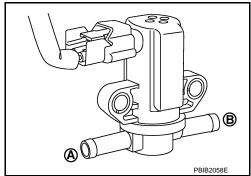

## Without CONSULT-III

- Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve harness connector.
- Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.


Condition	Air passage continuity between (A) and (B)		
12 V direct current supply between terminals 1 and 2	Existed		
No supply	Not existed		

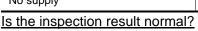

>> INSPECTION END

YES

NO >> Replace EVAP canister purge volume control solenoid valve

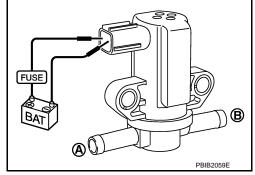

EC

Α

Е

D

Н

M

Ν

Р

[VQ35DE]

# P0447 EVAP CANISTER VENT CONTROL VALVE


**Description** 

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

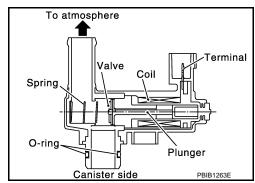

DTC Logic

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0447	EVAP canister vent control valve circuit open	An improper voltage signal is sent to ECM through EVAP canister vent control valve.	Harness or connectors     (The valve circuit is open or shorted.)     EVAP canister vent control valve     Hoses     (Hoses are connected incorrectly or clogged.)

#### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 8 seconds.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-286, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536680

# 1.INSPECTION START

Will CONSULT-III be used?

### Will CONSULT-III be used?

YES >> GO TO 2.

NO >> GO TO 3.

# 2. CHECK EVAP CANISTER VENT CONTROL VALVE CIRCUIT

### (P)With CONSULT-III

P0447 EVAP CANISTER VENT CONTROL VALVE [VQ35DE] < DTC/CIRCUIT DIAGNOSIS > Turn ignition switch OFF and then ON. Select "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT-III. Α Touch "ON/OFF" on CONSULT-III screen. 4. Check for operating sound of the valve. EC Clicking sound should be heard. Is the inspection result normal? YES >> GO TO 7. NO >> GO TO 3. 3.CHECK EVAP CANISTER VENT CONTROL VALVE POWER SUPPLY CIRCUIT D Turn ignition switch OFF. Disconnect EVAP canister vent control valve harness connector. Turn ignition switch ON. Е Check the voltage between EVAP canister vent control valve harness connector and ground. EVAP canister vent control valve Ground Voltage Connector **Terminal** B65 Ground Battery voltage Is the inspection result normal? YES >> GO TO 5. NO >> GO TO 4.  $oldsymbol{4}.$ DETECT MALFUNCTIONING PART Н Check the following. Harness connectors F121, E7 Harness connectors E104, B4 Harness for open or short between EVAP canister vent control valve and IPDM E/R >> Repair open circuit, short to ground or short to power in harness or connectors. 5.CHECK EVAP CANISTER VENT CONTROL VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT Turn ignition switch OFF. K Disconnect ECM harness connector. Check the continuity between ECM harness connector and EVAP canister vent control valve harness con-L Refer to Wiring Diagram.

EVAP canister v	ent control valve	ECM		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
B65	2	E16	109	Existed	

Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

## $\mathsf{6}.\mathsf{DETECT}$ MALFUNCTIONING PART

Check the following.

- Harness connectors E104, B4
- Harness for open or short between EVAP canister vent control valve and ECM

>> Repair open circuit, short to ground or short to power in harness or connectors.

## .CHECK RUBBER TUBE FOR CLOGGING

Disconnect rubber tube connected to EVAP canister vent control valve.

**EC-287** Revision: 2009 September 2010 Murano

N

## P0447 EVAP CANISTER VENT CONTROL VALVE

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

2. Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Clean the rubber tube using an air blower.

8.check evap canister vent control valve

Refer to EC-288, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace EVAP canister vent control valve.

9. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

# Component Inspection

INFOID:0000000005536681


# 1. CHECK EVAP CANISTER VENT CONTROL VALVE-I

- 1. Remove EVAP canister vent control valve from EVAP canister.
- 2. Check portion (A) of EVAP canister vent control valve for rust.

## Is it rusted?

YES >> Replace EVAP canister vent control valve.

NO >> GO TO 2.

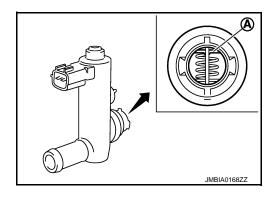

# $2.\mathsf{CHECK}$ EVAP CANISTER VENT CONTROL VALVE-II

### (P)With CONSULT-III

- 1. Reconnect harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 4. Check air passage continuity and operation delay time.

#### Check that new O-ring is installed properly.

Condition VENT CONTROL/V	Air passage continuity between (A) and (B)	
ON	Not existed	
OFF	Existed	

Operation takes less than 1 second.


## Without CONSULT-III

- 1. Disconnect EVAP canister vent control valve harness connector.
- Check air passage continuity and operation delay time under the following conditions.

## Check that new O-ring is installed properly.

Condition	Air passage continuity between (A) and (B)	
12 V direct current supply between terminals 1 and 2	Not existed	
OFF	Existed	

Operation takes less than 1 second.

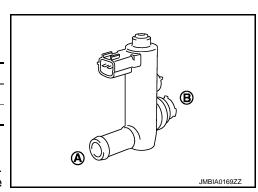

### P0447 EVAP CANISTER VENT CONTROL VALVE

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3.check evap canister vent control valve-iii

### (I) With CONSULT-III

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 3. Check air passage continuity and operation delay time.

Check that new O-ring is installed properly.

Condition VENT CONTROL/V	Air passage continuity between (A) and (B)
ON	No
OFF	Yes

Operation takes less than 1 second.

### Without CONSULT-III

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Check air passage continuity and operation delay time under the following conditions.

Check that new O-ring is installed properly.


Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	No
OFF	Yes

Operation takes less than 1 second.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister vent control valve

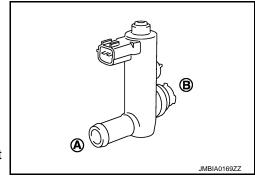

EC

Α

С

D

Е

F

G

Н

K

L

M

Ν

Р

[VQ35DE]

### P0448 EVAP CANISTER VENT CONTROL VALVE


**Description** 

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

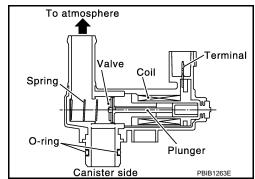

DTC Logic

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0448	EVAP canister vent control valve close	EVAP canister vent control valve remains closed under specified driving conditions.	<ul> <li>EVAP canister vent control valve</li> <li>EVAP control system pressure sensor and the circuit</li> <li>Blocked rubber tube to EVAP canister vent control valve</li> <li>EVAP canister is saturated with water</li> </ul>

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

### 2. PERFORM DTC CONFIRMATION PROCEDURE

### (P)With CONSULT-III

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III.
- 4. Start engine and let it idle for at least 1 minute.
- 5. Repeat next procedures 3 times.
- Increase the engine speed up to 3,000 to 3,500 rpm and keep it for 2 minutes and 50 seconds to 3 minutes.

#### Never exceed 3 minutes.


- Fully released accelerator pedal and keep engine idle for about 5 seconds.
- 6. Repeat next procedure 20 times.
- Quickly increase the engine speed up to 4,000 to 4,500 rpm or more and keep it for 25 to 30 seconds.

### P0448 EVAP CANISTER VENT CONTROL VALVE

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Fully released accelerator pedal and keep engine idle for at least 35 seconds.

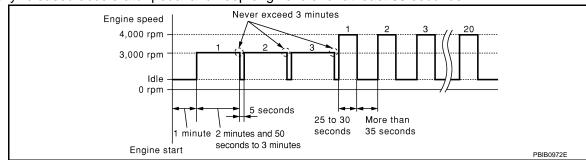

Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-291, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000005536684

### 1. CHECK RUBBER TUBE

- 1. Turn ignition switch OFF.
- 2. Disconnect rubber tube connected to EVAP canister vent control valve.
- 3. Check the rubber tube for clogging.

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Clean rubber tube using an air blower.

### 2. CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-292, "Component Inspection".

#### Is he inspection result normal?

YES >> GO TO 3.


NO >> Replace EVAP canister vent control valve.

### 3.CHECK IF EVAP CANISTER SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- 2. Check if water will drain from the EVAP canister.

#### Does water drain from the EVAP canister?

YES >> GO TO 4. NO >> GO TO 6.

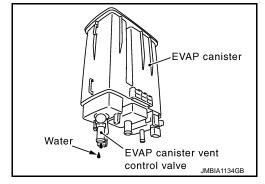

### 4. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

#### The weight should be less than 2.1 kg (4.6 lb).

### Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

### 5. DETECT MALFUNCTIONING PART

#### Check the following.

EVAP canister for damage

Α

EC

D

Е

F

Н

П

Κ

L

M

Ν

 $\circ$ 

D

Р

Ρ

Revision: 2009 September EC-291

### P0448 EVAP CANISTER VENT CONTROL VALVE

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

• EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister.

### 6. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

- Disconnect EVAP control system pressure sensor harness connector.
- Check that water is not inside connectors.

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace EVAP control system pressure sensor.

### 7.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-296, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace EVAP control system pressure sensor.

### 8. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

## Component Inspection

INFOID:0000000005536685


### 1. CHECK EVAP CANISTER VENT CONTROL VALVE-I

- 1. Remove EVAP canister vent control valve from EVAP canister.
- 2. Check portion (A) of EVAP canister vent control valve for rust.

### Is it rusted?

YES >> Replace EVAP canister vent control valve.

NO >> GO TO 2.

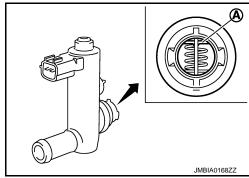

# 2. CHECK EVAP CANISTER VENT CONTROL VALVE-II

### (I) With CONSULT-III

- 1. Reconnect harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 4. Check air passage continuity and operation delay time.

### Check that new O-ring is installed properly.


Condition VENT CONTROL/V	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

Operation takes less than 1 second.

#### Without CONSULT-III

- . Disconnect EVAP canister vent control valve harness connector.
- 2. Check air passage continuity and operation delay time under the following conditions.

Check that new O-ring is installed properly.

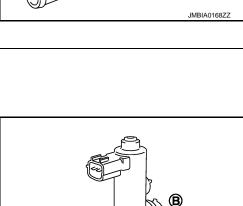

JMBIA0169ZZ

### P0448 EVAP CANISTER VENT CONTROL VALVE

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals 1 and 2	Not existed
OFF	Existed

EC

Α

Operation takes less than 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3.check evap canister vent control valve-iii

### (I) With CONSULT-III

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 3. Check air passage continuity and operation delay time.

Check that new O-ring is installed properly.

Condition VENT CONTROL/V	Air passage continuity between (A) and (B)
ON	No
OFF	Yes

Operation takes less than 1 second.

### Without CONSULT-III

1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.

Check air passage continuity and operation delay time under the following conditions.

Check that new O-ring is installed properly.


Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	No
OFF	Yes

Operation takes less than 1 second.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister vent control valve

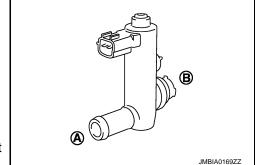

Е

D

F

G

Н

J

Κ

L

IVI

Ν

0


Р

[VQ35DE]

### P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR

**Description** 

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

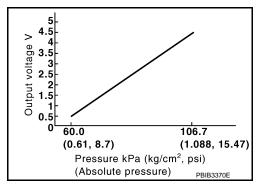

**DTC** Logic

INFOID:0000000005536687

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0451	EVAP control system pressure sensor performance	ECM detects a sloshing signal from the EVAP control system pressure sensor	Harness or connectors     (EVAP control system pressure sensor circuit is shorted.)     [CKP sensor (POS) circuit is shorted.]     (APP sensor 2 circuit is shorted.)     (Refrigerant pressure sensor circuit is shorted.)      EVAP control system pressure sensor     Crankshaft position sensor (POS)     Accelerator pedal position sensor     Refrigerant pressure sensor

### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait at least 40 seconds.

NOTE:

Do not depress accelerator pedal even slightly.

Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-294, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000005536688

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

Is the inspection result normal?

# < DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 2.

NO >> Repair or replace ground connection.

### 2.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR FOR WATER

- Disconnect EVAP control system pressure sensor harness connector.
- Check that water is not inside connectors.

### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

# 3.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch ON.
- Check the voltage between EVAP control system pressure sensor harness connector and ground.

EVAP control system pressure sensor		Ground	Voltage (V)	
Connector	Terminal	Giodila	voltage (v)	
B17	3	Ground	Approx. 5	

### Is the inspection result normal?

YES >> GO TO 8.

>> GO TO 4. NO

### 4. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
F8	72	Refrigerant pressure sensor	E300	1
ГО	76	CKP sensor (POS)	F20	1
E16	87	APP sensor	E110	5
LIU	91	EVAP control system pressure sensor	B17	3

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

### CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-257, "Component Inspection"</u>.)
- Refrigerant pressure sensor (Refer to EC-457, "Diagnosis Procedure".)

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

### **6.**CHECK APP SENSOR

#### Refer to EC-409, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 7.

### $7.\mathsf{REPLACE}$ ACCELERATOR PEDAL ASSEMBLY

- Replace accelerator pedal assembly.
- Go to EC-409, "Special Repair Requirement".

#### >> INSPECTION END

### f 8.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

**EC-295** Revision: 2009 September 2010 Murano

Α

[VQ35DE]

EC

D

Е

F

Н

N

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Refer to EC-296, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace EVAP control system pressure sensor.

9. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

### Component Inspection

INFOID:0000000005536689

# 1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- Remove EVAP control system pressure sensor with its harness connector.Always replace O-ring with a new one.
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM terminals under the following conditions.

ECM		Applied veguum kDe		
Connector + -		Applied vacuum kPa (kg/cm <sup>2</sup> , psi)	Voltage	
Terminal		Terminal	(ng/cm , poi/	
	86	96	Not applied	1.8 - 4.8 V
E16	(EVAP control system pressure sensor signal)	(Sensor ground)	-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value

### **CAUTION:**

- Always calibrate the vacuum pump gauge when using it.
- Never apply below -93.3 kPa (-0.952 kg/cm<sup>2</sup>, -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm<sup>2</sup>, 14.69 psi).

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor


< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

### P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

Description INFOID:0000000005536690

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

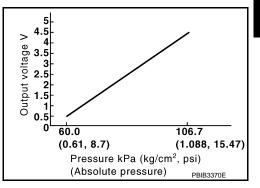

**DTC Logic** 

#### DTC DETECTION LOGIC

DTC detecting condition DTC No. Possible cause Trouble diagnosis name Harness or connectors (The sensor circuit is open or shorted.) [CKP sensor (POS) circuit is shorted.] (APP sensor 2 circuit is shorted.) Н EVAP control system (Refrigerant pressure sensor circuit is An excessively low voltage from the sensor is P0452 pressure sensor low insent to ECM. put EVAP control system pressure sensor Crankshaft position sensor (POS) · Accelerator pedal position sensor · Refrigerant pressure sensor

### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION PROCEDURE

#### (P)With CONSULT-III

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds. 2.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT-III.
- Check that "FUEL T/TMP SE" is more than 0°C (32°F). 7.
- Start engine and wait at least 20 seconds.
- 9. Check 1st trip DTC.

#### With GST

- Start engine and warm it up to normal operating temperature.
- Set voltmeter probes to ECM harness connector terminals under the following conditions.

EC

Α

D

INFOID:0000000005536691

F

N

2010 Murano

[VQ35DE]

	ECM	
Connector	+	_
Connector	Terminal	Terminal
E16	95 (Fuel tank temperature sensor signal)	104 (Sensor ground)

- 3. Check that the voltage is less than 4.2 V.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Turn ignition switch ON.
- 6. Turn ignition switch OFF and wait at least 10 seconds.
- 7. Start engine and wait at least 20 seconds.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-298, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000005536692

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2. CHECK CONNECTOR

- 1. Disconnect EVAP control system pressure sensor harness connector.
- Check that water is not inside connector.

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

## 3. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-I

- 1. Turn ignition switch ON.
- 2. Check the voltage between EVAP control system pressure sensor harness connector and ground.

EVAP control syste	em pressure sensor	Ground	Voltage (V)	
Connector	Terminal	Ground	voltage (v)	
B17	3	Ground	Approx. 5	

### Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 4.

### 4.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-II

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EVAP control syste	em pressure sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
B17	3	E16	91	Existed

#### Is the inspection result normal?

YES >> GO TO 6.

P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR [VQ35DE] < DTC/CIRCUIT DIAGNOSIS > NO >> GO TO 5. Α  ${f 5.}$ DETECT MALFUNCTIONING PART Check the following. Harness connectors B4. E104 EC Harness for open or short between EVAP control system pressure sensor and ECM >> Repair open circuit. 6.CHECK SENSOR POWER SUPPLY CIRCUIT Check harness for short to power and short to ground, between the following terminals. D **ECM** Sensor Connector **Terminal** Connector Terminal Name Е 72 Refrigerant pressure sensor E300 1 F8 76 CKP sensor (POS) F20 1 87 APP sensor E110 5 F16 91 EVAP control system pressure sensor **B17** 3 Is the inspection result normal? YES >> GO TO 7. NO >> Repair short to ground or short to power in harness or connectors. .CHECK COMPONENTS Check the following. Crankshaft position sensor (POS) (Refer to <u>EC-257, "Component Inspection"</u>.) Refrigerant pressure sensor (Refer to EC-457, "Diagnosis Procedure".) Is the inspection result normal? YFS >> GO TO 8. NO >> Replace malfunctioning components. 8.CHECK APP SENSOR Refer to EC-409, "Component Inspection". Is the inspection result normal? YES >> GO TO 15. NO >> GO TO 9. 9. REPLACE ACCELERATOR PEDAL ASSEMBLY Replace accelerator pedal assembly. Refer to EC-409, "Special Repair Requirement". >> INSPECTION END

# 10. Check evap control system pressure sensor ground circuit for open and short

Ν

Р

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EVAP control syste	EVAP control system pressure sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
B17	1	E16	96	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

YES >> GO TO 12. NO >> GO TO 11.

# 11. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, E104
- Harness for open or short between EVAP control system pressure sensor and ECM
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

# 12.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EVAP control syste	em pressure sensor	E	CM	Continuity
Connector	Terminal	Connector Terminal		Continuity
B17	2	E16	86	Existed

2. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 14.

NO >> GO TO 13.

# 13. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, E104
- Harness for open or short between EVAP control system pressure sensor and ECM
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

### 14. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-300, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace EVAP control system pressure sensor.

### 15. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

# Component Inspection

INFOID:0000000005536693

### 1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector.

### Always replace O-ring with a new one.

- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM terminals under the following conditions.

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

ECM			Applied veguum kDe		
Connector	+	_	Applied vacuum kPa (kg/cm <sup>2</sup> , psi)	Voltage	
Connector	Terminal	Terminal	(g/ 3 , p 3./		
	86	96	Not applied	1.8 - 4.8 V	
E16	(EVAP control system pressure sensor signal)	(Sensor ground)	-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value	

Α

EC

C

### **CAUTION:**

- Always calibrate the vacuum pump gauge when using it.
- Never apply below -93.3 kPa (-0.952 kg/cm<sup>2</sup>, -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm<sup>2</sup>, 14.69 psi).

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor

F

Е

G

Н

K

L

M

Ν

0

Р


[VQ35DE]

INFOID:0000000005536695

### P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

Description INFOID:0000000005536694

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

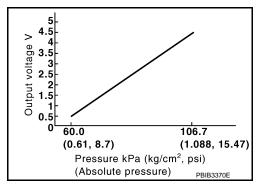

**DTC** Logic

DTC DETECTION LOGI	C
--------------------	---

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0453	EVAP control system pressure sensor high input	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted.)     [CKP sensor (POS) circuit is shorted.]     (APP sensor 2 circuit is shorted.)     (Refrigerant pressure sensor circuit is shorted.)      EVAP control system pressure sensor     Crankshaft position sensor (POS)     Accelerator pedal position sensor     Refrigerant pressure sensor     EVAP canister vent control valve     EVAP canister     Rubber hose from EVAP canister vent control valve to vehicle frame

### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 2.

### 2. PERFORM DTC CONFIRMATION PROCEDURE

#### (P)With CONSULT-III

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Turn ignition switch ON.
- 6. Select "DATA MONITOR" mode with CONSULT-III.
- 7. Check that "FUEL T/TMP SE" is more than 0°C (32°F).
- 8. Start engine and wait at least 20 seconds.
- 9. Check 1st trip DTC.

# < DTC/CIRCUIT DIAGNOSIS >

**With GST** 

Start engine and warm it up to normal operating temperature.

Set voltmeter probes to ECM harness connector terminals.

ECM				
Connector	+	_		
	Terminal	Terminal		
E16	95 (Fuel tank temperature sensor signal)	104 (Sensor ground)		

3. Check that the voltage is less than 4.2 V.

- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Turn ignition switch ON.
- 6. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and wait at least 20 seconds.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-303, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

### 2. CHECK CONNECTOR

- Disconnect EVAP control system pressure sensor harness connector.
- Check that water is not inside connectors.

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

# 3.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch ON.
- Check the voltage between EVAP control system pressure sensor harness connector and ground.

EVAP control syste	em pressure sensor	Ground	Voltage (V)	
Connector	Terminal	Giodila	voitage (v)	
B17	3	Ground	Approx. 5	

#### Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 4.

### f 4.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

[VQ35DE]

EC

Α

Е

INFOID:0000000005536696

Н

K

N

2010 Murano

**EC-303** Revision: 2009 September

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

EVAP control syste	em pressure sensor	E	CM	Continuity
Connector	Terminal	Connector Terminal		Continuity
B17	3	E16	91	Existed

#### Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

# 5. DETECT MALFUNCTIONING PART

### Check the following.

- Harness connectors B4, E104
- Harness for open or short between EVAP control system pressure sensor and ECM

### >> Repair open circuit.

### 6. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

E	СМ	Sensor		
Connector	Terminal	Name	Connector	Terminal
F8	72	Refrigerant pressure sensor	E300	1
76		CKP sensor (POS)	F20	1
E16	87	APP sensor	E110	5
E16 91		EVAP control system pressure sensor	B17	3

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair short to ground or short to power in harness or connectors.

### .CHECK COMPONENTS

#### Check the following.

- Crankshaft position sensor (POS) (Refer to EC-257, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-457, "Diagnosis Procedure".)

### Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace malfunctioning components.

### 8. CHECK APP SENSOR

### Refer to EC-409, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 9.

### 9. REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- Refer to <u>EC-409</u>, "Special Repair Requirement".

#### >> INSPECTION END

# 10.check evap control system pressure sensor ground circuit for open and short

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

CDTC/CIRCUI	I DIAGNOSIS >	•			[44335]
EVAP control syst	em pressure sensor	E	ECM		
Connector	Terminal	Connector	Terminal	Continuity	
B17	1	E16	96	Existed	
. Also check	harness for short	to ground and	short to power.		
•	n result normal?				
	TO 12. TO 11.				
4	/ 10 11. MALFUNCTIONIN	IC DART			
Check the follow		- AKI			
	nectors B4, E104				
Harness for o	pen or short betw	een EVAP con	itrol system pres	sure sensor and EC	M
Б					
`	•		•	er in harness or con	
IZ.CHECKE SHORT	VAP CONTROL S	SYSTEM PRE	SSURE SENSU	R INPUT SIGNAL C	IRCUIT FOR OPEN AND
	continuity betwee	en EVAP contr	ol system press	ure sensor harness	connector and ECM har-
ness conne		<b>= 1</b> 7 11 001111	2. 2, 3.3.11 p. 330	concor namou	toiodor dila Eom ilai
	em pressure sensor		ECM	Continuity	
Connector	Terminal	Connector	Terminal	Frietad	
B17	2	E16	86	Existed	
	harness for short n result normal?	to ground and	i short to power.		
	TO 14.				
NO >> GO	TO 13.				
13.detect	MALFUNCTIONIN	IG PART			
Check the follow					
	ectors B4, E104	een EVAP con	itrol system pres	sure sensor and EC	M
	port or orion both	0011 2 7711 0011	in or oyotom proc		
>> Rep	pair open circuit,	short to ground	d or short to pow	er in harness or conr	nectors.
<b>14.</b> CHECK R	UBBER TUBE				
	rubber tube conr		canister vent co	ontrol valve.	
	rubber tube for clo	ogging.			
•	n result normal?				
	TO 15. an the rubber tub	e using an air	blower, repair or	replace rubber tube	
	VAP CANISTER '	•	•		•
	8, "Component In		···-·-		
	n result normal?	<del>opodion</del> .			
	TO 16.				
	place EVAP canis				
<b>16.</b> снеск е	VAP CONTROL S	SYSTEM PRES	SSURE SENSO	₹	

Refer to EC-306, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 17.

NO >> Replace EVAP control system pressure sensor.

Revision: 2009 September EC-305 2010 Murano


[VQ35DE]

### 17. CHECK IF EVAP CANISTER IS SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- 2. Check if water will drain from the EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 18. NO >> GO TO 20.

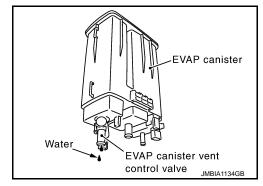

### 18. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 2.1 kg (4.6 lb).

Is the inspection result normal?

YES >> GO TO 20. NO >> GO TO 19.

19. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister.

### 20. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

# Component Inspection

INFOID:0000000005536697

- 1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR
- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector.

Always replace O-ring with a new one.

- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM terminals under the following conditions.

ECM			Applied veguum kDe		
Connector	+	_	Applied vacuum kPa (kg/cm <sup>2</sup> , psi)	Voltage	
	Terminal	Terminal	(ng/cm , poi/		
E16	86	LSensor around	Not applied	1.8 - 4.8 V	
	(EVAP control system pressure sensor signal)		-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value	

### **CAUTION:**

- Always calibrate the vacuum pump gauge when using it.
- Never apply below -93.3 kPa (-0.952 kg/cm<sup>2</sup>, -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm<sup>2</sup>, 14.69 psi).

Is the inspection result normal?

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

>> INSPECTION END YES

NO >> Replace EVAP control system pressure sensor

EC

Α

С

D

Е

F

G

Н

J

K

L

M

Ν

0

Р


[VQ35DE]

# P0455 EVAP CONTROL SYSTEM

DTC Logic

### DTC DETECTION LOGIC

This diagnosis detects a very large leakage (fuel filler cap fell off etc.) in EVAP system between the fuel tank and EVAP canister purge volume control solenoid valve.

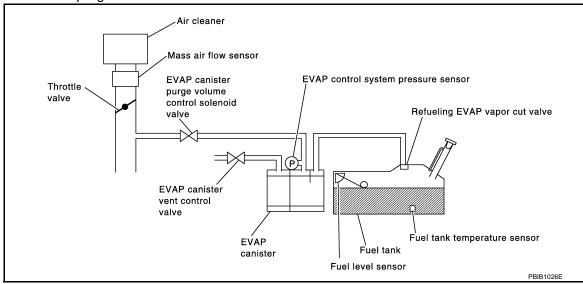

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0455	EVAP control system gross leakage detected	EVAP control system has a very large leakage such as fuel filler cap fell off, EVAP control system does not operate properly.	Fuel filler cap remains open or does not close. Incorrect fuel tank vacuum relief valve Incorrect fuel filler cap used Foreign matter caught in fuel filler cap. Leakage is in line between intake manifold and EVAP canister purge volume control solenoid valve. Foreign matter caught in EVAP canister vent control valve. EVAP canister or fuel tank leakage EVAP purge line (pipe and rubber tube) leakage EVAP purge line rubber tube bent. Loose or disconnected rubber tube EVAP canister vent control valve and the circuit EVAP canister purge volume control solenoid valve and the circuit Fuel tank temperature sensor O-ring of EVAP canister vent control valve is missing or damaged. EVAP control system pressure sensor Refueling EVAP vapor cut valve ORVR system leakage

#### **CAUTION:**

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may illuminate.
- If the fuel filler cap is not tightened properly, the MIL may illuminate.
- Use only a genuine NISSAN rubber tube as a replacement.

### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

### **CAUTION:**

P0455 EVAP CONTROL SYSTEM [VQ35DE] < DTC/CIRCUIT DIAGNOSIS > Never remove fuel filler cap during the DTC Confirmation Procedure. If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test. Turn ignition switch OFF and wait at least 10 seconds. 1. Turn ignition switch ON. EC Turn ignition switch OFF and wait at least 10 seconds. Check that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly. TESTING CONDITION: • Perform "DTC WORK SUPPORT" when the fuel level is between 1/4 and 3/4 full, and vehicle is placed on flat level surface. Open engine hood before conducting the following procedures. Will CONSULT-III be used? D YES >> GO TO 2. NO >> GO TO 4. 2.PERFORM DTC CONFIRMATION PROCEDURE Е (P)With CONSULT-III 1. Tighten fuel filler cap securely until ratcheting sound is heard. Turn ignition switch ON. 2. 3. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III. 5. Check that the following conditions are met. **COOLAN TEMP/S: 0 - 70°C (32 - 158°F)** INT/A TEMP SE: 0 - 60°C (32 - 140°F) Select "EVP SML LEAK P0442/P1442" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-III. Follow the instructions displayed. NOTE: If the engine speed cannot be maintained within the range displayed on the CONSULT-III screen, go to EC-13, "BASIC INSPECTION: Special Repair Requirement". Which is displayed on CONSULT-III screen? OK >> INSPECTION END NG >> GO TO 3. 3.check dtc Check DTC. Which DTC is detected? P0455 >> Go to EC-310, "Diagnosis Procedure". P0442 >> Go to EC-273, "Diagnosis Procedure" 4.PERFORM DTC CONFIRMATION PROCEDURE NOTE: Be sure to read the explanation of DRIVING PATTERN in <u>EC-501</u>, "How to <u>Set SRT Code"</u> before driving vehicle. Ν Start engine. Drive vehicle according to DRIVING PATTERN. 3. Stop vehicle. 4. Turn ignition switch OFF and wait at least 10 seconds. 5. Turn ignition switch ON. 6. Turn ignition switch OFF and wait at least 10 seconds. Turn ignition switch ON. P 8. Check 1st trip DTC. Is 1st trip DTC detected? YES-1 >> P0455: Go to EC-310, "Diagnosis Procedure".

YES-2 >> P0442: Go to <u>EC-273, "Diagnosis Procedure"</u>. YES-3 >> P0441: Go to EC-269, "Diagnosis Procedure".

>> INSPECTION END

NO

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

### Diagnosis Procedure

INFOID:0000000005536699


### 1. CHECK FUEL FILLER CAP DESIGN

- 1. Turn ignition switch OFF.
- 2. Check for genuine NISSAN fuel filler cap design.

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace with genuine NISSAN fuel filler cap.

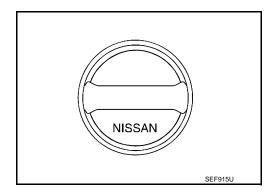

### 2. CHECK FUEL FILLER CAP INSTALLATION

Check that the cap is tightened properly by rotating the cap clockwise.

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. Retighten until ratcheting sound is heard.

# 3. CHECK FUEL FILLER CAP FUNCTION

Check for air releasing sound while opening the fuel filler cap.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

### 4. CHECK FUEL TANK VACUUM RELIEF VALVE

Refer to EC-312, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace fuel filler cap with a genuine one.

### 5 . CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks, improper connection or disconnection.

Refer to EC-77, "System Diagram".

### Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or reconnect the hose.

### 6.CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.

>> GO TO 7.

### 7.CHECK EVAP CANISTER VENT CONTROL VALVE

#### Check the following.

- EVAP canister vent control valve is installed properly.
   Refer to <u>EC-534</u>, "<u>Removal and Installation</u>".
- EVAP canister vent control valve.

Refer to EC-288, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace EVAP canister vent control valve and O-ring.

[VQ35DE] < DTC/CIRCUIT DIAGNOSIS > 8. CHECK FOR EVAP LEAKAGE Refer to EC-532, "Inspection". Is there any leakage in EVAP line? YES >> Repair or replace. EC NO-1 >> With CONSULT-III: GO TO 9. NO-2 >> Without CONSULT-III: GO TO 10. 9.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION (P)With CONSULT-III Disconnect vacuum hose from EVAP canister purge volume control solenoid valve at EVAP service port. 1. D 2. Start engine. Perform "PURG VOL C/V" in "ACTIVE TEST" mode. Touch "Qu" on CONSULT-III screen to increase "PURG VOL C/V" opening to 100%. Check vacuum hose for vacuum. Е Vacuum should exist. Is the inspection result normal? YES >> GO TO 12. NO >> GO TO 11. 10.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION Without CONSULT-III 1. Start engine and warm it up to normal operating temperature. Н 2. Stop engine. Disconnect vacuum hose from EVAP canister purge volume control solenoid valve at EVAP service port. 4. Start engine and let it idle for at least 80 seconds. 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm. Vacuum should exist. Is the inspection result normal? YES >> GO TO 13. NO >> GO TO 11. 11. CHECK VACUUM HOSE K Check vacuum hoses for clogging or disconnection. Refer to EC-77, "System Diagram". Is the inspection result normal? YES-1 >> With CONSULT-III: GO TO 12. YES-2 >> Without CONSULT-III: GO TO 13. NO >> Repair or reconnect the hose. 12.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE With CONSULT-III Ν 1. Start engine. 2. Perform "PURG VOL C/V" in "ACTIVE TEST" mode with CONSULT-III. Check that engine speed varies according to the valve opening. Does engine speed vary according to the valve opening? YES >> GO TO 14. NO >> GO TO 13. 13.check evap canister purge volume control solenoid valve Р Refer to EC-282, "Component Inspection". Is the inspection result normal? YES >> GO TO 14. >> Replace EVAP canister purge volume control solenoid valve. NO 14.CHECK FUEL TANK TEMPERATURE SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Refer to EC-232, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace fuel level sensor unit.

### 15. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-296, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace EVAP control system pressure sensor.

# 16. CHECK EVAP/ORVR LINE

Check EVAP/ORVR line between EVAP canister and fuel tank for clogging, kinks, looseness and improper connection. For location, refer to <u>EC-451</u>, "<u>Description</u>".

### Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair or replace hoses and tubes.

### 17. CHECK RECIRCULATION LINE

Check recirculation line between filler neck tube and fuel tank for clogging, kinks, cracks, looseness and improper connection.

#### Is the inspection result normal?

YES >> GO TO 18.

NO >> Repair or replace hose, tube or filler neck tube.

### 18. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-454, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 19.

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

### 19. CHECK INTERMITTENT INCIDENT


Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

# Component Inspection 1.CHECK FUEL FILLER CAP

INFOID:0000000005536700

- 1. Turn ignition switch OFF.
- 2. Remove fuel filler cap.
- 3. Wipe clean valve housing.

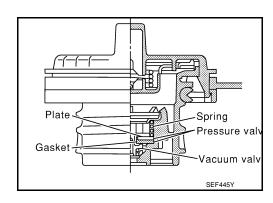

4. Install fuel filler cap adapter (commercial service tool) to fuel filler cap.

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

5. Check valve opening pressure and vacuum.

Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm<sup>2</sup>, 2.22 -

2.90 psi)

Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm<sup>2</sup>,

-0.87 to -0.48 psi)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

illuminate.


# 2. REPLACE FUEL FILLER CAP

Replace fuel filler cap.

CAUTION:

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may

>> INSPECTION END

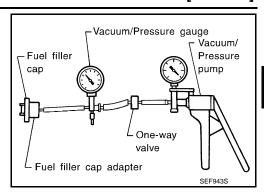

EC

Α

С

D

F

Е

Н

J

K

L

M

Ν

0

Р

DTC Logic

### DTC DETECTION LOGIC

#### NOTE:


### If DTC P0456 is displayed with DTC P0442, first perform the trouble diagnosis for DTC P0456.

This diagnosis detects very small leakage in the EVAP line between fuel tank and EVAP canister purge volume control solenoid valve, using the negative pressure.

If ECM judges a leakage which corresponds to a very small leakage, the very small leakage P0456 will be detected.

If ECM judges a leakage equivalent to a small leakage, EVAP small leakage P0442 will be detected.

If ECM judges that there are no leakage, the diagnosis will be OK.

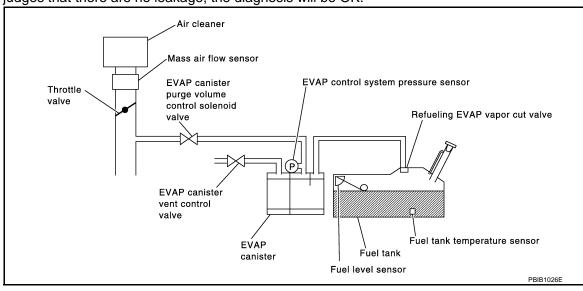

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0456	Evaporative emission control system very small leakage (negative pressure check)	EVAP system has a very small leak- age.     EVAP system does not operate prop- erly.	<ul> <li>Incorrect fuel tank vacuum relief valve</li> <li>Incorrect fuel filler cap used</li> <li>Fuel filler cap remains open or does not close.</li> <li>Foreign matter caught in fuel filler cap.</li> <li>Leakage is in line between intake manifold and EVAP canister purge volume control solenoid valve.</li> <li>Foreign matter caught in EVAP canister vent control valve.</li> <li>EVAP canister or fuel tank leakage</li> <li>EVAP purge line (pipe and rubber tube) leakage</li> <li>EVAP purge line rubber tube bent</li> <li>Loose or disconnected rubber tube</li> <li>EVAP canister vent control valve and the circuit</li> <li>EVAP canister purge volume control solenoid valve and the circuit</li> <li>Fuel tank temperature sensor</li> <li>O-ring of EVAP canister vent control valve is missing or damaged</li> <li>EVAP canister is saturated with water</li> <li>EVAP control system pressure sensor</li> <li>Refueling EVAP vapor cut valve</li> <li>ORVR system leakage</li> <li>Fuel level sensor and the circuit</li> <li>Foreign matter caught in EVAP canister purge volume control solenoid valve</li> </ul>

**CAUTION:** 

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may illuminate.
- If the fuel filler cap is not tightened properly, the MIL may illuminate.
- Use only a genuine NISSAN rubber tube as a replacement.

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### Will CONSULT-III be used?

YES >> GO TO 2.

>> GO TO 4. NO

### 2.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

- After repair, make sure that the hoses and clips are installed properly.
- Check that EVAP hoses are connected to EVAP canister purge volume control solenoid valve properly.

#### **TESTING CONDITION:**

- Open engine hood before conducting the following procedure.
- If any of following conditions are met just before the DTC CONFIRMATION PROCEDURE, leave the vehicle for more than 1 hour.
- Fuel filler cap is removed.
- Fuel is refilled or drained.
- EVAP component part/parts is/are removed.
- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 3.

### 3.PERFORM DTC CONFIRMATION PROCEDURE

#### (P)With CONSULT-III

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT-III.
- Check that the following conditions are met.

**FUEL LEVEL SE: 0.25 - 1.4 V** 

COOLAN TEMP/S: 0 - 32°C (32 - 90°F) **FUEL T/TMP SE: 0 - 35°C (32 - 95°F)** 

INT A/TEMP SE: More than 0°C (32°F)

If NG, turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle), or refill/drain fuel until the output voltage of the "FUEL LEVEL SE" meets within the range above and leave the vehicle for more than 1 hour. Then start from step 1.

- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select "EVP V/S LEAK P0456/P1456" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT-III.

Follow the instructions displayed.

#### NOTE:

If the engine speed cannot be maintained within the range displayed on CONSULT-III screen, go to EC-13, "BASIC INSPECTION: Special Repair Requirement".

#### Which is displayed on CONSULT-III?

OK >> INSPECTION END

NG >> Go to EC-316, "Diagnosis Procedure".

### f 4.PERFORM COMPONENT FUNCTION CHECK

Perform Component Function Check. Refer to EC-316, "Component Function Check".

EC

Α

D

Е

Н

Ν

2010 Murano

#### < DTC/CIRCUIT DIAGNOSIS >

#### NOTE:

Use Component Function Check to check the overall function of the EVAP very small leakage function. During this check, a 1st trip DTC might not be confirmed.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-316, "Diagnosis Procedure".

### Component Function Check


INFOID:0000000005536702

### 1. PERFORM COMPONENT FUNCTION CHECK

# **With GST CAUTION:**

- Never use compressed air, doing so may damage the EVAP system.
- · Never start engine.
- Never exceed 4.12 kPa (0.042 kg/cm<sup>2</sup>, 0.6 psi).
- 1. Attach the EVAP service port adapter (commercial service tool) securely to the EVAP service port.
- 2. Set the pressure pump and a hose.
- 3. Also set a vacuum gauge via 3-way connector and a hose.
- 4. Turn ignition switch ON.
- 5. Connect GST and select Service \$08.
- Using Service \$08 control the EVAP canister vent control valve (close).
- Apply pressure and make sure the following conditions are satisfied.

Pressure to be applied: 2.7 kPa (0.028 kg/cm<sup>2</sup>, 0.39 psi) Time to be waited after the pressure drawn in to the EVAP system and the pressure to be dropped: 60 seconds and the pressure should not be dropped more than 0.4 kPa (0.004 kg/cm<sup>2</sup>, 0.06 psi).

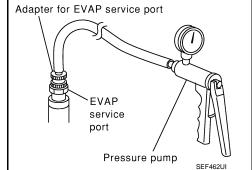

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Go to EC-316, "Diagnosis Procedure".

### 2. RELEASE PRESSURE

- Disconnect GST.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Restart engine and let it idle for 90 seconds.
- 5. Keep engine speed at 2,000 rpm for 30 seconds.
- Turn ignition switch OFF.

#### NOTE

For more information, refer to GST Instruction Manual.

>> INSPECTION END

### Diagnosis Procedure

INFOID:0000000005536703

2010 Murano

### 1. CHECK FUEL FILLER CAP DESIGN

1. Turn ignition switch OFF.

#### < DTC/CIRCUIT DIAGNOSIS >


[VQ35DE]

2. Check for genuine NISSAN fuel filler cap design.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace with genuine NISSAN fuel filler cap.

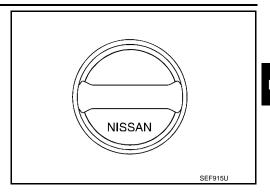

### 2. CHECK FUEL FILLER CAP INSTALLATION

Check that the cap is tightened properly by rotating the cap clockwise.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. Retighten until ratcheting sound is heard.

3. CHECK FUEL FILLER CAP FUNCTION

Check for air releasing sound while opening the fuel filler cap.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK FUEL TANK VACUUM RELIEF VALVE

Refer to EC-320, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace fuel filler cap with a genuine one.

**5.**CHECK FOR EVAP LEAKAGE

Refer to EC-532, "Inspection".

Is there any leakage in EVAP line?

YES >> Repair or replace malfunctioning part.

NO >> GO TO 6.

6.CHECK EVAP CANISTER VENT CONTROL VALVE

Check the following.

• EVAP canister vent control valve is installed properly.

Refer to EC-534, "Removal and Installation".

EVAP canister vent control valve.

Refer to EC-288, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace EVAP canister vent control valve and O-ring.

7.CHECK IF EVAP CANISTER IS SATURATED WITH WATER

EC

Α

D

Е

F

G

Н

ı

K

-

1

Ν

Р

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]


Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

### Does water drain from the EVAP canister?

YES >> GO TO 8.

NO-1 >> With CONSULT-III: GO TO 10.

NO-2 >> Without CONSULT-III: GO TO 11.

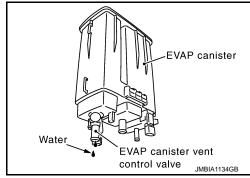

### 8.CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor

### The weight should be less than 2.1 kg (4.6 lb).

### Is the inspection result normal?

YES-1 >> With CONSULT-III: GO TO 10.

YES-2 >> Without CONSULT-III: GO TO 11.

>> GO TO 9. NO

### 9. DETECT MALFUNCTIONING PART

### Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister.

# 10.check evap canister purge volume control solenoid valve operation

#### (P)With CONSULT-III

- Disconnect vacuum hose connected to EVAP service port and EVAP canister purge volume control solenoid valve from EVAP service port.
- Start engine.
- 3. Perform "PURG VOL C/V" in "ACTIVE TEST" mode.
- Touch "Qu" on CONSULT-III screen to increase "PURG VOL C/V" opening to 100%.
- Check vacuum hose for vacuum.

#### Vacuum should exist.

#### Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

## 11.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

#### Without CONSULT-III

- Start engine and warm it up to normal operating temperature.
- Stop engine.
- 3. Disconnect vacuum hose connected to EVAP service port and EVAP canister purge volume control solenoid valve from EVAP service port.
- 4. Start engine and let it idle for at least 80 seconds.
- 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.

#### Vacuum should exist.

### Is the inspection result normal?

YES >> GO TO 14.

NO >> GO TO 12.

# 12. CHECK VACUUM HOSE

Check vacuum hoses for clogging or disconnection. Refer to EC-77, "System Diagram".

< DTC/CIRCUIT DIAGNOSIS >	[VQ35DE]
Is the inspection result normal?	
YES >> GO TO 13.	
NO >> Repair or reconnect the hose.	
13. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	
Refer to EC-282, "Component Inspection".	
Is the inspection result normal?	
YES >> GO TO 14.	
NO >> Replace EVAP canister purge volume control solenoid valve.	
14.CHECK FUEL TANK TEMPERATURE SENSOR	
Refer to EC-232, "Component Inspection".	
Is the inspection result normal?	
YES >> GO TO 15. NO >> Replace fuel level sensor unit.	
15. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR	
Refer to <u>EC-296. "Component Inspection"</u> .  Is the inspection result normal?	
YES >> GO TO 16.	
NO >> Replace EVAP control system pressure sensor.	
16. CHECK EVAP PURGE LINE	
Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or imp	roper connection
Refer to EC-77, "System Diagram".	Topor comicodon.
Is the inspection result normal?	
YES >> GO TO 17.	
NO >> Repair or reconnect the hose.	
17.clean evap purge line	
Clean EVAP purge line (pipe and rubber tube) using air blower.	
>> GO TO 18.	
18.check evap/orvr line	
Check EVAP/ORVR line between EVAP canister and fuel tank for clogging, kinks, loos	eness and improper
connection. For location, refer to <u>EC-451, "Description"</u> .	
Is the inspection result normal?	
YES >> GO TO 19.	
NO >> Repair or replace hoses and tubes.	
19.check recirculation line	
Check recirculation line between filler neck tube and fuel tank for clogging, kinks, cra improper connection.	icks, looseness and
Is the inspection result normal?	
YES >> GO TO 20.	
NO >> Repair or replace hose, tube or filler neck tube.	
20. CHECK REFUELING EVAP VAPOR CUT VALVE	
Refer to EC-454, "Component Inspection".	
Is the inspection result normal?	
YES >> GO TO 21.	
NO >> Replace refueling EVAP vapor cut valve with fuel tank.	
21.check fuel level sensor	
Refer to MWI-46, "Component Inspection".	

Revision: 2009 September EC-319 2010 Murano

Is the inspection result normal?

# < DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 22.

NO >> Replace fuel level sensor unit.

### 22. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END


### Component Inspection

INFOID:0000000005536704

[VQ35DE]

# 1. CHECK FUEL FILLER CAP

- 1. Turn ignition switch OFF.
- 2. Remove fuel filler cap.
- 3. Wipe clean valve housing.

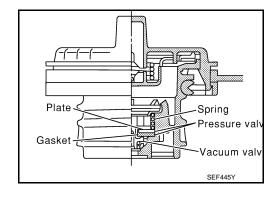

- 4. Install fuel filler cap adapter (commercial service tool) to fuel filler cap.
- 5. Check valve opening pressure and vacuum.

Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm<sup>2</sup>, 2.22 -

2.90 psi)


Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm<sup>2</sup>,

-0.87 to -0.48 psi)

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

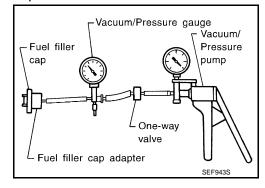

# 2. REPLACE FUEL FILLER CAP

Replace fuel filler cap.

### **CAUTION:**

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may illuminate.

>> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

D

Е

K

N

### P0460 FUEL LEVEL SENSOR

**Description** 

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

DTC Logic

### DTC DETECTION LOGIC

### NOTE:

- If DTC P0460 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0460 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-342</u>, "<u>DTC Logic</u>".

When the vehicle is parked, the fuel level in the fuel tank is naturally stable. It means that output signal of the fuel level sensor does not change. If ECM senses sloshing signal from the sensor, fuel level sensor malfunction is detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	G
P0460	Fuel level sensor circuit noise	Even though the vehicle is parked, a signal being varied is sent from the fuel level sensor to ECM.	Harness or connectors     (The CAN communication line is open or shorted)     Harness or connectors     (The sensor circuit is open or shorted)     Combination meter     Fuel level sensor	Н

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

### 2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait maximum of 2 consecutive minutes.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-321, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

# 1. CHECK COMBINATION METER FUNCTION

Refer to MWI-34, "CONSULT-III Function (METER/M&A)".

#### Is the inspection result normal?

YES >> GO TO 2.

Revision: 2009 September

NO >> Go to MWI-45, "Diagnosis Procedure".

### 2. CHECK INTERMITTENT INCIDENT

Refer to GI-39. "Intermittent Incident".

EC-321

2010 Murano

INFOID:0000000005536707

>> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

### P0461 FUEL LEVEL SENSOR

Description INFOID:0000000005536708

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

DTC Logic INFOID:0000000005536709

### DTC DETECTION LOGIC

### NOTE:

- If DTC P0461 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0461 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-342, "DTC Logic".

Driving long distances naturally affect fuel gauge level.

This diagnosis detects the fuel gauge malfunction of the gauge not moving even after a long distance has been driven.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	C
P0461	Fuel level sensor circuit range/performance	The output signal of the fuel level sensor does not change within the specified range even though the vehicle has been driven a long distance.	Harness or connectors     (The CAN communication line is open or shorted)     Harness or connectors     (The sensor circuit is open or shorted)     Combination meter     Fuel level sensor	F

#### DTC CONFIRMATION PROCEDURE

# 1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-323, "Component Function Check".

Use component function check to check the overall function of the fuel level sensor. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-324, "Diagnosis Procedure".

### Component Function Check

### 1.PRECONDITIONING

#### WARNING:

When performing the following procedure, always observe the handling of the fuel. Refer to FL-5, "Exploded View".

#### **TESTING CONDITION:**

Before starting component function check, preparation of draining fuel and refilling fuel is required.

#### Will CONSULT-III be used?

YES >> GO TO 2. NO >> GO TO 3.

### 2.PERFORM COMPONENT FUNCTION CHECK

#### With CONSULT-III

### NOTE:

Start from step 10, if it is possible to confirm that the fuel cannot be drained by 30 ℓ (7-7/8 US gal, 6-5/ 8 Imp gal) in advance.

Prepare a fuel container and a spare hose.

**EC-323** Revision: 2009 September

EC

Α

D

Е

F

L

INFOID:0000000005536710 M

Ν

Р

2010 Murano

### P0461 FUEL LEVEL SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- Release fuel pressure from fuel line, refer to <u>EC-532, "Inspection"</u>.
- 3. Remove the fuel feed hose on the fuel level sensor unit.
- 4. Connect a spare fuel hose where the fuel feed hose was removed.
- 5. Turn ignition switch OFF and wait at least 10 seconds then turn ON.
- 6. Select "FUEL LEVEL SE" in "DATA MONITOR" mode with CONSULT-III.
- 7. Check "FUEL LEVEL SE" output voltage and note it.
- 8. Select "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT-III.
- 9. Touch "ON" and drain fuel approximately 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) and stop it.
- 10. Check "FUEL LEVEL SE" output voltage and note it.
- 11. Fill fuel into the fuel tank for 30  $\ell$  (7-7/8 US gal, 6-5/8 Imp gal).
- 12. Check "FUEL LEVEL SE" output voltage and note it.
- 13. Confirm whether the voltage changes more than 0.03 V during step 7 to 10 and 10 to 12.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-324, "Diagnosis Procedure".

# 3.perform component function check

#### Without CONSULT-III

#### NOTE:

# Start from step 8, if it is possible to confirm that the fuel cannot be drained by 30 $\ell$ (7-7/8 US gal, 6-5/8 Imp gal) in advance.

- 1. Prepare a fuel container and a spare hose.
- Release fuel pressure from fuel line. Refer to <u>EC-532</u>, "Inspection".
- 3. Remove the fuel feed hose on the fuel level sensor unit.
- 4. Connect a spare fuel hose where the fuel feed hose was removed.
- 5. Turn ignition switch ON.
- 6. Drain fuel by 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) from the fuel tank using proper equipment.
- 7. Confirm that the fuel gauge indication varies.
- 8. Fill fuel into the fuel tank for 30  $\ell$  (7-7/8 US gal, 6-5/8 Imp gal).
- 9. Confirm that the fuel gauge indication varies.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-324, "Diagnosis Procedure".

### Diagnosis Procedure

INFOID:0000000005536711

### 1.CHECK COMBINATION METER FUNCTION

### Refer to MWI-34, "CONSULT-III Function (METER/M&A)".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Go to MWI-45, "Diagnosis Procedure".

### 2. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# P0462, P0463 FUEL LEVEL SENSOR

Description INFOID:0000000005536712

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

**DTC Logic** INFOID:0000000005536713

### DTC DETECTION LOGIC

### NOTE:

- If DTC P0462 or P0463 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0462 or P0463 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607.Refer to EC-342, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0462	Fuel level sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors     (The CAN communication line is open or
P0463	Fuel level sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	shorted)  Harness or connectors (The sensor circuit is open or shorted)  Combination meter  Fuel level sensor

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 11 V at ignition switch ON.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON and wait at least 5 seconds.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-325, "Diagnosis Procedure".

1. CHECK COMBINATION METER FUNCTION

NO >> INSPECTION END

# Diagnosis Procedure

Refer to MWI-34, "CONSULT-III Function (METER/M&A)".

### Is the inspection result normal?

YES >> GO TO 2.

Revision: 2009 September

NO >> Go to MWI-45, "Diagnosis Procedure".

### 2.CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

**EC-325** 

EC

Α

D

Е

F

K

L

M

N

INFOID:0000000005536714

2010 Murano

>> INSPECTION END

### P0500 VSS

Description INFOID:0000000005536715

The vehicle speed signal is sent to the combination meter from the "ABS actuator and electric unit (control unit)" via the CAN communication line. The combination meter then sends a signal to the ECM via the CAN communication line.

EC

Α

DTC Logic

INFOID:0000000005536716

#### DTC DETECTION LOGIC

- If DTC P0500 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0500 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-342, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0500	Vehicle speed sensor	The vehicle speed signal sent to ECM is almost 0 km/h (0 MPH) even when vehicle is being driven.	Harness or connectors     (The CAN communication line is open or shorted)     Harness or connectors     (The vehicle speed signal circuit is open or shorted)     Wheel sensor     Combination meter     ABS actuator and electric unit (control unit)

### DTC CONFIRMATION PROCEDURE

### 1.INSPECTION START

Will CONSULT-III be used?

Will CONSULT-III be used?

YES >> GO TO 2.

NO >> GO TO 5.

# 2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 3.

# 3.CHECK VEHICLE SPEED SIGNAL

#### NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

### (P)With CONSULT-III

Start engine (VDC switch OFF).

Read "VHCL SPEED SE" in "DATA MONITOR" mode with CONSULT-III. The vehicle speed on CON-SULT-III should exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-328, "Diagnosis Procedure".

# 4. PERFORM DTC CONFIRMATION PROCEDURE

- Select "DATA MONITOR" mode with CONSULT-III.
- Warm engine up to normal operating temperature.

**EC-327** Revision: 2009 September

D

Е

F

Ν

Р

2010 Murano

Maintain the following conditions for at least 50 consecutive seconds.

**CAUTION:** 

Always drive vehicle at a safe speed.

ENG SPEED	1,400 - 6,000 rpm
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	5.5 - 31.8 msec
Selector lever	Except P or N position
PW/ST SIGNAL	OFF

#### 4. Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-328, "Diagnosis Procedure".

NO >> INSPECTION END

# 5. PERFORM COMPONENT FUNCTION CHECK

Perform Component Function Check. Refer to EC-328, "Component Function Check".

Use Component Function Check to check the overall function of the vehicle speed signal circuit. During this check, a 1st trip DTC might not be confirmed.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-328, "Diagnosis Procedure".

# Component Function Check

INFOID:0000000005536717

# 1.PERFORM COMPONENT FUNCTION CHECK

### **With GST**

- 1. Lift up drive wheels.
- Start engine.
- Read vehicle speed signal in Service \$01 with GST.
   The vehicle speed signal on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with

The vehicle speed signal on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-328, "Diagnosis Procedure".

# Diagnosis Procedure

INFOID:0000000005536718

# 1. CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Refer to BRC-28, "CONSULT-III Function".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning part.

# 2.CHECK COMBINATION METER FUNCTION

Refer to MWI-34, "CONSULT-III Function (METER/M&A)".

>> INSPECTION END

## P0506 ISC SYSTEM

Description INFOID:0000000005536719

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM.

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration and engine load (air conditioner, power steering and cooling fan operation, etc.).

DTC Logic INFOID:0000000005536720

### DTC DETECTION LOGIC

#### NOTE:

If DTC P0506 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0506	Idle speed control system RPM lower than expected	The idle speed is less than the target idle speed by 100 rpm or more.	Electric throttle control actuator     Intake air leakage

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

If the target idle speed is out of the specified value, perform <u>EC-18, "IDLE AIR VOLUME LEARNING:</u> Special Repair Requirement", before conducting DTC CONFIRMATION PROCEDURE.

#### **TESTING CONDITION:**

- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.
- Always perform the test at a temperature above –10°C(14°F).

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Restart engine and run it for at least 1 minute at idle speed.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-329, "Diagnosis Procedure".

>> INSPECTION END NO

## Diagnosis Procedure

### 1.CHECK INTAKE AIR LEAKAGE

- 1. Start engine and let it idle.
- Listen for an intake air leakage after the mass air flow sensor.

Is intake air leakage detected?

EC

Α

Е

K

N

INFOID:0000000005536721

## **P0506 ISC SYSTEM**

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

YES >> Discover air leakage location and repair.

NO >> GO TO 2.

# 2.REPLACE ECM

- 1. Stop engine.
- 2. Replace ECM.
- 3. Go to EC-16, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement".

>> INSPECTION END

Α

EC

Е

## P0507 ISC SYSTEM

Description INFOID:0000000005536722

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM.

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration and engine load (air conditioner, power steering and cooling fan operation, etc.).

DTC Logic INFOID:0000000005536723

### DTC DETECTION LOGIC

NOTE:

If DTC P0507 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0507	Idle speed control sys- tem RPM higher than expected	The idle speed is more than the target idle speed by 200 rpm or more.	Electric throttle control actuator     Intake air leakage     PCV system

### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

If the target idle speed is out of the specified value, perform EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement", before conducting DTC Confirmation Procedure.

#### **TESTING CONDITION:**

- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.
- Always perform the test at a temperature above –10°C(14°F).

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON. 3.
- Turn ignition switch OFF and wait at least 10 seconds.
- 5. Restart engine and run it for at least 1 minute at idle speed.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-331, "Diagnosis Procedure".

>> INSPECTION END NO

# Diagnosis Procedure

1. CHECK PCV HOSE CONNECTION

Confirm that PCV hose is connected correctly.

Is the inspection result normal?

YES >> GO TO 2.

K

N

INFOID:0000000005536724

### **P0507 ISC SYSTEM**

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

NO >> Repair or replace malfunctioning part.

# 2. CHECK INTAKE AIR LEAKAGE

- 1. Start engine and let it idle.
- 2. Listen for an intake air leakage after the mass air flow sensor.

### Is intake air leakage detected?

YES >> Discover air leakage location and repair.

NO >> GO TO 3.

# 3. REPLACE ECM

- 1. Stop engine.
- 2. Replace ECM.
- 3. Go to EC-16, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement".

>> INSPECTION END

### P050E COLD START CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

### P050E COLD START CONTROL

Description INFOID:0000000005548684

ECM controls ignition timing and engine idle speed when engine is started with pre-warming up condition. This control promotes the activation of three way catalyst by heating the catalyst and reduces emissions.

INFOID:0000000005548685

DTC Logic

### DTC DETECTION LOGIC

NOTE:

If DTC P050E is displayed with other DTC, first perform the trouble diagnosis for other DTC.

D

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P050E	Cold start engine exhaust temperature too low	The temperature of the catalyst inlet does not rise to the proper temperature when the engine is started with pre-warming up condition.	<ul><li>Lack of intake air volume</li><li>Fuel injection system</li><li>ECM</li></ul>

### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE-I

#### (P)With CONSULT-III

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT-III.
- Check the indication of "COOLAN TEMP/S".

#### 

Follow the procedure "With CONSULT-III" above.

### Is the value of "COOLAN TEMP/S" between 15°C (59°F) and 36°C (97°F)?

>> GO TO 3.

NO-1 [If it is below 15°C (59°F)]>>Warm up the engine until the value of "COOLAN TEMP/S" reaches 15°C (59°F) or more. Retry from step 1.

NO-2 [If it is above 36°C (97°F)]>>Cool engine down to less than 36°C (97°F). Retry from step 1.

## 3.PERFORM DTC CONFIRMATION PROCEDURE-II

#### (P)With CONSULT-III

- Set the select lever in N range.
- Start the engine and warm up in idle with the value of "COOLAN TEMP/S" between 15°C (59°F) and 40°C (104°F) for more than 15 seconds.
- Check 1st trip DTC.

#### With GST

Follow the procedure "With CONSULT-III" above.

### Is 1st trip DTC detected?

YES >> Go to EC-334, "Diagnosis Procedure".

>> INSPECTION END NO

EC

Α

Е

F

Н

M

Ν

Р

2010 Murano

### P050E COLD START CONTROL

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## Diagnosis Procedure

INFOID:0000000005548686

# 1. PERFORM IDLE AIR VOLUME LEARNING

Perform EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

#### Is Idle Air Volume Learning carried out successfully?

YES >> GO TO 2.

NO >> Follow the instruction of Idle Air Volume Learning.

# 2. CHECK INTAKE SYSTEM

Check for the cause of intake air volume lacking. Refer to the following.

- Crushed intake air passage
- Intake air passage clogging
- Clogging of throttle body

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning part

# 3.CHECK FUEL INJECTION SYSTEM FUNCTION

Perform DTC Confirmation Procedure for DTC P0171, P0174. Refer to EC-222, "DTC Logic".

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-223, "Diagnosis Procedure" for DTC P0171, P0174.

# 4. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Erase DTC.
- 3. Perform DTC Confirmation Procedure.

See EC-333, "DTC Logic".

#### Is the 1st trip DTC P050E displayed again?

YES >> GO TO 5.

NO >> INSPECTION END

# 5.REPLACE ECM

- 1. Replace ECM.
- Go to EC-16, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> INSPECTION END

### P0550 PSP SENSOR

Description INFOID:0000000005536725

Power steering pressure (PSP) sensor is installed to the power steering high-pressure tube and detects a power steering load.

This sensor is a potentiometer which transforms the power steering load into output voltage, and emits the voltage signal to the ECM. The ECM controls the electric throttle control actuator and adjusts the throttle valve opening angle to increase the engine speed and adjusts the idle speed for the increased load.

DTC Logic INFOID:0000000005536726

### DTC DETECTION LOGIC

NOTE:

If DTC P0550 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-343, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0550	Power steering pressure sensor circuit	An excessively low or high voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted)     Power steering pressure sensor

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds. 1.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for at least 5 seconds.
- 2. Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-335, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2.CHECK PSP SENSOR POWER SUPPLY CIRCUIT

- Disconnect power steering pressure (PSP) sensor harness connector.
- Turn ignition switch ON. 2.
- Check the voltage between PSP sensor harness connector and ground.

PSP :	sensor	Ground	Voltage	
Connector	Terminal	Ground		
F62	3	Ground	Approx. 5 V	

**EC-335** Revision: 2009 September 2010 Murano

EC

Α

D

M

N

INFOID:0000000005536727

#### < DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.check PSP sensor ground circuit for open and short

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between PSP sensor harness connector and ECM harness connector.

PSP sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F62	1	F8	48	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground short to power in harness or connectors.

## 4. CHECK PSP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between PSP sensor harness connector and ECM harness connector.

PSP sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F62	2	F8	41	Existed

2. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 5. CHECK PSP SENSOR

Refer to EC-336, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace PSP sensor.

### 6. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

# Component Inspection

INFOID:0000000005536728

# 1. CHECK POWER STEERING PRESSURE SENSOR

- Reconnect all harness connectors disconnected.
- Start engine and let it idle.
- Check the voltage between ECM terminals under the following conditions.

ECM					
Connector	+	_	Condition	Voltage	
Connector	Terminal	Terminal			
	41	48	Steering wheel: Being turned.	0.5 - 4.5 V	
F8	(Power steering pressure sensor signal)	(Sensor ground)	Steering wheel: Not being turned.	0.4 - 0.8 V	

Is the inspection result normal?

# **P0550 PSP SENSOR**

< DTC/CIRCUIT DIAGNOSIS > [VQ35DE]

YES >> INSPECTION END

NO >> Replace power steering pressure sensor.

Α

EC

С

D

Е

F

G

Н

J

K

L

M

Ν


0

Ρ

## P0603 ECM POWER SUPPLY

**Description** 

Battery voltage is supplied to the ECM even when the ignition switch is turned OFF for the ECM memory function of the DTC memory, the air-fuel ratio feedback compensation value memory, the idle air volume learning value memory, etc.

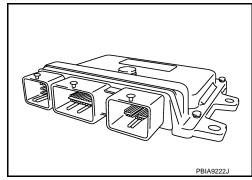

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0603	ECM power supply circuit	ECM back up RAM system does not function properly.	Harness or connectors     [ECM power supply (back up) circuit is open or shorted.]     ECM

### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2.perform dtc confirmation procedure

- 1. Turn ignition switch ON and wait at least 10 second.
- 2. Turn ignition switch OFF and wait at least 5 minutes.
- 3. Turn ignition switch ON, wait at least 10 seconds.
- Repeat steps 2 and 3 for five times.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-338, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536731

# 1. CHECK ECM POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the voltage between ECM harness connector terminals.

# **P0603 ECM POWER SUPPLY**

< DTC/CIRCUIT DIAGNOSIS >


[VQ35DE]

	F.O.	· N /				А
	EC	·IVI		Voltage		7.
Connector	Terminal	Connector	Terminal	Voltage		
F8	77	E16	112	Battery voltage		EC
Is the inspect	ion result nor	mal?				
YES >> G	O TO 3.					C
	60 TO 2.					
2.DETECT N		ONING PART	-			
<ul><li>Check the foll</li><li>15 A fuse (N</li></ul>						_
• IPDM E/R h	arness conne					
<ul> <li>Harness for</li> </ul>	open or shor	rt between E	CM and batte	ery		Е
Б				_		
3.CHECK IN	epair or repla			S.		F
1						_
Refer to GI-39						(
-	60 TO 4.	mar:				
NO >> R	epair or repla					
4.PERFORM	I DTC CONF	IRMATION F	ROCEDUR	E		-
	ion switch Of	N.				
<ol> <li>Erase DT</li> <li>Perform I</li> </ol>	C. DTC CONFIR	RMATION PR	OCEDURE.			
	338, "DTC Lo					
Is the 1st trip		<u>displayed aga</u>	ain?			
	SO TO 5. NSPECTION	END				
5.REPLACE		LIND				
1. Replace I						k
2. Go to EC		IONAL SER\	ICE WHEN	REPLACING CONTRO	OL UNIT: Special Repair Require	<u>e-</u>
ment".						L
~~ IN	NSPECTION	END				
<i>&gt;&gt;</i> 11	NOI LOTION	LIND				1
						11
						1
						,
						F

## P0605 ECM

**Description** 

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The ECM controls the engine.

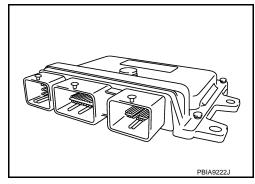

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
		A)	ECM calculation function is malfunctioning.	
P0605 Engine control module	Engine control module	B)	ECM EEP-ROM system is malfunctioning.	• ECM
		C)	ECM self shut-off function is malfunctioning.	

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A

- 1. Turn ignition switch ON.
- 2. Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-341, "Diagnosis Procedure".

NO >> GO TO 3.

# 3.perform dtc confirmation procedure for malfunction b

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Turn ignition switch OFF, wait at least 10 seconds, and then turn it ON.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-341, "Diagnosis Procedure".

NO >> GO TO 4.

# 4. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION C

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Turn ignition switch OFF, wait at least 10 seconds, and then turn it ON.
- 3. Repeat step 2 for 32 times.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

### **P0605 ECM**

[VQ35DE] < DTC/CIRCUIT DIAGNOSIS > YES >> Go to EC-341, "Diagnosis Procedure". NO >> INSPECTION END Α Diagnosis Procedure INFOID:0000000005536734 1. INSPECTION START EC Turn ignition switch ON. Erase DTC. C 3. Perform DTC CONFIRMATION PROCEDURE. See EC-340, "DTC Logic". Is the 1st trip DTC P0605 displayed again?  $\mathsf{D}$ YES >> GO TO 2. NO >> INSPECTION END 2.REPLACE ECM Е 1. Replace ECM. 2. Go to EC-16, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement". F >> INSPECTION END Н K L M Ν 0 Р

**EC-341** Revision: 2009 September 2010 Murano

### P0607 ECM

Description INFOID:000000005536735

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0607	CAN communication bus	When detecting error during the initial diagnosis of CAN controller of ECM.	• ECM

#### DTC CONFIRMATION PROCEDURE

# 1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- Check DTC.

#### Is DTC detected?

YES >> Go to EC-342, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536737

# 1. INSPECTION START

- 1. Turn ignition switch ON.
- 2. Erase DTC.
- 3. Perform DTC CONFIRMATION PROCEDURE.

See EC-342, "DTC Logic".

4. Check DTC.

### Is the DTC P0607 displayed again?

Yes >> GO TO 2.

No >> INSPECTION END

# 2.REPLACE ECM

- 1. Replace ECM.
- 2. Go to EC-16, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".
  - >> INSPECTION END

### P0643 SENSOR POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## P0643 SENSOR POWER SUPPLY

DTC Logic

#### DTC DETECTION LOGIC

	$\Box$

D

Е

F

Н

M

Ν

Р

Α

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0643	Sensor power supply circuit short	ECM detects that the voltage of power source for sensor is excessively low or high.	Harness or connectors     (APP sensor 1 circuit is shorted.)     (TP sensor circuit is shorted.)     [CMP sensor (PHASE) circuit is shorted.)     (PSP sensor circuit is shorted.)     (Battery current sensor circuit is shorted.)      Accelerator pedal position sensor     Throttle position sensor     Camshaft position sensor (PHASE)     Power steering pressure sensor     Battery current sensor

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- Check DTC

#### Is DTC detected?

YES >> Go to EC-343, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

#### INFOID:0000000005536739

# 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK ACCELERATOR PEDAL POSITION SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect accelerator pedal position (APP) sensor harness connector.
- Turn ignition switch ON.
- Check the voltage between APP sensor harness connector and ground.

Connector Terminal Ground Voltage (V)  E110 4 Ground Approx. 5	APP s	sensor	Ground	Voltage (V)	
E110 4 Ground Approx. 5	Connector	Terminal	Ground		
	E110	4	Ground	Approx. 5	

### P0643 SENSOR POWER SUPPLY

#### < DTC/CIRCUIT DIAGNOSIS >

<u>Is the inspection result normal?</u> YES >> GO TO 7.

NO >> GO TO 3.

# 3. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor			
Connector Terminal		Name	Connector	Terminal	
	47	TP sensor	F29	1	
	51	Battery current sensor	F76	1	
F8	55	PSP sensor	F62	3	
	59	CMP sensor (PHASE) (bank 1)	F26	1	
	63	CMP sensor (PHASE) (bank 2)	F69	1	
E16 83		APP sensor	E110	4	

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair short to ground or short to power in harness or connectors.

### 4. CHECK COMPONENTS

### Check the following.

- Camshaft position sensor (PHASE) (Refer to EC-260, "Component Inspection".)
- Battery current sensor (Refer to EC-360, "Component Inspection".)
- Power steering pressure sensor (Refer to <u>EC-336, "Component Inspection"</u>.)

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace malfunctioning component.

# 5. CHECK TP SENSOR

### Refer to EC-174, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 6.

# 6.replace electric throttle control actuator

- 1. Replace electric throttle control actuator.
- Go to EC-174, "Special Repair Requirement".

#### >> INSPECTION END

## 7. CHECK APP SENSOR

Refer to EC-409, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 8.

# 8.REPLACE ACCELERATOR PEDAL ASSEMBLY

- Replace accelerator pedal assembly.
- Go to <u>EC-409</u>, "Special Repair Requirement".

#### >> INSPECTION END

# 9. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

[VQ35DE]

2010 Murano

# **P0643 SENSOR POWER SUPPLY**

A DTC/CIDCUIT DIA CNOCIC S	[VQ35DE]
< DTC/CIRCUIT DIAGNOSIS >	[VQ35DE]

>> INSPECTION END

Α

EC

С

D

Е

F

G

Н

1

J

Κ

L

 $\mathbb{N}$ 

Ν

0

Ρ

## P0850 PNP SWITCH

Description INFOID:000000005536740

When the selector lever position is P or N, park/neutral position (PNP) signal from the TCM is sent to ECM.

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0850	Park/neutral position switch	The signal of the park/neutral position (PNP) signal does not change during driving after the engine is started.	Harness or connectors [The park/neutral position (PNP) signal circuit is open or shorted.]     TCM

#### DTC CONFIRMATION PROCEDURE

## 1.INSPECTION START

Will CONSULT-III be used?

#### Will CONSULT-III be used?

YES >> GO TO 2.

NO >> GO TO 5.

# 2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 3.

# 3. CHECK PNP SIGNAL

## (I) With CONSULT-III

- 1. Turn ignition switch ON.
- 2. Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT-III. Then check the "P/N POSI SW" signal under the following conditions.

Position (Selector lever)	Known-good signal
N or P position	ON
Except above position	OFF

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-347, "Diagnosis Procedure".

## 4. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Select "DATA MONITOR" mode with CONSULT-III.
- 2. Start engine and warm it up to normal operating temperature.
- Maintain the following conditions for at least 50 consecutive seconds.
   CAUTION:

#### Always drive vehicle at a safe speed.

ENG SPEED	1,100 - 6,375 rpm
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	4.0 - 31.8 msec

### P0850 PNP SWITCH

Р

< DTC/CIF	RCUIT D	IAGNOSI	S >			[VQ35DE]	
VHCL SPE	ED SE	1	More than 64 km	/h (40 mph)			
Selector lev	/er		Suitable position				Α
4. Check	1st trip E	DTC.					
Is 1st trip I	OTC dete	cted?					EC
		<u>C-347, "C</u> CTION EN	<u>Diagnosis Pro</u> ID	<u>cedure"</u> .			
5.PERFC	RM COM	IPONENT	FUNCTION	CHECK			C
Perform co	omponent	function	check. Refer	to <u>EC-347, "C</u>	omponent Fur	nction Check".	
Use comp				ne overall fun be confirmed		ark/neutral position (PNP) signal circuit.	D
	> INSPE	CTION EN		cedure".			Е
Compor		_	_			INFOID:000000005536742	F
1.PERFC	RM COM	1PONENT	FUNCTION	CHECK			
	gnition sw the volta		en ECM harn	ess connector	r terminals.		G
	ECM						Н
0	+	_	Con	dition	Voltage		
Connector	Terminal	Terminal					
E16	102	112	Selector lever	P or N	Battery voltage	-	I
	102	112	position	Except above	Approx. 0 V	-	
	> INSPE	CTION EN		cedure".			J
Diagnos	is Proc	edure				INFOID:0000000005536743	K
1.CHECK	CDTC WI	ТН ТСМ					
Refer to E	C-498, "D	TC Index	<u>("</u> .				L
Is the insp			<u>11?</u>				
NO >	-	or replace	e malfunctioni	ng part.			N
2.CHECK	STARTI	NG SYST	LIVI				

Turn ignition switch OFF, then turn it to START.

Does starter motor operate?

YES >> GO TO 3.

NO >> Refer to BCS-17, "COMMON ITEM: CONSULT-III Function (BCM - COMMON ITEM)".

3.CHECK PNP INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT-I

- Turn ignition switch OFF.
- 2. Disconnect TCM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between TCM harness connector and IPDM E/R harness connector.

**EC-347** Revision: 2009 September 2010 Murano

T	CM	IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F23	20	F12	72	Existed

5. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 4. CHECK PNP SIGNAL CIRCUIT FOR OPEN AND SHORT-II

- 1. Disconnect IPDM E/R harness connectors.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between ECM harness connector and IPDM E/R harness connector.

E	ECM		IPDM E/R	
Connector	Terminal	Connector	Terminal	Continuity
E16	102	E10	30	Existed

4. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 5. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> Repair or replace malfunctioning part.

# P1148, P1168 CLOSED LOOP CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# P1148, P1168 CLOSED LOOP CONTROL

DTC Logic

### DTC DETECTION LOGIC

#### NOTE:

DTC P1148 or P1168 is displayed with another DTC for A/F sensor 1. Perform the trouble diagnosis for the corresponding DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1148	Closed loop control function (bank 1)	The closed loop control function for bank 1 does not operate even when vehicle is being driven in the specified condition.	Harness or connectors     (The A/F sensor 1 circuit is open or shorted.)
P1168	Closed loop control function (bank 2)	The closed loop control function for bank 2 does not operate even when vehicle is being driven in the specified condition.	A/F sensor 1     A/F sensor 1 heater

EC

C

Α

Е

D

F

G

Н

ı

Κ

L

M

Ν

0

Р

## P1212 TCS COMMUNICATION LINE

Description INFOID.000000005536745

This CAN communication line is used to control the smooth engine operation during the TCS operation. Pulse signals are exchanged between ECM and "ABS actuator and electric unit (control unit)".

Be sure to erase the malfunction information such as DTC not only for "ABS actuator and electric unit (control unit)" but also for ECM after TCS related repair.

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

- If DTC P1212 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1212 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-342</u>, "<u>DTC Logic"</u>.

Freeze frame data is not stored in the ECM for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1212	TCS communication line	ECM cannot receive the information from "ABS actuator and electric unit (control unit)" continuously.	Harness or connectors     (The CAN communication line is open or shorted.)     ABS actuator and electric unit (control unit)     Dead (Weak) battery

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10.5 V at idle.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 10 seconds.
- 2. Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-350, "Diagnosis Procedure".

NO >> INSPECTION END

### **Diagnosis Procedure**

Go to BRC-5, "Work Flow".

INFOID:0000000005536747

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

### P1217 ENGINE OVER TEMPERATURE

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

- If DTC P1217 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1217 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-342</u>, "<u>DTC Logic"</u>.

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise.

When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1217	Engine over tempera- ture (Overheat)	<ul> <li>Cooling fan does not operate properly (Overheat).</li> <li>Cooling fan system does not operate properly (Overheat).</li> <li>Engine coolant was not added to the system using the proper filling method.</li> <li>Engine coolant is not within the specified range.</li> </ul>	Harness or connectors     (The cooling fan circuit is open or shorted.)     IPDM E/R (Cooling fan relays)     Cooling fan motor     Radiator hose     Radiator     Radiator cap     Water pump     Thermostat

#### **CAUTION:**

When a malfunction is indicated, always replace the coolant. Refer to MA-19, "ENGINE COOLANT: Draining". Also, replace the engine oil. Refer to MA-23, "ENGINE OIL: Draining".

- 1. Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Always use coolant with the proper mixture ratio. Refer to MA-16, "FOR NORTH AMERICA: Anti-Freeze Coolant Mixture Ratio".
- 2. After refilling coolant, run engine to ensure that no water-flow noise is emitted.

#### DTC CONFIRMATION PROCEDURE

# 1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-351, "Component Function Check".

### NOTE:

Use component function check to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-352, "Diagnosis Procedure".

### Component Function Check

## 1.PERFORM COMPONENT FUNCTION CHECK-I

#### **WARNING:**

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

EC

Α

·

D

F

Е

Н

J

K

M

INFOID:0000000005536749

Ν

C

Р

Ρ

2010 Murano

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]


Check the coolant level in the reservoir tank and radiator.

Allow engine to cool before checking coolant level.

Is the coolant level in the reservoir tank and/or radiator below the proper range?

YES >> Go to EC-352, "Diagnosis Procedure".

NO >> GO TO 2.

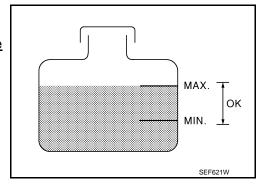

# 2. PERFORM COMPONENT FUNCTION CHECK-II

Confirm whether customer filled the coolant or not.

Did customer fill the coolant?

YES >> Go to EC-352, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform component function check-iii

#### (P)With CONSULT-III

- 1. Turn ignition switch ON.
- 2. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-III.
- 3. Check that cooling fan motors-1 and -2 operate at each speed (LOW/MID/HI).

#### Without CONSULT-III

Perform IPDM E/R auto active test and check cooling fan motors operation, refer to <u>PCS-10, "Diagnosis Description"</u>.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-352, "Diagnosis Procedure".

# Diagnosis Procedure

INFOID:0000000005536750

# 1. CHECK COOLING FAN OPERATION

# (III) With CONSULT-III

- 1. Turn ignition switch ON.
- 2. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-III.
- 3. Check that cooling fans-1 and -2 operate at each speed (LOW/MID/HI).

### **Without CONSULT-III**

- Perform IPDM E/R auto active test and check cooling fan motors operation, refer to <u>PCS-10, "Diagnosis Description"</u>.
- Check that cooling fans-1 and -2 operate at each speed (Low/Middle/High).

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Go to EC-428, "Diagnosis Procedure".

# 2.CHECK COOLING SYSTEM FOR LEAKAGE-I

Check cooling system for leakage. Refer to MA-18, "ENGINE COOLANT: Inspection".

### Is leakage detected?

YES >> GO TO 3.

NO >> GO TO 4.

# 3.CHECK COOLING SYSTEM FOR LEAKAGE-II

Check the following for leakage.

- Hose
- Radiator
- Water pump

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

>> Repair or replace malfunctioning part.

## 4. CHECK RADIATOR CAP

Check radiator cap. Refer to MA-22, "RADIATOR CAP: Inspection".

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace radiator cap.

## 5. CHECK THERMOSTAT

Check thermostat. Refer to CO-27, "Inspection".

### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace thermostat

# 6.CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-168, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace engine coolant temperature sensor.

# 7. CHECK MAIN 12 CAUSES

If the cause cannot be isolated, check the following.

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	Blocked radiator     Blocked condenser     Blocked radiator grille     Blocked bumper	Visual	No blocking	_
	2	Coolant mixture	Coolant tester	MA-18, "ENGINE COOLAR	NT : Inspection"
	3	Coolant level	Visual	Coolant up to MAX level in reservoir tank and radiator filler neck	MA-18, "ENGINE COOL-ANT : Inspection"
	4	Radiator cap	Pressure tester	MA-22, "RADIATOR CAP :	Inspection"
ON* <sup>2</sup>	5	Coolant leakage	Visual	No leakage	MA-18, "ENGINE COOL- ANT : Inspection"
ON* <sup>2</sup>	6	Thermostat	Touch the upper and lower radiator hoses	Both hoses should be hot	CO-27, "Inspection"
ON* <sup>1</sup>	7	Cooling fan	CONSULT-III	Operating	EC-428, "Component Function Check"
OFF	8	Combustion gas leak- age	Color checker chemical tester 4 Gas analyzer	Negative	_
ON* <sup>3</sup>	9	Coolant temperature gauge	Visual	Gauge less than 3/4 when driving	_
		Coolant overflow to reservoir tank	Visual	No overflow during driving and idling	MA-18, "ENGINE COOL- ANT : Inspection"
OFF*4	10	Coolant return from reservoir tank to radiator	Visual	Should be initial level in reservoir tank	MA-18, "ENGINE COOL- ANT : Inspection"
OFF	11	Cylinder head	Straight gauge feeler gauge	0.1 mm (0.004 in) Maximum distortion (warping)	EM-118, "Inspection"
	12	Cylinder block and pistons	Visual	No scuffing on cylinder walls or piston	EM-130, "Inspection"

<sup>\*1:</sup> Turn the ignition switch ON.

Α

EC

D

Е

Н

F

Ν

Р

**EC-353** 

Revision: 2009 September

<sup>\*2:</sup> Engine running at 3,000 rpm for 10 minutes.

<sup>\*3:</sup> Drive at 90 km/h (56 MPH) for 30 minutes and then let idle for 10 minutes.

<sup>\*4:</sup> After 60 minutes of cool down time.

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

For more information, refer to CO-4, "Troubleshooting Chart".

>> INSPECTION END

Α


EC

# P1225 TP SENSOR

Description INFOID:0000000005536751

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

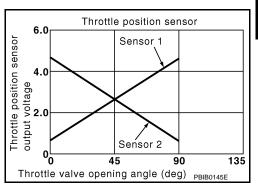

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1225	Closed throttle position learning performance	Closed throttle position learning value is excessively low.	Electric throttle control actuator (TP sensor 1 and 2)

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-355, "Diagnosis Procedure".

NO >> INSPECTION END

## **Diagnosis Procedure**

# 1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- 1. Turn ignition switch OFF.
- Remove the intake air duct.

Н

Е

F

0

IVI

N

Р

INFOID:0000000005536753

### **P1225 TP SENSOR**

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]


- 3. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)
- <□: Vehicle front

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Remove

>> Remove the foreign matter and clean the electric throttle control actuator inside.

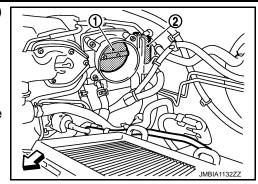

# 2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Go to EC-356, "Special Repair Requirement".

>> INSPECTION END

# Special Repair Requirement

INFOID:0000000005536754

1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement"

>> GO TO 2.

# 2.PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement"


>> END

### P1226 TP SENSOR

Description

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

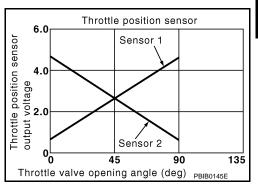

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1226	Closed throttle position learning performance	Closed throttle position learning is not performed successfully, repeatedly.	Electric throttle control actuator (TP sensor 1 and 2)

#### DTC CONFIRMATION PROCEDURE

# 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Repeat steps 2 and 3 for 32 times.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-357, "Diagnosis Procedure".

NO >> INSPECTION END

### Diagnosis Procedure

# 1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- 1. Turn ignition switch OFF.
- 2. Remove the intake air duct.

С

EC

Α

D

Е

Н

J

Ν

INFOID:00000000005536757

### P1226 TP SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]


- 3. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)
- <□: Vehicle front

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Remove

>> Remove the foreign matter and clean the electric throttle control actuator inside.

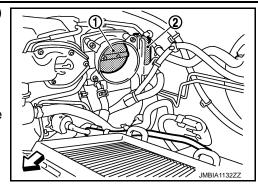

# 2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Go to EC-356, "Special Repair Requirement".

>> INSPECTION END

# Special Repair Requirement

INFOID:0000000005536758

1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement"

>> GO TO 2.

2.PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement"

>> END

### P1550 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

### P1550 BATTERY CURRENT SENSOR

Description INFOID:0000000005536762

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to CHG-8, "System Description".

**CAUTION:** 

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then battery discharge may occur.

DTC Logic

#### DTC DETECTION LOGIC

NOTE:

If DTC P1550 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-343, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1550	Battery current sensor circuit range/performance	The output voltage of the battery current sensor remains within the specified range while engine is running.	Harness or connectors     (The sensor circuit is open or shorted.)     Battery current sensor

#### DTC CONFIRMATION PROCEDURE

### 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and wait at least 10 seconds.
- 2. Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-359, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT

EC

Α

D

Е

G

Н

.

Κ

M

Ν

0

INFOID:0000000005536764

### P1550 BATTERY CURRENT SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- 1. Disconnect battery current sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between battery current sensor harness connector and ground.

Battery cur	rent sensor	Ground	Voltage (V)
Connector Terminal		Ground	voltage (v)
F76	1	Ground	Approx. 5

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	ttery current sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F76	2	F8	44	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 4.CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cur	ttery current sensor ECM		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F76	3	F8	42	Existed

2. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

### 5. CHECK BATTERY CURRENT SENSOR

Refer to EC-360, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace battery negative cable assembly.

#### 6. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

## Component Inspection

INFOID:0000000005536765

# 1. CHECK BATTERY CURRENT SENSOR

- Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.

#### P1550 BATTERY CURRENT SENSOR


#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- Disconnect battery negative cable (1).

- ←: To body ground Install jumper cable (A) between battery negative terminal and body ground.
- Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector terminals under the following conditions.

Connector	+	_	Voltage (V)
Connector	Terminal	Terminal	
F8	42 (Battery current sensor signal)	44 (Sensor ground)	Approx. 2.5

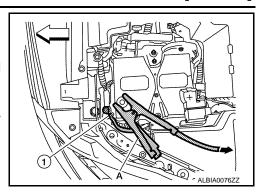

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

Α

EC

C

 $\mathsf{D}$ 

Е

F

Н

K

L

M

Ν

0

Р

[VQ35DE]

## P1551, P1552 BATTERY CURRENT SENSOR

Description INFOID:0000000005536766

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to CHG-8, "System Description".

#### **CAUTION:**

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then battery discharge may occur.

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

If DTC P1551 or P1552 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to <u>EC-343</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1551	Battery current sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors     (The sensor circuit is open or shorted.)
P1552	Battery current sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 8 V with ignition switch ON

>> GO TO 2.

## 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 10 seconds.
- 2. Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-362, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536768

## 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

#### P1551, P1552 BATTERY CURRENT SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

NO >> Repair or replace ground connection.

# 2.check battery current sensor power supply circuit

- Disconnect battery current sensor harness connector.
- Turn ignition switch ON.
- Check the voltage between battery current sensor harness connector and ground.

=0		9
	ı	U

Е

F

Α

Battery current sensor		Ground	Voltage (V)
Connector	Terminal	Ground	voltage (v)
F76	1	Ground	Approx. 5

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.check battery current sensor ground circuit for open and short

- Turn ignition switch OFF.
- Disconnect ECM harness connector. 2.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	rrent sensor	E(	СМ	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F76	2	F8	44	Existed

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## f 4.CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	rrent sensor	E	CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F76	3	F8	42	Existed

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

#### ${f 5.}$ CHECK BATTERY CURRENT SENSOR

Refer to EC-360, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace battery negative cable assembly.

#### 6.CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

## Component Inspection

## CHECK BATTERY CURRENT SENSOR

Turn ignition switch OFF.

Revision: 2009 September

Reconnect harness connectors disconnected.

**EC-363** 2010 Murano

N

M

Р

INFOID:0000000005536769

## P1551, P1552 BATTERY CURRENT SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >


[VQ35DE]

3. Disconnect battery negative cable (1).

: Vehicle front: To body ground

- 4. Install jumper cable (A) between battery negative terminal and body ground.
- 5. Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector terminals under the following conditions.

Connector	+	_	Voltage (V)
Connector	Terminal	Terminal	
F8	42 (Battery current sensor signal)	44 (Sensor ground)	Approx. 2.5

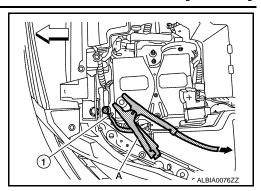

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

#### P1553 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

### P1553 BATTERY CURRENT SENSOR

Description INFOID:0000000005536770

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to CHG-8. "System Description".

**CAUTION:** 

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then battery discharge may occur.

**DTC Logic** INFOID:0000000005536771

#### DTC DETECTION LOGIC

If DTC P1553 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-343, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1553	Battery current sensor performance	The signal voltage transmitted from the sensor to ECM is higher than the amount of the maximum power generation.	Harness or connectors     (The sensor circuit is open or shorted.)     Battery current sensor

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

## 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and wait at least 10 seconds.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-365, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

## 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT

EC

Α

D

Е

Н

K

M

N

2010 Murano

INFOID:0000000005536772

Revision: 2009 September

#### P1553 BATTERY CURRENT SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- 1. Disconnect battery current sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between battery current sensor harness connector and ground.

Battery current sensor		Ground	Voltage (V)
Connector	Terminal	Ground	voltage (v)
F76	1	Ground	Approx. 5

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 3.CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	rrent sensor	E	СМ	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F76	2	F8	44	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4.CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F76	3	F8	42	Existed

2. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

#### 5. CHECK BATTERY CURRENT SENSOR

Refer to EC-360, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace battery negative cable assembly.

#### 6. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

## Component Inspection

INFOID:0000000005536773

## 1. CHECK BATTERY CURRENT SENSOR

- Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.

## P1553 BATTERY CURRENT SENSOR

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Disconnect battery negative cable (1).

- 4. Install ju body gro
- Turn ign
- Check t under th

: Vehicle front		
: To body ground		
jumper cable (A) between battery negative terminal and round. Inition switch ON. In the voltage between ECM harness connector terminals the following conditions.		1 ALBIA0076ZZ
ECM		
	\/altaga (\/)	

Connector	+	_	Voltage (V)
Connector	Terminal	Terminal	
F8	42 (Battery current sensor signal)	44 (Sensor ground)	Approx. 2.5

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

EC

D

Е

F

G

Н

K

L

M

Ν

0

Р

[VQ35DE]

## P1554 BATTERY CURRENT SENSOR

Description INFOID:000000005536774

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to CHG-8. "System Description".

#### **CAUTION:**

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then battery discharge may occur.

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

If DTC P1554 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-343, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1554	Battery current sensor perfor- mance	The output voltage of the battery current sensor is lower than the specified value while the battery voltage is high enough.	Harness or connectors     (The sensor circuit is open or shorted.)     Battery current sensor

#### DTC CONFIRMATION PROCEDURE

## 1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-368, "Component Function Check".

#### NOTE:

Use component function check to check the overall function of the battery current sensor circuit. During this check, a 1st trip DTC might not be confirmed.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-369, "Diagnosis Procedure".

## Component Function Check

INFOID:0000000005536776

## 1.PRECONDITIONING

#### **TESTING CONDITION:**

- Before performing the following procedure, confirm that battery voltage is more than 12.8 V at idle.
- Before performing the following procedure, confirm that all load switches and A/C switch are turned OFF.

>> GO TO 2.

## 2.perform component function check

#### (E)With CONSULT-III

- Start engine and let it idle.
- Select "BAT CUR SEN" in "DATA MONITOR" mode with CONSULT-III.
- Check "BAT CUR SEN" indication for 10 seconds.
  - "BAT CUR SEN" should be above 2,300mV at least once.

#### **⊗Without CONSULT-III**

- Start engine and let it idle.
- 2. Check voltage between ECM harness connector terminals under the following conditions.

Revision: 2009 September EC-368 2010 Murano

ECM			
Connector	+	-	Voltage (V)
Connector	Terminal	Terminal	
F8	42 (Battery current sensor signal)	44 (Sensor ground)	Above 2.3 at least once

EC

D

Е

F

Α

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to <u>EC-369</u>. "<u>Diagnosis Procedure</u>"

## Diagnosis Procedure

INFOID:0000000005536777

## 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect battery current sensor harness connector.
- Turn ignition switch ON.
- 3. Check the voltage between battery current sensor harness connector and ground.

Battery current sensor		Ground	Voltage (V)
Connector	Terminal	Ground	voltage (v)
F76	1	Ground	Approx. 5

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 3.CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	rrent sensor	E	CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F76	2	F8	44	Existed

N

K

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 4.CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	Battery current sensor		СМ	Continuity
Connector	Terminal	Connector Terminal		Continuity
F76	3	F8	42	Existed

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

Revision: 2009 September

#### P1554 BATTERY CURRENT SENSOR

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 5. CHECK BATTERY CURRENT SENSOR

Refer to EC-370, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace battery negative cable assembly.

## 6. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END


## Component Inspection

INFOID:0000000005536778

# 1. CHECK BATTERY CURRENT SENSOR

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable (1).
- <: Vehicle front
- ←: To body ground
- 4. Install jumper cable (A) between battery negative terminal and body ground.
- 5. Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector terminals under the following conditions.

Connector	+	_	Voltage (V)
Connector	Terminal	Terminal	
F8	42 (Battery current sensor signal)	44 (Sensor ground)	Approx. 2.5

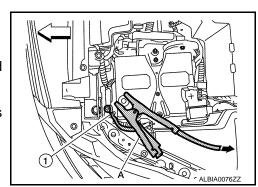

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

#### P1564 ASCD STEERING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

D

Е

Н

K

N

Р

### P1564 ASCD STEERING SWITCH

Description INFOID:0000000005536779

ASCD steering switch has variant values of electrical resistance for each button. ECM reads voltage variation of switch, and determines which button is operated.

Refer to EC-52, "System Diagram" for the ASCD function.

DTC Logic

#### DTC DETECTION LOGIC

NOTE:

If DTC P1564 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-340, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1564	ASCD steering switch	<ul> <li>An excessively high voltage signal from the ASCD steering switch is sent to ECM.</li> <li>ECM detects that input signal from the ASCD steering switch is out of the specified range.</li> <li>ECM detects that the ASCD steering switch is stuck ON.</li> </ul>	Harness or connectors     (The switch circuit is open or shorted.)     ASCD steering switch     ECM

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2.perform dtc confirmation procedure

- 1. Turn ignition switch ON and wait at least 10 seconds.
- 2. Press MAIN switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 3. Press CANCEL switch for at least 10 seconds, then release it and wait at least 10 seconds.
- Press RESUME/ACCELERATE switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 5. Press SET/COAST switch for at least 10 seconds, then release it and wait at least 10 seconds.
- Check DTC.

#### Is DTC detected?

YES >> Go to EC-371, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

## 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2.CHECK ASCD STEERING SWITCH CIRCUIT

#### With CONSULT-III

Revision: 2009 September

EC-371

2010 Murano

INFOID:0000000005536781

#### < DTC/CIRCUIT DIAGNOSIS >

- 1. Turn ignition switch ON.
- Select "MAIN SW", "CANCEL SW", "RESUME/ACC SW" and "SET SW" in "DATA MONITOR" mode with CONSULT-III.
- 3. Check each item indication under the following conditions.

Monitor item	Condition		Indication
MAIN SW	MAINIit-l-	Pressed	ON
MAIN SW	MAIN switch	Released	OFF
CANCEL SW	CANCEL switch	Pressed	ON
CANCEL SW		Released	OFF
RESUME/ACC SW	RESUME/ACCEL- ERATE switch	Pressed	ON
RESONIE/ACC SW		Released	OFF
SET SW	SET/COAST switch	Pressed	ON
		Released	OFF

#### **⋈** Without CONSULT-III

- 1. Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector terminals under the following conditions.

	ECM			
Con-	+	_	Condition	Voltage (V)
nector	ector Terminal Terminal			
	85 92 E16 (ASCD steering switch signal) (ASCD steering switch ground)	MAIN switch: Pressed	Approx. 0	
		85 92	CANCEL switch: Pressed	Approx. 1
E16		SET/COAST switch: Pressed	Approx. 2	
		signal) ground)	RESUME/ACCELERATE switch: Pressed	Approx. 3
			All ASCD steering switches: Released	Approx. 4

#### Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 3.

# 3.CHECK ASCD STEERING SWITCH GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect combination switch harness connector.
- 4. Check the continuity between combination switch and ECM harness connector.

Combination switch	E	Continuity	
Terminal	Connector Terminal		Continuity
16	E16	92	Existed

5. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 5. NO >> GO TO 4.

## 4. DETECT MALFUNCTIONING PART

#### Check the following.

- Harness connectors M77, E105
- Combination switch (spiral cable)
- Harness for open and short between ECM and combination switch

>> Repair open circuit, short to ground or short to power in harness or connectors.

#### P1564 ASCD STEERING SWITCH

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

# ${f 5.}$ CHECK ASCD STEERING SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between combination switch and ECM harness connector.

Combination switch	E	Continuity	
Terminal	Connector Terminal		Continuity
13	E16	85	Existed

2. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

>> GO TO 7. NO >> GO TO 6.

6.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M77, E105
- Combination switch (spiral cable)
- Harness for open and short between ECM and combination switch

>> Repair open circuit, short to ground or short to power in harness or connectors.

## 7. CHECK ASCD STEERING SWITCH

Refer to EC-373, "Component Inspection",

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace ASCD steering switch.

#### $oldsymbol{8}.$ CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

## Component Inspection

INFOID:0000000005536782

## 1. CHECK ASCD STEERING SWITCH

- Turn ignition switch OFF.
- Disconnect combination switch (spiral cable) harness connector.
- Check resistance between combination switch harness connector terminals as per the following.

Combination switch		Condition	Resistance (Ω)	
Connector	Terminals	Conducti	116313161166 (22)	
		MAIN switch: Pressed	Approx. 0	
		CANCEL switch: Pressed	Approx. 250	
M33	13 and 16	SET/COAST switch: Pressed	Approx. 660	
		RESUME/ACCELERATE switch: Pressed	Approx. 1,480	
		All ASCD steering switches: Released	Approx. 4,000	

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD steering switch

**EC-373** 

EC

D

F

Н

L

M

N

Р

2010 Murano

Revision: 2009 September

[VQ35DE]

## P1572 ASCD BRAKE SWITCH

**Description** 

When the brake pedal is depressed, ASCD brake switch is turned OFF and stop lamp switch is turned ON. ECM detects the state of the brake pedal by those two types of input (ON/OFF signal). Refer to <u>EC-52</u>, "System <u>Diagram"</u> for the ASCD function.

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

- If DTC P1572 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-340, "DTC Logic".
- This self-diagnosis has the one trip detection logic. When malfunction A is detected, DTC is not stored in ECM memory. And in that case, 1st trip DTC and 1st trip freeze frame data are displayed.
   1st trip DTC is erased when ignition switch is turned OFF. And even when malfunction A is detected in two consecutive trips, DTC is not stored in ECM memory.

DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
		A)	When the vehicle speed is above 30 km/h (19 MPH), ON signals from the stop lamp switch and the ASCD brake switch are sent to the ECM at the same time.	Harness or connectors     (The stop lamp switch circuit is shorted.)     Harness or connectors     (The ASCD brake switch circuit is shorted.)
P1572	B) E	ASCD brake switch signal is not sent to ECM for extremely long time while the vehicle is being driven.	<ul> <li>Stop lamp switch</li> <li>ASCD brake switch</li> <li>Incorrect stop lamp switch installation</li> <li>Incorrect ASCD brake switch installation</li> <li>ECM</li> </ul>	

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### NOTE:

The procedure for malfunction B is not described. It takes extremely long time to complete the procedure for malfunction B. By performing the procedure for malfunction A, the condition that causes malfunction B can be detected.

>> GO TO 2.

## 2. PERFORM DTC CONFIRMATION PROCEDURE

#### (II) With CONSULT-III

- 1. Start engine (VDC switch OFF).
- Select "DATA MONITOR" mode with CONSULT-III.
- Press MAIN switch and check that CRUISE illuminates.
- 4. Drive the vehicle for at least 5 consecutive seconds under the following conditions.

#### **CAUTION:**

Always drive vehicle at a safe speed.

#### NOTÉ:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

VHCL SPEED SE	More than 30 km/h (19 mph)
Selector lever	Suitable position

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

D

Е

F

Ν

Р

INFOID:0000000005536785

Check 1st trip DTC.

#### With GST

Follow the procedure "With CONSULT-III" above.

#### Is 1st trip DTC detected?

YES >> Go to EC-375, "Diagnosis Procedure".

NO >> GO TO 3.

## 3. PERFORM DTC CONFIRMATION PROCEDURE

#### (II) With CONSULT-III

1. Drive the vehicle for at least 5 consecutive seconds under the following conditions.

#### **CAUTION:**

Always drive vehicle at a safe speed.

#### NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

VHCL SPEED SE

More than 30 km/h (19 mph)

Selector lever

Suitable position

Depress the brake pedal for more than five seconds so as not to come off from the above-mentioned vehicle speed.

#### 2. Check 1st trip DTC.

#### With GST

Follow the procedure "With CONSULT-III" above.

#### Is 1st trip DTC detected?

YES >> Go to EC-375, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

1. CHECK OVERALL FUNCTION-I

## (P) With CONSULT-III

- Turn ignition switch ON.
- Select "BRAKE SW1" in "DATA MONITOR" mode with CONSULT-III.
- 3. Check "BRAKE SW1" indication under the following conditions.

Monitor item	Coi	Indication	
BRAKE SW1	Brake pedal	Slightly depressed	OFF
	Бтаке рецаг	Fully released	ON

#### Without CONSULT-III

- Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector terminals.

ECM						
Connector	+	_	Condition		Condition Voltage	
Connector	Terminal	Terminal				
	110		Slightly depressed		Approx. 0 V	
E16	(ASCD brake switch signal)	112	Brake pedal	Fully released	Battery voltage	

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

Revision: 2009 September

#### < DTC/CIRCUIT DIAGNOSIS >

# 2.CHECK OVERALL FUNCTION-II

#### (II) With CONSULT-III

Check "BRAKE SW2" indication in "DATA MONITOR" mode.

Monitor item	Con	Indication	
BRAKE SW2	Brake pedal	Slightly depressed	ON
	втаке редаг	Fully released	OFF

#### **⋈** Without CONSULT-III

Check the voltage between ECM harness connector terminals.

ECM						
Connector	+	-	Co	Voltage		
Connector	Terminal	Terminal				
	106	440	5	Slightly depressed	Battery voltage	
E16	(Stop lamp switch signal)	112	Brake pedal	Fully released	Approx. 0 V	

#### Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 7.

# 3.CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ASCD brake switch harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between ASCD brake switch harness connector and ground.

ASCD bra	ake switch	Ground	Voltage
Connector	Connector Terminal		voltage
E49	1	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

## 4. DETECT MALFUNCTIONING PART

#### Check the following.

- Fuse block (J/B) connector E103
- 10 A fuse (No. 3)
- Harness for open or short between ASCD brake switch and fuse

>> Repair open circuit, short to ground or short to power in harness or connectors.

# $5. \mathsf{CHECK}$ ASCD BRAKE SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between ASCD brake switch harness connector and ECM harness connector.

ASCD brake switch		E	СМ	Continuity
Connector	Terminal	Connector Terminal		Continuity
E49	2	E16	110	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

YES >> GO TO 6.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

#### 6.CHECK ASCD BRAKE SWITCH

Refer to EC-378, "Component Inspection (ASCD Brake Switch)"

## Is the inspection result normal?

YES >> GO TO 12.

NO >> Replace ASCD brake switch.

## 7.CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect stop lamp switch harness connector.
- Check the voltage between stop lamp switch harness connector and ground.

Vehicle serial number	Stop lan	np switch	Ground	Voltage	
verlicie seriai riurribei	Connector	Terminal	Giodila		
Up to JN8AZ18U*9W100000					
Up to JN8AZ18U*9W710000	F115	3	Ground	Battery voltage	
Up to JN8AZ18W*9W200000	LIII	3			
Up to JN8AZ18W*9W810000					
From JN8AZ18U*9W100001			Giodila	Battery voltage	
From JN8AZ18U*9W710001	F116	1			
From JN8AZ18W*9W200001	EIIO	'			
From JN8AZ18W*9W810001					

#### Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 8.

#### 8. DETECT MALFUNCTIONING PART

#### Check the following.

- Fuse block (J/B) connector E103
- 10 A fuse (No. 7)
- Harness for open or short between stop lamp switch and battery

>> Repair open circuit, short to ground or short to power in harness or connectors.

# 9.check stop Lamp switch input signal circuit for open and short

- Disconnect ECM harness connector.
- Check the continuity between stop lamp switch harness connector and ECM harness connector.

Vehicle serial number	Stop lamp switch		ECM		Continuity
venicle senai number	Connector	Terminal	Connector	Terminal	Continuity
Up to JN8AZ18U*9W100000					
Up to JN8AZ18U*9W710000	E115	4			Existed
Up to JN8AZ18W*9W200000		4		106	
Up to JN8AZ18W*9W810000			E16		
From JN8AZ18U*9W100001			E10	100	Existed
From JN8AZ18U*9W710001	E440	2			
From JN8AZ18W*9W200001	E110	E116 2			
From JN8AZ18W*9W810001					

3. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

**EC-377** Revision: 2009 September 2010 Murano

EC

Α

D

F

Е

M

Ν

Р

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

YES >> GO TO 11. NO >> GO TO 10.

## 10.DETECT MALFUNCTIONING PART

Check the following.

- Fuse block (J/B) connector E103
- · Harness for open or short between stop lamp switch and ECM
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

## 11. CHECK STOP LAMP SWITCH

Refer to EC-378, "Component Inspection (Stop Lamp Switch)"

#### Is the inspection result normal?

YES >> GO TO 12.

NO >> Replace stop lamp switch.

# 12. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

## Component Inspection (ASCD Brake Switch)

INFOID:0000000005536786

## 1.CHECK ASCD BRAKE SWITCH-I

- 1. Turn ignition switch OFF.
- 2. Disconnect ASCD brake switch harness connector.
- 3. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals		Condition	Continuity
1 and 2	Brake pedal	Fully released	Existed
	Бтаке рецаі	Slightly depressed	Not existed

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2.CHECK ASCD BRAKE SWITCH-II

- 1. Adjust ASCD brake switch installation. Refer to BR-9, "Inspection and Adjustment".
- 2. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals	Condition		Continuity
1 and 2	Brake pedal	Fully released	Existed
i and z		Slightly depressed	Not existed

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD brake switch.

## Component Inspection (Stop Lamp Switch)

INFOID:0000000005536787

## 1. CHECK STOP LAMP SWITCH-I

- Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check harness continuity between stop lamp switch terminals under the following conditions.

**EC-378** 

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

D

Е

G

Н

Vehicle serial number	Terminals	C	Condition	Continuity
Up to JN8AZ18U*9W100000			Fully released	Not existed
Up to JN8AZ18U*9W710000	3 and 4		i ully released	Not existed
Up to JN8AZ18W*9W200000	5 and 4		Slightly depressed	Existed
Up to JN8AZ18W*9W810000		Brake pedal	Oligitity depressed	LXISTEG
From JN8AZ18U*9W100001		brake pedar	Fully released	Not existed
From JN8AZ18U*9W710001	1 and 2		i ully released	Not existed
From JN8AZ18W*9W200001	1 and 2		Slightly depressed	Existed
From JN8AZ18W*9W810001			Slightly depressed	LAISIEU

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2. CHECK STOP LAMP SWITCH-II

- 1. Adjust stop lamp switch installation. Refer to BR-9, "Inspection and Adjustment".
- 2. Check harness continuity between stop lamp switch terminals under the following conditions.

Vehicle serial number	Terminals	Condition		Continuity	
Up to JN8AZ18U*9W100000			Fully released	Not existed	
Up to JN8AZ18U*9W710000	3 and 4		i ully released	Not existed	
Up to JN8AZ18W*9W200000	3 and 4		Slightly depressed	Fxisted	
Up to JN8AZ18W*9W810000		Brake pedal	Olightiy depressed	Existed	
From JN8AZ18U*9W100001			Diake pedai	Fully released	Not existed
From JN8AZ18U*9W710001	1 and 2		i ully released	Not existed	
From JN8AZ18W*9W200001	i aliu z		Slightly depressed	Existed	
From JN8AZ18W*9W810001			Slightly depressed	LXISIEU	

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch.

I

K

L

M

Ν

0

Р

[VQ35DE]

## P1574 ASCD VEHICLE SPEED SENSOR

Description INFOID:0000000005536788

The ECM receives two vehicle speed signals via CAN communication line. One is sent from combination meter, and the other is from TCM (Transmission control module). The ECM uses these signals for ASCD control. Refer to <u>EC-52</u>, "System <u>Diagram"</u> for ASCD functions.

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

- If DTC P1574 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1574 is displayed with DTC P0500, first perform the trouble diagnosis for DTC P0500. Refer to EC-327, "DTC Logic".
- If DTC P1574 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-340, "DTC Logic".
- If DTC P1574 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-342, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1574	ASCD vehicle speed sensor	The difference the between two vehicle speed signals is out of the specified range.	Harness or connectors     (The CAN communication line is open or shorted.)     Combination meter     ABS actuator and electric unit (control unit)     Wheel sensor     TCM     ECM

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

## 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine (VDC switch OFF).
- Drive the vehicle at more than 40 km/h (25 MPH).

#### **CAUTION:**

Always drive vehicle at a safe speed.

#### NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

3. Check DTC.

#### Is DTC detected?

YES >> Go to EC-380, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536790

## 1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-34, "Diagnosis Description".

Is the inspection result normal?

Revision: 2009 September EC-380 2010 Murano

P1574 ASCD VEHICLE SPEED SENSOR		
< DTC/CIRCUIT DIAGNOSIS >	[VQ35DE]	
YES >> GO TO 2. NO >> Perform trouble shooting relevant to DTC indicated.		А
2.CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"		
Refer to BRC-28, "CONSULT-III Function".		F-0
Is the inspection result normal?		EC
YES >> GO TO 3. NO >> Repair or replace malfunctioning part.		
NO >> Repair or replace malfunctioning part.  3.CHECK COMBINATION METER FUNCTION		С
Refer to MWI-34, "CONSULT-III Function (METER/M&A)".		
Refer to WWY-34, CONSOLI-III T UNCTION (WETER/WAA).		D
>> INSPECTION END		
		Е
		_
		_
		F
		G
		Н
		I
		J
		0
		1.6
		K
		L
		M
		Ν
		0
		Р

EC-381 Revision: 2009 September 2010 Murano

## P1700 CVT CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## P1700 CVT CONTROL SYSTEM

Description INFOID:000000005536791

This DTC is displayed with other DTC regarding TCM. Perform the trouble diagnosis for corresponding DTC. Refer to <a href="EC-498">EC-498</a>, "DTC Index". When this DTC is detected, the ASCD control is canceled.

## P1715 INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## P1715 INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)

Description INFOID:0000000005536792

ECM receives input speed sensor signal from TCM via the CAN communication line. ECM uses this signal for engine control.

INFOID:0000000005536793

Α

EC

D

K

N

INFOID:0000000005536794

DTC Logic

#### DTC DETECTION LOGIC

#### NOTE:

- If DTC P1715 is displayed with DTC UXXXX first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1715 is displayed with DTC P0335, first perform the trouble diagnosis for DTC P0335. Refer to EC-254, "DTC Logic".
- If DTC P1715 is displayed with DTC P0340, P0345, first perform the trouble diagnosis for DTC P0340, P0345. Refer to EC-258, "DTC Logic".
- If DTC P1715 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-340, "DTC Logic".
- If DTC P1715 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-342. "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1715	Input speed sensor (TCM output)	Input speed sensor signal is different from the theoretical value calculated by ECM from output speed sensor signal and engine rpm signal.	Harness or connectors     (The CAN communication line is open or shorted)     Harness or connectors     (Input speed sensor circuit is open or shorted)     TCM

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2. 2.perform dtc confirmation procedure

- Start engine. 2. Drive vehicle at a speed of more than 50 km/h (31 MPH) for at least 5 seconds.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

>> Go to EC-383, "Diagnosis Procedure". YES

>> INSPECTION END NO

## Diagnosis Procedure

## 1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-122, "DTC Index".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble shooting relevant to DTC indicated.

## 2.replace ${\sf TCM}$

Replace TCM. Refer to TM-160, "Exploded View".

# P1715 INPUT SPEED SENSOR (PRIMARY SPEED SENSOR)

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

>> INSPECTION END

[VQ35DE]

#### P1720 VSS

Description INFOID:0000000005536795

ECM receives two vehicle speed signals via the CAN communication line. One is sent from "ABS actuator and electric unit (control unit)" via combination meter, and the other is from TCM (Transmission control module). ECM uses these signals for engine control.

EC

Α

DTC Logic

INFOID:0000000005536796

#### DTC DETECTION LOGIC

NOTE:

D

Е

F

Н

K

M

N

Р

- If DTC P1720 is displayed with DTC UXXXX first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1720 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-342</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1720	Vehicle speed sensor (TCM output)	The difference between two vehicle speed signals is out of the specified range.	Harness or connectors     (Output speed sensor circuit is open or shorted.)     Harness or connectors     (Wheel sensor circuit is open or shorted.)     TCM     Output speed sensor     ABS actuator and electric unit (control unit)     Wheel sensor     Combination meter

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

## 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine.
- Drive vehicle at a speed of 20 km/h (12 MPH) or more for at least 5 seconds without depressing the brake pedal depressing.
- Check 1st trip DTC.

#### Is 1st trip DTC detected?

YES >> Go to EC-385, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536797

## 1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-122, "DTC Index".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble shooting relevant to DTC indicated.

## 2.CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Refer to BRC-96, "DTC No. Index".

Is the inspection result normal?

Revision: 2009 September EC-385 2010 Murano

YES >> GO TO 3.

NO >> perform trouble shooting relevant to DTC indicated.

3. CHECK COMBINATION METER FUNCTION

Refer to MWI-76, "DTC Index".

>> INSPECTION END

#### P1800 VIAS CONTROL SOLENOID VALVE 1

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

INFOID:0000000005536799

## P1800 VIAS CONTROL SOLENOID VALVE 1

Description INFOID:0000000005536798

The VIAS control solenoid valve 1 cuts the intake manifold vacuum signal for power valve 1 control. It responds to ON/OFF signals from the ECM. When the solenoid is OFF, the vacuum signal from the intake manifold is cut. When the ECM sends an ON signal the coil pulls the plunger downward and sends the vacuum signal to the power valve actuator 1.

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1800	VIAS control solenoid valve 1 circuit	An excessively low or high voltage signal is sent to ECM through the VIAS control solenoid valve 1.	<ul> <li>Harness or connectors         (The solenoid valve 1 circuit is open or shorted.)     </li> <li>VIAS control solenoid valve 1</li> </ul>

#### DTC CONFIRMATION PROCEDURE

## 1.CONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

# 2.perform dtc confirmation procedure

- Start engine and let it idle for at least 5 seconds.
- Check 1st trip DTC.

## Is 1st trip DTC detected?

>> Go to EC-387, "Diagnosis Procedure". YES

>> INSPECTION END NO

## Diagnosis Procedure

# 1. CHECK VIAS CONTROL SOLENOID VALVE 1 POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect VIAS control solenoid valve 1 harness connector.
- Turn ignition switch ON.
- Check the voltage between VIAS control solenoid valve 1 harness connector and ground.

VIAS control solenoid valve 1		Ground	Voltage
Connector	Terminal	Giodila	voltage
F74	1	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 2.check vias control solenoid valve 1 output signal circuit for open and short

- Turn ignition switch OFF.
- Disconnect ECM harness connector.

**EC-387** 

EC

Α

D

Н

INFOID:0000000005536800

M

N

Р

2010 Murano

#### P1800 VIAS CONTROL SOLENOID VALVE 1

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Check the continuity between VIAS control solenoid valve 1 harness connector and ECM harness connector.

VIAS control s	olenoid valve 1	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F74	2	F7	27	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 3. CHECK VIAS CONTROL SOLENOID VALVE 1

Refer to EC-388, "Component Inspection".

## Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace VIAS control solenoid valve 1.

## 4. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

## >> INSPECTION END

# Component Inspection


INFOID:0000000005536801

## 1. CHECK VIAS CONTROL SOLENOID VALVE 1

#### (P)With CONSULT-III

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Disconnect vacuum hoses connected to VIAS control solenoid valve 1.
- 4. Turn ignition switch ON.
- 5. Select "VIAS S/V-1" in "ACTIVE TEST" mode with CONSULT-III.
- 6. Check air passage continuity and operation delay time under the following conditions.

Condition (VIAS S/V-1)	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
ON	Existed	Not existed
OFF	Not existed	Existed

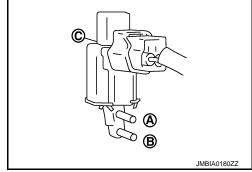

#### **⋈**Without CONSULT-III

- 1. Turn ignition switch OFF.
- 2. Disconnect VIAS control solenoid valve 1 harness connector.
- 3. Disconnect vacuum hoses connected to VIAS volume control solenoid valve 1.

## P1800 VIAS CONTROL SOLENOID VALVE 1

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

4. Check air passage continuity and operation delay time under the following conditions.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12 V direct current supply between terminals 1 and 2	Existed	Not existed
No supply	Not existed	Existed

# FUSE BAT PBIB2532E

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace VIAS control solenoid valve 1

D

Е

Α

EC

C

F

G

Н

J

K

L

M

Ν

0

Ρ

[VQ35DE]

## P1801 VIAS CONTROL SOLENOID VALVE 2

**Description** 

The VIAS control solenoid valve 2 cuts the intake manifold vacuum signal for power valve 2 control. It responds to ON/OFF signals from the ECM. When the solenoid is OFF, the vacuum signal from the intake manifold is cut. When the ECM sends an ON signal the coil pulls the plunger downward and sends the vacuum signal to the power valve actuator 2.

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1801	VIAS control solenoid valve 2 circuit	An excessively low or high voltage signal is sent to ECM through the VIAS control solenoid valve 2.	Harness or connectors     (The solenoid valve 2 circuit is open or shorted.)     VIAS control solenoid valve 2

#### DTC CONFIRMATION PROCEDURE

## 1.CONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 5 seconds.
- 2. Check 1st trip DTC.

## Is 1st trip DTC detected?

YES >> Go to EC-390, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536804

## 1. CHECK VIAS CONTROL SOLENOID VALVE 2 POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect VIAS control solenoid valve 2 harness connector.
- Turn ignition switch ON.
- Check the voltage between VIAS control solenoid valve 2 harness connector and ground.

VIAS control s	olenoid valve 2	Ground	Voltage
Connector Terminal		Giodila	voltage
F75	1	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 2.CHECK VIAS CONTROL SOLENOID VALVE 2 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.

#### P1801 VIAS CONTROL SOLENOID VALVE 2

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Check the continuity between VIAS control solenoid valve 2 harness connector and ECM harness connector.

VIAS control s	olenoid valve 2	E	Continuity	
Connector Terminal		Connector Terminal		Continuity
F75	2	F7	26	Existed

EC

Α

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

3.CHECK VIAS CONTROL SOLENOID VALVE 2

Refer to EC-391, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace VIAS control solenoid valve 2.

4. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

## Component Inspection


INFOID:0000000005536805

## 1. CHECK VIAS CONTROL SOLENOID VALVE 2

#### (P)With CONSULT-III

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Disconnect vacuum hoses connected to VIAS control solenoid valve 2.
- 4. Turn ignition switch ON.
- 5. Select "VIAS S/V-2" in "ACTIVE TEST" mode with CONSULT-III.
- 6. Check air passage continuity and operation delay time under the following conditions.

Condition (VIAS S/V-2)	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
ON	Existed	Not existed
OFF	Not existed	Existed

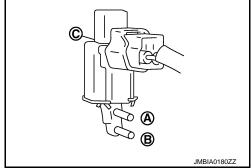

#### Without CONSULT-III

- Turn ignition switch OFF.
- 2. Disconnect VIAS control solenoid valve 2 harness connector.
- 3. Disconnect vacuum hoses connected to VIAS volume control solenoid valve 2.

**EC-391** 

F

Е

D

G

K

\_

IVI

Р


## P1801 VIAS CONTROL SOLENOID VALVE 2

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

 Check air passage continuity and operation delay time under the following conditions.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)	
12 V direct current supply between terminals 1 and 2	Existed	Not existed	
No supply	Not existed	Existed	

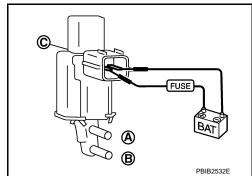

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace VIAS control solenoid valve 2

#### P1805 BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## P1805 BRAKE SWITCH

**Description** 

Brake switch signal is applied to the ECM through the stop lamp switch when the brake pedal is depressed. This signal is used mainly to decrease the engine speed when the vehicle is being driven.

EC

D

Е

F

Н

Α

**DTC** Logic

INFOID:0000000005536807

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1805	Brake switch	A brake switch signal is not sent to ECM for extremely long time while the vehicle is being driven.	(Stop Jamp switch circuit is open or sport-

DTC CONFIRMATION PROCEDURE

# 1. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- 2. Fully depress the brake pedal for at least 5 seconds.
- Erase the DTC.
- Check 1st trip DTC.

## Is 1st trip DTC detected?

YES >> Go to EC-393, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536808

# 1. CHECK STOP LAMP SWITCH CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Check the stop lamp when depressing and releasing the brake pedal.

Brake pedal	Stop lamp
Fully released	Not illuminated
Slightly depressed	Illuminated

#### Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 2.

M

K

# 2.CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

- 1. Disconnect stop lamp switch harness connector.
- 2. Check the voltage between stop lamp switch harness connector and ground.

Ν

Р

2010 Murano

Vehicle serial number	Stop lan	np switch	Ground	Voltage
veriicie seriai ridiribei	Connector	Terminal	Giodila	voltage
Up to JN8AZ18U*9W100000				
Up to JN8AZ18U*9W710000	F115	3	Ground	Battery voltage
Up to JN8AZ18W*9W200000	LIII			
Up to JN8AZ18W*9W810000				
From JN8AZ18U*9W100001			Giodila	Ballery Vollage
From JN8AZ18U*9W710001	F116	1		
From JN8AZ18W*9W200001	LIIO	'		
From JN8AZ18W*9W810001				

#### Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

## 3.DETECT MALFUNCTIONING PART

#### Check the following.

- Fuse block (J/B) connector E103
- 10 A fuse (No. 7)
- Harness for open or short between battery and stop lamp switch

>> Repair open circuit, short to ground or short to power in harness or connectors.

# 4. CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect stop lamp switch harness connector.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between stop lamp switch harness connector and ECM harness connector.

Vehicle serial number	Stop lamp switch		ECM		Continuity
veriicie seriai riuriibei	Connector	Terminal	Connector	Terminal	Continuity
Up to JN8AZ18U*9W100000					
Up to JN8AZ18U*9W710000	E115	4	E16	106	Existed
Up to JN8AZ18W*9W200000					
Up to JN8AZ18W*9W810000					
From JN8AZ18U*9W100001	E116		E10		
From JN8AZ18U*9W710001		2			
From JN8AZ18W*9W200001		2			
From JN8AZ18W*9W810001					

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

## 5. DETECT MALFUNCTIONING PART

#### Check the following.

- Fuse block (J/B) connector E103
- Harness for open or short between ECM and stop lamp switch
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

## 6.CHECK STOP LAMP SWITCH

Refer to EC-395, "Component Inspection (Stop Lamp Switch)".

#### P1805 BRAKE SWITCH

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace stop lamp switch.

# 7. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

INFOID:0000000005536809

#### >> INSPECTION END

## Component Inspection (Stop Lamp Switch)

# 1. CHECK STOP LAMP SWITCH-I

- Turn ignition switch OFF.
- Disconnect stop lamp switch harness connector. 2.
- Check harness continuity between stop lamp switch terminals under the following conditions.

Vehicle serial number	Terminals	C	Condition	
Up to JN8AZ18U*9W100000			Fully released	Not existed
Up to JN8AZ18U*9W710000	3 and 4		rully released	Not existed
Up to JN8AZ18W*9W200000	5 and 4		Slightly depressed	Existed
Up to JN8AZ18W*9W810000		Brake pedal	Oligitity depressed	LAISIEU
From JN8AZ18U*9W100001	Brake peda	biake pedai	Fully released	Not existed
From JN8AZ18U*9W710001	1 and 2		Fully released	Not existed
From JN8AZ18W*9W200001	i aliu z		Slightly depressed	Existed
From JN8AZ18W*9W810001			Slightly depressed	LAISIEU

#### Is the inspection result normal?

YES >> INSPECTION END

>> GO TO 2. NO

# 2.CHECK STOP LAMP SWITCH-II

- Adjust stop lamp switch installation. Refer to BR-9, "Inspection and Adjustment".
- Check harness continuity between stop lamp switch terminals under the following conditions.

Vehicle serial number	Terminals	C	Condition	
Up to JN8AZ18U*9W100000			Fully released	Not existed
Up to JN8AZ18U*9W710000	3 and 4	3 and 4	i ully released	INOL GAISIEU
Up to JN8AZ18W*9W200000	3 and 4		Slightly depressed	Existed
Up to JN8AZ18W*9W810000		Brake pedal	Slightly depressed	LXISIEU
From JN8AZ18U*9W100001	Brake pedal	brake pedar	Fully released	Not existed
From JN8AZ18U*9W710001	1 and 2		Fully released	Not existed
From JN8AZ18W*9W200001	i aliu Z		Slightly depressed	Existed
From JN8AZ18W*9W810001			Slightly depressed	Existed

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch.

**EC-395** Revision: 2009 September 2010 Murano

EC

Α

D

Е

F

Н

K

Ν

Р

[VQ35DE]

## P2100, P2103 THROTTLE CONTROL MOTOR RELAY

Description INFOID:0000000005536810

Power supply for the throttle control motor is provided to the ECM via throttle control motor relay. The throttle control motor relay is controlled ON/OFF by the ECM. When the ignition switch is turned ON, the ECM sends an ON signal to throttle control motor relay and battery voltage is provided to the ECM. When the ignition switch is turned OFF, the ECM sends an OFF signal to throttle control motor relay and battery voltage is not provided to the ECM.

DTC Logic

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2100	Throttle control motor relay circuit open	ECM detects that the voltage of power source for throttle control motor is excessively low.	Harness or connectors     (Throttle control motor relay circuit is open)     Throttle control motor relay
P2103	Throttle control motor relay circuit short	ECM detects that the throttle control motor relay is stuck ON.	Harness or connectors     (Throttle control motor relay circuit is shorted)     Throttle control motor relay

#### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 8 V.

#### Witch DTC is detected?

P2100 >> GO TO 2.

P2103 >> GO TO 3.

## 2.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P2100

- 1. Turn ignition switch ON and wait at least 2 seconds.
- 2. Start engine and let it idle for 5 seconds.
- Check DTC.

#### Is DTC detected?

YES >> Go to EC-396, "Diagnosis Procedure".

NO >> INSPECTION END

## 3.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P2103

- 1. Turn ignition switch ON and wait at least 1 second.
- Check DTC.

#### Is DTC detected?

YES >> Go to EC-396, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536812

## 1. CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.

Revision: 2009 September EC-396 2010 Murano

## P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

3. Disconnect IPDM E/R harness connector.

4. Check the continuity between IPDM E/R harness connector and ECM harness connector.

IPDI	M E/R	/R ECM		Continuity	
Connector	Terminal	Connector Terminal		Continuity	
F12	70	F7	15	Existed	

5. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 2.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

1. Check the continuity between IPDM E/R harness connector and ECM harness connector.

IPDI	M E/R	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F12	54	F7	2	Existed

2. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 3. CHECK FUSE

- 1. Disconnect 15 A fuse (No. 51) from IPDM E/R.
- 2. Check if 15 A fuse is blown.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace 15 A fuse.

### 4. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

### Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace harness or connectors.

EC

Α

C

D

Е

F

Н

J

K

ı

IVI

Ν

Р

### P2101 ELECTRIC THROTTLE CONTROL FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## P2101 ELECTRIC THROTTLE CONTROL FUNCTION

Description INFOID.000000005536813

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The current opening angle of the throttle valve is detected by the throttle position sensor. The throttle position sensor provides feedback to the ECM, when opens/closes the throttle valve in response to driving conditions via the throttle control motor.

DTC Logic

### DTC DETECTION LOGIC

#### NOTE:

If DTC P2101 is displayed with DTC P2100, first perform the trouble diagnosis for DTC P2100. Refer to EC-396, "DTC Logic".

If DTC P2101 is displayed with DTC 2119, first perform the trouble diagnosis for DTC P2119. Refer to EC-405, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2101	Electric throttle control performance	Electric throttle control function does not operate properly.	Harness or connectors     (Throttle control motor circuit is open or shorted)     Electric throttle control actuator

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 11 V when engine is running.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 2 seconds.
- 2. Start engine and let it idle for 5 seconds.
- Check DTC.

#### Is DTC detected?

YES >> Go to EC-398, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536815

# 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-I

1. Check the voltage between ECM harness connector terminals.

### P2101 ELECTRIC THROTTLE CONTROL FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

	EC	M					
+		_		_		Condition	Voltage
Connector	Terminal	Condition	Terminal				
F7	2	E16	112	Ignition switch OFF	Approx. 0 V		
	2	LIO	112	Ignition switch ON	Battery voltage		

EC

Α

### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 3.

# 3.CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- Check the continuity between IPDM E/R harness connector and ECM harness connector.

IPDM E/R		ECM		Continuity	
Connector	Terminal	Connector Terminal		Continuity	
F12	70	F7	15	Existed	

5. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

Check the continuity between IPDM E/R harness connector and ECM harness connector.

IPDI	M E/R	ECM		Continuity	
Connector	Terminal	Connector Terminal		Continuity	
F12	54	F7	2	Existed	

Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## $\mathbf{5}.$ CHECK FUSE

- Disconnect 15 A fuse (No. 51) from IPDM E/R.
- Check if 15 A fuse is blown.

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace 15 A fuse.

## 6.CHECK INTERMITTENT INCIDENT

### Refer to GI-39, "Intermittent Incident".

### Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace harness or connectors.

# 7.CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

- Turn ignition switch OFF.
- 2. Disconnect electric throttle control actuator harness connector.
- Disconnect ECM harness connector.
- 4. Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

D

F

Е

N

Р

Electric throttle control actuator **ECM** Continuity Connector **Terminal** Connector **Terminal** 5 Not existed 5 Existed 6 F29 F7 5 Existed 6 Not existed

Also check harness for short to ground and short to power.

### Is the inspection result normal?

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 8.

NO >> Repair or replace malfunctioning part.

# 8.CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY


- Remove the intake air duct.
- 2. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)
- ⟨□: Vehicle front

### Is the inspection result normal?

YES >> GO TO 9.

NO

>> Remove the foreign matter and clean the electric throttle control actuator inside.

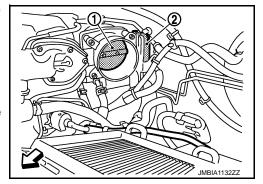

## 9. CHECK THROTTLE CONTROL MOTOR

Refer to EC-400, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 11.

# 10.check intermittent incident

Refer to GI-39, "Intermittent Incident".

#### Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace harness or connectors.

# 11. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- Replace electric throttle control actuator.
- Refer to EC-401, "Special Repair Requirement".

### >> INSPECTION END

# Component Inspection

INFOID:0000000005536816

[VQ35DE]

# 1. CHECK THROTTLE CONTROL MOTOR

- Turn ignition switch OFF.
- Disconnect electric throttle control actuator harness connector.
- Check resistance between electric throttle control actuator terminals as per the following.

	Resistance
5 and 6	Approx. 1 - 15 Ω [at 25°C (77°F)]

## Is the inspection result normal?

## P2101 ELECTRIC THROTTLE CONTROL FUNCTION

[VQ35DE] < DTC/CIRCUIT DIAGNOSIS > YES >> INSPECTION END NO >> GO TO 2. Α 2.replace electric throttle control actuator Replace electric throttle control actuator. EC 2. Go to EC-401, "Special Repair Requirement". >> INSPECTION END Special Repair Requirement INFOID:0000000005536817 1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING D Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement" Е >> GO TO 2. 2.PERFORM IDLE AIR VOLUME LEARNING Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement" F >> END Н K L M Ν Р

[VQ35DE]

## P2118 THROTTLE CONTROL MOTOR

Description INFOID.000000005536818

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The current opening angle of the throttle valve is detected by the throttle position sensor. The throttle position sensor provides feedback to the ECM, when opens/closes the throttle valve in response to driving conditions via the throttle control motor.

DTC Logic

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2118	Throttle control motor circuit short	ECM detects short in both circuits between ECM and throttle control motor.	Harness or connectors     (Throttle control motor circuit is shorted.)     Electric throttle control actuator     (Throttle control motor)

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 2 seconds.
- 2. Start engine and let it idle for 5 seconds.
- Check DTC.

### Is DTC detected?

YES >> Go to EC-402, "Diagnosis Procedure".

NO >> INSPECTION END

# Diagnosis Procedure

INFOID:0000000005536820

# 1. CHECK GROUND CONNECTIONS

- Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connections.

# 2.CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect electric throttle control actuator harness connector.
- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

## **P2118 THROTTLE CONTROL MOTOR**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Electric throttle	control actuator	EC	М	Continuity	
Connector	Terminal	Connector	Terminal	Continuity	<u>-</u>
	5		5	Not existed	
F29	5	F7	6	Existed	
F29	6	- F/	5	Existed	
	6		6	Not existed	
4. Also ched	k harness for	short to ground	d and short to	power.	
•	on result norr	nal?			
-	O TO 3.	16 6			
_		ce malfunctioni	• .		
		NTROL MOTO			
		ent Inspection".			
	on result norn	nal?			
	60 TO 4. 60 TO 5.				
4	TERMITTEN <sup>-</sup>	T INCIDENT			
· · · · · · · · · · · · · · · · · · ·	0, "Intermitten				
-	on result norr	<u>nai?</u>			
		ce harness or o	connectors.		
_		HROTTLE CO		JATOR	
		e control actuat			
		Repair Requir			
>> 11	ISPECTION I	END			
Componen	t Inspectio	n			INFOID:000000005536821
<b>1.</b> CHECK TH	HROTTLE CO	NTROL MOTO	)R		
1. Turn ianit	ion switch OF				
2. Disconne	ct electric thro	ottle control act			
3. Check res	sistance betw	een electric thr	ottle control a	ctuator terminals as per the f	following.
<del>-</del> -					
Termina			esistance		
5 and			15 Ω [at 25°C (77	°F)]	
•	on result norr				
	NSPECTION I O TO 2.	END			
_		HROTTLE CO	NTROL ACTI	IATOR	
				7.11 011	
		e control actuat Repair Requir			
>> 11	SPECTION E	END			
Special Re	pair Requi	rement			INFOID:0000000005536822
•					
•	1 THROTTLE	VALVE CLOSE	D POSITION	LEARNING	

## **P2118 THROTTLE CONTROL MOTOR**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

>> GO TO 2.

# $2.\mathsf{PERFORM}$ IDLE AIR VOLUME LEARNING

Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement"

>> END

### P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

Description INFOID:0000000005536823

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The throttle position sensor detects the throttle valve position, and the opening and closing speed of the throttle valve and sends the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and opens/closes the throttle valve in response to driving conditions via the throttle control motor.

**DTC Logic** INFOID:0000000005536824

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
		A)	Electric throttle control actuator does not function properly due to the return spring malfunction.	
P2119	Electric throttle control actuator	B)	Throttle valve opening angle in fail-safe mode is not in specified range.	Electric throttle control actuator
		C)	ECM detects that the throttle valve is stuck open.	

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A AND B

- Turn ignition switch ON and wait at least 1 second.
- Shift selector lever to the D position and wait at least 3 seconds.
- Shift selector lever to the P position.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON and wait at least 1 second.
- Shift selector lever to the D position and wait at least 3 seconds.
- Shift selector lever to the P position. 7.
- Turn ignition switch OFF, wait at least 10 seconds, and then turn ON.
- Check DTC.

### Is DTC detected?

YES >> Go to EC-406, "Diagnosis Procedure".

NO >> GO TO 3.

## 3.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION C

- Turn ignition switch ON and wait at least 1 second.
- Shift selector lever to the D position and wait at least 3 seconds.
- 3. Shift selector lever to the N or P position.
- 4. Start engine and let it idle for 3 seconds.
- 5. Check DTC.

### Is DTC detected?

YES >> Go to EC-406, "Diagnosis Procedure".

NO >> INSPECTION END

Revision: 2009 September

**EC-405** 

EC

Α

D

Е

Н

K

N

## P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## Diagnosis Procedure

INFOID:0000000005536825

# 1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY


- 1. Turn ignition switch OFF.
- 2. Remove the intake air duct.
- 3. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)
- <□: Vehicle front</p>

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Remove

>> Remove the foreign matter and clean the electric throttle control actuator inside.

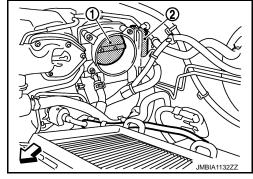

# 2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Go to EC-356, "Special Repair Requirement".

>> INSPECTION END

## Special Repair Requirement

INFOID:0000000005536826

# 1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement"

>> GO TO 2.

# 2. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement"

>> END

[VQ35DE]


# P2122, P2123 APP SENSOR

Description INFOID:0000000005536827

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometer which transform the accelerator pedal position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for engine operations such as fuel cut.

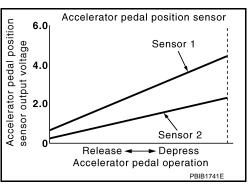

**DTC Logic** INFOID:0000000005536828

### DTC DETECTION LOGIC

If DTC P2122 or P2123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-343, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2122	Accelerator pedal position sensor 1 circuit low input	An excessively low voltage from the APP sensor 1 is sent to ECM.	Harness or connectors     (APP sensor 1 circuit is open or shorted.)
P2123	Accelerator pedal position sensor 1 circuit high input	An excessively high voltage from the APP sensor 1 is sent to ECM.	Accelerator pedal position sensor (APP sensor 1)

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

#### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

# 2.perform dtc confirmation procedure

- Start engine and let it idle for 1 second.
- 2. Check DTC.

### Is DTC detected?

YES >> Go to EC-407, "Diagnosis Procedure".

>> INSPECTION END NO

## Diagnosis Procedure

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

Is the inspection result normal?

**EC-407** Revision: 2009 September 2010 Murano

EC

Α

Е

Н

Ν

INFOID:0000000005536829

### < DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect accelerator pedal position (APP) sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between APP sensor harness connector and ground.

APP	sensor	Ground	Voltage (V)	
Connector	Connector Terminal		voltage (v)	
E110	4	Ground	Approx. 5	

## Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.CHECK APP SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between APP sensor harness connector and ECM harness connector.

APP :	APP sensor		ECM		
Connector	Terminal	Connector Terminal		Continuity	
E110	2	E16	84	Existed	

4. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4. CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between APP sensor harness connector and ECM harness connector.

APP :	APP sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
E110	3	E16	81	Existed

2. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 5. CHECK APP SENSOR

Refer to EC-409, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

## **6.**REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- Refer to <u>EC-409</u>, "Special Repair Requirement".

### >> INSPECTION END

## 7. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

## **P2122, P2123 APP SENSOR**

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

>> INSPECTION END

## Component Inspection

INFOID:0000000005536830

Α

EC

D

Е

F

# 1. CHECK ACCELERATOR PEDAL POSITION SENSOR

- Reconnect all harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Check the voltage between ECM harness connector terminals under the following conditions.

	ECM						
+		-		Condition		Voltage (V)	
Connector	Terminal	Connector	Terminal				
	81		84		Fully released	0.5 - 1.0	
E16	E16 (APP sensor 1 signal) 82	E16	(Sensor ground)	A coolerator padal	Fully depressed	4.2 - 4.8	
E10		100		Accelerator pedal	Fully released	0.25 - 0.50	
	(APP sensor 2 sig- nal)		(Sensor ground)		Fully depressed	2.0 - 2.5	

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2. REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- 2. Go to EC-409, "Special Repair Requirement".

>> INSPECTION END

# Special Repair Requirement

INFOID:0000000005536831

# 1. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

Refer to EC-18. "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

# 2.PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 3.

# 3.perform idle air volume learning

Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

U

K

M

Ν

Revision: 2009 September EC-409

P

2010 Murano


## **P2127, P2128 APP SENSOR**

**Description** 

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometer which transform the accelerator pedal position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for engine operations such as fuel cut.

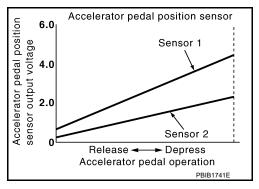

DTC Logic

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2127	Accelerator pedal position sensor 2 circuit low input	An excessively low voltage from the APP sensor 2 is sent to ECM.	Harness or connectors     (APP sensor 2 circuit is open or shorted.)     [CKP sensor (POS) circuit is shorted.]
P2128	Accelerator pedal position sensor 2 circuit high input	An excessively high voltage from the APP sensor 2 is sent to ECM.	<ul> <li>(Refrigerant pressure sensor circuit is shorted.)</li> <li>(EVAP control system pressure sensor circuit is shorted.)</li> <li>Accelerator pedal position sensor (APP sensor 2)</li> <li>Crankshaft position sensor (POS)</li> <li>EVAP control system pressure sensor</li> <li>Refrigerant pressure sensor</li> </ul>

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 1 second.
- Check DTC.

### Is DTC detected?

YES >> Go to EC-410, "Diagnosis Procedure".

NO >> INSPECTION END

## **Diagnosis Procedure**

INFOID:0000000005536834

# 1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### **P2127, P2128 APP SENSOR**

### < DTC/CIRCUIT DIAGNOSIS >

### [VQ35DE]

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-I

- Disconnect accelerator pedal position (APP) sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between APP sensor harness connector and ground.

APP s	sensor	Ground	Voltage (V)	
Connector	Connector Terminal		voltage (v)	
E110	5	Ground	Approx. 5	

### Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 3.

# 3.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector.

APP :	APP sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
E110	5	E16	87	Existed

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit.

## f 4.CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

E	СМ	Senso	or	
Connector	Terminal	Name	Connector	Terminal
F8	72	Refrigerant pressure sensor	E300	1
ГО	76	CKP sensor (POS)	F20	1
E16	87	APP sensor	E110	5
E16	91	EVAP control system pressure sensor	B17	3

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

## 5. CHECK COMPONENTS

### Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-257, "Component Inspection"</u>.)
- EVAP control system pressure sensor (Refer to <u>EC-296, "Component Inspection"</u>.)
- Refrigerant pressure sensor (Refer to <u>EC-457</u>, "<u>Diagnosis Procedure</u>".)

### Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace malfunctioning components.

## $\mathsf{G}.$ CHECK APP SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between APP sensor harness connector and ECM harness connector.

Α

EC

Е

N

Р

APP	sensor	sor EC		Continuity	
Connector	Terminal	Connector Terminal		Continuity	
E110	1	E16	100	Existed	

4. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 7.CHECK APP SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between APP sensor harness connector and ECM harness connector.

APP :	APP sensor EC		CM	Continuity	
Connector	Terminal	Connector Terminal		Continuity	
E110	6	E16	82	Existed	

2. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 8.CHECK APP SENSOR

Refer to EC-412, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 9.

# 9. REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- 2. Refer to EC-413, "Special Repair Requirement"

### >> INSPECTION END

# 10. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

# Component Inspection

INFOID:0000000005536835

# 1. CHECK ACCELERATOR PEDAL POSITION SENSOR

- Reconnect all harness connectors disconnected.
- Turn ignition switch ON.
- 3. Check the voltage between ECM harness connector terminals under the following conditions.

	ECM						
+		_		Condition		Voltage (V)	
Connector	Terminal	Connector	Terminal				
	81		84		Fully released	0.5 - 1.0	
E16	(APP sensor 1 signal)	E16	(Sensor ground)	Accelerator pedal	Fully depressed	4.2 - 4.8	
82	E10	100	Accelerator pedar	Fully released	0.25 - 0.50		
	(APP sensor 2 sig- nal)		(Sensor ground)		Fully depressed	2.0 - 2.5	

## **P2127, P2128 APP SENSOR**

[VQ35DE] < DTC/CIRCUIT DIAGNOSIS > Is the inspection result normal? Α >> INSPECTION END NO >> GO TO 2. 2.replace accelerator pedal assembly EC Replace accelerator pedal assembly. Go to EC-413, "Special Repair Requirement". >> INSPECTION END Special Repair Requirement INFOID:0000000005536836 D 1. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING Refer to EC-18, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement". Е >> GO TO 2. 2. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING F Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement". >> GO TO 3. 3.PERFORM IDLE AIR VOLUME LEARNING Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement". Н >> END K L M Ν Р


INFOID:0000000005536838

## P2135 TP SENSOR

**Description** 

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometers which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. In addition, these sensors detect the opening and closing speed of the throttle valve and feed the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and the ECM controls the throttle control motor to make the throttle valve opening angle properly in response to driving condition.

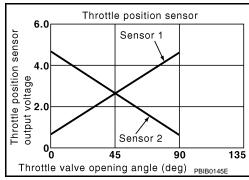

DTC Logic

### DTC DETECTION LOGIC

### NOTE:

If DTC P2135 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-343, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2135	Throttle position sensor circuit range/performance	Rationally incorrect voltage is sent to ECM compared with the signals from TP sensor 1 and TP sensor 2.	Harness or connector     (TP sensor 1 or 2 circuit is open or shorted.)     Electric throttle control actuator     (TP sensor 1 or 2)

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

# 2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

### Is DTC detected?

YES >> Go to EC-414, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536839

## 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

Revision: 2009 September EC-414 2010 Murano

[VQ35DE]

# 2.check throttle position sensor power supply circuit-i

- 1. Disconnect electric throttle control actuator harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between electric throttle control actuator harness connector and ground.

EC

Electric throttle	control actuator	Ground	Voltage (V)	
Connector	Terminal	Ground	voltage (v)	
F29	1	Ground	Approx. 5	

### Is the inspection result normal?

YES >> GO TO 3.

D

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

 ${f 3.}$  CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

Е

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

	G

Electric throttle	control actuator	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F29	4	F8	36	Existed
		-		

4. Also check harness for short to ground and short to power.

Н

## Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

ı

K

## 4. CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	control actuator	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F29	2	F8	37	Existed
1 29	3	1-0	38	LAISIEU

2. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 5.

NO

>> Repair open circuit, short to ground or short to power in harness or connectors.

## 5.CHECK THROTTLE POSITION SENSOR

N

## Refer to EC-416, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

Revision: 2009 September

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Refer to EC-416, "Special Repair Requirement"

### >> INSPECTION END

# 7. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

## Component Inspection

INFOID:0000000005536840

# 1. CHECK THROTTLE POSITION SENSOR

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Perform EC-416, "Special Repair Requirement".
- 4. Turn ignition switch ON.
- 5. Shift selector lever position to D.
- 6. Check the voltage between ECM harness connector terminals under the following conditions.

ECM					_	
	+		_	Condition		Voltage
Connector	Terminal	Connector	Terminal			
	37				Fully released	More than 0.36 V
F8	(TP sensor 1 signal)	F8	36 (Sensor ground)	Accelerator pedal	Fully depressed	Less than 4.75 V
ГО	38	го		(Sensor ground)	Accelerator pedar	Fully released
	(TP sensor 2 signal)		Fully depressed	More than 0.36 V		

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2.replace electric throttle control actuator

- 1. Replace electric throttle control actuator.
- Go to <u>EC-416</u>, "Special Repair Requirement".

>> INSPECTION END

# Special Repair Requirement

INFOID:0000000005536841

# 1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement"

>> GO TO 2.

## 2.PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement"

>> END

[VQ35DE]


## P2138 APP SENSOR

Description INFOID:0000000005536842

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometer which transform the accelerator pedal position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for engine operations such as fuel cut.

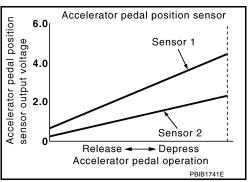

**DTC Logic** INFOID:0000000005536843

### DTC DETECTION LOGIC

If DTC P2138 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-343, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2138	Accelerator pedal position sensor circuit range/performance	Rationally incorrect voltage is sent to ECM compared with the signals from APP sensor 1 and APP sensor 2.	Harness or connector     (APP sensor 1 or 2 circuit is open or shorted.)     [CKP sensor (POS) circuit is shorted.]     (Refrigerant pressure sensor circuit is shorted.)     (EVAP control system pressure sensor circuit is shorted.)     Accelerator pedal position sensor (APP sensor 1 or 2)     Crankshaft position sensor (POS)     EVAP control system pressure sensor     Refrigerant pressure sensor

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 1 second.
- Check DTC. 2.

### Is DTC detected?

YES >> Go to EC-418, "Diagnosis Procedure".

NO >> INSPECTION END EC

Α

D

Е

F

Н

N

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## **Diagnosis Procedure**

INFOID:0000000005536844

## 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect accelerator pedal position (APP) sensor harness connector.
- Turn ignition switch ON.
- 3. Check the voltage between APP sensor harness connector and ground.

APP sensor		Ground	Voltage (V)
Connector	Connector Terminal		voltage (v)
E110	4	Ground	Approx. 5

### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

# 3.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-I

- Turn ignition switch ON.
- 2. Check the voltage between APP sensor harness connector and ground.

APP sensor		Ground	Voltage (V)
Connector	Terminal	Ground	voltage (v)
E110	5	Ground	Approx. 5

### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 4.

# 4. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-II

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector.

APP sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
E110	5	E16	87	Existed

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit.

## CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
F8	72	Refrigerant pressure sensor	E300	1
10	76	CKP sensor (POS)	F20	1

### **P2138 APP SENSOR**

### < DTC/CIRCUIT DIAGNOSIS >

[VQ3	5DE]

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
E16	87	APP sensor	E110	5
L10	91	EVAP control system pressure sensor	B17	3

EC

Α

### Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair short to ground or short to power in harness or connectors.

## 6.CHECK COMPONENTS

### Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-257, "Component Inspection"</u>.)
- EVAP control system pressure sensor (Refer to EC-296, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-457, "Diagnosis Procedure".)

### Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace malfunctioning components.

# 7.CHECK APP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between APP sensor harness connector and ECM harness connector.

APP :	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	2	E16	84	Existed
EIIU	1	EIU	100	Existed

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 8.CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between APP sensor harness connector and ECM harness connector.

APP :	sensor	EC	CM	Continuity
Connector	Terminal	Connector Terminal		Continuity
E110	0 3 E16		81	Existed
EIIU	6	E10	82	Existed

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 9. CHECK APP SENSOR

Refer to EC-420, "Component Inspection".

### Is the inspection result normal?

YES >> GO TO 11.

NO >> GO TO 10.

# 10.replace accelerator pedal assembly

- Replace accelerator pedal assembly.
- Refer to EC-420, "Special Repair Requirement".

D

Е

F

Н

K

N

Р

[VQ35DE]

>> INSPECTION END

## 11. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

## Component Inspection

INFOID:0000000005536845

# 1. CHECK ACCELERATOR PEDAL POSITION SENSOR

- 1. Reconnect all harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Check the voltage between ECM harness connector terminals under the following conditions.

	ECM						
+		_		Condition		Voltage (V)	
Connector	Terminal	Connector Terminal					
	81	84			Fully released	0.5 - 1.0	
E16	(APP sensor 1 sig- nal)		(Sensor ground)	A acalomaton madal	Fully depressed	4.2 - 4.8	
E10	82		100	Accelerator pedal	Fully released	0.25 - 0.50	
	(APP sensor 2 sig- nal)		(Sensor ground)		Fully depressed	2.0 - 2.5	

### Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

# 2.replace accelerator pedal assembly

- 1. Replace accelerator pedal assembly.
- 2. Go to EC-420, "Special Repair Requirement".

>> INSPECTION END

# Special Repair Requirement

INFOID:0000000005536846

# 1. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

Refer to EC-18, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

# 2. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-18, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 3.

# 3. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-18, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

[VQ35DE]

Α

D

K

M

Ν

Р


# P2A00, P2A03 A/F SENSOR 1

Description INFOID:0000000005536847


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement  $\lambda = 1$ , but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide  $\lambda$  range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

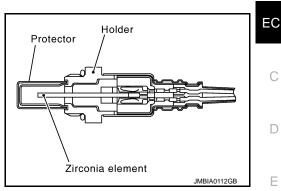

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of approximately 800°C (1,472°F).

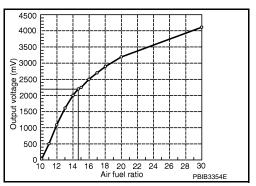

**DTC** Logic INFOID:0000000005536848

#### DTC DETECTION LOGIC

To judge the malfunction, the A/F signal computed by ECM from the A/F sensor 1 signal is monitored so it will not shift to LEAN side or RICH side.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible Cause
P2A00	Air fuel ratio (A/F) sensor 1 (bank 1) circuit range/per-formance	The output voltage computed by ECM from the A/F sensor 1 signal shifts to the lean side for a specified period.	A/F sensor 1     A/F sensor 1 heater     Fuel pressure
P2A03	Air fuel ratio (A/F) sensor 1 (bank 2) circuit range/performance	The A/F signal computed by ECM from the A/F sensor 1 signal is shifts to the rich side for a specified period.	Fuel injector     Intake air leakage

### DTC CONFIRMATION PROCEDURE

## 1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

### **TESTING CONDITION:**

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

# 2.PERFORM DTC CONFIRMATION PROCEDURE

- Clear the mixture ratio self-learning value. Refer to EC-20, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- Turn ignition switch OFF and wait at least 10 seconds.

**EC-421** Revision: 2009 September 2010 Murano

## P2A00, P2A03 A/F SENSOR 1

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- 3. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and keep the engine speed between 3,500 and 4,000 rpm for 1 minute under no load.
- 6. Let engine idle for 1 minute.
- 7. Keep engine speed between 2,500 and 3,000 rpm for 20 minutes.
- Check 1st trip DTC.

### Is 1st trip DTC detected?

YES >> Go to EC-422, "Diagnosis Procedure".

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000005536849

# 1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

## 2.RETIGHTEN A/F SENSOR 1

Loosen and retighten the A/F sensor 1. Refer to EM-38, "Exploded View".

>> GO TO 3.

# 3.CHECK FOR INTAKE AIR LEAKAGE

- 1. Start engine and run it at idle.
- Listen for an intake air leakage after the mass air flow sensor.

### Is intake air leakage detected?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning part.

## 4. CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to <u>EC-20, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".</u>
- 2. Run engine for at least 10 minutes at idle speed.

### Is the 1st trip DTC P0171, P0172, P0174 or P0175 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171, P0174 or P0172, P0175. Refer to <u>EC-222, "DTC Logic"</u> or <u>EC-226, "DTC Logic"</u>.

NO >> GO TO 5.

## 5. CHECK HARNESS CONNECTOR

- Turn ignition switch OFF.
- 2. Disconnect A/F sensor 1 harness connector.
- Check harness connector for water.

#### Water should not exit.

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness connector.

# 6. CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect A/F sensor 1 harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

### < DTC/CIRCUIT DIAGNOSIS >

DTC		A/F sensor		Ground	Voltage (V)	
DIC	Bank	Connector Terminal		Ground	voltage (v)	
P2A00	1	F27	4	Ground	Battery voltage	
P2A03	2	F64	4	Giodila	Dattery Voltage	

EC

Α

### Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 7. С

D

Е

# 7.DETECT MALFUNCTIONING PART

### Check the following.

- IPDM E/R harness connector F12
- 15 A fuse (No. 46)
- Harness for open or short between A/F sensor 1 and IPDM E/R

>> Repair or replace harness or connectors.

# 8.CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

DTC		A/F sensor 1		E	Continuity	
DIC	Bank	Connector	Terminal	Connector	Terminal	Continuity
P2A00	1	F27	1		45	
FZAUU	'	121	2	F8	49	Existed
P2A03	2	F64	1	10	53	
FZAUS	2	F0 <del>4</del>	2		57	

 Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

DTC	A/F sensor 1			Ground	Continuity		
DIC .	Bank	Connector	Terminal	Giodila	Continuity		
P2A00	1	F27	1				
FZA00	2	F27	Γ21	F21	2	Ground	Not existed
Davos	2	F64	1	Ground	Not existed		
P2A03	2	F64	2				

DTC	ECM		Ground	Continuity	
Connector		Terminal	Giodila	Continuity	
P2A00		45			
	F8	49	Ground	Not ovieted	
P2A03		53	Giouria	Not existed	
F2AU3		57			

5. Also check harness for short to power.

### Is the inspection result normal?

YES >> GO TO 9.

Revision: 2009 September

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 9. CHECK INTERMITTENT INCIDENT

EC-423

2010 Murano

K

Ν

P

## **P2A00, P2A03 A/F SENSOR 1**

### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Perform GI-39, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace malfunctioning part.

10.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1.

### **CAUTION:**

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved anti-seize lubricant (commercial service tool).

>> INSPECTION END

### ASCD BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

INFOID:0000000005536851

## ASCD BRAKE SWITCH

Description INFOID:0000000005536850

When the brake pedal is depressed, ASCD brake switch is turned OFF and stop lamp switch is turned ON. ECM detects the state of the brake pedal by those two types of input (ON/OFF signal). Refer to EC-52, "System Diagram" for the ASCD function.

EC

Α

## Component Function Check

# CHECK ASCD BRAKE SWITCH FUNCTION

## (P) With CONSULT-III

- 1. Turn ignition switch ON.
- Select "BRAKE SW1" in "DATA MONITOR" mode with CONSULT-III.
- 3. Check "BRAKE SW1" indication under the following conditions.

Monitor item	Co	Indication	
BRAKE SW1	Brake nedal	Slightly depressed	OFF
	Brake pedal	Fully released	ON

## ₩ Without CONSULT-III

- 1. Turn ignition switch ON.
- Check the voltage between ECM harness connector terminals.

ECM						
Connector	+	-	Condition		Voltage	
Connector	Terminal	Terminal				
	110			Slightly depressed	Approx. 0 V	
E16	(ASCD brake switch signal)	112	Brake pedal	Fully released	Battery voltage	

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-425, "Diagnosis Procedure".

# Diagnosis Procedure

# 1. CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ASCD brake switch harness connector.
- Turn ignition switch ON. 3.
- Check the voltage between ASCD brake switch harness connector and ground.

ASCD bra	ake switch	Ground	Voltage	
Connector	Terminal	Ground		
E49	1	Ground	Battery voltage	

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

# 2.DETECT MALFUNCTIONING PART

### Check the following.

- Fuse block (J/B) connector E103
- 10 A fuse (No.3)
- Harness for open or short between ASCD brake switch and fuse

D

Е

K

L

INFOID:0000000005536852

Р

### [VQ35DE]

### < DTC/CIRCUIT DIAGNOSIS >

>> Repair open circuit, short to ground or short to power in harness or connectors.

## 3.CHECK ASCD BRAKE SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between ASCD brake switch harness connector and ECM harness connector.

ASCD brake switch		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E49	2	E16	110	Existed

4. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4. CHECK ASCD BRAKE SWITCH

Refer to EC-426, "Component Inspection (ASCD Brake Switch)".

### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace ASCD brake switch.

## 5. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

## Component Inspection (ASCD Brake Switch)

INFOID:0000000005536853

## 1. CHECK ASCD BRAKE SWITCH-I

- 1. Turn ignition switch OFF.
- Disconnect ASCD brake switch harness connector.
- 3. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals	Condition		Continuity
1 and 2	1 and 2 Brake pedal	Fully released	Existed
r and 2	Drake pedai	Slightly depressed	Not existed

## Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

## 2.CHECK ASCD BRAKE SWITCH-II

- 1. Adjust ASCD brake switch installation. Refer to BR-9, "Inspection and Adjustment".
- 2. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals	Condition		Continuity
1 and 2	Brake pedal	Fully released	Existed
r and 2	Drake pedar	Slightly depressed	Not existed

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD brake switch.

**ASCD INDICATOR** [VQ35DE] < DTC/CIRCUIT DIAGNOSIS > ASCD INDICATOR Α Description INFOID:0000000005536854 ASCD indicator lamp illuminates to indicate ASCD operation status. CRUISE is integrated in combination EC CRUISE illuminates when MAIN switch on ASCD steering switch is turned ON to indicated that ASCD system is ready for operation. C Refer to EC-52, "System Diagram" for the ASCD function. Component Function Check INFOID:0000000005536855 D 1. CHECK ASCD INDICATOR FUNCTION Check ASCD indicator under the following conditions. Е ASCD INDICATOR CONDITION **SPECIFICATION** . MAIN switch: Pressed at the **CRUISE** · Ignition switch: ON  $ON \rightarrow OFF$ 1st time →at the 2nd time Is the inspection result normal? YES >> INSPECTION END NO >> Go to EC-427, "Diagnosis Procedure". Diagnosis Procedure INFOID:0000000005536856 1.CHECK DTC Н Check that DTC UXXXX is not displayed. Is the inspection result normal? >> GO TO 2. YES NO >> Perform trouble diagnosis for DTC UXXXX. 2.CHECK COMBINATION METER FUNCTION Refer to MWI-34, "CONSULT-III Function (METER/M&A)". Is the inspection result normal? K

YES >> GO TO 3.

>> Repair or replace malfunctioning part. NO

3.CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Repair or replace malfunctioning part.

**EC-427** Revision: 2009 September 2010 Murano Ν

M

Р

INFOID:0000000005536858

INFOID:0000000005536859

## **COOLING FAN**

**Description** 

The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature, refrigerant pressure, and air conditioner ON signal. The control system has 4-step control [HIGH/MIDDLE/LOW/OFF].

### **COOLING FAN MOTOR**

The cooling fan operates at each speed when the current flows in the cooling fan motor as per the following.

Cooling fan speed	Cooling fan motor terminals		
Cooling rail speed	(+)	(-)	
	1	3 and 4	
Middle (MID)	2	3 and 4	
ivildale (ivilD)	1 and 2	3	
	1 and 2	4	
High (HI)	1 and 2	3 and 4	

The cooling fan operates at low (LOW) speed when cooling fan motors-1 and -2 are circuited in series under the middle speed condition.

Refer to EC-60, "System Diagram".

# Component Function Check

1. CHECK COOLING FAN FUNCTION

## (II) With CONSULT-III

- 1. Turn ignition switch ON.
- 2. Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT-III.
- 3. Check that cooling fan operates at each speed.

## Without CONSULT-III

- Perform IPDM E/R auto active test and check cooling fan motors operation, refer to <u>PCS-10, "Diagnosis Description"</u>.
- 2. Check that cooling fan operates at each speed.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-428, "Diagnosis Procedure".

# Diagnosis Procedure

# 1. CHECK COOLING FAN RELAY POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect cooling fan relays-2, -3.
- Turn ignition switch ON.
- 4. Check the voltage between cooling fan relays-2, -3 harness connectors and ground.

Cooling fan relay  Connector Terminal		Ground	Voltage
		Ground	
E57	2		
(cooling fan relay-2)	5	Ground	Battery voltage
E59	2		
(cooling fan relay-3)	5		

## Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

### **COOLING FAN**

### < DTC/CIRCUIT DIAGNOSIS >

### [VQ35DE]

# 2.DETECT MALFUNCTIONING PART

### Check the following.

- 40 A fusible link (letter K)
- 10 A fuse (No. 42)
- IPDM E/R harness connector E10
- Harness for open or short between cooling fan relay-2 and battery
- Harness for open or short between cooling fan relay-3 and battery
- Harness for open or short between cooling fan relay-2 and IPDM E/R
- Harness for open or short between cooling fan relay-3 and IPDM E/R

>> Repair open circuit, short to ground or short to power in harness or connectors.

# ${f 3.}$ CHECK COOLING FAN RELAY OUTPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R harness connectors. 2.
- Check the continuity between cooling fan relay-2, -3 harness connectors and IPDM E/R harness connec-3.

Cooling fan re	IPDM E/R		Continuity	
Connector	Terminal	Connector	Terminal	Continuity
E57 (cooling fan relay-2)	1	E11	42	Existed
E59 (cooling fan relay-3)	1	E10	34	LXISIGU

Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## f 4 .CHECK COOLING FAN MOTOR POWER SUPPLY CIRCUIT

- Disconnect cooling fan motor-1 harness connector.
- Check the voltage between cooling fan motor-1 harness connector and ground.

Cooling fan r	notor-1	Ground	Voltage	
Connector	Connector Terminal		voltage	
E301	1	Ground	Battery voltage	
L301	2	Giodila	Dattery Voltage	

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

## ${f 5.}$ DETECT MALFUNCTIONING PART

## Check the following.

- Harness connector E70, E305
- 40 A fusible link (letter M)
- Harness for open or short between cooling fan motor-1 and battery

>> Repair open circuit, short to ground or short to power in harness or connectors.

## 6.CHECK COOLING FAN MOTOR CIRCUIT-I

- Disconnect cooling fan motor-2 harness connector.
- 2. Check the continuity between cooling fan relay-2, -3 harness connectors and cooling fan motor-1, -2 harness connectors.

EC

Е

F

N

Р

Cooling fan i	Cooling fan relay		Cooling fan motor	
Connector	Terminal	Connector	Terminal	Continuity
E57	3	E302 (Cooling fan motor-2)	2	
(cooling fan relay-2)	7	E301 (Cooling fan motor-1)	3	Existed
E59	3	E302 (Cooling fan motor-2)	1	LXISIEU
(cooling fan relay-3)	7	E301 (Cooling fan motor-1)	4	

3. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 7.

# 7.DETECT MALFUNCTIONING PART

### Check the following.

- Harness connector E70, E305
- Harness for open or short between cooling fan motor-1 and cooling fan relay-2
- Harness for open or short between cooling fan motor-1 and cooling fan relay-3
- Harness for open or short between cooling fan motor-2 and cooling fan relay-2
- Harness for open or short between cooling fan motor-2 and cooling fan relay-3

>> Repair open circuit, short to ground or short to power in harness or connectors.

## 8. CHECK COOLING FAN MOTOR CIRCUIT-II

Check the continuity between IPDM E/R harness connector and cooling fan motor-1, -2 harness connector.

IPDI	M E/R	Cooling fan motor		Continuity
Connector	Terminal	Connector Terminal		Continuity
E10	35	E301 (Cooling fan motor-1)	4	Existed
EIU	38	E302 (Cooling fan motor-2)	1	Existed

2. Also check harness for short to ground and short to power.

### Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 9.

## 9. DETECT MALFUNCTIONING PART

### Check the following.

- Harness connector E70, E305
- Harness for open or short between cooling fan motor-1 and IPDM E/R
- Harness for open or short between cooling fan motor-2 and IPDM E/R

>> Repair open circuit, short to ground or short to power in harness or connectors.

## 10. CHECK COOLING FAN MOTOR CIRCUIT-III

1. Check the continuity between cooling fan relay-2, -3 harness connectors and ground.

Ν

0

Р

INFOID:0000000005536860

Cooming ia	n motor	Ground	Continuity		
Connector	Terminal	Glound	Continuity		_
E57 (cooling fan relay-2)	6	Ground	Existed	_	
E59 (cooling fan relay-3)	6	Cround	Existed	_	
Also check harnes	<del>-</del>	ınd and short to ı	oower.	_	
the inspection resul					
		ground or short	to power in harness	or connectors.	
1. CHECK COOLIN		_	·		
			rness connector an	d ground.	
Cooling fan	motor-2	Ground	Continuity		
Connector	Terminal				
	2				
E302	3	Ground	Existed		
	4				
Also check harnes	4 ss for short to grou				
Also check harnes the inspection resul	4 ss for short to grou t normal?				
Also check harnes the inspection resul YES >> GO TO 12 NO >> Repair op	ss for short to grout to normal? 2. en circuit, short to	ind and short to p		or connectors.	
Also check harnes the inspection resul YES >> GO TO 12 NO >> Repair op	ss for short to grout to normal? 2. en circuit, short to	ind and short to p	power.	or connectors.	
Also check harnes the inspection resul YES >> GO TO 12 NO >> Repair op 2.CHECK COOLIN	4 ss for short to grout the normal? c. en circuit, short to IG FAN RELAYS-2	ground or short 2 AND -3	power.  to power in harness	or connectors.	
Also check harnes the inspection result YES >> GO TO 12 NO >> Repair op 2.CHECK COOLIN efer to EC-432, "Cor	4 ss for short to grout normal? 2. en circuit, short to IG FAN RELAYS-2 nponent Inspection t normal?	ground or short 2 AND -3	power.  to power in harness	or connectors.	
Also check harnes the inspection result YES >> GO TO 12 NO >> Repair op 2.CHECK COOLIN efer to EC-432, "Cor the inspection result YES >> GO TO 13	ss for short to grout to normal? c. en circuit, short to IG FAN RELAYS-2 nponent Inspection to normal? s.	ground or short 2 AND -3 1 (Cooling Fan R	power.  to power in harness	or connectors.	
Also check harnes the inspection result YES >> GO TO 12 NO >> Repair op CHECK COOLIN efer to EC-432, "Corthe inspection result YES >> GO TO 13 NO >> Replace result	ss for short to grout normal? cen circuit, short to IG FAN RELAYS-2 nponent Inspection t normal? nalfunctioning coo	ground or short 2 AND -3 1 (Cooling Fan R	power.  to power in harness	or connectors.	
Also check harnes the inspection result YES >> GO TO 12 NO >> Repair op CHECK COOLIN efer to EC-432, "Cor the inspection result YES >> GO TO 13 NO >> Replace r CHECK COOLIN	4 ss for short to grout normal? 2. en circuit, short to IG FAN RELAYS-2 nponent Inspection t normal? 3. nalfunctioning cools FAN MOTORS-	ground or short 2 AND -3 1 (Cooling Fan R	power.  to power in harness  telay)".	or connectors.	
Also check harnes the inspection result YES >> GO TO 12 NO >> Repair op 2.CHECK COOLIN efer to EC-432, "Cor the inspection result YES >> GO TO 13 NO >> Replace r 3.CHECK COOLIN efer to EC-431. "Cor	ss for short to grout normal? 2. en circuit, short to IG FAN RELAYS-2 nponent Inspection t normal? 3. nalfunctioning cools FAN MOTORS-ponent Inspection	ground or short 2 AND -3 1 (Cooling Fan R	power.  to power in harness  telay)".	or connectors.	
Also check harnes the inspection resul YES >> GO TO 12 NO >> Repair op 2. CHECK COOLIN efer to EC-432, "Cor the inspection resul YES >> GO TO 13 NO >> Replace r 3. CHECK COOLIN efer to EC-431, "Cor the inspection resul	ss for short to grout normal? 2. en circuit, short to IG FAN RELAYS-2 nponent Inspection t normal? 3. nalfunctioning cool IG FAN MOTORS-nponent Inspection t normal?	ground or short 2 AND -3 1 (Cooling Fan R	power.  to power in harness  telay)".	or connectors.	
Also check harnes the inspection result YES >> GO TO 12 NO >> Repair op 2.CHECK COOLIN efer to EC-432, "Core the inspection result YES >> GO TO 13 NO >> Replace result 3.CHECK COOLIN efer to EC-431, "Core the inspection result YES >> GO TO 14	ss for short to grout normal? 2. en circuit, short to IG FAN RELAYS-2 nponent Inspection t normal? 3. nalfunctioning cool IG FAN MOTORS-nponent Inspection t normal?	ground or short 2 AND -3 1 (Cooling Fan R 1 AND -2 1 (Cooling Fan R	power.  to power in harness  telay)".	or connectors.	

Perform GI-39, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace harness connectors.

## Component Inspection (Cooling Fan Motor)

# 1. CHECK COOLING FAN MOTOR

- 1. Turn ignition switch OFF.
- 2. Disconnect cooling fan motor harness connector.
- 3. Supply cooling fan motor terminals with battery voltage and check operation.

INFOID:0000000005536861

	Condition	Term	ninals
	Condition	(+)	(-)
Cooling fan motor		1	3 and 4
	A	2	3 and 4
	A	1 and 2	3
		1 and 2	4
	В	1, 2	3, 4

Check that cooling fan speed of condition B is higher than that of A.

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace cooling fan motor.

## Component Inspection (Cooling Fan Relay)

# 1. CHECK COOLING FAN RELAY


- 1. Disconnect cooling fan relays -2, -3 harness connectors.
- 2. Check continuity between cooling fan relay -2, -3 terminals under the following conditions.

Terminals	Conditions	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
6 and 7	No current supply	Not existed

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace cooling fan relay.

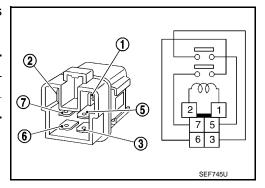

#### **ELECTRICAL LOAD SIGNAL**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

INFOID:0000000005536863

## ELECTRICAL LOAD SIGNAL

Description INFOID:000000005536862

The electrical load signal (Headlamp switch signal, rear window defogger switch signal, etc.) is transferred via the CAN communication.

EC

D

Е

F

Н

Ν

Р

INFOID:0000000005536864

Α

## Component Function Check

# 1. CHECK REAR WINDOW DEFOGGER SWITCH FUNCTION

- Turn ignition switch ON.
- Connect CONSULT-III and select "DATA MONITOR" mode.
- 3. Select "LOAD SIGNAL" and check indication under the following conditions.

Monitor item	Condition		Indication
LOAD SIGNAL	Rear window defogger switch	ON	ON
LOAD SIGNAL	IGNAL Rear window defogger switch	OFF	OFF

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Go to EC-433, "Diagnosis Procedure".

# 2.CHECK LIGHTING SWITCH FUNCTION

Check "LOAD SIGNAL" indication under the following conditions.

Monitor item	Condition		Condition		Indication
LOAD SIGNAL	Lighting switch	ON at 2nd position	ON		
LOAD SIGNAL	Lighting switch	OFF	OFF		

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Go to EC-433, "Diagnosis Procedure".

# 3.check heater fan control switch function

Select "HEATER FAN SW" and check indication under the following conditions.

Monitor item	Condition		Indication	
HEATER FAN SW	Heater fan control switch	ON	ON	
TIEATERTANOW	Heater fan control switch	OFF	OFF	

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-433, "Diagnosis Procedure".

## Diagnosis Procedure

## 1.INSPECTION START

Confirm the malfunctioning circuit (rear window defogger, headlamp or heater fan). Refer to <u>EC-433, "Component Function Check".</u>

#### Which circuit is related to the incident?

Rear window defogger>>GO TO 2.

Headlamp>>GO TO 3.

Heater fan>>GO TO 4.

Revision: 2009 September

# 2.CHECK REAR WINDOW DEFOGGER SYSTEM

Refer to DEF-3, "Work Flow".

EC-433

**EC-433** 2010 Murano

## **ELECTRICAL LOAD SIGNAL**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

>> INSPECTION END

# 3. CHECK HEADLAMP SYSTEM

Refer to EXL-6, "Work Flow" (XENON TYPE) or EXL-195, "Work Flow" (HALOGEN TYPE).

>> INSPECTION END

# 4. CHECK HEATER FAN CONTROL SYSTEM

Refer to VTL-69, "System Description".

>> INSPECTION END

#### ELECTRONIC CONTROLLED ENGINE MOUNT

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## ELECTRONIC CONTROLLED ENGINE MOUNT

Description INFOID:0000000005536865

The electronic controlled engine mount control solenoid valve controls the intake manifold vacuum signal for electronic controlled engine mount. The electronic controlled engine mount control solenoid valve is moved by ON/OFF signal from the ECM. When the solenoid is OFF, the vacuum signal from the intake manifold is cut. When the solenoid is ON, the intake manifold vacuum signal is sent to the electronic controlled engine mount.

## Component Function Check

# 1. CHECK OVERALL FUNCTION

- Start engine and warm it up to normal operating temperature.
- Shift selector position is D while depressing the brake pedal and parking brake pedal. 2.
- Disconnect electronic controlled engine mount control solenoid valve harness connector.
- Check that body vibration increases compared to the condition of step 2 above (with vehicle stopped).

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> EC-435, "Diagnosis Procedure".

## Diagnosis Procedure

## 1. CHECK VACUUM SOURCE

- Turn ignition switch OFF.
- Reconnect electronic controlled engine mount control solenoid valve harness connector. 2.
- Disconnect vacuum hose connected to electronic controlled engine mount.
- Start engine and let it idle.
- Check vacuum hose for vacuum existence.

#### Vacuum should exist.

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 2.

# 2.CHECK VACUUM HOSES AND VACUUM GALLERY

- Turn ignition switch OFF.
- Check vacuum hoses and vacuum gallery for clogging, cracks or improper connection. Refer to EC-68. "System Diagram".

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace vacuum hoses and vacuum gallery.

# 3.CHECK ELECTRONIC CONTROLLED ENGINE MOUNT CONTROL SOLENOID VALVE POWER SUPPLY **CIRCUIT**

- 1. Disconnect electronic controlled engine mount control solenoid valve harness connector.
- Turn ignition switch ON.
- Check the voltage between front electronic controlled engine mount harness connector and ground.

Electronic controlled engine mount control solenoid valve		Ground	Voltage
Connector	Terminal		
F11	1	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 5. NO >> GO TO 4.

# f 4.DETECT MALFUNCTIONING PART

**EC-435** Revision: 2009 September 2010 Murano

EC

Α

D

INFOID:000000000553686

Н

M

Ν

Р

#### ELECTRONIC CONTROLLED ENGINE MOUNT

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Check the following.

- Harness connectors E6, F123
- 10 A fuse (No. 3)
- Fuse block (J/B) connector E103
- Harness for open or short between electronic controlled engine mount control solenoid valve and fuse

>> Repair open circuit, short to ground or short to power in harness or connectors.

# **5.**CHECK ELECTRONIC CONTROLLED ENGINE MOUNT CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Disconnect ECM harness connector.
- Check the continuity between ECM harness connector and electronic controlled engine mount control solenoid valve harness connector.

E	СМ		ntrolled engine solenoid valve	Continuity
Connector	Terminal	Connector	Terminal	
F7	28	F11	2	Existed

3. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit, short to ground or short to power in harness connectors.

## 6. CHECK ELECTRONIC CONTROLLED ENGINE MOUNT CONTROL SOLENOID VALVE

Refer to EC-436, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace electronic controlled engine mount control solenoid valve.

## 7.check electronic controlled engine mount

- 1. Turn ignition switch OFF.
- 2. Install vacuum pump (A) to electronic controlled engine mount (1).
- Check that a vacuum is maintained when applying the vacuum of -40 kPa (-0.41 kg/cm<sup>2</sup>, -5.8 psi) to electronic controlled engine mount.
- 4. Also visually check electronic controlled engine mount.

## Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace electronic controlled engine mount.

# MBIB1237E

# 8. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### Is the inspection result normal?

YES >> Replace intake manifold collector.

NO >> Repair or replace malfunctioning part.

## Component Inspection

INFOID:0000000005536868

# 1. CHECK ELECTRONIC CONTROLLED ENGINE MOUNT CONTROL SOLENOID VALVE

## (I) With CONSULT-III

- Turn ignition switch OFF.
- Reconnect electronic controlled engine mount control solenoid valve harness connector.
- 3. Disconnect vacuum hoses connected to electronic controlled engine mount control solenoid valve.
- 4. Turn ignition switch ON.

## **ELECTRONIC CONTROLLED ENGINE MOUNT**

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Α

EC

C

D

Е

F

- Select "ENGINE MOUNTING" in "ACTIVE TEST" mode with CONSULT-III.
- 6. Check air passage continuity and operation delay time under the following conditions.


Condition (ENGINE MOUNTING)	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
TRVL	Existed	Not existed
IDLE	Not existed	Existed

# MBIA0180ZZ

#### ₩ Without CONSULT-III

- 1. Turn ignition switch OFF.
- Disconnect electronic controlled engine mount control solenoid valve harness connector.
- 3. Disconnect vacuum hoses connected to electronic controlled engine mount control solenoid valve.
- Check air passage continuity and operation delay time under the following conditions.

Condition	Air passage continuity between (A) and (B)	Air passage continuity between (A) and (C)
12 V direct current supply between terminals 1 and 2	Existed	Not existed
No supply	Not existed	Existed

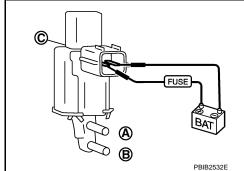

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace electronic controlled engine mount control solenoid valve.

Н

K

L

M

Ν


0

Р

## **FUEL INJECTOR**

**Description** 

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the fuel injector circuit, the coil in the fuel injector is energized. The energized coil pulls the ball valve back and allows fuel to flow through the fuel injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the fuel injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

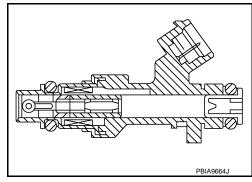

## Component Function Check

INFOID:0000000005536870

## 1.INSPECTION START

Turn ignition switch to START.

Are any cylinders ignited?

YES >> GO TO 2.

NO >> Go to EC-438, "Diagnosis Procedure".

## 2. CHECK FUEL INJECTOR FUNCTION

#### (P)With CONSULT-III

- 1. Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-III.
- 3. Check that each circuit produces a momentary engine speed drop.

#### Without CONSULT-III


- 1. Start engine.
- 2. Listen to each fuel injector operating sound.

#### Clicking sound should be heard.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-438, "Diagnosis Procedure".

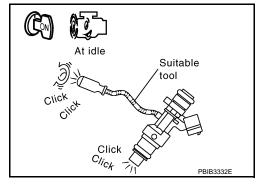

## Diagnosis Procedure

INFOID:0000000005536871

# 1. CHECK FUEL INJECTOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect fuel injector harness connector.
- 3. Turn ignition switch ON.
- Check the voltage between fuel injector harness connector and ground.

Α

EC

D

Е

F

Ν

Fuel injector			Ground	Voltage
Cylinder	Connector	Terminal	Giodila	Voltage
1	F37	1		
2	F38	1		
3	F39	1	Ground	Battery voltage
4	F40	1	Giouna	Battery voltage
5	F41	1		
6	F42	1		

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

## 2.DETECT MALFUNCTIONING PART

Check the following.

- 10 A fuse (No.44)
- IPDM E/R harness connector F12
- Harness for open or short between fuel injector and IPDM E/R

>> Repair open circuit, short to ground or short to power in harness or connectors.

# ${f 3.}$ CHECK FUEL INJECTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between fuel injector harness connector and ECM harness connector.

Fuel injector		ECM		Continuity	
Cylinder	Connector	Terminal	Connector	Terminal	Continuity
1	F37	2		32	
2	F38	2		31	
3	F39	2	F7	30	Existed
4	F40	2	Γ1	29	Existed
5	F41	2		3	
6	F42	2		1	

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## f 4.CHECK FUEL INJECTOR

Refer to EC-440, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace malfunctioning fuel injector.

## 5.CHECK INTERMITTENT INCIDENT

Refer to GI-39. "Intermittent Incident".

#### Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> INSPECTION END

EC-439

## **FUEL INJECTOR**

## < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

## Component Inspection

#### INFOID:0000000005536872

# 1. CHECK FUEL INJECTOR


- 1. Turn ignition switch OFF.
- 2. Disconnect fuel injector harness connector.
- Check resistance between fuel injector terminals as per the following.

Terminals	Resistance
1 and 2	11.1 - 14.5 Ω [at 10 - 60°C (50 - 140°F)]

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace malfunctioning fuel injector.

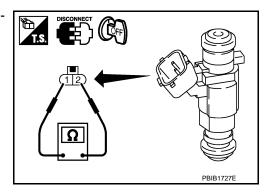

Α

EC

D

F

INFOID:0000000005536874

## **FUEL PUMP**

Description INFOID:0000000005536873

Sensor	Input signal to ECM	ECM Function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*	Fuel pump control	Fuel pump relay ↓
Battery	Battery voltage*		Fuel pump

<sup>\*:</sup> ECM determines the start signal status by the signals of engine speed and battery voltage.

The ECM activates the fuel pump for several seconds after the ignition switch is turned ON to improve engine start ability. If the ECM receives a engine speed signal from the camshaft position sensor (PHASE), it knows that the engine is rotating, and causes the pump to operate. If the engine speed signal is not received when the ignition switch is ON, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation	
Ignition switch is turned to ON.	Operates for 1 second.	
Engine running and cranking	Operates.	
When engine is stopped	Stops in 1.5 seconds.	
Except as shown above	Stops.	

## Component Function Check

# 1. CHECK FUEL PUMP FUNCTION

- Turn ignition switch ON.
- Pinch fuel feed hose with two fingers.
- : Vehicle front (Illustration shows the view with intake air duct removed)

Fuel pressure pulsation should be felt on the fuel feed hose for 1 second after ignition switch is turned ON.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> EC-441, "Diagnosis Procedure".

#### INFOID:0000000005536875

## Diagnosis Procedure

# ${f 1}$ .CHECK FUEL PUMP POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Turn ignition switch ON.
- Check the voltage between ECM harness connector terminals.

	+	_		Voltage
Connector	Terminal	Connector	Terminal	
F7	14	E16	112	Battery voltage

#### Is the inspection result normal?

>> GO TO 4. YES

NO >> GO TO 2.

Revision: 2009 September

**EC-441** 2010 Murano

# 2.CHECK FUEL PUMP POWER SUPPLY CIRCUIT-II

Check the voltage between IPDM E/R harness connector and ground.

IPDN	/I E/R	Ground	Voltage	
Connector	Terminal	Ground	voltage	
F12	77	Ground	Battery voltage	

#### Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 16.

# 3. DETECT MALFUNCTIONING PART

## Check the following.

- IPDM E/R harness connector F12
- Harness for open or short between IPDM E/R and ECM

>> Repair open circuit, short to ground or short to power in harness or connectors.

# 4. CHECK CONDENSER POWER SUPPLY CIRCUIT-I

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Disconnect condenser harness connector.
- 4. Turn ignition switch ON.
- 5. Check the voltage between condenser harness connector and ground.

Condenser		Ground	Voltage	
Connector	Terminal	Giodila	voltage	
B81	1	Ground	Battery voltage should exist for 1 second after ignition switch is turned ON.	

#### Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 5.

## **5.**CHECK 15 A FUSE

- 1. Turn ignition switch OFF.
- 2. Disconnect 15 A fuse (No. 41).
- 3. Check 15 A fuse.

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace fuse.

## 6.CHECK CONDENSER POWER SUPPLY CIRCUIT-II

- 1. Disconnect IPDM E/R harness connector.
- 2. Check the continuity between IPDM E/R harness connector and condenser harness connector.

IPDN	1 E/R (		Condenser	
Connector	Terminal	Connector	Terminal	Continuity
E10	13	B81	1	Existed

3. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 16. NO >> GO TO 7.

7.DETECT MALFUNCTIONING PART

#### **FUEL PUMP**

#### < DTC/CIRCUIT DIAGNOSIS >

Check the following.

Harness connectors E104, B4

- IPDM E/R connector E10
- Harness for open or short between IPDM E/R and condenser

>> Repair open circuit or short to power in harness or connectors.

## 8.CHECK CONDENSER GROUND CIRCUIT

- Turn ignition switch OFF.
- Check the continuity between condenser harness connector and ground.

Condenser		Ground	Continuity
Connector	Terminal	Giodila	Continuity
B81	2	Ground	Existed

Also check harness for short to power.

#### Is the inspection result normal?

YES >> GO TO 10. >> GO TO 9. NO

## 9.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, E104 (with rear view monitor)
- Harness for open or short between condenser and ground

>> Repair open circuit or short to power in harness or connectors.

## 10. CHECK CONDENSER

Refer to EC-444, "Component Inspection (Condenser)".

## Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace condenser.

# 11. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-III

- Disconnect "fuel level sensor unit and fuel pump" harness connector.
- Check harness continuity between IPDM E/R harness connector and "fuel level sensor unit and fuel pump" harness connector.

IPDI	IPDM E/R		Fuel level sensor unit and fuel pump	
Connector	Terminal	Connector	Terminal	
E10	13	B40	1	Existed

#### Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

# 12. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, E104
- Harness for open or short between "fuel level sensor unit and fuel pump" and IPDM E/R

>> Repair open circuit or short to power in harness or connectors.

# 13. CHECK FUEL PUMP GROUND CIRCUIT

- Disconnect "fuel level sensor unit and fuel pump" harness connector.
- Check the continuity between "fuel level sensor unit and fuel pump" harness connector and ground.

[VQ35DE]

EC

Α

Е

D

N

Р

**EC-443** Revision: 2009 September 2010 Murano

INFOID:0000000005536876

INFOID:0000000005536877

Fuel level sensor unit and fuel pump		Ground	Continuity
Connector	Terminal		
B40	3	Ground	Existed

#### Is the inspection result normal?

YES >> GO TO 15. NO >> GO TO 14.

# 14. DETECT MALFUNCTIONING PART

#### Check the following.

- Harness connectors B4, E104 (with rear view monitor)
- Harness for open or short between "fuel level sensor unit and fuel pump" and ground
  - >> Repair open circuit or short to power in harness or connectors.

## 15. CHECK FUEL PUMP

## Refer to EC-444, "Component Inspection (Fuel Pump)".

#### Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace fuel pump.

# 16. CHECK INTERMITTENT INCIDENT

## Refer to GI-39, "Intermittent Incident".

#### Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace harness or connectors.

## Component Inspection (Fuel Pump)

# 1. CHECK FUEL PUMP

- Turn ignition switch OFF.
- 2. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- Check resistance between "fuel level sensor unit and fuel pump" terminals as per the following.

Terminals	Resistance
1 and 3	0.2 - 5.0 Ω [at 25°C (77°F)]

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace "fuel level sensor unit and fuel pump"

## Component Inspection (Condenser)

## 1. CHECK CONDENSER

- 1. Turn ignition switch OFF.
- Disconnect condenser harness connector.
- Check resistance between condenser terminals as per the following.

Terminals	Resistance
1 and 2	Above 1 M $\Omega$ [at 25°C (77°F)]

#### Is the inspection result normal?

YES >> INSPECTION END NO >> Replace condenser.

## **IGNITION SIGNAL**

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

INFOID:0000000005536879

## **IGNITION SIGNAL**

**Description** 

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns ON and OFF the ignition coil primary circuit. This ON/OFF operation induces the proper high voltage in the coil secondary circuit.

EC

D

Е

Ν

Р

Α

## Component Function Check

## 1.INSPECTION START

Turn ignition switch OFF, and restart engine.

#### Does the engine start?

YES-1 >> With CONSULT-III: GO TO 2.

YES-2 >> Without CONSULT-III: GO TO 3.

NO >> Go to <u>EC-445</u>, "<u>Diagnosis Procedure</u>".

## 2.check ignition signal function

## (P) With CONSULT-III

- 1. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT-III.
- 2. Check that each circuit produces a momentary engine speed drop.

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-445, "Diagnosis Procedure".

# 3.check ignition signal function

## (X) Without CONSULT-III

1. Let engine idle.

Read the voltage signal between ECM harness connector terminals with an oscilloscope.

ECM					
+		_		Voltage signal	
Connector	Terminal	Connector	Terminal		
	9				
	10	E16	E16 112	50mSec/div	
<b>-</b> 7	11				
F7	18			<u> </u>	
	19				
	21			2V/div JMBIA0035GB	

#### NOTE:

The pulse cycle changes depending on rpm at idle.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-445, "Diagnosis Procedure".

# Diagnosis Procedure

# 1. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF, wait at least 10 seconds and then turn it ON.
- 2. Check the voltage between ECM harness connector terminals.

EC-445

INFOID:0000000005536880

Connector	+	_	Voltage
Connector	Terminal	Terminal	
E16	105	112	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to EC-134, "Diagnosis Procedure".

# 2.CHECK IGNITION COIL POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect condenser harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between condenser harness connector and ground.

Condenser		Ground	Voltage
Connector	Terminal	Ground	voltage
F13	1	Ground	Battery voltage

#### Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

# 3.check ignition coil power supply circuit-iii

- Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between IPDM E/R harness connector and condenser harness connector.

IPDM E/R		Condenser		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F12	49	F13	1	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> Refer to EC-134, "Diagnosis Procedure".

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4. CHECK CONDENSER GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Check the continuity between condenser harness connector and ground.

Cond	lenser	Ground	Continuity
Connector	Terminal	Ground	
F13	2	Ground	Existed

3. Also check harness for short to power.

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to power in harness or connectors.

## **5.**CHECK CONDENSER

#### Refer to EC-449, "Component Inspection (Condenser)"

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace condenser.

# 6. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-V

- 1. Reconnect all harness connectors disconnected.
- 2. Disconnect ignition coil harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between ignition coil harness connector and ground.

	)
_	ι.
_	

D

Е

M

Ν

Ignition coil		Ground	Voltage	
Cylinder	Connector	Terminal	Giodila	vollage
1	F31	3		
2	F32	3	Ground	Battery voltage
3	F33	3		
4	F34	3		
5	F35	3		
6	F36	3		

#### Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace harness or connectors.

## 7.CHECK IGNITION COIL GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Check the continuity between ignition coil harness connector and ground.

Ignition coil			Ground	Continuity
Cylinder	Connector	Terminal	Ground	Continuity
1	F31	2	Ground	Existed
2	F32	2		
3	F33	2		
4	F34	2		
5	F35	2		
6	F36	2	1	

3. Also check harness for short to power.

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to power in harness or connectors.

## 8.check ignition coil output signal circuit for open and short

- 1. Disconnect ECM harness connector.
- Check the continuity between ignition coil harness connector and ECM harness connector.

Ignition coil ECM			CM	Continuity	
Cylinder	Connector	Terminal	Connector	Terminal	Continuity
1	F31	1		11	
2	F32	1	F7	10	
3	F33	1		9	Existed
4	F34	1		21	Existed
5	F35	1		19	
6	F36	1		18	

Also check harness for short to ground and short to power.

Is the inspection result normal?

Revision: 2009 September

#### < DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

## 9. CHECK IGNITION COIL WITH POWER TRANSISTOR

Refer to EC-448, "Component Inspection (Ignition Coil with Power Transistor)".

## Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace malfunctioning ignition coil with power transistor.

## 10. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### >> INSPECTION END

## Component Inspection (Ignition Coil with Power Transistor)

INFOID:0000000005536881

# 1. CHECK IGNITION COIL WITH POWER TRANSISTOR-I

- 1. Turn ignition switch OFF.
- 2. Disconnect ignition coil harness connector.
- 3. Check resistance between ignition coil terminals as per the following.

Terminal No. (Polarity)	Resistance Ω [at 25°C (77°F)]	
1 and 2	Except 0 or ∞	
1 and 3	Except 0	
2 and 3		

## Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace malfunctioning ignition coil with power transistor.

## 2.CHECK IGNITION COIL WITH POWER TRANSISTOR-II

#### **CAUTION:**

#### Perform the following procedure in a place with no combustible objects and good ventilation.

- 1. Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- 3. Remove fuel pump fuse in IPDM E/R to release fuel pressure.

#### NOTE:


Do not use CONSULT-III to release fuel pressure, or fuel pressure applies again during the following procedure.

- 4. Start engine.
- 5. After engine stalls, crank it 2 or 3 times to release all fuel pressure.
- 6. Turn ignition switch OFF.
- 7. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- 8. Remove ignition coil and spark plug of the cylinder to be checked.
- 9. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 10. Connect spark plug and harness connector to ignition coil.
- 11. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 12. Crank engine for approximately 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

#### Spark should be generated.

### **CAUTION:**

 During the operation, always stay 0.5 m (19.7 in) or more away from the spark plug and the ignition coil. Be careful

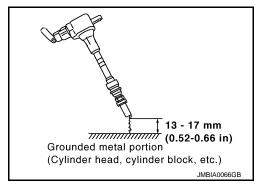

#### **IGNITION SIGNAL**

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

INFOID:0000000005536882

not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.

• It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken.

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace malfunctioning ignition coil with power transistor.

## Component Inspection (Condenser)

# 1. CHECK CONDENSER

- 1. Turn ignition switch OFF.
- 2. Disconnect condenser harness connector.
- 3. Check resistance between condenser terminals as per the following.

Terminals	Resistance
1 and 2	Above 1 M $\Omega$ [at 25C $^{\circ}$ (77C $^{\circ}$ )]

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace condenser.

EC

Α

.0

C

D

Е

F

G

Н

Κ

L

M

Ν

Р

INFOID:0000000005536884

INFOID:0000000005536885

## MALFUNCTION INDICATOR LAMP


Description

The Malfunction Indicator Lamp (MIL) is located on the combination meter.

The MIL will illuminate when the ignition switch is turned ON without the engine running. This is a bulb check.

When the engine is started, the MIL should turn off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

For details, refer to EC-102, "Diagnosis Description".

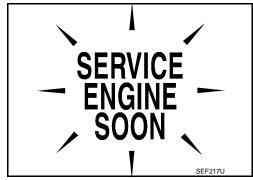

## Component Function Check

# 1. CHECK MIL FUNCTION

- 1. Turn ignition switch ON.
- Check that MIL illuminates.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-450, "Diagnosis Procedure".

## Diagnosis Procedure

## 1.CHECK DTC

Check that DTC UXXXX is not displayed.

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble diagnosis for DTC UXXXX.

## 2.CHECK COMBINATION METER FUNCTION

Refer to MWI-34, "CONSULT-III Function (METER/M&A)".

#### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace.

## 3. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### Is the inspection result normal?

YES >> Replace combination meter.

NO >> Repair or replace.

Α


EC

Е

# ON BOARD REFUELING VAPOR RECOVERY (ORVR)

Description

INFOID:0000000005536886

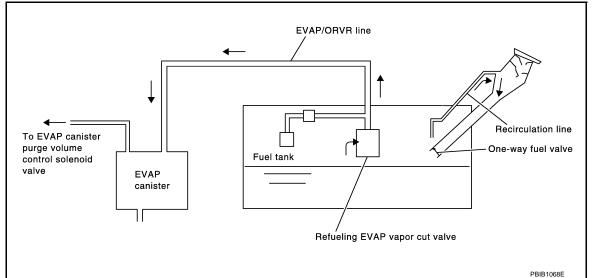

From the beginning of refueling, the air and vapor inside the fuel tank go through refueling EVAP vapor cut valve and EVAP/ORVR line to the EVAP canister. The vapor is absorbed by the EVAP canister and the air is released to the atmosphere.

When the refueling has reached the full level of the fuel tank, the refueling EVAP vapor cut valve is closed and refueling is stopped because of auto shut-off. The vapor which was absorbed by the EVAP canister is purged during driving.

#### **WARNING:**

When conducting inspections below, be sure to observe the following:

- Put a "CAUTION: FLAMMABLE" sign in workshop.
- Never smoke while servicing fuel system. Keep open flames and sparks away from work area.
- Always to furnish the workshop with a CO2 fire extinguisher.

#### **CAUTION:**

- Before removing fuel line parts, carry out the following procedures:
- Put drained fuel in an explosion-proof container and put lid on securely.
- Release fuel pressure from fuel line. Refer to <u>EC-530, "Inspection"</u>.
- Disconnect battery ground cable.
- Always replace O-ring when the fuel gauge retainer is removed.
- Never kink or twist hose and tube when they are installed.
- Never tighten hose and clamps excessively to avoid damaging hoses.
- After installation, run engine and check for fuel leakage at connections.
- Never attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically.
   Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.

## Component Function Check

INFOID:0000000005536887

N

## 1. CHECK ORVR FUNCTION

Check whether the following symptoms are present.

- Fuel odor from EVAP canister is strong.
- Cannot refuel/Fuel odor from the fuel filler opening is strong while refueling.

#### Are any symptoms present?

YES >> Go to EC-451, "Diagnosis Procedure".

NO >> INSPECTION END

INFOID:0000000005536888

# Diagnosis Procedure 1.INSPECTION START

Check whether the following symptoms are present.

A: Fuel odor from EVAP canister is strong.

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

B: Cannot refuel/Fuel odor from the fuel filler opening is strong while refueling.

#### A or B

- A >> GO TO 2.
- B >> GO TO 7.

# 2.CHECK EVAP CANISTER

- 1. Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 2.1 kg (4.6 lb).

#### Is the inspection result normal?

YES >> GO TO 3.


NO >> GO TO 4.

## 3. CHECK IF EVAP CANISTER IS SATURATED WITH WATER

Check if water will drain from EVAP canister

#### Does water drain from the EVAP canister?

YES >> GO TO 4. NO >> GO TO 6.

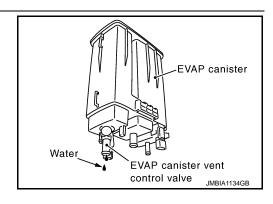

## 4. REPLACE EVAP CANISTER

Replace EVAP canister with a new one.

>> GO TO 5.

## 5.DETECT MALFUNCTIONING PART

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

## 6.CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-454, "Component Inspection".

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

## 7. CHECK EVAP CANISTER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 2.1 kg (4.6 lb).

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 9.

## 8. CHECK IF EVAP CANISTER IS SATURATED WITH WATER

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 6. NO >> GO TO 11.

EVAP canister Water EVAP canister vent control valve JMBIA1134GB

9. REPLACE EVAP CANISTER

Replace EVAP canister with a new one.

>> GO TO 10.

10.DETECT MALFUNCTIONING PART

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

11. CHECK VENT HOSES AND VENT TUBES

Check hoses and tubes between EVAP canister and refueling control valve for clogging, kinks, looseness and improper connection.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace hoses and tubes.

12. CHECK FILLER NECK TUBE

Check recirculation line for clogging, dents and cracks.

Is the inspection result normal?

YES >> GO TO 13.

NO >> Replace filler neck tube.

13. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-454, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 14.

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

14. CHECK FUEL FILLER TUBE

Check filler neck tube and hose connected to the fuel tank for clogging, dents and cracks.

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace fuel filler tube.

15. CHECK ONE-WAY FUEL VALVE-I

Check one-way valve for clogging.

Is the inspection result normal?

YES >> GO TO 16.

>> Repair or replace one-way fuel valve with fuel tank.

16.CHECK ONE-WAY FUEL VALVE-II

- Remove fuel filler tube and hose.

Α

EC

D

Е

N

Р

Check that fuel is drained from the tank.

Revision: 2009 September

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]


Check one-way fuel valve for operation as per the following.
 When a stick is inserted, the valve should open, when removing stick it should close.

Do not drop any material into the tank.

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace fuel filler tube or replace one-way fuel valve with fuel tank.

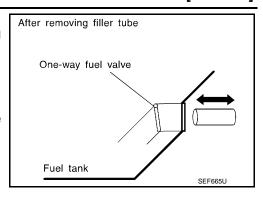

INFOID:0000000005536889

## Component Inspection

## 1. INSPECTION START

Will CONSULT-III be used?

#### Will CONSULT-III be used?

YES >> GO TO 2. NO >> GO TO 3.


## 2.CHECK REFUELING EVAP VAPOR CUT VALVE

## **With CONSULT-III**

- Turn ignition switch OFF.
- 2. Remove fuel tank. Refer to FL-12, "Exploded View".
- 3. Drain fuel from the tank as per the following:
- Remove fuel feed hose located on the fuel gauge retainer.
- Connect a spare fuel hose, one side to fuel gauge retainer where the hose was removed and the other side to a fuel container.
- Drain fuel using "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT-III.
- 4. Check refueling EVAP vapor cut valve for being stuck to close as per the following. Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
- 5. Check refueling EVAP vapor cut valve for being stuck to open as per the following.
- Connect vacuum pump to hose end.
- Remove fuel gauge retainer with fuel gauge unit.

#### Always replace O-ring with new one.

- Turn fuel tank upside down.
- Apply vacuum pressure to hose end [-13.3 kPa (-0.136 kg/cm<sup>3</sup>, -1.93 psi)] with fuel gauge retainer remaining open and check that the pressure is applicable.

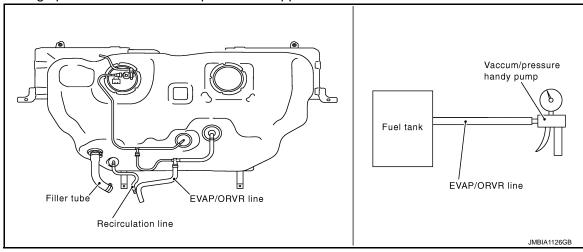

## Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]


# 3.check refueling evap vapor cut valve

#### **®Without CONSULT-III**

- Turn ignition switch OFF.
- 2. Remove fuel tank. Refer to FL-12, "Exploded View".
- Drain fuel from the tank as per the following:
- Remove fuel gauge retainer.
- Drain fuel from the tank using a handy pump into a fuel container.
- 4. Check refueling EVAP vapor cut valve for being stuck to close as per the following. Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
- 5. Check refueling EVAP vapor cut valve for being stuck to open as per the following.
- Connect vacuum pump to hose end.
- Remove fuel gauge retainer with fuel gauge unit.

#### Always replace O-ring with new one.

- Turn fuel tank upside down.
- Apply vacuum pressure to hose end [–13.3 kPa (–0.136 kg/cm³, –1.93 psi)] with fuel gauge retainer remaining open and check that the pressure is applicable.

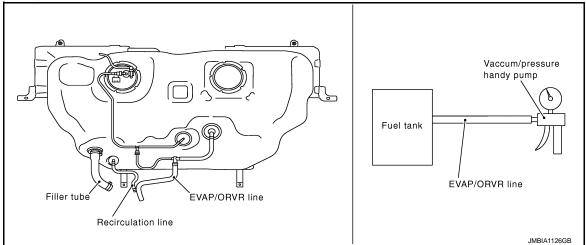

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

EC

D

Е

F

Н

1

K

L

M

Ν


0

Р

2010 Murano

## POSITIVE CRANKCASE VENTILATION

Description INFOID:000000005536890

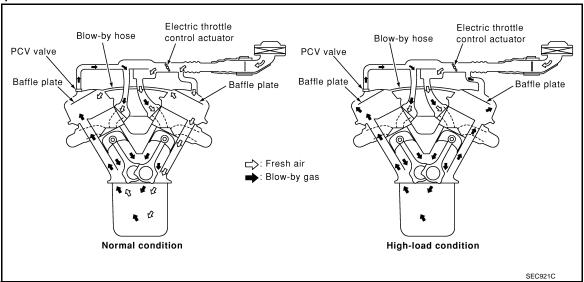

This system returns blow-by gas to the intake manifold.


The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold.

During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve

Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air. The ventilating air is drawn from the air inlet tubes into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover.

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the air inlet tubes under all conditions.

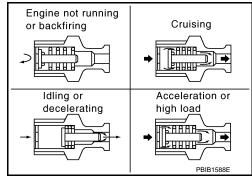

# Component Inspection


INFOID:0000000005536891

## 1. CHECK PCV VALVE

With engine running at idle, remove PCV valve from rocker cover. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over valve inlet.

Is the inspection result normal?


YES >> INSPECTION END NO >> Replace PCV valve.

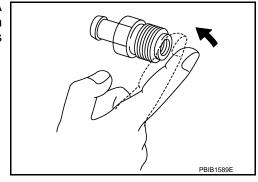

## REFRIGERANT PRESSURE SENSOR

Description INFOID:0000000005536892

The refrigerant pressure sensor is installed at the condenser of the air conditioner system. The sensor uses an electrostatic volume pressure transducer to convert refrigerant pressure to voltage. The voltage signal is sent to ECM, and ECM controls cooling fan system.

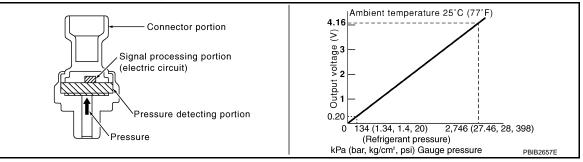

# Component Function Check

# 1. CHECK REFRIGERANT PRESSURE SENSOR FUNCTION

- Start engine and warm it up to normal operating temperature.
- Turn A/C switch and blower fan switch ON.
- Check the voltage between ECM harness connector terminals under the following conditions.

Connector	+	_	Voltage (V)
Connector	Terminal	Terminal	
F8	39 (Refrigerant pressure sensor signal)	40 (Sensor ground)	1.0 - 4.0

#### Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-457, "Diagnosis Procedure".

# Diagnosis Procedure

# 1. CHECK GROUND CONNECTION

- Turn A/C switch and blower fan switch OFF.
- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-42, "Circuit Inspection".

#### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

# 2.CHECK REFRIGERANT PRESSURE SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect refrigerant pressure sensor harness connector.
- Turn ignition switch ON.
- Check the voltage between refrigerant pressure sensor harness connector and ground.

Refrigerant p	essure sensor	Ground	Voltage (V)	
Connector	Terminal	Ground		
E300	1	Ground	Approx. 5	

#### Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

**EC-457** Revision: 2009 September 2010 Murano

EC

Α

D

INFOID:0000000005536893

K

INFOID:0000000005536894

N

Р

# 3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F123, E6
- IPDM E/R harness connectors E10, E346
- Harness for open or short between ECM and refrigerant pressure sensor
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

## 4. CHECK REFRIGERANT PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between refrigerant pressure sensor harness connector and ECM harness connector.

Refrigerant pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E300	3	F8	40	Existed

4. Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

#### DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F123, E6
- IPDM E/R harness connectors E10, E346
- · Harness for open or short between ECM and refrigerant pressure sensor
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

## 6.CHECK REFRIGERANT PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between refrigerant pressure sensor harness connector and ECM harness connector.

Refrigerant p	ressure sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E300	2	F8	39	Existed

Also check harness for short to ground and short to power.

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

## 7.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F123, E6
- IPDM E/R harness connectors E10, E346
- Harness for open or short between ECM and refrigerant pressure sensor
  - >> Repair open circuit, short to ground or short to power in harness or connectors.

## 8. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

#### Is the inspection result normal?

YES >> Replace refrigerant pressure sensor.

Revision: 2009 September EC-458 2010 Murano

## REFRIGERANT PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

NO >> Repair or replace malfunctioning part.

Α

EC

С

D

Е

F

G

Н

1

J

Κ

L

M

Ν

0

Ρ

## VARIABLE INDUCTION AIR SYSTEM

**Description** 

#### Power Valves 1 and 2

The power valves 1 and 2 are installed in intake manifold collector and used to control the suction passage of the variable induction air control system. They are set in the fully closed or fully opened position by the power valve actuators 1 and 2 operated by the vacuum stored in the vacuum tank. The vacuum to power valve actuators is controlled by the VIAS control solenoid valves 1 and 2.


## Component Function Check

INFOID:0000000005536896

## 1. CHECK OVERALL FUNCTION-I

#### (II) With CONSULT-III

- 1. Start engine and warm it up to the normal operating temperature.
- 2. Perform "VIAS S/V-1" in "ACTIVE TEST" mode with CONSULT-III.
- 3. Turn VIAS control solenoid valve 1 "ON" and "OFF", and check that power valve actuator 1 rod moves.

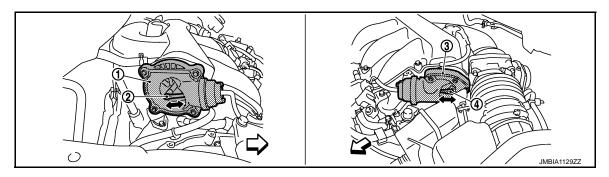


- Power valve actuator 1
- 2. Power valve actuator 1 rod
- Power valve actuator 2

- 4. Power valve actuator 2 rod
- <br >
  <br />
  <br/>
  <br />
  <br

#### (X) Without CONSULT-III

- 1. Start engine and warm it up to the normal operating temperature.
- 2. Rev engine quickly up to approximately 5,000 rpm.
- 3. Check that power valve actuator 1 rod moves.

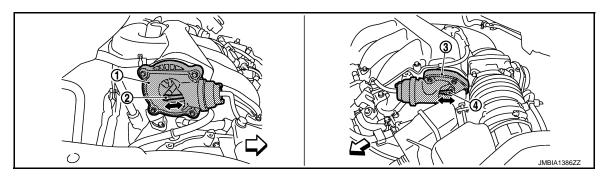

- Power valve actuator 1
- 2. Power valve actuator 1 rod
- 3. Power valve actuator 2

<□ : Vehicle front</li>

## Is the inspection result normal?

YES >> GO TO 2.

NO >> EC-461, "Diagnosis Procedure".

## 2.CHECK OVERALL FUNCTION-II

Power valve actuator 2 rod

## (P) With CONSULT-III


Revision: 2009 September EC-460 2010 Murano

#### VARIABLE INDUCTION AIR SYSTEM

#### < DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

- Perform "VIAS S/V-2" in "ACTIVE TEST" mode with CONSULT-III.
- Turn VIAS control solenoid valve 2 "ON" and "OFF", and check that power valve actuator 2 rod moves.

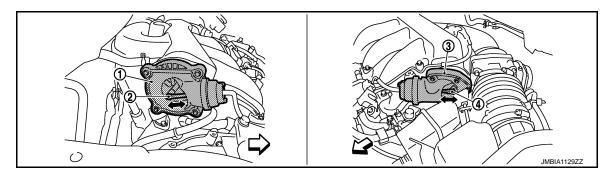


- Power valve actuator 1
- Power valve actuator 1 rod
- Power valve actuator 2

Power valve actuator 2 rod

< > : Vehicle front

## Without CONSULT-III

- When revving engine up to 5,000 rpm quickly.
- Rev engine quickly up to approximately 5,000 rpm. 2.
- Check that power valve actuator 2 rod moves.

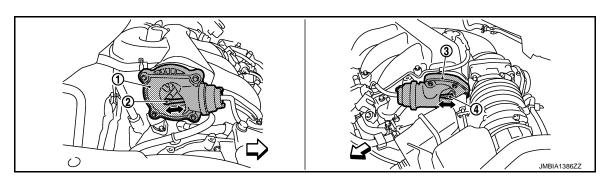

- Power valve actuator 1
- Power valve actuator 1 rod
- Power valve actuator 2

: Vehicle front

#### Is the inspection result normal?

Power valve actuator 2 rod

YES >> INSPECTION END

>> EC-461, "Diagnosis Procedure". NO

## Diagnosis Procedure

## 1.INSPECTION START

Confirm the malfunctioning system (power valve 1 or power valve 2). Refer to EC-460, "Component Function Check".

#### Which system is related to the incident?

Power valve 1>>GO TO 2.

Power valve 2>>GO TO 6.

## 2.CHECK VACUUM EXISTENCE-I

#### (P) With CONSULT-III

- Stop engine and disconnect vacuum hose connected to power valve actuator 1.
- 2. Start engine and let it idle.
- Perform "VIAS S/V-1" in "ACTIVE TEST" mode with CONSULT-III.
- Turn VIAS control solenoid valve 1 ON and OFF, and check vacuum existence under the following conditions.

EC

Α

D

Е

M

INFOID:0000000005536897

VIAS S/V-1	Vacuum
ON	Existed
OFF	Not existed

#### **⋈** Without CONSULT-III

- Stop engine and disconnect vacuum hose connected to power valve actuator 1.
- 2. Disconnect VIAS control solenoid valve 1 harness connector.
- Start engine.
- 4. Rev engine quickly up to approximately 5,000 rpm.
- 5. Check vacuum existence under the following conditions.

Condition	Vacuum
Idle	Existed
Rev engine quickly up to approximately 5,000 rpm	Not existed

#### Is the inspection result normal?

YES >> Repair or replace power valve actuator 1.

NO >> GO TO 3.

# 3. CHECK VACUUM TANK

- Stop engine and disconnect vacuum hose connected to intake manifold collector.
- Start engine and let it idle.
- Check vacuum existence from intake manifold collector.

#### Does vacuum existence from the intake manifold collector?

YES >> GO TO 4.

NO >> Replace intake manifold collector.


## 4. CHECK VACUUM HOSE

- Stop engine.
- Check vacuum hose for crack, clogging, improper connection or disconnection. Refer to <u>EC-94</u>, "System Diagram".

#### Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair hoses or tubes.

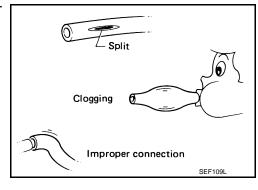

# 5. CHECK VIAS CONTROL SOLENOID VALVE 1

Refer to EC-388, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace VIAS control solenoid valve 1.

## 6.CHECK VACUUM EXISTENCE-II

#### (A) With CONSULT-III

- 1. Stop engine and disconnect vacuum hose connected to power valve actuator 2.
- Start engine and let it idle.
- 3. Perform "VIAS S/V-2" in "ACTIVE TEST" mode with CONSULT-III.
- Turn VIAS control solenoid valve 2 ON and OFF, and check vacuum existence under the following conditions.

## VARIABLE INDUCTION AIR SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VQ35DE]

VIAS S/V 2	Vacuum
ON	Existed
OFF	Not existed

EC

Α

#### Without CONSULT-III

- Stop engine and disconnect vacuum hose connected to power valve actuator 2.
- 2. Disconnect VIAS control solenoid valve 1 harness connector.
- Start engine.
- 4. Rev engine quickly up to approximately 5,000 rpm.
- 5. Check vacuum existence under the following conditions.

Condition	Operation
Idle	Existed
Rev engine quickly up to approximately 5,000 rpm	Not existed

#### Is the inspection result normal?

YES >> Repair or replace power valve actuator 2.

NO >> GO TO 7.

## 7. CHECK VACUUM HOSE


Stop engine.

2. Check vacuum hose for crack, clogging, improper connection or disconnection. Refer to EC-94, "System Diagram".

#### Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair hoses or tubes.

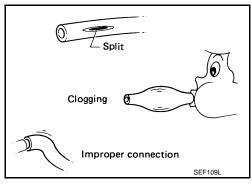

# 8. CHECK VIAS CONTROL SOLENOID VALVE 2

Refer to EC-391, "Component Inspection".

#### Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace VIAS control solenoid valve 2.

## 9. CHECK INTERMITTENT INCIDENT

Refer to GI-39, "Intermittent Incident".

>> INSPECTION END

D

Е

F

Н

L

K

Ν

# **ECU DIAGNOSIS INFORMATION**

## **ECM**

Reference Value

#### VALUES ON THE DIAGNOSIS TOOL

#### Remarks:

- Specification data are reference values.
- Specification data are output/input values which are detected or supplied by the ECM at the connector.
  - \* Specification data may not be directly related to their components signals/values/operations.

I.e. Adjust ignition timing with a timing light before monitoring IGN TIMING, because the monitor may show the specification data in spite of the ignition timing not being adjusted to the specification data. This IGN TIMING monitors the data calculated by the ECM according to the signals input from the camshaft position sensor and other ignition timing related sensors.

Monitor Item	Condition		Values/Status
ENG SPEED	Run engine and compare CONSULT-III value with the tachometer indication.		Almost the same speed as the tachometer indication.
MAS A/F SE-B1	See EC-126, "Description".		
B/FUEL SCHDL	See EC-126, "Description".		
A/F ALPHA-B1	See EC-126, "Description".		
A/F ALPHA-B2	See EC-126, "Description".		
COOLAN TEMP/S	Engine: After warming up		More than 70°C (158°F)
A/F SEN1 (B1)	Engine: After warming up	Maintaining engine speed at 2,000 rpm	Fluctuates around 2.2 V
A/F SEN1 (B2)	Engine: After warming up	Maintaining engine speed at 2,000 rpm	Fluctuates around 2.2 V
HO2S2 (B1)	<ul> <li>Revving engine from idle to 3,000 rpm quickly after the following conditions are met.</li> <li>Engine: After warming up</li> <li>After keeping engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>		0 - 0.3 V ←→ Approx. 0.6 - 1.0 V
HO2S2 (B2)	<ul> <li>Revving engine from idle to 3,000 rpm quickly after the following conditions are met.</li> <li>Engine: After warming up</li> <li>After keeping engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>		0 - 0.3 V ←→ Approx. 0.6 - 1.0 V
HO2S2 MNTR (B1)	<ul> <li>Revving engine from idle to 3,000 rpm quickly after the following conditions are met.</li> <li>Engine: After warming up</li> <li>After keeping engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>		LEAN ←→ RICH
HO2S2 MNTR (B2)	<ul> <li>Revving engine from idle to 3,000 rpm quickly after the following conditions are met.</li> <li>Engine: After warming up</li> <li>After keeping engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>		$LEAN \longleftrightarrow RICH$
VHCL SPEED SE	Turn drive wheels and compare CONSULT-III value with the speedometer indication.		Almost the same speed as speedometer indication
BATTERY VOLT	Ignition switch: ON (Engine stopped)		11 - 14 V
• Ignition switch: (	Ignition switch: ON	Accelerator pedal: Fully released	0.5 - 1.0 V
ACCEL SEN 1	(Engine stopped)	Accelerator pedal: Fully depressed	4.2 - 4.8 V
ACCEL SEN 2*1  • Ignition switch: ON (Engine stopped)	Ignition switch: ON	Accelerator pedal: Fully released	0.5 - 1.0 V
	3	Accelerator pedal: Fully depressed	4.2 - 4.8 V

Monitor Item	em Condition		Values/Status	
	Ignition switch: ON	Accelerator pedal: Fully released	More than 0.36 V	
TP SEN 1-B1	<ul><li>(Engine stopped)</li><li>Selector lever: D position</li></ul>	Accelerator pedal: Fully depressed	Less than 4.75 V	
Ignition switch: ON	Accelerator pedal: Fully released	More than 0.36 V		
TP SEN 2-B1* <sup>1</sup>	<ul><li>(Engine stopped)</li><li>Selector lever: D position</li></ul>	Accelerator pedal: Fully depressed	Less than 4.75 V	•
FUEL T/TMP SE	Ignition switch: ON		Indicates fuel tank tempera- ture	
INT/A TEMP SE	Ignition switch: ON		Indicates intake air temperature	
EVAP SYS PRES	Ignition switch: ON		Approx. 1.8 - 4.8 V	•
FUEL LEVEL SE	Ignition switch: ON		Depending on fuel level of fuel tank	
START SIGNAL	• Ignition switch: $ON \rightarrow START \rightarrow C$	N	$OFF \to ON \to OFF$	
	Ignition switch: ON	Accelerator pedal: Fully released	ON	•
CLSD THL POS	(Engine stopped)	Accelerator pedal: Slightly depressed	OFF	
	- Fraince Afficiency	Air conditioner switch: OFF	OFF	
AIR COND SIG	Engine: After warming up, idle the engine	Air conditioner switch: ON (Compressor operates.)	ON	•
2/N DOOLOW	1	Selector lever: P or N position	ON	
P/N POSI SW	Ignition switch: ON	Selector lever: Except above position	OFF	
	Engine: After warming up, idle the	Steering wheel: Not being turned	OFF	
PW/ST SIGNAL	V/ST SIGNAL engine	Steering wheel: Being turned	ON	٠
	Rear window defogger switch: ON and/or	ON		
LOAD SIGNAL	Ignition switch: ON	Lighting switch: 2nd position		=
		Rear window defogger switch and lighting switch: OFF	OFF	
GNITION SW	• Ignition switch: $ON \rightarrow OFF \rightarrow ON$		$ON \to OFF \to ON$	
IEATED EANLOW	Engine: After warming up, idle the	Heater fan switch: ON	ON	
IEATER FAN SW	engine	Heater fan switch: OFF	OFF	
DAKE CW	- Impition quitable ON	Brake pedal: Fully released	OFF	
BRAKE SW	Ignition switch: ON	Brake pedal: Slightly depressed	ON	
	Engine: After warming up	Idle	2.0 - 3.0 msec	٠
NJ PULSE-B1	Selector lever: P or N position     Air conditioner switch: OFF     No load	2,000 rpm	1.9 - 2.9 msec	
	Engine: After warming up	Idle	2.0 - 3.0 msec	
NJ PULSE-B2	Selector lever: P or N position     Air conditioner switch: OFF     No load	2,000 rpm	1.9 - 2.9 msec	
	Engine: After warming up	Idle	7 - 17°BTDC	
GN TIMING	<ul><li>Selector lever: P or N position</li><li>Air conditioner switch: OFF</li><li>No load</li></ul>	2,000 rpm	25 - 45°BTDC	
	Engine: After warming up	Idle	5 - 35%	
CAL/LD VALUE	Selector lever: P or N position     Air conditioner switch: OFF     No load	2,500 rpm	5 - 35%	
	Engine: After warming up	Idle	2.0 - 6.0 g·m/s	
MASS AIRFLOW	Selector lever: P or N position     Air conditioner switch: OFF     No load	2,500 rpm	7.0 - 20.0 g·m/s	

## < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Values/Status
PURG VOL C/V	Engine: After warming up     Selector lever: P or N position     Air conditioner switch: OFF	Idle (Accelerator pedal: Not depressed even slightly, after engine starting.)	0%
	No load	2,000 rpm	_
	Engine: After warming up	Idle	−5 - 5°CA
INT/V TIM (B1)	<ul><li>Selector lever: P or N position</li><li>Air conditioner switch: OFF</li><li>No load</li></ul>	2,000 rpm	Approx. 0 - 30°CA
	Engine: After warming up	Idle	−5 - 5°CA
INT/V TIM (B2)	<ul><li>Selector lever: P or N position</li><li>Air conditioner switch: OFF</li><li>No load</li></ul>	2,000 rpm	Approx. 0 - 30°CA
	Engine: After warming up	Idle	0 - 2%
INT/V SOL (B1)	<ul><li>Selector lever: P or N position</li><li>Air conditioner switch: OFF</li><li>No load</li></ul>	2,000 rpm	Approx. 0 - 50%
	Engine: After warming up	Idle	0 - 2%
INT/V SOL (B2)	<ul><li>Selector lever: P or N position</li><li>Air conditioner switch: OFF</li><li>No load</li></ul>	2,000 rpm	Approx. 0 - 50%
VIAS S/V-1	<ul> <li>Engine: After warming up</li> <li>Selector lever: P or N position</li> <li>Air conditioner switch: OFF</li> <li>No load</li> </ul>	When revving engine up to 5,000 rpm quickly	$OFF \to ON \to OFF$
VIAS S/V-2	<ul> <li>Engine: After warming up</li> <li>Selector lever: P or N position</li> <li>Air conditioner switch: OFF</li> <li>No load</li> </ul>	When revving engine up to 5,000 rpm quickly	$OFF \to ON \to OFF$
	- Francisco Affartuarraina un idla tha	Air conditioner switch: OFF	OFF
AIR COND RLY	Engine: After warming up, idle the engine	Air conditioner switch: ON (Compressor operates)	ON
ENGINE MOUNT	Engine: After warming up	Below 950 rpm	IDLE
ENGINE MOONT	Eligilie. Alter warming up	Above 950 rpm	TRVL
FUEL PUMP RLY	<ul><li>For 1 second after turning ignition</li><li>Engine running or cranking</li></ul>	switch: ON	ON
	Except above		OFF
VENT CONT/V	Ignition switch: ON	Ignition switch: ON	
THRTL RELAY	Ignition switch: ON		ON
COOLING FAN engine	Engine: After warming up, idle the engine     Air conditioner switch: OFF	Engine coolant temperature: 97°C (206°F) or less	OFF
		Engine coolant temperature: Between 98°C (208°F) and 99°C (210°F)	LOW
		Engine coolant temperature: Between 100°C (212°F) and 104°C (219°F)	MID
		Engine coolant temperature: 105°C (221°F) or more	н
HO2S2 HTR (B1)	<ul> <li>Engine speed: Below 3,600 rpm after the following conditions are met.</li> <li>Engine: After warming up</li> <li>Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>		ON
	Engine speed: Above 3,600 rpm		OFF


Monitor Item	Condition		Values/Status
HO2S2 HTR (B2)	<ul> <li>Engine speed: Below 3,600 rpm after the following conditions are met.</li> <li>Engine: After warming up</li> <li>Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>		ON
	Engine speed: Above 3,600 rpm		OFF
I/P PULLY SPD	Vehicle speed: More than 20 km/h (12 MPH)		Almost the same speed as the tachometer indication
VEHICLE SPEED			Almost the same speed as the speedometer indication
IDL A/V LEARN	DL A/V LEARN • Engine: Running	Idle air volume learning has not been performed yet.	YET
		Idle air volume learning has already been performed successfully.	CMPLT
ENG OIL TEMP	Engine: After warming up		More than 70°C (158°F)
TRVL AFTER MIL	Ignition switch: ON	Vehicle has traveled after MIL has illuminated.	0 - 65,535 km (0 - 40,723 miles)
A/F S1 HTR (B1)	Engine: After warming up, idle the (More than 140 seconds after star)	ting engine)	4 - 100%
A/F S1 HTR (B2)	Engine: After warming up, idle the (More than 140 seconds after star)		4 - 100%
AC PRESS SEN	Engine: Idle     Both A/C switch and blower fan sv	witch: ON (Compressor operates)	1.0 - 4.0 V
VHCL SPEED SE	Turn drive wheels and compare CONSULT-III value with the speedometer indication.		Almost the same speed as the speedometer indication
SET VHCL SPD	Engine: Running	ASCD: Operating	The preset vehicle speed is displayed
MAIN SW	Ignition switch: ON	MAIN switch: Pressed	ON
IVI) (III C C V	iginden switch. Six	MAIN switch: Released	OFF
CANCEL SW	Ignition switch: ON	CANCEL switch: Pressed	ON
CANCLE SW	s ignition switch. Oil	CANCEL switch: Released	OFF
RESUME/ACC SW	Ignition switch: ON	RESUME/ACCELERATE switch: Pressed	ON
RESUME/ACC SW	Ignition switch: ON	RESUME/ACCELERATE switch: Released	OFF
SET SW	Ignition switch: ON	SET/COAST switch: Pressed	ON
OLI OVV	- ignition switch. On	SET/COAST switch: Released	OFF
BRAKE SW1	Ignition switch: ON	Brake pedal: Fully released	ON
(ASCD brake switch)	- ignition switch. On	Brake pedal: Slightly depressed	OFF
BRAKE SW2	• Ignition quitoh: ON	Brake pedal: Fully released	OFF
(Stop lamp switch)	Ignition switch: ON	Brake pedal: Slightly depressed	ON
VHCL SPD CUT	Ignition switch: ON		NON
LO SPEED CUT	Ignition switch: ON		NON
AT OD MONITOR	Ignition switch: ON		OFF
AT OD CANCEL	Ignition switch: ON		OFF
CRUISE LAMP	Ignition switch: ON	MAIN switch: Pressed at the 1st time $\rightarrow$ at the 2nd time	$ON \to OFF$
	MAIN switch: ON	ASCD: Operating	ON
SET LAMP	When vehicle speed is between 40 km/h (25 MPH) and 144 km/h (89 MPH)	ASCD: Not operating	OFF

#### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Values/Status
ALT DUTY	Engine: Idle	0 - 80%
A/F ADJ-B1	Engine: Running	-0.330 - 0.330
A/F ADJ-B2	Engine: Running	-0.330 - 0.330
BAT CUR SEN	<ul> <li>Engine speed: Idle</li> <li>Battery: Fully charged*<sup>2</sup></li> <li>Selector lever: P or N position</li> <li>Air conditioner switch: OFF</li> <li>No load</li> </ul>	Approx. 2,600 - 3,500 mV
ALT DUTY SIG	Power generation voltage variable control: Operating	ON
	Power generation voltage variable control: Not operating	OFF
HO2 S2 DIAG1 (B1)	DTC P0139 self-diagnosis (delayed response) is incomplete.	INCMP
	DTC P0139 self-diagnosis (delayed response) is complete.	CMPLT
HO2 S2 DIAG1 (B2)	DTC P0159 self-diagnosis (delayed response) is incomplete.	INCMP
	DTC P0159 self-diagnosis (delayed response) is complete.	CMPLT
HO2 S2 DIAG2 (B1)	DTC P0139 self-diagnosis (slow response) is incomplete.	INCMP
	DTC P0139 self-diagnosis (slow response) is complete.	CMPLT
HO2 S2 DIAG2 (B2)	DTC P0159 self-diagnosis (slow response) is incomplete.	INCMP
	DTC P0159 self-diagnosis (slow response) is complete.	CMPLT

<sup>\*1:</sup> Accelerator pedal position sensor 2 signal and throttle position sensor 2 signal are converted by ECM internally. Thus, they differ from ECM terminals voltage signal.

#### **TERMINAL LAYOUT**

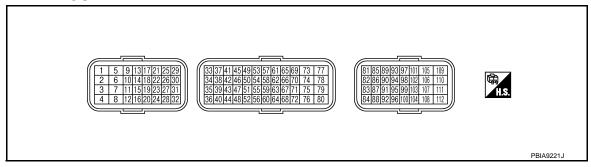

#### PHYSICAL VALUES

#### NOTE:

- ECM is located in the engine room left side near battery.
- Specification data are reference values.
- Pulse signal is measured by CONSULT-III.

<sup>\*2:</sup> Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

Termin	al No.	Description			Value	Α
+		Signal name	Input/ Output	Condition	Value (Approx.)	
1 (P/B) 3 (L/W) 29 (LG/R)	112	Fuel injector No. 6  Fuel injector No. 5  Fuel injector No. 4		<ul> <li>[Engine is running]</li> <li>Warm-up condition</li> <li>Idle speed NOTE: The pulse cycle changes depending on rpm at idle</li> </ul>	BATTERY VOLTAGE (11 - 14 V)★  50mSec/div  10V/div  JMBIA0047GB	C
30 (R/Y) 31 (R/W) 32 (R/B)	(B)	Fuel injector No. 3  Fuel injector No. 2  Fuel injector No. 1	Output	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Engine speed: 2,000 rpm</li></ul>	BATTERY VOLTAGE (11 - 14 V)★  50mSec/div  10V/div  JMBIA0048GB	E F
2 (G/W)	112 (B)	Throttle control motor power supply	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)	
4 (BR/Y)	112 (B)	A/F sensor 1 heater (bank 1)	Output	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Idle speed (More than 140 seconds after starting engine)</li></ul>	2.9 - 8.8 V★  50mSec/div  5V/div  JMBIA0902GB	H I J
5 (1)	112 (B)	Throttle control motor (Open)	Output	[Ignition switch: ON]  • Engine stopped  • Selector lever: D position  • Accelerator pedal: Fully depressed	0 - 14 V★  500μSec/div  5V/div  JMBIA0031GB	K
(L)	(6)			<ul><li>[Ignition switch: ON]</li><li>Engine stopped</li><li>Selector lever: D position</li><li>Accelerator pedal: Fully released</li></ul>	0 - 14 V★  500μSec/div  5V/div  JMBIA0032GB	M N
6 (P)	112 (B)	Throttle control motor (Close)	Output	[Ignition switch: ON]  • Engine stopped  • Selector lever: D position  • Accelerator pedal: Fully released	0 - 14 V★  500 μSec/div  5V/div  JMBIA1125GB	Ρ

Termin	al No.	Description			Value
+		Signal name	Input/ Output	Condition	(Approx.)
8 (SB)	112 (B)	A/F sensor 1 heater (bank 2)	Output	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Idle speed (More than 140 seconds after starting engine)</li></ul>	2.9 - 8.8 V★  50mSec/div  5V/div  JMBIA0030GB
9 (L/B)		Ignition signal No. 3		[Engine is running]	0 - 0.2 V★ 50mSec/div
10 (G/R)		Ignition signal No. 2		Warm-up condition     Idle speed     NOTE:     The pulse cycle changes de-	=
11 (Y/R)	112	Ignition signal No. 1	Output -	pending on rpm at idle	2V/div JMBIA0035GB
18 (GR/R)	(B)	Ignition signal No. 6			0.1 - 0.4 V★ 50mSec/div
19 (P)		Ignition signal No. 5		<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Engine speed: 2,000 rpm</li></ul>	-
21 (W)		Ignition signal No. 4		• Engine speed. 2,000 fpm	2V/div JMBIA0036GB
12 (B)	_	ECM ground	_	_	_
13 (P/B)	112 (B)	Heated oxygen sensor 2 heater (bank 1)	Output	<ul> <li>[Engine is running]</li> <li>Engine speed: Below 3,600 rpm after the following conditions are met</li> <li>Engine: after warming up</li> <li>Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>	10 V★  50mSec/div  5V/div  JMBIA0902GB
				[Ignition switch: ON] • Engine stopped [Engine is running] • Engine speed: Above 3,600 rpm	BATTERY VOLTAGE (11 - 14 V)
14 (GR)	112 (B)	Fuel pump relay	Output	[Ignition switch: ON] • For 1 second after turning ignition switch ON [Engine is running]	0 - 1.5 V
(GK)	(D)			[Ignition switch: ON] • More than 1 second after turning ignition switch ON	BATTERY VOLTAGE (11 - 14 V)
15 (O)	112 (B)	Throttle control motor relay	Output	[Ignition switch: $ON \rightarrow OFF$ ]	$0 - 1.0 \text{ V} \rightarrow \text{BATTERY VOLTAGE}$ (11 - 14 V) $\rightarrow$ 0 V
	(2)			[Ignition switch: ON]	0 - 1.0 V
16 (B/Y)	_	ECM ground	_		_

# < ECU DIAGNOSIS INFORMATION >

Termin	al No.	Description			Value
+		Signal name	Input/ Output	Condition	(Approx.)
17 (R)	112 (B)	Heated oxygen sensor 2 heater (bank 2)	Output	<ul> <li>[Engine is running]</li> <li>Engine speed: Below 3,600 rpm after the following conditions are met</li> <li>Engine: after warming up</li> <li>Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>	10 V★  50mSec/div  5V/div  JMBIA0902GB
				[Ignition switch: ON] • Engine stopped [Engine is running] • Engine speed: Above 3,600 rpm	BATTERY VOLTAGE (11 - 14 V)
24 (W/B)	112 (B)	ECM relay	Output	<ul><li>[Engine is running]</li><li>[Ignition switch: OFF]</li><li>A few seconds after turning ignition switch OFF</li></ul>	0 - 1.5 V
(VV/D)	(B)	(Self shut-off)	Output	[Ignition switch: OFF] • More than a few seconds after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14 V)
25	112	EVAP canister purge volume	0.45-4	<ul><li>[Engine is running]</li><li>Idle speed</li><li>Accelerator pedal: Not depressed even slightly, after engine starting</li></ul>	BATTERY VOLTAGE  (11 - 14 V)  50mSec/div  10V/div  JMBIA0039GB
25 (P/L)	(B)	control solenoid valve	Output	[Engine is running] • Engine speed: approximately 2,000 rpm (More than 100 seconds after starting engine)	BATTERY VOLTAGE  (11 - 14 V)★  50mSec/div  10V/div  JMBIA0040GB
	412			[Engine is running]  • Warm-up condition  • Idle speed	BATTERY VOLTAGE (11 - 14 V)
26 (GR/B)	112 (B)	VIAS control solenoid valve 2	Output	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>When revving engine up to 5,000 rpm quickly</li></ul>	BATTERY VOLTAGE (11 - 14 V) ↓ 0 - 1.0 V ↓ BATTERY VOLTAGE (11 - 14 V)
				<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Idle speed</li></ul>	BATTERY VOLTAGE (11 - 14 V)
27 (V)	112 (B)	VIAS control solenoid valve 1	Output	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>When revving engine up to 5,000 rpm quickly</li></ul>	BATTERY VOLTAGE (11 - 14 V) ↓ 0 - 1.0 V ↓ BATTERY VOLTAGE (11 - 14 V)

Termina	al No.	Description			Value
+		Signal name	Input/ Output	Condition	(Approx.)
28	112	Electronic controlled engine	Output	[Engine is running] • Idle speed	0 - 1.0 V
(BR/W)	(B)	mount control solenoid valve	Caipai	<ul><li>[Engine is running]</li><li>Engine speed: More than 950 rpm</li></ul>	BATTERY VOLTAGE (11 - 14 V)
33 (W)	112 (B)	Heated oxygen sensor 2 (bank 1)	Input	<ul> <li>[Engine is running]</li> <li>Revving engine from idle to 3,000 rpm quickly after the following conditions are met</li> <li>Engine: after warming up</li> <li>Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>	0 - 1.0 V
34 (W/L)	112 (B)	Heated oxygen sensor 2 (bank 2)	Input	<ul> <li>[Engine is running]</li> <li>Revving engine from idle to 3,000 rpm quickly after the following conditions are met</li> <li>Engine: after warming up</li> <li>Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load</li> </ul>	0 - 1.0 V
35 (B)	_	Sensor ground (Heated oxygen sensor 2)		_	_
36 (B)	_	Sensor ground (Throttle position sensor)	_	_	_
37	112	Throttle position copper 1	logut	<ul><li>[Ignition switch: ON]</li><li>Engine stopped</li><li>Selector lever: D position</li><li>Accelerator pedal: Fully released</li></ul>	More than 0.36 V
(W)	(B)	Throttle position sensor 1	Input	<ul> <li>[Ignition switch: ON]</li> <li>Engine stopped</li> <li>Selector lever: D position</li> <li>Accelerator pedal: Fully depressed</li> </ul>	Less than 4.75 V
38	112	Throttle position sensor 2	Input	<ul><li>[Ignition switch: ON]</li><li>Engine stopped</li><li>Selector lever: D position</li><li>Accelerator pedal: Fully released</li></ul>	Less than 4.75 V
(R)	(B)	THIOMIC POSITION SCHOOL 2	Input	<ul><li>[Ignition switch: ON]</li><li>Engine stopped</li><li>Selector lever: D position</li><li>Accelerator pedal: Fully depressed</li></ul>	More than 0.36 V
39 (R)	40 (G)	Refrigerant pressure sensor	Input	<ul> <li>[Engine is running]</li> <li>Warm-up condition</li> <li>Both A/C switch and blower fan motor switch: ON (Compressor operates)</li> </ul>	1.0 - 4.0 V
40 (G)	_	Sensor ground (Refrigerant pressure sensor)	_	_	_

Termin	al No.	Description			Value
+		Signal name	Input/ Output	Condition	Value (Approx.)
41	48	Power steering pressure sen-		[Engine is running] • Steering wheel: Being turned	0.5 - 4.5 V
(O/B)	(B/P)	sor	Output	<ul><li>[Engine is running]</li><li>Steering wheel: Not being turned</li></ul>	0.4 - 0.8 V
42 (BR)	44 (G/B)	Battery current sensor	Input	<ul> <li>[Engine is running]</li> <li>Battery: Fully charged*<sup>2</sup></li> <li>Idle speed</li> </ul>	2.6 - 3.5 V
44 (G/B)	_	Sensor ground (Battery current sensor)	_	_	_
45 (P)	49 (L)	A/F sensor 1 (bank 1)	Input	[Ignition switch: ON]	2.2 V
46 (Y)	52 (B/R)	Engine coolant temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with engine coolant temperature.
47 (G)	36 (B)	Sensor power supply (Throttle position sensor)	_	[Ignition switch: ON]	5 V
48 (B/P)	_	Sensor ground (Power steering pressure sensor)	_	_	_
49 (L)	112 (B)	A/F sensor 1 (bank 1)	Input	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Engine speed: 2,000 rpm</li></ul>	1.8 V Output voltage varies with air fuel ratio.
50 (L/Y)	56 (G/B)	Intake air temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with intake air temperature.
51 (R/Y)	44 (G/B)	Sensor power supply (Battery current sensor)	_	[Ignition switch: ON]	5 V
52 (B/R)	_	Sensor ground (Engine coolant temperature sensor/Engine oil temperature sensor)	_	_	_
53 (V)	57 (LG)	A/F sensor 1 (bank 2)	Input	[Ignition switch: ON]	2.2 V
54 (G)	52 (B/R)	Engine oil temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with engine oil temperature.
55 (SB)	48 (Y)	Sensor power supply (Power steering pressure sensor)	_	[Ignition switch: ON]	5 V
56 (G/B)	_	Sensor ground (Mass air flow sensor/Intake air temperature sensor)	_	_	_
57 (LG)	112 (B)	A/F sensor 1 (bank 2)	Input	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Engine speed: 2,000 rpm</li></ul>	1.8 V Output voltage varies with air fuel ratio.
58	56	Mass air flow sensor	Input	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Idle speed</li></ul>	0.9 - 1.2 V
(O)	(G/B)	MIGOS GII HOW SCHSUI	прис	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Engine speed: 2,500 rpm</li></ul>	1.6 - 1.9 V

Termin	al No.	Description			Value
+		Signal name	Input/ Output	Condition	(Approx.)
59 (G/W)	64 (B/R)	Sensor power supply [Camshaft position sensor (PHASE) (bank 1)]	_	[Ignition switch: ON]	5 V
60 (Y/B)	_	Sensor ground [Crankshaft position sensor (POS)]	_	_	_
61 (B)	67 (—)	Knock sensor (bank 1)	Input	[Engine is running] • Idle speed	2.5 V* <sup>1</sup>
62 (W)	67 (—)	Knock sensor (bank 2)	Input	[Engine is running] • Idle speed	2.5 V* <sup>1</sup>
63 (R/W)	68 (Y/G)	Sensor power supply [Camshaft position sensor (PHASE) (bank 2)]	_	[Ignition switch: ON]	5 V
64 (B/R)	_	Sensor ground [Camshaft position sensor (PHASE) (bank 1)]	_	_	_
65	60	Crankshaft position sensor (POS)	Input	<ul> <li>[Engine is running]</li> <li>Warm-up condition</li> <li>Idle speed</li> <li>NOTE:</li> <li>The pulse cycle changes depending on rpm at idle</li> </ul>	4.0 - 5.0 V★  1mSec/div  2V/div  JMBIA0041GB
(W/B)	(Y/B)			[Engine is running] • Engine speed: 2,000 rpm	4.0 - 5.0 V★  1mSec/div  2V/div  JMBIA0042GB
67 (—)	_	Sensor ground (Knock sensor)	_	_	_
68 (Y/G)	_	Sensor ground [Camshaft position sensor (PHASE) (bank 2)]	_	_	_
69 (BR/W)	68 (Y/G)	Camshaft position sensor (PHASE) (bank 2)	Input	<ul> <li>[Engine is running]</li> <li>Warm-up condition</li> <li>Idle speed         NOTE:         The pulse cycle changes depending on rpm at idle     </li> <li>[Engine is running]</li> <li>Engine speed is 2,000 rpm</li> </ul>	3.0 - 5.0 V★  20mSec/div  2V/div  JMBIA0045GB  20mSec/div  2V/div  JMBIA0046GB

Termin	al No.	Description			Value
+		Signal name	Input/ Output	Condition	(Approx.)
70	64	Camshaft position sensor	Input	<ul> <li>[Engine is running]</li> <li>Warm-up condition</li> <li>Idle speed</li> <li>NOTE:</li> <li>The pulse cycle changes depending on rpm at idle</li> </ul>	3.0 - 5.0 V★  20mSec/div  2V/div  JMBIA0045GB
(W/R)	(B/R)	(PHASE) (bank 1)	при	[Engine is running] • Engine speed is 2,000 rpm	3.0 - 5.0 V★  20mSec/div  2V/div  JMBIA0046GB
72 (BR/W)	40 (G)	Sensor power supply (Refrigerant pressure sensor)	_	[Ignition switch: ON]	5 V
				[Engine is running] • Warm-up condition • Idle speed	BATTERY VOLTAGE (11 - 14 V)
75 (Y)	112 (B)	Intake valve timing control so- lenoid valve (bank 2)	Output	<ul><li>[Engine is running]</li><li>Warm-up condition</li><li>Engine speed: 2,000 rpm</li></ul>	7 - 12 V★  5V/div JMBIA0038GB
76 (R/G)	60 (Y/B)	Sensor power supply [Crankshaft position sensor (POS)]	_	[Ignition switch: ON]	5 V
77 (W/L)	112 (B)	Power supply for ECM (Back-up)	Input	[Ignition switch: OFF]	BATTERY VOLTAGE (11 - 14 V)
				[Engine is running]  • Warm-up condition  • Idle speed	BATTERY VOLTAGE (11 - 14 V)
78 (R/L)	112 (B)	Intake valve timing control so- lenoid valve (bank 1)	Output	[Engine is running] • Warm-up condition • Engine speed: 2,000 rpm	7 - 12 V★  5V/div JMBIA0038GB
81	84	Accelerator pedal position	Input	<ul><li>[Ignition switch: ON]</li><li>Engine stopped</li><li>Accelerator pedal: Fully released</li></ul>	0.5 - 1.0 V
(W)	(B)	sensor 1	put	<ul><li>[Ignition switch: ON]</li><li>Engine stopped</li><li>Accelerator pedal: Fully depressed</li></ul>	4.2 - 4.8 V

# < ECU DIAGNOSIS INFORMATION >

Termin	al No.	Description			Value
+		Signal name	Input/ Output	Condition	(Approx.)
82	100	Accelerator pedal position	Input	[Ignition switch: ON]     Engine stopped     Accelerator pedal: Fully released	0.25 - 0.50 V
(O)	(G)	sensor 2	Шри	[Ignition switch: ON]     Engine stopped     Accelerator pedal: Fully depressed	2.0 - 2.5 V
83 (BR)	84 (B)	Sensor power supply (Accelerator pedal position sensor 1)	_	[Ignition switch: ON]	5 V
84 (B)	_	Sensor ground (Accelerator pedal position sensor 1)	_	_	_
	92 (BR)	ASCD steering switch	Input	[Ignition switch: ON] • ASCD steering switch: OFF	4 V
85 (Y)				[Ignition switch: ON] • MAIN switch: Pressed	0 V
				[Ignition switch: ON] • CANCEL switch: Pressed	1 V
( ' /				[Ignition switch: ON] • RESUME/ACCELERATE switch: Pressed	3 V
				[Ignition switch: ON] • SET/COAST switch: Pressed	2 V
86 (SB)	96 (GR)	EVAP control system pressure sensor	Input	[Ignition switch: ON]	1.8 - 4.8 V
87 (GR)	100 (G)	Sensor power supply (Accelerator pedal position sensor 2)	_	[Ignition switch: ON]	5 V
88 (O)	_	Data link connector	Input/ Output	_	_
91 (L)	96 (GR)	Sensor power supply (EVAP control system pres- sure sensor)	_	[Ignition switch: ON]	5 V
92 (BR)	_	Sensor ground (ASCD steering switch)	_	_	_
93	112	lanition switch	Input	[Ignition switch: OFF]	0 V
(BR)	(B)	Ignition switch	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)

Termin	al No.	Description			Value
+		Signal name	Input/ Output	Condition	Value (Approx.)
94	112		Outout	<ul> <li>[Engine is running]</li> <li>Warm-up condition</li> <li>Idle speed</li> <li>NOTE:</li> <li>The pulse cycle changes depending on rpm at idle</li> </ul>	1 V★  10mSec/div  2V/div  JMBIA0076GB
(GR)	(B)	Engine speed output signal	Output	[Engine is running] • Engine speed: 2,000 rpm	1 V★  10mSec/div  2V/div  JMBIA0077GB
95 (Y)	104 (SB)	Fuel tank temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with fuel tank temperature.
96 (GR)	_	Sensor ground (EVAP control system pressure sensor)	_	_	_
97 (P)	_	CAN communication line	Input/ Output	_	_
98 (L)	_	CAN communication line	Input/ Output	_	_
100 (G)	_	Sensor ground (Accelerator pedal position sensor 2)	_	_	_
102 (R)	112 (B)	PNP signal	Input	<ul> <li>[Ignition switch: ON]</li> <li>Selector lever: P or N position</li> <li>[Ignition switch: ON]</li> <li>Selector lever: Except above position</li> </ul>	BATTERY VOLTAGE (11 - 14 V)
104 (SB)	_	Sensor ground (Fuel tank temperature sensor)	_	_	_
105 (V)	112 (B)	Power supply for ECM	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
106 (SB)	112 (B)	Stop lamp switch	Input	[Ignition switch: OFF] • Brake pedal: Fully released  [Ignition switch: OFF] • Brake pedal: Slightly depressed	0 V  BATTERY VOLTAGE (11 - 14 V)
107 (B) 108 (B)	_	ECM ground	_	_	_
109 (W)	112 (B)	EVAP canister vent control valve	Output	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)


## < ECU DIAGNOSIS INFORMATION >


Termin	al No.	Description			Value
+		Signal name	Input/ Output	Condition	(Approx.)
110	112	ASCD brake switch	Input	[Ignition switch: ON] • Brake pedal: Slightly depressed	0 V
(G)	(B)			[Ignition switch: ON] • Brake pedal: Fully released	BATTERY VOLTAGE (11 - 14 V)
111 (B) 112 (B)	_	ECM ground	_		_


<sup>★:</sup> Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)


<sup>\*1:</sup> This may vary depending on internal resistance of the tester.


<sup>\*2:</sup> Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

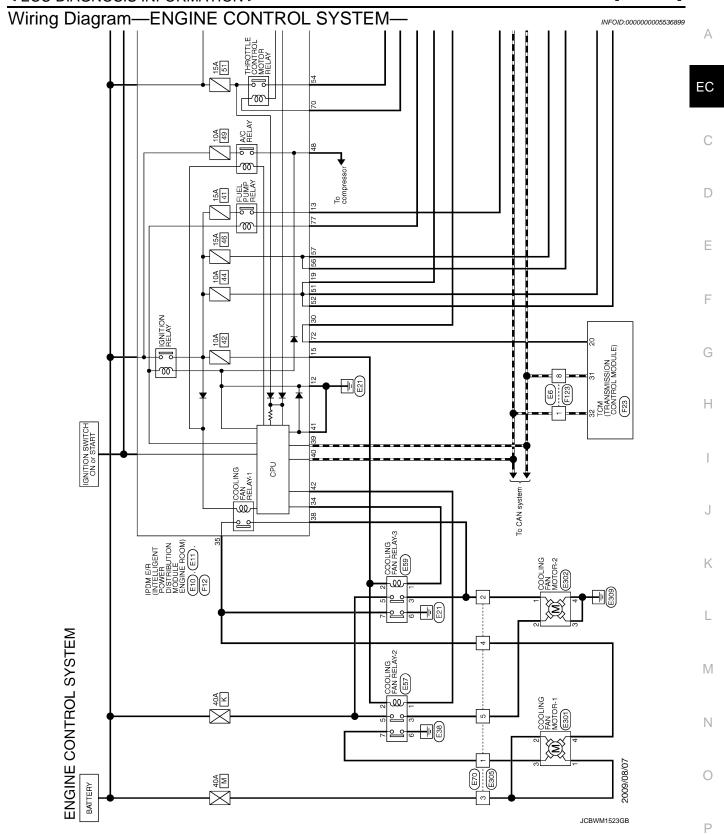

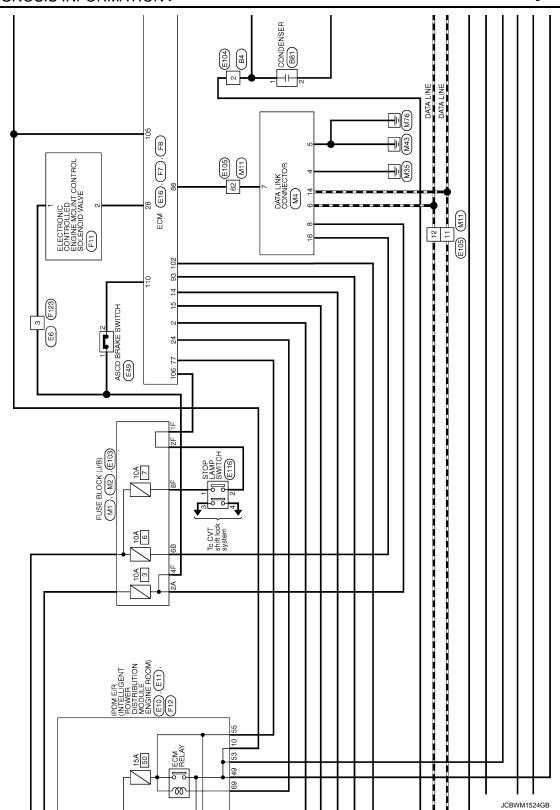

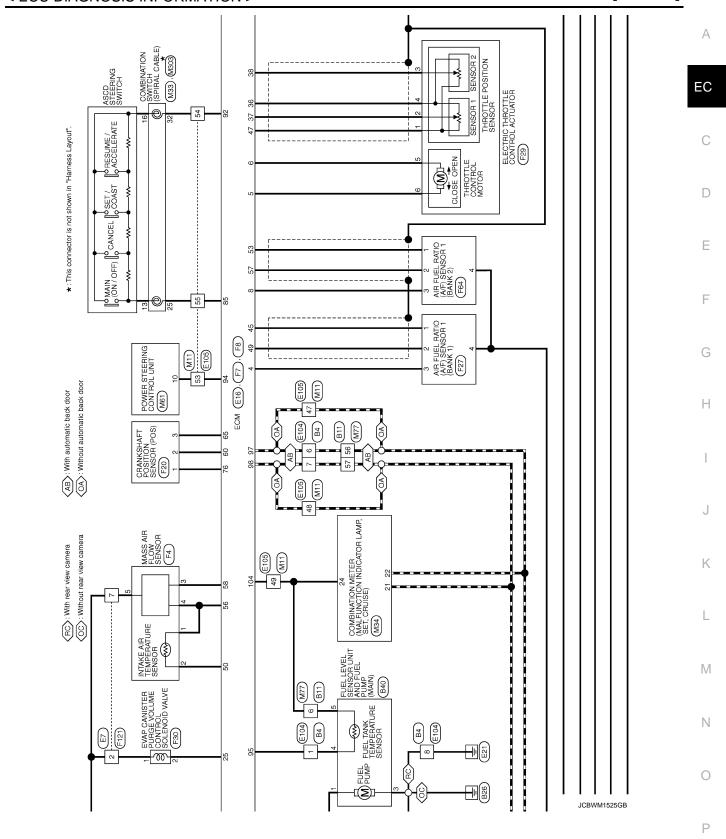

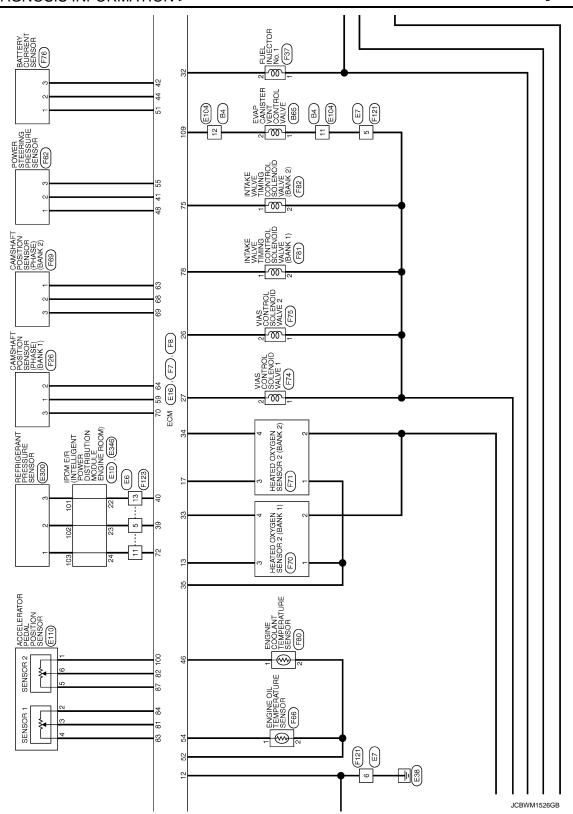

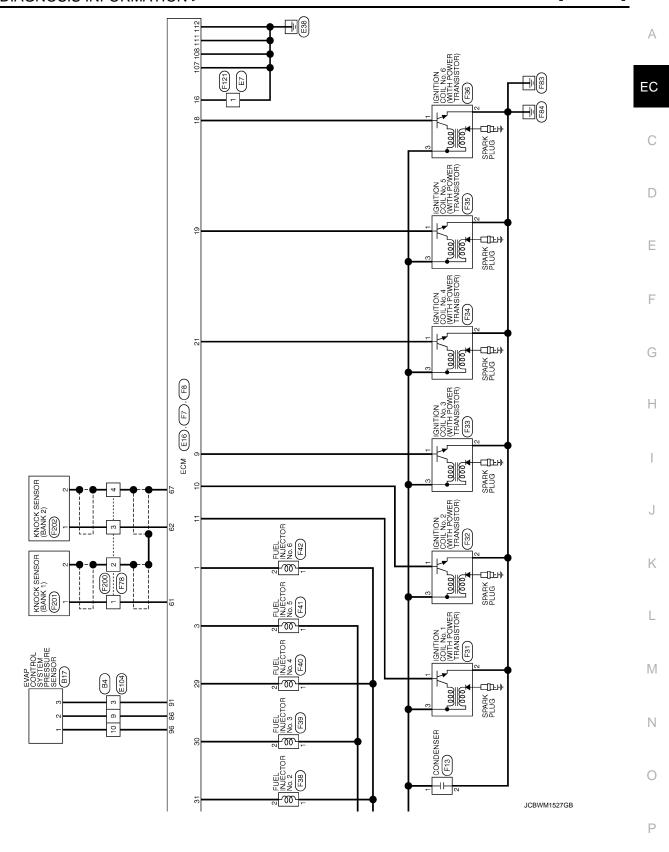


ENGINE CONTROL SYSTEM						
Connector No. B4	7	- ^	63	PT	-	
ATDE TO MIDE	8	SHIELD -	64	<b>\</b>	1	2 LG -
	9	BR/L –	99	GR	-	
Connector Type NS16MW-CS	. 01	- 5/A	67	Н	-	
(	11	A/L	89	L	1	
	_	M/L	69	SHIELD	1	Connector No. B40
	13	- 7	70	Н	1	CANIC DID ON THAI GOODS DAD DOD DO
1 2 3 - 4 5 6 7	14	BR	7.1	B/R	1	
10 10 10 10	15	SB	72	Υ	-	Connector Type E05FGY-RS
10 11 12 13 14 13	91	BR	73	ΓG	-	
	H		74	H	-	
	18	SB -	75	٦	_	0=
lal	19		9/	H	-	_
of Wire	20		77	H	1	(12345)
1 SB -	H	TO	78	SHIELD	-	
2 W -	H	- M	79	Г	1	
3 W	23	\	8	H	1	
L .	H	GR	8	α	1	
	H		82	L	1	No. of Wire Signal Name [Specification]
L	27	_ ^	83	BR	1	- M
L	┝	M/L	84	┝	1	2 \
B 88	30		82	┞	1	3 B
F	Г	- 0	86	Ľ	1	
>	T	1	87	╀	1	
-	T	α ο	ä	: 0		ł
1 8	35 25		8 8	Ŧ		
i	T		8 8	╀		Commonweal No.
1 0	+	07	30	- (		Т
+	+		5 6	#		Connector Name EVAP CANISTER VENT CONTROL VALVE
<b>&gt;</b> (	4:		36	+		Т
5 0	$^{+}$	0 %	88	: פ	1	Connector Type EUZFB-KS
	42	95	48 6	+	1	₫.
ı	+		S S	+	1	を生む
т	+	BK -	30	+	1	HS
Connector Name WIRE TO WIRE	+	3	ís o	£ (		
Connector Type TH80MW-CS19	47		8 6	+	1	
1	╁	GR -[With rear view camera and telephone]	]	ł		
	╁	Γ				
	П	ш	Conne	Connector No.	B17	Terminal Color Simple Name [Specification]
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	50 SF	SHIELD -	0000	Connector Name	dosnas adrissado maisks iodinos dava	of Wire
8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	51	B -			TANK COLUMN TO THE COLUMN TO T	1
S	52	B -	Conne	Connector Type	E03FGY-RS	2 BR –
*	53	·	4			
	Н	DT	F	_		
lar	22	BR –	7	V II		
	26	I d		3		
1 SHIELD -	57	I	_		((1 2 3))	
В	28		_			
+	7	SHIELD -	_			
+	┪		<u> </u>			
5 SB -	┥	R/L -	Terminal	nal Color	Simal Name [Specification]	
	Н	R/W –	Ň	of Wire	Olgania anno Lobronia anno 1900	

JCBWM1528GB

83   BR   AVCCI-APSI   88   88   7   AVCCI-APSI   88   7   ASCD SW   89   89   ASCD SW   89   89   ASCD SW   89   7   ASCD SW   89   7   AVCC2-APS2   89   0   AVCC2-FIPRES   89   0   AVCC2-FIPRES   89   0   AVCC2-FIPRES   89   C   AVCCA-I-I-I-I-I-I-I-I-I-I-I-I-I-I-I-I-I-I-	EC
Y	F
Commector No.   E1	H I J
[69] [F] [F] [F] [F] [F] [F] [F] [F] [F] [F	L M
Connector Name   Signal Name   Specification   Signal Name   Spe	JCBWM1529GB

Revision: 2009 September EC-485 2010 Murano

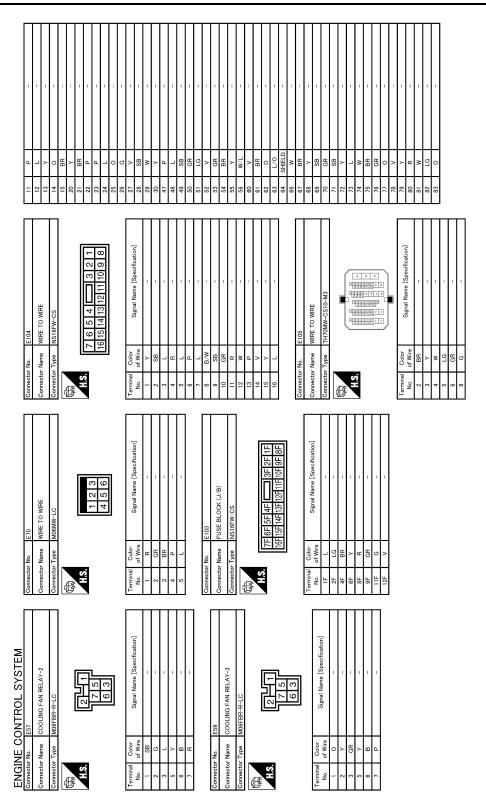

JCBWM1530GB


Connector Name	EC C
Signal Name [Specification]	E
Terminal   Color   No. of Wire   Street   Stre	G H
Signal Name [Specification]	I
E300   RS04FGY	J
Connector Name Connector Name Terminal Color No. Connector Name Co	
eation]	L
Signal Name [Specification]  Signal Name [Specification]  Signal Name [Specification]	M
SONTR FEITIE STOP LA MO4FW-L	N
ENGINE OF Connector No Connector Type Connector Type Of Wie P. S.	0
	JCBWM1531GB
	P

Sonnector No. F7	Connector No.	r No.	F8	76	_	AVCC2-POS	77 GR -
ECM	Connector Name	r Name	ECM	77	W/L R/I	BATT CVTC#1	- B 8 08
RH24FGY-RZ8-R-LH	Connector Type	r Type	RH40FBR-RZ8-L-LH		┨		
Ш	匮	- G		Conne	Connector No.	F11 ELECTRONIC CONTROL ELECTRONIC MOUNT CONTROL	Connector No. F13 Connector Name CONDENSER
1 5 9 13 17 21 22 22 22 23 24 24 25 25 26 26 10 14 18 22 25 30 27 31 24 28 32 24 28 32 25 25 25 25 25 25 25 25 25 25 25 25 25	K.		33 37 41 45 49 53 57 61 65 69 73 77 74 34 38 45 46 50 54 57 77 78 35 39 43 47 51 55 59 60 64 68 77 77 5 78 36 40 44 48 52 56 60 64 68 77 76 80	Conna	Connector Name	SOLENDO VALVE E02FBR-RS	Connector Type M02FW-GY-LC
		1		手	É		H.S.
Color Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]		<b>a</b>	<u>R</u>	- 5
P/B INJ#6	33	≥	02SR1				]
>	34	W/L	02SR2				ŀ
	33	20 0	GNDA-OZSR1,02SR2	ļ	⊢		Signal Name [Specification]
BRAT AFFIL	30	Ωβ	GNDA-1PS-B1	l ermina No	nal Color	Signal Name [Specification]	t
MOTORI-BI	98	≱ α	TPS2-B1	-	T		
	39	: 12	PDPRES	-   ~	f	1	$\frac{1}{1}$
	40	ŋ	GNDA-PDPRES		1		
G/R IGN#2	41	9/B					Connector No. F20
~	42	BR		Conne	Connector No.	F12	Connector Name CRANKSHAFT POSITION SENSOR (POS)
	44	g/B	GNDA	Conne	Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE	П
P/B O2HR1	42	a :	AF+1	,		Endine ROOM)	Connector Type RH03FB
	8 5	≻ C	WI	Conn	Connector Type	I HZ0FW-CS12-M4	<b>E</b>
	48	9/8	GNDA-PSPRES	Œ	_		ALT.
	49	7	AF-1	E	 		
GR/R IGN#6	20	Ι٦	TA1	1		53 54 55 56 57 58 69 70 71 72 73 74 75 76 77 78 81 82	المالي)
P IGN#5	51	ž	¥		47 48	49 50 51 52  59 60 61 62 63  64 65 66 67 68   79   80	
W IGN#4	52	B/R	GNDA-TW,T01				
	54 5	> 0	TO1				Terminal Color
	22	SB	AVCC1-PSPRES	Terminal	-		
	26	g/B	QA-,GNDA-TA1	No.	of Wire		1 R/G -
	57	P	AF-2	48	┨	1	+
	28	0		49		I	3 W/B –
R/Y INU#3	59	<b>Λ</b>	AVC	51	+	1	
	ng 3	4/8	GND-POS	20	+		
R/B INU#1	19	m :	KNKI	23	+		
	62	× 8	KNK2	54	+	-	
	93	2 0		e a	W/L	1	
	40 49	2 0/3		20 20	+		
	67	SHELD	GNDA	8	╀	1	
	89	7/G		69	W/B		
	69	BR/W		2	╁	1	
	70	W/R		72	R/B	ı	
	72	BR/W	AVCC2-PDPRES	75	Н	-	
	75	>	CVTC#2	76	H		

JCBWM1532GB

Signal Name [Specification]  Signal Name [Specification]  Signal Name [Specification]	A EC
Connector Name   F32	C
Signal Name [Specification]    NIPUT   OUTPUT	E
Terminal   Color   Signal	G H
Signal Name (Specification)  Signal Name (Specification)  Signal Name (Specification)  Signal Name (Specification)	1
ector No.  S. S	J K
(E) (B) (B) (B) (B) (B) (B) (B) (B) (B) (B	L
CONTROL SYSTEM   Contravaluation   Contravalua	M
Connector Numeror Nu	0
	Р


Revision: 2009 September EC-489 2010 Murano

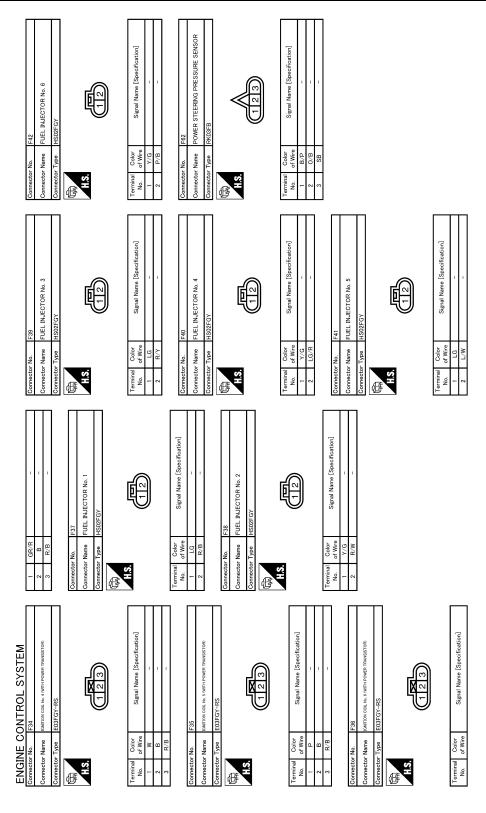

JCBWM1534GB

Signal Name   Signal Name   Specification	A EC C
ALVE 1  ALVE 2  ALVE 2  acation]	Е
Signal Name [Specification]	F
1799e   1799	G
Connector	Н
F70  HEATED OXYGEN SENSOR 2 (BANK 1)  AFZOAFB  Signal Name [Specification]	I
Signal Nam	J
R-W	К
	L
ENGINE CONTROL SYSTEM Jonnector Name ARFUEL RATIO (A/F) SENSOR I (BANK 2) Jonnector Type AFZUAFB  ARTURES A A O CONTROL Signal Name [Specification] I V V C CONTROL CO	M
Sign Sign Sign Sign Sign Sign Sign Sign	N
ENGINE Commetter Name    Commetter Name   Commetter Type	0
JUBWWII5356B	Р


Revision: 2009 September EC-491 2010 Murano

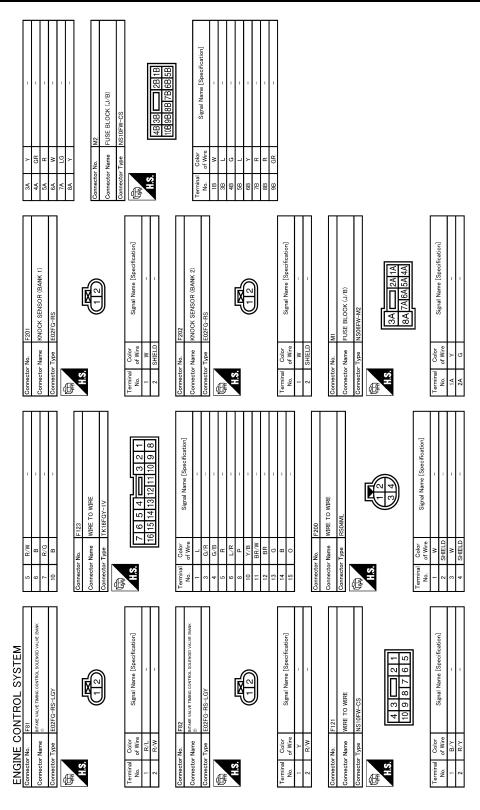

JCBWM1536GB

CR	А <b>ЕС</b> С
14   GR   15   16   17   17   17   18   19   19   19   19   19   19   19	D
reation]  and telephone]  thout telephone]  thought telephone]  and telephone]  thout telephone]	Е
No.   MX3	F
Name	G
Commercial   Com	Н
	I
	J
	K
8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	L
Signal Name [Specification]	M
ONTROL SYST  MA  BD16FW  BD16FW  9 10 11 12 13 14 5 6  11 2 3 4 5 6  WITH THYOFW-CS10-M3  Signal Name (Sp. S	Ν
Connector Name   Connector Name   Connector Name   Connector Name   Connector Name   Connector Type   ED16FW   Connector Type   ED16FW   Connector Name   Con	0
JCBWM1537GB	Б
	Р

Revision: 2009 September EC-493 2010 Murano

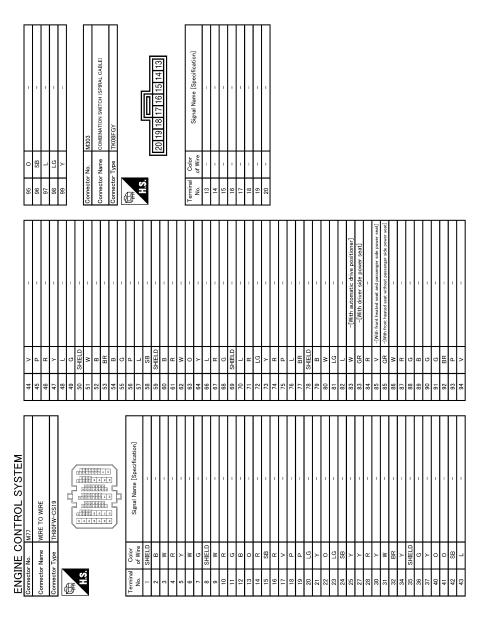

JCBWM1538GB

Fail-safe

NON DTC RELATED ITEM

Α

EC

D

Е

F

G

Н

Κ

L

M

Ν

0

Ρ

Engine speed will not rise more than 2,500 rpm due to the fuel cut  Malfunction indicator lamp circuit  When there is an open circuit on MIL circuit, the ECM cannot warn the driver by illuminating MIL when there is malfunction on engine control system.  Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the	marks	Reference page
driver that engine control system malfunctions and MIL circuit is ope by means of operating the fail-safe function.  The fail-safe function also operates when above diagnoses except MI circuit are detected and demands the driver to repair the malfunction	ere is malfunction on e led throttle and part of ted as NG for 5 trips, EC malfunctions and MIL of fe function. s when above diagnose	warns the it is open xcept MIL

#### DTC RELATED ITEM

DTC No.	Detected items	Engine opera	ating condition in fail-safe mode			
P0011 P0021	Intake valve timing control	The signal is not energized to the in control does not function.	take valve timing control solenoid valve and the valve			
P0102 P0103	Mass air flow sensor circuit	Engine speed will not rise more that	an 2,400 rpm due to the fuel cut.			
P0117 P0118	Engine coolant tempera- ture sensor circuit		determined by ECM based on the following condition ollant temperature decided by ECM.			
		Condition	Engine coolant temperature decided (CONSULT-III display)			
		Just as ignition switch is turned ON or START	40°C (104°F)			
		Approx 4 minutes or more after engine starting	80°C (176°F)			
		Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)			
		When the fail-safe system for engin fan operates while engine is runnin	e coolant temperature sensor is activated, the cooling g.			
P0122 P0123 P0222 P0223 P2135	Throttle position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening is order for the idle position to be within +10 degrees.  The ECM regulates the opening speed of the throttle valve to be slower than the normal condition.  Therefore, the acceleration will be poor.				
P0196 P0197 P0198	Engine oil temperature sensor	Intake valve timing control does not function.				
P0500	Vehicle speed sensor	The cooling fan operates (Highest)	while engine is running.			
P0605	ECM	(When ECM calculation function is malfunctioning:) ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring. ECM deactivates ASCD operation.				
P0643	Sensor power supply	ECM stops the electric throttle cont fixed opening (approx. 5 degrees) I	erol actuator control, throttle valve is maintained at a by the return spring.			
P1805	Brake switch	ECM controls the electric throttle cosmall range.  Therefore, acceleration will be poor	ontrol actuator by regulating the throttle opening to a r.			
		Vehicle condition	Driving condition			
		When engine is idling	Normal			
		When accelerating	Poor acceleration			
P2100 P2103	Throttle control motor relay	ECM stops the electric throttle cont fixed opening (approx. 5 degrees) I	crol actuator control, throttle valve is maintained at a by the return spring.			
P2101	Electric throttle control function	ECM stops the electric throttle cont fixed opening (approx. 5 degrees) I	trol actuator control, throttle valve is maintained at a by the return spring.			

## < ECU DIAGNOSIS INFORMATION >

DTC No.	Detected items	Engine operating condition in fail-safe mode
P2118	Throttle control motor	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P2119	Electric throttle control actuator	(When electric throttle control actuator does not function properly due to the return spring malfunction:)  ECM controls the electric throttle actuator by regulating the throttle opening around the idle position. The engine speed will not rise more than 2,000 rpm.
		(When throttle valve opening angle in fail-safe mode is not in specified range:) ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less.
		(When ECM detects the throttle valve is stuck open:) While the vehicle is being driven, it slows down gradually because of fuel cut. After the vehicle stops, the engine stalls. The engine can restart in the N or P position, and engine speed will not exceed 1,000 rpm or more.
P2122 P2123 P2127 P2128 P2138	Accelerator pedal position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees.  The ECM regulates the opening speed of the throttle valve to be slower than the normal condition.  Therefore, the acceleration will be poor.

# DTC Inspection Priority Chart

INFOID:0000000005536901

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)	А
1	<ul> <li>U0101 U0164 U1001 CAN communication line</li> <li>P0101 P0102 P0103 Mass air flow sensor</li> </ul>	
	<ul> <li>P0112 P0113 P0127 Intake air temperature sensor</li> <li>P0116 P0117 P0118 P0125 Engine coolant temperature sensor</li> <li>P0122 P0123 P0222 P0223 P1225 P1226 P2135 Throttle position sensor</li> </ul>	EC
	<ul> <li>P0128 Thermostat function</li> <li>P0181 P0182 P0183 Fuel tank temperature sensor</li> <li>P0196 P0197 P0198 Engine oil temperature sensor</li> <li>P0327 P0328 P0332 P0333 Knock sensor</li> </ul>	С
	<ul> <li>P0335 Crankshaft position sensor (POS)</li> <li>P0340 P0345 Camshaft position sensor (PHASE)</li> <li>P0460 P0461 P0462 P0463 Fuel level sensor</li> <li>P0500 Vehicle speed sensor</li> </ul>	D
	<ul> <li>P0605 P0607 ECM</li> <li>P0643 Sensor power supply</li> <li>P0705 Transmission range switch</li> <li>P0850 Park/Neutral position (PNP) switch</li> </ul>	Е
	<ul> <li>P1550 P1551 P1552 P1553 P1554 Battery current sensor</li> <li>P1610 - P1615 NATS</li> <li>P1700 CVT control system</li> <li>P2122 P2123 P2127 P2128 P2138 Accelerator pedal position sensor</li> </ul>	F
2	<ul> <li>P0031 P0032 P0051 P0052 Air fuel ratio (A/F) sensor 1 heater</li> <li>P0037 P0038 P0057 P0058 Heated oxygen sensor 2 heater</li> <li>P0075 P0081 Intake valve timing control solenoid valve</li> </ul>	G
	<ul> <li>P0130 P0131 P0132 P0133 P0150 P0151 P0152 P0153 P2A00 P2A03 Air fuel ratio (A/F) sensor 1</li> <li>P0137 P0138 P0139 P0157 P0158 P0159 Heated oxygen sensor 2</li> <li>P0441 EVAP control system purge flow monitoring</li> <li>P0443 P0444 P0445 EVAP canister purge volume control solenoid valve</li> </ul>	Н
	<ul> <li>P0447 P0448 EVAP canister vent control valve</li> <li>P0451 P0452 P0453 EVAP control system pressure sensor</li> <li>P0550 Power steering pressure sensor</li> </ul>	I
	<ul> <li>P0603 ECM power supply</li> <li>P0710 P0715 P0720 P0740 P0744 P0745 P0746 P0776 P0778 P0840 P0845 P1740 CVT related sensors, solenoid valves and switches</li> <li>P1217 Engine over temperature (OVERHEAT)</li> </ul>	J
	<ul> <li>P1720 Vehicle speed sensor</li> <li>P1777 P1778 CVT step motor</li> <li>P1800 P1801 VIAS control solenoid valve</li> <li>P1805 Brake switch</li> </ul>	K
	<ul> <li>P2100 P2103 Throttle control motor relay</li> <li>P2101 Electric throttle control function</li> <li>P2118 Throttle control motor</li> </ul>	L
3	<ul> <li>P0011 P0021 Intake valve timing control</li> <li>P0171 P0172 P0174 P0175 Fuel injection system function</li> <li>P0300 - P0306 Misfire</li> <li>P0420 P0430 Three way catalyst function</li> </ul>	M
	<ul> <li>P0442 P0456 EVAP control system (SMALL LEAK, VERY SMALL LEAK)</li> <li>P0455 EVAP control system (GROSS LEAK)</li> <li>P0506 P0507 Idle speed control system</li> </ul>	N
	<ul> <li>P050E Cold start control</li> <li>P1148 P1168 Closed loop control</li> <li>P1212 TCS communication line</li> <li>P1564 ASCD steering switch</li> </ul>	0
	<ul> <li>P1572 ASCD brake switch</li> <li>P1574 ASCD vehicle speed sensor</li> <li>P1715 Primary speed sensor</li> <li>P2119 Electric throttle control actuator</li> </ul>	Р

DTC Index

×:Applicable —: Not applicable

DTC	C*1	14	CDT			Permanent	D-4
CONSULT-III GST*2	ECM*3	Ltems (CONSULT-III screen terms)	SRT code	Trip	MIL	DTC group*4	Refer- ence page
U0101	0101 <sup>*5</sup>	LOST COMM (ECM)	_	1	×	В	EC-137
U0164	0164 <sup>*5</sup>	LOST COMM (HVAC)	_	1	×	В	EC-138
U1001	1001 <sup>*5</sup>	CAN COMM CIRCUIT	_	2	_	_	EC-139
P0000	0000	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	_	_	Blinking <sup>*8</sup>	_	_
P0011	0011	INT/V TIM CONT-B1	×	2	×	В	EC-140
P0021	0021	INT/V TIM CONT-B2	×	2	×	В	EC-140
P0031	0031	A/F SEN1 HTR (B1)	_	2	×	В	EC-144
P0032	0032	A/F SEN1 HTR (B1)	_	2	×	В	EC-144
P0037	0037	HO2S2 HTR (B1)	_	2	×	В	EC-147
P0038	0038	HO2S2 HTR (B1)	_	2	×	В	EC-147
P0051	0051	A/F SEN1 HTR (B2)	_	2	×	В	EC-144
P0052	0052	A/F SEN1 HTR (B2)	_	2	×	В	EC-144
P0057	0057	HO2S2 HTR (B2)	_	2	×	В	EC-147
P0058	0058	HO2S2 HTR (B2)	_	2	×	В	EC-147
P0075	0075	INT/V TIM V/CIR-B1		2	×	В	EC-150
P0081	0081	INT/V TIM V/CIR-B2	_	2	×	В	EC-150
P0101	0101	MAF SEN/CIRCUIT-B1	_	2	×	В	EC-153
P0102	0102	MAF SEN/CIRCUIT-B1		1	×	В	EC-159
P0103	0103	MAF SEN/CIRCUIT-B1	_	1	×	В	EC-159
P0112	0112	IAT SEN/CIRCUIT-B1	_	2	×	В	EC-164
P0113	0113	IAT SEN/CIRCUIT-B1	_	2	×	В	EC-164
P0116	0116	ECT SEN/CIRC	_	2	×	В	EC-167
P0117	0117	ECT SEN/CIRC	_	1	×	В	EC-169
P0118	0118	ECT SEN/CIRC	_	1	×	В	EC-169
P0122	0122	TP SEN 2/CIRC-B1		1	×	В	EC-172
P0123	0123	TP SEN 2/CIRC-B1		1	×	В	EC-172
P0125	0125	ECT SENSOR	_	2	×	В	EC-175
P0127	0127	IAT SENSOR-B1	_	2	×	В	EC-178
P0128	0128	THERMSTAT FNCTN	_	2	×	В	EC-180
P0130	0130	A/F SENSOR1 (B1)	_	2	×	Α	EC-182
P0131	0131	A/F SENSOR1 (B1)		2	×	В	EC-186
P0132	0132	A/F SENSOR1 (B1)	_	2	×	В	EC-190
P0133	0133	A/F SENSOR1 (B1)	×	2	×	А	EC-194
P0137	0137	HO2S2 (B1)	×	2	×	Α	EC-199
P0138	0138	HO2S2 (B1)	×	2	×	Α	EC-206
P0139	0139	HO2S2 (B1)	×	2	×	Α	EC-215
P0150	0150	A/F SENSOR1 (B2)	_	2	×	Α	EC-182
P0151	0151	A/F SENSOR1 (B2)		2	×	В	EC-186

DTC	*1	Items	SRT			Permanent	Refer-
CONSULT-III GST*2	ECM*3	(CONSULT-III screen terms)	code	Trip	MIL	DTC group*4	ence page
P0152	0152	A/F SENSOR1 (B2)	_	2	×	В	EC-190
P0153	0153	A/F SENSOR1 (B2)	×	2	×	Α	EC-194
P0157	0157	HO2S2 (B2)	×	2	×	Α	EC-199
P0158	0158	HO2S2 (B2)	×	2	×	Α	EC-206
P0159	0159	HO2S2 (B2)	×	2	×	Α	EC-215
P0171	0171	FUEL SYS-LEAN-B1	_	2	×	В	EC-222
P0172	0172	FUEL SYS-RICH-B1	_	2	×	В	EC-226
P0174	0174	FUEL SYS-LEAN-B2	_	2	×	В	EC-222
P0175	0175	FUEL SYS-RICH-B2	_	2	×	В	EC-226
P0181	0181	FTT SENSOR	_	2	×	В	EC-230
P0182	0182	FTT SEN/CIRCUIT	_	2	×	В	EC-233
P0183	0183	FTT SEN/CIRCUIT	_	2	×	В	EC-233
P0196	0196	EOT SEN/CIRC	_	2	×	В	EC-236
P0197	0197	EOT SEN/CIRC	_	2	×	В	EC-239
P0198	0198	EOT SEN/CIRC	_	2	×	В	EC-239
P0222	0222	TP SEN 1/CIRC-B1	_	1	×	В	EC-242
P0223	0223	TP SEN 1/CIRC-B1	_	1	×	В	EC-242
P0300	0300	MULTI CYL MISFIRE	_	1 or 2	×	В	EC-245
P0301	0301	CYL 1 MISFIRE	_	1 or 2	×	В	EC-245
P0302	0302	CYL 2 MISFIRE	_	1 or 2	×	В	EC-245
P0303	0303	CYL 3 MISFIRE	_	1 or 2	×	В	EC-245
P0304	0304	CYL 4 MISFIRE	_	1 or 2	×	В	EC-245
P0305	0305	CYL 5 MISFIRE	_	1 or 2	×	В	EC-245
P0306	0306	CYL 6 MISFIRE	_	1 or 2	×	В	EC-245
P0327	0327	KNOCK SEN/CIRC-B1	_	2	_	_	EC-251
P0328	0328	KNOCK SEN/CIRC-B1		2		_	EC-251
P0332	0332	KNOCK SEN/CIRC-B2	_	2	_	_	EC-251
P0333	0333	KNOCK SEN/CIRC-B2	_	2	_	_	EC-251
P0335	0335	CKP SEN/CIRCUIT	_	2	×	В	EC-254
P0340	0340	CMP SEN/CIRC-B1	_	2	×	В	EC-258
P0345	0345	CMP SEN/CIRC-B2	_	2	×	В	EC-258
P0420	0420	TW CATALYST SYS-B1	×	2	×	Α	EC-262
P0430	0430	TW CATALYST SYS-B2	×	2	×	Α	EC-262
P0441	0441	EVAP PURG FLOW/MON	×	2	×	Α	EC-267
P0442	0442	EVAP SMALL LEAK	×	2	×	Α	EC-272
P0443	0443	PURG VOLUME CONT/V		2	×	Α	EC-278
P0444	0444	PURG VOLUME CONT/V	_	2	×	В	EC-283
P0445	0445	PURG VOLUME CONT/V	_	2	×	В	EC-283
P0447	0447	VENT CONTROL VALVE	_	2	×	В	EC-286
P0448	0448	VENT CONTROL VALVE	_	2	×	В	EC-290
P0451	0451	EVAP SYS PRES SEN		2	×	A	EC-294
P0452	0452	EVAP SYS PRES SEN		2	×	В	EC-297

DTC	*1	Items	SRT			Permanent	Refer-
CONSULT-III GST*2	ECM*3	(CONSULT-III screen terms)	code	Trip	MIL	DTC group*4	ence pag
P0453	0453	EVAP SYS PRES SEN	_	2	×	В	EC-302
P0455	0455	EVAP GROSS LEAK	_	2	×	Α	EC-308
P0456	0456	EVAP VERY SML LEAK	×*7	2	×	А	EC-314
P0460	0460	FUEL LEV SEN SLOSH	_	2	×	А	EC-321
P0461	0461	FUEL LEVEL SENSOR	_	2	×	В	EC-323
P0462	0462	FUEL LEVL SEN/CIRC	_	2	×	В	EC-325
P0463	0463	FUEL LEVL SEN/CIRC	_	2	×	В	EC-325
P0500	0500	VEH SPEED SEN/CIRC*6	_	2	×	В	EC-327
P0506	0506	ISC SYSTEM		2	×	В	EC-329
P0507	0507	ISC SYSTEM	_	2	×	В	EC-331
P050E	050E	COLD START CONTROL	_	2	×	А	EC-333
P0550	0550	PW ST P SEN/CIRC	_	2	_	_	EC-335
P0603	0603	ECM BACK UP/CIRCUIT	_	2	×	В	EC-338
P0605	0605	ECM	_	1 or 2	× or —	В	EC-340
P0607	0607	ECM	_	1	×	В	EC-342
P0643	0643	SENSOR POWER/CIRC	_	1	×	В	EC-343
P0705	0705	T/M RANGE SENSOR A	_	2	×	В	TM-46
P0710	0710	FLUID TEMP SENSOR A*9	_	1	×	В	TM-49
P0715	0715	INPUT SPEED SENSOR A		2	×	В	TM-52
P0720	0720	OUTPUT SPEED SEN- SOR*6	_	2	×	В	<u>TM-55</u>
P0740	0740	TORQUE CONVERTER	_	2	×	В	TM-62
P0744	0744	TORQUE CONVERTER	_	2	×	В	TM-64
P0745	0745	PC SOLENOID A	_	2	×	В	TM-66
P0746	0746	PC SOLENOID A	_	1	×	В	TM-68
P0776	0776	PC SOLENOID B	_	2	×	В	TM-70
P0778	0778	PC SOLENOID B	_	2	×	В	TM-72
P0840	0840	FLUID PRESS SEN/SW A	_	2	×	В	<u>TM-74</u>
P0845	0845	FLUID PRESS SEN/SW B	_	2	×	В	TM-79
P0850	0850	P-N POS SW/CIRCUIT	_	2	×	В	EC-346
P1148	1148	CLOSED LOOP-B1	_	1	×	Α	EC-349
P1168	1168	CLOSED LOOP-B2	_	1	×	Α	EC-349
P1212	1212	TCS/CIRC	_	2	_	_	EC-350
P1217	1217	ENG OVER TEMP	_	1	×	В	EC-351
P1225	1225	CTP LEARNING-B1	_	2	_	_	EC-355
P1226	1226	CTP LEARNING-B1	_	2	_	_	EC-357
P1550	1550	BAT CURRENT SENSOR	_	2	_	_	EC-359
P1551	1551	BAT CURRENT SENSOR	_	2	_	_	EC-362
P1552	1552	BAT CURRENT SENSOR	_	2	_	_	EC-362
P1553	1553	BAT CURRENT SENSOR	_	2	_	_	EC-365
P1554	1554	BAT CURRENT SENSOR	_	2	_	_	EC-368
P1564	1564	ASCD SW		1	_	_	EC-371

Α

D

Е

Н

Ν

DTC*1		lte	SRT			Permanent	Refer-
CONSULT-III GST*2	ECM*3	ltems (CONSULT-III screen terms)	code	Trip	MIL	DTC group*4	ence page
P1572	1572	ASCD BRAKE SW	_	1	_	_	EC-374
P1574	1574	ASCD VHL SPD SEN	_	1	_	_	EC-380
P1610	1610	LOCK MODE	_	2	_	_	SEC-35
P1611	1611	ID DISCORD, IMM-ECM	_	2	_	_	SEC-87
P1612	1612	CHAIN OF ECM-IMMU	_	2	_	_	SEC-38
P1614	1614	CHAIN OF IMMU-KEY	_	2	_	_	SEC-39
P1615	1615	DIFFERENCE OF KEY	_	2	_	_	SEC-42
P1700	1700	CVT C/U FUNCT	_	1	_	_	EC-382
P1715	1715	IN PULY SPEED	_	2	_	_	EC-383
P1720	1720	V/SP SEN(A/T OUT)	_	2	_	_	EC-385
P1740	1740	SLCT SOLENOID	_	2	×	В	<u>TM-93</u>
P1777	1777	STEP MOTOR	_	1	×	В	<u>TM-96</u>
P1778	1778	STEP MOTOR	_	2	×	В	TM-99
P1800	1800	VIAS S/V-1	_	2	_	_	EC-387
P1801	1801	VIAS S/V-2	_	2	_	_	EC-390
P1805	1805	BRAKE SW/CIRCUIT	_	2	_	_	EC-393
P2100	2100	ETC MOT PWR-B1	_	1	×	В	EC-396
P2101	2101	ETC FNCTN/CIRC-B1	_	1	×	В	EC-398
P2103	2103	ETC MOT PWR	_	1	×	В	EC-396
P2118	2118	ETC MOT-B1	_	1	×	В	EC-402
P2119	2119	ETC ACTR-B1	_	1	×	В	EC-405
P2122	2122	APP SEN 1/CIRC	_	1	×	В	EC-407
P2123	2123	APP SEN 1/CIRC	_	1	×	В	EC-407
P2127	2127	APP SEN 2/CIRC	_	1	×	В	EC-410
P2128	2128	APP SEN 2/CIRC	_	1	×	В	EC-410
P2135	2135	TP SENSOR-B1	_	1	×	В	EC-414
P2138	2138	APP SENSOR	_	1	×	В	EC-417
P2A00	2A00	A/F SENSOR1 (B1)	_	2	×	А	EC-421
P2A03	2A03	A/F SENSOR1 (B2)	_	2	×	Α	EC-421

<sup>\*1: 1</sup>st trip DTC No. is the same as DTC No.

## How to Set SRT Code

INFOID:0000000005575306

To set all SRT codes, self-diagnosis for the items indicated above must be performed one or more times. Each diagnosis may require a long period of actual driving under various conditions.

#### (I) WITH CONSULT-III

Perform corresponding DTC Confirmation Procedure one by one based on Performance Priority in the table on "SRT Item".

<sup>\*2:</sup> This number is prescribed by SAE J2012/ISO 15031-6.

<sup>\*3:</sup> In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.

<sup>\*4:</sup> Refer to EC-102, "Diagnosis Description", "PERMANENT DIAGNOSTIC TROUBLE CODE (PERMANENT DTC)".

<sup>\*5:</sup> The troubleshooting for this DTC needs CONSULT-III.

<sup>\*6:</sup> When the fail-safe operations for both self-diagnoses occur, the MIL illuminates.

<sup>\*7:</sup> SRT code will not be set if the self-diagnostic result is NG.


<sup>\*8:</sup> When the ECM is in the mode displays SRT status, MIL may blink. For the details, refer to "How to Display SRT Status".

<sup>\*9:</sup> When erasing this DTC, always use CONSULT-III or GST.

### **WITHOUT CONSULT-III**

The most efficient driving pattern in which SRT codes can be properly set is explained below. The driving pattern should be performed one or more times to set all SRT codes.

#### **DRIVING PATTERN**

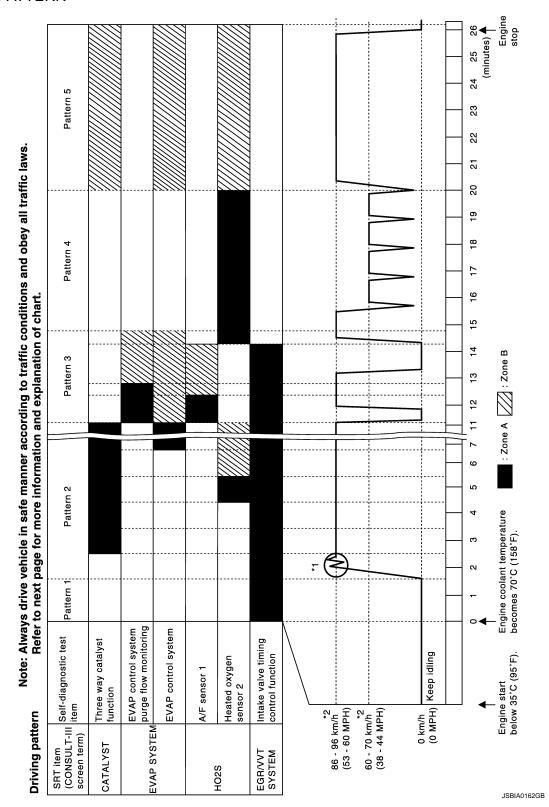

 The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.

Zone A refers to the range where the time, required for the diagnosis under normal conditions\*, is the short-

Zone B refers to the range where the diagnosis can still be performed if the diagnosis is not completed within

- \*: Normal conditions refer to the following:
- Sea level
- Flat road
- Ambient air temperature: 20 30°C (68 86°F)
- Diagnosis is performed as quickly as possible under normal conditions. Under different conditions [For example: ambient air temperature other than 20 - 30°C (68 - 86°F)], diagnosis may also be performed.


Pattern 1:

- The engine is started at the engine coolant temperature of –10 to 35°C (14 to 95°F) (where the voltage between the ECM terminal 46 and ground is 3.0 - 4.3 V).
- The engine must be operated at idle speed until the engine coolant temperature is greater than 70°C (158°F) (where the voltage between the ECM terminal 46 and ground is lower than 1.4 V).
- The engine is started at the fuel tank temperature of warmer than 0°C (32°F) (where the voltage between the ECM terminal 95 and ground is less than 4.1 V).

 When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted. In this case, the time required for diagnosis may be extended.

Pattern 3:

- Operate vehicle, following the driving pattern shown in the figure.
- Release the accelerator pedal during deceleration of vehicle speed from 90 km/h (56 MPH) to 0 km/h (0 MPH).

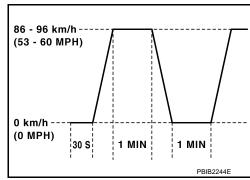


#### Pattern 4:

- Operate vehicle, following the driving pattern shown in the figure.
- Drive the vehicle in a proper gear at 60 km/h (38 MPH) and maintain the speed.
- Release the accelerator pedal fully at least 5 seconds.
- Repeat the above two steps at least 5 times.

Pattern 5:

- The accelerator pedal must be held very steady during steadystate driving.
- If the accelerator pedal is moved, the test must be conducted again.

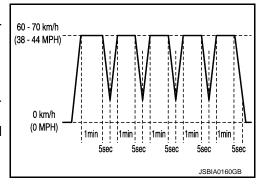

- \*1: Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.
- \*2: Checking the vehicle speed with GST is advised.

Suggested Transmission Gear Position for CVT Models Set the selector lever in the D position.

### How to Erase Permanent DTC

When a DTC is stored in ECM

When a DTC is stored in ECM and MIL is ON, a permanent DTC is erased with MIL shutoff if the same malfunction is not detected after performing the driving pattern for MIL shutoff three times in a raw.

**EC-503** Revision: 2009 September 2010 Murano

EC

Α

D

Е

Н


K

M

Ν

Р

INFOID:0000000005589522

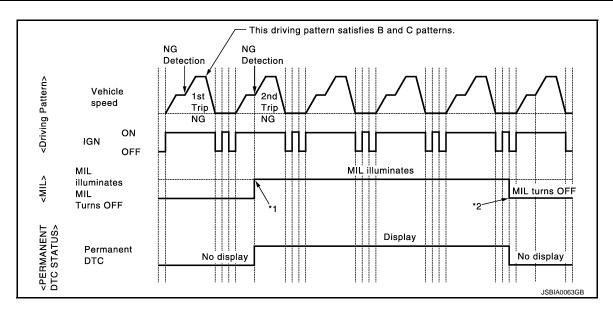

- \*1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- \*2: MIL will turn off after vehicle is driven 3 times (pattern B) without any malfunctions.

## When a DTC is not stored in ECM


The erasing method depends on a permanent DTC stored in ECM. Refer to the following table.

×: Applicable —: Not applicable

Group*	Perform "DTC CONFIRMATION PROCEDURE"	Driving pattern		
Group	for applicable DTCs.	В	D	
А	×	_	_	
В	_	×	×	

<sup>\*:</sup> For group, refer to EC-498, "DTC Index".

Group A

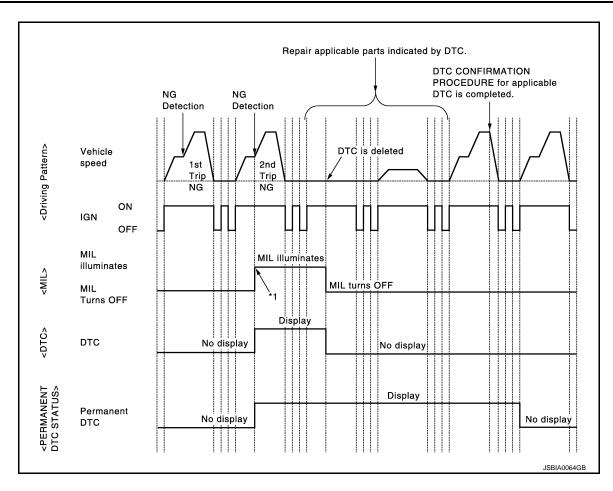

- \*1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Check permanent DTC. Refer to <u>EC-102</u>, "<u>Diagnosis Description</u>".
- Perform "DTC CONFIRMATION PROCEDURE" for DTCs which are the same as permanent DTCs stored in ECM.
- 7. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 9. Turn ignition switch OFF and wait at least 10 seconds.
- 10. Turn ignition switch ON.
- 11. Check permanent DTC. Refer to EC-102, "Diagnosis Description".
- 12. Check that the permanent DTCs have been erased.

Group B

EC

Α

D

Е

F

G

Н

K

M


Ν

0

0

Р

2010 Murano

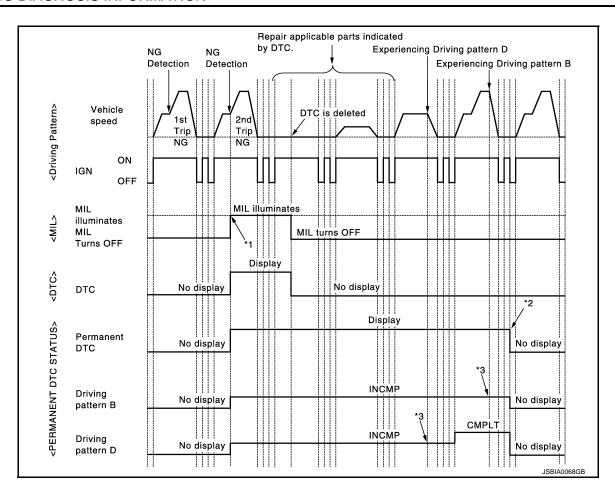

- \*1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- \*2: After experiencing Driving pattern B \*3: Indication does not change unless and D, permanent DTC is erased.
  - the ignition switch is turned from ON to OFF twice even after experiencing Driving pattern B or D.

### NOTE:

- Drive the vehicle according to only driving patterns indicating "INCMP" in driving patterns B and D on the "PERMANENT DTC STATUS" screen.
- When experiencing both driving pattern B and D during the same trip, the experience of driving pattern D is counted by priority.
- Turn ignition switch OFF and wait at least 10 seconds. 1.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Check permanent DTC. Refer to EC-102, "Diagnosis Description".
- 6. Start engine and warm it up to normal operating temperature.
- 7. Drive the vehicle according to driving pattern D.

### **CAUTION:**

- Always drive at a safe speed.
- Never erase self-diagnosis results.
- If self-diagnosis results are erased during the trip of driving pattern B or D, the counter of driving pattern B or D is reset.
- If self-diagnosis results are erased during the trip of driving pattern B or D, an experience of driving pattern B and D during the same trip is not counted up.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 10. Turn ignition switch OFF and wait at least 10 seconds.

- 11. Turn ignition switch ON.
- 12. Use "PERMANENT DTC WORK SUPPORT" to drive the vehicle according to driving pattern B.

#### **CAUTION:**

- Always drive at a safe speed.
- Never erase self-diagnosis results.
- If self-diagnosis results are erased during the trip of driving pattern B or D, the counter of driving pattern B or D is reset.
- If self-diagnosis results are erased during the trip of driving pattern B or D, an experience of driving pattern B and D during the same trip is not counted up.
- 13. Turn ignition switch OFF and wait at least 10 seconds.
- 14. Turn ignition switch ON.
- 15. Turn ignition switch OFF and wait at least 10 seconds.
- 16. Turn ignition switch ON.
- 17. Check permanent DTC. Refer to EC-102, "Diagnosis Description".
- 18. Check that the permanent DTCs have been erased.

### DRIVING PATTERN

### Driving Pattern B

Driving pattern B means a trip satisfying the following conditions.

- Engine speed reaches 400 rpm or more.
- Water temperature reaches 70°C (158°F) or more.
- Vehicle speed of 70 120 km/h (44 75 MPH) is maintained for 60 seconds or more under the control of closed loop.
- Vehicle speed of 30 60 km/h (19 37 MPH) is maintained for 10 seconds or more under the control of closed loop.
- Under the closed loop control condition, the following state reaches 12 seconds or more in total: Vehicle speed of 4 km/h (2 MPH) or less with idling condition.
- The state of driving at 10 km/h (7 MPH) or more reaches 10 minutes or more in total.
- A lapse of 22 minutes or more after engine start.

### **CAUTION:**

### Always drive at a safe speed.

### NOTE:

- Drive the vehicle at a constant velocity.
- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern B.

### Driving Pattern D

Driving pattern D means operating vehicle as per the following.

- The state of driving at 40 km/h (25 MPH) reaches 300 seconds or more in total.
- Idle speed lasts 30 seconds or more.
- A lapse of 600 seconds or more after engine start.

### **CAUTION:**

### Always drive at a safe speed.

### NOTE:

- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern D.

### Test Value and Test Limit

The following is the information specified in Service \$06 of SAE J1979/ISO 15031-5.

The test value is a parameter used to determine whether a system/circuit diagnostic test is OK or NG while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

These data (test value and test limit) are specified by On Board Monitor ID (OBDMID), Test ID (TID), Unit and Scaling ID and can be displayed on the GST screen.

**EC-507** Revision: 2009 September 2010 Murano

EC

Α

D

Е

L

N

INFOID:0000000005589003

The items of the test value and test limit will be displayed with GST screen which items are provided by the ECM. (eg., if bank 2 is not applied on this vehicle, only the items of bank 1 are displayed)

	000			li	ne and Test mit				
Item	OBD- MID	Self-diagnostic test item	DTC	TID	Unit and Scaling ID	Description			
			P0131	83H	0BH	Minimum sensor output voltage for te			
			P0131	84H	0BH	Maximum sensor output voltage for te			
			P0130	85H	0BH	Minimum sensor output voltage for te cycle			
			P0130	86H	0BH	Maximum sensor output voltage for te cycle			
			P0133	87H	04H	Response rate: Response ratio (Lean Rich)			
			P0133	88H	04H	Response rate: Response ratio (Rich Lean)			
			P2A00	89H	84H	The amount of shift in air fuel ratio			
			P2A00	8AH	84H	The amount of shift in air fuel ratio			
			P0130	8BH	0BH	Difference in sensor output voltage			
	011	Air fuel ratio (A/F) sensor 1	P0133	8CH	83H	Response gain at the limited frequen			
		(Bank 1)	P014C	8DH	04H	O2 Sensor Slow Response - Rich to Lean Bank 1 Sensor 1			
			P014C	8EH	04H	O2 Sensor Slow Response - Rich to Lean Bank 1 Sensor 1			
HO2S			P014D	8FH	84H	O2 Sensor Slow Response - Lean to Rich Bank 1 Sensor 1			
11023			P014D	90H	84H	O2 Sensor Slow Response - Lean to Rich Bank 1 Sensor 1			
			P015A	91H	01H	O2 Sensor Delayed Response - Rich Lean Bank 1 Sensor 1			
			P015A	92H	01H	O2 Sensor Delayed Response - Rich Lean Bank 1 Sensor 1			
			P015B	93H	01H	O2 Sensor Delayed Response - Lean Rich Bank 1 Sensor 1			
			P015B	94H	01H	O2 Sensor Delayed Response - Lean Rich Bank 1 Sensor 1			
			P0138	07H	0CH	Minimum sensor output voltage for te cycle			
	02H	Heated oxygen sensor 2 (Bank 1)	P0137	08H	0CH	Maximum sensor output voltage for to cycle			
			P0138	80H	0CH	Sensor output voltage			
			P0139	81H	0CH	Difference in sensor output voltage			
			P0143	07H	0CH	Minimum sensor output voltage for te cycle			
	03H	Heated oxygen sensor 3 (Bank 1)	P0144	08H	0CH	Maximum sensor output voltage for te cycle			
			P0146	80H	0CH	Sensor output voltage			
			P0145	81H	0CH	Difference in sensor output voltage			

< EUU L	JAGING	OSIS INFORMATION >				[VQ35DE]				
				li	e and Test mit					
Item	OBD- MID	Self-diagnostic test item	DTC	TID	Unitand Scaling ID	Description				
			P0151	83H	овн	Minimum sensor output voltage for test cycle				
			P0151	84H	0BH	Maximum sensor output voltage for test cycle				
			P0150	85H	овн	Minimum sensor output voltage for test cycle				
			P0150	86H	овн	Maximum sensor output voltage for test cycle				
			P0153	87H	04H	Response rate: Response ratio (Lean to Rich)				
			P0153	88H	04H	Response rate: Response ratio (Rich to Lean)				
			P2A03	89H	84H	The amount of shift in air fuel ratio				
			P2A03	8AH	84H	The amount of shift in air fuel ratio				
			P0150	8BH	0BH	Difference in sensor output voltage				
	05H	Air fuel ratio (A/F) sensor 1	P0153	8CH	83H	Response gain at the limited frequency				
		(Bank 2)	(Dalik 2)	(Dalik 2)	(Dalik 2)	(Bank 2)	P014E	8DH	04H	O2 Sensor Slow Response - Rich to Lean Bank 2 Sensor 1
			P014E	8EH	04H	O2 Sensor Slow Response - Rich to Lean Bank 2 Sensor 1				
HO2S			P014F	8FH	84H	O2 Sensor Slow Response - Lean to Rich Bank 2 Sensor 1				
			P014F	90H	84H	O2 Sensor Slow Response - Lean to Rich Bank 2 Sensor 1				
			P015C	91H	01H	O2 Sensor Delayed Response - Rich to Lean Bank 2 Sensor 1				
			P015C	92H	01H	O2 Sensor Delayed Response - Rich to Lean Bank 2 Sensor 1				
			P015D	93H	01H	O2 Sensor Delayed Response - Lean to Rich Bank 2 Sensor 1				
			P015D	94H	01H	O2 Sensor Delayed Response - Lean to Rich Bank 2 Sensor 1				
			P0158	07H	0CH	Minimum sensor output voltage for test cycle				
	06H	Heated oxygen sensor 2 (Bank 2)	P0157	08H	0CH	Maximum sensor output voltage for test cycle				
			P0158	80H	0CH	Sensor output voltage				
			P0159	81H	0CH	Difference in sensor output voltage				
			P0163	07H	0CH	Minimum sensor output voltage for test cycle				
	07H	Heated oxygen sensor 3 (Bank2)	P0164	08H	0CH	Maximum sensor output voltage for test cycle				
			P0166	80H	0CH	Sensor output voltage				
			P0165	81H	0CH	Difference in sensor output voltage				

ltem	OBD-	Self-diagnostic test item	DTC	li	e and Test mit display)	Description
пеш	MID	Sell-diagnostic test item	ыс	TID	Unit and Scaling ID	Description
			P0420	80H	01H	O2 storage index
	21H	Three way catalyst function	P0420	82H	01H	Switching time lag engine exhaust index value
	2111	(Bank1)	P2423	83H	0CH	Difference in 3rd O2 sensor output volt age
CATA-			P2423	84H	84H	O2 storage index in HC trap catalyst
LYST			P0430	80H	01H	O2 storage index
	22H	Three way catalyst function	P0430	82H	01H	Switching time lag engine exhaust index value
	2211	(Bank2)	P2424	83H	0CH	Difference in 3rd O2 sensor output voltage
			P2424	84H	84H	O2 storage index in HC trap catalyst
			P0400	80H	96H	Low Flow Faults: EGR temp change rate (short term)
			P0400	81H	96H	Low Flow Faults: EGR temp change rate (long term)
EGR SYSTEM	31H	EGR function	P0400	82H	96H	Low Flow Faults: Difference between max EGR temp and EGR temp under idling condition
			P0400	83H	96H	Low Flow Faults: Max EGR temp
			P1402	84H	96H	High Flow Faults: EGR temp increase rate
			P0011	80H	9DH	VTC intake function diagnosis (VTC alignment check diagnosis)
	35H	VVT Monitor (Bank1)	P0014	81H	9DH	VTC exhaust function diagnosis (VTC alignment check diagnosis)
	3311	VVI Monitor (Banki)	P0011	82H	9DH	VTC intake function diagnosis (VTC drive failure diagnosis)
VVT			P0014	83H	9DH	VTC exhaust function diagnosis (VTC drive failure diagnosis)
SYSTEM			P0021	80H	9DH	VTC intake function diagnosis (VTC alignment check diagnosis)
	<b>э</b> е⊔	\\\/T Monitor (Pople)	P0024	81H	9DH	VTC exhaust function diagnosis (VTC alignment check diagnosis)
	36H	VVT Monitor (Bank2)	P0021	82H	9DH	VTC intake function diagnosis (VTC drive failure diagnosis)
			P0024	83H	9DH	VTC exhaust function diagnosis (VTC drive failure diagnosis)

ECUD	IAGIN	OSIS INFORMATION >				[VQSDE]
	OBD-			li	e and Test mit display)	
Item	MID	Self-diagnostic test item	DTC	TID	Unitand Scaling ID	Description
	39H	EVAP control system leak (Cap Off)	P0455	80H	0CH	Difference in pressure sensor output voltage before and after pull down
	звн	EVAP control system leak (Small leak)	P0442	80H	05H	Leak area index (for more than 0.04 inch)
EVAP			P0456	80H	05H	Leak area index (for more than 0.02 inch)
SYSTEM	3СН	EVAP control system leak (Very small leak)	P0456	81H	FDH	Maximum internal pressure of EVAP system during monitoring
			P0456	82H	FDH	Internal pressure of EVAP system at the end of monitoring
	3DH	Purge flow system	P0441	83H	0CH	Difference in pressure sensor output voltage before and after vent control valve close
	41H	A/F sensor 1 heater (Bank 1)	Low Input:P0031 High Input:P0032	81H	овн	Converted value of Heater electric current to voltage
	42H	Heated oxygen sensor 2 heater (Bank 1)	Low Input:P0037 High Input:P0038	80H	0CH	Converted value of Heater electric current to voltage
O2 SEN- SOR	43H	Heated oxygen sensor 3 heater (Bank 1)	P0043	80H	0CH	Converted value of Heater electric current to voltage
HEATER	45H	A/F sensor 1 heater (Bank 2)	Low Input:P0051 High Input:P0052	81H	0BH	Converted value of Heater electric current to voltage
	46H	Heated oxygen sensor 2 heater (Bank 2)	Low Input:P0057 High Input:P0058	80H	0CH	Converted value of Heater electric current to voltage
	47H	Heated oxygen sensor 3 heater (Bank 2)	P0063	80H	0CH	Converted value of Heater electric current to voltage
			P0411	80H	01H	Secondary Air Injection System Incorrect Flow Detected
			Bank1: P0491 Bank2: P0492	81H	01H	Secondary Air Injection System Insufficient Flow
			P2445	82H	01H	Secondary Air Injection System Pump Stuck Off
Second- ary Air	71H	Secondary Air system	P2448	83H	01H	Secondary Air Injection System High Airflow
			Bank1: P2440 Bank2: P2442	84H	01H	Secondary Air Injection System Switching Valve Stuck Open
			P2440	85H	01H	Secondary Air Injection System Switching Valve Stuck Open
			P2444	86H	01H	Secondary Air Injection System Pump Stuck On
	81H	Fuel injection system function	P0171 or P0172	80H	2FH	Long term fuel trim
FUEL		(Bank 1)	P0171 or P0172	81H	24H	The number of lambda control clamped
SYSTEM	82H	Fuel injection system function	P0174 or P0175	80H	2FH	Long term fuel trim
	J211	(Bank 2)	P0174 or P0175	81H	24H	The number of lambda control clamped

				li	e and Test mit display)	
Item	OBD- MID	Self-diagnostic test item	DTC	TID	Unit and Scaling ID	Description
			P0301	80H	24H	Misfiring counter at 1000 revolution of the first cylinder
			P0302	81H	24H	Misfiring counter at 1000 revolution of the second cylinder
			P0303	82H	24H	Misfiring counter at 1000 revolution of the third cylinder
			P0304	83H	24H	Misfiring counter at 1000 revolution of the fourth cylinder
			P0305	84H	24H	Misfiring counter at 1000 revolution of the fifth cylinder
			P0306	85H	24H	Misfiring counter at 1000 revolution of the sixth cylinder
			P0307	86H	24H	Misfiring counter at 1000 revolution of the seventh cylinder
			P0308	87H	24H	Misfiring counter at 1000 revolution of the eighth cylinder
			P0300	88H	24H	Misfiring counter at 1000 revolution of the multiple cylinders
MISFIRE	A1H	Multiple Cylinder Miefires	P0301	89H	24H	Misfiring counter at 200 revolution of the first cylinder
WISFIRE	AIII	Multiple Cylinder Misfires	P0302	8AH	24H	Misfiring counter at 200 revolution of the second cylinder
			P0303	8BH	24H	Misfiring counter at 200 revolution of the third cylinder
			P0304	8CH	24H	Misfiring counter at 200 revolution of th fourth cylinder
			P0305	8DH	24H	Misfiring counter at 200 revolution of th fifth cylinder
			P0306	8EH	24H	Misfiring counter at 200 revolution of th sixth cylinder
			P0307	8FH	24H	Misfiring counter at 200 revolution of th seventh cylinder
			P0308	90H	24H	Misfiring counter at 200 revolution of the eighth cylinder
			P0300	91H	24H	Misfiring counter at 1000 revolution of the single cylinder
			P0300	92H	24H	Misfiring counter at 200 revolution of the single cylinder
			P0300	93H	24H	Misfiring counter at 200 revolution of th multiple cylinders

Item	OBD-	Solf diagnostic test item	DTC	li	ie and Test mit display)	Description
item	MID	Self-diagnostic test item	DIC	TID	Unitand Scaling ID	Description
	A2H	No. 1 Cylinder Misfire	P0301	0BH	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
		,	P0301	0CH	24H	Misfire counts for last/current driving cycles
	АЗН	No. 2 Cylinder Misfire	P0302	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles
			P0302	0CH	24H	Misfire counts for last/current driving cycles
	A4H	No. 3 Cylinder Misfire	P0303	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles
			P0303	0CH	24H	Misfire counts for last/current driving cycles
	A5H	No. 4 Cylinder Misfire	P0304	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles
MOFIDE		,	P0304	0CH	24H	Misfire counts for last/current driving cycles
MISFIRE	A6H	No. 5 Cylinder Misfire	P0305	ОВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0305	0CH	24H	Misfire counts for last/current driving cycles
	А7Н	No. 6 Cylinder Misfire	P0306	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles
			P0306	0CH	24H	Misfire counts for last/current driving cycles
	А8Н	No. 7 Cylinder Misfire	P0307	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles
			P0307	0CH	24H	Misfire counts for last/current driving cycles
	А9Н	No. 8 Cylinder Misfire	P0308	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0308	0CH	24H	Misfire counts for last/current driving cycles

## SYMPTOM DIAGNOSIS

## **ENGINE CONTROL SYSTEM SYMPTOMS**

Symptom Table

SYSTEM — BASIC ENGINE CONTROL SYSTEM

							S	/MPT	ОМ						
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warrant	y symptom code	AA	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА	
Fuel	Fuel pump circuit	1	1	2	3	2		2	2			3		2	EC-441
	Fuel pressure regulator system	3	3	4	4	4	4	4	4	4		4			EC-530
	Fuel injector circuit	1	1	2	3	2		2	2			2			EC-438
	Evaporative emission system	3	3	4	4	4	4	4	4	4		4			EC-77
Air	Positive crankcase ventilation system	3	3	4	4	4	4	4	4	4		4	1		EC-456
	Incorrect idle speed adjustment						1	1	1	1		1			EC-13
	Electric throttle control actuator	1	1	2	3	3	2	2	2	2		2		2	EC-398, EC-405
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1			EC-13
	Ignition circuit	1	1	2	2	2		2	2			2			EC-445
Power s	supply and ground circuit	2	2	3	3	3		3	3		2	3			EC-134
Mass air	r flow sensor circuit	1			2										EC-153, EC-159
Engine	coolant temperature sensor circuit	ľ					3			3					EC-169, EC-175
Air fuel ı	ratio (A/F) sensor 1 circuit		1	2	3	2		2	2			2			EC-182, EC-186, EC-190, EC-194, EC-421
Throttle	position sensor circuit						2			2					EC-172, EC-242, EC-355, EC-357, EC-414
Accelera	ator pedal position sensor circuit			3	2	1									EC-343, EC-407, EC-410, EC-417

### **ENGINE CONTROL SYSTEM SYMPTOMS**

< SYMPTOM DIAGNOSIS >

[VQ35DE]

Α

D

Е

F

Н

Κ

L

M

						S١	/MPT	ОМ						
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty symptom code	AA	AB	AC	AD	AE	AF	AG	AH	AJ	AK	AL	AM	НА	FO 054
Knock sensor circuit			2								3			EC-251
Engine oil temperature sensor			4		2						3			EC-236, EC-239
Crankshaft position sensor (POS) circuit	2	2												EC-254
Camshaft position sensor (PHASE) circuit	3	2												EC-258
Vehicle speed signal circuit		2	3		3						3			EC-327
Power steering pressure sensor circuit		2					3	3						EC-335
ECM	2	2	3	3	3	3	3	3	3	3	3			EC-338, EC-340
Intake valve timing control solenoid valve circuit		3	2		1	3	2	2	3		3			EC-150
PNP signal circuit			3		3		3	3			3			EC-346
VIAS control solenoid valve 1 circuit					1									EC-387
VIAS control solenoid valve 2 circuit					1									EC-390
Refrigerant pressure sensor circuit		2				3			3		4			EC-457
Electrical load signal circuit							3							EC-433
Air conditioner circuit	2	2	3	3	3	3	3	3	3		3		2	HAC-161
ABS actuator and electric unit (control unit)			4											BRC-28

<sup>1 - 6:</sup> The numbers refer to the order of inspection. (continued on next page)

SYSTEM — ENGINE MECHANICAL & OTHER

0

Ν

							S'	/MPT	MC						
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty s	ymptom code	AA	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА	
Fuel	Fuel tank	5													FL-12
	Fuel piping	3		5	5	5		5	5			5			MA-23
	Vapor lock		5												_
	Valve deposit														_
	Poor fuel (Heavy weight gasoline, Low octane)	5		5	5	5		5	5			5			_
Air	Air duct														EM-31
	Air cleaner														EM-31
	Air leakage from air duct (Mass air flow sensor — electric throttle control actuator)		5	5		5		5	5			5			<u>EM-31</u>
	Electric throttle control actuator	5			5		5			5					EM-33
	Air leakage from intake manifold/ Collector/Gasket														<u>EM-33</u> , <u>EM-36</u>
Cranking	Battery	1	1	1		1		1	1					1	PG-119
	Generator circuit	•	ļ	1		I		ı	ļ						CHG-24
	Starter circuit	3										1			STR-5
	Signal plate	6													EM-118
	PNP signal	4										L	L		<u>TM-47</u>
Engine	Cylinder head	5	5	5	5	5		5	5			- 5			<u>EM-111</u>
	Cylinder head gasket	J	J	J	,	J		J	,		4	J	3		<u></u>
	Cylinder block														
	Piston												4		
	Piston ring	6	6	6	6	6		6	6			6			EM-122
	Connecting rod				O				O						<u>LIVI 122</u>
	Bearing														
	Crankshaft														
Valve mecha-	Timing chain														<u>EM-70</u>
mecna- nism	Camshaft														<u>EM-98</u>
	Intake valve timing control	5	5	5	5	5		5	5			5			<u>EM-70</u>
	Intake valve												3		<u>EM-111</u>
	Exhaust valve														

## **ENGINE CONTROL SYSTEM SYMPTOMS**

< SYMPTOM DIAGNOSIS >

[VQ35DE]

Α

EC

D

Е

F

G

Н

							S	/MPT	OM						
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty	symptom code	AA	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА	
Exhaust	Exhaust manifold/Tube/Muffler/ Gasket	5	5	5	5	5		5	5			5			EM-38, EX-
	Three way catalyst														
Lubrica- tion	Oil pan/Oil strainer/Oil pump/Oil filter/Oil gallery/Oil cooler	5	5	5	5	5		5	5			5			<u>LU-7, LU-</u> 10, <u>LU-11,</u> <u>LU-13</u>
	Oil level (Low)/Filthy oil														<u>LU-7</u>
Cooling	Radiator/Hose/Radiator filler cap														<u>CO-15</u>
	Thermostat									5	-				<u>CO-26</u>
	Water pump														<u>CO-21</u>
	Water gallery	5	5	5	5	5		5	5		4	5			<u>CO-3</u>
	Cooling fan														<u>CO-19</u>
	Coolant level (Low)/Contaminated coolant									5					<u>CO-11</u>
NVIS (NIS NATS)	SAN Vehicle Immobilizer System —	1	1												SEC-15

<sup>1 - 6:</sup> The numbers refer to the order of inspection.

M

Κ

L

Ν

0

### NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS > [VQ35DE]

## NORMAL OPERATING CONDITION

Description INFOID:0000000005536906

### FUEL CUT CONTROL (AT NO LOAD AND HIGH ENGINE SPEED)

If the engine speed is above 2,000 rpm under no load (for example, the selector lever position is P or N and engine speed is over 2,000 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.

Fuel cut will be operated until the engine speed reaches 1,100 rpm, then fuel cut will be cancelled. **NOTE:** 

This function is different from deceleration control listed under Multiport Fuel Injection (MFI) System, <u>EC-29</u>. "System Description".

### **PRECAUTIONS**

< PRECAUTION > [VQ35DE]

## **PRECAUTION**

# PRECAUTIONS FOR USA AND CANADA

FOR USA AND CANADA: Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the
  ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s)
  with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly
  causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR USA AND CANADA: Precautions For Xenon Headlamp Service

#### **WARNING:**

Comply with the following warnings to prevent any serious accident.

- Disconnect the battery cable (negative terminal) or the power supply fuse before installing, removing, or touching the xenon headlamp (bulb included). The xenon headlamp contains high-voltage generated parts.
- Never work with wet hands.
- Check the xenon headlamp ON-OFF status after assembling it to the vehicle. Never turn the xenon headlamp ON in other conditions. Connect the power supply to the vehicle-side connector. (Turning it ON outside the lamp case may cause fire or visual impairments.)
- Never touch the bulb glass immediately after turning it OFF. It is extremely hot.

### **CAUTION:**

Comply with the following cautions to prevent any error and malfunction.

- Install the xenon bulb securely. (Insufficient bulb socket installation may melt the bulb, the connector, the housing, etc. by high-voltage leakage or corona discharge.)
- Never perform HID circuit inspection with a tester.
- Never touch the xenon bulb glass with hands. Never put oil and grease on it.
- Dispose of the used xenon bulb after packing it in thick vinyl without breaking it.
- Never wipe out dirt and contamination with organic solvent (thinner, gasoline, etc.).

EC

Α

С

Е

\_

Н

ŀ

INFOID:0000000005716166

M

N


0

# PRECAUTIONS

## FOR USA AND CANADA: Precaution for Procedure without Cowl Top Cover

INFOID:0000000005536909

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

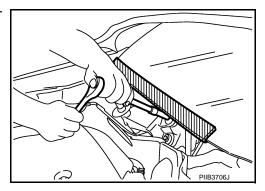

## FOR USA AND CANADA: On Board Diagnostic (OBD) System of Engine and CVT

IFOID:0000000005536910

The ECM has an on board diagnostic system. It will illuminate the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.


CAUTION:

- Always to turn the ignition switch OFF and disconnect the negative battery cable before any repair
  or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will
  cause the MIL to illuminate.
- Always to connect and lock the connectors securely after work. A loose (unlocked) connector will
  cause the MIL to illuminate due to the open circuit. (Be sure the connector is free from water, grease,
  dirt, bent terminals, etc.)
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to <u>PG-108</u>, "<u>Description</u>".
- Always route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to illuminate due to the short circuit.
- Always to connect rubber tubes properly after work. A misconnected or disconnected rubber tube
  may cause the MIL to illuminate due to the malfunction of the EVAP system or fuel injection system,
  etc.
- Always to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.

### FOR USA AND CANADA: General Precautions

INFOID:0000000005536911


- Always use a 12 volt battery as power source.
- Never attempt to disconnect battery cables while engine is running.
- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery cable. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned OFF.
- Before removing parts, turn ignition switch OFF and then disconnect battery ground cable.

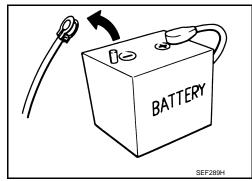

- Never disassemble ECM.
- If a battery cable is disconnected, the memory will return to the ECM value.

  The ECM will now start to self-control at its initial value. Thus, engine operation can vary slightly in this case. However, this is not an indication of a malfunction. Never replace parts because of a slight variation.
- If the battery is disconnected, the following emission-related diagnostic information will be lost within 24 hours.
- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data


- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values
- When connecting ECM harness connector, fasten (B) it securely with a lever (1) as far as it will go as shown in the figure.
- ECM (2)
- Loosen (A)

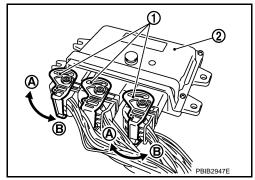



 When connecting or disconnecting pin connectors into or from ECM, never damage pin terminals (bends or break).
 Check that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.

Securely connect ECM harness connectors.
 A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.

- Keep engine control system harness at least 10 cm (4 in) away from adjacent harness, to prevent engine control system malfunctions due to receiving external noise, degraded operation of ICs, etc.
- · Keep engine control system parts and harness dry.
- Before replacing ECM, perform ECM Terminals and Reference Value inspection and check ECM functions properly. Refer to EC-464, "Reference Value".
- Handle mass air flow sensor carefully to avoid damage.
- Never clean mass air flow sensor with any type of detergent.
- Never disassemble electric throttle control actuator.
- Even a slight leakage in the air intake system can cause serious incidents.
- Never shock or jar the camshaft position sensor (PHASE), crankshaft position sensor (POS).

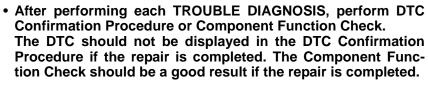

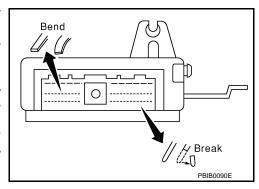

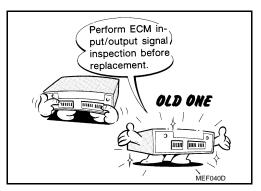



EC

Α

С

D

Е

F

Н

ı

J


K

M


Ν

0


 When measuring ECM signals with a circuit tester, never allow the two tester probes to contact.
 Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

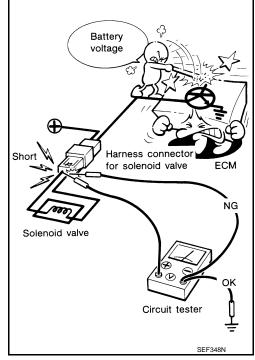

- B1 indicates bank 1, B2 indicates bank 2 as shown in the figure.
- Never operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.

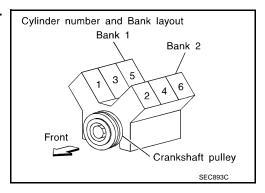

- · Never depress accelerator pedal when starting.
- · Immediately after starting, never rev up engine unnecessarily.
- Never rev up engine just prior to shutdown.

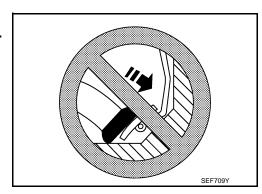


### **PRECAUTIONS**

[VQ35DE] < PRECAUTION >

• When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.

- Keep the antenna as far as possible from the electronic control units.
- Keep the antenna feeder line more than 20 cm (8 in) away from the harness of electronic controls.
  - Never let them run parallel for a long distance.
- Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
- Be sure to ground the radio to vehicle body.

### FOR MEXICO

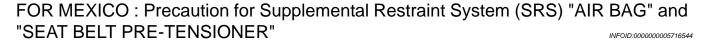

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

### WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

### WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO: Precautions For Xenon Headlamp Service

### **WARNING:**

Comply with the following warnings to prevent any serious accident.

- Disconnect the battery cable (negative terminal) or the power supply fuse before installing, removing, or touching the xenon headlamp (bulb included). The xenon headlamp contains high-voltage generated parts.
- Never work with wet hands.
- Check the xenon headlamp ON-OFF status after assembling it to the vehicle. Never turn the xenon headlamp ON in other conditions. Connect the power supply to the vehicle-side connector. (Turning it ON outside the lamp case may cause fire or visual impairments.)
- Never touch the bulb glass immediately after turning it OFF. It is extremely hot.

### **CAUTION:**

Comply with the following cautions to prevent any error and malfunction.

- Install the xenon bulb securely. (Insufficient bulb socket installation may melt the bulb, the connector, the housing, etc. by high-voltage leakage or corona discharge.)
- Never perform HID circuit inspection with a tester.
- Never touch the xenon bulb glass with hands. Never put oil and grease on it.
- Dispose of the used xenon bulb after packing it in thick vinyl without breaking it.

EC

Α

D

Е

INFOID:0000000005716167

Ν


Р

Never wipe out dirt and contamination with organic solvent (thinner, gasoline, etc.).

## FOR MEXICO: Precaution for Procedure without Cowl Top Cover

INFOID:0000000005716163

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane. etc.

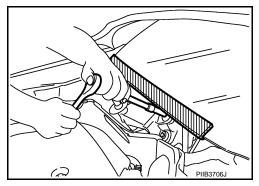

### FOR MEXICO: On Board Diagnostic (OBD) System of Engine and CVT

INFOID:0000000005716164

The ECM has an on board diagnostic system. It will illuminate the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.


#### **CAUTION:**

- Always to turn the ignition switch OFF and disconnect the negative battery cable before any repair
  or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will
  cause the MIL to illuminate.
- Always to connect and lock the connectors securely after work. A loose (unlocked) connector will
  cause the MIL to illuminate due to the open circuit. (Be sure the connector is free from water, grease,
  dirt, bent terminals, etc.)
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to <a href="PG-108">PG-108</a>, "Description".
- Always route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to illuminate due to the short circuit.
- Always to connect rubber tubes properly after work. A misconnected or disconnected rubber tube
  may cause the MIL to illuminate due to the malfunction of the EVAP system or fuel injection system,
  etc.
- Always to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.

### FOR MEXICO: General Precautions

INFOID:0000000005716165


- · Always use a 12 volt battery as power source.
- Never attempt to disconnect battery cables while engine is running.
- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery cable. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned OFF.
- Before removing parts, turn ignition switch OFF and then disconnect battery ground cable.

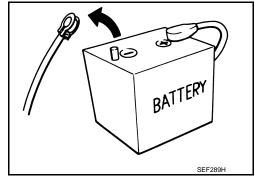

- Never disassemble ECM.
- If a battery cable is disconnected, the memory will return to the ECM value.

  The ECM will now start to self-control at its initial value. Thus, engine operation can vary slightly in this case. However, this is not an indication of a malfunction. Never replace parts because of a slight variation.
- If the battery is disconnected, the following emission-related diagnostic information will be lost within 24 hours.
- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes


- Test values
- When connecting ECM harness connector, fasten (B) it securely with a lever (1) as far as it will go as shown in the figure.
- ECM (2)
- Loosen (A)

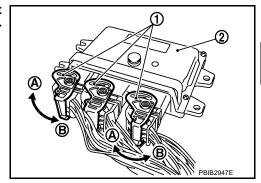



 When connecting or disconnecting pin connectors into or from ECM, never damage pin terminals (bends or break).
 Check that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.

Securely connect ECM harness connectors.
 A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.

- Keep engine control system harness at least 10 cm (4 in) away from adjacent harness, to prevent engine control system malfunctions due to receiving external noise, degraded operation of ICs, etc.
- Keep engine control system parts and harness dry.
- Before replacing ECM, perform ECM Terminals and Reference Value inspection and check ECM functions properly. Refer to EC-464, "Reference Value".
- Handle mass air flow sensor carefully to avoid damage.
- Never clean mass air flow sensor with any type of detergent.
- Never disassemble electric throttle control actuator.
- Even a slight leakage in the air intake system can cause serious incidents.
- Never shock or jar the camshaft position sensor (PHASE), crankshaft position sensor (POS).

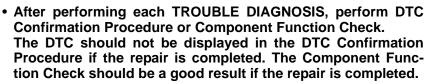

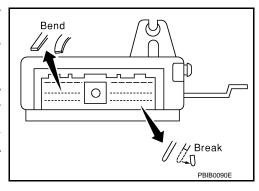

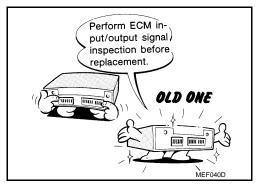



Α

EC

D

Е

F

Н

1

K


M

Ν


0

Ρ


 When measuring ECM signals with a circuit tester, never allow the two tester probes to contact.
 Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

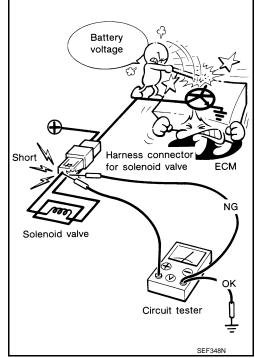

- B1 indicates bank 1, B2 indicates bank 2 as shown in the figure.
- Never operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.

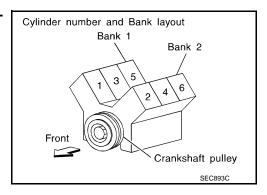

- Never depress accelerator pedal when starting.
- · Immediately after starting, never rev up engine unnecessarily.
- Never rev up engine just prior to shutdown.

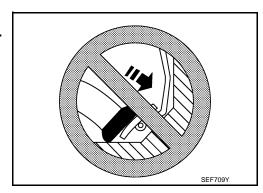


### **PRECAUTIONS**

< PRECAUTION > [VQ35DE]

 When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.

- Keep the antenna as far as possible from the electronic control units.
- Keep the antenna feeder line more than 20 cm (8 in) away from the harness of electronic controls.
  - Never let them run parallel for a long distance.
- Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
- Be sure to ground the radio to vehicle body.

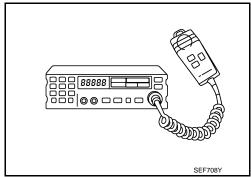

Α

EC

С

D

Е

F

Н

K

L

M

Ν

0

< PREPARATION > [VQ35DE]

## **PREPARATION**

## **PREPARATION**

## Special Service Tools

INFOID:0000000005536912

The actual shapes of Kent-Moor	re tools may differ from those of special service tools	illustrated here.
Tool number (Kent-Moore No.) Tool name		Description
(J-44321) Fuel pressure gauge kit	LEC642	Checks fuel pressure
(J-44321-6) Fuel pressure adapter	LBIA0376E	Connects fuel pressure gauge to quick connector type fuel lines

## **Commercial Service Tools**

INFOID:0000000005536913

Tool name (Kent-Moore No.)		Description
(J-45488) Quick connector re-		Removes fuel tube quick connectors in engine room
lease		
	PBIC0198E	
Leak detector i.e.: (J-41416)		Locates the EVAP leakage
,	S-NT703	
EVAP service port		Applys positive pressure through EVAP service
adapter i.e.: (J-41413-OBD)		port
(5 5 5 5 5		
	S-NT704	

## **PREPARATION**

< PREPARATION > [VQ35DE]

PREPARATION >		[VQ35DE]	
Tool name (Kent-Moore No.)		Description	
Fuel filler cap adapter i.e.: (MLR-8382)		Checks fuel tank vacuum relief valve opening pressure	
,			
	S-NT815		
Socket wrench		Removes and installs engine coolant temperature sensor	
	19 mm (0.75 in) More than 32 mm (1.26 in)		
O	S-NT705	Describing the subscribe the subscribe to the subscribe t	
Oxygen sensor thread cleaner i.e.: (J-43897-18)	a b	Reconditions the exhaust system threads before installing a new oxygen sensor. Use with antiseize lubricant shown below.	
(J-43897-12)	Mating surface shave	a: 18 mm diameter with pitch 1.5 mm for Zirco- nia Oxygen Sensor	
	cylinder	b: 12 mm diameter with pitch 1.25 mm for Tita- nia Oxygen Sensor	
	FlutesAEM488	ilia Oxygen Sensoi	
Anti-seize lubricant		Lubricates oxygen sensor thread cleaning tool	
i.e.: (Permatex <sup>TM</sup> 133AR or equivalent meeting MIL specifica- tion MIL-A-907)		when reconditioning exhaust system threads.	
	S-N1779		

Revision: 2009 September EC-529 2010 Murano

L

M

Ν

0

## PERIODIC MAINTENANCE

### **FUEL PRESSURE**

Inspection INFOID:0000000005536914


### **FUEL PRESSURE RELEASE**

### (P) With CONSULT-III

- 1. Turn ignition switch ON.
- Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT-III.
- 3. Start engine.
- 4. After engine stalls, crank it 2 or 3 times to release all fuel pressure.
- 5. Turn ignition switch OFF.

### Without CONSULT-III

- 1. Remove fuel pump fuse (2) located in IPDM E/R (1).
- Start engine.
- After engine stalls, crank it 2 or 3 times to release all fuel pressure.
- 4. Turn ignition switch OFF.
- 5. Reinstall fuel pump fuse after servicing fuel system.

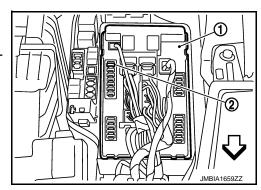


### **FUEL PRESSURE CHECK**

### **CAUTION:**

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger. NOTE:

- Prepare pans or saucers under the disconnected fuel line because the fuel may spill out. The fuel pressure cannot be completely released because Z51 models do not have fuel return system.
- Be careful not to scratch or get the fuel hose connection area dirty when servicing, so that the quick connector o-ring maintains seal ability.
- Use Fuel Pressure Gauge Kit [SST (J-44321)] and Fuel Pressure Adapter [SST (J-44321-6)] to check fuel pressure.
- Release fuel pressure to zero.
- Remove fuel hose using Quick Connector Release [SST (J-45488)].
  - Do not twist or kink fuel hose because it is plastic hose.
  - Do not remove fuel hose (1) from quick connector.
  - Keep fuel hose connections clean.
- 3. Install Fuel Pressure Adapter [SST (J-44321-6)] (B) and Fuel Pressure Gauge kit [SST (J44321)] (A) as shown in figure.
  - Do not distort or bend fuel rail tube when installing fuel pressure gauge adapter.
  - When reconnecting fuel hose, check the original fuel hose for damage and abnormality.
- 4. Turn ignition switch ON (reactivate fuel pump) and check for fuel leakage.
- 5. Start engine and check for fuel leakage.
- 6. Read the indication of fuel pressure gauge kit [SST (J-44321)].
  - During fuel pressure check, check for fuel leakage from fuel connection every 3 minutes.

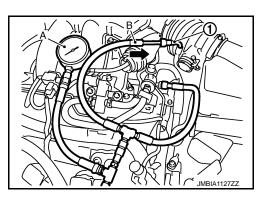

At idling : Approximately 350 kPa (3.57 kg/cm<sup>2</sup>, 51 psi)

### **FUEL PRESSURE**

### < PERIODIC MAINTENANCE >

- 7. If result is unsatisfactory, go to next step.
- 8. Check the following.
  - Fuel hoses and fuel tubes for clogging
  - Fuel filter for clogging
  - Fuel pump
  - Fuel pressure regulator for clogging
- 9. If OK, replace fuel pressure regulator. If NG, repair or replace malfunctioning part.
- 10. Before disconnecting Fuel Pressure Gauge kit [SST (J-44321)] and Fuel Pressure Adapter [SST (J-44321-6)], release fuel pressure to zero.

[VQ35DE]

EC

Α

С

Е

D

G

F

Н

K

L

M

Ν

0

## **EVAP LEAK CHECK**


Inspection INFOID:000000005536915


#### **CAUTION:**

- Never use compressed air or a high pressure pump.
- Never exceed 4.12 kPa (0.042 kg/cm<sup>2</sup>, 0.6 psi) of pressure in EVAP system.
- Do not start engine.
- Improper installation of EVAP service port adapter (commercial service tool) to the EVAP service port may cause a leakage.

### (P) WITH CONSULT-III


- To locate the EVAP leakage, install EVAP service port adapter (commercial service tool) and pressure pump to EVAP service port.
- 2. Turn ignition switch ON.
- 3. Select the "EVAP SYSTEM CLOSE" of "WORK SUPPORT MODE" with CONSULT-III.
- 4. Touch "START". A bar graph (Pressure indicating display) will appear on the screen.
- 5. Apply positive pressure to the EVAP system until the pressure indicator reaches the middle of the bar graph.
- 6. Remove EVAP service port adapter (commercial service tool) and hose with pressure pump.
- 7. Locate the leakage using a leakage detector (commercial service tool). Refer to <a href="EC-77">EC-77</a>, "System Diagram".

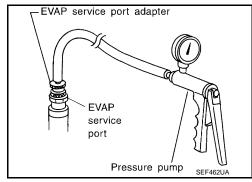

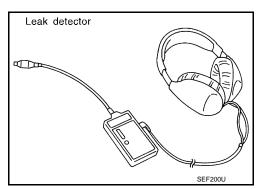

### **⋈** WITHOUT CONSULT-III

- To locate the EVAP leakage, install EVAP service port adapter (commercial service tool) and pressure pump to EVAP service port.
- Apply battery voltage between the terminals of EVAP canister vent control valve to make a closed EVAP system.
- 3. To locate the leakage, deliver positive pressure to the EVAP system until pressure gauge points reach 1.38 to 2.76 kPa (0.014 to 0.028 kg/cm<sup>2</sup>, 0.2 to 0.4 psi).
- 4. Remove EVAP service port adapter (commercial service tool) and hose with pressure pump.

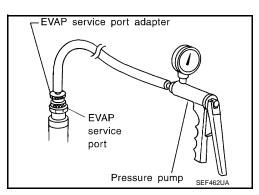


### **EVAP LEAK CHECK**

### < PERIODIC MAINTENANCE >

[VQ35DE]

 Locate the leakage using a leak detector (commercial service tool). Refer to <u>EC-77</u>, "System Diagram".

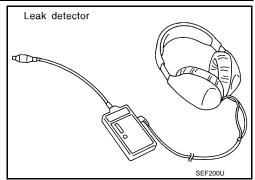

Α

EC

С

D

Е

F

G

Н

K

L

 $\mathbb{N}$ 

Ν


0

## REMOVAL AND INSTALLATION

## **EVAP CANISTER**

**Exploded View** 

INFOID:0000000005536916

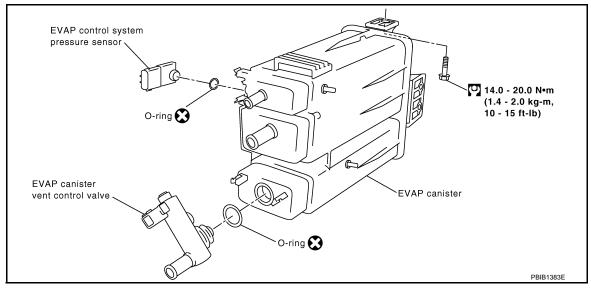

### Removal and Installation

INFOID:0000000005536917

### **REMOVAL**

- 1. Lift up the vehicle.
- 2. Remove EVAP canister fixing bolt.
- 3. Remove EVAP canister.

### NOTE:

The EVAP canister vent control valve and EVAP canister system pressure sensor can be removed without removing the EVAP canister.

### **INSTALLATION**


Install in the reverse order of removal.

#### NOTE

Tighten EVAP canister fixing bolt to the specified torque.

### DISASSEMBLY

- 1. Turn EVAP canister vent control valve counterclockwise.
- Remove the EVAP canister vent control valve.

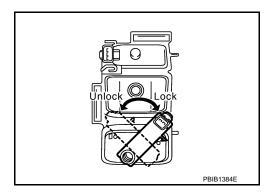

### **ASSEMBLY**

Assemble in the reverse order of disassembly.


### **CAUTION:**

Always replace O-ring with a new one.

Inspection INFOID:000000005536918

Check EVAP canister as per the following:

- 1. Block port (B).
- 2. Blow air into port (A) and check that it flows freely out of port (C).
- 3. Release blocked port (B).
- 4. Apply vacuum pressure to port (B) and check that vacuum pressure exists at the ports (A) and (C).
- 5. Block port (A) and (B).
- 6. Apply pressure to port (C) and check that there is no leakage.

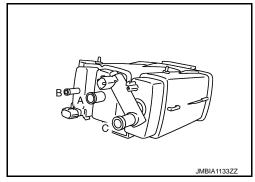

EC

Α

С

D

Е

F

G

Н

l

K

L

M

Ν

0

## **SERVICE DATA AND SPECIFICATIONS (SDS)**

< SERVICE DATA AND SPECIFICATIONS (SDS)

[VQ35DE]

## SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

Idle Speed

Condition	Specification
No load* (in P or N position)	600 ± 50 rpm

<sup>\*:</sup> Under the following conditions

- · A/C switch: OFF
- Electric load: OFF (Lights, heater fan & rear window defogger)
- Steering wheel: Kept in straight-ahead position

## **Ignition Timing**

INFOID:0000000005536920

Condition	Specification
No load* (in P or N position)	12 ± 5° BTDC

<sup>\*:</sup> Under the following conditions

- · A/C switch: OFF
- Electric load: OFF (Lights, heater fan & rear window defogger)
- Steering wheel: Kept in straight-ahead position

### Calculated Load Value

INFOID:0000000005536921

Condition	Specification (Using CONSULT-III or GST)
At idle	10 – 35 %
At 2,500 rpm	10 – 35 %

### Mass Air Flow Sensor

INFOID:0000000005536922

Supply voltage	Battery voltage (11 – 14 V)
Output voltage at idle (in N position)	0.9 – 1.2 V*
Mass air flow (Using CONSULT-III or GST)	2.0 – 6.0 g·m/sec at idle* 7.0 – 20.0 g·m/sec at 2,500 rpm*

<sup>\*:</sup> Engine is warmed up to normal operating temperature and running under no load.