

SECTION CHG

CHARGING SYSTEM

BASIC INSPECTION	3	CHARGING SYSTEM	20
DIAGNOSIS AND REPAIR WORKFLOW	3	Symptom Table	20
Work Flow	3		
SYSTEM DESCRIPTION	6	PRECAUTION	21
CHARGING SYSTEM	6	PRECAUTIONS	21
System Diagram	6	FOR USA AND CANADA	21
System Description	6	FOR USA AND CANADA : Precaution for Supple- mental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	21
Component Parts Location	6	FOR USA AND CANADA : Precaution for Power Generation Voltage Variable Control System	21
Component Description	6		
POWER GENERATION VOLTAGE VARI- ABLE CONTROL SYSTEM	8	FOR MEXICO	21
System Diagram	8	FOR MEXICO : Precaution for Supplemental Re- straint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	21
System Description	8	FOR MEXICO : Precaution for Power Generation Voltage Variable Control System	22
Component Parts Location	8		
Component Description	9		
DTC/CIRCUIT DIAGNOSIS	10	PREPARATION	23
B TERMINAL CIRCUIT	10	PREPARATION	23
Description	10	Special Service Tools	23
Diagnosis Procedure	10	Commercial Service Tools	23
L TERMINAL CIRCUIT (OPEN)	11		
Description	11		
Diagnosis Procedure	11		
L TERMINAL CIRCUIT (SHORT)	13	PERIODIC MAINTENANCE	24
Description	13	CHARGING SYSTEM PRELIMINARY IN- SPECTION	24
Diagnosis Procedure	13	Inspection Procedure	24
S TERMINAL CIRCUIT	14	POWER GENERATION VOLTAGE VARI- ABLE CONTROL SYSTEM OPERATION IN- SPECTION	25
Description	14	Inspection Procedure	25
Diagnosis Procedure	14		
CHARGING SYSTEM	15	REMOVAL AND INSTALLATION	27
Wiring Diagram - CHARGING SYSTEM -	15	ALTERATOR	27
SYMPOTM DIAGNOSIS	20	Exploded View	27
		Removal and Installation	28

A
B
C
D
E

F
G
H
I
J
K
L

CHG

N
O
P

Inspection	29
SERVICE DATA AND SPECIFICATIONS (SDS)	30
SERVICE DATA AND SPECIFICATIONS (SDS)	30
Alternator	30

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006260538

OVERALL SEQUENCE

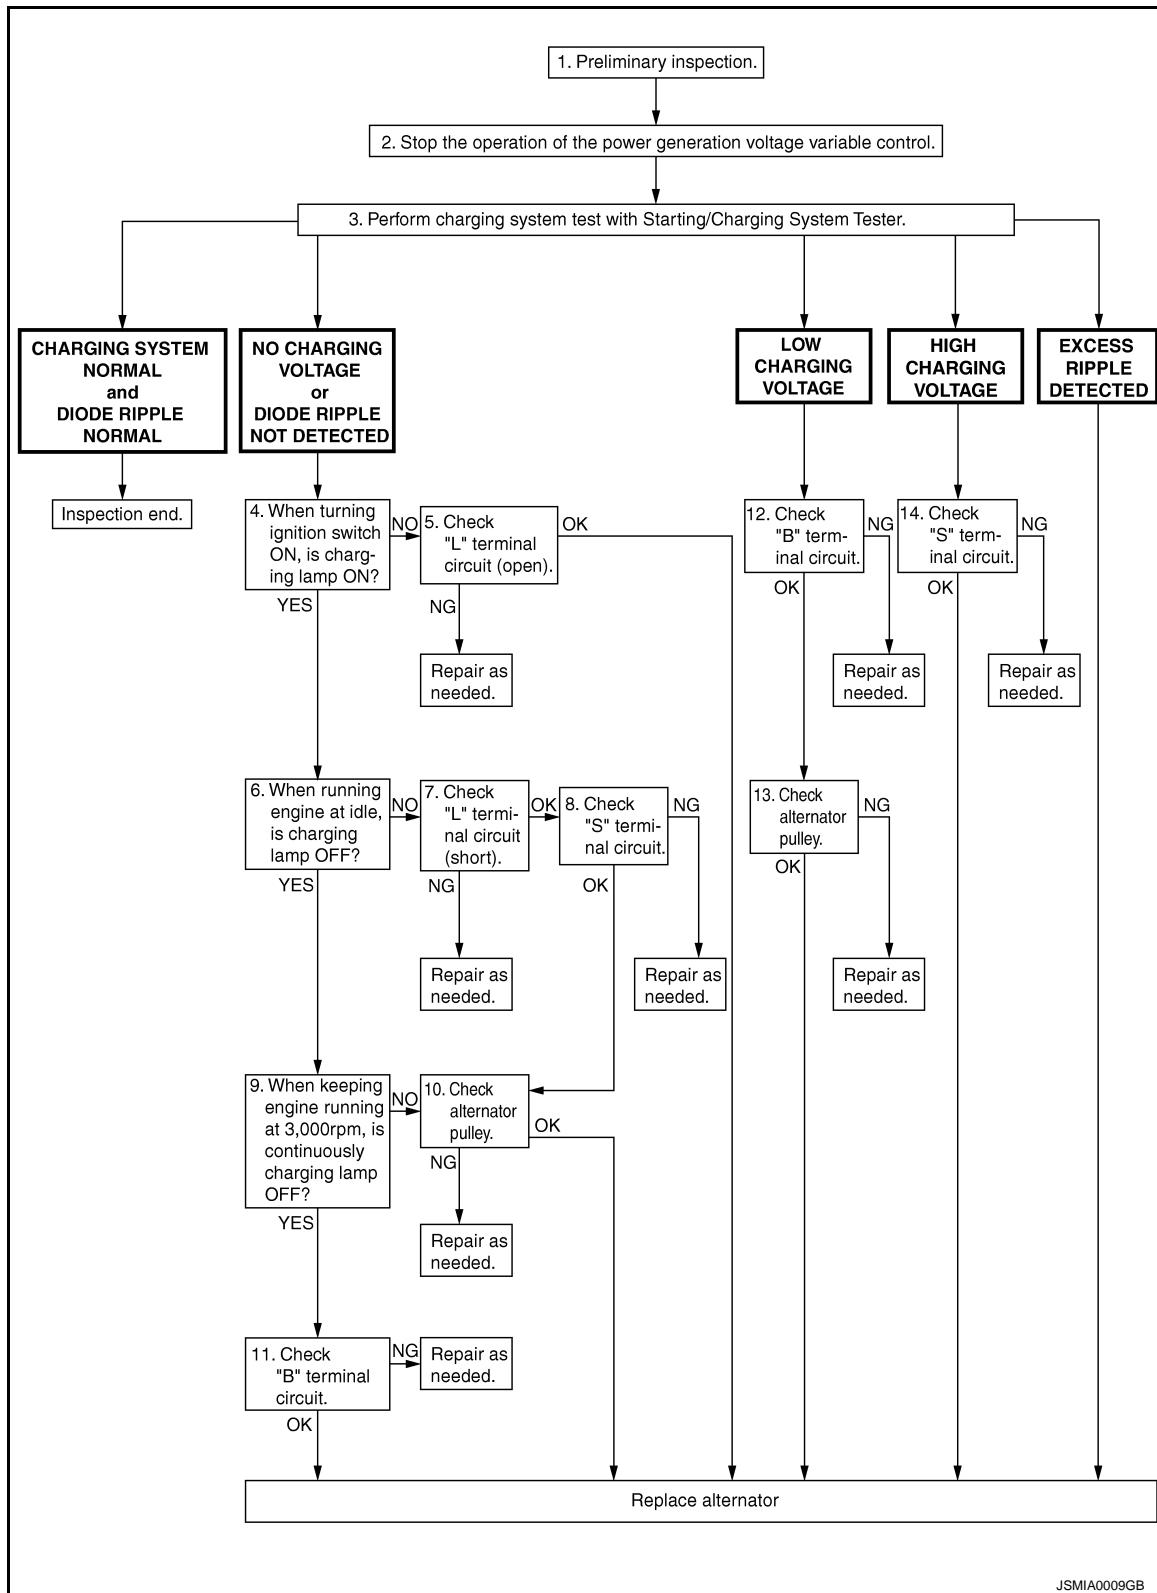

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

DETAILED FLOW

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter and alternator test segments must be done as a set from start to finish.

1. PRELIMINARY INSPECTION

Perform the preliminary inspection. Refer to [CHG-24. "Inspection Procedure"](#).

>> GO TO 2.

2. STOP POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

Stop the operation of the power generation voltage variable control in either of the following procedures.

- After selecting “ENGINE” of “SELECT SYSTEM” using CONSULT-III, set the DUTY value of “ALTERNATOR DUTY” to 0 % by selecting “ALTERNATOR DUTY” of “Active Test”. Continue “Active Test” until the end of inspection. (When the DUTY value is 0 or 100 %, the normal power generation is performed according to the characteristic of the IC voltage regulator of the alternator.)
- Turn the ignition switch OFF, and disconnect the battery current sensor connector. [However, DTC (P1550 - P1554) of the engine might remain. After finishing the inspection, connect the battery current sensor connector and erase the self-diagnostic results history of the engine using CONSULT-III.]

>> GO TO 3.

3. DIAGNOSIS WITH STARTING/CHARGING SYSTEM TESTER

Perform the charging system test using Starting/Charging System Tester (SST: J-44373). For details and operating instructions, refer to Technical Service Bulletin.

Test result

CHARGING SYSTEM NORMAL>>Charging system is normal and will also show “DIODE RIPPLE” test result.

NO CHARGING VOLTAGE>>GO TO 4.

LOW CHARGING VOLTAGE>>GO TO 12.

HIGH CHARGING VOLTAGE>>GO TO 14.

DIODE RIPPLE NORMAL>>Diode ripple is OK and will also show “CHARGING VOLTAGE” test result.

EXCESS RIPPLE DETECTED>>Replace the alternator. Perform “DIODE RIPPLE” test again using Starting/Charging System Tester (SST: J-44373) to confirm repair.

DIODE RIPPLE NOT DETECTED>>GO TO 4.

4. INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS ON)

Turn the ignition switch ON.

Does the charge warning lamp illuminate?

YES >> GO TO 6.

NO >> GO TO 5.

5. “L” TERMINAL CIRCUIT (OPEN) INSPECTION

Check “L” terminal circuit (open). Refer to [CHG-11. "Diagnosis Procedure"](#).

Is the “L” terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

6. INSPECTION WITH CHARGE WARNING LAMP (IDLING)

Start the engine and run it at idle.

Does the charge warning lamp turn OFF?

YES >> GO TO 9.

NO >> GO TO 7.

7. “L” TERMINAL CIRCUIT (SHORT) INSPECTION

Check “L” terminal circuit (short). Refer to [CHG-13. "Diagnosis Procedure"](#).

Is the “L” terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

8.“S” TERMINAL CIRCUIT INSPECTION

Check “S” terminal circuit. Refer to [CHG-14, “Diagnosis Procedure”](#).

Is the “S” terminal circuit normal?

YES >> GO TO 10.

NO >> Repair as needed.

9. INSPECTION WITH CHARGE WARNING LAMP (ENGINE AT 3,000 RPM)

Increase and maintain the engine speed at 3,000 rpm.

Does the charge warning lamp remain off?

YES >> GO TO 11.

NO >> GO TO 10.

10. INSPECTION OF ALTERNATOR PULLEY

Check alternator pulley. Refer to [CHG-29, “Inspection”](#).

Is alternator pulley normal?

YES >> Replace alternator.

NO >> Repair as needed.

11. “B” TERMINAL CIRCUIT INSPECTION

Check “B” terminal circuit. Refer to [CHG-10, “Diagnosis Procedure”](#).

Is “B” terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

12. “B” TERMINAL CIRCUIT INSPECTION

Check “B” terminal circuit. Refer to [CHG-10, “Diagnosis Procedure”](#).

Is “B” terminal circuit normal?

YES >> GO TO 13.

NO >> Repair as needed.

13. INSPECTION OF ALTERNATOR PULLEY

Check alternator pulley. Refer to [CHG-29, “Inspection”](#).

Is alternator pulley normal?

YES >> Replace alternator.

NO >> Repair as needed.

14. “S” TERMINAL CIRCUIT INSPECTION

Check “S” terminal circuit. Refer to [CHG-14, “Diagnosis Procedure”](#).

Is the “S” terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

CHARGING SYSTEM


<SYSTEM DESCRIPTION>

SYSTEM DESCRIPTION

CHARGING SYSTEM

System Diagram

INFOID:0000000006260539

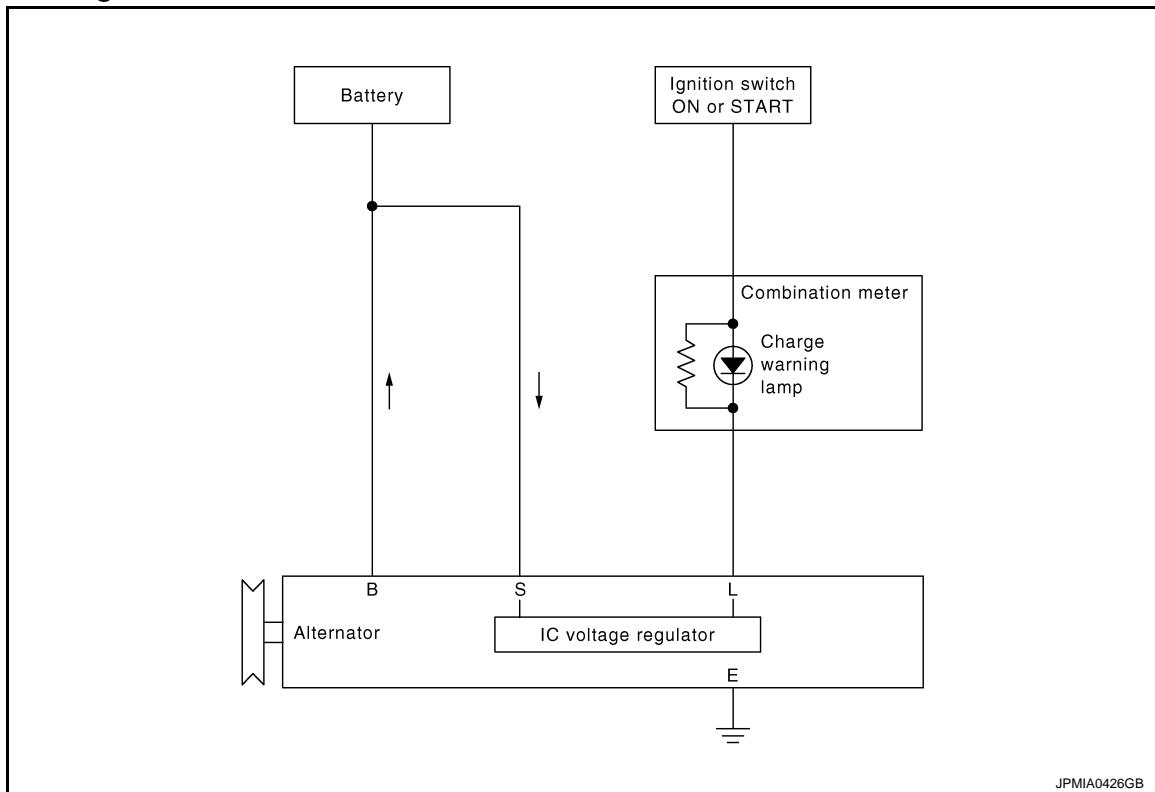

JPMIA0426GB


System Description

INFOID:0000000006260540

The voltage output is controlled by the IC voltage regulator.

Component Parts Location

INFOID:0000000006260541

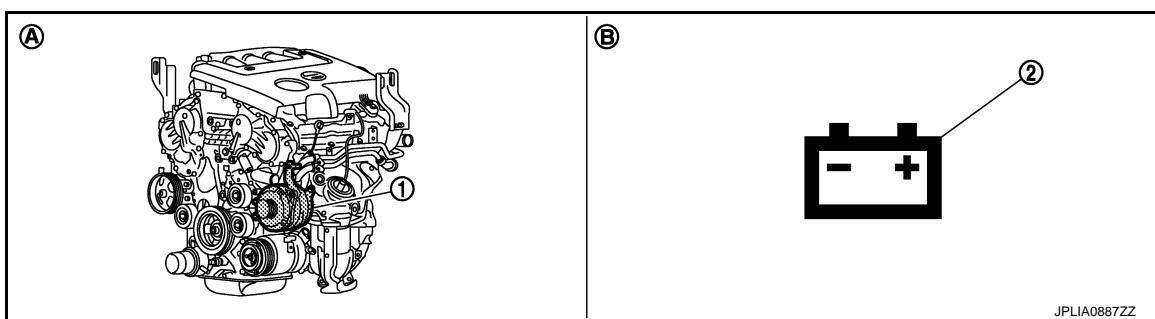

- | | |
|-----------------------------|------------------------|
| 1. Alternator | 2. Charge warning lamp |
| A. Cylinder block left side | B. Combination meter |

JPLIA0887ZZ

Component Description

INFOID:0000000006260542

CHARGING SYSTEM

< SYSTEM DESCRIPTION >

Component part	Description
Alternator	The alternator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged.
Combination meter (Charge warning lamp)	The IC voltage regulator warning function activates to illuminate the charge warning lamp, if any of the following symptoms occur while alternator is operating: <ul style="list-style-type: none">• Excessive voltage is produced.• No voltage is produced.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P


POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

< SYSTEM DESCRIPTION >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

System Diagram

INFOID:0000000006260543

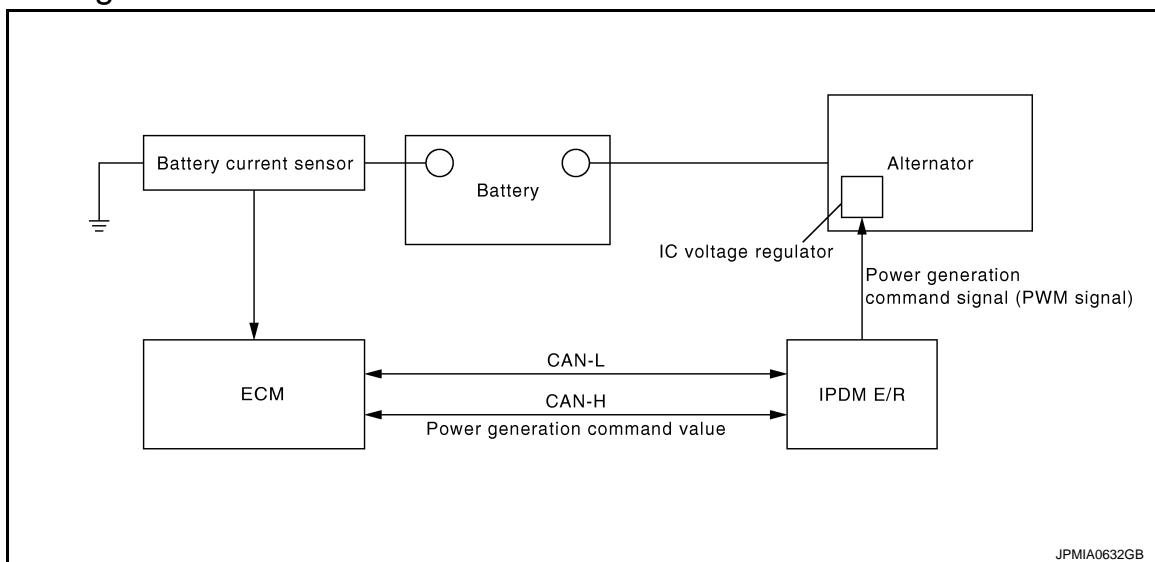

System Description

INFOID:0000000006260544


By performing the power generation voltage variable control, the engine load due to the power generation of the alternator is reduced and fuel consumption is decreased.

NOTE:

When any malfunction is detected in the power generation voltage variable control system, the power generation is performed according to the characteristic of the IC voltage regulator of the alternator.

Component Parts Location

INFOID:0000000006260545

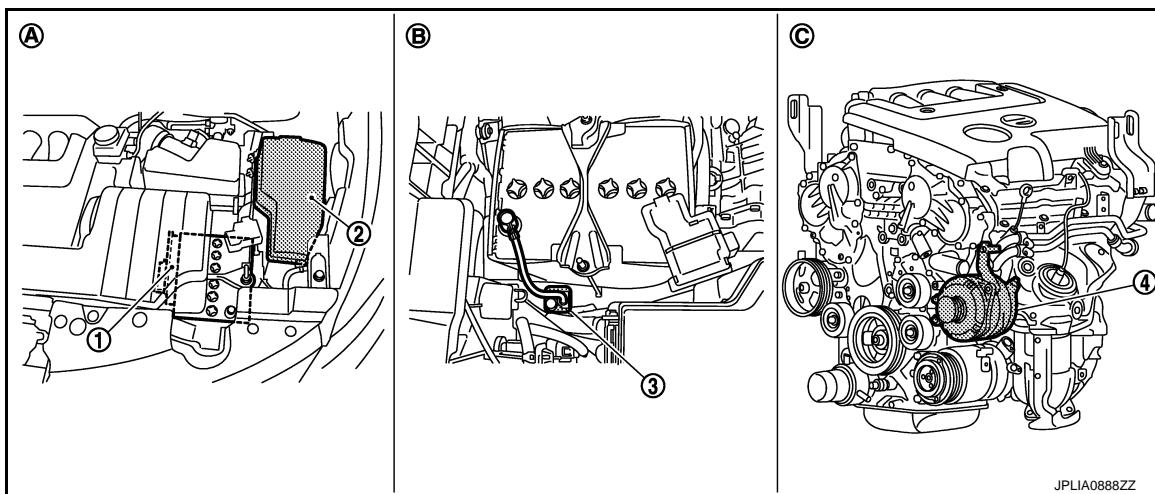

- | | | |
|--------------------------------|-------------|-----------------------------|
| 1. ECM | 2. IPDM E/R | 3. Battery current sensor |
| 4. Alternator | B. Battery | C. Cylinder block left side |
| A. Engine room dash panel (LH) | | |

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Component Description

INFOID:000000006260546

Component part	Description
Battery current sensor	Battery current sensor is installed to the battery cable at the negative terminal, and it detects the charging/discharging current of the battery and sends the voltage signal to ECM according to the current value.
ECM	Battery current sensor detects the charging/discharging current of the battery. ECM judges the battery condition based on this signal. ECM judges whether to perform the power generation voltage variable control according to the battery condition. When performing the power generation voltage variable control, ECM calculates the target power generation voltage according to the battery condition and sends the calculated value as the power generation command value to IPDM E/R.
IPDM E/R	IPDM E/R converts the received power generation command value into the power generation command signal (PWM signal) and sends it to the IC voltage regulator.
Alternator (IC voltage regulator)	IC voltage regulator controls the power generation voltage by the target power generation voltage based on the received power generation command signal. When there is no power generation command signal, the alternator performs the normal power generation according to the characteristic of the IC voltage regulator.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:0000000006260547

"B" terminal circuit supplies power to charge the battery and to operate the vehicle's electrical system.

Diagnosis Procedure

INFOID:0000000006260548

1.CHECK "B" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "B" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "B" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2.CHECK "B" TERMINAL CIRCUIT

Check voltage between alternator "B" terminal and ground.

Terminals		Voltage (Approx.)	
(+)	(-)		
Alternator "B" terminal	Terminal		
F59	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness for open between alternator and fusible link.

3.CHECK "B" TERMINAL CONNECTION (VOLTAGE DROP TEST)

1. Start engine, then engine running at idle and warm.
2. Check voltage between battery positive terminal and alternator "B" terminal.

Terminals		Voltage (Approx.)	
(+)	(-)		
Alternator "B" terminal	Terminal		
Battery positive terminal	F59	1	Less than 0.2 V

Is the inspection result normal?

YES >> "B" terminal circuit is normal. Refer to [CHG-3, "Work Flow"](#).

NO >> Check harness between battery and alternator for poor continuity.

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (OPEN)

Description

INFOID:0000000006260549

The "L" terminal circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the alternator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:0000000006260550

1. CHECK "L" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "L" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "L" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2. CHECK "L" TERMINAL CIRCUIT (OPEN)

1. Disconnect alternator connector.
2. Apply ground to alternator harness connector terminal.
3. Check condition of the charge warning lamp with the ignition switch in the ON position.

Alternator harness connector	Terminal	Ground	Condition	
			Ignition switch position	Charge warning lamp
F60	3		ON	illuminate

Does it illuminate?

YES >> "L" terminal circuit is normal. Refer to [CHG-3, "Work Flow"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the battery cable from the negative terminal.
2. Disconnect the combination meter connector.
3. Check continuity between alternator harness connector and combination meter harness connector.

Alternator harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F60	3	M34	25	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the harness or connector.

4. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check continuity between combination meter harness connector and fuse block.

Combination meter harness connector		Fuse block		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M34	2	M3	12C	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harness.

5. CHECK POWER SUPPLY CIRCUIT

1. Connect the battery cable to the negative terminal.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

2. Check voltage between combination meter harness connector and ground.

Terminals		Condition	Voltage (Approx.)	
(+)	(-)			
Combination meter harness connector	Terminal			
M34	2	Ground	When the ignition switch is in ON position	Battery voltage

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Inspect the power supply circuit. Refer to [PG-63, "Wiring Diagram - IGNITION POWER SUPPLY -](#)
[".](#)

L TERMINAL CIRCUIT (SHORT)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (SHORT)

Description

INFOID:0000000006260551

The "L" terminal circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the alternator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:0000000006260552

1. CHECK "L" TERMINAL CIRCUIT (SHORT)

1. Turn ignition switch OFF.
2. Disconnect alternator connector.
3. Turn ignition switch ON.

Does charge warning lamp illuminate?

- YES >> GO TO 2.
NO >> Refer to [CHG-3, "Work Flow"](#).

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect combination meter connector.
4. Check continuity between combination meter harness connector and ground.

Combination meter harness connector		Ground	Continuity
Connector No.	Terminal No.		
M34	25		Not existed

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Repair the harness.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

S TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S TERMINAL CIRCUIT

Description

INFOID:0000000006260553

The output voltage of the alternator is controlled by the IC voltage regulator at the "S" terminal detecting the input voltage.

The "S" terminal circuit detects the battery voltage to adjust the alternator output voltage with the IC voltage regulator.

Diagnosis Procedure

INFOID:0000000006260554

1. CHECK "S" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "S" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "S" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2. CHECK "S" TERMINAL CIRCUIT

Check voltage between alternator harness connector and ground.

Terminals		(-)	Voltage (Approx.)
(+)	Terminal		
Alternator harness connector	4	Ground	Battery voltage
F60			

Is the inspection result normal?

YES >> Refer to [CHG-3, "Work Flow"](#).

NO >> Check harness for open between alternator and fuse.

CHARGING SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

CHARGING SYSTEM

Wiring Diagram - CHARGING SYSTEM -

INFOID:0000000006260555

CHARGING SYSTEM

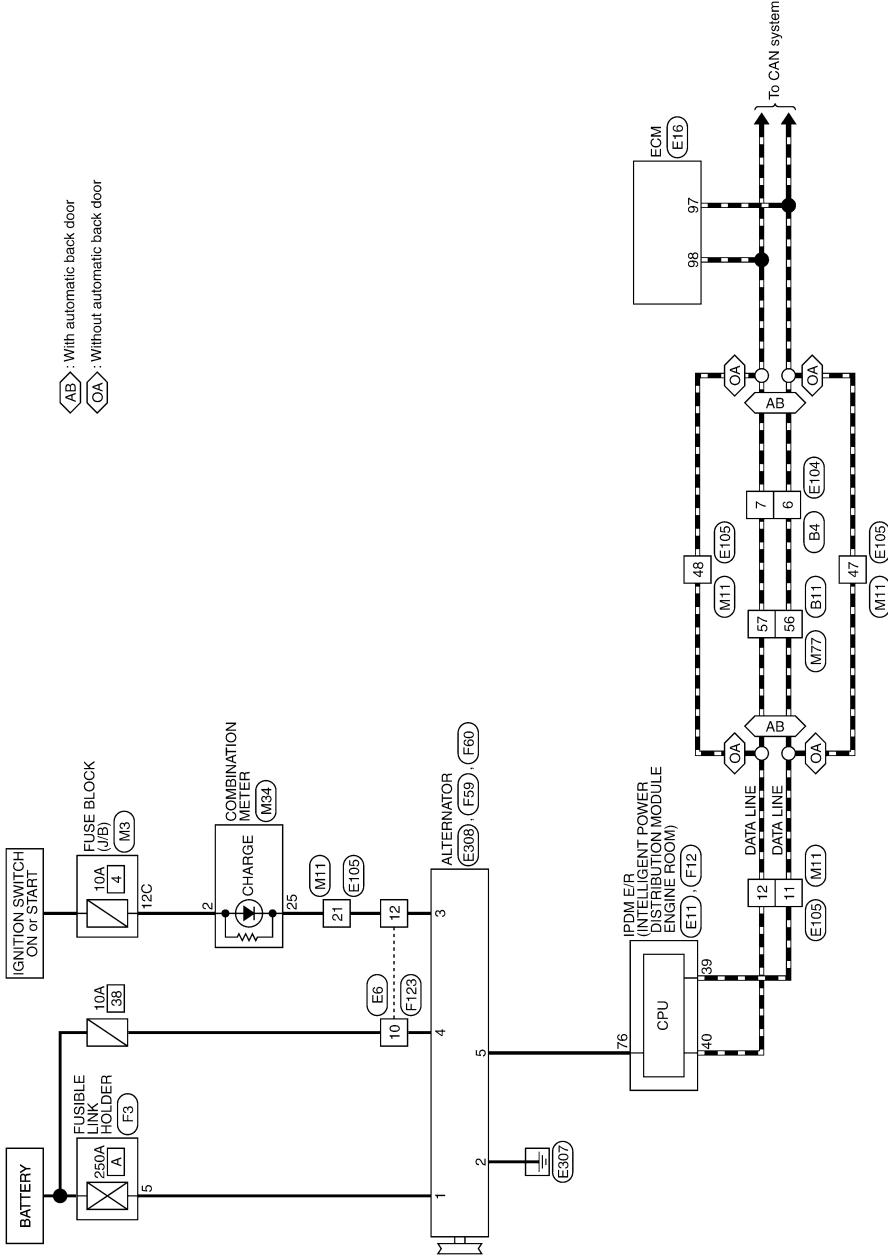

2008/09/23

JCMWM3186GB

CHARGING SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

CHARGING SYSTEM

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	NS1BMW-CS
	

Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	W	-
3	W	-
4	R	-
5	O	-
6	P	-
7	L	-
8	B	-
9	LG	-
10	V	-
11	L	-
12	BR	-
13	P	-
14	BR	-
15	O	-
16	G	-

Terminal No.	Color of Wire	Signal Name [Specification]
19	R	-
20	P	-
21	LG	-
22	Y	-
23	BR	-
24	GR	-
25	Y	-
27	V	-
28	WL	-
30	P	-
31	O	-
32	BR	-
34	SB	-
35	SHIELD	-
36	LO	-
37	LG	-
40	Y	-
41	GR	-
42	SB	-
46	LG	-
47	SB	-
48	SHIELD	-
49	B	-
50	RW	-
51	RL	-
52	B	-

Terminal No.	Color of Wire	Signal Name [Specification]
53	Y	-
54	LG	-
55	BR	-
56	P	-
57	L	-
58	R	-
59	SHIELD	-
60	B	-
61	RL	-
62	RW	-
63	LG	-
64	Y	-
65	BR	-
66	V	-

7	V	-
8	SHIELD	-
9	BR/L	-
10	Y/G	-
11	Y/L	-
12	WL	-
13	L	-
14	BR	-
15	SB	-
16	BR	-
17	V	-
18	SB	-
19	R	-
20	P	-
21	LG	-
22	Y	-
23	BR	-
24	GR	-
25	Y	-
27	V	-
28	WL	-
30	P	-
31	O	-
32	BR	-
34	SB	-
35	SHIELD	-
36	LO	-
37	LG	-
40	Y	-
41	GR	-
42	SB	-
46	LG	-
47	SB	-
48	SHIELD	-
49	B	-
50	RW	-
51	RL	-
52	B	-

7	V	-
8	SHIELD	-
9	BR/L	-
10	Y/G	-
11	Y/L	-
12	WL	-
13	L	-
14	BR	-
15	SB	-
16	BR	-
17	V	-
18	SB	-
19	R	-
20	P	-
21	LG	-
22	Y	-
23	BR	-
24	GR	-
25	Y	-
27	V	-
28	WL	-
30	P	-
31	O	-
32	BR	-
34	SB	-
35	SHIELD	-
36	LO	-
37	LG	-
40	Y	-
41	GR	-
42	SB	-
46	LG	-
47	SB	-
48	SHIELD	-
49	B	-
50	RW	-
51	RL	-
52	B	-

7	V	-
8	SHIELD	-
9	BR/L	-
10	Y/G	-
11	Y/L	-
12	WL	-
13	L	-
14	BR	-
15	SB	-
16	BR	-
17	V	-
18	SB	-
19	R	-
20	P	-
21	LG	-
22	Y	-
23	BR	-
24	GR	-
25	Y	-
27	V	-
28	WL	-
30	P	-
31	O	-
32	BR	-
34	SB	-
35	SHIELD	-
36	LO	-
37	LG	-
40	Y	-
41	GR	-
42	SB	-
46	LG	-
47	SB	-
48	SHIELD	-
49	B	-
50	RW	-
51	RL	-
52	B	-

7	V	-
8	SHIELD	-
9	BR/L	-
10	Y/G	-
11	Y/L	-
12	WL	-
13	L	-
14	BR	-
15	SB	-
16	BR	-
17	V	-
18	SB	-
19	R	-
20	P	-
21	LG	-
22	Y	-
23	BR	-
24	GR	-
25	Y	-
27	V	-
28	WL	-
30	P	-
31	O	-
32	BR	-
34	SB	-
35	SHIELD	-
36	LO	-
37	LG	-
40	Y	-
41	GR	-
42	SB	-
46	LG	-
47	SB	-
48	SHIELD	-
49	B	-
50	RW	-
51	RL	-
52	B	-

7	V	-
8	SHIELD	-
9	BR/L	-
10	Y/G	-
11	Y/L	-
12	WL	-
13	L	-
14	BR	-
15	SB	-
16	BR	-
17	V	-
18	SB	-
19	R	-
20	P	-
21	LG	-
22	Y	-
23	BR	-
24	GR	-
25	Y	-
27	V	-
28	WL	-
30	P	-
31	O	-
32	BR	-
34	SB	-
35	SHIELD	-
36	LO	-
37	LG	-
40	Y	-
41	GR	-
42	SB	-
46	LG	-
47	SB	-
48	SHIELD	-
49	B	-
50	RW	-
51	RL	-
52	B	-

7	V	-
8	SHIELD	-
9	BR/L	-
10	Y/G	-
11	Y/L	-
12	WL	-
13	L	-
14	BR	-
15	SB	-
16	BR	-
17	V	-
18	SB	-
19	R	-
20	P	-
21	LG	-
22	Y	-
23	BR	-
24	GR	-
25	Y	-
27	V	-
28	WL	-
30	P	-
31	O	-
32	BR	-
34	SB	-
35	SHIELD	-
36	LO	-
37	LG	-
40	Y	-
41	GR	-
42	SB	-
46	LG	-
47	SB	-
48	SHIELD	-
49	B	-
50	RW	-
51	RL	-
52	B	-

7	V	-
8	SHIELD	-
9	BR/L	-
10	Y/G	-
11	Y/L	-
12	WL	-
13	L	-
14	BR	-
15	SB	-
16	BR	-
17	V	-
18	SB	-
19	R	-
20	P	-
21	LG	-
22	Y	-
23	BR	-
24	GR	-
25	Y	-
27	V	-
28	WL	-
30	P	-
31	O	-
32	BR	-
34	SB	-
35	SHIELD	-
36	LO	-
37	LG	-
40	Y	-
41	GR	-
42	SB	-
46	LG	-
47	SB	-
48	SHIELD	-
49	B	-
50	RW	-
51	RL	-
52	B	-

7	V	-
8	SHIELD	-
9	BR/L	-
10	Y/G	-
11	Y/L	-
12	WL	-
13	L	-
14	BR	-
15	SB	-
16	BR	-
17	V	-
18	SB	-
19	R	-
20	P	-
21	LG	-
22	Y	-
23	BR	-
24	GR	-
25	Y	-
27	V	-
28	WL	-
30	P	-
31	O	-
32	BR	-
34	SB	-
35	SHIELD	-
36	LO	-
37	LG	-
40	Y	-
41	GR	-
42	SB	-
46	LG	-
47	SB	-
48	SHIELD	-
49	B	-
50	RW	-
51	RL	-
52	B	-


7	V	-
8	SHIELD	-
9	BR/L	

CHARGING SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

CHARGING SYSTEM

Connector No.	E16
Connector Name	ECM
Connector Type	RH24FB-RZ8-L-LH

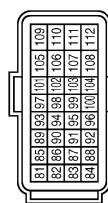

Terminal Color No.	Signal Name [Specification]
81 W	ACCELERATOR PEDAL POSITION SENSOR 1
82 O	ACCELERATOR PEDAL POSITION SENSOR 2
83 BR	SENSOR POWER SUPPLY
84 B	SENSOR GROUND
85 Y	ASG STEERING SWITCH
86 SB	EVAP CONTROL SYSTEM PRESSURE SENSOR
87 GR	SENSOR POWER SUPPLY
88 O	DATA LINK CONNECTOR
91 L	SENSOR POWER SUPPLY
92 BR	SENSOR GROUND
93 BR	IGNITION SWITCH
94 GR	ENGINE SPEED OUTPUT SIGNAL
95 Y	FUEL TANK TEMPERATURE SENSOR
96 GR	SENSOR GROUND
97 P	CAN COMMUNICATION LINE(CAN-H)
98 L	CAN COMMUNICATION LINE(CAN-H)
100 G	SENSOR GROUND
102 R	PIN SIGNAL
104 SB	SENSOR GROUND
105 V	POWER SUPPLY FOR ECM
106 SB	STOP LAMP SWITCH
107 B	ECM GROUND
108 B	EVAP CANISTER VENT CONTROL VALVE
109 W	ASD BRAKE SWITCH
110 G	ECM GROUND
111 B	ECM GROUND
112 B	ECM GROUND

Connector No.	E104
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-GS



Terminal Color No.	Signal Name [Specification]
1 Y	-
2 SB	-
3 L	-
4 R	-
5 L	-
6 P	-
7 L	-
8 BW	-
9 SB	-
10 GR	-
11 R	-
12 W	-
13 P	-
14 V	-
15 Y	-
16 L	-

Terminal Color No.	Signal Name [Specification]
2 B	-
48 L	-
49 SB	-
50 GR	-
51 LG	-
52 V	-
53 GR	-
54 BR	-
55 Y	-
56 WL	-
60 V	-
61 BR	-
62 O	-
63 L/O	-
64 SHIELD	-
66 W	-
67 BR	-
68 Y	-
69 SB	-
70 GR	-
71 SB	-
72 Y	-
73 L	-
74 W	-
75 BR	-
76 GR	-
77 O	-
78 Y	- (With navigation system)
79 V	- (With iPod without navigation system)
80 R	- (Without iPod and navigation system)
81 W	-
82 LG	-
83 O	-

Terminal Color No.	Signal Name [Specification]
13 P	-
14 V	-
15 Y	-
16 W	-


Terminal Color No.	Signal Name [Specification]
14 V	-
15 Y	-
16 W	-

Terminal Color No.	Signal Name [Specification]
15 Y	-
16 LG	-
17 GR	-
18 G	-

Terminal Color No.	Signal Name [Specification]
11 P	-
12 L	-

CHARGING SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

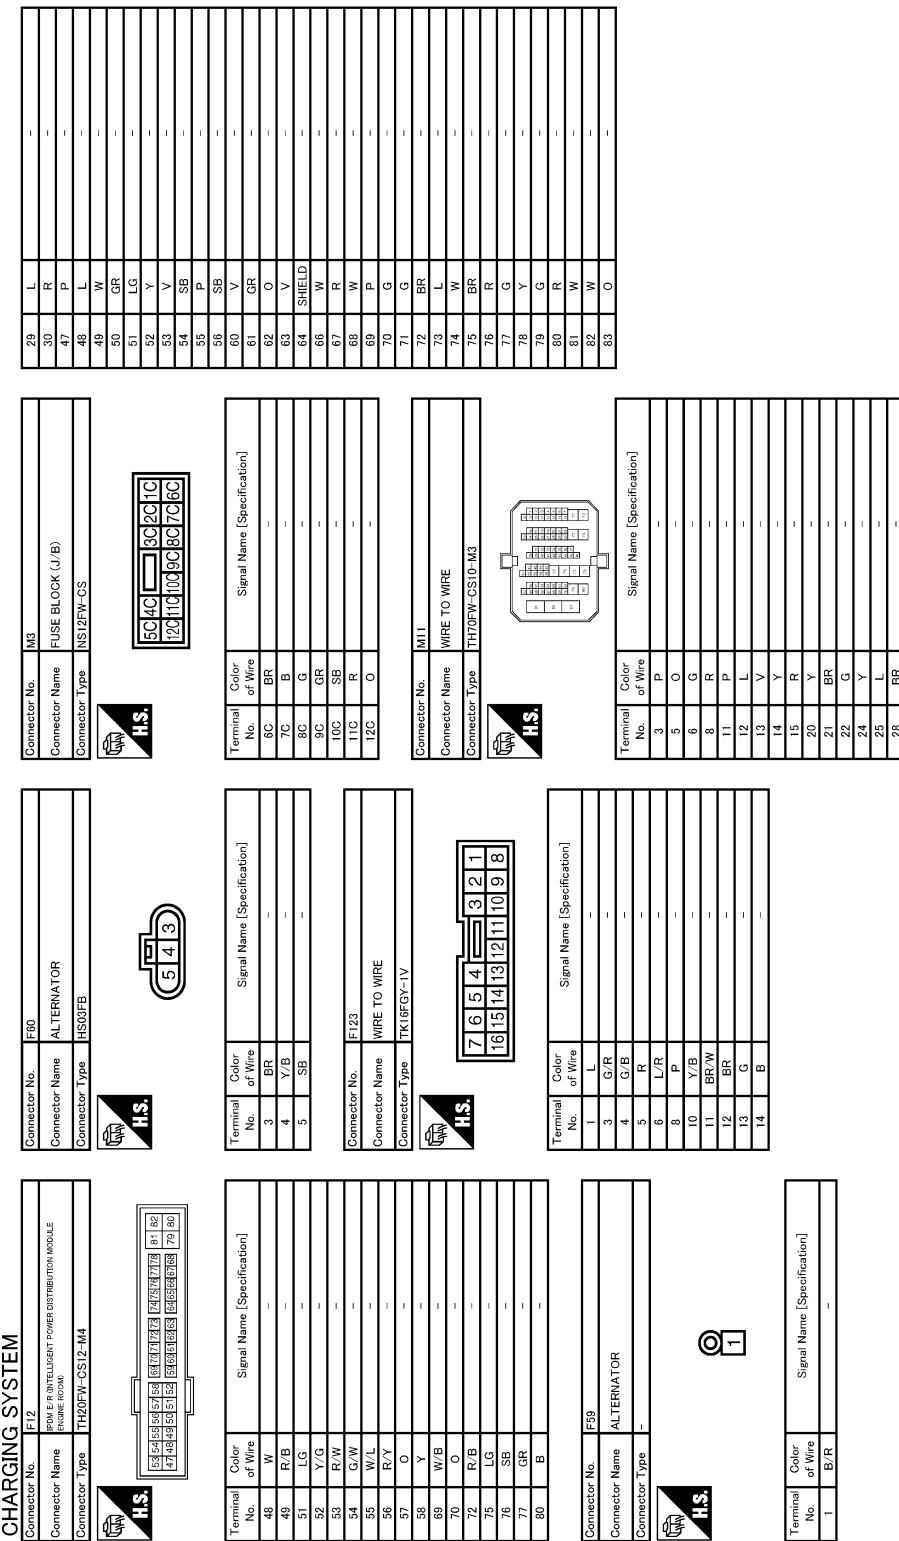


JCMWN0041GB

CHARGING SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


CHARGING SYSTEM

Connector No.	M64
Connector Name	COMBINATION METER
Connector Type	TH46FW-NH

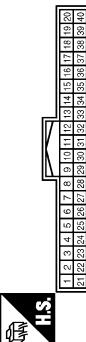

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	BAT
2	O	IGN
3	B	GROUND
4	B	GROUND
5	SB	ILLUMINATION CONTROL
6	SB	TRIP RESET SWITCH
7	W	SWILL POWER
8	O	METER CONTROL SW GND
9	L	ENTER SWITCH
10	R	SELECT SWITCH
11	Y	ILLUMINATION CONTROL SWITCH (With automatic drive positioner)
12	Y	ILLUMINATION CONTROL SWITCH (Without automatic drive positioner)
13	GR	ILLUMINATION CONTROL SWITCH (-)
14	BR	AIR BAG
15	BR	AMBIENT SENSOR
16	P	AMBIENT SENSOR POWER
17	Y	AMBIENT SENSOR GROUND
18	L	CAN-H
19	P	CAN-L
20	B	GROUND
21	W	FUEL LEVEL SENSOR GROUND
22	BR	CRG
23	G	PARKING BRAKE SWITCH
24	V	Brake Fluid Level Switch
25	R	Washer Level Switch
26	P	Vehicle Speed (Z-PULSE)
27	V	Vehicle Speed (G-PULSE)
28	LG	OFF / SPORTS
29	G	Fuel Level Sensor
30	SB	Seat Belt Buckle Switch (Driver Side)
31	R	Seat Belt Buckle Switch (Passenger Side)
32	LG	OD OFF / SPORTS
33	G	Fuel Level Sensor
34	SB	Seat Belt Buckle Switch (Driver Side)
35	R	Seat Belt Buckle Switch (Passenger Side)
36	G	SHIELD
37	Y	-
38	O	-
39	LG	-
40	G	-
41	SB	-
42	SB	-
43	LG	-
44	G	-
45	Y	-
46	LG	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8
7	8	9
8	9	10
9	10	11
10	11	12
11	12	13
12	13	14
13	14	15
14	15	16
15	16	17
16	17	18
17	18	19
18	19	20
19	20	21
20	21	22
21	22	23
22	23	24
23	24	25
24	25	26
25	26	27
26	27	28
27	28	29
28	29	30
29	30	31
30	31	32
31	32	33
32	33	34
33	34	35
34	35	36
35	36	37
36	37	38
37	38	39
38	39	40
39	40	41
40	41	42
41	42	43
42	43	44
43	44	45
44	45	46

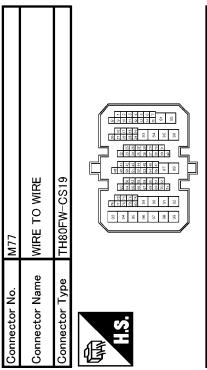

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	WIRE TO WIRE
2	O	Connector Type TH46FW-GS19
3	B	-
4	B	-
5	SB	-
6	SB	-
7	SB	-
8	SB	-
9	SB	-
10	SB	-
11	SB	-
12	SB	-
13	SB	-
14	SB	-
15	SB	-
16	SB	-
17	SB	-
18	SB	-
19	SB	-
20	SB	-
21	SB	-
22	SB	-
23	SB	-
24	SB	-
25	SB	-
26	SB	-
27	SB	-
28	SB	-
29	SB	-
30	SB	-
31	SB	-
32	SB	-
33	SB	-
34	SB	-
35	SB	-
36	SB	-
37	SB	-
38	SB	-
39	SB	-
40	SB	-
41	SB	-
42	SB	-
43	SB	-
44	SB	-
45	SB	-
46	SB	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	O	-
3	B	-
4	B	-
5	SB	-
6	SB	-
7	SB	-
8	SB	-
9	SB	-
10	SB	-
11	SB	-
12	SB	-
13	SB	-
14	SB	-
15	SB	-
16	SB	-
17	SB	-
18	SB	-
19	SB	-
20	SB	-
21	SB	-
22	SB	-
23	SB	-
24	SB	-
25	SB	-
26	SB	-
27	SB	-
28	SB	-
29	SB	-
30	SB	-
31	SB	-
32	SB	-
33	SB	-
34	SB	-
35	SB	-
36	SB	-
37	SB	-
38	SB	-
39	SB	-
40	SB	-
41	SB	-
42	SB	-
43	SB	-
44	SB	-
45	SB	-
46	SB	-
47	SB	-

CHG

JCMWN0042GB

CHARGING SYSTEM

<SYMPTOM DIAGNOSIS>

SYMPTOM DIAGNOSIS

CHARGING SYSTEM

Symptom Table

INFOID:000000006260556

Symptom	Reference
Discharged battery	Refer to CHG-3, "Work Flow" .
The charge warning lamp does not illuminate when the ignition switch is set to ON.	
The charge warning lamp does not turn OFF after the engine starts.	
The charging warning lamp turns ON when increasing the engine speed.	

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

FOR USA AND CANADA

FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006260557

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR USA AND CANADA : Precaution for Power Generation Voltage Variable Control System

INFOID:000000006260558

CAUTION:

For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Do not connect the electrical component or the ground wire directly to the battery terminal.

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006260559

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

PRECAUTIONS

< PRECAUTION >

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO : Precaution for Power Generation Voltage Variable Control System

INFOID:0000000006260560

CAUTION:

For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Do not connect the electrical component or the ground wire directly to the battery terminal.

PREPARATION


< PREPARATION >

PREPARATION

PREPARATION

Special Service Tools

INFOID:000000006260561

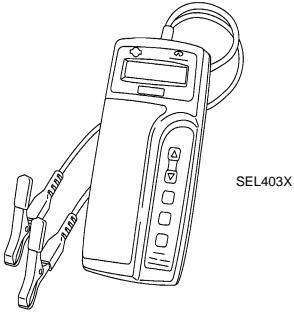Tool number (Kent-Moore No.) Tool name	Description
— (J-44373 Model MCR620) Starting/Charging System Tester	 SEL403X Tests starting and charging systems. For operating instructions, refer to Technical Service Bulletin.

Commercial Service Tools

INFOID:000000006260562

Tool name	Description
Power tool	 PIIB1407E Loosening bolts, nuts and screws

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

CHARGING SYSTEM PRELIMINARY INSPECTION

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE

CHARGING SYSTEM PRELIMINARY INSPECTION

Inspection Procedure

INFOID:000000006260563

1.CHECK BATTERY TERMINALS CONNECTION

Check if battery terminals are clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair battery terminals connection.

2.CHECK FUSE

Check for blown fuse.

Unit	Power source (Power supply terminals)	Fuse No.
Alternator	Battery ("S" terminal)	38
Combination meter	Ignition switch ON ("L" terminal)	4

Is the inspection result normal?

YES >> GO TO 3.

NO >> Be sure to eliminate the cause of malfunction before installing new fuse.

3.CHECK "E" TERMINAL CONNECTION

Check if "E" terminal (alternator ground harness) is clean and tight.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair "E" terminal connection.

4.CHECK DRIVE BELT TENSION

Check drive belt tension. Refer to [EM-17, "Checking"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair as needed.

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< PERIODIC MAINTENANCE >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

Inspection Procedure

INFOID:000000006260564

CAUTION:

When performing this inspection, always use a charged battery that has completed the battery inspection. (When the charging rate of the battery is low, the response speed of the voltage change will become slow. This can cause an incorrect inspection.)

1.CHECK ECM (CONSULT-III)

Perform ECM self-diagnosis with CONSULT-III. Refer to [EC-129, "CONSULT-III Function".](#)

Self-diagnostic results content

No malfunction detected>> GO TO 2.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

2.CHECK OPERATION OF POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

1. Connect CONSULT-III and start the engine.
2. The selector lever is in "P" or "N" position and all of the electric loads and A/C, etc. are turned OFF.
3. Select "ALTERNATOR DUTY" at "Active Test" of "ENGINE", and then check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 40.0 %.

"BATTERY VOLT"

2 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 40.0 % : 12 - 13.6 V

4. Check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 80.0%.

"BATTERY VOLT"

20 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 80.0 % : +0.5 V or more against the value of "BATTERY VOLT" monitor when DUTY value is 40.0 %

Is the measurement value within the specification?

YES >> INSPECTION END

NO >> GO TO 3.

3.CHECK IPDM E/R (CONSULT-III)

Perform IPDM E/R self-diagnosis with CONSULT-III. Refer to [PCS-12, "CONSULT-III Function \(IPDM E/R\)".](#)

Self-diagnostic results content

No malfunction detected>> GO TO 4.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

4.CHECK HARNESS BETWEEN ALTERNATOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect alternator connector and IPDM E/R connector.
3. Check continuity between alternator harness connector and IPDM E/R harness connector.

Alternator harness connector		IPDM E/R harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F60	5	F12	76	Existed

4. Check continuity between alternator harness connector and ground.

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< PERIODIC MAINTENANCE >

Alternator harness connector		Ground	Continuity
Connector	Terminal		
F60	5		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Repair harness or connector between IPDM E/R and alternator.

ALTERNATOR


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION ALTERNATOR

Exploded View

INFOID:000000006260565

REMOVAL

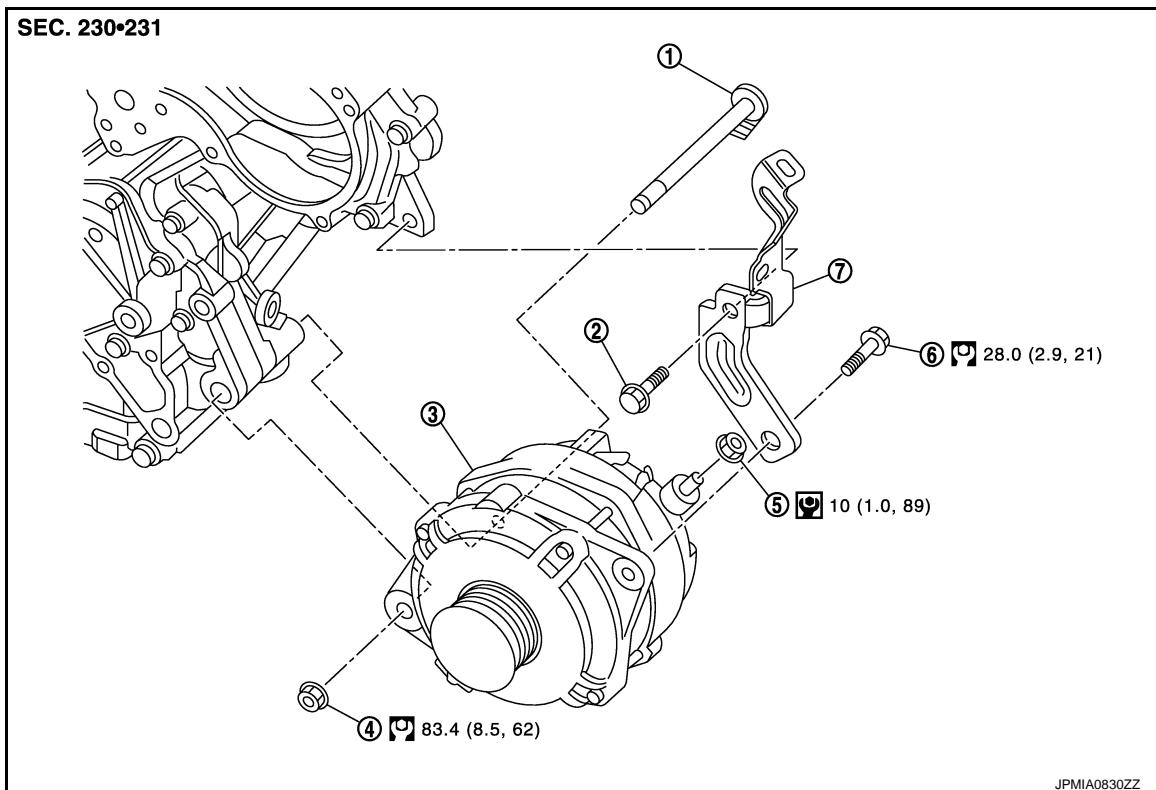

JPMIA0830ZZ

- 1. Alternator mounting bolt
- 2. Alternator stay mounting bolt
- 3. Alternator
- 4. Alternator mounting nut
- 5. "B" terminal nut
- 6. Alternator stay mounting bolt
- 7. Alternator bracket

Refer to [GI-4, "Components"](#) for symbols in the figure.


DISASSEMBLY

Type: A003TJ1791

CHG

ALTERNATOR

< REMOVAL AND INSTALLATION >

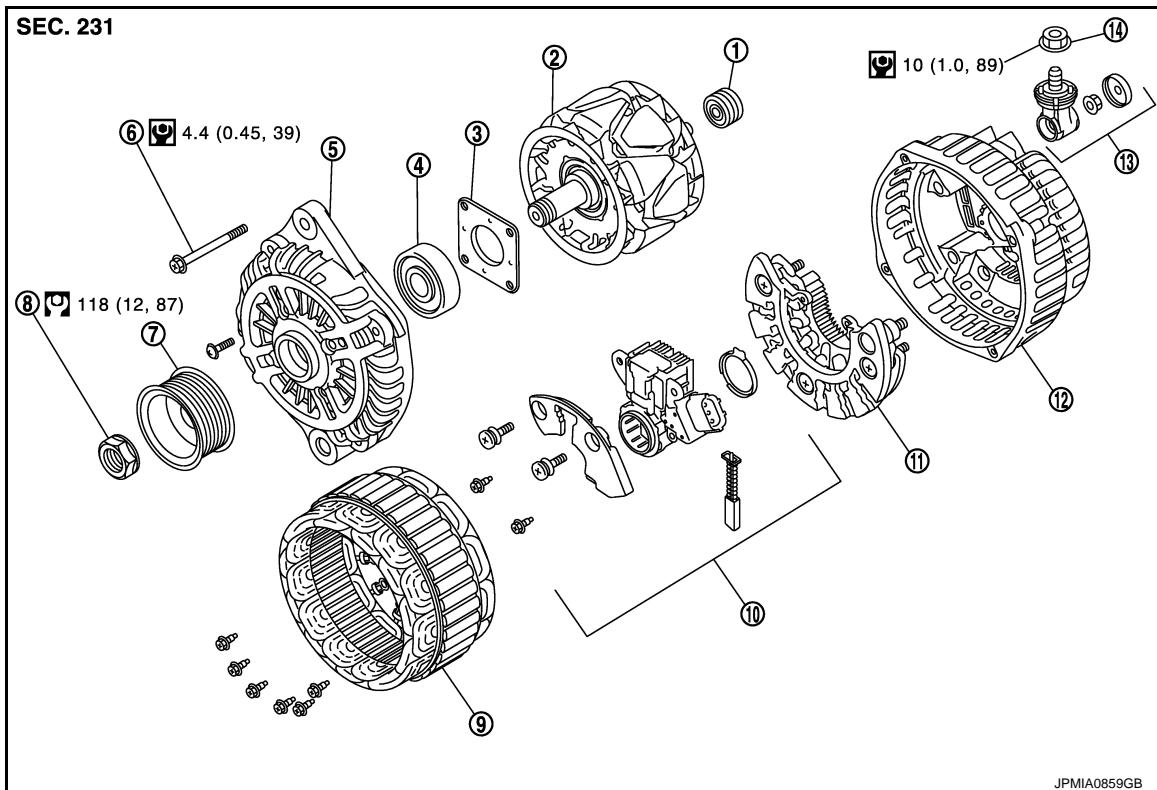

1. Rear bearing
2. Rotor assembly
3. Retainer
4. Front bearing
5. Front bracket assembly
6. Through bolt
7. Pulley
8. Pulley nut
9. Stator assembly
10. IC voltage regulator assembly
11. Diode assembly
12. Rear bracket assembly
13. Terminal set

Refer to [GI-4, "Components"](#) for symbols in the figure.

INFOID:0000000006260566

Removal and Installation

REMOVAL

1. Disconnect the negative battery terminal.
2. Remove engine cover.
3. Remove front wheel and tire (RH).
4. Remove splash guard (RH) Refer to [EXT-23, "FENDER PROTECTOR : Exploded View"](#).
5. Remove air cleaner and air duct assembly. Refer to [EM-31, "Removal and Installation"](#).
6. Remove drive belt. Refer to [EM-17, "Removal and Installation"](#).
7. Remove A/C compressor. Refer to [HA-37, "COMPRESSOR : Removal and Installation"](#).
8. Remove idler pulley.
9. Disconnect the oil pressure switch.
10. Disconnect the alternator harness connectors.
11. Remove the alternator bolt and nuts, using power tools.
12. Slide the alternator out and remove.

INSTALLATION


Installation is in the reverse order of removal.

CAUTION:

ALTERNATOR

< REMOVAL AND INSTALLATION >

- Temporarily tighten all of alternator bolt and nuts. And then tighten them in numerical order shown in the figure.

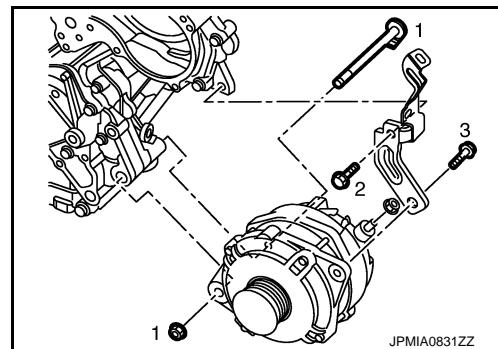

- Be sure to tighten "B" terminal nut carefully.
- Install alternator and check tension of belt. Refer to [EM-30, "Exploded View"](#).
- For this model, the power generation voltage variable control system that controls the power generation voltage of the alternator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the alternator, and then make sure that the system operates normally. Refer to [CHG-25, "Inspection Procedure"](#).

Inspection

INFOID:000000006260567

ALTERNATOR PULLEY INSPECTION

Perform the following.

- Make sure that alternator pulley does not rattle.
- Make sure that alternator pulley nut is tight.

A
B
C
D

E
F

G
H

I
J

K
L

CHG

N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

<SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Alternator

INFOID:0000000006260568

Type		A003TJ1791
		MITSUBISHI make
Nominal rating	[V - A]	12 – 130
Ground polarity		Negative
Minimum revolution under no-load (When 13.5 V is applied)	[rpm]	Less than 1,300
Hot output current (When 13.5 V is applied)	[A/rpm]	More than 61/1,500 More than 109/2,500 More than 129/5,000
Regulated output voltage	[V]	14.1 – 14.7*
Minimum length of brush	[mm (in)]	More than 5.00 (0.197)
Brush spring pressure	[N (g, oz)]	4.1 – 5.3 (418 – 541, 14.7 – 19.1)
Slip ring minimum outer diameter	[mm (in)]	More than 22.1 (0.870)
Rotor (Field coil) resistance	[Ω]	1.8 – 2.2

*: Adjustment range of power generation voltage variable control is 11.4 – 15.6 V.