

SECTION **FSU**  
FRONT SUSPENSION

A  
B  
C  
D  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**FSU**

CONTENTS

<b>PRECAUTION</b> .....	2	Disposal .....	12
<b>PRECAUTIONS</b> .....	2	<b>TRANSVERSE LINK</b> .....	13
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	2	Exploded View .....	13
Precaution for Procedure without Cowl Top Cover.....	2	Removal and Installation .....	13
Precautions for Suspension .....	2	<b>FRONT STABILIZER</b> .....	15
<b>PREPARATION</b> .....	3	Exploded View .....	15
<b>PREPARATION</b> .....	3	Removal and Installation .....	15
Special Service Tool .....	3	<b>STEERING KNUCKLE</b> .....	18
Commercial Service Tool .....	3	Exploded View .....	18
<b>SYMPTOM DIAGNOSIS</b> .....	5	Removal and Installation .....	18
<b>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING</b> .....	5	<b>UNIT REMOVAL AND INSTALLATION</b> .....	20
NVH Troubleshooting Chart .....	5	<b>FRONT SUSPENSION MEMBER</b> .....	20
<b>PERIODIC MAINTENANCE</b> .....	6	Exploded View .....	20
<b>FRONT SUSPENSION ASSEMBLY</b> .....	6	Removal and Installation .....	20
Inspection .....	6	<b>UNIT DISASSEMBLY AND ASSEMBLY</b> ...	21
<b>WHEEL ALIGNMENT</b> .....	7	<b>FRONT COIL SPRING AND STRUT</b> .....	21
Inspection .....	7	Exploded View .....	21
Adjustment .....	8	Disassembly and Assembly .....	21
<b>REMOVAL AND INSTALLATION</b> .....	10	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	25
<b>FRONT COIL SPRING AND STRUT</b> .....	10	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	25
Exploded View .....	10	Wheel Alignment (Unladen*1) .....	25
Removal and Installation .....	10	Ball Joint .....	25
		Wheelarch Height (Unladen*) .....	26

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011220116

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000011220117

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

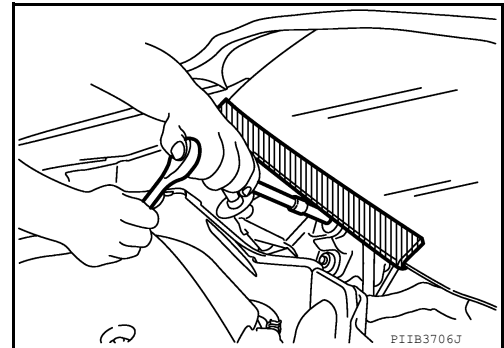

#### Precautions for Suspension

INFOID:000000011220118

- When installing rubber bushings, the final tightening must be carried out under unladen conditions with tires on ground. Spilled oil might shorten the life of rubber bushings. Be sure to wipe off any spilled oil.
- Unladen conditions mean that fuel, engine coolant and lubricants are full. Spare tire, jack, hand tools and mats are in designated positions.
- After servicing suspension parts, be sure to check wheel alignment.
- Self-lock nuts are not reusable. Always use new ones when installing. Since new self-lock nuts are pre-oiled, tighten as they are.

# PREPARATION

< PREPARATION >





## PREPARATION

### PREPARATION

#### Special Service Tool

INFOID:0000000011220119

The actual shape of the tools may differ from those illustrated here.

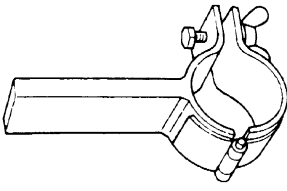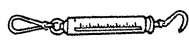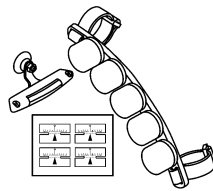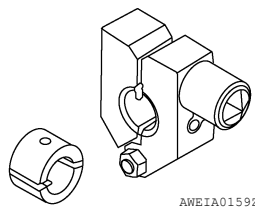Tool number (TechMate No.) Tool name		Description
ST35652000 ( — ) Strut attachment	 <p style="text-align: center; font-size: small;">ZZA0807D</p>	Securing strut outer tube in a vise while disassembling and assembling front coil spring and strut.
— (J-44372) Pull gauge	 <p style="text-align: center; font-size: small;">LST024</p>	Measuring ball joint swinging force
— (J-49286) Drift and Pull gauge	 <p style="text-align: center; font-size: small;">AWEIA01562Z</p>	Measuring drift and pull
— (J-49029) Strut rod clamp	 <p style="text-align: center; font-size: small;">AWEIA01592Z</p>	Securing strut rod while disassembling and assembling front coil spring and strut.

A  
B  
C  
D  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

FSU



#### Commercial Service Tool

INFOID:0000000011220120

Tool name	Description

# PREPARATION

## < PREPARATION >
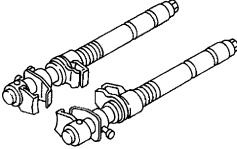
<p>Spring compressor</p>  <p>S-NT717</p>	<p>Removing and installing coil spring</p>
<p>Power tool</p>  <p>PIIB1407E</p>	<p>Loosening nuts, screws and bolts</p>

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:0000000011220121

Use chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Symptom		Possible cause and SUSPECTED PARTS	Reference page															
			FSU-10, FSU-13, FSU-15, FSU-18, FSU-20	FSU-6	—	—	—	FSU-10, FSU-13, FSU-15, FSU-18, FSU-20	FSU-6	—	DLN-87	DLN-102	FAX-5	WT-63	WT-63	FAX-5	BR-6	ST-29
FRONT SUSPENSION	Noise	Improper installation, looseness	x	x	x	x	x	x			x	x	x	x	x	x	x	x
	Shake	Strut deformation, damage or deflection	x	x	x	x		x			x		x	x	x	x	x	x
	Vibration	Bushing or mounting deterioration	x	x	x	x	x				x		x					
	Shimmy	Parts interference	x	x	x	x				x				x	x		x	x
	Shudder	Spring fatigue	x	x	x									x	x		x	x
	Poor quality ride or handling	Suspension looseness	x	x	x	x			x									
		Incorrect wheel alignment																
		Stabilizer fatigue																
		PROPELLER SHAFT (AWD)																
		DIFFERENTIAL (AWD)																
		FRONT AXLE																
		TIRE																
		WHEEL																
		DRIVE SHAFT																
		BRAKE																
		STEERING																

x: Applicable

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

FSU

# FRONT SUSPENSION ASSEMBLY

< PERIODIC MAINTENANCE >

## PERIODIC MAINTENANCE

### FRONT SUSPENSION ASSEMBLY

#### Inspection

INFOID:000000011220122

#### ON-VEHICLE SERVICE


- Check the suspension parts for excessive play, cracks, wear or damage. Shake each front wheel to check for excessive play.
- Retighten all nuts and bolts to the specified torque.
- Make sure that each cotter pin is installed.
- Check the wheelarch height. Refer to [FSU-26, "Wheelarch Height \(Unladen\\*\)"](#).

#### INSPECTION

Check the conditions (looseness, backlash) of each component. Verify that component conditions (wear, damage) are normal.

#### FRONT COIL SPRING AND STRUT

Check for oil leakage and damage. Replace parts if necessary.

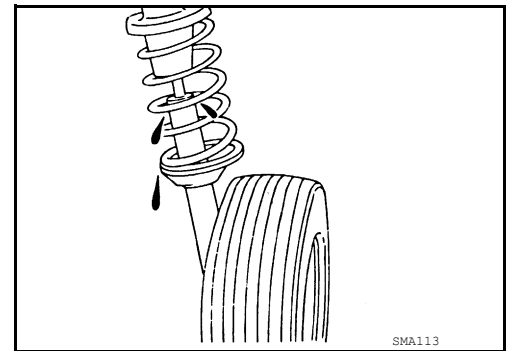

#### TRANSVERSE LINK

- Check the transverse link for damage, cracks, deformation and replace if necessary.
- Check the rubber bushings for damage, cracks and deformation. Replace transverse link if necessary.
- Check the suspension ball joint for grease leaks and the ball joint dust cover for cracks or other damage.
- Check the ball joint. Replace the suspension arm if the ball stud is worn or the joint is hard to swing.

#### FRONT STABILIZER

- Check the front stabilizer and clamps for any deformation, cracks or damage and replace if necessary.
- Check the rubber bushings for deterioration or cracks and replace if necessary.

#### STEERING KNUCKLE

Check the steering knuckle for any deformation, cracks, or other damage and replace if necessary.

# WHEEL ALIGNMENT

< PERIODIC MAINTENANCE >

## WHEEL ALIGNMENT

### Inspection

INFOID:000000011550456

### PRELIMINARY INSPECTION

#### **WARNING:**

**Always adjust wheel alignment with vehicle on a flat surface.**

#### **NOTE:**

If wheel alignment is out of specification, inspect and replace any damaged or worn suspension parts before making any adjustments.

Check the following:

- Check and adjust wheel alignment with vehicle under unladen conditions. "Unladen conditions" means that fuel, engine coolant, and lubricants are full; spare tire, jack, hand tools and mats are in designated positions.
- Check tires for incorrect air pressure and excessive wear. Refer to [WT-74, "Tire Air Pressure"](#).
- Check wheels for deformation, cracks, and other damage. Remove wheel and check wheel runout. Refer to [WT-64, "Inspection"](#).
- Check wheel bearing axial end play. Refer to [FAX-6, "Inspection"](#).
- Check struts for leaks or damage.
- Check each mounting point of suspension components for any excessive looseness or damage.
- Check each link, arm, and suspension member for any damage.
- Check wheelarch height in unladen conditions. Refer to [FSU-26, "Wheelarch Height \(Unladen\\*\)"](#).

### GENERAL INFORMATION AND RECOMMENDATIONS

1. A four-wheel thrust alignment should be performed.
  - This type of alignment is recommended for any NISSAN/INFINITI vehicle.
  - The four-wheel "thrust" process helps ensure that the vehicle is properly aligned and the steering wheel is centered.
  - The alignment machine itself should be capable of accepting any NISSAN/INFINITI vehicle.
  - The alignment machine should be checked to ensure that it is level.
2. Make sure the machine is properly calibrated.
  - Your alignment equipment should be regularly calibrated in order to give correct information.
  - Check with the manufacturer of your specific alignment machine for their recommended Service/Calibration Schedule.

### ALIGNMENT PROCESS

#### **CAUTION:**

**If the vehicle is equipped with the Intelligent Cruise Control (ICC) system and the rear toe has been adjusted during a wheel alignment, the ICC sensor must be aligned. Refer to [CCS-76, "ICC Sensor Adjustment"](#).**

#### **IMPORTANT:**

Use only the alignment specifications listed in this Service Manual. Refer to [FSU-25, "Wheel Alignment \(Unladen\\*1\)"](#).

1. When displaying the alignment settings, many alignment machines use "indicators": (Green/red, plus or minus, Go/No Go.) **Do not use these indicators.**
  - The alignment specifications programmed into your alignment machine that operate these indicators may not be correct.
  - This may result in an ERROR.
2. Most camera-type alignment machines are equipped with both a "Rolling Compensation" method and an optional "Jacking Compensation" method to compensate the alignment targets or head units. "Rolling Compensation" is the preferred method.
  - If using the "Rolling Compensation" method, after installing the alignment targets or head units, push or pull on the rear wheel to move the vehicle. **Do not push or pull on the vehicle body.**
  - If using the "Jacking Compensation" method, after installing the alignment targets or head units, raise the vehicle and rotate the wheels 1/2 turn both ways.

**NOTE:**

  - Do not use the "Rolling Compensation" method if you are using sensor-type alignment equipment.
  - Follow all instructions for the alignment machine you are using for more information.

### CAMBER, CASTER AND KINGPIN INCLINATION ANGLES INSPECTION

#### **CAUTION:**

# WHEEL ALIGNMENT

## < PERIODIC MAINTENANCE >

**Camber, caster, kingpin inclination angles cannot be adjusted.**

Before inspection, set the front wheels onto a turning radius gauge. Set the rear wheels onto a pad that has the same height so the vehicle will remain horizontal.


### TOTAL TOE-IN INSPECTION

Measure the total toe-in using the following procedure:

**WARNING:**

- Always perform the following procedure on a flat surface.
- Make sure that no person is in front of vehicle before pushing it.

1. Bounce the front of vehicle up and down to stabilize the vehicle height (posture).
2. Push on the rear wheel to move the vehicle straight ahead about 5 m (16 ft).
3. Put a mark on the base line of the tread (rear side) of both tires at the same height of hub center.

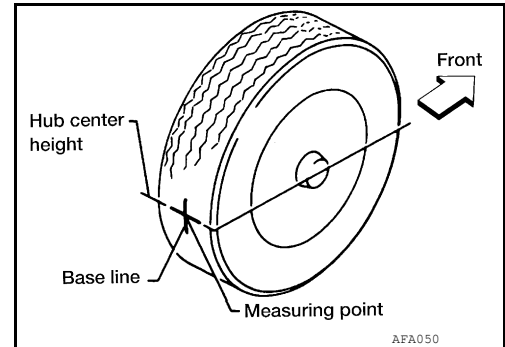


4. Measure the distance (A) from the rear side.
5. Push on the rear wheel to move the vehicle slowly ahead and to rotate the wheels 180 degrees (1/2 turn).

**CAUTION:**

If the wheels have rotated more than 180 degrees (1/2 turn), try the above procedure again from the beginning. Do not push vehicle backward.

6. Measure the distance (B) from the front side.

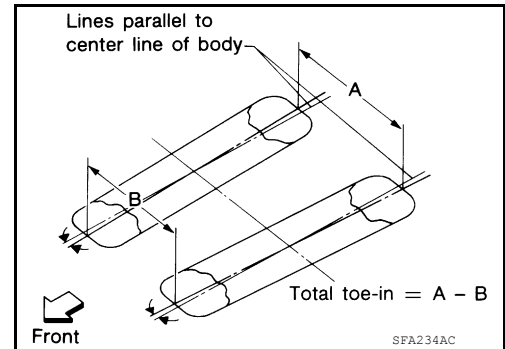

7. Use the formula below to calculate total toe-in.

**Total toe-in formula** :  $A - B$

**Total toe-in specification** : Refer to [FSU-25, "Wheel Alignment \(Unladen\\*1\)"](#).

- If the total toe-in is outside the specification, adjust the total toe-in. Refer to [FSU-8, "Adjustment"](#).

## Adjustment

INFOID:000000011550457

### TOE-IN ADJUSTMENT

1. Loosen the inner socket lock nut (A).

**CAUTION:**

To prevent damage, hold outer socket (1) across flats using suitable tool while loosening inner socket lock nut.

2. Adjust the toe using the inner socket.


**CAUTION:**

Always evenly adjust toe using LH and RH inner sockets alternately and adjust the total toe-in to the standard.

**Total toe-in** : Refer to [FSU-25, "Wheel Alignment \(Unladen\\*1\)"](#).

3. Tighten the inner socket lock nut. Refer to [ST-34, "Exploded View"](#).

**CAUTION:**

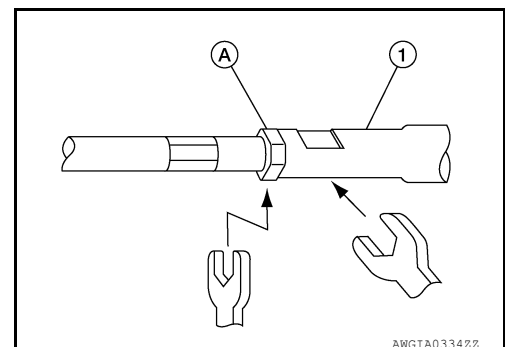



# WHEEL ALIGNMENT

## < PERIODIC MAINTENANCE >

---

- To prevent damage, hold outer socket across flats using suitable tool while tightening inner socket lock nut.
  - Inspect to make sure no boot deformation has occurred during toe-in adjustment. Adjust boot as necessary.
  - If the vehicle is equipped with the Intelligent Cruise Control (ICC) system and the rear toe has been adjusted during a wheel alignment, the ICC sensor must be aligned. Refer to [CCS-76, "ICC Sensor Adjustment"](#).
4. After toe-in adjustment, adjust neutral position of steering angle sensor. Refer to [BRC-64, "Work Procedure"](#).

A

B

C

D

FSU

F

G

H

I

J

K

L

M

N

O

P

# FRONT COIL SPRING AND STRUT


< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### FRONT COIL SPRING AND STRUT

Exploded View

INFOID:000000011220123

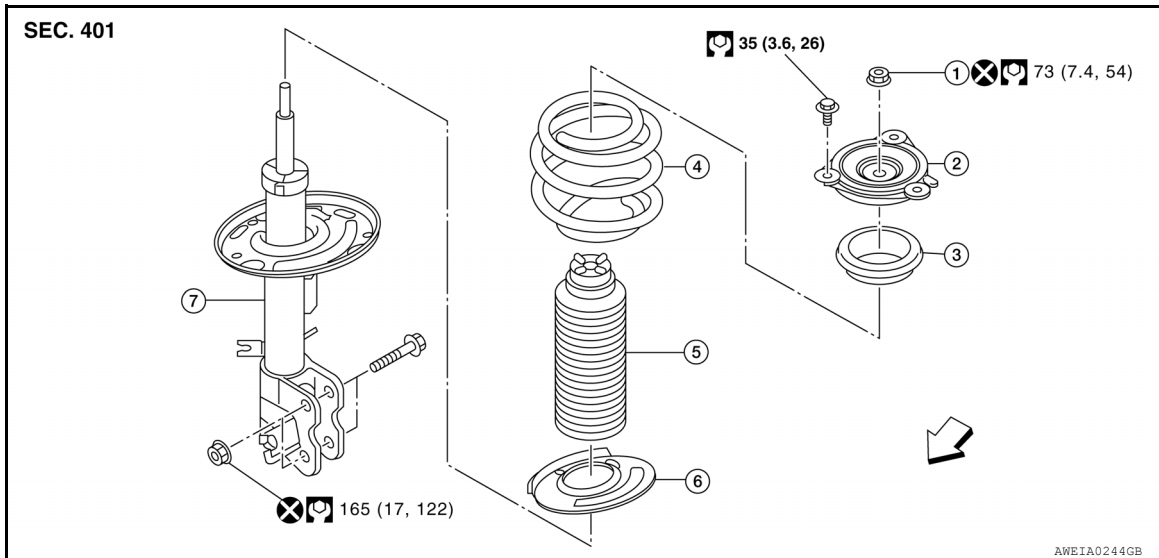

- |                        |                          |                        |
|------------------------|--------------------------|------------------------|
| 1. Piston rod lock nut | 2. Strut mount insulator | 3. Strut mount bearing |
| 4. Front coil spring   | 5. Bound bumper          | 6. Lower rubber seat   |
| 7. Strut               | ⇐ Front                  |                        |

## Removal and Installation


INFOID:000000011220124

### REMOVAL

1. Remove strut bolt access panel from cowl top.
2. Remove strut bolt grommet from cowl top extension.
3. Remove strut mount insulator bolts using power tool.
4. Remove wheel and tire using power tool. Refer to [WT-68, "Removal and Installation"](#).
5. Remove bolt (1) and separate front wheel sensor from steering knuckle. Refer to [BRC-137, "FRONT WHEEL SENSOR : Exploded View"](#).

#### CAUTION:

- Failure to separate front wheel sensor from steering knuckle may result in damage to front wheel sensor.
- Pull out front wheel sensor being careful to turn it as little as possible. Do not pull on wheel sensor harness.

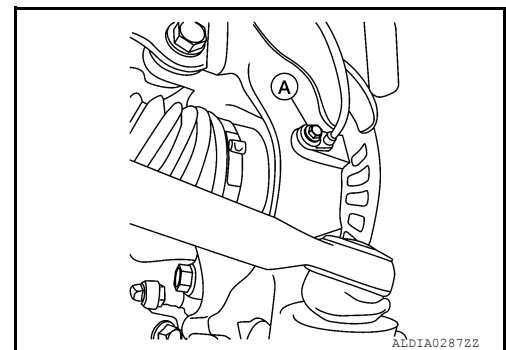


6. Separate front wheel sensor harness from front coil spring and strut.


# FRONT COIL SPRING AND STRUT

## < REMOVAL AND INSTALLATION >

7. Remove brake hose lock plate (A).

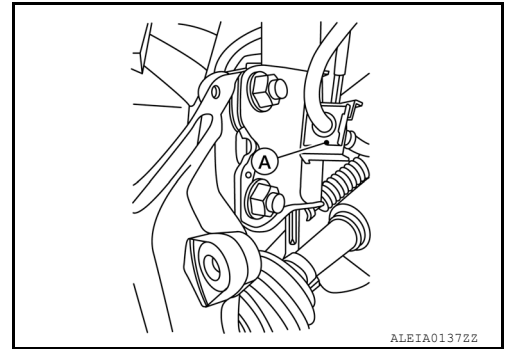

8. Remove stabilizer connecting rod nut (A) from front coil spring and strut. Position stabilizer connecting rod aside. Refer to [FSU-15, "Exploded View"](#).

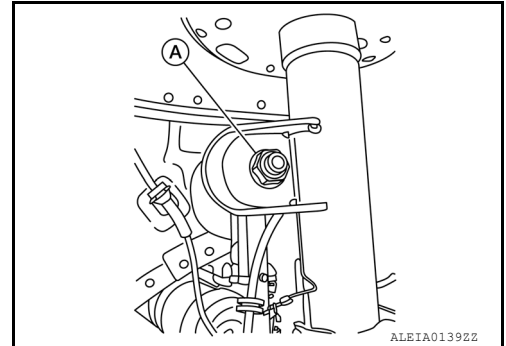

9. Remove lower strut nuts and bolts using power tool.

10. Remove front coil spring and strut.

## INSPECTION AFTER REMOVAL

### Strut

Check the following items, and replace the parts if necessary.

- Strut for deformation, cracks or damage
- Piston rod for damage, uneven wear or distortion
- Oil leakage

### Strut Mount Insulator, Strut Mount Bearing, and Rubber Parts Inspection

Check strut mount insulator and strut mount bearing for cracks. Check rubber parts for wear. Replace parts if necessary.

### Front Coil Spring

Check front coil spring for cracks, wear, or damage. Replace front coil spring if necessary.

## INSTALLATION


Installation is in reverse order of removal.

### **CAUTION:**

**Do not reuse lower strut nuts.**

- Be sure tab (A) on strut mount insulator is positioned as shown.

⇐ : Front

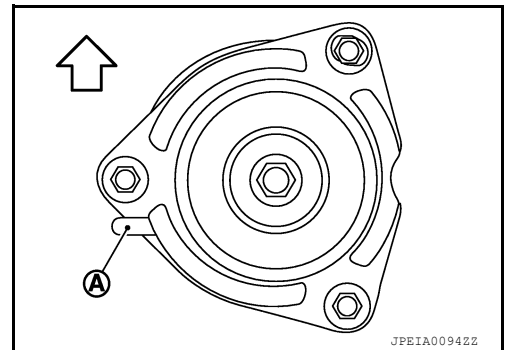


# FRONT COIL SPRING AND STRUT

## < REMOVAL AND INSTALLATION >

- Be sure lower strut nuts (A) are facing front of vehicle.

← : Front

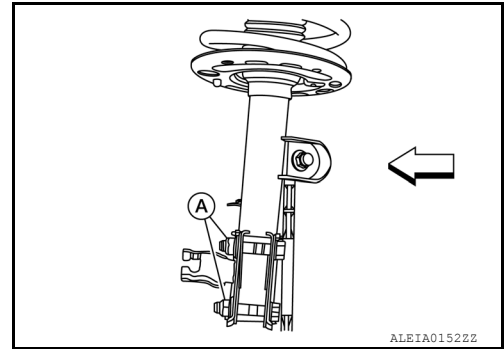

- Check wheel alignment. Refer to [FSU-7, "Inspection"](#).
- Adjust neutral position of steering angle sensor. Refer to [BRC-64, "Work Procedure"](#).
- After replacing the strut, follow disposal procedure to discard old strut. Refer to [FSU-12, "Disposal"](#).

## Disposal

INFOID:000000011220125


1. Set strut horizontally with piston rod fully extended.
2. Drill a 2 – 3 mm (0.08 – 0.12 in) hole at position (●) from top as shown to release gas gradually.

### CAUTION:

- Wear eye protection (safety glasses).
- Wear gloves.
- Be careful with metal chips or oil blown out by compressed gas.

### NOTE:

- Drill vertically in this direction (←) directly to outer tube avoiding brackets.
- The gas is clear, colorless, odorless, and harmless.

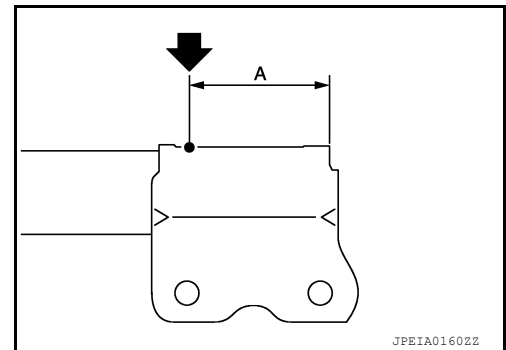

(A) : 20 – 30 mm (0.79 – 1.18 in)

3. Position drilled hole downward and drain oil by moving piston rod several times.

### CAUTION:

Dispose of drained oil according to the law and local regulations.


# TRANSVERSE LINK

< REMOVAL AND INSTALLATION >

## TRANSVERSE LINK

Exploded View

INFOID:000000011220126

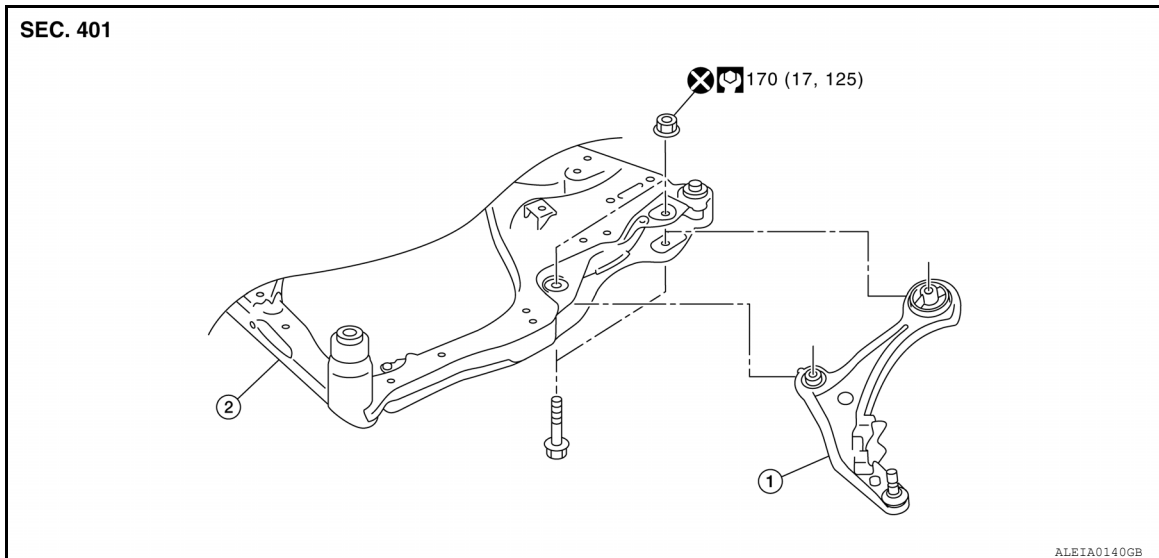

1. Transverse link

2. Front suspension member

## Removal and Installation

INFOID:000000011220127

### REMOVAL

1. Remove steering knuckle with wheel hub and bearing. Refer to [FSU-18, "Removal and Installation"](#).
2. Remove transverse link nuts and bolts from suspension member.
3. Remove transverse link from suspension member.

### INSPECTION AFTER REMOVAL

#### Ball Joint Inspection

Manually move ball joint to confirm it moves smoothly with no binding.


#### Swinging Torque Inspection

1. Move ball joint at least ten times by hand to check for smooth movement.
2. Hook Tool (A) on ball joint at pinch bolt location. Confirm measurement value is within specifications when ball joint begins moving.

**Tool number** : - (J-44372)

**Swinging torque** : Refer to [FSU-25, "Ball Joint"](#).

- If swinging torque exceeds standard range, replace transverse link.

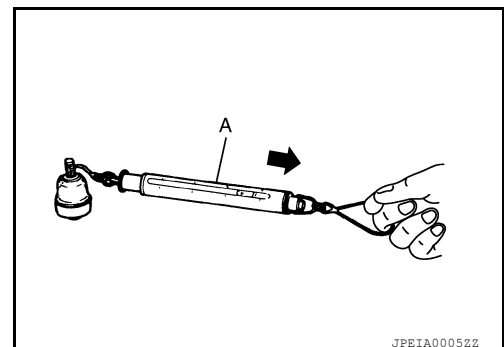

#### Rotating Torque Inspection

1. Move ball joint at least ten times by hand to check for smooth movement.
2. Confirm measurement value is within specifications when ball joint begins rotating.

**Rotating torque** : Refer to [FSU-25, "Ball Joint"](#).

- If rotating torque exceeds standard range, replace transverse link.

#### Axial End Play Inspection

1. Move ball joint at least ten times by hand to check for smooth movement.

A

B

C

D

FSU

F

G

H

I

J

K

L

M

N

O

P

## TRANSVERSE LINK

### < REMOVAL AND INSTALLATION >

---

2. Move tip of ball joint in axial direction to check for looseness.

**Axial end play** : Refer to [FSU-25, "Ball Joint"](#).

- If axial end play exceeds standard value, replace transverse link.

### INSTALLATION

Installation is in reverse order of removal.

#### **CAUTION:**

- **Do not reuse transverse link nuts at front suspension member.**
- **Do not reuse steering knuckle lower nut.**
- Perform final tightening of bolts and nuts at front suspension member under unladen conditions with tires on level ground.
- Check wheel alignment. Refer to [FSU-7, "Inspection"](#).
- Adjust neutral position of steering angle sensor. Refer to [BRC-64, "Work Procedure"](#).


# FRONT STABILIZER

< REMOVAL AND INSTALLATION >

## FRONT STABILIZER

### Exploded View

INFOID:0000000011220128

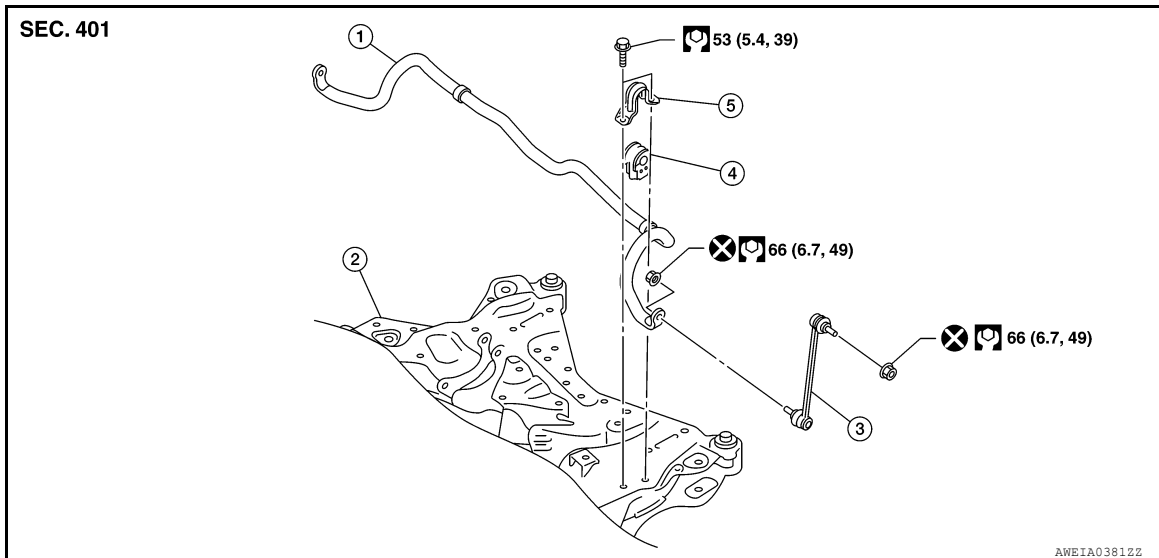

1. Stabilizer
2. Front suspension member
3. Stabilizer connecting rod
4. Stabilizer bushing
5. Stabilizer clamp

### Removal and Installation


INFOID:0000000011220129

#### REMOVAL

1. Remove front wheels and tires using power tool. Refer to [WT-68, "Removal and Installation"](#).
2. For AWD vehicles, remove heat insulator.
3. For AWD vehicles, remove rear propeller shaft. Refer to [DLN-89, "Removal and Installation"](#).
4. Remove cotter pin from outer socket (LH).
5. Loosen outer socket nut (LH) and separate outer socket (LH) from steering knuckle using suitable tool.  
**CAUTION:**  
Leave outer socket nut half threaded on outer socket to prevent damage to threads and to prevent suitable tool from coming off suddenly.
6. Remove outer socket nut (LH) and separate outer socket (LH) from steering knuckle.
7. Remove front exhaust tube. Refer to [EX-5, "Exploded View"](#).
8. For FWD vehicles, remove engine rear mount bracket. Refer to [EM-104, "FWD : Exploded View"](#).
9. Remove bolt (A) and separate steering intermediate shaft (1) from steering gear (2).

#### **CAUTION:**

With steering linkage disconnected, spiral cable may snap by turning steering wheel beyond the limited number of turns. Secure steering wheel during removal of stabilizer.

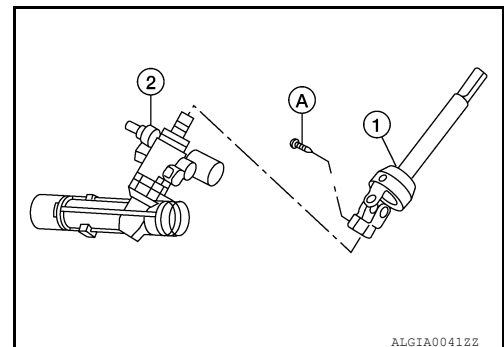


10. Remove steering gear heat shield.
11. Remove steering gear bolts. Refer to [ST-42, "Exploded View"](#).
12. Position steering gear forward.


# FRONT STABILIZER

## < REMOVAL AND INSTALLATION >


13. Remove stabilizer connecting rod upper nuts (A) from front coil spring and struts (LH/RH).

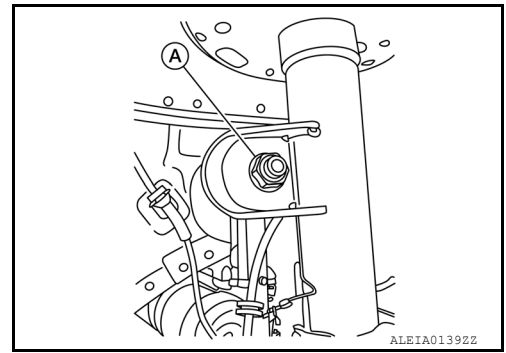

14. Remove stabilizer connecting rod lower nuts (A) from stabilizer, and remove stabilizer connecting rods (LH/RH).

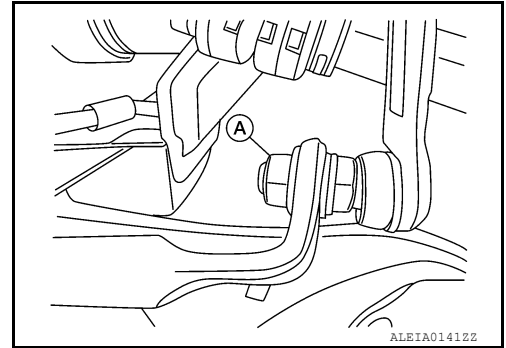

15. Remove bolts (←) from stabilizer clamps, and then remove stabilizer clamps and stabilizer bushings from front suspension member.

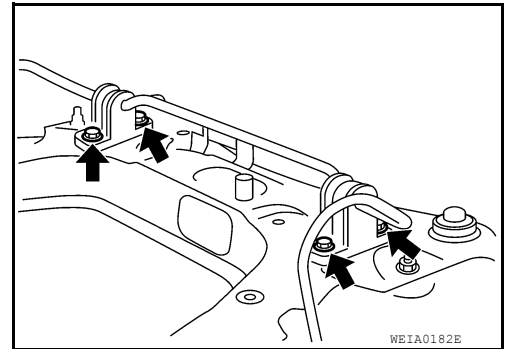

16. Remove stabilizer from (LH) side of vehicle.

## INSTALLATION


Installation is in reverse order of removal.

### CAUTION:

With steering linkage disconnected, spiral cable may snap by turning steering wheel beyond the limited number of turns. Secure steering wheel during installation of steering gear.

### NOTE:

Align the slit on steering intermediate shaft with projection on steering gear. Connect surface (A) to surface (B).

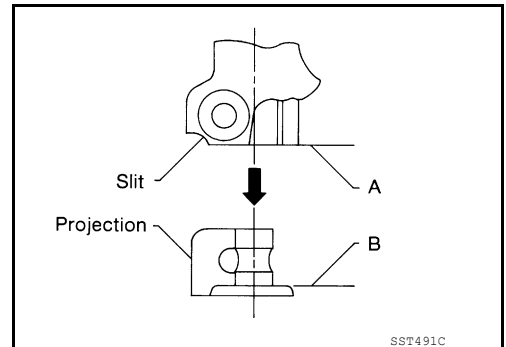


### CAUTION:



# FRONT STABILIZER

## < REMOVAL AND INSTALLATION >


When connecting steering intermediate shaft (1) to steering gear (2), first finger-tighten joint retaining bolt (A) then tighten to specification. The joint retaining bolt is directional. Refer to [ST-32. "Exploded View"](#).

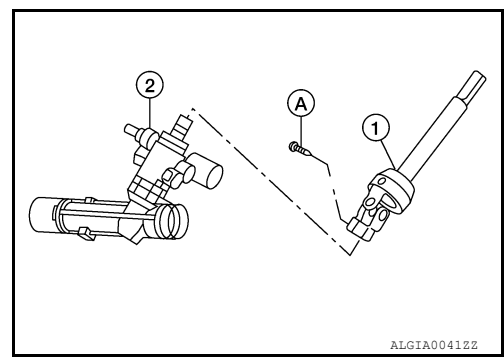

### WARNING:

After torquing outer socket nut, be sure to install cotter pin through outer socket stud hole and bend cotter pin around outer socket stud.

- Install stabilizer clamp so that notch (A) is facing front of vehicle (←).
- Install stabilizer bushing so that slit (B) is facing front of vehicle (←).

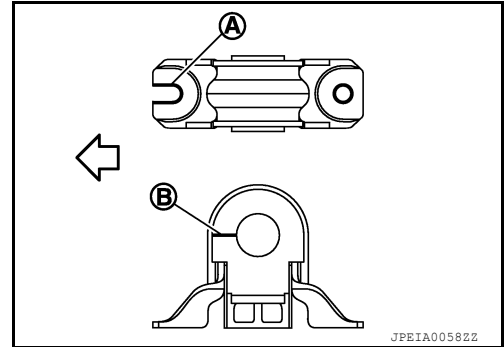

- Check wheel alignment. Refer to [FSU-7. "Inspection"](#).
- Adjust neutral position of steering angle sensor. Refer to [BRC-64. "Work Procedure"](#).

A  
B  
C  
D  
FSU  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# STEERING KNUCKLE

< REMOVAL AND INSTALLATION >

## STEERING KNUCKLE

Exploded View

INFOID:000000011220130

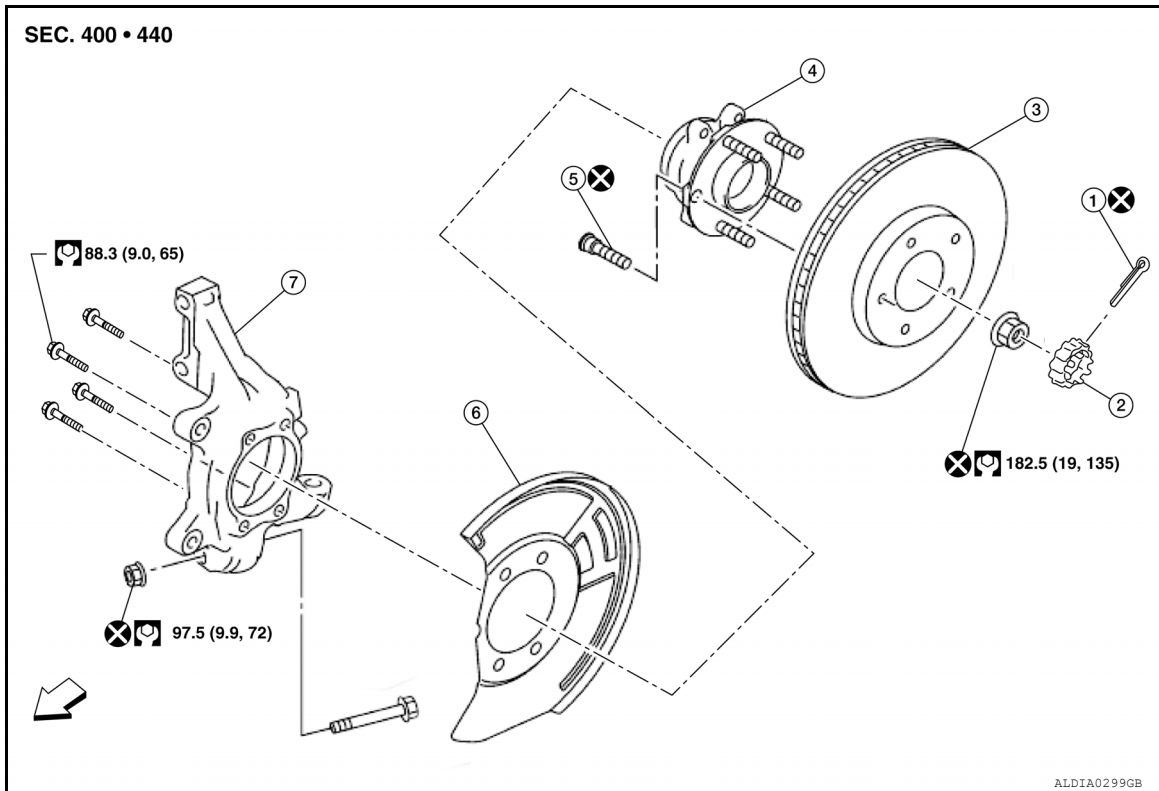

- |                          |                 |                     |
|--------------------------|-----------------|---------------------|
| 1. Cotter pin            | 2. Nut retainer | 3. Disc brake rotor |
| 4. Wheel hub and bearing | 5. Wheel stud   | 6. Splash guard     |
| 7. Steering knuckle      | ↔ Front         |                     |

## Removal and Installation

INFOID:000000011220131

### REMOVAL

1. Remove front wheel hub and bearing. Refer to [FAX-8. "Removal and Installation"](#).
2. Remove cotter pin from outer socket stud.
3. Loosen outer socket nut and separate outer socket from steering knuckle using suitable tool.  
**CAUTION:**  
**Leave outer socket nut half threaded on outer socket to prevent damage to threads and to prevent suitable tool from coming off suddenly.**
4. Remove outer socket nut and separate outer socket from steering knuckle.
5. Remove steering knuckle lower pinch bolt and separate transverse link from steering knuckle.
6. Remove lower strut nuts and bolts and then remove steering knuckle. Refer to [FSU-10. "Exploded View"](#).

### INSPECTION AFTER REMOVAL

Check for deformity, cracks and damage on each part. Replace if necessary.

### INSTALLATION

Installation is in reverse order of removal.

#### **CAUTION:**

- Do not reuse lower strut nuts.
- Do not reuse wheel hub lock nut.
- Do not reuse cotter pin.
- Do not reuse steering knuckle lower nut.

# STEERING KNUCKLE

## < REMOVAL AND INSTALLATION >

---

- Check wheel alignment. Refer to [FSU-7, "Inspection"](#).
- Adjust neutral position of the steering angle sensor. Refer to [BRC-64, "Work Procedure"](#).

A

B

C

D

FSU

F

G

H

I

J

K

L

M

N

O

P

# FRONT SUSPENSION MEMBER


< UNIT REMOVAL AND INSTALLATION >

## UNIT REMOVAL AND INSTALLATION

### FRONT SUSPENSION MEMBER

Exploded View

INFOID:0000000011220132

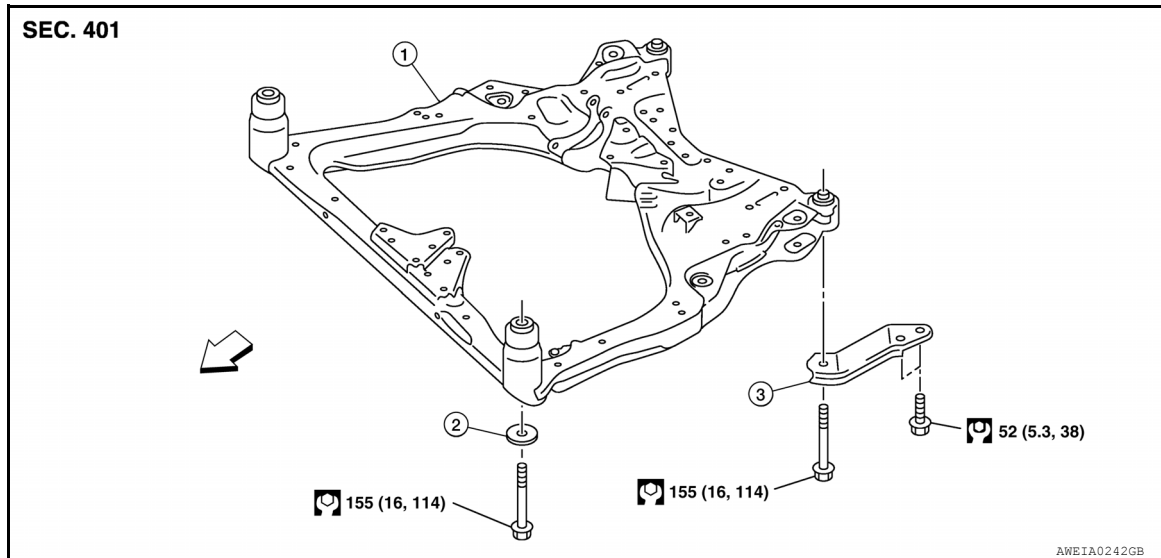

1. Front suspension member

2. Rebound stopper

3. Front suspension member stay

⇐ Front

## Removal and Installation

INFOID:0000000011220133

### REMOVAL

1. Remove engine and transmission with front suspension member. Lift engine and transmission off suspension member. Refer to [EM-104, "FWD : Removal and Installation"](#) (FWD) or [EM-109, "AWD : Removal and Installation"](#) (AWD).

#### NOTE:

Engine, transmission and suspension member must be removed as an assembly.

2. If necessary, remove steering knuckles. Refer to [FSU-18, "Exploded View"](#).
3. If necessary, remove transverse links. Refer to [FSU-13, "Exploded View"](#).
4. If necessary, remove stabilizer. Refer to [FSU-15, "Exploded View"](#).
5. If necessary, remove steering gear and hydraulic lines. Refer to [ST-42, "Exploded View"](#).

### INSPECTION AFTER REMOVAL

Check front suspension member for significant deformation, cracks, or damages. Replace it if necessary.

### INSTALLATION

Installation is in reverse order of removal.

- After installation, perform final tightening of each part under unladen conditions with tires on level ground.
- Check wheel alignment. Refer to [FSU-7, "Inspection"](#).
- Adjust neutral position of the steering angle sensor. Refer to [BRC-64, "Work Procedure"](#).

# FRONT COIL SPRING AND STRUT


< UNIT DISASSEMBLY AND ASSEMBLY >

## UNIT DISASSEMBLY AND ASSEMBLY

### FRONT COIL SPRING AND STRUT

Exploded View

INFOID:0000000011220135

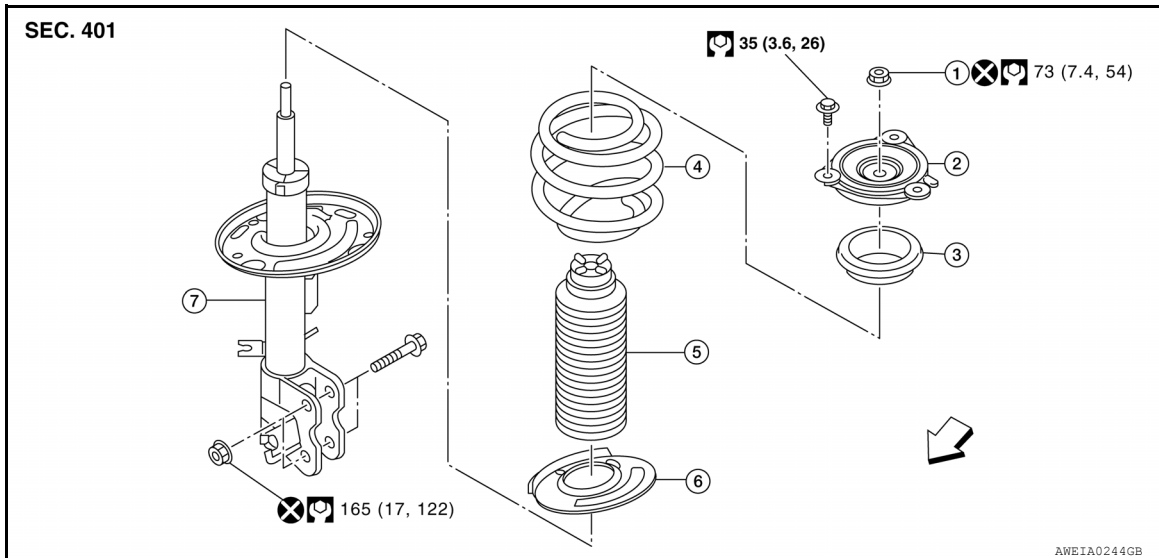

- |                        |                          |                        |
|------------------------|--------------------------|------------------------|
| 1. Piston rod lock nut | 2. Strut mount insulator | 3. Strut mount bearing |
| 4. Front coil spring   | 5. Bound bumper          | 6. Lower rubber seat   |
| 7. Strut               | ⇐ Front                  |                        |

### Disassembly and Assembly

INFOID:0000000011220136

#### DISASSEMBLY

##### CAUTION:

Do not damage piston rod when removing components from front coil spring and strut.


1. Install Tool (A) to front coil spring and strut.

##### CAUTION:

When installing Tool (A), wrap a shop cloth around front coil spring and strut to protect parts from damage.

Tool number : ST35652000 ( - )

2. Secure Tool (A) in a vise.

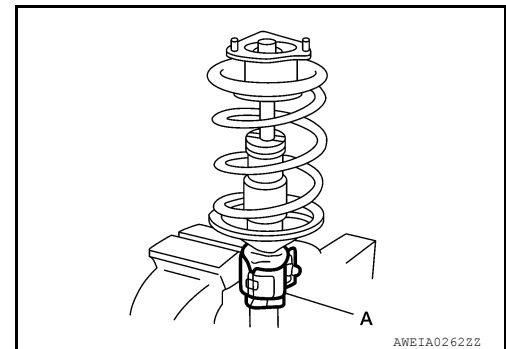

3. Install Tool to strut rod.

Tool number : — (J-49029)

4. Slightly loosen piston rod lock nut.

##### WARNING:

Do not remove piston rod lock nut completely. If it is removed completely, front coil spring can jump out and may cause serious damage or injury.


## FRONT COIL SPRING AND STRUT

### < UNIT DISASSEMBLY AND ASSEMBLY >

5. Compress front coil spring using suitable tool (A).

**WARNING:**

Make sure that pawls of suitable tool are firmly hooked on front coil spring. Suitable tool must be tightened alternately so as not to tilt front coil spring.

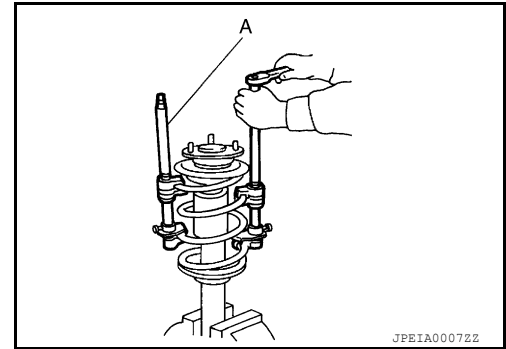

6. Make sure front coil spring is free between strut mount insulator and lower rubber seat.
7. Hold piston rod and remove piston rod lock nut.
8. Remove strut mount insulator, strut mount bearing, and bound bumper from strut.
9. Gradually release suitable tool and remove front coil spring.

**CAUTION:**

Release suitable tool while making sure position of suitable tool on front coil spring does not move.

10. Remove lower rubber seat.

### INSPECTION AFTER DISASSEMBLY

#### Strut

- Check strut for deformation, cracks, and damage. Replace strut if necessary.
- Check piston rod for damage, uneven wear, and distortion. Replace strut if necessary.
- Check welded and sealed areas for oil leaks. Replace strut if necessary.

#### Insulator and Rubber Parts

Check strut mount insulator for cracks. Check rubber parts for wear. Replace parts if necessary.

#### Front Coil Spring


Check front coil spring for cracks, wear, and damage. Replace front coil spring if necessary.

### ASSEMBLY

**CAUTION:**

Do not damage piston rod when installing components to front coil spring and strut.

1. Install lower rubber seat to strut. Make sure that pin (A) on lower rubber seat is positioned into hole (B) on strut.

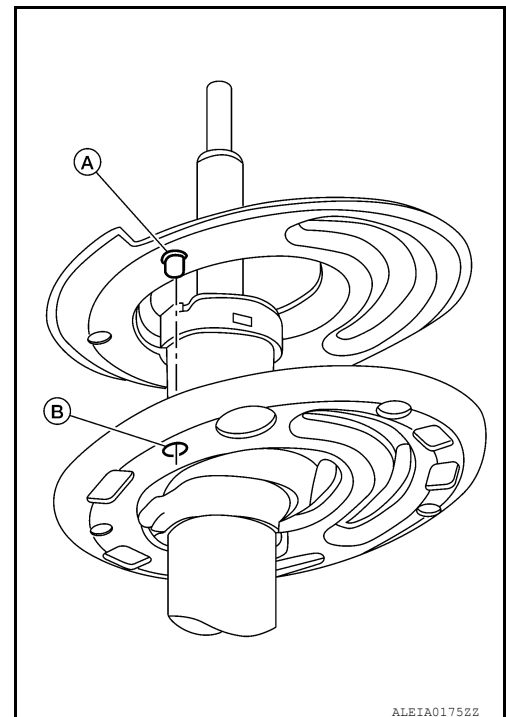

# FRONT COIL SPRING AND STRUT

## < UNIT DISASSEMBLY AND ASSEMBLY >


2. Compress front coil spring using suitable tool.

**WARNING:**

Make sure that pawls of suitable tool are firmly hooked on front coil spring. Suitable tool must be tightened alternately so as not to tilt front coil spring.

3. Align lower end of front coil spring (1) with lower rubber seat (2) as shown.

Maximum Gap (A) : 5 mm (0.2 in)

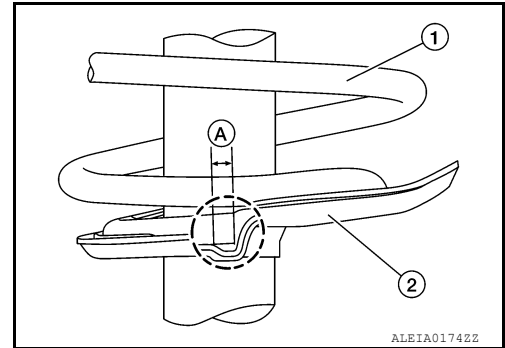

4. Connect bound bumper to strut mount bearing.

**CAUTION:**

- Be sure to install bound bumper to strut mount bearing securely.
- When installing bound bumper, use soapy water. Do not use machine oil or other lubricants.


5. Install strut mount bearing and strut mount insulator.
6. Temporarily install piston rod lock nut.

**CAUTION:**

Do not reuse piston rod lock nut.

7. Be sure that tab (A) on strut mount insulator is positioned on out-board side of vehicle.

← : Front

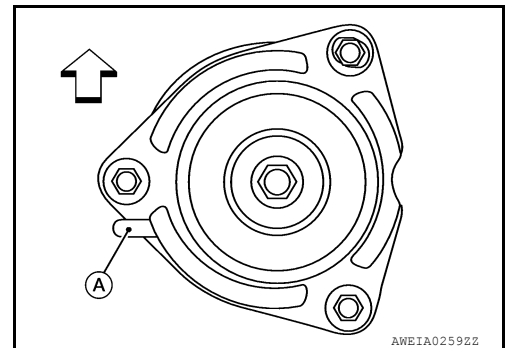

8. Gradually release suitable tool (A) and remove suitable tool from front coil spring.

**CAUTION:**

Release suitable tool while making sure position of suitable tool on front coil spring does not move.



9. Tighten piston rod lock nut to specified torque. Refer to [FSU-21, "Exploded View"](#).
10. Remove Tool from strut rod.


Tool number : — (J-49029)

## FRONT COIL SPRING AND STRUT

### < UNIT DISASSEMBLY AND ASSEMBLY >

11. Remove Tool (A) from vise.
12. Remove Tool (A) from front coil spring and strut.

**Tool number : ST35652000 ( - )**

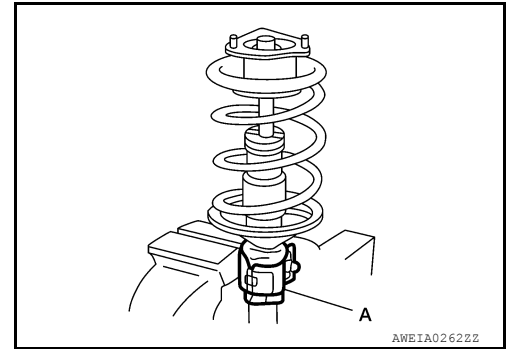

13. After replacing strut, always follow disposal procedure to discard old strut. Refer to [FSU-12, "Disposal"](#).



# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)


#### Wheel Alignment (Unladen\*<sup>1</sup>)

INFOID:0000000011220138

**WARNING:**

If the vehicle is equipped with the Intelligent Cruise Control (ICC) system and the rear toe has been adjusted during a wheel alignment, the ICC sensor must be aligned. Refer to [CCS-76, "ICC Sensor Adjustment"](#).

Measurement wheel		(LH) side	(RH) side
Camber Degree minute (Decimal degree)	Minimum	-1° 00' (-1.00°)	-1° 15' (-1.25°)
	Nominal	-0° 15' (-0.25°)	-0° 30' (-0.50°)
	Maximum	0° 30' (0.50°)	0° 15' (0.25°)
	(LH) and (RH) difference* <sup>2</sup>	-0° 15'± 0° 33' (0.25°± 0.55°)	
Caster Degree minute (Decimal degree)	Minimum	4° 00' (4.00°)	
	Nominal	4° 45' (4.75°)	
	Maximum	5° 30' (5.50°)	
	(LH) and (RH) difference	0.30' (0.50°) Maximum	
Kingpin inclination Degree minute (Decimal degree)	Minimum	12° 00' (12.00°)	12° 15' (12.25°)
	Nominal	12° 45' (12.75°)	13° 00' (13.00°)
	Maximum	13° 30' (13.50°)	13° 45' (13.75°)

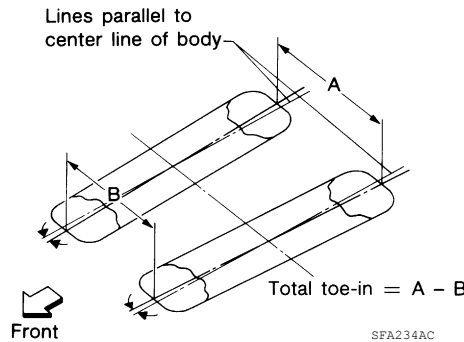

Total toe-in	Distance (A - B)	Minimum	Out 0.6 mm (Out 0.024 in)
		Nominal	In 1.4 mm (In 0.055 in)
		Maximum	In 3.4 mm (In 0.134 in)
	Angle (LH) and (RH) Degree minute (Decimal degree)	Minimum	Out 0° 01' 30" (Out 0.03°)
		Nominal	In 0° 06' 00" (In 0.10°)
		Maximum	In 0° 07' 30" (In 0.13°)

\*1 Fuel, engine coolant, and lubricants are full. Spare tire, jack, hand tools and mats are in designated positions.

\*2: The difference when assuming the (LH) side is the standard.

#### Ball Joint

INFOID:0000000011220139

Item	Standard
Swinging torque Transverse link	0.5 – 4.9 N·m (0.05 – 0.50 kg·m, 4 – 43 in·lb)
Rotating torque Transverse link	0.5 – 4.9 N·m (0.05 – 0.50 kg·m, 4 – 43 in·lb)
Axial end play	0.1 mm (0.004 in)


# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## Wheelarch Height (Unladen\*)

INFOID:000000011220140

UNITED STATES

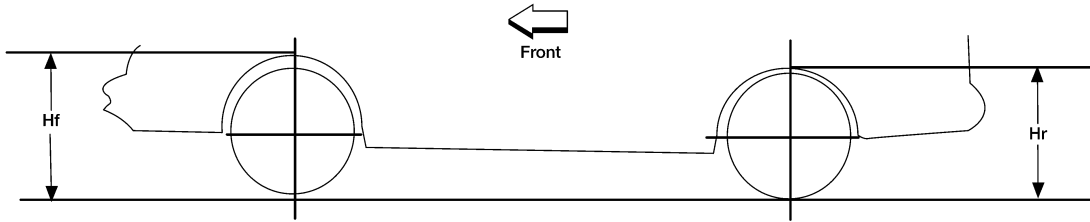


LEIA0085E

Tire size	235/65R18	235/55R20
Front (Hf)	835 mm (32.87 in)	834 mm (32.83 in)
Rear (Hr)	824 mm (32.44 in)	822 mm (32.36 in)

\*: Fuel, engine coolant, and lubricants are full. Spare tire, jack, hand tools, and mats are in designated positions.

CANADA

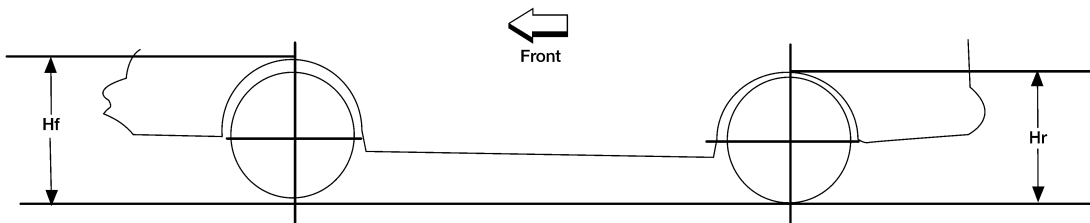

LEIA0085E

Tire size	235/65R18	235/55R20
Front (Hf)	836 mm (32.91 in)	834 mm (32.83 in)
Rear (Hr)	824 mm (32.44 in)	822 mm (32.36 in)

\*: Fuel, engine coolant, and lubricants are full. Spare tire, jack, hand tools, and mats are in designated positions.