

SECTION **STR**
STARTING SYSTEM

CONTENTS

PRECAUTION	2	DIAGNOSIS AND REPAIR WORKFLOW	17	A
PRECAUTIONS	2	Work Flow (With GR8-1200 NI)	17	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	Work Flow (Without GR8-1200 NI)	21	
PREPARATION	3	DTC/CIRCUIT DIAGNOSIS	23	G
PREPARATION	3	B TERMINAL CIRCUIT	23	
Special Service Tool	3	Description	23	H
Commercial Service Tool	3	Diagnosis Procedure	23	
SYSTEM DESCRIPTION	4	S CONNECTOR CIRCUIT	24	I
COMPONENT PARTS	4	Description	24	
VQ40DE	4	Diagnosis Procedure	24	
VQ40DE : Component Parts Location	4	SYMPTOM DIAGNOSIS	26	J
VQ40DE : Component Description	5	STARTING SYSTEM	26	
VK56DE	5	Symptom Table	26	K
VK56DE : Component Parts Location	6	REMOVAL AND INSTALLATION	27	
VK56DE : Component Description	7	STARTER MOTOR	27	L
SYSTEM	8	VQ40DE	27	
System Diagram	8	VQ40DE : Exploded View	27	M
System Description	8	VQ40DE : Removal and Installation	27	
WIRING DIAGRAM	9	VK56DE	28	N
STARTING SYSTEM	9	VK56DE : Exploded View	28	
Wiring Diagram - With VQ40DE	9	VK56DE : Removal and Installation	28	
Wiring Diagram - With VK56DE	13	SERVICE DATA AND SPECIFICATIONS (SDS)	30	O
BASIC INSPECTION	17	STARTER MOTOR	30	
		Starter	30	P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012524960

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

PREPARATION

< PREPARATION >

PREPARATION

PREPARATION


Special Service Tool

INFOID:0000000012524961

A

STR

The actual shape of the tools may differ from those illustrated here.

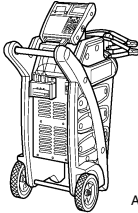Tool number (TechMate No.) Tool name	Description
<p>— (—) Model GR8-1200 NI Multitasking battery and electrical diagnostic station</p>  <p style="text-align: right;">AWIA1239ZZ</p>	<p>Tests Batteries, starting and charging system and changes batteries. For operating instructions, refer to diagnostic station instruction manual.</p>


C

D

E

Commercial Service Tool

INFOID:0000000012524962

Tool name	Description
<p>Power tool</p>  <p style="text-align: right;">PIIB1407E</p>	<p>Loosening nuts, screws and bolts.</p>

F

G

H

I

J

K

L

M

N

O

P

COMPONENT PARTS

< SYSTEM DESCRIPTION >



SYSTEM DESCRIPTION

COMPONENT PARTS

VQ40DE

VQ40DE : Component Parts Location

INFOID:000000012524963

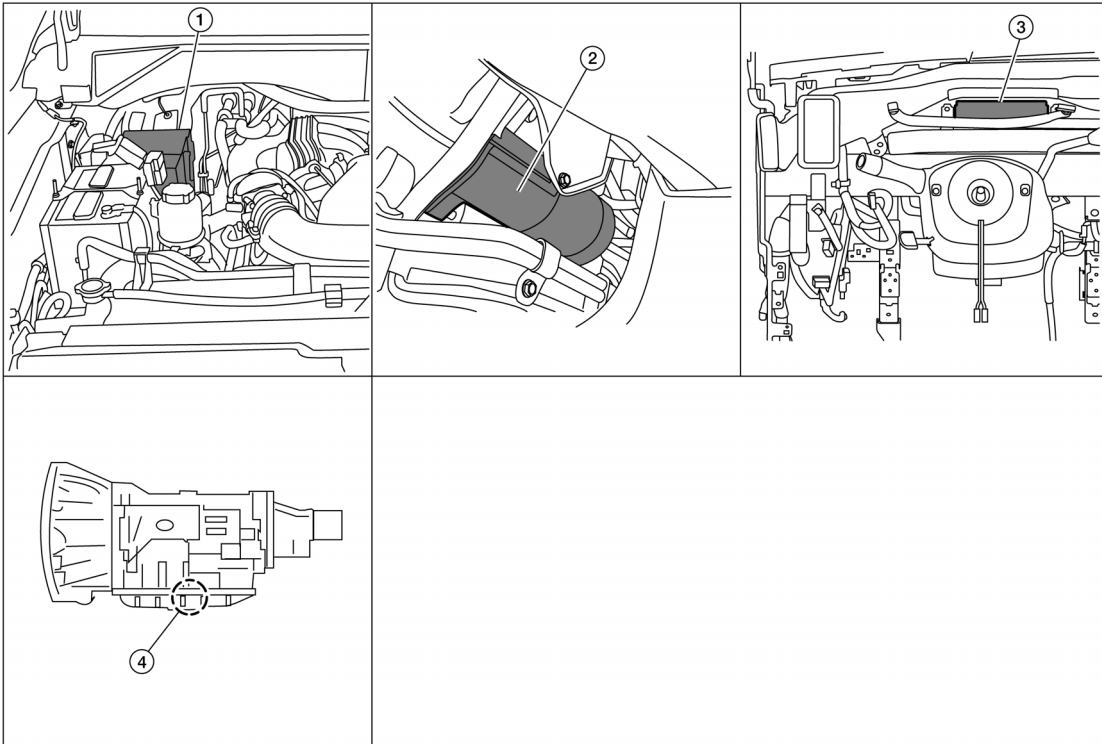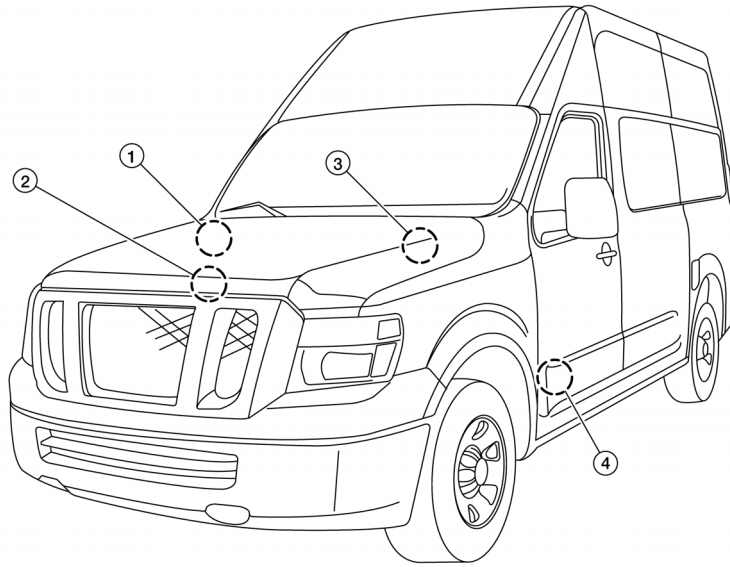

ALBIA0700ZZ

1. IPDM E/R
2. Starter motor
3. BCM (view with instrument panel removed)
4. A/T assembly (with built in TCM)

COMPONENT PARTS

< SYSTEM DESCRIPTION >

VQ40DE : Component Description

INFOID:000000012524964

A

Component part	Description
TCM	TCM supplies power to the starter relay inside the IPDM E/R when the selector lever is shifted to the P or N position.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

STR

C

D

VK56DE

E

F

G

H

I

J

K

L

M

N

O



P

COMPONENT PARTS

< SYSTEM DESCRIPTION >

VK56DE : Component Parts Location

INFOID:000000012524965

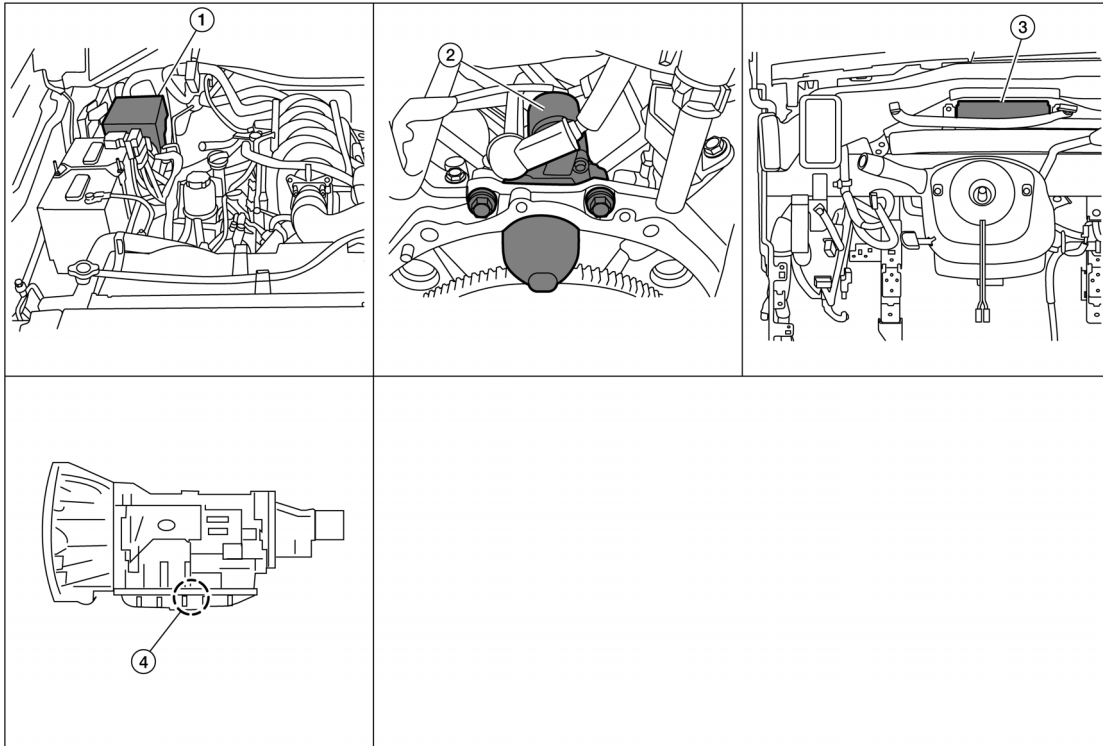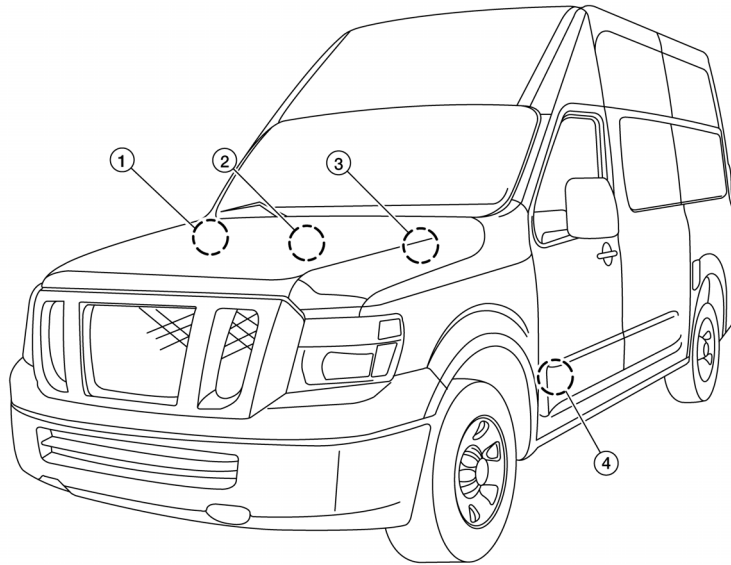

ALBIA0701ZZ

1. IPDM E/R
2. Starter motor
(view with intake manifold removed)
3. BCM
(view with instrument panel removed)
4. A/T assembly
(with built in TCM)

COMPONENT PARTS

< SYSTEM DESCRIPTION >

VK56DE : Component Description

INFOID:000000012524966

Component part	Description
TCM	TCM supplies power to the starter relay inside the IPDM E/R when the selector lever is shifted to the P or N position.
BCM	BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.
IPDM E/R	CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P


SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM

System Diagram

INFOID:000000012524967

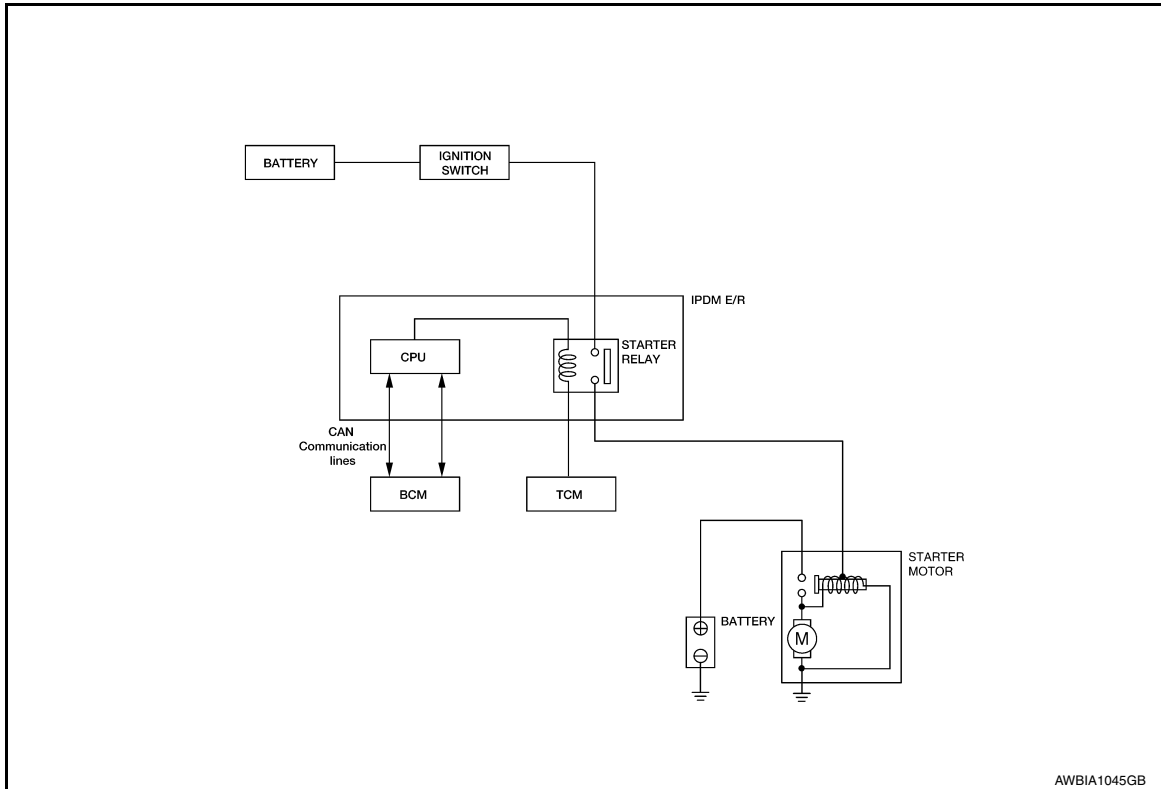

AWBIA1045GB

System Description

INFOID:000000012524968

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

STARTING SYSTEM

< WIRING DIAGRAM >

WIRING DIAGRAM

STARTING SYSTEM

Wiring Diagram - With VQ40DE

INFOID:000000012524969

A

STR

C

D

E

F

G

H

I

J

K

L


M

N

O

P

STARTING SYSTEM - WITH VQ40DE

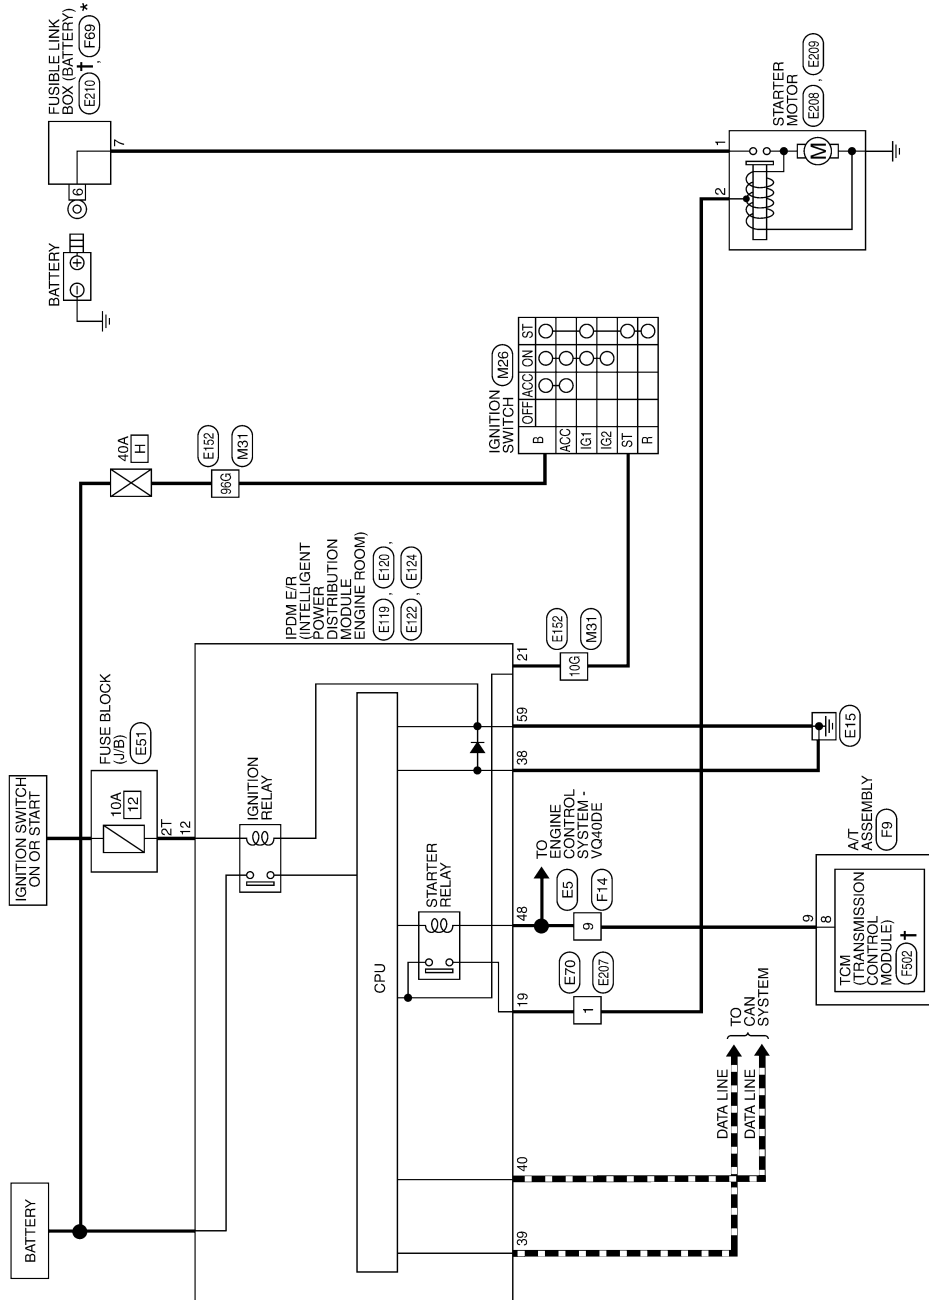

* : THIS CONNECTOR IS AN INTEGRAL PART OF THE FUSIBLE LINK BOX (BATTERY).
 † : THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.

ABBWA1259GB

STARTING SYSTEM

< WIRING DIAGRAM >


STARTING SYSTEM CONNECTORS - WITH VQ40DE

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
B	G	-
ST	Y	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

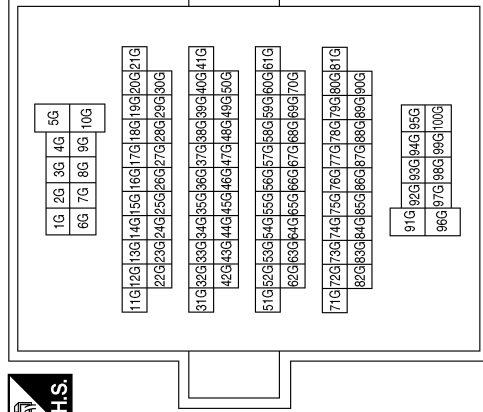


Terminal No.	Color of Wire	Signal Name
10G	Y	-
96G	G	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
9	BR	-

Connector No.	E51
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2T	W	-

Connector No.	E70
Connector Name	WIRE TO WIRE
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12	W	IGN SW (IG1)

ABBIA2188GB

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



59	58	57
82	61	60

Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



42	41	40	39	38	37
48	47	46	45	44	43

Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
48	BR	NPSW

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



21	20	19
24	23	22

Terminal No.	Color of Wire	Signal Name
19	W	STARTER MOTOR
21	Y	IGN SW (ST)

Connector No.	E208
Connector Name	STARTER MOTOR (WITH VQ40DE)
Connector Color	-



1

Terminal No.	Color of Wire	Signal Name
1	B/R	-


Connector No.	E207
Connector Name	WIRE TO WIRE
Connector Color	GRAY



5	4	3	2	1
9	8	7	6	1

Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

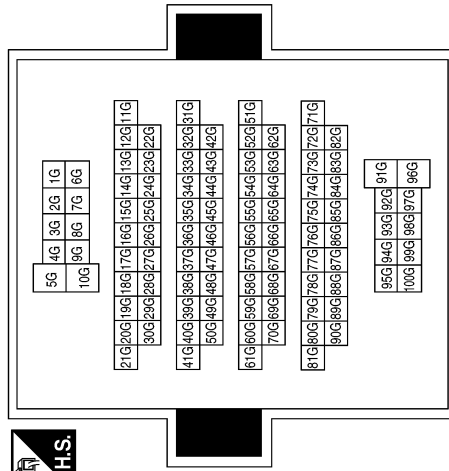

Terminal No.	Color of Wire	Signal Name
10G	Y	-
96G	G	-


ABBIA2894GB

A
STR
C
D
E
F
G
H
I
J
K
L
M
N
O
P

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN



Terminal No.	9	Color of Wire	BR	Signal Name	-
--------------	---	---------------	----	-------------	---

Connector No.	E210
Connector Name	FUSIBLE LINK BOX (BATTERY) (WITH VQ40DE)
Connector Color	-



Terminal No.	7	Color of Wire	B/R	Signal Name	-
--------------	---	---------------	-----	-------------	---

Connector No.	E209
Connector Name	STARTER MOTOR (WITH VQ40DE)
Connector Color	GRAY



Terminal No.	2	Color of Wire	W	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY




Terminal No.	8	Color of Wire	G	Signal Name	START-RLY
--------------	---	---------------	---	-------------	-----------

Connector No.	F69
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	-



Terminal No.	6	Color of Wire	-	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	9	Color of Wire	BR	Signal Name	-
--------------	---	---------------	----	-------------	---

ABBIA2895GB


STARTING SYSTEM

< WIRING DIAGRAM >

Wiring Diagram - With VK56DE

INFOID:000000012524970

STARTING SYSTEM - WITH VK56DE

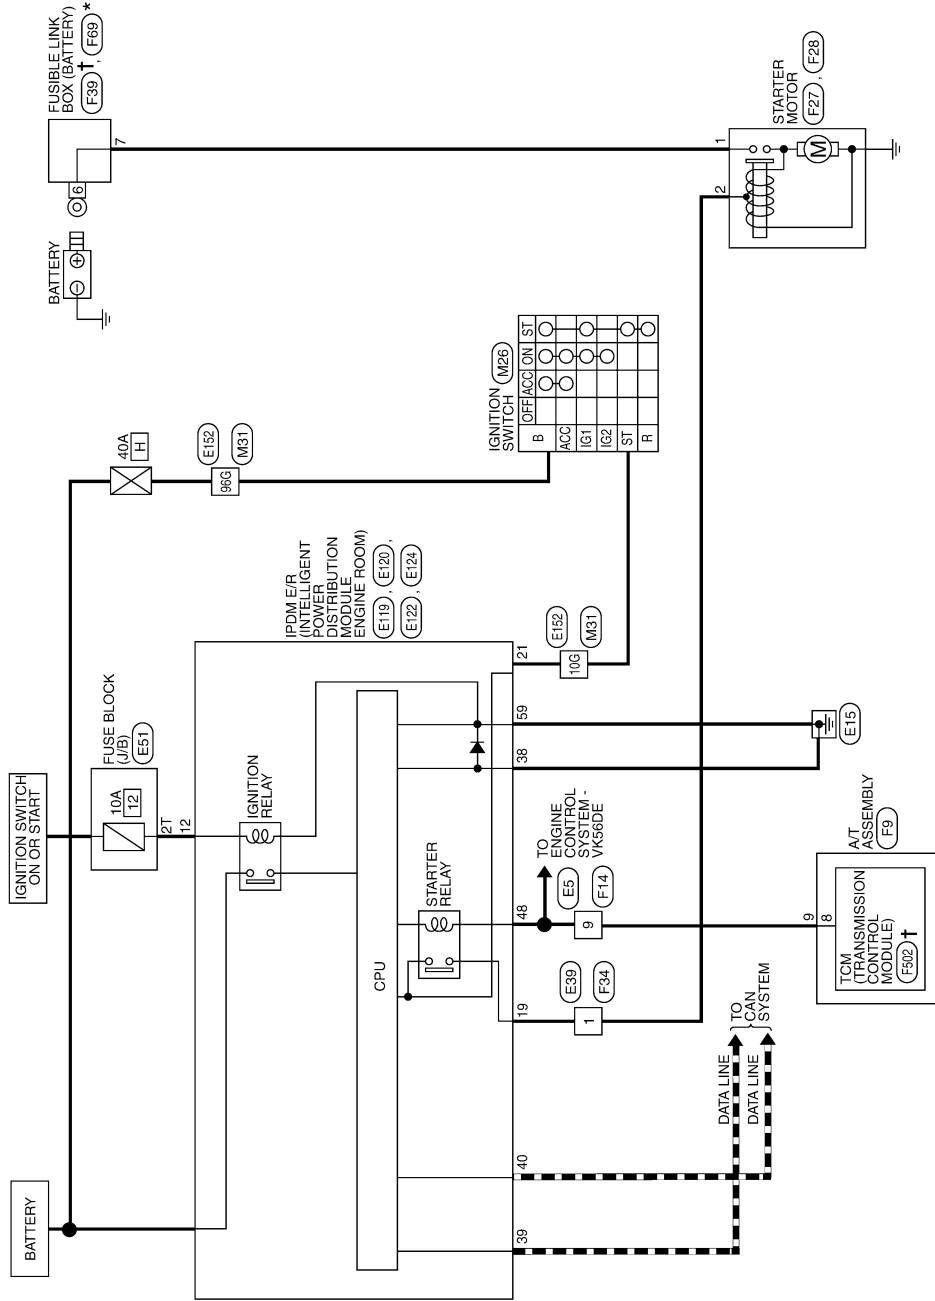

* : THIS CONNECTOR IS AN INTEGRAL PART OF THE FUSIBLE LINK BOX (BATTERY).

† : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

ABBWA1260GB

A
STR
C
D
E
F
G
H
I
J
K
L
M
N
O
P

STARTING SYSTEM

< WIRING DIAGRAM >


STARTING SYSTEM CONNECTORS - WITH VK56DE

Connector No.	M26
Connector Name	IGNITION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
B	G	-
ST	Y	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

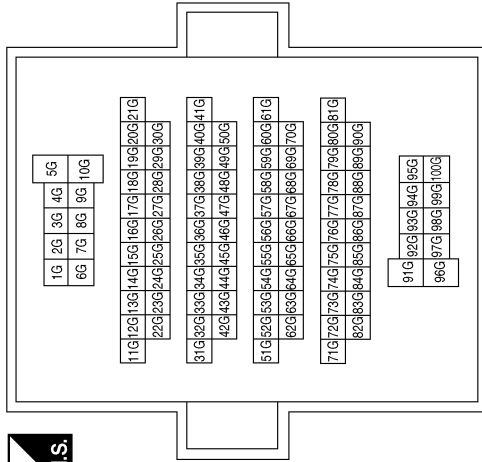

Terminal No.	Color of Wire	Signal Name
10G	Y	-
96G	G	-

Connector No.	E5
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
9	BR	-

Connector No.	E39
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E51
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2T	W	-

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12	W	IGN SW (IG1)

STARTING SYSTEM


< WIRING DIAGRAM >

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
48	BR	NPSW

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
19	W	STARTER MOTOR
21	Y	IGN SW (ST)

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
9	BR	-

Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
9	BR	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

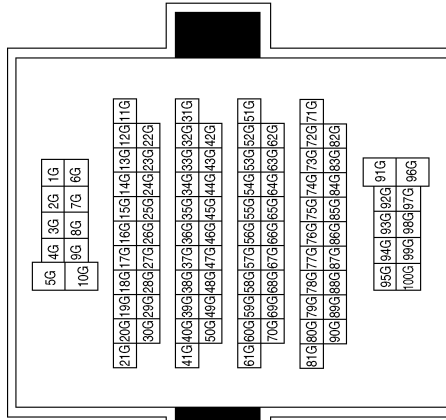

Terminal No.	Color of Wire	Signal Name
10G	Y	-
96G	G	-

ABBIA2192GB

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	F34
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	1	Color of Wire	W	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	F28
Connector Name	STARTER MOTOR (WITH VK56DE)
Connector Color	GRAY



Terminal No.	2	Color of Wire	W	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	F27
Connector Name	STARTER MOTOR (WITH VK56DE)
Connector Color	-



Terminal No.	1	Color of Wire	B/R	Signal Name	-
--------------	---	---------------	-----	-------------	---

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY



Terminal No.	8	Color of Wire	G	Signal Name	START-RLY
--------------	---	---------------	---	-------------	-----------

Connector No.	F69
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	-



Terminal No.	6	Color of Wire	-	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	F39
Connector Name	FUSIBLE LINK BOX (BATTERY) (WITH VK56DE)
Connector Color	-



Terminal No.	7	Color of Wire	B/R	Signal Name	-
--------------	---	---------------	-----	-------------	---

ABBIA2893GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow (With GR8-1200 NI)

INFOID:0000000012524971

A

STR

STARTING SYSTEM DIAGNOSIS WITH GR8-1200 NI

To test the starting system, use the following special service tool:

- GR8-1200 NI Multitasking battery and electrical diagnostic station

NOTE:

Refer to the diagnostic station Instruction Manual for proper starting system diagnosis procedures.

C

D

E

F

G

H

I

J

K

L

M

N


O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

OVERALL SEQUENCE

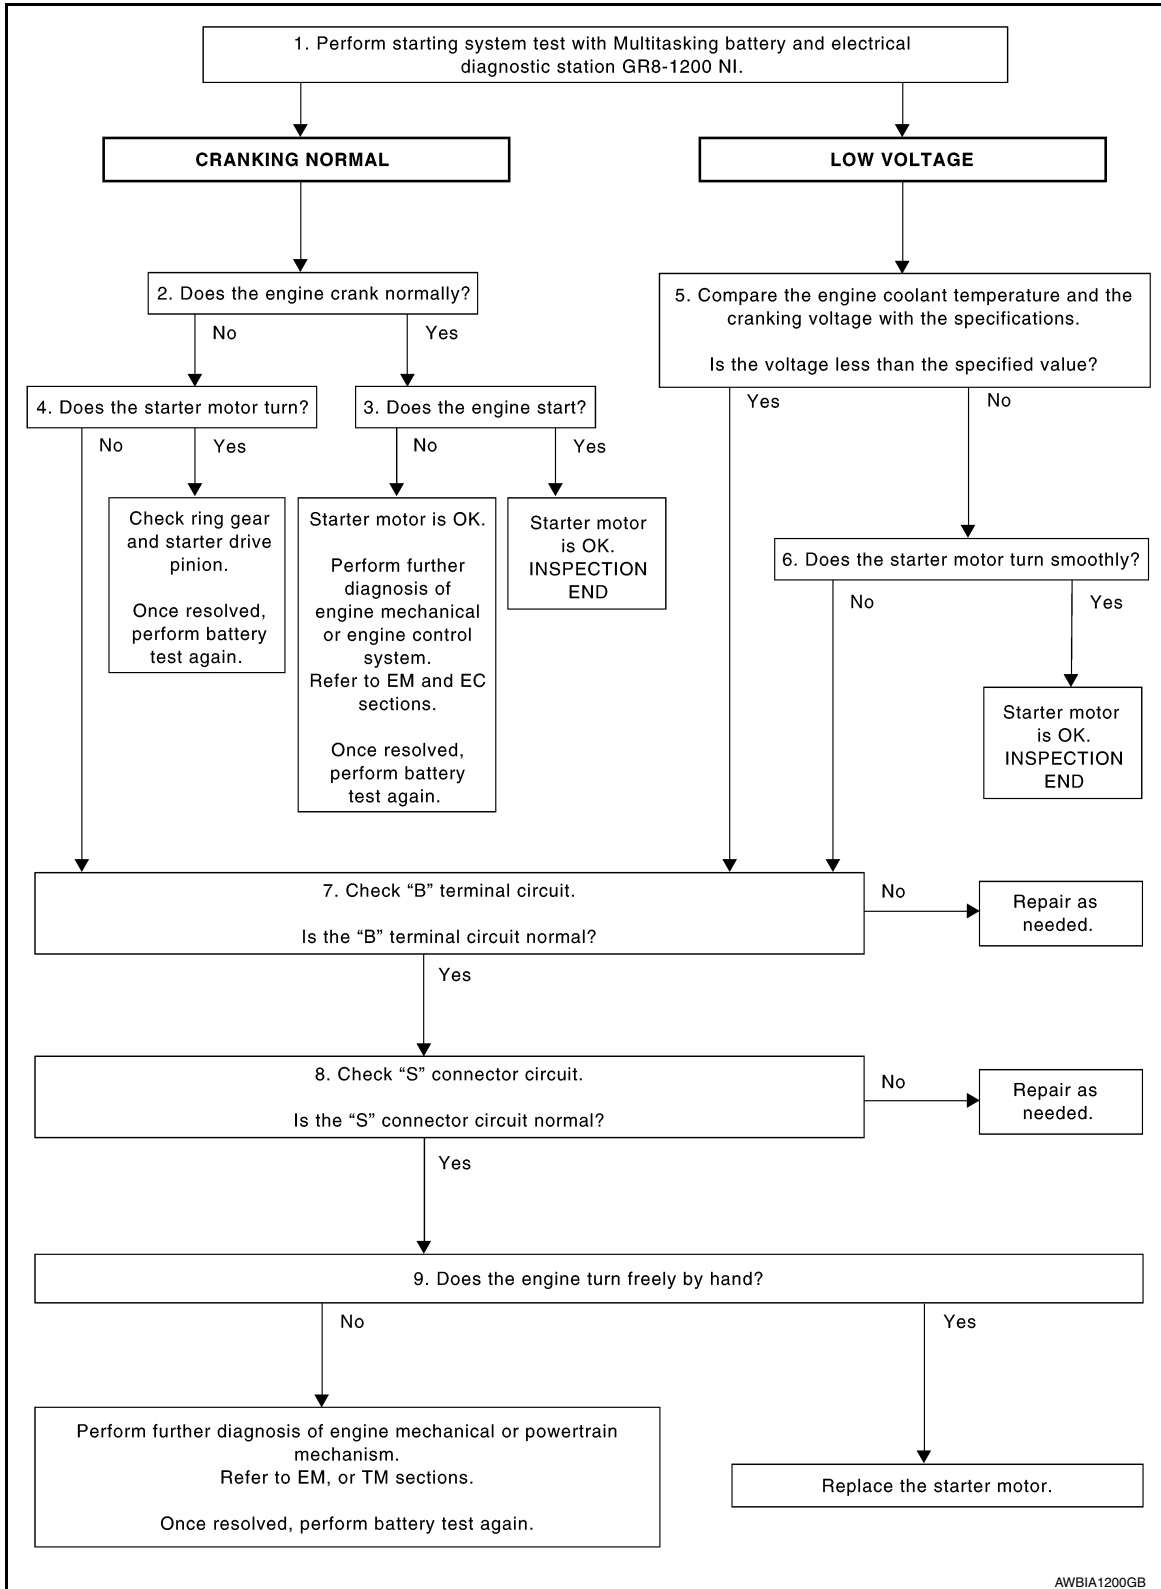

DETAILED FLOW

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and generator test segments must be done as a set from start to finish.

1. DIAGNOSIS WITH MULTITASKING BATTERY AND ELECTRICAL DIAGNOSTIC STATION GR8-1200 NI

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Perform the starting system test with Multitasking battery and electrical diagnostic station GR8-1200 NI. For details and operating instructions, refer to diagnostic station Instruction Manual.

Test result

CRANKING NORMAL>>GO TO 2.

LOW VOLTAGE>>GO TO 5.

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to diagnostic station instruction manual.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to diagnostic station instruction manual. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

2. CRANKING CHECK

Check that the starter motor operates properly.

Does the engine crank normally?

YES >> GO TO 3.

NO >> GO TO 4.

3. ENGINE START CHECK

Check that the engine starts.

Does the engine start?

YES >> Inspection End.

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer to EM and EC sections. Once resolved, perform battery test again.

4. STARTER MOTOR ACTIVATION

Check that the starter motor operates.

Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7.

5. COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and verify the cranking voltage is within specifications.

Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

Is the voltage less than the specified value?

YES >> GO TO 7.

NO >> GO TO 6.

6. STARTER OPERATION

Check the starter operation.

Does the starter motor turn smoothly?

YES >> Inspection End.

NO >> GO TO 7.

7. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [STR-23, "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

8. "S" CONNECTOR CIRCUIT INSPECTION

Check "S" connector circuit. Refer to [STR-24, "Diagnosis Procedure"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Is "S" connector circuit normal?

- YES >> GO TO 9.
- NO >> Repair as needed.

9.ENGINE ROTATION STATUS

Check that the engine can be rotated by hand.

Does the engine turn freely by hand?

- YES >> Replace starter motor. Refer to [STR-27. "VQ40DE : Removal and Installation"](#) (VQ40DE) or [STR-28. "VK56DE : Removal and Installation"](#) (VK56DE).
- NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Once resolved, perform battery test again using Multitasking battery and electrical diagnostic station GR8-1200 NI. Refer to the diagnostic station Instruction Manual for proper testing procedures.

DIAGNOSIS AND REPAIR WORKFLOW


< BASIC INSPECTION >

Work Flow (Without GR8-1200 NI)

INFOID:000000012524972

A

OVERALL SEQUENCE

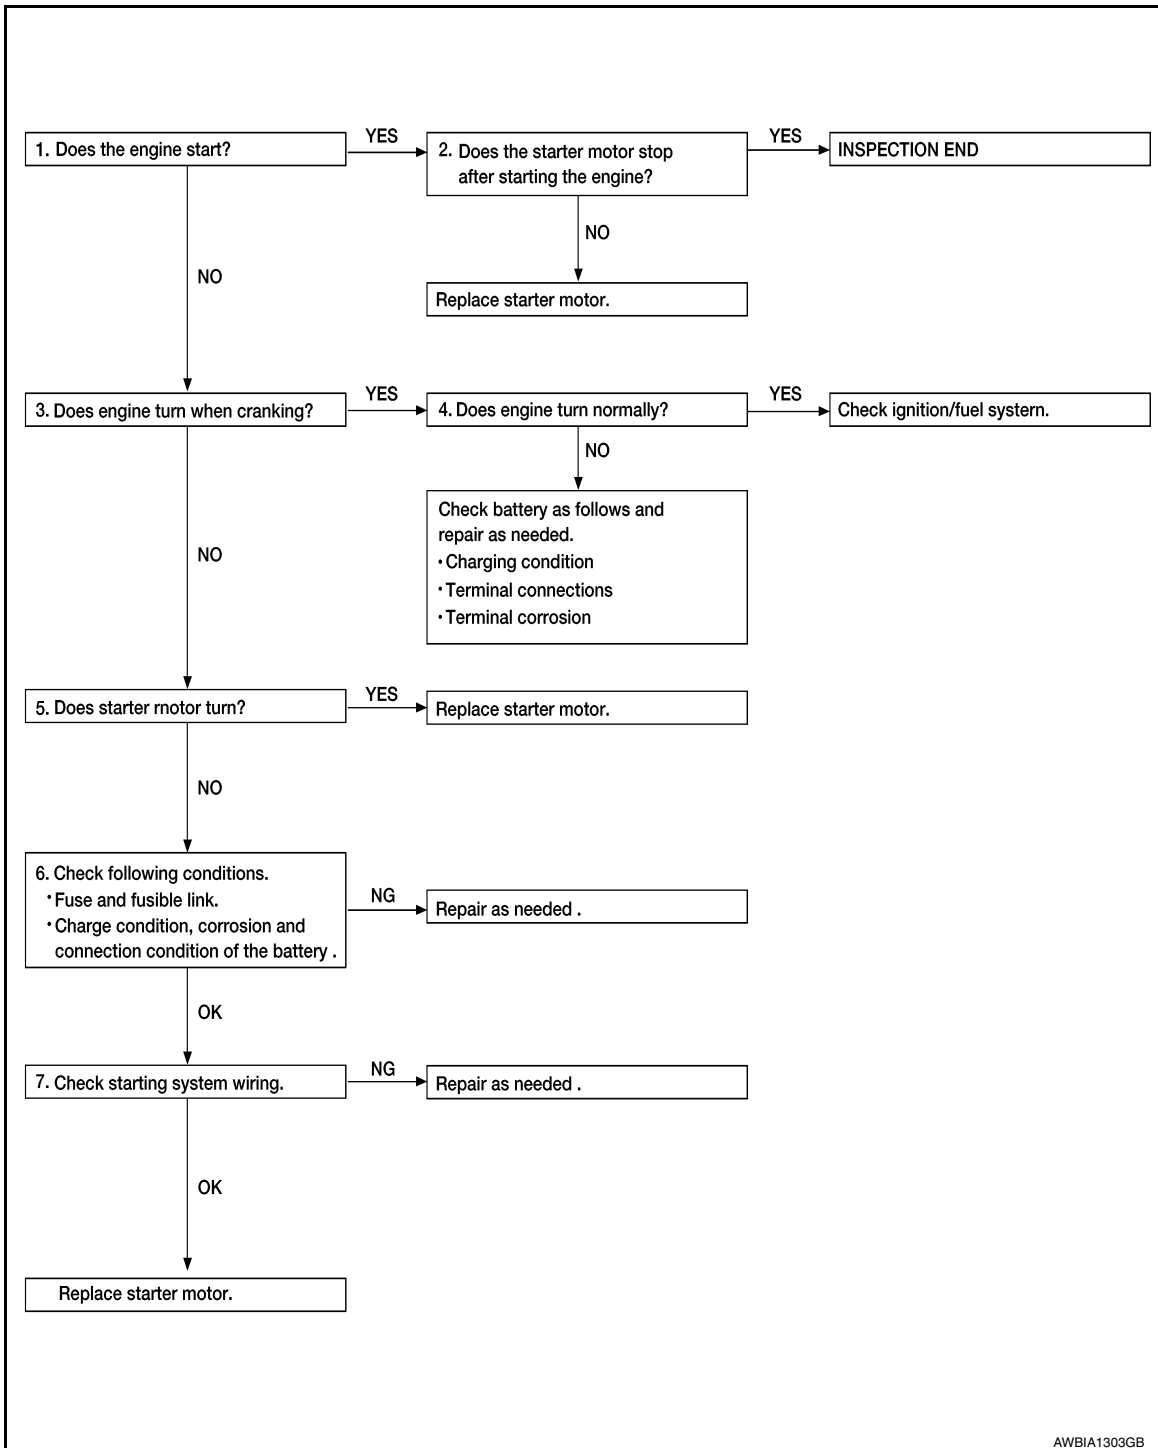

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

DETAILED FLOW

NOTE:

If any malfunction is found, immediately disconnect the battery cable from the negative terminal.

1. CHECK ENGINE START

Crank the engine and check that the engine starts.

Does the engine start?

YES >> GO TO 2.

NO >> GO TO 3.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

2. CHECK THAT THE STARTER MOTOR STOPS

Check that the starter motor stops after starting the engine.

Does the starter motor stop?

YES >> Inspection End.

NO >> Replace starter motor. Refer to [STR-27, "VQ40DE : Removal and Installation"](#) (VQ40DE) or [STR-28, "VK56DE : Removal and Installation"](#) (VK56DE).

3. CHECK THAT THE ENGINE TURNS WHEN CRANKING

Check that the engine turns when cranking.

Does engine turn when cranking?

YES >> GO TO 4.

NO >> GO TO 5.

4. CHECK THE ENGINE SPEED WHEN CRANKING

Check that the engine speed is not low when cranking.

Does engine turn normally?

YES >> Check ignition/fuel system.

NO >> Check charge condition, corrosion and connection condition of the battery. Refer to [PG-86, "How to Handle Battery"](#).

5. CHECK STARTER MOTOR ACTIVATION

Check that the starter motor runs at cranking.

Does starter motor turn?

YES >> Replace starter motor. Refer to [STR-27, "VQ40DE : Removal and Installation"](#) (VQ40DE) or [STR-28, "VK56DE : Removal and Installation"](#) (VK56DE).

NO >> GO TO 6.

6. CHECK POWER SUPPLY CIRCUIT

Check the following conditions:

- Fuse and fusible link
- Charge condition, corrosion and connection of the battery.

Are these inspection results normal?

YES >> GO TO 7.

NO >> Repair as needed.

7. CHECK STARTING SYSTEM WIRING

Check the following:

- "B" terminal circuit. Refer to [STR-23, "Diagnosis Procedure"](#).
- "S" terminal circuit. Refer to [STR-24, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> Replace starter motor. Refer to [STR-27, "VQ40DE : Removal and Installation"](#) (VQ40DE) or [STR-28, "VK56DE : Removal and Installation"](#) (VK56DE).

NO >> Repair as needed.

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:0000000012524973

Terminal "1" (B) is constantly supplied with battery power.

Diagnosis Procedure

INFOID:0000000012524974

Regarding Wiring Diagram information, refer to [STR-9. "Wiring Diagram - With VQ40DE"](#) or [STR-13. "Wiring Diagram - With VK56DE"](#).

CAUTION:

Perform diagnosis under the condition that the engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is depleted.

1. CHECK TERMINAL 1 POWER SUPPLY VOLTAGE

1. Turn ignition switch OFF.
2. Make sure that starter motor connector E208 (VQ40DE) or F27 (VK56DE) terminal 1 connection is clean and tight.
3. Check voltage between starter motor connector E208 (VQ40DE) or F27 (VK56DE) terminal 1 and ground.

(+)		(-)	Voltage
Connector	Terminal		
E208 (VQ40DE)	1	Ground	Battery voltage
F27 (VK56DE)			

Is the inspection result normal?

YES >> GO TO 2

NO >> Check harness between battery and starter motor for open circuit.

2. CHECK BATTERY CABLE (VOLTAGE DROP TEST)

1. Shift the transmission into P (Park) or N (Neutral).
2. Check voltage between battery positive terminal and starter motor connector E208 (VQ40DE) or F27 (VK56DE) terminal 1 while cranking the engine.

(+)		(-)	Condition	Voltage
Connector	Terminal			
E208 (VQ40DE)	1	Battery (+) terminal	While cranking the engine	Less than 0.2V
F27 (VK56DE)				

Is the inspection result normal?

YES >> GO TO 3

NO >> Check harness between the battery and the starter motor for high resistance.

3. CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

Check voltage between starter motor case and battery negative terminal while cranking the engine.

(+)	(-)	Condition	Voltage
Starter motor case	Battery (-) terminal	While cranking the engine	Less than 0.2V

Is the inspection result normal?

YES >> Terminal 1 circuit is OK. Further inspection is necessary. Refer to [STR-17. "Work Flow \(With GR8-1200 NI\)"](#) or [STR-21. "Work Flow \(Without GR8-1200 NI\)"](#).

NO >> Check the starter motor case to engine mounting for high resistance.

S CONNECTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S CONNECTOR CIRCUIT

Description

INFOID:000000012524975

Terminal "2" (S) is the power supply for the starter motor magnetic switch. Terminal 2 is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P (Park) or N (Neutral) position.

Diagnosis Procedure

INFOID:000000012524976

Regarding Wiring Diagram information, refer to [STR-9, "Wiring Diagram - With VQ40DE"](#) or [STR-13, "Wiring Diagram - With VK56DE"](#).

CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

1. CHECK STARTER MOTOR MAGNETIC SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector E209 (VQ40DE) or F28 (VK56DE).
3. Shift transmission into park or neutral.
4. Check voltage between starter motor connector E209 (VQ40DE) or F28 (VK56DE) terminal 2 and ground with the ignition in START.

(+)		(-)	Condition	Voltage
Connector	Terminal			
E209 (VQ40DE)	2	Ground	Ignition switch in START position	Battery voltage
F28 (VK56DE)				

Is the inspection result normal?

YES >> Magnetic switch circuit is OK. Further inspection is necessary. Refer to [STR-17, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-21, "Work Flow \(Without GR8-1200 NI\)"](#).

NO >> GO TO 2

2. CHECK CONNECTOR

1. Turn ignition switch OFF.
2. Check the IPDM E/R connector E120 and starter motor connector E209 (VQ40DE) or F28 (VK56DE) for damage, bent pins and loose connections.

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair the terminal and connector.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector E120 and starter motor connector E209 (VQ40DE) or F28 (VK56DE).
2. Check continuity between starter motor connector E209 (VQ40DE) or F28 (VK56DE) terminal 2 and IPDM E/R connector E120 terminal 19.

Connector	Terminal	Connector	Terminal	Continuity
E209 (VQ40DE)	2	E120	19	Yes
F28 (VK56DE)				

3. Check continuity between starter motor connector E209 (VQ40DE) or F28 (VK56DE) terminal 2 and ground.

S CONNECTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Connector	Terminal	—	Continuity
E209 (VQ40DE)	2	Ground	No
F28 (VK56DE)			

Is the inspection result normal?

- YES >> Further inspection is necessary. Refer to [STR-17, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-21, "Work Flow \(Without GR8-1200 NI\)"](#).
- NO >> Repair the harness.

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

STARTING SYSTEM

Symptom Table

INFOID:0000000012524977

Symptom	Reference
No normal cranking	Refer to STR-17. "Work Flow (With GR8-1200 NI)" or STR-21. "Work Flow (Without GR8-1200 NI)" .
Starter motor does not rotate	

STARTER MOTOR

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

STARTER MOTOR


VQ40DE

VQ40DE : Exploded View

INFOID:000000012524978

A

STR

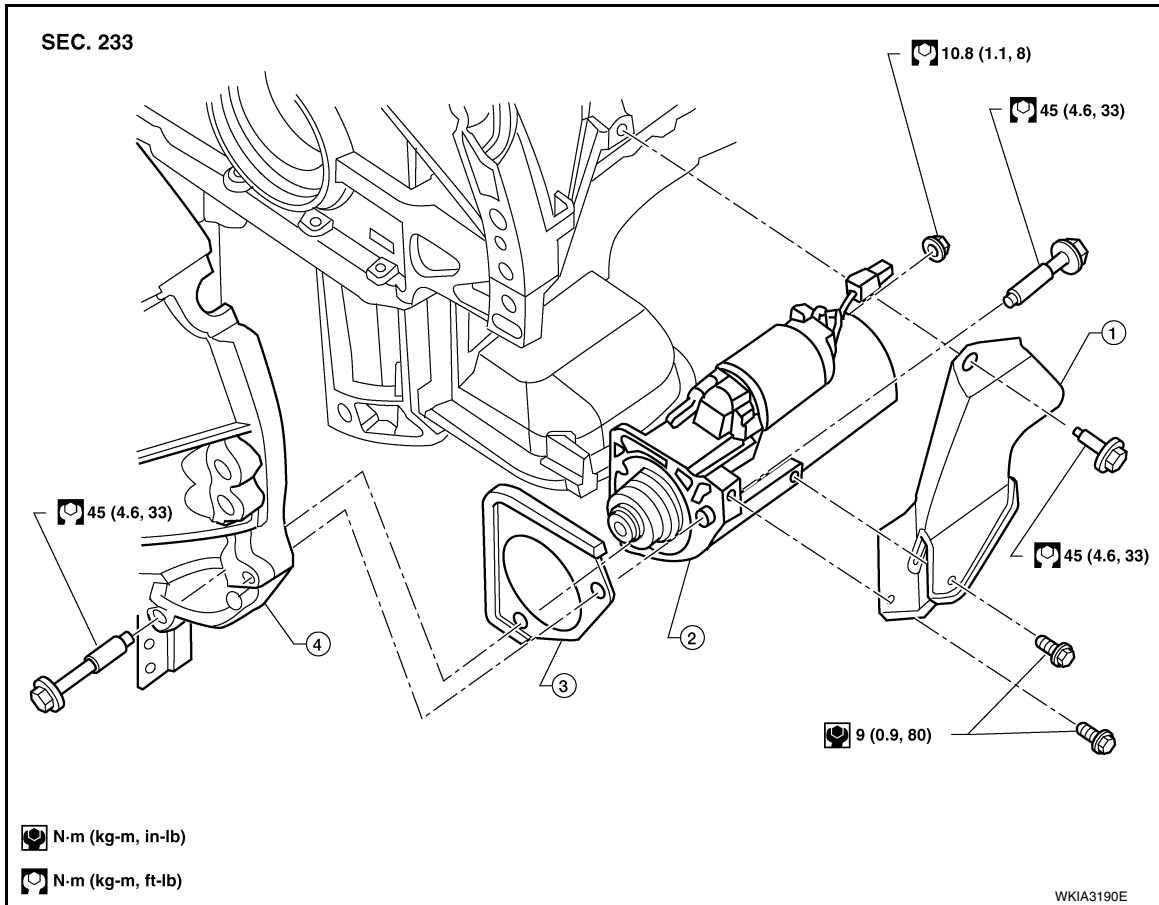

1. Starter cover
2. Starter motor assembly
3. Starter cover plate (rear)
4. Transmission housing

VQ40DE : Removal and Installation

INFOID:000000012524979

Removal

1. Disconnect the negative battery terminal. Refer to [PG-95. "Removal and Installation"](#).
2. Remove the front wheel and tire (RH) using power tool. Refer to [WT-62. "Adjustment"](#).
3. Remove the front fender protector (RH). Refer to [EXT-33. "Removal and Installation"](#).
4. Remove the exhaust manifold heat shield bolts and reposition the heat shield.
5. Remove starter cover bolts and starter cover.

C

D

E

F

G

H

I

J

K

L

M

N


O

P

STARTER MOTOR

< REMOVAL AND INSTALLATION >

6. Disconnect terminal "S" connector and terminal "B" nut.
7. Remove the two starter bolts using power tool.
8. Remove the starter.

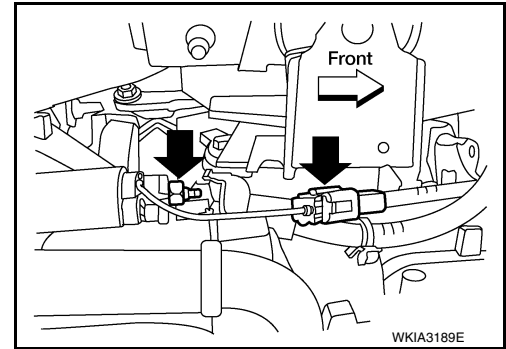

Installation

Installation is in the reverse order of removal.

- Tighten the front wheel and tire (RH) to specification. Refer to [WT-62. "Adjustment"](#).


CAUTION:

Tighten terminal "B" nut carefully.

VK56DE

VK56DE : Exploded View

INFOID:000000012524980

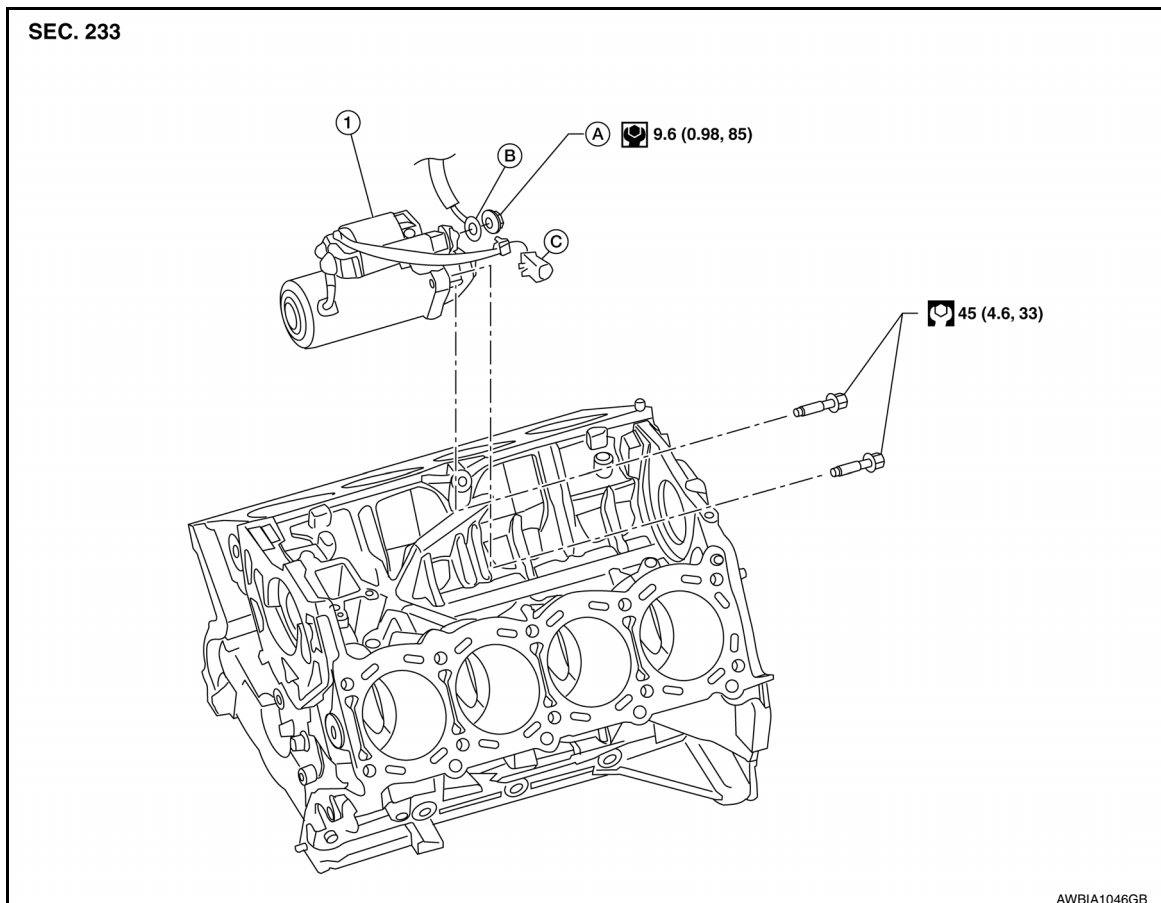

1. Starter motor assembly
- C. Terminal "2" (S) connector

- A. Terminal "1" (B) nut

- B. Terminal "1" (B) cable

VK56DE : Removal and Installation

INFOID:000000012524981


REMOVAL

1. Remove the intake manifold. Refer to [EM-166. "Removal and Installation"](#).
2. Remove the starter motor assembly harness terminal "1" (B) nut and terminal "1" (B) cable.

STARTER MOTOR

< REMOVAL AND INSTALLATION >

3. Disconnect terminal "2" (S) connector.
4. Remove terminal "2" (S) harness clips from brackets.
5. Remove the two starter motor assembly bolts (A) using power tool.
⇐: Front
6. Remove the starter motor assembly (1).

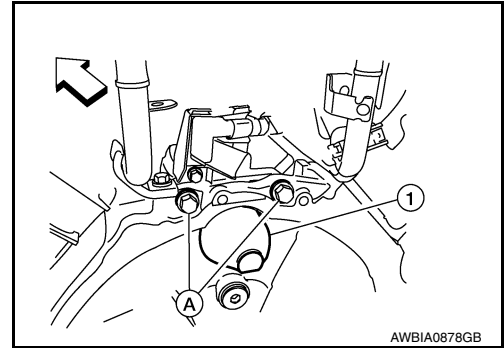

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Tighten terminal "1" (B) nut carefully.

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

STARTER MOTOR

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

STARTER MOTOR

Starter

INFOID:0000000012524982

Application - engine type		VQ40DE	VK56DE
Manufacturer		Mitsubishi	
Model number*		M001TA0075	M001T30671
Starter type		Reduction gear type	
System voltage		12V	
No-load	Terminal voltage	11V	
	Current	Less than 120A	Less than 120A
	Revolution	More than 3,100 rpm	More than 3,220 rpm

*: Always check with Parts Department for the latest parts information.