ELECTRICAL SYSTEM

SECTION E

MA

EM

LC

EC

FE

GL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

MODIFICATION NOTICE:

- Smart entrance control unit has been changed.
- The SMART C/U PREVIOUS is applicable for the 2WD models up to serial number 567231 and for the 4WD models up to serial number 584967.
- The SMART C/U NEW is applicable for the 2WD models from serial number 567231 and for the 4WD models from serial number 584967.

CONTENTS

PRECAUTIONS7
Supplemental Restraint System (SRS) "AIR
BAG" and "SEAT BELT PRE-TENSIONER"7
Wiring Diagrams and Trouble Diagnosis7
HARNESS CONNECTOR8
Description8
STANDARDIZED RELAY10
Description10
SMART C/U - PREVIOUS
POWER SUPPLY ROUTING12
Schematic12
Wiring Diagram - POWER13
Inspection19
GROUND 20
Ground Distribution20
COMBINATION SWITCH31
Check31
Replacement32
STEERING SWITCH33
Check
HEADLAMP (FOR USA)34
Component Parts and Harness Connector
Location
System Description
Wiring Diagram - H/LAMP38
Trouble Diagnoses
Bulb Replacement
Aiming Adjustment
HEADLAMP (FOR CANADA) - DAYTIME LIGHT
SYSTEM
Component Parts and Harness Connector
Location47
System Description47
,

Schematic	51
Wiring Diagram - DTRL	52
Trouble Diagnoses	57
Bulb Replacement	60
Aiming Adjustment	61
PARKING, LICENSE AND TAIL LAMPS	62
System Description	62
Schematic	63
Wiring Diagram - TAIL/L	64
Trouble Diagnoses	67
STOP LAMP	68
Wiring Diagram - STOP/L	68
BACK-UP LAMP	
Wiring Diagram - BACK/L	
FRONT FOG LAMP	
System Description	71
Wiring Diagram - F/FOG	72
Aiming Adjustment	74
TURN SIGNAL AND HAZARD WARNING LA	MPS75
System Description	75
Wiring Diagram - TURN	77
Trouble Diagnoses	
Electrical Components Inspection	79
ILLUMINATION	80
System Description	80
Schematic	82
Wiring Diagram - ILL	83
INTERIOR, SPOT, VANITY MIRROR AND	
LUGGAGE ROOM LAMPS	88
System Description	88
Schematic	90
Wiring Diagram - INT/L	91
METERS AND GAUGES	94
Component Parts and Harness Connector	
Location	94

System Description	94	Filament Repair	155
Combination Meter	96	AUDIO	157
Schematic	98	System Description	157
Wiring Diagram - METER	99	Wiring Diagram - AUDIO -/Base System	158
Meter/Gauge Operation and Odo/Trip Meter		Schematic/BOSE System	
Segment Check in Diagnosis Mode	100	Wiring Diagram - AUDIO -/BOSE System	
Trouble Diagnoses		Trouble Diagnoses	
Electrical Components Inspection		Inspection	
COMPASS AND THERMOMETER		Audio Unit Removal and Installation	
System Description	109	Wiring Diagram - REMOTE	
Wiring Diagram - COMPAS		AUDIO ANTENNA	
Trouble Diagnoses		System Description	
Calibration Procedure for Compass		Wiring Diagram - P/ANT	
WARNING LAMPS		Trouble Diagnoses	
Schematic		Location of Antenna	
Wiring Diagram - WARN		Antenna Rod Replacement	
Fuel Warning Lamp Sensor Check		POWER SUNROOF	
Electrical Components Inspection		System Description	
WARNING CHIME		Wiring Diagram - SROOF	
Component Parts and Harness Connector	120	Trouble Diagnoses	
Location	123	DOOR MIRROR	
System Description		Wiring Diagram - MIRROR	
Wiring Diagram - CHIME		POWER SEAT	
Trouble Diagnoses		Wiring Diagram - SEAT	
FRONT WIPER AND WASHER		HEATED SEAT	
System Description		Wiring Diagram - HSEAT	
Wiring Diagram - WIPER -		Seatback Heating Unit	
Removal and Installation		AUTOMATIC DRIVE POSITIONER	
		Component Parts and Harness Connector	102
Washer Tube Leveut		Location	100
Washer Tube Layout REAR WIPER AND WASHER			
		System Description	
System Description		Schematic	
Wiring Diagram - WIP/R		Wiring Diagram - AUT/DP	
Trouble Diagnoses		On Board Diagnosis	
Removal and Installation		Trouble Diagnoses	
Washer Nozzle Adjustment		AUTOMATIC SPEED CONTROL DEVICE (ASCI	ש)217
Washer Tube Layout		Component Parts and Harness Connector	0.45
Check Valve		Location	
HORN		System Description	
Wiring Diagram - HORN		Schematic	
CIGARETTE LIGHTER		Wiring Diagram - ASCD	
Wiring Diagram - CIGAR		Fail-safe System	
CLOCK		Trouble Diagnoses	
Wiring Diagram - CLOCK		Electrical Component Inspection	
REAR WINDOW DEFOGGER	148	ASCD Wire Adjustment	
Component Parts and Harness Connector		POWER WINDOW	
Location		System Description	
System Description		Schematic	
Wiring Diagram - DEF		Wiring Diagram - WINDOW	
Trouble Diagnoses		Trouble Diagnoses	
Electrical Components Inspection		POWER DOOR LOCK	254
Filomont Chook	151		

	Component Parts and Harness Connector	
	Location	
	System Description	
	Schematic	
	Wiring Diagram - D/LOCK	
	Trouble Diagnoses	
M	ULTI-REMOTE CONTROL SYSTEM	270
	Component Parts and Harness Connector	
	Location	
	System Description	270
	Schematic	
	Wiring Diagram - MULTI	
	Trouble Diagnoses	277
	ID Code Entry Procedure	289
	Remote Controller Battery Replacement	293
VE	EHICLE SECURITY (THEFT WARNING)	
S١	/STEM	294
	Component Parts and Harness Connector	
	Location	294
	System Description	295
	Schematic	298
	Wiring Diagram - VEHSEC	300
	Trouble Diagnoses	307
SI	MART ENTRANCE CONTROL UNIT	320
	Description	320
	Schematic	322
	Smart Entrance Control Unit Inspection Table	324
IN	TEGRATED HOMELINK TRANSMITTER	
	Wiring Diagram - TRNSMT	325
	Trouble Diagnoses	
N۱	VIS (NISSAN VEHICLE IMMOBILIZER SYSTEM	
	NATS)	
	Component Parts and Harness Connetor	
	Location	328
	System Description	
	System Composition	
	Wiring Diagram - NATS	330
	CONSULT-II	
	Trouble Diagnoses	
	How to Replace NVIS (NATS) IMMU	
N	AVIGATION SYSTEM	
	Component Parts Location	
	System Description	
	Schematic	
	Wiring Diagram - NAVI	
	Self-diagnosis Mode	
	Confirmation/Adjustment Mode	
	Setting Mode	
	Trouble diagnoses	
	This Condition is Not Abnormal	
	Program Loading	
	Initialization	

ELECTRICAL UNITS LOCATION399	
Engine Compartment399	MA
Passenger Compartment400	
HARNESS LAYOUT402	
How to Read Harness Layout402	
Outline403	
Main Harness404	LC
Engine Room Harness406	
Engine Control Harness408	
Body Harness LH410	EG
Body Harness RH411	
Back Door Harness412	
Engine and Transmission Harness413	FE
Room Lamp Harness414	
Air Bag Harness415	
Front Door Harness416	CL
Rear Door Harness417	
BULB SPECIFICATIONS418	MT
Headlamp418	ם מטט
Exterior Lamp418	
Interior Lamp418	AT
WIRING DIAGRAM CODES (CELL CODES)419	
SMART C/U - NEW	TF
SWART C/O - NEW	
POWER SUPPLY ROUTING421	66
Schematic421	PD
Wiring Diagram - POWER422	
Inspection428	
GROUND 429	
Ground Distribution429	
COMBINATION SWITCH440	SU
Check440	
Replacement441	
STEERING SWITCH442	BR
Check442	
HEADLAMP (FOR USA) 443	ST
Component Parts and Harness Connector	⊌ II
Location443	
System Description443	RS
Schematic446	
Wiring Diagram - H/LAMP447	
CONSULT-II Inspection Procedure450	BT
CONSULT-II Application Items451	
Trouble Diagnoses451	ПΨ
Bulb Replacement452	HA
Aiming Adjustment453	
HEADLAMP (FOR CANADA) - DAYTIME LIGHT	SC
SYSTEM - 454	
Component Parts and Harness Connector	
Location454	EL
System Description454	

G[

Wiring Diagram - DTRL	458	Trouble Diagnoses	537
CONSULT-II Inspection Procedure	462	Calibration Procedure for Compass	538
CONSULT-II Application Items	462	WARNING LAMPS	539
Trouble Diagnoses	462	Schematic	539
Bulb Replacement		Wiring Diagram - WARN	540
Aiming Adjustment	466	Fuel Warning Lamp Sensor Check	548
PARKING, LICENSE AND TAIL LAMPS		Electrical Components Inspection	
System Description		WARNING CHIME	
Schematic		Component Parts and Harness Connector	
Wiring Diagram - TAIL/L	469	Location	549
CONSULT-II Inspection Procedure		System Description	
CONSULT-II Application Items		Wiring Diagram - CHIME	
Trouble Diagnoses		CONSULT-II Inspection Procedure	
STOP LAMP		CONSULT-II Application Items	
Wiring Diagram - STOP/L		Trouble Diagnoses	
BACK-UP LAMP		FRONT WIPER AND WASHER	
Wiring Diagram - BACK/L		System Description	
FRONT FOG LAMP		Wiring Diagram - WIPER	
System Description		Removal and Installation	
Wiring Diagram - F/FOG		Washer Nozzle Adjustment	
Aiming Adjustment		Washer Tube Layout	
TURN SIGNAL AND HAZARD WARNING LAMP		REAR WIPER AND WASHER	
System Description		System Description	
Wiring Diagram - TURN		Wiring Diagram - WIP/R	
Trouble Diagnoses		Trouble Diagnoses	
Electrical Components Inspection		Removal and Installation	
ILLUMINATION		Washer Nozzle Adjustment	
System Description		Washer Tube Layout	
Schematic		Check Valve	
		HORN	
Wiring Diagram - ILL	490		
INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS	40E	Wiring Diagram - HORN CIGARETTE LIGHTER	
System Description		Wiring Diagram - CIGAR CLOCK	
Schematic			
Wiring Diagram - INT/L		Wiring Diagram - CLOCK REAR WINDOW DEFOGGER	
CONSULT-II Inspection Procedure			571
CONSULT-II Application Items		Component Parts and Harness Connector	E 7 -
Trouble Diagnoses for Interior Lamp Timer		Location	
METERS AND GAUGES	520	System Description	
Component Parts and Harness Connector	500	Wiring Diagram - DEF	
Location		CONSULT-II Inspection Procedure	
System Description		CONSULT-II Application Items	
Combination Meter		Trouble Diagnoses	
Schematic		Electrical Components Inspection	
Wiring Diagram - METER	525	Filament Check	
Meter/Gauge Operation and Odo/Trip Meter		Filament Repair	
Segment Check in Diagnosis Mode		AUDIO	
Trouble Diagnoses		System Description	
Electrical Components Inspection		Wiring Diagram - AUDIO -/Base System	
COMPASS AND THERMOMETER		Schematic/BOSE System	
System Description		Wiring Diagram - AUDIO -/BOSE System	
Wiring Diagram - COMPAS	536	Trouble Diagnoses	598

Inspection	599	Wiring Diagram - D/LOCK	691	
Audio Unit Removal and Installation	599	CONSULT-II Inspection Procedure	696	M
Wiring Diagram - REMOTE	600	CONSULT-II Application Items	697	
AUDIO ANTENNA	601	Trouble Diagnoses	698	
System Description	601	MULTI-REMOTE CONTROL SYSTEM	711	EN
Wiring Diagram - P/ANT	602	Component Parts and Harness Connector		
Trouble Diagnoses	603	Location	711	LC
Location of Antenna		System Description		LV
Antenna Rod Replacement	603	Schematic		
POWER SUNROOF		Wiring Diagram - MULTI	715	EC
System Description	605	CONSULT-II Inspection Procedure		
Wiring Diagram - SROOF		CONSULT-II Application Items		
CONSULT-II Inspection Procedure		Trouble Diagnoses		FE
CONSULT-II Application Items		ID Code Entry Procedure		
Trouble Diagnoses		Remote Controller Battery Replacement		
DOOR MIRROR		VEHICLE SECURITY (THEFT WARNING)		GL
Wiring Diagram - MIRROR		SYSTEM	739	
POWER SEAT		Component Parts and Harness Connector		Mī
Wiring Diagram - SEAT		Location	739	ו עלעו
HEATED SEAT		System Description		
Wiring Diagram - HSEAT		Schematic		AT
Seatback Heating Unit		Wiring Diagram - VEHSEC		2 40
AUTOMATIC DRIVE POSITIONER		CONSULT-II Inspection Procedure		
Component Parts and Harness Connector		CONSULT-II Application Item		TF
Location	615	Trouble Diagnoses		
System Description		SMART ENTRANCE CONTROL UNIT		
Schematic		Description		PC
Wiring Diagram - AUT/DP		CONSULT-II		
On Board Diagnosis		Schematic		AX
Trouble Diagnoses		Smart Entrance Control Unit Inspection Table		
AUTOMATIC SPEED CONTROL DEVICE		INTEGRATED HOMELINK TRANSMITTER		
Component Parts and Harness Connector	050	Wiring Diagram - TRNSMT		SU
Location	650	Trouble Diagnoses		
System Description		NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM	102	
Schematic		- NATS)	795	BF
Wiring Diagram - ASCD		Component Parts and Harness Connetor	705	
		Location	705	@5r
Fail-safe System		System Description		ST
Trouble Diagnoses				
Electrical Component Inspection		System Composition		RS
ASCD Wire Adjustment POWER WINDOW		Wiring Diagram - NATS CONSULT-II		1110
System Description		Trouble Diagnoses		
•		· · · · · · · · · · · · · · · · · · ·		BT
Schematic		How to Replace NVIS (NATS) IMMU		
Wiring Diagram - WINDOW		NAVIGATION SYSTEM		
CONSULT-II Inspection Procedure		Component Parts Location		HA
CONSULT-II Application Items		System Description		
Trouble Diagnoses		Schematic		@6
POWER DOOR LOCK	689	Wiring Diagram - NAVI		SC
Component Parts and Harness Connector	000	Self-diagnosis Mode		
Location		Confirmation/Adjustment Mode		EL
System Description		Setting Mode		
Schematic	690	Trouble diagnoses	837	

G[

This Condition is Not Abnormal	843
Program Loading	852
Initialization	85
ELECTRICAL UNITS LOCATION	850
Engine Compartment	850
Passenger Compartment	
HARNESS LAYOUT	860
How to Read Harness Layout	860
Outline	
Main Harness	862
Engine Room Harness	86
Engine Control Harness	
Body Harness I H	

Body Harness RH	869
Back Door Harness	870
Engine and Transmission Harness	871
Room Lamp Harness	872
Air Bag Harness	873
Front Door Harness	874
Rear Door Harness	875
BULB SPECIFICATIONS	876
Headlamp	876
Exterior Lamp	876
Interior Lamp	876
WIRING DIAGRAM CODES (CELL CODES)	877

PRECAUTIONS

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER" used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. The SRS system composition which is available to NISSAN MODEL R50 is as follows:

MA

- For a frontal collision
 - The Supplemental Restraint System consists of driver air bag module (located in the center of the steering wheel), front passenger air bag module (located on the instrument panel on passenger side), seat belt pre-tensioners, a diagnosis sensor unit, warning lamp, wiring harness and spiral cable.

- For a side collision
 - The Supplemental Restraint System consists of side air bag module (located in the outer side of front seat), satellite sensor, diagnosis sensor unit (one of components of air bags for a frontal collision), wiring harness, warning lamp (one of components of air bags for a frontal collision).

EG

LC

Information necessary to service the system safely is included in the RS section of this Service Manual.

WARNING:

• To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.

CL

• Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the RS section.

• Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified with yellow harness connector (and with yellow harness protector or yellow insulation tape before the harness connectors).

NAFL0002

Wiring Diagrams and Trouble Diagnosis

When you read wiring diagrams, refer to the following:

GI-11, "HOW TO READ WIRING DIAGRAMS"

PD

• EL-12 (Previous), EL-421 (New), "POWER SUPPLY ROUTING" for power distribution circuit When you perform trouble diagnosis, refer to the following:

AX

GI-35, "HOW TO FOLLOW TEST GROUPS IN TROUBLE DIAGNOSES"

• GI-24, "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT" Check for any Service bulletins before servicing the vehicle.

- -

BR

ST

RS

BT

HA

SC

EL

Description

HARNESS CONNECTOR (TAB-LOCKING TYPE)

NAEL0003

NAEL0003S01


- The tab-locking type connectors help prevent accidental looseness or disconnection.
- The tab-locking type connectors are disconnected by pushing or lifting the locking tab(s). Refer to the illustration below.

Refer to the next page for description of the slide-locking type connector.

CAUTION:

Do not pull the harness when disconnecting the connector.

[Example]

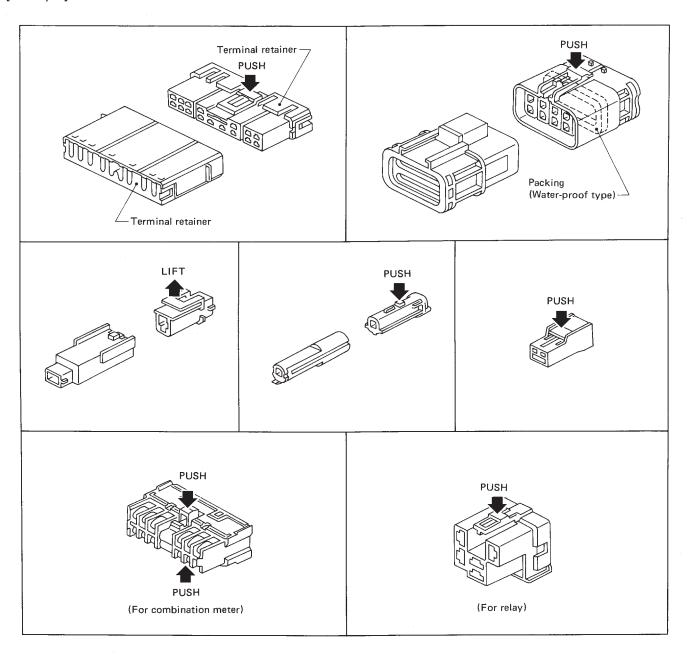

SEL769D

MA

LC


HARNESS CONNECTOR (SLIDE-LOCKING TYPE)

- A new style slide-locking type connector is used on certain systems and components, especially those related to OBD.
- The slide-locking type connectors help prevent incomplete locking and accidental looseness or disconnection.
- The slide-locking type connectors are disconnected by pushing or pulling the slider. Refer to the illustration below.

CAUTION:

- Do not pull the harness or wires when disconnecting the connector.
- Be careful not to damage the connector support bracket when disconnecting the connector.

[Example]

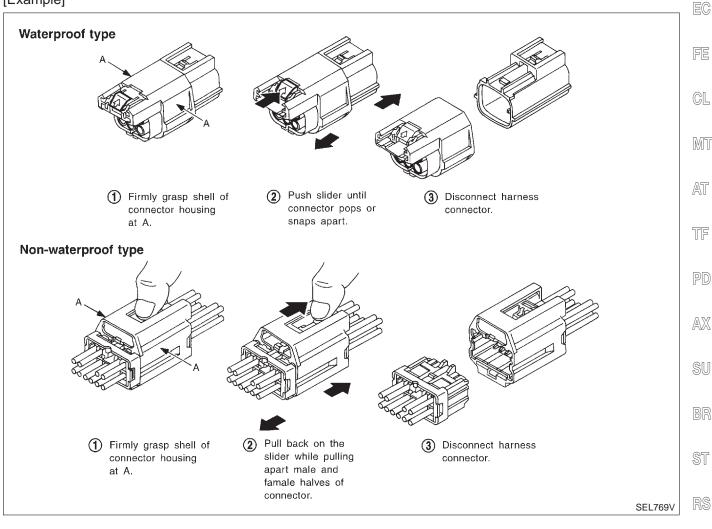

HA

SC


Description

NORMAL OPEN, NORMAL CLOSED AND MIXED TYPE RELAYS

NAEL0004

NAEL0004S01

Relays can mainly be divided into three types: normal open, normal closed and mixed type relays.

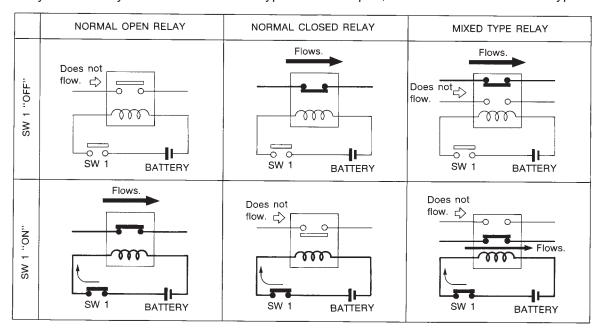


SEL881H

TYPE OF STANDARDIZED RELAYS

NAEL0004S02


1M	1 Make	2M	2 Make
1T	1 Transfer	1M-1B	1 Make 1 Break

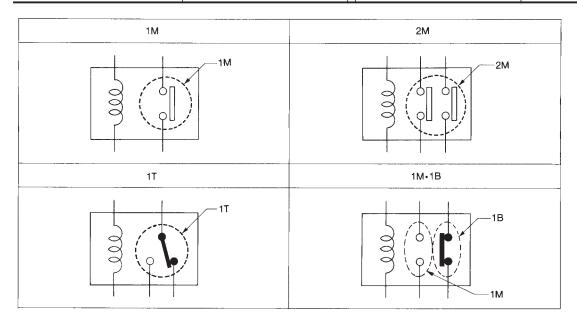

SEL882H

STANDARDIZED RELAY


Description (Cont'd)

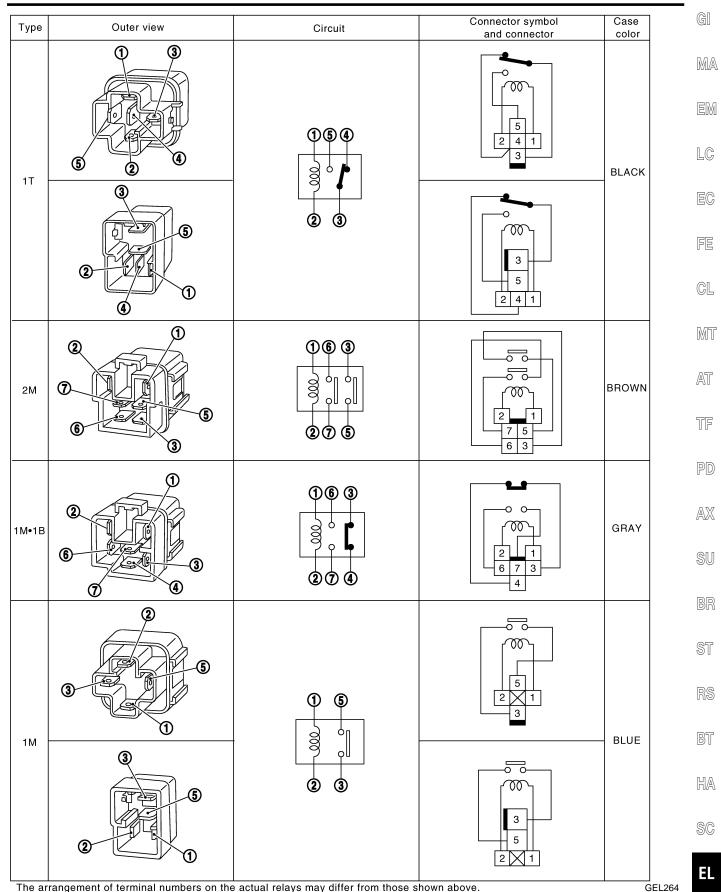


The arrangement of terminal numbers on the actual relays may differ from those shown above.


Schematic

NAEL0005

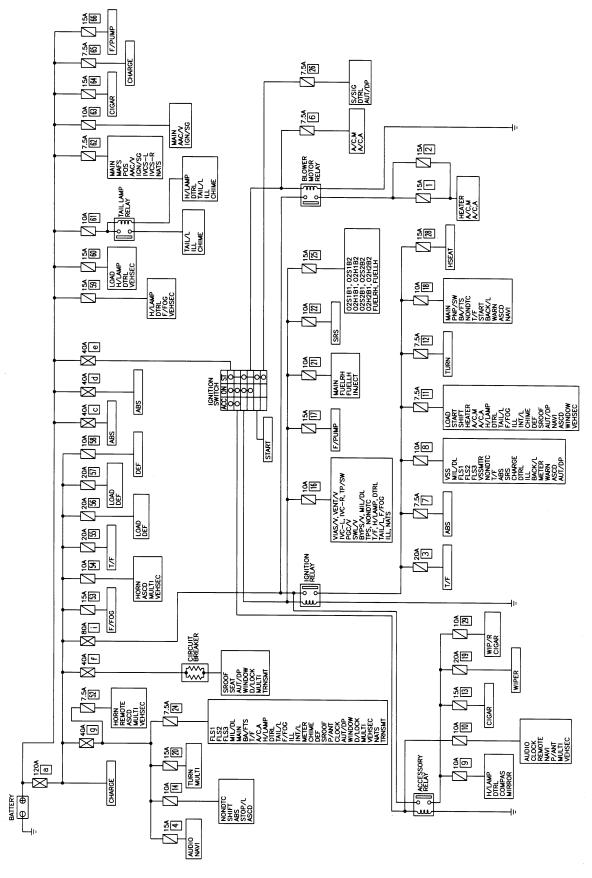

MEL323N

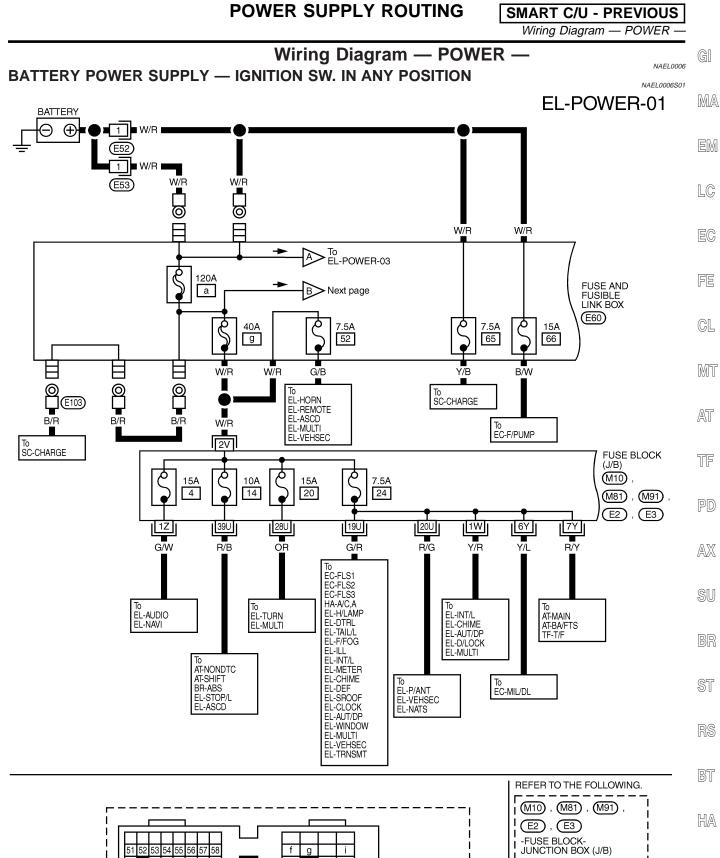


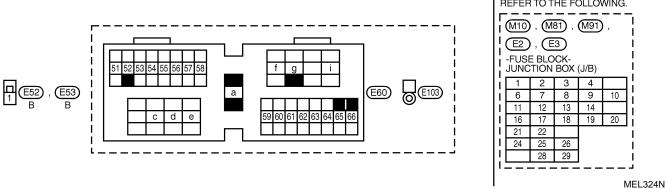


SC


EL


EL-POWER-02

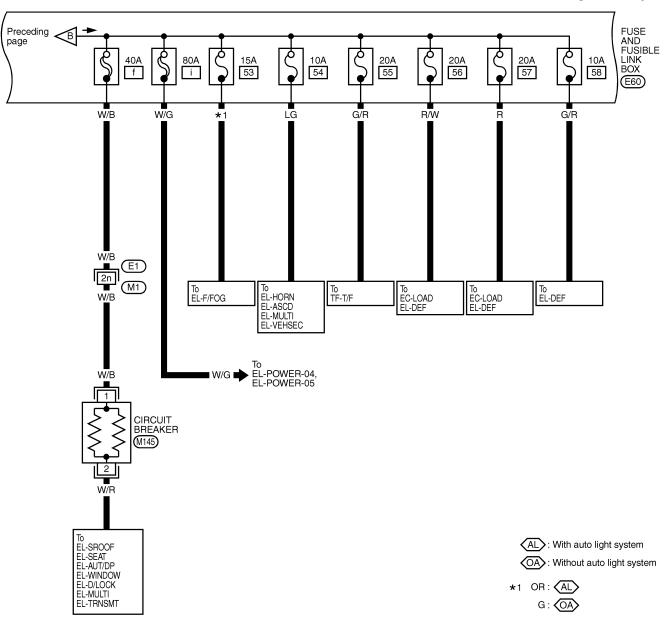

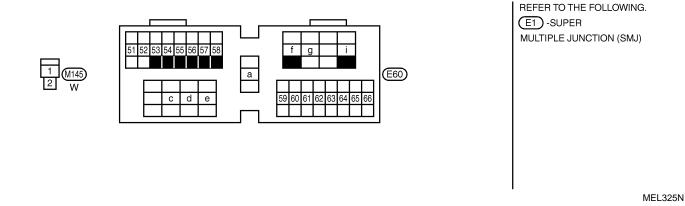


Wiring Diagram — POWER — (Cont'd)

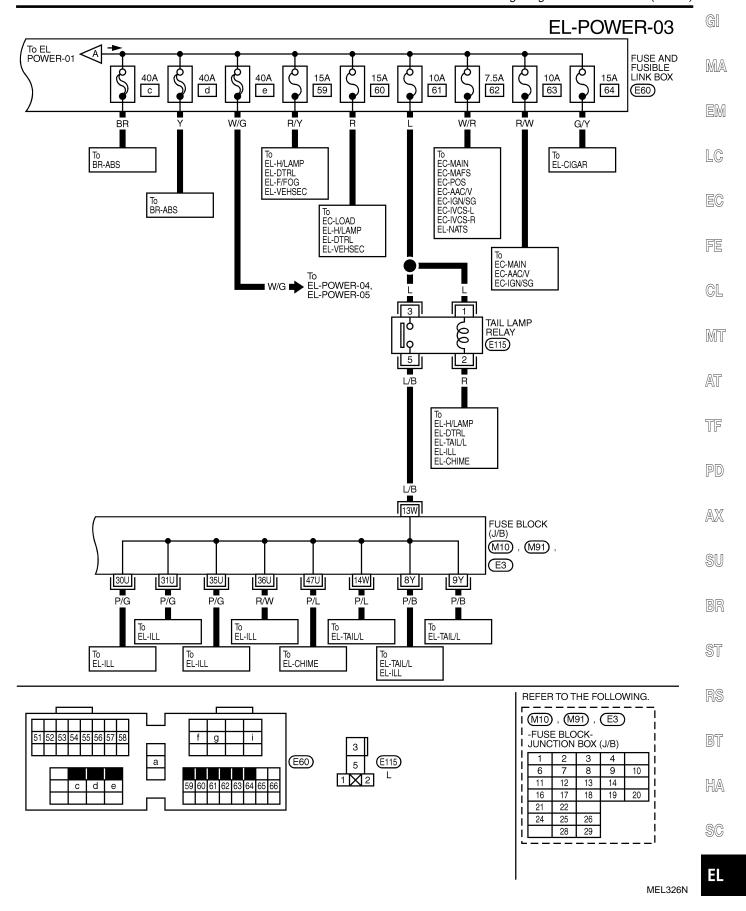

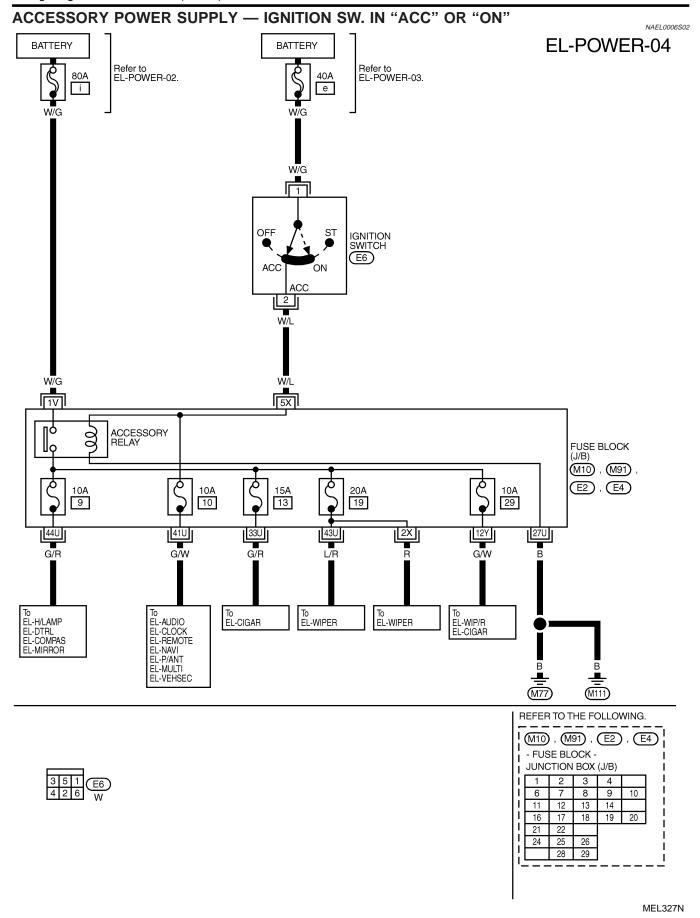


MEL328N

[DX

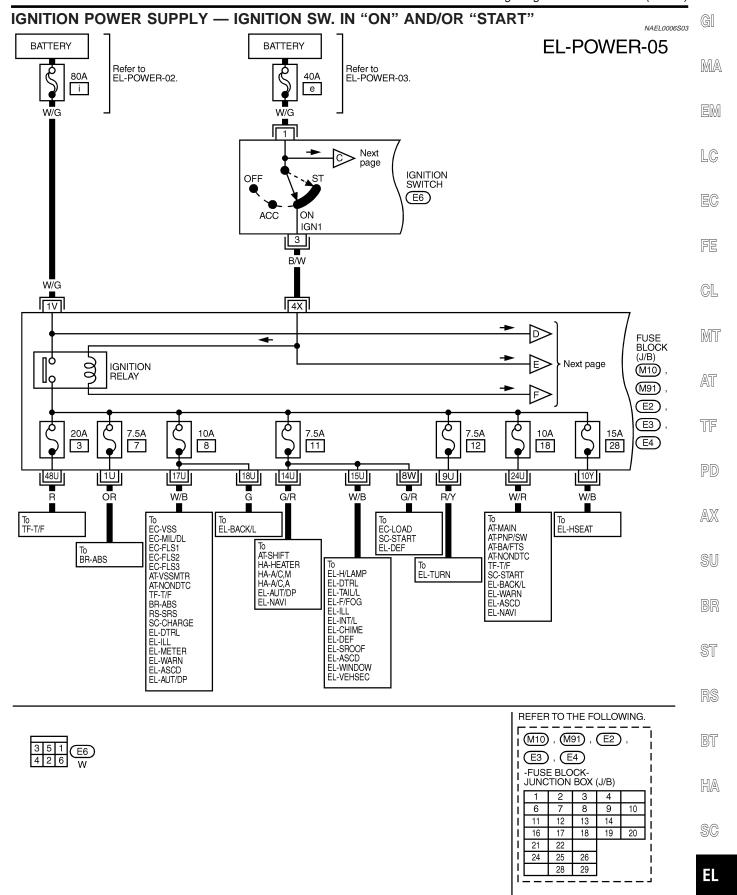

EL-POWER-06

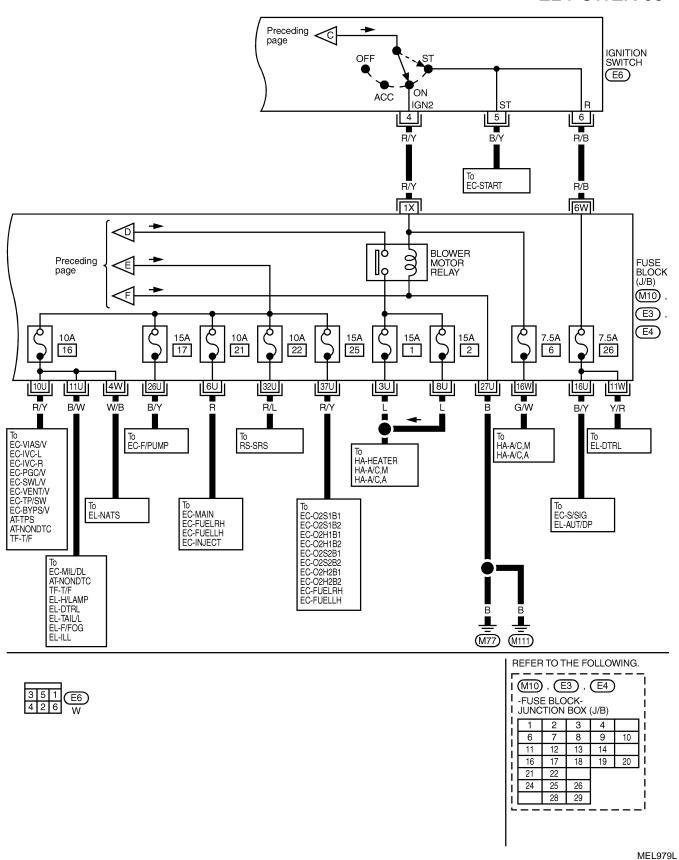



POWER SUPPLY ROUTING

SMART C/U - PREVIOUS

Inspection

NAEL0007

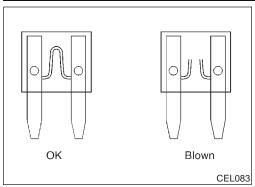

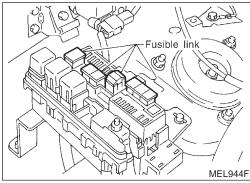

Circuit breaker

SEL109W

Inspection

FUSE

If fuse is blown, be sure to eliminate cause of problem before installing new fuse.

MA

- Use fuse of specified rating. Never use fuse of more than specified rating.
- Do not partially install fuse; always insert it into fuse
- Remove fuse for "ELECTRICAL PARTS (BAT)" if vehicle is not used for a long period of time.

holder properly.

FUSIBLE LINK

NAFL0007S02

A melted fusible link can be detected either by visual inspection or by feeling with finger tip. If its condition is questionable, use circuit tester or test lamp.

EG

CAUTION:

- If fusible link should melt, it is possible that critical circuit (power supply or large current carrying circuit) is shorted. In such a case, carefully check and eliminate cause of problem.
 - MT
- Never wrap outside of fusible link with vinyl tape. Important: Never let fusible link touch any other wiring harness, vinyl or rubber parts.



AX

AT

TF



SU


The PTC thermistor generates heat in response to current flow. The temperature (and resistance) of the thermistor element varies with current flow. Excessive current flow will cause the element's temperature to rise. When the temperature reaches a specified level, the electrical resistance will rise sharply to control the circuit current.

Reduced current flow will cause the element to cool. Resistance falls accordingly and normal circuit current flow is allowed to resume.

BT

HA


SC

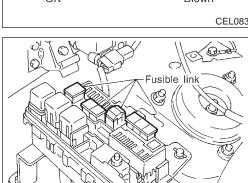


Ground Distribution

MAIN HARNESS


NAEL0008 NAEL0008S01

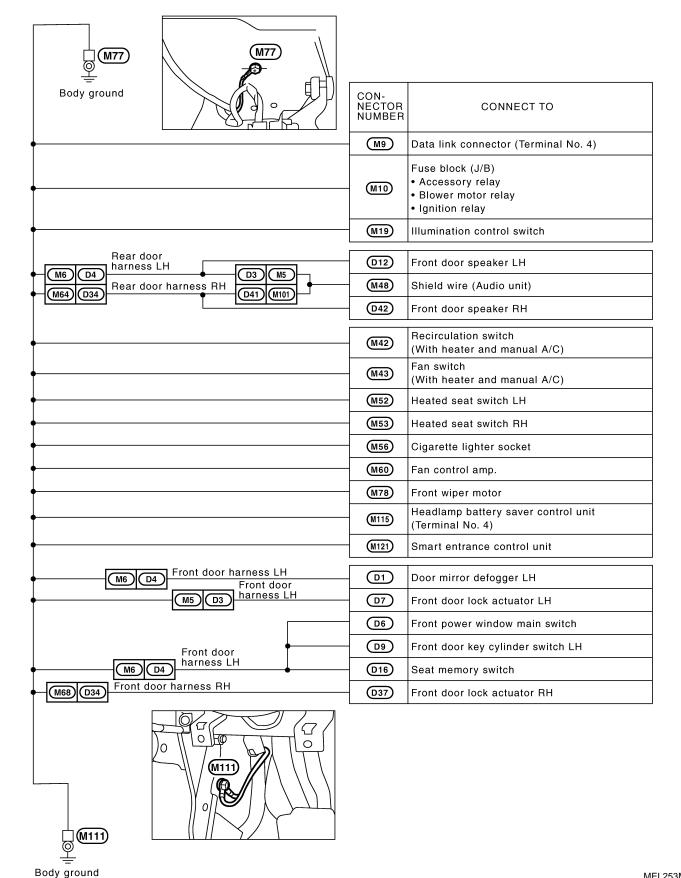

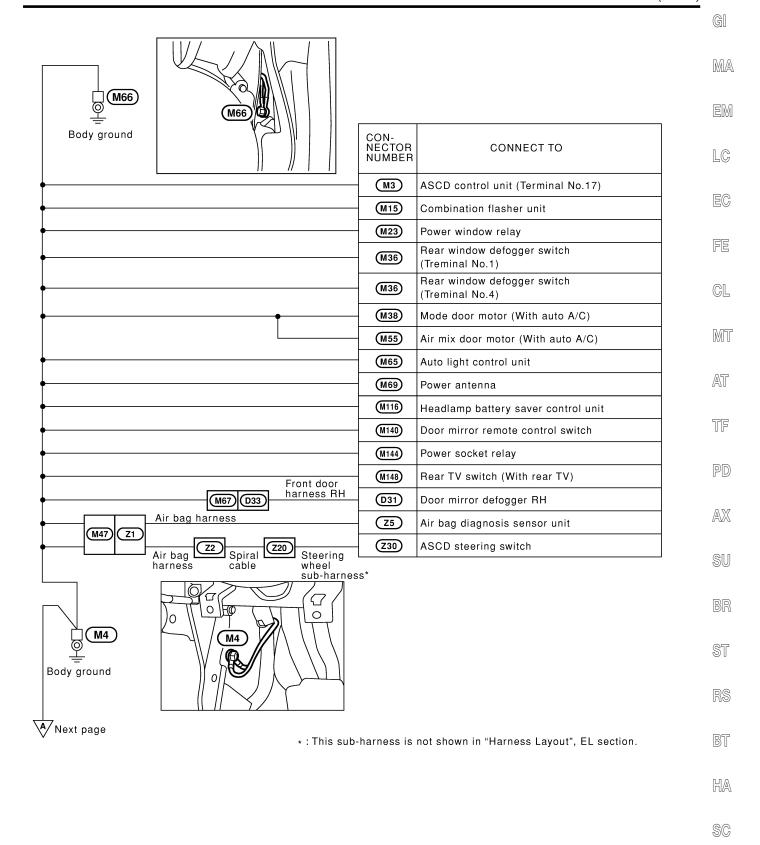

MEL306N

EL

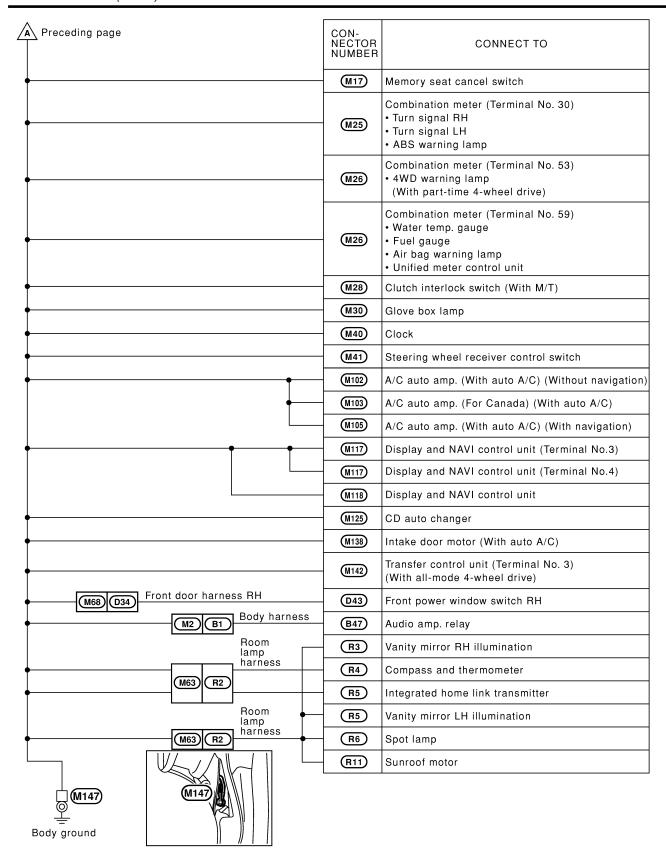


MEL307N


Ground Distribution (Cont'd)


ENGINE ROOM HARNESS

GI NAEL0008S02

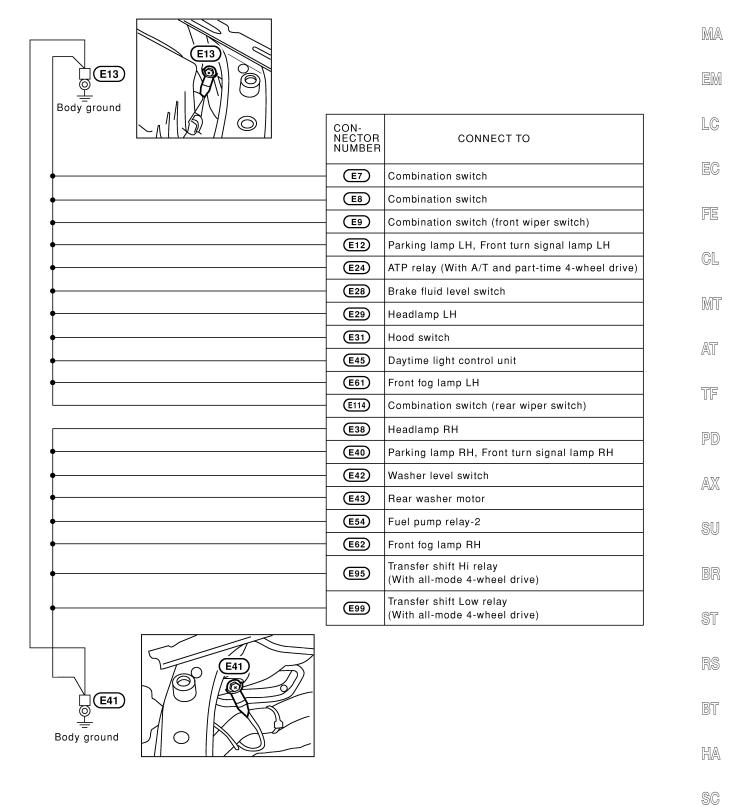


MEL441N

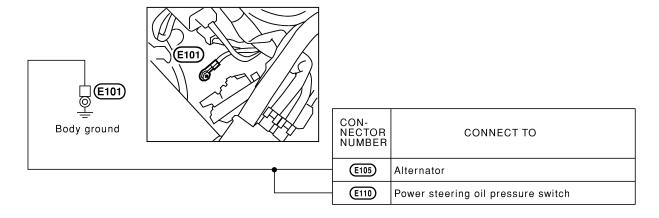


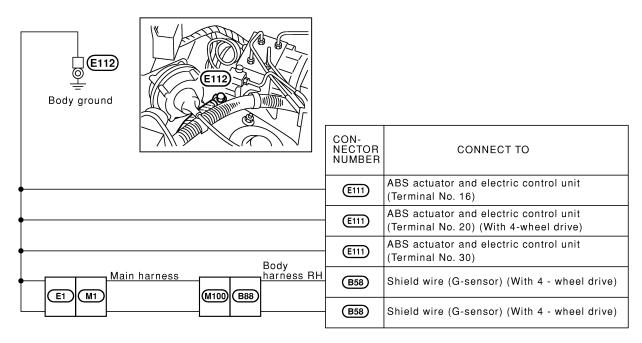


ENGINE CONTROL HARNESS

NAEL0008S03

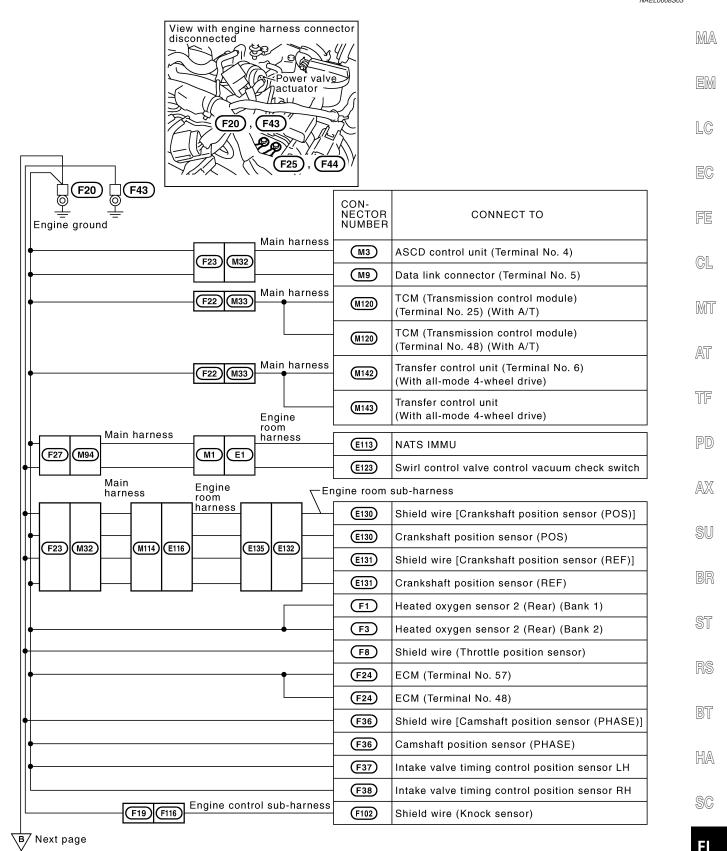


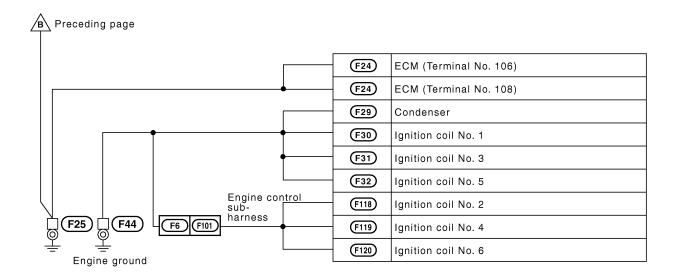

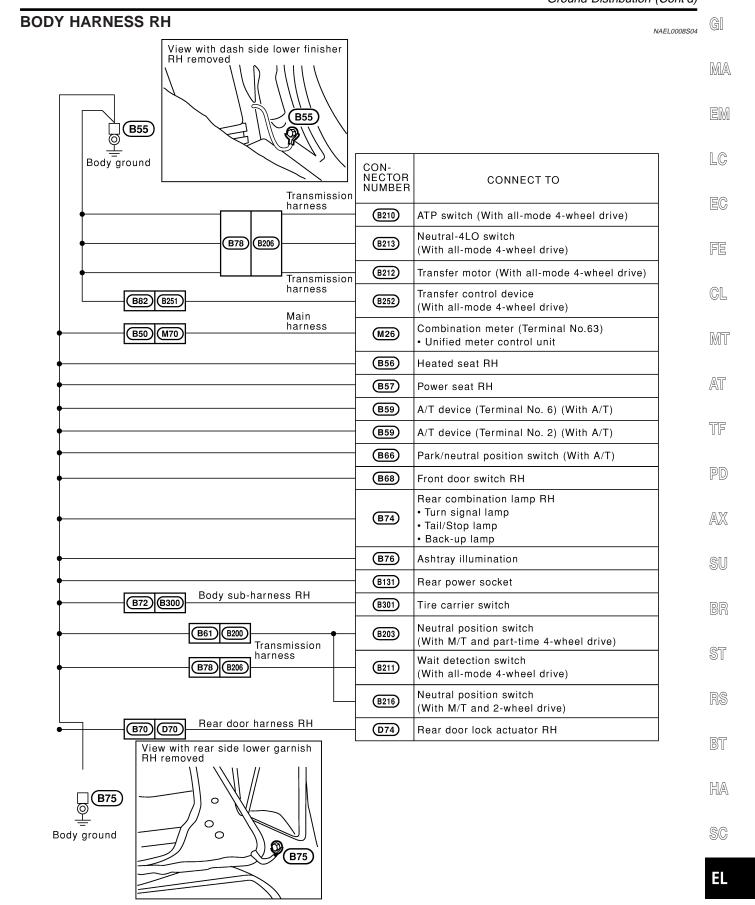


BODY HARNESS LH

NAFL0008S05

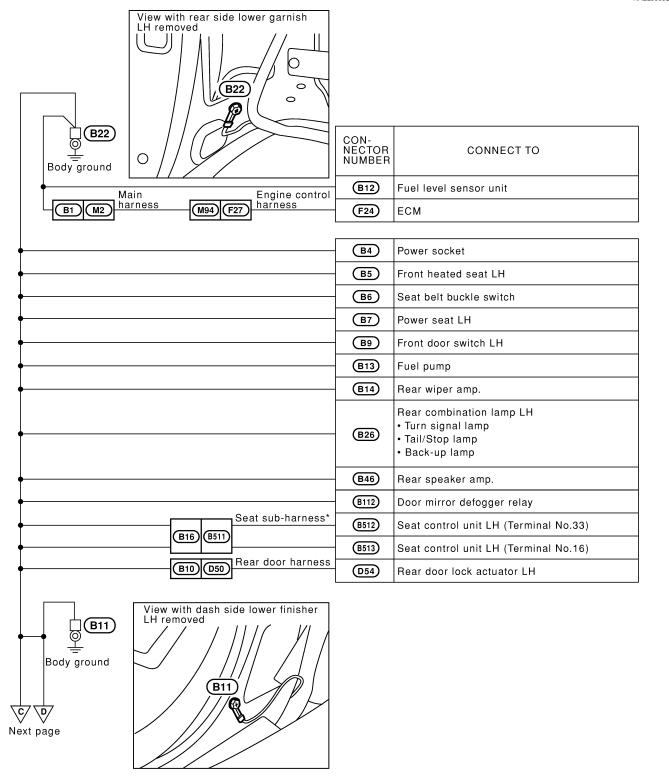


*: This sub-harness is not shown in "Harness Layout", EL section.

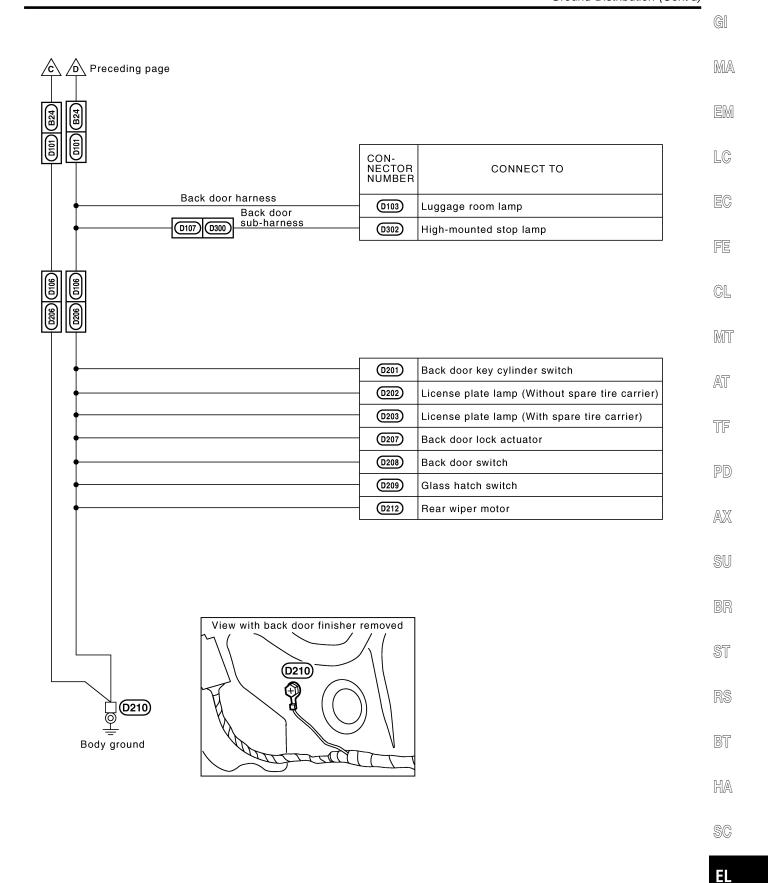


MEL260M

BODY HARNESS

NAEL0008S07

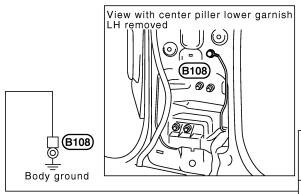


CON- NECTOR NUMBER	CONNECT TO
B107	Shield wire (Satellite sensor LH)

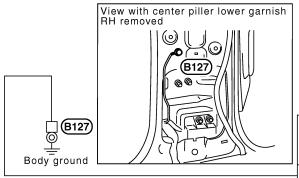

	CON- NECTOR NUMBER	CONNECT TO
_	B128	Shield wire (Satellite sensor RH)

MEL151M

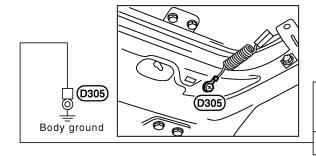

CON- NECTOR NUMBER	CONNECT TO	
(D304)	Rear window defogger	

MEL152M

Check

Check

NAEL0009

G[

EC

FE

CL

MT

AT

TF

PD

AX

SU


BR


ST

RS


BT


HA

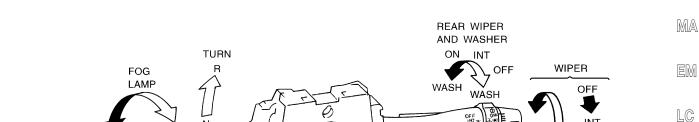

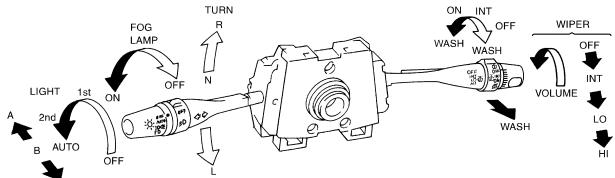

С

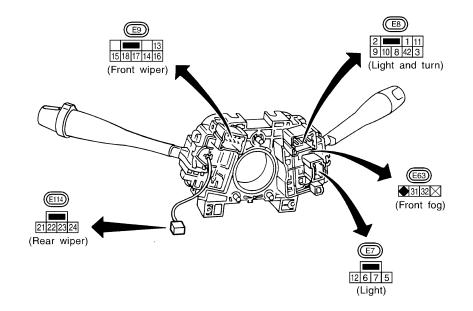

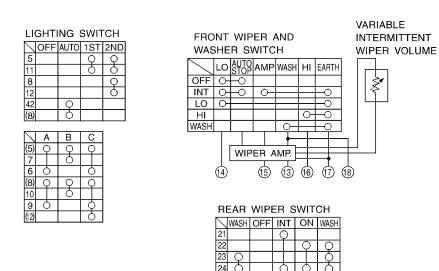


FOG LA	MP					
SWITCH						
OFF	ON					
31	Q					
32	\Diamond					
TURN SIGNAL						
LAMP SWITCH						
\rightarrow L N R						

URN SIGNAL						
AMP SWITCH						
$\overline{\ }$	L	N	R			
1	\circ		\circ			
2			O			
3	Q					

SC


EL

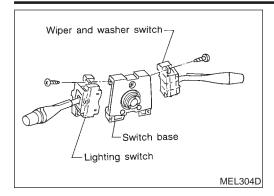


Replacement

For removal and installation of spiral cable, refer to RS-19, "Installation — Air Bag Module and Spiral Cable".

Each switch can be replaced without removing combination switch base.

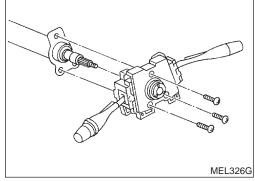


To remove combination switch base, remove base attaching

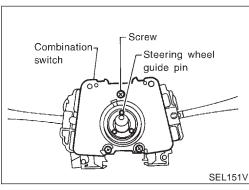


Before installing the steering wheel, align the steering wheel guide pins with the screws which secure the combination switch as shown in the left figure.

MEL322N

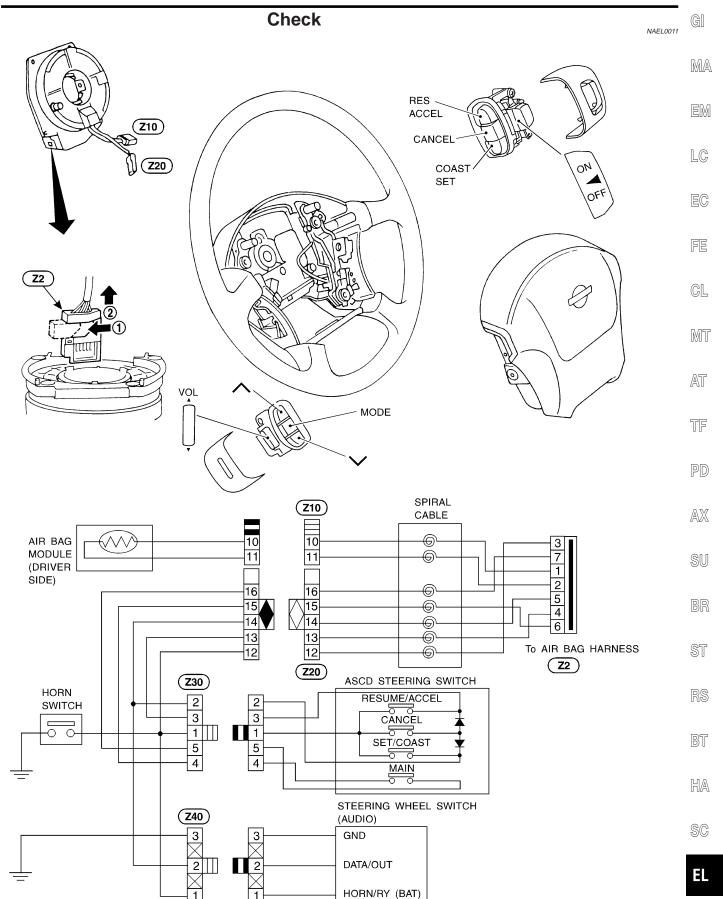

Component Parts and Harness Connector Location

NAEL0159

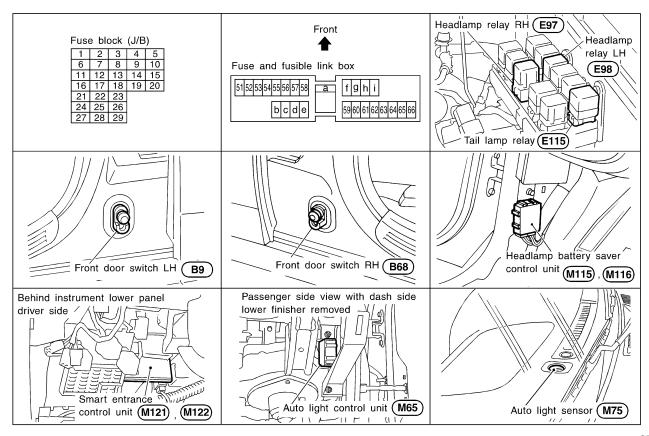

SEL460X

System Description

The headlamp operation is controlled by the lighting switch which is built into the combination switch and headlamp battery saver control unit. And the headlamp battery saver system is controlled by the headlamp battery saver control unit and smart entrance control unit.

OUTLINE NAEL0188S10

Power is supplied at all times

- to headlamp LH relay terminals 1 and 3
- through 15A fuse (No. 60, located in the fuse and fusible link box), and
- to headlamp RH relay terminals 1 and 3
- through 15A fuse (No. 59, located in the fuse and fusible link box), and
- to headlamp battery saver control unit terminal 7, and
- to smart entrance control unit terminal 10
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].

When the ignition switch is in the ON or START position, power is supplied

- to headlamp battery saver control unit terminal 1
- through 10A fuse [No. 16, located in the fuse block (J/B)], and
- to headlamp battery saver control unit terminal 10,
- to auto light control unit terminal 1 and
- to smart entrance control unit terminal 33
- through 7.5A fuse [No. 11, located in the fuse block (J/B)].

When the ignition switch is in the ACC or ON position, power is supplied

- to auto light control unit terminal 2
- through 10A fuse [No. 9, located in the fuse block (J/B)]

Ground is supplied

HEADLAMP (FOR USA)

SMART C/U - PREVIOUS

System Description (Cont'd) to headlamp battery saver control unit terminals 4 and 11 GI through body grounds M77 and M111, and M4, M66 and M147 to auto light control unit terminal 5 MA through body grounds M4, M66 and M147. Power Supply to Low Beam and High Beam NAEL0188S1001 When lighting switch is in 2ND or PASS position, ground is supplied to headlamp relay (LH and RH) terminal 2 from headlamp battery saver control unit terminals 2 and 8 through headlamp battery saver control unit terminals 3 and 9, LC from lighting switch terminal 12. Headlamp relays (LH and RH) are energized and then power is supplied to headlamps (LH and RH). EG LOW BEAM OPERATION When the lighting switch is turned to the 2ND position and placed in LOW ("B") position, power is supplied from terminal 5 of each headlamp relay to terminal 3 of each headlamp Ground is supplied GL to headlamp LH terminal 2 through lighting switch terminals 7 and 5 MIT through body grounds E13 and E41. to headlamp RH terminal 2 through lighting switch terminals 10 and 8 AT through body grounds E13 and 41. With power and ground supplied, the headlamp(s) will illuminate. TF HIGH BEAM OPERATION/FLASH-TO-PASS OPERATION When the lighting switch is turned to the 2ND position and placed in HIGH ("A") position or PASS ("C") position, power is supplied from terminal 5 of headlamp LH relay to terminal 3 of headlamp LH and AX to combination meter terminal 26 for the HIGH BEAM indicator from terminal 5 of headlamp RH relay to terminal 3 of headlamp RH. Ground is supplied to headlamp LH terminal 1 and to combination meter terminal 27 for the HIGH BEAM indicator through lighting switch terminals 6 and 5 through body grounds E13 and E41, and to headlamp RH terminal 1 through lighting switch terminals 9 and 8 through body grounds E13 and E41. With power and ground supplied, the high beams and the high beam indicator illuminate.

BATTERY SAVER CONTROL

When the ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps illuminate, the RAP signal is supplied to terminal 10 of the headlamp battery saver control unit from smart entrance control unit terminal 5.

After counting 45 seconds by the RAP signal from the smart entrance control unit to headlamp battery saver control unit, the ground supply to terminal 2 of the headlamp LH and RH relay from headlamp battery saver control unit terminals 2 and 8 is terminated.

Then the headlamps are turned off.

The headlamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps are illuminated.

When the lighting switch is turned from OFF to 2ND after headlamps are turned to off by the battery saver D control, ground is supplied

EL

HA

SC

System Description (Cont'd)

- to headlamp LH and RH relays terminal 1 from headlamp battery saver control unit terminals 2 and 8
- through headlamp battery saver control unit terminals 3 and 9, and
- through lighting switch terminal 12.

Then headlamps illuminate again.

AUTO LIGHT OPERATION

NAEL0188S13

When lighting switch is in "AUTO" position, ground is supplied

- to auto light control unit terminal 10
- from lighting switch terminal 42.

When ignition switch is turn to "ON" or "START" position and outside brightness is darker than prescribed level. Ground is supplied

- to headlamp relay LH and RH terminals 2
- through battery saver control unit
- from auto light control unit terminal 6, and
- to tail lamp relay terminal 2
- through battery saver control unit
- from auto light control unit terminal 7.

Then both headlamp relays and tail lamp relay are energized, headlamps (low or high) and tail lamps are illuminate according to switch position.

Auto light operation allows headlamps and tail lamps to go off when

- Ignition switch is turned to "OFF" position or
- Outside brightness is brighter than prescribed level.

NOTE:


The delay time varies up to maximum of 20 seconds as the outside brightness changes.


For parking license and tail lamp auto operation, refer to "PARKING, LICENSE AND TAIL LAMPS".


VEHICLE SECURITY SYSTEM

SYSTEM" (EL-296).

The vehicle security system will flash the low beams if the system is triggered. Refer to "VEHICLE SECURITY

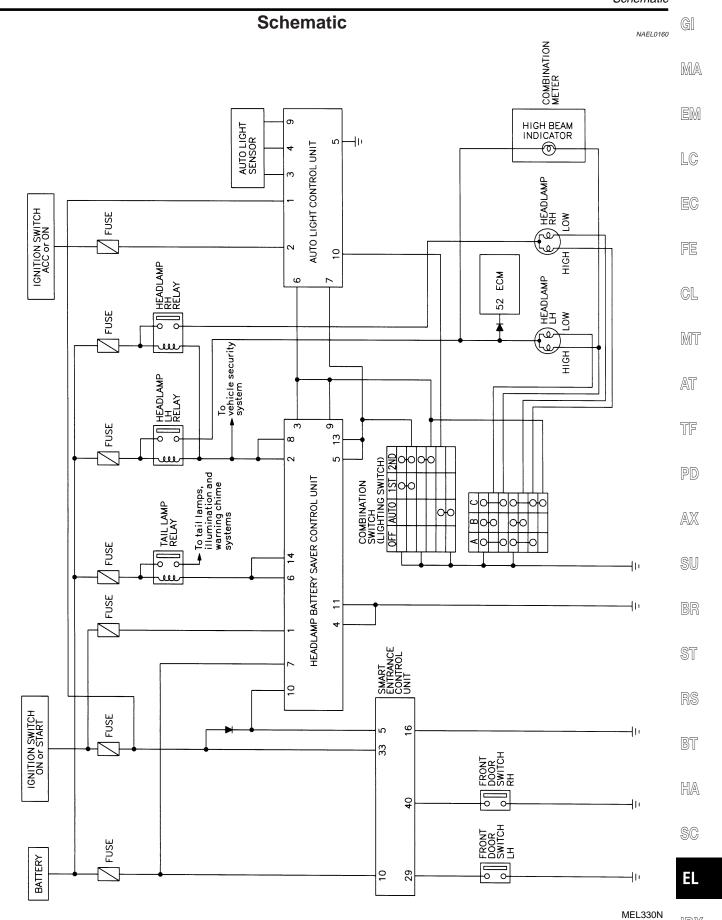

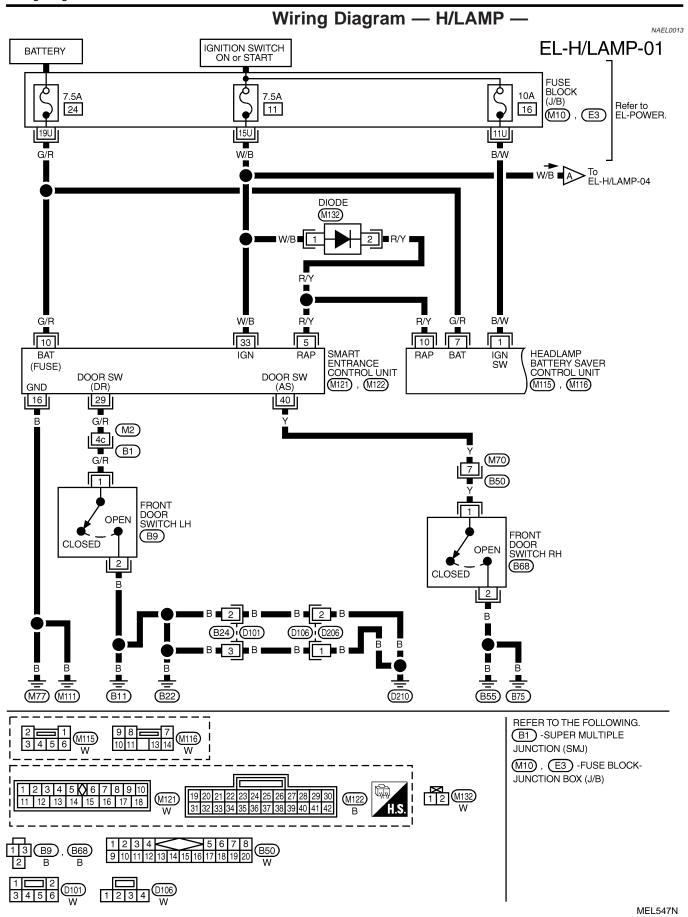


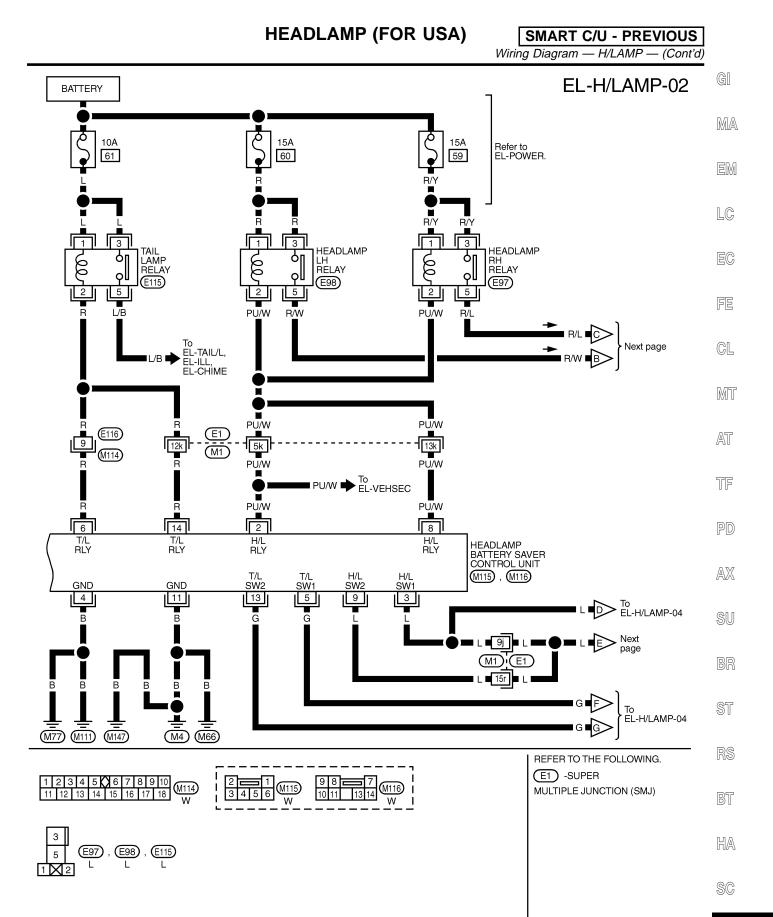


MEL333N

EL

EL-H/LAMP-03

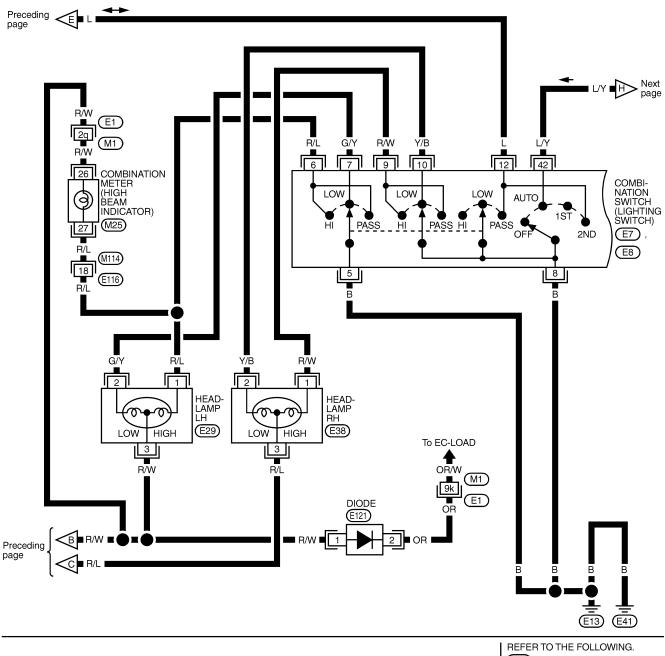

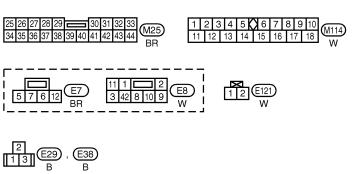


REFER TO THE FOLLOWING.

(E1) -SUPER

MULTIPLE JUNCTION (SMJ)

MEL983L

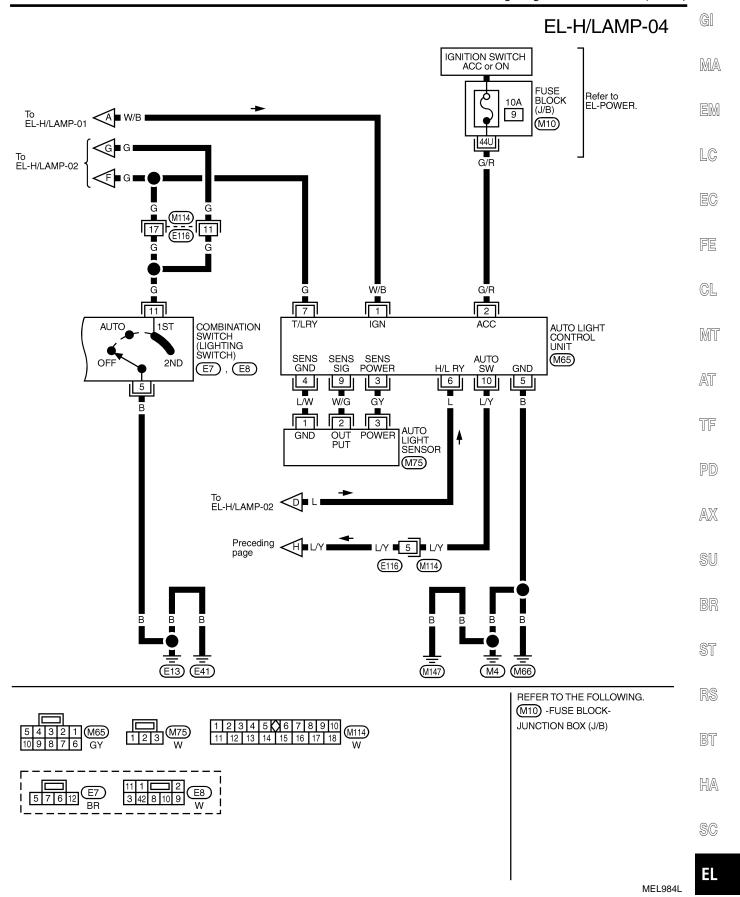

Trouble Diagnoses

NAEL0189									
Symptom	Possible cause	Repair order							
Neither headlamp operates.	 7.5A fuse Headlamp relay circuit Lighting switch Lighting switch ground circuit Headlamp battery saver control unit 	 Check 7.5A fuse [No. 24, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 7 of headlamp battery saver control unit. Check between battery saver control unit and head lamp relays (LH and RH). Check Lighting switch. Check harness between lighting switch terminal 8 and ground. Check headlamp battery saver control unit. (EL-43) 							
Headlamp LH (low and high beam) does not operate, but headlamp RH (low and high beam) does operate.	1. 15A fuse 2. Headlamp LH relay 3. Headlamp LH relay circuit	 Check 15A fuse (No. 60, located in fusible link and fuse box). Verify battery positive voltage is present at terminals 1 and 3 of headlamp LH relay. Check headlamp LH relay. Check harness between headlamp LH relay and headlamp battery saver control unit. 							
Headlamp RH (low and high beam) does not operate, but headlamp LH (low and high beam) does operate.	1. 15A fuse 2. Headlamp RH relay 3. Headlamp RH relay circuit	 Check 15A fuse (No. 59, located in fusible link and fuse box). Verify battery positive voltage is present at terminals 1 and 3 of headlamp RH relay. Check headlamp RH relay. Check harness between headlamp RH relay and headlamp battery saver control unit. 							
LH high beam does not operate, but LH low beam operates.	 Bulb Open in the LH high beams circuit Lighting switch Lighting switch ground circuit 	 Check bulb. Check harness between headlamp LH and lighting switch for open circuit. Check lighting switch. Check harness between lighting switch and ground 							
LH low beam does not operate, but LH high beam operates.	Bulb Open in the LH low beam circuit Lighting switch Lighting switch ground circuit	 Check bulb. Check harness between headlamp LH and lighting switch for open circuit. Check lighting switch. Check harness between lighting switch and ground 							
RH high beam does not operate, but RH low beam operates.	Bulb Open in the RH high beams circuit Lighting switch Lighting switch ground circuit	 Check bulb. Check harness between headlamp RH and lighting switch for open circuit. Check lighting switch. Check harness between lighting switch and ground 							
RH low beam does not operate, but RH high beam operates.	Bulb Open in the RH low beam circuit Lighting switch Lighting switch ground circuit	 Check bulb. Check harness between headlamp RH and lighting switch for open circuit. Check lighting switch. Check harness between lighting switch and ground 							
High beam indicator does not work.	Bulb Open in high beam circuit	Check bulb in combination meter. Check the following. Harness between headlamp LH relay and combination meter for an open circuit Harness between high beam indicator and lighting switch							

HEADLAMP (FOR USA)

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC


EL

Symptom	Possible cause	Repair order	GI
Battery saver control does not operate properly.	RAP signal circuit Door switch LH or RH circuit Lighting switch circuit Headlamp battery saver control	Check harness between headlamp battery saver control unit terminal 10 and smart entrance control unit terminal 5 for open or short circuit. Check the following.	MA
	unit 5. Smart entrance control unit	a. Harness between smart entrance control unit and LH or RH door switch for open or short circuit. b. LH or RH door switch ground circuit.	EW
		c. LH or RH door switch.3. Check the following.a. Harness between headlamp battery saver control	LC
		unit terminals 5 or 13 and lighting switch terminal 11 for open or short circuit.	EC
		 b. Harness between lighting switch terminal 5 and ground. c. Lighting switch. 4. Check headlamp battery saver control unit. (EL-43) 5. Check smart entrance control unit. (EL-324) 	FE

BATTERY SAVER CONTROL UNIT INSPECTION TABLE

Terminal No.	Wire color	Item		Condition		Voltage (Approximate value)	
1	B/W	Ignition ON power	Ignition switch	Ignition switch OFF or ACC			
		supply		ON or START		Battery voltage	
2	(LH and RH)		Ignition switch (with lighting switch except OFF or 1ST)	OFF or ACC	More than 45 sec- onds after ignition switch is turned OFF or ACC	Battery voltage	
					Within 45 seconds after ignition switch is turned OFF or ACC	Less than 1V	
				ON or START	Less than 1V		
			Headlamps illuminate	ol.	Less than 1V		
3	3 L Headlamp switch	3 L He	L Headlamp switch Ignition switch ON	Ignition switch ON	Lighting switch	Except PASS or 2ND	Battery voltage
				PASS or 2ND	Less than 1V		
			Headlamps illuminate	Less than 1V			
4	В	Ground		_		_	
5	G	Tail lamp switch	Lighting switch	OFF	Battery voltage		
				1ST or 2ND		Less than 1V	
6	R	R Tail lamp relay Ignition switch (with lighting switch 1ST or 2ND)	(with lighting switch	OFF or ACC	More than 45 sec- onds after ignition switch is turned OFF or ACC	Battery voltage	
			Within 45 seconds after ignition switch is turned OFF or ACC	Less than 1V			
			•	Less than 1V			
			Headlamps illuminate	e by auto light contr	ol.	Less than 1V	
7	G/R	Power supply	— Battery voltage				

Terminal No.	Wire color	Item		Condition		Voltage (Approximate value)				
8	PU/W	Headlamp relays (LH and RH)			More than 45 seconds after ignition switch is turned OFF or ACC	Battery voltage				
					Within 45 seconds after ignition switch is turned OFF or ACC	Less than 1V				
				ON or START		Less than 1V				
			Headlamps illuminate	e by auto light control		Less than 1V				
9	L Headlamp switch Ignition switch ON		Ignition switch ON	Lighting switch	Except PASS or 2ND	Battery voltage				
					PASS or 2ND	Less than 1V				
			Headlamps illuminate	e by auto light control		Less than 1V				
10	R/Y	RAP signal	Ignition switch	Ignition switch OFF or ACC (After more than 45 seconds v switch turned OFF or ACC)		Less than 1V				
				ON or START	Battery voltage					
11	В	Ground		_		_				
13	G	Tail lamp switch	Lighting switch	OFF		Battery voltage				
				1ST or 2ND		Less than 1V				
14			(with lighting switch		(with lighting switch		(with lighting switch		More than 45 sec- onds after ignition switch is turned OFF or ACC	Battery voltage
				Within 45 seconds after ignition switch is turned OFF or ACC	Less than 1V					
				ON or START		Less than 1V				
			Headlamps illuminate	e by auto light control		Less than 1V				

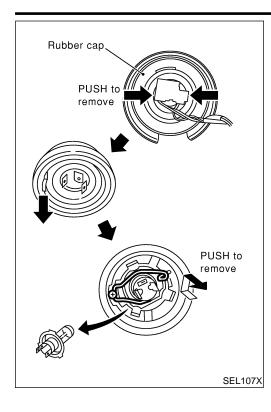

Bulb Replacement

GI

The headlamp is a semi-sealed beam type which uses a replaceable halogen bulb. The bulb can be replaced from the engine compartment side without removing the headlamp body.

MA

Grasp only the plastic base when handling the bulb. Never touch the glass envelope.

EM

Disconnect the battery cable.

Disconnect the harness connector from the back side of the bulb.

LC

3. Pull off the rubber cap.

Remove the headlamp bulb carefully. Do not shake or rotate the bulb when removing it.

EG

Install in the reverse order of removal.

FE

Do not leave headlamp reflector without bulb for a long period of time. Dust, moisture, smoke, etc. entering headlamp body may affect the performance of the headlamp. Remove headlamp bulb from the headlamp reflector just before a replacement bulb is installed.

GL

MIT

AT

Aiming Adjustment

NAEL0191

Before performing aiming adjustment, check the following. For details, refer to the regulations in your own country.

TF

- Keep all tires inflated to correct pressures.
- Place vehicle flat surface.

Turn headlamp low beam on.

PD

See that there is no-load in vehicle (coolant, engine oil filled up to correct level and full fuel tank) other than the driver (or equivalent weight placed in driver's position).

AX

SU



NAEL0191S01



Use adjusting screws to perform aiming adjustment.

First tighten the adjusting screw all the way and then make adjustment by loosening the screw.


ST


BT

HA

SC



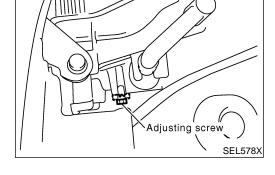

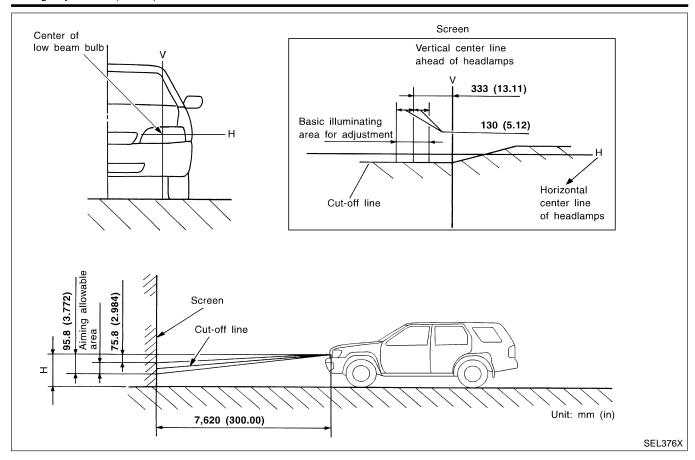

If the vehicle front body has been repaired and/or the headlamp assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

 Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

Component Parts and Harness Connector Location

Component Parts and Harness Connector Location

GI

MA

EM

LC

GL

MIT


AT

TF

PD

AX

NAFL0161

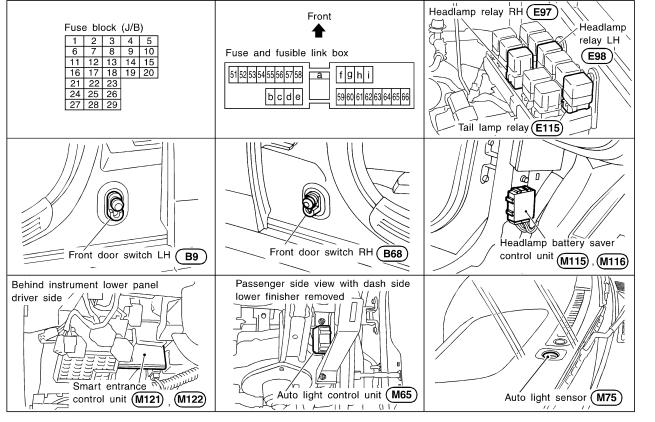

SEL460X

System Description

The headlamp system for Canada vehicles contains a daytime light control unit that activates the high beam headlamps at approximately half illumination whenever the engine is running. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

And battery saver system is controlled by the headlamp battery saver control unit and smart entrance control unit.

Power is supplied at all times

- to headlamp LH relay terminals 1 and 3
- through 15A fuse (No. 60, located in the fuse and fusible link box), and
- to headlamp RH relay terminals 1 and 3
- through 15A fuse (No. 59, located in the fuse and fusible link box), and
- to headlamp battery saver control unit terminal 7, and
- to smart entrance control unit terminal 10
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].

Ground is supplied

- to daytime light control unit terminal 16,
- to auto light control unit terminal 5 and
- to headlamp battery saver control unit terminals 4 and 11.

When the ignition switch is in the ON or START position, power is also supplied

- to daytime light control unit terminal 3,
- to auto light control unit terminal 1,
- to headlamp battery saver control unit terminal 10, and
- to smart entrance control unit terminal 33

BT

HA

SC

SMART C/U - PREVIOUS

System Description (Cont'd)

- through 7.5A fuse [No. 11, located in the fuse block (J/B)], and
- to headlamp battery saver control unit terminal 1
- through 10A fuse [No. 16, located in the fuse block (J/B)].

When the ignition switch is in the START position, power is supplied

- to daytime light control unit terminal 2
- through 7.5A fuse [No. 26, located in the fuse block (J/B)].

When the ignition switch is in the ACC or ON position, power is supplied

- to auto light control unit terminal 2
- through 10A fuse [No. 9, located in the fuse block (J/B)].

HEADLAMP OPERATION

NAEL0192S08

NAEL0192S0801

Power Supply to Low Beam and High Beam

When lighting switch is in 2ND or PASS position, ground is supplied

- to headlamp relay (LH and RH) terminal 2 from headlamp battery saver control unit terminals 2 and 8
- through headlamp battery saver control unit terminal 3 and 9
- from lighting switch terminal 12.

Headlamp relays (LH and RH) are energized.

Low Beam Operation

NAEL0192S0802

When the lighting switch is turned to 2ND and LOW ("B") positions, power is supplied

- to terminal 3 of headlamp LH
- through daytime light control unit terminals 6 and 5
- from headlamp relay LH terminal 5, and
- to terminal 3 of headlamp RH
- through daytime light control unit terminals 7 and 4
- from headlamp relay RH terminal 5.

Ground is supplied

- to terminal 2 of headlamp LH
- through daytime light control unit terminals 11 and 12
- through lighting switch terminals 10 and 8,
- through body grounds E13 and E41, and
- to terminal 2 of headlamp RH
- through daytime light control unit terminals 8 and 15
- through lighting switch terminals 9 and 8

With power and ground supplied, the low beam headlamps illuminate.

High Beam Operation/Flash-to-pass Operation

IAEL0192S0803

When the lighting switch is turned to 2ND and HIGH ("A") or PASS ("C") positions, power is supplied

- to terminal 3 of headlamp LH
- through daytime light control unit terminals 6 and 5
- from headlamp relay LH terminal 5
- to terminal 3 of headlamp RH
- through daytime light control unit terminals 7 and 4
- from headlamp relay RH terminal 5, and
- to combination meter terminal 26 for HIGH BEAM indicator
- from headlamp LH relay terminal 5.

Ground is supplied

- to terminal 1 of headlamp LH
- through daytime light control unit terminals 10 and 13, and
- to combination meter terminal 27 for the HIGH BEAM indicator
- through lighting switch terminals 6 and 5
- through body grounds E13 and E41, and
- to terminal 1 of headlamp RH

SMART C/U - PREVIOUS

System Description (Cont'd) through daytime light control unit terminals 9 and 14 GI through lighting switch terminals 9 and 8 through body grounds E13 and E41. MA With power and ground supplied, the high beam headlamps and HIGH BEAM indicator illuminate. BATTERY SAVER CONTROL When the ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps are illuminated, The RAP signal is supplied to terminal 10 of the headlamp battery saver control unit from smart entrance control unit terminal 5. After counting 45 seconds by the RAP signal from the smart entrance control unit to headlamp battery saver control unit, the ground supply to terminal 2 of headlamp LH and RH relays from headlamp battery saver control unit terminals 2 and 8 is terminated. EG Then headlamps are turned off. The headlamps are turned off when LH or RH door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps are illuminated. When the lighting switch is turned from OFF to 2ND after headlamps are turned to off by the battery saver control, ground is supply to headlamp battery saver control unit terminals 5 and 13 from lighting switch terminal 11, and GL to headlamp LH and RH relays terminal 2 from headlamp battery saver control unit terminals 2 and 8 through headlamp battery saver control unit terminals 3 and 9, and MIT through lighting switch terminal 12. Then headlamps illuminate again. AT **AUTO LIGHT OPERATION** NAEL0192S10 For auto light operation, refer to "HEADLAMP" (EL-36). DAYTIME LIGHT OPERATION With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied through daytime light control unit terminals 3 and 7 to terminal 3 of headlamp RH through terminal 1 of headlamp RH AX to daytime light control unit terminal 9 through daytime light control unit terminal 6 SU to terminal 3 of headlamp LH. Ground is supplied to terminal 1 of headlamp LH. through daytime light control unit terminals 10 and 16 through body grounds E13 and E41. Because the high beam headlamps are now wired in series, they operate at half illumination.

BT

HA

SMART C/U - PREVIOUS

System Description (Cont'd)

OPERATION

VAEL0192S12

After starting the engine with the lighting switch in the "OFF" or "1ST" position, the headlamp high beam automatically turns on. Lighting switch operations other than the above are the same as conventional light systems.

Engine			With engine stopped					With engine running											
Lighting quitab			OFF			1ST			2ND			OFF			1ST			2ND	
Lighting switch		Α	В	С	Α	В	С	Α	В	С	Α	В	С	Α	В	С	Α	В	С
I loodlows	High beam	Х	Х	0	Х	Х	0	0	Х	0	△*	Δ*	0	Δ*	△*	0	0	Х	0
Headlamp	Low beam	Х	Х	Х	Х	Х	Х	Х	0	Х	Х	Х	Х	Х	Х	Х	Х	0	Х
Clearance and tail lan	np	Х	Х	Х	0	0	0	0	0	0	Х	Х	Х	0	0	0	0	0	0
License and instrume lamp	nt illumination	Х	Х	Х	0	0	0	0	0	0	Х	Х	Х	0	0	0	0	0	0

A: "HIGH BEAM" position

B: "LOW BEAM" position

C: "FLASH TO PASS" position

O: Lamp "ON" X: Lamp "OFF"

 \triangle : Lamp dims. (Added functions)

*: When starting the engine with the parking brake released, the daytime light will come ON. When starting the engine with the parking brake pulled, the daytime light won't come ON.

SMART C/U - PREVIOUS Schematic **Schematic** G[NAEL0019 COMBI-NATION METER MA / FUSE CHARGE ALTERNATOR **⊚** HIGH BEAM INDICATOR AUTO LIGHT SENSOR 0 PARKING BRAKE S LC AUTO LIGHT CONTROL UNIT IGNITION SWITCH ACC or ON FUSE To Warning lamp system EC HEAD-RH RH 16 FE DAYTIME LIGHT CONTROL UNIT **№** ∞ رلی б HGH CL IGNITION SWITCH START FUSE LOW HEAD-LH MT 1011 ECM 52 HIGH AT 15131214 / FUSE TF PD FUSE AXHEADLAMP BATTERY SAVER CONTROL UNIT COMBINATION SWITCH (LIGHTING SWITCH) 6 SU To tail lamps, illumination and warning chime systems FUSE BR FUSE ST 2 SMART ENTRANCE CONTROL UNIT RS 0 IGNITION SWITCH ON or START FUSE 16 2 BT FRONT DOOR SWITCH RH 33 HA 4 FRONT DOOR SWITCH LH

MEL989L

þ


29

SC


EL


/ FUSE

BATTERY

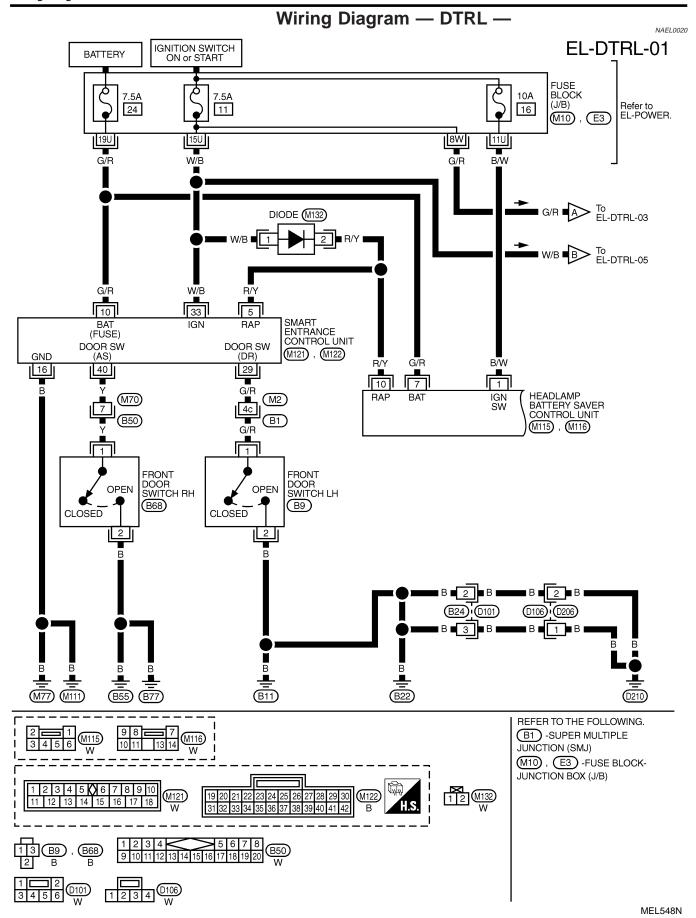


SMART C/U - PREVIOUS

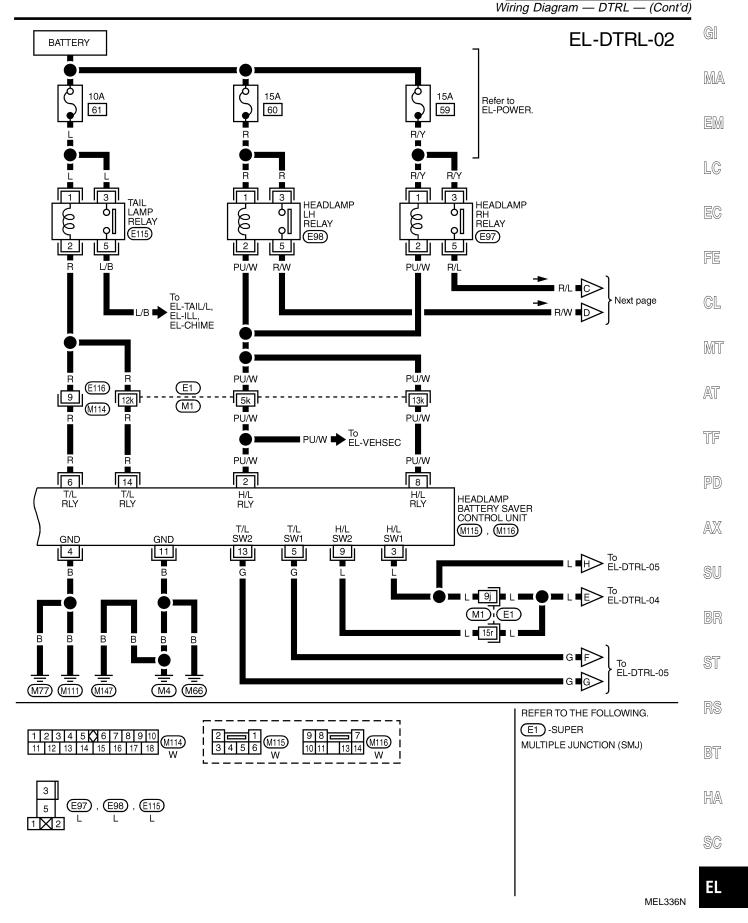


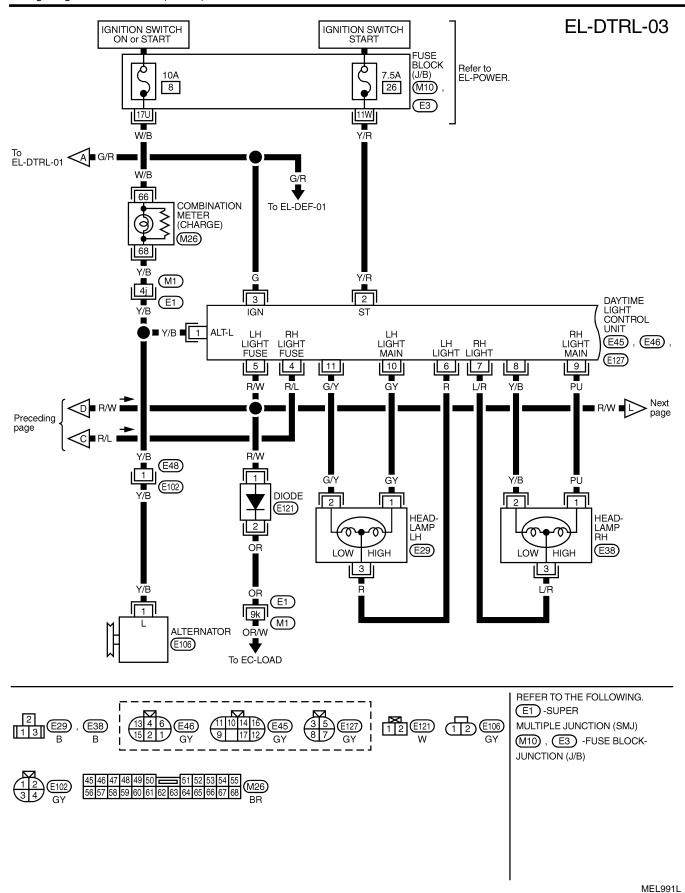


SMART C/U - PREVIOUS

Wiring Diagram — DTRL — (Cont'd)

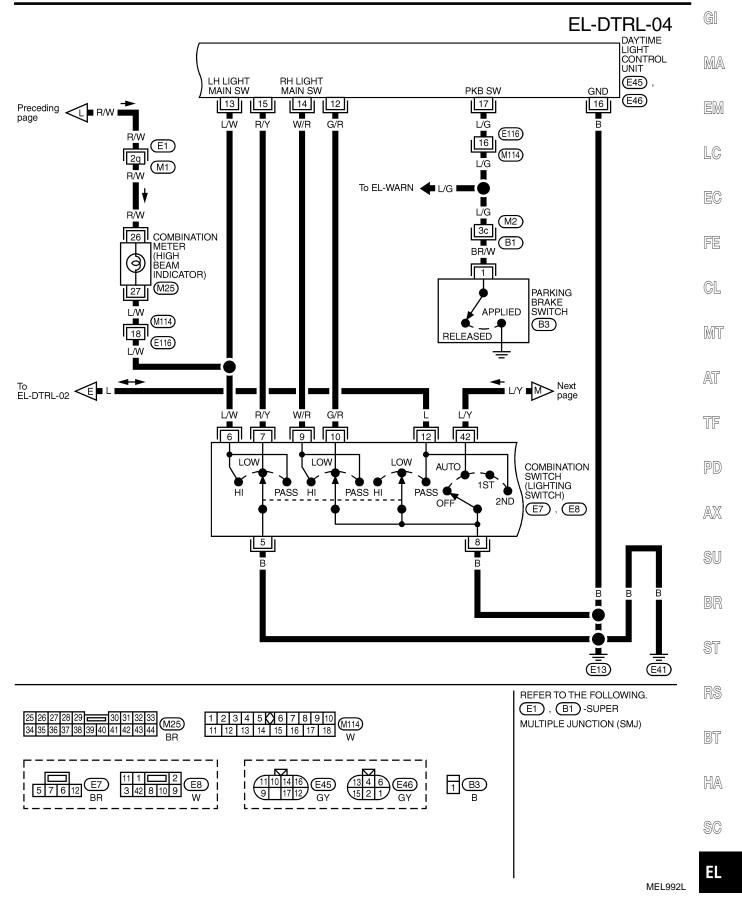

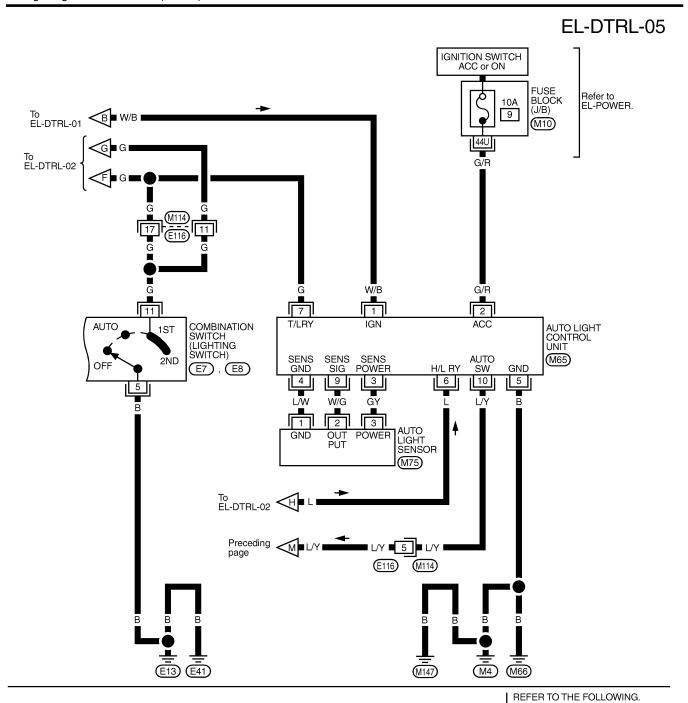

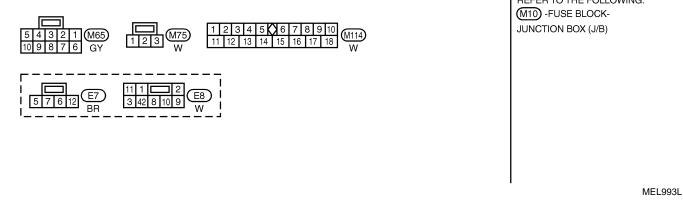

SMART C/U - PREVIOUS

Trouble Diagnoses

	Trouble Diag	noses
Symptom	Possible cause	Repair order
Neither headlamp operates.	 7.5A fuse Headlamp relay circuit Lighting switch Lighting switch ground circuit Daytime light control unit Headlamp battery saver control unit 	 Check 7.5A fuse [No. 24, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 7 of headlamp battery saver control unit. Check between battery saver control unit and headlamp relays (LH and RH). Check Lighting switch. Check harness between lighting switch terminal 8 and ground. Check daytime light control unit. (EL-59) Check headlamp battery saver control unit. (EL-43)
Headlamp LH (low and high beam) does not operate, but headlamp RH (low and high beam) does operate.	 1. 15A fuse 2. Headlamp LH relay 3. Headlamp LH relay circuit 4. Headlamp LH circuit 5. Daytime light control unit 	 Check 15A fuse (No. 60, located in fusible link and fuse box). Verify battery positive voltage is present at terminals 1 and 3 of headlamp LH relay. Check headlamp LH relay. Check the following. Harness between headlamp LH relay and headlamp battery saver control unit. Harness between headlamp LH relay and daytime light control unit. Check harness between headlamp LH and daytime light control unit. Check daytime light control unit. (EL-59)
Headlamp RH (low and high beam) does not operate, but headlamp LH (low and high beam) does operate.	1. 15A fuse 2. Headlamp RH relay 3. Headlamp RH relay circuit 4. Head lamp RH circuit 5. Daytime light control unit	1. Check 15A fuse (No. 59, located in fusible link and fuse box). Verify battery positive voltage is present at terminals 1 and 3 of headlamp RH relay. 2. Check headlamp RH relay. 3. Check the following. a. Harness between headlamp RH relay and headlamp battery saver control unit. b. Harness between headlamp RH relay and daytime light control unit. 4. Check harness between headlamp RH and daytime light control unit. 5. Check daytime light control unit. (EL-59)
LH high beam does not operate, but LH low beam operates.	 Bulb Open in the LH high beams circuit Lighting switch Lighting switch circuit Daytime light control unit 	 Check bulb. Check harness between headlamp LH and daytime light control unit for open circuit. Check lighting switch. Check the following. Harness between lighting switch and daytime light control unit. Harness between lighting switch and ground. Check daytime light control unit. (EL-59)
LH low beam does not operate, but LH high beam operates.	 Bulb Open in the LH low beam circuit Lighting switch Lighting switch ground circuit Daytime light control unit 	 Check bulb. Check harness between headlamp LH and daytime light control unit for open circuit. Check lighting switch. Check the following. Harness between lighting switch and daytime light control unit. Harness between lighting switch and ground. Check daytime light control unit. (EL-59)

EL



Trouble Diagnoses (Cont'd)

Symptom	Possible cause	Repair order
RH high beam does not operate, but RH low beam operates.	 Bulb Open in the RH high beams circuit Lighting switch Lighting switch ground circuit Daytime light control unit 	 Check bulb. Check harness between headlamp RH and daytime light control unit for open circuit. Check lighting switch. Check the following. Harness between lighting switch and daytime light control unit Harness between lighting switch and ground. Check daytime light control unit. (EL-59)
RH low beam does not operate, but RH high beam operates.	 Bulb Open in the RH low beam circuit Lighting switch Lighting switch ground circuit Daytime light control unit 	 Check bulb. Check harness between headlamp RH and daytime light control unit for open circuit. Check lighting switch. Check the following. Harness between lighting switch and daytime light control unit. Harness between lighting switch and ground. Check daytime light control unit. (EL-59)
High beam indicator does not work.	 Bulb Open in high beam circuit 	Check bulb in combination meter. Check the following. Harness between headlamp LH relay and combination meter for an open circuit Harness between high beam indicator and lighting switch
Battery saver control does not operate properly.	RAP signal circuit Door switch LH or RH circuit Lighting switch circuit Headlamp battery saver control unit Smart entrance control unit	 Check harness between headlamp battery saver control unit terminal 10 and smart entrance control unit terminal 5 for open or short circuit. Check the following. Harness between smart entrance control unit and LH or RH door switch for open or short circuit. LH or RH door switch ground circuit. LH or RH door switch. Check the following. Harness between headlamp battery saver control unit terminals 5 or 13 and lighting switch terminal 11 for open or short circuit. Harness between lighting switch terminal 5 and ground. Lighting switch. Check headlamp battery saver control unit. Check smart entrance control unit. (EL-324)
Daytime light control does not operate properly.	Bulb Fuse check Parking brake switch Parking brake switch circuit Daytime control unit	 Check bulb. Check the following. 7.5A fuse [No. 11, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 3 of daytime light control unit. 7.5A fuse [No. 26, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 2 of daytime light control unit. Check parking brake switch. Check harness between parking brake switch and daytime light control unit. Check daytime light control unit. (EL-59)

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

AYTIME LIGHT CONTROL UNIT INSPECTION TABLE NAEL0193S05 Voltage									
Terminal No.	Wire color	Item		Condition	Voltage (Approximate values)				
1	Y/B	Alternator	CON	When turning ignition switch to "ON"	Less than 1V				
				When engine is running	Battery voltage				
			COFF	When turning ignition switch to "OFF"	Less than 1V				
2	Y/R	Start signal	(Cs7)	When turning ignition switch to "ST"	Battery voltage				
			Con	When turning ignition switch to "ON" from "ST"	Less than 1V				
			COFF	When turning ignition switch to "OFF"	Less than 1V				
3	G	Power source	Con	When turning ignition switch to "ON"	Battery voltage				
			(Cs)	When turning ignition switch to "ST"	Battery voltage				
			COFF	When turning ignition switch to "OFF"	Less than 1V				
4	R/L	Power source	Con	When turning ignition switch to "ON"	Battery voltage				
			COFF	When turning ignition switch to "OFF"	Battery voltage				
5	R/W	Power source	Con	When turning ignition switch to "ON"	Battery voltage				
			COFF	When turning ignition switch to "OFF"	Battery voltage				
6	R	LH hi beam		When lighting switch is turned to the 2ND position with "HI BEAM" position	Battery voltage				
				When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Approx. half battery voltage				

EL

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

Terminal No.	Wire color	Item	Condition	Voltage (Approximate values)
7	L/R	RH hi beam	When lighting switch is turned to the 2ND position with "HI BEAM" position	Battery voltage
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Approx. half battery voltage
9	PU	RH hi beam (ground)	When lighting switch is turned to the 2ND position with "HI BEAM" position	Less than 1V
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Approx. half battery voltage
10	GY	LH hi beam (ground)	When lighting switch is turned to the 2ND position with "HI BEAM" position	Less than 1V
			When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P position.	Approx. half battery voltage
13	L/W	Lighting switch	When turning lighting switch to "HI BEAM"	Battery voltage
14	W/R	(Hi beam)	When turning lighting switch to "FLASH TO PASS"	Battery voltage
16	В	Ground	_	_
17	L/G	Parking brake switch	When parking brake is released	Battery voltage
		SWILCH	When parking brake is set	Less than 1.5V

BATTERY SAVER CONTROL UNIT INSPECTION TABLE

Refer to "HEADLAMP (FOR USA)" EL-43.

NAEL0193S06

Bulb Replacement

Refer to "HEADLAMP (FOR USA)" (EL-45).

NAEL0194

SMART C/U - PREVIOUS

Aiming Adjustment

Aiming Adjustment

Refer to "HEADLAMP (FOR USA)" (EL-45).

NAEL0195

G[

 $\mathbb{M}\mathbb{A}$

EM

LC

EG

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

EL

PARKING, LICENSE AND TAIL LAMPS

System Description

SMART C/U - PREVIOUS

System Description

AEL0162

The parking, license and tail lamp operation is controlled by the lighting switch which is built into the combination switch and headlamp battery saver control unit. The battery saver system is controlled by the headlamp battery saver control unit and smart entrance control unit.

Power is supplied at all times

- to tail lamp relay terminals 1 and 3
- through 10A fuse (No. 61, located in the fuse and fusible link box), and
- to headlamp battery saver control unit terminal 7, and
- to smart entrance control unit terminal 10
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].

When ignition switch is in ON or START position, power is supplied

- to headlamp battery saver control unit terminal 1
- through 10A fuse [No. 16, located in the fuse block (J/B)], and
- to headlamp battery saver control unit terminal 10, and
- to smart entrance control unit terminal 33
- through 7.5A fuse [No. 11, located in the fuse block (J/B)].

Ground is supplied to headlamp battery saver control unit terminals 4 and 11.

LIGHTING OPERATION BY LIGHTING SWITCH

NAEL0162S01

When lighting switch is in 1ST (or 2ND) position, ground is supplied

- to tail lamp relay terminal 2 from headlamp battery saver control unit terminals 6 and 14
- through headlamp battery saver control unit terminals 5 and 13, and
- to lighting switch terminal 11
- through lighting switch terminal 5
- through body grounds E13 and E41.

Tail lamp relay is then energized and the parking, license and tail lamps illuminate.

LIGHTING OPERATION BY AUTO LIGHT CONTROL SYSTEM

NAEL0162S03

When auto light control system is operated, ground is supplied

- to tail lamp relay terminal 2 from headlamp battery saver control unit terminals 6 and 14
- through headlamp battery saver control unit terminals 5 and 13, and
- through auto light control unit terminal 7.

Tail lamp relay is then energized and the parking, license and tail lamps illuminate.

BATTERY SAVER CONTROL

NAEL0162S0

When the ignition switch is turned from ON (or START) to OFF (or ACC) positions while parking, license and tail lamps are illuminated, the RAP signal is supplied to terminal 10 of the headlamp battery saver control unit from smart entrance control unit terminal 5.

After counting 45 seconds by the RAP signal from the smart entrance control unit to headlamp battery saver control unit, the ground supply to terminal 2 of the tail lamp relay from headlamp battery saver control unit terminals 6 and 14 is terminated.

Then the parking, license and tail lamps are turned off.


The parking, license and tail lamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while parking, license and tail lamps are illuminated.


When the lighting switch is turned from OFF to 1ST (or 2ND) after the parking, license and tail lamps are turned off by the battery saver control, ground is supplied.

- to headlamp battery saver control unit terminals 5 and 13 from lighting switch terminal 11, and
- to tail lamp relay terminal 2 from headlamp battery saver control unit terminals 6 and 14.

Then the parking, license and tail lamps illuminate again.

Schematic

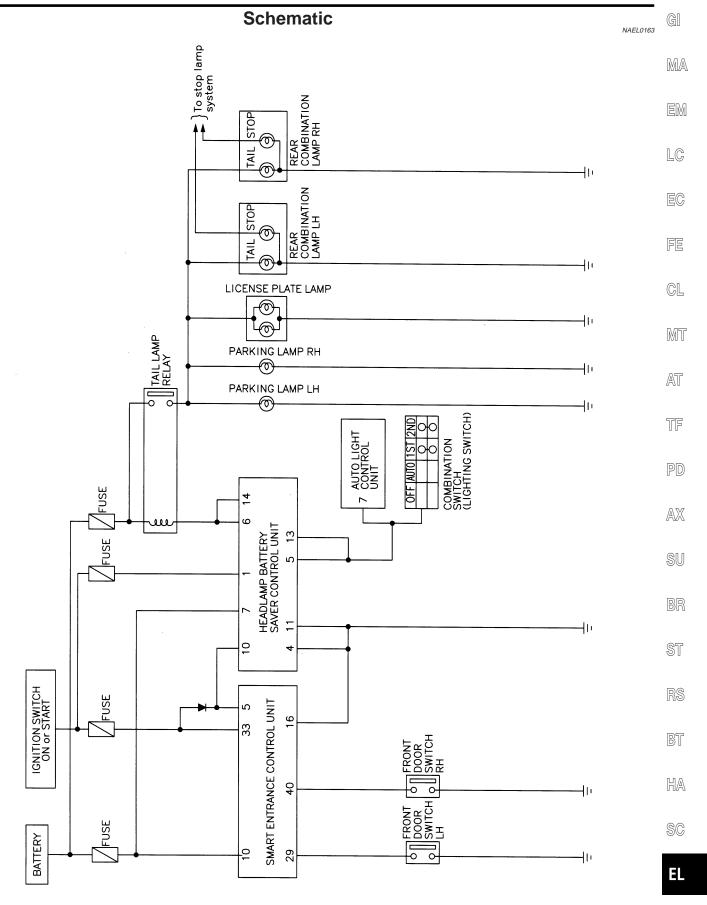


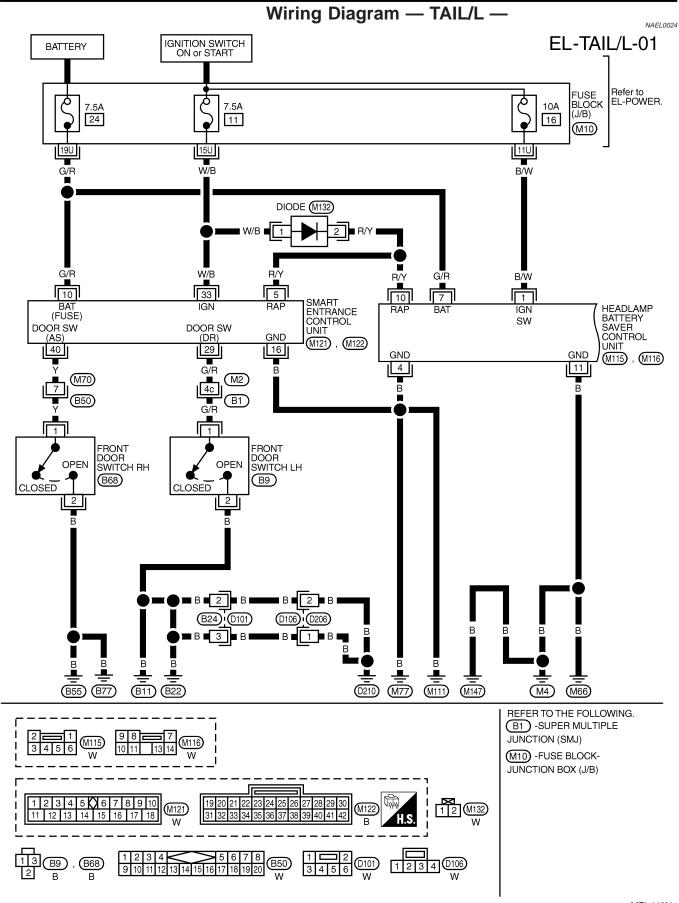


PARKING, LICENSE AND TAIL LAMPS

SMART C/U - PREVIOUS

Wiring Diagram — TAIL/L — (Cont'd)

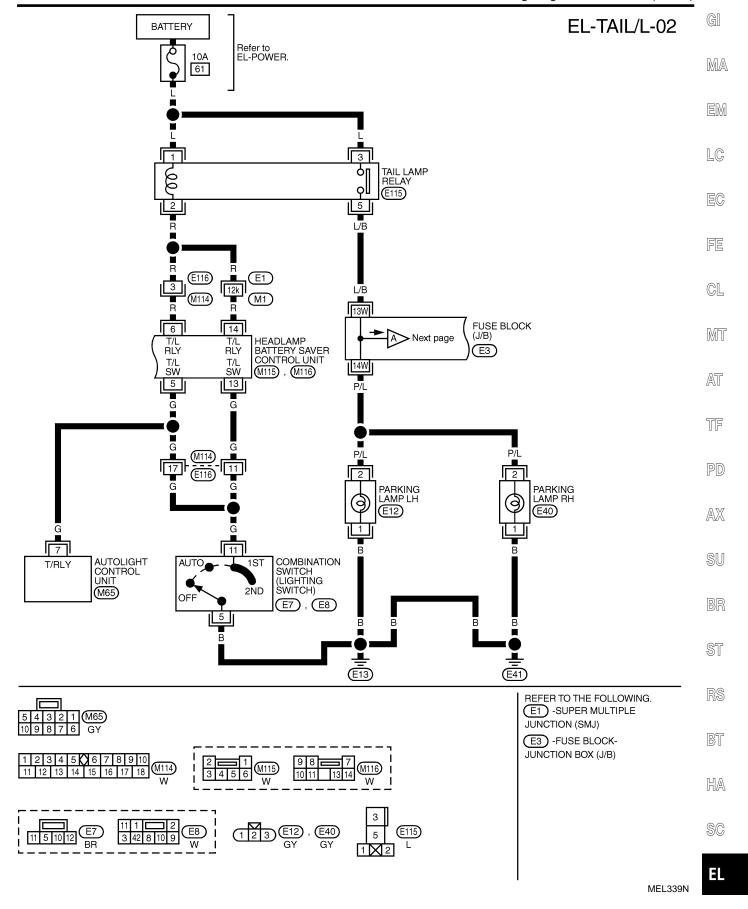

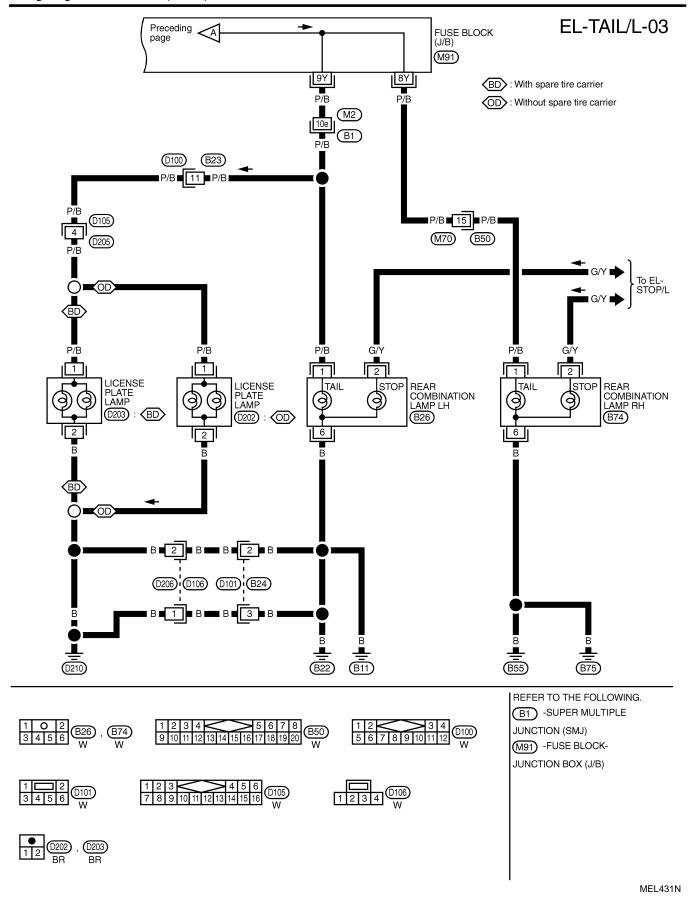

PARKING, LICENSE AND TAIL LAMPS

SMART C/U - PREVIOUS

Trouble Diagnoses

	Trouble Diag	NAEL0164
Symptom	Possible cause	Repair order
No lamps operate (including head- lamps).	 7.5A fuse Lighting switch Headlamp battery saver control unit 	Check 7.5A fuse [No. 24, lacated in fuse block (J/B)]. Verify battery positive voltage is present at terminal 7 of headlamp battery saver control unit. Check lighting switch. Check headlamp battery saver control unit. (EL-43)
No parking, license and tail lamps operate, but headlamps do operate.	 1. 10A fuse 2. Tail lamp relay 3. Tail lamp relay circuit 4. Lighting switch 5. Lighting switch circuit 6. Headlamp battery saver control unit 	 Check 10A fuse (No. 61, located in fusible and fuse block). Verify battery positive voltage is present at terminals 1 and 3 of tail lamp relay. Check tail lamp relay. Check the following. Harness between headlamp battery saver control unit terminals 6 and 14 and tail lamp relay terminal 2 Harness between tail lamp relay terminal 5 and fuse block Check lighting switch. Check the following. Harness between lighting switch terminal 11 and headlamp battery saver control unit terminals 5 and 13 Harness between lighting switch terminal 5 and ground Check headlamp battery saver control unit. (EL-43)
Battery saver control does not operate properly.	 RAP signal circuit Driver or passenger side door switch circuit Lighting switch circuit Headlamp battery saver control unit Smart entrance control unit 	 Check harness between headlamp battery saver control unit terminal 10 and smart entrance control unit terminal 5 for open or short circuit. Check the following. Harness between smart entrance control unit and driver or passenger side door switch for open or short circuit Driver or passenger side door switch ground circuit Driver or passenger side door switch. Check the following. Harness between headlamp battery saver control unit terminals 5 or 13 and lighting switch terminal 11 for open or short circuit Harness between lighting switch terminal 5 and ground Lighting switch Check headlamp battery saver control unit. (EL-43) Check smart entrance control unit. (EL-324)






HA



EL



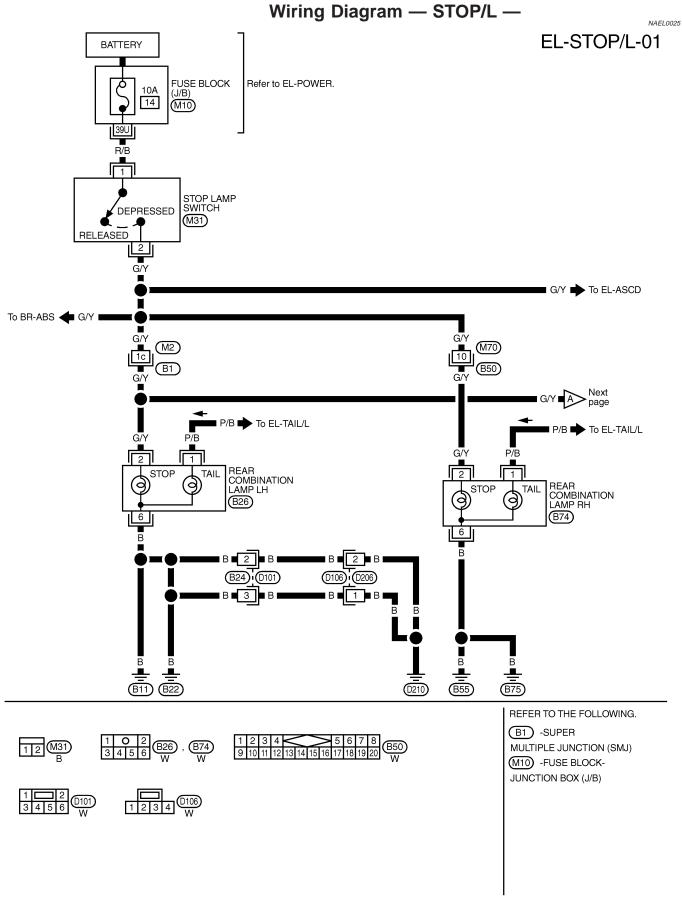

Wiring Diagram — STOP/L — (Cont'd)

EL-STOP/L-02

G[

MA

LC

EC

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU


BR

ST

RS

BT

HA

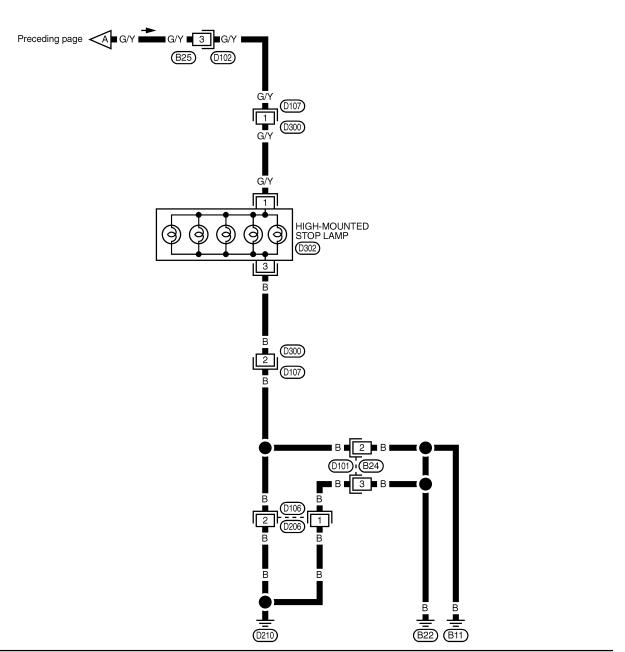




SC

MEL262M

ΕL

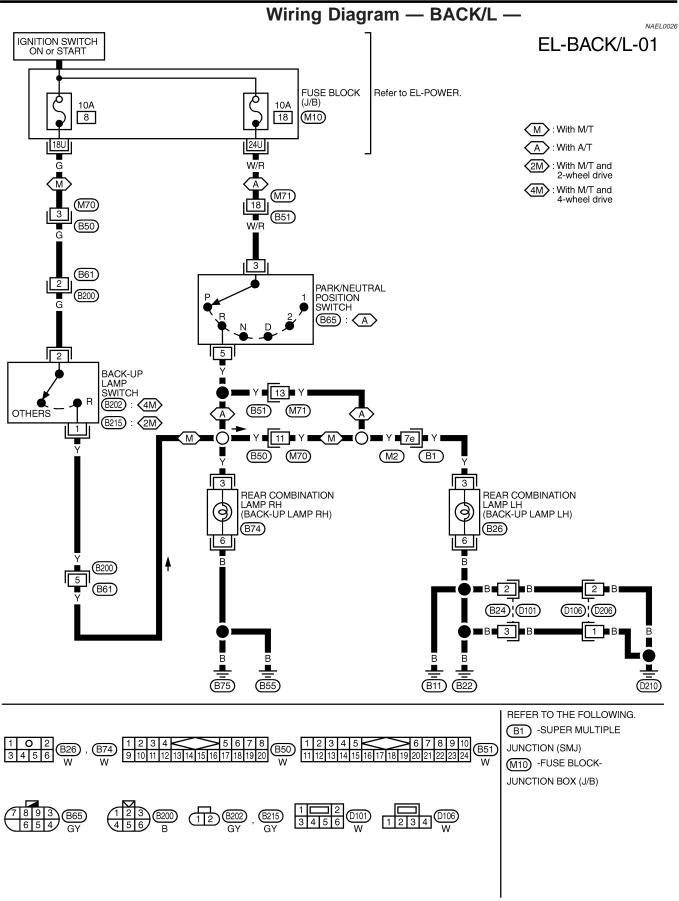

System Description

System Description

NAEL0027

MA

LC

GL

MIT

AT

TF

PD

AX

NAFL0027S06

Power is supplied at all times

OUTLINE

- to headlamp RH relay terminals 1 and 3
- through 15A fuse (No. 59, located in the fuse and fusible link box), and
- to headlamp battery saver control unit terminal 7
- to smart entrance control unit terminal 10
- through 7.5A fuse [No. 24, located in the fuse block (J/B)], and
- to front fog lamp relay terminal 3
- through 15A fuse (No. 53, located in the fuse and fusible link box).

When ignition switch is in ON or START position, power is supplied

- to headlamp battery saver control unit terminal 1
- through 10A fuse [No. 16, located in the fuse block (J/B)], and
- to headlamp battery saver control unit terminal 10, and
- to smart entrance control unit terminal 33
- through 7.5A fuse [No. 11, located in the fuse block (J/B)].

Ground is supplied to headlamp battery saver control unit terminals 4 and 11.

When lighting system is in 2ND position, ground is supplied

- to headlamp RH relay terminal 2 from headlamp battery saver control unit terminals 2 and 8
- through headlamp battery saver control unit terminals 3 and 9,
- through lighting switch terminal 11, and
- through body grounds E13 and E41.

Headlamp RH relay is then energized.

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position and LOW ("B") position for fog lamp operation.

With the fog lamp switch in the ON position, ground is supplied

to fog lamp relay terminal 1

FOG LAMP OPERATION

through the fog lamp switch, lighting switch and body grounds E13 and E41.

The fog lamp relay is energized and power is supplied

- from fog lamp relay terminal 5
- to terminal 1 of each fog lamp.

Ground is supplied to terminal 2 of each fog lamp through body grounds E13 and E41.

With power and ground supplied, the fog lamps illuminate.

BATTERY SAVER CONTROL

When the ignition switch is turned from ON (or START) to OFF (or ACC) positions while fog lamps are illuminated, the RAP signal is supplied to terminal 10 of the headlamp battery saver control unit from smart entrance control unit terminal 5.

After counting 45 seconds by the RAP signal from the smart entrance control unit to headlamp battery saver control unit, the ground supply to terminal 2 of headlamp RH relay from headlamp battery saver control unit teminals 2 and 8 are terminated. Then fog lamps are turned to off.

Fog lamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while fog lamps are illumi-

When the lighting switch is turned from OFF to 2ND after fog lamps are turned off by the battery saver control, ground is supplied

- to headlamp battery saver control unit terminals 5 and 13 from lighting switch terminal 11, and
- to headlamp RH relay terminal 2 from headlamp battery saver control unit terminals 2 and 8
- through headlamp battery saver control unit terminals 3 and 9, and
- through lighting switch terminal 11.

Then the fog lamps illuminate again.

NOTE:

For Trouble Diagnoses for battery saver control, refer to "HEADLAMP (FOR USA)" EL-42.


EL-71


HA

BT

SC


EL

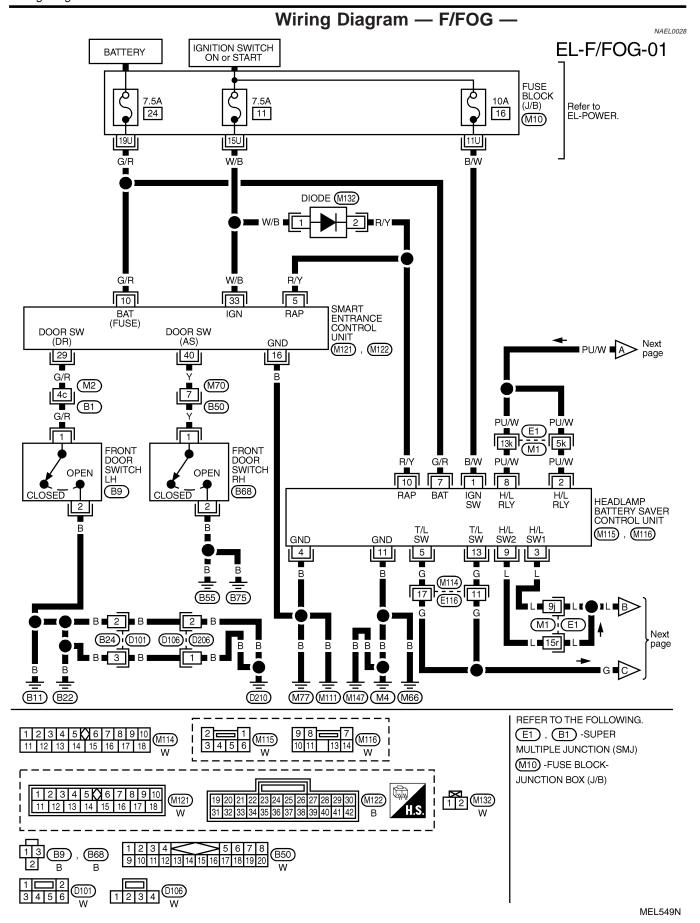


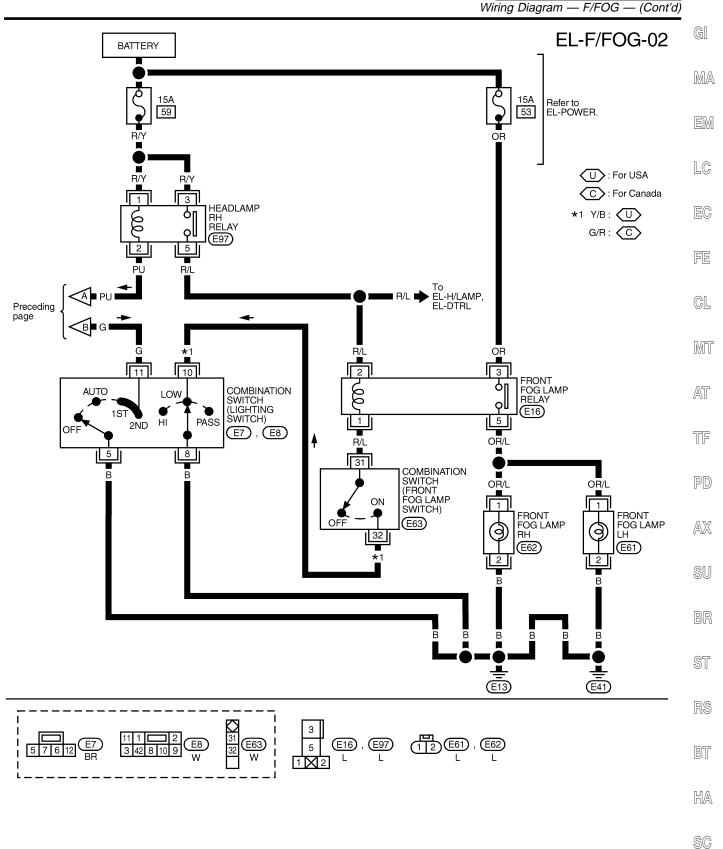


MEL340N

EL

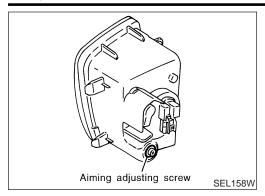

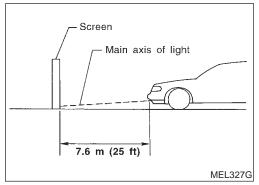

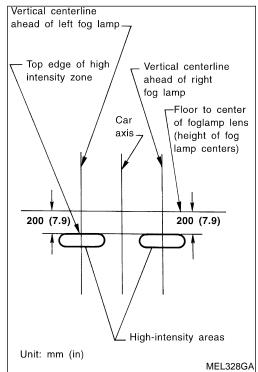

Aiming Adjustment

NAEL0029

Before performing aiming adjustment, make sure of the following.

- 1) Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- 3) See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver's seat.

Adjust aiming in the vertical direction by turning the adjusting screw.

- 1. Set the distance between the screen and the center of the fog lamp lens as shown at left.
- 2. Turn front fog lamps ON.

- 3. Adjust front fog lamps so that the top edge of the high intensity zone is 200 mm (7.9 in) below the height of the fog lamp centers as shown at left.
- When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

TURN SIGNAL AND HAZARD WARNING LAMPS

SMART C/U - PREVIOUS

System Description

System Description NAEL0030 TURN SIGNAL OPERATION NAFL0030S01 With the hazard switch in the OFF position and the ignition switch in the ON or START position, power is sup-MA plied through 7.5A fuse [No. 12, located in the fuse block (J/B)] to hazard switch terminal 2 through terminal 1 of the hazard switch to combination flasher unit terminal 1 LC through terminal 3 of the combination flasher unit to turn signal switch terminal 1. Ground is supplied to combination flasher unit terminal 2 through body grounds M4, M66 and M147. LH Turn When the turn signal switch is moved to the LH position, power is supplied from turn signal switch terminal 3 to front turn signal lamp LH terminal 3 to combination meter terminal 25 GL to rear combination lamp LH terminal 5. Ground is supplied to the turn signal lamp LH terminal 1 through body grounds E13 and E41. Ground is supplied to the rear combination lamp LH terminal 6 through body grounds B11, B22 and D210. MIT Ground is supplied to combination meter terminal 30 through body grounds M4, M66 and M147. With power and ground supplied, the combination flasher unit controls the flashing of the LH turn signal lamps. AT RH Turn When the turn signal switch is moved to the RH position, power is supplied from turn signal switch terminal to front turn signal lamp RH terminal 3 to combination meter terminal 29 to rear combination lamp RH terminal 5. Ground is supplied to turn signal terminal 3 through body grounds E13 and E41. Ground is supplied to the rear combination lamp RH terminal 6 through body grounds B55 and B75. AX Ground is supplied to combination meter terminal 30 through body grounds M4, M66 and M147. With power and ground supplied, the combination flasher unit controls the flashing of the RH turn signal lamps. SU HAZARD LAMP OPERATION NAEL0030S02 Power is supplied at all times to hazard switch terminal 3 through 15A fuse [No. 20, located in the fuse block (J/B)]. With the hazard switch in the ON position, power is supplied through terminal 1 of the hazard switch to combination flasher unit terminal 1 through terminal 3 of the combination flasher unit to hazard switch terminal 4. Ground is supplied BT to combination flasher unit terminal 2 through body grounds M4, M66 and M147. HA Power is supplied through terminal 5 of the hazard switch to front turn signal lamp LH terminal 3 combination meter terminal 25 rear combination lamp LH terminal 5, and

through terminal 6 of the hazard switch to front turn signal lamp RH terminal 3

rear combination lamp RH terminal 5.

combination meter terminal 29

TURN SIGNAL AND HAZARD WARNING LAMPS

SMART C/U - PREVIOUS

System Description (Cont'd)

Ground is supplied to terminal 3 of each front turn signal lamp through body grounds E13 and E41. Ground is supplied to terminal 6 of the rear combination lamp LH through body grounds B11, B22 and D210. Ground is supplied to terminal 6 of the rear combination lamp RH through body grounds B55 and B75. Ground is supplied to combination meter terminal 30 through body grounds M4, M66 and M147. With power and ground supplied, the combination flasher unit controls the flashing of the hazard warning lamps.

MULTI-REMOTE CONTROL SYSTEM OPERATION

NAEL0030S03

Power is supplied at all times

- through 15A fuse [No. 20, located in the fuse block (J/B)]
- to multi-remote control relay terminals 1, 3 and 6.

Ground is supplied to multi-remote control relay terminal 2, when the multi-remote control system is triggered through the smart entrance control unit.

Refer to "MULTI-REMOTE CONTROL SYSTEM". EL-270.

The multi-remote control relay is energized.

Power is supplied through terminal 7 of the multi-remote control relay

- to front turn signal lamp LH terminal 2
- to combination meter terminal 25
- to rear combination lamp LH terminal 5.


Power is supplied through terminal 5 of the multi-remote control relay


- to front turn signal lamp RH terminal 2
- to combination meter terminal 29
- to rear combination lamp RH terminal 5.

Ground is supplied to terminal 3 of each front turn signal lamp through body grounds E13 and E41. Ground is supplied to terminal 6 of the rear combination lamp LH through body grounds B11, B22 and D210. Ground is supplied to terminal 6 of the rear combination lamp RH through body grounds B55 and B75. Ground is supplied to combination meter terminal 30 through body grounds M4, M66 and M147. With power and ground supplied, the smart entrance control unit controls the flashing of the hazard warning lamps.

TURN SIGNAL AND HAZARD WARNING LAMPS

SMART C/U - PREVIOUS

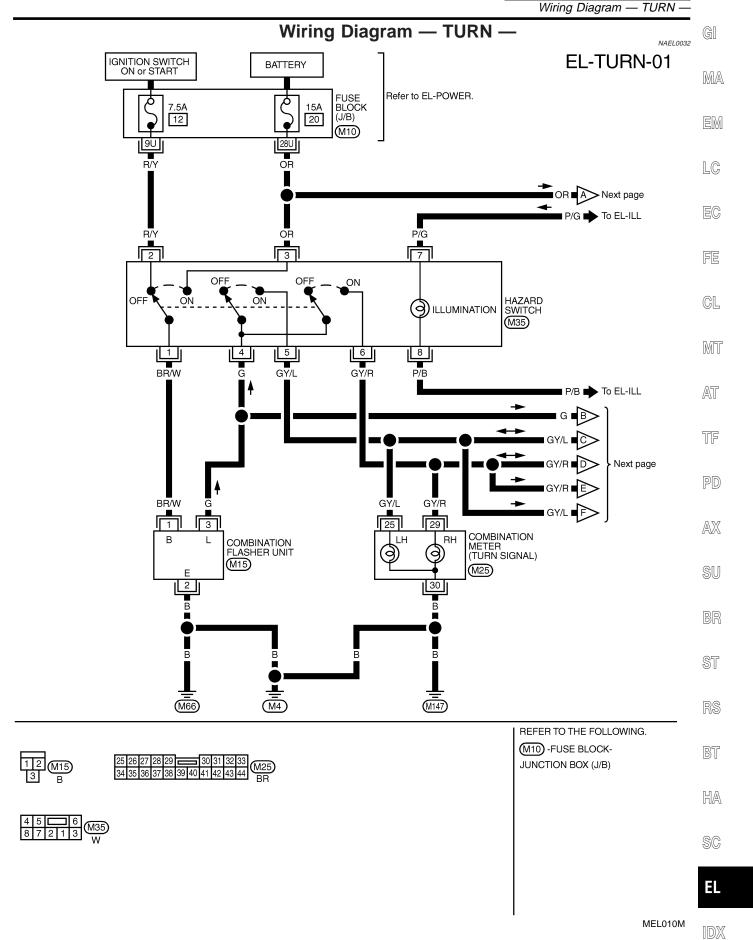

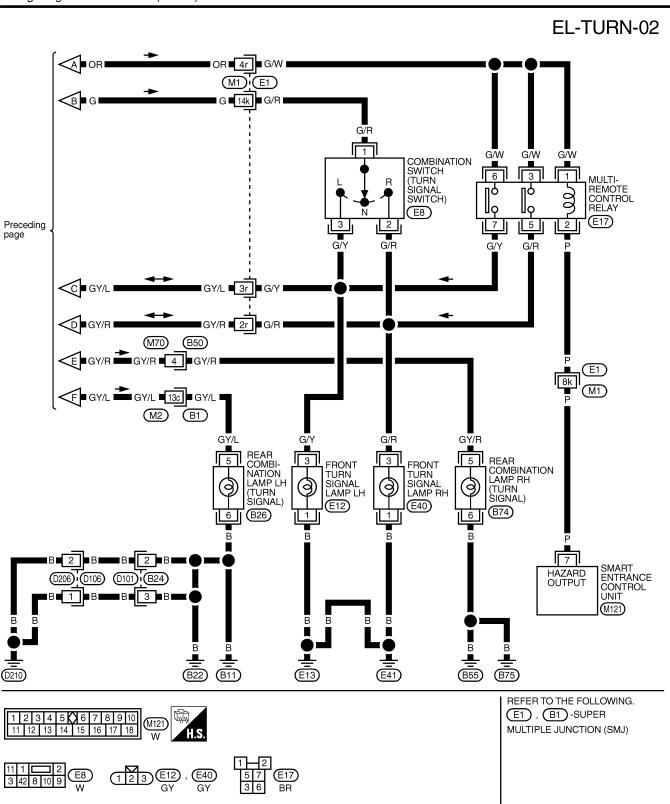


MEL432N

TURN SIGNAL AND HAZARD WARNING **LAMPS**

SMART C/U - PREVIOUS

Trouble Diagnoses

Trouble Diagnoses			
Symptom	Possible cause	Repair order	
Turn signal and hazard warning lamps do not operate.	Hazard switch Combination flasher unit Open in combination flasher unit circuit	Check hazard switch. Refer to combination flasher unit check. Check wiring to combination flasher unit for open circuit.	
Turn signal lamps do not operate but hazard warning lamps operate.	 7.5A fuse Hazard switch Combination switch (turn signal) Open in combination switch (turn signal) circuit 	 Check 7.5A fuse [No. 12, located in fuse block (J/B)]. Turn ignition switch ON and verify battery positive voltage is present at terminal 2 of hazard switch. Check hazard switch. Check combination switch (turn signal). Check the wire between combination flasher unit terminal 3 and combination switch (turn signal) terminal 1 for open circuit. 	
Hazard warning lamps do not operate but turn signal operate.	1. 15A fuse 2. Hazard switch 3. Open in hazard switch circuit	 Check 15A fuse [No. 20, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 3 of hazard switch. Check hazard switch. Check the wire between combination flasher unit terminal 3 and hazard switch terminal 4 for open circuit. 	
Front turn signal lamp LH or RH does not operate.	Bulb Grounds E13 and E41 Open in front turn signal lamp circuit	Check bulb. Check grounds E13 and E41. Check harness between front turn signal lamp and combination switch.	
Rear combination lamp LH does not operate.	Bulb Grounds B11, B22 and D210 Open in rear combination lamp LH circuit	Check bulb. Check grounds B11, B22 and D210. Check harness between rear combination lamp LH and hazard switch.	
Rear combination lamp RH does not operate.	Bulb Grounds B55 and B75 Open in rear combination lamp RH circuit	Check bulb. Check grounds B55 and B75. Check harness between rear combination lamp RH and hazard switch.	
LH and RH turn indicators do not operate.	1. Ground	1. Check grounds M4, M66 and M147.	
LH or RH turn indicator does not operate.	Bulb Open in turn indicator circuit	Check bulb in combination meter. Check harness between combination meter and hazard switch.	

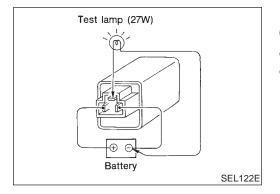

Electrical Components Inspection COMBINATION FLASHER UNIT CHECK

NAEL0034

HA

NAEL0034S01

Before checking, ensure that bulbs meet specifications.

Connect a battery and test lamp to the combination flasher unit, as shown. Combination flasher unit is properly functioning if it blinks when power is supplied to the circuit.



BT

EL



System Description

The illumination lamp operation is controlled by the lighting switch which is built into the combination switch and headlamp battery saver control unit. The battery saver system is controlled by the headlamp battery saver control unit and smart entrance control unit.

Power is supplied at all times

- to tail lamp relay terminals 1 and 3
- through 10A fuse (No. 61, located in the fuse and fusible link box), and
- to headlamp battery saver control unit terminal 7, and
- to smart entrance control unit terminal 10
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].

When ignition switch is in ON or START position, power is supplied

- to headlamp battery saver control unit terminal 1
- through 10A fuse [No. 16, located in the fuse block (J/B)], and
- to headlamp battery saver control unit terminal 10, and
- to smart entrance control unit terminal 33
- through 7.5A fuse [No. 11, located in the fuse block (J/B)].

Ground is supplied to headlamp battery saver control unit terminals 4 and 11.

LIGHTING OPERATION BY LIGHTING SWITCH

NAEL0035S01

When lighting switch is 1ST (or 2ND) position, ground is supplied

- to tail lamp relay terminal 2 from headlamp battery saver control unit terminals 6 and 14
- through headlamp battery saver control unit terminals 5 and 13, and
- through body grounds E13 and E41.

Tail lamp relay is then energized and illumination lamps illuminate.

The lighting switch must be in the 1ST or 2ND position for illumination.

LIGHTING OPERATION BY AUTO LIGHT CONTROL SYSTEM

NAEL0035S03

When auto light operation is operated, ground is supplied

- to tail lamp relay terminal 2 from headlamp battery saver control unit terminals 6 and 14
- through headlamp battery saver control unit terminals 5 and 13, and
- through auto light control unit terminal 7.

Tail lamp relay is then energized and the illumination lamps illuminate.

The illumination control switch that controls the amount of current to the illumination system. As the amount of current increases, the illumination becomes brighter.

The following chart shows the power and ground connector terminals for the components included in the illumination system.

Component	Connector No.	Power terminal	Ground terminal
Illumination control switch	M19	1	3
A/C switch	M45	2	1
4WD shift switch	M141	7	8
Cigarette lighter	M57	3	4
Audio unit	M48	8	7
CD player	M92, M93	3	5
Compass and thermometer	R4	5	2
Rear window defogger switch	M36	5	6
CD auto changer	M125	2	9
Power window main switch	D6	16	18
Front power window switch RH	D36	10	17
A/C auto amp.	M102	24	25

ILLUMINATION

SMART C/U - PREVIOUS

System Description (Cont'd)

				_
Component	Connector No.	Power terminal	Ground terminal	(
Display and Navi control unit	M117, M118	8	24	
Hazard switch	M35	7	8	
Ashtray	M54	1	2	_
A/T device	B59	3	4	_
Clock	M39	3	4	
Globe box lamp	M30	1	2	

The ground for all of the components except for compass, glove box lamp and ashtray are controlled through terminals 2 and 3 of the illumination control switch and body grounds M77 and M111.

jh EG

GL

MT

AT

LC

GI

MA

BATTERY SAVER CONTROL

When the ignition switch is turned from ON (or START) to OFF (or ACC) positions while illumination lamps are illuminated, the RAP signal is supplied to terminal 10 of the headlamp battery saver control unit from smart entrance control unit terminal 5.

After counting 45 seconds by the RAP signal from the smart entrance control unit to headlamp battery saver control unit, the ground supply to terminal 2 of the tail lamp relay from headlamp battery saver control unit teminals 6 and 14 is terminated.

Then illumination lamps are turned off.

Illumination lamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while illumination lamps are illuminated.

When the lighting switch is turned from OFF to 1ST (or 2ND) after illumination lamps are turned off by the battery saver control, ground is supplied

- to headlamp battery saver control unit terminals 5 and 13 from lighting switch terminal 11, and
- to tail lamp relay terminal 2 from headlamp battery saver control unit terminals 6 and 14.

Then illumination lamps illuminate again.

PD

TF

NOTE:

For Trouble Diagnoses for battery saver control, refer to "PARKING, LICENSE AND TAIL LAMPS" (EL-67).



AX

RS

BT


HA


SC


EL


Schematic


NAEL0036

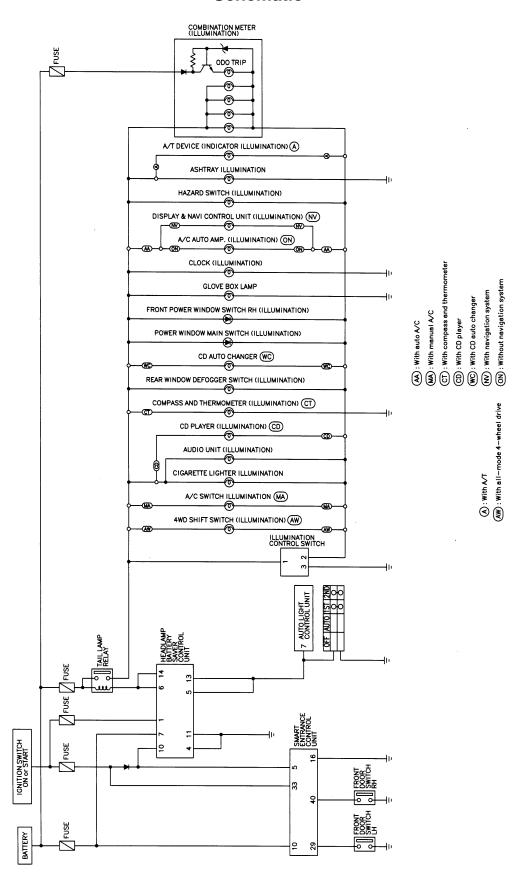

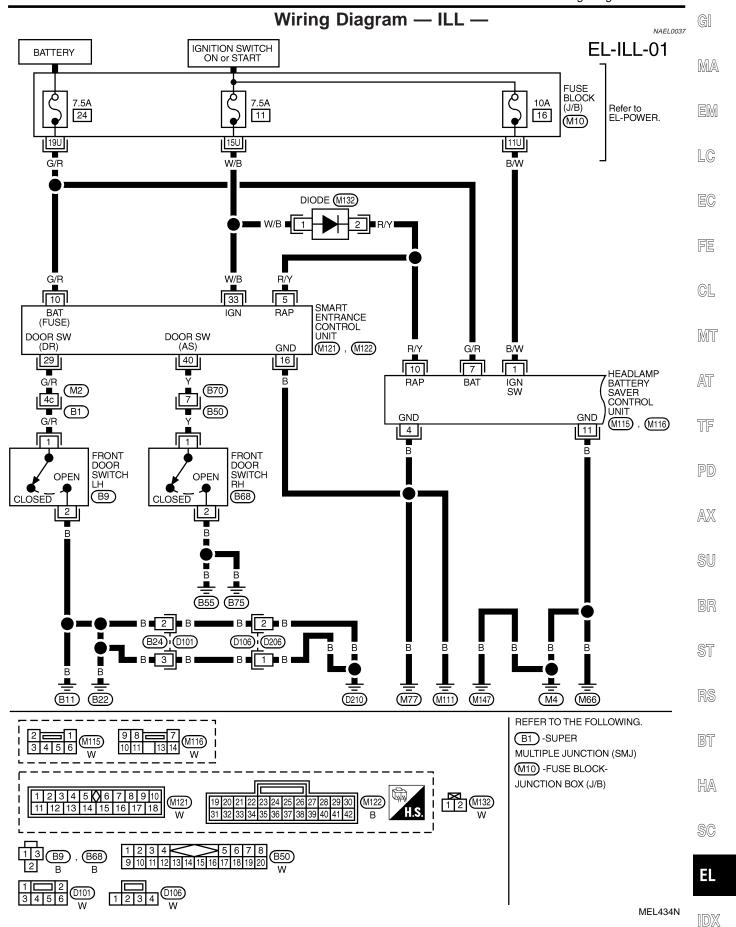

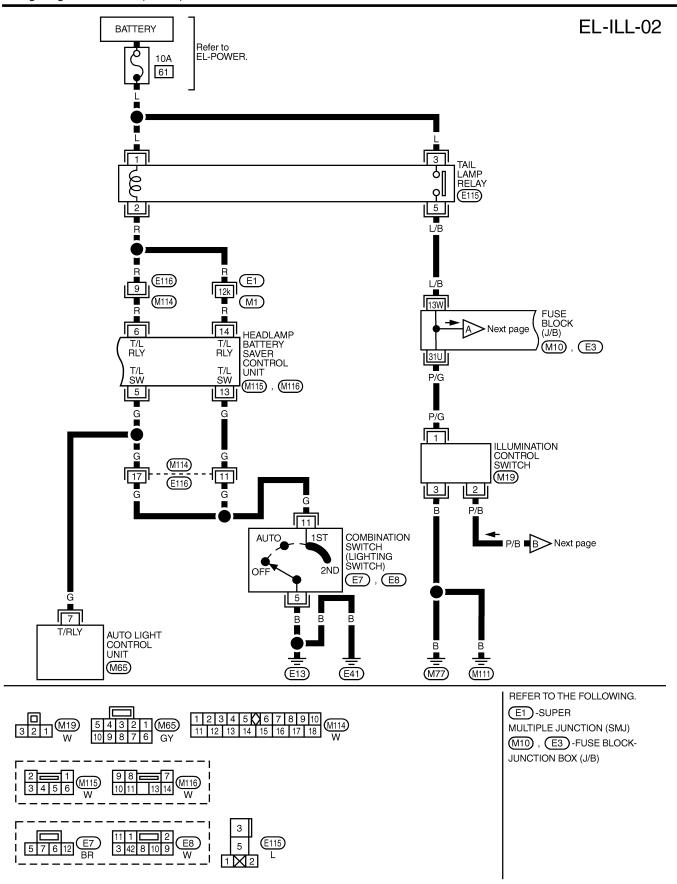


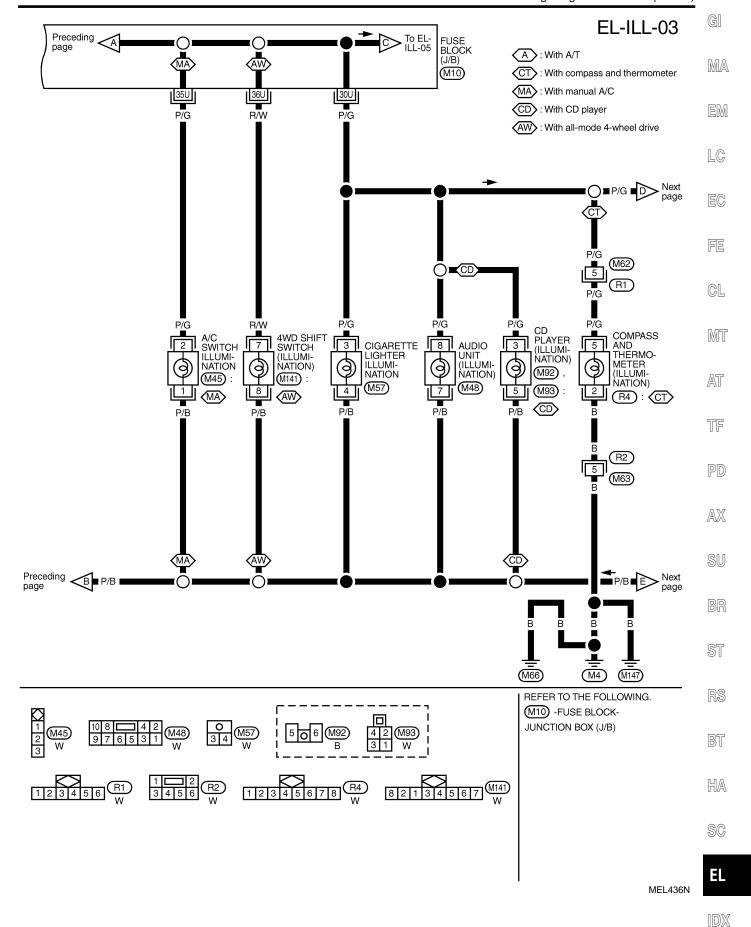

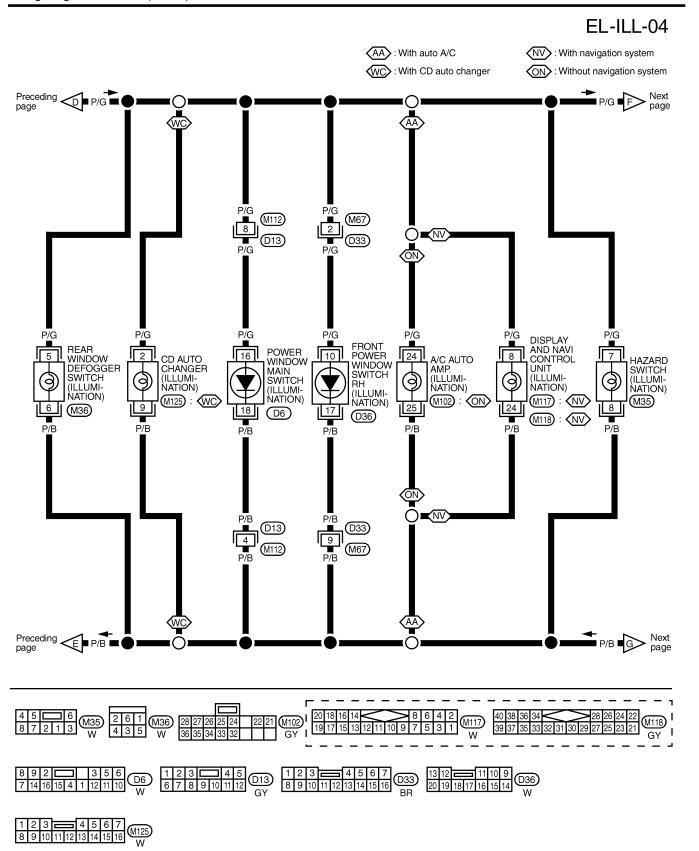

MEL343N

Wiring Diagram — ILL — (Cont'd)

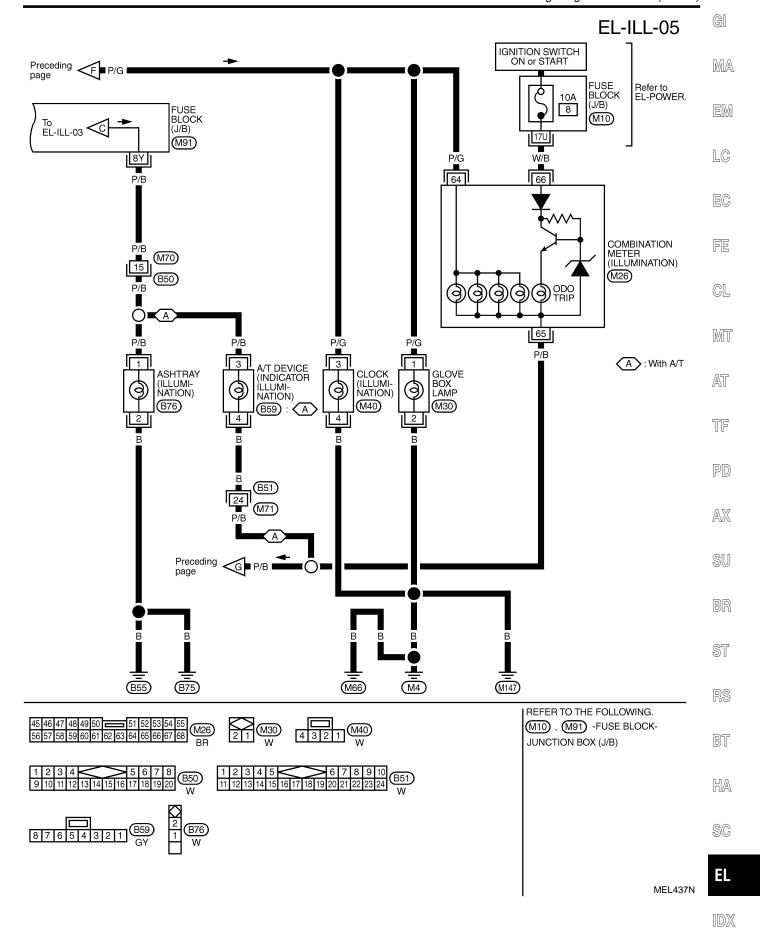

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS SMART C/U - PREVIOUS

System Description

System Description

POWER SUPPLY AND GROUND

NAEL0038

NAFL 0038S06

Power is supplied at all times:

- through 7.5A fuse [No. 24, located in the fuse block (J/B)]
- to key switch terminal 2 and
- to smart entrance control unit terminal 10.

When the key is removed from ignition key cylinder, power is interrupted:

- through key switch terminal 1
- to smart entrance control unit terminal 32.

With the ignition key switch in the ON or START position, power is supplied:

- through 7.5A fuse [No. 11, located in the fuse block (J/B)]
- to smart entrance control unit terminal 33.

Ground is supplied:

- to smart entrance control unit terminal 16
- through body grounds terminals M77 and M111.

When the front driver side door is opened, ground is supplied:

- through body grounds B11, B22 and D210
- to front door switch (LH) terminal 2
- from front door switch (LH) terminal 1
- to smart entrance control unit terminal 29.

When the front passenger side door is opened, ground is supplied:

- through body grounds B55 and B75
- to front door switch (RH) terminal 2
- from front door switch (RH) terminal 1
- to smart entrance control unit terminal 40.

When any other door (except front door) is opened, ground is supplied to smart entrance control unit terminal 28 in the same manner as the front door switch (front passenger side).

When the front driver side door is unlocked, the smart entrance control unit receives a ground signal:

- through body grounds terminals M77 and M111
- to front door lock actuator (driver side unlock sensor) terminal 2
- from front door lock actuator (driver side unlock sensor) terminal 4
- to smart entrance control unit terminal 36.

When a signal, or combination of signals is received by the smart entrance control unit, ground is supplied:

- through smart entrance control unit terminal 8
- to interior lamp terminal 2.

With power and ground supplied, the interior lamp illuminates.

SWITCH OPERATION

NAEL0038S07

When interior lamp switch is ON, ground is supplied:

- through case grounds of interior lamp
- to interior lamp.

And power is supplied:

- to interior lamp terminal 1
- from smart entrance control unit terminal 17.

When spot lamp (LH and/or RH) is ON, ground is supplied:

- through body grounds M4, M66 and M147
- to spot lamp terminal 2.

And power is supplied:

- to spot lamp terminal 1
- from smart entrance control unit terminal 17.

When vanity mirror illumination (LH and/or RH) is ON, ground is supplied:

through body grounds M4, M66 and M147


INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS **SMART C/U - PREVIOUS**

System Description (Cont'd) to vanity mirror illuminations (LH and RH) terminals 2. GI And power is supplied: to vanity mirror illuminations (LH and RH) terminals 1 MA from smart entrance control unit terminal 17. With power and ground supplied, interior lamps turn ON. INTERIOR LAMP TIMER OPERATION When interior lamp switch is in the "DOOR" position, the smart entrance control unit keeps the interior lamp illuminated for about 30 seconds when: LC unlock signal is supplied from driver's door unlock sensor while all doors are closed and key is removed from ignition key cylinder unlock signal is supplied from multi-remote controller while all doors are closed and driver's door is locked key is removed from ignition key cylinder while all doors are closed driver's door is opened and then closed while key is removed from the iginition key cylinder. (However, if the driver's door is closed with the key insered in the ignition key cylinder after the driver's door is opened with the key removed, the timer is operated.) The timer is canceled when: GL driver's door is locked, driver's door is opened, or MIT ignition switch is turned ON. ON-OFF CONTROL When the driver side door, front passenger door, rear LH, RH door or back door is opened, the interior room lamp turns on while the interior room lamp switch is in the "DOOR" position. **BATTERY SAVER** The lamp turns off automatically when interior lamp, luggage room lamp, spot lamp and/or vanity mirror illumination is illuminated with the ignition key is in OFF position, if the lamp remains lit by the door switch open signal or if the lamp switch is in ON position for more than 10 minutes. After lamps turn OFF by the battery saver system, the lamps illuminate again when: driver's door is locked or unlocked, AX door is opened or closed, key is inserted or removed in ignition key cylinder. BT

HA


Schematic


NAEL0158

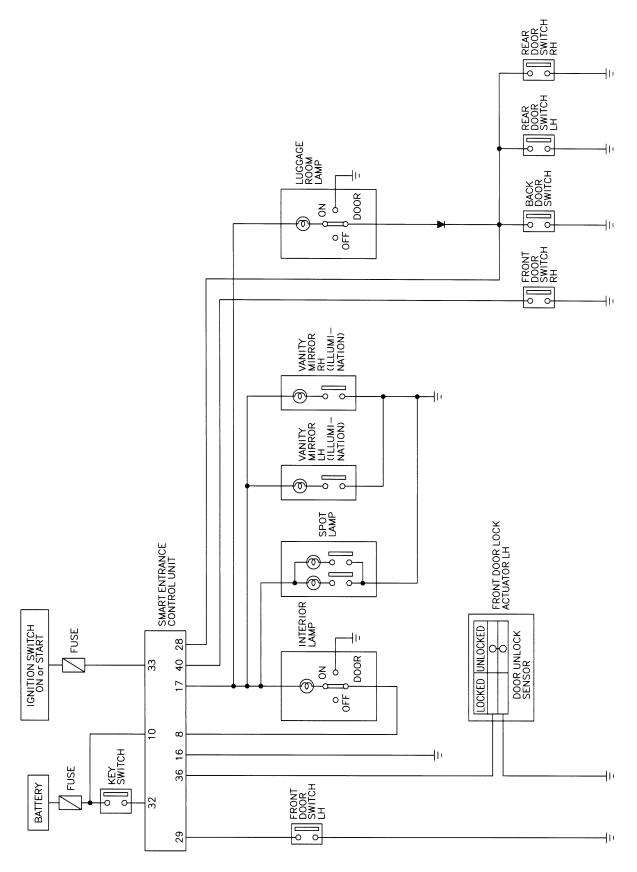

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS SMART C/U -

SMART C/U - PREVIOUS

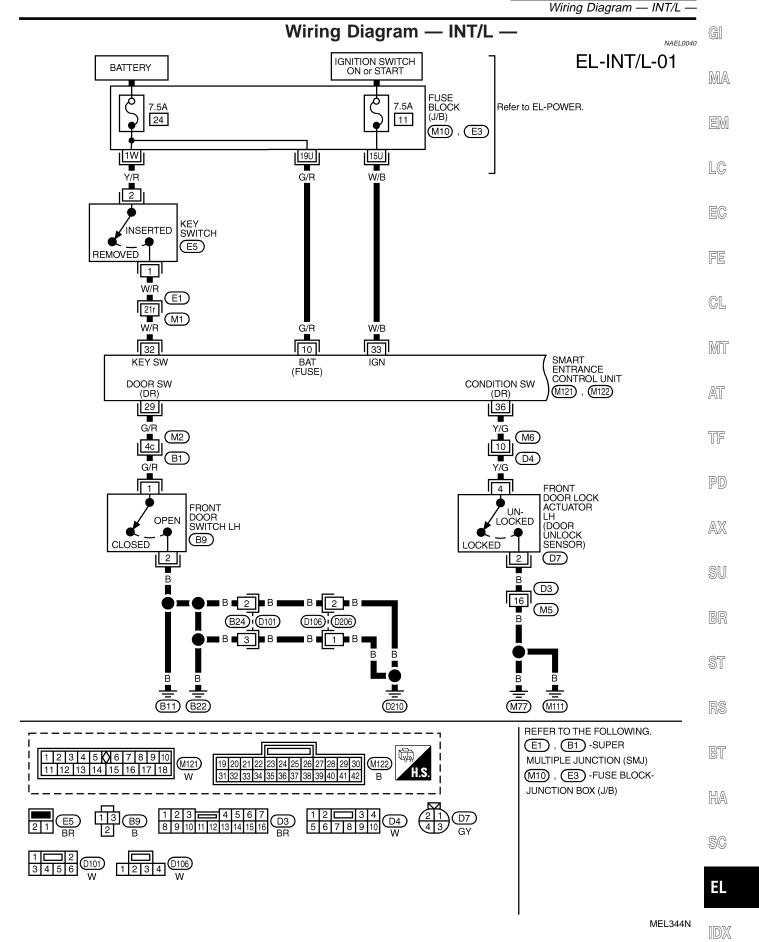


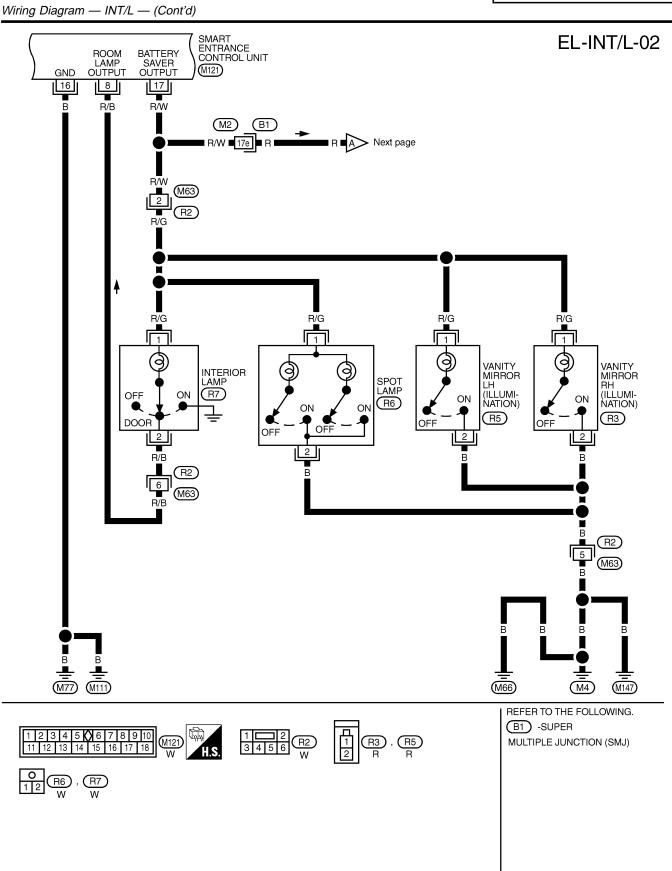

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS SMART C/U -


SMART C/U - PREVIOUS

Wiring Diagram — INT/L — (Cont'd)

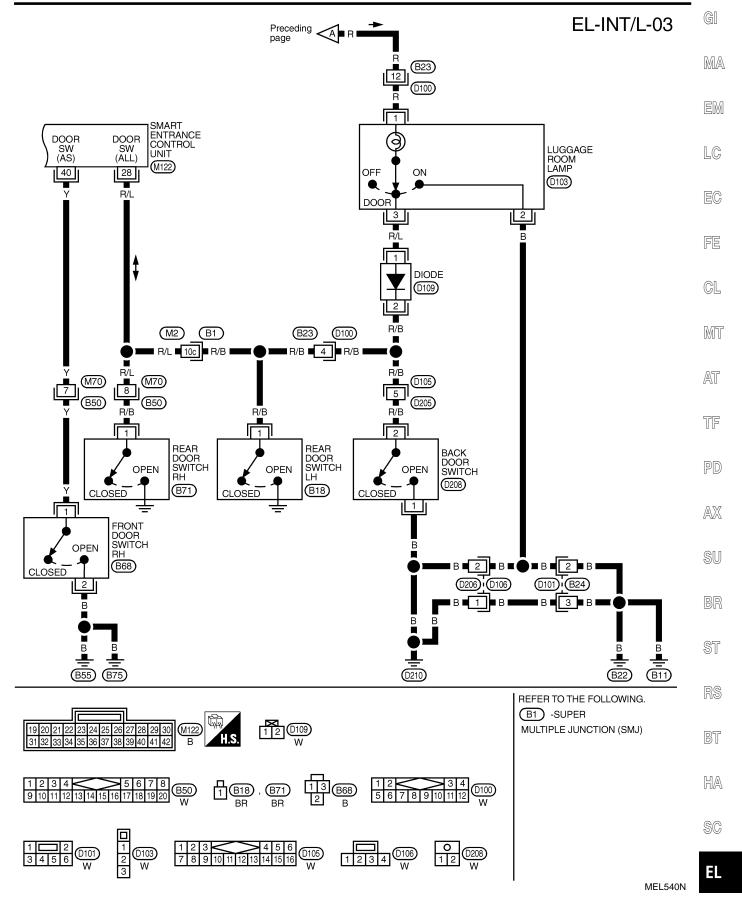

Component Parts and Harness Connector Location

NAFL0041

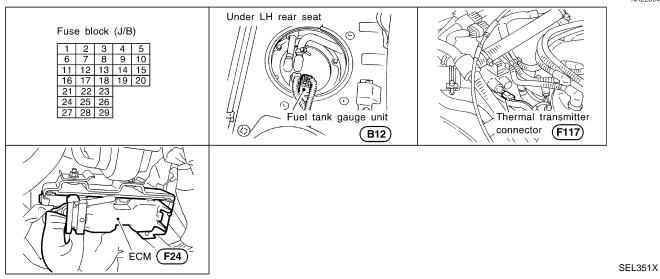


System Description

NAEL0042

UNIFIED CONTROL METER

- Speedometer, odo/trip meter, tachometer, fuel gauge and water temperature gauge are controlled totally by control unit.
- Digital meter is adopted for odo/trip meter.* *The record of the odo meter is kept even if the battery cable is disconnected. The record of the trip meter is erased when the battery cable is disconnected.
- Odo/trip meter segment can be checked in diagnosis mode.
- Meter/gauge can be checked in diagnosis mode.

HOW TO CHANGE THE DISPLAY FOR ODO/TRIP METER

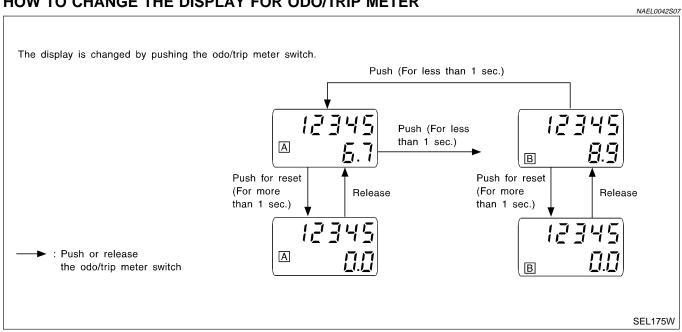

NOTE:

Turn ignition switch to the "ON" position to operate odo/trip meter.

METERS AND GAUGES

SWART C/U - PREVIOUS

System Description (Cont'd)


System Description (Cont'd) POWER SUPPLY AND GROUND CIRCUIT NAEL0042S08 Power is supplied at all times through 7.5A fuse [No. 24, located in the fuse block (J/B)] MA to combination meter terminal 62. With the ignition switch in the ON or START position, power is supplied through 10A fuse [No. 8, located in the fuse block (J/B)] to combination meter terminal 66. Ground is supplied LC to combination meter terminal 59 through body grounds M4, M66 and M147. EC WATER TEMPERATURE GAUGE The water temperature gauge indicates the engine coolant temperature. The reading on the gauge is based on the resistance of the thermal transmitter. As the temperature of the coolant increases, the resistance of the thermal transmitter decreases. A variable ground is supplied to terminal 18 of the combination meter for the water temperature gauge. The needle on the gauge moves from "C" to "H". GL TACHOMETER NAFL0042S02 The tachometer indicates engine speed in revolutions per minute (rpm). MIT The tachometer is regulated by a signal from terminal 25 of the ECM to combination meter terminal 16 for the tachometer. AT **FUEL GAUGE** NAEL0042S03 The fuel gauge indicates the approximate fuel level in the fuel tank. The fuel gauge is regulated by a variable ground signal supplied to combination meter terminal 17 for the fuel gauge from terminal 3 of the fuel level sensor unit through terminal 2 of the fuel level sensor unit and through body grounds B11, B22 and D210. AX **SPEEDOMETER** The ABS actuator and electric unit provides a voltage signal to the combination meter for the speedometer. The voltage is supplied from combination meter terminal 15 for the speedometer to terminal 19 of the ABS actuator and electric unit. The speedometer converts the voltage into the vehicle speed displayed. BT HA


L

SC

Combination Meter CHECK

NAEL0043 NAEL0043S01

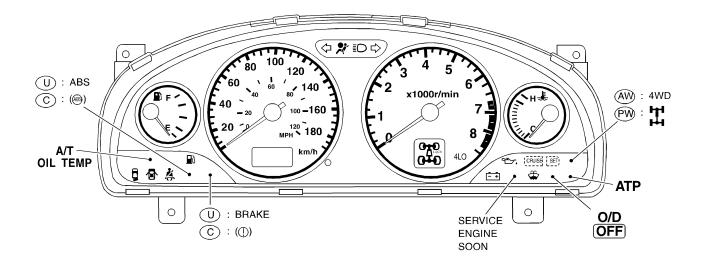

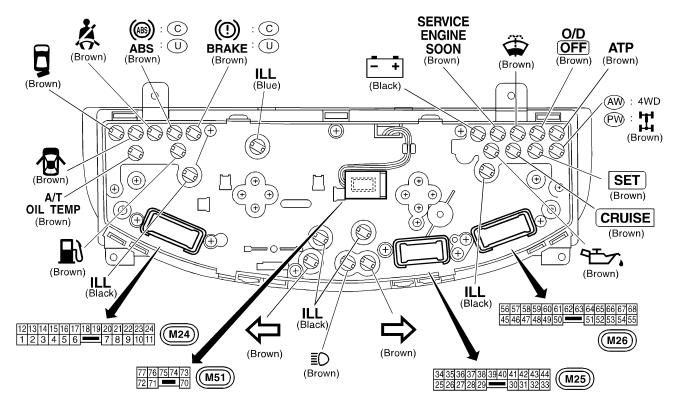

Bulb socket color	Bulb wattage
Brown	1.4W
Blue	2.0W
Black	3.0W

(): Warning bulb socket color

U: For USA


C: For Canada

(AW): With all-mode 4-wheel drive

(PW): With part-time 4-wheel drive

METERS AND GAUGES

Combination Meter (Cont'd)

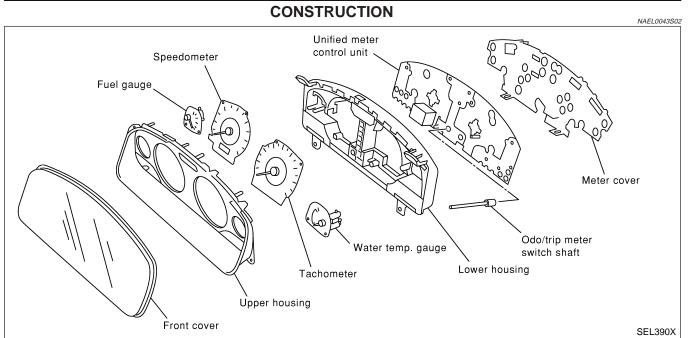

 $\mathbb{G}[$

- - -

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT


HA


SC

Ц

Schematic

NAEL0199

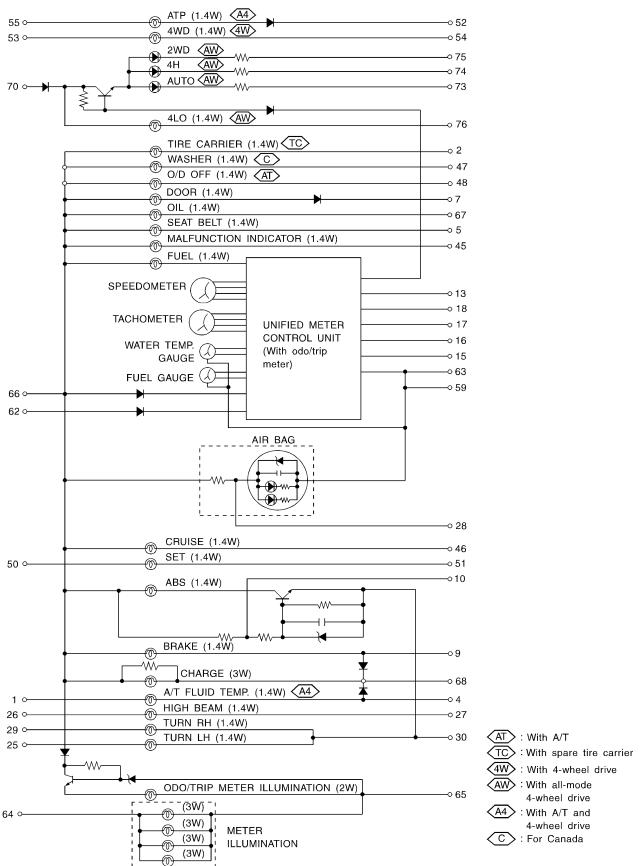

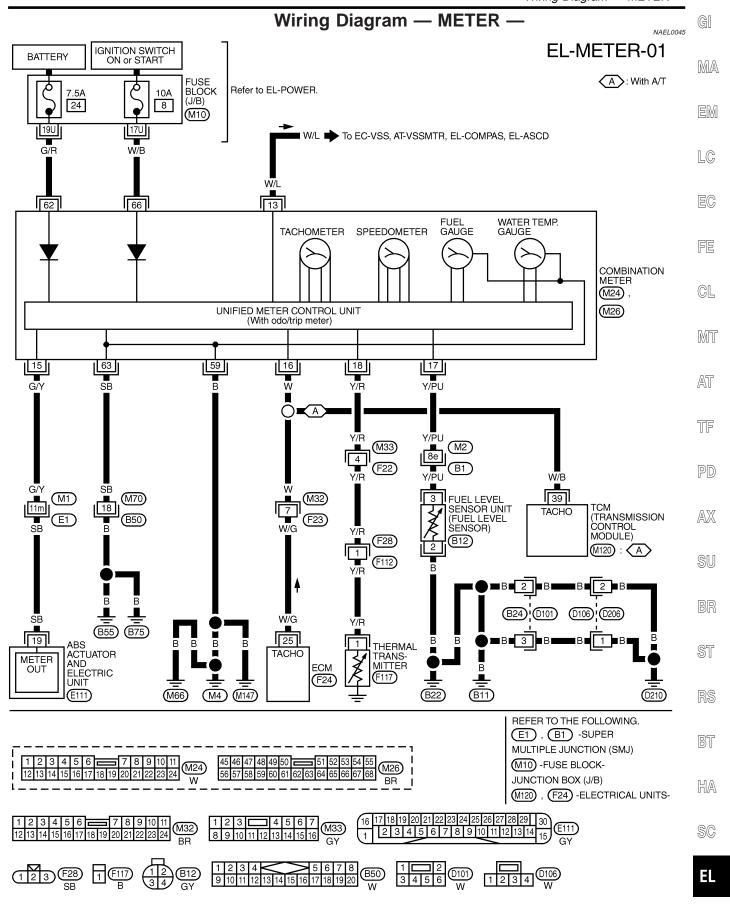

Meter/Gauge Operation and Odo/Trip Meter Segment Check in Diagnosis Mode DIAGNOSIS FUNCTION


NAEL0200

- Odo/trip meter segment can be checked in diagnosis mode.
- Meters/gauges can be checked in diagnosis mode.

HOW TO ALTERNATE DIAGNOSIS MODE

AEL0200S0

- 1. Turn ignition switch to ON and change odo/trip meter to "TRIP A" or "TRIP B".
- 2. Turn ignition switch to OFF.
- 3. Turn ignition switch to ON when pushing odo/trip meter switch.
- 4. Push odo/trip meter switch 1 second.
- 5. Release odo/trip meter switch.
- Push odo/trip meter switch more than three times within 7 seconds.

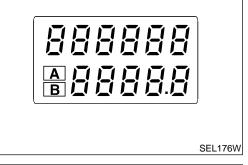


7. All odo/trip meter segments should be turned on.

NOTE

If some segments are not turned on, unified meter control unit with odo/trip meter should be replaced.

At this point, the unified control meter is turned to diagnosis mode.

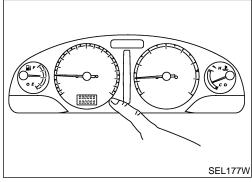

8. Push odo/trip meter switch. Indication of each meter/gauge should be as shown left during pushing odo/trip meter switch if it is no malfunctioning.


NOTE:

It takes about a few seconds for indication of fuel gauge and water temperature gauge to become stable.

Trouble Diagnoses PRELIMINARY CHECK

NAEL0201

GI

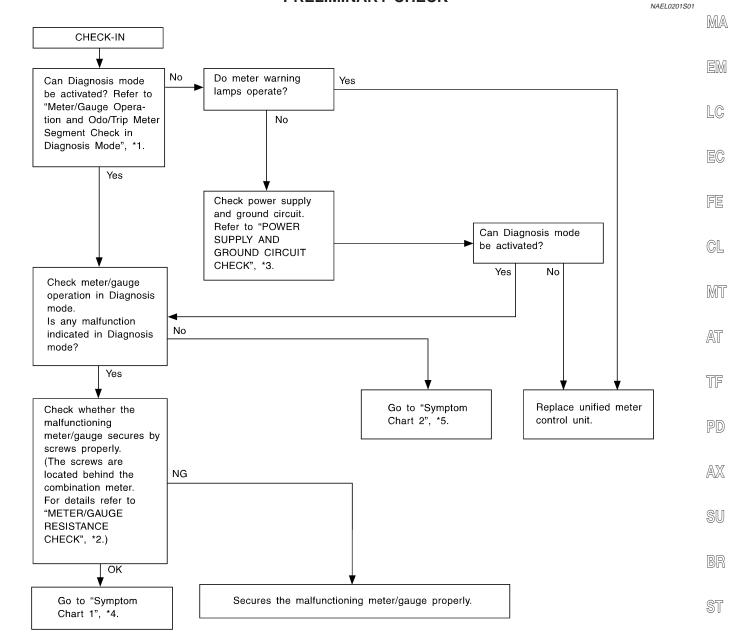

SEL361W

- *1: Meter/Gauge Operation and Odo/ Trip Meter Segment Check in Diagnosis Mode (EL-100)
- *2: METER/GAUGE RESISTANCE CHECK (EL-108)
- *3: POWER SUPPLY AND GROUND CIRCUIT CHECK (EL-103)
- *4: Symptom Chart 1 (EL-102)
- *5: Symptom Chart 2 (EL-102)

HA

BT

SC

L

 $\mathbb{D}X$

SYMPTOM CHART Symptom Chart 1 (Malfunction is Indicated in Diagnosis Mode)

NAEL0201S02

Symptom	Possible causes	Repair order
Odo/trip meter indicate(s) malfunction in Diagnosis mode.	Unified meter control unit	Replace unified meter control unit.
Multiple meter/gauge indicate malfunction in Diagnosis mode.		
One of speedometer/ tachometer/fuel gauge/ water temp. gauge indi- cates malfunction in Diag- nosis mode.	Meter/Gauge Unified meter control unit	Check resistance of meter/gauge indicating malfunction. If the resistance is NG, replace the meter/gauge. Refer to "METER/GAUGE RESISTANCE CHECK", EL-108. If the resistance of meter/gauge is OK, replace unified meter control unit.

Symptom Chart 2 (No Malfunction is Indicated in Diagnosis Mode)

NAEL0201S0202


Symptom	Possible causes	Repair order
One of speedometer/ tachometer/fuel gauge/ water temp. gauge is mal- functioning. Multiple meter/gauge are malfunctioning. (except odo/trip meter)	Sensor signal Vehicle speed signal Engine revolution signal Fuel gauge Water temp. gauge Unified meter control unit	1. Check the sensor for malfunctioning meter/gauge. INSPECTION/VEHICLE SPEED SIGNAL (Refer to EL-104.) INSPECTION/ENGINE REVOLUTION SIGNAL (Refer to EL-105.) INSPECTION/FUEL LEVEL SENSOR UNIT (Refer to EL-106.) INSPECTION/THERMAL TRANSMITTER (Refer to EL-107.) 2. Replace unified meter control unit.

Before starting trouble diagnoses below, perform PRELIMINARY CHECK, EL-101.

METERS AND GAUGES

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

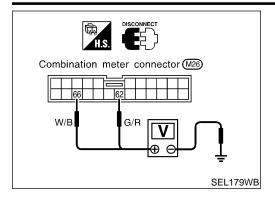

POWER SUPPLY AND GROUND CIRCUIT CHECK Power Supply Circuit Check

NAEL0201S0301

Terminals		Ignition switch position		
(+)	(-)	OFF	ACC	ON
62	Ground	Battery voltage	Battery voltage	Battery voltage
66	Ground	0V	0V	Battery voltage

EM

MA

LC

EC

FE

GL

If NG, check the following.

- 7.5A fuse [No. 24, located in fuse block (J/B)]
- 10A fuse [No. 8, located in fuse block (J/B)]
- Harness for open or short between fuse and combination meter




AT

TF

PD

AX

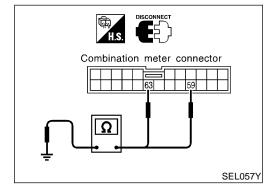

Ground Circuit Check

NAEL0201S0302

(-	+)		Continuity
Connector	Terminal (wire color)	(-)	
M26	59 (B)	Ground	Yes
iviZO	63 (SB)	Giouna	162

SU

BR

ST

RS

BT

HA

SC

EL

 $\mathbb{D}\mathbb{X}$


INSPECTION/VEHICLE SPEED SIGNAL

=NAEL0201S04

1 CHECK ABS CONTROL UNIT OUTPUT SIGNAL

With CONSULT-II


- 1. Lift up drive wheels.
- 2. Start engine.
- 3. Check signal between combination meter harness connector M24 terminal 15 (G/Y) and ground when rotating wheels with engine at idle. (Use "SIMPLE OSCILLOSCOPE" in "SUB MODE" with CONSULT-II.)

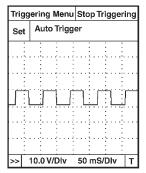

SEL938W

Without CONSULT-II

- 1. Lift up drive wheels.
- 2. Start engine.
- 3. Check voltage between combination meter harness connector M24 terminal 15 (G/Y) and ground when rotating wheels with engine at idle.

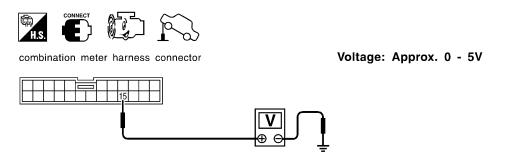

SEL939WA

	OK or NG		
ОК	>	ABS control unit is OK.	
NG	•	 Check the following. Harness for open or short between ABS actuator and electric unit and combination meter. ABS actuator and electric unit. Refer to BR-72, "Wheel Sensor or Rotor". 	

METERS AND GAUGES

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

INSPECTION/ENGINE REVOLUTION SIGNAL

G[NAEL0201S05 $\mathbb{M}\mathbb{A}$ EM LC EC FE

1	CHECK ECM OUTPUT			
	Combination me connector (M24)	Higher rpm = Higher voltage Lower rpm = Lower voltage Voltage should change with rpm.		
			SEL364WB	
	OK or NG			
OK		Engine revolution signal is OK.		
NG	•	Harness for open or short between ECM and combination meter		

AT

TF

CL

MT

PD

SU

 $\mathbb{A}\mathbb{X}$

BR

ST

RS

BT


HA

SC


EL

INSPECTION/FUEL LEVEL SENSOR UNIT

=NAEL0201S06

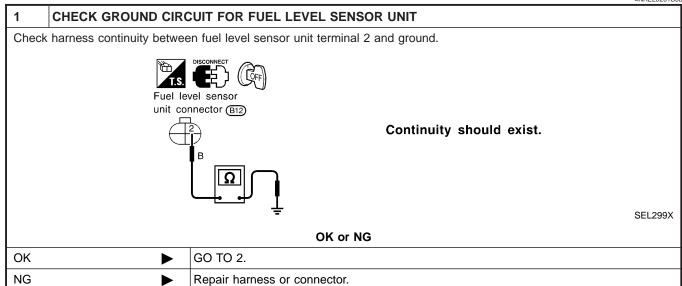

2	CHECK FUEL LEVEL SENSOR UNIT			
Refer	Refer to "FUEL LEVEL SENSOR UNIT CHECK" (EL-108).			
	OK or NG			
OK	OK ▶ GO TO 3.			
NG	>	Replace fuel level sensor unit.		

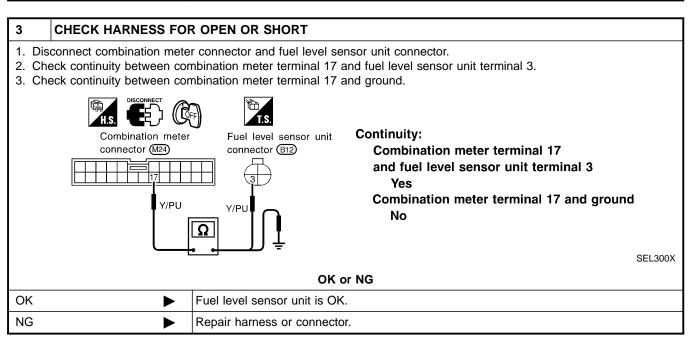

METERS AND GAUGES

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

GI

MA

EM

INSPECTION/THERMAL TRANSMITTER


THERMAL TRANSMITTER

Refer to "THERMAL TRANSMITTER CHECK" (EL-108).

OK or NG

OK

Replace.

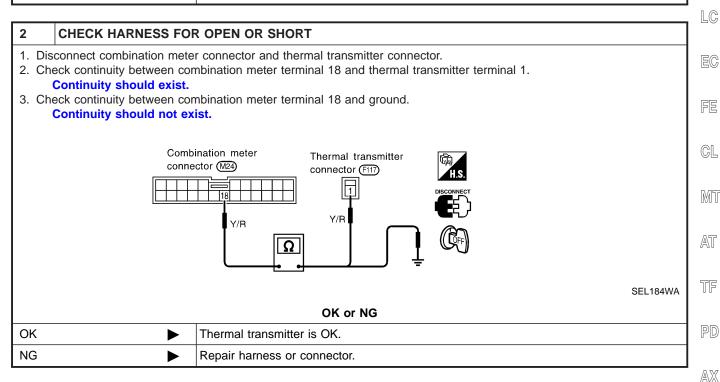

SU

BR

ST

BT

HA


SC


Electrical Components Inspection METER/GAUGE RESISTANCE CHECK

=NAEL0202

NAEL0202S01 Check resistance between installation screws of meter/gauge.

Screws		Resistance
Tacho/Speedometer Fuel/Temp. gauge		Ω
A - C	A - C	Approx. 190 - Approx. 260
B - D	B - C	Approx. 230 - Approx. 310

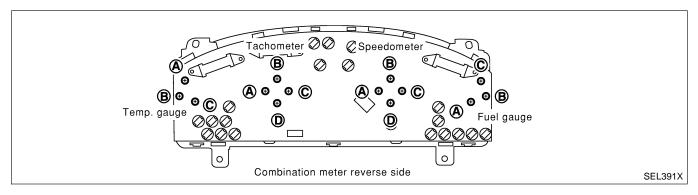

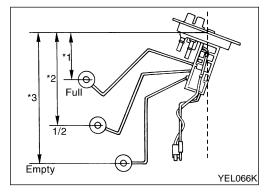


FUEL LEVEL SENSOR UNIT CHECK

NAEL0202S02

For removal, refer to FE-4, "FUEL SYSTEM". Check the resistance between terminals 3 and 2.

Ohmmeter		Float position mm (in)			Resistance
(+)	(-)	value Ω			
3	2	*1	Full	95 (3.74)	Approx. 4 - 6
		*2	1/2	184 (7.24)	31 - 34
		*3	Empty	265 (10.43)	80 - 83

^{*1} and *3: When float rod is in contact with stopper.

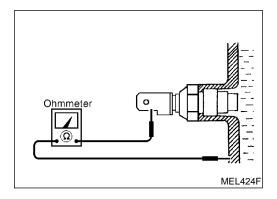

THERMAL TRANSMITTER CHECK

Check the resistance between the terminals of thermal transmitter and body ground.

Water temperature	Resistance	
60°C (140°F)	Approx. 170 - 210Ω	
100°C (212°F)	Approx. 47 - 53Ω	

COMPASS AND THERMOMETER SMART C/U - PREVIOUS

System Description

System Description

NAEL0153



MA

EM

LC

EC


GL

MIT

AT

PD

AX

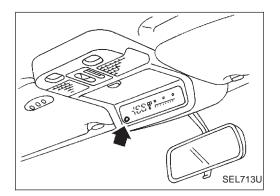

This unit displays following items:

- Earth magnetism and heading direction of vehicle.
- Outside air temperature.
- Caution for frozen road surfaces.

OUTSIDE TEMPERATURE DISPLAY

Push the switch when the ignition key is in the "ACC" or "ON" position. The outside temperature will be displayed in "°F".

- Selecting the indication range Push the switch to change from "°F" to "°C".
- When the outside temperature drops below freezing point, ICE is displayed on the unit.
- When the outside temperature is between 55°C (130°F) and 70°C (158°F), the display shows 55°C
- When the outside temperature is lower than -30°C (-20°F) or higher than 70°C (158°F), the display shows only "---" though it is operating. This is not a problem.
- The indicated temperature on the thermometer is not readily affected by engine heat. It changes only when one of the following conditions is present.
- a) The temperature detected by the ambient air temperature sensor is lower than the indicated temperature on the thermometer.
- b) The difference in temperature detected during a period of 40 seconds is less than 1°C (1.8°F) when vehicle speed has been greater than 24 km/h (15 MPH) for more than 100 seconds. (This is to prevent the indicated temperature from being affected by engine heat or cooling fan operation during low-speed driving.)
- c) The ignition key has been turned to the "OFF" position for more than 4 hours. (The engine is cold.)


DIRECTION DISPLAY

Push the switch when the ignition key is in the "ACC" or "ON" position. The direction will be displayed.

HA

BT

SC

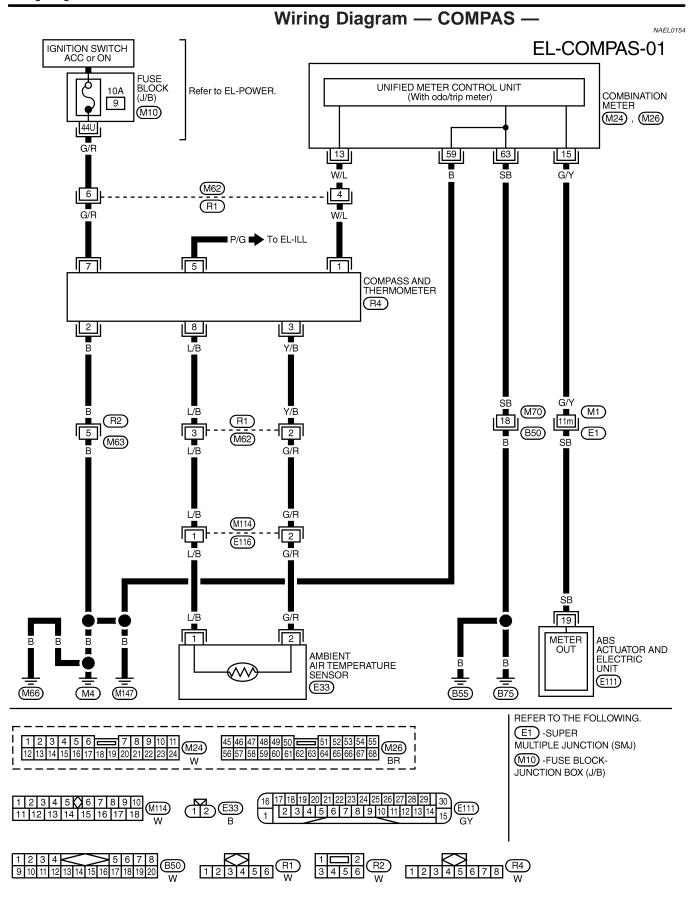

Trouble Diagnoses

Trouble Diagnoses

PRELIMINARY CHECK FOR THERMOMETER

NAEL0048

NAEL0048S02

MA

LC

MI

AX

1	COOL DOWN CHECK			
 Turn the ignition key switch to the "ACC" position. Cool down the ambient air temperature sensor with water or ice, so that the indicated temperature falls. 				
Does the indicated temperature fall?				
Yes	Yes GO TO 2.			
No	No The system is malfunctioning. Check the system following "INSPECTION/COMPASS AND THERMOMETER".			

	EC
nector.	FE
	GL

2	WARM UP CHECK			
 Leave the vehicle for 10 minutes, so that the indicated temperature rises. With the ignition key in the "ACC" position, disconnect and reconnect the ambient air temperature sensor connector. 				
	Does the indicated temperature rise?			
Yes	Yes The system is OK.			
No	•	The system is malfunctioning. Check the system following "INSPECTION/COMPASS AND THERMOMETER".		

NOTE:

- When the outside temperature is between 55°C (130°F) and 70°C (158°F), the display shows 55°C (130°F). When the outside temperature is lower than -30°C (-20°F) or higher than 70°C (158°F), the display shows only "---".
- The indicated temperature on the thermometer is not readily affected by engine heat. It changes only when one of the following conditions is present.
- The temperature detected by the ambient air temperature sensor is lower than the indicated temperature on the thermometer.
- b) The difference in temperature detected during a period of 40 seconds is less than 1°C (1.8°F) when vehicle speed has been greater than 24 km/h (15 MPH) for more than 100 seconds. (This is to prevent the indicated temperature from being affected by engine heat or cooling fan operation during low-speed driving.)
- The ignition key has been turned to the "OFF" position for more than 4 hours. (The engine is cold.)

INSPECTION/COM	PASS AND THERMOMETER	NAEL0048S01
Symptom	Possible causes	Repair order
No display at all	1. 10A fuse 2. Ground circuit 3. Compass and thermometer	Check 10A fuse [No. 9, located in fuse block (J/B)]. Turn the ignition switch ON and verify that battery positive voltage is at terminal 7 of compass and thermometer. Check ground circuit for compass and thermometer. Replace compass and thermometer.
Forward direction indication slips off the mark or incorrect.	In manual correction mode (Bar and display vanish.) Zone variation change is not done.	 Drive the vehicle and turn at an angle of 90°. Perform the zone variation change.
Compass reading remains unchanged.	Vehicle speed signal is not entered. Compass and thermometer	Check harness for open or short between combination meter terminal 13 and compass and thermometer terminal 1. Replace compass and thermometer.
Displays wrong temperature when ambient temperature is between -30°C (-20°F) and 55°C (130°F). (See NOTE above.)	 Check operation Ambient air temperature sensor circuit Vehicle speed signal is not entered. Ambient air temperature sensor Compass and thermometer 	 Perform preliminary check shown above. Check harness for open or short between ambient air temperature sensor and compass and thermometer. Check harness for open or short between combination meter terminal 13 and compass and thermometer terminal 1. Replace ambient air temperature sensor. Replace compass and thermometer.


EL


HA

SC

Calibration Procedure for Compass

The difference between magnetic North and geographical North can sometimes be great enough to cause false compass readings. In order for the compass to operate accurately in a particular zone, it must be calibrated using the following procedure.

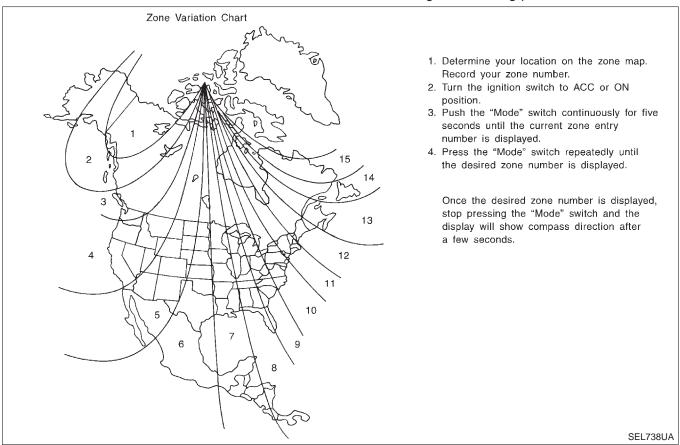

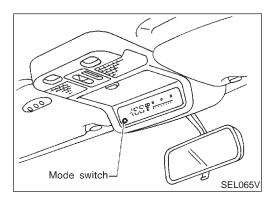

CORRECTION FUNCTIONS OF COMPASS

The direction display is equipped with automatic correction function. If the direction is not shown correctly, carry out initial correc-

INITIAL CORRECTION PROCEDURE FOR COMPASS

- Pushing the "Mode" switch for about 10 seconds will enter the initial correction mode. The direction bar starts blinking.
- Turn the vehicle slowly in an open, safe place. The initial correction is completed in one or two turns.


NOTE:


In places where the terrestrial magnetism is extremely disturbed, the initial correction may start automatically.

Schematic


Schematic


NAEL0049

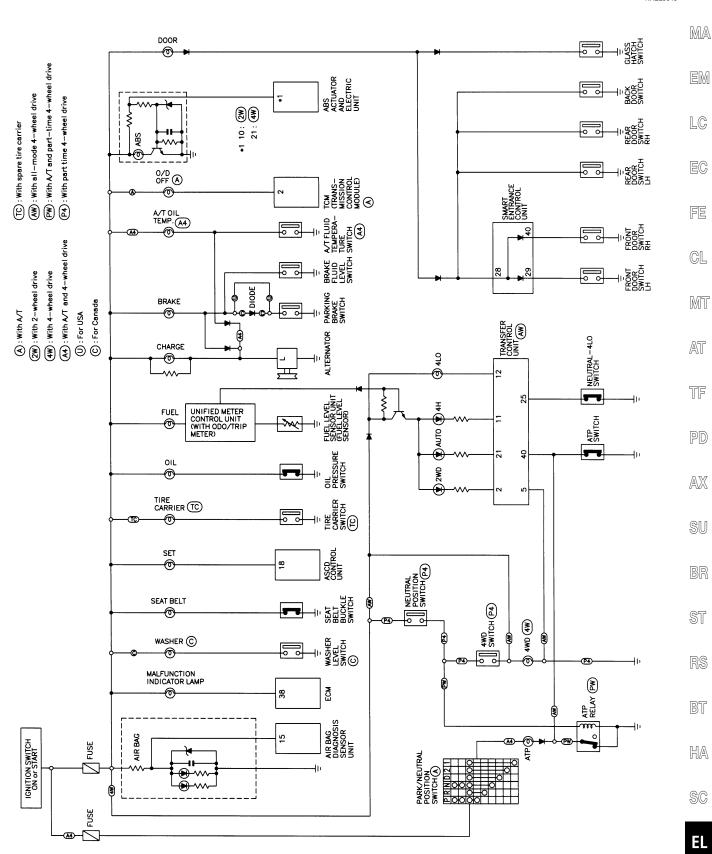

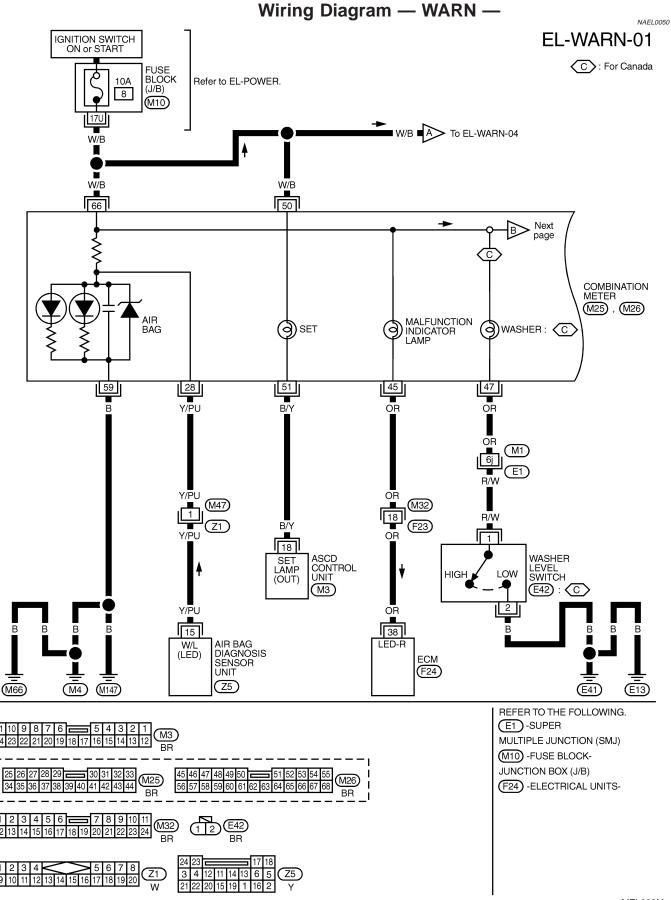



Wiring Diagram — WARN — (Cont'd)

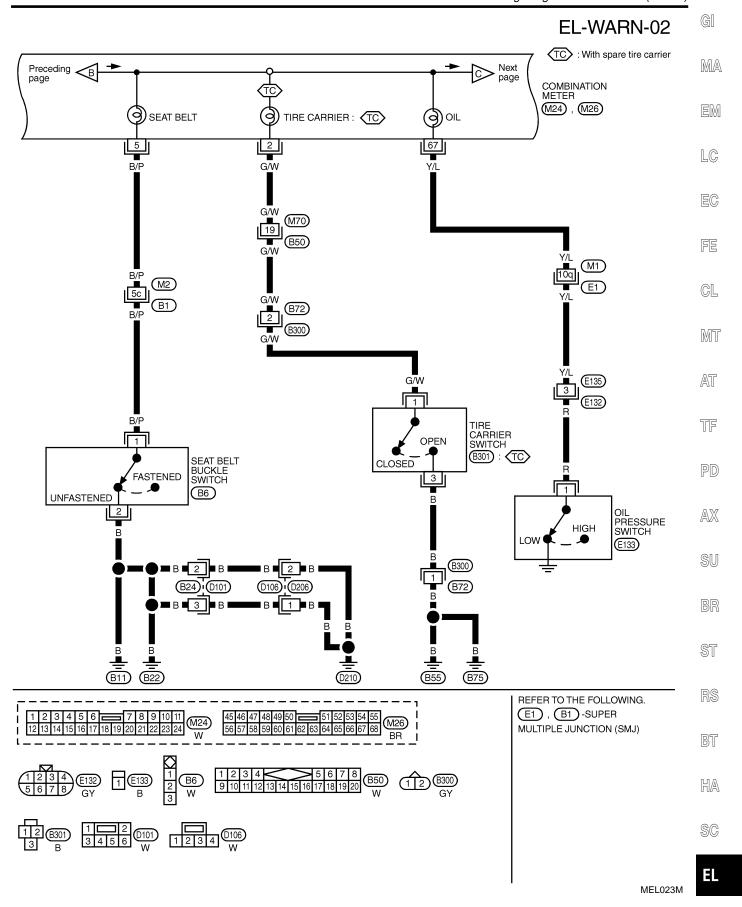


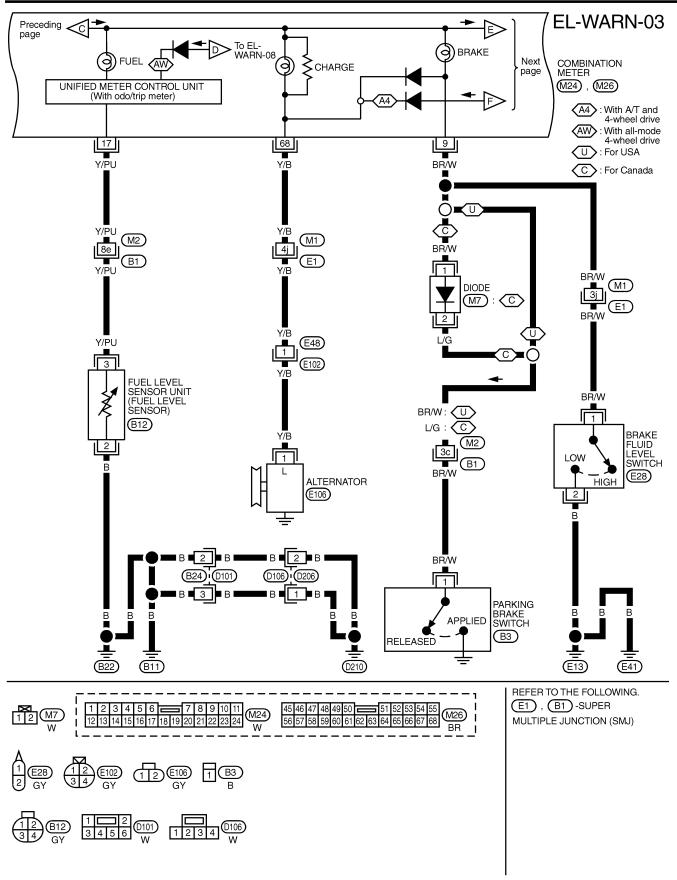


[DX

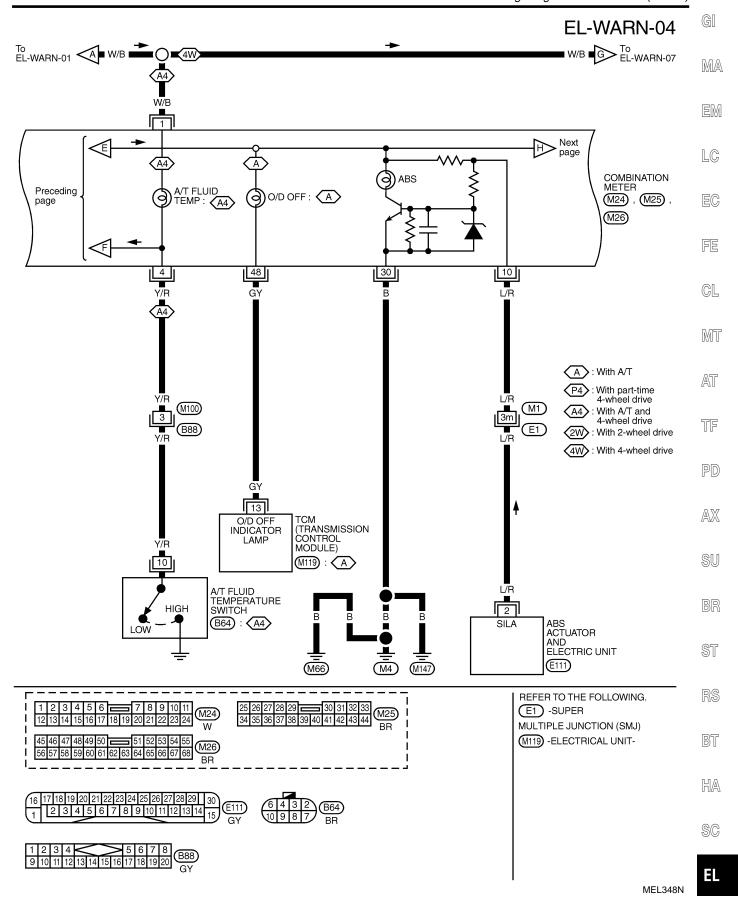

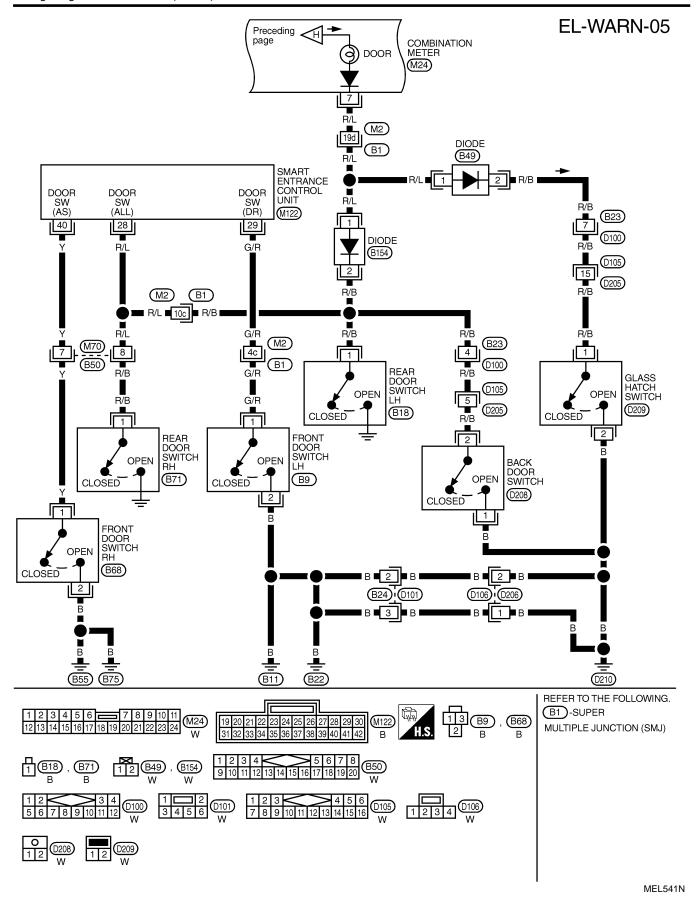


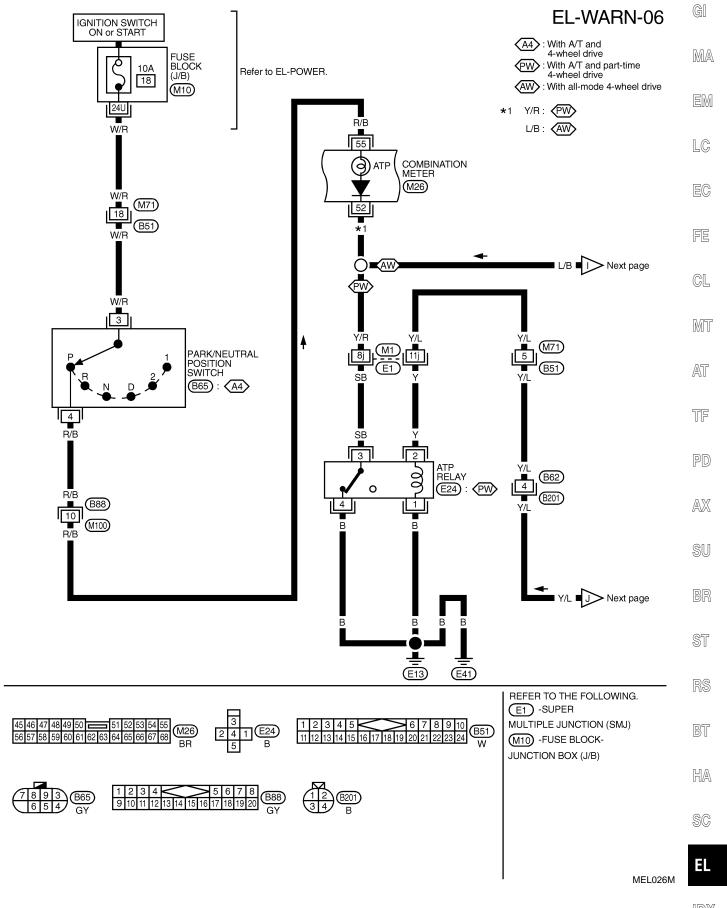

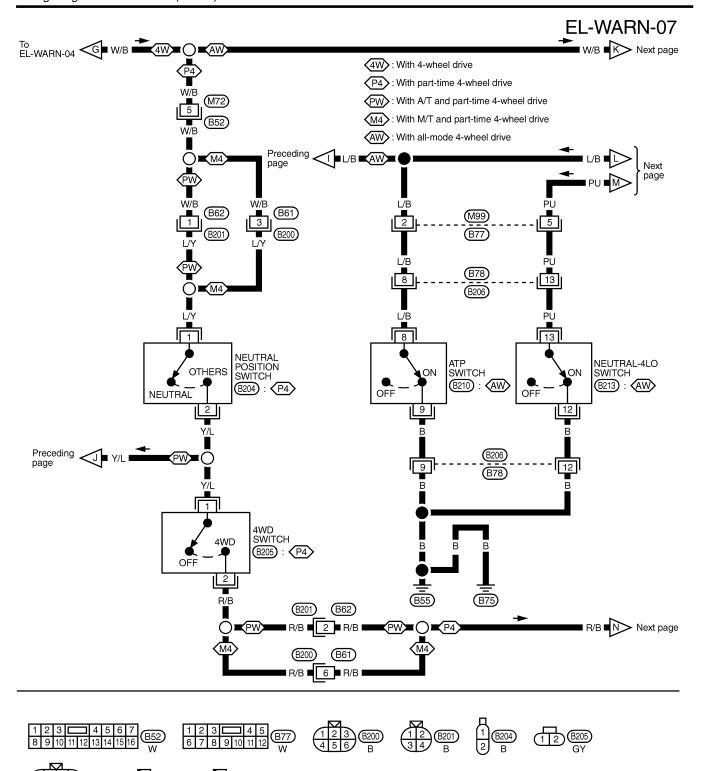


MEL027M

Wiring Diagram — WARN — (Cont'd)

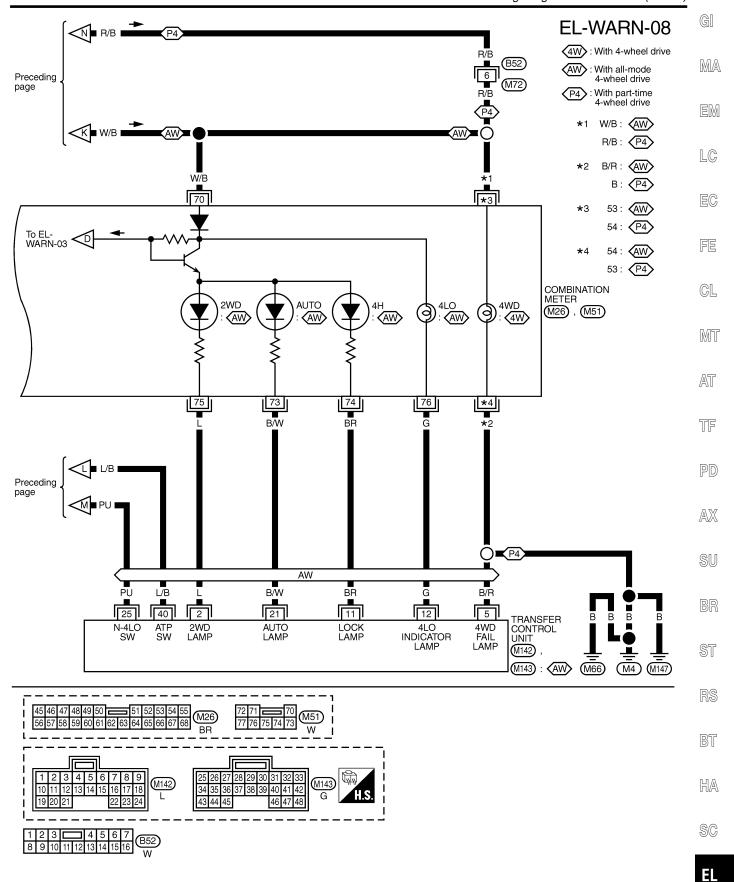

MEL028M

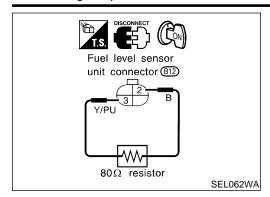

Fuel Warning Lamp Sensor Check

NAEL0166


- 1. Turn ignition switch "OFF".
- 2. Disconnect fuel level sensor unit harness connector B12.
- 3. Connect a resistor (80Ω) between fuel tank gauge unit harness connector terminals 2 and 3.
- 4. Turn ignition switch "ON".

The fuel warning lamp should come on.

NOTE:

ECM might store the 1st trip DTC P0180 during this inspection. If the DTC is stored in ECM memory, erase the DTC after reconnecting fuel tank gauge unit harness connector.

Refer to EC-74, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION".

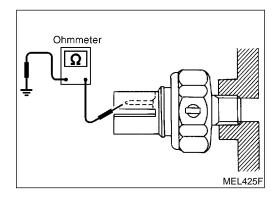


Electrical Components Inspection OIL PRESSURE SWITCH CHECK

NAEL0051

NAEL0051S02

	Oil pressure kPa (kg/cm², psi)	Continuity
Engine start	More than 10 - 20 (0.1 - 0.2, 1 - 3)	NO
Engine stop	Less than 10 - 20 (0.1 - 0.2, 1 - 3)	YES

Check the continuity between the terminals of oil pressure switch and body ground.

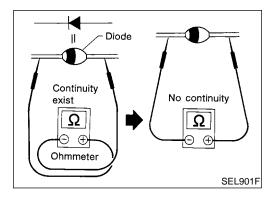

DIODE CHECK

NAEL0051S03

- Check continuity using an ohmmeter.
- Diode is functioning properly if test results are as shown in the figure at left.
- Check diodes at the combination meter harness connector instead of checking them on the combination meter assembly. Refer to EL-114, "WARNING LAMP" wiring diagrams.

NOTE

Specification may vary depending on the type of tester. Before performing this inspection, be sure to refer to the instruction manual for the tester to be used.

Component Parts and Harness Connector Location

Component Parts and Harness Connector Location

MA EM

GI

LC

FE

GL

MIT

AT


TF

PD

AX

SU

BR

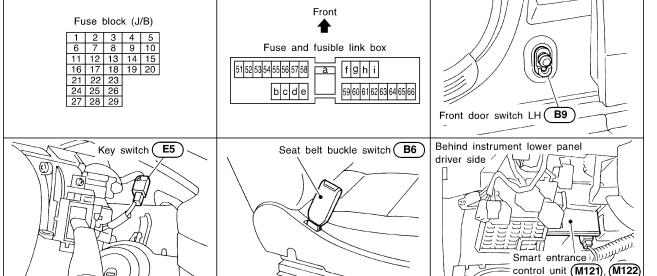

SEL046W

System Description

NAFL0053

The warning chime is controlled by the smart entrance control unit. The warning chime is located in the smart entrance control unit. Power is supplied at all times

- through 7.5A fuse [No. 24, located in the fuse block (J/B)]
- to smart entrance control unit terminal 10, and
- to key switch terminal 1, and
- through 10A fuse [No. 61, located in the fuse block (J/B)]
- to tail lamp relay terminals 1 and 3.

With the ignition switch in the ON or START position, power is supplied

- through 7.5A fuse [No. 11, located in the fuse block (J/B)]
- to smart entrance control unit terminal 33.

Ground is supplied to smart entrance control unit terminal 16 through body grounds M77 and M111.

IGNITION KEY WARNING CHIME

With the key in the ignition switch in the OFF or ACC position, and the driver's door open, the warning chime sill sound. Power is supplied

from kev switch terminal 1

to smart entrance control unit terminal 32.

Ground is supplied

- from front door switch LH terminal 1
- to smart entrance control unit terminal 29.

Front door switch LH terminal 2 is grounded through body grounds B11, B22 and D210.

LIGHT WARNING CHIME

With ignition switch OFF or ACC, driver's door open, warning chime will sound. [Except when headlamp battery saver control operates (for 45 seconds after ignition switch is turned to OFF or ACC position) and headlamps do not illuminate.] Power is supplied.

- from tail lamp relay terminal 5
- to smart entrance control unit terminal 34.

Ground is supplied

from front door switch LH terminal 1

SC

BT

HA

to smart entrance control unit terminal 29.

Front door switch LH terminal 2 is grounded through body grounds B11, B22 and D210.

SEAT BELT WARNING CHIME

NAEL0053S03


With ignition switch turned ON and seat belt unfastened (seat belt switch ON), warning chime will sound for approximately 6 seconds.


Ground is supplied

- from seat belt switch terminal 1
- to smart entrance control unit terminal 22.

Seat belt switch terminal 2 is grounded through body grounds B11, B22 and D210.

[DX

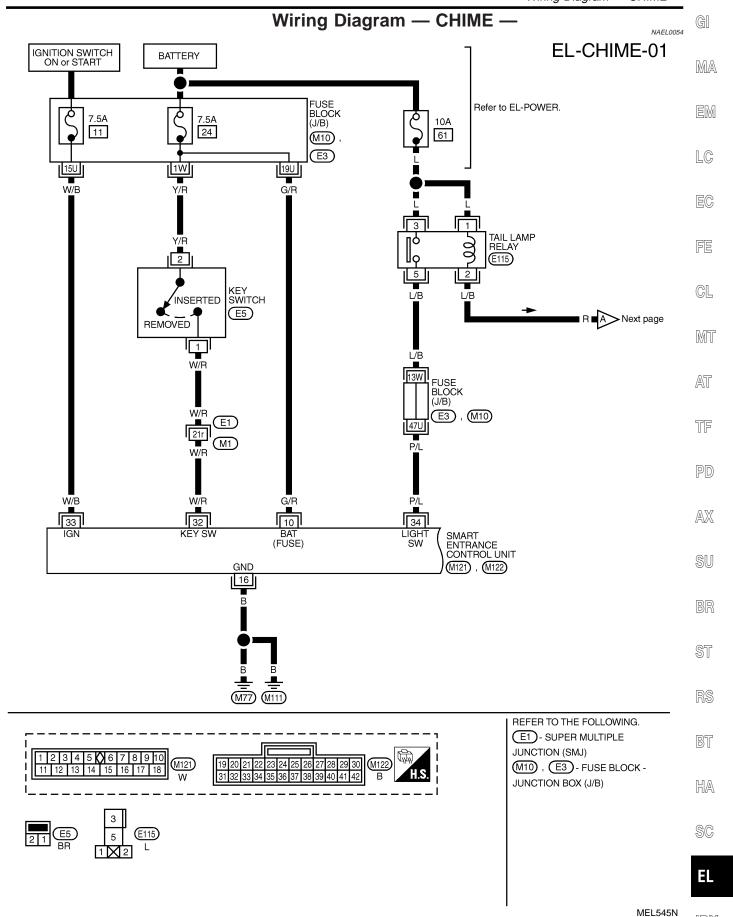

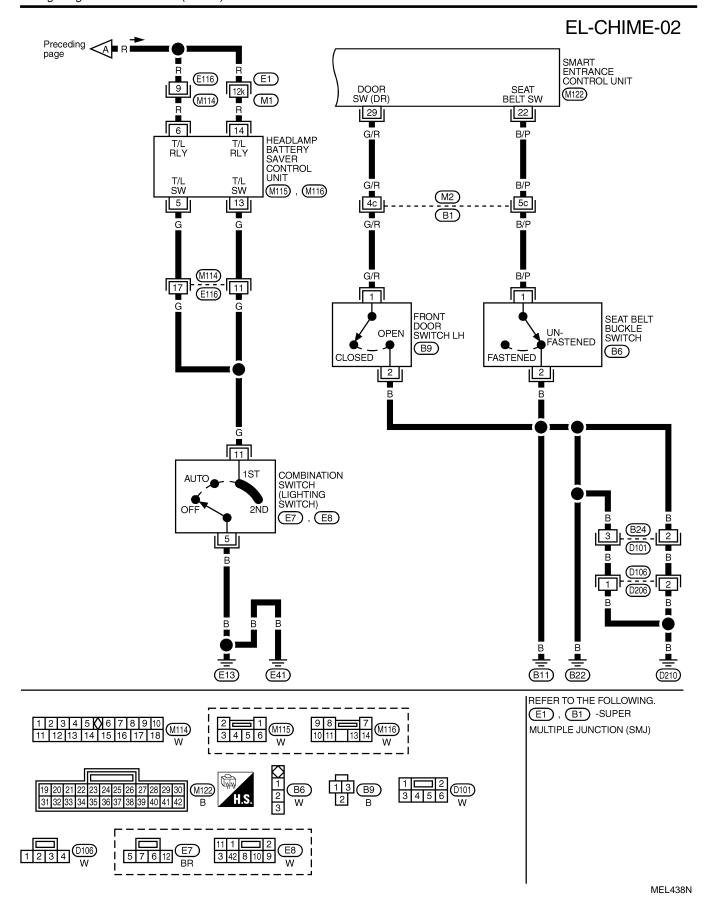

Trouble Diagnoses

Trouble Diagnoses
SYMPTOM CHART

NAEL0055

G[

MA

EM

LC

EG

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

	STIV	IPTOW CHAR	X I		NAEL00555	S01
REFERENCE PAGE (EL-)	127	129	131	132	133	_
SYMPTOM	POWER SUPPLY AND GROUND CIRCUIT CHECK	LIGHTING SWITCH INPUT SIGNAL CHECK	KEY SWITCH (INSERT) CHECK	SEAT BELT BUCKLE SWITCH CHECK	DRIVER SIDE DOOR SWITCH CHECK	
Light warning chime does not activate.	X	X			X	_
Ignition key warning chime does not activate.	Х		Х		Х	_
Seat belt warning chime does not activate.	Х			Х		
All warning chimes do not activate.	Х					_



BR

POWER SUPPLY AND GROUND CIRCUIT CHECK NAEL0055502 **Power Supply Circuit Check** NAEL0055S0201

Terminals		Ignition switch position			
(+)	(-)	OFF	ACC	ON	
10	Ground	Battery voltage	Battery voltage	Battery voltage	
33	Ground	0V	0V	Battery voltage	

RS

BT

ST


If NG, check the following.


- 7.5A fuse [No. 11, located in fuse block (J/B)].
- 7.5A fuse [No. 24, located in fuse block (J/B)].
- Harness for open or short between smart entrance control unit and fuse.

HA

SC



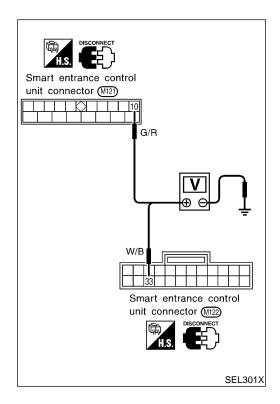

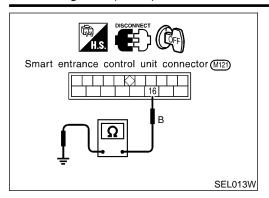

NAEL0055\$0202
Continuity
Yes

GI

MA

EM

LC

EC

FE


GL

MT


AT

TF



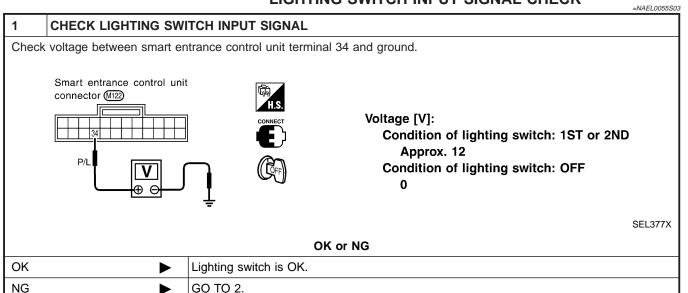

2	CHECK FUSE		
Is 10A fuse (No. 61, located in the fuse and fusible link box) OK?			
OK or NG			
ОК	OK ▶ GO TO 3.		
NG	>	Replace fuse.	

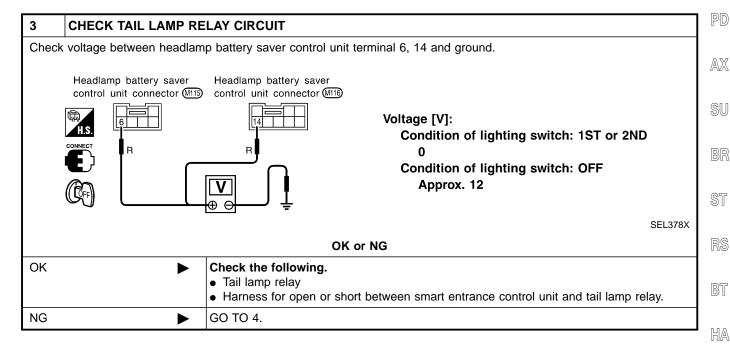

SC

CHECK TAIL LAMP SWITCH GROUND CIRCUIT 1. Disconnect headlamp battery saver control unit connector. 2. Check continuity between headlamp battery saver control unit terminal 5, 13 and ground. Headlamp battery saver Headlamp battery saver control unit connector M115 control unit connector M116 Continuity: Condition of lighting switch: 1ST or 2ND Condition of lighting switch: OFF No SEL379X OK or NG OK Check headlamp battery saver control unit. Refer to EL-43. NG Check the following. · Lighting switch • Harness for open or short between headlamp battery saver control unit terminal 5, 13 and lighting switch terminal 11 • Harness between lighting switch terminal 5 and ground





G[


MA

LC

EC

FE

GL

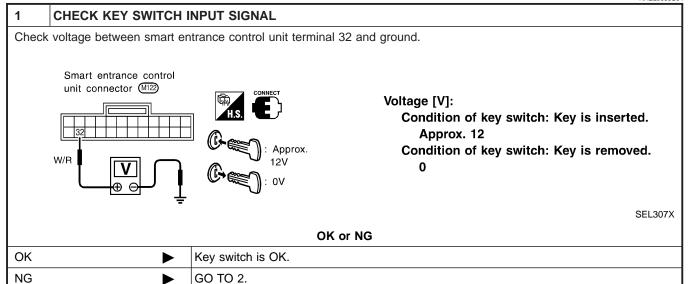

2 CHECK	(KEY SWITCH (INSERT)		Mī
Check continuit	ty between terminals 1 and 2.		AT
Key	switch connector (E5)	Continuity:	TF
		Condition of key switch: Key is inserted. Yes Condition of key switch: Key is removed.	PD
		No	A)
		SEL308X	ெ
		OK or NG	Sl
OK	Harness for open	lg. I, located in fuse block (J/B)] I or short between key switch and fuse I or short between smart entrance control unit and key switch	BF
	• Harriess for open	of Short Botwoon Smart Shirance Sonitor and Rey Switch	\$1

RS

BT

HA


SC

SEAT BELT BUCKLE SWITCH CHECK

=NAFL0055S05

1 CHECK SEAT BELT BUCKLE SWITCH INPUT SIGNAL

- 1. Turn ignition switch "ON".
- 2. Check voltage between smart entrance control unit terminal 22 and ground.

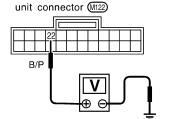

Smart entrance control

Voltage [V]:

Condition of seat belt buckle switch: Fastened Approx. 12

Condition of seat belt buckle switch: Unfastened


SEL380X

OK or NG

OK •	Seat belt buckle switch is OK.
NG ►	GO TO 2.

CHECK SEAT BELT BUCKLE SWITCH

Check continuity between terminals 1 and 2 when seat belt is fastened and unfastened.

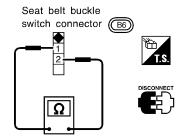

Continuity:

Seat belt is fastened.

No

Seat belt is unfastened.

Yes

SEL381X

OK or NG

OK Check the following.

• Seat belt buckle switch ground circuit

- Harness for open or short between smart entrance control unit and seat belt buckle switch
- NG Replace seat belt buckle switch.



NAEL0055S06

MA


EM


LC

EC

FE

GL

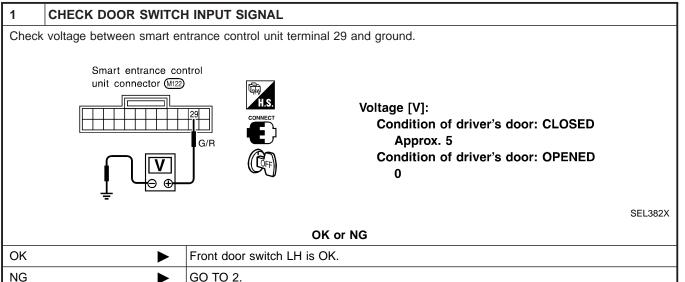

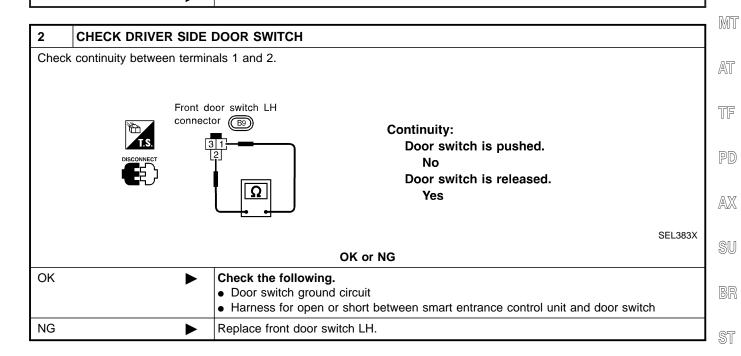

RS

BT

HA

SC

ĒL

System Description

WIPER OPERATION

NAEL0057

NAFL0057S01

The front wiper switch is controlled by a lever built into the combination switch.

There are three wiper switch positions:

- LO speed
- HI speed
- INT (Intermittent)

With the ignition switch in the ACC or ON position, power is supplied

- through 20A fuse [No. 19, located in the fuse block (J/B)]
- to front wiper motor terminal 1, and
- to front wiper switch terminal 15.

Low and High Speed Wiper Operation

NAEL0057S0101

Ground is supplied to front wiper switch terminal 17 through body grounds E13 and E41.

When the wiper switch is placed in the LO position, ground is supplied

- through terminal 14 of the front wiper switch
- to front wiper motor terminal 5.

With power and ground supplied, the front wiper motor operates at low speed.

When the front wiper switch is placed in the HI position, ground is supplied

- through terminal 16 of the front wiper switch
- to front wiper motor terminal 3.

With power and ground supplied, the front wiper motor operates at high speed.

Auto Stop Operation

NAEL0057S01

With front wiper switch turned OFF, front wiper motor will continue to operate until wiper arms reach windshield base.

When wiper arms are not located at base of windshield with front wiper switch OFF, ground is provided

- from terminal 14 of the front wiper switch
- to front wiper motor terminal 5, in order to continue front wiper motor operation at low speed.

Ground is also supplied

- to terminal 13 of the front wiper switch
- through front wiper motor terminal 4
- through terminal 6 of the front wiper motor, and
- through body grounds M77 and M111.

When wiper arms reach base of windshield, front wiper motor terminals 1 and 4 are connected instead of terminals 4 and 6. Wiper motor will then stop wiper arms at the PARK position.

Intermittent Operation

IAEL0057S0103

The front wiper motor operates the wiper arms one time at low speed at a set interval of approximately 2 to 13 seconds. This feature is controlled by the wiper amplifier built in the front wiper switch.

When the front wiper switch is placed in the INT position, ground is supplied

- to wiper amplifier (INT SW)
- from front wiper switch terminal 17
- through body grounds E13 and E41, and
- to front wiper motor terminal 5
- through the front wiper switch terminal 14
- through wiper amplifier (OUTPUT)

WASHER OPERATION

NAEL0057S02

With the ignition switch in the ACC or ON position, power is supplied

- through 20A fuse [No. 19, located in the fuse block (J/B)]
- to front washer motor terminal 1.

When the lever is pulled to the WASH position, ground is supplied

- to front washer motor terminal 2
- through terminal 18 of the front wiper switch

FRONT WIPER AND WASHER

SMART C/U - PREVIOUS

System Description (Cont'd)

- through terminal 17 of the front wiper switch, and
- through body grounds E13 and E41.

With power and ground supplied, the front washer motor operates.

When the lever is pulled to the WASH position for one second or more, the front wiper motor operates at low speed for approximately 3 seconds to clean windshield. This feature is controlled by the wiper amplifier in the same manner as the intermittent operation.

GI

LC

EG

FE

GL

MT

AT

TF

AX

PD

SU

BR

ST

RS


BT

HA

SC

EL


 \mathbb{M}

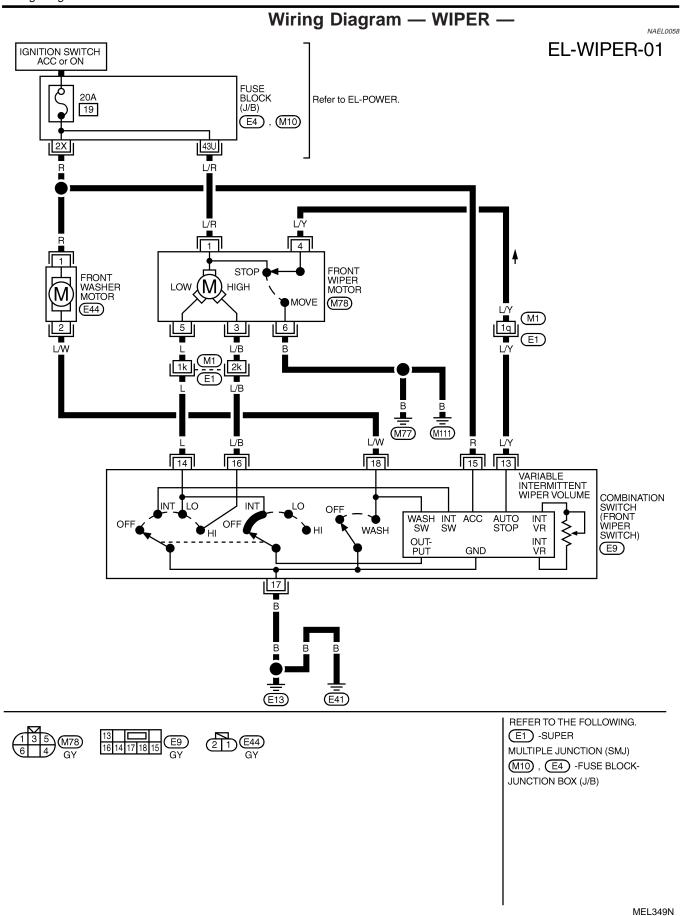

FRONT WIPER AND WASHER

SMART C/U - PREVIOUS

Removal and Installation

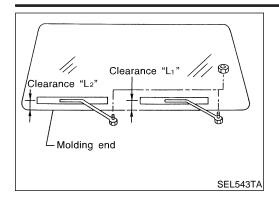

Removal and Installation WIPER ARMS

NAEL0060

Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).

MA

 Lift the blade up and then set it down onto glass surface to set the blade center to clearance "L₁" & "L₂" immediately before tightening nut.

EM

3. Eject washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".

LG

4. Ensure that wiper blades stop within clearance "L₁" & "L₂".

Clearance "L₁": 29 - 30 mm (1.14 - 1.18 in) Clearance "L₂": 32 - 42 mm (1.26 - 1.65 in)

EG

Tighten wiper arm nuts to specified torque.

Front wiper: 21 - 26 N-m (2.1 - 2.7 kg-m, 15 - 20 ft-lb)

GL

MT

AT


Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm loose-

TF

PD

AX

SU

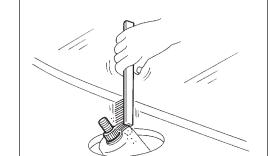


WIPER LINKAGE

SEL024J

3.8 - 5.1 (0.39 - 0.52, 33.9 - 45.1)

ness.

NAEL0060S02

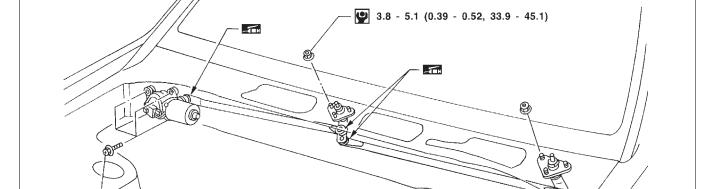

HA

SC

EL

MEL840F

-11M

Removal

NAEL0060S0201


- 1. Remove 4 bolts that secure wiper motor.
- 2. Detach wiper motor from wiper linkage at ball joint.
- 3. Remove wiper linkage.

Be careful not to break ball joint rubber boot.

Installation

NAEL0060S0202

- Grease ball joint portion before installation.
- 1. Installation is the reverse order of removal.

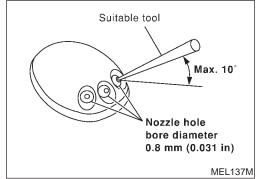


Washer Nozzle Adjustment

NAFI 006

 Adjust washer nozzle with suitable tool as shown in the figure at left.

Adjustable range: ±10°

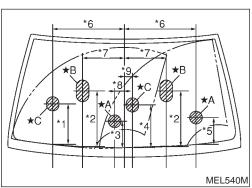


Unit: mm (in)

*1	251 (9.88)	*6	459 (18.07)
*2	351 (13.82)	*7	256 (10.08)
*3	165 (6.50)	*8	67 (2.64)
*4	269 (10.59)	*9	42 (1.65)
*5	167 (6.57)		

^{*}A: The diameters of these circles are less than 80 mm (3.15 in).

Washer Tube Layout

NAEL0062

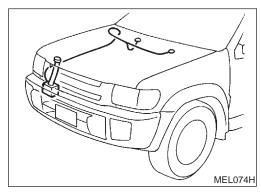

^{*}B: The diameter of this circle is less than 138 \times 80 mm (5.43 \times 3.15 in).

^{*}C: The diameter of this circle is less than 96×80 mm (3.78 \times 3.15 in).

REAR WIPER AND WASHER

SMART C/U - PREVIOUS

System Description

System Description	
System Description	GI
WIPER OPERATION	
Power Supply and Ground	$\square \square \square$
With ignition switch in the ACC or ON position, power is supplied	0.000-0
 through 10A fuse [No. 29, located in the fuse block (J/B)] 	
 to rear wiper amp. terminal 6. 	EM
When the glass hatch switch is OPEN, ground is supplied	
 to rear wiper amp. terminal 3 	LC
 through glass hatch switch terminal 1 and 2 	
 through body grounds B11, B22 and D210. 	EG
Ground is supplied	
to rear wiper amp. terminal 9	
 through body grounds B11, B22 and D210. 	FE
Low Speed Wiper Operation	ł
When the rear wiper switch is turned ON, ground is supplied	CL
• to rear wiper amp. terminal 2	
through combination switch terminals 22 and 24	MT
through body grounds E13 and E41. Then requestion applied.	UVU U
Then, power is supplied	^_
 through rear wiper amp. terminal 11 to rear wiper motor terminal 4. 	AT
Ground is supplied	
to rear wiper motor terminal 3	TF
through rear wiper amp. terminal 8.	
With power and ground supplied, the wiper motor operates at low speed.	PD
Auto Stop Operation	
With rear wiper switch turned OFF, rear wiper motor will continue to operate until wiper arm reaches rear wiper	
stopper.	
When rear wiper arm is not located at bottom with wiper switch OFF, ground is supplied	
to rear wiper amp. terminal 10	SU
through wiper motor terminals 7 and 8	
through body grounds B11, B22 and D210. The property of	BR
Then rear wiper motor continues to operate until wiper arm reaches bottom. When wiper arm reaches bottom, power is supplied	
 through 10A fuse [No. 29, located in the fuse block (J/B)] 	ST
 through rear wiper motor terminals 6 and 7 and 	◎ II
through rear wiper amp. terminals 10 and 8	50
• to rear wiper motor terminal 3.	RS
Ground is supplied	
 to rear wiper motor 4 	BT
through rear wiper amp. terminal 11.	
Then wiper motor turns the other way and wiper arm moves once until wiper arm reaches stopper.	HA
Intermittent Operation	
The rear wiper motor operates the wiper arms at low speed approximately every 7 seconds. This feature is	sc
controlled by the wiper amp. When the wiper switch is placed in the INT position, ground is supplied	96
to wiper amp. terminal 4	
through rear earth in etien equitely to residual O4 and O4	EL

Then, power is supplied

• through rear wiper amp. terminal 11

through body grounds E13 and E41.

through rear combination switch terminal 21 and 24

System Description (Cont'd)

to rear wiper motor terminal 4.

Ground is supplied

- to rear wiper motor terminal 3
- through rear wiper amp. terminal 8.

With power and ground supplied, rear wiper operates at low speed intermittent.

WIPER OPERATION PROHIBIT CONTROL

NAEL0063S03

When glass hatch is open with back door key cylinder while rear wiper is operated, wiper operation is stopped. (Wiper operation prohibit control)

When glass hatch is closed and rear wiper switch turns from OFF and then rear wiper switch is turned to ON, wiper operation prohibit control is canceled.

WASHER OPERATION

NAEL0063S02

When the rear wiper switch is turned to WASH position, ground is supplied

- to rear wiper amp. terminal 1
- through terminals 23 and 24
- through body grounds E13 and E41.

Then, power is supplied

- through rear wiper amp. terminal 7
- to rear washer motor terminal 2.


Ground is supplied

- to rear washer motor terminal 1
- through body grounds E13 and E41.


With power and ground supplied, the rear washer motor operates.


When the rear wiper switch is turned to WASH position for one second or more, the rear wiper motor operates at low speed for approximately 3 seconds after the rear wiper switch is released. This feature is controlled by the rear wiper amp. in the same manner as the low speed operation.

[DX

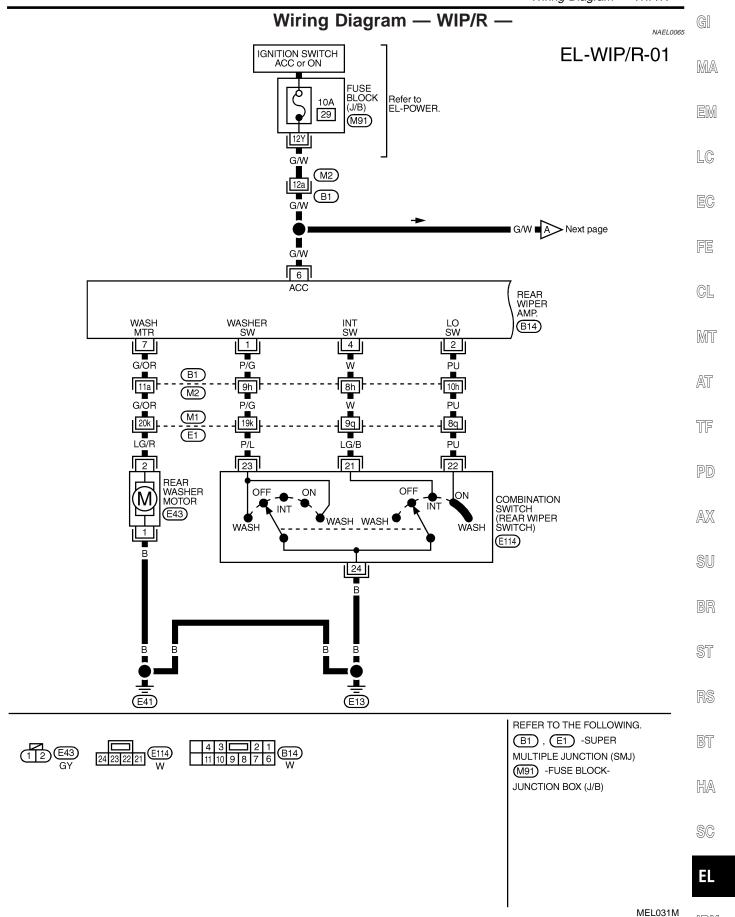

EL-WIP/R-02

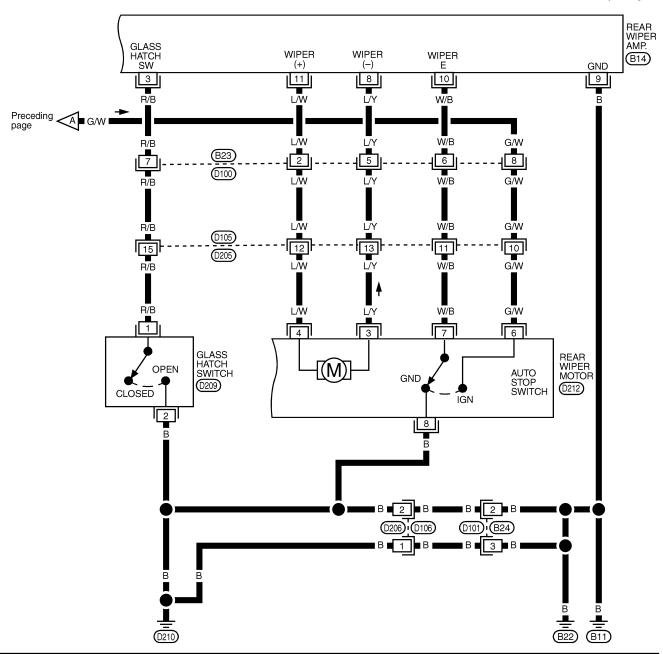

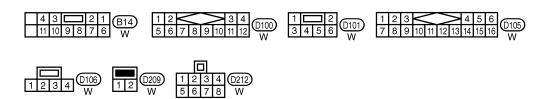

MEL032M

REAR WIPER AND WASHER

SMART C/U - PREVIOUS

Trouble Diagnoses

Trouble Diagnoses

REAR WIPER AMP. INSPECTION TABLE

NAEL0066 NAEL0066S01

MA


(Data are reference values.)

Terminal No.	Item	Condition			Voltage (Approximate value)	
1 Washer switch	Washer switch	(Lacc)	Rear wiper switch	WASH	Less than 1V	_
	(GCC)		OFF, ON or INT	Battery voltage	_	
2 Low switch	Low switch	(LCC)	Rear wiper switch	ON	Less than 1V	_
				OFF or INT	Battery voltage	_
3 Gla	Glass hatch switch	(Acc)	Glass hatch	Open	Less than 1V	_
				Closed	Battery voltage	
4 Intermittent switch	Intermittent switch	(Cc)	Rear wiper switch	INT	Less than 1V	_
				OFF, ON or WASH	Battery voltage	_
6 Power	Power supply (ACC)	(Acc)	-		Battery voltage	_
						_
7 Washer motor	(Acc)	Rear washer switch	WASH	Battery voltage		
				OFF, ON or INT	Less than 1V	
8 Rear wiper r	Rear wiper motor	per motor	Wiper is moving (except final drive)		Less than 1V	
			Wiper stop		Less than 1V	_
			During wiper final drive		Battery voltage	_
9	Ground	-			_	_
10 Auto stop switch	Auto stop switch	stop switch	Rear wiper switch should be at "INT" to	Wiper is moving	Less than 1V	_
			inspect the value for wiper movement.	Wiper stop	Battery voltage	_ A' - si
11 Rear w	Rear wiper motor	Tacc	Wiper is moving (except final drive)		Battery voltage	_
			Wiper stop		Battery voltage	_
			During wiper final drive		Less than 1V	_

NOTE:

Power to the rear wiper amp. will be interrupted when the rear glass hatch is opened. In that case, conduct the inspection of the rear wiper amp. with the rear glass hatch closed, unless otherwise indicated.



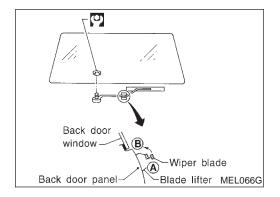

Removal and Installation WIPER ARMS

NAEL0067

HA


Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).

Install wiper arm to portion A as in figure below and tighten wiper arm nut to specification.


Then, set wiper arm to portion B.

(1.3 - 18 N·m (1.3 - 1.8 kg-m, 9 - 13 ft-lb)

EL

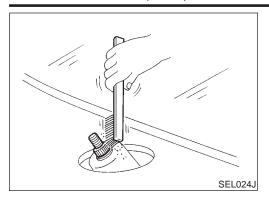

 Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness

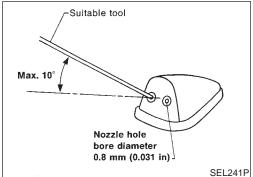


Washer Nozzle Adjustment

NAFL006


 Adjust washer nozzle with suitable tool as shown in the figure at left.

Adjustable range: ±10° (In any direction)

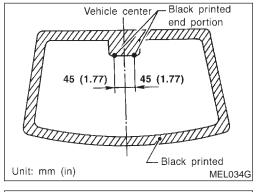

Washer Tube Layout


NAEL0069

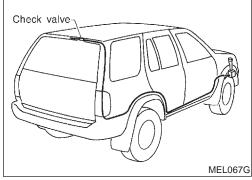


Check Valve

NAEL007

A check valve is provided in the washer fluid line. Be careful not to connect check valve to washer tube in the wrong direction.

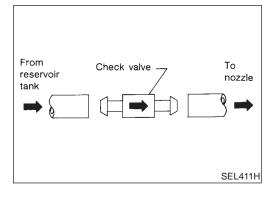


Wiring Diagram — HORN —

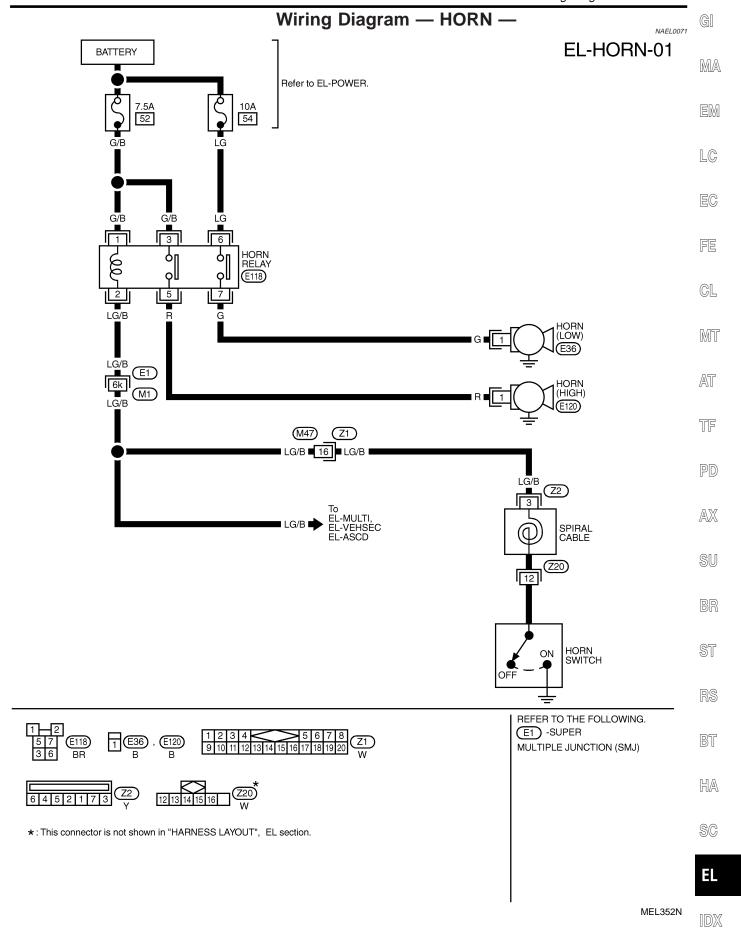


Wiring Diagram — CIGAR — NAEL0156 IGNITION SWITCH ACC or ON **EL-CIGAR-01** FUSE BLOCK (J/B) BATTERY 10A 15A 13 29 M10 , M91) Refer to EL-POWER. 15A 64 33U G/R G/W G/Y 14 G/Y **E**116 (M114) G/Y ■ P/G ➡ To EL-ILL 3 POWER SOCKET RELAY P/G 3 (M144) 2 5 ILLUMI-NATION CIGARETTE LIGHTER SOCKET (M56), (M57) (M2) (M72) CIGARETTE LIGHTER 2 4 (B1) P/B ■ P/B ᡨ To EL-ILL Q REAR POWER SOCKET POWER SOCKET (B4) (B131) B ■ 2 ■ B ■ 2 **■**B (B24) (D101) (D106) (D206) 1 **■** B ∎ B**■** 3 B22 (M147) (M77) (M111) (M4) (M66) (B55) (B75) (B11) REFER TO THE FOLLOWING. B1 - SUPER MULTIPLE 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 JUNCTION (SMJ) W M10 , M91) - FUSE BLOCK -JUNCTION BOX (J/B) 1 2 3 4 5 6 7 B52 1 B131 1 2 3 4 5 6 W 1 2 3 4 5 6 W 1 2 3 4 5 6 W

MEL353N

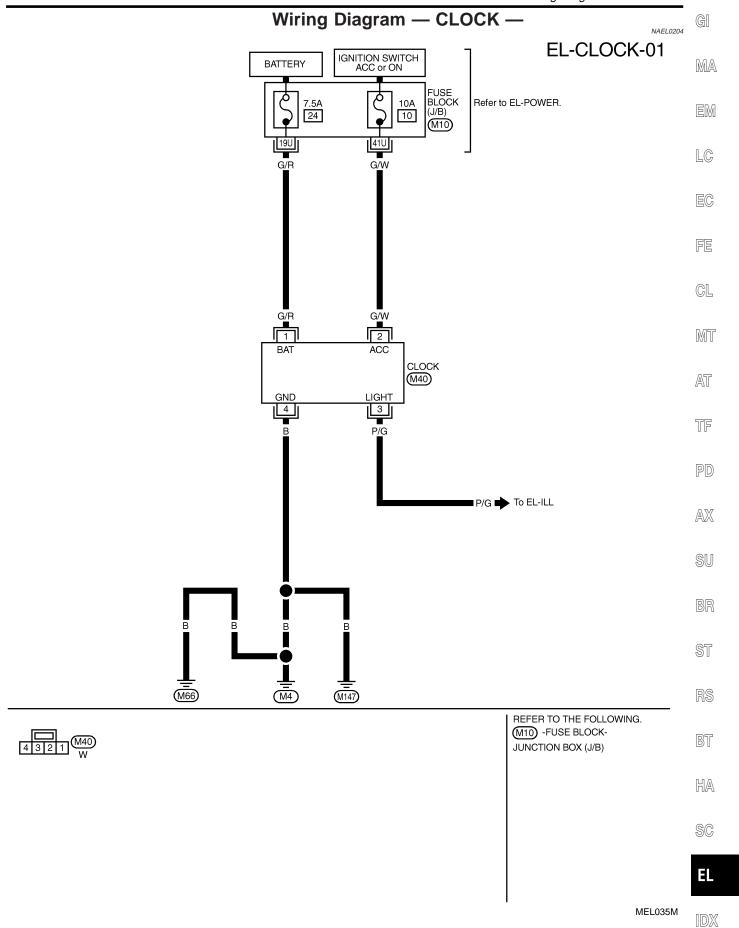

Component Parts and Harness Connector Location

NAEL0072

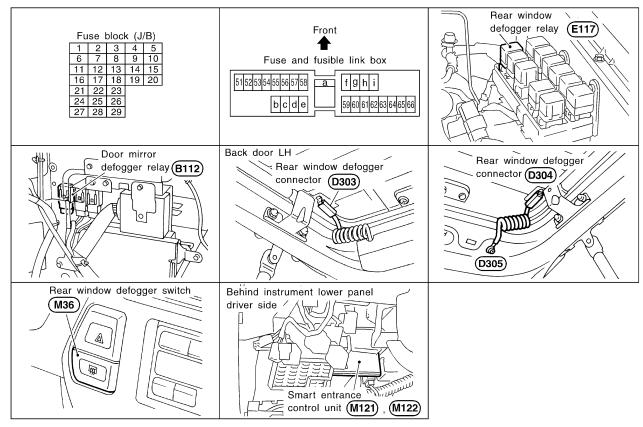

SEL465XA

System Description

The rear window defogger system is controlled by the smart entrance control unit. The rear window defogger operates only for approximately 15 minutes. Power is supplied at all times

- to rear window defogger relay terminal 3
- through 20A fuse (No. 56, located in the fuse and fusible link box) and
- to rear window defogger relay terminal 6
- through 20A fuse (No. 57, located in the fuse and fusible link box)
- to smart entrance control unit terminal 10
- through 7.5A [No. 24, located in fuse block (J/B)]

With the ignition switch in the ON or START position, power is supplied

- through 7.5A fuse [No. 11, located in the fuse block (J/B)]
- to the rear window defogger relay terminal 1, and
- to smart entrance control unit terminal 33.

Ground is supplied

- to terminal 1 of the rear window defogger switch
- through body grounds M4, M66 and M147
- to smart entrance control unit terminal 16
- through body grounds M77 and M111.

When the rear window defogger switch is turned ON, ground is supplied

REAR WINDOW DEFOGGER

SMART C/U - PREVIOUS

System Description (Cont'd)

- through terminal 2 of the rear window defogger switch
- to smart entrance control unit terminal 39.

Terminal 2 of the smart entrance control unit then supplies ground to the rear window defogger relay terminal 2.

MA

GI

With power and ground supplied, the rear window defogger relay is energized.

EM

Power is supplied

- through terminals 5 and 7 of the rear window defogger relay
- to the rear window defogger.

The rear window defogger has an independent ground.

LC

With power and ground supplied, the rear window defogger filaments heat and defog the rear window. When the system is activated, the rear window defogger indicator illuminates in the rear window defogger switch.

EG

Power is supplied

- to terminal 3 of the rear window defogger switch
- from terminal 7 of the rear window defogger relay.

Terminal 4 of the rear window defogger switch is grounded through body grounds M4, M66 and M147.

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST


RS

BT


HA

SC

EL

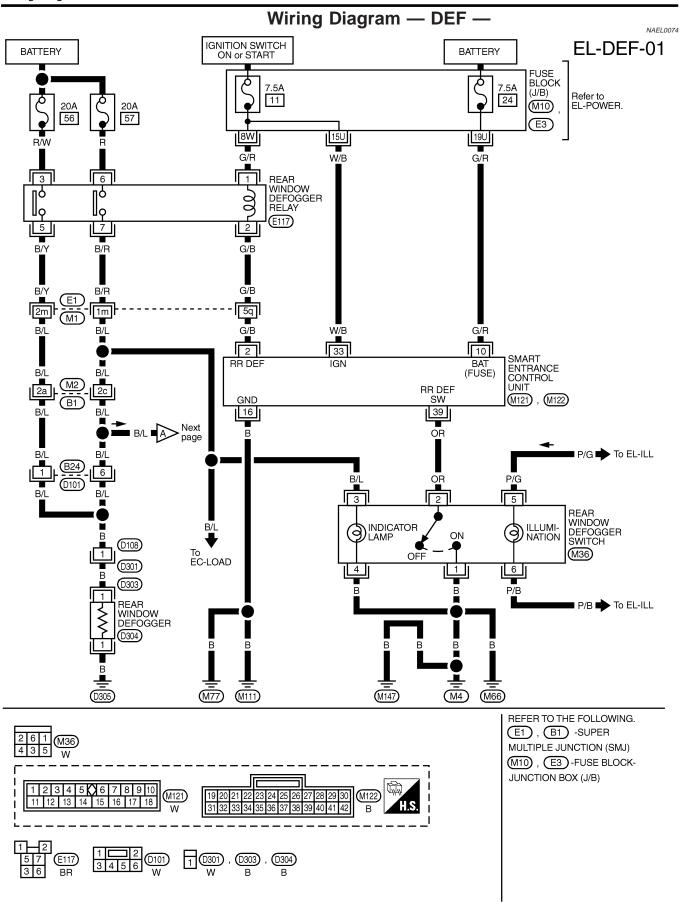


Wiring Diagram — DEF — (Cont'd)

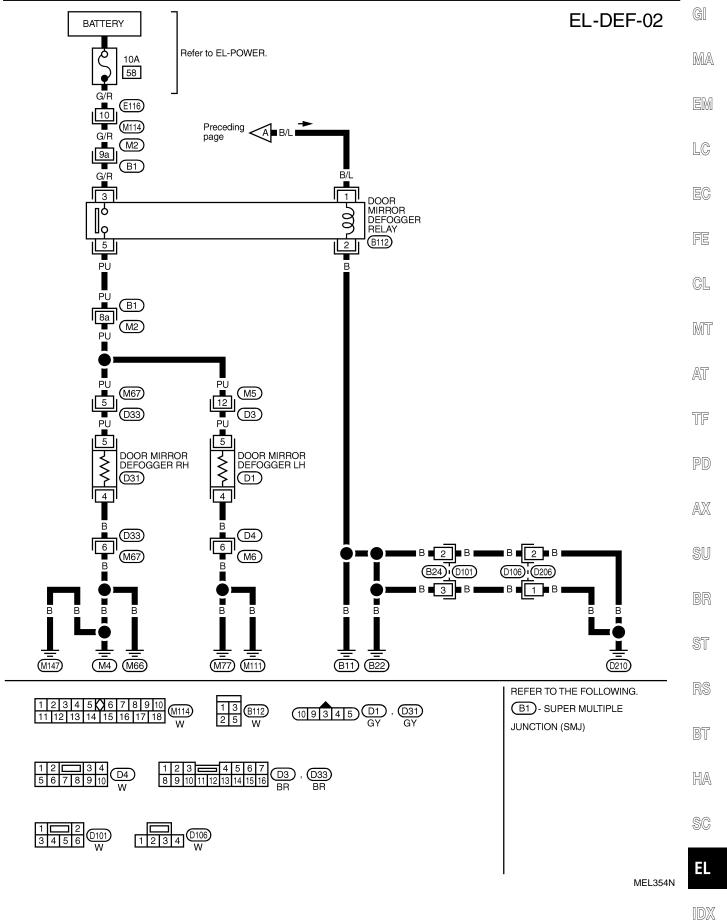

Trouble Diagnoses DIAGNOSTIC PROCEDURE


NAEL0075

SYMPTOM: Rear window defogger does not activate, or does not go off after activating.

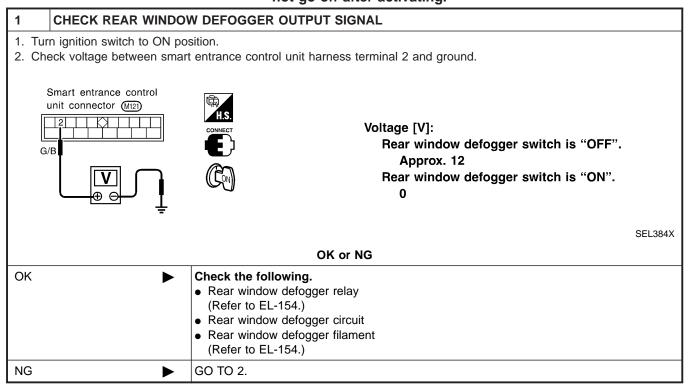

2 CHECK DEFOGGER RELAY COIL SIDE CIRCUIT

- 1. Disconnect smart entrance control unit connector.
- 2. Turn ignition switch to ON position.
- 3. Check voltage between smart entrance control unit terminal 2 and ground.

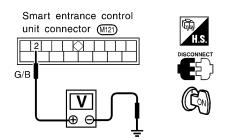


Battery voltage should exist.

SEL385X

OR OF NG	
OK ▶ GO TO 3.	
NG ►	 Check the following. 7.5A fuse [No. 11, located in the fuse block (J/B)] Rear window defogger relay Harness for open or short between rear window defogger relay and smart entrance control unit

REAR WINDOW DEFOGGER

Trouble Diagnoses (Cont'd)

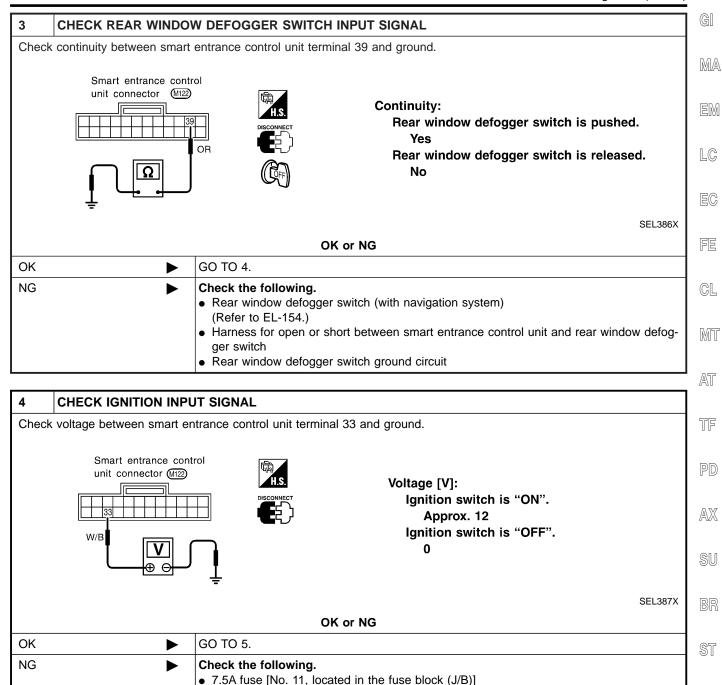

SC


HA


BT

3

 $\mathbb{D}X$

· Harness for open or short between smart entrance control unit and fuse

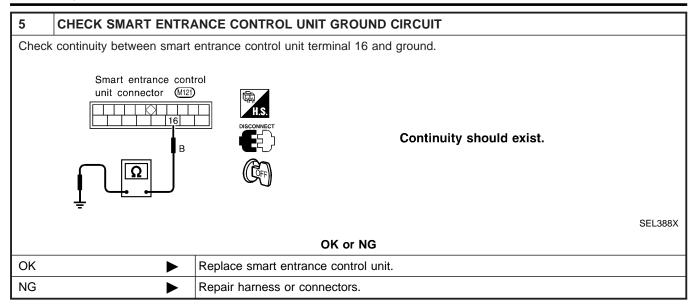

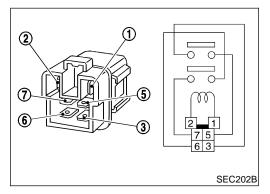


Electrical Components Inspection REAR WINDOW DEFOGGER RELAY

NAEL0076

NAEL0076S01

Check continuity between terminals 3 and 5, 6 and 7.

Condition	Continuity
12V direct current supply between terminals 1 and 2	Yes
No current supply	No

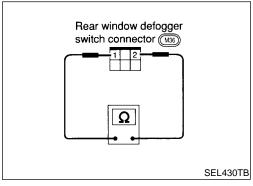


REAR WINDOW DEFOGGER SWITCH

Check continuity between terminals when rear window defogger switch is pushed and released.

Terminals	Condition	Continuity
1 - 2	Rear window defogger switch is pushed	Yes
	Rear window defogger switch is released	No

Filament Check


Attach probe circuit tester (in volt range) to middle portion of each filament.

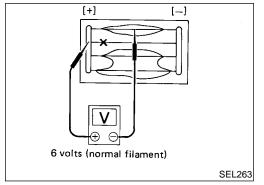



REAR WINDOW DEFOGGER

SMART C/U - PREVIOUS

Filament Check (Cont'd)

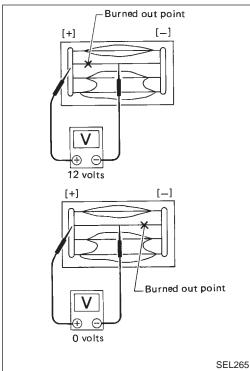

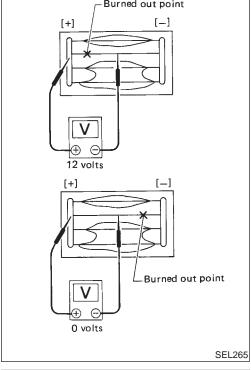

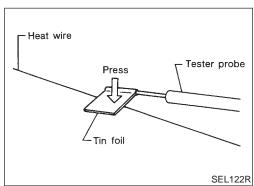

2. If a filament is burned out, circuit tester registers 0 or 12 volts. To locate burned out point, move probe to left and right along filament. Test needle will swing abruptly when probe passes the point.

MA

EM

LC

EC

GL

MIT

When measuring voltage, wrap tin foil around the top of the negative probe. Then press the foil against the wire with your finger.

TF

PD

AX

SU

Filament Repair REPAIR EQUIPMENT

NAEL0078

Conductive silver composition (Dupont No. 4817 or equivalent)

Ruler 30 cm (11.8 in) long

Drawing pen 3)

4) Heat gun

5) Alcohol

Cloth

REPAIRING PROCEDURE

HA

Wipe broken heat wire and its surrounding area clean with a cloth dampened in alcohol.


2. Apply a small amount of conductive silver composition to tip of drawing pen.




Shake silver composition container before use.

EL


Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.

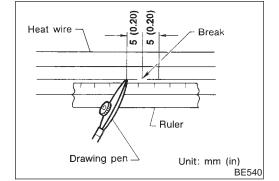

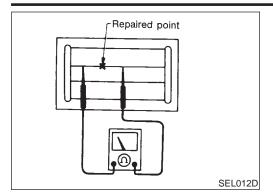

After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited.

Do not touch repaired area while test is being conducted.

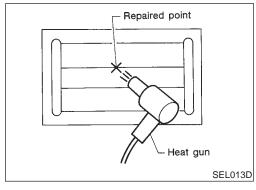


5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet. If a heat gun is not available, let the repaired area dry for 24 hours.


System Description

System Description	NAEL0226	GI
Refer to Owner's Manual for audio system operating instructions.	IVALLUZZU	
BASE SYSTEM	NAFI 0226S01	MA
Power is supplied at all times	NAELUZZ6301	
 through 15A fuse [No. 4, located in the fuse block (J/B)] 		EM
to audio unit terminal 6, and		
to CD player terminal 4 (with CD player). And the state of the s		п
With the ignition switch in the ACC or ON position, power is supplied		LC
 through 10A fuse [No. 10, located in the fuse block (J/B)] to audio unit terminal 10, and 		
to addio drift terminal 10, and to CD player terminal 1 (with CD player).		EG
Ground is supplied through the case of the audio unit.		
When the audio unit power knob is pushed to the ON position, audio signals are supplied		FE
• through audio unit terminals 1, 2, 3, 4, 13, 14, 15 and 16		
to the front and rear speakers.		
BOSE SYSTEM		GL
Power is supplied at all times	NAEL0226S02	
through 15A fuse [No. 4, located in the fuse block (J/B)]		MT
to audio unit terminal 6,		
 to audio amp. relay terminal 3, 		AT
• to rear speaker amp. terminal 11,		
to CD auto changer terminal 12 (with CD auto changer) and		TF
• to AUX box terminal 7 (with rear TV).		шш
With the ignition switch in the ACC or ON position, power is supplied		
 through 10A fuse [No. 10, located in the fuse block (J/B)] to audio unit terminal 10, 		PD
to addio drift terminal 10, to CD auto changer terminal 16 (with CD auto changer) and		
to AUX box terminal 6 (with rear TV).		$\mathbb{A}\mathbb{X}$
Ground is supplied through the case of the audio unit.		
Ground is supplied		SU
 to audio amp. relay terminal 2, 		00
 through body grounds M4, M66 and M147 		a a
to front door speaker LH terminal 5 and		BR
to front door speaker RH terminal 5		
through body grounds M77 and M111 through B77 a		ST
 to rear speaker amp. terminal 24 and to AUX box terminal 8 (with rear TV) 		
 to AUX box terminal 8 (with rear TV) through body grounds B11, B22 and D210 		RS
to CD auto changer terminal 15 and		
• to rear TV switch terminal 3		BT
 through body grounds M4, M66 and M147. 		
When the audio unit POWER button is pressed, power is supplied to rear speaker amp. term	ninal 9 and audio	ппо
amp. relay terminal 1 from audio unit terminal 12. Then audio amp. relay is energized and p	ower is supplied	HA
to front door speaker LH terminal 4 and		
• to front door speaker RH terminal 4.		SC
Audio signals are supplied		
 through audio unit terminals 1, 2, 3, 4, 13, 14, 15 and 16 to terminals 2 and 6 of the LH and RH front speakers and terminals 5, 7, 18 and 20 of 	the rear eneator	EL
amn	uic icai speakel	

to rear LH and RH speakers through terminals 1, 2, 25 and 26 of the rear speaker amp.


to LH and RH tweeters through terminals 1 and 3 of the front speakers

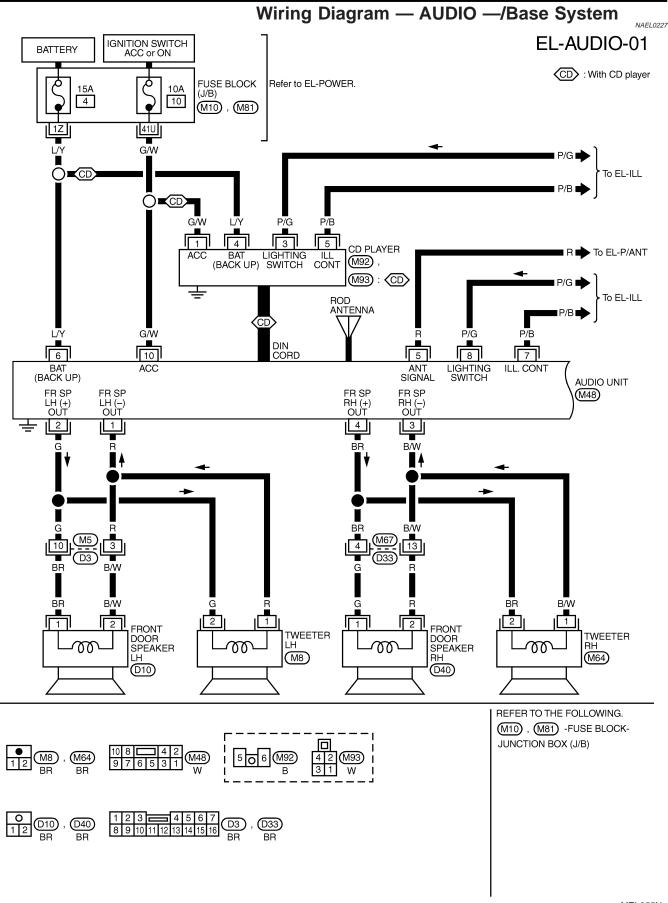

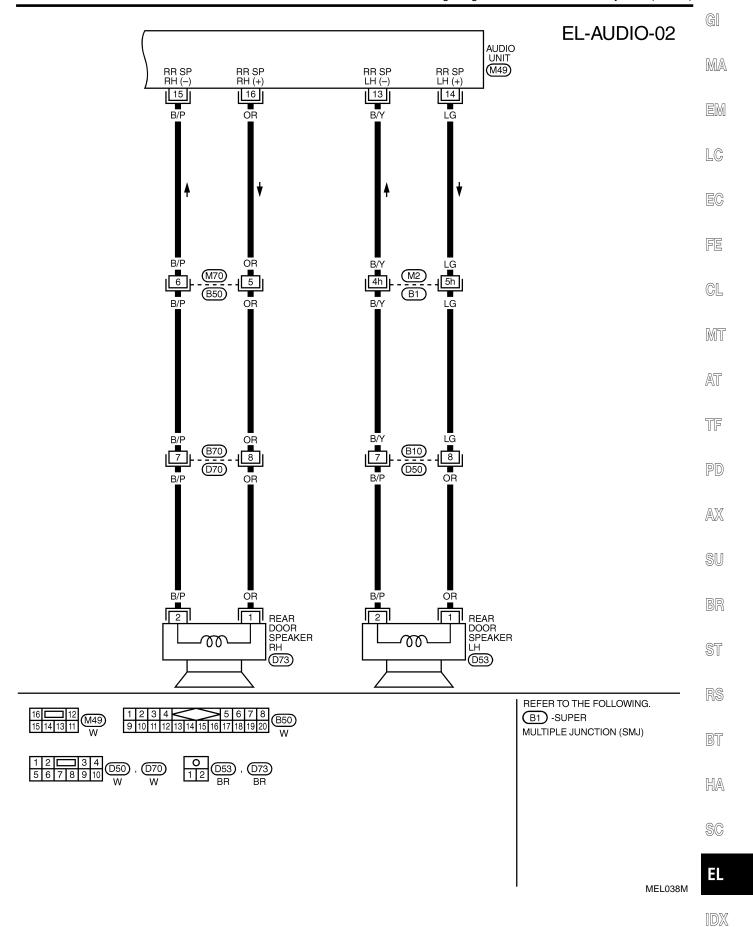


Schematic/BOSE System

NAEL0080

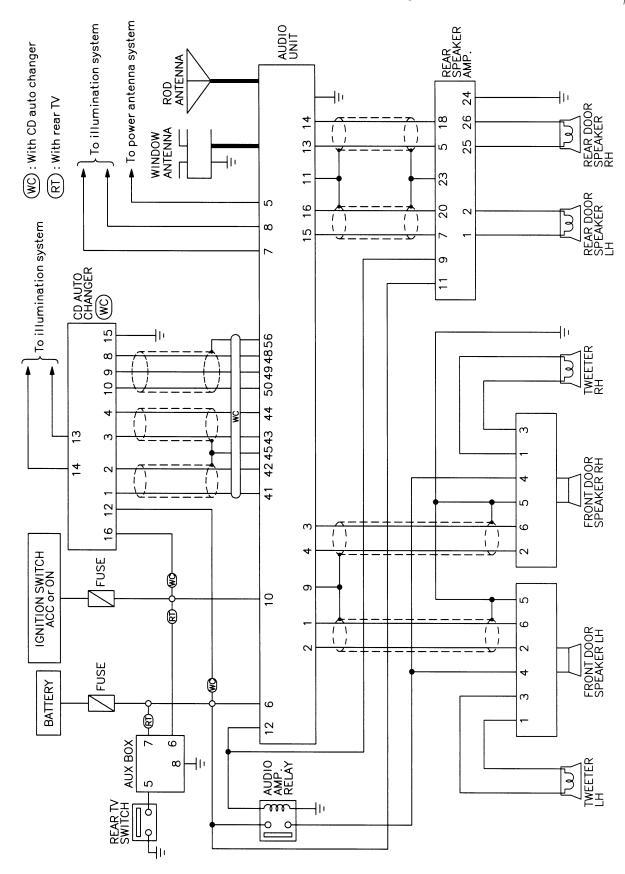



MEL356N


[DX

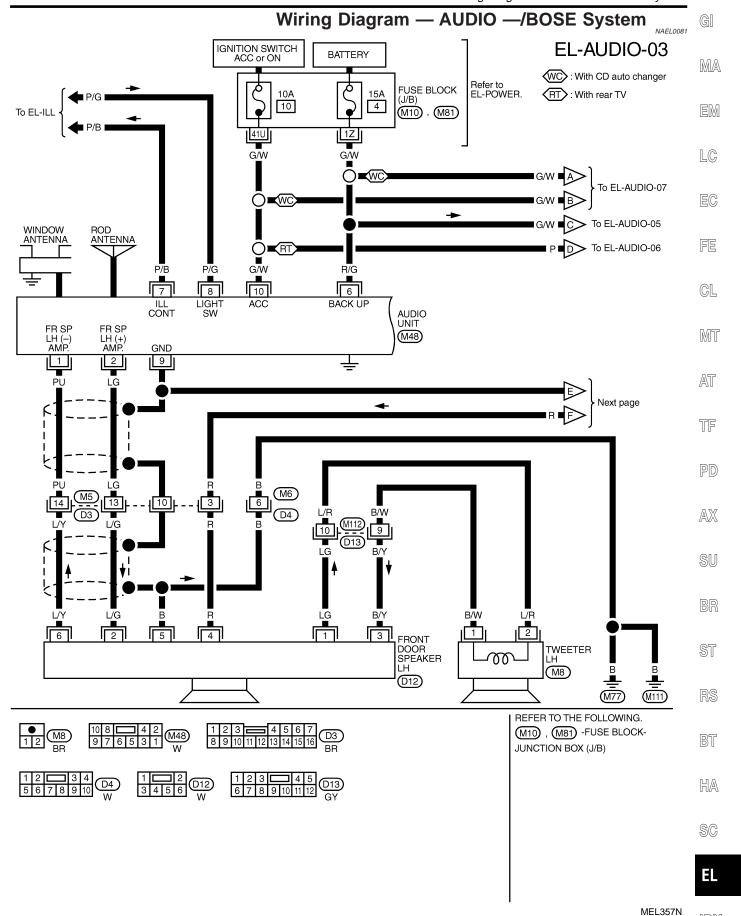





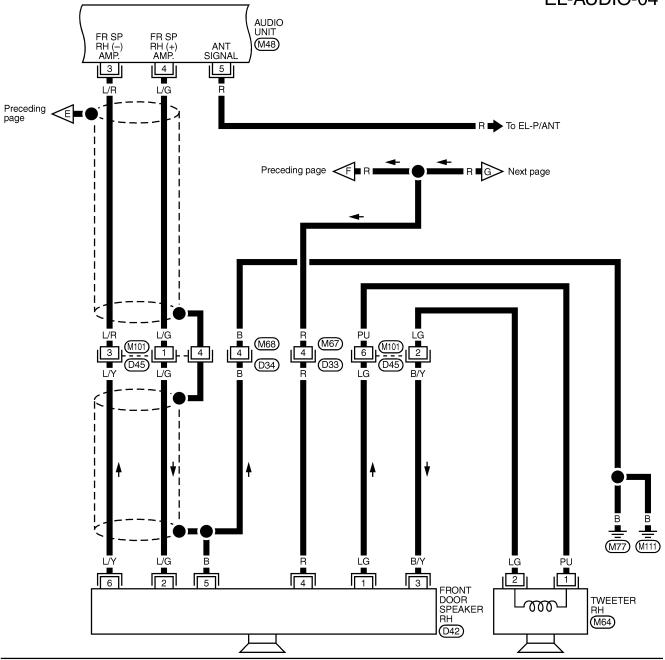

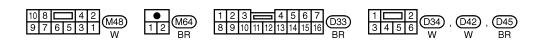

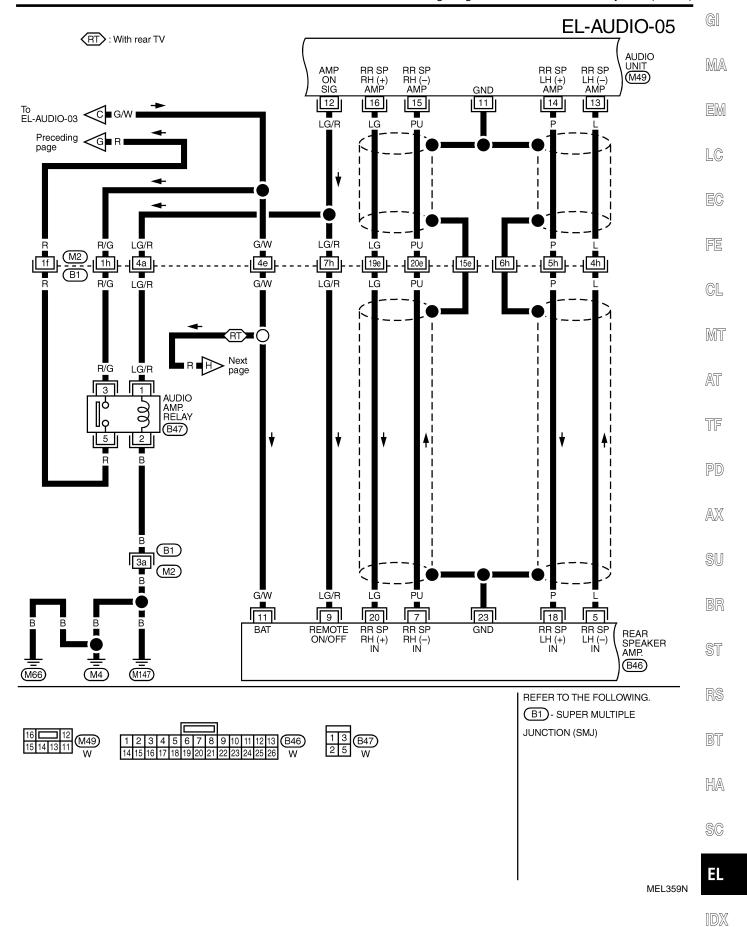

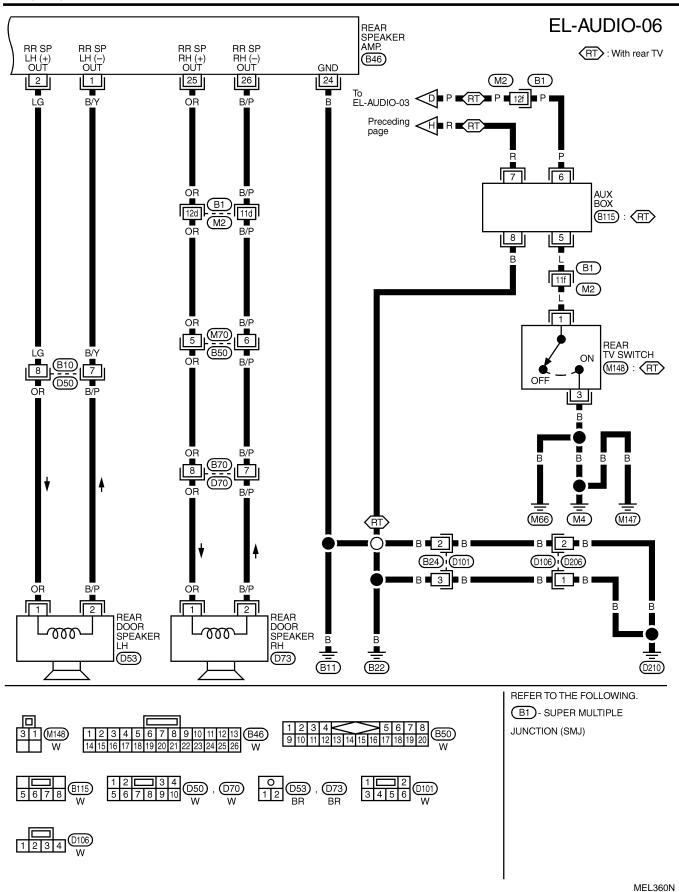

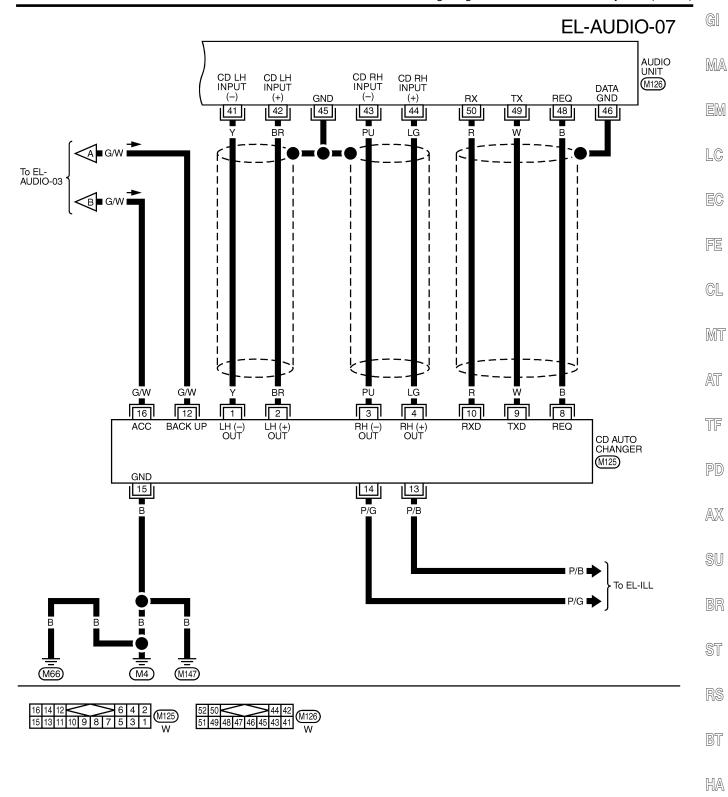

MEL044M

SC

EL

Trouble Diagnoses

AUDIO UNIT NAEL0228

Symptom	Possible causes	Repair order
Audio unit inoperative (no digital display and no sound from speakers).	1. 10A fuse 2. Poor audio unit case ground 3. Audio unit	Check 10A fuse [No. 10, located in fuse block (J/B)]. Turn ignition switch ON and verify that battery positive voltage is present at terminal 10 of audio unit. Check audio unit case ground. Remove audio unit for repair.
Audio unit presets are lost when ignition switch is turned OFF.	1. 15A fuse 2. Audio unit	Check 15A fuse [No. 4, located in fuse block (J/B)] and verify that battery positive voltage is present at terminal 6 of audio unit. Remove audio unit for repair.
AM stations are weak or noisy (FM stations OK).	Antenna Poor audio unit ground Audio unit	Check antenna. Check audio unit ground. Remove audio unit for repair.
FM stations are weak or noisy (AM stations OK).	Window antenna Audio unit	Check window antenna. Remove audio unit for repair.
Audio unit generates noise in AM and FM modes with engine running.	 Poor audio unit ground Loose or missing ground bonding straps Ignition condenser or rear window defogger noise suppressor condenser Alternator Ignition coil or secondary wiring Audio unit 	 Check audio unit ground. Check ground bonding straps. Replace ignition condenser or rear window defogger noise suppressor condenser. Check alternator. Check ignition coil and secondary wiring. Remove audio unit for repair.
Audio unit generates noise in AM and FM modes with accessories on (switch pops and motor noise).	 Poor audio unit ground Antenna Accessory ground Faulty accessory 	Check audio unit ground. Check antenna. Check accessory ground. Replace accessory.

BASE SYSTEM

NAEL0228S02

Symptom	Possible causes	Repair order
Individual speaker is noisy or inoperative.	Speaker Audio unit output Speaker circuit Audio unit	 Check speaker. Check audio unit output voltages. Check wires for open or short between audio unit and speaker. Remove audio unit for repair.

BOSE SYSTEM

NAEL0228S03

Symptom	Possible causes	Repair order
Audio unit controls are operational, but no sound is heard from any speaker.	1. 15A fuse 2. Audio unit output 3. Audio unit	 Check 15A fuse [No. 4, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 2 of audio amp. relay. Check audio unit output voltage (Terminal 12). Remove audio unit for repair.
All front speakers are inoperative.	Audio amp. relay Audio amp. relay ground Amp. ON signal	Check audio amp. relay. Check audio amp. relay ground (Terminal 3). Turn ignition switch ACC and audio unit ON. Verify battery positive voltage is present at terminal 1 of audio amp. relay.
Individual front speaker is noisy or inoperative.	 Speaker ground Power supply Audio unit output Speaker 	 Check speaker ground (Terminal 5). Check power supply for speaker (Terminal 4). Check audio unit output voltage for speaker. Replace speaker.

AUDIO

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

Symptom	Possible causes	Repair order	(6
Both rear speakers are inoperative.	Poor rear speaker amp. ground Power supply Amp. ON signal Rear speaker amp.	 Check rear speaker amp. ground circuit. Check power supply for rear speaker amp. (Terminal 11). Turn ignition switch ACC and audio unit ON. Verify battery positive voltage is present at terminal 9 of rear speaker amp. Remove rear speaker amp. for repair. 	
Individual rear speaker is noisy or inoperative.	Speaker Audio unit/amp. output Speaker circuit Audio unit	 Check speaker. Check audio unit/amp. output. Check wires for open or short between audio unit/amp. and speakers. Remove audio unit for repair. 	

Inspection

GL

MIT

TF

NAFL0229S01

AUDIO UNIT AND AMP.

All voltage inspections are made with:

- Ignition switch ON or ACC
- Audio unit ON
- Audio unit and amps. connected (If audio unit or amp. is removed for inspection, supply a ground to the case using a jumper wire.)

NAFL 0229S02

ANTENNA

- 1. Using a jumper wire, clip an auxiliary ground between antenna and body.
- If reception improves, check antenna ground (at body surface).
- If reception does not improve, check main feeder cable for short circuit or open circuit.

Audio Unit Removal and Installation

- 1. Lock the CD changer unit mechanism (if so equipped) prior to removing a malfunctioning CD changer unit. Refer to "LOCKING CD CHANGER UNIT MECHANISM", EL-167.
- 2. Remove CD changer unit. Refer to BT-22, "INSTRUMENT PANEL ASSEMBLY".

AX

LOCKING CD CHANGER UNIT MECHANISM

CAUTION:

- Prior to removing a malfunctioning CD changer unit that will be shipped for repair, the changer mechanism MUST BE LOCKED to prevent the mechanism from being damaged during shipping.
- If a CD is jammed or unable to be removed from the unit, do NOT lock the changer mechanism. If the unit is to be shipped for repair, carefully package the unit to prevent vibration and shock.
- Eject and remove any CDs from the CD changer unit.
- 2. Turn ignition switch OFF. Wait until CD changer unit display is off and mechanism stops moving (mechanism sound stops).
- 3. Press any one of the disc selection buttons once. When a display shows on the CD changer unit, press the same disc selection button again within 5 seconds.
- The changer mechanism will lock itself within 10 seconds.
- 4. After mechanism stops moving (mechanism sound stops), disconnect the CD changer unit connectors.


NOTE:

After installing a new or remanufactured CD changer unit, switching the CD changer unit ON will automatically unlock the mechanism. A special unlocking procedure is not required.



RS

SC

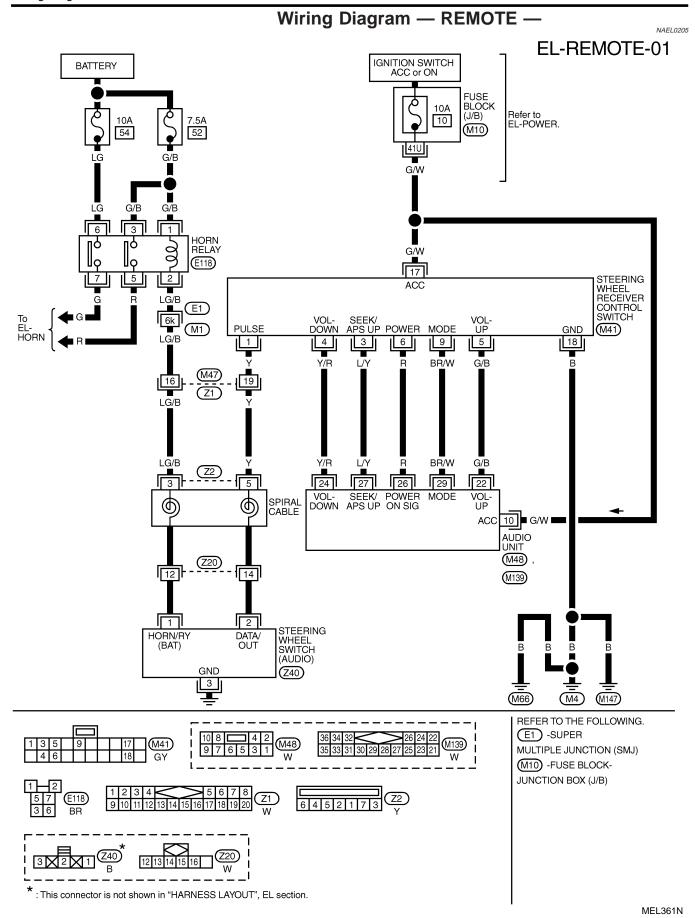

AUDIO ANTENNA

SMART C/U - PREVIOUS

System Description

System Description

NAEL0084

Power is supplied at all times

- through 7.5A fuse [No. 24, located in the fuse block (J/B)]
- to power antenna terminal 6.

MA

Ground is supplied to the power antenna terminal 2 through body grounds M4, M66 and M147. When the audio unit is turned to the ON position, battery positive voltage is supplied

EM

LC

EG

- through audio unit terminal 5
- to power antenna terminal 4.

The antenna raises and is held in the extended position.

When the audio unit is turned to the OFF position, battery positive voltage is interrupted

- from audio unit terminal 5
- to power antenna terminal 4.

The antenna retracts.

FE

GL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT


HA

SC

EL

Wiring Diagram — P/ANT —

NAEL0085

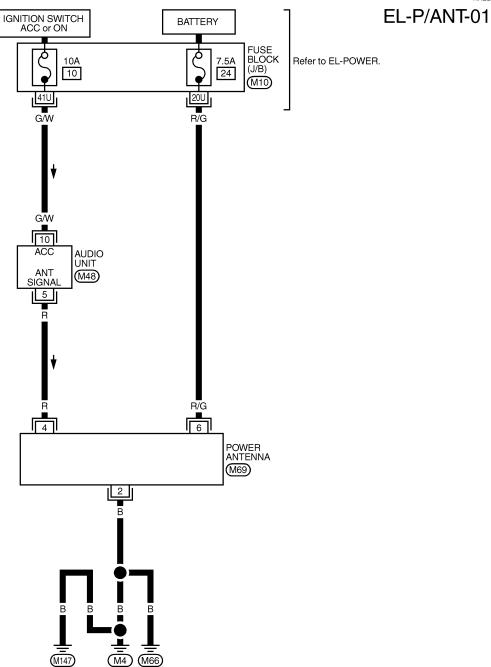





REFER TO THE FOLLOWING.

M10 - FUSE BLOCK
JUNCTION BOX (J/B)

MEL824L

Trouble Diagnoses

NAEL0086

NAEL0086S01

		NAEL0086S01	
Symptom	Possible causes	Repair order	MA
Power antenna does not operate.	 7.5A fuse Audio unit signal Grounds M4, M66 and M147 	Check 7.5A fuse [No. 24, located in fuse block (J/B)]. Verify that battery positive voltage is present at terminal 6 of power antenna. Turn ignition switch and audio unit ON. Verify that	EM
		battery positive voltage is present at terminal 4 of power antenna.	LC

Location of Antenna

EC

FE

GL

MT

AT

TF

PD


 $\mathbb{A}\mathbb{X}$


SU

BR


ST

RS

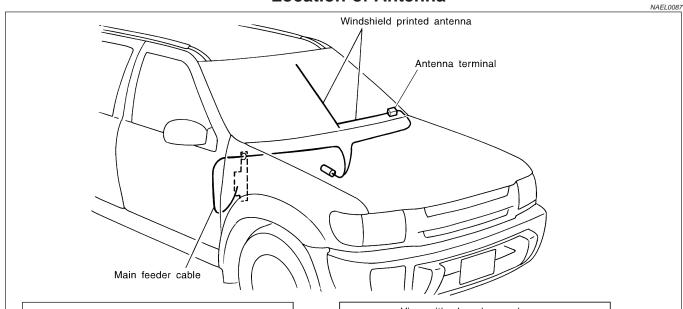

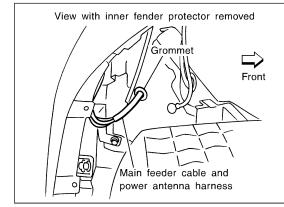

POWER ANTENNA

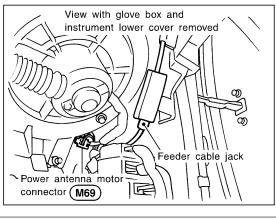

3. Check grounds M4, M66 and M147.

BT

Antenna nut Antenna base

MEL036G

Antenna Rod Replacement REMOVAL

Remove antenna nut and antenna base.


NAEL0088

NAEL0088S01


YEL067K

SC

EL

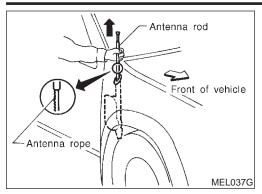

Withdraw antenna rod while raising it by operating antenna motor.

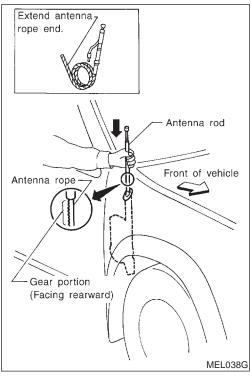

INSTALLATION

NAEL0088S02

- 1. Lower antenna rod by operating antenna motor.
- 2. Insert gear section of antenna rope into place with it facing toward antenna motor.
- 3. As soon as antenna rope is wound on antenna motor, stop antenna motor. Insert antenna rod lower end into antenna motor pipe.
- 4. Retract antenna rod completely by operating antenna motor.
- 5. Install antenna nut and base.

POWER SUNROOF

SMART C/U - PREVIOUS

System Description

System Description

NAEL0206

NAFL0206S01

Electric sunroof system consists of

- Sunroof switch
- Sunroof motor

OUTLINE

- Power window relay
- Smart entrance control unit

Smart entrance control unit controls retained power operation.

LC

MA

OPERATION

The sunroof can be opened or closed and tilted up or down with the sunroof switch.

NAFL0206S02

AUTO OPERATION

The power sunroof AUTO feature makes it possible to open and close the sunroof without holding the sunroof switch in the down or up position.

GL

MIT

AT

RETAINED POWER OPERATION

When the ignition switch is turned to OFF position from ON or START position, power is supplied for 45 seconds

- to power window relay terminal 2
- from smart entrance control unit terminal 5.

Ground is always supplied

- to power window relay terminal 1
- through body grounds.

When power and ground are supplied, power window relay continues to be energized, and the electrical sunroof can be operated.

The retained power operation is canceled when the driver or passenger side door is opened.

PD

AX

INTERRUPTION DETECTION FUNCTION

The CPU of sunroof motor monitors the sunroof motor operation and the sunroof position (full closed or other)

for sunroof by the signals from encoder and limit switch in sunroof motor.

When sunroof motor detects interruption during the following close operation,

- automatic close operation when ignition switch is in the "ON" position
- automatic close operation during retained power operation


sunroof switch controls the motor for open and the sunroof will operate about 150 mm (5.91 in).

SU

BT

HA


SC

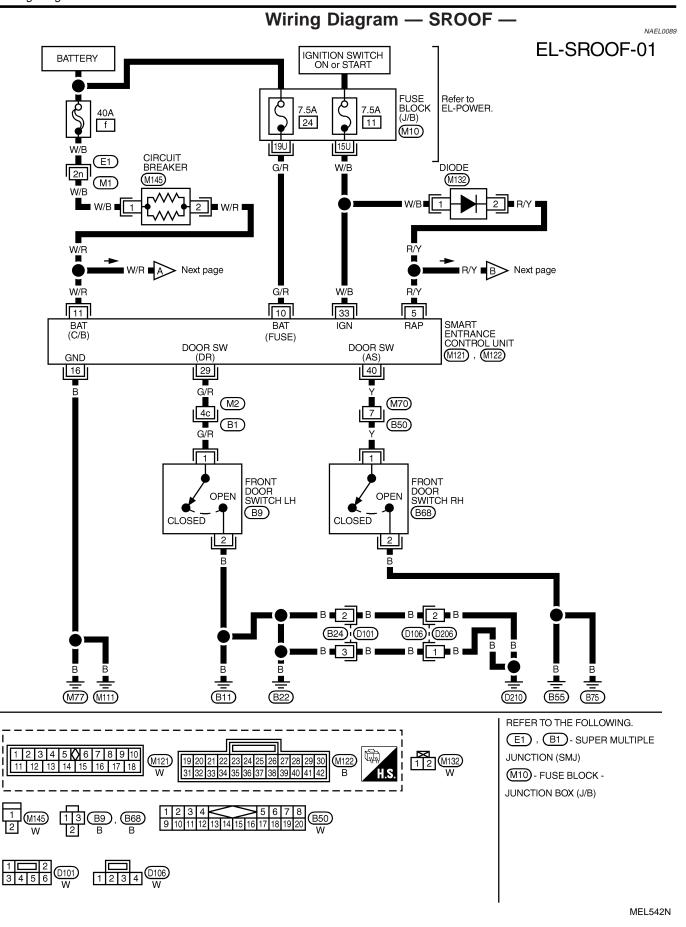

Wiring Diagram — SROOF — (Cont'd)

EL-SROOF-02

G[

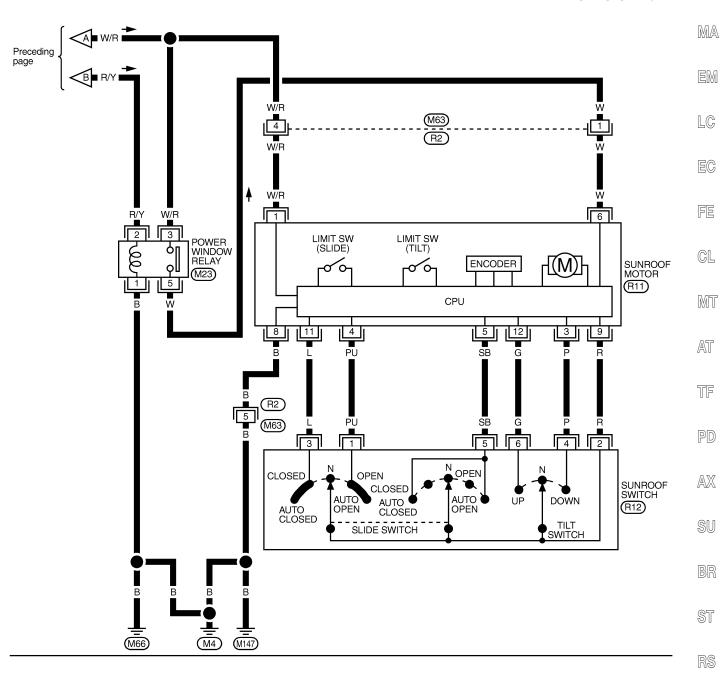



BT

HA

SC ____


MEL826L

EL

Trouble Diagnoses


Trouble blagnoses		NAEL02
Symptom	Possible cause	Repair order
Power sunroof cannot be operated using any switch.	 7.5A fuse, 40A fusible link and M145 circuit breaker Power window relay ground circuit Sunroof motor ground circuit Power window relay Sunroof motor circuit Sunroof switch Sunroof switch circuit Sunroof motor 	 Check 7.5A fuse [No. 11, located in fuse block (J/B)], 40A fusible link (letter f, located in fuse and fusible link box) and M145 circuit breaker. Turn ignition switch "ON" and verify battery positive voltage is present at terminals 2 and 3 of power window relay and terminal 1 of sunroof motor. Check power window relay ground circuit. Check sunroof motor ground circuit. Check power window relay. Check the wire between power window relay and sunroof motor. Check harness between sunroof switch and sunroof motor. Check sunroof motor.
Power sunroof cannot be operated using one of the sunroof switches.	Sunroof switch Sunroof switch circuit	Check sunroof switch. Check the harness between sunroof motor and sunroof switch.
Power sunroof auto function cannot be operated properly.	Sunroof slide mechanism Sunroof switch Sunroof switch circuit Sunroof motor	 Check the following. Check obstacles in sunroof, etc. Check worn or deformed sunroof. Check sunroof sash tilted too far inward or outward. Check sunroof switch. Check harness between sunroof motor and sunroof switch. Replace sunroof motor.
Retained power operation does not operate properly.	RAP signal circuit Driver or passenger side door switch circuit Smart entrance control unit	 Check harness between power window relay terminal 2 and smart entrance control unit terminal 5. Check the following. Harness between smart entrance control unit and driver or passenger side door switch for short circuit Driver or passenger side door switch ground circuit Driver or passenger side door switch Check smart entrance control unit. (EL-324)


[DX

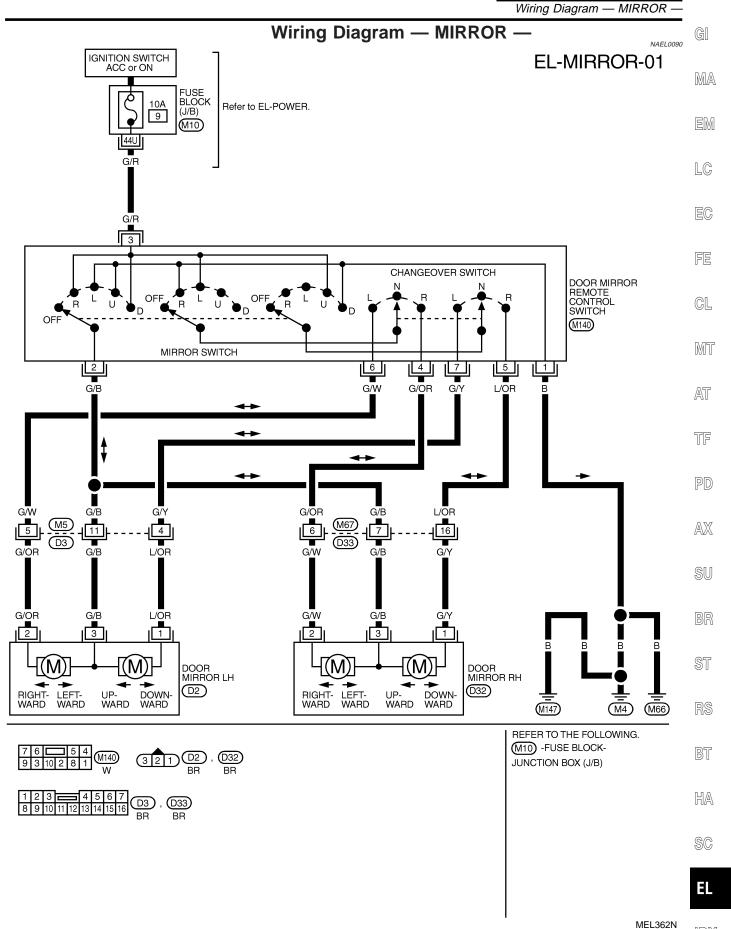

Wiring Diagram — SEAT —

NAEL0092

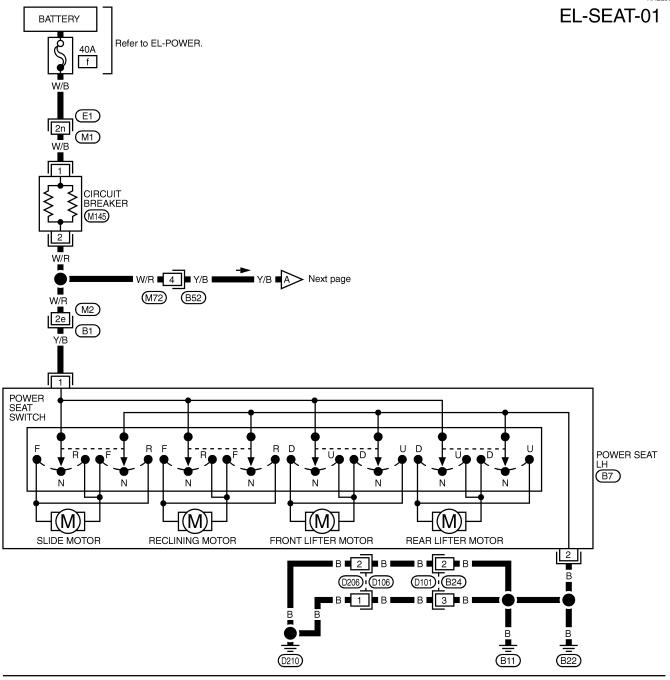

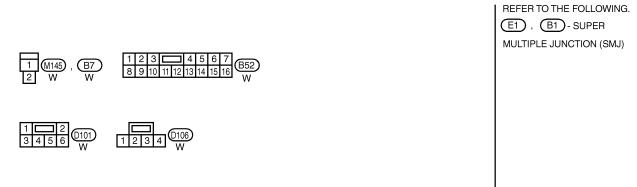

MEL830L

EL-SEAT-02

G[

MA

EM

LC

EC

FE

CL

MT

AT

TF


PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

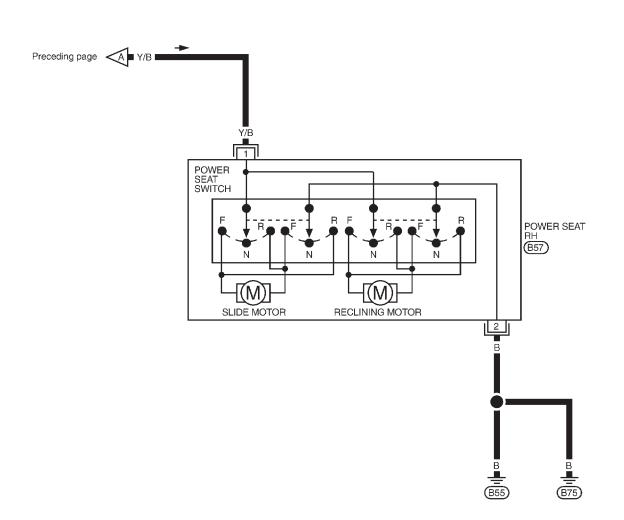

1 B57 2 W RS BT


HA

20

SC

EL


MEL601F

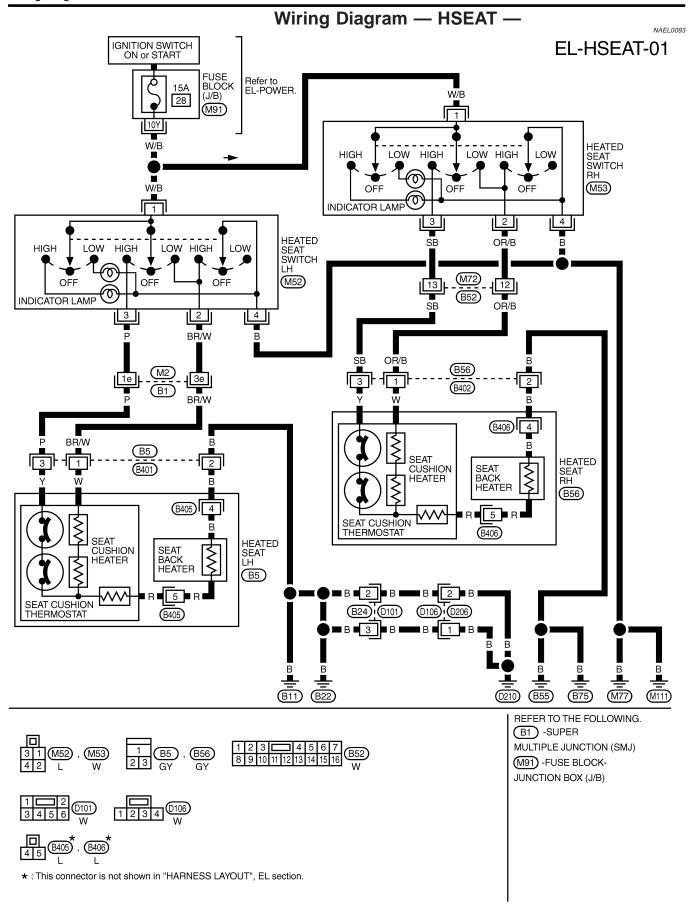

MEL046M

HEATED SEAT

Seatback Heating Unit

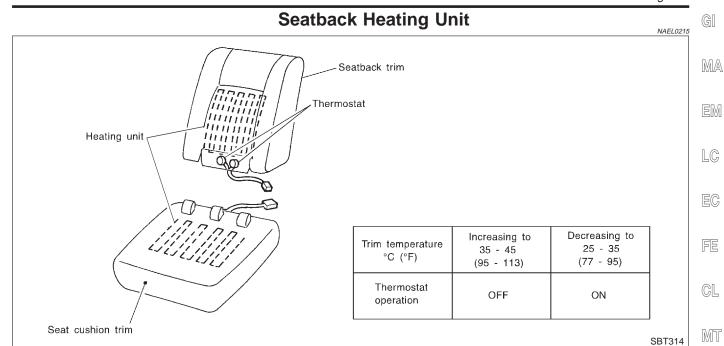

AT

TF

PD

AX

SU

BR

ST

RS

BT


HA

SC

EL

Component Parts and Harness Connector Location

NAEL0209

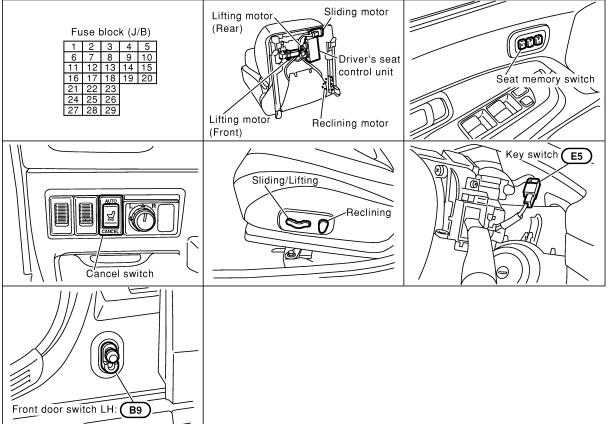

SEL190Y

System Description

System Description

=NAEL0210

The drive position can be set in 2 ways, manually and automatically.

NAFL0210S01

Manual Operation

OPERATIVE CONDITION

NAEL0210S0101

The driver's seat can be adjusted for sliding, reclining, front cushion height and rear cushion height with the LH power seat switches. The manual operation can be adjusted with the IGN key in any position.

MA

Automatic Operation

The driver's seat is adjusted to the proper positions for the driver automatically, in 3 different ways: MEMORY AUTOMATIC SET, AUTOMATIC EXITING SETTING and AUTOMATIC SET RETURN. (Automatic Drive Positioner = ADP

CONDITIONS INHIBITING AUTOMATIC OPERATION

Automatic memory setting procedures are suspended under any of the following conditions:

NAEL0210S02

- 1) When vehicle speed is more than 7 km/h (4 MPH).
- When driver's side power seat switch is turned on.
- 3) When any two of the switches (set switch and memory switches 1 and 2) are turned ON.

GL

- When cancel switch is turned on.
- 5) When selector lever is in any position other than "P".
- 6) When ignition switch is turned to "START" position. (Operation resumes when ignition switch is returned to "ON".)

MIT

- 7) When detention switch malfunction is detected:
- Detention switch failure is sensed when detention switch remains off for at least 2 seconds at a vehicle speed of greater than 7 km/h (4 MPH).

TF

AT

FAIL-SAFE SYSTEM

Output Failure

NAEL0210S03

When the ignition switch is in the ON position, if any of the parts (indicated in the following chart) move more than the specified amount within a period "T2" when no "ON" input is sent from any of the switches (indicated in the following chart), or an output from the automatic drive positioner is not produced, an output failure is sensed. Motor operation will be suspended automatically, and all automatic operations will be ineffective. (In this case, the motor will not operate manually.)

OPERATED PORTION	T2	Allowable measurement	SU
Seat sliding	Approx. 2.5 sec.	Within 6 mm (0.24 in)	
Seat reclining	Same as above	Change angle within 1°	BR

Absolving

When moving selector lever back to "P" position after having moved it to any position except "P", fail-safe operation will be canceled.

INITIALIZATION

After reconnecting battery cable, perform initialization procedure A or B. If initialization has not been performed, automatic drive positioner will not operate.

PROCEDURE A

- Insert key in the ignition key cylinder. (Ignition switch is in "OFF" position.)
- 2) Open → close → open driver side door. (Do not perform with the door switch operation.)
- 3) End

HA

BT


PROCEDURE B

- 1) Drive the vehicle at more than 25 km/h (16 MPH).
- End

MEMORY AUTOMATIC SET

Two drive positions can be retained in the memory. Press memory switch to set driver's seat to preset posi-

PROCEDURE FOR STORING MEMORY

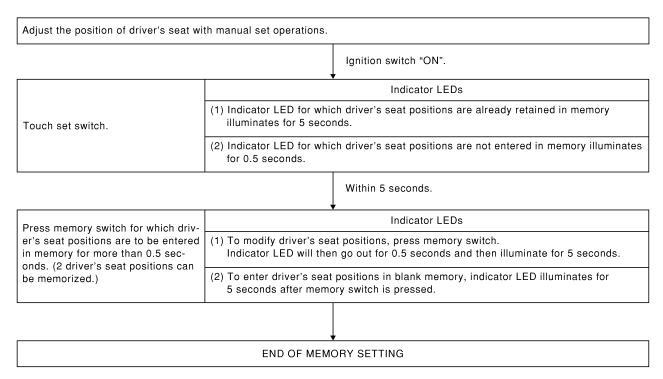


SFI 592W

NOTE:

- When memory switch for which driver's seat positions are already retained in memory is pressed, new seat positions will be retained in memory in place of the previously set positions.
- Drive position is erased from the memory when battery cable is disconnected more than 30 seconds. After connecting battery cable, perform initialization procedures.

SELECTING THE MEMORIZED POSITION

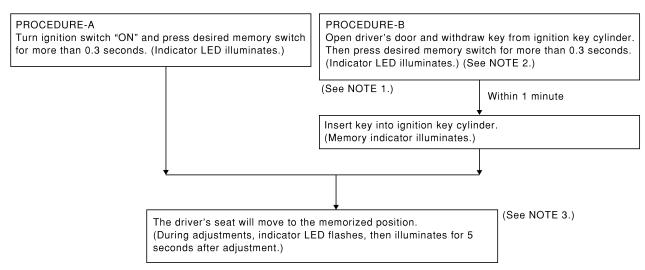

SEL593W

System Description (Cont'd)

NOTE:

- 1) Do not keep cancel switch pressed as it will not operate.
- 2) Automatic exiting setting will be performed.
- The driver's seat position (see the following Table) operates in the order of priority.

The order of priority	Operated portion
1	Seat sliding
2	Seat reclining
3	Seat front lifting
4	Seat rear lifting

AUTOMATIC EXITING SETTING

NAEL0210S06

GI

MA

EM


LC

EC

FE


"Exiting" positions:

Driver's seat ... Slides about 40 mm (1.57 in) rear from normal sitting position.

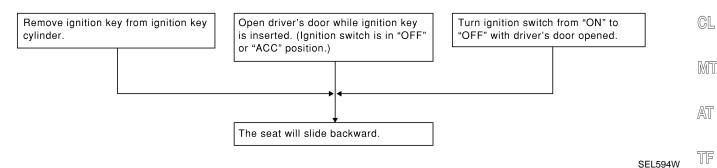

AUTOMATIC SET RETURN

With driver's seat set to the "exiting" position, operating one of the following procedures moves it to the position previously retained in memory.

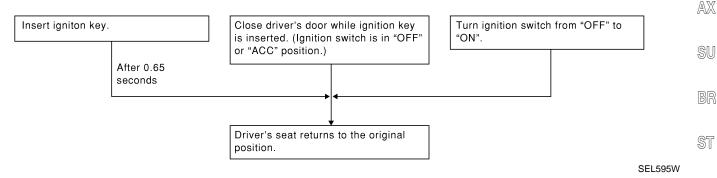


BT


HA

Schematic


NAEL0211

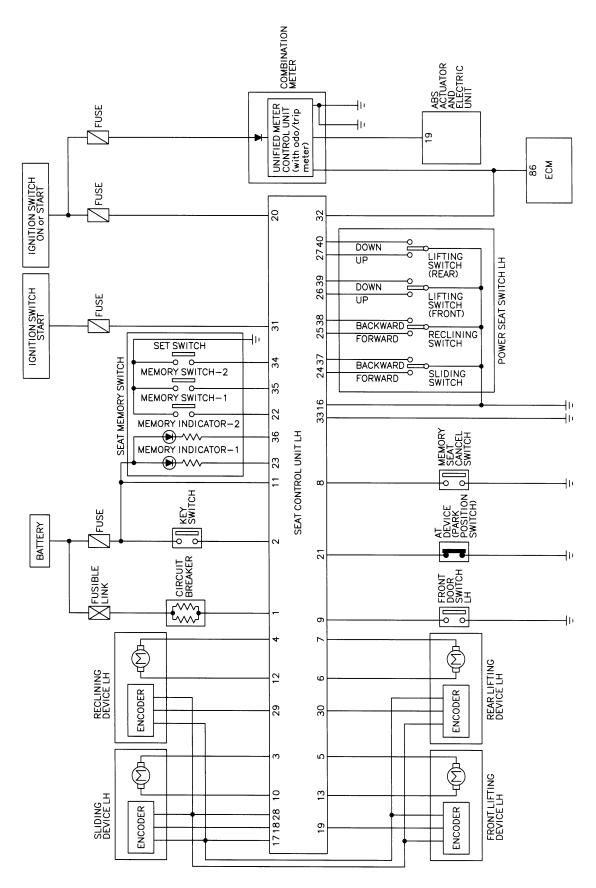


Wiring Diagram — AUT/DP

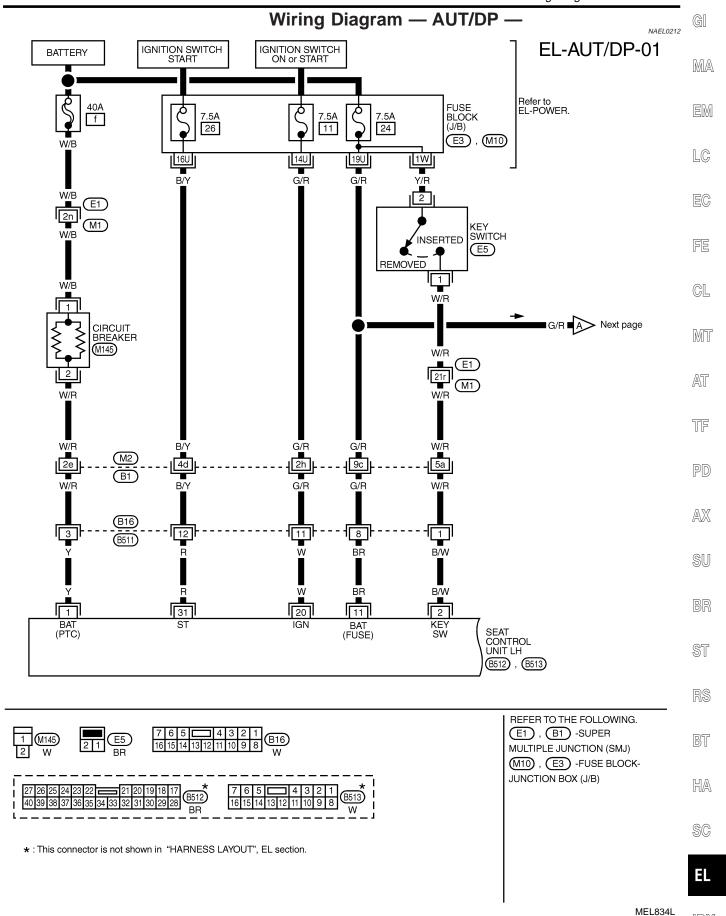


EL-AUT/DP-02

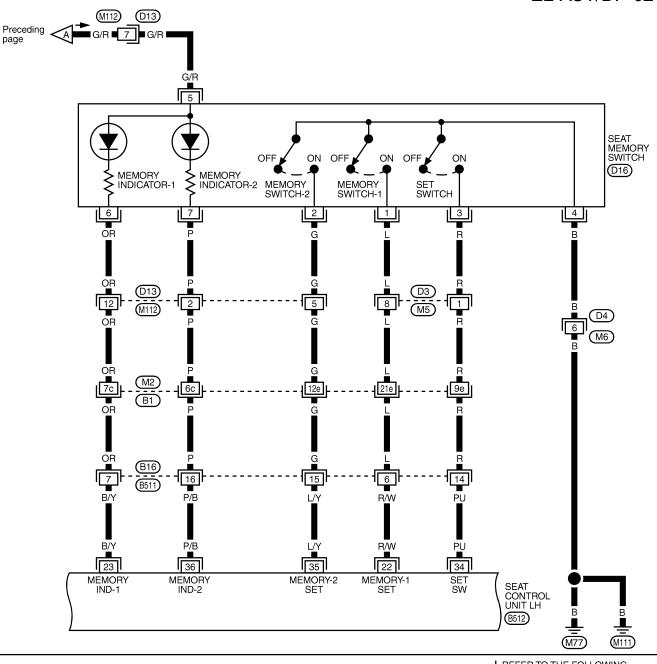

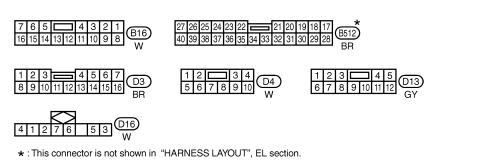


REFER TO THE FOLLOWING. B1 -SUPER MULTIPLE JUNCTION (SMJ)

MEL364N

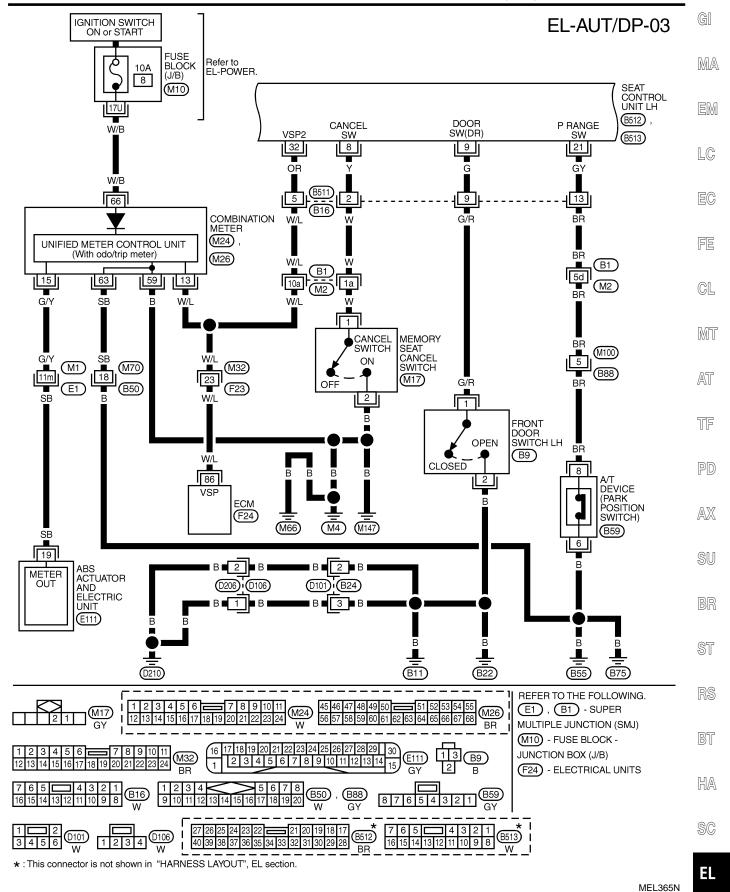


EL-AUT/DP-04

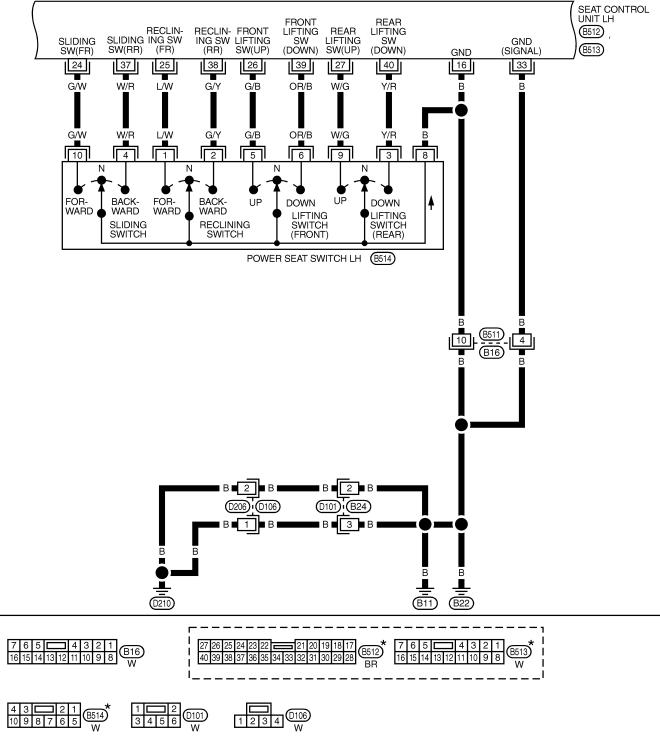

*: This connector is not shown in "HARNESS LAYOUT", EL section.

MEL186M

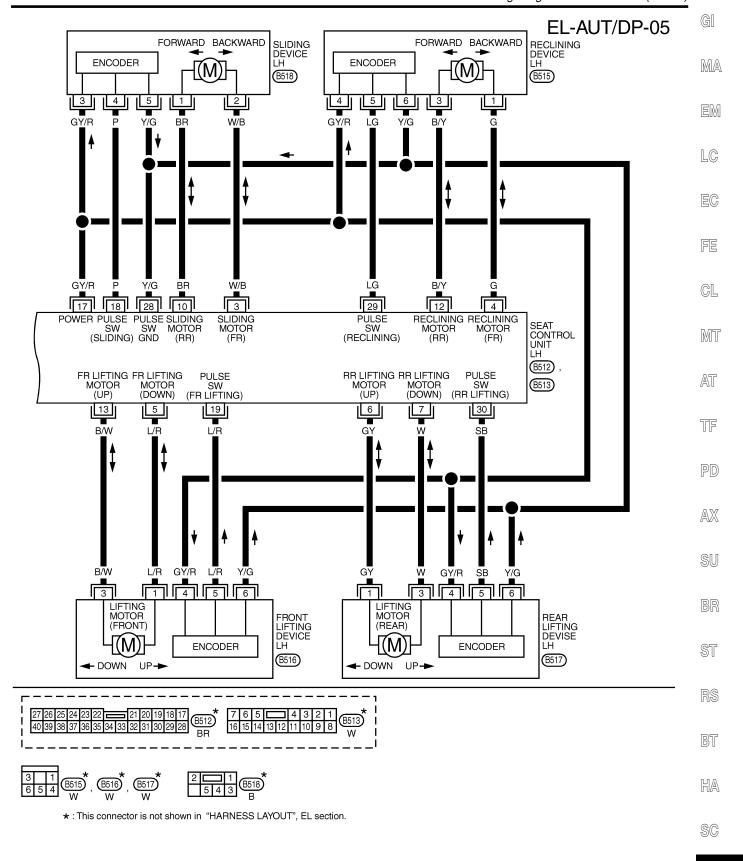


MEL187M

EL


On Board Diagnosis

NAEL0213

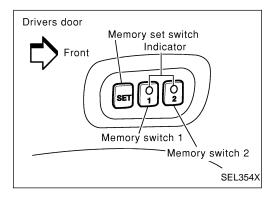

HOW TO PERFORM SELF-DIAGNOSIS

NAEL0213S01

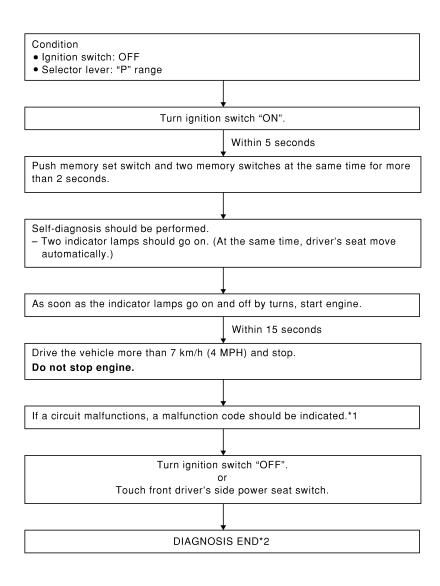

SEL596W

^{*1:} If no malfunction is indicated, self-diagnosis will end after the vehicle speed sensor diagnosis is performed.

^{*2:} Diagnosis ends after self-diagnostic results have been indicated for 10 minutes if left unattended.

On Board Diagnosis (Cont'd)

MALFUNCTION CODE TABLE

In this mode, a malfunction code is indicated by the number of flashes from the automatic drive positioner indicator lamps (indicator lamp 1, indicator lamp 2) as shown below.



MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

Code No.	Detected items	Indication of seat memory switches 1 and 2	Explanation
1	Seat sliding	IND1, IND2	While the seat motors
2	Seat reclining	IND1, IND2	are moving for 2.5 seconds, if the number of seat sliding/reclining/lifting
3	Seat lifting front	IND1, IND2	encoder pulses changes 2 times or less, the seat device is determined
4	Seat lifting rear	IND1, IND2	to be malfunctioning.
9	Vehicle speed signal circuit	IND1, IND2	If the vehicle speed signal output of less than 7 km/h (4 MPH) is detected, the ABS actuator and electric unit is determined to be malfunctioning.
-	No malfunction in the above items	SW1 IND SW2 IND 0.5 sec. 5 sec.	_

SEL597WA


SU

 $\mathbb{A}\mathbb{X}$

Code No.	Detected items	Diagnostic procedure	Refer- ence page	Code No.	Detected items	Diagnostic procedure	Refer- ence page	BR
1	Seat sliding	PROCEDURE 2 (Sliding encoder check) PROCEDURE 6 (Sliding motor check)	EL-199 EL-207	4	Seat lifting rear	PROCEDURE 5 [Lifting encoder (rear) check] PROCEDURE 9 [Lifting motor (rear) check]	EL-205 EL-210	ST RS
2	Seat reclining	PROCEDURE 3 (Reclining encoder check) PROCEDURE 7 (Reclining motor check)	EL-201 EL-208	9	Vehicle speed sensor	PROCEDURE 12 (Vehicle speed sensor check)	EL-213	BT
3	Seat lifting front	PROCEDURE 4 [Lifting encoder (front) check] PROCEDURE 8 [Lifting motor (front) check]	EL-203 EL-209					HA
			ļ.		!		!	· SC

Trouble Diagnoses **WORK FLOW**


NAEL0214 NAEL0214S01

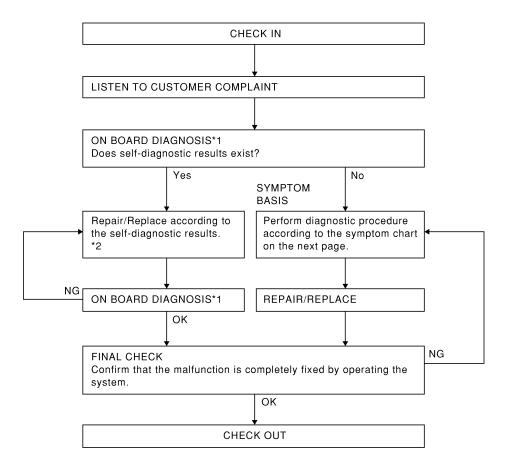

SEL599W

*2 EL-193 *1 EL-192

Trouble Diagnoses (Cont'd)

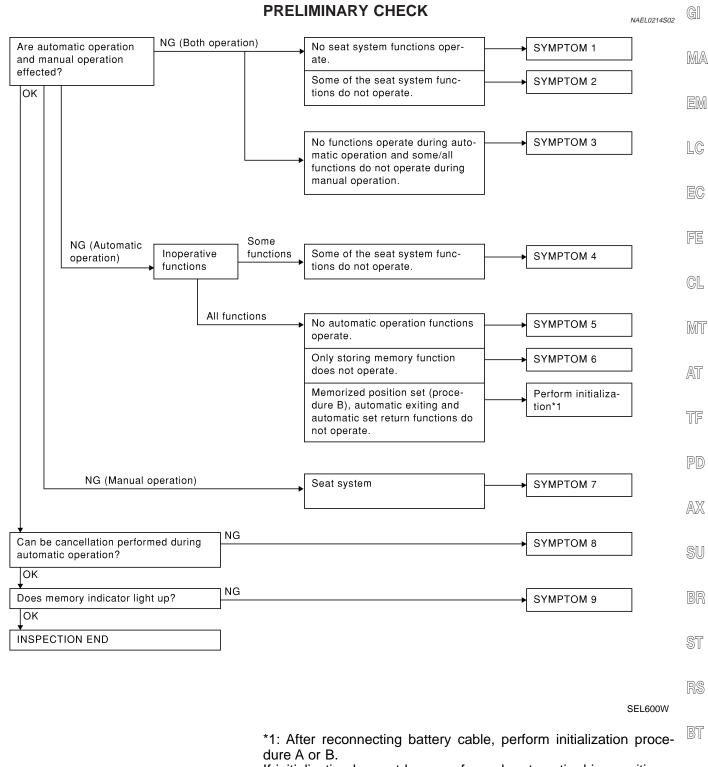

If initialization has not been performed, automatic drive positioner will not operate.

PROCEDURE A

- Insert key in the ignition key cylinder. (Ignition switch is in "OFF" position.)
- Open \rightarrow close \rightarrow open driver side door. (Do not perform with the door switch operation.)
- 3) End

PROCEDURE B

1) Drive the vehicle at more than 30 km/h (19 MPH).

HA

SC

EL

2) End

After performing preliminary check, go to symptom chart below.

Before starting trouble diagnoses below, perform preliminary check, EL-195. Symptom numbers in the symptom chart correspond with those of preliminary check.

SYMPTOM CHART

			SYM	IPTOM (CHART				NAEL0214S03
PROC	CEDURE				Dia	agnostic prod	edure		
REFE	REFERENCE PAGE (EL-)		198	199	201	203	205	207	208
SYMF	SYMPTOM		DIAGNOSTIC PROCEDURE 1 (Power supply and ground circuit for Driver's seat control unit)	DIAGNOSTIC PROCEDURE 2 (Sliding encoder check)	DIAGNOSTIC PROCEDURE 3 (Reclining encoder check)	DIAGNOSTIC PROCEDURE 4 [Lifting encoder (front) check]	DIAGNOSTIC PROCEDURE 5 [Lifting encoder (rear) check]	DIAGNOSTIC PROCEDURE 6 (Sliding motor check)	DIAGNOSTIC PROCEDURE 7 (Reclining motor check)
1	No seat system fu	nctions operate.	Х						
	Some of the seat	Sliding						Х	
2	system functions do not operate	Reclining							X
2	during automatic/ manual opera-	Lifting (Front)							
	tion.	Lifting (Rear)							
3	No functions operate during automatic operation, and some/all functions do not during manual operation.								
	Some of the seat	Sliding		Х					
4	system functions	Reclining			Х				
4	do not operate during automatic	Lifting (Front)				Х			
	operation.	Lifting (Rear)					Х		
5	No automatic oper operate.	ration functions							
6	Drive position cannot be retained in the memory.								
	Does not operate	Sliding							
7	during manual operation. (Oper-	Reclining							
1	ates during auto-	Lifting (Front)							
	matic operation.)	Lifting (Rear)							
8	Automatic operation canceled.	on cannot be							
9	Memory indicator	does not light up.							
_									

X : Applicable

Trouble Diagnoses (Cont'd)

PROCEDURE					Dia	agnostic pro	cedure		
REFERENCE PAGE (EL-) SYMPTOM		209	210	211	212	213	216	216	
		DIAGNOSTIC PROCEDURE 8 [Lifting motor (front) check]	DIAGNOSTIC PROCEDURE 9 [Lifting motor (rear) check]	DIAGNOSTIC PROCEDURE 10 (Power seat switch check)	DIAGNOSTIC PROCEDURE 11 (Cancel switch check)	DIAGNOSTIC PROCEDURE 12 (Key, park position, door switch and vehicle speed sensor check)	DIAGNOSTIC PROCEDURE 13 (Seat memory switch check)	DIAGNOSTIC PROCEDURE 14 (Memory indicator check)	
1	No seat system fu	nctions operate.							
	Some of the seat system functions	Sliding							
2	do not operate	Reclining							
	during automatic/ manual opera-	Lifting (Front)	X						
	tion.	Lifting (Rear)		Х					
3	No functions opera matic operation, at tions do not during tion.	nd some/all func-			X		X (ACC, ON START signal)		
	Some of the seat	Sliding							
4	system functions	Reclining							
4	do not operate during automatic	Lifting (Front)							
	operation.	Lifting (Rear)							
5	No automatic oper operate.	ation functions				Х	Х		
6	Drive position can in the memory.	not be retained					X (IGN ON signal)	Х	
	Does not operate	Sliding			Х				
7	during manual	Reclining			Х				
	operation. (Operates during auto-	Lifting (Front)			Х				
	matic operation.)	Lifting (Rear)			Х				
8	Automatic operation canceled.	on cannot be				Х			
9	Memory indicator	does not light up.							Х


X : Applicable

HA

SC

EL

Trouble Diagnoses (Cont'd)

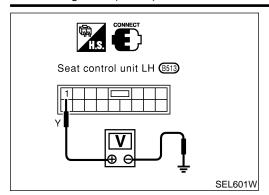

DIAGNOSTIC PROCEDURE 1

(Power supply and ground circuit for driver's seat control unit)


Power Supply Circuit Check

Check voltage between seat control unit LH terminal 1 and ground.

Terminals		Ignition switch position							
Terminais	OFF	ACC	START						
1 - Ground	Battery voltage								

If NG, check the following.

- 40A fusible link (letter f, located in the fuse and fusible link box)
- Circuit breaker
- Harness for open or short between circuit breaker and seat control unit LH

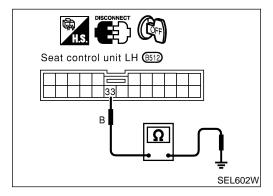

Ground Circuit Check

Check continuity between seat control unit LH terminal 33 and ground.

Terminals	Continuity
33 - Ground	Yes


Trouble Diagnoses (Cont'd)




(Sliding encoder check)

=NAEL0214S05

GI

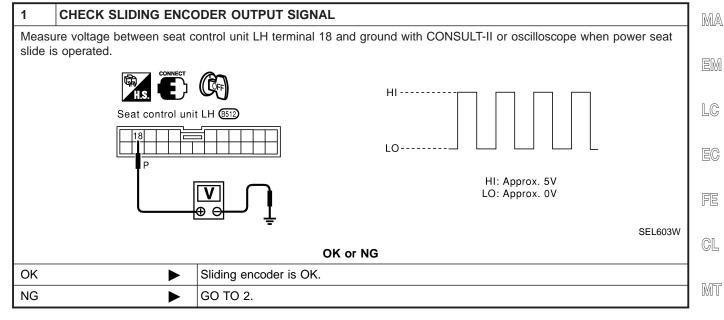

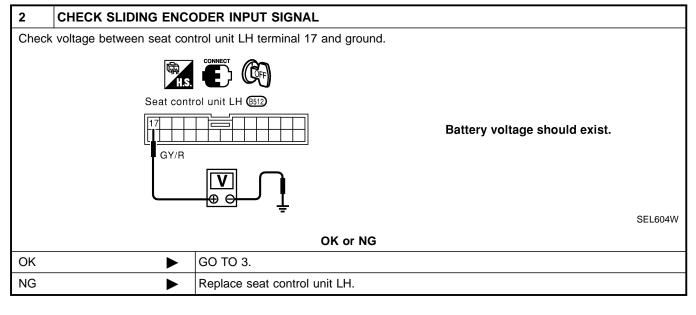

ST

TF


AX


SU

BT

HA

SC

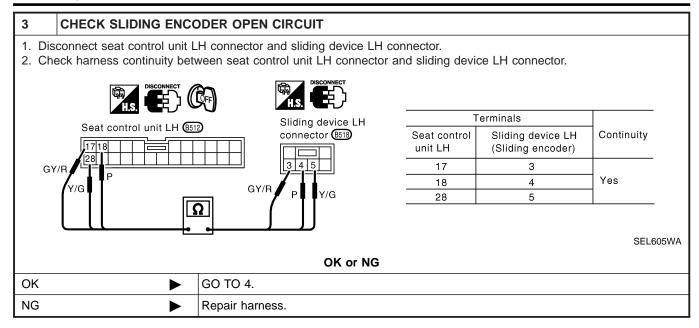

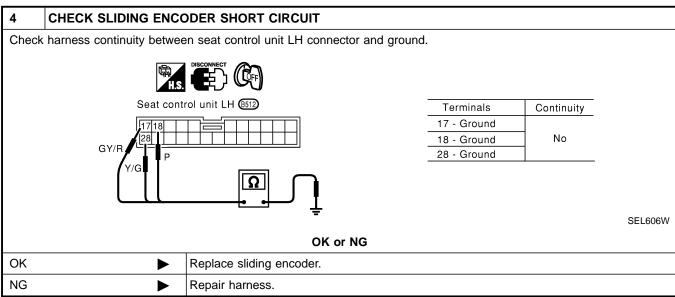


Trouble Diagnoses (Cont'd)




(Reclining encoder check)

=NAEL0214S06

GI

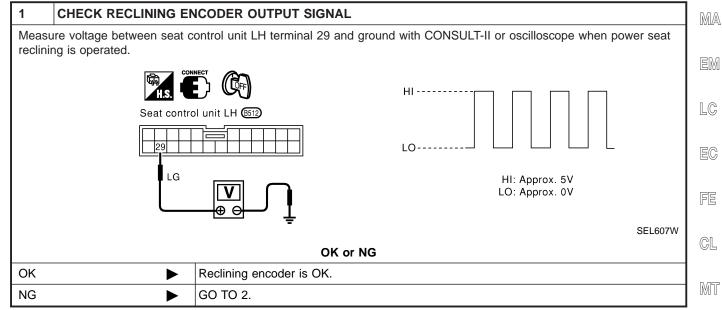


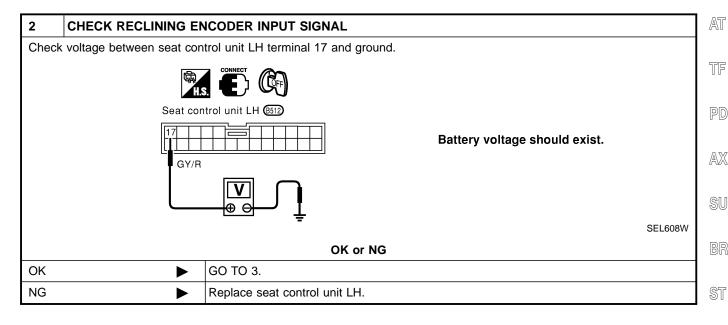


BT

HA

SC

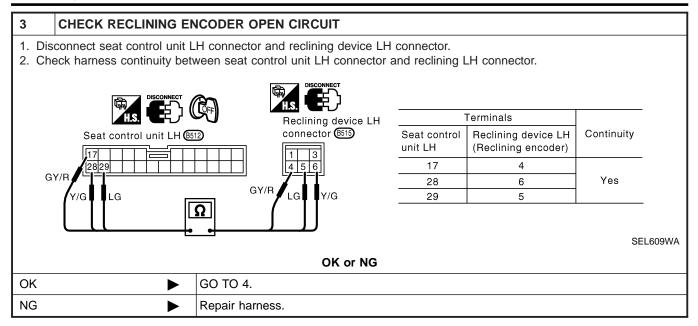

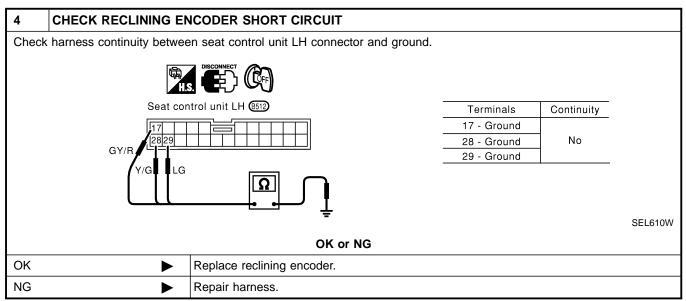


CHECK LIFTING ENCODER (FRONT) OUTPUT SIGNAL

L/R


lifting (front) is operated.

HI: Approx. 5V LO: Approx. 0V

Trouble Diagnoses (Cont'd)

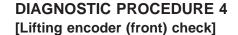

=NAEL0214S07

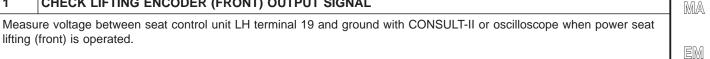

GI

LC

EG

FE

SEL611W


GL

MT

TF

AX

SU

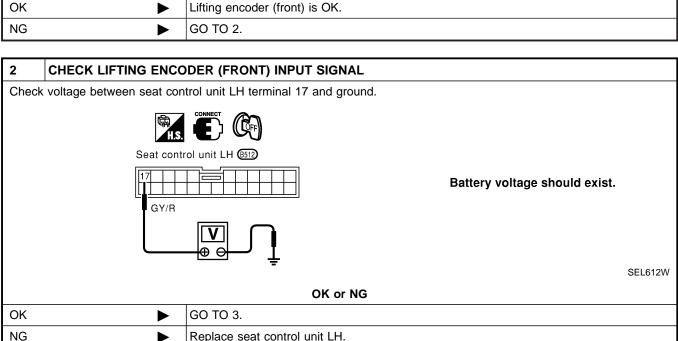

OK or NG


RS


ST

BT


HA

SC

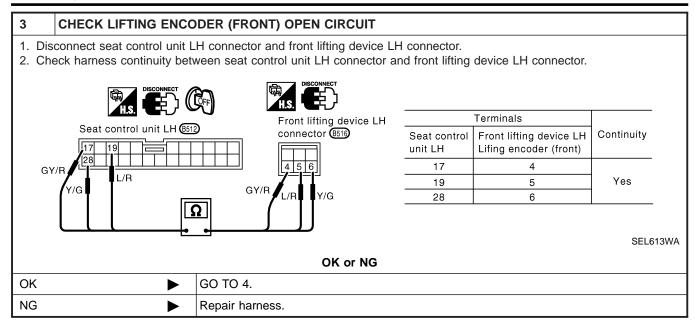

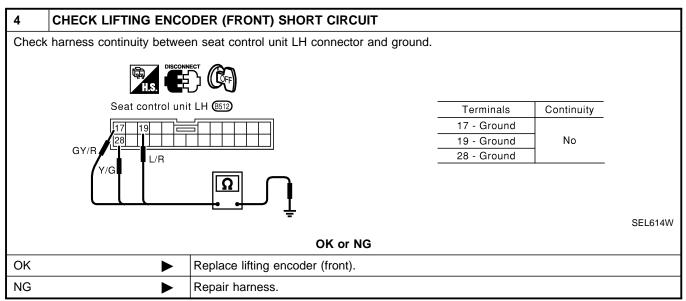


Trouble Diagnoses (Cont'd)

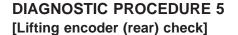


=NAEL0214S08



GI

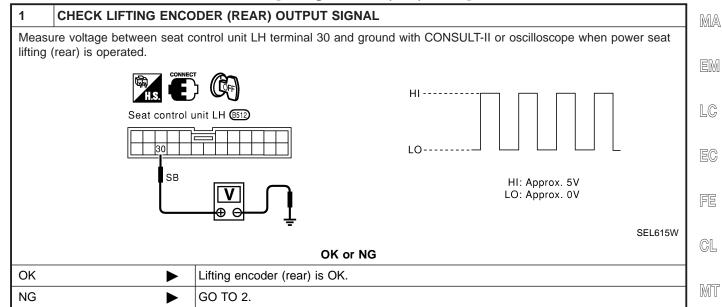


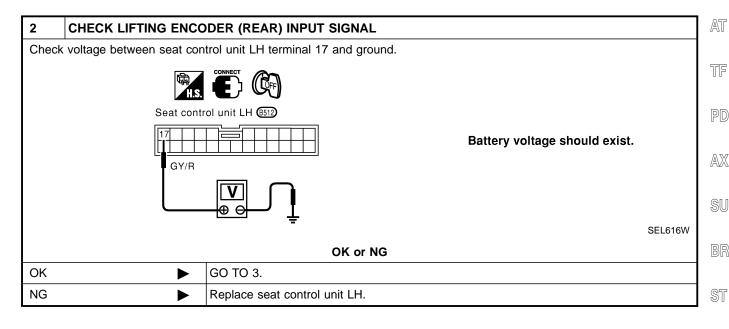


BT

HA

SC

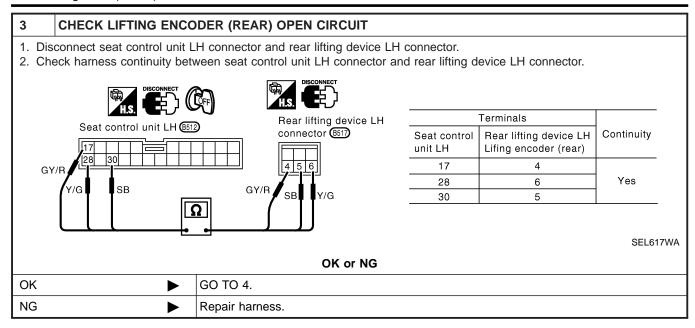

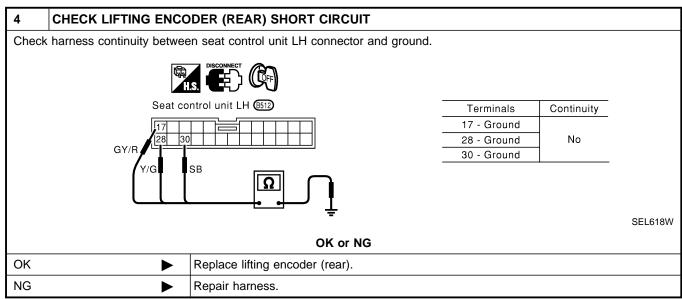


Trouble Diagnoses (Cont'd)




(Sliding motor check)

=NAEL0214S09



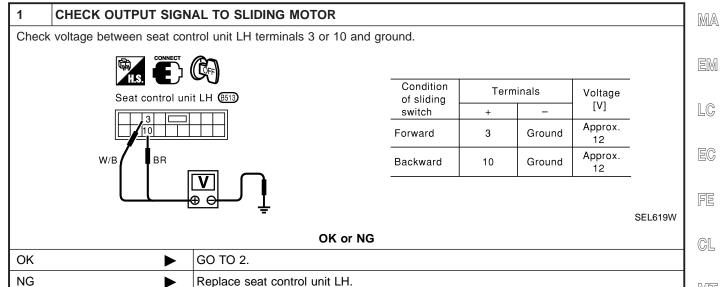

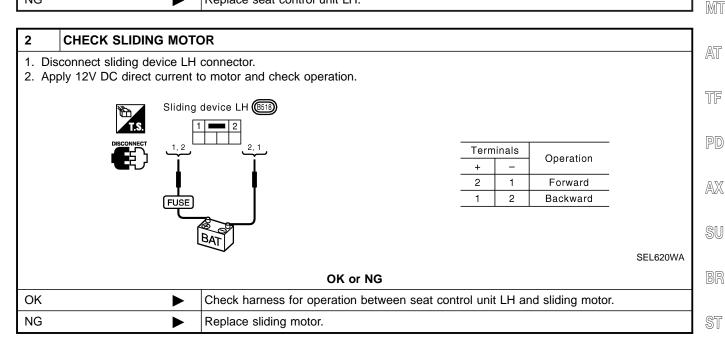


BT


HA

DIAGNOSTIC PROCEDURE 7

(Reclining motor check)

=NAEL0214S10

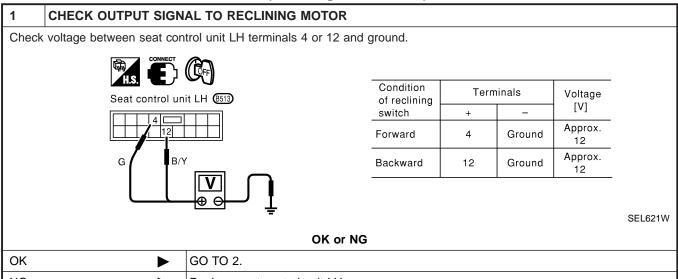

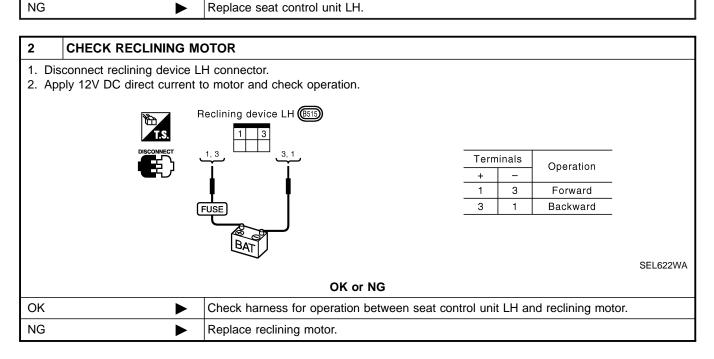


Trouble Diagnoses (Cont'd)




=NAEL0214S11



GI

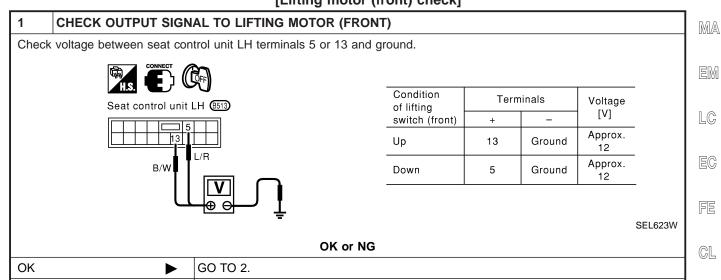

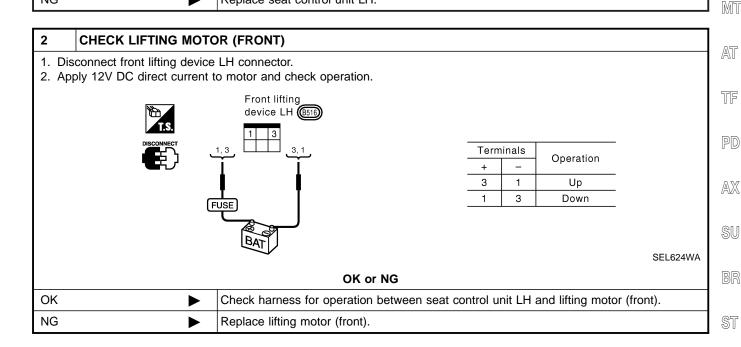

Replace seat control unit LH.

NG


BT


HA

DIAGNOSTIC PROCEDURE 9

[Lifting motor (rear) check]

=NAEL0214S12

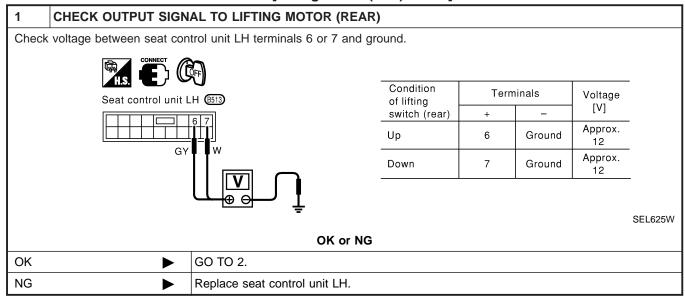

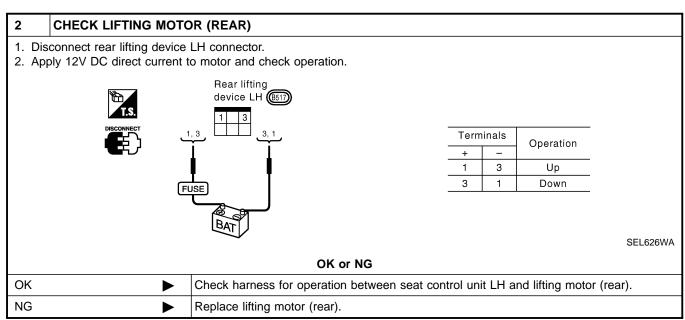

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 10

(Power seat switch check)

=NAEL0214S13

1 CHEC	CK POWER SEAT	SWITCH		·										
	ct power seat switch ntinuity between pov	LH connector. ver seat switch terminals.												
		CONNECT		Ι				rmir	nals			7		L(
	T.S. Power seat switch		Switch	Condition	8 -	1 2		_	5		10			E(
	1 2	3 4 9 10	Sliding	Forward Backward				0						
	1, 2, 3, 4, 5, 6, 9,10	8	Reclining	Forward Backward	0				H		+			FE
	Ĭ		Lifting (Front)	Up Down	0				0	-0	+			
	Ω		Lifting (Rear)	Up Down	0						1			C
	<u> </u>		(Hear)	Down	ΙσΤ		<u> </u>					J		M
												SEL5	69X	Δ5
		ОК о	r NG											A1
ОК	>	Check the following. Ground circuit for power s Harness for open or short		control unit	t LH	anc	l po	wer	se	at sw	vitch	1		T

Replace power seat switch.

NG

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

DIAGNOSTIC PROCEDURE 11

(Cancel switch check)

=NAEL0214S14


1	CHECK CANCEL SWIT	СН							
	 Disconnect cancel switch connector. Check continuity between cancel switch terminals. 								
	Cancel switch								
		ten (M17)	Terminals	Cancel switch condition	Continuity				
			1-2	ON	Yes				
	/ \		1-2	OFF	No				
						OEL COOMA			
						SEL628WA			
		OK or NG							
OK	OK Check the following. Ground circuit for cancel switch Harness for open or short between seat control unit LH and cancel switch								
NG	NG Replace cancel switch.								


Trouble Diagnoses (Cont'd)




(Key, detention, door switch and vehicle speed signal check)




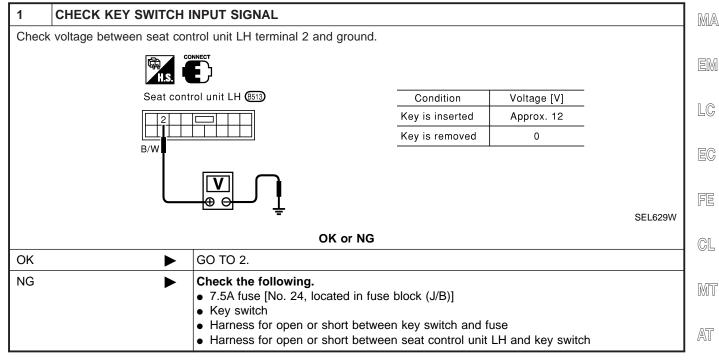

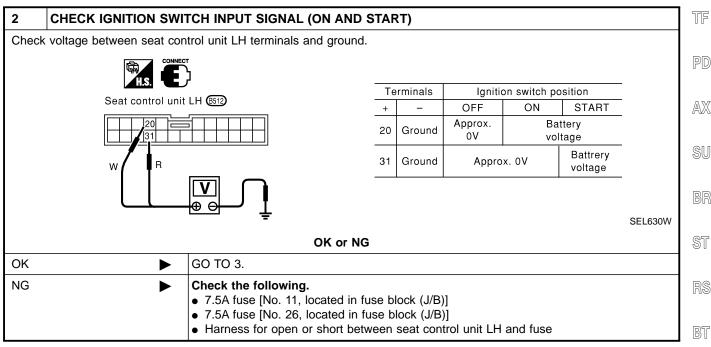


HA

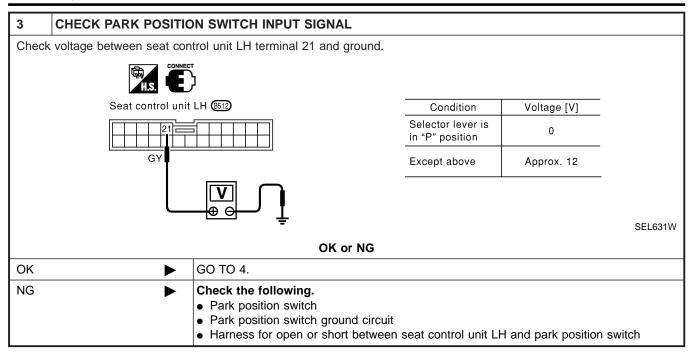

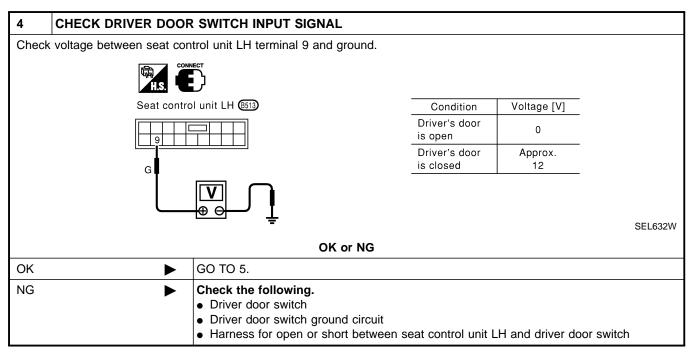

5	CHECK VEHICLE SPEED SIGNAL							
Does	Does speedometer operate normally?							
	Yes or No							
ОК	>	GO TO 6.						
NG	NG Check speedometer and ABS actuator and electric unit circuit. Refer to EL-104.							

Trouble Diagnoses (Cont'd)

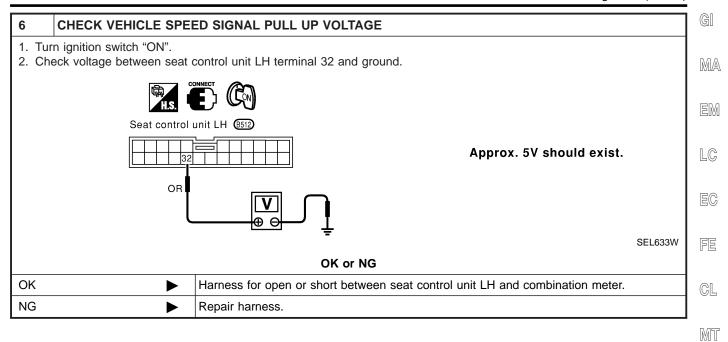

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT


HA

NG

DIAGNOSTIC PROCEDURE 13

(Seat memory switch check)

=NAFL0214S16

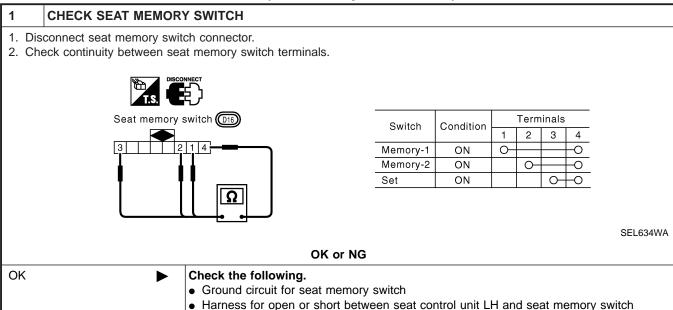


DIAGNOSTIC PROCEDURE 14 (Memory indicator check)

NAFL0214S17

CHECK INDICATOR LAMP Check indicator lamp illumination. OK or NG GO TO 2. OK NG Replace seat memory switch (indicator lamp).

Replace seat memory switch.

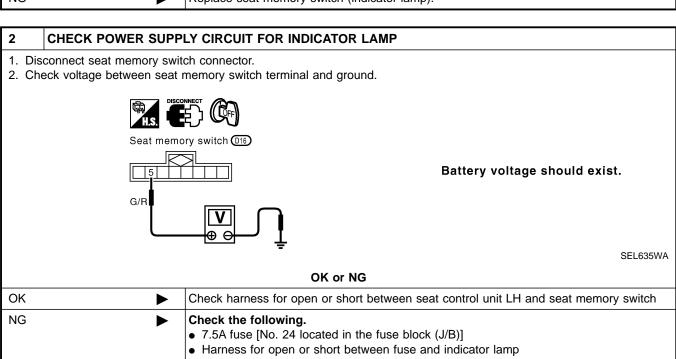


AUTOMATIC SPEED CONTROL DEVICE (ASCD) SMART C/U - PREVIOUS

Component Parts and Harness Connector Location

Component Parts and Harness Connector Location

NAEL0094

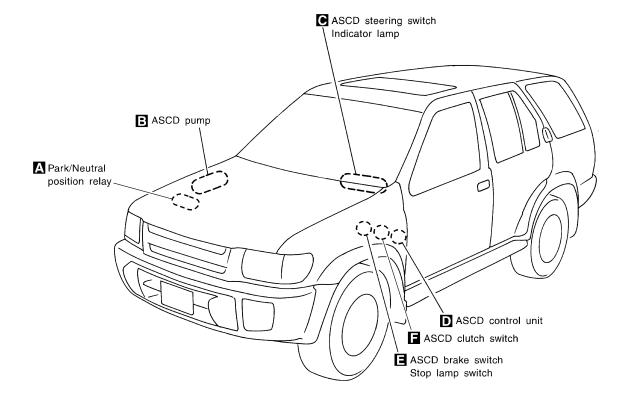

LG

G[

MA

EC

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS


BT

...

HA

SC

EL

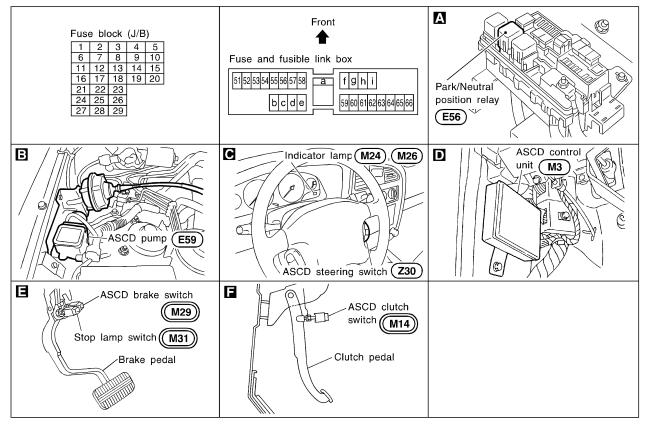

SMART C/U - PREVIOUS

NAEL0216

NAEL0216S01

System Description

Refer to Owner's Manual for ASCD operating instructions.

POWER SUPPLY AND GROUND

Power is supplied at all times:

- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to the stop lamp switch terminal 1, and
- through 7.5A fuse (No. 52, located in fuse and fusible link box)
- to the horn relay terminals 1 and 3.

When ignition switch is in the ON or START position, power is supplied:

- through 7.5A fuse [No. 11, located in the fuse block (J/B)]
- to ASCD brake switch terminal 1 and
- to ASCD control unit terminal 5,
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to park/neutral position relay terminal 1,
- through 10A fuse [No. 8, located in the fuse block (J/B)]
- to combination meter terminal 66, and

When park/neutral position switch is in the P or N position (A/T models), ground is supplied:

- to park/neutral position relay terminal 2
- through park/neutral position switch and body grounds B55 and B75.

When ASCD main switch is depressed (ON), ground is supplied:

- to ASCD control unit terminal 9
- from ASCD steering switch terminal 4
- to ASCD steering switch terminal 5
- through body grounds M4, M66 and M147

then ASCD control unit holds CRUISE condition and illuminates CRUISE indicator. Ground is supplied:

- from ASCD control unit terminal 15
- to combination meter terminal 46.

OPERATION NAEL0216S02

Set OperationTo activate the ASCD, all following conditions must exist.

- Ground is supplied to ASCD control unit terminal 9 (Main switch is in ON position.)
- Power is supplied to ASCD control unit terminal 8 [Brake pedal and clutch pedal are released (M/T models) and brake pedal is released and A/T selector lever is in other than P and N position (A/T models)].
- Vehicle speed is between 40 km/h (25 MPH) and 144 km/h (89 MPH). (Signal from combination meter)

When the SET/COAST switch is depressed, power is supplied:

- from ASCD steering switch terminal 2
- to ASCD control unit terminal 11.

And then ASCD pump is activated to control throttle wire and ASCD control unit supply ground

to combination meter terminals 51 to illuminate SET indicator.

A/T Overdrive Control during Cruise Control Driving (A/T models)

When the vehicle speed is approximately 3 km/h (2 MPH) below set speed, a signal is sent

from ASCD control unit terminal 10

to TCM (transmission control module) terminal 24.

When this occurs, the TCM (transmission control module) cancels overdrive.

After vehicle speed is approximately 1 km/h (1 MPH) below set speed, overdrive is reactivated.

ASCD Shifting Control (A/T models)

During ASCD cruise, ASCD control unit controls A/T shifting to avoid uncomfortable shifting. This is used to control the signals below.

Throttle position sensor from ECM

NAEL0216S0202

NAEL0216S0201

NAEL0216S0203

SMART C/U - PREVIOUS

System Description (Cont'd)

A/T shift solenoid valve A

Coast Operation

NAEL0216S0204

NAFI 0216S0205

When the SET/COAST switch is depressed during cruise control driving, ASCD actuator returns the throttle cable to decrease vehicle set speed until the switch is released. And then ASCD will keep the new set speed.

MA

Accel Operation

When the RESUME/ACCEL switch is depressed, power is supplied

- from ASCD steering switch terminal 3
- to ASCD control unit terminal 24.

LG

If the RESUME/ACCEL switch is depressed during cruise control driving, ASCD actuator pulls the throttle cable to increase the vehicle speed until the switch is released or vehicle speed is reached to maximum controlled speed by the system. And then ASCD will keep the new set speed.

EG

Cancel Operation

When any of following condition exists, cruise operation will be canceled.

NAEL0216S0206

- CANCEL switch is depressed. (Power supply to ASCD control unit terminals 11 and 24)
- Brake pedal is depressed. (Power supply to ASCD control unit terminal 23 from stop lamp switch)
- Brake pedal or clutch pedal is depressed (M/T models)/brake pedal is depressed or A/T selector lever is shifted to P or N position (A/T models). (Power supply to ASCD control unit terminal 8 is interrupted.)

If MAIN switch is turned to OFF during ASCD is activated, all of ASCD operation will be canceled and vehicle MT speed memory will be erased.

CL

Resume Operation

NAEL0216S0207

When the RESUME/ACCEL switch is depressed after cancel operation other than depressing MAIN switch is performed, vehicle speed will return to last set speed. To resume vehicle set speed, vehicle condition must meet following conditions.

TF

AX

SU

- Brake pedal is released.
- Clutch pedal is released (M/T models).
- A/T selector lever is in other than P and N position (A/T models).
- Vehicle speed is between 40 km/h (25 MPH) and 144 km/h (89 MPH).

EL0216S03

ASCD PUMP OPERATION

The ASCD pump consists of a vacuum motor, an air valve and a release valve. When the ASCD activates, power is supplied

- from terminal 12 of ASCD control unit
- to ASCD pump terminal 1.

Ground is supplied to vacuum motor, air valve and release valve from ASCD control unit depending on the operated condition as shown in the below table.

me Pm

The pump is connected to ASCD actuator by vacuum hose. When the ASCD pump is activated, the ASCD pump vacuum the diaphragm of ASCD actuator to control throttle cable.

		Air valve (*1)	Release valve (*1)	Vacuum motor	Actuator inner pressure
ASCD not operating		Open	Open	Stopped	Atmosphere
	Releasing throttle cable	Open	Closed	Stopped	Vacuum
ASCD operating	Holding throttle position	Closed	Closed	Stopped	Vacuum (*2)
	Pulling throttle cable	Closed	Closed	Operated	Vacuum

^{*1:} When power and ground is supplied, valve is closed.


C I

HA

^{*2:} Set position held.

Schematic

NAEL0096

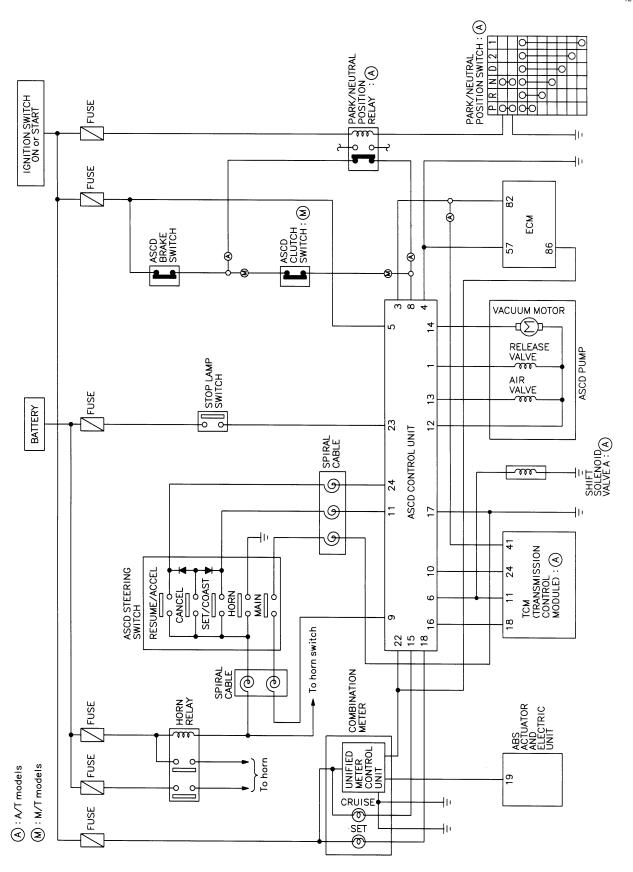

SMART C/U - PREVIOUS

Wiring Diagram — ASCD -

MEL048M


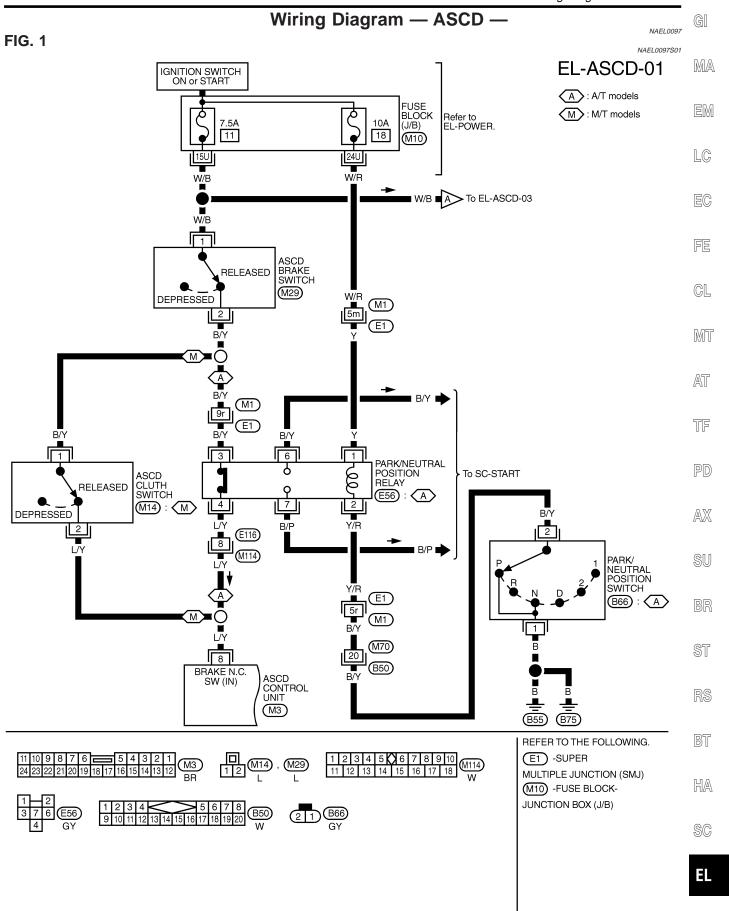


FIG. 2

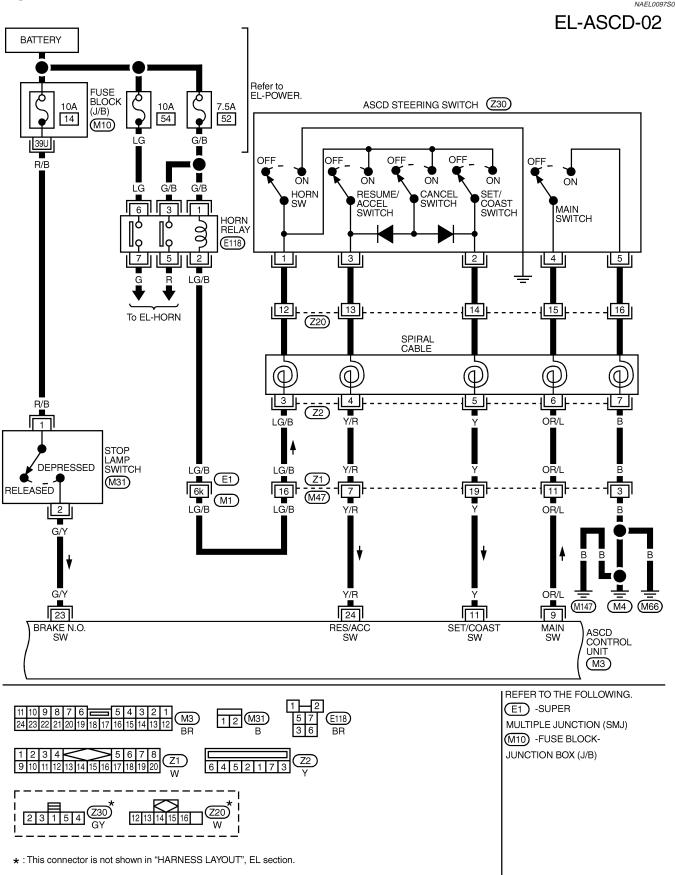


SMART C/U - PREVIOUS

MEL367N

Wiring Diagram — ASCD — (Cont'd) FIG. 3 GI NAEL0097S03 EL-ASCD-03 MA TCM ECM ASCD CRUISE SW M119 To EL-ASCD-01 A W/B (F24) 4TH CUT SW SHIFT SOL A (M120) **GND-C** TVO₁ 57 86 82 41 18 24 11 L/W W/G W/L B/Y LC EC M71(B51) (B64) F20) F25 3 TERMINAL CORD Α ASSEMBLY GL 3 B92 MT SHIFT SOLENOID Next ■ W/L **■**B>> VALVE A W/B W/L B/Y W/G L/W AT 5 10 6 22 4 16 3 CRUISE OD A SIGNAL CANCEL SOLENOID MONITOR THROTTLE POSITION IGNITION VSP (IN) ASCD CONTROL UNIT TF ACTR OUTPUT AIR VALVE RELEASE VAC MOTOR OUTPUT VALVE OUTPUT (M3) (HIGH) OUTPUT GND 17 PD 12 13 14 В w W/PU w/G B/Y $\mathbb{A}\mathbb{X}$ W/PU W/G $\bar{\mathbb{W}}$ B/Y 4m 9m 13m 6m A: A/T models W SU W/PU W/Y W/B W/PU W/Y W/B 2 1 3_ 4 ST AIR VALVE RELEASE VALVE VACUUM **MOTOR** (E59) RS (M147) $\overline{M4}$ (M66)REFER TO THE FOLLOWING. M3 12 13 14 15 16 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 BT E1 -SUPER MULTIPLE JUNCTION (SMJ) (F24) -ELECTRICAL UNITS HA SC 3 4 B92 (M120) EL


*: This connector is not shown in "HARNESS LAYOUT", EL section.

FIG. 4

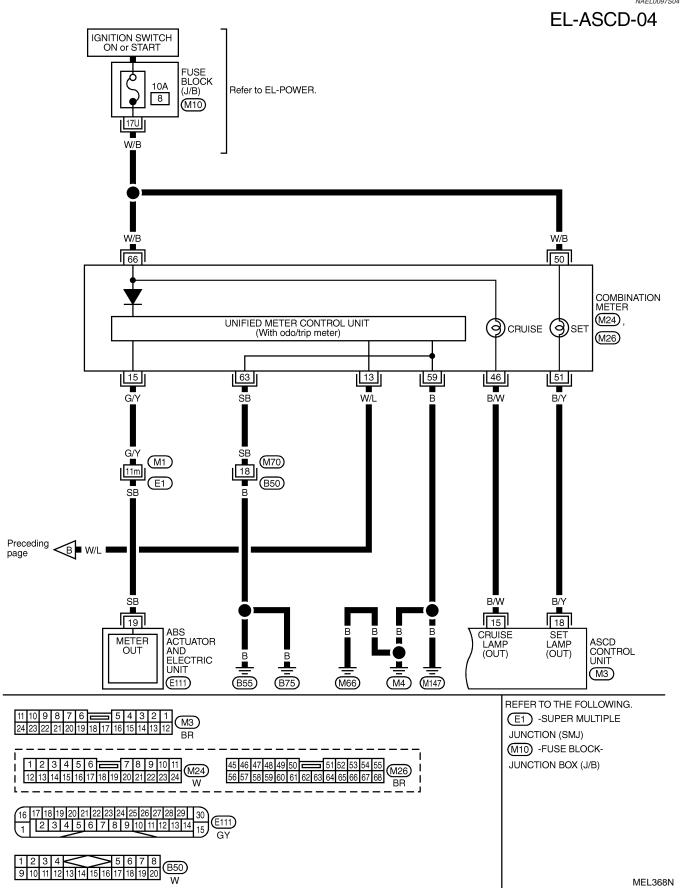

SMART C/U - PREVIOUS

Fail-safe System

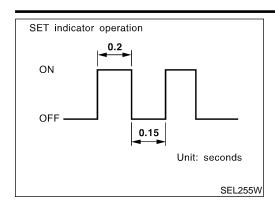

Fail-safe System DESCRIPTION

NAEL0217

When the fail-safe system senses a malfunction, it deactivates ASCD operation. The SET indicator in the combination meter will then flash.

MA

G[

EM

LC

EG

MALFUNCTION DETECTION CONDITIONS

NAEL0217S02

Detection conditions	ASCD operation during malfunction detection	FE
 ASCD steering (RESUME/ACCEL, CANCEL, SET/COAST) switch is stuck. Vacuum motor ground circuit or power circuit is open or shorted. Air valve ground circuit or power circuit is open or shorted. Release valve ground circuit or power circuit is open or shorted. 	 ASCD is deactivated. Vehicle speed memory is canceled. 	CL
 Vehicle speed sensor is faulty. ASCD control unit internal circuit is malfunctioning. 		MT
ASCD brake switch or stop lamp switch is faulty.	ASCD is deactivated. Vehicle speed memory is not canceled.	AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

ΕL

Trouble Diagnoses SYMPTOM CHART

NAEL0218

	SY	MPIOM	CHARI				NAEL0218S01
PROCEDURE			Dia	gnostic proce	dure		
REFERENCE PAGE (EL-)	227	228	229	230	231	231	233
SYMPTOM	FAIL-SAFE SYSTEM CHECK	POWER SUPPLY AND GROUND CIRCUIT CHECK	ASCD BRAKE/STOP LAMP SWITCH CHECK	ASCD STEERING SWITCH CHECK	VEHICLE SPEED SENSOR CHECK	ASCD PUMP CIRCUIT CHECK	ASCD ACTUATOR/PUMP CHECK
ASCD cannot be set. ("CRUISE" indicator lamp does not ON.)		X		X ★ 3			
ASCD cannot be set. ("SET" indicator lamp does not blink.)			Х	Х	Х		
ASCD cannot be set. ("SET" indicator lamp blinks.★1)	Х		Х	Х	Х	Х	
Vehicle speed does not decrease after SET/COAST switch has been pressed.				Х			Х
Vehicle speed does not return to the set speed after RESUME/ACCEL switch has been pressed.★2				Х			Х
Vehicle speed does not increase after RESUME/ACCEL switch has been pressed.				Х			Х
System is not released after CANCEL switch (steering) has been pressed.				Х			Х
Large difference between set speed and actual vehicle speed.					Х	Х	Х
Deceleration is greatest immediately after ASCD has been set.					Х	Х	Х


^{★1:} It indicates that system is in fail-safe. After completing diagnostic procedures, perform "FAIL-SAFE SYSTEM CHECK" (EL-227) to verify repairs

^{★2:} If vehicle speed is greater than 40 km/h (25 MPH) after system has been released, pressing RESUME/ACCEL switch returns vehicle speed to the set speed previously achieved. However, doing so when the ASCD main switch is turned to "OFF", vehicle speed will not return to the set speed since the memory is canceled.

^{★3:} Check only main switch built-in steering switch.

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

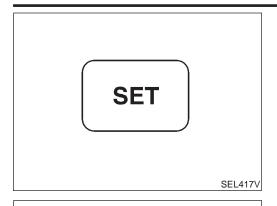

Brake pedal

SET/COAST switch "ON"

FAIL-SAFE SYSTEM CHECK

=NAEL0218S02

Turn ASCD main switch to ON and check if the SET indicator blinks.

MA

If the indicator lamp blinks, check the following.

ASCD steering switch. Refer to EL-230.

Turn ignition switch to ON position.

Drive the vehicle at more than 40 km/h (25 MPH) and push

LC

SET/COAST switch. If the indicator lamp blinks, check the following. EC

Vehicle speed signal. Refer to EL-231.

ASCD pump circuit. Refer to EL-231.

Replace control unit.

SEL767P

SAT797A

GL

MT

Depress brake pedal slowly (brake pedal should be depressed more than 5 seconds).

If the indicator lamp blinks, check the following.

TF

AT

ASCD brake/stop lamp switch. Refer to EL-229.

PD

 $\mathbb{A}\mathbb{X}$

SU

5. END. (System is OK.)

ST

HA

SC


EL




Trouble Diagnoses (Cont'd)

SMART C/U - PREVIOUS


POWER SUPPLY AND GROUND CIRCUIT CHECK

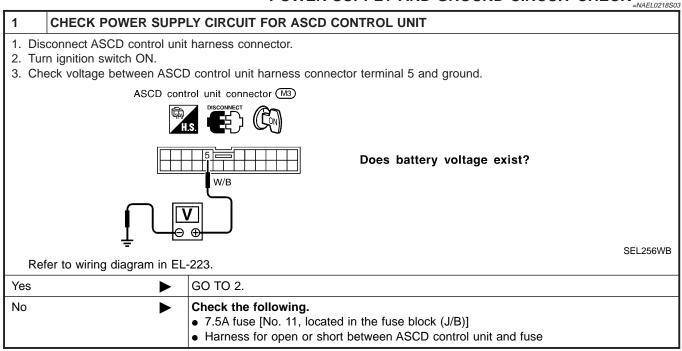

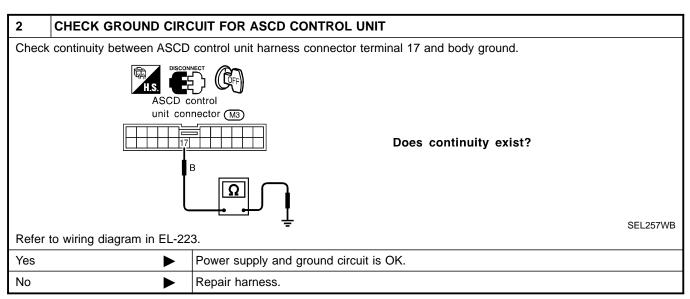

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

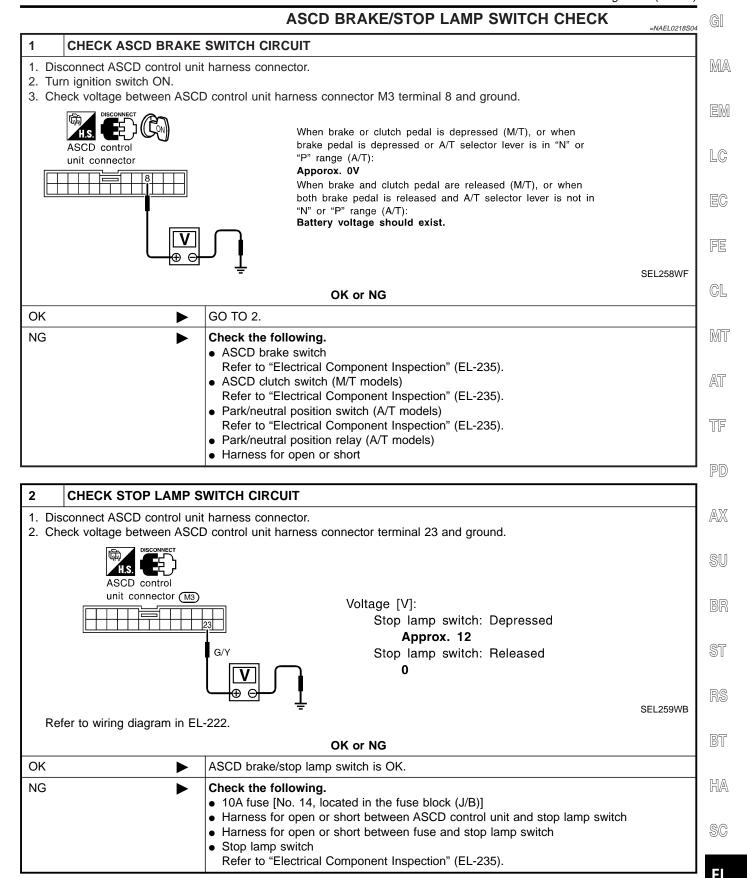


SMART C/U - PREVIOUS

ASCD STEERING SWITCH CHECK

=NAEL0218S05

1 CHECK ASCD STEERING SWITCH CIRCUIT FOR ASCD CONTROL UNIT

Check voltage between ASCD control unit harness connector terminals and ground.

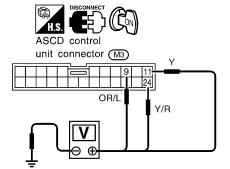

	Terminal No.		Switch condition		
	(+)	(-)	Pressed	Released	
MAIN SW	9	Ground	٥V	Approx. 9V	
SET/COAST SW	11	Ground	12V	OV	
RESUME/ACC SW	24	Ground	12V	0V	
CANCEL SW	11	Ground	12V	0V	
CANCEL SW	24	Ground	12V	0V	

SEL260WC


Refer to wiring diagram in EL-222.

OK or NG

OK •	ASCD steering switch is OK.
NG ▶	GO TO 2.

3 CHECK ASCD STEERING SWITCH

- 1. Disconnect ASCD steering switch.
- 2. Check continuity between terminals by pushing each switch.

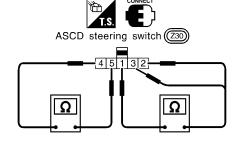

Switch	Condition	Terminal				
OWIGH	Condition	1	2	3	4	5
MAIN	ON				$\overline{}$	
RESUME/ACCEL	ON	\circ		$\overline{}$		
SET/COAST	ON	\circ	$\overline{}$			
CANCEL	ON	\bigcirc	ightharpoonup			
OANOLL	011	$\overline{\bigcirc}$	—	0		


SEL764WA

OK or NG

Ì	NG I	>	Replace ASCD steering switch.
ı	OK J		Check harness for open or short between ASCD steering switch and ASCD control unit.

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

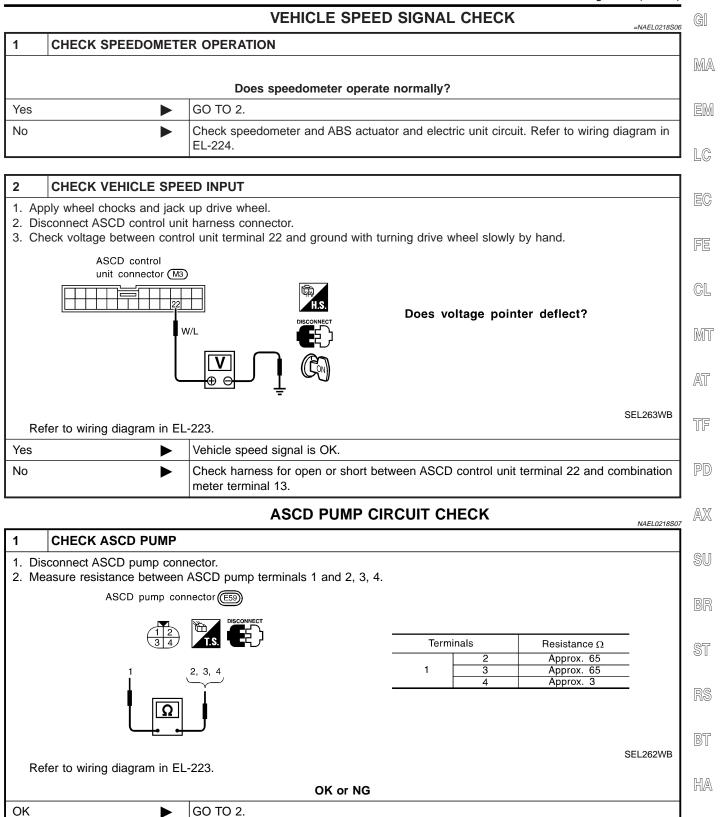


Ξ.


Replace ASCD pump.

NG

SMART C/U - PREVIOUS


Trouble Diagnoses (Cont'd)

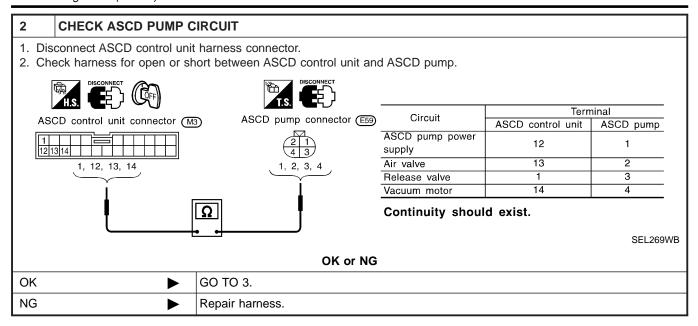

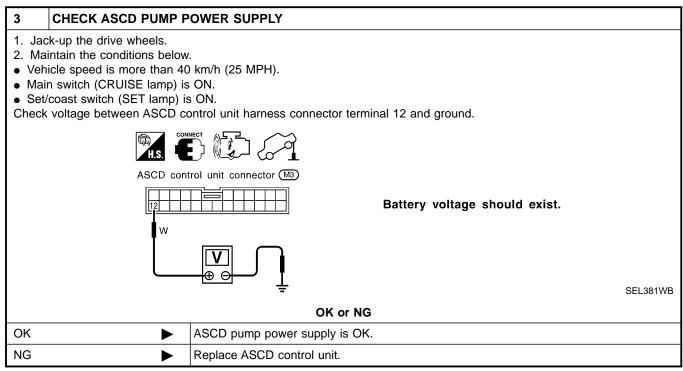

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

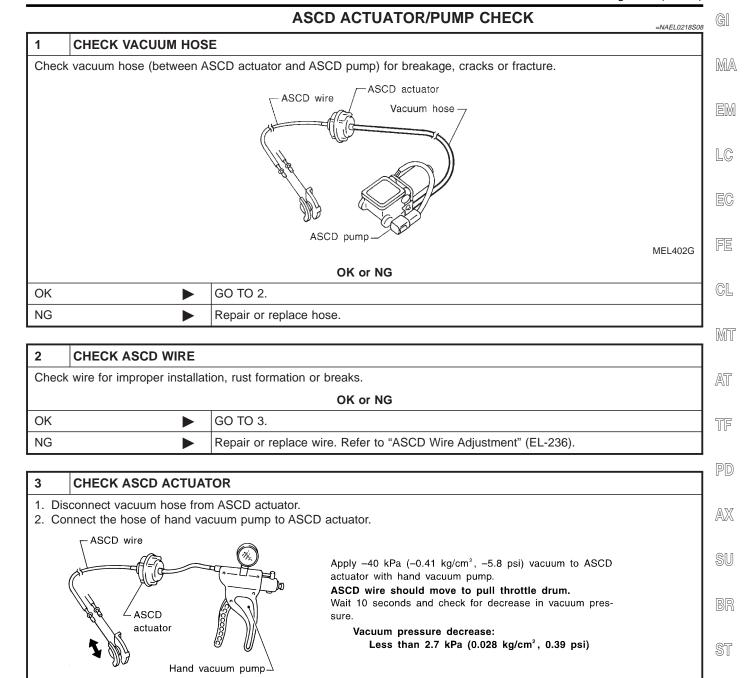

SC

BT

HA

SEL264W

OK or NG

GO TO 4.

Replace ASCD actuator.

OK

NG


Trouble Diagnoses (Cont'd)

D) SMART C/U - PREVIOUS

CHECK ASCD PUMP 1. Disconnect vacuum hose from ASCD pump and ASCD pump connector. 2. If necessary remove ASCD pump. 3. Connect vacuum gauge to ASCD pump. 4. Apply 12V direct current to ASCD pump and check operation. 12V direct current supply terminals Operation ASCD pump (+) FUSE Air valve 2 Close Vacuum gauge Release valve 3 Close 1 Operate Vacuum motor ASCD pump connector A vacuum pressure of at least -40 kPa (-0.41 kg/cm², -5.8 psi) should be generated. SEL265WB OK or NG INSPECTION END OK NG Replace ASCD pump.

SMART C/U - PREVIOUS


Electrical Component Inspection

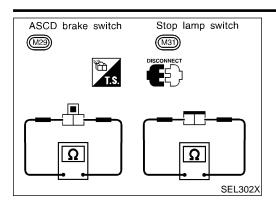


Electrical Component Inspection ASCD BRAKE SWITCH AND STOP LAMP SWITCH NAEL0219802

	Continuity		
Condition	ASCD brake switch	Stop lamp switch	
When brake pedal is depressed	No	Yes	
When brake pedal is released	Yes	No	

Check each switch after adjusting brake pedal — refer to BR-15, "BRAKE PEDAL AND BRACKET".

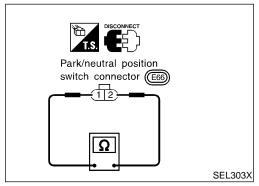

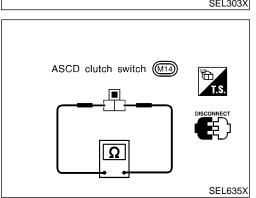

PARK/NEUTRAL POSITION SWITCH (FOR A/T MODELS)

	NAEL0219S03
A/T collector lover position	Continuity
A/T selector lever position	Between terminals 1 and 2
"P"	Yes
"N"	Yes
Except "P" and "N"	No

ASCD CLUTCH SWITCH (FOR M/T MODELS)

	NAEL0219S05
Condition	Continuity
When clutch pedal is depressed	No
When clutch pedal is released	Yes

 $\mathbb{A}\mathbb{X}$

SU

G[

MA

EM

LC

EC

FE

GL

MT

AT

TF

PD

.0219S05 BR

> ST RS


BT

HA

SC

ΕL

ASCD Wire Adjustment

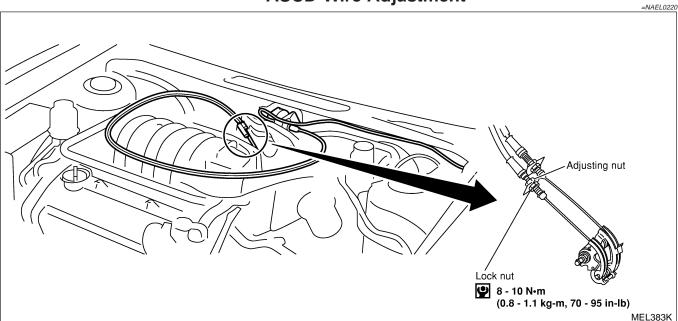

CAUTION:

- Be careful not to twist ASCD wire when removing it.
- Do not tense ASCD wire excessively during adjustment.

Adjust the tension of ASCD wire in the following manner.

- 1. Loosen lock nut and adjusting nut.
- 2. Make sure that accelerator wire is properly adjusted. Refer to FE-3, "ACCELERATOR CONTROL SYSTEM".
- 3. Tighten adjusting nut just until throttle drum starts to move.
- 4. Loosen adjusting nut again 1/2 to 1 turn.
- 5. Tighten lock nut.

System Description

System Description	GI
Power is supplied at all times	
 from 40A fusible link (letter f, located in the fuse and fusible link box) 	MA
to circuit breaker terminal 1	0000 4
through circuit breaker terminal 2	
to power window relay terminal 3,	EM
to front power window main switch terminal 4, and	
to front power window switch RH terminal 6.	LC
With ignition switch in ON or START position, power is supplied	
• through 7.5A fuse [No. 11, located in the fuse block (J/B)]	
to power window relay terminal 2, and	EG
to smart entrance control unit terminal 33.	
Ground is supplied to power window relay terminal 1	FE
• through body grounds M4, M66 and M147.	
The power window relay is energized and power is supplied	CL
through power window relay terminal 5	WL
to front power window main switch terminal 11,	
• to front power window switch RH terminal 13,	MT
 to rear power window switch LH and RH terminals 5. 	
MANUAL OPERATION	AT
Front Door LH	7-71
Ground is supplied	
 to front power window main switch terminal 5 	TF
 through body grounds M77 and M111. 	
WINDOW UP	PD
When the front LH switch in the front power window main switch is pressed in the up position, power is sup-	
plied	0.5.4
to front power window regulator LH terminal 1	$\mathbb{A}\mathbb{X}$
through front power window main switch terminal 2.	
Ground is supplied	SU
to front power window regulator LH terminal 3	
 through front power window main switch terminal 3. 	
Then, the motor raises the window until the switch is released.	BR
WINDOW DOWN When the LH switch in the front power window main switch is pressed in the down position, power is supplied	
• to front power window regulator LH terminal 3	ST
through front power window main switch terminal 3.	
Ground is supplied	D @
to front power window regulator LH terminal 1	RS
through front power window main switch terminal 2.	
Then, the motor lowers the window until the switch is released.	BT
Front Door RH	
Ground is supplied	HA
to front power window main switch terminal 5	
• through body grounds M77 and M111.	SC
NOTE:	
Numbers in parentheses are terminal numbers, when power window switch is pressed in the UP and DOWN	EL
positions respectively. EPONT POWER WINDOW MAIN SWITCH OPERATION	

When front RH switch in the front power window main switch is pressed UP or DOWN position, a signal is supplied

- through front power window main switch terminal 8
- to front power window switch RH terminal 11.

The subsequent operation is the same as the front power window switch RH operation.

FRONT POWER WINDOW SWITCH RH OPERATION

Power is supplied

- through front power window switch RH (5, 4)
- to front power window regulator RH (1, 3).

Ground is supplied

- to front power window regulator RH (3, 1)
- through front power window switch RH (4, 5)
- to front power window switch RH terminal 12
- through front power window main switch terminal 1.

Then, the motor raises or lowers the window until the switch is released.

Rear Door LH

Ground is supplied

NAEL0102S0104

- to front power window main switch terminal 5
- through body grounds the M77 and M111.

NOTE:

Numbers in parentheses are terminal numbers, when the power window switch is pressed in the UP and DOWN positions.

FRONT POWER WINDOW MAIN SWITCH OPERATION

Power is supplied

- through front power window main switch terminal (13, 12)
- to rear power window switch LH terminal (3, 4)

The subsequent operation is the same as the rear power window switch LH operation.

REAR POWER WINDOW SWITCH LH

Power is supplied

- through rear power window switch LH (1, 2)
- to rear power window regulator LH (1, 2)

Ground is supplied

- to rear power window regulator LH (2, 1)
- through rear power window switch LH (2, 1)
- to rear power window switch LH terminal (4, 3)
- through front power window main switch terminal (12, 13)

Then, the motor raises or lowers the window until the switch is released.

Rear Door RH

NAEL0102S0105

Rear door RH windows will rise and lower in the same manner as the rear door LH window.

AUTO OPERATION

The power window AUTO feature enables the driver or front passenger to open or close the driver's and front passenger's window without holding the window switch in the up or down position.

The AUTO feature only operates on the driver's and front passenger's window upward and downward movement.

POWER WINDOW LOCK

NAFL0102S03

The power window lock is designed to lock operation of all windows except for driver's door window. When the lock switch is pressed to lock position, the ground of the front and rear power window switches, in the power window main switch, is disconnected. This prevents the power window motors from operating.

RETAINED POWER OPERATION

When the ignition switch is turned to OFF position from ON or START position, power is supplied for 45 seconds

- to power window relay terminal 2
- from smart entrance control unit terminal 5.

POWER WINDOW

SMART C/U - PREVIOUS

System Description (Cont'd)

Ground is always supplied

- to power window relay terminal 1
- through body grounds.

When power and ground are supplied, the power window relay continues to be energized, and the power window can be operated.

The retained power operation is canceled when the driver or passenger side door is opened.

INTERRUPTION DETECTION FUNCTION

Front power window main switch and front power window switch RH monitor the power window regulator motor operation and the power window position (full closed or other) for driver's and passenger's power window by the signals from encoder and limit switch in front power window regulator LH or RH.

When front power window main switch or front power window switch RH detects interruption during the following close operation in the driver's or front passenger's side door,

- automatic close operation when ignition switch is in the "ON" position
- automatic close operation during retained power operation

front power window main switch or front power window switch RH controls driver's or front passenger's power window regulator motor for open and the power window will be lowered about 150 mm (5.91 in).

GI

MA

EM

EG

MT

GL

ſF

AT

PD AX

SU

BR

ST

RS

BT

HA


SC

EL

 \mathbb{M}


Schematic


NAEL0103

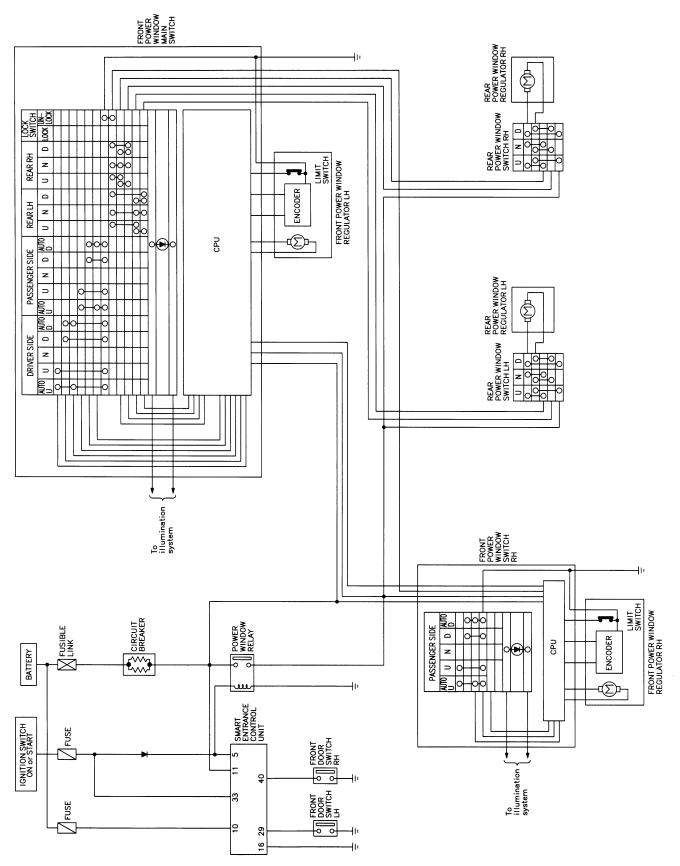


MEL842L

Wiring Diagram — WINDOW –

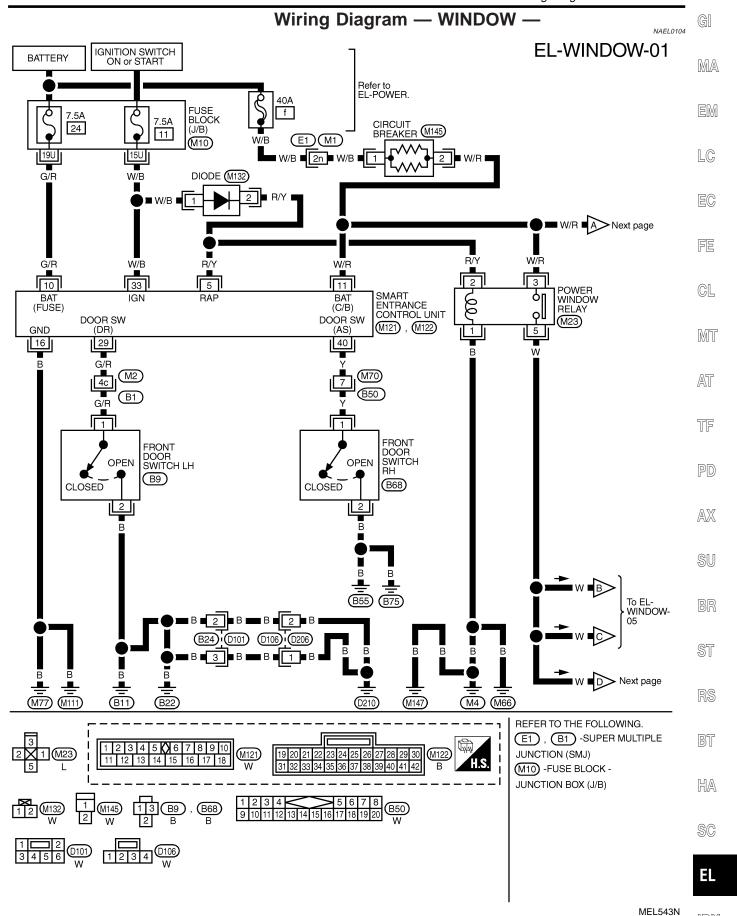

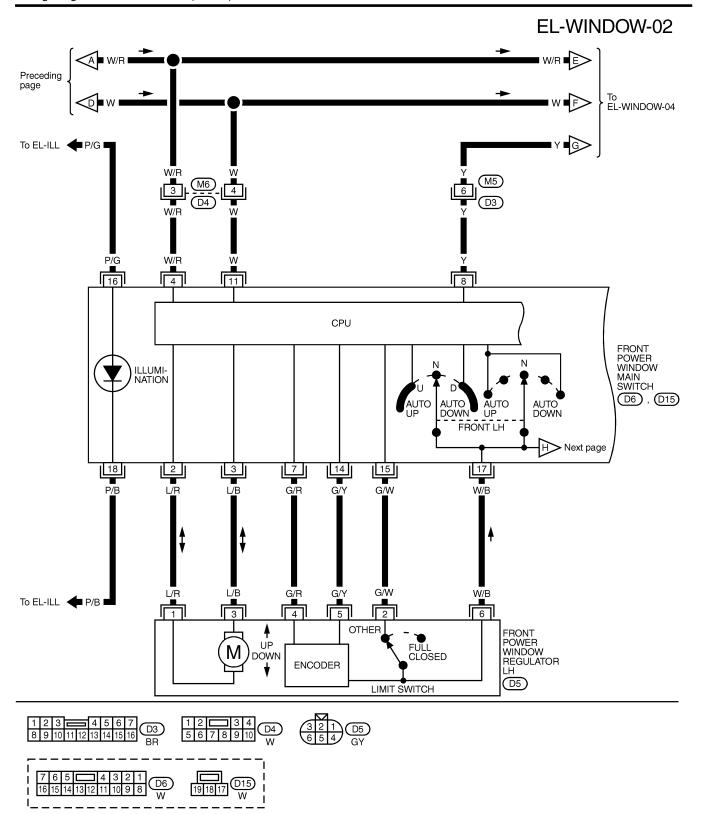

MEL369N

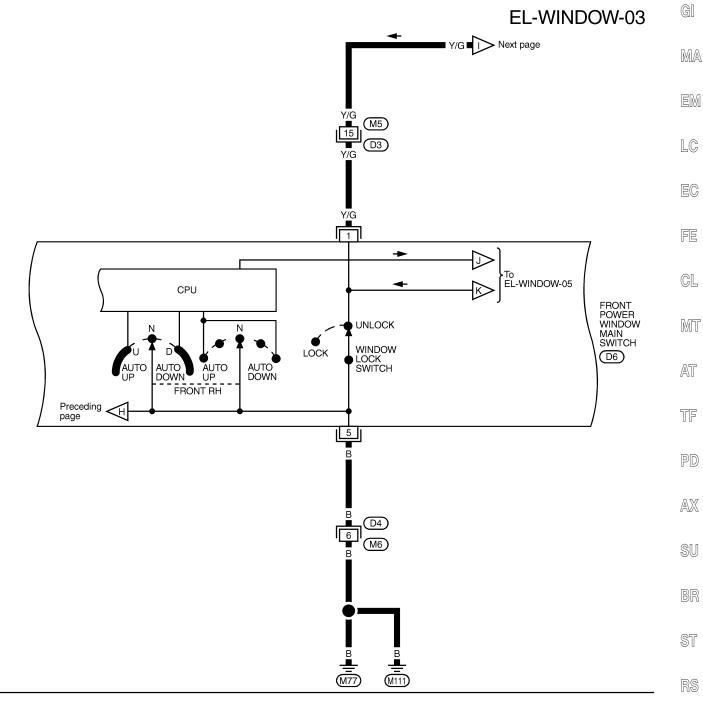




HA

BT


SC

EL

MEL370N

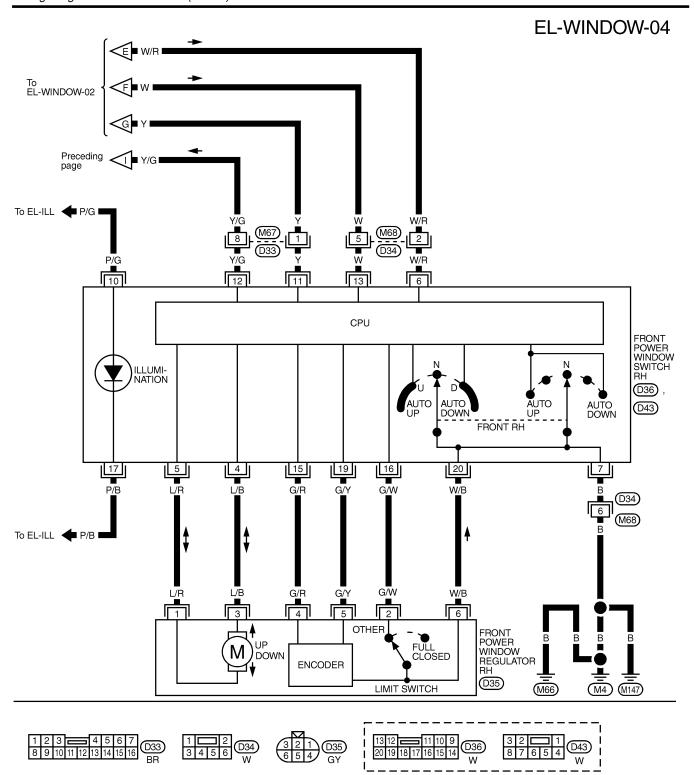

MEL846L

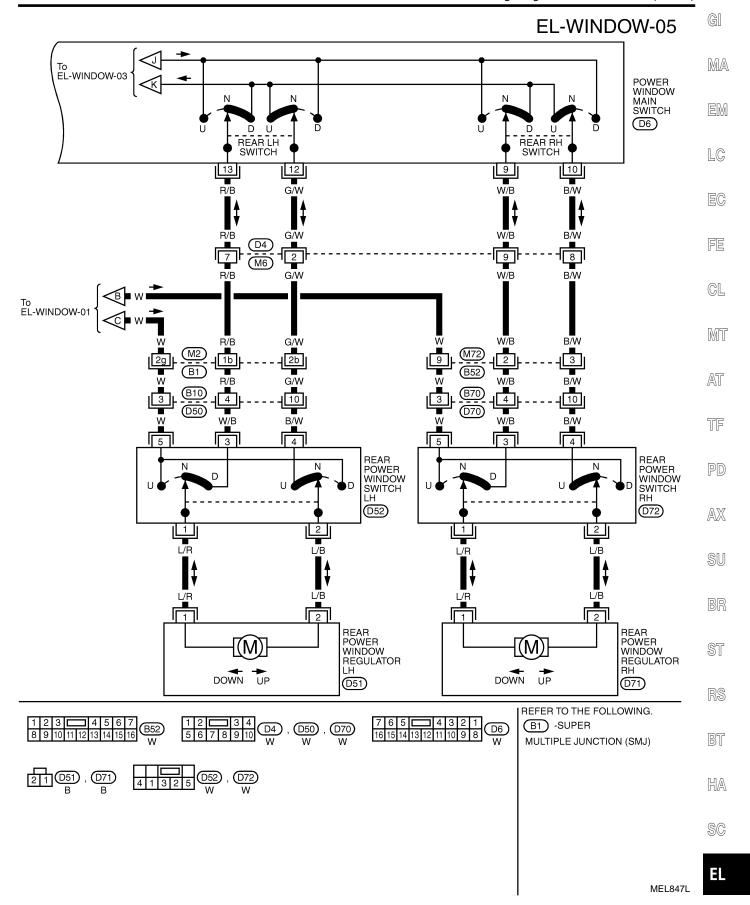

Trouble Diagnoses

	Trouble Blagi	NAEL022
Symptom	Possible cause	Repair order
None of the power windows can be operated using any switch.	7.5A fuse, 40A fusible link M145 circuit breaker Power window relay M145 circuit breaker circuit Power window relay circuit Ground circuit Power window main switch	 Check 7.5A fuse [No. 11, located in fuse block (J/B)], 40A fusible link (letter f, located in fuse and fusible link box). Check M145 circuit breaker. Check power window relay. Check the following. Harness between M145 circuit breaker and 40A fusible link Harness between M145 circuit breaker and front power window main switch Check the following. Harness between 7.5A fuse and power window relay Harness between M145 circuit breaker and power window relay Check the following. Ground circuit of power window main switch terminal 5 Power window relay ground circuit Check power window main switch.
Driver side power window cannot be operated but other windows can be operated.	Driver side power window regulator circuit Driver side power window regulator Power window main switch	Check harness between power window main switch and driver side power window regulator for open or short circuit. Check driver side power window regulator. Check power window main switch.
Passenger side power window cannot be operated but other window can be operated.	 Power supply for front power window switch RH Front power window switch RH ground circuit Front power window switch RH circuit Front power window regulator RH circuit Front power window regulator RH Front power window main switch Front power window switch RH 	 Check power supply for front power window switch RH terminals 6 and 13. Check front power window switch RH ground circuit. Check harness between front power window switch RH and power window main switch. Check harness between front power window switch RH and front power window regulator RH for open or short circuit. Check front power window regulator RH. Check front power window main switch. Check front power window switch RH.
One or more rear power windows except front window cannot be operated.	Rear power window switches Rear power window regulators Power window main switch Rear power window circuit	Check rear power window switches. Check rear power window regulator. Check power window main switch. Check the following. Harness between the rear power window switches terminal 5 and power window relay Harnesses between power window main switch and rear power window switches for open/short circuit Harnesses between rear power window switches and rear power window regulator for open/short circuit
Power windows except driver's side window cannot be operated using power window main switch but can be operated by power window switches.	Power window main switch	Check power window main switch.
Driver side power window automatic operation does not function properly.	Power window main switch Encoder and limit switch	Check power window main switch. Check encoder and limit switch. (EL-248)

POWER WINDOW

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

Symptom	Possible cause	Repair order	(
Front passenger side power window automatic operation does not function properly.	Front power window switch RH Encoder and limit switch	Check front power window switch RH. Check encoder and limit switch. (EL-248)	-
Retained power operation does not operate properly.	RAP signal circuit Driver or passenger side door switch circuit Smart entrance control unit	Check harness between power window relay terminal 2 and smart entrance control unit terminal 5 for open or short circuit. Check the following. Harness between smart entrance control unit and driver or passenger side door switch for short circuit b. Driver or passenger side door switch ground circuit c. Driver or passenger side door switch Check smart entrance control unit. (EL-324)	- [
Passenger side power window cannot be operated using power window main switch but can be operated by passenger side power window switch.	Front power window main switch	Check power window main switch. (EL-250)	- [
Rear LH power window cannot be operated using power window main switch but can be operated by rear LH power window switch.	Front power window main switch	Check power window main switch. (EL-252)	-
Rear RH power window cannot be operated using power window main switch but can be operated by rear RH power window switch.	Front power window main switch	Check power window main switch. (EL-253)	

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

EL

 $\mathbb{I}\mathbb{D}\mathbb{X}$

ENCODER AND LIMIT SWITCH CHECK

=NAEL0221S01

1 CHECK DOOR WINDOW SLIDE MECHANISM

Check the following.


- Obstacles in window, glass molding, etc.
- · Worn or deformed glass molding
- · Door sash tilted too far inward or outward
- Door window regulator

OK or NG

OK •	GO TO 2.
NG ►	Remove obstacles or repair door window slide mechanism.

2 CHECK POWER SUPPLY TO LIMIT SWITCH

- 1. Disconnect front power window regulator LH or RH harness connector.
- 2. Check voltage between front power window main switch terminal 15 or front power window switch RH terminal 16 and ground.

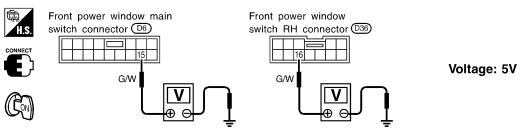


NOTE: Check voltage when front power window regulator LH or RH harness connector is disconnected.

SEL725WA

OK •	GO TO 3.
NG ►	Replace power window main switch or front power window switch RH.

3 CHECK LIMIT SWITCH OPERATION

- 1. Connect front power window regulator LH or RH harness connector.
- 2. Check voltage between front power window main switch terminal 15 or front power window switch RH terminal 16 and ground during power window closing operation.

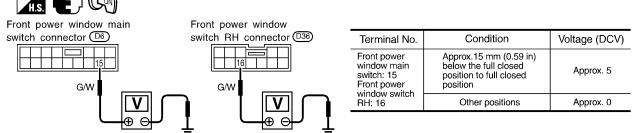


SEL726WA


OK or NG

OK •	GO TO 5.
NG ►	GO TO 4.

POWER WINDOW

Trouble Diagnoses (Cont'd)

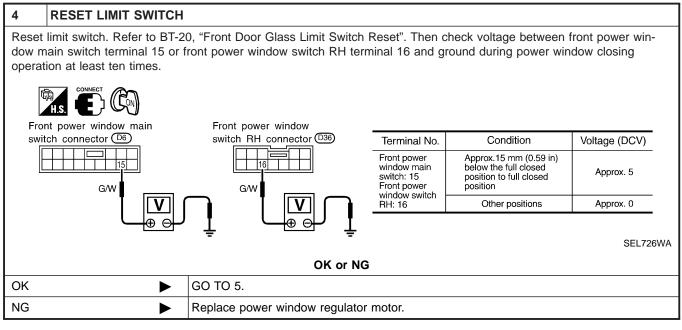

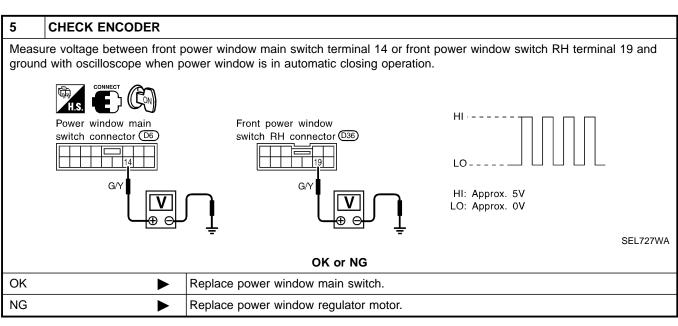

G[

MA

LC

FC.

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

28

BT

HA

SC

EL

MAIN SWITCH OPERATION CHECK Passenger Side Operation


NAEL0221S02

NAEL0221S0201

CHECK POWER WINDOW MAIN SWITCH OUTPUT SIGNAL

(P) With CONSULT-II


- 1. Turn ignition switch to ON position.
- 2. Turn front power window main switch to ON (UP or DOWN).
- 3. Check signal between front power window main switch harness connector D6 terminal 8 (Y) and ground when power window is in open or close operation. (Use "SIMPLE OSCILLOSCOPE" in "SUB MODE" with CONSULT-II.)

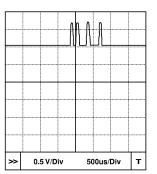

SEL161Y

⋈ Without CONSULT-II

- 1. Turn ignition switch to ON position.
- 2. Turn front power window main switch to ON (UP or DOWN).
- 3. Check signal between front power window main switch harness connector D6 terminal 8 (Y) and ground when power window is in open or close operation.

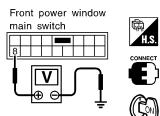

Voltage: Approx.


SEL162Y

OK or NG

OK ►	GO TO 2.
NG ►	Replace front power window main switch.

POWER WINDOW

Trouble Diagnoses (Cont'd)

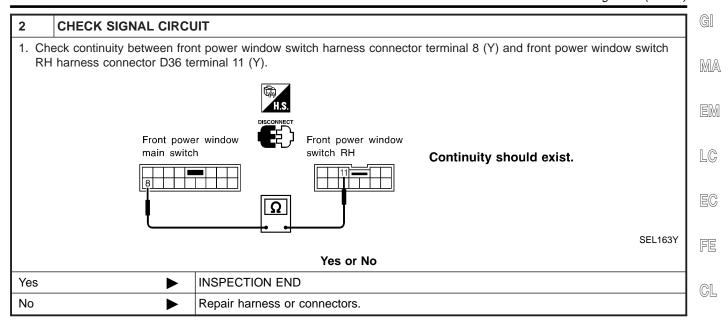

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA


SC

Rear LH Side Window Operation

=NAEL0221S0202

1 CHECK POWER WINDOW MAIN SWITCH OUTPUT SIGNAL

- 1. Turn ignition switch to ON position.
- 2. Check voltage between front power window main switch harness connector D6 terminal 12 (G/W) or 13 (R/B) and ground when rear power window LH side is in open or close operation.

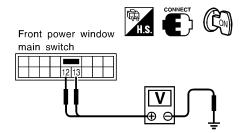

Term	inals	Main switch condition		
(+)	(-)	Open	Close	
12	Ground	0V	12V	
13	Ground	0V	12V	


SEL164Y

OK or NG

OK	>	GO TO 2.
NG	>	Replace front power window main switch.

2 CHECK SIGNAL CIRCUIT

- 1. Check continuity between front power window switch harness connector D6 terminal 12 (G/W) and rear power window switch harness connector D52 LH terminal 4 (B/W).
- 2. Check continuity between front power window switch harness conector D6 terminal 13 (R/B) and rear power window switch harness connector D52 LH terminal 3 (W/B).

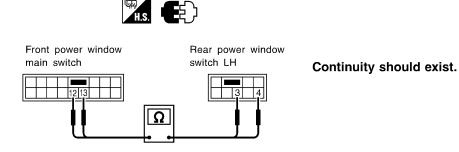

SEL165Y

Yes	or	No
-----	----	----

Yes	INSPECTION END
No •	Repair harness or connectors.

POWER WINDOW

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

Rear RH Side Window Operation

=NAEL0221S0203

GI

MA

LC

EC

FE

GL

MT

AT

TF


AX

SU

BR

CHECK POWER WINDOW MAIN SWITCH OUTPUT

- 1. Turn ignition switch to ON position.
- 2. Check voltage between front power window main switch harness connector D6 terminal 9 (W/B) or 10 (B/W) and ground when rear power window RH side is in open or close operation.

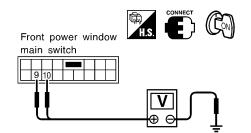

Terminals		Main switch condition		
(+)	(-)	Open	Close	
9	Ground	0V	12V	
10	Ground	0 V	12V	

SEL166Y

OK or NG


OK		GO TO 2.
NG	•	Replace front power window main switch.

2 CHECK SIGNAL CIRCUIT

1. Check continuity between front power window switch harness connector D6 terminal 9 (W/B) and rear power window switch RH harness connector D72 terminal 3 (W/B).

2. Check continuity between front power window switch harness connector D6 terminal 10 (B/W) and rear power window switch RH harness connector D72 terminal 4 (B/W).

Yes or No

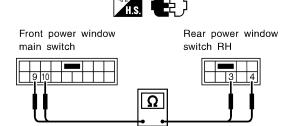

Continuity should exist.

SEL167Y

Yes INSPECTION END

No Repair harness or connectors.

HA


BT

രര

DW

Component Parts and Harness Connector Location

NAEL0106

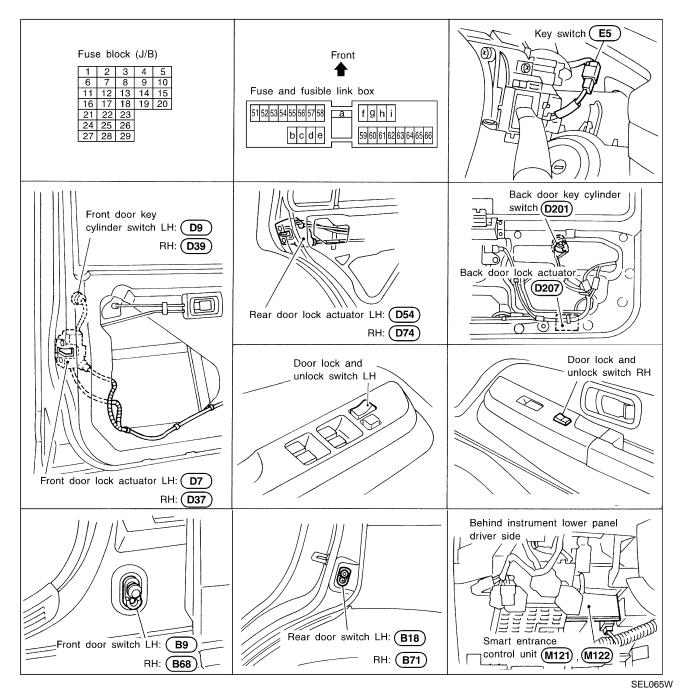


System Description

NAEL0107

NAEL0107S04

OPERATION

- The lock/unlock switch (LH and RH) on door trim can lock and unlock all doors.
- With the door key inserted in the key cylinder on front LH, RH or back door, turning it to "LOCK", will lock all doors; turning it to "UNLOCK" once unlocks the corresponding door; turning it to "UNLOCK" again within 5 seconds after the first unlock operation unlocks all of the other doors. (Signals from door key cylinder switch)
- If the ignition key is in the ignition key cylinder and one or more of doors are open, setting the lock/unlock switch to "LOCK" locks the doors once but then immediately unlock them. (Combination signals from key switch and door switches) (KEY REMINDER DOOR SYSTEM)

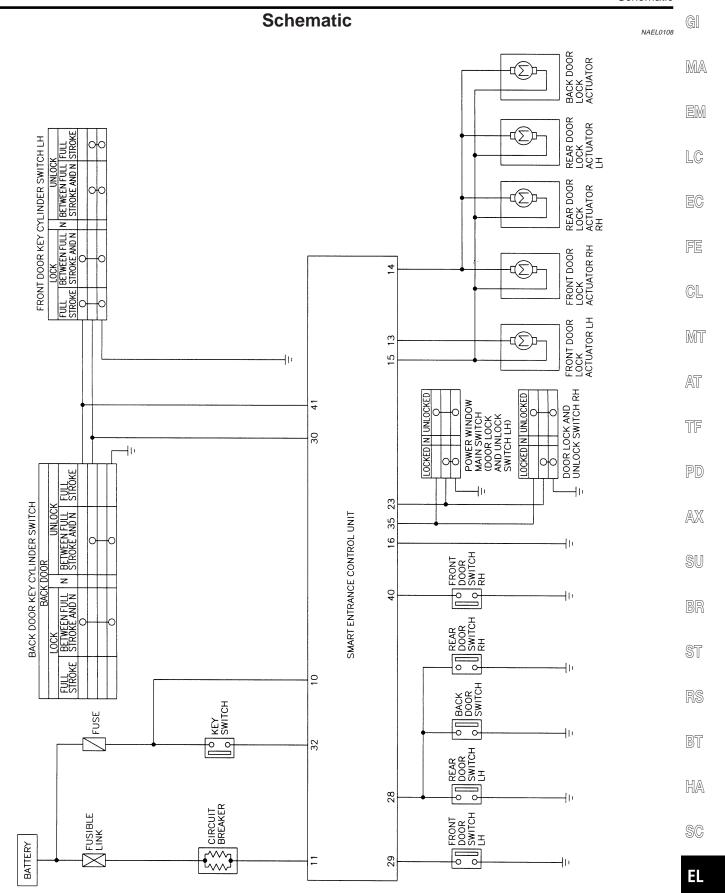

Wiring Diagram — D/LOCK —


FIG. 1

NAEL0109

NAEL0109S01

MEL544N

EL-D/LOCK-01

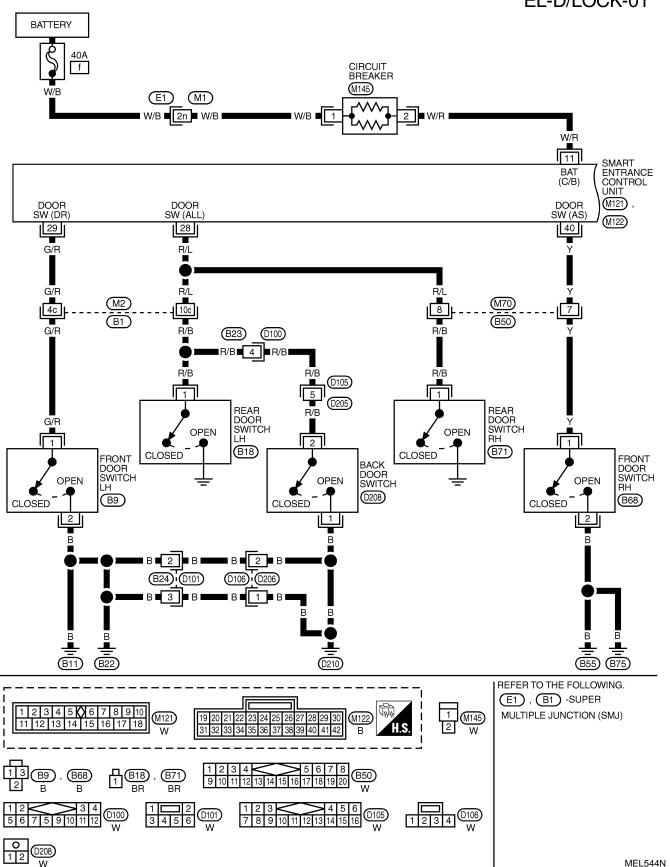

[DX

Wiring Diagram — D/LOCK — (Cont'd)

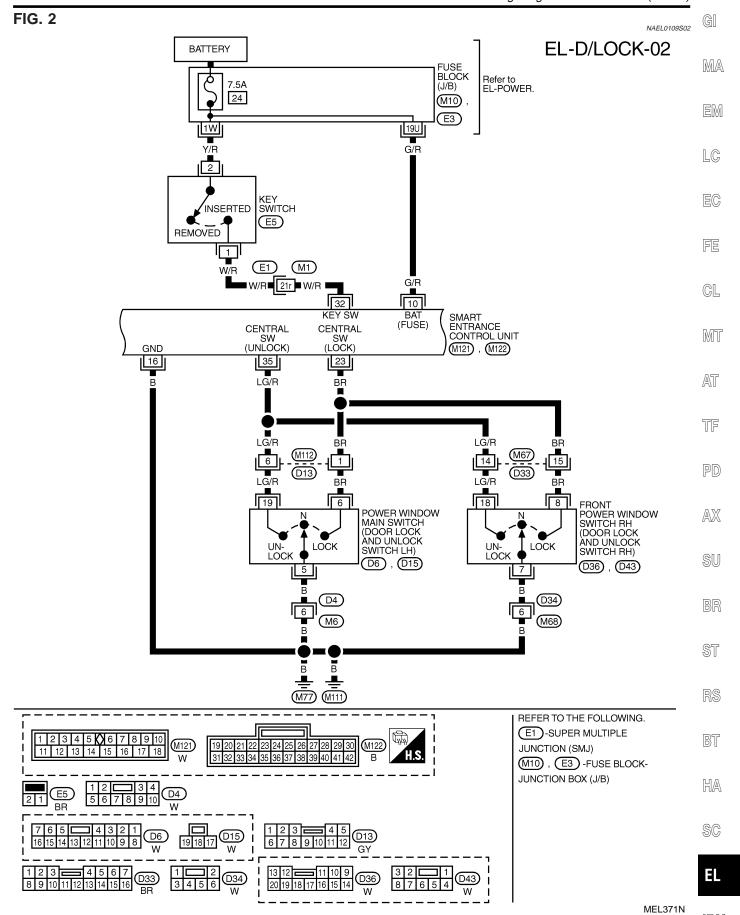


FIG. 3 NAFL0109S03 SMART ENTRANCE CONTROL UNIT EL-D/LOCK-03 KEY CYLINDER KEY CYLINDER SW (LOCK) SW (UNLOCK) (M122) 30 41 LG (M112) (M5) D3) (D13) (D205) LG 3 2 \prod BETWEEN BETWEEN BETWEEN BETWEEN FULL STROKE AND N FULL STROKE AND N FULL STROKE AND N **FULL** FRONT DOOR KEY CYLINDER SWITCH LH BACK DOOR KEY CYLINDER STROKE AND N FULL STROKE FULL STROKE FULL STROKE **FULL** STROKE SWITCH D9 (D201) UNLOCK SW LOCK SW LOCK SW UNLOCK SW (D4) 6 B ■ 2 ■ B ■ (M6) Б D206 | D106 (D101) (B24) 3 **■** B _ (M77)(M111)(D210) (B11) (B22) REFER TO THE FOLLOWING. 1 2 3 = 4 5 6 7 8 9 10 11 12 13 14 15 16 (B1) - SUPER MULTIPLE (M122) JUNCTION (SMJ) 1 2 3 4 5 6 7 8 9 10 W 1 2 3 4 5 6 7 8 9 10 11 12 GY D9 BR 123 1 2 D101 , D102 BR (D105) W

Wiring Diagram — D/LOCK — (Cont'd) FIG. 4

EL-D/LOCK-04

G[

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT


HA

SC

EL

NAEL0109S04

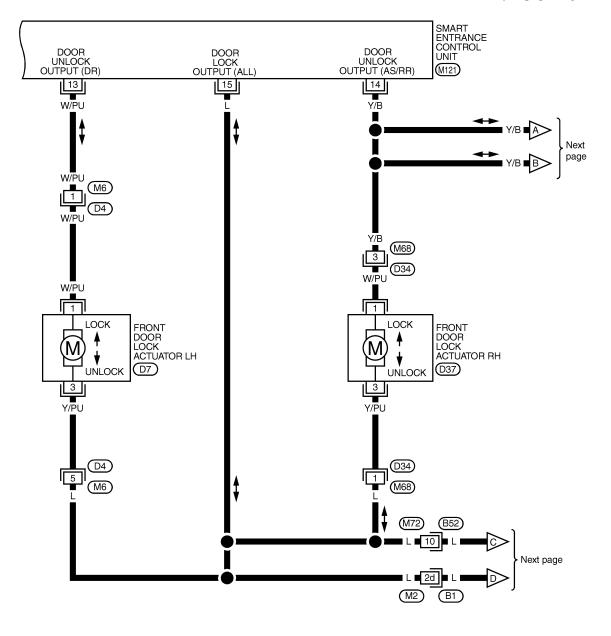

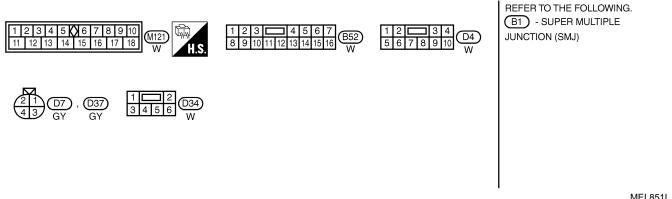


MEL851L


FIG. 5

J. 3

NAEL0109S05

EL-D/LOCK-05

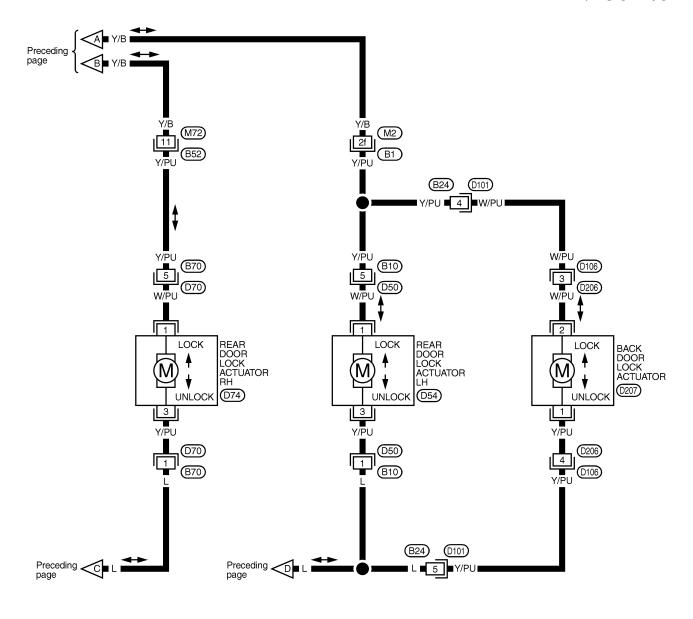

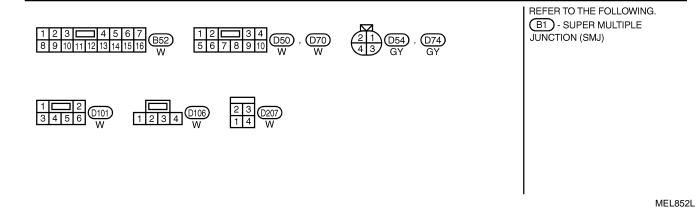

POWER DOOR LOCK

SMART C/U - PREVIOUS

Trouble Diagnoses

Trouble	Diagnoses
SYMPTON	/ CHART

G[NAEL0110

NAEL0110S01

REFERENCE PAGE (EL-)	262	263	264	265	266	267	268	$\mathbb{M}\mathbb{A}$
SYMPTOM	SUPPLY AND GROUND CIRCUIT CHECK			SWITCH CHECK	SWITCH CHECK	BACK DOOR KEY CYLINDER SWITCH CHECK		EM LC EC
	MAIN POWER SUPPLY	DOOR SWITCH CHECK	KEY SWITCH (INSERT) CHECK	DOOR LOCK/UNLOCK	FRONT DOOR KEY CYLINDER	BACK DOOR KEY CYL	DOOR LOCK ACTUATOR CHECK	CL MT
Key reminder door system does not operate properly.	Х	Х	х				Х	TF
Specific door lock actuator does not operate.	Х						Х	
Power door lock does not operate with door lock and unlock switch (LH and RH) on door trim.	Х			Х				PD
Power door lock does not operate with front door key cylinder operation.	Х				Х			AX
Power door lock does not operate with back door key cylinder operation.	Х					Х		SU

BR

ST


RS

BT

HA

SC

EL

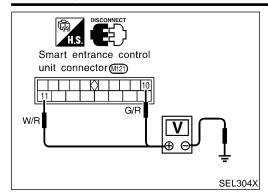


MAIN POWER SUPPLY AND GROUND CIRCUIT CHECK Main Power Supply Circuit Check

NAEL0110S0201

Tern	ninal	Ignition switch		
(+)	(-)	OFF	ACC	ON
10	Cround	Battery	Battery	Battery
11	Ground	voltage	voltage	voltage

If NG, check the following.

- 40A fusible link (letter f, located in fuse and fusible link box)
- 7.5A fuse [No. 24, located in fuse block (J/B)]
- Harness open or short between smart entrance control unit and fusible link
- Harness open or short between smart entrance control unit and fuse

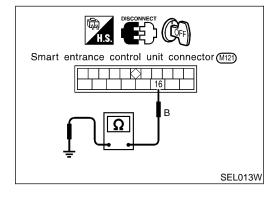

Ground Circuit Check

NAEL0110S0202

Terminals	Continuity	
16 - Ground	Yes	

POWER DOOR LOCK

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

DOOR SWITCH CHECK

=NAEL0110S05

GI

MA

EM

LC

EC

FE

GL

MT

AT


TF

AX

SU

CHECK DOOR SWITCH INPUT SIGNAL

Check voltage between smart entrance control unit terminals 28, 29 or 40 and ground.

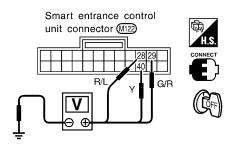

	Terminals (+) (-)		Condition	Voltage [V]
			Condition	voltage [v]
Front LH	29	Ground	Open	0
door switch	29	Ground	Closed	Approx. 5
Front RH	40	Ground	Open	0
door switch	40	Ground	Closed	Approx. 5
Rear and back	28	Ground	Open	0
door switches		Ground	Closed	Approx. 5

SEL305XA


Refer to wiring diagram in EL-256.

OK or NG

ОК		Door switch is OK.
NG	•	GO TO 2.

CHECK DOOR SWITCH

- 1. Disconnect door switch connector.
- 2. Check the following.
- Continuity between front door switch harness connector B9 (LH) or B68 (RH) terminals 1 and 2.
- Continuity between back door switch harness connector D208 terminals 1 and 2.
- Continuity between rear door switch harness connector B18 (LH) or B71 (RH) terminal 1 and ground.

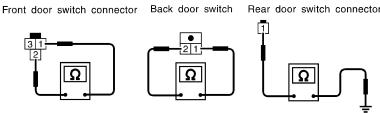

		Terminals	Condition	Continuity
	Front	1 - 2	Closed	No
	door switches	1 - 2	Open	Yes
r	Back door	4 0	Closed	No
	switch	1 - 2	Open	Yes
	Rear door	1 - Ground	Closed	No
	switches	i - Ground	Open	Yes

SEL215Y

OK or NG

OK •	 Check the following. Door switches ground circuit (Front or back door) or rear door switches ground condition Harness for open or short between smart entrance control unit and door switch
NG •	Replace door switch.

HA

BT


SC

KEY SWITCH (INSERT) CHECK

=NAEL0110S06

1 CHECK KEY SWITCH INPUT SIGNAL

Check voltage between smart entrance control unit terminal 32 and ground.

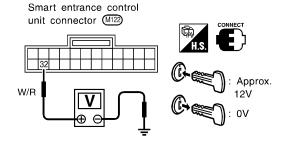

Voltage [V]:

Condition of key switch: Key is inserted.
Approx. 12

Condition of key switch: Key is removed.

0

SEL307X


Refer to wiring diagram in EL-257.

OK or NG

OK ►	Key switch is OK.
NG ►	GO TO 2.

2 | CHECK KEY SWITCH (INSERT)

Check continuity between terminals 1 and 2.

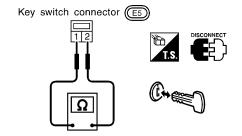

Continuity:

Condition of key switch: Key is inserted.

Yes

Condition of key switch: Key is removed.

No

SEL308X

OK or NG

OK

Check the following.

- 7.5A fuse [No. 24, located in fuse block (J/B)]
- Harness for open or short between key switch and fuse
- Harness for open or short between smart entrance control unit and key switch

NG Replace key switch.

POWER DOOR LOCK

Trouble Diagnoses (Cont'd)



=NAEL0110S03

GI

MA

EM

LC

FE

GL

MT


TF

AX

CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL

1. Disconnect smart entrance control unit connector.

2. Check continuity between control unit terminal 23 or 35 and ground.

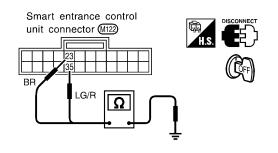

Terminals	Ferminals Door lock/unlock switch (LH or RH) condition	
23 - ground	Lock	Yes
25 - ground	N and Unlock	No
35 - ground	Unlock	Yes
ground	N and Lock	No

SEL309X


Refer to wiring diagram in EL-257.

OK or NG

OK)	>	Door lock/unlock switch is OK.	
NG	>	GO TO 2.	

CHECK DOOR LOCK/UNLOCK SWITCH

- 1. Disconnect door lock/unlock switch connector.
- 2. Check continuity between each door lock/unlock switch terminals.
- Power window main switch (Door lock/unlock switch LH)

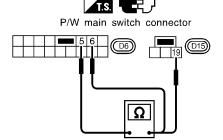



Terminals				
5	19	6		
\bigcirc				
N	у			
\downarrow				
	5 O N			

SEL310X

• Door lock/unlock switch RH



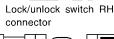

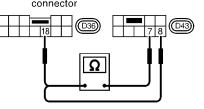

Condition	Terminals			
Condition	7	18	8	
Lock	$\overline{}$		$\overline{}$	
N	No continuity			
Unlock	\bigcirc	$\overline{}$		

SEL311X

OK or NG

OK Check the following.

- Ground circuit for door lock/unlock switch
- Harness for open or short between door lock/unlock switch and smart entrance control unit connector

NG Replace door lock/unlock switch.


BT


HA

FRONT DOOR KEY CYLINDER SWITCH CHECK

CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL (LOCK/UNLOCK SIGNAL)

Check voltage between smart entrance control unit terminals 30 or 41 and ground.

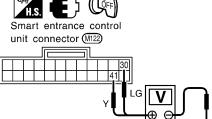

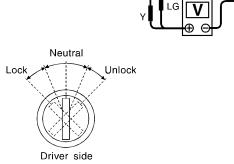

Term	ninals	Key position	Voltage [V]	
(+)	(-)	Key position		
41	Ground	Neutral/Unlock	Approx. 5	
41	Ground	Lock	0	
	0	Neutral/Lock	Applox. 5	
30	Ground	Unlock	0	

SEL312X

Refer to wiring diagram in EL-258.

OK or NG

OK ►	Door key cylinder switch is OK.
NG ►	GO TO 2.


CHECK DOOR KEY CYLINDER SWITCH

- 1. Disconnect door key cylinder switch connector.
- 2. Check continuity between door key cylinder switch terminals.





Door key cylinder switch LH connector D9

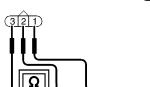

- 1 : Door unlock switch terminal
- (2): Ground terminal
- (3): Door lock switch terminal

Terminals	Key position	Continuity
LH: 3 - 2	Neutral/Unlock	No
LH. 3 - 2	Lock	Yes
I H: 1 - 2	Neutral/Lock	No
LI I. I - Z	Unlock	Yes

SEL313X

OK or NG

	Check the following. Door key cylinder switch ground circuit Harness for open or short between smart entrance control unit and door key cylinder switch
NG ►	Replace door key cylinder switch.

POWER DOOR LOCK

Trouble Diagnoses (Cont'd)



=NAEL0110S08

GI

MA

EM

LC

EC

FE

GL

MT

AT


TF

AX

SU

ST

CHECK BACK DOOR KEY CYLINDER SWITCH INPUT SIGNAL (LOCK/UNLOCK SIGNAL) Check voltage between smart entrance control unit terminals 30 or 41 and ground.

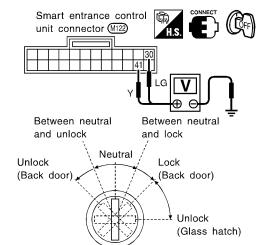

	Terminals (+)		Key position	Voltage [V]
	41	Ground	Between neutral and lock	0
Back door			Other positions	Applox. 5
Dack Goor	30	Ground	Between neutral and unlock	0
			Other positions	Applox. 5

SEL314X


Refer to wiring diagram in EL-258.

OK or NG

OK •	Back door key cylinder switch is OK.	
NG •	GO TO 2.	

CHECK BACK DOOR KEY CYLINDER SWITCH

- 1. Disconnect back door key cylinder switch connector.
- 2. Check continuity between back door key cylinder switch terminals.

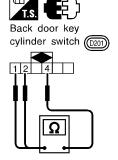

Key position	Terminals			
key position	1	2	4	
Between neutral and lock (Back door)	<u> </u>			
Between neutral and unlock (Back door)		0		

SEL315X

OK or NG

OK	▶	Check the following.
		Back door key cylinder switch ground circuit
		 Harness for open or short between smart entrance control unit and back door key cyl- inder switch
NG		Replace back door key cylinder switch

HA

SC


DOOR LOCK ACTUATOR CHECK

=NAEL0110S04

1 CHECK DOOR LOCK ACTUATOR CIRCUIT

Check voltage for door lock actuator.


• Door lock actuator front LH

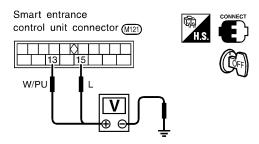

Door lock/unlock	Termir	nal No.	Voltage (V)
switch condition	(+)	(-)	Voltage (V)
Lock Unlock	15	ground	Approx. 12
	13	ground	Арргох. 12

SEL316X

• Door lock actuator front RH, rear and back

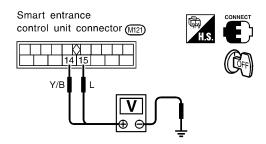

Door lock/unlock	Terminal No.		Valtage (V)
switch condition	(+)	(-)	Voltage (V)
Lock	15	ground	Approx. 12
Unlock	14	ground	Approx. 12

SEL317X


Refer to wiring diagram in EL-259.

OK or NG

OK	GO TO 2.
NG	Replace smart entrance control unit. (Before replacing smart entrance control unit, perform "DOOR LOCK/UNLOCK SWITCH CHECK".)

POWER DOOR LOCK

Trouble Diagnoses (Cont'd)

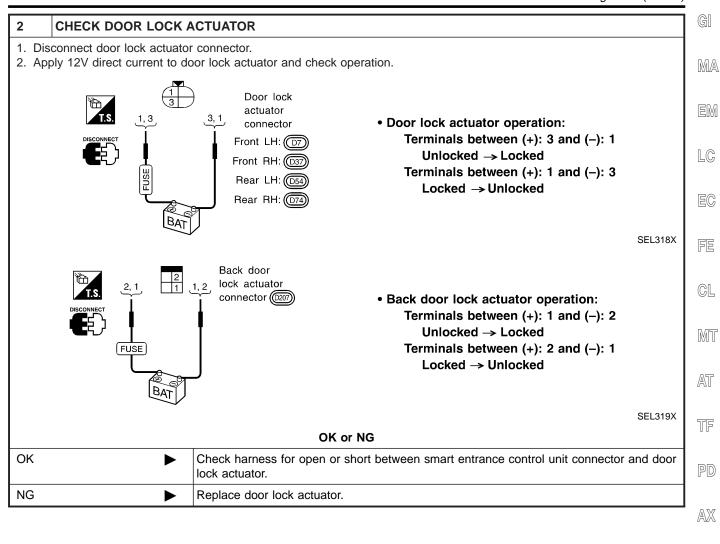

SU

ST


BT

HA

SC

Component Parts and Harness Connector Location

NAFL0111

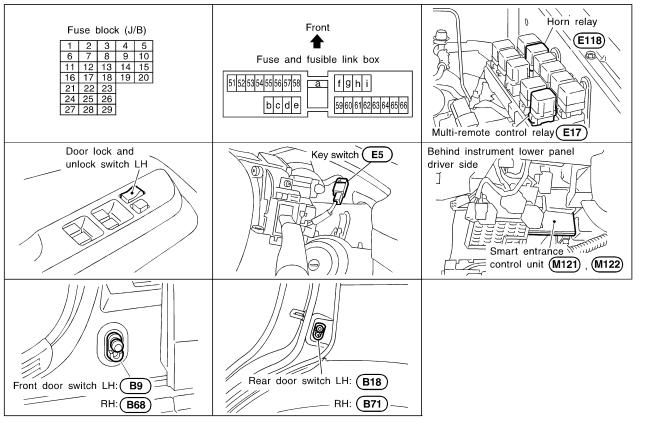

SYSTEM

SEL355X

NAEL0112S01

System Description

INPUTS

Power is supplied at all times

- to smart entrance control unit terminal 11
- through circuit breaker
- through 40A fusible link (letter f located in the fuse and fusible link box),
- to key switch terminal 2, and
- to smart entrance control unit terminal 10
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].
- to multi-remote control relay terminals 1, 3 and 6
- through 15A fuse [No. 20, located in the fuse block (J/B)].
- to horn relay terminals 1 and 3
- through 7.5A fuse [No. 52, located in the fuse block (J/B)].
- to horn relay terminal 6
- through 10A fuse [No. 54, located in the fuse block (J/B)].

When the ignition switch is in the ACC or ON position, power is supplied to smart entrance control unit terminal 21.

When the key switch is ON (ignition key is inserted in key cylinder), power is supplied

- through key switch terminal 1
- to smart entrance control unit terminal 32.

SMART C/U - PREVIOUS

System Description (Cont'd)

When the front door switch LH is OPEN, ground is supplied

- to smart entrance control unit terminal 29
- through front door switch LH terminal 1
- to front door switch LH terminal 2
- through body grounds B11, B22 and D210.

When the front door switch RH is OPEN, ground is supplied

- to smart entrance control unit terminal 40
- through front door switch RH terminal
- to front door switch RH terminal 2
- through body grounds B55 and B75.

When the other door switches are OPEN, ground is supplied

- to smart entrance control unit terminal 28
- through other door switches body grounds.

Remote controller signal is inputted to smart entrance control unit (The antenna of the system is combined with smart entrance control unit).

OPERATION

The multi-remote control system controls operation of the

- power door lock
- interior lamp
- panic alarm
- hazard and horn reminder

OPERATED PROCEDURE

Power Door Lock Operation

Smart entrance control unit receives a LOCK signal from remote controller. Smart entrance control unit locks all doors with input of LOCK signal from remote controller.

When an UNLOCK signal is sent from remote controller once, driver's door will be unlocked.

Then, if an UNLOCK signal is sent from remote controller again within 5 seconds, all other door will be unlocked.

Hazard and Horn Reminder

When smart entrance control unit receives LOCK or UNLOCK signal from remote controller with all doors closed, ground is supplied

- to multi-remote control relay terminal 2
- through smart entrance control unit terminal 7, and
- to horn relay terminal 2
- through smart entrance control unit terminal 19

Multi-remote control relay and horn relay are now energized, and hazard warning lamp flashes and horn sounds as a reminder.

The hazard and horn reminder has a horn chirp mode (C mode) and a non-horn chirp mode (S mode).

Operating function of hazard and horn reminder

	Horn chirp me	ode (C mode)	Non-horn chirp mode (S mode)		
	Hazard warning lamp flash	Horn sound	Hazard warning lamp flash	Horn sound	
Lock	Twice	Once	Twice	_	
Unlock	Once	_	_	_	

How to change hazard and horn reminder mode

When LOCK and UNLOCK signals are sent from the remote controller for more than 2 seconds at the same time, the hazard and horn reminder mode is changed and hazard warning lamp flashes and horn sounds as follows:

MA

LC

GL

MI

AT

TF

AX

NAEL0112S03

NAEL0112S02

EL


SC

BT

HA

SMART C/U - PREVIOUS

System Description (Cont'd)

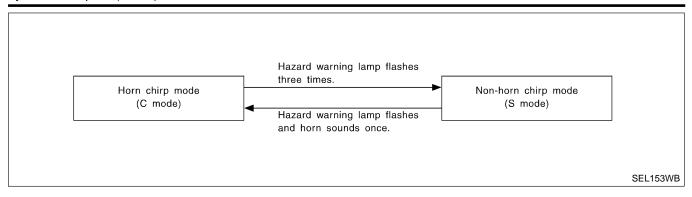

Interior Lamp Operation

NAEL0112S0202

When the following input signals are both supplied:


- door switch CLOSED (when all the doors are closed);
- driver's door LOCKED;

multi-remote control system turns on interior lamp (for 30 seconds) with input of UNLOCK signal from remote controller.

For detailed description, refer to "INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS" (EL-88).

Panic Alarm Operation


When key switch is OFF (when ignition key is not inserted in key cylinder), multi-remote control system turns on and off horn and headlamp intermittently with input of PANIC ALARM signal from remote controller. For detailed description, refer to "VEHICLE SECURITY SYSTEM" (EL-297).

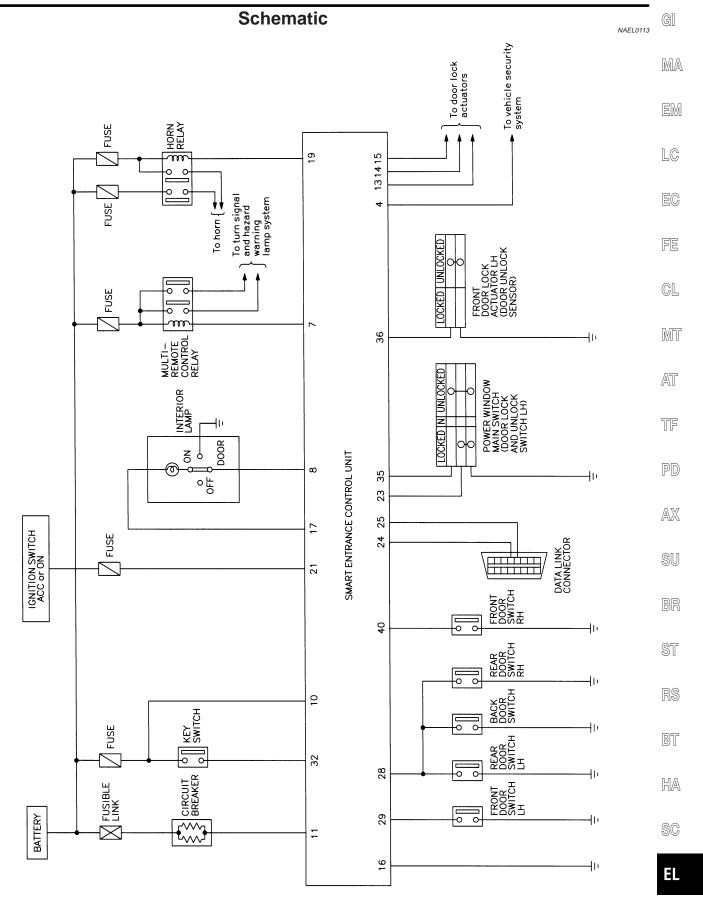

Wiring Diagram — MULTI —

FIG. 1

NAEL0114

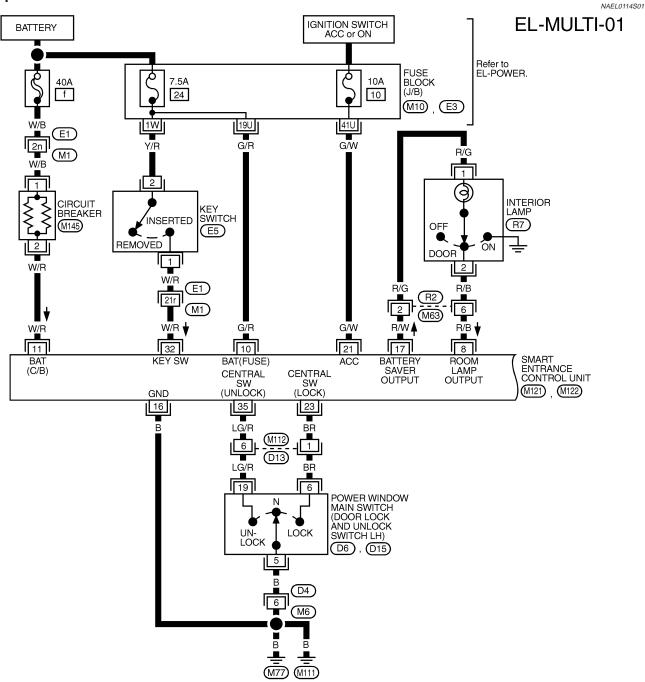

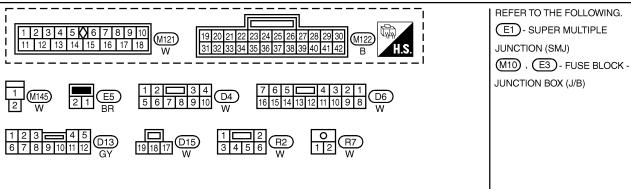


FIG. 2


1 2 3 4 W

Wiring Diagram — MULTI — (Cont'd)




GI

NAEL0114S02

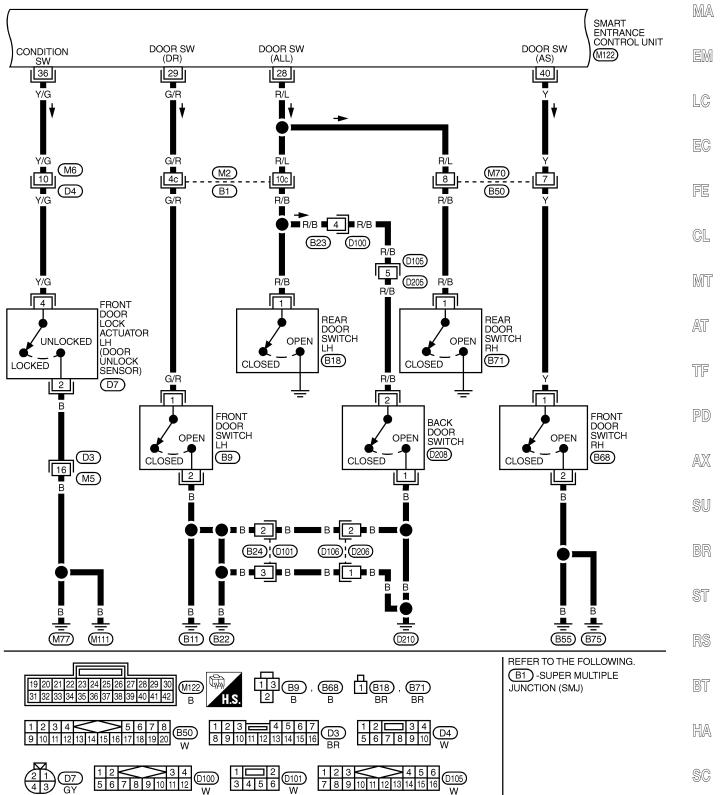

MEL375N

EL

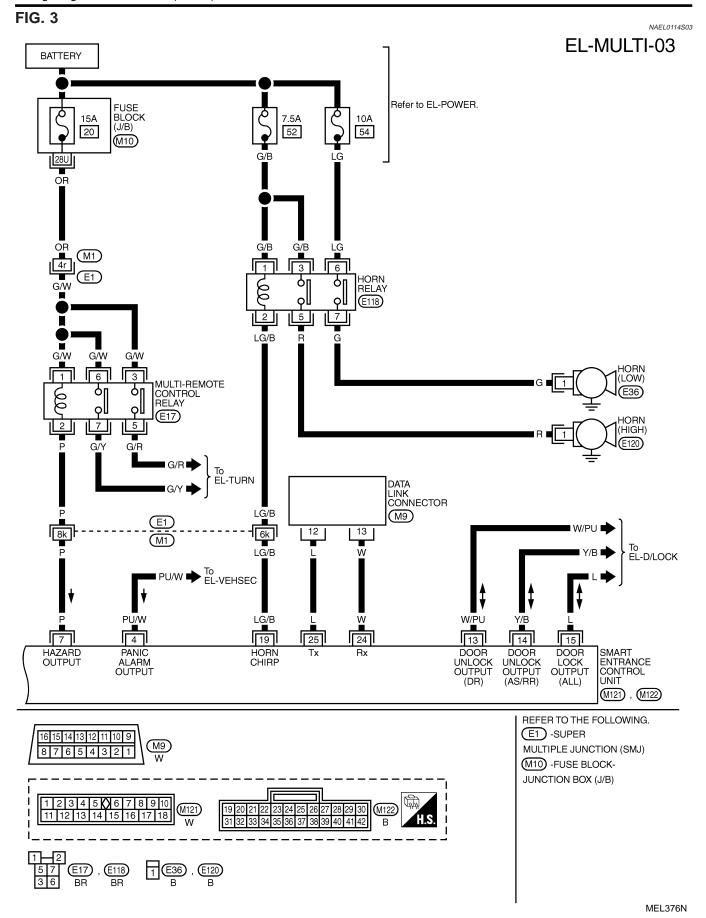

SMART C/U - PREVIOUS

Trouble Diagnoses

Trouble Diagnoses SYMPTOM CHART

NAEL0115

NAEL0115S01

so1 .a MA

NOTE:

cylinder.

Always check remote controller battery before replacing remote controller.

not activate with the ignition key inserted in the ignition key

remote controller.

The panic alarm operation of multi-remote control system does

EM

Symptom	Diagnoses/service procedure	Reference page (EL-)
All function of multi-remote control system do not	Remote controller battery check	278
operate.	2. Power supply and ground circuit for control unit check	279
	3. Replace romote controller. Refer to ID Code Entry Procedure.	291
The new ID of remote controller cannot be	Remote controller battery check	278
entered.	2. Key switch (insert) check	282
	3. Door switch check	281
	4. Door lock/unlock switch LH check	283
	5. Power supply and ground circuit for control unit check	279
	6. Replace romote controller. Refer to ID Code Entry Procedure.	291
Door lock or unlock does not function. (If the power door lock system does not operate manually, check power door lock system. Refer to EL-261.)	Replace remote controller. Refer to ID Code Entry Procedure.	291
Hazard and horn reminder does not activate prop-	Harzard reminder check	285
erly when pressing lock or unlock button of remote controller.	2. Horn reminder check* *: Horn chirp can be activated or deactivated. First check the horn chirp setting. Refer to "System Description", EL-270.	287
	3. Door switch check	281
	4. Replace remote controller. Refer to ID Code Entry Procedure.	291
Interior lamp operation does not activate properly.	Interior room lamp operation check	288
	2. Door switch check	281
	3. Front LH door unlock sensor check	284
Panic alarm (horn and headlamp) does not activate when panic alarm button is continuously	Vehicle security operation check. Refer to "PRELIMINALY CHECK" in "VEHICLE SECURITY SYSTEM".	307
pressed.	2. Key switch (insert) check	282
	3. Replace remote controller. Refer to ID Code Entry Procedure.	291

HA

SC

EL

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

NG

REMOTE CONTROLLER BATTERY CHECK

1 CHECK REMOTE CONTROLLER BATTERY

Remove battery (refer to EL-293) and measure voltage across battery positive and negative terminals, (+) and (-).

Voltage [V]:
2.5 - 3.0

NOTE:

Remote controller does not function if battery is not set correctly.

OK or NG

OK

Check remote controller battery terminals for corrosion or damage.


Replace battery.

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)




GI

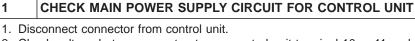

MA

2. Check voltage between smart entrance control unit terminal 10 or 11 and ground.

EM

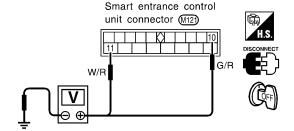

Battery voltage should exist.

EC

FE

LC

Refer to wiring diagram in EL-274.

SEL320X

OK or NG

GL

ОК	>	GO TO 2.
NG		 Check the following. 40A fusible link (letter f, located in fuse and fusible link box) 7.5A fuse [No. 24, located in fuse block (J/B)] M145 circuit breaker Harness for open or short between smart entrance control unit and fuse

MT


AT

2 **CHECK IGNITION SWITCH "ACC" CIRCUIT**

TF

- 1. Disconnect smart entrance control unit connector.
- 2. Check voltage between control unit terminal 21 and ground while ignition switch is "ACC".

AX

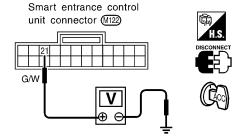

GO TO 3.

Battery voltage should exist.

BR

SU

Refer to wiring diagram in EL-274.

OK

NG

SEL321X

Check the following. • 10A fuse [No. 10, located in fuse block (J/B)] • Harness for open or short between smart entrance control unit and fuse


OK or NG

BT

HA

MULTI-REMOTE CONTROL SYSTEM SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

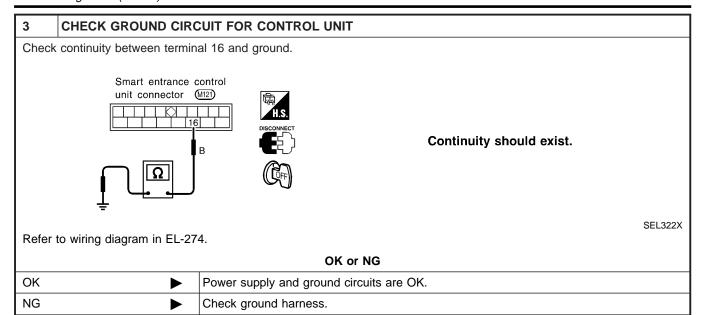

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

DOOR SWITCH CHECK

=NAEL0115S05

GI

MA

EM

LC

EC

FE

GL

MT

AT


TF

AX

SU

CHECK DOOR SWITCH INPUT SIGNAL

Check voltage between smart entrance control unit terminals 28, 29 or 40 and ground.

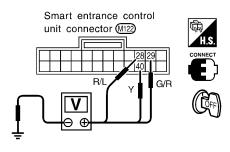

	Terminals		Condition	Valtage [V]
	(+)	(-)	Condition	Voltage [V]
Front LH	29	Ground	Open	0
door switch			Closed	Approx. 5
Front RH	40	Ground	Open	0
door switch	40		Closed	Approx. 5
Rear and back	28	Ground	Open	0
door switches		Ground	Closed	Approx. 5

SEL305XA


Refer to wiring diagram in EL-275.

OK or NG

ОК	>	Door switch is OK
NG	>	GO TO 2.

CHECK DOOR SWITCH

- 1. Disconnect door switch connector.
- 2. Check the following.
- Continuity between front door switch harness connector B9 (LH) or B68 (RH) terminals 1 and 2.
- Continuity between back door switch harness connector D208 terminals 1 and 2.
- Continuity between rear door switch harness connector B18 (LH) or B71 (RH) terminal 1 and ground.

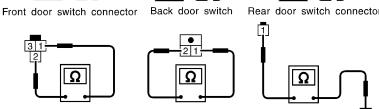

		Terminals	Condition	Continuity
	Front	1 - 2	Closed	No
	door switches	1 - 2	Open	Yes
or	Back door	1 - 2	Closed	No
	switch	1 - 2	Open	Yes
	Rear door	1 - Ground	Closed	No
	switches	i - Ground	Open	Yes

SEL215Y

OK or NG

OK >	Check the following. Door switches ground circuit (Front or back door) or rear door switches ground condition Harness for open or short between smart entrance control unit and door switch
NG ►	Replace door switch.

HA

BT


SC

SMART C/U - PREVIOUS

KEY SWITCH (INSERT) CHECK

=NAEL0115S07



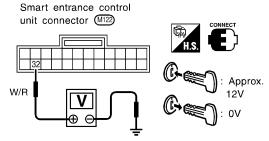

Voltage [V]:

Condition of key switch: Key is inserted.
Approx. 12

Condition of key switch: Key is removed.

0

SEL307X

Refer to wiring diagram in EL-274.

OK or NG

ОК	>	Key switch is OK.
NG	>	GO TO 2.

CHECK KEY SWITCH (INSERT) Check continuity between terminals 1 and 2. Key switch connector (E5) Continuity: Condition of key switch: Key is inserted. Condition of key switch: Key is removed. SEL308X OK or NG OK Check the following. • 7.5A fuse [No. 24, located in fuse block (J/B)] • Harness for open or short between key switch and fuse Harness for open or short between smart entrance control unit and key switch NG Replace key switch.

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)



=NAEL0115S10

, GI

MA

EM

LC

FE

GL

MT


TF

AX

SU

1 CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL

- 1. Disconnect smart entrance control unit connector.
- 2. Check continuity between control unit terminal 23 or 35 and ground.

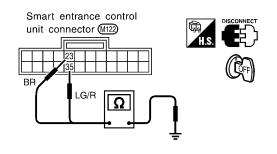

Terminals		Door lock/unlock switch (LH or RH) condition	Continuity
	23 - ground	Lock	Yes
23 -	25 - ground	N and Unlock	No
	35 - ground	Unlock	Yes
	33 - ground	N and Lock	No

SEL309X

Refer to wiring diagram in EL-274.

OK or NG


OK	>	Door lock/unlock switch is OK.
NG	>	GO TO 2.

2 CHECK DOOR LOCK/UNLOCK SWITCH

1. Disconnect door lock/unlock switch connector.

OK

- 2. Check continuity between each door lock/unlock switch terminals.
- Power window main switch (Door lock/unlock switch LH)

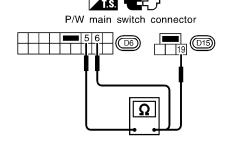

Condition	Terminals		
	5	19	6
Lock	\bigcirc		\bigcap
Ν	No continuity		
Unlock	$\overline{\bigcirc}$	9	
	•	•	

SEL310X

OK or NG

Check the following.

- Ground circuit for door lock/unlock switch
 - Harness for open or short between door lock/unlock switch and smart entrance control unit connector

NG Replace door lock/unlock switch.

BT

ST


HA


SC

 $\mathbb{D}X$

SMART C/U - PREVIOUS


FRONT LH DOOR UNLOCK SENSOR CHECK

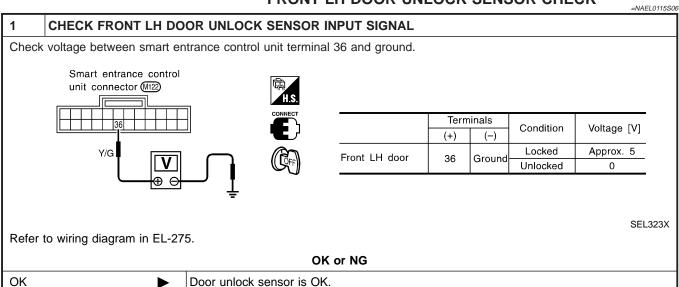


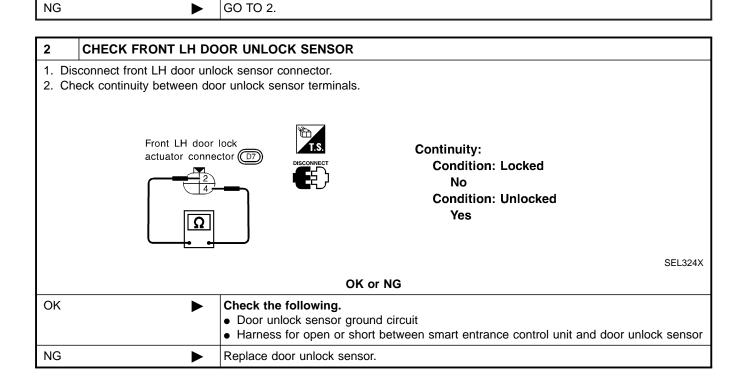


SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

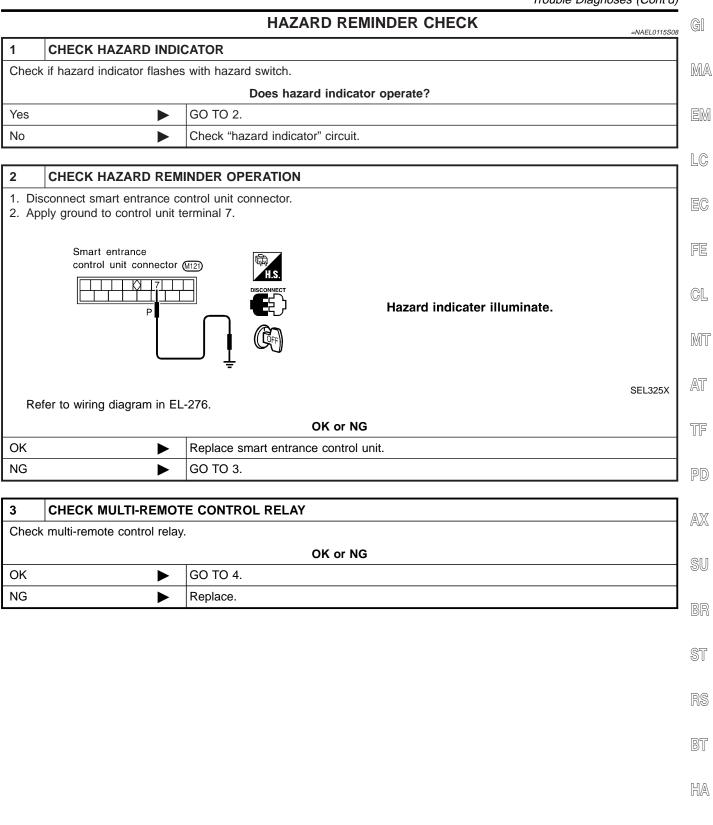


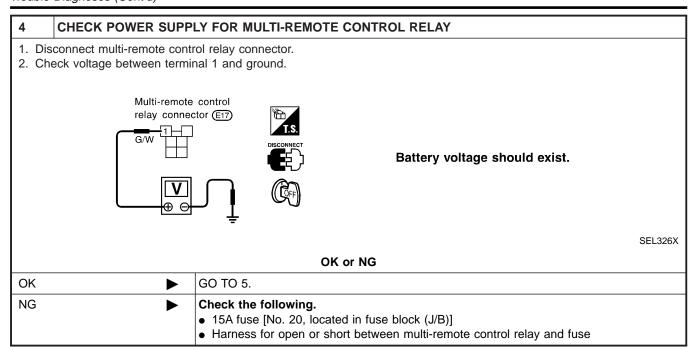

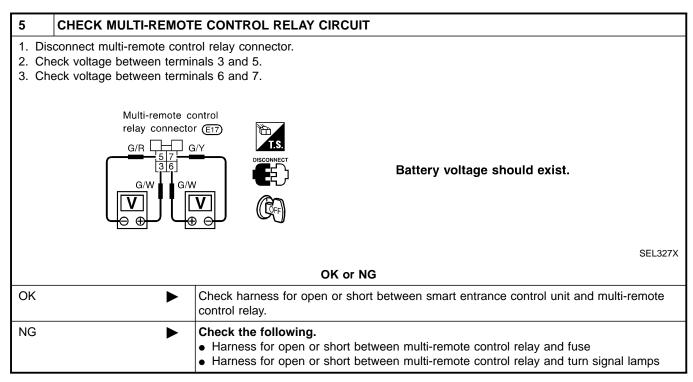

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

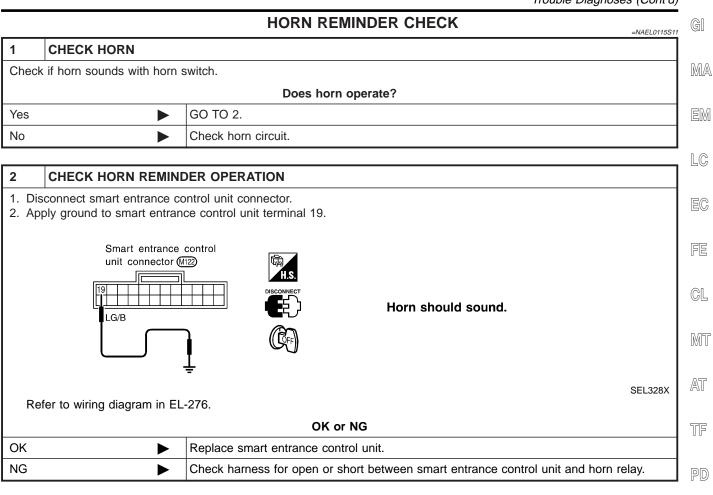

 $\mathbb{A}\mathbb{X}$

SU

ST


BT


HA

INTERIOR ROOM LAMP OPERATION CHECK

=NAEL0115S09

1	CHECK INTERIOR ROOM LAMP			
Check if the interior room lamp switch is in the "ON" position and the lamp illuminates.				
Does interior room lamp illuminate?				
Yes	•	GO TO 2.		
No	>	Check the following. • Harness for open or short between smart entrance control unit and interior room lamp • Interior room lamp		

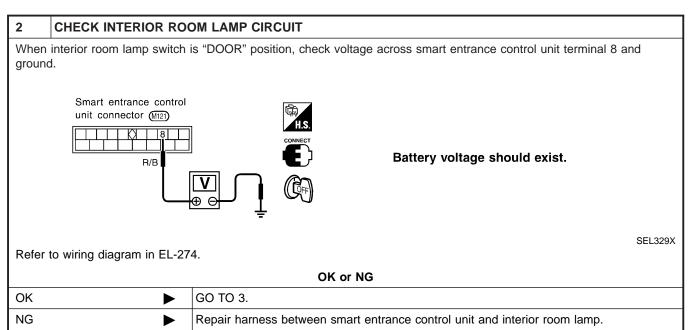

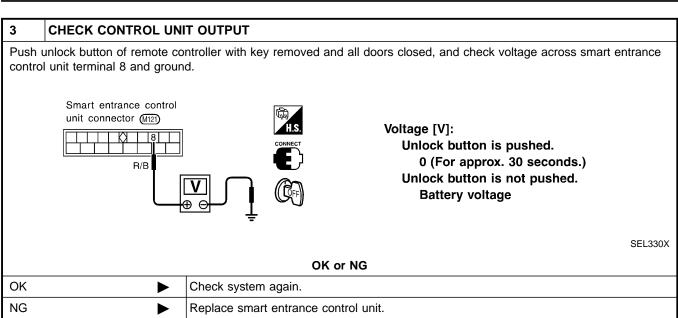

ID Code Entry Procedure

ID Code Entry Procedure


REMOTE CONTROLLER ID SET UP WITH CONSULT-II NOTE:

MA

GI

If a remote controller is lost, the ID code of the lost remote controller must be erased to prevent unauthorized use. When the ID code of a lost remote controller is not known, all controller ID codes should be erased. After all ID codes are erased, the ID codes of all remaining and/or new remote controllers must be re-registered.

LC

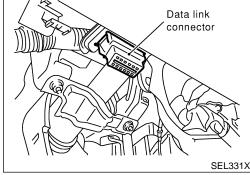

CONSULT-II

START

SUB MODE

PBR455D

NISSAN

Turn ignition switch "OFF".

EG

Connect CONSULT-II to the data link connector.

GL

MIT

AT

TF

AX

SU


BR

ST

BT

HA

SC

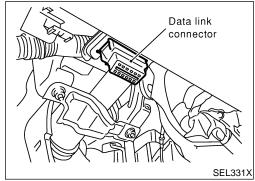

Turn ignition switch "ON".

Touch "START".

SELECT SYSTEM **ENGINE** A/T AIR BAG ABS ALL MODE 4WD **SMART ENTRANCE** SEL332X Touch "SMART ENTRANCE".


SELECT TEST ITEM MULTI REMOTE ENT SEL333X Touch "MULTI REMOTE ENT".

SMART C/U - PREVIOUS

ID Code Entry Procedure (Cont'd)

SELECT DIAG MODE	
WORK SUPPORT	
	SEL334X

7. Touch "WORK SUPPORT".

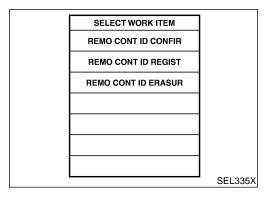

- 8. The items are shown on the figure at left can be set up.
- "REMO CONT ID CONFIR"
 Use this mode to confirm if a remote controller ID code is registered or not.
- "REMO CONT ID REGIST"
 Use this mode to register a remote controller ID code.

NOTE:

Register the ID code when remote controller or smart entrance control unit is replaced, or when additional remote controller is required.

"REMO CONT ID ERASUR"
 Use this mode to erase a remote controller ID code.


SMART C/U - PREVIOUS

ID Code Entry Procedure (Cont'd)

REMOTE CONTROLLER ID SET UP WITHOUT CONSULT-II

NAEL0222S03

GI

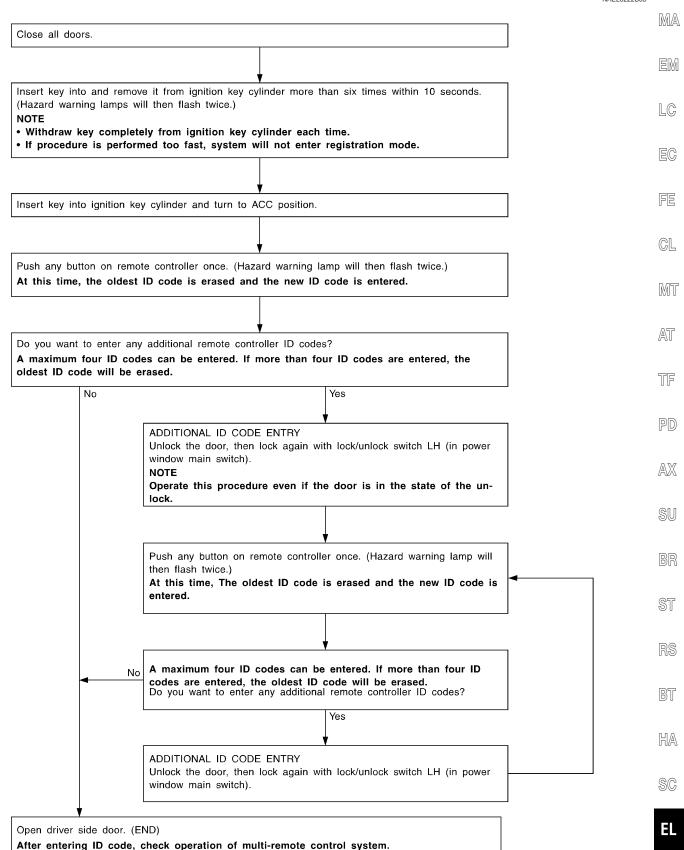


SMART C/U - PREVIOUS

NOTE:

- If a remote controller is lost, the ID code of the lost remote controller must be erased to prevent unauthorized use. A specific ID code can be erased with CONSULT-II. However, when the ID code of a lost remote controller is not known, all controller ID codes should be erased. After all ID codes are erased, the ID codes of all remaining and/or new remote controllers must be re-registered.
 - To erase all ID codes in memory, register one ID code (remote controller) four times. After all ID codes are erased, the ID codes of all remaining and/or new remote controllers must be re-registered.
- When registering an additional remote controller, the existing ID codes in memory may or may not be erased. If four ID codes are stored in memory, when an additional code is registered, only the oldest code is erased. If less than four ID codes are stored in memory, when an additional ID code is registered, the new ID code is added and no ID codes are erased.
- If you need to activate more than two additional new remote controllers, repeat the procedure "Additional ID code entry" for each new remote controller.
- Entry of maximum four ID codes is allowed. When more than four ID codes are entered, the oldest ID code will be erased.
- Even if the same ID code that is already in the memory is input, the same ID code can be entered. The code is counted as an additional code.

SMART C/U - PREVIOUS

Remote Controller Battery Replacement

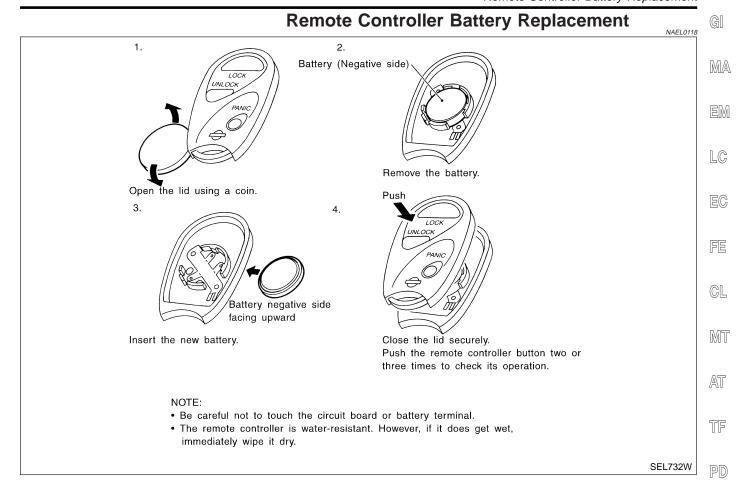

[DX

AX

SU

BR

ST

RS


BT


HA

SC

Component Parts and Harness Connector Location

NAEL0119

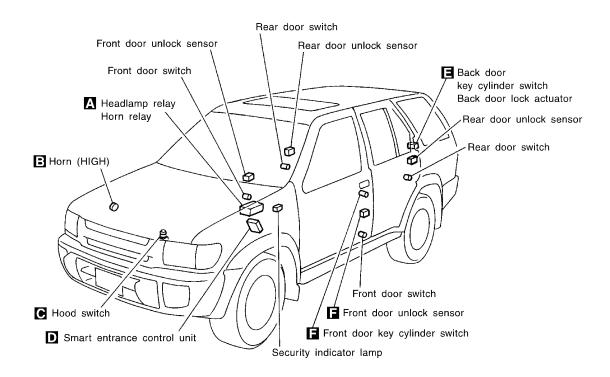

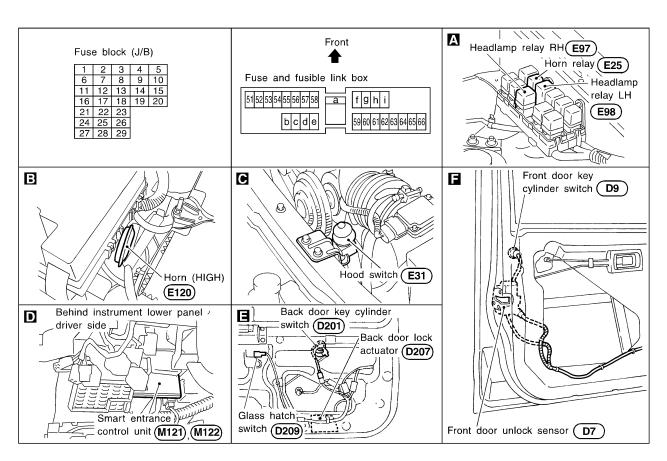

SMART C/U - PREVIOUS

System Description

System Description


DESCRIPTION

1. Operation Flow

GI

NAFL0120S01

NAEL0120

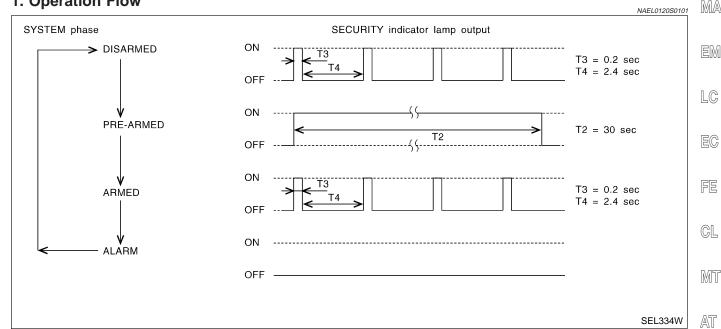

2. Setting The Vehicle Security System

Initial condition

1) Close all doors.

2) Close hood and glass hatch.

Disarmed phase

When the vehicle security system is in the disarmed phase, the security indicator lamp blinks every 2.6 sec-

Pre-armed phase and armed phase

The vehicle security system turns into the "pre-armed" phase when hood, glass hatch and all doors are closed and the doors are locked by key or multi-remote controller. (The security indicator lamp illuminates.) After about 30 seconds, the system automatically shifts into the "armed" phase (the system is set). (The security indicator lamp blinks every 2.6 seconds.)

3. Canceling The Set Vehicle Security System

When the following 1) or 2) operation is performed, the armed phase is canceled.

- 1) Unlock the doors with the key or multi-remote controller.
- 2) Open the glass hatch with the key.

4. Activating The Alarm Operation of The Vehicle Security System

Make sure the system is in the armed phase. (The security indicator lamp blinks every 2.6 seconds.) When any of the following operations is performed, the system sounds the horns and flashes the headlamps for about 50 seconds.

- Engine hood, glass hatch or any door is opened before unlocking door with key or multi-remote control-
- 2) Door is unlocked without using key or multi-remote controller.
- Disconnecting and connecting the battery connector before canceling armed phase.

POWER SUPPLY AND GROUND

Power is supplied at all times

- through 7.5A fuse [No. 24, located in the fuse block (J/B)]
- to security indicator lamp terminal 1, and
- to smart entrance control unit terminal 10.

With the ignition switch in the ON or START position, power is supplied

TF

PD

AX

NAEL0120S0103

BT

HA

SC

NAEL0120S07

VEHICLE SECURITY (THEFT WARNING) SYSTEM SMART C/U - PREVIOUS

System Description (Cont'd)

- through 7.5A fuse [No. 11, located in the fuse block (J/B)]
- to smart entrance control unit terminal 33.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 10, located in the fuse block (J/B)]
- to smart entrance control unit terminal 21.

Ground is supplied

- to smart entrance control unit terminal 16
- through body grounds M77 and M111.

INITIAL CONDITION TO ACTIVATE THE SYSTEM

NAEL0120S02

The operation of the vehicle security system is controlled by the doors, hood and glass hatch.

To activate the vehicle security system, the smart entrance control unit must receive signals indicating the doors, hood and glass hatch are closed and the doors are locked.

When a door is open, smart entrance control unit terminal 28, 29 or 40 receives a ground signal from each door switch.

When a door is unlocked, smart entrance control unit terminal 26, 36 or 37 receives a ground signal from terminal 4 of each door unlock sensor or terminal 1 of back door unlock sensor.

When the hood is open, smart entrance control unit terminal 27 receives a ground signal

- from terminal 1 of the hood switch
- through body grounds E13 and E41.

When the glass hatch is open, smart entrance control unit terminal 38 receives a ground signal

- from terminal 1 of the glass hatch switch
- through body grounds D210, B11 and B22.

When the doors are locked with key or multi-remote controller and none of the described conditions exist, the vehicle security system will automatically shift to armed mode.

VEHICLE SECURITY SYSTEM ACTIVATION (WITH KEY OR REMOTE CONTROLLER USED TO LOCK DOORS)

If the key is used to lock doors, terminal 41 receives a ground signal

NAEL0120S03

- from terminal 3 of the key cylinder switch LH
- through back grounds M77 and M111
- from terminal 1 of the back door key cylinder switch
- through body grounds B11, B22 and D210.

If this signal or lock signal from remote controller is received by the smart entrance control unit, the vehicle security system will activate automatically.

Once the vehicle security system has been activated, smart entrance control unit terminal 31 supplies ground to terminal 2 of the security indicator lamp.

The security indicator lamp will illuminate for approximately 30 seconds and then blink.

Now the vehicle security system is in armed phase.

VEHICLE SECURITY SYSTEM ALARM OPERATION

NAEL0120S04

The vehicle security system is triggered by

- opening a door
- opening the hood or the glass hatch
- unlocking door without using the key or multi-remote controller.

Once the vehicle security system is in armed phase, if the smart entrance control unit receives a ground signal at terminal 26, 36, 37 (door unlock sensor), 28, 29, 40 (door switch), 38 (glass hatch switch) or 27 (hood switch), the vehicle security system will be triggered. The headlamps flash and the horn sounds intermittently. Power is supplied at all times

- through 7.5A fuse (No. 52, located in fuse and fusible link box)
- to horn relay terminals 1 and 3 and
- through 10A fuse (No. 54, located in fuse and fusible link box)
- to horn relay terminal 6.

When the vehicle security system is triggered, ground is supplied intermittently

- from terminal 4 of the smart entrance control unit
- to headlamp relay LH and RH terminal 2 and

SMART C/U - PREVIOUS

System Description (Cont'd)

- from terminal 19 of the smart entrance control unit
- to horn relay terminal 2.

The headlamps flash and the horn sounds intermittently.

The alarm automatically turns off after 50 seconds but will reactivate if the vehicle is tampered with again.

VEHICLE SECURITY SYSTEM DEACTIVATION

To deactivate the vehicle security system, a door, the back door or the glass hatch must be unlocked with the key or remote controller.

When the key is used to unlock the door, smart entrance control unit terminal 30 receives a ground signal

- from terminal 1 of the LH key cylinder switch
- from terminal 2 of the back door key cylinder switch.

When the key is used to open the glass hatch, smart entrance control unit terminal 42 receives a ground signal from terminal 3 of the back door key cylinder switch.

When the smart entrance control unit receives either one of these signals or unlock signal from remote controller, the vehicle security system is deactivated. (Disarmed phase)

PANIC ALARM OPERATION

Multi-remote control system may or may not operate vehicle security system (horn and headlamps) as required.

When the multi-remote control system is triggered, ground is supplied intermittently.

- from smart entrance control unit terminal 4
- to headlamp relay LH and RH terminal 2 and
- from terminal 19 of the smart entrance control unit
- to horn relay terminal 2.

The headlamp flashes and the horn sounds intermittently.

The alarm automatically turns off after 30 seconds or when smart entrance control unit receives any signal from multi-remote controller.

MT

GL

GI

MA

LC

AT

AX

ST


RS

BT

HA


SC

EL

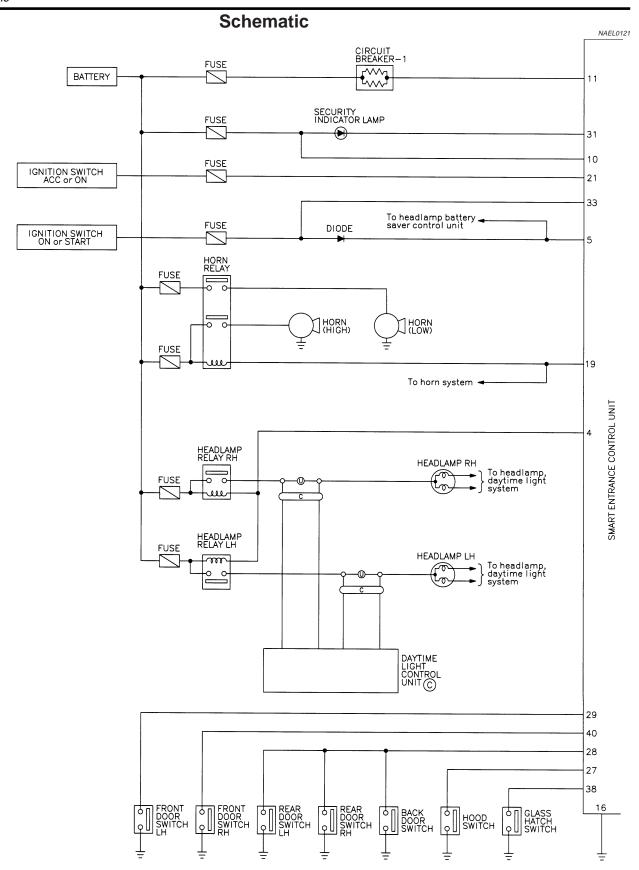

SMART C/U - PREVIOUS

Schematic (Cont'd)

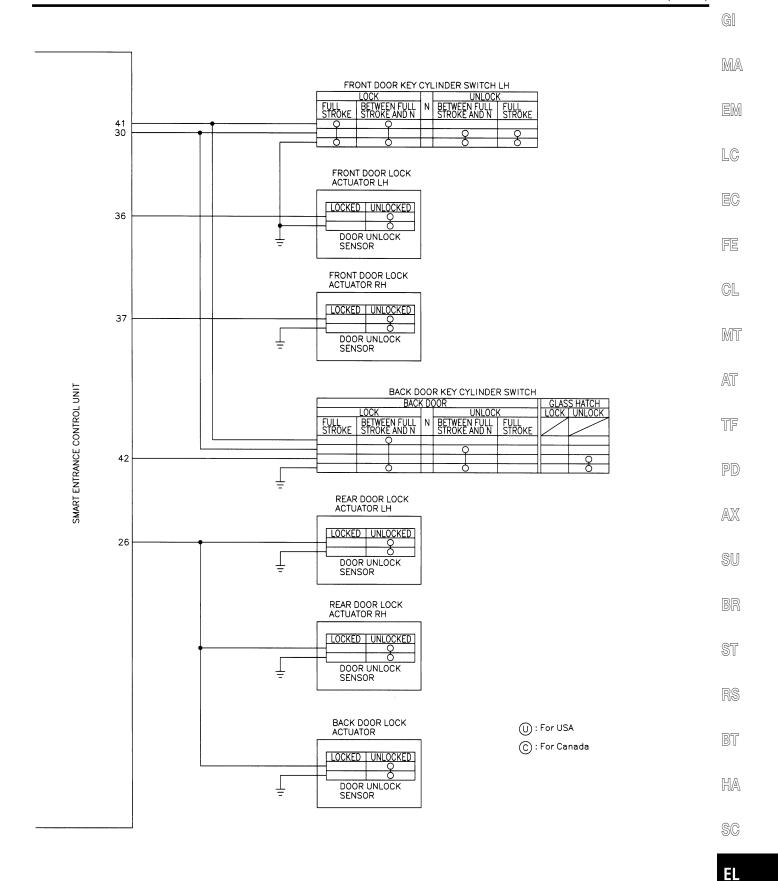


MEL055M

Wiring Diagram — VEHSEC —

FIG. 1


NAEL0122S01

NAEL0122

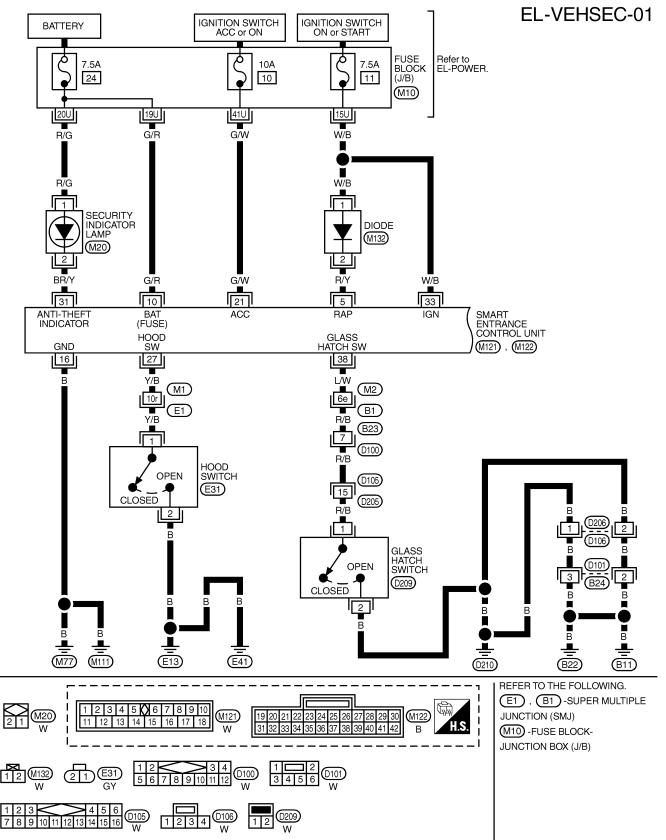

SMART C/U - PREVIOUS

Wiring Diagram — VEHSEC — (Cont'd)

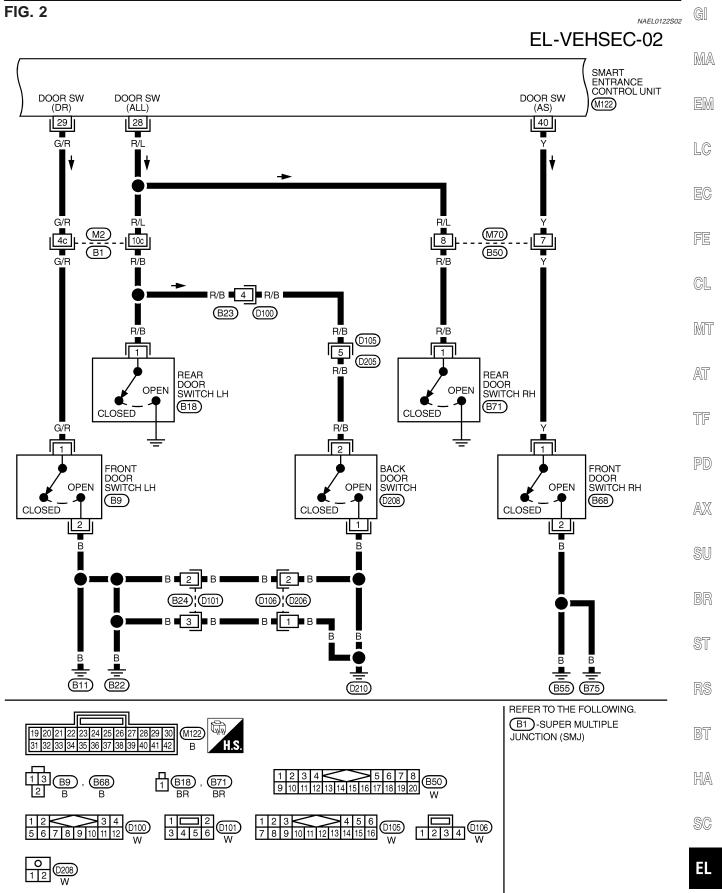


MEL379N

FIG. 3 NAFL 0122S03 **EL-VEHSEC-03 SMART** ENTRANCE CONTROL UNIT CONDITION SW (RR) CONDITION SW (DR) CONDITION SW (AS) (M122) 36 37 26 Y/G Y/R Y/L (M6) 10 (D4) Y/G Y/R Y/R Y/R (M67) (M70) 4 **FRONT** DOOR (D33) (B1) (B50) LOCK ACTUATOR Y/R UN-LOCKED LH (DOOR UNLOCK SENSOR) Y/R 2 LOCKED **B10** (B25) (B70) 2 (D7) Y/P (D102) (D70) (D50) **FRONT** DOOR LOCK ACTUATOR (D105) UN-LOCKED 14 Y/R RH (DOOR UNLOCK D205 LOCKED Y/R SENSOR) Y/R 2 REAR DOOR LOCK ACTUATOR (D37) 3 4_ REAR DOOR BACK DOOR LOCK ACTUATOR LOCK ACTUATOR UN-LOCKED UN-LOCKED UN-LOCKED RH (DOOR UNLOCK SENSOR) (DOOR UNLOCK SENSOR) (DOOR UNLOCK SENSOR) LOCKED LOCKED LOCKED \bigcirc 3 2 (D54) 4 (D74) 2 (M68) (B10) 2 B**■** 2 ■B **D70** 6 (B24) (D101) (D106) (D206) B**■** 3 В (D210) (B11) (M77) (B22) (B75) REFER TO THE FOLLOWING. (M122) (B1) - SUPER MULTIPLE 9 10 11 12 13 14 15 16 17 18 19 20 JUNCTION (SMJ) D4 , D50 , D70 W , D33 1 2 3 4 D106 W

MEL457N

SMART C/U - PREVIOUS


Wiring Diagram — VEHSEC — (Cont'd)

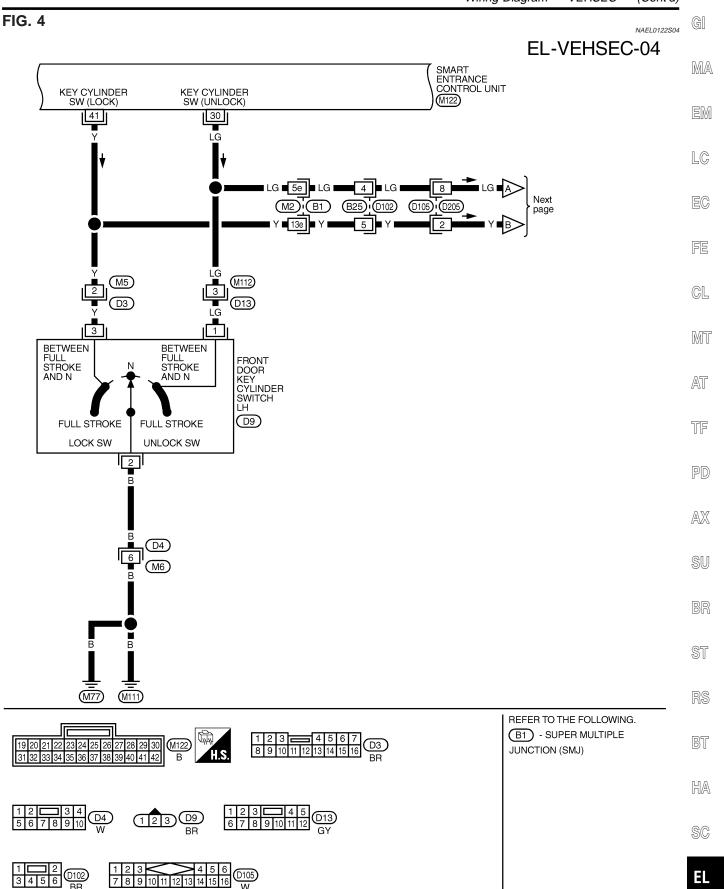

MEL381N

FIG. 5 NAFL 0122S05 **EL-VEHSEC-05** BATTERY Refer to EL-POWER. 10A 52 54 LG G/B 3 ~ W HORN RELAY (E118) 5 LG/B HORN (LOW) **-**1 (E36) LG/B 6k \blacksquare HORN (HIGH) M1) LG/B (E120) M1**E**1 PU/W 5k PU/W LG/B PU/W 19 SMART ENTRANCE CONTROL UNIT HORN CHIRP PANIC ALARM OUTPUT GLASS HATCH KEY M121), M122) **UNLOCK SW** 42 Preceding B1 B25 (D102) (D105) G/B ■ 3h ■ G/B ■ 6 ■ G/B ■ G/B 3 B 2 B B B 2 ■ B ■ BETWEEN FULL STROKE BETWEEN FULL BACK DOOR KEY (D206) (D106) LOCK (D101) i (B24) STROKE AND N CYLINDER SWITCH UNLOCK AND N D201) GLASS FULL STROKE | FULL STROKE HATCH LOCK SW **UNLOCK SW** BACK DOOR REFER TO THE FOLLOWING. E1 , B1 -SUPER MULTIPLE JUNCTION (SMJ) 19 20 21 22 23 24 25 26 27 28 29 30 (M121) 1 E36 , E120 B 1 2 3 4 W 6 5 4 3 2 1 W (D105) W MEL382N


SMART C/U - PREVIOUS

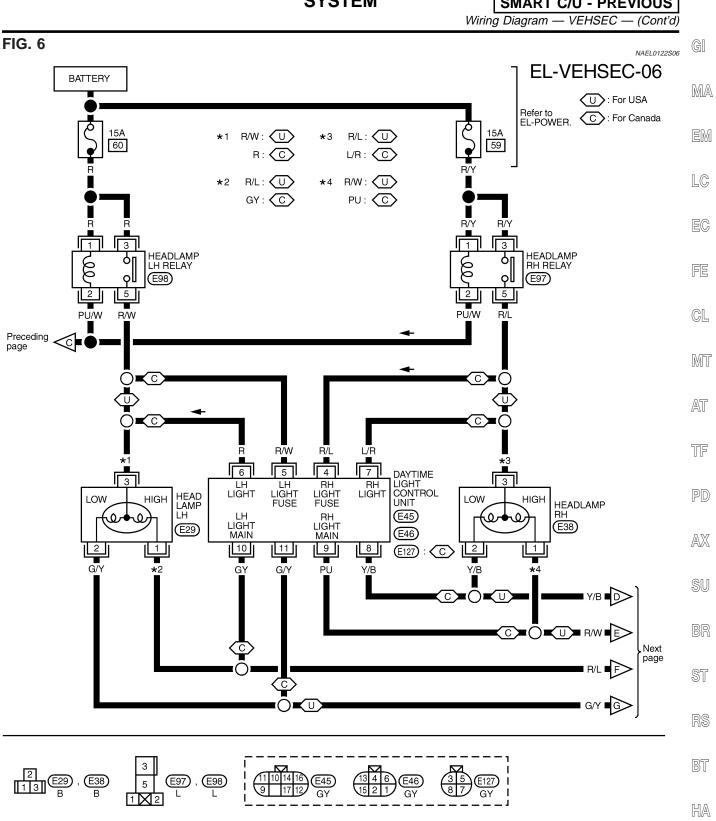


MEL383N

SC

EL

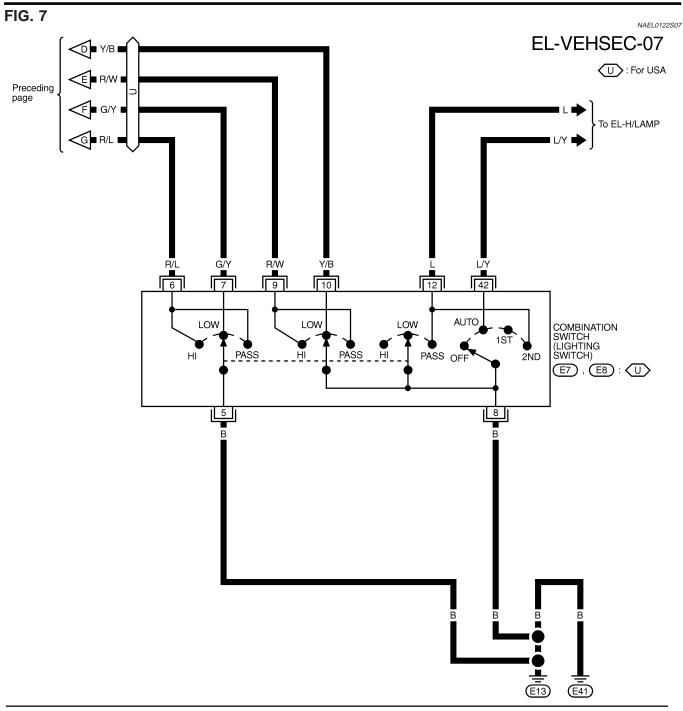

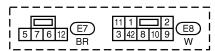

SMART C/U - PREVIOUS


Trouble Diagnoses



NAEL0123

The system operation is canceled by turning ignition switch to "ACC" at any step between START and ARMED in the following flow chart.

MA

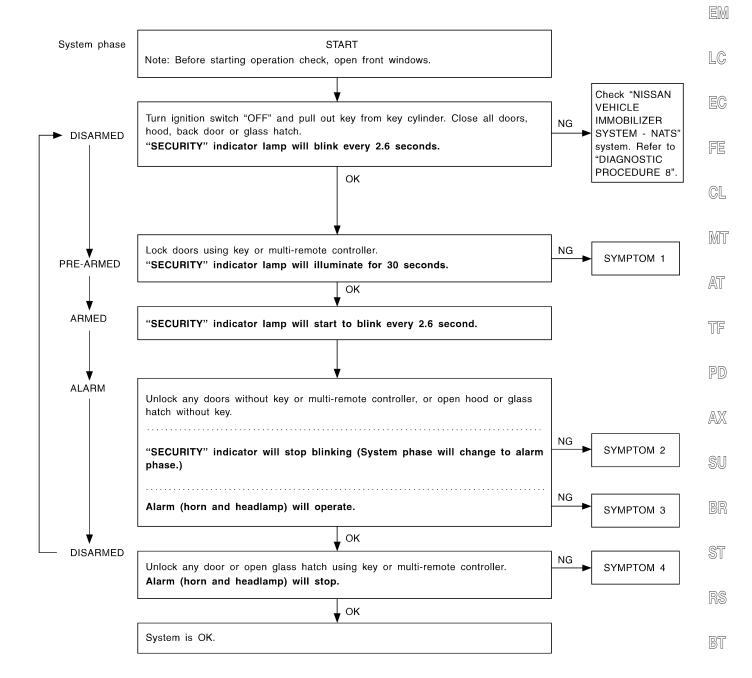

SEL733WC

After performing preliminary check, go to symptom chart in next page.

SC

L

 \mathbb{D}

Trouble Diagnoses (Cont'd)

SMART C/U - PREVIOUS

SYMPTOM CHART NAEL0123SE						NAEL0123S02						
REFE	ERENCE	PAGE (EL-)	307	309	310	313	314	315	316	317	319	277
SYMI	PTOM		PRELIMINARY CHECK	POWER SUPPLY AND GROUND CIRCUIT CHECK	DOOR, HOOD AND GLASS HATCH SWITCH CHECK	SECURITY INDICATOR LAMP CHECK	DOOR UNLOCK SENSOR CHECK	DOOR KEY CYLINDER SWITCH CHECK	BACK DOOR KEY CYLINDER SWITCH CHECK	VEHICLE SECURITY HORN ALARM CHECK	VEHICLE SECURITY HEADLAMP ALARM CHECK	Check "MULTI-REMOTE CONTROL" system.
		security indicator t illuminate for 30	Х	Х	Х	Х						
1	irity :: ot	All items	Х	X	Х		Х					
•	Vehicle security system cannot be set by	Door outside key	Х					Х				
		Back door key	Х						Х			
	sy.	Multi-remote control	Х									X
	s not	Any door is opened.	Х		Х							
2	*1 Vehicle security system does not alarm when	Any door is unlocked without using key or multi-remote controller	Х				X					
	curity s not	All function	Х		Х		Х					
3	Vehicle security alarm does not activate.	Horn alarm	Х							Х		
	Vehi aları	Headlamp alarm	Х								Х	
	urity of be	Door outside key	Х					Х				
4	Vehicle security system cannot be canceled by	Back door key	Х						Х			
	Vehic system cance	Multi-remote control	Х									Х

X : Applicable


Before starting trouble diagnoses above, perform preliminary check, EL-307.


Symptom numbers in the symptom chart correspond with those of preliminary check.

^{*1:} Make sure the system is in the armed phase.

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

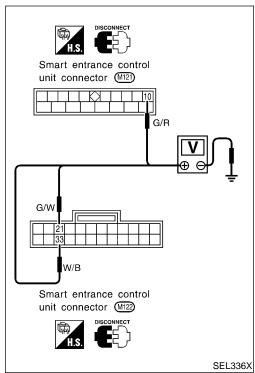

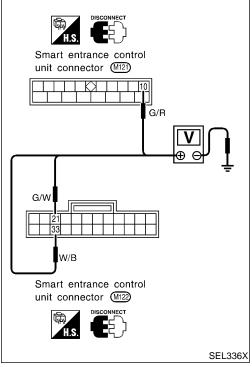

Smart entrance control unit connector (M121) SEL013W

POWER SUPPLY AND GROUND CIRCUIT CHECK NAEL0123S03 **Power Supply Circuit Check** NAEL0123S0301

Term	inals	lgn	ition switch posi	tion	•
(+)	(-)	OFF	ACC	ON	_
10	Ground	Battery voltage	Battery voltage	Battery voltage	_
21	Ground	0V	Battery voltage	Battery voltage	_
33	Ground	0V	0V	Battery voltage	_

If NG, check fhe following.

- 7.5A fuse [No. 11, located in fuse block (J/B)]
- 7.5A fuse [No. 24, located in fuse block (J/B)]
- 10A fuse [No. 10, located in fuse block (J/B)]
- Harness for open or short between smart entrance control unit and fuse.

Ground Circuit Check

	71712207200002
Terminals	Continuity
16 - Ground	Yes

MA

LC

EG

FE

GL

MT

AT

NAFI 0123S0302

TF

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

[DX

SMART C/U - PREVIOUS


DOOR, HOOD AND GLASS HATCH SWITCH CHECK =NAEL0123S04

Door Switch Check

NAEL 01235040

1 CHECK DOOR SWITCH INPUT SIGNAL

Check voltage between smart entrance control unit terminals 28, 29 or 40 and ground.

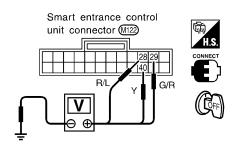

	Terminals		Condition	Voltage [V]
	(+)	(-)	Condition	voltage [v]
Front LH	29	Ground	Open	0
door switch	witch 29 Ground		Closed	Approx. 5
Front RH	40	0	Open	0
door switch	40	Ground	Closed	Approx. 5
Rear and back	28	Ground	Open	0
door switches	20	Ground	Closed	Approx. 5

SEL305XA


Refer to wiring diagram in EL-301.

OK or NG

OK •	Door switch is OK, and go to hood switch check.
NG •	GO TO 2.

2 CHECK DOOR SWITCH

- 1. Disconnect door switch connector.
- 2. Check the following.
- Continuity between front door switch harness connector B9 (LH) or B68 (RH) terminals 1 and 2.
- Continuity between back door switch harness connector D208 terminals 1 and 2.
- Continuity between rear door switch harness connector B18 (LH) or B71 (RH) terminal 1 and ground.

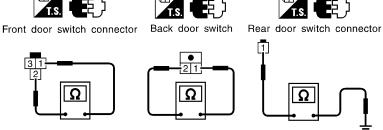


		Terminals	Condition	Continuity
	Front	1 - 2	Closed	No
	door switches	1 - 2	Open	Yes
	Back door	1 - 2	Closed	No
switch	1 - 2	Open	Yes	
	Rear door	1 - Ground	Closed	No
	switches	i - Ground	Open	Yes


SEL215Y


OK •	 Check the following. Door switches ground circuit (Front or back door) or rear door switches ground condition Harness for open or short between smart entrance control unit and door switch
NG •	Replace door switch.

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

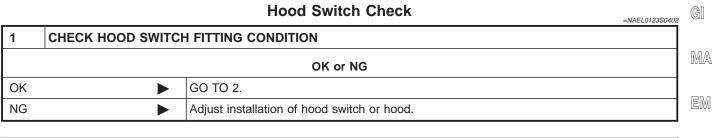

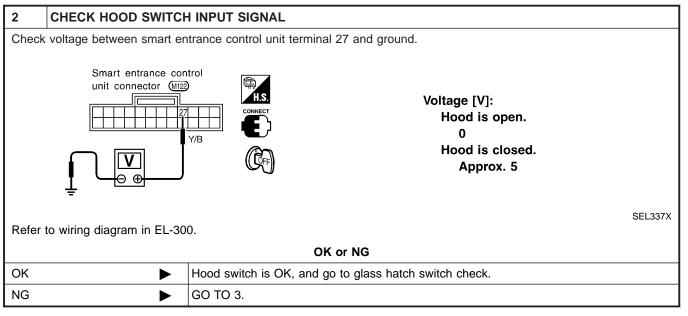

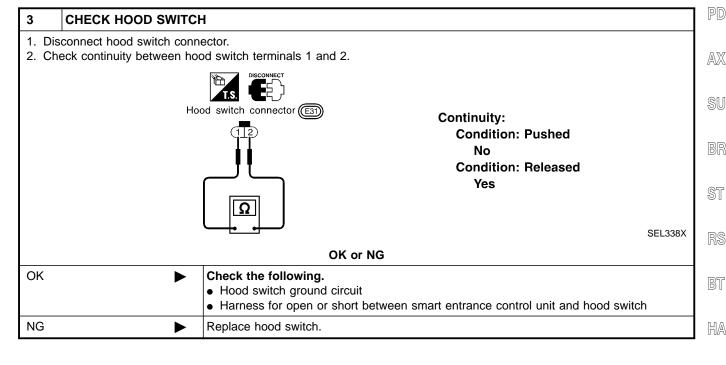

SC

FE

GL

MT

AT


TF


ĒĹ

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)


Glass Hatch Switch Check

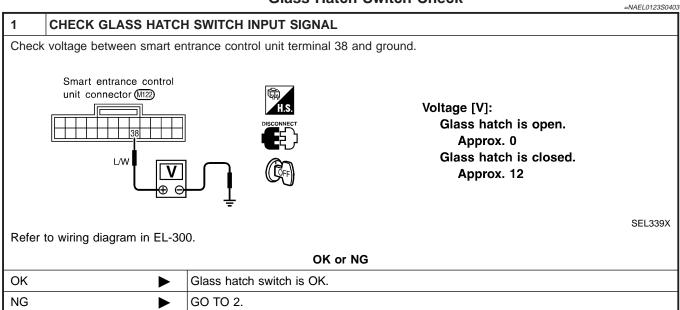

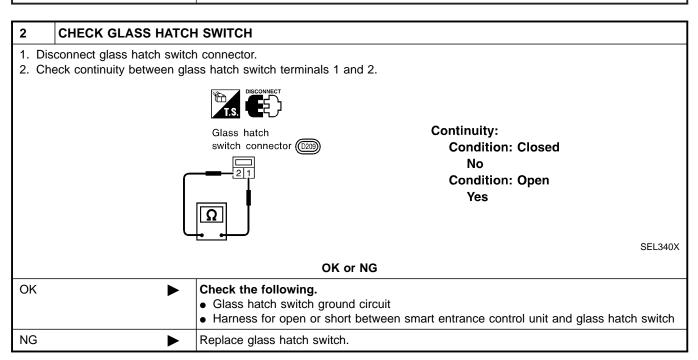

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

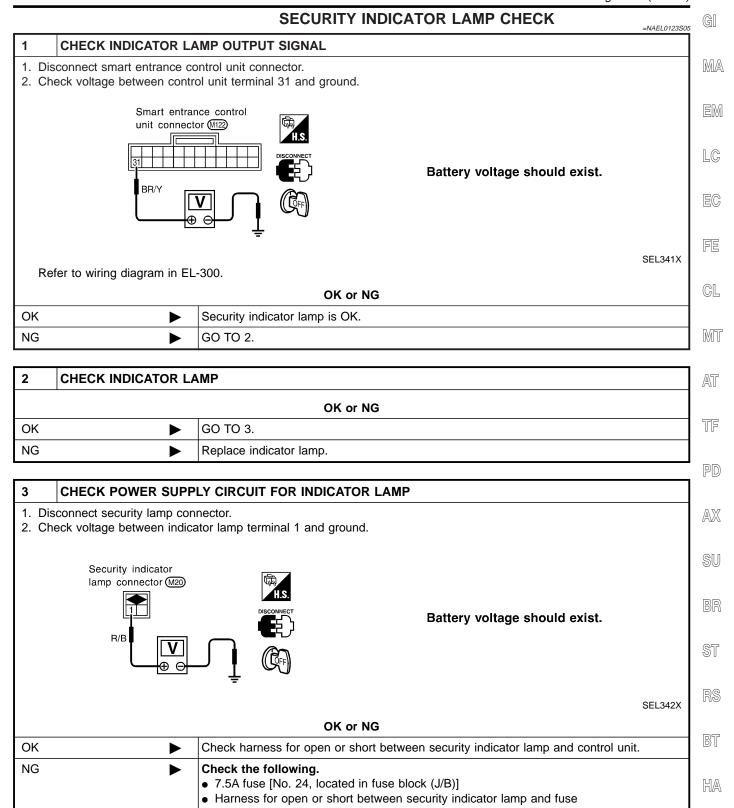

_..

SC

SMART C/U - PREVIOUS


Trouble Diagnoses (Cont'd)

DOOR UNLOCK SENSOR CHECK

=NAEL0123S06

CHECK DOOR UNLOCK SENSOR INPUT SIGNAL

Check voltage between smart entrance control unit terminals 26, 36 or 37 and ground.

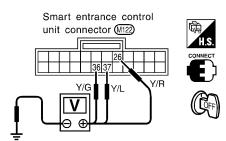

	Term	ninals	Condition	Voltage [V]	
	(+)	(-)	Condition	voitage [v]	
Front LH door	36	Ground	Locked	Approx. 5	
FIGHT LIT GOOD	30		Unlocked	0	
Front RH door	37	Ground	Locked	Approx. 5	
FIOIL NE GOO!			Unlocked	0	
Rear and back	26	Ground	Locked	Approx. 5	
door			Unlocked	0	

SEL343X


Refer to wiring diagram in EL-304.

OK or NG

ОК	>	Door unlock sensor is OK.
NG	>	GO TO 2.

CHECK DOOR UNLOCK SENSOR

- 1. Disconnect door unlock sensor connector.
- 2. Check continuity between door unlock sensor terminals.

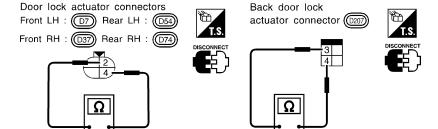

Continuity:

Condition: Locked

No

Condition: Unlocked

Yes


SEL344X

OK or NG

OK •	 Check the following. Door unlock sensor ground circuit Harness for open or short between smart entrance control unit and door unlock sensor
NG ►	Replace door unlock sensor.

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

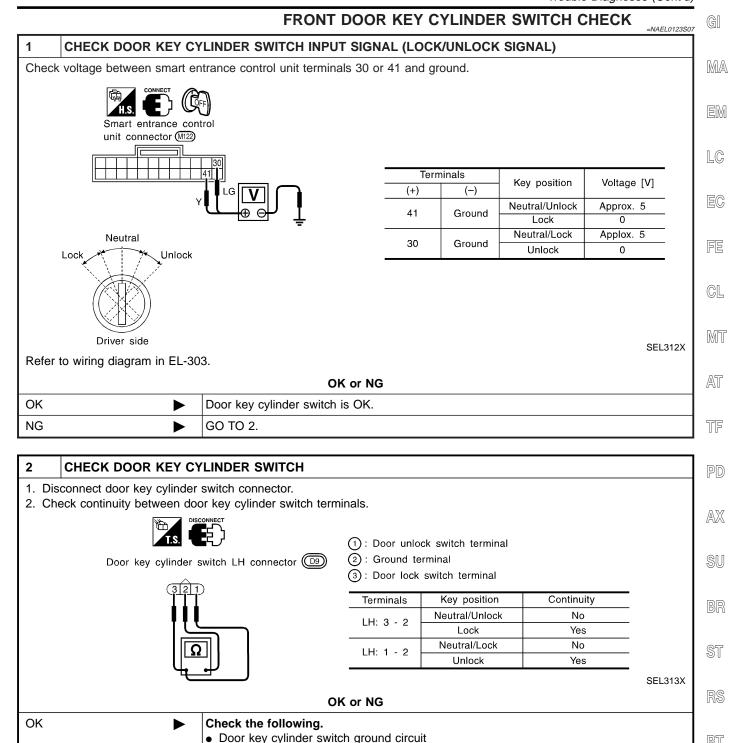

SC

HA

ŧL

switch


Replace door key cylinder switch.

NG


Harness for open or short between smart entrance control unit and door key cylinder

OK

BACK DOOR KEY CYLINDER SWITCH CHECK

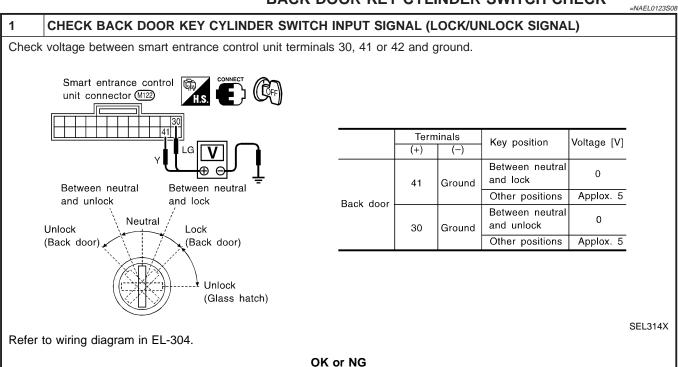


Back door key cylinder switch is OK.

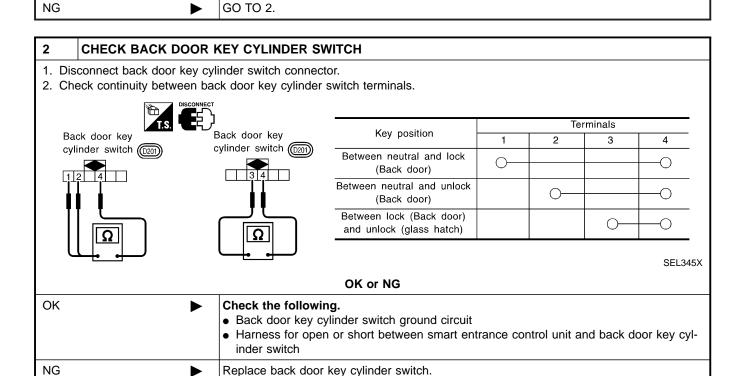

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

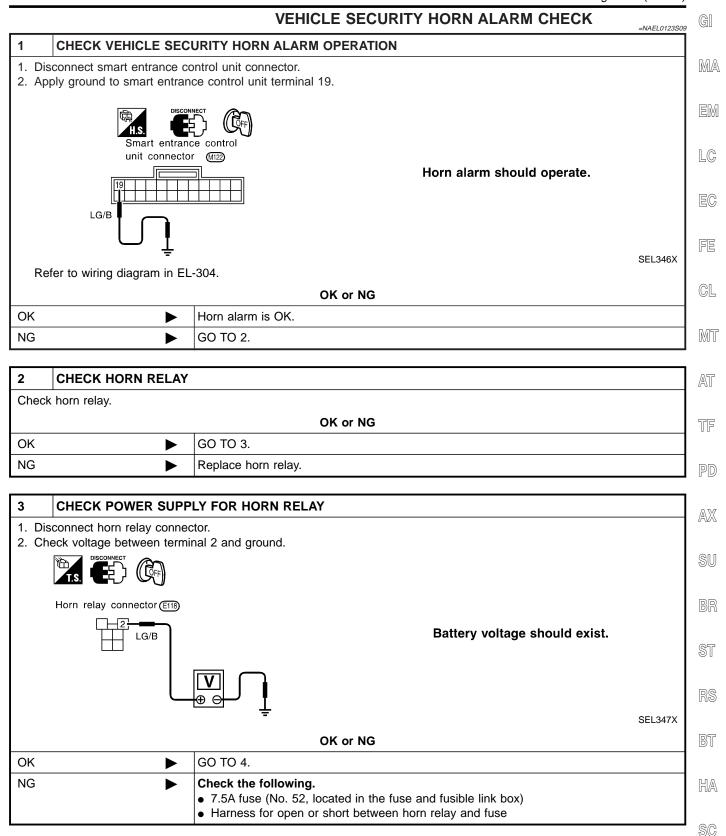

Ц

VEHICLE SECURITY (THEFT WARNING) SYSTEM SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

4	CHECK HORN RELAY CIRCUIT							
1. Di	Disconnect horn relay connector.							
2. Check voltage between terminals 3 and 5.								
3. Check voltage between terminals 6 and 7.								
	DISCONNECT COFF							
Horn relay connector (£118)								
	Battery voltage should exist.							
	SELS	348X						
OK or NG								
OK	► Check harness for open or short between horn relay and smart entrance control unit.	► Check harness for open or short between horn relay and smart entrance control unit.						
NG	Check harness for open or short.							

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

G[

LC

EC

GL

MT

AT

TF

VEHICLE SECURITY HEADLAMP ALARM CHECK

CHECK VEHICLE SECURITY HEADLAMP ALARM OPERATION MA 1. Disconnect smart entrance control unit connector. 2. Apply ground to smart entrance control unit terminal 4. Smart entrance control unit connector (M121) Headlamp alarm should operate. PU/W SEL570X Refer to wiring diagram in EL-305. OK or NG OK Headlamp alarm is OK. NG GO TO 2.

2	CHECK HEADLAMP OPERATION						
	Does headlamp come on when turning lighting switch "ON"?						
Yes	>	Check harness for open or short between headlamp relay and smart entrance control unit.					
No	>	Check headlamp system. Refer to "HEADLAMP".					

 $\mathbb{A}\mathbb{X}$

PD

SU

BR

ST

RS

BT

HA

Description

SMART ENTRANCE CONTROL UNIT

Description

The following systems are controlled by the smart entrance control unit.

- Warning chime
- Rear window defogger and door mirror defogger timer
- Power door lock
- Multi-remote control system
- Vehicle security system
- Interior lamp timer
- Electric sunroof and power window timer
- Headlamp battery saver
- Battery saver

For detailed description and wiring diagrams, refer to the relevant pages for the each system. The smart entrance control unit receives data from the switches and sensors to control their corresponding system relays and actuators.

INPUT/OUTPUT

NAEL0124

System	Input	Output
Power door lock	Door lock and unlock switch LH and RH Key switch (Insert) Door switches Door key cylinder switches	Door lock actuator
Multi-remote control	Key switch (Insert) Ignition switch (ACC) Door switches Front door unlock sensor LH Door lock and unlock switch LH Remote controller signal	Horn relay Headlamp relay (LH and RH) Interior lamp Multi-remote control relay Door lock actuator
Warning chime	Key switch (Insert) Ignition switch (ON) Lighting switch (1st) Seat belt switch Front door switch LH	Warning chime (located in smart entrance control unit)
Rear window defogger and door mirror defogger timer	Ignition switch (ON) Rear window defogger switch	Rear window defogger relay
Vehicle security	Ignition switch (ACC, ON) Door switches Hood switch Glass hatch switch Door key cylinder switches (lock/unlock) Door unlock sensores	Horn relay Headlamp relay (LH and RH) Security indicator
Interior lamp timer	Door switches Front door unlock sensor LH Ignition switch (ON) Key switch (Insert)	Interior lamp
Electric sunroof and power window timer	Front door switches Ignition switch (ON)	Power window relay
Headlamp battery saver timer	Front door switches Ignition switch (ON)	Headlamp battery saver control unit
Battery saver	Ignition switch (ON) Door switches Driver's door unlock sensor Key switch (Insert)	Interior lamp Luggage room lamp Spot lamp Vanity mirror illumination lamp

SMART ENTRANCE CONTROL UNIT

SMART C/U - PREVIOUS

Description (Cont'd)

BATTERY SAVER

The lamp turns off automatically when the interior lamp, luggage room lamp, spot lamp or/and vanity mirror illumination is illuminated with the ignition key in the OFF position if the lamp. illumination is illuminated with the ignition key in the OFF position, if the lamp remains lit by the door switch open signal or if the lamp switch is in the ON position for more than 10 minutes. After lamps turn off by the battery saver system, the lamps illuminate again when:

MA

- driver's door is locked or unlocked,
- door is opened or closed,
- key is inserted in ignition key cylinder.

LC

EG

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

ST


BT

HA

SC


EL

[DX

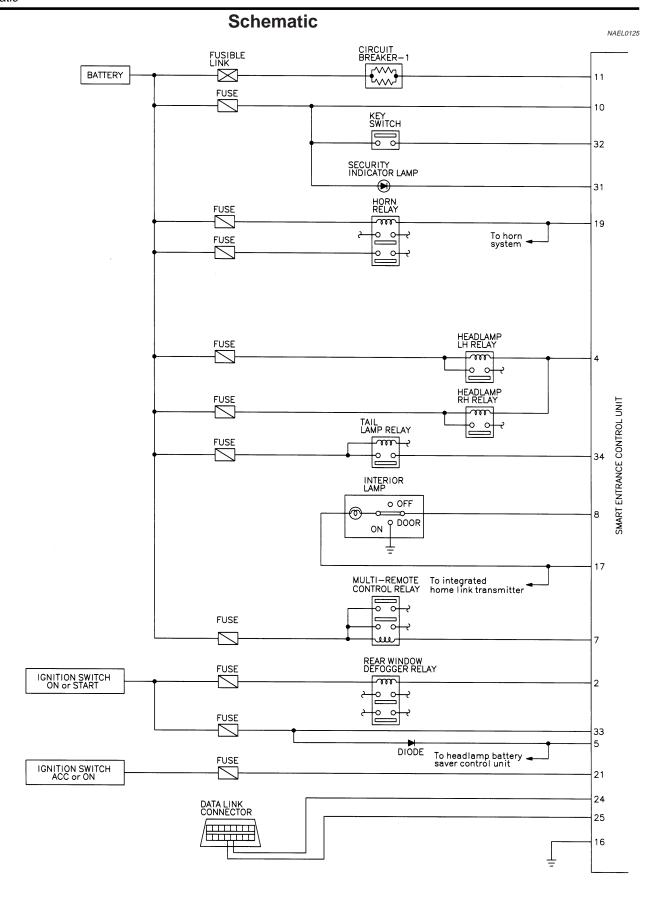

SMART ENTRANCE CONTROL UNIT

Schematic (Cont'd)

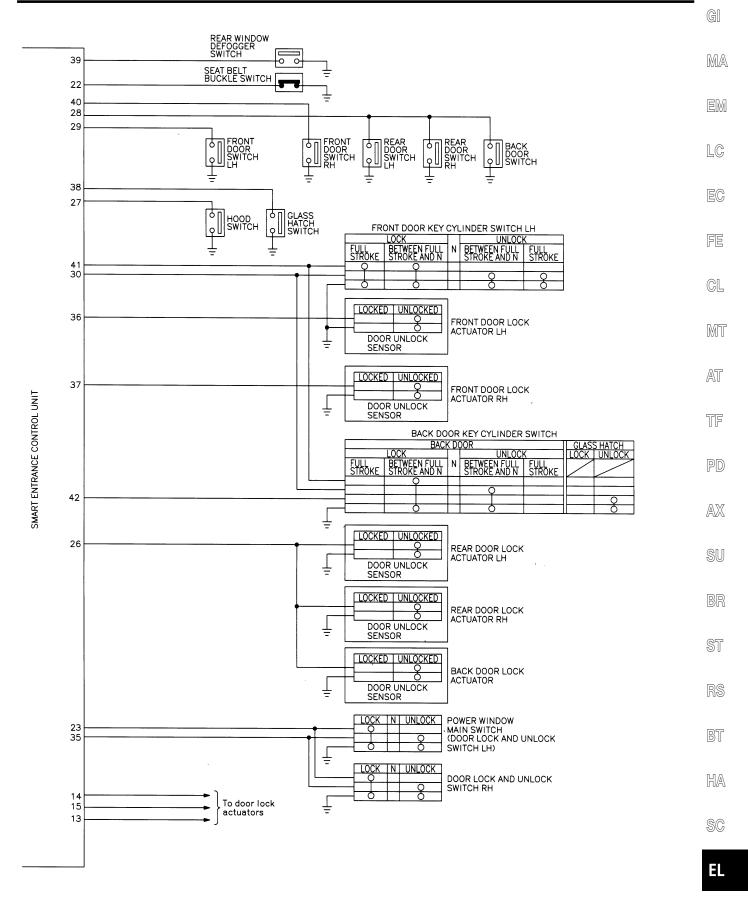

SMART ENTRANCE CONTROL UNIT

Smart Entrance Control Unit Inspection Table


Smart Entrance Control Unit Inspection Table

Terminal No.	Wire color	Connections	Operated condition		Voltage (Approximate values)
2	G/B	Rear window defogger relay	OFF → ON (Ignition key is in "ON" position)		0V → 12V
4	PU/W	Headlamp relay	When panic alarm is operated using remote controller		12V → 0V
5	R/Y	Headlamp battery saver control unit	When headlamp battery saver timer is operated		12V
7	Р	Multi-remote control relay	When doors are locked using remote controller		12V → 0V
8	R/B	Interior lamp	When interior lamp is operated using remote controller. (Lamp switch in "DOOR" position)		0V → 12V
10	G/R	Power source (Fuse)	_		12V
11	W/R	Power source (C/B)	_		12V
13	W/PU	Driver door lock actuator	Barrieri e de la circi	Free	0V
14	Y/B	Passenger door lock actuator	Door lock & unlock switch	Unlocked	12V
45	L Door lock a	Door look setuaters	Door look 9 waterly switch	Free	0V
15		Door lock actuators	Door lock & unlock switch	Locked	12V
16	В	Ground	_		_
17	R/W	Battery saver (Interior lamp)	Battery saver is not operate → Operate		12V → 0V
19	LG/B	Horn relay	When doors are locked using remote controller with horn chirp mode.		12V → 0V
21	G/W	Ignition switch (ACC)	"ACC" position		12V
22	B/P	Seat belt buckle switch	Unfasten → Fasten (Ignition key is in "ON" position)		0V → 12V
23	BR	Door lock & unlock switches	Neutral → Locks		5V → 0V
26	Y/R	Rear and back door unlock sensors	All doors are locked → One or more doors are unlocked		5V → 0V
27	Y/B	Hood open signal	ON (Open) → OFF (Closed)		0V → 5V
28	R/L	Rear and back door switches	OFF (Closed) → ON (Open)		5V → 0V
29	G/R	Driver door switch	OFF (Closed) → ON (Open)		5V → 0V
30	LG	Door key cylinder unlock switch	OFF (Neutral) → ON (Unlocked)		12V → 0V
31	BR/Y	Vehicle security indicator	Goes off → Illuminates		12V → 0V
32	W/R	Ignition key switch (Insert)	key inserted → key removed from IGN key cylinder		12V → 0V
33	W/B	Ignition switch (ON)	Ignition key is in "ON" position		12V
35	LG/R	Door lock & unlock switches	Neutral → Unlocks		5V → 0V
36	Y/G	Driver door unlock sensor	Driver door: Locked → Unlocked		5V → 0V
37	Y/L	Passenger door unlock sensor	Passenger door: Locked → Unlocked		5V → 0V
38	L/W	Glass hatch switch	ON (Open) → OFF (Closed)		0V → 12V
39	OR	Rear window defogger switch	OFF → ON		5V → 0V
40	Υ	Passenger door switch	OFF (Closed) → ON (Open)		5V → 0V
41	Υ	Door key cylinder lock switch	OFF (Neutral) → ON (Locked)		5V → 0V
42	G/B	Back door key unlock switch	OFF (Neutral) → ON (Unlock)		5V → 0V

INTEGRATED HOMELINK TRANSMITTER

SMART C/U - PREVIOUS

Wiring Diagram — TRNSMT -

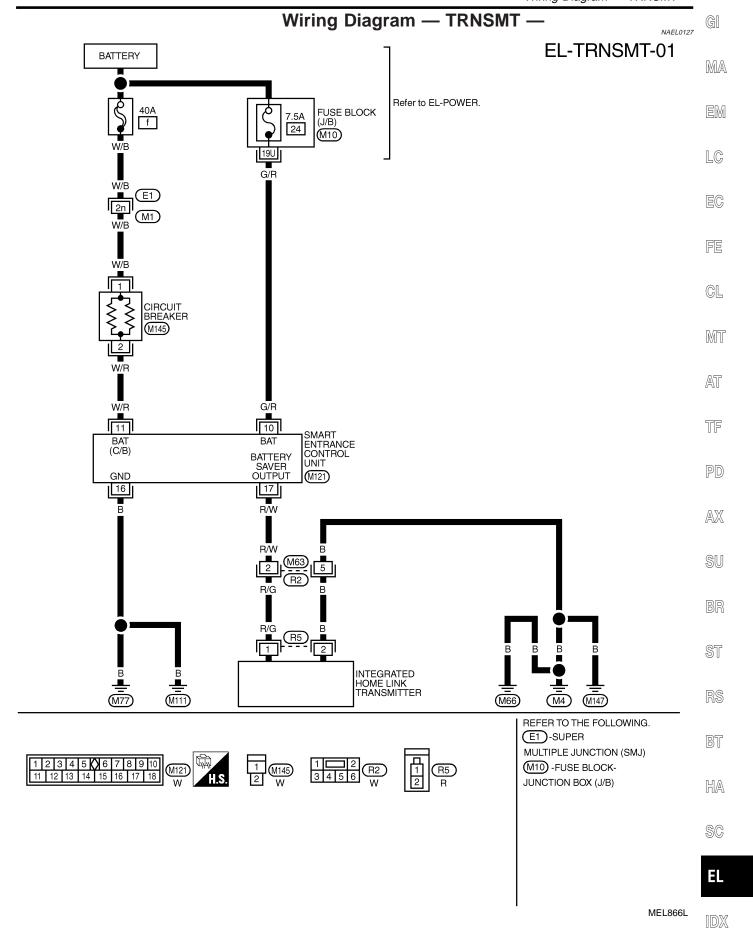

INTEGRATED HOMELINK TRANSMITTER

Trouble Diagnoses


Trouble Diagnoses DIAGNOSTIC PROCEDURE

NAEL0128


NAEL0128S01

SYMPTOM: Transmitter does not activate receiver.

Before conducting the procedure given below, make sure that system receiver (garage door opener, etc.) operates with original, hand-held transmitter. If NG, receiver or hand-held transmitter is at fault, not vehicle related.

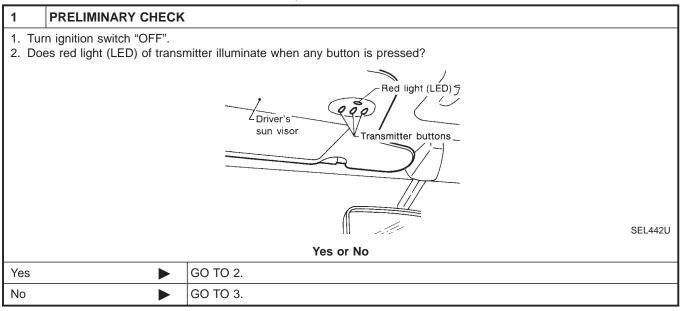

2	CHECK TRANSMITTER	FUNCTION
	transmitter with Tool. etails, refer to Technical Ser	rvice Bulletin.
		OK or NG
OK	•	Receiver or handheld transmitter fault, not vehicle related.
NG	•	Replace transmitter with sun visor assembly.

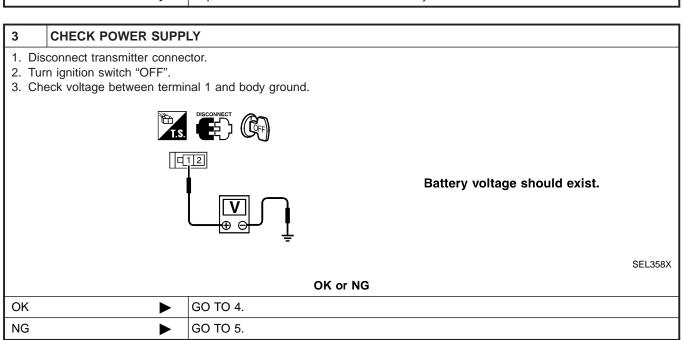

INTEGRATED HOMELINK TRANSMITTER

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

MT


AT


TF


AX

SU

BR

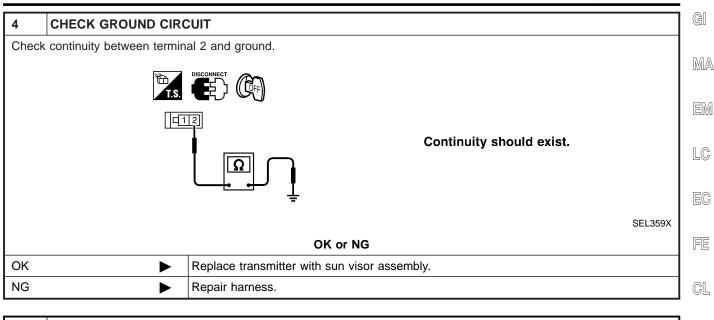

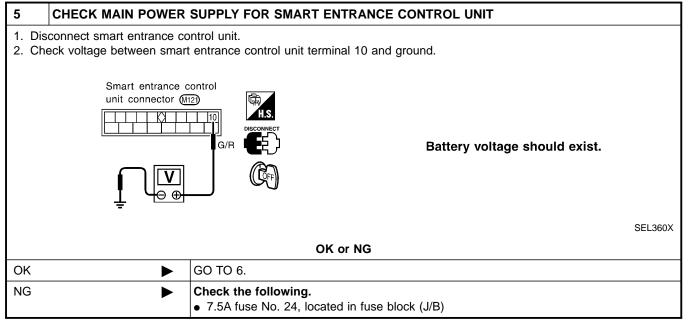

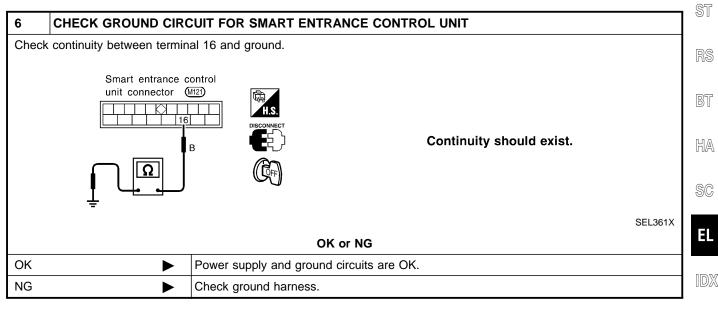


NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART (

Component Parts and Harness Connetor Location

SMART C/U - PREVIOUS

Component Parts and Harness Connetor Location

NAEL0170

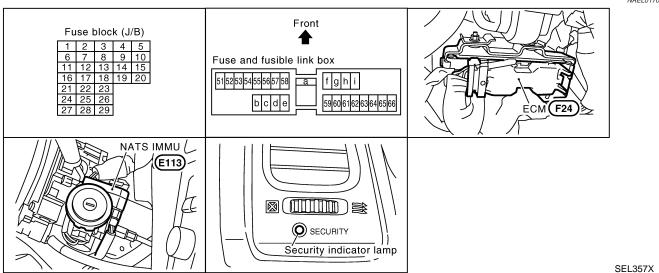

NOTE:

If customer reports a "No Start" condition, request ALL KEYS to be brought to the Dealer in case of an NVIS (NATS) malfunction.

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - PREVIOUS

System Description

System Description

NATS (Nissan Anti-Theft System) has the following immobilizer functions:

=NAEL0171

 Since only NVIS (NATS) ignition keys, whose ID nos. have been registered into the ECM and IMMU of NVIS (NATS), allow the engine to run, operation of a stolen vehicle without an NVIS (NATS) registered key is prevented by NVIS (NATS).

ed MA

That is to say, NVIS (NATS) will immobilise the engine if someone tries to start it without the registered key of NVIS (NATS).

All of the originally supplied ignition key IDs (except for card plate key) have been NVIS (NATS) registered.

LC

If requested by the vehicle owner, a maximum of five key IDs can be registered into the NVIS (NATS) components.

9

• The security indicator blinks when the ignition switch is in "OFF" or "ACC" position. Therefore, NVIS (NATS) warns outsiders that the vehicle is equipped with the anti-theft system.

 When NVIS (NATS) detects trouble, the security indicator lamp lights up while ignition key is in the "ON" position.

NVIS (NATS) trouble diagnoses, system initialization and additional registration of other NVIS (NATS) ignition key IDs must be carried out using CONSULT-II hardware and CONSULT-II NVIS (NATS) software. When NVIS (NATS) initialization has been completed, the ID of the inserted ignition key is automatically NVIS (NATS) registered. Then, if necessary, additional registration of other NVIS (NATS) ignition key IDs can be carried out.

MT

Regarding the procedures of NVIS (NATS) initialization and NVIS (NATS) ignition key ID registration, refer to CONSULT-II operation manual, IVIS/NVIS.

 When servicing a malfunction of the NVIS (NATS) (indicated by lighting up of Security Indicator Lamp) or registering another NVIS (NATS) ignition key ID no., it is necessary to re-register original key identification. Therefore, be sure to receive ALL KEYS from vehicle owner.

NAEL0172

System Composition
The immobiliser function of the NVIS (NATS) consists of the following:

PD

TF

NVIS (NATS) ignition key

NVIS (NATS) immobilizer control unit (IMMU) located in the ignition key cylinder
 Engine control module (ECM)

AX

Security indicator

SU BR

NVIS (NATS) ignition key

NVIS (NATS) IMMU

ECM

Security ind.

SEL085WF


BT

HA

SC

EL


 $\mathbb{D}\mathbb{X}$

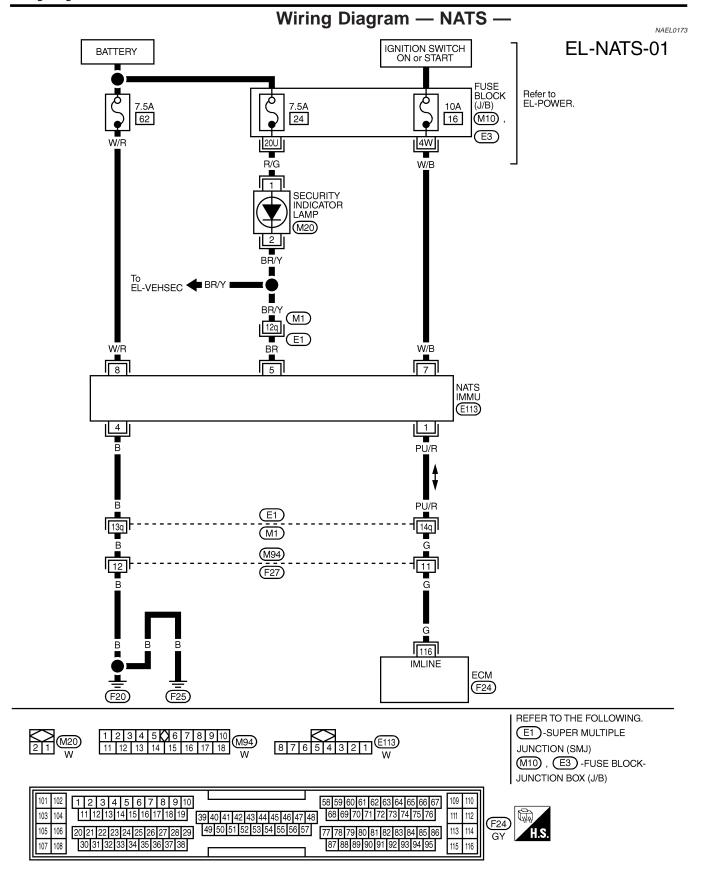

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - PREVIOUS

CONSULT-II

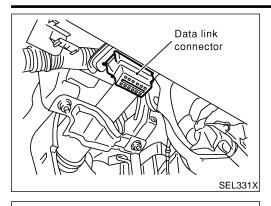

CONSULT-II

CONSULT-II INSPECTION PROCEDURE

NAEL0223 NAEL0223S01

1. Turn ignition switch OFF.

2. Insert NVIS (NATS) program card into CONSULT-II.

Program card

NATS (AENOOA)

3. Connect CONSULT-II to data link connector.

LC

MA

GI

NISSAN CONSULT-II AEN00A START

SEL943X

SEL363X

Turn ignition switch ON.

Touch "START".

EG FE

GL

MT

AT

SELECT SYSTEM **NATS V.5.0** SEL851W

SELECT DIAG MODE

C/U INITIALIZATION

SELF DIAG RESULTS

6. Select "NATS V.5.0".

procedure.

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

For further information, see the CONSULT-II Operation Manual, IVIS/NVIS.

7. Perform each diagnostic test mode according to each service

ST

BT

HA

SC

CONSULT-II DIAGNOSTIC TEST MODE FUNCTION


CONSULT-II DIAGNOSTIC TEST MODE	Description
C/U INITIALIZATION	When replacing any of the following three components, C/U initialization and re-registration of all NVIS (NATS) ignition keys are necessary. [NVIS (NATS) ignition key/IMMU/ECM]
SELF-DIAG RESULTS	Detected items (screen terms) are as shown in the chart EL-332.

NOTE:

- When any initialization is performed, all ID previously registered will be erased and all NVIS (NATS) ignition keys must be registered again.
- The engine cannot be started with an unregistered key. In this
 case, the system will show "DIFFERENCE OF KEY" or "LOCK
 MODE" as a self-diagnostic result on the CONSULT-II screen.
- In rare case, "CHAIN OF ECM-IMMU" might be stored as a self-diagnostic result during key registration procedure, even if the system is not malfunctioning.

HOW TO READ SELF-DIAGNOSTIC RESULTS

NAEL0223S03

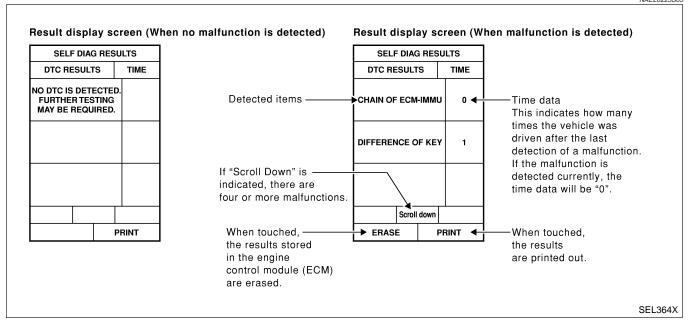

NVIS (NATS) SELF-DIAGNOSTIC RESULTS ITEM CHART

NAEL0223S04

			NAEL0223S04
Detected items (NATS program card screen terms)	P No. Code (Self-diag- nostic result of "ENGINE"	Malfunction is detected when	Reference page
ECM INT CIRC-IMMU	NATS MAL- FUNCTION P1613		EL-336
CHAIN OF ECM-IMMU	NATS MAL- FUNCTION P1612	Communication impossible between ECM and IMMU (In rare case, "CHAIN OF ECM-IMMU" might be stored during key registration procedure, even if the system is not malfunctioning.)	EL-337
DIFFERENCE OF KEY	NATS MAL- FUNCTION P1615	1	EL-341
CHAIN OF IMMU-KEY	NATS MAL- FUNCTION P1614	IMMU cannot receive the key ID signal.	EL-342
ID DISCORD, IMM-ECM	NATS MAL- FUNCTION P1611		EL-343

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - PREVIOUS

CONSULT-II (Cont'd)

	P No. Code (Self-diag-	Malfunction is detected when		G[
Detected items (NATS program card screen terms)	nostic result of "ENGINE"		Reference page	MA
	NATS MAL-	When the starting operation is carried out five or more times consecutively under the following conditions,		EM
LOCK MODE	FUNCTION P1610	NVIS (NATS) will shift the mode to one which prevents the engine from being started. • Unregistered ignition key is used. • IMMU or ECM's malfunctioning.	EL-346	LG
DON'T ERASE BEFORE CHECKING ENG DIAG	_	All engine trouble codes except NVIS (NATS) trouble code has been detected in ECM.	EL-334	EG

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA


SC

EL

Trouble Diagnoses WORK FLOW

NAEL0224

NAEL0224S01

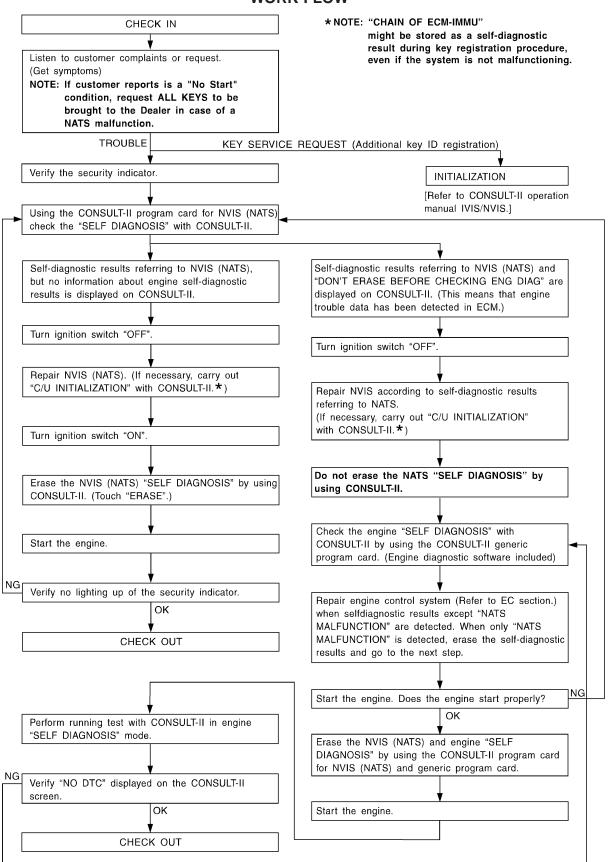

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

SYMPTOM MATRIX CHART 1 (Self-diagnosis related item)

NAEL0224S02

MA

LC

GL

MT

AT

TF

PD

AX

SU

Displayed "SELF-DIAG DIAGNOSTIC PROCE-SYSTEM REFERENCE PART NO. SYMPTOM RESULTS" on CON-**DURE** (Malfunctioning part or OF ILLUSTRATION ON SULT-II screen. **NEXT PAGE** (Reference page) mode) PROCEDURE 1 ECM INT CIRC-IMMU **ECM** В (EL-336) In rare case, "CHAIN OF ECM-IMMU" might be stored during key registration procedure, even if the system is not malfunctioning. Open circuit in battery voltage line of IMMU C1 circuit Open circuit in ignition C2 line of IMMU circuit Open circuit in ground C3 line of IMMU circuit PROCEDURE 2 CHAIN OF ECM-IMMU (EL-337) Open circuit in communication line between C4 IMMU and ECM Short circuit between Security indicator IMMU and ECM com-C4 lighting up* munication line and bat-• Engine cannot be tery voltage line started. Short circuit between IMMU and ECM com-C4 munication line and ground line **ECM** IMMU Α Unregistered key D PROCEDURE 3 DIFFERENCE OF KEY (EL-341) **IMMU** Α Malfunction of key ID Ε PROCEDURE 4 chip CHAIN OF IMMU-KEY (EL-342) IMMU Α System initialization has F not yet been com-ID DISCORD, IMM-PROCEDURE 5 pleted. **ECM** (EL-343) **ECM** F PROCEDURE 7 D LOCK MODE LOCK MODE (EL-346) Engine trouble data and MIL staying ON DON'T ERASE WORK FLOW NVIS (NATS) trouble Security indicator BEFORE CHECKING (EL-334) data have been lighting up* **ENG DIAG** detected in ECM

HA

SC

EL

^{*:} When NVIS (NATS) detects trouble, the security indicator lights up while ignition key is in the "ON" position.

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) **SMART C/U - PREVIOUS**


Trouble Diagnoses (Cont'd)

SYMPTOM MATRIX CHART 2 (Non self-diagnosis related item)

NAFL0224S03

	, ,	•
SYMPTOM	DIAGNOSTIC PROCEDURE (Reference page)	SYSTEM (Malfunctioning part or mode)
		Security ind.
Consider in discount limbs on	PROCEDURE 6	Open circuit between Fuse and IMMU
Security ind. does not light up.	(EL-344)	Continuation of initialization mode
		IMMU

DIAGNOSTIC SYSTEM DIAGRAM

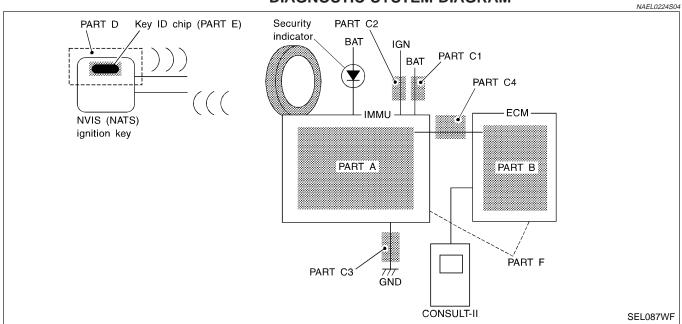

SELF DIAG RES	JLTS	
DTC RESULTS	TIME	
ECM INT CIRC-IMMU	0	
		SEL365X

DIAGNOSTIC PROCEDURE 1

NAEL0224S05

Self-diagnostic results:

"ECM INT CIRC-IMMU" displayed on CONSULT-II screen

- 1. Confirm SELF-DIAGNOSTIC RESULTS "ECM INT CIRC-IMMU" displayed on CONSULT-II screen. Ref. part No. B.
- Replace ECM.
- 3. Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II operation manual IVIS/NVIS".

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)


DIAGNOSTIC PROCEDURE 2


=NAEL0224S06

GI

Self-diagnostic results:

"CHAIN OF ECM-IMMU" displayed on CONSULT-II screen

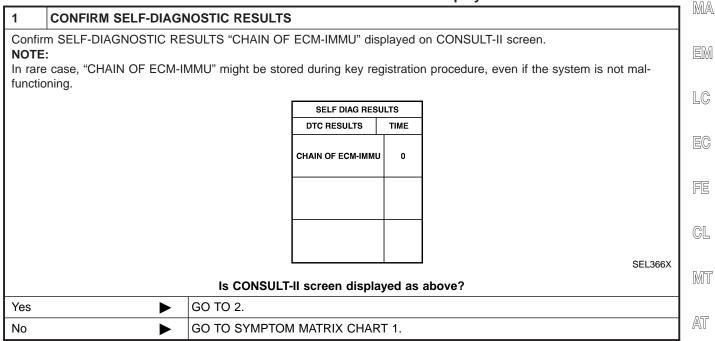

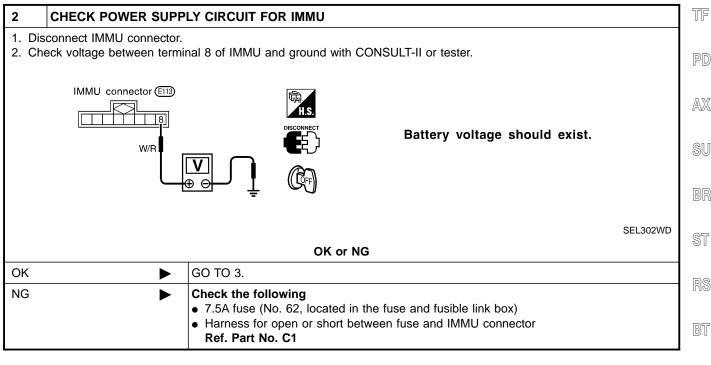

HA


SG


ĒĹ

 \mathbb{D}

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

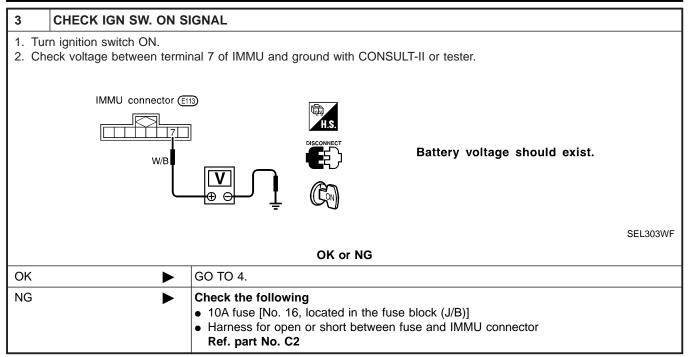

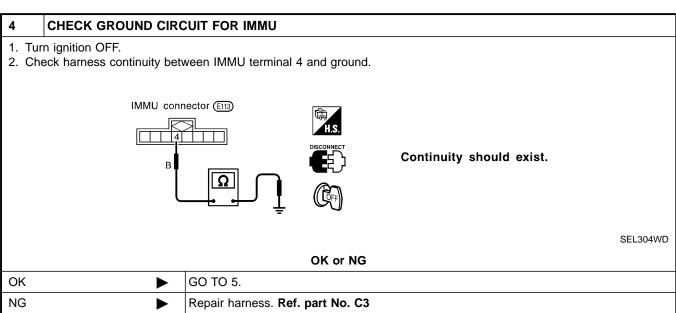

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - PREVIOUS


Trouble Diagnoses (Cont'd) GI CHECK COMMUNICATION LINE OPEN CIRCUIT 1. Disconnect ECM connector. 2. Check harness continuity between ECM terminal 116 and IMMU terminal 1. MA EM IMMU connector (E113) OCONNECTOR **ECM** Continuity should exist. LC (F24) PU/R lG EG SEL305WD FE OK or NG

GO TO 6.

Repair harness or connector.

OK

NG

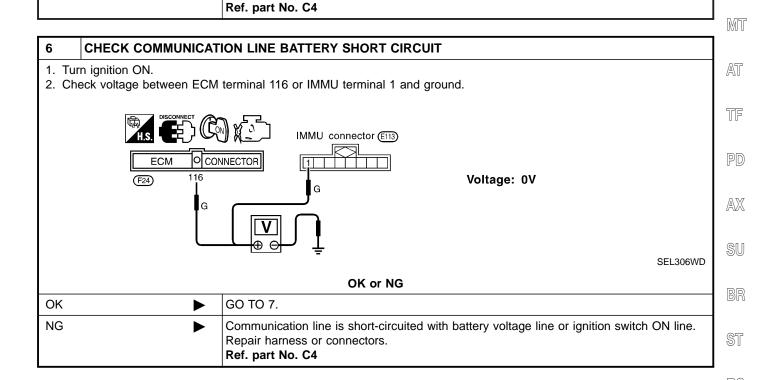

-

BT


HA

SC

CL

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

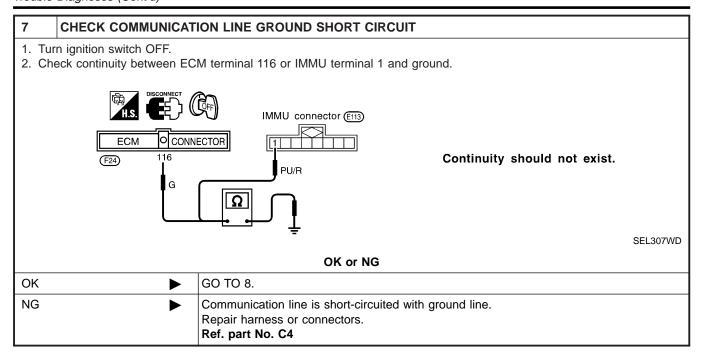

8	SIGNAL FROM ECM TO	IMMU CHECK		
tui 2. Ma	rned "ON".	_		T-II or oscilloscope when ignition switch is during 750 msec. just after ignition switch is
		Trigg	ering Menu Stop Triggering	
		Set	Auto Trigger	
		·] <<	A] 5.0 V/Dlv 10 mS/Dlv T	SEL730W
			OK or NG	
OK	F	MMU is malfunction Replace IMMU. Ref. Perform initialization For the operation of	part No. A with CONSULT-II.	"CONSULT-II Operation Manual IVIS/NVIS".
NG	F F	ECM is malfunctioning Replace ECM. Ref. Perform initialization for the operation of	part No. B with CONSULT-II.	"CONSULT-II Operation Manual IVIS/NVIS".

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 3

=NAEL0224S07

Self-diagnostic results:
"DIFFERENCE OF KEY" displayed on CONSULT-II screen

1	CONFIRM SELF-DIAGN	NOSTIC RESU	LTS			1 181/
Confir	m SELF-DIAGNOSTIC RE	SULTS "DIFFER	RENCE OF KEY"	display	ed on CONSULT-II screen.	
			SELF DIAG RESUI	LTS		
			DTC RESULTS	TIME		
			DIFFERENCE OF KEY	0		
						E
						FE
					SEL367X	G
			ULT-II screen dis	played	as above?	-
Yes	<u> </u>	GO TO 2.	TO 1.1.1.TD IV. O. I.	4 D.T. 4		l M.
No	<u> </u>	GO TO SYMP	TOM MATRIX CH	ARI 1.		
2	PERFORM INITIALIZAT					AT
	m initialization with CONS itialization and registration				on key IDs. "CONSULT-II operation manual NVIS/NVIS".	T
			IMMU INITIALIZA	TION	-	
						P
			INITIALIZATIO FAIL	ON		
						A)
			THEN IGN KEY SW 'C			
			SELF-DIAG AND PAS PERFORM C/U INITIA AGAIN.	SWORD,	1	SI
					SEL297W	B
NOTE		(-:)- OON	IOLUT II eb			
	initialization is not complete				-	@5
	can the system be initial				th re-registered NVIS (NATS) ignition key?	\$ 1
Yes	<u></u> .	-	was unregistered	. Kef.	Dart No. D	
No	•	Perform initializ	J. Ref. part No. A zation with CONS			R
1		For initialization	n, refer to "CONS	ULT-II	operation manual IVIS/NVIS".	B

HA

SC

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 4

=NAEL0224S08

Self-diagnostic results:
"CHAIN OF IMMU-KEY" displayed on CONSULT-II screen

1	CONFIRM SELF-DIAGN	IOSTIC RESULTS	5		
Confirr	m SELF-DIAGNOSTIC RE	SULTS "CHAIN OF	IMMU-KEY" disp	layed	on CONSULT-II screen.
			SELF DIAG RESU	LTS	1
			DTC RESULTS	TIME	
			CHAIN OF IMMU-KEY	0	
					SEL368X
		Is CONSULT	-II screen displa	yed as	above?
Yes	>	GO TO 2.			
No	•	GO TO SYMPTON	MATRIX CHAR	T 1.	

2	CHECK NVIS (NATS) IC	SNITION KEY ID CHIP
Start	engine with another registe	red NVIS (NATS) ignition key.
		Does the engine start?
Yes	>	Ignition key ID chip is malfunctioning. Replace the ignition key. Ref. part No. E Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II Operation Manual IVIS/NVIS".
No	>	GO TO 3.

3	CHECK IMMU INSTALL	ATION
	k IMMU installation. to "How to Replace IMMU"	' in EL-347.
		OK or NG
OK	>	IMMU is malfunctioning. Replace IMMU. Ref. part No. A Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II Operation Manual IVIS/NVIS".
NG	>	Reinstall IMMU correctly.

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 5

=NAEL0224S09

Self-diagnostic results:
"ID DISCORD, IMM-ECM" displayed on CONSULT-II screen

		"ID DISCORD, IMM-ECM" displayed on CONSULT-II	
1 CONFIRM	SELF-DIAG	NOSTIC RESULTS	
Confirm SELF-DIA	GNOSTIC RE	ESULTS "ID DISCORD, IMM-ECM" displayed on CONSULT-II screen.	
		SELF DIAG RESULTS	
		DTC RESULTS TIME	
		ID DISCORD, IMM-ECM 0	
			SEL369X
OTE: D DISCORD IMM	ALLECNA".		
		cord with that of ECM.	
		Is CONSULT-II screen displayed as above?	
es		GO TO 2.	
0	•	GO TO SYMPTOM MATRIX CHART 1.	
DEDECORM	1 INIITIAI 17A	TION WITH CONCULT II	
		TION WITH CONSULT-II	
		ULT-II. Re-register all NVIS (NATS) ignition key IDs. ULT-II operation manual IVIS/NVIS".	
	siei lo Cons	OLI-II Operation manual IVIO/IVVIO .	
	elei to CONS	IMMU INITIALIZATION	
	elei to cons		
	elei to CONS	IMMU INITIALIZATION INITIALIZATION	
	erer to CONS	IMMU INITIALIZATION	
	erer to CONS	IMMU INITIALIZATION INITIALIZATION FAIL THEN IGN KEY SW 'OFF' AND	
	erer to CONS	IMMU INITIALIZATION INITIALIZATION FAIL	
	erer to CONS	IMMU INITIALIZATION INITIALIZATION FAIL THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING	
	erer to CONS	IMMU INITIALIZATION INITIALIZATION FAIL THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION	SEL297W
		IMMU INITIALIZATION INITIALIZATION FAIL THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN.	SEL297W
		IMMU INITIALIZATION INITIALIZATION FAIL THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN. THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN.	SEL297W
the initialization i	is not complet	IMMU INITIALIZATION INITIALIZATION FAIL THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN. Ted or fails, CONSULT-II shows above message on the screen. Can the system be initialized?	SEL297W
the initialization i		IMMU INITIALIZATION INITIALIZATION FAIL THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN. THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN.	SEL297W
f the initialization i	is not complet	INITIALIZATION INITIALIZATION FAIL THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN. The system be initialized? Start engine. (END) (System initialization had not been completed. Ref. part No. F) ECM is malfunctioning.	SEL297W
NOTE: f the initialization i Yes	is not complet	INITIALIZATION INITIALIZATION FAIL THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN. The system be initialized? Start engine. (END) (System initialization had not been completed. Ref. part No. F)	SEL297W

SC

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)


DIAGNOSTIC PROCEDURE 6

"SECURITY INDICATOR LAMP DOES NOT LIGHT UP"

=NAEL0224S10

1	CHECK FUSE					
Check	Check 10A fuse [No. 12, located in the fuse block (J/B)].					
		Is 10A fuse OK?				
Yes	Yes ▶ GO TO 2.					
No	•	Replace fuse.				

2	CHECK SECURITY IND	ICATOR LAMP			
 Per For Tur Sta Ch 	 Install 10A fuse. Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II Operation Manual IVIS/NVIS". Turn ignition switch OFF. Start engine and turn ignition switch OFF. Check the security indicator lamp lighting. Security indicator lamp should be blinking. 				
	OK or NG				
OK	OK INSPECTION END				
NG	•	GO TO 3.			

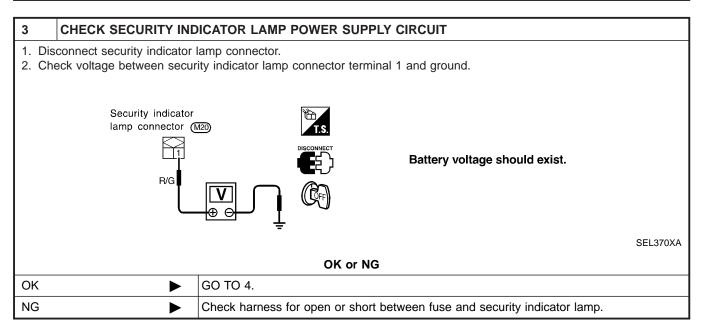

4	CHECK SECURITY INDICATOR LAMP				
Check	Check security Indicator Lamp.				
	Is security indicator lamp OK?				
Yes	Yes DO TO 5.				
No	>	Replace security indicator lamp.			

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

5 CHECK	IMMU FUNCTION		GI
	U connector. ecurity indicator lamp connector. uity between IMMU terminal 5 and ground.		MA
IMM	U connector (£113) H.S.		EM
L	BR Continuity should exist intermittently.		LG
			EG
		SEL300WC	FE
	OK or NG		
OK	Check harness for open or short between security indicator lamp and IMMU.		GL
NG	IMMU is malfunctioning. Replace IMMU. Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II operation manual IVIS/NVIS".		MT
	 		AT

BR
ST
RS
BT
HA
SC

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 7

=NAEL0224S11

Self-diagnostic results: "LOCK MODE" displayed on CONSULT-II screen

1	CONFIRM SELF-DIAGNOSTIC RESULTS					
Confir	Confirm SELF-DIAGNOSTIC RESULTS "LOCK MODE" is displayed on CONSULT-II screen.					
		SELF DIAG	RESULTS]		
		DTC RESULTS	TIME			
		LOCK MODE	0			
				-		
				-		
				SEL371X		
		Is CONSULT-II screen d	splayed a	s above?		
Yes	>	GO TO 2.				
No	>	GO TO SYMPTOM MATRIX C	HART 1.			


2	ESCAPE FROM LOCK	MODE			
 Tur Re Re 	1. Turn ignition switch OFF. 2. Turn ignition switch ON with registered key. (Do not start engine.) Wait 5 seconds. 3. Return the key to OFF position. 4. Repeat steps 2 and 3 twice (total of three cycles). 5. Start the engine.				
		Does engine start?			
Yes	>	System is OK. (Now system is escaped from "LOCK MODE".)			
No	•	GO TO 3.			

3	3 CHECK IMMU ILLUSTRATION				
Check	Check IMMU installation. Refer to "How to Replace IMMU" in EL-347.				
	OK or NG				
OK	OK ▶ GO TO 4.				
NG	NG Reinstall IMMU correctly.				

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - PREVIOUS

Trouble Diagnoses (Cont'd)

4	PERFORM INITIALIZAT	ION WITH CONSULT-II	Gl
	rm initialization with CONS itialization, refer to "CONS	JLT-II. JLT-II operation manual IVIS/NVIS".	MA
		IMMU INITIALIZATION	
		INITIALIZATION FAIL	EM
			LC
		THEN IGN KEY SW 'OFF' AND 'ON', AFTER CONFIRMING SELF-DIAG AND PASSWORD, PERFORM C/U INITIALIZATION AGAIN.	EC
NOTE	- .	SEL297W	FE
If the		ed or fails, CONSULT-II shows the above message on the screen.	
		Can the system be initialized?	CL
Yes	>	System is OK.	1
No	>	GO TO DIAGNOSTIC PROCEDURE 4 to check "CHAIN OF IMMU-KEY", refer to EL-342.	MT

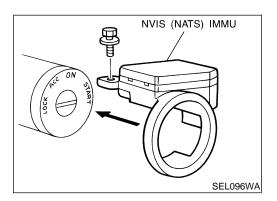

How to Replace NVIS (NATS) IMMU

NAEL0225

If NVIS (NATS) IMMU is not installed correctly, NVIS (NATS) system will not operate properly and SELF-DIAG RESULTS on CONSULT-II screen will show "LOCK MODE".

PD

AT

SU

AX

BR

ST

RS

BT

HA

SC


EL

SEL508X

Component Parts Location NAEL0232 A GPS antenna Display & NAVI control unit 🖪 Audio unit С Α GPS antenna Audio unit

NAVIGATION SYSTEM

System Description

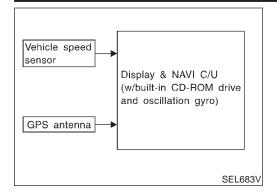

System Description OUTLINE

(ΝΔΕΙ 0233

The Navigation System (Multi-AV System) relies upon three sensing devices in order to determine vehicle location at regular time intervals.

MA

 Vehicle speed sensor: Determines the distance the vehicle has traveled.

Gyro (Angular velocity sensor): Determines vehicle steering angle and directional change.

LG

3. GPS antenna (GPS data): Determines vehicle forward movement and direction.

The data provided by the three sensing functions together with a comparison of the mapping information read from the CD-ROM drive permit accurate determination of the vehicle's current location and subsequent course (map matching). The information appears on a liquid crystal display.

Ē

GL

This comparison of GPS data (vehicle position sensing) and map matching permits precise determination of vehicle location.

MT

North Previous position θ°: Previous forward direction of vehicle φ°: Change in current forward direction of vehicle ℓ: Distance traveled from previous position SEL684V

Position Sensor Operating Principles

AT

The sensor determines current vehicle location by calculating the previously sensed position, the distance traveled from this position, and the directional changes occurring during this travel.

r

Distance traveled

PD

The distance traveled is calculated using signals received from the vehicle speed sensor. The sensor automatically compensates for the slightly reduced wheel and tire diameter resulting from tire wear.

2. Forward movement (Direction)

SU

Changes in the direction of forward movement are calculated by the gyro (angular velocity sensor) and the GPS antenna (GPS data). Each of these functions has its advantage and disadvantages. Depending upon conditions, one function takes precedence over the other to accurately determine the direction of forward movement.

Function type	Advantage	Disadvantage
Gyro (Angular velocity sen- sor)	Able to accurately detect minute changes in steering angle and direction.	 Calculation errors may accumulate over a long period of continuous vehicle travel.
GPS antenna (GPS data)	Able to sense vehicle travel in four general directions (North, South, East, and West)	Unable to detect direction of vehicle travel at low vehicle speeds.

ST

RS


BT


HA


SC


EL

D.Y.

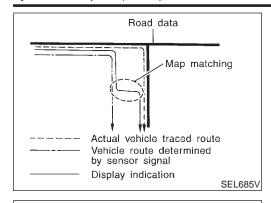

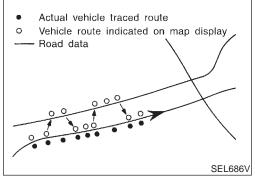

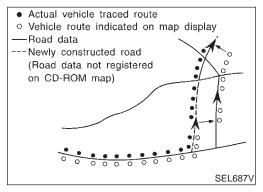

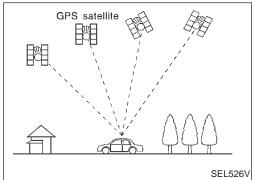

Map Matching

Map matching allows the driver to compare the sensed vehicle location data with the road map contained in the CD-ROM drive. Vehicle position is marked on the CD-ROM map. This permits the driver to accurately determine his/her present position on the highway and to make appropriate course decisions.

When GPS data reception is poor during travel, the vehicle position is not amended. At this time, manual manipulation of the CD-ROM map position marker is required.

Map matching permits the driver to make priority judgments about possible appropriate roads other than the one currently being traveled.

If there is an error in the distance or direction of travel, there will also be an error in the relative position of other routes. When two routes are closely parallel to one another, the indicated position for both routes will be nearly the same priority. This is so that, slight changes in the steering direction may cause the marker to indicate both routes alternately.

Newly constructed roads may not appear on the CD-ROM map. In this case, map matching is not possible. Changes in the course of a road will also prevent accurate map matching.

When driving on a road not shown on the CD-ROM map, the position marker used for map matching may indicate a different route. Even after returning to a route shown on the map, the position marker may jump to the position currently detected.

GPS (Global Positioning System)

GPS is the global positioning system developed and operated by the US Department of Defense. GPS satellites (NAVSTAR) transmit radio waves and orbit around the earth at an altitude of approximately 21,000 km (13,000 miles).

GPS receiver calculates the three-dimensional position of the vehicle (latitude, longitude, and altitude from the sea level) by the time difference of the radio wave arriving from more than four GPS satellites (three-dimensional positioning).

When the radio wave is received from only three GPS satellites, the two-dimensional position (latitude and longitude) is calculated, using the altitude from the sea level data calculated by using four GPS satellites (two-dimensional positioning).

Positioning capability is degraded in the following cases.

- In two-dimensional positioning, when the vehicle's altitude from the sea level changes, the precision becomes lower.
- The location detection performance can have an error of about 100 m (300 ft) even in three-dimensional positioning with high precision. Because the precision is influenced by the location of GPS satellites used for positioning, the location detection performance may drop depending on the location of GPS satellites.
- When the radio wave from GPS satellites cannot be received.

NAVIGATION SYSTEM

SMART C/U - PREVIOUS


System Description (Cont'd)

for example, when the vehicle is in a tunnel, in a parking lot inside building, under an elevated superhighway or near strong power lines, the location may not be detected. Turbulent/ electric weather conditions may also affect positioning performance. If something is placed on the antenna, the radio wave from GPS satellites may not be received.



MA

LC

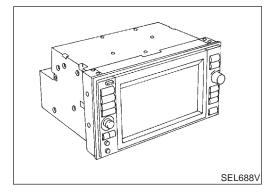

CD ejection

switch

CD loading slot

COMPONENT DESCRIPTION **Display & NAVI Control Unit**

NAFL0233S02

The gyro (angular speed sensor) and the CD-ROM drive are built-in units that control the navigation functions. Signals are received from the gyro, the vehicle speed sensor,

and the GPS antenna. Vehicle location is determined by combining this data with the data contained in the CD-ROM map. Locational information is shown on liquid crystal display panel.

MT

Finger-operated touch switches are positioned on the liquid crystal display panel for easy operation. The touch switches used to control the equipment are beneath a glass sheet and two resistance membranes at the top of the

liquid crystal display panel. The switches are sensitive to resistance value where touched with your finger to detect operating status.

AX

SU

CD-ROM Driver Maps, traffic control regulations, and other pertinent information can be easily red from the CD-ROM disc.

SEL689V

When removing the CD-ROM, allow it to remain open until the liquid crystal display locks.

The liquid crystal display must be closed when the vehicle is

Do not place cups, cans or other containers containing liquids on top of the liquid crystal display.

Map CD-ROM


NAFI 0233S0203


The map CD-ROM has maps, traffic control regulations, and other pertinent information.


HA

To improve CD-ROM map matching and route determination functions, the CD-ROM uses an exclusive Nissan format. Therefore, the use of a CD-ROM provided by other manufacturers cannot be used.



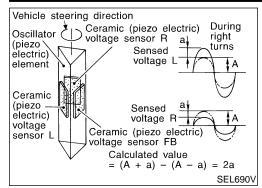

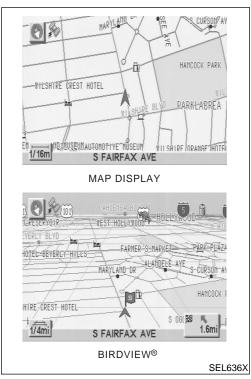

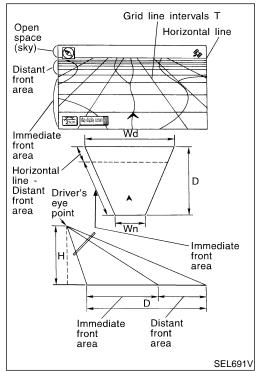

Gyro (Angular Speed Sensor)

- The oscillator gyro sensor is used to detect changes in vehicle steering angle.
- The oscillator gyro periodically senses oscillatory variation at the oscillation terminals. This variation is caused by changes in the vehicle angular velocity. Voltage variations are sensed by ceramic voltage sensors at the left and right sides of the terminals. Vehicle angular velocity corresponds directly with these changes in voltage.
- The gyro is built into the display & navigation (NAVI) control

BIRDVIEW®

The BIRDVIEW provides a detailed and easily seen display of road conditions covering the vehicle's immediate to distant area.

Description

- Display area: Trapezoidal representation showing approximate distances (Wn, D, and Wd).
- Ten horizontal grid lines indicate display width while six vertical grid lines indicate display depth and direction.
- Drawing line area shows open space, depth, and immediate front area. Each area is to a scale of approximately 5:6:25.
- When the "ZM-" button is pushed, the view point height is increased. Pushing the "ZM+" button decreases the height. Pushing the "ZM-" button or the "ZM+" button during operation indicates the scale change and the view point height at the left-hand side of the screen.

System Description (Cont'd)

FUNCTION OF TOUCH SWITCH (SUMMARY) Display with Pushed "MAP" Switch

=NAEL0233S03

MA


EM

LC

EC

GL

NAEL0233S0301

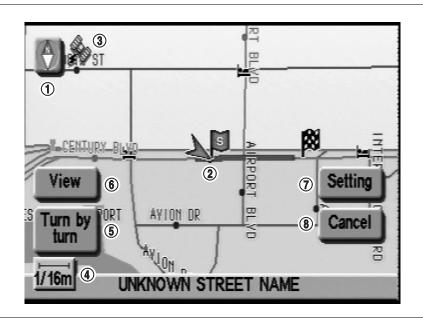

SEL580X

The function of each touch switch is as follows:

- Azimuth indication
- Position marker The tip of the arrow shows the current position. The shaft of the arrow indicates the direction in which the vehicle is travel-
- 3) GPS reception signal (indicates current reception conditions)
- Distance display (shows the distance in a reduced scale)
- 5) Current location voice information (this information is available when the route guide is being activated and the designated route is being traveled.)
- Switch display from map screen to BIRDVIEW® screen (change to map screen on display when the BIRDVIEW® is being used.)
- The following items can be set.
- Save Current Location
- Edit Address Book
- Guide Volume
- System Setting
- The route guide operation can be canceled.

AT

MIT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

HA


SC

EL

=NAEL0233S0302

SEL581X

Display with Pushed "DEST" Switch

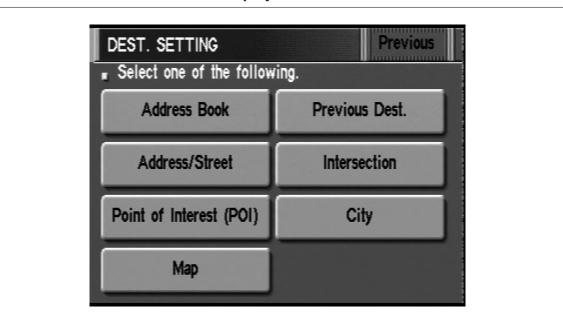


The function of each touch switch is as follows:

Icon	Description	
Address Book	Favorite place can be saved to memory. The destination can be selected from the memory.	
Address/Street	The destination can be searched from the address.	
Point of Interest (POI)	The destination of favorite facility can be searched.	
Previous Dest.	The previous ten destinations stored in memory are displayed.	
Intersection	The destination from the intersection name can be retrieved.	
City	The destination can be searched from city name.	
Мар	The destination can be searched from the map.	

NAVIGATION SYSTEM

System Description (Cont'd)

Display with Toutch Screen

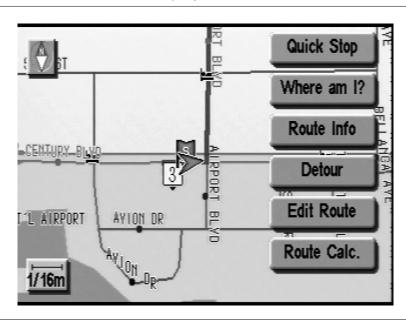

D/0/

NAEL0233S0303

MA

EM

LC

EC

FE

GL

SEL582X MT

The function of each touch switch is as follows:

The function of each touch switch is as follows:		
Icon Description		
Quick Stop	The selected facility is set as the destination or way-point. (Route guidance has been turned OFF or the destination has been reached.)	
Where am I?	Next, current and previous street names can be displayed.	
Route Info.*	The following items can be set. Complete Route Turn List Route Simulation	
	(Displayed only when the destination area has been set.)	
Detour*	Based on the selected distance, an alternative route is searched. [Displayed only when the recommended route (not its reverse) is followed.]	
Edit Route*	Change the destination or add the transit points of the route set in the route guide. (Displayed only when the automatic reroute function has been turned OFF and the recommended route is not followed.)	
Route Calc.	Search for a recommended route between the vehicle's current location and the destination area. (Displayed only when the destination area has been set.)	

^{*:} When destinations have been entered, route guidance has been turned OFF or destination has been reached, "Route Info.", "Detour", "Edit Route" and "Route Calc." are not displayed.




SC


EL




Schematic


NAEL0234

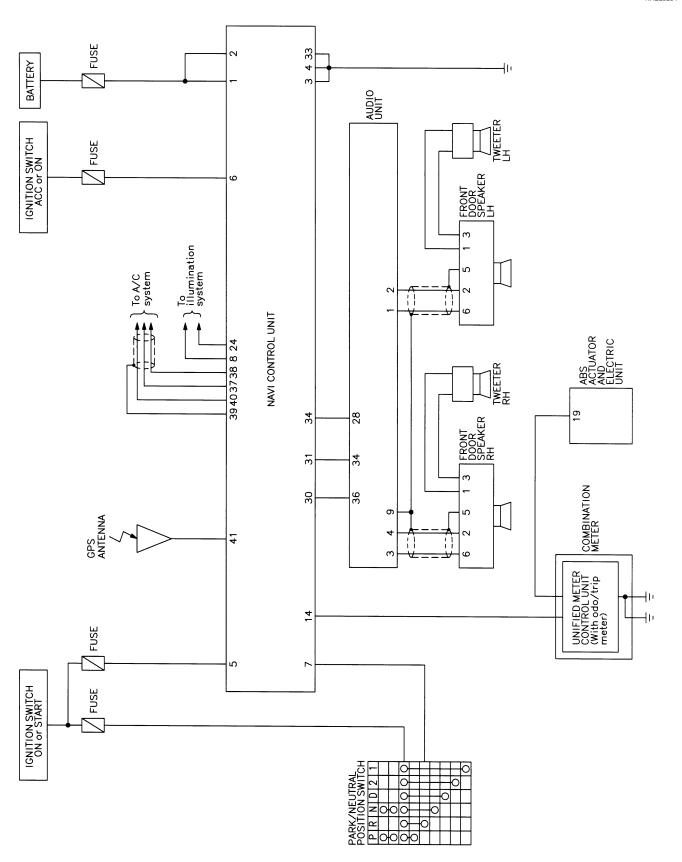

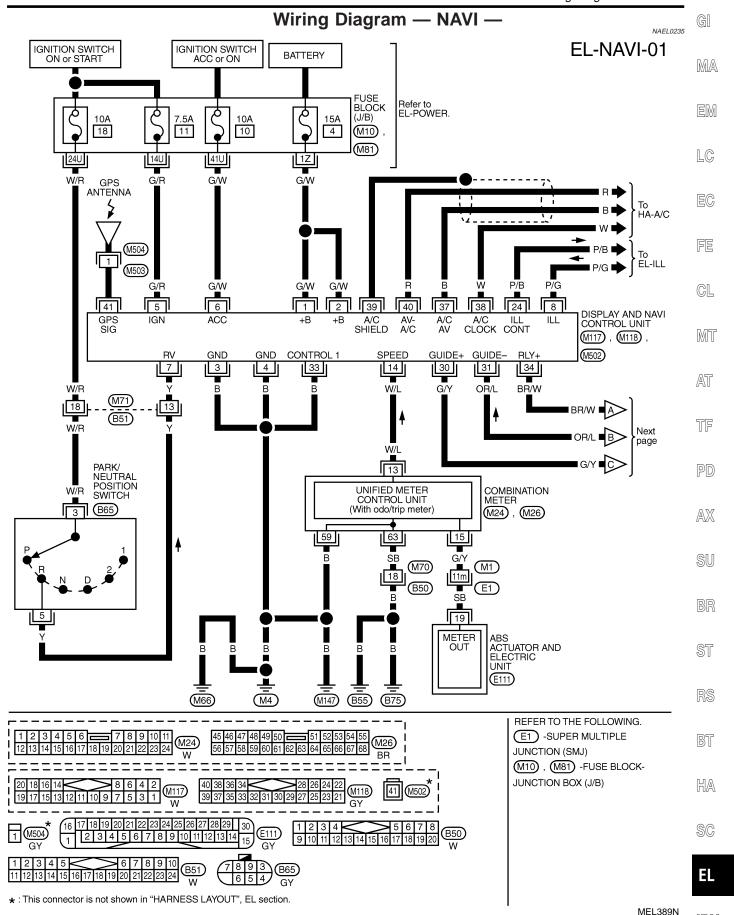

EL-NAVI-02

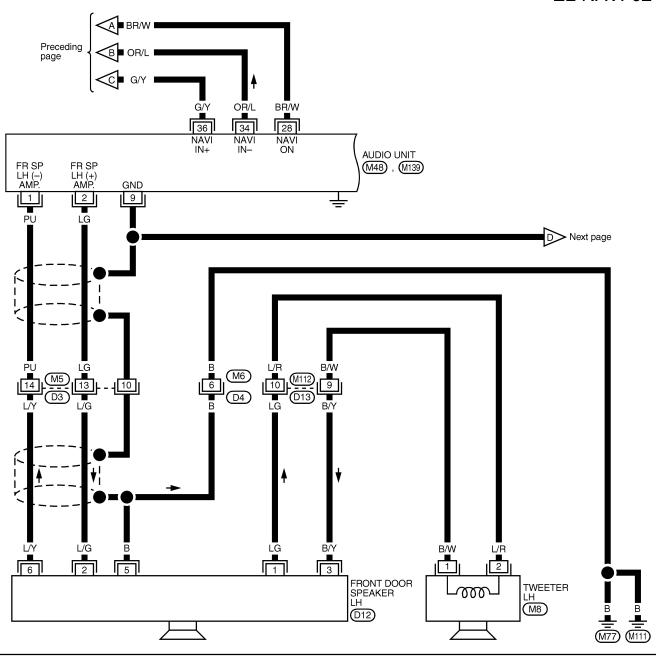

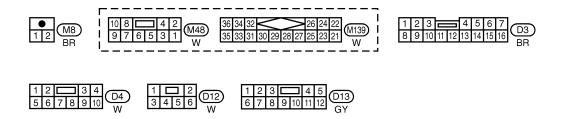

MEL390N



G[

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$


SU


BR

ST

RS

BT

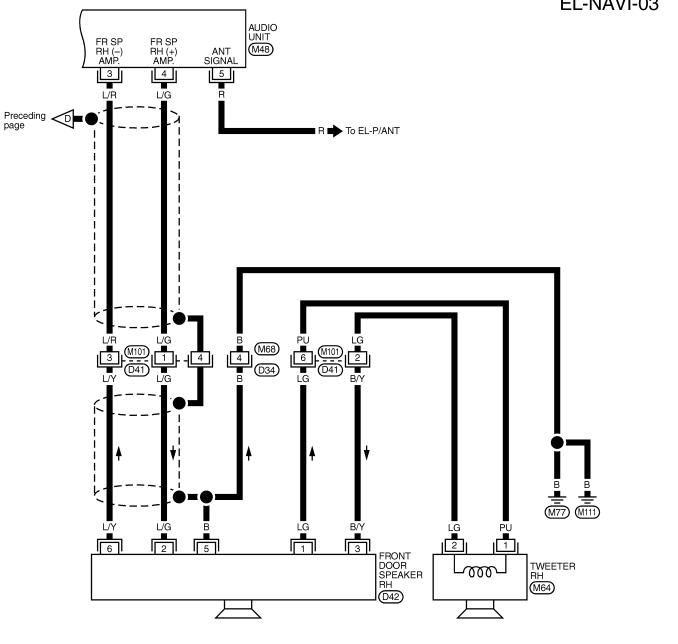

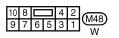





HA

SC

ΕL


MEL270M

Self-diagnosis Mode APPLICATION ITEMS

NAEL0236

NAFL0236S01

				NAEL0236S01
Mode			Description	Reference page
Self Diagnosis			Self-diagnosis for display & NAVI control unit, CD-ROM and GPS antenna connection.	EL-361
	Display Diagnosis		Color and gray gradation of display can be checked in this mode.	EL-369
	Diagnostic Signals from the Car		Several input signals to display & NAVI control unit, can be monitored in this mode.	EL-367
	tion/ int A Navigation	Check the map CD-ROM version	The version (parts number) of inserted CD-ROM can be checked in this mode.	EL-368
		Error history	Diagnosis results previously stored in the memory (before turning ignition switch ON) are displayed in this mode. Time and location when/where the errors occurred are also displayed.	EL-363
Confirmation/adjustment		Longitude & Latitude	Display the map. Use the joystick to adjust position. Longitude and latitude will be displayed.	EL-370
adjustmont		Adjust the angle	Turning angle of the vehicle on the display can be adjusted in this mode.	EL-371
		Speed Calibration	Under ordinary conditions, the navigation system distance measuring function will automatically compensate for minute decreases in wheel and tire diameter caused by tire wear or low pressure. Speed calibration immediately restores system accuracy in cases such as when distance calibration is needed because of the use of tire chains in inclement weather.	EL-372
		Initialize Location	This mode is for initializing the current location. Use when the vehicle is transported a long distance on a trailer, etc.	EL-396

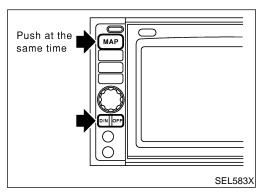

Self Diagnosis Select one of the following. Self Diagnosis Confirmation/ adjustment SEL584X


HOW TO PERFORM SELF-DIAGNOSIS MODE

NAEL0236S02

- 1. Start the engine.
- 2. Push both of "MAP" and "D/N" switches at the same time for more than 5 seconds.

- 3. Touch "Self Diagnosis" or "Confirmation/ adjustment".
- For further procedure, refer to the following pages which describe each application item of the self-diagnosis mode.

Self-diagnosis Mode (Cont'd)

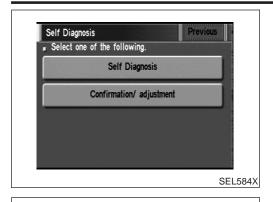

"Self Diagnosis"

NAFI 0236S0201

1. Start the engine.

Push both "MAP" and "D/N" switches at the same time for more than 5 seconds. MA

3. Touch "Self Diagnosis".

EM

4. Self-diagnosis will be performed.

EG

LC

4. Con diagnosis will be performed.

 \mathbb{GL}

MT

indi-

TF

PD

SU

90

BR

ST


BT


HA

SC

EL



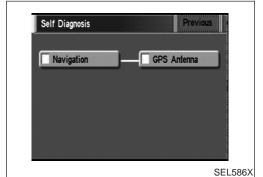

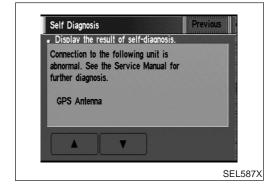

 Diagnosis results will be displayed. Diagnosis results are indicated by display color. For details refer to "SELF-DIAGNOSIS RESULTS".

To obtain detailed diagnosis results on the screen, touch "Navigation" or "GPS Antenna".

Displayed

color

Detailed result

Diagnosed

item

SELF-DIAGNOSIS RESULT

Description

TS	=NAEL0236S03
	Diagnoses/service procedure Recheck system at each check or replacement (When malfunction is eliminated, further repair work is not required.)
;- '.	_
	Check GPS antenna feeder cable connection at display & NAVI control unit. Visually check GPS antenna feeder cable. If NG, replace GPS antenna assembly. Replace GPS antenna.
	_
ıl-	Replace display & NAVI control unit.
dis- nc-	Confirm that map CD-ROM is not inserted into display & NAVI control unit. Replace display & NAVI control unit.
es r of	Confirm the disk is installed correctly (not up side down.) Perform "CD-ROM VERSION CHECK" in EL-368 to confirm whether correct CD-ROM is inserted or not. Check the disk surface. Are there any scratches, abrasions or pits
r of	on the surface? 4. Replace the CD-ROM. 5. Replace display & NAVI control unit.
	Check GPS antenna feeder cable connection at display & NAVI control unit.

item	COIOI			eliminated, further repair work is not required.)
	Green	_	GPS antenna is connected to display & NAVI control unit correctly.	_
"GPS Antenna" (GPS antenna connection)	Yellow	Connection to the following unit is abnormal. See the Service Manual for further diagnosis.	GPS antenna connection error is detected.	Check GPS antenna feeder cable connection at display & NAVI control unit. Visually check GPS antenna feeder cable. If NG, replace GPS antenna assembly. Replace GPS antenna.
	Green	_	No failure is detected.	_
	Red	[*** is abnormal.]	Display & NAVI control unit is mal- functioning.	Replace display & NAVI control unit.
	Gray	Self-diagnosis for CD- ROM DRIVER of DISP & NAVI was not conducted due to no insertion of CD-ROM.	Any CD-ROM is not inserted or display & NAVI control unit is malfunctioning.	Confirm that map CD-ROM is not inserted into display & NAVI control unit. Replace display & NAVI control unit.
"Navigation" (Display & NAVI control unit)	DRIVER of DISP & is abnormal. See the Service Manual for ther diagnosis. Yellow CD-ROM is abnorm Please check the diagnosit to the foing unit is abnormal.	CD-ROM or CD-ROM DRIVER of DISP & NAVI is abnormal. See the Service Manual for fur- ther diagnosis.	Display & NAVI control unit judges that inserted CD-ROM is malfunctioning. Map CD-ROM or CD-ROM driver of the unit is malfunctioning.	Confirm the disk is installed correctly (not up side down.) Perform "CD-ROM VERSION CHECK" in EL-368 to confirm whether correct CD-ROM is inserted or not. Check the disk surface. Are there
 ,		CD-ROM is abnormal. Please check the disc.	Inserted map CD-ROM can not be read. Map CD-ROM or CD-ROM driver of the unit is malfunctioning.	any scratches, abrasions or pits on the surface? 4. Replace the CD-ROM. 5. Replace display & NAVI control unit.
		Connection to the following unit is abnormal. See the Service Manual for further diagnosis.	GPS antenna connection error is detected.	Check GPS antenna feeder cable connection at display & NAVI control unit. Visually check GPS antenna feeder cable. If NG, replace GPS antenna assembly. Replace GPS antenna.

Confirmation/Adjustment Mode

Confirmation/Adjustment Mode "ERROR HISTORY" MODE

=NAEL0237

NAFL0237S01

Description

MA

In this mode, historical errors of the system are displayed with the following data.

How many times the error was detected

The last time data when the error was detected

The last place where the error was detected

NOTE:

The number of errors can be counted up to 50 times. More than 51 times will be indicated as 50 times.

EG

LC

Malfunction of the GPS board (inside the display & NAVI control unit) will result in the display of incorrect time data.

When an error occurs, an incorrect position marker appears on the display. The accuracy of the display data (position marker) will be affected.

GL

MIT

AT



Display Diagnosis Diagnostic Signals from the Car **Navigation** Initialize Location

Previous

SEL588X

Confirmation/Adjustment

■ Select one of the following.

How to Perform

NAFI 0237S0102

Start the engine.

Push both "MAP" and "D/N" switch at the same time for more than 5 seconds.

PD

Touch "Confirmation/ adjustment".

AX


SU

Touch "Navigation".


Touch "Error history".

HA

SC

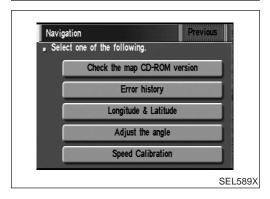

Confirmation/Adjustment Mode (Cont'd)

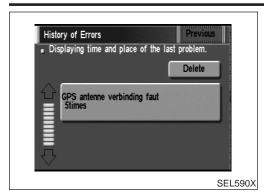

- 6. If trouble items are displayed with time count, repair/replace the system according to "Error history" TABLE, EL-365.
- 7. If necessary, touch error item to display the time when the error was detected and the place where the error was detected.
- 8. After repairing the system, erase the diagnosis memory.

NOTE:

When the display & NAVI control unit must be replaced, do not erase the diagnosis memory for further inspection of malfunctions.

- a. Start the engine.
- b. Push both "Map" and "D/N" switches at the same time for more than 5 seconds.
- c. Touch "Confirmation/ adjustment".
- d. Touch "Navigation".
- e. Touch "Error history".
- f. Touch "Delete".
- g. Touch "Yes".

SMART C/U - PREVIOUS

Confirmation/Adjustment Mode (Cont'd)

"ERROR HISTOR)		=NAEL0237S02
Description Diagnosis/service procedure		Refer- ence page
Communications malfunction between display & NAVI control unit and internal gyro	Perform self-diagnosis to confirm whether the display & NAVI control unit is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused by strong electromagnetic wave interference.	EL-360
Input malfunction of display & NAVI control unit and speed sensor	Check vehicle speed sensor signal in "Diagnosis for signals from the car" mode. If the input signal is not detected correctly, check harness for open or short between combination meter and display & NAVI control unit.	EL-367
	Perform self-diagnosis to confirm whether the display & NAVI control unit	
Communications malfunction between display & NAVI control unit and GPS board is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused		EL-360
	ence.	
The transmission circuit of the GPS board frequency synchronization oscillator (inside the display & NAVI control unit) is conding an application frequency.	magnetic wave interference may have occurred. The GPS antenna may be in a	_
that is greater or less than the set value.	is usually a temporary malfunction.	
Internal malfunction of GPS board RAM	Perform self-diagnosis to confirm whether the display & NAVI control unit	_ _
trol unit.	is malfunctioning or not. If no failure is detected, a momentary and/or tempo-	EL-360
Malfunction of GPS board clock IC inside the display & NAVI control unit.	rary malfunction may have been caused by strong electromagnetic wave interference.	
_	Perform self-diagnosis to confirm GPS antenna connection. If no failure is detected, a momentary and/or tempo-	EL-368
	rary malfunction may have been caused by a strong impact.	
	Check power supply circuits for display & NAVI control unit.	EL-380
Power supply voltage for GPS board GPS antenna	Perform self-diagnosis to confirm GPS antenna connection.	EL-360
low.	3. If above diagnosis results are OK, a momentary and/or temporary malfunction may have been caused by a strong impact.	
CD-ROM driver malfunction (inside the display & NAVI control unit)	Perform self-diagnosis to confirm whether the display & NAVI control unit is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused by strong electromagnetic wave interference.	EL-360
	Communications malfunction between display & NAVI control unit and internal gyro Input malfunction of display & NAVI control unit and speed sensor Communications malfunction between display & NAVI control unit and GPS board The transmission circuit of the GPS board frequency synchronization oscillator (inside the display & NAVI control unit) is sending an oscillation frequency that is greater or less than the set value. Internal malfunction of GPS board RAM or ROM inside the display & NAVI control unit. Malfunction of GPS board clock IC inside the display & NAVI control unit. Power supply voltage for GPS board inside the display & NAVI control unit is low.	Communications malfunction between display & NAVI control unit and internal gyro Perform self-diagnosis to confirm whether the display & NAVI control unit is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused by strong electromagnetic wave interference. Check vehicle speed sensor signal in "Diagnosis for signals from the car" mode. If the input signal is not detected correctly, check harness for open or short between combination meter and display & NAVI control unit. Communications malfunction between display & NAVI control unit and GPS board frequency synchronization oscillator (inside the display & NAVI control unit) is sending an oscillation frequency that is greater or less than the set value. Internal malfunction of GPS board RAM or ROM inside the display & NAVI control unit. Internal malfunction of GPS board RAM or ROM inside the display & NAVI control unit. Malfunction of GPS board clock IC inside the display & NAVI control unit. Perform self-diagnosis to confirm whether the display & NAVI control unit is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused by strong electromagnetic wave interference. Perform self-diagnosis to confirm whether the display & NAVI control unit is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused by strong electromagnetic wave interference. Perform self-diagnosis to confirm GPS antenna connection. If no failure is detected, a momentary and/or temporary malfunction may have been caused by a strong impact. 1. Check power supply circuits for display & NAVI control unit is low. 2. Perform self-diagnosis to confirm GPS antenna connection. If no failure is detected, a momentary and/or temporary malfunction may have been caused by a strong impact. CD-ROM driver malfunction (inside the display & NAVI control unit) is malfunctioning or not. If no failure is detected, a momentary and/or tempora

Detected items	Description	Diagnosis/service procedure	Refer- ence page
Loading mechanism malfunction	_	Check that whether the disc can be inserted and ejected correctly. If the loading function does not operate correctly, replace NAVI & display control unit.	_
CD-ROM reading error	It is confirmed that the appropriate CD-ROM disc is positioned in the CD-ROM loader. However, no data can be read.	Perform self-diagnosis to confirm whether the inserted disc is malfunction-	EL-360
Malfunctioning of error correction for CD-ROM	Erroneous data is read from the CD-ROM. The errors cannot be corrected.	ing or not.	
CD-ROM focus error	CD-ROM data reading beam is out of focus.	Rough road driving might create CD skipping like music CD audio unit.	_
CD-ROM malfunction	_	Perform self-diagnosis to confirm whether the inserted disc is malfunctioning or not.	EL-360

Confirmation/Adjustment Mode (Cont'd)

"DIAGNOSTIC SIGNALS FROM THE CAR" MODE **Description**

In "Diagnostic Signals From the Car" mode, following input signals to the display & NAVI control unit can be checked on the display.

MA

EM

LC

EC

Item	Indication	Vehicle condition	
Vehicle	ON	Vehicle speed is greater than 0 km/h (0 MPH).	
Speed*	OFF	Vehicle speed is 0 km/h (0 MPH).	
Light	ON	Lighting switch is in 1st or 2nd position.	
Light	OFF	Lighting switch is in "OFF" position.	
IGN	ON	Ignition switch is in "ON" position.	
IGN	OFF	Ignition switch is in "ACC" position.	
	ON	Selector/shift lever is in "Reverse" position.	
REVERSE*	OFF	Selector/shift lever is in other than "Reverse" position.	

^{*:} When ignition switch is in "ACC" position, indication will be changed to "-".

MT

AT

GL

How to Perform

NAEL0237S0302

- Start the engine.
- Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.
- Touch "Confirmation/ adjustment".

PD


AX


SU


Touch "Diagnostic Signals from the Car".

HA


SC

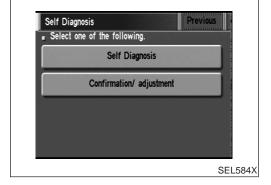

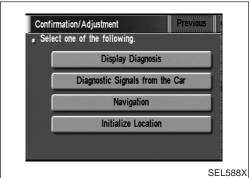


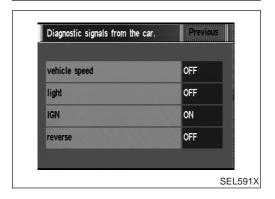


Then "Diagnostic Signals from the Car" mode is performed.

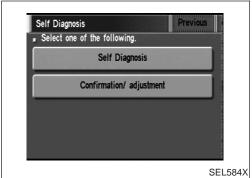

Confirmation/Adjustment Select one of the following. Display Diagnosis Diagnostic Signals from the Car Navigation Initialize Location

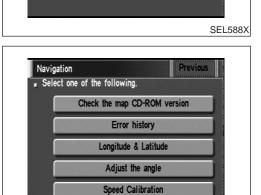

SEL589X

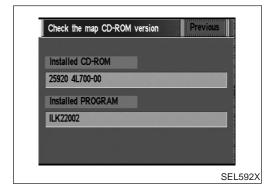

"CHECK THE MAP CD-ROM VERSION" MODE How to Perform

=NAEL0237S04 NAEL0237S0401

1. Start the engine.

- 2. Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.
- 3. Touch "Confirmation/ adjustment".

4. Touch "Navigation".

5. Touch "Check the map CD-ROM version".

6. The version (parts number) of CD-ROM loaded to the display and NAVI control unit will be displayed.

"DISPLAY DIAGNOSIS" MODE

Description


=NAEL0237S05

Use the "Diagnosis Display" mode to check the display color brightness and shading. The display & NAVI control unit must be replaced if the color brightness and shading are abnormal.

MA

LC

EG

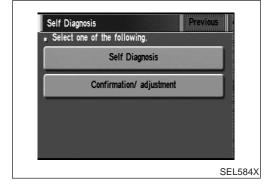

How to Perform

NAFL0237S0502

- Start the engine.
- 2. Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.
 - Touch "Confirmation/ adjustment".

MT

GL

AT Touch "Display Diagnosis".

TF

PD


 $\mathbb{A}\mathbb{X}$

SU

HA


SC

EL

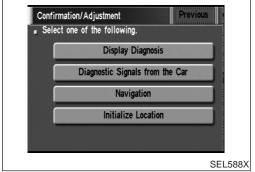

Diagnose the Display Previous Select one of the following. Display Color Spectrum Bar Display Gradation Bar SEL593X

- Touch "Display color spectrum bar" or "Display gradation bar".
- Then color bar/gray scale will be displayed.

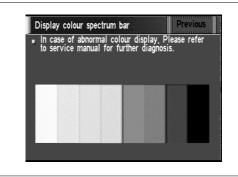




"LONGITUDE & LATITUDE" MODE

Description

NAEL0237S06


The "Longitude & Latitude" is used to confirm the longitude and latitude of some optional area point.

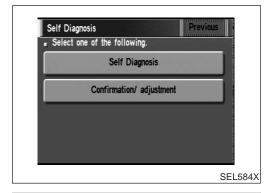

How to Perform

NAEL0237S0602


- 1. Start the engine.
- 2. Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.
- 3. Touch "Confirmation/ adjustment".

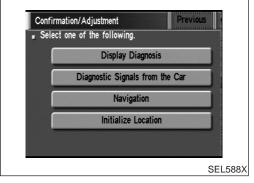

4. Touch "Navigation".



5. Touch "Longitude & Latitude".

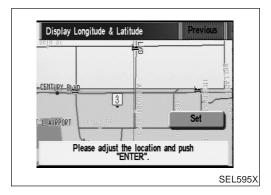

- 6. Adjust the pointer with using the joystick and touch "Set".
- 7. The longitude and latitude are displayed.

"ADJUST THE ANGLE" MODE

Description

=NAEL0237S07


If the display indicates a larger or smaller turning angle than the actual turning angle, the gyro (angular speed sensor) sensing values must be checked.

MA

In case that the vehicle on the display makes larger angle turn than reality, touch "-". In case that the vehicle on the display makes smaller angle turn than reality, touch "+".

LC

EC

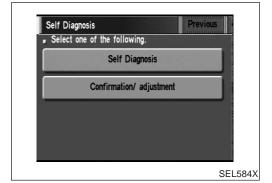

How to Perform

NAFL0237S0702

- Start the engine.
- Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.

Touch "Confirmation/ adjustment".

MIT

GL

Touch "Navigation".

AT

5. Touch "Adjust the angle".

AX


SU

HA


SC

EL


- Touch "Left Turn" to adjust the angle to the left. Touch "Right Turn" to adjust the angle to the right.
- Touch "+" to increase the angle change coefficient or "-" to reduce the angle change coefficient.
- Touch "Set" to save the changed values in memory.
- Then the vehicle turning angle on the display has adjusted.

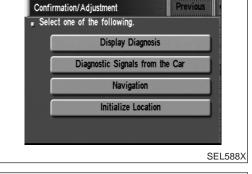




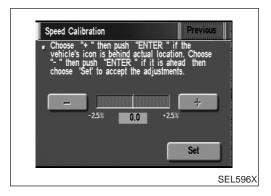

=NAEL0237S08

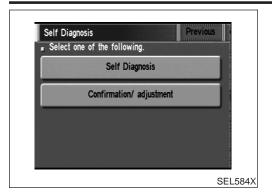

Navigation Previous Select one of the following. Check the map CD-ROM version Error history Longitude & Latitude Adjust the angle Speed Calibration

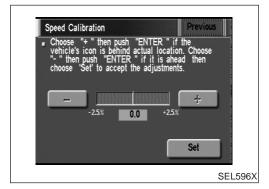

SPEED CALIBRATION

1. Start the engine.

- 2. Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.
- 3. Touch "Confirmation/ adjustment".
- 4. Touch "Navigation".
- 5. Touch "Speed Calibration".

- 6. Touch "+" or "-" to adjust the distance change coefficient.
- To make the distance change coefficient smaller, touch "-".
- To make the distance change coefficient larger, touch "+".
- 7. Touch "Set".

SMART C/U - PREVIOUS


Setting Mode

Setting Mode APPLICATION ITEMS

=NAEL0238

IΔFI	0238501	

		INAELU236301	
Mode	Description	Reference page	
GPS Information	The GPS includes longtitude, latitude and altitude (distance above sea level) of the present vehicle position, and current date and time for the area in which the vehicle is being driven. Also indicated are the GPS reception conditions and the GPS satellite position.	EL-373	[
Quick Stop Customer Setting	One facility of your selection can be added to your Quick Stop.	EL-376	[
Route Priorities	Priorities of search request and automatic re-searching can be set for route search.	EL-377	[
Tracking	Tracking to the present vehicle position can be displayed.	EL-377	
Display Setting	The following display settings can be customized. • Display color (Day mode or Night mode) • Brightness of display	EL-375	[
Heading	Heading of the map display can be customized for either north heading or the actual driving direction of the vehicle.	EL-378	(
Nearby Display Icons	Icons of facilities can be displayed. Facilities to be displayed can be selected from the variety of selections.	EL-379	[
Adjust Current Loca- tion	Current location of position marker can be adjusted. Direction of position marker also can be calibrated when heading direction of the vehicle on the display is not matched with the actual direction.	EL-374	L
Avoid Area Setting	Particular area can be avoided when routing.	_	
Beep On/Off	Beep sounds which correspond to the system operation can be activated/deactivated.	EL-375	
Clear Memory	Address book, Previous destination or Avoid area can be deleted.	EL-379	[

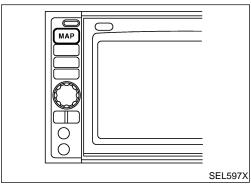

View STurn by ORT AVION OR Cancel UNKNOWN STREET NAME SEL598X

HOW TO PERFORM CONTROL PANEL MODE

NAEL0238S02

1. Start the engine.

2. Push "MAP" switch.

• For further procedures, refer to the following pages which describe each application item of the control panel mode.

ST RS

 $\mathbb{A}\mathbb{X}$

SU

BR

"GPS INFORMATION" SETTING

1. Start the engine.

2. Push "MAP" switch.

3. Touch "Setting".


NAEL0238S03

HA


BT

SC


EL

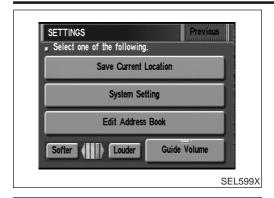


4. Touch "System Setting".

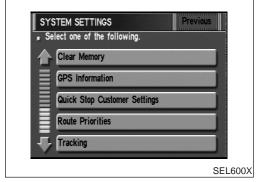

5. Touch "GPS Information".

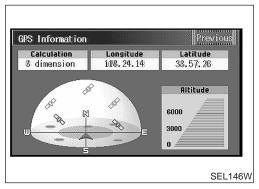


6. Then GPS information will be displayed.

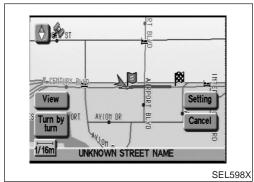

"ADJUST CURRENT LOCATION" SETTING


NAEL0238S04

- 1. Start the engine.
- 2. Push "MAP" switch.
- 3. Touch "Setting".
- 4. Touch "System Setting".

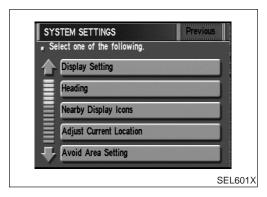

5. Touch "Adjust Current Location".

Setting Mode (Cont'd)

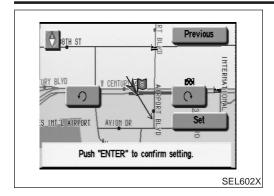

Touch "\cap" or "\cap" to calibrate the heading direction. (Arrow 6. marks will rotate corresponding to the calibration key.)

7. Touch "Set". Then the vehicle mark will be matched to the arrow mark.

Display will show "Heading direction has been calibrated" and then go back to the current location map.

MA

LC

EC

NAFL0238S05

UNKNOWN STREET NAME

BEEP ON/OFF SETTING

Start the engine.

Push "MAP" switch.

Touch "Setting". 3.

Touch "System Setting".

Touch "Beep on/off".

GL

MIT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

Touch "On" or "Off" icon.

location map.

DISPLAY SETTING

Description

If you want the beep sound, select "ON".

If you do not want the beep sound, select "OFF". Push "MAP" switch, then the display will go back to the current

ST

NAEL0238S06


HA


The following display setting can be changed in this mode. Dimmer operation (when lighting switch is turned on.)


SC


Display color (Day mode or Night mode)

Brightness of display

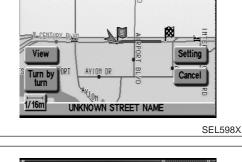

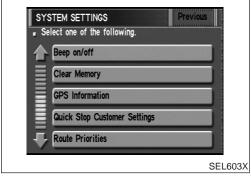

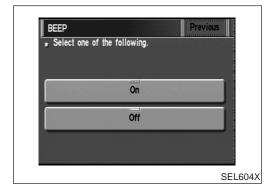

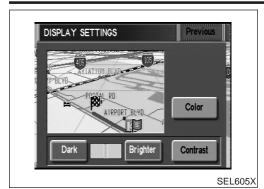

DISPLAY COLOR SETTING

Start the engine.

- Push "MAP" switch.
- 3. Touch "Setting".
- Touch "System Setting".
- Touch "Color". Display color will change to Day mode/Night mode.
- Touch "Previous". 6.

NOTE:

- Display color can be changed independently when lighting switch is turned on and off.
- Initial setting of the color is as follows: When lighting switch is turned off: Day mode When lighting switch is turned on: Night mode

Day mode: White background Night mode: Black background

DISPLAY SETTINGS Previous Color Contrast SEL605X

BRIGHTNESS SETTING

NAFI 0238508

NAEL0238S07

- Start the engine.
- Push "MAP" switch. 2.
- Touch "Setting".
- Touch "System Setting".
- Touch "Bright" or "Dark" to adjust the brightness of display.
- Touch "Previous".


NOTE:

Display brightness can be adjusted independently when lighting switch is turned on and off.


"QUICK STOP CUSTOMER SETTING" MODE

NAEL0238S09

- 1. Start the engine.
- Push the "MAP" switch.
- Touch "Setting". 3.
- Touch "System Setting".

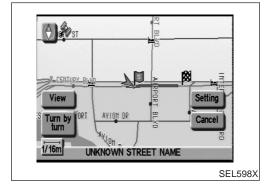

Touch "Quick Stop Customer Setting".

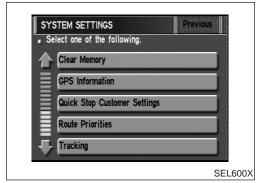

Setting Mode (Cont'd)




6. Select from the itemized list.

GI

MA

LC

EG

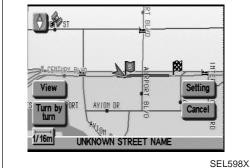

"ROUTE PRIORITIES" MODE

NAFL0238S10

Start the engine.

2. Push the "MAP" switch.

Touch "Setting". 3. Touch "System Setting".

GL

MT

AT

TF

PD

SU

BR


NAEL0238S11

SC

HA

EL

EL-377

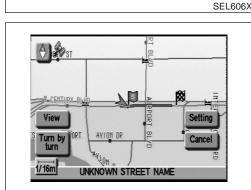

Touch "Route Priorities".

6. Select from the itemized list.

Shortest Time

SYSTEM SETTINGS ■ Select one of the following.

> Clear Memory GPS Information

Route Priorities

Tracking

Quick Stop Customer Settings

SEL600X




"TRACKING" MODE


1. Start the engine.

Push the "MAP" switch.


Touch "Setting".

Touch "System Setting".

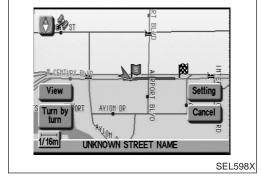

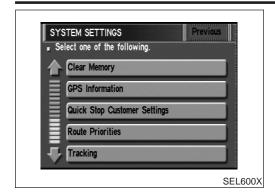

5. Touch "Tracking".

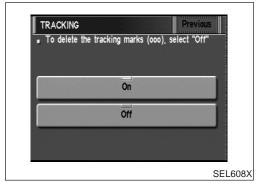


6. Touch the "On" or "Off" icon.

- If you don't need a trail on the map, select "Off".
- If you need a trail on the map, select "On".
- 7. Push the "MAP" switch to return the display to the current location map.

NOTE:


When a trail display is turned OFF, trail data is erased from the memory.

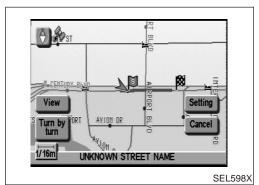


"HEADING" MODE

NAFI 0238S12

- 1. Start the engine.
- 2. Push the "MAP" switch.
- 3. Touch "Setting".
- 4. Touch "System Setting".

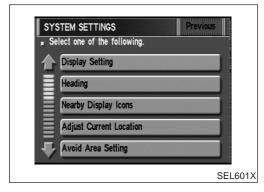


5. Touch "Heading".

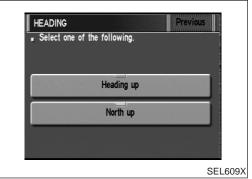



- 6. Touch the "Heading up" or "North up" icon.
- To display North up, select "North up".
- To display the car heading up, select "Heading up".
- 7. Push the "MAP" switch, then the display will go back to the current location map.


Setting Mode (Cont'd)

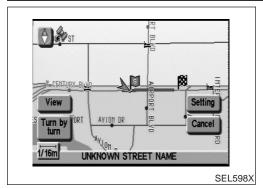



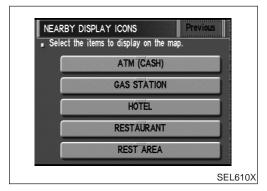

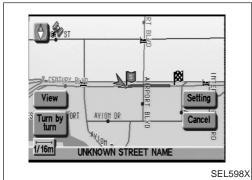

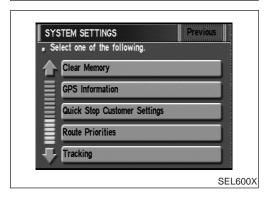

"NEARBY DISPLAY ICONS" MODE

1. Start the engine.

- 2. Push the "MAP" switch.
- 3. Touch "Setting".
- 4. Touch "System Setting".

5. Touch "Nearby Display Icons".

Select and touch the itemized list.

7. Push the "MAP" switch to return the display to the current location map.

"CLEAR MEMORY" MODE

1. Start the engine.

2. Push the "MAP" switch.

3. Touch "Setting".

4. Touch "System Setting".

Touch "Clear Memory".

MA

NAEL0238S13

EM

LG

EG

35

GL

MT

AT

TF

PD

SU


BF

NAEL0238S14

HA

SC

EL

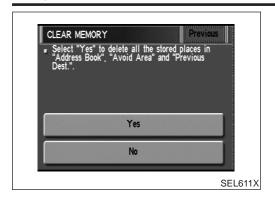

6. To delete all the stored places in the "Address Book", "Avoid Area" and "Previous Dest.", select "Yes".

Trouble diagnoses SYMPTOM CHART

NAEL0239


NAEL0239S01

		NAEL0239S01
Symptom	Diagnoses/service procedure	Reference page
Any function of the system does not operate.	Check power supply and ground circuit for display & NAVI control unit.	
Strange screen color or	1. Check "DISPLAY SETTING".	EL-375
unusual screen brightness.	2. Check display in "Diagnosis of Display" MODE.	_
The display is not dimmed	1. Check "DISPLAY SETTING".	EL-375
when turning lighting switch to ON.	Check lighting switch signal input to display & NAVI control unit correctly in "Diagnosis for the signals from the car" MODE.	EL-367
No navigation guide voice	Check "Voice Guidance Setting".	_
are heard from both front speakers.	2. Check voice guide operation.	EL-384
Beep does not sound when the system guides route.	Check "BEEP ON/OFF SETTING".	EL-375
Position marker does not trace along the route being traveled.	Go to "WORK FLOW FOR NAVIGATION INSPECTION".	EL-381
Position marker does not indicate forward or backward movement.	Check reverse signal input to display & NAVI control unit correctly by "Diagnosis for the signals from the car" MODE.	EL-367
Radio wave of GPS cannot be received. (GPS marker	Is there anything obstructing the GPS antenna on the rear parcel finisher? (GPS antenna located under the rear parcel finisher.)	_
on the display does not	2. Check GPS radio wave receive condition in "GPS INFORMATION SETTING".	EL-373
become green color.)	3. Check GPS antenna in "Self Diagnosis" MODE.	EL-360
Heading direction of position	1. Perform "ADJUST CURRENT LOCATION" SETTING.	EL-374
marker does not match vehicle direction.	2. Go to "WORK FLOW FOR NAVIGATION INSPECTION".	EL-381
Stored location in the address book and other memory functions are lost when battery is disconnected or becomes discharged.	Stored location in the address book and other memory functions may be lost if the battery is disconnected or becomes discharged. If this should occur, charge or replace the battery as necessary and re-enter the information.	_
Map appears grey and cannot be scrolled.	The current location in the memory is out of the map data area. Perform "Initialize Location".	EL-396

Trouble diagnoses (Cont'd)

WORK FLOW FOR NAVIGATION INSPECTION

NAEL0239S02 G

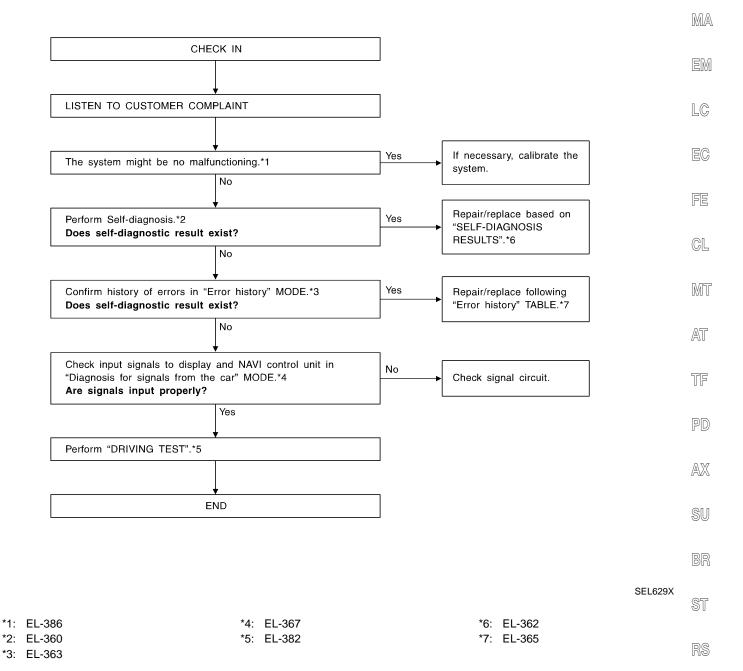

BT

HA

SC

DRIVING TEST

AEL0239S

During the driving test, diagnose the system by checking the difference of symptoms with each sensor ON or OFF.

Test pattern 1

Test method in which current position adjustment is not made according to GPS data.

Remove the GPS antenna connector from the display & NAVI control unit. Drive the vehicle.
 Before driving the vehicle, perform "ADJUST CURRENT LOCATION" (EL-374).

Test pattern 2

Test procedure in which map matching is not used.

 Before driving the vehicle, perform "ADJUST CURRENT LOCATION" (EL-374). With the ignition switch OFF and the map CD-ROM removed from the display & NAVI control unit, drive the vehicle. After driving the vehicle, reinstall the map CD-ROM. Compare the saved driving tracks for the vehicle's current location with roads on the map.

Example


<The position marker consistently indicates the wrong position when driving in the same area. Determine if this is the result of the map matching function or the GPS function.>

- → Perform test pattern 1.
- <To verify the accuracy of the road configuration shown on the display>
- → Perform test patterns 1 and 2.
- Compare the map and the saved driving tracks. The precision of the saved driving tracks is within several hundred meters.
- <To make distance calibration and adjustments>
- → Perform test patterns 1 and 2.
- Make adjustments by driving the vehicle over a known course (highway or other road where distances are clearly marked).
 Calibrate the distance against the known distance. Use the formula below.

Calibration value = Screen display distance/Actual distance

SMART C/U - PREVIOUS

Trouble diagnoses (Cont'd)

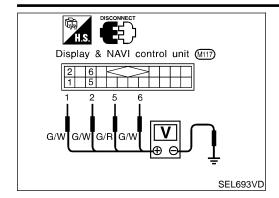

POWER SUPPLY AND GROUND CIRCUIT CHECK FOR DISPLAY & NAVI CONTROL UNIT


Power Supply Circuit Check

=NAEL0239S04 NAEL0239S0401

Terminal			Ignition switch	
(+)	(-)	OFF	ACC	ON
1	Ground	Battery voltage	Battery voltage	Battery voltage
2	Ground	Battery voltage	Battery voltage	Battery voltage
5	Ground	0V	0V	Battery voltage
6	Ground	0V	Battery voltage	Battery voltage

If NG, check the following.

- 7.5A fuse [No. 11, located in the fuse block (J/B)]
- 10A fuse [No. 10, located in the fuse block (J/B)]
- 15A fuse [No. 4, located in the fuse block (J/B)]
- Harness for open or short between fuse and display & NAVI control unit

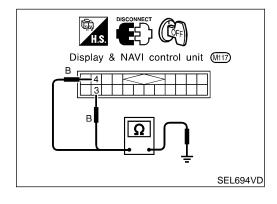

Ground Circuit Check

Terminals Continuity

3 - Ground Yes

4 - Ground Yes

G[

MA

EM

LG

EG

FE

GL

MT

AT

5 45

TF

PD

AX

SU

BR

ST

RS

BT


HA

SC


FL

VOICE CHIDE OPERATION CHECK


	VOICE GUIDE OPERATION CHECK =NAEL02394				
1	PRELIMINARY CHECK				
2. Ins 3. Try	1. Turn ignition switch to ACC position. 2. Insert the music CD into the radio and CD player. 3. Try to play the music CD. Is the sound emitted from all speakers?				
	Yes or No				
Yes	Yes GO TO 2.				
No	No Repair or replace audio system.				

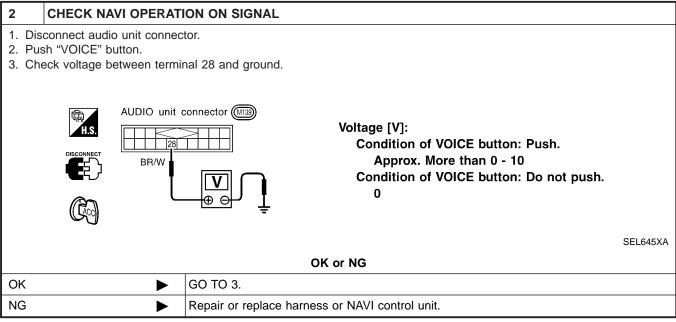

Refer to "AUDIO" in EL-157.

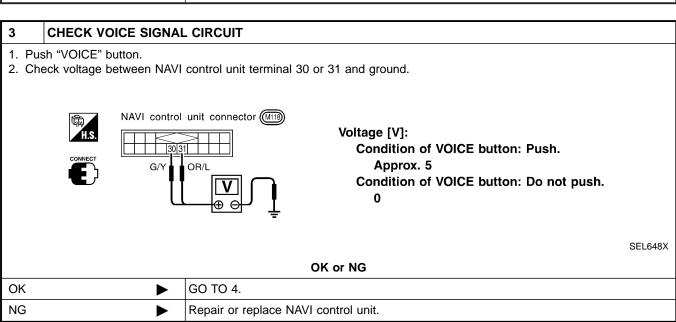

Trouble diagnoses (Cont'd)

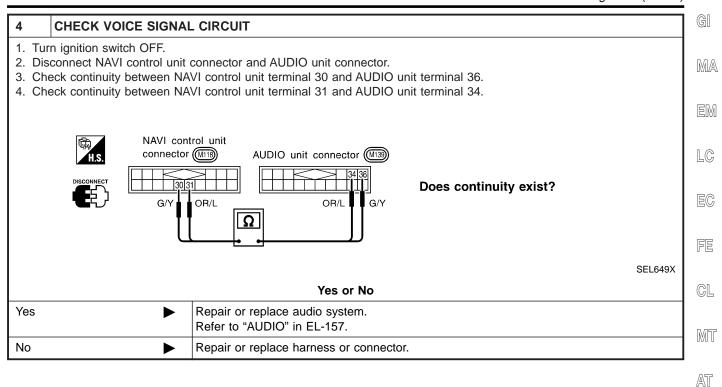

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

This Condition is Not Abnormal

EXAMPLE OF BASIC OPERATIONAL ERRORS

=NAEL0240 NAEL0240S01

Symptom	Possible cause	Repair order	
No image is displayed.	Monitor brightness control is set to full dark.	Readjust monitor brightness.	
Map does not appear	Map CD is not inserted or inserted upside down.	Insert the map CD with the label facing up.	
on display.	Map mode is turned OFF.	Press the "MAP" button.	
No guide tone is heard.	Voice guide adjustment OFF/Volume is set to the	Adjust the voice guide level.	
Voice guide volume is too high or too low.	lowest or highest level.		
Dark display/Slow image movement	Low vehicle interior temperature	Wait until vehicle interior temperature rises to appropriate level.	
Small black or white dots appear on the screen.	Unique liquid crystal display phenomena	No problem	
"Unable to read CD" message appears	Map CD surface is tainted/CD surface is partially	Check map CD surface. If dirty, wipe clean with a soft cloth.	
only during specified operation.	scratched.	If map CD surface is damaged, replace the CD.	

Area place names are not displayed.

If area place names do not appear on the map display, these names may not be available. Use the BIRD-VIEW® flat surface map display function. Display output may differ. Note the items related to BIRDVIEW® below.

- Priority is given to the display of place names in the direction of vehicle travel.
- Extended display of vehicle travel distance for both surfaces and steering angle (flat directional changes). This phenomenon disappears after the display image has been replaced by another one.
- The names of route and area might vary between the immediate front area and distance front area.
- Alphanumeric display characters are limited to maintain display simplicity and clarity. Display details may differ with time and place.
- Identical place and road names may appear on the display at more than one location.

MA

LC

EC

GL

MT

AT

TF

PD

AX

SU


HA

SC

This Condition is Not Abnormal (Cont'd)

EXAMPLE OF CURRENT VEHICLE POSITION MARKER ERROR

The navigation system reads the vehicle distance and steering angle data. Because the vehicle is moving, there will be an error in the current position indication. After the error appears, drive the vehicle for a short distance. Stop the vehicle. If the position marker does not return to its original position, perform "ADJUST CURRENT LOCATION" (EL-374).

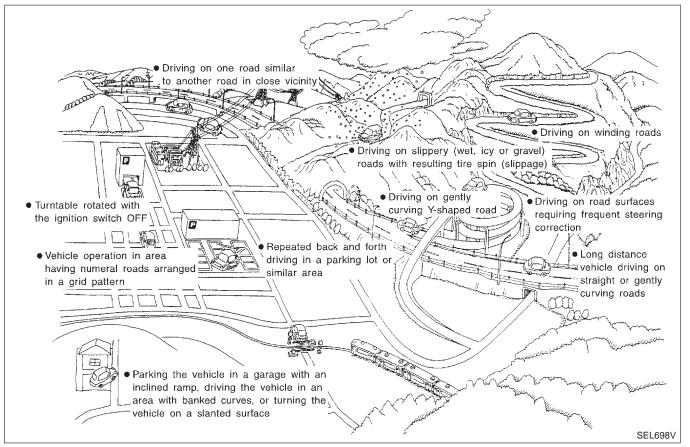

	Possible cause	Drive condition	Service procedure	
	Slippery road surface	On wet, icy, or gravel road where frequent wheel slippage occurs, distance calculations may be erroneous. The position marker may show the vehicle to be in inaccurate position.		
Area	Slanted area	Hilly areas where the road has banked curves. When the vehicle enters these banked curves, there may be an error in steering angle measurement. The position marker may show the vehicle to be in inaccurate position.		
Map data	Map display for a given road does not appear. New road SEL699V	When the vehicle is driven on a newly constructed road that does not appear on the existing map. Map marking and calibration are not possible. The position marker may indicate inaccurate position in close proximity to the actual position. Subsequently, when the vehicle is driven on a road which is available as map data, the position marker may still indicate an inaccurate position.	miles), perform "ADJUST CUF RENT LOCATION" (EL-374). I necessary, perform "SPEED CALIBRATION" (EL-372).	
	The vehicle is driven on a road whose course has been altered (usually to improve the road or to eliminate some hazard).	When the map data shown on the display and the actual conditions are different. Map matching will not be possible. The position marker may indicate inaccurate position in close proximity to the actual position. If the vehicle is driven on the indicated road, further errors may occur.		
Vehicle	Use of tire chains (Stormy weather)	Tire chains will affect distance sensing. The position marker may indicate inaccurate position.	If the position marker does not move to the correct position even after the vehicle has been driven approximately 10 km (6 miles), perform "SPEED CALIBRATION" (EL-372). After removing the tire chains, sensing accuracy may recover by itself.	

SMART C/U - PREVIOUS

This Condition is Not Abnormal (Cont'd)

	Possible cause	Drive condition	Service procedure
	Driving immediately after starting engine.	The gyro (angular velocity sensor) needs about 15 seconds after the engine is started to precisely sense the angular velocity. Directional sensing errors will occur if the vehicle is moved immediately after starting the engine. The position marker may indicate inaccurate position.	Wait a few moments between starting the engine and actually driving the vehicle.
Operation	Continuous driving for long distances (non-stop)	When the vehicle is driven continuously without stopping over a long distance, errors in directional sensing may occur. The position marker may indicate inaccurate position.	Stop the vehicle. Perform "SPEED CALIBRATION" (EL-372).
	Rough or violent driving	Wheel spinning (peeling out) or similar rough driving techniques can adversely affect sensing accuracy. The position marker may indicate inaccurate position.	If the position marker does not move to the correct position even after the vehicle has been driven approximately 10 km (6 miles), perform "ADJUST CURRENT LOCATION" (EL-374).
Posi- tional calibra-	Positional calibration precision Within 1 mm (0.04 in) SEL701V	If current vehicle location is roughly set, the system may be unable to locate the road that the vehicle is traveling on. (This is especially true in an area where there are many roads.)	Perform "ADJUST CURRENT LOCATION" (EL-374) within a precision standard of 1 mm (0.04 in) on the display. Note: During calibration, use the most detailed map possible.
tion pro- cedures	Position calibration direction Direction calibration adjustment SEL702V	When calibrating the position, check the vehicle direction. If the vehicle direction is not correct, subsequent precision of current location will be affected.	Perform "ADJUST CURRENT LOCATION", refer to EL-374.

ST

RS

BT

HA

SC

EL

IDX

	Possible cause: —: Vehicle running: Indication		Drive condition	Service procedure	
	Y-intersection	SEL703V	In Y-intersections with a very gradual change in course, a directional sensing may be inaccurate. This may result in the position marker giving the wrong road indication.		
	Spiral road	OLLITOOT			
			On loop bridges and similar structures which result in a large and continuous turn, turning angle may be sensed inaccurately. As a result, the position marker may separate from the route on the map.		
		SEL704V			
Road shapes	Straight road	SEL705V	In long distance driving on a straight road or road with very gradual curves, map marking inaccuracies may occur. In such cases, the position marker may stray from the route being traveled during subsequent turns due to inaccurate distance calculation.	If the position marker does not move to the correct position even after the vehicle has bee driven approximately 10 km (6	
	Winding road	SEL706V	Directional sensing precision errors may occur when traveling on winding roads. During map matching, the position marker may stray to an adjacent road having a similar shape. Subsequent position marker error may occur.	miles), perform "Store place". required, also perform "ADJUST CURRENT LOCA- TION" (EL-374).	
	Grid-like road shape	SEL707V	Directional sensing and distance sensing, precision errors may occur because of many roads having a similar shape in the immediate area. During map matching, the position marker may stray to an adjacent road having a similar shape. Subsequent position marker error may occur.		
	Parallel roads				
			When driving on a parallel road, map matching errors may occur. Subsequent position marker error may also occur.		
		SEL708V			

This Condition is Not Abnormal (Cont'd)

	Possible cause: —: Vehicle running: Indication	Drive condition	Service procedure	G[
		When the vehicle is driven in a parking lot or similar area, such as in an		MA
	Parking lot or similar area	area not normally marked as a road on map, during map matching, the system may select nearby roads.		EM
	Parking lot	This error may continue after the vehicle exits the parking area and begins to run on ordinary roads. Vehicle operation in a parking area		LC
Loca-	SEL709V	may involve frequent turns and up and/or down operation. Directional sensing errors may occur leading to		EG
tion		subsequent route and position mistakes.		FE
	Turntable Turntable	When the ignition switch is OFF (the usual situation when the vehicle is on a turntable), the navigation sys-		CL
		tem receives no data from the gyro (angular velocity sensor). When the turntable rotates, no directional change is sensed. During subse-		MT
	SEL710V	quent vehicle operation, directional and route errors may occur.		AT

Position marker displays a completely different location

In circumstances such as those described below, GPS signal reception conditions may result in an erroneous position of the position marker. Perform "ADJUST CURRENT LOCATION" (EL-374).

NOTF:

- When GPS satellite signal reception conditions are poor, the position of position marker may be erroneous. If correction is not made immediately, the position marker error will be compounded and a completely different location will be indicated. In an area where GPS satellite signal reception conditions are good, the system can be returned to normal operation.
- The vehicle is driven aboard a car ferry or is towed for some distance with the ignition switch OFF. Vehicle movement is not sensed. Current location calculations do not occur and current location data does not appear on the display screen. Use GPS to accurately determine actual vehicle position. The system can be returned to normal operation when the GPS satellite signal reception conditions are good.

Position marker jumps

In circumstances such as those described below, the position marker may jump as a result of automatic current location corrections made by the system.

During map matching

During map matching, the position marker may jump from one spot to another. In this case, it may be corrected to a wrong road or to an area where no road exist.

GPS location correcting

Vehicle current location is sensed using the GPS data. Positional calibration is performed. The position
marker continues to be in the wrong position. It may jump about from one area of the screen to another.
In this case, it may be corrected to a wrong road or to an area where no road exist.


Position marker indicates that the vehicle is in the middle of an ocean or large river

The navigation system does not distinguish between land and water surfaces. In some cases, a position marker error may cause the display to show the vehicle above a water surface.

Position of position marker varies when the vehicle is repeatedly operated on the same road

Driving lane and steering wheel movement results in a variety of different positions of the position mark when traveling on the same road based on sensing results by the GPS antenna and gyro (angular velocity sensor). Slow locational correction using map matching

- The map matching function requires verification of local data. To make the map matching function, some distance needs to be driven.
- The map matching function may not provide accurate performance in an area where there are numerous parallel roads. Until the system judges the road characteristics, an incorrect position may be shown.

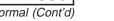

HA

EL

GPS signal reception conditions are good. However, the position mark does not return to its proper position.

- he system senses the vehicle location with an error of approximately 100 m (328 ft). Due to the limitation of precision, the position marker may be inaccurate even if the GPS signal reception condition is good.
- The navigation system uses GPS data to determine vehicle location. GPS data is compared with other locational sensing data during the map matching process. The system decides which data is more precise and uses that data.
- When the vehicle is stationary, GPS data cannot be used to make system corrections.

Area designations on the map display and the BIRDVIEW® display differ.

To prevent the display from becoming congested, alphanumeric information is abridged. [No problem]

Correct position of your vehicle is not displayed.

Vehicle position changed after ignition key was turned to the OFF position (Vehicle is transported on car ferry, car train, or by some other means).

[Operate vehicle for short time under GPS receiving conditions.]

The display does not change to night-time mode even though the light switch has been turned ON. Lights have been turned on. In "DISPLAY CHANGE" mode, night-time mode on display has been switched to day-time mode and still is.

[Turn lights on again. Set the display to night-time mode. Refer to EL-375.]

Map does not scroll even though the position of your vehicle is changed.

Present area does not appear on the display.

[Press the "MAP" switch.]

Vehicle position marker does not appear.

Present area does not appear on the display.

[Press the "MAP" switch.]

The map surface precision display (GPS satellite marker) still remains gray.

Vehicle is parked inside a building or in the shadow of a large building. This intercepts the GPS signal.

[Move the vehicle to a more open position.]

GPS signal is not received because objects are placed on the rear parcel shelf.

[Remove objects from the rear parcel shelf.]

GPS satellite position is bad.

[Wait until GPS satellite position improves.]

Vehicle position precision is bad.

The map surface precision display (GPS satellite marker) still remains gray.

[Refer to "The map surface precision display (GPS satellite marker) still remains gray" item (Symptoms)] Vehicle speed and elapsed distance is calculated from the vehicle speed pulse. This pulse is dependent upon tire size. If tire chains are used on the vehicle, accuracy will be affected (pulse rate will be too fast or too slow). The same is true if the system installed to your vehicle is removed and installed on another vehicle.

[Drive the vehicle at a speed higher than 30 km/h (19 MPH) for approximately 30 minutes. Automatic readjustment should occur. If it does not (remains too fast or too slow), distance calibration is required. Or, drive the vehicle for a short distance. Perform "SPEED CALIBRATION" (EL-372). After removing the tire chains,

sensing accuracy may recover by itself.]

Bad map data or system defect (same error consistently occurs in the same area)

ROUTE SEARCH/ROUTE GUIDE

EL0240S03

- If the present location or the destination location is displayed in the avoid area, it is not possible to search routes.
- If the avoid area is set to wide range area, it may not be possible to find appropriate routes or search for alternate routes.
- The automatic re-route calculates a return to the original route. Because of this, it may not be possible to search appropriate new routes. If you deviate from the original route and wish to select an appropriate new route, touch "Route Calculation".
- The automatic re-route function may sometimes require considerable time.
- Displayed route number and directional information at a highway junction may differ from the information posted on the actual road signs.
- Displayed street name information at a highway exit may differ from the information posted on the actual road signs.
- Street name information displayed on the enlarged intersection map may differ from the information posted on the actual road signs.

SMART C/U - PREVIOUS

GI

MA

This Condition is Not Abnormal (Cont'd)

- The enlarged intersection map may display an "Unknown Street" message at some street intersections.
- Because of road configuration, etc. the guide may finish early. If this occurs, follow the marker to reach your destination.
- Destination area side information (left side and right side) may differ from actual conditions because of data error.

Unable to Set Destination, Way Point, and/or Menu Items

Unable to Set Destination, Way Point, and/or Menu Items			
Symptom	Possible cause	Repair order	
Unable to search way points in re-search mode	A way point already crossed or determined to have been crossed.	If you desire to pass through a way point for a second time, reperform route edit.	
	Route search does not occur.	Set designation areas and perform route search.	
Turn list is not displayed.	Car marker does not appear on recommended route.	Drive on the recommended route.	
	Route guide is canceled.	Turn the route guide ON. (Push "VOICE" switch.)	
Automatic search does not function.	Vehicle is not running on search object route (road indicated by orange, brown or red line).	Drive the vehicle on the search object route or perform a manual route search. Note that all routes will be re-searched at this time.	
Unable to select detour route.	Vehicle is not running on recommended route.	Use the "RE-ROUTE" mode to search again or return to the recommended route.	
Detour route search results are identical to previous search.	All possible conditions were considered, but results are the same.	This is not abnormal.	
Unable to set a way point.	More than five way points have been previously set (and not cleared).	More than five way points cannot be specified at the same time. Break down into smaller segments and perform search.	
Unable to select starting point during route edit.	Starting point will normally be your present location during route edit.	This is not abnormal.	
Cannot select certain menu items.	While vehicle is running.	Park the vehicle in a safe area and perform operation.	

Voice Guide Information

NAEL0240S0302			
Symptom	Possible cause	Repair order	B
Voice guide does not function.	Voice guide is only available at certain intersections (marked with $\ref{9}$). In some cases, the guide is not available even when the vehicle makes a turn.	This is not abnormal.	S
	Vehicle is not running on recommended route.	Return to recommended route or reperform route search.	R
	Voice guide is OFF.	Set voice guide to the ON position.	
	Route guide is canceled.	Turn the route guide ON. (Push "VOICE" switch.)	B
The guide content does not correspond to actual conditions.	The content of the voice guide may vary depending on the type of junction.	Operate vehicle following the traffic rules and regulation.	H

Route Search Information

٩FI	024050303	

Symptom	Possible cause	Repair order
Proceeding in desired direction. However, route search in desired direction does not function.	Unable to find appropriate route in the desired direction.	This is not abnormal.

_ IDX

SU

Symptom	Possible cause	Repair order
No route is displayed.	No object route is searched near destination area.	Adjust position to wide road (brown) near destination area. In an area where traffic direction is displayed separately, pay close attention to the direction of travel. Set the destination area and the way point over the road.
	Starting point and destination areas are very near.	Move destination areas away from starting point on the screen.
Recommended route which has been passed disappears from the display.	The recommended route is divided into individual control segments. When way point 1 is passed, the data from the starting point to the way point 1 is erased.	This is not abnormal.
Search recommends roundabout route.	There may be special conditions for roads near the starting point and destination area (one-way traffic, etc.). A roundabout route may be displayed.	Slightly change starting point and destination area settings.
Landmark display does not show actual conditions.	Mistaken or missing map data may result in erroneous display.	Change map CD.
Recommended route drawn slightly away from starting point, way points, and destination area.	Course search data may not exist for closely positioned starting point, way points, and destination area shown on the map. Route guide starting point, way point, and destination point may be separated.	Set the destination area to the general route (indicated by a thick brown line). However, even if the selected route is a major one, appropriate route search data may not be available.

LOCATION OF CAR MARKER

NAFI 0240S04

- If the vehicle has been parked in a multi-level parking facility or underground parking facility, the car marker
 position may be inaccurate immediately after exiting the parking facility.
- The GPS accuracy is within ±100 m (300 ft). Even when receiving conditions are excellent, further positional correction may not occur.

STREET INDICATION

NAEL0240S05

- Street names displayed on the map may differ from the actual street names.
- An "Unknown Street" message may appear on the map in place of street name information.

RESEARCH

VAEL0240S06

- Position may be searched by house number. However, the displayed position and street may differ from the actual position and street.
- When position is searched using POI, the displayed position may differ from the actual position.
- Some data may not be available for new buildings and other structures in a map.


GPS ANTENNA

NAEL0240S07

- Do not place metal objects above the GPS antenna mounted on the rear parcel shelf. This will cause interference with signal reception.
- Do not place mobile telephones or vehicle radio transceivers in close proximity to the GPS antenna mounted on the rear parcel shelf. This may cause interference with signal reception.

Program Loading

NAEL0241

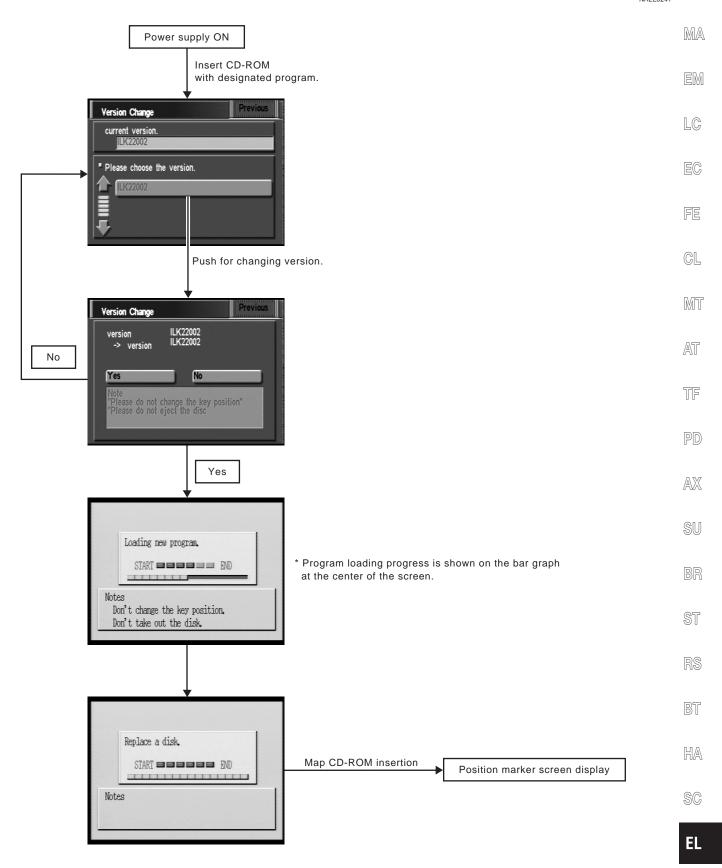

Note: Load the program only after the engine has been started.

SEL612X


Initialization

This procedure is for initializing the current location. Perform "Initialize Location" when the vehicle is transported a long distance by

Map with grey background appears and the vehicle location cannot be adjusted by scrolling the display when the vehicle location in the memory is out of the area of the inserted map data. Perform "Initialize Location" when this occurs.


NOTE:

- Only initialize the system when the display & NAVI control unit is replaced. If the system is initialized in other cases, it may cause inaccurate positioning of the position marker for a while.
- Initialize the system outside for receiving the radio wave from the GPS satellite.

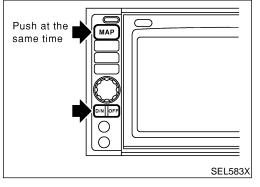


HOW TO PERFORM

Switch the navigation system mode to self-diagnosis by pushing both "MAP" and "D/N" switches at the same time for more than 5 seconds.

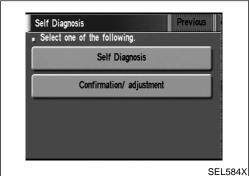


2. Touch "Confirmation/ adjustment".

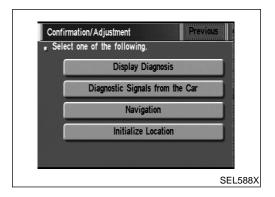

Touch "Initialize Location". Then the previous screen is displayed.

NAVIGATION SYSTEM

Initialization (Cont'd)

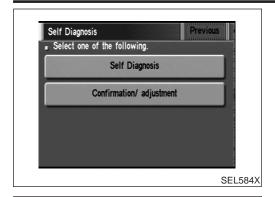

UNKNOWN STREET NAME

Save Current Location

System Setting

Edit Address Book

Guide Volume

1/16m

SETTINGS

Select one of the following.

Softer Louder

SYSTEM SETTINGS ■ Select one of the following. Clear Memory **GPS** Information

Quick Stop Customer Settings

Route Priorities Tracking

Setting

SEL598X

SEL599X

SEL600X

4. Push "Previous" switch.

MA

EM

LC

Push the "MAP" switch.

EC

Touch "Setting".

GL

Touch "GPS Information".

MIT

AT

7. Touch "System Setting".

TF

PD

AX

SU

More than one GPS satellite icon turns green. (It may take 1 to 15 minutes.)


HA

SC

EL


Drive the vehicle for a while* in order to change the receiving condition of the radio wave from the GPS satellite if the GPS icon does not turn green.

* The driving distance which is necessary depends on the receiving condition of the radio wave from the GPS satellite.

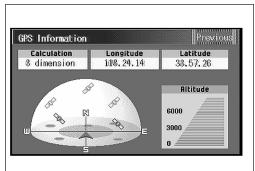

SEL146W


Initialization (Cont'd)

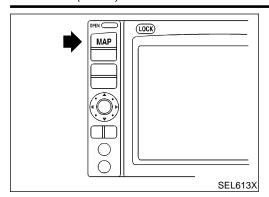

- 10. Push "MAP" switch and check the following.
- Confirm that the GPS icon on the map turns green.
- Then the position marker should show the current location.
- Position marker rotates corresponding to the movement of the vehicle.
- 11. Initialization is completed.

Engine Compartment

G[NAEL0129

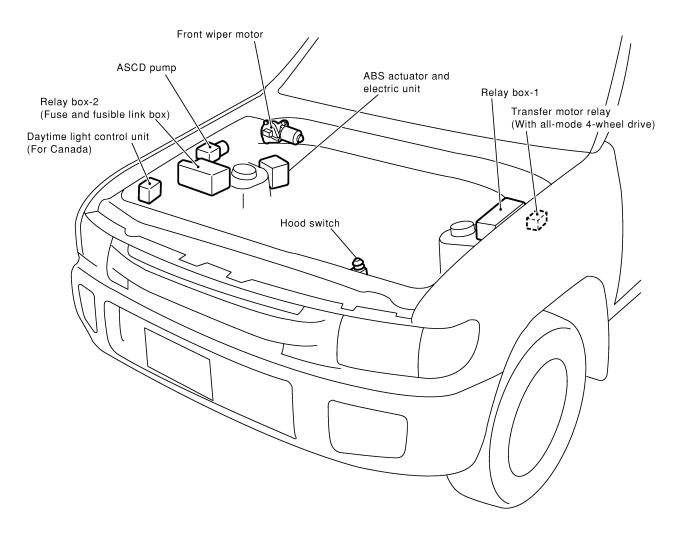

Fuse

Fuel pump

relay-2

Clutch interlock relay (With M/T)

Park/Neutral

position relay

ECM relay

(With A/T)

Fusible link



MA

























Tail lamp relay

A/C relay

Horn relay

Relay box-1

Headlamp LH relay

relay

Headlamp RH





















Rear window

Transfer shift low

relay (With all-mode 4-wheel drive)

Fule pump relay-1

Transfer shift Hi relay

(With A/T and part-time

ATP relay

Realay box-2 (FUSE and fusible

link box)

4-wheel drive)

(With all-mode 4-wheel drive)


Multi remote control relay


Front fog lamp relay

defogger relay

Passenger Compartment


NAEL0130

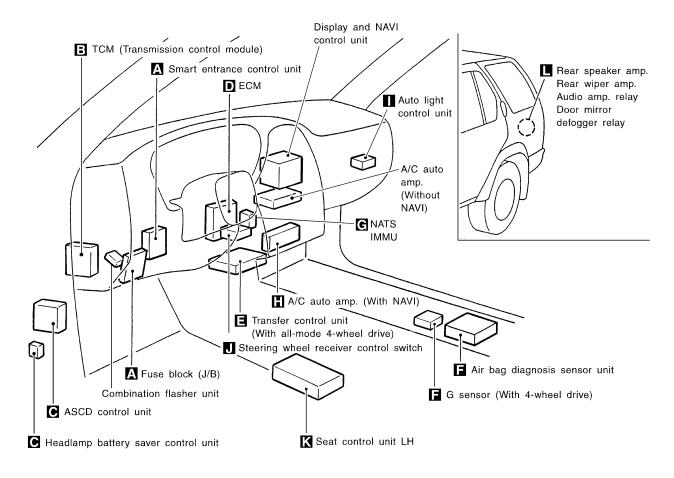

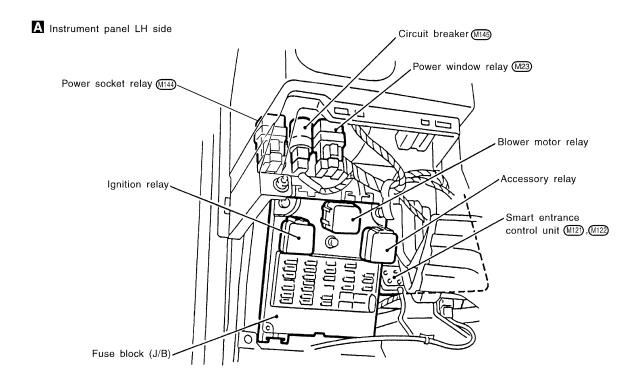


MEL312N

ELECTRICAL UNITS LOCATION

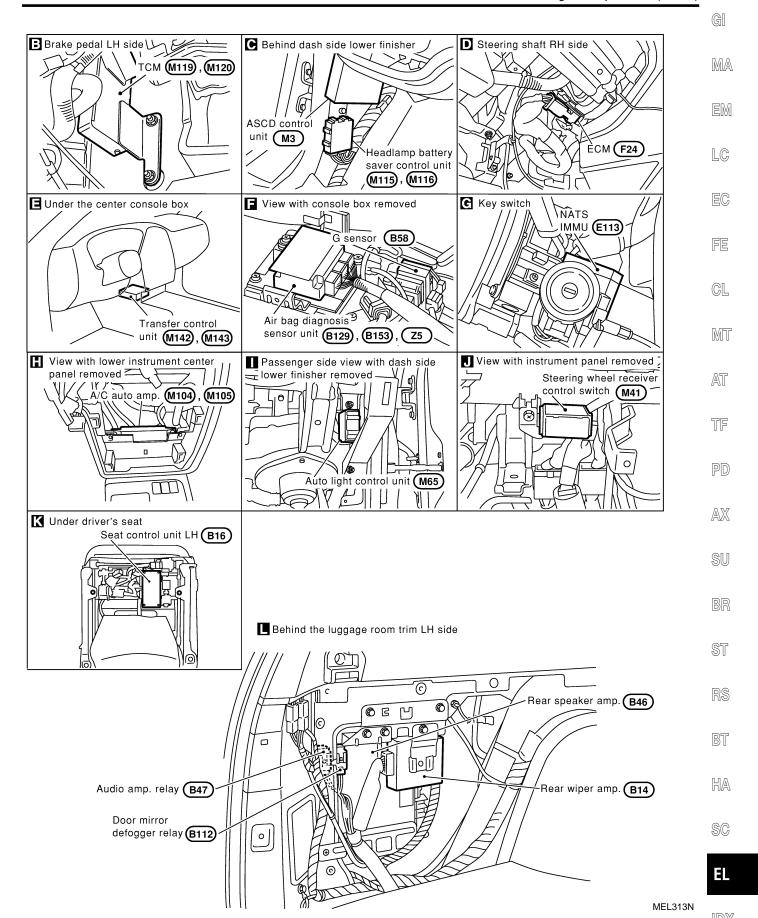

How to Read Harness Layout

NAEL0131

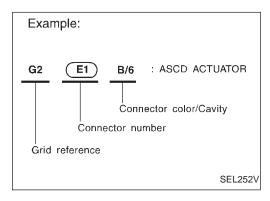

The following Harness Layouts use a map style grid to help locate connectors on the drawings:

- Main Harness
- Engine Room Harness (Engine Compartment)
- Engine Control Harness

TO USE THE GRID REFERENCE

NAEL0131S01


- 1. Find the desired connector number on the connector list.
- 2. Find the grid reference.
- 3. On the drawing, find the crossing of the grid reference letter column and number row.
- 4. Find the connector number in the crossing zone.
- 5. Follow the line (if used) to the connector.

CONNECTOR SYMBOL

NAEL0131S02

Main symbols of connector (in Harness Layout) are indicated in the below.

Connector time	Water proof type		Standard type	
Connector type	Male	Female	Male	Female
Cavity: Less than 4Relay connector	Ø	6		
Cavity: From 5 to 8			**	
Cavity: More than 9	_	_		\Diamond
Ground terminal etc.	_		Ø	2

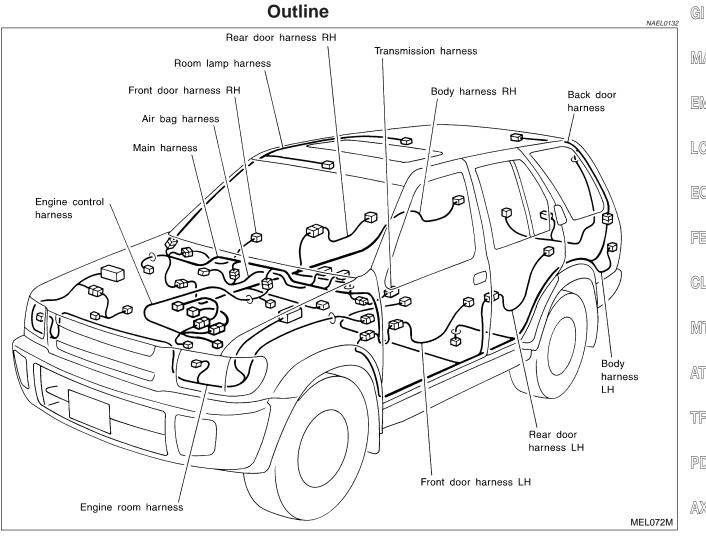

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR


ST


RS


BT


HA


SC

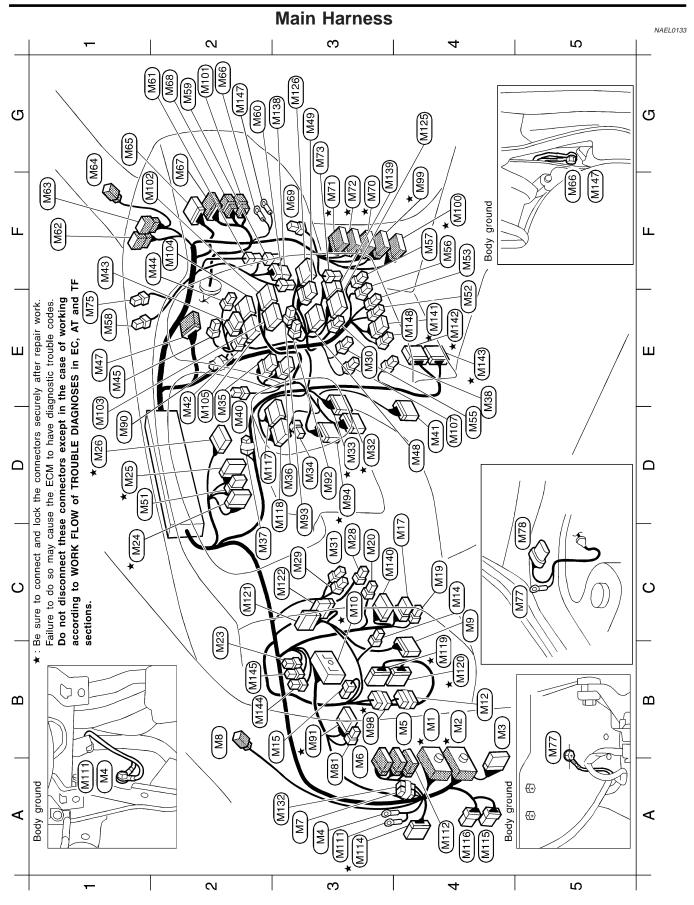

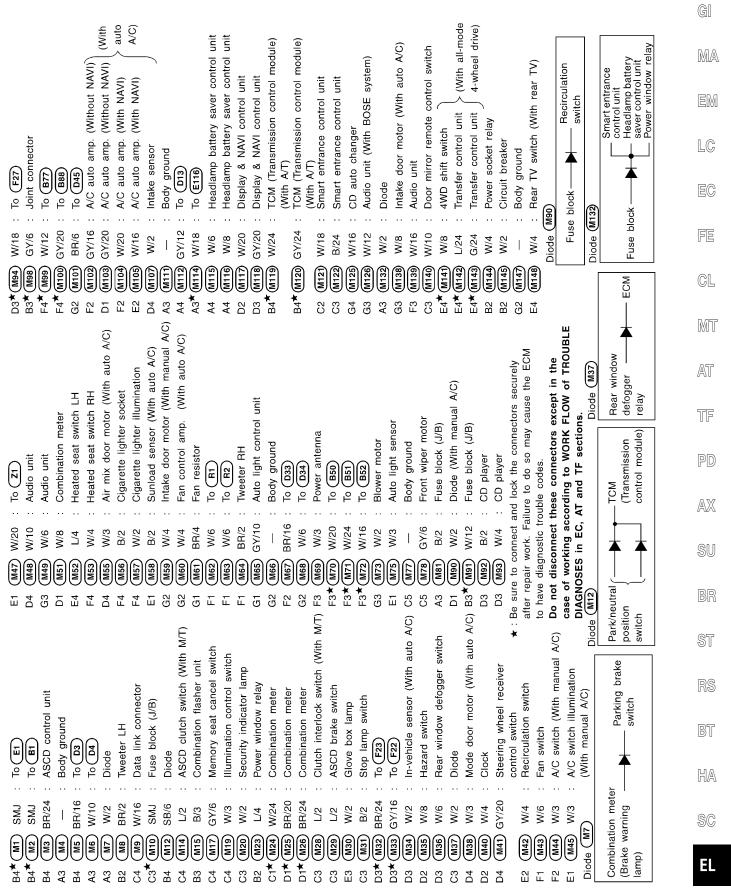

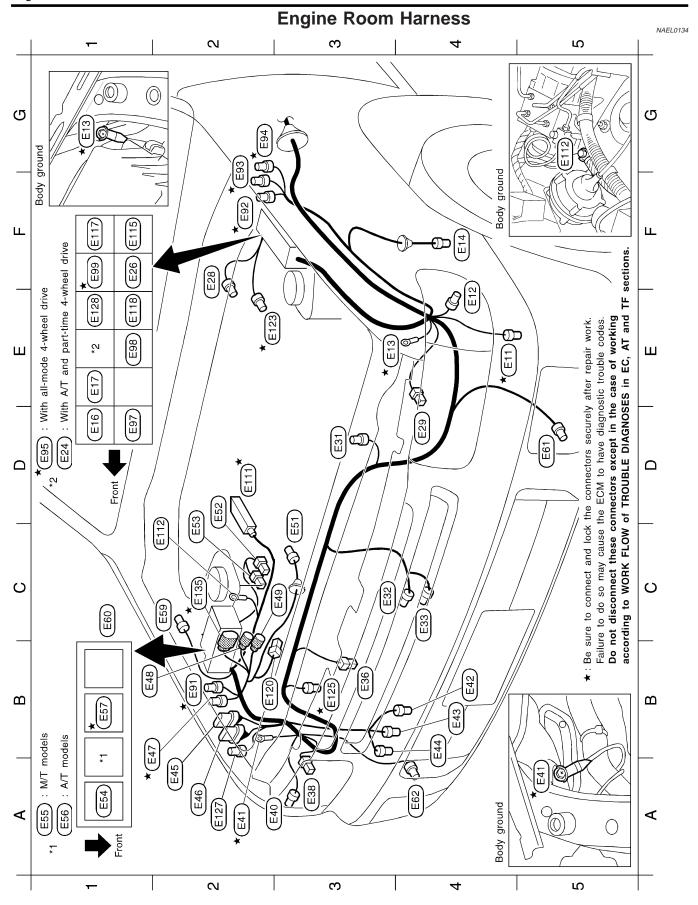

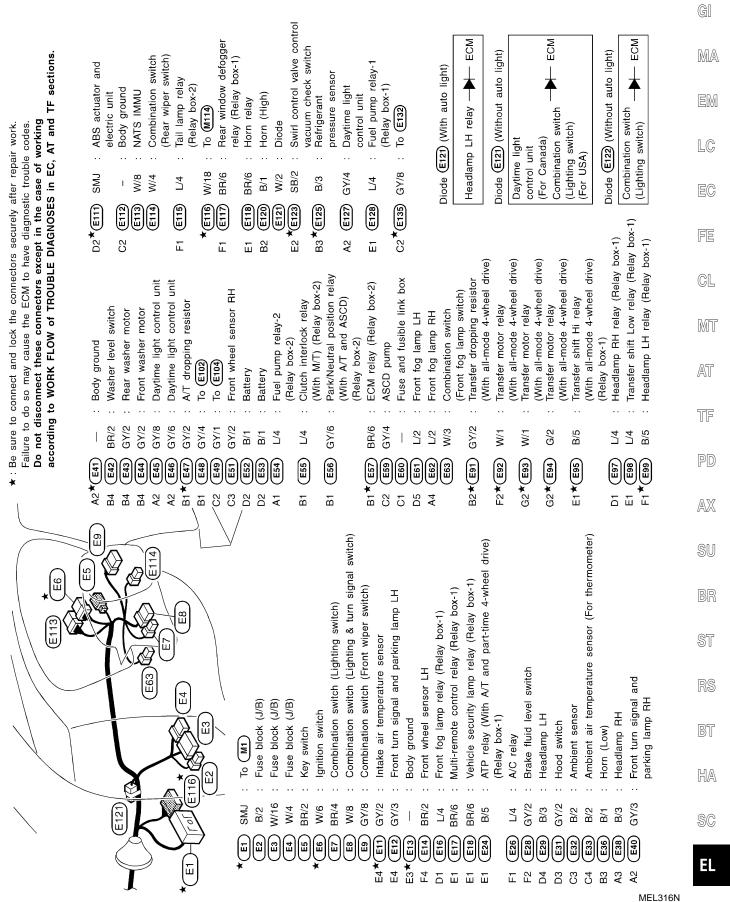

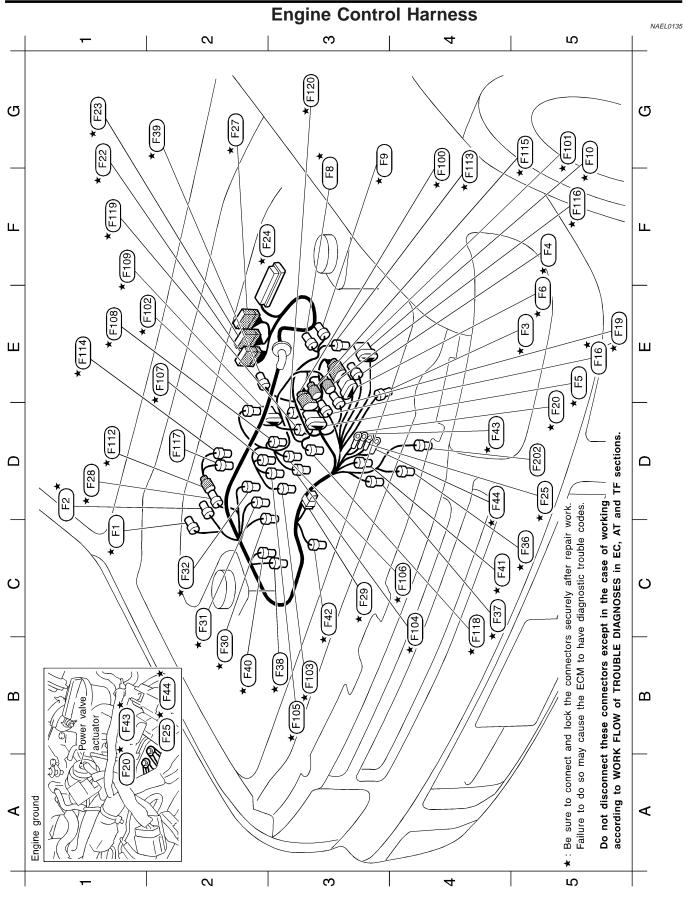

HARNESS LAYOUT

EVAP canister purge volume control solenoid valve

IACV-AAC valve Injector No. 6

9/7

F100 F112) F113

¥.

To (F28)

SB/3

Injector No. 2 Injector No. 3 Injector No. 4 Injector No. 5

> GY/2 GY/2 GY/2 GY/2

B3★ F105

C4★ (F104)

Heated oxygen sensor 2 (Rear) (BANK 1)

Heated oxygen sensor 2 (Rear) (BANK 2) Heated oxygen sensor 1 (Front) (BANK 2) Heated oxygen sensor 1 (Front) (BANK 1)

F106

C4*(E2*(

F103

E1 ★ (F108)

Throttle position sensor Throttle position switch Mass air flow sensor

BR/3 GY/3 GY/5 GY/2

(E E

F3*(

G3*****(

(F)

75 E5*\

To (F100)

SB/3

4

F5*****(

ឌ

ा० (हावा)

Injector No. 1 Knock sensor

Engine coolant temperature sensor

GY/2 GY/2 **SB/2**

E1★(F114)

1/2

F4**★**(7¥

To (F16) To (F19)

FI 150

G5*****(

Engine ground

To (M33)

GY/16 **BR/24**

G1*(F22) F23

G1*(

To (M32)

ECM

SMJ

F2*(

D5^{*}(.

To (F116)

To (F115)

F16

E5*(

ϴ(

E5**★**(F19) D5*(F20) (F116)

F5**≭**(

Thermal transmitter Ignition coil No. 2

> GY/3 GY/3

C4*(F118) F1 * (F119)

B/1

F113

D2

Compressor (Air conditioner)

Ignition coil No. 6 Ignition coil No. 4

F120

3*(

Engine ground

Condenser

GY/3

To (F112)

To (M94

W/18 SB/3 W/2

G2*(

۵1*(

(3*(B2**★**(

(F202)

SMART C/U - PREVIOUS

Engine Control Harness (Cont'd)

according to WORK FLOW of TROUBLE DIAGNOSES in EC, AT and TF

sections.

* Do not disconnect these connectors except in the case of working Failure to do so may cause the ECM to have diagnostic trouble codes. : Be sure to connect and lock the connectors securely after repair work.

GI MA EM LC EC FE GL MT AT TF PD AX SU BR

ST

RS

BT

HA

SC

EL

MEL318N

Intake valve timing control position sensor LH Intake valve timing control position sensor RH

B/3 B/3 G/2

C4*(

F38 (E

B3*****(

Camshaft position sensor (PHASE)

Ignition coil No. 5 Ignition coil No. 3 Ignition coil No. 1

> GY/3 GY/2

F32 F36)

C2*(

c5*****(

GY/3

C2*****(

Intake valve timing control solenoid valve RH Intake valve timing control solenoid valve LH

SB/2

B2★(F40)

Ğ2*****(

G/2

C4★(F41)

BR/2

F42)

)*80

F43

D4**★**(


F44)


Swirl control valve control solenoid valve VIAS control solenoid valve (With A/T)


Engine ground Engine ground

To (F5)

To (F6)

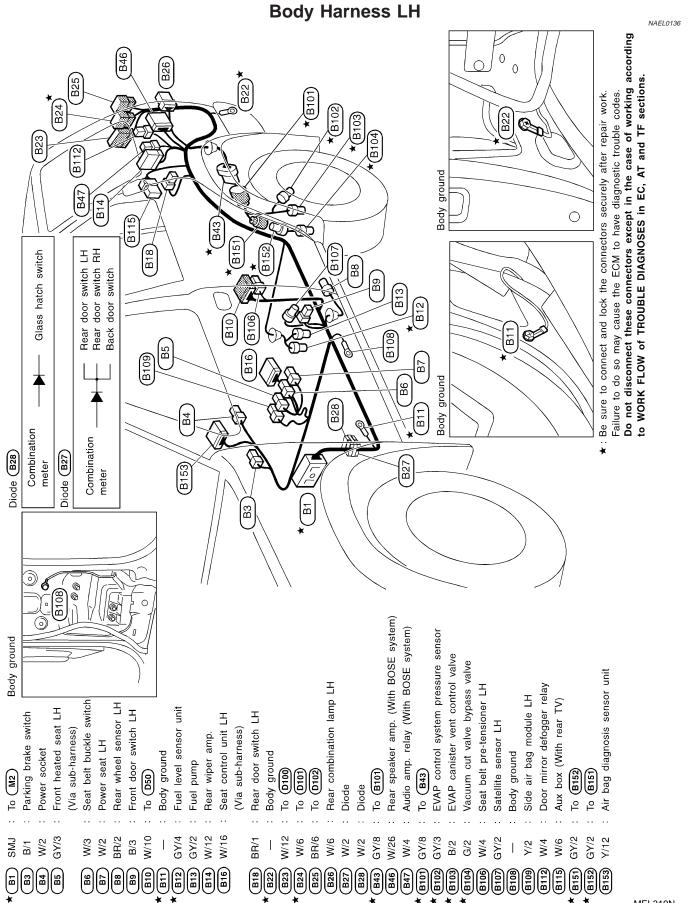


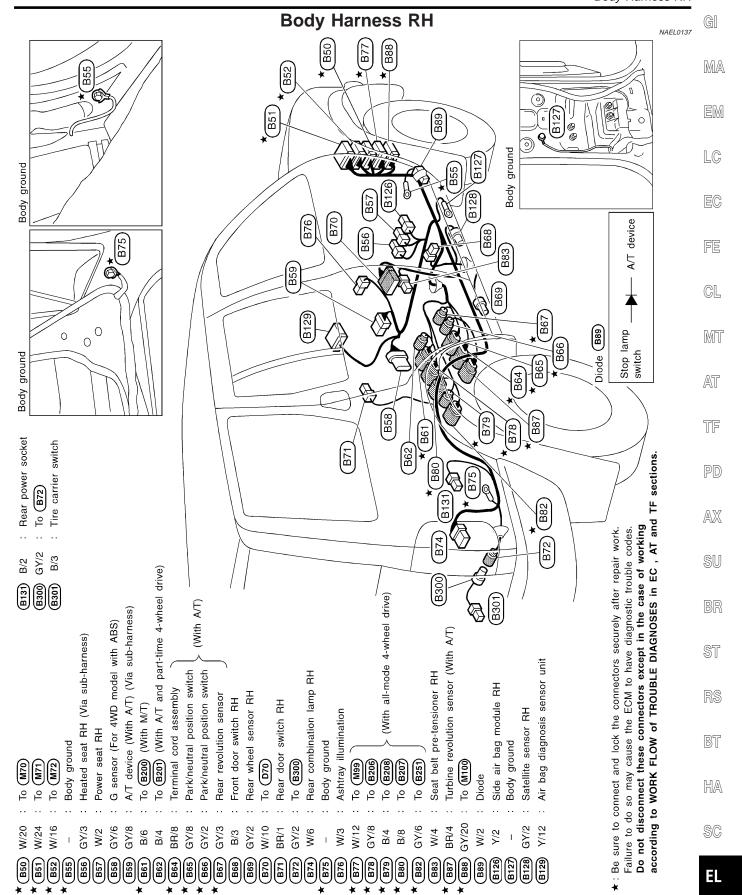

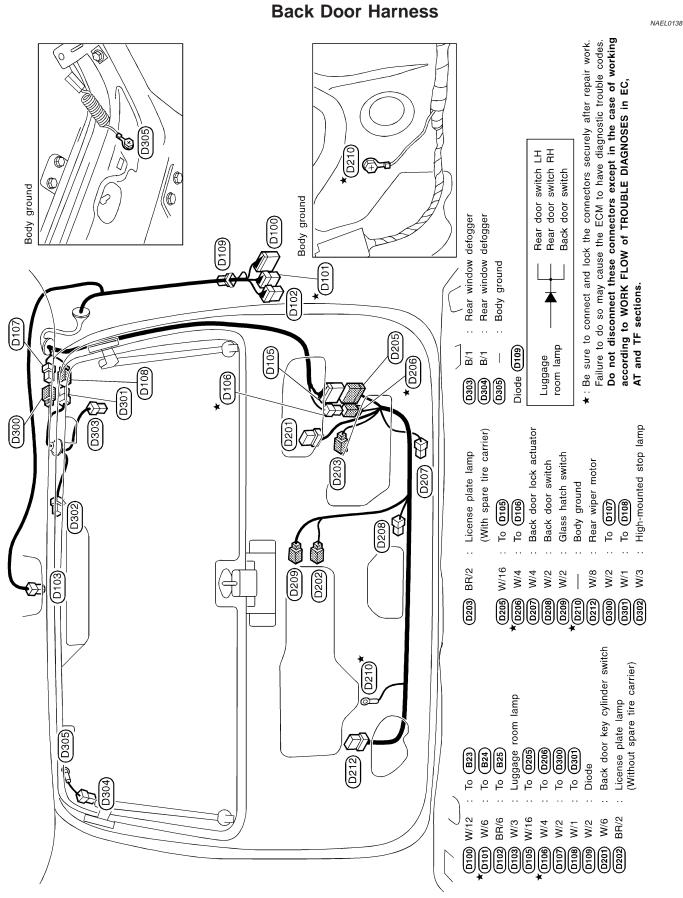

Engine and Transmission Harness


NAEL0139

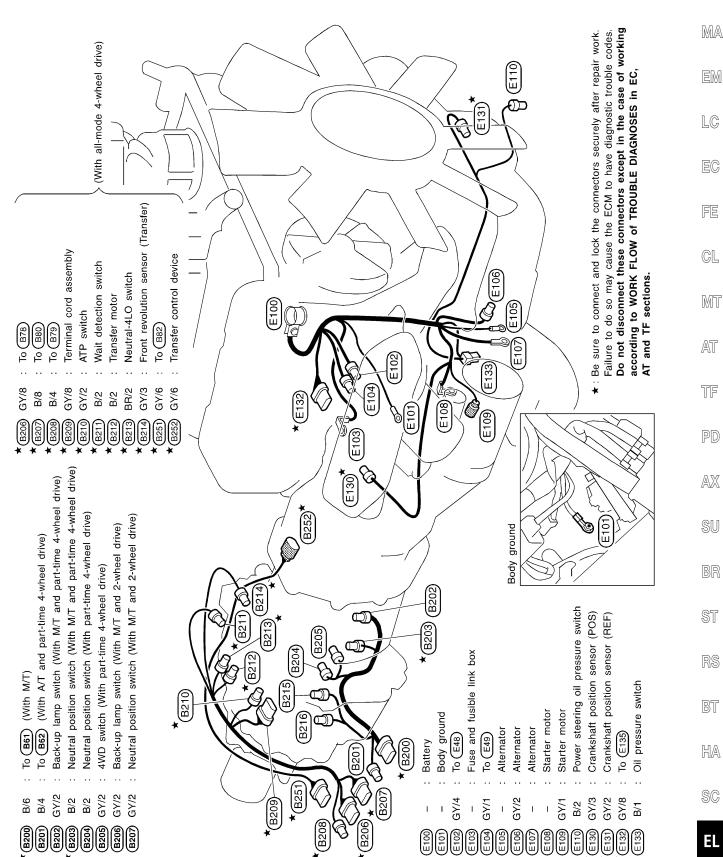


MEL242M

Room Lamp Harness

NAEL0140

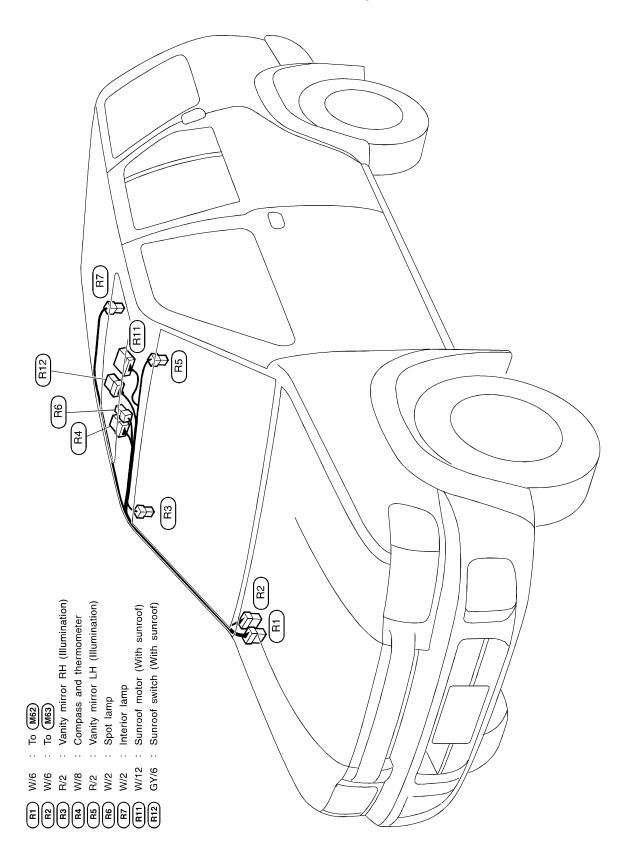

Air Bag Harness

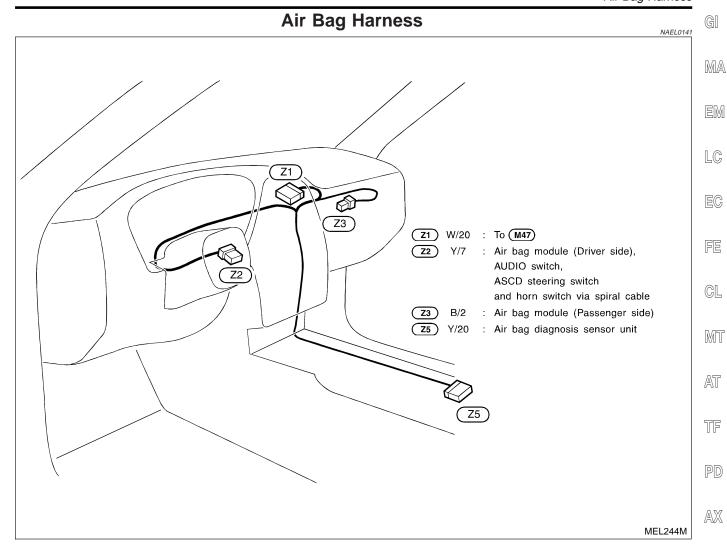

SU

BR

ST

RS

BT

HA

SC

Front Door Harness

NAEL0142

LH side

D1 GY/5 : Door mirror defogger LH

D2 BR/3 : Door mirror LH
D3 BR/16 : To M5
D4 W/10 : To M6

D5 GY/6 : Front power window regulator LH
D6 W/16 : Power window main switch
D7 GY/4 : Front door lock actuator LH

D9 BR/3 : Front door key cylinder switch LH
D10 BR/2 : Front door speaker LH


(Without BOSE system)

(D12) W/6 : Front door speaker LH

(With BOSE system)

D13 GY/12 : To M112

D15 W/3 : Power window main switch
D16 W/8 : Seat memory switch

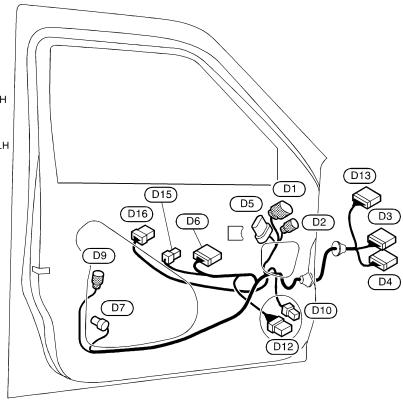

RH side

D31) GY/5 : Door mirror defogger RH

D32 BR/3 : Door mirror RH

D33 BR/16 : To M67
D34 W/6 : To M68


D35 GY/6 : Front power window regulator RH
D36 W/12 : Front power window switch RH
D37 GY/4 : Front door lock actuator RH

D40 BR/2 : Front door speaker RH (Without BOSE system)

D42 W/6 : Front door speaker RH (With BOSE system)

D43 W/8 : Front power window switch RH


D45) BR/6 : To (M101) (With BOSE system)

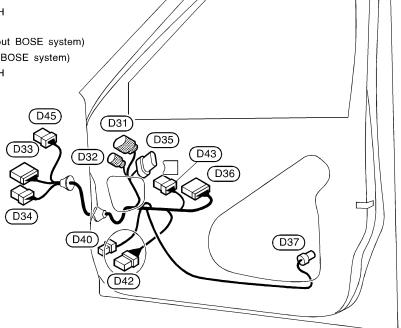

MEL321N



G[NAEL0143

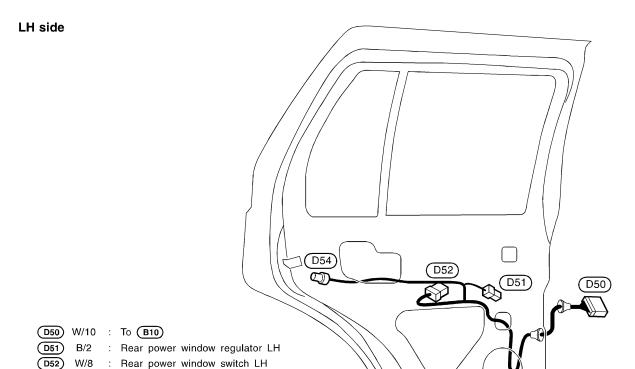

D53) BR/2

RH side

: Rear door speaker LH (D54) GY/4 : Rear door lock actuator LH MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

MEL261M



D74

D70 W/10 : To **B70**

W/8

BR/2

: Rear power window regulator RH

: Rear power window switch RH

: Rear door speaker RH (D74) GY/4 : Rear door lock actuator RH

(D71)

(D72)

BULB SPECIFICATIONS

Headlamp

	Headlamp	NAEL0144S03
Item		Wattage W
High/Low (Semi-sealed beam)		60/55 (HB2)
	Exterior Lamp	NAEL0144S01
Item		Wattage W
Front fog lamp		55
Front turn signal lamp		21
Parking lamp		5
	Turn signal lamp	27
Rear combination lamp	Stop/Tail lamp	21/5
	Back-up lamp	18
License plate lamp		5
High-mounted stop lamp		5
	Interior Lamp	NAEL0144S02
Item		Wattage W
Interior lamp		10
Spot lamp		8
Luggage room lamp		10

WIRING DIAGRAM CODES (CELL CODES)

SMART C/U - PREVIOUS

G[

MA

EM

LC

EG

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

EL

Use the chart below to find out what each wiring

diagram code stands for.

Refer to the wiring diagram code in the alphabetical index to find the location (page number) of each wiring diagram.


Code	Section	Wiring Diagram Name
1STSIG	AT	A/T 1ST Signal
2NDSIG	AT	A/T 2ND Signal
3RDSIG	AT	A/T 3RD Signal
4THSIG	AT	A/T 4TH Signal
A/C, A	HA	Auto Air Conditioner
AAC/V	EC	IACV-AAC Valve
ABS	BR	Anti-lock Brake System
AP/SEN	EC	Absolute Pressure Sensor
ASCD	EL	Automatic Speed Control Device
AT/C	EC	A/T Control
ATDIAG	EC	A/T Diagnosis Communication Line
AUDIO	EL	Audio
AUT/DP	EL	Automatic Drive Positioner
BA/FTS	AT	A/T Fluid Temperature Sensor and TCM Power Supply
BACK/L	EL	Back-up Lamp
BYPS/V	EC	Vacuum Cut Valve Bypass Valve
CHARGE	SC	Charging System
CHIME	EL	Warning Chime
CIGAR	EL	Cigarette Lighter
CLOCK	EL	Clock
COMPAS	EL	Compass and Thermometer
D/LOCK	EL	Power Door Lock
DEF	EL	Rear Window Defogger
DTRL	EL	Headlamp — With Daytime Light System —
ECTS	EC	Engine Coolant Temperature Sensor
ENGSS	AT	Engine Speed Signal
F/FOG	EL	Front Fog Lamp
F/PUMP	EC	Fuel Pump Control
FICD	EC	IACV-FICD Solenoid Valve
FLS1	EC	Fuel Gauge
FLS2	EC	Fuel Gauge
FLS3	EC	Fuel Gauge

Code	Section	Wiring Diagram Name
FTS	AT	A/T Fluid Temperature Sensor
FUELLH	EC	Fuel Injection System Function (Left Bank)
FUELRH	EC	Fuel Injection System Function (Right Bank)
H/LAMP	EL	Headlamp
HORN	EL	Horn
HSEAT	EL	Heated Seat
IATS	EC	Intake Air Temperature Sensor
IGN/SG	EC	Ignition Signal
ILL	EL	Illumination
INJECT	EC	Injector
INT/L	EL	Interior, Spot, Vanity Mirror, and Luggage Room Lamps
IVC-L	EC	Intake Valve Timing Control Sole- noid Valve LH
IVC-R	EC	Intake Valve Timing Control Sole- noid Valve RH
IVCS-L	EC	Intake Valve Timing Control Position Sensor LH
IVCS-R	EC	Intake Valve Timing Control Position Sensor RH
KS	EC	Knock Sensor
LAN	AT	A/T Communication Line
LOAD	EC	Electrical Load Signal
LPSV	AT	Line Pressure Solenoid Valve
MAFS	EC	Mass Air Flow Sensor
MAIN	AT	Main Power Supply and Ground Circuit
MAIN	EC	Main Power Supply and Ground Circuit
METER	EL	Speedometer, Tachometer, Temp., Oil, and Fuel Gauges
MIL/DL	EC	MIL and Data Link Connectors
MIRROR	EL	Door Mirror
MULTI	EL	Multi-remote Control System
NATS	EL	NVIS (NISSAN Vehicle Immobilizer System)
NAVI	EL	Navigation System
NONDTC	AT	Non-detectable Items
O2H1B1	EC	Heated Oxygen Sensor 1 Heater (Front) (Bank 1)

WIRING DIAGRAM CODES (CELL CODES)

Code	Section	Wiring Diagram Name
O2H1B2	EC	Heated Oxygen Sensor 1 Heater (Front) (Bank 2)
O2H2B1	EC	Heated Oxygen Sensor 2 Heater (Rear) (Bank 1)
O2H2B2	EC	Heated Oxygen Sensor 2 Heater (Rear) (Bank 2)
O2S1B1	EC	Heated Oxygen Sensor 1 (Front) (Bank 1)
O2S1B2	EC	Heated Oxygen Sensor 1 (Front) (Bank 2)
O2S2B1	EC	Heated Oxygen Sensor 2 (Rear) (Bank 1)
O2S2B2	EC	Heated Oxygen Sensor 2 (Rear) (Bank 2)
OVRCSV	AT	Overrun Clutch Solenoid Valve
P/ANT	EL	Power Antenna
PGC/V	EC	EVAP Canister Purge Volume Control Solenoid Valve
PHASE	EC	Camshaft Position Sensor (PHASE)
PNP/SW	EC	Park/Neutral Position Switch
PNP/SW	AT	Park/Neutral Position Switch
POS	EC	Crankshaft Position Sensor (CKPS) (POS)
POWER	EL	Power Supply Routing
PRE/SE	EC	EVAP Control System Pressure Sensor
PST/SW	EC	Power Steering Oil Pressure Switch
REF	EC	Crankshaft Position Sensor (CKPS) (REF)
REMOTE	EL	Audio (Remote Control Switch)
RP/SEN	EC	Refrigerant Pressure
S/SIG	EC	Start Signal
S/VCSW	EC	Swirl Control Valve Control Vacuum Check Switch
SEAT	EL	Power Seat
SHIFT	AT	A/T Shift Lock System
SROOF	EL	Sunroof
SRS	RS	Supplemental Restraint System
SSV/A	AT	Shift Solenoid Valve A
SSV/B	AT	Shift Solenoid Valve B
START	SC	Starting System
STOP/L	EL	Stop lamp


Code	Section	Wiring Diagram Name
SWL/V	EC	Swirl Control Valve Control Sole- noid Valve
TAIL/L	EL	Parking, License and Tail Lamps
TCCSIG	AT	A/T TCC Signal (Lock up)
TCV	AT	Torque Converter Clutch Solenoid Valve
T/F	TF	Transfer
TFTS	EC	Tank Fuel Temperature Sensor
TP/SW	EC	Throttle Position Switch
TPS	AT	Throttle Position Sensor
TPS	EC	Throttle Position Sensor
TRNSMT	EL	Integrated HOMELINK® Transmitter
TRSA/T	AT	Turbine Revolution Sensor
TURN	EL	Turn Signal and Hazard Warning Lamps
VEHSEC	EL	Vehicle Security System
VIAS/V	EC	Variable Induction Air Control System
VSS	EC	Vehicle Speed Sensor
VSSA/T	AT	Vehicle Speed Sensor A/T (Revolution Sensor)
VSSMTR	AT	Vehicle Speed Sensor MTR
WARN	EL	Warning Lamps
WINDOW	EL	Power Window
WIP/R	EL	Rear Wiper and Washer
WIPER	EL	Front Wiper and Washer

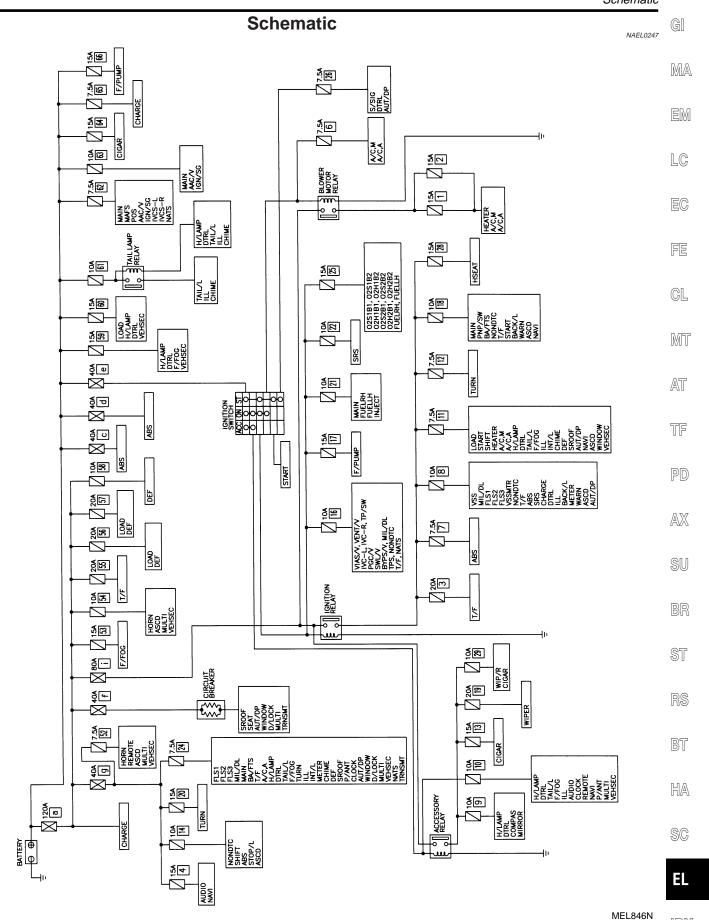



Wiring Diagram — POWER —


BATTERY POWER SUPPLY — IGNITION SW. IN ANY POSITION

NAEL0248 NAEL0248S01

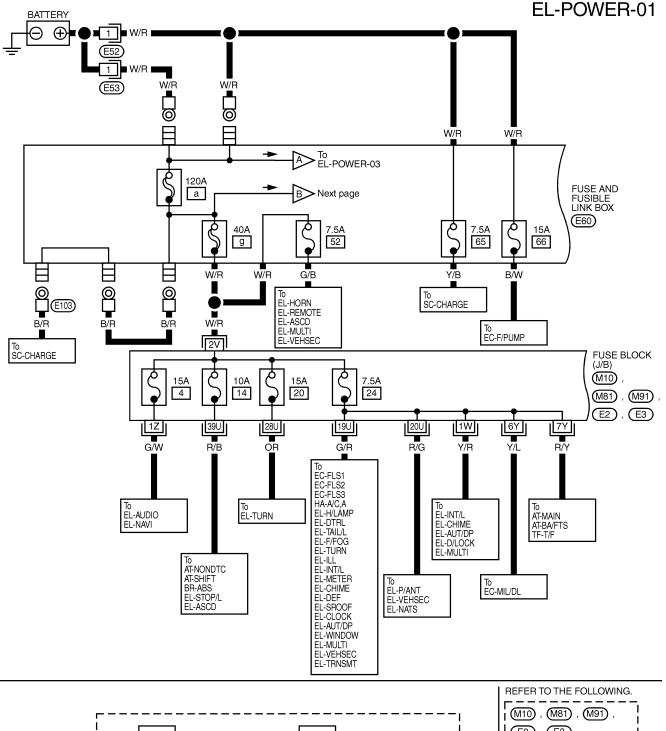


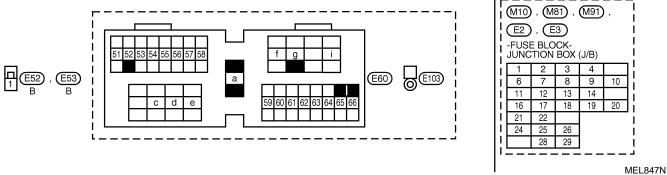


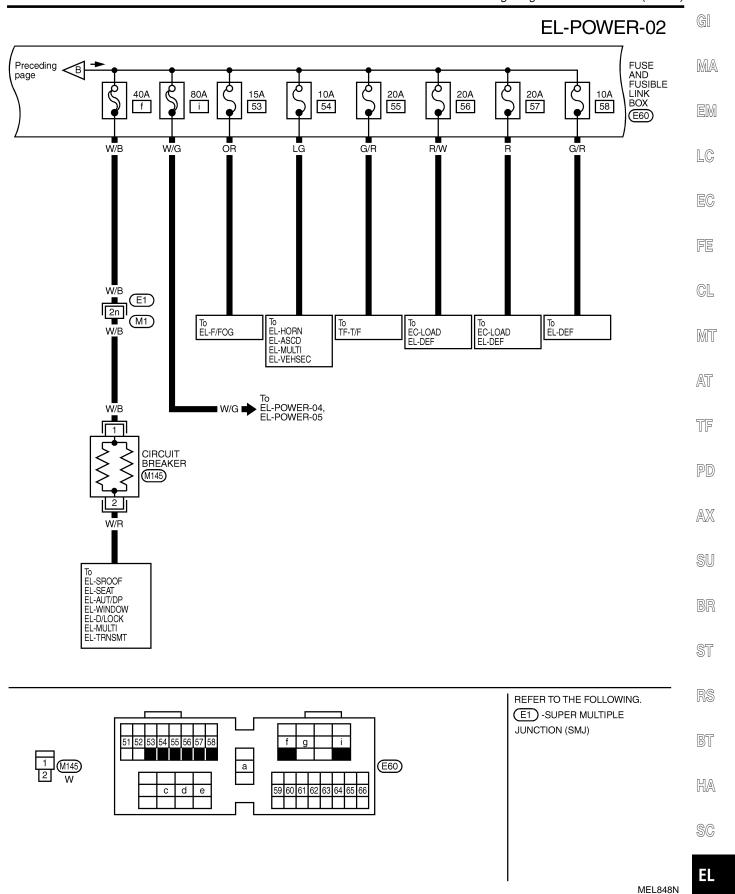


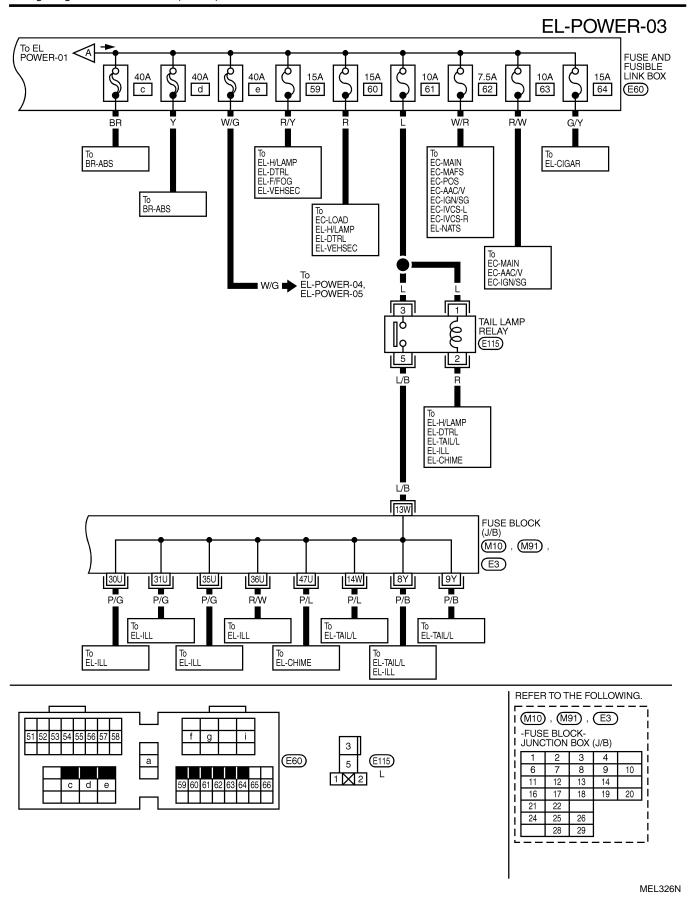



[DX

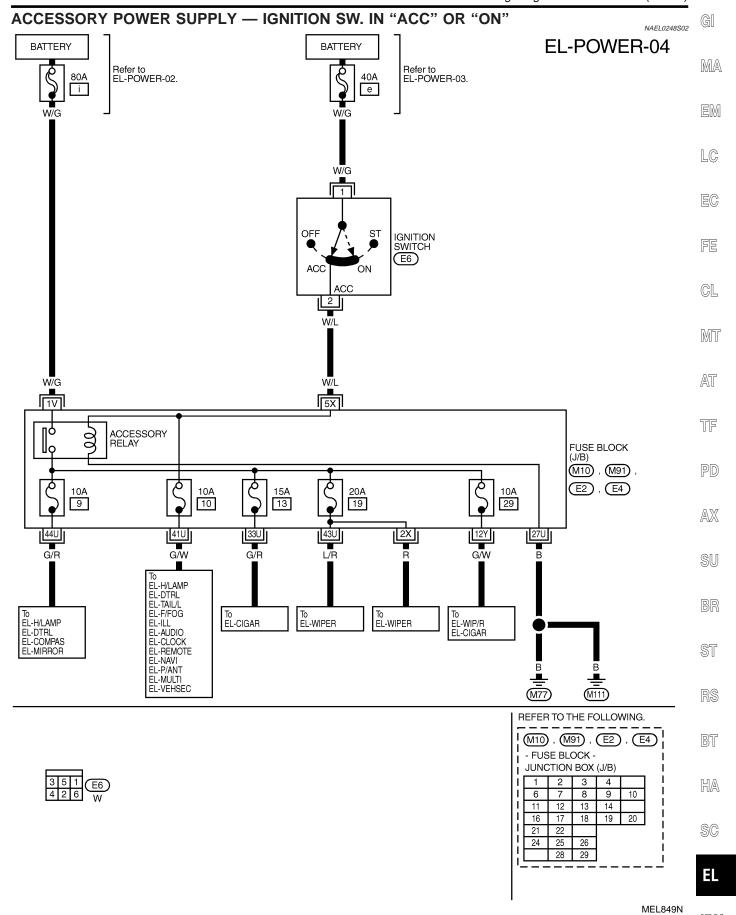

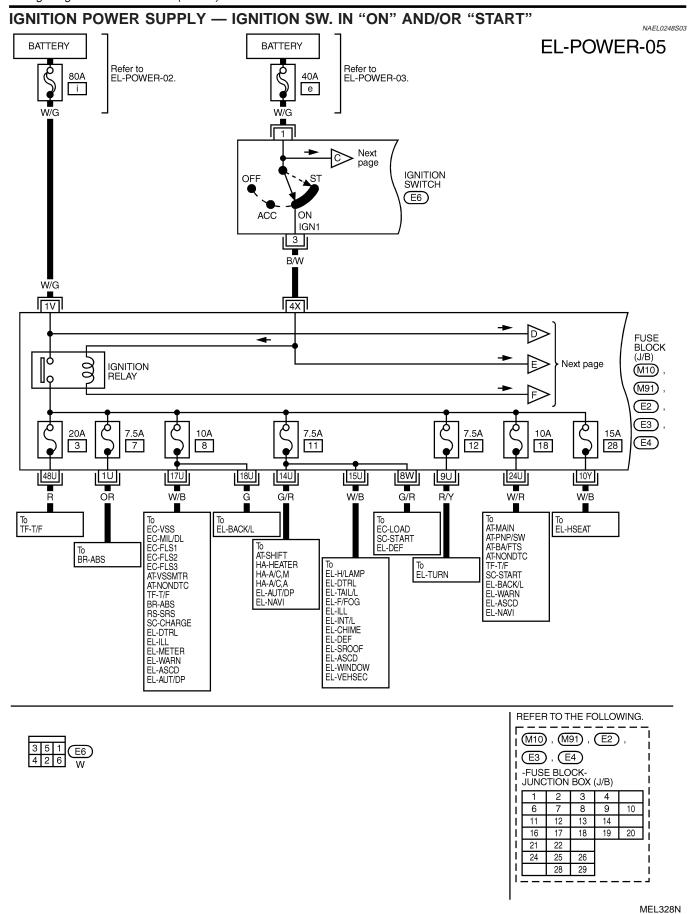

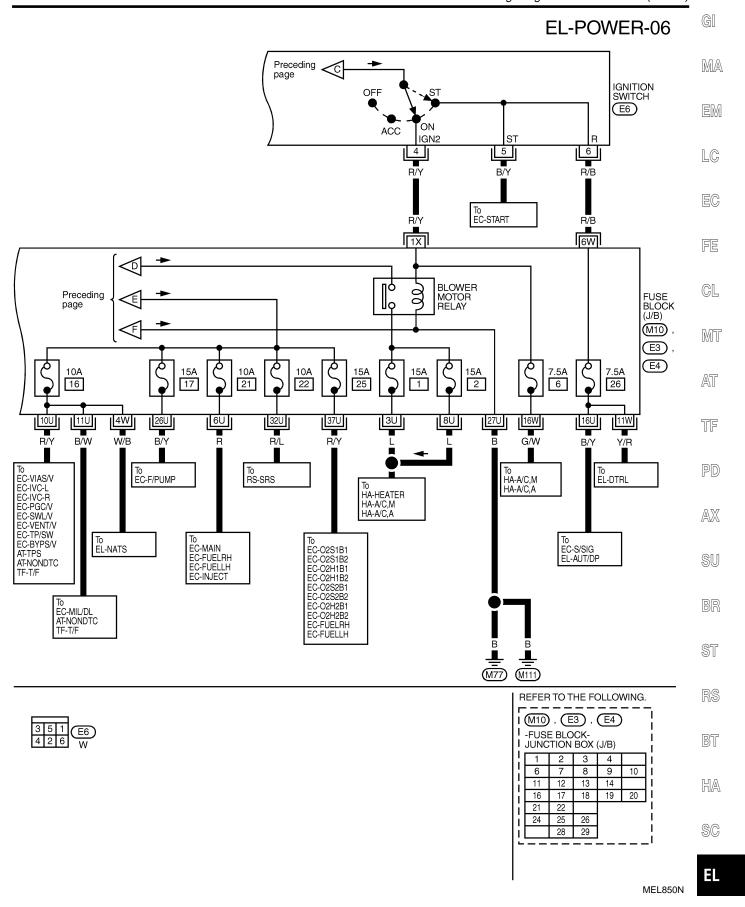

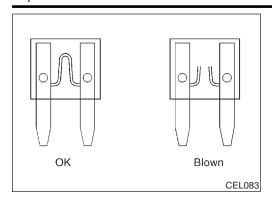

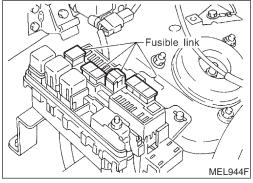

Inspection

FUSE

NAFL 0249

- If fuse is blown, be sure to eliminate cause of problem before installing new fuse.
- Use fuse of specified rating. Never use fuse of more than specified rating.
- Do not partially install fuse; always insert it into fuse holder properly.
- Remove fuse for "ELECTRICAL PARTS (BAT)" if vehicle is not used for a long period of time.


FUSIBLE LINK

NAFL 0249S02

A melted fusible link can be detected either by visual inspection or by feeling with finger tip. If its condition is questionable, use circuit tester or test lamp.

CAUTION:

- If fusible link should melt, it is possible that critical circuit (power supply or large current carrying circuit) is shorted.
 In such a case, carefully check and eliminate cause of problem.
- Never wrap outside of fusible link with vinyl tape. Important: Never let fusible link touch any other wiring harness, vinyl or rubber parts.

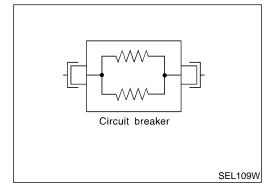

CIRCUIT BREAKER (PTC THERMISTOR TYPE)

NAEL0249S03

The PTC thermister generates heat in response to current flow. The temperature (and resistance) of the thermister element varies with current flow. Excessive current flow will cause the element's temperature to rise. When the temperature reaches a specified level, the electrical resistance will rise sharply to control the circuit current.

Reduced current flow will cause the element to cool. Resistance falls accordingly and normal circuit current flow is allowed to resume.

MAIN HARNESS


Body ground


Ground Distribution

NAEL0250


=-----

NAELO

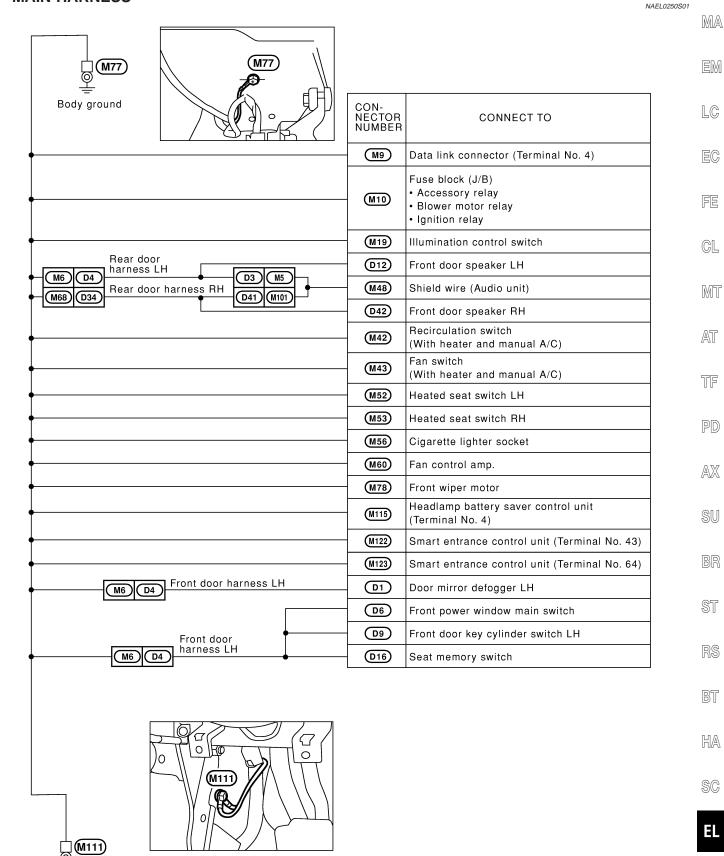

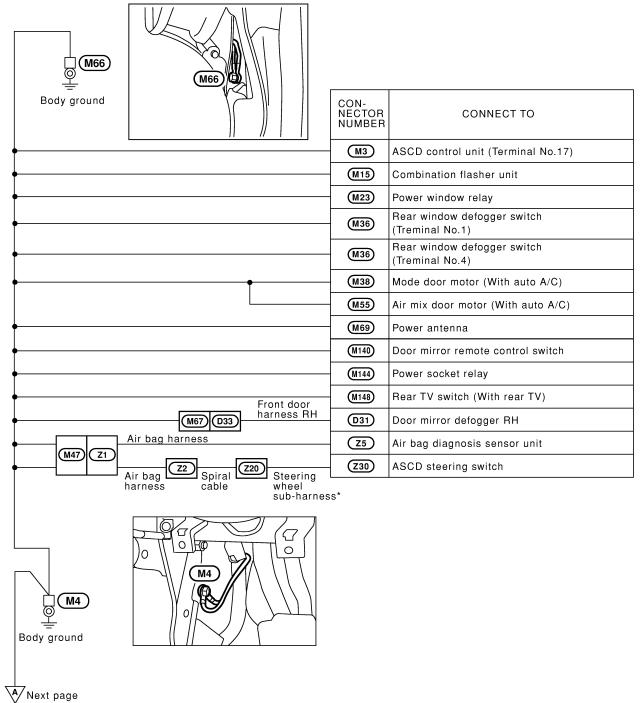


*: This sub-harness is not shown in "Harness Layout", EL section.

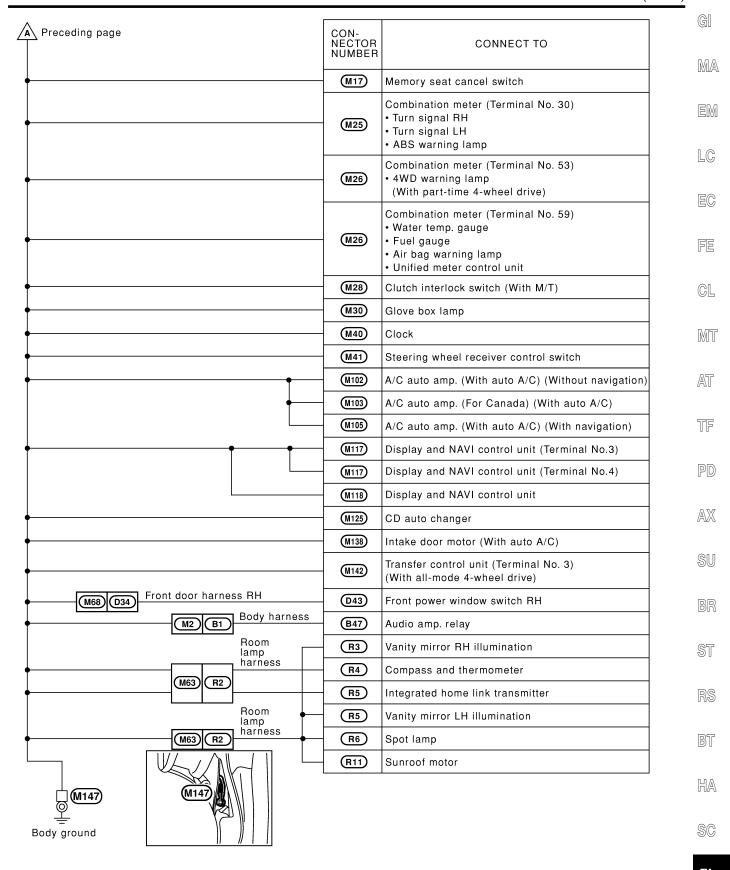


MEL307N

ENGINE ROOM HARNESS

NAFL0250S02

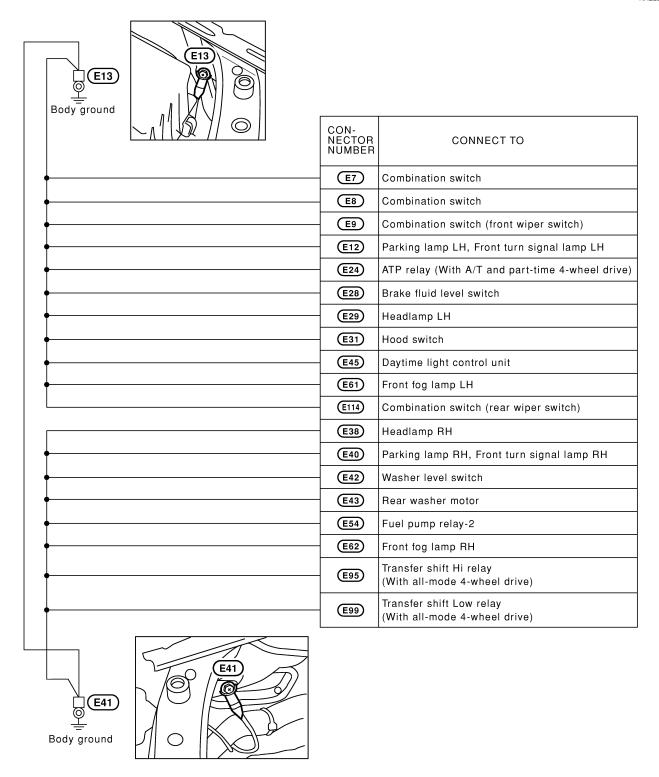

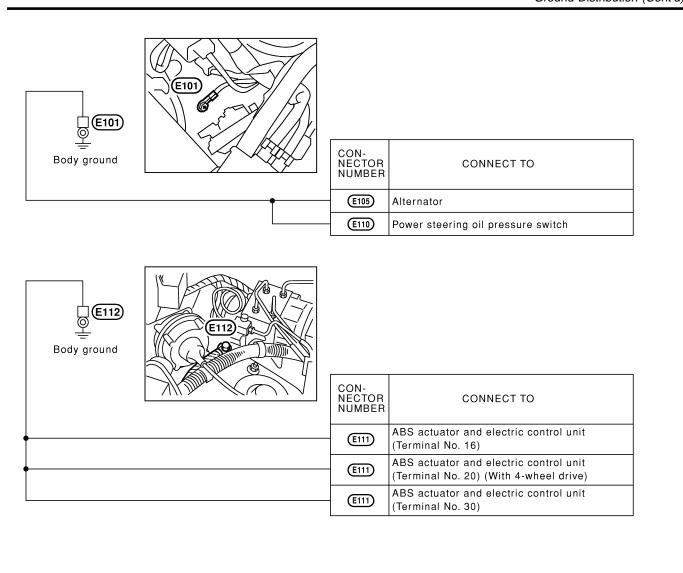

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT


HA

SC


MEL908N

ENGINE CONTROL HARNESS

NAFL0250S03

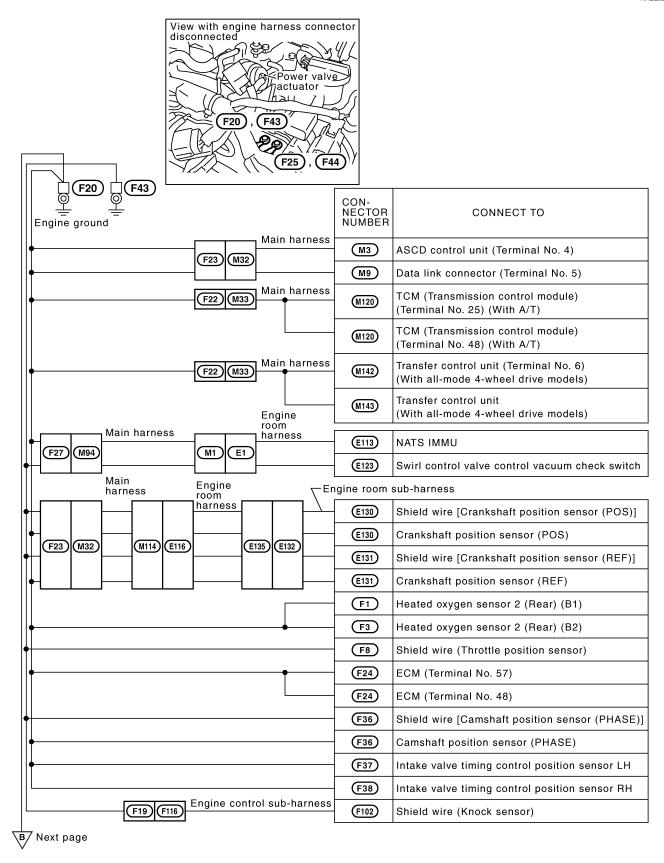

GROUND

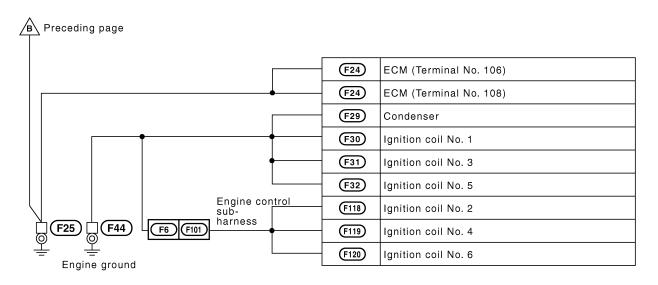

MEL233M

MT

G[

MA

EM

LC

EC

FE

CL

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT


HA


SC

ĒL


BODY HARNESS RH

NAFL0250S04

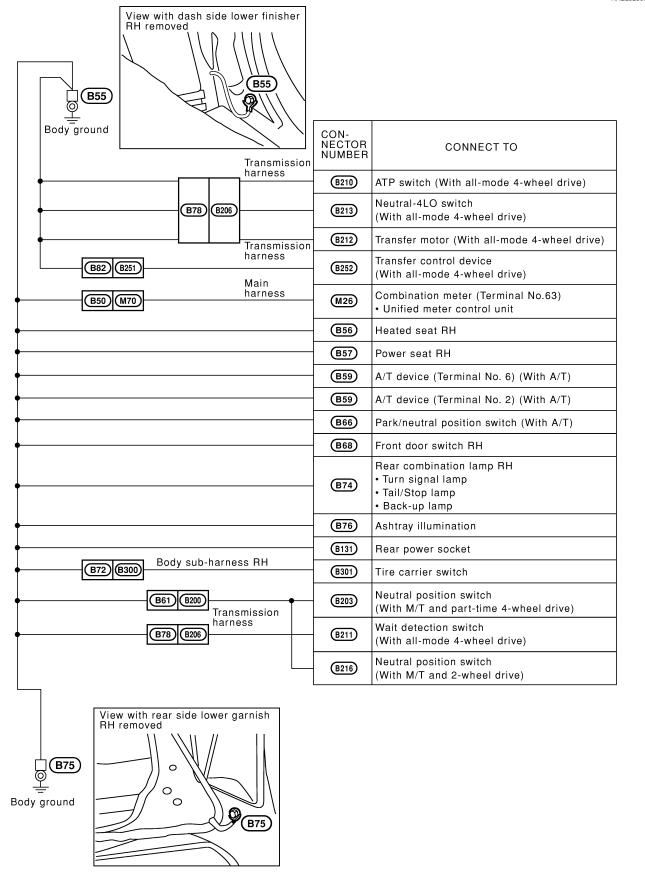

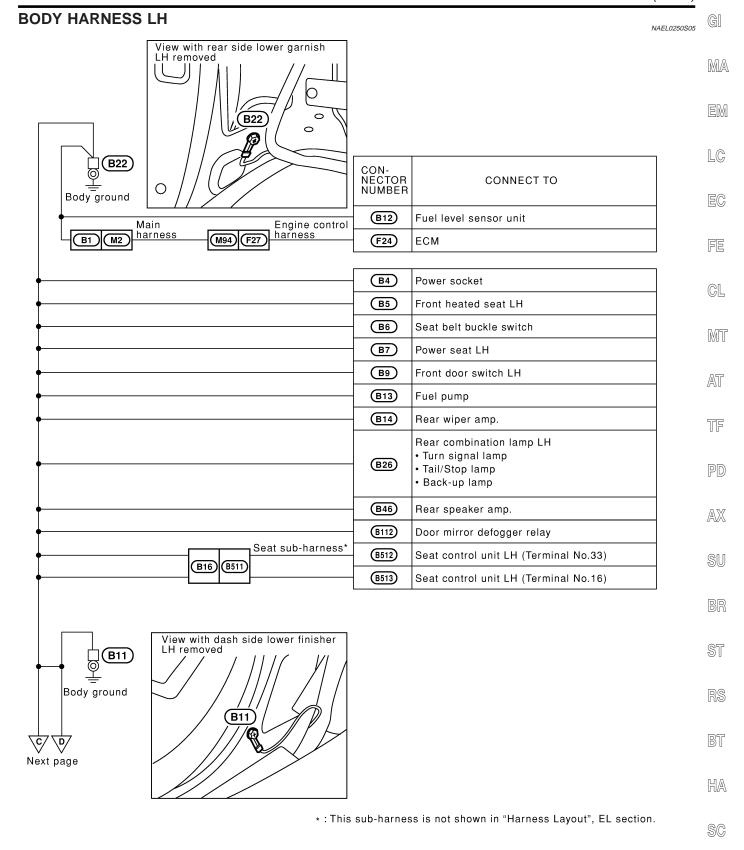

L

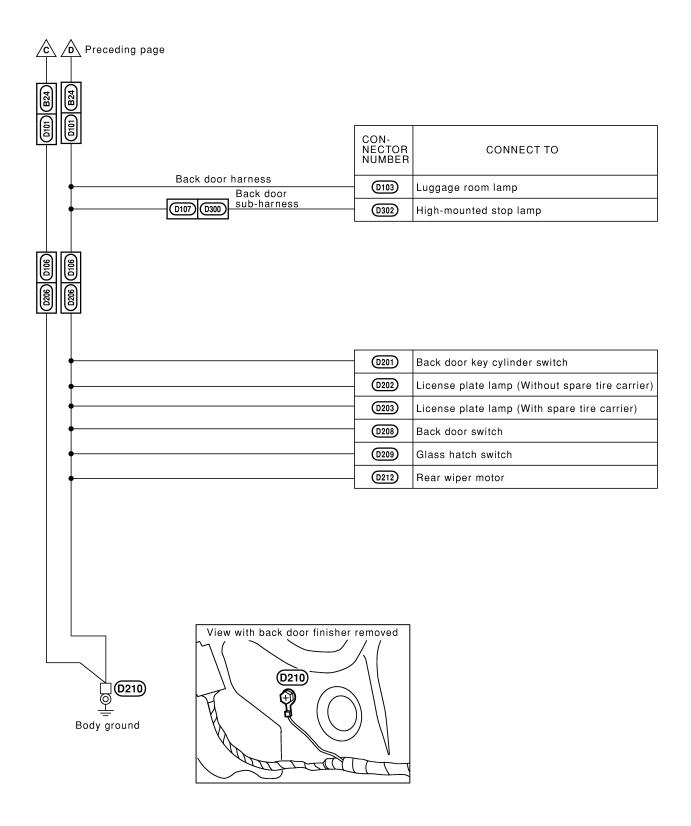

GROUND



NAEL0250S06 G

MA

LC

EC

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU


BR

ST


RS

BT

HA

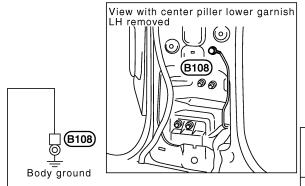


CON- NECTOR NUMBER	CONNECT TO
B107	Shield wire (Satellite sensor LH)

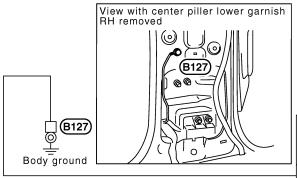

CON- NECTOR NUMBER	CONNECT TO
B128	Shield wire (Satellite sensor RH)

MEL151M

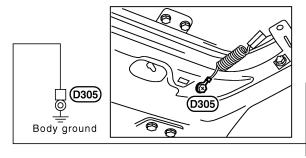


CON- NECTOR NUMBER	CONNECT TO
D304	Rear window defogger


MEL152M


SC

Check

NAEL0251

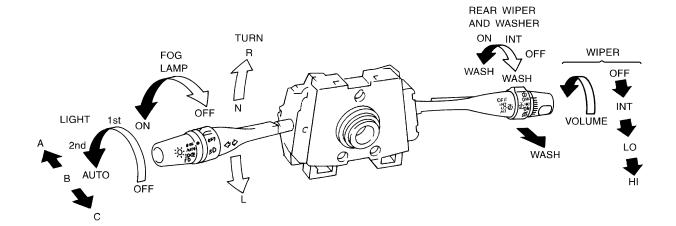

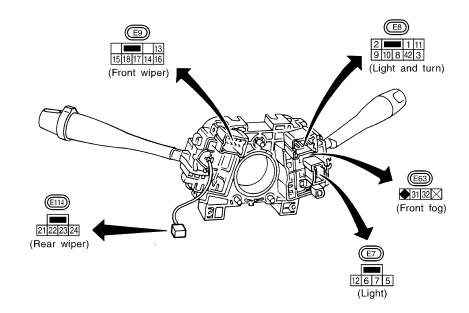


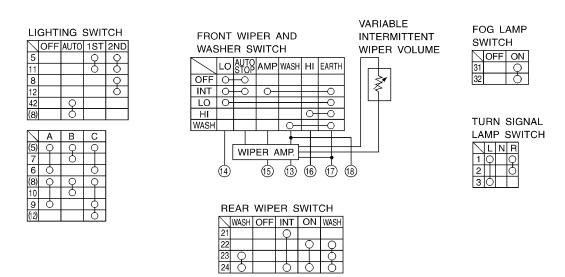

MEL132M

COMBINATION SWITCH

Replacement

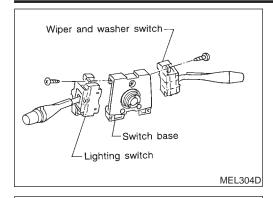

Replacement

For removal and installation of spiral cable, refer to RS-19, "Installation — Air Bag Module and Spiral Cable".

Each switch can be replaced without removing combination

 $\mathbb{M}\mathbb{A}$

switch base.

LC

To remove combination switch base, remove base attaching

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

ST


BT


HA


SC

[DX



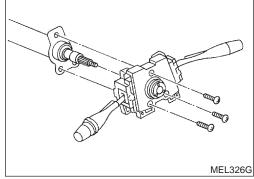

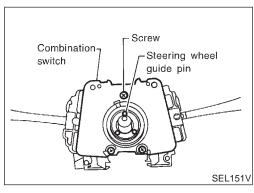

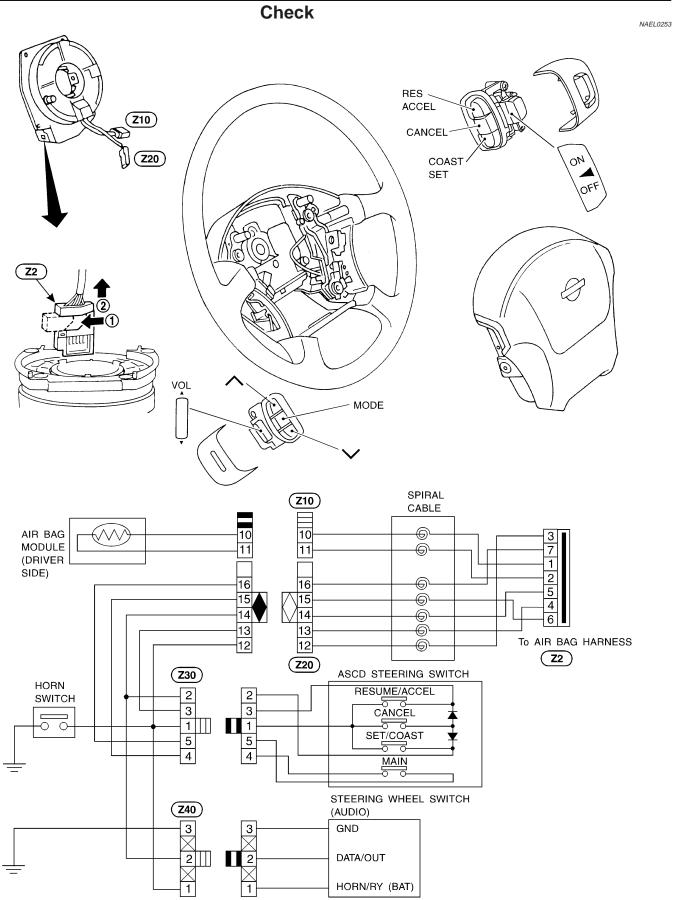


MEL322N

Component Parts and Harness Connector Location

NAFL0254

GI

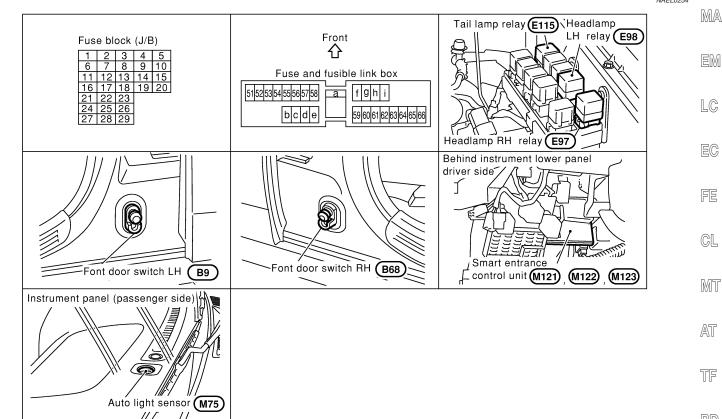

SEL288Y

System Description

The headlamp operation is controlled by the lighting switch which is built into the combination switch and smart entrance control unit. And the headlamp battery saver system is controlled by the smart entrance control unit.

OUTLINE

Power is supplied at all times

- to headlamp LH relay terminals 1 and 3
- through 15A fuse (No. 60, located in the fuse and fusible link box), and
- to headlamp RH relay terminals 1 and 3
- through 15A fuse (No. 59, located in the fuse and fusible link box), and
- to smart entrance control unit terminal 49
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].

When the ignition switch is in the ON or START position, power is supplied

- to smart entrance control unit terminal 27
- through 7.5A fuse [No. 11, located in the fuse block (J/B)].

When the ignition switch is in the ACC or ON position, power is supplied

- to smart entrance control unit terminal 26
- through 10A fuse [No. 10, located in the fuse block (J/B)]

Ground is supplied

- to smart entrance control unit terminals 43 and 64
- through body grounds M77 and M111.

POWER SUPPLY TO LOW BEAM AND HIGH BEAM

When lighting switch is in 2ND or PASS position, ground is supplied

to headlamp relay (LH and RH) terminal 2 from smart entrance control unit terminals 21 and 59

or arm.

L0255S01

BR

AX

SU

ST

RS

BT

HA

SC

SG

EL

NAEL0255S02

- through smart entrance control unit terminals 22 and 60,
- from lighting switch terminal 12

Headlamp relays (LH and RH) are energized and then power is supplied to headlamps (LH and RH).

LOW BEAM OPERATION

NAEL0255S03

When the lighting switch is turned to the 2ND position and placed in LOW ("B") position, power is supplied

- from terminal 5 of each headlamp relay
- to terminal 3 of each headlamp

Ground is supplied

- to headlamp LH terminal 2
- through lighting switch terminals 7 and 5
- through body grounds E13 and E41, and
- to headlamp RH terminal 2
- through lighting switch terminal 10 and 8
- through body grounds E13 and E41.

With power and ground supplied, the headlamp(s) will illuminate.

HIGH BEAM OPERATION/FLASH-TO-PASS OPERATION

NFL0255S04

When the lighting switch is turned to the 2ND position and placed in HIGH ("A") position or PASS ("C") position, power is supplied

- from terminal 5 of each headlamp relay
- to terminal 3 of each headlamp, and
- to combination meter terminal 26 for the HIGH BEAM indicator.

Ground is supplied

- to headlamp LH terminal 1
- to combination meter terminal 27 for the HIGH BEAM indicator
- through lighting switch terminals 6 and 5
- through body grounds E13 and E41, and
- to headlamp RH terminal 1
- through lighting switch terminals 9 and 8
- through body grounds E13 and E41.

With power and ground supplied, the high beams and the high beam indicator illuminate.

BATTERY SAVER CONTROL

AEL0255

Headlamps will remain on for a short while after the ignition switch is turned from ON (or START) to OFF (or ACC).

Continuity between terminals 21 and 22, and between terminals 59 and 60 of smart entrance control unit will be disturbed after 45 seconds, then the headlamps will be turned off.

The headlamps are turned off when front LH or RH door is opened even if 45 seconds have not passed after ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps are illuminated. When the lighting switch is turned from OFF to 2ND after headlamps are turned to off by the battery saver control, ground is supplied

- to smart entrance control unit terminals 20 and 58 from lighting switch terminal 11, and then,
- to headlamp LH and RH relays terminal 2 from smart entrance control unit terminals 21 and 59,
- through smart entrance control unit terminals 22 and 60 and
- through lighting switch terminal 12.

Then headlamps illuminate again.

AUTO LIGHT OPERATION

NAEL0255S06

The auto light control system has an optical sensor inside it that detects outside brightness. When lighting switch is in "AUTO" position, ground is supplied

- to smart entrance control unit terminal 23
- from lighting switch terminal 42.

When ignition switch is turn to "ON" or "START" position and

Outside brightness is darker than prescribed level or

HEADLAMP (FOR USA)

SMART C/U - NEW
System Description (Cont'd)

- After 3 seconds delay, outside brightness becomes darker than prescribed level Ground is supplied
- to headlamp relay LH and RH terminals 2
- through smart entrance control unit terminals 21, 59 and 43, 64.

Then both headlamp relays and tail lamp relay are energized, headlamps (low or high) and tail lamps are illuminate according to switch position.

Auto light operation allows headlamps and tail lamps to go off when

- Ignition switch is turned to "OFF" position or
- Outside brightness is brighter than prescribed level or
- After 5 seconds delay, outside brightness becomes brighter than the prescribed level.

For parking license and tail lamp auto operation, refer to "PARKING, LICENSE AND TAIL LAMPS".

VEHICLE SECURITY SYSTEM

The vehicle security system will flash the high beams if the system is triggered. Refer to "VEHICLE SECURITY (THEFT WARNING) SYSTEM" (EL-742).

GI

MA

LC

EG

GL

FE

AT

MT

PD

TF

SU

 $\mathbb{A}\mathbb{X}$

BR

ST


RS

BT


HA


SC


EL

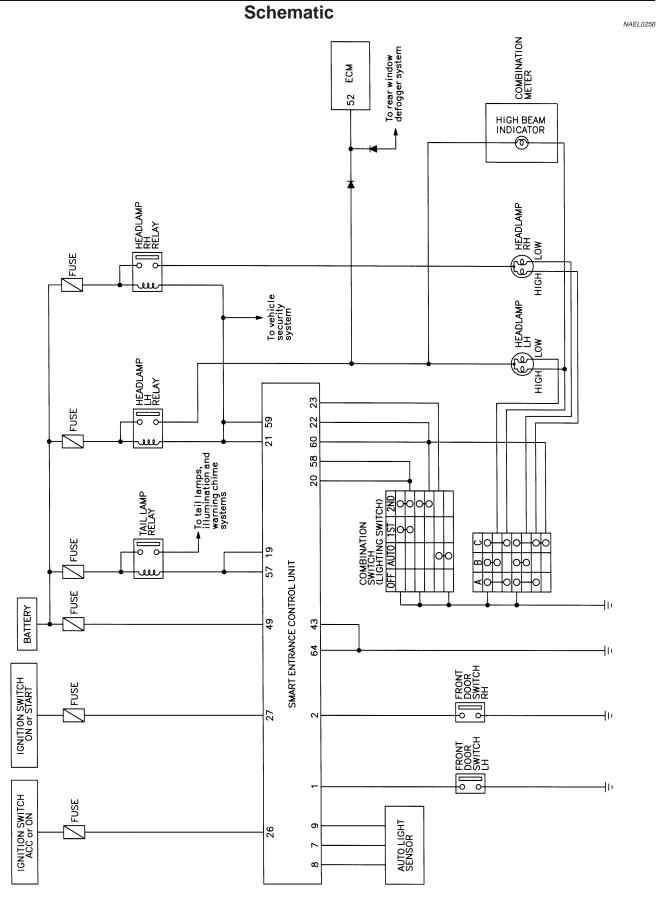

[DX

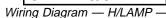


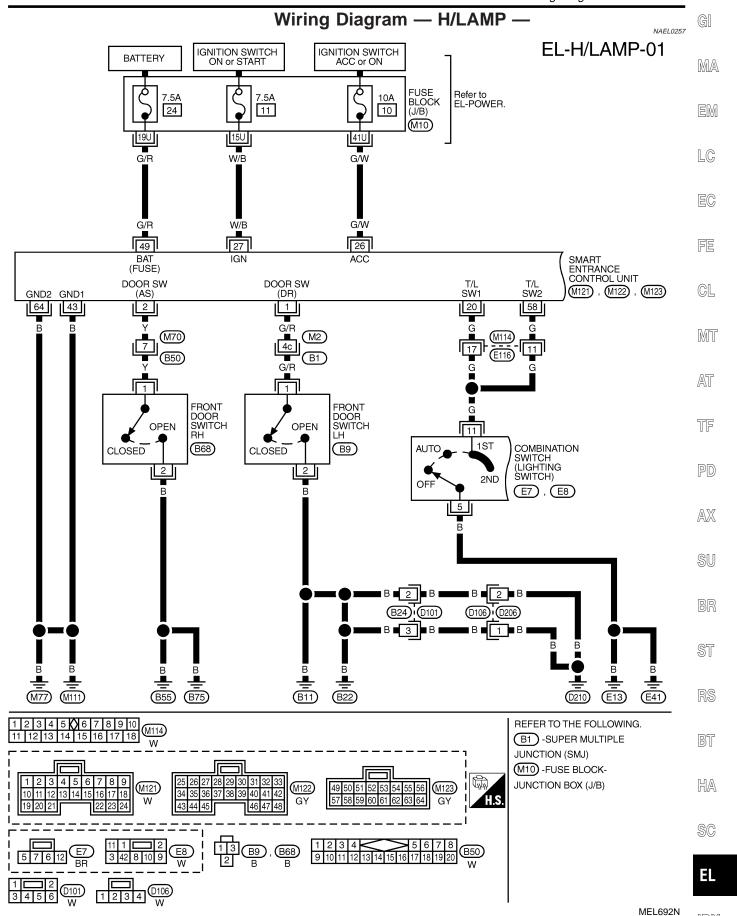

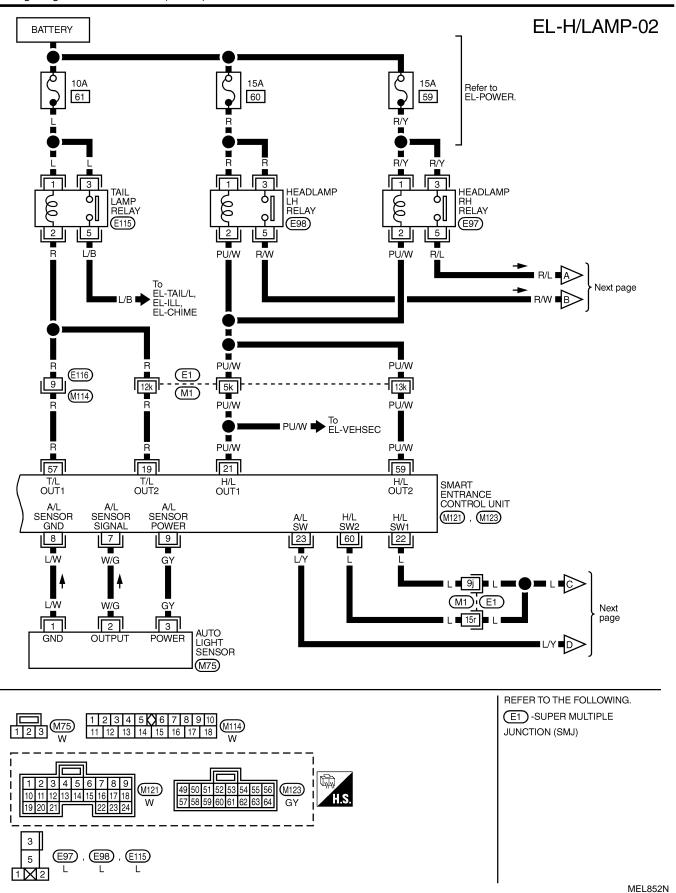

G[


EL-H/LAMP-03

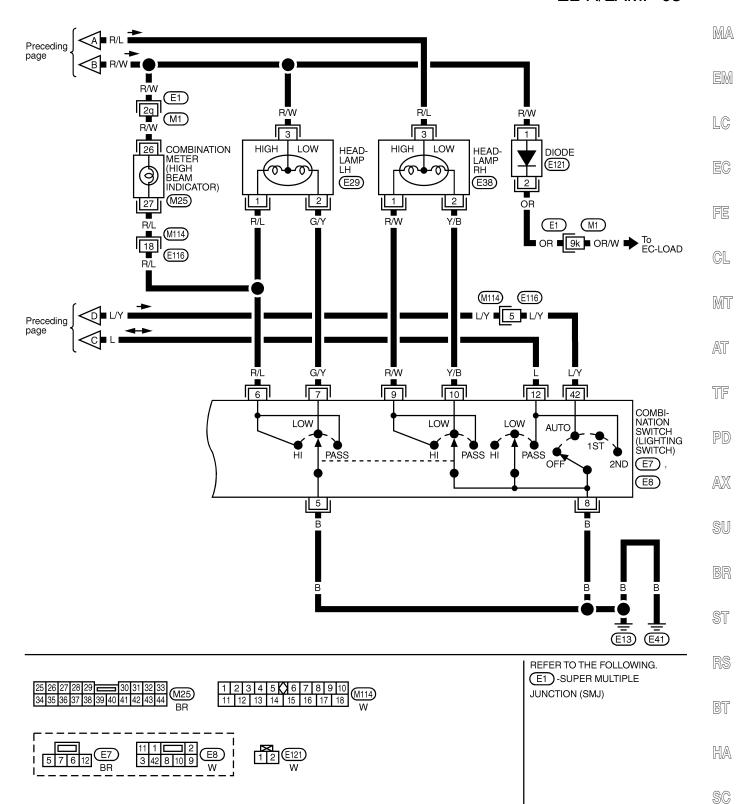

MEL853N

EL

2 13 B B B

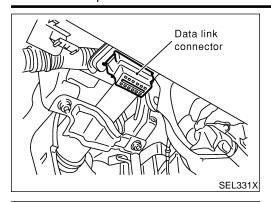


CONSULT-II Inspection Procedure "RETAINED PWR"

NAEL0258

NAEL0258S01

- 1. Turn ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

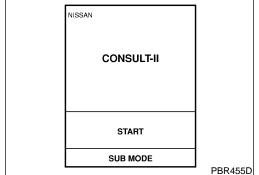


- 3. Turn ignition switch "ON".
- 4. Touch "START".

SELECT SYSTEM	
ENGINE	
A/T	
AIR BAG	
ABS	
SMART ENTRANCE	
	SEL941W

5. Touch "SMART ENTRANCE".

SELECT TEST ITEM	
BATTERY SAVER	
THEFT WAR ALM	
RETAINED PWR	
MULTI REMOTE ENT	
	SEL273W

6. Touch "RETAINED PWR".

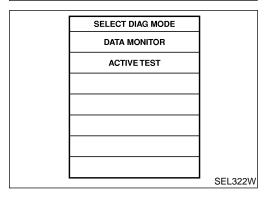

Select diagnosis mode.
 "DATA MONITOR" and "ACTIVE TEST" are available.

"RETAINED PWR" Data Monitor	CONSULT-II	Application Items NAEL 0259 S01 NAEL 0259 S0101	
Monitored Item		Description	
IGN ON SW	Indicates [ON/OFF] condition of ignition	n switch.	
DOOR SW-DR	Indicates [ON/OFF] condition of front d	oor switch LH.	
DOOR SW-AS	Indicates [ON/OFF] condition of front d	oor switch RH.	
Active Test		NAEL0259\$0102	
Test Item		Description	
RETAINED PWR	system, power sunroof system. Those PWR" on CONSULT-II screen even if NOTE: During this test, CONSULT-II can b "RETAINED PWR" should be turne switch is ON. Then turn ignition sw	e operated with ignition switch "OFF" position. d "ON" or "OFF" on CONSULT-II screen when ignition witch OFF for checking retained power operation. CON-	
	Trouble Diag	gnoses	
Symptom	mptom Possible cause Repair order		
Neither headlamp operates.	 7.5A fuse Headlamp relay circuit Lighting switch Smart entrance control unit 	 Check 7.5A fuse [No. 24, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 49 of smart entrance control unit. Check between smart entrance control unit and headlamp relays (LH and RH). Check Lighting switch. Check smart entrance control unit. (EL-778) 	
Headlamp LH (low and high beadoes not operate, but headlamp RH (low and high beam) does operate.		 Check 15A fuse (No. 60, located in fusible link and fuse box). Verify battery positive voltage is present at terminals 1 and 3 of headlamp LH relay. Check headlamp LH relay. Check harness between headlamp LH relay and smart entrance control unit. 	
Headlamp RH (low and high be does not operate, but headlamp (low and high beam) does operate	LH 2. Headlamp RH relay	 Check 15A fuse (No. 59, located in fusible link and fuse box). Verify battery positive voltage is present at terminals 1 and 3 of headlamp RH relay. Check headlamp RH relay. Check harness between headlamp RH relay and smart entrance control unit. 	
LH high beam does not operate but LH low beam operates.	2. Open in the LH high beam circuit 3. Lighting switch	 Check bulb. Check harness between headlamp LH and lighting switch for open circuit. Check lighting switch. 	
LH low beam does not operate, LH high beam operates.	, but 1. Bulb 2. Open in LH low beam circuit 3. Lighting switch	 Check bulb. Check harness between headlamp LH and lighting switch for open circuit. Check lighting switch. 	
PH high beam does not energic	o 1 Rulb	1 Chack hulb	

2. Open in the RH high beam cir-

1. Check bulb.

switch for open circuit.

3. Check lighting switch.

2. Check harness between headlamp RH and lighting


RH high beam does not operate,

but RH low beam operates.

1. Bulb

3. Lighting switch

Symptom	Possible cause	Repair order
RH low beam does not operate, but RH high beam operates.	Bulb Open in RH low beam circuit Lighting switch	Check bulb. Check harness between headlamp RH and lighting switch for open circuit. Check lighting switch.
High beam indicator does not work.	Bulb Open in high beam circuit	Check bulb in combination meter. Check the following. Harness between headlamp LH relay and combination meter for an open circuit Harness between high beam indicator and lighting switch
Battery saver control does not operate properly.	Door switch LH or RH circuit Lighting switch circuit Smart entrance control unit	 Check the following. Harness between smart entrance control unit and LH or RH door switch for open or short circuit. LH or RH door switch ground circuit. LH or RH door switch. Check the following. Harness between smart entrance control unit terminals 20 or 58 and lighting switch terminal 11 for open or short circuit. Harness between lighting switch terminal 5 and ground. Lighting switch. Check smart entrance control unit. (EL-778)

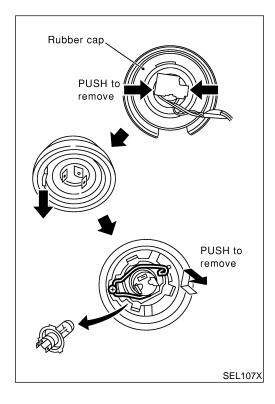

Bulb Replacement

The headlamp is a semi-sealed beam type which uses a replaceable halogen bulb. The bulb can be replaced from the engine compartment side without removing the headlamp body.

- Grasp only the plastic base when handling the bulb. Never touch the glass envelope.
- Disconnect the battery cable.
- Disconnect the harness connector from the back side of the bulb.
- 3. Pull off the rubber cap.
- 4. Remove the headlamp bulb carefully. Do not shake or rotate the bulb when removing it.
- 5. Install in the reverse order of removal.

CAUTION:

Do not leave headlamp reflector without bulb for a long period of time. Dust, moisture, smoke, etc. entering headlamp body may affect the performance of the headlamp. Remove headlamp bulb from the headlamp reflector just before a replacement bulb is installed.

Aiming Adjustment

NAEL0262

Before performing aiming adjustment, check the following. For details, refer to the regulations in your own country.

1) Keep all tires inflated to correct pressures.

Place vehicle flat surface.

See that there is no-load in vehicle (coolant, engine oil filled up to correct level and full fuel tank) other than the driver (or equivalent weight placed in driver's position).


MA

GI

LC

EC

FE

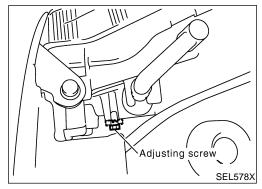

(2.984)

75.8

Screen

Cut-off line

95.8 (3.772)

LOW BEAM

NAFL0262S01

Turn headlamp low beam on.

Use adjusting screws to perform aiming adjustment.

First tighten the adjusting screw all the way and then make adjustment by loosening the screw.

GL


MT

AT

TF

PD

AX

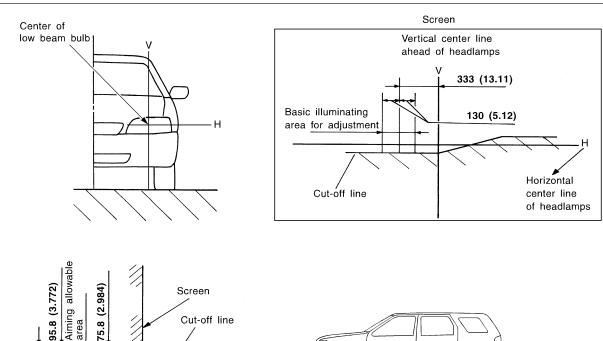


SU

ST

BT

HA

SC

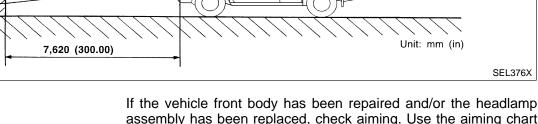


assembly has been replaced, check aiming. Use the aiming chart shown in the figure.

Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

Component Parts and Harness Connector Location

NAFL0263

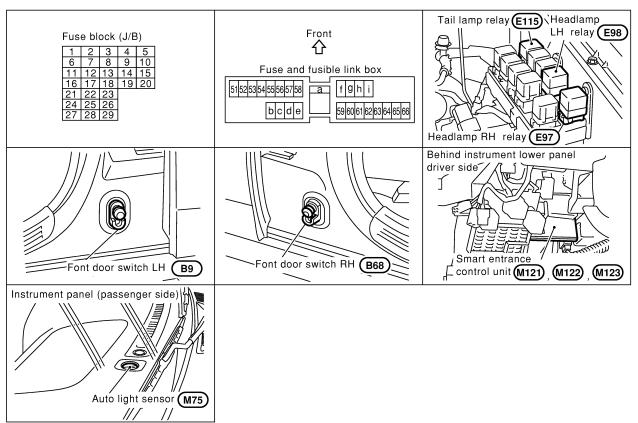

SEL288Y

System Description

The headlamp system for Canada vehicles contains a daytime light control unit that activates the high beam headlamps at approximately half illumination whenever the engine is running. If the parking brake is applied before the engine is started the daytime lights will not be illuminated. The daytime lights will illuminate once the parking brake is released. Thereafter, the daytime lights will continue to operate when the parking brake is applied.

And battery saver system is controlled by the smart entrance control unit. Power is supplied at all times

- to headlamp LH relay terminals 1 and 3
- through 15A fuse (No. 60, located in the fuse and fusible link box), and
- to headlamp RH relay terminals 1 and 3
- through 15A fuse (No. 59, located in the fuse and fusible link box), and
- to smart entrance control unit terminal 49
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].

Ground is supplied

- to daytime light control unit terminal 16 and
- to smart entrance control unit terminals 43 and 64

When the ignition switch is in the ON or START position, power is also supplied

- to daytime light control unit terminal 3, and
- to smart entrance control unit terminal 27
- through 7.5A fuse [No. 11, located in the fuse block (J/B)].

When the ignition switch is in the ACC or ON position, power is supplied

- to smart entrance control unit terminal 26
- through 10A fuse [No. 10, located in the fuse block (J/B)].

When the ignition switch is in the START position, power is supplied

HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM —

SMART C/U - NEW

MA

LC

GL

MIT

AT

TF

AX

NAEL0264S01

NAFI 0264S0101

NAEL0264S0102

System Description (Cont'd)

- to daytime light control unit terminal 2
- through 7.5A fuse [No. 26, located in the fuse block (J/B)].

HEADLAMP OPERATION

Power Supply to Low Beam and High Beam

When lighting switch is in 2ND or PASS position, ground is supplied

- to headlamp relay (LH and RH) terminal 2 from smart entrance control unit terminals 21 and 59
- through smart entrance control unit terminals 22 and 60
- from lighting switch terminal 12.

Headlamp relays (LH and RH) are energized and then power is supplied to headlamps (LH and RH).

Low Beam Operation

When the lighting switch is turned to 2ND and LOW ("B") positions, ground is supplied

- to terminal 2 of the headlamp LH
- through daytime light control unit terminals 11 and 15
- through lighting switch terminals 7 and 5
- through body grounds E13 and E41.

Ground is also supplied

- to terminal 2 of the headlamp RH
- through daytime light control unit terminals 8 and 12
- through lighting switch terminals 10 and 8
- through body grounds E13 and E41.

With power and ground supplied, the low beam headlamps illuminate.

High Beam Operation/Flash-to-pass Operation

When the lighting switch is turned to 2ND and HIGH ("A") or PASS ("C") positions, ground is supplied

- to terminal 1 of headlamp LH
- through daytime light control unit terminals 10 and 13, and
- to combination meter terminal 27 for the HIGH BEAM indicator
- through lighting switch terminals 6 and 5
- through body grounds E13 and E41.

Ground is also supplied

- to terminal 1 of headlamp RH
- through daytime light control unit terminals 9 and 14
- through lighting switch terminals 9 and 8
- through body grounds E13 and E41.

With power and ground supplied, the high beam headlamps and HIGH BEAM indicator illuminate.

BATTERY SAVER CONTROL

Headlamps will remain on for a short while after the ignition switch is turned from ON (or START) to OFF (or ACC).

Continuity between terminals 21 and 22, and between terminals 59 and 60 of smart entrance control unit will be disturbed after 45 seconds, then the headlamps will be turned off.

The headlamps are turned off when front LH or RH door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while headlamps are illuminated. When the lighting switch is turned from OFF to 2ND after headlamps are turned to off by the battery saver control, ground is supply

- to smart entrance control unit terminals 20 and 58 from lighting switch terminal 11, and then
- to headlamp LH and RH relays terminal 2 from smart entrance control unit terminals 21 and 59
- through smart entrance control unit terminals 22 and 60, and
- through lighting switch terminal 12.

Then headlamps illuminate again.

AUTO LIGHT OPERATION

For auto light operation, refer to "HEADLAMP" (EL-444).

NAEL0264S03

HA

SC

EL-455

HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM — SMART C/U - NEW

System Description (Cont'd)

DAYTIME LIGHT OPERATION

NAFI 0264504

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, power is supplied

- through daytime light control unit terminal 7
- to terminal 3 of headlamp RH
- through terminal 1 of headlamp RH
- to daytime light control unit terminal 9
- through daytime light control unit terminal 6
- to terminal 3 of headlamp LH.

Ground is supplied to terminal 1 of headlamp LH.

- through daytime light control unit terminals 10 and 16
- through body grounds E13 and E41.

Because the high beam headlamps are now wired in series, they operate at half illumination.

OPERATION

NAEL0264S05

After starting the engine with the lighting switch in the "OFF" or "1ST" position, the headlamp high beam automatically turns on. Lighting switch operations other than the above are the same as conventional light systems.

Engine)			W	th en	gine	stopp	ed					W	ith er	gine	runni	ng		
Liabtina avitab			OFF			1ST			2ND			OFF			1ST			2ND	
Headlamp Low beam Clearance and tail lamp		Α	В	С	Α	В	С	Α	В	С	Α	В	С	Α	В	С	Α	В	С
I loodlows	High beam	Х	Х	0	Х	Х	0	0	Х	0	△*	△*	0	△*	△*	0	0	Х	0
Headlamp	Low beam	Х	Х	Х	Х	Х	Х	Х	0	Х	Х	Х	Х	Х	Х	Х	Х	0	Х
Clearance and tail lan	np	Х	Х	Х	0	0	0	0	0	0	Х	Х	Х	0	0	0	0	0	0
License and instrument illumination lamp		Х	Х	Х	0	0	0	0	0	0	Х	Х	Х	0	0	0	0	0	0

A: "HIGH BEAM" position

B: "LOW BEAM" position

C: "FLASH TO PASS" position

O : Lamp "ON"


X: Lamp "OFF"

 $[\]triangle$: Lamp dims. (Added functions)

^{*:} When starting the engine with the parking brake released, the daytime light will come ON. When starting the engine with the parking brake pulled, the daytime light won't come ON.


SMART C/U - NEW
Schematic


Schematic G[NAEL0265 ·To rear window defogger system ALTERNATOR MA CHARGE **⊚** HIGH BEAM INDICATOR 52 **⊚** LC PARKING BRAKE SWITCH IGNITION SWITCH START FUSE To warning lamp system EG LOW HEAD-RH RH FE FUSE DAYTIME LIGHT CONTROL UNIT 16 9 8 CL • To vehicle security system HIGH LOW HEAD-LAMP MT 1011 AT HGH 4 13 12 TF PD FUSE 23 22 9 AXTo tail lamps, illumination and warning chime systems 58 COMBINATION SWITCH (LIGHTING SWITCH)
OFF AUTO 1ST 2ND OFF OCCUPANT OF OCCUPANT OCCUP SU 57 BR SMART ENTRANCE CONTROL UNIT FUSE BATTERY ST FRONT DOOR SWITCH RH RS IGNITION SWITCH ON or START FUSE BT HA 43 IGNITION SWITCH ACC or ON 64 SC AUTO LIGHT SENSOR EL ω

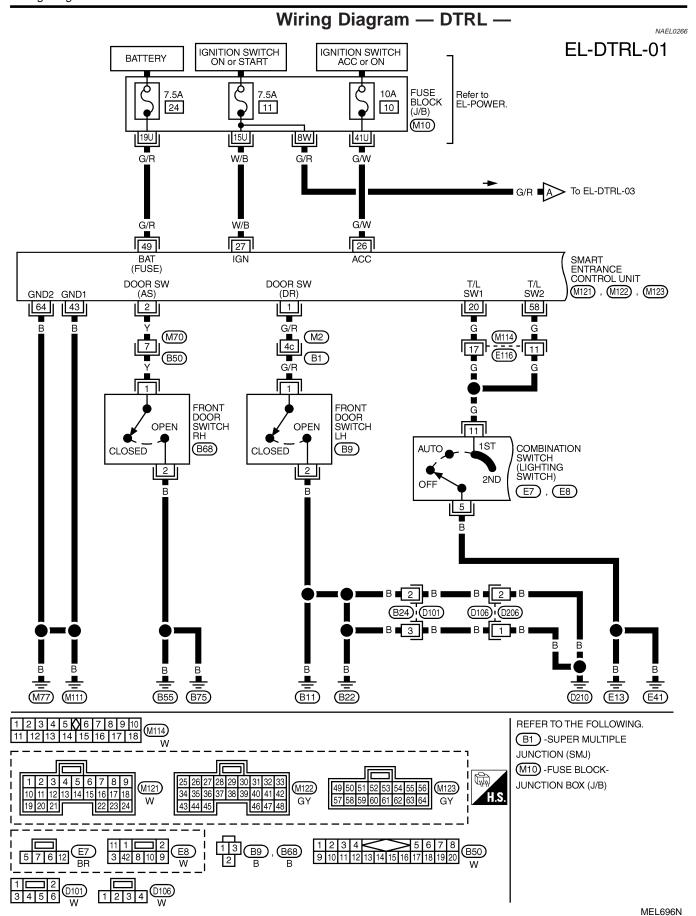

HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM — SMART C/U - NEW


Wiring Diagram — DTRL — (Cont'd)

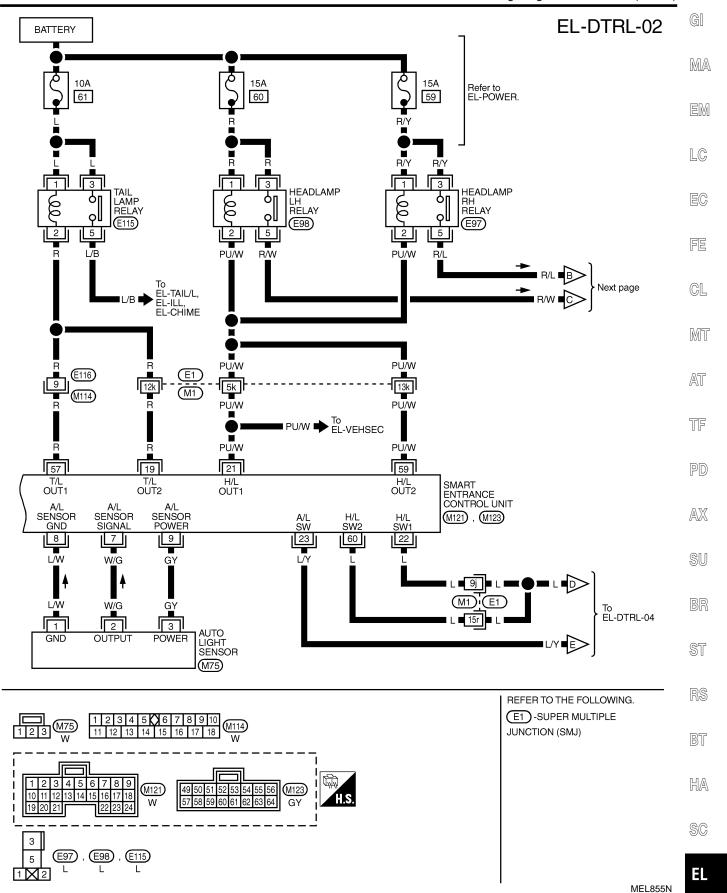

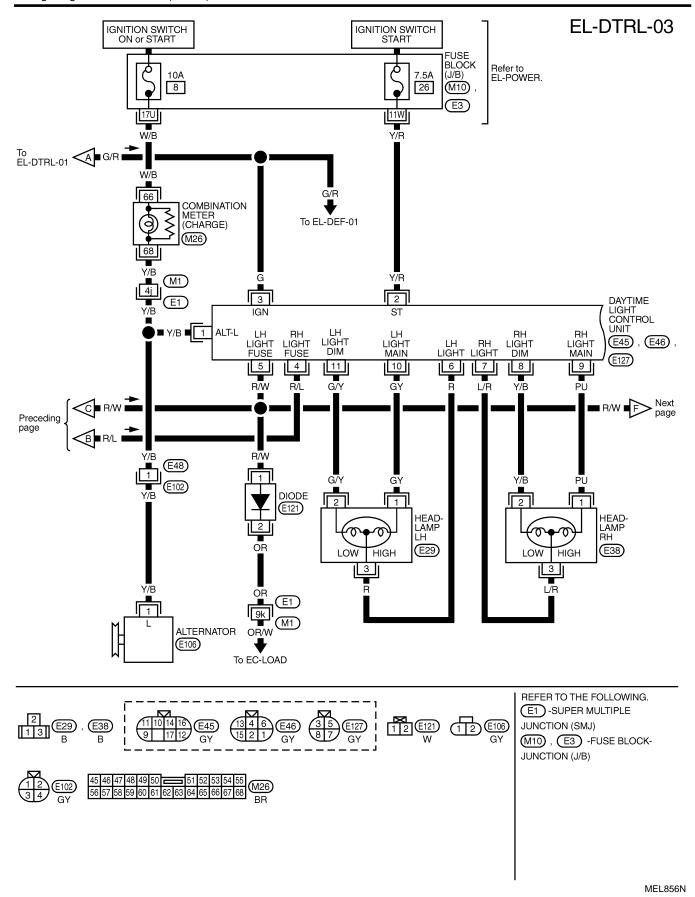

HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM —

SMART C/U - NEW

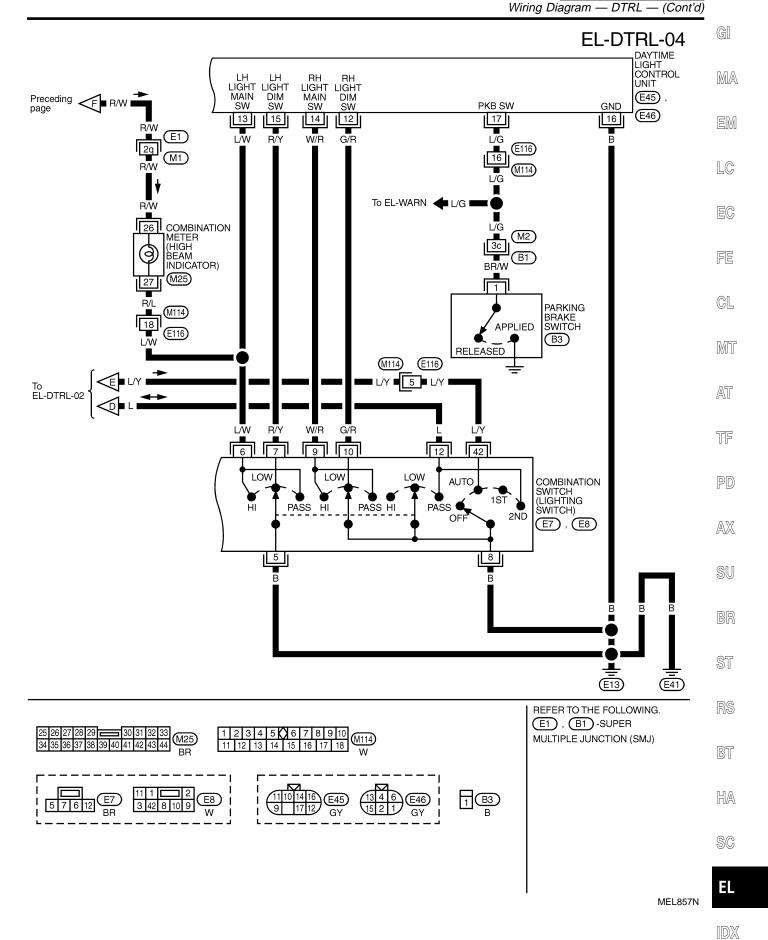

HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM —

CONSULT-II Inspection Procedure

SMART C/U - NEW

CONSULT-II Inspection Procedure

"RETAIND PWR"

Refer to "HEADLAMP (FOR USA)" (EL-450).

NAEL0267 NAEL0267S01

NAEL0268

NAEL0268S01

CONSULT-II Application Items "RETAIND PWR"

Refer to "HEADLAMP (FOR USA)" (EL-451).

Trouble Diagnoses

	modele Blag.	10000	NAEL0269
Symptom	Possible cause	Repair order	
Neither headlamp operates.	 7.5A fuse Lighting switch Smart entrance control unit 	 Check 7.5A fuse [No. 24, located in fuse blo (J/B)]. Verify battery positive voltage is present at to 49 of smart entrance control unit. Check Lighting switch. Check smart entrance control unit. (EL-778) 	
LH headlamp (low and high beam) does not operate, but RH headlamp (low and high beam) does operate.	1. 15A fuse 2. Headlamp LH relay 3. Headlamp LH relay circuit 4. Headlamp RH ground circuit 5. Lighting switch circuit 6. Daytime light control unit 7. Smart entrance control unit	 Check 15A fuse (No. 60, located in fusible lifuse box). Verify battery positive voltage is pat terminal 1 and 3 of headlamp LH relay. Check headlamp LH relay. Check the following. Harness between headlamp LH relay and dalight control unit. Harness between headlamp LH relay and srentrance control unit. Harness between headlamp LH and daytime control unit. Check harness between smart entrance con and lighting switch. Check daytime light control unit. (EL-464) Check smart entrance control unit. (EL-778) 	resent aytime nart a light

HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM —

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

Repair order Symptom Possible cause RH headlamp (low and high beam) 1. 15A fuse 1. Check 15A fuse (No. 59, located in fusible link and does not operate, but LH headlamp 2. Headlamp RH relay fuse box). Verify battery positive voltage is present MA 3. Headlamp RH relay circuit (low and high beam) does operate. at terminals 1 and 3 of headlamp RH relay. 4. Headlamp RH ground circuit 2. Check headlamp RH relay. 5. Lighting switch circuit 3. Check the following. 6. Daytime light control unit a. Harness between headlamp RH relay and daytime 7. Smart entrance control unit light control unit. b. Harness between headlamp RH relay and smart entrance control unit. 4. Harness between headlamp RH and daytime light control unit. 5. Check harness between smart entrance control unit and lighting switch. 6. Check daytime light control unit. (EL-464) 7. Check smart entrance control unit. (EL-778) LH high beam does not operate, 1. Bulb 1. Check bulb. but LH low beam operates. 2. Headlamp LH high beams cir-2. Check harness between LH headlamp and daytime light control unit. 3. Lighting switch 3. Check lighting switch. 4. Lighting switch circuit 4. Check harness between daytime light control unit MI 5. Daytime light control unit and lighting switch. 5. Check daytime light control unit. (EL-464) LH low beam does not operate, but 1. Bulb 1. Check bulb. AT LH high beam operates. 2. Headlamp LH high beams cir-2. Check harness between LH headlamp and daytime light control unit. 3. Lighting switch 3. Check lighting switch. TF 4. Lighting switch circuit 4. Check harness between daytime light control unit 5. Daytime light control unit and lighting switch. 5. Check daytime light control unit. (EL-464) RH high beam does not operate, 1. Bulb 1. Check bulb. but RH low beam operates. 2. Open in the RH high beams 2. Check harness between RH headlamp and daytime circuit light control unit. AX 3. Lighting switch 3. Check lighting switch. 4. Lighting switch circuit 4. Check harness between daytime light control unit 5. Daytime light control unit and lighting switch. 5. Check daytime light control unit. (EL-464) RH low beam does not operate, 1. Bulb 1. Check bulb. but RH high beam operates. 2. Open in the RH high beams 2. Check harness between RH headlamp and daytime light control unit. circuit 3. Lighting switch 3. Check lighting switch. 4. Lighting switch circuit 4. Check harness between daytime light control unit 5. Daytime light control unit and lighting switch. 5. Check daytime light control unit. (EL-464) High beam indicator does not work. 1. Bulb 1. Check bulb in combination meter. 2. Open in high beam circuit 2. Check the following. a. Harness between headlamp LH relay and combination meter for an open circuit. BT b. Harness between high beam indicator and lighting switch. HA



EL



HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM — SMART C/U - NEW

rouble Diagnoses (Cont'd)		
Symptom	Possible cause	Repair order
Battery saver control does not operate properly.	Door switch LH or RH circuit Lighting switch circuit Smart entrance control unit	 Check the following. Harness between smart entrance control unit and LH or RH door switch for open or short circuit. LH or RH door switch ground circuit. LH or RH door switch. Check the following. Harness between smart entrance control unit terminals 20 or 58 and lighting switch terminal 11 for open or short circuit. Harness between lighting switch terminal 5 and ground. Lighting switch. Check smart entrance control unit. (EL-778)
Daytime light control does not operate properly.	Fuse check Parking brake switch Parking brake switch circuit Alternator circuit Daytime light control unit	 Check the following. 7.5A fuse [No. 11, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 3 of daytime light control unit. 7.5A fuse [No. 26, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 2 of daytime light control unit. Check parking brake switch. Check harness between parking brake switch and daytime light control unit. Check harness between alternator and daytime light control unit. Check daytime light control unit. (EL-464)

DAYTIME LIGHT CONTROL UNIT INSPECTION TABLE

					NAEL02698
Terminal No.	Wire color	Item		Condition	Voltage (Approximate values)
1	1 Y/B Alternator	Alternator	Con	When turning ignition switch to "ON"	Less than 1V
				When engine is running	Battery voltage
			COFF	When turning ignition switch to "OFF"	Less than 1V
2	Y/R	Start signal	(Cs)	When turning ignition switch to "ST"	Battery voltage
			CON	When turning ignition switch to "ON" from "ST"	Less than 1V
			COFF	When turning ignition switch to "OFF"	Less than 1V
3	G	Power source	CON	When turning ignition switch to "ON"	Battery voltage
			(Cs)	When turning ignition switch to "ST"	Battery voltage
			COFF	When turning ignition switch to "OFF"	Less than 1V

HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM —

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

Terminal No.	Wire color	Item		Condition	Voltage (Approximate values)	
4	R/L	Power source	Con	When turning ignition switch to "ON"	Battery voltage	-
			COFF	When turning ignition switch to "OFF"	Battery voltage	_
5	R/W	Power source	Con	When turning ignition switch to "ON"	Battery voltage	_
			COFF	When turning ignition switch to "OFF"	Battery voltage	_
6	R	LH hi beam		When lighting switch is turned to the 2ND position with "HI BEAM" position	Battery voltage	_
			and the same	When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION: Block wheels and ensure selector lever is in N or P	Approx. half battery voltage	-
				position.		_
7	L/R	RH hi beam		When lighting switch is turned to the 2ND position with "HI BEAM" position	Battery voltage	
				When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION:	Approx. half battery voltage	_
				Block wheels and ensure selector lever is in N or P position.		
9	PU	RH hi beam (ground)		When lighting switch is turned to the 2ND position with "HI BEAM" position	Less than 1V	_
				When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION:	Approx. half battery voltage	
				Block wheels and ensure selector lever is in N or P position.		
10	GY	LH hi beam (ground)		When lighting switch is turned to the 2ND position with "HI BEAM" position	Less than 1V	_
				When releasing parking brake with engine running and turning lighting switch to "OFF" (daytime light operation) CAUTION:	Approx. half battery voltage	
			amilia.	Block wheels and ensure selector lever is in N or P position.		
13 14	L/W W/R	Lighting switch (Hi beam)		When turning lighting switch to "HI BEAM"	Battery voltage	_
14	V V / FX	(i ii beaili)		When turning lighting switch to "FLASH TO PASS"	Battery voltage	_
16	В	Ground		_	_	_
17	L/G	Parking brake	0-	When parking brake is released	Battery voltage	

HEADLAMP (FOR CANADA) — DAYTIME LIGHT SYSTEM — SMART C/U - NEW

Bulb Replacement

Bulb Replacement

Refer to "HEADLAMP (FOR USA)" (EL-452).

NAEL0270

Aiming Adjustment

Refer to "HEADLAMP (FOR USA)" (EL-453).

NAEL0271

PARKING, LICENSE AND TAIL LAMPS

SMART C/U - NEW

System Description

System Description

The parking, license and tail lamp operation is controlled by the lighting switch which is built into the combination switch and smart entrance control unit. The battery saver system is controlled by the smart entrance control unit.

MA

LC

GL

AT

TF

Power is supplied at all times

- to tail lamp relay terminals 1 and 3
- through 10A fuse (No. 61, located in the fuse and fusible link box), and
- to smart entrance control unit terminal 49
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].

When ignition switch is in ON or START position, power is supplied

- to smart entrance control unit terminal 27
- through 7.5A fuse [No. 11, located in the fuse block (J/B)].

When the ignition switch is in the ACC or ON position, power is supplied

- to smart entrance control unit terminal 26
- through 10A fuse [No. 10, located in the fuse block (J/B)].

Ground is supplied

to smart entrance control unit terminals 43 and 64

through body grounds M77 and M111.

MIT NAFI 0272S01

LIGHTING OPERATION BY LIGHTING SWITCH

When lighting switch is in 1ST (or 2ND) position, ground is supplied

- to tail lamp relay terminal 2 from smart entrance control unit terminals 19 and 57
- through smart entrance control unit terminals 20 and 58, and
- through lighting switch and body grounds E13 and E41.

Tail lamp relay is then energized and the parking, license and tail lamps illuminate.

NAFI 0272502

LIGHTING OPERATION BY AUTO LIGHT CONTROL SYSTEM

When lighting switch is in AUTO position, ground is supplied

- to tail lamp relay terminal 2 from smart entrance control unit terminals 19 and 57
- through smart entrance control unit terminals 43 and 64, and
- to body grounds M77 and M111.

Tail lamp relay is then energized and the parking, license and tail lamps illuminate.

SU

AX

BATTERY SAVER CONTROL

Parking, license and tail lamps will remain on for a short while after the ignition switch is turned from ON (or START) to OFF (or ACC).

Continuity between terminals 19 and 20, and between terminals 57 and 58 of smart entrance control unit will be disturbed after 45 seconds, then the parking, license and tail lamps will be turned off.


The parking, license and tail lamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while parking, license and tail lamps are illuminated.

When the lighting switch is turned from OFF to 1ST (or 2ND) after the parking, license and tail lamps are turned off by the battery saver control, ground is supplied.


- to smart entrance control unit terminals 20 and 58 from lighting switch terminal 11, and
- to tail lamp relay terminal 2 from smart entrance control unit terminals 19 and 57.


Then the parking, license and tail lamps illuminate again.

HA

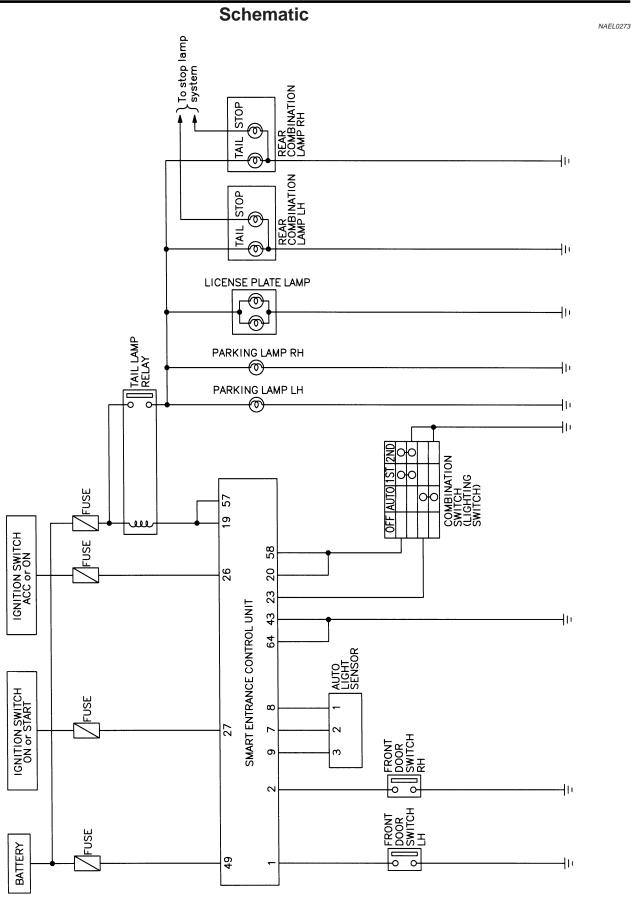


Wiring Diagram — TAIL/L

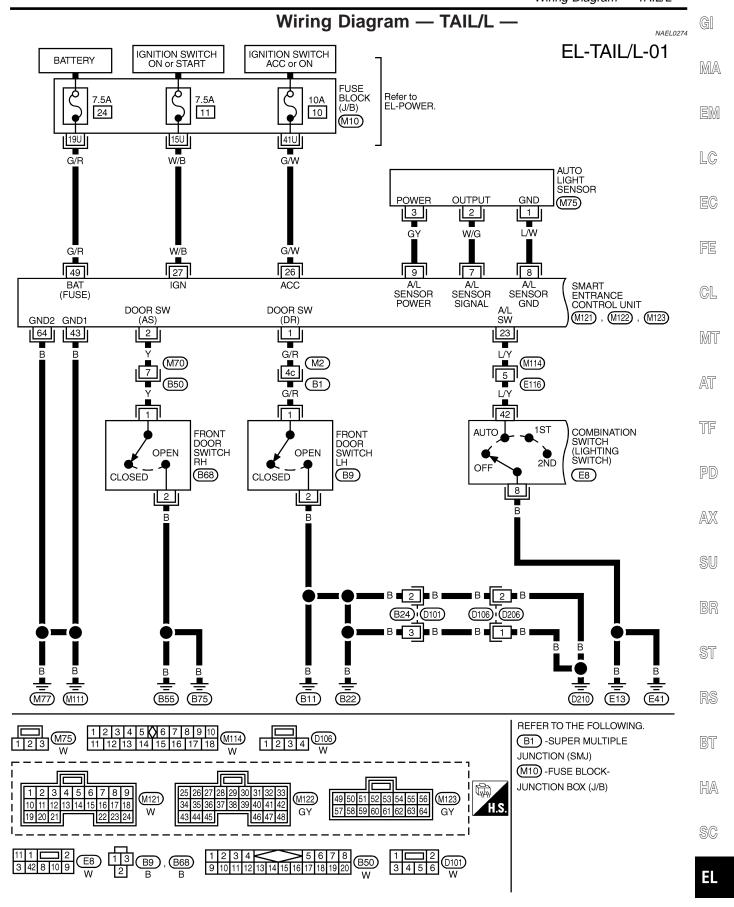


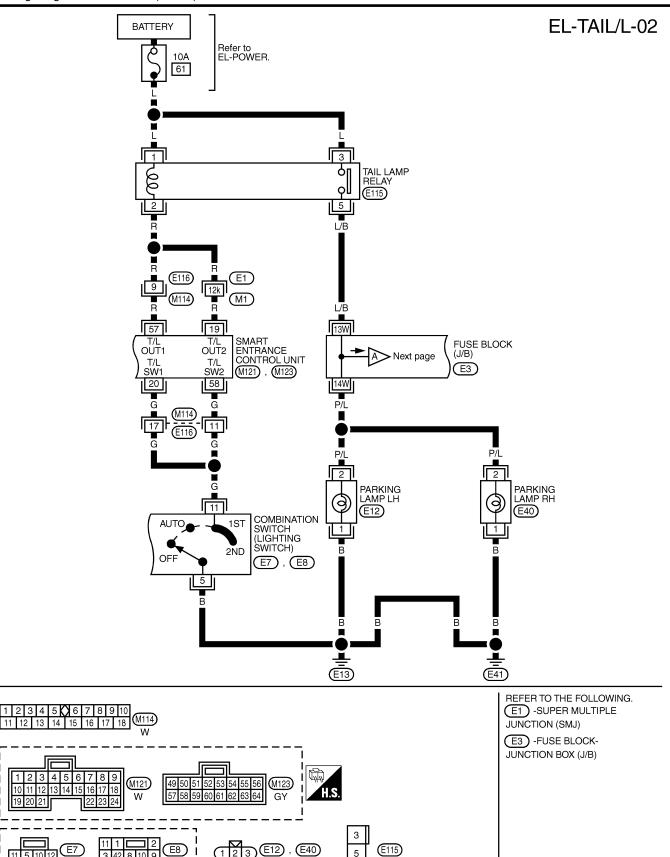

MEL859N

Wiring Diagram — TAIL/L — (Cont'd)

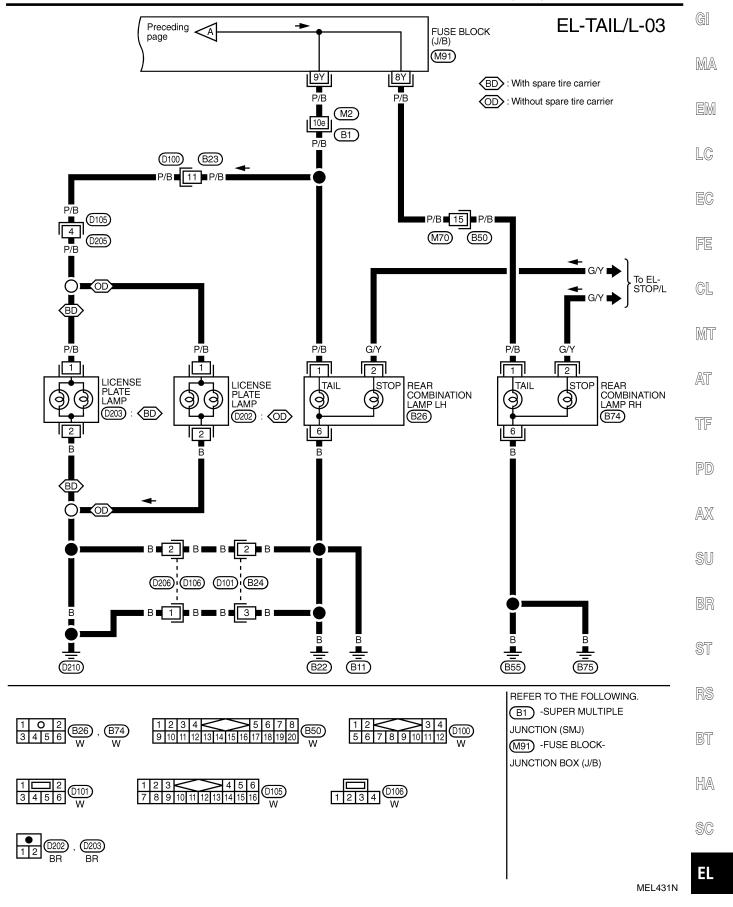

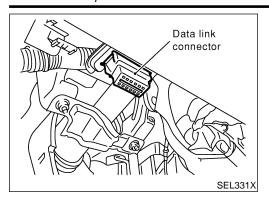


CONSULT-II Inspection Procedure "RETAINED PWR"

NAEL0275

NAEL0275S01

- 1. Turn ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

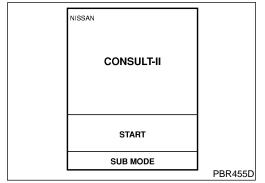


- 3. Turn ignition switch "ON".
- 4. Touch "START".

SELECT SYSTEM]
ENGINE	
A/T	
AIR BAG	
ABS	
SMART ENTRANCE	
	SEL941W

5. Touch "SMART ENTRANCE".

SELECT TEST ITEM	
BATTERY SAVER	
THEFT WAR ALM	
RETAINED PWR	
MULTI REMOTE ENT	
	SEL273W

6. Touch "RETAINED PWR".

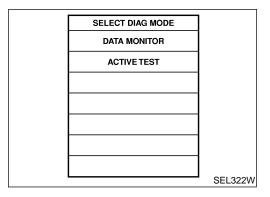

Select diagnosis mode.
 "DATA MONITOR" and "ACTIVE TEST" are available.

PARKING, LICENSE AND TAIL LAMPS

SMART C/U - NEW

CONSULT-II Application Items

"RETAINED PWR" **Data Monitor**

G[NAEL0276

NAEL0276S01 NAEL0276S0101

Monitored Item	Description	
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.	EM
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.	
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.	LC

MA

Active Test

NAEL0276S0102

Test Item	Description
RETAINED PWR	This test is able to supply RAP signal (power) from smart entrance control unit to power window system, power sunroof system. Those systems can be operated when turning on "RETAINED PWR" on CONSULT-II screen even if the ignition switch is tuned OFF. NOTE: During this test, CONSULT-II can be operated with ignition switch "OFF" position.
	"RETAINED PWR" should be turned "ON" or "OFF" on CONSULT-II screen when ignition switch is ON. Then turn ignition switch OFF for checking retained power operation. CONSULT-II might be stuck if "RETAINED PWR" is turned "ON" or "OFF" on CONSULT-II screen

CL

FE

when ignition switch is OFF.

MT

AT

Trouble Diagnoses

NAEL0277

		· · · · · · · · · · · · · · · · · · ·	
Symptom	Possible cause	Repair order	TF
No lamps operate (including head-lamps).	 7.5A fuse Lighting switch Smart entrance control unit 	Check 7.5A fuse [No. 24, lacated in fuse block (J/B)]. Verify battery positive voltage is present at terminal 49 of smart entrance control unit. Check lighting switch. Check smart entrance control unit. (EL-778)	PD AX
No parking, license and tail lamps operate, but headlamps do operate.	 1. 10A fuse 2. Tail lamp relay 3. Tail lamp relay circuit 4. Lighting switch 5. Lighting switch circuit 	 Check 10A fuse (No. 61, located in fusible and fuse block). Verify battery positive voltage is present at terminals 1 and 3 of tail lamp relay. Check tail lamp relay. Check the following. 	SU
	Smart entrance control unit	a. Harness between smart entrance control unit terminals 19 and 57 and tail lamp relay terminal 2b. Harness between tail lamp relay terminal 5 and fuse	BR
		block. 4. Check lighting switch. 5. Check the following.	ST
		a. Harness between lighting switch terminal 11 and smart entrance control unit terminals 20 and 58. b. Harness between lighting switch terminal 5 and ground.	RS
		6. Check smart entrance control unit. (EL-778)	BT

HA

SC




PARKING, LICENSE AND TAIL LAMPS

SMART C/U - NEW


Trouble Diagnoses (Cont'd)

Symptom	Possible cause	Repair order
Battery saver control does not operate properly.	Driver or passenger side door switch circuit Lighting switch circuit Smart entrance control unit	 Check the following. Harness between smart entrance control unit and driver or passenger side door switch for open or short circuit. Driver or passenger side door switch ground circuit. Driver or passenger side door switch. Check the following. Harness between smart entrance control unit terminals 20 or 58 and lighting switch terminal 11 for open or short circuit. Harness between lighting switch terminal 5 and ground. Lighting switch. Check smart entrance control unit. (EL-778)

[DX

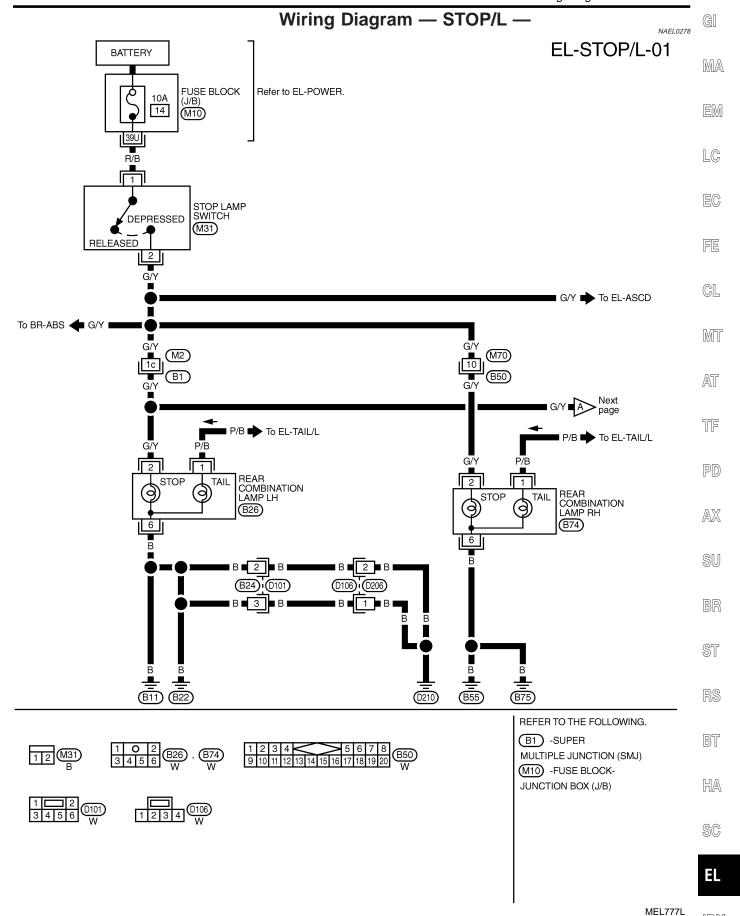

EL-STOP/L-02

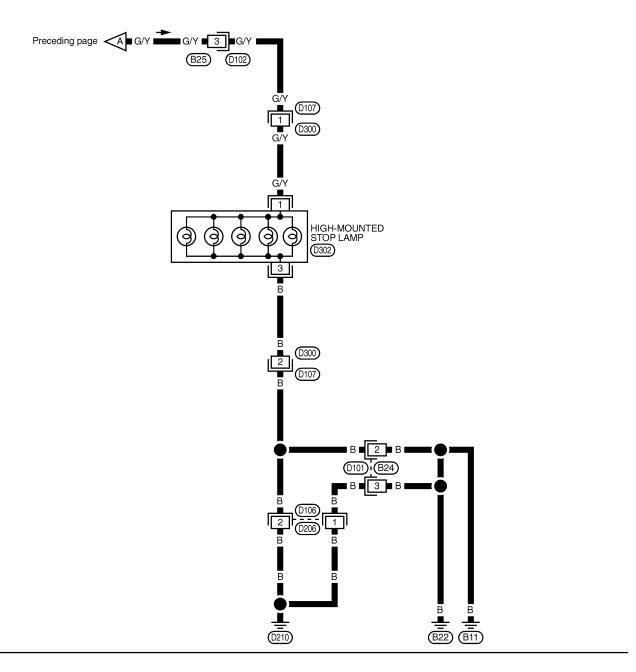




MEL006M

[DX

Wiring Diagram — BACK/L -

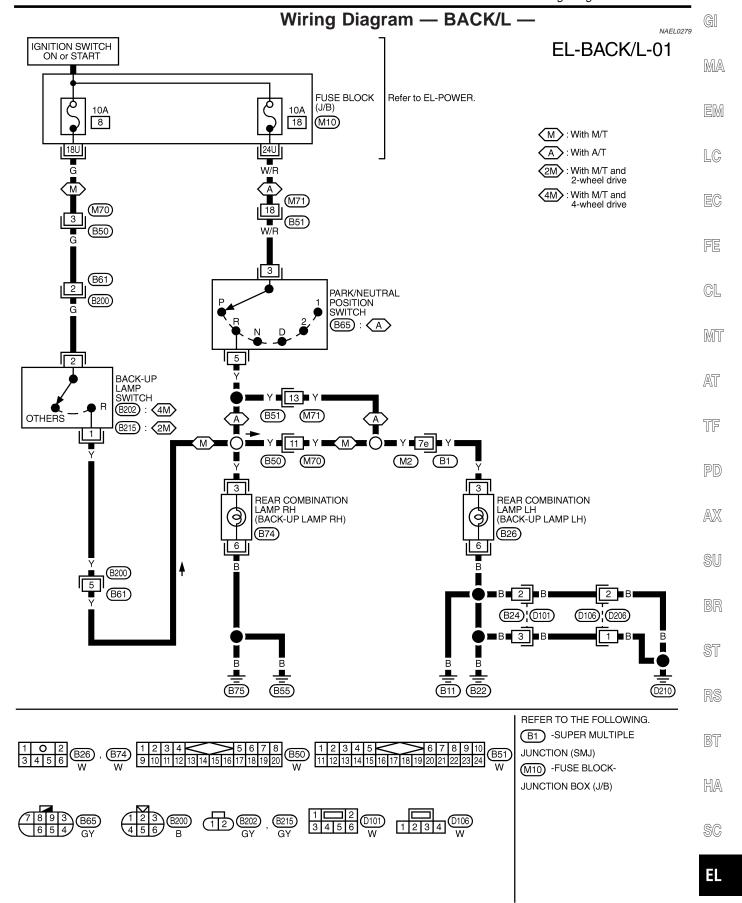

NAEL0280

System Description

OUTLINE NAEL0280S01

Power is supplied at all times

- to headlamp RH relay terminals 1 and 3
- through 15A fuse (No. 59, located in the fuse and fusible link box), and
- to smart entrance control unit terminal 49
- through 7.5A fuse [No. 24, located in the fuse block (J/B)], and
- to front fog lamp relay terminal 3
- through 15A fuse (No. 53, located in the fuse and fusible link box).

When ignition switch is in ON or START position, power is supplied

- to smart entrance control unit terminal 27
- through 7.5A fuse [No. 11, located in the fuse block (J/B)].

When the ignition switch is in the ACC or ON position, power is supplied

- to smart entrance control unit terminal 26
- through 10A fuse [No. 10, located in the fuse block (J/B)].

Ground is supplied to smart entrance control unit terminals 43 and 64.

When lighting switch is in 2ND position, ground is supplied

- to headlamp RH relay terminal 2 from smart entrance control unit terminals 21 and 59.
- through smart entrance control unit terminals 22 and 60,
- through lighting switch terminal 12, and
- through body grounds E13 and E41.

Headlamp RH relay is then energized.

FOG LAMP OPERATION

NAFI 0280S

The front fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position and LOW ("B") position for front fog lamp operation.

With the front fog lamp switch in the ON position, ground is supplied

- to front fog lamp relay terminal 1
- through the front fog lamp switch, lighting switch and body grounds E13 and E41.

The front fog lamp relay is energized and power is supplied

- from front fog lamp relay terminal 5
- to terminal 1 of each front fog lamp.

Ground is supplied to terminal 2 of each front fog lamp through body grounds E13 and E41.

With power and ground supplied, the front fog lamps illuminate.

BATTERY SAVER CONTROL

NAEL0280S

Front fog lamps will remain on for a short while after the ignition switch is turned from ON (or START) to OFF (or ACC).

Continuity between terminals 21 and 22, and between terminals 59 and 60 of smart entrance control unit will be disturbed after 45 seconds, then the front fog lamps will be turned off.

Front fog lamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while front fog lamps are illuminated.

When the lighting switch is turned from OFF to 2ND after front fog lamps are turned off by the battery saver control, ground is supplied


- to smart entrance control unit terminals 20 and 58 from lighting switch terminal 11, and then
- to headlamp RH relay terminal 2 from smart entrance control unit terminal 21
- through smart entrance control unit terminal 22 from lighting switch terminal 12.


Then the front fog lamps illuminate again.

NOTE:

For Trouble Diagnoses for battery saver control, refer to "HEADLAMP (FOR USA)", EL-451.

MEL705N

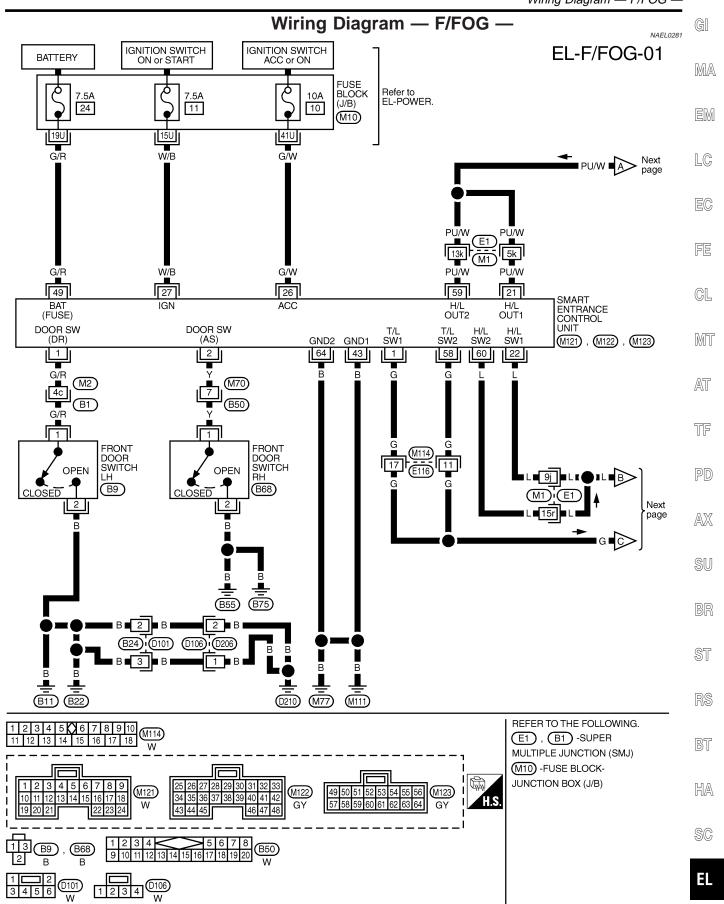


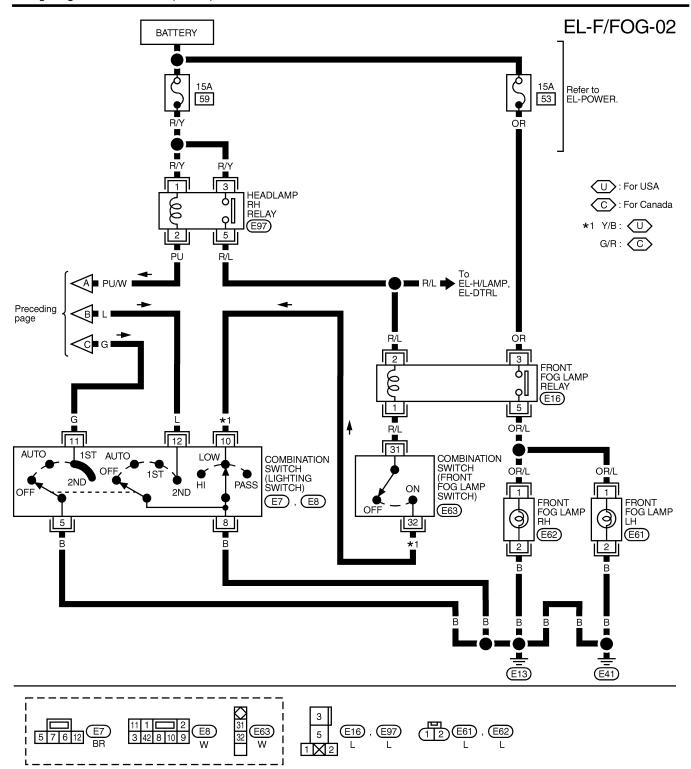



MEL860N


FRONT FOG LAMP

Aiming Adjustment

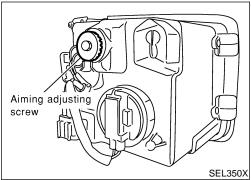

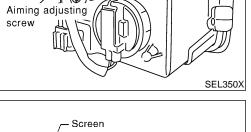

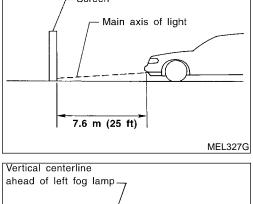

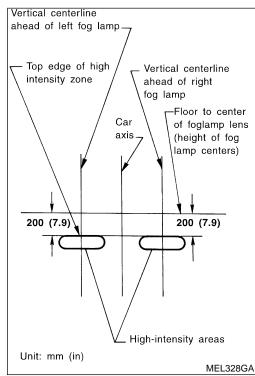


Aiming Adjustment

Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver's seat.

Adjust aiming in the vertical direction by turning the adjusting screw.

- Set the distance between the screen and the center of the fog lamp lens as shown at left.
- Turn front fog lamps ON.

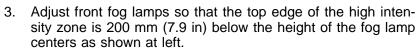

When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.

LC

GI

MA

EG

FE

GL

MT

AT

TF

PD

AX

SU

BR

BT

HA

SC

TURN SIGNAL AND HAZARD WARNING LAMPS

System Description

SMART C/U - NEW

System Description

TURN SIGNAL OPERATION

NAEL0283

With the hazard switch in the OFF position and the ignition switch in the ON or START position, power is supplied

- through 7.5A fuse [No. 12, located in the fuse block (J/B)]
- to hazard switch terminal 2
- through terminal 1 of the hazard switch
- to combination flasher unit terminal 1
- through terminal 3 of the combination flasher unit
- to turn signal switch terminal 1.

Ground is supplied to combination flasher unit terminal 2 through body grounds M4, M66 and M147.

LH Turn

FL0283S0101

When the turn signal switch is moved to the LH position, power is supplied from turn signal switch terminal 3 to

- front turn signal lamp LH terminal 2
- combination meter terminal 25
- rear combination lamp LH terminal 5.

Ground is supplied to the front turn signal lamp LH terminal 1 through body grounds E13 and E41.

Ground is supplied to the rear combination lamp LH terminal 6 through body grounds B11, B22 and D210.

Ground is supplied to combination meter terminal 30 through body grounds M4, M66 and M147.

With power and ground supplied, the combination flasher unit controls the flashing of the LH turn signal lamps.

RH Turn

NAFL0283S0102

When the turn signal switch is moved to the RH position, power is supplied from turn signal switch terminal 2 to

- front turn signal lamp RH terminal 3
- combination meter terminal 29
- rear combination lamp RH terminal 5.

Ground is supplied to the front turn signal lamp RH terminal 1 through body grounds E13 and E41.

Ground is supplied to the rear combination lamp RH terminal 6 through body grounds B55 and B75.

Ground is supplied to combination meter terminal 30 through body grounds M4, M66 and M147.

With power and ground supplied, the combination flasher unit controls the flashing of the RH turn signal lamps.

HAZARD LAMP OPERATION

NAEL0283S02

Power is supplied at all times to hazard switch terminal 3 through:

15A fuse [No. 20, located in the fuse block (J/B)].

With the hazard switch in the ON position, power is supplied

- through terminal 1 of the hazard switch
- to combination flasher unit terminal 1
- through terminal 3 of the combination flasher unit
- to hazard switch terminal 4.

Ground is supplied to combination flasher unit terminal 2 through body grounds M4, M66 and M147.

Power is supplied through terminal 5 of the hazard switch to

- front turn signal lamp LH terminal 3
- combination meter terminal 25
- rear combination lamp LH terminal 5.


Power is supplied through terminal 6 of the hazard switch to

- front turn signal lamp RH terminal 3
- combination meter terminal 29
- rear combination lamp RH terminal 5.

TURN SIGNAL AND HAZARD WARNING LAMPS

SWART C/U - NEW
System Description (Cont'd)

Ground is supplied to terminal 1 of each front turn signal lamp through body grounds E13 and E41. GI Ground is supplied to terminal 6 of the rear combination lamp LH through body grounds B11, B22 and D210. Ground is supplied to terminal 6 of the rear combination lamp RH through body grounds B55 and B75. Ground is supplied to combination meter terminal 30 through body grounds M4, M66 and M147. MA With power and ground supplied, the combination flasher unit controls the flashing of the hazard warning lamps. MULTI-REMOTE CONTROL SYSTEM OPERATION NAEL0283S03 Power is supplied at all times to smart entrance control unit terminal 49 LC through 7.5A fuse [No. 24, located in the fuse block (J/B)]. Ground is supplied to smart entrance control unit terminal 43 and 64. Power is supplied to smart entrance control unit terminals 47 and 48, when the multi-remote control system is triagered. Refer to "MULTI-REMOTE CONTROL SYSTEM". EL-711. Power is supplied through terminal 47 of smart entrance control unit to front turn signal lamp LH terminal 3 combination meter terminal 25 GL rear combination lamp LH terminal 5. Power is supplied through terminal 48 of smart entrance control unit to MIT front turn signal lamp RH terminal 3 combination meter terminal 29 rear combination lamp RH terminal 5. AT Ground is supplied to terminal 1 of each front turn signal lamp through body grounds E13 and E41. Ground is supplied to terminal 6 of the rear combination lamp LH through body grounds B11, B22 and D210. TF Ground is supplied to terminal 6 of the rear combination lamp RH through body grounds B55 and B75. Ground is supplied to combination meter terminal 30 through body grounds M4, M66 and M147. With power and ground supplied, the smart entrance control unit controls the flashing of the hazard warning lamps. AX BT HA

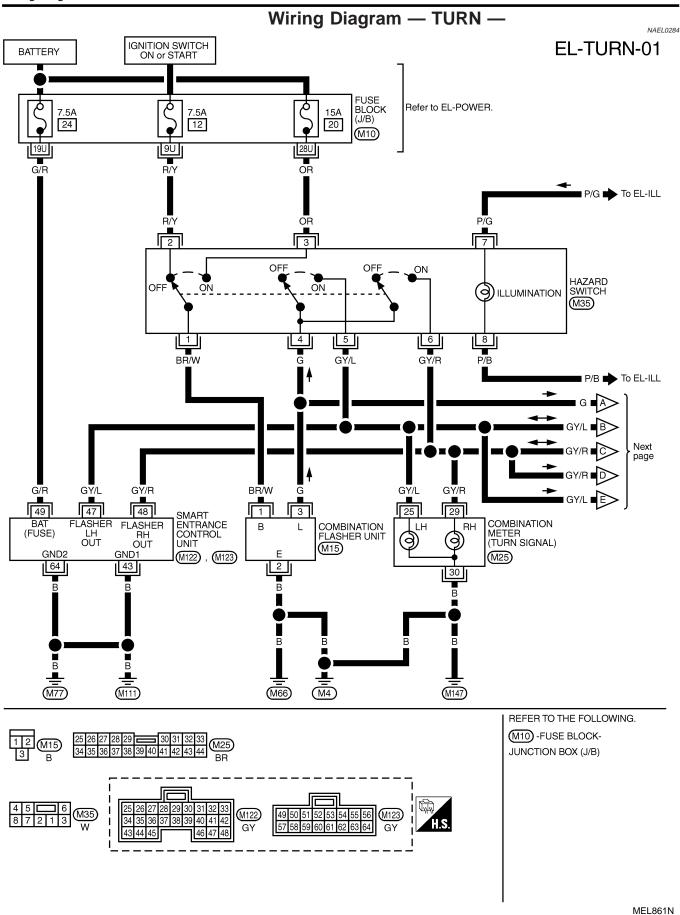


EL-484

TURN SIGNAL AND HAZARD WARNING LAMPS


SMART C/U - NEW

Wiring Diagram — TURN — (Cont'd)

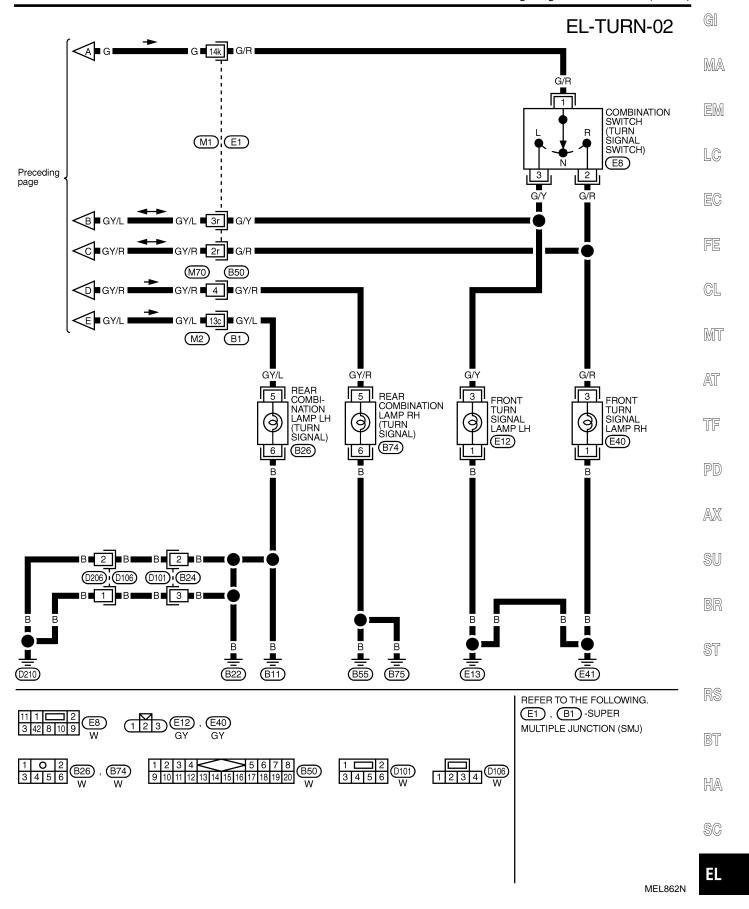

TURN SIGNAL AND HAZARD WARNING LAMPS

Trouble Diagnoses			
Symptom	Possible cause	Repair order	
Turn signal and hazard warning lamps do not operate.	Hazard switch Combination flasher unit Open in combination flasher unit circuit	Check hazard switch. Refer to combination flasher unit check. Check wiring to combination flasher unit for open circuit.	
Turn signal lamps do not operate but hazard warning lamps operate.	 7.5A fuse Hazard switch Combination switch (turn signal) Open in combination switch (turn signal) circuit 	 Check 7.5A fuse [No. 12, located in fuse block (J/B)]. Turn ignition switch ON and verify battery positive voltage is present at terminal 2 of hazard switch. Check hazard switch. Check combination switch (turn signal). Check the wire between combination flasher unit terminal 3 and combination switch (turn signal) terminal 1 for open circuit. 	
Hazard warning lamps do not operate but turn signal lamps operate.	1. 15A fuse 2. Hazard switch 3. Open in hazard switch circuit	 Check 15A fuse [No. 20, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 3 of hazard switch. Check hazard switch. Check the wire between combination flasher unit terminal 3 and hazard switch terminal 4 for open circuit. 	
Front turn signal lamp LH or RH does not operate.	Bulb Grounds E13 and E41 Open in front turn signal lamp circuit	Check bulb. Check grounds E13 and E41. Check harness between front turn signal lamp and combination switch.	
Rear combination lamp LH does not operate.	Bulb Grounds B11, B22 and D210 Open in rear combination lamp LH circuit	Check bulb. Check grounds B11, B22 and D210. Check harness between rear combination lamp LH and hazard switch.	
Rear combination lamp RH does not operate.	Bulb Grounds B55 and B75 Open in rear combination lamp RH circuit	Check bulb. Check grounds B55 and B75. Check harness between rear combination lamp RH and hazard switch.	
LH and RH turn indicators do not operate.	1. Ground	1. Check grounds M4, M66 and M147.	
LH or RH turn indicator does not operate.	Bulb Open in turn indicator circuit	Check bulb in combination meter. Check harness between combination meter and hazard switch.	

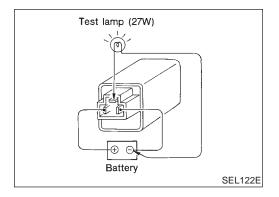

Electrical Components Inspection COMBINATION FLASHER UNIT CHECK

NAEL0286

NAEL0286S01

- Before checking, ensure that bulbs meet specifications.
- Connect a battery and test lamp to the combination flasher unit, as shown. Combination flasher unit is properly functioning if it blinks when power is supplied to the circuit.

ILLUMINATION

SWART C/U - NEW

System Description

System Description

L0287

The illumination lamp operation is controlled by the lighting switch which is built into the combination switch and smart entrance control unit. The battery saver system is controlled by smart entrance control unit. Power is supplied at all times

1

- to tail lamp relay terminals 1 and 3
- through 10A fuse (No. 61, located in the fuse and fusible link box), and

MA

- to smart entrance control unit terminal 49
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].

When ignition switch is in ON or START position, power is supplied

LC

- to smart entrance control unit terminal 27
- through 7.5A fuse [No. 11, located in the fuse block (J/B)], and

When the ignition switch is in ACC or ON position, power is supplied

EG

GL

Mī

AT

TF

- to smart entrance control unit terminal 26
- through 10A fuse [No. 10, located in the fuse block (J/B)].

Ground is supplied

to smart entrance control unit terminals 43 and 64

through body grounds M77 and M111.

NAEL0287S01

LIGHTING OPERATION BY LIGHTING SWITCH

When lighting switch is 1ST (or 2ND) position, ground is supplied

- to tail lamp relay terminal 2 from smart entrance control unit terminals 19 and 57
- through smart entrance control unit terminals 20 and 58, and
- through lighting switch and body grounds E13 and E41.

Tail lamp relay is then energized and illumination lamps illuminate.

The lighting switch must be in the 1ST or 2ND position for illumination.

The illumination control switch that controls the amount of current to the illumination system. As the amount of current increases, the illumination becomes brighter.

The ground for all of the components except for grove box lamp, ashtray and compass and thermometer are controlled through terminals 2 and 3 of the illumination control switch and body grounds M77 and M111.

PU

AX

HA

SC

LIGHTING OPERATION BY AUTO LIGHT CONTROL SYSTEM

When auto light operation is operated, ground is supplied

- to tail lamp relay terminal 2 from smart entrance control unit terminals 19 and 57
- through smart entrance control unit terminals 43 and 64, and
- to body grounds M77 and M111.

NAEL0287S02

Tail lamp relay is then energized and the illumination lamps illuminate.

The illumination control switch that controls the amount of current to the illumination of t

The illumination control switch that controls the amount of current to the illumination system. As the amount of current increases, the illumination becomes brighter.

The following chart shows the power and ground connector terminals for the components included in the illumination system.

Component	Connector No.	Power terminal	Ground terminal
Illumination control switch	M19	1	3
4WD shift switch	M141	7	8
Ashtray	B76	1	2
A/T indicator	B59	3	4
Cigarette lighter	M57	3	4
Audio unit	M48	8	7
Compass and thermometer	R4	5	2
Hazard switch	M35	7	8
Rear window defogger switch	M36	5	6

Component	Connector No.	Power terminal	Ground terminal
CD player	M92, M93	3	5
CD auto changer	M125	2	9
A/C switch illumination	M45	2	1
Power window main switch	D6	16	18
Front power window switch RH	D36	10	17
Display & NAVI control unit	M117, M118	8	24
A/C auto amp.	M102	24	25
Clock	M40	3	4
Globe box lamp	M30	1	2

The ground for all of the components except for compass and thermometer, glove box lamp and ashtray are controlled through terminals 2 and 3 of the illumination control switch and body grounds M77 and M111.

BATTERY SAVER CONTROL

Illumination lamps will remain on for a short while after the ignition switch is turned from ON (or START) to OFF (or ACC).

Continuity between terminals 19 and 20, and between terminals 57 and 58 of smart entrance control unit will be disturbed after 45 seconds, then the illumination lamp will be turned off.


Illumination lamps are turned off when driver or passenger side door is opened even if 45 seconds have not passed after the ignition switch is turned from ON (or START) to OFF (or ACC) positions while illumination lamps are illuminated.


When the lighting switch is turned from OFF to 1ST (or 2ND) after illumination lamps are turned off by the battery saver control, ground is supplied


- to smart entrance control unit terminals 20 and 58 from lighting switch terminal 11, and
- to tail lamp relay terminal 2 from smart entrance control unit terminals 19 and 57.


Then illumination lamps illuminate again.


For Trouble Diagnoses for battery saver control, refer to "PARKING, LICENSE AND TAIL LAMPS" (EL-473).

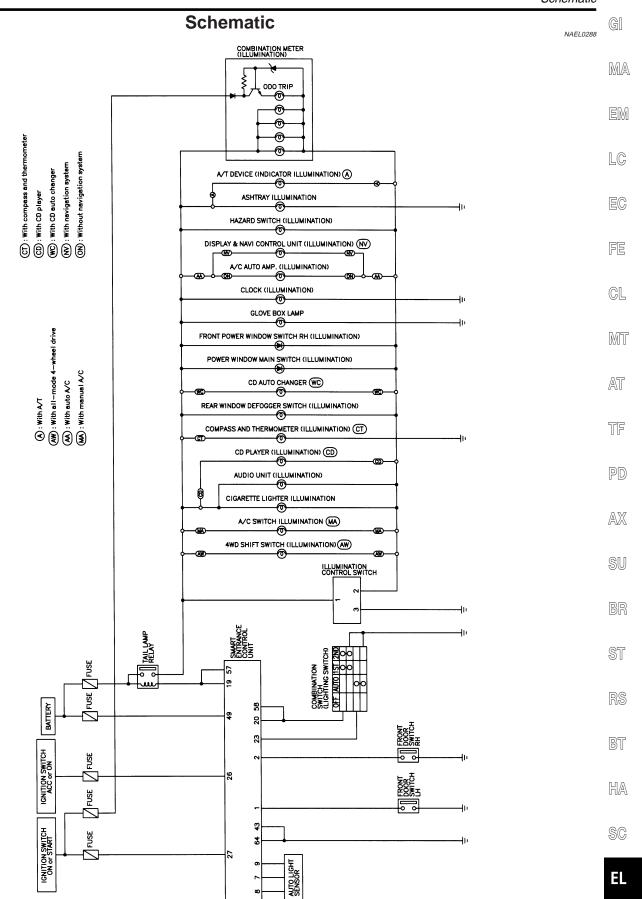

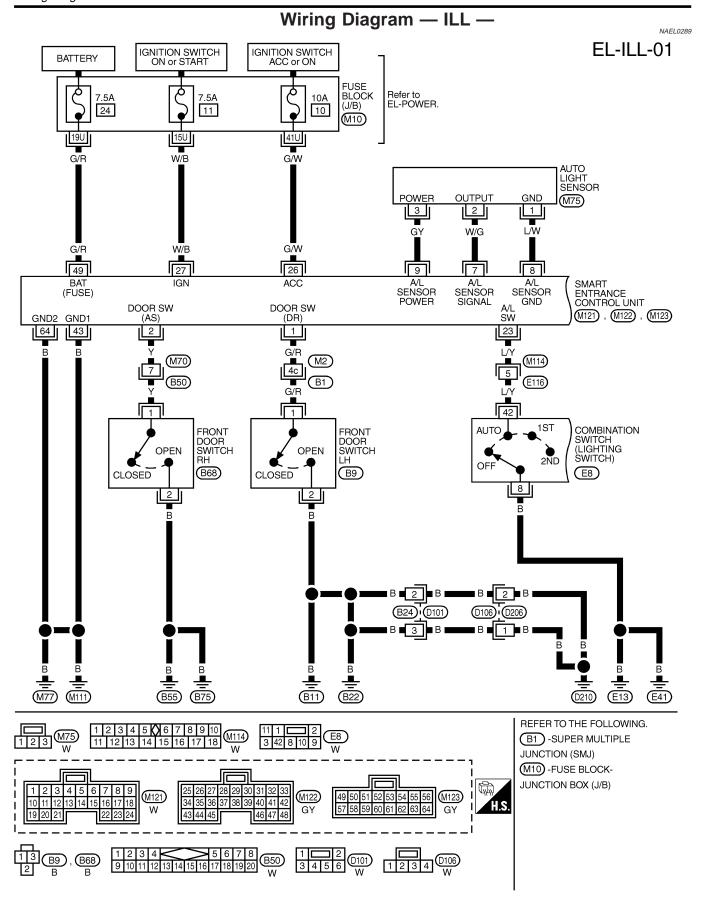


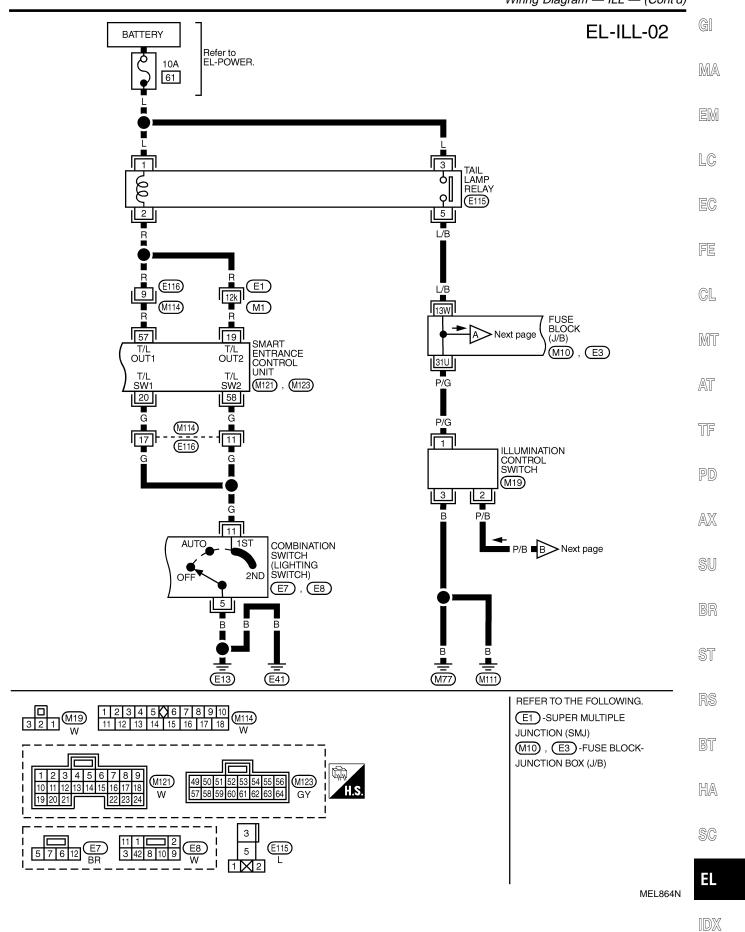

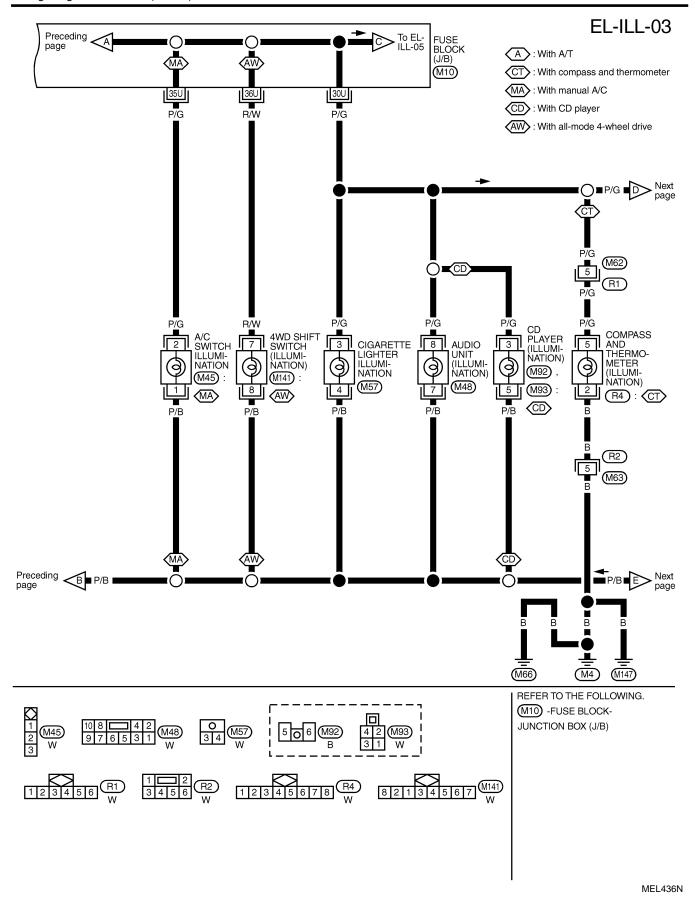

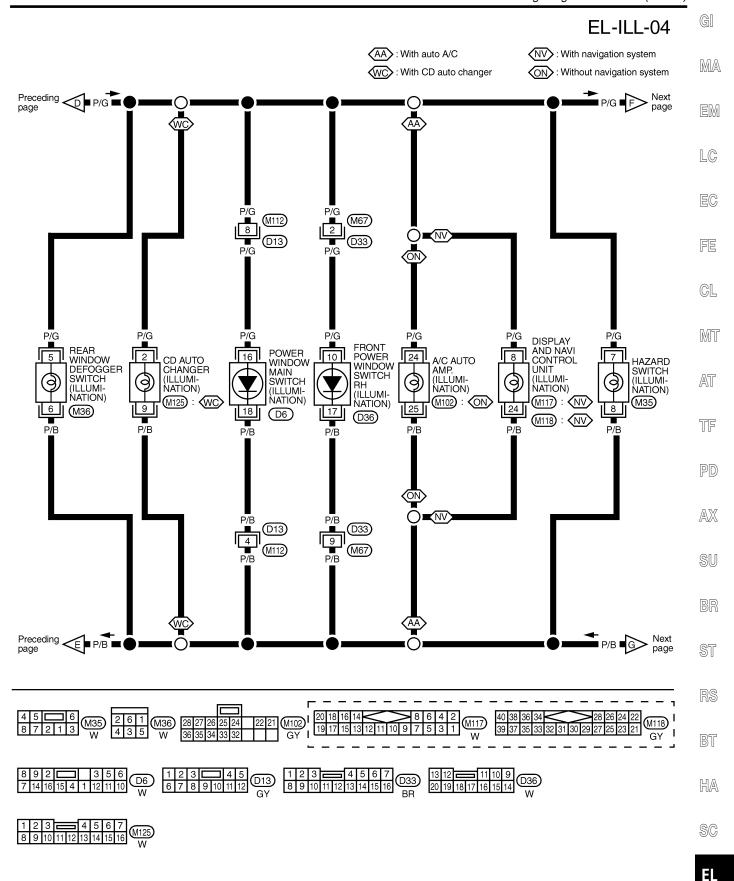

MEL343N

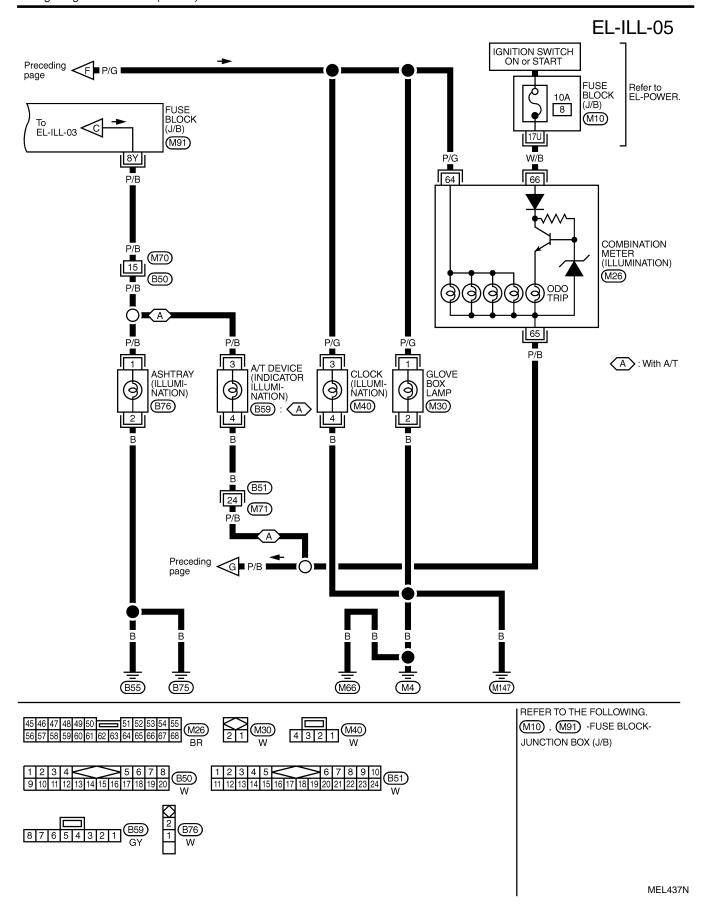

System Description

System Description NAEL0290 POWER SUPPLY AND GROUND NAFL 0290S01 Power is supplied at all times: MA through 7.5A fuse [No. 24, located in the fuse block (J/B)] to key switch terminal 2 and to smart entrance control unit terminal 49. When the key is removed from ignition key cylinder, power is interrupted: through key switch terminal 1 LC to smart entrance control unit terminal 25. With the ignition key switch in the ON or START position, power is supplied: through 7.5A fuse [No. 11, located in the fuse block (J/B)] to smart entrance control unit terminal 27. Ground is supplied: to smart entrance control unit terminals 43 and 64 through body grounds terminals M77 and M111. GL When the front driver side door is opened, ground is supplied: through body grounds B11, B22 and D210 to front door switch (LH) terminal 2 MIT from front door switch (LH) terminal 1 to smart entrance control unit terminal 1. AT When the front passenger side door is opened, ground is supplied: through body grounds terminals B55 and B75 to front door switch (RH) terminal 2 from front door switch (RH) terminal 1 to smart entrance control unit terminal 2. When any other door (except front door) is opened, ground is supplied to smart entrance control unit terminal 3 in the same manner as the front door switch. When the front driver side door is unlocked by the central switch, the smart entrance control unit receives a AX ground signal: through body grounds terminals M77 and M111 (LH) or M4, M66 and M147 (RH) SU to door lock and unlock switch terminal 5 (LH) or 7 (RH) from door lock and unlock switch terminal 19 (LH) or 18 (RH) to smart entrance control unit terminal 4. When the front LH door is unlocked by the front door key cylinder switch and back door key cylinder switch, the smart entrance control unit receives a ground signal: through body grounds terminals M77 and M111 to front door key cylinder switch LH terminal 2 from front door key cylinder switch LH terminal 1 to smart entrance control unit terminal 10, and through body grounds terminals B11, B22 and D210 to back door key cylinder switch terminal 4 BT from back door key cylinder switch terminal 2 to smart entrance control unit terminal 10. HA When a signal, or combination of signals is received by the smart entrance control unit, ground is supplied: through smart entrance control unit terminal 31 SC to interior lamp terminal 2. With power and ground supplied, the interior lamp illuminates.

SWITCH OPERATION

When interior lamp switch is ON, ground is supplied:

- through case grounds of interior lamp
- to interior lamp.

NAEL0290S02

System Description (Cont'd)

And power is supplied:

- to interior lamp terminal 1
- from smart entrance control unit terminal 50.

When spot lamp (LH and/or RH) is ON, ground is supplied:

- through body grounds M4, M66 and M147
- to spot lamp terminal 2.

And power is supplied:

- to spot lamp terminal 1
- from smart entrance control unit terminal 50.

When vanity mirror illumination (LH and/or RH) is ON, ground is supplied:

- through body grounds M4, M66 and M147
- to vanity mirror illuminations (LH and RH) terminals 2.

And power is supplied:

- to vanity mirror illuminations (LH and RH) terminals 1
- from smart entrance control unit terminal 50.

With power and ground supplied, interior lamps turn ON.

INTERIOR LAMP TIMER OPERATION

VAEL 0290S03

When interior lamp switch is in the "DOOR" position, the smart entrance control unit keeps the interior lamp illuminated for about 30 seconds when:

- unlock signal is supplied from door lock and unlock switch while all doors are closed and key is out of ignition key cylinder
- unlock signal is supplied from multi-remote controller or door key cylinder while driver's door is locked and all doors are closed
- key is removed from ignition key cylinder while all doors are closed
- driver's door is opened and then closed while key is out of the iginition key cylinder. (However, if the driver's door is closed with the key inserted in the ignition key cylinder after the driver's door is opened with the key removed, the timer is operated.)

The timer is canceled when:

- driver's door is locked,
- driver's door is opened, or
- ignition switch is turned ON.

When driver's door is locked, interior room lamp timer is canceled as described before.

ON-OFF CONTROL

NAEL0290S0

When the driver side door, front passenger door, rear LH or RH door is opened, the interior room lamp turns on while the interior room lamp switch is in the "DOOR" position.


BATTERY SAVER


NAEL0290S05

The lamp turns off automatically when interior lamp, luggage room lamp, spot lamp and/or vanity mirror illumination is illuminated with the ignition key is in OFF position, if the lamp remains lit by the door switch open signal or if the lamp switch is in ON position for more than 30 minutes.


After lamps turn OFF by the battery saver system, the lamps illuminate again when:


- driver's door is locked or unlocked,
- door is opened or closed,
- key is removed from ignition key cylinder or inserted in ignition key cylinder

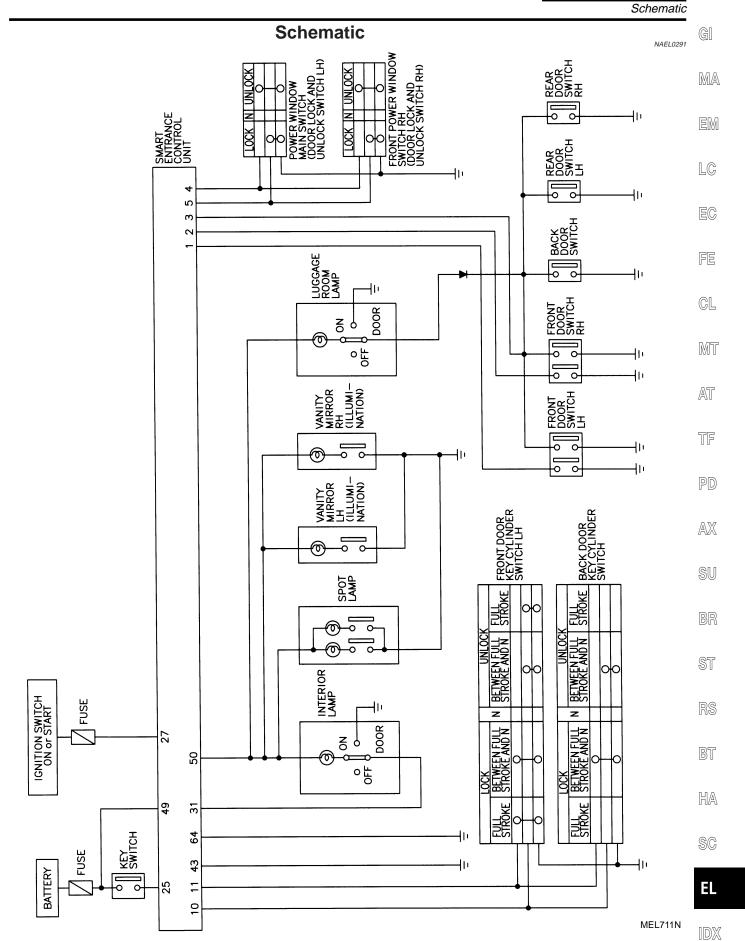

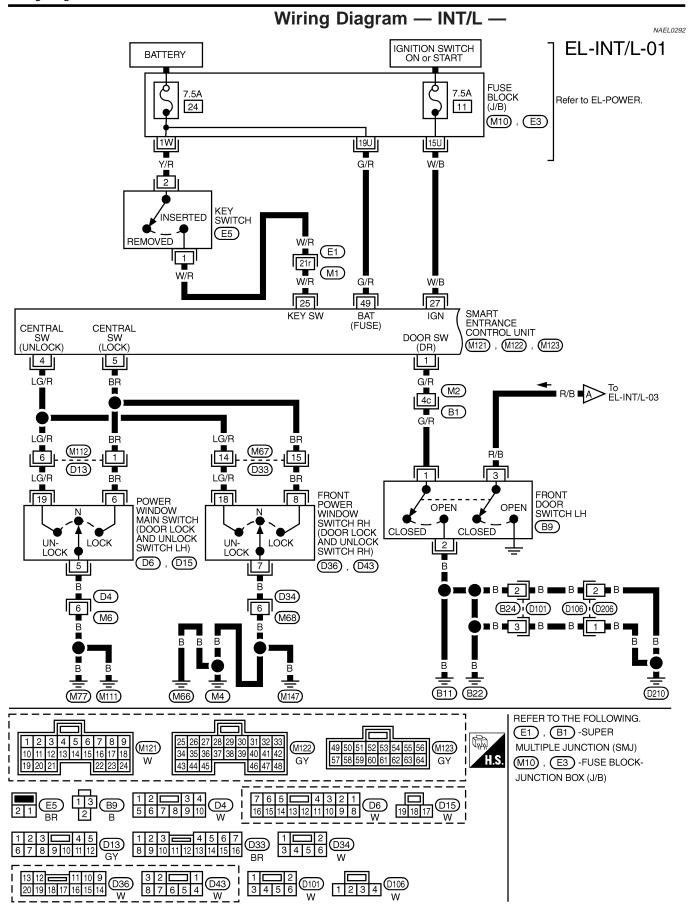


Wiring Diagram — INT/L — (Cont'd)

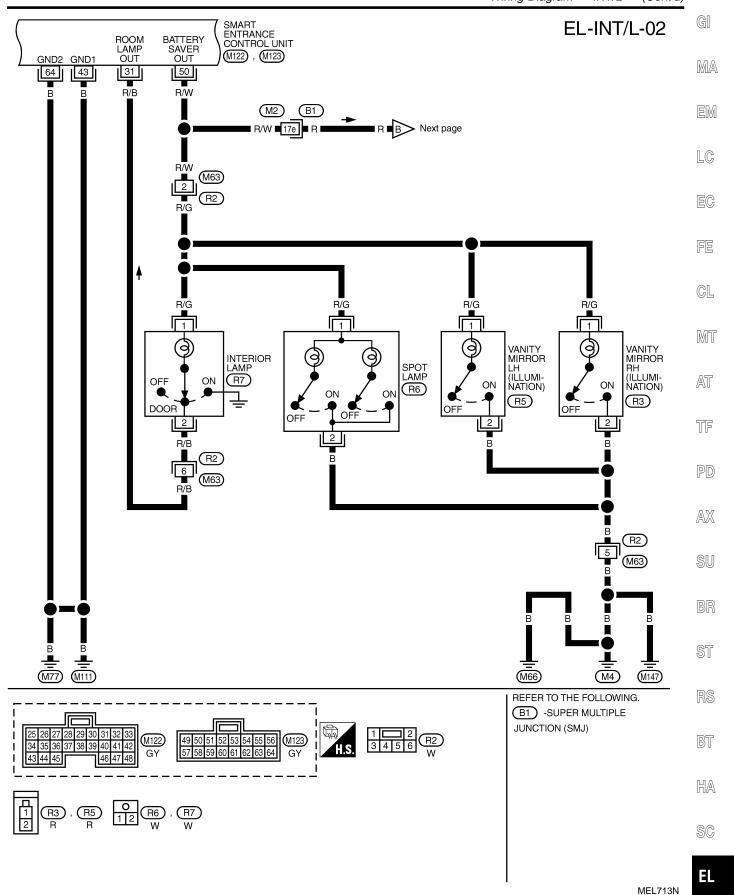

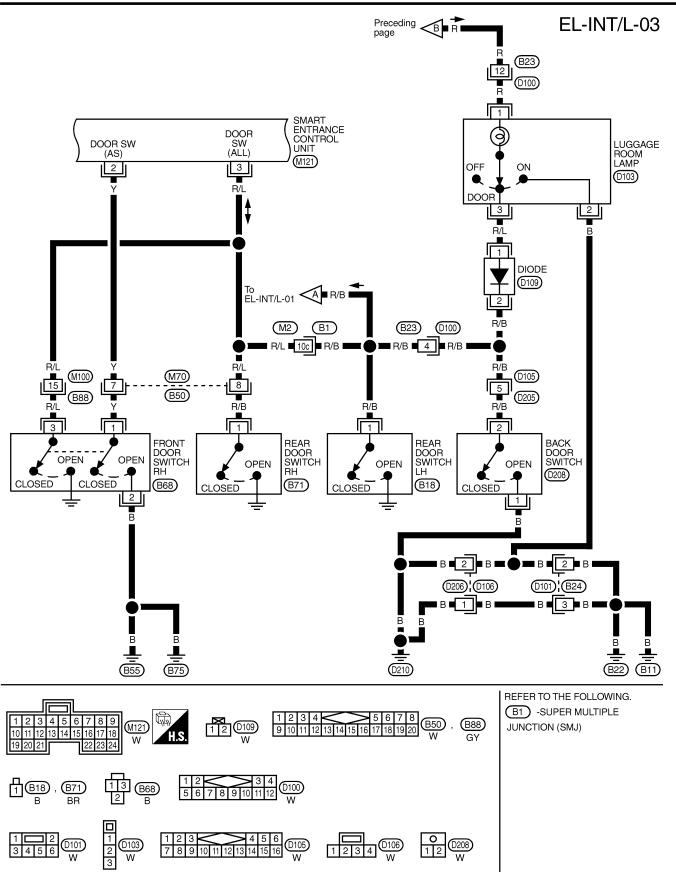


Wiring Diagram — INT/L — (Cont'd)

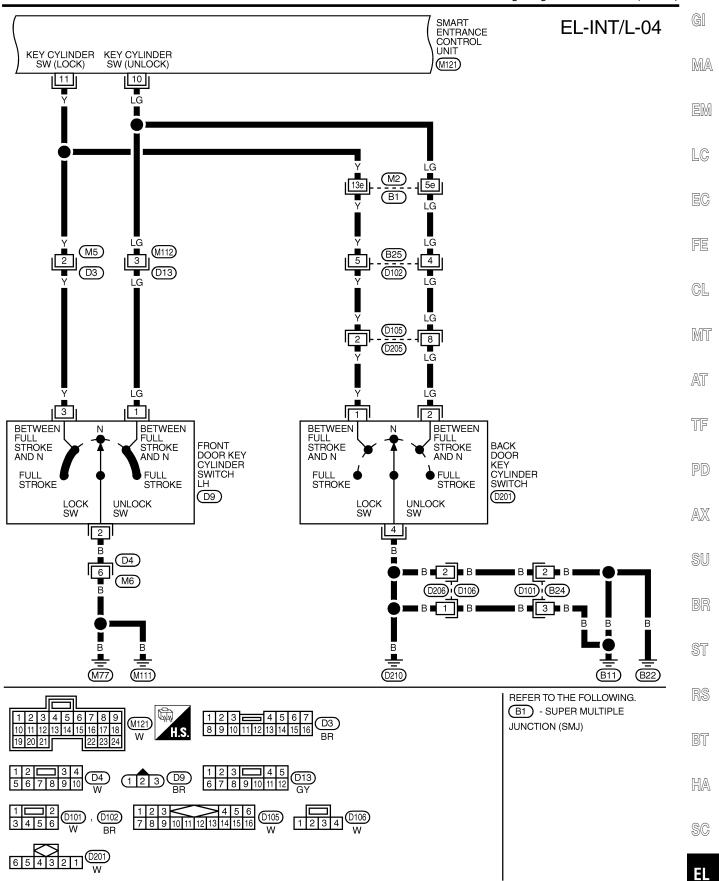

MEL715N

CONSULT-II Inspection Procedure

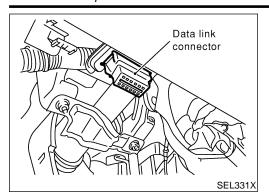


CONSULT-II Inspection Procedure "INT LAMP"/"BATTERY SAVER"

=NAEL0293

NAEL0293S01

- 1. Turn ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

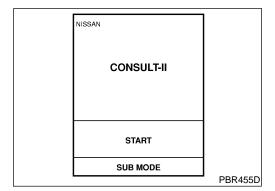


- 3. Turn ignition switch "ON".
- 4. Touch "START".

SELECT SYSTEM	
ENGINE	
A/T	
AIR BAG	
ABS	
SMART ENTRANCE	
	SEL941W

Touch "SMART ENTRANCE".

	SELECT TEST ITEM	
	INT LAMP	
	BATTERY SAVER	
	THEFT WAR ALM	
	RETAINED PWR	
	MULTI REMOTE ENT	
		SEL351W

6. Touch "INT LAMP" or "BATTERY SAVER".

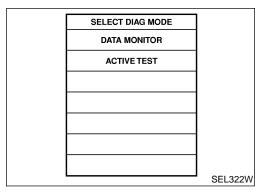

7. Select diagnosis mode. "DATA MONITOR" and "ACTIVE TEST" are available for "INT LAMP" and "BATTERY SAVER".

CONSULT-II Application Items

	CONSULT-II Application Items
INT LAMP"	NAEL0294S0:
Data Monitor	NAEL0294S010:
Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
DOOR SW-RR	Indicates [ON/OFF] condition of ignition switch.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.
LOCK SW DR/AS	Indicates [ON/OFF] condition of front door lock switch.
UNLK SW DR/AS	Indicates [ON/OFF] condition of front door lock switch.
KEY CYL LK-SW	Indicates [ON/OFF] condition of front door key cylinder switch.
KEY CYL UN-SW	Indicates [ON/OFF] condition of front door key cylinder switch.
LK BUTTON/SIG	Indicates [ON/OFF] condition of unlock signal from remote controller.
UN BUTTON/SIG	Indicates [ON/OFF] condition of unlock signal from remote controller.
Active Test	NAEL0294\$0102
Test Item	Description
INT LAMP	This test enables to check interior lamp operation. When "ON" on CONSULT-II screen is touched: Interior lamp turns on when the switch is at DOOR. (Smart entrance control unit supplies power and ground to interior lamp.)
IGN ILLUM	This test enables to check ignition key hole illumination operation. The illumination turns on when "ON" on CONSULT-II screen is touched.
STEP LAMP	This test enables to check step lamp operation. The illumination turns on when "ON" on CONSULT-II screen is touched.
BATTERY SAVER"	
Data Monitor	NAEL0294S020 NAEL0294S020
Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
DOOR SW-RR	Indicates [ON/OFF] condition of ignition switch.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.
LOCK SW DR/AS	Indicates [ON/OFF] condition of front door lock switch.
	Indicates [ON/OFF] condition of front door lock switch.
UNLK SW DR/AS	The state of the s
KEY CYL LK-SW	Indicates [ON/OFF] condition of front door key cylinder switch.
KEY CYL LK-SW	Indicates [ON/OFF] condition of front door key cylinder switch.

CONSULT-II Application Items (Cont'd)

Active Test	
Test Item	Description
BATTERY SAVER	This test enables to check interior lamp, front step lamps, spot lamp, vanity mirror illuminations and trunk room lamp operations. When touch "ON" on CONSULT-II screen. Interior lamp turns on when the switch is in ON. (Smart entrance control unit supplies power to interior lamp.) Front step lamps turn on when any doors are open. (Smart entrance control unit supplies power to front step lamps.) Spot lamp, vanity mirror illuminations, trunk room lamp turn on when the switch is in ON. (Smart entrance control unit supplies power to Spot lamp, vanity mirror illuminations, trunk room lamp.)


INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS **SMART C/U - NEW**

Trouble Diagnoses for Interior Lamp Timer

Trouble Diagnoses for Interior Lamp Timer DIAGNOSTIC PROCEDURE 1

=NAEL0295 NAEL0295S01 GI

SYMPTOM: Interior lamp timer does not operate.

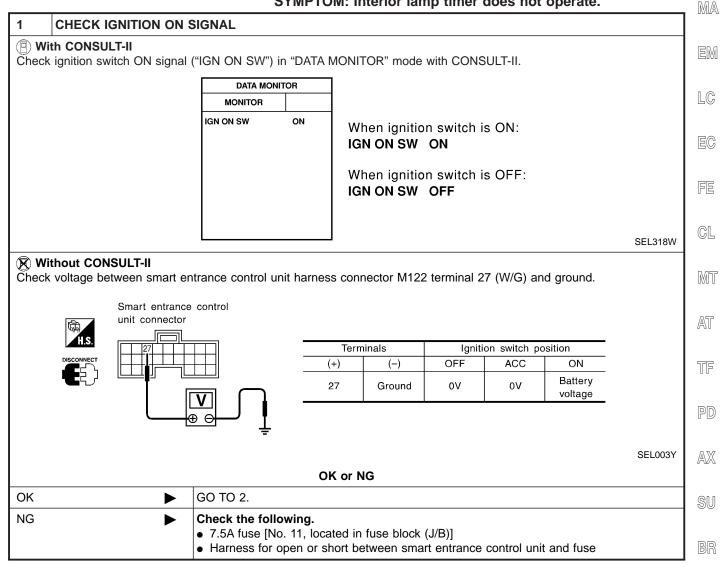

BT HA

ST

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS **SMART C/U - NEW**

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

CHECK FRONT LH DOOR SWITCH INPUT SIGNAL Check driver door switch signal ("DOOR SW-DR") in "DATA MONITOR" mode with CONSULT-II. DATA MONITOR MONITOR When front LH door is DOOR SW-DR open: DOOR SW-DR ON When driver's door is closed: DOOR SW-DR OFF SEL319WA **⋈** Without CONSULT-II Check voltage between smart entrance control unit harness connector M121 terminal 1 (G/R) and ground. Smart entrance control unit connector Voltage [V]: Condition of driver's door: CLOSED Approx. 5 Condition of driver's door: OPENED SEL004Y OK or NG OK GO TO 4. NG GO TO 3.


CHECK FRONT LH DOOR SWITCH

Check the following.

OK

NG


- Continuity between front LH door switch connector B9 terminals 1 and 2

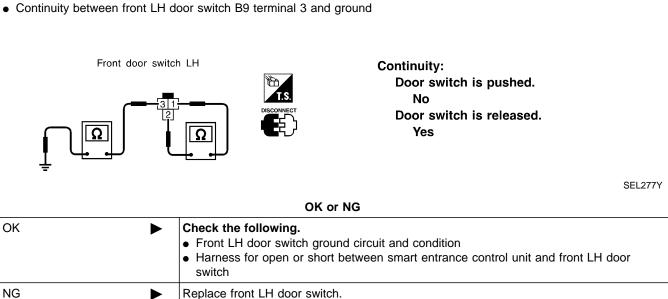

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS

SMART C/U - NEW


Trouble Diagnoses for Interior Lamp Timer (Cont'd)

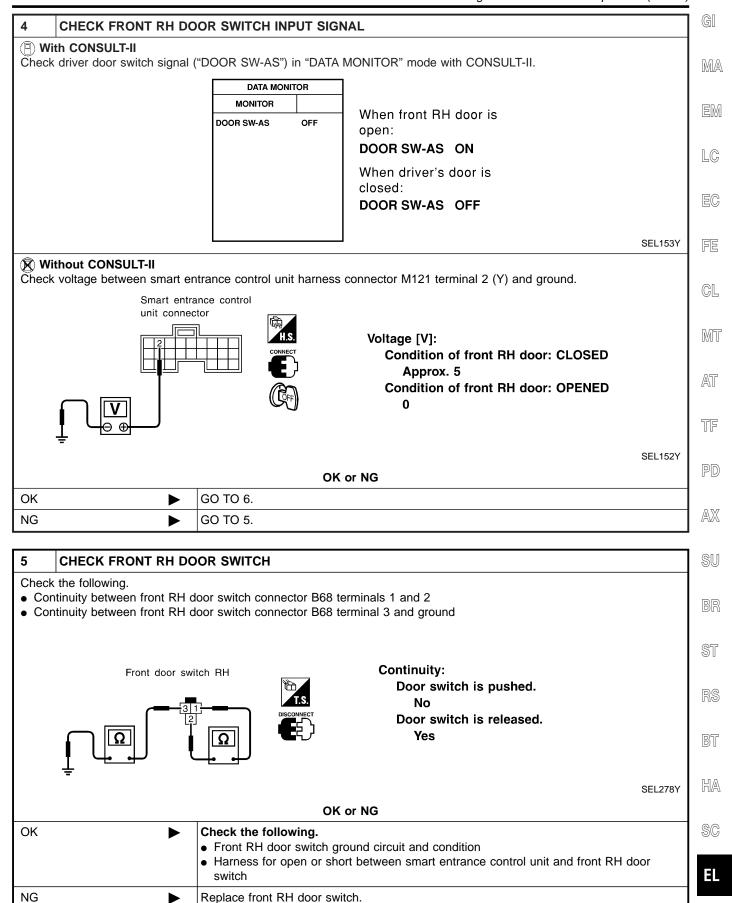


INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

NG

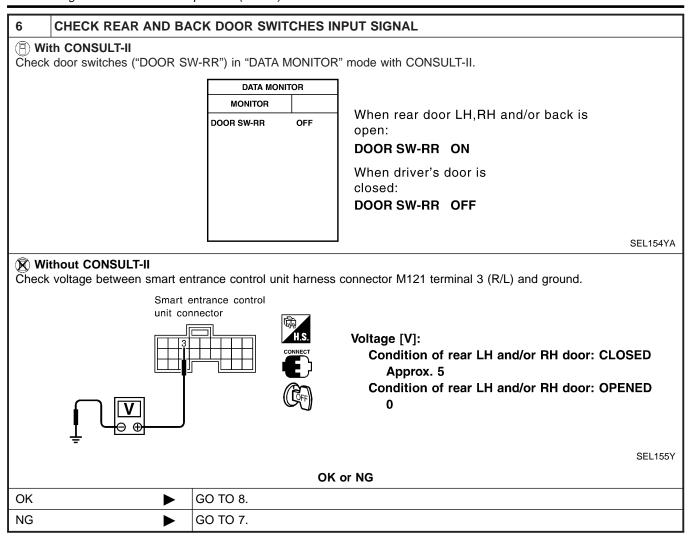

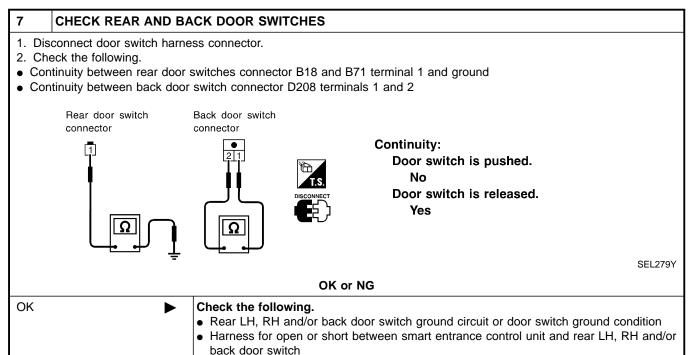


Replace rear LH, RH and/or back door switch.

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS

SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

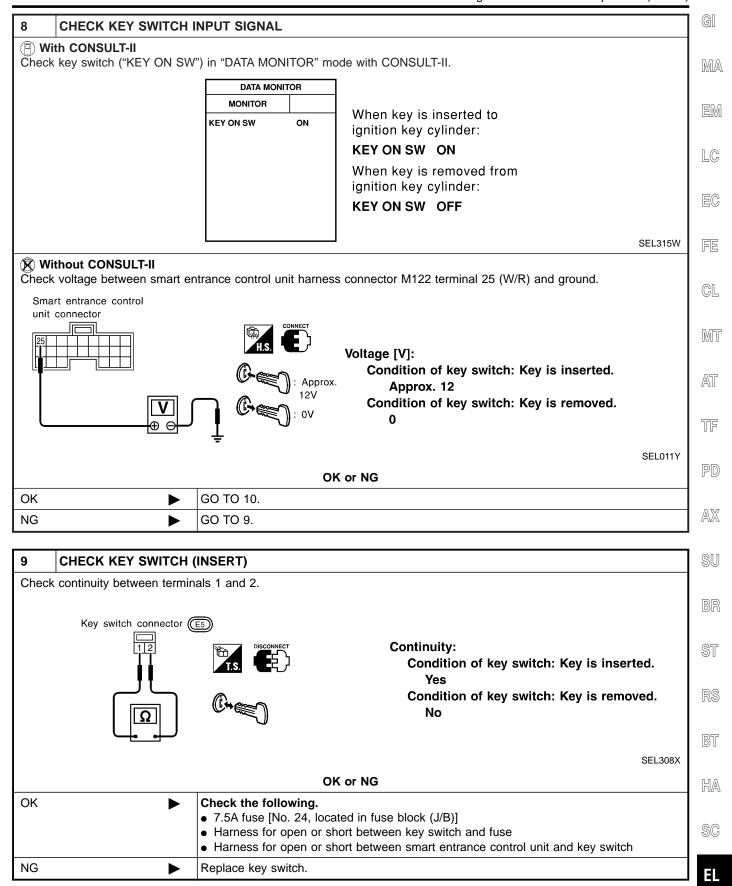

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

0 CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL

(P) With CONSULT-II

Check door lock/unlock switch ("LOCK SW DR/AS"/"UNLK SW DR/AS") in "DATA MONITOR" mode with CONSULT-II.

DATA MONI	TOR	
MONITOR		
LOCK SW DR/AS	OFF	
UNLK SW DR/AS	OFF	

When lock/unlock switch is turned to LOCK:

LOCK SW DR/AS ON


When lock/unlock switch is turned to UNLOCK:

UNLK SW DR/AS ON

SEL341W

⋈ Without CONSULT-II

- 1. Disconnect smart entrance control unit harness connector .
- 2. Check continuity between smart entrance control unit harness connector M121 terminal 4 (LG/R) or 5 (BR) and ground.

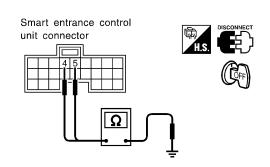

	Terminals	Door lock/unlock switch (LH or RH) condition	Continuity
	4 - Ground	Lock	Yes
		N and Unlock	No
	5 - Ground	Unlock	Yes
	5 - Ground	N and Lock	No

SEL157Y


OK or NG

OK •	GO TO 12.
NG •	GO TO 11.

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS

SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

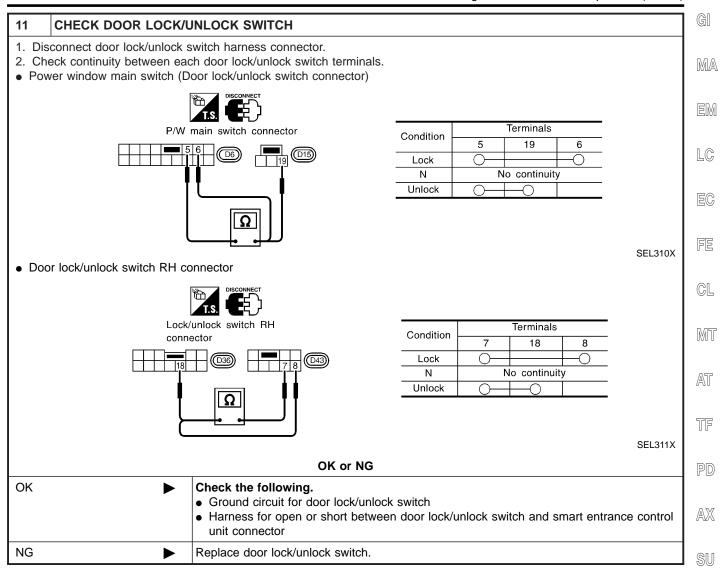

BR

ST

RS

BT

HA

SC

Ц

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

2 CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL (LOCK/UNLOCK SIGNAL)

(P) With CONSULT-II

Check front door key cylinder switch ("KEY CYL LK-SW"/"KEY CYL UN-SW") in "DATA MONITOR" mode with CONSULT-II.

DATA MONI	TOR
MONITOR	
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

When key inserted in front key cylinder is turned to LOCK:

KEY CYL LK-SW ON


When key inserted in front key cylinder is turned to UNLOCK:

KEY CYL UN-SW ON

SEL342W

Without CONSULT-II

Check voltage between smart entrance control unit harness connector M121 terminals 10 (LG) or 11 (Y) and ground.

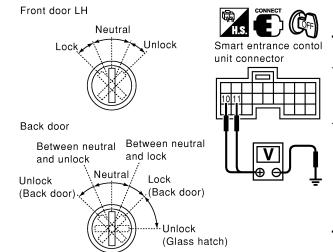

Door	Terminals		Key position	Voltage V	
Dooi	(+)	(-)	Key position	voitage v	
	11	Ground	Neutral/Unlock	Approx. 5	
Front door	11	Ground	Lock	0	
LH	10	Ground	Neutral/Lock	Approx. 5	
LII	TO Ground	Ground	Unlock	0	
Back door	11 G	Ground	Between neutral and lock	0	
			Other positions	Approx. 5	
	10	Ground	Between neutral and unlock	0	
		Other positions	Approx. 5		

SEL280Y

OK or NG

OK •	Replace smart entrance control unit.
NG ▶	GO TO 13.

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM **LAMPS**

SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

GI 13 CHECK DOOR KEY CYLINDER SWITCH 1. Disconnect door key cylinder switch harness connector. 2. Check continuity between each key cylinder switch terminals. MA • Front door key cylinder switch harness connector D9 1 : Door unlock switch terminal Front door key cylinder switch connector (2): Ground terminal (3): Door lock switch terminal LC Terminals Key position Continuity Neutral/Unlock No 3 - 2 Lock Yes EC Neutral/Lock No 1 - 2 Unlock Yes FE SEL187YA Back door key cylinder switch harness connector D201 GL Back door key **Terminals** cylinder switch (D201) Key position MT 4 1 2 Between neutral and lock \bigcirc (Back door) AT Between neutral and unlock \bigcirc \bigcirc (Back door) TF SEL315X OK or NG Check the following. OK • Front or back door key cylinder switch ground circuit • Harness for open or short between front or back door key cylinder switch and smart AX entrance control unit connector

Replace front or back door key cylinder switch.

NG

BR

BT

HA


INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

DIAGNOSTIC PROCEDURE 2

NAEL0295S0


SYMPTOM: Interior lamp timer does not cancel properly.

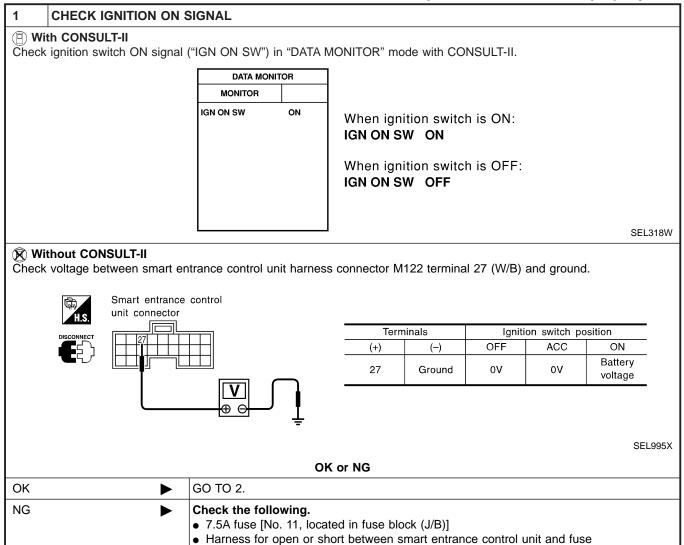

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS

SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

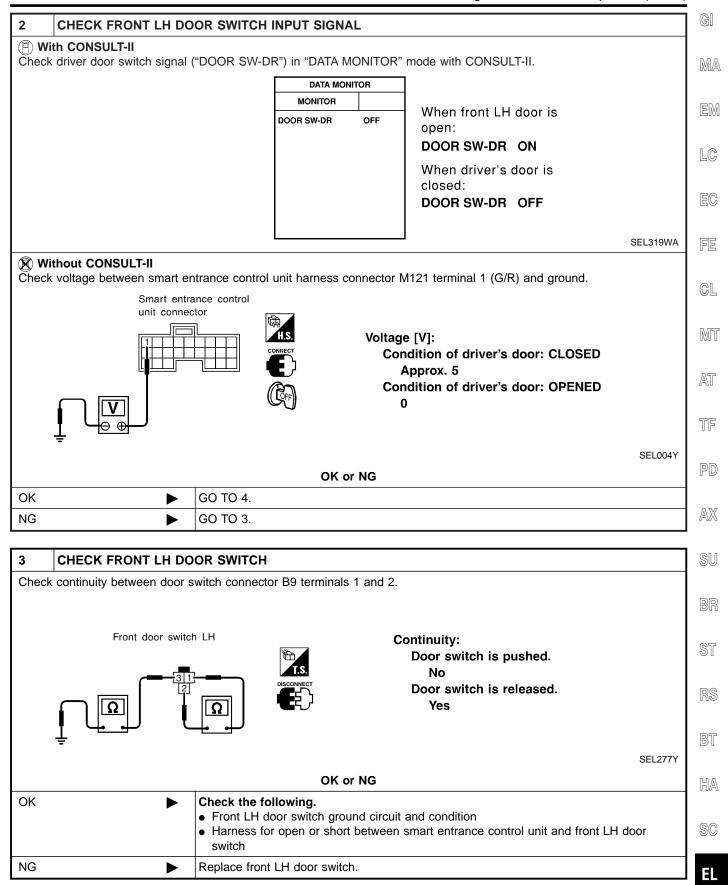

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL

(P) With CONSULT-II

Check door lock/unlock switch ("LOCK SW DR/AS"/"UNLK SW DR/AS") in "DATA MONITOR" mode with CONSULT-II.

ror
OFF
OFF

When lock/unlock switch is turned to LOCK:

LOCK SW DR/AS ON


When lock/unlock switch is turned to UNLOCK:

UNLK SW DR/AS ON

SEL341W

⋈ Without CONSULT-II

- 1. Disconnect smart entrance control unit harness connector .
- 2. Check continuity between smart entrance control unit harness connector M121 terminal 4 (LG/R) or 5 (BR) and ground.

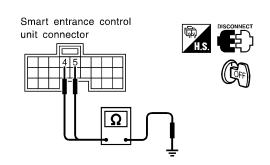

	Terminals	Door lock/unlock switch (LH or RH) condition	Continuity
	4 - Ground	Lock	Yes
		N and Unlock	No
	5 - Ground	Unlock	Yes
	5 - Ground	N and Lock	No

SEL157Y


OK or NG

OK •	GO TO 6.
NG •	GO TO 5.

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS

SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

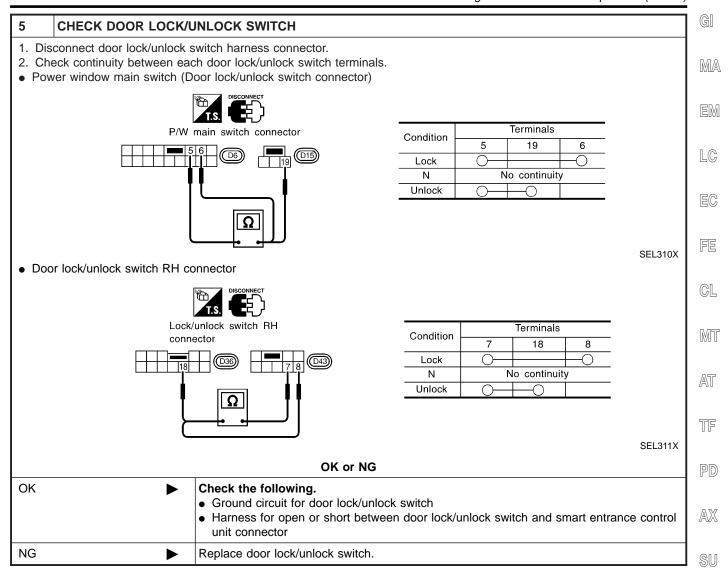

BR

ST

RS

BT

HA

SC

L

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS SMART C/U - NEW

Trouble Diagnoses for Interior Lamp Timer (Cont'd)

CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL (LOCK/UNLOCK SIGNAL)

With CONSULT-II

Check front door key cylinder switch ("KEY CYL LK-SW"/"KEY CYL UN-SW") in "DATA MONITOR" mode with CONSULT-II.

DATA MON	TOR
MONITOR	
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

When key inserted in front key cylinder is turned to LOCK:

KEY CYL LK-SW ON


When key inserted in front key cylinder is turned to UNLOCK:

KEY CYL UN-SW ON

SEL342W

Without CONSULT-II

Check voltage between smart entrance control unit harness connector M121 terminals 10 (LG) or 11 (Y) and ground.

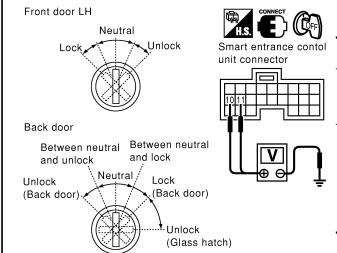

Door	Terminals		Key position	Voltage V
Dooi	(+)	(-)	Rey position	voltage v
	11	Ground	Neutral/Unlock	Approx. 5
Front	11		Lock	0
door LH	10	Ground	Neutral/Lock	Approx. 5
		Ground	Unlock	0
Back door	11	Ground	Between neutral and lock	0
			Other positions	Approx. 5
	10 Ground	Between neutral and unlock	0	
		Other positions	Approx. 5	

SEL280Y

OK or NG

OK		eplace smart entrance control unit.	
NG	>	GO TO 7.	

INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS

SMART C/U - NEW Trouble Diagnoses for Interior Lamp Timer (Cont'd) GI CHECK DOOR KEY CYLINDER SWITCH 1. Disconnect door key cylinder switch harness connector. 2. Check continuity between each key cylinder switch terminals. MA • Front door key cylinder switch harness connector D9 1 : Door unlock switch terminal Front door key cylinder switch connector (2): Ground terminal (3): Door lock switch terminal LC Terminals Key position Continuity Neutral/Unlock No 3 - 2 Lock Yes EC Neutral/Lock No 1 - 2 Unlock Yes FE SEL187YA Back door key cylinder switch harness connector D201 GL Back door key **Terminals** cylinder switch (D201) Key position MT 4 1 2 Between neutral and lock \bigcirc (Back door) AT Between neutral and unlock \bigcirc \bigcirc (Back door) TF SEL315X OK or NG Check the following. OK • Front or back door key cylinder switch ground circuit • Harness for open or short between front or back door key cylinder switch and smart AX

entrance control unit connector

Replace front or back door key cylinder switch.

NG

BR

ST

RS

BT

HA


SC

Н

 $\mathbb{D}X$

Component Parts and Harness Connector Location

NAFL0296

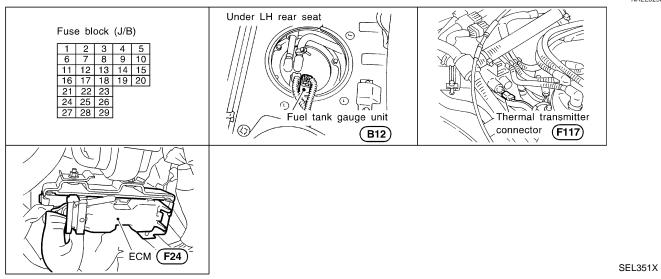

System Description


NAEL0297

UNIFIED CONTROL METER

NAEL0297S01

- Speedometer, odo/trip meter, tachometer, fuel gauge and water temperature gauge are controlled totally by control unit.
- Digital meter is adopted for odo/trip meter.*
 *The record of the odo meter is kept even if the battery cable is disconnected. The record of the trip meter is erased when the battery cable is disconnected.
- Odo/trip meter segment can be checked in diagnosis mode.
- Meter/gauge can be checked in diagnosis mode.

HOW TO CHANGE THE DISPLAY FOR ODO/TRIP METER

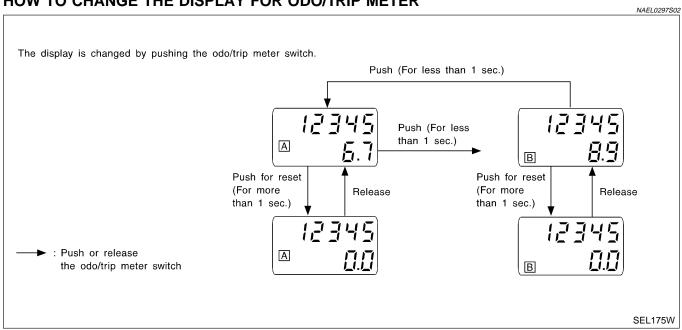

NOTE:

Turn ignition switch to the "ON" position to operate odo/trip meter.

METERS AND GAUGES




POWER SUPPLY AND GROUND CIRCUIT	3
Power is supplied at all times	
through 7.5A fuse [No. 24, located in the fuse block (J/B)] to combination meter terminal 62.	
With the ignition switch in the ON or START position, power is supplied	
through 10A fuse [No. 8, located in the fuse block (J/B)]	
to combination meter terminal 66.	
Ground is supplied to combination meter terminal 59	[
through body grounds M4, M66 and M147.	
WATER TEMPERATURE GAUGE	
The water temperature gauge indicates the engine coolant temperature. The reading on the gauge is based	Í
on the resistance of the thermal transmitter. As the temperature of the coolant increases, the resistance of the thermal transmitter decreases. A variable	. [
ground is supplied to terminal 18 of the combination meter for the water temperature gauge. The needle or	
he gauge moves from "C" to "H".	(
TACHOMETER NAEL0297500	5
The tachometer indicates engine speed in revolutions per minute (rpm). The tachometer is regulated by a signal	
from terminal 25 of the ECM	
to combination meter terminal 16 for the tachometer.	L
FUEL GAUGE	δ
The fuel gauge indicates the approximate fuel level in the fuel tank. The fuel gauge is regulated by a variable ground signal supplied	
 to combination meter terminal 17 for the fuel gauge 	
from terminal 3 of the fuel level sensor unit	[
through terminal 2 of the fuel level sensor unit and	
• through body grounds B11, B22 and D210.	4
SPEEDOMETER The ABS actuator and electric unit provides a voltage signal to the combination meter for the speedometer.	
The voltage is supplied	7
from combination meter terminal 15 for the speedometer	
to terminal 19 of the ABS actuator and electric unit.	[
The speedometer converts the voltage into the vehicle speed displayed.	
	0
	i


EL

Combination Meter CHECK

NAEL0298

NAEL0298S01

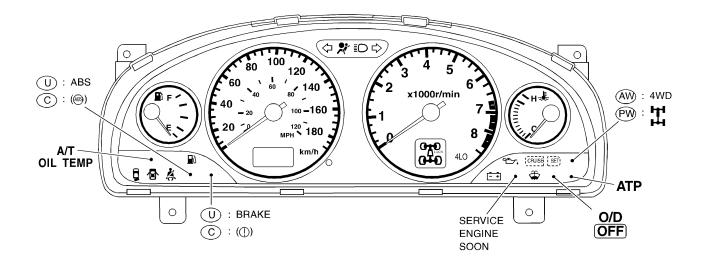

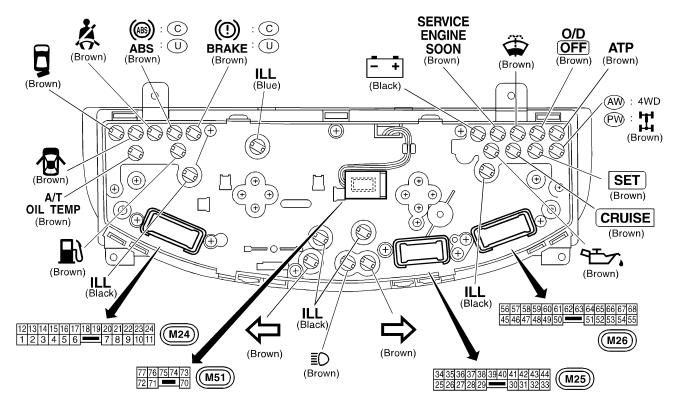

Bulb socket color	Bulb wattage
Brown	1.4W
Blue	2.0W
Black	3.0W

(): Warning bulb socket color


U: For USA

C: For Canada

(AW): With all-mode 4-wheel drive

(PW): With part-time 4-wheel drive

METERS AND GAUGES

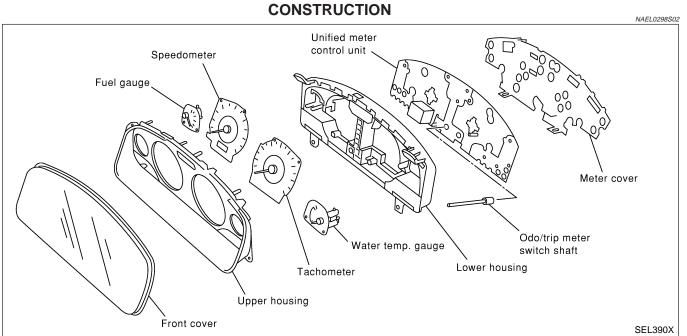

GI

MA

LC

EG

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS


BT


HA

SC

Schematic

NAEL0299

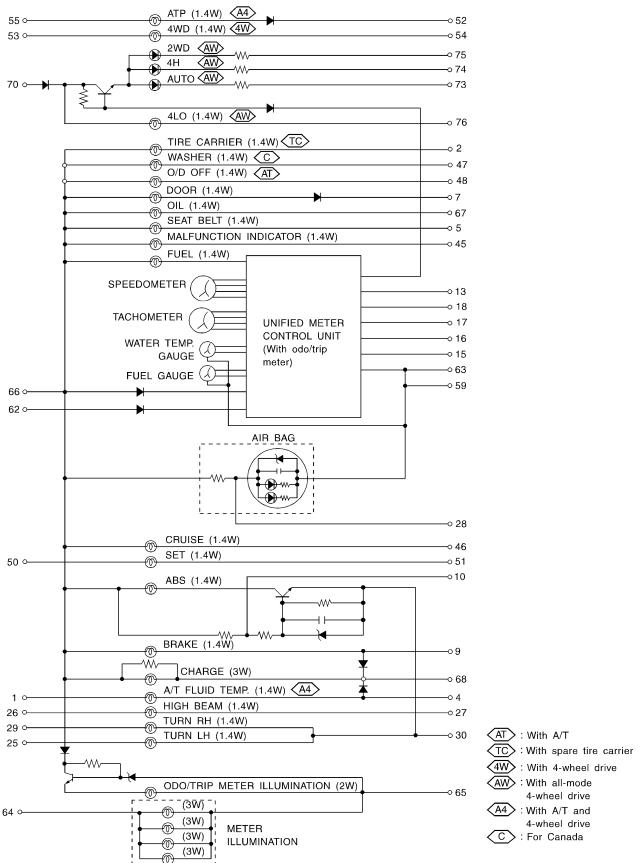

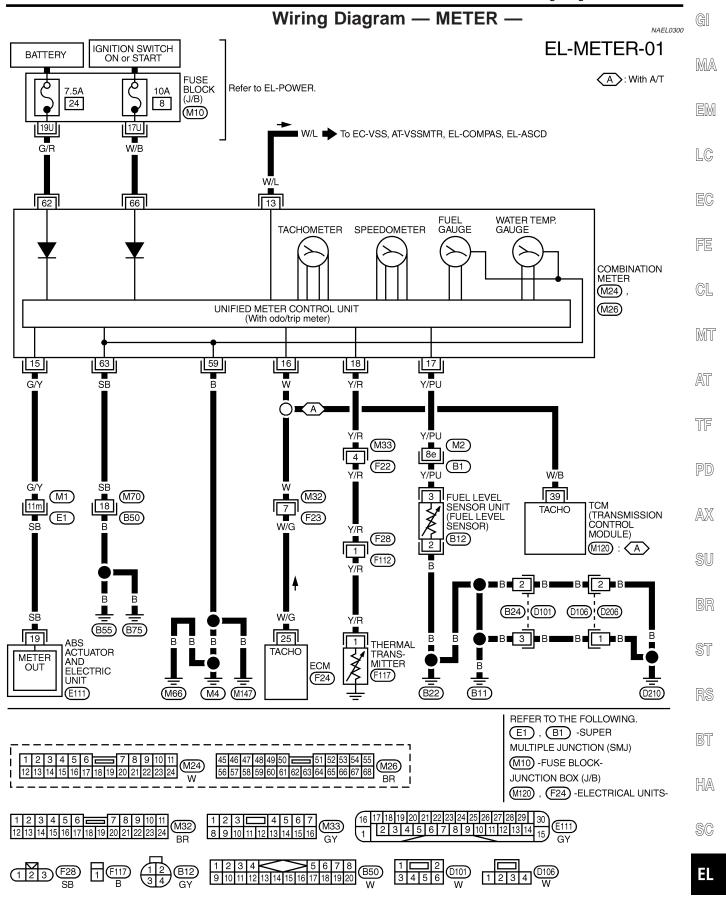


Meter/Gauge Operation and Odo/Trip Meter **Segment Check in Diagnosis Mode DIAGNOSIS FUNCTION**

NAEL0301S01

- Odo/trip meter segment can be checked in diagnosis mode.
- Meters/gauges can be checked in diagnosis mode.

HOW TO ALTERNATE DIAGNOSIS MODE


- Turn ignition switch to ON and change odo/trip meter to "TRIP A" or "TRIP B".
- 2. Turn ignition switch to OFF.
- Turn ignition switch to ON when pushing odo/trip meter switch.
- 4. Push odo/trip meter switch 1 second.
- 5. Release odo/trip meter switch.
- 6. Push odo/trip meter switch more than three times within 7 seconds.

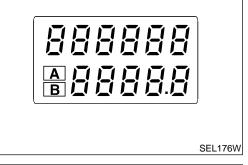

7. All odo/trip meter segments should be turned on.

If some segments are not turned on, unified meter control unit with odo/trip meter should be replaced.

At this point, the unified control meter is turned to diagnosis mode.

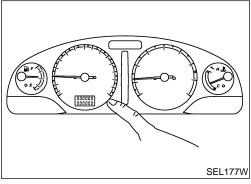

Push odo/trip meter switch. Indication of each meter/gauge should be as shown left during pushing odo/trip meter switch if it is no malfunctioning.


NOTE:

It takes about a few seconds for indication of fuel gauge and water temperature gauge to become stable.

Trouble Diagnoses PRELIMINARY CHECK

NAEL0302

GI

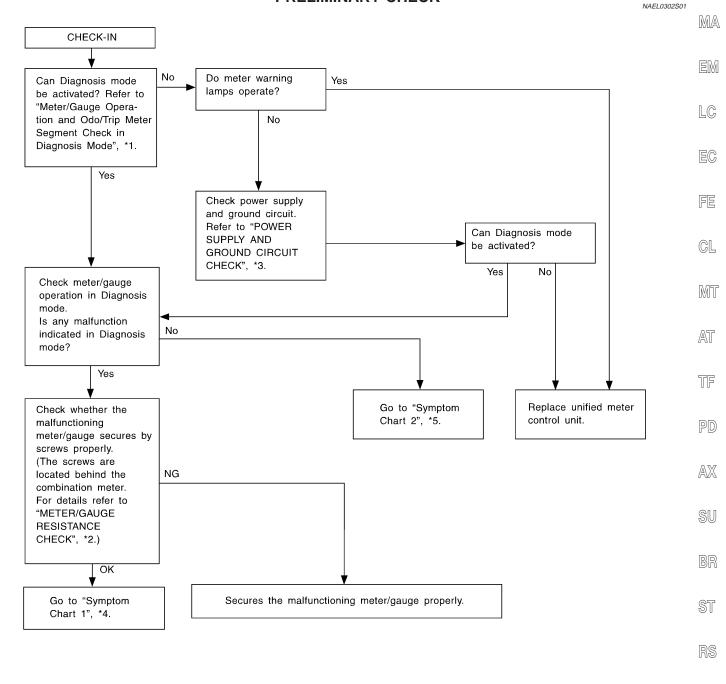

SEL361W

- *1: Meter/Gauge Operation and Odo/ Trip Meter Segment Check in Diagnosis Mode (EL-526)
- *2: METER/GAUGE RESISTANCE CHECK (EL-534)
- *3: POWER SUPPLY AND GROUND CIRCUIT CHECK (EL-529)
- *4: Symptom Chart 1 (EL-528)
- *5: Symptom Chart 2 (EL-528)

HA

SC

ŧL

 $\mathbb{D}X$

SYMPTOM CHART Symptom Chart 1 (Malfunction is Indicated in Diagnosis Mode)

NAEL0302S02

Symptom	Possible causes	Repair order
Odo/trip meter indicate(s) malfunction in Diagnosis mode.	Unified meter control unit	Replace unified meter control unit.
Multiple meter/gauge indicate malfunction in Diagnosis mode.		
One of speedometer/ tachometer/fuel gauge/ water temp. gauge indicates malfunction in Diagnosis mode. 1. Meter/Gauge 2. Unified meter control unit		 Check resistance of meter/gauge indicating malfunction. If the resistance is NG, replace the meter/gauge. Refer to "METER/GAUGE RESISTANCE CHECK", EL-534. If the resistance of meter/gauge is OK, replace unified meter control unit.

Symptom Chart 2 (No Malfunction is Indicated in Diagnosis Mode)

NAEL0302S0202


		IVAELUSUZSUZUZ
Symptom	Possible causes	Repair order
One of speedometer/ tachometer/fuel gauge/ water temp. gauge is mal- functioning.	Sensor signal Vehicle speed signal Engine revolution signal Fuel gauge Water temp. gauge Unified meter control unit	Check the sensor for malfunctioning meter/gauge. INSPECTION/VEHICLE SPEED SIGNAL (Refer to EL-530.) INSPECTION/ENGINE REVOLUTION SIGNAL (Refer to EL-531.)
Multiple meter/gauge are malfunctioning. (except odo/trip meter)	2. Unilled meter control unit	INSPECTION/FUEL LEVEL SENSOR UNIT (Refer to EL-532.) INSPECTION/THERMAL TRANSMITTER (Refer to EL-533.) 2. Replace unified meter control unit.

Before starting trouble diagnoses below, perform PRELIMINARY CHECK, EL-527.

METERS AND GAUGES

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

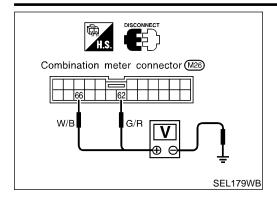


POWER SUPPLY AND GROUND CIRCUIT CHECK Power Supply Circuit Check

NAEL0302S0301 Terminals Ignition switch position OFF ACC ON (+) (-)Battery **Battery** Battery 62 Ground voltage voltage voltage **Battery** Ground 66 0V 0V voltage

If NG, check the following.

- 7.5A fuse [No. 24, located in fuse block (J/B)]
- 10A fuse [No. 8, located in fuse block (J/B)]
- Harness for open or short between fuse and combination meter

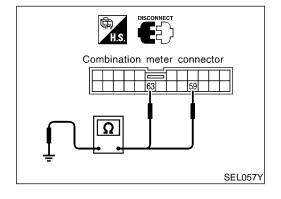

Ground Circuit Check

GI

 $\mathbb{M}\mathbb{A}$

EM

LC

EC

FE

GL

MT

AT

NAEL0302S0302

PD

SU

AX

BR

ST

RS

BT

HA

SC

FL


INSPECTION/VEHICLE SPEED SIGNAL

=NAEL0302S04

1 CHECK ABS CONTROL UNIT OUTPUT SIGNAL

With CONSULT-II


- 1. Lift up drive wheels.
- 2. Start engine.
- 3. Check signal between combination meter harness connector M24 terminal 15 (G/Y) and ground when rotating wheels with engine at idle. (Use "SIMPLE OSCILLOSCOPE" in "SUB MODE" with CONSULT-II.)

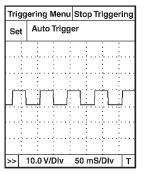

SEL938W

Without CONSULT-II

- 1. Lift up drive wheels.
- 2. Start engine.
- 3. Check voltage between combination meter harness connector M24 terminal 15 (G/Y) and ground when rotating wheels with engine at idle.

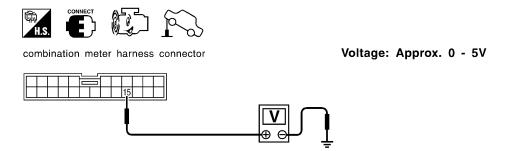

SEL939WA

OK	>	ABS control unit is OK.
NG	>	 Check the following. Harness for open or short between ABS actuator and electric unit and combination meter. ABS actuator and electric unit. Refer to BR-72, "Wheel Sensor or Rotor".

OK or NG

METERS AND GAUGES

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

G[

MA

LC

EC

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

INSPECTION/ENGINE REVOLUTION SIGNAL 1 CHECK ECM OUTPUT 1. Start engine. 2. Check voltage between combination meter terminals 16 and ground at idle and 2,000 rpm. Combination meter connector (M2) Higher rpm = Higher voltage Lower rpm = Lower voltage Voltage should change with rpm. SEL364WB OK or NG

Harness for open or short between ECM and combination meter

Engine revolution signal is OK.

OK


NG

BT


HA

SC

INSPECTION/FUEL LEVEL SENSOR UNIT

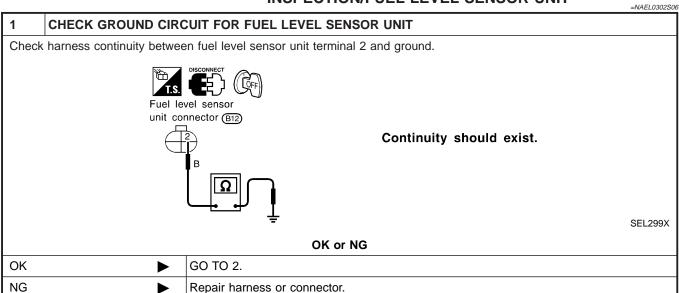

2	CHECK FUEL LEVEL SENSOR UNIT		
Refer	Refer to "FUEL LEVEL SENSOR UNIT CHECK" (EL-534).		
	OK or NG		
ОК	OK ▶ GO TO 3.		
NG	>	Replace fuel level sensor unit.	

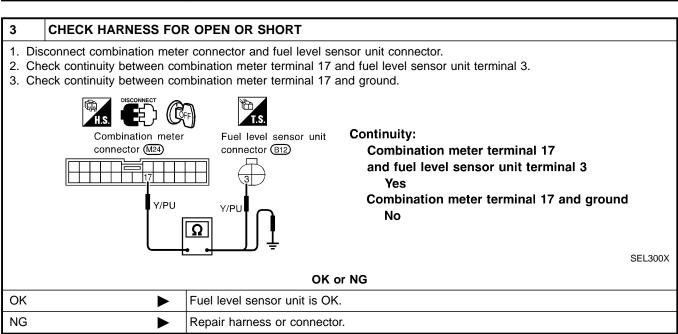

METERS AND GAUGES

SMART C/U - NEW


Trouble Diagnoses (Cont'd)

GI

MA

EM

INSPECTION/THERMAL TRANSMITTER 1 CHECK THERMAL TRANSMITTER Refer to "THERMAL TRANSMITTER CHECK" (EL-534). OK or NG OK Replace.

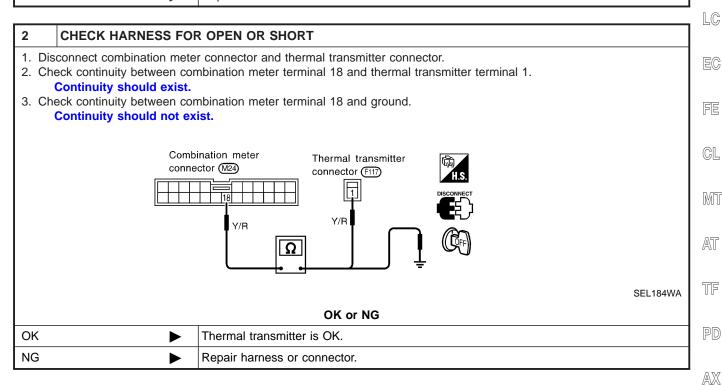

SU

BR

ST

BT

HA


SC


Electrical Components Inspection METER/GAUGE RESISTANCE CHECK

=NAEL0303

NAEL0303S01 Check resistance between installation screws of meter/gauge.

Screws		Resistance
Tacho/Speedometer Fuel/Temp. gauge		Ω
A - C A - C		Approx. 190 - Approx. 260
B - D B - C		Approx. 230 - Approx. 310

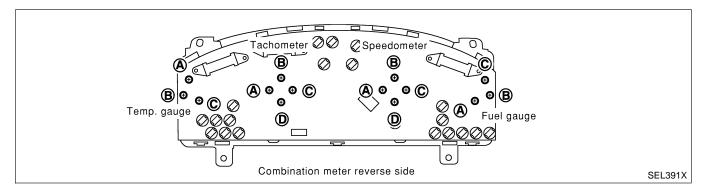

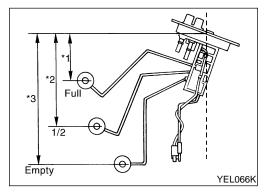


FUEL LEVEL SENSOR UNIT CHECK

NAEL0303S02

For removal, refer to FE-4, "FUEL SYSTEM". Check the resistance between terminals 3 and 2.

Ohmmeter		Float position mm (in)		Resistance	
(+)	(-)	Float position mm (in) value Ω			
		*1	Full	95 (3.74)	Approx. 4 - 6
3	2	*2	1/2	184 (7.24)	31 - 34
		*3	Empty	265 (10.43)	80 - 83

^{*1} and *3: When float rod is in contact with stopper.

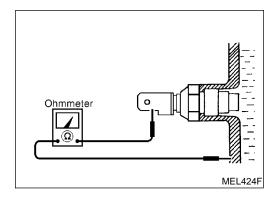

THERMAL TRANSMITTER CHECK

Check the resistance between the terminals of thermal transmitter and body ground.

Water temperature	Resistance
60°C (140°F)	Approx. 170 - 210Ω
100°C (212°F)	Approx. 47 - 53Ω

COMPASS AND THERMOMETER

SWART C/U - NEW

System Description

System Description

NAEL0304



MA

EM

LC

EC


GL

MIT

AT

PD

AX

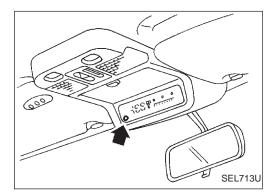

This unit displays following items:

- Earth magnetism and heading direction of vehicle.
- Outside air temperature.
- Caution for frozen road surfaces.

OUTSIDE TEMPERATURE DISPLAY

Push the switch when the ignition key is in the "ACC" or "ON" position. The outside temperature will be displayed in "°F".

- Selecting the indication range
 Push the switch to change from "°F" to "°C".
- When the outside temperature drops below freezing point, ICE is displayed on the unit.
- When the outside temperature is between 55°C (130°F) and 70°C (158°F), the display shows 55°C (130°F).
- When the outside temperature is lower than −30°C (−20°F) or higher than 70°C (158°F), the display shows only "---" though it is operating. This is not a problem.
- The indicated temperature on the thermometer is not readily affected by engine heat. It changes only when one of the following conditions is present.
- a) The temperature detected by the ambient air temperature sensor is lower than the indicated temperature on the thermometer.
- b) The difference in temperature detected during a period of 40 seconds is less than 1°C (1.8°F) when vehicle speed has been greater than 24 km/h (15 MPH) for more than 100 seconds. (This is to prevent the indicated temperature from being affected by engine heat or cooling fan operation during low-speed driving.)
- c) The ignition key has been turned to the "OFF" position for more than 4 hours. (The engine is cold.)

DIRECTION DISPLAY

Push the switch when the ignition key is in the "ACC" or "ON" position. The direction will be displayed.

NAEL0304S02


RS

BT

HA

SC

EL

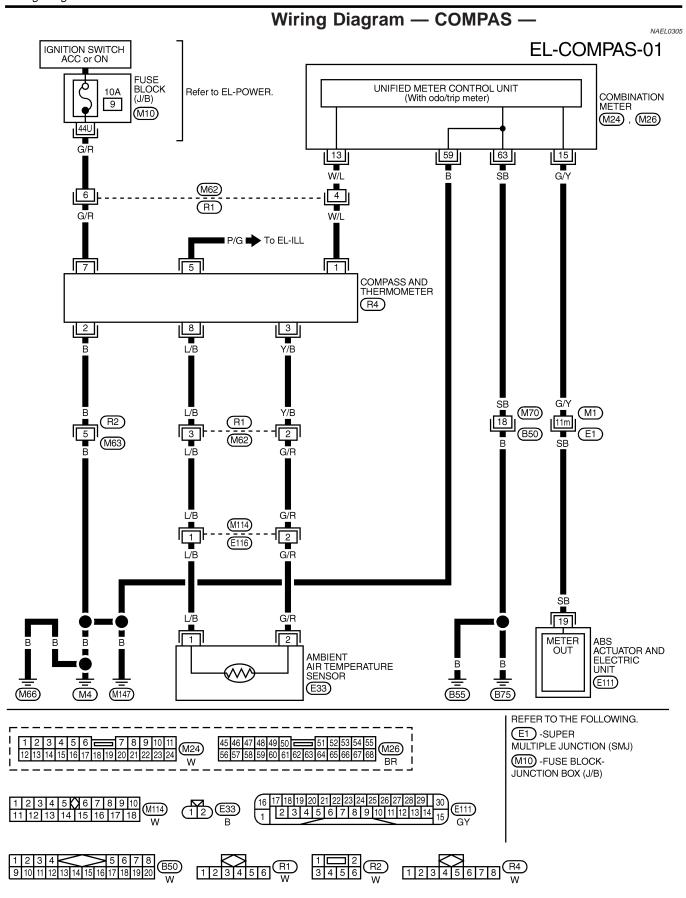

COMPASS AND THERMOMETER

SMART C/U - NEW

Trouble Diagnoses

Trouble Diagnoses

PRELIMINARY CHECK FOR THERMOMETER

NAEL0306

NAEL0306S01

MA

LC

EC

GL

MIT

AX

SU

BT

HA

SC

1	COOL DOWN CHECK		
	 Turn the ignition key switch to the "ACC" position. Cool down the ambient air temperature sensor with water or ice, so that the indicated temperature falls. 		
	Does the indicated temperature fall?		
Yes	Yes		
No	No The system is malfunctioning. Check the system following "INSPECTION/COMPASS AND THERMOMETER".		

2	WARM UP CHECK		
	 Leave the vehicle for 10 minutes, so that the indicated temperature rises. With the ignition key in the "ACC" position, disconnect and reconnect the ambient air temperature sensor connector. 		
	Does the indicated temperature rise?		
Yes	Yes The system is OK.		
No The system is malfunctioning. Check the system following "INSPECTION/COMPASS AND THERMOMETER".			

NOTE:

- When the outside temperature is between 55°C (130°F) and 70°C (158°F), the display shows 55°C (130°F). When the outside temperature is lower than -30°C (-20°F) or higher than 70°C (158°F), the display shows only "---".
- The indicated temperature on the thermometer is not readily affected by engine heat. It changes only when one of the following conditions is present.
- a) The temperature detected by the ambient air temperature sensor is lower than the indicated temperature on the thermometer.
- b) The difference in temperature detected during a period of 40 seconds is less than 1°C (1.8°F) when vehicle speed has been greater than 24 km/h (15 MPH) for more than 100 seconds. (This is to prevent the indicated temperature from being affected by engine heat or cooling fan operation during low-speed driving.)
- c) The ignition key has been turned to the "OFF" position for more than 4 hours. (The engine is cold.)

INSPECTION/COM	NSPECTION/COMPASS AND THERMOMETER			
Symptom	Possible causes	Repair order		
No display at all	1. 10A fuse 2. Ground circuit 3. Compass and thermometer	Check 10A fuse [No. 9, located in fuse block (J/B)]. Turn the ignition switch ON and verify that battery positive voltage is at terminal 7 of compass and thermometer. Check ground circuit for compass and thermometer. Replace compass and thermometer.		
Forward direction indication slips off the mark or incorrect.	In manual correction mode (Bar and display vanish.) Zone variation change is not done.	 Drive the vehicle and turn at an angle of 90°. Perform the zone variation change. 		
Compass reading remains unchanged.	Vehicle speed signal is not entered. Compass and thermometer	Check harness for open or short between combination meter terminal 13 and compass and thermometer terminal 1. Replace compass and thermometer.		
Displays wrong temperature when ambient temperature is between -30°C (-20°F) and 55°C (130°F). (See NOTE above.)	Check operation Ambient air temperature sensor circuit Vehicle speed signal is not entered. Ambient air temperature sensor Compass and thermometer	 Perform preliminary check shown above. Check harness for open or short between ambient air temperature sensor and compass and thermometer. Check harness for open or short between combination meter terminal 13 and compass and thermometer terminal 1. Replace ambient air temperature sensor. 		


ı e


EL

5. Replace compass and thermometer.

Calibration Procedure for Compass

The difference between magnetic North and geographical North can sometimes be great enough to cause false compass readings. In order for the compass to operate accurately in a particular zone, it must be calibrated using the following procedure.

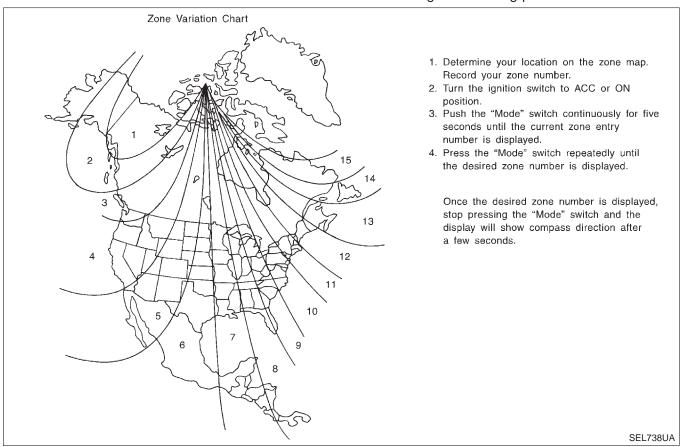

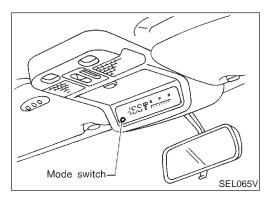

CORRECTION FUNCTIONS OF COMPASS


The direction display is equipped with automatic correction function. If the direction is not shown correctly, carry out initial correc-


INITIAL CORRECTION PROCEDURE FOR COMPASS


- Pushing the "Mode" switch for about 10 seconds will enter the initial correction mode. The direction bar starts blinking.
- Turn the vehicle slowly in an open, safe place. The initial correction is completed in one or two turns.


NOTE:

In places where the terrestrial magnetism is extremely disturbed, the initial correction may start automatically.

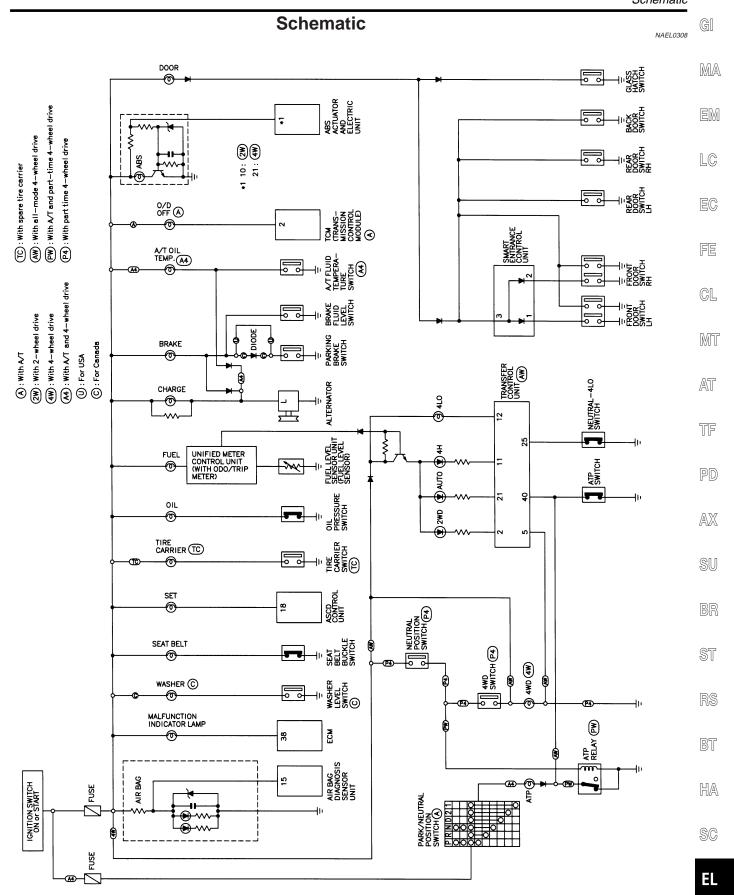


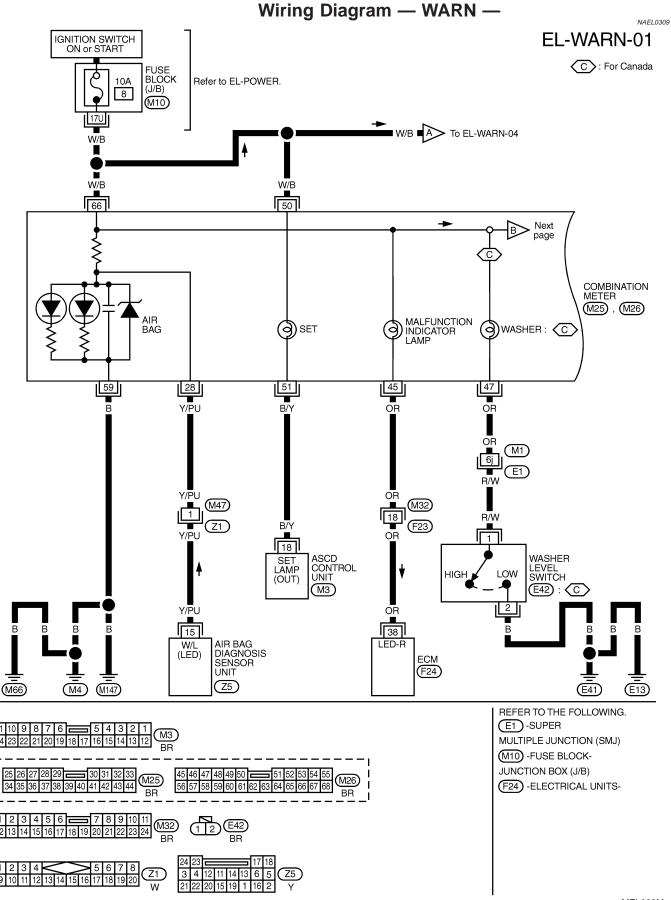


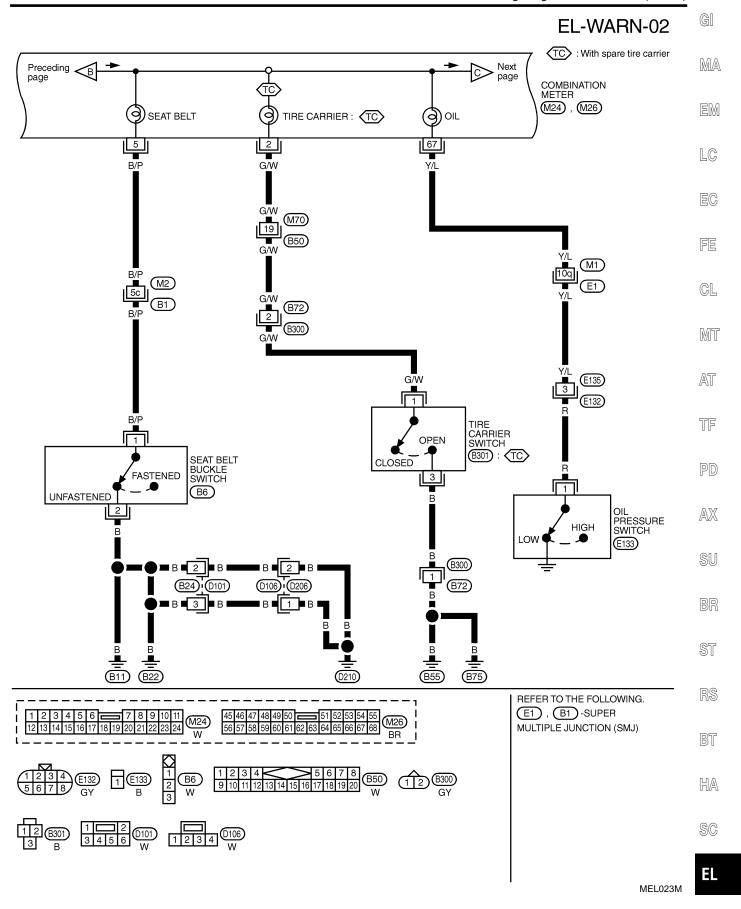


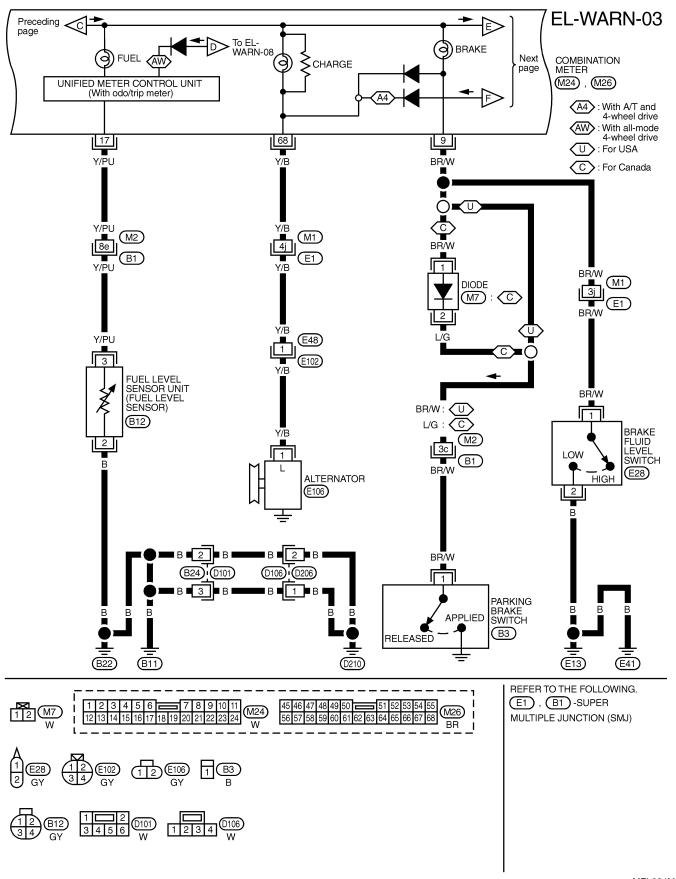



[DX

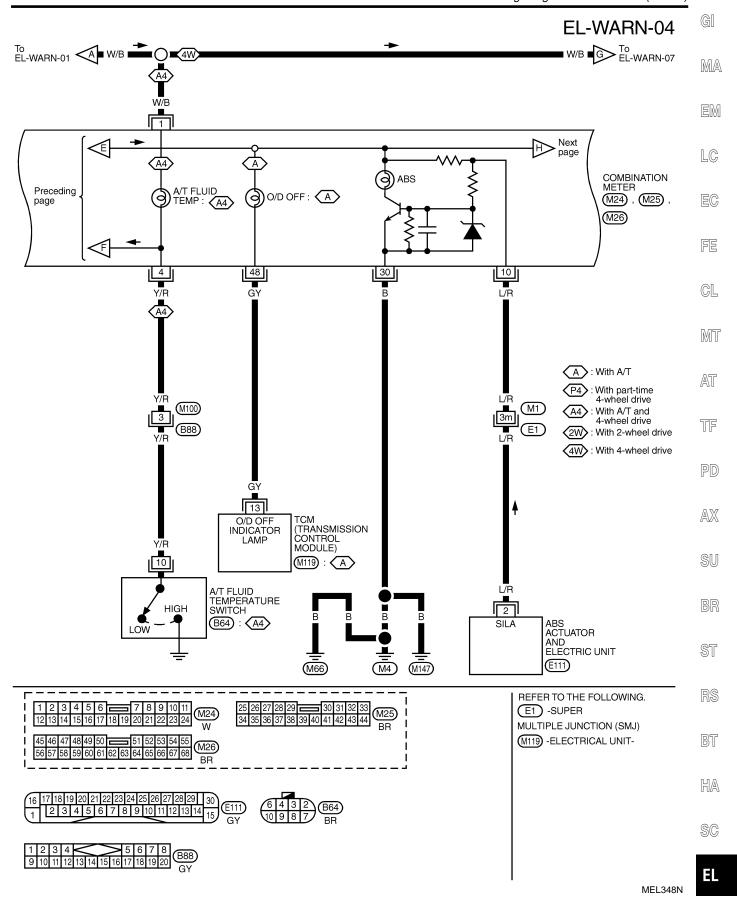

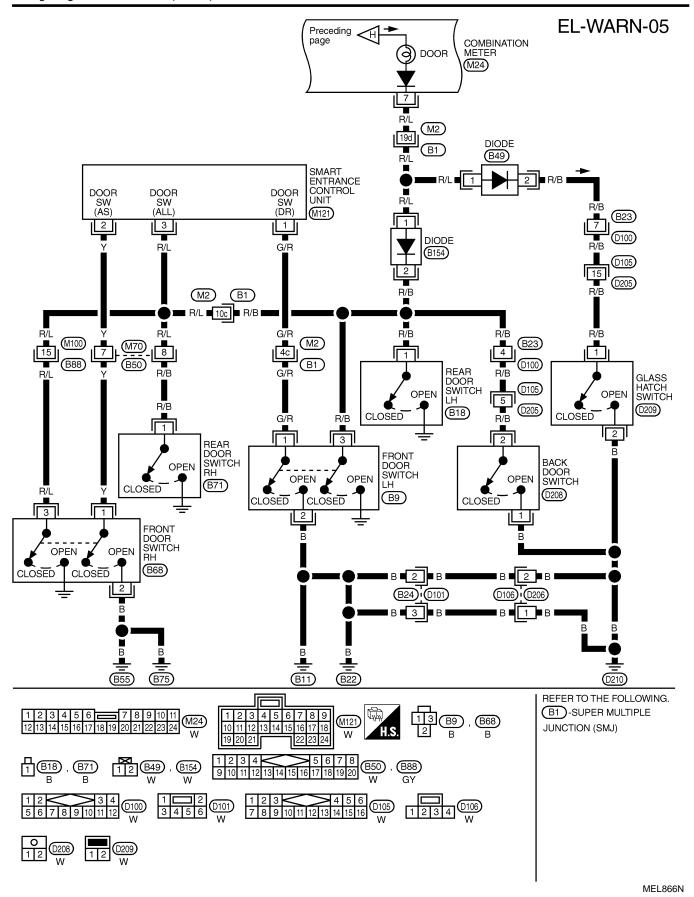


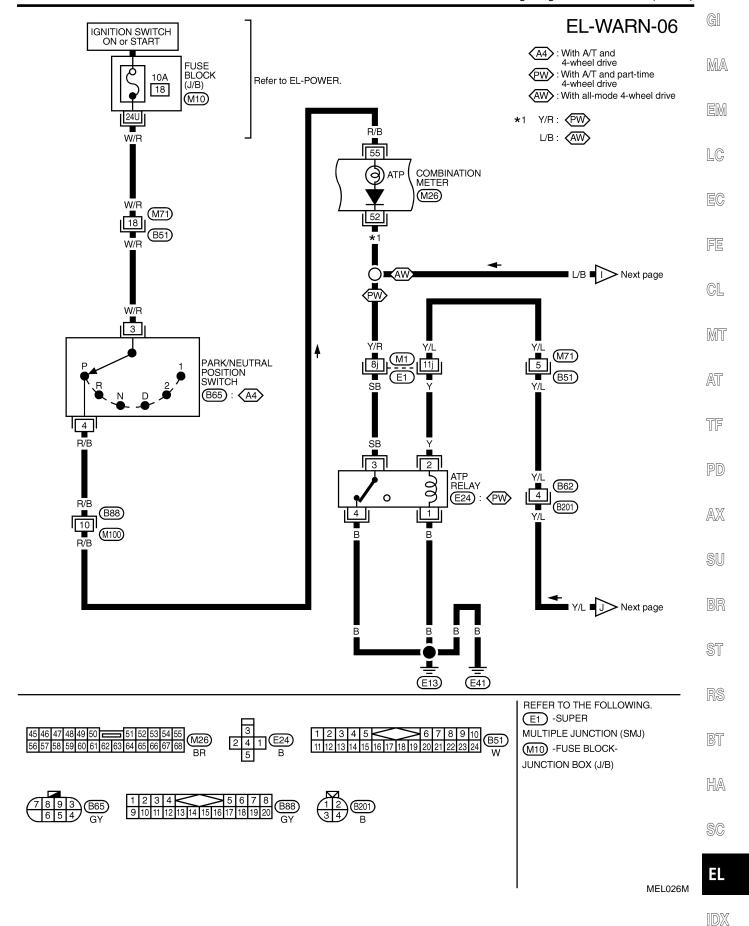

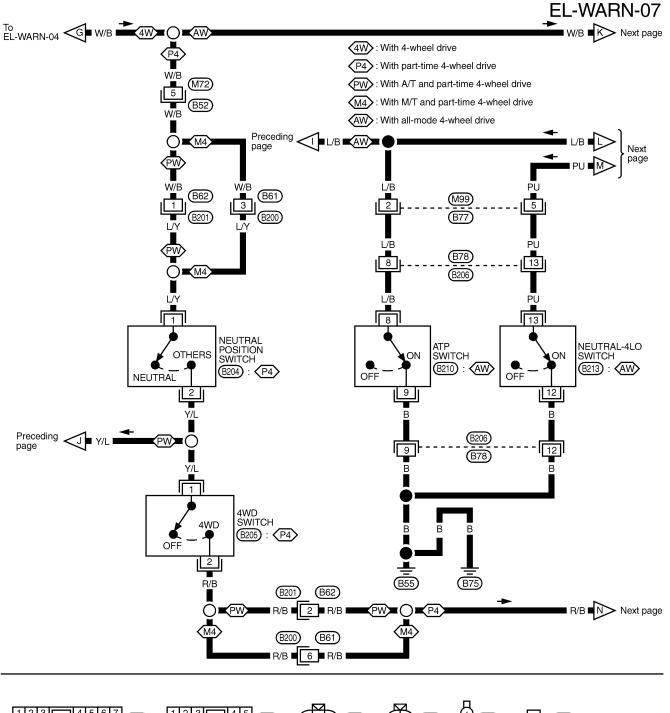


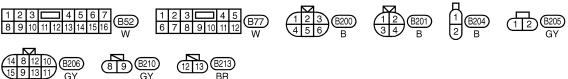

MEL027M

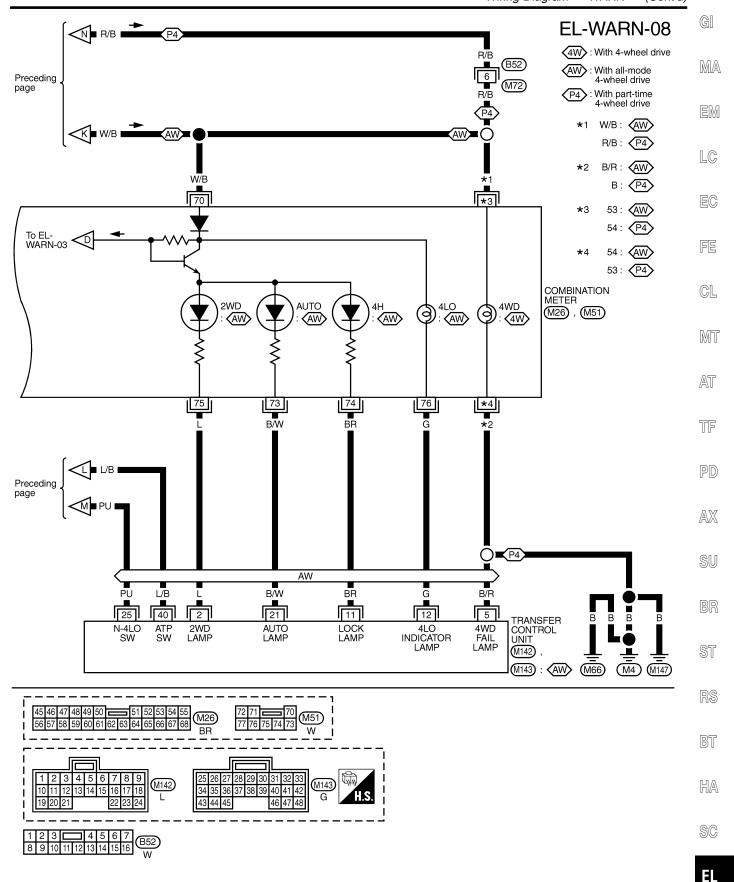

MEL028M

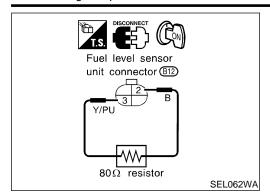

Fuel Warning Lamp Sensor Check

Turn ignition switch "OFF".


- 2. Disconnect fuel level sensor unit harness connector B12.
- 3. Connect a resistor (80Ω) between fuel tank gauge unit harness connector terminals 2 and 3.
- 4. Turn ignition switch "ON".

The fuel warning lamp should come on.

NOTE:

ECM might store the 1st trip DTC P0180 during this inspection. If the DTC is stored in ECM memory, erase the DTC after reconnecting fuel tank gauge unit harness connector.

Refer to EC-62, "HOW TO ERASE EMISSION-RELATED DIAGNOSTIC INFORMATION".

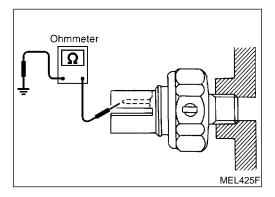


Electrical Components Inspection OIL PRESSURE SWITCH CHECK

NAEL0311

NAEL0311S01

	Oil pressure kPa (kg/cm², psi)	Continuity
Engine start	More than 10 - 20 (0.1 - 0.2, 1 - 3)	NO
Engine stop	Less than 10 - 20 (0.1 - 0.2, 1 - 3)	YES

Check the continuity between the terminals of oil pressure switch and body ground.

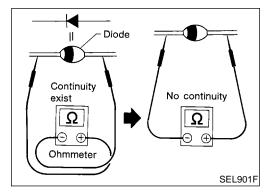

DIODE CHECK

NAEL0311S02

- Check continuity using an ohmmeter.
- Diode is functioning properly if test results are as shown in the figure at left.
- Check diodes at the combination meter harness connector instead of checking them on the combination meter assembly. Refer to EL-540, "WARNING LAMP" wiring diagrams.

NOTE

Specification may vary depending on the type of tester. Before performing this inspection, be sure to refer to the instruction manual for the tester to be used.

Component Parts and Harness Connector Location

G[10312

MA

EM


LC

GL

MIT

AT

TF

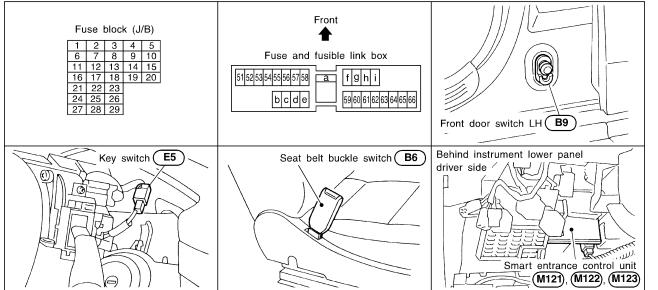

SEL046WA

System Description

The warning chime is controlled by the smart entrance control unit. The warning chime is located in the smart entrance control unit. Power is supplied at all times

- through 7.5A fuse [No. 24, located in fuse block (J/B)]
- to smart entrance control unit terminal 49 and
- to key switch terminal 2,
- through 10A fuse (No. 61, located in the fuse and fusible link box
- to tail lamp relay terminals 1 and 3.

When the ignition switch in the ON or START position, power is supplied

- through 7.5A fuse [No. 11, located in the fuse block (J/B)]
- to smart entrance control unit terminal 27.

Ground is supplied

- to smart entrance control unit terminals 43 and 64
- through body grounds M77 and M111.

When a signal, or combination of signals, is received by the smart entrance control unit, the warning chime will sound.

IGNITION KEY WARNING CHIME

When the key in the ignition switch in the OFF position, and the driver's door open, the warning chime will sound. Power is supplied

- from key switch terminal 1
- to smart entrance control unit terminal 25.

Ground is supplied

- from front door switch (driver side) terminal 1
- to smart entrance control unit terminal 1.

Front door switch (driver side) terminal 2 is grounded through body grounds B11, B22 and D210.

LIGHT WARNING CHIME

When ignition switch OFF, driver's door open, and lighting switch in 1ST or 2ND position, warning chime will sound. Power is supplied.

from tail lamp relay terminal 2

NAEL0313

 $\mathbb{A}\mathbb{X}$

PD

SU

BR

ST

RS

110

BT

HA

SC

EL

to smart entrance control unit terminal 19 and 57.

Ground is supplied

- from front door switch (driver side) terminal 1
- to smart entrance control unit terminal 1.

Front door switch (driver side) terminal 2 is grounded through body grounds B11, B22 and D210.

SEAT BELT WARNING CHIME


With ignition switch turned ON and seat belt unfastened (seat belt switch ON), warning chime will sound for approximately 6 accords approximately 6 seconds.

Ground is supplied


- from seat belt switch terminal 1
- to smart entrance control unit terminal 28.

Seat belt switch terminal 2 is grounded through body grounds B11, B22 and D210.


[DX

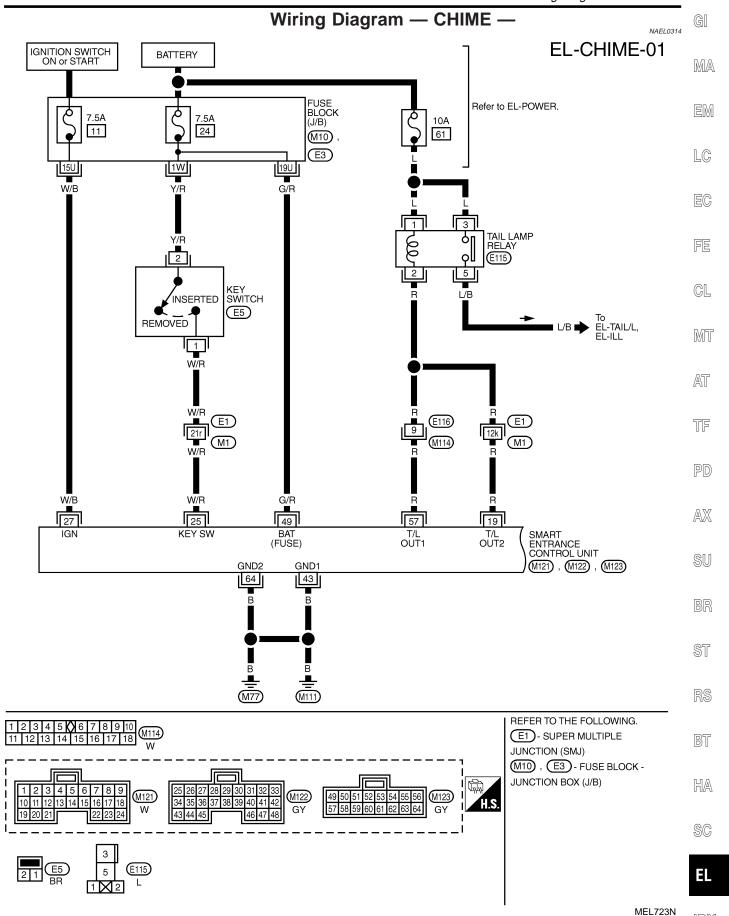

EL-CHIME-02

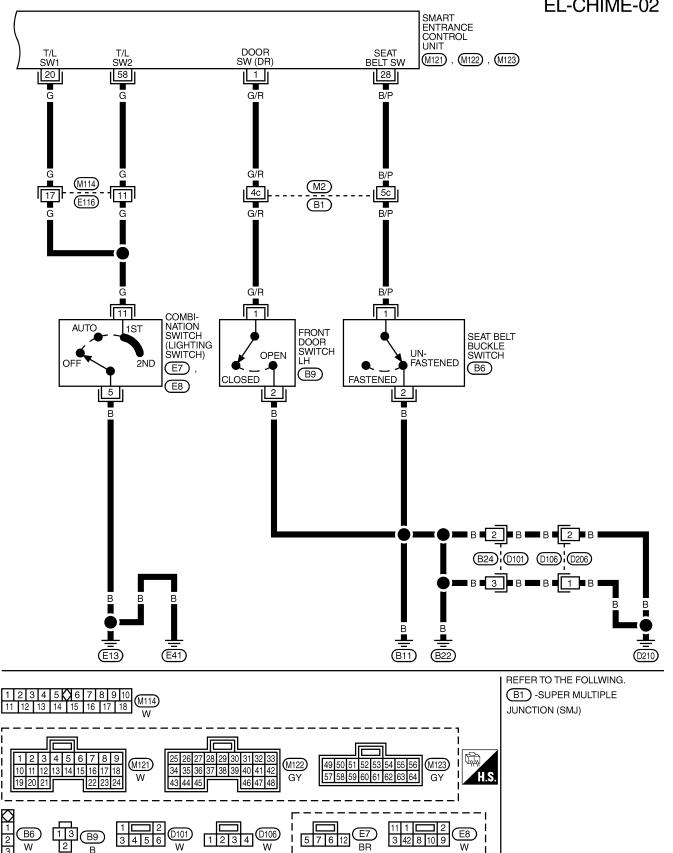

MEL724N

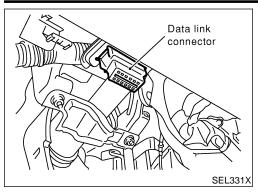

CONSULT-II Inspection Procedure

"KEY WARN ALM"/"LIGHT WARN ALM"/"SEAT BELT
ALM"

NAEL0315S01

1. Turn ignition switch "OFF".

815S01 MA

GI

2. Connect "CONSULT-II" to the data link connector.

EM

LC

3. Turn ignition switch "ON".
4. Touch "START".

EC

FE CL

MT

5. Touch "SMART ENTRANCE".

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

118

 Touch "KEY WARN ALM", "LIGHT WARN ALM" or "SEAT BELT ALM".

ST


BT

DATA MONITOR and ACTIVE TEST are available for the warning chime.

HA

SC

EL

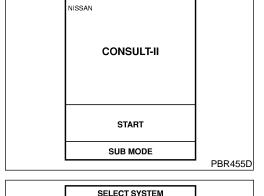

SELECT SYSTEM
ENGINE
A/T
AIR BAG
ABS
SMART ENTRANCE

SELECT TEST ITEM

DOOR LOCK

REAR DEFOGGER


KEY WARN ALM

LIGHT WARN ALM

SEAT BELT ALM

INT LAMP

SEL023X

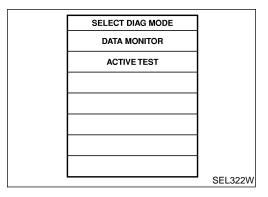

CONSULT-II Application Items

"KEY WARNING ALARM" Data Monitor

NAEL0316

NAEL0316S01

	NAEL0316S0101
Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
KEY ON SW	Indicates [ON/OFF] condition of key switch.
DOOR SW DR	Indicates [ON/OFF] condition of front door switch LH.

Active Test

NAEL0316S0102

Test Item	Description
CHIME	This test is able to check key warning chime operation. Key warning chime sounds for 2 seconds after touching "ON" on CONSULT-II screen.

"LIGHT WARN ALM" Data Monitor

NAEL0316S02

NAEL0316S0201

Monitored Item	Description
LIGHT SW 1ST	Indicates [ON/OFF] condition of lighting switch.
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.

Active Test

NAEL0316S0202

Test Item	Description
	This test is able to check light warning chime operation. Light warning chime sounds for 2 seconds after touching "ON" on CONSULT-II screen.

"SEAT BELT WARM ALM"

Data Monitor

NAEL0316S03

NAEL0316S0301

Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
SEAT BELT SW	Indicates [ON/OFF] condition of seat belt switch.

Active Test

NAEL0316S0302

Test Item	Description
U.HIIVIE	This test is able to check seat belt warning chime operation. Seat belt warning chime sounds for 2 seconds after touching "ON" on CONSULT-II screen.

WARNING CHIME

SMART C/U - NEW


Trouble Diagnoses

Trouble Diagnoses	
SYMPTOM CHART	

G[NAEL0317

NAEL0317S01

REFERENCE PAGE (EL-)	555	557	558	559	560	MA
SYMPTOM	POWER SUPPLY AND GROUND CIRCUIT CHECK	DIAGNOSTIC PROCEDURE 1 (LIGHTING SWITCH INPUT SIGNAL CHECK)	DIAGNOSTIC PROCEDURE 2 (KEY SWITCH INSERT SIGNAL CHECK)	DIAGNOSTIC PROCEDURE 3 (SEAT BELT BUCKLE SWITCH CHECK)	DIAGNOSTIC PROCEDURE 4	EM LC EC
Light warning chime does not activate.	X	X			Х	GL
Ignition key warning chime does not activate.	Х		Х		Х	
Seat belt warning chime does not activate.	Х			Х	Х	MT
All warning chimes do not activate.	Х				Х	AT

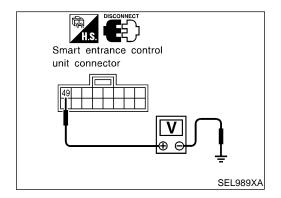

POWER SUPPLY AND GROUND CIRCUIT CHECK NAEL0317S02 **Power Supply Circuit Check**

TF

PD

AX

SU

BR

ST

RS


NAEL0317S0201 **Terminals** Voltage (+) (-) Terminal Battery voltage Connector (Wire color) Ground M122 49 (G/R)

If NG, check 7.5A fuse [No. 24, located in fuse block (J/B)].

HA

BT

SC

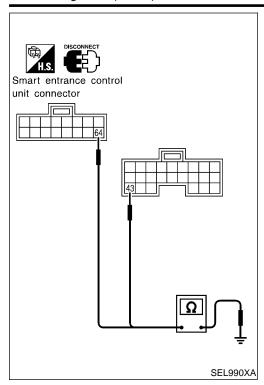


Ground Circu	it Check		NAEL0317S0202
	Terminals		Continuity
	(+)		
Connector	Terminal (Wire color)	(–)	Yes
M122	43 (B)	Ground	
M123	64 (B)	Giouna	

Trouble Diagnoses (Cont'd)



GI

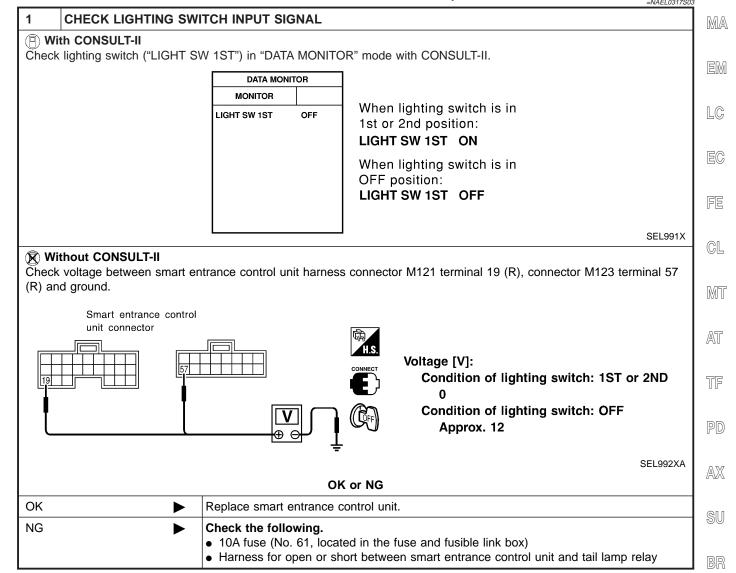


ST


BT

HA

OK

DIAGNOSTIC PROCEDURE 2 (KEY SWITCH INSERT SIGNAL CHECK)

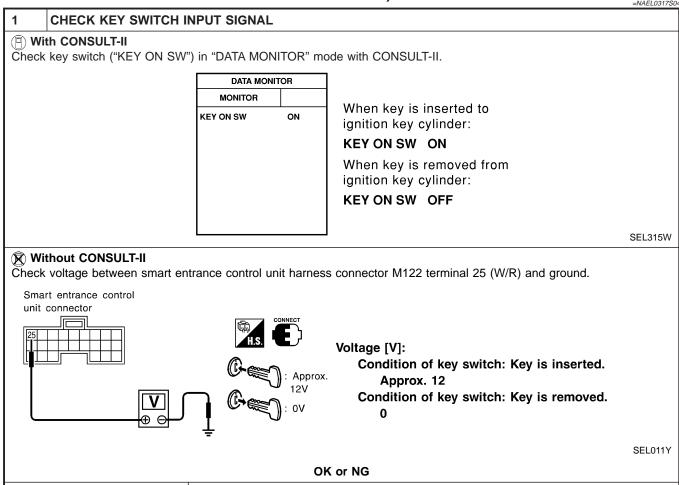

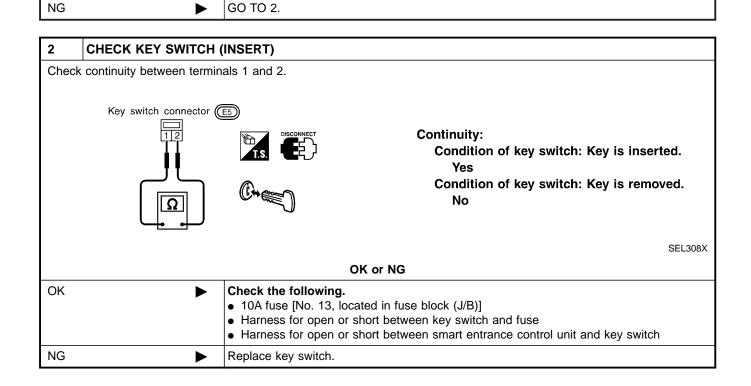

Replace smart entrance control unit.

DIAGNOSTIC PROCEDURE 3 (SEAT BELT BUCKLE SWITCH CHECK)

GI

MA

EM

LC

FE

GL

MT

AT


TF

AX

BR

BT

HA

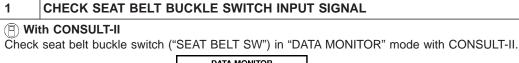

DATA MONITOR
MONITOR
SEAT BELT SW ON

When seat belt is fastened:

SEAT BELT SW ON

When seat belt is released:


SEAT BELT SW OFF

SEL317W

Without CONSULT-II

- 1. Turn ignition switch "ON".
- 2. Check voltage between smart entrance control unit harness connector M122 terminal 28 (B/P) and ground.

Smart entrance control unit connector

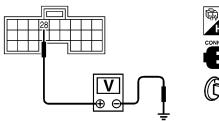

Voltage [V]:

Condition of seat belt buckle switch: Fastened Approx. 5

Condition of seat belt buckle switch: Unfastened

0


SEL994X

OK or NG

OK ►	Replace smart entrance control unit.
NG ▶	GO TO 2.

2 CHECK SEAT BELT BUCKLE SWITCH

Check continuity between terminals 1 and 2 when seat belt is fastened and unfastened.

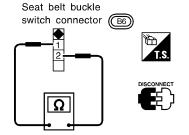

Continuity:

Seat belt is fastened.

No

Seat belt is unfastened.

Yes

SEL381X

OK or NG

OK

Check the following.

Seat belt buckle switch ground circuit
Harness for open or short between smart entrance control unit and seat belt buckle switch

Replace seat belt buckle switch.

DIAGNOSTIC PROCEDURE 4

NAEL0317S06

CHECK IGNITION ON SIGNAL

(P) With CONSULT-II

Check ignition switch ON signal ("IGN ON SW") in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR		
MONITOR		
GN ON SW	ON	

When ignition switch is ON:

IGN ON SW ON


When ignition switch is OFF:

IGN ON SW OFF

SEL318W

Without CONSULT-II

Check voltage between smart entrance control unit harness connector M122 terminal 27 (W/B) and ground.

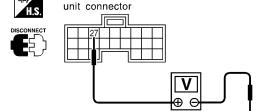

Smart entrance control


Terminals		Ignition switch position		
(+)	(-)	OFF	ACC	ON
27	Ground	0V	0V	Battery voltage


SEL995X

OK or NG

OK	GO TO 2.	
NG	Check the following. 7.5A fuse [No. 11, located in fuse block (J/B)] Harness for open or short between smart entrance con	trol unit and fuse

WARNING CHIME

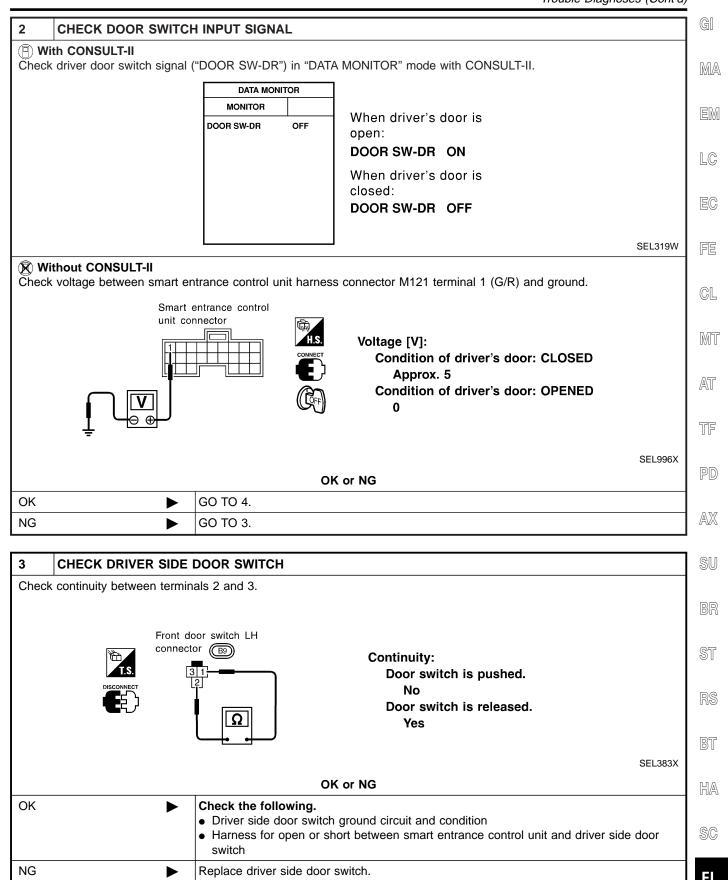

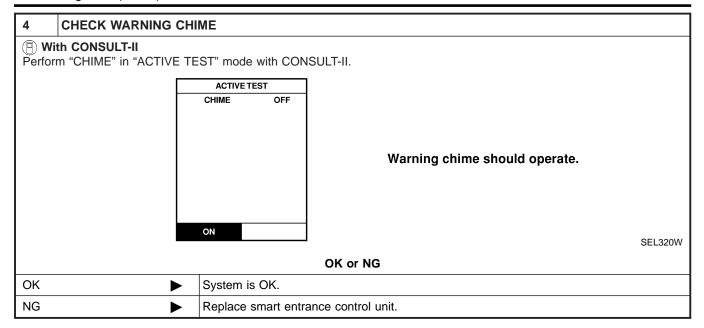

FRONT WIPER AND WASHER

SMART C/U - NEW System Description

System Description

NAEL0318

NAFL 0318S01

MA

LC

EC

GL

MIT

TF

AX

SU

The front wiper switch is controlled by a lever built into the combination switch.

There are three wiper switch positions:

LO speed

HI speed

INT (Intermittent)

WIPER OPERATION

With the ignition switch in the ACC or ON position, power is supplied

through 20A fuse [No. 19, located in the fuse block (J/B)]

to front wiper motor terminal 1, and

to front wiper switch terminal 15.

NAEL0318S0101

Low and High Speed Wiper Operation

Ground is supplied to front wiper switch terminal 17 through body grounds E13 and E41.

When the wiper switch is placed in the LO position, ground is supplied

through terminal 14 of the front wiper switch

to front wiper motor terminal 5. With power and ground supplied, the front wiper motor operates at low speed.

When the front wiper switch is placed in the HI position, ground is supplied

through terminal 16 of the front wiper switch

to front wiper motor terminal 3.

With power and ground supplied, the front wiper motor operates at high speed.

AT

Auto Stop Operation

With front wiper switch turned OFF, front wiper motor will continue to operate until wiper arms reach windshield base.

When wiper arms are not located at base of windshield with front wiper switch OFF, ground is provided

from terminal 14 of the front wiper switch

to front wiper motor terminal 5, in order to continue front wiper motor operation at low speed.

Ground is also supplied

to terminal 13 of the front wiper switch

through front wiper motor terminal 4

through terminal 6 of the front wiper motor, and

through body grounds M77 and M111.

When wiper arms reach base of windshield, front wiper motor terminals 1 and 4 are connected instead of terminals 4 and 6. Wiper motor will then stop wiper arms at the PARK position.

Intermittent Operation

The front wiper motor operates the wiper arms one time at low speed at a set interval of approximately 2 to 13 seconds. This feature is controlled by the wiper amplifier built in the front wiper switch.

When the front wiper switch is placed in the INT position, ground is supplied

to wiper amplifier (INT SW)

from front wiper switch terminal 17

through body grounds E13 and E41, and

to front wiper motor terminal 5

through the front wiper switch terminal 14

through wiper amplifier (OUTPUT)

WASHER OPERATION

With the ignition switch in the ACC or ON position, power is supplied

through 20A fuse [No. 19, located in the fuse block (J/B)]

to front washer motor terminal 1.

When the lever is pulled to the WASH position, ground is supplied

to front washer motor terminal 2

through terminal 18 of the front wiper switch

NAFI 0318S02

HA

SC

FRONT WIPER AND WASHER

SMART C/U - NEW


System Description (Cont'd)


- through terminal 17 of the front wiper switch, and
- through body grounds E13 and E41.

With power and ground supplied, the front washer motor operates.

When the lever is pulled to the WASH position for one second or more, the front wiper motor operates at low speed for approximately 3 seconds to clean windshield. This feature is controlled by the wiper amplifier in the same manner as the intermittent operation.

[DX

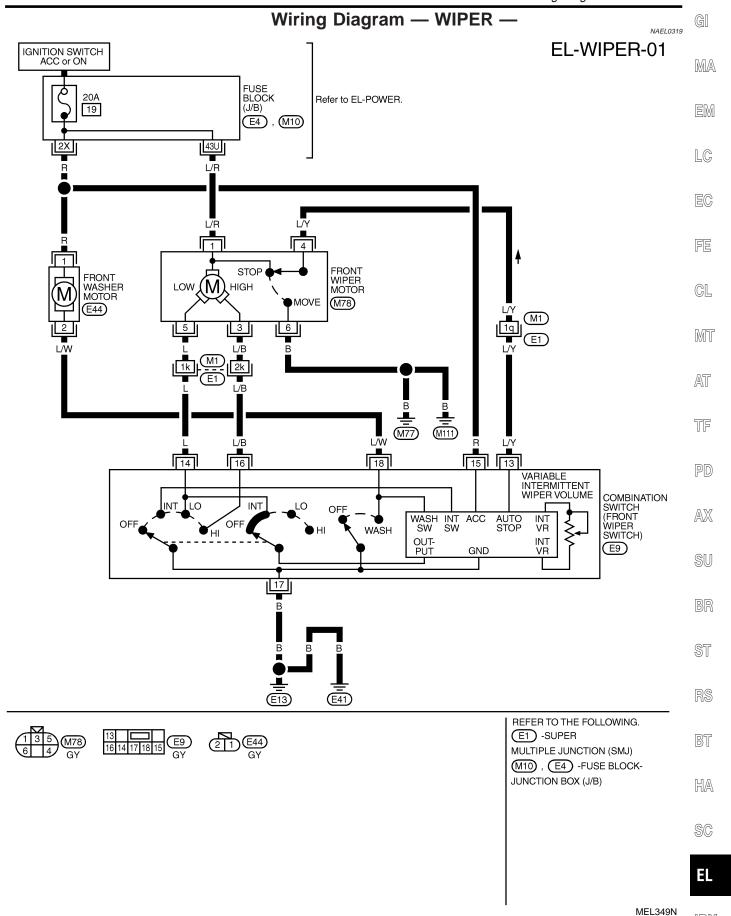

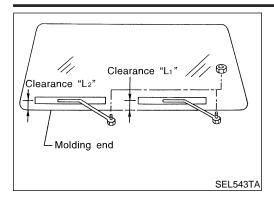


Removal and Installation WIPER ARMS

- NAEL0320S01 Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
- 2. Lift the blade up and then set it down onto glass surface to set the blade center to clearance " L_1 " & " L_2 " immediately before tightening nut.
- Eject washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".
- Ensure that wiper blades stop within clearance "L₁" & "L₂".


Clearance "L₁": 29 - 30 mm (1.14 - 1.18 in) Clearance "L2": 32 - 42 mm (1.26 - 1.65 in)

Tighten wiper arm nuts to specified torque.

Front wiper: 21 - 26 N·m (2.1 - 2.7 kg-m, 15 - 20 ft-lb)

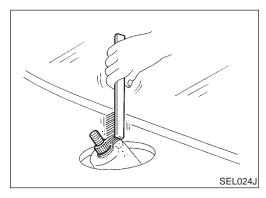

Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.

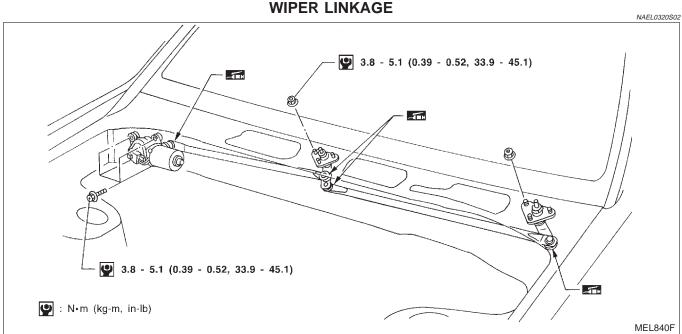

FRONT WIPER AND WASHER

SMART C/U - NEW

Removal and Installation (Cont'd)

Removal

NAEL0320S0201

- Remove 4 bolts that secure wiper motor.
- Detach wiper motor from wiper linkage at ball joint.
- Remove wiper linkage.

Be careful not to break ball joint rubber boot.

Installation

EM NAEL0320S0202

- Grease ball joint portion before installation.
- Installation is the reverse order of removal.

LC

Washer Nozzle Adjustment



MA

Adjust washer nozzle with suitable tool as shown in the figure at left.

Adjustable range: ±10°



Unit: mm (in)



MT

			` '
*1	251 (9.88)	*6	459 (18.07)
*2	351 (13.82)	*7	256 (10.08)
*3	165 (6.50)	*8	67 (2.64)
*4	269 (10.59)	*9	42 (1.65)
*5	167 (6.57)		



TF

*A: The diameters of these circles are less than 80 mm (3.15 in).

*B: The diameter of this circle is less than 138 \times 80 mm (5.43 \times 3.15 in).

*C: The diameter of this circle is less than 96×80 mm (3.78 \times 3.15 in).

SU


AX


Washer Tube Layout


NAEL0322

HA

SC

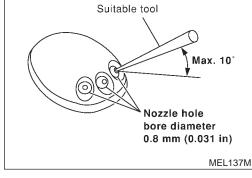

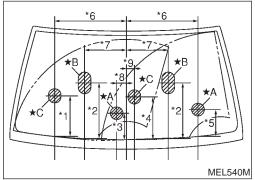

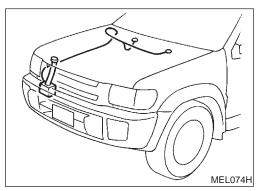

System Description

WIPER OPERATION

Power Supply and Ground

NAEL0323

NAEL0323S01 NAEL0323S0101

With ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 29, located in the fuse block (J/B)]
- to rear wiper amp. terminal 6.

When the glass hatch switch is OPEN, ground is supplied

- to rear wiper amp. terminal 3
- through glass hatch switch terminal 1 and 2
- through body grounds B11, B22 and D210.

Ground is supplied

- to rear wiper amp. terminal 9
- through body grounds B11, B22 and D210.

Low Speed Wiper Operation

When the rear wiper switch is turned ON, ground is supplied

- to rear wiper amp. terminal 2
- through combination switch terminals 22 and 24
- through body grounds E13 and E41.

Then, power is supplied

- through rear wiper amp. terminal 11
- to rear wiper motor terminal 4.

Ground is supplied

- to rear wiper motor terminal 3
- through rear wiper amp. terminal 8.

With power and ground supplied, the wiper motor operates at low speed.

Auto Stop Operation

VAFL 0323S01

NAEL0323S0102

With rear wiper switch turned OFF, rear wiper motor will continue to operate until wiper arm reaches rear wiper stopper.

When rear wiper arm is not located at bottom with wiper switch OFF, ground is supplied

- to rear wiper amp, terminal 10
- through wiper motor terminals 7 and 8
- through body grounds B11, B22 and D210.

Then rear wiper motor continues to operate until wiper arm reaches bottom.

When wiper arm reaches bottom, power is supplied

- through 10A fuse [No. 29, located in the fuse block (J/B)]
- through rear wiper motor terminals 6 and 7 and
- through rear wiper amp. terminals 10 and 8
- to rear wiper motor terminal 3.

Ground is supplied

- to rear wiper motor 4
- through rear wiper amp. terminal 11.

Then wiper motor turns the other way and wiper arm moves once until wiper arm reaches stopper.

Intermittent Operation

AEL0323S0104

The rear wiper motor operates the wiper arms at low speed approximately every 7 seconds. This feature is controlled by the wiper amp.

When the wiper switch is placed in the INT position, ground is supplied

- to wiper amp. terminal 4
- through rear combination switch terminal 21 and 24
- through body grounds E13 and E41.


Then, power is supplied

through rear wiper amp. terminal 11

REAR WIPER AND WASHER

SMART C/U - NEW
System Description (Cont'd)

to rear wiper motor terminal 4. Ground is supplied to rear wiper motor terminal 3 MA through rear wiper amp. terminal 8. With power and ground supplied, rear wiper operates at low speed intermittent. EM WIPER OPERATION PROHIBIT CONTROL When glass hatch is open with back door key cylinder while rear wiper is operated, wiper operation is stopped. (Wiper operation prohibit control) When glass hatch is closed and rear wiper switch turns from OFF and then rear wiper switch is turned to ON, wiper operation prohibit control is canceled. EC WASHER OPERATION NAEL0323S03 When the rear wiper switch is turned to WASH position, ground is supplied to rear wiper amp. terminal 1 through terminals 23 and 24 through body grounds E13 and E41. GL Then, power is supplied through rear wiper amp. terminal 7 to rear washer motor terminal 2. MIT Ground is supplied to rear washer motor terminal 1 AT through body grounds E13 and E41. With power and ground supplied, the rear washer motor operates. When the rear wiper switch is turned to WASH position for one second or more, the rear wiper motor operates at low speed for approximately 3 seconds after the rear wiper switch is released. This feature is controlled by the rear wiper amp. in the same manner as the low speed operation. AX SU BT HA SC

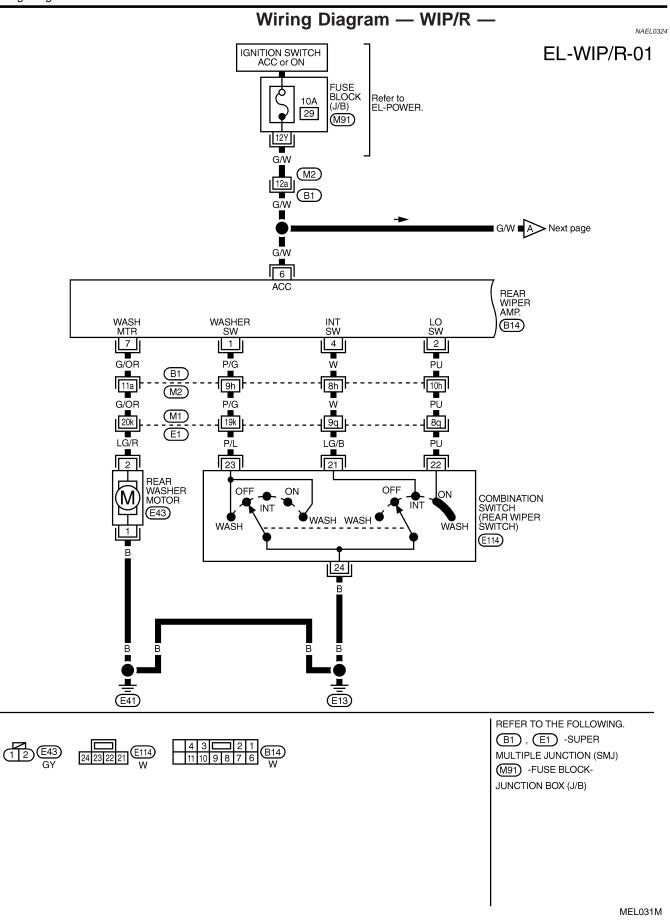



G[

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR


ST


RS

BT

HA

SC

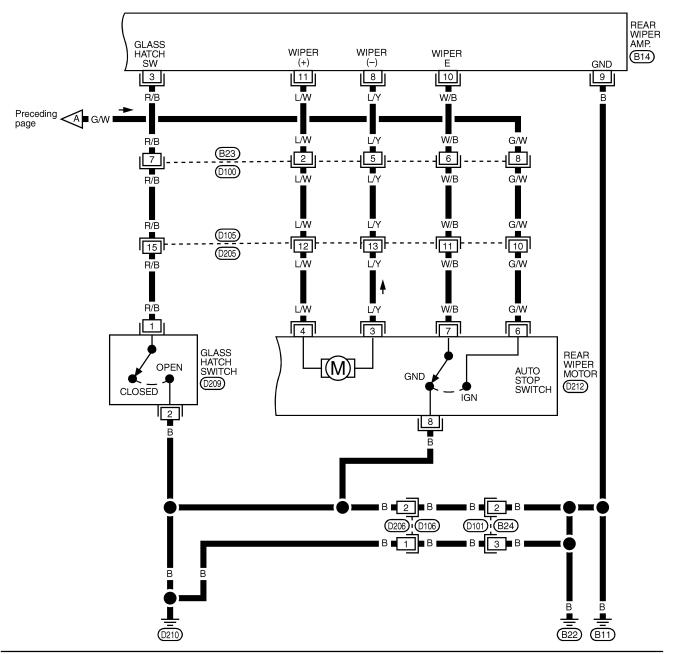

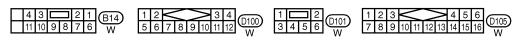



EL

MEL032M

Trouble Diagnoses

REAR WIPER AMP. INSPECTION TABLE

NAEL0325


NAEL0325S01

(Data are reference values.)

Terminal No.	Item	Condition			Voltage (Approximate value)
1	Washer switch	(LCC)	Rear wiper switch	WASH	Less than 1V
				OFF, ON or INT	Battery voltage
2	Low switch	(Ecc)	Rear wiper switch	ON	Less than 1V
				OFF or INT	Battery voltage
3	Glass hatch switch	(LCC)	Glass hatch	Open	Less than 1V
				Closed	Battery voltage
4	Intermittent switch	(Acc)	Rear wiper switch	INT	Less than 1V
				OFF, ON or WASH	Battery voltage
6	Power supply (ACC)	(Acc)	_		Battery voltage
7	Washer motor	(Tacc)	Rear washer switch	WASH	Battery voltage
				OFF, ON or INT	Less than 1V
8	Rear wiper motor	(Acc)	Wiper is moving (except final drive)		Less than 1V
			Wiper stop		Less than 1V
			During wiper final drive		Battery voltage
9	Ground	-		_	
10	Auto stop switch	Œ	Rear wiper switch should be at "INT" to inspect the value for wiper movement.	Wiper is moving	Less than 1V
				Wiper stop	Battery voltage
11	Rear wiper motor	(Licc)	Wiper is moving (except final drive)		Battery voltage
			Wiper stop		Battery voltage
			During wiper final drive		Less than 1V

NOTE:

Power to the rear wiper amp. will be interrupted when the rear glass hatch is opened. In that case, conduct the inspection of the rear wiper amp. with the rear glass hatch closed, unless otherwise indicated.

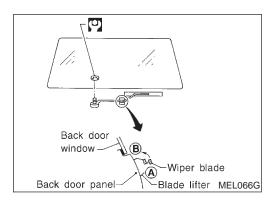


Removal and Installation WIPER ARMS

NAEL0326

- Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
- 2. Install wiper arm to portion A as in figure below and tighten wiper arm nut to specification.
- 3. Then, set wiper arm to portion B.

(1.3 - 1.8 kg-m, 9 - 13 ft-lb)

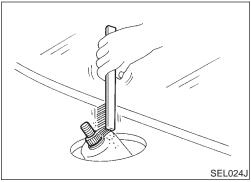

Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm loose-



LC

EG



Adjust washer nozzle with suitable tool as shown in the figure

Adjustable range: ±10° (In any direction)

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

NAEL0328

BT

HA




Washer Tube Layout


A check valve is provided in the washer fluid line. Be careful not to connect check valve to washer tube in the wrong direction.


SC




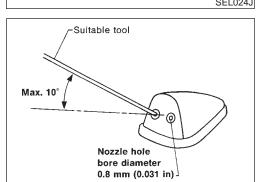


SEL241P

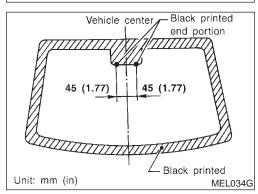


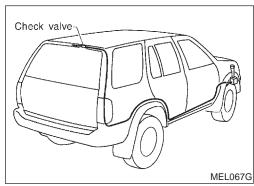

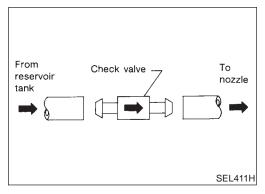

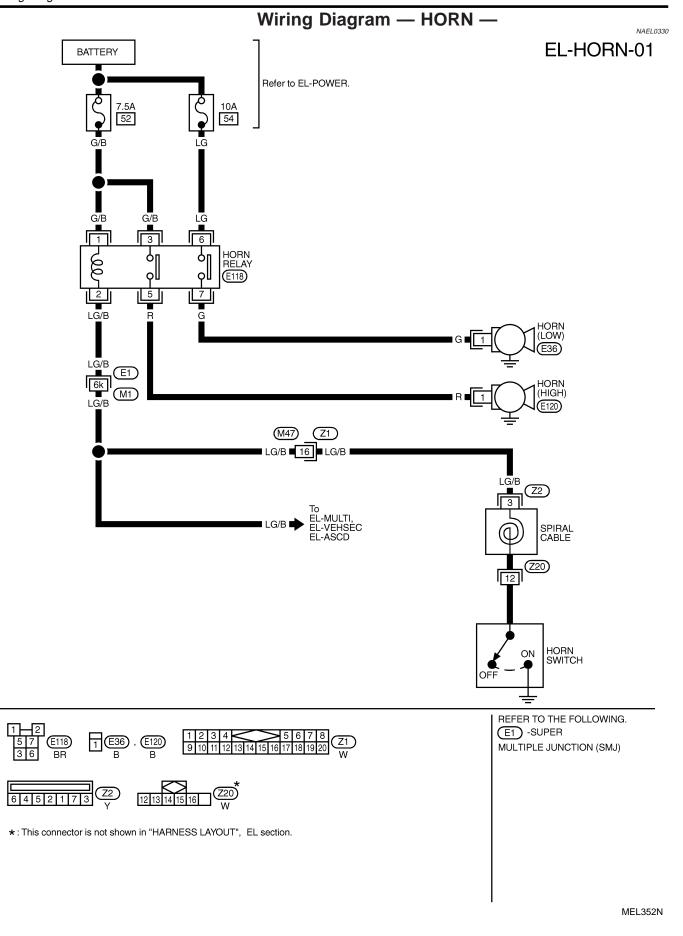


[DX

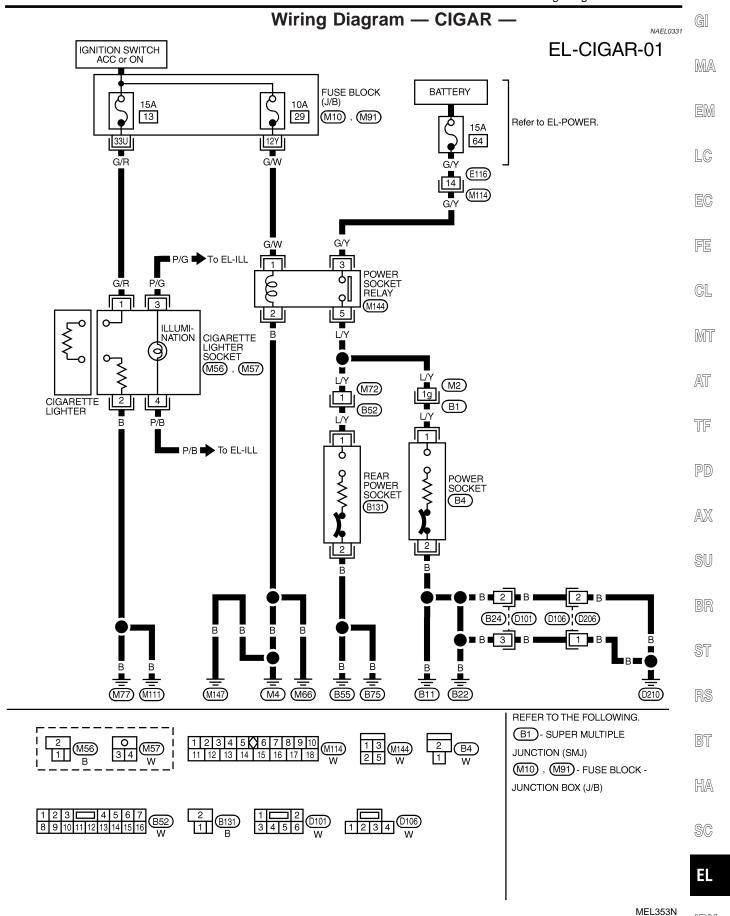

Wiring Diagram — CLOCK —

NAEL0332

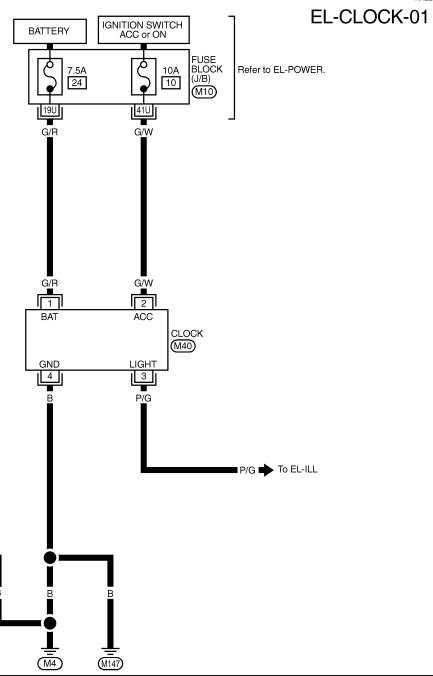



(M66)

REFER TO THE FOLLOWING.

(M10) -FUSE BLOCKJUNCTION BOX (J/B)


MEL035M

Component Parts and Harness Connector Location

Component Parts and Harness Connector Location

NAFL0333

GI

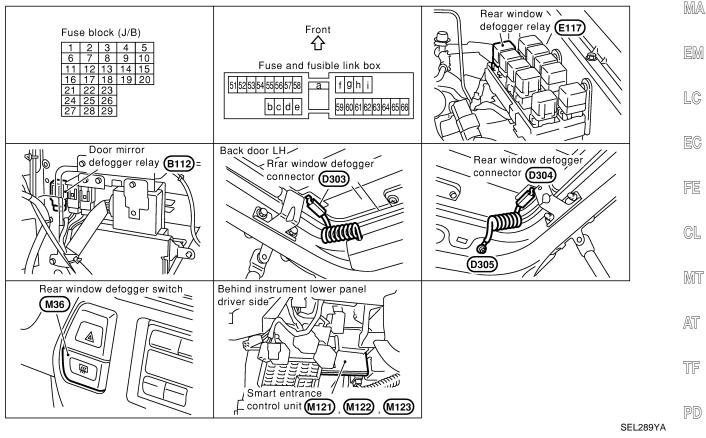

System Description

BR

The rear window defogger system is controlled by the smart entrance control unit. The rear window defogger operates only for approximately 15 minutes. Power is supplied at all times

ST

AX

SU

- to rear window defogger relay terminal 3
- through 20A fuse (No. 56, located in the fuse and fusible link box) and
- to rear window defogger relay terminal 6
- through 20A fuse (No. 57, located in the fuse and fusible link box)
- to smart entrance control unit terminal 49
- through 7.5A [No. 24, located in fuse block (J/B)]

With the ignition switch in the ON or START position, power is supplied

- through 7.5A fuse [No. 11, located in the fuse block (J/B)]
- to the rear window defogger relay terminal 1, and
- to smart entrance control unit terminal 27.

Ground is supplied

- to terminal 1 of the rear window defogger switch
- through body grounds M4, M66 and M147,
- to smart entrance control unit terminals 43 and 64
- through body grounds M77 and M111.

When the rear window defogger switch is turned ON, ground is supplied

SC

BT

HA

System Description (Cont'd)

- through terminal 2 of the rear window defogger switch
- to smart entrance control unit terminal 14.

Terminal 37 of the smart entrance control unit then supplies ground to the rear window defogger relay terminal 2

With power and ground supplied, the rear window defogger relay is energized.

Power is supplied

- through terminals 5 and 7 of the rear window defogger relay
- to the rear window defogger.

The rear window defogger has an independent ground.


With power and ground supplied, the rear window defogger filaments heat and defog the rear window. When the system is activated, the rear window defogger indicator illuminates in the rear window defogger switch.


Power is supplied

- to terminal 3 of the rear window defogger switch
- from terminal 7 of the rear window defogger relay.

Terminal 4 of the rear window defogger switch is grounded through body grounds M4, M66 and M147.

REAR WINDOW DEFOGGER

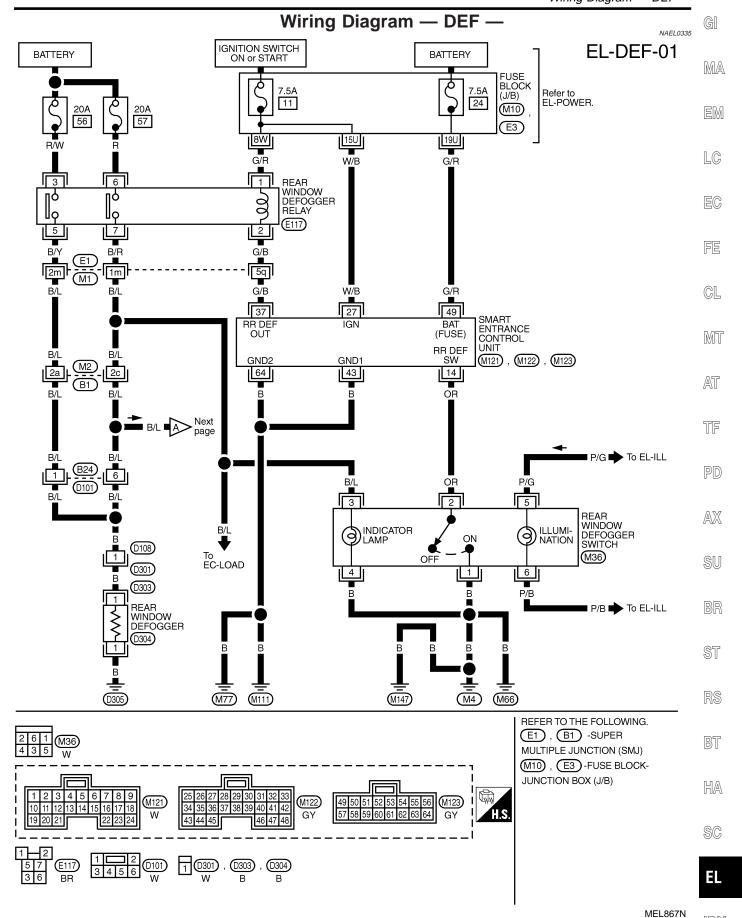


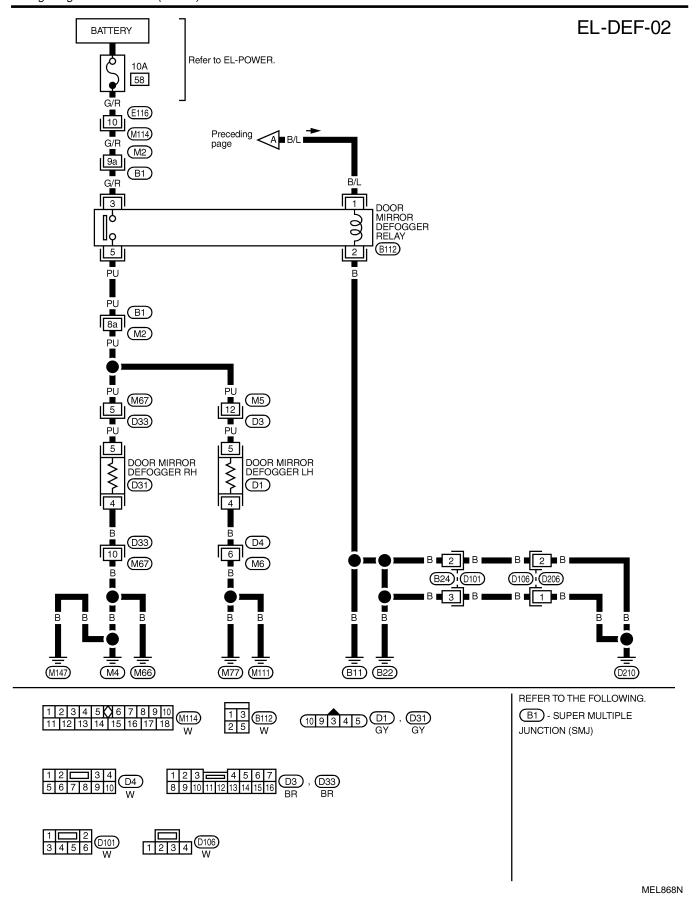

REAR WINDOW DEFOGGER

SMART C/U - NEW

CONSULT-II Inspection Procedure

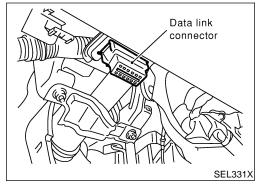

CONSULT-II Inspection Procedure "REAR DEFOGGER"

NAEL0336

NAEL0336S01

- 1. Turn ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

MA

GI

LC

EG

Turn ignition switch "ON".

Touch "START".

FE

GL

MT

AT Touch "SMART ENTRANCE".

TF

PD

 $\mathbb{A}\mathbb{X}$

SU


ST

BT

Select diagnosis mode.

HA

SC

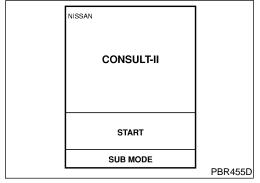

ENGINE A/T AIR BAG ABS SMART ENTRANCE

SELECT SYSTEM

SELECT TEST ITEM DOOR LOCK REAR DEFOGGER **KEY WARN ALM** LIGHT WARN ALM SEAT BELT ALM INT LAMP SEL023X

SEL941W

SELECT DIAG MODE DATA MONITOR **ACTIVE TEST** SEL322W

"DATA MONITOR" and "ACTIVE TEST" are available.

Touch "REAR DEFOGGER".

CONSULT-II Application Items

CONSULT-II Application Items

"REAR DEFOGGER" Data Monitor

NAEL0337

NAEL0337S01 NAEL0337S0101

Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
REAR DEF SW Indicates [ON/OFF] condition of rear window defogger switch.	

Active Test

NAEL0337S0102

	TW 122000 00 102
Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation. Rear window defogger activates when "ON" on CONSULT-II screen is touched.

REAR WINDOW DEFOGGER

SMART C/U - NEW

Trouble Diagnoses


Trouble Diagnoses DIAGNOSTIC PROCEDURE

NAEL0338

SYMPTOM: Rear window defogger does not activate, or does not go off after activating.

MA

GI

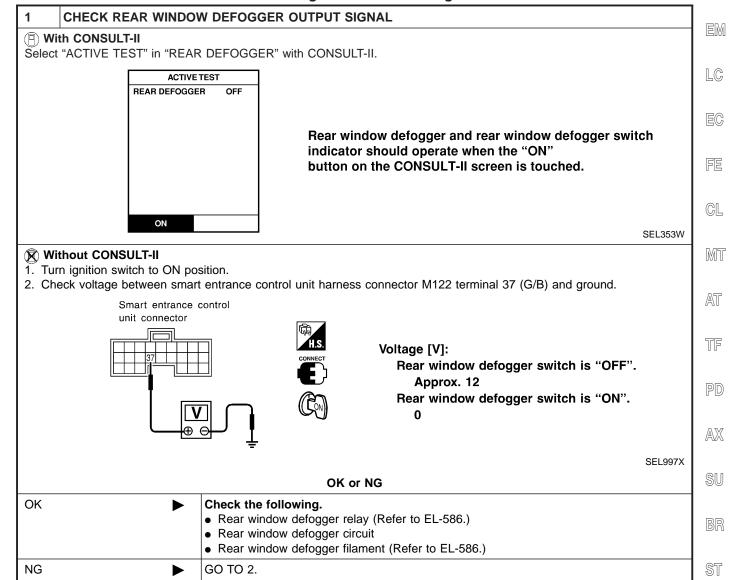

RS

BT

HA

SC

L


 $\mathbb{D}X$


CHECK DEFOGGER RELAY COIL SIDE CIRCUIT 1. Disconnect control unit connector. 2. Turn ignition switch to ON position. 3. Check voltage between smart entrance control unit harness connector M122 terminal 37 (G/B) and ground. Smart entrance control unit connector Battery voltage should exist. SEL998X OK or NG GO TO 3. OK NG Check the following. • 7.5A fuse [No. 11, located in the fuse block (J/B)] • Rear window defogger relay • Harness for open or short between fuse and rear window defogger relay • Harness for open or short between rear window defogger relay and smart entrance control unit

REAR WINDOW DEFOGGER


BT


HA

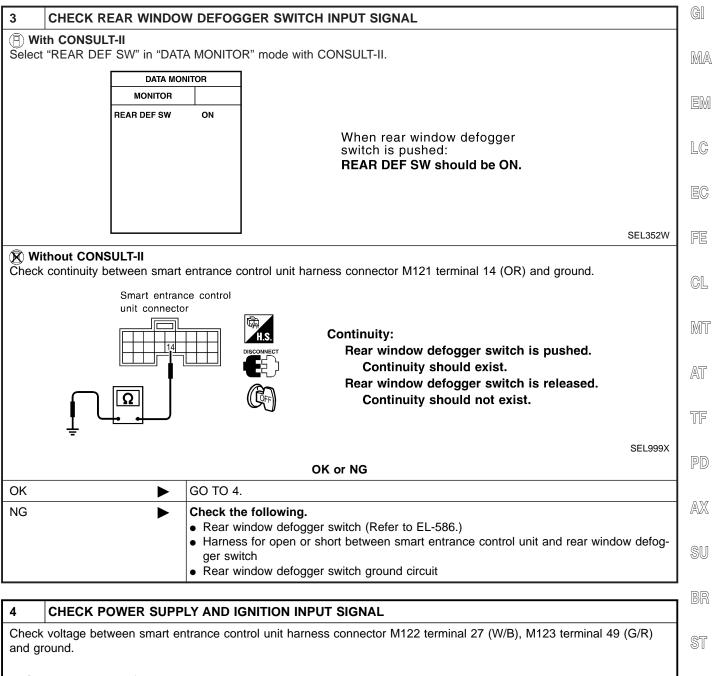

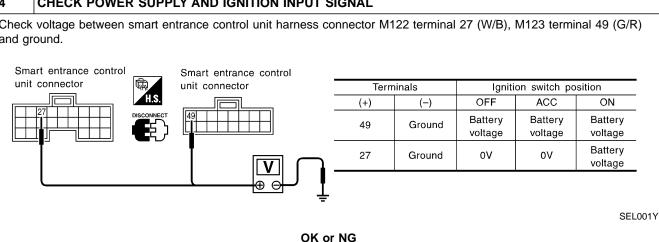

OK	•	GO TO 5.
NG	·	 Check the following. 7.5A fuse [No. 11 or No. 24, located in the fuse block (J/B)] Harness for open or short between smart entrance control unit and fuse

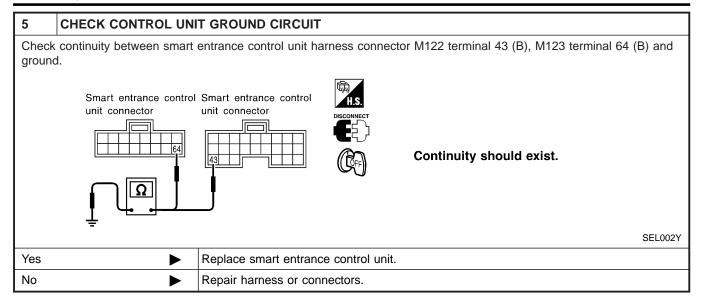

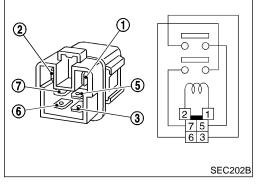


Electrical Components Inspection REAR WINDOW DEFOGGER RELAY

NAEL0339

NAEL0339S01

Check continuity between terminals 3 and 5, 6 and 7.

Condition	Continuity
12V direct current supply between terminals 1 and 2	Yes
No current supply	No

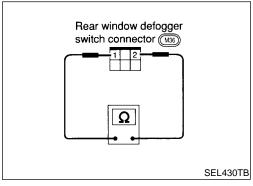


REAR WINDOW DEFOGGER SWITCH

Check continuity between terminals when rear window defogger switch is pushed and released.

Terminals	Condition	Continuity
1 - 2	Rear window defogger switch is pushed	Yes
	Rear window defogger switch is released	No


Filament Check


Attach probe circuit tester (in volt range) to middle portion of each filament.

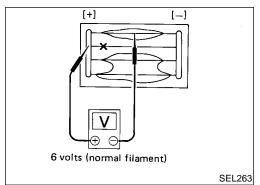


REAR WINDOW DEFOGGER

SMART C/U - NEW Filament Check (Cont'd)

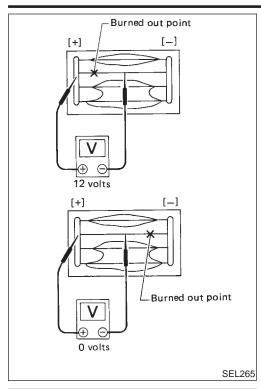

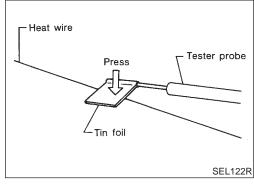

- 2. If a filament is burned out, circuit tester registers 0 or 12 volts. To locate burned out point, move probe to left and right along filament. Test needle will swing abruptly when probe passes
 - the point.

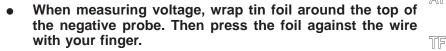



Conductive silver composition (Dupont No. 4817 or equivalent)

Ruler 30 cm (11.8 in) long

Drawing pen 3)

4) Heat gun

5) Alcohol

Cloth


REPAIRING PROCEDURE

Wipe broken heat wire and its surrounding area clean with a cloth dampened in alcohol.

2. Apply a small amount of conductive silver composition to tip of drawing pen.

Shake silver composition container before use.

Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.

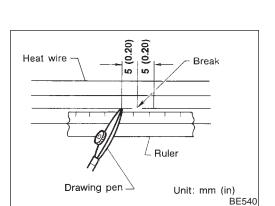



MA

EM

LC

EC

GL

MIT

PD


AX

SU

NAEL0341


SC

EL

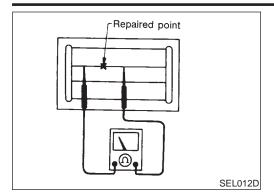

After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited.

Do not touch repaired area while test is being conducted.

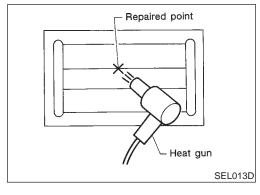

5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet. If a heat gun is not available, let the repaired area dry for 24 hours.

System Description

System Description

Refer to Owner's Manual for audio system operating instructions.

NAEL0342

NAFI 0342501

MA

LC

BASE SYSTEM Power is supplied at all times

through 15A fuse [No. 4, located in the fuse block (J/B)]

to audio unit terminal 6, and

to CD player terminal 4 (with CD player).

With the ignition switch in the ACC or ON position, power is supplied

through 10A fuse [No. 10, located in the fuse block (J/B)]

to audio unit terminal 10, and

to CD player terminal 1 (with CD player).

Ground is supplied through the case of the audio unit.

When the audio unit power knob is pushed to the ON position, audio signals are supplied

through audio unit terminals 1, 2, 3, 4, 13, 14, 15 and 16

to the front and rear speakers.

GL

MI

AT

TF

AX

NAEL0342S02

BOSE SYSTEM

Power is supplied at all times

through 15A fuse [No. 4, located in the fuse block (J/B)]

to audio unit terminal 6,

to audio amp. relay terminal 3, to rear speaker amp. terminal 11,

to CD auto changer terminal 12 (with CD auto changer) and

to AUX box terminal 7 (with rear TV).

With the ignition switch in the ACC or ON position, power is supplied

through 10A fuse [No. 10, located in the fuse block (J/B)]

to audio unit terminal 10,

to CD auto changer terminal 16 (with CD auto changer) and

to AUX box terminal 6 (with rear TV).

Ground is supplied through the case of the audio unit.

Ground is supplied

to audio amp. relay terminal 2,

through body grounds M4, M66 and M147

to front door speaker LH terminal 5 and

to front door speaker RH terminal 5

through body grounds M77 and M111

to rear speaker amp. terminal 24 and

to AUX box terminal 8 (with rear TV)

through body grounds B11, B22 and D210

to CD auto changer terminal 15 and

to rear TV switch terminal 3

through body grounds M4, M66 and M147.

When the audio unit POWER button is pressed, power is supplied to rear speaker amp. terminal 9 and audio amp. relay terminal 1 from audio unit terminal 12. Then audio amp. relay is energized and power is supplied

to front door speaker LH terminal 4 and

to front door speaker RH terminal 4.

Audio signals are supplied

through audio unit terminals 1, 2, 3, 4, 13, 14, 15 and 16


to terminals 2 and 6 of the LH and RH front speakers and terminals 5, 7, 18 and 20 of the rear speaker


to LH and RH tweeters through terminals 1 and 3 of the front speakers

to rear LH and RH speakers through terminals 1, 2, 25 and 26 of the rear speaker amp.

SC




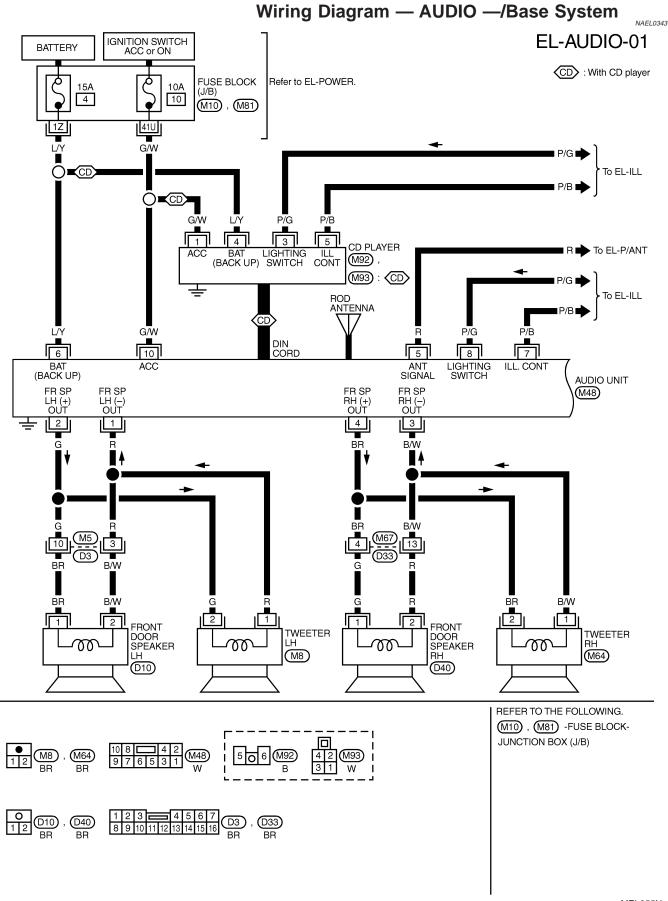

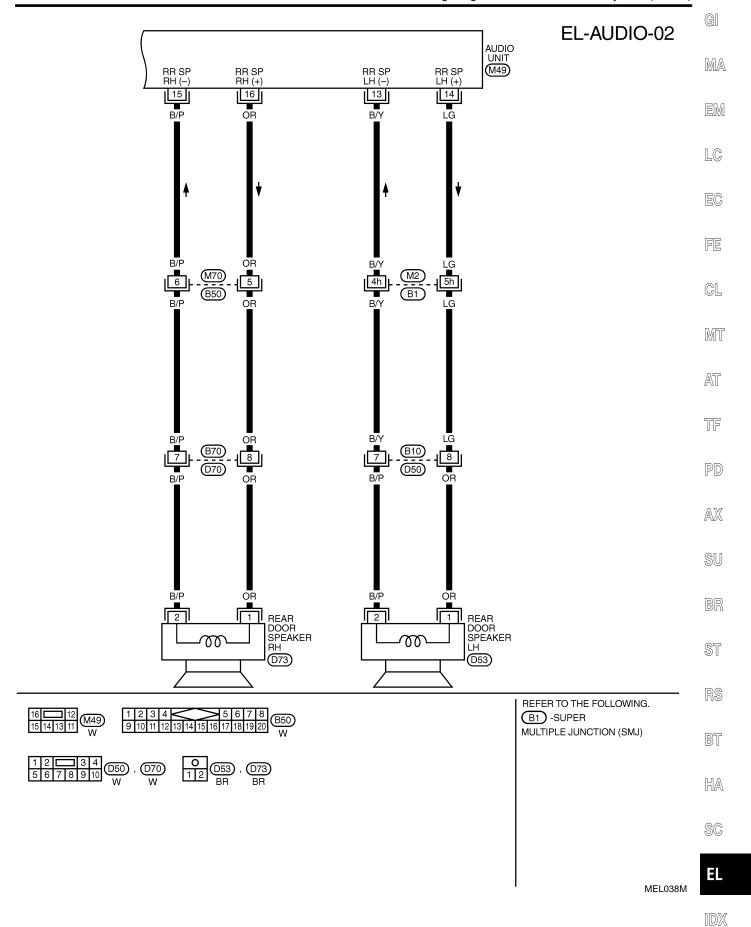


Schematic/BOSE System

NAEL0344

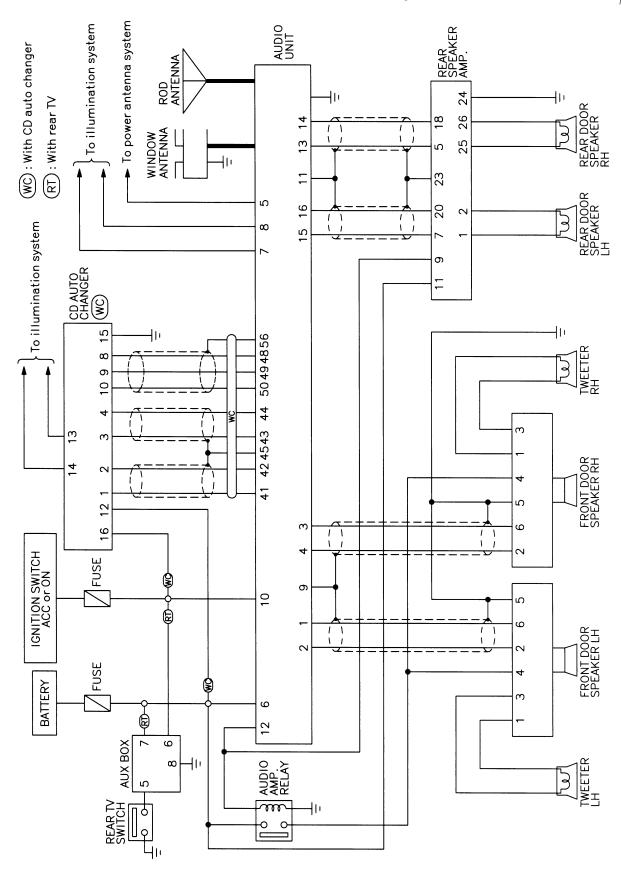



MEL356N

[DX

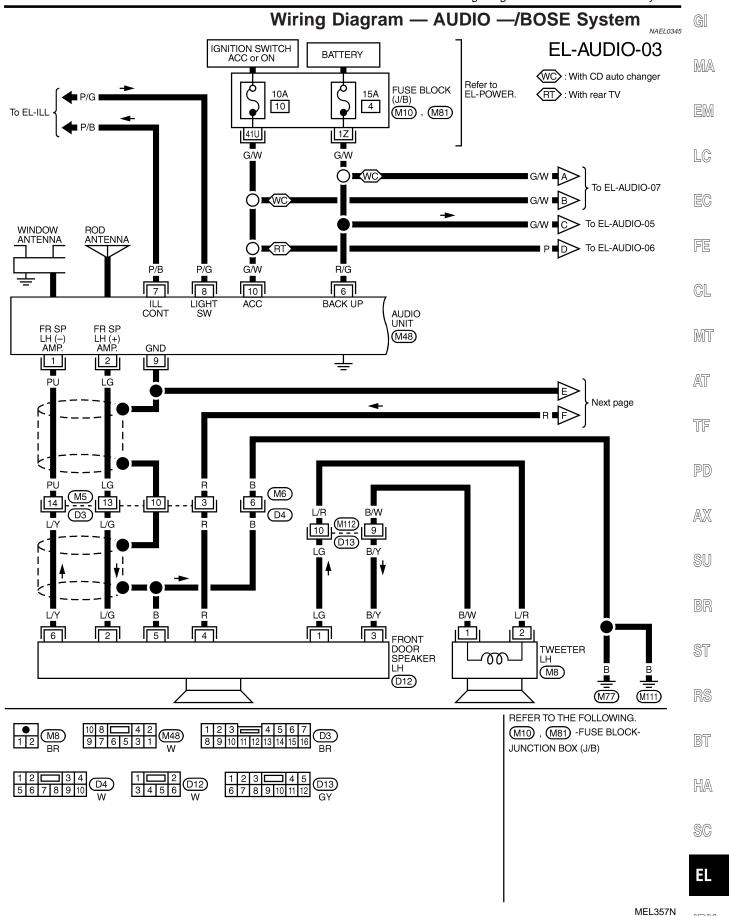




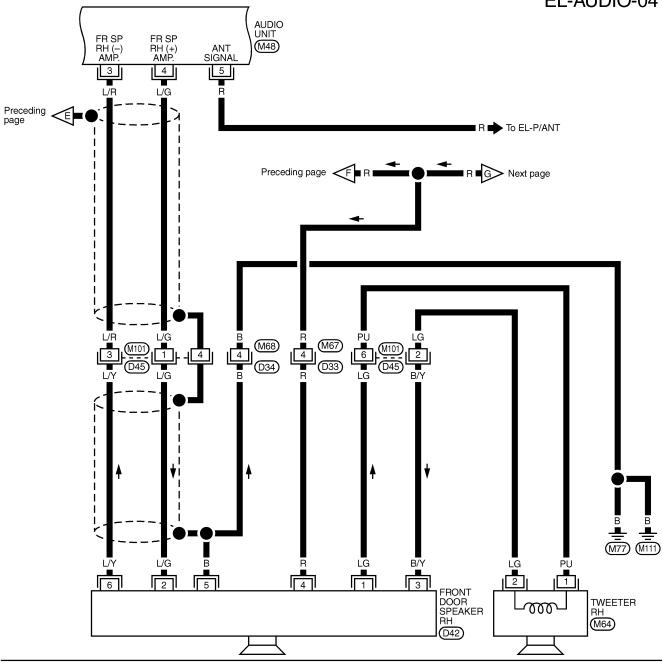


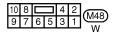





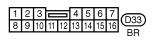



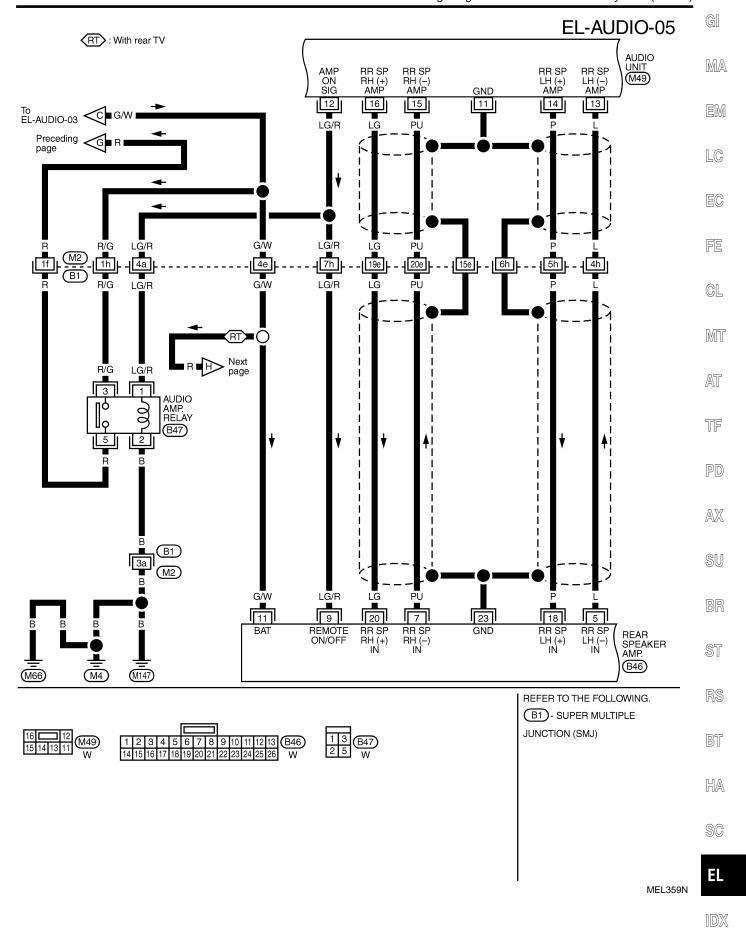

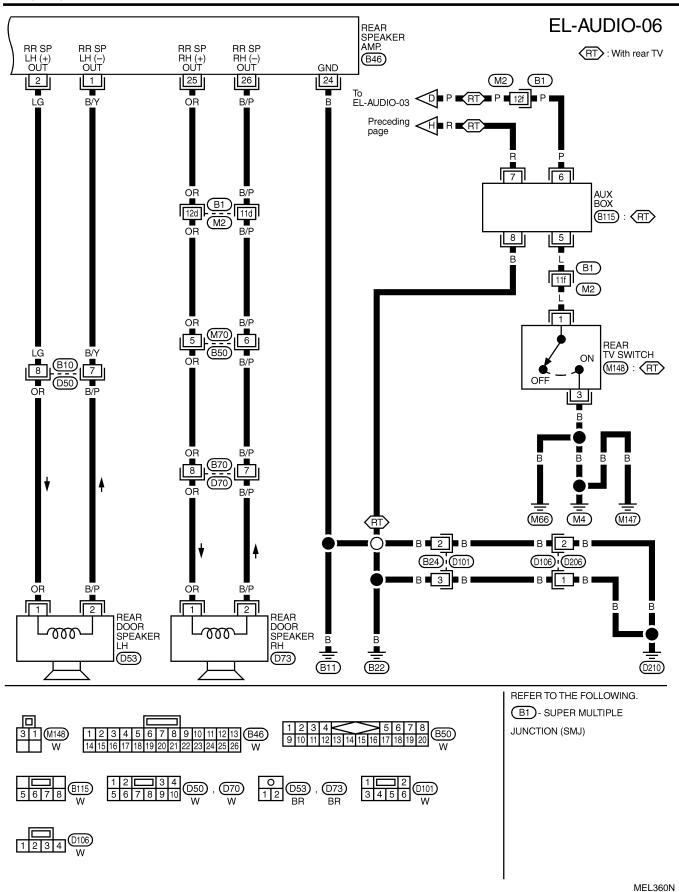

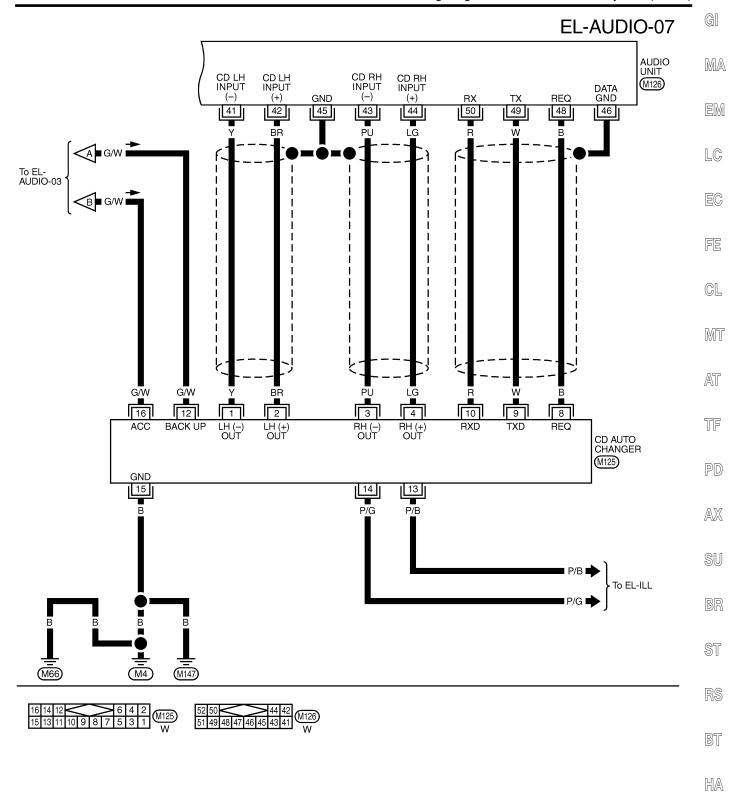

MEL044M

SC

EL

Trouble Diagnoses

AUDIO UNIT

NAEL0346

NAEL0346S01

Symptom	Possible causes	Repair order
Audio unit inoperative (no digital display and no sound from speakers).	1. 10A fuse 2. Poor audio unit case ground 3. Audio unit	 Check 10A fuse [No. 10, located in fuse block (J/B)]. Turn ignition switch ON and verify that battery positive voltage is present at terminal 10 of audio unit. Check audio unit case ground. Remove audio unit for repair.
Audio unit presets are lost when ignition switch is turned OFF.	1. 15A fuse 2. Audio unit	Check 15A fuse [No. 4, located in fuse block (J/B)] and verify that battery positive voltage is present at terminal 6 of audio unit. Remove audio unit for repair.
AM stations are weak or noisy (FM stations OK).	Antenna Poor audio unit ground Audio unit	Check antenna. Check audio unit ground. Remove audio unit for repair.
FM stations are weak or noisy (AM stations OK).	Window antenna Audio unit	Check window antenna. Remove audio unit for repair.
Audio unit generates noise in AM and FM modes with engine running.	Poor audio unit ground Loose or missing ground bonding straps Ignition condenser or rear window defogger noise suppressor condenser Alternator Ignition coil or secondary wiring Audio unit	 Check audio unit ground. Check ground bonding straps. Replace ignition condenser or rear window defogger noise suppressor condenser. Check alternator. Check ignition coil and secondary wiring. Remove audio unit for repair.
Audio unit generates noise in AM and FM modes with accessories on (switch pops and motor noise).	Poor audio unit ground Antenna Accessory ground Faulty accessory	Check audio unit ground. Check antenna. Check accessory ground. Replace accessory.

BASE SYSTEM

NAEL0346S02

Symptom	Possible causes	Repair order
Individual speaker is noisy or inoperative.	 Speaker Audio unit output Speaker circuit Audio unit 	 Check speaker. Check audio unit output voltages. Check wires for open or short between audio unit and speaker. Remove audio unit for repair.

BOSE SYSTEM

NAEL0346S03

Symptom	Possible causes	Repair order
Audio unit controls are operational, but no sound is heard from any speaker.	1. 15A fuse 2. Audio unit output 3. Audio unit	 Check 15A fuse [No. 4, located in fuse block (J/B)]. Verify battery positive voltage is present at terminal 2 of audio amp. relay. Check audio unit output voltage (Terminal 12). Remove audio unit for repair.
All front speakers are inoperative.	Audio amp. relay Audio amp. relay ground Amp. ON signal	 Check audio amp. relay. Check audio amp. relay ground (Terminal 3). Turn ignition switch ACC and audio unit ON. Verify battery positive voltage is present at terminal 1 of audio amp. relay.
Individual front speaker is noisy or inoperative.	 Speaker ground Power supply Audio unit output Speaker 	 Check speaker ground (Terminal 5). Check power supply for speaker (Terminal 4). Check audio unit output voltage for speaker. Replace speaker.

AUDIO

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

Symptom	Possible causes	Repair order	GI
Both rear speakers are inoperative.	 Poor rear speaker amp. ground Power supply Amp. ON signal Rear speaker amp. 	 Check rear speaker amp. ground circuit. Check power supply for rear speaker amp. (Terminal 11). Turn ignition switch ACC and audio unit ON. Verify 	- M#
		battery positive voltage is present at terminal 9 of rear speaker amp. 4. Remove rear speaker amp. for repair.	EW
Individual rear speaker is noisy or inoperative.	Speaker Audio unit/amp. output	Check speaker. Check audio unit/amp. output.	LG
	Speaker circuit Audio unit	3. Check wires for open or short between audio unit/ amp. and speakers.4. Remove audio unit for repair.	EC

Inspection

NAFL0347

GL

MIT

TF

AUDIO UNIT AND AMP.

NAFL0347S01

All voltage inspections are made with:

- Ignition switch ON or ACC
- Audio unit ON
- Audio unit and amps. connected (If audio unit or amp. is removed for inspection, supply a ground to the case using a jumper wire.)

NAFL0347S02

ANTENNA

- 1. Using a jumper wire, clip an auxiliary ground between antenna and body.
- If reception improves, check antenna ground (at body surface).
- If reception does not improve, check main feeder cable for short circuit or open circuit.

 Lock the CD changer unit mechanism (if so equipped) prior to removing a malfunctioning CD changer unit. Refer to "LOCKING CD CHANGER UNIT MECHANISM", EL-599.

Audio Unit Removal and Installation

Remove CD changer unit. Refer to BT-22, "INSTRUMENT PANEL ASSEMBLY".

$\mathbb{A}\mathbb{X}$

LOCKING CD CHANGER UNIT MECHANISM

CAUTION:

NAEL0348S01

- Prior to removing a malfunctioning CD changer unit that will be shipped for repair, the changer mechanism MUST BE LOCKED to prevent the mechanism from being damaged during shipping.
- If a CD is jammed or unable to be removed from the unit, do NOT lock the changer mechanism. If the unit is to be shipped for repair, carefully package the unit to prevent vibration and shock.
- 1. Eject and remove any CDs from the CD changer unit.
- 2. Turn ignition switch OFF. Wait until CD changer unit display is off and mechanism stops moving (mechanism sound stops).
- 3. Press any one of the disc selection buttons once. When a display shows on the CD changer unit, press the same disc selection button again within 5 seconds.
- The changer mechanism will lock itself within 10 seconds.
- 4. After mechanism stops moving (mechanism sound stops), disconnect the CD changer unit connectors.

NOTE:


After installing a new or remanufactured CD changer unit, switching the CD changer unit ON will automatically unlock the mechanism. A special unlocking procedure is not required.

HA

SC

EL

 $\mathbb{D}\mathbb{X}$

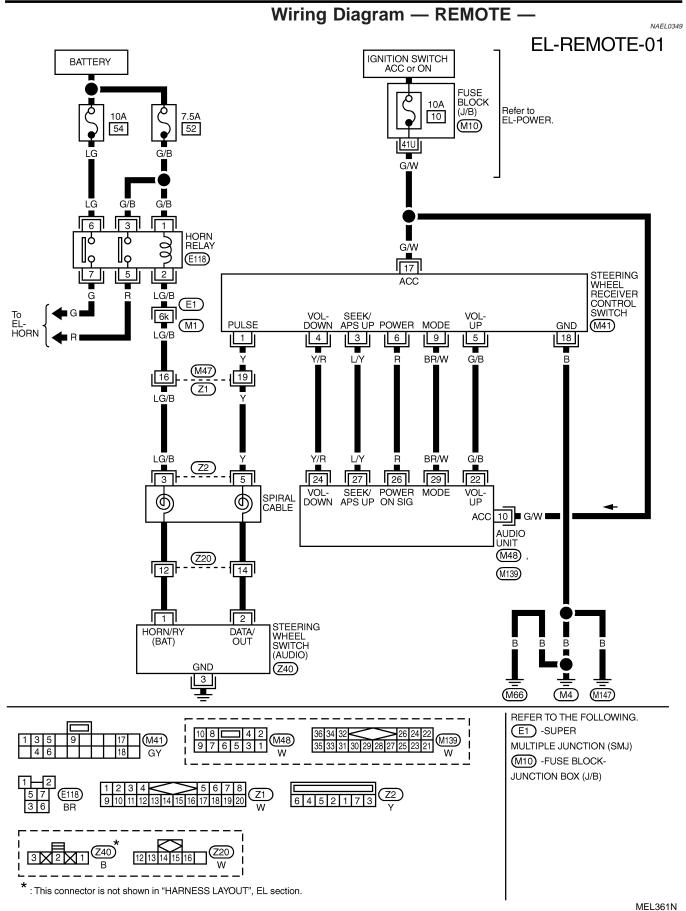

AUDIO ANTENNA

SMART C/U - NEW

System Description

System Description

NAEL0350

Power is supplied at all times

- through 7.5A fuse [No. 24, located in the fuse block (J/B)]
- to power antenna terminal 6.

Ground is supplied to the power antenna terminal 2 through body grounds M4, M66 and M147. When the audio unit is turned to the ON position, battery positive voltage is supplied

- through audio unit terminal 5
- to power antenna terminal 4.

The antenna raises and is held in the extended position.

When the audio unit is turned to the OFF position, battery positive voltage is interrupted

- from audio unit terminal 5
- to power antenna terminal 4.

The antenna retracts.

LC

MA

FE

EG

GL

MT

AT

TF

AX

PD

SU

BR

ST

RS

BT

HA


SC

EL

 \mathbb{M}

Wiring Diagram — P/ANT —

NAEL0351

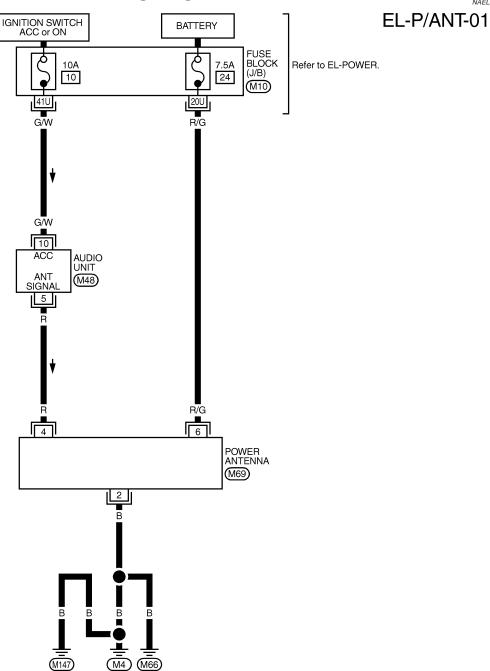





REFER TO THE FOLLOWING.

M10 - FUSE BLOCK
JUNCTION BOX (J/B)

MEL824L

Trouble Diagnoses

Trouble Diagnoses

NAEL0352

G[

MA

NAEL0352S01

POWER ANTENNA		
Symptom	Possible causes	Repair order

1. 7.5A fuse

Main feeder cable

View with inner fender protector removed

Main feeder cable and

power antenna harness

Loosen

Antenna nut

2. Audio unit signal

3. Grounds M4, M66 and M147

Power antenna does not

operate.

Check 7.5A fuse [No. 24, located in fuse block (J/B)]. Verify that battery positive voltage is present at terminal 6 of power antenna.

2. Turn ignition switch and audio unit ON. Verify that battery positive voltage is present at terminal 4 of LC power antenna.

3. Check grounds M4, M66 and M147.

Antenna terminal

View with glove box and

instrument lower cover removed

Location of Antenna

Windshield printed antenna

EC NAEL0353


































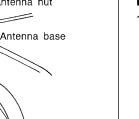

MEL036G

Front

Antenna Rod Replacement REMOVAL

Power antenna motor

connector (M69)

Remove antenna nut and antenna base.

Feeder cable jack


NAEL0354

YEL067K


NAEL0354S01

SC

EL-603

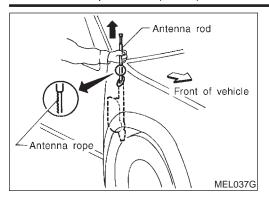

Withdraw antenna rod while raising it by operating antenna motor.

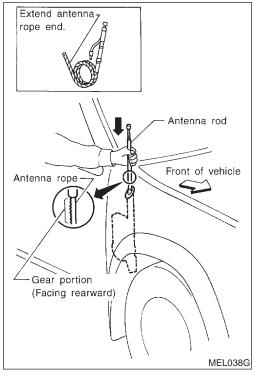

INSTALLATION

NAEL0354S02

- 1. Lower antenna rod by operating antenna motor.
- 2. Insert gear section of antenna rope into place with it facing toward antenna motor.
- 3. As soon as antenna rope is wound on antenna motor, stop antenna motor. Insert antenna rod lower end into antenna motor pipe.
- 4. Retract antenna rod completely by operating antenna motor.
- 5. Install antenna nut and base.

POWER SUNROOF

SMART C/U - NEW

System Description

System Description

NAEL0355

NAFL 0355S01

Electric sunroof system consists of

Sunroof switch

Sunroof motor

OUTLINE

- Power window relay
- Smart entrance control unit

Smart entrance control unit controls retained power operation.

LC

MA

OPERATION

The sunroof can be opened or closed and tilted up or down with the sunroof switch.

NAEL0355S02

AUTO OPERATION

The power sunroof AUTO feature makes it possible to open and close the sunroof without holding the sunroof switch in the down or up position.

GL

MIT

AT

RETAINED POWER OPERATION

When the ignition switch is turned to OFF position from ON or START position, power is supplied for 45 seconds

- to power window relay terminal 2
- from smart entrance control unit terminal 46.

Ground is always supplied

- to power window relay terminal 1
- through body grounds.

When power and ground are supplied, power window relay continues to be energized, and the electrical sunroof can be operated.

The retained power operation is canceled when the driver or passenger side door is opened.

PD

AX

SU

INTERRUPTION DETECTION FUNCTION

The CPU of sunroof motor monitors the sunroof motor operation and the sunroof position (full closed or other) for sunroof by the signals from encoder and limit switch in sunroof motor.

When sunroof motor detects interruption during the following close operation,


- automatic close operation when ignition switch is in the "ON" position
- automatic close operation during retained power operation


sunroof switch controls the motor for open and the sunroof will operate about 150 mm (5.91 in).


BT

HA

SC

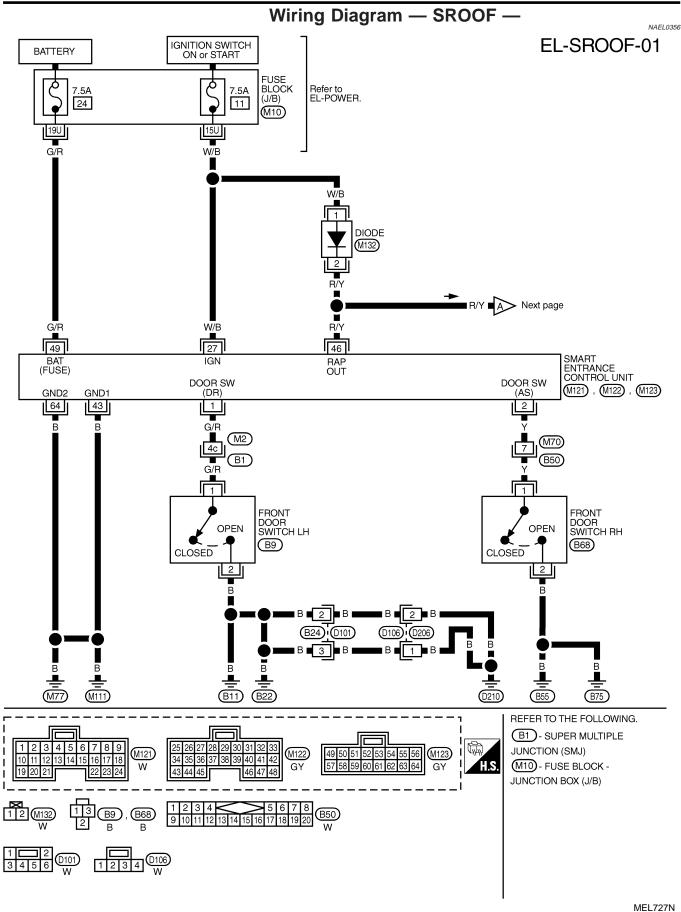

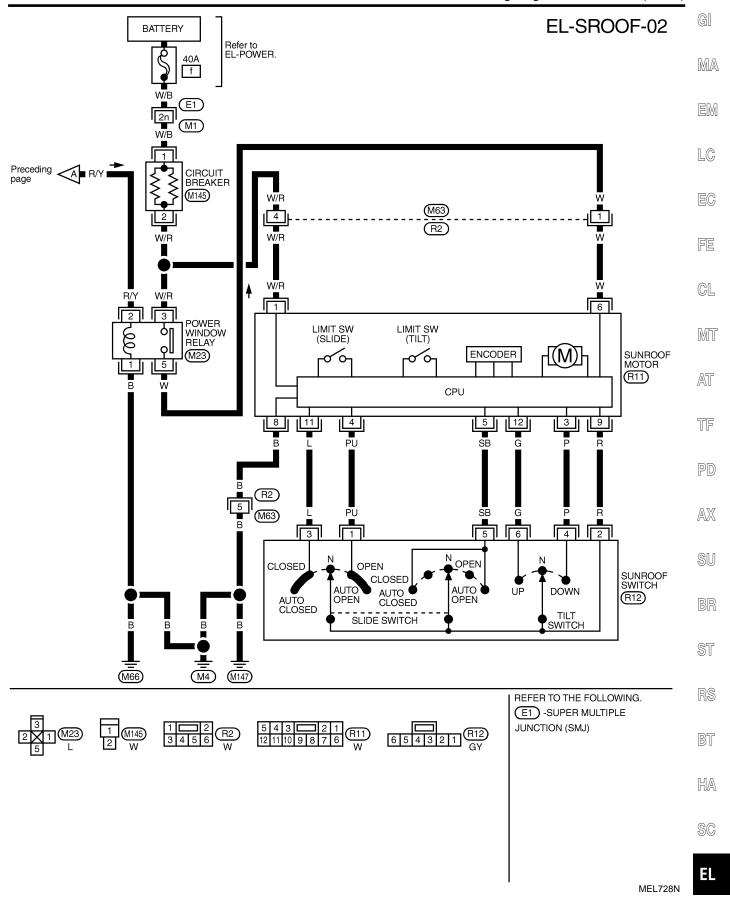

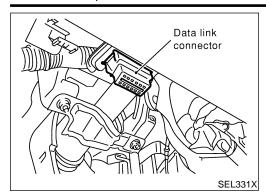


CONSULT-II Inspection Procedure "RETAINED PWR"

=NAEL0357

NAEL0357S01

- 1. Turn ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

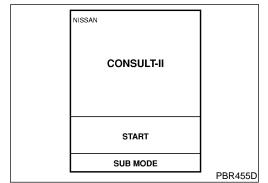


- 3. Turn ignition switch "ON".
- 4. Touch "START".

SELECT SYSTEM	
ENGINE	
A/T	
AIR BAG	
ABS	
SMART ENTRANCE	
	SEL941W

5. Touch "SMART ENTRANCE".

SELECT TEST ITEM	
BATTERY SAVER	
THEFT WAR ALM	
RETAINED PWR	
MULTI REMOTE ENT	
	SEL273W

6. Touch "RETAINED PWR".

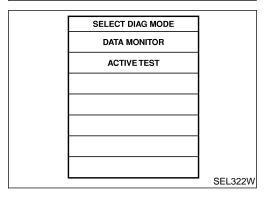


7. Select diagnosis mode. "DATA MONITOR" and "ACTIVE TEST" are available.


	CONSULT-II A	Application Items	
'RETAINED PWR"		NAEL0358 NAEL0358S01	
Data Monitor		NAEL0358S0101	
Monitored Item	Description		
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.		
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.		
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.		
Active Test			
Test Item	Description NAEL03588010		
RETAINED PWR	This test is able to supply RAP signal (power) from smart entrance control unit to power window system, power sunroof system. Those systems can be operated when turning on "RETAINED PWR" on CONSULT-II screen even if the ignition switch is tuned OFF. NOTE: During this test, CONSULT-II can be operated with ignition switch "OFF" position. "RETAINED PWR" should be turned "ON" or "OFF" on CONSULT-II screen when ignition switch is ON. Then turn ignition switch OFF for checking retained power operation. CONSULT-II might be stuck if "RETAINED PWR" is turned "ON" or "OFF" on CONSULT-II screen when ignition switch is OFF.		
	Trouble Diag	noses	
Symptom	Possible cause	Repair order	
using any switch.	 7.5A fuse, 40A fusible link and M145 circuit breaker Power window relay ground circuit Sunroof motor ground circuit Power window relay Sunroof motor circuit Sunroof switch Sunroof switch circuit Sunroof motor 	 Check 7.5A fuse [No. 11, located in fuse block (J/B)], 40A fusible link (letter f, located in fuse and fusible link box) and M145 circuit breaker. Turn ignition switch "ON" and verify battery positive voltage is present at terminals 2 and 3 of power window relay and terminal 1 of sunroof motor. Check power window relay ground circuit. Check sunroof motor ground circuit. Check power window relay. Check the wire between power window relay and sunroof motor. Check sunroof switch. Check harness between sunroof switch and sunroof motor. Check sunroof motor. 	
•	Sunroof switch Sunroof switch circuit	Check sunroof switch. Check the harness between sunroof motor and sunroof switch.	
be operated properly.	Sunroof slide mechanism Sunroof switch Sunroof switch circuit Sunroof motor	 Check the following. Check obstacles in sunroof, etc. Check worn or deformed sunroof. Check sunroof sash tilted too far inward or outward. Check sunroof switch. Check harness between sunroof motor and sunroof switch. Replace sunroof motor. 	
Retained power operation does not operate properly.	Driver or passenger side door switch circuit	Check the following. Harness between smart entrance control unit and	

driver or passenger side door switch for short circuit.
b. Driver or passenger side door switch ground circuit.

c. Driver or passenger side door switch.2. Check smart entrance control unit. (EL-778)

2. Smart entrance control unit

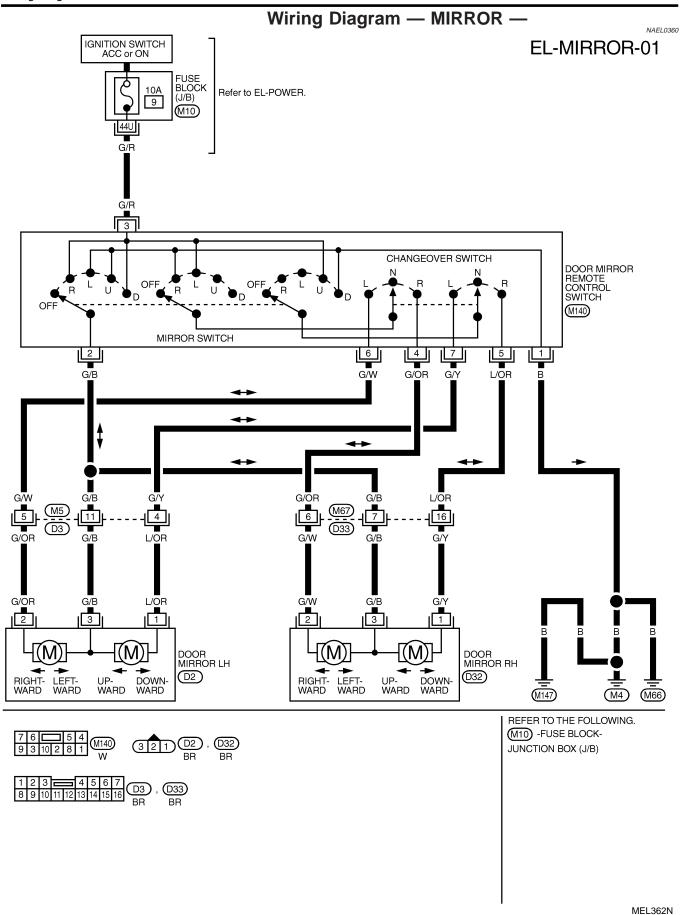


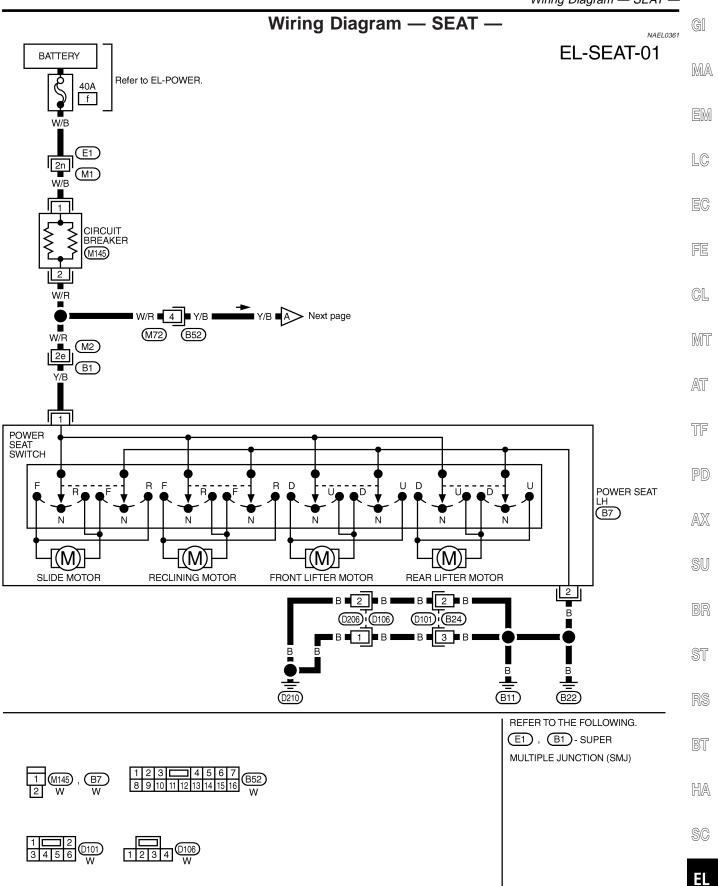


EL-611

MEL830L


EL-SEAT-02

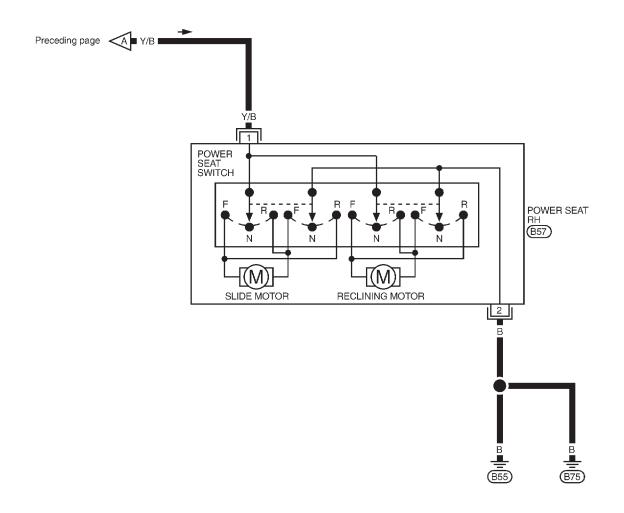



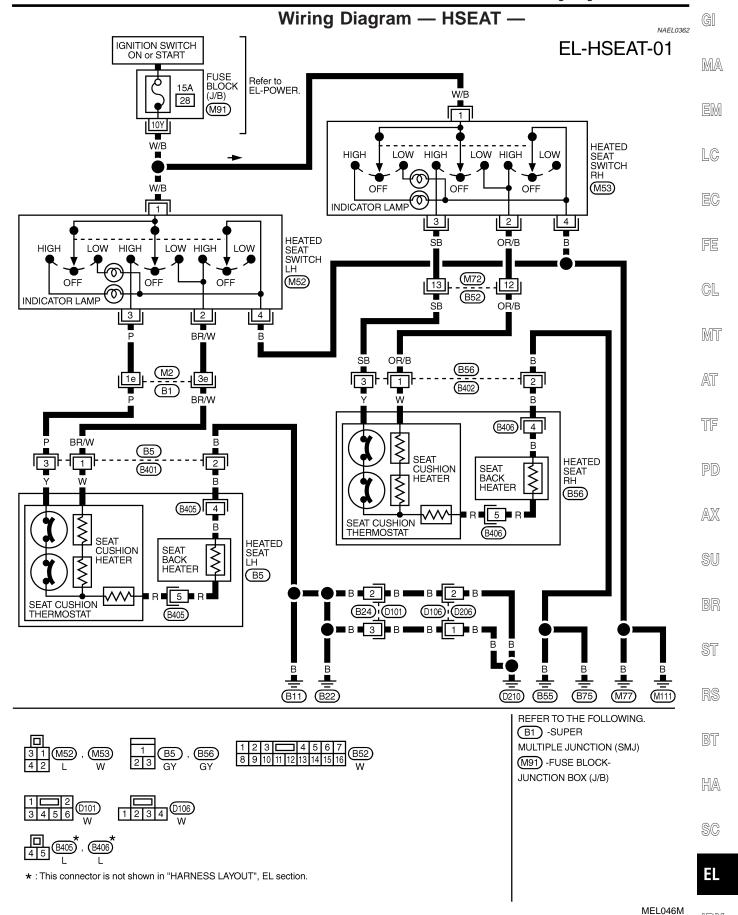

Seatback Heating Unit

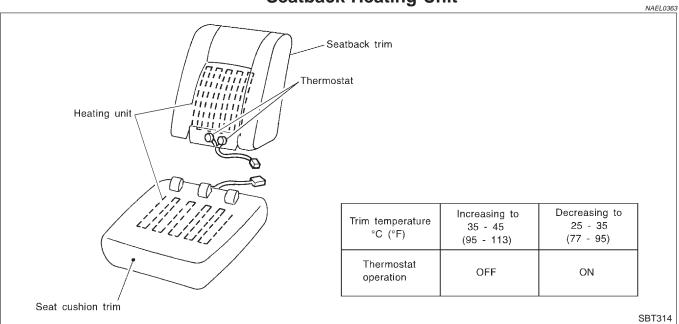

SMART C/U - NEW

Component Parts and Harness Connector Location

Component Parts and Harness Connector Location

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST


RS

BT

HA

SC

SEL190Y

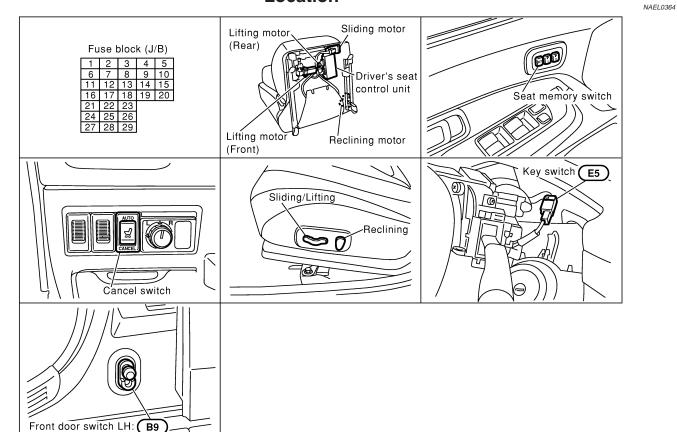

System Description

OPERATIVE CONDITION

=NAEL0365

NAEL0365S01

The drive position can be set in 2 ways, manually and automatically.

Manual Operation

NAFL0365S0101

The driver's seat can be adjusted for sliding, reclining, front cushion height and rear cushion height with the LH power seat switches. The manual operation can be adjusted with the IGN key in any position.

Automatic Operation

IAEL0365S0102

The driver's seat is adjusted to the proper positions for the driver automatically, in 3 different ways: MEMORY AUTOMATIC SET, AUTOMATIC EXITING SETTING and AUTOMATIC SET RETURN. (Automatic Drive Positioner = ADP)

CONDITIONS INHIBITING AUTOMATIC OPERATION

NAEL0365S02

Automatic memory setting procedures are suspended under any of the following conditions:

- 1) When vehicle speed is more than 7 km/h (4 MPH).
- 2) When driver's side power seat switch is turned on.
- 3) When any two of the switches (set switch and memory switches 1 and 2) are turned ON.
- 4) When cancel switch is turned on.
- 5) When selector lever is in any position other than "P".
- 6) When ignition switch is turned to "START" position. (Operation resumes when ignition switch is returned to "ON".)
- 7) When detention switch malfunction is detected:
- Detention switch failure is sensed when detention switch remains off for at least 2 seconds at a vehicle speed of greater than 7 km/h (4 MPH).

FAIL-SAFE SYSTEM

NAEL0365S03

Output Failure

When the ignition switch is in the ON position, if any of the parts (indicated in the following chart) move more than the specified amount within a period "T2" when no "ON" input is sent from any of the switches (indicated in the following chart), or an output from the automatic drive positioner is not produced, an output failure is sensed. Motor operation will be suspended automatically, and all automatic operations will be ineffective. (In this case, the motor will not operate manually.)

OPERATED PORTION	T2	Allowable measurement
Seat sliding	Approx. 2.5 sec.	Within 6 mm (0.24 in)
Seat reclining	Same as above	Change angle within 1°

Absolving

NAEL0365S030

When moving selector lever back to "P" position after having moved it to any position except "P", fail-safe operation will be canceled.

INITIALIZATION

NAEL0365S04

After reconnecting battery cable, perform initialization procedure A or B. If initialization has not been performed, automatic drive positioner will not operate.

PROCEDURE A

- Insert key in the ignition key cylinder. (Ignition switch is in "OFF" position.)
- 2) Open \rightarrow close \rightarrow open driver side door. (Do not perform with the door switch operation.)
- 3) End

PROCEDURE B

- 1) Drive the vehicle at more than 25 km/h (16 MPH).
- 2) End

SMART C/U - NEW
System Description (Cont'd)

MEMORY AUTOMATIC SET

NEI 0365905

Two drive positions can be retained in the memory. Press memory switch to set driver's seat to preset position.

MA

GL


MI

TF

AX

GI

PROCEDURE FOR STORING MEMORY

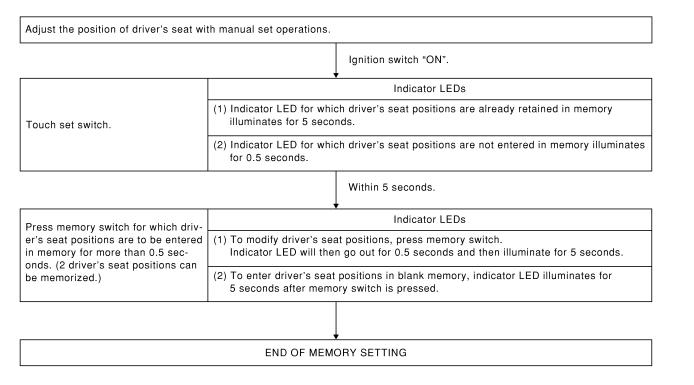


SEL592W

NOTE:

- When memory switch for which driver's seat positions are already retained in memory is pressed, new seat
 positions will be retained in memory in place of the previously set positions.
- Drive position is erased from the memory when battery cable is disconnected more than 30 seconds. After connecting battery cable, perform initialization procedures.

SELECTING THE MEMORIZED POSITION

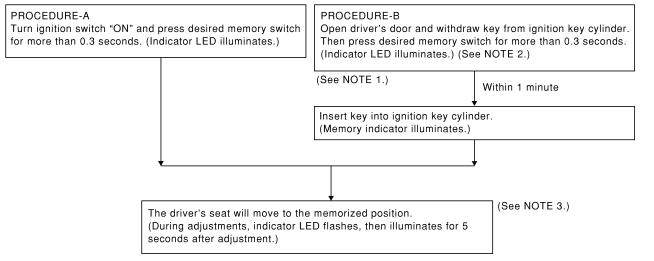

SEL593W

HA

System Description (Cont'd)

NOTE:

- 1) Do not keep cancel switch pressed as it will not operate.
- 2) Automatic exiting setting will be performed.
- 3) The driver's seat position (see the following Table) operates in the order of priority.


The order of priority	Operated portion
1	Seat sliding
2	Seat reclining
3	Seat front lifting
4	Seat rear lifting

AUTOMATIC EXITING SETTING

NAEL0365S06

"Exiting" positions:

Driver's seat ... Slides about 40 mm (1.57 in) rear from normal sitting position.

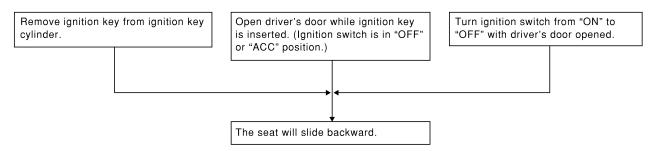



SEL594W


AUTOMATIC SET RETURN


NAFL0365S07


With driver's seat set to the "exiting" position, operating one of the following procedures moves it to the position previously retained in memory.

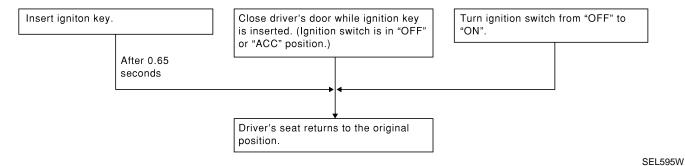


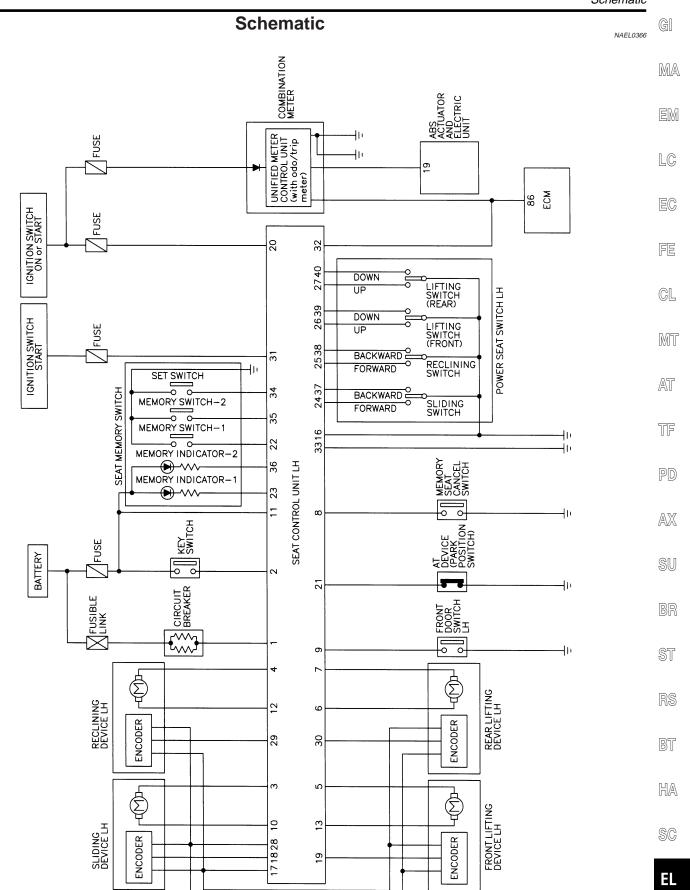

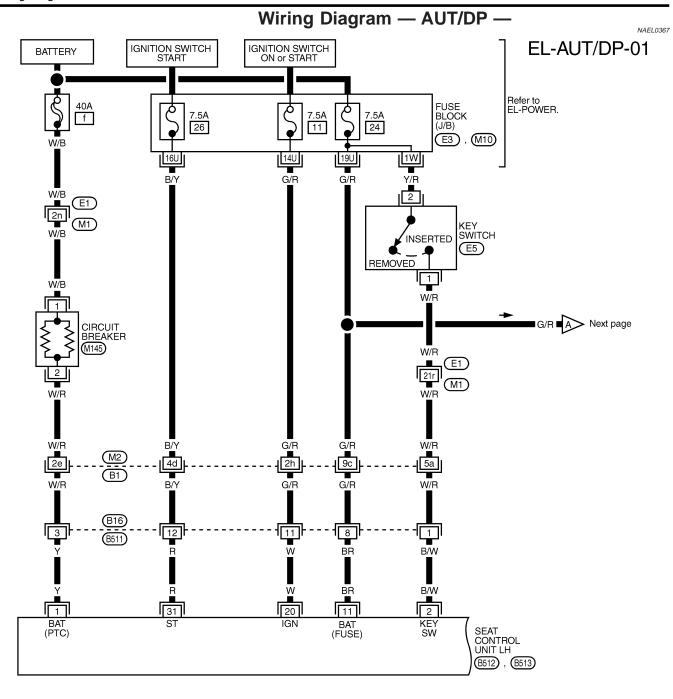

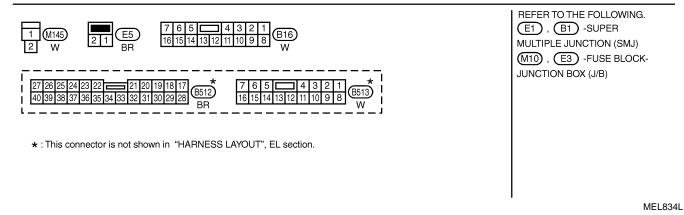

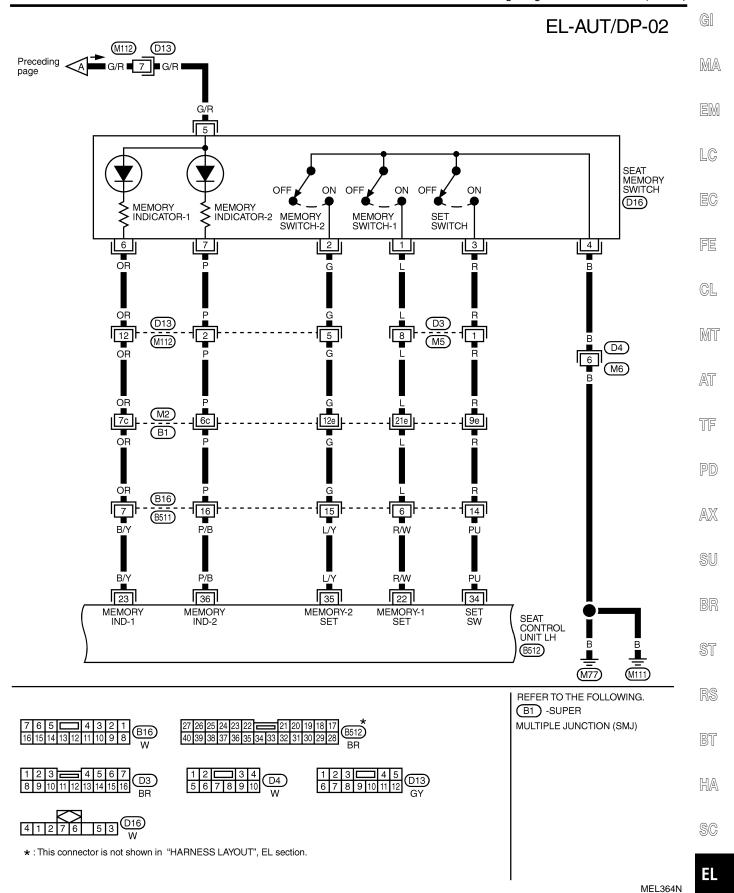


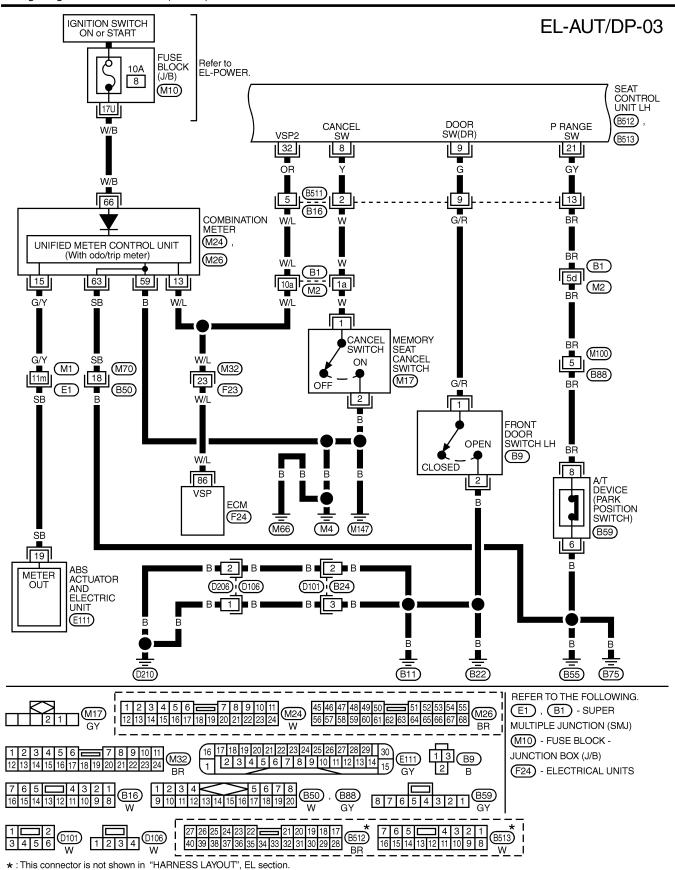


MEL365N

G[

EL-AUT/DP-04

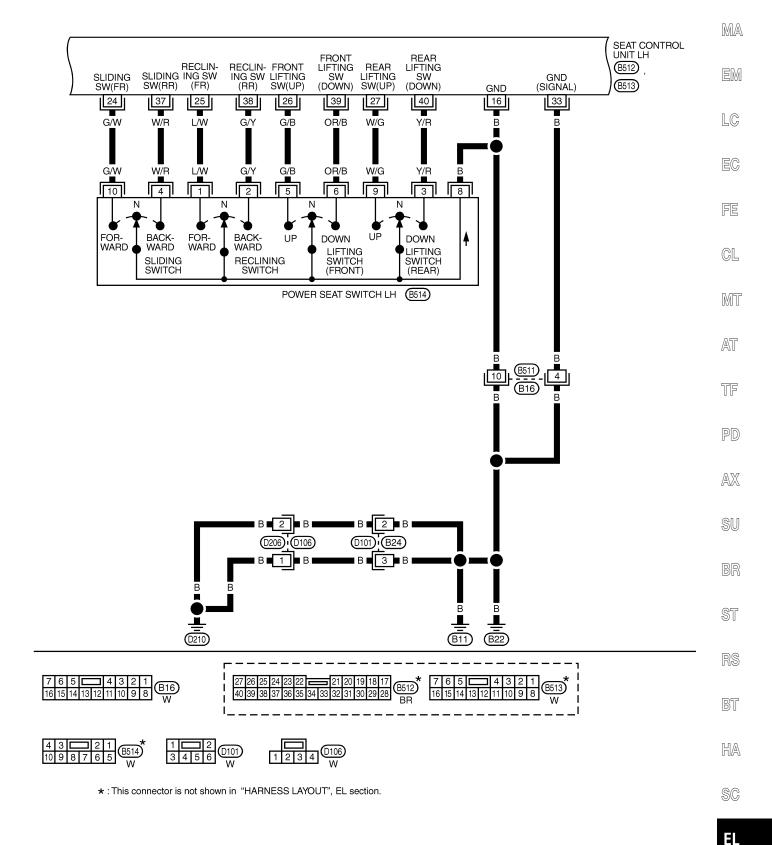

MEL186M

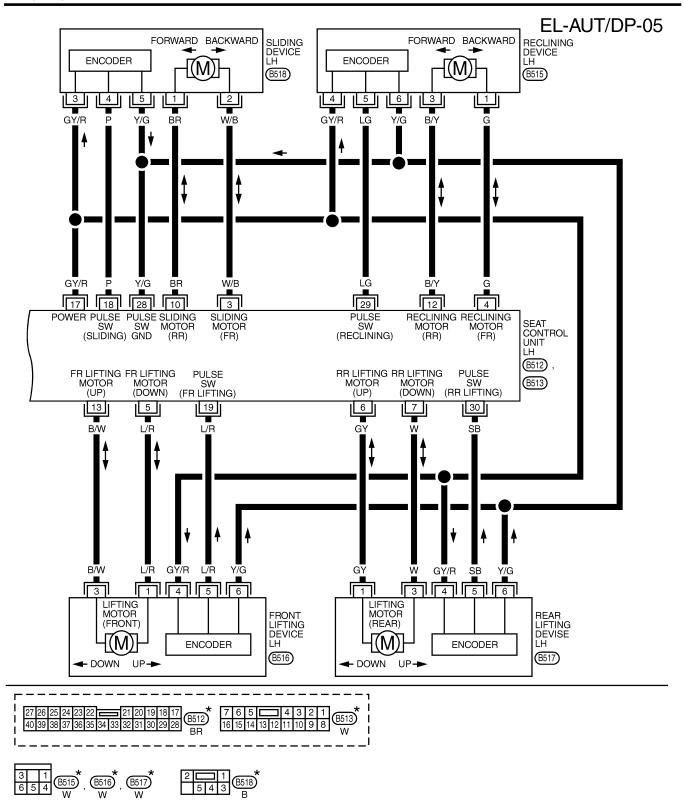

 \star : This connector is not shown in "HARNESS LAYOUT", EL section.

SMART C/U - NEW

On Board Diagnosis

On Board Diagnosis

NAEL0368

MA

EM

LC

GL

MT

AT

TF

AX

SU


BR

BT

HA


SC

EL

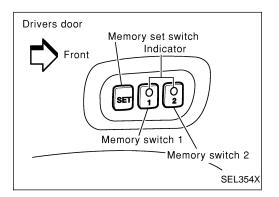

HOW TO PERFORM SELF-DIAGNOSIS

NAEL0368S01

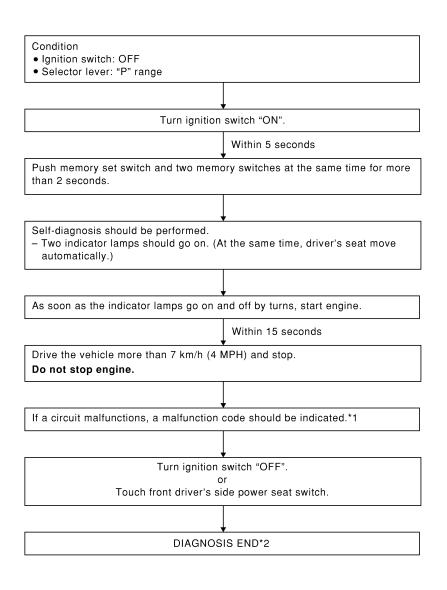

SEL596W


^{*1:} If no malfunction is indicated, self-diagnosis will end after the vehicle speed sensor diagnosis is performed.

^{*2:} Diagnosis ends after self-diagnostic results have been indicated for 10 minutes if left unattended.

MALFUNCTION CODE TABLE

NA EL 0000000

In this mode, a malfunction code is indicated by the number of flashes from the automatic drive positioner indicator lamps (indicator lamp 1, indicator lamp 2) as shown below.

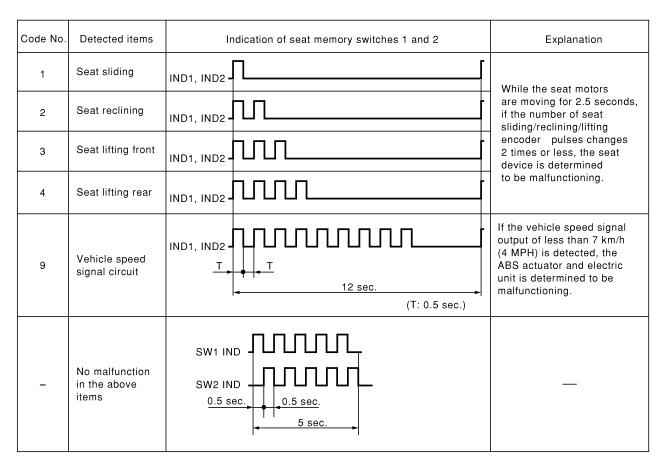

SEL597WA

Code No.	Detected items	Diagnostic procedure	Refer- ence page	Code No.	Detected items	Diagnostic procedure	Refer- ence page
1	Seat sliding	PROCEDURE 2 (Sliding encoder check) PROCEDURE 6 (Sliding motor check)	EL-632 EL-640	4	Seat lifting rear	PROCEDURE 5 [Lifting encoder (rear) check] PROCEDURE 9 [Lifting motor (rear) check]	EL-638 EL-643
2	Seat reclining	PROCEDURE 3 (Reclining encoder check) PROCEDURE 7 (Reclining motor check)	EL-634 EL-641	9	Vehicle speed sensor	PROCEDURE 12 (Vehicle speed sensor check)	EL-646
3	Seat lifting front	PROCEDURE 4 [Lifting encoder (front) check] PROCEDURE 8 [Lifting motor (front) check]	EL-636 EL-642				


Trouble Diagnoses

Trouble Diagnoses WORK FLOW

NAEL0369

NAEL0369S01 MA

G[

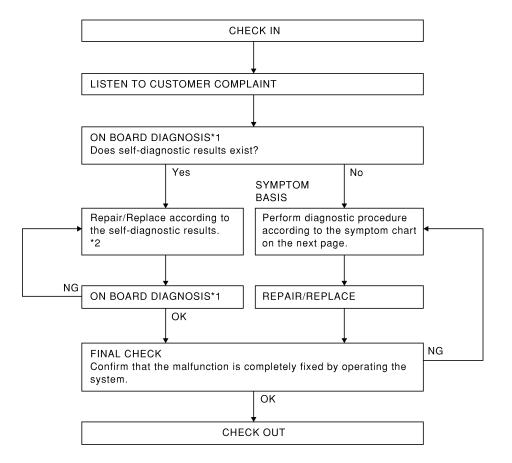

LC

EM

EC

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

SEL599W


BT

HA

SC

*2 EL-626

EL-625

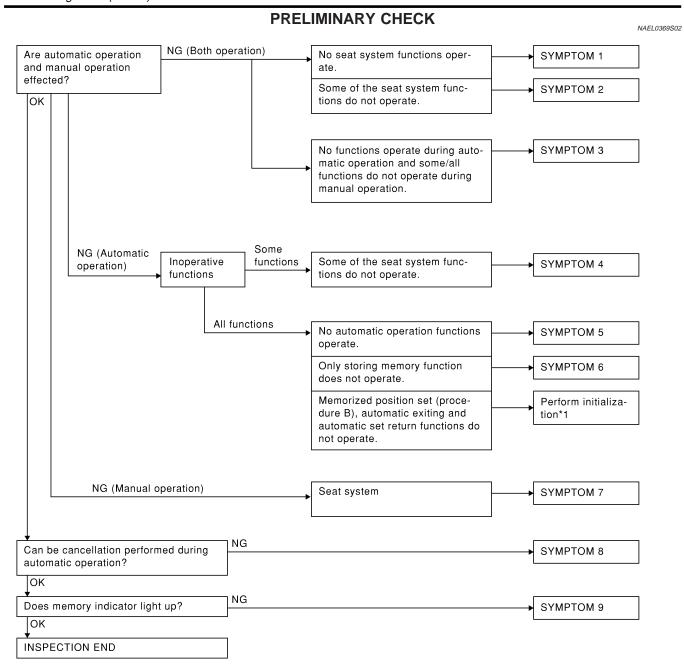

SEL600W

*1: After reconnecting battery cable, perform initialization procedure A or B.

If initialization has not been performed, automatic drive positioner will not operate.

PROCEDURE A

- 1) Insert key in the ignition key cylinder. (Ignition switch is in "OFF" position.)
- 2) Open \rightarrow close \rightarrow open driver side door. (Do not perform with the door switch operation.)
- 3) End

PROCEDURE B

1) Drive the vehicle at more than 30 km/h (19 MPH).

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

2) End

After performing preliminary check, go to symptom chart below.

MA

G[

Before starting trouble diagnoses below, perform preliminary check, EL-628. Symptom numbers in the symptom chart correspond with those of preliminary check.

EM

SYMPTOM CHART

			5 Y IV	PIOM	CHARI				NAEL0369S03
PROCEDURE Diagnostic procedure									
REFERENCE PAGE (EL-)			631	632	634	636	638	640	641
SYMPTOM		DIAGNOSTIC PROCEDURE 1 (Power supply and ground circuit for Driver's seat control unit)	DIAGNOSTIC PROCEDURE 2 (Sliding encoder check)	DIAGNOSTIC PROCEDURE 3 (Reclining encoder check)	DIAGNOSTIC PROCEDURE 4 [Lifting encoder (front) check]	DIAGNOSTIC PROCEDURE 5 [Lifting encoder (rear) check]	DIAGNOSTIC PROCEDURE 6 (Sliding motor check)	DIAGNOSTIC PROCEDURE 7 (Reclining motor check)	
1	No seat system fu	nctions operate.	Х						
I	Some of the seat	Sliding						Х	
2	system functions do not operate during automatic/ manual opera-	Reclining							X
		Lifting (Front)							
	tion.	Lifting (Rear)							
3	No functions opera matic operation, ar- tions do not during tion.	nd some/all func-							
	Some of the seat	Sliding		Х					
	system functions do not operate	Reclining			Х				
	during automatic	Lifting (Front)				Х			
	operation.	Lifting (Rear)					Х		
2 1	No automatic oper operate.	ration functions							
n I	Drive position can in the memory.	not be retained							
	Does not operate	Sliding							
	during manual operation. (Oper-	Reclining							
	ates during auto-	Lifting (Front)							
	matic operation.)	Lifting (Rear)							
× 1	Automatic operation canceled.	on cannot be							
9	Memory indicator	does not light up.							


X : Applicable

PROC	EDURE				Dia	agnostic prod	cedure		
REFERENCE PAGE (EL-)			642	643	644	645	646	649	649
SYMPTOM		DIAGNOSTIC PROCEDURE 8 [Lifting motor (front) check]	DIAGNOSTIC PROCEDURE 9 [Lifting motor (rear) check]	DIAGNOSTIC PROCEDURE 10 (Power seat switch check)	DIAGNOSTIC PROCEDURE 11 (Cancel switch check)	DIAGNOSTIC PROCEDURE 12 (Key, park position, door switch and vehicle speed sensor check)	DIAGNOSTIC PROCEDURE 13 (Seat memory switch check)	DIAGNOSTIC PROCEDURE 14 (Memory indicator check)	
1	No seat system fu	nctions operate.							
	Some of the seat system functions	Sliding							
2	do not operate	Reclining							
_	during automatic/ manual opera-	Lifting (Front)	Х						
	tion.	Lifting (Rear)		Х					
3	No functions operate during automatic operation, and some/all functions do not during manual operation.				Х		X (ACC, ON START signal)		
	Some of the seat	Sliding							
4	system functions	Reclining							
4	do not operate during automatic	Lifting (Front)							
	operation.	Lifting (Rear)							
5	No automatic oper operate.	ration functions				X	X		
6	Drive position can in the memory.	not be retained					X (IGN ON signal)	Х	
	Does not operate	Sliding			Х				
7	during manual operation. (Oper-	Reclining			Х				
,	ates during auto-	Lifting (Front)			X				
	matic operation.)	Lifting (Rear)			X				
8	Automatic operation canceled.	on cannot be				Х			
9	Memory indicator	does not light up.							Х

X : Applicable

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

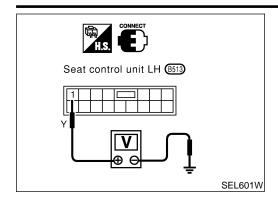

DIAGNOSTIC PROCEDURE 1

(Power supply and ground circuit for driver's seat control unit)


Power Supply Circuit Check

Check voltage between seat control unit LH terminal 1 and ground.

Terminals	Ignition switch position						
	OFF	ACC	ON	START			
1 - Ground	Battery voltage						

If NG, check the following.

- 40A fusible link (letter f, located in the fuse and fusible link box)
- Circuit breaker
- Harness for open or short between circuit breaker and seat control unit LH

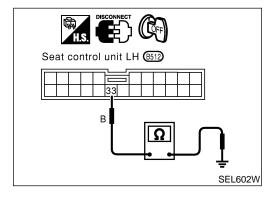

Ground Circuit Check

Check continuity between seat control unit LH terminal 33 and ground.

Terminals	Continuity
33 - Ground	Yes

G[

MA

LC

EG

FE

GL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC


EL


 \mathbb{M}


DIAGNOSTIC PROCEDURE 2


(Sliding encoder check)

=NAEL0369S05

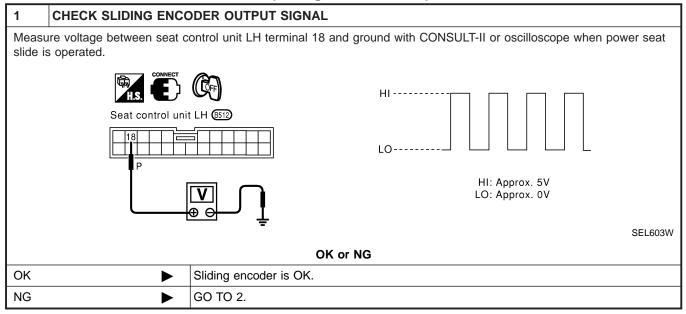

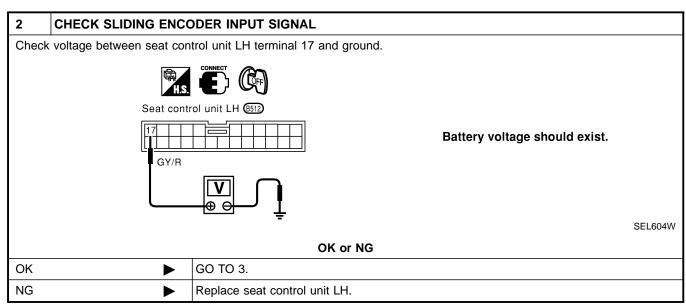

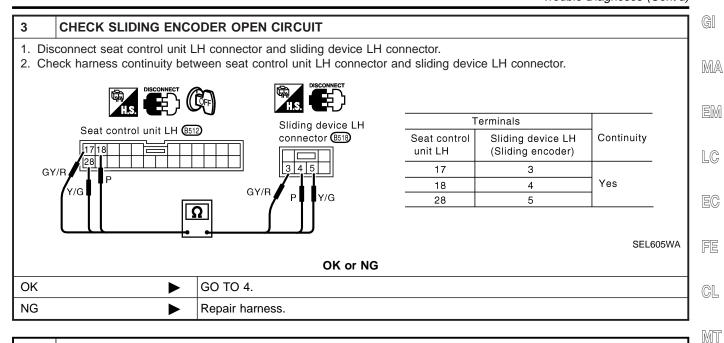

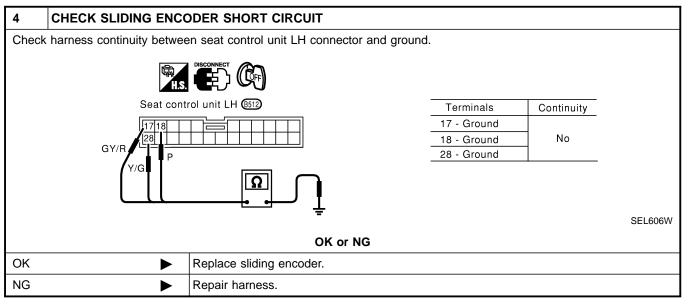

SC

AT

TF

PD

AX

SU

ST


BT


HA


DIAGNOSTIC PROCEDURE 3


(Reclining encoder check)

=NAEL0369S06

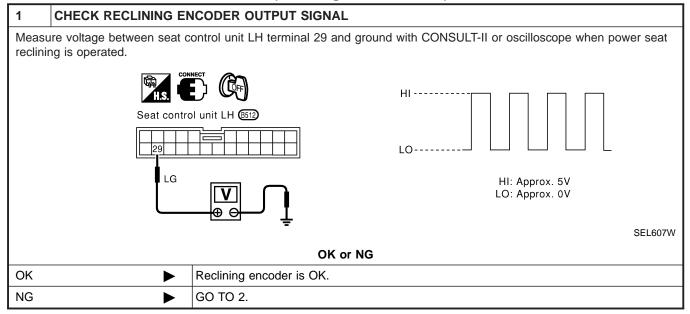

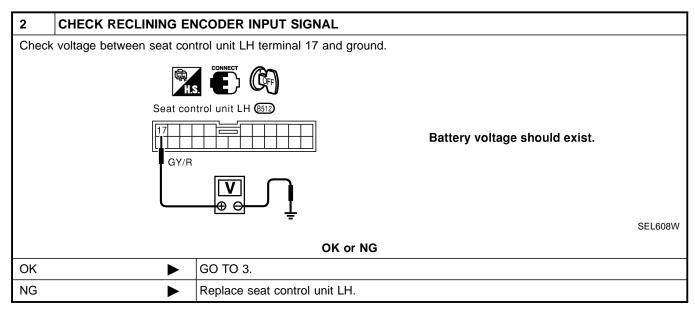

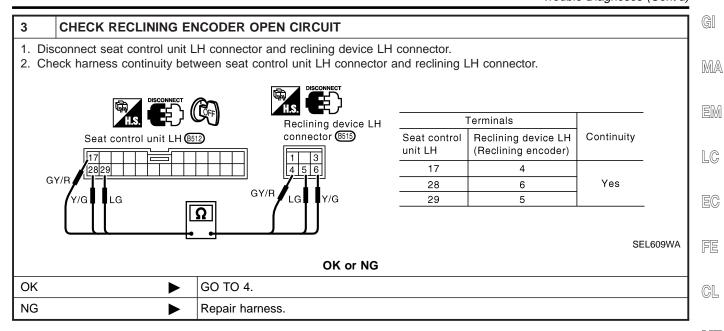

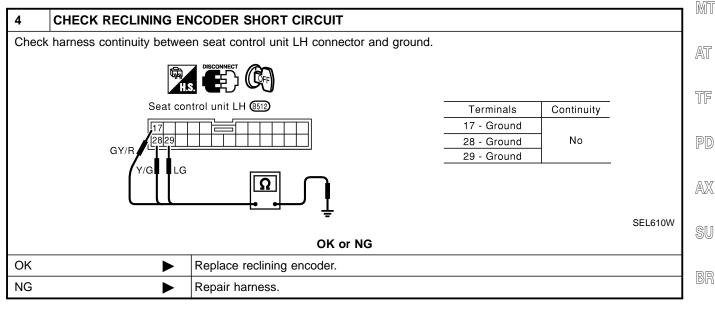

3

ST

BT


HA


SC

 $\mathbb{D}X$

DIAGNOSTIC PROCEDURE 4 [Lifting encoder (front) check]

=NAEL0369S07

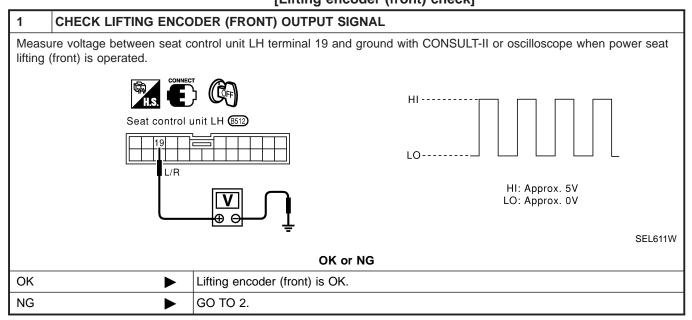

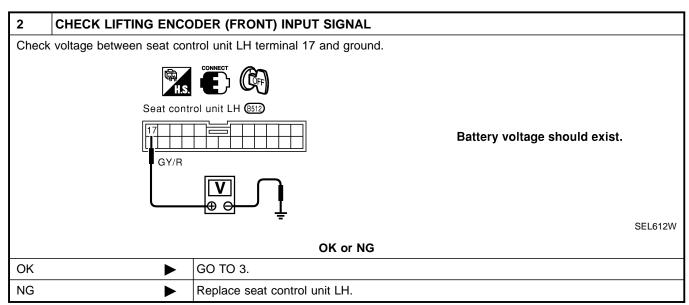

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD


AX


SU

ST

BT

HA

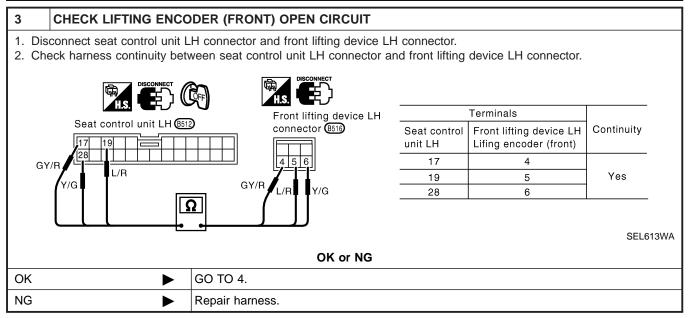


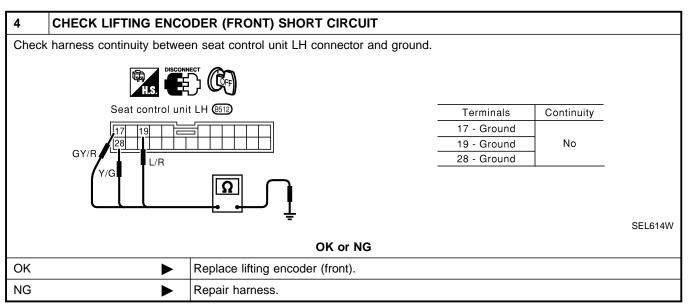



SC


DIAGNOSTIC PROCEDURE 5 [Lifting encoder (rear) check]

=NAEL0369S08

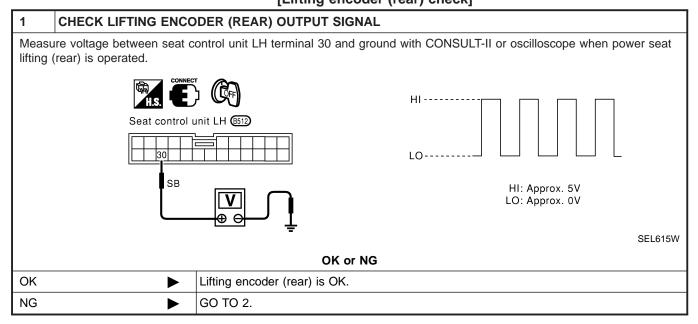

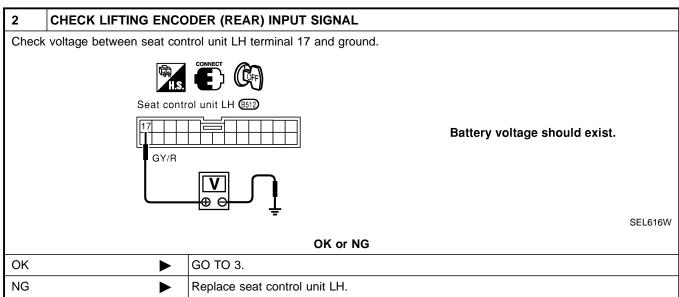

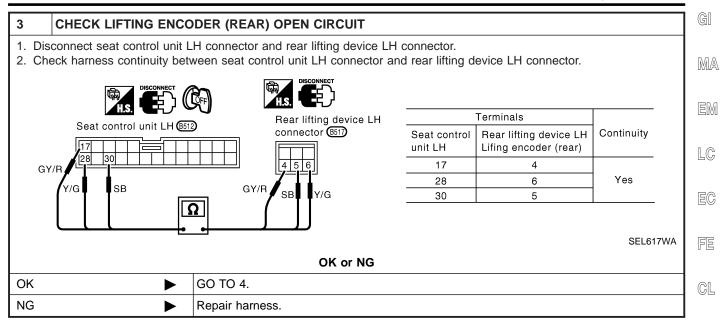

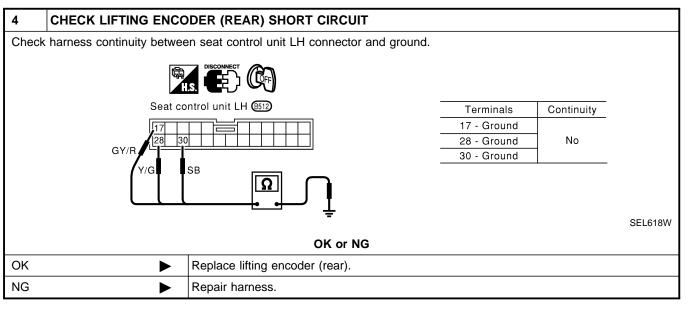

BT

MT

AT

TF

PD

AX

SU

ST


HA


SC

DIAGNOSTIC PROCEDURE 6

(Sliding motor check)

=NAEL0369S09

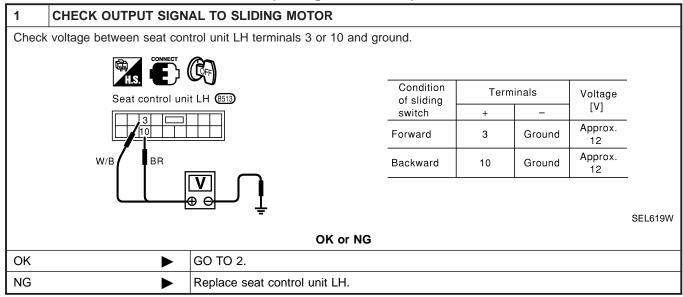

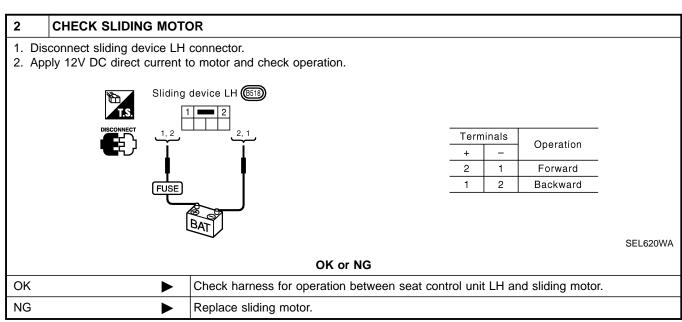



DIAGNOSTIC PROCEDURE 7

(Reclining motor check)

=NAEL0369S10

GI

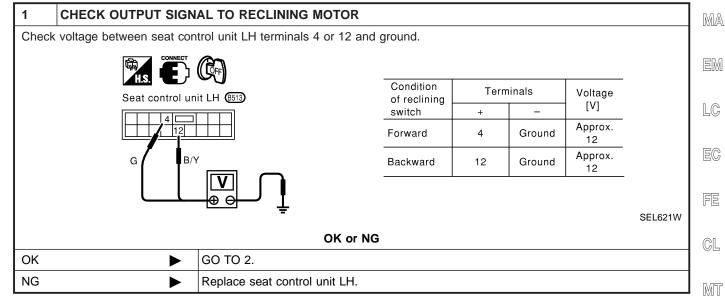

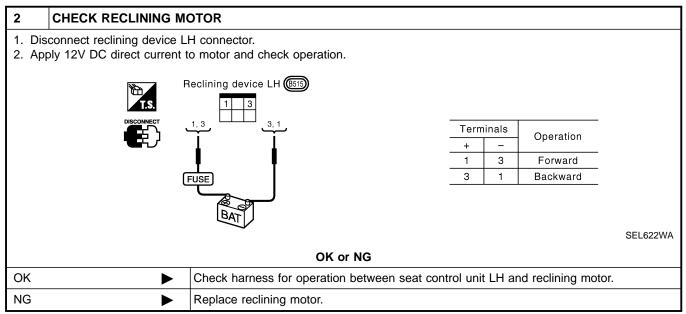

D@

ST

TF

AX

SU

BT


HA


SC

DIAGNOSTIC PROCEDURE 8

[Lifting motor (front) check]

=NAEL0369S11

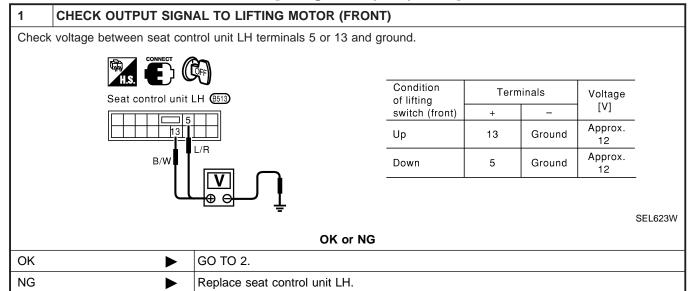

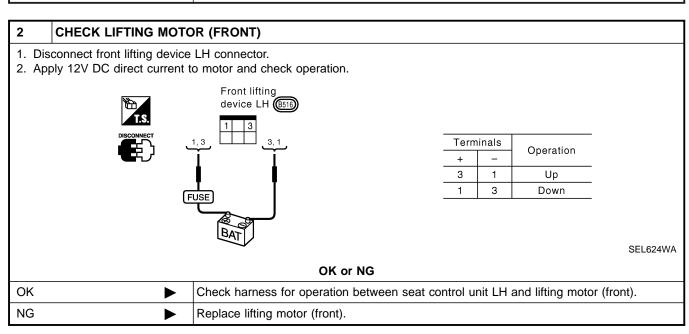

DIAGNOSTIC PROCEDURE 9

[Lifting motor (rear) check]

=NAEL0369S12

GI

MA

EM

LC

EC

FE


GL


MT

TF

AX

SU

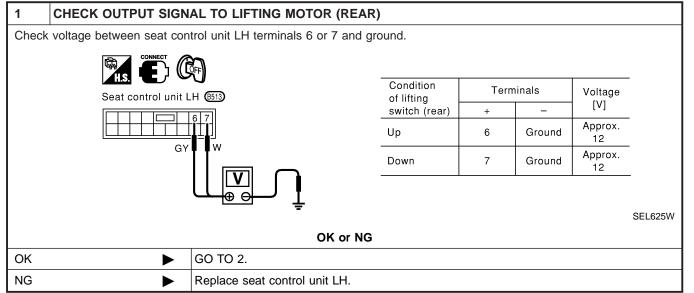

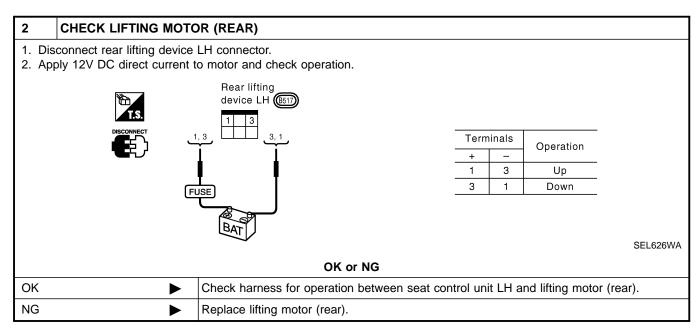

RS

ST

BT

HA

SC


DIAGNOSTIC PROCEDURE 10

(Power seat switch check)

=NAEL0369S13

1 CHECK POWER SEAT SWITCH

- 1. Disconnect power seat switch LH connector.
- 2. Check continuity between power seat switch terminals.

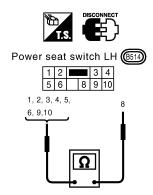

Switch	Condition	Terminals								
	Condition	8	1	2	3	4	5	6	9	10
01:-1:	Forward	\circ								Q
Sliding	Backward	0-				Ю				
Destinie	Forward	0-	Q							
Reclining	Backward	0-		Q						
Lifting	Up	0					Ю			
(Front)	Down	0						Ю		
Lifting (Rear)	Up	0-							Q	
	Down	0-			Ю					

SEL569X

OK or NG

	Check the following. • Ground circuit for power seat switch • Harness for open or short between seat control unit LH and power seat switch
NG ►	Replace power seat switch.

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 11 (Cancel switch check)

=NAEL0369S14

GI

		(,				
1	CHECK CANCEL SWITCH						MA
	sconnect cancel switch connector						
2. Cł	heck continuity between cancel s	switch terminals.					EM
	I.S. DISCONNE						
							LC
	Cancel switch (<u></u>	Terminals	Cancel switch condition	Continuity		
		_	1-2	ON	Yes		EG
				OFF	No		
	$\left(\overline{\Omega} \right)$						FE
						SEL628WA	
		OK or NG					GL
OK		eck the following.					0.05
	I	Ground circuit for cancel switch					MT

Replace cancel switch.

NG

• Harness for open or short between seat control unit LH and cancel switch

TF

AT

PD

SU

 $\mathbb{A}\mathbb{X}$

BR

ST

RS

BT

HA


SC


E


 \mathbb{D}

DIAGNOSTIC PROCEDURE 12


(Key, detention, door switch and vehicle speed signal check)

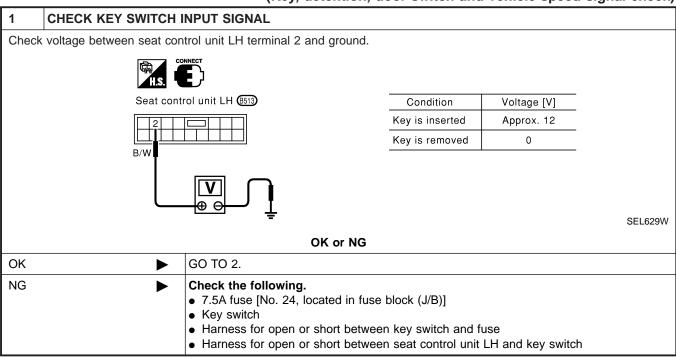

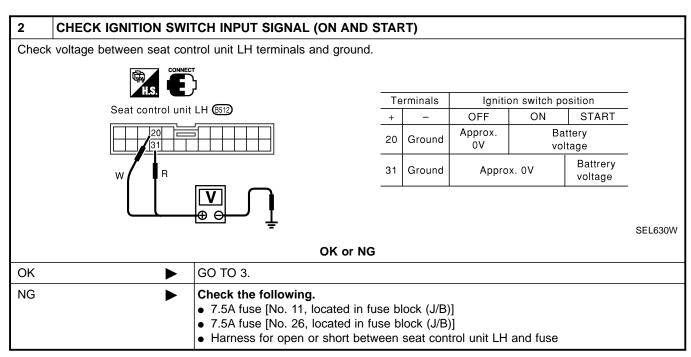


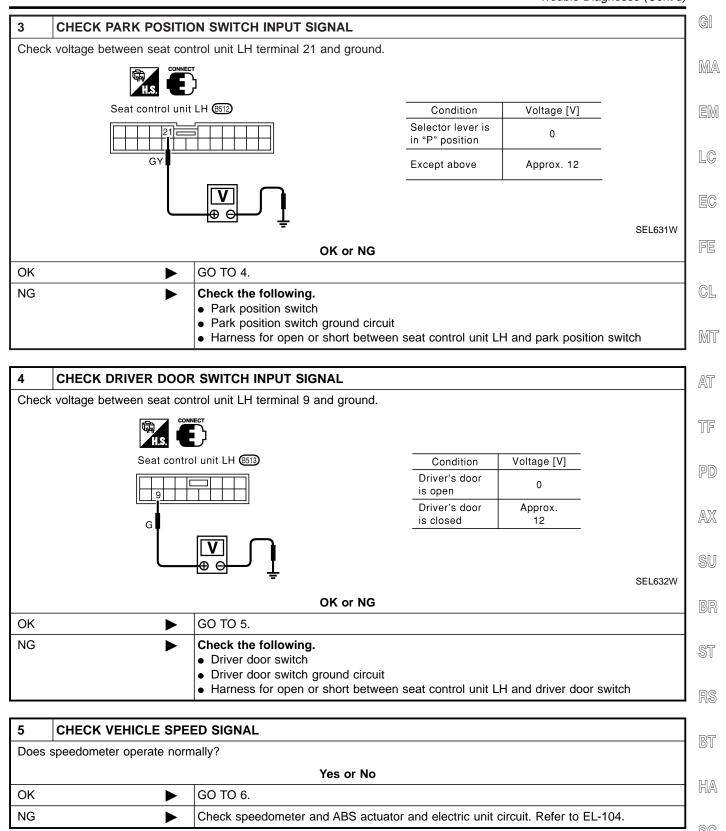

EL.

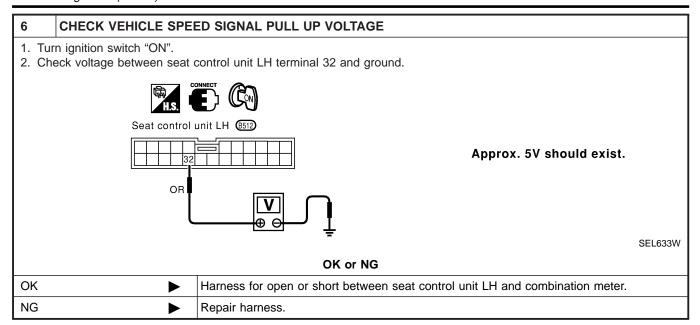

AUTOMATIC DRIVE POSITIONER

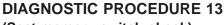


(Seat memory switch check)

=NAEL0369S16



GI

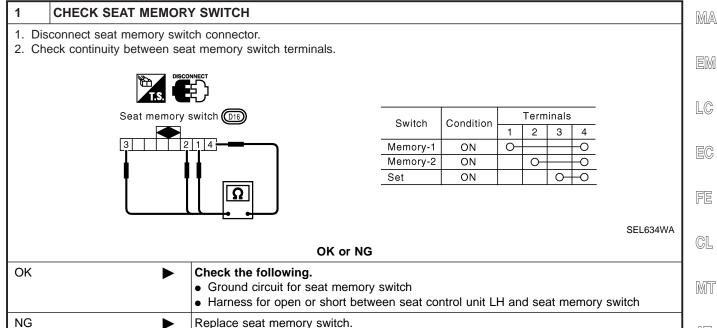

DIAGNOSTIC PROCEDURE 14

(Memory indicator check)

NAEL0369S17

AT

TF

AX

ST


BT

HA

(memory manager energy					
1	CHECK INDICATOR LAMP				
Check indicator lamp illumination.					
	OK or NG				
OK	>	GO TO 2.			
NG	>	Replace seat memory switch (indicator lamp).			

2 CHECK POWER SUPPLY CIRCUIT FOR INDICATOR LAMP

- 1. Disconnect seat memory switch connector.
- 2. Check voltage between seat memory switch terminal and ground.

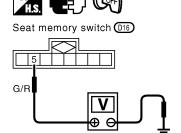

Battery voltage should exist.

SEL635WA

OK or NG


OK Check harness for open or short between seat control unit LH and seat memory switch


NG Check the following.

- 7.5A fuse [No. 24 located in the fuse block (J/B)]
- Harness for open or short between fuse and indicator lamp

Component Parts and Harness Connector Location

NAEL0370

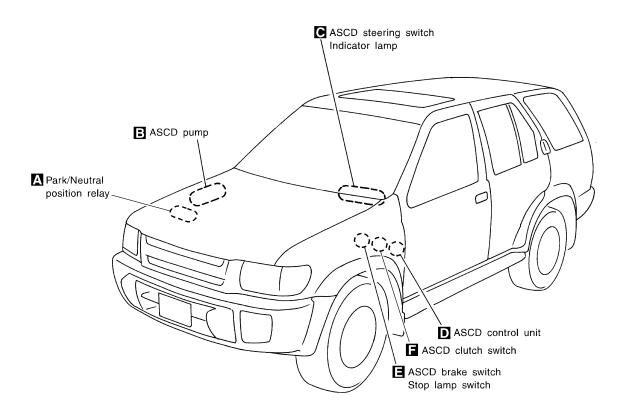

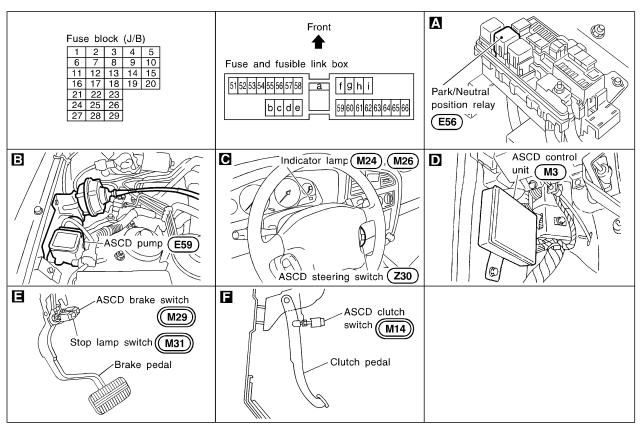

SMART C/U - NEW

System Description

NAFL0371S0203

System Description NAEL0371 Refer to Owner's Manual for ASCD operating instructions. POWER SUPPLY AND GROUND MA NAFI 0371S01 Power is supplied at all times: through 10A fuse [No. 14, located in the fuse block (J/B)] to the stop lamp switch terminal 1, and through 7.5A fuse (No. 52, located in fuse and fusible link box) to the horn relay terminals 1 and 3. LC When ignition switch is in the ON or START position, power is supplied: through 7.5A fuse [No. 11, located in the fuse block (J/B)] to ASCD brake switch terminal 1 and to ASCD control unit terminal 5, through 10A fuse [No. 18, located in the fuse block (J/B)] to park/neutral position relay terminal 1, through 10A fuse [No. 8, located in the fuse block (J/B)] GL to combination meter terminal 66, and When park/neutral position switch is in the P or N position (A/T models), ground is supplied: to park/neutral position relay terminal 2 MIT through park/neutral position switch and body grounds B55 and B75. When ASCD main switch is depressed (ON), ground is supplied: AT to ASCD control unit terminal 9 from ASCD steering switch terminal 4 TF to ASCD steering switch terminal 5 through body grounds M4, M66 and M147 then ASCD control unit holds CRUISE condition and illuminates CRUISE indicator. Ground is supplied: from ASCD control unit terminal 15 to combination meter terminal 46. AX **OPERATION** NAFI 0371S02 **Set Operation** NAEL0371S0201 To activate the ASCD, all following conditions must exist. Ground is supplied to ASCD control unit terminal 9 (Main switch is in ON position.) Power is supplied to ASCD control unit terminal 8 [Brake pedal and clutch pedal are released (M/T models) and brake pedal is released and A/T selector lever is in other than P and N position (A/T models)]. Vehicle speed is between 40 km/h (25 MPH) and 144 km/h (89 MPH). (Signal from combination meter) When the SET/COAST switch is depressed, power is supplied: from ASCD steering switch terminal 2 to ASCD control unit terminal 11. And then ASCD pump is activated to control throttle wire and ASCD control unit supply ground to combination meter terminals 51 to illuminate SET indicator. BT A/T Overdrive Control during Cruise Control Driving (A/T models) NAEL0371S0202 When the vehicle speed is approximately 3 km/h (2 MPH) below set speed, a signal is sent HA from ASCD control unit terminal 10 to TCM (transmission control module) terminal 24. SC When this occurs, the TCM (transmission control module) cancels overdrive. After vehicle speed is approximately 1 km/h (1 MPH) below set speed, overdrive is reactivated. EL ASCD Shifting Control (A/T models)

During ASCD cruise, ASCD control unit controls A/T shifting to avoid uncomfortable shifting.

This is used to control the signals below. Throttle position sensor from ECM

System Description (Cont'd)

SMART C/U - NEW

A/T shift solenoid valve A

0----

Coast Operation

NAFL0371S0204

NAFI 0371S0205

When the SET/COAST switch is depressed during cruise control driving, ASCD actuator returns the throttle cable to decrease vehicle set speed until the switch is released. And then ASCD will keep the new set speed.

Accel Operation

When the RESUME/ACCEL switch is depressed, power is supplied

- from ASCD steering switch terminal 3
- to ASCD control unit terminal 24.

If the RESUME/ACCEL switch is depressed during cruise control driving, ASCD actuator pulls the throttle cable to increase the vehicle speed until the switch is released or vehicle speed is reached to maximum controlled speed by the system. And then ASCD will keep the new set speed.

Cancel Operation

NAEL0371S0206

When any of following condition exists, cruise operation will be canceled.

- CANCEL switch is depressed. (Power supply to ASCD control unit terminals 11 and 24)
- Brake pedal is depressed. (Power supply to ASCD control unit terminal 23 from stop lamp switch)
- Brake pedal or clutch pedal is depressed (M/T models)/brake pedal is depressed or A/T selector lever is shifted to P or N position (A/T models). (Power supply to ASCD control unit terminal 8 is interrupted.)

If MAIN switch is turned to OFF during ASCD is activated, all of ASCD operation will be canceled and vehicle speed memory will be erased.

Resume Operation

NAFI 0371502

When the RESUME/ACCEL switch is depressed after cancel operation other than depressing MAIN switch is performed, vehicle speed will return to last set speed. To resume vehicle set speed, vehicle condition must meet following conditions.

- Brake pedal is released.
- Clutch pedal is released (M/T models).
- A/T selector lever is in other than P and N position (A/T models).
- Vehicle speed is between 40 km/h (25 MPH) and 144 km/h (89 MPH).

ASCD PUMP OPERATION

NAEL0371S03

The ASCD pump consists of a vacuum motor, an air valve and a release valve. When the ASCD activates, power is supplied

- from terminal 12 of ASCD control unit
- to ASCD pump terminal 1.


Ground is supplied to vacuum motor, air valve and release valve from ASCD control unit depending on the operated condition as shown in the below table.

The pump is connected to ASCD actuator by vacuum hose. When the ASCD pump is activated, the ASCD pump vacuum the diaphragm of ASCD actuator to control throttle cable.

		Air valve (*1)	Release valve (*1)	Vacuum motor	Actuator inner pressure
ASCD not operating		Open	Open	Stopped	Atmosphere
	Releasing throttle cable	Open	Closed	Stopped	Vacuum
ASCD operating	Holding throttle position	Closed	Closed	Stopped	Vacuum (*2)
	Pulling throttle cable	Closed	Closed	Operated	Vacuum

^{*1:} When power and ground is supplied, valve is closed.

^{*2:} Set position held.

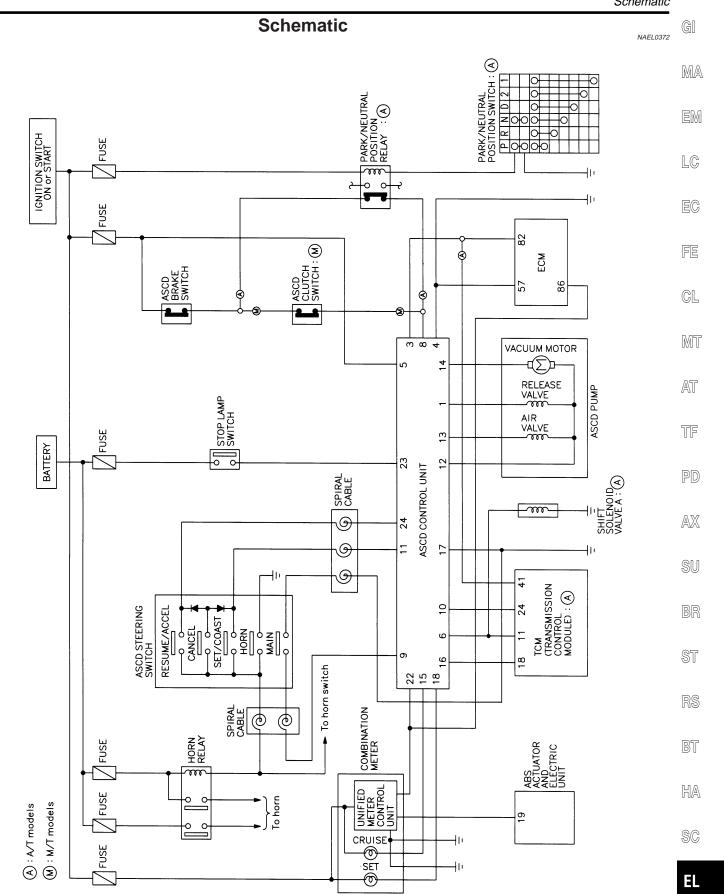


MEL048M

Wiring Diagram — ASCD — NAEL0373 FIG. 1 NAEL0373S01 EL-ASCD-01 IGNITION SWITCH ON or START A: A/T models FUSE BLOCK M : M/T models Refer to EL-POWER. 10A 7.5A (J/B) 18 11 (M10)24U W/R W/B ■A> To EL-ASCD-03 ASCD BRAKE SWITCH RELEASED (M29) W/R 5m DEPRESSED $\overline{M1}$ 2 (E1) B/Y B/Y 9r B/Y M1) **E**1 B/Y 6 PARK/NEUTRAL b POSITION RELAY To SC-START ASCD CLUTH SWITCH RELEASED E56) : $\langle A \rangle$ 7 2 M14): M DEPRESSED L/Y 8 B/Y 2 2 E116 L/Y (M114) PARK/ NEUTRAL POSITION SWITCH Y/R 5r B/Y (E1) (B66) : (A) $\overline{M1}$ ĽY (M70) 8 (B50) BRAKE N.C. ASCD SW (IN) CONTROL UNIT (M3) (B55) (B75) REFER TO THE FOLLOWING. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 E1 -SUPER MULTIPLE JUNCTION (SMJ) (M10) -FUSE BLOCK-JUNCTION BOX (J/B)


SMART C/U - NEW

Wiring Diagram — ASCD — (Cont'd)

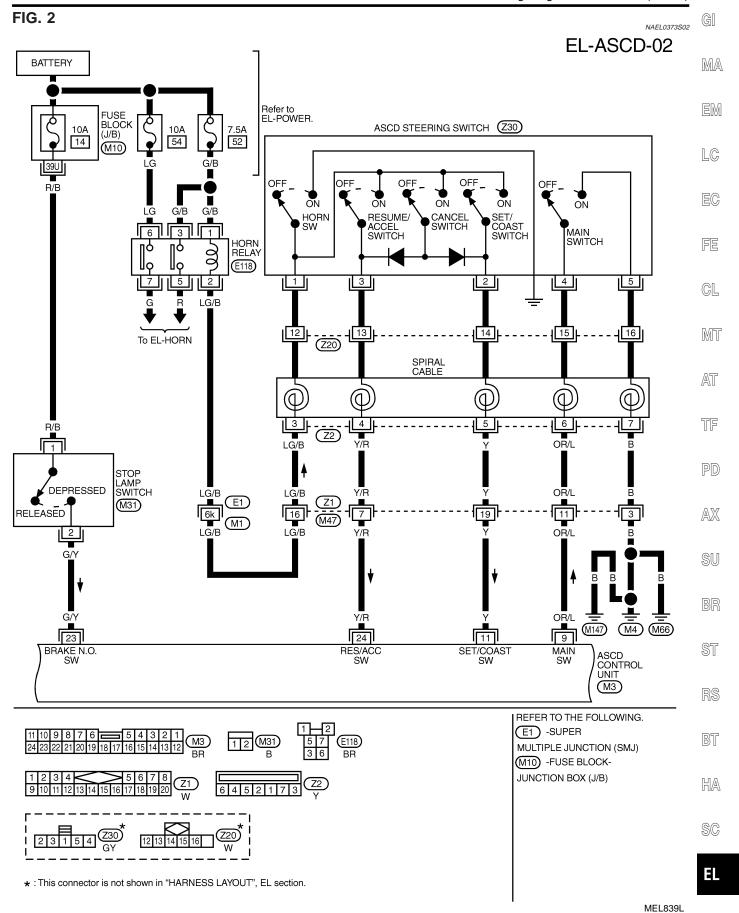


Wiring Diagram — ASCD — (Cont'd)

FIG. 3

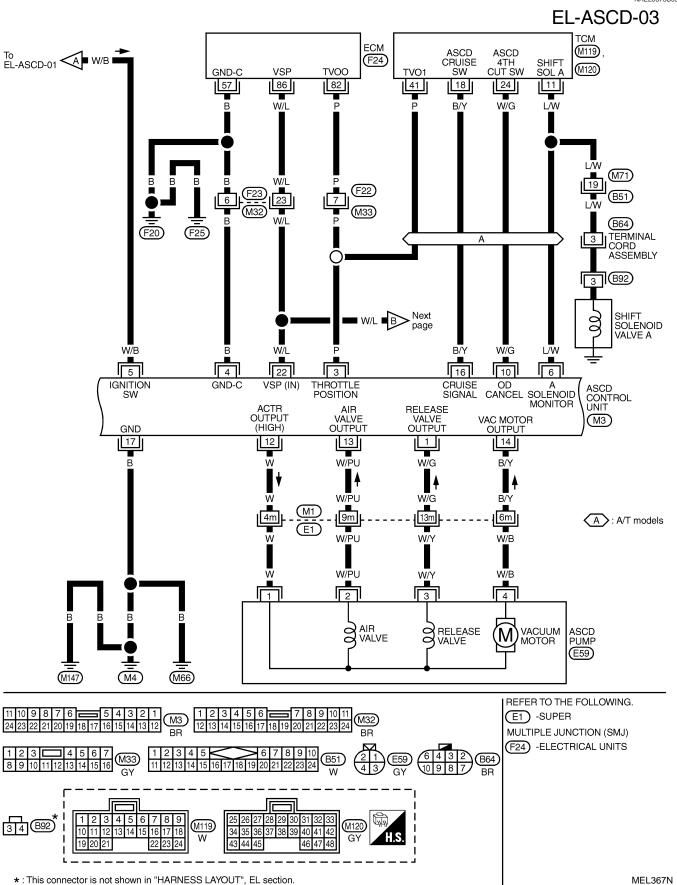


SMART C/U - NEW

Wiring Diagram — ASCD — (Cont'd)

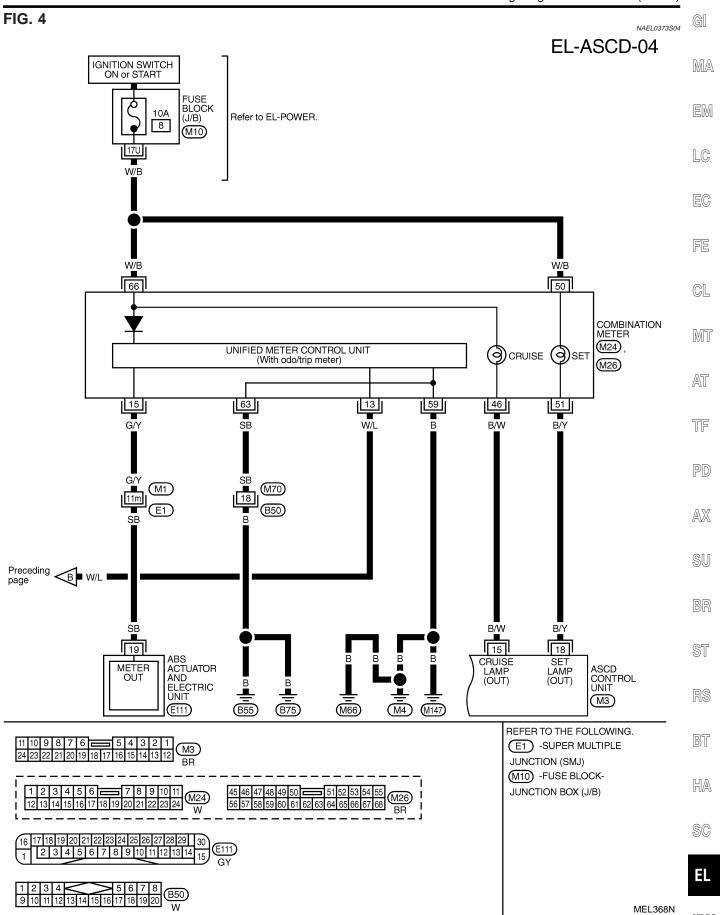

Fail-safe System

SMART C/U - NEW

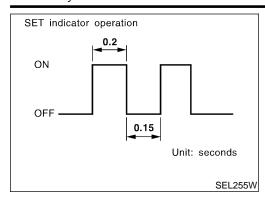

Fail-safe System DESCRIPTION

NAEL0374

When the fail-safe system senses a malfunction, it deactivates ASCD operation. The SET indicator in the combination meter will then flash.

MALFUNCTION DETECTION CONDITIONS

NAFI 0374502

	NAEL0374S02
Detection conditions	ASCD operation during malfunction detection
 ASCD steering (RESUME/ACCEL, CANCEL, SET/COAST) switch is stuck. Vacuum motor ground circuit or power circuit is open or shorted. Air valve ground circuit or power circuit is open or shorted. Release valve ground circuit or power circuit is open or shorted. Vehicle speed sensor is faulty. ASCD control unit internal circuit is malfunctioning. 	 ASCD is deactivated. Vehicle speed memory is canceled.
ASCD brake switch or stop lamp switch is faulty.	ASCD is deactivated.Vehicle speed memory is not canceled.

SMART C/U - NEW

Trouble Diagnoses

Trouble Diagnoses SYMPTOM CHART

NAEL0375

NAEL0375S01

PROCEDURE			Diag	gnostic proce	dure		
REFERENCE PAGE (EL-)	660	661	662	663	664	664	666
SYMPTOM	FAIL-SAFE SYSTEM CHECK	POWER SUPPLY AND GROUND CIRCUIT CHECK	ASCD BRAKE/STOP LAMP SWITCH CHECK	ASCD STEERING SWITCH CHECK	VEHICLE SPEED SENSOR CHECK	ASCD PUMP CIRCUIT CHECK	ASCD ACTUATOR/PUMP CHECK
ASCD cannot be set. ("CRUISE" indicator lamp does not ON.)		Х		X ★ 3			
ASCD cannot be set. ("SET" indicator lamp does not blink.)			Х	Х	Х		
ASCD cannot be set. ("SET" indicator lamp blinks.★1)	Х		Х	Х	Х	Х	
Vehicle speed does not decrease after SET/COAST switch has been pressed.				Х			Х
Vehicle speed does not return to the set speed after RESUME/ACCEL switch has been pressed.★2				Х			Х
Vehicle speed does not increase after RESUME/ACCEL switch has been pressed.				Х			Х
System is not released after CANCEL switch (steering) has been pressed.				Х			Х
Large difference between set speed and actual vehicle speed.					Х	Х	Х
Deceleration is greatest immediately after ASCD has been set.					Х	Х	Х

^{★1:} It indicates that system is in fail-safe. After completing diagnostic procedures, perform "FAIL-SAFE SYSTEM CHECK" (EL-660) to verify repairs

HA

SC

EL




^{★2:} If vehicle speed is greater than 40 km/h (25 MPH) after system has been released, pressing RESUME/ACCEL switch returns vehicle speed to the set speed previously achieved. However, doing so when the ASCD main switch is turned to "OFF", vehicle speed will not return to the set speed since the memory is canceled.

^{★3:} Check only main switch built-in steering switch.

Trouble Diagnoses (Cont'd)

SMART C/U - NEW

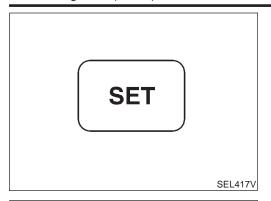

FAIL-SAFE SYSTEM CHECK

Turn ignition switch to ON position.

Turn ASCD main switch to ON and check if the SET indicator blinks.

If the indicator lamp blinks, check the following.


ASCD steering switch. Refer to EL-663.



3. Drive the vehicle at more than 40 km/h (25 MPH) and push SET/COAST switch.

If the indicator lamp blinks, check the following.

- Vehicle speed signal. Refer to EL-664.
- ASCD pump circuit. Refer to EL-664.
- Replace control unit.

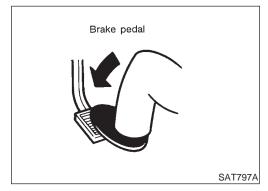


4. Depress brake pedal slowly (brake pedal should be depressed more than 5 seconds).

If the indicator lamp blinks, check the following.

• ASCD brake/stop lamp switch. Refer to EL-662.

5. END. (System is OK.)

Trouble Diagnoses (Cont'd)

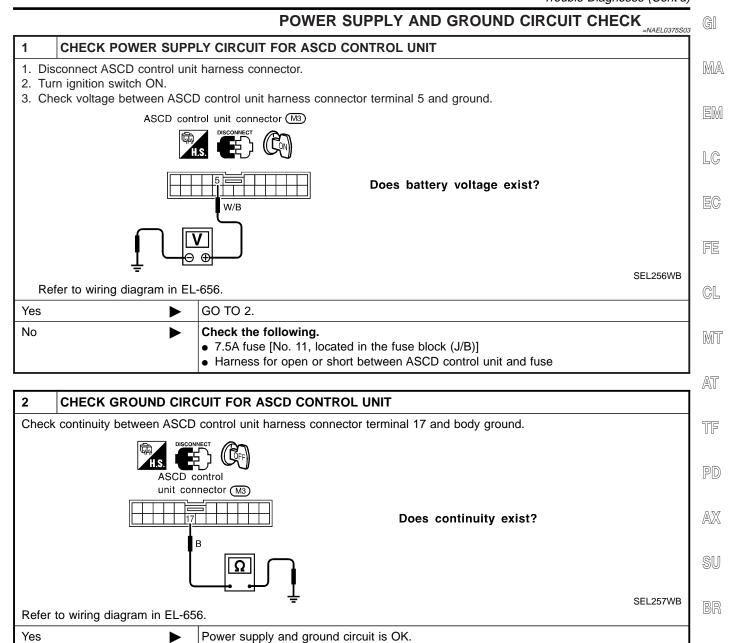

SC

BT

HA

Repair harness.

No

Trouble Diagnoses (Cont'd)

SMART C/U - NEW


ASCD BRAKE/STOP LAMP SWITCH CHECK

=NAFL0375S04 1 CHECK ASCD BRAKE SWITCH CIRCUIT 1. Disconnect ASCD control unit harness connector. 2. Turn ignition switch ON. 3. Check voltage between ASCD control unit harness connector M3 terminal 8 and ground. When brake or clutch pedal is depressed (M/T), or when ASCD control brake pedal is depressed or A/T selector lever is in "N" or "P" range (A/T): unit connector Apporox. 0V When brake and clutch pedal are released (M/T), or when both brake pedal is released and A/T selector lever is not in "N" or "P" range (A/T): Battery voltage should exist. SEL258WF OK or NG OK GO TO 2. NG Check the following. ASCD brake switch Refer to "Electrical Component Inspection" (EL-668). • ASCD clutch switch (M/T models) Refer to "Electrical Component Inspection" (EL-668). Park/neutral position switch (A/T models) Refer to "Electrical Component Inspection" (EL-668). Park/neutral position relay (A/T models)

2 CHECK STOP LAMP SWITCH CIRCUIT

- 1. Disconnect ASCD control unit harness connector.
- 2. Check voltage between ASCD control unit harness connector terminal 23 and ground.

Harness for open or short

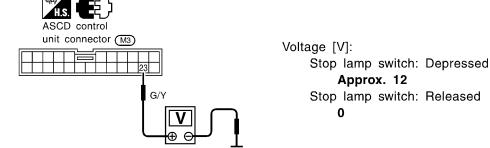

SEL259WB

Refer to wiring diagram in EL-655.

OK or NG

OK •	ASCD brake/stop lamp switch is OK.
NG ►	Check the following. 10A fuse [No. 14, located in the fuse block (J/B)] Harness for open or short between ASCD control unit and stop lamp switch Harness for open or short between fuse and stop lamp switch Stop lamp switch Refer to "Electrical Component Inspection" (EL-668).

SMART C/U - NEW Trouble Diagnoses (Cont'd)



=NAEL0375S05

GI

MA

LC

EC

FE

GL

MT

AT

TF

PD


AX

SU

ST

CHECK ASCD STEERING SWITCH CIRCUIT FOR ASCD CONTROL UNIT

Check voltage between ASCD control unit harness connector terminals and ground.

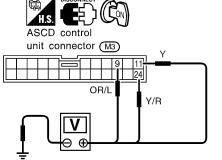

	Terminal No.		Switch condition		
	(+)	(-)	Pressed	Released	
MAIN SW	9	Ground	٥V	Approx. 9V	
SET/COAST SW	11	Ground	12V	0V	
RESUME/ACC SW	24	Ground	12V	0V	
CANCEL SW	11	Ground	12V	ov	
CANCEL SW	24	Ground	12V	0V	

SEL260WC

Refer to wiring diagram in EL-655.


OK or NG

OK >	ASCD steering switch is OK.
NG •	GO TO 2.

CHECK POWER SUPPLY FOR ASCD STEERING SWITCH Does horn work? GO TO 3. Yes Check the following. No • 7.5A fuse (No. 52, located in the relay box) Horn relay Horn circuit

3 **CHECK ASCD STEERING SWITCH**

- 1. Disconnect ASCD steering switch.
- 2. Check continuity between terminals by pushing each switch.

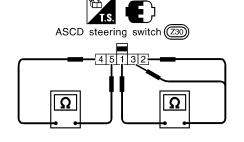

Switch	Condition	Terminal					
Switch		1	2	3	4	5	
MAIN	ON				$\overline{\bigcirc}$	$\overline{}$	
RESUME/ACCEL	ON	9		$\overline{}$			
SET/COAST	ON	$\overline{\bigcirc}$	$\overline{}$				
CANCEL	ON	\bigcirc	ightharpoonup				
0/114022		$\overline{\bigcirc}$		$\overline{}$			

OK or NG

OK •	>	Check harness for open or short between ASCD steering switch and ASCD control unit.
NG	>	Replace ASCD steering switch.

SEL764WA


SC


HA

Trouble Diagnoses (Cont'd)

SMART C/U - NEW


VEHICLE SPEED SIGNAL CHECK

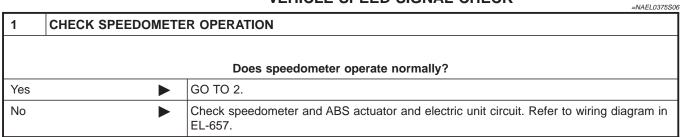

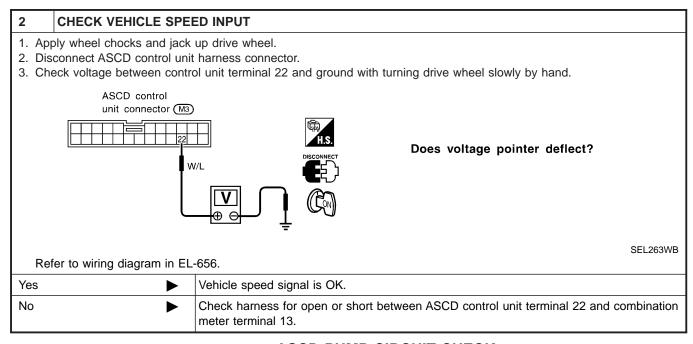



ASCD PUMP CIRCUIT CHECK

NAEL0375S07

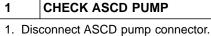

2. Measure resistance between ASCD pump terminals 1 and 2, 3, 4.

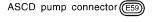

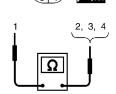

Terminals		Resistance Ω
	2	Approx. 65
1	3	Approx. 65
	4	Approx. 3

SEL262WB


Refer to wiring diagram in EL-656.

oĸ	or	NG
----	----	----

OK •	GO TO 2.
NG •	Replace ASCD pump.

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

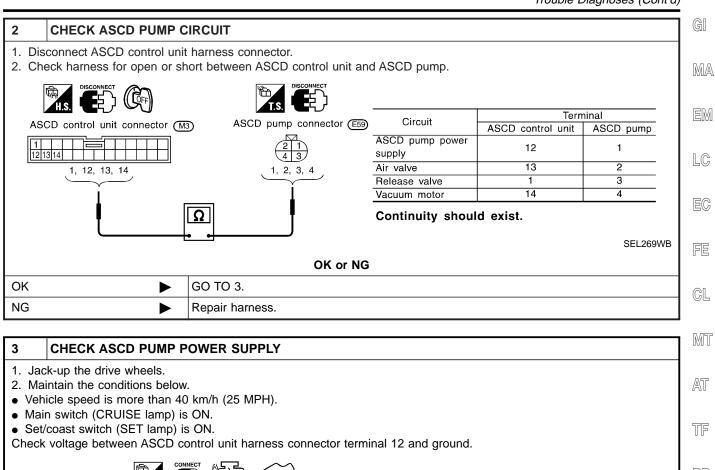

Sewitch (CRUISE lamp) is ON.
coast switch (SET lamp) is ON.
voltage between ASCD control unit harness connector terminal 12 and ground.

ASCD control unit connector

Battery voltage should exist.

Battery voltage should exist.

OK or NG

ASCD pump power supply is OK.

Replace ASCD control unit.

OK

NG

HA SC

BT

AX

SU

BR


ST

Н


SMART C/U - NEW

Trouble Diagnoses (Cont'd)

ASCD ACTUATOR/PUMP CHECK

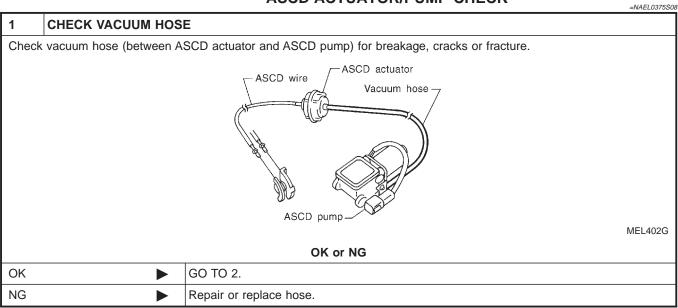


2	CHECK ASCD WIRE	
Check wire for improper installation, rust formation or breaks.		
OK or NG		
OK	>	GO TO 3.
NG	>	Repair or replace wire. Refer to "ASCD Wire Adjustment" (EL-669).

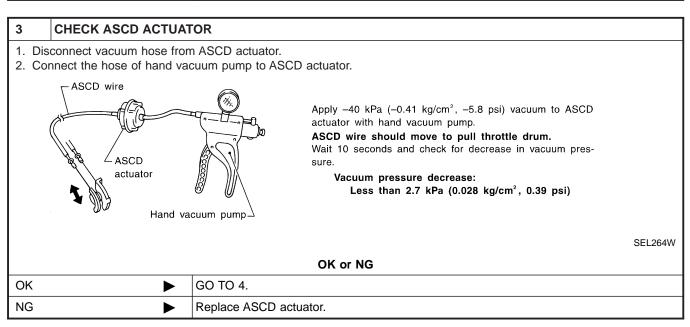

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

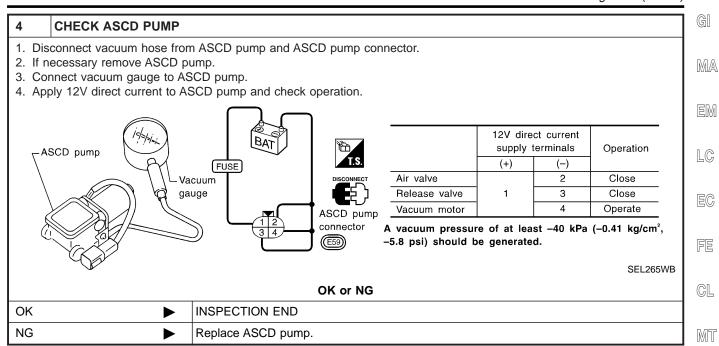

PD

SU

 $\mathbb{A}\mathbb{X}$

BR

ST

RS

BT


HA

SC

ĒL

Electrical Component Inspection


SMART C/U - NEW

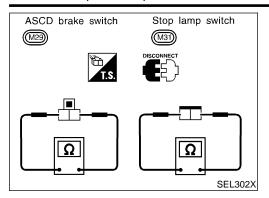

Electrical Component Inspection ASCD BRAKE SWITCH AND STOP LAMP SWITCH

	Continuity		
Condition	ASCD brake switch	Stop lamp switch	
When brake pedal is depressed	No	Yes	
When brake pedal is released	Yes	No	

Check each switch after adjusting brake pedal — refer to BR-15, "BRAKE PEDAL AND BRACKET".

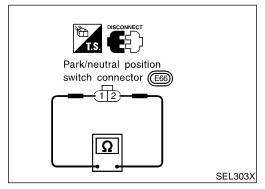

PARK/NEUTRAL POSITION SWITCH (FOR A/T MODELS)

NAFL 03765	02

A/T collector lover position	Continuity
A/T selector lever position	Between terminals 1 and 2
"P"	Yes
"N"	Yes
Except "P" and "N"	No

ASCD clutch switch (M14) E SEL635X

ASCD CLUTCH SWITCH (FOR M/T MODELS)


NAEL0376S03

Condition	Continuity
When clutch pedal is depressed	No
When clutch pedal is released	Yes

SMART C/U - NEW

ASCD Wire Adjustment

ASCD Wire Adjustment

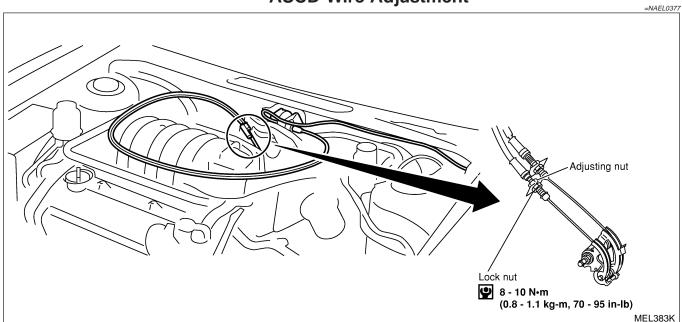

CAUTION:

- Be careful not to twist ASCD wire when removing it.
- Do not tense ASCD wire excessively during adjustment.

Adjust the tension of ASCD wire in the following manner.

- 1. Loosen lock nut and adjusting nut.
- 2. Make sure that accelerator wire is properly adjusted. Refer to FE-3, "ACCELERATOR CONTROL SYSTEM".
- 3. Tighten adjusting nut just until throttle drum starts to move.
- 4. Loosen adjusting nut again 1/2 to 1 turn.
- 5. Tighten lock nut.

MA

LC

EG

PP

GL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

NAEL0378

System Description

Power is supplied at all times

- from 40A fusible link (letter f, located in the fuse and fusible link box)
- to circuit breaker terminal 1
- through circuit breaker terminal 2
- to power window relay terminal 3,
- to front power window main switch terminal 4, and
- to front power window switch RH terminal 6.

With ignition switch in ON or START position, power is supplied

- through 7.5A fuse [No. 11, located in the fuse block (J/B)]
- to power window relay terminal 2, and
- to smart entrance control unit terminal 27.

Ground is supplied to power window relay terminal 1

through body grounds M4, M66 and M147.

The power window relay is energized and power is supplied

- through power window relay terminal 5
- to front power window main switch terminal 11,
- to front power window switch RH terminal 13,
- to rear power window switch LH and RH terminals 5.

MANUAL OPERATION

Front Door LH

NAEL0378S01

NAFL0378S0101

Ground is supplied

- to front power window main switch terminal 5
- through body grounds M77 and M111.

WINDOW UP

When the front LH switch in the front power window main switch is pressed in the up position, power is supplied

- to front power window regulator LH terminal 1
- through front power window main switch terminal 2.

Ground is supplied

- to front power window regulator LH terminal 3
- through front power window main switch terminal 3.

Then, the motor raises the window until the switch is released.

WINDOW DOWN

When the LH switch in the front power window main switch is pressed in the down position, power is supplied

- to front power window regulator LH terminal 3
- through front power window main switch terminal 3.

Ground is supplied

- to front power window regulator LH terminal 1
- through front power window main switch terminal 2.

Then, the motor lowers the window until the switch is released.

Front Door RH

NAEL0378S0102

Ground is supplied

- to front power window main switch terminal 5
- through body grounds M77 and M111.

NOTE:

Numbers in parentheses are terminal numbers, when power window switch is pressed in the UP and DOWN positions respectively.

FRONT POWER WINDOW MAIN SWITCH OPERATION

When front RH switch in the front power window main switch is pressed UP or DOWN, a signal is supplied

through front power window main switch terminal 8

POWER WINDOW

SMART C/U - NEW
System Description (Cont'd)

to front power window switch RH terminal 11. The subsequent operation is the same as the front power window switch RH operation. FRONT POWER WINDOW SWITCH RH OPERATION MA Power is supplied through front power window switch RH (5, 4) to front power window regulator RH (1, 3). Ground is supplied to front power window regulator RH (3, 1) LC through front power window switch RH (4, 5) to front power window switch RH terminal 12 through front power window main switch terminal 1. Then, the motor raises or lowers the window until the switch is released. Rear Door LH NAEL0378S0103 Ground is supplied to front power window main switch terminal 5 GL through body grounds the M77 and M111. NOTE: Numbers in parentheses are terminal numbers, when the power window switch is pressed in the UP and MIT DOWN positions. FRONT POWER WINDOW MAIN SWITCH OPERATION Power is supplied AT through front power window main switch terminal (13, 12) to rear power window switch LH terminal (3, 4) TF The subsequent operation is the same as the rear power window switch LH operation. REAR POWER WINDOW SWITCH LH Power is supplied through rear power window switch LH (1, 2) to rear power window regulator LH (1, 2) AX Ground is supplied to rear power window regulator LH (2, 1) through rear power window switch LH (2, 1) to rear power window switch LH terminal (4, 3) through front power window main switch terminal (12, 13) Then, the motor raises or lowers the window until the switch is released. Rear Door RH NAEL0378S0104 Rear door RH windows will rise and lower in the same manner as the rear door LH window. **AUTO OPERATION** The power window AUTO feature enables the driver or front passenger to open or close the driver's and front passenger's window without holding the window switch in the up or down position. The AUTO feature only operates on the driver's and front passenger's window upward and downward movement. **POWER WINDOW LOCK** The power window lock is designed to lock operation of all windows except for driver's door window. HA When the lock switch is pressed to lock position, the ground of the front and rear power window switches, in the power window main switch, is disconnected. This prevents the power window motors from operating. **RETAINED POWER OPERATION** When the ignition switch is turned to OFF position from ON or START position, power is supplied for 45 seconds EL

to power window relay terminal 2

Ground is always supplied

from smart entrance control unit terminal 46.

- to power window relay terminal 1
- through body grounds M4, M66 and M147.

When power and ground are supplied, the power window relay continues to be energized, and the power window can be operated.

The retained power operation is canceled when the driver or passenger side door is opened.

INTERRUPTION DETECTION FUNCTION


NAEL0378S05


Front power window main switch and front power window switch RH monitor the power window regulator motor operation and the power window position (full closed or other) for driver's and passenger's power window by the signals from encoder and limit switch in front power window regulator LH or RH.

When front power window main switch or front power window switch RH detects interruption during the following close operation in the driver's or front passenger's side door,

- automatic close operation when ignition switch is in the "ON" position
- automatic close operation during retained power operation


front power window main switch or front power window switch RH controls driver's or front passenger's power window regulator motor for open and the power window will be lowered about 150 mm (5.91 in).

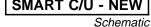

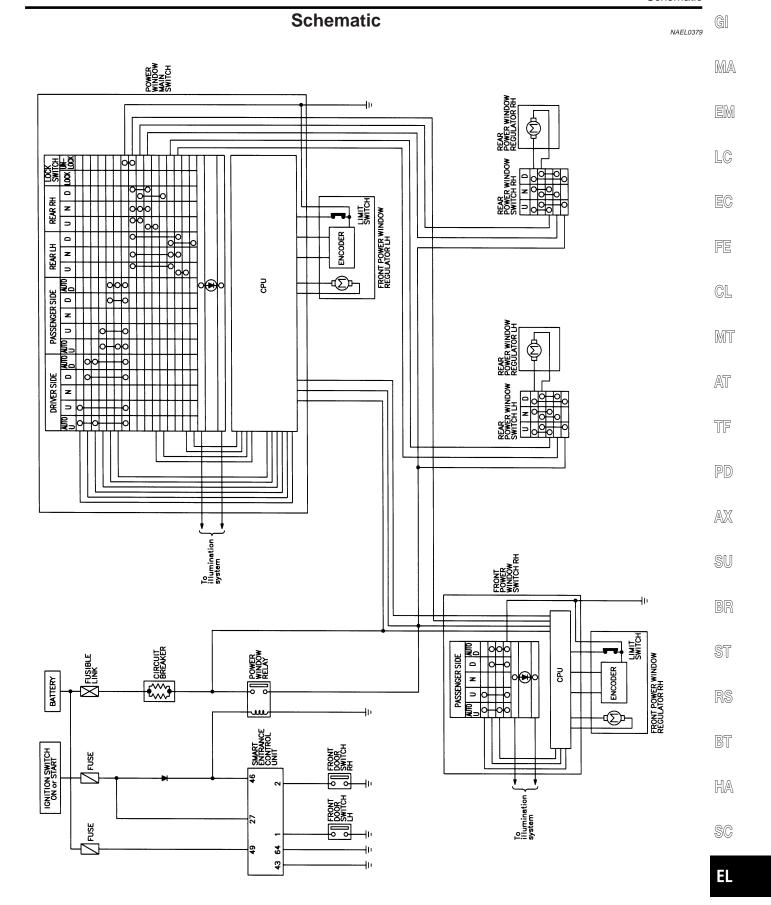


Wiring Diagram — WINDOW -NAEL0380 IGNITION SWITCH ON or START **EL-WINDOW-01 BATTERY** Refer to EL-POWER. FUSE BLOCK (J/B) f 7.5A 24 11 CIRCUIT BREAKER M145 (M10) W/B 19U 15U M1(E1) W/B **■** 2n **■** W/B **■** ■■ W/R ■A Next page G/R W/B 2 ■ W/R ■ DIODE (M132) ■ W/B ■ G/R W/B R/Y R/Y W/R 49 27 46 3 POWER WINDOW RELAY SMART ENTRANCE CONTROL UNIT BAT IGN ᇬ RAP (FUSE) OUT DOOR SW (DR) DOOR SW M23(M121), (M122), (M123) GND2 GND1 (AS) 5 2 64 43 G/R В В M2 G/R (B50) (B1) \Box OPEN FRONT DOOR SWITCH RH FRONT DOOR SWITCH LH **OPEN** To EL-WINDOW-05 B9 CLOSED CLOSED **B68** $\lfloor \frac{2}{2} \rfloor$ 2 В W ■ D Next page ■ B ■ 2 ■ B ■ ■ B ■ 2 ■ B B24 D101 D106 D206 В В ■ B ■ 3 ■ B ■ B ■ 1 **■** B Ĭ (B11) (M77 (M111) (B22) (D210) M147 $\overline{M4}$ (M66) REFER TO THE FOLLOWING. E1 , B1 -SUPER 2 X 1 M23 MULTIPLE JUNCTION (SMJ) (M10) -FUSE BLOCK -JUNCTION BOX (J/B) 3 4 5 6 7 8 9 (M121) (M122) (M123) 10 11 12 13 14 15 16 17 18 36 37 38 39 40 41 42 GΥ 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 W , <u>B68</u> B


MEL870N

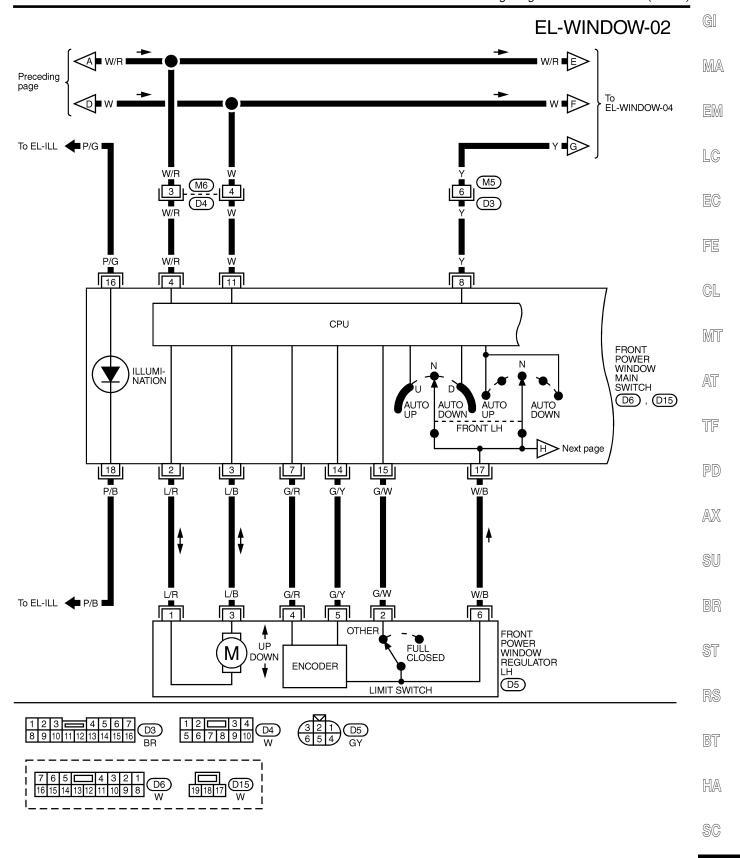


MEL369N

EL

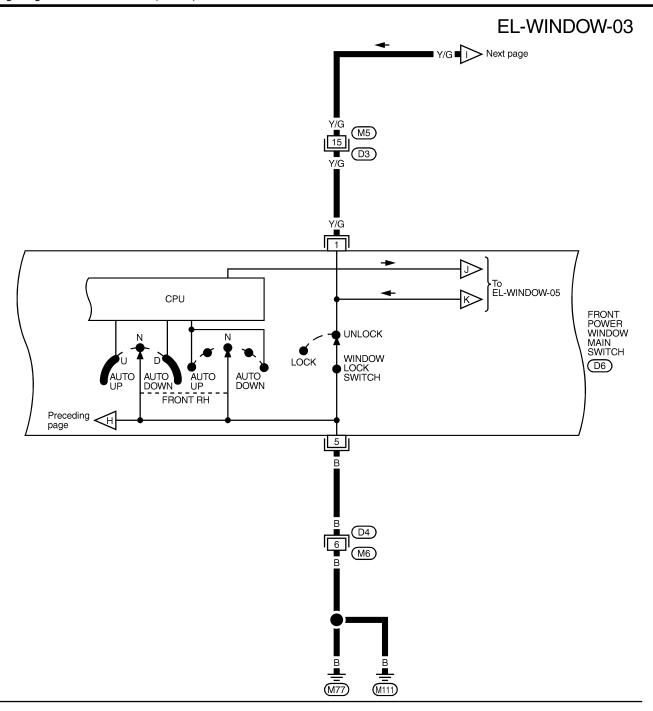


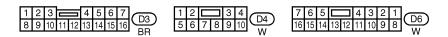


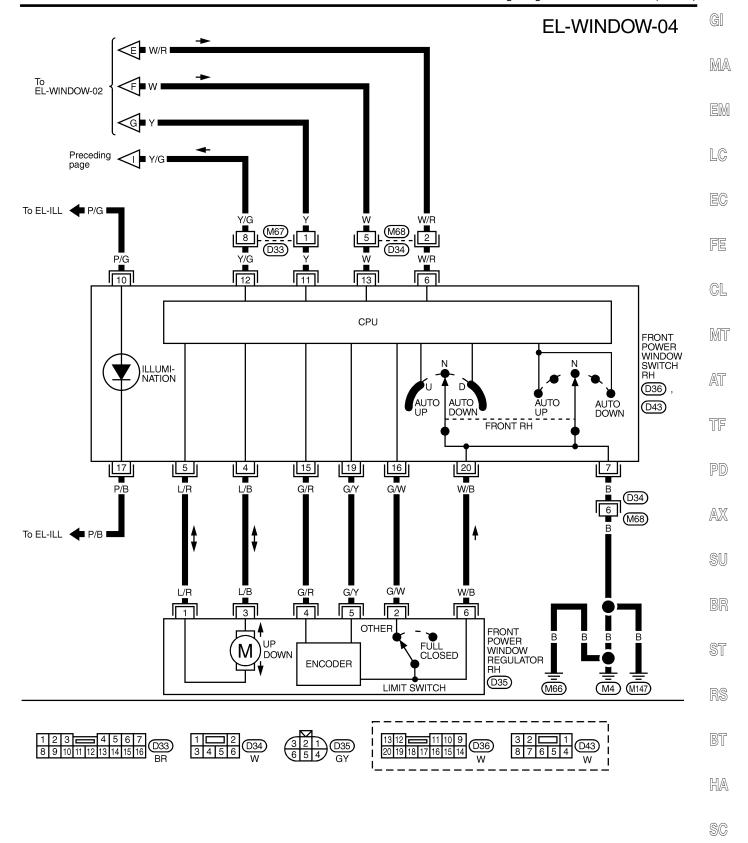

MEL846L

EL

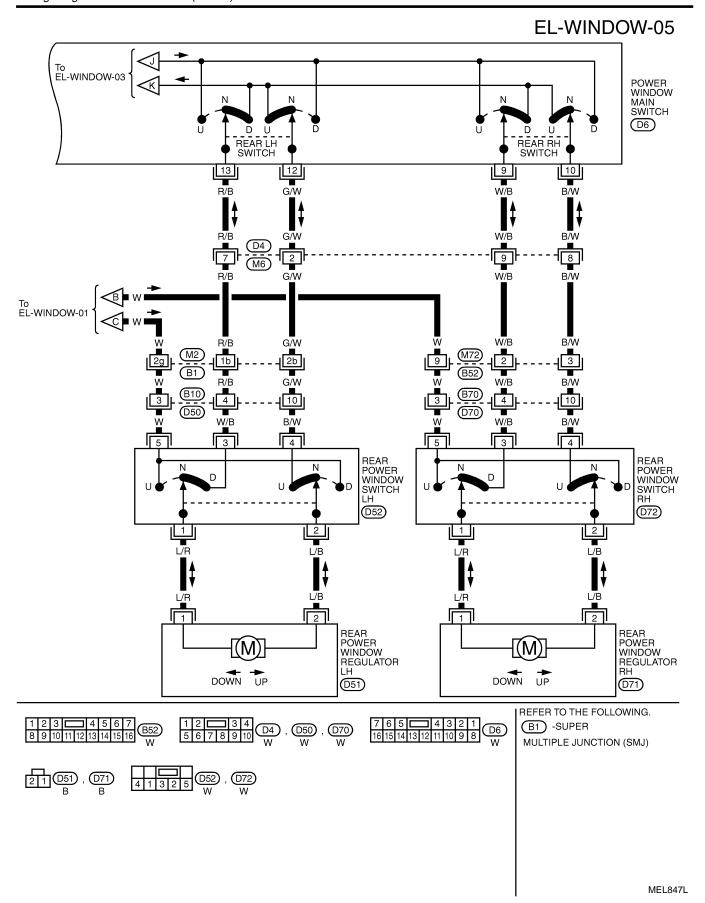

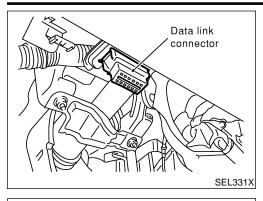

CONSULT-II Inspection Procedure "RETAINED PWR"

NAEL0381

NAEL0381S01


- 1. Turn ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

MA

GI

LC

EG

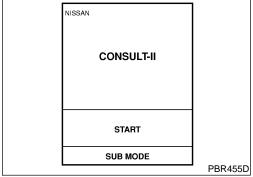

SELECT SYSTEM **ENGINE**

> A/T AIR BAG

ABS SMART ENTRANCE

SELECT TEST ITEM **BATTERY SAVER** THEFT WAR ALM RETAINED PWR

MULTI REMOTE ENT

SEL941W

Turn ignition switch "ON".

Touch "START".

FE

GL

MT

AT Touch "SMART ENTRANCE".

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

Touch "RETAINED PWR".


ST

BT

Select diagnosis mode. "DATA MONITOR" and "ACTIVE TEST" are available.

HA

SC

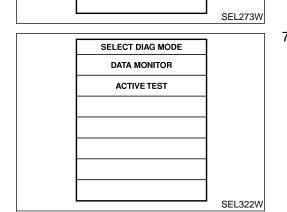

EL-679

CONSULT-II Application Items

"RETAINED PWR" Data Monitor

NAEL0382

NAEL0382S01 NAEL0382S0101

Monitored Item	Description
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.

Active Test

NAEL0382S0102

Test Item	Description
RETAINED PWR	This test is able to supply RAP signal (power) from smart entrance control unit to power window system, power sunroof system and headlamp battery saver control unit. Those systems can be operated when turning on "RETAINED PWR" on CONSULT-II screen even if the ignition switch is tuned OFF. NOTE: During this test, CONSULT-II can be operated with ignition switch in "OFF" position. "RETAINED PWR" should be turned "ON" or "OFF" on CONSULT-II screen when ignition switch is ON. Then turn ignition switch OFF to check retained power operation. CONSULT-II might be stuck if "RETAINED PWR" is turned "ON" or "OFF" on CONSULT-II screen when ignition switch is OFF.

Trouble Diagnoses

NAFI 0383

		NAEL0383
Symptom	Possible cause	Repair order
None of the power windows can be operated using any switch.	7.5A fuse, 40A fusible link M145 circuit breaker Power window relay M145 circuit breaker circuit Power window relay circuit Ground circuit Power window main switch	 Check 7.5A fuse [No. 11, located in fuse block (J/B)], 40A fusible link (letter f, located in fuse and fusible link box). Check M145 circuit breaker. Check power window relay. Check the following. Harness between M145 circuit breaker and 40A fusible link Harness between M145 circuit breaker and front power window main switch Check the following. Harness between 7.5A fuse and power window relay Harness between M145 circuit breaker and power window relay Check the following. Ground circuit of power window main switch terminal 5 Power window relay ground circuit Check power window main switch.
Driver side power window cannot be operated but other windows can be operated.	Driver side power window regulator circuit Driver side power window regulator Power window main switch	 Check harness between power window main switch and driver side power window regulator for open or short circuit. Check driver side power window regulator. Check power window main switch.

POWER WINDOW

Symptom	Possible cause	Repair order
Passenger side power window can- not be operated but other window can be operated.	Power supply for front power window switch RH Front power window switch RH ground circuit Front power window switch RH circuit Front power window regulator RH circuit Front power window regulator RH Front power window main switch Front power window switch RH	 Check power supply for front power window switch RH terminals 6 and 13. Check front power window switch RH ground circuit. Check harness between front power window switch RH and power window main switch. Check harness between front power window switch RH and front power window regulator RH for open or short circuit. Check front power window regulator RH. Check front power window main switch. Check front power window switch RH.
One or more rear power windows except front window cannot be operated.	Rear power window switches Rear power window regulators Power window main switch Rear power window circuit	Check rear power window switches. Check rear power window regulator. Check power window main switch. Check the following. Harness between the rear power window switches terminal 5 and power window relay Harnesses between power window main switch and rear power window switches for open/short circuit Harnesses between rear power window switches and rear power window regulator for open/short circuit
Power windows except driver's side window cannot be operated using power window main switch but can be operated by power window switches.	Power window main switch	1. Check power window main switch.
Driver side power window automatic operation does not function properly.	Power window main switch Encoder and limit switch	Check power window main switch. Check encoder and limit switch. (EL-683)
Front passenger side power window automatic operation does not function properly.	Front power window switch RH Encoder and limit switch	Check front power window switch RH. Check encoder and limit switch. (EL-683)
Retained power operation does not operate properly.	RAP signal circuit Driver or passenger side door switch circuit Smart entrance control unit	1. Check RAP signal. a. (With CONSULT-II) Check RAP signal with CONSULT-II. Use "ACTIVE TEST" mode, "RETAINED PWR" in "SMART ENTRANCE". (Refer to EL-679.) If NG, go to the step b. below. b. Verify 12 positive voltage from smart entrance control unit is present at terminal 10 of power window relay: Within 45 seconds after ignition switch turns off. When front door LH and RH is closed. Check the following. Alarness between smart entrance control unit and driver or passenger side door switch for short circuit b. Driver or passenger side door switch ground circuit c. Driver or passenger side door switch Check smart entrance control unit. (EL-778)
Passenger side power window can- not be operated using power win- dow main switch but can be oper- ated by passenger side power win- dow switch.	Front power window main switch	1. Check power window main switch. (EL-685)

Symptom	Possible cause	Repair order
Rear LH power window cannot be operated using power window main switch but can be operated by rear LH power window switch.	Front power window main switch	1. Check power window main switch. (EL-685)
Rear RH power window cannot be operated using power window main switch but can be operated by rear RH power window switch.	Front power window main switch	Check power window main switch. (EL-685)

POWER WINDOW

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

GI

MA

EM

FE

GL


MT


AT

TF

AX



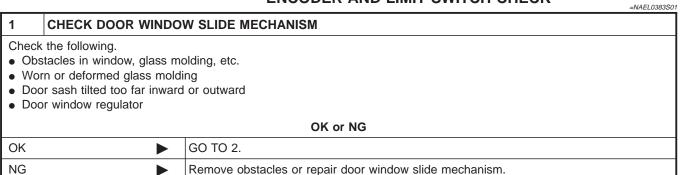

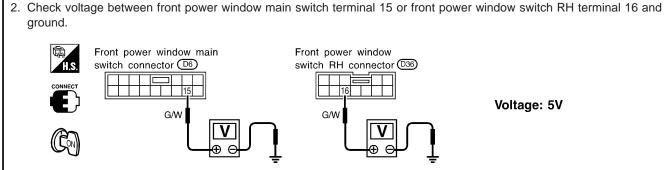

CHECK POWER SUPPLY TO LIMIT SWITCH


1. Disconnect front power window regulator LH or RH harness connector.

2

NOTE: Check voltage when front power window regulator LH or RH harness connector is disconnected.


SEL725WA


OK or NG		
OK	>	GO TO 3.
NG	>	Replace power window main switch or front power window switch RH.

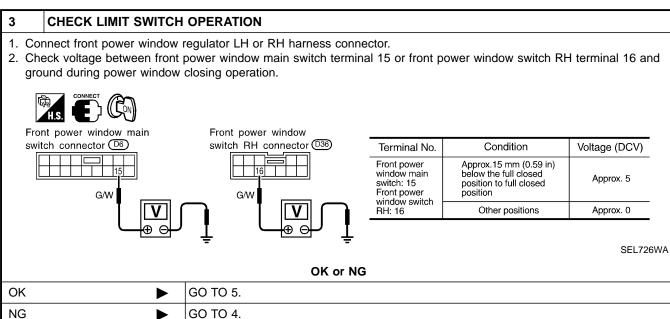

Bī

HA

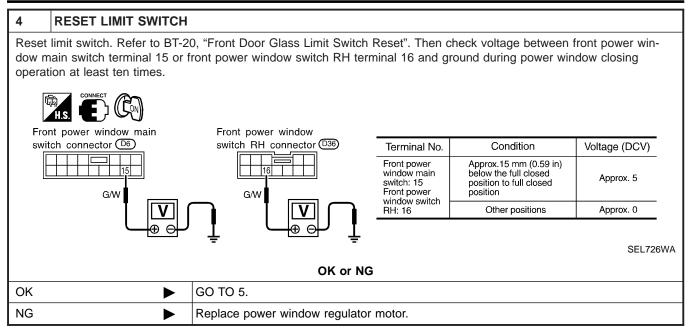

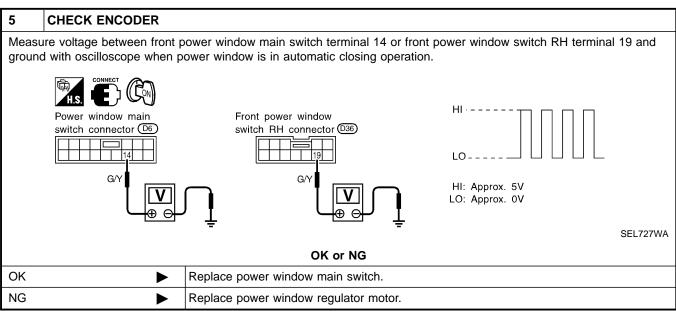

POWER WINDOW

SMART C/U - NEW Trouble Diagnoses (Cont'd)

MAIN SWITCH OPERATION CHECK **Passenger Side Operation**

GI NAEL0383S02

NAEL0383S0201

CHECK POWER WINDOW MAIN SWITCH OUTPUT SIGNAL MA (P) With CONSULT-II 1. Turn ignition switch to ON position. EM 2. Turn front power window main switch to ON (UP or DOWN). 3. Check signal between front power window main switch harness connector D6 terminal 8 (Y) and ground when power window is in open or close operation. (Use "SIMPLE OSCILLOSCOPE" in "SUB MODE" with CONSULT-II.) LC FE GL т 0.5 V/Div 500us/Div SEL161Y MT **⋈** Without CONSULT-II 1. Turn ignition switch to ON position. AT 2. Turn front power window main switch to ON (UP or DOWN). 3. Check signal between front power window main switch harness connector D6 terminal 8 (Y) and ground when power window is in open or close operation. TF Front power window main switch Voltage: Approx. AX

SEL162Y


OK or NG GO TO 2. OK NG Replace front power window main switch.

SU

BT

HA

SC

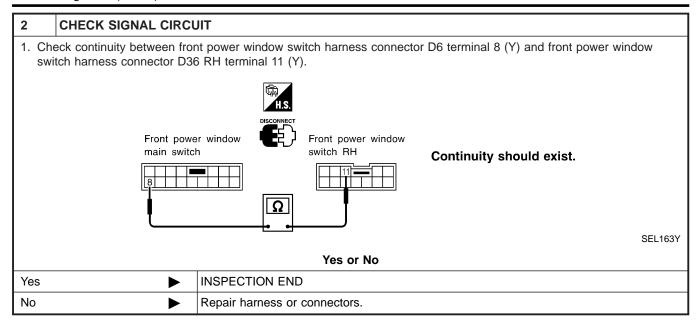

POWER WINDOW

Rear LH Side Window Operation

=NAEL0383S0202

GI

MA

LC

EC

FE

GL

MT

AT

TF

AX


SU

BR

ST

1 CHECK POWER WINDOW MAIN SWITCH OUTPUT SIGNAL

- 1. Turn ignition switch to ON position.
- 2. Check voltage between front power window main switch harness connector D6 terminal 12 or 13 and ground when rear power window LH side is in open or close operation.

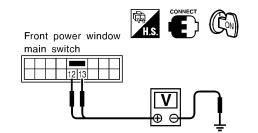

Terminals		Main switch condition		
(+)	(-)	Open	Close	
12	Ground	0V	12V	
13	Ground	0V	12V	

SEL164Y

OK or NG


OK	GO TO 2.
NG	Replace front power window main switch.

2 CHECK SIGNAL CIRCUIT

1. Check continuity between front power window main switch harness connector D6 terminal 12 and rear power window switch LH harness connector D52 terminal 4.

2. Check continuity between front power window main switch harness connector D6 terminal 13 and rear power window switch LH harness connector D52 terminal 3.



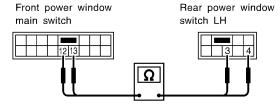

Continuity should exist.

SEL165Y

Yes or No					
Yes INSPECTION END					
No	>	Repair harness or connectors.			

BT

RS

HA

SC


 \mathbb{D}

Rear RH Side Window Operation

=NAEL0383S0203

1 CHECK POWER WINDOW MAIN SWITCH OUTPUT

- 1. Turn ignition switch to ON position.
- 2. Check voltage between front power window main switch harness connector D6 terminal 9 or 10 and ground when rear power window RH side is in open or close operation.

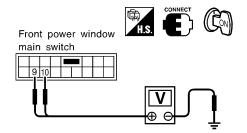

Terminals		Main switch condition				
(+) (-)		Open	Close			
9	Ground	0V	12V			
10	Ground	0V	12V			


SEL166Y

OK or NG

OK •	•	GO TO 2.
NG •	•	Replace front power window main switch.

2 CHECK SIGNAL CIRCUIT

- 1. Check continuity between front power window main switch harness connector D6 terminal 9 and rear power window switch RH harness connector D72 terminal 3.
- 2. Check continuity between front power window main switch harness connector D6 terminal 10 and rear power window switch RH harness connector D72 terminal 4.

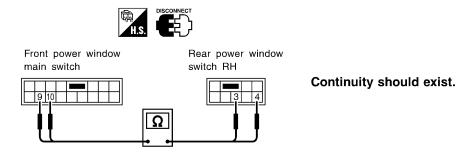

SEL167Y


Yes or No

Yes	INSPECTION END
No •	Repair harness or connectors.

Component Parts and Harness Connector Location

Component Parts and Harness Connector Location

NAFL0384

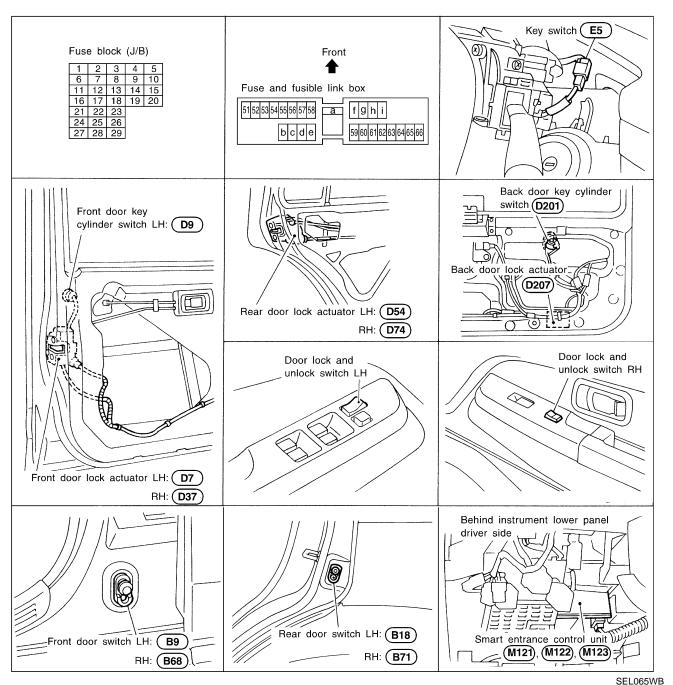

System Description

OPERATION

NAEL0385S01

The lock/unlock switch (LH and RH) on door trim can lock and unlock all doors.

With the door key inserted in the key cylinder on front LH or back door, turning it to "LOCK", will lock all doors; turning it to "UNLOCK" once unlocks the corresponding door; turning it to "UNLOCK" again within 5 seconds after the first unlock operation unlocks all of the other doors. (Signals from door key cylinder switch)

If the ignition key is in the ignition key cylinder and one or more of doors are open, setting the lock/unlock switch to "LOCK" locks the doors once but then immediately unlock them. (Combination signals from key switch and door switches) - (KEY REMINDER DOOR SYSTEM)

GI

MA

EM

LC

FE

GL

MIT

AT

TF


SU

AX


BT

NAEL0385

[DX

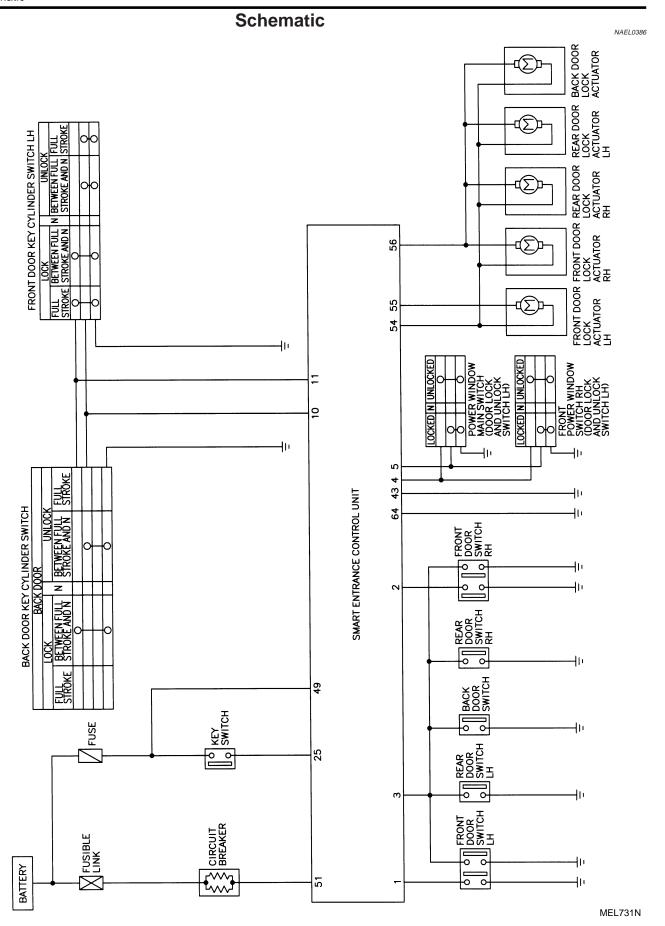

Wiring Diagram — D/LOCK

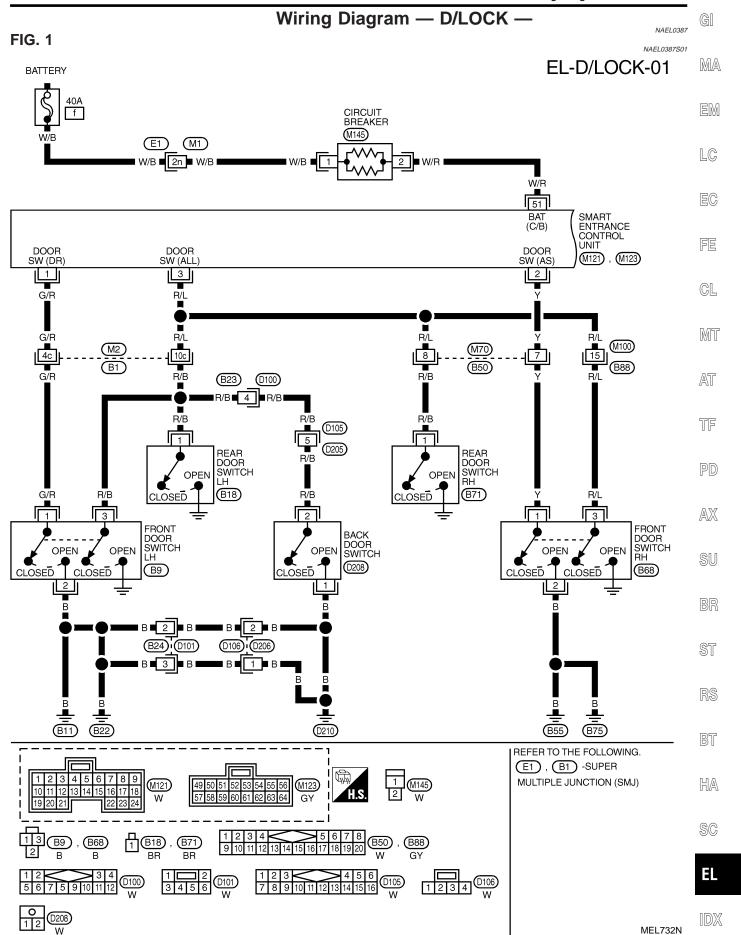

MEL733N

FIG. 2 NAFL0387S02 BATTERY EL-D/LOCK-02 **FUSE** BLOCK Refer to EL-POWER. 7.5A (J/B) 24 (M10) (E3) 1W 19U G/R KEY SWITCH INSERTED (E5) REMOVED 1 **E**1) M1W/R G/R W/R**■** 21r ■ W/R 25 49 BAT (FUSE) KEY SW SMART ENTRANCE CONTROL UNIT CENTRAL CENTRAL SW (UNLOCK) SW (LOCK) (M121), (M122), (M123) GND2 GND₁ 5 64 43 LG/R В В BR Ĭ LG/R LG/R BR 6 14 15 M112 (M67) (D13) BR LG/R BR LG/R 19 18 8 6 **FRONT** POWER WINDOW POWER WINDOW SWITCH RH (DOOR LOCK AND UNLOCK SWITCH RH) MAIN SWITCH (DOOR LOCK AND UNLOCK SWITCH LH) UN-LOCK LOCK UN-LOCK LOCK D6), (D15) (D36), (D43) 5 **D**4 **D34** 6 B 6 (M6)(M68) В В В (M77) M111 (M66) (M4) M147 REFER TO THE FOLLOWING. E1)-SUPER MULTIPLE 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 1 2 3 4 5 6 7 8 9 (M121) (M122) M123 JUNCTION (SMJ) 10 11 12 13 14 15 16 17 18 W GY GΥ M10 , E3 -FUSE BLOCK-43 44 45 JUNCTION BOX (J/B) D4 W E5 <u>D6</u>) (D15) 16 15 14 13 12 11 10 9 8 19 18 17 1 2 3 = 4 5 6 7 8 9 10 11 12 13 14 15 16 BR 1 2 D34 3 4 5 6 W 20 19 18 17 16 15 14 8 7 6 5 4



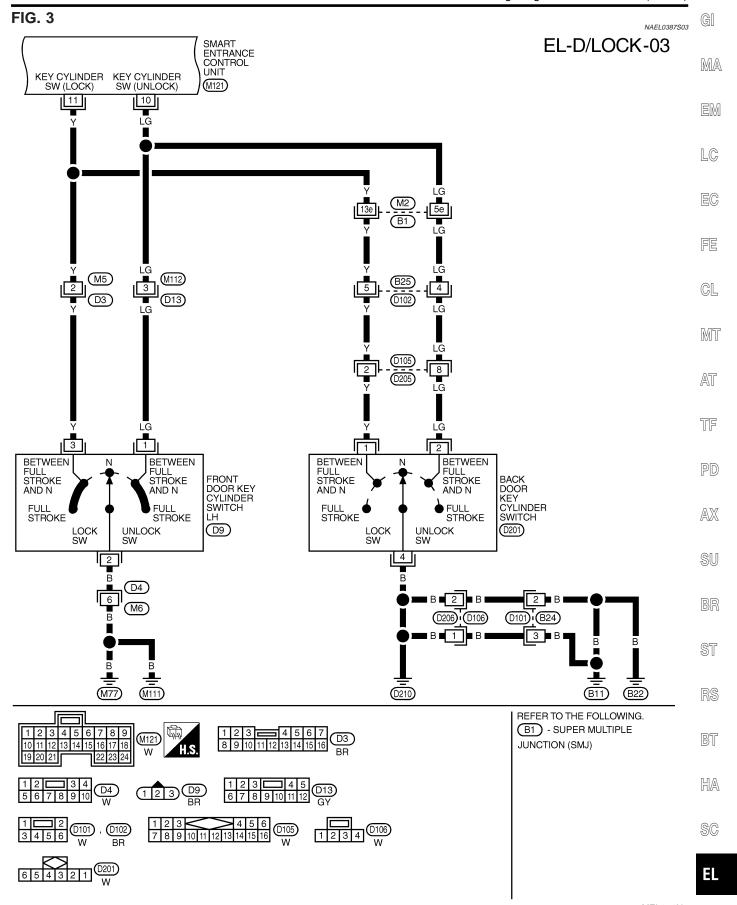


FIG. 4

NAEL0387S04

EL-D/LOCK-04

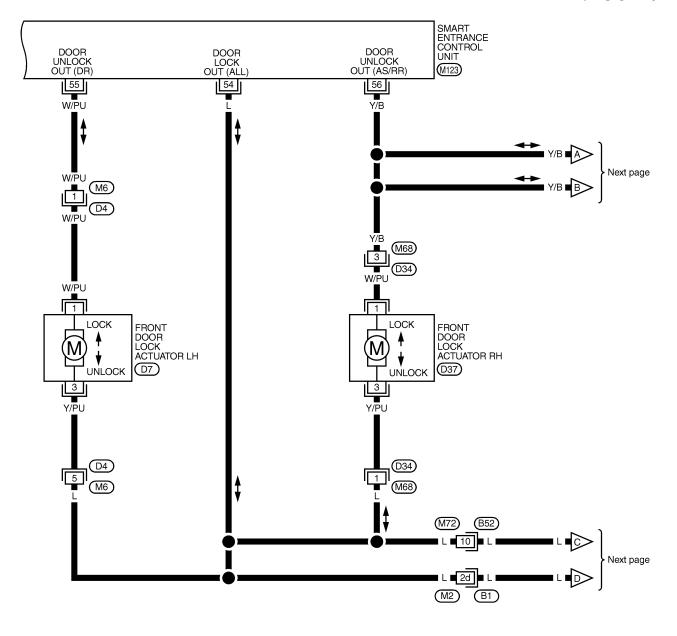

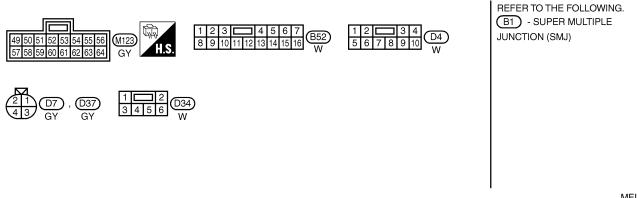

G[

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU


BR


ST


NAEL0387S05

FIG. 5

EL-D/LOCK-05

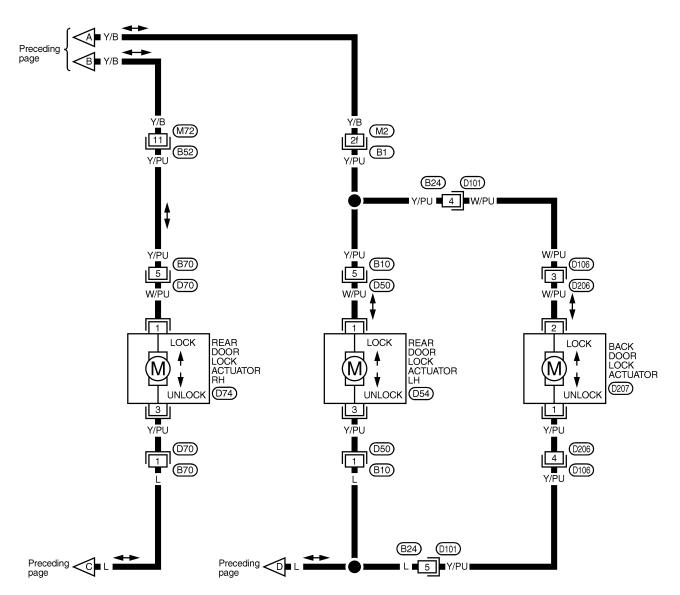

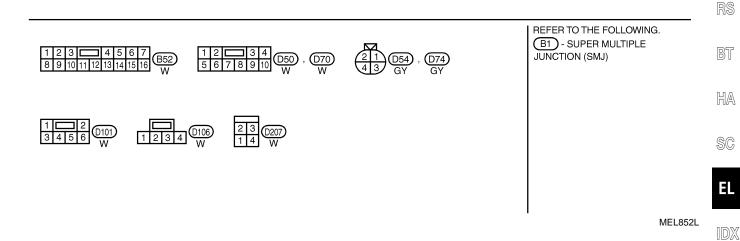

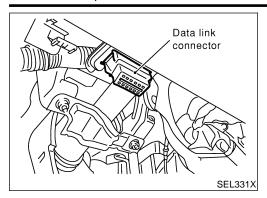


CONSULT-II Inspection Procedure "DOOR LOCK"

=NAEL0388

NAEL0388S01

- 1. Turn ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

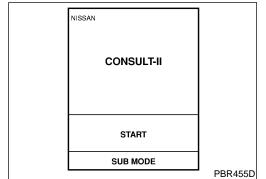


- 3. Turn ignition switch "ON".
- 4. Turn "START".

SELECT SYSTEM	
ENGINE	
A/T	
AIR BAG	
ABS	
SMART ENTRANCE	
	7
	SEL941W

5. Touch "SMART ENTRANCE".

SELECT TEST ITEM	
DOOR LOCK	
REAR DEFOGGER	
KEY WARN ALM	
LIGHT WARN ALM	
SEAT BELT ALM	
INT LAMP	
	SEL023X

6. Touch "DOOR LOCK".

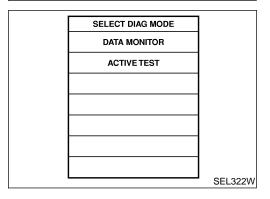

Select diagnosis mode.
 "DATA MONITOR" and "ACTIVE TEST" are available.

SMART C/U - NEW
CONSULT-II Application Items

CONSULT-II Application Items "DOOR LOCK" Data Monitor

NAEL0389

NAEL0389S01

NAEL0389S0101	

Monitored Item	Description	
KEY ON SW	Indicates [ON/OFF] condition of key switch.	EM
LOCK SW DR/AS	Indicates [ON/OFF] condition of lock signal from lock/unlock switch LH and RH.	
DOOR SW-RR	Indicates [ON/OFF] condition of door switch (Rear).	LC
UNLK SW DR/AS	Indicates [ON/OFF] condition of unlock signal from lock/unlock switch LH and RH.	
KEY CYL LK SW	Indicates [ON/OFF] condition of lock signal from key cylinder.	EG
KEY CYL UN SW	Indicates [ON/OFF] condition of unlock signal from key cylinder.	
LK BUTTON/SIG	Indicates [ON/OFF] condition of lock signal from remote controller.	FE
UN BUTTON/SIG	Indicates [ON/OFF] condition of unlock signal from remote controller.	@I
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.	GL
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.	MT
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.	ם מאח

Active Test

NAEL0389S0102

Test Item	Description			
ALL D/LK MTR	This test is able to check all door lock actuators lock operation. These actuators lock when "ON" on CONSULT-II screen is touched.			
DR D/UN MTR	This test is able to check front door lock actuator LH unlock operation. The actuator unlocks when "ON" on CONSULT-II screen is touched.			
NON DR D/UN	This test is able to check door lock actuators (except front door lock actuator LH) unlock operation. These actuators unlock when "ON" on CONSULT-II screen is touched.			

SU

 $\mathbb{A}\mathbb{X}$

TF

PD

BR

ST

RS

BT

HA

SC

EL


Trouble Diagnoses SYMPTOM CHART


NAEL0390

							NAEL0390S0
REFERENCE PAGE (EL-)	699	700	702	703	705	706	708
SYMPTOM	MAIN POWER SUPPLY AND GROUND CIRCUIT CHECK	DOOR SWITCH CHECK	KEY SWITCH (INSERT) CHECK	DOOR LOCK/UNLOCK SWITCH CHECK	FRONT DOOR KEY CYLINDER SWITCH CHECK	BACK DOOR KEY CYLINDER SWITCH CHECK	DOOR LOCK ACTUATOR CHECK
Key reminder door system does not operate properly.	X	X	X				X
Specific door lock actuator does not operate.	Х						Х
Power door lock does not operate with door lock and unlock switch (LH and RH) on door trim.	х			х			
Power door lock does not operate with front door key cylinder operation.	х				х		
Power door lock does not operate with back door key cylinder operation.	Х					Х	

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

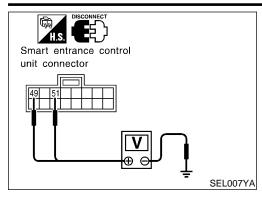

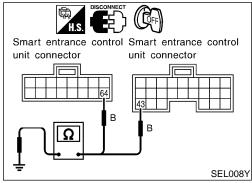

MAIN POWER SUPPLY AND GROUND CIRCUIT CHECK Main Power Supply Circuit Check NAEL0390S0201

Terminals			Ignition switch		
(+)					
Connector	Terminal (Wire color)		OFF	ACC	ON
M123	49 (G/R)	Cround	Battery	Battery voltage	Battery
	51 (W/R)	Ground	voltage		voltage

Ground Circuit Check

(+)			Continuity
Connector	Terminal (Wire color)	(–)	,
M122	43 (B)	Ground	Yes
M123	64 (B)	Ground	res

MA

EM

LG

NAEL0390S0202

FE

CL

MT

AT

PD

TF

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

EL

DOOR SWITCH CHECK

=NAEL0390S03

CHECK DOOR SWITCH INPUT SIGNAL

(With CONSULT-II

Check door switches ("DOOR SW-DR", "DOOR SW-AS", "DOOR SW-RR") in "DATA MONITOR" mode with CONSULT-II.

DATA MONIT	OR
MONITOR	
DOOR SW-RR DOOR SW-DR DOOR SW-AS	OFF OFF OFF

When any doors are open:

DOOR SW-DR ON DOOR SW-AS ON DOOR SW-RR ON

When any doors are closed:


DOOR SW-DR OFF DOOR SW-AS OFF DOOR SW-RR OFF

SEL009Y

(R) Without CONSULT-II

Check voltage between smart entrance control unit harness connector M121 terminals 1 (G/R), 2 (Y) or 3 (R/L) and ground.

Smart entrance control unit connector

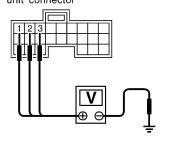


	Terminals		Condition	Voltage [V]
	(+)	(-)	Condition	voitage [v]
Front LH	-1	Ground	Open	0
door switch	Ground		Closed	Approx. 5
Front RH	2	Ground	Open	0
door switch		Ground	Closed	Approx. 5
Rear	3	Ground	Open	0
door switches	3	Ground	Closed	Approx. 5

SEL010Y

Refer to wiring diagram in EL-691.

OK or NG

OK •	Door switch is OK.
NG ▶	GO TO 2.

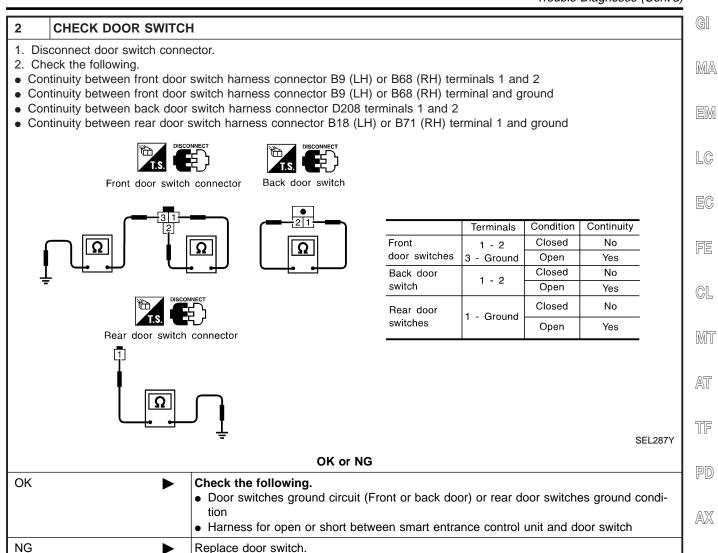

SU

BR

ST

BT

HA


KEY SWITCH (INSERT) CHECK

=NAEL0390S04

1 CHECK KEY SWITCH INPUT SIGNAL

(P) With CONSULT-II

Check key switch ("KEY ON SW") in "DATA MONITOR" mode with CONSULT-II.

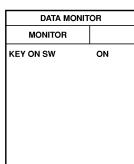

When key is inserted to ignition key cylinder:

KEY ON SW ON

When key is removed from ignition key cylinder:


KEY ON SW OFF


SEL315W

Without CONSULT-II

Check voltage between smart entrance control unit harness connector M122 terminal 25 (W/R) and ground.

: Approx.

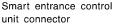

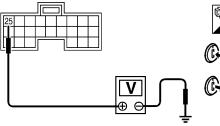



Condition of key switch: Key is inserted.

Approx. 12

Condition of key switch: Key is removed.

0

SEL011Y


Refer to wiring diagram in EL-692.

OK or NG

OK •	Key switch is OK.
NG ▶	GO TO 2.

2 CHECK KEY SWITCH (INSERT)

Check continuity between terminals 1 and 2.

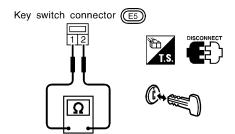

Continuity:

Condition of key switch: Key is inserted.

Yes

Condition of key switch: Key is removed.

No

SEL308X

OK or NG

OK

Check the following.

7.5A fuse [No. 24, located in fuse block (J/B)]
Harness for open or short between key switch and fuse
Harness for open or short between smart entrance control unit and key switch

Replace key switch.

SMART C/U - NEW Trouble Diagnoses (Cont'd)

DOOR LOCK/UNLOCK SWITCH CHECK

=NAEL0390S05

GI

MA

EM

LC

EC

FE

GL

MT

AT

TF

CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL

(P) With CONSULT-II

Check door lock/unlock switch ("LOCK SW DR/AS"/"UNLK SW DR/AS") in "DATA MONITOR" mode with CONSULT-II.

DATA MONI	TOR	
MONITOR		
LOCK SW DR/AS	OFF	
UNLK SW DR/AS	OFF	

When lock/unlock switch is turned to LOCK:

LOCK SW DR/AS ON

When lock/unlock switch is turned to UNLOCK:


UNLK SW DR/AS ON

SEL341W

◯ Without CONSULT-II

1. Disconnect smart entrance control unit harness connector .

2. Check continuity between smart entrance control unit harness connector M121 terminal 4 (LG/R) or 5 (BR) and ground.

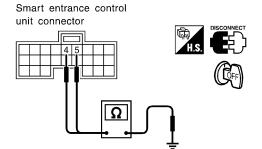

Terminals	Door lock/unlock switch (LH or RH) condition	Continuity
4 - Ground	Lock	Yes
	N and Unlock	No
5 - Ground	Unlock	Yes
	N and Lock	No

SEL012Y

Refer to wiring diagram in EL-692.

OK or NG

OK •	Door lock/unlock switch is OK.
NG ►	GO TO 2.

AX


ST

BT

HA

CHECK DOOR LOCK/UNLOCK SWITCH


- 1. Disconnect door lock/unlock switch connector.
- 2. Check continuity between each door lock/unlock switch terminals.
- Power window main switch (Door lock/unlock switch LH)

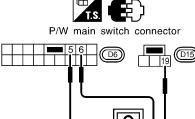

Condition	Terminals		
Condition	5	19	6
Lock			$\overline{}$
N	No continuity		
Unlock		- 0	

SEL310X

• Door lock/unlock switch RH

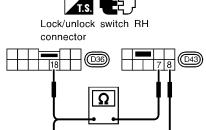

Condition	Terminals		
Condition	7	18	8
Lock	$\overline{\bigcirc}$		$\overline{}$
N	N	lo continuit	y
Unlock	$\overline{}$	$\overline{\bigcirc}$	

SEL311X

OK or NG

ОК	•	Check the following. Ground circuit for door lock/unlock switch Harness for open or short between door lock/unlock switch and smart entrance control unit connector
NG	>	Replace door lock/unlock switch.

SMART C/U - NEW Trouble Diagnoses (Cont'd)

FRONT DOOR KEY CYLINDER SWITCH CHECK

GI

(A) With CONSULT-II

Check front door key cylinder switch ("KEY CYL LK-SW"/"KEY CYL UN-SW") in "DATA MONITOR" mode with CONSULT-

CHECK DOOR KEY CYLINDER SWITCH INPUT SIGNAL (LOCK/UNLOCK SIGNAL)

OFF
OFF

When key inserted in front key cylinder is turned to LOCK:

KEY CYL LK-SW ON


When key inserted in front key cylinder is turned to UNLOCK:

KEY CYL UN-SW ON

SEL342W

(R) Without CONSULT-II

Check voltage between smart entrance control unit harness connector M121 terminals 10 (LG) or 11 (Y) and ground.

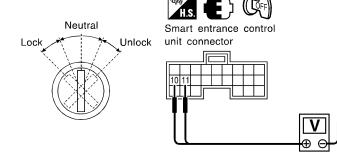

Terminals		Key position	Voltage V
(+)	(-)	Rey position	voitage v
11	Ground	Neutral/Unlock	Approx. 5
11	Ground	Lock	0
10	Ground	Neutral/Lock	Approx. 5
	Ground	Unlock	0

SEL013Y

Refer to wiring diagram in EL-693.

OK or NG

OK •	Door key cylinder switch LH is OK.	
NG ▶	GO TO 2.	

CHECK DOOR KEY CYLINDER SWITCH

- 1. Disconnect door key cylinder switch connector.
- 2. Check continuity between door key cylinder switch terminals.



Door key cylinder switch LH connector D9



- 1): Door unlock switch terminal
- (2): Ground terminal
- (3): Door lock switch terminal

21)			
ĪΊ	Terminals	Key position	Continuity
l I	LH: 3 - 2	Neutral/Unlock	No
	LII. 3 - 2	Lock	Yes
	 LH: 1 - 2	Neutral/Lock	No
		Unlock	Yes
↑ 			

SEL313X

OK or NG

OK Check the following. • Door key cylinder switch LH ground circuit • Harness for open or short between smart entrance control unit and door key cylinder switch LH NG Replace door key cylinder switch LH.

EL-705

MA

EM

LC

FE

GL

MT

AT

TF

AX

Bī

HA

BACK DOOR KEY CYLINDER SWITCH CHECK

=NAEL0390S07

CHECK BACK DOOR KEY CYLINDER SWITCH INPUT SIGNAL (LOCK/UNLOCK SIGNAL)

(P) With CONSULT-II

Check back door key cylinder switch ("KEY CYL LK-SW"/"KEY CYL UN-SW") in "DATA MONITOR" mode with CONSULT-II

DATA MONITOR				
OFF				
OFF				

When key inserted in back key cylinder is turned to LOCK:

KEY CYL LK-SW ON


When key inserted in back key cylinder is turned to UNLOCK:

KEY CYL UN-SW ON

SEL342WB

Without CONSULT-II

Check voltage between smart entrance control unit harness connector M121 terminals 10 (LG) or 11 (Y) and ground.

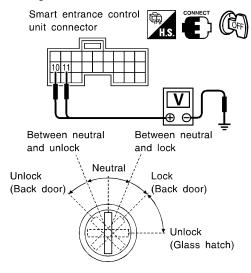

	Terminals		Key position	Voltage [V]
	(+)	(-)	noy position	voltago [v]
Back door	11 Gro	Ground	Between neutral and lock	0
			Other positions	Approx. 5
	10 Ground	Between neutral and unlock	0	
			Other positions	Approx. 5

SEL286Y

Refer to wiring diagram in EL-693.

OK or NG

ОК	•	Back door key cylinder switch is OK.
NG	>	GO TO 2.

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

G[

MA

LC

EG

FE

GL

MT


AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

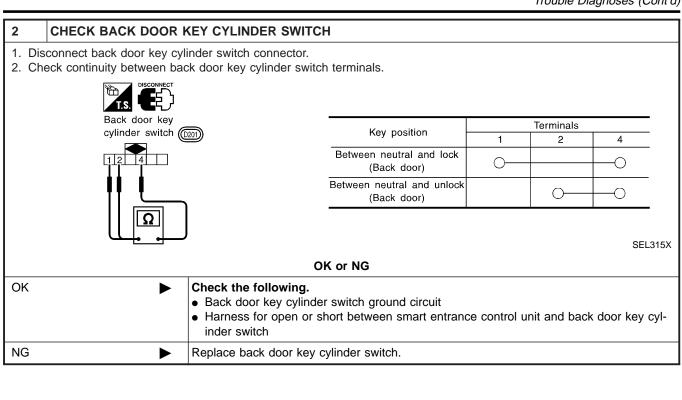

BT

HA

SC

DOOR LOCK ACTUATOR CHECK

=NAEL0390S08 **CHECK DOOR LOCK ACTUATOR OPERATION** With CONSULT-II 1. Select "ACTIVE TEST" in "DOOR LOCK" with CONSULT-II. 2. Select "ALL D/LK MTR" and touch "ON". 3. Then, select "DR D/UN MTR" and touch "ON". 4. Select "NON DR D/UN" and touch "ON". ACTIVE TEST ALL D/LK MTR (DR D/UN MTR OFF) Door lock motor should operate. (NON DR D/UN OFF) ON SEL343W NOTE: If CONSULT-II is not available, skip this procedure and go to the next step.

OK or NG

OK ▶	Door lock actuator is OK.	
NG ►	GO TO 2.	

Trouble Diagnoses (Cont'd)

CHECK DOOR LOCK ACTUATOR CIRCUIT

• Door lock actuator front LH
Check voltage between smart entrance control unit harness connector M145 terminal 54 (GY), 55 (W/B) and ground.

Smart entrance control unit connector

H.S.

CONNECTOR

H.S.

CONNECTOR


CONN

Door lock/unlock	Termi	inal No.	
switch condition	(+)	(-)	Voltage V
Lock	54	Ground	Approx. 12
Unlock	55	Ground	Αρρίολ. 12

SEL014Y

• Door lock actuator front RH and rear Chcek voltage between smart entrance control unit harness connector M145 terminal 54 (GY), 56 (G/Y) and ground.

Smart entrance control unit connector

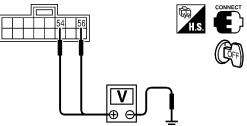

Door lock/unlock	ock Terminal No.		Voltage V	
switch condition	(+)	(-)	voltage v	
Lock	54	Ground	Approx. 12	
Unlock	56	Ground		

SEL015Y

Refer to wiring diagram in EL-694.

OK or NG

ı	OK	GO TO 2.
	NG	Replace smart entrance control unit. (Before replacing smart entrance control unit, perform "DOOR LOCK/UNLOCK SWITCH CHECK".)

 \mathbb{G}

MA

EM

LC

EC

FE

GL

MT

AT

TF

PD

AX

SU

BR

ST


RS

BT

HA

SC.

ΕL

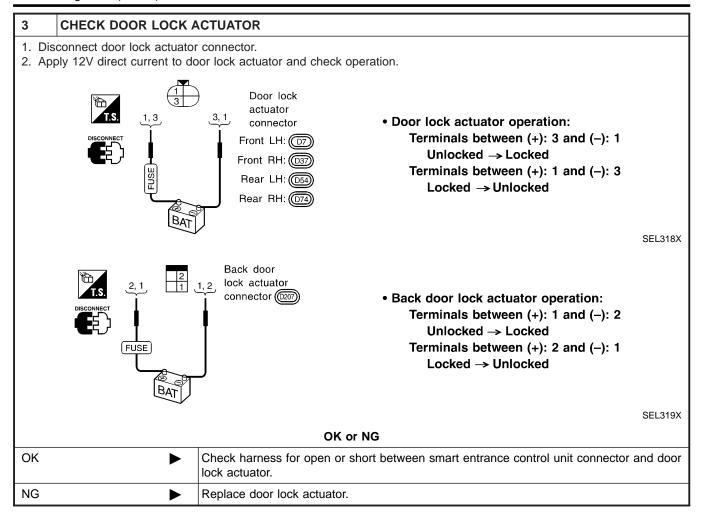

Component Parts and Harness Connector Location

Component Parts and Harness Connector Location

GI

MA

EM

LC

EG

GL


MIT

AT

TF

PD

NAFL0391

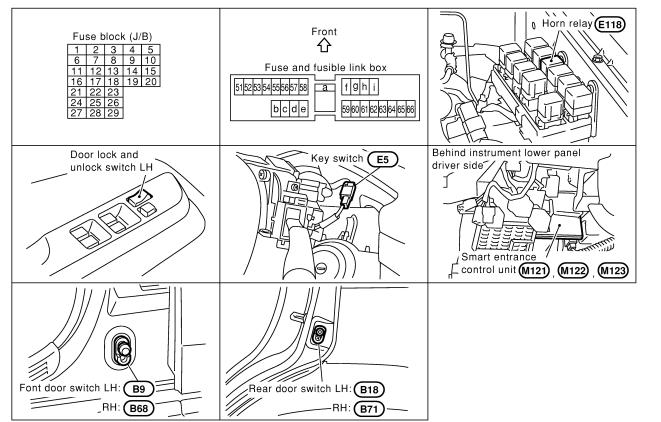

SEL290Y

SEL2901

SU

AX

System Description

Davisa is acceptical at a

INPUTS

Power is supplied at all times

- to smart entrance control unit terminal 49 and
- to key switch terminal 2
- through 7.5A fuse [No. 24, located in the fuse block (J/B)].

When the key switch is ON (ignition key is inserted in key cylinder), power is supplied

- through key switch terminal 1
- to smart entrance control unit terminal 25.

When the front door switch LH is ON (door is OPEN), ground is supplied

- to smart entrance control unit terminal 1
- through front door switch LH terminal 1
- to front door switch LH terminal 2
- through body grounds B11, B22 and D210.

When the front door switch RH is ON (door is OPEN), ground is supplied

- to smart entrance control unit terminal 2
- through front door switch RH terminal 1
- to front door switch RH terminal 2
- through body grounds B55 and B75.

When the all doors switches are ON (door is OPEN), ground is supplied

NAEL0392 NAEL0392S01

@T

ST

RS

BT

HA

SC

EL

- to smart entrance control unit terminal 3
- through front door switches terminal 3
- to front door switches case grounds, and
- through rear door switches terminal 1
- to rear door switchs case grounds, and
- through back door switch terminal 2
- to back door switch terminal 1
- through body grounds B11, B22 and D210.

When lock/unlock switch LH is LOCK, ground is supplied

- to smart entrance control unit terminal 5
- through lock/unlock switch LH terminal 6, and
- through body grounds M77 and M111.

When lock/unlock switch LH is UNLOCK, ground is supplied

- to smart entrance control unit terminal 4
- through lock/unlock switch LH terminal 19, and
- through body grounds M77 and M111.

Remote controller signal is inputted to smart entrance control unit (The antenna of the system is combined with smart entrance control unit).

OPERATION NAEL0392S02

The multi-remote control system controls operation of the

- power door lock
- interior lamp
- panic alarm
- hazard and horn reminder

OPERATED PROCEDURE

NAEL0392S03

Power Door Lock Operation

Smart entrance control unit receives a LOCK signal from remote controller. Smart entrance control unit locks all doors with input of LOCK signal from remote controller.

When an UNLOCK signal is sent from remote controller once, driver's door will be unlocked.

Then, if an UNLOCK signal is sent from remote controller again within 5 seconds, all other door will be unlocked.

Hazard and Horn Reminder

NAEL0392S0302

Power is supplied at all times

- to horn relay terminals 1 and 3
- through 7.5A fuse (No. 52, located in the fusible link and fuse box), and
- to horn relay terminal 6
- through 10A fuse (No. 54, located in the fusible link and fuse box)

When smart entrance control unit receives LOCK or UNLOCK signal from remote controller with all doors closed, ground is supplied

- to horn relay terminal 2
- through smart entrance control unit terminal 42, and
- to smart entrance control unit terminals 47 and 48 from hazard warning lamp system.

Horn relay are now energized, and hazard warning lamp flashes and horn sounds as a reminder. The hazard and horn reminder has C mode (horn chirp mode) and S mode (non-horn chirp mode).

Operating function of hazard and horn reminder

	C mode (Horn chirp mode) Hazard warning lamp flash Horn sound		S mode (Non-horn chirp mode)	
			Hazard warning lamp flash	Horn sound
Lock	Twice	Once	Twice	_
Unlock	Once	_	_	_

MULTI-REMOTE CONTROL SYSTEM

SMART C/U - NEW
System Description (Cont'd)


How to change hazard and horn reminder mode

(P) With CONSULT-II

Hazard and horn reminder can be changed using "WORK SUPPORT" mode in "MULTI REMOTE ENT".

Without CONSULT-II

When LOCK and UNLOCK signals are sent from the remote controller for more than 2 seconds at the same time, the hazard and horn reminder mode is changed and hazard warning lamp flashes and horn sounds as follows:

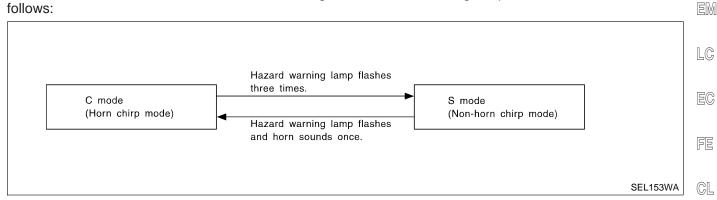

Interior Lamp Operation

When the following input signals are both supplied:

door switch CLOSED (when all the doors are closed);

driver's door LOCKED;

multi-remote control system turns on interior lamp (for 30 seconds) with input of UNLOCK signal from remote controller.

For detailed description, refer to "INTERIOR, SPOT, VANITY MIRROR AND LUGGAGE ROOM LAMPS" (EL-495).

Panic Alarm Operation

When key switch is OFF (when ignition key is not inserted in key cylinder), multi-remote control system turns on and off horn and headlamp intermittently with input of PANIC ALARM signal from remote controller.

The alarm automatically turns off after 25 seconds or when smart entrance control unit receives any signal from multi-remote controller.

For detailed description, refer to "VEHICLE SECURITY SYSTEM" (EL-743).

Auto Lock Operation

Smart entrance control unit will lock all the doors 5 minutes after receiving unlock signal from remote controller.

When any of the following operations is performed within 5 minutes, the auto lock operation is cancelled.

- Ignition switch is ON position.
- Open the doors.
- Received lock signal from remote controller.

NAEL0392S0303

9280303

GI

MA

AT

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

@T

RS


BT

HA

SC

Schematic

NAEL0393

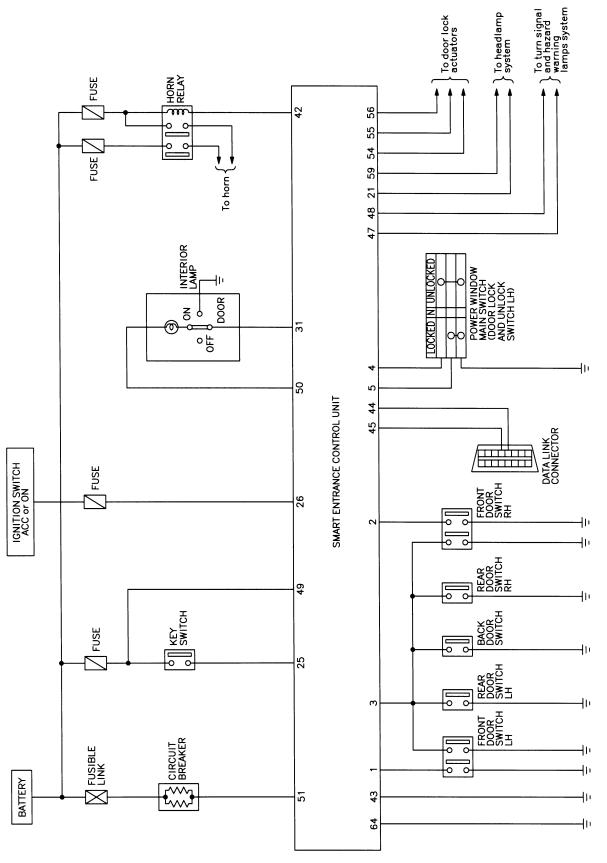

Wiring Diagram — MULTI —

MEL737N




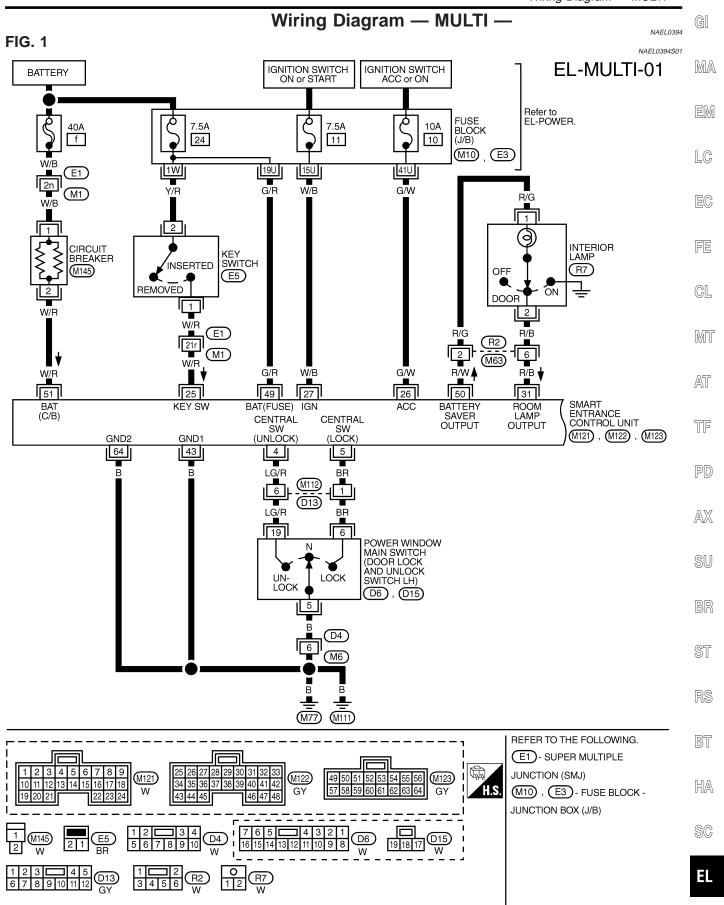


FIG. 2

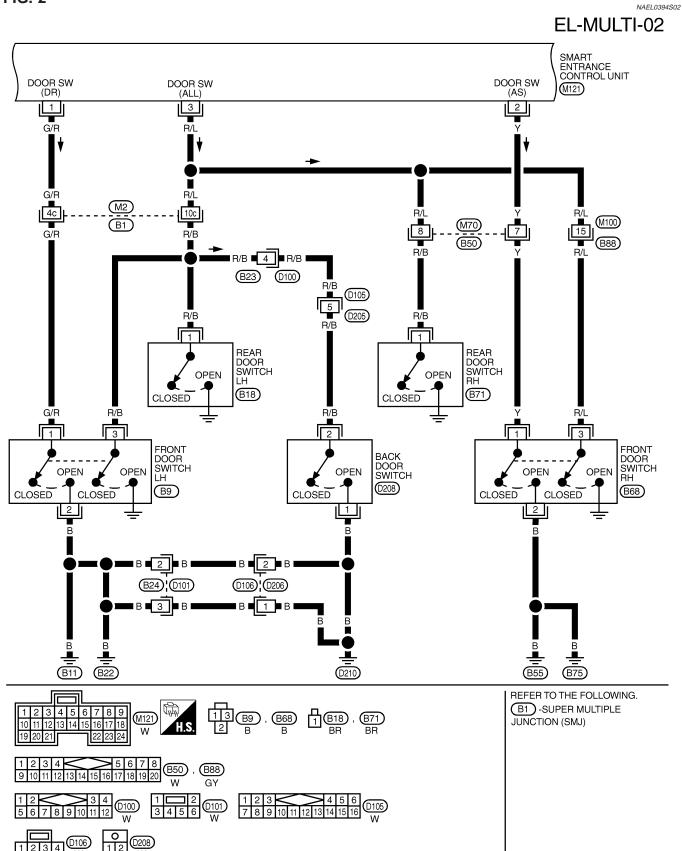

Wiring Diagram — MULTI — (Cont'd)

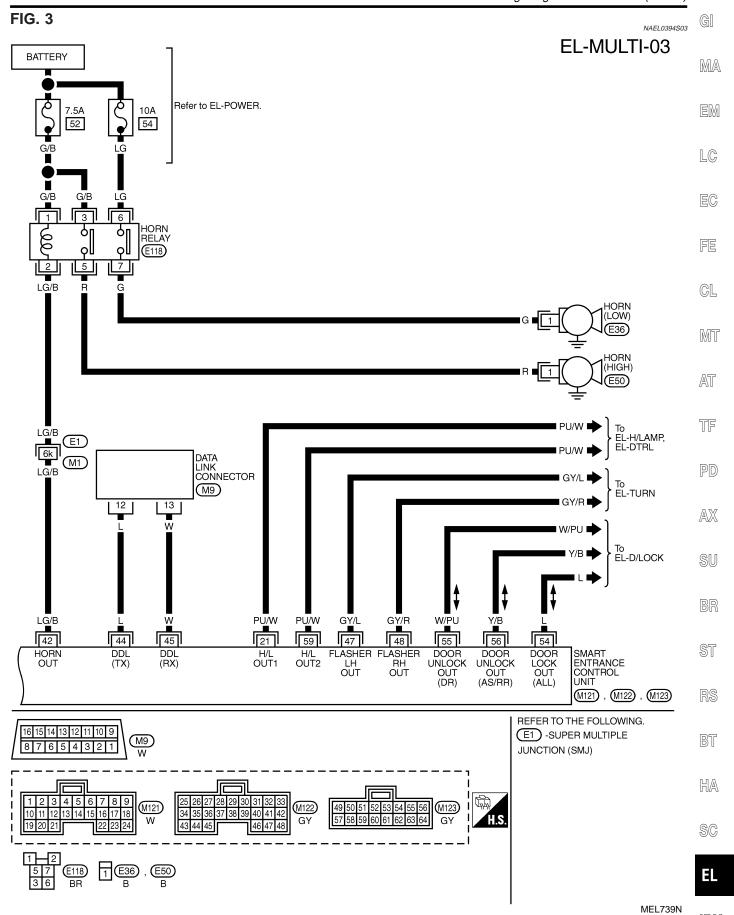

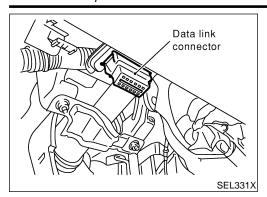


CONSULT-II Inspection Procedure "MULTI REMOTE ENT"

NAEL0395

NAEL0395S01

- 1. Turn ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

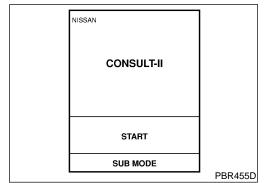


- 3. Turn ignition switch "ON".
- 4. Touch "START".

SELECT SYSTEM	
ENGINE	
A/T	
AIR BAG	
ABS	
SMART ENTRANCE	
	SEL941W

5. Touch "SMART ENTRANCE".

SELECT TEST ITEM	
BATTERY SAVER	
THEFT WAR ALM	
RETAINED PWR	
MULTI REMOTE ENT	
	SEL273W

6. Touch "MULTI REMOTE ENT".

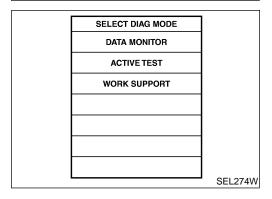

7. Select diagnosis mode. "DATA MONITOR", "ACTIVE TEST" and "WORK SUPPORT" are available.

MULTI-REMOTE CONTROL SYSTEM

SMART C/U - NEW
CONSULT-II Application Items

CONSULT-II	Application	Items
------------	--------------------	-------

"MULTI REMOTE ENT" Data Monitor

NAEL0396

G[

MA

NAEL0396S01 NAEL0396S0101

Monitored Item	Description	
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.	EM
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch.	_
ACC ON SW	Indicates [ON/OFF] condition of ignition switch in ACC position.	LG
KEY ON SW	Indicates [ON/OFF] condition of key switch.	_
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.	- EC
DOOR SW-AS	Indicates [ON/OFF] condition of door switch RH.	_
LOCK SW DR/AS	Indicates [ON/OFF] condition of lock signal from lock/unlock switch LH and RH.	
UNLK SW DR/AS	Indicates [ON/OFF] condition of unlock signal from lock/unlock switch LH and RH.	– – GL
KEY CYL LK SW	Indicates [ON/OFF] condition of lock signal from key cylinder switch.	- 66
LK BUTTON/SIG	Indicates [ON/OFF] condition of lock signal from remote controller.	- - MT
UN BUTTON/SIG	Indicates [ON/OFF] condition of unlock signal from remote controller.	- 100111
PANIC BTN	Indicates [ON/OFF] condition of panic signal from remote controller.	
LK/UN BTN ON	Indicates [ON/OFF] condition of lock/unlock signal at the same time from remote controller.	

Active Test

NAEL0396S0102

TF

Test Item	Description	_
INT/IGN ILLUM	This test is able to check interior lamp and ignition key hole illumination operation. The interior lamp and ignition key hole illumination are turned on when "ON" on CONSULT-II screen is touched.	- PD - AX
HAZARD	This test is able to check hazard reminder operation. The hazard lamp turns on when "ON" on CONSULT-II screen is touched.	
HORN	This test is able to check panic alarm and horn reminder operations. The alarm activate for 0.5 seconds after "ON" on CONSULT-II screen is touched.	- SU
HEAD LAMP	This test is able to check headlamps panic alarm operation. The headlamp illuminates for 0.5 seconds after "ON" on CONSULT-II screen is touched.	BR

·co402

Work Support

NAEL0396S0103

Test Item	Description	_
REMO CONT ID CONFIR	It can be checked whether remote controller ID code is registered or not in this mode.	_
REMO CONT ID REGIST	Remote controller ID code can be registered.	_
REMO CONT ID ERASUE	Remote controller ID code can be erased.	_
HZRD REM SET	Hazard and horn reminder mode can be changed in this mode. The reminder mode will be changed when "MODE SET" on CONSULT-II screen is touched.	_

HA

RS

BT

SC

EL

Trouble Diagnoses SYMPTOM CHART

NOTE:

NAEL0397

NAEL0397S01

- Always check remote controller battery before replacing remote controller.
- The panic alarm operation of multi-remote control system do not activate with the ignition key inserted in the ignition key cylinder.

Symptom	Diagnoses/service procedure	Reference page (EL-)
All function of multi-remote control system do not operate.	Remote controller battery and function check	722
	Power supply and ground circuit for smart entrance control unit check	723
	3. Replace remote controller. Refer to ID Code Entry Procedure. NOTE: If the result of remote controller function check with CONSULT-II is OK, remote controller is not malfunctioning.	734
The new ID of remote controller cannot be	Remote controller battery and function check	722
entered.	2. Key switch (insert) check	727
	3. Door switch check	725
	4. Door lock/unlock switch LH check	728
	5. Power supply and ground circuit for smart entrance control unit check	723
	6. Replace remote controller. Refer to ID Code Entry Procedure. NOTE: If the result of remote controller function check with CONSULT-II is OK, remote controller is not malfunctioning.	734
Door lock or unlock does not function.	Remote controller battery and function check	722
(If the power door lock system does not operate manually, check power door lock system. Refer to 698)	2. Replace remote controller. Refer to ID Code Entry Procedure. NOTE: If the result of remote controller function check with CONSULT-II is OK, remote controller is not malfunctioning.	734
Hazard and horn reminder does not activate prop-	Remote controller battery and function check	722
erly when pressing lock or unlock button of remote controller.	2. Hazard reminder check	730
	3. Horn reminder check* *: Horn chirp can be activated or deactivated. First check the horn chirp setting. Refer to "System Description", EL-711.	731
	4. Door switch check	725
	5. Replace remote controller. Refer to ID Code Entry Procedure. NOTE: If the result of remote controller function check with CONSULT-II is OK, remote controller is not malfunctioning.	734
Interior lamp operation do not activate properly.	Interior lamp operation check	733
	2. Door switch check	725

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

Symptom	Diagnoses/service procedure	Reference page (EL-)
Panic alarm (horn and headlamp) does not acti-	Remote controller battery and function check	722
vate when panic alarm button is continuously pressed.	2. Theft warning operation check. Refer to "PRELIMINARY CHECK" in "VEHICLE SECURITY SYSTEM".	754
	3. Key switch (insert) check	727
	4. Replace remote controller. Refer to ID Code Entry Procedure. NOTE: If the result of remote controller function check with CONSULT-II is OK, remote controller is not malfunctioning.	734

GI

MA

EM

LC

EC

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

EL

REMOTE CONTROLLER BATTERY AND FUNCTION CHECK

NAEL 0207502


CHECK REMOTE CONTROLLER BATTERY

Remove battery (refer to EL-293) and measure voltage across battery positive and negative terminals, (+) and (–). **Voltage [V]:**

2.5 - 3.0

NOTE:

Remote controller does not function if battery is not set correctly.

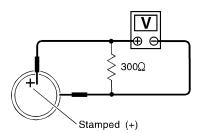

SEL237W


OK or NG

OK ▶	GO TO 2.
NG ►	Replace battery.

2 CHECK REMOTE CONTROLLER FUNCTION

(P) With CONSULT-II

Check remote controller function ("LK BUTTON/SIG", "UN BUTTON/SIG", "PANIC BTN", "UN BUTTON ON" and "LK/UN BTN ON") in "DATA MONITOR" mode with CONSULT-II.

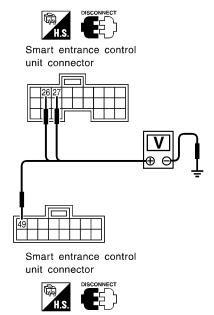


SEL281Y

OK or NG

OK •		Remote controller is OK. Further inspection is necessary. Refer to "SYMPTOM CHART", EL-720.
NG	>	Replace remote controller. Refer to ID Code Entry Procedure.

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

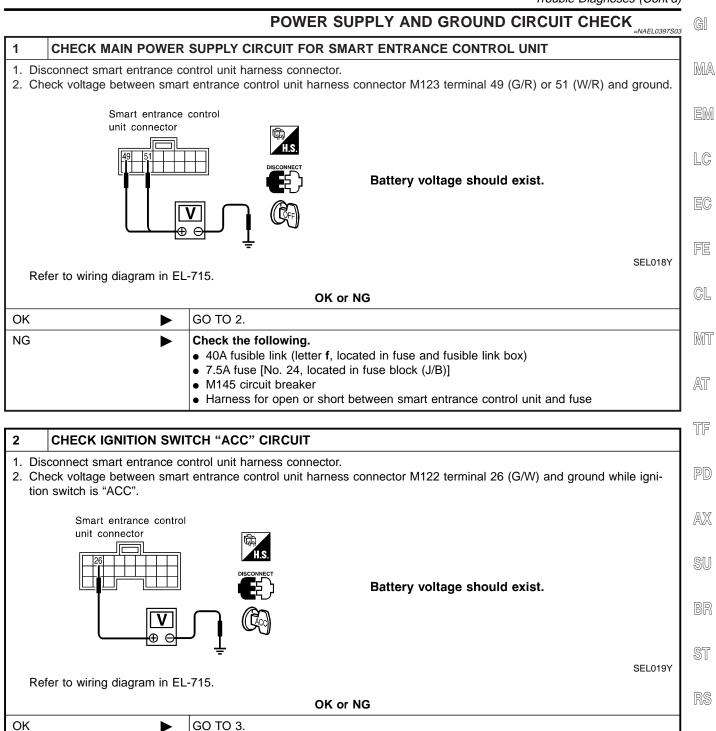

96

BT


HA

• 10A fuse [No. 10, located in fuse block (J/B)]

• Harness for open or short between smart entrance control unit and fuse

Check the following.

NG

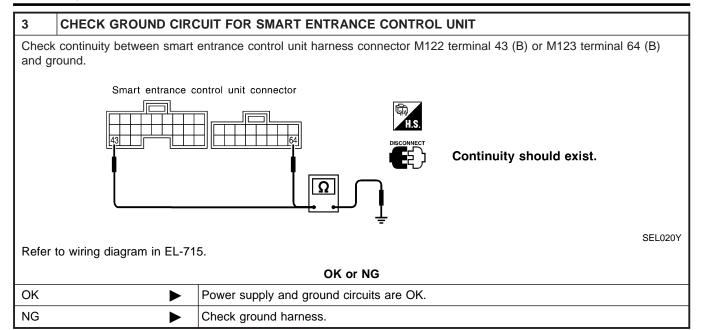

SMART C/U - NEW Trouble Diagnoses (Cont'd)

DOOR SWITCH CHECK

=NAEL0397S04

G[

MA

EM

LC

EG

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

CHECK DOOR SWITCH INPUT SIGNAL

(P) With CONSULT-II

Check door switches ("DOOR SW-RR", "DOOR SW-DR" and "DOOR SW-AS") in "DATA MONITOR" mode with CON-

DATA MONITOR				
MONITOR				
DOOR SW-RR	OFF			
DOOR SW-DR	OFF			
DOOR SW-AS	OFF			


	Monitor item	Condition	Condition
DOOR SW-RR	Rear doors switch	Open	ON
DOOR SW-RR		Closed	OFF
DOOR SW-DR	Door switch LH	Open	ON
DOOR SW-DR		Closed	OFF
DOOR SW-AS	Door switch RH	Open	ON
		Closed	OFF

SEL024Y

⊗ Without CONSULT-II

Check voltage between smart entrance control unit harness connector M121 terminals 1 (G/R), 2 (Y) or 3 (R/L) and ground.



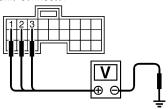





	Term	ninais		Valtage [V]	
	(+)	(-)	Condition	Voltage [V]	
Front door	4 (Open	0		
switch LH	'	Ground	Closed	Approx. 5	
Front door	2	Ground	Open	0	
switch RH			Closed	Approx. 5	
Rear and back	3	Ground	Open	0	
door switches	3	Ground	Closed	Approx. 5	
· · · · · · · · · · · · · · · · · · ·	•	·	· · · · · · · · · · · · · · · · · · ·		

SEL021YA

Refer to wiring diagram in EL-716.

OK or NG

NC	 Door switch is OK.
NG	GO TO 2.

BR

ST


RS

BT

HA

CHECK DOOR SWITCH 1. Disconnect door switch harness connector. 2. Check the following. • Continuity between front door switch harness connector B9 (LH) or B68 (RH) terminals 1 and 2 • Continuity between front door switch harness connector B9 (LH) or B68 (RH) terminal 3 and ground • Continuity between back door switch harness connector D208 terminals 1 and 2 Continuity between rear door switch harness connector B18 (LH) or B71 (RH) terminal 1 and ground Front door switch connector Back door switch Condition Continuity Terminals Front 1 - 2 Closed No door switches 3 - Ground Open Yes Back door Closed No 1 - 2 switch Open Yes Closed No Rear door 1 - Ground switches Open Yes Rear door switch connector SEL287Y OK or NG OK Check the following. • Door switch ground circuit (Front or back door) or door switch ground condition • Harness for open or short between smart entrance control unit and door switch NG Replace door switch.

SMART C/U - NEW

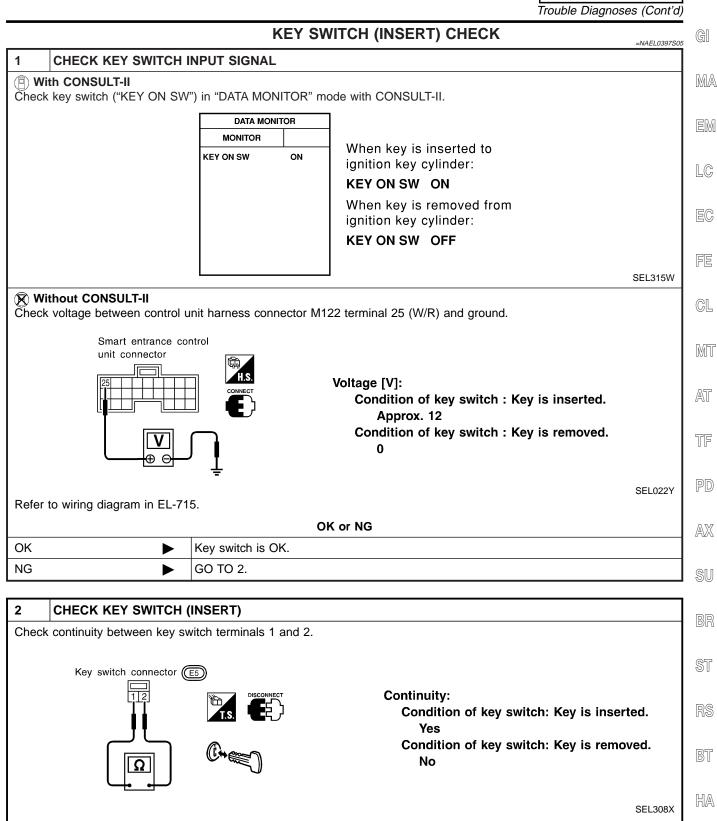

EL

SC

OK or NG

• Harness for open or short between key switch and fuse

• Harness for open or short between smart entrance control unit and key switch

• 7.5A fuse [No. 24, located in fuse block (J/B)]

Check the following.

Replace key switch.

OK

NG


DOOR LOCK/UNLOCK SWITCH LH CHECK

=NAEL0397S06

CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL

(With CONSULT-II

Check door lock/unlock switch ("LOCK SW DR/AS"/"UNLK SW DR/AS") in "DATA MONITOR" mode with CONSULT-II.

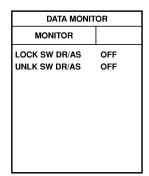

When lock/unlock switch is turned to LOCK:

LOCK SW DR/AS ON


When lock/unlock switch is turned to UNLOCK:

UNLK SW DR/AS ON

SEL341W

Without CONSULT-II

- 1. Disconnect smart entrance control unit harness connector.
- 2. Check continuity between smart entrance control unit harness connector M121 terminal 4 (LG/R) or 5 (BR) and ground.

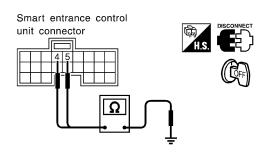


	Terminals	Door lock/unlock switch (LH or RH) condition	Continuity	
	5 - Ground	Lock	Yes	
5 - Ground	N and Unlock	No		
	4 - Ground	Unlock	Yes	
		N and Lock	No	

SEL025Y

Refer to wiring diagram in EL-715.

OK or NG

OK ►	Door lock/unlock switch is OK.
NG ►	GO TO 2.

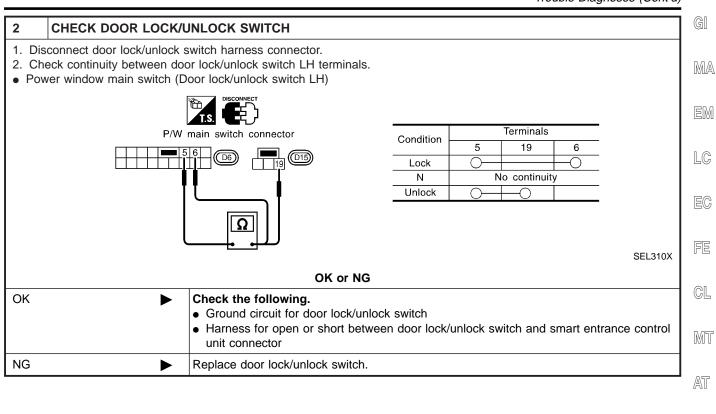

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR


ST


RS

BT


HA

HAZARD REMINDER CHECK

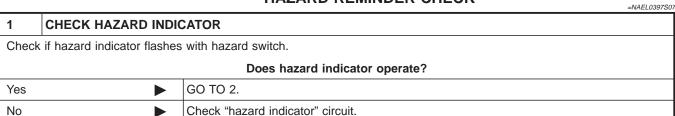

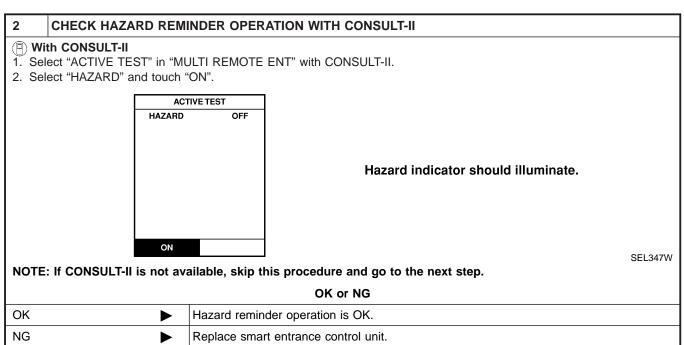


CHECK HAZARD REMINDER OPERATION WITHOUT CONSULT-II 3 **⋈** Without CONSULT-II Apply ground to smart entrance control unit harness connector M122 terminal 47 (GY/L) and 48 (GY/R). Smart entrance control unit connector Condition of lock or unlock button Voltage (V) Approx. Push. more than 0 - 12Do not push. 0 SEL027Y Refer to wiring diagram in EL-717. OK or NG OK System is OK. NG Replace smart entrance control unit.

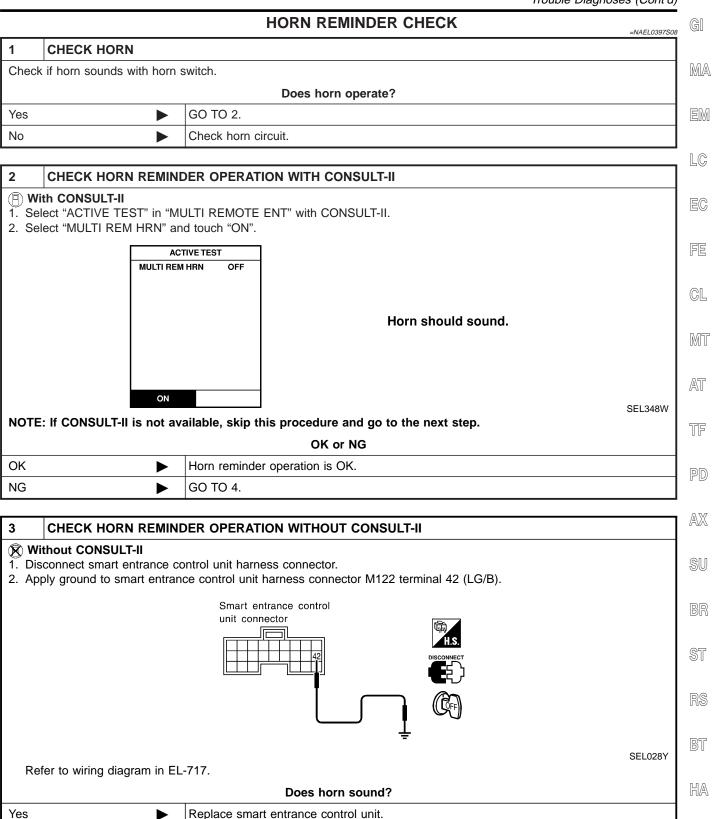



3

GO TO 4.

No

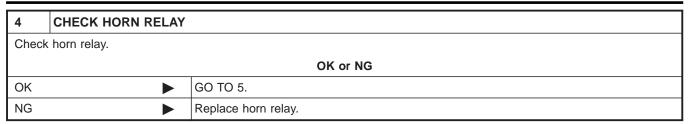

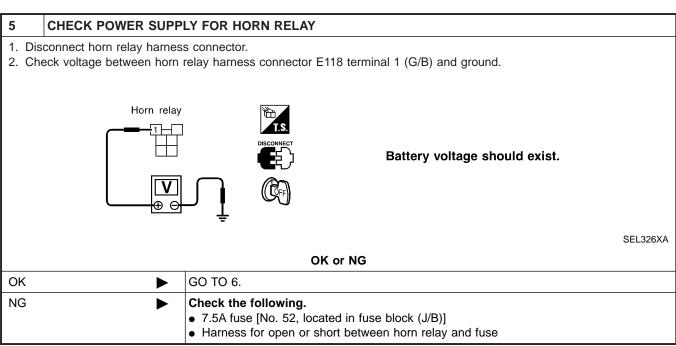

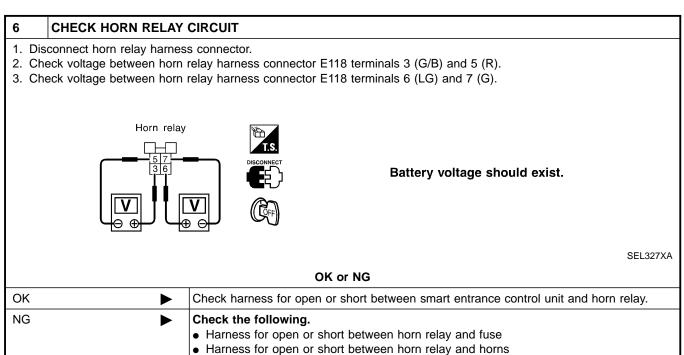

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

GI

MA

EM

FE

GL

MIT


AT

TF

AX

SU


INTERIOR ROOM LAMP OPERATION CHECK

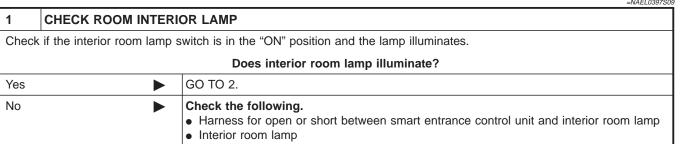

2 CHECK INTERIOR ROOM LAMP OPERATION (B) With CONSULT-II 1. Select "ACTIVE TEST" in "MULTI REMOTE ENT" with CONSULT-II. 2. Select "INT/IGN ILLUM" and touch "ON". ACTIVE TEST INT/IGN ILLUM OFF Interior room lamp should illuminate. SEL312Y

Without CONSULT-II

Push unlock button of remote controller with all doors closed and driver's door locked, and check voltage between smart entrance control unit harness connector M122 terminal 31 (R/B) and ground.

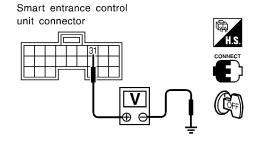

Voltage [V]:

Unlock button is pushed.
0 (For approx. 30 seconds.)
Unlock button is not pushed.
Battery voltage

SEL029Y

Refer to wiring diagram in EL-715.

OK or NG

OK		System is OK.
NG	>	Check harness open or short between smart entrance control unit and interior room lamp.

HA


BT

96


31.

ID Code Entry Procedure REMOTE CONTROLLER ID SET UP WITH CONSULT-II NOTE:

If a remote controller is lost, the ID code of the lost remote controller must be erased to prevent unauthorized use. When the ID code of a lost remote controller is not known, all controller ID codes should be erased. After all ID codes are erased, the ID codes of all remaining and/or new remote controllers must be re-registered.

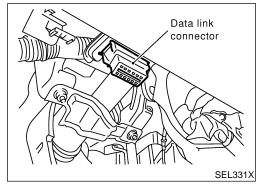


- Turn ignition switch "OFF".
- 2. Connect CONSULT-II to the data link connector.

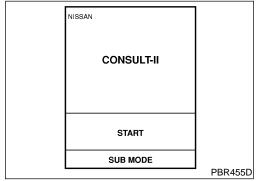

- 3. Turn ignition switch "ON".
- 4. Touch "START".

SELECT SYSTEM
ENGINE
A/T
AIR BAG
ABS
ALL MODE 4WD
SMART ENTRANCE

5. Touch "SMART ENTRANCE".

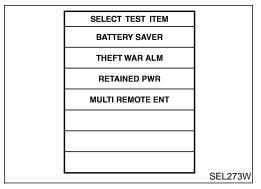

6. Touch "MULTI REMOTE ENT".

SMART C/U - NEW

ID Code Entry Procedure (Cont'd)

SELECT DIAG MODE	
DATA MONITOR	
ACTIVE TEST	
WORK SUPPORT	
	SEL274W

7. Touch "WORK SUPPORT".

GI

MA

LC

EG

SELECT WORK ITEM
REMO CONT ID CONFIR
REMO CONT ID REGIST
REMO CONT ID ERASUR
HZRD REM SET

8. The items are shown on the figure at left can be set up.

"REMO CONT ID CONFIR"

Use this mode to confirm if a remote controller ID code is registered or not.

"REMO CONT ID REGIST"
 Use this mode to register a remote controller ID code.

CL.

FE

NOTE

Register the ID code when remote controller or smart entrance control unit is replaced, or when additional remote controller is required.

er MT

"REMO CONT ID ERASUR"

Use this mode to erase a remote controller ID code.

AT

"HZRD REM SET"

Use this mode to activate or deactivate the hazard and horn reminder.

PD

SU

BR

ST

RS

BT


HA

SC

FΙ

REMOTE CONTROLLER ID SET UP WITHOUT CONSULT-II

NAEL0398S02

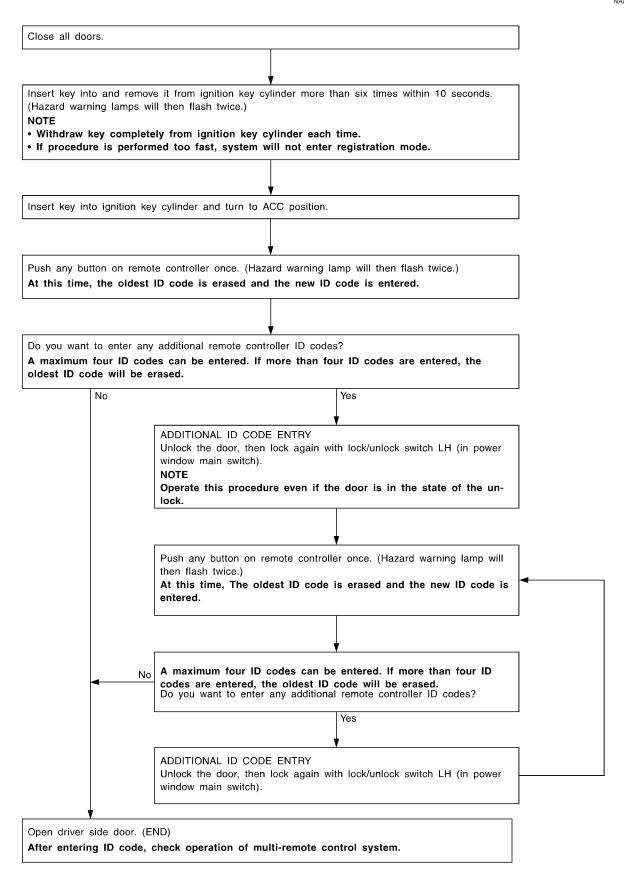

SMART C/U - NEW

ID Code Entry Procedure (Cont'd)

NOTE:

• If a remote controller is lost, the ID code of the lost remote controller must be erased to prevent unauthorized use. A specific ID code can be erased with CONSULT-II. However, when the ID code of a lost remote controller is not known, all controller ID codes should be erased. After all ID codes are erased, the ID codes of all remaining and/or new remote controllers must be re-registered.

To erase all ID codes in memory, register one ID code (remote controller) four times. After all ID codes are erased, the ID codes of all remaining and/or new remote controllers must be re-registered.

- When registering an additional remote controller, the existing ID codes in memory may or may not be erased. If four ID codes are stored in memory, when an additional code is registered, only the oldest code is erased. If less than four ID codes are stored in memory, when an additional ID code is registered, the new ID code is added and no ID codes are erased.
- If you need to activate more than two additional new remote controllers, repeat the procedure "Additional ID code entry" for each new remote controller.
- Entry of maximum four ID codes is allowed. When more than four ID codes are entered, the oldest ID code will be erased.
- Even if the same ID code that is already in the memory is input, the same ID code can be entered. The code is counted as an additional code.



n // n

-n.a

LC

EG

FE

MT

AT

TF

Ц

AX

911

__


HA

SC

EL

Remote Controller Battery Replacement

NAEL0399

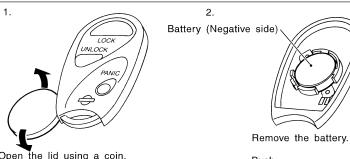

Open the lid using a coin.

4. Battery negative side facing upward

Insert the new battery.



Close the lid securely. Push the remote controller button two or three times to check its operation.

NOTE:

- Be careful not to touch the circuit board or battery terminal.
- The remote controller is water-resistant. However, if it does get wet, immediately wipe it dry.

SEL732W

SMART C/U - NEW

Component Parts and Harness Connector Location

Component Parts and Harness Connector Location

NAEL0400

G[

LC

EG


FE

GL

MT

AT

TF

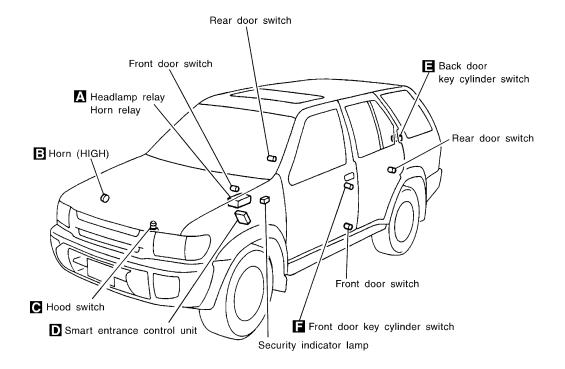

PD

 $\mathbb{A}\mathbb{X}$

BR

SU

ST


RS

BT

HA

SC

EL

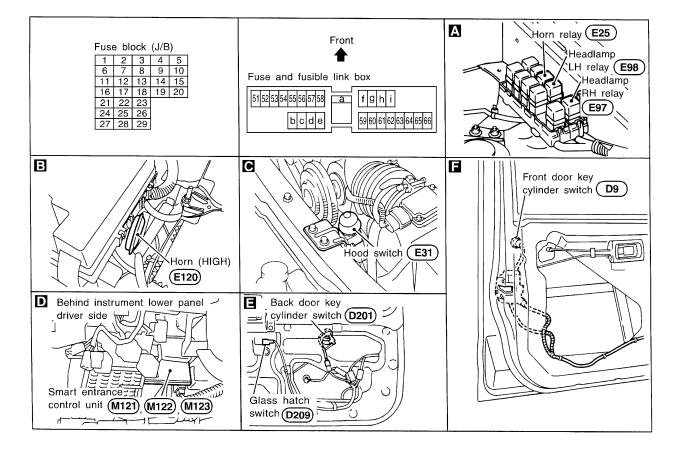

SMART C/U - NEW


System Description

DESCRIPTION

1. Operation Flow

NAEL0401

NAEL0401S01

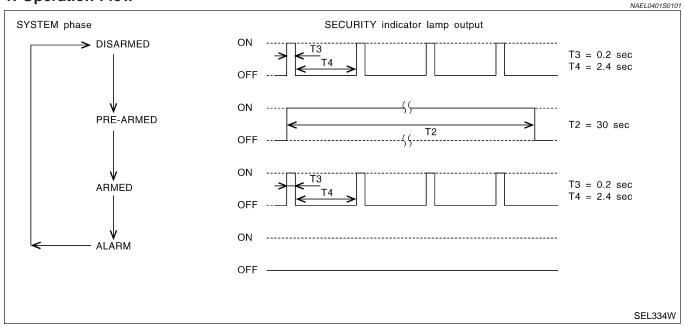

2. Setting The Vehicle Security System

NAEL0401S0102

Initial condition

1) Ignition switch is in OFF position.

Disarmed phase

When the vehicle security system is in the disarmed phase, the security indicator lamp blinks every 2.6 seconds.

Pre-armed phase and armed phase

When the following operation 1) or 2) is performed, the vehicle security system turns into the "pre-armed" phase. (The security indicator lamp illuminates.)

- Smart entrance control unit receives LOCK signal from key cylinder switch or multi-remote controller after hood, glass hatch and all doors are closed.
- Hood, glass hatch and all doors are closed after front doors are locked by key, lock/unlock switch or multiremote controller.

After about 30 seconds, the system automatically shifts into the "armed" phase (the system is set). (The security indicator lamp blinks every 2.6 seconds.)

3. Canceling The Set Vehicle Security System

NAEL0401S0103

- When the following 1) or 2) operation is performed, the armed phase is canceled.

 1) Unlock the doors with the key or multi-remote controller.
- 2) Open the glass hatch with the key or multi-remote controller.

4. Activating The Alarm Operation of The Vehicle Security System

NAEL0401S0104

Make sure the system is in the armed phase. (The security indicator lamp blinks every 2.6 seconds.) When the following operation 1) or 2) is performed, the system sounds the horns and flashes the headlamps for about 50 seconds.

- 1) Engine hood, glass hatch or any door is opened during armed phase.
- Disconnecting and connecting the battery connector before canceling armed phase.

POWER SUPPLY AND GROUND

NAEL0401S02

Power is supplied at all times

- through 7.5A fuse [No. 24, located in the fuse block (J/B)]
- to security indicator lamp terminal 1, and
- to smart entrance control unit terminal 49.

SMART C/U - NEW

System Description (Cont'd) With the ignition switch in the ON or START position, power is supplied GI through 7.5A fuse [No. 11, located in the fuse block (J/B)] to smart entrance control unit terminal 27. MA With the ignition switch in the ACC or ON position, power is supplied through 10A fuse [No. 10, located in the fuse block (J/B)] to smart entrance control unit terminal 26. Ground is supplied to smart entrance control unit terminals 43 and 64 LC through body grounds M77 and M111. INITIAL CONDITION TO ACTIVATE THE SYSTEM NAEL0401S03 The operation of the vehicle security system is controlled by the doors, hood and glass hatch. Pattern A To activate the vehicle security system, the smart entrance control unit must receive signals indicating the doors, hood and glass hatch are closed. When a door is open, smart entrance control unit terminal 1, 2 or 3 receives a ground signal from each door GL switch. When the hood is open, smart entrance control unit terminal 6 receives a ground signal from terminal 1 of the hood switch MIT through body grounds E13 and E41. When the glass hatch is open, smart entrance control unit terminal 13 receives a ground signal AT from terminal 1 of the glass hatch switch through body grounds B11, B22 and D210. When smart entrance control unit receives LOCK signal from key cylinder switch or multi-remote controller and none of the described conditions exist, the vehicle security system will automatically shift to armed mode. Pattern B To activate the vehicle security system, the smart entrance control unit must receive signal indicating any door (including hood and glass hatch) is opened. When the front doors are locked with key, lock/unlock switch or multi-remote controller and then all doors are AX closed, the vehicle security system will automatically shift to armed mode. VEHICLE SECURITY SYSTEM ACTIVATION NAEL0401S04 Pattern A NAEL0401S0401 With all doors (including hood and glass hatch) close if the key is used to lock doors, terminal 11 receives a ground signal from terminal 3 of the key cylinder switch LH through body grounds M77 and M111. from terminal 1 of the back door key cylinder switch through body grounds B11, B22 and D210. If this signal, or lock signal from remote controller is received by the smart entrance control unit, the vehicle security system will activate automatically. Vehicle security system can be set even though all doors are not locked. Pattern B With any door (including hood and glass hatch) open if lock/unlock switch is used to lock doors, terminal 5 receives a ground signal

from terminal 6 of lock/unlock switch LH

- through body grounds M77 and M111, or
- from terminal 8 of lock/unlock switch RH
- through body grounds M4, M66 and M147, or

With any door (including hood and glass hatch) open if the key is used to lock doors, terminal 11 receives a ground signal

from terminal 3 of the key cylinder switch LH

EL

SC

System Description (Cont'd)

System Description (Cont'd)

- through body grounds M9, M25 and M87.
- from terminal 1 of the back door key cylinder switch
- through body grounds B11, B22 and D210.

If these signals and lock signal from remote controller are received by the smart entrance control unit, ground signals of terminals 1, 2 and 3 are interrupted and all doors are closed, the vehicle security system will activate automatically.

NOTE:

Vehicle security system can be set even though the rear door is not locked.

Once the vehicle security system has been activated, smart entrance control unit terminal 38 supplies ground to terminal 2 of the security indicator lamp.

The security lamp will illuminate for approximately 30 seconds and then blinks every 2.6 seconds. Now the vehicle security system is in armed phase.

VEHICLE SECURITY SYSTEM ALARM OPERATION

NAEL0401S05

The vehicle security system is triggered by

- opening a door
- opening the hood or the glass hatch
- detection of battery disconnect and connect.

Once the vehicle security system is in armed phase, if the smart entrance control unit receives a ground signal at terminal 1, 2, 3 (door switch), 13 (glass hatch switch) or 6 (hood switch), the vehicle security system will be triggered. The headlamps flash and the horn sounds intermittently. Power is supplied at all times

- through 7.5A fuse (No. 52, located in fuse and fusible link box)
- to horn relay terminals 1 and 3.
- through 10A fuse (No. 54, located in fuse and fusible link box)
- to horn relay terminal 6.
- through 20A fuse (No. 32, located in fuse and fusible link box)
- to headlamp LH relay terminal 6,
- through 15A fuse (No. 60, located in fuse and fusible link box)
- to headlamp LH relay terminals 1 and 3,
- through 20A fuse (No. 31, located in fuse and fusible link box)
- to headlamp RH relay terminal 6, and
- through 15A fuse (No. 59, located in fuse and fusible link box)
- to headlamp RH relay terminals 1 and 3.

When the vehicle security system is triggered, ground is supplied intermittently

- to headlamp (LH and RH) relay terminal 2 from smart entrance control unit terminals 21 and 59
- through smart entrance control unit terminals 43 and 64.

When headlamp relays (LH and RH) are energized and then power is supplied to headlamps (LH and RH). The headlamps flash intermittently.

When the vehicle security system is triggered, ground is supplied intermittently

- from smart entrance control unit terminal 42
- to horn relay terminal 2.

When horn relay are energized, then power is supplied to horn.

The horn sounds intermittently.

The alarm automatically turns off after 50 seconds but will reactivate if the vehicle is tampered with again.

VEHICLE SECURITY SYSTEM DEACTIVATION

EL0401S06

To deactivate the vehicle security system, a door or glass hatch must be unlocked with the key or remote controller.

When the key is used to unlock the door, smart entrance control unit terminal 10 receives a ground signal

- from terminal 1 of the LH key cylinder switch
- from terminal 2 of the back door key cylinder switch.

SMART C/U - NEW
System Description (Cont'd)

When the key is used to open the glass hatch, smart entrance control unit terminal 12 receives a ground signal from terminal 3 of the back door key cylinder switch.

G

When the smart entrance control unit receives either one of these signals or unlock signal from remote controller, the vehicle security system is deactivated. (Disarmed phase)

MA

PANIC ALARM OPERATION

AEL0401S07

Multi-remote control system may or may not operate vehicle security system (horn and headlamps) as required.

EM

When the multi-remote control system (panic alarm) is triggered, ground is supplied intermittently

• from smart entrance control unit terminals 21 and 59

LC

to headlamp (LH and RH) relay terminal 2

from smart entrance control unit terminal 42
to horn relay terminal 2.

EC

The headlamp flashes and the horn sounds intermittently.

. . __

The alarm automatically turns off after 25 seconds or when smart entrance control unit receives any signal from multi-remote controller.

GL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL

DX.


Schematic

NAEL0402

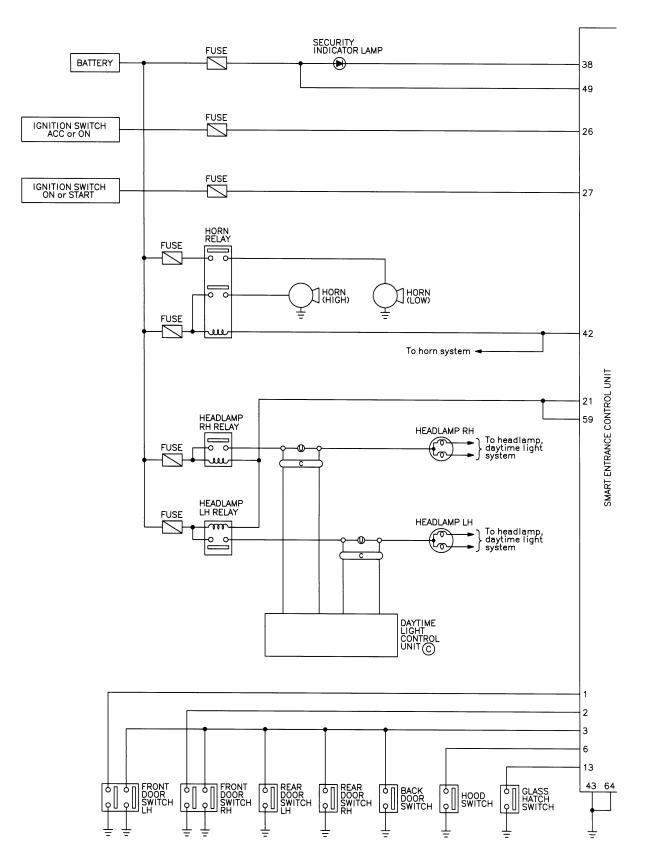

SMART C/U - NEW


Schematic (Cont'd)

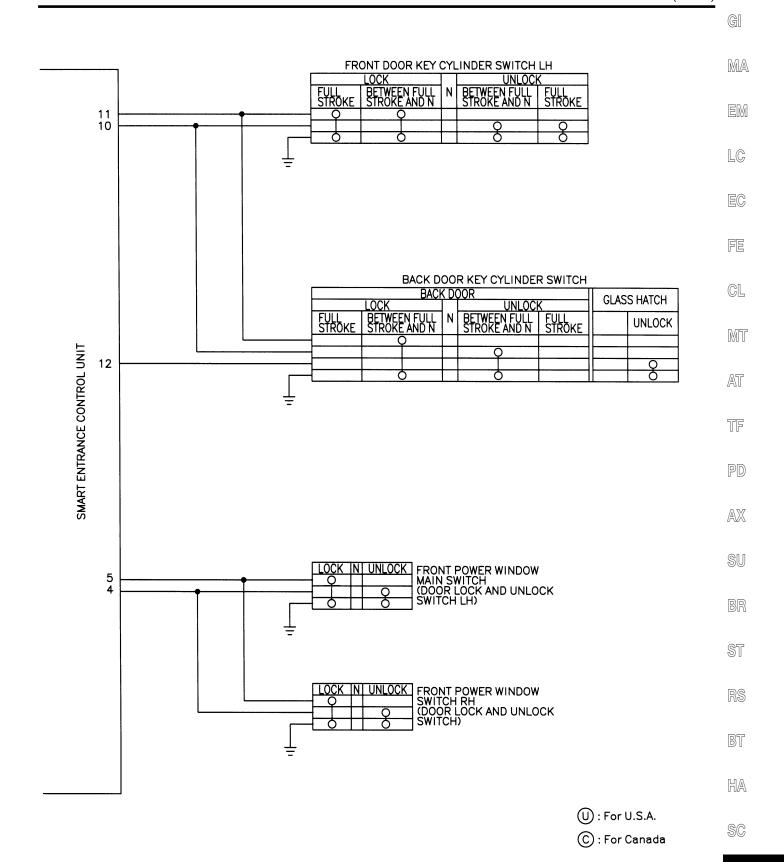


MEL741N


ΕL

Wiring Diagram — VEHSEC —

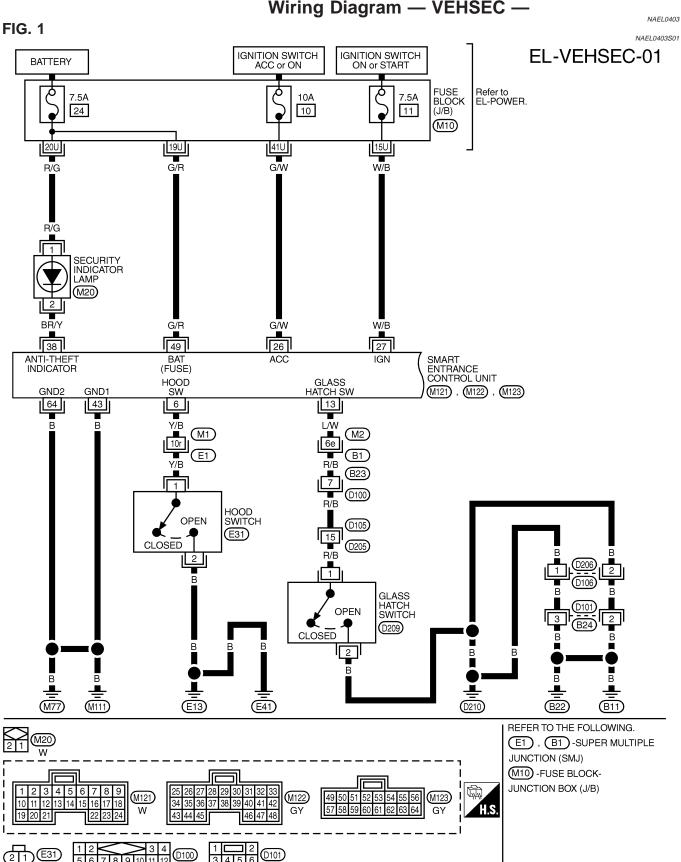



SMART C/U - NEW

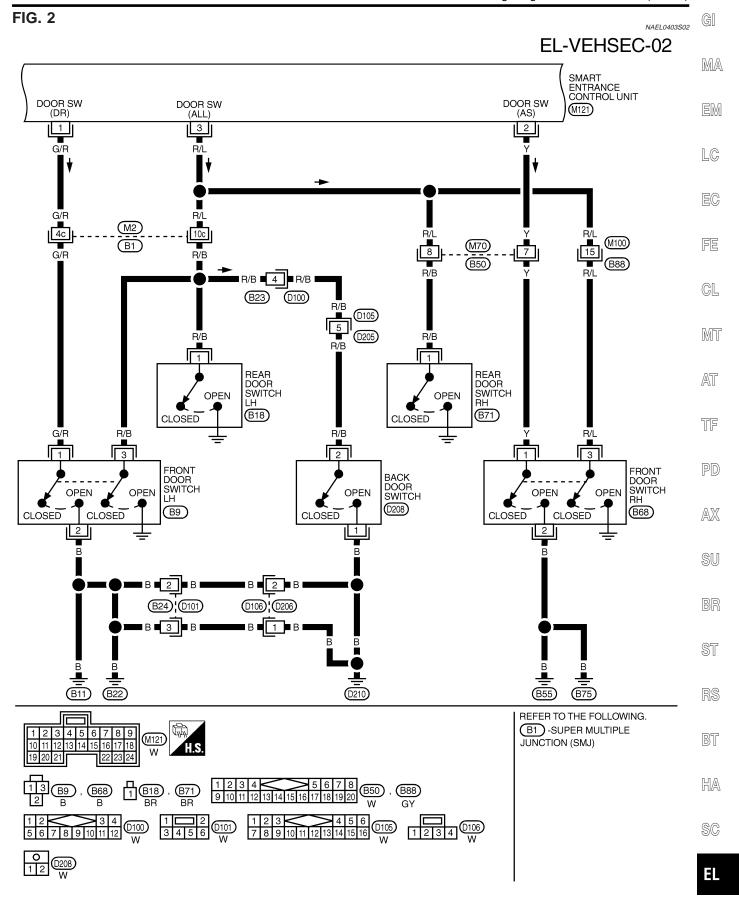

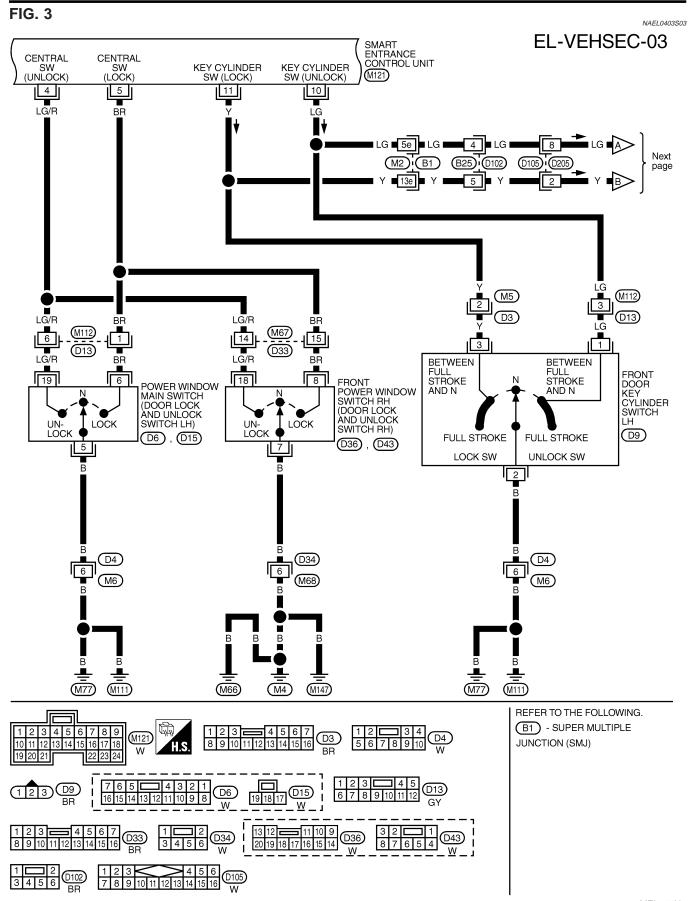


SMART C/U - NEW

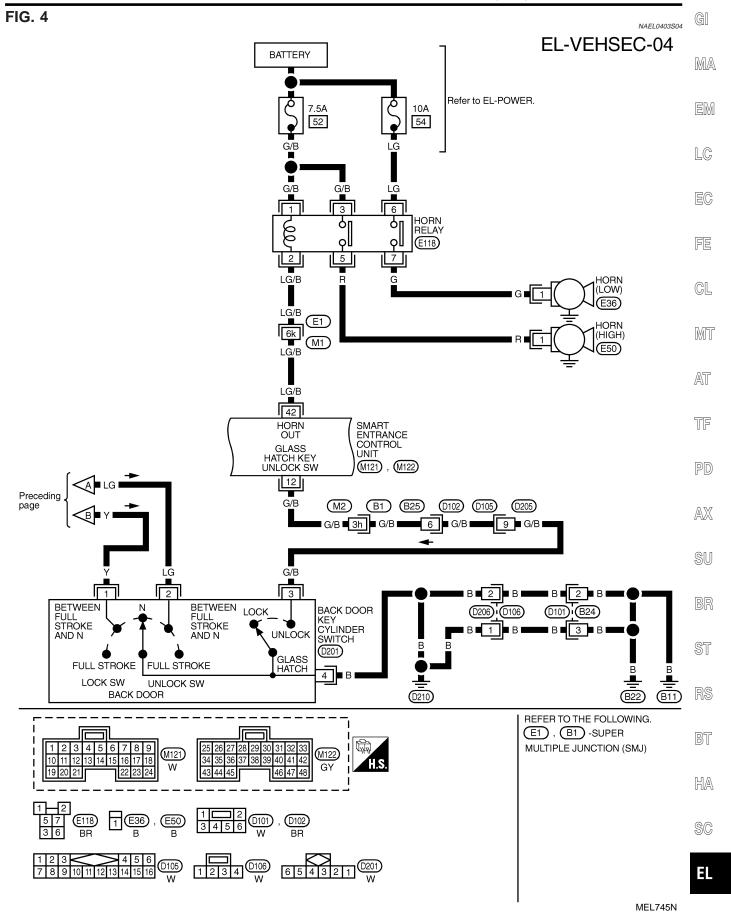

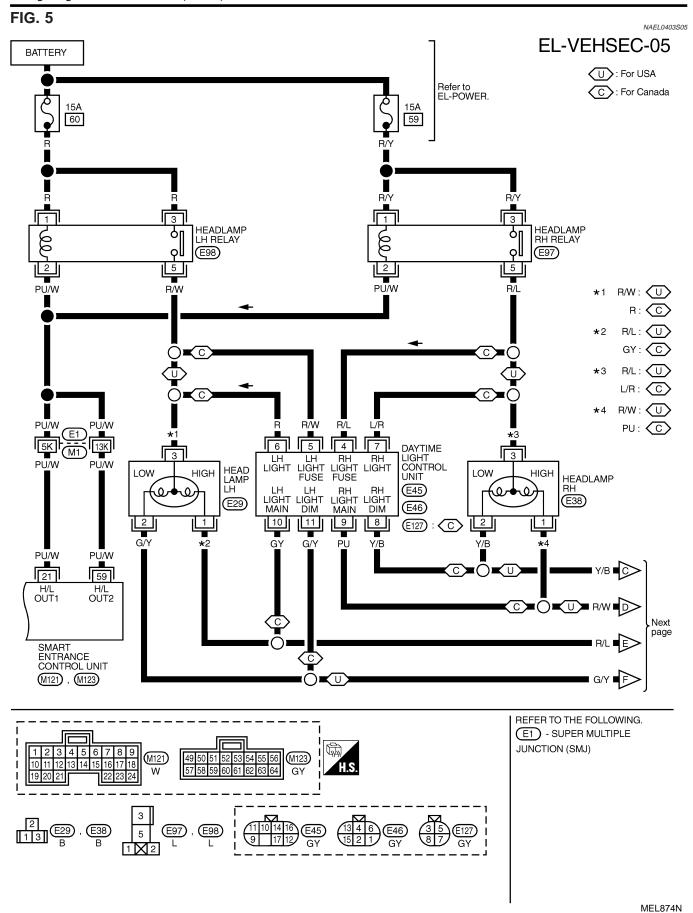

SMART C/U - NEW

Wiring Diagram — VEHSEC — (Cont'd)

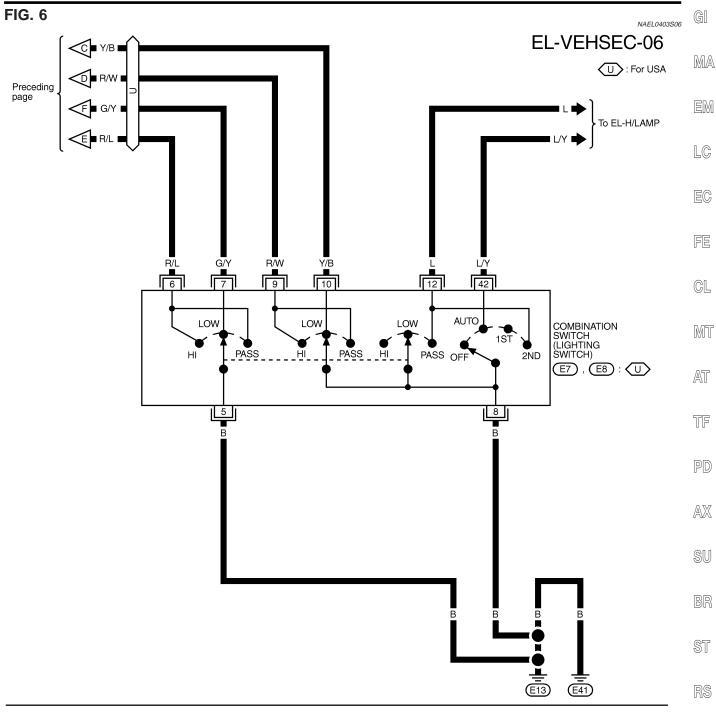

5 7 6 12 BR 3 42 8 10 9 W

HA

BT

SC

EL

MEL875N


Data link connector SEL331X

CONSULT-II Inspection Procedure "THEFT WAR ALM"

=NAEL0404

NAEL0404S01


- 1. Turn ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

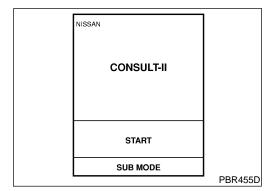


- 3. Turn ignition switch "ON".
- 4. Touch "START".

SELECT SYSTEM	
ENGINE	
A/T	
AIR BAG	
ABS	
SMART ENTRANCE	
	SEL941W

5. Touch "SMART ENTRANCE".

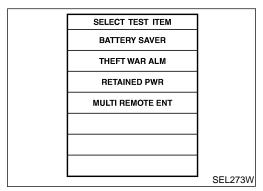

6. Touch "THEFT WAR ALM".

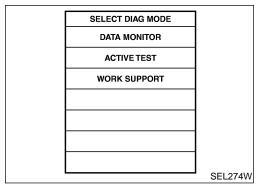

 Select diagnosis mode.
 "DATA MONITOR", "ACTIVE TEST" and "WORK SUPPORT" are available.

SMART C/U - NEW
CONSULT-II Application Item

	CONSULT-II Application Item				
THEFT WAR ALM"	NAEL0405S01				
Data Monitor	NAEL0405S0101				
Monitored Item	Description				
IGN ON SW	Indicates [ON/OFF] condition of ignition switch.				
ACC ON SW	Indicates [ON/OFF] condition of ignition switch in ACC position.				
KEY CYL LK SW	Indicates [ON/OFF] condition of lock signal from key cylinder switch.				
KEY CYL UN SW	Indicates [ON/OFF] condition of unlock signal from key cylinder switch.				
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch.				
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.				
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.				
TRUNK SW	Indicates [ON/OFF] condition of trunk switch.				
TRUNK KEY SW	Indicates [ON/OFF] condition of trunk key cylinder switch.				
HOOD SWITCH	Indicates [ON/OFF] condition of hood switch.				
LOCK SW DR/AS	Indicates [ON/OFF] condition of lock signal from door lock/unlock switch LH and RH.				
UNLK SW DR/AS	Indicates [ON/OFF] condition of unlock signal from door lock/unlock LH and RH.				
LK BUTTON/SIG	Indicates [ON/OFF] condition of lock signal from remote controller.				
UN BUTTON/SIG	Indicates [ON/OFF] condition of unlock signal from remote controller.				
TRUNK BTN/SIG	Indicates [ON/OFF] condition of trunk open signal from remote controller.				
active Test	NAEL0405S0102				
Test Item	Description				
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-II screen is touched.				
HORN	This test is able to check vehicle security alarm operation. The alarm will be activated for 0.5 seconds after "ON" on CONSULT-II screen is touched.				
HEADLAMP	This test is able to check vehicle security alarm headlamp operation. The headlamp illuminates for 0.5 seconds after "ON" on CONSULT-II screen is touched.				
Vork Support	NAEL0405S0103				
Test Item	Description				
THEFT ALM TRG	The switch which triggered theft warning alarm is recorded. This mode is able to confirm and erase the record of theft waning alarm. The trigger data can be erased by touching "CLEAR" on CONSULT-II screen.				

EL

HA


SC

SMART C/U - NEW

Trouble Diagnoses PRELIMINARY CHECK

=NAEL0406

The system operation is canceled by turning ignition switch to "ACC" at any step between START and ARMED in the following flow chart.

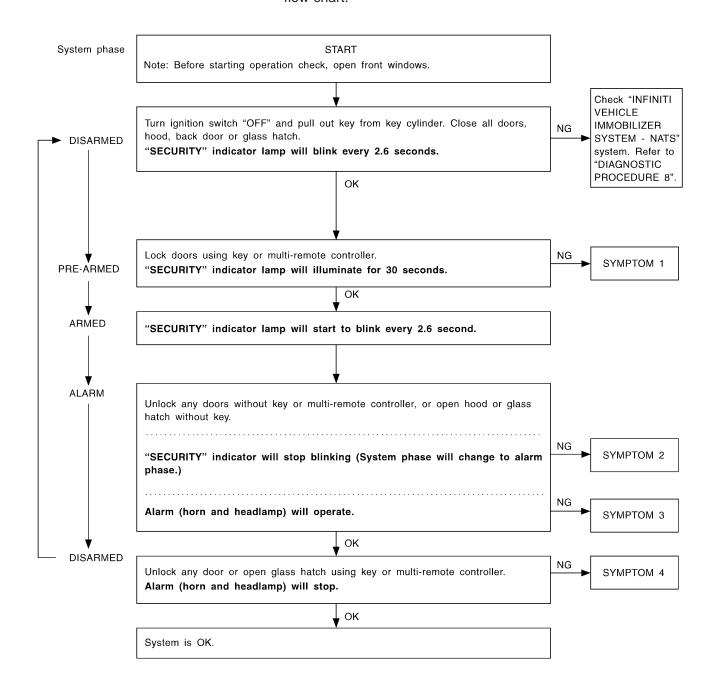

SEL733W

After performing preliminary check, go to symptom chart below.

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

SYMPTOM CHART NAEL0406S02						GI						
REFE	ERENCE PA	AGE (EL-)	754	756	757	762	764	765	769	771	720	
SYMPTOM		PRELIMINARY CHECK	POWER SUPPLY AND GROUND CIRCUIT CHECK	DOOR, HOOD AND GLASS HATCH SWITCH CHECK	SECURITY INDICATOR LAMP CHECK	DOOR KEY CYLINDER SWITCH CHECK	BACK DOOR KEY CYLINDER SWITCH CHECK	VEHICLE SECURITY HORN ALARM CHECK	VEHICLE SECURITY HEADLAMP ALARM CHECK	Check "MULTI-REMOTE CONTROL" system.	MA EM LC EC FE GL	
		curity indicator does not for 30 seconds.	Х	Х	Х	Х						AT
	Vehicle security system cannot be set by	All items	Х	Х	Х							
1		Door outside key	X				Х					TF
		Back door key	Х					Х				
	sy ke	Multi-remote control	Х								Х	PD
	*1 Vehicle security system does not alarm when	Any door is opened.	Х		Х							AX
2		Any door is unlocked without using key or multi-remote controller	X									SU
	Vehicle security alarm does not activate.	All function	Х		Х							BR
3		Horn alarm	Х						X			ST
		Headlamp alarm	Х							Х		
	Vehicle security system cannot be canceled by	Door outside key	Х				Х					RS
4		Back door key	Х					Х				BT
		Multi-remote control	Х								Х	HA

X : Applicable

Before starting trouble diagnoses above, perform preliminary check, EL-754.


Symptom numbers in the symptom chart correspond with those of preliminary check.








^{*1:} Make sure the system is in the armed phase.

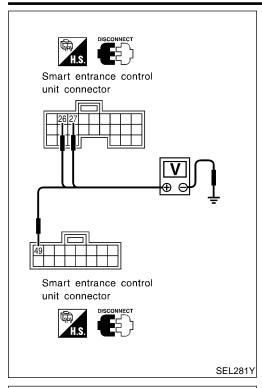

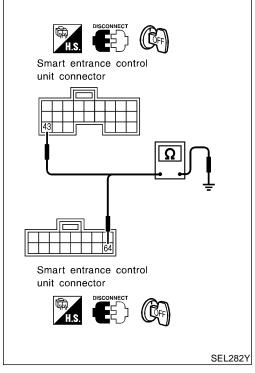

POWER SUPPLY AND GROUND CIRCUIT CHECK NAEL0406S03 Power Supply Circuit Check

	Terminals		Ignition switch position		
(+)					
Connector	Terminal (Wire color)	(-)	OFF	ACC	ON
M123	49 (G/R)	Ground	Battery voltage	Battery voltage	Battery voltage
M122	26 (G/W)	Ground	0V	Battery voltage	Battery voltage
M122	27 (W/B)	Ground	0V	0V	Battery voltage

If NG, check the following.

- 7.5A fuse [No. 24, located in fuse block (J/B)]
- 7.5A fuse [No. 11, located in fuse block (J/B)]
- 10A fuse [No. 10, located in fuse block (J/B)]
- Harness for open or short between smart entrance control unit and fuse.

Ground Circuit Check

NAEL0406S0302

(+)		Continuity
Connector	Terminal (Wire color)	(–)	,
M122	43 (B)	Ground	Voc
M123	64 (B)	Giouna	Yes

Trouble Diagnoses (Cont'd)

DOOR, HOOD AND GLASS HATCH SWITCH CHECK

Door Switch Check

1451 040000404

MA

EM

LC

EC

FE

GL

MT

AT

TF

AX

SU

BR

ST

1 PRELIMINARY CHECK

1. Turn ignition switch OFF and remove key from ignition key cylinder.

"SECURITY" indicator lamp should blink every 2.6 seconds.

- 2. Close all doors, hood and glass hatch.
- 3. Lock doors with multi-remote controller from inside the vehicle.
 - "SECURITY" indicator lamp should turn on for 30 seconds.
- 4. Unlock any door with the door lock knob and open the door within 30 seconds after door is locked.

"SECURITY" indicator lamp should turn off.

OK or NG

OK Door switch is OK, and go to hood switch check.		Door switch is OK, and go to hood switch check.	
	NG •	GO TO 2.	

2 CHECK DOOR SWITCH INPUT SIGNAL

(P) With CONSULT-II

Check door switches ("DOOR SW-RR", "DOOR SW-DR" and "DOOR SW-AS") in "DATA MONITOR" mode with CONSULT-II.


DATA MONITOR			
MONITOR			
DOOR SW-RR	OFF		
DOOR SW-DR	OFF		
DOOR SW-AS	OFF		


	Monitor item	Condition	Condition
DOOR SW-RR	Rear doors switch	Open	ON
DOOR SW-RR		Closed	OFF
DOOR SW-DR	Door switch LH	Open	ON
DOOR SW-DR		Closed	OFF
DOOR SW-AS	Door switch RH	Open	ON
		Closed	OFF

SEL024Y

(R) Without CONSULT-II

Check voltage between smart entrance control unit harness connector M121 terminals 1 (G/R), 2 (Y) or 3 (R/L) and ground.

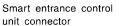

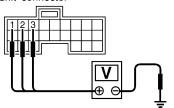





	Terminals		Condition	Valtage [V]
	(+)	(-)	Condition	Voltage [V]
Front door	1 G	Ground	Open	0
switch LH		Ground	Closed	Approx. 5
Front door	2	Ground	Open	0
switch RH			Closed	Approx. 5
Rear and back	3	Ground	Open	0
door switches			Closed	Approx. 5


SEL021YA


Refer to wiring diagram in EL-747.

OK or NG

OK	>	Door switch is OK, and go to hood switch check.
NG	>	GO TO 3.

FL

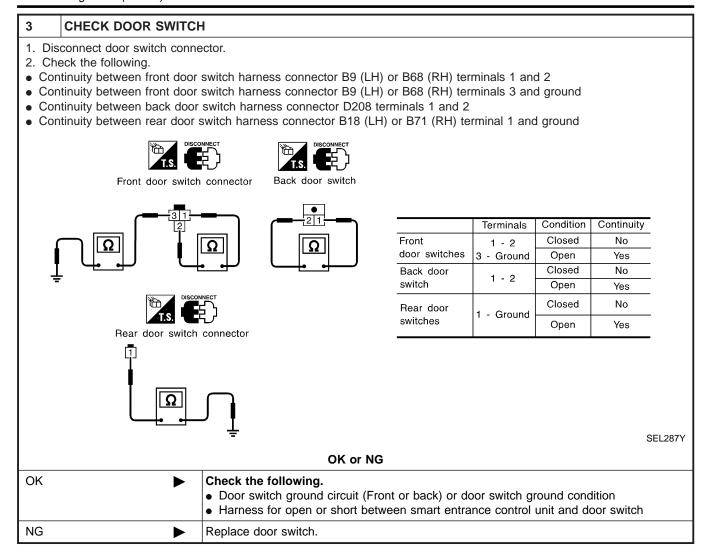


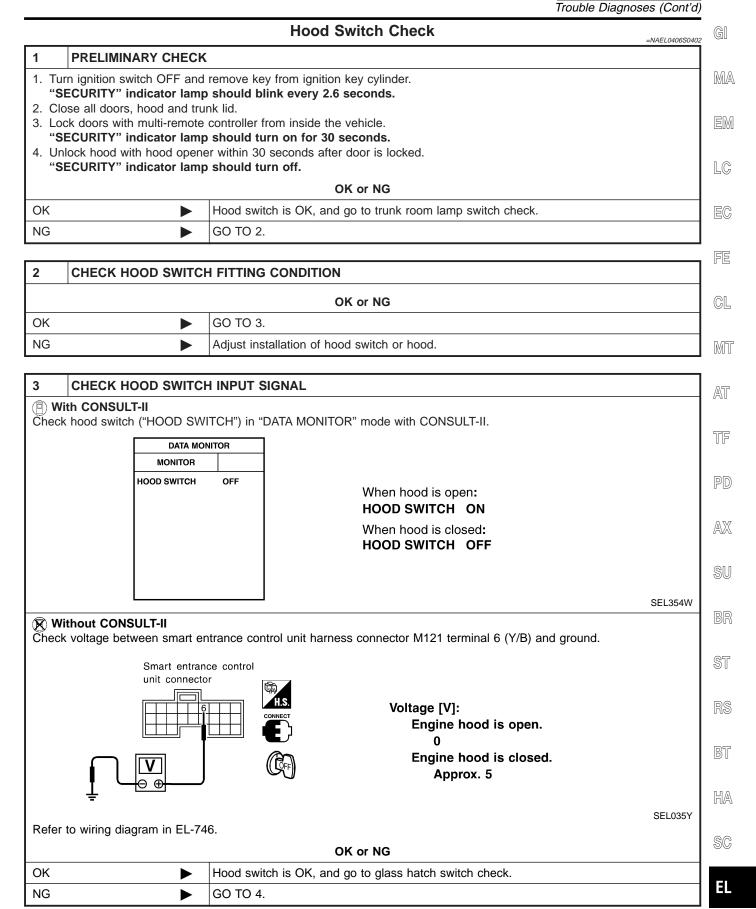

Trouble Diagnoses (Cont'd)

4	CHECK HOOD SWITCH				
	Disconnect hood switch connector. Check continuity between hood switch terminals 1 and 2.				
	Нос	Continuity: Condition: Pushed No Condition: Released Yes	EL338X		
	OK or NG				
ОК	OK Check the following. Hood switch ground circuit Harness for open or short between smart entrance control unit and hood switch				
NG	•	Replace hood switch.			

SMART C/U - NEW
Trouble Diagnoses (Cont'd)

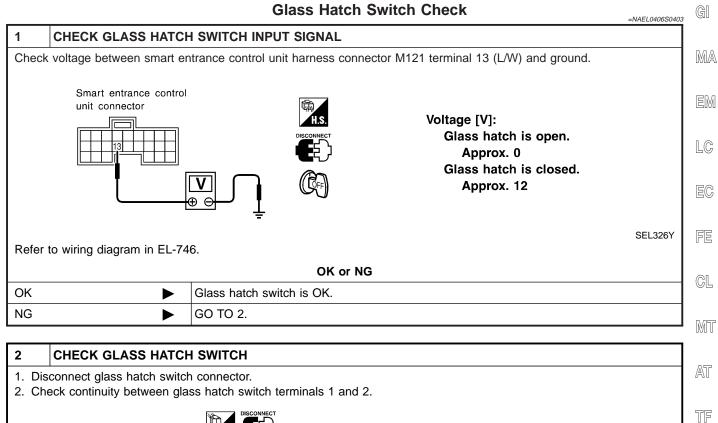

Z CHECK GE	A33 HATCH SWITCH			
 Disconnect glass hatch switch connector. Check continuity between glass hatch switch terminals 1 and 2. 				
	Glass hatch	Continuity:		
	switch connector (D209)	Condition: Closed		
	21	No		
		Condition: Open Yes		
	Ω	Tes		
		SEL340X		
	OK or	· NG		
OK	 Check the following. Glass hatch switch ground Harness for open or short 	d circuit between smart entrance control unit and glass hatch switch		
NG	Replace glass hatch switch.			

RS

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST


BT

HA

SC

OK NG **SMART C/U - NEW**

SECURITY INDICATOR LAMP CHECK =NAEL0406S05 **CHECK INDICATOR LAMP OPERATION** With CONSULT-II 1. Select "ACTIVE TEST" in "THEFT WAR ALM" with CONSULT-II. 2. Select "THEFT IND" and touch "ON". **ACTIVE TEST** THEFT IND Security indicator lamp should illuminate. ON SEL356W Without CONSULT-II 1. Disconnect smart entrance control unit harness connector. 2. Check voltage between smart entrance control unit harness connector M122 terminal 38 (BR/Y) and ground. Smart entrance control unit connector Battery voltage should exist. SEL037Y Refer to wiring diagram in EL-746. OK or NG

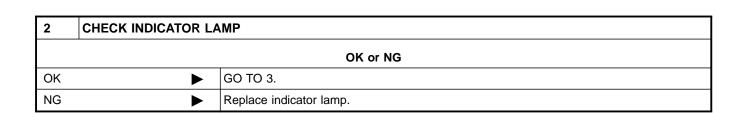

Security indicator lamp is OK.

GO TO 2.

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

Trouble Diagnoses (Cont	d)
3 CHECK POWER SUPPLY CIRCUIT FOR INDICATOR LAMP	GI
Disconnect security lamp connector. Check voltage between indicator lamp terminal 1 and ground.	MA
Security indicator lamp connector (M20)	EM
Battery voltage should exist.	LC
	EC
SEL342X Does battery voltage exist?	FE
Yes Check harness for open or short between security indicator lamp and smart entrance control unit.	CL
No Check the following. 7.5A fuse [No. 24, located in fuse block (J/B)] Harness for open or short between security indicator lamp and fuse	MT
	- AT
	TF
	PD
	AX
	SU
	BR
	ST
	RS
	BT
	HA

SC

SMART C/U - NEW

FRONT DOOR KEY CYLINDER SWITCH CHECK

CHECK DOOR KEY CYLINDER SWITCH LH INPUT SIGNAL (LOCK/UNLOCK SIGNAL)

(P) With CONSULT-II

Check door key cylinder switch LH ("KEY CYL LK-SW"/"KEY CYL UN-SW") in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR		
MONITOR		
KEY CYL LK-SW	OFF	
KEY CYL UN-SW	OFF	

When key inserted in key cylinder LH is turned to LOCK:

KEY CYL LK-SW ON


When key inserted in key cylinder LH is turned to UNLOCK:

KEY CYL UN-SW ON


SEL342WC

Without CONSULT-II

Check voltage between smart entrance control unit harness connector M121 terminal 10 (LG) or 11 (Y) and ground.

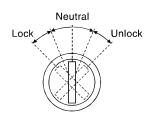



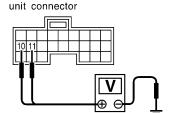

Terminals			\/-lt\/	
(+)	(-)	Key position	Voltage V	
11	Ground	Neutral/Unlock	Approx. 5	
	around	Lock	0	
10	Ground	Neutral/Lock	Approx. 5	
10	Ground	Unlock	0	

SEL038Y

Refer to wiring diagram in EL-748.

OK or NG


OK ▶	Door key cylinder switch LH is OK.
NG >	GO TO 2.

CHECK DOOR KEY CYLINDER SWITCH


- 1. Disconnect door key cylinder switch LH connector.
- 2. Check continuity between door key cylinder switch LH terminals.



Door key cylinder switch LH connector D9

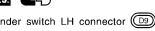

- (1): Door unlock switch terminal
- (2): Ground terminal
- (3): Door lock switch terminal

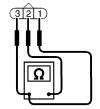

Terminals	Key position	Continuity
LH: 3 - 2	Neutral/Unlock	No
LII. 3 - 2	Lock	Yes
	Neutral/Lock	No
	Unlock	Yes

SEL313X

OK or NG

OK Check the following. • Door key cylinder switch LH ground circuit • Harness for open or short between smart entrance control unit and door key cylinder switch LH NG Replace door key cylinder switch LH.

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

BACK DOOR KEY CYLINDER SWITCH CHECK

IAFL0406S07

GI

MA

EM

LC

EG

FE

GL

MT

AT

TF

AX

SU

CHECK BACK DOOR KEY CYLINDER SWITCH INPUT SIGNAL (LOCK/UNLOCK SIGNAL)

(P) With CONSULT-II

Check back door key cylinder switch ("KEY CYL LK-SW"/"KEY CYL UN-SW") in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR			
MONITOR			
KEY CYL LK-SW	OFF		
KEY CYL UN-SW	OFF		

When key inserted in back key cylinder is turned to LOCK:

KEY CYL LK-SW ON


When key inserted in back key cylinder is turned to UNLOCK:

KEY CYL UN-SW ON

SEL342WB

Without CONSULT-II

Check voltage between smart entrance control unit terminals 10 (LG), 11 (Y) or 12 (G/B) and ground.

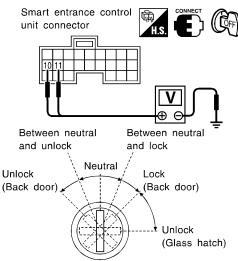

	Terminals		Key position	Voltage [V]	
	(+)	(-)	Key position	voltage [v]	
	11 Ground		Between neutral and lock	0	
Back door		Other positions	Approx. 5		
Back door	10 Ground		Between neutral and unlock	0	
			Other positions	Approx. 5	
Glass hatch	12	12 Ground	Unlock	0	
Glass Hatch	12		Other positions	Approx. 5	

SEL325Y

Refer to wiring diagram in EL-748.

OK or NG

OK ►	Back door key cylinder switch is OK.
NG ►	GO TO 2.

6

ST


BT

HA

SC

ŧL.

Trouble Diagnoses (Cont'd)

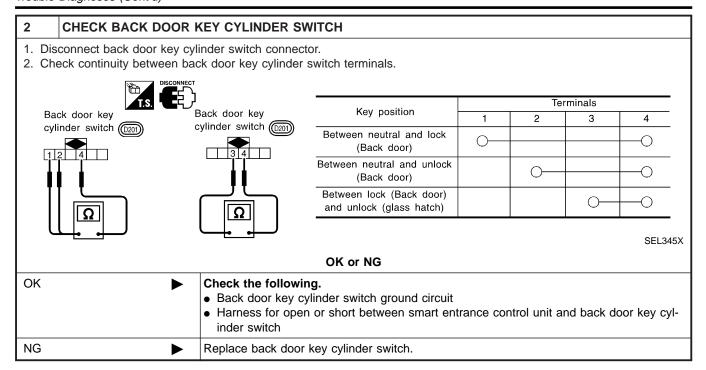

SMART C/U - NEW Trouble Diagnoses (Cont'd)

DOOR LOCK/UNLOCK SWITCH CHECK

=NAEL0406S08

GI

MA

EM

LC

EC

FE

GL

MT

AT

TF

CHECK DOOR LOCK/UNLOCK SWITCH INPUT SIGNAL

(P) With CONSULT-II

Check door lock/unlock switch ("LOCK SW DR/AS"/"UNLK SW DR/AS") in "DATA MONITOR" mode with CONSULT-II.

DATA MONITOR					
MONITOR					
LOCK SW DR/AS	OFF				
UNLK SW DR/AS	OFF				

When lock/unlock switch is turned to LOCK:

LOCK SW DR/AS ON

When lock/unlock switch is turned to UNLOCK:


UNLK SW DR/AS ON

SEL341W

◯ Without CONSULT-II

1. Disconnect smart entrance control unit harness connector.

2. Check continuity between smart entrance control unit harness connector M121 terminal 4 (LG/R) or 5 (BR) and ground.

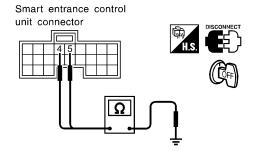

Terminals	Door lock/unlock switch (LH or RH) condition	Continuity
5 - Ground	Lock	Yes
5 - Giodila	N and Unlock	No
4 - Ground	Unlock	Yes
4 - Ground	N and Lock	No

SEL040Y

Refer to wiring diagram in EL-748.


OK or NG

OK •	Door lock/unlock switch is OK.
NG ▶	GO TO 2.


AX

BT

HA

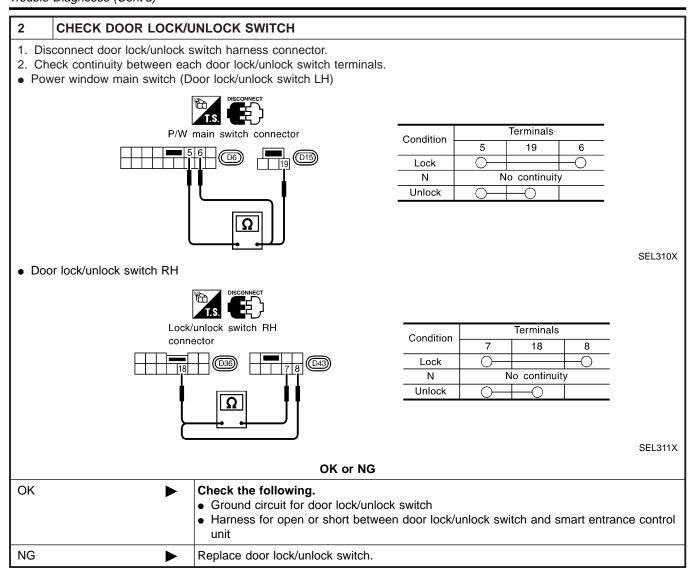



Trouble Diagnoses (Cont'd)

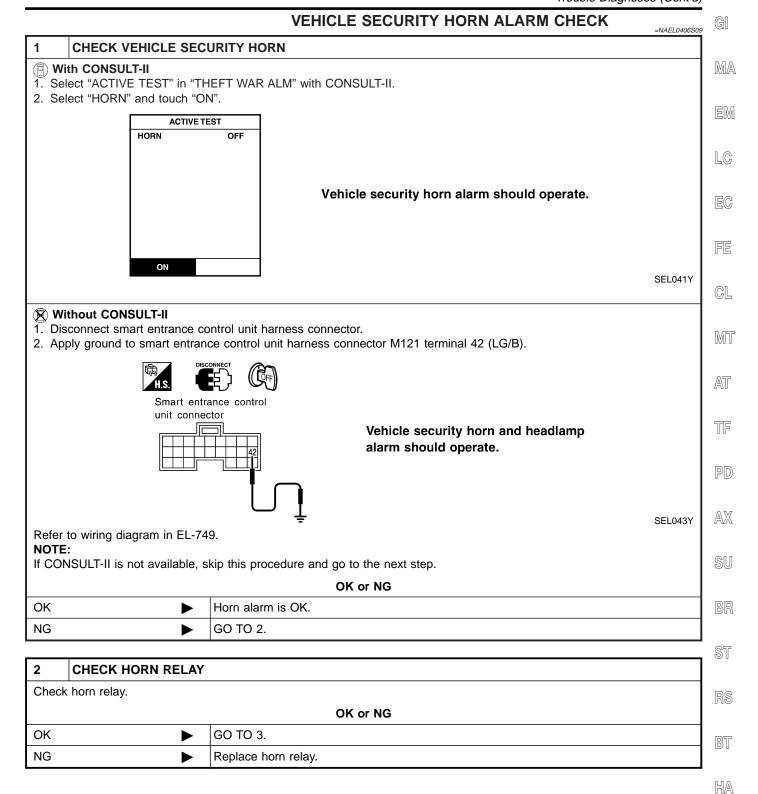


-

Trouble Diagnoses (Cont'd)

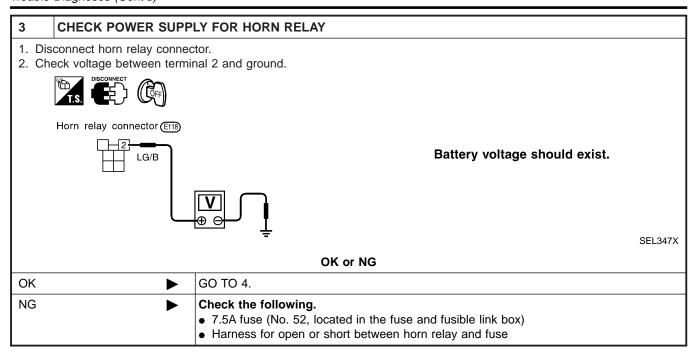

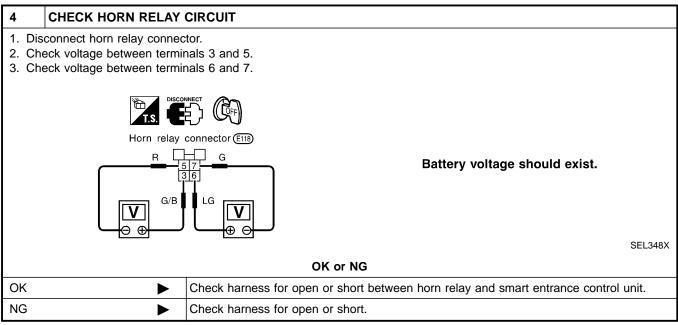

Trouble Diagnoses (Cont'd)

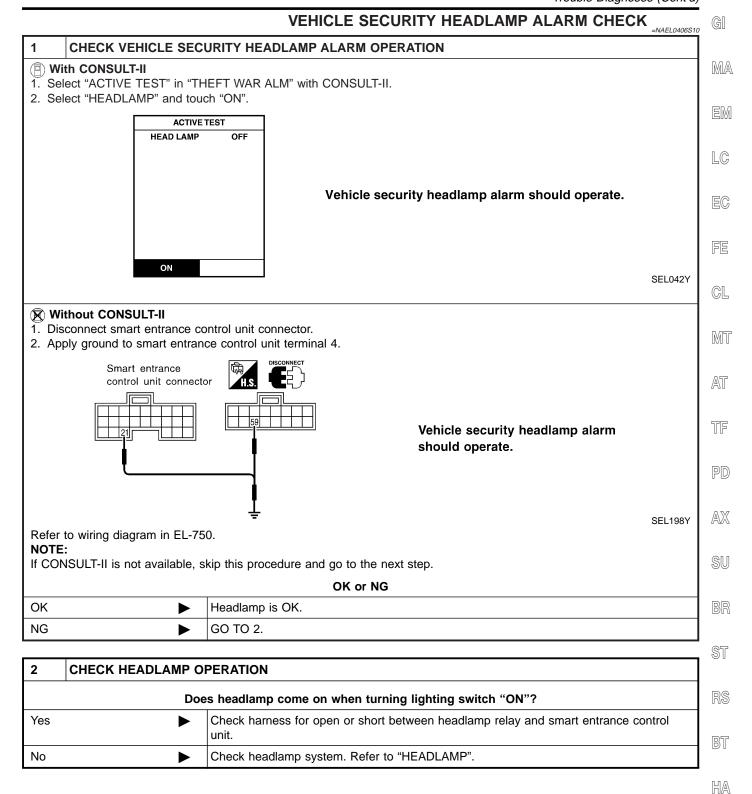

SC

1

Description

NAEL0407 OUTLINE

The smart entrance control unit totally controls the following body electrical system operations.

- Headlamp auto light control system
- Warning chime
- Rear defogger and door mirror defogger timer
- Power door lock
- Multi-remote control system
- Vehicle security system
- Interior lamp

In addition, the following timer operations are controlled by the smart entrance control unit.

- Battery saver control
- Retained power control

BATTERY SAVER CONTROL

NAEL0407S01

Headlamps/Parking Lamps/License Lamps/Tail Lamps/Fog Lamps/Illumination Lamps

When the ignition switch is turned OFF from ON (or START) while headlamps illuminate, the headlamps (including parking, license, tail, fog and illumination lamps) are turned off after 45 seconds which are counted by the smart entrance control unit.

The headlamps (including parking, license, tail, fog and illumination lamps) are turned off when the driver or passenger side door is opened even if 45 seconds have not passed after the ignition switch is turned OFF from ON (or START).

Interior Lamp/Luggage Room Lamp/Spot Lamp/Vanity Mirror Illumination

The lamps turn off automatically when the interior lamp, spot lamp or/and vanity mirror illumination are illuminated with the ignition key in the OFF position, if the lamp remains lit by the door switch open signal or if the lamp switch is in the ON position for more than 30 minutes.

After lamps are turned off by the battery saver system, the lamps illuminate again when:

- Door is locked or unlocked with remote controller or door lock/unlock switch or door key cylinder.
- Ignition switch ON.
- Door is opened or closed,
- Key is inserted or removed into ignition key cylinder.

Rear Window Defogger/Door Mirror Defogger

Rear window defogger and door mirror defogger are turned off in approximately 15 minutes after the rear window defogger switch is turned on.

RETAINED POWER CONTROL

When the ignition switch is turned to OFF (or ACC) position from ON or START position, the following systems can be operated for 45 seconds by the RAP signal from the smart entrance control unit terminal 46.

- Electric sunroof
- Power window

The retained power operation is canceled when the driver or passenger side door is opened.

INPUT/OUTPUT

NAEL0407S04

System	Input	Output
Power door lock	Door lock and unlock switch LH and RH Key switch (Insert) Door switches Door key cylinder switches	Door lock actuator
Multi-remote control	Key switch (Insert) Ignition switch (ACC) Door switches Remote controller signal Door lock/unlock switch LH	Horn relay Headlamp relay (LH and RH) Hazard warning lamp Interior lamp Door lock actuator

SMART C/U - NEW

Description (Cont'd)

System	Input	Output
Warning chime	Key switch (Insert) Ignition switch (ON) Lighting switch (1st) Seat belt switch Front door switch LH	Warning chime (located in smart entrance control unit)
Rear window defogger and door mirror defogger	Ignition switch (ON) Rear window defogger switch	Rear window defogger relay
Vehicle security	Ignition switch (ACC, ON) Door switches Hood switch Glass hatch switch Door lock/unlock switches Door key cylinder switch (lock/unlock) Back door key cylinder switch (unlock)	Horn relay Headlamp relay (LH and RH) Security indicator
Interior lamp	Door switches Remote controller signal (lock/unlock) Door lock/unlock switches (lock/unlock) Door key cylinder switch (lock/unlock) Ignition switch (ON)	Interior lamp Door indicator
Battery saver control for headlamps/parking lamps/licence lamps/tail lamps/fog lamps/illumination lamps	Ignition switch (ACC, ON) Front door switches Lighting switch	Headlamps Parking lamps License lamps Tail lamps Fog lamps Illumination lamps
Battery saver control for inte- rior lamp/spot lamp/vanity mir- ror illumination	Door switches Remote controller signal (lock/unlock) Door lock/unlock switches (lock/unlock) Door key cylinder switch (lock/unlock) Ignition switch (ON)	Interior lamps Spot lamp Vanity mirror illumination
Battery saver control for rear window defogger and door mirror defogger	Ignition switch (ON) Rear window defogger switch	Rear window defogger relay
Retained power control for electric sunroof	Ignition switch (ON) Front door switches	Power window relay
Retained power control for power window	Ignition switch (ON) Front door switches	Power window relay

RS

BT

HA

SC

EL

CONSULT-II DIAGNOSTIC ITEMS APPLICATION

=NAEL0408

NAEL0408S01

				NAEL0406301
Item (CONSULT-II screen terms)	Diagnosed system	DATA MONITOR	ACTIVE TEST	WORK SUPPORT
DOOR LOCK	Power door lock	X	X	
REAR DEFOGGER	Rear window defogger	Х	Х	
KEY WARN ALM	Warning chime	Х	Х	
LIGHT WARN ALM	Warning chime	Х	Х	
SEAT BELT ALM	Warning chime	Х	Х	
INT LAMP	Interior lamps	Х	X	
BATTERY SAVER	Battery saver control for interior lamp	Х	Х	
THEFT WAR ALM	Vehicle security system	Х	X	X
RETAINED PWR	Retained power control	X	Х	
MULTI REMOTE ENT	Multi-remote control system	Х	X	X
HEAD LAMP	Headlamp	Х	Х	


X: Applicable

For diagnostic item in each control system, refer to the relevant pages for each system.

DIAGNOSTIC ITEM DESCRIPTION

AEL0408S02

	IVALEU-400502
MODE	Description
DATA MONITOR	Input/output data in the smart entrance control unit can be read.
ACTIVE TEST	Diagnostic Test Mode in which CONSULT-II drives some systems apart from the smart entrance control unit.
WORK SUPPORT for THEFT WAR ALM	The recorded trigger signal when vehicle security system was activated can be checked.
WORK SUPPORT for MULTI REMOTE ENT	ID code of multi-remote controller can be registered and erased.

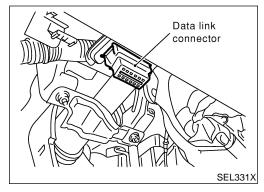

CONSULT-II INSPECTION PROCEDURE

=NAEL0408S03

- 1. Turn the ignition switch "OFF".
- 2. Connect "CONSULT-II" to the data link connector.

GI

EM

MA

LC

EG

CONSULT-II

START
SUB MODE

PBR455D

Turn ignition switch "ON".

1. Touch "START".

FE

CL

MT

AT

. Touch "SMART ENTRANCE".

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

9U

BR

ST

RS

BT

HA

SC

3

SELECT SYSTEM
ENGINE
A/T
AIR BAG
ABS
SMART ENTRANCE
SEL941W


SELECT TEST ITEM


THEFT WAR ALM
RETAINED PWR

MULTI REMOTE ENT

6. Perform each diagnostic item according to "DIAGNOSTIC ITEMS APPLICATION". Refer to EL-774.

SEL273W

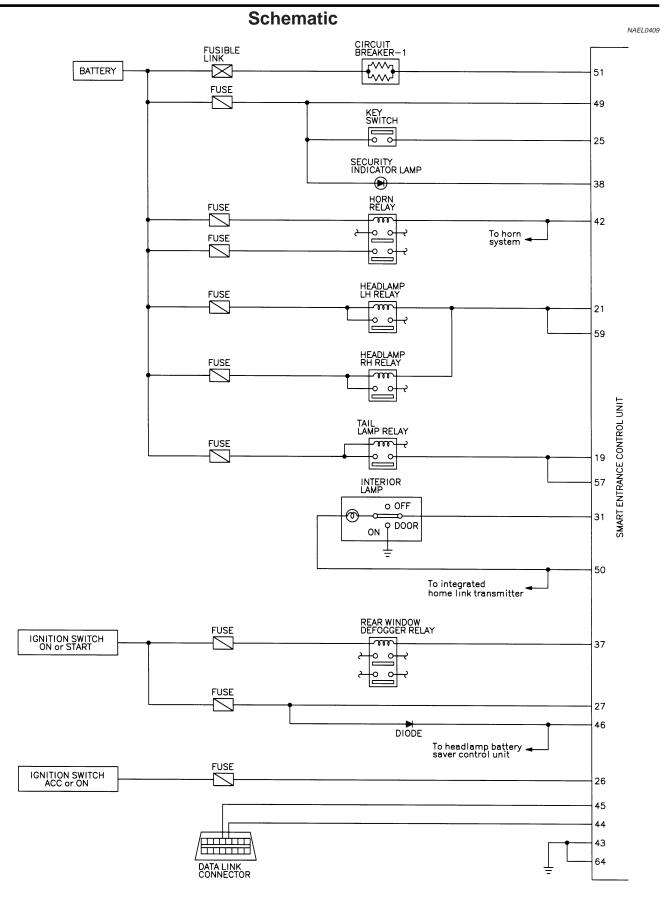

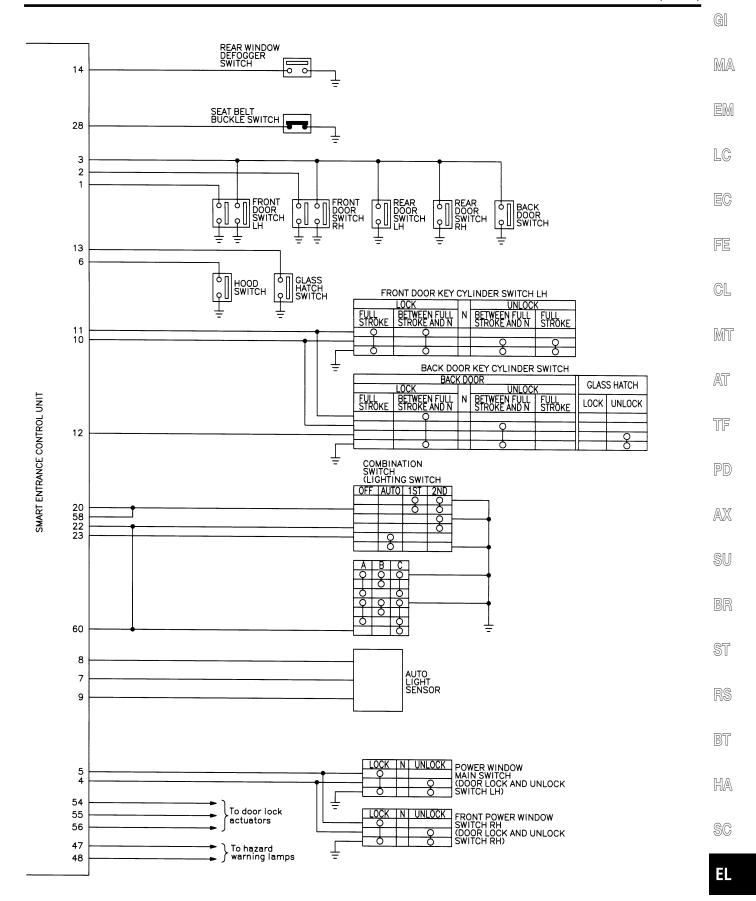

Smart Entrance Control Unit Inspection Table

Smart Entrance Control Unit Inspection Table

Terminal No.	Wire color	Connections	(Operated condition				
1	G/R	Driver door switch	OFF (Closed) → ON (Open)			5V → 0V		
2	Υ	Passenger door switch	OFF (Closed) → C	N (Open)		5V → 0V		
3	R/L	Rear door switch	OFF (Closed) → C	N (Open)		5V → 0V		
4	LG/R	Door lock & unlock switches	Neutral → Unlocks	;		5V → 0V		
5	BR	Door lock & unlock switches	Neutral → Locks			5V → 0V		
6	Y/B	Hood switch	ON (Open) → OFF	(Closed)		0V → 12V		
7	W/G	Auto light sensor (Signal)	Ignition switch ON position	Headlamps illum control. (Operate → Not	inate by auto light operate)	5V → 1V		
8	L/W	Auto light sensor (GND)		_		_		
9	GY	Auto light sensor (Power)	Ignition switch (OF	F → ON)		0V → 5V		
10	LG	Door key cylinder unlock switch	OFF (Neutral) → C	ON (Locked)		5V → 0V		
11	Υ	Door key cylinder lock switch	OFF (Neutral) → C	OFF (Neutral) → ON (Locked)				
12	G/B	Back door key cylinder switch	OFF (Neutral) → ON (Unlock)		5V → 0V			
13	L/W	Glass hatch switch	ON (Open) → OFF (Closed)		0V → 12V			
14	OR	Rear window defogger switch	OFF → ON (Only	when pushed)		5V → 0V		
					Ignition switch	055	More than 45 seconds after ignition switch is turned to OFF position	12V
19	R	Tail lamp relay (Output)	(with lighting switch 1ST or 2ND)	OFF position	Within 45 sec- onds after igni- tion switch is turned to OFF position	0V		
				ON or START po	sition	0V		
			Headlamps illumina → Not operate)	nate by auto light control. (Operate		Less than 1.5V → 12V		
20	G	Tail lamp switch	Light switch (OFF	→ 1ST or 2ND po	sition)	12V → 0V		
		Ignition switch			055	More than 45 seconds after ignition switch is turned to OFF position	12V	
21	PU/W	PU/W Headlamp LH relay	(with lighting switch OFF or 1ST)	OFF position	Within 45 sec- onds after igni- tion switch is turned to OFF position	oV		
				ON or START position		0V		
	Headlamps illuminate by auto light control.	ontrol.	0V					

G[

MA

EM

LC

EC

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

EL


Smart Entrance Control Unit Inspection Table (Cont'd)

Terminal No.	Wire color	Connections		Operated condition		
			Except PASS or 2ND position			12V
22	L	Headlamp switch	Lighting Switch	Lighting switch PASS or 2ND position		
			Headlamps illumin → Not operate)	ate by auto light c	ontrol. (Operate	Less than 1.5V → 12V
23	L/Y	Headlamp switch	Ignition switch "ON" position	Lighting switch (I AUTO position)	Except AUTO →	12V → 0V
25	W/R	Ignition key switch (Insert)	Key inserted → Ke	y removed from I	GN key cylinder	12V → 0V
26	G/W	Ignition switch (ACC)	"ACC" position			12V
27	W/B	Ignition switch (ON)	Ignition key is in "C	ON" position		12V
28	B/P	Seat belt buckle switch	Unfastened → Fastion)	tened (Ignition ke	y is in "ON" posi-	0V → 12V
31	R/B	Interior lamp	When doors are lo switch in "DOOR"		e controller (Lamp	12V
37	G/B	Rear window defogger relay	OFF → ON (Ignition	n key is in "ON" p	oosition)	12V → 0V
38	BR/Y	Security indicator	Goes off → Illumin	ates		12V → 0V
42	LG/B	Horn relay	When panic alarm is operated using remote controller (ON \rightarrow OFF)			12V → 0V
43	В	Ground	_			_
46	R/Y	Power window relay	Retained power op	Retained power operation is operated (ON \rightarrow OFF)		
47	GY/L	LH turn signal lamp	When door lock or unlock is operated using remote controller (ON \rightarrow OFF)			12V → 0V
48	GY/R	RH turn signal lamp	When door lock or unlock is operated using remote controller (ON → OFF)			12V → 0V
49	G/R	Power source (Fuse)		_		12V
50	R/W	Battery saver (Interior lamp)	Battery saver oper →OFF)	ates → Does not	operate (ON	12V → 0V
51	W/R	Power source (PTC)		_		12V
54	L	Door lock actuators	Door lock & unlock	switch (Free → L	ock)	0V → 12V
55	W/PU	Driver door lock actuator	Door lock & unlock	switch (Free → U	Jnlock)	0V → 12V
56	Y/B	Passenger, rear and back doors lock actuator	Door lock & unlock	Door lock & unlock switch (Free → Unlock)		
			Ignition switch	OFF position	More than 45 seconds after ignition switch is turned to OFF position	12V
57	R	(with lighting switch 1ST or 2ND)	OFF position	Within 45 sec- onds after igni- tion switch is turned to OFF position	oV	
				ON or START position	0V	
			Headlamps illuminate by auto light control. (Operate → Not operate)		Less than 1.5V→ 12V	

Smart Entrance Control Unit Inspection Table (Cont'd)

Terminal No.	Wire color	Connections	Operated condition			Voltage (Approximate values)
58	G	Tail lamp switch	Lighting switch OFF or AUTO → 1ST or 2ND			12V → 0V
			Ignition switch	OFF	More than 45 seconds after ignition switch is turned to OFF position	12V
59	PU/W	Headlamp RH relay	(with lighting switch OFF or 1ST)	OFF	Within 45 sec- onds after igni- tion switch is turned to OFF position	oV
				ON or START position		0V
			Headlamps illuminate by auto light control. (Operate → Not operate)			Less than 1.5V → 12V
			Lighting quitab	Except PASS or	2ND position	12V
60	L	Headlamp switch	Lighting switch	PASS or 2ND position		0V
			Headlamps illuminate by auto light control. (Operate → Not operate)			0V → 12V
64	В	Ground	_			_

Wiring Diagram — TRNSMT –

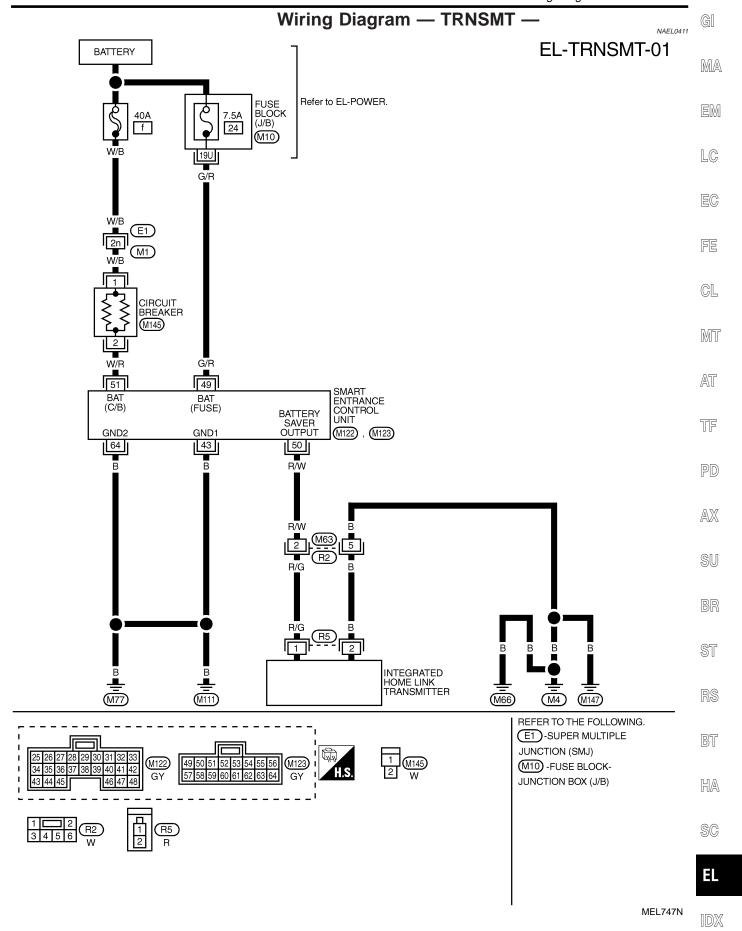


Trouble Diagnoses DIAGNOSTIC PROCEDURE

NAEL0412


NAEL0412S01

SYMPTOM: Transmitter does not activate receiver.

Before conducting the procedure given below, make sure that system receiver (garage door opener, etc.) operates with original, hand-held transmitter. If NG, receiver or hand-held transmitter is at fault, not vehicle related.

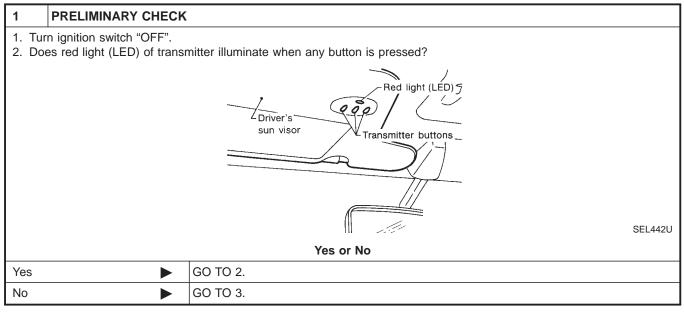

2	CHECK TRANSMITTER FUNCTION				
	Check transmitter with Tool. For details, refer to Technical Service Bulletin. OK or NG				
OK	OK Receiver or handheld transmitter fault, not vehicle related.				
NG	•	Replace transmitter with sun visor assembly.			

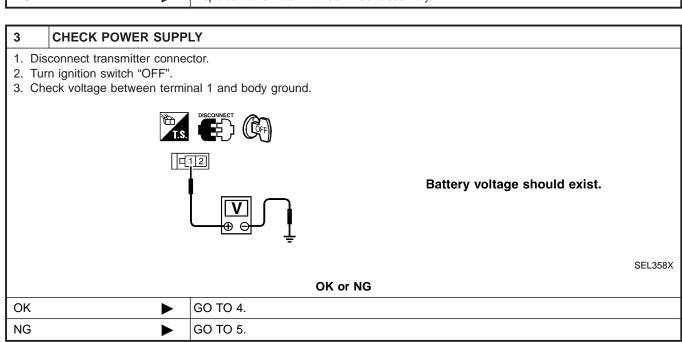

INTEGRATED HOMELINK TRANSMITTER

G[

MA


EM


LC

EG

FE

GL

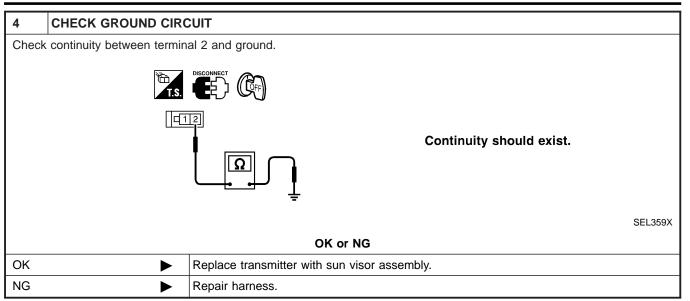

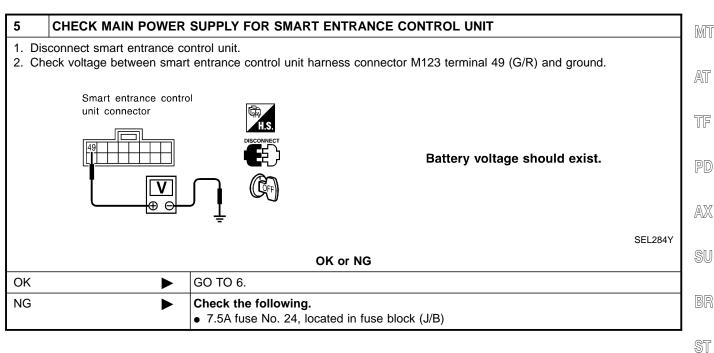


HA

RS

BT

SC

Ц

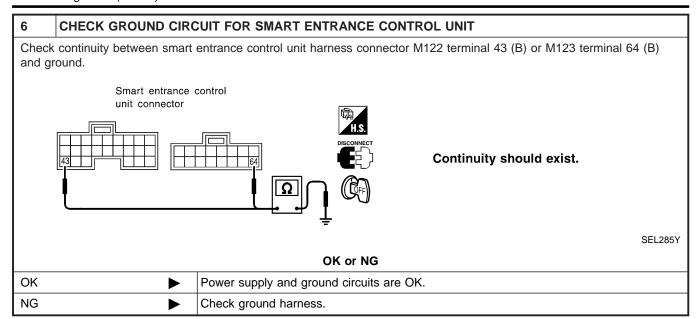


NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - NEW

Component Parts and Harness Connetor Location

Component Parts and Harness Connetor Location

G[

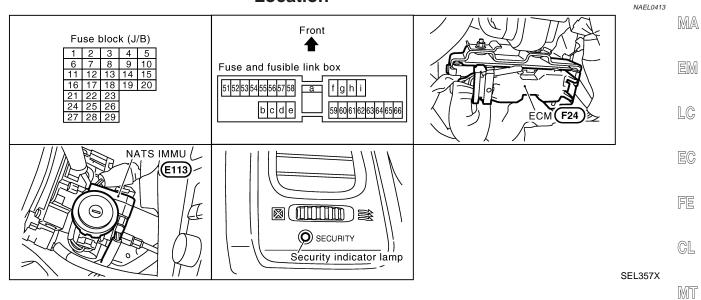

NOTE:

If customer reports a "No Start" condition, request ALL KEYS to be brought to the Dealer in case of an NVIS (NATS) malfunction. ${\Bbb AT}$

TF PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

ĒĹ

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - NEW

System Description

System Description

=NAEL0414

NATS (Nissan Anti-Theft System) has the following immobilizer functions:


- Since only NVIS (NATS) ignition keys, whose ID nos. have been registered into the ECM and IMMU of NVIS (NATS), allow the engine to run, operation of a stolen vehicle without an NVIS (NATS) registered key is prevented by NVIS (NATS).
 - That is to say, NVIS (NATS) will immobilise the engine if someone tries to start it without the registered key of NVIS (NATS).
- All of the originally supplied ignition key IDs (except for card plate key) have been NVIS (NATS) registered.
 - If requested by the vehicle owner, a maximum of five key IDs can be registered into the NVIS (NATS) components.
- The security indicator blinks when the ignition switch is in "OFF" or "ACC" position. Therefore, NVIS (NATS) warns outsiders that the vehicle is equipped with the anti-theft system.
- When NVIS (NATS) detects trouble, the security indicator lamp lights up while ignition key is in the "ON" position.
- NVIS (NATS) trouble diagnoses, system initialization and additional registration of other NVIS (NATS) ignition key IDs must be carried out using CONSULT-II hardware and CONSULT-II NVIS (NATS) software. When NVIS (NATS) initialization has been completed, the ID of the inserted ignition key is automatically NVIS (NATS) registered. Then, if necessary, additional registration of other NVIS (NATS) ignition key IDs can be carried out.
 - Regarding the procedures of NVIS (NATS) initialization and NVIS (NATS) ignition key ID registration, refer to CONSULT-II operation manual, IVIS/NVIS.
- When servicing a malfunction of the NVIS (NATS) (indicated by lighting up of Security Indicator Lamp) or registering another NVIS (NATS) ignition key ID no., it is necessary to re-register original key identification. Therefore, be sure to receive ALL KEYS from vehicle owner.

System Composition

NAFL0415

- The immobiliser function of the NVIS (NATS) consists of the following:

 NVIS (NATS) ignition key
- NVIS (NATS) immobilizer control unit (IMMU) located in the ignition key cylinder
- Engine control module (ECM)
- Security indicator

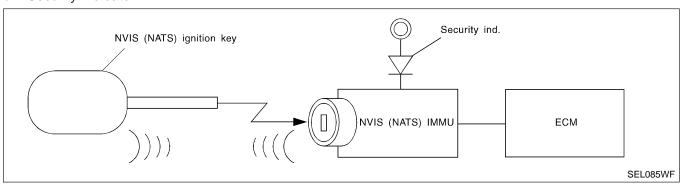


NATS) **SMART C/U - NEW** Wiring Diagram — NATS Wiring Diagram — NATS — G[NAEL0416 IGNITION SWITCH ON or START **EL-NATS-01** BATTERY MA FUSE BLOCK (J/B) Refer to EL-POWER. 7.5A 62 7.5A 24 10A 16 (M10) (E3) 4W 20U LC W/B SECURITY INDICATOR LAMP EC (M20) FE To EL-VEHSEC ◆ BR/Y ■ GL BR/Y M112q MT (E1) W/R W/B 5 7 AT NATS IMMU (E113) TF 4 PU/R PD PU/R $\mathbb{A}\mathbb{X}$ Œ1 13q 14q M1B 12 M94 SU 11 F27 G BR G 116 ST **IMLINE** ECM (F24) RS (F20) REFER TO THE FOLLOWING. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 (E1)-SUPER MULTIPLE BT (M94) JUNCTION (SMJ) M10 , E3 -FUSE BLOCK-JUNCTION BOX (J/B) HA 102 109 1 2 3 4 5 6 7 8 9 10 58 59 60 61 62 63 64 65 66 67 11 12 13 14 15 16 17 18 19 103 104 39 40 41 42 43 44 45 46 47 48 111 112 SC 49 50 51 52 53 54 55 56 57 77 78 79 80 81 82 83 84 85 86 106 114 20 21 22 23 24 25 26 27 28 29 108 30 31 32 33 34 35 36 37 38 87 88 89 90 91 92 93 94 95 EL

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM —

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - NEW

CONSULT-II

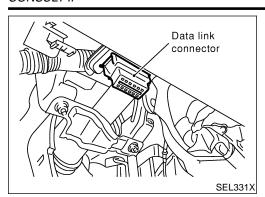

CONSULT-II


CONSULT-II INSPECTION PROCEDURE

NAEL0417S01

- 1. Turn ignition switch OFF.
- 2. Insert NVIS (NATS) program card into CONSULT-II.

Program card NATS (AENOOA)

3. Connect CONSULT-II to data link connector.

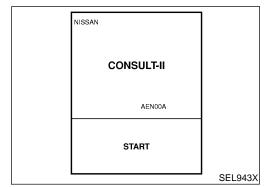

Turn ignition switch ON.

Touch "START".

SELECT SYSTEM	
NATS V.5.0	
	SEL851W
	SLLOSTW

6. Select "NATS V.5.0".

SELECT DIAG MODE]
C/U INITIALIZATION]
SELF DIAG RESULTS	
]
	1
	1
	1
	1
	SEL363X

7. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT-II Operation Manual, IVIS/NVIS.

CONSULT-II DIAGNOSTIC TEST MODE FUNCTION NAEL0417S02

	<u> </u>	
CONSULT-II DIAGNOSTIC TEST MODE	Description	
C/U INITIALIZATION	When replacing any of the following three components, C/U initialization and re-registration of all NVIS (NATS) ignition keys are necessary. [NVIS (NATS) ignition key/IMMU/ECM]	
SELF-DIAG RESULTS	Detected items (screen terms) are as shown in the chart EL-789.	

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - NEW CONSULT-II (Cont'd)

NOTE:

SELF DIAG RESULTS

PRINT

DTC RESULTS

NO DTC IS DETECTED.

FURTHER TESTING

MAY BE REQUIRED.

When any initialization is performed, all ID previously registered will be erased and all NVIS (NATS) ignition keys must be registered again.

MA

GI

The engine cannot be started with an unregistered key. In this case, the system will show "DIFFERENCE OF KEY" or "LOCK MODE" as a self-diagnostic result on the CONSULT-II screen.

In rare case, "CHAIN OF ECM-IMMU" might be stored as a self-diagnostic result during key registration procedure, even if the system is not malfunctioning.

LC

HOW TO READ SELF-DIAGNOSTIC RESULTS

FE GL MIT AT

NAEL0417S03

Result display screen (When no malfunction is detected) Result display screen (When malfunction is detected) SELF DIAG RESULTS DTC RESULTS TIME Detected items -CHAIN OF ECM-IMMU Time data 0 4 This indicates how many times the vehicle was driven after the last DIFFERENCE OF KEY detection of a malfunction. If the malfunction is If "Scroll Down" is detected currently, the indicated, there are time data will be "0". four or more malfunctions Scroll down When touched, When touched, **→** ERASE PRINT the results stored the results in the engine are printed out. control module (ECM) are erased.

SEL364X

TF

AX

NVIS (NATS) SELF-DIAGNOSTIC RESULTS ITEM CHART


BR BT HA

Detected items (NATS program card screen terms)	P No. Code (Self-diag- nostic result of "ENGINE"	Malfunction is detected when	Reference page
ECM INT CIRC-IMMU	NATS MAL- FUNCTION P1613	The malfunction of ECM internal circuit of IMMU communication line is detected.	EL-793
CHAIN OF ECM-IMMU	NATS MAL- FUNCTION P1612	Communication impossible between ECM and IMMU (In rare case, "CHAIN OF ECM-IMMU" might be stored during key registration procedure, even if the system is not malfunctioning.)	EL-794
DIFFERENCE OF KEY	NATS MAL- FUNCTION P1615	IMMU can receive the key ID signal but the result of ID verification between key ID and IMMU is NG.	EL-798
CHAIN OF IMMU-KEY	NATS MAL- FUNCTION P1614	IMMU cannot receive the key ID signal.	EL-799
ID DISCORD, IMM-ECM	NATS MAL- FUNCTION P1611	The result of ID verification between IMMU and ECM is NG. System initialization is required.	EL-800

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - NEW

CONSULT-II (Cont'd)

Detected items (NATS program card screen terms)	P No. Code (Self-diag- nostic result of "ENGINE"	Malfunction is detected when	Reference page
LOCK MODE	NATS MAL- FUNCTION P1610	When the starting operation is carried out five or more times consecutively under the following conditions, NVIS (NATS) will shift the mode to one which prevents the engine from being started. • Unregistered ignition key is used. • IMMU or ECM's malfunctioning.	EL-803
DON'T ERASE BEFORE CHECKING ENG DIAG	_	All engine trouble codes except NVIS (NATS) trouble code has been detected in ECM.	EL-791

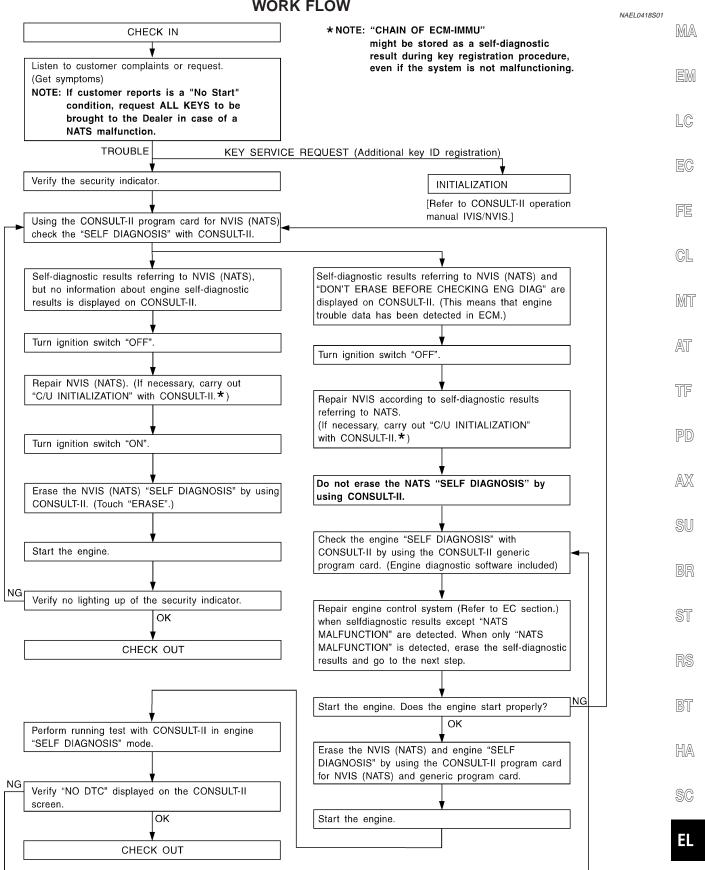

SEL004XA

Trouble Diagnoses (Cont'd)

SMART C/U - NEW

SYMPTOM MATRIX CHART 1

(Self-diagnosis related item)

NAEL0418S02

SYMPTOM RESULTS' on CON-SULT-II screen Cale			(Seil-diagnosis reia	ited item)	
ECM INT CIRC-IMMU	SYMPTOM	RESULTS" on CON-	DURE	(Malfunctioning part or	REFERENCE PART NO. OF ILLUSTRATION ON NEXT PAGE
Security indicator Security indicator PROCEDURE 2 EL-794)		ECM INT CIRC-IMMU	1	ECM	В
CHAIN OF ECM-IMMU				OF ECM-IMMU" might be stored during key registration procedure, even if the system is	_
CHAIN OF ECM-IMMU CHAIN OF ECM-IMMU CHAIN OF ECM-IMMU PROCEDURE 2 (EL-794) PROCEDURE 3 (EL-798) DIFFERENCE OF KEY PROCEDURE 3 (EL-798) TIMMU AND A DIFFERENCE OF KEY PROCEDURE 3 (EL-798) TIMMU A Unregistered key D IMMU A Unregistered key D IMMU A Malfunction of key ID chip IMMU A DID DISCORD, IMM- ECM PROCEDURE 5 (EL-800) F LOCK MODE PROCEDURE 7 (EL-803) PROCEDURE 9 (EL-804) PROCEDURE 9 (voltage line of IMMU	C1
CHAIN OF ECM-IMMU PROCEDURE 2 (EL-794) PROCEDURE 2 (EL-794) Iline of IMMU circuit Open circuit in communication line between IMMU and ECM Short circuit between IMMU and ECM communication line and battery voltage line Short circuit between IMMU and ECM communication line and battery voltage line Short circuit between IMMU and ECM communication line and ground line ECM B IMMU A DIFFERENCE OF KEY PROCEDURE 3 (EL-798) IMMU A Winding to the procedure of the procedure					C2
Security indicator lighting up* Engine cannot be started. Security indicator lighting up* Engine cannot be started. DIFFERENCE OF KEY CHAIN OF IMMU-KEY CHAIN OF IMMU-KEY DISCORD, IMM-ECM ECM DISCORD, IMM-ECM DISCORD, IMM-ECM DISCORD, IMM-ECM ECM DISCORD, IMM-ECM DISCOR					C3
• Security indicator lighting up* • Engine cannot be started. MIL staying ON Security indicator lighting up* • Engine cannot be started. MIL staying ON Security indicator lighting up* • Engine cannot be started. MIL staying ON Security indicator lighting in the started lighting up* • Engine cannot be started. MIMU and ECM communication line and particle up of the province of th		CHAIN OF ECM-IMMU		nication line between	C4
Short circuit between IMMU and ECM communication line and ground line ECM B IMMU A DIFFERENCE OF KEY PROCEDURE 3 (EL-798) Unregistered key D IMMU A CHAIN OF IMMU-KEY PROCEDURE 4 (EL-799) IMMU A ID DISCORD, IMM- ECM PROCEDURE 5 (EL-800) System initialization has not yet been completed. ECM F LOCK MODE PROCEDURE 7 (EL-803) LOCK MODE D MIL staying ON Security indicator Short circuit between IMMU and ECM communication C4 B MMU A Malfunction of key ID Chip E IMMU A System initialization has not yet been completed. ECM F LOCK MODE PROCEDURE 7 (EL-803) ECM F Engine trouble data and NVIS (NATS) trouble data and NVIS (NATS) trouble data have been been decayed been been ground in the page of the page been decayed been been decayed been been decayed bea	lighting up* • Engine cannot be			IMMU and ECM communication line and bat-	C4
DIFFERENCE OF KEY PROCEDURE 3 (EL-798) Unregistered key D IMMU A CHAIN OF IMMU-KEY PROCEDURE 4 (EL-799) IMMU A Malfunction of key ID chip E IMMU A System initialization has not yet been completed. ECM F LOCK MODE PROCEDURE 5 (EL-803) PROCEDURE 5 (EL-803) ECM F LOCK MODE DON'T ERASE BEFORE CHECKING WORK FLOW Security indicator IMMU A Malfunction of key ID chip E LOCK MODE E System initialization has not yet been completed. ECM F LOCK MODE D Engine trouble data and NVIS (NATS) trouble data have been	started.			IMMU and ECM com- munication line and	C4
DIFFERENCE OF KEY PROCEDURE 3 (EL-798) IMMU A CHAIN OF IMMU-KEY PROCEDURE 4 (EL-799) IMMU A ID DISCORD, IMM- ECM PROCEDURE 5 (EL-800) PROCEDURE 5 (EL-800) F LOCK MODE PROCEDURE 7 (EL-803) PROCEDURE 7 (EL-803) LOCK MODE DON'T ERASE BEFORE CHECKING WORK FLOW (FL-701) Security indicator				ECM	В
DIFFERENCE OF KEY CHAIN OF IMMU-KEY PROCEDURE 4 (EL-799) IMMU A Malfunction of key ID chip IMMU A DID DISCORD, IMM- ECM PROCEDURE 5 (EL-800) PROCEDURE 5 (EL-800) F LOCK MODE PROCEDURE 7 (EL-803) PROCEDURE 7 (EL-803) ECM F LOCK MODE DON'T ERASE BEFORE CHECKING WORK FLOW (FL-701) DON'T ERASE BEFORE CHECKING PROCEDURE 7 (EL-803) Engine trouble data and NVIS (NATS) trouble data being bei				IMMU	А
CHAIN OF IMMU-KEY PROCEDURE 4 (EL-799) IMMU A Malfunction of key ID chip IMMU A ID DISCORD, IMM-ECM ECM PROCEDURE 5 (EL-800) PROCEDURE 5 (EL-800) F LOCK MODE PROCEDURE 7 (EL-803) PROCEDURE 7 (EL-803) ECM F LOCK MODE DON'T ERASE BEFORE CHECKING WORK FLOW (FL-701) F Engine trouble data and NVIS (NATS) trouble data have been		DIEEEDENCE OF KEY	I .	Unregistered key	D
CHAIN OF IMMU-KEY PROCEDURE 4 (EL-799) Chip IMMU A System initialization has not yet been completed. ECM F LOCK MODE PROCEDURE 7 (EL-803) PROCEDURE 7 (EL-803) ECM F LOCK MODE DON'T ERASE BEFORE CHECKING PROCEDURE 7 (EL-701) Engine trouble data and NVIS (NATS) trouble data and NVIS (NATS) trouble data have been completed. Engine trouble data and NVIS (NATS) trouble data and NVIS (NATS) trouble data have been completed.		DIFFERENCE OF KEY		IMMU	А
ID DISCORD, IMM- ECM PROCEDURE 5 (EL-800) PROCEDURE 5 (EL-800) F LOCK MODE PROCEDURE 7 (EL-803) LOCK MODE PROCEDURE 7 (EL-803) DON'T ERASE BEFORE CHECKING WORK FLOW (FL-701) Engine trouble data and NVIS (NATS) trouble data have been		CHAIN OF IMMU-KEY			Е
ID DISCORD, IMM- ECM PROCEDURE 5 (EL-800) not yet been completed. ECM F LOCK MODE PROCEDURE 7 (EL-803) LOCK MODE D MIL staying ON Security indicator DON'T ERASE BEFORE CHECKING PROCEDURE 7 (EL-701) Engine trouble data and NVIS (NATS) trouble data have been completed.				IMMU	Α
ECM F LOCK MODE PROCEDURE 7 (EL-803) LOCK MODE D MIL staying ON Security indicator D Engine trouble data and NVIS (NATS) trouble data and NVIS (NATS) trouble data and NVIS (NATS) trouble data have been data have been data have been data have been			l .	not yet been com-	F
LOCK MODE (EL-803) MIL staying ON Security indicator DON'T ERASE BEFORE CHECKING WORK FLOW MODE D Engine trouble data and NVIS (NATS) trouble data have been				ECM	F
Security indicator BEFORE CHECKING WORK FLOW NVIS (NATS) trouble data have been		LOCK MODE		LOCK MODE	D
lighting up* ENG DIAG (22 70 7) detected in ECM			WORK FLOW (EL-791)	NVIS (NATS) trouble data have been	_

^{*:} When NVIS (NATS) detects trouble, the security indicator lights up while ignition key is in the "ON" position.

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

SYMPTOM MATRIX CHART 2

(Non self-diagnosis related item)


NAEL0418S03

GI

EC

SYMPTOM	DIAGNOSTIC PROCEDURE (Reference page)	SYSTEM (Malfunctioning part or mode)	MA	
Security ind. does not light up.		Security ind.		
	PROCEDURE 6	Open circuit between Fuse and IMMU		
	(EL-801)	Continuation of initialization mode		
		ІММИ	_ LC	

DIAGNOSTIC SYSTEM DIAGRAM

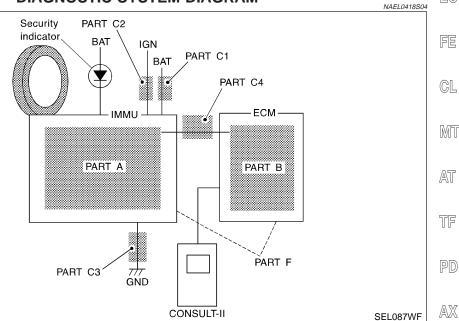

	SELF DIAG RES	IIITS	
	SEEI BIAG HES	OLIG	1
	DTC RESULTS	TIME	
	ECM INT CIRC-IMMU	0	
'			SEL365X

Key ID chip (PART E)

PART D

NVIS (NATS)

ignition key

DIAGNOSTIC PROCEDURE 1

Self-diagnostic results:

"ECM INT CIRC-IMMU" displayed on CONSULT-II screen

1. Confirm SELF-DIAGNOSTIC RESULTS "ECM INT CIRC-IMMU" displayed on CONSULT-II screen. Ref. part No. B.

2. Replace ECM.

3. Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II operation manual IVIS/NVIS".

NAEL0418S05

BR

SU

ST

RS

BT

HA

SC

ĒĹ

Trouble Diagnoses (Cont'd)

Yes

DIAGNOSTIC PROCEDURE 2


=NAFL0418S06

Self-diagnostic results:

"CHAIN OF ECM-IMMU" displayed on CONSULT-II screen

CONFIRM SELF-DIAGNOSTIC RESULTS "CHAIN OF ECM-IMMU" displayed on CONSULT-II screen. NOTE: In rare case, "CHAIN OF ECM-IMMU" might be stored during key registration procedure, even if the system is not malfunctioning. | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | CHAIN OF ECM-IMMU | 0 | | SELF DIAG RESULTS | TIME | | SELF DIAG


GO TO 2.

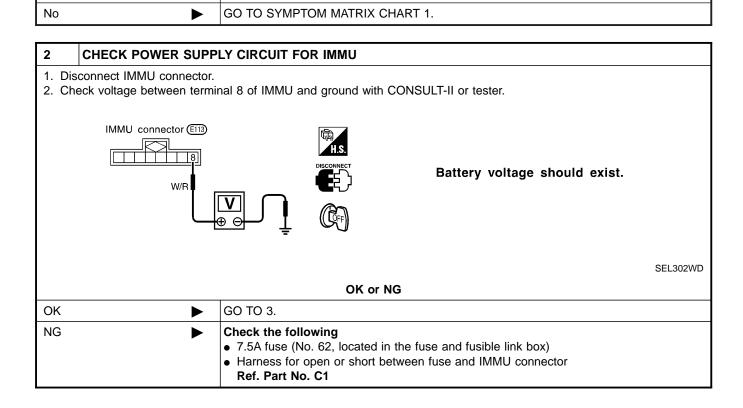


NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

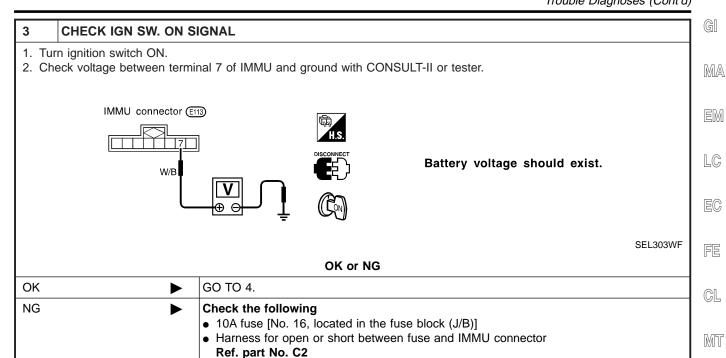

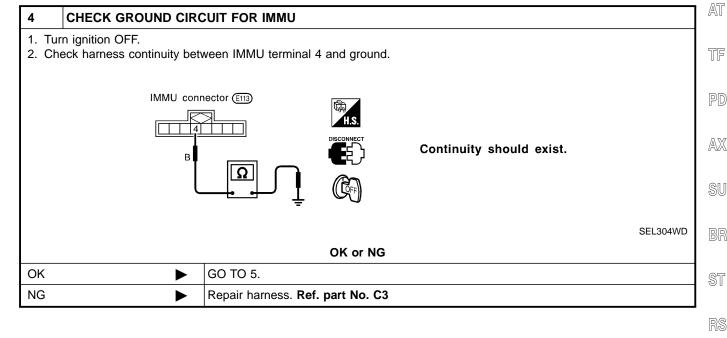

BT

HA


SC

L

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - NEW

Trouble Diagnoses (Cont'd)


CHECK COMMUNICATION LINE OPEN CIRCUIT 1. Disconnect ECM connector. 2. Check harness continuity between ECM terminal 116 and IMMU terminal 1. IMMU connector (E113) OCONNECTOR **ECM** Continuity should exist. (F24) PU/R G SEL305WD OK or NG GO TO 6. OK NG Repair harness or connector. Ref. part No. C4

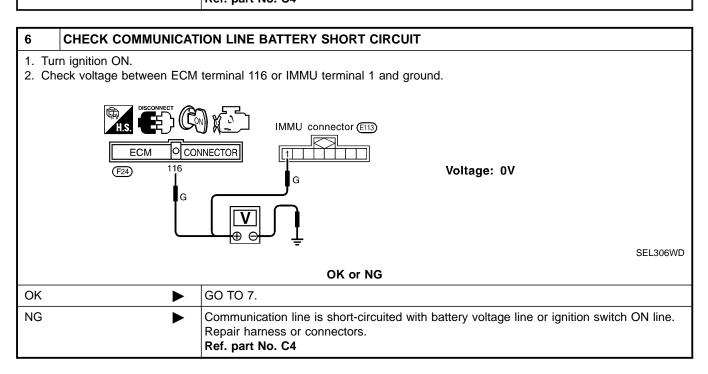

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

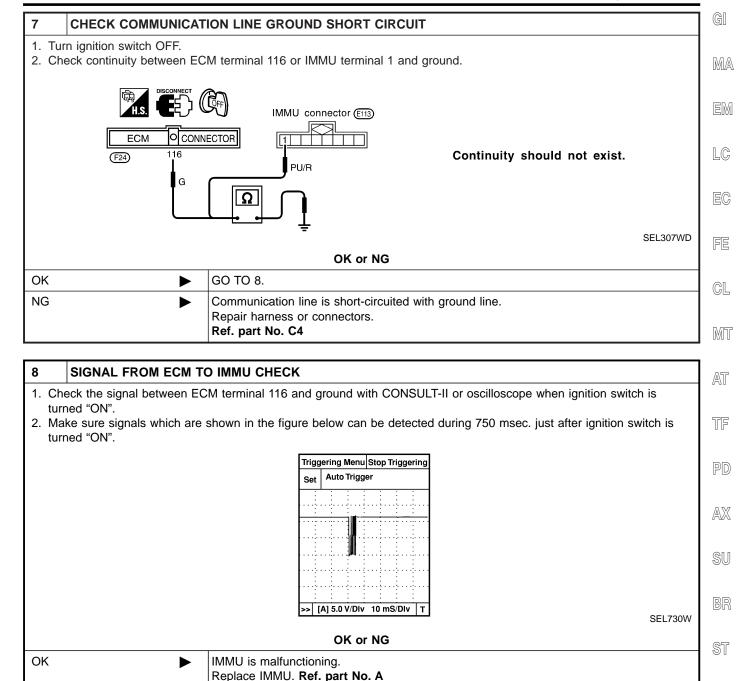

SC

BT

HA

For the operation of initialization, refer to "CONSULT-II Operation Manual IVIS/NVIS".

For the operation of initialization, refer to "CONSULT-II Operation Manual IVIS/NVIS".

Perform initialization with CONSULT-II.

Perform initialization with CONSULT-II.

ECM is malfunctioning. Replace ECM. Ref. part No. B

NG

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

Trouble Diagnoses (Cont'd)

NATS) SMART C/U - NEW

DIAGNOSTIC PROCEDURE 3

Self-diagnostic results:

=NAEL0418S07

"DIFFERENCE OF KEY" displayed on CONSULT-II screen

1	CONFIRM SELF-DIAGN	IOSTIC RESU	LTS			
Confir	Confirm SELF-DIAGNOSTIC RESULTS "DIFFERENCE OF KEY" displayed on CONSULT-II screen.					
			SELF DIAG RESU	LTS]	
			DTC RESULTS	TIME		
			DIFFERENCE OF KEY	0		
					SEL36	37X
		Is CONSU	ULT-II screen dis	played	l as above?	
Yes	>	GO TO 2.				
No	>	GO TO SYMP	TOM MATRIX CH	IART 1.		

2 PERFORM INITIALIZATION WITH CONSULT-II

Perform initialization with CONSULT-II. Re-register all NVIS (NATS) ignition key IDs. For initialization and registration of NVIS (NATS) ignition key IDs, refer to "CONSULT-II operation manual NVIS/NVIS".

IMMU INITIALIZATION

INITIALIZATION
FAIL

THEN IGN KEY SW 'OFF' AND
'ON', AFTER CONFIRMING
SELF-DIAG AND PASSWORD,
PERFORM C/U INITIALIZATION
AGAIN.

SEL297W

NOTE

If the initialization is not completed or fails, CONSULT-II shows above message on the screen.

Can the system be initialized and can the engine be started with re-registered NVIS (NATS) ignition key?

Yes	Ignition key ID was unregistered. Ref. part No. D	
No •	IMMU is malfunctioning. Replace IMMU. Ref. part No. A Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II operation manual IVIS/NVIS".	

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

G[

 $\mathbb{M}\mathbb{A}$

EM

LC

EC

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

=NAEL0418S08

DIAGNOSTIC PROCEDURE 4

Self-diagnostic results:
"CHAIN OF IMMU-KEY" displayed on CONSULT-II screen

1	CONFIRM SELF-DIAGN	OSTIC RESULTS			
Confi	rm SELF-DIAGNOSTIC RE	SULTS "CHAIN OF IMMU-KEY" dis	played	on CONSULT-II screen.	
		SELF DIAG RES	ULTS	1	
		DTC RESULTS	TIME		
		CHAIN OF IMMU-KEY	0		
				-	
				J	SEL368X
		Is CONSULT-II screen displa	ayed as	above?	
Yes	>	GO TO 2.			
No	•	GO TO SYMPTOM MATRIX CHAP	RT 1.		

2	CHECK NVIS (NATS) I	SNITION KEY ID CHIP	
Start	engine with another registe	red NVIS (NATS) ignition key.	
		Does the engine start?	
Yes	>	Ignition key ID chip is malfunctioning. Replace the ignition key. Ref. part No. E Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II Operation Manual IVIS/NVIS".	
No	>	GO TO 3.	

3	CHECK IMMU INSTALL	ATION	
	Check IMMU installation. Refer to "How to Replace IMMU" in EL-804.		
	OK or NG		
OK	·	IMMU is malfunctioning. Replace IMMU. Ref. part No. A Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II Operation Manual IVIS/NVIS".	
NG	>	Reinstall IMMU correctly.	

BT

HA

SC

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 5

=NAEL0418S09

SMART C/U - NEW

Self-diagnostic results:

"ID DISCORD, IMM-ECM" displayed on CONSULT-II screen

1	CONFIRM SELF-DIAGN	IOSTIC RESULTS				
Confirr	n SELF-DIAGNOSTIC RE	SULTS "ID DISCOR	D, IMM-ECM" dis	splayed	d on CONSULT-II screen.	
		Г	SELF DIAG RESU	LTS	1	
			DTC RESULTS	TIME		
		ı	ID DISCORD, IMM-ECM	0		
		-				
		_				
					SEL369X	(
NOTE:	SCORD IMMU-ECM":					
Registe	ered ID of IMMU is in disc	ord with that of ECM	l.			
		Is CONSULT-I	I screen display	ed as	above?	
Yes	>	GO TO 2.				
No	•	GO TO SYMPTOM	MATRIX CHART	Г1.		

2 PERFORM INITIALIZATION WITH CONSULT-II

Perform initialization with CONSULT-II. Re-register all NVIS (NATS) ignition key IDs. For initialization, refer to "CONSULT-II operation manual IVIS/NVIS".

IMMU INITIALIZATION
INITIALIZATION FAIL
THEN IGN KEY SW 'OFF' AND
'ON', AFTER CONFIRMING
SELF-DIAG AND PASSWORD,
PERFORM C/U INITIALIZATION
AGAIN.

SEL297W

NOTE:

If the initialization is not completed or fails, CONSULT-II shows above message on the screen.

Can the system be initialized?

Yes	Start engine. (END) (System initialization had not been completed. Ref. part No. F)	
No •	ECM is malfunctioning. Replace ECM. Ref. part No. F Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II operation manual IVIS/NVIS".	

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

G[

MA

EM

LC

EC

FE

GL


MT

DIAGNOSTIC PROCEDURE 6

"SECURITY INDICATOR LAMP DOES NOT LIGHT UP"

1	CHECK FUSE		
Check 10A fuse [No. 12, located in the fuse block (J/B)].			
	Is 10A fuse OK?		
Yes	Yes ▶ GO TO 2.		
No	•	Replace fuse.	

2	CHECK SECURITY IND	ICATOR LAMP	
	Install 10A fuse. Perform initialization with CONSULT-II.		
3. T 4. S 5. C	For initialization, refer to "CONSULT-II Operation Manual IVIS/NVIS". 3. Turn ignition switch OFF. 4. Start engine and turn ignition switch OFF. 5. Check the security indicator lamp lighting. Security indicator lamp should be blinking.		
	OK or NG		
OK	OK INSPECTION END		
NG	NG 🕨 GO TO 3.		

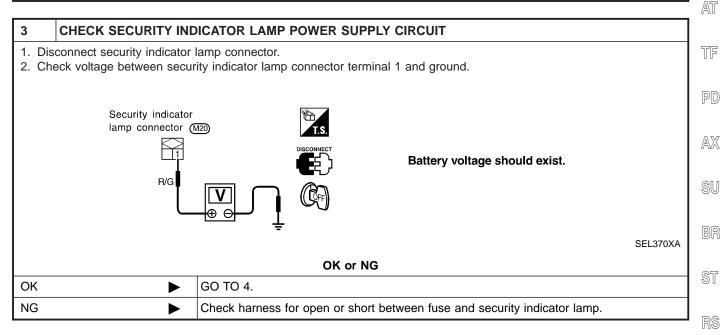

4	CHECK SECURITY INDICATOR LAMP				
Check	Check security Indicator Lamp.				
		Is security indicator lamp OK?			
Yes	Yes				
No	No Replace security indicator lamp.				

SC

BT

HA

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - NEW

Trouble Diagnoses (Cont'd)

5	CHECK IMMU FUNCTION	N	
2. Dis	nnect IMMU connector. sconnect security indicator leck continuity between IMM IMMU connector (E113) BR		
			SEL300WC
		OK or NG	
OK	>	Check harness for open or short between security indicator lamp and IMMU.	
NG	>	IMMU is malfunctioning. Replace IMMU. Perform initialization with CONSULT-II. For initialization, refer to "CONSULT-II operation manual IVIS/NVIS".	

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS)

SMART C/U - NEW

Trouble Diagnoses (Cont'd)

DIAGNOSTIC PROCEDURE 7

=NAEL0418S11

GI

MA

EM

LC

EC

FE

CL

MT

SU

BR

Self-diagnostic results: "LOCK MODE" displayed on CONSULT-II screen

1	CONFIRM SELF-DIAG	NOSTIC RESULTS		
Confir	m SELF-DIAGNOSTIC RE	SULTS "LOCK MODE" is display	ed on CO	NSULT-II screen.
		SELF DIAG RE	SULTS]
		DTC RESULTS	TIME	
		LOCK MODE	0	
				SEL371X
		Is CONSULT-II screen dis	played a	s above?
Yes	>	GO TO 2.		
No	•	GO TO SYMPTOM MATRIX CH	IART 1.	

2	ESCAPE FROM LOCK	MODE	AT
2. Turn 3. Retu 4. Rep	n ignition switch OFF. In ignition switch ON with rourn the key to OFF position is steps 2 and 3 twice (to the engine.		TF PD
		Does engine start?	
Yes	>	System is OK. (Now system is escaped from "LOCK MODE".)	AX
No	>	GO TO 3.	1

CHECK IMMU ILLUSTRATION					
Check IMMU installation. Refer to "How to Replace IMMU" in EL-804.					
	OK or NG				
OK ▶ GO TO 4.					
NG Reinstall IMMU correctly.					
	IMMU installation. Refer to				

RS

ST

BT

HA

SC

NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM — NATS) SMART C/U - NEW

Trouble Diagnoses (Cont'd)

4 PERFORM INITIALIZATION WITH CONSULT-II

Perform initialization with CONSULT-II.

For initialization, refer to "CONSULT-II operation manual IVIS/NVIS".

IMMU INITIALIZATION

INITIALIZATION
FAIL

THEN IGN KEY SW 'OFF' AND
'ON', AFTER CONFIRMING
SELF-DIAG AND PASSWORD,
PERFORM C/U INITIALIZATION
AGAIN.


SEL297W

NOTE:

If the initialization is not completed or fails, CONSULT-II shows the above message on the screen.

Can the system be initialized?

Yes	•	System is OK.
No		GO TO DIAGNOSTIC PROCEDURE 4 to check "CHAIN OF IMMU-KEY", refer to EL-799.

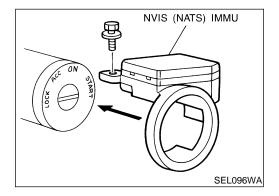


How to Replace NVIS (NATS) IMMU NOTE:

NAEL0419

If NVIS (NATS) IMMU is not installed correctly, NVIS (NATS) system will not operate properly and SELF-DIAG RESULTS on CONSULT-II screen will show "LOCK MODE".

Component Parts Location

NAEL0420

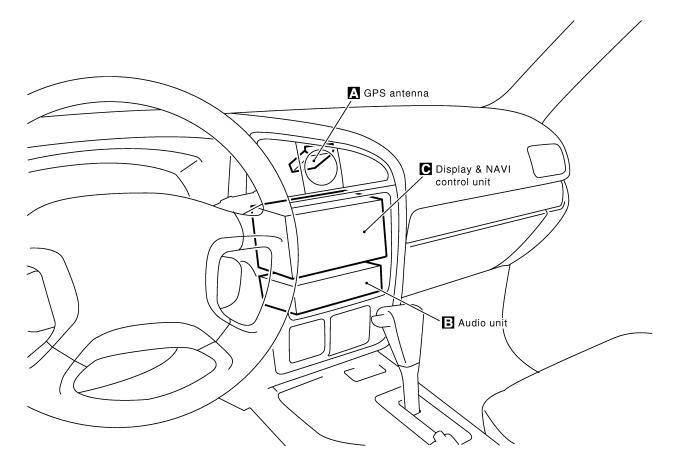

MA

EM

LC

EG

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS


BT


HA

SEL508X SC


L

EL-805

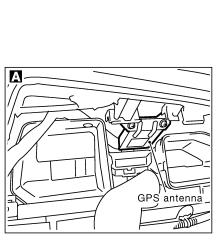

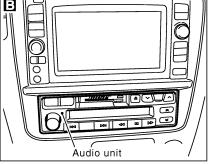



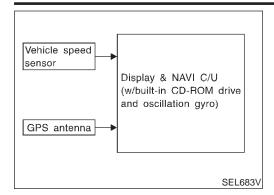

System Description OUTLINE


-NAEL0421

The Navigation System (Multi-AV System) relies upon three sensing devices in order to determine vehicle location at regular time intervals.

- Vehicle speed sensor: Determines the distance the vehicle has traveled.
- 2. Gyro (Angular velocity sensor): Determines vehicle steering angle and directional change.
- GPS antenna (GPS data): Determines vehicle forward movement and direction.

The data provided by the three sensing functions together with a comparison of the mapping information read from the CD-ROM drive permit accurate determination of the vehicle's current location and subsequent course (map matching). The information appears on a liquid crystal display.

This comparison of GPS data (vehicle position sensing) and map matching permits precise determination of vehicle location.

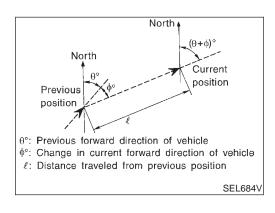

Position Sensor Operating Principles


NAFI 0421S0101


The sensor determines current vehicle location by calculating the previously sensed position, the distance traveled from this position, and the directional changes occurring during this travel.


- Distance traveled
 - The distance traveled is calculated using signals received from the vehicle speed sensor. The sensor automatically compensates for the slightly reduced wheel and tire diameter resulting from tire wear.
- 2. Forward movement (Direction)


Changes in the direction of forward movement are calculated by the gyro (angular velocity sensor) and the GPS antenna (GPS data). Each of these functions has its advantage and disadvantages. Depending upon conditions, one function takes precedence over the other to accurately determine the direction of forward movement.

Function type	Advantage	Disadvantage
Gyro (Angular velocity sen- sor)	Able to accurately detect minute changes in steering angle and direction.	 Calculation errors may accumulate over a long period of continuous vehicle travel.
GPS antenna (GPS data)	Able to sense vehicle travel in four general directions (North, South, East, and West)	Unable to detect direction of vehicle travel at low vehicle speeds.

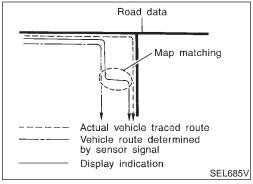

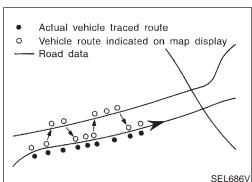

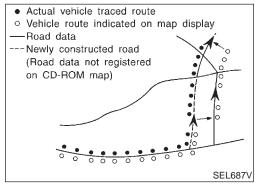

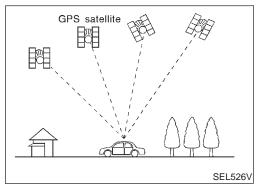

Map Matching

Map matching allows the driver to compare the sensed vehicle location data with the road map contained in the CD-ROM drive. Vehicle position is marked on the CD-ROM map. This permits the driver to accurately determine his/her present position on the highway and to make appropriate course decisions.

When GPS data reception is poor during travel, the vehicle position is not amended. At this time, manual manipulation of the CD-ROM map position marker is required.

Map matching permits the driver to make priority judgments about possible appropriate roads other than the one currently being traveled.

If there is an error in the distance or direction of travel, there will also be an error in the relative position of other routes. When two routes are closely parallel to one another, the indicated position for both routes will be nearly the same priority. This is so that, slight changes in the steering direction may cause the marker to indicate both routes alternately.

Newly constructed roads may not appear on the CD-ROM map. In this case, map matching is not possible. Changes in the course of a road will also prevent accurate map matching.

When driving on a road not shown on the CD-ROM map, the position marker used for map matching may indicate a different route. Even after returning to a route shown on the map, the position marker may jump to the position currently detected.

GPS (Global Positioning System)

GPS is the global positioning system developed and operated by the US Department of Defense. GPS satellites (NAVSTAR) transmit radio waves and orbit around the earth at an altitude of approximately 21,000 km (13,000 miles).

GPS receiver calculates the three-dimensional position of the vehicle (latitude, longitude, and altitude from the sea level) by the time difference of the radio wave arriving from more than four GPS satellites (three-dimensional positioning).

When the radio wave is received from only three GPS satellites, the two-dimensional position (latitude and longitude) is calculated, using the altitude from the sea level data calculated by using four GPS satellites (two-dimensional positioning).

Positioning capability is degraded in the following cases.

- In two-dimensional positioning, when the vehicle's altitude from the sea level changes, the precision becomes lower.
- The location detection performance can have an error of about 100 m (300 ft) even in three-dimensional positioning with high precision. Because the precision is influenced by the location of GPS satellites used for positioning, the location detection performance may drop depending on the location of GPS satellites.
- When the radio wave from GPS satellites cannot be received.

GI

GI

MA

LC

EG

FE

GL

MT

AT

2 40

TF

PU

 $\mathbb{A}\mathbb{X}$

@11

00

BR

ST


87

HA

SC

EL

for example, when the vehicle is in a tunnel, in a parking lot inside building, under an elevated superhighway or near strong power lines, the location may not be detected. Turbulent/ electric weather conditions may also affect positioning performance. If something is placed on the antenna, the radio wave from GPS satellites may not be received.

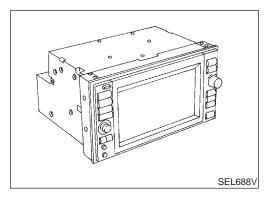


COMPONENT DESCRIPTION Display & NAVI Control Unit

NAEL0421S02

NAEL 0421 S020

- The gyro (angular speed sensor) and the CD-ROM drive are built-in units that control the navigation functions.
- Signals are received from the gyro, the vehicle speed sensor, and the GPS antenna. Vehicle location is determined by combining this data with the data contained in the CD-ROM map. Locational information is shown on liquid crystal display panel.
- Finger-operated touch switches are positioned on the liquid crystal display panel for easy operation.
- The touch switches used to control the equipment are beneath a glass sheet and two resistance membranes at the top of the liquid crystal display panel. The switches are sensitive to resistance value where touched with your finger to detect operating status.

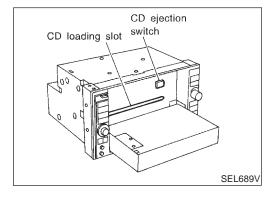

CD-ROM Driver

NAEL0421S020

Maps, traffic control regulations, and other pertinent information can be easily red from the CD-ROM disc.


NOTE:


- When removing the CD-ROM, allow it to remain open until the liquid crystal display locks.
- The liquid crystal display must be closed when the vehicle is running.
- Do not place cups, cans or other containers containing liquids on top of the liquid crystal display.


Map CD-ROM

NAEL0421S0203

- The map CD-ROM has maps, traffic control regulations, and other pertinent information.
- To improve CD-ROM map matching and route determination functions, the CD-ROM uses an exclusive Nissan format. Therefore, the use of a CD-ROM provided by other manufacturers cannot be used.

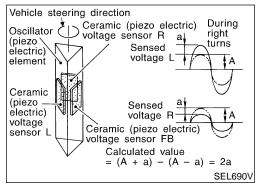

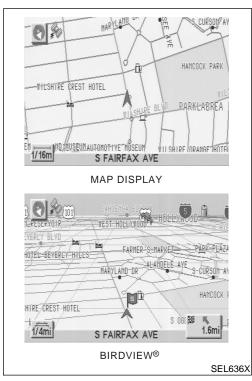

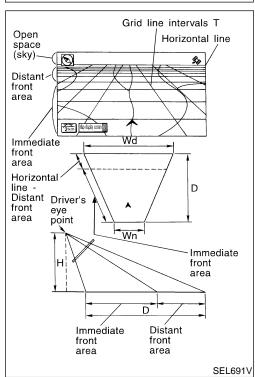

Gyro (Angular Speed Sensor)

The oscillator gyro sensor is used to detect changes in vehicle steering angle.

MA

GI

The oscillator gyro periodically senses oscillatory variation at the oscillation terminals. This variation is caused by changes in the vehicle angular velocity. Voltage variations are sensed by ceramic voltage sensors at the left and right sides of the terminals. Vehicle angular velocity corresponds directly with these changes in voltage.

The gyro is built into the display & navigation (NAVI) control

BIRDVIEW®

EC

The BIRDVIEW provides a detailed and easily seen display of road conditions covering the vehicle's immediate to distant area.

FE

MI

GL

AT

TF

AX

SU

Description

Display area: Trapezoidal representation showing approximate distances (Wn, D, and Wd).

BR

Ten horizontal grid lines indicate display width while six vertical grid lines indicate display depth and direction.

ST

Drawing line area shows open space, depth, and immediate front area. Each area is to a scale of approximately 5:6:25.

When the "ZM-" button is pushed, the view point height is increased. Pushing the "ZM+" button decreases the height. Pushing the "ZM-" button or the "ZM+" button during operation indicates the scale change and the view point height at the left-hand side of the screen.

BT


HA

SC

FUNCTION OF TOUCH SWITCH (SUMMARY) Display with Pushed "MAP" Switch

=NAEL0421S03


NAEL0421S0301

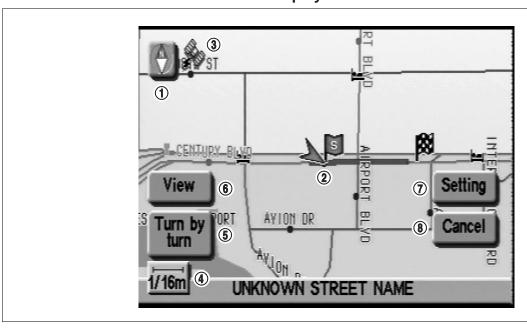

SEL580X

The function of each touch switch is as follows:

- 1) Azimuth indication
- Position marker
 The tip of the arrow shows the current position. The shaft of the arrow indicates the direction in which the vehicle is traveling
- 3) GPS reception signal (indicates current reception conditions)
- 4) Distance display (shows the distance in a reduced scale)
- 5) Current location voice information (this information is available when the route guide is being activated and the designated route is being traveled.)
- 6) Switch display from map screen to BIRDVIEW® screen (change to map screen on display when the BIRDVIEW® is being used.)
- 7) The following items can be set.
- Save Current Location
- Edit Address Book
- Guide Volume
- System Setting
- 8) The route guide operation can be canceled.

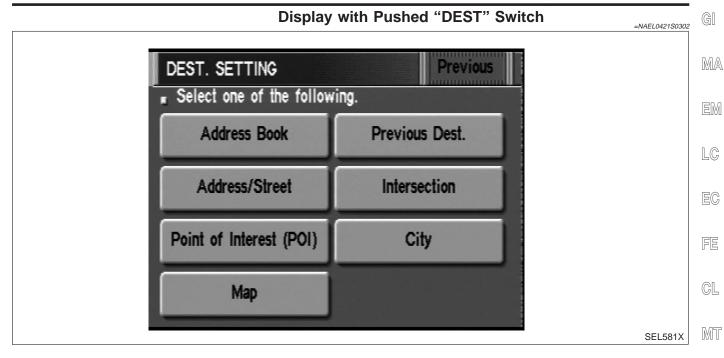

The function of each touch switch is as follows:

The function of each	1 touch switch is as follows.	ΔT
Icon	Description	<i>[</i> -7]
Address Book	Favorite place can be saved to memory. The destination can be selected from the memory.	TF
Address/Street	The destination can be searched from the address.	
Point of Interest (POI)	The destination of favorite facility can be searched.	PD
Previous Dest.	The previous ten destinations stored in memory are displayed.	
Intersection	The destination from the intersection name can be retrieved.	SU
City	The destination can be searched from city name.	
Мар	The destination can be searched from the map.	BR

SC

ST

RS


BT

HA

EL

NAEL0421S0303

Display with Toutch Screen

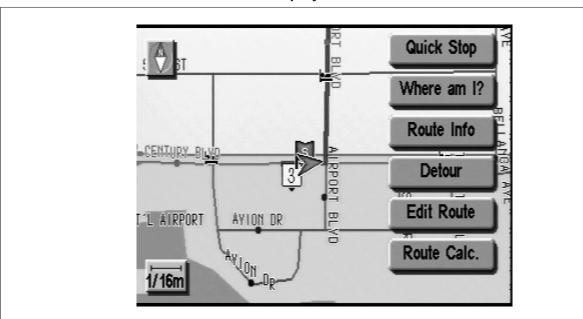

SEL582X

The function of each touch switch is as follows:

Icon	Description
Quick Stop	The selected facility is set as the destination or way-point. (Route guidance has been turned OFF or the destination has been reached.)
Where am I?	Next, current and previous street names can be displayed.
Route Info.*	The following items can be set. Complete Route Turn List Route Simulation (Displayed only when the destination area has been set.)
Detour*	Based on the selected distance, an alternative route is searched. [Displayed only when the recommended route (not its reverse) is followed.]
Edit Route*	Change the destination or add the transit points of the route set in the route guide. (Displayed only when the automatic reroute function has been turned OFF and the recommended route is not followed.)
Route Calc.	Search for a recommended route between the vehi- cle's current location and the destination area. (Dis- played only when the destination area has been set.)

^{*:} When destinations have been entered, route guidance has been turned OFF or destination has been reached, "Route Info.", "Detour", "Edit Route" and "Route Calc." are not displayed.


NAVIGATION SYSTEM SMART C/U - NEW Schematic Schematic G[NAEL0422 MAFUSE 33 BATTERY 4 EM AUDIO LC IGNITION SWITCH ACC or ON FUSE EC 9 FE ო To illumination system GL DISPLAY & NAVI CONTROL UNIT MT 39403738 8 24 AT TWEETER RH TF ABS ACTUATOR AND ELECTRIC UNIT 28 34 PD 3 19 $\mathbb{A}\mathbb{X}$ COMBINATION METER 30 36 σ SU 4 9 BR UNIFIED METER CONTROL UNIT (With odo/trip meter) ST 4 FUSE RS 7 IGNITION SWITCH ON or START FUSE BT


MEL270N


HA

SC

EL

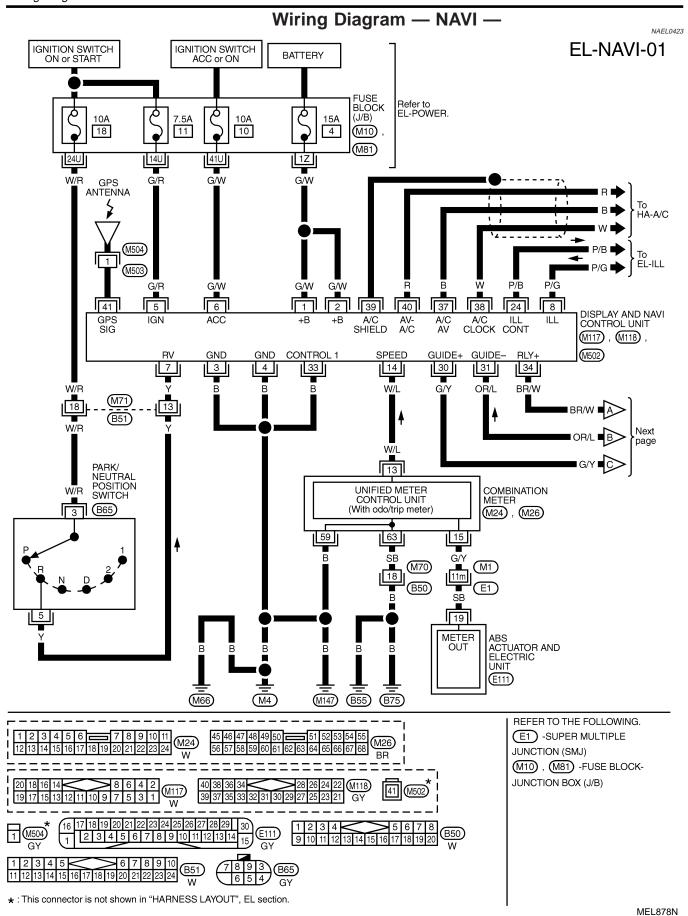


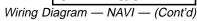


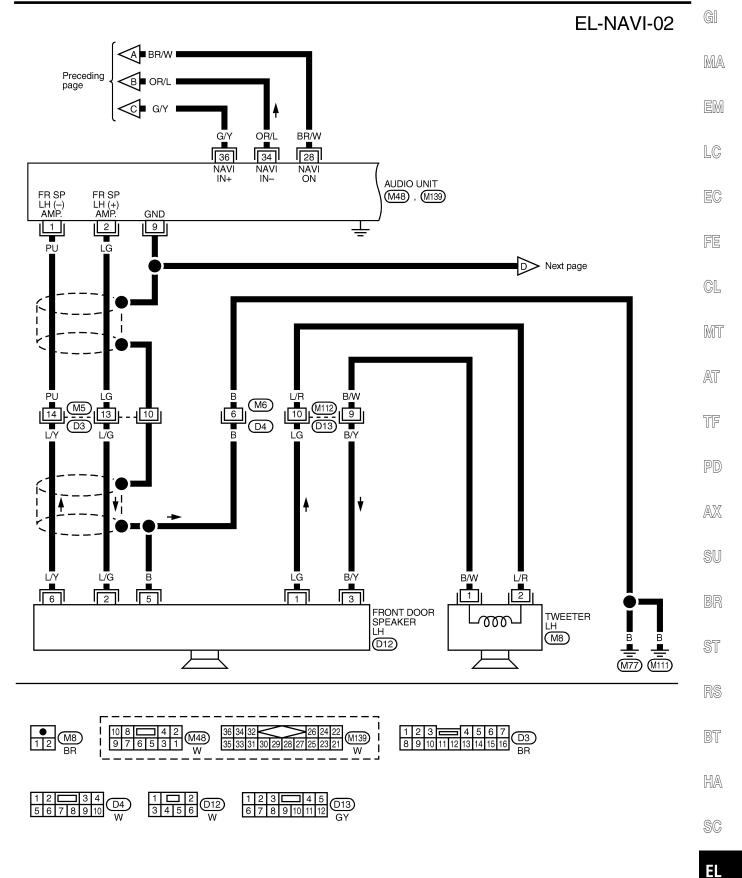

MEL272N

EL-NAVI-03

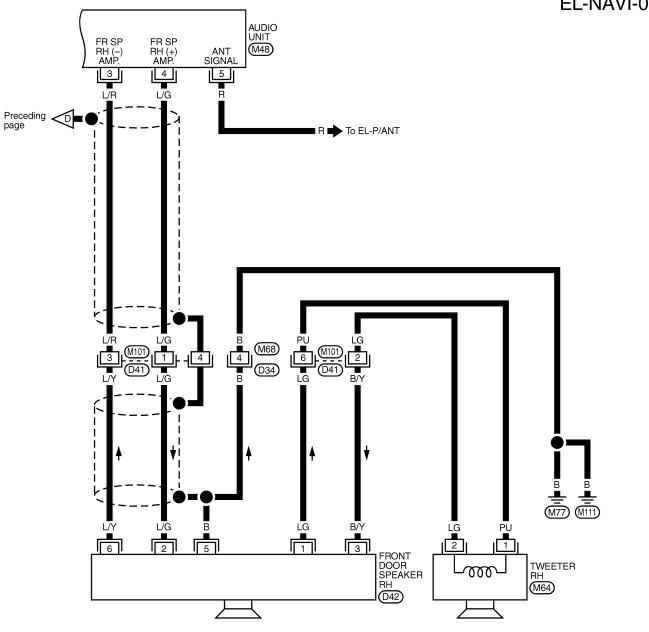

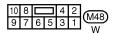





SMART C/U - NEW

Self-diagnosis Mode


Self-diagnosis Mode APPLICATION ITEMS

NAEL0424

G[

MAEI	0424601	

				NAEL0424S01	
Mode			Description	Reference page	M
Self Diagnosis			Self-diagnosis for display & NAVI control unit, CD-ROM and GPS antenna connection.	EL-818	EN
	Display Diagno	osis	Color and gray gradation of display can be checked in this mode.	EL-826	LC
	Diagnostic Sig	nals from the Car	Several input signals to display & NAVI control unit, can be monitored in this mode.	EL-824	EC
		Check the map CD-ROM version	The version (parts number) of inserted CD-ROM can be checked in this mode.	EL-825	FE
		Error history	Diagnosis results previously stored in the memory (before turning ignition switch ON) are displayed in this mode. Time and location when/where the errors occurred are also displayed.	EL-820	Cl
Confirmation/ adjustment	Navigation	Longitude & Latitude	Display the map. Use the joystick to adjust position. Longitude and latitude will be displayed.	EL-827	M
adjaotinont		Adjust the angle	Turning angle of the vehicle on the display can be adjusted in this mode.	EL-828	AT
		Speed Calibration	Under ordinary conditions, the navigation system distance measuring function will automatically compensate for minute decreases in wheel and tire diameter caused by tire wear or low pressure. Speed calibration immediately restores system accuracy in cases such as when distance calibration is needed because of the use of tire	EL-829	TF
		Initialize Location	chains in inclement weather. This mode is for initializing the current location. Use when the vehicle is transported a long distance on a trailer, etc.	EL-853	PL AX

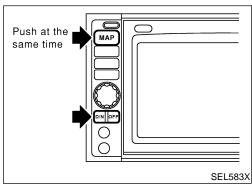

Self Diagnosis Previous Select one of the following. Self Diagnosis Confirmation/ adjustment SEL584X

HOW TO PERFORM SELF-DIAGNOSIS MODE

NAEL0424S02

1. Start the engine.

2. Push both of "MAP" and "D/N" switches at the same time for more than 5 seconds.

ST RS

SU

3. Touch "Self Diagnosis" or "Confirmation/ adjustment".

For further procedure, refer to the following pages which describe each application item of the self-diagnosis mode.

HA


BT

SC

EL

 $\mathbb{D}\mathbb{X}$

NAEL0424S0201

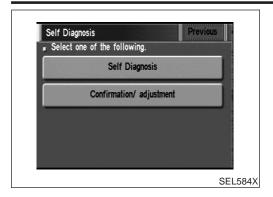

"Self Diagnosis"


1. Start the engine.

2. Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.

3. Touch "Self Diagnosis".



4. Self-diagnosis will be performed.

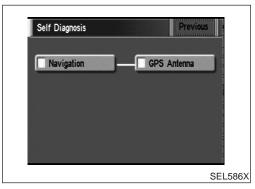

 Diagnosis results will be displayed. Diagnosis results are indicated by display color. For details refer to "SELF-DIAGNOSIS RESULTS".



To obtain detailed diagnosis results on the screen, touch "Navigation" or "GPS Antenna".

SMART C/U - NEW

Self-diagnosis Mode (Cont'd)

SELF-DIAGNOSIS RESULTS

		SE	ELF-DIAGNOSIS RESULTS	=NAEL0424S03
Diagnosed item	Displayed color	Detailed result	Description	Diagnoses/service procedure Recheck system at each check or replacement (When malfunction is eliminated, further repair work is not required.)
	Green	_	GPS antenna is connected to display & NAVI control unit correctly.	_
"GPS Antenna" (GPS antenna con- nection)	Yellow	Connection to the following unit is abnormal. See the Service Manual for further diagnosis.	GPS antenna connection error is detected.	Check GPS antenna feeder cable connection at display & NAVI control unit. Visually check GPS antenna feeder cable. If NG, replace GPS antenna assembly. Replace GPS antenna.
	Green	_	No failure is detected.	_
	Red	[*** is abnormal.]	Display & NAVI control unit is mal- functioning.	Replace display & NAVI control unit.
	Gray	Self-diagnosis for CD- ROM DRIVER of DISP & NAVI was not conducted due to no insertion of CD-ROM.	Any CD-ROM is not inserted or display & NAVI control unit is malfunctioning.	Confirm that map CD-ROM is not inserted into display & NAVI control unit. Replace display & NAVI control unit.
"Navigation" (Display & NAVI control unit)		CD-ROM or CD-ROM DRIVER of DISP & NAVI is abnormal. See the Service Manual for fur- ther diagnosis.	Display & NAVI control unit judges that inserted CD-ROM is malfunctioning. Map CD-ROM or CD-ROM driver of the unit is malfunctioning.	Confirm the disk is installed correctly (not up side down.) Perform "CD-ROM VERSION CHECK" in EL-825 to confirm whether correct CD-ROM is inserted or not.
unity	Yellow	CD-ROM is abnormal. Yellow Please check the disc.	Inserted map CD-ROM can not be read. Map CD-ROM or CD-ROM driver of the unit is malfunctioning.	 3. Check the disk surface. Are there any scratches, abrasions or pits on the surface? 4. Replace the CD-ROM. 5. Replace display & NAVI control unit.
		Connection to the following unit is abnormal. See the Service Manual for further diagnosis.	GPS antenna connection error is detected.	Check GPS antenna feeder cable connection at display & NAVI control unit. Visually check GPS antenna feeder cable. If NG, replace GPS antenna assembly. Replace GPS antenna.











EL

Confirmation/Adjustment Mode "ERROR HISTORY" MODE

=NAEL0425

NAEL0425S01

Description

In this mode, historical errors of the system are displayed with the following data.

- How many times the error was detected
- The last time data when the error was detected
- The last place where the error was detected

NOTE:


- The number of errors can be counted up to 50 times. More than 51 times will be indicated as 50 times.
- Malfunction of the GPS board (inside the display & NAVI control unit) will result in the display of incorrect time data.
- When an error occurs, an incorrect position marker appears on the display. The accuracy of the display data (position marker) will be affected.




How to Perform

NAFI 0425S0102

- 1. Start the engine.
- Push both "MAP" and "D/N" switch at the same time for more than 5 seconds.
- 3. Touch "Confirmation/ adjustment".

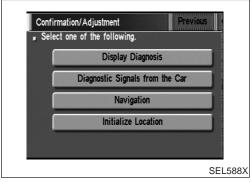

4. Touch "Navigation".

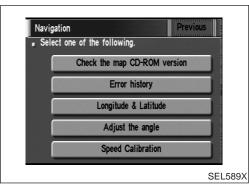

Touch "Error history".

SMART C/U - NEW

Confirmation/Adjustment Mode (Cont'd)



6. If trouble items are displayed with time count, repair/replace the system according to "Error history" TABLE, EL-822.

If necessary, touch error item to display the time when the error was detected and the place where the error was detected.

After repairing the system, erase the diagnosis memory. 8.

When the display & NAVI control unit must be replaced, do not erase the diagnosis memory for further inspection of malfunctions.

Start the engine.

- Push both "Map" and "D/N" switches at the same time for more than 5 seconds.
- Touch "Confirmation/ adjustment". C.
- Touch "Navigation". d.
- Touch "Error history". e.
- f. Touch "Delete".
- Touch "Yes". g.

MA

LC

EC

GL

MT

AT

TF PD

 $\mathbb{A}\mathbb{X}$

SU

HA

SC

"ERROR HISTORY" TABLE					
Detected items	Description	Diagnosis/service procedure	Refer- ence page		
Gyro sensor disconnected	Communications malfunction between display & NAVI control unit and internal gyro	Perform self-diagnosis to confirm whether the display & NAVI control unit is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused by strong electromagnetic wave interference.	EL-817		
Connection problem of speed sensor	Input malfunction of display & NAVI control unit and speed sensor	Check vehicle speed sensor signal in "Diagnosis for signals from the car" mode. If the input signal is not detected correctly, check harness for open or short between combination meter and display & NAVI control unit.	EL-824		
GPS disconnected		Perform self-diagnosis to confirm whether the display & NAVI control unit	EL-817		
GPS transmission cable malfunction	Communications malfunction between display & NAVI control unit and GPS board	is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused by strong electromagnetic wave interfer-			
GPS input line connection error		ence.			
GPS TCXO over GPS TCXO under	The transmission circuit of the GPS board frequency synchronization oscillator (inside the display & NAVI control unit) is sending an oscillation frequency	A location error occurs. Strong electro- magnetic wave interference may have occurred. The GPS antenna may be in a very hot or very cold environment. This is usually a temporary malfunction.	_		
	that is greater or less than the set value.				
GPS ROM malfunction GPS RAM malfunction	Internal malfunction of GPS board RAM or ROM inside the display & NAVI control unit.	Perform self-diagnosis to confirm whether the display & NAVI control unit is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused by strong electromagnetic wave interference.	EL-817		
GPS RTC malfunction	Malfunction of GPS board clock IC inside the display & NAVI control unit.				
GPS antenna disconnected	_	Perform self-diagnosis to confirm GPS antenna connection. If no failure is detected, a momentary and/or temporary malfunction may have been caused by a strong impact.	EL-825		
Low voltage of GPS	Power supply voltage for GPS board inside the display & NAVI control unit is low.	Check power supply circuits for display & NAVI control unit.	EL-837		
		Perform self-diagnosis to confirm GPS antenna connection.	EL-817		
		3. If above diagnosis results are OK, a momentary and/or temporary malfunction may have been caused by a strong impact.			
CD-ROM communication error CD-ROM driver malfunction (inside the display & NAVI control unit)		Perform self-diagnosis to confirm whether the display & NAVI control unit is malfunctioning or not. If no failure is detected, a momentary and/or temporary malfunction may have been caused by strong electromagnetic wave interference.	EL-817		

SMART C/U - NEW

Confirmation/Adjustment Mode (Cont'd)

Detected items	Description	Diagnosis/service procedure	Refer- ence page
Loading mechanism malfunction	_	Check that whether the disc can be inserted and ejected correctly. If the loading function does not operate correctly, replace NAVI & display control unit.	_
CD-ROM reading error	It is confirmed that the appropriate CD-ROM disc is positioned in the CD-ROM loader. However, no data can be read.	Perform self-diagnosis to confirm whether the inserted disc is malfunction-	EL-817
Malfunctioning of error correction for CD-ROM	Erroneous data is read from the CD-ROM. The errors cannot be corrected.	ing or not.	
CD-ROM focus error	CD-ROM data reading beam is out of focus.	Rough road driving might create CD skipping like music CD audio unit.	_
CD-ROM malfunction	_	Perform self-diagnosis to confirm whether the inserted disc is malfunctioning or not.	EL-817

. . .

MA

G[

LC

EC

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA

SC

EL

"DIAGNOSTIC SIGNALS FROM THE CAR" MODE Description

VEI 04328030-

In "Diagnostic Signals From the Car" mode, following input signals to the display & NAVI control unit can be checked on the display.

Item	Indication	Vehicle condition
Vehicle Speed*	ON	Vehicle speed is greater than 0 km/h (0 MPH).
	OFF	Vehicle speed is 0 km/h (0 MPH).
Light	ON	Lighting switch is in 1st or 2nd position.
	OFF	Lighting switch is in "OFF" position.
IGN	ON	Ignition switch is in "ON" position.
	OFF	Ignition switch is in "ACC" position.
REVERSE*	ON	Selector/shift lever is in "Reverse" position.
	OFF	Selector/shift lever is in other than "Reverse" position.


^{*:} When ignition switch is in "ACC" position, indication will be changed to "-".




How to Perform

NAEL0425S0302

- 1. Start the engine.
- Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.
- 3. Touch "Confirmation/ adjustment".

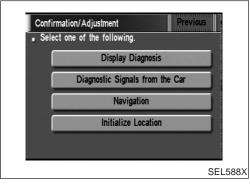


4. Touch "Diagnostic Signals from the Car".

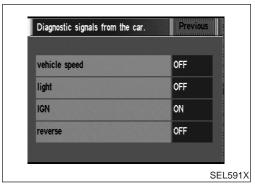


5. Then "Diagnostic Signals from the Car" mode is performed.

Confirmation/Adjustment Mode (Cont'd)

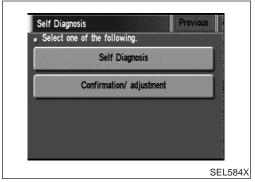

Confirmation/Adjustment Select one of the following.

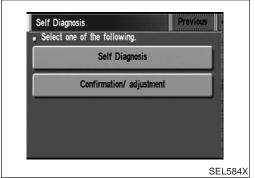

"CHECK THE MAP CD-ROM VERSION" MODE **How to Perform**

=NAEL0425S04

Start the engine.

NAEL0425S0401

Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.

 $\mathbb{M}\mathbb{A}$

Touch "Confirmation/ adjustment".

LC

Touch "Navigation".

EG

GL

MT

AT

Touch "Check the map CD-ROM version".

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

6. The version (parts number) of CD-ROM loaded to the display and NAVI control unit will be displayed.

BR

ST


HA


SC

EL



Display Diagnosis Diagnostic Signals from the Car

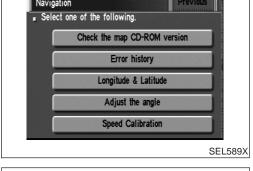

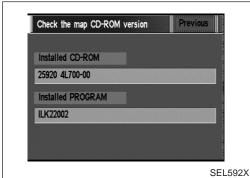


"DISPLAY DIAGNOSIS" MODE

Description

=NAEL0425S05


Use the "Diagnosis Display" mode to check the display color brightness and shading. The display & NAVI control unit must be replaced if the color brightness and shading are abnormal.

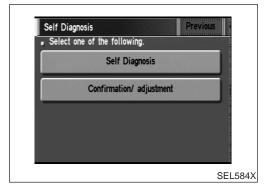


How to Perform

NAEL0425S0502


- 1. Start the engine.
- 2. Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.
- 3. Touch "Confirmation/ adjustment".

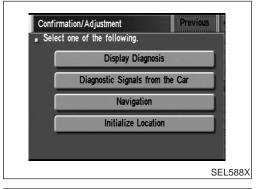

4. Touch "Display Diagnosis".

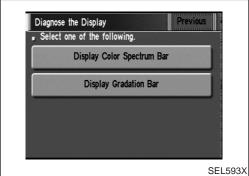

- 5. Touch "Display color spectrum bar" or "Display gradation bar".
- 6. Then color bar/gray scale will be displayed.

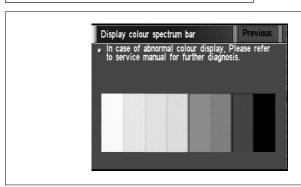



SEL594X

"LONGITUDE & LATITUDE" MODE

Description

NAEL0425S06

The "Longitude & Latitude" is used to confirm the longitude and latitude of some optional area point.

MA

LC EG

How to Perform Start the engine.

NAEL0425S0602

Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.

Touch "Confirmation/ adjustment".

Touch "Longitude & Latitude".

GL

MT

AT

Touch "Navigation".

TF


PD


AX

SU


HA

SC

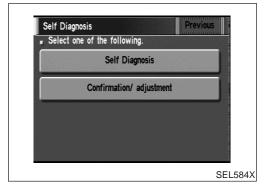

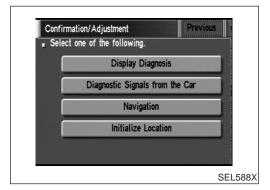



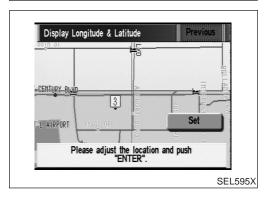

The longitude and latitude are displayed.

"ADJUST THE ANGLE" MODE

Description

=NAEL0425S07

If the display indicates a larger or smaller turning angle than the actual turning angle, the gyro (angular speed sensor) sensing values must be checked.


In case that the vehicle on the display makes larger angle turn than reality, touch "-". In case that the vehicle on the display makes smaller angle turn than reality, touch "+".




How to Perform

NAFL0425S0702


- 1. Start the engine.
- 2. Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.
- 3. Touch "Confirmation/ adjustment".

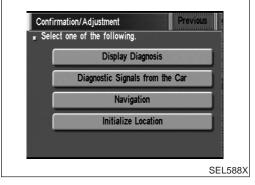

4. Touch "Navigation".

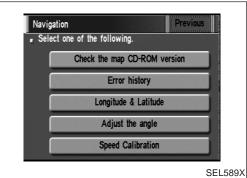



5. Touch "Adjust the angle".

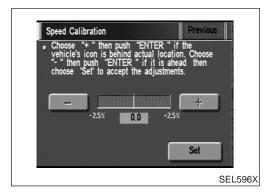


- 6. Touch "Left Turn" to adjust the angle to the left. Touch "Right Turn" to adjust the angle to the right.
- 7. Touch "+" to increase the angle change coefficient or "-" to reduce the angle change coefficient.
- 8. Touch "Set" to save the changed values in memory.
- 9. Then the vehicle turning angle on the display has adjusted.

Confirmation/Adjustment Mode (Cont'd)

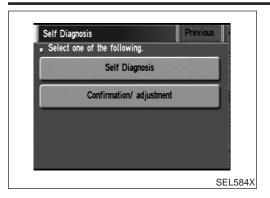

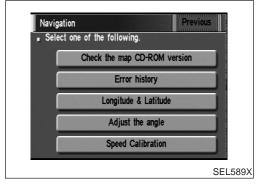

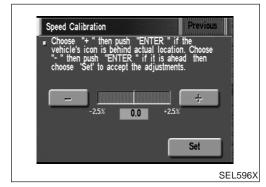

SPEED CALIBRATION

Start the engine.

Push both "MAP" and "D/N" switches at the same time for more than 5 seconds.

3. Touch "Confirmation/ adjustment".

Touch "Navigation".

Touch "Speed Calibration".

Touch "+" or "-" to adjust the distance change coefficient.

To make the distance change coefficient smaller, touch "-".

To make the distance change coefficient larger, touch "+".

7. Touch "Set".

MA

LC

EG

GL

MT

AT

TF

PD

SU

BR

ST

BT

HA

SC


EL

Setting Mode APPLICATION ITEMS

=NAEL0426

NAEL0426S01

Mode	Description	Reference page
GPS Information	The GPS includes longtitude, latitude and altitude (distance above sea level) of the present vehicle position, and current date and time for the area in which the vehicle is being driven. Also indicated are the GPS reception conditions and the GPS satellite position.	EL-830
Quick Stop Customer Setting	One facility of your selection can be added to your Quick Stop.	EL-833
Route Priorities	Priorities of search request and automatic re-searching can be set for route search.	EL-834
Tracking	Tracking to the present vehicle position can be displayed.	EL-834
Display Setting	The following display settings can be customized. • Display color (Day mode or Night mode) • Brightness of display	EL-832
Heading	Heading of the map display can be customized for either north heading or the actual driving direction of the vehicle.	EL-835
Nearby Display Icons	Icons of facilities can be displayed. Facilities to be displayed can be selected from the variety of selections.	EL-836
Adjust Current Location	Current location of position marker can be adjusted. Direction of position marker also can be calibrated when heading direction of the vehicle on the display is not matched with the actual direction.	EL-831
Avoid Area Setting	Particular area can be avoided when routing.	_
Beep On/Off	Beep sounds which correspond to the system operation can be activated/deactivated.	EL-832
Clear Memory	Address book, Previous destination or Avoid area can be deleted.	EL-836

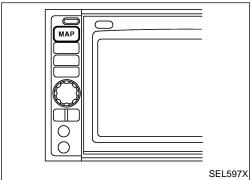

HOW TO PERFORM CONTROL PANEL MODE


NAEL0426S02


- 1. Start the engine.
- 2. Push "MAP" switch.
- For further procedures, refer to the following pages which describe each application item of the control panel mode.

"GPS INFORMATION" SETTING

NAEL0426S03

- 1. Start the engine.
- 2. Push "MAP" switch.
- 3. Touch "Setting".

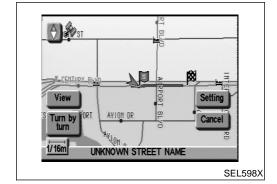

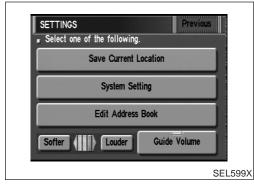

4. Touch "System Setting".

GI

MA

LC

Touch "GPS Information".

FE

GL

MT

AT

TF

PD

SU

NAEL0426S04

.___.

ST

RS

BT

HA

SC

ΕL

SYSTEM SETTINGS
Select one of the following.

Clear Memory

GPS Information


Quick Stop Customer Settings

Route Priorities

Tracking

SEL600X


6. Then GPS information will be displayed.

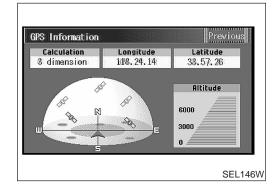

View
STUM BY ORT AYION OR CANCEL

WINKNOWN STREET NAME


SEL598X

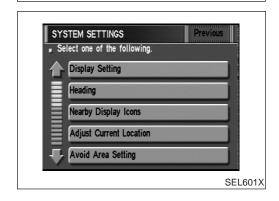


"ADJUST CURRENT LOCATION" SETTING

- 1. Start the engine.
- 2. Push "MAP" switch.
- 3. Touch "Setting".
- 4. Touch "System Setting".

5. Touch "Adjust Current Location".

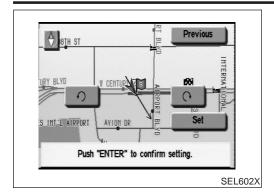


- 6. Touch "\cap" or "\cap" to calibrate the heading direction. (Arrow marks will rotate corresponding to the calibration key.)
- 7. Touch "Set". Then the vehicle mark will be matched to the arrow mark.
- 8. Display will show "Heading direction has been calibrated" and then go back to the current location map.

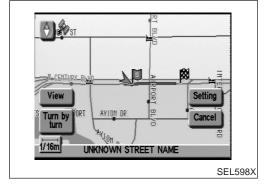


BEEP ON/OFF SETTING

NAFL 0426S05

- 1. Start the engine.
- 2. Push "MAP" switch.
- 3. Touch "Setting".
- 4. Touch "System Setting".

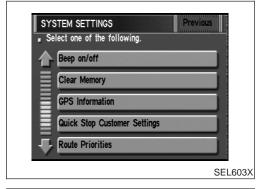

5. Touch "Beep on/off".

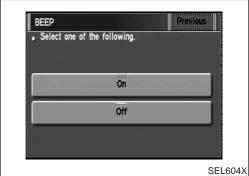

- 6. Touch "On" or "Off" icon.
- If you want the beep sound, select "ON".
- If you do not want the beep sound, select "OFF".
- 7. Push "MAP" switch, then the display will go back to the current location map.

DISPLAY SETTING

Description

NAEL0426S06

NAEL0426S0601

The following display setting can be changed in this mode.

- Dimmer operation (when lighting switch is turned on.)
- Display color (Day mode or Night mode)
- Brightness of display

NAEL0426S07

MA

LC

EG

GL

MIT

AT


PD

 $\mathbb{A}\mathbb{X}$

SU

NAFI 0426S08

NAEL0426S09

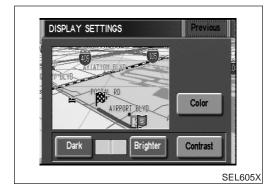

DISPLAY COLOR SETTING

- Start the engine.
- Push "MAP" switch.
- 3. Touch "Setting".
- Touch "System Setting".
- Touch "Color". Display color will change to Day mode/Night mode.
- Touch "Previous". 6.

NOTE:

- Display color can be changed independently when lighting switch is turned on and off.
- Initial setting of the color is as follows: When lighting switch is turned off: Day mode When lighting switch is turned on: Night mode Day mode: White background

Night mode: Black background



Start the engine. Push "MAP" switch. 2. 3. Touch "Setting".

Touch "System Setting". 4.

5. Touch "Bright" or "Dark" to adjust the brightness of display.

Touch "Previous".

BRIGHTNESS SETTING

NOTE:

Display brightness can be adjusted independently when lighting switch is turned on and off.


"QUICK STOP CUSTOMER SETTING" MODE

Start the engine.


Push the "MAP" switch.

3. Touch "Setting".

Touch "System Setting".

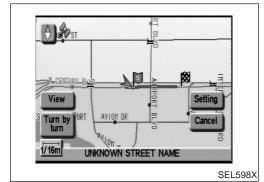

Touch "Quick Stop Customer Setting".

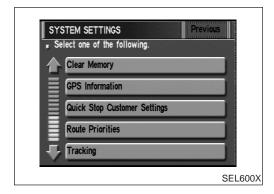


HA SC

EL




6. Select from the itemized list.

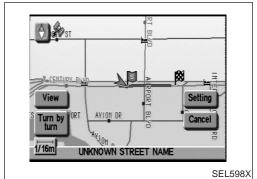

"ROUTE PRIORITIES" MODE

NAEL0426S10


- 1. Start the engine.
- 2. Push the "MAP" switch.
- 3. Touch "Setting".
- 4. Touch "System Setting".

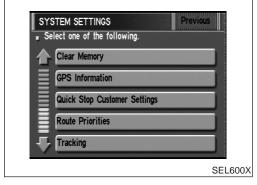

5. Touch "Route Priorities".



6. Select from the itemized list.

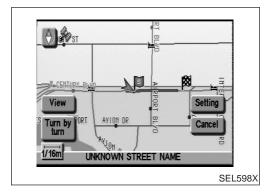

"TRACKING" MODE

1. Start the engine.

- 2. Push the "MAP" switch.
- 3. Touch "Setting".
- 4. Touch "System Setting".

NAEL0426S11

GI

MA

LC

EG

GL

MT

AT


TF

PD

AX

SU

NAFI 0426S12

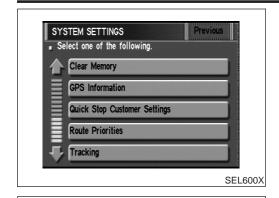


To delete the tracking marks (ooo), select "Off"

On

Off

5. Touch "Tracking".

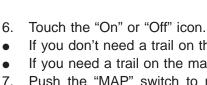

If you don't need a trail on the map, select "Off".

If you need a trail on the map, select "On".

Push the "MAP" switch to return the display to the current location map.

NOTE:

SEL608X

When a trail display is turned OFF, trail data is erased from the memory.

ST View AYION DR Turn by turn UNKNOWN STREET NAME "HEADING" MODE


1. Start the engine.

2. Push the "MAP" switch.


3. Touch "Setting".

4. Touch "System Setting".


SEL598X

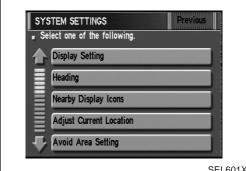

5. Touch "Heading".

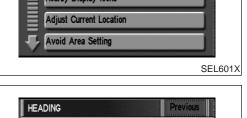


- Touch the "Heading up" or "North up" icon. 6.
- To display North up, select "North up".
- To display the car heading up, select "Heading up".
- Push the "MAP" switch, then the display will go back to the current location map.

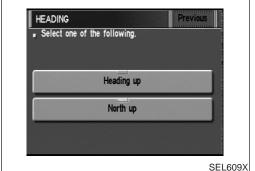

EL

HA


SC

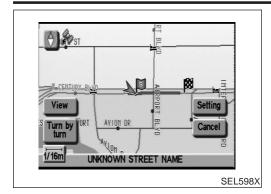


"NEARBY DISPLAY ICONS" MODE

NAEL0426S13


- 1. Start the engine.
- 2. Push the "MAP" switch.
- 3. Touch "Setting".
- 4. Touch "System Setting".

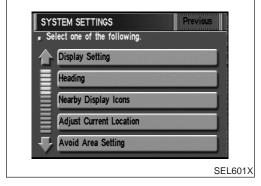

5. Touch "Nearby Display Icons".

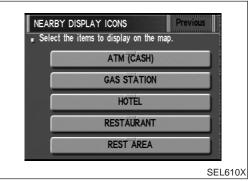

- Select and touch the itemized list.
- 7. Push the "MAP" switch to return the display to the current location map.

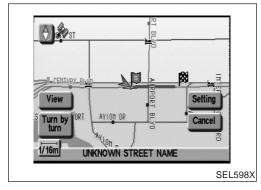

"CLEAR MEMORY" MODE

NAEL0426S14

- 1. Start the engine.
- 2. Push the "MAP" switch.
- 3. Touch "Setting".
- 4. Touch "System Setting".

SYSTEM SETTINGS

Select one of the following.

Clear Memory

GPS Information

Quick Stop Customer Settings

Route Priorities


Tracking

SEL600X

Touch "Clear Memory".

SMART C/U - NEW

Setting Mode (Cont'd)

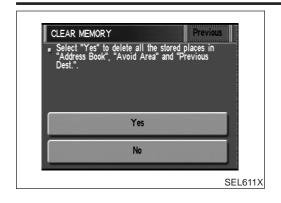

6. To delete all the stored places in the "Address Book", "Avoid Area" and "Previous Dest.", select "Yes".

d G[

MA

EM

LC

EG

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL


Trouble diagnoses SYMPTOM CHART

NAEL 042

SYMPTOM CHART		
Symptom	Diagnoses/service procedure	Reference page
Any function of the system does not operate.	Check power supply and ground circuit for display & NAVI control unit.	EL-840
Strange screen color or	1. Check "DISPLAY SETTING".	EL-832
unusual screen brightness.	2. Check display in "Diagnosis of Display" MODE.	_
The display is not dimmed	1. Check "DISPLAY SETTING".	EL-832
when turning lighting switch to ON.	2. Check lighting switch signal input to display & NAVI control unit correctly in "Diagnosis for the signals from the car" MODE.	EL-824
No navigation guide voice are heard from both front	Check "Voice Guidance Setting".	_
speakers.	2. Check voice guide operation.	EL-841
Beep does not sound when the system guides route.	Check "BEEP ON/OFF SETTING".	EL-832
Position marker does not trace along the route being traveled.	Go to "WORK FLOW FOR NAVIGATION INSPECTION".	EL-838
Position marker does not indicate forward or backward movement.	Check reverse signal input to display & NAVI control unit correctly by "Diagnosis for the signals from the car" MODE.	EL-824
Radio wave of GPS cannot be received. (GPS marker	Is there anything obstructing the GPS antenna on the rear parcel finisher? (GPS antenna located under the rear parcel finisher.)	_
on the display does not	2. Check GPS radio wave receive condition in "GPS INFORMATION SETTING".	EL-830
become green color.)	3. Check GPS antenna in "Self Diagnosis" MODE.	EL-817
Heading direction of position	1. Perform "ADJUST CURRENT LOCATION" SETTING.	EL-831
marker does not match vehicle direction.	2. Go to "WORK FLOW FOR NAVIGATION INSPECTION".	EL-838
Stored location in the address book and other memory functions are lost when battery is disconnected or becomes discharged.	Stored location in the address book and other memory functions may be lost if the battery is disconnected or becomes discharged. If this should occur, charge or replace the battery as necessary and re-enter the information.	_
Map appears grey and cannot be scrolled.	The current location in the memory is out of the map data area. Perform "Initialize Location".	EL-853

WORK FLOW FOR NAVIGATION INSPECTION

NAFL0427S02

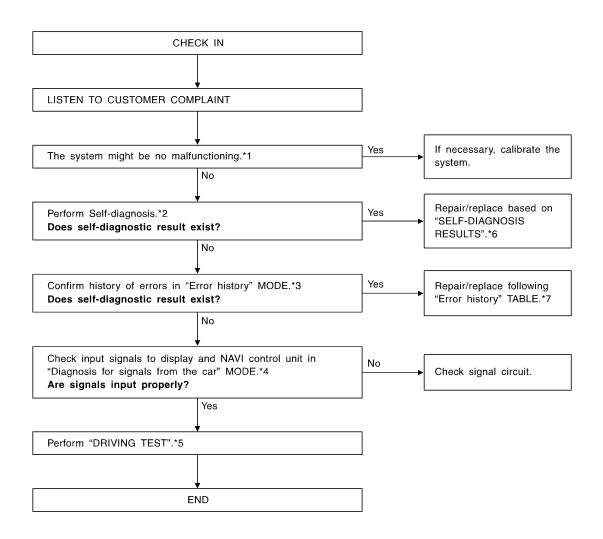

SEL629X

*1: EL-843 *2: EL-817 *4: EL-824 *5: EL-839 *6: EL-819 *7: EL-822

*3: EL-820

SMART C/U - NEW

Trouble diagnoses (Cont'd)

DRIVING TEST

₂₇₈₀₃ G

During the driving test, diagnose the system by checking the difference of symptoms with each sensor ON or OFF.

Test pattern 1

MA

Test method in which current position adjustment is not made according to GPS data.

Remove the GPS antenna connector from the display & NAVI control unit. Drive the vehicle.

Before driving the vehicle, perform "ADJUST CURRENT LOCATION" (EL-831).

LC

Test pattern 2

Test procedure in which map matching is not used.

EG

 Before driving the vehicle, perform "ADJUST CURRENT LOCATION" (EL-831). With the ignition switch OFF and the map CD-ROM removed from the display & NAVI control unit, drive the vehicle. After driving the vehicle, reinstall the map CD-ROM. Compare the saved driving tracks for the vehicle's current location with roads on the map.

FE

Example

<The position marker consistently indicates the wrong position when driving in the same area. Determine if this is the result of the map matching function or the GPS function.>

MT

CL

→ Perform test pattern 1.

<To verify the accuracy of the road configuration shown on the display>

AT

→ Perform test patterns 1 and 2.

TF

• Compare the map and the saved driving tracks. The precision of the saved driving tracks is within several hundred meters.

<To make distance calibration and adjustments>

PD

 \rightarrow Perform test patterns 1 and 2.

M

Make adjustments by driving the vehicle over a known course (highway or other road where distances are clearly marked). Calibrate the distance against the known distance. Use the formula below.

Calibration value = Screen display distance/Actual distance

ЫK

37


RS

BT

HA

@@

FΙ

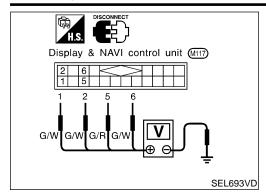

POWER SUPPLY AND GROUND CIRCUIT CHECK FOR DISPLAY & NAVI CONTROL UNIT


Power Supply Circuit Check

=NAEL0427S04 NAEL0427S0401

Te	erminal	Ignition switch		
(+)	(-)	OFF	ACC	ON
1	Ground	Battery voltage	Battery voltage	Battery voltage
2	Ground	Battery voltage	Battery voltage	Battery voltage
5	Ground	0V	0V	Battery voltage
6	Ground	0V	Battery voltage	Battery voltage

If NG, check the following.


- 7.5A fuse [No. 11, located in the fuse block (J/B)]
- 10A fuse [No. 10, located in the fuse block (J/B)]
- 15A fuse [No. 4, located in the fuse block (J/B)]
- Harness for open or short between fuse and display & NAVI control unit

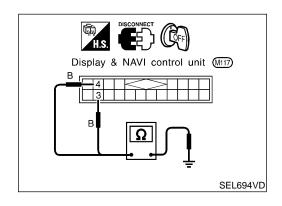



Ground Circuit Check


NAFI 0427S0402

	74 1220 127 00 102
Terminals	Continuity
3 - Ground	Yes
4 - Ground	Yes

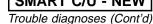

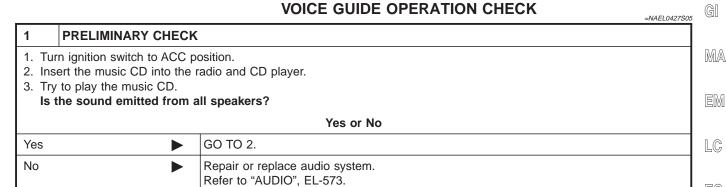

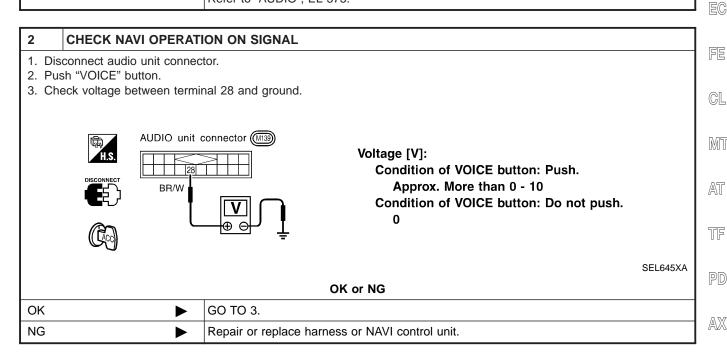


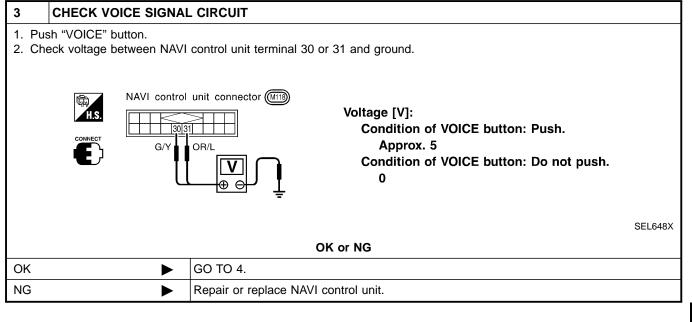

ST

BT

HA

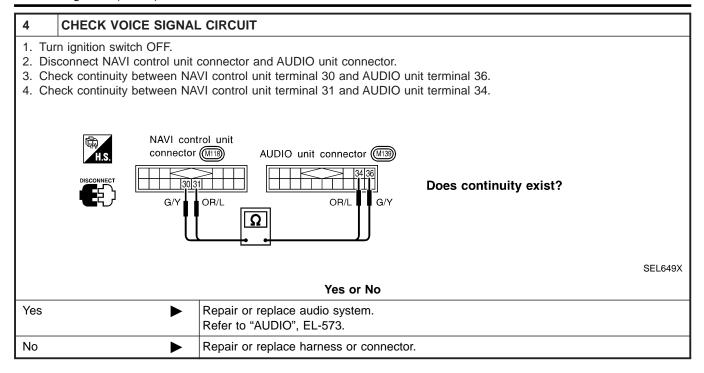

SMART C/U - NEW This Condition is Not Abnormal

This Condition is Not Abnormal

EXAMPLE OF BASIC OPERATIONAL ERRORS

=NAEL0428

NAFL 0428S01

Symptom	Possible cause	Repair order	MA
No image is displayed.	Monitor brightness control is set to full dark. Readjust monitor brightness.		EM
Map does not appear	Map CD is not inserted or inserted upside down.	Insert the map CD with the label facing up.	
on display.	Map mode is turned OFF.	Press the "MAP" button.	LC
No guide tone is heard.	Voice guide adjustment OFF/Volume is set to the	Adjust the voice guide level.	EC
Voice guide volume is too high or too low.	lowest or highest level.	Adjust the voice guide level.	
Dark display/Slow image movement	Low vehicle interior temperature	Wait until vehicle interior temperature rises to appropriate level.	FE
Small black or white dots appear on the screen.	Unique liquid crystal display phenomena	No problem	CL
"Unable to read CD" message appears	Map CD surface is tainted/CD surface is partially	Check map CD surface. If dirty, wipe clean with a soft cloth.	MT
only during specified operation.	scratched.	If map CD surface is damaged, replace the CD.	AT

Area place names are not displayed.

If area place names do not appear on the map display, these names may not be available. Use the BIRD-VIEW flat surface map display function. Display output may differ. Note the items related to BIRDVIEW below.

- Priority is given to the display of place names in the direction of vehicle travel.
- Extended display of vehicle travel distance for both surfaces and steering angle (flat directional changes). This phenomenon disappears after the display image has been replaced by another one.
- The names of route and area might vary between the immediate front area and distance front area.
- Alphanumeric display characters are limited to maintain display simplicity and clarity. Display details may differ with time and place.
- Identical place and road names may appear on the display at more than one location.



TF

PD

 $\mathbb{A}\mathbb{X}$


SU

HA

SC

EXAMPLE OF CURRENT VEHICLE POSITION MARKER ERROR

The navigation system reads the vehicle distance and steering angle data. Because the vehicle is moving, there will be an error in the current position indication. After the error appears, drive the vehicle for a short distance. Stop the vehicle. If the position marker does not return to its original position, perform "ADJUST CURRENT LOCATION" (EL-831).

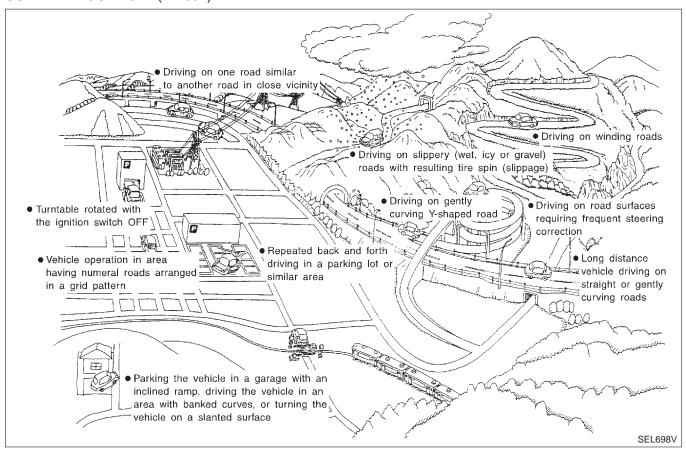

SMART C/U - NEW

This Condition is Not Abnormal (Cont'd)

	Possible cause	Drive condition	Service procedure	G
	Slippery road surface	On wet, icy, or gravel road where frequent wheel slippage occurs, distance calculations may be erroneous. The position marker may show the vehicle to be in inaccurate position.		
Area	Slanted area	Hilly areas where the road has banked curves. When the vehicle enters these banked curves, there may be an error in steering angle measurement. The position marker may show the vehicle to be in inaccurate position.		
	Map display for a given road does not appear.	When the vehicle is driven on a newly constructed road that does not appear on the existing map. Map marking and calibration are not possible. The position marker may	If the position marker does not move to the correct position even after the vehicle has been driven approximately 10 km (6	F
Мар	SEL699V	indicate inaccurate position in close proximity to the actual position. Subsequently, when the vehicle is driven on a road which is available as map data, the position marker may still indicate an inaccurate position.	miles), perform "ADJUST CUR- RENT LOCATION" (EL-831). If necessary, perform "SPEED CALIBRATION" (EL-829).	N
data	The vehicle is driven on a road whose course has been altered (usually to improve the road or to eliminate some hazard).	When the map data shown on the display and the actual conditions are different. Map matching will not be possible. The position marker may		T
	SEL700V	indicate inaccurate position in close proximity to the actual position. If the vehicle is driven on the indicated road, further errors may occur.		A
Vehicle	Use of tire chains (Stormy weather)	Tire chains will affect distance sensing. The position marker may indicate inaccurate position.	If the position marker does not move to the correct position even after the vehicle has been driven approximately 10 km (6 miles), perform "SPEED CALIBRATION" (EL-829). After	(00)
		,	removing the tire chains, sensing accuracy may recover by itself.	R

BT

HA

SC

EL

	Possible cause	Drive condition	Service procedure
	Driving immediately after starting engine.	The gyro (angular velocity sensor) needs about 15 seconds after the engine is started to precisely sense the angular velocity. Directional sensing errors will occur if the vehicle is moved immediately after starting the engine. The position marker may indicate inaccurate position.	Wait a few moments between starting the engine and actually driving the vehicle.
Opera- tion	Continuous driving for long distances (non-stop)	When the vehicle is driven continuously without stopping over a long distance, errors in directional sensing may occur. The position marker may indicate inaccurate position.	Stop the vehicle. Perform "SPEED CALIBRATION" (EL-829).
	Rough or violent driving	Wheel spinning (peeling out) or similar rough driving techniques can adversely affect sensing accuracy. The position marker may indicate inaccurate position.	If the position marker does not move to the correct position even after the vehicle has been driven approximately 10 km (6 miles), perform "ADJUST CURRENT LOCATION" (EL-831).
Posi- tional	Positional calibration precision Within 1 mm (0.04 in) SEL701V	If current vehicle location is roughly set, the system may be unable to locate the road that the vehicle is traveling on. (This is especially true in an area where there are many roads.)	Perform "ADJUST CURRENT LOCATION" (EL-831) within a precision standard of 1 mm (0.04 in) on the display. Note: During calibration, use the most detailed map possible.
calibra- tion pro- cedures	Position calibration direction Direction calibration adjustment SEL702V	When calibrating the position, check the vehicle direction. If the vehicle direction is not correct, subsequent precision of current location will be affected.	Perform "ADJUST CURRENT LOCATION", refer to EL-831.

This Condition is Not Abnormal (Cont'd)

	Possible cause: —: Vehicle running: Indication		Drive condition	Service procedure	(
	Y-intersection				N
			In Y-intersections with a very gradual change in course, a directional sensing may be inaccurate. This may result in the position marker giving the wrong road indication.		
		SEL703V			
	Spiral road				
	¥		On loop bridges and similar structures which result in a large and continuous turn, turning angle may		
			be sensed inaccurately. As a result, the position marker may separate from the route on the map.		(
		SEL704V			
	Straight road		In long distance driving on a straight road or road with very gradual curves, map marking inaccuracies may occur. In such cases, the posi-		[
			tion marker may stray from the route being traveled during subsequent turns due to inaccurate distance cal-	If the position marker does not move to the correct position	C
oad		SEL705V	culation.	even after the vehicle has been driven approximately 10 km (6	
apes	Winding road		Directional sensing precision errors may occur when traveling on wind- ing roads. During map matching, the position marker may stray to an	miles), perform "Store place". If required, also perform "ADJUST CURRENT LOCA-TION" (EL-831).	<u>[</u>
		SEL706V	adjacent road having a similar shape. Subsequent position marker error may occur.		[
	Grid-like road shape		Directional sensing and distance sensing, precision errors may occur because of many roads having a		(
			similar shape in the immediate area. During map matching, the position marker may stray to an adjacent		[
		SEL707V	road having a similar shape. Subsequent position marker error may occur.		[
	Parallel roads				[
			When driving on a parallel road, map matching errors may occur. Subsequent position marker error)
			may also occur.		
		SEL708V			

	Possible cause: —: Vehicle running: Indication	Drive condition	Service procedure
Loca- tion	Parking lot or similar area Parking lot SEL709	When the vehicle is driven in a parking lot or similar area, such as in an area not normally marked as a road on map, during map matching, the system may select nearby roads. This error may continue after the vehicle exits the parking area and begins to run on ordinary roads. Vehicle operation in a parking area may involve frequent turns and up and/or down operation. Directional sensing errors may occur leading to subsequent route and position mistakes.	
	Turntable Turntable SEL710	When the ignition switch is OFF (the usual situation when the vehicle is on a turntable), the navigation system receives no data from the gyro (angular velocity sensor). When the turntable rotates, no directional change is sensed. During subsequent vehicle operation, directional and route errors may occur.	

Position marker displays a completely different location

In circumstances such as those described below, GPS signal reception conditions may result in an erroneous position of the position marker. Perform "ADJUST CURRENT LOCATION" (EL-831).

NOTE:

- When GPS satellite signal reception conditions are poor, the position of position marker may be erroneous. If correction is not made immediately, the position marker error will be compounded and a completely different location will be indicated. In an area where GPS satellite signal reception conditions are good, the system can be returned to normal operation.
- The vehicle is driven aboard a car ferry or is towed for some distance with the ignition switch OFF. Vehicle
 movement is not sensed. Current location calculations do not occur and current location data does not
 appear on the display screen. Use GPS to accurately determine actual vehicle position. The system can
 be returned to normal operation when the GPS satellite signal reception conditions are good.

Position marker jumps

In circumstances such as those described below, the position marker may jump as a result of automatic current location corrections made by the system.

During map matching

During map matching, the position marker may jump from one spot to another. In this case, it may be corrected to a wrong road or to an area where no road exist.

GPS location correcting

Vehicle current location is sensed using the GPS data. Positional calibration is performed. The position
marker continues to be in the wrong position. It may jump about from one area of the screen to another.
In this case, it may be corrected to a wrong road or to an area where no road exist.

Position marker indicates that the vehicle is in the middle of an ocean or large river

The navigation system does not distinguish between land and water surfaces. In some cases, a position marker error may cause the display to show the vehicle above a water surface.

Position of position marker varies when the vehicle is repeatedly operated on the same road

Driving lane and steering wheel movement results in a variety of different positions of the position mark when traveling on the same road based on sensing results by the GPS antenna and gyro (angular velocity sensor). Slow locational correction using map matching

- The map matching function requires verification of local data. To make the map matching function, some distance needs to be driven.
- The map matching function may not provide accurate performance in an area where there are numerous parallel roads. Until the system judges the road characteristics, an incorrect position may be shown.

SMART C/U - NEW

EL

This Condition is Not Abnormal (Cont'd)

GPS signal reception conditions are good. However, the position mark does not return to its proper position. he system senses the vehicle location with an error of approximately 100 m (328 ft). Due to the limitation MA of precision, the position marker may be inaccurate even if the GPS signal reception condition is good. The navigation system uses GPS data to determine vehicle location. GPS data is compared with other locational sensing data during the map matching process. The system decides which data is more precise and uses that data. When the vehicle is stationary, GPS data cannot be used to make system corrections. Area designations on the map display and the BIRDVIEW® display differ. LC To prevent the display from becoming congested, alphanumeric information is abridged. [No problem] Correct position of your vehicle is not displayed. EG Vehicle position changed after ignition key was turned to the OFF position (Vehicle is transported on car ferry, car train, or by some other means). [Operate vehicle for short time under GPS receiving conditions.] The display does not change to night-time mode even though the light switch has been turned ON. Lights have been turned on. In "DISPLAY CHANGE" mode, night-time mode on display has been switched to day-time mode and still is. GL [Turn lights on again. Set the display to night-time mode. Refer to EL-832.] Map does not scroll even though the position of your vehicle is changed. Present area does not appear on the display. MIT [Press the "MAP" switch.] Vehicle position marker does not appear. AT Present area does not appear on the display. [Press the "MAP" switch.] The map surface precision display (GPS satellite marker) still remains gray. TF Vehicle is parked inside a building or in the shadow of a large building. This intercepts the GPS signal. [Move the vehicle to a more open position.] GPS signal is not received because objects are placed on the rear parcel shelf. [Remove objects from the rear parcel shelf.] GPS satellite position is bad. [Wait until GPS satellite position improves.] AX Vehicle position precision is bad. The map surface precision display (GPS satellite marker) still remains gray. [Refer to "The map surface precision display (GPS satellite marker) still remains gray" item (Symptoms)] Vehicle speed and elapsed distance is calculated from the vehicle speed pulse. This pulse is dependent upon tire size. If tire chains are used on the vehicle, accuracy will be affected (pulse rate will be too fast or too slow). The same is true if the system installed to your vehicle is removed and installed on another vehicle. [Drive the vehicle at a speed higher than 30 km/h (19 MPH) for approximately 30 minutes. Automatic readiustment should occur. If it does not (remains too fast or too slow), distance calibration is required. Or, drive the vehicle for a short distance. Perform "SPEED CALIBRATION" (EL-829). After removing the tire chains, sensing accuracy may recover by itself.] Bad map data or system defect (same error consistently occurs in the same area) ROUTE SEARCH/ROUTE GUIDE If the present location or the destination location is displayed in the avoid area, it is not possible to search routes. If the avoid area is set to wide range area, it may not be possible to find appropriate routes or search for alternate routes. The automatic re-route calculates a return to the original route. Because of this, it may not be possible to HA search appropriate new routes. If you deviate from the original route and wish to select an appropriate new route, touch "Route Calculation". The automatic re-route function may sometimes require considerable time. SC Displayed route number and directional information at a highway junction may differ from the information posted on the actual road signs.

Displayed street name information at a highway exit may differ from the information posted on the actual

Street name information displayed on the enlarged intersection map may differ from the information posted

road signs.

on the actual road signs.

- The enlarged intersection map may display an "Unknown Street" message at some street intersections.
- Because of road configuration, etc. the guide may finish early. If this occurs, follow the marker to reach your destination.
- Destination area side information (left side and right side) may differ from actual conditions because of data error.

Unable to Set Destination, Way Point, and/or Menu Items

NAEL0428S0301

Symptom	Possible cause	Repair order
Unable to search way points in re-search mode	A way point already crossed or determined to have been crossed.	If you desire to pass through a way point for a second time, reperform route edit.
	Route search does not occur.	Set designation areas and perform route search.
Turn list is not displayed.	Car marker does not appear on recommended route.	Drive on the recommended route.
	Route guide is canceled.	Turn the route guide ON. (Push "VOICE" switch.)
Automatic search does not function.	Vehicle is not running on search object route (road indicated by orange, brown or red line).	Drive the vehicle on the search object route or perform a manual route search. Note that all routes will be re-searched at this time.
Unable to select detour route.	Vehicle is not running on recommended route.	Use the "RE-ROUTE" mode to search again or return to the recommended route.
Detour route search results are identical to previous search.	All possible conditions were considered, but results are the same.	This is not abnormal.
Unable to set a way point.	More than five way points have been previously set (and not cleared).	More than five way points cannot be specified at the same time. Break down into smaller segments and perform search.
Unable to select starting point during route edit.	Starting point will normally be your present location during route edit.	This is not abnormal.
Cannot select certain menu items.	While vehicle is running.	Park the vehicle in a safe area and perform operation.

Voice Guide Information

NAEL0428S0302

Symptom	Symptom Possible cause	
Voice guide does not function.	Voice guide is only available at certain intersections (marked with $\ref{9}$). In some cases, the guide is not available even when the vehicle makes a turn.	This is not abnormal.
	Vehicle is not running on recommended route.	Return to recommended route or reperform route search.
	Voice guide is OFF.	Set voice guide to the ON position.
	Route guide is canceled.	Turn the route guide ON. (Push "VOICE" switch.)
The guide content does not correspond to actual conditions.	The content of the voice guide may vary depending on the type of junction.	Operate vehicle following the traffic rules and regulation.

Route Search Information

NAEL0428S0303

Symptom	Possible cause	Repair order
Proceeding in desired direction. However, route search in desired direction does not function.	Unable to find appropriate route in the desired direction.	This is not abnormal.

SMART C/U - NEW

This Condition is Not Abnormal (Cont'd)

Symptom	Possible cause	Repair order	
No route is displayed.	No object route is searched near destination area.	Adjust position to wide road (brown) near destination area. In an area where traffic direction is displayed separately, pay close attention to the direction of travel. Set the destination area and the way point over the road.	
	Starting point and destination areas are very near.	Move destination areas away from starting point on the screen.	
Recommended route which has been passed disappears from the display.	The recommended route is divided into individual control segments. When way point 1 is passed, the data from the starting point to the way point 1 is erased.	This is not abnormal.	
Search recommends roundabout route.	There may be special conditions for roads near the starting point and destination area (one-way traffic, etc.). A roundabout route may be displayed.	Slightly change starting point and destination area settings.	
Landmark display does not show actual conditions.	Mistaken or missing map data may result in erroneous display.	Change map CD.	
Recommended route drawn slightly away from starting point, way points, and destination area.	Course search data may not exist for closely positioned starting point, way points, and destination area shown on the map. Route guide starting point, way point, and destination point may be separated.	Set the destination area to the general route (indicated by a thick brown line). However, even if the selected route is a major one, appropriate route search data may not be available.	

LOCATION OF CAR MARKER

NAEL0428S04

- If the vehicle has been parked in a multi-level parking facility or underground parking facility, the car marker
 position may be inaccurate immediately after exiting the parking facility.
- The GPS accuracy is within ±100 m (300 ft). Even when receiving conditions are excellent, further positional correction may not occur.

STREET INDICATION

NAEL0428S05

 $\mathbb{A}\mathbb{X}$

- Street names displayed on the map may differ from the actual street names.
- An "Unknown Street" message may appear on the map in place of street name information.

RESEARCH

IAEL0428S06

- Position may be searched by house number. However, the displayed position and street may differ from the actual position and street.
- When position is searched using POI, the displayed position may differ from the actual position.
- Some data may not be available for new buildings and other structures in a map.

GPS ANTENNA

NAEL 0428507

- Do not place metal objects above the GPS antenna mounted on the rear parcel shelf. This will cause interference with signal reception.
- Do not place mobile telephones or vehicle radio transceivers in close proximity to the GPS antenna mounted on the rear parcel shelf. This may cause interference with signal reception.

HA


BT

SC

EL

Program Loading

NAEL0429

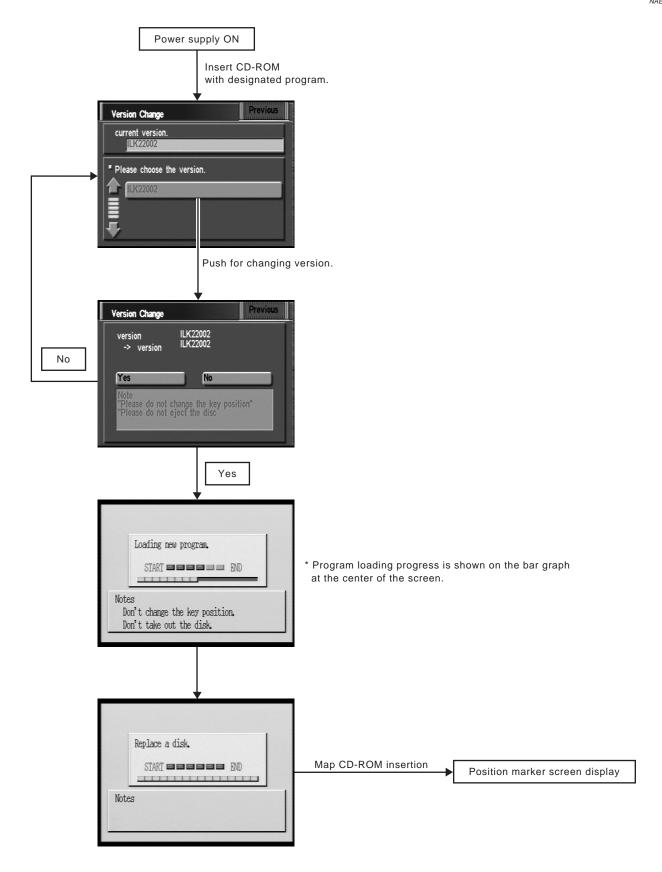

Note: Load the program only after the engine has been started.

Initialization

Initialization

This procedure is for initializing the current location. Perform "Initialize Location" when the vehicle is transported a long distance by

MA

GI

Map with grey background appears and the vehicle location cannot be adjusted by scrolling the display when the vehicle location in the memory is out of the area of the inserted map data. Perform "Initialize Location" when this occurs.

EM

NOTE:

LC

Only initialize the system when the display & NAVI control unit is replaced. If the system is initialized in other cases, it may cause inaccurate positioning of the position marker for a while.

EG


Initialize the system outside for receiving the radio wave from the GPS satellite.

FE

GL

MIT

AT

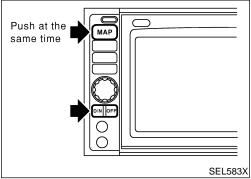

HOW TO PERFORM

Switch the navigation system mode to self-diagnosis by pushing both "MAP" and "D/N" switches at the same time for more than 5 seconds.

PD

AX

SU

BR

ST


BT

HA

SC



SEL584X

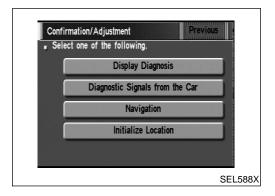


Touch "Confirmation/ adjustment".


Touch "Initialize Location". Then the previous screen is displayed.




4. Push "Previous" switch.

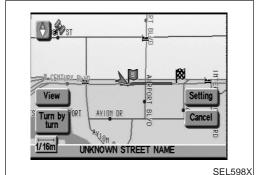


5. Push the "MAP" switch.

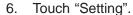


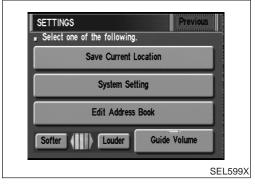

7. Touch "System Setting".

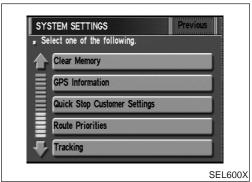

8. Touch "GPS Information".

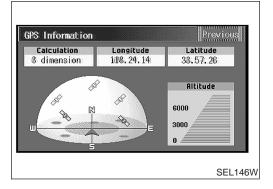

9. More than one GPS satellite icon turns green. (It may take 1 to 15 minutes.)


NOTF:

Drive the vehicle for a while* in order to change the receiving condition of the radio wave from the GPS satellite if the GPS icon does not turn green.

* The driving distance which is necessary depends on the receiving condition of the radio wave from the GPS satellite.

SMART C/U - NEW

Initialization (Cont'd)

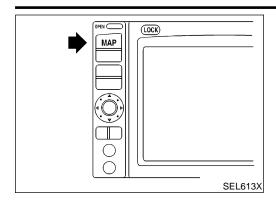

- 10. Push "MAP" switch and check the following.
- Confirm that the GPS icon on the map turns green.
- Then the position marker should show the current location.
- Position marker rotates corresponding to the movement of the vehicle.
- 11. Initialization is completed.

G[

 $\mathbb{M}\mathbb{A}$

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT


HA

SC

Engine Compartment

NAEL0431

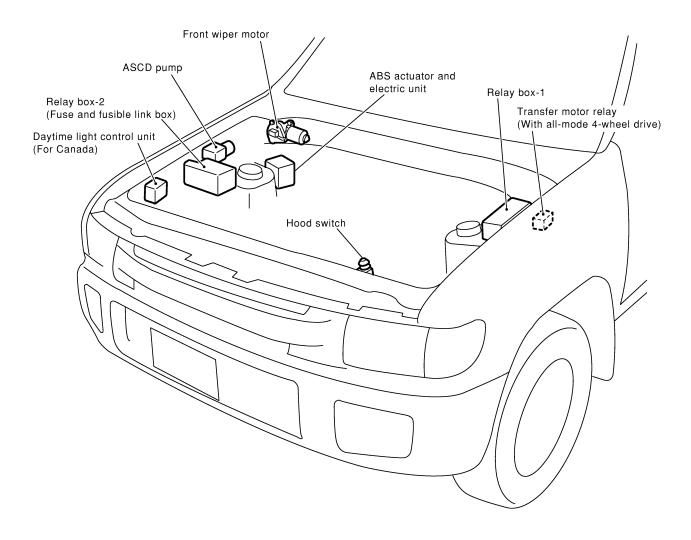

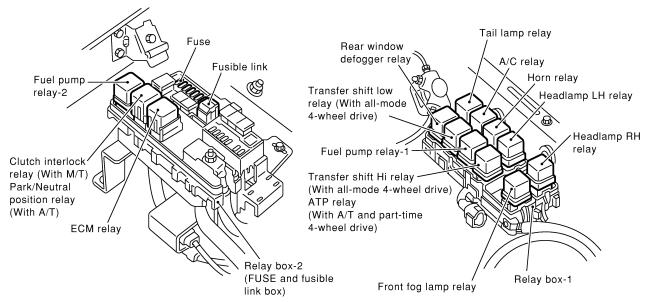

MEL912N

ELECTRICAL UNITS LOCATION

SMART C/U - NEW
Engine Compartment (Cont'd)

NOTE:

 $\mathbb{M}\mathbb{A}$

EM

LC

EG

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT


HA


SC

EL

Passenger Compartment

NAEL0432

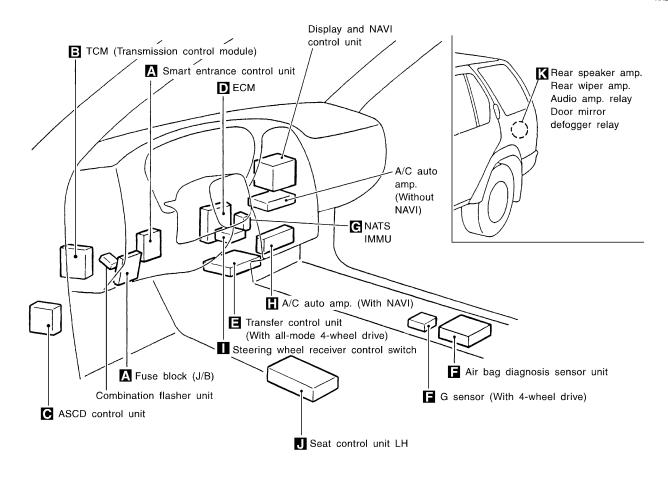

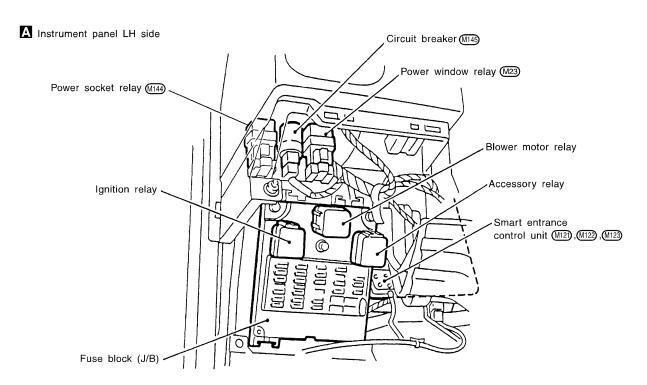

MEL913N

ELECTRICAL UNITS LOCATION

G[

MA

LC

EG

FE

GL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

ST


RS

BT


HA

SC

EL

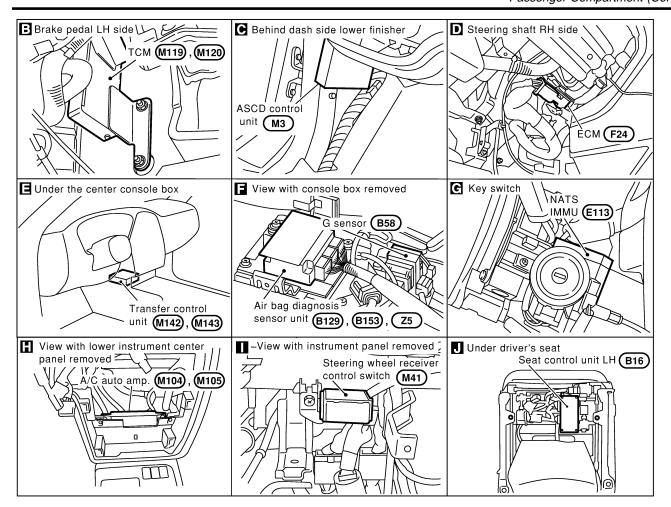




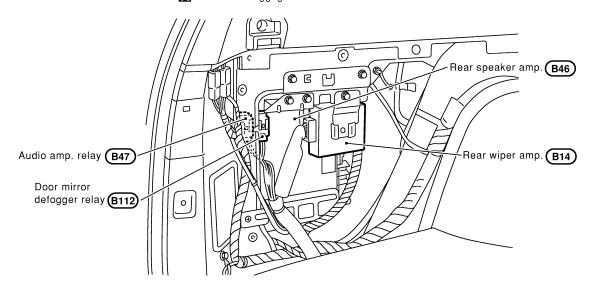

MEL914N

How to Read Harness Layout

NAEL0433

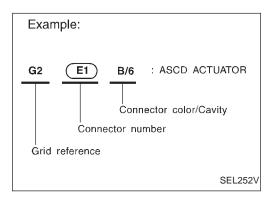

The following Harness Layouts use a map style grid to help locate connectors on the drawings:

- Main Harness
- Engine Room Harness (Engine Compartment)
- Engine Control Harness

TO USE THE GRID REFERENCE

NAEL0433S01

- 1. Find the desired connector number on the connector list.
- 2. Find the grid reference.
- 3. On the drawing, find the crossing of the grid reference letter column and number row.
- 4. Find the connector number in the crossing zone.
- 5. Follow the line (if used) to the connector.


CONNECTOR SYMBOL

NAEL0433S02

Main symbols of connector (in Harness Layout) are indicated in the below.

Connector type	Water proof type		Standard type	
	Male	Female	Male	Female
Cavity: Less than 4Relay connector	©	60		
Cavity: From 5 to 8				
Cavity: More than 9	_	_		
Ground terminal etc.	_		P	

HARNESS LAYOUT

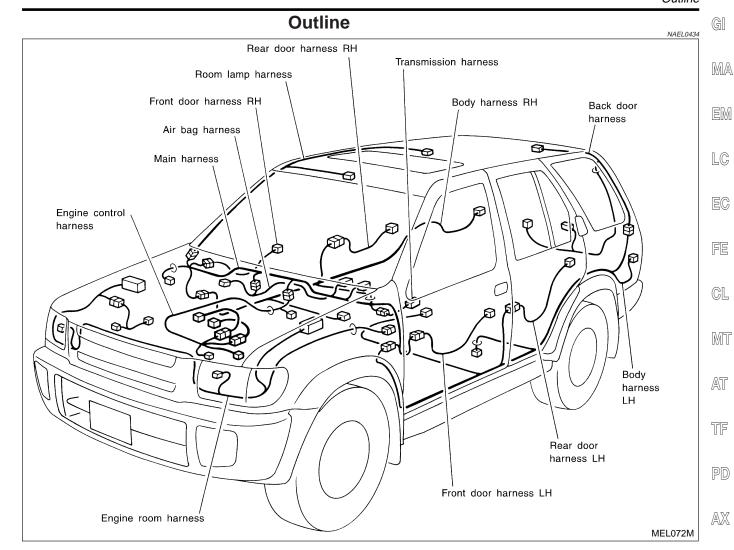

SU

BR


ST

RS


BT


HA


SC

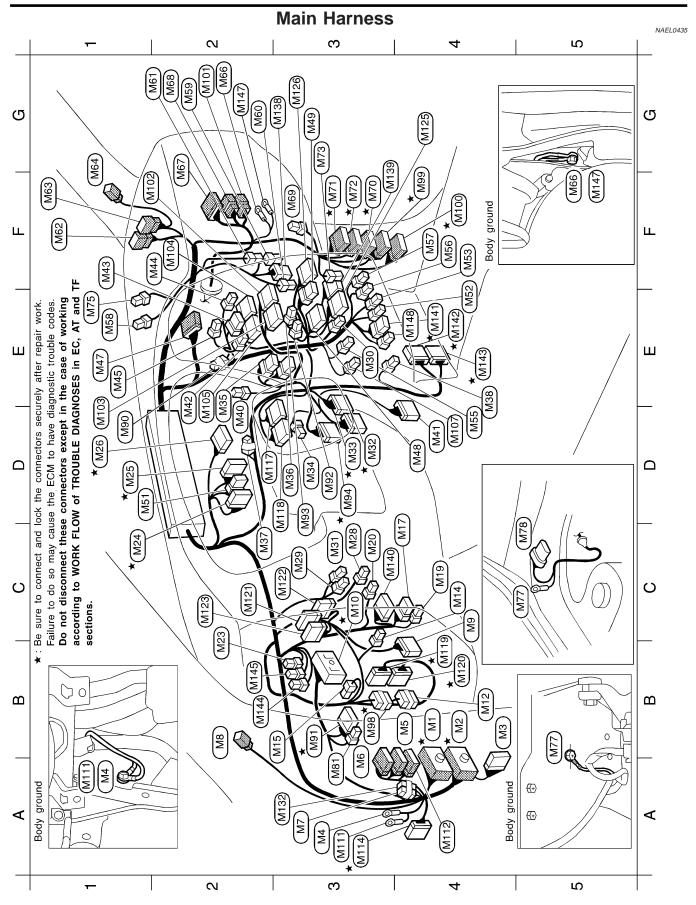


HARNESS LAYOUT

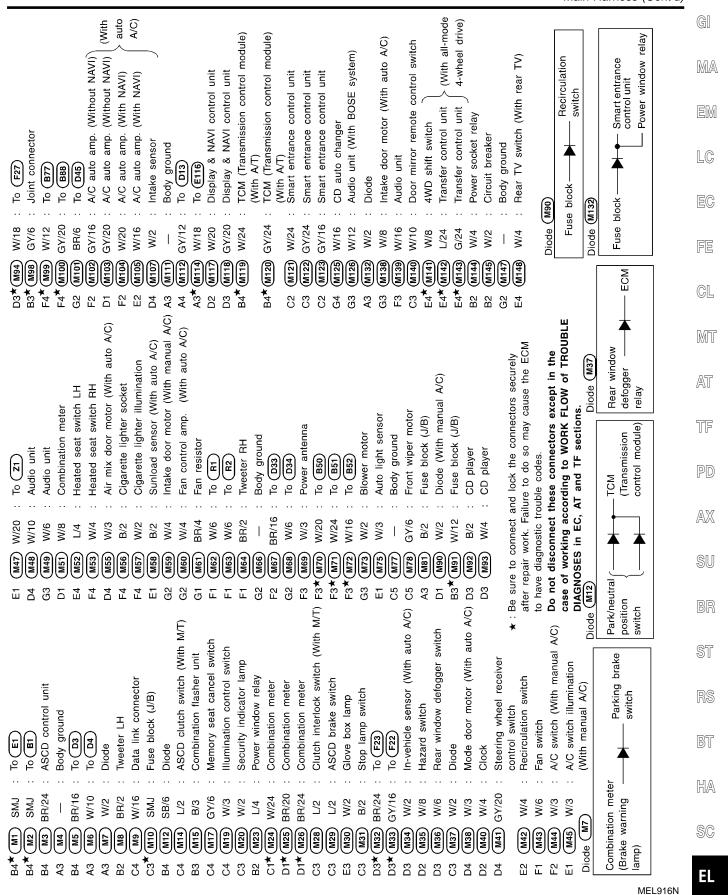

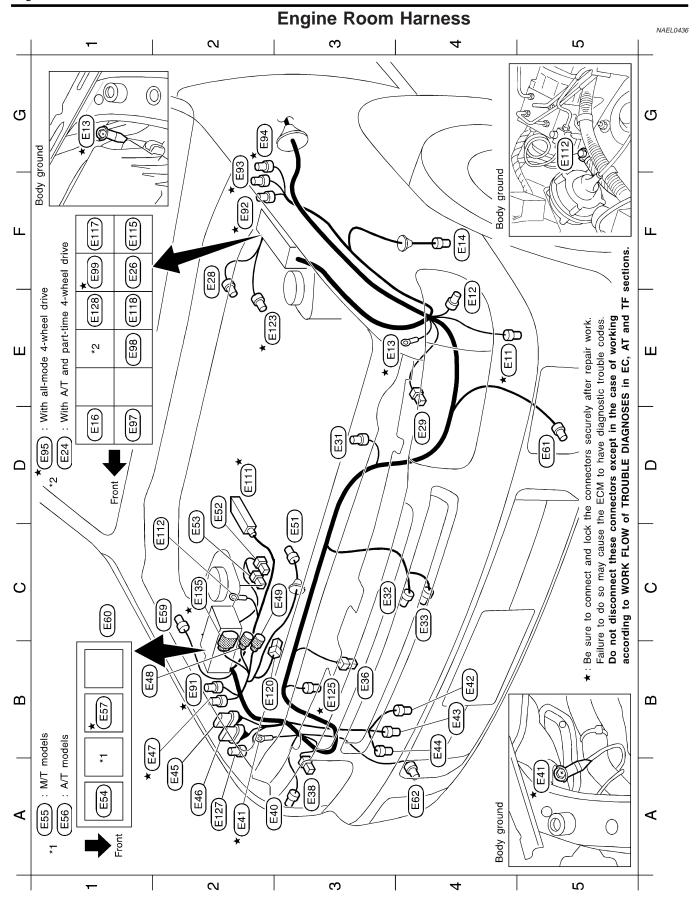

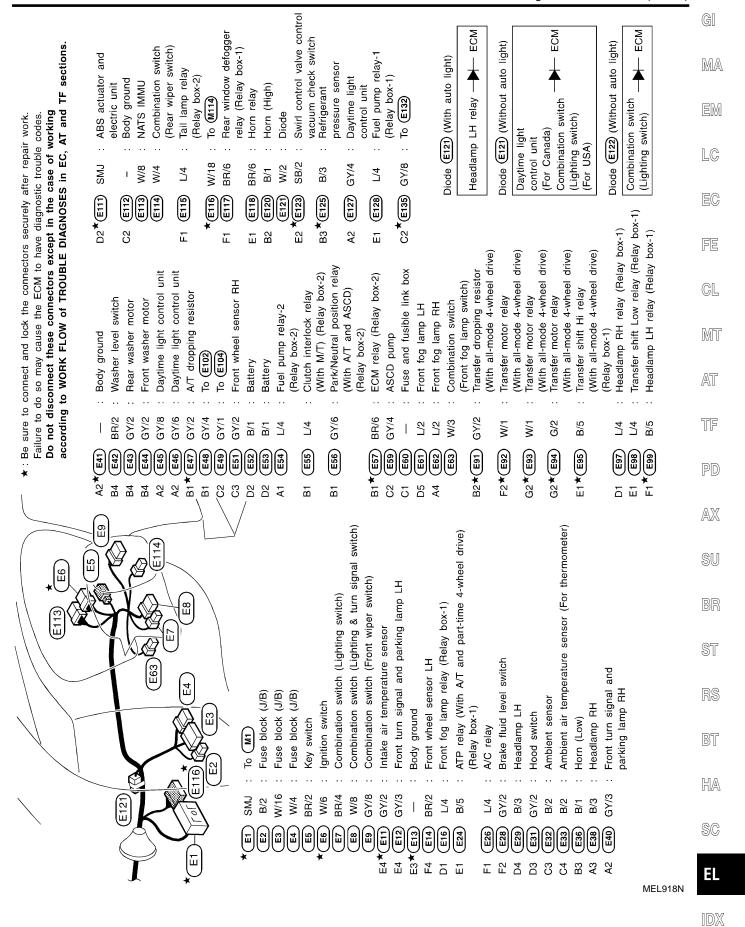

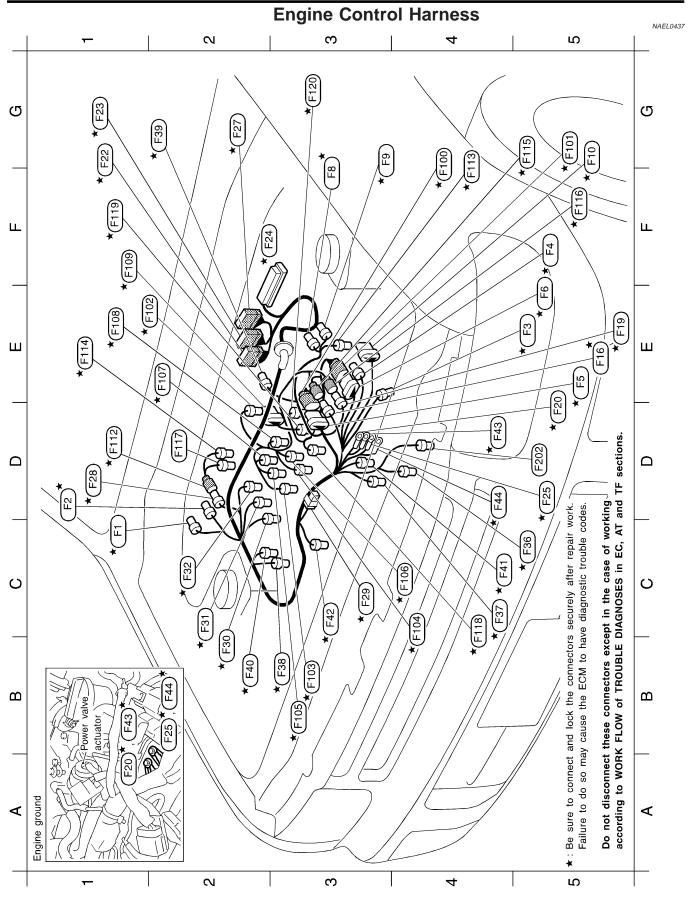

HARNESS LAYOUT

GI

 $\mathbb{M}\mathbb{A}$

EM

LC

EC

FE

CL

MT

AT

TF

PD

 $\mathbb{A}\mathbb{X}$

SU

BR

ST

RS

BT

HA


SC

FIO2 GY/2 : Knock sensor FIO3 GY/2 : Injector No. 1 FIO4 GY/2 : Injector No. 3 FIO5 GY/2 : Injector No. 4 FIO6 GY/2 : Injector No. 6 FIO8 L/6 : IACV-AAC valve FIO8 L/6 : IACV-AAC valve FIO9 IACV-AAC valve FIO9 IA	
C1* Fi	F100 F100 F100 F100 F100 F100 F100 F100


★: Be sure to connect and lock the connectors securely after repair work.
 Failure to do so may cause the ECM to have diagnostic trouble codes.
 ★: Do not disconnect these connectors except in the case of working according to WORK FLOW of TROUBLE DIAGNOSES in EC, AT and TF sections.


ΕL

MEL318N

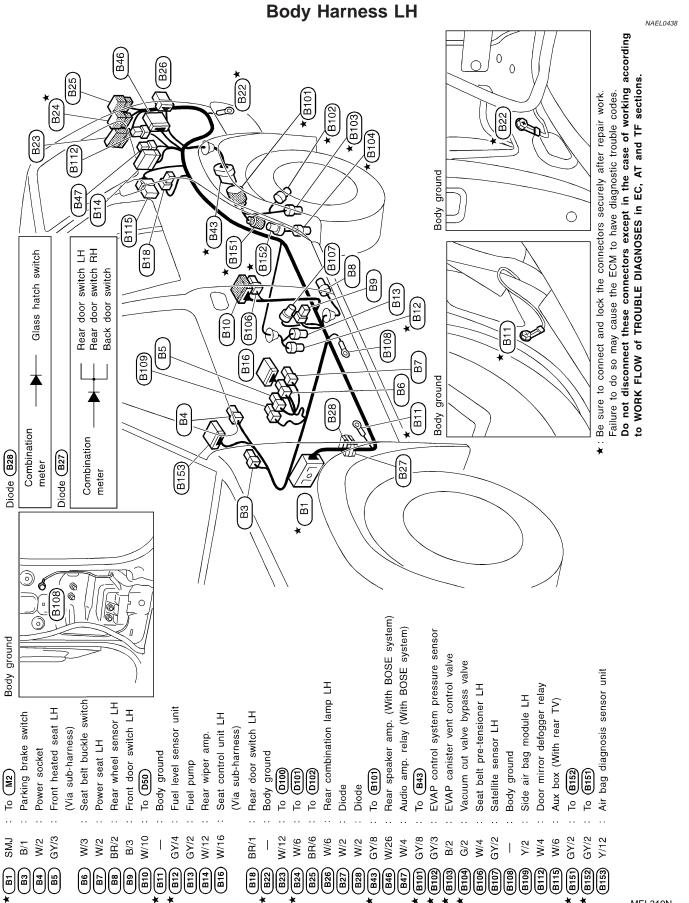


MEL319N

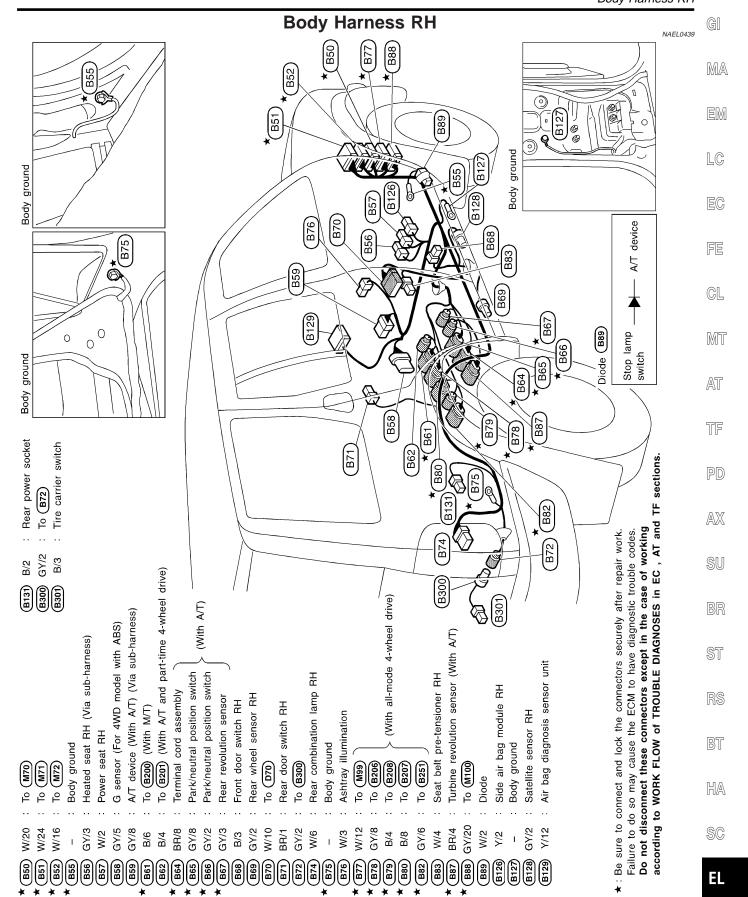

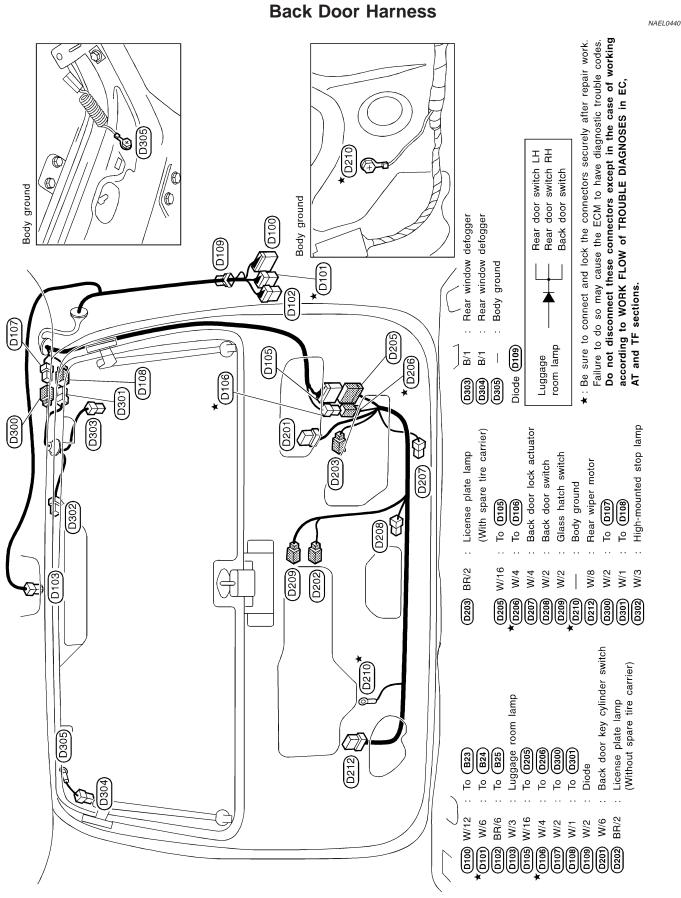


Engine and Transmission Harness

MAEL0441

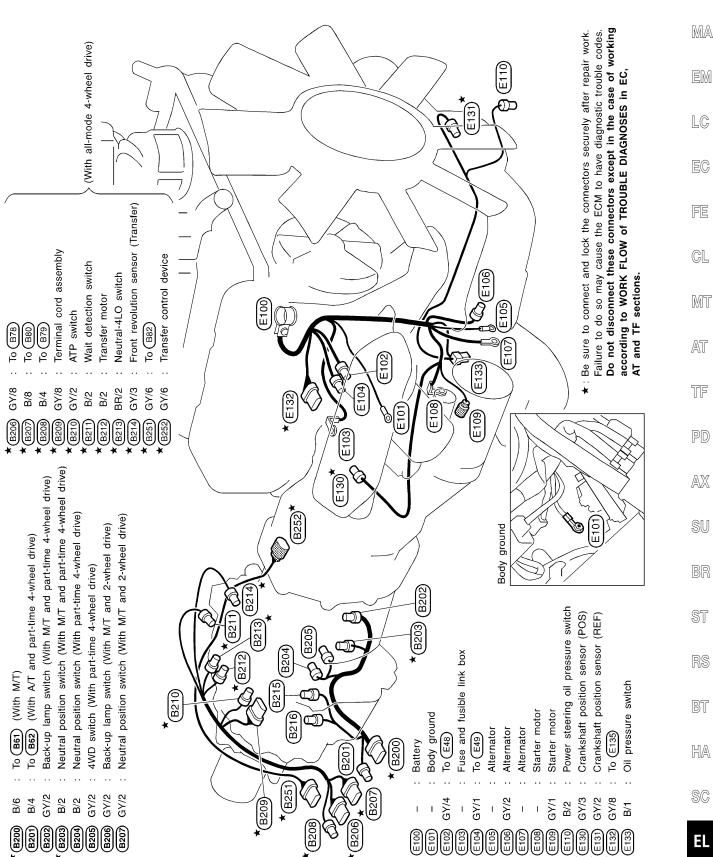


Room Lamp Harness

NAEL0442

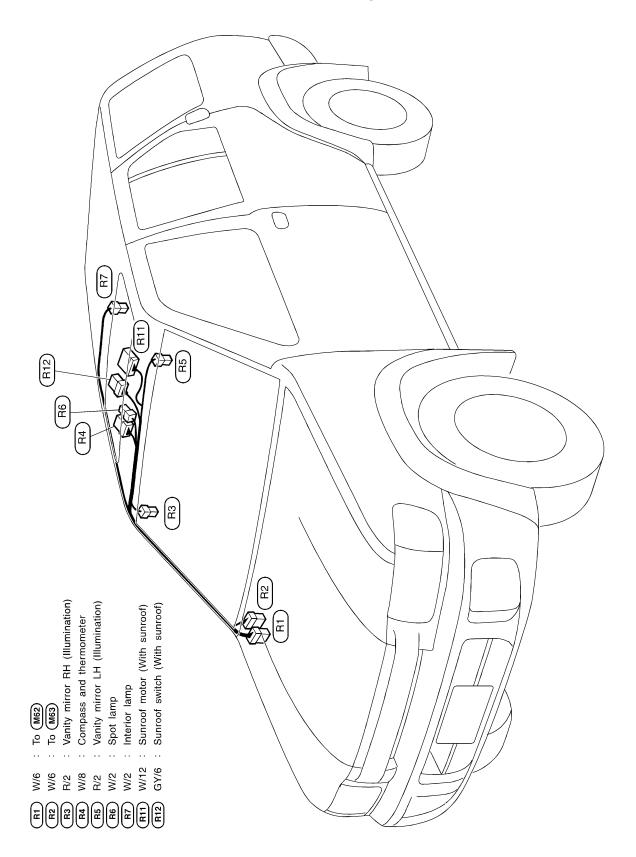

Air Bag Harness

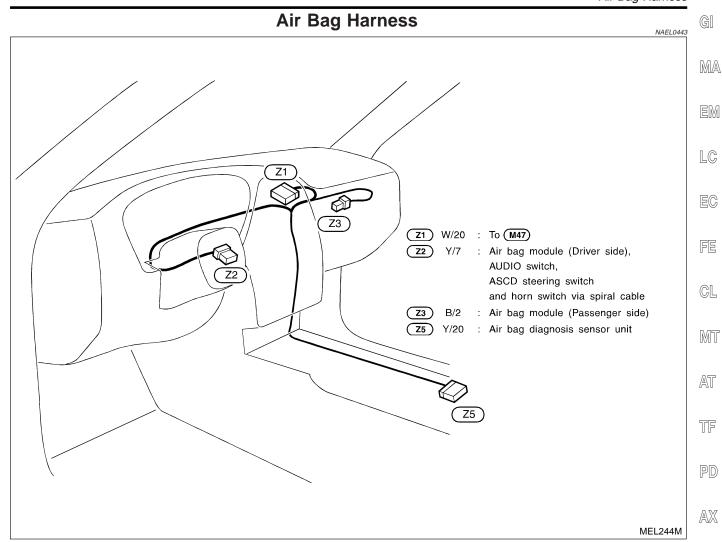

SU

BR

ST

RS

BT

HA

SC

NAEL0444

Front Door Harness

LH side

D1 GY/5 : Door mirror defogger LH

D2 BR/3 : Door mirror LH
D3 BR/16 : To M5
D4 W/10 : To M6

D5 GY/6 : Front power window regulator LH
D6 W/16 : Power window main switch
D7 GY/4 : Front door lock actuator LH
D9 BR/3 : Front door key cylinder switch LH

D10 BR/2 : Front door speaker LH


(Without BOSE system)

(D12) W/6 : Front door speaker LH

(With BOSE system)

D13 GY/12 : To M112

D15 W/3 : Power window main switch
D16 W/8 : Seat memory switch

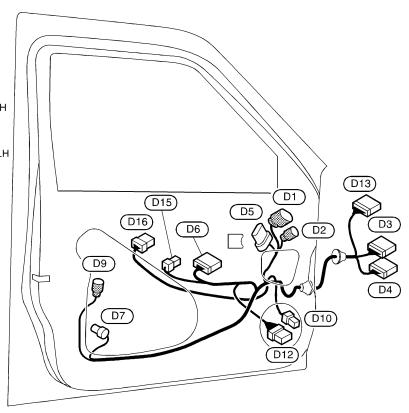

RH side

D31) GY/5 : Door mirror defogger RH

(D32) BR/3 : Door mirror RH

D33 BR/16 : To M67
D34 W/6 : To M68


D35 GY/6 : Front power window regulator RH
D36 W/12 : Front power window switch RH
D37 GY/4 : Front door lock actuator RH

D40 BR/2 : Front door speaker RH (Without BOSE system)

D42 W/6 : Front door speaker RH (With BOSE system)

D43 W/8 : Front power window switch RH

D45) BR/6 : To (M101) (With BOSE system)

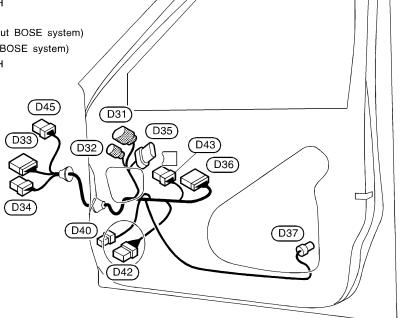

MEL321N





MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

 \mathbb{A}

SU

BR

ST


RS

BT

HA

SC



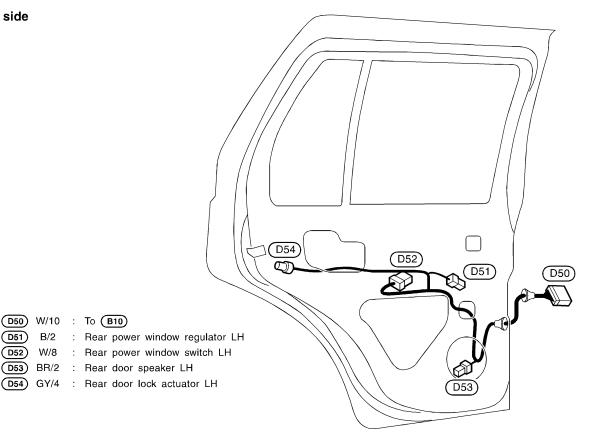

D51


D52

D50) W/10 : To (B10)

B/2

W/8

D53) BR/2

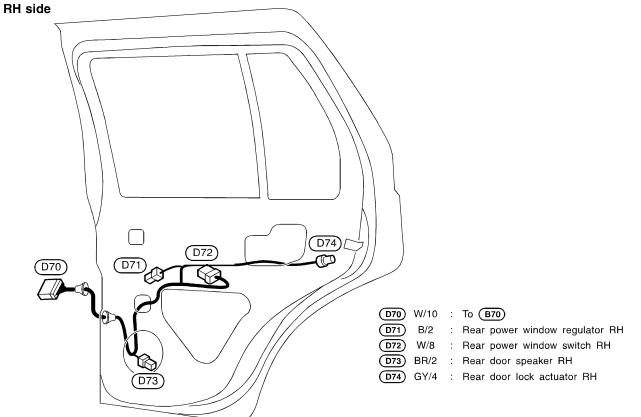

MEL261M



BULB SPECIFICATIONS

SMART C/U - NEW

Headlamp

	Headlamp	NAEL0446S01
Item		Wattage W
High/Low (Semi-sealed beam)	60/55 (HB2)	
	Exterior Lamp	NAEL0446S02
	Item	Wattage W
Front fog lamp		55
Front turn signal lamp	21	
Parking lamp		5
	Turn signal lamp	27
Rear combination lamp	Stop/Tail lamp	21/5
	Back-up lamp	18
License plate lamp		5
High-mounted stop lamp		5
	Interior Lamp	NAEL0446S03
		Wattage W
Interior lamp		10
Spot lamp		8
Luggage room lamp		10

NAEL0447 WIRING DIAGRAM CODES (CELL CODES) SMART C/U - NEW

Use the chart below to find out what each wiring

diagram code stands for.

Refer to the wiring diagram code in the alphabetical index to find the location (page number) of each wiring diagram.

Code	Section	Wiring Diagram Name
1STSIG	AT	A/T 1ST Signal
2NDSIG	AT	A/T 2ND Signal
3RDSIG	AT	A/T 3RD Signal
4THSIG	AT	A/T 4TH Signal
A/C, A	HA	Auto Air Conditioner
AAC/V	EC	IACV-AAC Valve
ABS	BR	Anti-lock Brake System
AP/SEN	EC	Absolute Pressure Sensor
ASCD	EL	Automatic Speed Control Device
AT/C	EC	A/T Control
ATDIAG	EC	A/T Diagnosis Communication Line
AUDIO	EL	Audio
AUT/DP	EL	Automatic Drive Positioner
BA/FTS	AT	A/T Fluid Temperature Sensor and TCM Power Supply
BACK/L	EL	Back-up Lamp
BYPS/V	EC	Vacuum Cut Valve Bypass Valve
CHARGE	SC	Charging System
CHIME	EL	Warning Chime
CIGAR	EL	Cigarette Lighter
CLOCK	EL	Clock
COMPAS	EL	Compass and Thermometer
D/LOCK	EL	Power Door Lock
DEF	EL	Rear Window Defogger
DTRL	EL	Headlamp — With Daytime Light System —
ECTS	EC	Engine Coolant Temperature Sensor
ENGSS	AT	Engine Speed Signal
F/FOG	EL	Front Fog Lamp
F/PUMP	EC	Fuel Pump Control
FICD	EC	IACV-FICD Solenoid Valve
FLS1	EC	Fuel Gauge
FLS2	EC	Fuel Gauge
FLS3	EC	Fuel Gauge

Code	Section	Wiring Diagram Name
FTS	AT	A/T Fluid Temperature Sensor
FUELLH	EC	Fuel Injection System Function (Left Bank)
FUELRH	EC	Fuel Injection System Function (Right Bank)
H/LAMP	EL	Headlamp
HORN	EL	Horn
HSEAT	EL	Heated Seat
IATS	EC	Intake Air Temperature Sensor
IGN/SG	EC	Ignition Signal
ILL	EL	Illumination
INJECT	EC	Injector
INT/L	EL	Interior, Spot, Vanity Mirror, and Luggage Room Lamps
IVC-L	EC	Intake Valve Timing Control Sole- noid Valve LH
IVC-R	EC	Intake Valve Timing Control Sole- noid Valve RH
IVCS-L	EC	Intake Valve Timing Control Position Sensor LH
IVCS-R	EC	Intake Valve Timing Control Position Sensor RH
KS	EC	Knock Sensor
LAN	AT	A/T Communication Line
LOAD	EC	Electrical Load Signal
LPSV	AT	Line Pressure Solenoid Valve
MAFS	EC	Mass Air Flow Sensor
MAIN	AT	Main Power Supply and Ground Circuit
MAIN	EC	Main Power Supply and Ground Circuit
METER	EL	Speedometer, Tachometer, Temp., Oil, and Fuel Gauges
MIL/DL	EC	MIL and Data Link Connectors
MIRROR	EL	Door Mirror
MULTI	EL	Multi-remote Control System
NATS	EL	NVIS (NISSAN Vehicle Immobilizer System)
NAVI	EL	Navigation System
NONDTC	AT	Non-detectable Items
O2H1B1	EC	Heated Oxygen Sensor 1 Heater (Front) (Bank 1)

G[

MA

LC

EG

FE

CL

MT

AT

TF

WIRING DIAGRAM CODES (CELL CODES) SMART C/U - NEW

Code	Section	Wiring Diagram Name
O2H1B2	EC	Heated Oxygen Sensor 1 Heater (Front) (Bank 2)
O2H2B1	EC	Heated Oxygen Sensor 2 Heater (Rear) (Bank 1)
O2H2B2	EC	Heated Oxygen Sensor 2 Heater (Rear) (Bank 2)
O2S1B1	EC	Heated Oxygen Sensor 1 (Front) (Bank 1)
O2S1B2	EC	Heated Oxygen Sensor 1 (Front) (Bank 2)
O2S2B1	EC	Heated Oxygen Sensor 2 (Rear) (Bank 1)
O2\$2B2	EC	Heated Oxygen Sensor 2 (Rear) (Bank 2)
OVRCSV	AT	Overrun Clutch Solenoid Valve
P/ANT	EL	Power Antenna
PGC/V	EC	EVAP Canister Purge Volume Control Solenoid Valve
PHASE	EC	Camshaft Position Sensor (PHASE)
PNP/SW	EC	Park/Neutral Position Switch
PNP/SW	AT	Park/Neutral Position Switch
POS	EC	Crankshaft Position Sensor (CKPS) (POS)
POWER	EL	Power Supply Routing
PRE/SE	EC	EVAP Control System Pressure Sensor
PST/SW	EC	Power Steering Oil Pressure Switch
REF	EC	Crankshaft Position Sensor (CKPS) (REF)
REMOTE	EL	Audio (Remote Control Switch)
RP/SEN	EC	Refrigerant Pressure
S/SIG	EC	Start Signal
S/VCSW	EC	Swirl Control Valve Control Vacuum Check Switch
SEAT	EL	Power Seat
SHIFT	AT	A/T Shift Lock System
SROOF	EL	Sunroof
SRS	RS	Supplemental Restraint System
SSV/A	AT	Shift Solenoid Valve A
SSV/B	AT	Shift Solenoid Valve B
START	SC	Starting System
STOP/L	EL	Stop lamp

Code	Section	Wiring Diagram Name
SWL/V	EC	Swirl Control Valve Control Sole- noid Valve
TAIL/L	EL	Parking, License and Tail Lamps
TCCSIG	AT	A/T TCC Signal (Lock up)
TCV	AT	Torque Converter Clutch Solenoid Valve
T/F	TF	Transfer
TFTS	EC	Tank Fuel Temperature Sensor
TP/SW	EC	Throttle Position Switch
TPS	AT	Throttle Position Sensor
TPS	EC	Throttle Position Sensor
TRNSMT	EL	Integrated HOMELINK® Transmitter
TRSA/T	AT	Turbine Revolution Sensor
TURN	EL	Turn Signal and Hazard Warning Lamps
VEHSEC	EL	Vehicle Security System
VIAS/V	EC	Variable Induction Air Control System
VSS	EC	Vehicle Speed Sensor
VSSA/T	AT	Vehicle Speed Sensor A/T (Revolution Sensor)
VSSMTR	AT	Vehicle Speed Sensor MTR
WARN	EL	Warning Lamps
WINDOW	EL	Power Window
WIP/R	EL	Rear Wiper and Washer
WIPER	EL	Front Wiper and Washer
	!	!